

Rev 1.2

ST78C34/36 Operational Manual

Introduction:

This manual is for our evaluation board ST78C34/36 that supports two pack types. See table 1 for supported packages and parts.

Table 1

EXAR PART	PACKAGE	LOCATION
ST78C34CJ44	PLCC	U3
ST78C34IJ44	PLCC	U3
ST78C36CJ44	PLCC	U3
ST78C36ACJ44	PLCC	U3
ST78C36CQ64	TQFP	U4

For a list of features, refer to the Data Sheet at www.exar.com.

There are several jumpers that need to be identified, please refer to Table 2.

Table 2

Jumpers	Functions	Comments
J2-1&2	3BC	Base address
J2-3&4	378	Base address
J2-5&6	278	Base address
J3-1&2	IRQ5	Interrupt
J3-3&4	IRQ7	Interrupt
J3-5&6	IRQ9	Interrupt
J5,J6	NOT USED	
J7-1&2	INTSEL	ST78C34 only
J7-2&3	-DACK3	ST78C36 only