


NWK939/NWK960 Evaluation Board

Preliminary Information

AN4884 - 1.0 March 1998

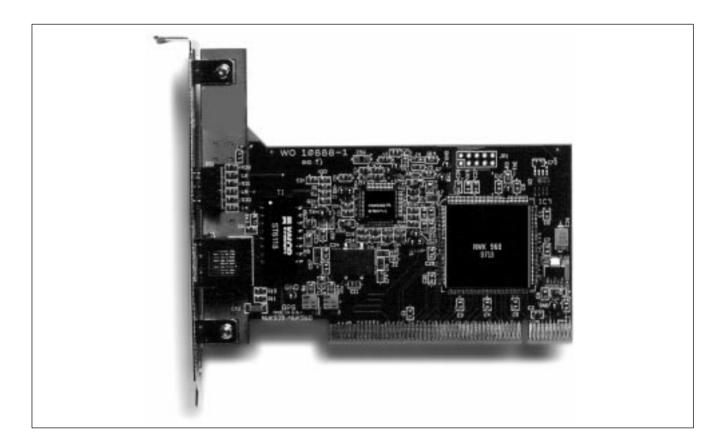

PRODUCT BRIEF

The NWK939/NWK960 Evaluation Board (EVB) is a 2-chip CMOS 10BASE-T/100BASE-TX Network Interface Card (NIC) with a PCI Interface. Its purpose is to allow customers to easily evaluate critical signals of the NWK939 Physical Layer Device whilst operating in a live network environment. This document describes the functional design of the board and some simple steps necessary to get the board operating.

NWK939 Product Features

- Small Packaging (52 pin PQFP and TQFP)
- Compatible with IEEE 802.3 Standards
- Excellent Long Cable Performance

NWK960 Product Features

- Compatible with PCI and 802.3 Specifications
- Drivers for all major operating systems
- No external latches needed for book ROM operation

Evaluation Board Features

- Low Power
- Test Points for Ease of Evaluation
- Auto-Negotiation


System Requirements

- Open PCI Bus Slot
- Category 5 (100Mb/s) Twisted Pair Cabling
- Single +5V Supply
- NWK960 Compatible SW Driver (Included)

Kit Contents

- PCI NIC
- Software Driver Diskette
- Schematics
- BOM

AN4884

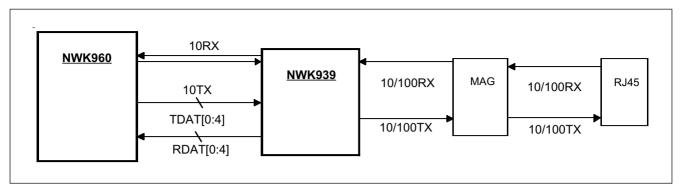

NWK939/NWK960 NIC Functional Block Diagram

FUNCTIONAL OVERVIEW

The NWK939/NWK960 EVB utilizes only two components for both 10BASE-T and 100BASE-TX operation. The NWK939 Physical Layer Device (PHY) and the NWK960 Media Access Controller (MAC).

Transmit Overview

The NWK939 transmits either 10Mbps or 100Mbps data depending on the state of the N10/100 input pin. When in 10 Megabit mode (N10/100 = Low), the transmit data is presented to the NWK939 at the TP_TDP input. Only the positive portion of the 10Mb Transmit data is required. The NWK939 internally generates the negative polarity portion of the signal as well as the pre-distortion and waveshaping necessary for a compliant 10BASE-T signal, prior to sending the data onto the wire. This creates a very simple and cost effective 10Mb transmit path. When in 100 Megabit mode (N10/100 = High), the NWK939 receives data to be transmitted from the NWK960 via a 5 bit wide parallel data port, TDAT[0:4]. The appropriate MLT3 signal is then transmitted to the network. If the launch voltage of the either the 10BASE-T or the 100BASE-TX data should need adjusting, this can be accomplished by adjusting the resistor value connected to the TXREF10/100 pins. For added flexibility in a variety of solutions, theNWK939 provides individual TXREF current adjustments for 10BASE-T and 100BASE-TX modes. For more information on TXREF adjustments, refer to the NWK939 data sheet.

Transmit 10Mb

The NWK960 incorporates an internal 10Mb Encoder/Decoder which provides the 10Mb Transmit data. Pulse shaping and filtering of the data is done internally on the NWK939. The 10Mb data is transmitted onto the wire through a simple 1:1 ratio transformer producing a 802.3 compliant 10BASE-T signal. This Transmit path is used for transmitting data onto the network for both 10BASE-T and 100BASE-TX modes.

Transmit 100Mb

The NWK939 receives the 5 bit parallel data to be transmitted via the TDAT[0:4] lines from the NWK960. The data is converted to a MLT3 encoded serial data stream and transmitted onto the network. It then passes through a simple 1:1 ratio transformer (same path as 10Mb TX data) where the desired 100BASE-TX level (2.0V diff peak to peak) is presented onto the wire via the RJ45 connector. In addition to the cost savings, being able to use a 1:1 transformer also helps minimize other technical issues such as Return Loss.

Receive Overview

All received data, 10BASE-T or the 100BASE-TX, enter the board via the RJ45 connector. The data is coupled through a 1:1 ratio isolation transformer. A single receive path is provided for both 10BASE-T and 100BASE-TX data types. Based on the logic value of the N10/100 input pin, the appropriate data is presented onto the TP_RDP/M lines (for 10BASE-T) or onto the RDAT[0:4] pins (for 100BASE-TX). The NWK939 incorporates an internal switch for 10BASE-T and 100BASE-TX modes. This creates a more reliable cost effective solution by removing any Relays or switches.

Receive 10Mb

The 10BASE-T receive data enters the NWK939 via the RXIP/N pins. The data is filtered and then output to the NWK960 via the TP_RDP/M pins.

Receive 100Mb

The 100BASE-TX receive data enters the NWK939 via the RXIP/N pins. The amplitude of the 100Mb data is reduced by a resistor network prior to entering the NWK939. The values of these resistors are critical to the overall performance of the receiver and may need to be adjusted based on the applications components and the pcb layout.

Evaluating the NWK939/NWK960

The NWK939/NWK960 EVB has been designed to allow users to evaluate the NWK939 Physical Layer Device and the NWK960 Media Access Controller. While it is intended to be used for evaluation purposes, the card is a fully functional Network Interface Card. Due to the numerous variety of software installations available you will need to choose which driver is best suited for you. There are a variety of drivers available on the software diskette provided, including Novel Client, Novel Server, Win95, SCO, etc. For a complete list of drivers and installation instructions, please refer to the readhelp.exe file on the diskette.

Other Requirements

The following is a quick list of requirements which are needed to begin evaluating the NWK939/NWK960.

- An IBM-compatible personal computer with 80486 or higher microprocessor and an open PCI slot
- One other node capable of 10BASE-T and/or 100BASE-TX. This could be a Server, Client or Hub
- Cable to connect the two pieces of equipment. CAT 5 for 10/100Mb and CAT3 for 10Mb

This cable must have RX and TX crossed over if connecting two NICs together point to point

Network software

Many version of software are provided on the enclosed diskette

Installation and Network Connection

The user should be familiar with software driver installation and configuration procedures to ensure the evaluation board is properly configured. The example shown below describes a Novel Client installation. The basic steps are:

- With the power off, install the Evaluation NIC into an open PCI slot.
- Copy the drivers to a user specified directory: Copy a:\NETWARE\client*.*

3. Copy the necessary files provided to a user specified directory:

LSL.COM

IPXODI.COM

NETX.COM or VLM.EXE

- Edit the NET.CFG file if necessary
- To connect to a Server, use the following loading sequence:

LSL L100

IPXODI

NETX or VLM

LOGIN

The NIC is now available to run any suitable network application software.

Standard Networking Test Software can be useful to run system level evaluation on the NWK939/NWK960 Evaluation NIC. Some examples are Novell's Perform3 and Endurnce tests. Another widely used program is Netbench. While this software is not included on our Evaluation Software diskette, it can be downloaded from the Internet.

Test Points

Once the software is installed and the Evaluation unit is connected to another node, the user may wish to view critical signals while the board is in operation. Numerous test points are installed to allow you to easily connect your scope probes to these critical signals. The following table describes the signal test points.

Trouble

If you have problems using the NWK939/NWK960, please refer to the readhelp.exe file included with the driver software. If you cannot resolve the, please call your Mitel Semiconductor Sales Representative.

TEST POINT NAMES

DESCRIPTION

RX-	Neg. 10/100Mb Received signal prior to entering the NWK939 cable-side
RX+	Pos. 10/100Mb Received signal prior to entering the NWK939 cable-side
TX-	Neg. 10/100Mb Transmitted signal driven from the NWK939 to the cable
TX+	Pos. 10/100Mb Transmitted signal driven from the NWK939 to the cable
RXC	Clock re-generated by NWK939 from RX data stream
10RX+	Received Pos. 10Mb signal prior to entering the NWK960
10RX-	Received Neg. 10Mb signal prior to entering the NWK960
TP9	Pos. 10Mb Transmit signal prior to entering the NWK939 (from MAC)
TXC	Transmit clock generated by NWK939 to clock in TDAT[0:4] from MAC
TP11	Reset Test Point
TP12	Reserved
GND	Ground test point for scope probes
GND	Ground test point for scope probes
GND	Ground test point for scope probes
GND	Ground test point for scope probes



HEADQUARTERS OPERATIONS MITEL SEMICONDUCTOR

Cheney Manor, Swindon, Wiltshire SN2 2QW, United Kingdom. Tel: (01793) 518000

Tel: (01793) 518000 Fax: (01793) 518411

MITEL SEMICONDUCTOR

1500 Green Hills Road, Scotts Valley, California 95066-4922 United States of America. Tel (408) 438 2900 Fax: (408) 438 5576/6231 Internet: http://www.gpsemi.com CUSTOMER SERVICE CENTRES

- FRANCE & BENELUX Les Ulis Cedex Tel: (1) 69 18 90 00 Fax: (1) 64 46 06 07
- GERMANY Munich Tel: (089) 419508-20 Fax: (089) 419508-55
- ITALY Milan Tel: (02) 6607151 Fax: (02) 66040993
- JAPAN Tokyo Tel: (03) 5276-5501 Fax: (03) 5276-5510
- KOREA Seoul Tel: (2) 5668141 Fax: (2) 5697933
- NORTH AMERICA Scotts Valley, USA Tel: (408) 438 2900 Fax: (408) 438 5576/6231
- SOUTH EAST ASIA Singapore Tel:(65) 3827708 Fax: (65) 3828872
- **SWEDEN** Stockholm Tel: 46 8 702 97 70 Fax: 46 8 640 47 36
- TAIWAN, ROC Taipei Tel: 886 2 25461260 Fax: 886 2 27190260
- UK, EIRE, DENMARK, FINLAND & NORWAY

Swindon Tel: (01793) 726666 Fax : (01793) 518582

These are supported by Agents and Distributors in major countries world-wide.

© Mitel Corporation 1998 Publication No. AN4884 Issue No. 1.0 March 1998
TECHNICAL DOCUMENTATION – NOT FOR RESALE. PRINTED IN UNITED KINGDOM

This publication is issued to provide information only which (unless agreed by the Company in writing) may not be used, applied or reproduced for any purpose nor form part of any order or contract nor to be regarded as a representation relating to the products or services concerned. No warranty or guarantee express or implied is made regarding the capability, performance or suitability of any product or service. The Company reserves the right to alter without prior notice the specification, design or price of any product or service. Information concerning possible methods of use is provided as a guide only and does not constitute any guarantee that such methods of use will be satisfactory in a specific piece of equipment. It is the user's responsibility to fully determine the performance and suitability of any equipment using such information and to ensure that any publication or data used is up to date and has not been superseded. These products are not suitable for use in any medical products whose failure to perform may result in significant injury or death to the user. All products and materials are sold and services provided subject to the Company's conditions of sale, which are available on request.