

EtherSeries User's Guide Upgrade

for use with EtherSeries User Software Version 2.4

Because of improvements to the EtherSeries User Software in Version 2.4, new information is required in your EtherSeries User's Guide. In order to make this information available to you and to keep your user's guide current, 3Com is issuing this User's Guide Upgrade Package.

The upgrade package contains additional and replacement pages that you need to insert in your manual. Changed pages are dated at the lower inside corner. In some cases, you will discard pages containing information that is no longer current or accurate; these pages may not be replaced with new information. See the List of Changed Pages for specific information.

Because 3Com product ordering information and non-3Com hardware and software product compatibility information is constantly updated, this information has been removed from the manual. Refer to the latest 3Com Price List for 3Com product ordering information, or refer to the 3Com Product Compatibility Guide for non-3Com product compatibility information.

The EtherSeries 2.4 User's Guide Upgrade Package contains the following:

- EtherSeries 2.4 User's Guide Upgrade cover sheet (this page)
- EtherSeries 2.4 User Software Upgrade Instructions.
- List of Changed Pages
- Replacement pages for the EtherSeries User's Guide
- EtherMenu User's Guide (EtherMenu is a new product included with EtherSeries Version 2.4)

NOTE: EtherSeries User Software Version 2.4 supports DOS versions 2.1 and 3.0 and can be used with the IBM PC, IBM PC XT and IBM PC AT. Therefore, all references to DOS 2.0 and the IBM PC in this upgrade and your existing user's guide also refer to DOS versions 2.1 and 3.0 as well as the IBM PC XT and IBM PC AT. Any specific differences in operation have been noted.

Part Number 0867-01

0659-02

EtherSeries 2.4 User Software Upgrade Instructions

Follow these instructions to upgrade your EtherSeries User Software to Version 2.4. **Disregard these instructions if you are installing EtherSeries 2.4 User Software for the first time.**

The EtherSeries 2.4 User Software Upgrade Package contains a diskette labeled EtherSeries User Software for the IBM PC, Version 2.4. Use this diskette to upgrade your EtherSeries User Software to version 2.4

EtherShare User Software is generally found on each user's EtherSeries/DOS Diskette. You use this diskette to load DOS at your IBM PC before logging into the network server. EtherShare User Software is also found in the system volume, SYS2. This volume stores information shared by all network users.

You can upgrade your EtherSeries 2.0 or 2.1 User Software to version 2.4 by creating a new EtherSeries/DOS Diskette.

To create an EtherSeries 2.4/DOS Diskette:

1. Go to any IBM PC on the network. (Load DOS if necessary.)
2. Insert your current EtherSeries/DOS Diskette in drive A:.
3. Insert the diskette labeled EtherSeries User Software for the IBM PC, Version 2.4 in drive B:.
4. At the DOS A> prompt, type:

A>B:SETUP ←

This starts an automatic procedure which installs the new version of the EtherSeries software on the existing user diskette.

5. Remove the user diskette from drive A: and label it ETHERSERIES 2.4/DOS DISKETTE.

If you normally perform EtherSeries Administration functions, upgrade the SYS2 volume by copying the new version of the EtherSeries User Software on to the existing volume.

To upgrade the SYS2 volume:

1. Log in to the server. Use the user name that is the same as the server you are logging in to.

A>ES LOGIN SERVER1 ←

2. Link to the SYS2 volume.

A>ES LINK SYS.SYS2 D: ←

3. Insert the diskette labeled EtherSeries User Software for the IBM PC, Version 2.4 in drive A:.
4. Use the DOS COPY command to copy all files from the diskette containing version 2.4 on to the system volume linked to drive D:.

A>COPY *.* D: ←

5. Repeat this procedure for all volumes on all servers which contain the EtherSeries User Software.

To install the EtherMenu Software, see the installation instructions in the EtherMenu Administrator's Guide.

List of Changed Pages

EtherSeries User's Guide

Title Page	Replace
Warranty Statement	Replace
Contents	Replace
1-1	Replace
1-3	Replace
1-5	Replace
2-5	Replace
2-6A	Replace
2-23	Replace
2-24	Add
B-7	Delete
B-8	Delete
Appendix D	Delete
E-12	Replace
E-13 through E-17	Add

EtherShare User's Guide

Title Page	Replace
4-19	Replace
4-23	Replace
4-29	Replace
Appendix C	Delete
D-7	Replace
Appendix E	Delete
F-2 through F-5	Replace

EtherPrint User's Guide

Title Page	Replace
Contents	Replace
1-1	Replace
2-1	Replace
2-9	Replace
3-6 through 3-13	Replace
B-2	Replace

EtherMail User's Guide

Title Page	Replace
C-10	Replace

EtherMenu User's Guide

Complete New Section	Add
----------------------	-----

