



Jumper and Connector Locations

Top View

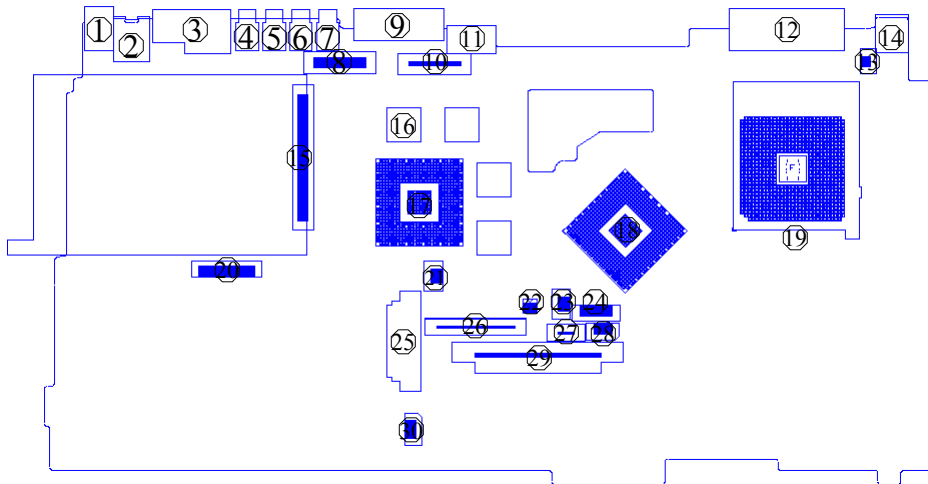

1	LIN1	Line-in Port	16	U7	Video Memory
2	LOUT1	Line-out Port	17	U17	VGA Chip
3	JK1	RJ45+RJ11	18	U20	North Bridge
4	CN1	USB Port	19	CPU1	CPU Socket
5	CN2	USB Port	20	CN7	Launch Board Cable Connector
6	CN3	USB Port	21	RTC1	RTC Battery Connector
7	CN4	USB Port	22	SW2	Check Password Switch
8	INV1	LCD Inverter Cable Connector	23	FAN1	Fan Connector
9	CRT1	VGA Port	24	CN8	Bluetooth Cable Connector
10	LCD1	LCD Coaxial Cable Connector	25	IDE1	Optical Drive Connector
11	TV1	S-Video Port	26	KB1	Keyboard Connector
12	DVI1	DVI Port	27	TPAD1	Touchpad Cable Connector
13	CN6	LCD Lid Switch	28	FAN2	Fan 2 Connector (Not presented)
14	DCIN1	DC-in Port	29	HDD1	HDD Connector
15	SKT1	PCMCIA Slot	30	SPK1	Speaker Cable Connector

Bottom View

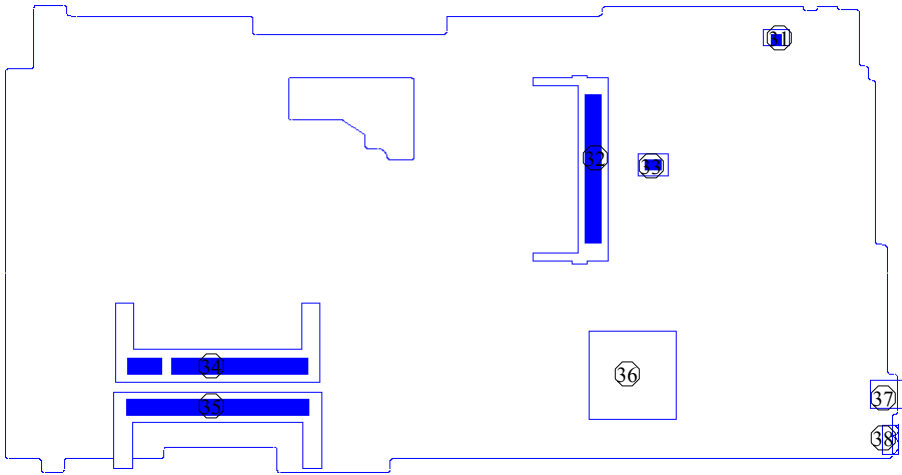

31	CN9	Modem Cable Connector	35	DM2	DIMM Socket 2
32	CN11	Wireless LAN Card Connector	36	U84	South Bridge
33	CN10	Modem Board Connector	37	SKT2	IEEE 1394 Port
34	DM1	DIMM Socket 1	38	IR1	FIR Port

SW Settings

	SW2-1	SW2-2
Chkpw Enable	ON	X