


CHANNEL DISPLAY FOR A DJ-180T

This modification allows you to display the memory information by a channel number.

To perform the mod, follow these steps.

1. Remove the battery pack and the antenna.
2. Remove the battery terminal plate at bottom.
3. Remove two screws on the rear side of the unit.
4. Remove one small screw on the front case.
5. Remove the dial knob, squelch knob and volume knob.
6. Carefully open the unit.
7. Locate the R376 (chip resistor) on the control unit.
8. Carefully remove it with a soldering iron.
9. Reassemble the unit.
10. To display frequency, put the R376 back.

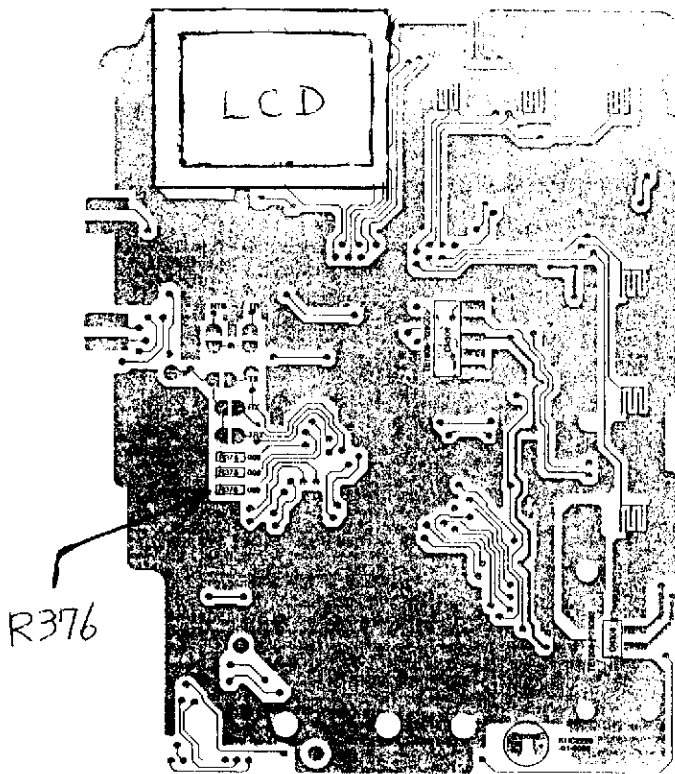

Caution: Improper modification can damage your unit and will void the warranty.

Alinco Electronics, Inc.