

ALINCO DJ-582T CHANNEL DISPLAY MODIFICATION

- 1. Set the unit to the "FL" (Frequency Lock) mode.
It is done by pressing the "*" key while holding the "FUNC" key. The "FL" icon is displayed on the right middle of the LCD. Then enter "#98631" from the DTMF keypad.*
- 2. To lock the main band to the VHF in the Channel Display Mode, enter "*741" from the DTMF keypad in the FL mode.*
- 3. To lock the main band to the UHF in the Channel Display Mode, enter "*753" from the DTMF keypad in the FL mode.*
- 4. To unlock the main band in the Channel Display Mode, enter "*222" from the DTMF keypad in the FL mode.*
- 5. To display a frequency, enter "*284DCA" in the FL mode.*
- 6. To exit from the FL mode, press the "*" key three times while holding the "FUNC" key.*