# MP1764C-02,03 Error Detector Operation Manual (GPIB Programming)

## **Second Edition**

- Read this manual before using the equipment.
- To ensure that the equipment is used safely, read the "For Safety" in the MP1764D Error Detector Operation Manual first.
- Keep this manual with the equipment.

# **ANRITSU CORPORATION**

Document No.: M-W2374AE-2.0

MP1764C-02,03 Error Detector Operation Manual (GPIB Programming)

March 2004 (First Edition)
 July 2004 (Second Edition)

Copyright © 2004, ANRITSU CORPORATION.

All rights reserved. No part of this manual may be reproduced without the prior written permission of the publisher.

The contents of this manual may be changed without prior notice.

Printed in Japan

# **Manual Change**

The functions and performance of the MP1764C-02, 03 are common to those of the MP1764D. Read the "MP1764D Error Detector Operation Manual (GPIB Programming)" (M-W2342AE) replacing the part shown in the table below when using the MP1764C-02, 03.

# Difference from MP1764D Error Detector Operation Manual (GPIB Programming)

Section	Page	Difference
	All	Read MP1764D as MP1764C.

- When both Options 02 and 03 are installed:
   The device messages to be used for the MP1764C-02, 03 are the same as those for the MP1764D.
- When either Option 02 or Option 03 is installed:
   See the following tables for the valid device messages for Option 02 and Option 03:

### Valid Device Messages for Option 02

Function	Header Part of Control Mes- sage	Page	Related Page	
Input data select	DSL	p. 9-151		
DATA•DATA tracking/ Difference adjust con- trol select	DAC	p. 9-152	p. 9-8, 9-10, 9-11, A-6, C-1	
Single-ended/ Differential select	DSD	p. 9-153		
Data input termination condition	DTC	p. 9-158		

### Valid Device Messages for Option 03

Function	Header Part of Control Mes- sage	Page	Related Page
Clock select	RRC	p. 9-154	0.0.010
PLL reset	RPL	p. 9-155	p. 9-8, 9-10, 9-11, A-6, C-1
Recovery frequency	RFQ	p. 9-156	J-11, A-0, C-1

- \* Commands other than the above are valid for the both options.
- \* The commands become invalid if the corresponding option is not installed.