

**SERIES  
681XXA  
SYNTHESIZED SWEEP GENERATOR  
PROGRAMMING MANUAL**

**PRELIMINARY**

The logo consists of the word "WILTRON" in a bold, sans-serif font, centered within a rounded rectangular border. This central element is flanked by two horizontal lines on each side, extending across the width of the page.

**WILTRON**

## **WARRANTY**

The WILTRON product(s) listed on the title page is (are) warranted against defects in materials and workmanship for one year from the date of shipment, except for YIG-tuned oscillators and all microwave components, which are warranted for two years.

WILTRON's obligation covers repairing or replacing products which prove to be defective during the warranty period. Buyers shall prepay transportation charges for equipment returned to WILTRON for warranty repairs. Obligation is limited to the original purchaser. WILTRON is not liable for consequential damages.

## **LIMITATION OF WARRANTY**

The foregoing warranty does not apply to WILTRON connectors that have failed due to normal wear. Also, the warranty does not apply to defects resulting from improper or inadequate maintenance by the Buyer, unauthorized modification or misuse, or operation outside of the environmental specifications of the product. No other warranty is expressed or implied, and the remedies provided herein are the Buyer's sole and exclusive remedies.

# ***TABLE OF CONTENTS***

---

## **Chapter 1 — General GPIB Information**

Chapter 1 provides a general description of the General Purpose Interface Bus (GPIB) and the bus data transfer and control functions. It also contains a listing of the 681XXA's GPIB interface function subset capability and response to IEEE-488 interface function messages. Chapter contents are detailed immediately following the tab.

## **Chapter 2 — Programming with SCPI Commands**

Chapter 2 provides information for remote operation of the sweep generator via the GPIB using Standard Commands for Programmable Instruments (SCPI) commands. All SCPI commands are listed and described by subsystem. Sample programs showing usage of the commands are also included. Chapter contents are detailed immediately following the tab.

## **Chapter 3 — Programming with Compatible 67XX GPIB Commands**

Chapter 3 provides information for remote operation of the sweep generator via the GPIB using compatible WILTRON Model 67XX Synthesizer GPIB commands. All 67XX GPIB commands accepted and implemented by the 681XXA are listed and described by function. Sample programs showing usage of the commands are also included. Chapter contents are detailed immediately following the tab.

## **Appendix A — SCPI Conformance Information**

Appendix A provides SCPI conformance information in the form of a command summary.

## **Appendix B — Index of Compatible 67XX GPIB Commands**

Appendix B provides an alphabetical index of the WILTRON Model 67XX GPIB Product Specific Commands accepted and implemented by the 681XXA.

# **Chapter 1**

## **General GPIB Information**

### ***Table of Contents***

---

1-1	SCOPE OF MANUAL . . . . .	1-3
1-2	INTRODUCTION . . . . .	1-3
1-3	IEEE-488 INTERFACE BUS DESCRIPTION . . .	1-5
	Functional Elements . . . . .	1-6
	Bus Structure . . . . .	1-7
	Data Bus Description . . . . .	1-7
	Data Byte Transfer Control Bus Description . . .	1-8
	General Interface Management Bus Description .	1-9
	Device Interface Function Capability . . . . .	1-10
	Message Types . . . . .	1-11
1-4	681XXA GPIB OPERATION . . . . .	1-13
	Setting GPIB Operating Parameters . . . . .	1-13
	Response to GPIB Interface Function Messages .	1-13

# Chapter 1

## General GPIB Information

### **1-1** SCOPE OF MANUAL

This manual provides information for operating the Series 681XXA Synthesized Sweep Generator with commands sent from an external controller via the IEEE-488 General Purpose Interface Bus (GPIB). It includes the following:


- A general description of the GPIB and the bus data transfer and control functions.
- A complete listing and description of all the Standard Commands for Programmable Instruments (SCPI) commands used to control sweep generator operation with programming examples.
- A complete listing and description of all compatible WILTRON 67XX Synthesizer GPIB commands that can be used to control sweep generator operation with programming examples.

This manual is intended to be used in conjunction with the Series 681XXA Synthesized Sweep Generator Operation Manual, P/N 10370-10250. Refer to that manual for general information about the 681XXA, including equipment set up and front panel (manual mode) operating instructions.

### **1-2** INTRODUCTION

This chapter provides a general description of the GPIB and the bus data transfer and control functions. It also contains a listing of the 681XXA's GPIB interface function subset capability and response to IEEE-488 interface function messages.

The GPIB information presented in this chapter is general in nature. For complete and specific information, refer to the following documents: ANSI/IEEE Std 488.1-1987 *IEEE Standard Digital Interface for Programmable Instrumentation* and ANSI/IEEE Std 488.2-1987 *IEEE Standard Codes, Formats, Protocols and Common Commands*. These documents precisely define the total specification of the mechanical and electrical interface, and of the data transfer and control protocols.

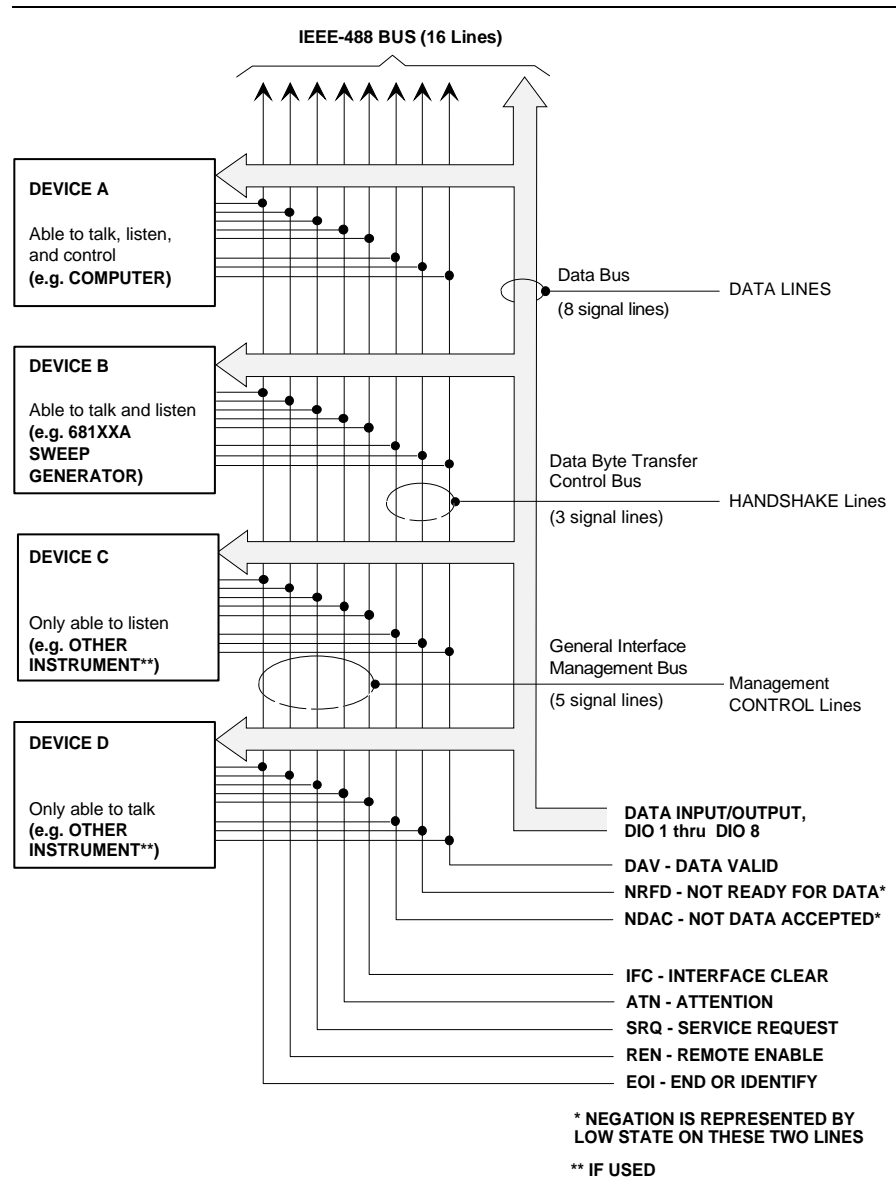

**Figure 1-1.** Interface Connections and GPIB Bus Structure

**1-3 IEEE-488 INTERFACE  
BUS DESCRIPTION**

The IEEE-488 General Purpose Interface Bus (GPIB) is an instrumentation interface for integrating instruments, computers, printers, plotters, and other measurement devices into systems. The GPIB uses 16 signal lines to effect transfer of information between all devices connected on the bus.

The following requirements and restrictions apply to the GPIB.

- No more than 15 devices can be interconnected by one contiguous bus; however, an instrumentation system may contain more than one interface bus.
- The maximum total cumulative cable length for one interface bus may not exceed twice the number of devices connected (in meters) , or 20 meters—whichever is less.
- A maximum data rate of 1 Mb/s across the interface on any signal line.
- Each device on the interface bus must have a unique address, ranging from 00 to 30.

The devices on the GPIB are connected in parallel, as shown in Figure 1-1. The interface consists of 16 signal lines and 8 ground lines in a shielded cable. Eight of the signal lines are the data lines, DIO 1 thru DIO 8. These data lines carry messages (data and commands), one byte at a time, among the GPIB devices. Three of the remaining lines are the handshake lines that control the transfer of message bytes between devices. The five remaining signal lines are referred to as interface management lines.

The following paragraphs provide an overview of the GPIB including a description of the functional elements, bus structure, bus data transfer process, interface management bus, device interface function requirements, and message types.

***Functional  
Elements***

Effective communications between devices on the GPIB requires three functional elements; a *talker*, a *listener*, and a *controller*. Each device on the GPIB is categorized as one of these elements depending on its current interface function and capabilities.

**Talker**

A talker is a device capable of sending device-dependent data to another device on the bus when addressed to talk. Only one GPIB device at a time can be an active talker.

**Listener**

A listener is a device capable of receiving device-dependent data from another device on the bus when addressed to listen. Any number of GPIB devices can be listeners simultaneously.

**Controller**

A controller is a device, usually a computer, capable of managing the operation of the GPIB. Only one GPIB device at a time can be an active controller. The active controller manages the transfer of device-dependent data between GPIB devices by designating who will talk and who will listen.

**System Controller**

The system controller is the device that always retains ultimate control of the GPIB. When the system is first powered-up, the system controller is the active controller and manages the GPIB. The system controller can pass control to a device, making it the new active controller. The new active controller, in turn, may pass control on to yet another device. Even if it is not the active controller, the system controller maintains control of the Interface Clear (IFC) and Remote Enable (REN) interface management lines and can thus take control of the GPIB at anytime.



**Bus  
Structure**

The GPIB uses 16 signal lines to carry data and commands between the devices connected to the bus. The interface signal lines are organized into three functional groups.

- Data Bus (8 lines)
- Data Byte Transfer Control Bus (3 lines)
- General Interface Management Bus (5 lines)

The signal lines in each of the three groups are designated according to function. Table 1-1 lists these designations.


**Table 1-1.** *Interface Bus Signal Line Designations*

Bus Type	Signal Line Name	Function
Data Bus	DIO1–DIO8	Data Input/Output, 1 thru 8
Data Byte Transfer Control Bus	DAV NRFD NDAC	Data Available Not Ready For Data Not Data Accepted
General Interface Management Bus	ATN IFC SRQ REN EOI	Attention Interface Clear Service Request Remote Enable End Or Identify

**Data Bus Description**

The data bus is the conduit for the transfer of data and commands between the devices on the GPIB. It contains eight bi-directional, active-low signal lines—DIO 1 thru DIO 8. Data and commands are transferred over the data bus in byte-serial, bit-parallel form. This means that one byte of data (eight bits) is transferred over the bus at a time. DIO 1 represents the least-significant bit (LSB) in this byte and DIO 8 represents the most-significant bit (MSB). Bytes of data are normally formatted in seven-bit ASCII (American Standard Code for Information Interchange) code. The eighth (parity) bit is not used.

Each byte placed on the data bus represents either a command or a data byte. If the Attention (ATN) interface management line is TRUE while the data is transferred, then the data bus is carrying a bus command which is to be received by every GPIB device. If ATN is FALSE, then a data byte is being transferred and only the active listeners will receive that byte.

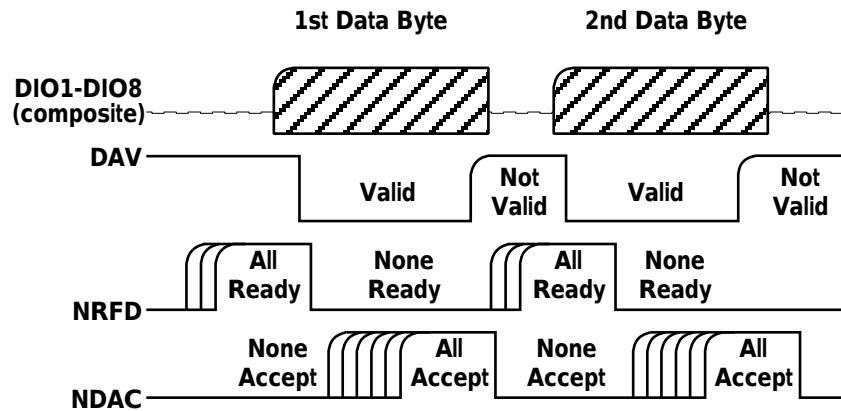

**Figure 1-2.** Typical GPIB Handshake Operation

**Data Byte  
Transfer  
Control Bus  
Description**

Control of the transfer of each byte of data on the data bus is accomplished by a technique called the “three-wire handshake”, which involves the three signal lines of the Data Byte Transfer Control Bus. This technique forces data transfers at the speed of the slowest listener, which ensures data integrity in multiple listener transfers. One line (DAV) is controlled by the talker, while the other two (NRFD and NDAC) are wired-OR lines shared by all active listeners. The handshake lines, like the other GPIB lines, are active low. The technique is described briefly in the following paragraphs and is depicted in Figure 1-2. For further information, refer to ANSI/IEEE Std 488.1.

**DAV (Data Valid)**

This line is controlled by the active talker. Before sending any data, the talker verifies that NDAC is TRUE (active low) which indicates that all listeners have accepted the previous data byte. The talker then places a byte on the data lines and waits until NRFD is FALSE (high) which indicates that all addressed listeners are ready to accept the information. When both NRFD and NDAC are in the proper state, the talker sets the DAV line TRUE (active low) to indicate that the data on the bus is valid (stable).

**NRFD (Not Ready For Data)**

This line is used by the listeners to inform the talker when they are ready to accept new data. The talker must wait for each listener to set the NRFD line FALSE (high) which they will do at their own

rate. This assures that all devices that are to accept the data are ready to receive it.

***NDAC (Not Data Accepted)***

This line is also controlled by the listeners and is used to inform the talker that each device addressed to listen has accepted the data. Each device releases NDAC at its own rate, but NDAC will not go FALSE (high) until the slowest listener has accepted the data byte.

***General  
Interface  
Management  
Bus  
Description***

The general interface management bus is a group of five signal lines used to manage the flow of information across the GPIB. A description of the function of each of the individual control lines is provided below.

***ATN (Attention)***

The active controller uses the ATN line to define whether the information on the data bus is a command or is data. When ATN is TRUE (low), the bus is in the command mode and the data lines carry bus commands. When ATN is FALSE (high), the bus is in the data mode and the data lines carry device-dependent instructions or data.

***EOI (End or Identify)***

The EOI line is used to indicate the last byte of a multibyte data transfer. The talker sets the EOI line TRUE during the last data byte.

The active controller also uses the EOI line in conjunction with the ATN line to initiate a parallel poll sequence.

***IFC (Interface Clear)***

Only the system controller uses this line. When IFC is TRUE (low), all devices on the bus are placed in a known, quiescent state (unaddressed to talk, unaddressed to listen, and service request idle).

***REN (Remote Enable)***

Only the system controller uses this line. When REN is set TRUE (low), the bus is in the remote mode and devices are addressed either to listen or to talk. When the bus is in remote and a device is addressed, it receives instructions from the GPIB rather than from its front panel. When REN is set FALSE (high), the bus and all devices return to local operation.

**SRQ (Service Request)**

The SRQ line is set TRUE (low) by any device requesting service by the active controller.

**Device  
Interface  
Function  
Capability**

An interface function is the GPIB system element which provides the basic operational facility through which a device can receive, process, and send messages. Each specific interface function may only send or receive a limited set of messages within particular classes of messages. As a result, a set of interface functions is necessary to achieve complete communications among devices on the GPIB. ANSI/IEEE Std 488.1 defines each of the interface functions along with its specific protocol.

ANSI/IEEE Std 488.2 specifies the minimum set of IEEE 488.1 interface capabilities that each GPIB device must have. This minimum set of interface functions assures that the device is able to send and receive data, request service, and respond to a device clear message. Table 1-2 lists the interface function capability of the series 681XXA sweep generator.

**Table 1-2.** 681XXA Interface Function Capability

Function Identifier	Function	681XXA Capability
AH1	Acceptor Handshake	Complete Capability
SH1	Source Handshake	Complete Capability
T6	Talker	No Talk Only (TON)
L4	Listener	No Listen Only (LON)
SR1	Service Request	Complete Capability
RL1	Remote/Local	Complete Capability
PP1	Parallel Poll	Complete Capability
DC1	Device Clear	Complete Capability
DT1	Device Trigger	Complete Capability
C0	Controller	No Capability
E2	Tri-State Drivers	Three-state bus drivers

**Message  
Types**

There are three types of information transmitted over the GPIB—interface function messages, device-specific commands, and data and instrument status messages.

**Interface Function Messages**

The controller manages the flow of information on the GPIB using interface function messages, usually called *commands* or *command messages*. Interface function messages perform such functions as initializing the bus, addressing and unaddressing devices, and setting device modes for remote or local operation.

There are two types of commands—multiline and uniline. Multiline commands are bytes sent by the active controller over the data bus (DIO1-DIO8) with ATN set TRUE. Uniline commands are signals carried by the individual interface management lines.

The user generally has control over these commands; however, the extent of user control depends on the implementation and varies with the specific GPIB interface hardware and software used with the external controller.

**Device-Specific Commands**

These commands are keywords or mnemonic codes sent by the external controller to control the setup and operation of the addressed device or instrument. The commands are normally unique to a particular instrument or class of instruments and are described in its documentation.

Device-specific commands are transmitted over the data bus of the GPIB to the device in the form of ASCII strings containing one or more keywords or codes. They are decoded by the device's *internal controller* and cause the various instrument functions to be performed.

**Data and Instrument Status Messages**

These messages are sent by the device to the external controller via the GPIB. They contain measurement results, instrument status, or data files that the device transmits over the data bus in response to specific requests from the external controller. The contents of these messages are instrument specific and may be in the form of ASCII strings or binary data.

In some cases data messages will be transmitted from the external controller to the device. For example, messages to load calibration data.

An SRQ (service request) is an interface function message sent *from the device* to the external controller to request service from the controller, usually due to some predetermined status condition or error. To send this message, the device sets the SRQ line of the General Interface Management Bus true, then sends a status byte on the data bus lines.

An SRQ interface function message is also sent by the device in response to a serial poll message from the controller, or upon receiving an Output Status Byte(s) command from the controller. The protocols associated with the SRQ functions are defined in the ANSI/IEEE Std 488.2 document.

The manner in which interface function messages and device-specific commands are invoked in programs is implementation specific for the GPIB interface used with the external controller. Even though both message types are represented by mnemonics, they are implemented and used in different ways.

Normally, the interface function messages are sent automatically by the GPIB driver software in response to invocation of a software function. For example, to send the IFC (Interface Clear) interface function message, one would call the `ibsic` function of the National Instruments software driver. On the other hand, the command `*RST` (Reset) is sent in a command string to the addressed device. In the case of the National Instruments example, this would be done by using the `ibwrt` function call.

**1-4 681XXA GPIB  
OPERATION**

All Series 681XXA Synthesized Sweep Generator functions, settings, and operating modes (except for power on/standby) are controllable using commands sent from an external controller via the GPIB. When in the remote (GPIB) mode, the synthesizer functions both as a listener and a talker. The GPIB interface function capability of the 681XXA is listed in Table 1-2 (page 1-10).

***Setting  
GPIB Oper-  
ating Pa-  
rameters***

The 681XXA leaves the factory with the GPIB address value set to 5 and the data delimiting terminator set to carriage return and line feed (CR/LF). A different address value can be entered from the front panel using the Configure GPIB menu. Using this same menu, the data delimiting terminator can be changed to carriage return (CR) only. Refer to Chapter 2 of the Series 681XXA Synthesized Sweep Generator Operation Manual for the procedure.

***Response to  
GPIB  
Interface  
Function  
Messages***

Table 1-3 (page 1-14) lists the GPIB Interface Function Messages that the 681XXA will recognize and respond to. With the exception of the Device Clear and Selected Device Clear messages, these messages affect only the operation of the 681XXA GPIB interface. The 681XXA response for each message is indicated.

Interface function messages are transmitted on the GPIB data lines and interface management lines as either unaddressed or addressed commands. The manner in which these messages are invoked in programs is implementation dependent. For programming information, refer to the documentation included with the GPIB Interface for the external controller used.

**Table 1-3.** *681XXA Response to GPIB Interface Function Messages*

<b>Interface Function Message</b>	<b>Addressed Command</b>	<b>681XXA Response</b>
Device Clear (DCL) Selected Device Clear (SDC)	No Yes	Resets the 681XXA to its default state. (Equivalent to sending the *RST command.)
Go To Local (GTL)	Yes	Returns the 681XXA to local (front panel) control.
Group Execute Trigger (GET)	Yes	Executes a string of commands, if programmed.
Interface Clear (IFC)	No	Stops the 681XXA GPIB interface from listening or talking. (The front panel controls are not cleared.)
Local Lockout (LLO)	No	Disables the front panel menu RETURN TO LOCAL soft-key.
Remote Enable (REN)	No	Places the 681XXA under remote (GPIB) control when it has been addressed to listen.
Serial-Poll Enable (SPE)	No	Outputs the serial-poll status byte.
Serial-Poll Disable (SPD)	No	Disables the serial-poll function.
Parallel-Poll Configure (PPC)	Yes	Responds to a parallel-poll message (PPOLL) by setting assigned data bus line to the logical state (1,0) that indicates its correct SRQ status.
Parallel-Poll Unconfigure (PPU)	No	Disables the parallel-poll function.



# **Chapter 2**

## **Programming with SCPI Commands**

*– SCPI Programming Information will be supplied at a later date. –*

# **Chapter 3**

## **Programming with Compatible 67XX GPIB Commands**

### **Table of Contents**

---

3-1	INTRODUCTION . . . . .	3-3
3-2	COMMAND CODES . . . . .	3-3
3-3	DATA INPUT RESTRICTIONS . . . . .	3-5
3-4	PARAMETER AND DATA ENTRY COMMANDS . . . . .	3-6
	Opening a Parameter . . . . .	3-6
	Data Entry . . . . .	3-6
	Using the <b>SYZ</b> Command . . . . .	3-9
3-5	CW FREQUENCY COMMANDS . . . . .	3-10
3-6	ANALOG AND STEP SWEEP COMMANDS . . . . .	3-11
	Sweep Range . . . . .	3-11
	Alternate Sweep . . . . .	3-12
	Sweep Triggering . . . . .	3-12
	Analog/Step Sweep Select . . . . .	3-14
	Special Step Sweep . . . . .	3-16
3-7	FREQUENCY MARKER COMMANDS . . . . .	3-16
3-8	MODULATION COMMANDS . . . . .	3-18
	Amplitude Modulation . . . . .	3-18
	Frequency Modulation . . . . .	3-18
	Square Wave Modulation . . . . .	3-18
3-9	OUTPUT POWER LEVELING COMMANDS . . . . .	3-20

3-10	OUTPUT COMMANDS . . . . .	3-22
3-11	STORED SETUP COMMANDS . . . . .	3-24
3-12	SRQ AND STATUS BYTE COMMANDS . . . . .	3-26
	Status Bytes . . . . .	3-26
	SRQ Generation . . . . .	3-26
3-13	CONFIGURATION COMMANDS . . . . .	3-31
3-14	GROUP EXECUTE TRIGGER COMMANDS . . .	3-32
3-15	FAST-FREQUENCY-SWITCHING COMMANDS .	3-33
3-16	POWER-OFFSET-TABLE COMMANDS . . . . .	3-34
	Loading the Power-Offset Table . . . . .	3-34
3-17	SELF TEST COMMANDS . . . . .	3-37
3-18	MISCELLANEOUS COMMANDS . . . . .	3-39
3-19	PROGRAM ERRORS . . . . .	3-40
	Invalid-Parameter . . . . .	3-40
	Syntax . . . . .	3-40
3-20	RESET PROGRAMMING AND DEFAULT CONDITIONS . . . . .	3-41
3-21	PROGRAMMING EXAMPLES . . . . .	3-42

# Chapter 3

## Programming with Compatible 67XX GPIB Commands

### **3-1** INTRODUCTION

This chapter provides information for remote operation of the Series 681XXA Synthesized Sweep Generator via the GPIB using compatible WILTRON Model 67XX Synthesizer GPIB commands. All 67XX GPIB commands accepted and implemented by the 681XXA are listed and described by function. Sample programs showing usage of the commands are also included.

### **3-2** COMMAND CODES

There are over two hundred and forty 67XX GPIB commands that are accepted and implemented by the 681XXA. These GPIB commands allow the user to program all front panel and menu functions (except for power on/standby). Each GPIB command is a two- or three-character mnemonic code that represents an instrument command or parameter; for example: RST (reset).

Table 3-1, beginning on page 3-4, is a listing of all 67XX GPIB command mnemonic codes accepted and implemented by the 681XXA grouped into functional categories. The listing for each category includes references to the paragraph and page number in this chapter where a complete description of that group of commands can be found.

#### **NOTE**

A quick way to determine the function of any of the GPIB command codes listed in Table 3-1 is to look up the command code of interest in Appendix B of this manual. Appendix B is an alphabetical index of all compatible 67XX GPIB command codes. A brief description of the function of each command is also included.

**Table 3-1.** *Compatible 67XX GPIB Command Codes Listed by Function (1 of 2)*

<b>GPIB Command Group Function</b>	<b>Command Codes</b>	<b>Para.</b>	<b>Page</b>
Parameter Entry Commands	F0, F1, F2, F3, F4, F5, F6, F7, F8, F9, M0, M1, M2, M3, M4, M5, M6, M7, M8, M9, DLF, DFF, DFM, SDT, SNS, SWT, LOS, PDT, PNS, FMS, UP, DN, SYZ, CLO	3-4	3-6
Data Entry/ Data Terminator Commands	0 thru 9, -, ., CLR, DB, DM, GH, MH, KH, HZ, SEC, MS, US, GV, MV, KV, PCV, SPS	3-4	3-6
CW Frequency Commands	CF0, CF1, CF2, CF3, CF4, CF5, CF6, CF7, CF8, CF9, CM0, CM1, CM2, CM3, CM4, CM5, CM6, CM7, CM8, CM9, SQF, SQU, SQD, ACW	3-5	3-10
Analog and Digital Sweep Commands	SF1, SF3, FUL, DF0, DF1, DF5, DF6, AFU, AF1, AF3, AD1, AD5, AD6, AUT, EXT, TRG, TRS, RSS, SWP, SSP, MAN, DU1, DU0, TSS, SP1, SP0	3-6	3-11
Frequency Marker Commands	ME1, ME0, MK0, IM1, VM1	3-7	3-16
Modulation Commands	AM0, AM1, AM2, FM0, FM1, FMS, FMW, FMU, P0, SQP, SW0, SW1, SW2, SW3, SW4, XP	3-8	3-18
Power Leveling Commands	L1, L2, RF1, RF0, LO1, LO0, IL1, DL1, PL1, LV0, LSP, EG1, EG0	3-9	3-20
Output Commands	OI, OFL, OFH, OF0, OF1, OF2, OF3, OF4, OF5, OF6, OF7, OF8, OF9, OM0, OM1, OM2, OM3, OM4, OM5, OM6, OM7, OM8, OM9, OL1, OL2, OLO, ODF, OPD, OPS, OSD, OSS, OST, OVN, OWT, OSE, OEM, OES, OSB, OSM, OSR	3-10	3-22
Stored Setup Commands	SAF, SAM, SM, SSN(M1-9), RCF, RCM, RSN(M1-9)	3-11	3-24
Service Request and Status Byte Commands	SQ1, SQ0, ES1, ES0, UL1, UL0, LE1, LE0, PE1, PE0, SE1, SE0, FB1, FB0, SB1, SB0, MB0, MB1, MB2, EL1, EL0, CSB	3-12	3-26
Configuration Commands	BPN, BPP, EP0, EP1, PP0, PP1, RC0, RC1, RT0, RT1	3-13	3-31
Group Execute Trigger (GET) Commands	GTC, GTD, GTF, GTL, GTO, GTS, GTT, GTU, Y	3-14	3-32

**Table 3-1.** *Compatible 67XX GPIB Command Codes Listed by Function (2 of 2)*

GPIB Command Group Function	Command Codes	Para.	Page
Fast-Frequency-Switching Commands	ZL(X000-999), ZEL, ZS(X000-999)	3-15	3-33
Power-Offset-Table Commands	PT0, PT1, PTC, PTL	3-16	3-34
Self Test Commands	TST	3-17	3-37
Miscellaneous Commands	CS0, CS1, DS0, DS1, RL, RST, SNR	3-18	3-39

**3-3 DATA INPUT  
RESTRICTIONS**

The 681XXA sweep generator does *not* accept parameter or data entries in an exponential or scientific notation format. The accepted data formats are as follows:

- A decimal or integer format for entering parameters and data.
- A binary-byte format for entering both the status byte mask commands (para. 3-12) and the RCF and RCM stored-setup commands (para. 3-11).

**Programming Note:** The sweep generator only recognizes the following 65 characters:

- The 52 upper- and lower-case alphabetic characters. (The 681XXA accepts both upper- and lower-case characters without distinguishing between the cases).
- The minus sign (-).
- The comma (,).
- The decimal point (.
- The numerals between 0 and 9.

All characters other than the 65 listed above are ignored and can be interspersed between meaningful characters without ill effect. This use of other characters can improve readability. For example, the two command strings below are valid and interchangeable.

`"F12.754GHF27.792GHSF1SWPMK0L12DM"`

`"F1=2.754 GH, F2=7.792 GH, SF1, SWP, MK0, L1=2 DM"`

**3-4** **PARAMETER AND DATA  
ENTRY COMMANDS**

Table 3-2 lists the command mnemonic codes that open parameters for data entry. The table also provides the range of values permitted for each parameter and the data terminator mnemonic codes for each. Tables 3-3 and 3-4, located on page 3-8, list the data entry and data terminator command mnemonic codes.

**Opening a  
Parameter**

All of the commands listed in Table 3-2 open a parameter for data entry. Once opened, a parameter remains open until one of the following occurs:

- Another parameter is opened.
- A function other than video markers, intensity markers, or output power leveling is commanded.
- The CLO (close open parameter) command is received.

**Data Entry**

When a parameter is open for data entry, its value can be changed as follows:

- By sending a numeric value followed by the appropriate terminator code.
- By incrementing or decrementing its value using an associated step size.

**NOTE**

An appropriate data terminator *must* be used to terminate a numeric-parameter entry, and it *must* immediately follow the numeric value. If it does not, a parameter entry error will result.

The parameter and data entry commands do not affect the sweep generator's output unless the parameter being changed is also the current output parameter. The commands, therefore, may be used to change the preset values of parameters without altering the 681XXA's output.

*Example:* Assume that the 681XXA is executing an F3-F4 sweep from 3 GHz to 10 GHz. Changing the value of F1 to 3 GHz with the command string "F1 3 GH" does not affect the current output of the sweep generator. However, changing the value of F4 with the command string "F4 16.01 GH" alters the output of the 681XXA because it changes the end point of the F3-F4 sweep to 16.01 GHz.

**Table 3-2.** *Parameter Entry Commands (1 of 2)*

<b>MNEMONIC CODE</b>	<b>PARAMETER</b>	<b>VALUES</b>	<b>TERMINATOR</b>
F0	Opens the F0 parameter	Dependent on the frequency range of the instrument	GH
F1	Opens the F1 parameter		MH
F2	Opens the F2 parameter		KH
F3	Opens the F3 parameter		HZ
F4	Opens the F4 parameter		
F5	Opens the F5 parameter		
F6	Opens the F6 parameter		
F7	Opens the F7 parameter		
F8	Opens the F8 parameter		
F9	Opens the F9 parameter		
M0	Opens the M0 parameter	Dependent on the frequency range of the instrument	GH
M1	Opens the M1 parameter		MH
M2	Opens the M2 parameter		KH
M3	Opens the M3 parameter		HZ
M4	Opens the M4 parameter		
M5	Opens the M5 parameter		
M6	Opens the M6 parameter		
M7	Opens the M7 parameter		
M8	Opens the M8 parameter		
M9	Opens the M9 parameter		
DLF	Opens the $\Delta F$ parameter	Dependent on the frequency range of the instrument	GH
DFF	Opens the $\Delta F$ parameter		MH
DFM	Opens the $\Delta F$ parameter		KH HZ
SDT	Opens the step sweep dwell time parameter	1 ms to 99 sec	MS SEC
SNS	Opens the step sweep number of steps parameter	1 to 10,000	SPS
SWT	Opens the analog sweep and CW ramp time parameter	30 ms to 99 sec	MS SEC
LOS	Opens the level offset parameter	+100 dB to -100 dB	DB
PDT	Opens the power sweep dwell time parameter	1 ms to 99 sec	MS SEC
PNS	Opens the power sweep number of steps parameter	1 to 10,000	SPS



**Table 3-2.** *Parameter Entry Commands (2 of 2)*

<b>MNEMONIC CODE</b>	<b>PARAMETER</b>	<b>VALUES</b>	<b>TERMINATOR</b>
FMS	Opens the FM sensitivity parameter	-6 MHz/V, +10 MHz/V, or +20 MHz/V	KV MV GV
SYZ	Opens the step-size parameter for updating	Dependent on the open parameter	N/A
UP	Increments the open parameter by the step size	N/A	N/A
DN	Decrements the open parameter by the step size	N/A	N/A
CLO	Closes the previously opened parameter	N/A	N/A

**Table 3-3.** *Data Entry Commands*

<b>MNEMONIC CODE</b>	<b>DESCRIPTION</b>
0, 1, 2, 3, 4, 5, 6, 7, 8, 9	Numerals for parameter value entries
-	Change sign of input
.	Decimal point
CLR	Clear data entry

**Table 3-4.** *Data Terminator Codes*


<b>MNEMONIC CODE</b>	<b>DESCRIPTION</b>
DB	Decibels (dB)
DM	dBm
GH	GHz
MH	MHz
KH	kHz
HZ	Hertz (Hz)
SEC	Seconds
MS	Milliseconds (ms)
US	Microseconds ( $\mu$ s)
GV	GHz per volt (GHz/V)
MV	MHz per volt (MHz/V)
KV	kHz per volt (kHz/V)
PCV	Percent per volt (%/V)
SPS	Steps

**Using the SYZ  
Command**

Each 681XXA parameter has an associated step size that can be used to increment or decrement its value. Parameters that have common units share a common step size. For example, the frequency parameters (F0-F9, M0-M9, and ΔF) have a common step size as do the power level parameters (L1, L2, and Level Offset). Other parameters, such as analog sweep time, have individual step sizes.

To set the step size for a parameter, first send the command code to open the parameter, then send the SYZ command. Now set the step size by sending a numeric string with the proper terminator. When the terminator is received, the step size is accepted and the original parameter is again open for entry.

Figure 3-1 shows how the SYZ command can be used to increment a parameter. In this example, the F1 frequency parameter is set to 4 GHz, the step size is set to 10 MHz, and F1 frequency is incremented three times by the value of the step size.

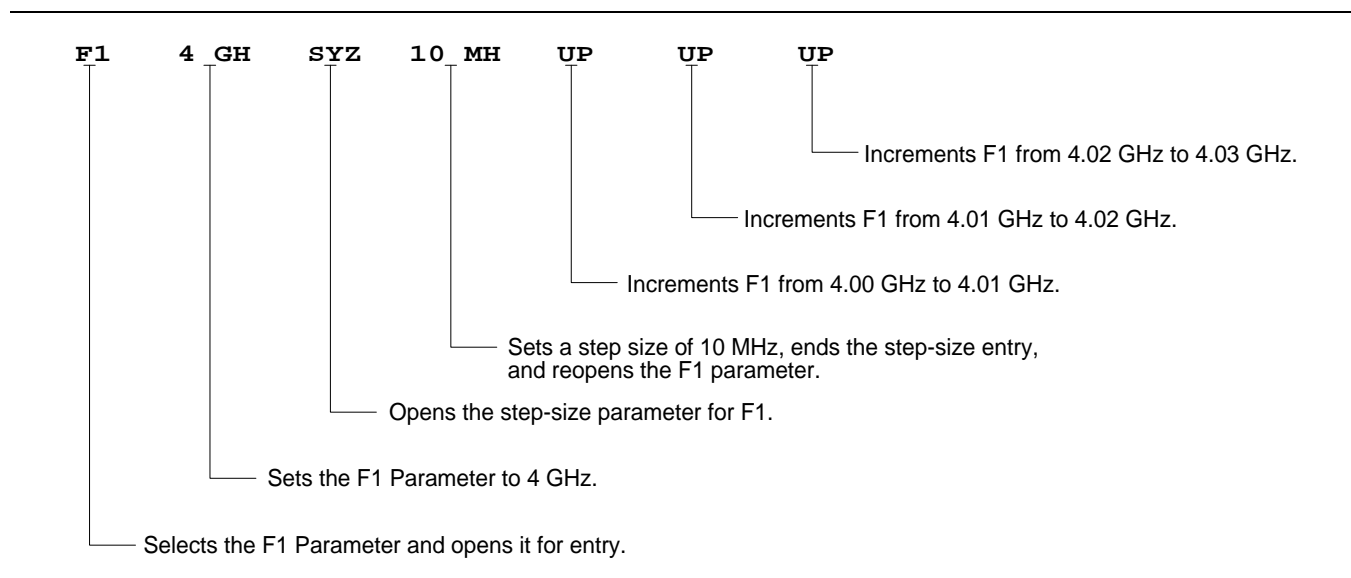

**Figure 3-1.** Using the SYZ (Step Size) Command

**3-5 CW FREQUENCY  
COMMANDS**

Table 3-5 lists the CW frequency command mnemonic codes. These commands call up each of the 20 preset (or previously set) CW frequencies. Each command causes its associated CW frequency to be output and opens that frequency's parameter for data entry.


The command, SQF, accesses the preset frequencies in sequential order—that is, F0 to F9 and M0 to M9.

**Table 3-5.** *CW Frequency Commands*

<b>MNEMONIC CODE</b>	<b>FUNCTION</b>	<b>OPENS FOR ENTRY</b>
CF0	Set CW mode at F0	F0 parameter
CF1	Set CW mode at F1	F1 parameter
CF2	Set CW mode at F2	F2 parameter
CF3	Set CW mode at F3	F3 parameter
CF4	Set CW mode at F4	F4 parameter
CF5	Set CW mode at F5	F5 parameter
CF6	Set CW mode at F6	F6 parameter
CF7	Set CW mode at F7	F7 parameter
CF8	Set CW mode at F8	F8 parameter
CF9	Set CW mode at F9	F9 parameter
CM0	Set CW mode at M0	M0 parameter
CM1	Set CW mode at M1	M1 parameter
CM2	Set CW mode at M2	M2 parameter
CM3	Set CW mode at M3	M3 parameter
CM4	Set CW mode at M4	M4 parameter
CM5	Set CW mode at M5	M5 parameter
CM6	Set CW mode at M6	M6 parameter
CM7	Set CW mode at M7	M7 parameter
CM8	Set CW mode at M8	M8 parameter
CM9	Set CW mode at M9	M9 parameter
SQF	Scan to the next higher preset CW frequency.	CW frequency parameter then selected
SQU	Scan up to the next higher preset CW frequency.	CW frequency parameter then selected
SQD	Scan down to the next lower preset CW frequency.	CW frequency parameter then selected
ACW	Activates the currently scanned frequency as CW.	CW frequency parameter then selected

**Programming Note:** Sweep generator response to a SQF command depends on the state the instrument is in at the time the command is received. For example, if the 681XXA is in a CW mode of operation with the current output frequency open for entry, the SQF command (1) causes the output to change to the next sequential frequency and (2) opens that frequency's parameter for data entry. However, if the instrument is in any other mode of operation, the SQF command causes it to switch to the last CW frequency that was output and opens that parameter for data entry.

Figure 3-2 is an example of a CW frequency command string.

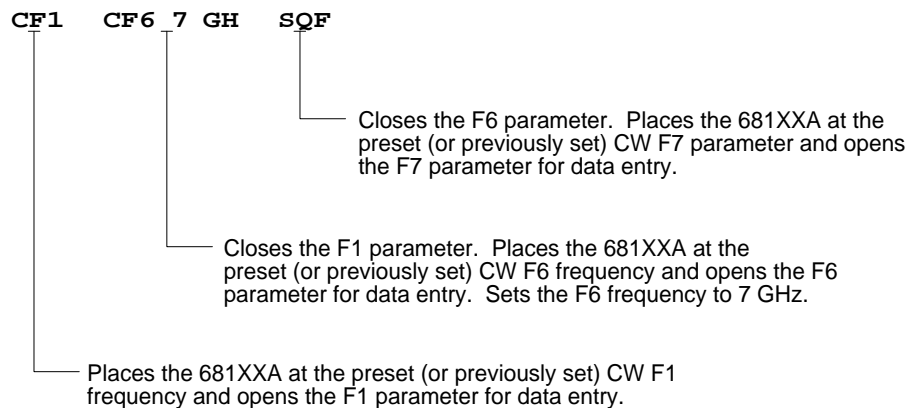

**Figure 3-2.** Example of a CW Frequency Command String

**3-6 ANALOG AND STEP  
SWEEP COMMANDS**

Table 3-6 (page 3-13) lists the analog and step sweep command mnemonic codes. These commands are divided into five subclasses and are described in the following paragraphs.

**Sweep Range** Seven sweep ranges are available. The SF1 and SF3 commands select the sweep ranges of F1-F2 and F3-F4 respectively; the FUL command selects a full band sweep from the sweep generator's low frequency limit to its high frequency limit.

The DF0, DF1, DF5, and DF6 commands each select a symmetrical frequency sweep around F0, F1, F5, and F6 respectively. The width of the sweep is determined by the  $\Delta F$  frequency parameter.

***Programming Examples:***

Programming "F1 2 GH F2 8 GH SF1" sets F1 to 2 GHz, F2 to 8 GHz, and implements a F1-F2 frequency sweep.

Programming "DLF 6 GH F5 7 GH DF5" sets  $\Delta F$  to 6 GHz, F5 to 7 GHz, and implements a F5- $\Delta F$  frequency sweep.

***Programming Note:***

If the commanded sweep range is invalid, a parameter error (paragraph 3-19) will be generated, and the output of the sweep generator will not be altered.

A sweep range is invalid if (1) the sweep start frequency is greater than the stop frequency, or (2) the  $\Delta F$  frequency parameter results in a sweep that is outside the range of the instrument.

***Alternate  
Sweep***

Six alternate sweep commands are available. If the 681XXA is sweeping when the alternate sweep command is received, the sweep generator's output will alternate between the commanded sweep and the sweep then being executed.

***Programming Example:***

Assume that the 681XXA had been previously programmed and was then executing an F1-F2 sweep. Programming "AF3" would then activate the F3-F4 sweep and cause it to alternate with the F1-F2 sweep.

***Programming Note:***

An alternate sweep command will only be recognized when the 681XXA has been programmed to sweep. It will be ignored at all other times.

***Sweep  
Triggering***

Two modes of sweep triggering are available over the bus—Automatic and Single. The AUT command selects automatic sweep triggering; the EXT command selects single sweep triggering.

When automatic sweep triggering is selected, the sweep continually sweeps from its start frequency (or power level) to its stop frequency (or power level) with optimal retrace time.

When single sweep triggering is selected, a single sweep starts when the TRG or TRS command is received. The RSS command resets the sweep to its start frequency (or power level), whenever the command is received while a single sweep is in progress.

**Table 3-6.** *Analog and Step Sweep Commands*

<b>MNEMONIC CODE</b>	<b>FUNCTION</b>	<b>OPENS FOR ENTRY</b>
<i>Sweep Range</i>		
SF1	Selects the F1-F2 sweep mode	None
SF3	Selects the F3-F4 sweep mode	None
FUL	Selects the Full Range sweep mode	None
DF0	Selects the F0- $\Delta$ F sweep mode	None
DF1	Selects the F1- $\Delta$ F sweep mode	None
DF5	Selects the F5- $\Delta$ F sweep mode	None
DF6	Selects the F6- $\Delta$ F sweep mode	None
<i>Alternate Sweep</i>		
AFU	Selects Full Range alternate sweep	None
AF1	Selects F1-F2 alternate sweep	None
AF3	Selects F3-F4 alternate sweep	None
AD1	Selects F1- $\Delta$ F alternate sweep	None
AD5	Selects F5- $\Delta$ F alternate sweep	None
AD6	Selects F6- $\Delta$ F alternate sweep	None
<i>Sweep Triggering</i>		
AUT	Selects Auto Trigger	None
EXT	Selects Single Trigger	None
TRG	Triggers a Single Sweep	None
TRS	Triggers a Single Sweep	None
RSS	Resets a Sweep if in progress	None
<i>Analog/Step Sweep Select</i>		
SWP	Selects Analog Sweep	None
SSP	Selects Step Sweep	None
MAN	Selects Manual (Step) Sweep	None
DU1	Selects Dual Step Sweep mode	None
DU0	Deselects Dual Step Sweep mode	None
TSS	Steps to next point in DU1 mode	None
<i>Special Step Sweep (Steps Not Equally Spaced)</i>		
SP1	Selects non-equally spaced step sweep	None
SP0	Deselects non-equally spaced step sweep	None


**Analog/Step  
Sweep Select**

Three commands are available—SWP selects an analog sweep, SSP selects a step sweep, and MAN selects a manual (step) sweep. The selected sweep mode applies to all sweep ranges. Figure 3-3 shows an example of a sweep command string.

**Programming Notes:**

Commanding either SWP or SSP does not, by itself, provide a swept-frequency output. It only determines whether the swept-frequency output will be an analog or step sweep. If, on the other hand, a frequency sweep is being output by the 681XXA when one of these commands is received, that sweep will assume the commanded sweep mode.

The MAN command only provides for setting up the sweep generator for a manual sweep. It must be accompanied by the RL command to return the instrument to local (front panel) control in order for the operator to perform the manual sweep.

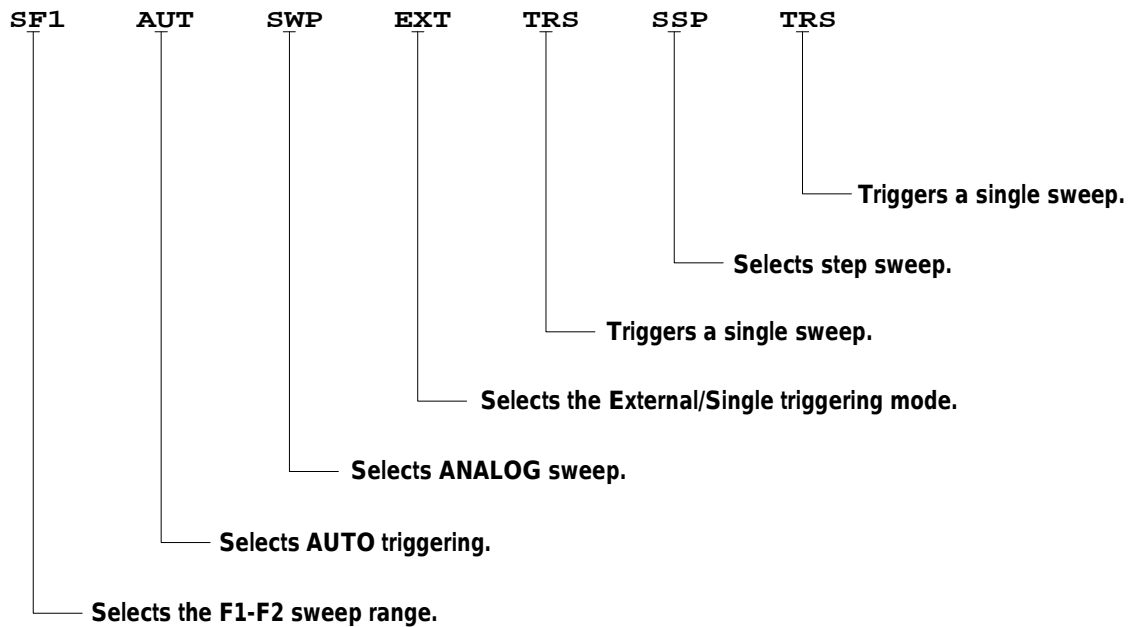

**Figure 3-3.** Example of a Sweep Command String

***Dual Step Sweep Mode***

The dual step sweep mode provides for generating synchronized, step sweep outputs from two 681XXAs at a frequency offset. Figure 3-4 shows an example of dual step sweep programming.

---

```
10 !      "DUAL"
20 CLEAR
30 DISP "ENTER # OF STEPS"
40 INPUT S
50 DISP "ENTER WAIT TIME [mS]"
60 INPUT W
70 WAIT 100
80 DISP "ENTER 'LO' START FREQ [GHz]"
90 INPUT F1
100 DISP "ENTER 'LO' STOP FREQ [GHz]"
110 INPUT F2
120 DISP "ENTER OFFSET [GHz]"
130 INPUT F3
140 !
150 ! Initialize both 681XXA's
160 !
170 OUTPUT 705 ;"CF1F1";F1;"GHF2";F2;
    "GHSNS";S;"SPSSSPEXTCLO"
180 OUTPUT 706 ;"CF1F1";F1+F3;"GHF2";
    F2+F3;"GHSNS";S;"SPSSSPEXTCLO"
190 WAIT 1000
200 !
210 ! Set both to dual mode and enable
    GET to end DWELL
220 !
230 SEND 7 ; CMD "%&" DATA "GTLDU1SF1"
    EOL
240 WAIT 100
250 ! Trigger the sweep and wait for
    retrace to finish
260 SEND 7 ; CMD "%&" DATA "TRS" EOL
270 WAIT 100
280 ! Listen address both 681XXA's
290 SEND 7 ; CMD "%&"
300 FOR C+1 TO S+1
310 WAIT W
320 ! Trigger both to next point
330 TRIGGER 7
340 NEXT C
350 GOTO 260
```

---

**Figure 3-4.** Dual Step Sweep Programming Example



***Special Step Sweep***

This special step sweep provides for a step sweep that has non-equally spaced steps. It can be used in any of the available sweep ranges (F1-F2, F3-F4, Full, F0- $\Delta$ F, F1- $\Delta$ F, F5- $\Delta$ F, and F6- $\Delta$ F). The start frequency in this sweep must be equal to the first frequency programmed with the ZL(X000-999) command (Table 3-15). The intermediate steps can be programmed to be any frequency within the range of the programmed sweep.

***Programming Note:***

The SP1 command can be used with the dual step sweep mode.

Figure 3-5 shows an example of special step sweep programming.

---

For this example, assume a frequency sweep of 3 GHz to 10 GHz, with steps at 3, 6, 8, 9, and 10 GHz.

*Sample Coding in BASIC*

```
10 OUTPUT 705; "ZL000 3GH 6GH 8GH 9GH 10GH ZEL"  
20 OUTPUT 705; "F1 3GH F2 10GH SNS 4SPS"  
30 OUTPUT 705; "SP1 SSP SF1"
```

*Explanation of Code*

Line 10 sets up the step frequencies.

Line 20 sets start and stop frequencies and number of steps (frequency points - 1).

Line 30 set the sweep generator to SP1, Step Sweep, and F1-F2 sweep range.

---

**Figure 3-5.** *Special Step Sweep Programming Example*

## **3-7 FREQUENCY MARKER COMMANDS**

Table 3-7 lists the frequency marker command mnemonic codes. These commands provide for (1) selecting a CW frequency as a potential marker, (2) selecting a potential marker as an active marker, and (3) individually turning markers on and off.


The ME1 command will enable a marker at the current frequency that is open for update; the ME0 command will disable the same marker. If a frequency parameter is not open, no action will be taken. The IM1 and VM1 commands will turn on their respective intensity and video markers. The MK0 command will turn all markers off.

Figure 3-6 shows an example of a frequency marker command string.

**Table 3-7.** Frequency Marker Commands

MNEMONIC CODE	FUNCTION	OPENS FOR ENTRY
ME1	Enables a marker at the active frequency (F0-F9 or M0-M9)	None
ME0	Disables the marker at the active frequency	None
MK0	Turns off markers. Enabled markers remain enabled, but are not active	None
IM1	Turns on the intensity marker mode	None
VM1	Turns on the video marker mode	None

**Programming Note:** Only one marker mode can be active. Consequently, if the intensity marker mode is active and the video marker mode is programmed, the displayed markers will change to video markers. Either mode can be turned off with the MK0 command.

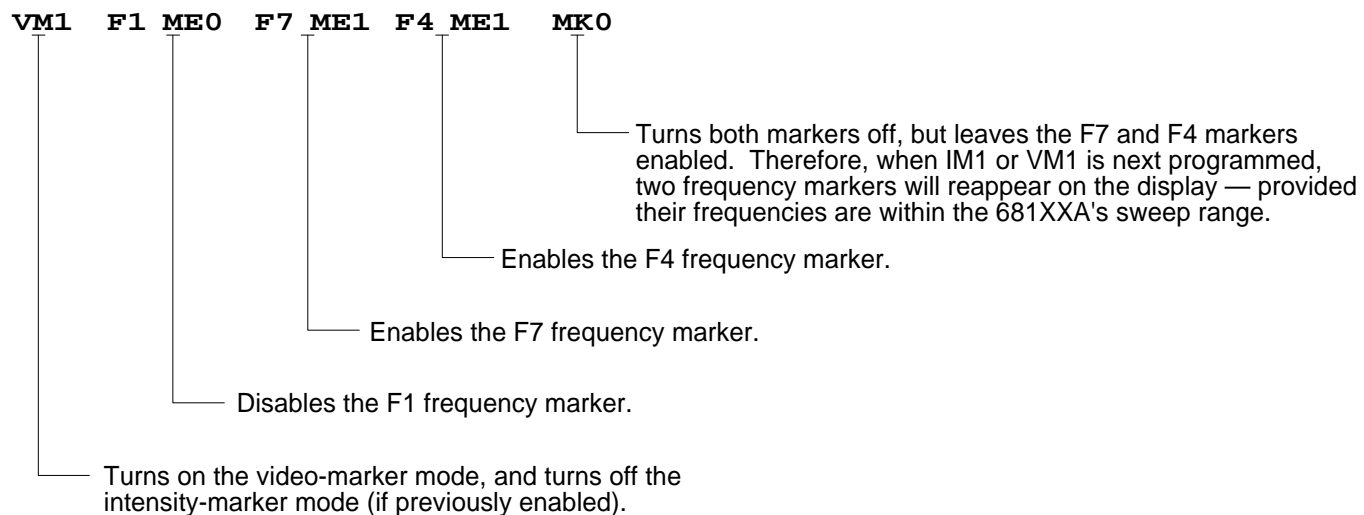

**Figure 3-6.** Example of a Frequency Marker Command String

**3-8** MODULATION  
COMMANDS

Table 3-8 lists the modulation command mnemonic codes. These commands provide for AM, FM, and square wave/pulse modulation of the sweep generator's output signal.

**NOTE**

During remote operation of the 681XXA via the GPIB, all external AM, FM, and square wave/pulse modulating signals *must* be input to the front panel connectors.

**Amplitude  
Modulation**

Two AM modes are available—Linear and Log. The AM1 command turns on the external AM function in Linear mode (100%/V sensitivity). The AM2 command turns on the external AM function in Log mode (10 dB/V sensitivity). The AM0 command turns off the external AM function.

**Frequency  
Modulation**

Two FM modes are available—Narrow and Wide. The FM1 (or FMU) command turns on the external FM function in Narrow mode. Narrow FM mode allows maximum deviations of 50 MHz. The FMW command turns on the external FM function in Wide mode. Wide FM mode allows maximum deviations of 100 MHz. The FM0 command turns off the external FM function. In both Narrow and Wide FM modes, the 681XXA output signal is not phase locked to facilitate greater FM deviations.

**Programming Note:**

When an FMS (FM sensitivity) parameter entry is made, one of three FM sensitivities will be selected depending on the input.

- For a parameter entry of <0 MHz/V, the FM sensitivity will be set to -6 MHz/V.
- For a parameter entry of 0 to <15 MHz/V, the FM sensitivity will be set to +10 MHz/V.
- For a parameter entry of  $\geq 15$  MHz/V, the FM sensitivity will be set to +20 MHz/V.

**Square Wave  
Modulation**

Two square wave modulation modes are available—Internal and External. In internal mode, square wave modulation of the output signal by one of four modulating signals is available using the following commands:

- SW1 turns on modulation at 400 Hz.
- SW2 (or SQP) turns on modulation at 1 kHz.
- SW3 turns on modulation at 7.8125 kHz.
- SW4 turns on modulation at 27.8 kHz.

The XP command turns on the external square wave/pulse modulation mode. Both the SW0 and P0 commands turn off the square wave modulation mode.

**Table 3-8.** *Modulation Commands*

<b>MNEMONIC CODE</b>	<b>FUNCTION</b>
AM0	Turns off the external AM function. (This is the default mode.)
AM1	Turns on the external AM function in Linear mode. (Front panel external AM input at 600Ω impedance.)
AM2	Turns on the external AM function in Log mode. (Front panel external AM input at 600Ω impedance.)
FM0	Turns off the external FM function and re-establishes phase lock. (This is the default mode.)
FM1	Turns on the external FM function in Narrow mode. The sweep generator output is not phase-locked. (Front panel external FM input at 600Ω impedance.)
FMW	Turns on the external FM function in Wide mode. The sweep generator output is not phase-locked. (Front panel external FM input at 600Ω impedance.)
FMU	Same as FM1. Turns on the external FM function in Narrow mode. The sweep generator output is not phase-locked. (Front panel external FM input at 600Ω impedance.)
P0	Turns off the square wave/pulse modulation mode.
SQP	Turns on internal square wave modulation at 1 kHz.
SW0	Same as P0. Turns off the square wave/pulse modulation mode.
SW1	Turns on internal square wave modulation at 400 Hz.
SW2	Same as SQP. Turns on internal square wave modulation at 1 kHz.
SW3	Turns on internal square wave modulation at 7.8125 kHz.
SW4	Turns on internal square wave modulation at 27.8 kHz.
XP	Turns on the external square wave/pulse modulation mode. (Front panel external square wave/pulse input.)

**3-9 OUTPUT POWER  
LEVELING COMMANDS**

Table 3-9 lists the output power leveling command mnemonic codes. These commands provide (1) for turning the power leveling off or (2) for leveling the output power using any of the following:

- The internal leveling detector.
- An external detector connected to the front panel EXTERNAL ALC IN connector.
- An external power meter connected to the front panel EXTERNAL ALC IN connector.


Figure 3-7 shows an example of a output power level command string.

**Table 3-9.** *Power Leveling Commands (1 of 2)*

MNEMONIC CODE	FUNCTION	OPENS FOR ENTRY
L1	Selects the L1 power level value as the RF output power level. Deselects the L2 parameter, if previously programmed.	L1
L2	Selects the L2 power level value as the RF output power level. Deselects the L1 parameter, if previously programmed.	L2
RF1	Turns on the RF output. (This is the default mode.)	None
RF0	Turns off the RF output.	None
LO1	Turns on the Level Offset function. The value of the Level Offset parameter is added to the level measured by the internal leveling loop. The resultant power level value is displayed.	None
LO0	Turns off the Level Offset function.	None
IL1	Selects internal leveling of the output power. (This is the default mode.) Deselects the DL1 or PL1 leveling modes, if previously programmed.	None
DL1	Selects external leveling of the output power, using a signal from an external detector connected to the front panel EXTERNAL ALC IN connector. Deselects the IL1 or PL1 leveling modes, if previously programmed.	None

**Table 3-9.** Power Leveling Commands (2 of 2)

MNEMONIC CODE	FUNCTION	OPENS FOR ENTRY
PL1	Selects external leveling of the output power using a signal from an external power meter connected to the front panel EXTERNAL ALC IN connector. Deselects the IL1 and DL1 leveling modes, if previously programmed.	None
LV0	Turns off leveling of the output power.	None
LSP	Selects the Power Sweep mode. The power level will sweep as determined by the preset (or previously set) dwell-time and number-of-steps parameters.	None
EG1	Provides for entering a value for the external-level gain DAC.	None
EG0	Outputs the value of the external-level gain DAC.	None

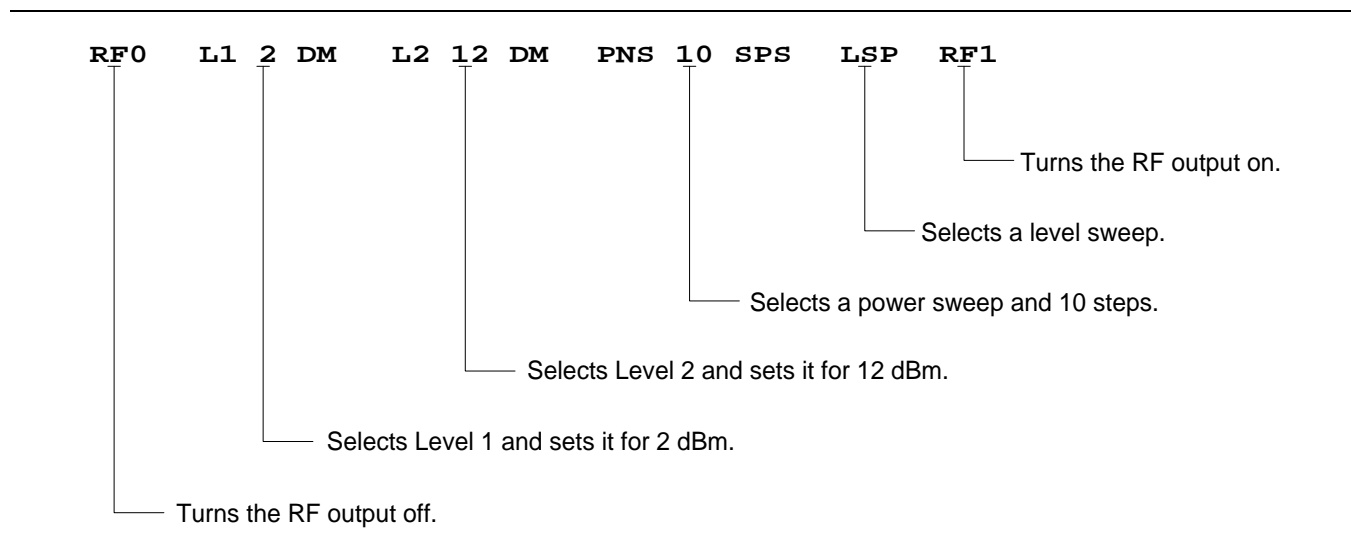

**Figure 3-7.** Example of an Output Power Level Command String

**3-10 OUTPUT COMMANDS**

Table 3-10 lists the output command mnemonic codes. These commands provide for the output of data from the sweep generator to the controller. Figure 3-8 (page 3-24) shows examples of output command programming.

**Table 3-10.** *Output Commands (1 of 2)*

MNEMONIC CODE	FUNCTION
OI	Causes the sweep generator to identify itself by sending the following parameter information over the bus; model number, low-end frequency, high-end frequency, minimum output power level, maximum output power level, software revision number, serial number, model prefix (A or B), and series (1 or 2). This command can be used to send parameter information to the controller automatically, thus relieving the operator from having to input the information manually. The string is 34 characters long.
OFL	Returns the low-end frequency value (in MHz) to the controller.
OFH	Returns the high-end frequency value (in MHz) to the controller.
OF0	Returns the F0 frequency value (in MHz) to the controller.
OF1	Returns the F1 frequency value (in MHz) to the controller.
OF2	Returns the F2 frequency value (in MHz) to the controller.
OF3	Returns the F3 frequency value (in MHz) to the controller.
OF4	Returns the F4 frequency value (in MHz) to the controller.
OF5	Returns the F5 frequency value (in MHz) to the controller.
OF6	Returns the F6 frequency value (in MHz) to the controller.
OF7	Returns the F7 frequency value (in MHz) to the controller.
OF8	Returns the F8 frequency value (in MHz) to the controller.
OF9	Returns the F9 frequency value (in MHz) to the controller.
OM0	Returns the M0 frequency value (in MHz) to the controller.
OM1	Returns the M1 frequency value (in MHz) to the controller.
OM2	Returns the M2 frequency value (in MHz) to the controller.
OM3	Returns the M3 frequency value (in MHz) to the controller.
OM4	Returns the M4 frequency value (in MHz) to the controller.

**Table 3-10.** *Output Commands (2 of 2)*

<b>MNEMONIC CODE</b>	<b>FUNCTION</b>
OM5	Returns the M5 frequency value (in MHz) to the controller.
OM6	Returns the M6 frequency value (in MHz) to the controller.
OM7	Returns the M7 frequency value (in MHz) to the controller.
OM8	Returns the M8 frequency value (in MHz) to the controller.
OM9	Returns the M9 frequency value (in MHz) to the controller.
OL1	Returns the L1 power value (in dBm) to the controller.
OL2	Returns the L2 power value (in dBm) to the controller.
OLO	Returns the Level Offset power value (in dB) to the controller.
ODF	Returns the $\Delta F$ frequency value (in MHz) to the controller.
OPD	Returns the dwell time of the power sweep (in ms) to the controller.
OPS	Returns the number-of-steps of the power sweep to the controller.
OSD	Returns the dwell time of the step sweep (in ms) to the controller.
OSS	Returns the number-of-steps of the step sweep to the controller.
OST	Returns the sweep time value (in ms) to the controller.
OVN	Returns the ROM version number to the controller.
OWT	Returns the GPIB termination status to the controller. (0=CR; 1=CRLF)
OSE	Returns the last GPIB syntax error to the controller.
OEM	Returns the Extended SRQ Mask bytes (3 binary bytes) to the controller.
OES	Returns the GPIB Status bytes (3 binary bytes) to the controller.
OSB	Returns the Primary GPIB Status byte to the controller.
OSM	Returns the Primary SRQ Mask byte to the controller.
OSR	Returns the self-test results (6 binary bytes) to the controller.



---

```
760 OUTPUT 705;"OF1"  
770 ENTER 705;A  
780 PRINT "F1 is set at ";A;" MHz"
```

```
1050 OUTPUT 705;"OSS"  
1060 ENTER 705;A  
1070 PRINT "Step Sweep has ";A;" Steps"
```

---

**Figure 3-8.** *Output Command Programming Examples*

### **3-11** **STORED SETUP COMMANDS**

Table 3-11 lists the stored setup command mnemonic codes. These commands provide for saving instrument setups and recalling them for use.

A current instrument setup can be saved to internal setup memory using the SSN(M<sub>1 to 9</sub>) command, where M = memory locations 1 to 9. Up to nine instrument setups can be stored in this manner. The command RSN(M<sub>1 to 9</sub>) recalls a stored instrument setup from internal setup memory locations 1 to 9.

If more than nine instrument setups are needed, or if it is desirable to store the setups in the controller instead of the sweep generator memory, the 681XXA can be commanded to output and accept stored setups over the bus.

The SAF command outputs the current instrument setup to the controller in a 300-byte (approximately) binary data string. The controller stores the instrument setup. The RCF command readies the sweep generator to receive a new instrument setup recalled from the controller. Figure 3-9 shows an example of SAF and RCF command programming.

The SAM and RCM commands perform the same functions as described for the SAF and RCF commands, except that all of the stored instrument setups are included in the binary data string along with the current instrument setup. For these commands, the binary data string is approximately 3000 bytes long.

**Table 3-11.** *Stored Setup Commands*

MNEMONIC CODE	FUNCTION
SAF	Outputs the current instrument setup to the controller.
SAM	Outputs both the current instrument setup and all stored instrument setups to the controller.
SM	Recalls the next stored instrument setup in sequence.
SSN(M1-9)	Saves the current instrument setup to internal setup memory location M, where M = 1 to 9.
RCF	Readies the 681XXA to receive a new instrument setup recalled from the controller.
RCM	Readies the 681XXA to receive a new instrument setup and new stored setups recalled from the controller.
RSN(M1-9)	Recalls the instrument setup stored in internal setup memory location M, where M = 1 to 9.

**Programming Note:** The SAF and SAM commands output binary data. The data string is terminated with "EOI" on the last byte sent (no CR or LF is sent).

```

10 DIM A$ [300]
20 OUTPUT 705; "SAF"
30 ENTER 705 USING "#%, #K"; A$ (Requires EOI
   to be the terminator of the read.)
40 OUTPUT 705; "RCF"; A$ (A$ must follow the SAF.)

```

**Figure 3-9.** *SAF and RCF Commands Programming Example*

**3-12 SRQ AND STATUS  
BYTE COMMANDS**

Table 3-12 (page 3-28) lists the Service Request (SRQ) and Status Byte command mnemonic codes. These commands enable the sweep generator to request service from the controller when certain, predefined conditions exist.

**Status Bytes** The 681XXA has three GPIB status bytes—the primary and two extended status bytes. Figure 3-10 shows the three status bytes and identifies the status reporting function of each status byte bit.

Each status reporting bit, with the exception of primary status byte bit 6 (SRQ), is set when the condition on which it reports is detected. These changes in status byte bit settings can be read by the controller as follows:

- The contents of the primary status byte is returned to the controller in response to a serial poll or the OSB command.
- The contents of the primary status byte and the two extended status bytes are returned to the controller in response to the OES command. Figure 3-11 (page 3-29) shows an example of OES command programming.

**SRQ  
Generation**

The sweep generator can generate GPIB service requests (SRQs) to report instrument status and syntax errors to the controller. The sweep generator will generate an SRQ if:

1. The SRQ generation function has been enabled using the SQ1 command *and*,
2. One (or more) of the status reporting functions is true *and*,
3. The primary status byte bit associated with the true status reporting function has been enabled.

Bits in the primary status byte can be enabled by either of two methods. The first uses the FB1/FB0, ES1/ES0, UL1/UL0, LE1/LE0, PE1/PE0, SE1/SE0, and SB1/SB0 commands, described in Table 3-12, to individually enable or disable each bit. The second method uses a single 8-bit status byte mask (MB0) to enable any or all of the primary status byte bits.

Figure 3-12 (page 3-30) shows examples of status byte mask programming.

**NOTE**

All status byte bits are latched except for those indicated with the “\*”. Once set, an OES or OSB command must be received before the condition will be reset. The primary status byte bit 6 (SRQ) is cleared by a serial poll only.

**Primary Status Byte**

Extended Status Byte 2	SRQ	Syntax Error	Parameter Range Error	Lock Error	RF Unleveled	End of Sweep	Extended Status Byte 1
Bit 7 (128)	Bit 6 (64)	Bit 5 (32)	Bit 4 (16)	Bit 3 (8)	Bit 2 (4)	Bit 1 (2)	Bit 0 (1)

Primary status byte bit 0 is set whenever one of the status conditions reported by an extended status byte 1 is true and the associated status bit is enabled. This bit is cleared when the controller sends the OES command.

Primary status byte bit 7 is set whenever one of the status conditions reported by an extended status byte 2 is true and the associated status bit is enabled. This bit is cleared when the controller sends the OES command.

Primary status byte bit 6 (SRQ) is not maskable. This bit is set by the SQ1 command and cleared by a serial poll.

**Extended Status Byte 1**

Not Used	Not Used	Not Used	External* Fine Loop in Use	Not Used	Self Test Completed	Modulation Range Error	Self Test Failed
Bit 7 (128)	Bit 6 (64)	Bit 5 (32)	Bit 4 (16)	Bit 3 (8)	Bit 2 (4)	Bit 1 (2)	Bit 0 (1)

Extended status byte 1 bits are enabled by the extended status byte 1 mask command, MB1.

Extended status byte 1 bit 0 (SelfTest Failed) and bit 2 (Self Test Complete) should not be unmasked at the same time.

**Extended Status Byte 2**

Parameter* Changed	Calibrate Function Finished	Analog Sweep Lock Error	RF* Unlocked	Crystal Oven Failure	Calibrate Function Failed	Modulation Measmnt Complete	Power Measmnt Complete
Bit 7 (128)	Bit 6 (64)	Bit 5 (32)	Bit 4 (16)	Bit 3 (8)	Bit 2 (4)	Bit 1 (2)	Bit 0 (1)

Extended status byte 2 bits are enabled by the extended status byte 2 mask command, MB2.

The setting of extended status byte 2 bit 4 (RF Unlocked) is blocked or unblocked by the commands, EL0 and EL1 (See Table 3-12).

Extended status byte 2 bit 7 (Parameter Changed) is only used with the Model 562 interface. The setting of this bit is blocked or unblocked by the commands, I10 and I11 (See Table 3-12).

**Figure 3-10.** Primary and Extended Status Bytes

**Table 3-12.** *SRQ and Status Byte Commands (1 of 2)*

<b>MNEMONIC CODE</b>	<b>FUNCTION</b>
ES1	Enables an SRQ to be generated when Primary Status Byte bit 1 (End of Sweep) is set and SQ1 has been programmed.
ES0	Inhibits an SRQ from being generated when the End of Sweep bit is set. This is the default mode.
FB1	Enables an SRQ to be generated when Primary Status Byte bit 0 (Extended Status Byte 1) is set and SQ1 has been programmed. The Extended Status Byte 1 bit is set whenever one (or more) of the unmasked status reporting functions in Extended Status Byte 1 is true.
FB0	Inhibits an SRQ from being generated when the Extended Status Byte 1 bit is set. This is the default mode.
LE1	Enables an SRQ to be generated when Primary Status Byte bit 3 (Lock Error) is set and SQ1 has been programmed.
LE0	Inhibits an SRQ from being generated when the Lock Error bit is set. This is the default mode.
MB0	Sets an 8-bit data mask that is used to enable specific bits of the Primary Status Byte (Figure 3-xx). This enables any or all of the bits (except for bit 6) in the Primary Status Byte to generate an SRQ using one 8-bit byte. This command can be equivalent to sending ES1, FB1, LE1, PE1, SE1, SB1, and UL1.
MB1	Sets the enable mask byte for Extended Status Byte 1.
MB2	Sets the enable mask byte for Extended Status Byte 2.
PE1	Enables an SRQ to be generated when Primary Status Byte bit 4 (Parameter Range Error) is set and SQ1 has been programmed.
PE0	Inhibits an SRQ from being generated when the Parameter Range Error bit is set. This is the default mode.
SB1	Enables an SRQ to be generated when Primary Status Byte bit 7 (Extended Status Byte 2) is set and SQ1 has been programmed. The Extended Status Byte 2 bit is set whenever one (or more) of the unmasked status reporting functions in Extended Status Byte 2 is true.
SB0	Inhibits an SRQ from being generated when the Extended Status Byte 2 bit is set. This is the default mode.

**Table 3-12.** *SRQ and Status Byte Commands (2 of 2)*

MNEMONIC CODE	FUNCTION
SE1	Enables an SRQ to be generated when Primary Status Byte bit 5 (Syntax Error) is set and SQ1 has been programmed.
SE0	Inhibits an SRQ from being generated when the Syntax Error bit is set. This is the default mode.
SQ1	Enables the SRQ generation function. This command allows a status reporting function, that is true and enabled, to pull the SRQ line LOW (true) and request service from the controller.
SQ0	Disables the SRQ generation function. This is the default mode.
UL1	Enables an SRQ to be generated when Primary Status Byte bit 2 (RF Unleveled) is set and SQ1 has been programmed.
UL0	Inhibits an SRQ from being generated when the RF Unleveled bit is set. This is the default mode.
EL1	Unblocks updating of the Extended Status Byte 2 bit 4 (RF Unlocked).
ELO	Blocks updating of the Extended Status Byte 2 bit 4. This is the default setting because it is normal for the RF to be momentarily unlocked during sweeps and sweep retrace.
II1	Unblocks updating of the Extended Status Byte 2 bit 7 (Parameter Changed). This bit is only used with the Model 562 interface. This bit is cleared when the 562 sends the OCP command (Output Last Parameter Changed).
II0	Disables updating of the Extended Status Byte 2 bit 7. This is the default setting.
CSB	Clears all GPIB status bytes.

```
OUTPUT 705; "OES"  
ENTER 705 USING "#, B"; A, B, C  
MAIN = A  
1 EXT = B  
2 EXT = C
```

**Figure 3-11.** *OES Command Programming Example*


The 681XXA has a software mask that permits manipulation of the three status bytes over the bus. This manipulation is accomplished by sending the command codes MB0, MB1, MB2, or all three at once, followed by an argument that assigns an on/off condition for each bit in the byte. Two examples are shown below:

**EXTENDED STATUS BYTE 1**

SELF TEST FAILED  
MODULATION RANGE ERROR  
SELF TEST COMPLETE  
EXTERNAL FINE LOOP IN USE

**MASK BYTE 1**  
EXAMPLE #1    EXAMPLE #2

1	0
0	1
0	0
0	0
1	1
0	0
0	0
0	0

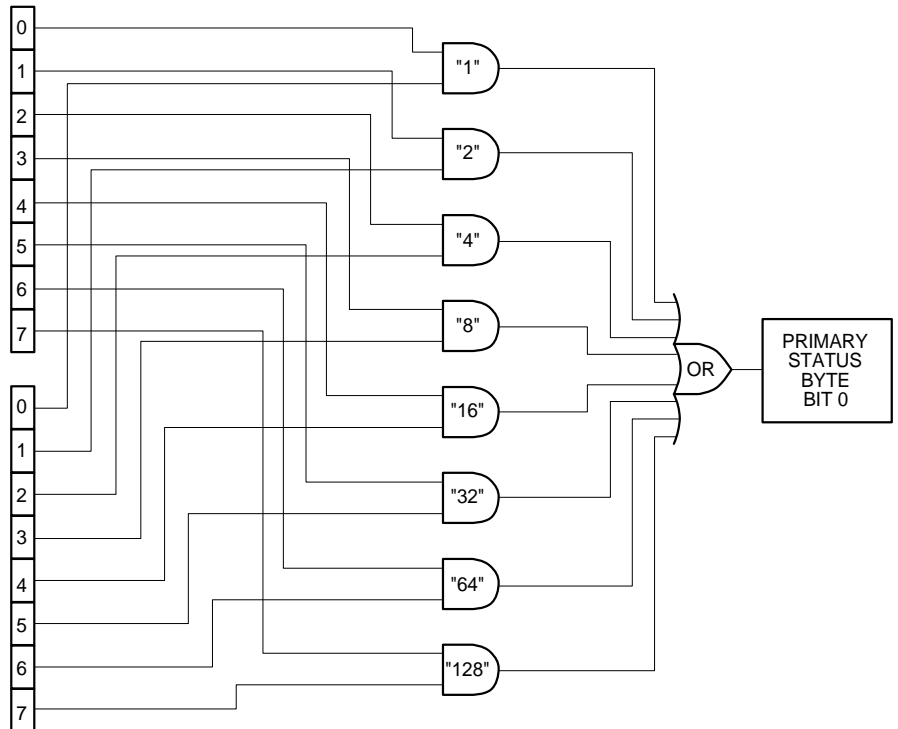

EXAMPLE #1: "MB1" (CHR \$(17))

Sets bits 0 and 4 in Mask Byte 1 to 1 and all other bits to 0, thus enabling bits 0 and 4 in Extended Status Byte 1 to be read from the bit 0 position of the Primary Status Byte.

EXAMPLE #2: "MB1" (CHR \$(18))

Sets bits 1 and 4 in Mask Byte 1 to 1 and all other bits to 0, thus enabling bits 1 and 4 in Extended Status Byte 1 to be read from the bit 0 position of the Primary Status Byte.

**Figure 3-12.** Status Byte Mask Programming Examples

**3-13 CONFIGURATION  
COMMANDS**

Table 3-13 lists the configuration command mnemonic codes. These commands permit selection of the following system configuration items via the bus:

- A +5V or -5V level for the rear panel retrace and bandswitch blanking outputs.
- A TTL-low or TTL-high signal turn on of RF during square wave/pulse modulation.
- Normally-open or normally-closed contacts on the internal penlift relay.
- RF on or RF off during frequency switching in CW and step sweep modes.
- RF on or RF off during sweep retrace.

The system configuration selections made with GPIB commands remain in effect when the instrument is returned to local control.

**Table 3-13.** *Configuration Commands*

MNEMONIC CODE	FUNCTION
BPN	Selects a -5V level for the retrace and bandswitch blanking outputs. (The retrace blanking output signal is available at the rear panel RETRACE BLANK OUT connector and pin 6 of the AUX I/O connector; the bandswitch blanking output signal at pin 20 of the AUX I/O connector.)
BPP	Selects a +5V level for the retrace and bandswitch blanking outputs.
EP0	Selects TTL-low to turn RF on during square wave/pulse modulation.
EP1	Selects TTL-high to turn RF on during square wave/pulse modulation.
PP0	Selects normally-open contacts on the internal penlift relay. (The penlift relay output, available at the rear panel PEN LIFT OUT connector, is used to lift a plotter pen during retrace.)
PP1	Selects normally-closed contacts on the internal penlift relay.
RC0	Selects RF to be off during frequency switching in CW and step sweep modes.
RC1	Selects RF to be on during frequency switching in CW and step sweep modes.
RT0	Selects RF to be off during retrace.
RT1	Selects RF to be on during retrace.



**3-14** **GROUP EXECUTE  
TRIGGER COMMANDS**

Table 3-14 lists the group execute trigger (GET) command mnemonic codes. These commands let a GET bus message (Table 1-3) be used to trigger certain sweep generator functions and thus speed up bus operations.

In the default state, the 681XXA responds to a GET message by triggering a single sweep.

**Table 3-14.** *Group Execute Trigger Commands*

MNEMONIC CODE	FUNCTION
GTC	Configures the 681XXA to execute an SQF command (scan to the next higher preset CW frequency) each time a GET message is received.
GTD	Configures the 681XXA to execute a DN command (steps the open parameter down by the step size) each time a GET message is received.
GTF	Configures the 681XXA to execute a fast-frequency-switching step (Table 3-15) each time a GET message is received.
GTL	Configures the 681XXA to execute a TSS command (steps to the next point in a dual step sweep mode) each time a GET message is received.
GTO	Disables the GET functions.
GTS	Configures the 681XXA to execute a TRS command (trigger a single sweep) each time a GET message is received. This is the default mode.
GTT	Configures the 681XXA to execute a TST command (execute a complete signal generator self test) each time a GET message is received.
GTU	Configures the 681XXA to execute a UP command (steps the open parameter up by the step size) each time a GET message is received.
Y	Sending a "Y" is equivalent to sending a GET.

**3-15 FAST-FREQUENCY-  
SWITCHING  
COMMANDS**

Table 3-15 lists the fast-frequency-switching command mnemonic codes. These commands provide for reducing the time that it takes to switch between two CW frequencies.

In the fast-frequency-switching mode, up to 1000 frequencies can be loaded into a stack. A stack pointer can then be set to point to a specific frequency on the stack and the sweep generator commanded to switch from that frequency through the following stack frequencies to the bottom of the stack. Figure 3-13 provides an example of fast-frequency-switching programming.

**Table 3-15.** *Fast-Frequency-Switching Commands*

MNEMONIC CODE	FUNCTION
ZL(X000-999)	Loads a CW frequency into the stack at location X. The location is a number from 000 to 999.
ZEL	Ends frequency loading.
ZS(X000-999)	Sets the stack pointer to point to location X. The location is a number from 000 to 999.

```

OUTPUT 705; "ZL000" . . . Set pointer for load
OUTPUT 705; "10 GH, 11 GH, 12 GH, 13 GH"
OUTPUT 705; "ZEL GTF"
NEW
OUTPUT 705; "ZS000" . . . Set pointer to start
TRIGGER 705; . . . . Sets 10 GHz
TRIGGER 705; . . . . Sets 11 GHz
TRIGGER 705; . . . . Sets 12 GHz
TRIGGER 705; . . . . Sets 13 GHz
    
```

**Figure 3-13.** *Fast-Frequency-Switching Programming Example*

**3-16 POWER-OFFSET-  
TABLE COMMANDS**

Table 3-16 list the power-offset-table command mnemonic codes. These commands provide for maintaining a consistent power level at a point within a test setup across the measurement frequencies. This “flattening” of the test point power level is accomplished by summing a power offset word (from the power offset table) with the sweep generator’s normal power level DAC word at each frequency point.

The power-offset mode works in conjunction with the fast-frequency-switching mode (paragraph 3-14). The frequency stack must be loaded before loading the power-offset table because the frequency loading sets the upper limit for the number of entries in the power-offset table. The same pointer is used for both the frequency stack and the power-offset table. Once the power-offset table is loaded, the PT1 command turns on the power-offset mode; the PT0 command turns it off.

**Loading the  
Power-Offset  
Table**

To load the power-offset table, use the command, PTL clch dldh....., where “clch” is the number of power-offset words and “dldh” is a power-offset word. Both “clch” and “dldh” are two-byte binary words sent LOW byte first and HIGH byte second. The power-offset word is in hundredths of a dB. Negative power offsets use twos-complement representation.

To change a power-offset word in the table, use the PTC dldh command, where “dldh” is the new power-offset word for the current power level setting.

**Programming Note:**

Care must be taken to send the exact number of power-offset words specified in the wordcount, “clch”. If too few words are sent, the GPIB interface may not respond properly.

Figures 3-14 and 3-14a show an example of power-offset mode programming.

**Table 3-16.** *Power-Offset-Table Commands*

MNEMONIC CODE	FUNCTION
PT0	Disable the Power Offset Table
PT1	Enable the Power Offset Table
PTC	Change a Power Offset Table entry (PTC dldh), where dldh is the new offset word for the current table entry.
PTL	Load a Power Offset Table (PTL clch dldh ...), where clch is the data word count and dldh is the data word.

The following is an example of power-offset mode programming. This program is written for use with an IBM-PC type computer/controller containing an IOtech GPIB interface.

```
#include <stdio.h>
#include <stdlib.h>
#include <string.h>

/* IOtech Driver488/LIB Subroutine Interface definitions... */
#include "\ieee488\iotlib.h"
#include "\ieee488\iot_main.h"

/* Define the device handles */
DevHandleT Synth,ieee;

void main()
{
    char CmdString[10], DataString[40], String[40];
    unsigned char XString[160];

    int  next_step,i,j;

    /*****
    /* Initialize the IOtech interface board and */
    /* obtain the interface's handle.          */
    */

    #define ADDRESS 5

    if((ieee=InitIeee488(btMP488CT, 21, -1, 0x02e1, 7, 5, 1, 10000,0))==-1)
    {
        printf("Cannot initialize IEEE 488 system.\n")
        exit(1);
    }

    if(( Synth=CreateDevice( ADDRESS, -1 ) )==-1)
    {
        printf("Cannot create Synth device.\n");
        exit(1);
    }

    /* Set the device timeout so you don't wait forever if there's a problem */
    TimeOut(Synth, 2000);

    /* Handle the errors in the program */
    Error(Synth,OFF);

    /*****

    /* Address the Synthesizer to listen */
```

NOTE: This program is continued in Figure 3-14a.

---

**Figure 3-14.** Power-Offset Mode Programming Example (1 of 2)

```
strcpy(XString,"_?U%");
SendCmd(Synth,XString,strlen(XString));

Output(Synth,"RST");
Output(Synth,"GTF");
Output(Synth,"ZL000");
Output(Synth,"1 GH 2 GH 3 GH 4 GH 5 GH 6 GH 7 GH 8 GH 9 GH 10 GH");
Output(Synth,"ZEL");

/* Make a data array with the PTL command, the word count */
/* and the binary data in low-byte, high-byte order.      */
DataString[0]='P';
DataString[1]='T';
DataString[2]='L';
DataString[3]=10;      /* Low byte  --  ten words */
DataString[4]=0;      /* High byte --          */
DataString[5]=0;      /* 0 */
DataString[6]=0;
DataString[7]=20;     /* 276 */
DataString[8]=1;
DataString[9]=30;     /* 542 */
DataString[10]=2;
DataString[11]=40;    /* 808 */
DataString[12]=3;
DataString[13]=50;    /* 1074 */
DataString[14]=4;
DataString[15]=60;    /* 1340 */
DataString[16]=5;
DataString[17]=70;    /* 1606 */
DataString[18]=6;
DataString[19]=80;    /* 1872 */
DataString[20]=7;
DataString[21]=90;    /* 2138 */
DataString[22]=8;
DataString[23]=100;   /* 2404 */
DataString[24]=9;

/* Send the data with an EOI on the last byte */
SendEoi(Synth,DataString,25);

Output(Synth,"ZS000");

for(next_step=0;next_step<10;next_step++)
{
    Output(Synth,"Y");
    printf("Press Enter for Next Frequency");
    getchar();
}

} /* End of main() */
```

---

**Figure 3-14a.** Power-Offset Mode Programming Example (2 of 2)

**3-17 SELF TEST  
COMMANDS**

Table 3-17 lists the self test command mnemonic codes. These commands provide for executing a sweep generator self test.

When a TST command is received, the sweep generator performs a self test, then places a "P" (for pass) or a "F" (for fail) on the bus. It also generates six self test results bytes. Figure 3-16 (next page) shows the six self test results bytes and identifies the reporting function of each bit.

When self test is completed, bit 7 of Self Test Results Byte 6 and bit 2 of Extended Status Byte 1 are both set. If a failure(s) occurs during self test, the Self Test Results Byte bit(s) reporting the failure(s) and bit 0 of Extended Status Byte 1 are set.

The OSR command returns the six self test results bytes to the controller. Figure 3-15 provides an example of self test command programming.

**Programming Note:** The "P" or "F" character placed on the bus by the sweep generator self test must be cleared from the output buffer (read by the controller) before another output command, such as OSR, is sent. If it is not cleared, the first character of the next output will be missing. Line 30 (Figure 3-15) shows clearing of the "P" or "F" character.

**Table 3-17. Self Test Commands**

MNEMONIC CODE	FUNCTION
TST	Executes a sweep generator self test. Extended Status Byte 1 bit 0 is set if self test fails; bit 2 is set when self test is complete.

```

10 OUTPUT 705; "CSB"
20 OUTPUT 705; "TST"
30 ENTER 705; D$
40 DISP D$
50 OUTPUT 705; "OSR"
60 ENTER 705 USING "#,B"; A, B, C, D, E, F
70 DISP A; B; C; D; E; F
80 END

```

**Figure 3-15. Self Test Command Programming Example**

**Self Test Results Byte 1**

Sweep Time Circuitry Failed  <i>Bit 7</i> (128)	A18 Power Supply is Not Locked  <i>Bit 6</i> (64)	Power Supply Voltage(s) are Out of Reg  <i>Bit 5</i> (32)	A12 -10 Volt Reference Check Failed  <i>Bit 4</i> (16)	A12 +10 Volt Reference Check Failed  <i>Bit 3</i> (8)	DVM -10 Volt Reference Check Failed  <i>Bit 2</i> (4)	DVM +10 Volt Reference Check Failed  <i>Bit 1</i> (2)	DVM Ground Offset Check Failed  <i>Bit 0</i> (1)
--	--	--	---	--	--	--	---

**Self Test Results Byte 2**

Not Locked Indicator Check Failed  <i>Bit 7</i> (128)	Down Converter is Not Locked  <i>Bit 6</i> (64)	YIG Loop Circuitry is Not Locked  <i>Bit 5</i> (32)	Coarse Loop Circuitry is Not Locked  <i>Bit 4</i> (16)	Fine Loop Circuitry is Not Locked  <i>Bit 3</i> (8)	High Stability Crystal is Not Locked  <i>Bit 2</i> (4)	Ext 10 MHz is Not Locked  <i>Bit 1</i> (2)	Oven is Not Ready  <i>Bit 0</i> (1)
--	--	--	---	--	---	---	--

**Self Test Results Byte 3**

Detector Log Amp Circuitry Failed  <i>Bit 7</i> (128)	Level Reference Circuitry Failed  <i>Bit 6</i> (64)	Not Leveled Detector Circuitry Failed  <i>Bit 5</i> (32)	Delta-F Ramp Circuitry Failed  <i>Bit 4</i> (16)	Center Frequency Circuitry Failed  <i>Bit 3</i> (8)	Marker Switch Point Circuitry Failed  <i>Bit 2</i> (4)	Linearizer Circuitry Failed  <i>Bit 1</i> (2)	FM Loop Gain Circuitry Failed  <i>Bit 0</i> (1)
--	--	---	---	--	---	--	--

**Self Test Results Byte 4**

3.3 - 5.5 GHz Switch Filter Section or Level Detector Circuitry Failed  <i>Bit 7</i> (128)	2-3.3 GHz Switch Filter Section or Level Detector Circuitry Failed  <i>Bit 6</i> (64)	Switch Filter or Level Detector Circuitry Failed  <i>Bit 5</i> (32)	0.01 - 2 GHz Range Unleveled  <i>Bit 4</i> (16)	A10 Q5 or Associated Circuitry Failed  <i>Bit 3</i> (8)	2 - 8.4 GHz Range Unleveled and Not Locked  <i>Bit 2</i> (4)	8.4 - 20 GHz Range Unleveled and Not Locked  <i>Bit 1</i> (2)	2 - 20 GHz Range Unleveled and Not Locked  <i>Bit 0</i> (1)
---	--	--	--	--	---	--	--

**Self Test Results Byte 5**

33 - 40 GHz Section of Frequency Extension Unit Failed  <i>Bit 7</i> (128)	Frequency Extension Unit or Driver Circuitry Failed  <i>Bit 6</i> (64)	20 - 26.5 GHz Modulator or Driver Circuitry On A14 Failed  <i>Bit 5</i> (32)	26.5 - 40 GHz Modulator or Driver Circuitry on A14 Failed  <i>Bit 4</i> (16)	Modulator or Driver Circuitry on A9 Failed  <i>Bit 3</i> (8)	13.25 - 20 GHz Switch Filter Section or Level Detector Circuitry Failed  <i>Bit 2</i> (4)	8.4 - 13.25 GHz Switch Filter Section or Level Detector Circuitry Failed  <i>Bit 1</i> (2)	5.5 - 8.4 GHz Switch Filter Section or Level Detector Circuitry Failed  <i>Bit 0</i> (1)
---	---	---	---	---	--	---	---

**Self Test Results Byte 6**

Self Test is Complete  <i>Bit 7</i> (128)	Not Used  <i>Bit 6</i> (64)	Not Used  <i>Bit 5</i> (32)	RF Was Off When Self Test Started  <i>Bit 4</i> (16)	Slope DAC or Associated Circuitry Failed  <i>Bit 3</i> (8)	Sample and Hold Circuitry Failed  <i>Bit 2</i> (4)	20 - 26.5 GHz Section of Frequency Extension Unit Failed  <i>Bit 1</i> (2)	26.5 - 33 GHz Section of Frequency Extension Unit Failed  <i>Bit 0</i> (1)
--	--------------------------------------	--------------------------------------	---	---	---	---	---

**Figure 3-16.** Self Test Results Bytes

**3-18 MISCELLANEOUS  
COMMANDS**

Table 3-18 is a list of miscellaneous command mnemonic codes that do not fit into any of the other classifications. These commands provide the following operations:

- CW Ramp
- Secure Mode
- Returning the 681XXA to local control
- Instrument Reset
- Serial Number Entry

**Table 3-18.** *Miscellaneous Commands*

MNEMONIC CODE	FUNCTION
CS0	Turns off the CW ramp.
CS1	Turns on the CW ramp. This produces a repetitive 0V to 10V ramp output to the rear panel HORIZ OUT connector and pin 1 of the AUX I/O connector.
DS0	Turns on the secure mode. This blanks the front panel display of all frequency, power level, and modulation parameters.
DS1	Turns off the secure mode and restores the front panel display of all frequency, power level, and modulation parameters.
RL	Returns the 681XXA to local (front panel) control.
RST	Resets the 681XXA to its default settings.
<b>NOTE</b>	
Sending this command clears the current instrument setup. If this setup is needed for future testing, save it as a stored setup (paragraph 3-11) before sending RST.	
SNR	Permits entry of the instrument serial number (SNRnnnnnnX). The serial number, represented by nnnnnn, must be six characters in length.



**3-19 PROGRAM ERRORS**

Two types of errors can occur in bus programming—invalid-parameter and syntax. These two error types are described in the following paragraphs.

***Invalid-  
Parameter***

Invalid-parameter errors are those that cause the sweep generator to beep. These errors include:

- Programming a frequency sweep where the sweep start frequency is greater than the stop frequency.
- Attempting to enter a frequency, time, or power level parameter that exceeds the limits of the sweep generator.
- Failing to properly end a parameter entry with a suitable terminator such as MH, DB, MS, etc.

***Syntax***

Syntax errors are those that occur in the formulation of a program statement, such as writing "EXTTFS" instead of "EXTTRS".

To prevent misinterpretation of command statements, the sweep generator ignores all portions of the command statement following the syntax error.

All commands are ignored until the sweep generator receives the Unlisten command (ASCII 63; "?" character) over the bus or until the sweep generator is addressed to talk.

**3-20 RESET PROGRAMMING AND DEFAULT CONDITIONS**

Table 3-19 describes the five methods that can be used to reset the sweep generator. They provide a means for quickly returning the sweep generator to its default (preprogrammed) operational state.

The default settings for the numeric frequency, sweep time, and power level parameters are the same as those listed in Table 3-1 on page 3-14 of the Series 681XXA Synthesized Sweep Generator Operation Manual (P/N 10370-10250).

Figure 3-17 (next page) provides an example of a recommended sequence for programming a reset command. Using this command sequence ensures that all parameters and commands assume their pre-programmed state each time reset is desired.

**Table 3-19.** *Resetting the 681XXA GPIB Interface Circuits*

<b>Methods of Resetting GPIB Interface Circuits</b>	<b>Functions Affected</b>	<b>Default Conditions</b>
1. Pressing the front panel menu RETURN TO LOCAL soft-key.	Bus Messages	Local
2. Pressing the front panel System menu RESET soft-key.	Service Request Modes	ES0, FB0, PE0, SB0, SE0, SQ0, UL0, SB0 GTS Local and Local Lockout
3. Sending the RST command over the bus.	Same as 2 above	Same as 2 above except that the local bus message is not reset.
4. Executing the interface message Device Clear.	Same as 2 above.	Same as 2 above except that the local bus message is not reset.
5. Turning power on and off.	Same as 2 above.	Places the GPIB into the power-on state. Instrument state does not change.

---

*Sample Coding In Basic*

```
10 CLEAR 705  
20 OUTPUT 705; "FUL IL1 L1 10DM"
```

*Explanation of Code*

Line 10 sends the Device Clear bus message. This message clears the sweep generator GPIB interface.

Line 20 sends new front panel settings: Full Sweep, Internal Leveling, and Output Power Level of 10 dBm.

---

**Figure 3-17.** *Reset Programming Example*

**3-21** **PROGRAMMING  
EXAMPLES**

Figures 3-18 thru 3-20, on the following pages, provide three examples of GPIB programming of the sweep generator using compatible WILTRON Model 67XX Synthesizer GPIB commands.

The following subroutine uses the output identify (OI) command to identify the sweep generator's model number, serial number, minimum and maximum frequencies, minimum and maximum power level, and software revision level. This subroutine is used in the example programs in Figures 3-19 and 3-20 to read the limits of the sweep generator.

```
10 ! "GET OI"  
20 ! Gets the output id string  
30 ! from a 68XXXX Sweep Generator  
100 OUTPUT 705; "OI"  
110 DIM A$[36]  
120 ENTER 705; A$  
130 M$=A$[1,2] ! Model  
140 M1$=A$[3,4] ! Model Number  
150 F1$=A$[5,9] ! Freq Low  
160 F2$=A$[10,14] ! Freq High  
170 L2$=A$[15,20] ! Min Power  
180 L1$=A$[21,24] ! Max Power  
190 S$=A$[25,28] ! Software Ver  
200 S1$=A$[29,34] ! Serial Number  
210 P$=A$[35,35] ! Model Prefix  
220 S2$=A$[36] ! Series  
230 PRINT "Model Number :";M$;S2$;M1$;P$  
240 PRINT "Serial Number :";S1$  
250 PRINT "Low Freq :";F1$  
260 PRINT "High Freq :";F2$  
270 PRINT "Max Power :";L1$  
280 PRINT "Min Power :";L2$  
290 PRINT "Software Ver :";S$  
300 END
```

#### **Program Explanation**

*Line 100:* Sends the "OI" command.

*Line 110:* Dimensions the variable.

*Line 120:* Gets the "OI" string.

*Line 130:* Sets M\$ to the model (68).

*Line 140:* Sets M1\$ to the model number.

*Line 150:* Sets F1\$ to the sweep generator low-end frequency.

*Line 160:* Sets F2\$ to the sweep generator high-end frequency.

*Line 170:* Sets L2\$ to the minimum power point.

*Line 180:* Sets L1\$ to the maximum power point.

*Line 190:* Sets S\$ to the software version number.

*Line 200:* Sets S1\$ to the serial number.

*Line 210:* Sets P\$ to the model prefix number (1 or 2).

*Line 220:* Sets S2\$ to the model series (A or B).

*Lines 230-290:* Prints the data obtained.

---

**Figure 3-18.** Using the Output Identify (OI) Command

The following program (1) receives entries from the keyboard to set initial frequency and step-size parameters, and (2) activates the soft keys on the controller so that they can step the frequency up or down.

#### Program Explanation

*Line 30:* Sets the address of the sweep generator.

*Line 40:* Calls the device identification subroutine described in Line 1010.

*Line 50:* Turns off the key definitions.

*Lines 60-110:* Accept the starting frequency entry and checks its validity.

*Lines 120-170:* Accept the step size entry and checks its validity.

*Line 180:* Sets the sweep generator to the starting frequency and step size.

*Lines 190-240:* Set up keys and key labels.

*Line 250:* Waits for a key to be pressed.

*Line 300:* Reports that the STEP UP key was pressed; sends the UP command.

*Line 310:* Waits for the next key.

*Line 320:* Reports that the STEP DOWN key was pressed; send the DN command.

*Line 330:* Waits for the next key.

*Line 340:* Ends the main program.

*Lines 1010-1120:* Identify the sweep generator address, model, frequency range, and power range.

```

20 ! PARAMETER ENTRY, SYZ, UP, AND DN COMMANDS
30 Address=705
40 CALL Iddev(Address,Model,Fmin,Fmax,Pmin,Pmax)
50 OFF KEY
60 DISP "ENTER FREQUENCY IN GHZ";
70 INPUT Freq
80 IF Freq>Fmax OR Freq<Fmin THEN
90   DISP "FREQUENCY OUT OF RANGE - ";
100  GOTO 60
110 END IF
120 DISP "ENTER STEP SIZE IN GHZ";
130 INPUT Stepsize
140 IF Stepsize>Fmax-Fmin OR Stepsize<.000001 THEN
150   DISP "ILLEGAL STEP SIZE - ";
160   GOTO 120
170 END IF
180 OUTPUT Address;"CF1";Freq;"GH SYZ";Stepsize;"GH"
190 ON KEY 0 LABEL "STEP" GOTO 300
200 ON KEY 5 LABEL " UP " GOTO 300
210 ON KEY 1 LABEL "STEP" GOTO 320
220 ON KEY 6 LABEL "DOWN" GOTO 320
230 ON KEY 2 LABEL "NEW " GOTO 50
240 ON KEY 7 LABEL "FREQ" GOTO 50
250 GOTO 250
300 OUTPUT Address;"UP"
310 GOTO 250
320 OUTPUT Address;"DN"
330 GOTO 250
340 END
1010 SUB Iddev(Address,Model,Fmin,Fmax,Pmin,Pmax)
1020 DIM Ident$(36)
1030 OUTPUT Address;"OI"
1040 ENTER Address;Ident$
1050 Model=VAL(Ident$[1,2])
1060 Model Number=VAL(Ident$[3,4])
1070 Fmin=VAL(Ident$[5,9])
1080 Fmax=VAL(Ident$[10,14])
1090 Pmin=VAL(Ident$[15,20])
1100 Pmax=VAL(Ident$[21,24])
1110 Model Prefix=Ident$[35,35]
1120 Series=VAL(Ident$[36])
1130 SUBEND

```

**Figure 3-19.** Controlling CW Frequency/Parameter Entries

The following program accepts user inputs for (1) power sweep starting and ending levels, (2) number of steps in the sweep, and (3) sweep dwell times. After accepting such inputs, the program then commands the sweep generator to obtain a display of the power sweep.

NOTE: The sweep generator should be connected to a scalar network analyzer.

**Program Explanation**

*Line 30:* Set the address of the sweep generator.  
*Line 40:* Call the device identification subroutine described in line 1010.  
*Lines 60-110:* Accept the starting power level entry and checks its validity.  
*Lines 120-170:* Accept the ending power level entry and checks its validity.  
*Lines 180-230:* Accept the power sweep number-of-steps entry and checks its validity.  
*Lines 240-290:* Accept the power sweep dwell time entry and checks its validity.  
*Lines 300-310:* Sets the sweep generator to perform the above defined power sweep.  
*Line 340:* Ends the main program.  
*Lines 1010-1120:* Identify the sweep generator address, model, frequency range, and power range.

```

30 Address=705
40 CALL Iddev(Address,Model,Fmin,Fmax,Pmin,Pmax)
60 DISP "ENTER POWER SWEEP STARTING LEVEL (dBm)";
70 INPUT Powerstart
80 IF Powerstart>Pmax OR Powerstart<Pmin THEN
90   DISP "POWER OUT OF RANGE - ";
100  GOTO 60
110 ENDIF
120 DISP "ENTER POWER SWEEP ENDING LEVEL (dBm)";
130 INPUT Powerstop
140 IF Powerstop>Pmax OR Powerstop<Pmin THEN
150   DISP "POWER OUT OF RANGE - ";
160   GOTO 120
170 END IF
180 DISP "ENTER NUMBER OF STEPS";
190 INPUT Noofsteps
200 IF Noofsteps<1 OR Noofsteps>1000 THEN
210   DISP "NUMBER OF STEPS OUT OF RANGE - ";
220   GOTO 180
230 END IF
240 DISP "ENTER DWELL TIME AT EACH STEP (mS)";
250 INPUT Dwell
260 IF Dwell<100 OR Dwell>10000 THEN
270   DISP "DWELL TIME OUT OF RANGE - ";
280   GOTO 240
290 END IF
300 OUTPUT Address;"L1";Powerstart;"DM L2";Powerstop;
    "DM PNS";Noofsteps;"SPS"
310 OUTPUT Address;"PDT";Dwell;"MS LSP"
340 END
1010 SUB Iddev(Address,Model,Fmin,Fmax,Pmin,Pmax)
1020 DIM Ident$[36]
1030 OUTPUT Address;"OI"
1040 ENTER Address;Ident$
1050 Model=VAL(Ident$[1,2])
1060 Model Number=VAL(Ident$[3,4])
1070 Fmin=VAL(Ident$[5,9])
1080 Fmax=VAL(Ident$[10,14])
1090 Pmin=VAL(Ident$[15,20])
1100 Pmax=VAL(Ident$[21,24])
1110 Model Prefix=Ident$[35,35]
1120 Series=VAL(Ident$[36])
1130 SUBEND

```

**Figure 3-20.** Controlling Power Level and Power Sweep

***Appendix A***  
***SCPI***  
***Conformance Information***

*– SCPI Conformance Information will be supplied at a later date. –*

# Appendix B

## Index of Compatible 67XX GPIB Commands

### **B-1** INTRODUCTION

This appendix provides an alphabetical index of the WILTRON Model 67XX GPIB Product Specific Commands accepted and implemented by the 681XXA. The index lists the command mnemonic code, a brief description of the command function, and the page number in Chapter 3 where a complete description of the command can be found.

Compatible 67XX GPIB Commands (1 of 8)

Command Code	Function	Page Number
ACW	Activates currently scanned frequency as CW	3-10
AD1	Selects F1- $\Delta$ F alternate sweep	3-12
AD5	Selects F5- $\Delta$ F alternate sweep	3-12
AD6	Selects F6- $\Delta$ F alternate sweep	3-12
AF1	Selects F1-F2 alternate sweep	3-12
AF3	Selects F3-F4 alternate sweep	3-12
AFU	Selects Full Range alternate sweep	3-12
AM0	Turns off the external AM function	3-18
AM1	Turns on the external AM function in Linear mode	3-18
AM2	Turn on the external AM function in Log mode	3-18
AUT	Selects Auto sweep trigger	3-12
BPN	Selects -5V for retrace and bandswitch blanking outputs	3-31
BPP	Selects +5V for retrace and bandswitch blanking outputs	3-31
CF0	Set CW mode at F0, Opens F0 parameter	3-10
CF1	Set CW mode at F1, Opens F1 parameter	3-10
CF2	Set CW mode at F2, Opens F2 parameter	3-10
CF3	Set CW mode at F3, Opens F3 parameter	3-10
CF4	Set CW mode at F4, Opens F4 parameter	3-10
CF5	Set CW mode at F5, Opens F5 parameter	3-10
CF6	Set CW mode at F6, Opens F6 parameter	3-10
CF7	Set CW mode at F7, Opens F7 parameter	3-10
CF8	Set CW mode at F8, Opens F8 parameter	3-10
CF9	Set CW mode at F9, Opens F9 parameter	3-10
CLO	Closes the open parameter	3-6



# INDEX OF COMPATIBLE 67XX GPIB COMMANDS

## Compatible 67XX GPIB Commands (2 of 8)

Command Code	Function	Page Number
CLR	Clears data entry	3-8
CM0	Set CW mode at M0, Opens M0 parameter	3-10
CM1	Set CW mode at M1, Opens M1 parameter	3-10
CM2	Set CW mode at M2, Opens M2 parameter	3-10
CM3	Set CW mode at M3, Opens M3 parameter	3-10
CM4	Set CW mode at M4, Opens M4 parameter	3-10
CM5	Set CW mode at M5, Opens M5 parameter	3-10
CM6	Set CW mode at M6, Opens M6 parameter	3-10
CM7	Set CW mode at M7, Opens M7 parameter	3-10
CM8	Set CW mode at M8, Opens M8 parameter	3-10
CM9	Set CW mode at M9, Opens M9 parameter	3-10
CSO	Turns off the CW ramp	3-39
CS1	Turns on the CW ramp	3-39
CSB	Clears all GPIB status bytes	3-29
DB	dB data terminator	3-8
DF0	Selects the F0- $\Delta$ F sweep mode	3-11
DF1	Selects the F1- $\Delta$ F sweep mode	3-11
DF5	Selects the F5- $\Delta$ F sweep mode	3-11
DF6	Selects the F6- $\Delta$ F sweep mode	3-11
DFF	Opens the $\Delta$ F parameter (Same as DLF)	3-7
DFM	Opens the $\Delta$ F parameter (Same as DLF)	3-7
DL1	Selects external detector leveling of the output power	3-20
DLF	Opens the $\Delta$ F parameter	3-7
DM	dBm data terminator	3-8
DN	Decrements the open parameter by the step size	3-8
DS0	Turns on the secure mode (Blanks the front panel display of Frequency, Power Level, and Modulation parameters)	3-39
DS1	Turns off the secure mode and restores front panel display of all parameters	3-39
DU0	Deselects Dual Step sweep mode	3-13
DU1	Selects Dual Step sweep mode on	3-13
EG1	Enter value for external level gain DAC directly	3-21
EGO	Output value of external level gain DAC	3-21
EL0	Inhibits updating of the ESB2 bit 4 (RF Unlocked)	3-29
EL1	Enables updating of the ESB2 bit 4 (RF Unlocked)	3-29
EP0	External pulse input; TTL high is RF off	3-31
EP1	External pulse input; TTL high is RF on	3-31
ES0	Inhibits End-of-Sweep SRQ generation	3-28

# **INDEX OF COMPATIBLE 67XX GPIB COMMANDS**

## Compatible 67XX GPIB Commands (3 of 8)

<b>Command Code</b>	<b>Function</b>	<b>Page Number</b>
ES1	Enables End-of-Sweep SRQ generation	3-28
EXT	Selects single sweep trigger	3-12
F0	Opens the F0 parameter	3-7
F1	Opens the F1 parameter	3-7
F2	Opens the F2 parameter	3-7
F3	Opens the F3 parameter	3-7
F4	Opens the F4 parameter	3-7
F5	Opens the F5 parameter	3-7
F6	Opens the F6 parameter	3-7
F7	Opens the F7 parameter	3-7
F8	Opens the F8 parameter	3-7
F9	Opens the F9 parameter	3-7
FB0	Inhibits Extended Status Byte 1 SRQ generation	3-28
FB1	Enables Extended Status Byte 1 SRQ generation	3-28
FM0	Turns off the external FM function	3-18
FM1	Turns on the external FM function in Narrow mode	3-18
FMS	Opens the FM sensitivity parameter	3-18
FMU	Turns on the external FM function (Same as FM1)	3-18
FMW	Turns on the external FM function in Wide mode	3-18
FUL	Selects the Full Range sweep mode	3-11
GH	GHz data terminator	3-8
GTC	Scans to the next higher preset CW frequency on a GET (Executes a "SQF" command)	3-32
GTD	Steps the open parameter down by the step size on a GET (Executes a "DN" command)	3-32
GTF	Executes a Fast-frequency-switching step on a GET (See "ZL, ZEL" commands)	3-32
GTL	Steps to the next point in a dual step sweep mode on a GET (Executes a "TSS" command)	3-32
GTO	Disables the GET functions	3-32
GTS	Triggers a single sweep on a GET (Executes a "TRS" command)	3-32
GTT	Executes a complete sweep generator self test on a GET (Executes a "TST" command)	3-32
GTU	Steps the open parameter up by the setp size on a GET (Executes an "UP" command)	3-32
GV	GHz per volt (GHz/V) data terminator	3-8
HZ	Hz data terminator	3-8
II0	Enables updating of the ESB2 bit 7 (Parameter Changed)	3-29
II1	Inhibits updating of the ESB2 bit 7 (Parameter Changed)	3-29

---

**INDEX OF COMPATIBLE  
67XX GPIB COMMANDS**

---

## Compatible 67XX GPIB Commands (4 of 8)

<b>Command Code</b>	<b>Function</b>	<b>Page Number</b>
IL1	Selects internal leveling of the output power	3-20
IM1	Turns on the Intensity marker mode	3-16
KH	kHz data terminator	3-8
KV	kHz per volt (kHz/V) data terminator	3-8
L1	Selects the L1 power level value as the RF output power	3-20
L2	Selects the L2 power level value as the RF output power	3-20
LE0	Inhibits Lock Error SRQ generation	3-28
LE1	Enables Lock Error SRQ generation	3-28
LOS	Opens the level offset parameter	3-7
LO0	Turns off the Level Offset function	3-20
LO1	Turns on the Level Offset function	3-20
LSP	Selects the Power Sweep mode	3-21
LV0	Turns off leveling of the output power	3-21
M0	Opens the M0 parameter	3-7
M1	Opens the M1 parameter	3-7
M2	Opens the M2 parameter	3-7
M3	Opens the M3 parameter	3-7
M4	Opens the M4 parameter	3-7
M5	Opens the M5 parameter	3-7
M6	Opens the M6 parameter	3-7
M7	Opens the M7 parameter	3-7
M8	Opens the M8 parameter	3-7
M9	Opens the M9 parameter	3-7
MAN	Selects manual (step) sweep	3-14
MB0	Sets the enable mask byte for the Primary Status Byte	3-28
MB1	Sets the enable mask byte for Extended Status Byte 1	3-28
MB2	Sets the enable mask byte for Extended Status Byte 2	3-28
ME0	Disables the marker at the active frequency	3-16
ME1	Enables a marker at the active frequency	3-16
MH	MHz data terminator	3-8
MK0	Turns off markers	3-16
MS	Milliseconds (ms) data terminator	3-8
MV	MHz per volt (MHz/V) data terminator	3-8
ODF	Outputs the $\Delta F$ frequency value in MHz	3-23
OEM	Outputs the Extended SRQ Mask bytes (3 binary bytes)	3-23
OES	Outputs all three GPIB status bytes	3-23
OF0	Outputs the F0 frequency value in MHz	3-22

---

**INDEX OF COMPATIBLE  
67XX GPIB COMMANDS**

---

## Compatible 67XX GPIB Commands (5 of 8)

<b>Command Code</b>	<b>Function</b>	<b>Page Number</b>
OF1	Outputs the F1 frequency value in MHz	3-22
OF2	Outputs the F2 frequency value in MHz	3-22
OF3	Outputs the F3 frequency value in MHz	3-22
OF4	Outputs the F4 frequency value in MHz	3-22
OF5	Outputs the F5 frequency value in MHz	3-22
OF6	Outputs the F6 frequency value in MHz	3-22
OF7	Outputs the F7 frequency value in MHz	3-22
OF8	Outputs the F8 frequency value in MHz	3-22
OF9	Outputs the F9 frequency value in MHz	3-22
OFH	Outputs the high-end frequency value in MHz	3-22
OFL	Outputs the low-end frequency value in MHz	3-22
OI	Outputs the instrument identification string	3-22
OLO	Outputs the Level Offset power level in dB	3-23
OL1	Outputs the L1 power level value in dBm	3-23
OL2	Outputs the L2 power level value in dBm	3-23
OM0	Outputs the M0 frequency value in MHz	3-22
OM1	Outputs the M1 frequency value in MHz	3-22
OM2	Outputs the M2 frequency value in MHz	3-22
OM3	Outputs the M3 frequency value in MHz	3-22
OM4	Outputs the M4 frequency value in MHz	3-23
OM5	Outputs the M5 frequency value in MHz	3-23
OM6	Outputs the M6 frequency value in MHz	3-23
OM7	Outputs the M7 frequency value in MHz	3-23
OM8	Outputs the M8 frequency value in MHz	3-23
OM9	Outputs the M9 frequency value in MHz	3-23
OPD	Outputs the power sweep dwell time in ms	3-23
OPS	Outputs the power sweep number of steps	3-23
OSB	Outputs the Primary Status Byte (1 binary byte)	3-23
OSD	Outputs the step sweep dwell time in ms	3-23
OSE	Outputs the last GPIB syntax error	3-23
OSM	Outputs the primary SRQ Mask byte (1 binary byte)	3-24
OSR	Outputs the self-test results (6 binary bytes)	3-24
OSS	Outputs the step sweep number of steps	3-23
OST	Outputs the sweep time value in ms	3-23
OVN	Outputs the ROM version number string	3-23
OWT	Outputs the GPIB termination status; 0 = CR, 1 = CRLF	3-23
P0	Turns off the square wave/pulse modulation mode	3-19

# INDEX OF COMPATIBLE 67XX GPIB COMMANDS

## Compatible 67XX GPIB Commands (6 of 8)

Command Code	Function	Page Number
PCV	Percent per volt (%V) data terminator	3-8
PDT	Opens the power sweep dwell time parameter	3-7
PE0	Inhibits Parameter Range Error SRQ generation	3-28
PE1	Enables Parameter Range Error SRQ generation	3-28
PL1	Selects external power meter leveling of the output power	3-21
PNS	Opens the power sweep number of steps parameter	3-7
PP0	Selects normally-open contacts on the pen lift relay	3-31
PP1	Selects normally-closed contacts on the pen lift relay	3-31
PT0	Disables the Power Offset Table	3-34
PT1	Enables the Power Offset Table	3-34
PTC	Changes a Power Offset Table entry	3-34
PTL	Loads a Power Offset Table	3-34
RC0	Selects RF off during frequency switching in CW or step sweep modes	3-31
RC1	Selects RF on during frequency switching in CW or step sweep modes	3-31
RCF	Readies the 681XXA to receive a new instrument setup from the controller	3-24
RCM	Readies the 681XXA to receive a new instrument setup and new stored setups from the controller	3-24
RF0	Turns off the RF output	3-20
RF1	Turns on the RF output	3-20
RL	Returns the instrument to local control	3-39
RSN(M <sub>1-9</sub> )	Recalls an instrument setup stored in internal setup memory location M, where M = 1 to 9.	3-24
RSS	Reset a sweep if in progress	3-13
RST	Resets the instrument to its default settings	3-39
RT0	Selects RF to be off during retrace	3-31
RT1	Selects RF to be on during retrace	3-31
SAF	Outputs the current instrument setup to the controller	3-24
SAM	Outputs the current instrument setup and all stored setups to the controller	3-24
SB0	Inhibits Extended Status Byte 2 SRQ generation	3-28
SB1	Enables Extended Status Byte 2 SRQ generation	3-28
SDT	Opens the step sweep dwell time parameter	3-7
SE0	Inhibits Syntax Error SRQ generation	3-29
SE1	Enables Syntax Error SRQ generation	3-29
SEC	Seconds data terminator	3-8
SF1	Selects the F1-F2 sweep mode	3-11

# **INDEX OF COMPATIBLE 67XX GPIB COMMANDS**

## Compatible 67XX GPIB Commands (7 of 8)

<b>Command Code</b>	<b>Function</b>	<b>Page Number</b>
SF3	Selects the F3-F4 sweep mode	3-11
SM	Recalls the next stored instrument setup in sequence	3-25
SNR	Enter the instrument serial number (SNRnnnnnX)	3-39
SNS	Opens the step sweep number of steps parameter	3-7
SPS	Steps data terminator	3-8
SP0	Deselects non-equally spaced step sweep	3-16
SP1	Selects non-equally spaced step sweep	3-16
SQ0	Disables the SRQ generation function	3-29
SQ1	Enables the SRQ generation function	3-29
SQD	Scan down to next lower preset CW frequency	3-10
SQF	Scan to next higher preset CW frequency	3-10
SQP	Turns on internal square wave modulation at 1 kHz	3-18
SQU	Scan up to next higher preset CW frequency	3-10
SSN(M <sub>1-9</sub> )	Saves the current instrument setup in internal setup memory location M, where M = 1 to 9	3-24
SSP	Selects step sweep	3-14
SW0	Turns off the square wave/pulse modulation mode (Same as P0)	3-19
SW1	Turns on internal square wave modulation at 400 Hz	3-18
SW2	Turns on internal square wave modulation at 1 kHz (Same as SQP)	3-18
SW3	Turns on internal square wave modulation at 7.8125 kHz	3-18
SW4	Turns on internal square wave modulation at 27.8 kHz	3-18
SWP	Selects analog sweep	3-14
SWT	Opens the analog sweep time parameter	3-7
SYZ	Opens the increment/decrement size parameter	3-9
TRG	Triggers a single sweep	3-13
TRS	Triggers a single sweep	3-13
TSS	Advances sweep to next step in dual step sweep mode	3-13
TST	Starts an instrument self-test	3-37
UL0	Inhibits RF Unleveled SRQ generation	3-29
UL1	Enables RF Unleveled SRQ generation	3-29
UP	Increment the open parameter by step size	3-8
US	Microseconds (μs) data terminator	3-8
VM1	Turns on the Video marker mode	3-16
XP	Turns on the external square wave/pulse mode	3-19
ZL(X <sub>000-999</sub> )	Loads a CW frequency into the stack at location X (fast-frequency-switching mode)	3-33

---

**INDEX OF COMPATIBLE  
67XX GPIB COMMANDS**

---

**Compatible 67XX GPIB Commands (8 of 8)**

<b>Command Code</b>	<b>Function</b>	<b>Page Number</b>
ZEL	Ends frequency loading (fast-frequency-switching mode)	3-33
ZS(X <sub>000-999</sub> )	Sets the stack pointer to point to location X (fast-frequency-switching mode)	3-33
Y	Equivalent to a Group Excute Trigger (GET)	3-32