

Remote Desktop Connection


MS2690A/MS2691A/MS2692A
Signal Analyzer

Technical Note - Remote Desktop Connection -

Anritsu Corporation

MS2690A / 91A / 92A

Signal Analyzer

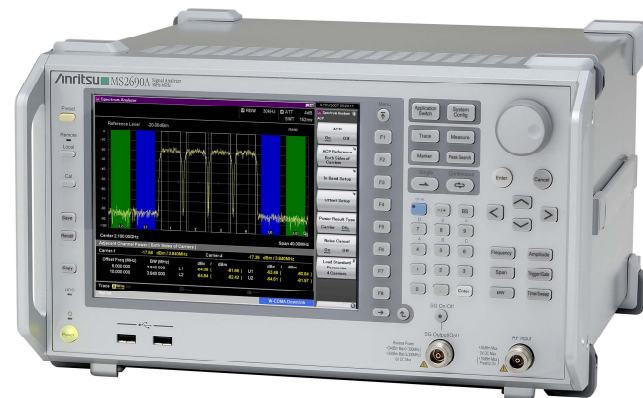

March 2009
(1.00)


Discover What's Possible™
MS269xA-E-E-1

Slide 1

Anritsu


Displaying Anritsu Instrument Screen on PC

- **Remote Desktop in Windows XP Professional allows one projector (connected to sales PC) to display both the PowerPoint presentation and the Anritsu Instrument screen easily.**

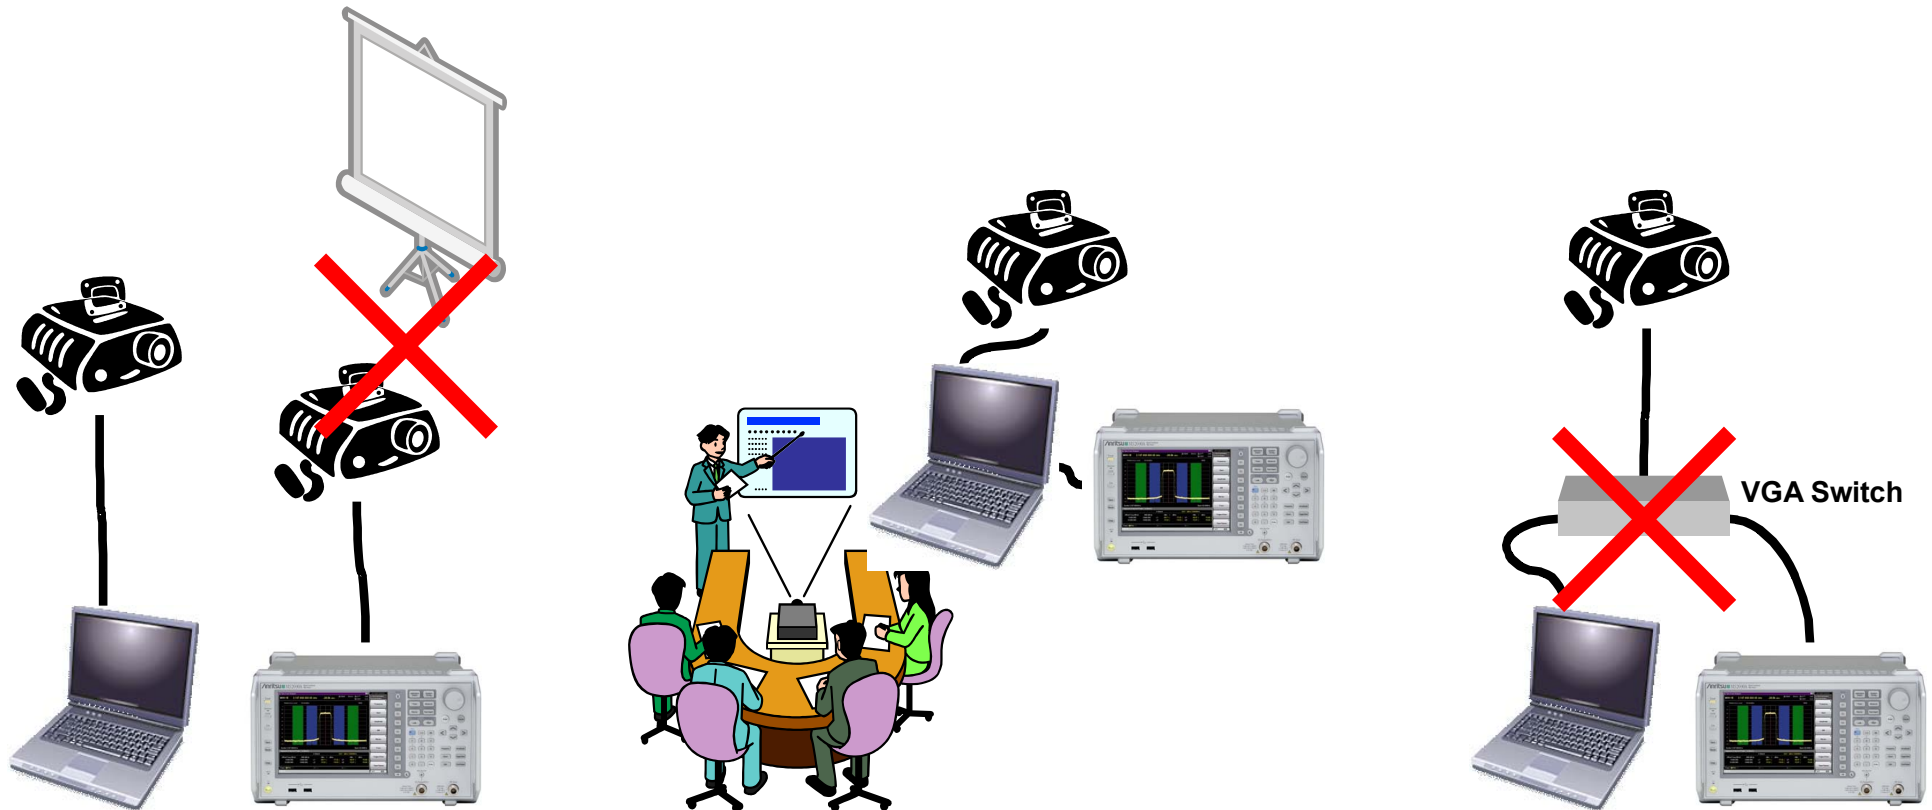


What is Remote Desktop

- By using Windows Remote Desktop while working on another computer, you can access a Windows session currently running on your PC. For example, you can connect from the Windows PC to the MS269xA to access all applications, file, and network resources as if you are in the front of the MS269xA.

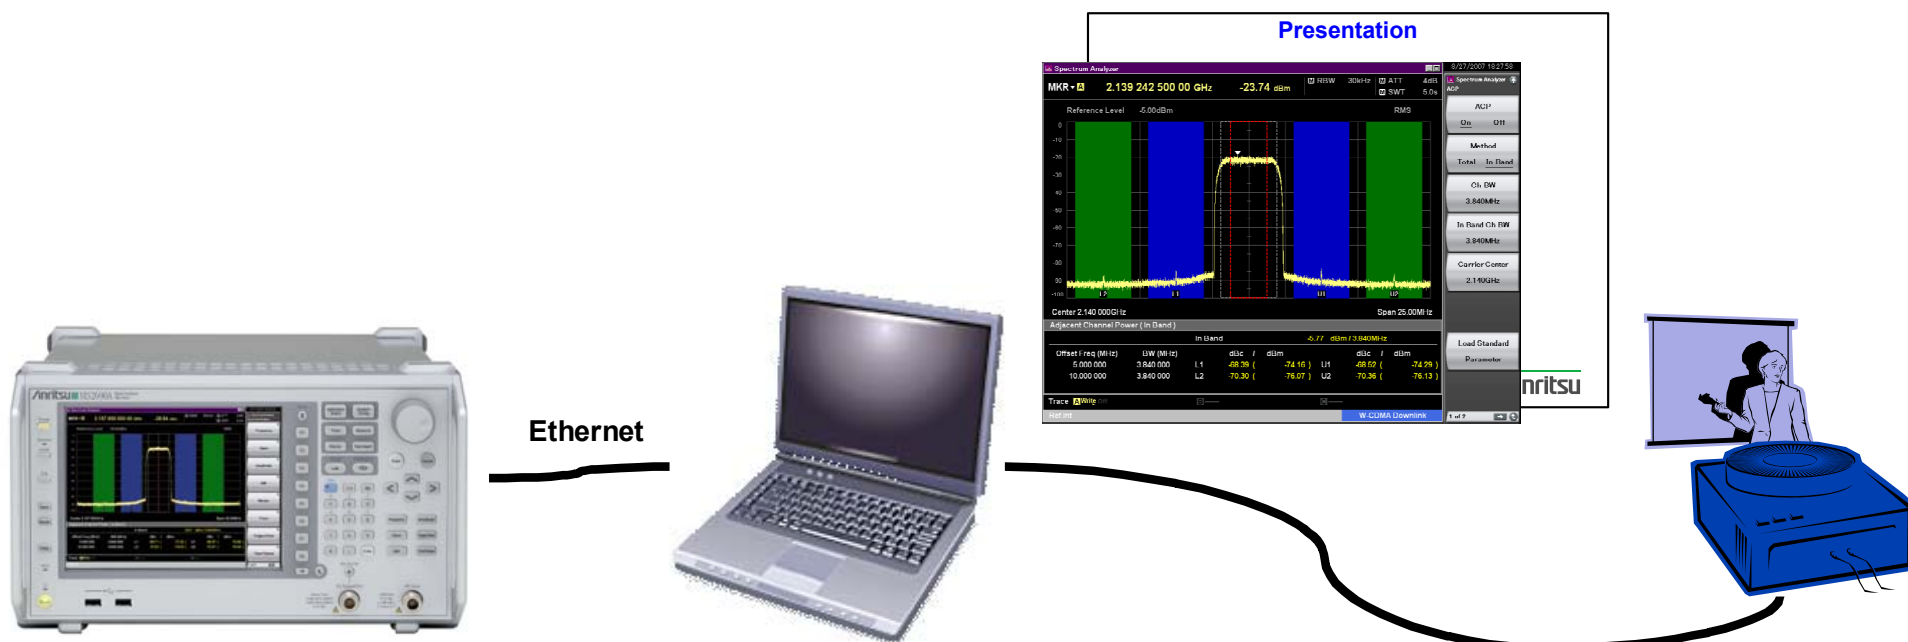


More on Remote Desktop

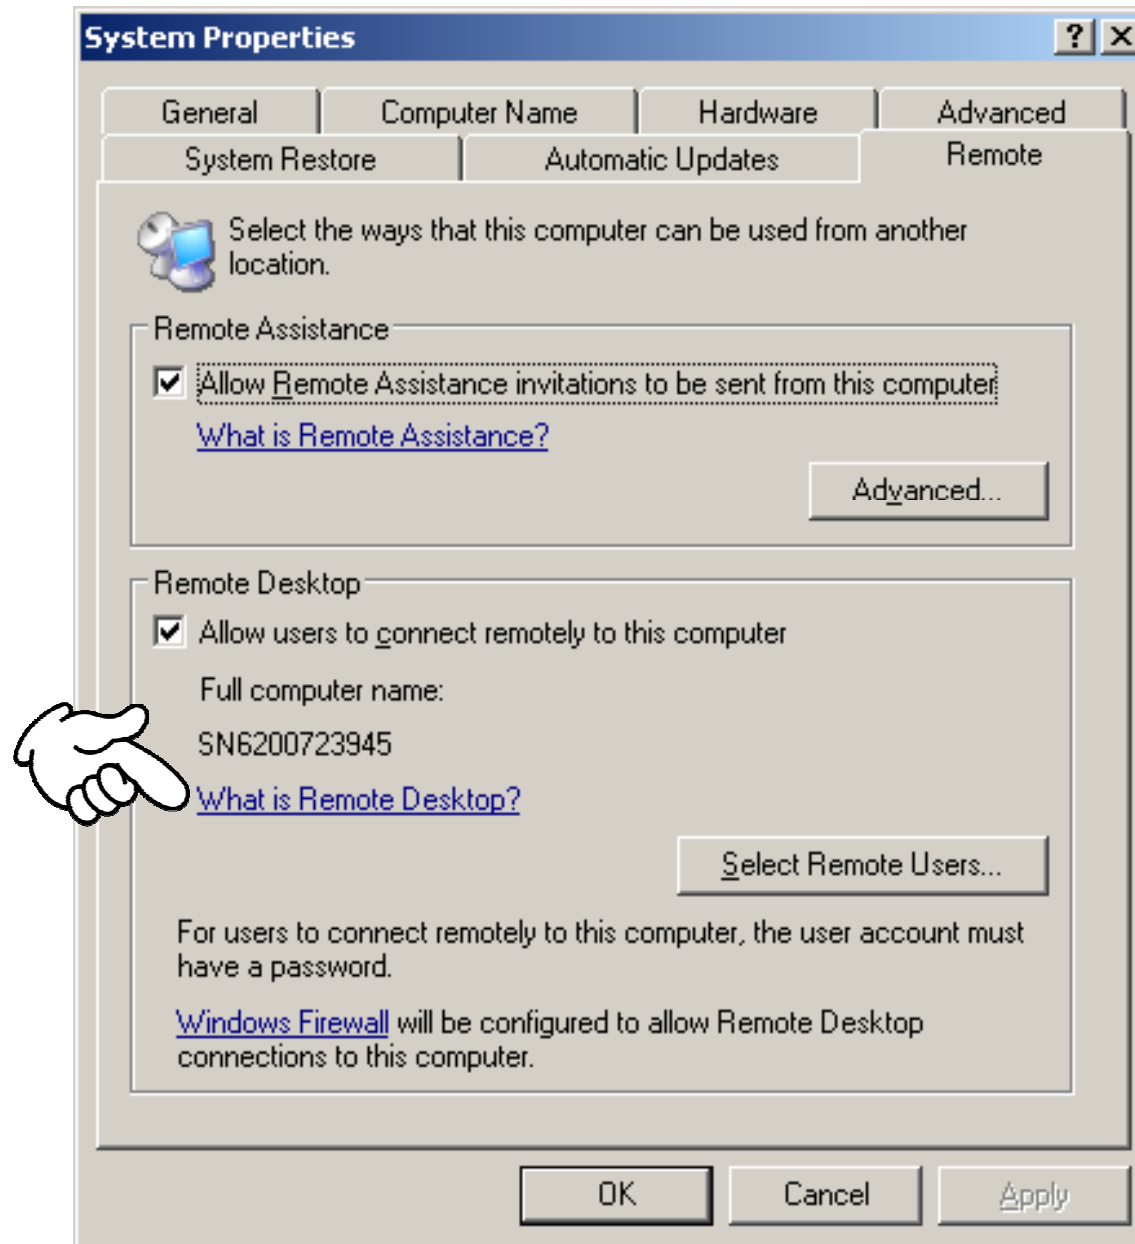

Setting MS269xA to Use Remote Desktop

- Open [System] in [Control Panel].
- Put a checkmark in the checkbox labeled [Allow users to connect remotely to this computer] in the [Remote] tab.

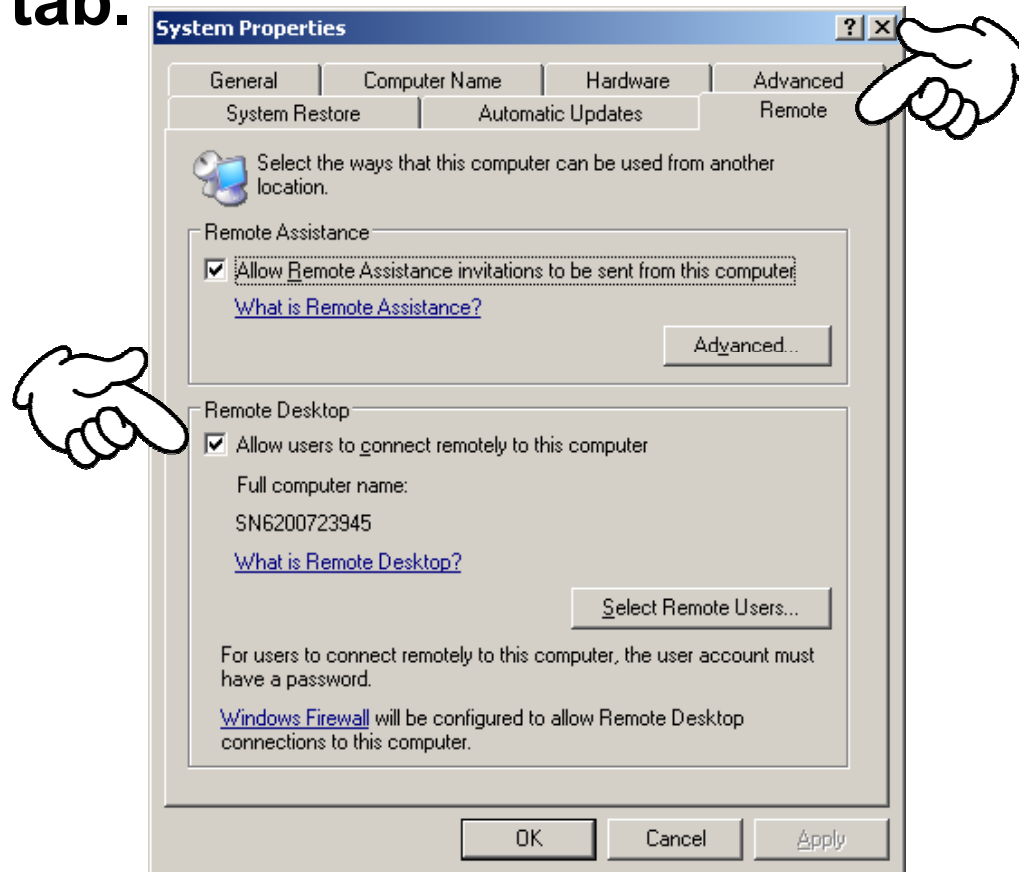

Setting MS269xA to Use Remote Desktop

- Open [User Account] in [Control Panel].
- Click [Create a password] for the user [ANRITSU], and input a password, such as *anritsu*.

The image displays four sequential screenshots of the Windows User Accounts control panel, illustrating the process of creating a password for the ANRITSU user account. Hand-drawn arrows indicate the user's navigation path.

- Screenshot 1:** The 'User Accounts' window shows the 'Learn About' section on the left and a 'Pick a task...' section in the center. A hand points to the 'Create a new account' link.
- Screenshot 2:** The 'Create a password for your account' window is shown. A hand points to the 'Create Password' button at the bottom right.
- Screenshot 3:** The 'What do you want to change about your account?' window is shown. A hand points to the 'Create a password' link in the 'Related Tasks' section.
- Screenshot 4:** The 'Do you want to make your files and folders private?' dialog box is shown. A hand points to the 'Yes, Make Private' button.

Setting PC to Make New Connection

- **Open [Remote Desktop Communication] in [Connections] in [Accessories] in [Programs].**
- **Input the computer name or IP address of the MS269xA in the [Computer] field.**
- **Click [Connect].**
- **Input the User name and Password at the [Log On to Windows] dialog and click [OK].**


Setting PC to Make New Connection

The image shows two overlapping windows. The top window is the 'Remote Desktop Connection' dialog box in Japanese. It has a title bar 'リモート デスクトップ 接続' and a main title 'リモート デスクトップ 接続 Remote Desktop Connection'. A hand icon points to the 'Computer' label. Below it, the 'コンピュータ(C):' field contains '172.16.76.136'. A pink arrow points from this field to the 'Parameter Settings' window. The '接続(N)' button is highlighted with a hand icon and labeled 'Connect' in red. Other buttons include 'キャンセル', 'ヘルプ(H)', and 'オプション(O) >>'. The bottom window is the 'MS269xA' configuration interface. It shows 'Parameter Settings' with 'Interface Settings' selected. The 'Ethernet Settings' section shows 'IP Address' as '172. 16. 76. 136', 'Subnet Mask' as '255. 255. 255. 0', and 'Host Name' as 'SN6200723945'. A sidebar on the right contains 'Interface Settings', 'Copy Settings', 'System Settings', and 'System Settings'.

The image shows a 'Log On to Windows' dialog box for Windows XP Professional. The title bar reads '172.16.76.136 - リモート デスクトップ'. The dialog box contains the Microsoft logo and 'Windows xp Professional' text. Below the logo, it says 'Copyright © 1985-2001 Microsoft Corporation'. The 'User name:' field contains 'ANRITSU' and the 'Password:' field contains a series of dots. A hand icon points to the 'User name:' field. At the bottom, there are buttons for 'OK', 'Cancel', 'Shut Down...', and 'Options <<'. The dialog box is overlaid on a dark background showing a portion of the MS269xA interface.


Reconnecting Last Connection

- At [Remote Desktop Connection], click the down-arrow at the right side of the [Computer] field and choose the name or IP address of the computer to connect.
- Click [Connect].
- Input the User name and password at the [Log On to Windows] dialog and click [OK].

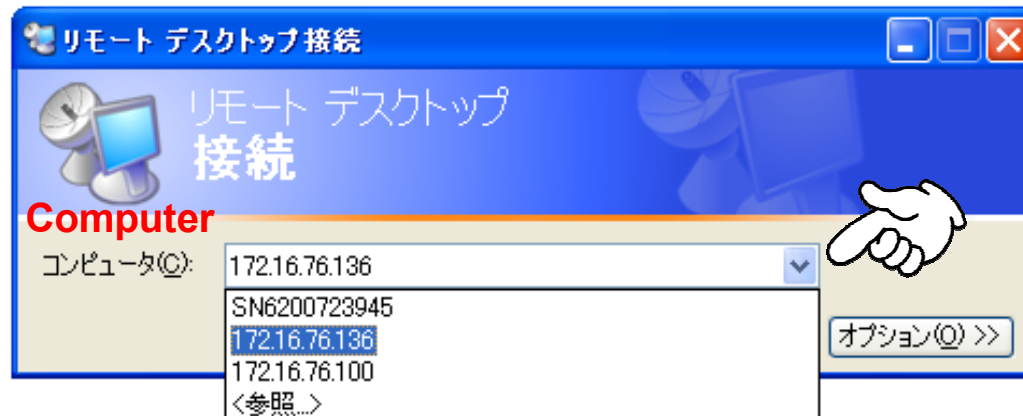



Saving Connection Settings to File

- Click [Option].
- Set the connection settings for this connection, such as screen size, automatic logon information, and performance option.
- Click [Save as] in [General].
- Input the name of the connection file and click [Save].

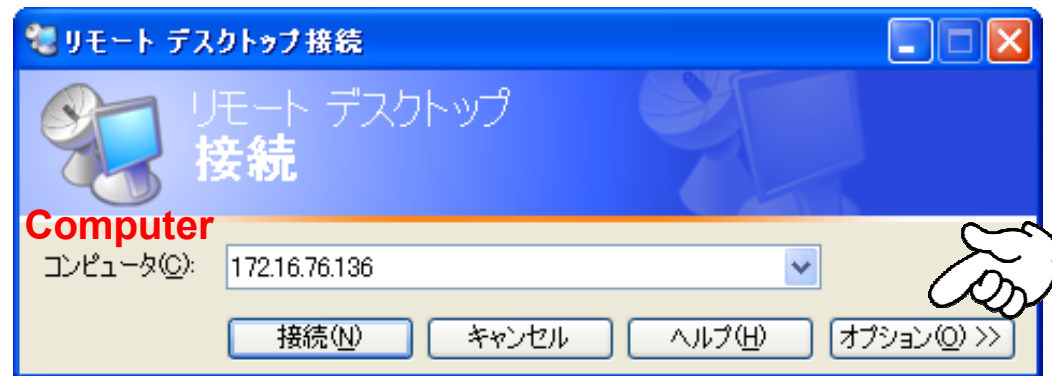

Option


Saving Connection Settings to File

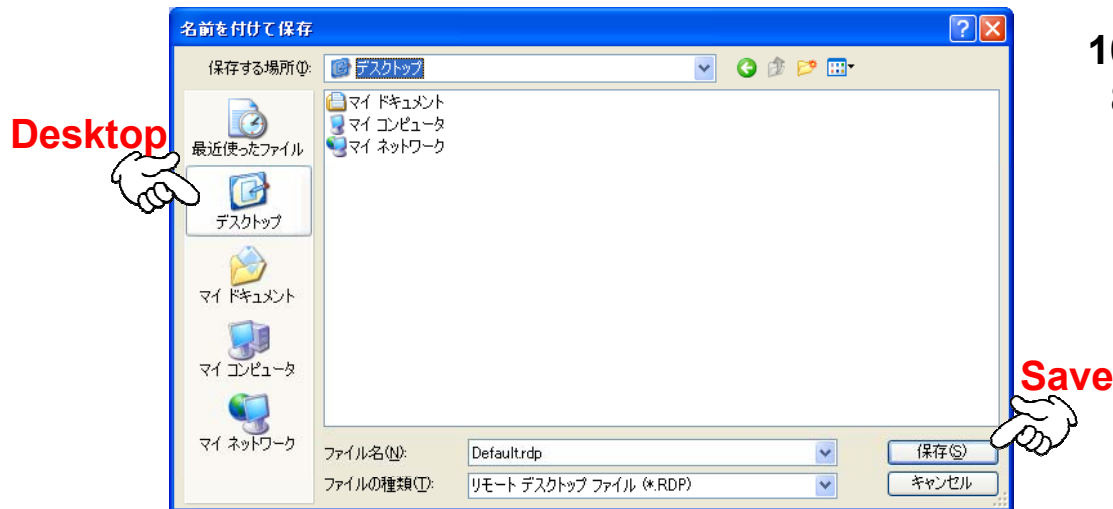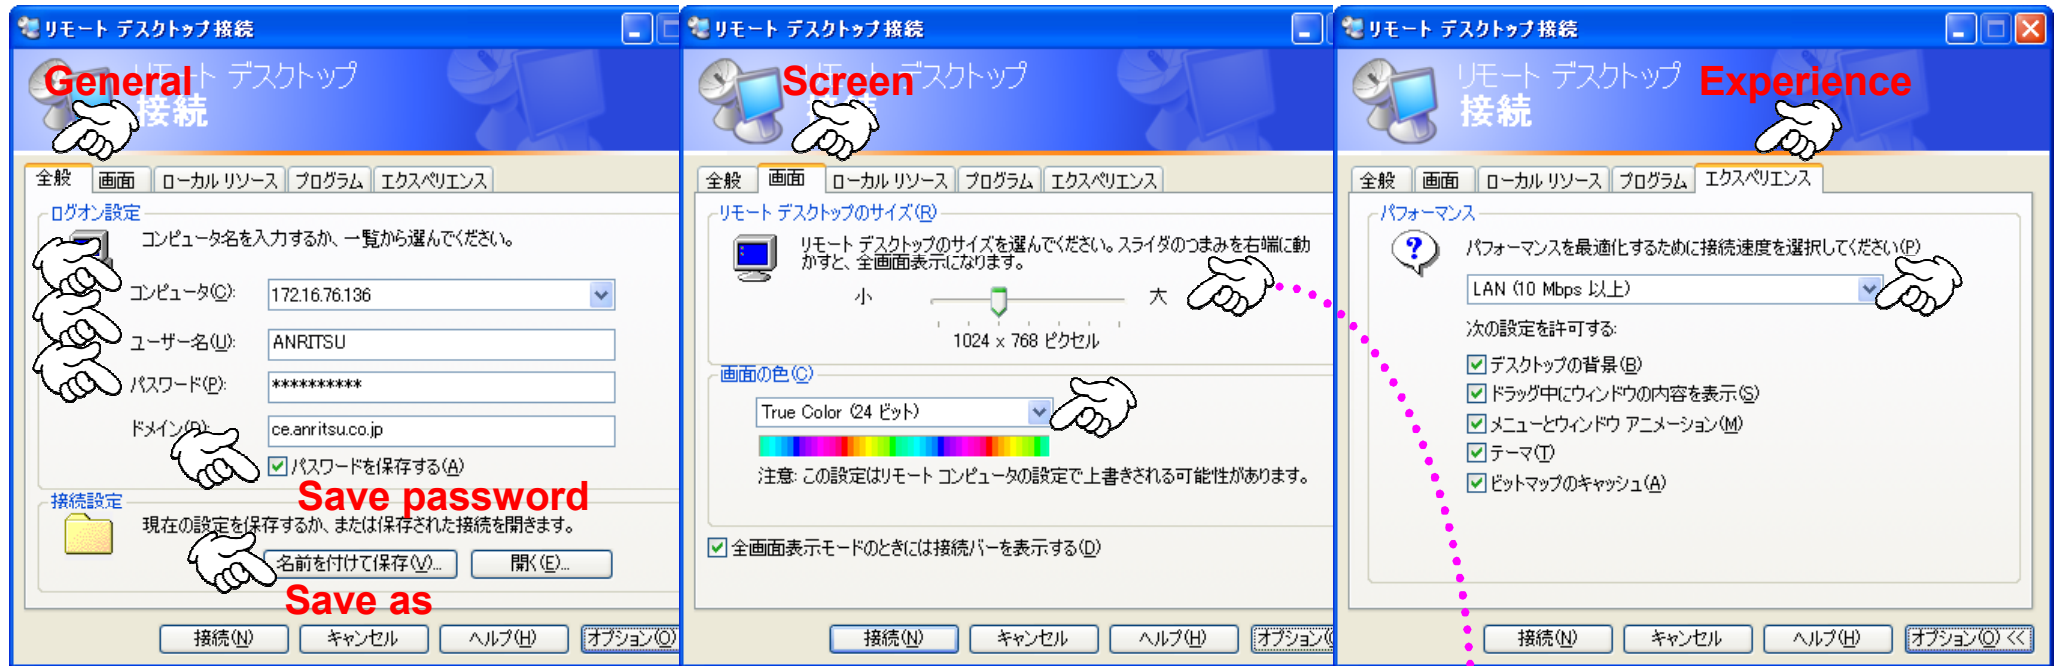

1024 x 768: MS269xA, MD8470
800 x 600: MP1800, MP1590, MD1230


Opening Saved Connection

- **Double-click the rdp file saved on the desktop.**

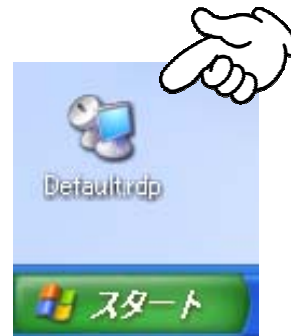


MS269xA at Remote Desktop Connection

- **When the PC connects to the MS269xA, Remote Desktop locks the MS269xA automatically to prevent other users operating it.**
- **Inputting the password when returning to MS269xA operation cancels the operation lock.**

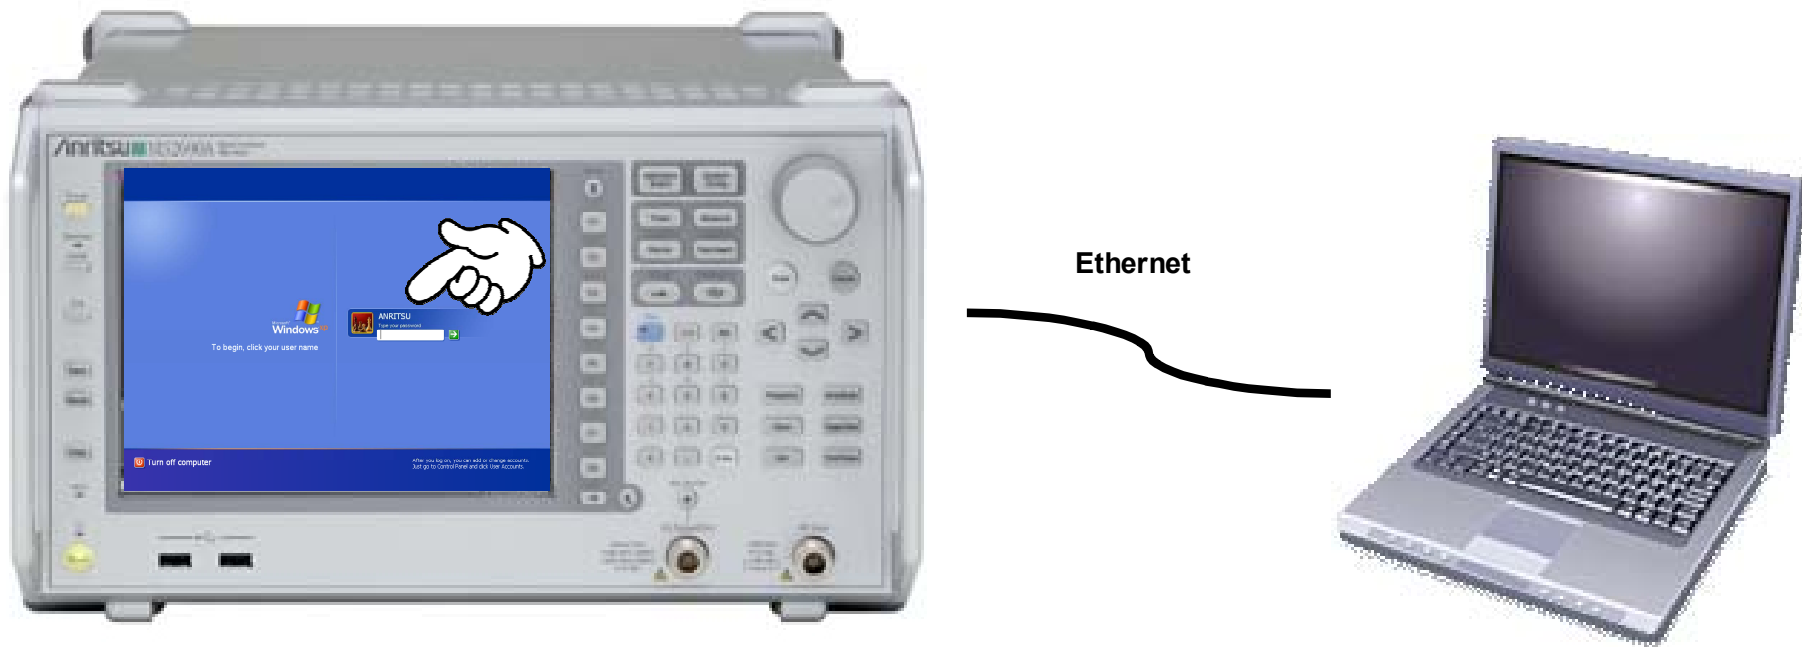


PC at Remote Desktop Connection

- When the PC connects to the MS269xA, Remote Desktop displays the MS269xA screen. Setup is done using a mouse.
- Clicking [X] at the screen top right closes the Remote Desktop Connection.

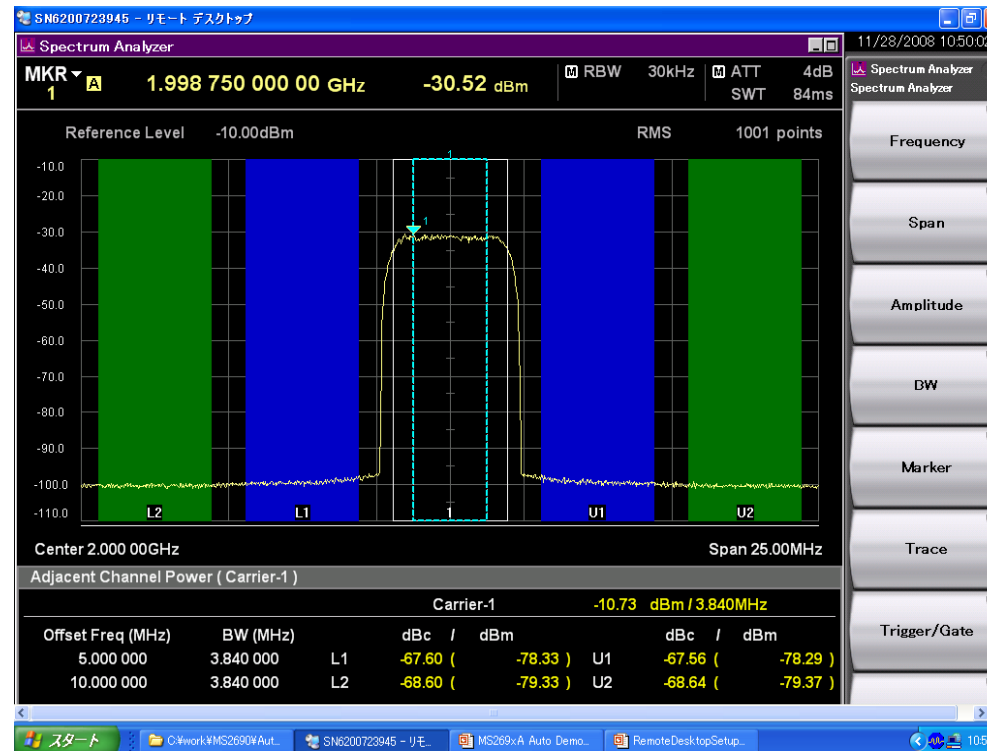

PC at Remote Desktop Connection

- Clicking the taskbar or pressing [Alt] & [Tab] toggles the screen between running application software.

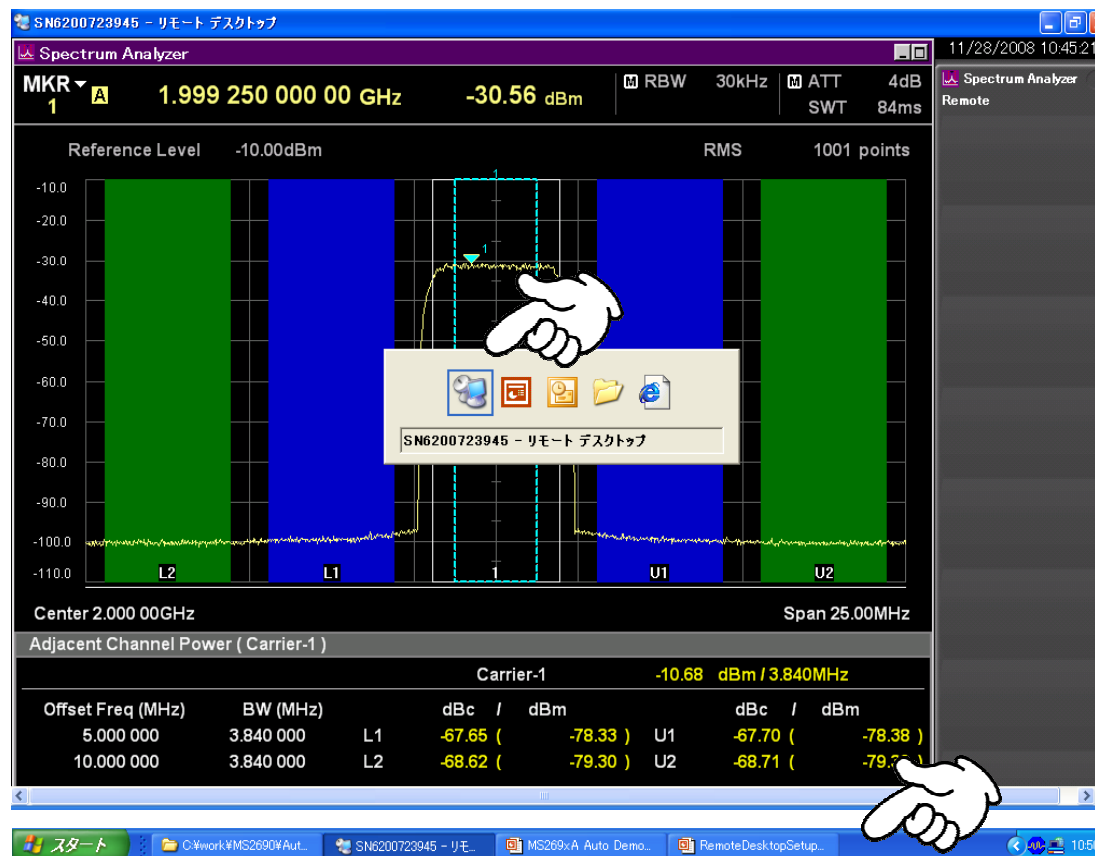

Removing Windows Password After Demo

- Open [User Account] in [Control Panel].
- Click [Remove my password] in the user [ANRITSU], and input the password.

The image displays three sequential screenshots of the Windows User Accounts control panel interface, illustrating the process of removing a password from the ANRITSU user account. Hand-drawn arrows indicate the specific actions to be taken in each step.

Step 1: The 'User Accounts' window shows the 'Learn About' sidebar on the left. A hand-drawn arrow points to the 'ANRITSU' user account card at the bottom of the page, which is labeled 'Computer administrator' and 'Password protected'. Below the account card, the text 'or pick an account to change' is visible.

Step 2: The 'User Accounts' window shows the 'ANRITSU' user account card selected. A hand-drawn arrow points to the 'Remove my password' link. A confirmation dialog box is displayed, asking 'Are you sure you want to remove your password?'. The dialog includes a warning: 'If you remove your password, other people can gain access to your account and change settings.' and a prompt: 'To verify your identity, type your current password:'. A hand-drawn arrow points to the password input field, and another points to the 'Remove Password' button.

Step 3: The 'User Accounts' window shows the 'What do you want to change about your account?' page. A hand-drawn arrow points to the 'Remove my password' link in the list of options.

Anritsu Corporation

5-1-1 Onna, Atsugi-shi, Kanagawa, 243-8555 Japan
Phone: +81-46-223-1111
Fax: +81-46-296-1264

• U.S.A.

Anritsu Company

1155 East Collins Blvd., Suite 100, Richardson,
TX 75081, U.S.A.
Toll Free: 1-800-267-4878
Phone: +1-972-644-1777
Fax: +1-972-671-1877

• Canada

Anritsu Electronics Ltd.

700 Silver Seven Road, Suite 120, Kanata,
Ontario K2V 1C3, Canada
Phone: +1-613-591-2003
Fax: +1-613-591-1006

• Brazil

Anritsu Eletrônica Ltda.

Praca Amadeu Amaral, 27 - 1 Andar
01327-010-Paraiso-São Paulo-Brazil
Phone: +55-11-3283-2511
Fax: +55-11-3288-6940

• Mexico

Anritsu Company, S.A. de C.V.

Av. Ejército Nacional No. 579 Piso 9, Col. Granada
11520 México, D.F., México
Phone: +52-55-1101-2370
Fax: +52-55-5254-3147

• U.K.

Anritsu EMEA Ltd.

200 Capability Green, Luton, Bedfordshire, LU1 3LU, U.K.
Phone: +44-1582-433200
Fax: +44-1582-731303

• France

Anritsu S.A.

16/18 avenue du Québec-SILIC 720
91961 COURTABOEUF CEDEX, France
Phone: +33-1-60-92-15-50
Fax: +33-1-64-46-10-65

• Germany

Anritsu GmbH

Nemetschek Haus, Konrad-Zuse-Platz 1
81829 München, Germany
Phone: +49-89-442308-0
Fax: +49-89-442308-55

• Italy

Anritsu S.p.A.

Via Elio Vittorini 129, 00144 Roma, Italy
Phone: +39-6-509-9711
Fax: +39-6-502-2425

• Sweden

Anritsu AB

Borgaffordsgatan 13, 164 40 KISTA, Sweden
Phone: +46-8-534-707-00
Fax: +46-8-534-707-30

• Finland

Anritsu AB

Teknobulevardi 3-5, FI-01530 VANTAA, Finland
Phone: +358-20-741-8100
Fax: +358-20-741-8111

• Denmark

Anritsu A/S

Kirkebjerg Allé 90, DK-2605 Brøndby, Denmark
Phone: +45-72112200
Fax: +45-72112210

• Spain

Anritsu EMEA Ltd.

Oficina de Representación en España

Edificio Veganova
Avda de la Vega, n° 1 (edf 8, pl 1, of 8)
28108 ALCOBENDAS - Madrid, Spain
Phone: +34-914905761
Fax: +34-914905762

• Russia

Anritsu EMEA Ltd.

Representation Office in Russia

Tverskaya str. 16/2, bld. 1, 7th floor.
Russia, 125009, Moscow
Phone: +7-495-363-1694
Fax: +7-495-935-8962

• United Arab Emirates

Anritsu EMEA Ltd.

Dubai Liaison Office

P O Box 500413 - Dubai Internet City
Al Thuraya Building, Tower 1, Suit 701, 7th Floor
Dubai, United Arab Emirates
Phone: +971-4-3670352
Fax: +971-4-3688460

• Singapore

Anritsu Pte. Ltd.

60 Alexandra Terrace, #02-08, The Comtech (Lobby A)
Singapore 118502
Phone: +65-6282-2400
Fax: +65-6282-2533

• India

Anritsu Pte. Ltd.

India Branch Office

3rd Floor, Shri Lakshminarayan Niwas, #2726, 80 ft Road,
HAL 3rd Stage, Bangalore - 560 075, India
Phone: +91-80-4058-1300
Fax: +91-80-4058-1301

• P.R. China (Hong Kong)

Anritsu Company Ltd.

Units 4 & 5, 28th Floor, Greenfield Tower, Concordia Plaza,
No. 1 Science Museum Road, Tsim Sha Tsui East,
Kowloon, Hong Kong
Phone: +852-2301-4980
Fax: +852-2301-3545

• P.R. China (Beijing)

Anritsu Company Ltd.

Beijing Representative Office

Room 2008, Beijing Fortune Building,
No. 5, Dong-San-Huan Bei Road,
Chao-Yang District, Beijing 100004, P.R. China
Phone: +86-10-6590-9230
Fax: +86-10-6590-9235

• Korea

Anritsu Corporation, Ltd.

8F Hyunjuik Building, 832-41, Yeoksam Dong,
Kangnam-ku, Seoul, 135-080, Korea
Phone: +82-2-553-6603
Fax: +82-2-553-6604

• Australia

Anritsu Pty. Ltd.

Unit 21/270 Ferntree Gully Road, Notting Hill,
Victoria 3168, Australia
Phone: +61-3-9558-8177
Fax: +61-3-9558-8255

• Taiwan

Anritsu Company Inc.

7F, No. 316, Sec. 1, Neihu Rd., Taipei 114, Taiwan
Phone: +886-2-8751-1816
Fax: +886-2-8751-1817

Please Contact: