



Step 1 - Display Assembly

- We are currently working on a better method to open the iPad. This method will open the iPad, but will almost certainly result in broken retaining clips.
- Insert a metal spudger between the top edge of the display assembly and the rear panel assembly.
- Rotate the spudger away from you to release the tabs along the top edge of the display.
- Insert a second metal spudger between the top edge of the display assembly and the rear panel assembly to keep the tabs from snapping back into place.




Step 2

- With one spudger, work your way along the right edge of the iPad, releasing tabs as you go.



Step 3

- Lift the display assembly away from the rear panel assembly by its right edge.
- Do not attempt to remove the display at this time, as it is attached to the rear panel assembly.

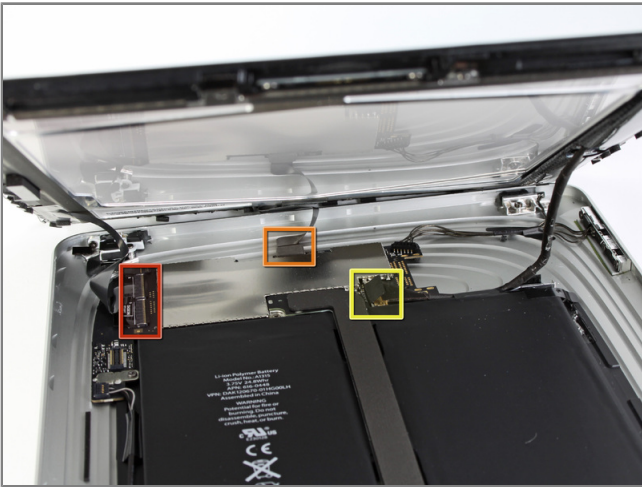


Step 4

- In the following steps, you will disconnect the three cables attaching the display assembly to the logic board. The cables are for the following components:
 - Digitizer
 - Ambient Light Sensor
 - Display Data Cable




Step 5

- Use the edge of an iPod opening tool to flip up the retaining flaps holding the digitizer ribbon cables in their sockets on the logic board.
- Be sure you are flipping up the retaining flap, **not** the socket itself.
- Pull the digitizer ribbon cables straight out of their sockets.

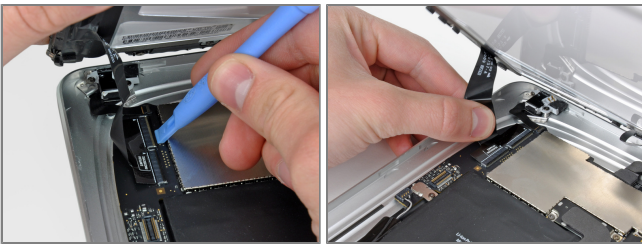



Step 6

- Use an iPod opening tool to remove the ambient light sensor connector from its socket by gently prying upward.

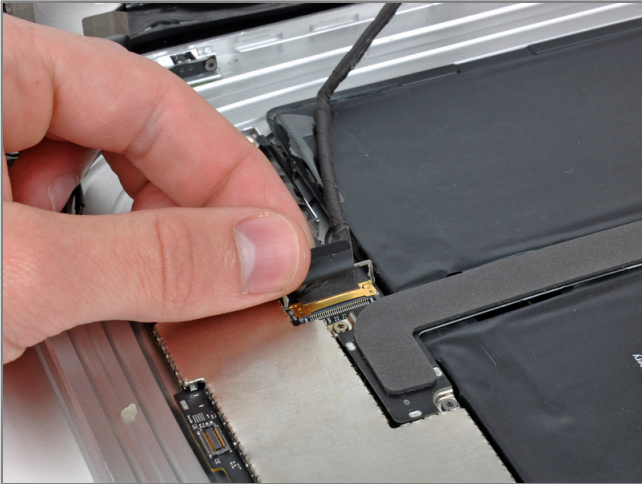


Step 7

- Disconnect the display data cable from the main board by flipping up the metal retainer by its black plastic pull tab.
- Pull the cable connector away from its socket.
- Pull the connector parallel to the face of the logic board.

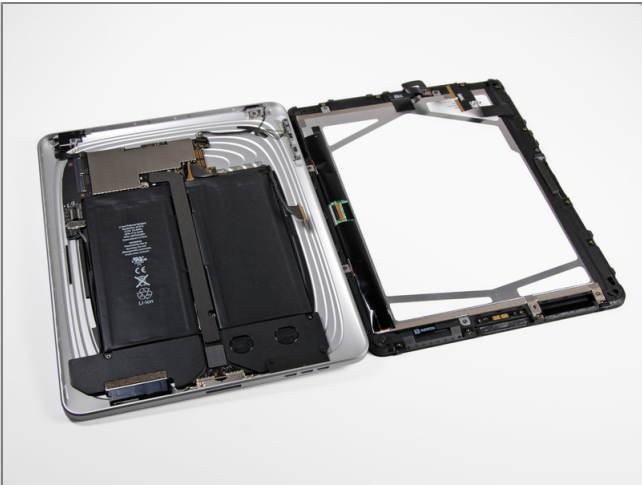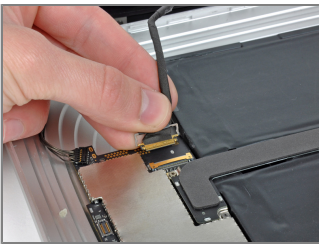

Step 8

- Remove the display assembly from the rear panel assembly.

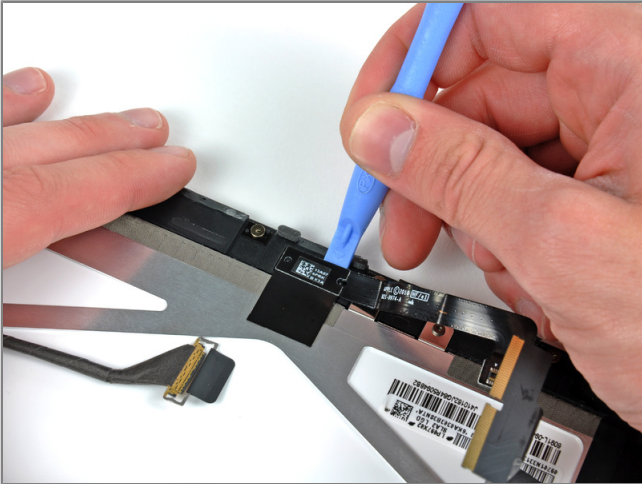

Step 9 - Ambient Light Sensor

- Use the edge of an iPod opening tool to carefully pry the ambient light sensor board off the adhesive securing it to the display frame.
- Once you've gained enough clearance, peel the ambient light sensor off the LCD.
- If necessary, attach the plastic view window to your new ambient light sensor before installation.

