

STATIC DISCHARGING

HAP
OCT 10/06

23-60-00
SECTION TITLE
PAGE 1

NON-ILLUSTRATED FIGURE

THE ITEMS REFLECTED IN THIS FIGURE ARE INTENTIONALLY
NON-ILLUSTRATED. THEY ARE REFERENCED TO EITHER A
NEXT HIGHER OR NEXT LOWER ASSEMBLY/INSTALLATION FIGURE.

E 23600001 REV 055

FUNCTIONAL COLLECTOR- MAJOR MODEL BASIC AND STABLE (STATIC DISCHARGING ONLY)
FIGURE 1

HAP
OCT 10/06

23-60-00-01

23-60-00-01
PAGE 0

BOEING
737-600/700/800/900
PARTS CATALOG (MAINTENANCE)

FIG ITEM	PART NUMBER	1 2 3 4 5 6 7	NOMENCLATURE	EFFECT FROM TO	UNITS PER ASSY
1			FUNCTIONAL COLLECTOR- MAJOR MODEL BASIC AND STABLE (STATIC DISCHARGING ONLY)	001030 201967	
- 1	284A0012-678		FUNCTIONAL COLLECTOR-MAJOR MODEL BASIC AND STABLE (STATIC DISCHARGING ONLY) FOR NHA/OTHER SYS DET SEE: 23-00-00-07	001030 201967	RF
- 15	284A0826-3		.DISCHARGER INSTL-STATIC WING POSITION DATA: LH FOR DETAILS SEE: 23-61-00-01	001030 201967	1
- 20	284A0826-4		.DISCHARGER INSTL-STATIC WING POSITION DATA: RH FOR DETAILS SEE: 23-61-00-01	001030 201967	1
- 25	284A0826-5		.DISCHARGER INSTL-STATIC POSITION DATA: LH FOR DETAILS SEE: 23-61-00-01	001030 201967	1
- 30	284A0826-6		.DISCHARGER INSTL-STATIC POSITION DATA: RH FOR DETAILS SEE: 23-61-00-01	001030 201967	1
- 35	284A0826-7		.DISCHARGER INSTL-STATIC POSITION DATA: LH FOR DETAILS SEE: 23-61-00-01	001030 201967	1
- 40	284A0826-8		.DISCHARGER INSTL-STATIC POSITION DATA: RH FOR DETAILS SEE: 23-61-00-01	001030 201967	1
- 45	284A0826-9		.DISCHARGER INSTL-STATIC VERT. STAB. TIP FOR DETAILS SEE: 23-61-00-01	001030 201967	1
- 50	284A0826-10		.DISCHARGER INSTL-STATIC VERT. STAB. TIP FOR DETAILS SEE: 23-61-00-01	001030 201967	1

MISSING ITEM NUMBERS NOT APPLICABLE

- ITEM NOT ILLUSTRATED

HAP

23-60-00-01

23-60-00
FIG. 01
PAGE 1
OCT 15/08