

CHAPTER

28

FUEL



CHAPTER 28
FUEL

| CH-SC-SU | Schem | Page | Sheet | Date | CH-SC-SU | Schem | Page | Sheet | Date |
|-----------------------|-------|------|-------|-------------|------------------|-------|------|-------|-------------|
| 28-EFFECTIVE PAGES | | | | | 28-23-11 (cont.) | | | | |
| | | 1 | | Aug 10/2009 | | | 101 | | |
| | | 2 | | BLANK | | | | 2 | Jul 17/2007 |
| 28-CONTENTS | | | | | | | 102 | 1 | May 11/2009 |
| | | 1 | | May 11/2009 | | | | 2 | May 11/2009 |
| | | 2 | | Feb 09/2009 | | | 103 | 1 | Oct 20/2006 |
| 28-ALPHABETICAL INDEX | | | | | | | | 2 | Oct 20/2006 |
| | | 1 | | Jan 18/2007 | | | 104 | 1 | Jan 18/2007 |
| | | 2 | | BLANK | | | | 2 | Jan 18/2007 |
| 28-01-00 | | | | | 28-41-11 | | | | |
| | | 101 | | Feb 09/2009 | | | 101 | 1 | Jul 17/2007 |
| 28-10-00 | | | | | | | | 2 | Jul 17/2007 |
| | | 101 | | Feb 09/2009 | | | 102 | 1 | Feb 09/2009 |
| 28-21-11 | | | | | | | | 2 | Feb 09/2009 |
| | | 101 | | Jul 17/2007 | 28-42-11 | | | | |
| | | 102 | | Oct 20/2006 | | | 101 | | Feb 09/2009 |
| | | 103 | | Feb 09/2009 | 28-43-11 | | | | |
| 28-21-21 | | | | | | | 101 | | Mar 31/2005 |
| | | 101 | | Feb 09/2009 | | | 102 | | Jul 17/2007 |
| 28-22-11 | | | | | | | 103 | | Feb 09/2009 |
| | | 101 | | Jul 17/2007 | 28-44-11 | | | | |
| | | 102 | | Oct 20/2006 | | | 101 | 1 | Jul 17/2007 |
| | | 103 | | Feb 09/2009 | | | | 2 | Jul 17/2007 |
| 28-23-11 | | | | | | | 102 | 1 | Feb 09/2009 |
| | | 101 | 1 | Jul 17/2007 | | | | 2 | Feb 09/2009 |

A = Added, R = Revised, D = Deleted, O = Overflow

28-EFFECTIVE PAGES

Page 1
Aug 10/2009

D280A203



CHAPTER 28
FUEL

| Title | CH-SC-SU | Schem | Page | Sheet | Date | Effectivity |
|---|----------|-------|------|-------|-------------|--|
| <u>FUEL SYSTEM CONTROL</u> | | | | | | |
| FUEL SYSTEM CONTROL | 28-01-00 | | 101 | | Feb 09/2009 | ALL |
| <u>STORAGE</u> | | | | | | |
| FUEL TANK VENT SYSTEM | 28-10-00 | | 101 | | Feb 09/2009 | ALL |
| <u>ENGINE FUEL SYSTEM</u> | | | | | | |
| ENGINE FUEL SHUT-OFF VALVES | 28-21-11 | | 101 | | Jul 17/2007 | YC001-YK901 |
| | | | 102 | | Oct 20/2006 | YK902-YK906 |
| | | | 103 | | Feb 09/2009 | YK907-YM670 |
| BATTERY AND CONTROL POWER ENGINE SPAR AND APU FUEL VALVES | 28-21-21 | | 101 | | Feb 09/2009 | ALL |
| <u>ENGINE FUEL FEED SYSTEM</u> | | | | | | |
| FUEL CROSSFEED VALVE | 28-22-11 | | 101 | | Jul 17/2007 | YC001-YK901 |
| | | | 102 | | Oct 20/2006 | YK902-YK906 |
| | | | 103 | | Feb 09/2009 | YK907-YM670 |
| <u>FUEL BOOST PUMPS</u> | | | | | | |
| FUEL BOOST PUMPS | 28-23-11 | | 101 | 1 | Jul 17/2007 | YC001-YC030 |
| | | | | 2 | Jul 17/2007 | YC001-YC030 |
| | | | 102 | 1 | May 11/2009 | YC031-YC050 YK908-YL401 YL422-YM670 |
| | | | | 2 | May 11/2009 | YC031-YC050 YK908-YL401 YL422-YM670 |
| | | | 103 | 1 | Oct 20/2006 | YK901-YK906 |
| | | | | 2 | Oct 20/2006 | YK901-YK906 |
| | | | 104 | 1 | Jan 18/2007 | YK907 YL421 |
| | | | | | | |

CHAPTER 28
FUEL

| Title | CH-SC-SU | Schem | Page | Sheet | Date | Effectivity |
|--|----------|-------|------|-------|-------------|-------------------------|
| FUEL BOOST PUMPS (cont.) | 28-23-11 | | | 2 | Jan 18/2007 | YK907 YL421 |
| <u>FUEL QUANTITY INDICATING SYSTEM</u> | | | | | | |
| FUEL QUANTITY | 28-41-11 | | 101 | 1 | Jul 17/2007 | YC001-YK906 |
| | | | | 2 | Jul 17/2007 | YC001-YK906 |
| | | | 102 | 1 | Feb 09/2009 | YK907-YM670 |
| | | | | 2 | Feb 09/2009 | YK907-YM670 |
| <u>FUEL TEMPERATURE INDICATING SYSTEM</u> | | | | | | |
| FUEL TEMPERATURE INDICATION | 28-42-11 | | 101 | | Feb 09/2009 | ALL |
| <u>FUEL PRESSURE INDICATING SYSTEM</u> | | | | | | |
| FUEL BOOST PUMPS LOW PRESSURE WARNING LIGHTS | 28-43-11 | | 101 | | Mar 31/2005 | YC001-YC019 |
| | | | 102 | | Jul 17/2007 | YC020-YC030 |
| | | | 103 | | Feb 09/2009 | YC031-YM670 |
| <u>REFUELING INDICATION</u> | | | | | | |
| GROUND REFUELING | 28-44-11 | | 101 | 1 | Jul 17/2007 | YC001-YC030 YK901-YK905 |
| | | | | 2 | Jul 17/2007 | YC001-YC030 YK901-YK905 |
| | | | 102 | 1 | Feb 09/2009 | YC031-YC050 YK906-YM670 |
| | | | | 2 | Feb 09/2009 | YC031-YC050 YK906-YM670 |


CHAPTER 28
FUEL

| CH-SC-SU | Title |
|----------|---|
| 28-21-21 | BATTERY AND CONTROL POWER ENGINE SPAR AND APU FUEL VALVES |
| 28-21-11 | ENGINE FUEL SHUT-OFF VALVES |
| 28-23-11 | FUEL BOOST PUMPS |
| 28-43-11 | FUEL BOOST PUMPS LOW PRESSURE WARNING LIGHTS |
| 28-22-11 | FUEL CROSSFEED VALVE |
| 28-41-11 | FUEL QUANTITY |
| 28-01-00 | FUEL SYSTEM CONTROL |
| 28-10-00 | FUEL TANK VENT SYSTEM |
| 28-42-11 | FUEL TEMPERATURE INDICATION |
| 28-44-11 | GROUND REFUELING |

| CH-SC-SU | Title |
|----------|-------|
|----------|-------|

28-ALPHABETICAL INDEX

-A
1

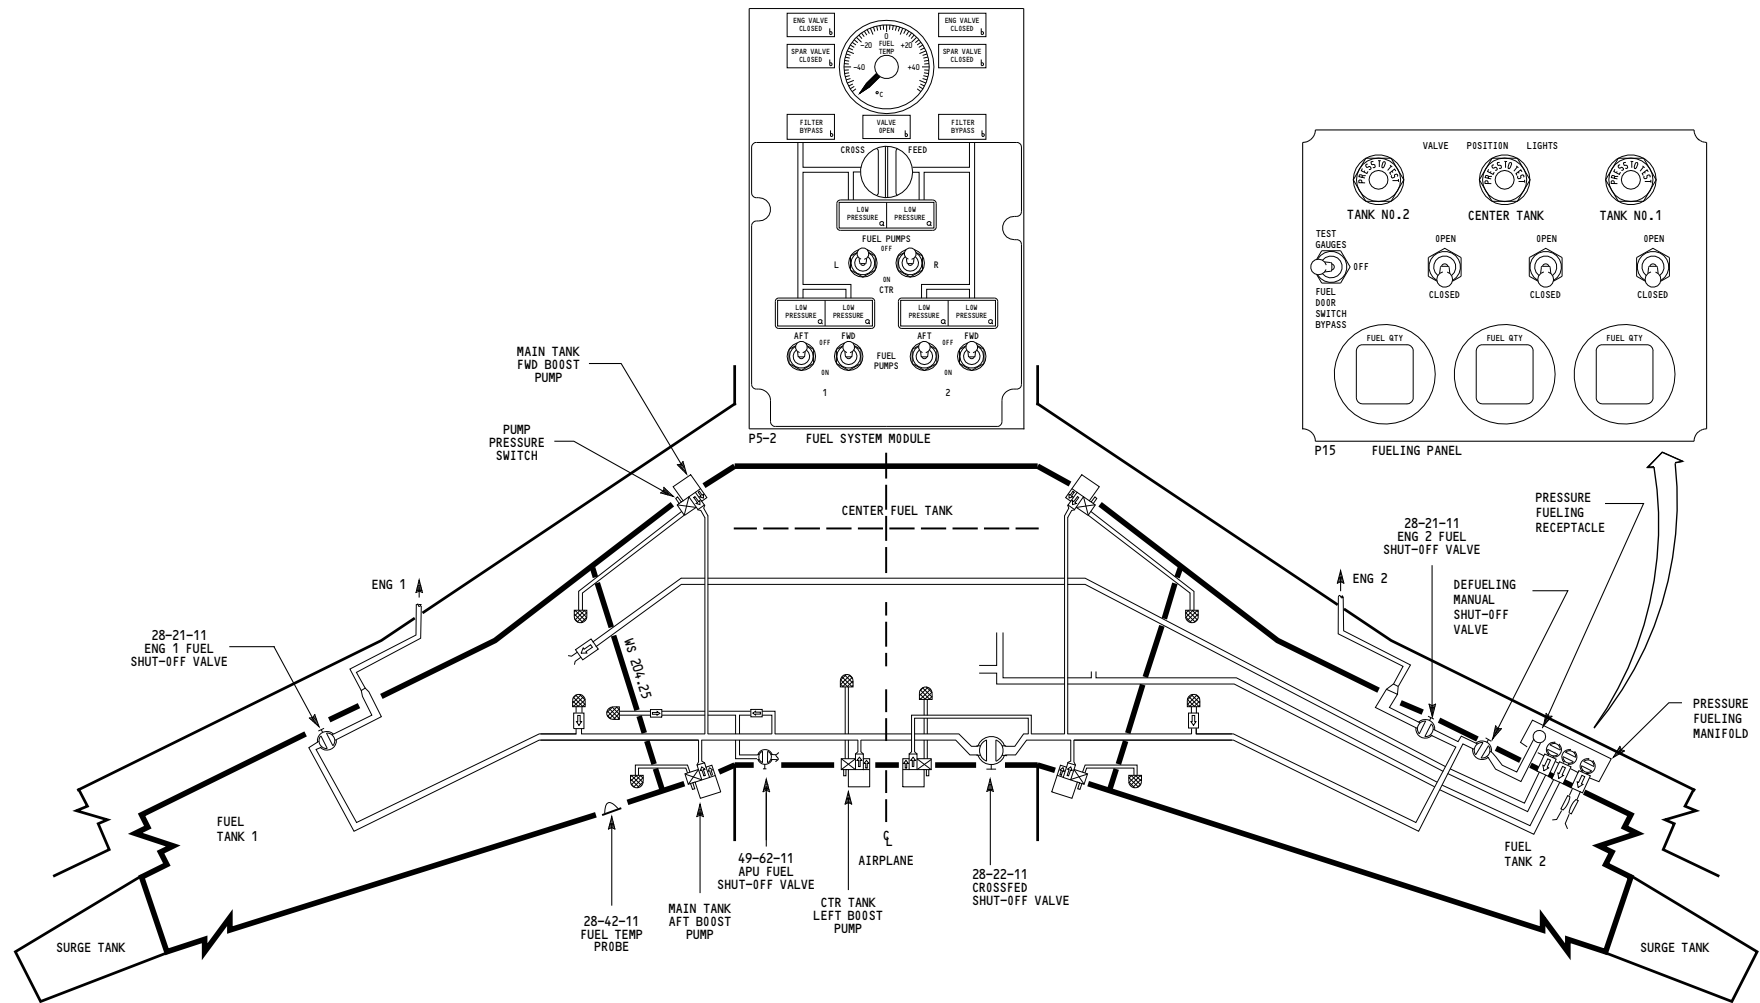


| | |
|-----|---|
| ALL | <p align="center">FUEL SYSTEM CONTROL</p> <p align="center">D280A203</p> |
|-----|---|

28-01-00

Page 101

Feb 09/2009

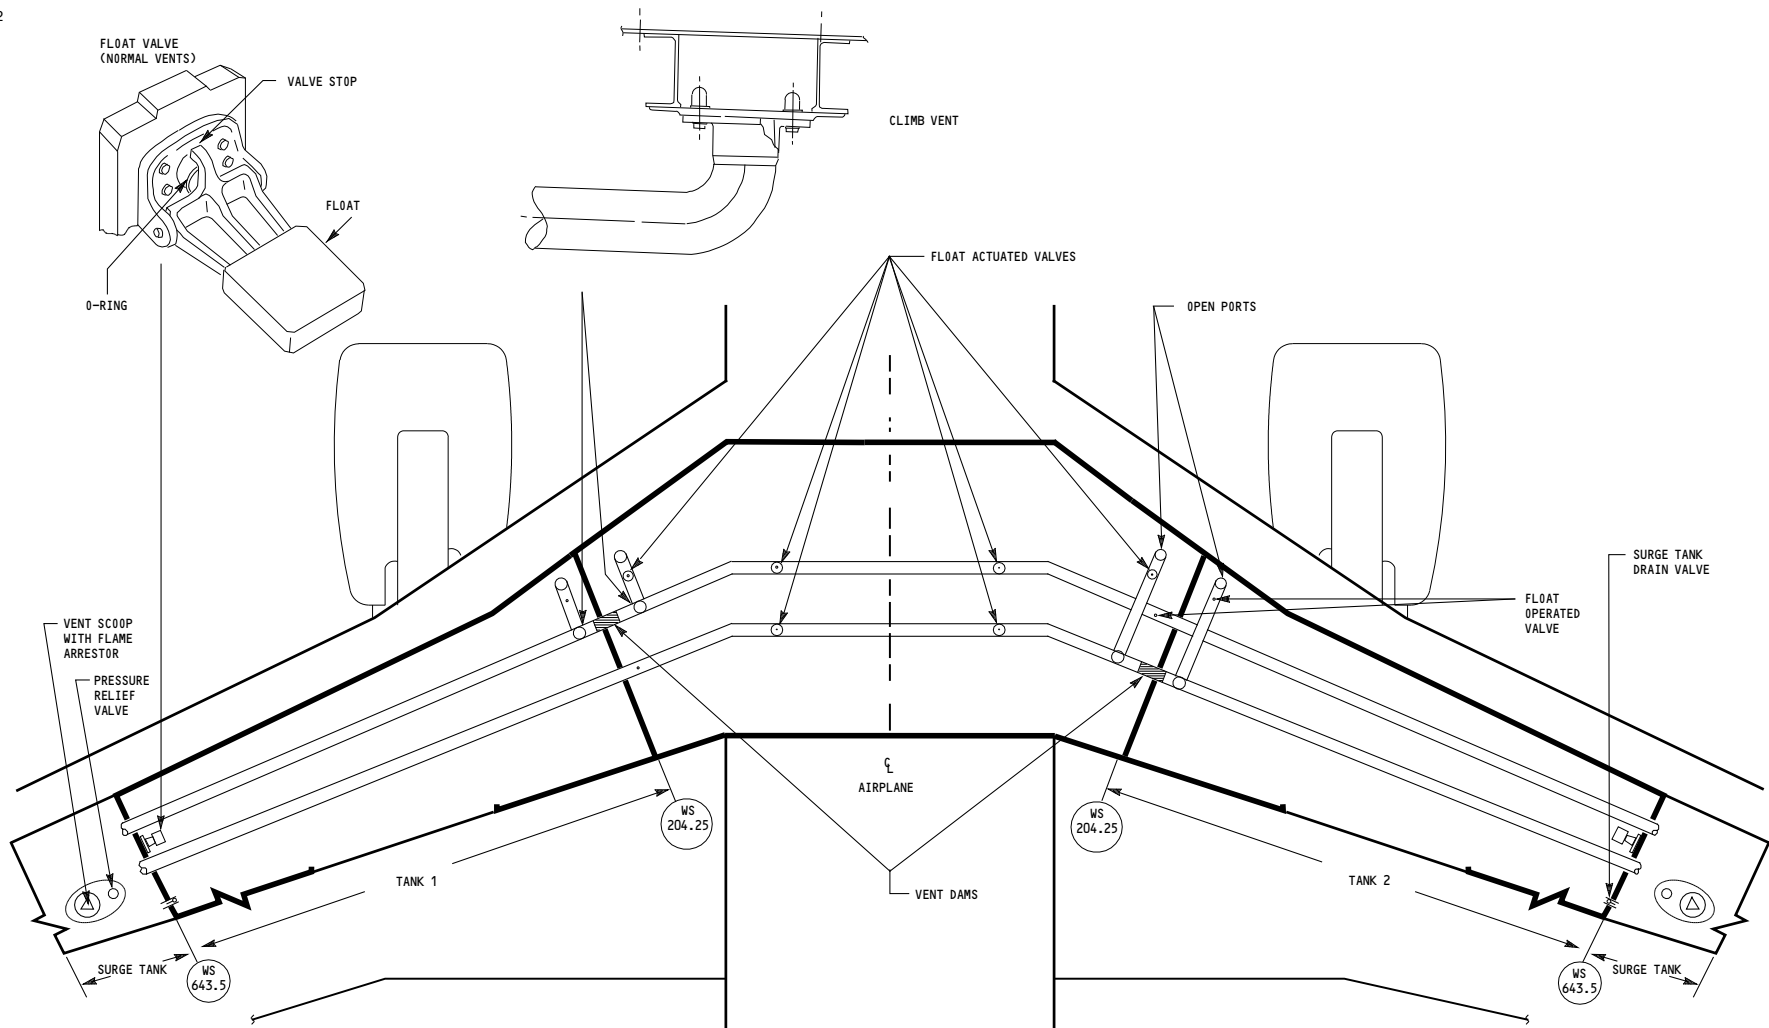


| | |
|-----|---|
| ALL | <p>FUEL TANK VENT SYSTEM</p> <p>D280A203</p> |
|-----|---|

28-10-00

Page 101

Feb 09/2009

-L
1

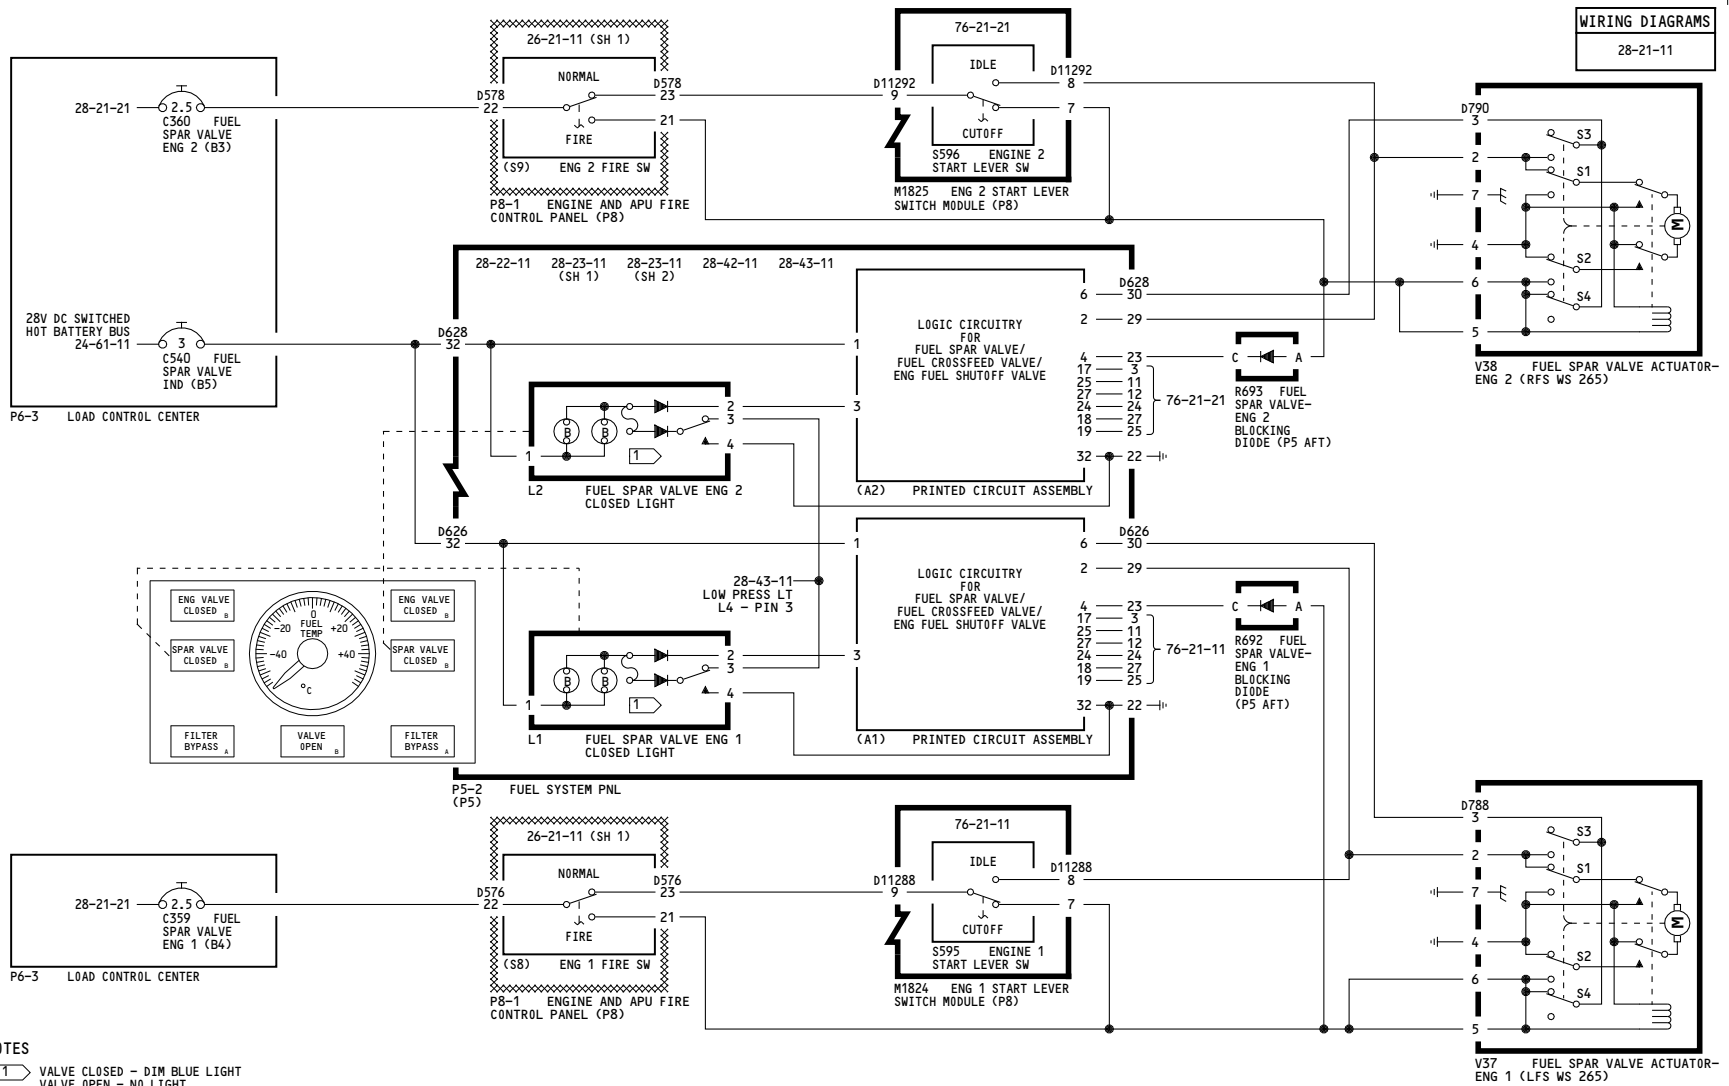


WIRING DIAGRAMS
28-21-11

NOTES
 [Light symbol] VALVE CLOSED - DIM BLUE LIGHT
 VALVE OPEN - NO LIGHT
 VALVE IN TRANSIT - BRIGHT BLUE LIGHT

| | |
|-------------|--|
| YC001-YK901 | ENGINE FUEL SHUT-OFF VALVES D280A203 |
|-------------|--|

28-21-11


WIRING DIAGRAMS
28-21-11

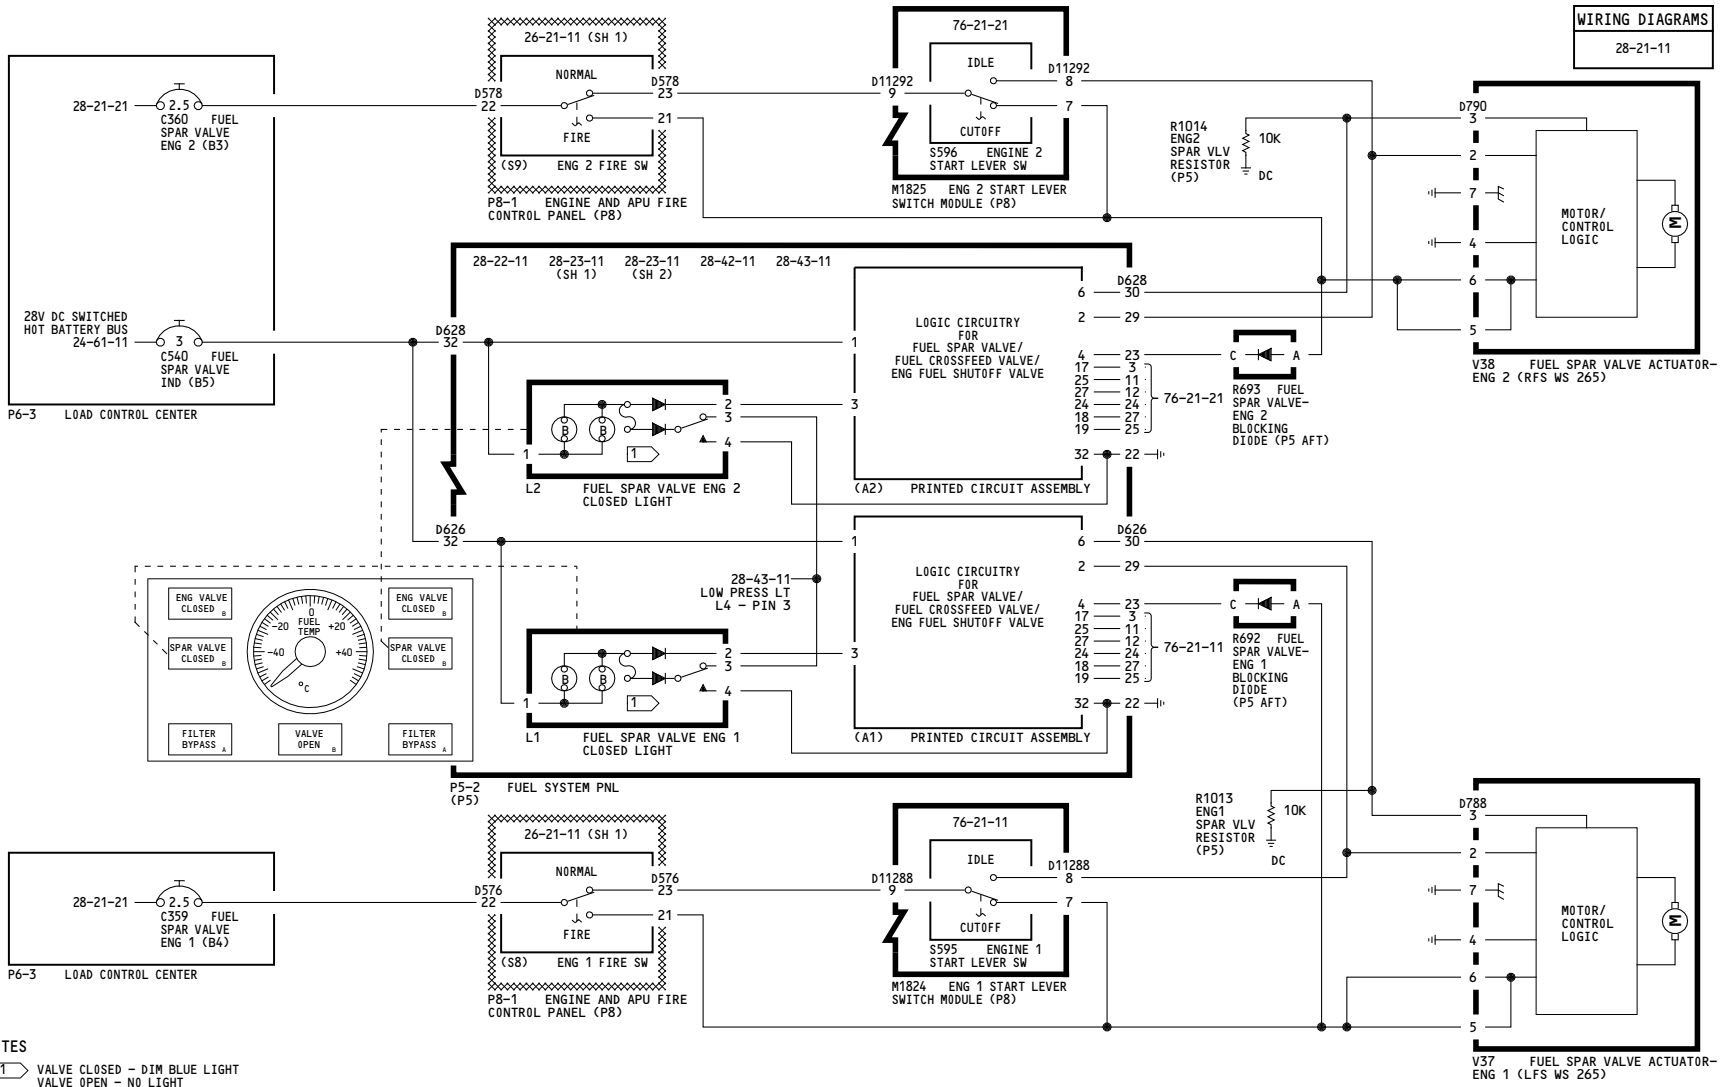

- NOTES**
- 1 VALVE CLOSED - DIM BLUE LIGHT
 - VALVE OPEN - NO LIGHT
 - VALVE IN TRANSIT - BRIGHT BLUE LIGHT

| | |
|-------------|------------------------------------|
| YK902-YK906 | ENGINE FUEL SHUT-OFF VALVES |
| D280A203 | |

28-21-11

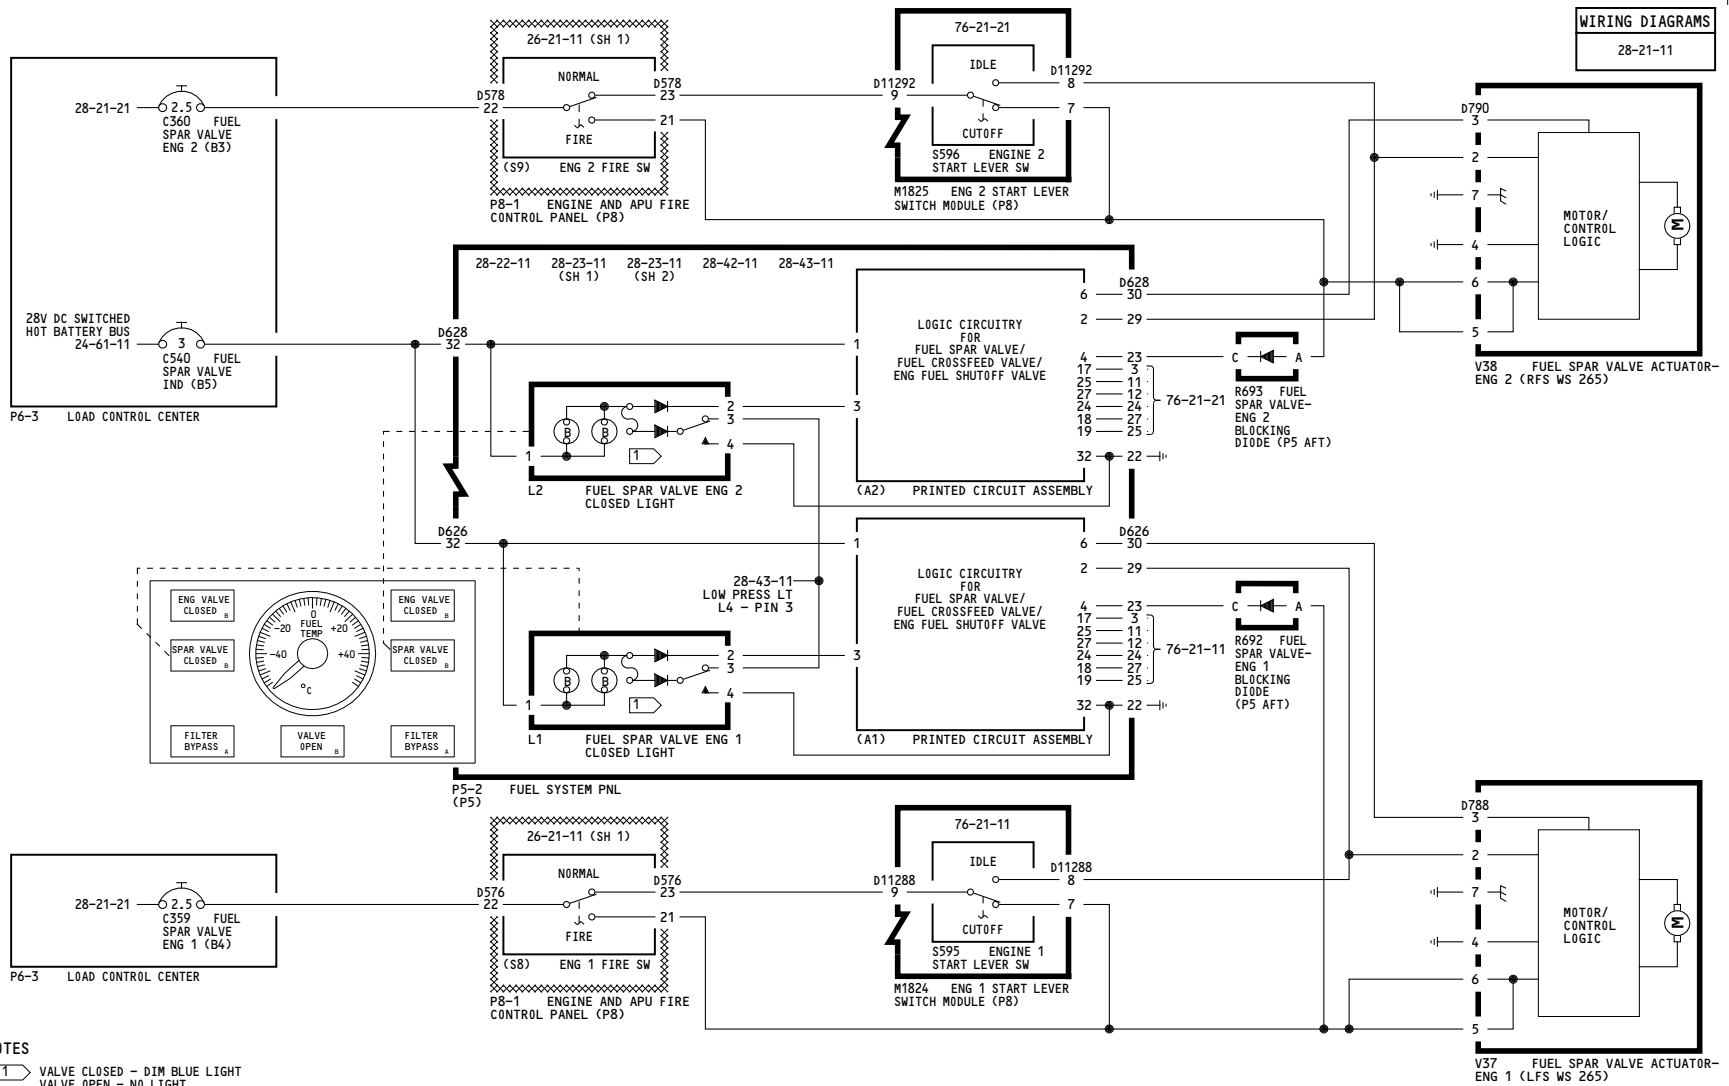


YK907-YM670

ENGINE FUEL SHUT-OFF VALVES

D280A203

-A
1

WIRING DIAGRAMS
28-21-21

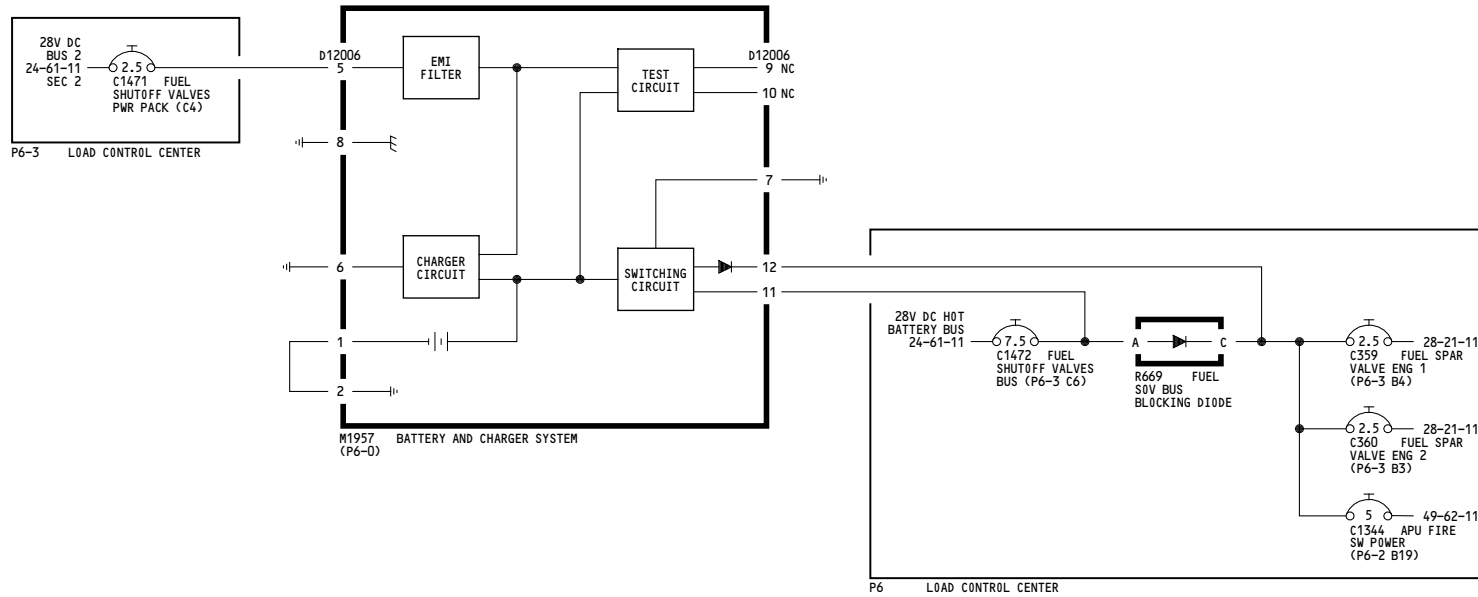


| | |
|-----|---|
| ALL | <p>BATTERY AND CONTROL POWER ENGINE SPAR AND APU FUEL VALVES</p> <p>D280A203</p> |
|-----|---|

28-21-21

Page 101

Feb 09/2009

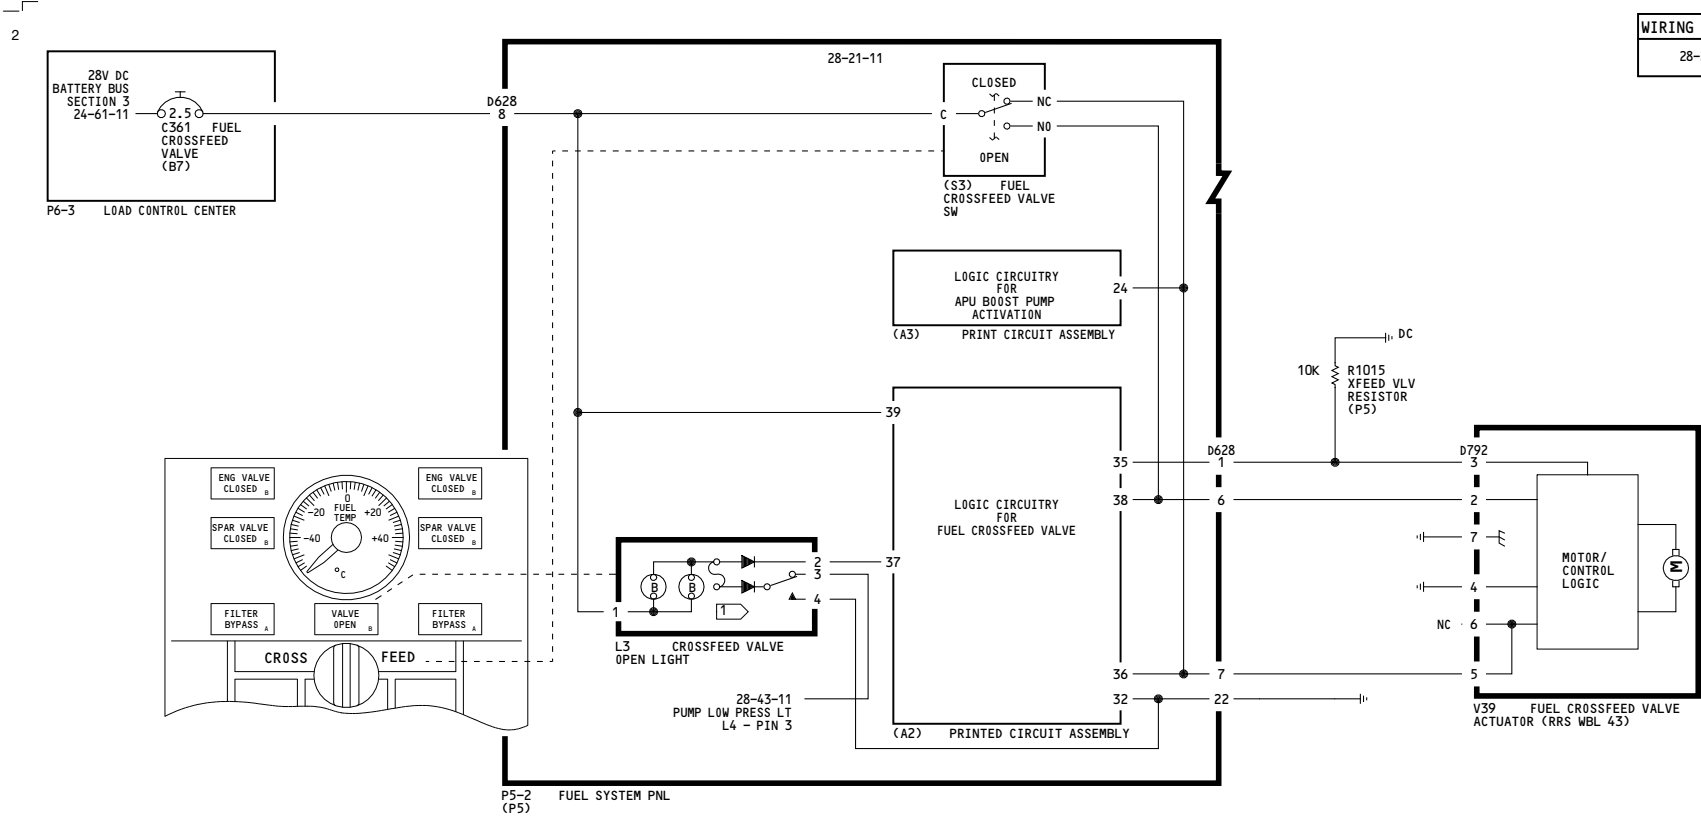


NOTES:

- 1 VALVE CLOSED - NO LIGHT
- VALVE OPEN - DIM LIGHT
- VALVE IN TRANSIT - BRIGHT LIGHT

| | |
|-------------|-----------------------------|
| YK902-YK906 | FUEL CROSSFEED VALVE |
| D280A203 | |

28-22-11

3

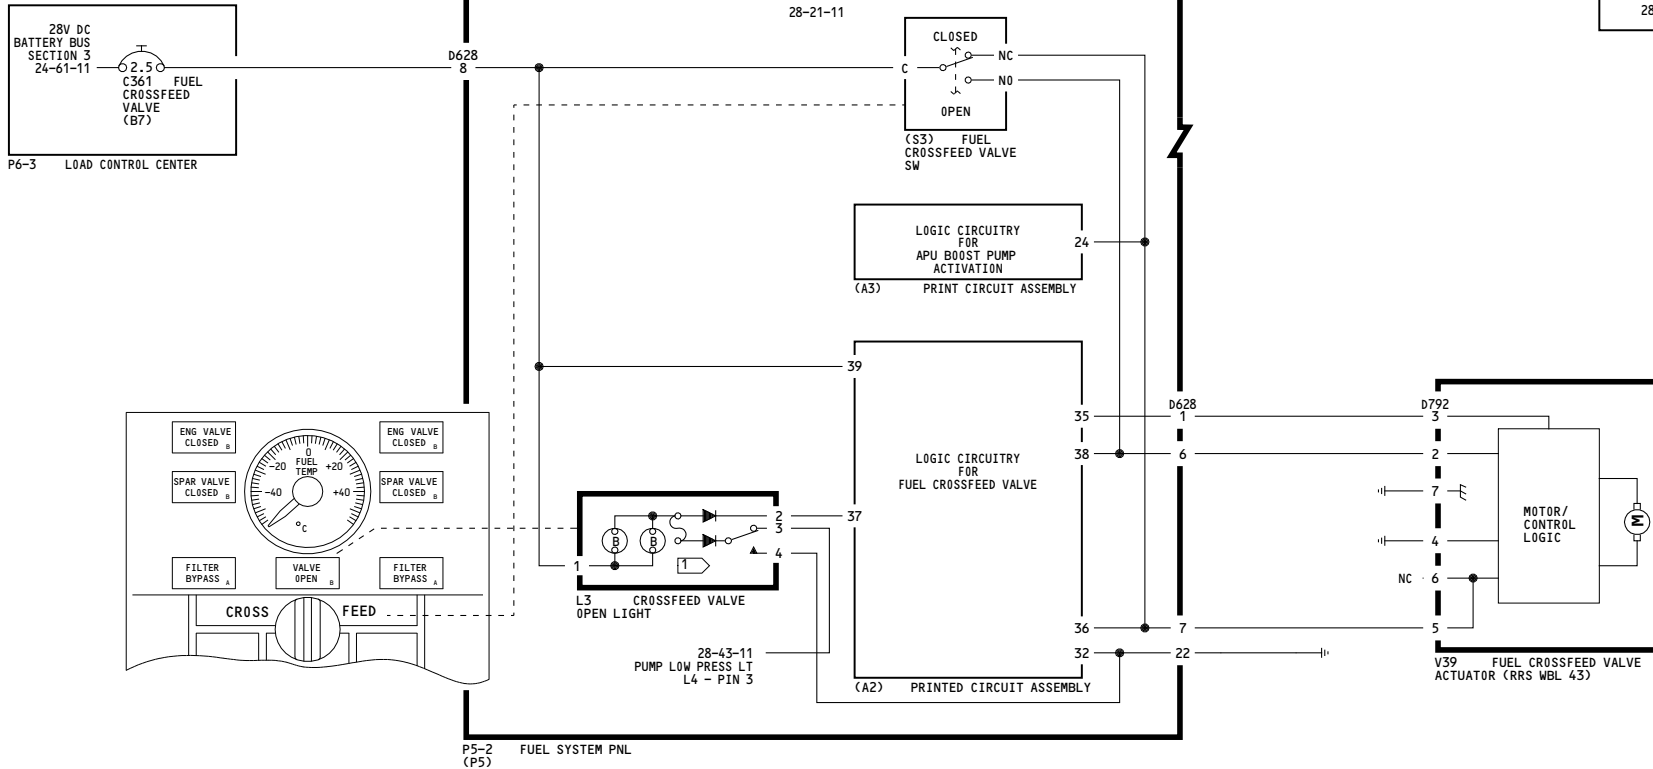


NOTES:

- 1 VALVE CLOSED - NO LIGHT
- VALVE OPEN - DIM LIGHT
- VALVE IN TRANSIT - BRIGHT LIGHT

| | |
|-------------|--|
| YK907-YM670 | <p align="center">FUEL CROSSFEED VALVE</p> <p align="center">D280A203</p> |
|-------------|--|


28-22-11

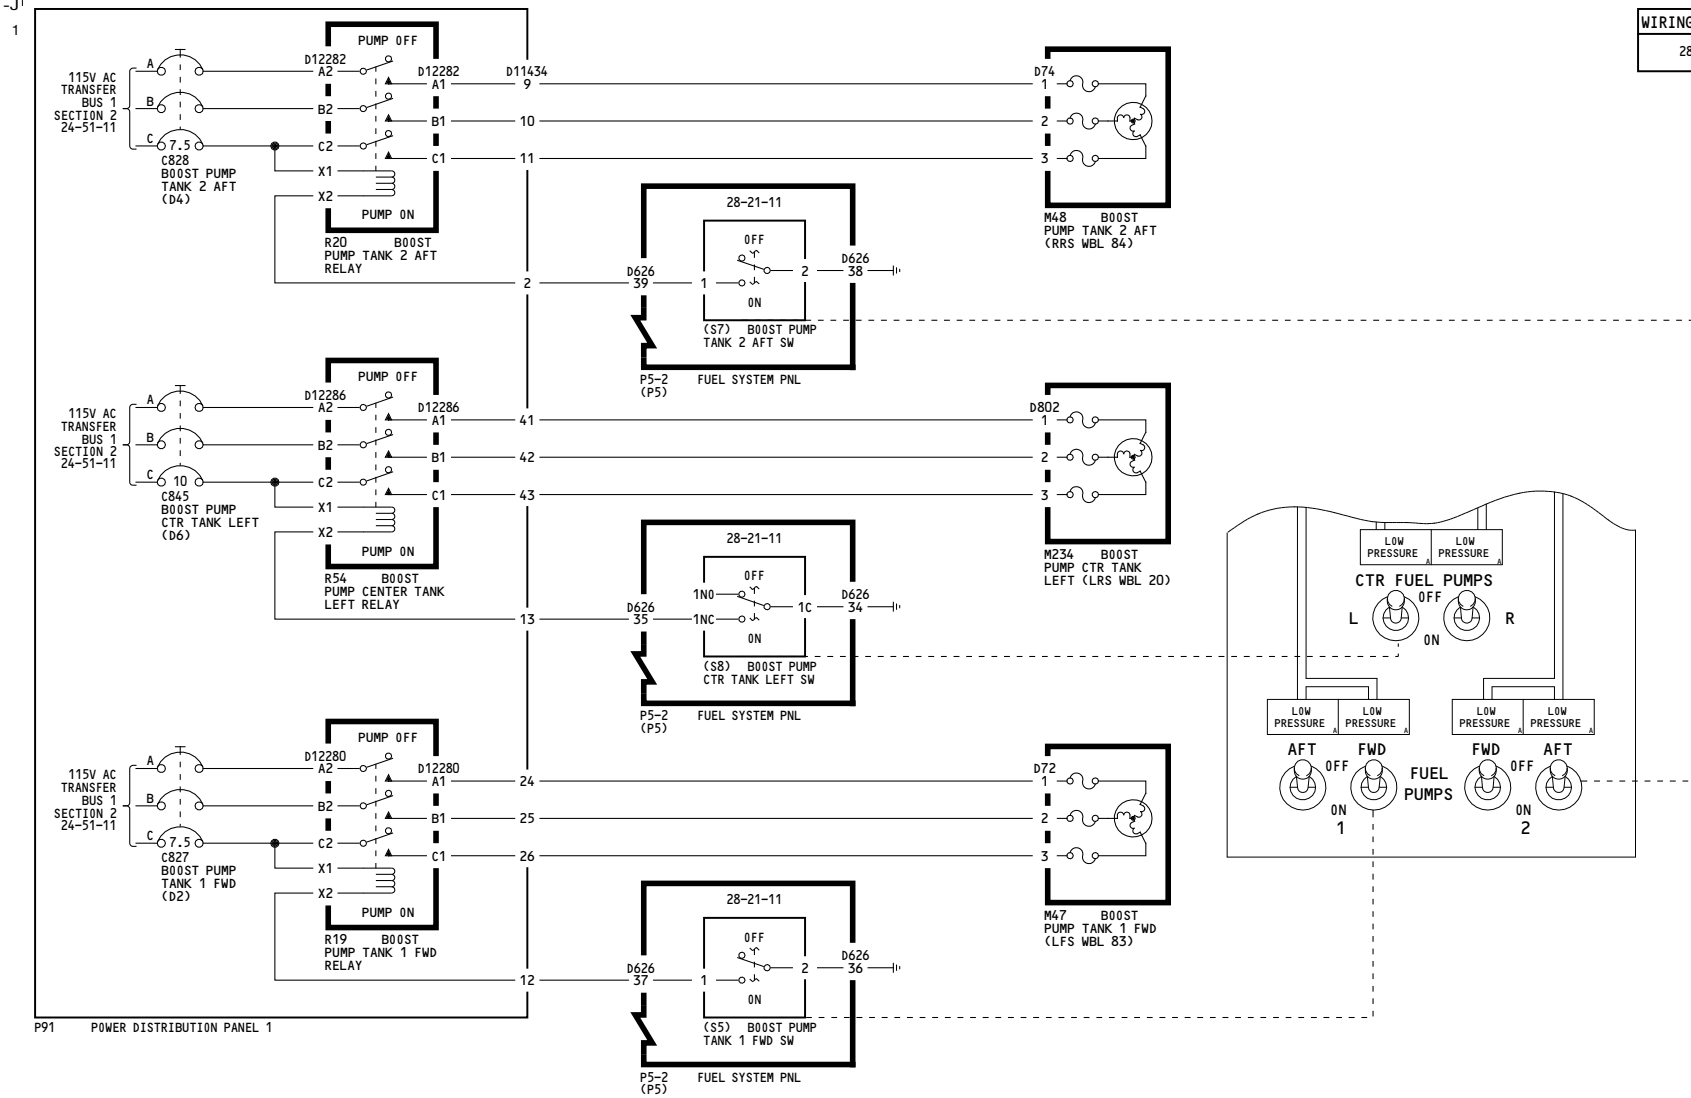

| | |
|-------------|---|
| YC001-YC030 | FUEL BOOST PUMPS D280A203 |
|-------------|---|

28-23-11


WIRING DIAGRAMS
28-23-11

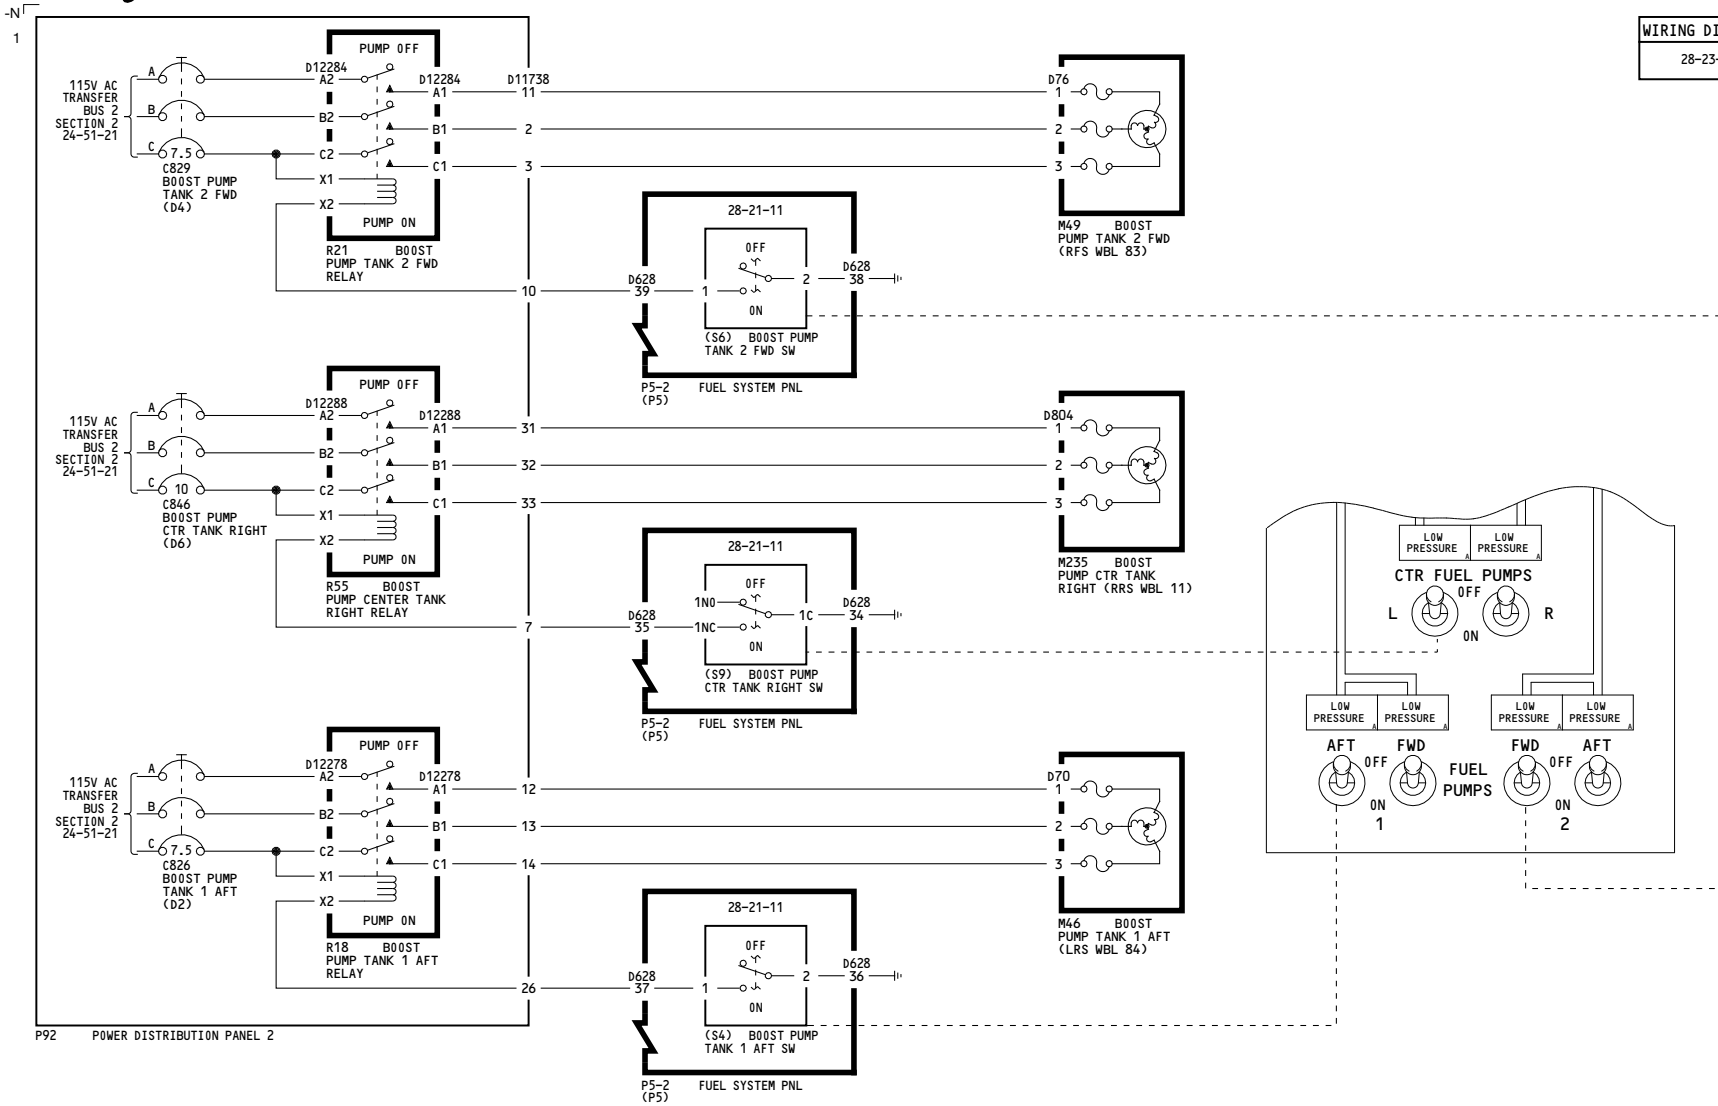

| | |
|-------------|---|
| YC001-YC030 | FUEL BOOST PUMPS D280A203 |
|-------------|---|

28-23-11

WIRING DIAGRAMS
28-23-11

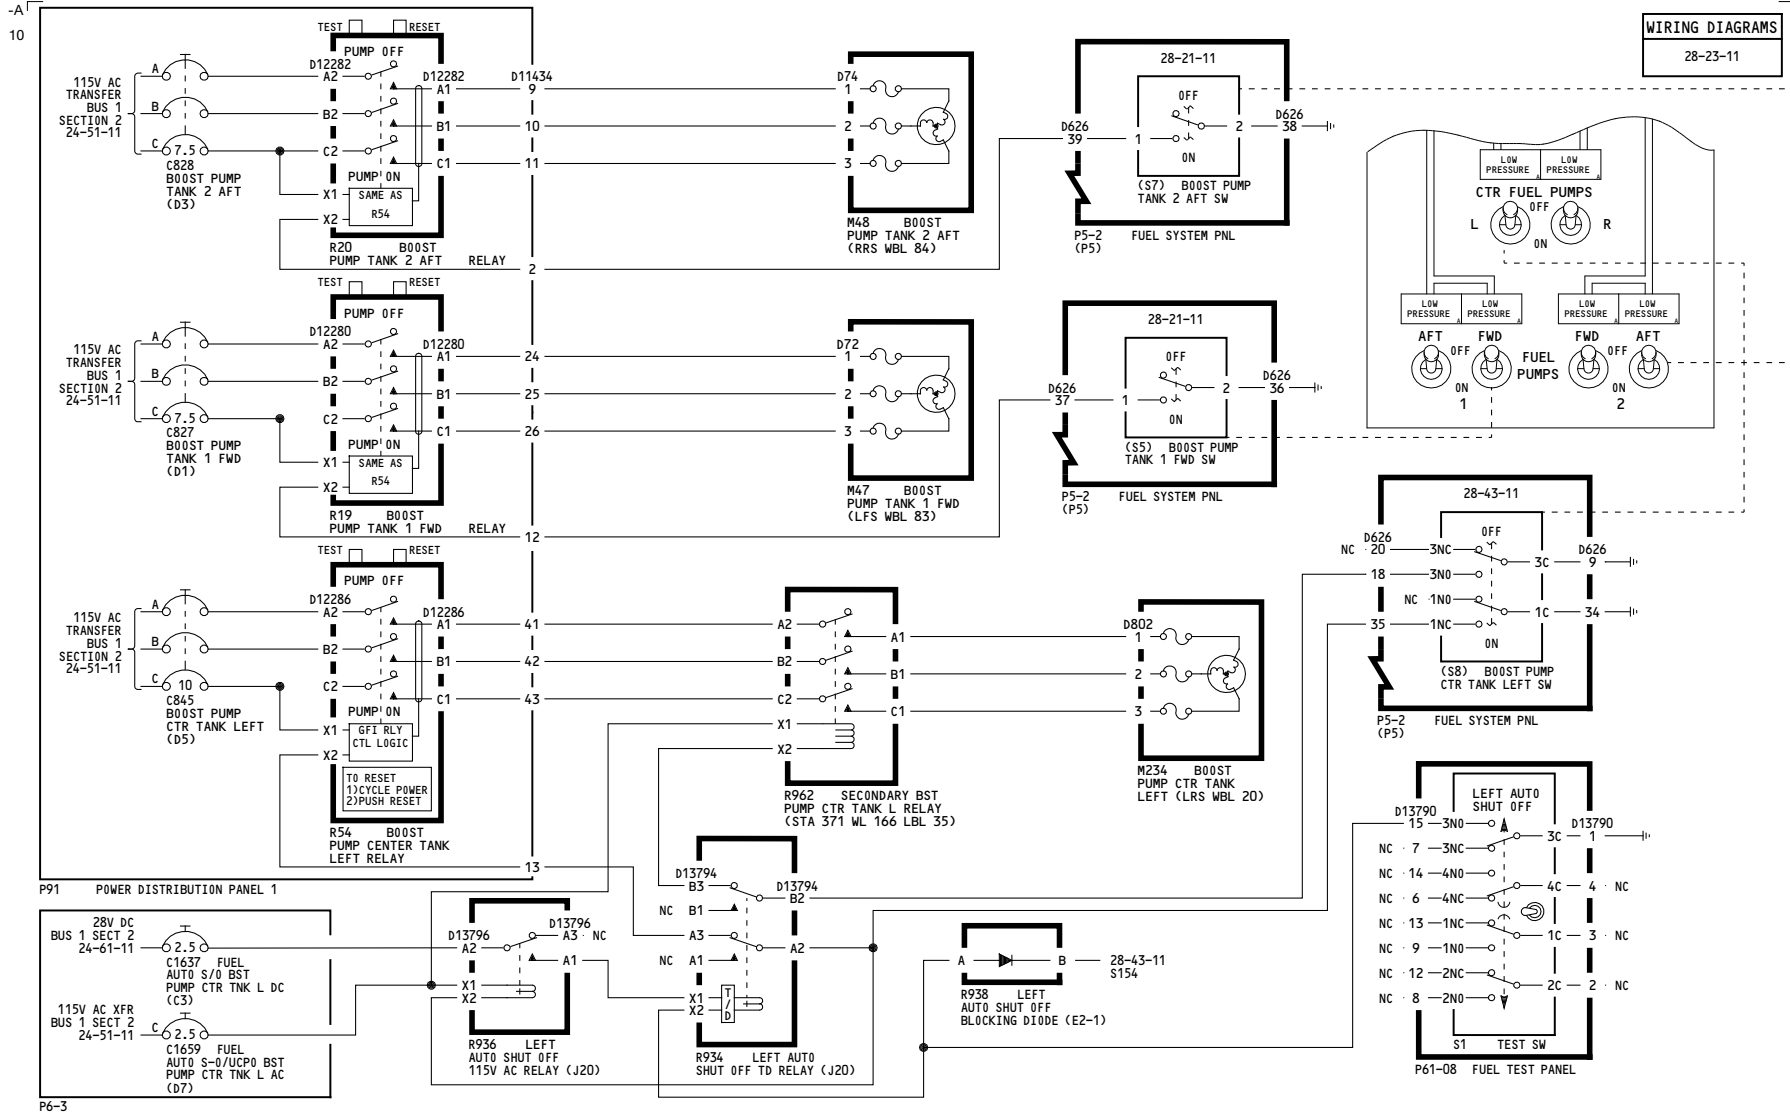


YC031-YC050, YK908-YL401, YL422-YM670

FUEL BOOST PUMPS

D280A203

28-23-11

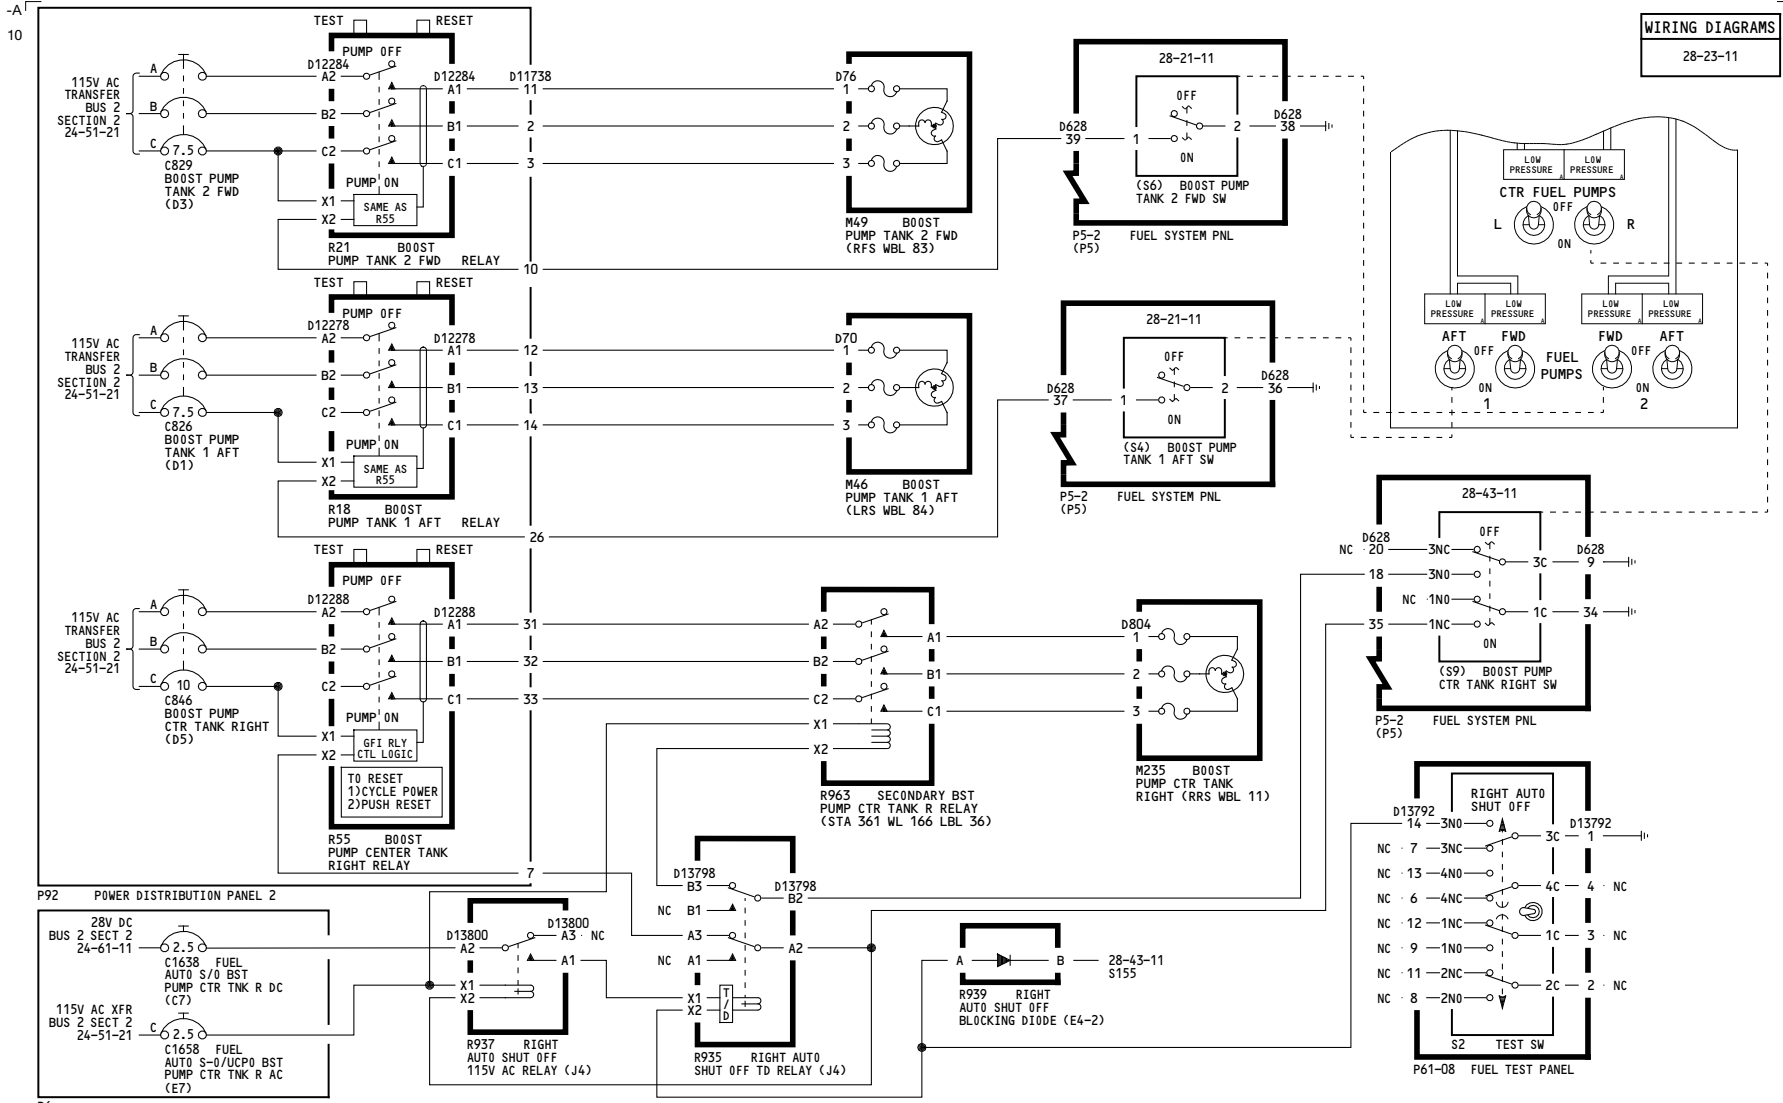

WIRING DIAGRAMS
28-23-11


YC031-YC050, YK908-YL401, YL422-YM670

FUEL BOOST PUMPS

D280A203

28-23-11

WIRING DIAGRAMS
28-23-11

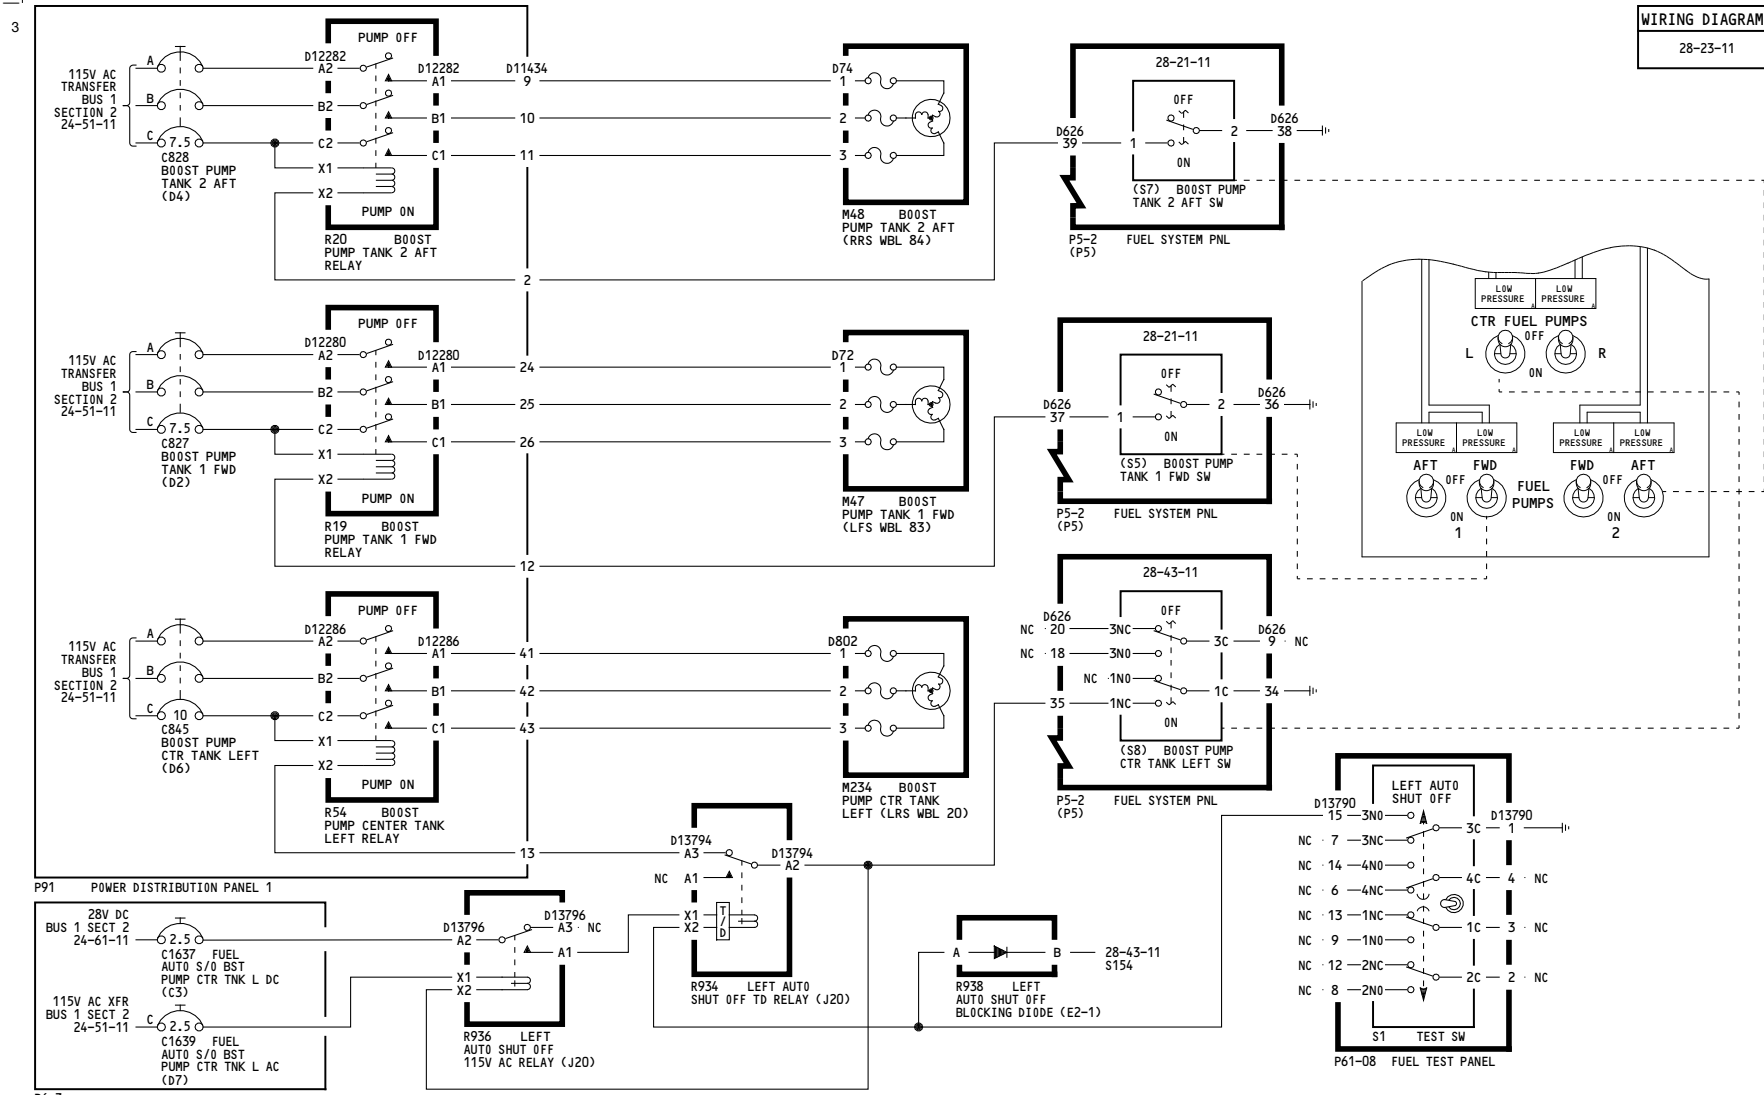


P6-3

| | |
|-------------|---|
| YK901-YK906 | FUEL BOOST PUMPS D280A203 |
|-------------|---|

28-23-11

WIRING DIAGRAMS
28-23-11

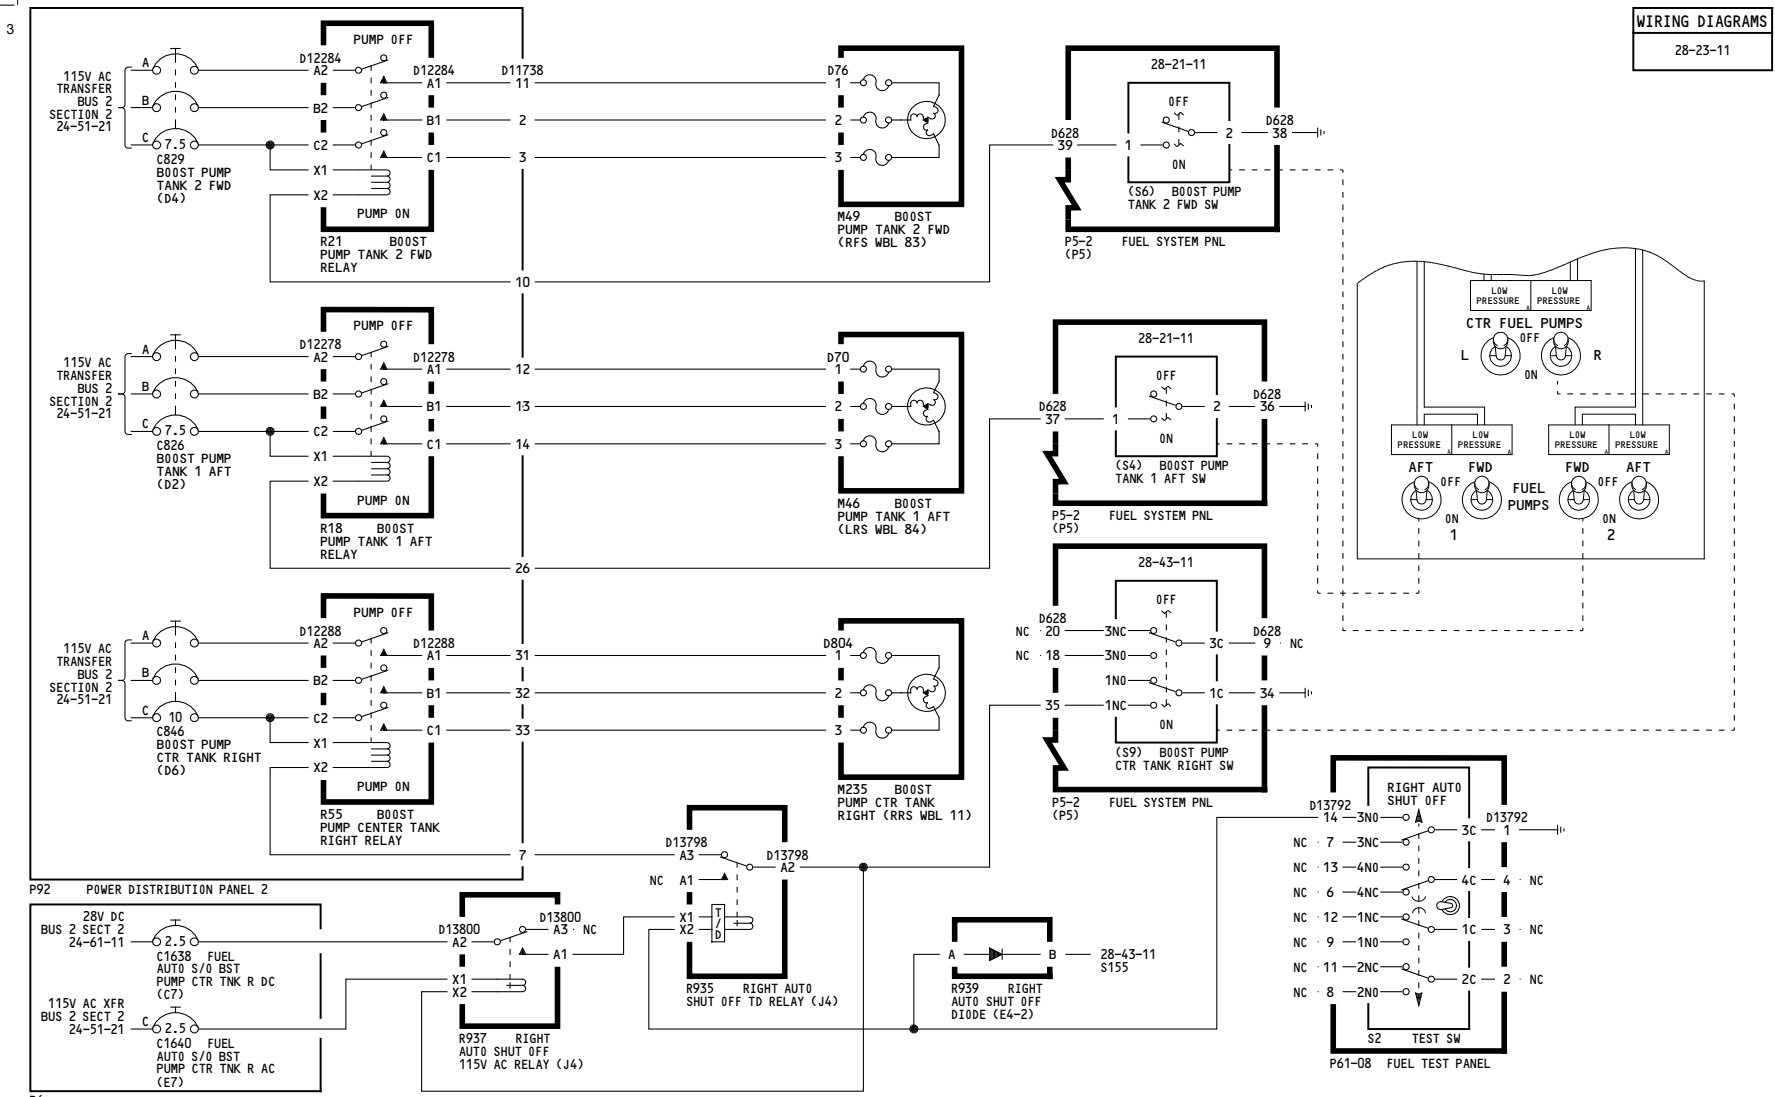


YK901-YK906

FUEL BOOST PUMPS

D280A203

28-23-11

WIRING DIAGRAMS
28-23-11

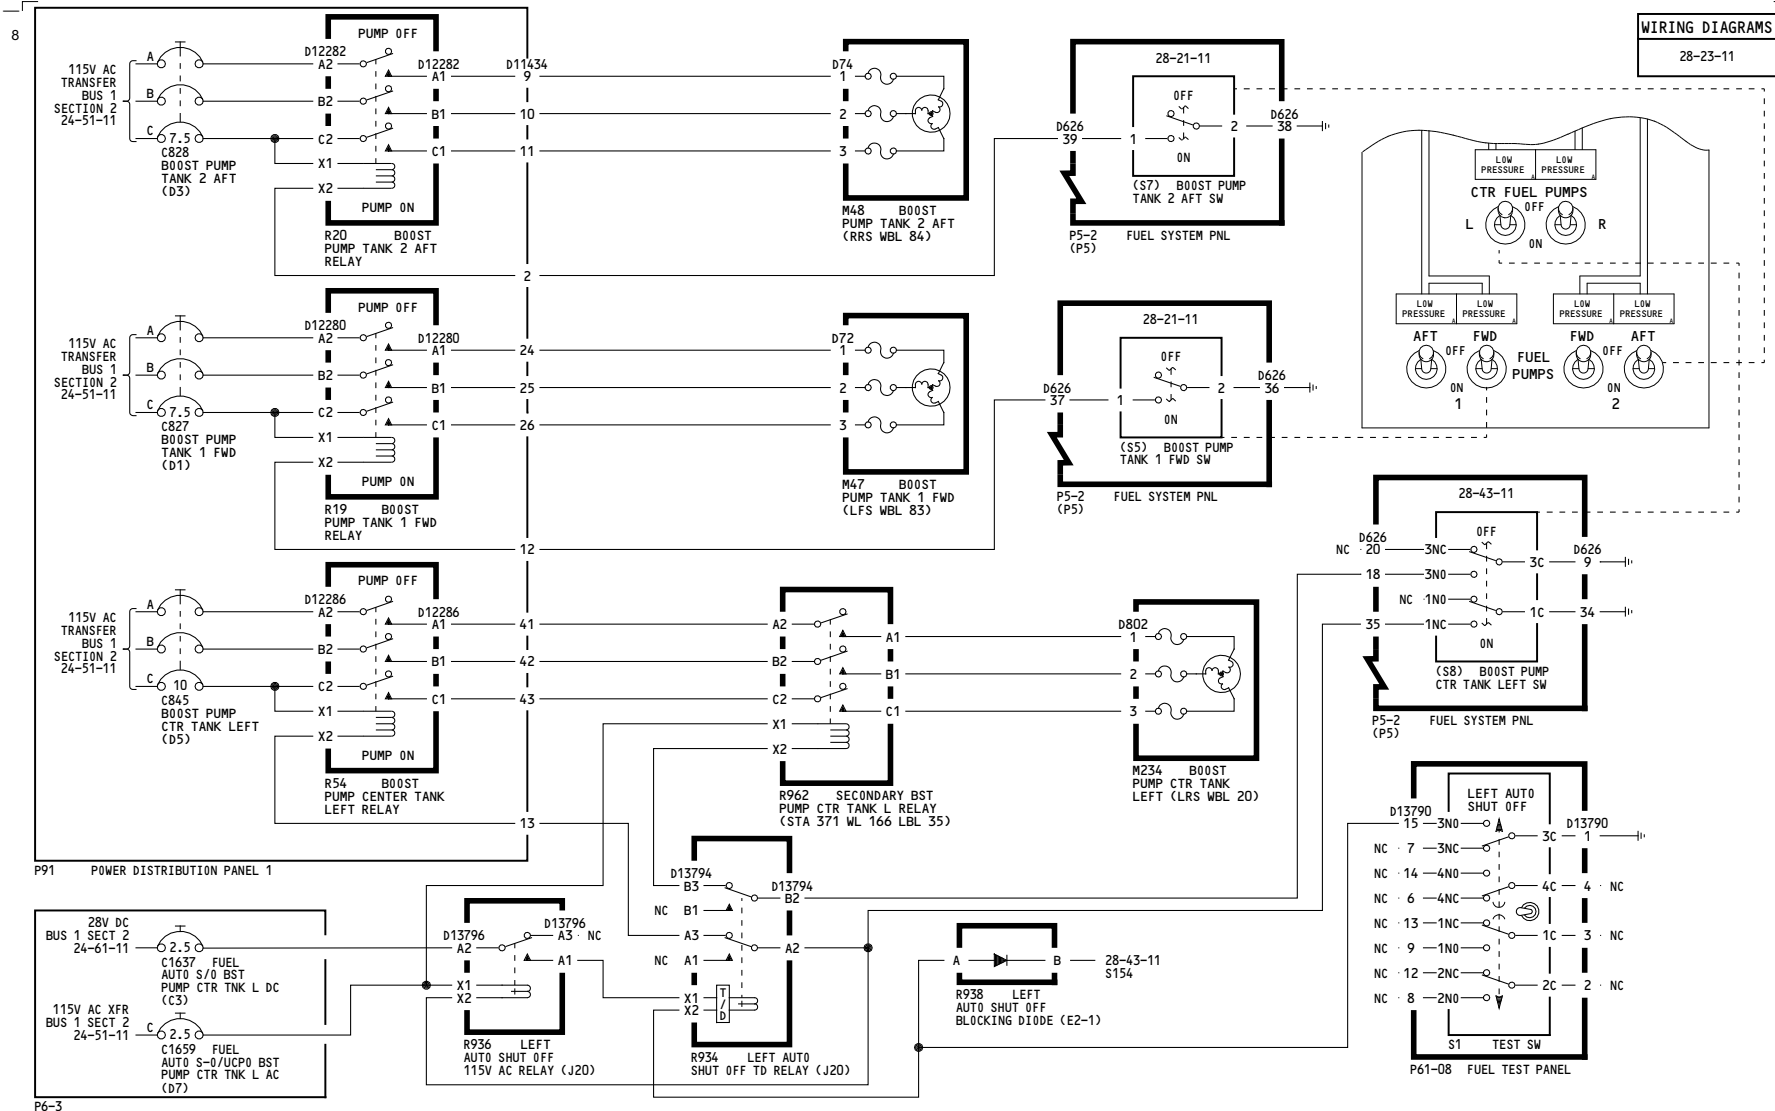


YK907, YL421

FUEL BOOST PUMPS

D280A203

28-23-11

WIRING DIAGRAMS
28-23-11

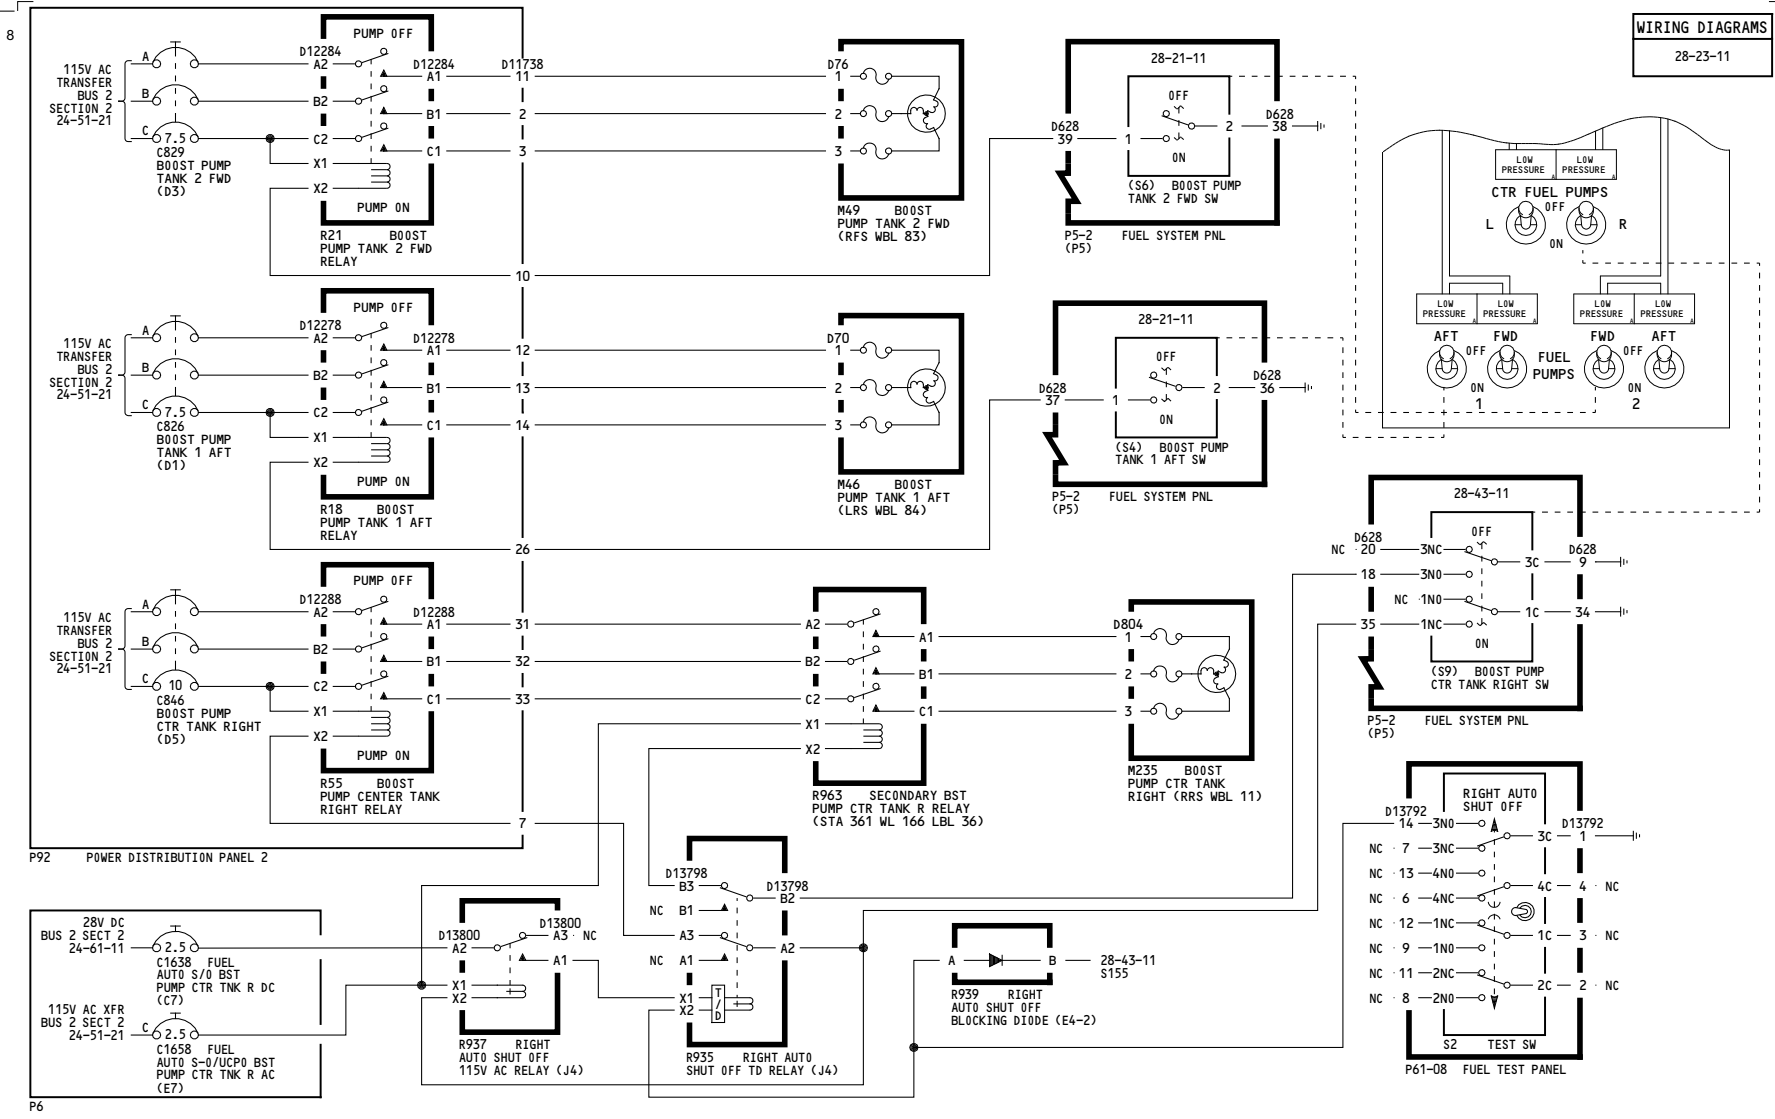


YK907, YL421

FUEL BOOST PUMPS

D280A203


28-23-11

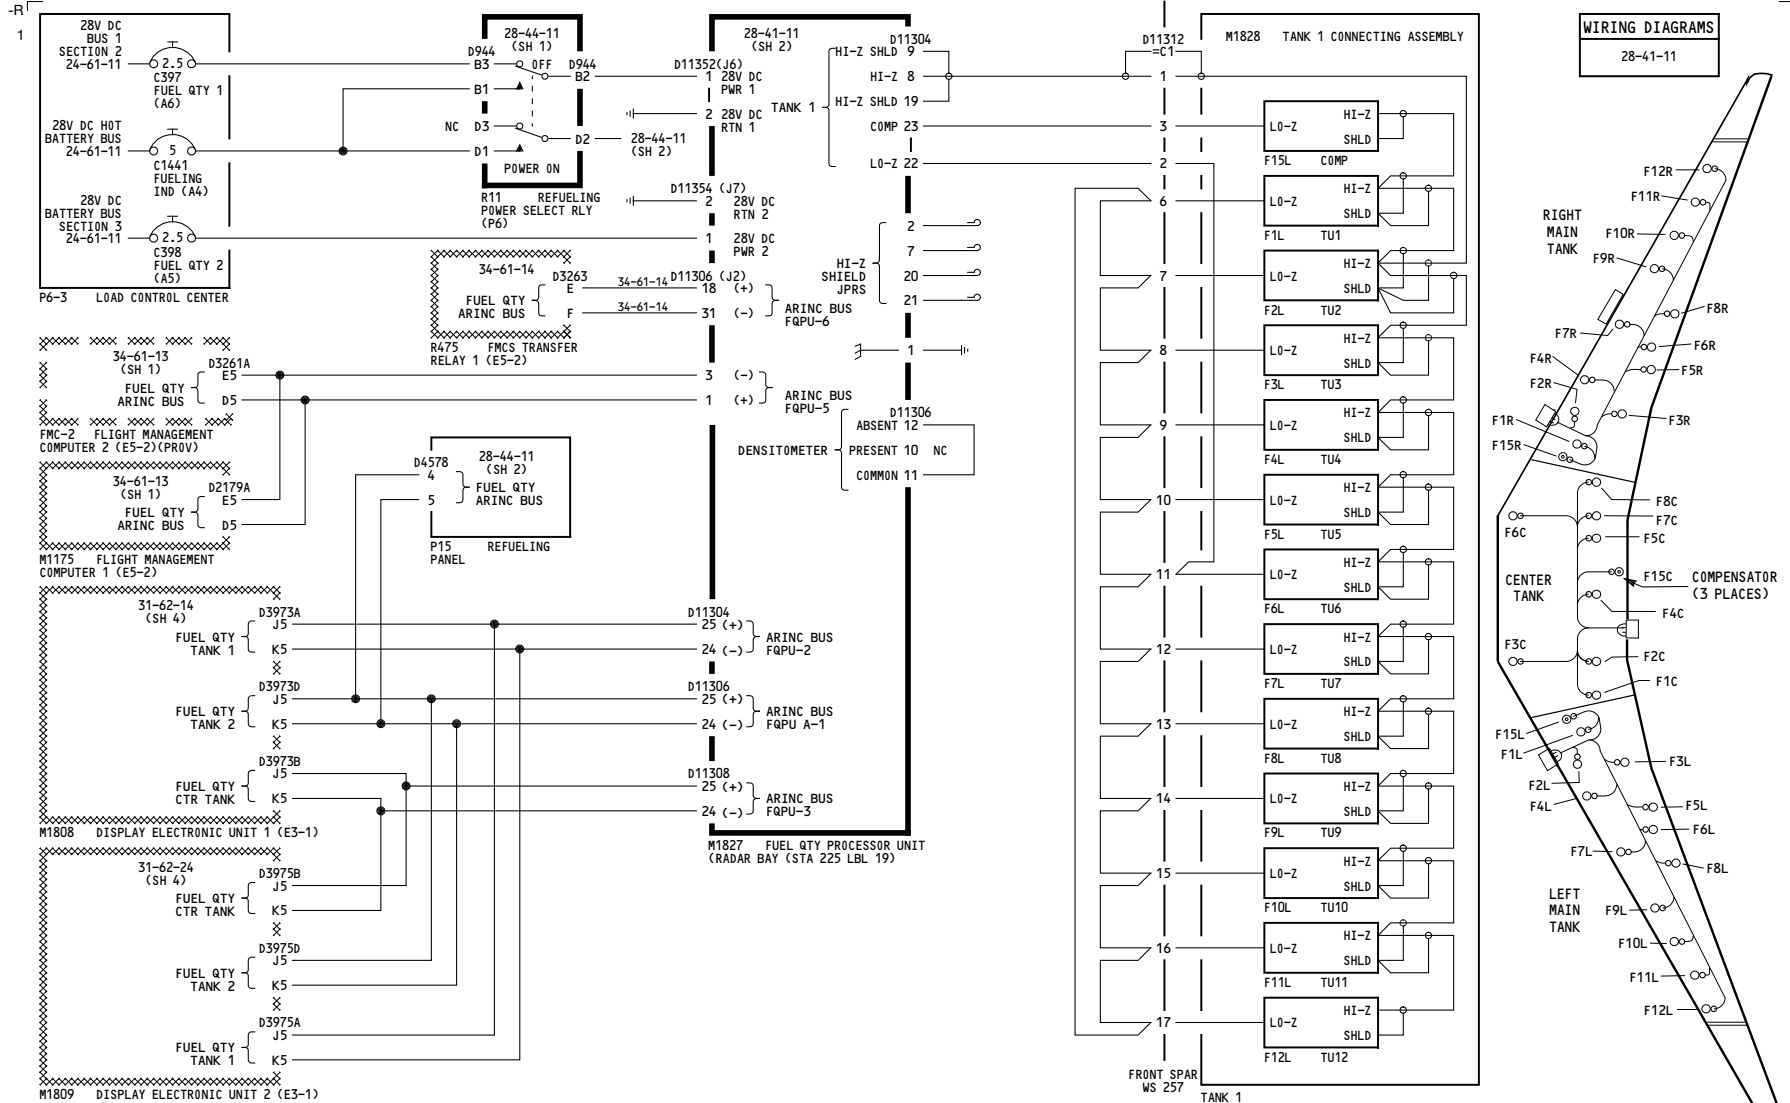

WIRING DIAGRAMS
28-41-11

| | |
|-------------|----------------------|
| YC001-YK906 | FUEL QUANTITY |
| | D280A203 |

28-41-11

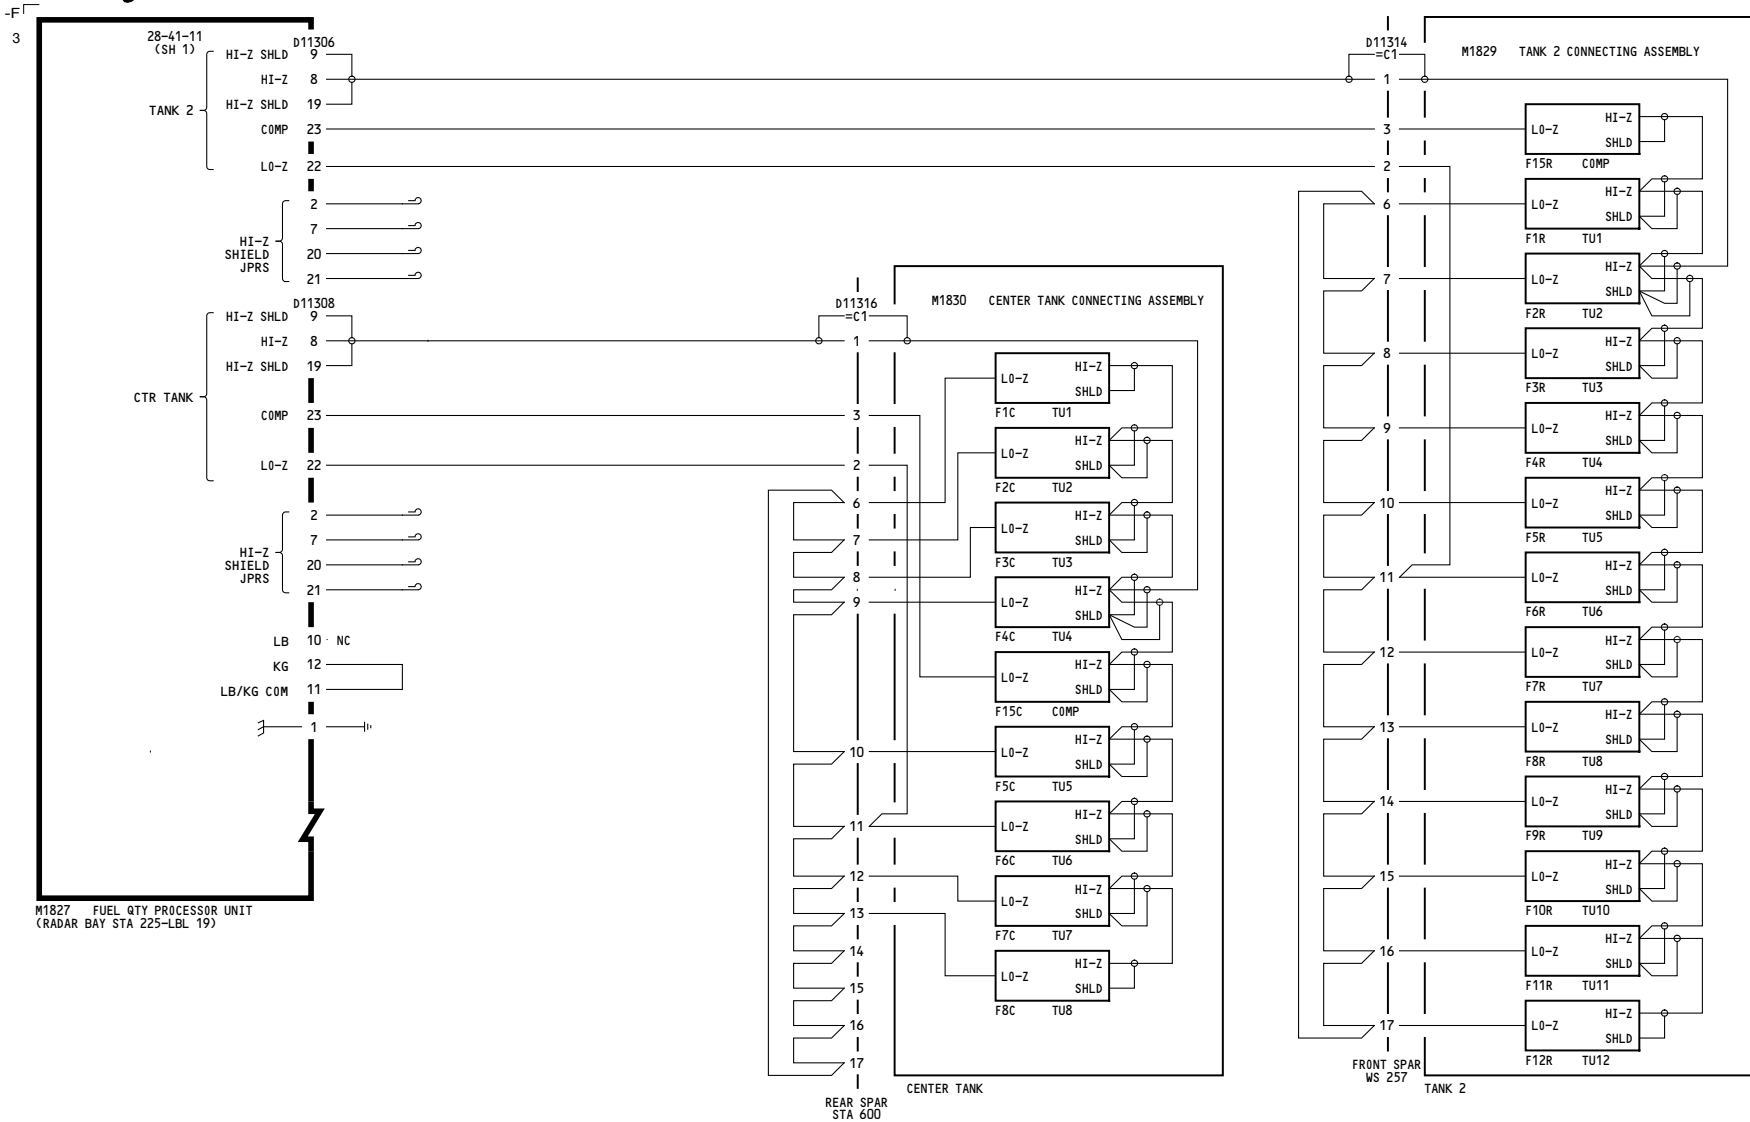


YC001-YK906


FUEL QUANTITY

D280A203

28-41-11

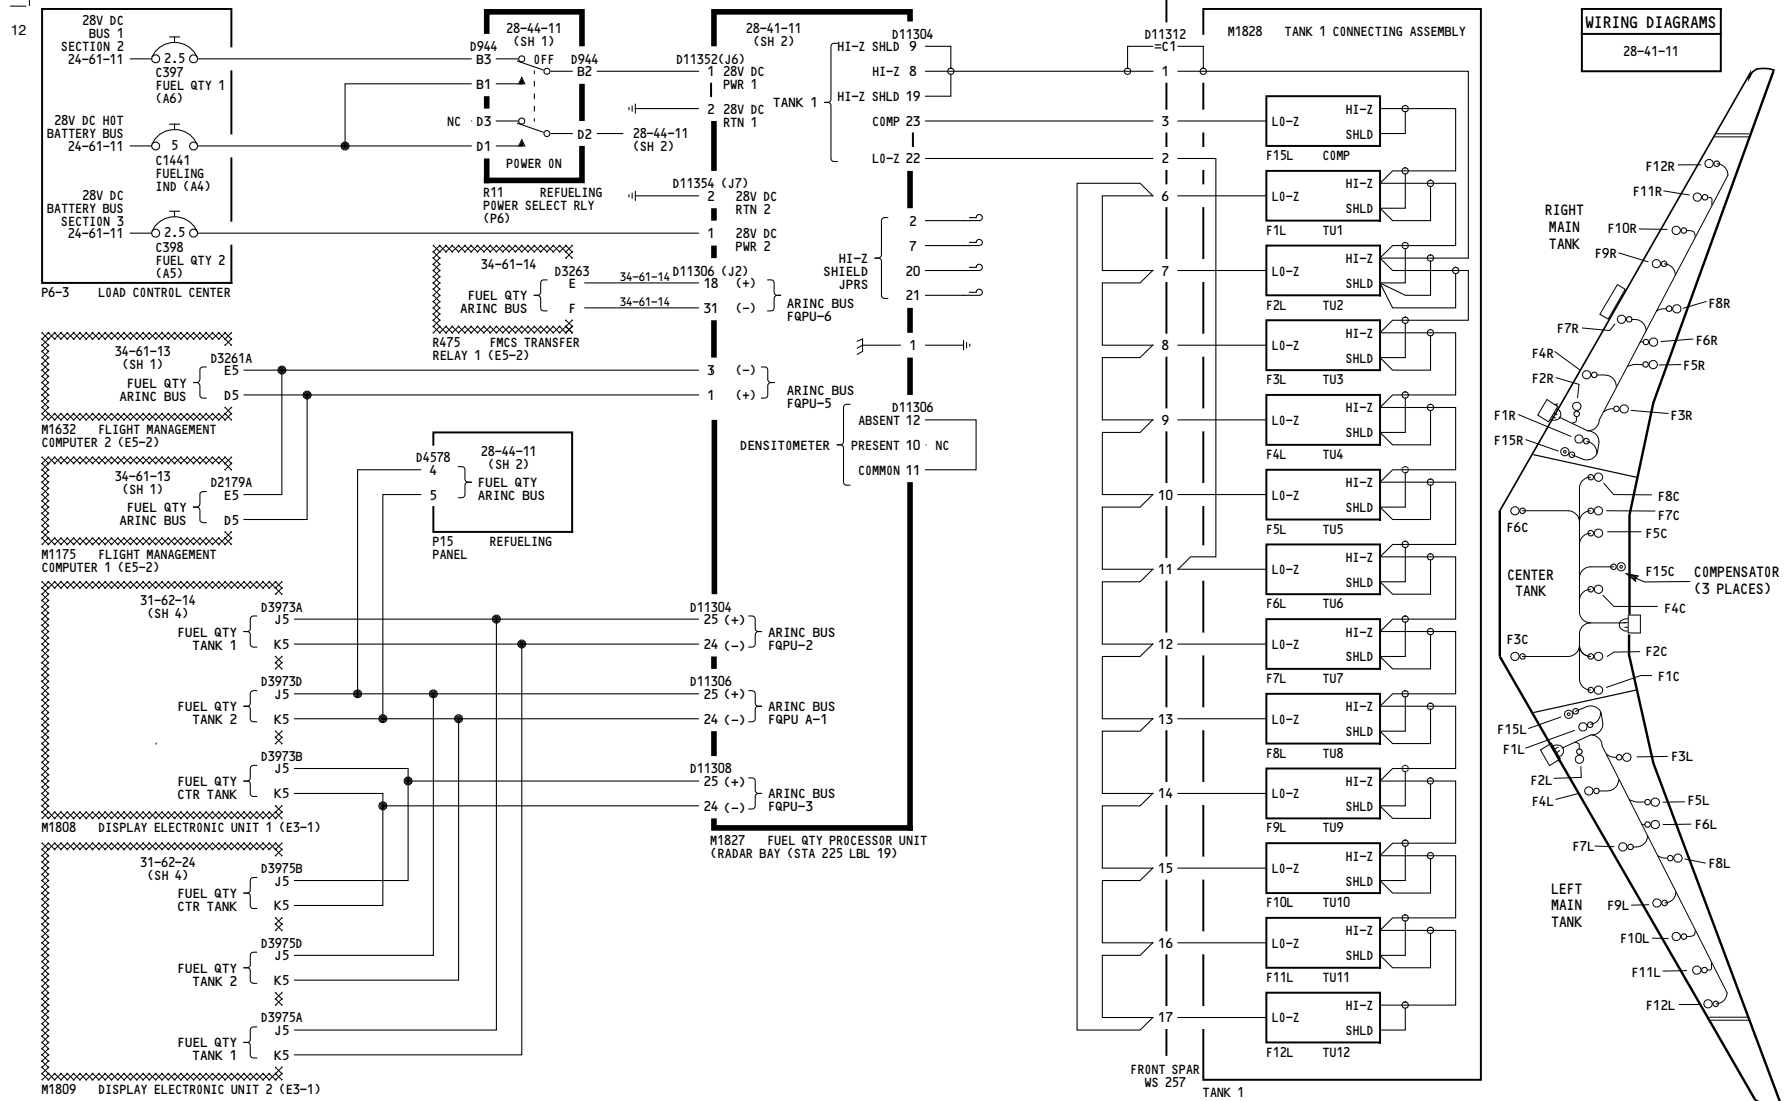


WIRING DIAGRAMS
28-41-11

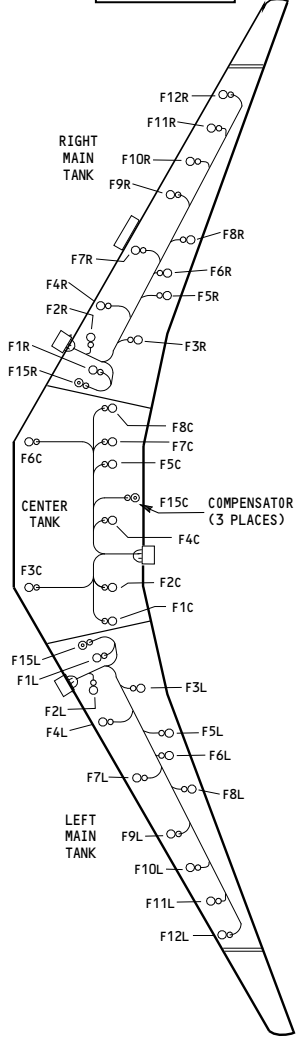

| | |
|--------------------|---|
| <p>YK907-YM670</p> | <p>FUEL QUANTITY</p> <p>D280A203</p> |
|--------------------|---|

28-41-11



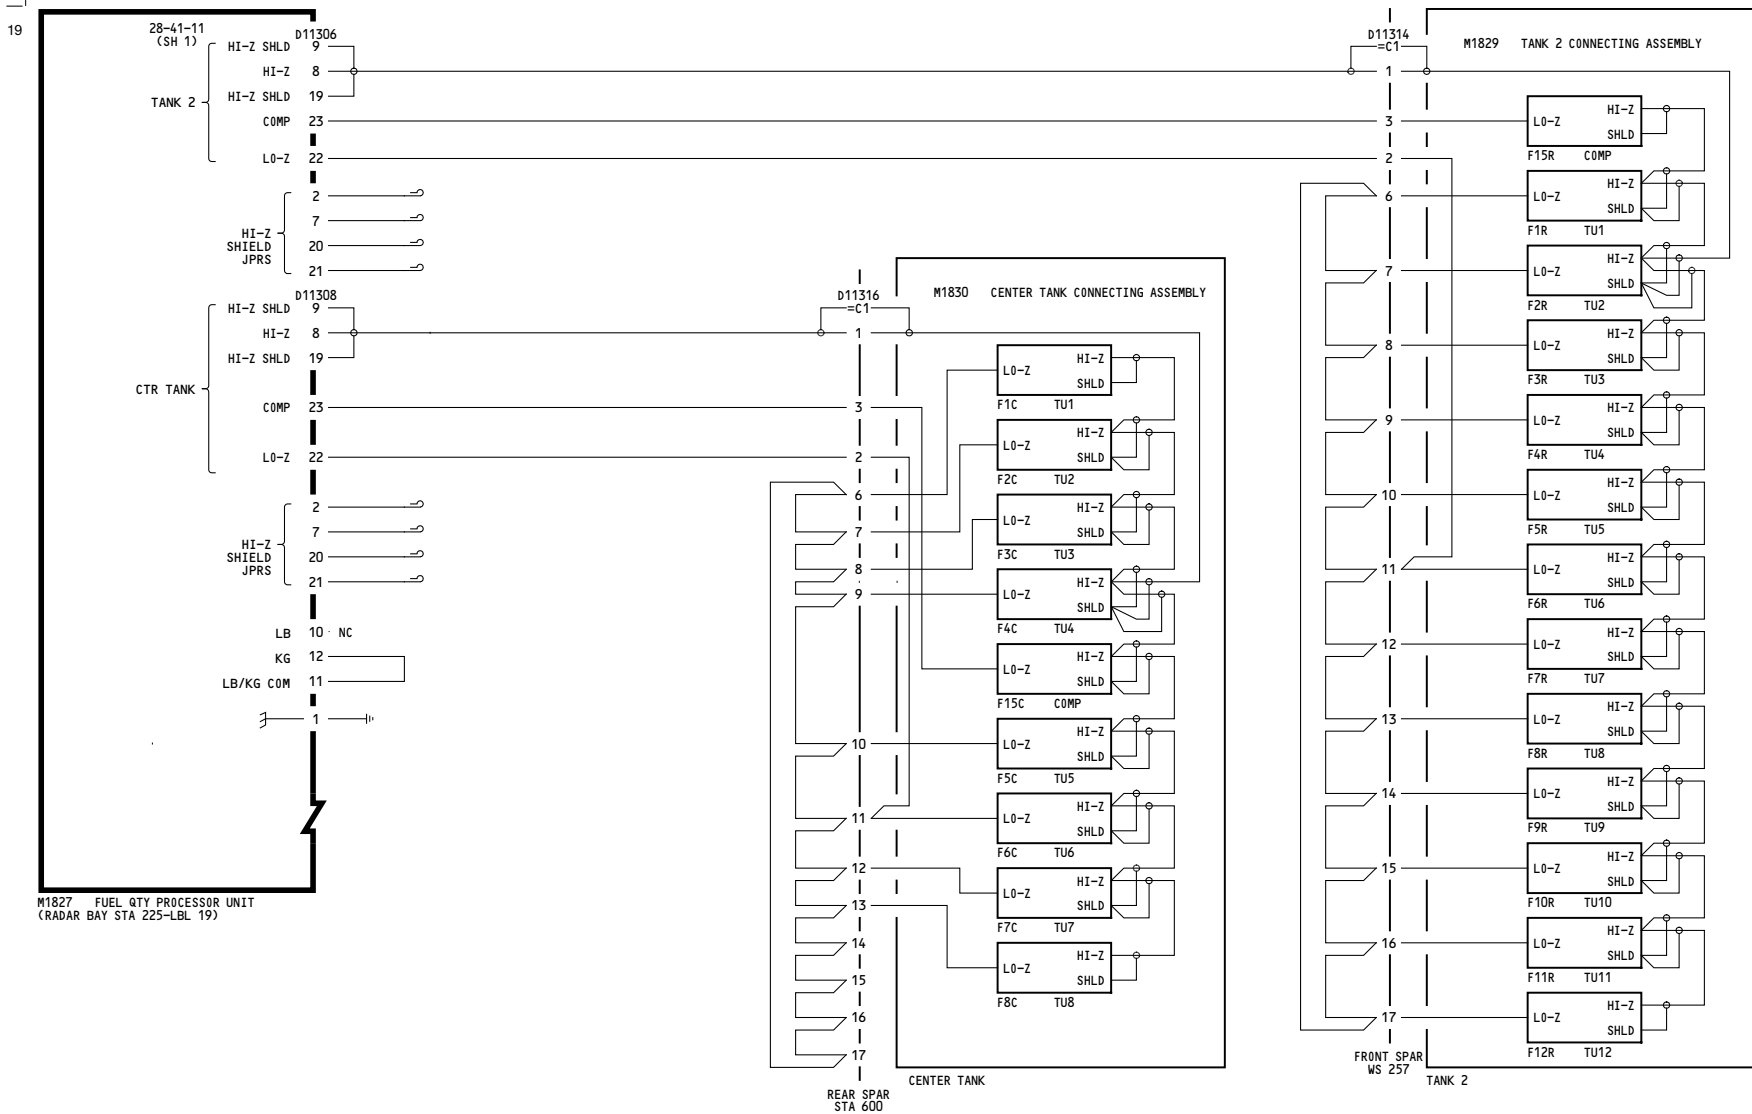


| | |
|--------------------|---|
| <p>YK907-YM670</p> | <p>FUEL QUANTITY</p> <p>D280A203</p> |
|--------------------|---|

28-41-11

-H
1




WIRING DIAGRAMS
28-42-11

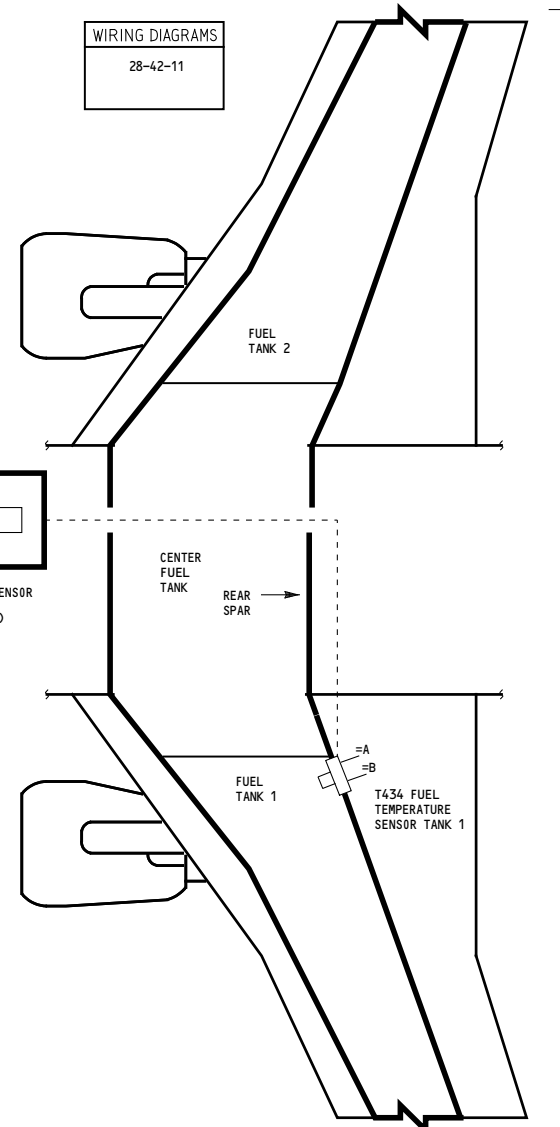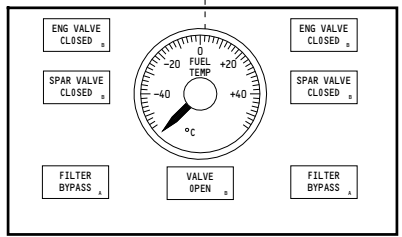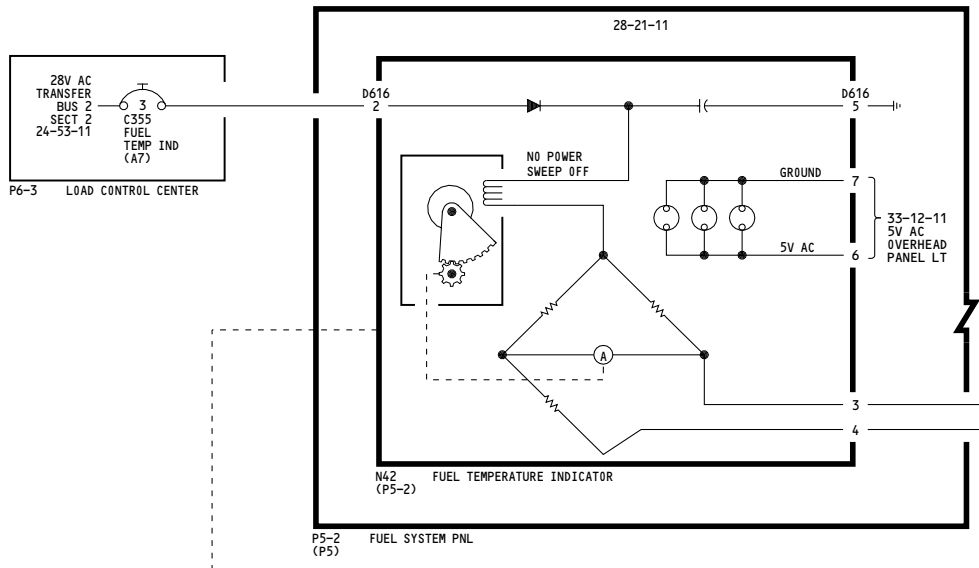

| | |
|-----|------------------------------------|
| ALL | FUEL TEMPERATURE INDICATION |
| | D280A203 |

28-42-11

 1

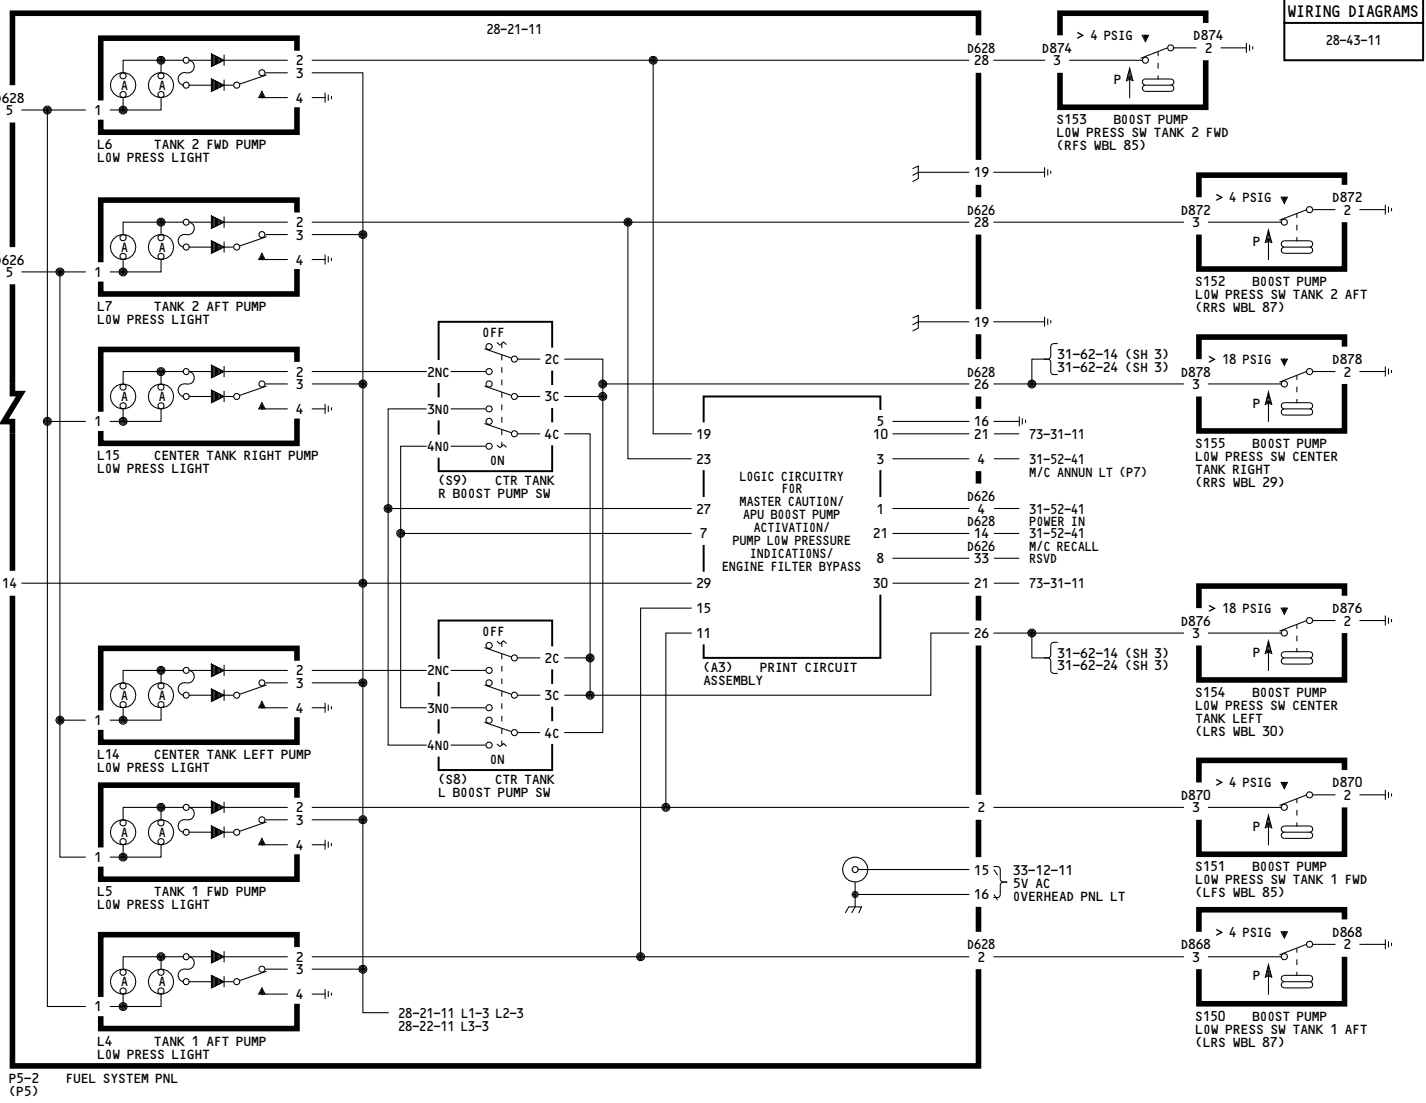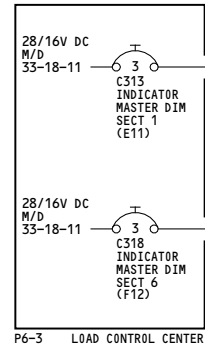


YC001-YC019

**FUEL BOOST PUMPS
LOW PRESSURE
WARNING LIGHTS**

D280A203

3

WIRING DIAGRAMS
28-43-11

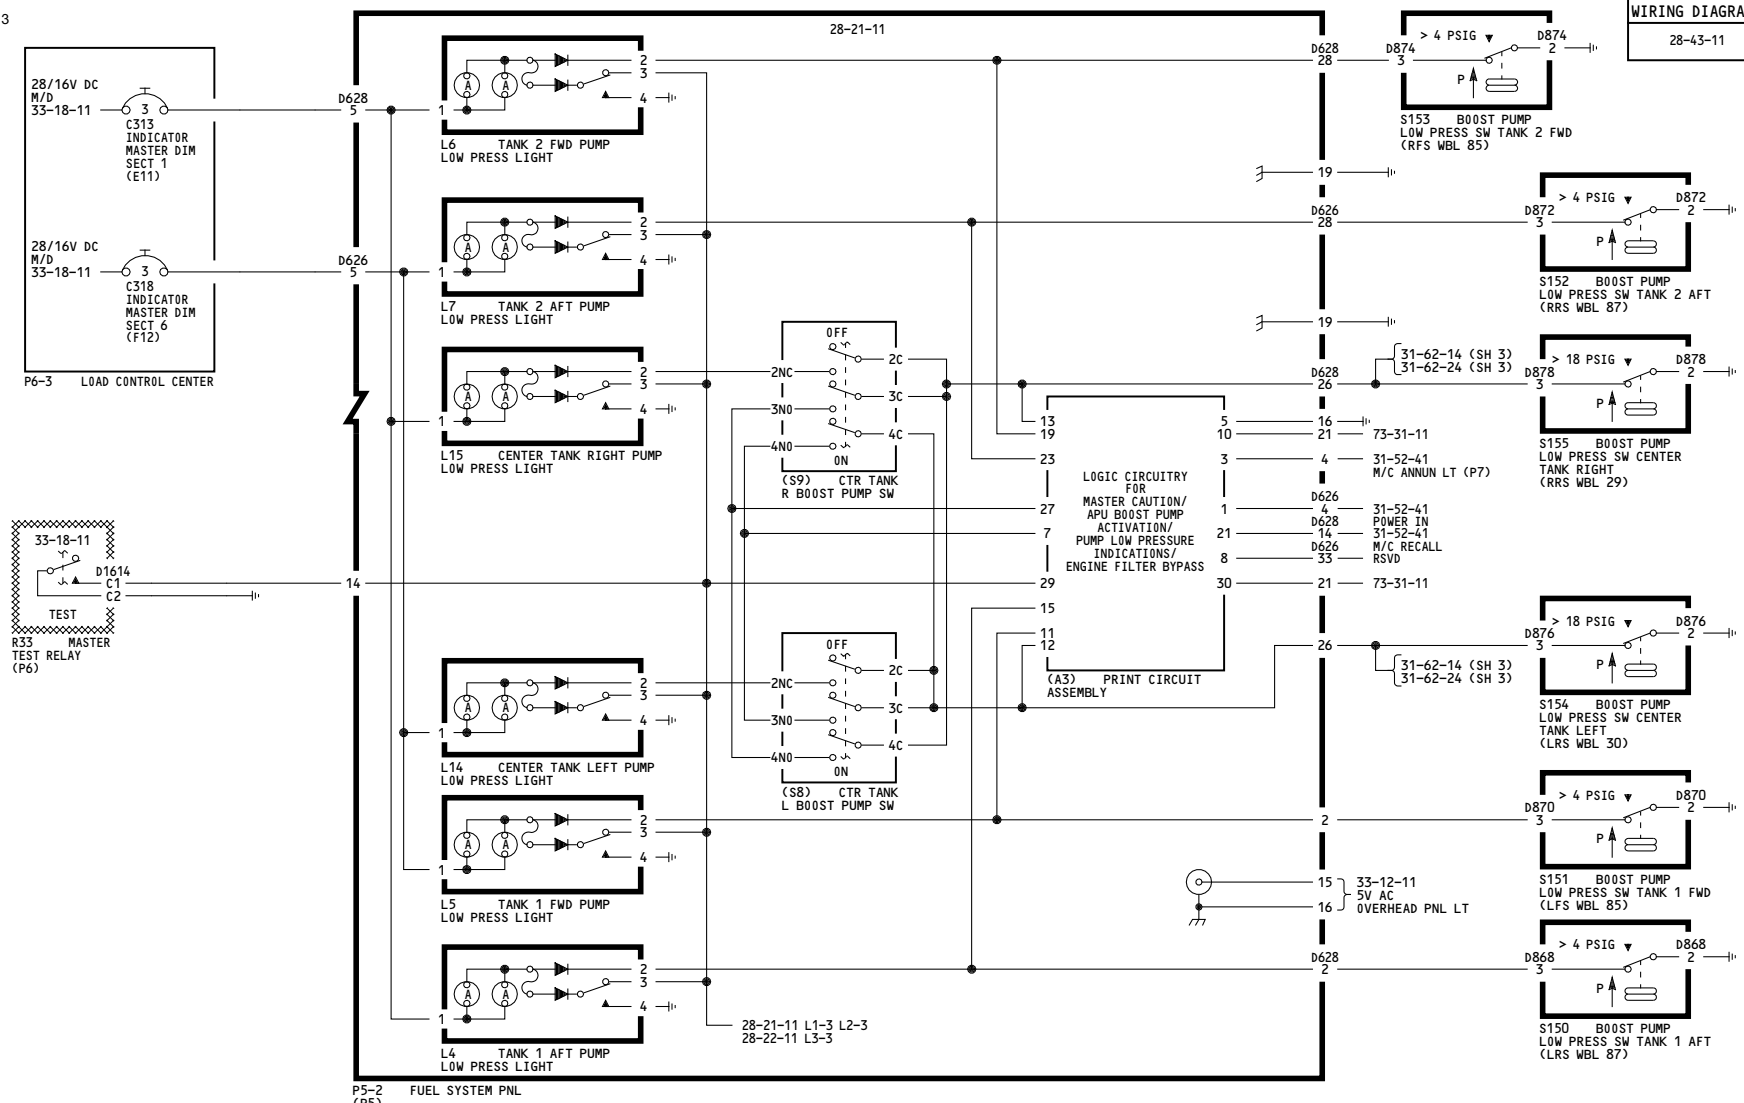

YC020-YC030

**FUEL BOOST PUMPS
LOW PRESSURE
WARNING LIGHTS**




D280A203

28-43-11

Page 102

Jul 17/2007

 -A
5

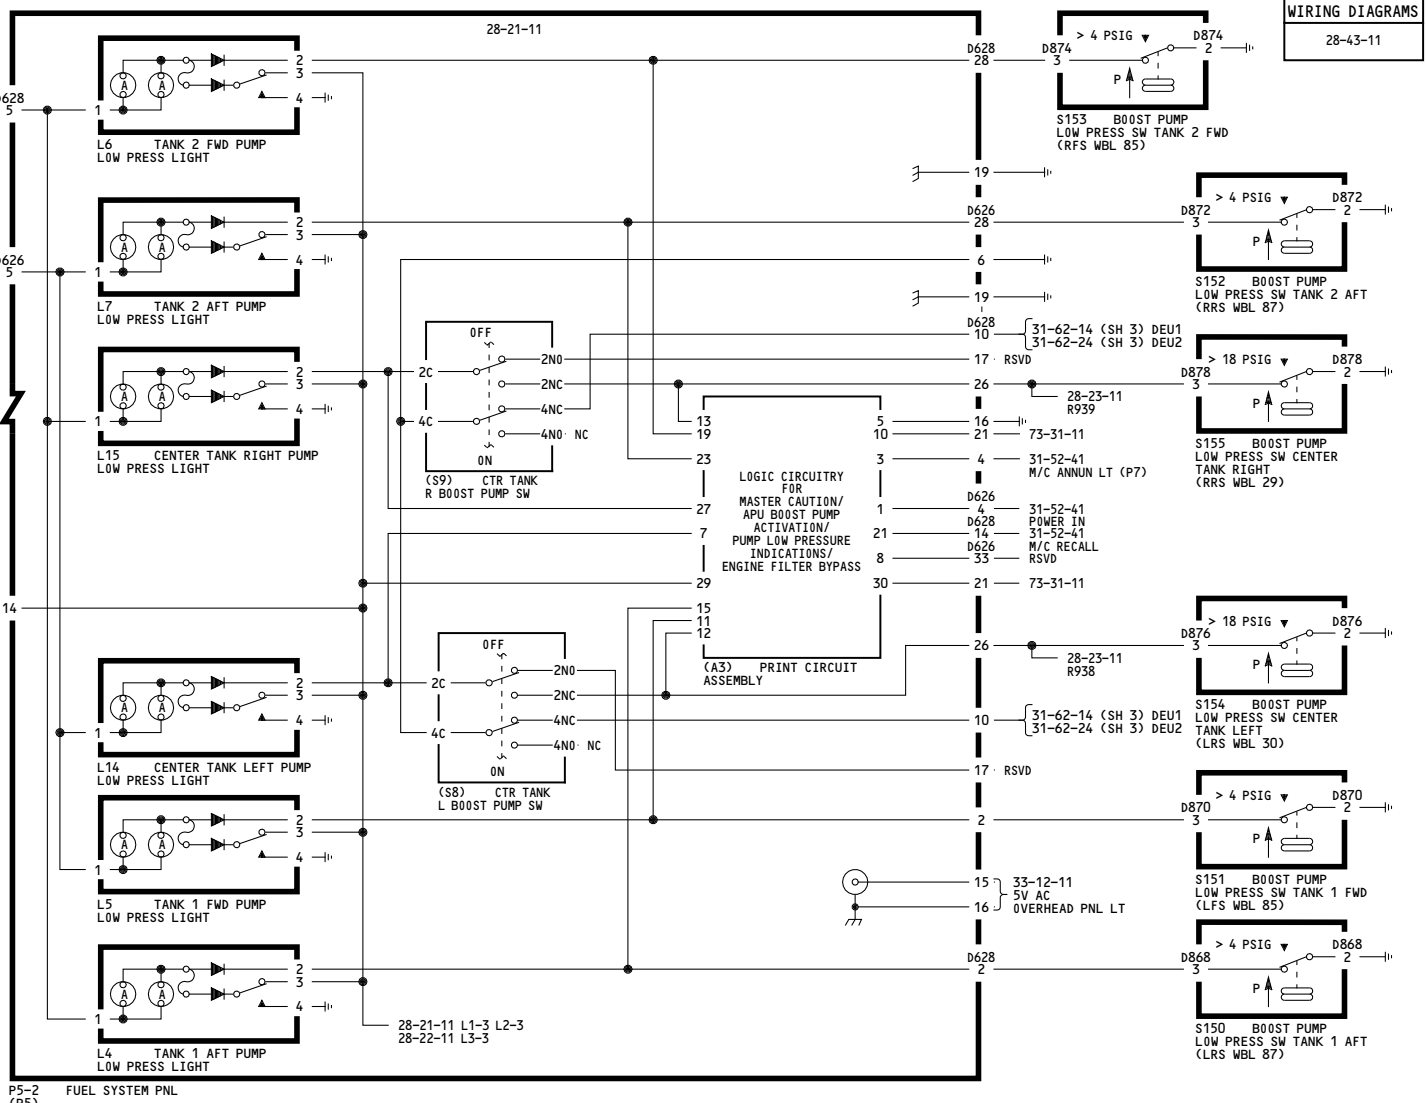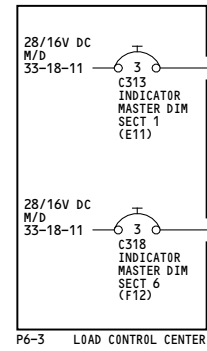


YC031-YM670

FUEL BOOST PUMPS LOW PRESSURE WARNING LIGHTS

D280A203

28-43-11

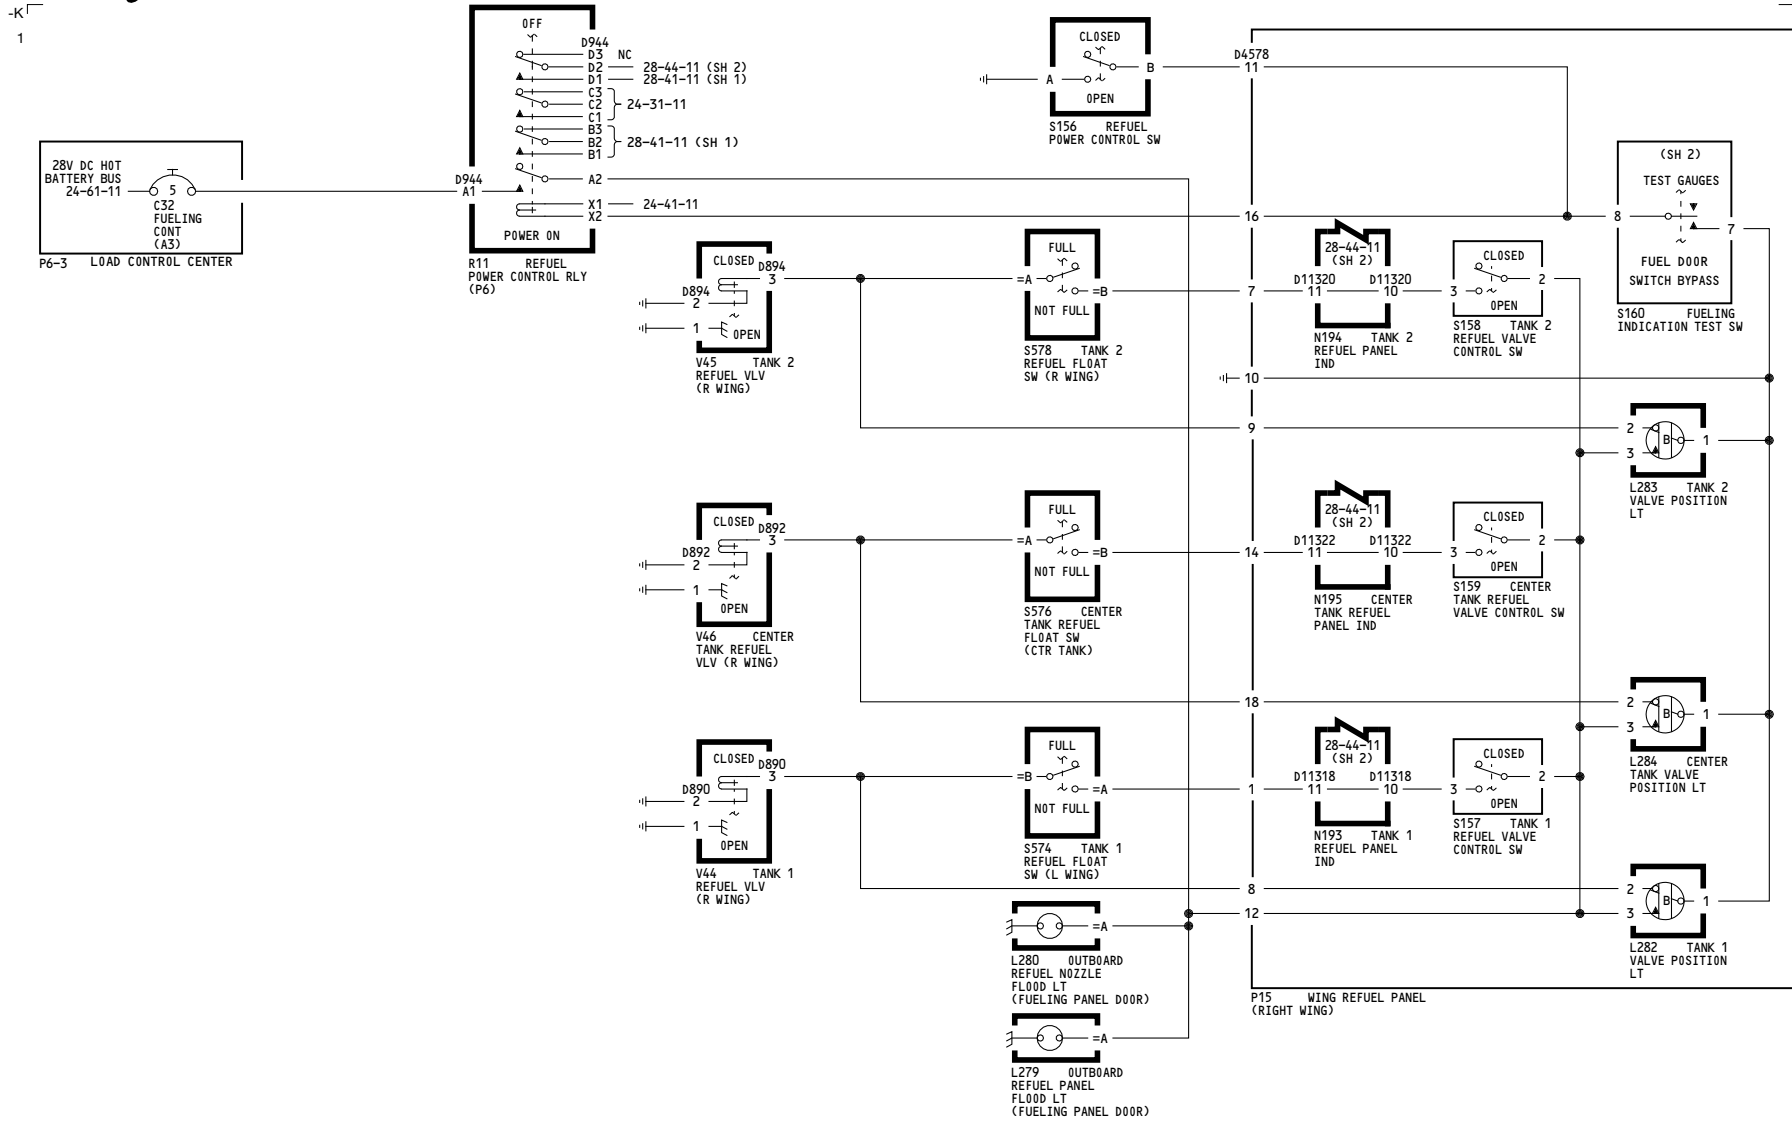


YC001-YC030, YK901-YK905

GROUND REFUELING

D280A203

28-44-11

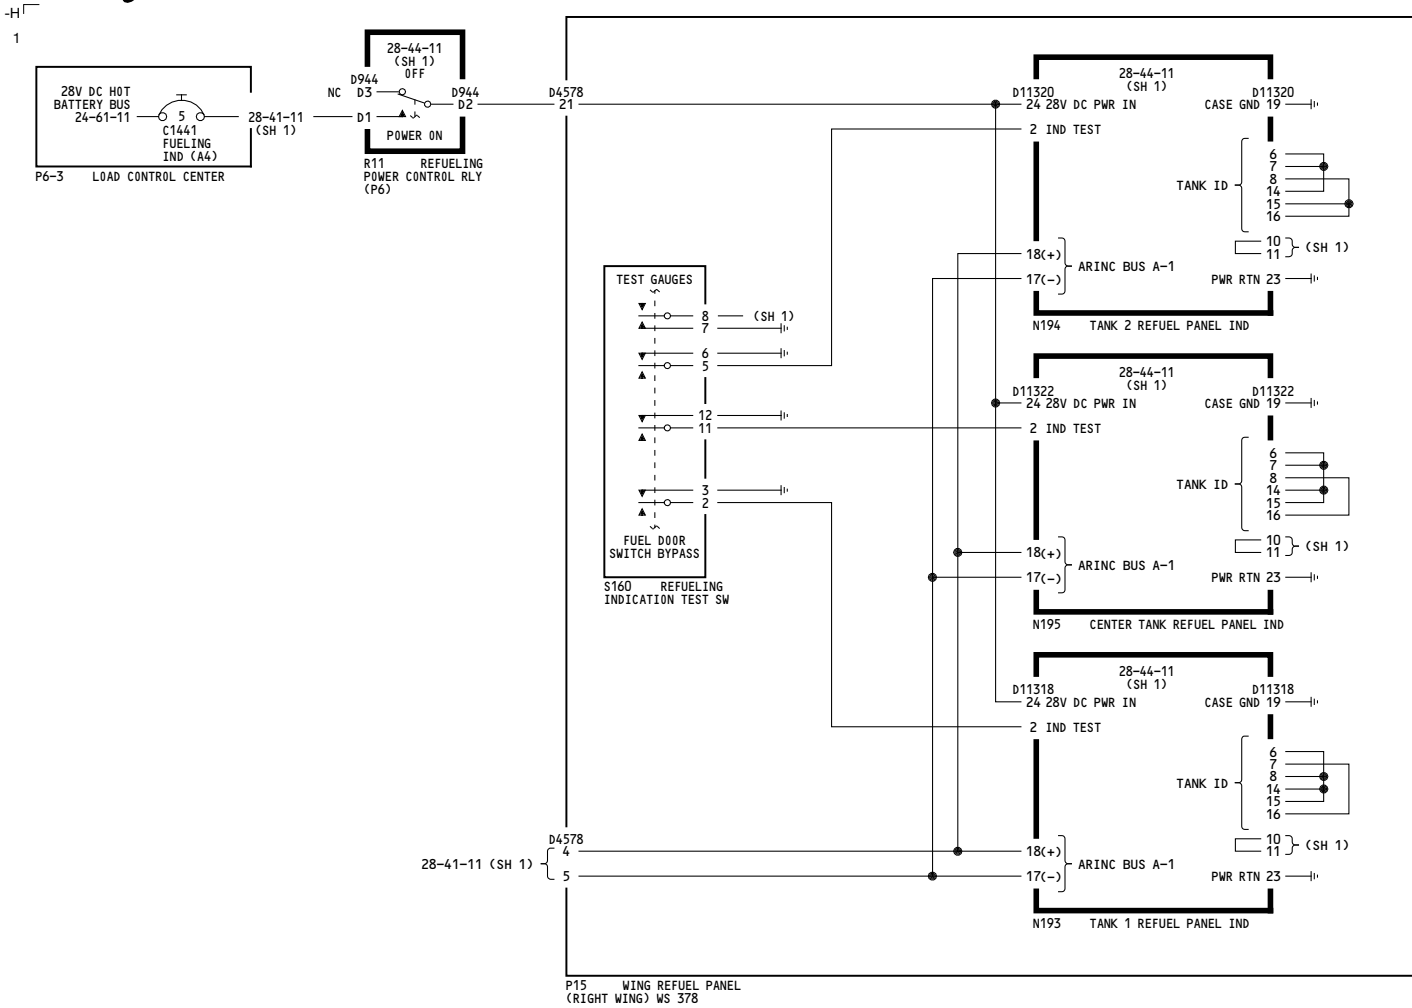


YC001-YC030, YK901-YK905

GROUND REFUELING

D280A203


28-44-11

-B
3

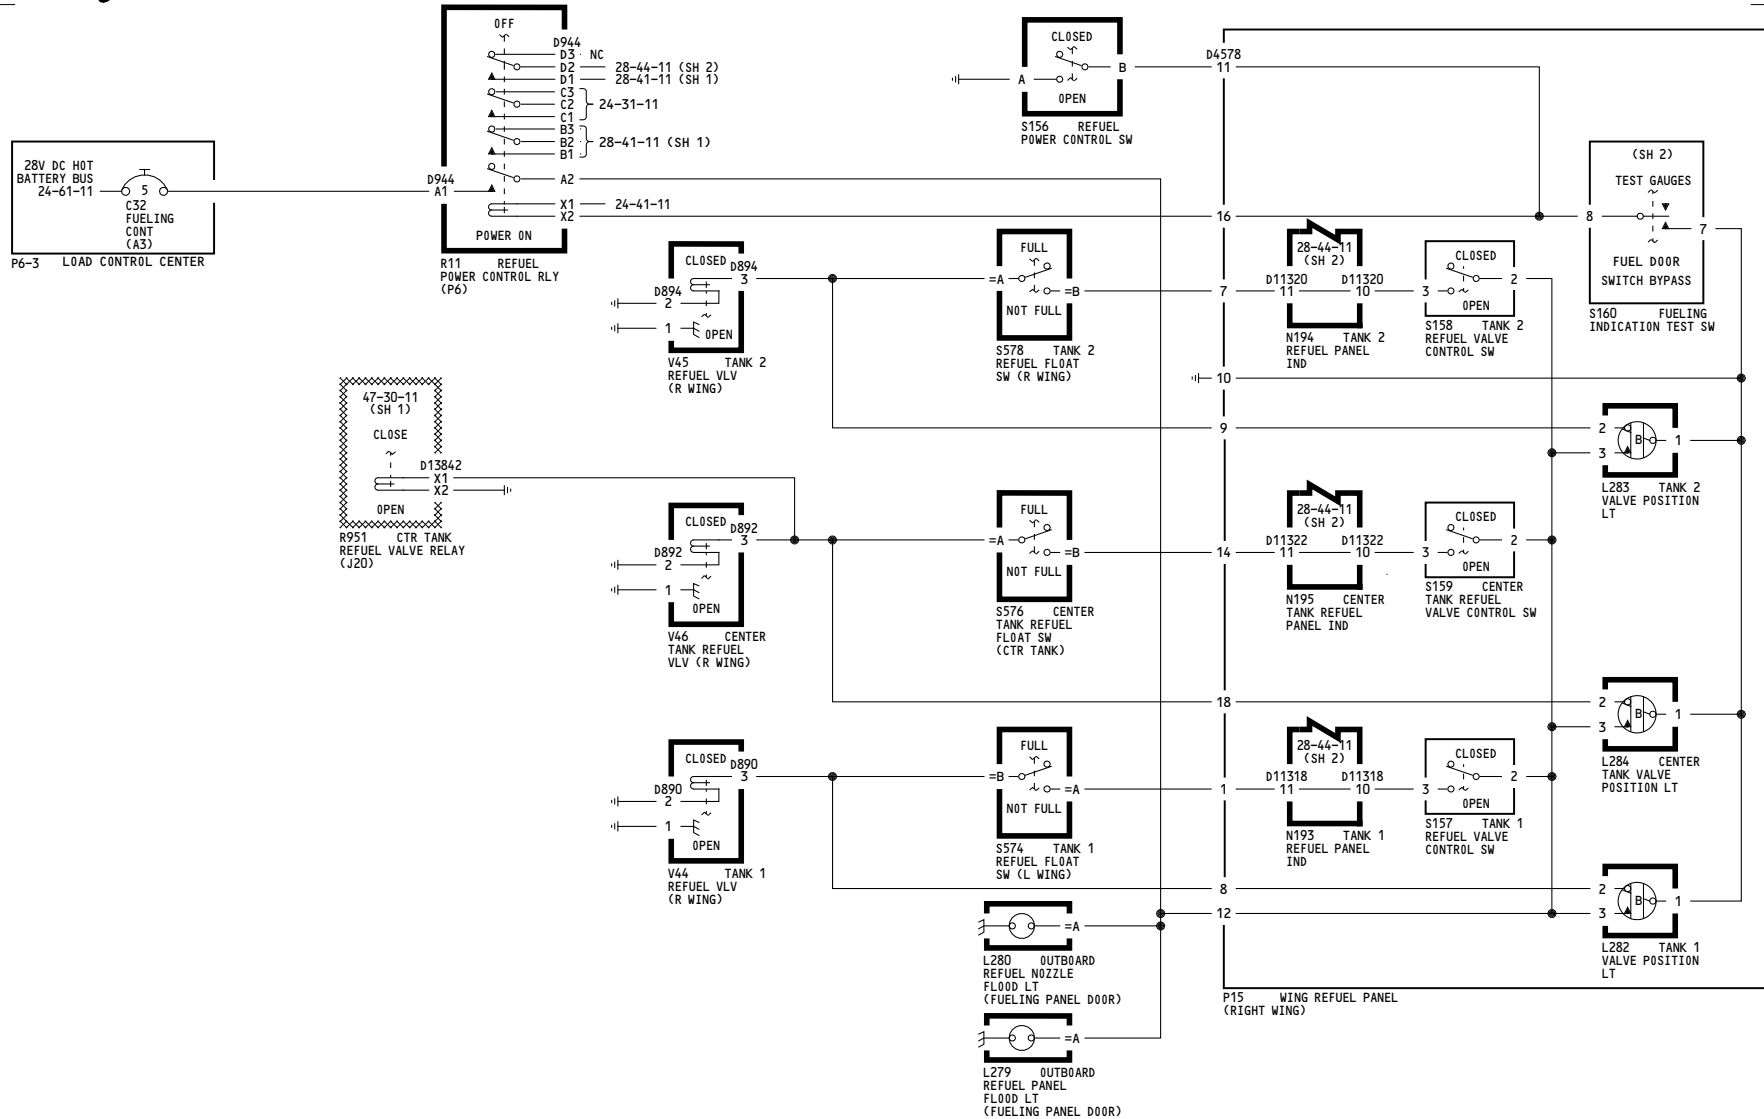

| | |
|--------------------------|---|
| YC031-YC050, YK906-YM670 | GROUND REFUELING D280A203 |
|--------------------------|---|

28-44-11

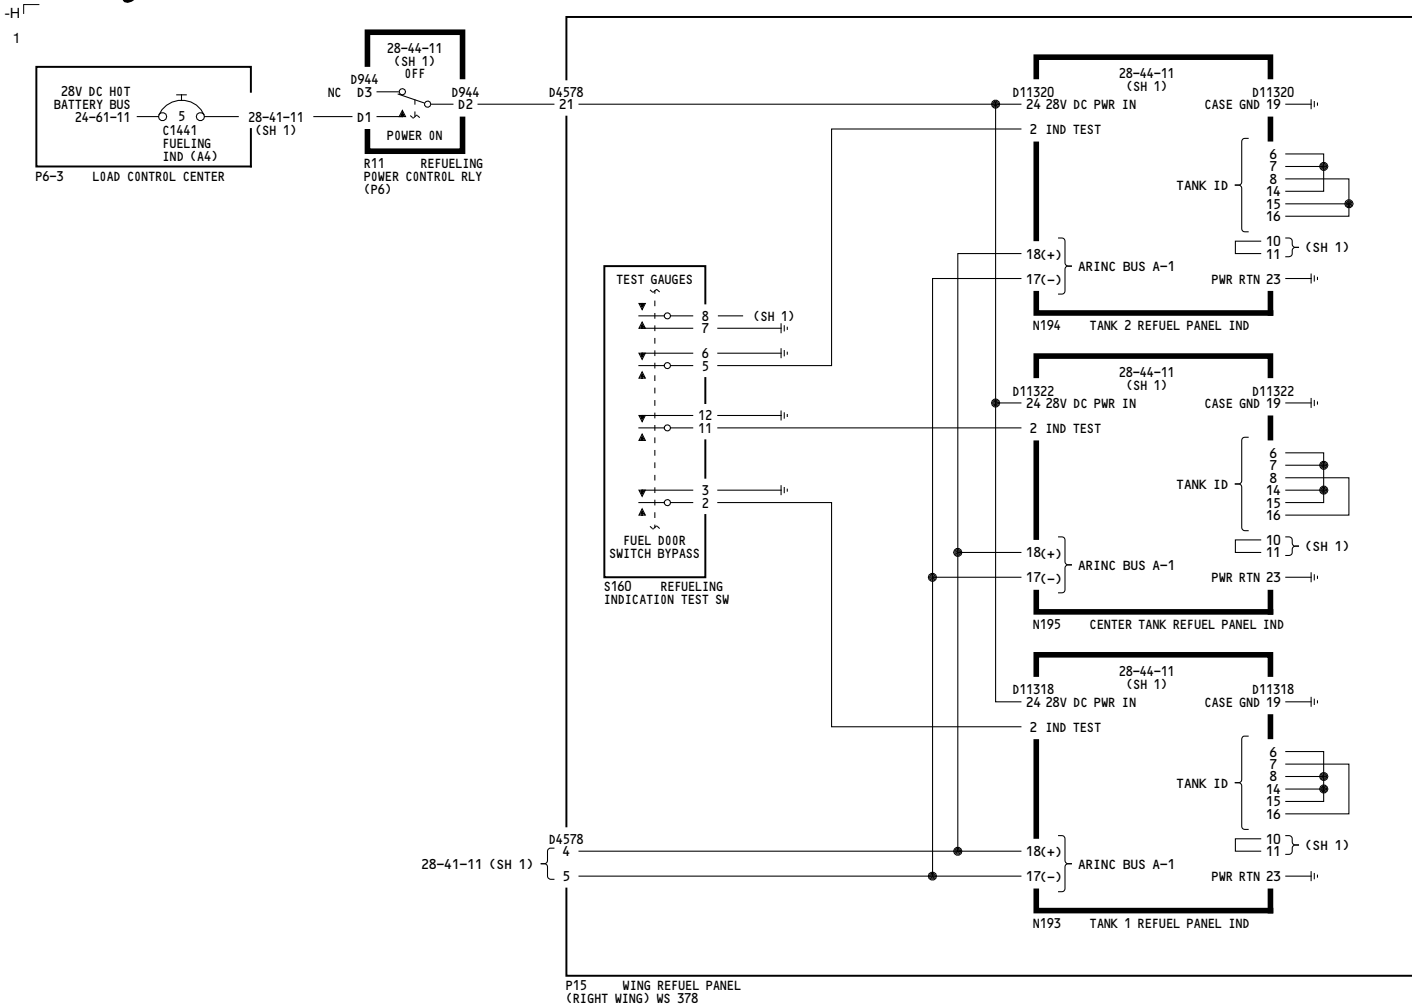

| | |
|--------------------------|---|
| YC031-YC050, YK906-YM670 | GROUND REFUELING D280A203 |
|--------------------------|---|

28-44-11