

91-04-00

**DISCONNECT BRACKET
LIST**



91-04-00
DISCONNECT BRACKET LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
EFFECTIVE PAGES			R AE0300	1	Aug 10/2009	AP0900 cont.		
	1	Aug 10/2009	R	2	Aug 10/2009	O	2	Aug 10/2009
	2	BLANK	R	3	Aug 10/2009	R AP1800	1	Aug 10/2009
R AB0200	1	Aug 10/2009	R	4	Aug 10/2009	R AP2800	1	Aug 10/2009
R AB0300	1	Aug 10/2009	R	5	Aug 10/2009	R AS0000	1	Aug 10/2009
R	2	Aug 10/2009	R AE0400	1	Aug 10/2009	O	2	Aug 10/2009
R AB0400	1	Aug 10/2009	R	2	Aug 10/2009	R AW0200	1	Aug 10/2009
R AB0500	1	Aug 10/2009	R	3	Aug 10/2009	R	2	Aug 10/2009
R	2	Aug 10/2009	R AE0500	1	Aug 10/2009	R AW0700	1	Aug 10/2009
AB0700	1	Feb 09/2009	R AE0600	1	Aug 10/2009	D	2	BLANK
R AB0800	1	Aug 10/2009	AE0800	1	May 11/2009			
R AB1000	1	Aug 10/2009		2	May 11/2009			
R	2	Aug 10/2009	AE1100	1	Feb 09/2009			
R	3	Aug 10/2009	R AF0200	1	Aug 10/2009			
R AB1100	1	Aug 10/2009	R AJ0000	1	Aug 10/2009			
R AC0500	1	Aug 10/2009	R	2	Aug 10/2009			
R AD0500	1	Aug 10/2009	R	3	Aug 10/2009			
D AE0000	1	Aug 10/2009	R	4	Aug 10/2009			
R AE0100	1	Aug 10/2009	A	5	Aug 10/2009			
R	2	Aug 10/2009	A	6	Aug 10/2009			
R	3	Aug 10/2009	R AL0600	1	Aug 10/2009			
R	4	Aug 10/2009	A	2	Aug 10/2009			
R	5	Aug 10/2009	R AL0700	1	Aug 10/2009			
R	6	Aug 10/2009	R	2	Aug 10/2009			
R AE0200	1	Aug 10/2009	R AP0600	1	Aug 10/2009			
R	2	Aug 10/2009	R	2	Aug 10/2009			
R	3	Aug 10/2009	O AP0700	1	Aug 10/2009			
A	4	Aug 10/2009	R AP0900	1	Aug 10/2009			

A = Added, R = Revised, D = Deleted, O = Overflow

DISCONNECT BRACKET LIST

D280A103

EFFECTIVE PAGES

Page 1
Aug 10/2009



Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
I AB0237A	DISCONNECT BRACKET					003	237/201/L004	ALL
	01	D11160	W5162					ALL
I AB0237B	DISCONNECT BRACKET					003	241/203/L005	ALL
	01	D11164	W6162					ALL
I AB0250A	DISCONNECT BRACKET-					006	250/195/L2	ALL
	01	D11134	W6506					YC001-YC003
	01	D11134	W5160					YC004-YC030, YK901-YM670
	02	D11132	W6506					YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	03	D10169	W6506					YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	04	D11130	W5506					YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	05	D11128	W5510					YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	06	D10167	W5506					YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
I AB0288	DISCONNECT BRACKET					005	288/289/0	ALL
	01	D00570	W4256					ALL
	02	D01128	W6242					ALL
	03	D04889P	W2589	D04889J	W3419			ALL
	03	D04889J	W3419	D04889P	W2589			ALL
	04	D37001J	W3701	D37001P	W3801			YK907-YM670
	05	D40090J	W3058	D40090P	W3144			YC001-YC030, YK901-YM670
	05			D40090P	W3144			YC031-YC050

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AB0200

Page 1 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
I AB0340A	DISCONNECT BRACKET-LEFT					009	340/295/L006	ALL
	01	D40054J	W3058	D40054P	W5142			YC001-YC030, YK901-YM670
	01			D40054P	W5142			YC031-YC050
	02	D40216J	W3158	D40216P	W3144			ALL
	03	D40196J	W3142	D40196P	W2114			YC001-YC030, YK901-YM652
	03			D40196P	W2114			YC031-YC050, YM653-YM670
	04	D40170J	W3058	D40170P	W2218			YC001-YC030, YK901-YM670
	05	D40050J	W3058	D40050P	W6242			YC001-YC030, YK901-YM670
	05			D40050P	W6242			YC031-YC050
	06	D40108J	W3158	D40108P	W3150			ALL
	09	D40102J	W3158	D40102P	W5142			ALL
I AB0340B	DISCONNECT BRACKET-RIGHT					009	340/295/R006	ALL
	01	D40096J	W4142	D40096P	W3142			YC001-YC030, YK901-YM652
	01	D40096J	W4142					YC031-YC050, YM653-YM670
	02	D42008J	W4146	D42008P	W3058			YC001-YC030, YK901-YM670
	03	D41838J	W6288	D41838P	W2114			YC001-YL430
	04	D40084J	W4258	D40084P	W4250			ALL
	06	D40292J	W4142	D40292P	W5160			YC001-YC030, YK901-YM670
	06	D40292J	W4142					YC031-YC050
	07	D40296J	W4142	D40296P	W2114			ALL
	08	D45231J	W3583	D45231P	W5303			ALL
	09	D40202J	W4258	D40202P	W6242			ALL
I AB0358	DISCONNECT BRACKET					009	358/296/L003	YK901-YM670
	01	D40353J	W3702	D40353P	W3805			YK907-YM670
	02	D40387J	W3721					YK901-YK906
	02	D40351J	W3701	D40351P	W3805			YK907-YM670
	05	D40389J	W3721					YK901-YK906
	05	D37002J	W3702	D37002P	W3802			YK907-YM670
	06	D40391J	W3721					YK901-YK906
	06	D40355J	W3703	D40355P	W3805			YK907-YM670
	07	D40357J	W3709	D40357P	W3805			YK907-YM670
	08	D40365J	W3710	D40365P	W3805			YK907-YM670
	09	D40349J	W3144	D40349P	W3805			YK907-YM670
I AB0372	DISCONNECT BRACKET-TEST RECEPTACLES					003	372/184/R050	ALL
I AB0373	DISCONNECT BRACKET					003	373/296/L013	YC001-YC050
	01	D45281J	W3583					YC001-YC013, YC016-YC018, YC020-YC030

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AB0300

Page 1

Aug 10/2009



Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
I AB0373	DISCONNECT BRACKET (continued)					003	373/296/L013	YC001-YC050
	01	D45281J	W3583	D45281P	W3599			YC015, YC019, YC031-YC050
	02	D45287J	W3577					YC001-YC013, YC016-YC018, YC020-YC030
	02	D45287J	W3577	D45287P	W3599			YC015, YC019, YC031-YC050
	03	D45283J	W3583					YC001-YC013, YC016-YC018, YC020-YC030
	03	D45283J	W3583	D45283P	W3599			YC015, YC019, YC031-YC050
I AB0387	DISCONNECT BRACKET-UPR TCAS ANT					004	387/298/R010	ALL
	01	D04625J	W4009	D04625P	W4001			ALL
	02	D04627J	W4009	D04627P	W4001			ALL
	03	D04629J	W4009	D04629P	W4001			ALL
	04	D04633J	W4009	D04633P	W4001			ALL

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AB0300

Page 2 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
I AB0405B	DISCONNECT BRACKET					002	410/288/R040	ALL
	01	D40728J	W6170	D40728P	W4170			ALL
	02	D40730J	W6172	D40730P	W4170			ALL
I AB0410	DISCONNECT BRACKET					006	410/205/R039	YK901-YM670
I AB0420A	DISCONNECT BRACKET					002	424/293/L033	ALL
	01	D40734J	W5170	D40734P	W3170			ALL
	02	D40736J	W5172	D40736P	W3170			ALL

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AB0400
Page 1 End
Aug 10/2009



Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AB0500DL	DISCONNECT BRACKET-LEFT WING					010	500I/201/L040	YC001-YL430
AB0500DL	DISCONNECT BRACKET-LEFT WING					010	500D/201/L040	YM643-YM670
	01	D41854J	W5568	D41854P	W1128			ALL
	02	D05348J	W5568	D05348P	W1128			ALL
	03	D05346J	W5568	D05346P	W1134			ALL
	04	D40318J	W5530	D40318P	W5222			ALL
	05	D40500J	W5248	D40500P	W6248			ALL
	06	D46608J	W5088					YC001-YC007, YC031-YC050, YK913-YK917, YK920, YL430, YM653-YM670
	06	D46608J	W5088	D46608P	W5074			YC008-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	07	D40312J	W5134	D40312P	W5224			ALL
	09	D40302J	W5526	D40302P	W5222			YC001-YC030, YK901-YM670
	09			D40302P	W5222			YC031-YC050
	10	D41852J	W5568	D41852P	W1134			ALL
	12	D46606J	W5094	D46606P	W5098			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	12	D46606J	W5094					YK913-YK917, YK920, YL430, YM653-YM670
AB0500DR	DISCONNECT BRACKET-RIGHT WING					010	500I/201/R061	YC001-YL430
AB0500DR	DISCONNECT BRACKET-RIGHT WING					010	500D/201/R047	YM643-YM670
	01	D40406J	W6528	D40406P	W6228			ALL
	02	D40410J	W6528	D40410P	W6122			ALL
	03	D40400J	W6530	D40400P	W6122			ALL
	05	D40404J	W6034	D40404P	W6124			ALL
	06	D40402J	W6032	D40402P	W6124			ALL
	07	D41850J	W6588	D41850P	W1126			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	07	D41850J	W6588					YK913-YK917, YK920, YL430, YM653-YM670
	08	D40416J	W6032	D40416P	W5224			ALL
	09	D41856J	W6588	D41856P	W1136			ALL
	10	D05342J	W6588	D05342P	W1136			ALL
	11	D05350J	W6588	D05350P	W1126			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	11	D05350J	W6588					YK913-YK917, YK920, YL430, YM653-YM670

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AB0500

Page 1

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AB0501DL	DISCONNECT BRACKET-LEFT WING					006	500D+7/180/L058	ALL
AB0501DR	DISCONNECT BRACKET-RIGHT WING					006	500D+7/180/R058	ALL
I AB0536L	DISCONNECT BRACKET-LEFT AC BAY					002	541/159/L025	ALL
	01	D04580J	W5102	D04580P	W5526			YC001-YC030, YK901-YM670
	01	D04580J	W5102					YC031-YC050
	02	D40056J	W5102	D40056P	W5104			ALL
I AB0536R	DISCONNECT BRACKET-RIGHT AC BAY					002	541/159/R025	ALL
	01	D04582J	W6202	D04582P	W6528			ALL
	02	D40058J	W6202	D40058P	W6230			ALL

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AB0500

Page 2 End

Aug 10/2009



Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AB0727L	DISCONNECT BRACKET-AFT CARGO COMPT					002	727/193/L38	ALL
	01	D42104J	W5032	D42104P	W1022			ALL
AB0727R	DISCONNECT BRACKET-AFT CARGO COMPT					002	727/193/R045	ALL
	01	D43104J	W6028	D43104P	W1032			ALL
	02	D46602J	W5124	D46602P	W6124			ALL

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AB0700

Page 1 End

Feb 09/2009



737-700/800 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
I AB0858	DISCONNECT BRACKET					003	858/219/R069	YC021-YM670
	01	D45289J	W3583	D45289P	W3573			YK901-YM670
	02	D45297J	W5825					YK901-YK906
	02	D45297J	W5825	D45297P	W3573			YK907-YM670
	03	D45285J	W3583	D45285P	W3573			YK901-YM670

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AB0800

Page 1 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AB1030A	DISCONNECT BRACKET-AFT PRESSURE BLKHD.					004	1030/301/R012	ALL
	01	D04245J	W3511	D04245P	W7061			YK907-YK912, YK918-YK919, YL401-YL429
	01			D04245P	W7061			YK907-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	01	D04245J	W3511					YK913-YK917, YK920, YL430
	01	D04245J	W3555	D04245P	W7061			YM643-YM652
	01	D04245J	W3555					YM653-YM670
	02	D04713J	W3523	D04713P	W7763			YK907-YK912, YK918-YK919, YL401-YL429
	02			D04713P	W7763			YK907-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	02	D04713J	W3523					YK913-YK917, YK920, YL430
	02	D04713J	W3559	D04713P	W7763			YM643-YM652
	02	D04713J	W3559					YM653-YM670
	03	D04227J	W3509	D04227P	W7057			YC001-YC007, YK907-YK912, YK918-YK919, YL401-YL429
	03			D04227P	W7057			YC001-YC007, YK907-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	03	D04227J	W3509					YK913-YK917, YK920, YL430
	03	D04227J	W3553	D04227P	W7057			YM643-YM652
	03	D04227J	W3553					YM653-YM670
	04	D04217J	W3517	D04217P	W7761			YC001-YC007, YK907-YK912, YK918-YK919, YL401-YL429
	04			D04217P	W7761			YC001-YC007, YK907-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	04	D04217J	W3517					YK913-YK917, YK920, YL430
	04	D04217J	W3557	D04217P	W7761			YM643-YM652
	04	D04217J	W3557					YM653-YM670
AB1030B	DISCONNECT BRACKET-AFT PRESSURE BLKHD.					004	1030/301/0000	ALL
	01	D04435J	W7137					YC001-YC030, YK901-YM670
	03	D04437J	W8137					ALL
AB1030C	DISCONNECT BRACKET-AFT PRESSURE BLKHD.					004	1030/301/L011	ALL
	01	D40192J	W6134	D40192P	W8030			ALL
	04	D04826J	W6134					ALL

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AB1000

Page 1

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AB1042L	DISCONNECT BRACKET -SEC 48 R					000	1042/297/L008	YC031-YC050, YK907-YL430
I AB1050L	DISCONNECT BRACKET-SEC 48 L					005	1050/296/L015	YC008-YM670
	01	D40842J	W4134	D40842P	W6134			YC008-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	01			D40842P	W6134			YK913-YK917, YK920, YL430, YM653-YM670
	02	D43393J	W3393	D43393P	W5301			YC008-YM670
	03	D43397J	W3397	D43397P	W3377			YC008-YM670
	04	D44381J	W3391	D44381P	W3381			YC008-YC030, YK901-YM670
	04			D44381P	W3381			YC031-YC050
	05	D45501J	W7381	D45501P	W5381			YC020-YC022
	05	D45501J	W7381					YC020-YC022
	05			D45501P	W5381			YC020-YC022
	05	D45501J	W5381	D45501P	W7381			YC023-YM670
	05			D45501P	W7381			YC023-YM670
	05	D45501J	W5381					YC023-YM670
I AB1050R	DISCONNECT BRACKET-SEC 48 R					006	1050/297/R008	YC008-YM670
	01	D40790J	W4726	D40790P	W5726			YC008-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	01			D40790P	W5726			YC031-YC050
	01	D40790J	W4726					YK913-YK917, YK920, YL430, YM653-YM670
	02	D40876J	W4726	D40876P	W5726			YC008-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	02			D40876P	W5726			YC031-YC050
	02	D40876J	W4726					YK913-YK917, YK920, YL430, YM653-YM670
	03	D40854J	W4724	D40854P	W5726			YC008-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	04	D43399J	W3399	D43399P	W3379			YC008-YM670
	05	D40836J	W4222	D40836P	W6222			YC008-YM670
	06	D45503J	W7381	D45503P	W5383			YC020-YC022
	06	D45503J	W7381					YC020-YC022
	06			D45503P	W5383			YC020-YC022
	06	D45503J	W5383	D45503P	W7381			YC023-YC026
	06			D45503P	W7381			YC023-YC026

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AB1000

Page 2

Aug 10/2009



Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
I AB1050R	DISCONNECT BRACKET-SEC 48 R (continued)					006	1050/297/R008	YC008-YM670
	06	D45503J	W5383					YC023-YM670
	06	D45503J	W5383	D45503P	W7383			YC028-YM670
	06			D45503P	W7383			YC028-YM670
I AB1080	DISCONNECT BRACKET-STA 1080 (SB 27-1253)					003	1080/299/0	YC001-YC030
I AB1080	DISCONNECT BRACKET-STA 1080					003	1080/299/0	ALL
	01	D40268J	W6134	D40268P	W6136			YC001-YC007
	01			D40268P	W6136			ALL
	01	D40268J	W4134	D40268P	W6136			YC008-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	02	D43387J	W3377	D43387P	W3387			YC001-YC007
	02			D43387P	W3387			ALL
	02	D43387J	W3397	D43387P	W3387			YC008-YM670
	03	D43389J	W3379	D43389P	W3389			YC001-YC007
	03			D43389P	W3389			ALL
	03	D43389J	W3399	D43389P	W3389			YC008-YM670
I AB1088	DISCONNECT BRACKET-STA 1088					001	1088/ /	ALL
		D11118	W4726					YC008-YC030, YK901-YM670
		D10912	W4726					YC008-YC030, YK901-YM670
		D10434	W4724					YC008-YK912, YK918-YK919, YL401-YL429, YM643-YM652
		D10436	W4724					YC008-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	01	D10912	W5726					YC001-YC007
	02	D10436	W5726					YC001-YC007
	03	D10434	W5726					YC001-YC007
	04	D11118	W5726					YC001-YC007
	05	D40060J	W5726	D40060P	W7538			YC001-YC007
	05			D40060P	W7538			ALL
	05	D40060J	W4724	D40060P	W7538			YC008-YK912, YK918-YK919, YL401-YL429, YM643-YM652

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AB1000

Page 3 End

Aug 10/2009



Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
I AB1156L	DISCONNECT BRACKET-SEC 48 L					001	1156/ /	ALL
	01	D40188J	W7038	D40188P	W8030			ALL
I AB1156R	DISCONNECT BRACKET SEC 48 R					001	1156/ /	ALL
	01	D40190J	W8038	D40190P	W8030			ALL

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AB1100

Page 1 End

Aug 10/2009



Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
I AC0520	DISCONNECT BRACKET					021	500I+15/180/L059	ALL
				D39911	W1184			YC001-YC030, YK901-YM670
				D39931	W1182			YC001-YC030, YK901-YM670
				D39915	W1140			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
I				D39921	W5162			ALL
I				D39923	W1176			ALL
I				D39925	W5170			ALL
I				D39927	W1178			ALL
I				D39903	W1188			ALL
I				D39905	W5566			ALL
I				D39907	W1662			ALL
I				D39901	W5166			ALL
I				D39917	W5172			ALL
I				D39919	W1174			ALL
I				D39909	W5564			ALL
I				D39913	W5562			ALL
I				D39929	W5168			ALL
I				D39933	W5164			ALL
I				D39937	W5568			ALL
I				D39938	W1180			ALL
AC0538		D13928	W5204					YC031-YC050, YK906-YM670
								YC031-YC050, YK906-YM670

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AC0500

Page 1 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
I AD0520	DISCONNECT BRACKET					022	500D+10/194/R067	ALL
				D39912	W1284			YC001-YC030, YK901-YM670
				D39936	W1284			YC001-YC030, YK901-YM670
				D39916	W1138			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
I				D39920	W1274			ALL
I				D39922	W6162			ALL
I				D39924	W1276			ALL
I				D39926	W6170			ALL
I				D39902	W6166			ALL
I				D39904	W1288			ALL
I				D39906	W6586			ALL
I				D39908	W1664			ALL
I				D39940	W1280			ALL
I				D39914	W6570			ALL
I				D39918	W6172			ALL
I				D39910	W6564			ALL
I				D39928	W1278			ALL
I				D39930	W6168			ALL
I				D39932	W1282			ALL
I				D39934	W6164			ALL
I				D39939	W6588			ALL

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AD0500

Page 1 End

Aug 10/2009



Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
I AE0101A	DISCONNECT BRACKET - E1-1 SHELF					036	//	ALL
	01	D40458J	W0111	D40458P	W5156			YC001-YC002, YC007-YC030, YK901-YM670
	01	D40458J	W0111					YC031-YC050
	02	D40454J	W0111	D40454P	W5156			YC001-YC030, YK901-YM670
	02	D40454J	W0111					YC031-YC050
	03	D45133J	W0111	D45133P	W5111			YC001-YC030, YK901-YM670
	03	D45133J	W0111					YC031-YC050
	04	D41145J	W0111	D41145P	W5161			ALL
	05	D40452J	W0111	D40452P	W5156			YC001-YC030, YK901-YM670
	05	D40452J	W0111					YC031-YC050
	06	D42311J	W0111	D42311P	W5461			YC001-YC030, YK901-YM670
	06	D42311J	W0111					YC031-YC050
	07	D41159J	W0111	D41159P	W5353			ALL
	08	D04425J	W0111	D04425P	W5301			ALL
	11	D41153J	W0111	D41153P	W5111			YC012-YC030, YK901-YM670
	11	D41153J	W0111					YC031-YC050
	12	D40364J	W0111	D40364P	W6110			YC001-YC030, YK901-YM670
	12	D40364J	W0111					YC031-YC050
	13	D41811J	W0111	D41811P	W2101			ALL
	14	D40120J	W0111	D40120P	W5568			ALL
	15	D40162J	W0111	D40162P	W5032			ALL
	16	D40180J	W0111	D40180P	W6028			ALL
	17	D41121J	W0111	D41121P	W5721			ALL
	18	D40122J	W0111	D40122P	W5166			ALL
	19	D45113J	W0111	D45113P	W5111			YC001-YC030, YK901-YM670
	19	D45113J	W0111					YC031-YC050
	20	D41155J	W0111	D41155P	W5161			ALL
	21	D43211J	W0111	D43211P	W5461			YC001-YC030, YK901-YM670
	21	D43211J	W0111					YC031-YC050
	22	D46461J	W0111	D46461P	W5461			YC001-YC030, YK901-YM670
	22	D46461J	W0111					YC031-YC050
	23	D04075J	W0111	D04075P	W5369			ALL
	24	D41821J	W0111	D41821P	W2175			ALL
	25	D41125J	W0111	D41125P	W5719			ALL
	26	D04083J	W0111	D04083P	W3381			ALL
	27	D04073J	W0111	D04073P	W5367			ALL
	28	D40510J	W0111	D40510P	W2218			YC001-YC030, YK901-YM670
	28	D40510J	W0111					YC031-YC050
	29	D04069J	W0111	D04069P	W2363			ALL

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AE0100

Page 1

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AE0101A	DISCONNECT BRACKET - E1-1 SHELF (continued)					036	//	ALL
	30	D40019J	W0111	D40019P	W2221			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	30	D40019J	W0111					YK913-YK917, YK920, YL430, YM653-YM670
	31	D45203J	W0111	D45203P	W5205			YC001-YC030, YK901-YM670
	31	D45203J	W0111					YC031-YC050
	32	D04079J	W0111	D04079P	W3377			ALL
	33	D40774J	W0111	D40774P	W6214			YK901-YM670
	35			D45515P	W5463			YC031-YC050
	35	D45515J	W0111	D45515P	W5463			YK901-YM670
	36			D45551P	W5381			YC031-YC050
	36	D45551J	W0111	D45551P	W5381			YK901-YM670
AE0101B	DISCONNECT BRACKET - E1-1 SHELF					023	//	ALL
	01	D41563J	W0111	D41563P	W5463			ALL
	02	D40464J	W0111	D40464P	W5160			YC001-YC030, YK901-YM670
	03	D41161J	W0111	D41161P	W5397			ALL
	04	D40142J	W0111	D40142P	W6166			ALL
	05	D40063J	W0111	D40063P	W5723			YC001-YC030, YK901-YM670
	05	D40063J	W0111					YC031-YC050
	06	D40948J	W0111	D40948P	W6166			ALL
	07	D40818J	W0111	D40818P	W6208			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	07	D40818J	W0111					YK913-YK917, YK920, YL430, YM653-YM670
	08	D41163J	W0111	D41163P	W5463			ALL
	09	D46023J	W0111	D46023P	W2383			YC001-YC030, YK901-YM670
	09	D46023J	W0111					YC031-YC050
	10	D43317J	W0111	D43317P	W5723			YC001-YC030, YK901-YM670
	10	D43317J	W0111					YC031-YC050
	11	D41147J	W0111	D41147P	W5163			ALL
	12	D41157J	W0111	D41157P	W5163			ALL
	13	D46013J	W0111	D46013P	W2103			YC001-YC030, YK901-YM652
	13	D46013J	W0111					YC031-YC050, YM653-YM670
	14	D40160J	W0111	D40160P	W6588			ALL
	15	D04611J	W0111	D04611P	W4001			ALL
	16	D04609J	W0111	D04609P	W4001			ALL
	17	D04615J	W0111	D04615P	W4001			ALL
	18	D04613J	W0111	D04613P	W4001			ALL
	19	D04619J	W0111	D04619P	W5001			ALL

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AE0100

Page 2

Aug 10/2009



Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
I AE0101B	DISCONNECT BRACKET - E1-1 SHELF (continued)					023	//	ALL
	20	D04617J	W0111	D04617P	W5001			ALL
	21	D04623J	W0111	D04623P	W5001			ALL
	22	D04621J	W0111	D04621P	W5001			ALL
	23	D09003J	W0111	D09003P	W9000			YC001-YC007
	23	D40064J	W0111	D40064P	W2218			YK901-YM670
I AE0102A	DISCONNECT BRACKET - E1-2 SHELF					015	312/169/R023	ALL
	01	D41211J	W5719	D41211P	W0121			YC001-YC030, YK901-YM670
	01	D41211J	W5719					YC031-YC050
	02	D45115J	W5111	D45115P	W0121			YC001-YC030, YK901-YM670
	03	D04029J	W2149	D04029P	W0121			YC001-YC030, YK901-YM670
	04	D41217J	W2177	D41217P	W0121			YC001-YC030, YK901-YM670
	04	D41217J	W2177					YC031-YC050
	05	D04205J	W2205	D04205P	W0121			YC001-YC030, YK901-YM670
	06	D41827J	W2651	D41827P	W0121			YC001-YC030, YK901-YM670
	08	D04269J	W5189	D04269P	W0121			YC001-YC030, YK901-YM670
	10	D45201J	W5205	D45201P	W0121			YC001-YC030, YK901-YM670
	12	D41213J	W5723	D41213P	W0121			YC001-YC030, YK901-YM670
	13	D41127J	W5721	D41127P	W0121			YC001-YC030, YK901-YM670
	13	D41127J	W5721					YC031-YC050
I AE0102B	DISCONNECT BRACKET - E1-2 SHELF					008	//	ALL
	01	D04607J	W5039	D04607P	W0121			YC001-YC030, YK901-YM670
	01	D04607J	W5039					YC031-YC050
	02	D41215J	W5183	D41215P	W0121			YC001-YC030, YK901-YM670
	02	D41215J	W5183					YC031-YC050
	03	D42943J	W3609	D42943P	W0141			ALL
	04	D04121J	W7187	D04121P	W0121			YC001-YC030, YK901-YM670
	04	D04121J	W7187					YC031-YC050
	05	D04603J	W5363	D04603P	W0121			YC001-YC030, YK901-YM670
	05	D04603J	W5363					YC031-YC050
	06	D04027J	W3143	D04027P	W0141			ALL
	07	D04025J	W3141	D04025P	W0121			YC001-YC030, YK901-YM670
	07	D04025J	W3141					YC031-YC050
	08	D42941J	W3607	D42941P	W0121			YC001-YC030, YK901-YM670
I AE0103A	DISCONNECT BRACKET - E1-3 SHELF					022	312/170/L025	ALL
	02	D04133J	W0131	D04133P	W5419			YC001-YC019
	02	D04133J	W0131					ALL
	02	D04133J	W0131	D04133P	W5413			YC020-YM670

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AE0100

Page 3

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
I AE0103A	DISCONNECT BRACKET - E1-3 SHELF (continued)					022	312/170/L025	ALL
	03	D46051J	W0131	D46051P	W2661			ALL
	04	D43048J	W0131	D43048P	W6730			ALL
	05	D41337J	W0131	D41337P	W3307			ALL
	06	D41400J	W0131	D41400P	W2022			ALL
	07	D43040J	W0131	D43040P	W6528			ALL
	08	D40488J	W0131	D40488P	W5158			ALL
	10	D40344J	W0131	D40344P	W5610			ALL
	11	D40498J	W0131	D40498P	W5156			YC001-YC030, YK901-YM670
	11	D40498J	W0131					YC031-YC050
	12	D04123J	W0131	D04123P	W2403			YC001-YC030
	12	D04123J	W0131					YC001-YC030, YK901-YM670
	12	D04123J	W0131	D04123P	W5107			YK901-YM670
	13	D04149J	W0131	D04149P	W2307			ALL
	14	D40466J	W0131	D40466P	W5160			YC001-YC030, YK901-YM670
	14	D40466J	W0131					YC031-YC050
	15	D43010J	W0131	D43010P	W5234			ALL
	16	D45227J	W0131	D45227P	W5303			ALL
	17	D41831J	W0131	D41831P	W2651			YC001-YC030, YK901-YM670
	17	D41831J	W0131					YC031-YC050
	18	D04195J	W0131	D04195P	W5189			YC001-YC030, YK901-YM670
	18	D04195J	W0131					YC031-YC050
	19	D41509J	W0131	D41509P	W5719			ALL
	20	D40810J	W0131	D40810P	W6506			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652 YK913-YK917, YK920, YL430, YM653-YM670
	20	D40810J	W0131					ALL
	21	D04181J	W0131	D04181P	W3311			ALL
	22	D41131J	W0131	D41131P	W5723			YC001-YC030, YK901-YM670
	22	D41131J	W0131					YC031-YC050
I AE0104A	DISCONNECT BRACKET - E1-4 SHELF					030	312/160/R023	ALL
	01	D08019J	W2465	D08019P	W0141			ALL
	02	D05971J	W5457	D05971P	W0141			ALL
	03	D04081P	W0141	D04081J	W3379			ALL
	03	D04081J	W3379	D04081P	W0141			ALL
	05	D45143J	W5121	D45143P	W0141			YC001-YC030, YK901-YM670
	05			D45143P	W0141			YC031-YC050
	06	D04311J	W2251	D04311P	W0141			ALL
	07	D40049J	W2205	D40049P	W0141			YC001-YC030, YK901-YM670
	07			D40049P	W0141			YC031-YC050

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AE0100

Page 4

Aug 10/2009



Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
I AE0104A	DISCONNECT BRACKET - E1-4 SHELF (continued)					030	312/160/R023	ALL
	08	D40047J	W5723	D40047P	W0141			YC001-YC030, YK901-YM670
	08			D40047P	W0141			YC031-YC050
	09	D46011J	W2103	D46011P	W0141			YC001-YC030, YK901-YM652
	09			D46011P	W0141			YC031-YC050, YM653-YM670
	10	D46031J	W2383	D46031P	W0141			YC001-YC030, YK901-YM670
	11	D41463J	W5463	D41463P	W0141			ALL
	12	D45123J	W5121	D45123P	W0141			YC001-YC030, YK901-YM670
	12			D45123P	W0141			YC031-YC050
	13	D45553J	W5383					YC020-YC050
	13	D45553J	W5383	D45553P	W0141			YK901-YM670
	14	D40560J	W2510	D40560P	W0141			ALL
	15	D04077J	W5375	D04077P	W0141			ALL
	17	D04273J	W5191	D04273P	W0141			YC001-YC030, YK901-YM670
	17			D04273P	W0141			YC031-YC050
	18	D41129J	W5721	D41129P	W0141			ALL
	19	D40806J	W5506	D40806P	W0141			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	19			D40806P	W0141			YC031-YC050, YK913-YK917, YK920, YL430, YM653-YM670
	20	D40490J	W5158	D40490P	W0141			ALL
	21	D40496J	W5510	D40496P	W0141			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	21			D40496P	W0141			YC031-YC050, YK913-YK917, YK920, YL430, YM653-YM670
	22	D43016J	W5526	D43016P	W0141			YC001-YC030, YK901-YM670
	22			D43016P	W0141			YC031-YC050
	23	D40556J	W2508	D40556P	W0141			YC001-YC030, YK901-YM670
	23			D40556P	W0141			YC031-YC050
	26	D40332J	W5204					YC031-YC050
	26	D40332J	W5204	D40332P	W0141			YK906-YM670
	27	D40826J	W5514	D40826P	W0141			YC001-YC030, YK901-YM670
	27			D40826P	W0141			YC031-YC050
	28	D40346J	W5610	D40346P	W0141			ALL
I AE0104B	DISCONNECT BRACKET - E1-4 SHELF					003	//	ALL
	01	D41251J	W0521	D41251P	W0121			YC001-YC030, YK901-YM670
	01	D41251J	W0521					YC031-YC050
	02	D45517J	W5463					YC031-YC050

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AE0100

Page 5

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
I AE0104B	DISCONNECT BRACKET - E1-4 SHELF (continued)					003	/ /	ALL
	02	D45517J	W5463	D45517P	W0141			YK901-YM670
	03	D41453J	W0523	D41453P	W0141			ALL
I AE0105A	DISCONNECT BRACKET - E1-5 SHELF					013	312/160/R025	ALL
	01	D04125J	W2405	D04125P	W0151			YC001-YC030
	01			D04125P	W0151			YC001-YC030, YK901-YM670
	01	D04125J	W2405					YC031-YC050
	01	D04125J	W5107	D04125P	W0151			YK901-YM670
	02	D04031J	W2151	D04031P	W0151			YC001-YC030, YK901-YM670
	03	D41507J	W5723	D41507P	W0151			YC001-YC030, YK901-YM670
	04	D04197J	W5191	D04197P	W0151			YC001-YC030, YK901-YM670
	06	D04141J	W5413	D04141P	W5419			YC001-YC019
	07	D41557J	W5163	D41557P	W0151			YC001-YC030, YK901-YM670
	07	D41557J	W5163					YC031-YC050
	08	D41517J	W2247	D41517P	W0151			YC001-YC030, YK901-YM670
	08	D41517J	W2247					YC031-YC050
	09	D45125J	W5121	D45125P	W0151			YC001-YC030, YK901-YM670
	11	D41511J	W5099	D41511P	W0151			YC001-YC030, YK901-YM670
	11	D41511J	W5099					YC031-YC050
	12	D41515J	W5185	D41515P	W0151			YC001-YC030, YK901-YM670
	12	D41515J	W5185					YC031-YC050
	13	D04131J	W5411	D04131P	W0151			YC001-YC030, YK901-YM670
	13	D04131J	W5411					YC031-YC050

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AE0100

Page 6 End

Aug 10/2009



Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
I AE0201A	DISCONNECT BRACKET - E2-1 SHELF					023	E002-01/ /0023	ALL
	01	D49996J	W0212	D49996P	W5112			ALL
	02	D40934J	W0212	D40934P	W5112			ALL
	03	D40342J	W0212	D40342P	W5112			ALL
	4	D40256J	W0212	D40256P	W5112			ALL
	05	D40564J	W0212	D40564P	W2702			ALL
	06	D40910J	W0212	D40910P	W5726			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	06	D40910J	W0212					YK913-YK917, YK920, YL430, YM653-YM670
	07	D40254J	W0212	D40254P	W5726			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	07	D40254J	W0212					YK913-YK917, YK920, YL430, YM653-YM670
	08	D40428J	W0212	D40428P	W5510			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	08	D40428J	W0212					YC031-YC050, YK913-YK917, YK920, YL430, YM653-YM670
	09	D40926J	W0212	D40926P	W5726			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	09	D40926J	W0212					YK913-YK917, YK920, YL430, YM653-YM670
	10	D40598J	W0212	D40598P	W2112			YC001-YC030, YK901-YM670
	10	D40598J	W0212					YC031-YC050
	12	D40260J	W0212	D40260P	W5110			YC001-YC030, YK901-YM670
	12	D40260J	W0212					YC031-YC050
	13	D40372J	W0212	D40372P	W6210			YC001-YC030, YK901-YM670
	13	D40372J	W0212					YC031-YC050
	15	D41432J	W0210	D41432P	W2138			ALL
	16	D40132J	W0212	D40132P	W5164			ALL
	17	D40718J	W0212	D40718P	W5164			ALL
	18	D40358J	W0212	D40358P	W5612			ALL
	19	D40340J	W0212	D40340P	W5110			YC001-YC030, YK901-YM670
	19	D40340J	W0212					YC031-YC050
	20	D40070J	W0210	D40070P	W2108			ALL
	21	D40518J	W0210	D40518P	W2112			YC001-YC030, YK901-YM670
	21	D40518J	W0210					YC031-YC050
	23	D40258J	W0212	D40258P	W5568			ALL

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AE0200

Page 1

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
I AE0202A	DISCONNECT BRACKET - E2-2 SHELF					033	E002-02/ /0033	ALL
	01	D40246J	W0220	D40246P	W5104			YC001-YC030, YK901-YM670
	01			D40246P	W5104			YC031-YC050
	02	D40586J	W0220	D40586P	W5248			YC001-YC030, YK901-YM670
	02			D40586P	W5248			YC031-YC050
	03	D40942J	W0220	D40942P	W5726			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	03			D40942P	W5726			YC031-YC050
	03	D40942J	W0220					YK913-YK917, YK920, YL430, YM653-YM670
	04	D40928J	W0220	D40928P	W5726			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	04			D40928P	W5726			YC031-YC050
	04	D40928J	W0220					YK913-YK917, YK920, YL430, YM653-YM670
	05	D40656J	W0220	D40656P	W7592			YC001-YC030, YK901-YM652
	05			D40656P	W7592			YC031-YC050
	05	D40656J	W0220					YM653-YM670
	06	D43050J	W0220	D43050P	W6730			YC001-YC030, YK901-YM670
	06			D43050P	W6730			YC031-YC050
	07	D40136J	W0220	D40136P	W5564			YC001-YC030, YK901-YM670
	07			D40136P	W5564			YC031-YC050
	08	D40138J	W0220	D40138P	W5168			YC001-YC030, YK901-YM670
	08			D40138P	W5168			YC031-YC050
	09	D40456J	W0220	D40456P	W5156			YC001-YC030, YK901-YM670
	10	D40348J	W0220	D40348P	W5610			YC001-YC030, YK901-YM670
	10			D40348P	W5610			YC031-YC050
	11	D40506J	W0220	D40506P	W2104			YC001-YC030, YK901-YM670
	11			D40506P	W2104			YC031-YC050
	12	D40520J	W0220	D40520P	W2112			YC001-YC030, YK901-YM670
	13	D43084J	W0220	D43084P	W5230			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	13			D43084P	W5230			YC031-YC050
	13	D43084J	W0220					YK913-YK917, YK920, YL430, YM653-YM670
	14	D40118J	W0220	D40118P	W5566			YC001-YC030, YK901-YM670
	14			D40118P	W5566			YC031-YC050

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AE0200

Page 2

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AE0202A	DISCONNECT BRACKET - E2-2 SHELF (continued)					033	E002-02/ /0033	ALL
	15	D40430J	W0220	D40430P	W5506			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	15	D40430J	W0220					YK913-YK917, YK920, YL430, YM653-YM670
	16	D40360J	W0220	D40360P	W5612			YC001-YC030, YK901-YM670
	16			D40360P	W5612			YC031-YC050
	17	D43060J	W0220	D43060P	W6128			YC001-YC030, YK901-YM670
	17			D43060P	W6128			YC031-YC050
	18	D41012J	W0220	D41012P	W6214			YC001-YC030, YK901-YM670
	19	D43008J	W0220	D43008P	W5134			YC001-YC030, YK901-YM670
	19			D43008P	W5134			YC031-YC050
	20	D40240J	W0220	D40240P	W6102			YC001-YC030, YK901-YM670
	20			D40240P	W6102			YC031-YC050
	21	D40012J	W0220	D40012P	W7594			YC001-YC030, YK901-YM652
	21			D40012P	W7594			YC031-YC050
	21	D40012J	W0220					YM653-YM670
	22	D40912J	W0220	D40912P	W5726			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	22			D40912P	W5726			YC031-YC050
	22	D40912J	W0220					YK913-YK917, YK920, YL430, YM653-YM670
	23	D40946J	W0220	D40946P	W5726			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	23			D40946P	W5726			YC031-YC050
	23	D40946J	W0220					YK913-YK917, YK920, YL430, YM653-YM670
	24	D40450J	W0220	D40450P	W5310			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	24			D40450P	W5310			YC031-YC050
	24	D40450J	W0220					YK913-YK917, YK920, YL430, YM653-YM670
	25	D40130J	W0220	D40130P	W5162			YC001-YC030, YK901-YM670
	25			D40130P	W5162			YC031-YC050
	26	D40380J	W0220	D40380P	W6214			YC001-YC030, YK901-YM670
	27	D40126J	W0220	D40126P	W3170			YC001-YC030, YK901-YM670
	27			D40126P	W3170			YC031-YC050

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AE0200

Page 3

Aug 10/2009



Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
I AE0202A	DISCONNECT BRACKET - E2-2 SHELF (continued)					033	E002-02/ /0033	ALL
	28	D40724J	W0220	D40724P	W5156			YC001-YC030, YK901-YM670
	29	D43024J	W0220	D43024P	W5728			YC001-YC030, YK901-YM670
	29			D43024P	W5728			YC031-YC050
	30	D40646J	W0220	D40646P	W2110			YC001-YC030, YK901-YM670
	30			D40646P	W2110			YC031-YC050
	31	D46022J	W0220	D46022P	W2110			YC001-YC030, YK901-YM670
	31			D46022P	W2110			YC031-YC050
	32	D42014J	W0220	D42014P	W5088			YC001-YC030, YK901-YM670
	32			D42014P	W5088			YC031-YC050
	33	D41840J	W0220	D41840P	W5094			YC001-YC030, YK901-YM670
	33			D41840P	W5094			YC031-YC050

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AE0200

Page 4 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
I AE0301A	DISCONNECT BRACKET - E3-1					041	E003-01/ /0041	ALL
	01	D04271J	W0311	D04271P	W5189			YC001-YC030, YK901-YM670
	02	D42163J	W0311	D42163P	W5273			YC001-YC030, YK901-YM670
	02			D42163P	W5273			YC031-YC050
	04	D40101J	W0311	D40101P	W2527			YC001-YC030, YK901-YM670
	04			D40101P	W2527			YC031-YC050
	05	D40301J	W0311	D40301P	W2531			YC001-YC030, YK901-YM670
	05			D40301P	W2531			YC031-YC050
	06	D04267J	W0311	D04267P	W2207			YC001-YC030, YK901-YM670
	06			D04267P	W2207			YC031-YC050
	07	D45111J	W0311	D45111P	W5111			YC001-YC030, YK901-YM670
	08	D45131J	W0311	D45131P	W5111			YC001-YC030, YK901-YM670
	09	D45151J	W0311	D45151P	W5111			YC001-YC030, YK901-YM670
	11	D40448J	W0311	D40448P	W5310			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	11			D40448P	W5310			YC031-YC050
	11	D40448J	W0311					YK913-YK917, YK920, YL430, YM653-YM670
	12	D42005J	W0311	D42005P	W2265			YC001-YC030, YK901-YM670
	12			D42005P	W2265			YC031-YC050
	14	D49994J	W0311	D49994P	W3170			YC001-YC030, YK901-YM670
	14			D49994P	W3170			YC031-YC050
	15	D43145J	W0311	D43145P	W5161			YC001-YC030, YK901-YM670
	15			D43145P	W5161			YC031-YC050
	16	D43155J	W0311	D43155P	W5161			YC001-YC030, YK901-YM670
	16			D43155P	W5161			YC031-YC050
	18	D45205J	W0311	D45205P	W5205			YC001-YC030, YK901-YM670
	19	D40460J	W0311	D40460P	W5156			YC001-YC030, YK901-YM670
	20	D40516J	W0311	D40516P	W2112			YC001-YC030, YK901-YM670
	21	D41817J	W0311	D41817P	W2201			YC001-YC030, YK901-YM670
	21			D41817P	W2201			YC031-YC050
	22	D41837J	W0311	D41837P	W2653			YC001-YC030, YK901-YM670
	22			D41837P	W2653			YC031-YC050
	23	D46017J	W0313	D46017P	W2231			YC001-YC030, YK901-YM670
	23			D46017P	W2231			YC031-YC050
	24	D46035J	W0313	D46035P	W2169			YC001-YC030, YK901-YM670
	24			D46035P	W2169			YC031-YC050
	25	D42007J	W0313	D42007P	W2267			YC001-YC030, YK901-YM670
	25			D42007P	W2267			YC031-YC050
	27	D40544J	W0313	D40544P	W2218			YC001-YC030, YK901-YM670

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AE0300

Page 1

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
I AE0301A	DISCONNECT BRACKET - E3-1 (continued)					041	E003-01/ /0041	ALL
	28	D43147J	W0313	D43147P	W5163			YC001-YC030, YK901-YM670
	28			D43147P	W5163			YC031-YC050
	29	D43157J	W0313	D43157P	W5163			YC001-YC030, YK901-YM670
	29			D43157P	W5163			YC031-YC050
	31	D04297J	W0313	D04297P	W2237			YC001-YC030, YK901-YM670
	31			D04297P	W2237			YC031-YC050
	32	D45121J	W0313	D45121P	W5121			YC001-YC030, YK901-YM670
	33	D45141J	W0313	D45141P	W5121			YC001-YC030, YK901-YM670
	34	D40394J	W0313	D40394P	W6412			YC001-YC030, YK901-YM670
	34			D40394P	W6412			YC031-YC050
	35	D40149J	W0313	D40149P	W6491			YC001-YC002, YC007-YC030, YK901-YM670
	36	D40732J	W0313	D40732P	W4170			YC001-YC030, YK901-YM670
	36			D40732P	W4170			YC031-YC050
	37	D04277J	W0313	D04277P	W5191			YC001-YC030, YK901-YM670
	38	D42165J	W0313	D42165P	W5275			YC001-YC030, YK901-YM670
	38			D42165P	W5275			YC031-YC050
	40	D40201J	W0313	D40201P	W2529			YC001-YC030, YK901-YM670
	40	D40201P	W2529	D40201J	W0313			YC001-YC030, YK901-YM670
	40			D40201P	W2529			YC031-YC050
	40	D40201P	W2529					YC031-YC050
	41	D40401J	W0313	D40401P	W2533			YC001-YC030, YK901-YM670
	41	D40401P	W2533	D40401J	W0313			YC001-YC030, YK901-YM670
	41			D40401P	W2533			YC031-YC050
	41	D40401P	W2533					YC031-YC050
I AE0302A	DISCONNECT BRACKET - E3-2 SHELF					056	E003-02/ /0056	ALL
	01	D43277J	W0321	D43277P	W3577			YC001-YC050
	02	D40053J	W0321	D40053P	W5367			ALL
	03	D40726J	W0321	D40726P	W5310			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	04	D40446J	W0321	D40446P	W5310			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	04	D40446J	W0321					YK913-YK917, YK920, YL430, YM653-YM670
	05	D40362J	W0321	D40362P	W5612			ALL
	06	D40350J	W0321	D40350P	W5610			ALL
	07	D40940J	W0321	D40940P	W5610			ALL
	09	D43215J	W0321	D43215P	W2805			ALL
	10	D40025J	W0321	D40025P	W3377			ALL

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AE0300

Page 2

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AE0302A	DISCONNECT BRACKET - E3-2 SHELF (continued)					056	E003-02/ /0056	ALL
	11	D43203J	W0321	D43203P	W5603			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	11	D43203J	W0321					YK913-YK917, YK920, YL430, YM653-YM670
	12	D43257J	W0321	D43257P	W5257			ALL
	13	D43219J	W0321	D43219P	W2419			ALL
	14	D45207J	W0321	D45207P	W5205			YC001-YC030, YK901-YM670
	14	D45207J	W0321					YC031-YC050
	15	D40950J	W0321	D40950P	W5506			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	15	D40950J	W0321					YC031-YC050, YK913-YK917, YK920, YL430, YM653-YM670
	16	D40594J	W0321	D40594P	W5156			YC001-YC030, YK901-YM670
	16	D40594J	W0321					YC031-YC050
	17	D45177J	W0321	D45177P	W5111			YC001-YC030, YK901-YM670
	17	D45177J	W0321					YC031-YC050
	18	D45157J	W0321	D45157P	W5111			YC001-YC030, YK901-YM670
	18	D45157J	W0321					YC031-YC050
	19	D45137J	W0321	D45137P	W5111			YC001-YC030, YK901-YM670
	19	D45137J	W0321					YC031-YC050
	20	D45117J	W0321	D45117P	W5111			YC001-YC030, YK901-YM670
	20	D45117J	W0321					YC031-YC050
	22	D43054J	W0321	D43054P	W6732			ALL
	23	D40462J	W0321	D40462P	W5156			YC001-YC030, YK901-YM670
	23	D40462J	W0321					YC031-YC050
	24	D43022J	W0321	D43022P	W5530			ALL
	25	D46021J	W0321	D46021P	W2231			ALL
	26	D41839J	W0321	D41839P	W2653			ALL
	27	D41819J	W0321	D41819P	W2201			ALL
	28	D40426J	W0321	D40426P	W5158			ALL
	30	D46043J	W0321	D46043P	W2169			ALL
	31	D40596J	W0321	D40596P	W2112			YC001-YC030, YK901-YM670
	31	D40596J	W0321					YC031-YC050
	32	D43046J	W0321	D43046P	W6530			ALL
	33	D40486J	W0321	D40486P	W5158			ALL
	35	D40029J	W0321	D40029P	W3379			ALL
	36	D40468J	W0321	D40468P	W5160			YC001-YC030, YK901-YM670
	36	D40468J	W0321					YC031-YC050
	37	D40470J	W0321	D40470P	W5160			YC001-YC030, YK901-YM670

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AE0300

Page 3

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
I AE0302A	DISCONNECT BRACKET - E3-2 SHELF (continued)					056	E003-02/ /0056	ALL
	37	D40470J	W0321					YC031-YC050
	38	D43205J	W0321	D43205P	W5605			ALL
	39	D40194J	W0321	D40194P	W6134			ALL
	40	D43261J	W0321	D43261P	W5461			YC001-YC030, YK901-YM670
	40	D43261J	W0321					YC031-YC050
	41	D42261J	W0321	D42261P	W5461			YC001-YC030, YK901-YM670
	41	D42261J	W0321					YC031-YC050
	42	D40952J	W0321	D40952P	W5160			YC001-YC030, YK901-YM670
	43	D42361J	W0321	D42361P	W5461			YC001-YC030, YK901-YM670
	43	D42361J	W0321					YC031-YC050
	44	D43263J	W0321	D43263P	W5463			ALL
	45	D40392J	W0321	D40392P	W6412			ALL
	46	D45127J	W0321	D45127P	W5121			YC001-YC030, YK901-YM670
	46	D45127J	W0321					YC031-YC050
	47	D42053J	W0321	D42053P	W5375			ALL
	48	D40276J	W0321	D40276P	W6134			ALL
	49	D43209J	W0321	D43209P	W5409			ALL
	50	D43217J	W0321	D43217P	W5461			YK910-YK920, YL421-YM670
	51	D43030J	W0321	D43030P	W6034			ALL
	52	D40908J	W0321	D40908P	W5726			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	52	D40908J	W0321					YK913-YK917, YK920, YL430, YM653-YM670
	53	D42363J	W0321	D42363P	W5463			ALL
	54	D43080J	W0321	D43080P	W6412			ALL
	55	D40173J	W0321	D40173P	W5303			YK901-YM670
	56	D45147J	W0321	D45147P	W5121			YC001-YC030, YK901-YM670
	56	D45147J	W0321					YC031-YC050
I AE0303A	DISCONNECT BRACKET - E3-3 SHELF					049	384/173/L005	ALL
	01	D43301J	W0331	D43301P	W5415			YC001-YC030, YK901-YM670
	01			D43301P	W5415			YC031-YC050
	05	D43306J	W0331	D43306P	W5723			YK901-YM670
	06	D43359J	W0331	D43359P	W5103			YK901-YM670
	07	D43391J	W0331	D43391P	W2417			YK901-YM670
I	08	D43314J	W0331	D43314P	W5107			YK910-YL401, YL430, YM652-YM670
	10	D43361J	W0331	D43361P	W5105			YK907-YM670
	11	D43367J	W0331	D43367P	W5107			YK901-YM670
	12	D43307J	W0331	D43307P	W5111			YC001-YC030, YK901-YM670

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AE0300

Page 4

Aug 10/2009



Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
I AE0303A	DISCONNECT BRACKET - E3-3 SHELF (continued)					049	384/173/L005	ALL
	13	D43321J	W0331	D43321P	W5111			YC001-YC030, YK901-YM670
	15	D43329J	W0331	D43329P	W2417			YK901-YM670
	17	D43345J	W0331	D43345P	W5331			YK901-YM670
	18	D43347J	W0331	D43347P	W5331			YK901-YM670
	20	D43305J	W0331	D43305P	W5111			YC001-YC030, YK901-YM670
	22	D43315J	W0331	D43315P	W5189			YC001-YC030
	23	D43319J	W0331	D43319P	W2801			YC001-YC030, YK901-YM670
	23			D43319P	W2801			YC031-YC050
	24	D41800J	W0330	D41800P	W5104			YC001-YL430
	25	D41814J	W0330	D41814P	W6214			YC001-YC030, YK901-YL430
	25	D41814J	W0330					YC031-YC050
	26	D41802J	W0330	D41802P	W6220			YC001-YL430
	27	D41842J	W0330	D41842P	W5526			YC001-YC030, YK901-YL430
	27	D41842J	W0330					YC031-YC050
	28	D43313J	W0331	D43313P	W2201			YC001-YC030, YK901-YM670
	28			D43313P	W2201			YC031-YC050
	29	D43309J	W0331	D43309P	W2231			YC001-YC030, YK901-YM670
	29			D43309P	W2231			YC031-YC050
	30	D41824J	W0330	D41824P	W5156			YC001-YC030, YK901-YL430
	30	D41824J	W0330					YC031-YC050
	31	D41836J	W0330	D41836P	W5104			YC001-YL430
	32	D41818J	W0330	D41818P	W6288			YC001-YL430
	33	D43323J	W0331	D43323P	W5121			YC001-YC030
	35	D41822J	W0330	D41822P	W6412			YC001-YL430
	36	D41826J	W0330	D41826P	W2218			YC001-YC030, YK901-YL430
	36	D41826J	W0330					YC031-YC050
	37	D41808J	W0330	D41808P	W6420			YC001-YL430
	38	D43331J	W0331	D43331P	W5191			YK901-YM670
	40	D41812J	W0330	D41812P	W2216			YC001-YL430
	41	D41806J	W0330	D41806P	W6230			YC001-YL430
	42	D43323J	W0331	D43323P	W5121			YK901-YM670
	43	D43379J	W0331	D43379P	W5335			YK901-YM670
	44	D43333J	W0331	D43333P	W5723			YK901-YM670
	46	D43355J	W0331	D43355P	W2415			YK901-YM670
	47	D43357J	W0331	D43357P	W2415			YK901-YM670
	48	D43363J	W0331	D43363P	W2413			YK901-YM670
	49	D43365J	W0331	D43365P	W2413			YK901-YM670

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AE0300

Page 5 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
I AE0401A	DISCONNECT BRACKET - E4-1 SHELF					052	E004-01/ /0052	ALL
	09	D41804J	W0410	D41804P	W6220			YC001-YL430
	10	D41810J	W0410	D41810P	W6420			YC001-YL430
	11	D41816J	W0410	D41816P	W6288			YC001-YL430
	12	D41828J	W0410	D41828P	W6214			YC001-YC030, YK901-YL430
	12	D41828J	W0410					YC031-YC050
	13	D41830J	W0410	D41830P	W6412			ALL
	14	D04171J	W0411	D04171P	W3721			YK901-YK906
	15	D04173J	W0411	D04173P	W3722			YK901-YK906
	16	D04289J	W0411	D04289P	W5191			YK901-YM670
	17	D04287J	W0411	D04287P	W5189			YC001-YC030, YK901-YM670
	17	D04287J	W0411					YC031-YC050
	18	D04155J	W0411	D04155P	W3323			ALL
	19	D04285J	W0411	D04285P	W5191			YC001-YC030, YK901-YM670
	19	D04285J	W0411					YC031-YC050
	20	D04331J	W0411	D04331P	W3319			ALL
	21	D08123J	W0411	D08123P	W5189			YC001-YC030, YK901-YM670
	21	D08123J	W0411					YC031-YC050
	22	D04153J	W0411	D04153P	W3327			ALL
	23	D04371J	W0411	D04371P	W5431			ALL
	24	D44161J	W0410	D44161P	W5461			YC001-YC030, YK901-YM670
	24	D44161J	W0410					YC031-YC050
	25	D04161J	W0411	D04161P	W5337			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	25	D04161J	W0411					YK913-YK917, YK920, YL430, YM653-YM670
	26	D40904J	W0410	D40904P	W5726			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	26	D40904J	W0410					YK913-YK917, YK920, YL430, YM653-YM670
	27	D44139J	W0411	D44139P	W3309			ALL
	28	D04157J	W0411	D04157P	W3329			ALL
	29	D40244J	W0410	D40244P	W5104			ALL
	30	D40242J	W0410	D40242P	W6102			ALL
	31	D40328J	W0410	D40328P	W6214			YC001-YC030, YK901-YM670
	31	D40328J	W0410					YC031-YC050
	32	D04721J	W0411	D04721P	W2401			YC001-YK906
	33	D41010J	W0410	D41010P	W6412			ALL
	35	D40326J	W0410	D40326P	W6412			ALL
	36	D40330J	W0410	D40330P	W6230			ALL
	37	D43044J	W0410	D43044P	W6528			ALL

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AE0400

Page 1

Aug 10/2009



Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
I AE0401A	DISCONNECT BRACKET - E4-1 SHELF (continued)					052	E004-01/ /0052	ALL
	38	D40144J	W0410	D40144P	W6168			ALL
	39	D40066J	W0410	D40066P	W6204			ALL
	40	D40530J	W0410	D40530P	W2214			ALL
	42	D40158J	W0410	D40158P	W6564			ALL
	43	D40554J	W0410	D40554P	W2508			YC001-YC030, YK901-YM670
	43	D40554J	W0410					YC031-YC050
	44	D43018J	W0410	D43018P	W5526			YC001-YC030, YK901-YM670
	44	D43018J	W0410					YC031-YC050
	45	D43062J	W0410	D43062P	W5230			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	45	D43062J	W0410					YK913-YK917, YK920, YL430, YM653-YM670
	46	D40378J	W0410	D40378P	W6214			YC001-YC030, YK901-YM670
	46	D40378J	W0410					YC031-YC050
	47	D40562J	W0410	D40562P	W2510			ALL
	48	D40534J	W0410	D40534P	W2216			ALL
	49	D43038J	W0410	D43038P	W6230			ALL
	50	D40156J	W0410	D40156P	W6162			ALL
	51	D40542J	W0410	D40542P	W2218			YC001-YC030, YK901-YM670
	51	D40542J	W0410					YC031-YC050
	52	D40390J	W0410	D40390P	W6412			ALL
I AE0401B	DISCONNECT BRACKET - E4-1 SHELF					002	E004-01/ /	ALL
I AE0401D	DISCONNECT BRACKET - E4-1 SHELF					010	E004-01/ /0052	ALL
	13	D04115J	W0411	D04115P	W5331			YK901-YM670
	14	D04007J	W0411	D04007P	W5335			YK901-YM670
	15	D04009J	W0411	D04009P	W5335			YK901-YM670
	16	D04117J	W0411	D04117P	W5331			YK901-YM670
I AE0402A	DISCONNECT BRACKET - E4-2 SHELF					041	E004-02/ /0041	ALL
	01	D42111J	W0422	D42111P	W5719			ALL
	02	D40584J	W0422	D40584P	W5248			ALL
	07	D40338J	W0422	D40338P	W5110			YC001-YC030, YK901-YM670
	07	D40338J	W0422					YC031-YC050
	08	D40238J	W0422	D40238P	W6134			ALL
	09	D40714J	W0422	D40714P	W6588			ALL
	13	D40228J	W0422	D40228P	W6208			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AE0400

Page 2

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AE0402A	DISCONNECT BRACKET - E4-2 SHELF (continued)					041	E004-02/ /0041	ALL
	13	D40228J	W0422					YK913-YK917, YK920, YL430, YM653-YM670
	14	D40222J	W0422	D40222P	W6208			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	14	D40222J	W0422					YK913-YK917, YK920, YL430, YM653-YM670
	15	D40164J	W0422	D40164P	W6586			ALL
	16	D43028J	W0422	D43028P	W6032			ALL
	17	D40432J	W0422	D40432P	W6222			ALL
	19	D40742J	W0422	D40742P	W6222			ALL
	22	D42400J	W0420	D42400P	W6412			ALL
	23	D40712J	W0422	D40712P	W6412			ALL
	24	D40388J	W0422	D40388P	W6412			ALL
	25	D40382J	W0422	D40382P	W6410			ALL
	26	D40140J	W0422	D40140P	W6164			ALL
	27	D40720J	W0422	D40720P	W6164			ALL
	28	D40938J	W0422	D40938P	W6210			YC001-YC030, YK901-YM670
	28	D40938J	W0422					YC031-YC050
	29	D40370J	W0422	D40370P	W6210			YC001-YC030, YK901-YM670
	29	D40370J	W0422					YC031-YC050
	30	D40484J	W0422	D40484P	W5158			ALL
	31	D40356J	W0422	D40356P	W5612			ALL
	32	D40540J	W0422	D40540P	W2218			YC001-YC030, YK901-YM670
	32	D40540J	W0422					YC031-YC050
	33	D40472J	W0422	D40472P	W5160			YC001-YC030, YK901-YM670
	33	D40472J	W0422					YC031-YC050
	34	D40068J	W0420	D40068P	W2208			ALL
	35	D40618J	W0422	D40618P	W5158			ALL
	36	D40930J	W0422	D40930P	W5612			ALL
	37	D40474J	W0422	D40474P	W5160			YC001-YC030, YK901-YM670
	37	D40474J	W0422					YC031-YC050
	38	D41440J	W0420	D41440P	W2218			YC001-YC030, YK901-YM670
	38	D41440J	W0420					YC031-YC050
	40	D40169J	W0422	D40169P	W5160			YK901-YM670

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AE0400

Page 3 End

Aug 10/2009



Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
I AE0502A	DISCONNECT BRACKET - E5-2 SHELF					024	E005-02/ /	ALL
	01	D45221J	W0737	D45221P	W0521			ALL
	03	D45209J	W5205	D45209P	W0521			YC001-YC030, YK901-YM670
	03			D45209P	W0521			YC031-YC050
	04	D45247J	W5163	D45247P	W0523			ALL
	05	D45257J	W5163	D45257P	W0523			ALL
	06	D45263J	W5463	D45263P	W0523			ALL
	07	D45237J	W2135	D45237P	W0523			YC001-YC030, YK901-YM670
	07			D45237P	W0523			YC031-YC050
	08	D45067J	W2135	D45067P	W0523			YC001-YC030, YK901-YM670
	08			D45067P	W0523			YC031-YC050
	09	D08105J	W2873	D08105P	W0523			ALL
	10	D45241J	W5503	D45241P	W0523			YC001-YM652
	10			D45241P	W0523			YM653-YM670
	11	D45213J	W5121	D45213P	W0523			YC001-YC030, YK901-YM670
	11			D45213P	W0523			YC031-YC050
	12	D45211J	W5111	D45211P	W0521			YC001-YC030, YK901-YM670
	12			D45211P	W0521			YC031-YC050
	13	D45319J	W5825	D45319P	W0521			YK901-YM670
	14	D45245J	W5161	D45245P	W0521			ALL
	15	D45255J	W5161	D45255P	W0521			ALL
	16	D45265J	W5161	D45265P	W0521			ALL
	17	D41561J	W5461	D41561P	W0521			YC001-YC030, YK901-YM670
	17			D41561P	W0521			YC031-YC050
	18	D45261J	W5461	D45261P	W0521			YC001-YC030, YK901-YM670
	18			D45261P	W0521			YC031-YC050
	19	D45235J	W2035	D45235P	W0521			ALL
	20	D45239J	W5501	D45239P	W0521			ALL
	21	D45225J	W2597	D45225P	W0521			ALL
	22	D45293J	W2597	D45293P	W0521			YC001-YC011
	22	D05925J	W2889	D05925P	W0521			YC012-YM670
	23	D05925J	W2889	D05925P	W0521			YC001-YC011
	23	D45293J	W2597	D45293P	W0521			YC012-YM670
	24	D06063J	W0521					ALL

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AE0500

Page 1 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
I AE0602A	DISCONNECT BRACKET - E6-2 SHELF					012	E006-02/ /	YL421-YM670
	01	D40127J	W0621	D40127P	W3559			YM643-YM670
	02	D40123J	W0621	D40123P	W3557			YM643-YM670
	03	D40111J	W0621	D40111P	W2101			YM643-YM670
	04	D40621J	W0621	D40621P	W2103			YM643-YM652
	04	D40621J	W0621					YM653-YM670
	05	D40117J	W0621	D40117P	W5189			YM643-YM670
	07	D40119J	W0621	D40119P	W5191			YM643-YM670
	08	D40115J	W0621	D40115P	W5105			YM643-YM670
	10	D40113J	W0621	D40113P	W5103			YM643-YM670
	11	D40125J	W0621	D40125P	W3555			YM643-YM670
	12	D40121J	W0621	D40121P	W3553			YM643-YM670

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AE0600

Page 1 End

Aug 10/2009



Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AE0801A	DISCONNECT BRACKET - E8-1 SHELF					000	E008-01/ /	ALL
	01	D08189J	W0811	D08189P	W5189			YC001-YC007
	01			D08189P	W5189			YC008-YC011
	02	D08511J	W0811	D08511P	W2511			YC001-YC007
	03	D08509J	W0811	D08509P	W3509			YC001-YC007, YK907-YL430
	04	D08189J	W0811	D08189P	W5189			YK907-YL430
	05	D40075J	W0811	D40075P	W5103			YK901-YM670
	06	D40077J	W0811	D40077P	W5105			YK907-YL430
	07	D08811J	W0811	D08811P	W3511			YK907-YL430
	08	D08002J	W0811	D08002P	W5191			YK907-YL430
	15	D40811J	W0811	D40811P	W2101			YC001-YC006
	19	D40811J	W0811	D40811P	W2101			YC007, YK907-YL430
	19			D40811P	W2101			YC008-YC011
	21	D45035J	W0811	D45035P	W5825			YK901-YK906, YK911-YK917, YK919-YL401, YL427-YL430, YM647-YM670
AE0801B	DISCONNECT BRACKET E08-01 SHELF					000	E008-01/ /	YC007-YM670
	02	D40803J	W0811	D40803P	W5461			YK910-YK920, YL421-YM670
	04	D45315J	W0811	D45315P	W5825			YK901-YM670
	06	D48389J	W0813	D48389P	W5189			YC007-YC030
	06	D48389J	W0813					YC031-YC050
	07	D45279J	W0813	D45279P	W5303			YC007-YC050
	08	D48337J	W0813	D48337P	W3307			YC007-YC050
	13	D48335J	W0813	D48335P	W3335			YC007-YC050
	13	D48335P	W3335	D48335J	W0813			YC007-YC050
	14	D48323J	W0813	D48323P	W2103			YC007-YC030
	14			D48323P	W2103			YC007-YC030, YK907-YM652
	14	D48323J	W0813					YC031-YC050
	14	D48323J	W0811	D48323P	W2103			YK907-YM646
	19	D48339J	W0813	D48339P	W3339			YC007-YC050
AE0801C	DISCONNECT BRACKET - E8-1 SHELF					000	E008-01/ /	YC001-YC050
	02	D48337J	W0813	D48337P	W3307			YC001-YC006
	06	D45279J	W0813	D45279P	W5303			YC001-YC006
	07	D48389J	W0813	D48389P	W5189			YC001-YC006
	09	D48335J	W0813	D48335P	W3335			YC001-YC006
	09	D48335P	W3335	D48335J	W0813			YC001-YC006
	10	D48339J	W0813	D48339P	W3339			YC001-YC006
	11	D48323J	W0813	D48323P	W2103			YC001-YC006

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AE0800

Page 1

May 11/2009



737-700/800 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AE0801D	DISCONNECT BRACKET - E8-1 SHELF					000	E008-01 / /	YC001-YC050, YK907-YM670
	03	D08517J	W0811	D08517P	W3517			YC001-YC007, YK907-YL430
	05	D08823J	W0811	D08823P	W3523			YK907-YL430
AE0801E	DISCONNECT BRACKET - E8-1 SHELF					000	E008-01 / /	YC001-YC050

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AE0800

Page 2 End

May 11/2009



Bracket No.	Description	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AE1100A	DISCONNECT BRACKET - E11 SHELF					006	212/180/R020	ALL

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AE1100

Page 1 End

Feb 09/2009



737-700/800 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AF0213A	DISCONNECT BRACKET-AISLE CONTROL STAND					006	210/208/BL0	ALL
	01	D05148J	W0008	D05148P	W6208			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652 YK913-YK917, YK920, YL430, YM653-YM670
	01	D05148J	W0008					YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	02	D11288	W5506					YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	03	D11286	W5510					YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	04	D05150J	W0008	D05150P	W6208			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652 YK913-YK917, YK920, YL430, YM653-YM670
	04	D05150J	W0008					YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	05	D08313J	W0049	D08313P	W5369			ALL
	06			D10171	W5506			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	06	D10171J	W0049					ALL
AF0222A	DISCONNECT BRACKET-AISLE CONTROL STAND					007	210/208/	ALL
	01	D11292	W6506					YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652 YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	02	D11290	W6510					ALL
	03			D00417	W5369			ALL
	04	D08315J	W0051	D08315P	W5457			ALL
	05			D00698	W6208			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	06			D10173	W6506			YC001-YC003
	06	D10173J	W0051					ALL
	06			D10173	W6510			YC004-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	07	D10537	W6208					YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AF0200

Page 1 End

Aug 10/2009



Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
I	AJ0004	DISCONNECT BRACKET-J4				010	273/168/R024	ALL
	01	D40602J	W0094	D40602P	W6222			ALL
	05	D40612P	W5160	D40612J	W0094			YK901-YK906
	05	D40612J	W0094	D40612P	W5160			YK901-YM670
	05			D40612J	W0094			YK907-YM670
	06	D40616J	W0094	D40616P	W6222			ALL
	07	D40614J	W0094	D40614P	W6222			ALL
	09	D40658J	W0094					YC031-YC050
	09	D40658J	W0094	D40658P	W5160			YK901-YM670
	10	D40610J	W0094	D40610P	W5160			YC001-YC030, YK901-YM670
	10	D40610J	W0094					YC031-YC050
I	AJ0011	DISCONNECT BRACKET-J11				002	J011-00/ /	ALL
	01	D46620J	W0122	D46620P	W5124			YC001-YL430
	01	D46618J	W0122	D46618P	W5124			YM643-YM670
	02	D46622J	W0122	D46622P	W5124			YC008-YL430
	02	D46616J	W0122	D46616P	W5124			YM643-YM670
	AJ0020	DISCONNECT BRACKET-J20				000	J020-0B/ /	ALL
I	AJ0020A	DISCONNECT BRACKET-J20-A				004	J020-0A/ /	ALL
	02	D40884J	W0074	D40884P	W5158			YC028-YM670
I	AJ0020B	DISCONNECT BRACKET-J20-B				007	J020-0B/ /	ALL
	01	D40634J	W0072	D40634P	W5158			ALL
	02	D40638J	W0072	D40638P	W5158			ALL
	03	D40640J	W0072	D40640P	W5158			ALL
	04	D40636J	W0072	D40636P	W5156			YC001-YC030, YK901-YM670
	04	D40636J	W0072					YC031-YC050
	05	D40632J	W0072	D40632P	W5100			YC001-YC030, YK901-YM670
	05	D40632J	W0072					YC031-YC050
	07	D40642J	W0072	D40642P	W5156			YC001-YC030, YK901-YM670
	07	D40642J	W0072					YC031-YC050
I	AJ0020C	DISCONNECT BRACKET-J20-C				003	J020-0A/ /	YC028-YM670
	02	D40878J	W0074	D40878P	W5156			YC028-YC030, YK901-YM670
	02	D40878J	W0074					YC031-YC050
I	AJ0020D	DISCONNECT BRACKET-J20-D				001	J020-0D/ /	ALL
	01	D40858J	W0072	D40858P	W5158			YC031-YM670

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AJ0000

Page 1

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AJ0022	DISCONNECT BRACKET-J22					009	J022-00/ /	ALL
	01	D40678J	W0076	D40678P	W5156			YC001-YC030, YK901-YL430
	01	D40678J	W0076					YC031-YC050
	02	D40672J	W0076	D40672P	W5510			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	02	D40672J	W0076					YC031-YC050, YK913-YK917, YK920, YL430, YM653-YM670
	03	D40666J	W0076	D40666P	W5156			YC001-YC030, YK901-YM670
	03	D40666J	W0076					YC031-YC050
	04	D40670J	W0076	D40670P	W5156			YC001-YC030, YK901-YM670
	04	D40670J	W0076					YC031-YC050
	05	D40676J	W0076	D40676P	W5156			YC001-YC030, YK901-YM670
	05	D40676J	W0076					YC031-YC050
	06	D40668J	W0076	D40668P	W5100			YC001-YC030, YK901-YM670
	06	D40668J	W0076					YC031-YC050
	07	D40674J	W0076	D40674P	W5506			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	07	D40674J	W0076					YC031-YC050, YK913-YK917, YK920, YL430, YM653-YM670
	08	D40680J	W0076	D40680P	W5156			YC001-YC002, YC007-YC030, YK901-YM670
	08	D09002J	W0076	D09002P	W2237			YC003-YC006
	08	D40680J	W0076					YC031-YC050
	09	D40147J	W0076	D40147P	W6491			YC001-YC002, YC007-YC030, YK901-YM670
	09	D40147J	W0076					YC031-YC050
AJ0023	DISCONNECT BRACKET-J23					007	J023-00/ /	ALL
	02	D40686J	W0078	D40686P	W5506			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	02	D40686J	W0078					YC031-YC050, YK913-YK917, YK920, YL430, YM653-YM670
	05	D40688J	W0078	D40688P	W5510			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	05	D40688J	W0078					YC031-YC050, YK913-YK917, YK920, YL430, YM653-YM670

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AJ0000

Page 2

Aug 10/2009



Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AJ0024	DISCONNECT BRACKET-J24					007	J024-00/ /	ALL
	02	D40696J	W0080	D40696P	W6510			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	02	D40696J	W0080					YC031-YC050, YK913-YK917, YK920, YL430, YM653-YM670
	03	D40698J	W0080	D40698P	W5100			YC001-YC030, YK901-YM670
	04	D40692J	W0080	D40692P	W5158			ALL
	05	D40700J	W0080	D40700P	W5158			ALL
	06	D40702J	W0080	D40702P	W5158			ALL
	07	D40694J	W0080	D40694P	W5160			YC001-YC030, YK901-YM670
	07	D40694J	W0080					YC031-YC050
AJ0039A	DISCONNECT BRACKET-J39-A					000	J039-0A/ /	YK907-YL430
AJ0046A	DISCONNECT BRACKET - J46A					016	263/177/R031	ALL
	01	D46130J	W0066	D46130P	W5510			YC004-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	01	D46130J	W0066					YC031-YC050, YK913-YK917, YK920, YL430, YM653-YM670
	04	D46110J	W0066	D46110P	W6208			YC004-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	04	D46110J	W0066					YK913-YK917, YK920, YL430, YM653-YM670
	05	D46128J	W0066	D46128P	W5506			YC004-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	05	D46128J	W0066					YC031-YC050, YK913-YK917, YK920, YL430, YM653-YM670
	07	D46144J	W0066	D46144P	W6170			YC004-YM670
	08	D46146J	W0066	D46146P	W6172			YC004-YM670
	09	D40103J	W0066	D40103P	W2247			YC004-YM670
	10	D40107J	W0066	D40107P	W6491			YC004-YC006
	11	D46104J	W0066	D46104P	W5514			YC004-YC030, YK901-YM670
	11	D46104J	W0066					YC031-YC050
	12	D46150J	W0066	D46150P	W6208			YC004-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	12	D46150J	W0066					YK913-YK917, YK920, YL430, YM653-YM670

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AJ0000

Page 3

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
I	AJ0046A	DISCONNECT BRACKET - J46A (continued)				016	263/177/R031	ALL
	13	D46116J	W0066	D46116P	W5156			YC004-YC030, YK901-YM670
	13	D46116J	W0066					YC031-YC050
	14	D46102J	W0066	D46102P	W5160			YC004-YC030, YK901-YM670
	14	D46102J	W0066					YC031-YC050
	15	D46108J	W0066	D46108P	W2508			YC004-YC030, YK901-YM670
	15	D46108J	W0066					YC031-YC050
	16	D46122J	W0066	D46122P	W5160			YC004-YC030, YK901-YM670
	16	D46122J	W0066					YC031-YC050
I	AJ0046B	DISCONNECT BRACKET - J46B				015	263/177/R031	ALL
	01	D46124J	W0066	D46124P	W2212			YC004-YM670
	02	D46138J	W0066	D46138P	W6242			YC004-YM670
	03	D46120J	W0066	D46120P	W5158			YC004-YM670
	04	D46132J	W0066	D46132P	W6506			YC004-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	04	D46132J	W0066					YK913-YK917, YK920, YL430, YM653-YM670
	05	D46136J	W0066	D46136P	W6528			YC004-YM670
	06	D40097J	W0066	D40097P	W5503			YC004-YM652
	06	D40097J	W0066					YM653-YM670
	07	D40099J	W0066	D40099P	W2237			YC004-YC006
	08	D46142J	W0066	D46142P	W6414			YC004-YM652
	08	D46142J	W0066					YM653-YM670
	09	D46118J	W0066	D46118P	W6510			YC004-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	09	D46118J	W0066					YC031-YC050, YK913-YK917, YK920, YL430, YM653-YM670
	10	D46106J	W0066	D46106P	W6506			YC004-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	10	D46106J	W0066					YK913-YK917, YK920, YL430, YM653-YM670
	11	D46100J	W0066	D46100P	W5158			YC004-YM670
	12	D46112J	W0066	D46112P	W2216			YC004-YM670
	13	D46126J	W0066	D46126P	W2510			YC004-YM670
	15	D46114J	W0066	D46114P	W2218			YC004-YC030, YK901-YM670
	15	D46114J	W0066					YC031-YC050
I	AJ0048A	DISCONNECT BRACKET - J48A				026	263/177/L033	ALL
	01	D48100J	W0088	D48100P	W2104			YC004-YM670

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AJ0000

Page 4

Aug 10/2009



Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AJ0048A	DISCONNECT BRACKET - J48A (continued)					026	263/177/L033	ALL
	02	D48126J	W0088	D48126P	W5122			YC004-YM670
	03	D48122J	W0088	D48122P	W5510			YC004-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	03	D48122J	W0088					YC031-YC050, YK913-YK917, YK920, YL430, YM653-YM670
	04	D40095J	W0088	D40095P	W2149			YC004-YC030, YK901-YM670
	04	D40095J	W0088					YC031-YC050
	05	D48102J	W0088	D48102P	W2112			YC004-YC030, YK901-YM670
	05	D48102J	W0088					YC031-YC050
	06	D40081J	W0088	D40081P	W2207			YC004-YC006
	07	D48110J	W0088	D48110P	W5170			YC004-YM670
	08	D40087J	W0088	D40087P	W5501			YC004-YM670
	09	D48120J	W0088	D48120P	W5506			YC004-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	09	D48120J	W0088					YC031-YC050, YK913-YK917, YK920, YL430, YM653-YM670
	10	D40091J	W0088	D40091P	W6491			YC004-YC006
	11	D40089J	W0088	D40089P	W6491			YC004-YC006
	13	D48116J	W0088	D48116P	W5158			YC004-YM670
	14	D48106J	W0088	D48106P	W2508			YC004-YC030, YK901-YM670
	14	D48106J	W0088					YC031-YC050
	15	D48108J	W0088	D48108P	W2532			YC004-YC030, YK901-YM670
	15	D48108J	W0088					YC031-YC050
	16	D48112J	W0088	D48112P	W5156			YC004-YC030, YK901-YM670
	16	D48112J	W0088					YC031-YC050
	17	D48114J	W0088	D48114P	W5156			YC004-YC030, YK901-YM670
	17	D48114J	W0088					YC031-YC050
	18	D48124J	W0088	D48124P	W6110			YC004-YC030, YK901-YM670
	18	D48124J	W0088					YC031-YC050
	19	D48136J	W0088	D48136P	W5172			YC004-YM670
	20	D48104J	W0088	D48104P	W2114			YC004-YM670
	21	D48134J	W0088	D48134P	W5162			YC004-YM670
	22	D48118J	W0088	D48118P	W5506			YC004-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	22	D48118J	W0088					YC031-YC050, YK913-YK917, YK920, YL430, YM653-YM670

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AJ0000

Page 5

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AJ0048A	DISCONNECT BRACKET - J48A (continued)					026	263/177/L033	ALL
	23	D48130J	W0088	D48130P	W6510			YC004-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	23	D48130J	W0088					YC031-YC050, YK913-YK917, YK920, YL430, YM653-YM670
	24	D48128J	W0088	D48128P	W6570			YC004-YM670
	25	D48138J	W0088	D48138P	W6506			YC004-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	25	D48138J	W0088					YK913-YK917, YK920, YL430, YM653-YM670
	26	D48132J	W0088	D48132P	W6506			YC004-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	26	D48132J	W0088					YK913-YK917, YK920, YL430, YM653-YM670

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AJ0000

Page 6 End

Aug 10/2009



Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AL0675A	DISCONNECT BRACKET-MAIN WHEEL WELL					004	676/198/L040	ALL
	04	D46010J	W5224	D46010P	W7122			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	04	D46010J	W5224					YK913-YK917, YK920, YL430, YM653-YM670
AL0675B	DISCONNECT BRACKET-MAIN WHEEL WELL					004	675/198/L036	ALL
	01	D46026J	W5728	D46026P	W7026			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	01	D46026J	W5728					YK913-YK917, YK920, YL430, YM653-YM670
	02	D04850J	W5580	D04850P	W7580			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	02	D04850J	W5580					YK913-YK917, YK920, YL430, YM653-YM670
	03	D46030J	W5222	D46030P	W7522			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	03	D46030J	W5222					YC031-YC050, YK913-YK917, YK920, YL430, YM653-YM670
	04	D46028J	W5530	D46028P	W7230			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	04	D46028J	W5530					YK913-YK917, YK920, YL430, YM653-YM670
AL0675C	DISCONNECT BRACKET-MAIN WHEEL WELL					003	675/198/R036	ALL
	01	D46046J	W6732	D46046P	W8228			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	01	D46046J	W6732					YK913-YK917, YK920, YL430, YM653-YM670
	02	D46042J	W6122	D46042P	W8222			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	02	D46042J	W6122					YC031-YC050, YK913-YK917, YK920, YL430, YM653-YM670
	03	D46038J	W6124	D46038P	W8122			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	03	D46038J	W6124					YK913-YK917, YK920, YL430, YM653-YM670

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AL0600

Page 1

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AL0694L	DISCONNECT BRACKET-STA 694					002	//	ALL
	01	D46002J	W7230	D46002P	W7022			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	01			D46002P	W7022			YK913-YK917, YK920, YL430, YM653-YM670
	02	D46004J	W7230	D46004P	W7134			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	02			D46004P	W7134			YK913-YK917, YK920, YL430, YM653-YM670
AL0694R	DISCONNECT BRACKET-STA 694					002	//	ALL
	01	D46012J	W8228	D46012P	W8022			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	01			D46012P	W8022			YK913-YK917, YK920, YL430, YM653-YM670
	02	D46014J	W8228	D46014P	W8234			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	02			D46014P	W8234			YK913-YK917, YK920, YL430, YM653-YM670

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AL0600

Page 2 End

Aug 10/2009



Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
I AL0706L	DISCONNECT BRACKET-STA 706					001	//	ALL YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652 YK913-YK917, YK920, YL430, YM653-YM670
	01	D46006J	W7126	D46006P	W7136			
I AL0706R	DISCONNECT BRACKET-STA 706					001	//	ALL YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652 YK913-YK917, YK920, YL430, YM653-YM670
	01	D46016J	W8224	D46016P	W8236			
AL0711L	DISCONNECT BRACKET-STA 711					000	//	ALL YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652 YK913-YK917, YK920, YL430, YM653-YM670
	01	D46008J	W7126	D46008P	W7024			
I AL0711R	DISCONNECT BRACKET-STA 711					001	//	ALL YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652 YK913-YK917, YK920, YL430, YM653-YM670
	01	D46018J	W8224	D46018P	W8024			
AL0720A	DISCONNECT BRACKET-MAIN WHEEL WELL					004	717/200/L032	ALL YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652 YK913-YK917, YK920, YL430, YM653-YM670 ALL ALL
	01	D46024J	W5234	D46024P	W7126			
	01	D46024J	W5234					
	02 03	D42102J D42100J	W5367 W5375	D42102P D42100P	W1022 W1022			
AL0720B	DISCONNECT BRACKET-MAIN WHEEL WELL					003	717/200/L027	ALL YC001-YK907, YL421 ALL YK908-YK912, YK918-YK919, YL401, YL422-YL429, YM643-YM670 YC001-YK907, YL421 ALL
	02	D46032J	W5222	D46032P	W7526			
	02	D46032J	W5222					
	02	D46032J	W5222	D46032P	W7128			
	03 03	D46036J D46036J	W5224 W5224	D46036P	W7222			

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AL0700

Page 1

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AL0720B	DISCONNECT BRACKET-MAIN WHEEL WELL (continued)					003	717/200/L027	ALL
	03	D46036J	W5224	D46036P	W7128			YK908-YK912, YK918-YK919, YL401, YL422-YL429, YM643-YM670
	04	D46020J	W6124	D46020P	W7124			YC001-YK907, YL421
	04	D46020J	W6124					ALL
	04	D46020J	W6124	D46020P	W7128			YK908-YK912, YK918-YK919, YL401, YL422-YL429, YM643-YM670
AL0720C	DISCONNECT BRACKET-MAIN WHEEL WELL					004	717/200/R032	ALL
	01	D43100J	W5367	D43100P	W1032			ALL
	02	D40004J	W6122	D40004P	W8224			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	02	D40004J	W6122					YK913-YK917, YK920, YL430, YM653-YM670
	03	D46044J	W6124	D46044P	W8226			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	03	D46044J	W6124					YK913-YK917, YK920, YL430, YM653-YM670
	04	D40006J	W6124	D40006P	W8226			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	04	D40006J	W6124					YK913-YK917, YK920, YL430, YM653-YM670
AL0720D	DISCONNECT BRACKET-MAIN WHEEL WELL					004	717/200/R027	ALL
	01	D46040J	W6124	D46040P	W8124			YC001-YC030, YK901-YK912, YK918, YL401-YL426, YM643-YM652
	01	D46040J	W6124					YC031-YC050, YK913-YK917, YK919-YK920, YL427-YL430, YM653-YM670
	02	D43102J	W5375	D43102P	W1032			ALL
	03	D46048J	W6228	D46048P	W8230			ALL
	04	D46050J	W6730	D46050P	W8524			ALL

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AL0700

Page 2 End

Aug 10/2009



Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AP0600A	DISCONNECT BRACKET-P5-P6 INTEGRATION					010	270/280/R005	ALL
	03	D45233J	W0044	D45233P	W3589			YC001-YC030
	03	D45233J	W0044					ALL
	03	D45233J	W0044	D45233P	W3605			YK901-YM670
	04	D40444J	W0044	D40444P	W6214			YC001-YC030, YK901-YM670
	04	D40444J	W0044					YC031-YC050
	05	D40226J	W0044	D40226P	W3058			YC001-YC030, YK901-YM670
	05	D40226J	W0044					YC031-YC050
	08	D40528J	W6208	D40528P	W2212			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	08			D40528P	W2212			YK913-YK917, YK920, YL430, YM653-YM670
	09	D40218J	W0044	D40218P	W0018			ALL
AP0600B	DISCONNECT BRACKET-LOWER P6 PANEL					024	260/215/R040	ALL
	02	D40750J	W0044	D40750P	W5158			YC004-YM670
	03	D40822J	W0044	D40822P	W5514			YC001-YC030, YK901-YM670
	03	D40822J	W0044					YC031-YC050
	05	D41430J	W0044	D41430P	W2138			ALL
	06	D40623J	W0041	D40623P	W2135			YC001-YC030, YK901-YM670
	06	D40623J	W0041					YC031-YC050
	07	D41832J	W0044	D41832P	W6412			YC001-YL430
	08	D40800J	W0044	D40800P	W5506			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	08	D40800J	W0044					YC031-YC050, YK913-YK917, YK920, YL430, YM653-YM670
	09	D40368J	W0044	D40368P	W6110			YC001-YC030, YK901-YM670
	09	D40368J	W0044					YC031-YC050
	10	D46067J	W0044	D46067P	W2231			ALL
	11	D46052J	W0044	D46052P	W2030			ALL
	12	D40812J	W0044	D40812P	W6506			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	12	D40812J	W0044					YK913-YK917, YK920, YL430, YM653-YM670
	13	D40625J	W0041	D40625P	W2597			ALL
	14	D40386J	W0044	D40386P	W6412			ALL
	15	D46065J	W0044	D46065P	W2383			YC001-YC030, YK901-YM670
	15	D46065J	W0044					YC031-YC050
	16	D40352J	W0044	D40352P	W5612			ALL

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AP0600

Page 1

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AP0600B	DISCONNECT BRACKET-LOWER P6 PANEL (continued)					024	260/215/R040	ALL
	17	D40820J	W0044	D40820P	W6208			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	17	D40820J	W0044					YK913-YK917, YK920, YL430, YM653-YM670
	18	D40816J	W0044	D40816P	W6206			YC001-YC030, YK901-YM670
	18	D40816J	W0044					YC031-YC050
	19	D46063J	W0044	D46063P	W2169			ALL
	20	D46069J	W0044	D46069P	W2661			ALL
	21	D40574J	W0044	D40574P	W6222			ALL
	22	D40396J	W0044	D40396P	W6414			YC001-YM652
	22	D40396J	W0044					YM653-YM670
	23	D46061J	W0044	D46061P	W2103			YC001-YC030, YK901-YM652
	23	D46061J	W0044					YC031-YC050, YM653-YM670
	24	D40654J	W0044	D40654P	W6024			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	24	D40654J	W0044					YK913-YK917, YK920, YL430, YM653-YM670
AP0600C	DISCONNECT BRACKET-UPPER P6 PANEL					010	260/275/R015	ALL
	01	D40502J	W0044	D40502P	W2104			ALL
	02	D40526J	W0044	D40526P	W2212			ALL
	03	D40512J	W0044	D40512P	W2112			YC001-YC030, YK901-YM670
	03	D40512J	W0044					YC031-YC050
	04	D40532J	W0044	D40532P	W2216			ALL
	05	D40550J	W0044	D40550P	W2508			YC001-YC030, YK901-YM670
	05	D40550J	W0044					YC031-YC050
	06	D04151J	W0041	D04151P	W3327			ALL
	08	D40558J	W0044	D40558P	W2510			ALL
	09	D40536J	W0044	D40536P	W2218			YC001-YC030, YK901-YM670
	09	D40536J	W0044					YC031-YC050
	10	D40582J	W0044	D40582P	W2204			ALL

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AP0600

Page 2 End

Aug 10/2009



Bracket No.	Description	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AP0700A	DISCONNECT BRACKET-P7 PANEL					002	P007-00/250/L005	ALL
AP0700B	DISCONNECT BRACKET-P7 PANEL					002	P007-00/250/R005	ALL

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AP0700

Page 1 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AP0900A	DISCONNECT BRACKET-P9-FWD INSTR PANEL					027	190/214/0	ALL
	03	D04207J	W0001	D04207P	W2207			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	03			D04207P	W2207			YC031-YC050, YK913-YK917, YK920, YL430, YM653-YM670
	04	D40578J	W0001	D40578P	W5156			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	04			D40578P	W5156			YK913-YK917, YK920, YL430, YM653-YM670
	05	D40824J	W0003	D40824P	W5514			YC001-YC030, YK901-YL429, YM643-YM652
	05			D40824P	W5514			YL430, YM653-YM670
	06	D04237J	W0003	D04237P	W2237			YC001-YC030, YK901-YL429, YM643-YM652
	06			D04237P	W2237			YC031-YC050, YL430, YM653-YM670
	07	D40580J	W0003	D40580P	W5160			YC001-YC030, YK901-YL429, YM643-YM652
	07			D40580P	W5160			YL430, YM653-YM670
	09	D04221J	W0001	D04221P	W2221			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	09			D04221P	W2221			YC031-YC050
	10	D40914J	W0001	D40914P	W2022			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	10			D40914P	W2022			YC031-YC050, YK913-YK917, YK920, YL430, YM653-YM670
	11	D40944J	W0001	D40944P	W5202			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	11			D40944P	W5202			YC031-YC050, YK913-YK917, YK920, YL430, YM653-YM670
	14	D40924J	W0003	D40924P	W2030			YC001-YC030, YK901-YL429, YM643-YM652
	14			D40924P	W2030			YC031-YC050, YL430, YM653-YM670
	16	D46033J	W0003	D46033P	W2383			YC001-YC030, YK901-YL429, YM643-YM652

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AP0900

Page 1

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AP0900A	DISCONNECT BRACKET-P9-FWD INSTR PANEL (continued)					027	190/214/0	ALL
	16			D46033P	W2383			YL430, YM653-YM670
	17			D41823P	W2175			YC031-YM670
	18	D40804J	W0001	D40804P	W5506			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	19	D41833J	W0001	D41833P	W2651			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	19			D41833P	W2651			YK913-YK917, YK920, YL430, YM653-YM670
	23	D04251J	W0003	D04251P	W2251			YC001-YC030, YK901-YL429, YM643-YM652
	23			D04251P	W2251			YC031-YC050, YL430, YM653-YM670
	25	D10030J	W0001	D10030P	W3704			YK912, YK919, YL401, YL427-YL429, YM652
	25			D10030P	W3704			YK913-YK917, YK920, YL430, YM653-YM670
	26	D10032J	W0003	D10032P	W3706			YK912-YK917, YK919-YL401, YL427-YL429, YM652
	26			D10032P	W3706			YL430, YM653-YM670
	27	D10034J	W0003	D10034P	W3705			YK912-YK917, YK919-YL401, YL427-YL429, YM652
	27			D10034P	W3705			YL430, YM653-YM670

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AP0900

Page 2 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AP1800A	DISCONNECT BRACKET-P5-P18 INTEGRATION					010	270/280/L005	ALL
	01	D40198J	W0018	D40198P	W3150			ALL
	02	D48901J	W0018	D48901P	W3381			ALL
	03	D40840J	W0018	D40840P	W2112			YC001-YC030, YK901-YM670
	03	D40840J	W0018					YC031-YC050
	04	D40524J	W0018	D40524P	W2212			ALL
	05	D40538J	W0018	D40538P	W2218			YC001-YC030, YK901-YM670
	05	D40538J	W0018					YC031-YC050
	06	D40220J	W0018	D40220P	W3144			ALL
	07	D40298J	W0018	D40298P	W4250			ALL
	08	D40504J	W0018	D40504P	W2104			ALL
	09	D40514J	W0018	D40514P	W2112			YC001-YC030, YK901-YM670
	09	D40514J	W0018					YC031-YC050
	10	D40522J	W0018	D40522P	W2114			ALL
AP1800B	DISCONNECT BRACKET-LOWER P18 PANEL					009	255/215/L040	ALL
	01	D41805J	W0018	D41805P	W2201			ALL
	02	D40576J	W0018	D40576P	W5156			YC001-YC030, YK901-YM670
	02	D40576J	W0018					YC031-YC050
	03	D41801J	W0018	D41801P	W2101			ALL
	05	D40802J	W0018	D40802P	W5506			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	05	D40802J	W0018					YC031-YC050, YK913-YK917, YK920, YL430, YM653-YM670
	06	D41803J	W0018	D41803P	W2175			ALL
	07	D40830J	W0018	D40830P	W5514			YC001-YC030, YK901-YM670
	07	D40830J	W0018					YC031-YC050
	08	D41807J	W0018	D41807P	W2651			YC001-YC030, YK901-YM670
	08	D41807J	W0018					YC031-YC050
	09	D41809J	W0018	D41809P	W2653			ALL

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AP1800

Page 1 End

Aug 10/2009



Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
I AP2800A	DISCONNECT BRACKET-P28 PANEL					001	724/172/R018	ALL
	01	D48080J	W0028	D48080P	W8524			YC001-YC030
	01			D48080P	W8524			YC031-YM670

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AP2800

Page 1 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AS0001	DISCONNECT BRACKET-FIRE WALL					010	NS175/ /	ALL
	10			D30038	W1062			ALL
AS0001L	DISCONNECT BRACKET-FIRE WALL(STRUT SIDE)					010	NS175/135/L	ALL
	01	D30260	W1168					ALL
	02	D30224	W1172					ALL
	03	D30212	W1170					ALL
	04	D30252	W1170					ALL
	05	D30220	W1166					ALL
	06	D30228	W1170					ALL
	07	D30256	W1166					ALL
	08	D30204	W1168					ALL
	09	D30234	W1164					ALL
	10	D30238	W1162					ALL
AS0001R	DISCONNECT BRACKET-FIRE WALL(STRUT SIDE)					010	NS175/135/R	ALL
	01	D30460	W1268					ALL
	02	D30424	W1272					ALL
	03	D30412	W1270					ALL
	04	D30452	W1270					ALL
	05	D30420	W1266					ALL
	06	D30428	W1270					ALL
	07	D30456	W1266					ALL
	08	D30404	W1268					ALL
	09	D30434	W1264					ALL
	10	D30438	W1262					ALL
AS0002	DISCONNECT BRACKET-LEFT SLEEVE					002	NR201/136/	ALL
	01			D30008	W1082			ALL
	02			D30002	W1080			ALL
AS0002L	DISCONNECT BRACKET-T/R LEFT STRUT					002	NS201/136/L	ALL
	01	D30208	W1168					ALL
	02	D30202	W1172					ALL
AS0002R	DISCONNECT BRACKET-T/R RIGHT STRUT					002	NS201/136/R	ALL
	01	D30408	W1268					ALL
	02	D30402	W1272					ALL

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AS0000

Page 1

Aug 10/2009



Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AS0003	DISCONNECT BRACKET RIGHT SLEEVE					002	NS201/136/	ALL
	01			D30010	W1084			ALL
	02			D30006	W1086			ALL
AS0003L	DISCONNECT BRACKET T/R LEFT STRUT					002	NS201/136/L	ALL
	01	D30210	W1168					ALL
	02	D30206	W1172					ALL
AS0003R	DISCONNECT BRACKET-T/R RIGHT STRUT					002	NS201/136/R	ALL
	01	D30410	W1268					ALL
	02	D30406	W1272					ALL

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AS0000

Page 2 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AW0219L	DISCONNECT BRACKET-CLOSURE RIB(L-WING)					003	LES219/ /	ALL
AW0219R	DISCONNECT BRACKET-CLOSURE RIB(R-WING)					003	/ /	ALL
I AW0254L	DISCONNECT BRACKET-LEFT WING STA 254					002	/ /	ALL
	01	D40024J	W1022	D40024P	W1024			YC001-YC007
	01	D40024J	W1022					YC001-YC007
	01			D40024P	W1024			YC001-YC007
	01	D40024J	W1024	D40024P	W1022			YC008-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	01	D40024J	W1024					YC008-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	01			D40024P	W1022			YC008-YM670
I AW0254R	DISCONNECT BRACKET-RIGHT WING STA 254					002	/ /	ALL
	01	D40034J	W1032	D40034P	W1034			YC001-YC007
	01	D40034J	W1032					YC001-YC007
	01			D40034P	W1034			YC001-YC007
	01	D40034J	W1034	D40034P	W1032			YC008-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	01	D40034J	W1034					YC008-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	01			D40034P	W1032			YC008-YM670
I AW0258L	DISCONNECT BRACKET					006	IFSS 217/ /	ALL
	01	D08094J	W1186	D08094P	W1162			ALL
	02			D30040	W1174			ALL
	02			D30042	W1172			ALL
	03			D30082	W1176			ALL
	03			D30084	W1168			ALL
	04			D30014	W1184			YC001-YC030, YK901-YM670
	04			D30016	W1164			ALL
	05			D30062	W1182			YC001-YC030, YK901-YM670
	05			D30064	W1166			ALL
	06	D08056J	W1178	D08056P	W1170			ALL
I AW0258R	DISCONNECT BRACKET					006	IFSS 217/ /	ALL
	01	D08194J	W1286	D08194P	W1262			ALL
	02			D30140	W1274			ALL
	02			D30142	W1272			ALL
	03			D30182	W1276			ALL

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AW0200

Page 1

Aug 10/2009



Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
I AW0258R	DISCONNECT BRACKET (continued)					006	IFSS 217 / /	ALL
	03			D30184	W1268			ALL
	04			D30114	W1284			YC001-YC030, YK901-YM670
	04			D30116	W1264			ALL
	05			D30162	W1282			ALL
	05			D30164	W1266			ALL
	06	D08156J	W1278	D08156P	W1270			ALL

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AW0200

Page 2 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
I	AW0742L	DISCONNECT BRACKET-LEFT WING STA 742				002	//	ALL
	1	D01695	W1024					YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	2	D01699	W1024					YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
I	AW0742R	DISCONNECT BRACKET-RIGHT WING STA 742				002	//	ALL
	1	D01701	W1034					YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
	2	D01697	W1034					YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652

DISCONNECT BRACKET LIST

D280A103

91-04-00

Section AW0700

Page 1 End

Aug 10/2009