

**91-21-13**

**MASTER BUNDLE LIST**



91-21-13  
MASTER BUNDLE LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
EFFECTIVE PAGES			W0070 cont.			W0220 cont.		
	1 thru 5	Aug 10/2009	A	4	Aug 10/2009	O	4	Aug 10/2009
	6	BLANK	R W0080	1	Aug 10/2009	O W0250	1	Aug 10/2009
R W0000	1	Aug 10/2009	R	2	Aug 10/2009	O W0310	1	Aug 10/2009
O	2	Aug 10/2009	R	3	Aug 10/2009	O	2	Aug 10/2009
O	3	Aug 10/2009	A	4	Aug 10/2009	O	3	Aug 10/2009
O	4	Aug 10/2009	O W0090	1	Aug 10/2009	R	4	Aug 10/2009
O	5	Aug 10/2009	O W0100	1	Aug 10/2009	R W0320	1	Aug 10/2009
O	6	Aug 10/2009	R W0110	1	Aug 10/2009	R	2	Aug 10/2009
R	7	Aug 10/2009	R	2	Aug 10/2009	O	3	Aug 10/2009
R	8	Aug 10/2009	R	3	Aug 10/2009	O	4	Aug 10/2009
	9	May 11/2009	R	4	Aug 10/2009	R W0330	1	Aug 10/2009
R	10	Aug 10/2009	R W0120	1	Aug 10/2009	R	2	Aug 10/2009
R W0010	1	Aug 10/2009	O	2	Aug 10/2009	O W0340	1	Aug 10/2009
A	2	Aug 10/2009	O	3	Aug 10/2009	O W0350	1	Aug 10/2009
R W0020	1	Aug 10/2009	R W0130	1	Aug 10/2009	R W0410	1	Aug 10/2009
O W0040	1	Aug 10/2009	R	2	Aug 10/2009	R	2	Aug 10/2009
R	2	Aug 10/2009	R W0140	1	Aug 10/2009	O	3	Aug 10/2009
R	3	Aug 10/2009	R	2	Aug 10/2009	R W0420	1	Aug 10/2009
O	4	Aug 10/2009	O	3	Aug 10/2009	O	2	Aug 10/2009
A	5	Aug 10/2009	R W0150	1	Aug 10/2009	O W0440	1	Aug 10/2009
W0050	1	Feb 09/2009	R	2	Aug 10/2009	O W0450	1	Aug 10/2009
R W0060	1	Aug 10/2009	O W0200	1	Aug 10/2009	R W0520	1	Aug 10/2009
R	2	Aug 10/2009	R W0210	1	Aug 10/2009	O	2	Aug 10/2009
A	3	Aug 10/2009	O	2	Aug 10/2009	R W0620	1	Aug 10/2009
O W0070	1	Aug 10/2009	O W0220	1	Aug 10/2009	O W0730	1	Aug 10/2009
R	2	Aug 10/2009	R	2	Aug 10/2009	O W0760	1	Aug 10/2009
R	3	Aug 10/2009	O	3	Aug 10/2009	R W0810	1	Aug 10/2009

A = Added, R = Revised, D = Deleted, O = Overflow

MASTER BUNDLE LIST

D280A103

EFFECTIVE PAGES

Page 1  
Aug 10/2009



91-21-13  
MASTER BUNDLE LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
W0810 cont.			O W2150	1	Aug 10/2009	W2730	1	May 11/2009
R	2	Aug 10/2009	O W2160	1	Aug 10/2009	W2800	1	May 11/2009
O W1020	1	Aug 10/2009	O W2170	1	Aug 10/2009	W2870	1	May 11/2009
O	2	Aug 10/2009	O W2200	1	Aug 10/2009	W2880	1	May 11/2009
O W1030	1	Aug 10/2009	O	2	Aug 10/2009	R W3000	1	Aug 10/2009
O	2	Aug 10/2009	R W2210	1	Aug 10/2009	W3010	1	May 11/2009
O W1060	1	Aug 10/2009	O	2	Aug 10/2009	R W3020	1	Aug 10/2009
O W1080	1	Aug 10/2009	A	3	Aug 10/2009	R W3030	1	Aug 10/2009
R W1120	1	Aug 10/2009	R W2220	1	Aug 10/2009	W3040	1	May 11/2009
O W1130	1	Aug 10/2009	W2230	1	May 11/2009	W3050	1	May 11/2009
O W1140	1	Aug 10/2009	W2240	1	May 11/2009		2	May 11/2009
R W1160	1	Aug 10/2009	W2250	1	May 11/2009	W3060	1	May 11/2009
O W1170	1	Aug 10/2009	R W2260	1	Aug 10/2009	W3070	1	May 11/2009
O W1180	1	Aug 10/2009	W2300	1	May 11/2009	W3140	1	May 11/2009
O W1240	1	Aug 10/2009	W2360	1	May 11/2009	R	2	Aug 10/2009
O W1260	1	Aug 10/2009	W2380	1	May 11/2009	R	3	Aug 10/2009
O W1270	1	Aug 10/2009	W2400	1	May 11/2009		4	May 11/2009
O W1280	1	Aug 10/2009	R W2410	1	Aug 10/2009	R	5	Aug 10/2009
R W1660	1	Aug 10/2009	W2460	1	May 11/2009		6	May 11/2009
R W2000	1	Aug 10/2009	W2500	1	May 11/2009		7	May 11/2009
O W2020	1	Aug 10/2009	R W2510	1	Aug 10/2009	R W3150	1	Aug 10/2009
O W2030	1	Aug 10/2009	W2520	1	May 11/2009	R	2	Aug 10/2009
O W2100	1	Aug 10/2009	W2530	1	May 11/2009		3	May 11/2009
O	2	Aug 10/2009	W2580	1	May 11/2009	R W3160	1	Aug 10/2009
O W2110	1	Aug 10/2009	W2590	1	May 11/2009	W3170	1	May 11/2009
O	2	Aug 10/2009	W2650	1	May 11/2009	R W3190	1	Aug 10/2009
O W2130	1	Aug 10/2009	W2660	1	May 11/2009	R W3240	1	Aug 10/2009
O W2140	1	Aug 10/2009	W2700	1	May 11/2009	W3250	1	May 11/2009

A = Added, R = Revised, D = Deleted, O = Overflow

MASTER BUNDLE LIST

D280A103

EFFECTIVE PAGES

Page 2  
Aug 10/2009



91-21-13  
MASTER BUNDLE LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
R W3260	1	Aug 10/2009	W4140	1	May 11/2009	W5150	1	May 11/2009
R W3270	1	Aug 10/2009	R	2	Aug 10/2009		2	May 11/2009
R W3280	1	Aug 10/2009	R	3	Aug 10/2009		3	May 11/2009
R W3290	1	Aug 10/2009		4	May 11/2009	W5160	1	May 11/2009
W3300	1	May 11/2009	R W4160	1	Aug 10/2009		2	May 11/2009
W3310	1	May 11/2009	W4170	1	May 11/2009		3	May 11/2009
W3320	1	May 11/2009	W4180	1	May 11/2009	W5170	1	May 11/2009
W3330	1	May 11/2009	R W4190	1	Aug 10/2009	W5180	1	May 11/2009
W3370	1	May 11/2009	W4220	1	May 11/2009	W5190	1	May 11/2009
W3380	1	May 11/2009	R W4240	1	Aug 10/2009	W5200	1	May 11/2009
W3390	1	May 11/2009	R W4250	1	Aug 10/2009		2	May 11/2009
W3410	1	May 11/2009	R	2	Aug 10/2009	R W5220	1	Aug 10/2009
R W3500	1	Aug 10/2009	R W4720	1	Aug 10/2009	R W5230	1	Aug 10/2009
R W3510	1	Aug 10/2009		2	May 11/2009	A	2	Aug 10/2009
R W3520	1	Aug 10/2009	W5000	1	May 11/2009	O W5240	1	Aug 10/2009
R W3550	1	Aug 10/2009	W5030	1	May 11/2009	O W5250	1	Aug 10/2009
W3570	1	May 11/2009	W5050	1	May 11/2009	R W5270	1	Aug 10/2009
W3580	1	May 11/2009	W5070	1	May 11/2009	O W5290	1	Aug 10/2009
W3590	1	May 11/2009	W5080	1	May 11/2009	O W5300	1	Aug 10/2009
R W3600	1	Aug 10/2009	W5090	1	May 11/2009	O W5310	1	Aug 10/2009
W3700	1	May 11/2009		2	May 11/2009	O W5330	1	Aug 10/2009
	2	May 11/2009	R W5100	1	Aug 10/2009	R W5350	1	Aug 10/2009
W3710	1	May 11/2009	R	2	Aug 10/2009	O W5360	1	Aug 10/2009
W3720	1	May 11/2009	W5110	1	May 11/2009	O W5370	1	Aug 10/2009
W3800	1	May 11/2009	R	2	Aug 10/2009	O W5380	1	Aug 10/2009
W3890	1	May 11/2009	W5120	1	May 11/2009	O W5390	1	Aug 10/2009
W4000	1	May 11/2009	W5130	1	May 11/2009	O W5400	1	Aug 10/2009
R W4130	1	Aug 10/2009	R W5140	1	Aug 10/2009	O W5410	1	Aug 10/2009

A = Added, R = Revised, D = Deleted, O = Overflow

MASTER BUNDLE LIST

D280A103

EFFECTIVE PAGES

Page 3  
Aug 10/2009



91-21-13  
MASTER BUNDLE LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
R W5430	1	Aug 10/2009	W6120 cont.			O W6570	1	Aug 10/2009
O W5450	1	Aug 10/2009	R	2	Aug 10/2009	R W6580	1	Aug 10/2009
O W5460	1	Aug 10/2009	R W6130	1	Aug 10/2009	R W6730	1	Aug 10/2009
R W5500	1	Aug 10/2009	O W6160	1	Aug 10/2009	R W7020	1	Aug 10/2009
R	2	Aug 10/2009	O W6170	1	Aug 10/2009	O W7030	1	Aug 10/2009
A	3	Aug 10/2009	O W6180	1	Aug 10/2009	R W7050	1	Aug 10/2009
A	4	Aug 10/2009	O W6200	1	Aug 10/2009	R W7060	1	Aug 10/2009
R W5510	1	Aug 10/2009	R	2	Aug 10/2009	O W7100	1	Aug 10/2009
O	2	Aug 10/2009	A	3	Aug 10/2009	R W7120	1	Aug 10/2009
O W5520	1	Aug 10/2009	O W6210	1	Aug 10/2009	O	2	Aug 10/2009
R W5530	1	Aug 10/2009		2	Feb 09/2009	O	3	Aug 10/2009
O W5560	1	Aug 10/2009	W6220	1	Feb 09/2009	A	4	Aug 10/2009
O W5580	1	Aug 10/2009	W6230	1	Feb 09/2009	R W7130	1	Aug 10/2009
O W5590	1	Aug 10/2009	W6240	1	Feb 09/2009	R W7150	1	Aug 10/2009
R W5600	1	Aug 10/2009		2	Feb 09/2009	W7180	1	May 11/2009
O W5610	1	Aug 10/2009		3	Feb 09/2009	W7190	1	May 11/2009
O W5710	1	Aug 10/2009		4	Feb 09/2009	W7200	1	May 11/2009
R W5720	1	Aug 10/2009	W6280	1	Feb 09/2009		2	May 11/2009
O	2	Aug 10/2009	W6410	1	Feb 09/2009	W7220	1	May 11/2009
O	3	Aug 10/2009	W6420	1	Feb 09/2009	R W7230	1	Aug 10/2009
O	4	Aug 10/2009	W6430	1	Feb 09/2009	W7350	1	May 11/2009
O W5820	1	Aug 10/2009	W6490	1	Feb 09/2009	W7380	1	May 11/2009
O W5830	1	Aug 10/2009	R W6500	1	Aug 10/2009	W7500	1	May 11/2009
O W6020	1	Aug 10/2009	A	2	Aug 10/2009	R W7520	1	Aug 10/2009
O W6030	1	Aug 10/2009	R W6510	1	Aug 10/2009	W7530	1	May 11/2009
O W6100	1	Aug 10/2009	O W6520	1	Aug 10/2009	W7540	1	May 11/2009
O W6110	1	Aug 10/2009	O W6530	1	Aug 10/2009	W7580	1	May 11/2009
R W6120	1	Aug 10/2009	O W6560	1	Aug 10/2009	W7590	1	May 11/2009

A = Added, R = Revised, D = Deleted, O = Overflow

MASTER BUNDLE LIST

D280A103

EFFECTIVE PAGES

Page 4  
Aug 10/2009



91-21-13  
MASTER BUNDLE LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
R	W7760	1						
R	W8020	1						
	W8030	1						
R	W8120	1						
A		2						
O	W8130	1						
O	W8150	1						
R	W8220	1						
R		2						
A		3						
R	W8230	1						
	W8480	1						
	W8520	1						
	W8530	1						
	W9000	1						
	W9100	1						
		2						
		BLANK						

A = Added, R = Revised, D = Deleted, O = Overflow

MASTER BUNDLE LIST

D280A103

EFFECTIVE PAGES

Page 5  
Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0001</b>	<b>NA2</b>	<b>P1 - CAPTAINS INSTRUMENT PANEL</b>				
D10030P				D10030J	W3704	YK907-YK911, YK918, YL421-YL426, YM643-YM651
D40738J				D40738P	W0104	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D03977A			P001-00/ /			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D03977B			P001-00/ /			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D03979A			P001-00/ /			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D03979B			P001-00/ /			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D03981A			P002-00/ /			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D03981B			P002-00/ /			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652

MASTER BUNDLE LIST

D280A103

91-21-13

Section W0000

Page 1

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0001</b>	<b>NA2</b>	<b>P1 - CAPTAINS INSTRUMENT PANEL (continued)</b>				
D04207J		AP0900A	POS 03	D04207P	W2207	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40578J		AP0900A	POS 04	D40578P	W5156	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D04221J		AP0900A	POS 09	D04221P	W2221	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40914J		AP0900A	POS 10	D40914P	W2022	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40944J		AP0900A	POS 11	D40944P	W5202	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40804J		AP0900A	POS 18	D40804P	W5506	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D41833J		AP0900A	POS 19	D41833P	W2651	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D10030J		AP0900A	POS 25	D10030P	W3704	YK912, YK919, YL401, YL427-YL429, YM652

**MASTER BUNDLE LIST**

D280A103

**91-21-13**

Section W0000

Page 2

Aug 10/2009





Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0001</b>	<b>NA2</b>	<b>P1 - CAPTAINS INSTRUMENT PANEL (continued)</b>				
D10031		M01810	193/219/L007			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D10033		M01810	193/219/L007			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D10035		M01810	193/219/L007			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D10037		M01810	193/219/L007			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D10039		M01810	193/219/L007			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D10041		M01810	193/219/L007			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D10059		M01812	193/218/L007			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D10061		M01812	193/218/L007			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652

MASTER BUNDLE LIST

D280A103

91-21-13

Section W0000

Page 3

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0001</b>	<b>NA2</b>	<b>P1 - CAPTAINS INSTRUMENT PANEL (continued)</b>				
D10063		M01812	193/218/L007			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D10065		M01812	193/218/L007			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D10067		M01812	193/218/L007			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D10069		M01812	193/218/L007			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D11990		M01952	P002-03/ /			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D00319		N00041	P002-01/ /			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D00686		N00054	P002-02/ /			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D00714		N00145	P001-01/ /			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0000

Page 4

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0001</b>	<b>NA2</b>	<b>P1 - CAPTAINS INSTRUMENT PANEL (continued)</b>				
D02435		N00170	P001-03/ /			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D02437		N00170	P001-03/ /			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D03977		N00187	P001-00/ /			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D03979		N00188	P001-00/ /			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D03981		N00189	P002-00/ /			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D00903		P001-01	P001-00/ /			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D00423		P001-03	P001-00/ /			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D01036		P001-05	P001-00/ /			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652

MASTER BUNDLE LIST

D280A103

91-21-13

Section W0000

Page 5

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0001</b>	<b>NA2</b>	<b>P1 - CAPTAINS INSTRUMENT PANEL (continued)</b>				
D02650		P001-09	P001-00/ /			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D00331		P002-02	P002-00/ /			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D00339		P002-02	P002-00/ /			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D11732		P002-03	P002-00/ /			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D03999		P003-01	P003-00/ /			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D03993		P007-01	P007-01/ /			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D11810		P041-00	P041-00/ /			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D11812		P041-00	P041-00/ /			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0000

Page 6

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0003</b>	<b>NB2</b>	<b>P3 - F/O INSTRUMENT PANEL</b>				
D10034P				D10034J	W3705	YK907-YK911, YK918, YL421-YL426, YM643-YM651
D40740J				D40740P	W0204	YC001-YC030, YK901-YL429, YM643-YM652
D03983B			* / /			YC001-YC030, YK901-YL429, YM643-YM652
D03985B			* / /			YC001-YC030, YK901-YL429, YM643-YM652
D03987B			* / /			YC001-YC030, YK901-YL429, YM643-YM652
D03985A			192/230/R019			YC001-YC030, YK901-YL429, YM643-YM652
D03987A			P003-00/ /			YC001-YC030, YK901-YL429, YM643-YM652
D03983A			P009-00/ /			YC001-YC030, YK901-YL429, YM643-YM652
D40824J		AP0900A	POS 05	D40824P	W5514	YC001-YC030, YK901-YL429, YM643-YM652
D04237J		AP0900A	POS 06	D04237P	W2237	YC001-YC030, YK901-YL429, YM643-YM652
D40580J		AP0900A	POS 07	D40580P	W5160	YC001-YC030, YK901-YL429, YM643-YM652
D40924J		AP0900A	POS 14	D40924P	W2030	YC001-YC030, YK901-YL429, YM643-YM652
D46033J		AP0900A	POS 16	D46033P	W2383	YC001-YC030, YK901-YL429, YM643-YM652

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0000

Page 7

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0003</b>	<b>NB2</b>	<b>P3 - F/O INSTRUMENT PANEL (continued)</b>				
D04251J		AP0900A	POS 23	D04251P	W2251	YC001-YC030, YK901-YL429, YM643-YM652
D10032J		AP0900A	POS 26	D10032P	W3706	YK912-YK917, YK919-YL401, YL427-YL429, YM652
D10032P		AP0900A	POS 26	D10032J	W3706	YK907-YK911, YK918, YL421-YL426, YM643-YM651
D10034J		AP0900A	POS 27	D10034P	W3705	YK912-YK917, YK919-YL401, YL427-YL429, YM652
D10045		M01811	197/218/R007			YC001-YC030, YK901-YL429, YM643-YM652
D10047		M01811	197/218/R007			YC001-YC030, YK901-YL429, YM643-YM652
D10049		M01811	197/218/R007			YC001-YC030, YK901-YL429, YM643-YM652
D10051		M01811	197/218/R007			YC001-YC030, YK901-YL429, YM643-YM652
D10053		M01811	197/218/R007			YC001-YC030, YK901-YL429, YM643-YM652
D10055		M01811	197/218/R007			YC001-YC030, YK901-YL429, YM643-YM652
D10073		M01813	197/216/R007			YC001-YC030, YK901-YL429, YM643-YM652
D10075		M01813	197/216/R007			YC001-YC030, YK901-YL429, YM643-YM652
D10077		M01813	197/216/R007			YC001-YC030, YK901-YL429, YM643-YM652

**MASTER BUNDLE LIST**

D280A103

**91-21-13**

Section W0000

Page 8

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0003</b>	<b>NB2</b>	<b>P3 - F/O INSTRUMENT PANEL (continued)</b>				
D10079		M01813	197/216/R007			YC001-YC030, YK901-YL429, YM643-YM652
D10081		M01813	197/216/R007			YC001-YC030, YK901-YL429, YM643-YM652
D10083		M01813	197/216/R007			YC001-YC030, YK901-YL429, YM643-YM652
D00716		N00146	P003-03/ /			YC001-YC030, YK901-YL429, YM643-YM652
D02678		N00158	P003-01/ /			YC001-YC030, YK901-YL429, YM643-YM652
D02439		N00171	P003-01/ /			YC001-YC030, YK901-YL429, YM643-YM652
D02441		N00171	P003-01/ /			YC001-YC030, YK901-YL429, YM643-YM652
D03983		N00190	P009-00/ /			YC001-YC030, YK901-YL429, YM643-YM652
D03985		N00191	P003-00/ /			YC001-YC030, YK901-YL429, YM643-YM652
D03987		N00192	P003-00/ /			YC001-YC030, YK901-YL429, YM643-YM652
D00895		P001-03	P001-00/ /			YC001-YC030, YK901-YL429, YM643-YM652
D00333		P002-02	P002-00/ /			YC001-YC030, YK901-YL429, YM643-YM652
D03991		P003-01	P003-00/ /			YC001-YC030, YK901-YL429, YM643-YM652

MASTER BUNDLE LIST

D280A103

91-21-13

Section W0000

Page 9

May 11/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0003</b>	<b>NB2</b>	<b>P3 - F/O INSTRUMENT PANEL (continued)</b>				
D01038		P003-04	P003-00/ /			YC001-YC030, YK901-YL429, YM643-YM652
D01205		P003-07	P003-00/ /			YC008-YC030, YK901-YL429, YM643-YM652
D09004P D03995		P003-07 P007-02	P003-00/ / P007-02/ /	D09004J		YC001-YC007 YC001-YC030, YK901-YL429, YM643-YM652
D11842		P042-00	P042-00/ /			YC001-YC030, YK901-YL429, YM643-YM652
D11844		P042-00	P042-00/ /			YC001-YC030, YK901-YL429, YM643-YM652
<b>W0008</b>	<b>SN2</b>	<b>CONTROL STAND (PURCHASED BUNDLE: DWG NO. 254A1221)</b>				
D05148J		AF0213A	POS 01	D05148P	W6208	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D05148J		AF0213A	POS 01	D05148P		YK913-YK917, YK920, YL430, YM653-YM670
D05150J		AF0213A	POS 04	D05150P	W6208	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D05150J		AF0213A	POS 04	D05150P		YK913-YK917, YK920, YL430, YM653-YM670
D02487 D03524 D02485		AF0222A AF0222A R00384	POS 03 POS 05 P008-00/ /	D00417 D00698		ALL ALL ALL

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0000  
Page 10 End  
Aug 10/2009





# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0010</b>	<b>NN2</b>	<b>FWD GALLEY LIGHT MODULE (M01839)</b>				
D11400				D11398		ALL
D11396		M01838	323/289/R021			ALL
<b>W0018</b>	<b>*</b>	<b>P18</b>				
D40218P		AP0600A	POS 09	D40218J	W0044	ALL
D40198J		AP1800A	POS 01	D40198P	W3150	ALL
D48901J		AP1800A	POS 02	D48901P	W3381	ALL
D40840J		AP1800A	POS 03	D40840P	W2112	YC001-YC030, YK901-YM670
D40840J		AP1800A	POS 03	D40840P		YC031-YC050
D40524J		AP1800A	POS 04	D40524P	W2212	ALL
D40538J		AP1800A	POS 05	D40538P	W2218	YC001-YC030, YK901-YM670
D40538J		AP1800A	POS 05	D40538P		YC031-YC050
D40220J		AP1800A	POS 06	D40220P	W3144	ALL
D40298J		AP1800A	POS 07	D40298P	W4250	ALL
D40504J		AP1800A	POS 08	D40504P	W2104	ALL
D40514J		AP1800A	POS 09	D40514P	W2112	YC001-YC030, YK901-YM670
D40514J		AP1800A	POS 09	D40514P		YC031-YC050
D40522J		AP1800A	POS 10	D40522P	W2114	ALL
D41805J		AP1800B	POS 01	D41805P	W2201	ALL
D40576J		AP1800B	POS 02	D40576P	W5156	YC001-YC030, YK901-YM670
D40576J		AP1800B	POS 02	D40576P		YC031-YC050
D41801J		AP1800B	POS 03	D41801P	W2101	ALL
D40802J		AP1800B	POS 05	D40802P	W5506	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40802J		AP1800B	POS 05	D40802P		YC031-YC050, YK913-YK917, YK920, YL430, YM653-YM670
D41803J		AP1800B	POS 06	D41803P	W2175	ALL
D40830J		AP1800B	POS 07	D40830P	W5514	YC001-YC030, YK901-YM670
D40830J		AP1800B	POS 07	D40830P		YC031-YC050

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0010

Page 1

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0018</b>	*	<b>P18 (continued)</b>				
D41807J		AP1800B	POS 08	D41807P	W2651	YC001-YC030, YK901-YM670
D41807J		AP1800B	POS 08	D41807P		YC031-YC050
D41809J		AP1800B	POS 09	D41809P	W2653	ALL

---

## MASTER BUNDLE LIST

D280A103

**91-21-13**  
Section W0010  
Page 2 End  
Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0024</b>	<b>S2N</b>	<b>P15 REFUELING PANEL</b>				
D04578P				D04578J	W1664	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D11318		N00193	//			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D11320		N00194	//			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D11322		N00195	//			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
<b>W0026</b>	<b>LN1</b>	<b>LEFT FORWARD WINDSCREEN</b>				
D11724				D11722		YK912-YK917, YK919-YL430, YM652
D12352				D12350		YK912-YK917, YK919-YL430, YM652
<b>W0028</b>	<b>SA2</b>	<b>P28 APU REMOTE CONTROL PANEL</b>				
D48080J		AP2800A	POS 01	D48080P	W8524	YC001-YC030

MASTER BUNDLE LIST

D280A103

91-21-13

Section W0020

Page 1 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0041</b>	<b>NA2</b>	<b>P61 - DATA LOADER CONTROL PANEL</b>				
D04003J				D04003P	W0071	YC012-YC030, YK901-YK906
D04003J D04005P				D04003P D04005J	W0071	YC031-YC050 YC012-YC030, YK901-YK906
D04005P D07081 D07083 D07085 D07087 D07089				D04005J D06069 D06069 D06069 D06069 D06069		YC031-YC050 YK901-YM670 YK901-YM670 YK901-YM670 YK901-YM670 YK901-YM670
D04003J D04005P			P061-00/ / P061-00/ /	D04003P D04005J	W0071 W0071	YC001-YC011 YC001-YC011
D06035 D06045 D40623J		AP0600B	P061-00/ / P061-00/ / POS 06			YC012-YM670 YC012-YM670 YC001-YC030, YK901-YM670
D40623J D40625J D04151J		AP0600B AP0600B AP0600C	POS 06 POS 13 POS 06	D40623P D40625P D04151P	W2135  W2597 W3327	YC031-YC050 ALL ALL
D06045 D06035 D02269 D02271		M00245 M00296 M1206-P1 M1206-P2	P006-00/ / 209/223/R011			YC001-YC011 YC001-YC011 ALL ALL
D02875 D02877 D02879 D10193 D01907 D06053		P061-01 P061-01 P061-01 P061-01 P061-02 P061-07	P061-01/ / P061-01/ / P061-01/ / P061-01/ / P061-02/ / P061-00/ /			ALL ALL ALL ALL ALL YK907-YM670
<b>W0044</b>	*	<b>P6 (LOAD WIRES)</b>				
D40744J D40744P				D40744P D40744J	W0044 W0044	ALL ALL
D13730 D45233J D45233J D45233J			279/284/R010 POS 03 POS 03 POS 03			YC031-YM670 YC001-YC030 YC031-YC050 YK901-YM670
		AP0600A AP0600A AP0600A		D45233P D45233P D45233P	W3589  W3605	

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0040

Page 1

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0044</b>	*	<b>P6 (LOAD WIRES) (continued)</b>				
D40444J		AP0600A	POS 04	D40444P	W6214	YC001-YC030, YK901-YM670
D40444J		AP0600A	POS 04	D40444P		YC031-YC050
D40226J		AP0600A	POS 05	D40226P	W3058	YC001-YC030, YK901-YM670
D40226J		AP0600A	POS 05	D40226P		YC031-YC050
D40218J		AP0600A	POS 09	D40218P	W0018	ALL
D40750J		AP0600B	POS 02	D40750P	W5158	YC004-YM670
D40822J		AP0600B	POS 03	D40822P	W5514	YC001-YC030, YK901-YM670
D40822J		AP0600B	POS 03	D40822P		YC031-YC050
D41430J		AP0600B	POS 05	D41430P	W2138	ALL
D41832J		AP0600B	POS 07	D41832P	W6412	YC001-YL430
D40800J		AP0600B	POS 08	D40800P	W5506	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40800J		AP0600B	POS 08	D40800P		YC031-YC050, YK913-YK917, YK920, YL430, YM653-YM670
D40368J		AP0600B	POS 09	D40368P	W6110	YC001-YC030, YK901-YM670
D40368J		AP0600B	POS 09	D40368P		YC031-YC050
D46067J		AP0600B	POS 10	D46067P	W2231	ALL
D46052J		AP0600B	POS 11	D46052P	W2030	ALL
D40812J		AP0600B	POS 12	D40812P	W6506	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40812J		AP0600B	POS 12	D40812P		YK913-YK917, YK920, YL430, YM653-YM670
D40386J		AP0600B	POS 14	D40386P	W6412	ALL
D46065J		AP0600B	POS 15	D46065P	W2383	YC001-YC030, YK901-YM670
D46065J		AP0600B	POS 15	D46065P		YC031-YC050
D40352J		AP0600B	POS 16	D40352P	W5612	ALL

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0040

Page 2

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0044</b>	*	<b>P6 (LOAD WIRES) (continued)</b>				
D40820J		AP0600B	POS 17	D40820P	W6208	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40820J		AP0600B	POS 17	D40820P		YK913-YK917, YK920, YL430, YM653-YM670
D40816J		AP0600B	POS 18	D40816P	W6206	YC001-YC030, YK901-YM670
D40816J		AP0600B	POS 18	D40816P		YC031-YC050
D46063J		AP0600B	POS 19	D46063P	W2169	ALL
D46069J		AP0600B	POS 20	D46069P	W2661	ALL
D40574J		AP0600B	POS 21	D40574P	W6222	ALL
D40396J		AP0600B	POS 22	D40396P	W6414	YC001-YM652
D40396J		AP0600B	POS 22	D40396P		YM653-YM670
D46061J		AP0600B	POS 23	D46061P	W2103	YC001-YC030, YK901-YM652
D46061J		AP0600B	POS 23	D46061P		YC031-YC050, YM653-YM670
D40654J		AP0600B	POS 24	D40654P	W6024	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40654J		AP0600B	POS 24	D40654P		YK913-YK917, YK920, YL430, YM653-YM670
D40502J		AP0600C	POS 01	D40502P	W2104	ALL
D40526J		AP0600C	POS 02	D40526P	W2212	ALL
D40512J		AP0600C	POS 03	D40512P	W2112	YC001-YC030, YK901-YM670
D40512J		AP0600C	POS 03	D40512P		YC031-YC050
D40532J		AP0600C	POS 04	D40532P	W2216	ALL
D40550J		AP0600C	POS 05	D40550P	W2508	YC001-YC030, YK901-YM670
D40550J		AP0600C	POS 05	D40550P		YC031-YC050
D40558J		AP0600C	POS 08	D40558P	W2510	ALL
D40536J		AP0600C	POS 09	D40536P	W2218	YC001-YC030, YK901-YM670
D40536J		AP0600C	POS 09	D40536P		YC031-YC050
D40582J		AP0600C	POS 10	D40582P	W2204	ALL
D01598		M00564	265/ /			ALL
D10046		M01456	P006-00/ /			ALL

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0040

Page 3

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0044</b>	*	<b>P6 (LOAD WIRES) (continued)</b>				
D11712		M01720	P006-00/ /			ALL
D11712A		M01720	P006-00/ /			ALL
D11712B		M01720	P006-00/ /			ALL
D11714		M01720	P006-00/ /			ALL
D11714A		M01720	P006-00/ /			ALL
D11714B		M01720	P006-00/ /			ALL
D12006		M1957				ALL
D13790		P061-08	P061-00/ /			YC031-YM670
D13792		P061-08	P061-00/ /			YC031-YM670
D00944		R00011	P006-00/ /			ALL
D01620		R00025	P006-00/ /			ALL
D01622		R00026	P006-00/ /			ALL
D01614		R00033	P006-00/ /			ALL
D01616		R00034	P006-00/ /			ALL
D01640		R00047	P006-00/ /			ALL
D01618		R00087	P006-00/ /			ALL
D10762		R00550	P006-00/ /			ALL
D10820		R00556	P006-00/ /			ALL
D10822		R00557	P006-00/ /			ALL
D10824		R00558	P006-00/ /			ALL
D11756		R00634	P006-00/ /			ALL
D11839		R00897	P006-00/ /			YC001-YC010, YC012-YC030, YM643-YM670
D13712		R00918	P006-00/ /			YC031-YM670
D11939		R00919	P006-00/ /			ALL
D11941		R00920	P006-00/ /			ALL
<b>W0048</b>	<b>NN2</b>	<b>P19 (EXTERNAL POWER RECEPTACLE PANEL)</b>				
D04499J				D04499P	W5337	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D44252J				D44252P	W6024	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D06009			P019-00/ /			ALL

MASTER BUNDLE LIST

D280A103

91-21-13

Section W0040

Page 4

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0049</b>	<b>NA2</b>	<b>THRUST LEVER ENGINE NO. 1</b>				
D08313J		AF0213A	POS 05	D08313P	W5369	ALL
D10171J		AF0213A	POS 06	D10171P		ALL

---

**MASTER BUNDLE LIST**

D280A103

**91-21-13**  
Section W0040  
Page 5 End  
Aug 10/2009





# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0050</b>	<b>NN2</b>	<b>FWD ENTRY LIGHT MODULE (M01677)</b>				
D10754				D10756		YC001-YC026
D10754			329/293/L004			YC028-YM670
D10760		M01679	M1677/ /			ALL
<b>W0051</b>	<b>NB2</b>	<b>TITLE THRUST LEVER ENGINE NO. 2</b>				
D08315J		AF0222A	POS 04	D08315P	W5457	ALL
D10173J		AF0222A	POS 06	D10173P		ALL
<b>W0052</b>	<b>NN2</b>	<b>AFT ENTRY LIGHT MODULE (M01678)</b>				
D11462				D11460		ALL
D11464		M01843	M01678/ /			ALL

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0050

Page 1 End

Feb 09/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0063</b>	<b>NN2</b>	<b>NITROGEN GEN SYS - OPERABILITY INDICATOR</b>				
D14112		P63				YC031-YC050, YK906-YM670
<b>W0066</b>	<b>RN2</b>	<b>J46 INTEGRATION PANEL WIRING</b>				
D46130J		AJ0046A	POS 01	D46130P	W5510	YC004-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D46130J		AJ0046A	POS 01	D46130P		YC031-YC050, YK913-YK917, YK920, YL430, YM653-YM670
D46110J		AJ0046A	POS 04	D46110P	W6208	YC004-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D46110J		AJ0046A	POS 04	D46110P		YK913-YK917, YK920, YL430, YM653-YM670
D46128J		AJ0046A	POS 05	D46128P	W5506	YC004-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D46128J		AJ0046A	POS 05	D46128P		YC031-YC050, YK913-YK917, YK920, YL430, YM653-YM670
D46144J		AJ0046A	POS 07	D46144P	W6170	YC004-YM670
D46146J		AJ0046A	POS 08	D46146P	W6172	YC004-YM670
D40103J		AJ0046A	POS 09	D40103P	W2247	YC004-YM670
D40107J		AJ0046A	POS 10	D40107P	W6491	YC004-YC006
D46104J		AJ0046A	POS 11	D46104P	W5514	YC004-YC030, YK901-YM670
D46104J		AJ0046A	POS 11	D46104P		YC031-YC050
D46150J		AJ0046A	POS 12	D46150P	W6208	YC004-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D46150J		AJ0046A	POS 12	D46150P		YK913-YK917, YK920, YL430, YM653-YM670

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0060

Page 1

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0066</b>	<b>RN2</b>	<b>J46 INTEGRATION PANEL WIRING (continued)</b>				
D46116J		AJ0046A	POS 13	D46116P	W5156	YC004-YC030, YK901-YM670
D46116J		AJ0046A	POS 13	D46116P		YC031-YC050
D46102J		AJ0046A	POS 14	D46102P	W5160	YC004-YC030, YK901-YM670
D46102J		AJ0046A	POS 14	D46102P		YC031-YC050
D46108J		AJ0046A	POS 15	D46108P	W2508	YC004-YC030, YK901-YM670
D46108J		AJ0046A	POS 15	D46108P		YC031-YC050
D46122J		AJ0046A	POS 16	D46122P	W5160	YC004-YC030, YK901-YM670
D46122J		AJ0046A	POS 16	D46122P		YC031-YC050
D46124J		AJ0046B	POS 01	D46124P	W2212	YC004-YM670
D46138J		AJ0046B	POS 02	D46138P	W6242	YC004-YM670
D46120J		AJ0046B	POS 03	D46120P	W5158	YC004-YM670
D46132J		AJ0046B	POS 04	D46132P	W6506	YC004-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D46132J		AJ0046B	POS 04	D46132P		YK913-YK917, YK920, YL430, YM653-YM670
D46136J		AJ0046B	POS 05	D46136P	W6528	YC004-YM670
D40097J		AJ0046B	POS 06	D40097P	W5503	YC004-YM652
D40097J		AJ0046B	POS 06	D40097P		YM653-YM670
D40099J		AJ0046B	POS 07	D40099P	W2237	YC004-YC006
D46142J		AJ0046B	POS 08	D46142P	W6414	YC004-YM652
D46142J		AJ0046B	POS 08	D46142P		YM653-YM670
D46118J		AJ0046B	POS 09	D46118P	W6510	YC004-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D46118J		AJ0046B	POS 09	D46118P		YC031-YC050, YK913-YK917, YK920, YL430, YM653-YM670
D46106J		AJ0046B	POS 10	D46106P	W6506	YC004-YK912, YK918-YK919, YL401-YL429, YM643-YM652

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0060

Page 2

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0066</b>	<b>RN2</b>	<b>J46 INTEGRATION PANEL WIRING (continued)</b>				
D46106J		AJ0046B	POS 10	D46106P		YK913-YK917, YK920, YL430, YM653-YM670
D46100J		AJ0046B	POS 11	D46100P	W5158	YC004-YM670
D46112J		AJ0046B	POS 12	D46112P	W2216	YC004-YM670
D46126J		AJ0046B	POS 13	D46126P	W2510	YC004-YM670
D46114J		AJ0046B	POS 15	D46114P	W2218	YC004-YC030, YK901-YM670
D46114J		AJ0046B	POS 15	D46114P		YC031-YC050

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0060

Page 3 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0071</b>	<b>NN2</b>	<b>P61 - FIRST OBSERVERS OXY MASK MIC</b>				
D04003P				D04003J	W0041	YC001-YC030, YK901-YK906
D04005J				D04005P	W0041	YC001-YC030, YK901-YK906
D06053		M00526	P061-00/ /			YC001-YC030, YK901-YK906
<b>W0072</b>	<b>RB2*</b>	<b>J20 JUNCTION BOX-PLATE B (CONTAINS ENGINE 2 WIRING)</b>				
D40634J		AJ0020B	POS 01	D40634P	W5158	ALL
D40638J		AJ0020B	POS 02	D40638P	W5158	ALL
D40640J		AJ0020B	POS 03	D40640P	W5158	ALL
D40636J		AJ0020B	POS 04	D40636P	W5156	YC001-YC030, YK901-YM670
D40636J		AJ0020B	POS 04	D40636P		YC031-YC050
D40632J		AJ0020B	POS 05	D40632P	W5100	YC001-YC030, YK901-YM670
D40632J		AJ0020B	POS 05	D40632P		YC031-YC050
D40642J		AJ0020B	POS 07	D40642P	W5156	YC001-YC030, YK901-YM670
D40642J		AJ0020B	POS 07	D40642P		YC031-YC050
D40858J		AJ0020D	POS 01	D40858P	W5158	YC031-YM670
D02375		R00361	J020-0B/ /			ALL
D10924		R00567	J020-0B/ /			ALL
D11010		R00588	J020-0B/ /			ALL
D11014		R00590	J020-0B/ /			ALL
D11016		R00591	J020-0B/ /			ALL
D11024		R00595	J020-0B/ /			ALL
D11026		R00596	J020-0B/ /			ALL
D11868		R00645	J020-0B/ /			ALL
D12250		R00682	J020-0B/ /			ALL
D10569		R00708	J020-0B/ /			ALL
D10573		R00710	J020-0B/ /			ALL
D10575		R00711	J020-0B/ /			ALL
D10577		R00712	J020-0B/ /			ALL
D10579		R00713	J020-0B/ /			ALL
D10581		R00714	J020-0B/ /			ALL
D12466		R00735	J020-00/ /			ALL
D13794		R00934	J020-0B/166/L025			YC031-YM670
D13796		R00936	J020-0B/166/L025			YC031-YM670

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0070

Page 1

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0074</b>	<b>NA1</b>	<b>J20 JUNCTION BOX-PLATE A</b>				
D40884J		AJ0020A	POS 02	D40884P	W5158	YC028-YM670
D40878J		AJ0020C	POS 02	D40878P	W5156	YC028-YC030, YK901-YM670
D40878J		AJ0020C	POS 02	D40878P		YC031-YC050
D13688		R00903	J020-00/ /			YC028-YM670
D13690		R00904	J020-00/ /			YC028-YM670
D13842		R00951	J00020/ /			YC031-YC050, YK906-YM670
<b>W0076</b>	<b>LA2*</b>	<b>J22 JUNCTION BOX (CONTAINS ENGINE 1 WIRING)</b>				
D40678J		AJ0022	POS 01	D40678P	W5156	YC001-YC030, YK901-YL430
D40678J		AJ0022	POS 01	D40678P		YC031-YC050
D40672J		AJ0022	POS 02	D40672P	W5510	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40672J		AJ0022	POS 02	D40672P		YC031-YC050, YK913-YK917, YK920, YL430, YM653-YM670
D40666J		AJ0022	POS 03	D40666P	W5156	YC001-YC030, YK901-YM670
D40666J		AJ0022	POS 03	D40666P		YC031-YC050
D40670J		AJ0022	POS 04	D40670P	W5156	YC001-YC030, YK901-YM670
D40670J		AJ0022	POS 04	D40670P		YC031-YC050
D40676J		AJ0022	POS 05	D40676P	W5156	YC001-YC030, YK901-YM670
D40676J		AJ0022	POS 05	D40676P		YC031-YC050
D40668J		AJ0022	POS 06	D40668P	W5100	YC001-YC030, YK901-YM670
D40668J		AJ0022	POS 06	D40668P		YC031-YC050
D40674J		AJ0022	POS 07	D40674P	W5506	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40674J		AJ0022	POS 07	D40674P		

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0070

Page 2

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0076</b>	<b>LA2*</b>	<b>J22 JUNCTION BOX (CONTAINS ENGINE 1 WIRING) (continued)</b>				
D40674J		AJ0022	POS 07	D40674P		YC031-YC050, YK913-YK917, YK920, YL430, YM653-YM670
D09002J		AJ0022	POS 08	D09002P	W2237	YC003-YC006
D40680J		AJ0022	POS 08	D40680P	W5156	YC001-YC002, YC007-YC030, YK901-YM670
D40680J		AJ0022	POS 08	D40680P		YC031-YC050
D40147J		AJ0022	POS 09	D40147P	W6491	YC001-YC002, YC007-YC030, YK901-YM670
D40147J		AJ0022	POS 09	D40147P		YC031-YC050
D02775		R00454	J022-00/ /			ALL
D10634		R00477	J022-00/ /			ALL
D10636		R00478	J022-00/ /			ALL
D03527		R00495	J022-00/ /			ALL
D10918		R00564	J022-00/ /			ALL
D10922		R00566	J022-00/ /			ALL
D10954		R00576	J022-00/ /			ALL
D11002		R00584	J022-00/ /			ALL
D11008		R00587	J022-00/ /			ALL
D11012		R00589	J022-00/ /			ALL
D11018		R00592	J022-00/ /			ALL
D11020		R00593	J022-00/ /			ALL
D11022		R00594	J022-00/ /			ALL
D11404		R00627	J022-00/ /			ALL
D11406		R00628	J022-00/ /			ALL
D10571		R00709	J022-00/ /			ALL
D12538		R00737	J022-00/ /			ALL
D12756		R00742	J022-00/ /			ALL
D10849		R00746	J022-00/ /			ALL
D11073		R00779	J022-00/ /			YC001-YC002, YC007-YM670
D11131		R00780	J022-00/ /			ALL

MASTER BUNDLE LIST

D280A103

91-21-13

Section W0070

Page 3

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0078</b>	<b>SB2*</b>	<b>J23 (J-BOX)</b>				
D40686J		AJ0023	POS 02	D40686P	W5506	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40686J		AJ0023	POS 02	D40686P		YC031-YC050, YK913-YK917, YK920, YL430, YM653-YM670
D40688J		AJ0023	POS 05	D40688P	W5510	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40688J		AJ0023	POS 05	D40688P		YC031-YC050, YK913-YK917, YK920, YL430, YM653-YM670
D02880		R00322	J023-00/ /			ALL
D02882		R00323	J023-00/ /			ALL
D02884		R00324	J023-00/ /			ALL
D10920		R00565	J023-00/ /			ALL
D02886		S00813	J023-00/ /			ALL

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0070

Page 4 End

Aug 10/2009





# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0080</b>	<b>RA2</b>	<b>J24 BOX</b>				
D40696J		AJ0024	POS 02	D40696P	W6510	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40696J		AJ0024	POS 02	D40696P		YC031-YC050, YK913-YK917, YK920, YL430, YM653-YM670
D40698J		AJ0024	POS 03	D40698P	W5100	YC001-YC030, YK901-YM670
D40692J		AJ0024	POS 04	D40692P	W5158	ALL
D40700J		AJ0024	POS 05	D40700P	W5158	ALL
D40702J		AJ0024	POS 06	D40702P	W5158	ALL
D40694J		AJ0024	POS 07	D40694P	W5160	YC001-YC030, YK901-YM670
D40694J		AJ0024	POS 07	D40694P		YC031-YC050
D01805		R00263	J024-00/ /			ALL
D10638		R00479	J024-00/ /			ALL
D10640		R00480	J024-00/ /			ALL
D03529		R00496	J024-00/ /			ALL
D10916		R00563	J024-00/ /			ALL
D10926		R00568	J024-00/ /			ALL
D10952		R00575	J024-00/ /			ALL
D11004		R00585	J024-00/ /			ALL
D11154		R00613	J024-00/ /			ALL
D11402		R00626	J024-00/ /			ALL
D11866		R00644	J00024/ /			YC001-YC030, YK901-YM670
D11874		R00648	J024-00/ /			ALL
D11876		R00649	J024-00/ /			ALL
D11878		R00650	J024-00/ /			ALL
D10525		R00660	J024-00/ /			ALL
D12248		R00678	J024-00/ /			ALL
D12540		R00738	J024-00/ /			ALL
D12758		R00743	J024-00/ /			ALL
D10847		R00745	J024-00/ /			YC001-YC002, YC007-YM670
D12225		R00945	J00024/ /			YK901-YM670
D12227		R00946	J00024/ /			YK901-YM670
D12229		R00949	J00024/ /			YK901-YM670

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0080

Page 1

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0080</b>	<b>RA2</b>	<b>J24 BOX (continued)</b>				
D14156		R01001	J24/ /			YK906-YM670
<b>W0082</b>	<b>NN2</b>	<b>J39 JUNCTION BOX-PLATE A</b>				
D43900J		AJ0039A	POS 01	D43900P	W5506	YK907-YK912, YK918-YK919, YL401-YL429
D43900J		AJ0039A	POS 01	D43900P		YK913-YK917, YK920, YL430
D43910J		AJ0039A	POS 03	D43910P	W5367	YK907-YL430
D43906J		AJ0039A	POS 04	D43906P	W5160	YK907-YL430
D43908J		AJ0039A	POS 05	D43908P	W5375	YK907-YL430
D13940		R00964	J039/ /			YK907-YL430
D13942		R00965	J039/ /			YK907-YL430
D13944		R00966	J039/ /			YK907-YL430
D13946		R00967	J039/ /			YK907-YL430
D13948		R00968	J039/ /			YK907-YL430
D13950		R00969	J039/ /			YK907-YL430
D13952		R00970	J039/ /			YK907-YL430
<b>W0088</b>	<b>LN2</b>	<b>J48 INTEGRATION PANEL WIRING</b>				
D48100J		AJ0048A	POS 01	D48100P	W2104	YC004-YM670
D48126J		AJ0048A	POS 02	D48126P	W5122	YC004-YM670
D48122J		AJ0048A	POS 03	D48122P	W5510	YC004-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D48122J		AJ0048A	POS 03	D48122P		YC031-YC050, YK913-YK917, YK920, YL430, YM653-YM670
D40095J		AJ0048A	POS 04	D40095P	W2149	YC004-YC030, YK901-YM670
D40095J		AJ0048A	POS 04	D40095P		YC031-YC050
D48102J		AJ0048A	POS 05	D48102P	W2112	YC004-YC030, YK901-YM670
D48102J		AJ0048A	POS 05	D48102P		YC031-YC050
D40081J		AJ0048A	POS 06	D40081P	W2207	YC004-YC006
D48110J		AJ0048A	POS 07	D48110P	W5170	YC004-YM670
D40087J		AJ0048A	POS 08	D40087P	W5501	YC004-YM670

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0080

Page 2

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0088</b>	<b>LN2</b>	<b>J48 INTEGRATION PANEL WIRING (continued)</b>				
D48120J		AJ0048A	POS 09	D48120P	W5506	YC004-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D48120J		AJ0048A	POS 09	D48120P		YC031-YC050, YK913-YK917, YK920, YL430, YM653-YM670
D40091J		AJ0048A	POS 10	D40091P	W6491	YC004-YC006
D40089J		AJ0048A	POS 11	D40089P	W6491	YC004-YC006
D48116J		AJ0048A	POS 13	D48116P	W5158	YC004-YM670
D48106J		AJ0048A	POS 14	D48106P	W2508	YC004-YC030, YK901-YM670
D48106J		AJ0048A	POS 14	D48106P		YC031-YC050
D48108J		AJ0048A	POS 15	D48108P	W2532	YC004-YC030, YK901-YM670
D48108J		AJ0048A	POS 15	D48108P		YC031-YC050
D48112J		AJ0048A	POS 16	D48112P	W5156	YC004-YC030, YK901-YM670
D48112J		AJ0048A	POS 16	D48112P		YC031-YC050
D48114J		AJ0048A	POS 17	D48114P	W5156	YC004-YC030, YK901-YM670
D48114J		AJ0048A	POS 17	D48114P		YC031-YC050
D48124J		AJ0048A	POS 18	D48124P	W6110	YC004-YC030, YK901-YM670
D48124J		AJ0048A	POS 18	D48124P		YC031-YC050
D48136J		AJ0048A	POS 19	D48136P	W5172	YC004-YM670
D48104J		AJ0048A	POS 20	D48104P	W2114	YC004-YM670
D48134J		AJ0048A	POS 21	D48134P	W5162	YC004-YM670
D48118J		AJ0048A	POS 22	D48118P	W5506	YC004-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D48118J		AJ0048A	POS 22	D48118P		YC031-YC050, YK913-YK917, YK920, YL430, YM653-YM670

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0080

Page 3

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0088</b>	<b>LN2</b>	<b>J48 INTEGRATION PANEL WIRING (continued)</b>				
D48130J		AJ0048A	POS 23	D48130P	W6510	YC004-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D48130J		AJ0048A	POS 23	D48130P		YC031-YC050, YK913-YK917, YK920, YL430, YM653-YM670
D48128J		AJ0048A	POS 24	D48128P	W6570	YC004-YM670
D48138J		AJ0048A	POS 25	D48138P	W6506	YC004-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D48138J		AJ0048A	POS 25	D48138P		YK913-YK917, YK920, YL430, YM653-YM670
D48132J		AJ0048A	POS 26	D48132P	W6506	YC004-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D48132J		AJ0048A	POS 26	D48132P		YK913-YK917, YK920, YL430, YM653-YM670

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0080

Page 4 End

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0094</b>	<b>RN2</b>	<b>J4 JUNCTION BOX</b>				
D40602J		AJ0004	POS 01	D40602P	W6222	ALL
D40612J		AJ0004	POS 05	D40612P	W5160	YK901-YM670
D40616J		AJ0004	POS 06	D40616P	W6222	ALL
D40614J		AJ0004	POS 07	D40614P	W6222	ALL
D40658J		AJ0004	POS 09	D40658P		YC031-YC050
D40658J		AJ0004	POS 09	D40658P	W5160	YK901-YM670
D40610J		AJ0004	POS 10	D40610P	W5160	YC001-YC030, YK901-YM670
D40610J		AJ0004	POS 10	D40610P		YC031-YC050
D10254		R00444	J004-00/ /			YK901-YM670
D11997		R00924	J004-00/ /			YK901-YM670
D13798		R00935	J004-00/167/R025			YC031-YM670
D13800		R00937	J004-00/167/R025			YC031-YM670

MASTER BUNDLE LIST

D280A103

91-21-13

Section W0090

Page 1 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0104</b>	<b>SN2</b>	<b>P7-CAPTAIN'S GLARESHIELD PANEL (SN2)</b>				
D40738P				D40738J	W0001	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40738P				D40738J		YK913-YK917, YK920, YL430, YM653-YM670
D14118		L00340	P007-00/250/L012			YC001-YC030, YK901-YM670
D14114		L00341	P007-00/ /			YC001-YC030, YK901-YM670
D11922		L01013	P007-00/ /			YC001-YC030, YK901-YM670
D11924		L01013	P007-00/ /			YC001-YC030, YK901-YM670
D11936		L01099	P007-00/ /			YC001-YC030, YK901-YM670
D11938		L01099	P007-00/ /			YC001-YC030, YK901-YM670

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0100

Page 1 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0111</b>		<b>E1-1 SHELF</b>				
I D01153C			*/*/*			ALL
I D02209A			*/*/*			ALL
D02743F			*/*/*			ALL
I D00235A			E001-01/ /			ALL
I D00235B			E001-01/ /			ALL
D00728A			E001-01/ /			ALL
I D00728B			E001-01/ /			ALL
D00728C			E001-01/ /			ALL
D01153A			E001-01/ /			ALL
D01153B			E001-01/ /			ALL
D02209B			E001-01/ /			ALL
D02743A			E001-01/ /			ALL
I D02743B			E001-01/ /			ALL
I D02743C			E001-01/ /			ALL
D02743D			E001-01/ /			ALL
D02743E			E001-01/ /			ALL
D10009A			E001-01/ /			YC001-YC030
D10009B			E001-01/ /			YC001-YC030
D10009C			E001-01/ /			YC001-YC030
D10064			E001-01/ /			ALL
I D10135A			E001-01/ /			ALL
D10135B			E001-01/ /			ALL
I D10135C			E001-01/ /			ALL
I D10740A			E004-01/ /			YK901-YM670
D10740B			E004-01/ /			YK901-YM670
I D10740C			E004-01/ /			YK901-YM670
D40458J	AE0101A		POS 01	D40458P	W5156	YC001-YC002, YC007-YC030, YK901-YM670
D40458J	AE0101A		POS 01	D40458P		YC031-YC050
D40454J	AE0101A		POS 02	D40454P	W5156	YC001-YC030, YK901-YM670
D40454J	AE0101A		POS 02	D40454P		YC031-YC050
D45133J	AE0101A		POS 03	D45133P	W5111	YC001-YC030, YK901-YM670
D45133J	AE0101A		POS 03	D45133P		YC031-YC050
D41145J	AE0101A		POS 04	D41145P	W5161	ALL
D40452J	AE0101A		POS 05	D40452P	W5156	YC001-YC030, YK901-YM670
D40452J	AE0101A		POS 05	D40452P		YC031-YC050

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0110

Page 1

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0111</b>		<b>E1-1 SHELF (continued)</b>				
D42311J		AE0101A	POS 06	D42311P	W5461	YC001-YC030, YK901-YM670
D42311J		AE0101A	POS 06	D42311P		YC031-YC050
D41159J		AE0101A	POS 07	D41159P	W5353	ALL
D04425J		AE0101A	POS 08	D04425P	W5301	ALL
D41153J		AE0101A	POS 11	D41153P	W5111	YC012-YC030, YK901-YM670
D41153J		AE0101A	POS 11	D41153P		YC031-YC050
D40364J		AE0101A	POS 12	D40364P	W6110	YC001-YC030, YK901-YM670
D40364J		AE0101A	POS 12	D40364P		YC031-YC050
D41811J		AE0101A	POS 13	D41811P	W2101	ALL
D40120J		AE0101A	POS 14	D40120P	W5568	ALL
D40162J		AE0101A	POS 15	D40162P	W5032	ALL
D40180J		AE0101A	POS 16	D40180P	W6028	ALL
D41121J		AE0101A	POS 17	D41121P	W5721	ALL
D40122J		AE0101A	POS 18	D40122P	W5166	ALL
D45113J		AE0101A	POS 19	D45113P	W5111	YC001-YC030, YK901-YM670
D45113J		AE0101A	POS 19	D45113P		YC031-YC050
D41155J		AE0101A	POS 20	D41155P	W5161	ALL
D43211J		AE0101A	POS 21	D43211P	W5461	YC001-YC030, YK901-YM670
D43211J		AE0101A	POS 21	D43211P		YC031-YC050
D46461J		AE0101A	POS 22	D46461P	W5461	YC001-YC030, YK901-YM670
D46461J		AE0101A	POS 22	D46461P		YC031-YC050
D04075J		AE0101A	POS 23	D04075P	W5369	ALL
D41821J		AE0101A	POS 24	D41821P	W2175	ALL
D41125J		AE0101A	POS 25	D41125P	W5719	ALL
D04083J		AE0101A	POS 26	D04083P	W3381	ALL
D04073J		AE0101A	POS 27	D04073P	W5367	ALL
D40510J		AE0101A	POS 28	D40510P	W2218	YC001-YC030, YK901-YM670
D40510J		AE0101A	POS 28	D40510P		YC031-YC050
D04069J		AE0101A	POS 29	D04069P	W2363	ALL
D40019J		AE0101A	POS 30	D40019P	W2221	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0110

Page 2

Aug 10/2009





# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0111</b>		<b>E1-1 SHELF (continued)</b>				
D40019J		AE0101A	POS 30	D40019P		YK913-YK917, YK920, YL430, YM653-YM670
D45203J		AE0101A	POS 31	D45203P	W5205	YC001-YC030, YK901-YM670
D45203J		AE0101A	POS 31	D45203P		YC031-YC050
D04079J		AE0101A	POS 32	D04079P	W3377	ALL
D40774J		AE0101A	POS 33	D40774P	W6214	YK901-YM670
D45515J		AE0101A	POS 35	D45515P	W5463	YK901-YM670
D45551J		AE0101A	POS 36	D45551P	W5381	YK901-YM670
D41563J		AE0101B	POS 01	D41563P	W5463	ALL
D40464J		AE0101B	POS 02	D40464P	W5160	YC001-YC030, YK901-YM670
D41161J		AE0101B	POS 03	D41161P	W5397	ALL
D40142J		AE0101B	POS 04	D40142P	W6166	ALL
D40063J		AE0101B	POS 05	D40063P	W5723	YC001-YC030, YK901-YM670
D40063J		AE0101B	POS 05	D40063P		YC031-YC050
D40948J		AE0101B	POS 06	D40948P	W6166	ALL
D40818J		AE0101B	POS 07	D40818P	W6208	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40818J		AE0101B	POS 07	D40818P		YK913-YK917, YK920, YL430, YM653-YM670
D41163J		AE0101B	POS 08	D41163P	W5463	ALL
D46023J		AE0101B	POS 09	D46023P	W2383	YC001-YC030, YK901-YM670
D46023J		AE0101B	POS 09	D46023P		YC031-YC050
D43317J		AE0101B	POS 10	D43317P	W5723	YC001-YC030, YK901-YM670
D43317J		AE0101B	POS 10	D43317P		YC031-YC050
D41147J		AE0101B	POS 11	D41147P	W5163	ALL
D41157J		AE0101B	POS 12	D41157P	W5163	ALL
D46013J		AE0101B	POS 13	D46013P	W2103	YC001-YC030, YK901-YM652
D46013J		AE0101B	POS 13	D46013P		YC031-YC050, YM653-YM670
D40160J		AE0101B	POS 14	D40160P	W6588	ALL
D04611J		AE0101B	POS 15	D04611P	W4001	ALL
D04609J		AE0101B	POS 16	D04609P	W4001	ALL

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0110

Page 3

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0111</b>		<b>E1-1 SHELF (continued)</b>				
D04615J		AE0101B	POS 17	D04615P	W4001	ALL
D04613J		AE0101B	POS 18	D04613P	W4001	ALL
D04619J		AE0101B	POS 19	D04619P	W5001	ALL
D04617J		AE0101B	POS 20	D04617P	W5001	ALL
D04623J		AE0101B	POS 21	D04623P	W5001	ALL
D04621J		AE0101B	POS 22	D04621P	W5001	ALL
D09003J		AE0101B	POS 23	D09003P	W9000	YC001-YC007
D40064J		AE0101B	POS 23	D40064P	W2218	YK901-YM670
D01153		M00652	E001-01//			ALL
D10009		M00917	E001-01//			YC001-YC030
D00235		M01474	E001-01//			ALL
D02209		M01474	E001-01//			ALL
D02743		M01485	E001-01//			ALL
D10740		M01654	E001-01//			YK901-YM670
D00728		M01746	E001-01//			ALL
D10135		M01875	E001-01//			ALL
D10161		M01908	//			ALL

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0110

Page 4 End

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0121</b>	<b>NA2</b>	<b>E1-2 SHELF</b>				
D00149A			*/*/*			YC001-YC030, YK901-YM670
D00149C			*/*/*			YC001-YC030, YK901-YM670
D03623C			*/*/*			YC001-YC030, YK901-YM670
D00149B			E001-02/ /			YC001-YC030, YK901-YM670
D00161A			E001-02/ /			YC001-YC030, YK901-YM670
D00161B			E001-02/ /			YC001-YC030, YK901-YM670
D00161C			E001-02/ /			YC001-YC030, YK901-YM670
D03623A			E001-02/ /			YC001-YC030, YK901-YM670
D03623B			E001-02/ /			YC001-YC030, YK901-YM670
D10719A			E001-02/ /			YC001-YC030, YK901-YM670
D10719B			E001-02/ /			YC001-YC030, YK901-YM670
D10719C			E001-02/ /			YC001-YC030, YK901-YM670
D41211P		AE0102A	POS 01	D41211J	W5719	YC001-YC030, YK901-YM670
D45115P		AE0102A	POS 02	D45115J	W5111	YC001-YC030, YK901-YM670
D04029P		AE0102A	POS 03	D04029J	W2149	YC001-YC030, YK901-YM670
D41217P		AE0102A	POS 04	D41217J	W2177	YC001-YC030, YK901-YM670
D04205P		AE0102A	POS 05	D04205J	W2205	YC001-YC030, YK901-YM670
D41827P		AE0102A	POS 06	D41827J	W2651	YC001-YC030, YK901-YM670
D04269P		AE0102A	POS 08	D04269J	W5189	YC001-YC030, YK901-YM670
D45201P		AE0102A	POS 10	D45201J	W5205	YC001-YC030, YK901-YM670

MASTER BUNDLE LIST

D280A103

91-21-13

Section W0120

Page 1

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0121</b>	<b>NA2</b>	<b>E1-2 SHELF (continued)</b>				
D41213P		AE0102A	POS 12	D41213J	W5723	YC001-YC030, YK901-YM670
D41127P		AE0102A	POS 13	D41127J	W5721	YC001-YC030, YK901-YM670
D04607P		AE0102B	POS 01	D04607J	W5039	YC001-YC030, YK901-YM670
D41215P		AE0102B	POS 02	D41215J	W5183	YC001-YC030, YK901-YM670
D04121P		AE0102B	POS 04	D04121J	W7187	YC001-YC030, YK901-YM670
D04603P		AE0102B	POS 05	D04603J	W5363	YC001-YC030, YK901-YM670
D04025P		AE0102B	POS 07	D04025J	W3141	YC001-YC030, YK901-YM670
D42941P		AE0102B	POS 08	D42941J	W3607	YC001-YC030, YK901-YM670
D41251P		AE0104B	POS 01	D41251J	W0521	YC001-YC030, YK901-YM670
D00149		M00163	E001-02/ /			YC001-YC030, YK901-YM670
D00161		M00164	E001-02/ /			YC001-YC030, YK901-YM670
D02473		M01346	E001-02/ /			YC001-YC030, YK901-YM670
D02475		M01346	E001-02/ /			YC001-YC030, YK901-YM670
D02477		M01346	E001-02/ /			YC001-YC030, YK901-YM670
D03623		M01724	E001-02/ /			YC001-YC030, YK901-YM670
D03781		M01726	309/180/R021			YC001-YC030, YK901-YM670
D10163		M01908	/ /			YC001-YC030, YK901-YM670
D10719		M02104	E001-02/ /			YC001-YC030, YK901-YM670
D02115		R00315	306/180/R021			YC001-YC030, YK901-YM670

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0120

Page 2

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0122</b>	<b>LN1</b>	<b>J11 RELAY PANEL - LANDING GEAR HYDRAULICS</b>				
D12968			J011-00/ /			YC001-YC007
D46618J		AJ0011	POS 01	D46618P	W5124	YM643-YM670
D46620J		AJ0011	POS 01	D46620P	W5124	YC001-YL430
D46616J		AJ0011	POS 02	D46616P	W5124	YM643-YM670
D46622J		AJ0011	POS 02	D46622P	W5124	YC008-YL430
D46622J		J11		D46622P	W5124	YC001-YC007
D12968		R00782	J011-00/ /			YC008-YM670
D11179		R00813	J011-00/ /			ALL
D13364		R00850	J011-00/ /			YC012-YM670
D03254		R353				ALL
D11370		R625				ALL

MASTER BUNDLE LIST

D280A103

91-21-13

Section W0120

Page 3 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0130</b>	<b>NN2</b>	<b>EMERGENCY AISLE LIGHTS</b>				
D11344			MULTI/ /			YC001-YC011
<b>W0131</b>	<b>NA2</b>	<b>E001-03 SHELF</b>				
D00199C			*/*/*			ALL
D01040A			*/*/*			ALL
D00199A			E001-03/ /			ALL
D00199B			E001-03/ /			ALL
D01040B			E001-03/ /			ALL
D01040C			E001-03/ /			ALL
D02639A			E001-03/ /			ALL
D02639B			E001-03/ /			ALL
D02639C			E001-03/ /			ALL
D04133J		AE0103A	POS 02	D04133P	W5419	YC001-YC019
D04133J		AE0103A	POS 02	D04133P	W5413	YC020-YM670
D46051J		AE0103A	POS 03	D46051P	W2661	ALL
D43048J		AE0103A	POS 04	D43048P	W6730	ALL
D41337J		AE0103A	POS 05	D41337P	W3307	ALL
D41400J		AE0103A	POS 06	D41400P	W2022	ALL
D43040J		AE0103A	POS 07	D43040P	W6528	ALL
D40488J		AE0103A	POS 08	D40488P	W5158	ALL
D40344J		AE0103A	POS 10	D40344P	W5610	ALL
D40498J		AE0103A	POS 11	D40498P	W5156	YC001-YC030, YK901-YM670
D40498J		AE0103A	POS 11	D40498P		YC031-YC050
D04123J		AE0103A	POS 12	D04123P	W2403	YC001-YC030
D04123J		AE0103A	POS 12	D04123P	W5107	YK901-YM670
D04149J		AE0103A	POS 13	D04149P	W2307	ALL
D40466J		AE0103A	POS 14	D40466P	W5160	YC001-YC030, YK901-YM670
D40466J		AE0103A	POS 14	D40466P		YC031-YC050
D43010J		AE0103A	POS 15	D43010P	W5234	ALL
D45227J		AE0103A	POS 16	D45227P	W5303	ALL
D41831J		AE0103A	POS 17	D41831P	W2651	YC001-YC030, YK901-YM670
D41831J		AE0103A	POS 17	D41831P		YC031-YC050
D04195J		AE0103A	POS 18	D04195P	W5189	YC001-YC030, YK901-YM670
D04195J		AE0103A	POS 18	D04195P		YC031-YC050
D41509J		AE0103A	POS 19	D41509P	W5719	ALL

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0130

Page 1

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0131</b>	<b>NA2</b>	<b>E001-03 SHELF (continued)</b>				
D40810J		AE0103A	POS 20	D40810P	W6506	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40810J		AE0103A	POS 20	D40810P		YK913-YK917, YK920, YL430, YM653-YM670
D04181J		AE0103A	POS 21	D04181P	W3311	ALL
D41131J		AE0103A	POS 22	D41131P	W5723	YC001-YC030, YK901-YM670
D41131J		AE0103A	POS 22	D41131P		YC031-YC050
D02639		M00063	E001-03/ /			ALL
D00199		M00149	E001-03/ /			ALL
D01040		M00162	E001-03/ /			ALL

MASTER BUNDLE LIST

D280A103

91-21-13

Section W0130

Page 2 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0141</b>	<b>NB2</b>	<b>E1-4 SHELF - RIGHT</b>				
D03625A			E001-04/ /			ALL
D03625B			E001-04/ /			ALL
D03625C			E001-04/ /			ALL
D10137A			E001-04/ /			ALL
D10137B			E001-04/ /			ALL
D10137C			E001-04/ /			ALL
D10721A			E001-04/ /			ALL
D10721B			E001-04/ /			ALL
D10721C			E001-04/ /			ALL
D42943P		AE0102B	POS 03	D42943J	W3609	ALL
D04027P		AE0102B	POS 06	D04027J	W3143	ALL
D08019P		AE0104A	POS 01	D08019J	W2465	ALL
D05971P		AE0104A	POS 02	D05971J	W5457	ALL
D04081P		AE0104A	POS 03	D04081J	W3379	ALL
D45143P		AE0104A	POS 05	D45143J	W5121	YC001-YC030, YK901-YM670
D45143P		AE0104A	POS 05	D45143J		YC031-YC050
D04311P		AE0104A	POS 06	D04311J	W2251	ALL
D40049P		AE0104A	POS 07	D40049J	W2205	YC001-YC030, YK901-YM670
D40049P		AE0104A	POS 07	D40049J		YC031-YC050
D40047P		AE0104A	POS 08	D40047J	W5723	YC001-YC030, YK901-YM670
D46011P		AE0104A	POS 09	D46011J	W2103	YC031-YC050
D46011P		AE0104A	POS 09	D46011J		YC001-YC030, YK901-YM652
D46031P		AE0104A	POS 10	D46031J	W2383	YC031-YC050, YM653-YM670
D41463P		AE0104A	POS 11	D41463J	W5463	YC001-YC030, YK901-YM670
D45123P		AE0104A	POS 12	D45123J	W5121	ALL
D45123P		AE0104A	POS 12	D45123J		YC001-YC030, YK901-YM670
D45553P		AE0104A	POS 13	D45553J	W5383	YC031-YC050
D40560P		AE0104A	POS 14	D40560J	W2510	YK901-YM670
D04077P		AE0104A	POS 15	D04077J	W5375	ALL
D04273P		AE0104A	POS 17	D04273J	W5191	ALL
D04273P		AE0104A	POS 17	D04273J		YC001-YC030, YK901-YM670
D04273P		AE0104A	POS 17	D04273J		YC031-YC050

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0140

Page 1

Aug 10/2009





# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0141</b>	<b>NB2</b>	<b>E1-4 SHELF - RIGHT (continued)</b>				
D41129P		AE0104A	POS 18	D41129J	W5721	ALL
D40806P		AE0104A	POS 19	D40806J	W5506	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40806P		AE0104A	POS 19	D40806J		YC031-YC050, YK913-YK917, YK920, YL430, YM653-YM670
D40490P		AE0104A	POS 20	D40490J	W5158	ALL
D40496P		AE0104A	POS 21	D40496J	W5510	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40496P		AE0104A	POS 21	D40496J		YC031-YC050, YK913-YK917, YK920, YL430, YM653-YM670
D43016P		AE0104A	POS 22	D43016J	W5526	YC001-YC030, YK901-YM670
D43016P		AE0104A	POS 22	D43016J		YC031-YC050
D40556P		AE0104A	POS 23	D40556J	W2508	YC001-YC030, YK901-YM670
D40556P		AE0104A	POS 23	D40556J		YC031-YC050
D40332P		AE0104A	POS 26	D40332J	W5204	YK906-YM670
D40826P		AE0104A	POS 27	D40826J	W5514	YC001-YC030, YK901-YM670
D40826P		AE0104A	POS 27	D40826J		YC031-YC050
D40346P		AE0104A	POS 28	D40346J	W5610	ALL
D45517P		AE0104B	POS 02	D45517J	W5463	YK901-YM670
D41453P		AE0104B	POS 03	D41453J	W0523	ALL
D00742		M00237	E001-04/ /			ALL
D03625		M01725	E001-04/ /			ALL
D03787		M01727	302/180/R020			ALL
D10137		M01876	E001-04/ /			ALL
D10721		M02105	E001-04/ /			ALL
D02123		R00316	300/178/R022			ALL

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0140

Page 2

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0142</b>	<b>LN2</b>	<b>FWD ENTRY LIGHT PANEL</b>				
D10756 D40020J				D10754 D40020P	W3058	ALL YC001-YC030, YK901-YM670
D40020J D03160		L01086	304/288/R002	D40020P		YC031-YC050 ALL
<b>W0144</b>	<b>LN2</b>	<b>FWD RECESSED LIGHT PANEL</b>				
D40018J				D40018P	W4146	YC001-YC030, YK901-YM670
D40018J D11356 D11372 D11384		L01146 M01840 M01840	MULTI/ / MULTI/ / MULTI/ /	D40018P		YC031-YC050 ALL ALL ALL
<b>W0145</b>	<b>LA2</b>	<b>CAPT CONTROL SHAKER</b>				
D00281		M00232	210/220/L020			ALL
<b>W0147</b>	<b>RB2</b>	<b>F/O CONTROL SHAKER</b>				
D00367		M00424	210/220/R020			ALL

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0140

Page 3 End

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0151</b>	<b>NB2</b>	<b>E1-5 SHELF</b>				
D00169A			**/*			YC001-YC030, YK901-YM670
D00169C			**/*			YC001-YC030, YK901-YM670
D00155A			E001-05/ /			YC001-YC030, YK901-YM670
D00155B			E001-05/ /			YC001-YC030, YK901-YM670
D00155C			E001-05/ /			YC001-YC030, YK901-YM670
D00169B			E001-05/ /			YC001-YC030, YK901-YM670
D00201A			E001-05/ /			YC001-YC030, YK901-YM670
D00201B			E001-05/ /			YC001-YC030, YK901-YM670
D00201C			E001-05/ /			YC001-YC030, YK901-YM670
D04125P		AE0105A	POS 01	D04125J	W2405	YC001-YC030
D04125P		AE0105A	POS 01	D04125J	W5107	YK901-YM670
D04031P		AE0105A	POS 02	D04031J	W2151	YC001-YC030, YK901-YM670
D41507P		AE0105A	POS 03	D41507J	W5723	YC001-YC030, YK901-YM670
D04197P		AE0105A	POS 04	D04197J	W5191	YC001-YC030, YK901-YM670
D41557P		AE0105A	POS 07	D41557J	W5163	YC001-YC030, YK901-YM670
D41517P		AE0105A	POS 08	D41517J	W2247	YC001-YC030, YK901-YM670
D45125P		AE0105A	POS 09	D45125J	W5121	YC001-YC030, YK901-YM670
D41511P		AE0105A	POS 11	D41511J	W5099	YC001-YC030, YK901-YM670
D41515P		AE0105A	POS 12	D41515J	W5185	YC001-YC030, YK901-YM670
D04131P		AE0105A	POS 13	D04131J	W5411	YC001-YC030, YK901-YM670
D00201		M00150	E001-05/ /			YC001-YC030, YK901-YM670

MASTER BUNDLE LIST

D280A103

91-21-13

Section W0150

Page 1

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0151</b>	<b>NB2</b>	<b>E1-5 SHELF (continued)</b>				
D00169		M00165	E001-05/ /			YC001-YC030, YK901-YM670
D00155		M00381	E001-05/ /			YC001-YC030, YK901-YM670
D02849		M01347	E003-03/ /			YC001-YC030, YK901-YM670
D02851		M01347	E003-03/ /			YC001-YC030, YK901-YM670
D02853		M01347	E003-03/ /			YC001-YC030, YK901-YM670
D02705		S00942	316/163/L025			YC001-YC030, YK901-YM670
D02711		S00943	316/163/L025			YC001-YC030, YK901-YM670
<b>W0152</b>	<b>SN2</b>	<b>AFT ENTRY LIGHT PANEL</b>				
D11460				D11462		ALL
D40026J				D40026P	W3058	YC001-YC030, YK901-YM670
D40026J				D40026P		YC031-YC050
D40032J				D40032P	W7359	ALL
D06015			988/289/L000			ALL
D10180		L01223	964/289/0000			ALL
D11368		M01834	MULTI/ /			ALL
D11480		M01834	MULTI/ /			ALL
<b>W0154</b>	<b>LN2</b>	<b>AFT RECESSED LIGHT PANEL</b>				
D40038J				D40038P	W3146	YC001-YC030, YK901-YM670
D40038J				D40038P		YC031-YC050
D11358		L01146	MULTI/ /			ALL
D11382		M01840	MULTI/ /			ALL
D11394		M01840	MULTI/ /			ALL

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0150

Page 2 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0204</b>	<b>SN2</b>	<b>P7 FIRST OFFICER'S GLARESHIELD PANEL (SN2)</b>				
D40740P				D40740J	W0003	YC001-YC030, YK901-YL429, YM643-YM652
D40740P				D40740J		YL430, YM653-YM670
D11926		L00050	P007-00/ /			YC001-YC030, YK901-YM670
D11928		L00050	P007-00/ /			YC001-YC030, YK901-YM670
D14116		L00344	P007-00/ /			YC001-YC030, YK901-YM670
D14120		L00345	P007-00/250/R012			YC001-YC030, YK901-YM670
D11940		L01100	P007-00/ /			YC001-YC030, YK901-YM670
D11942		L01100	P007-00/ /			YC001-YC030, YK901-YM670

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0200

Page 1 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0210</b>	<b>LA2</b>	<b>E2-1 SHELF (WINDOW HEAT MODULES) LA2</b>				
D01042A			E002-01/ /			ALL
D01042B			E002-01/ /			ALL
D01044A			E002-01/ /			ALL
D01044B			E002-01/ /			ALL
D41432J		AE0201A	POS 15	D41432P	W2138	ALL
D40070J		AE0201A	POS 20	D40070P	W2108	ALL
D40518J		AE0201A	POS 21	D40518P	W2112	YC001-YC030, YK901-YM670
D40518J		AE0201A	POS 21	D40518P		YC031-YC050
D01042		M00320	E002-01/ /			ALL
D01044		M00321	E002-01/ /			ALL
<b>W0212</b>	*	<b>E2-1 SHELF</b>				
D49996J		AE0201A	POS 01	D49996P	W5112	ALL
D40934J		AE0201A	POS 02	D40934P	W5112	ALL
D40342J		AE0201A	POS 03	D40342P	W5112	ALL
D40564J		AE0201A	POS 05	D40564P	W2702	ALL
D40910J		AE0201A	POS 06	D40910P	W5726	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40910J		AE0201A	POS 06	D40910P		YK913-YK917, YK920, YL430, YM653-YM670
D40254J		AE0201A	POS 07	D40254P	W5726	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40254J		AE0201A	POS 07	D40254P		YK913-YK917, YK920, YL430, YM653-YM670
D40428J		AE0201A	POS 08	D40428P	W5510	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40428J		AE0201A	POS 08	D40428P		YC031-YC050, YK913-YK917, YK920, YL430, YM653-YM670

**MASTER BUNDLE LIST**

D280A103

**91-21-13**

Section W0210

Page 1

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0212</b>	*	<b>E2-1 SHELF (continued)</b>				
D40926J		AE0201A	POS 09	D40926P	W5726	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40926J		AE0201A	POS 09	D40926P		YK913-YK917, YK920, YL430, YM653-YM670
D40598J		AE0201A	POS 10	D40598P	W2112	YC001-YC030, YK901-YM670
D40598J		AE0201A	POS 10	D40598P		YC031-YC050
D40260J		AE0201A	POS 12	D40260P	W5110	YC001-YC030, YK901-YM670
D40260J		AE0201A	POS 12	D40260P		YC031-YC050
D40372J		AE0201A	POS 13	D40372P	W6210	YC001-YC030, YK901-YM670
D40372J		AE0201A	POS 13	D40372P		YC031-YC050
D40132J		AE0201A	POS 16	D40132P	W5164	ALL
D40718J		AE0201A	POS 17	D40718P	W5164	ALL
D40358J		AE0201A	POS 18	D40358P	W5612	ALL
D40340J		AE0201A	POS 19	D40340P	W5110	YC001-YC030, YK901-YM670
D40340J		AE0201A	POS 19	D40340P		YC031-YC050
D40258J		AE0201A	POS 23	D40258P	W5568	ALL
D40256J		AE0201A	POS 4	D40256P	W5112	ALL
D10890		G00010	E002-01/ /			ALL
D10890A		G00010	E002-01/ /			ALL
D10896		G00014	E002-01/ /			ALL
D10896A		G00014	E002-01/ /			ALL
D10896B		G00014	E002-01/ /			ALL
D10890B		GD00010	378/168/R047			ALL
D00102		T00011	E002-01/ /			ALL

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0210

Page 2 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0220</b>	<b>LA2</b>	<b>E2-2 SHELF</b>				
D10738A			E002-02/ /			YC001-YC030, YK901-YM670
D10738B			E002-02/ /			YC001-YC030, YK901-YM670
D10738C			E002-02/ /			YC001-YC030, YK901-YM670
D11114		AE0202A				YC001-YC030, YK901-YM670
D11114A		AE0202A				YC001-YC030, YK901-YM670
D11114B		AE0202A				YC001-YC030, YK901-YM670
D11114C		AE0202A				YC001-YC030, YK901-YM670
D11478		AE0202A				YC001-YC030, YK901-YM670
D11478A		AE0202A				YC001-YC030, YK901-YM670
D11478B		AE0202A				YC001-YC030, YK901-YM670
D40246J		AE0202A	POS 01	D40246P	W5104	YC001-YC030, YK901-YM670
D40586J		AE0202A	POS 02	D40586P	W5248	YC001-YC030, YK901-YM670
D40942J		AE0202A	POS 03	D40942P	W5726	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40942J		AE0202A	POS 03	D40942P		YK913-YK917, YK920, YL430, YM653-YM670
D40928J		AE0202A	POS 04	D40928P	W5726	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40928J		AE0202A	POS 04	D40928P		YK913-YK917, YK920, YL430, YM653-YM670
D40656J		AE0202A	POS 05	D40656P	W7592	YC001-YC030, YK901-YM652

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0220

Page 1

Aug 10/2009





# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0220</b>	<b>LA2</b>	<b>E2-2 SHELF (continued)</b>				
D40656J		AE0202A	POS 05	D40656P		YM653-YM670
D43050J		AE0202A	POS 06	D43050P	W6730	YC001-YC030, YK901-YM670
D40136J		AE0202A	POS 07	D40136P	W5564	YC001-YC030, YK901-YM670
D40138J		AE0202A	POS 08	D40138P	W5168	YC001-YC030, YK901-YM670
D40456J		AE0202A	POS 09	D40456P	W5156	YC001-YC030, YK901-YM670
D40348J		AE0202A	POS 10	D40348P	W5610	YC001-YC030, YK901-YM670
D40506J		AE0202A	POS 11	D40506P	W2104	YC001-YC030, YK901-YM670
D40520J		AE0202A	POS 12	D40520P	W2112	YC001-YC030, YK901-YM670
D43084J		AE0202A	POS 13	D43084P	W5230	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D43084J		AE0202A	POS 13	D43084P		YK913-YK917, YK920, YL430, YM653-YM670
D40118J		AE0202A	POS 14	D40118P	W5566	YC001-YC030, YK901-YM670
D40430J		AE0202A	POS 15	D40430P	W5506	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40430J		AE0202A	POS 15	D40430P		YK913-YK917, YK920, YL430, YM653-YM670
D40360J		AE0202A	POS 16	D40360P	W5612	YC001-YC030, YK901-YM670
D43060J		AE0202A	POS 17	D43060P	W6128	YC001-YC030, YK901-YM670
D41012J		AE0202A	POS 18	D41012P	W6214	YC001-YC030, YK901-YM670
D43008J		AE0202A	POS 19	D43008P	W5134	YC001-YC030, YK901-YM670

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0220

Page 2

Aug 10/2009



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0220</b>	<b>LA2</b>	<b>E2-2 SHELF (continued)</b>				
D40240J		AE0202A	POS 20	D40240P	W6102	YC001-YC030, YK901-YM670
D40012J		AE0202A	POS 21	D40012P	W7594	YC001-YC030, YK901-YM652
D40012J		AE0202A	POS 21	D40012P	W5726	YM653-YM670
D40912J		AE0202A	POS 22	D40912P		YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40912J		AE0202A	POS 22	D40912P	W5726	YK913-YK917, YK920, YL430, YM653-YM670
D40946J		AE0202A	POS 23	D40946P		YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40946J		AE0202A	POS 23	D40946P	W5310	YK913-YK917, YK920, YL430, YM653-YM670
D40450J		AE0202A	POS 24	D40450P		YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40450J		AE0202A	POS 24	D40450P	W5162	YK913-YK917, YK920, YL430, YM653-YM670
D40130J		AE0202A	POS 25	D40130P		YC001-YC030, YK901-YM670
D40380J		AE0202A	POS 26	D40380P	W6214	YC001-YC030, YK901-YM670
D40126J		AE0202A	POS 27	D40126P	W3170	YC001-YC030, YK901-YM670
D40724J		AE0202A	POS 28	D40724P	W5156	YC001-YC030, YK901-YM670
D43024J		AE0202A	POS 29	D43024P	W5728	YC001-YC030, YK901-YM670
D40646J		AE0202A	POS 30	D40646P	W2110	YC001-YC030, YK901-YM670
D46022J		AE0202A	POS 31	D46022P	W2110	YC001-YC030, YK901-YM670

### MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0220

Page 3

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0220</b>	<b>LA2</b>	<b>E2-2 SHELF (continued)</b>				
D42014J		AE0202A	POS 32	D42014P	W5088	YC001-YC030, YK901-YM670
D41840J		AE0202A	POS 33	D41840P	W5094	YC001-YC030, YK901-YM670
D00998		M00279	E002-02/ /			YC001-YC030, YK901-YM670
D01000		M00279	E002-02/ /			YC001-YC030, YK901-YM670
D01002		M00279	E002-02/ /			YC001-YC030, YK901-YM670
D10738		M01653	E002-02/ /			YC001-YC030, YK901-YM670

MASTER BUNDLE LIST

D280A103

91-21-13

Section W0220

Page 4 End

Aug 10/2009



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0252</b>	<b>NN2</b>	<b>L WING TIP LIGHTS</b>				
D40014P				D40014J	W1242	YC001-YC030
D11056		L00040	727B/245/L663			YC001-YC030
D11058		L00043	727E/245/L674			YC001-YC030
<b>W0254</b>	<b>NN2</b>	<b>R WING TIP LIGHTS</b>				
D40016P				D40016J	W1244	YC001-YC030
D11052		L00038	727B/245/R663			YC001-YC030
D11054		L00042	727E/245/R674			YC001-YC030

### MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0250

Page 1 End

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0311</b>	<b>NA2</b>	<b>E3-1 ELECTRONIC SHELF - LEFT</b>				
D03651A			E003-01/ /			YC001-YC030, YK901-YM670
D03651B			E003-01/ /			YC001-YC030, YK901-YM670
D03651C			E003-01/ /			YC001-YC030, YK901-YM670
D03667A			E003-01/ /			YC001-YC030, YK901-YM670
D03667B			E003-01/ /			YC001-YC030, YK901-YM670
D03667C			E003-01/ /			YC001-YC030, YK901-YM670
D03973A			E003-01/ /			YC001-YC030, YK901-YM670
D03973B			E003-01/ /			YC001-YC030, YK901-YM670
D03973C			E003-01/ /			YC001-YC030, YK901-YM670
D03973D			E003-01/ /			YC001-YC030, YK901-YM670
D03973E			E003-01/ /			YC001-YC030, YK901-YM670
D03973F			E003-01/ /			YC001-YC030, YK901-YM670
D04271J		AE0301A	POS 01	D04271P	W5189	YC001-YC030, YK901-YM670
D42163J		AE0301A	POS 02	D42163P	W5273	YC001-YC030, YK901-YM670
D40101J		AE0301A	POS 04	D40101P	W2527	YC001-YC030, YK901-YM670
D40301J		AE0301A	POS 05	D40301P	W2531	YC001-YC030, YK901-YM670
D04267J		AE0301A	POS 06	D04267P	W2207	YC001-YC030, YK901-YM670
D45111J		AE0301A	POS 07	D45111P	W5111	YC001-YC030, YK901-YM670
D45131J		AE0301A	POS 08	D45131P	W5111	YC001-YC030, YK901-YM670
D45151J		AE0301A	POS 09	D45151P	W5111	YC001-YC030, YK901-YM670

MASTER BUNDLE LIST

D280A103

91-21-13

Section W0310

Page 1

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0311</b>	<b>NA2</b>	<b>E3-1 ELECTRONIC SHELF - LEFT (continued)</b>				
D40448J		AE0301A	POS 11	D40448P	W5310	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40448J		AE0301A	POS 11	D40448P		YK913-YK917, YK920, YL430, YM653-YM670
D42005J		AE0301A	POS 12	D42005P	W2265	YC001-YC030, YK901-YM670
D49994J		AE0301A	POS 14	D49994P	W3170	YC001-YC030, YK901-YM670
D43145J		AE0301A	POS 15	D43145P	W5161	YC001-YC030, YK901-YM670
D43155J		AE0301A	POS 16	D43155P	W5161	YC001-YC030, YK901-YM670
D45205J		AE0301A	POS 18	D45205P	W5205	YC001-YC030, YK901-YM670
D40460J		AE0301A	POS 19	D40460P	W5156	YC001-YC030, YK901-YM670
D40516J		AE0301A	POS 20	D40516P	W2112	YC001-YC030, YK901-YM670
D41817J		AE0301A	POS 21	D41817P	W2201	YC001-YC030, YK901-YM670
D41837J		AE0301A	POS 22	D41837P	W2653	YC001-YC030, YK901-YM670
D03651		M01731	E003-01//			YC001-YC030, YK901-YM670
D03667		M01735	E003-01//			YC001-YC030, YK901-YM670
D03973		M01808	E003-01//			YC001-YC030, YK901-YM670
<b>W0313</b>	<b>NB2</b>	<b>E3-1 ELECTRONIC SHELF - RIGHT</b>				
D03653A			E003-01//			YC001-YC030, YK901-YM670
D03653B			E003-01//			YC001-YC030, YK901-YM670
D03653C			E003-01//			YC001-YC030, YK901-YM670

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0310

Page 2

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0313</b>	<b>NB2</b>	<b>E3-1 ELECTRONIC SHELF - RIGHT (continued)</b>				
D03975A			E003-01/ /			YC001-YC030, YK901-YM670
D03975B			E003-01/ /			YC001-YC030, YK901-YM670
D03975C			E003-01/ /			YC001-YC030, YK901-YM670
D03975D			E003-01/ /			YC001-YC030, YK901-YM670
D03975E			E003-01/ /			YC001-YC030, YK901-YM670
D03975F			E003-01/ /			YC001-YC030, YK901-YM670
D46017J		AE0301A	POS 23	D46017P	W2231	YC001-YC030, YK901-YM670
D46035J		AE0301A	POS 24	D46035P	W2169	YC001-YC030, YK901-YM670
D42007J		AE0301A	POS 25	D42007P	W2267	YC001-YC030, YK901-YM670
D40544J		AE0301A	POS 27	D40544P	W2218	YC001-YC030, YK901-YM670
D43147J		AE0301A	POS 28	D43147P	W5163	YC001-YC030, YK901-YM670
D43157J		AE0301A	POS 29	D43157P	W5163	YC001-YC030, YK901-YM670
D04297J		AE0301A	POS 31	D04297P	W2237	YC001-YC030, YK901-YM670
D45121J		AE0301A	POS 32	D45121P	W5121	YC001-YC030, YK901-YM670
D45141J		AE0301A	POS 33	D45141P	W5121	YC001-YC030, YK901-YM670
D40394J		AE0301A	POS 34	D40394P	W6412	YC001-YC030, YK901-YM670
D40149J		AE0301A	POS 35	D40149P	W6491	YC001-YC002, YC007-YC030, YK901-YM670
D40732J		AE0301A	POS 36	D40732P	W4170	YC001-YC030, YK901-YM670
D04277J		AE0301A	POS 37	D04277P	W5191	YC001-YC030, YK901-YM670

MASTER BUNDLE LIST

D280A103

91-21-13

Section W0310

Page 3

Aug 10/2009



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0313</b>	<b>NB2</b>	<b>E3-1 ELECTRONIC SHELF - RIGHT (continued)</b>				
D42165J		AE0301A	POS 38	D42165P	W5275	YC001-YC030, YK901-YM670
D40201J		AE0301A	POS 40	D40201P	W2529	YC001-YC030, YK901-YM670
D40401J		AE0301A	POS 41	D40401P	W2533	YC001-YC030, YK901-YM670
D03653		M01732	E003-01/ /			YC001-YC030, YK901-YM670
D03975		M01809	E003-01/ /			YC001-YC030, YK901-YM670

### MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0310

Page 4 End

Aug 10/2009





Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0321</b>	<b>NN2</b>	<b>E3-2 SHELF</b>				
D01458A			*/*/*			ALL
D03228C			*/*/*			ALL
█ D03683A			*/*/*			ALL
D03683B			*/*/*			ALL
█ D01458B			E003-02/ /			ALL
D02295A			E003-02/ /			ALL
█ D02295B			E003-02/ /			ALL
█ D02295C			E003-02/ /			ALL
D02295D			E003-02/ /			ALL
D02295E			E003-02/ /			ALL
D02295F			E003-02/ /			ALL
█ D02813B			E003-02/ /			YC001-YC050
D02813C			E003-02/ /			YC001-YC050
█ D03228A			E003-02/ /			ALL
D03228B			E003-02/ /			ALL
█ D03685A			E003-02/ /			ALL
█ D03685B			E003-02/ /			ALL
█ D02813A			E008-01/ /			YC001-YC050
D43277J		AE0302A	POS 01	D43277P	W3577	YC001-YC050
D40053J		AE0302A	POS 02	D40053P	W5367	ALL
D40726J		AE0302A	POS 03	D40726P	W5310	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40446J		AE0302A	POS 04	D40446P	W5310	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40446J		AE0302A	POS 04	D40446P		YK913-YK917, YK920, YL430, YM653-YM670
D40362J		AE0302A	POS 05	D40362P	W5612	ALL
D40350J		AE0302A	POS 06	D40350P	W5610	ALL
D40940J		AE0302A	POS 07	D40940P	W5610	ALL
D43215J		AE0302A	POS 09	D43215P	W2805	ALL
D40025J		AE0302A	POS 10	D40025P	W3377	ALL
█ D43203J		AE0302A	POS 11	D43203P	W5603	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652

MASTER BUNDLE LIST

D280A103

91-21-13

Section W0320

Page 1

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0321</b>	<b>NN2</b>	<b>E3-2 SHELF (continued)</b>				
D43203J		AE0302A	POS 11	D43203P		YK913-YK917, YK920, YL430, YM653-YM670
D43257J		AE0302A	POS 12	D43257P	W5257	ALL
D43219J		AE0302A	POS 13	D43219P	W2419	ALL
D45207J		AE0302A	POS 14	D45207P	W5205	YC001-YC030, YK901-YM670
D45207J		AE0302A	POS 14	D45207P		YC031-YC050
D40950J		AE0302A	POS 15	D40950P	W5506	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40950J		AE0302A	POS 15	D40950P		YC031-YC050, YK913-YK917, YK920, YL430, YM653-YM670
D40594J		AE0302A	POS 16	D40594P	W5156	YC001-YC030, YK901-YM670
D40594J		AE0302A	POS 16	D40594P		YC031-YC050
D45177J		AE0302A	POS 17	D45177P	W5111	YC001-YC030, YK901-YM670
D45177J		AE0302A	POS 17	D45177P		YC031-YC050
D45157J		AE0302A	POS 18	D45157P	W5111	YC001-YC030, YK901-YM670
D45157J		AE0302A	POS 18	D45157P		YC031-YC050
D45137J		AE0302A	POS 19	D45137P	W5111	YC001-YC030, YK901-YM670
D45137J		AE0302A	POS 19	D45137P		YC031-YC050
D45117J		AE0302A	POS 20	D45117P	W5111	YC001-YC030, YK901-YM670
D45117J		AE0302A	POS 20	D45117P		YC031-YC050
D43054J		AE0302A	POS 22	D43054P	W6732	ALL
D40462J		AE0302A	POS 23	D40462P	W5156	YC001-YC030, YK901-YM670
D40462J		AE0302A	POS 23	D40462P		YC031-YC050
D43022J		AE0302A	POS 24	D43022P	W5530	ALL
D46021J		AE0302A	POS 25	D46021P	W2231	ALL
D41839J		AE0302A	POS 26	D41839P	W2653	ALL
D41819J		AE0302A	POS 27	D41819P	W2201	ALL
D40426J		AE0302A	POS 28	D40426P	W5158	ALL
D46043J		AE0302A	POS 30	D46043P	W2169	ALL

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0320

Page 2

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0321</b>	<b>NN2</b>	<b>E3-2 SHELF (continued)</b>				
D40596J		AE0302A	POS 31	D40596P	W2112	YC001-YC030, YK901-YM670
D40596J		AE0302A	POS 31	D40596P		YC031-YC050
D43046J		AE0302A	POS 32	D43046P	W6530	ALL
D40486J		AE0302A	POS 33	D40486P	W5158	ALL
D40029J		AE0302A	POS 35	D40029P	W3379	ALL
D40468J		AE0302A	POS 36	D40468P	W5160	YC001-YC030, YK901-YM670
D40468J		AE0302A	POS 36	D40468P		YC031-YC050
D40470J		AE0302A	POS 37	D40470P	W5160	YC001-YC030, YK901-YM670
D40470J		AE0302A	POS 37	D40470P		YC031-YC050
D43205J		AE0302A	POS 38	D43205P	W5605	ALL
D40194J		AE0302A	POS 39	D40194P	W6134	ALL
D43261J		AE0302A	POS 40	D43261P	W5461	YC001-YC030, YK901-YM670
D43261J		AE0302A	POS 40	D43261P		YC031-YC050
D42261J		AE0302A	POS 41	D42261P	W5461	YC001-YC030, YK901-YM670
D42261J		AE0302A	POS 41	D42261P		YC031-YC050
D40952J		AE0302A	POS 42	D40952P	W5160	YC001-YC030, YK901-YM670
D42361J		AE0302A	POS 43	D42361P	W5461	YC001-YC030, YK901-YM670
D42361J		AE0302A	POS 43	D42361P		YC031-YC050
D43263J		AE0302A	POS 44	D43263P	W5463	ALL
D40392J		AE0302A	POS 45	D40392P	W6412	ALL
D45127J		AE0302A	POS 46	D45127P	W5121	YC001-YC030, YK901-YM670
D45127J		AE0302A	POS 46	D45127P		YC031-YC050
D42053J		AE0302A	POS 47	D42053P	W5375	ALL
D40276J		AE0302A	POS 48	D40276P	W6134	ALL
D43209J		AE0302A	POS 49	D43209P	W5409	ALL
D43217J		AE0302A	POS 50	D43217P	W5461	YK910-YK920, YL421-YM670
D43030J		AE0302A	POS 51	D43030P	W6034	ALL
D40908J		AE0302A	POS 52	D40908P	W5726	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0320

Page 3

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0321</b>	<b>NN2</b>	<b>E3-2 SHELF (continued)</b>				
D40908J		AE0302A	POS 52	D40908P		YK913-YK917, YK920, YL430, YM653-YM670
D42363J		AE0302A	POS 53	D42363P	W5463	ALL
D43080J		AE0302A	POS 54	D43080P	W6412	ALL
D40173J		AE0302A	POS 55	D40173P	W5303	YK901-YM670
D45147J		AE0302A	POS 56	D45147P	W5121	YC001-YC030, YK901-YM670
D45147J		AE0302A	POS 56	D45147P		YC031-YC050
D02295		M00675	E003-02/ /			ALL
D02813		M01499	E003-02/ /			YC001-YC050
D03669		M01736	E003-02/ /			ALL
D03669A		M01736	E003-02/ /			ALL
D03669B		M01736	E003-02/ /			ALL
D03669C		M01736	E003-02/ /			ALL
D10461		M01955	E003-02/ /			YK901-YM670
D03228		M1240				ALL
D03683		M1747				ALL
D03685		M1748				ALL
D01458		M528				ALL

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0320

Page 4 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0330</b>	<b>NB2</b>	<b>E3-3 SHELF (ZONE TEMP CONTROL) NB2</b>				
D41800J		AE0303A	POS 24	D41800P	W5104	YC001-YL430
D41814J		AE0303A	POS 25	D41814P	W6214	YC001-YC030, YK901-YL430
D41814J		AE0303A	POS 25	D41814P		YC031-YC050
D41802J		AE0303A	POS 26	D41802P	W6220	YC001-YL430
D41842J		AE0303A	POS 27	D41842P	W5526	YC001-YC030, YK901-YL430
D41842J		AE0303A	POS 27	D41842P		YC031-YC050
D41824J		AE0303A	POS 30	D41824P	W5156	YC001-YC030, YK901-YL430
D41824J		AE0303A	POS 30	D41824P		YC031-YC050
D41836J		AE0303A	POS 31	D41836P	W5104	YC001-YL430
D41818J		AE0303A	POS 32	D41818P	W6288	YC001-YL430
D41822J		AE0303A	POS 35	D41822P	W6412	YC001-YL430
D41826J		AE0303A	POS 36	D41826P	W2218	YC001-YC030, YK901-YL430
D41826J		AE0303A	POS 36	D41826P		YC031-YC050
D41808J		AE0303A	POS 37	D41808P	W6420	YC001-YL430
D41812J		AE0303A	POS 40	D41812P	W2216	YC001-YL430
D41806J		AE0303A	POS 41	D41806P	W6230	YC001-YL430
D03858		M01442	E003-03/ /			YC001-YL430
D03858A		M01442	E003-03/ /			YC001-YL430
D03858B		M01442	E003-03/ /			YC001-YL430
D03858C		M01442	E003-03/ /			YC001-YL430
D03860		M01443	E003-03/ /			YC001-YL430
D03860A		M01443	E003-03/ /			YC001-YL430
D03860B		M01443	E003-03/ /			YC001-YL430
D03860C		M01443	E003-03/ /			YC001-YL430
<b>W0331</b>	<b>NA2</b>	<b>E3-3 SHELF BUNDLE</b>				
D00539A			E003-03/ /			YC001-YC030, YK901-YM670
D00539B			E003-03/ /			YC001-YC030, YK901-YM670
D00539C			E003-03/ /			YC001-YC030, YK901-YM670
D01967A			E003-03/ /			YC001-YC030
D01967B			E003-03/ /			YC001-YC030
D01967C			E003-03/ /			YC001-YC030

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0330

Page 1

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0331</b>	<b>NA2</b>	<b>E3-3 SHELF BUNDLE (continued)</b>				
D43301J		AE0303A	POS 01	D43301P	W5415	YC001-YC030, YK901-YM670
D43306J		AE0303A	POS 05	D43306P	W5723	YK901-YM670
D43359J		AE0303A	POS 06	D43359P	W5103	YK901-YM670
D43391J		AE0303A	POS 07	D43391P	W2417	YK901-YM670
D43314J		AE0303A	POS 08	D43314P	W5107	YK910-YL401, YL430, YM652-YM670
D43361J		AE0303A	POS 10	D43361P	W5105	YK907-YM670
D43367J		AE0303A	POS 11	D43367P	W5107	YK901-YM670
D43307J		AE0303A	POS 12	D43307P	W5111	YC001-YC030, YK901-YM670
D43321J		AE0303A	POS 13	D43321P	W5111	YC001-YC030, YK901-YM670
D43329J		AE0303A	POS 15	D43329P	W2417	YK901-YM670
D43345J		AE0303A	POS 17	D43345P	W5331	YK901-YM670
D43347J		AE0303A	POS 18	D43347P	W5331	YK901-YM670
D43305J		AE0303A	POS 20	D43305P	W5111	YC001-YC030, YK901-YM670
D43315J		AE0303A	POS 22	D43315P	W5189	YC001-YC030
D43319J		AE0303A	POS 23	D43319P	W2801	YC001-YC030, YK901-YM670
D43313J		AE0303A	POS 28	D43313P	W2201	YC001-YC030, YK901-YM670
D43309J		AE0303A	POS 29	D43309P	W2231	YC001-YC030, YK901-YM670
D43323J		AE0303A	POS 33	D43323P	W5121	YC001-YC030
D43331J		AE0303A	POS 38	D43331P	W5191	YK901-YM670
D43323J		AE0303A	POS 42	D43323P	W5121	YK901-YM670
D43379J		AE0303A	POS 43	D43379P	W5335	YK901-YM670
D43333J		AE0303A	POS 44	D43333P	W5723	YK901-YM670
D43355J		AE0303A	POS 46	D43355P	W2415	YK901-YM670
D43357J		AE0303A	POS 47	D43357P	W2415	YK901-YM670
D43363J		AE0303A	POS 48	D43363P	W2413	YK901-YM670
D43365J		AE0303A	POS 49	D43365P	W2413	YK901-YM670
D00539		M00411	E003-03/ /			YC001-YC030, YK901-YM670
D01967		M01109	E003-03/ /			YC001-YC030

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0330

Page 2 End

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0342</b>	<b>NN2</b>	<b>FORWARD RIGHT HAND DOORWAY LINING</b>				
D40042J				D40042P	W4142	ALL
D02968		L01063	318/280/R038			ALL
D12606		M01834	MULTI/ /			ALL

---

**MASTER BUNDLE LIST**

D280A103

**91-21-13**  
Section W0340  
Page 1 End  
Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0352</b>	<b>SN2</b>	<b>FORWARD LEFT HAND DOORWAY LINING</b>				
D40040J				D40040P	W4142	ALL
D02972		L01067	329/285/L030			ALL
D11366		M01834	MULTI/ /			ALL

---

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0350

Page 1 End

Aug 10/2009





Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0410</b>	<b>RB2</b>	<b>E4-1 SHELF (ELECTRICAL EQUIPMENT) RB2</b>				
I D00458A			*/*/*			ALL
D10002A			*/*/*			YC001-YL430
D00458B			E004-01/ /			ALL
D10002B			E004-01/ /			YC001-YL430
I D10740A			E004-01/ /			YC001-YC030
D10740B			E004-01/ /			YC001-YC030
I D10740C			E004-01/ /			YC001-YC030
D41804J		AE0401A	POS 09	D41804P	W6220	YC001-YL430
D41810J		AE0401A	POS 10	D41810P	W6420	YC001-YL430
D41816J		AE0401A	POS 11	D41816P	W6288	YC001-YL430
D41828J		AE0401A	POS 12	D41828P	W6214	YC001-YC030, YK901-YL430
D41828J		AE0401A	POS 12	D41828P		YC031-YC050
D41830J		AE0401A	POS 13	D41830P	W6412	ALL
D44161J		AE0401A	POS 24	D44161P	W5461	YC001-YC030, YK901-YM670
D44161J		AE0401A	POS 24	D44161P		YC031-YC050
D40904J		AE0401A	POS 26	D40904P	W5726	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40904J		AE0401A	POS 26	D40904P		YK913-YK917, YK920, YL430, YM653-YM670
D40244J		AE0401A	POS 29	D40244P	W5104	ALL
D40242J		AE0401A	POS 30	D40242P	W6102	ALL
D40328J		AE0401A	POS 31	D40328P	W6214	YC001-YC030, YK901-YM670
D40328J		AE0401A	POS 31	D40328P		YC031-YC050
D41010J		AE0401A	POS 33	D41010P	W6412	ALL
D40326J		AE0401A	POS 35	D40326P	W6412	ALL
D40330J		AE0401A	POS 36	D40330P	W6230	ALL
D43044J		AE0401A	POS 37	D43044P	W6528	ALL
D40144J		AE0401A	POS 38	D40144P	W6168	ALL
D40066J		AE0401A	POS 39	D40066P	W6204	ALL
D40530J		AE0401A	POS 40	D40530P	W2214	ALL
D40158J		AE0401A	POS 42	D40158P	W6564	ALL
D40554J		AE0401A	POS 43	D40554P	W2508	YC001-YC030, YK901-YM670
D40554J		AE0401A	POS 43	D40554P		YC031-YC050

MASTER BUNDLE LIST

D280A103

91-21-13

Section W0410

Page 1

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0410</b>	<b>RB2</b>	<b>E4-1 SHELF (ELECTRICAL EQUIPMENT) RB2 (continued)</b>				
D43018J		AE0401A	POS 44	D43018P	W5526	YC001-YC030, YK901-YM670
D43018J		AE0401A	POS 44	D43018P		YC031-YC050
D43062J		AE0401A	POS 45	D43062P	W5230	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D43062J		AE0401A	POS 45	D43062P		YK913-YK917, YK920, YL430, YM653-YM670
D40378J		AE0401A	POS 46	D40378P	W6214	YC001-YC030, YK901-YM670
D40378J		AE0401A	POS 46	D40378P		YC031-YC050
D40562J		AE0401A	POS 47	D40562P	W2510	ALL
D40534J		AE0401A	POS 48	D40534P	W2216	ALL
D43038J		AE0401A	POS 49	D43038P	W6230	ALL
D40156J		AE0401A	POS 50	D40156P	W6162	ALL
D40542J		AE0401A	POS 51	D40542P	W2218	YC001-YC030, YK901-YM670
D40542J		AE0401A	POS 51	D40542P		YC031-YC050
D40390J		AE0401A	POS 52	D40390P	W6412	ALL
D00458		M00324	E004-01/ /			ALL
D00454		M00345	E004-01/ /			YM643-YM670
D00456		M00345	E004-01/ /			YM643-YM670
D10740		M01654	E001-01/ /			YC001-YC030
D10002		M1455				YC001-YL430
<b>W0411</b>	<b>RA2</b>	<b>E4-1 ELECTRONIC SHELF</b>				
D02501B			*/*/*			ALL
D02555C			*/*/*			ALL
D10727B			*/*/*			YK901-YM670
D10727C			*/*/*			YK901-YM670
D02501A			E004-01/ /			ALL
D02501C			E004-01/ /			ALL
D02555A			E004-01/ /			ALL
D02555B			E004-01/ /			ALL
D10727A			E004-01/ /			YK901-YM670
D12311A			E004-01/ /			YK901-YK906
D12311B			E004-01/ /			YK901-YK906
D12311C			E004-01/ /			YK901-YK906

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0410

Page 2

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0411</b>	<b>RA2</b>	<b>E4-1 ELECTRONIC SHELF (continued)</b>				
D04171J		AE0401A	POS 14	D04171P	W3721	YK901-YK906
D04173J		AE0401A	POS 15	D04173P	W3722	YK901-YK906
D04289J		AE0401A	POS 16	D04289P	W5191	YK901-YM670
D04287J		AE0401A	POS 17	D04287P	W5189	YC001-YC030, YK901-YM670
D04287J		AE0401A	POS 17	D04287P		YC031-YC050
D04155J		AE0401A	POS 18	D04155P	W3323	ALL
D04285J		AE0401A	POS 19	D04285P	W5191	YC001-YC030, YK901-YM670
D04285J		AE0401A	POS 19	D04285P		YC031-YC050
D04331J		AE0401A	POS 20	D04331P	W3319	ALL
D08123J		AE0401A	POS 21	D08123P	W5189	YC001-YC030, YK901-YM670
D08123J		AE0401A	POS 21	D08123P		YC031-YC050
D04153J		AE0401A	POS 22	D04153P	W3327	ALL
D04371J		AE0401A	POS 23	D04371P	W5431	ALL
D04161J		AE0401A	POS 25	D04161P	W5337	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D04161J		AE0401A	POS 25	D04161P		YK913-YK917, YK920, YL430, YM653-YM670
D44139J		AE0401A	POS 27	D44139P	W3309	ALL
D04157J		AE0401A	POS 28	D04157P	W3329	ALL
D04721J		AE0401A	POS 32	D04721P	W2401	YC001-YK906
D04115J		AE0401D	POS 13	D04115P	W5331	YK901-YM670
D04007J		AE0401D	POS 14	D04007P	W5335	YK901-YM670
D04009J		AE0401D	POS 15	D04009P	W5335	YK901-YM670
D04117J		AE0401D	POS 16	D04117P	W5331	YK901-YM670
D02555		M00025	E004-01/ /			YK901-YL430
D11281		M02100	E004-01/ /			YM643-YM670
D10727		M02127	E004-01/ /			YK901-YM670
D11813		M02502	E004-01/ /			YK901-YM670
D02501		M1353				ALL
D11281		M2100				YK901-YL430
D02555		M25				YC001-YC050, YM643-YM670
D12311		M3019				YK901-YK906

MASTER BUNDLE LIST

D280A103

91-21-13

Section W0410

Page 3 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0420</b>	<b>RB2</b>	<b>E4-2 SHELF (RIGHT WINDOW HEAT MODULES) RB2</b>				
D01046A			E004-02/ /			ALL
D01046B			E004-02/ /			ALL
D01048A			E004-02/ /			ALL
D01048B			E004-02/ /			ALL
D42400J		AE0402A	POS 22	D42400P	W6412	ALL
D40068J		AE0402A	POS 34	D40068P	W2208	ALL
D41440J		AE0402A	POS 38	D41440P	W2218	YC001-YC030, YK901-YM670
D41440J		AE0402A	POS 38	D41440P		YC031-YC050
D01046		M00322	E004-02/ /			ALL
D01048		M00323	E004-02/ /			ALL
<b>W0422</b>		<b>E4-2 SHELF</b>				
D42111J		AE0402A	POS 01	D42111P	W5719	ALL
D40584J		AE0402A	POS 02	D40584P	W5248	ALL
D40338J		AE0402A	POS 07	D40338P	W5110	YC001-YC030, YK901-YM670
D40338J		AE0402A	POS 07	D40338P		YC031-YC050
D40238J		AE0402A	POS 08	D40238P	W6134	ALL
D40714J		AE0402A	POS 09	D40714P	W6588	ALL
D40228J		AE0402A	POS 13	D40228P	W6208	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40228J		AE0402A	POS 13	D40228P		YK913-YK917, YK920, YL430, YM653-YM670
D40222J		AE0402A	POS 14	D40222P	W6208	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40222J		AE0402A	POS 14	D40222P		YK913-YK917, YK920, YL430, YM653-YM670
D40164J		AE0402A	POS 15	D40164P	W6586	ALL
D43028J		AE0402A	POS 16	D43028P	W6032	ALL
D40432J		AE0402A	POS 17	D40432P	W6222	ALL
D40742J		AE0402A	POS 19	D40742P	W6222	ALL
D40712J		AE0402A	POS 23	D40712P	W6412	ALL
D40388J		AE0402A	POS 24	D40388P	W6412	ALL
D40382J		AE0402A	POS 25	D40382P	W6410	ALL

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0420

Page 1

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0422</b>		<b>E4-2 SHELF (continued)</b>				
D40140J		AE0402A	POS 26	D40140P	W6164	ALL
D40720J		AE0402A	POS 27	D40720P	W6164	ALL
D40938J		AE0402A	POS 28	D40938P	W6210	YC001-YC030, YK901-YM670
D40938J		AE0402A	POS 28	D40938P		YC031-YC050
D40370J		AE0402A	POS 29	D40370P	W6210	YC001-YC030, YK901-YM670
D40370J		AE0402A	POS 29	D40370P		YC031-YC050
D40484J		AE0402A	POS 30	D40484P	W5158	ALL
D40356J		AE0402A	POS 31	D40356P	W5612	ALL
D40540J		AE0402A	POS 32	D40540P	W2218	YC001-YC030, YK901-YM670
D40540J		AE0402A	POS 32	D40540P		YC031-YC050
D40472J		AE0402A	POS 33	D40472P	W5160	YC001-YC030, YK901-YM670
D40472J		AE0402A	POS 33	D40472P		YC031-YC050
D40618J		AE0402A	POS 35	D40618P	W5158	ALL
D40930J		AE0402A	POS 36	D40930P	W5612	ALL
D40474J		AE0402A	POS 37	D40474P	W5160	YC001-YC030, YK901-YM670
D40474J		AE0402A	POS 37	D40474P		YC031-YC050
D40169J		AE0402A	POS 40	D40169P	W5160	YK901-YM670
D10892		G00012	E004-02/ /			ALL
D10892A		G00012	E004-02/ /			ALL
D10892B		G00012	E004-02/ /			ALL
D10898		G00015	E004-02/ /			ALL
D10898A		G00015	E004-02/ /			ALL
D10898B		G00015	E004-02/ /			ALL
D02586		M00980	E004-02/ /			ALL
D02586A		M00980	E004-02/ /			ALL
D02586B		M00980	E004-02/ /			ALL
D00104		T00012	E004-02/ /			ALL
D00106		T00013	E004-02/ /			ALL

MASTER BUNDLE LIST

D280A103

91-21-13

Section W0420

Page 2 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0442</b>	<b>NN2</b>	<b>AFT RIGHT HAND DOORWAY LINING</b>				
D40046J D02986		L01079	972/279/R044	D40046P	W4142	ALL ALL

---

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0440

Page 1 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0452</b>	<b>NN2</b>	<b>AFT LEFT HAND DOORWAY LINING</b>				
D40044J				D40044P	W3142	YC001-YC030, YK901-YM652
D40044J				D40044P		YC031-YC050, YM653-YM670
D02982		L01076	972/286/L037			ALL

---

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0450

Page 1 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0521</b>	<b>NA2</b>	<b>E5-2 SHELF WIRE BUNDLE #1</b>				
D02179A			**/*			ALL
D02179C			**/*			ALL
D02179B			E005-02/ /			ALL
D03687A			E005-02/ /			ALL
D03687B			E005-02/ /			ALL
D03687C			E005-02/ /			ALL
D41251J		AE0104B	POS 01	D41251P	W0121	YC001-YC030, YK901-YM670
D41251J		AE0104B	POS 01	D41251P		YC031-YC050
D45221P		AE0502A	POS 01	D45221J	W0737	ALL
D45209P		AE0502A	POS 03	D45209J	W5205	YC001-YC030, YK901-YM670
D45209P		AE0502A	POS 03	D45209J		YC031-YC050
D45211P		AE0502A	POS 12	D45211J	W5111	YC001-YC030, YK901-YM670
D45211P		AE0502A	POS 12	D45211J		YC031-YC050
D45319P		AE0502A	POS 13	D45319J	W5825	YK901-YM670
D45245P		AE0502A	POS 14	D45245J	W5161	ALL
D45255P		AE0502A	POS 15	D45255J	W5161	ALL
D45265P		AE0502A	POS 16	D45265J	W5161	ALL
D41561P		AE0502A	POS 17	D41561J	W5461	YC001-YC030, YK901-YM670
D41561P		AE0502A	POS 17	D41561J		YC031-YC050
D45261P		AE0502A	POS 18	D45261J	W5461	YC001-YC030, YK901-YM670
D45261P		AE0502A	POS 18	D45261J		YC031-YC050
D45235P		AE0502A	POS 19	D45235J	W2035	ALL
D45239P		AE0502A	POS 20	D45239J	W5501	ALL
D45225P		AE0502A	POS 21	D45225J	W2597	ALL
D05925P		AE0502A	POS 22	D05925J	W2889	YC012-YM670
D45293P		AE0502A	POS 22	D45293J	W2597	YC001-YC011
D05925P		AE0502A	POS 23	D05925J	W2889	YC001-YC011
D45293P		AE0502A	POS 23	D45293J	W2597	YC012-YM670
D06063J		AE0502A	POS 24	D06063P		ALL
D02179		M01175	E005-02/ /			ALL
D03687		M01749	E005-02/ /			ALL
D03263		R00475	E005-02/ /			ALL
D03265		R00475	E005-02/ /			ALL
D03267		R00475	E005-02/ /			ALL

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0520

Page 1

Aug 10/2009





Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0523</b>	<b>NB2</b>	<b>E5-2 SHELF WIRE BUNDLE #2</b>				
D03261			E005-02/ /			ALL
D03261A			E005-02/ /			ALL
D03261B			E005-02/ /			ALL
D03261C			E005-02/ /			ALL
D03693A			E005-02/ /			ALL
D03693B			E005-02/ /			ALL
D03693C			E005-02/ /			ALL
D41453J		AE0104B	POS 03	D41453P	W0141	ALL
D45247P		AE0502A	POS 04	D45247J	W5163	ALL
D45257P		AE0502A	POS 05	D45257J	W5163	ALL
D45263P		AE0502A	POS 06	D45263J	W5463	ALL
D45237P		AE0502A	POS 07	D45237J	W2135	YC001-YC030, YK901-YM670
D45237P		AE0502A	POS 07	D45237J		YC031-YC050
D45067P		AE0502A	POS 08	D45067J	W2135	YC001-YC030, YK901-YM670
D45067P		AE0502A	POS 08	D45067J		YC031-YC050
D08105P		AE0502A	POS 09	D08105J	W2873	ALL
D45241P		AE0502A	POS 10	D45241J	W5503	YC001-YM652
D45241P		AE0502A	POS 10	D45241J		YM653-YM670
D45213P		AE0502A	POS 11	D45213J	W5121	YC001-YC030, YK901-YM670
D45213P		AE0502A	POS 11	D45213J		YC031-YC050
D03693		M01752	E005-02/ /			ALL
D03423		R00476	E005-02/ /			ALL
D03425		R00476	E005-02/ /			ALL
D03427		R00476	E005-02/ /			ALL

MASTER BUNDLE LIST

D280A103

91-21-13

Section W0520

Page 2 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0621</b>	<b>LA2</b>	<b>E6-2 ELECTRONIC SHELF</b>				
I D00623C			//			YM643-YM670
I D00345B			*/*/*			YM643-YM670
I D00345C			*/*/*			YM643-YM670
D00623A			*/*/*			YM643-YM670
D00623B			*/*/*			YM643-YM670
I D00345A			E008-01//			YM643-YM670
D40127J		AE0602A	POS 01	D40127P	W3559	YM643-YM670
D40123J		AE0602A	POS 02	D40123P	W3557	YM643-YM670
D40111J		AE0602A	POS 03	D40111P	W2101	YM643-YM670
D40621J		AE0602A	POS 04	D40621P	W2103	YM643-YM652
D40621J		AE0602A	POS 04	D40621P		YM653-YM670
D40117J		AE0602A	POS 05	D40117P	W5189	YM643-YM670
D40119J		AE0602A	POS 07	D40119P	W5191	YM643-YM670
D40115J		AE0602A	POS 08	D40115P	W5105	YM643-YM670
D40113J		AE0602A	POS 10	D40113P	W5103	YM643-YM670
D40125J		AE0602A	POS 11	D40125P	W3555	YM643-YM670
D40121J		AE0602A	POS 12	D40121P	W3553	YM643-YM670
D00345		M00226	E008-01//			YM643-YM670
D00623		M00439				YM643-YM670

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0620

Page 1 End

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0737</b>	<b>NA2</b>	<b>E5-2 TO P59 FMC DIP SWITCH</b>				
D45221J		AE0502A	POS 01	D45221P	W0521	ALL

---

**MASTER BUNDLE LIST**

D280A103

**91-21-13**  
Section W0730  
Page 1 End  
Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0767</b>	<b>NN2</b>	<b>D43267J TO FLIGHT RECORDER M96</b>				
D43267J				D43267P	W5409	ALL
D00183A			0923/294/000			ALL
D00183B			0923/295/000			ALL
D00183		M00096	942/290/0			ALL

---

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0760

Page 1 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0811</b>	<b>LA2</b>	<b>E8-1 SHELF BUNDLE</b>				
D00623C			//			YK907-YL430
D00345B			*/*/*			YC001-YC007, YK907-YL430
D00345C			*/*/*			YC001-YC007, YK907-YL430
D00623A			*/*/*			YK907-YL430
D00623B			*/*/*			YK907-YL430
D02813B			E003-02//			YK901-YM670
D02813C			E003-02//			YK901-YM670
D00345A			E008-01//			YC001-YC007, YK907-YL430
D02643A			E008-01//			YK910-YK920, YL421-YM670
D02643B			E008-01//			YK910-YK920, YL421-YM670
D02643C			E008-01//			YK910-YK920, YL421-YM670
D02813A			E008-01//			YK901-YM670
D08189J		AE0801A	POS 01	D08189P	W5189	YC001-YC007
D08511J		AE0801A	POS 02	D08511P	W2511	YC001-YC007
D08509J		AE0801A	POS 03	D08509P	W3509	YC001-YC007, YK907-YL430
D08189J		AE0801A	POS 04	D08189P	W5189	YK907-YL430
D40075J		AE0801A	POS 05	D40075P	W5103	YK901-YM670
D40077J		AE0801A	POS 06	D40077P	W5105	YK907-YL430
D08811J		AE0801A	POS 07	D08811P	W3511	YK907-YL430
D08002J		AE0801A	POS 08	D08002P	W5191	YK907-YL430
D40811J		AE0801A	POS 15	D40811P	W2101	YC001-YC006
D40811J		AE0801A	POS 19	D40811P	W2101	YC007, YK907-YL430
D45035J		AE0801A	POS 21	D45035P	W5825	YK901-YK906, YK911-YK917, YK919-YL401, YL427-YL430, YM647-YM670
D40803J		AE0801B	POS 02	D40803P	W5461	YK910-YK920, YL421-YM670
D45315J		AE0801B	POS 04	D45315P	W5825	YK901-YM670
D48323J		AE0801B	POS 14	D48323P	W2103	YK907-YM646
D08517J		AE0801D	POS 03	D08517P	W3517	YC001-YC007, YK907-YL430

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0810

Page 1

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W0811</b>	<b>LA2</b>	<b>E8-1 SHELF BUNDLE (continued)</b>				
D08823J D00345		AE0801D M00226	POS 05 E008-01/ /	D08823P	W3523	YK907-YL430 YC001-YC007, YK907-YL430
D00623 D02643		M00439 M00916	E008-01/ /			YK907-YL430 YK910-YK920, YL421-YM670
D02813 D02813 D02819		M01499 M01499 DIG XFMR	E003-02/ /			YK910-YM670 YK901-YK909 YK901-YK909, YM643-YM646
D02821		XFMR				YK901-YK906
<b>W0813</b>	<b>NN2</b>	<b>E8-1 SHELF</b>				
D10527A D10527C D10527B D10665A D10665B D10665C			E004-02/ / E004-02/ / E008-01/ / E008-01/ / E008-01/ / E008-01/ /			YC001-YC050 YC001-YC050 YC001-YC050 YC001-YC050 YC001-YC050 YC001-YC050
D48389J D48389J D45279J D48337J D48335J D48323J D48323J D48339J D48337J D45279J D48389J D48335J D48339J D48323J D10723 D10527 D10665		AE0801B AE0801B AE0801B AE0801B AE0801B AE0801B AE0801B AE0801B AE0801C AE0801C AE0801C AE0801C AE0801C AE0801C M1955 M1956 M1966	POS 06 POS 06 POS 07 POS 08 POS 13 POS 14 POS 14 POS 19 POS 02 POS 06 POS 07 POS 09 POS 10 POS 11	D48389P D48389P D45279P D48337P D48335P D48323P D48323P D48339P D48337P D45279P D48389P D48335P D48339P D48323P	W5189 W5303 W3307 W3335 W2103 W3339 W3307 W5303 W5189 W3335 W3339 W2103	YC007-YC030 YC031-YC050 YC007-YC050 YC007-YC050 YC007-YC050 YC007-YC030 YC031-YC050 YC007-YC050 YC001-YC006 YC001-YC006 YC001-YC006 YC001-YC006 YC001-YC006 YC001-YC006 YC001-YC006 YC001-YC006 YC001-YC006 YC001-YC006 YC001-YC050 YC001-YC050 YC001-YC050

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W0810

Page 2 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W1022</b>	<b>LC3</b>	<b>L WING TRAILNG EDGE:DISC BRACKET STA 254L TO W/W DISC &amp; AFT CARGO DISC</b>				
D42104P		AB0727L	POS 01	D42104J	W5032	ALL
D42102P		AL0720A	POS 02	D42102J	W5367	ALL
D42100P		AL0720A	POS 03	D42100J	W5375	ALL
D40024J		AW0254L	POS 01	D40024P	W1024	YC001-YC007
D40024P		AW0254L	POS 01	D40024J	W1024	YC008-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40024P		AW0254L	POS 01	D40024J		YK913-YK917, YK920, YL430, YM653-YM670
D11818		T00527	WING LBL/164/			ALL
D11820		T00528	WING LBL/65/			ALL
<b>W1024</b>	<b>LC3</b>	<b>LEFT TRAILING EDGE:STA 525 TO L. WING DISC STA 254L</b>				
D40024J		AW0254L	POS 01	D40024P	W1022	YC008-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40024P		AW0254L	POS 01	D40024J	W1022	YC001-YC007
D01695		AW0742L	POS 1			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D01699		AW0742L	POS 2			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D13954		M2596				YK907-YK912, YK918-YK919, YL401-YL429
D13956		M2597				YK907-YK912, YK918-YK919, YL401-YL429
D13958		M2598				YK907-YK912, YK918-YK919, YL401-YL429
D14126		M2599				YK907-YK912, YK918-YK919, YL401-YL429

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W1020

Page 1

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W1024</b>	<b>LC3</b>	<b>LEFT TRAILING EDGE:STA 525 TO L. WING DISC STA 254L (continued)</b>				
D00275		T00427	443/RSS/L			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D03572		T00465	LWING505/ /			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D11814		T00525	WING LBL/357/			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D11816		T00526	WING LBL/254/			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D10539		T00539	727+18.0/215/L287			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W1020

Page 2 End

Aug 10/2009





# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W1032</b>	<b>RD3</b>	<b>R WING TRAILNG EDGE:DISC BRACKET STA 254R TO W/W DISC &amp; AFT CARGO DISC</b>				
D43104P		AB0727R	POS 01	D43104J	W6028	ALL
D43100P		AL0720C	POS 01	D43100J	W5367	ALL
D43102P		AL0720D	POS 02	D43102J	W5375	ALL
D40034J		AW0254R	POS 01	D40034P	W1034	YC001-YC007
D40034P		AW0254R	POS 01	D40034J	W1034	YC008-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40034P		AW0254R	POS 01	D40034J		YK913-YK917, YK920, YL430, YM653-YM670
D11822		T00529	WING RBL/65/			ALL
D11824		T00530	WING RBL/164/			ALL
<b>W1034</b>	<b>RD3</b>	<b>RIGHT WING TRAILING EDGE:STA 525 TO R. WING DISC STA 254R</b>				
D40034J		AW0254R	POS 01	D40034P	W1032	YC008-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40034P		AW0254R	POS 01	D40034J	W1032	YC001-YC007
D01701		AW0742R	POS 1			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D01697		AW0742R	POS 2			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D14124		M2600				YK907-YK912, YK918-YK919, YL401-YL429
D13964		M2601				YK907-YK912, YK918-YK919, YL401-YL429
D13966		M2602				YK907-YK912, YK918-YK919, YL401-YL429
D13968		M2603				YK907-YK912, YK918-YK919, YL401-YL429

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W1030

Page 1

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W1034</b>	<b>RD3</b>	<b>RIGHT WING TRAILING EDGE:STA 525 TO R. WING DISC STA 254R (continued)</b>				
D00229		T00428	443/RSS/R			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D03574		T00466	RWING505/ /			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D11826		T00531	WING RBL/254/			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D11828		T00532	WING RBL/357/			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D10541		T00540	727+18.0/215/R287			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W1030

Page 2 End

Aug 10/2009



<b>Bundle</b> Equip	<b>Sep</b>	<b>Description</b> Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W1062</b> D30038	<b>NN1</b>	<b>ENGINE POWER FEEDER</b> AS0001	POS 10			ALL

---

**MASTER BUNDLE LIST**

D280A103

**91-21-13**

Section W1060  
Page 1 End  
Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W1080</b>	<b>NA2</b>	<b>ENGINE-THRUST REVERSER LEFT SLEEVE CH-A</b>				
D30002		AS0002	POS 02			ALL
D30072		T00396	ENG/ /			ALL
D01008		V00148	ENG/ /			ALL
<b>W1082</b>	<b>NB2</b>	<b>ENGINE-THRUST REVERSER LEFT SLEEVE CH-B</b>				
D30008		AS0002	POS 01			ALL
D30076		T00396	ENG/ /			ALL
<b>W1084</b>	<b>NB2</b>	<b>ENGINE-THRUST REVERSER RIGHT SLEEVE CH-B</b>				
D30010		AS0003	POS 01			ALL
D30078		T00397	ENG/ /			ALL
<b>W1086</b>	<b>NA2</b>	<b>ENGINE-THRUST REVERSER RIGHT SLEEVE CH-A</b>				
D30006		AS0003	POS 02			ALL
D30074		T00397	ENG/ /			ALL
D01016		V00150	ENG/ /			ALL

MASTER BUNDLE LIST

D280A103

**91-21-13**  
Section W1080  
Page 1 End  
Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W1126</b>	<b>RN1*</b>	<b>CENTER TANK R FUEL BOOST PUMP TO AB0500DR</b>				
D41850P		AB0500DR	POS 07	D41850J	W6588	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D05350P		AB0500DR	POS 11	D05350J	W6588	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D00804		M00235	WBL095/ /			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D00878		S00155	656/187/025R			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D00792		V00039	77/FSS/L			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
<b>W1128</b>	<b>LN1*</b>	<b>CENTER TANK L FUEL BOOST PUMP TO AB0500DL</b>				
D41854P		AB0500DL	POS 01	D41854J	W5568	ALL
D05348P		AB0500DL	POS 02	D05348J	W5568	ALL
D00802		M00234	WBL95/ /			ALL
D00876		S00154	656/187/L26L			ALL

MASTER BUNDLE LIST

D280A103

91-21-13

Section W1120

Page 1 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W1134</b>	<b>LN1*</b>	<b>NO.2 AFT BOOST PUMP TO STA 520R</b>				
D05346P		AB0500DL	POS 03	D05346J	W5568	ALL
D41852P		AB0500DL	POS 10	D41852J	W5568	ALL
D00074		M00048	WBL135/ /			ALL
D00872		S00152	669/189/055			ALL
<b>W1136</b>	<b>RN1*</b>	<b>NO.1 AFT BOOST PUMP TO STA 520L</b>				
D41856P		AB0500DR	POS 09	D41856J	W6588	ALL
D05342P		AB0500DR	POS 10	D05342J	W6588	ALL
D00070		M00046	WBL140/ /			ALL
D00868		S00150	669/189/085L			ALL
<b>W1138</b>	<b>SN2</b>	<b>RIGHT WING BODY PRESSURE SEAL TANK 2 FUEL QUANTITY</b>				
D39916		AD0520				YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D11314		M01829	//			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652

**MASTER BUNDLE LIST**

D280A103

**91-21-13**

Section W1130

Page 1 End

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W1140</b>	<b>SN2</b>	<b>LEFT WING BODY PRESSURE SEAL TO TANK 1 FUEL QUANTITY</b>				
D39915		AC0520				YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D11312		M01828	//			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652

**MASTER BUNDLE LIST**

D280A103

**91-21-13**

Section W1140

Page 1 End

Aug 10/2009



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W1162</b>	<b>LA1</b>	<b>ENGINE STRUT-LEFT-FIREWALL TO AW0258L POWER FEEDER</b>				
D30238		AS0001L	POS 10			ALL
D08094P		AW0258L	POS 01	D08094J	W1186	ALL
<b>W1164</b>	<b>SA1</b>	<b>ENGINE STRUT-LEFT FIREWALL TO AW0258L IDG CONTROLS</b>				
D30234		AS0001L	POS 09			ALL
D30016		AW0258L	POS 04			ALL
<b>W1166</b>	<b>SB2</b>	<b>ENGINE STRUT-LEFT FIREWALL TO AW0258L EEC CH B</b>				
D30220		AS0001L	POS 05			ALL
D30256		AS0001L	POS 07			ALL
D30064		AW0258L	POS 05			ALL
<b>W1168</b>	<b>LB2</b>	<b>ENGINE STRUT-LEFT FIREWALL TO AW0258L EEC CH B</b>				
D30260		AS0001L	POS 01			ALL
D30204		AS0001L	POS 08			ALL
D30208		AS0002L	POS 01			ALL
D30210		AS0003L	POS 01			ALL
D30084		AW0258L	POS 03			ALL
D00526		S00020	574/199/L184			ALL

### MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W1160

Page 1 End

Aug 10/2009





Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W1170</b>	<b>LA2</b>	<b>ENGINE STRUT LEFT FIREWALL TO AW0258L EEC CH A</b>				
D30212		AS0001L	POS 03			ALL
D30252		AS0001L	POS 04			ALL
D30228		AS0001L	POS 06			ALL
D08056P		AW0258L	POS 06	D08056J	W1178	ALL
<b>W1172</b>	<b>LA2</b>	<b>ENGINE STRUT-LEFT FIREWALL TO AW0258L EEC CH A</b>				
D30224		AS0001L	POS 02			ALL
D30202		AS0002L	POS 02			ALL
D30206		AS0003L	POS 02			ALL
D30042		AW0258L	POS 02			ALL
<b>W1174</b>	<b>LA2</b>	<b>LEADING EDGE-LEFT WING EEC CH A</b>				
D39919		AC0520				ALL
D30040		AW0258L	POS 02			ALL
<b>W1176</b>	<b>LB2</b>	<b>LEADING EDGE-LEFT WING EEC CH B</b>				
D39923		AC0520				ALL
D30082		AW0258L	POS 03			ALL
<b>W1178</b>	<b>LN2</b>	<b>LEADING EDGE-LEFT WING EEC CH A</b>				
D39927		AC0520				ALL
D08056J		AW0258L	POS 06	D08056P	W1170	ALL
D00788		V00037	260/FSS/L			ALL

MASTER BUNDLE LIST

D280A103

91-21-13

Section W1170

Page 1 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W1180</b>	<b>LN1</b>	<b>LEFT WING/BODY PRESSURE SEAL TO FRONT SPAR INBOARD</b>				
D39938		AC0520				ALL
D00072		M00047	102/FSS/L			ALL
<b>W1182</b>	<b>SB2</b>	<b>LEADING EDGE-LEFT WING EEC CH B</b>				
D39931		AC0520				YC001-YC030, YK901-YM670
D30062		AW0258L	POS 05			YC001-YC030, YK901-YM670
D00834		M00268	FS198/ /			YC001-YC030, YK901-YM670
<b>W1184</b>	<b>SA1</b>	<b>LEADING EDGE-LEFT WING IDG CONTROLS</b>				
D39911		AC0520				YC001-YC030, YK901-YM670
D30014		AW0258L	POS 04			YC001-YC030, YK901-YM670
D39935		DM0017	520/ /			YC001-YC030, YK901-YM670
<b>W1186</b>	<b>LA1</b>	<b>LEADING EDGE-LEFT WING-POWER FEEDER</b>				
D08094J		AW0258L	POS 01	D08094P	W1162	ALL
<b>W1188</b>	<b>SN2</b>	<b>LEFT WING/BODY PRESSURE SEAL TO FRONT SPAR OUTBD</b>				
D39903		AC0520				ALL
D00738		S00118	621/205/R213			ALL
D10589		S1094				ALL
D10591		S1095				ALL
D10593		S1096				ALL

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W1180

Page 1 End

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W1242</b>	<b>LN2</b>	<b>L LEADING EDGE TO WING TIP</b>				
D40014J				D40014P	W0252	YC001-YC030
D40014J				D40014P		YC031-YM670
D11042		M01743	727B/245/L634			ALL
D11046		T00390	727B/245/L638			ALL
<b>W1244</b>	<b>LN2</b>	<b>R LEADING EDGE TO WING TIP</b>				
D40016J				D40016P	W0254	YC001-YC030
D40016J				D40016P		YC031-YM670
D11040		M01742	727B/245/R634			ALL
D11044		T00389	727B/245/R638			ALL

MASTER BUNDLE LIST

D280A103

91-21-13

Section W1240

Page 1 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W1262</b>	<b>RB1</b>	<b>ENGINE STRUT-RIGHT FIREWALL TO AW0258R POWER FEEDER</b>				
D30438		AS0001R	POS 10			ALL
D08194P		AW0258R	POS 01	D08194J	W1286	ALL
<b>W1264</b>	<b>SN1</b>	<b>ENGINE STRUT-RIGHT FIREWALL TO AW0258R IDG CONTROLS</b>				
D30434		AS0001R	POS 09			ALL
D30116		AW0258R	POS 04			ALL
<b>W1266</b>	<b>SB2</b>	<b>ENGINE STRUT-RIGHT FIREWALL TO AW0258R EEC CH B</b>				
D30420		AS0001R	POS 05			ALL
D30456		AS0001R	POS 07			ALL
D30164		AW0258R	POS 05			ALL
<b>W1268</b>	<b>RB2</b>	<b>ENGINE STRUT-RIGHT FIREWALL TO AW0258R EEC CH B</b>				
D30460		AS0001R	POS 01			ALL
D30404		AS0001R	POS 08			ALL
D30408		AS0002R	POS 01			ALL
D30410		AS0003R	POS 01			ALL
D30184		AW0258R	POS 03			ALL
D00528		S00021	574/199/R184			ALL

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W1260

Page 1 End

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W1270</b>	<b>RA2</b>	<b>ENGINE STRUT-RIGHT FIREWALL TO AW0258R EEC CH A</b>				
D30412		AS0001R	POS 03			ALL
D30452		AS0001R	POS 04			ALL
D30428		AS0001R	POS 06			ALL
D08156P		AW0258R	POS 06	D08156J	W1278	ALL
<b>W1272</b>	<b>RA2</b>	<b>ENGINE STRUT-RIGHT FIREWALL TO AW0258R EEC CH A</b>				
D30424		AS0001R	POS 02			ALL
D30402		AS0002R	POS 02			ALL
D30406		AS0003R	POS 02			ALL
D30142		AW0258R	POS 02			ALL
<b>W1274</b>	<b>RA2</b>	<b>LEADING EDGE-RIGHT WING EEC CH A</b>				
D39920		AD0520				ALL
D30140		AW0258R	POS 02			ALL
<b>W1276</b>	<b>RB2</b>	<b>LEADING EDGE-RIGHT WING EEC CH B</b>				
D39924		AD0520				ALL
D30182		AW0258R	POS 03			ALL
<b>W1278</b>	<b>RN2</b>	<b>LEADING EDGE-RIGHT WING EEC CH A</b>				
D39928		AD0520				ALL
D08156J		AW0258R	POS 06	D08156P	W1270	ALL
D00790		V00038	W156/LE/R			ALL

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W1270

Page 1 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity	
<b>W1280</b>	<b>RN1</b>	<b>RIGHTWING/BODY PRESSURE SEAL TO FRONT SPAR INBOARD</b>					
D39940		AD0520				ALL	
D00076		M00049	FS104/ /			ALL	
<b>W1282</b>	<b>SB2*</b>	<b>LEADING EDGE-RIGHT WING EEC CH B</b>					
D39932		AD0520				ALL	
D30162		AW0258R	POS 05			ALL	
D00838		M00269	FS195/ /			ALL	
<b>W1284</b>	<b>SN1</b>	<b>LEADING EDGE-RIGHT WING IDG CONTROLS</b>					
D39912		AD0520				YC001-YC030, YK901-YM670	
D39936		AD0520				YC001-YC030, YK901-YM670	
D30114		AW0258R	POS 04			YC001-YC030, YK901-YM670	
<b>W1286</b>	<b>RB1</b>	<b>LEADING EDGE-RIGHT WING POWER FEEDERS</b>					
D08194J		AW0258R	POS 01	D08194P	W1262	ALL	
<b>W1288</b>	<b>SN2</b>	<b>RIGHT WING BODY PRESSURE SEAL TO FRONT SPAR OUTBD</b>					
D39904		AD0520				ALL	
D00736		S00117	621/205/R213			ALL	
D10595		S1097				ALL	
D10597		S1098				ALL	
D10599		S1099				ALL	

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W1280

Page 1 End

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W1662</b>	<b>LB1</b>	<b>LEFT WING/BODY PRESSURE SEAL TO FRONT SPAR</b>				
D39907		AC0520				ALL
D00870		S00151	547/198/083L			ALL
D00732		V00029	611/205/L208			ALL
<b>W1664</b>	<b>SA1</b>	<b>RIGHT WING-WING/BODY TO FRONT SPAR AND P15 REFUELING PANEL</b>				
D04578J				D04578P	W0024	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D04578J				D04578P		YK913-YK917, YK920, YL430, YM653-YM670
D39908		AD0520				ALL
D06013		REFUELING				ALL
D00874		S00153	547/195/083			ALL
D00734		V00030	611/205/R208			ALL
D00890		V00044	124/ /			ALL
D00894		V00045	135/ /			ALL
D00892		V00046	127/ /			ALL

MASTER BUNDLE LIST

D280A103

91-21-13

Section W1660

Page 1 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W2004</b>	<b>NN2</b>	<b>WINDOW NO.2 WINDSHIELD HEAT BUNDLE (NN2)</b>				
D10572				D10570		YC001-YK906
D10572		M02675	230/ /			YK907-YM670
<b>W2006</b>	<b>NN2</b>	<b>WINDOW NO.2 COILED CORD WINDSHIELD BUNDLE (NN2)</b>				
I D10570				D10572		YC001-YK906
I D10562		M02675		D10568		YC001-YK906

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W2000

Page 1 End

Aug 10/2009





# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W2022</b>	<b>NN2*</b>	<b>P9 TO E1-3</b>				
D41400P D40914P		AE0103A AP0900A	POS 06 POS 10	D41400J D40914J	W0131 W0001	ALL YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40914P		AP0900A	POS 10	D40914J		YC031-YC050, YK913-YK917, YK920, YL430, YM653-YM670

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W2020

Page 1 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W2030</b>	<b>SN2</b>	<b>AP0900A DISC BRKT TO AP0600B DISC BRKT (SN2)</b>				
D46052P		AP0600B	POS 11	D46052J	W0044	ALL
D40924P		AP0900A	POS 14	D40924J	W0003	YC001-YC030, YK901-YL429, YM643-YM652
D40924P		AP0900A	POS 14	D40924J		YC031-YC050, YL430, YM653-YM670
<b>W2035</b>	<b>NA2</b>	<b>P5, E5-2</b>				
D06067J			264/255/L042	D06067P		ALL
D45235J		AE0502A	POS 19	D45235P	W0521	ALL
D00553		P005-28	P005-00/ /			ALL
D02171		P005-69	P005-69/ /			ALL
D02169		P005-70	P005-70/ /			ALL

## MASTER BUNDLE LIST

D280A103

**91-21-13**  
Section W2030  
Page 1 End  
Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W2101</b>	<b>LA2</b>	<b>LEFT AC ELEX PWR FROM P18 TO E1.</b>				
D41811P		AE0101A	POS 13	D41811J	W0111	ALL
D40111P		AE0602A	POS 03	D40111J	W0621	YM643-YM670
D40811P		AE0801A	POS 15	D40811J	W0811	YC001-YC006
D40811P		AE0801A	POS 19	D40811J	W0811	YC007, YK907-YL430
D40811P		AE0801A	POS 19	D40811J		YC008-YC011
D41801P		AP1800B	POS 03	D41801J	W0018	ALL
<b>W2102</b>	<b>LN2</b>	<b>P18 (L CAB CEILING) DISC TO L CONTROL CABIN AREA (LN2)</b>				
D12106		L01103	224/223/L040			ALL
D12108		L01103	224/223/L040			ALL
D00796		P021-01	215/213/L034			ALL
<b>W2103</b>	<b>RB2</b>	<b>RIGHT AC ELEX PWR FROM P6 TO E1.</b>				
D46013P		AE0101B	POS 13	D46013J	W0111	YC001-YC030, YK901-YM652
D46011J		AE0104A	POS 09	D46011P	W0141	YC001-YC030, YK901-YM652
D40621P		AE0602A	POS 04	D40621J	W0621	YM643-YM652
D48323P		AE0801B	POS 14	D48323J	W0813	YC007-YC030
D48323P		AE0801B	POS 14	D48323J	W0811	YK907-YM646
D48323P		AE0801B	POS 14	D48323J		YM647-YM652
D48323P		AE0801C	POS 11	D48323J	W0813	YC001-YC006
D46061P		AP0600B	POS 23	D46061J	W0044	YC001-YC030, YK901-YM652
<b>W2104</b>	<b>LA1</b>	<b>P5 OVHD PANEL TO EE BAY (E2-2) LA1</b>				
D40506P		AE0202A	POS 11	D40506J	W0220	YC001-YC030, YK901-YM670
D40506P		AE0202A	POS 11	D40506J		YC031-YC050
D48100P		AJ0048A	POS 01	D48100J	W0088	YC004-YM670
D40502P		AP0600C	POS 01	D40502J	W0044	ALL
D40504P		AP1800A	POS 08	D40504J	W0018	ALL
D00624		P005-03	P005-00/ /			ALL
D02486		P005-08	P005-00/ /			ALL
D11988		S00007	P005-00/ /			ALL
<b>W2108</b>	<b>LA1</b>	<b>WINDSHIELD HEAT DISCONNECT TO E2-1 (LA1)</b>				
D10564				D10562		YC001-YK906
D40070P		AE0201A	POS 20	D40070J	W0210	ALL

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W2100

Page 1

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W2108</b>	<b>LA1</b>	<b>WINDSHIELD HEAT DISCONNECT TO E2-1 (LA1) (continued)</b>				
D00062		M00021	191/241/L011			ALL
D10564		M02675	230/ /			YK907-YM670



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W2110</b>	<b>SA2</b>	<b>CARGO SMOKE DETECTION &amp; FIRE SUPPRESSION MODULE (P8-75) E2-2 SHELF</b>				
D40646P		AE0202A	POS 30	D40646J	W0220	YC001-YC030, YK901-YM670
D40646P		AE0202A	POS 30	D40646J		YC031-YC050
D46022P		AE0202A	POS 31	D46022J	W0220	YC001-YC030, YK901-YM670
D46022P		AE0202A	POS 31	D46022J		YC031-YC050
D12760		P008-75	P008-00/ /			ALL
<b>W2112</b>	<b>LA2*</b>	<b>P5 OVHD PANEL TO EE BAY (E2-1/E2-2/E3-1) LA2</b>				
D40598P		AE0201A	POS 10	D40598J	W0212	YC001-YC030, YK901-YM670
D40518P		AE0201A	POS 21	D40518J	W0210	YC001-YC030, YK901-YM670
D40520P		AE0202A	POS 12	D40520J	W0220	YC001-YC030, YK901-YM670
D40516P		AE0301A	POS 20	D40516J	W0311	YC001-YC030, YK901-YM670
D40596P		AE0302A	POS 31	D40596J	W0321	YC001-YC030, YK901-YM670
D48102P		AJ0048A	POS 05	D48102J	W0088	YC004-YC030, YK901-YM670
D40512P		AP0600C	POS 03	D40512J	W0044	YC001-YC030, YK901-YM670
D40840P		AP1800A	POS 03	D40840J	W0018	YC001-YC030, YK901-YM670
D40514P		AP1800A	POS 09	D40514J	W0018	YC001-YC030, YK901-YM670
D00722		P005-04	P005-00/ /			YC001-YC030, YK901-YM670
D10724		P005-06	P005-00/ /			YC001-YC030, YK901-YM670
D00638		P005-09	P005-00/ /			YC001-YC030, YK901-YM670
D00462		P005-11	P005-00/ /			YC001-YC030, YK901-YM670
D02349		P005-18	P005-00/ /			YC001-YC030, YK901-YM670
D02952		P005-68	P005-00/ /			YC001-YC030, YK901-YM670

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W2110

Page 1

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W2112</b>	<b>LA2*</b>	<b>P5 OVHD PANEL TO EE BAY (E2-1/E2-2/E3-1) LA2 (continued)</b>				
D11125		P005-88	P005-00/ /			YC001-YC030, YK901-YM670
<b>W2114</b>	<b>LB2</b>	<b>P5 OVHD TO AB0340A/AB0340B AND AE0101A DISC BRACKET (LB2)</b>				
D40196P		AB0340A	POS 03	D40196J	W3142	YC001-YC030, YK901-YM652
D40196P		AB0340A	POS 03	D40196J		YC031-YC050, YM653-YM670
D41838P		AB0340B	POS 03	D41838J	W6288	YC001-YL430
D40296P		AB0340B	POS 07	D40296J	W4142	ALL
D48104P		AJ0048A	POS 20	D48104J	W0088	YC004-YM670
D40522P		AP1800A	POS 10	D40522J	W0018	ALL
D02970		L00273	270/274/L017			ALL
D02992		L00273	270/274/L017			ALL
D00090		N00011	P005-17/ /			ALL

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W2110

Page 2 End

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W2132</b>	<b>LA1</b>	<b>P91 TO P6 (115V AC XFR BUS 1 SEC 2)</b>				
D11414		P0091				ALL
<b>W2134</b>	<b>LA1</b>	<b>P91 TO P18 (115V AC XFR BUS 1 SEC 2 AND 115V AC MAIN BUS)</b>				
D11412		P0091				ALL
<b>W2135</b>	<b>RB2</b>	<b>P5, E5-2</b>				
D45237J		AE0502A	POS 07	D45237P	W0523	YC001-YC030, YK901-YM670
D45067J		AE0502A	POS 08	D45067P	W0523	YC001-YC030, YK901-YM670
D40623P		AP0600B	POS 06	D40623J	W0041	YC001-YC030, YK901-YM670
D01817		P005-28	P005-00/ /			YC001-YC030, YK901-YM670
D02173		P005-69	P005-69/ /			YC001-YC030, YK901-YM670
D02183		P005-70	P005-70/ /			YC001-YC030, YK901-YM670
<b>W2136</b>	<b>LA1</b>	<b>P91 TO P6 AND P18</b>				
D11424		P0091				ALL
<b>W2138</b>	<b>LA1</b>	<b>AP0600B TO AE0201A (LA1)</b>				
D41432P		AE0201A	POS 15	D41432J	W0210	ALL
D41430P		AP0600B	POS 05	D41430J	W0044	ALL

MASTER BUNDLE LIST

D280A103

91-21-13

Section W2130

Page 1 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

<b>Bundle</b> Equip	<b>Sep</b>	<b>Description</b> Matewith	<b>Location</b>	<b>MW Connector</b>	<b>MW Bundle</b>	<b>Effectivity</b>
<b>W2149</b>	<b>NA2</b>	<b>CAPTAINS NAV ELEX PANEL TO E/E BAY</b>				
D04029J		AE0102A	POS 03	D04029P	W0121	YC001-YC030, YK901-YM670
D40095P		AJ0048A	POS 04	D40095J	W0088	YC004-YC030, YK901-YM670
D00263		P008-25	P008-25/ /			YC001-YC030, YK901-YM670
D00303		P008-25	P008-25/ /			YC001-YC030, YK901-YM670

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W2140

Page 1 End

Aug 10/2009





Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W2151</b>	<b>NB2</b>	<b>F/O'S NAV ELEX PANEL TO E/E BAY</b>				
D04031J		AE0105A	POS 02	D04031P	W0151	YC001-YC030, YK901-YM670
D00265		P008-26	P008-26/ /			YC001-YC030, YK901-YM670
D00305		P008-26	P008-26/ /			YC001-YC030, YK901-YM670

**MASTER BUNDLE LIST**

D280A103

**91-21-13**

Section W2150

Page 1 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W2169</b>	<b>RB2</b>	<b>RIGHT DC ELEX PWR FROM P6 TO E3.</b>				
D46035P		AE0301A	POS 24	D46035J	W0313	YC001-YC030, YK901-YM670
D46035P		AE0301A	POS 24	D46035J		YC031-YC050
D46043P		AE0302A	POS 30	D46043J	W0321	ALL
D46063P		AP0600B	POS 19	D46063J	W0044	ALL

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W2160

Page 1 End

Aug 10/2009

<b>Bundle</b> Equip	<b>Sep</b>	<b>Description</b> Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W2175</b>	<b>LA2</b>	<b>LEFT DC ELEX PWR FROM P18 TO E1.</b>				
D41821P		AE0101A	POS 24	D41821J	W0111	ALL
D41823P		AP0900A	POS 17	D41823J		YC031-YM670
D41803P		AP1800B	POS 06	D41803J	W0018	ALL
<b>W2177</b>	<b>NA2</b>	<b>DUAL ATC ELEC PNL TO E1-2</b>				
D41217J		AE0102A	POS 04	D41217P	W0121	YC001-YC030, YK901-YM670
D41217J D00211		AE0102A P008-29	POS 04 P008-29/ /	D41217P		YC031-YC050 ALL



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W2201</b>	<b>LA2</b>	<b>LEFT AC ELEX PWR FROM P18 TO E3.</b>				
D41817P		AE0301A	POS 21	D41817J	W0311	YC001-YC030, YK901-YM670
D41817P		AE0301A	POS 21	D41817J		YC031-YC050
D41819P		AE0302A	POS 27	D41819J	W0321	ALL
D43313P		AE0303A	POS 28	D43313J	W0331	YC001-YC030, YK901-YM670
D43313P		AE0303A	POS 28	D43313J		YC031-YC050
D41805P		AP1800B	POS 01	D41805J	W0018	ALL
<b>W2204</b>	<b>RN2</b>	<b>P6 (R CAB CEILING) DISC TO R CONTROL CABIN AREA (RN2)</b>				
D40582P		AP0600C	POS 10	D40582J	W0044	ALL
D12110		L01104	224/223/R040			ALL
D12112		L01104	224/223/R040			ALL
D00798		P023-01	215/213/R034			ALL
<b>W2205</b>	<b>SN2</b>	<b>INTEGRATED STANDBY FLIGHT DISPLAY (ISFD) 20 GAGE</b>				
D04205J		AE0102A	POS 05	D04205P	W0121	YC001-YC030, YK901-YM670
D40049J		AE0104A	POS 07	D40049P	W0141	YC001-YC030, YK901-YM670
D00849		N00085	P001-03/ /			YC001-YC030
D03679		N00185	P002-01/ /			YC001-YC030, YK901-YM670
D03681		N00186	P002-01/ /			YC001-YC030
D10853		N00226	P002-01/ /			YK901-YM670
<b>W2207</b>	<b>NA2</b>	<b>PRIMARY CDS-DEU TO P1</b>				
D04267P		AE0301A	POS 06	D04267J	W0311	YC001-YC030, YK901-YM670
D04267P		AE0301A	POS 06	D04267J		YC031-YC050
D40081P		AJ0048A	POS 06	D40081J	W0088	YC004-YC006
D04207P		AP0900A	POS 03	D04207J	W0001	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D04207P		AP0900A	POS 03	D04207J		YC031-YC050, YK913-YK917, YK920, YL430, YM653-YM670

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W2200

Page 1

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W2208</b>	<b>RB1</b>	<b>WINDSHIELD HEAT DISCONNECT TO E4-2. (RB1)</b>				
D10568				D10562		YC001-YK906
D40068P		AE0402A	POS 34	D40068J	W0420	ALL
D00064		M00022	191/241/R011			ALL
D10568		M02675	230/ /			YK907-YM670

**MASTER BUNDLE LIST**

D280A103

**91-21-13**

Section W2200

Page 2 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W2212</b>	<b>RA1</b>	<b>P5 OVHD PANEL (RA1)</b>				
D46124P		AJ0046B	POS 01	D46124J	W0066	YC004-YM670
D40528P		AP0600A	POS 08	D40528J	W6208	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40528P		AP0600A	POS 08	D40528J		YK913-YK917, YK920, YL430, YM653-YM670
D40526P		AP0600C	POS 02	D40526J	W0044	ALL
D40524P		AP1800A	POS 04	D40524J	W0018	ALL
D00630		P005-03	P005-00/ /			ALL
D00642		P005-08	P005-00/ /			ALL
<b>W2214</b>	<b>RB1</b>	<b>P5 OVHD PANEL TO EE BAY (E4-1) RB1</b>				
D40530P		AE0401A	POS 40	D40530J	W0410	ALL
<b>W2216</b>	<b>RA2</b>	<b>P5 OVHD PANEL TO EE BAY (E4-1) RA2</b>				
D41812P		AE0303A	POS 40	D41812J	W0330	YC001-YL430
D40534P		AE0401A	POS 48	D40534J	W0410	ALL
D46112P		AJ0046B	POS 12	D46112J	W0066	YC004-YM670
D40532P		AP0600C	POS 04	D40532J	W0044	ALL
D00618		M00392	P005-17/ /			YM643-YM670
D10956		M1718				ALL
D10958		M1718				ALL
D00786		N00051	P005-16/ /			ALL
D00794		N00055	P005-16/ /			ALL
D00646		P005-10	P005-00/ /			ALL
D00656		P005-17	P005-00/ /			YM643-YM670
D03996		P005-17	P005-00/ /			YC001-YL430
D03998		P005-17	P005-00/ /			YC001-YL430
D01406		P005-20	P005-00/ /			ALL
<b>W2218</b>	<b>RB2</b>	<b>P5 OVHD PANEL TO EE BAY (E3-1/E4-1/E4-2) RB2</b>				
D40170P		AB0340A	POS 04	D40170J	W3058	YC001-YC030, YK901-YM670
D40510P		AE0101A	POS 28	D40510J	W0111	YC001-YC030, YK901-YM670
D40064P		AE0101B	POS 23	D40064J	W0111	YK901-YM670
D40544P		AE0301A	POS 27	D40544J	W0313	YC001-YC030, YK901-YM670

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W2210

Page 1

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W2218</b>	<b>RB2</b>	<b>P5 OVHD PANEL TO EE BAY (E3-1/E4-1/E4-2) RB2 (continued)</b>				
D41826P		AE0303A	POS 36	D41826J	W0330	YC001-YC030, YK901-YL430
D40542P		AE0401A	POS 51	D40542J	W0410	YC001-YC030, YK901-YM670
D40540P		AE0402A	POS 32	D40540J	W0422	YC001-YC030, YK901-YM670
D41440P		AE0402A	POS 38	D41440J	W0420	YC001-YC030, YK901-YM670
D46114P		AJ0046B	POS 15	D46114J	W0066	YC004-YC030, YK901-YM670
D40536P		AP0600C	POS 09	D40536J	W0044	YC001-YC030, YK901-YM670
D40538P		AP1800A	POS 05	D40538J	W0018	YC001-YC030, YK901-YM670
D00620 D00096		M00393 N00012	P005-17/ / P005-10/ /			YM643-YM670 YC001-YC030, YK901-YM670
D00616		N00042	P005-02/ /			YC001-YC030, YK901-YM670
D00648		P005-011				YC001-YC030, YK901-YM670
D00634		P005-04	P005-00/ /			YC001-YC030, YK901-YM670
D00730		P005-04	P005-00/ /			YC001-YC030, YK901-YM670
D00636		P005-05	P005-00/ /			YC001-YC030, YK901-YM670
D10726		P005-06	P005-00/ /			YC001-YC030, YK901-YM670
D00644		P005-09	P005-00/ /			YC001-YC030, YK901-YM670
D00680		P005-10	P005-00/ /			YC001-YC030, YK901-YM670
D00650		P005-12	P005-00/ /			YC001-YC030, YK901-YM670
D02351		P005-18	P005-00/ /			YC001-YC030, YK901-YM670
D03172		P005-68	P005-00/ /			YC001-YC030, YK901-YM670

MASTER BUNDLE LIST

D280A103

91-21-13

Section W2210

Page 2

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W2218</b> D03072	<b>RB2</b>	<b>P5 OVHD PANEL TO EE BAY (E3-1/E4-1/E4-2) RB2 (continued)</b> R00334	P005-00/ /			YC001-YC030, YK901-YM670

---

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W2210  
Page 3 End  
Aug 10/2009





Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>I</b> W2221	<b>SA2</b>	<b>AUTOPILOT P9 TO E1-1</b>				
D40019P		AE0101A	POS 30	D40019J	W0111	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D04221P		AP0900A	POS 09	D04221J	W0001	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
<b>I</b> D04221P		AP0900A	POS 09	D04221J		YC031-YC050

MASTER BUNDLE LIST

D280A103

91-21-13

Section W2220

Page 1 End

Aug 10/2009



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W2231</b>	<b>RB2</b>	<b>RIGHT AC ELEX PWR FROM P6 TO E3.</b>				
D46017P		AE0301A	POS 23	D46017J	W0313	YC001-YC030, YK901-YM670
D46017P		AE0301A	POS 23	D46017J		YC031-YC050
D46021P		AE0302A	POS 25	D46021J	W0321	ALL
D43309P		AE0303A	POS 29	D43309J	W0331	YC001-YC030, YK901-YM670
D43309P		AE0303A	POS 29	D43309J		YC031-YC050
D46067P		AP0600B	POS 10	D46067J	W0044	ALL
<b>W2237</b>	<b>NB2</b>	<b>SECONDARY CDS-DEU TO P3</b>				
D04297P		AE0301A	POS 31	D04297J	W0313	YC001-YC030, YK901-YM670
D04297P		AE0301A	POS 31	D04297J		YC031-YC050
D09002P		AJ0022	POS 08	D09002J	W0076	YC003-YC006
D40099P		AJ0046B	POS 07	D40099J	W0066	YC004-YC006
D04237P		AP0900A	POS 06	D04237J	W0003	YC001-YC030, YK901-YL429, YM643-YM652
D04237P		AP0900A	POS 06	D04237J		YC031-YC050, YL430, YM653-YM670

### MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W2230

Page 1 End

May 11/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W2247</b>	<b>NB2</b>	<b>ATC NO.2 (E1-5 TO P8-29)</b>				
D41517J		AE0105A	POS 08	D41517P	W0151	YC001-YC030, YK901-YM670
D41517J		AE0105A	POS 08	D41517P		YC031-YC050
D40103P		AJ0046A	POS 09	D40103J	W0066	YC004-YM670
D00519		P008-29	P008-29/ /			ALL
D10204		S00942	316/163/L025			ALL
D10206		S00943	316/163/L025			ALL

MASTER BUNDLE LIST

D280A103

91-21-13

Section W2240

Page 1 End

May 11/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W2251</b>	<b>RF2</b>	<b>AUTOPILOT P3 TO E1-4</b>				
D04311J		AE0104A	POS 06	D04311P	W0141	ALL
D04251P		AP0900A	POS 23	D04251J	W0003	YC001-YC030, YK901-YL429, YM643-YM652
D04251P		AP0900A	POS 23	D04251J		YC031-YC050, YL430, YM653-YM670

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W2250

Page 1 End

May 11/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W2265</b>	<b>NA2</b>	<b>ADF-1 ELEX PNL TO E3-1</b>				
D42005P		AE0301A	POS 12	D42005J	W0311	YC001-YC030, YK901-YM670
D42005P D03655		AE0301A P008-68	POS 12 P008-00/ /	D42005J		YC031-YC050 ALL
<b>W2267</b>	<b>NB2</b>	<b>ADF-2 ELEX PNL TO E3-1</b>				
D42007P		AE0301A	POS 25	D42007J	W0313	YC001-YC030, YK901-YM670
D42007P D03657		AE0301A P008-69	POS 25 P008-00/ /	D42007J		YC031-YC050 ALL

MASTER BUNDLE LIST

D280A103

91-21-13

Section W2260  
Page 1 End  
Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W2307</b>	<b>SN2</b>	<b>HANDSET/MIC JACK - CONTROL STAND (P8)</b>				
D12309			243/213/L003			YK901-YL430
D06019			P008-00/ /			ALL
D07015		66-16842				YC001-YC050, YM643-YM670
D07017		66-16842				YC001-YC050, YM643-YM670
D07019		66-16842				YC001-YC050, YM643-YM670
D07021		66-16842				YC001-YC050, YM643-YM670
D04149P		AE0103A	POS 13	D04149J	W0131	ALL

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W2300

Page 1 End

May 11/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W2363</b>	<b>LE2</b>	<b>AUTO PILOT CONTROL PANEL SYSTEM A</b>				
D04069P		AE0101A	POS 29	D04069J	W0111	ALL
D00299		M00198	P007-00/ /			ALL
D00301		M00198	P007-00/ /			ALL

**MASTER BUNDLE LIST**

D280A103

**91-21-13**

Section W2360

Page 1 End

May 11/2009



# 737-700/800 WIRING DIAGRAM MANUAL

<b>Bundle</b> Equip	<b>Sep</b>	<b>Description</b> Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W2383</b>	<b>RB2</b>	<b>RIGHT DC ELEX PWR FROM P6 TO E1 AND P9.</b>				
D46023P		AE0101B	POS 09	D46023J	W0111	YC001-YC030, YK901-YM670
D46031J		AE0104A	POS 10	D46031P	W0141	YC001-YC030, YK901-YM670
D46065P		AP0600B	POS 15	D46065J	W0044	YC001-YC030, YK901-YM670
D46033P		AP0900A	POS 16	D46033J	W0003	YC001-YC030, YK901-YL429, YM643-YM652
D46033P		AP0900A	POS 16	D46033J		YL430, YM653-YM670

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W2380

Page 1 End

May 11/2009





Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W2401</b>	<b>LN2</b>	<b>SELCAL CONTROL PANEL(P8) TO E/E BAY</b>				
D04721P D00551		AE0401A P008-66	POS 32	D04721J	W0411	YC001-YK906 YC001-YK906
<b>W2403</b>	<b>SA2</b>	<b>VHF COMM NO. 1 CONTROL PNL</b>				
D04123P D00203		AE0103A P008-02	POS 12 P008-02/ /	D04123J	W0131	YC001-YC030 YC001-YC030
<b>W2405</b>	<b>RB2</b>	<b>VHF COMM NO.2 CONTROL PNL</b>				
D04125J D04125J D00209		AE0105A AE0105A P008-03	POS 01 POS 01 P008-03/ /	D04125P D04125P	W0151	YC001-YC030 YC031-YC050 YC001-YC050

MASTER BUNDLE LIST

D280A103

91-21-13

Section W2400

Page 1 End

May 11/2009



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W2413</b>	<b>NA2</b>	<b>RADIO TUNING PANEL 1 (P8-71) TO E3-3</b>				
D43363P		AE0303A	POS 48	D43363J	W0331	YK901-YM670
D43365P		AE0303A	POS 49	D43365J	W0331	YK901-YM670
D00203		P008-71	P008-02/ /			YK901-YM670
D10601		P008-71	P008-02/ /			YK901-YM670
<b>W2415</b>	<b>NB2</b>	<b>RADIO TUNING PANEL 2 (P8-72) TO E3-3</b>				
D43355P		AE0303A	POS 46	D43355J	W0331	YK901-YM670
D43357P		AE0303A	POS 47	D43357J	W0331	YK901-YM670
D00209		P008-72	P008-72/ /			YK901-YM670
D10603		P008-72	P008-72/ /			YK901-YM670
<b>W2417</b>	<b>NC2</b>	<b>RADIO TUNING PANEL 3 (P8-73) TO E3-3</b>				
D43391P		AE0303A	POS 07	D43391J	W0331	YK901-YM670
D43329P		AE0303A	POS 15	D43329J	W0331	YK901-YM670
D00549		P008-73	P008-73/ /			YK901-YM670
D10605		P008-73	P008-73/ /			YK901-YM670
<b>W2419</b>	<b>NN2</b>	<b>FLIGHT RECORDER E3-2 SHELF TO TEST CONNECTOR</b>				
D43219P		AE0302A	POS 13	D43219J	W0321	ALL
D01637		M01252	P018-02/ /			ALL

### MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W2410

Page 1 End

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W2465</b>	<b>RF2</b>	<b>AUTOPILOT CONTROL PANEL SYSTEM - B</b>				
D08019J D01815		AE0104A M00198	POS 01 P007-00/ /	D08019P	W0141	ALL ALL

---

**MASTER BUNDLE LIST**

D280A103

**91-21-13**

Section W2460

Page 1 End

May 11/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W2508</b>	<b>SA2*</b>	<b>P5 OVHD PANEL TO EE BAY (E1-4/E4-1) SA2</b>				
D40556J		AE0104A	POS 23	D40556P	W0141	YC001-YC030, YK901-YM670
D40554P		AE0401A	POS 43	D40554J	W0410	YC001-YC030, YK901-YM670
D46108P		AJ0046A	POS 15	D46108J	W0066	YC004-YC030, YK901-YM670
D48106P		AJ0048A	POS 14	D48106J	W0088	YC004-YC030, YK901-YM670
D40550P		AP0600C	POS 05	D40550J	W0044	YC001-YC030, YK901-YM670
D00432		N00020	P005-14/ /			YC001-YC030, YK901-YM670
D00918		N00074	212/258/000			YC001-YC030, YK901-YM670
D00626		P005-02	P005-00/ /			YC001-YC030, YK901-YM670
D01086		P005-05	P005-00/ /			YC001-YC030, YK901-YM670
D00652		P005-13	P005-00/ /			YC001-YC030, YK901-YM670
D10596		P005-13	P005-00/ /			YC001-YC030, YK901-YM670
D00440		P005-14	P005-00/ /			YC001-YC030, YK901-YM670
D00654		P005-16	P005-00/ /			YC001-YC030, YK901-YM670
D00483		P005-19	P005-19/ /			YC001-YC030, YK901-YM670
D00482		P005-20	P005-00/ /			YC001-YC030, YK901-YM670
D02921		P005-81	P005-00/ /			YC001-YC030, YK901-YM670

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W2500

Page 1 End

May 11/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W2510</b>	<b>SB2*</b>	<b>P5 OVHD PANEL TO EE BAY (E1-4/E4-1) SB2</b>				
D40560J		AE0104A	POS 14	D40560P	W0141	ALL
D40562P		AE0401A	POS 47	D40562J	W0410	ALL
D46126P		AJ0046B	POS 13	D46126J	W0066	YC004-YM670
D40558P		AP0600C	POS 08	D40558J	W0044	ALL
D00628		P005-02	P005-00/ /			ALL
<b>W2511</b>	<b>LA2</b>	<b>HF COMM NO. 1 CONTROL PNL</b>				
D08511P		AE0801A	POS 02	D08511J	W0811	YC001-YC007
D00419		P008-11	P008-11/ /			YC001-YC007

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W2510

Page 1 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

<b>Bundle</b> Equip	<b>Sep</b>	<b>Description</b> Matewith	<b>Location</b>	<b>MW Connector</b>	<b>MW Bundle</b>	<b>Effectivity</b>
<b>W2527</b>	<b>NA2</b>	<b>CDS - DEU 1 OUTPUT 1 TO COAX SPLITTER 1</b>				
D40101P		AE0301A	POS 04	D40101J	W0311	YC001-YC030, YK901-YM670
D40101P D10029		AE0301A M01810	POS 04 193/219/L007	D40101J		YC031-YC050 ALL
<b>W2529</b>	<b>NB2</b>	<b>CDS - DEU 1 OUTPUT 2 TO COAX SPLITTER 2</b>				
D40201P		AE0301A	POS 40	D40201J	W0313	YC001-YC030, YK901-YM670
D40201P D10043		AE0301A M01811	POS 40 197/218/R007	D40201J		YC031-YC050 ALL

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W2520

Page 1 End

May 11/2009



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W2531</b>	<b>ND2</b>	<b>CDS - DEU 2 OUTPUT 2 TO COAX SPLITTER 3</b>				
D40301P		AE0301A	POS 05	D40301J	W0311	YC001-YC030, YK901-YM670
D40301P D10057		AE0301A M01812	POS 05 193/218/L007	D40301J		YC031-YC050 ALL
<b>W2532</b>	<b>SN2</b>	<b>J9 BATTERY SHIELD</b>				
D48108P		AJ0048A	POS 15	D48108J	W0088	YC004-YC030, YK901-YM670
<b>W2533</b>	<b>NC2</b>	<b>CDS - DEU 2 OUTPUT 1 TO COAX SPLITTER 4</b>				
D40401P		AE0301A	POS 41	D40401J	W0313	YC001-YC030, YK901-YM670
D40401P D10071		AE0301A M01813	POS 41 197/216/R007	D40401J		YC031-YC050 ALL
<b>W2536</b>	<b>SN2</b>	<b>J9 BATTERY SHIELD</b>				
D00046		M00009	E002-02/184/L040			ALL

### MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W2530

Page 1 End

May 11/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W2589</b>	<b>NN2</b>	<b>ELT CONTROL PANEL(LEFT SIDE)</b>				
D04889P		AB0288	POS 03	D04889J	W3419	ALL
D02889		P005-80	P005-00/ /			ALL

---

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W2580

Page 1 End

May 11/2009





Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W2597</b>	<b>NA2</b>	<b>E5-2, P61 (DATA LOADER)</b>				
D45225J		AE0502A	POS 21	D45225P	W0521	ALL
D45293J		AE0502A	POS 22	D45293P	W0521	YC001-YC011
D45293J		AE0502A	POS 23	D45293P	W0521	YC012-YM670
D40625P		AP0600B	POS 13	D40625J	W0041	ALL

MASTER BUNDLE LIST

D280A103

**91-21-13**  
Section W2590  
Page 1 End  
May 11/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W2651</b>	<b>SA2</b>	<b>STBY ELEX PWR FROM P18 TO E1 AND P9.</b>				
D41827J		AE0102A	POS 06	D41827P	W0121	YC001-YC030, YK901-YM670
D41831P		AE0103A	POS 17	D41831J	W0131	YC001-YC030, YK901-YM670
D41833P		AP0900A	POS 19	D41833J	W0001	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D41833P		AP0900A	POS 19	D41833J		YK913-YK917, YK920, YL430, YM653-YM670
D41807P		AP1800B	POS 08	D41807J	W0018	YC001-YC030, YK901-YM670
<b>W2653</b>	<b>SA2</b>	<b>STBY ELEX PWR FROM P18 TO E3.</b>				
D41837P		AE0301A	POS 22	D41837J	W0311	YC001-YC030, YK901-YM670
D41837P		AE0301A	POS 22	D41837J		YC031-YC050
D41839P		AE0302A	POS 26	D41839J	W0321	ALL
D41809P		AP1800B	POS 09	D41809J	W0018	ALL

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W2650

Page 1 End

May 11/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W2661</b>	<b>SB2</b>	<b>STBY ELEX PWR FROM P6 TO E1.</b>				
D46051P		AE0103A	POS 03	D46051J	W0131	ALL
D46069P		AP0600B	POS 20	D46069J	W0044	ALL

---

**MASTER BUNDLE LIST**

D280A103

**91-21-13**  
Section W2660  
Page 1 End  
May 11/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W2702</b>	<b>AN2</b>	<b>P5 OVHD PANEL TO EE BAY (E2-1) AN2</b>				
D40564P D00446		AE0201A N00024	POS 05 P005-04/ /	D40564J	W0212	ALL ALL

---

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W2700  
Page 1 End  
May 11/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W2737</b>		<b>P6 TO M2554 SPEEDBRAKE RETRACT ACTUATOR</b>				
D11841			201/210/L002			YC001-YC010, YC012-YC030



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W2801</b>	<b>NA2</b>	<b>ACARS CONTROL PANEL</b>				
D43319P		AE0303A	POS 23	D43319J	W0331	YC001-YC030, YK901-YM670
D43319P		AE0303A	POS 23	D43319J		YC031-YC050
<b>W2805</b>	<b>NN2</b>	<b>ACMS PRINTER</b>				
D43215P		AE0302A	POS 09	D43215J	W0321	ALL
D02649		M02195	P008-54/ /			YK901-YM670
D02649		P008-54				YC001-YC050

### MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W2800

Page 1 End

May 11/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W2873</b>	<b>NB2</b>	<b>FROM FMC TO CONTROL STAND MCDU - NO.2</b>				
D08105J D02221		AE0502A P009-66	POS 09 P009-66/ /	D08105P	W0523	ALL ALL

---

**MASTER BUNDLE LIST**

D280A103

**91-21-13**

Section W2870

Page 1 End

May 11/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W2889</b>	<b>NA2</b>	<b>FROM FMC TO CONTROL STAND MCDU - NO.1</b>				
D05925J		AE0502A	POS 22	D05925P	W0521	YC012-YM670
D05925J		AE0502A	POS 23	D05925P	W0521	YC001-YC011
D02181		P009-65	P009-65/ /			ALL

---

## MASTER BUNDLE LIST

D280A103

**91-21-13**  
Section W2880  
Page 1 End  
May 11/2009





Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3005</b>	<b>NN2</b>	<b>PSU MOUNTED LCD VIDEO MONITOR NO. 3 TO VDU IN CLUSTER NO. 1</b>				
D10205		M01934	450/295/L035			YC001-YC050
D10345		M02003	376/270/L032			YC001-YC050
D10347		M02003	376/270/L032			YC001-YC050
<b>W3007</b>	<b>NN2</b>	<b>PSU MOUNTED LCD VIDEO MONITOR NO. 4 TO VDU IN CLUSTER NO. 1</b>				
D10207		M01934	450/295/L035			YC001-YC050
D10351		M2004				YC001-YC050
D10353		M2004				YC001-YC050
<b>W3009</b>	<b>NN2</b>	<b>PSU MOUNTED LCD VIDEO MONITOR NO. 5 TO VDU IN CLUSTER NO. 1</b>				
D10213		M01935	450/295/L035			YC001-YC050
D10357		M2005				YC001-YC050
D10359		M2005				YC001-YC050

MASTER BUNDLE LIST

D280A103

91-21-13

Section W3000

Page 1 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3011</b>	<b>NN2</b>	<b>PSU MOUNTED LCD VIDEO MONITOR NO. 6 TO VDU IN CLUSTER NO. 1</b>				
D10215		M01935	450/295/L035			YC001-YC050
D10363		M2006				YC001-YC050
D10365		M2006				YC001-YC050
<b>W3017</b>	<b>NN2</b>	<b>PSU MOUNTED LCD VIDEO MONITOR NO.9 TO VDU IN CLUSTER NO.2</b>				
D10237		M01938	550/295/L035			YC001-YC050
D10381		M2009				YC001-YC050
D10383		M2009				YC001-YC050
<b>W3019</b>	<b>NN2</b>	<b>PSU MOUNTED LCD VIDEO MONITOR NO.10 TO VDU IN CLUSTER NO. 2</b>				
D10239		M01938	550/295/L035			YC001-YC050
D10387		M2010				YC001-YC050
D10389		M2010				YC001-YC050

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W3010

Page 1 End

May 11/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3021</b>	<b>NN2</b>	<b>PSU MOUNTED LCD VIDEO MONITOR NO.11 TO VDU IN CLUSTER NO.2</b>				
I D10245		M01939	550/295/L035			YC001-YC050
D10393		M2011				YC001-YC050
D10395		M2011				YC001-YC050
<b>W3023</b>	<b>NN2</b>	<b>PSU MOUNTED LCD VIDEO MONITOR NO.12 TO VDU IN CLUSTER NO.2</b>				
I D10247		M01939	550/295/L035			YC001-YC050
D10399		M2012				YC001-YC050
D10401		M2012				YC001-YC050
<b>W3029</b>	<b>NN2</b>	<b>PSU MOUNTED LCD VIDEO MONITOR NO.15 TO VDU IN CLUSTER NO.2</b>				
D10253		M1940				YC001-YC050
D10417		M2015				YC001-YC050
D10419		M2015				YC001-YC050

MASTER BUNDLE LIST

D280A103

91-21-13

Section W3020

Page 1 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3031</b>	<b>NN2</b>	<b>PSU MOUNTED LCD VIDEO MONITOR NO.16 TO VDU IN CLUSTER NO.2</b>				
D10255		M1940				YC001-YC050
D10423		M2016				YC001-YC050
D10425		M2016				YC001-YC050
<b>W3033</b>	<b>NN2</b>	<b>PSU MOUNTED LCD VIDEO MONITOR NO.17 TO VDU IN CLUSTER NO.3</b>				
I D10269		M01942	695/295/L035			YC001-YC050
D10429		M2017				YC001-YC050
D10431		M2017				YC001-YC050
<b>W3035</b>	<b>NN2</b>	<b>PSU MOUNTED LCD VIDEO MONITOR NO.18 TO VDU IN CLUSTER NO.3</b>				
I D10271		M01942	695/295/L035			YC001-YC050
D10435		M2018				YC001-YC050
D10437		M2018				YC001-YC050

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W3030

Page 1 End

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3041</b>	<b>NN2</b>	<b>PSU MOUNTED LCD VIDEO MONITOR NO.21 TO VDU IN CLUSTER NO.3</b>				
D10277		M01943	710/295/L035			YC001-YC050
D10453		M2021				YC001-YC050
D10455		M2021				YC001-YC050
<b>W3043</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR TO VDU IN CLUSTER 3.</b>				
D10279		M01943	710/295/L035			YC001-YC050
D10459		M2022				YC001-YC050
D10461		M2022				YC001-YC050
<b>W3045</b>	<b>NN2</b>	<b>PSU MOUNTED LCD VIDEO MONITOR NO.23 TO VDU IN CLUSTER NO.3</b>				
D10285		M1944				YC001-YC050
D10465		M2023				YC001-YC050
D10467		M2023				YC001-YC050
<b>W3047</b>	<b>NN2</b>	<b>PSU MOUNTED LCD VIDEO MONITOR NO.24 TO VDU IN CLUSTER NO.3</b>				
D10287		M1944				YC001-YC050
D10471		M2024				YC001-YC050
D10473		M2024				YC001-YC050

MASTER BUNDLE LIST

D280A103



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3053</b>	<b>NN2</b>	<b>PSU MOUNTED LCD VIDEO MONITOR NO.27 TO VDU IN CLUSTER NO.4</b>				
D10301		M01946	777/295/L035			YC001-YC050
D10489		M2027				YC001-YC050
D10491		M2027				YC001-YC050
<b>W3055</b>	<b>NN2</b>	<b>PSU MOUNTED LCD VIDEO MONITOR NO.28 TO VDU IN CLUSTER NO.4</b>				
D10303		M01946	777/295/L035			YC001-YC050
D10495		M2028				YC001-YC050
D10497		M2028				YC001-YC050
<b>W3057</b>	<b>NN2</b>	<b>PSU MOUNTED LCD VIDEO MONITOR NO.29 TO VDU IN CLUSTER NO.4</b>				
D10309		M01947	727J+10/295/L035			YC001-YC050
D10501		M02029	828/270/L032			YC001-YC050
D10503		M02029	828/270/L032			YC001-YC050
<b>W3058</b>	<b>RN2</b>	<b>ATT PANEL SHIP WIRE BUNDLE</b>				
D07174J				D07174P	W4248	YC001-YC030, YK901-YM670
D40020P				D40020J	W0142	YC001-YC030, YK901-YM670
D40026P				D40026J	W0152	YC001-YC030, YK901-YM670
D40052P				D40052J	W3146	YC001-YC030, YK901-YM670
D40148P				D40148J	W5146	YC001-YC030, YK901-YM670
D40090J		AB0288	POS 05	D40090P	W3144	YC001-YC030, YK901-YM670
D40054J		AB0340A	POS 01	D40054P	W5142	YC001-YC030, YK901-YM670
D40170J		AB0340A	POS 04	D40170P	W2218	YC001-YC030, YK901-YM670
D40050J		AB0340A	POS 05	D40050P	W6242	YC001-YC030, YK901-YM670
D42008P		AB0340B	POS 02	D42008J	W4146	YC001-YC030, YK901-YM670
D40226P		AP0600A	POS 05	D40226J	W0044	YC001-YC030, YK901-YM670
D11064		M01415	//			YC001-YC030, YK901-YM670

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W3050

Page 1

May 11/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3058</b>	<b>RN2</b>	<b>ATT PANEL SHIP WIRE BUNDLE (continued)</b>				
D11068		M01415	//			YC001-YC030, YK901-YM670
D12416		M01415	//			YC001-YC030, YK901-YM670
D11066		M01418	948/236/L014			YC001-YC030, YK901-YM670
D11070		M01418	948/236/L014			YC001-YC030, YK901-YM670
<b>W3059</b>	<b>NN2</b>	<b>PSU MOUNTED LCD VIDEO MONITOR NO.30 TO VDU IN CLUSTER NO.4</b>				
D10311		M01947	727J+10/295/L035			YC001-YC050
D10507		M02030	828/270/R043			YC001-YC050
D10509		M02030	828/270/R043			YC001-YC050



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3061</b>	<b>NN2</b>	<b>PSU MOUNTED LCD VIDEO MONITOR NO.31 TO VDU IN CLUSTER NO.4</b>				
D10317		M1948				YC001-YC050
D10513		M2031				YC001-YC050
D10515		M2031				YC001-YC050
<b>W3063</b>	<b>NN2</b>	<b>PSU MOUNTED LCD VIDEO MONITOR NO.32 TO VDU IN CLUSTER NO.4</b>				
D10319		M1948				YC001-YC050
D10519		M2032				YC001-YC050
D10521		M2032				YC001-YC050





Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3071</b>	<b>NN2</b>	<b>VIDEO - VDU CLUSTER 1 TO VDU CLUSTER 2</b>				
D45269J				D45269P	W3589	YC001-YC030
D10233		M01938	550/295/L035			YC001-YC030
D10211		M1935				YC001-YC030
<b>W3073</b>	<b>NN2</b>	<b>VIDEO - VDU CLUSTER 3 TO VDU CLUSTER 4</b>				
D45273J				D45273P	W3589	YC001-YC030
D10297		M01946	777/295/L035			YC001-YC030
D10283		M1944				YC001-YC030

MASTER BUNDLE LIST

D280A103



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3141</b>	<b>NA2</b>	<b>GLIDE SLOPE ANT LEFT - STA 178 TO E1-2 SHELF</b>				
D03317				D02621		ALL
D04025J		AE0102B	POS 07	D04025P	W0121	YC001-YC030, YK901-YM670
D04025J		AE0102B	POS 07	D04025P		YC031-YC050
<b>W3142</b>	<b>LN2</b>	<b>EMERGENCY EXIT LIGHT - LEFT</b>				
D07198J				D07198P	W4142	YM643-YM652
D11088				D11344		YC001-YC030
D11090				D11344		YM643-YM652
D11096				D11344		YM643-YM652
D11100				D11344		YC001-YC030, YK901-YM652
D11326				D11344		YC001-YC030, YK901-YM652
D11330				D11344		YM643-YM652
D11334				D11344		YC001-YC030, YK901-YM652
D11338				D11344		YC001-YC030, YK901-YM652
D12016				D11344		YC001-YC030
D12034				D11344		YC001-YC030, YK901-YL430
D12038				D11344		YC001-YC030, YK901-YL430
D12046				D11344		YC001-YC030, YK901-YL430
D12048				D11344		YC001-YC030, YK901-YL430
D12062				D11344		YC001-YC030, YK901-YL430
D12350				D12352		YK912-YK917, YK919-YL430, YM652
D40009J				D40009P	W3309	YC001-YC030, YK901-YM652
D40044P				D40044J	W0452	YC001-YC030, YK901-YM652
D40086P				D40086J	W4142	YC001-YC030
D40098J				D40098P	W4142	YC001-YC030, YK901-YL430

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W3140

Page 1

May 11/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3142</b>	<b>LN2</b>	<b>EMERGENCY EXIT LIGHT - LEFT (continued)</b>				
D40100J				D40100P	W4142	YC001-YC030, YK901-YM652
D46438P				D46438J	W4142	YC001-YC030, YK901-YL430
D46440P				D46440J	W4142	YC001-YC030, YK901-YM652
D12350			360/284/L031			YC001-YC030, YK901-YK911, YK918, YM643-YM651
D40196J		AB0340A	POS 03	D40196P	W2114	YC001-YC030, YK901-YM652
D40096P		AB0340B	POS 01	D40096J	W4142	YC001-YC030, YK901-YM652
D11078		L00006	651/227/L074			YM643-YM652
D12036		L00006	651/227/L074			YC001-YC030, YK901-YL430
D11082		L00547	727F+11/169/L051			YC001-YC030, YK901-YM652
D11080		L00548	727F+11/170/R052			YC001-YC030, YK901-YM652
D11074		L00731	365/226/L072			YC001-YC030, YK901-YM652
D11086		L00732	1000/242/L060			YC001-YC030, YK901-YM652
D12446		L00751	MULTI/ /			YC001-YC030, YK901-YL430
D12452		L00751	MULTI/ /			YC001-YC030, YK901-YM652
D12028		L01070	612/293/L019			YC001-YC030, YK901-YK910, YK918, YL421-YL426
D12030		L01070	612/293/L019			YM643-YM652
D13978		L01070	612/293/L019			YK911-YK917, YK919-YL401, YL427-YL430
D03670		L01189	614/224/L062			YC001-YC030, YK901-YM652
D03672		L01189	614/224/L062			YC001-YC030, YK901-YM652

MASTER BUNDLE LIST

D280A103

91-21-13

Section W3140

Page 2

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3142</b>	<b>LN2</b>	<b>EMERGENCY EXIT LIGHT - LEFT (continued)</b>				
D10082		L01190	993/243/L053			YC001-YC030, YK901-YM652
D10084		L01190	993/243/L053			YC001-YC030, YK901-YM652
D12068		L01208	576/234/L062			YC001-YC030, YK901-YL430
D12072		L01208	576/234/L062			YC001-YC030, YK901-YL430
D12032		L01210	608/227/L074			YC001-YC030, YK901-YL430
D12164		L01316	727A+8/289/0000			YC001-YC030
D12396		L01359	642/224/L070			YM643-YM652
D12398		L01359	642/224/L070			YM643-YM652
D12434		L01359	642/224/L070			YC001-YC030, YK901-YL430
D12436		L01359	642/224/L070			YC001-YC030, YK901-YL430
D12442		L01365	MULTI/ /			YC001-YC030, YK901-YL430
D12444		L01365	MULTI/ /			YC001-YC030, YK901-YL430
D12448		L01365	MULTI/ /			YC001-YC030, YK901-YM652
D12450		L01365	MULTI/ /			YC001-YC030, YK901-YM652
D12912		L01414	727I+3/293/L019			YK901-YL430
D13118		L01429	727E+18/293/L019			YM643-YM652
D12052		M01386	490/208/L068			YK901-YM652
D10138		M01387	500H/208/L068			YC001-YC030
D10130		M01388	723B/208/L068			YC001-YC030
D10132		M01389	783/208/L068			YC001-YC030
D13124		M01389	783/208/L068			YK901-YM652
D10712		M01668	603/212/L067			YM643-YM652
D10716		M01670	727C+13/212/L068			YC001-YC030, YK901-YM652
D10746		M01673	952/290/L014			YC001-YC030, YK901-YM652
D12008		M01694	565/213/L068			YC001-YC030, YK901-YL430

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W3140

Page 3

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3142</b>	<b>LN2</b>	<b>EMERGENCY EXIT LIGHT - LEFT (continued)</b>				
D12552		M02176	617/251/L066			YC001-YC030, YK901-YM652
D12554		M02176	617/251/L066			YC001-YC030, YK901-YM652
D12576		M02182	579/251/L066			YC001-YC030, YK901-YL430
D12578		M02182	579/251/L066			YC001-YC030, YK901-YL430
D12664		M02204	638/251/L066			YC001-YC030, YK901-YM652
D12666		M02204	638/251/L066			YC001-YC030, YK901-YM652
D12668		M02205	581/229/L069			YC001-YC030, YK901-YM652
D12670		M02205	581/229/L069			YC001-YC030, YK901-YM652
D12672		M02206	639/229/L069			YC001-YC030, YK901-YM652
D12674		M02206	639/229/L069			YC001-YC030, YK901-YM652
D12700		M02213	600/251/L066			YC001-YC030, YK901-YL430
D12702		M02213	600/251/L066			YC001-YC030, YK901-YL430
D12704		M02214	543/229/L069			YC001-YC030, YK901-YL430
D12706		M02214	543/229/L069			YC001-YC030, YK901-YL430
D12708		M02215	560/229/L069			YC001-YC030, YK901-YL430
D12710		M02215	560/229/L069			YC001-YC030, YK901-YL430
D12802		M02253				YK901-YM652
D12828		M02267	570/208/L009			YC001-YC030, YK901-YL430
D13018		M02335	500C+7/213/L067			YK901-YM652
D13262		M02399				YM643-YM652
D13258		M02400				YK901-YM652

MASTER BUNDLE LIST

D280A103

91-21-13

Section W3140

Page 4

May 11/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3143</b>	<b>NB2</b>	<b>GLIDE SLOPE ANT RIGHT - STA 178 TO E1-3 SHELF</b>				
D03319				D02625		ALL
D04027J		AE0102B	POS 06	D04027P	W0141	ALL
<b>W3144</b>	<b>LN2*</b>	<b>P18 TO FWD AND AFT LAVATORY</b>				
D03740				D10162		YM643-YM670
D07170J				D07170P	W4142	ALL
D07172J				D07172P	W7359	ALL
D07176P				D07176J	W3150	ALL
D11722				D11724		YK912-YK917, YK919-YL430, YM652
D40116J				D40116P	W3158	ALL
D40150P				D40150J	W5146	ALL
D40184P				D40184J	W4146	YC001-YC030, YK901-YM670
D40184P				D40184J		YC031-YC050
D40186P				D40186J	W3146	YC001-YC030, YK901-YM670
D40186P				D40186J		YC031-YC050
D40270J				D40270P	W3150	ALL
D40272J				D40272P	W4250	ALL
D03802			1000/295/R024			ALL
D11722			368/289/L032			ALL
D40090P		AB0288	POS 05	D40090J	W3058	YC001-YK911, YK918, YM643-YM651, YM653-YM670
D40090P		AB0288	POS 05	D40090J		YC001-YC030, YK901-YM670
D40216P		AB0340A	POS 02	D40216J	W3158	ALL
D40349J		AB0358	POS 09	D40349P	W3805	YK907-YM670
D40220P		AP1800A	POS 06	D40220J	W0018	ALL
D03732		M01415	//			ALL
D03738		M01418	948/236/L014			ALL
D03740		M01419	//			YC001-YL430
D10770		M01681	975/297/R010			ALL
<b>W3146</b>	<b>LN2*</b>	<b>FLUORESCENT LIGHTING - CEILING LEFT &amp; RIGHT</b>				
D07186P				D07186J	W4142	YK901-YM670
D40038P				D40038J	W0154	YC001-YC030, YK901-YM670

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W3140

Page 5

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3146</b>	<b>LN2*</b>	<b>FLUORESCENT LIGHTING - CEILING LEFT &amp; RIGHT (continued)</b>				
D40052J				D40052P	W3058	YC001-YC030, YK901-YM670
D40110J				D40110P	W3158	YC001-YC030, YK901-YM670
D40112J				D40112P	W3158	YC001-YC030
D40114J				D40114P	W3158	YC001-YC030
D40186J				D40186P	W3144	YC001-YC030, YK901-YM670
D40984J				D40984P	W3158	YK901-YL430
D40992J				D40992P	W3158	YM643-YM670
D40994J				D40994P	W3158	YK901-YM670
D42010J				D42010P	W3158	YK901-YL430
D11900			436/289/L032			YC001-YC030, YK901-YM670
D11970			495/289/L032			YC001-YC030, YK901-YL430
D11902			500+17/289/L033			YM643-YM670
D11972			500C+11/289/L032			YC001-YC030, YK901-YL430
D11904			500D+17/289/L032			YM643-YM670
D11974			500G+3/289/L032			YC001-YC030, YK901-YL430
D11976			539/289/L032			YC001-YC030, YK901-YL430
D11906			602/289/L032			YM643-YM670
D11978			618/289/L032			YC001-YC030, YK901-YL430
D11908			681/289/L032			YM643-YM670
D11980			698/289/L032			YC001-YC030, YK901-YL430
D11910			727A+14/289/L033			YM643-YM670
D11982			727B+11/289/L032			YC001-YC030, YK901-YL430
D11912			727E+10/289/L032			YM643-YM670
D11984			727F+4/289/L032			YC001-YC030, YK901-YL430
D11986			727I+18/289/L032			YC001-YC030, YK901-YL430
D11914			794/289/L032			YC001-YC030, YK901-YM670

MASTER BUNDLE LIST

D280A103

91-21-13

Section W3140

Page 6

May 11/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3146</b> D11916	<b>LN2*</b>	<b>FLUORESCENT LIGHTING - CEILING LEFT &amp; RIGHT (continued)</b>	855/289/L031			YC001-YC030, YK901-YM670

---

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W3140  
Page 7 End  
May 11/2009





Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3150</b>	<b>LN2*</b>	<b>P18 AND AB0340A DISC TO LEFT PSU'S</b>				
D07176J				D07176P	W3144	ALL
D40104J				D40104P	W3158	ALL
D40106J				D40106P	W3158	ALL
D40270P				D40270J	W3144	ALL
D11500			367/272/L055			ALL
D11502			380/274/L051			ALL
D11504			400/274/L051			ALL
D11506			430/274/L051			ALL
D11508			450/274/L051			ALL
D11510			470/274/L051			ALL
D11512			490/274/L051			ALL
D11514			500+10/274/L051			ALL
D11516			500A+12/274/L051			ALL
D11518			500B+12/274/L051			ALL
D11520			500C+12/274/L051			ALL
D11522			500D+12/274/L051			YC001-YL430
D11524			500E+16/274/L051			YC001-YL430
D11526			500F+14/274/L051			YC001-YL430
D11528			500G+10/274/L051			YC001-YL430
█ D11530			500H+10/274/L051			ALL
█ D11532			520/274/L051			ALL
D11536			565/274/L051			ALL
█ D11534			594/274/L051			ALL
D11540			611/274/L051			ALL
█ D11542			630/274/L051			ALL
█ D11538			650/274/L051			ALL
D11546			680/274/L051			ALL
█ D11548			700/274/L051			ALL
█ D11550			718/274/L051			ALL
D11552			727+10/274/L051			ALL
█ D11544			727+19/272/L057			ALL
█ D11554			727A+10/274/L051			YC001-YL430
D11556			727B+10/274/L051			YC001-YL430
D11558			727C+10/274/L051			YC001-YL430
D11560			727D+10/274/L051			YC001-YL430
D11562			727E+10/274/L051			YC001-YL430
█ D11566			727G+10/274/L051			ALL
█ D11568			727H+10/274/L051			ALL
D11570			727I+16/272/L054			ALL
█ D11572			727J+10/274/L051			ALL

MASTER BUNDLE LIST

D280A103

91-21-13

Section W3150

Page 1

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3150</b>	<b>LN2*</b>	<b>P18 AND AB0340A DISC TO LEFT PSU'S (continued)</b>				
D11574			763/272/L054			YC001-YL430
D11564			780/274/L051			ALL
D11576			785/274/L051			ALL
D11580			822/274/L051			YC001-YL430
D11582			842/274/L051			YC001-YL430
D11584			865/274/L051			YC001-YL430
D11586			890/274/L051			YC001-YL430
D11588			924/274/L051			YC001-YL430
D11590			937/274/L051			YC001-YL430
D11578			943/277/L050			ALL
D40108P		AB0340A	POS 06	D40108J	W3158	ALL
D40198P		AP1800A	POS 01	D40198J	W0018	ALL
<b>W3154</b>	<b>LN1*</b>	<b>P91 TO AFT GALLEY POWER</b>				
D10076			1000/295/R024			YK901-YM670
D03800			998/295/R025			ALL
D11430		P0091				ALL
<b>W3158</b>	<b>LN1*</b>	<b>AB0340A DISCONNECT TO LEFT AFT OVERHEAD</b>				
D40104P				D40104J	W3150	ALL
D40106P				D40106J	W3150	ALL
D40110P				D40110J	W3146	YC001-YC030, YK901-YM670
D40110P				D40110J		YC031-YC050
D40112P				D40112J	W3146	YC001-YC030
D40112P				D40112J		YC031-YC050
D40114P				D40114J	W3146	YC001-YC030
D40114P				D40114J		YC031-YC050
D40116P				D40116J	W3144	ALL
D40762P				D40762J	W3162	YC001-YC050
D40762P				D40762J	W3192	YK901-YM670
D40764P				D40764J	W3164	YC001-YC050
D40764P				D40764J	W3194	YK901-YM670
D40984P				D40984J	W3146	YK901-YL430
D40990P				D40990J	W4146	YK901-YM670
D40992P				D40992J	W3146	YM643-YM670
D40994P				D40994J	W3146	YK901-YM670
D40996P				D40996J	W4146	YK901-YL430

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W3150

Page 2

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3158</b>	<b>LN1*</b>	<b>AB0340A DISCONNECT TO LEFT AFT OVERHEAD (continued)</b>				
D42002P				D42002J	W4146	YC001-YC030, YK901-YM670
D42002P				D42002J		YC031-YC050
D42004P				D42004J	W4146	YC001-YC030, YK901-YM670
D42004P				D42004J		YC031-YC050
D42006P				D42006J	W4146	YC001-YC030
D42006P				D42006J		YC031-YC050
D42010P				D42010J	W3146	YK901-YL430
D40216J		AB0340A	POS 02	D40216P	W3144	ALL
D40108J		AB0340A	POS 06	D40108P	W3150	ALL
D40102J		AB0340A	POS 09	D40102P	W5142	ALL

MASTER BUNDLE LIST

D280A103

91-21-13

Section W3150

Page 3 End

May 11/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3162</b>	<b>LN1</b>	<b>NS/FSB SIGN-VIDEO PANEL, FORWARD-LEFT</b>				
D40762J				D40762P	W3158	YC001-YC050
I D10349		M02003	376/270/L032			YC001-YC050
I D10361		M02005	478/270/L032			YC001-YC050
I D10385		M02009	500C/270/R032			YC001-YC050
D10397		M02011	500G+7/270/L042			YC001-YC050
D10421		M02015	550/270/L032			YC001-YC050
<b>W3164</b>	<b>LN1</b>	<b>NS/FSB SIGN-VIDEO PANEL, AFT-LEFT</b>				
D40764J				D40764P	W3158	YC001-YC050
D10517			890/275/L017			YC001-YC050
D10433		M02017	679/270/L032			YC001-YC050
D10457		M02021	727B+3/270/L032			YC001-YC050
D10469		M02023	727F+7/270/L032			YC001-YC050
I D10493		M02027	799/270/L042			YC001-YC050
D10505		M02029	828/270/L032			YC001-YC050

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W3160

Page 1 End

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3170</b>	<b>LA2*</b>	<b>AB0420A TO E2-2 SHELF</b>				
D40734P		AB0420A	POS 01	D40734J	W5170	ALL
D40736P		AB0420A	POS 02	D40736J	W5172	ALL
D40126P		AE0202A	POS 27	D40126J	W0220	YC001-YC030, YK901-YM670
D40126P		AE0202A	POS 27	D40126J		YC031-YC050
D49994P		AE0301A	POS 14	D49994J	W0311	YC001-YC030, YK901-YM670
D49994P		AE0301A	POS 14	D49994J		YC031-YC050

MASTER BUNDLE LIST

D280A103

91-21-13

Section W3170

Page 1 End

May 11/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3192</b>	<b>LN1</b>	<b>NS/FSB SIGN-VIDEO PANEL, FORWARD-LEFT</b>				
D40762J				D40762P	W3158	YK901-YM670
D12011			375/273/L049			YK901-YM670
D12023			443/270/L042			YK901-YM670
D12035			500/270/L042			YK901-YM670
D12047			500A+8/270/L042			YK901-YL430
D12059			500C/270/L042			YK901-YM670
D12071			500G+6/270/L042			YK901-YM670
D12083			557/270/L042			YK901-YL430
<b>W3194</b>	<b>LN1</b>	<b>NS/FSB SIGN-VIDEO PANEL, AFT-LEFT</b>				
D40764J				D40764P	W3158	YK901-YM670
D12095			670/270/L042			YK901-YM670
D12107			727+18/270/L042			YK901-YM670
D12119			727C+18/270/L042			YK901-YL430
D12131			727G+4/270/L042			YK901-YM670
D12143			830/270/L042			YK901-YM670
D12155			830/270/L042			YK901-YL430

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W3190

Page 1 End

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3245</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR (STA 350L TO STA 400L) TO VDU IN TRAY 1 (-700)</b>				
I D12009			375/270/L040			YK901-YM670
I D12007			382/273/L049			YK901-YM670
D10205		VDU				YK901-YM670
<b>W3249</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR (STA 350R TO STA 400R) TO VDU IN TRAY 1 (-800)</b>				
D12013			375/270/R040			YK901-YM670
D12015			375/270/R040			YK901-YM670
D10207		VDU				YK901-YM670

MASTER BUNDLE LIST

D280A103

91-21-13

Section W3240

Page 1 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3251</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR (STA 396L TO STA 490L) TO VDU IN TRAY 1 (-800)</b>				
D12019			445/270/L035			YK901-YM670
D12021			445/270/L035			YK901-YM670
D10213		VDU				YK901-YM670
<b>W3253</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR (STA 396R TO 490R) TO VDU IN TRAY 1 (-800)</b>				
D12025			445/270/R035			YK901-YM670
D12027			445/270/R035			YK901-YM670
D10215		VDU				YK901-YM670
<b>W3255</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR (STA 455L TO STA 500B+1L) TO VDU IN TRAY 1(-700)</b>				
D12031			500/270/L035			YK901-YM670
D12033			500/270/L035			YK901-YM670
D10221		VDU				YK901-YM670
<b>W3257</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR (STA 455R TO STA 500B+1R) TO VDU IN TRAY 1(-800)</b>				
D12037			500/270/R040			YK901-YM670
D12039			500/270/R040			YK901-YM670
D10223		VDU				YK901-YM670
<b>W3259</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR(STA 500L TO STA 500B+16L) TO VDU IN TRAY 1(-800)</b>				
D12043			500A+10/270/L035			YK901-YL430
D12045			500A+10/270/L035			YK901-YL430
D10229		VDU				YK901-YL430

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W3250

Page 1 End

May 11/2009





Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3261</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR(STA 500R TO STA 500B+16R) TO VDU IN TRAY 1(-800)</b>				
D12049			500A+10/270/R040			YK901-YL430
D12051			500A+10/270/R040			YK901-YL430
D10231		VDU				YK901-YL430
<b>I W3263</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR(STA 500A+18L TO 500E+10L) TO VDU IN TRAY 2(-800)</b>				
D12057			500C+15/270/L040			YK901-YM670
D12055			500C/270/L040			YK901-YM670
D10237		VDU				YK901-YM670
<b>W3265</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR(STA 500A+18R TO 500E+10R) TO VDU IN TRAY 2(-800)</b>				
D12061			500C+15/270/R040			YK901-YM670
D12063			500C+15/270/R040			YK901-YM670
D10239		VDU				YK901-YM670
<b>W3267</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR(STA 500E+20L TO 500H+14L) TO VDU IN TRAY 2(-800)</b>				
D12067			563/270/L040			YK901-YM670
D12069			563/270/L040			YK901-YM670
D10245		VDU				YK901-YM670
<b>W3269</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR(STA 500E+20R TO 500H+14R) TO VDU IN TRAY 2(-800)</b>				
D12073			563/270/R040			YK901-YM670
D12075			563/270/R040			YK901-YM670
D10247		VDU				YK901-YM670

MASTER BUNDLE LIST

D280A103

91-21-13

Section W3260

Page 1 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3271</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR (STA 532L TO 582L)TO VDU IN TRAY 2(-800)</b>				
D12079			555/270/L035			YK901-YL430
D12081			555/270/L035			YK901-YL430
D10253		VDU				YK901-YL430
<b>W3273</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR (STA 532R TO 582R) TO VDU IN TRAY 2(-800)</b>				
D12085			555/270/R040			YK901-YL430
D12087			555/270/R040			YK901-YL430
D10255		VDU				YK901-YL430
<b>W3275</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR (STA 650L TO 690L) TO VDU IN TRAY 3 (-700)</b>				
D12091			670/270/L040			YK901-YM670
D12093			670/270/L040			YK901-YM670
D10269		VDU				YK901-YM670
<b>W3277</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR (STA 652R TO 688R) TO VDU IN TRAY 3(-800)</b>				
D12097			670/270/R040			YK901-YM670
D12099			670/270/R040			YK901-YM670
D10271		VDU				YK901-YM670
<b>W3279</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR (STA 727L TO 727C+10L) TO VDU IN TRAY 3 (-700)</b>				
I D12103			727+19/273/L054			YK901-YM670
I D12105			727A+15/270/L040			YK901-YM670
D10277		VDU				YK901-YM670

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W3270

Page 1 End

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3281</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR (STA 727R TO 727C+10R) TO VDU IN TRAY 3 (-700)</b>				
D12109			727+19/273/R055			YK901-YM670
D12111			727A+15/270/R040			YK901-YM670
D10279		VDU				YK901-YM670
<b>W3283</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR (STA 727B+5L TO 727E+7L) TO VDU IN TRAY 3(-800)</b>				
D12115			727C+19/273/L054			YK901-YL430
D12117			727C+19/273/L054			YK901-YL430
D10285		VDU				YK901-YL430
<b>W3285</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR (STA 727B+5R TO 727E+7R) TO VDU IN TRAY 3(-800)</b>				
D12121			727C+19/273/R055			YK901-YL430
D12123			727C+19/273/R055			YK901-YL430
D10287		VDU				YK901-YL430
<b>W3287</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR (STA 727DL TO 780L)TO VDU IN TRAY 4 (-700)</b>				
I D12127			727G+5/270/L040			YK901-YM670
D12129			727G+5/270/L040			YK901-YM670
D10301		VDU				YK901-YM670
<b>W3289</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR (STA 727E+3R TO 727I+5R)TO VDU IN TRAY 4(-800)</b>				
I D12133			727E+17/270/R040			YK901-YM670
I D12135			727G+5/270/R040			YK901-YM670
D10303		VDU				YK901-YM670

MASTER BUNDLE LIST

D280A103

91-21-13

Section W3280

Page 1 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3291</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR (STA 727I+3L TO 800L) TO VDU IN TRAY 4(-800)</b>				
D12139			755/270/L040			YK901-YM670
D12141			755/270/L040			YK901-YM670
D10309		VDU				YK901-YM670
<b>W3293</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR (STA 790R TO 870R) TO VDU IN TRAY 4 (-700)</b>				
D12145			755/270/R040			YK901-YM670
D12147			755/270/R040			YK901-YM670
D10311		VDU				YK901-YM670
<b>W3295</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR (STA 790L TO STA 870L) TO VDU IN TRAY 4(-800)</b>				
D12151			830/270/L040			YK901-YL430
D12153			830/270/L040			YK901-YL430
D10317		VDU				YK901-YL430
<b>W3297</b>	<b>NN2</b>	<b>PSU LCD VIDEO MONITOR (STA 790R TO STA 870R) TO VDU IN TRAY 4(-800)</b>				
D12157			830/270/R040			YK901-YL430
D12159			830/270/R040			YK901-YL430
D10319		VDU				YK901-YL430

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W3290

Page 1 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3307</b>	<b>NN2</b>	<b>INPH, ELEX PNL AND FWD ATTD PNL</b>				
D41337P		AE0103A	POS 05	D41337J	W0131	ALL
D48337P		AE0801B	POS 08	D48337J	W0813	YC007-YC050
D48337P		AE0801C	POS 02	D48337J	W0813	YC001-YC006
D01507		M01276	300 / /			YK901-YM670
D10019		M01415	//			ALL
<b>W3309</b>	<b>NN2</b>	<b>ATTENDANTS SPEAKERS</b>				
D40005P				D40005J	W4142	ALL
D40007P				D40007J	W4142	ALL
D40009P				D40009J	W3142	YC001-YC030, YK901-YM652
D40009P				D40009J		YC031-YC050, YM653-YM670
D44139P		AE0401A	POS 27	D44139J	W0411	ALL

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W3300

Page 1 End

May 11/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3311</b>	<b>SN2</b>	<b>AFT ATTENDANTS HANDSET (P14)</b>				
D04181P		AE0103A	POS 21	D04181J	W0131	ALL
D10021		M01418	948/236/L014			ALL
D11173		M1419				YM643-YM670
<b>W3319</b>	<b>NB3</b>	<b>F/O AUDIO SEL PNL TO INPH</b>				
D07051		66-16842				YC001-YC050
D07055		66-16842				YC001-YC050
D07057		66-16842				YC001-YC050
D07059		66-16842				YC001-YC050
D07063		66-16842				YC001-YC050
D07023		6616842-19				YK901-YM670
D07035		6616842-19				YK901-YM670
D07039		6616842-19				YK901-YM670
D07051		6616842-19				YK901-YM670
D04331P		AE0401A	POS 20	D04331J	W0411	ALL
D00129		M00078	226/268/R020			ALL
D06043		M244				ALL
D06033		M295				ALL
D06029		M429				YC001-YC011
D07037		M429				YK901-YM670
D00137		P008-07	P008-07 / /			ALL
D06051		P23-7				ALL
D00135		P8-7				YK907-YM670

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W3310

Page 1 End

May 11/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3323</b>	<b>NA3</b>	<b>CAPT AUDIO SEL PNL TO INPH</b>				
D07041		66-16842				YC001-YC050
D07043		66-16842				YC001-YC050
D07045		66-16842				YC001-YC050
D07047		66-16842				YC001-YC050
D07049		66-16842				YC001-YC050
D07001		6616842-19				YK901-YM670
D07003		6616842-19				YK901-YM670
D07005		6616842-19				YK901-YM670
D07007		6616842-19				YK901-YM670
D07041		6616842-19				YK901-YM670
D04155P		AE0401A	POS 18	D04155J	W0411	ALL
D00127		M00077	226/268/L015			ALL
D06041		M00243	//			ALL
D00133		P008-06	P008-06//			ALL
D06031		P008-06	P008-06//			ALL
D06049		P21-7 OXY				ALL
D00131		P8-6				YK907-YM670
<b>W3327</b>	<b>NC3</b>	<b>F/OBS FLIGHT INPH</b>				
D04153P		AE0401A	POS 22	D04153J	W0411	ALL
D04151P		AP0600C	POS 06	D04151J	W0041	ALL
D06037		M00297				YC001-YC050, YK910-YK920
D00139		P005-15	P005-00//			ALL
D00141		P5-15				YK907-YM670
<b>W3329</b>	<b>NN2</b>	<b>VOICE RECORDER CONTROL PNL</b>				
D04157P		AE0401A	POS 28	D04157J	W0411	ALL
D00179		P005-07	P005-00//			ALL



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3335</b>	<b>NN2</b>	<b>AUDIO ENTERTAINMENT - RH SIDE - FWD</b>				
D08427J			438/218/R069	D08427P		YC001-YC050
D48335P		AE0801B	POS 13	D48335J	W0813	YC007-YC050
D48335P		AE0801C	POS 09	D48335J	W0813	YC001-YC006
<b>W3339</b>	<b>NN2</b>	<b>AUDIO ENTERTAINMENT - LH SIDE - FWD</b>				
D08429J			438/218/L069	D08429P		YC001-YC050
D48339P		AE0801B	POS 19	D48339J	W0813	YC007-YC050
D48339P		AE0801C	POS 10	D48339J	W0813	YC001-YC006

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W3330

Page 1 End

May 11/2009





Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3377</b>	<b>LA3</b>	<b>AUTOPILOT E1-1 TO AB1050L</b>				
D43397P		AB1050L	POS 03	D43397J	W3397	YC008-YM670
D43387J		AB1080	POS 02	D43387P	W3387	YC001-YC007
D04079P		AE0101A	POS 32	D04079J	W0111	ALL
D40025P		AE0302A	POS 10	D40025J	W0321	ALL
D01711		M00929	1158/258/R010			YC001-YC007
D01829		M00958	1160/274/R005			YC001-YC007
D01681		M01020	1165/278/L007			YC001-YC007
D02205		M01192	1164/268/L008			YC001-YC007
D11409		M02373	1085/264/L027			YC001-YC007
D01861		S00771	1165/282/L010			YC001-YC007
<b>W3379</b>	<b>RB3</b>	<b>AUTOPILOT E1-4 ELEV AND RUD PCU A SYSTEM - B</b>				
D43399P		AB1050R	POS 04	D43399J	W3399	YC008-YM670
D43389J		AB1080	POS 03	D43389P	W3389	YC001-YC007
D04081J		AE0104A	POS 03	D04081P	W0141	ALL
D40029P		AE0302A	POS 35	D40029J	W0321	ALL
D01679		M00929	1158/258/R010			YC001-YC007
D01677		M00958	1160/274/R005			YC001-YC007
D01687		M01022	1161/287/L007			YC001-YC007
D02207		M01193	1164/268/R008			YC001-YC007
D01857		S00773	1158/287/L010			YC001-YC007

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W3370

Page 1 End

May 11/2009



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3381</b>	<b>LE2</b>	<b>AUTOPILOT STAB TRIM CIRCUIT, E1-1 TO AB1050L</b>				
D44381P		AB1050L	POS 04	D44381J	W3391	YC008-YC030, YK901-YM670
D44381P		AB1050L	POS 04	D44381J		YC031-YC050
D04083P		AE0101A	POS 26	D04083J	W0111	ALL
D48901P		AP1800A	POS 02	D48901J	W0018	ALL
D00381		M01659	1076/264/R005			YC001-YC007
<b>W3387</b>	<b>NA2</b>	<b>AUTOPILOT AB0180, PRESS. SEAL TO ELEV AND RUD PCU A SYSTEM - A</b>				
D43387P		AB1080	POS 02	D43387J	W3377	YC001-YC007
D43387P		AB1080	POS 02	D43387J	W3397	YC008-YM670
D00291		M00175	1087/ /			ALL
<b>W3389</b>	<b>NB2</b>	<b>AUTOPILOT AB1080, PRESS. SEAL TO ELEV AND RUD PCU A SYSTEM - B</b>				
D43389P		AB1080	POS 03	D43389J	W3379	YC001-YC007
D43389P		AB1080	POS 03	D43389J	W3399	YC008-YM670
D10013		M1831				ALL

### MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W3380

Page 1 End

May 11/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3391</b>	<b>LE2</b>	<b>AUTOPILOT AB1050L, STAB TRIM CIRCUIT</b>				
D44381J		AB1050L	POS 04	D44381P	W3381	YC008-YC030, YK901-YM670
D00381		M01659	1076/264/R005			YC008-YC030, YK901-YM670
<b>W3393</b>	<b>LG2</b>	<b>MACH TRIM SERVO, AB1050L TO STA 1156</b>				
D43393J		AB1050L	POS 02	D43393P	W5301	YC008-YM670
D00545		M00414	1164/276/			YC008-YM670
<b>W3397</b>	<b>LA3</b>	<b>AUTOPILOT AB1050L TO ELEV AND RUD PCU SYSTEM - A</b>				
D43397J		AB1050L	POS 03	D43397P	W3377	YC008-YM670
D43387J		AB1080	POS 02	D43387P	W3387	YC008-YM670
D01711		M00929	1158/258/R010			YC008-YM670
D01829		M00958	1160/274/R005			YC008-YM670
D01681		M01020	1165/278/L007			YC008-YM670
D02205		M01192	1164/268/L008			YC008-YM670
D11409		M02373	1085/264/L027			YC008-YM670
D01861		S00771	1165/282/L010			YC008-YM670
<b>W3399</b>	<b>RB3</b>	<b>AUTOPILOT AB1050R ELEV AND STANDBY RUDDER PCU, SYSTEM - B</b>				
D43399J		AB1050R	POS 04	D43399P	W3379	YC008-YM670
D43389J		AB1080	POS 03	D43389P	W3389	YC008-YM670
D01679		M00929	1158/258/R010			YC008-YM670
D01677		M00958	1160/274/R005			YC008-YM670
D01687		M01022	1161/287/L007			YC008-YM670
D02207		M01193	1164/268/R008			YC008-YM670
D01857		S00773	1158/287/L010			YC008-YM670

MASTER BUNDLE LIST

D280A103

91-21-13

Section W3390

Page 1 End

May 11/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3419</b>	<b>NN2</b>	<b>EMERGENCY LOCATOR TRANSMITTER</b>				
D10715		(PROV) ELT				ALL
D10717		(PROV) ELT				ALL
D04889J		AB0288	POS 03	D04889P	W2589	ALL
D03003		M01523	794/301/L010			ALL

---

## MASTER BUNDLE LIST

D280A103

**91-21-13**  
Section W3410  
Page 1 End  
May 11/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3509</b>	<b>LA2</b>	<b>HF-1 E8-1 TO STA 1030</b>				
D04227J		AB1030A	POS 03	D04227P	W7057	YC001-YC007, YK907-YK912, YK918-YK919, YL401-YL429
D04227J		AB1030A	POS 03	D04227P		YK913-YK917, YK920, YL430
D08509P		AE0801A	POS 03	D08509J	W0811	YC001-YC007, YK907-YL430

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W3500

Page 1 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3511</b>	<b>LA2</b>	<b>HF-2 E8-1 TO STA 1030</b>				
D04245J		AB1030A	POS 01	D04245P	W7061	YK907-YK912, YK918-YK919, YL401-YL429
D04245J		AB1030A	POS 01	D04245P		YK913-YK917, YK920, YL430
D08811P		AE0801A	POS 07	D08811J	W0811	YK907-YL430
<b>W3517</b>	<b>NA2</b>	<b>HF-1 E8-1 TO STA 1030 ANT FEED</b>				
D04217J		AB1030A	POS 04	D04217P	W7761	YC001-YC007, YK907-YK912, YK918-YK919, YL401-YL429
D04217J		AB1030A	POS 04	D04217P		YK913-YK917, YK920, YL430
D08517P		AE0801D	POS 03	D08517J	W0811	YC001-YC007, YK907-YL430

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W3510

Page 1 End

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3523</b>	<b>NA2</b>	<b>HF-2 E8-1 COAX TO STA 1030 ANT FEED</b>				
D04713J		AB1030A	POS 02	D04713P	W7763	YK907-YK912, YK918-YK919, YL401-YL429
D04713J		AB1030A	POS 02	D04713P		YK913-YK917, YK920, YL430
D08823P		AE0801D	POS 05	D08823J	W0811	YK907-YL430

MASTER BUNDLE LIST

D280A103

91-21-13

Section W3520

Page 1 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3553</b>	<b>LN2</b>	<b>HF-1 E6-2 TO STA 1030</b>				
I D04227J		AB1030A	POS 03	D04227P	W7057	YM643-YM652
I D04227J		AB1030A	POS 03	D04227P		YM653-YM670
D40121P		AE0602A	POS 12	D40121J	W0621	YM643-YM670
<b>W3555</b>	<b>RN2</b>	<b>HF-2 E6-2 TO STA 1030</b>				
I D04245J		AB1030A	POS 01	D04245P	W7061	YM643-YM652
I D04245J		AB1030A	POS 01	D04245P		YM653-YM670
D40125P		AE0602A	POS 11	D40125J	W0621	YM643-YM670
<b>W3557</b>	<b>NA2</b>	<b>HF-1 E6-2 TO STA 1030 ANT FEED</b>				
I D04217J		AB1030A	POS 04	D04217P	W7761	YM643-YM652
I D04217J		AB1030A	POS 04	D04217P		YM653-YM670
D40123P		AE0602A	POS 02	D40123J	W0621	YM643-YM670
<b>W3559</b>	<b>NA2</b>	<b>HF-2 E6-2 COAX TO STA 1030 ANT FEED</b>				
I D04713J		AB1030A	POS 02	D04713P	W7763	YM643-YM652
I D04713J		AB1030A	POS 02	D04713P		YM653-YM670
D40127P		AE0602A	POS 01	D40127J	W0621	YM643-YM670

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W3550

Page 1 End

Aug 10/2009





Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3573</b>	<b>NN2</b>	<b>IFE - VIDEO CONTROL CENTER - AFT RH STOW BIN (STA 858)</b>				
D45289P		AB0858	POS 01	D45289J	W3583	YK901-YM670
D45297P		AB0858	POS 02	D45297J	W5825	YK907-YM670
D45285P		AB0858	POS 03	D45285J	W3583	YK901-YM670
D10667		M2065				YK901-YM670
D10669		M2065				YK901-YM670
D10671		M2065				YK901-YM670
D10673		M2065				YK901-YM670
D10675		M2065				YK901-YM670
D10659		M2066				YK901-YM670
D11369		T03009	MULTI/ /			YK901-YM670
D11371		T03009	MULTI/ /			YK901-YM670
<b>W3577</b>	<b>NN2</b>	<b>EE BAY TO AFT RH STOW BIN</b>				
D45287J		AB0373	POS 02	D45287P		YC001-YC013, YC016-YC018, YC020-YC030
D45287J		AB0373	POS 02	D45287P	W3599	YC015, YC019, YC031-YC050
D43277P		AE0302A	POS 01	D43277J	W0321	YC001-YC050

MASTER BUNDLE LIST

D280A103

91-21-13

Section W3570

Page 1 End

May 11/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3583</b>	<b>NN2</b>	<b>VIDEO - VCC TO DISC BRACKET (NEAR CLUSTER 3) AND TO AB0340B</b>				
D12213J				D12213P	W5303	YK901-YM670
D45253J				D45253P	W3589	YC001-YC030
D45253J				D45253P		YC031-YC050
D45231J		AB0340B	POS 08	D45231P	W5303	ALL
D45281J		AB0373	POS 01	D45281P		YC001-YC013, YC016-YC018, YC020-YC030
D45281J		AB0373	POS 01	D45281P	W3599	YC015, YC019, YC031-YC050
D45283J		AB0373	POS 03	D45283P		YC001-YC013, YC016-YC018, YC020-YC030
D45283J		AB0373	POS 03	D45283P	W3599	YC015, YC019, YC031-YC050
D45289J		AB0858	POS 01	D45289P	W3573	YK901-YM670
D45285J		AB0858	POS 03	D45285P	W3573	YK901-YM670
D45275P		SIDEWALL		D45275J	W3591	YC001-YC030
D45275P		SIDEWALL		D45275J		YC031-YC050
D45275P		SIDEWALL		D45275J	W3605	YK901-YM670
<b>W3589</b>	<b>RN2</b>	<b>VIDEO - AC &amp; DC POWER - P6 TO VCC AND TO VDU CLUSTERS 1 THRU 4</b>				
D45253P				D45253J	W3583	YC001-YC030
D45259P				D45259J	W3591	YC001-YC030
D45269P				D45269J	W3071	YC001-YC030
D45271P				D45271J	W3591	YC001-YC030
D45273P				D45273J	W3073	YC001-YC030
D45233P		AP0600A	POS 03	D45233J	W0044	YC001-YC030

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W3580

Page 1 End

May 11/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3591</b>	<b>NN2</b>	<b>VIDEO - DISC BRKT (NEAR CLUSTER 3) - TO VDU CLUSTERS 1 &amp; 3</b>				
D45259J				D45259P	W3589	YC001-YC030
D45271J				D45271P	W3589	YC001-YC030
D10201		M1934				YC001-YC030
D10265		M1942				YC001-YC030
D45275J		SIDEWALL		D45275P	W3583	YC001-YC030
<b>W3599</b>	<b>NN2</b>	<b>VIDEO - VIDEO CONTROL CENTER - GALLEY G7</b>				
D45281P		AB0373	POS 01	D45281J	W3583	YC015, YC019, YC031-YC050
D45287P		AB0373	POS 02	D45287J	W3577	YC015, YC019, YC031-YC050
D45283P		AB0373	POS 03	D45283J	W3583	YC015, YC019, YC031-YC050
D10667		M2065				YC015, YC019, YC031-YC050
D10669		M2065				YC015, YC019, YC031-YC050
D10671		M2065				YC015, YC019, YC031-YC050
D10673		M2065				YC015, YC019, YC031-YC050
D10675		M2065				YC015, YC019, YC031-YC050
D10659		M2066				YC015, YC019, YC031-YC050
D10661		M2067				YC015, YC019, YC031-YC050

MASTER BUNDLE LIST

D280A103

91-21-13

Section W3590

Page 1 End

May 11/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3605</b>	<b>NN2</b>	<b>VIDEO - P6 TO VDU TRAYS &amp; DISC BRKT STA 691, TO VDU TRAYS 1 &amp; 4</b>				
D45233P		AP0600A	POS 03	D45233J	W0044	YK901-YM670
D10227		LAST VDU				YK901-YM670
D10283		LAST VDU				YK901-YM670
D10201		M01934	450/295/L035			YK901-YM670
D10233		M01938	550/295/L035			YK901-YM670
D10265		M01942	695/295/L035			YK901-YM670
D10297		M01946	777/295/L035			YK901-YM670
D45275J		SIDEWALL		D45275P	W3583	YK901-YM670
<b>W3607</b>	<b>NA2</b>	<b>GPS ANT-1</b>				
D42941J		AE0102B	POS 08	D42941P	W0121	YC001-YC030, YK901-YM670
D02941		M02103	500A/316/L005			YC001-YC030, YK901-YM670
<b>W3609</b>	<b>NB2</b>	<b>GPS ANT-2</b>				
D42943J		AE0102B	POS 03	D42943P	W0141	ALL
D02947		M02102	500A/316/R005			ALL

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W3600

Page 1 End

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3701</b>	<b>NN2</b>	<b>VIU/CIU BRACKET STA 344 TO CAMERA 1 BRACKET STA 2XX</b>				
D37001J		AB0288	POS 04	D37001P	W3801	YK907-YM670
D40351J		AB0358	POS 02	D40351P	W3805	YK907-YM670
<b>W3702</b>	<b>NN2</b>	<b>VIU/CIU BRACKET STA 344 TO CAMERA 2 BRACKET STA 2XX</b>				
D40353J		AB0358	POS 01	D40353P	W3805	YK907-YM670
D37002J		AB0358	POS 05	D37002P	W3802	YK907-YM670
<b>W3703</b>	<b>NN2</b>	<b>VIU/CIU BRACKET STA 344 TO CAMERA 3 BRACKET STA 2XX</b>				
D40355J		AB0358	POS 06	D40355P	W3805	YK907-YM670
D37003J		DISC BRKT		D37003P	W3803	YK907-YM670
<b>W3704</b>	<b>NN2</b>	<b>TRANSFORMER BKT STA 340 TO QUICK DISC. STA 235 (CAPT. VIDEO DISPLAY)</b>				
D10030J				D10030P	W0001	YK907-YK911, YK918, YL421-YL426, YM643-YM651
D10030P		AP0900A	POS 25	D10030J	W0001	YK912, YK919, YL401, YL427-YL429, YM652
D10030P		AP0900A	POS 25	D10030J		YK913-YK917, YK920, YL430, YM653-YM670
D12241		T3021				YK907-YM670
<b>W3705</b>	<b>NN2</b>	<b>TRANSFORMER BKT STA 340 TO QUICK DISC. STA 235 (CTR. VIDEO DISPLAY)</b>				
D10034J				D10034P	W0003	YK907-YK911, YK918, YL421-YL426, YM643-YM651
D10034P		AP0900A	POS 27	D10034J	W0003	YK912-YK917, YK919-YL401, YL427-YL429, YM652
D10034P D12245		AP0900A T3022	POS 27	D10034J		YL430, YM653-YM670 YK907-YM670
<b>W3706</b>	<b>NN2</b>	<b>TRANSFORMER BKT STA 340 TO QUICK DISC. STA 235 (F/O VIDEO DISPLAY)</b>				
D10032J		AP0900A	POS 26	D10032P	W0003	YK907-YK911, YK918, YL421-YL426, YM643-YM651
D10032P		AP0900A	POS 26	D10032J	W0003	YK912-YK917, YK919-YL401, YL427-YL429, YM652

MASTER BUNDLE LIST

D280A103

91-21-13

Section W3700

Page 1

May 11/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3706</b>	<b>NN2</b>	<b>TRANSFORMER BKT STA 340 TO QUICK DISC. STA 235 (F/O VIDEO DISPLAY) (continued)</b>				
D10032P D12249		AP0900A T3023	POS 26	D10032J		YL430, YM653-YM670 YK907-YM670
<b>W3709</b>	<b>NN2</b>	<b>VIU/CIU BRACKET STA 344 TO THE CAMERA CONTROL PANEL IN THE P8 PANEL</b>				
D40357J D12237		AB0358 M3000	POS 07	D40357P	W3805	YK907-YM670 YK907-YM670



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3710</b>	<b>NN2</b>	<b>VIU/CIU BRACKET STA 344 TO THE TRANSFORMER'S BRACKETS STA 340</b>				
D40365J		AB0358	POS 08	D40365P	W3805	YK907-YM670
D12239		T3021				YK907-YM670
D12243		T3022				YK907-YM670
D12247		T3023				YK907-YM670

---

**MASTER BUNDLE LIST**

D280A103

**91-21-13**

Section W3710

Page 1 End

May 11/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3721</b>	<b>NN2</b>	<b>VSU AT THE E4-1 SHELF TO THE BRACKET AT STA 358 FOR THE VIDEO CAMERAS</b>				
D40387J		AB0358	POS 02	D40387P		YK901-YK906
D40389J		AB0358	POS 05	D40389P		YK901-YK906
D40391J		AB0358	POS 06	D40391P		YK901-YK906
D04171P		AE0401A	POS 14	D04171J	W0411	YK901-YK906
<b>W3722</b>	<b>NN2</b>	<b>VSU AT E4-1 TO THE CAMERA &amp; VIDEO CONTROL PANEL IN THE P8 PANEL</b>				
D04173P		AE0401A	POS 15	D04173J	W0411	YK901-YK906
D12313		M3000				YK901-YK906
D12315		M3020				YK901-YK906

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W3720

Page 1 End

May 11/2009





# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3801</b>	<b>NN2</b>	<b>CAMERA 1 BRACKET STA 288 TO CAMERA 1 STA 285</b>				
D37001P D12491		AB0288 M3005	POS 04	D37001J	W3701	YK907-YM670 YK907-YM670
<b>W3802</b>	<b>NN2</b>	<b>VIU/CIU BRACKET STA 358 TO CAMERA 2 STA 340</b>				
D37002P D12493		AB0358 M3007	POS 05	D37002J	W3702	YK907-YM670 YK907-YM670
<b>W3803</b>	<b>NN2</b>	<b>CAMERA 3 BRACKET STA 352 TO CAMERA 3 STA 333</b>				
D37003P D12495		DISC BRKT M3009		D37003J	W3703	YK907-YM670 YK907-YM670
<b>W3805</b>	<b>NN2</b>	<b>VIU/CIU BRACKET STA 358 TO VIDEO CONTROL UNIT STA 344</b>				
D40353P		AB0358	POS 01	D40353J	W3702	YK907-YM670
D40351P		AB0358	POS 02	D40351J	W3701	YK907-YM670
D40355P		AB0358	POS 06	D40355J	W3703	YK907-YM670
D40357P		AB0358	POS 07	D40357J	W3709	YK907-YM670
D40365P		AB0358	POS 08	D40365J	W3710	YK907-YM670
D40349P		AB0358	POS 09	D40349J	W3144	YK907-YM670
DA12489		M3001				YK907-YM670
DB12489		M3001				YK907-YM670

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W3800

Page 1 End

May 11/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W3895</b>	<b>NA2</b>	<b>ATC TOP ANT E1 RACK (S942) TO STA 430.25 (M1406)</b>				
D02529		M01406	430/ /			YC001-YC030, YK901-YM670
D02703		S00942	316/163/L025			YC001-YC030, YK901-YM670

---

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W3890

Page 1 End

May 11/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W4001</b>	<b>NN2</b>	<b>TCAS TOP ANTENNA (E1-1 SHELF)</b>				
D04625P		AB0387	POS 01	D04625J	W4009	ALL
D04627P		AB0387	POS 02	D04627J	W4009	ALL
D04629P		AB0387	POS 03	D04629J	W4009	ALL
D04633P		AB0387	POS 04	D04633J	W4009	ALL
D04611P		AE0101B	POS 15	D04611J	W0111	ALL
D04609P		AE0101B	POS 16	D04609J	W0111	ALL
D04615P		AE0101B	POS 17	D04615J	W0111	ALL
D04613P		AE0101B	POS 18	D04613J	W0111	ALL
<b>W4009</b>	<b>NN2</b>	<b>TCAS TOP ANTENNA</b>				
D04625J		AB0387	POS 01	D04625P	W4001	ALL
D04627J		AB0387	POS 02	D04627P	W4001	ALL
D04629J		AB0387	POS 03	D04629P	W4001	ALL
D04633J		AB0387	POS 04	D04633P	W4001	ALL
D02745		M01486	385/ /			ALL
D02747		M01486	385/ /			ALL
D02749		M01486	385/ /			ALL
D02751		M01486	385/ /			ALL

MASTER BUNDLE LIST

D280A103

91-21-13

Section W4000

Page 1 End

May 11/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W4134</b>	<b>LA2</b>	<b>AB1050R TO VERTICAL STAB</b>				
D40842J		AB1050L	POS 01	D40842P	W6134	YC008-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40268J		AB1080	POS 01	D40268P	W6136	YC008-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D00756		S00126	1084/266/R018			YC008-YK912, YK918-YK919, YL401-YL429, YM643-YM652

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W4130

Page 1 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W4140</b>	<b>NB2</b>	<b>PASS CAB TEMP SENSOR (M1719) TO STA 405 (CEILING) NB2</b>				
D41436J				D41436P	W4142	YM643-YM670
D10960		M1719				YM643-YM670
D10962		M1719				YM643-YM670
D10964		M1719				YM643-YM670
<b>W4142</b>	<b>LB2*</b>	<b>EMERGENCY EXIT LIGHT - RIGHT</b>				
D07170P				D07170J	W3144	ALL
D07180P				D07180J	W4250	ALL
D07184J				D07184P	W4146	YK901-YM670
D07186J				D07186P	W3146	YK901-YM670
D07198P				D07198J	W3142	YM643-YM652
D07198P				D07198J		YM653-YM670
D11092				D11344		YC001-YC050
D11094				D11344		YM643-YM670
D11098				D11344		ALL
D11102				D11344		YM643-YM670
D11328				D11344		YM643-YM670
D11332				D11344		YM643-YM670
D11336				D11344		YM643-YM670
D12012				D11344		YC001-YL430
D12014				D11344		YC001-YC050
D12020				D11344		YC001-YL430
D12022				D11344		YC001-YL430
D12024				D11344		YC001-YL430
D12026				D11344		YC001-YL430
D12044				D11344		YC001-YL430
D12060				D11344		YC001-YL430
D12246				D11344		YC001-YL430
D12488				D11344		YC001-YL430
D40005J				D40005P	W3309	ALL
D40007J				D40007P	W3309	ALL
D40040P				D40040J	W0352	ALL
D40042P				D40042J	W0342	ALL
D40046P				D40046J	W0442	ALL
D40086J				D40086P	W3142	YC001-YC030
D40086J				D40086P		YC031-YC050
D40098P				D40098J	W3142	YC001-YC030, YK901-YL430
D40098P				D40098J		YC031-YC050

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W4140

Page 1

May 11/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W4142</b>	<b>LB2*</b>	<b>EMERGENCY EXIT LIGHT - RIGHT (continued)</b>				
D40100P				D40100J	W3142	YC001-YC030, YK901-YM652
D40100P				D40100J		YC031-YC050, YM653-YM670
D41436P D46438J				D41436J D46438P	W4140 W3142	YM643-YM670 YC001-YC030, YK901-YL430
D46438J D46440J				D46438P D46440P	W3142	YC031-YC050 YC001-YC030, YK901-YM652
D46440J				D46440P		YC031-YC050, YM653-YM670
D40096J		AB0340B	POS 01	D40096P	W3142	YC001-YC030, YK901-YM652
D40096J		AB0340B	POS 01	D40096P		YC031-YC050, YM653-YM670
D40292J		AB0340B	POS 06	D40292P	W5160	YC001-YC030, YK901-YM670
D40292J D40296J		AB0340B AB0340B	POS 06 POS 07	D40292P D40296P	W2114	YC031-YC050 ALL
D11076		L00007	651/226/R074			YM643-YM670
D12018		L00007	651/226/R074			YC001-YL430
D11072		L00730	348/227/R068			ALL
D11084		L00733	1000/242/R060			ALL
D12458		L00751	MULTI/ /			YC001-YL430
D12464		L00751	MULTI/ /			ALL
D03658		L01186	293/233/R051			ALL
D03660		L01186	293/233/R051			ALL
D03662		L01187	304/229/L047			ALL
D03664		L01187	304/229/L047			ALL
█ D03666		L01188	614/223/R062			ALL
█ D03668		L01188	614/223/R062			ALL
█ D10086		L01191	993/243/R053			ALL
█ D10088		L01191	993/243/R053			ALL
█ D12064		L01207	576/224/R062			YC001-YL430
█ D12066		L01207	576/224/R062			YC001-YL430
D12050		L01209	608/227/R074			YC001-YL430
█ D12392		L01358	642/224/R070			YM643-YM670
█ D12394		L01358	642/224/R070			YM643-YM670
█ D12430		L01358	642/224/R070			YC001-YL430

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W4140

Page 2

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W4142</b>	<b>LB2*</b>	<b>EMERGENCY EXIT LIGHT - RIGHT (continued)</b>				
D12432		L01358	642/224/R070			YC001-YL430
D12454		L01365	MULTI/ /			YC001-YL430
D12456		L01365	MULTI/ /			YC001-YL430
D12460		L01365	MULTI/ /			ALL
D12462		L01365	MULTI/ /			ALL
D10126		M01386	490/208/L068			YC001-YC050
D10714		M01669	603/212/R067			YM643-YM670
D12004		M01671	727C+13/212/R068			YC001-YL430
D10744		M01672	952/290/R014			ALL
D10748		M01674	322/291/R007			ALL
D10750		M01675	322/291/L007			ALL
D12002		M01676	500C+7/213/R067			YC001-YL430
D12010		M01695	565/213/R068			YC001-YL430
D11048		M01744	568/297/R031			ALL
D12544		M02174	617/251/R066			ALL
D12546		M02174	617/251/R066			ALL
D12560		M02178	579/251/R066			YC001-YL430
D12562		M02178	579/251/R066			YC001-YL430
D12652		M02201	638/251/R066			ALL
D12654		M02201	638/251/R066			ALL
D12656		M02202	581/229/R069			ALL
D12658		M02202	581/229/R069			ALL
D12660		M02203	598/229/R069			ALL
D12662		M02203	598/229/R069			ALL
D12676		M02207	600/251/R066			YC001-YL430
D12678		M02207	600/251/R066			YC001-YL430
D12680		M02208	543/229/R069			YC001-YL430
D12682		M02208	543/229/R069			YC001-YL430
D12684		M02209	560/229/R069			YC001-YL430
D12686		M02209	560/229/R069			YC001-YL430
D00094		T00402	538/299/R010			YM643-YM670
<b>W4146</b>	<b>LN2*</b>	<b>FLUORESCENT LIGHTING - RIGHT CEILING</b>				
D07184P				D07184J	W4142	YK901-YM670
D40018P				D40018J	W0144	YC001-YC030, YK901-YM670
D40184J				D40184P	W3144	YC001-YC030, YK901-YM670
D40990J				D40990P	W3158	YK901-YM670

MASTER BUNDLE LIST

D280A103

91-21-13

Section W4140

Page 3

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W4146</b>	<b>LN2*</b>	<b>FLUORESCENT LIGHTING - RIGHT CEILING (continued)</b>				
D40996J D42002J				D40996P D42002P	W3158 W3158	YK901-YL430 YC001-YC030, YK901-YM670
D42004J				D42004P	W3158	YC001-YC030, YK901-YM670
D42006J D11882			425/289/R031	D42006P	W3158	YC001-YC030 YC001-YC030, YK901-YM670
D11884			483/289/R032			YC001-YC030, YK901-YM670
D11952			500B/289/R032			YC001-YC030, YK901-YL430
D11886 D11954			500C+3/289/R032 500E+13/289/R032			YM643-YM670 YC001-YC030, YK901-YL430
D11956			500I+5/289/R032			YC001-YC030, YK901-YL430
D11888 D11958			563/289/R032 585/289/R032			YM643-YM670 YC001-YC030, YK901-YL430
D11890 D11960			643/288/R032 665/288/R032			YM643-YM670 YC001-YC030, YK901-YL430
D11892 D11962			723/289/R032 727+18/289/R032			YM643-YM670 YC001-YC030, YK901-YL430
D11894 D11964			727C+16/289/R032 727D+16/289/R032			YM643-YM670 YC001-YC030, YK901-YL430
D11966			727H+8/289/R032			YC001-YC030, YK901-YL430
D11968			775/289/R032			YC001-YC030, YK901-YL430
D11896 D11898			785/289/R032 844/288/R031			YM643-YM670 YC001-YC030, YK901-YM670
D42008J		AB0340B	POS 02	D42008P	W3058	YC001-YC030, YK901-YM670

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W4140

Page 4 End

May 11/2009





Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W4160</b>	<b>NN2</b>	<b>FWD PASS CAB TEMP SENSOR (M1445) TO STA 405 (CEILING)</b>				
D41820J				D41820P	W6288	YC001-YL430
D03906		M01445	416/274/R031			YC001-YL430
D03908		M01445	416/274/R031			YC001-YL430
D03920		M01445	416/274/R031			YC001-YL430
<b>W4162</b>	<b>RN1</b>	<b>NS/FSB SIGN-VIDEO PANEL, FORWARD-RIGHT</b>				
D40862J				D40862P	W4258	YC001-YC050
D10355		M02004	426.5/270/R042			YC001-YC050
■ D10367		M02006	478/270/R032			YC001-YC050
■ D10391		M02010	500C/270/R032			YC001-YC050
■ D10403		M02012	578.5/270/R042			YC001-YC050
D10427		M02016	550/270/R043			YC001-YC050
<b>W4164</b>	<b>RN1</b>	<b>NS/FSB SIGN-VIDEO PANEL, AFT-RIGHT</b>				
D40864J				D40864P	W4258	YC001-YC050
D10523			886/270/R042			YC001-YC050
■ D10439		M02018	669.5/270/R042			YC001-YC050
■ D10463		M02022	727B+3/270/R032			YC001-YC050
D10475		M02024	727F+7/270/R043			YC001-YC050
■ D10499		M02028	727J+11/270/R032			YC001-YC050
D10511		M02030	828/270/R043			YC001-YC050

## MASTER BUNDLE LIST

D280A103

91-21-13

Section W4160

Page 1 End

Aug 10/2009



## 737-700/800 WIRING DIAGRAM MANUAL

<b>Bundle</b> Equip	<b>Sep</b>	<b>Description</b> Matewith	<b>Location</b>	<b>MW Connector</b>	<b>MW Bundle</b>	<b>Effectivity</b>
<b>W4170</b>	<b>RA2*</b>	<b>AB0420A TO E3-1 SHELF</b>				
D40728P		AB0405B	POS 01	D40728J	W6170	ALL
D40730P		AB0405B	POS 02	D40730J	W6172	ALL
D40732P		AE0301A	POS 36	D40732J	W0313	YC001-YC030, YK901-YM670 YC031-YC050
D40732P		AE0301A	POS 36	D40732J		

### MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W4170

Page 1 End

May 11/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W4180</b>	<b>NN2</b>	<b>AFT PASS CAB TEMP SENSOR (M1446) TO STA 7XX (CEILING)</b>				
D41834J				D41834P	W6288	YC001-YL430
D03910		M01446	727G+13/274/R031			YC001-YL430
D03912		M01446	727G+13/274/R031			YC001-YL430
D03922		M01446	727G+13/274/R031			YC001-YL430

**MASTER BUNDLE LIST**

D280A103

**91-21-13**

Section W4180

Page 1 End

May 11/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W4192</b>	<b>RN1</b>	<b>NS/FSB SIGN-VIDEO PANEL, FORWARD-RIGHT</b>				
D40862J				D40862P	W4258	YK901-YM670
D12017			375/270/R042			YK901-YM670
D12029			443/270/R042			YK901-YM670
D12041			500/270/R042			YK901-YM670
D12053			500A+8/270/R042			YK901-YL430
D12065			500C/270/R042			YK901-YM670
D12089			557/270/R042			YK901-YL430
D12077			563/270/R042			YK901-YM670
<b>W4194</b>	<b>RN1</b>	<b>NS/FSB SIGN-VIDEO PANEL, AFT-RIGHT</b>				
D40864J				D40864P	W4258	YK901-YM670
D12101			670/270/R042			YK901-YM670
D12113			727A+15/270/R042			YK901-YM670
D12125			727C+18/270/R042			YK901-YL430
D12137			727G+4/270/R042			YK901-YM670
D12149			830/270/R042			YK901-YM670
D12161			830/270/R042			YK901-YL430

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W4190

Page 1 End

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W4222</b>	<b>RN1</b>	<b>AB1050R DISCONNECT BRACKET TO STAB TRIM ACTUATOR</b>				
D40836J D00700		AB1050R M01659	POS 05 1076/264/R005	D40836P	W6222	YC008-YM670 YC008-YM670

---

**MASTER BUNDLE LIST**

D280A103

**91-21-13**

Section W4220

Page 1 End

May 11/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W4248</b>	<b>RN2</b>	<b>FLUORESCENT LIGHTING - RIGHT &amp; LEFT - SIDEWALL</b>				
D07174P				D07174J	W3058	YC001-YC030, YK901-YM670
D07174P				D07174J		YC031-YC050
D40210J				D40210P	W4258	ALL
D40212J				D40212P	W4258	ALL
D40214J				D40214P	W4258	ALL
D03784			417/271/R054			ALL
D03796			418/271/L054			ALL
D03798			422/271/L054			ALL
D03786			422/271/R054			ALL
D10014			590/269/L058			YC001-YL430
D10012			616/269/R58			YC001-YL430
D10010			616/270/R57			YC001-YL430
D10016			616/271/L056			YC001-YL430
D03846			639/269/L058			YM643-YM670
D03788			639/269/R058			YM643-YM670
D03790			643/271/R56			YM643-YM670
D03848			645/271/L056			YM643-YM670
D03792			863/271/R055			ALL
D03850			865/271/L55			ALL
D03794			867/271/R055			ALL
D03852			870/271/L55			ALL

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W4240

Page 1 End

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W4250</b>	<b>RN2*</b>	<b>P18 AND AB0340B DISC TO RIGHT PSU'S</b>				
D07180J				D07180P	W4142	ALL
D40072P				D40072J		ALL
D40204J				D40204P	W4258	ALL
D40206J				D40206P	W4258	ALL
D40272P				D40272J	W3144	ALL
D11600			360/274/R051			ALL
D11602			381/275/R052			ALL
█ D11604			383/275/R052			ALL
█ D11606			431/273/R052			ALL
█ D11608			450/274/R051			ALL
D11610			470/274/R051			ALL
D11612			490/274/R051			ALL
D11614			500+10/274/R051			ALL
D11616			500A+12/274/R051			ALL
D11618			500B+12/874/R051			ALL
D11620			500C+12/274/R051			ALL
D11622			500D+12/274/R051			YC001-YL430
D11624			500E+16/274/R051			YC001-YL430
D11626			500F+14/274/R051			YC001-YL430
D11628			500G+10/274/R051			YC001-YL430
D11630			500H+10/274/R051			ALL
█ D11636			565/274/R051			ALL
█ D11632			566/274/R051			ALL
█ D11638			588/274/R051			ALL
D11634			594/274/R051			ALL
D11640			611/274/R051			ALL
D11642			630/274/R051			ALL
█ D11644			660/274/R051			ALL
D11646			680/274/R051			ALL
D11648			700/274/R051			ALL
D11652			727+10/274/R051			ALL
█ D11654			727A+10/274/R051			YC001-YL430
D11656			727B+10/274/R051			YC001-YL430
█ D11658			727C+10/274/R051			YC001-YL430
D11660			727D+10/274/R051			YC001-YL430
█ D11650			727D+11/274/R051			ALL
█ D11662			727E+18/272/R054			YC001-YL430
D11664			727F+10/274/R051			ALL
█ D11666			727G+18/272/R054			ALL
D11668			727H+10/274/R051			ALL

MASTER BUNDLE LIST

D280A103

91-21-13

Section W4250

Page 1

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W4250</b>	<b>RN2*</b>	<b>P18 AND AB0340B DISC TO RIGHT PSU'S (continued)</b>				
D11670			727I+16/272/R054			ALL
D11672			727J+10/274/R051			ALL
D11674			757/274/R051			YC001-YL430
D11676			785/274/R051			ALL
D11678			802/274/R051			ALL
D11680			822/274/R051			YC001-YL430
D11682			842/274/R051			YC001-YL430
D11684			865/274/R051			YC001-YL430
D11686			890/274/R051			YC001-YL430
D11688			924/274/R051			YC001-YL430
D11690			937/274/R051			YC001-YL430
D40084P		AB0340B	POS 04	D40084J	W4258	ALL
D40298P		AP1800A	POS 07	D40298J	W0018	ALL
<b>W4256</b>	<b>RN1*</b>	<b>P92 TO FWD GALLEY POWER</b>				
D01218			350/292/R025			YK912-YL401, YL427-YM670
D00570		AB0288	POS 01			ALL
D11458		P0092				ALL
D01218		VENDOR				YC001-YK911, YL421-YL426
<b>W4258</b>	<b>RN1</b>	<b>AB0340B DISCONNECT TO RIGHT AFT OVERHEAD</b>				
D40204P				D40204J	W4250	ALL
D40206P				D40206J	W4250	ALL
D40210P				D40210J	W4248	ALL
D40212P				D40212J	W4248	ALL
D40214P				D40214J	W4248	ALL
D40862P				D40862J	W4162	YC001-YC050
D40862P				D40862J	W4192	YK901-YM670
D40864P				D40864J	W4164	YC001-YC050
D40864P				D40864J	W4194	YK901-YM670
D40084J		AB0340B	POS 04	D40084P	W4250	ALL
D40202J		AB0340B	POS 09	D40202P	W6242	ALL

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W4250

Page 2 End

Aug 10/2009





# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W4724</b>	<b>AD1</b>	<b>APU FIREWALL TO DISC BRACKET AB1050R</b>				
D44584P D44584P				D44584J D44584J	W7150	YC008-YC030 YC031-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40854J		AB1050R	POS 03	D40854P	W5726	YC008-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D10434		AB1088				YC008-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D10436		AB1088				YC008-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40060J		AB1088	POS 05	D40060P	W7538	YC008-YK912, YK918-YK919, YL401-YL429, YM643-YM652
<b>W4726</b>	<b>AD1</b>	<b>AB1050R TO APU FIREWALL</b>				
D40790J		AB1050R	POS 01	D40790P	W5726	YC008-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40790J		AB1050R	POS 01	D40790P		YK913-YK917, YK920, YL430, YM653-YM670
D40876J		AB1050R	POS 02	D40876P	W5726	YC008-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40876J		AB1050R	POS 02	D40876P		YK913-YK917, YK920, YL430, YM653-YM670
D10912		AB1088				YC008-YC030, YK901-YM670

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W4720

Page 1

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

<b>Bundle</b> Equip	<b>Sep</b>	<b>Description</b> Matewith	<b>Location</b>	<b>MW Connector</b>	<b>MW Bundle</b>	<b>Effectivity</b>
<b>W4726</b>	<b>AD1</b>	<b>AB1050R TO APU FIREWALL (continued)</b>				
D11118		AB1088				YC008-YC030, YK901-YM670
D00922		M00299	1055/240/R037			YC008-YC030, YK901-YM670
D01176		M00404	1025/ /			YC008-YC030, YK901-YM670
D00594		M01146	713/ /			YC008-YC030, YK901-YM670
D01246		S00284	1055/240/R037			YC008-YC030, YK901-YM670

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W4720

Page 2 End

May 11/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5001</b>	<b>NN2</b>	<b>TCAS BOTTOM ANTENNA (E1-1 SHELF)</b>				
D04619P		AE0101B	POS 19	D04619J	W0111	ALL
D04617P		AE0101B	POS 20	D04617J	W0111	ALL
D04623P		AE0101B	POS 21	D04623J	W0111	ALL
D04621P		AE0101B	POS 22	D04621J	W0111	ALL
D02753		M01487	305/ /			ALL
D02755		M01487	305/ /			ALL
D02757		M01487	305/ /			ALL
D02759		M01487	305/ /			ALL

**MASTER BUNDLE LIST**

D280A103

**91-21-13**

Section W5000

Page 1 End

May 11/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5030</b>	<b>LA1</b>	<b>P91 TO T10 ANDP92</b>				
D03472		M01323	368/184/R049			ALL
D11420		P0091				ALL
D11800		P0091				ALL
D11446		P0092				ALL
<b>W5032</b>	<b>SN2</b>	<b>MAIN WHEEL WELL TO E/E BAY VIA CROWN</b>				
D42104J		AB0727L	POS 01	D42104P	W1022	ALL
D40162P		AE0101A	POS 15	D40162J	W0111	ALL
<b>W5036</b>		<b>P91/P92 TO TRU'S 1,2 &amp; 3.</b>				
D11426		P0091				ALL
D11736		P0092				ALL
<b>W5039</b>	<b>NA2</b>	<b>E1-2 TO S943 (D2709) COAX</b>				
D04607J		AE0102B	POS 01	D04607P	W0121	YC001-YC030, YK901-YM670
D04607J		AE0102B	POS 01	D04607P		YC031-YC050
D02709		S00943	316/163/L025			ALL

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W5030

Page 1 End

May 11/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5054</b>	<b>NN2</b>	<b>CARGO COMPT SMOKE DETECTOR JUMPER BUNDLE</b>				
D13844			MULTI/ /			YC031-YM670
D13846			MULTI/ /			YC031-YM670

---

**MASTER BUNDLE LIST**

D280A103

**91-21-13**

Section W5050

Page 1 End

May 11/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5074</b>	<b>SB2</b>	<b>CARGO FIRE EXTINGUISHER BOTTLE 2 (M2263) TO AB500DL (POS 6)</b>				
D46608P		AB0500DL	POS 06	D46608J	W5088	YC008-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D12820		M02263	540/180/R019			YC008-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D12816		M2263				YC008-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D12818		M2263				YC008-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W5070

Page 1 End

May 11/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5086</b>	<b>NA2</b>	<b>FWD CARGO COMPT TO FWD CARGO SMOKE DETECTORS</b>				
D12766				D13846		YC031-YM670
D12768				D13846		YC031-YM670
D12770				D13846		YC031-YM670
D12772				D13846		YC031-YM670
D12764		M2236				ALL
D12766		M2238				YC001-YC030
D12768		M2239				YC001-YC030
D12770		M2240				YC001-YC030
D12772		M2241				YC001-YC030
<b>W5088</b>	<b>NB2</b>	<b>FWD CARGO COMPARTMENT TO E2-2 SHELF</b>				
D46608J		AB0500DL	POS 06	D46608P		YC001-YC007, YC031-YC050, YK913-YK917, YK920, YL430, YM653-YM670
D46608J		AB0500DL	POS 06	D46608P	W5074	YC008-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D42014P		AE0202A	POS 32	D42014J	W0220	YC001-YC030, YK901-YM670
D42014P D12762		AE0202A M2236	POS 32	D42014J		YC031-YC050 ALL

MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W5080

Page 1 End

May 11/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5094</b>	<b>NC2</b>	<b>AB500DL (POS 12) TO E2-2 SH4ELF</b>				
D46606J		AB0500DL	POS 12	D46606P	W5098	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D46606J		AB0500DL	POS 12	D46606P		YK913-YK917, YK920, YL430, YM653-YM670
D41840P		AE0202A	POS 33	D41840J	W0220	YC001-YC030, YK901-YM670
D41840P		AE0202A	POS 33	D41840J		YC031-YC050
<b>W5096</b>	<b>NC2</b>	<b>AFT CARGO COMPART TO AFT CARGO SMOKE DETECTORS</b>				
D12778				D13846		YC031-YM670
D12780				D13846		YC031-YM670
D12782				D13846		YC031-YM670
D12784				D13846		YC031-YM670
D12786				D13846		YC031-YM670
D12788				D13846		YC031-YM670
D12776		M2237				ALL
D12778		M2242				YC001-YC030
D12780		M2243				YC001-YC030
D12782		M2244				YC001-YC030
D12784		M2245				YC001-YC030
D12786		M2246				YC001-YC030
D12788		M2247				YC001-YC030
<b>W5098</b>	<b>NC2</b>	<b>AFT CARGO COMPT TO E2-2 SHELF</b>				
D46606P		AB0500DL	POS 12	D46606J	W5094	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D12774		M2237				YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D12792		M2248				YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652

**MASTER BUNDLE LIST**

D280A103

**91-21-13**

Section W5090

Page 1

May 11/2009





Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5098</b>	<b>NC2</b>	<b>AFT CARGO COMPT TO E2-2 SHELF (continued)</b>				
D12794		M2248				YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D12796		M2248				YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
<b>W5099</b>	<b>NB2</b>	<b>TCAS SUPPRESSION E1-5 TO M1908 (E1 RACK)</b>				
D41511J		AE0105A	POS 11	D41511P	W0151	YC001-YC030, YK901-YM670
D41511J D10159		AE0105A M01908	POS 11 //	D41511P		YC031-YC050 ALL

MASTER BUNDLE LIST

D280A103

91-21-13

Section W5090

Page 2 End

May 11/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5100</b>	<b>SB2*</b>	<b>J24 TO J20 &amp; J22: J-BOX INTERCONNECT BUNDLE</b>				
D40632P		AJ0020B	POS 05	D40632J	W0072	YC001-YC030, YK901-YM670
D40668P		AJ0022	POS 06	D40668J	W0076	YC001-YC030, YK901-YM670
D40698P		AJ0024	POS 03	D40698J	W0080	YC001-YC030, YK901-YM670
D02864		M1177				YC001-YC030, YK901-YM670
<b>W5101</b>	<b>NN2</b>	<b>AUDIO ENTERTAINMENT - AUDIO INTEGRATION BRKT AB0410 TO SIDEWALL DISC'S</b>				
D08429J			438/218/L069	D08429P		YK901-YM670
D08427J			438/218/R069	D08427P		YK901-YM670
D08539J			683/220/L069	D08539P		YK901-YM670
D08537J			683/220/R069	D08537P		YK901-YM670
D12169J		AB0410	POS 04	D12169P	W5115	YK901-YM670
D12171J		AB0410	POS 05	D12171P		YK901-YM670
<b>W5102</b>	<b>SA2</b>	<b>LEFT A/C PACK (STA 536L) DISC TO A/C PACK (SA2)</b>				
D04580J		AB0536L	POS 01	D04580P	W5526	YC001-YC030, YK901-YM670
D04580J		AB0536L	POS 01	D04580P		YC031-YC050
D40056J		AB0536L	POS 02	D40056P	W5104	ALL
D00706		M00223	566/164/L032			YM643-YM670
D00970		M00328	567/164/L032			YM643-YM670
D00858		M00355	540/ /			ALL
D00832		M00370	540/170/L025			ALL
D11050		M01745	650/144/L027			ALL
D00530		S00001	567/156/L034			YM643-YM670
D00532		S00002	576/158/L024			ALL
D10056		S00938	577/162/L031			YC001-YL430
D00100		T00405	538/165/L 30			ALL
D00172		T00407	644/158/L012			YM643-YM670
D00710		T00430	553/152/L017			YM643-YM670
D01288		T00438	583/161/L031			YM643-YM670
D03866		T00471	573/154/L030			YC001-YL430
D03916		T00481	584/162/L032			YC001-YL430
D03930		T00488	573/152/L033			YC001-YL430
D00524		V00023	652/148/R013			YM643-YM670
D00702		V00027	569/163/L024			YM643-YM670

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W5100

Page 1

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5102</b>	<b>SA2</b>	<b>LEFT A/C PACK (STA 536L) DISC TO A/C PACK (SA2) (continued)</b>				
D03862		V00139	655/147/L009			YC001-YL430
D03864		V00140	653/154/L028			YC001-YL430
<b>W5103</b>	<b>NA2</b>	<b>HF-1 E6-2 AND DIU E8-1 TO E3-3</b>				
D43359P		AE0303A	POS 06	D43359J	W0331	YK901-YM670
D40113P		AE0602A	POS 10	D40113J	W0621	YM643-YM670
D40075P		AE0801A	POS 05	D40075J	W0811	YK901-YM670
<b>W5104</b>	<b>LA2</b>	<b>E/E BAY TO L AC PACK (STA 536L) DISC. (LA2)</b>				
D40056P		AB0536L	POS 02	D40056J	W5102	ALL
D40246P		AE0202A	POS 01	D40246J	W0220	YC001-YC030, YK901-YM670
D40246P		AE0202A	POS 01	D40246J		YC031-YC050
D41800P		AE0303A	POS 24	D41800J	W0330	YC001-YL430
D41836P		AE0303A	POS 31	D41836J	W0330	YC001-YL430
D40244P		AE0401A	POS 29	D40244J	W0410	ALL
D00966		M00326	519/166/L057			ALL
D03856		M1440				YC001-YL430
D03868		T00472	500I+7/192/L003			YC001-YL430
<b>W5105</b>	<b>NB2</b>	<b>HF-2 E8-1 TO E3-3</b>				
D43361P		AE0303A	POS 10	D43361J	W0331	YK907-YM670
D40115P		AE0602A	POS 08	D40115J	W0621	YM643-YM670
D40077P		AE0801A	POS 06	D40077J	W0811	YK907-YL430
<b>W5107</b>	<b>NA2</b>	<b>VHF-1 &amp; VHF-2 TO E3-3</b>				
D04123P		AE0103A	POS 12	D04123J	W0131	YK901-YM670
D04125J		AE0105A	POS 01	D04125P	W0151	YK901-YM670
D43314P		AE0303A	POS 08	D43314J	W0331	YK910-YL401, YL430, YM652-YM670
D43367P		AE0303A	POS 11	D43367J	W0331	YK901-YM670

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W5100

Page 2 End

Aug 10/2009



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5110</b>	<b>LA2</b>	<b>P91 (AFT DISC) TO E/E BAY</b>				
D40260P		AE0201A	POS 12	D40260J	W0212	YC001-YC030, YK901-YM670
D40340P		AE0201A	POS 19	D40340J	W0212	YC001-YC030, YK901-YM670
D40338P		AE0402A	POS 07	D40338J	W0422	YC001-YC030, YK901-YM670
D10330		M03054	378/158/L005			YC001-YC030, YK901-YM670
D10342		M3055				YC001-YC030, YK901-YM670
D11432		P0091				YC001-YC030, YK901-YM670
<b>W5111</b>	<b>NA2</b>	<b>EE INTER-RACK - LEFT (E1-X TO E3-X)</b>				
D10175		AB0372				YC001-YC030, YK901-YM670
D45133P		AE0101A	POS 03	D45133J	W0111	YC001-YC030, YK901-YM670
D41153P		AE0101A	POS 11	D41153J	W0111	YC012-YC030, YK901-YM670
D45113P		AE0101A	POS 19	D45113J	W0111	YC001-YC030, YK901-YM670
D45115J		AE0102A	POS 02	D45115P	W0121	YC001-YC030, YK901-YM670
D45111P		AE0301A	POS 07	D45111J	W0311	YC001-YC030, YK901-YM670
D45131P		AE0301A	POS 08	D45131J	W0311	YC001-YC030, YK901-YM670
D45151P		AE0301A	POS 09	D45151J	W0311	YC001-YC030, YK901-YM670
D45177P		AE0302A	POS 17	D45177J	W0321	YC001-YC030, YK901-YM670
D45157P		AE0302A	POS 18	D45157J	W0321	YC001-YC030, YK901-YM670
D45137P		AE0302A	POS 19	D45137J	W0321	YC001-YC030, YK901-YM670
D45117P		AE0302A	POS 20	D45117J	W0321	YC001-YC030, YK901-YM670

### MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W5110

Page 1

May 11/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5111</b>	<b>NA2</b>	<b>EE INTER-RACK - LEFT (E1-X TO E3-X) (continued)</b>				
D43307P		AE0303A	POS 12	D43307J	W0331	YC001-YC030, YK901-YM670
D43321P		AE0303A	POS 13	D43321J	W0331	YC001-YC030, YK901-YM670
D43305P		AE0303A	POS 20	D43305J	W0331	YC001-YC030, YK901-YM670
D45211J		AE0502A	POS 12	D45211P	W0521	YC001-YC030, YK901-YM670
<b>W5112</b>	<b>LA1</b>	<b>P91 (AFT DISC) TO E/E BAY.</b>				
D11284			727/172/L015			ALL
D10878			821/205/L019			ALL
D49996P		AE0201A	POS 01	D49996J	W0212	ALL
D40934P		AE0201A	POS 02	D40934J	W0212	ALL
D40342P		AE0201A	POS 03	D40342J	W0212	ALL
D40256P		AE0201A	POS 4	D40256J	W0212	ALL
D01986		M00753	855/179/L049			ALL
D11434		P0091				ALL
D01990		S00692	958/205/R3			ALL
D12346		S00945	915/165/R10			ALL
D12348		S00945	915/165/R10			ALL
<b>W5115</b>	<b>NN2</b>	<b>AUDIO ENTERTAINMENT -E4-2 TO AUDIO INTEGRATION BRKT AB0401 - ROCKWELL</b>				
D10527A			E004-02/ /			YK901-YM670
D10527C			E004-02/ /			YK901-YM670
D10527B			E008-01/ /			YK901-YM670
D12163P		AB0410	POS 01	D12163J	W5303	YK901-YM670
D12165P		AB0410	POS 02	D12165J	W5303	YK901-YM670
D12167P		AB0410	POS 03	D12167J	W5303	YK901-YM670
D12169P		AB0410	POS 04	D12169J	W5101	YK901-YM670
D10527		M1956				YK901-YM670
<b>W5117</b>	<b>NN2</b>	<b>AUDIO ENT. - AUDIO INTEGRATION BRKT AB0410 TO BITE PNL (PROV) STA 984</b>				
D12211J		AB0410	POS 06	D12211P		YK901-YM670
D10587		M02039	984/284/R036			YK901-YM670

MASTER BUNDLE LIST

D280A103

91-21-13

Section W5110

Page 2 End

Aug 10/2009



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5121</b>	<b>NB2</b>	<b>EE INTER-RACK - RIGHT (E1-X TO E3-X)</b>				
D11804		AB0372				YC001-YC030, YK901-YM670
D45143J		AE0104A	POS 05	D45143P	W0141	YC001-YC030, YK901-YM670
D45123J		AE0104A	POS 12	D45123P	W0141	YC001-YC030, YK901-YM670
D45125J		AE0105A	POS 09	D45125P	W0151	YC001-YC030, YK901-YM670
D45121P		AE0301A	POS 32	D45121J	W0313	YC001-YC030, YK901-YM670
D45141P		AE0301A	POS 33	D45141J	W0313	YC001-YC030, YK901-YM670
D45127P		AE0302A	POS 46	D45127J	W0321	YC001-YC030, YK901-YM670
D45147P		AE0302A	POS 56	D45147J	W0321	YC001-YC030, YK901-YM670
D43323P		AE0303A	POS 33	D43323J	W0331	YC001-YC030
D43323P		AE0303A	POS 42	D43323J	W0331	YK901-YM670
D45213J		AE0502A	POS 11	D45213P	W0523	YC001-YC030, YK901-YM670
<b>W5122</b>	<b>LA1*</b>	<b>P91 TO TB1802, TB1804,&amp; TB5180</b>				
D48126P		AJ0048A	POS 02	D48126J	W0088	YC004-YM670
D11416		P091-00	371/181/L016			ALL
<b>W5124</b>	<b>LN1*</b>	<b>AB0727 TO J11 (WITH E6)</b>				
D46602J		AB0727R	POS 02	D46602P	W6124	ALL
D46618P		AJ0011	POS 01	D46618J	W0122	YM643-YM670
D46620P		AJ0011	POS 01	D46620J	W0122	YC001-YL430
D46616P		AJ0011	POS 02	D46616J	W0122	YM643-YM670
D46622P		AJ0011	POS 02	D46622J	W0122	YC008-YL430
D46622P		J11		D46622J	W0122	YC001-YC007

### MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W5120

Page 1 End

May 11/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5134</b>	<b>LA1</b>	<b>DISC AB0500DL TO E2-2</b>				
D40312J		AB0500DL	POS 07	D40312P	W5224	ALL
D43008P		AE0202A	POS 19	D43008J	W0220	YC001-YC030, YK901-YM670 YC031-YC050
D43008P		AE0202A	POS 19	D43008J		
<b>W5137</b>	<b>NA2</b>	<b>VOR ANTENNA LEFT - RF PWR DIV-1 TO R315 LOC ANTENNA SWITCH RELAY-1</b>				
D03779		M01726	309/180/R021			ALL
D02113		R00315	306/180/R021			ALL
<b>W5139</b>	<b>NB2</b>	<b>VOR ANTENNA RIGHT - RF PWR DIV-2 TO R316 LOC ANTENNA SWITCH RELAY-2</b>				
D03785		M01727	302/180/R020			ALL
D02121		R00316	300/178/R022			ALL

MASTER BUNDLE LIST

D280A103

91-21-13

Section W5130

Page 1 End

May 11/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5142</b>	<b>LN1*</b>	<b>P91 TO AB0340A DISCONNECT BRACKET</b>				
D40054P		AB0340A	POS 01	D40054J	W3058	YC001-YC030, YK901-YM670
D40054P		AB0340A	POS 01	D40054J		YC031-YC050
D40102P		AB0340A	POS 09	D40102J	W3158	ALL
<b>W5146</b>	<b>LN2</b>	<b>SEC 46 TO WTR QTY AND MISC</b>				
D40148J				D40148P	W3058	YC001-YC030, YK901-YM670
D40148J				D40148P		YC031-YC050
D40150J				D40150P	W3144	ALL
D40152P				D40152J	W5230	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40152P				D40152J		YK913-YK917, YK920, YL430, YM653-YM670
D11702		M01722	860/198/L13			ALL
D11788		M01723				ALL
D11786		S01033	1039/231/L046			ALL
D11716		S01034	860/177/L030			ALL
D00192		T00408	951/186/R036			ALL

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W5140

Page 1 End

Aug 10/2009





# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5156</b>	<b>SA2*</b>	<b>PSEU &amp; AIR/GND SYS: M2061 &amp; J22,J20 TO E/E BAY (ROUTE LEFT)</b>				
D40458P		AE0101A	POS 01	D40458J	W0111	YC001-YC002, YC007-YC030, YK901-YM670
D40454P		AE0101A	POS 02	D40454J	W0111	YC001-YC030, YK901-YM670
D40452P		AE0101A	POS 05	D40452J	W0111	YC001-YC030, YK901-YM670
D40498P		AE0103A	POS 11	D40498J	W0131	YC001-YC030, YK901-YM670
D40456P		AE0202A	POS 09	D40456J	W0220	YC001-YC030, YK901-YM670
D40724P		AE0202A	POS 28	D40724J	W0220	YC001-YC030, YK901-YM670
D40460P		AE0301A	POS 19	D40460J	W0311	YC001-YC030, YK901-YM670
D40594P		AE0302A	POS 16	D40594J	W0321	YC001-YC030, YK901-YM670
D40462P		AE0302A	POS 23	D40462J	W0321	YC001-YC030, YK901-YM670
D41824P		AE0303A	POS 30	D41824J	W0330	YC001-YC030, YK901-YL430
D40636P		AJ0020B	POS 04	D40636J	W0072	YC001-YC030, YK901-YM670
D40642P		AJ0020B	POS 07	D40642J	W0072	YC001-YC030, YK901-YM670
D40878P		AJ0020C	POS 02	D40878J	W0074	YC028-YC030, YK901-YM670
D40678P		AJ0022	POS 01	D40678J	W0076	YC001-YC030, YK901-YL430
D40666P		AJ0022	POS 03	D40666J	W0076	YC001-YC030, YK901-YM670
D40670P		AJ0022	POS 04	D40670J	W0076	YC001-YC030, YK901-YM670
D40676P		AJ0022	POS 05	D40676J	W0076	YC001-YC030, YK901-YM670
D40680P		AJ0022	POS 08	D40680J	W0076	YC001-YC002, YC007-YC030, YK901-YM670
D46116P		AJ0046A	POS 13	D46116J	W0066	YC004-YC030, YK901-YM670

**MASTER BUNDLE LIST**

D280A103

**91-21-13**

Section W5150

Page 1

May 11/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5156</b>	<b>SA2*</b>	<b>PSEU &amp; AIR/GND SYS: M2061 &amp; J22,J20 TO E/E BAY (ROUTE LEFT) (continued)</b>				
D48112P		AJ0048A	POS 16	D48112J	W0088	YC004-YC030, YK901-YM670
D48114P		AJ0048A	POS 17	D48114J	W0088	YC004-YC030, YK901-YM670
D40578P		AP0900A	POS 04	D40578J	W0001	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40578P		AP0900A	POS 04	D40578J		YK913-YK917, YK920, YL430, YM653-YM670
D40576P		AP1800B	POS 02	D40576J	W0018	YC001-YC030, YK901-YM670
D10982		M02061	212/180/R020			YC001-YC030, YK901-YM670
D11138		M02061	212/180/R020			YC001-YC030, YK901-YM670
D11142		M02061	212/180/R020			YC001-YC030, YK901-YM670
D00164		M100				YC001-YC030, YK901-YM670
<b>W5158</b>	<b>SB2*</b>	<b>PSEU &amp; AIR/GND SYS: M2061 &amp; J24,J20 TO E/E BAY (ROUTE RIGHT)</b>				
D40488P		AE0103A	POS 08	D40488J	W0131	ALL
D40490J		AE0104A	POS 20	D40490P	W0141	ALL
D40426P		AE0302A	POS 28	D40426J	W0321	ALL
D40486P		AE0302A	POS 33	D40486J	W0321	ALL
D40484P		AE0402A	POS 30	D40484J	W0422	ALL
D40618P		AE0402A	POS 35	D40618J	W0422	ALL
D40884P		AJ0020A	POS 02	D40884J	W0074	YC028-YM670
D40634P		AJ0020B	POS 01	D40634J	W0072	ALL
D40638P		AJ0020B	POS 02	D40638J	W0072	ALL
D40640P		AJ0020B	POS 03	D40640J	W0072	ALL
D40858P		AJ0020D	POS 01	D40858J	W0072	YC031-YM670
D40692P		AJ0024	POS 04	D40692J	W0080	ALL
D40700P		AJ0024	POS 05	D40700J	W0080	ALL
D40702P		AJ0024	POS 06	D40702J	W0080	ALL
D46120P		AJ0046B	POS 03	D46120J	W0066	YC004-YM670
D46100P		AJ0046B	POS 11	D46100J	W0066	YC004-YM670

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W5150

Page 2

May 11/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5158</b>	<b>SB2*</b>	<b>PSEU &amp; AIR/GND SYS: M2061 &amp; J24,J20 TO E/E BAY (ROUTE RIGHT) (continued)</b>				
D48116P		AJ0048A	POS 13	D48116J	W0088	YC004-YM670
D40750P		AP0600B	POS 02	D40750J	W0044	YC004-YM670
D03464		M01915	213/191/R025			ALL
D11140		M02061	212/180/R020			ALL
D14212		M02566	360/160/25			YK907-YK909, YL421-YL430
D00438		T00404	391/166/R011			ALL
D11880		V157				ALL

MASTER BUNDLE LIST

D280A103

91-21-13

Section W5150

Page 3 End

May 11/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5160</b>	<b>RB2*</b>	<b>PSEU &amp; AIR/GND SYS: M2061 &amp; J4,J24 TO E/E BAY (ROUTE RIGHT)</b>				
D11134		AB0250A	POS 01			YC004-YC030, YK901-YM670
D40292P		AB0340B	POS 06	D40292J	W4142	YC001-YC030, YK901-YM670
D40464P		AE0101B	POS 02	D40464J	W0111	YC001-YC030, YK901-YM670
D40466P		AE0103A	POS 14	D40466J	W0131	YC001-YC030, YK901-YM670
D40468P		AE0302A	POS 36	D40468J	W0321	YC001-YC030, YK901-YM670
D40470P		AE0302A	POS 37	D40470J	W0321	YC001-YC030, YK901-YM670
D40952P		AE0302A	POS 42	D40952J	W0321	YC001-YC030, YK901-YM670
D40472P		AE0402A	POS 33	D40472J	W0422	YC001-YC030, YK901-YM670
D40474P		AE0402A	POS 37	D40474J	W0422	YC001-YC030, YK901-YM670
D40169P		AE0402A	POS 40	D40169J	W0422	YK901-YM670
D40612P		AJ0004	POS 05	D40612J	W0094	YK901-YM670
D40658P		AJ0004	POS 09	D40658J	W0094	YK901-YM670
D40610P		AJ0004	POS 10	D40610J	W0094	YC001-YC030, YK901-YM670
D40694P		AJ0024	POS 07	D40694J	W0080	YC001-YC030, YK901-YM670
D43906P		AJ0039A	POS 04	D43906J	W0082	YK907-YL430
D46102P		AJ0046A	POS 14	D46102J	W0066	YC004-YC030, YK901-YM670
D46122P		AJ0046A	POS 16	D46122J	W0066	YC004-YC030, YK901-YM670
D40580P		AP0900A	POS 07	D40580J	W0003	YC001-YC030, YK901-YL429, YM643-YM652
D40580P		AP0900A	POS 07	D40580J		YL430, YM653-YM670
D02537		M01439	186/203/L005			YC001-YC030, YK901-YM670
D10984		M02061	212/180/R020			YC001-YC030, YK901-YM670
D10986		M02061	212/180/R020			YC001-YC030, YK901-YM670

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W5160

Page 1

May 11/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5160</b>	<b>RB2*</b>	<b>PSEU &amp; AIR/GND SYS: M2061 &amp; J4,J24 TO E/E BAY (ROUTE RIGHT) (continued)</b>				
D10988		M02061	212/180/R020			YC001-YC030, YK901-YM670
D44278		M02604	192/200/L007			YK907-YL430
<b>W5161</b>	<b>LA2</b>	<b>E1-1, E3-1, E5-2</b>				
D41145P		AE0101A	POS 04	D41145J	W0111	ALL
D41155P		AE0101A	POS 20	D41155J	W0111	ALL
D43145P		AE0301A	POS 15	D43145J	W0311	YC001-YC030, YK901-YM670
D43145P		AE0301A	POS 15	D43145J		YC031-YC050
D43155P		AE0301A	POS 16	D43155J	W0311	YC001-YC030, YK901-YM670
D43155P		AE0301A	POS 16	D43155J		YC031-YC050
D45245J		AE0502A	POS 14	D45245P	W0521	ALL
D45255J		AE0502A	POS 15	D45255P	W0521	ALL
D45265J		AE0502A	POS 16	D45265P	W0521	ALL
D03691		M01751	409.479/205/L035			ALL
<b>W5162</b>	<b>LB2*</b>	<b>LEFT WING/BODY PRESSURE SEAL DISC TO E/E BAY</b>				
D11160		AB0237A	POS 01			ALL
D39921		AC0520				ALL
D40130P		AE0202A	POS 25	D40130J	W0220	YC001-YC030, YK901-YM670
D40130P		AE0202A	POS 25	D40130J		YC031-YC050
D48134P		AJ0048A	POS 21	D48134J	W0088	YC004-YM670
<b>W5163</b>	<b>RB2*</b>	<b>E1-1, E1-5, E3-1, E5-2</b>				
D41147P		AE0101B	POS 11	D41147J	W0111	ALL
D41157P		AE0101B	POS 12	D41157J	W0111	ALL
D41557J		AE0105A	POS 07	D41557P	W0151	YC001-YC030, YK901-YM670
D41557J		AE0105A	POS 07	D41557P		YC031-YC050
D43147P		AE0301A	POS 28	D43147J	W0313	YC001-YC030, YK901-YM670
D43147P		AE0301A	POS 28	D43147J		YC031-YC050
D43157P		AE0301A	POS 29	D43157J	W0313	YC001-YC030, YK901-YM670
D43157P		AE0301A	POS 29	D43157J		YC031-YC050
D45247J		AE0502A	POS 04	D45247P	W0523	ALL

MASTER BUNDLE LIST

D280A103

91-21-13

Section W5160

Page 2

May 11/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5163</b>	<b>RB2*</b>	<b>E1-1, E1-5, E3-1, E5-2 (continued)</b>				
D45257J		AE0502A	POS 05	D45257P	W0523	ALL
D03697		M01754	430.415/205/R035			ALL
D02127		R00316	300/178/R022			ALL
<b>W5164</b>	<b>LA1*</b>	<b>LEFT WING PRESS SEAL CONN TO E/E BAY</b>				
D39933		AC0520				ALL
D40132P		AE0201A	POS 16	D40132J	W0212	ALL
D40718P		AE0201A	POS 17	D40718J	W0212	ALL
<b>W5166</b>	<b>SN2</b>	<b>LEFT WING BODY PRESS SEAL TO E1-1</b>				
D39901		AC0520				ALL
D40122P		AE0101A	POS 18	D40122J	W0111	ALL
<b>W5168</b>	<b>SB2*</b>	<b>LEFT WING/BODY PRESS SEAL TO E/E BAY</b>				
D39929		AC0520				ALL
D40138P		AE0202A	POS 08	D40138J	W0220	YC001-YC030, YK901-YM670
D40138P		AE0202A	POS 08	D40138J		YC031-YC050

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W5160

Page 3 End

May 11/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5170</b>	<b>SA2*</b>	<b>LEFT WING/BODY PRESS SEAL TO E/E BAY</b>				
D40266P				D40266J	W5222	ALL
D40734J		AB0420A	POS 01	D40734P	W3170	ALL
D39925		AC0520				ALL
D48110P		AJ0048A	POS 07	D48110J	W0088	YC004-YM670
<b>W5172</b>	<b>LA2*</b>	<b>LEFT WING/BODY PRESS SEAL TO E/E BAY</b>				
D11158		AB0237A	POS 02			ALL
D40736J		AB0420A	POS 02	D40736P	W3170	ALL
D39917		AC0520				ALL
D48136P		AJ0048A	POS 19	D48136J	W0088	YC004-YM670

MASTER BUNDLE LIST

D280A103

91-21-13

Section W5170

Page 1 End

May 11/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5181</b>	<b>NB2</b>	<b>ATC BOTTOM ANT E1 RACK (S943) TO STA 355 (M44)</b>				
D00099		M00044	355/ /			ALL
D02707		S00943	316/163/L025			ALL
<b>W5182</b>	<b>NN2</b>	<b>ISPC TO P18(EE-BAY TO PC POWER OUTLET(P18))</b>				
D14008		M02566	360/160/25			YK907-YK909, YL421-YL430
D14012		M02622	P018-00/000/0000			YK907-YK909, YL421-YL430
<b>W5183</b>	<b>NA2</b>	<b>DME 1 E1-2 TO DME LEFT BOTTOM ANTENNA</b>				
D41215J		AE0102B	POS 02	D41215P	W0121	YC001-YC030, YK901-YM670
D41215J		AE0102B	POS 02	D41215P		YC031-YC050
D00093		M00042	580/144/0000			ALL
<b>W5185</b>	<b>NB2</b>	<b>DME 2 E1-5 TO DME RIGHT BOTTOM ANTENNA</b>				
D41515J		AE0105A	POS 12	D41515P	W0151	YC001-YC030, YK901-YM670
D41515J		AE0105A	POS 12	D41515P		YC031-YC050
D00095		M00043	641/143/0			ALL
<b>W5189</b>	<b>NA3</b>	<b>E4-1 AUDIO NO. 1</b>				
D04269J		AE0102A	POS 08	D04269P	W0121	YC001-YC030, YK901-YM670
D04195P		AE0103A	POS 18	D04195J	W0131	YC001-YC030, YK901-YM670
D04271P		AE0301A	POS 01	D04271J	W0311	YC001-YC030, YK901-YM670
D43315P		AE0303A	POS 22	D43315J	W0331	YC001-YC030
D04287P		AE0401A	POS 17	D04287J	W0411	YC001-YC030, YK901-YM670
D08123P		AE0401A	POS 21	D08123J	W0411	YC001-YC030, YK901-YM670
D40117P		AE0602A	POS 05	D40117J	W0621	YM643-YM670
D08189P		AE0801A	POS 01	D08189J	W0811	YC001-YC007
D08189P		AE0801A	POS 01	D08189J		YC008-YC011
D08189P		AE0801A	POS 04	D08189J	W0811	YK907-YL430
D48389P		AE0801B	POS 06	D48389J	W0813	YC007-YC030
D48389P		AE0801C	POS 07	D48389J	W0813	YC001-YC006

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W5180

Page 1

May 11/2009





# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5191</b>	<b>NB3</b>	<b>E4-1 AUDIO NO. 2</b>				
D04273J		AE0104A	POS 17	D04273P	W0141	YC001-YC030, YK901-YM670
D04197J		AE0105A	POS 04	D04197P	W0151	YC001-YC030, YK901-YM670
D04277P		AE0301A	POS 37	D04277J	W0313	YC001-YC030, YK901-YM670
D43331P		AE0303A	POS 38	D43331J	W0331	YK901-YM670
D04289P		AE0401A	POS 16	D04289J	W0411	YK901-YM670
D04285P		AE0401A	POS 19	D04285J	W0411	YC001-YC030, YK901-YM670
D40119P		AE0602A	POS 07	D40119J	W0621	YM643-YM670
D08002P		AE0801A	POS 08	D08002J	W0811	YK907-YL430

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W5190

Page 1 End

May 11/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5202</b>	<b>RN2</b>	<b>AP0900A BRKT TO GLARESHIELD DIMMER CONTROL UNITS (P9) RN2</b>				
D40944P		AP0900A	POS 11	D40944J	W0001	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40944P		AP0900A	POS 11	D40944J		YC031-YC050, YK913-YK917, YK920, YL430, YM653-YM670
D11930		M01916	P009-00/ /			ALL
D11932		M01917	P009-00/ /			ALL
D12592		M02186	/ /			ALL
<b>W5204</b>	<b>NN2</b>	<b>NITROGEN GEN SYSTEM E1-4 TO AC0538</b>				
D13928		AC0538				YC031-YC050, YK906-YM670
D40332J		AE0104A	POS 26	D40332P		YC031-YC050
D40332J		AE0104A	POS 26	D40332P	W0141	YK906-YM670
D13838		P63				YC031-YC050, YK906-YM670
<b>W5205</b>	<b>SA2</b>	<b>EE INTER-RACK-LEFT (E1-1,E1-2,E3-1,E3-2,E5-2)</b>				
D45203P		AE0101A	POS 31	D45203J	W0111	YC001-YC030, YK901-YM670
D45201J		AE0102A	POS 10	D45201P	W0121	YC001-YC030, YK901-YM670
D45205P		AE0301A	POS 18	D45205J	W0311	YC001-YC030, YK901-YM670
D45207P		AE0302A	POS 14	D45207J	W0321	YC001-YC030, YK901-YM670
D45209J		AE0502A	POS 03	D45209P	W0521	YC001-YC030, YK901-YM670
D02119		R00315	306/180/R021			YC001-YC030, YK901-YM670
<b>W5208</b>	<b>NN2</b>	<b>NGS CONTROLLER TO PRESS SEALS AND AC0538</b>				
D13832		AC0538		D13928		YK911-YK917, YK919-YL401, YL427-YL430, YM651-YM670

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W5200

Page 1

May 11/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5208</b>	<b>NN2</b>	<b>NGS CONTROLLER TO PRESS SEALS AND AC0538 (continued)</b>				
D13934		DM0032	536/164/L036			YK911-YK917, YK919-YL401, YL427-YL430, YM651-YM670
D13970		DM0044	536/166/R037			YK911-YK917, YK919-YL401, YL427-YL430, YM651-YM670
D13804		M02559	500I+8/201/R012			YK911-YK917, YK919-YL401, YL427-YL430, YM651-YM670
D13806		M02559	500I+8/201/R012			YK911-YK917, YK919-YL401, YL427-YL430, YM651-YM670



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5222</b>	<b>SA2*</b>	<b>DISC AB0500DL TO MAIN WHEEL WELL</b>				
D40266J				D40266P	W5170	ALL
D40318P		AB0500DL	POS 04	D40318J	W5530	ALL
D40302P		AB0500DL	POS 09	D40302J	W5526	YC001-YC030, YK901-YM670
D40302P		AB0500DL	POS 09	D40302J		YC031-YC050
D46030J		AL0675B	POS 03	D46030P	W7522	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D46030J		AL0675B	POS 03	D46030P		YC031-YC050, YK913-YK917, YK920, YL430, YM653-YM670
D46032J		AL0720B	POS 02	D46032P	W7526	YC001-YK907, YL421
D46032J		AL0720B	POS 02	D46032P	W7128	YK908-YK912, YK918-YK919, YL401, YL422-YL429, YM643-YM670
D46032J		AL0720B	POS 02	D46032P		YK913-YK917, YK920, YL430
<b>W5224</b>	<b>RA1</b>	<b>MAIN WHEEL WELL TO AB0500DL AND CROWN</b>				
D40248P				D40248J	W6222	ALL
D40250P				D40250J	W6222	ALL
D40312P		AB0500DL	POS 07	D40312J	W5134	ALL
D40416P		AB0500DR	POS 08	D40416J	W6032	ALL
D46010J		AL0675A	POS 04	D46010P	W7122	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D46010J		AL0675A	POS 04	D46010P		YK913-YK917, YK920, YL430, YM653-YM670
D46036J		AL0720B	POS 03	D46036P	W7222	YC001-YK907, YL421
D46036J		AL0720B	POS 03	D46036P	W7128	YK908-YK912, YK918-YK919, YL401, YL422-YL429, YM643-YM670
D46036J		AL0720B	POS 03	D46036P		YK913-YK917, YK920, YL430

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W5220

Page 1 End

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5230</b>	<b>RB1</b>	<b>E/E BAY TO MWW-SYS B ELEC HYD PUMP</b>				
D40152J				D40152P	W5146	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D43084P		AE0202A	POS 13	D43084J	W0220	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D43084P D43062P		AE0202A AE0401A	POS 13 POS 45	D43084J D43062J	W0410	YC031-YC050 YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D01782		L00322	500A+10/150/L032			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D11718		M01721	857/196/L050			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D02666		M1104				YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D11428		P0091				YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D02690		S799				YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
<b>W5234</b>	<b>RB2</b>	<b>DISC AL0720A TO E1-3</b>				
D43010P		AE0103A	POS 15	D43010J	W0131	ALL



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5234</b>	<b>RB2</b>	<b>DISC AL0720A TO E1-3 (continued)</b>				
D46024J		AL0720A	POS 01	D46024P	W7126	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D46024J		AL0720A	POS 01	D46024P		YK913-YK917, YK920, YL430, YM653-YM670

---

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W5230

Page 2 End

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5248</b>	<b>LN2*</b>	<b>E/E BAY TO FWD AND AFT CARGO AREA</b>				
D40500J		AB0500DL	POS 05	D40500P	W6248	ALL
D40586P		AE0202A	POS 02	D40586J	W0220	YC001-YC030, YK901-YM670
D40586P		AE0202A	POS 02	D40586J	W0422	YC031-YC050
D40584P		AE0402A	POS 02	D40584J		ALL
D11758		L00185	435/203/L010			ALL
D11760		L00186	469/203/L005			ALL
D11764		L00187	500/203/R010			ALL
D11766		L00188	500A+13/203/R010			YM643-YM670
D11768		L01020	500B+13/203/L010			YM643-YM670
D11994		L01205	500F+15/203/R010			YC001-YL430
D11996		L01314	500G+15/205/L010			YC001-YL430
D12170		L01321	500B+13/203/R010			YC001-YL430
D12172		L01322	500D+15/203/R010			YC001-YL430

MASTER BUNDLE LIST

D280A103

91-21-13

Section W5240

Page 1 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity	
<b>W5257</b>	<b>NN2</b>	<b>FLIGHT RECORDER E3-2 SHELF TO CONTROL POSITION SENSORS</b>					
D43257P		AE0302A	POS 12	D43257J	W0321	ALL	
D00815		M00520	215/180/L020			ALL	
D00819		M00522	227/194/L020			ALL	
D00817		M01983	228/202/L011			ALL	

---

## MASTER BUNDLE LIST

D280A103

**91-21-13**  
Section W5250  
Page 1 End  
Aug 10/2009





# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5273</b>	<b>NA3</b>	<b>ADF ANTENNA -1</b>				
D42163P		AE0301A	POS 02	D42163J	W0311	YC001-YC030, YK901-YM670
D42163P D03663		AE0301A M01733	POS 02 694/ /R004	D42163J		YC031-YC050 ALL
<b>W5275</b>	<b>NB3</b>	<b>ADF ANTENNA -2</b>				
D42165P		AE0301A	POS 38	D42165J	W0313	YC001-YC030, YK901-YM670
D42165P D03665		AE0301A M01734	POS 38 / /	D42165J		YC031-YC050 ALL

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W5270

Page 1 End

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5293</b>	<b>NA2</b>	<b>RADIO ALTM XMTR ANT -1 (R/T) STA 450 TO E3-1</b>				
D03671		M01737	450/148/0000			ALL
<b>W5295</b>	<b>NA2</b>	<b>RADIO ALTM RCVR ANT -1 (R/T) STA 430 TO E3-1</b>				
D03675		M01739	430/148/0000			ALL
<b>W5297</b>	<b>NB2</b>	<b>RADIO ALTM XMTR ANT -2 (R/T) STA 390 TO E3-2</b>				
D03673		M01738	390/148/0000			ALL
<b>W5299</b>	<b>NB2</b>	<b>RADIO ALTM RCVER ANT -2 (R/T) STA 410 TO E3-2</b>				
D03677		M01740	410/148/0000			ALL

**MASTER BUNDLE LIST**

D280A103

**91-21-13**  
Section W5290  
Page 1 End  
Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5301</b>	<b>LG2</b>	<b>MACH TRIM SERVO, E1-1 TO AB1050L</b>				
D43393P		AB1050L	POS 02	D43393J	W3393	YC008-YM670
D04425P		AE0101A	POS 08	D04425J	W0111	ALL
D00545		M00414	1164/276/			YC001-YC007
<b>W5303</b>	<b>NN2</b>	<b>VIDEO - AB0340B TO EE BAY AND TB01802 TERMINAL TRACK - AUDIO &amp; PA</b>				
D12213P				D12213J	W3583	YK901-YM670
D45231P		AB0340B	POS 08	D45231J	W3583	ALL
D12163J		AB0410	POS 01	D12163P	W5115	YK901-YM670
D12165J		AB0410	POS 02	D12165P	W5115	YK901-YM670
D12167J		AB0410	POS 03	D12167P	W5115	YK901-YM670
D45227P		AE0103A	POS 16	D45227J	W0131	ALL
D40173P		AE0302A	POS 55	D40173J	W0321	YK901-YM670
D45279P		AE0801B	POS 07	D45279J	W0813	YC007-YC050
D45279P		AE0801C	POS 06	D45279J	W0813	YC001-YC006

MASTER BUNDLE LIST

D280A103

91-21-13

Section W5300

Page 1 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5310</b>	<b>LB2*</b>	<b>E2 TO E3</b>				
D40450P		AE0202A	POS 24	D40450J	W0220	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40450P D40448P		AE0202A AE0301A	POS 24 POS 11	D40450J D40448J	W0311	YC031-YC050 YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40448P D40726P		AE0301A AE0302A	POS 11 POS 03	D40448J D40726J	W0321	YC031-YC050 YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40446P		AE0302A	POS 04	D40446J	W0321	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W5310

Page 1 End

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5331</b>	<b>NA2</b>	<b>CMU INTERFACES E3-3 (LEFT)</b>				
D43345P		AE0303A	POS 17	D43345J	W0331	YK901-YM670
D43347P		AE0303A	POS 18	D43347J	W0331	YK901-YM670
D04115P		AE0401D	POS 13	D04115J	W0411	YK901-YM670
D04117P		AE0401D	POS 16	D04117J	W0411	YK901-YM670
<b>W5335</b>	<b>NB2</b>	<b>CMU INTERFACES E3-3 (RIGHT)</b>				
D43379P		AE0303A	POS 43	D43379J	W0331	YK901-YM670
D04007P		AE0401D	POS 14	D04007J	W0411	YK901-YM670
D04009P		AE0401D	POS 15	D04009J	W0411	YK901-YM670
<b>W5337</b>	<b>SN2</b>	<b>SERVICE INTERPHONE, TB205, E RACK, P19</b>				
D04499P				D04499J	W0048	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D06025			358/165/R006			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D04161P		AE0401A	POS 25	D04161J	W0411	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652

MASTER BUNDLE LIST

D280A103

91-21-13

Section W5330

Page 1 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5353</b>	<b>NA2</b>	<b>AUTOTHROTTLE SERVO MOTOR 1 TO E1-1</b>				
D41159P		AE0101A	POS 07	D41159J	W0111	ALL
D10025		M01836	//			ALL
<b>W5355</b>	<b>SN2</b>	<b>INTERPHONE - L WHEEL WELL</b>				
D06011			664/161/L071			ALL
<b>W5357</b>	<b>SN2</b>	<b>INTERPHONE - RIGHT WHEEL WELL</b>				
D06057			664/161/R072			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652

## MASTER BUNDLE LIST

D280A103

**91-21-13**  
Section W5350  
Page 1 End  
Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5363</b>	<b>NA2</b>	<b>ATC TOP ANT E1-2 TO S942 D2701 (COAX)</b>				
D04603J		AE0102B	POS 05	D04603P	W0121	YC001-YC030, YK901-YM670
D04603J D02701		AE0102B S00942	POS 05 316/163/L025	D04603P		YC031-YC050 ALL
<b>W5367</b>	<b>LC3</b>	<b>AUTOPILOT E1-1 TO ACCEL PCU SYSTEM - A</b>				
D04073P		AE0101A	POS 27	D04073J	W0111	ALL
D40053P		AE0302A	POS 02	D40053J	W0321	ALL
D43910P		AJ0039A	POS 03	D43910J	W0082	YK907-YL430
D42102J		AL0720A	POS 02	D42102P	W1022	ALL
D43100J		AL0720C	POS 01	D43100P	W1032	ALL
D01709		M00937	666/187/L020			ALL
D01827		M00943	670/193/L040			ALL
D01863		S00774	668/192/L040			ALL
<b>W5369</b>	<b>LE2</b>	<b>AUTOPILOT E1-1 TO ELEX PANEL AND TB803 - SYSTEM A</b>				
D04075P		AE0101A	POS 23	D04075J	W0111	ALL
D08313P		AF0213A	POS 05	D08313J	W0049	ALL
D00417		AF0222A	POS 03			ALL
D00383		M00219	223/202/L014			ALL
D00385		M00220	215/190/R015			ALL
D00397		M00221	215/196/L024			ALL
D02257		M01201	206/200/R015			ALL
D10553		M01201	206/200/R015			ALL
D10551		M01967	215/180/R020			ALL

## MASTER BUNDLE LIST

D280A103

91-21-13

Section W5360

Page 1 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5375</b>	<b>RD3</b>	<b>AUTOPILOT E1-4 TO ACCEC/PCU - SYSTEM B</b>				
D04077J		AE0104A	POS 15	D04077P	W0141	ALL
D42053P		AE0302A	POS 47	D42053J	W0321	ALL
D43908P		AJ0039A	POS 05	D43908J	W0082	YK907-YL430
D42100J		AL0720A	POS 03	D42100P	W1022	ALL
D43102J		AL0720D	POS 02	D43102P	W1032	ALL
D01707		M00937	666/187/L020			ALL
D01691		M01024	670/193/L050			ALL
D01859		S00772	673/192/L049			ALL

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W5370

Page 1 End

Aug 10/2009





Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5381</b>	<b>LA2</b>	<b>AUTOPILOT E1-1 TO AB1050L</b>				
D45551P			E001-01/ /	D45551J		YC020-YC030
D45501J		AB1050L	POS 05	D45501P	W7381	YC023-YM670
D45501P		AB1050L	POS 05	D45501J	W7381	YC020-YC022
D45551P		AE0101A	POS 36	D45551J		YC031-YC050
D45551P		AE0101A	POS 36	D45551J	W0111	YK901-YM670
<b>W5383</b>	<b>RB2</b>	<b>AUTOPILOT E1-4 TO AB1050R</b>				
D45503J		AB1050R	POS 06	D45503P	W7381	YC023-YC026
D45503J		AB1050R	POS 06	D45503P	W7383	YC028-YM670
D45503P		AB1050R	POS 06	D45503J	W7381	YC020-YC022
D45553J		AE0104A	POS 13	D45553P		YC020-YC050
D45553J		AE0104A	POS 13	D45553P	W0141	YK901-YM670

MASTER BUNDLE LIST

D280A103

91-21-13

Section W5380

Page 1 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5397</b>	<b>NB2</b>	<b>AUTOTHROTTLE SERVO MOTOR 2 TO E1-1</b>				
D41161P		AE0101B	POS 03	D41161J	W0111	ALL
D10027		M01837	//			ALL

---

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W5390

Page 1 End

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5409</b>	<b>NN2</b>	<b>DFDAU E3-2 SHELF TO DISCONNECT PANEL OF FLIGHT RECORDER</b>				
D43267P				D43267J	W0767	ALL
D43209P		AE0302A	POS 49	D43209J	W0321	ALL

---

**MASTER BUNDLE LIST**

D280A103

**91-21-13**  
Section W5400  
Page 1 End  
Aug 10/2009



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5411</b>	<b>NB2</b>	<b>VHF-2 ANTENNA-E/E TO STA 506 BOTTOM</b>				
D04137J				D04137P	W5417	YC017-YM670
D04137J			472/154/L004	D04137P	W5417	YC001-YC016
D04131J		AE0105A	POS 13	D04131P	W0151	YC001-YC030, YK901-YM670
D04131J		AE0105A	POS 13	D04131P		YC031-YC050
<b>W5413</b>	<b>NA2</b>	<b>VHF-1 ANTENNA-E/E TO STA 630.36</b>				
D04133P		AE0103A	POS 02	D04133J	W0131	YC020-YM670
D04141J		AE0105A	POS 06	D04141P	W5419	YC001-YC019
D00115		M00057	630/305/R005			ALL
<b>W5415</b>	<b>NC2</b>	<b>VHF-3 ANTENNA-E/E TO STA 470.88 BOTTOM</b>				
D43301P		AE0303A	POS 01	D43301J	W0331	YC001-YC030, YK901-YM670
D43301P		AE0303A	POS 01	D43301J		YC031-YC050
D00335		M00225	471/150/0000			ALL
<b>W5417</b>	<b>NB2</b>	<b>VHF-2 ANTENNA BOTTOM</b>				
D04137P				D04137J	W5411	ALL
D00117		M00058	727D+11/148/0000			ALL
<b>W5419</b>	<b>NA2</b>	<b>VHF-1 ANTENNA (TOP) E1-3 TO E1-5 BRACKET</b>				
D04133P		AE0103A	POS 02	D04133J	W0131	YC001-YC019
D04141P		AE0105A	POS 06	D04141J	W5413	YC001-YC019

### MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W5410

Page 1 End

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5431</b>	<b>NN2</b>	<b>-700 VOICE RECORDER (WITH E6)</b>				
D04371P		AE0401A	POS 23	D04371J	W0411	ALL
D00177		M00383	E006-01/ /			ALL

**MASTER BUNDLE LIST**

D280A103

**91-21-13**

Section W5430

Page 1 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity	
<b>W5457</b>	<b>RF2</b>	<b>AUTOPILOT E1-4 TO CONTROL STAND - SYSTEM B</b>					
D05971J		AE0104A	POS 02	D05971P	W0141	ALL	
D08315P		AF0222A	POS 04	D08315J	W0051	ALL	
D01673		M00219	223/202/L014			ALL	
D01675		M00220	215/190/R015			ALL	
D01713		M00221	215/196/L024			ALL	

## MASTER BUNDLE LIST

D280A103

**91-21-13**  
Section W5450  
Page 1 End  
Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5461</b>	<b>LA2</b>	<b>FLIGHT RECORDER E3-2 SHELF TO E1-1 AND E5-2 -REPLACE WQAR RUN CNTROL</b>				
D42311P		AE0101A	POS 06	D42311J	W0111	YC001-YC030, YK901-YM670
D43211P		AE0101A	POS 21	D43211J	W0111	YC001-YC030, YK901-YM670
D46461P		AE0101A	POS 22	D46461J	W0111	YC001-YC030, YK901-YM670
D43261P		AE0302A	POS 40	D43261J	W0321	YC001-YC030, YK901-YM670
D42261P		AE0302A	POS 41	D42261J	W0321	YC001-YC030, YK901-YM670
D42361P		AE0302A	POS 43	D42361J	W0321	YC001-YC030, YK901-YM670
D43217P		AE0302A	POS 50	D43217J	W0321	YK910-YK920, YL421-YM670
D44161P		AE0401A	POS 24	D44161J	W0410	YC001-YC030, YK901-YM670
D41561J		AE0502A	POS 17	D41561P	W0521	YC001-YC030, YK901-YM670
D45261J		AE0502A	POS 18	D45261P	W0521	YC001-YC030, YK901-YM670
D40803P		AE0801B	POS 02	D40803J	W0811	YK910-YK920, YL421-YM670
<b>W5463</b>	<b>RB2</b>	<b>FLIGHT RECORDER E3-2 SHELF TO E/E BAY SHELF</b>				
D45515P		AE0101A	POS 35	D45515J		YC031-YC050
D45515P		AE0101A	POS 35	D45515J	W0111	YK901-YM670
D41563P		AE0101B	POS 01	D41563J	W0111	ALL
D41163P		AE0101B	POS 08	D41163J	W0111	ALL
D41463J		AE0104A	POS 11	D41463P	W0141	ALL
D45517J		AE0104B	POS 02	D45517P		YC031-YC050
D45517J		AE0104B	POS 02	D45517P	W0141	YK901-YM670
D43263P		AE0302A	POS 44	D43263J	W0321	ALL
D42363P		AE0302A	POS 53	D42363J	W0321	ALL
D45263J		AE0502A	POS 06	D45263P	W0523	ALL

## MASTER BUNDLE LIST

D280A103

91-21-13

Section W5460

Page 1 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5501</b>	<b>LA2</b>	<b>ADIRU NO.1 TO AOA-L,ADM-L PITOT, AND TAT PROBE</b>				
D11294		A00023	192/225/L034			ALL
D45239J		AE0502A	POS 20	D45239P	W0521	ALL
D40087P		AJ0048A	POS 08	D40087J	W0088	YC004-YM670
D00277		M00171	268/191/L050			ALL
D03689		M01750	199.816/175/L013			ALL
D00365		T00433	192/204/			ALL
D10015		T433 J2				ALL
<b>W5502</b>	<b>SA2</b>	<b>LEFT A/C PACK (STA 536L) DISC TO A/C PACK (SA2)</b>				
D40844P		DISC BRKT		D40844J	W5504	YC029-YM670
D41500		DM0050	536/163/L009			ALL
D00856		M00355	540/ /			ALL
D00398		V00016	540/166/R001			ALL
D00392		V00018	581/158/L009			ALL
D00486		V00018	581/158/L009			YC001-YC028
D00488		V00018	581/158/L009			ALL
D00962		V00018	581/158/L009			ALL
D03886		V00143	542/157/L012			YC001-YL430
<b>W5503</b>	<b>NB2</b>	<b>ADIRU NO.2 TO AOA-R AND ADM-R PITOT</b>				
D11298		A00025	192/213/R034			YC001-YM652
D11300		A00026	192/224/R034			YC001-YM652
D45241J		AE0502A	POS 10	D45241P	W0523	YC001-YM652
D40097P		AJ0046B	POS 06	D40097J	W0066	YC004-YM652
D03695		M01753	200.618/177/R018			YC001-YM652
D14284		S1153				YK911-YK917, YK919-YL401, YL427-YL430, YM651-YM652
D00287		T00437	192/204/			YC001-YM652
D10017		T437 J2				YC001-YM652
<b>W5504</b>	<b>SA2</b>	<b>LEFT A/C PACK (STA 536L) DISC TO A/C PACK (SA2)</b>				
D40844J		DISC BRKT		D40844P	W5502	YC029-YM670
D00486		V00018	581/158/L009			YC029-YM670

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W5500

Page 1

Aug 10/2009





# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5506</b>	<b>SB2*</b>	<b>P8 TO E/E BAY</b>				
D11130		AB0250A	POS 04			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D10167		AB0250A	POS 06			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40806J		AE0104A	POS 19	D40806P	W0141	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40430P		AE0202A	POS 15	D40430J	W0220	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40950P		AE0302A	POS 15	D40950J	W0321	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D11288		AF0213A	POS 02			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D10171		AF0213A	POS 06			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40674P		AJ0022	POS 07	D40674J	W0076	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W5500

Page 2

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5506</b>	<b>SB2*</b>	<b>P8 TO E/E BAY (continued)</b>				
D40686P		AJ0023	POS 02	D40686J	W0078	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D43900P		AJ0039A	POS 01	D43900J	W0082	YK907-YK912, YK918-YK919, YL401-YL429
D46128P		AJ0046A	POS 05	D46128J	W0066	YC004-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D48120P		AJ0048A	POS 09	D48120J	W0088	YC004-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D48118P		AJ0048A	POS 22	D48118J	W0088	YC004-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40800P		AP0600B	POS 08	D40800J	W0044	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40804P		AP0900A	POS 18	D40804J	W0001	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40802P		AP1800B	POS 05	D40802J	W0018	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W5500

Page 3

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5506</b>	<b>SB2*</b>	<b>P8 TO E/E BAY (continued)</b>				
D44276		M02604	192/200/L007			YK907-YK912, YK918-YK919, YL401-YL429
D00576		P008				YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D01078		P008-01	P008-00/ /			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>I W5510</b>	<b>SA2*</b>	<b>P8 TO E/E BAY AND J BOX.</b>				
D11128		AB0250A	POS 05			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40496J		AE0104A	POS 21	D40496P	W0141	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40428P		AE0201A	POS 08	D40428J	W0212	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D11286		AF0213A	POS 03			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40672P		AJ0022	POS 02	D40672J	W0076	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40688P		AJ0023	POS 05	D40688J	W0078	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D46130P		AJ0046A	POS 01	D46130J	W0066	YC004-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D48122P		AJ0048A	POS 03	D48122J	W0088	YC004-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W5510

Page 1

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5514</b>	<b>SA2</b>	<b>FLIGHT DECK PANEL LIGHTING (SA2)</b>				
D40826J		AE0104A	POS 27	D40826P	W0141	YC001-YC030, YK901-YM670
D46104P		AJ0046A	POS 11	D46104J	W0066	YC004-YC030, YK901-YM670
D40822P		AP0600B	POS 03	D40822J	W0044	YC001-YC030, YK901-YM670
D40824P		AP0900A	POS 05	D40824J	W0003	YC001-YC030, YK901-YL429, YM643-YM652
D40824P D40830P		AP0900A AP1800B	POS 05 POS 07	D40824J D40830J	W0018	YL430, YM653-YM670 YC001-YC030, YK901-YM670
D00940		M00315	205/209/R006			YC001-YC030, YK901-YM670
D01172		M00315	205/209/R006			YC001-YC030, YK901-YM670
D01344		M00469	J019-00/ /			YC001-YC030, YK901-YM670
D01346		M00469	J019-00/ /			YC001-YC030, YK901-YM670
D02866		M00469	J019-00/ /			YC001-YC030, YK901-YM670
D00776		S00128	190/208/R002			YC001-YC030, YK901-YM670

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W5510

Page 2 End

Aug 10/2009



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5526</b>	<b>SA2</b>	<b>DISC AB0500DL TO E1-4, E4-1 (SA2)</b>				
D40302J		AB0500DL	POS 09	D40302P	W5222	YC001-YC030, YK901-YM670
D04580P		AB0536L	POS 01	D04580J	W5102	YC001-YC030, YK901-YM670
D43016J		AE0104A	POS 22	D43016P	W0141	YC001-YC030, YK901-YM670
D41842P		AE0303A	POS 27	D41842J	W0330	YC001-YC030, YK901-YL430
D43018P		AE0401A	POS 44	D43018J	W0410	YC001-YC030, YK901-YM670
D00534 D03940		S00003 S00934	370/196/L056 520/160/L017			YM643-YM670 YC001-YC030, YK901-YL430
D41502		STA0536L				YC001-YC030, YK901-YM670

### MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W5520

Page 1 End

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5530</b>	<b>SA2*</b>	<b>DISC AB0500DL TO E3-2</b>				
D40318J		AB0500DL	POS 04	D40318P	W5222	ALL
D43022P		AE0302A	POS 24	D43022J	W0321	ALL
D46028J		AL0675B	POS 04	D46028P	W7230	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D46028J		AL0675B	POS 04	D46028P		YK913-YK917, YK920, YL430, YM653-YM670

MASTER BUNDLE LIST

D280A103

91-21-13

Section W5530

Page 1 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5562</b>	<b>SN2</b>	<b>WING BODY PRESS SEAL TO RADAR BAY</b>				
D39913		AC0520				ALL
D11304		M01827	228/182/R020			ALL
D11352		M01827	228/182/R020			ALL
<b>W5564</b>	<b>SN2*</b>	<b>WING BODY PRESS SEAL TO E/E BAY</b>				
D39909		AC0520				ALL
D40136P		AE0202A	POS 07	D40136J	W0220	YC001-YC030, YK901-YM670 YC031-YC050
D40136P		AE0202A	POS 07	D40136J		
<b>W5566</b>	<b>LB1</b>	<b>P18 LEFT CAB CEILING TO WING/BODY DISCBUNDLE A</b>				
D39905		AC0520				ALL
D40118P		AE0202A	POS 14	D40118J	W0220	YC001-YC030, YK901-YM670 YC031-YC050
D40118P		AE0202A	POS 14	D40118J		
<b>W5568</b>	<b>LN1*</b>	<b>LEFT WING BODY PRESS SEAL TO E/E BAY</b>				
D41854J		AB0500DL	POS 01	D41854P	W1128	ALL
D05348J		AB0500DL	POS 02	D05348P	W1128	ALL
D05346J		AB0500DL	POS 03	D05346P	W1134	ALL
D41852J		AB0500DL	POS 10	D41852P	W1134	ALL
D39937		AC0520				ALL
D40120P		AE0101A	POS 14	D40120J	W0111	ALL
D40258P		AE0201A	POS 23	D40258J	W0212	ALL

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W5560

Page 1 End

Aug 10/2009





# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5580</b>	<b>SN2</b>	<b>RADAR BAY TO WHEEL WELL DISC STA 675L-CENTER TANK</b>				
D04850J		AL0675B	POS 02	D04850P	W7580	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D04850J		AL0675B	POS 02	D04850P		YK913-YK917, YK920, YL430, YM653-YM670
D11308		M01827	228/182/R020			ALL

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W5580

Page 1 End

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5592</b>	<b>SN2</b>	<b>SEC 47 OVHT DETECTION TO SEC 48 OVHT DETECTION</b>				
D00862		M00275	1016/202/L011			ALL
D00864		M00276	1045/ /			ALL



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5603 NN2 E3-2 SHELF (DFDAU) TO LH BRAKE PRESSURE XMTRS</b>						
D43203P		AE0302A	POS 11	D43203J	W0321	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D00821		M00517	666/193/R048			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D02909		T00492	727/187/L020			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D02913		T00494	685/195/L065			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D11995		T03019	727/187/			YC031-YK907, YL421
<b>W5605 NN2 E1-3 SHELF (DFDAU) TO RH BRAKE PRESSURE XMTRS</b>						
D43205P		AE0302A	POS 38	D43205J	W0321	ALL
D02911		T00493	727/189/L008			ALL
D02915		T00495	692/192/L065			ALL



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5610</b>	<b>SA2*</b>	<b>E1 TO E2, E3</b>				
D40344P		AE0103A	POS 10	D40344J	W0131	ALL
D40346J		AE0104A	POS 28	D40346P	W0141	ALL
D40348P		AE0202A	POS 10	D40348J	W0220	YC001-YC030, YK901-YM670
D40348P		AE0202A	POS 10	D40348J		YC031-YC050
D40350P		AE0302A	POS 06	D40350J	W0321	ALL
D40940P		AE0302A	POS 07	D40940J	W0321	ALL
<b>W5612</b>	<b>SN2*</b>	<b>AP0600B TO E/E BAY</b>				
D40358P		AE0201A	POS 18	D40358J	W0212	ALL
D40360P		AE0202A	POS 16	D40360J	W0220	YC001-YC030, YK901-YM670
D40360P		AE0202A	POS 16	D40360J		YC031-YC050
D40362P		AE0302A	POS 05	D40362J	W0321	ALL
D40356P		AE0402A	POS 31	D40356J	W0422	ALL
D40930P		AE0402A	POS 36	D40930J	W0422	ALL
D40352P		AP0600B	POS 16	D40352J	W0044	ALL

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W5610

Page 1 End

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5719</b>	<b>LA2</b>	<b>INTERRACK E1-1 TO E1-2,E1-3 AND E4-2</b>				
D41125P		AE0101A	POS 25	D41125J	W0111	ALL
D41211J		AE0102A	POS 01	D41211P	W0121	YC001-YC030, YK901-YM670
D41211J		AE0102A	POS 01	D41211P		YC031-YC050
D41509P		AE0103A	POS 19	D41509J	W0131	ALL
D42111P		AE0402A	POS 01	D42111J	W0422	ALL

**MASTER BUNDLE LIST**

D280A103

**91-21-13**

Section W5710

Page 1 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5721</b>	<b>LE2</b>	<b>E1-1 TO E1-2 TO E1-4</b>				
D41121P		AE0101A	POS 17	D41121J	W0111	ALL
D41127J		AE0102A	POS 13	D41127P	W0121	YC001-YC030, YK901-YM670
D41127J		AE0102A	POS 13	D41127P		YC031-YC050
D41129J		AE0104A	POS 18	D41129P	W0141	ALL
<b>W5723</b>	<b>RB2*</b>	<b>INTERRACK E1-4 TO E1-1,E1-2,E1-3</b>				
D40063P		AE0101B	POS 05	D40063J	W0111	YC001-YC030, YK901-YM670
D43317P		AE0101B	POS 10	D43317J	W0111	YC001-YC030, YK901-YM670
D41213J		AE0102A	POS 12	D41213P	W0121	YC001-YC030, YK901-YM670
D41131P		AE0103A	POS 22	D41131J	W0131	YC001-YC030, YK901-YM670
D40047J		AE0104A	POS 08	D40047P	W0141	YC001-YC030, YK901-YM670
D41507J		AE0105A	POS 03	D41507P	W0151	YC001-YC030, YK901-YM670
D43306P		AE0303A	POS 05	D43306J	W0331	YK901-YM670
D43333P		AE0303A	POS 44	D43333J	W0331	YK901-YM670
<b>W5726</b>	<b>AD1</b>	<b>ECU TO E/E BAY AND AB1050R DISCONNECT BRACKET</b>				
D44584P				D44584J		YC001-YC007
D03599A			*/*/*			YC028-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D03599B			*/*/*			YC028-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D03599C			*/*/*			YC028-YK912, YK918-YK919, YL401-YL429, YM643-YM652

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W5720

Page 1

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5726</b>	<b>AD1</b>	<b>ECU TO E/E BAY AND AB1050R DISCONNECT BRACKET (continued)</b>				
D40790P		AB1050R	POS 01	D40790J	W4726	YC008-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40790P D40876P		AB1050R AB1050R	POS 01 POS 02	D40790J D40876J	W4726	YC031-YC050 YC008-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40876P D40854P		AB1050R AB1050R	POS 02 POS 03	D40876J D40854J	W4724	YC031-YC050 YC008-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D10912 D10436 D10434 D11118 D40060J D40910P		AB1088 AB1088 AB1088 AB1088 AB1088 AE0201A	POS 01 POS 02 POS 03 POS 04 POS 05 POS 06	D40060P D40910J	W7538 W0212	YC001-YC007 YC001-YC007 YC001-YC007 YC001-YC007 YC001-YC007 YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40254P		AE0201A	POS 07	D40254J	W0212	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40926P		AE0201A	POS 09	D40926J	W0212	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40942P		AE0202A	POS 03	D40942J	W0220	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40942P		AE0202A	POS 03	D40942J		YC031-YC050

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W5720

Page 2

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5726</b>	<b>AD1</b>	<b>ECU TO E/E BAY AND AB1050R DISCONNECT BRACKET (continued)</b>				
D40928P		AE0202A	POS 04	D40928J	W0220	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40928P D40912P		AE0202A AE0202A	POS 04 POS 22	D40928J D40912J	W0220	YC031-YC050 YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40912P D40946P		AE0202A AE0202A	POS 22 POS 23	D40912J D40946J	W0220	YC031-YC050 YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40946P D40908P		AE0202A AE0302A	POS 23 POS 52	D40946J D40908J	W0321	YC031-YC050 YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40904P		AE0401A	POS 26	D40904J	W0410	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D00922 D00594 D01176 D03599		M00299 M00404 M00404 M01709	1055/240/R037 1025/ / 1025/ / 902/197/R46			YC001-YC007 YC001-YC007 YC001-YC007 YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D03599A D03599B D03599C D11436		M01709 M01709 M01709 P0091	902/197/R46 902/197/R46 902/197/R46			YC001-YC026 YC001-YC026 YC001-YC026 YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W5720

Page 3

Aug 10/2009





Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5726</b>	<b>AD1</b>	<b>ECU TO E/E BAY AND AB1050R DISCONNECT BRACKET (continued)</b>				
D11438		P0091				YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652 YC001-YC007
D01246		S00284	1055/240/R037			
<b>W5728</b>	<b>AA2*</b>	<b>DISC AL0675ATO E2-2 (WITHOUT E6)</b>				
D43024P		AE0202A	POS 29	D43024J	W0220	YC001-YC030, YK901-YM670
D43024P		AE0202A	POS 29	D43024J		YC031-YC050
D46026J		AL0675B	POS 01	D46026P	W7026	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D46026J		AL0675B	POS 01	D46026P		YK913-YK917, YK920, YL430, YM653-YM670



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W5825</b>	<b>NN2</b>	<b>VIDEO CONTROL CENTER TO EE-BAY, AIRSHOW</b>				
D45297J		AB0858	POS 02	D45297P		YK901-YK906
D45297J		AB0858	POS 02	D45297P	W3573	YK907-YM670
D45319J		AE0502A	POS 13	D45319P	W0521	YK901-YM670
D45035P		AE0801A	POS 21	D45035J	W0811	YK901-YK906, YK911-YK917, YK919-YL401, YL427-YL430, YM647-YM670
D45315P		AE0801B	POS 04	D45315J	W0811	YK901-YM670
D12767		T3027				YK911-YK917, YK919-YL401, YL427-YL430, YM647-YM670
D12769		T3027				YK911-YK917, YK919-YL401, YL427-YL430, YM647-YM670

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W5820

Page 1 End

Aug 10/2009

<b>Bundle</b>	<b>Sep</b>	<b>Description</b>	<b>Location</b>	<b>MW Connector</b>	<b>MW Bundle</b>	<b>Effectivity</b>
Equip		Matewith				
<b>W5837</b>	<b>NA2</b>	<b>LOC ANT LEFT - STA 178 TO R315 - LOC ANTENNA SWITCH RELAY-1</b>				
D03321				D02623		ALL
D02117		R00315	306/180/R021			ALL
<b>W5839</b>	<b>RB2</b>	<b>LOC ANT RIGHT - R316 - LOC ANTENNA SWITCH RELAY-2</b>				
D03323				D02627		ALL
D02125		R00316	300/178/R022			ALL

---

**MASTER BUNDLE LIST**

D280A103

**91-21-13**

Section W5830

Page 1 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6024</b>	<b>NN2</b>	<b>P19 (EXTERNAL POWER RECP PANEL) TO P6 DISC</b>				
D44252P				D44252J	W0048	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40654P		AP0600B	POS 24	D40654J	W0044	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
<b>W6028</b>	<b>SN2</b>	<b>MAIN WHEEL WELL TO E/E BAY VIA CROWN</b>				
D43104J		AB0727R	POS 01	D43104P	W1032	ALL
D40180P		AE0101A	POS 16	D40180J	W0111	ALL

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W6020

Page 1 End

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6032</b>	<b>RB1</b>	<b>DISC AB0500DR TO E4-2.</b>				
D40402J		AB0500DR	POS 06	D40402P	W6124	ALL
D40416J		AB0500DR	POS 08	D40416P	W5224	ALL
D43028P		AE0402A	POS 16	D43028J	W0422	ALL
<b>W6034</b>	<b>NA2</b>	<b>DISC AB0500DR TO E3-2</b>				
D40404J		AB0500DR	POS 05	D40404P	W6124	ALL
D43030P		AE0302A	POS 51	D43030J	W0321	ALL

MASTER BUNDLE LIST

D280A103



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6102</b>	<b>LA2</b>	<b>CABIN PRESSURE OUTFLOW VALVE TO E/E BAY (LA2).</b>				
D40240P		AE0202A	POS 20	D40240J	W0220	YC001-YC030, YK901-YM670
D40240P		AE0202A	POS 20	D40240J		YC031-YC050
D40242P		AE0401A	POS 30	D40242J	W0410	ALL
D10728		V00048	980/185/R026			ALL
D10730		V00048	980/185/R026			ALL
D10732		V00048	980/185/R026			ALL

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W6100

Page 1 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6110</b>	<b>LA2*</b>	<b>P91 (FWD DISC) TO E/E BAY</b>				
D40364P		AE0101A	POS 12	D40364J	W0111	YC001-YC030, YK901-YM670
D48124P		AJ0048A	POS 18	D48124J	W0088	YC004-YC030, YK901-YM670
D40368P		AP0600B	POS 09	D40368J	W0044	YC001-YC030, YK901-YM670
D00160		M00098	362/164/R027			YC001-YC030, YK901-YM670
D10884		M01708	273/189/L022			YC001-YC030, YK901-YM670
D11418		P0091				YC001-YC030, YK901-YM670
D11422		P0091				YC001-YC030, YK901-YM670
D11450		P0092				YC001-YC030, YK901-YM670

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W6110

Page 1 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6122</b>	<b>SB2*</b>	<b>DISC AB0500DR TO MAIN WHEEL WELL</b>				
D40410P		AB0500DR	POS 02	D40410J	W6528	ALL
D40400P		AB0500DR	POS 03	D40400J	W6530	ALL
D46042J		AL0675C	POS 02	D46042P	W8222	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D46042J		AL0675C	POS 02	D46042P		YC031-YC050, YK913-YK917, YK920, YL430, YM653-YM670
D40004J		AL0720C	POS 02	D40004P	W8224	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40004J		AL0720C	POS 02	D40004P		YK913-YK917, YK920, YL430, YM653-YM670
<b>W6124</b>	<b>LA2</b>	<b>MAIN WHEEL WELL TO AB0500DR AND CROWN</b>				
D40262P				D40262J	W6134	ALL
D40264P				D40264J	W6134	ALL
D40404P		AB0500DR	POS 05	D40404J	W6034	ALL
D40402P		AB0500DR	POS 06	D40402J	W6032	ALL
D46602P		AB0727R	POS 02	D46602J	W5124	ALL
D46038J		AL0675C	POS 03	D46038P	W8122	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D46038J		AL0675C	POS 03	D46038P		YK913-YK917, YK920, YL430, YM653-YM670
D46020J		AL0720B	POS 04	D46020P	W7124	YC001-YK907, YL421
D46020J		AL0720B	POS 04	D46020P	W7128	YK908-YK912, YK918-YK919, YL401, YL422-YL429, YM643-YM670
D46020J		AL0720B	POS 04	D46020P		YK913-YK917, YK920, YL430

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W6120

Page 1

Aug 10/2009





Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6124</b>	<b>LA2</b>	<b>MAIN WHEEL WELL TO AB0500DR AND CROWN (continued)</b>				
D46044J		AL0720C	POS 03	D46044P	W8226	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D46044J		AL0720C	POS 03	D46044P		YK913-YK917, YK920, YL430, YM653-YM670
D40006J		AL0720C	POS 04	D40006P	W8226	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40006J		AL0720C	POS 04	D40006P		YK913-YK917, YK920, YL430, YM653-YM670
D46040J		AL0720D	POS 01	D46040P	W8124	YC001-YC030, YK901-YK912, YK918, YL401-YL426, YM643-YM652
D46040J		AL0720D	POS 01	D46040P		YC031-YC050, YK913-YK917, YK919-YK920, YL427-YL430, YM653-YM670
<b>W6128</b>	<b>LA1</b>	<b>E/E BAY TO MWW-SYS A ELEC HYD PUMP (ABEX ONLY, L/N 1610 AND ON)</b>				
D43060P		AE0202A	POS 17	D43060J	W0220	YC001-YC030, YK901-YM670
D43060P		AE0202A	POS 17	D43060J		YC031-YC050
D00476		L00323	500A+10/150/R032			ALL
D02664		M1103				ALL
D11456		P0092				ALL
D02688		S798				ALL

MASTER BUNDLE LIST

D280A103

91-21-13

Section W6120

Page 2 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6134</b>	<b>LA2</b>	<b>E/E BAY TO VERTICAL STAB</b>				
D40236J				D40236P	W7030	YC008-YM670
D40262J				D40262P	W6124	ALL
D40264J				D40264P	W6124	ALL
D40192J		AB1030C	POS 01	D40192P	W8030	ALL
D04826J		AB1030C	POS 04	D04826P	W7102	ALL
D40842P		AB1050L	POS 01	D40842J	W4134	YC008-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40842P		AB1050L	POS 01	D40842J		YK913-YK917, YK920, YL430, YM653-YM670
D40268J		AB1080	POS 01	D40268P	W6136	YC001-YC007
D40194P		AE0302A	POS 39	D40194J	W0321	ALL
D40276P		AE0302A	POS 48	D40276J	W0321	ALL
D40238P		AE0402A	POS 08	D40238J	W0422	ALL
D00756		S00126	1084/266/R018			YC001-YC007
<b>W6136</b>	<b>RN1</b>	<b>RUDDER EQUIP (VERTICAL STAB) TO DISC AB1080</b>				
D40268P		AB1080	POS 01	D40268J	W6134	YC001-YC007
D40268P		AB1080	POS 01	D40268J	W4134	YC008-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40268P		AB1080	POS 01	D40268J		YK913-YK917, YK920, YL430, YM653-YM670
D10197		M00175	1087/ /			YC031-YM670
D02932		M01125	RUD STA/51./4			ALL
D03576		T00469	RUD80.00/ /			ALL
D10197		V00158	1087/ /			YC001-YC030

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W6130

Page 1 End

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6162</b>	<b>RB2*</b>	<b>RIGHT WING BODY PRESS SEAL TO E/E BAY</b>				
D11164		AB0237B	POS 01			ALL
D39922		AD0520				ALL
D40156P		AE0401A	POS 50	D40156J	W0410	ALL
<b>W6164</b>	<b>RB1*</b>	<b>RIGHT WING BODY PRESS SEAL TO E/E BAY</b>				
D39934		AD0520				ALL
D40140P		AE0402A	POS 26	D40140J	W0422	ALL
D40720P		AE0402A	POS 27	D40720J	W0422	ALL
<b>W6166</b>	<b>SN2*</b>	<b>RIGHT WING BODY PRESS SEAL TO E/E BAY</b>				
D39902		AD0520				ALL
D40142P		AE0101B	POS 04	D40142J	W0111	ALL
D40948P		AE0101B	POS 06	D40948J	W0111	ALL
<b>W6168</b>	<b>SB2*</b>	<b>RIGHT WING BODY PRESS SEAL TO E/E BAY</b>				
D39930		AD0520				ALL
D40144P		AE0401A	POS 38	D40144J	W0410	ALL

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W6160

Page 1 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6170</b>	<b>RA2*</b>	<b>RIGHT WING BODY PRESS SEAL TO E/E BAY</b>				
D40728J		AB0405B	POS 01	D40728P	W4170	ALL
D39926		AD0520				ALL
D46144P		AJ0046A	POS 07	D46144J	W0066	YC004-YM670
<b>W6172</b>	<b>RA2*</b>	<b>RIGHT WING BODY PRESS SEAL TOE/E BAY</b>				
D11162		AB0237B	POS 02			ALL
D40730J		AB0405B	POS 02	D40730P	W4170	ALL
D39918		AD0520				ALL
D46146P		AJ0046A	POS 08	D46146J	W0066	YC004-YM670

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W6170

Page 1 End

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6182</b>	<b>NN2</b>	<b>ISPC TO P6 (EE-BAY TO PC POWER OUTLET)</b>				
D14006		M02566	360/160/25			YK907-YK909, YL421-YL430
D14010		M02621	255/216/R040			YK907-YK909, YL421-YL430

---

**MASTER BUNDLE LIST**

D280A103

**91-21-13**

Section W6180

Page 1 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6202</b>	<b>SB2</b>	<b>RIGHT A/C PACK (STA 536R) DISC TO A/C PACK (SB2)</b>				
D04582J		AB0536R	POS 01	D04582P	W6528	ALL
D40058J		AB0536R	POS 02	D40058P	W6230	ALL
D00708		M00224	566/164/R032			YM643-YM670
D00972		M00329	567/164/R032			YM643-YM670
D00844		M00356	580/155/R040			ALL
D00836		M00371	540/170/R025			ALL
D11920		M1849				ALL
D00536		S00004	575/158/R036			YM643-YM670
D00538		S00005	577/157/R026			ALL
D10058		S00939	578/165/R031			YC001-YL430
D00098		T00403	558/160/R042			ALL
D00170		T00406	644/158/R012			YM643-YM670
D00712		T00431	553/152/R025			YM643-YM670
D01290		T00439	583/161/R031			YM643-YM670
D03876		T00474	573/154/R030			YC001-YL430
D03918		T00482	584/162/R032			YC001-YL430
D03982		T00489	574/152/R033			YC001-YL430
D00522		V00022	652/148/R013			YM643-YM670
D00704		V00028	570/163/R024			YM643-YM670
D03188		V00132	643/162/R049			ALL
D03190		V00132	643/162/R049			ALL
D03872		V00141	656/145/R010			YC001-YL430
D03874		V00142	653/151/R035			YC001-YL430
D03888		V00144	540/152/R012			YC001-YL430
D03890		V00145	546/153/R016			YC001-YL430
<b>W6204</b>	<b>RB2</b>	<b>CABIN PRESSURE OUTFLOW VALVE TO E/E BAY (RB2)</b>				
D40066P		AE0401A	POS 39	D40066J	W0410	ALL
D10734		V00048	980/185/R026			ALL
D10736		V00048	980/185/R026			ALL
<b>W6206</b>	<b>RN2</b>	<b>P8 TO MISC EQUIPMENT (RN2)</b>				
D40816P		AP0600B	POS 18	D40816J	W0044	YC001-YC030, YK901-YM670
D03428		P008-47	P008-00/ /			YC001-YC030, YK901-YM670
D03432		P008-50	P008-00/ /			YC001-YC030, YK901-YM670

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W6200

Page 1

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6206</b>	<b>RN2</b>	<b>P8 TO MISC EQUIPMENT (RN2) (continued)</b>				
D03768		R00425	J019-00/ /			YC001-YC030, YK901-YM670
<b>W6208</b>	<b>RA2</b>	<b>P8 TO MISC EQUIPMENT</b>				
D40818P		AE0101B	POS 07	D40818J	W0111	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40228P		AE0402A	POS 13	D40228J	W0422	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40222P		AE0402A	POS 14	D40222J	W0422	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D05148P		AF0213A	POS 01	D05148J	W0008	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D05150P		AF0213A	POS 04	D05150J	W0008	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D00698		AF0222A	POS 05			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D10537		AF0222A	POS 07			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D46110P		AJ0046A	POS 04	D46110J	W0066	YC004-YK912, YK918-YK919, YL401-YL429, YM643-YM652

MASTER BUNDLE LIST

D280A103

91-21-13

Section W6200

Page 2

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6208</b>	<b>RA2</b>	<b>P8 TO MISC EQUIPMENT (continued)</b>				
D46150P		AJ0046A	POS 12	D46150J	W0066	YC004-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40528J		AP0600A	POS 08	D40528P	W2212	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40820P		AP0600B	POS 17	D40820J	W0044	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D01084		M00359	199/205/L006			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D03116		M01126	P008-43/ /			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D03124		M01201	206/200/R015			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D12156		M01983	228/202/L011			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D02934		N00159	P008-43/ /			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D02930		P008-43	P008-00/ /			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D10199		S00276	178/200/L030			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652

**MASTER BUNDLE LIST**  
D280A103

**91-21-13**  
Section W6200  
Page 3  
Aug 10/2009





# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6210</b>	<b>RB1</b>	<b>P92 (AFT DISC) TO E/E BAY</b>				
D40372P		AE0201A	POS 13	D40372J	W0212	YC001-YC030, YK901-YM670
D40938P		AE0402A	POS 28	D40938J	W0422	YC001-YC030, YK901-YM670
D40370P		AE0402A	POS 29	D40370J	W0422	YC001-YC030, YK901-YM670
D00042		M00005	E002-01/ /			YC001-YC030, YK901-YM670
D02936		M00006	390/158/L005			YC001-YC030, YK901-YM670
D11738		P0092				YC001-YC030, YK901-YM670
<b>W6214</b>	<b>LA2*</b>	<b>P6A TO E2-2, E4-1 (LA2)</b>				
D40774P		AE0101A	POS 33	D40774J	W0111	YK901-YM670
D41012P		AE0202A	POS 18	D41012J	W0220	YC001-YC030, YK901-YM670
D40380P		AE0202A	POS 26	D40380J	W0220	YC001-YC030, YK901-YM670
D41814P		AE0303A	POS 25	D41814J	W0330	YC001-YC030, YK901-YL430
D41828P		AE0401A	POS 12	D41828J	W0410	YC001-YC030, YK901-YL430
D40328P		AE0401A	POS 31	D40328J	W0410	YC001-YC030, YK901-YM670
D40378P		AE0401A	POS 46	D40378J	W0410	YC001-YC030, YK901-YM670
D40444P		AP0600A	POS 04	D40444J	W0044	YC001-YC030, YK901-YM670
D03892		S00931	373/194/L058			YC001-YC030, YK901-YL430
D11360		S11				YM643-YM670
D00512		T00419	372/195/L055			YM643-YM670
D00514		T00420	371/192/L058			YM643-YM670
D03882		T00477	372/196/L057			YC001-YC030, YK901-YL430
D03884		T00478	372/196/L057			YC001-YC030, YK901-YL430

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W6210

Page 1 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6214</b>	<b>LA2*</b>	<b>P6A TO E2-2, E4-1 (LA2) (continued)</b>				
D03924		T00485	371/194/L058			YC001-YC030, YK901-YL430

---

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W6210  
Page 2 End  
Feb 09/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6220</b>	<b>SA2</b>	<b>E3-3 TO E4-1 (SA2)</b>				
D41802P		AE0303A	POS 26	D41802J	W0330	YC001-YL430
D41804P		AE0401A	POS 09	D41804J	W0410	YC001-YL430
<b>W6222</b>	<b>RN1</b>	<b>J4 TO E/E BAY &amp; STAB TRIM ACTUATOR</b>				
D40248J				D40248P	W5224	ALL
D40250J				D40250P	W5224	ALL
D40836P		AB1050R	POS 05	D40836J	W4222	YC008-YM670
D40432P		AE0402A	POS 17	D40432J	W0422	ALL
D40742P		AE0402A	POS 19	D40742J	W0422	ALL
D40602P		AJ0004	POS 01	D40602J	W0094	ALL
D40616P		AJ0004	POS 06	D40616J	W0094	ALL
D40614P		AJ0004	POS 07	D40614J	W0094	ALL
D40574P		AP0600B	POS 21	D40574J	W0044	ALL
D00700		M01659	1076/264/R005			YC001-YC007
D13364		R00850	J011-00/ /			YC001-YC011
<b>W6228</b>	<b>RB2</b>	<b>DISC AB0500DR TO MAIN WHEEL WELL</b>				
D40406P		AB0500DR	POS 01	D40406J	W6528	ALL
D46048J		AL0720D	POS 03	D46048P	W8230	ALL

MASTER BUNDLE LIST

D280A103

91-21-13

Section W6220

Page 1 End

Feb 09/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6230</b>	<b>RB2</b>	<b>DISC AB0500DR TO E1-3, E4-1 (RB2)</b>				
D40058P		AB0536R	POS 02	D40058J	W6202	ALL
D41806P		AE0303A	POS 41	D41806J	W0330	YC001-YL430
D40330P		AE0401A	POS 36	D40330J	W0410	ALL
D43038P		AE0401A	POS 49	D43038J	W0410	ALL
D00968		M00327	519/166/R057			ALL
D03020		M1148				YM643-YM670
D03854		M1441				YC001-YL430
D11362		S00014	532/299/R010			YM643-YM670
D00518		T00416	534/299/R010			YM643-YM670
D00520		T00417	535/299/R010			YM643-YM670
D03878		T00475	5002+7/192/R003			YC001-YL430

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W6230

Page 1 End

Feb 09/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6242</b>	<b>RN1</b>	<b>P92 TO AB0340B DISCONNECT BRACKET</b>				
D11398				D11400		ALL
D01128		AB0288	POS 02			ALL
D40050P		AB0340A	POS 05	D40050J	W3058	YC001-YC030, YK901-YM670
D40050P		AB0340A	POS 05	D40050J		YC031-YC050
D40202P		AB0340B	POS 09	D40202J	W4258	ALL
D46138P		AJ0046B	POS 02	D46138J	W0066	YC004-YM670
D11452		P0092				ALL
<b>W6248</b>	<b>LN2*</b>	<b>AFT CARGO LIGHTS</b>				
D40500P		AB0500DL	POS 05	D40500J	W5248	ALL
D11772		L00189	727B+7/205/L011			ALL
D11770		L00190	727A+10/205/R019			ALL
D11776		L00191	754/205/L010			ALL
D11778		L00192	774/205/R010			ALL
D11782		L00193	834/205/L019			ALL
D11784		L00461	894/205/R010			ALL
D11774		L01021	727D+17/205/R011			ALL
D11998		L01206	727F+7/205/L010			YC001-YL430
D12000		L01315	727H+7/205/R010			YC001-YL430
D00866		M00276	1045/ /			ALL
D01070		M00348	727/201/L009			ALL
D11470		M01848	868/179/L043			ALL
D12180		M01906	923/173/R014			ALL
D12182		M01906	923/173/R014			ALL
D12184		M01920	957/179/L001			YC001-YK912, YK918, YL401-YL426, YM643-YM651
D12186		M01920	957/179/L001			YC001-YK912, YK918, YL401-YL426, YM643-YM651
D12188		M01971	968/198/R030			YC001-YK912, YK918, YL401-YL426, YM643-YM651
D12190		M01971	968/198/R030			YC001-YK912, YK918, YL401-YL426, YM643-YM651

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W6240

Page 1

Feb 09/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6248</b>	<b>LN2*</b>	<b>AFT CARGO LIGHTS (continued)</b>				
D12192		M01972	1002/207/R044			YC001-YK912, YK918, YL401-YL426, YM643-YM651
D12194		M01972	1002/207/R044			YC001-YK912, YK918, YL401-YL426, YM643-YM651
D12196		M01973				YC001-YK912, YK918, YL401-YL426, YM643-YM651
D12198		M01973				YC001-YK912, YK918, YL401-YL426, YM643-YM651
D12200		M01974				YC001-YK912, YK918, YL401-YL426, YM643-YM651
D12202		M01974				YC001-YK912, YK918, YL401-YL426, YM643-YM651
D12204		M01975				ALL
D12206		M01975				ALL
D12208		M01976				ALL
D12210		M01976				ALL
D12212		M01977				ALL
D12214		M01977				ALL
D12216		M01978				ALL
D12218		M01978				ALL
D12220		M01979				YC001-YK912, YK918, YL401-YL426, YM643-YM651
D12222		M01979				YC001-YK912, YK918, YL401-YL426, YM643-YM651
D12224		M01980	932/207/L059			ALL
D12226		M01980	932/207/L059			ALL
D12228		M01981	942/207/R062			ALL
D12230		M01981	942/207/R062			ALL
D12232		M01982				ALL
D12234		M01982				ALL

**MASTER BUNDLE LIST**

D280A103

**91-21-13**

Section W6240

Page 2

Feb 09/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6248</b>	<b>LN2*</b>	<b>AFT CARGO LIGHTS (continued)</b>				
D12188		M02763	968/198/R030			YK913-YK917, YK919-YK920, YL427-YL430, YM652-YM670
D12190		M02763	968/198/R030			YK913-YK917, YK919-YK920, YL427-YL430, YM652-YM670
D12192		M02764	1002/207/R044			YK913-YK917, YK919-YK920, YL427-YL430, YM652-YM670
D12194		M02764	1002/207/R044			YK913-YK917, YK919-YK920, YL427-YL430, YM652-YM670
D12184		M02765	957/179/L001			YK913-YK917, YK919-YK920, YL427-YL430, YM652-YM670
D12186		M02765	957/179/L001			YK913-YK917, YK919-YK920, YL427-YL430, YM652-YM670
D12200		M02766				YK913-YK917, YK919-YK920, YL427-YL430, YM652-YM670
D12202		M02766				YK913-YK917, YK919-YK920, YL427-YL430, YM652-YM670
D12196		M02767				YK913-YK917, YK919-YK920, YL427-YL430, YM652-YM670
D12198		M02767				YK913-YK917, YK919-YK920, YL427-YL430, YM652-YM670

MASTER BUNDLE LIST

D280A103

91-21-13

Section W6240

Page 3

Feb 09/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6248</b>	<b>LN2*</b>	<b>AFT CARGO LIGHTS (continued)</b>				
D12220		M02768				YK913-YK917, YK919-YK920, YL427-YL430, YM652-YM670
D12222		M02768				YK913-YK917, YK919-YK920, YL427-YL430, YM652-YM670

---

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W6240

Page 4 End

Feb 09/2009





Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6288</b>	<b>NN2</b>	<b>AB0340B, E3-3, E4-1 TO TEMPERATURE SENSORS</b>				
D41820P				D41820J	W4160	YC001-YL430
D41834P				D41834J	W4180	YC001-YL430
D41838J		AB0340B	POS 03	D41838P	W2114	YC001-YL430
D41818P		AE0303A	POS 32	D41818J	W0330	YC001-YL430
D41816P		AE0401A	POS 11	D41816J	W0410	YC001-YL430
D11834		S01076	500F+10/298/L014			YC001-YL430
D11836		S01077	534/298/R014			YC001-YL430
D11830		T00533	500F+7/299/L012			YC001-YL430
D11832		T00534	500F+9/300/L012			YC001-YL430
D11838		T00535	535/299/R012			YC001-YL430
D11840		T00536	537/299/R012			YC001-YL430

MASTER BUNDLE LIST

D280A103

91-21-13

Section W6280

Page 1 End

Feb 09/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6410</b>	<b>RB2</b>	<b>P92 (AFT DISC) TO E/E BAY</b>				
D40382P D11454		AE0402A P0092	POS 25	D40382J	W0422	ALL ALL
<b>W6412</b>	<b>RB2*</b>	<b>AP0600B TO E3 AND E4 (RB2)</b>				
D40394P		AE0301A	POS 34	D40394J	W0313	YC001-YC030, YK901-YM670 YC031-YC050
D40394P		AE0301A	POS 34	D40394J		
D40392P		AE0302A	POS 45	D40392J	W0321	ALL
D43080P		AE0302A	POS 54	D43080J	W0321	ALL
D41822P		AE0303A	POS 35	D41822J	W0330	YC001-YL430
D41830P		AE0401A	POS 13	D41830J	W0410	ALL
D41010P		AE0401A	POS 33	D41010J	W0410	ALL
D40326P		AE0401A	POS 35	D40326J	W0410	ALL
D40390P		AE0401A	POS 52	D40390J	W0410	ALL
D42400P		AE0402A	POS 22	D42400J	W0420	ALL
D40712P		AE0402A	POS 23	D40712J	W0422	ALL
D40388P		AE0402A	POS 24	D40388J	W0422	ALL
D41832P		AP0600B	POS 07	D41832J	W0044	YC001-YL430
D40386P		AP0600B	POS 14	D40386J	W0044	ALL
D11841		M02554	201/210/R002			YM643-YM670
<b>W6414</b>	<b>RB2</b>	<b>AP0600B TO E/E BAY (RB2)</b>				
D46142P		AJ0046B	POS 08	D46142J	W0066	YC004-YM652
D40396P		AP0600B	POS 22	D40396J	W0044	YC001-YM652
D00162		M00099	370/164/R027			YC001-YM652
D11448		P0092				YC001-YM652

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W6410

Page 1 End

Feb 09/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6420</b>	<b>SB2</b>	<b>E3-3 TO E4-1 (SB2)</b>				
D41808P		AE0303A	POS 37	D41808J	W0330	YC001-YL430
D41810P		AE0401A	POS 10	D41810J	W0410	YC001-YL430
<b>W6424</b>	<b>RB1</b>	<b>P92 TO P6 &amp; P18</b>				
D11440		P0092				ALL
D11442		P0092				ALL
D11444		P0092				ALL

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W6420

Page 1 End

Feb 09/2009



# 737-700/800 WIRING DIAGRAM MANUAL

<b>Bundle</b>	<b>Sep</b>	<b>Description</b>				
Equip		Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6430</b>	<b>RB2</b>	<b>P92 TO EQUIPMENT COOLING SUPPLY FAN (RB2)</b>				
D03470		M1322				ALL
D11802		P0092				ALL

---

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W6430

Page 1 End

Feb 09/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6491</b>	<b>NN2</b>	<b>WEATHER RADAR SCOPE, CONT, R/T</b>				
D01411				D01407		YC001-YC030, YK901-YM670
D40149P		AE0301A	POS 35	D40149J	W0313	YC001-YC002, YC007-YC030, YK901-YM670
D40147P		AJ0022	POS 09	D40147J	W0076	YC001-YC002, YC007-YC030, YK901-YM670
D40107P		AJ0046A	POS 10	D40107J	W0066	YC004-YC006
D40091P		AJ0048A	POS 10	D40091J	W0088	YC004-YC006
D40089P		AJ0048A	POS 11	D40089J	W0088	YC004-YC006
D00193		AP008-52				YC001-YC011
D00189		M00101	188/ /			YC001-YC030, YK901-YM670
D00189A		M00101	188/ /			YC001-YC030, YK901-YM670
D00189B		M00101	188/ /			YC001-YC030, YK901-YM670
D00189C		M00101	188/ /			YC001-YC030, YK901-YM670
D02273		M00103	188/170/R008			YC001-YC030, YK901-YM670
D00193		P008-52	P008-00/ /			YC001-YC030, YK901-YM670

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W6490

Page 1 End

Feb 09/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6502</b>	<b>SB2</b>	<b>RIGHT A/C PACK (STA 536R) DISC TO A/C PACK (SB2)</b>				
D40846P		DISC BRKT		D40846J	W6504	YC029-YM670
D41600		DM0060	536/159/R026			ALL
D00846		M00356	580/155/R040			ALL
D00394		V00019	581/158/R015			ALL
D00490		V00019	581/158/R015			YC001-YC028
D00492		V00019	581/158/R015			ALL
D00964		V00019	581/158/R015			ALL
D03914		V00146	557/148/R014			YC001-YL430
<b>W6504</b>	<b>SB2</b>	<b>RIGHT A/C PACK (STA 536R) DISC TO A/C PACK (SB2)</b>				
D40846J		DISC BRKT		D40846P	W6502	YC029-YM670
D00490		V00019	581/158/R015			YC029-YM670
<b>I W6506</b>	<b>SB2*</b>	<b>P8 TO E/E BAY</b>				
D11134		AB0250A	POS 01			YC001-YC003
D11132		AB0250A	POS 02			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D10169		AB0250A	POS 03			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40810P		AE0103A	POS 20	D40810J	W0131	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D11292		AF0222A	POS 01			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D10173		AF0222A	POS 06			YC001-YC003
D46132P		AJ0046B	POS 04	D46132J	W0066	YC004-YK912, YK918-YK919, YL401-YL429, YM643-YM652

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W6500

Page 1

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6506</b>	<b>SB2*</b>	<b>P8 TO E/E BAY (continued)</b>				
D46106P		AJ0046B	POS 10	D46106J	W0066	YC004-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D48138P		AJ0048A	POS 25	D48138J	W0088	YC004-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D48132P		AJ0048A	POS 26	D48132J	W0088	YC004-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40812P		AP0600B	POS 12	D40812J	W0044	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D00578		P008-01	P008-00/ /			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D01080		P008-01	P008-00/ /			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D00580		S00010	P008-01/220/000			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>I W6510</b>	<b>RA2*</b>	<b>P8 TO E/E BAY AND J BOX</b>				
D11290		AF0222A	POS 02			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D10173		AF0222A	POS 06			YC004-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40696P		AJ0024	POS 02	D40696J	W0080	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D46118P		AJ0046B	POS 09	D46118J	W0066	YC004-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D48130P		AJ0048A	POS 23	D48130J	W0088	YC004-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W6510

Page 1 End

Aug 10/2009





Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6528</b>	<b>SB2</b>	<b>DISC AB0500DR TO E1-3, E1-4, E4-1 (SB2)</b>				
D40406J		AB0500DR	POS 01	D40406P	W6228	ALL
D40410J		AB0500DR	POS 02	D40410P	W6122	ALL
D04582P		AB0536R	POS 01	D04582J	W6202	ALL
D43040P		AE0103A	POS 07	D43040J	W0131	ALL
D43044P		AE0401A	POS 37	D43044J	W0410	ALL
D46136P		AJ0046B	POS 05	D46136J	W0066	YC004-YM670
D00848		M00272	545/160/			ALL
D00540		S00006	531/299/R010			YM643-YM670
D03942		S00935	521/160/R015			YC001-YL430
D41602		STA0536R				ALL

MASTER BUNDLE LIST

D280A103

91-21-13

Section W6520

Page 1 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6530</b>	<b>SB1</b>	<b>DISC AB0500DR TO E3-2 SHELF.</b>				
D40400J		AB0500DR	POS 03	D40400P	W6122	ALL
D43046P		AE0302A	POS 32	D43046J	W0321	ALL

---

## MASTER BUNDLE LIST

D280A103

**91-21-13**  
Section W6530  
Page 1 End  
Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6564</b>	<b>SN2*</b>	<b>RIGHT WING BODY PRESS SEAL TO E/E BAY</b>				
D39910		AD0520				ALL
D40158P		AE0401A	POS 42	D40158J	W0410	ALL

**MASTER BUNDLE LIST**

D280A103

**91-21-13**  
Section W6560  
Page 1 End  
Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6570</b>	<b>SN2</b>	<b>RIGHT WING BODY PRESS SEAL TO RADAR BAY</b>				
D39914		AD0520				ALL
D48128P		AJ0048A	POS 24	D48128J	W0088	YC004-YM670
D11306		M01827	228/182/R020			ALL
D11354		M01827	228/182/R020			ALL

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W6570

Page 1 End

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6586</b>	<b>RA1</b>	<b>RIGHT WING BODY PRESS SEAL TO E/E BAY</b>				
D39906		AD0520				ALL
D40164P		AE0402A	POS 15	D40164J	W0422	ALL
<b>W6588</b>	<b>RN1*</b>	<b>RIGHT WING BODY PRESS SEAL TO E/E BAY</b>				
D41850J		AB0500DR	POS 07	D41850P	W1126	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D41850J		AB0500DR	POS 07	D41850P		YK913-YK917, YK920, YL430, YM653-YM670
D41856J		AB0500DR	POS 09	D41856P	W1136	ALL
D05342J		AB0500DR	POS 10	D05342P	W1136	ALL
D05350J		AB0500DR	POS 11	D05350P	W1126	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D05350J		AB0500DR	POS 11	D05350P		YK913-YK917, YK920, YL430, YM653-YM670
D39939		AD0520				ALL
D40160P		AE0101B	POS 14	D40160J	W0111	ALL
D40714P		AE0402A	POS 09	D40714J	W0422	ALL

MASTER BUNDLE LIST

D280A103

91-21-13

Section W6580

Page 1 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W6730</b>	<b>SA2</b>	<b>DISC AL0720D TO E1-3, E2-2</b>				
D43048P		AE0103A	POS 04	D43048J	W0131	ALL
D43050P		AE0202A	POS 06	D43050J	W0220	YC001-YC030, YK901-YM670
D43050P		AE0202A	POS 06	D43050J		YC031-YC050
D46050J		AL0720D	POS 04	D46050P	W8524	ALL
<b>W6732</b>	<b>SA2*</b>	<b>DISC AL0675C TO E1-3, E3-2</b>				
D43054P		AE0302A	POS 22	D43054J	W0321	ALL
D46046J		AL0675C	POS 01	D46046P	W8228	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D46046J		AL0675C	POS 01	D46046P		YK913-YK917, YK920, YL430, YM653-YM670

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W6730

Page 1 End

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W7022</b>	<b>NA2</b>	<b>#1 LEFT GEAR DOWN AND LOCKED SENSOR</b>				
D46002P		AL0694L	POS 01	D46002J	W7230	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D46002P		AL0694L	POS 01	D46002J		YK913-YK917, YK920, YL430, YM653-YM670
<b>W7024</b>	<b>NB2</b>	<b>#2 LEFT GEAR DOWN AND LOCKED SENSOR</b>				
D46008P		AL0711L	POS 01	D46008J	W7126	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D46008P		AL0711L	POS 01	D46008J		YK913-YK917, YK920, YL430, YM653-YM670
<b>W7026</b>	<b>AA2</b>	<b>FWD LEFT SIDE, WHEEL WELL AREA</b>				
D46026P		AL0675B	POS 01	D46026J	W5728	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D00920		V00043	663/ /L043			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D02874		V00125	663/200/L070			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D11734		V00154	685/200/L050			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652

MASTER BUNDLE LIST

D280A103

91-21-13

Section W7020

Page 1 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W7030</b>	<b>LE2</b>	<b>AB1030C DISC (STA 1038) TO LEFT ELEVATOR DISC</b>				
D40236P D10531		V00160	1158/285/R006	D40236J	W6134	YC008-YM670 YC008-YM670
<b>W7038</b>	<b>LN2</b>	<b>L ELEV DISC TO L ELEVPOS XMTR AND LOGO LIGHT</b>				
D40188J D11110 D03578		AB1156L L818 T467	POS 01	D40188P	W8030	ALL ALL ALL

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W7030

Page 1 End

Aug 10/2009





Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W7057</b>	<b>LA2</b>	<b>HF-1 COUPLER</b>				
D04227P		AB1030A	POS 03	D04227J	W3509	YC001-YC007, YK907-YK912, YK918-YK919, YL401-YL429
D04227P D00341		AB1030A M00227	POS 03 //	D04227J	W3553	YM643-YM652 YC001-YC007, YK907-YK912, YK918-YK919, YL401-YL429, YM643-YM652

MASTER BUNDLE LIST

D280A103

91-21-13

Section W7050  
Page 1 End  
Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W7061</b>	<b>LA2</b>	<b>HF-2 COUPLER</b>				
D04245P		AB1030A	POS 01	D04245J	W3511	YK907-YK912, YK918-YK919, YL401-YL429
D04245P D00629		AB1030A M00440	POS 01	D04245J	W3555	YM643-YM652 YK907-YK912, YK918-YK919, YL401-YL429, YM643-YM652

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W7060

Page 1 End

Aug 10/2009



Bundle	Sep	Description	Location	MW Connector	MW Bundle	Effectivity
Equip		Matewith				
<b>W7102</b>	<b>NN2</b>	<b>ELEVATOR PITOT HEATERS (NN2)</b>				
D11296		A00024	1070/387/L008			ALL
D11302		A00027	1070/387/R008			ALL
D04826P		AB1030C	POS 04	D04826J	W6134	ALL
D10845		T00541	51/ /0000			ALL

MASTER BUNDLE LIST

D280A103

**91-21-13**  
Section W7100  
Page 1 End  
Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W7122</b>	<b>LA1</b>	<b>FWD LEFT SIDE, WHEEL WELL AREA</b>				
D46010P		AL0675A	POS 04	D46010J	W5224	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D02928		M1124				YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D00814		S00141	666/179/L053			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D00760		V00032	665/180/L057			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D00818		V00040	665/180/L050			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D03244		V00133	666/150/L017			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
<b>W7124</b>	<b>LN1</b>	<b>AFT LEFT SIDE, WHEEL WELL AREA</b>				
D46020P		AL0720B	POS 04	D46020J	W6124	YC001-YK907, YL421
D00678		S00049	715/171/00			YC001-YK907, YL421
D00824		S00143	723/163/L003			YC001-YK907, YL421
D01010		V00051	722/169/L007			YC001-YK907, YL421
D10535		V00163	701/199/L010			YC001-YK907, YL421
<b>W7126</b>	<b>RB2</b>	<b>WHEEL WELL AREA</b>				
D46006J		AL0706L	POS 01	D46006P	W7136	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W7120

Page 1

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W7126</b>	<b>RB2</b>	<b>WHEEL WELL AREA (continued)</b>				
D46008J		AL0711L	POS 01	D46008P	W7024	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D46024P		AL0720A	POS 01	D46024J	W5234	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D02564		S00762	727/195/L030			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D02566		S00763	727/193/L020			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D02870		S00811	706/200/L025			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D00924		V00007	727/190/L045			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
<b>W7128</b>	<b>SA2</b>	<b>AFT LEFT SIDE WHEEL WELL AREA</b>				
D46032P		AL0720B	POS 02	D46032J	W5222	YK908-YK912, YK918-YK919, YL401, YL422-YL429, YM643-YM670
D46036P		AL0720B	POS 03	D46036J	W5224	YK908-YK912, YK918-YK919, YL401, YL422-YL429, YM643-YM670
D46020P		AL0720B	POS 04	D46020J	W6124	YK908-YK912, YK918-YK919, YL401, YL422-YL429, YM643-YM670



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W7128</b>	<b>SA2</b>	<b>AFT LEFT SIDE WHEEL WELL AREA (continued)</b>				
D00854		M00273	722/151/R004			YK908-YK912, YK918-YK919, YL401, YL422-YL429, YM643-YM670
D01012		M00339	727/195/0000			YK908-YK912, YK918-YK919, YL401, YL422-YL429, YM643-YM670
D00678		S00049	715/171/00			YK908-YK912, YK918-YK919, YL401, YL422-YL429, YM643-YM670
D00824		S00143	723/163/L003			YK908-YK912, YK918-YK919, YL401, YL422-YL429, YM643-YM670
D00674		T00436	679/196/R008			YK908-YK912, YK918-YK919, YL401, YL422-YL429, YM643-YM670
D11995		T03019	727/187/			YK908-YK912, YK918-YK919, YL401, YL422-YL429, YM643-YM670
D00926		V00009	727/190/L045			YK908-YK912, YK918-YK919, YL401, YL422-YL429, YM643-YM670
D00822		V00042	725/169/L014			YK908-YK912, YK918-YK919, YL401, YL422-YL429, YM643-YM670
D01010		V00051	722/169/L007			YK908-YK912, YK918-YK919, YL401, YL422-YL429, YM643-YM670
D00928		V11				YK908-YK912, YK918-YK919, YL401, YL422-YL429, YM643-YM670

### MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W7120

Page 3

Aug 10/2009



<b>Bundle</b> Equip	<b>Sep</b>	<b>Description</b> Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W7128</b> D10535	<b>SA2</b>	<b>AFT LEFT SIDE WHEEL WELL AREA (continued)</b> VOO163				YK908-YK912, YK918-YK919, YL401, YL422-YL429, YM643-YM670

---

**MASTER BUNDLE LIST**

D280A103

**91-21-13**

Section W7120  
Page 4 End  
Aug 10/2009



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W7134</b>	<b>NA2</b>	<b>#1 LEFT GEAR ON GROUND/OUTBD ANTISKID XDCR</b>				
D46004P		AL0694L	POS 02	D46004J	W7230	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D46004P		AL0694L	POS 02	D46004J		YK913-YK917, YK920, YL430, YM653-YM670
D11120		T392				ALL
<b>W7136</b>	<b>NB2</b>	<b>#2 LEFT GEAR ON GROUND/INBD ANTISKID XDCR</b>				
D46006P		AL0706L	POS 01	D46006J	W7126	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D46006P		AL0706L	POS 01	D46006J		YK913-YK917, YK920, YL430, YM653-YM670
D11122		T394				ALL
<b>W7137</b>	<b>NA2</b>	<b>VOR ANTENNA LEFT - STA 1035 TO RF PWR DIV-1</b>				
D04435J		AB1030B	POS 01	D04435P	W7153	YC001-YC030, YK901-YM670
D03699		M01726	309/180/R021			YC001-YC030, YK901-YM670

### MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W7130

Page 1 End

Aug 10/2009





Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W7150</b>	<b>LN1</b>	<b>TAIL CONE DISC. TO TAIL NAV LIGHT</b>				
D44584J				D44584P	W4724	YC031-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D00148		L00046	1216/284/0000			YC031-YK912, YK918-YK919, YL401-YL429, YM643-YM652
<b>W7153</b>	<b>NA2</b>	<b>VOR ANT LEFT - XMSN CABLE</b>				
D04435P		AB1030B	POS 01	D04435J	W7137	YC001-YC030, YK901-YM670
D04435P D00089		AB1030B M00041	POS 01 FIN/274/0000	D04435J		YC031-YC050 ALL
<b>W7157</b>	<b>NA2</b>	<b>LOCALIZER ANTENNA LEFT - STA 178 TO ANTENNA</b>				
D03313 D02129		M01102	178/187/	D02623		ALL ALL
<b>W7159</b>	<b>NA2</b>	<b>G/S ANT LEFT - STA 178 TO ANT</b>				
D03309 D00085		M00040	178/237/000	D02621		ALL ALL

MASTER BUNDLE LIST

D280A103

91-21-13

Section W7150

Page 1 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W7187</b>	<b>NA2</b>	<b>MARKER BEACON ANTENNA - EE BAY TO STA 610 (D4119)</b>				
D04119J				D04119P	W7193	ALL
D04121J		AE0102B	POS 04	D04121P	W0121	YC001-YC030, YK901-YM670
D04121J		AE0102B	POS 04	D04121P		YC031-YC050

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W7180

Page 1 End

May 11/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W7193</b>	<b>NA2</b>	<b>MARKER BEACON ANTENNA - STA 610 (D4119) TO ANTENNA</b>				
D04119P D00057		M00027	610/143/0	D04119J	W7187	ALL ALL

---

**MASTER BUNDLE LIST**

D280A103



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W7202</b>	<b>NN2</b>	<b>BULKHEAD PRESS SEAL TO NGS EQUIPMENT</b>				
D13932		DM0032	536/164/L036			YK911-YK917, YK919-YL401, YL427-YL430, YM651-YM670
D13814		M02561	642/163/L048			YK911-YK917, YK919-YL401, YL427-YL430, YM651-YM670
D13818		M02562	656/158/L047			YK911-YK917, YK919-YL401, YL427-YL430, YM651-YM670
D13824		M02564	602/161/L060			YK911-YK917, YK919-YL401, YL427-YL430, YM651-YM670
D13830		M02565	539/167/L034			YK911-YK917, YK919-YL401, YL427-YL430, YM651-YM670
D14200		M02692	577/155/L44			YK911-YK917, YK919-YL401, YL427-YL430, YM651-YM670
D13816		S01129	654/161/L066			YK911-YK917, YK919-YL401, YL427-YL430, YM651-YM670
D13828		T03020	657/161/L066			YK911-YK917, YK919-YL401, YL427-YL430, YM651-YM670
D13810		V00172	543/162/L032			YK911-YK917, YK919-YL401, YL427-YL430, YM651-YM670
D13812		V00173	644/160/L054			YK911-YK917, YK919-YL401, YL427-YL430, YM651-YM670

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W7200

Page 1

May 11/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W7202</b>	<b>NN2</b>	<b>BULKHEAD PRESS SEAL TO NGS EQUIPMENT (continued)</b>				
D13820		V00174	605/162/L059			YK911-YK917, YK919-YL401, YL427-YL430, YM651-YM670
D13826		V00175	653/162/L061			YK911-YK917, YK919-YL401, YL427-YL430, YM651-YM670
<b>W7208</b>	<b>NN2</b>	<b>BULKHEAD PRESS SEAL TO NGS BITE DISPLAY UNIT</b>				
D13972		DM0044	536/166/R037			YK911-YK917, YK919-YL401, YL427-YL430, YM651-YM670
D13808		M02560	543/157/R038			YK911-YK917, YK919-YL401, YL427-YL430, YM651-YM670



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W7222</b>	<b>RN1</b>	<b>AFT LEFT SIDE WHEEL WELL AREA</b>				
D46036P D01012		AL0720B M339	POS 03	D46036J	W5224	YC001-YK907, YL421 YC001-YK907, YL421

---

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W7220

Page 1 End

May 11/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W7230</b>	<b>RA2</b>	<b>FWD LEFT SIDE WHEEL WELL AREA</b>				
D46028P		AL0675B	POS 04	D46028J	W5530	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D46002J		AL0694L	POS 01	D46002P	W7022	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D46004J		AL0694L	POS 02	D46004P	W7134	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D00662		T424				YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W7359</b>	<b>SN2</b>	<b>AFT CAB/APU SERVICE INTERPHONE</b>				
D07172P				D07172J	W3144	ALL
D40032P				D40032J	W0152	ALL
D06017			1042/175/L042			ALL

---

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W7350

Page 1 End

May 11/2009





Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W7381</b>	<b>LE2</b>	<b>AB1050L TO RUDDER POSN SENSOR, RUDDER ACTUATOR</b>				
D11613			RUD77.0/ /			YC020-YK920, YM643-YM646
D11615			RUD77.0/ /			YC020-YC026
D11617			RUD82.0/ /			YC020-YK920, YM643-YM646
D11619			RUD82.0/ /			YC020-YC026
D45501J		AB1050L	POS 05	D45501P	W5381	YC020-YC022
D45501P		AB1050L	POS 05	D45501J	W5381	YC023-YM670
D45503J		AB1050R	POS 06	D45503P	W5383	YC020-YC022
D45503P		AB1050R	POS 06	D45503J	W5383	YC023-YC026
D11613		M02445	/ /			YL401-YL430, YM647-YM670
D11617		M02446	/ /			YL401-YL430, YM647-YM670
<b>W7383</b>	<b>RF2</b>	<b>AB1050R TO RUDDER POSN SENSOR, RUDDER ACTUATOR</b>				
D11615			RUD77.0/ /			YC028-YK920, YM643-YM646
D11619			RUD82.0/ /			YC028-YK920, YM643-YM646
D45503P		AB1050R	POS 06	D45503J	W5383	YC028-YM670
D11615		M02445	/ /			YL401-YL430, YM647-YM670
D11619		M02446	/ /			YL401-YL430, YM647-YM670

MASTER BUNDLE LIST

D280A103

91-21-13

Section W7380

Page 1 End

May 11/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W7500</b>	<b>SN2</b>	<b>KEELBEAM OVERHEAT DETECTION</b>				
D00850		M00272	545/160/			ALL
D00852		M00273	722/151/R004			ALL



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>I W7522</b>	<b>SA2</b>	<b>FWD LEFT SIDE, WHEEL WELL AREA</b>				
D46030P		AL0675B	POS 03	D46030J	W5222	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D03052		M1173				YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D03054		M1173				YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D00840 D02680		M270 S00794	666/171/L043			YC001-YC030 YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D02684		S00796	666/171/L047			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D00762		V00033	673/190/L064			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
<b>W7526</b>	<b>SA2</b>	<b>AFT LEFT SIDE WHEEL WELL AREA</b>				
D46032P		AL0720B	POS 02	D46032J	W5222	YC001-YK907, YL421
D00854		M00273	722/151/R004			YC001-YK907, YL421
D00674		T00436	679/196/R008			YC001-YK907, YL421
D00926		V00009	727/190/L045			YC001-YK907, YL421
D00822		V00042	725/169/L014			YC001-YK907, YL421
D00928		V11				YC001-YK907, YL421

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W7520

Page 1 End

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W7538</b>	<b>SN2</b>	<b>APU FIRE DETECTION AND LIGHTING</b>				
D40062J				D40062P	W7540	ALL
D40060P		AB1088	POS 05	D40060J	W5726	YC001-YC007
D40060P		AB1088	POS 05	D40060J	W4724	YC008-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40060P		AB1088	POS 05	D40060J		YK913-YK917, YK920, YL430, YM653-YM670

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W7530

Page 1 End

May 11/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
W7540 D40062P	SN2	APU FIRE DETECTION		D40062J	W7538	ALL

---

**MASTER BUNDLE LIST**

D280A103



# 737-700/800 WIRING DIAGRAM MANUAL

<b>Bundle Equip</b>	<b>Sep</b>	<b>Description Matewith</b>	<b>Location</b>	<b>MW Connector</b>	<b>MW Bundle</b>	<b>Effectivity</b>
<b>W7580</b>	<b>SN2</b>	<b>WHEEL WELL DISC STS 675L TO CENTER TANK DISC M1830</b>				
D04850P		AL0675B	POS 02	D04850J	W5580	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D11316		M01830	666/185/L043			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W7580

Page 1 End

May 11/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W7592</b>	<b>SN2*</b>	<b>P8 (FIRE SW PNL) TO FIRE EXTINGUISHER BOTTLES+VALVES,SYSTEM NO 1</b>				
D40010P				D40010J	W7594	YC001-YM652
D40652P				D40652J	W7596	YC001-YM652
D40656P		AE0202A	POS 05	D40656J	W0220	YC001-YC030, YK901-YM652
D40656P		AE0202A	POS 05	D40656J		YC031-YC050
<b>W7594</b>	<b>SN2*</b>	<b>P8(FIRE SW PNL AREA) TO FIRE EXT BOTTLE SYSTEM NO.2</b>				
D40008P				D40008J	W7598	YC001-YM652
D40010J				D40010P	W7592	YC001-YM652
D40012P		AE0202A	POS 21	D40012J	W0220	YC001-YC030, YK901-YM652
D40012P		AE0202A	POS 21	D40012J		YC031-YC050
<b>W7596</b>	<b>SN2</b>	<b>JUMPER BUNDLE-LEFT BOTTLE</b>				
D40652J				D40652P	W7592	YC001-YM652
D40652J				D40652P		YM653-YM670
D00586		M00194	727/190/L070			ALL
D01322		M01142	713/ /			ALL
D00582		M01143	713/ /			ALL
<b>W7598</b>	<b>SN2</b>	<b>JUMPER BUNDLE-RIGHT BOTTLE</b>				
D40008J				D40008P	W7594	YC001-YM652
D40008J				D40008P		YM653-YM670
D00588		M00195	727/190/L070			ALL
D00584		M01144	713/ /			ALL
D01324		M01145	713/ /			ALL

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W7590

Page 1 End

May 11/2009



## 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W7761</b>	<b>NA2</b>	<b>HF-1 COUPLER ANT FEED</b>				
D04217P		AB1030A	POS 04	D04217J	W3517	YC001-YC007, YK907-YK912, YK918-YK919, YL401-YL429
D04217P D00337		AB1030A M00227	POS 04 //	D04217J	W3557	YM643-YM652 YC001-YC007, YK907-YK912, YK918-YK919, YL401-YL429, YM643-YM652
<b>W7763</b>	<b>NA2</b>	<b>HF-1 COUPLER ANT FEED</b>				
D04713P		AB1030A	POS 02	D04713J	W3523	YK907-YK912, YK918-YK919, YL401-YL429
D04713P D00625		AB1030A M00440	POS 02	D04713J	W3559	YM643-YM652 YK907-YK912, YK918-YK919, YL401-YL429, YM643-YM652

### MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W7760

Page 1 End

Aug 10/2009





Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W8022</b>	<b>NA2</b>	<b>#1 RIGHT GEAR DOWN AND LOCKED SENSOR</b>				
D46012P		AL0694R	POS 01	D46012J	W8228	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D46012P		AL0694R	POS 01	D46012J		YK913-YK917, YK920, YL430, YM653-YM670
<b>W8024</b>	<b>NB2</b>	<b>#2 RIGHT GEAR DOWN AND LOCKED SENSOR</b>				
D46018P		AL0711R	POS 01	D46018J	W8224	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D46018P		AL0711R	POS 01	D46018J		YK913-YK917, YK920, YL430, YM653-YM670



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W8030</b>	<b>LE2*</b>	<b>AB1030C DISC (STA 1038) TO RIGHT AND LEFT ELEV DISC (W/O FLAT BLKHD)</b>				
D40192P		AB1030C	POS 01	D40192J	W6134	ALL
D40188P		AB1156L	POS 01	D40188J	W7038	ALL
D40190P		AB1156R	POS 01	D40190J	W8038	ALL
D01249		M1192				ALL
D10529		V00159	1158/285/R006			ALL
D10531		V00160	1158/285/R006			YC001-YC007
<b>W8038</b>	<b>RN2</b>	<b>R ELEV DISC TO R ELEV POS XMTR AND R LOGO LIGHT</b>				
D40190J		AB1156R	POS 01	D40190P	W8030	ALL
D11108		L819				ALL
D03580		T468				ALL

## MASTER BUNDLE LIST

D280A103

**91-21-13**  
Section W8030  
Page 1 End  
May 11/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W8122</b>	<b>LA2</b>	<b>FWD RIGHT SIDE WHEEL WELL AREA</b>				
D46038P		AL0675C	POS 03	D46038J	W6124	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D00816		S00142	666/179/R053			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D03242		S00855	667/179/R031			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D11728		S01050	596/194/R067			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D00758		V00031	665/180/R050			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D00820		V00041	665/180/R057			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D02860		V00123	674/159/L001			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D10533		V00162	632/162/R060			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
<b>W8124</b>	<b>LA2</b>	<b>AFT RIGHT SIDE WHEEL WELL AREA</b>				
D46040P		AL0720D	POS 01	D46040J	W6124	YC001-YC030, YK901-YK912, YK918, YL401-YL426, YM643-YM652

MASTER BUNDLE LIST

D280A103

91-21-13

Section W8120

Page 1

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W8124</b>	<b>LA2</b>	<b>AFT RIGHT SIDE WHEEL WELL AREA (continued)</b>				
D01014		V00052	723/200/R021			YC001-YC030, YK901-YK912, YK918, YL401-YL426, YM643-YM652

---

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W8120

Page 2 End

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W8137</b>	<b>NB2</b>	<b>VOR ANTENNA RIGHT - STA 1035 TO RF PWR DIV-2</b>				
D04437J D03783		AB1030B M01727	POS 03 302/180/R020	D04437P	W8153	ALL ALL

---

**MASTER BUNDLE LIST**

D280A103

**91-21-13**

Section W8130

Page 1 End

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W8153</b>	<b>NB2</b>	<b>VOR ANT RIGHT-XMSN CABLE</b>				
D04437P D00091		AB1030B M00041	POS 03 FIN/274/0000	D04437J	W8137	ALL ALL
<b>W8157</b>	<b>NB2</b>	<b>GLIDE SLOPE ANT RIGHT - STA 178 TO ANT</b>				
D03315 D02131		M01102	178/187/	D02627		ALL ALL
<b>W8159</b>	<b>NB2</b>	<b>G/S ANT RIGHT-STA 178 TO ANT</b>				
D03311 D00087		M00040	178/237/000	D02625		ALL ALL

MASTER BUNDLE LIST

D280A103

**91-21-13**  
Section W8150  
Page 1 End  
Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W8222</b>	<b>SB2</b>	<b>FWD RIGHT SIDE WHEEL WELL AREA</b>				
D46042P		AL0675C	POS 02	D46042J	W6122	YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D00842 D02682		M00270 S00795	684/200/MULT 666/181/R022			YC001-YC030 YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D02686		S00797	666/181/R027			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D00660		T00423	666/181/R014			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D00764		V00034	680/190/R064			YC001-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
<b>W8224</b>	<b>SB2</b>	<b>AFT RIGHT SIDE WHEEL WELL AREA</b>				
D46016J		AL0706R	POS 01	D46016P	W8236	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D46018J		AL0711R	POS 01	D46018P	W8024	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652

MASTER BUNDLE LIST

D280A103

91-21-13

Section W8220

Page 1

Aug 10/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W8224</b>	<b>SB2</b>	<b>AFT RIGHT SIDE WHEEL WELL AREA (continued)</b>				
D40004P		AL0720C	POS 02	D40004J	W6122	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D02674		T00184	678/194/R043			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
<b>W8226</b>	<b>LN2</b>	<b>AFT RIGHT SIDE, WHEEL WELL</b>				
D46044P		AL0720C	POS 03	D46044J	W6124	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40006P		AL0720C	POS 04	D40006J	W6124	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D01582		V00094	720/198/R056			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
<b>W8228</b>	<b>SA2</b>	<b>FWD LEFT SIDE WHEEL WELL AREA</b>				
D46046P		AL0675C	POS 01	D46046J	W6732	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D46012J		AL0694R	POS 01	D46012P	W8022	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D46014J		AL0694R	POS 02	D46014P	W8234	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W8220

Page 2

Aug 10/2009





Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W8228</b>	<b>SA2</b>	<b>FWD LEFT SIDE WHEEL WELL AREA (continued)</b>				
D03056		M01174	//			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D03058		M01174	//			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D13938		S01131	675/194/R067			YK907-YK912, YK918-YK919, YL401-YL429
D11730		S1049				YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D02872		V00124	665/190/R070			YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W8230</b>	<b>NB2</b>	<b>AFT LEFT SIDE WHEEL WELL AREA</b>				
D46048P		AL0720D	POS 03	D46048J	W6228	ALL
D00930		V00008	727/180/R040			ALL
D02570		V00122	711/200/			ALL
D02572		V00122	711/200/			ALL
D02574		V00122	711/200/			ALL
D02576		V00122	711/200/			ALL
<b>W8234</b>	<b>NA2</b>	<b>#1 RIGHT GEAR ON GROUND/OUTBD ANTISKID XDCR</b>				
D46014P		AL0694R	POS 02	D46014J	W8228	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D46014P		AL0694R	POS 02	D46014J		YK913-YK917, YK920, YL430, YM653-YM670
D11126		T395				ALL
<b>W8236</b>	<b>NB2</b>	<b>#2 RIGHT GEAR ON GROUND/INBD ANTISKID XDCR</b>				
D46016P		AL0706R	POS 01	D46016J	W8224	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D46016P		AL0706R	POS 01	D46016J		YK913-YK917, YK920, YL430, YM653-YM670
D11124		T393				ALL

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W8230

Page 1 End

Aug 10/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W8489</b>	<b>NN2</b>	<b>WEATHER RADAR ANTENNA HONEYWELL</b>				
D01409				D01407		ALL
D00119		M00062	178/200/R005			ALL

---

**MASTER BUNDLE LIST**

D280A103

**91-21-13**

Section W8480

Page 1 End

Feb 09/2009



# 737-700/800 WIRING DIAGRAM MANUAL

Bundle	Sep	Description	Location	MW Connector	MW Bundle	Effectivity
Equip		Matewith				
<b>W8524</b>	<b>SA2</b>	<b>AFT RIGHT SIDE WHEEL WELL AREA</b>				
D46050P		AL0720D	POS 04	D46050J	W6730	ALL
D48080P		AP2800A	POS 01	D48080J	W0028	YC001-YC030
D48080P		AP2800A	POS 01	D48080J		YC031-YM670
D02676		T00185	725/166/R028			ALL
D00932		V00010	727/180/R040			ALL

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W8520

Page 1 End

Feb 09/2009



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W8538</b>	<b>RB1</b>	<b>STANDBY HYD PUMP</b>				
D00812		M00242	727+18/150/R027			ALL
D11740		P0092				ALL

---

**MASTER BUNDLE LIST**

D280A103

**91-21-13**

Section W8530

Page 1 End

Feb 09/2009



# 737-700/800 WIRING DIAGRAM MANUAL

<b>Bundle</b> Equip	<b>Sep</b>	<b>Description</b> Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W9000</b>	<b>NN2</b>	<b>ENHANCED GROUND PROX.WARNING COMPUTER CUSTOMER ORIGINED</b>				
D09003P		AE0101B	POS 23	D09003J	W0111	YC001-YC007

---

## MASTER BUNDLE LIST

D280A103

**91-21-13**

Section W9000

Page 1 End

Nov 11/2008



Bundle Equip	Sep	Description Matewith	Location	MW Connector	MW Bundle	Effectivity
<b>W9100</b>		<b>CDSS-P8 PANEL TO E/E SHELF</b>				
D09113J			E004-01/ /	D09113P	W9102	YC001-YC030
D09455		M09101	P008-00/ /			YC001-YC030
D09462		M09102	P008-00/ /			YC001-YC030
<b>W9102</b>		<b>CDSS-VSU TO D9133P</b>				
D09113P			E004-01/ /	D09113J	W9100	YC001-YC030
D09114P			E004-01/ /	D09114J	W9103	YC001-YC030
D09463A		M09103	E004-01/ /			YC001-YC030
D09463B		M09103	E004-01/ /			YC001-YC030
<b>W9103</b>		<b>CDSS-CCU TO 9114J</b>				
D09114J			E004-01/ /	D09114P	W9102	YC001-YC030
D09464A		M09104CCU				YC001-YC030
D09468A		M09107 CCU				YC001-YC030
D09472A		M09110 CCU				YC001-YC030