

91-21-12

SPARE WIRE LIST



91-21-12
SPARE WIRE LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
EFFECTIVE PAGES			AE0101A cont.			AE0301A cont.		
	1 thru 3	Aug 10/2009	O	4	Aug 10/2009	O	7	Aug 10/2009
	4	BLANK	O	5	Aug 10/2009	O	8	Aug 10/2009
AB0288	1	Feb 09/2009	O	6	Aug 10/2009	O AE0302A	1	Aug 10/2009
AB0340A	1	May 11/2009	O AE0101B	1	Aug 10/2009	O	2	Aug 10/2009
	2	Feb 09/2009	O	2	Aug 10/2009	O	3	Aug 10/2009
AB0340B	1	Feb 09/2009	O AE0102A	1	Aug 10/2009	O	4	Aug 10/2009
AB0405B	1	Feb 09/2009	O	2	Aug 10/2009	O	5	Aug 10/2009
AB0420A	1	Feb 09/2009	O	3	Aug 10/2009	O	6	Aug 10/2009
AB0500DL	1	Feb 09/2009	O AE0103A	1	Aug 10/2009	O	7	Aug 10/2009
AB0536L	1	Feb 09/2009	O	2	Aug 10/2009	O	8	Aug 10/2009
AB0858	1	Feb 09/2009	O	3	Aug 10/2009	O	9	Aug 10/2009
AB1030A	1	Feb 09/2009	O AE0104A	1	Aug 10/2009	O AE0303A	1	Aug 10/2009
AB1050L	1	Feb 09/2009	O	2	Aug 10/2009	O	2	Aug 10/2009
	2	Feb 09/2009	O	3	Aug 10/2009	O	3	Aug 10/2009
AB1050R	1	Feb 09/2009	O	4	Aug 10/2009	O	4	Aug 10/2009
R AB1080	1	Aug 10/2009	O	5	Aug 10/2009	O	5	Aug 10/2009
A	2	Aug 10/2009	O AE0105A	1	Aug 10/2009	O	6	Aug 10/2009
O AC0520	1	Aug 10/2009	O AE0201A	1	Aug 10/2009	O	7	Aug 10/2009
O	2	Aug 10/2009	O AE0202A	1	Aug 10/2009	O AE0401A	1	Aug 10/2009
O	3	Aug 10/2009	O	2	Aug 10/2009	O	2	Aug 10/2009
O AC0538	1	Aug 10/2009	O	3	Aug 10/2009	O	3	Aug 10/2009
O AD0520	1	Aug 10/2009	O AE0301A	1	Aug 10/2009	O AE0401D	1	Aug 10/2009
O	2	Aug 10/2009	O	2	Aug 10/2009	O	2	Aug 10/2009
O	3	Aug 10/2009	O	3	Aug 10/2009	O AE0402A	1	Aug 10/2009
O AE0101A	1	Aug 10/2009	O	4	Aug 10/2009	O AE0502A	1	Aug 10/2009
O	2	Aug 10/2009	O	5	Aug 10/2009	O	2	Aug 10/2009
O	3	Aug 10/2009	O	6	Aug 10/2009	O	3	Aug 10/2009

A = Added, R = Revised, D = Deleted, O = Overflow

SPARE WIRE LIST

D280A103

EFFECTIVE PAGES

Page 1
Aug 10/2009



91-21-12
SPARE WIRE LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
AE0502A cont.			O AP1800B	1	Aug 10/2009	O D40114J	1	Aug 10/2009
O	4	Aug 10/2009	O	2	Aug 10/2009	O D40116J	1	Aug 10/2009
O	5	Aug 10/2009	O	3	Aug 10/2009	O D40210J	1	Aug 10/2009
O AE0602A	1	Aug 10/2009	O	4	Aug 10/2009	O D40214J	1	Aug 10/2009
O AE0801A	1	Aug 10/2009	O AS0001L	1	Aug 10/2009	O D40262J	1	Aug 10/2009
O	2	Aug 10/2009	R	2	Aug 10/2009	O D40270J	1	Aug 10/2009
O AE0801B	1	Aug 10/2009	O AS0001R	1	Aug 10/2009	O D40272J	1	Aug 10/2009
O AE0801C	1	Aug 10/2009	O	2	Aug 10/2009	O D40984P	1	Aug 10/2009
O AJ0004	1	Aug 10/2009	O AS0002L	1	Aug 10/2009	O D40990P	1	Aug 10/2009
O AJ0020B	1	Aug 10/2009	O AS0002R	1	Aug 10/2009	O D40994J	1	Aug 10/2009
R AJ0022	1	Aug 10/2009	O AS0003L	1	Aug 10/2009	O D40994P	1	Aug 10/2009
O AJ0024	1	Aug 10/2009	O AS0003R	1	Aug 10/2009	O D40996J	1	Aug 10/2009
O AJ0046A	1	Aug 10/2009	O AW0258L	1	Aug 10/2009	O D42002J	1	Aug 10/2009
O	2	Aug 10/2009	R	2	Aug 10/2009	O D42004J	1	Aug 10/2009
O AJ0046B	1	Aug 10/2009	O	3	Aug 10/2009	O D42004P	1	Aug 10/2009
R AJ0048A	1	Aug 10/2009	O	4	Aug 10/2009	O D42006J	1	Aug 10/2009
O	2	Aug 10/2009	O AW0258R	1	Aug 10/2009	O D42010J	1	Aug 10/2009
O AL0720D	1	Aug 10/2009	O	2	Aug 10/2009	O D42010P	1	Aug 10/2009
O AP0600A	1	Aug 10/2009	O	3	Aug 10/2009	O DM0017	1	Aug 10/2009
O AP0600B	1	Aug 10/2009	O	4	Aug 10/2009	O L01086	1	Aug 10/2009
O	2	Aug 10/2009	O D04499J	1	Aug 10/2009	O L01223	1	Aug 10/2009
R	3	Aug 10/2009	O D40020P	1	Aug 10/2009	O M00276	1	Aug 10/2009
O	4	Aug 10/2009	O D40026P	1	Aug 10/2009	O M00414	1	Aug 10/2009
O AP0900A	1	Aug 10/2009	O D40038J	1	Aug 10/2009	O M00943	1	Aug 10/2009
O	2	Aug 10/2009	O D40052P	1	Aug 10/2009	O M01020	1	Aug 10/2009
O	3	Aug 10/2009	O D40110J	1	Aug 10/2009	O M01022	1	Aug 10/2009
O	4	Aug 10/2009	O D40110P	1	Aug 10/2009	O M01415	1	Aug 10/2009
O AP1800A	1	Aug 10/2009	O D40112J	1	Aug 10/2009	O M01418	1	Aug 10/2009

A = Added, R = Revised, D = Deleted, O = Overflow

SPARE WIRE LIST

D280A103

EFFECTIVE PAGES

Page 2
Aug 10/2009



91-21-12
SPARE WIRE LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
R	M01672	1						
R	M01673	1						
R	M01674	1						
O	M02061	1						
O	M02195	1						
O	M02263	1						
R	M02566	1						
R	M02621	1						
R	M02622	1						
O	M2263	1						
O	N00185	1						
O	N00186	1						
O	N00226	1						
O	P003-01	1						
O	P003-07	1						
O	P005-28	1						
O	P008-25	1						
O	P008-26	1						
O	P008-66	1						
O	P008-73	1						
O	P0091	1						
O	P0092	1						
O	P091-00	1						
O	UNK	1						
O		2						
O		3						
R		4						
A		5						

A = Added, R = Revised, D = Deleted, O = Overflow

SPARE WIRE LIST

D280A103

EFFECTIVE PAGES

Page 3
Aug 10/2009



<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>		<u>Pos</u>	<u>Effectivity</u>	
Equip	Term	Type	Wire No.		GA	TY	Equip	Term	Type	Matewith	
AB0288		03	W2589	NN2	DISCONNECT BRACKET						
D04889P		5		2001B	24	Y2	TB0261X	B014	1A		YK901-YM670
D04889P		4		2001R	24	Y2	TB0261X	A014	1A		YK901-YM670
D04889P		8		2001Z			GB00261	ST..	1A		YK901-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section AB0288

Page 1 End

Feb 09/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To					Pos	Effectivity	
				GA	TY	Equip	Term	Type	Matewith				
AB0340A	01	W3058	RN2	DISCONNECT BRACKET-LEFT									
D40054J	5		0284	20	PA	D11070	CAP	Y	M01418			YC001-YC030, YK901-YM670	
D40054J	6		0285	20	PA	D11070	CAP	Y	M01418			YC001-YC030, YK901-YM670	
D40054J	8		0286	20	PA	D11070	CAP	Y	M01418			YC001-YC030, YK901-YM670	
AB0340A	01	W5142	LN1*	DISCONNECT BRACKET-LEFT									
D40054P	5		0054	20	PA	D11416	CAP	Y	P091-00			ALL	
D40054P	6		0055	20	PA	D11416	CAP	Y	P091-00			ALL	
D40054P	8		0056	20	PA	D11416	CAP	Y	P091-00			ALL	
AB0340A	02	W3144	LN2*	DISCONNECT BRACKET-LEFT									
D40216P	7		0021	16	PA	D40220P			AP1800A		06	YK901-YL430	
AB0340A	02	W3158	LN1*	DISCONNECT BRACKET-LEFT									
D40216J	4		0101	20	PA	D40108J		1	AB0340A		06	ALL	
D40216J	5		0102	20	PA	D40108J		2	AB0340A		06	ALL	
AB0340A	03	W3142	LN2	DISCONNECT BRACKET-LEFT									
D40196J	8		0038	20	PA	D10746	CAP	Y	M01673			YC001-YC030, YK901-YM652	
D40196J	CAP	Y	0039	20	PA	D10746	CAP	Y	M01673			YC001-YC030, YK901-YM652	
AB0340A	04	W3058	RN2	DISCONNECT BRACKET-LEFT									
D40170J	18		0387	20	PA	D11066	CAP	Y	M01418			YC001-YC030, YK901-YM670	
D40170J	19		0388	20	PA	D11066	CAP	Y	M01418			YC001-YC030, YK901-YM670	
D40170J	31		0389	20	PA	D11066	CAP	Y	M01418			YC001-YC030, YK901-YM670	
AB0340A	05	W3058	RN2	DISCONNECT BRACKET-LEFT									
D40050J	8		0381	20	PA	D40226P		8	AP0600A		05	YC001-YC030, YK901-YM670	

SPARE WIRE LIST

D280A103

91-21-12

Section AB0340A

Page 1

May 11/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To Equip	Term	Type	Matewith	Pos	Effectivity
AB0340A	05	W3058	RN2	DISCONNECT BRACKET-LEFT (continued)							
D40050J	9		0382	20	PA	D40226P	9		AP0600A	05	YC001-YC030, YK901-YM670
D40050J	11		0383	20	PA	D40226P	12		AP0600A	05	YC001-YC030, YK901-YM670
AB0340A	05	W6242	RN1	DISCONNECT BRACKET-LEFT							
D40050P	8		0059	20	PA	D11452	CAP	Y	P0092		ALL
D40050P	9		0060	20	PA	D11452	CAP	Y	P0092		ALL
AB0340A	06	W3158	LN1*	DISCONNECT BRACKET-LEFT							
D40108J	1		0101	20	PA	D40216J	4		AB0340A	02	ALL
D40108J	2		0102	20	PA	D40216J	5		AB0340A	02	ALL
D40108J	11		0111	20	PA	D40116P	1		D40116J		ALL
D40108J	12		0112	20	PA	D40116P	3		D40116J		ALL
AB0340A	09	W3158	LN1*	DISCONNECT BRACKET-LEFT							
D40102J	3		0203	20	PA	D40110P	2		D40110J		ALL
D40102J	4		0204	20	PA	D42002P	2		D42002J		ALL
D40102J	12		0212	20	PA	D42006P	2		D42006J		YC001-YC050
D40102J	12		0212	20	PA	D40996P	2		D40996J		YK901-YL430
D40102J	25		0225	20	PA	D40112P	2		D40112J		YC001-YC050
D40102J	25		0225	20	PA	D42010P	2		D42010J		YK901-YL430
D40102J	26		0226	20	PA	D42004P	2		D42004J		ALL
D40102J	28		0228	20	PA	D40114P	2		D40114J		YC001-YC050
D40102J	28		0228	20	PA	D40994P	2		D40994J		YK901-YL430

SPARE WIRE LIST

D280A103

91-21-12

Section AB0340A

Page 2 End

Feb 09/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY	To Equip	Term	Type	Matewith	Pos	Effectivity
AB0340B	07	W4142	LB2*	DISCONNECT BRACKET-RIGHT						
D40296J	4		0036	20 PA	D10748	CAP	Y	M01674		ALL
D40296J	7		0037	20 PA	D10744	CAP	Y	M01672		ALL
D40296J	15		0038	20 PA	D10748	CAP	Y	M01674		ALL
D40296J	CAP	Y	0039	20 PA	D10744	CAP	Y	M01672		ALL
AB0340B	09	W4258	RN1	DISCONNECT BRACKET-RIGHT						
D40202J	3		0203	20 PA	D40214P	CAP	Y	D40214J		ALL
D40202J	4		0204	20 PA	D40214P	CAP	Y	D40214J		ALL
D40202J	25		0225	20 PA	D40210P	CAP	Y	D40210J		ALL
D40202J	26		0226	20 PA	D40210P	CAP	Y	D40210J		ALL

SPARE WIRE LIST

D280A103

91-21-12

Section AB0340B

Page 1 End

Feb 09/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY		To Equip	Term	Type	Matewith	Pos	Effectivity
AB0405B	01	W4170	RA2*	DISCONNECT BRACKET							
D40728P	6		2609B	20	PB	D40732P	A10		AE0301A	36	ALL
D40728P	7		2609R	20	PB	D40732P	B10		AE0301A	36	ALL
AB0405B	01	W6170	RA2*	DISCONNECT BRACKET							
D40728J	6		2603B	20	PB	D39926	10		AD0520		ALL
D40728J	7		2603R	20	PB	D39926	2		AD0520		ALL
D40728J	8		2604B	20	PB	D39926	11		AD0520		ALL
D40728J	9		2604R	20	PB	D39926	24		AD0520		ALL
D40728J	15		2605B	20	PB	D39926	15		AD0520		ALL
D40728J	16		2605R	20	PB	D39926	16		AD0520		ALL
AB0405B	02	W4170	RA2*	DISCONNECT BRACKET							
D40730P	9		2605B	20	PB	D40732P	A05		AE0301A	36	ALL
D40730P	10		2605R	20	PB	D40732P	B05		AE0301A	36	ALL
D40730P	11		2606B	20	PB	D40732P	A06		AE0301A	36	ALL
D40730P	12		2606R	20	PB	D40732P	B06		AE0301A	36	ALL
AB0405B	02	W6172	RA2*	DISCONNECT BRACKET							
D40730J	9		2612B	20	PB	D39918	12		AD0520		ALL
D40730J	10		2612R	20	PB	D39918	3		AD0520		ALL
D40730J	11		2613B	20	PB	D39918	14		AD0520		ALL
D40730J	12		2613R	20	PB	D39918	32		AD0520		ALL

SPARE WIRE LIST

D280A103

91-21-12

Section AB0405B

Page 1 End

Feb 09/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To					Pos	Effectivity
				GA	TY	Equip	Term	Type	Matewith			
AB0420A	01	W3170	LA2*	DISCONNECT BRACKET								
D40734P	1		2601B	20	PB	D40126P	A01		AE0202A		27	ALL
D40734P	2		2601R	20	PB	D40126P	B01		AE0202A		27	ALL
D40734P	3		2602B	20	PB	D40126P	A02		AE0202A		27	ALL
D40734P	4		2602R	20	PB	D40126P	B02		AE0202A		27	ALL
D40734P	5		2603B	20	PB	D40126P	A03		AE0202A		27	ALL
D40734P	6		2603R	20	PB	D40126P	B03		AE0202A		27	ALL
AB0420A	01	W5170	SA2*	DISCONNECT BRACKET								
D40734J	1		2601B	20	PB	D39925		10	AC0520			ALL
D40734J	2		2601R	20	PB	D39925		2	AC0520			ALL
D40734J	3		2602B	20	PB	D39925		11	AC0520			ALL
D40734J	4		2602R	20	PB	D39925		24	AC0520			ALL
D40734J	5		2603B	20	PB	D39925		15	AC0520			ALL
D40734J	6		2603R	20	PB	D39925		16	AC0520			ALL
AB0420A	02	W3170	LA2*	DISCONNECT BRACKET								
D40736P	1		2606B	20	X2	D49994P	A07		AE0301A		14	ALL
D40736P	2		2606R	20	X2	D49994P	B06		AE0301A		14	ALL
D40736P	S/R		2606Z			D49994P	PERG	1F	AE0301A		14	ALL
D40736P	4		2607B	20	X2	D40126P	A11		AE0202A		27	ALL
D40736P	5		2607R	20	X2	D40126P	B11		AE0202A		27	ALL
D40736P	S/R		2607Z			D40126P	PERG	1F	AE0202A		27	ALL
AB0420A	02	W5172	LA2*	DISCONNECT BRACKET								
D40736J	1		2604B	20	X2	D39917		12	AC0520			ALL
D40736J	2		2604R	20	X2	D39917		3	AC0520			ALL
D40736J	S/R		2604Z			D39917		S/R	AC0520			ALL
D40736J	4		2605B	20	X2	D39917		14	AC0520			ALL
D40736J	5		2605R	20	X2	D39917		32	AC0520			ALL
D40736J	S/R		2605Z			D39917		S/R	AC0520			ALL

SPARE WIRE LIST

D280A103

91-21-12

Section AB0420A

Page 1 End

Feb 09/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To		Term	Type	Matewith	Pos	Effectivity
				GA	TY	Equip						
AB0500DL	05	W5248	LN2*	DISCONNECT BRACKET-LEFT WING								
D40500J	1		0499	20	PA	D40584P		A01		AE0402A	02	ALL
D40500J	3		0500	20	PA	D40584P		B01		AE0402A	02	ALL
AB0500DL	05	W6248	LN2*	DISCONNECT BRACKET-LEFT WING								
D40500P	1		0499	20	PA	D00866		CAP	Y	M00276		ALL
D40500P	3		0500	20	PA	D00866		CAP	Y	M00276		ALL
AB0500DL	06	W5074	SB2	DISCONNECT BRACKET-LEFT WING								
D46608P	1		6003	22	PA	D12816		3		M2263		YC008-YC030, YK901-YK912, YL421-YL428, YM643-YM652
D46608P	12		6006	22	CQ	D12818		1		M2263		YC008-YC030, YK901-YK912, YL421-YL428, YM643-YM652
D46608P	9		6009	22	CQ	D12820		1		M02263		YC008-YC030, YK901-YK912, YL421-YL428, YM643-YM652
AB0500DL	06	W5088	NB2	DISCONNECT BRACKET-LEFT WING								
D46608J	1		6015	22	PA	D42014P		A05		AE0202A	32	YC001-YK917, YL421-YL428, YL430-YM670
D46608J	12		6016	22	CQ	D42014P		A01		AE0202A	32	YC001-YK917, YL421-YL428, YL430-YM670
D46608J	9		6017	22	CQ	D42014P		A03		AE0202A	32	YC001-YK917, YL421-YL428, YL430-YM670
AB0500DL	09	W5526	SA2	DISCONNECT BRACKET-LEFT WING								
D40302J	10		5516	20	PA	D43016J		9		AE0104A	22	YC001-YC030, YK901-YM670
D40302J	11		5517	20	PA	D43016J		10		AE0104A	22	YC001-YC030, YK901-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section AB0500DL

Page 1 End

Feb 09/2009



737-700/800 WIRING DIAGRAM MANUAL

<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>					
Equip	Term	Type	Wire No.	GA	TY		Equip	Term	Type	Matewith	Pos	Effectivity
AB0536L	01	W5526	SA2	DISCONNECT BRACKET-LEFT AC BAY								
D04580P	12		5512	20	PA		D43016J	7		AE0104A	22	YC001-YC030, YK901-YM670
D04580P	13		5513	20	PA		D43016J	8		AE0104A	22	YC001-YC030, YK901-YM670
AB0536L	02	W5104	LA2	DISCONNECT BRACKET-LEFT AC BAY								
D40056P	18		5520	20	PA		D40244P	B05		AE0401A	29	ALL
D40056P	19		5521	20	PA		D40244P	B06		AE0401A	29	ALL
D40056P	16		5522	20	PA		D40246P	A08		AE0202A	01	ALL

SPARE WIRE LIST

D280A103

91-21-12

Section AB0536L

Page 1 End

Feb 09/2009



<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>					
Equip	Term	Type	Wire No.		GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
AB0858		01	W3583	NN2	DISCONNECT BRACKET							
D45289J	31		0016		20	PA	GD04270	ST..	1			YK901-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section AB0858

Page 1 End

Feb 09/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To					Pos	Effectivity	
				GA	TY	Equip	Term	Type	Matewith				
AB1030A	01	W3555	RN2	DISCONNECT BRACKET-AFT PRESSURE BLKHD.									
D04245J	9		0009	20	PA	D40125P	B02	AE0602A			11	YM643-YM670	
D04245J	10		0010	20	PA	D40125P	A03	AE0602A			11	YM643-YM670	
AB1030A	03	W3509	LA2	DISCONNECT BRACKET-AFT PRESSURE BLKHD.									
D04227J	9		0009	20	PA	D08509P	B02	AE0801A			03	YK907-YL430	
D04227J	10		0010	20	PA	D08509P	A03	AE0801A			03	YK907-YL430	
AB1030A	03	W3553	LN2	DISCONNECT BRACKET-AFT PRESSURE BLKHD.									
D04227J	9		0009	20	PA	D40121P	B02	AE0602A			12	YM643-YM670	
D04227J	10		0010	20	PA	D40121P	A03	AE0602A			12	YM643-YM670	

SPARE WIRE LIST

D280A103

91-21-12

Section AB1030A

Page 1 End

Feb 09/2009



From Matewith From	Pos	Bundle	Sep	Description			To					
Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity	
AB1050L	02	W3393	LG2	DISCONNECT BRACKET-SEC 48 L								
D43393J	15		1015	20	VF	D00545	15		M00414		YC008-YM670	
D43393J	S/R		1015Z			GD04809	ST..	E			YC008-YM670	
D43393J	17		1017	20	VF	D00545	17		M00414		YC008-YM670	
D43393J	S/R		1017Z			GD04809	ST..	E			YC008-YM670	
D43393J	19		1019	20	VF	D00545	19		M00414		YC008-YM670	
D43393J	S/R		1019Z			GD04809	ST..	E			YC008-YM670	
D43393J	21		1021	20	VF	D00545	21		M00414		YC008-YM670	
D43393J	S/R		1021Z			D00545	S/R		M00414		YC008-YM670	
AB1050L	02	W5301	LG2	DISCONNECT BRACKET-SEC 48 L								
D43393P	15		0015	22	PA	D04425P	A05		AE0101A	08	YC008-YM670	
D43393P	17		0017	22	PA	D04425P	A07		AE0101A	08	YC008-YM670	
D43393P	19		0019	22	PA	D04425P	A09		AE0101A	08	YC008-YM670	
D43393P	21		0021	22	PA	D04425P	B01		AE0101A	08	YC008-YM670	
D43393P	10		2007B	22	PB	D04425P	B10		AE0101A	08	YC008-YM670	
D43393P	9		2007R	22	PB	D04425P	B09		AE0101A	08	YC008-YM670	
AB1050L	03	W3377	LA3	DISCONNECT BRACKET-SEC 48 L								
D43397P	46		0010	20	PA	D04079P	B01		AE0101A	32	YC008-YM670	
D43397P	41		3006B	22	PC	D04079P	B08		AE0101A	32	YC008-YM670	
D43397P	40		3006R	22	PC	D04079P	B07		AE0101A	32	YC008-YM670	
D43397P	42		3006Y	22	PC	D04079P	B09		AE0101A	32	YC008-YM670	
AB1050L	03	W3397	LA3	DISCONNECT BRACKET-SEC 48 L								
D43397J	41		3006B	22	HG	D01681	REF	VP	M01020		YC008-YM670	
D43397J	40		3006R	22	HG	D01681	REF	VP	M01020		YC008-YM670	
D43397J	42		3006Y	22	HG	D01681	REF	VP	M01020		YC008-YM670	
D43397J	S/R		3006Z			D01681			M01020		YC008-YC030	
D43397J	S/R		3006Z			GD00949	ST..	E			YC031-YM670	
AB1050L	04	W3381	LE2	DISCONNECT BRACKET-SEC 48 L								
D44381P	21		0006	20	PA	D04083P	A02		AE0101A	26	YC008-YC030	
D44381P	1		0006	20	PA	D04083P	A02		AE0101A	26	YC031-YM670	
D44381P	25		0007	20	PA	D04083P	A07		AE0101A	26	YC008-YC030	
D44381P	2		0007	20	PA	D04083P	A07		AE0101A	26	YC031-YM670	

SPARE WIRE LIST

D280A103

91-21-12

Section AB1050L

Page 1

Feb 09/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To					Pos	Effectivity		
				GA	TY	Equip	Term	Type	Matewith					
AB1050L	05	W5381	LA2	DISCONNECT BRACKET-SEC 48 L										
D45501J	15		2008B	22	VG	D45551P	B02						YC023-YC026	
D45501J	14		2008R	22	VG	D45551P	A02						YC023-YC026	
D45501J	S/R		2008Z			D45551P	PERG	1F					YC023-YC026	
D45501J	17		2009B	20	HF	D45551P	B08						YC023-YC026	
D45501J	16		2009R	20	HF	D45551P	A08						YC023-YC026	
D45501J	S/R		2009Z			D45551P	PERG	1F					YC023-YC026	
D45501P	15		2008B	22	VG	D45551P	B02						YC020-YC022	
D45501P	14		2008R	22	VG	D45551P	A02						YC020-YC022	
D45501P	S/R		2008Z			D45551P	PERG	1F					YC020-YC022	
D45501P	17		2009B	20	HF	D45551P	B08						YC020-YC022	
D45501P	16		2009R	20	HF	D45551P	A08						YC020-YC022	
D45501P	S/R		2009Z			D45551P	PERG	1F					YC020-YC022	
D45501J	13		2008B	22	VG	D45551P	B02						YC028-YC030	
D45501J	13		2008B	22	VG	D45551P	B02			AE0101A	36		YC031-YM670	
D45501J	4		2008R	22	VG	D45551P	A02						YC028-YC030	
D45501J	4		2008R	22	VG	D45551P	A02			AE0101A	36		YC031-YM670	
D45501J	S/R		2008Z			D45551P	PERG	1F					YC028-YC030	
D45501J	S/R		2008Z			D45551P	PERG	1F		AE0101A	36		YC031-YM670	
D45501J	10		2009B	20	HF	D45551P	B09						YC028-YC030	
D45501J	10		2009B	20	HF	D45551P	B09			AE0101A	36		YC031-YM670	
D45501J	2		2009R	20	HF	D45551P	A09						YC028-YC030	
D45501J	2		2009R	20	HF	D45551P	A09			AE0101A	36		YC031-YM670	
D45501J	S/R		2009Z			D45551P	PERG	1F					YC028-YC030	
D45501J	S/R		2009Z			D45551P	PERG	1F		AE0101A	36		YC031-YM670	

SPARE WIRE LIST

D280A103

91-21-12
 Section AB1050L
 Page 2 End
 Feb 09/2009



From Matewith	Pos	Bundle	Sep	Description		To						
From				GA	TY	Equipment	Term	Type	Matewith	Pos	Effectivity	
Equip	Term	Type	Wire No.									
AB1050R	04	W3379	RB3	DISCONNECT BRACKET-SEC 48 R								
D43399P	2		0002	20	CQ	D40029P	A09		AE0302A	35	YC008-YM670	
D43399P	50		0022	20	CQ	D04081J	3		AE0104A	03	YC008-YM670	
D43399P	37		2010B	22	X2	D40029P	B02		AE0302A	35	YC008-YM670	
D43399P	36		2010R	22	X2	D40029P	B01		AE0302A	35	YC008-YM670	
D43399P	S/R		2010Z			D40029P	PERG	1F	AE0302A	35	YC008-YM670	
D43399P	41		3006B	22	PC	D04081J	28		AE0104A	03	YC008-YM670	
D43399P	40		3006R	22	PC	D04081J	27		AE0104A	03	YC008-YM670	
D43399P	42		3006Y	22	PC	D04081J	29		AE0104A	03	YC008-YM670	
D43399P	44		3007B	22	X3	D40029P	B09		AE0302A	35	YC008-YM670	
D43399P	43		3007R	22	X3	D40029P	B08		AE0302A	35	YC008-YM670	
D43399P	45		3007Y	22	X3	D40029P	B10		AE0302A	35	YC008-YM670	
D43399P	S/R		3007Z			D40029P	PERG	1F	AE0302A	35	YC008-YM670	
AB1050R	06	W5383	RB2	DISCONNECT BRACKET-SEC 48 R								
D45503J	15		2008B	22	VG	D45553J	15		AE0104A	13	YC023-YC026	
D45503J	14		2008R	22	VG	D45553J	14		AE0104A	13	YC023-YC026	
D45503J	S/R		2008Z			D45553J	S/R		AE0104A	13	YC023-YC026	
D45503J	17		2009B	20	HF	D45553J	17		AE0104A	13	YC023-YC026	
D45503J	16		2009R	20	HF	D45553J	16		AE0104A	13	YC023-YC026	
D45503J	S/R		2009Z			D45553J	S/R		AE0104A	13	YC023-YC026	
D45503P	15		2008B	22	VG	D45553J	15		AE0104A	13	YC020-YC022	
D45503P	14		2008R	22	VG	D45553J	14		AE0104A	13	YC020-YC022	
D45503P	S/R		2008Z			D45553J	S/R		AE0104A	13	YC020-YC022	
D45503P	17		2009B	20	HF	D45553J	17		AE0104A	13	YC020-YC022	
D45503P	16		2009R	20	HF	D45553J	16		AE0104A	13	YC020-YC022	
D45503P	S/R		2009Z			D45553J	S/R		AE0104A	13	YC020-YC022	
D45503J	13		2008B	22	VG	D45553J	13		AE0104A	13	YC028-YM670	
D45503J	4		2008R	22	VG	D45553J	4		AE0104A	13	YC028-YM670	
D45503J	S/R		2008Z			D45553J	S/R		AE0104A	13	YC028-YM670	
D45503J	10		2009B	20	HF	D45553J	10		AE0104A	13	YC028-YM670	
D45503J	2		2009R	20	HF	D45553J	2		AE0104A	13	YC028-YM670	
D45503J	S/R		2009Z			D45553J	S/R		AE0104A	13	YC028-YM670	

SPARE WIRE LIST

D280A103

91-21-12

Section AB1050R

Page 1 End

Feb 09/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description		To					Effectivity	
						Equip	Term	Type	Matewith	Pos		
AB1080	03	W3399	RB3	DISCONNECT BRACKET-STA 1080								
D43389J	11		3006B	22	HG	D01687	REF	VP	M01022		YC008-YM670	
D43389J	11		3006B	22	HG	D01687	REF	VP	M01022		YC015-YC022	
D43389J	11		3006B	22	HG	D01687	REF	VP	M01022		YC023-YC026	
D43389J	11		3006B	22	HG	D01687	REF	VP	M01022		YC028-YC030	
D43389J	11		3006B	22	HG	D01687	REF	VP	M01022		YC031-YC050	
D43389J	11		3006B	22	HG	D01687	REF	VP	M01022		YK901-YK910	
D43389J	11		3006B	22	HG	D01687	REF	VP	M01022		YK911-YK920	
D43389J	11		3006B	22	HG	D01687	REF	VP	M01022		YL401	
D43389J	11		3006B	22	HG	D01687	REF	VP	M01022		YL421-YL423	
D43389J	11		3006B	22	HG	D01687	REF	VP	M01022		YL424-YL430	
D43389J	11		3006B	22	HG	D01687	REF	VP	M01022		YM643	
D43389J	11		3006B	22	HG	D01687	REF	VP	M01022		YM645-YM647	
D43389J	11		3006B	22	HG	D01687	REF	VP	M01022		YM649	
D43389J	11		3006B	22	HG	D01687	REF	VP	M01022		YM651-YM670	
D43389J	10		3006R	22	HG	D01687	REF	VP	M01022		YC008-YC013	
D43389J	10		3006R	22	HG	D01687	REF	VP	M01022		YC008-YM670	
D43389J	10		3006R	22	HG	D01687	REF	VP	M01022		YC015-YC022	
D43389J	10		3006R	22	HG	D01687	REF	VP	M01022		YC023-YC026	
D43389J	10		3006R	22	HG	D01687	REF	VP	M01022		YC028-YC030	
D43389J	10		3006R	22	HG	D01687	REF	VP	M01022		YC031-YC050	
D43389J	10		3006R	22	HG	D01687	REF	VP	M01022		YK911-YK920	
D43389J	10		3006R	22	HG	D01687	REF	VP	M01022		YL401	
D43389J	10		3006R	22	HG	D01687	REF	VP	M01022		YL421-YL423	
D43389J	10		3006R	22	HG	D01687	REF	VP	M01022		YL424-YL430	
D43389J	10		3006R	22	HG	D01687	REF	VP	M01022		YM643	
D43389J	10		3006R	22	HG	D01687	REF	VP	M01022		YM645-YM647	
D43389J	10		3006R	22	HG	D01687	REF	VP	M01022		YM649	
D43389J	10		3006R	22	HG	D01687	REF	VP	M01022		YM651-YM670	
D43389J	12		3006Y	22	HG	D01687	REF	VP	M01022		YC008-YC013	
D43389J	12		3006Y	22	HG	D01687	REF	VP	M01022		YC008-YM670	
D43389J	12		3006Y	22	HG	D01687	REF	VP	M01022		YC015-YC022	
D43389J	12		3006Y	22	HG	D01687	REF	VP	M01022		YC023-YC026	
D43389J	12		3006Y	22	HG	D01687	REF	VP	M01022		YC028-YC030	
D43389J	12		3006Y	22	HG	D01687	REF	VP	M01022		YC031-YC050	
D43389J	12		3006Y	22	HG	D01687	REF	VP	M01022		YK901-YK910	
D43389J	12		3006Y	22	HG	D01687	REF	VP	M01022		YK911-YK920	
D43389J	12		3006Y	22	HG	D01687	REF	VP	M01022		YL401	
D43389J	12		3006Y	22	HG	D01687	REF	VP	M01022		YL421-YL423	

SPARE WIRE LIST

D280A103

91-21-12

Section AB1080

Page 1

Aug 10/2009



From	Matewith	Pos	Bundle	Sep	Description		To					Pos	Effectivity	
							Equip	Term	Type	Matewith	Pos			Effectivity
I	AB1080	03	W3399	RB3	DISCONNECT BRACKET-STA 1080 (continued)									
	D43389J	12		3006Y	22	HG	D01687	REF	VP	M01022		YL424-YL430		
	D43389J	12		3006Y	22	HG	D01687	REF	VP	M01022		YM645-YM647		
	D43389J	12		3006Y	22	HG	D01687	REF	VP	M01022		YM649		
	D43389J	12		3006Y	22	HG	D01687	REF	VP	M01022		YM651-YM670		
	D43389J	S/R		3006Z			D01687			M01022		YC008-YC030		
	D43389J	S/R		3006Z			D01687			M01022		YC015-YC022		
	D43389J	S/R		3006Z			D01687			M01022		YC023-YC026		
	D43389J	S/R		3006Z			D01687			M01022		YC028-YC030		
	D43389J	S/R		3006Z			GD00973	ST..	E			YC031-YC050		
	D43389J	S/R		3006Z			GD00973	ST..	E			YC031-YM670		
	D43389J	S/R		3006Z			GD00973	ST..	E			YK901-YK910		
	D43389J	S/R		3006Z			GD00973	ST..	E			YK911-YK920		
	D43389J	S/R		3006Z			GD00973	ST..	E			YL401		
	D43389J	S/R		3006Z			GD00973	ST..	E			YL421-YL423		
	D43389J	S/R		3006Z			GD00973	ST..	E			YM643		
	D43389J	S/R		3006Z			GD00973	ST..	E			YM645-YM647		
	D43389J	S/R		3006Z			GD00973	ST..	E			YM649		
	D43389J	S/R		3006Z			GD00973	ST..	E			YM651-YM670		

SPARE WIRE LIST

D280A103

91-21-12

Section AB1080

Page 2 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY		To Equip	Term	Type	Matewith	Pos	Effectivity
AC0520		W1174	LA2	DISCONNECT BRACKET							
D39919	12		2004B	20	HQ	D30040	12		AW0258L	02	YC001-YC007
D39919	3		2004R	20	HQ	D30040	3		AW0258L	02	YC001-YC007
D39919	PERB		2004Z			D30040	PERB		AW0258L	02	YC001-YC007
D39919	14		2005B	20	HQ	D30040	14		AW0258L	02	YC001-YC007
D39919	32		2005R	20	HQ	D30040	32		AW0258L	02	YC001-YC007
D39919	PERB		2005Z			D30040	PERB		AW0258L	02	YC001-YC007
AC0520		W1176	LB2	DISCONNECT BRACKET							
D39923	14		2001B	20	HQ	D30082	14		AW0258L	03	YC001-YC007
D39923	5		2001R	20	HQ	D30082	5		AW0258L	03	YC001-YC007
D39923	PERB		2001Z			D30082	PERB		AW0258L	03	YC001-YC007
D39923	31		2002B	20	HQ	D30082	31		AW0258L	03	YC001-YC007
D39923	30		2002R	20	HQ	D30082	30		AW0258L	03	YC001-YC007
D39923	PERB		2002Z			D30082	PERB		AW0258L	03	YC001-YC007
AC0520		W1178	LN2	DISCONNECT BRACKET							
D39927	11		2001B	20	HQ	D08056J	13		AW0258L	06	ALL
D39927	24		2001R	20	HQ	D08056J	12		AW0258L	06	ALL
D39927	S/R		2001Z			D08056J	S/R		AW0258L	06	ALL
D39927	10		2002B	20	HQ	D08056J	10		AW0258L	06	ALL
D39927	2		2002R	20	HQ	D08056J	2		AW0258L	06	ALL
D39927	S/R		2002Z			D08056J	S/R		AW0258L	06	ALL
D39927	15		2003B	20	HQ	D08056J	14		AW0258L	06	ALL
D39927	16		2003R	20	HQ	D08056J	4		AW0258L	06	ALL
D39927	S/R		2003Z			D08056J	S/R		AW0258L	06	ALL
AC0520		W1182	SB2	DISCONNECT BRACKET							
D39931	2		2001B	20	HQ	D30062	16		AW0258L	05	YC001-YC030, YK901-YM670
D39931	3		2001R	20	HQ	D30062	15		AW0258L	05	YC001-YC030, YK901-YM670
D39931	S/R		2001Z			D30062	S/R		AW0258L	05	YC001-YC030, YK901-YM670
D39931	4		2002B	20	HQ	D30062	18		AW0258L	05	YC001-YC030, YK901-YM670
D39931	5		2002R	20	HQ	D30062	17		AW0258L	05	YC001-YC030, YK901-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section AC0520

Page 1

Aug 10/2009



From Matewith From	Pos	Bundle	Sep	Description		To						
Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity	
AC0520		W1182	SB2	DISCONNECT BRACKET (continued)								
D39931	S/R		2002Z			D30062	S/R		AW0258L	05	YC001-YC030, YK901-YM670	
AC0520		W1184	SA1	DISCONNECT BRACKET								
D39911	6		2004B	20	HQ	D30014	37		AW0258L	04	YC001-YC030, YK901-YM670	
D39911	5		2004R	20	HQ	D30014	36		AW0258L	04	YC001-YC030, YK901-YM670	
D39911	S/R		2004Z			D30014	S/R		AW0258L	04	YC001-YC030, YK901-YM670	
AC0520		W5162	LB2*	DISCONNECT BRACKET								
D39921	14		2601B	20	X2	D40130P	A03		AE0202A	25	ALL	
D39921	5		2601R	20	X2	D40130P	B03		AE0202A	25	ALL	
D39921	S/R		2601Z			D40130P	PERG	1F	AE0202A	25	ALL	
D39921	31		2609B	20	X2	D40130P	A09		AE0202A	25	ALL	
D39921	30		2609R	20	X2	D40130P	B09		AE0202A	25	ALL	
D39921	S/R		2609Z			D40130P	PERG	1F	AE0202A	25	ALL	
AC0520		W5164	LA1*	DISCONNECT BRACKET								
D39933	26		2602B	20	X2	D40718P	A05		AE0201A	17	ALL	
D39933	25		2602R	20	X2	D40718P	B05		AE0201A	17	ALL	
D39933	S/R		2602Z			D40718P	PERG	1F	AE0201A	17	ALL	
AC0520		W5168	SB2*	DISCONNECT BRACKET								
D39929	2		2601B	20	X2	D40138P	A02		AE0202A	08	ALL	
D39929	3		2601R	20	X2	D40138P	B02		AE0202A	08	ALL	
D39929	S/R		2601Z			D40138P	PERG	1F	AE0202A	08	ALL	
D39929	4		2602B	20	X2	D40138P	A03		AE0202A	08	ALL	
D39929	5		2602R	20	X2	D40138P	B03		AE0202A	08	ALL	
D39929	S/R		2602Z			D40138P	PERG	1F	AE0202A	08	ALL	
AC0520		W5170	SA2*	DISCONNECT BRACKET								
D39925	10		2601B	20	PB	D40734J	1		AB0420A	01	ALL	
D39925	2		2601R	20	PB	D40734J	2		AB0420A	01	ALL	
D39925	11		2602B	20	PB	D40734J	3		AB0420A	01	ALL	
D39925	24		2602R	20	PB	D40734J	4		AB0420A	01	ALL	

SPARE WIRE LIST

D280A103

91-21-12

Section AC0520

Page 2

Aug 10/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To		Matewith	Pos	Effectivity
				GA	TY	Equip	Term			
AC0520		W5170	SA2*	DISCONNECT BRACKET (continued)						
D39925	15		2603B	20	PB	D40734J	5	AB0420A	01	ALL
D39925	16		2603R	20	PB	D40734J	6	AB0420A	01	ALL
AC0520		W5172	LA2*	DISCONNECT BRACKET						
D39917	12		2604B	20	X2	D40736J	1	AB0420A	02	ALL
D39917	3		2604R	20	X2	D40736J	2	AB0420A	02	ALL
D39917	S/R		2604Z			D40736J	S/R	AB0420A	02	ALL
D39917	14		2605B	20	X2	D40736J	4	AB0420A	02	ALL
D39917	32		2605R	20	X2	D40736J	5	AB0420A	02	ALL
D39917	S/R		2605Z			D40736J	S/R	AB0420A	02	ALL
AC0520		W5564	SN2*	DISCONNECT BRACKET						
D39909	6		2601B	20	X2	D40136P	A01	AE0202A	07	ALL
D39909	5		2601R	20	X2	D40136P	B01	AE0202A	07	ALL
D39909	S/R		2601Z			D40136P	PERG 1F	AE0202A	07	ALL

SPARE WIRE LIST

D280A103

91-21-12

Section AC0520

Page 3 End

Aug 10/2009



<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>					
Equip	Term	Type	Wire No.		GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
AC0538			W5204	NN2								
D13928	17		0002		20	PA	D40332J	2		AE0104A	26	YC031-YC050, YK906-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section AC0538

Page 1 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description		To						
Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity	
AD0520		W1274	RA2	DISCONNECT BRACKET								
D39920	12		2004B	20	HQ	D30140	12		AW0258R	02	YC001-YC007	
D39920	3		2004R	20	HQ	D30140	3		AW0258R	02	YC001-YC007	
D39920	PERB		2004Z			D30140	PERB		AW0258R	02	YC001-YC007	
D39920	14		2005B	20	HQ	D30140	14		AW0258R	02	YC001-YC007	
D39920	32		2005R	20	HQ	D30140	32		AW0258R	02	YC001-YC007	
D39920	PERB		2005Z			D30140	PERB		AW0258R	02	YC001-YC007	
AD0520		W1276	RB2	DISCONNECT BRACKET								
D39924	14		2001B	20	HQ	D30182	14		AW0258R	03	YC001-YC007	
D39924	5		2001R	20	HQ	D30182	5		AW0258R	03	YC001-YC007	
D39924	PERB		2001Z			D30182	PERB		AW0258R	03	YC001-YC007	
D39924	31		2002B	20	HQ	D30182	31		AW0258R	03	YC001-YC007	
D39924	30		2002R	20	HQ	D30182	30		AW0258R	03	YC001-YC007	
D39924	PERB		2002Z			D30182	PERB		AW0258R	03	YC001-YC007	
AD0520		W1278	RN2	DISCONNECT BRACKET								
D39928	11		2001B	20	HQ	D08156J	13		AW0258R	06	ALL	
D39928	24		2001R	20	HQ	D08156J	12		AW0258R	06	ALL	
D39928	S/R		2001Z			D08156J	S/R		AW0258R	06	ALL	
D39928	10		2002B	20	HQ	D08156J	10		AW0258R	06	ALL	
D39928	2		2002R	20	HQ	D08156J	2		AW0258R	06	ALL	
D39928	S/R		2002Z			D08156J	S/R		AW0258R	06	ALL	
D39928	15		2003B	20	HQ	D08156J	14		AW0258R	06	ALL	
D39928	16		2003R	20	HQ	D08156J	4		AW0258R	06	ALL	
D39928	S/R		2003Z			D08156J	S/R		AW0258R	06	ALL	
AD0520		W1282	SB2*	DISCONNECT BRACKET								
D39932	2		2001B	20	HQ	D30162	16		AW0258R	05	ALL	
D39932	3		2001R	20	HQ	D30162	15		AW0258R	05	ALL	
D39932	S/R		2001Z			D30162	S/R		AW0258R	05	ALL	
D39932	4		2002B	20	HQ	D30162	18		AW0258R	05	ALL	
D39932	5		2002R	20	HQ	D30162	17		AW0258R	05	ALL	
D39932	S/R		2002Z			D30162	S/R		AW0258R	05	ALL	
AD0520		W1284	SN1	DISCONNECT BRACKET								
D39912	6		2004B	20	HQ	D30114	37		AW0258R	04	YC001-YC030, YK901-YM670	

SPARE WIRE LIST

D280A103

91-21-12

Section AD0520

Page 1

Aug 10/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY		To Equip	Term	Type	Matewith	Pos	Effectivity
AD0520		W1284	SN1	DISCONNECT BRACKET (continued)							
D39912	5		2004R	20	HQ	D30114	36		AW0258R	04	YC001-YC030, YK901-YM670
D39912	S/R		2004Z			D30114	S/R		AW0258R	04	YC001-YC030, YK901-YM670
D39936	26		2001B	20	HQ	D30114	21		AW0258R	04	YC001-YC030, YK901-YK910, YK918, YL421-YL423, YM645-YM646
D39936	26		2001B	20	HQ	D30114	30		AW0258R	04	YK911-YK917, YK919-YL401, YL424-YM643, YM647-YM670
D39936	25		2001R	20	HQ	D30114	20		AW0258R	04	YC001-YC030, YK901-YK910, YK918, YL421-YL423, YM645-YM646
D39936	25		2001R	20	HQ	D30114	32		AW0258R	04	YK911-YK917, YK919-YL401, YL424-YM643, YM647-YM670
D39936	S/R		2001Z			D30114	S/R		AW0258R	04	YC001-YC030, YK901-YM670
AD0520		W6162	RB2*	DISCONNECT BRACKET							
D39922	14		2611B	20	PB	D40156P	A14		AE0401A	50	YC001-YC003, YC008-YM670
D39922	14		2611B	20	GB	D40156P	A14		AE0401A	50	YC004-YC007
D39922	5		2611R	20	PB	D40156P	B14		AE0401A	50	YC001-YC003, YC008-YM670
D39922	5		2611R	20	GB	D40156P	B14		AE0401A	50	YC004-YC007
D39922	31		2612B	20	PB	D40156P	A15		AE0401A	50	YC001-YC003, YC008-YM670
D39922	31		2612B	20	GB	D40156P	A15		AE0401A	50	YC004-YC007
D39922	30		2612R	20	PB	D40156P	B15		AE0401A	50	YC001-YC003, YC008-YM670
D39922	30		2612R	20	GB	D40156P	B15		AE0401A	50	YC004-YC007

SPARE WIRE LIST

D280A103

91-21-12

Section AD0520

Page 2

Aug 10/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To					Pos	Effectivity	
				GA	TY	Equip	Term	Type	Matewith				
AD0520		W6164	RB1*	DISCONNECT BRACKET									
D39934	26		2602B	20	PB	D40720P	A09		AE0402A		27	ALL	
D39934	25		2602R	20	PB	D40720P	B09		AE0402A		27	ALL	
AD0520		W6168	SB2*	DISCONNECT BRACKET									
D39930	2		2601B	20	VG	D40144P	A01		AE0401A		38	ALL	
D39930	3		2601R	20	VG	D40144P	B01		AE0401A		38	ALL	
D39930	S/R		2601Z			D40144P	PERG	1F	AE0401A		38	ALL	
D39930	4		2602B	20	VG	D40144P	A02		AE0401A		38	ALL	
D39930	5		2602R	20	VG	D40144P	B02		AE0401A		38	ALL	
D39930	S/R		2602Z			D40144P	PERG	1F	AE0401A		38	ALL	
AD0520		W6170	RA2*	DISCONNECT BRACKET									
D39926	10		2603B	20	PB	D40728J	6		AB0405B		01	ALL	
D39926	2		2603R	20	PB	D40728J	7		AB0405B		01	ALL	
D39926	11		2604B	20	PB	D40728J	8		AB0405B		01	ALL	
D39926	24		2604R	20	PB	D40728J	9		AB0405B		01	ALL	
D39926	15		2605B	20	PB	D40728J	15		AB0405B		01	ALL	
D39926	16		2605R	20	PB	D40728J	16		AB0405B		01	ALL	
AD0520		W6172	RA2*	DISCONNECT BRACKET									
D39918	12		2612B	20	PB	D40730J	9		AB0405B		02	ALL	
D39918	3		2612R	20	PB	D40730J	10		AB0405B		02	ALL	
D39918	14		2613B	20	PB	D40730J	11		AB0405B		02	ALL	
D39918	32		2613R	20	PB	D40730J	12		AB0405B		02	ALL	
AD0520		W6564	SN2*	DISCONNECT BRACKET									
D39910	6		2601B	20	VG	D40158P	A02		AE0401A		42	ALL	
D39910	5		2601R	20	VG	D40158P	B02		AE0401A		42	ALL	
D39910	S/R		2601Z			D40158P	PERG	1F	AE0401A		42	ALL	

SPARE WIRE LIST

D280A103

91-21-12

Section AD0520

Page 3 End

Aug 10/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY		To Equip	Term	Type	Matewith	Pos	Effectivity
AE0101A	03	W5111	NA2	DISCONNECT BRACKET - E1-1 SHELF							
D45133P	CAP	Y	0019	22	PA	D45115J	6		AE0102A	02	YC001-YC011
D45133P	CAP	Y	0020	22	PA	D45115J	7		AE0102A	02	YC001-YC011
D45133P	CAP	Y	0021	22	PA	D45115J	8		AE0102A	02	YC001-YC011
D45133P	B05		2046B	24	Y2	D45115J	50		AE0102A	02	YC001-YC030, YK901-YM670
D45133P	A05		2046R	24	Y2	D45115J	49		AE0102A	02	YC001-YC030, YK901-YM670
D45133P	PERG	1F	2046Z			D45115J	S/R		AE0102A	02	YC001-YC030, YK901-YM670
D45133P	B06		2047B	24	Y2	D45131P	B03		AE0301A	08	YC001-YC030, YK901-YM670
D45133P	A06		2047R	24	Y2	D45131P	A03		AE0301A	08	YC001-YC030, YK901-YM670
D45133P	PERG	1F	2047Z			D45131P	PERG	1F	AE0301A	08	YC001-YC030, YK901-YM670
D45133P	CAP	Y	2052B	24	Y2	D45131P	B06		AE0301A	08	YC001-YC007
D45133P	CAP	Y	2052R	24	Y2	D45131P	A06		AE0301A	08	YC001-YC007
D45133P	PERG	1F	2052Z			D45131P	PERG	1F	AE0301A	08	YC001-YC007
AE0101A	04	W5161	LA2	DISCONNECT BRACKET - E1-1 SHELF							
D41145P	A04		0035	24	PK	D43145P	B01		AE0301A	15	ALL
D41145P	A03		2511B	22	X2	D43155P	B16		AE0301A	16	ALL
D41145P	A02		2511R	22	X2	D43155P	B15		AE0301A	16	ALL
D41145P	PERG	1F	2511Z			D43155P	PERG	1F	AE0301A	16	ALL
AE0101A	06	W5461	LA2	DISCONNECT BRACKET - E1-1 SHELF							
D42311P	A10		2103B	24	Y2	D42261P	B12		AE0302A	41	YC001-YC030, YK901-YM670
D42311P	A09		2103R	24	Y2	D42261P	B11		AE0302A	41	YC001-YC030, YK901-YM670
D42311P	PERG	1F	2103Z			D42261P	PERG	1F	AE0302A	41	YC001-YC030, YK901-YM670
AE0101A	08	W5301	LG2	DISCONNECT BRACKET - E1-1 SHELF							
D04425P	A05		0015	22	PA	D00545	15		M00414		YC001-YC007
D04425P	A05		0015	22	PA	D43393P	15		AB1050L	02	YC008-YM670
D04425P	A07		0017	22	PA	D00545	17		M00414		YC001-YC007
D04425P	A07		0017	22	PA	D43393P	17		AB1050L	02	YC008-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section AE0101A

Page 1

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description		To							
Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity		
AE0101A	08	W5301	LG2	DISCONNECT BRACKET - E1-1 SHELF (continued)									
D04425P	A09		0019	22	PA	D00545	19		M00414		YC001-YC007		
D04425P	A09		0019	22	PA	D43393P	19		AB1050L	02	YC008-YM670		
D04425P	B01		0021	22	PA	D00545	21		M00414		YC001-YC007		
D04425P	B01		0021	22	PA	D43393P	21		AB1050L	02	YC008-YM670		
D04425P	B10		2007B	22	PB	D43393P	10		AB1050L	02	YC008-YM670		
D04425P	B09		2007R	22	PB	D43393P	9		AB1050L	02	YC008-YM670		
AE0101A	12	W6110	LA2*	DISCONNECT BRACKET - E1-1 SHELF									
D40364P	B05		0011	20	PA	D11418		CAP	Y	P0091		YC001-YC030, YK901-YM670	
D40364P	B06		0012	20	PA	D11418		CAP	Y	P0091		YC001-YC030, YK901-YM670	
D40364P	A06		0013	20	PA	D11418		CAP	Y	P0091		YC001-YC030, YK901-YM670	
D40364P	A04		0520	22	PA	D40368P		5		AP0600B	09	YC001-YC030, YK901-YM670	
D40364P	B03		0521	22	PA	D40368P		6		AP0600B	09	YC001-YC030, YK901-YM670	
AE0101A	13	W2101	LA2	DISCONNECT BRACKET - E1-1 SHELF									
D41811P	A01		0001	20	PA	D41801P		1		AP1800B	03	ALL	
D41811P	A02		0002	20	PA	D41801P		2		AP1800B	03	ALL	
D41811P	A03		0003	20	PA	D41801P		3		AP1800B	03	ALL	
D41811P	A08		0008	22	PA	D41801P		8		AP1800B	03	ALL	
D41811P	A09		0009	22	PA	D41801P		9		AP1800B	03	YC003-YM670	
D41811P	A10		0010	20	PA	D41801P		10		AP1800B	03	ALL	
D41811P	B01		0011	20	PA	D41801P		11		AP1800B	03	ALL	
D41811P	B02		0012	20	PA	D41801P		12		AP1800B	03	ALL	
D41811P	B03		0013	20	PA	D41801P		13		AP1800B	03	ALL	
D41811P	B04		0014	20	PA	D41801P		14		AP1800B	03	ALL	
D41811P	B05		0015	20	PA	D41801P		15		AP1800B	03	ALL	
AE0101A	17	W5721	LE2	DISCONNECT BRACKET - E1-1 SHELF									
D41121P	B16		0026	22	CQ	D41129J		26		AE0104A	18	ALL	
AE0101A	19	W5111	NA2	DISCONNECT BRACKET - E1-1 SHELF									
D45113P	A19		0013	22	PA	D45115J		4		AE0102A	02	YC001-YC011	

SPARE WIRE LIST

D280A103

91-21-12

Section AE0101A

Page 2

Aug 10/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To					Pos	Effectivity
				GA	TY	Equip	Term	Type	Matewith			
AE0101A	19	W5111	NA2	DISCONNECT BRACKET - E1-1 SHELF (continued)								
D45113P	B14		2033B	24	Y2	D45111P	B17		AE0301A		07	YC001-YC030, YK901-YM670
D45113P	A14		2033R	24	Y2	D45111P	A17		AE0301A		07	YC001-YC030, YK901-YM670
D45113P	PERG	1F	2033Z			D45111P	PERG	1F	AE0301A		07	YC001-YC030, YK901-YM670
D45113P	B15		2042B	24	Y2	D45115J	40		AE0102A		02	YC001-YC030, YK901-YM670
D45113P	A15		2042R	24	Y2	D45115J	39		AE0102A		02	YC001-YC030, YK901-YM670
D45113P	PERG	1F	2042Z			D45115J	S/R		AE0102A		02	YC001-YC030, YK901-YM670
AE0101A	20	W5161	LA2	DISCONNECT BRACKET - E1-1 SHELF								
D41155P	A17		0040	24	PK	D43145P	A17		AE0301A		15	ALL
D41155P	A06		2503B	24	Y2	D45255J	A06		AE0502A		15	YC031-YM670
D41155P	A05		2503R	24	Y2	D45255J	A05		AE0502A		15	YC031-YM670
D41155P	PERG	1F	2503Z			D45255J	PERG	1F	AE0502A		15	YC031-YM670
AE0101A	21	W5461	LA2	DISCONNECT BRACKET - E1-1 SHELF								
D43211P	B15		0045	24	PK	D42361P	B11		AE0302A		43	YC001-YC030, YK901-YM670
D43211P	A14		0073	24	PK	D42361P	A14		AE0302A		43	YC001-YC030, YK901-YM670
D43211P	B13		0074	24	PK	D42361P	B13		AE0302A		43	YC001-YC030, YK901-YM670
AE0101A	22	W5461	LA2	DISCONNECT BRACKET - E1-1 SHELF								
D46461P	B20		2025B	24	Y2	D45261J	B20		AE0502A		18	YC001-YC030
D46461P	B19		2025R	24	Y2	D45261J	B19		AE0502A		18	YC001-YC030
D46461P	PERG	1F	2025Z			D45261J	PERG	1F	AE0502A		18	YC001-YC030
D46461P	B13		2026B	24	Y2	D45261J	A16		AE0502A		18	YC001-YC030
D46461P	B12		2026R	24	Y2	D45261J	A15		AE0502A		18	YC001-YC030
D46461P	PERG	1F	2026Z			D45261J	PERG	1F	AE0502A		18	YC001-YC030
D46461P	B15		2027B	24	Y2	D45261J	A18		AE0502A		18	YC001-YC030
D46461P	B14		2027R	24	Y2	D45261J	A17		AE0502A		18	YC001-YC030
D46461P	PERG	1F	2027Z			D45261J	PERG	1F	AE0502A		18	YC001-YC030
D46461P	B07		2031B	24	Y2	D44161P	B07		AE0401A		24	YK901-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section AE0101A

Page 3

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To					Pos	Effectivity
				GA	TY	Equip	Term	Type	Matewith			
AE0101A	22	W5461	LA2	DISCONNECT BRACKET - E1-1 SHELF (continued)								
D46461P	B06		2031R	24	Y2	D44161P	B06		AE0401A		24	YK901-YM670
D46461P	PERG	1F	2031Z			D44161P	PERG	1F	AE0401A		24	YK901-YM670
AE0101A	24	W2175	LA2	DISCONNECT BRACKET - E1-1 SHELF								
D41821P	A06		0006	22	PA	D41803P			AP1800B		06	ALL
D41821P	A08		0008	20	PA	D41803P		8	AP1800B		06	ALL
D41821P	A09		0009	22	PA	D41803P		9	AP1800B		06	ALL
D41821P	A10		0010	22	PA	D41803P		10	AP1800B		06	ALL
D41821P	B02		0012	20	PA	D41803P		12	AP1800B		06	ALL
D41821P	B03		0013	20	PA	D41803P		13	AP1800B		06	ALL
D41821P	B05		0015	20	PA	D41803P		15	AP1800B		06	ALL
D41821P	B07		0017	20	PA	D41803P		17	AP1800B		06	ALL
D41821P	G		0024	16	PA	D41803P		24	AP1800B		06	YC001-YC019
D41821P	G		0024	16	PA	D41803P	CAP		Y	AP1800B	06	YC020-YM670
AE0101A	25	W5719	LA2	DISCONNECT BRACKET - E1-1 SHELF								
D41125P	B07		0030	22	PA	D42111P	B02		AE0402A		01	ALL
D41125P	REF	VP	0033	22	PA	D41509P	40		AE0103A		19	YC001-YC030
D41125P	REF	VP	0035	20	PA	D41509P	35		AE0103A		19	YC001-YC030
D41125P	B13		0036	20	PA	D41509P	36		AE0103A		19	ALL
D41125P	A10		0037	22	PA	D41509P	37		AE0103A		19	ALL
D41125P	B10		0038	24	PK	D41509P	38		AE0103A		19	ALL
D41125P	A16		0039	20	PA	D41211J	39		AE0102A		01	ALL
D41125P	B16		0041	22	PA	D41211J	41		AE0102A		01	YC003-YM670
D41125P	A18		0043	22	PA	D41211J	40		AE0102A		01	ALL
D41125P	B15		0051	22	PA	D41211J	31		AE0102A		01	ALL
D41125P	A04		2005B	24	Y2	D41509P	46		AE0103A		19	ALL
D41125P	A03		2005R	24	Y2	D41509P	45		AE0103A		19	ALL
D41125P	PERG	1F	2005Z			D41509P			AE0103A		19	ALL
D41125P	B04		2006B	24	Y2	D41509P	50		AE0103A		19	ALL
D41125P	B03		2006R	24	Y2	D41509P	49		AE0103A		19	ALL
D41125P	PERG	1F	2006Z			D41509P			AE0103A		19	ALL
D41125P	A15		2010B	24	Y2	D41509P	44		AE0103A		19	ALL
D41125P	A14		2010R	24	Y2	D41509P	43		AE0103A		19	ALL
D41125P	PERG	1F	2010Z			D41509P	S/R		AE0103A		19	ALL
AE0101A	26	W3381	LE2	DISCONNECT BRACKET - E1-1 SHELF								
D04083P	A02		0006	20	PA	D44381P	21		AB1050L		04	YC008-YC030

SPARE WIRE LIST

D280A103

91-21-12

Section AE0101A

Page 4

Aug 10/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY		To Equip		Term	Type	Matewith	Pos	Effectivity
AE0101A	26	W3381	LE2	DISCONNECT BRACKET - E1-1 SHELF (continued)								
D04083P	A02		0006	20	PA	D44381P		1		AB1050L	04	YC031-YM670
D04083P	A07		0007	20	PA	D44381P		25		AB1050L	04	YC008-YC030
D04083P	A07		0007	20	PA	D44381P		2		AB1050L	04	YC031-YM670
AE0101A	27	W5367	LC3	DISCONNECT BRACKET - E1-1 SHELF								
D04073P	B02		3013B	22	HG	D01827		REF	VP	M00943		ALL
D04073P	B01		3013R	22	HG	D01827		REF	VP	M00943		ALL
D04073P	B03		3013Y	22	HG	D01827		REF	VP	M00943		ALL
D04073P	PERG	1F	3013Z			D01827		DED		M00943		ALL
AE0101A	31	W5205	SA2	DISCONNECT BRACKET - E1-1 SHELF								
D45203P	A06		0006	22	PA	D45201J		6		AE0102A	10	YC001-YC030, YK901-YM670
D45203P	A10		0010	22	PA	D45201J		10		AE0102A	10	YC001-YC030, YK901-YM670
D45203P	B06		2006B	22	X2	D45201J		16		AE0102A	10	YC001-YC030, YK901-YM670
D45203P	B05		2006R	22	X2	D45201J		15		AE0102A	10	YC001-YC030, YK901-YM670
D45203P	PERG	1F	2006Z			D45201J		S/R		AE0102A	10	YC001-YC030, YK901-YM670
AE0101A	32	W3377	LA3	DISCONNECT BRACKET - E1-1 SHELF								
D04079P	B01		0010	20	PA	D43397P		46		AB1050L	03	YC008-YM670
D04079P	B08		3006B	22	GC	D01681		REF	VP	M01020		YC001-YC007
D04079P	B08		3006B	22	PC	D43397P		41		AB1050L	03	YC008-YM670
D04079P	B07		3006R	22	GC	D01681		REF	VP	M01020		YC001-YC007
D04079P	B07		3006R	22	PC	D43397P		40		AB1050L	03	YC008-YM670
D04079P	B09		3006Y	22	GC	D01681		REF	VP	M01020		YC001-YC007
D04079P	B09		3006Y	22	PC	D43397P		42		AB1050L	03	YC008-YM670
AE0101A	36	W5381	LE2	DISCONNECT BRACKET - E1-1 SHELF								
D45551P	B02		2008B	22	VG	D45501J		13		AB1050L	05	YC031-YM670
D45551P	A02		2008R	22	VG	D45501J		4		AB1050L	05	YC031-YM670
D45551P	PERG	1F	2008Z			D45501J		S/R		AB1050L	05	YC031-YM670
D45551P	B09		2009B	20	HF	D45501J		10		AB1050L	05	YC031-YM670
D45551P	A09		2009R	20	HF	D45501J		2		AB1050L	05	YC031-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section AE0101A

Page 5

Aug 10/2009



<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>							
Equip	Term	Type	Wire No.		GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity		
AE0101A		36	W5381	LE2	DISCONNECT BRACKET - E1-1 SHELF (continued)									
D45551P	PERG	1F	2009Z				D45501J	S/R		AB1050L	05	YC031-YM670		

SPARE WIRE LIST

D280A103

91-21-12

Section AE0101A

Page 6 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To		Term	Type	Matewith	Pos	Effectivity
				GA	TY	Equip						
AE0101B	01	W5463	RB2	DISCONNECT BRACKET - E1-1 SHELF								
D41563P	A03		0055	20	PA	D43263P		A13		AE0302A	44	ALL
AE0101B	05	W5723	RB2*	DISCONNECT BRACKET - E1-1 SHELF								
D40063P	A01		0151	20	CQ	D40047J		REF	VP	AE0104A	08	YC001-YC030
AE0101B	08	W5463	RB2	DISCONNECT BRACKET - E1-1 SHELF								
D41163P	A09		0010	22	PA	D41463J		3		AE0104A	11	YC001-YC030
D41163P	B15		0015	20	PA	D41463J		15		AE0104A	11	YC001-YC030
D41163P	B14		0020	22	PA	D41463J		36		AE0104A	11	YC031-YM670
D41163P	B12		0046	24	B6	D41463J		30		AE0104A	11	ALL
D41163P	A07		2014B	22	X2	D43263P		A08		AE0302A	44	YC001-YC030
D41163P	B05		2014R	22	X2	D43263P		B08		AE0302A	44	YC001-YC030
D41163P	PERG	1F	2014Z			D43263P		PERG	1F	AE0302A	44	YC001-YC030
AE0101B	09	W2383	RB2	DISCONNECT BRACKET - E1-1 SHELF								
D46023P	K		0018	16	PA	D46065P		8		AP0600B	15	YK901-YL430
D46023P	A05		0023	20	PA	D46065P		23		AP0600B	15	YC001-YC030, YK901-YM670
AE0101B	10	W5723	RB2*	DISCONNECT BRACKET - E1-1 SHELF								
D43317P	A09		0074	20	CQ	D40047J		41		AE0104A	08	YK901-YM670
D43317P	A02		0102	20	CQ	D40047J		2		AE0104A	08	YC001-YC030, YK901-YM670
D43317P	A03		0103	20	CQ	D40047J		3		AE0104A	08	YC001-YC030, YK901-YM670
D43317P	B06		2136B	24	Y2	D40047J		43		AE0104A	08	YC003-YC006, YC008-YC022
D43317P	B05		2136R	24	Y2	D40047J		42		AE0104A	08	YC003-YC006, YC008-YC022
D43317P	PERG	1F	2136Z			D40047J		S/R		AE0104A	08	YC003-YC006, YC008-YC022
AE0101B	11	W5163	RB2*	DISCONNECT BRACKET - E1-1 SHELF								
D41147P	G		0025	16	PA	D41557J		23		AE0105A	07	YK901-YM670
D41147P	A07		0040	24	PK	D43147P		A07		AE0301A	28	ALL

SPARE WIRE LIST

D280A103

91-21-12

Section AE0101B

Page 1

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To					Pos	Effectivity		
				GA	TY	Equip	Term	Type	Matewith					
AE0101B	12	W5163	RB2*	DISCONNECT BRACKET - E1-1 SHELF										
D41157P	A18		0004	22	PA	D45257J	A15		AE0502A		05	ALL		
D41157P	B05		0035	22	PA	D41557J	4		AE0105A		07	ALL		
D41157P	B20		0039	22	PA	D45257J	A07		AE0502A		05	ALL		
D41157P	A02		2501B	24	Y2	D45257J	A02		AE0502A		05	ALL		
D41157P	A01		2501R	24	Y2	D45257J	A01		AE0502A		05	ALL		
D41157P	PERG	1F	2501Z			D45257J	PERG	1F	AE0502A		05	ALL		
D41157P	B11		2529B	24	Y2	D43147P	A20		AE0301A		28	ALL		
D41157P	B10		2529R	24	Y2	D43147P	A19		AE0301A		28	ALL		
D41157P	PERG	1F	2529Z			D43147P	PERG	1F	AE0301A		28	ALL		
D41157P	REF	VP	2530B	24	Y2	D43147P	A09		AE0301A		28	YC001-YC030		
D41157P	REF	VP	2530R	24	Y2	D43147P	A08		AE0301A		28	YC001-YC030		
D41157P	PERG	1F	2530Z			D43147P	PERG	1F	AE0301A		28	YC001-YC030		
AE0101B	13	W2103	RB2	DISCONNECT BRACKET - E1-1 SHELF										
D46013P	A05		0005	20	PA	D46061P	5		AP0600B		23	YC001-YC030, YK901-YM652		
D46013P	A06		0006	20	PA	D46061P	6		AP0600B		23	YC001-YC030, YK901-YM652		
D46013P	A08		0018	20	PA	D46061P	18		AP0600B		23	YC001-YC030, YK901-YM652		
D46013P	A09		0019	20	PA	D46061P	19		AP0600B		23	YC001-YC030, YK901-YM652		

SPARE WIRE LIST

D280A103

91-21-12

Section AE0101B

Page 2 End

Aug 10/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY		To Equip		Term	Type	Matewith	Pos	Effectivity
AE0102A	01	W5719	LA2	DISCONNECT BRACKET - E1-2 SHELF								
D41211J	26		0026	24	PK	D41509P		26		AE0103A	19	ALL
D41211J	27		0027	24	PK	D41509P		27		AE0103A	19	ALL
D41211J	28		0028	20	PA	D41509P		28		AE0103A	19	ALL
D41211J	39		0039	20	PA	D41125P		A16		AE0101A	25	ALL
D41211J	41		0041	22	PA	D41125P		B16		AE0101A	25	YC003-YM670
D41211J	40		0043	22	PA	D41125P		A18		AE0101A	25	ALL
D41211J	31		0051	22	PA	D41125P		B15		AE0101A	25	ALL
D41211J	44		2011B	24	Y2	D41509P		53		AE0103A	19	ALL
D41211J	43		2011R	24	Y2	D41509P		52		AE0103A	19	ALL
D41211J	S/R		2011Z			D41509P		S/R		AE0103A	19	ALL
AE0102A	02	W5111	NA2	DISCONNECT BRACKET - E1-2 SHELF								
D45115J	4		0013	22	PA	D45113P		A19		AE0101A	19	YC001-YC011
D45115J	6		0019	22	PA	D45133P		CAP	Y	AE0101A	03	YC001-YC011
D45115J	7		0020	22	PA	D45133P		CAP	Y	AE0101A	03	YC001-YC011
D45115J	8		0021	22	PA	D45133P		CAP	Y	AE0101A	03	YC001-YC011
D45115J	9		0024	22	PA	D45111P		B02		AE0301A	07	YC001-YC030, YK901-YM670
D45115J	20		2005B	24	Y2	D45111P		B04		AE0301A	07	YC001-YC011
D45115J	19		2005R	24	Y2	D45111P		A04		AE0301A	07	YC001-YC011
D45115J	S/R		2005Z			D45111P		PERG	1F	AE0301A	07	YC001-YC011
D45115J	40		2042B	24	Y2	D45113P		B15		AE0101A	19	YC001-YC030, YK901-YM670
D45115J	39		2042R	24	Y2	D45113P		A15		AE0101A	19	YC001-YC030, YK901-YM670
D45115J	S/R		2042Z			D45113P		PERG	1F	AE0101A	19	YC001-YC030, YK901-YM670
D45115J	50		2046B	24	Y2	D45133P		B05		AE0101A	03	YC001-YC030, YK901-YM670
D45115J	49		2046R	24	Y2	D45133P		A05		AE0101A	03	YC001-YC030, YK901-YM670
D45115J	S/R		2046Z			D45133P		PERG	1F	AE0101A	03	YC001-YC030, YK901-YM670
AE0102A	03	W2149	NA2	DISCONNECT BRACKET - E1-2 SHELF								
D04029J	23		0023	22	PA	D00263		CAP	Y	P008-25		YC001-YC030, YK901-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section AE0102A

Page 1

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description		To					Pos	Effectivity		
Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith					
AE0102A	03	W2149	NA2	DISCONNECT BRACKET - E1-2 SHELF (continued)										
D04029J	27		0027	22	PA	D00303	CAP	Y	P008-25			YC001-YC030, YK901-YM670		
D04029J	34		2005B	24	Y2	D00303	CAP	Y	P008-25			YC001-YC030, YK901-YM670		
D04029J	33		2005R	24	Y2	D00303	CAP	Y	P008-25			YC001-YC030, YK901-YM670		
D04029J	S/R		2005Z			D00303	S/R		P008-25			YC001-YC030, YK901-YM670		
D04029J	36		2006B	24	Y2	D00263	CAP	Y	P008-25			YC001-YC030, YK901-YM670		
D04029J	35		2006R	24	Y2	D00263	CAP	Y	P008-25			YC001-YC030, YK901-YM670		
D04029J	S/R		2006Z			D00263	S/R		P008-25			YC001-YC030, YK901-YM670		
AE0102A	05	W2205	SN2	DISCONNECT BRACKET - E1-2 SHELF										
D04205J	13		0018	22	PA	D03681		VP	N00186			YC001-YC030		
D04205J	11		2004B	24	Y2	D10853	CAP	Y	N00226			YK901-YM670		
D04205J	10		2004R	24	Y2	D10853	CAP	Y	N00226			YK901-YM670		
D04205J	S/R		2004Z			D10853	DED		N00226			YK901-YM670		
D04205J	13		2015B	24	Y2	D10853	CAP	Y	N00226			YK901-YM670		
D04205J	12		2015R	24	Y2	D10853	CAP	Y	N00226			YK901-YM670		
D04205J	S/R		2015Z			D10853	DED		N00226			YK901-YM670		
AE0102A	06	W2651	SA2	DISCONNECT BRACKET - E1-2 SHELF										
D41827J	11		0001	20	PA	D41807P			1	AP1800B	08	YC001-YC030, YK901-YM670		
D41827J	8		0016	20	PA	D41807P			16	AP1800B	08	YC001-YC002		
AE0102A	10	W5205	SA2	DISCONNECT BRACKET - E1-2 SHELF										
D45201J	6		0006	22	PA	D45203P			A06	AE0101A	31	YC001-YC030, YK901-YM670		
D45201J	10		0010	22	PA	D45203P			A10	AE0101A	31	YC001-YC030, YK901-YM670		
D45201J	31		0053	20	CQ	D45207P			A03	AE0302A	14	YC001-YC030, YK901-YM670		
D45201J	16		2006B	22	X2	D45203P			B06	AE0101A	31	YC001-YC030, YK901-YM670		

SPARE WIRE LIST

D280A103

91-21-12

Section AE0102A

Page 2

Aug 10/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY		To Equip	Term	Type	Matewith	Pos	Effectivity
AE0102A	10	W5205	SA2	DISCONNECT BRACKET - E1-2 SHELF (continued)							
D45201J	15		2006R	22	X2	D45203P	B05		AE0101A	31	YC001-YC030, YK901-YM670
D45201J	S/R		2006Z			D45203P	PERG	1F	AE0101A	31	YC001-YC030, YK901-YM670
D45201J	13		2031B	24	Y2	D45209J	A07		AE0502A	03	YC001-YC030, YK901-YM670
D45201J	12		2031R	24	Y2	D45209J	A06		AE0502A	03	YC001-YC030, YK901-YM670
D45201J	S/R		2031Z			D45209J	PERG	1F	AE0502A	03	YC001-YC030, YK901-YM670
AE0102A	12	W5723	RB2*	DISCONNECT BRACKET - E1-2 SHELF							
D41213J	13		2004B	24	Y2	D40047J	REF	VP	AE0104A	08	YC001-YC030
D41213J	12		2004R	24	Y2	D40047J	REF	VP	AE0104A	08	YC001-YC030
D41213J	S/R		2004Z			D40047J	S/R		AE0104A	08	YC001-YC030
D41213J	15		2040B	24	Y2	D40047J	55		AE0104A	08	YC001-YC030, YK901-YM670
D41213J	14		2040R	24	Y2	D40047J	54		AE0104A	08	YC001-YC030, YK901-YM670
D41213J	S/R		2040Z			D40047J	S/R		AE0104A	08	YC001-YC030, YK901-YM670
D41213J	4		2512B	24	Y2	D43306P	B04		AE0303A	05	YK901-YM670
D41213J	3		2512R	24	Y2	D43306P	A04		AE0303A	05	YK901-YM670
D41213J	S/R		2512Z			D43306P	PERG	1F	AE0303A	05	YK901-YM670
AE0102A	13	W5721	LE2	DISCONNECT BRACKET - E1-2 SHELF							
D41127J	23		0023	22	CQ	D41129J	23		AE0104A	18	ALL
D41127J	13		0053	20	CQ	D41129J	53		AE0104A	18	ALL
D41127J	14		0054	20	CQ	D41129J	54		AE0104A	18	ALL
D41127J	15		0055	20	CQ	D41129J	55		AE0104A	18	ALL

SPARE WIRE LIST

D280A103

91-21-12

Section AE0102A

Page 3 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To		Term	Type	Matewith	Pos	Effectivity
				GA	TY	Equip						
AE0103A	03	W2661	SB2	DISCONNECT BRACKET - E1-3 SHELF								
D46051P	7		0007	18	PA	D46069P		7		AP0600B	20	ALL
D46051P	10		0010	16	PA	D46069P		10		AP0600B	20	ALL
AE0103A	05	W3307	NN2	DISCONNECT BRACKET - E1-3 SHELF								
D41337P	22		0008	24	PK	D10019		40		M01415		ALL
D41337P	24		2003B	24	PL	D10019		39		M01415		ALL
D41337P	23		2003R	24	PL	D10019		38		M01415		ALL
AE0103A	11	W5156	SA2*	DISCONNECT BRACKET - E1-3 SHELF								
D40498P	29		0645	20	PA	D40670P		28		AJ0022	04	YC028-YC030
AE0103A	14	W5160	RB2*	DISCONNECT BRACKET - E1-3 SHELF								
D40466P	27		0656	24	PK	D40470P		A01		AE0302A	37	YC004-YC030, YK901-YM670
D40466P	28		0657	24	PK	D40470P		A06		AE0302A	37	YC004-YC030, YK901-YM670
D40466P	47		1001R	22	X5	D40694P		21		AJ0024	07	YC004-YC030, YK901-YM670
D40466P	DED		1001Z			D40694P		DED		AJ0024	07	YC004-YC030, YK901-YM670
D40466P	48		1002R	22	X5	D40694P		22		AJ0024	07	YC004-YC030, YK901-YM670
D40466P	DED		1002Z			D40694P		DED		AJ0024	07	YC004-YC030, YK901-YM670
D40466P	30		2461B	24	Y2	D40470P		B07		AE0302A	37	YC004-YC030, YK901-YL430
D40466P	29		2461R	24	Y2	D40470P		B06		AE0302A	37	YC004-YC030, YK901-YL430
D40466P	31		2461Z			D40470P		PERG	1F	AE0302A	37	YC004-YC030, YK901-YL430
AE0103A	17	W2651	SA2	DISCONNECT BRACKET - E1-3 SHELF								
D41831P	1		0012	20	PA	D41807P		12		AP1800B	08	YC001-YC030, YK901-YM670
D41831P	2		0013	20	PA	D41807P		13		AP1800B	08	YC001-YC030, YK901-YM670
D41831P	7		0019	16	PA	D41807P		6		AP1800B	08	YC001-YC030, YK901-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section AE0103A

Page 1

Aug 10/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY		To Equip	Term	Type	Matewith	Pos	Effectivity
AE0103A	18	W5189	NA3	DISCONNECT BRACKET - E1-3 SHELF							
D04195P	42		0001	22	PA	D48389P	A01		AE0801C	07	YC001-YC006
D04195P	42		0001	22	PA	D48389P	A01		AE0801B	06	YC007-YC030
D04195P	43		0002	22	PA	D48389P	B01		AE0801C	07	YC001-YC006
D04195P	43		0002	22	PA	D48389P	B01		AE0801B	06	YC007-YC030
AE0103A	19	W5719	LA2	DISCONNECT BRACKET - E1-3 SHELF							
D41509P	26		0026	24	PK	D41211J	26		AE0102A	01	ALL
D41509P	27		0027	24	PK	D41211J	27		AE0102A	01	ALL
D41509P	28		0028	20	PA	D41211J	28		AE0102A	01	ALL
D41509P	40		0033	22	PA	D41125P	REF	VP	AE0101A	25	YC001-YC030
D41509P	35		0035	20	PA	D41125P	REF	VP	AE0101A	25	YC001-YC030
D41509P	36		0036	20	PA	D41125P	B13		AE0101A	25	ALL
D41509P	37		0037	22	PA	D41125P	A10		AE0101A	25	ALL
D41509P	38		0038	24	PK	D41125P	B10		AE0101A	25	ALL
D41509P	46		2005B	24	Y2	D41125P	A04		AE0101A	25	ALL
D41509P	45		2005R	24	Y2	D41125P	A03		AE0101A	25	ALL
D41509P			2005Z			D41125P	PERG	1F	AE0101A	25	ALL
D41509P	50		2006B	24	Y2	D41125P	B04		AE0101A	25	ALL
D41509P	49		2006R	24	Y2	D41125P	B03		AE0101A	25	ALL
D41509P			2006Z			D41125P	PERG	1F	AE0101A	25	ALL
D41509P	44		2010B	24	Y2	D41125P	A15		AE0101A	25	ALL
D41509P	43		2010R	24	Y2	D41125P	A14		AE0101A	25	ALL
D41509P	S/R		2010Z			D41125P	PERG	1F	AE0101A	25	ALL
D41509P	53		2011B	24	Y2	D41211J	44		AE0102A	01	ALL
D41509P	52		2011R	24	Y2	D41211J	43		AE0102A	01	ALL
D41509P	S/R		2011Z			D41211J	S/R		AE0102A	01	ALL
D41509P			FRAA			D41509P	S/R		AE0103A	19	ALL
D41509P	S/R		FRAA			D41509P			AE0103A	19	ALL
D41509P			FRAB			D41509P	47		AE0103A	19	ALL
D41509P	47		FRAB			D41509P			AE0103A	19	ALL
D41509P	S/R		FRAC			D41509P			AE0103A	19	ALL
D41509P			FRAC			D41509P	S/R		AE0103A	19	ALL
D41509P	51		FRAD			D41509P			AE0103A	19	ALL
D41509P			FRAD			D41509P	51		AE0103A	19	ALL
AE0103A	22	W5723	RB2*	DISCONNECT BRACKET - E1-3 SHELF							
D41131P	35		2511B	24	Y2	D43306P	B03		AE0303A	05	YK901-YM670
D41131P	34		2511R	24	Y2	D43306P	A03		AE0303A	05	YK901-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section AE0103A

Page 2

Aug 10/2009



<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>					<u>Effectivity</u>	
Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity		
AE0103A		22	W5723	RB2*	DISCONNECT BRACKET - E1-3 SHELF (continued)								
D41131P		36		2511Z		D43306P	PERG	1F	AE0303A	05	YK901-YM670		

SPARE WIRE LIST

D280A103

91-21-12

Section AE0103A

Page 3 End

Aug 10/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY		To Equip	Term	Type	Matewith	Pos	Effectivity
AE0104A	03	W3379	RB3	DISCONNECT BRACKET - E1-4 SHELF							
D04081J	3		0022	20	CQ	D43399P	50		AB1050R	04	YC008-YM670
D04081J	28		3006B	22	GC	D01687	REF	VP	M01022		YC001-YC007
D04081J	28		3006B	22	PC	D43399P	41		AB1050R	04	YC008-YM670
D04081J	27		3006R	22	GC	D01687	REF	VP	M01022		YC001-YC007
D04081J	27		3006R	22	PC	D43399P	40		AB1050R	04	YC008-YM670
D04081J	29		3006Y	22	GC	D01687	REF	VP	M01022		YC001-YC007
D04081J	29		3006Y	22	PC	D43399P	42		AB1050R	04	YC008-YM670
AE0104A	06	W2251	RF2	DISCONNECT BRACKET - E1-4 SHELF							
D04311J	3		0003	22	PA	D04251P	3		AP0900A	23	ALL
D04311J	7		0007	22	CQ	D04251P	7		AP0900A	23	YK901-YM670
D04311J	9		0009	22	CQ	D04251P	9		AP0900A	23	ALL
D04311J	12		0012	20	PA	D04251P	12		AP0900A	23	ALL
D04311J	24		0024	22	CQ	D04251P	24		AP0900A	23	YC001-YC050
D04311J	20		2003B	24	Y2	D04251P	20		AP0900A	23	ALL
D04311J	19		2003R	24	Y2	D04251P	19		AP0900A	23	ALL
D04311J	S/R		2003Z			D04251P	S/R		AP0900A	23	ALL
D04311J	22		2004B	24	Y2	D04251P	22		AP0900A	23	ALL
D04311J	21		2004R	24	Y2	D04251P	21		AP0900A	23	ALL
D04311J	S/R		2004Z			D04251P	S/R		AP0900A	23	ALL
AE0104A	07	W2205	SN2	DISCONNECT BRACKET - E1-4 SHELF							
D40049J	5		0020	22	PA	D03679	5	VP	N00185		YC001-YC030, YK901-YM670
D40049J	6		0021	22	PA	D03679	17	VP	N00185		YC001-YC030, YK901-YM670
D40049J	4		2012B	24	Y2	D10853	CAP	Y	N00226		YK901-YM670
D40049J	3		2012R	24	Y2	D10853	CAP	Y	N00226		YK901-YM670
D40049J	S/R		2012Z			D10853	DED		N00226		YK901-YM670
D40049J	12		2504B	24	Y2	D03681	12	VP	N00186		YC001-YC030
D40049J	11		2504R	24	Y2	D03681	11	VP	N00186		YC001-YC030
D40049J	S/R		2504Z			D03681	DED		N00186		YC001-YC030
AE0104A	08	W5723	RB2*	DISCONNECT BRACKET - E1-4 SHELF							
D40047J	41		0074	20	CQ	D43317P	A09		AE0101B	10	YK901-YM670
D40047J	2		0102	20	CQ	D43317P	A02		AE0101B	10	YC001-YC030, YK901-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section AE0104A

Page 1

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To					Effectivity	
				GA	TY	Equip	Term	Type	Matewith	Pos		
AE0104A	08	W5723	RB2*	DISCONNECT BRACKET - E1-4 SHELF (continued)								
D40047J	3		0103	20	CQ	D43317P	A03		AE0101B	10	YC001-YC030, YK901-YM670	
D40047J	REF	VP	0151	20	CQ	D40063P	A01		AE0101B	05	YC001-YC030	
D40047J	REF	VP	2004B	24	Y2	D41213J	13		AE0102A	12	YC001-YC030	
D40047J	REF	VP	2004R	24	Y2	D41213J	12		AE0102A	12	YC001-YC030	
D40047J	S/R		2004Z			D41213J	S/R		AE0102A	12	YC001-YC030	
D40047J	55		2040B	24	Y2	D41213J	15		AE0102A	12	YC001-YC030, YK901-YM670	
D40047J	54		2040R	24	Y2	D41213J	14		AE0102A	12	YC001-YC030, YK901-YM670	
D40047J	S/R		2040Z			D41213J	S/R		AE0102A	12	YC001-YC030, YK901-YM670	
D40047J	43		2136B	24	Y2	D43317P	B06		AE0101B	10	YC003-YC006, YC008-YC022	
D40047J	42		2136R	24	Y2	D43317P	B05		AE0101B	10	YC003-YC006, YC008-YC022	
D40047J	S/R		2136Z			D43317P	PERG	1F	AE0101B	10	YC003-YC006, YC008-YC022	
AE0104A	09	W2103	RB2	DISCONNECT BRACKET - E1-4 SHELF								
D46011J	12		0012	20	PA	D46061P	12		AP0600B	23	YC001-YC030, YK901-YM652	
D46011J	13		0013	20	PA	D46061P	13		AP0600B	23	YC001-YC030, YK901-YM652	
D46011J	6		0016	20	PA	D46061P	16		AP0600B	23	YC001-YC030, YK901-YM652	
D46011J	7		0017	20	PA	D46061P	17		AP0600B	23	YC001-YC030, YK901-YM652	
AE0104A	10	W2383	RB2	DISCONNECT BRACKET - E1-4 SHELF								
D46031J	9		0009	24	PK	D46065P	9		AP0600B	15	YC004-YC030, YK901-YM670	
D46031J	8		0024	20	PA	D46065P	24		AP0600B	15	YC001-YC030, YK901-YM670	
D46031J	5		0025	20	PA	D46065P	25		AP0600B	15	YC001-YC030	
D46031J	6		0026	22	PA	D46065P	26		AP0600B	15	YC001-YC030, YK901-YM670	
D46031J	7		0027	22	PA	D46065P	27		AP0600B	15	YC001-YC030	

SPARE WIRE LIST

D280A103

91-21-12

Section AE0104A

Page 2

Aug 10/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY		To Equip	Term	Type	Matewith	Pos	Effectivity
AE0104A	11	W5463	RB2	DISCONNECT BRACKET - E1-4 SHELF							
D41463J	3		0010	22	PA	D41163P	A09		AE0101B	08	YC001-YC030
D41463J	15		0015	20	PA	D41163P	B15		AE0101B	08	YC001-YC030
D41463J	36		0020	22	PA	D41163P	B14		AE0101B	08	YC031-YM670
D41463J	14		0022	22	PA	D45263J	A05		AE0502A	06	ALL
D41463J	44		0030	24	PK	D42363P	A03		AE0302A	53	ALL
D41463J	45		0031	24	PK	D42363P	B03		AE0302A	53	ALL
D41463J	30		0046	24	B6	D41163P	B12		AE0101B	08	ALL
AE0104A	12	W5121	NB2	DISCONNECT BRACKET - E1-4 SHELF							
D45123J	2		0002	22	PA	D45125J	2		AE0105A	09	YC001-YC030
D45123J	4		0009	22	PA	D45147P	A01		AE0302A	56	YK901-YM670
D45123J	5		0010	22	PA	D45147P	B01		AE0302A	56	YK901-YM670
D45123J	2		0011	22	PA	D45127P	A01		AE0302A	46	YK901-YM670
D45123J	7		0013	24	PK	D45127P	B03		AE0302A	46	YC001-YC030, YK901-YM670
D45123J	9		0017	20	PA	D45125J	9		AE0105A	09	YC001-YC030, YK901-YM670
D45123J	47		2022B	24	Y2	D45147P	B13		AE0302A	56	YK901-YM670
D45123J	46		2022R	24	Y2	D45147P	A13		AE0302A	56	YK901-YM670
D45123J	S/R		2022Z			D45147P	PERG	1F	AE0302A	56	YK901-YM670
D45123J	49		2023B	24	Y2	D45147P	B14		AE0302A	56	YK901-YM670
D45123J	48		2023R	24	Y2	D45147P	A14		AE0302A	56	YK901-YM670
D45123J	S/R		2023Z			D45147P	PERG	1F	AE0302A	56	YK901-YM670
D45123J	51		2024B	24	Y2	D45147P	B15		AE0302A	56	YK901-YM670
D45123J	50		2024R	24	Y2	D45147P	A15		AE0302A	56	YK901-YM670
D45123J	S/R		2024Z			D45147P	PERG	1F	AE0302A	56	YK901-YM670
AE0104A	13	W5383	RB2	DISCONNECT BRACKET - E1-4 SHELF							
D45553J	15		2008B	22	VG	D45503P	15		AB1050R	06	YC020-YC022
D45553J	15		2008B	22	VG	D45503J	15		AB1050R	06	YC023-YC026
D45553J	14		2008R	22	VG	D45503P	14		AB1050R	06	YC020-YC022
D45553J	14		2008R	22	VG	D45503J	14		AB1050R	06	YC023-YC026
D45553J	S/R		2008Z			D45503P	S/R		AB1050R	06	YC020-YC022
D45553J	S/R		2008Z			D45503J	S/R		AB1050R	06	YC023-YC026
D45553J	17		2009B	20	HF	D45503P	17		AB1050R	06	YC020-YC022
D45553J	17		2009B	20	HF	D45503J	17		AB1050R	06	YC023-YC026
D45553J	16		2009R	20	HF	D45503P	16		AB1050R	06	YC020-YC022
D45553J	16		2009R	20	HF	D45503J	16		AB1050R	06	YC023-YC026

SPARE WIRE LIST

D280A103

91-21-12

Section AE0104A

Page 3

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description		To					
Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
AE0104A	13	W5383	RB2	DISCONNECT BRACKET - E1-4 SHELF (continued)							
D45553J	S/R		2009Z			D45503P	S/R		AB1050R	06	YC020-YC022
D45553J	S/R		2009Z			D45503J	S/R		AB1050R	06	YC023-YC026
D45553J	13		2008B	22	VG	D45503J	13		AB1050R	06	YC028-YM670
D45553J	4		2008R	22	VG	D45503J	4		AB1050R	06	YC028-YM670
D45553J	S/R		2008Z			D45503J	S/R		AB1050R	06	YC028-YM670
D45553J	10		2009B	20	HF	D45503J	10		AB1050R	06	YC028-YM670
D45553J	2		2009R	20	HF	D45503J	2		AB1050R	06	YC028-YM670
D45553J	S/R		2009Z			D45503J	S/R		AB1050R	06	YC028-YM670
AE0104A	15	W5375	RD3	DISCONNECT BRACKET - E1-4 SHELF							
D04077J	29		0011	20	PA	D42053P	A10		AE0302A	47	YC031-YC050, YK906-YM670
AE0104A	18	W5721	LE2	DISCONNECT BRACKET - E1-4 SHELF							
D41129J	23		0023	22	CQ	D41127J	23		AE0102A	13	ALL
D41129J	26		0026	22	CQ	D41121P	B16		AE0101A	17	ALL
D41129J	53		0053	20	CQ	D41127J	13		AE0102A	13	ALL
D41129J	54		0054	20	CQ	D41127J	14		AE0102A	13	ALL
D41129J	55		0055	20	CQ	D41127J	15		AE0102A	13	ALL
AE0104A	20	W5158	SB2*	DISCONNECT BRACKET - E1-4 SHELF							
D40490J	4		0015	22	PA	D40638P	12		AJ0020B	02	YK901-YL430
D40490J	21		0634	20	PA	D40426P	14		AE0302A	28	YK911-YK917, YK919-YL401, YL427-YL430, YM651-YM670
AE0104A	22	W5526	SA2	DISCONNECT BRACKET - E1-4 SHELF							
D43016J	7		5512	20	PA	D04580P	12		AB0536L	01	YC001-YC030, YK901-YM670
D43016J	8		5513	20	PA	D04580P	13		AB0536L	01	YC001-YC030, YK901-YM670
D43016J	9		5516	20	PA	D40302J	10		AB0500DL	09	YC001-YC030, YK901-YM670
D43016J	10		5517	20	PA	D40302J	11		AB0500DL	09	YC001-YC030, YK901-YM670

SPARE WIRE LIST

D280A103

91-21-12
Section AE0104A
Page 4
Aug 10/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY		To Equip	Term	Type	Matewith	Pos	Effectivity
AE0104A	26	W5204	NN2	DISCONNECT BRACKET - E1-4 SHELF							
D40332J	2		0002	20	PA	D13928	17		AC0538		YC031-YC050, YK906-YM670
AE0104A	27	W5514	SA2	DISCONNECT BRACKET - E1-4 SHELF							
D40826J	7		0502	24	B6	D40824P	28		AP0900A	05	YC001-YC030, YK901-YM670
D40826J	16		0503	24	B6	D40824P	29		AP0900A	05	YC001-YC030, YK901-YM670
D40826J	17		0504	24	B6	D40824P	30		AP0900A	05	YC001-YC030, YK901-YM670
D40826J	18		0505	24	B6	D40824P	31		AP0900A	05	YC001-YC030, YK901-YM670
D40826J	6		5564	20	PA	D40824P	19		AP0900A	05	YC001-YC030, YK901-YM670
D40826J	8		5565	20	PA	D40824P	20		AP0900A	05	YC001-YC030, YK901-YM670
D40826J	10		5568	20	GA	D40822P	23		AP0600B	03	YC001-YC030
D40826J	11		5569	20	GA	D40822P	24		AP0600B	03	YC001-YC030
D40826J	12		5572	20	PA	D40830P	3		AP1800B	07	YC001-YC030, YK901-YM670
D40826J	13		5573	20	PA	D40830P	4		AP1800B	07	YC001-YC030, YK901-YM670
AE0104A	28	W5610	SA2*	DISCONNECT BRACKET - E1-4 SHELF							
D40346J	11		0501	22	PA	D40348P	A02		AE0202A	10	ALL
D40346J	12		0502	22	PA	D40348P	B02		AE0202A	10	ALL
D40346J	13		0503	22	PA	D40348P	A03		AE0202A	10	ALL

SPARE WIRE LIST

D280A103

91-21-12

Section AE0104A

Page 5 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To					Pos	Effectivity
				GA	TY	Equip	Term	Type	Matewith			
AE0105A	02	W2151	NB2	DISCONNECT BRACKET - E1-5 SHELF								
D04031J	23		0023	22	PA	D00265	CAP	Y	P008-26			YC001-YC030, YK901-YM670
D04031J	27		0027	22	PA	D00305	CAP	Y	P008-26			YC001-YC030, YK901-YM670
D04031J	34		2005B	24	Y2	D00305	CAP	Y	P008-26			YC001-YC030, YK901-YM670
D04031J	33		2005R	24	Y2	D00305	CAP	Y	P008-26			YC001-YC030, YK901-YM670
D04031J	S/R		2005Z			D00305	S/R		P008-26			YC001-YC030, YK901-YM670
D04031J	36		2006B	24	Y2	D00265	CAP	Y	P008-26			YC001-YC030, YK901-YM670
D04031J	35		2006R	24	Y2	D00265	CAP	Y	P008-26			YC001-YC030, YK901-YM670
D04031J	S/R		2006Z			D00265	S/R		P008-26			YC001-YC030, YK901-YM670
AE0105A	03	W5723	RB2*	DISCONNECT BRACKET - E1-5 SHELF								
D41507J	44		2503B	24	Y2	D43333P	B10		AE0303A	44		YK901-YM670
D41507J	43		2503R	24	Y2	D43333P	A10		AE0303A	44		YK901-YM670
D41507J	S/R		2503Z			D43333P	PERG	1F	AE0303A	44		YK901-YM670
D41507J	48		2506B	24	Y2	D43333P	B07		AE0303A	44		YK901-YM670
D41507J	47		2506R	24	Y2	D43333P	A07		AE0303A	44		YK901-YM670
D41507J	S/R		2506Z			D43333P	PERG	1F	AE0303A	44		YK901-YM670
AE0105A	07	W5163	RB2*	DISCONNECT BRACKET - E1-5 SHELF								
D41557J	23		0025	16	PA	D41147P	G		AE0101B	11		YK901-YM670
D41557J	4		0035	22	PA	D41157P	B05		AE0101B	12		ALL
AE0105A	09	W5121	NB2	DISCONNECT BRACKET - E1-5 SHELF								
D45125J	2		0002	22	PA	D45123J			AE0104A	12		YC001-YC030
D45125J	9		0017	20	PA	D45123J			AE0104A	12		YC001-YC030, YK901-YM670
D45125J	42		2668B	24	Y2	D45127P	B16		AE0302A	46		YK901-YM670
D45125J	41		2668R	24	Y2	D45127P	A16		AE0302A	46		YK901-YM670
D45125J	S/R		2668Z			D45127P	PERG	1F	AE0302A	46		YK901-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section AE0105A

Page 1 End

Aug 10/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To		Term	Type	Matewith	Pos	Effectivity
				GA	TY	Equip						
AE0201A	15	W2138	LA1	DISCONNECT BRACKET - E2-1 SHELF								
D41432P	3		5503	16	HA	D41430P		3		AP0600B	05	ALL
AE0201A	17	W5164	LA1*	DISCONNECT BRACKET - E2-1 SHELF								
D40718P	A05		2602B	20	X2	D39933		26		AC0520		ALL
D40718P	B05		2602R	20	X2	D39933		25		AC0520		ALL
D40718P	PERG	1F	2602Z			D39933		S/R		AC0520		ALL
AE0201A	18	W5612	SN2*	DISCONNECT BRACKET - E2-1 SHELF								
D40358P	A01		0001	20	PA	D40362P		A01		AE0302A	05	ALL
D40358P	B05		2204B	24	Y2	D40352P		28		AP0600B	16	YC030-YM670
D40358P	B04		2204R	24	Y2	D40352P		9		AP0600B	16	YC030-YM670
D40358P	DED		2204Z			D40352P		DED		AP0600B	16	YC030-YM670
D40358P	B08		2207B	22	PB	D40362P		B07		AE0302A	05	YC030-YM670
D40358P	A04		2207R	22	PB	D40362P		A07		AE0302A	05	YC030-YM670
AE0201A	19	W5110	LA2	DISCONNECT BRACKET - E2-1 SHELF								
D40340P	B01		0516	20	PA	D40338P		A10		AE0402A	07	YC001-YC030, YK901-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section AE0201A

Page 1 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To		Term	Type	Matewith	Pos	Effectivity
				GA	TY	Equip						
AE0202A	01	W5104	LA2	DISCONNECT BRACKET - E2-2 SHELF								
D40246P	A08		5522	20	PA	D40056P		16		AB0536L	02	ALL
AE0202A	07	W5564	SN2*	DISCONNECT BRACKET - E2-2 SHELF								
D40136P	A01		2601B	20	X2	D39909		6		AC0520		ALL
D40136P	B01		2601R	20	X2	D39909		5		AC0520		ALL
D40136P	PERG	1F	2601Z			D39909		S/R		AC0520		ALL
AE0202A	08	W5168	SB2*	DISCONNECT BRACKET - E2-2 SHELF								
D40138P	A02		2601B	20	X2	D39929		2		AC0520		ALL
D40138P	B02		2601R	20	X2	D39929		3		AC0520		ALL
D40138P	PERG	1F	2601Z			D39929		S/R		AC0520		ALL
D40138P	A03		2602B	20	X2	D39929		4		AC0520		ALL
D40138P	B03		2602R	20	X2	D39929		5		AC0520		ALL
D40138P	PERG	1F	2602Z			D39929		S/R		AC0520		ALL
AE0202A	10	W5610	SA2*	DISCONNECT BRACKET - E2-2 SHELF								
D40348P	A02		0501	22	PA	D40346J		11		AE0104A	28	ALL
D40348P	B02		0502	22	PA	D40346J		12		AE0104A	28	ALL
D40348P	A03		0503	22	PA	D40346J		13		AE0104A	28	ALL
D40348P	A05		2801B	24	Y2	D40940P		A04		AE0302A	07	ALL
D40348P	B05		2801R	24	Y2	D40940P		B04		AE0302A	07	ALL
D40348P	PERG	1F	2801Z			D40940P		PERG	1F	AE0302A	07	ALL
D40348P	A06		2802B	24	Y2	D40940P		A05		AE0302A	07	ALL
D40348P	B06		2802R	24	Y2	D40940P		B05		AE0302A	07	ALL
D40348P	PERG	1F	2802Z			D40940P		PERG	1F	AE0302A	07	ALL
AE0202A	11	W2104	LA1	DISCONNECT BRACKET - E2-2 SHELF								
D40506P	A09		6012	22	CQ	D40504P		12		AP1800A	08	YC001-YK917, YL421-YL428, YL430-YM670
AE0202A	24	W5310	LB2*	DISCONNECT BRACKET - E2-2 SHELF								
D40450P	A14		0502	22	PA	D40446P		A03		AE0302A	04	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652

SPARE WIRE LIST

D280A103

91-21-12

Section AE0202A

Page 1

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY		To Equip	Term	Type	Matewith	Pos	Effectivity
AE0202A	24	W5310	LB2*	DISCONNECT BRACKET - E2-2 SHELF (continued)							
D40450P	A13		2802B	24	Y2	D40446P	A02		AE0302A	04	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40450P	B13		2802R	24	Y2	D40446P	B02		AE0302A	04	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40450P	PERG	1F	2802Z			D40446P	PERG	1F	AE0302A	04	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40450P	B06		5502	24	PK	D40446P	B10		AE0302A	04	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
AE0202A	25	W5162	LB2*	DISCONNECT BRACKET - E2-2 SHELF							
D40130P	A03		2601B	20	X2	D39921	14		AC0520		ALL
D40130P	B03		2601R	20	X2	D39921	5		AC0520		ALL
D40130P	PERG	1F	2601Z			D39921	S/R		AC0520		ALL
D40130P	A09		2609B	20	X2	D39921	31		AC0520		ALL
D40130P	B09		2609R	20	X2	D39921	30		AC0520		ALL
D40130P	PERG	1F	2609Z			D39921	S/R		AC0520		ALL
AE0202A	26	W6214	LA2*	DISCONNECT BRACKET - E2-2 SHELF							
D40380P	B15		5536	20	PA	D40378P	B15		AE0401A	46	YC001-YC030, YK901-YM670
AE0202A	27	W3170	LA2*	DISCONNECT BRACKET - E2-2 SHELF							
D40126P	A01		2601B	20	PB	D40734P	1		AB0420A	01	ALL
D40126P	B01		2601R	20	PB	D40734P	2		AB0420A	01	ALL
D40126P	A02		2602B	20	PB	D40734P	3		AB0420A	01	ALL
D40126P	B02		2602R	20	PB	D40734P	4		AB0420A	01	ALL
D40126P	A03		2603B	20	PB	D40734P	5		AB0420A	01	ALL
D40126P	B03		2603R	20	PB	D40734P	6		AB0420A	01	ALL
D40126P	A11		2607B	20	X2	D40736P	4		AB0420A	02	ALL
D40126P	B11		2607R	20	X2	D40736P	5		AB0420A	02	ALL

SPARE WIRE LIST

D280A103

91-21-12

Section AE0202A

Page 2

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To		Matewith	Pos	Effectivity
				GA	TY	Equip	Term			
AE0202A	27	W3170	LA2*	DISCONNECT BRACKET - E2-2 SHELF (continued)						
D40126P	PERG	1F	2607Z			D40736P	S/R	AB0420A	02	ALL
AE0202A	28	W5156	SA2*	DISCONNECT BRACKET - E2-2 SHELF						
D40724P	B17		6025R	22	PH	D40670P	20	AJ0022	04	YC004-YC030, YK901-YM670
AE0202A	32	W5088	NB2	DISCONNECT BRACKET - E2-2 SHELF						
D42014P	A05		6015	22	PA	D46608J	1	AB0500DL	06	YC001-YK917, YL421-YL428, YL430-YM670
D42014P	A01		6016	22	CQ	D46608J	12	AB0500DL	06	YC001-YK917, YL421-YL428, YL430-YM670
D42014P	A03		6017	22	CQ	D46608J	9	AB0500DL	06	YC001-YK917, YL421-YL428, YL430-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section AE0202A

Page 3 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To Equip	Term	Type	Matewith	Pos	Effectivity
				GA	TY						
AE0301A	01	W0311	NA2	DISCONNECT BRACKET - E3-1							
D04271J	A03		0140	20	PA	D40460J	A08		AE0301A	19	YK901-YM670
AE0301A	06	W2207	NA2	DISCONNECT BRACKET - E3-1							
D04267P	A13		0003	22	PA	D04207P	13		AP0900A	03	ALL
D04267P	A14		0004	22	PA	D04207P	14		AP0900A	03	ALL
D04267P	B11		0031	22	PA	D04207P	31		AP0900A	03	ALL
D04267P	B12		0032	22	PA	D04207P	32		AP0900A	03	ALL
D04267P	B17		0037	22	PA	D04207P	37		AP0900A	03	ALL
D04267P	B18		0038	22	PA	D04207P	38		AP0900A	03	ALL
D04267P	B19		0040	22	CQ	D04207P	40		AP0900A	03	ALL
D04267P	B20		0041	22	CQ	D04207P	41		AP0900A	03	ALL
D04267P	A06		2003B	24	Y2	D04207P	6		AP0900A	03	ALL
D04267P	A05		2003R	24	Y2	D04207P	5		AP0900A	03	ALL
D04267P	PERG	1F	2003Z			D04207P	S/R		AP0900A	03	ALL
D04267P	A08		2004B	24	Y2	D04207P	8		AP0900A	03	ALL
D04267P	A07		2004R	24	Y2	D04207P	7		AP0900A	03	ALL
D04267P	PERG	1F	2004Z			D04207P	S/R		AP0900A	03	ALL
D04267P	A16		2008B	24	Y2	D04207P	16		AP0900A	03	ALL
D04267P	A15		2008R	24	Y2	D04207P	15		AP0900A	03	ALL
D04267P	PERG	1F	2008Z			D04207P	S/R		AP0900A	03	ALL
D04267P	A20		2010B	24	Y2	D04207P	20		AP0900A	03	ALL
D04267P	A19		2010R	24	Y2	D04207P	19		AP0900A	03	ALL
D04267P	PERG	1F	2010Z			D04207P	S/R		AP0900A	03	ALL
AE0301A	07	W5111	NA2	DISCONNECT BRACKET - E3-1							
D45111P	B01		0005	22	PA	D45117P	B03		AE0302A	20	YC001-YC030, YK901-YM670
D45111P	B02		0024	22	PA	D45115J	9		AE0102A	02	YC001-YC030, YK901-YM670
D45111P	B04		2005B	24	Y2	D45115J	20		AE0102A	02	YC001-YC011
D45111P	A04		2005R	24	Y2	D45115J	19		AE0102A	02	YC001-YC011
D45111P	PERG	1F	2005Z			D45115J	S/R		AE0102A	02	YC001-YC011
D45111P	B08		2021B	24	Y2	D45117P	B11		AE0302A	20	YC001-YC030, YK901-YM670
D45111P	A08		2021R	24	Y2	D45117P	A11		AE0302A	20	YC001-YC030, YK901-YM670
D45111P	PERG	1F	2021Z			D45117P	PERG	1F	AE0302A	20	YC001-YC030, YK901-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section AE0301A

Page 1

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To					Pos	Effectivity
				GA	TY	Equip	Term	Type	Matewith			
AE0301A	07	W5111	NA2	DISCONNECT BRACKET - E3-1 (continued)								
D45111P	CAP	Y	2024B	22	X2	D45117P	B12		AE0302A		20	YC012-YC030, YK901-YM670
D45111P	CAP	Y	2024R	22	X2	D45117P	A12		AE0302A		20	YC012-YC030, YK901-YM670
D45111P	DED		2024Z			D45117P	PERG	1F	AE0302A		20	YC012-YC030, YK901-YM670
D45111P	B17		2033B	24	Y2	D45113P	B14		AE0101A		19	YC001-YC030, YK901-YM670
D45111P	A17		2033R	24	Y2	D45113P	A14		AE0101A		19	YC001-YC030, YK901-YM670
D45111P	PERG	1F	2033Z			D45113P	PERG	1F	AE0101A		19	YC001-YC030, YK901-YM670
D45111P	B18		2043B	24	Y2	D45117P	B17		AE0302A		20	YC001-YC030, YK901-YM670
D45111P	A18		2043R	24	Y2	D45117P	A17		AE0302A		20	YC001-YC030, YK901-YM670
D45111P	PERG	1F	2043Z			D45117P	PERG	1F	AE0302A		20	YC001-YC030, YK901-YM670
D45111P	B20		2045B	24	Y2	D45137P	B15		AE0302A		19	YC001-YC030, YK901-YM670
D45111P	A20		2045R	24	Y2	D45137P	A15		AE0302A		19	YC001-YC030, YK901-YM670
D45111P	PERG	1F	2045Z			D45137P	PERG	1F	AE0302A		19	YC001-YC030, YK901-YM670
D45111P	B19		2048B	24	Y2	D45137P	B16		AE0302A		19	YC001-YC030, YK901-YM670
D45111P	A19		2048R	24	Y2	D45137P	A16		AE0302A		19	YC001-YC030, YK901-YM670
D45111P	PERG	1F	2048Z			D45137P	PERG	1F	AE0302A		19	YC001-YC030, YK901-YM670
AE0301A	08	W5111	NA2	DISCONNECT BRACKET - E3-1								
D45131P	B03		2047B	24	Y2	D45133P	B06		AE0101A		03	YC001-YC030, YK901-YM670
D45131P	A03		2047R	24	Y2	D45133P	A06		AE0101A		03	YC001-YC030, YK901-YM670
D45131P	PERG	1F	2047Z			D45133P	PERG	1F	AE0101A		03	YC001-YC030, YK901-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section AE0301A

Page 2

Aug 10/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY		To Equip	Term	Type	Matewith	Pos	Effectivity
AE0301A	08	W5111	NA2	DISCONNECT BRACKET - E3-1 (continued)							
D45131P	B20		2050B	22	X2	D45137P	B18		AE0302A	19	YC001-YC030, YK901-YM670
D45131P	A20		2050R	22	X2	D45137P	A18		AE0302A	19	YC001-YC030, YK901-YM670
D45131P	PERG	1F	2050Z			D45137P	PERG	1F	AE0302A	19	YC001-YC030, YK901-YM670
D45131P	B06		2052B	24	Y2	D45133P	CAP	Y	AE0101A	03	YC001-YC007
D45131P	A06		2052R	24	Y2	D45133P	CAP	Y	AE0101A	03	YC001-YC007
D45131P	PERG	1F	2052Z			D45133P	PERG	1F	AE0101A	03	YC001-YC007
AE0301A	11	W5310	LB2*	DISCONNECT BRACKET - E3-1							
D40448P	B09		6003	24	PK	D40446P	B03		AE0302A	04	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
AE0301A	14	W3170	LA2*	DISCONNECT BRACKET - E3-1							
D49994P	A07		2606B	20	X2	D40736P	1		AB0420A	02	ALL
D49994P	B06		2606R	20	X2	D40736P	2		AB0420A	02	ALL
D49994P	PERG	1F	2606Z			D40736P	S/R		AB0420A	02	ALL
AE0301A	15	W0311	NA2	DISCONNECT BRACKET - E3-1							
D43145J	A03		0136	20	PA	D41817J	1		AE0301A	21	YK901-YM670
D43145J	A04		0137	20	PA	D41817J	2		AE0301A	21	YK901-YM670
AE0301A	15	W5161	LA2	DISCONNECT BRACKET - E3-1							
D43145P	A05		0004	20	PA	D45245J	B15		AE0502A	14	ALL
D43145P	A03		0027	20	PA	D45245J	B13		AE0502A	14	ALL
D43145P	A04		0028	20	PA	D45245J	B14		AE0502A	14	ALL
D43145P	B01		0035	24	PK	D41145P	A04		AE0101A	04	ALL
D43145P	A17		0040	24	PK	D41155P	A17		AE0101A	20	ALL
AE0301A	16	W5161	LA2	DISCONNECT BRACKET - E3-1							
D43155P	B16		2511B	22	X2	D41145P	A03		AE0101A	04	ALL
D43155P	B15		2511R	22	X2	D41145P	A02		AE0101A	04	ALL
D43155P	PERG	1F	2511Z			D41145P	PERG	1F	AE0101A	04	ALL
D43155P	B02		2518B	24	Y2	D45255J	B20		AE0502A	15	ALL

SPARE WIRE LIST

D280A103

91-21-12

Section AE0301A

Page 3

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description		To							
Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity		
AE0301A	16	W5161	LA2	DISCONNECT BRACKET - E3-1 (continued)									
D43155P	B01		2518R	24	Y2	D45255J	B19		AE0502A	15	ALL		
D43155P	PERG	1F	2518Z			D45255J	PERG	1F	AE0502A	15	ALL		
D43155P	B10		2523B	24	Y2	D45265J	B02		AE0502A	16	ALL		
D43155P	B09		2523R	24	Y2	D45265J	B01		AE0502A	16	ALL		
D43155P	PERG	1F	2523Z			D45265J	PERG	1F	AE0502A	16	ALL		
AE0301A	18	W5205	SA2	DISCONNECT BRACKET - E3-1									
D45205P	A05		0025	20	PA	D45209J	A05		AE0502A	03	YC001-YC030, YK901-YM670		
D45205P	B03		2001B	22	X2	D45209J	B03		AE0502A	03	YC001-YC030, YK901-YM670		
D45205P	B02		2001R	22	X2	D45209J	B02		AE0502A	03	YC001-YC030, YK901-YM670		
D45205P	PERG	1F	2001Z			D45209J	PERG	1F	AE0502A	03	YC001-YC030, YK901-YM670		
AE0301A	19	W0311	NA2	DISCONNECT BRACKET - E3-1									
D40460J	A08		0140	20	PA	D04271J	A03		AE0301A	01	YK901-YM670		
AE0301A	19	W5156	SA2*	DISCONNECT BRACKET - E3-1									
D40460P	A08		0646	20	PA	D40670P	28		AJ0022	04	YK901-YL430		
D40460P	B01		0668	22	PA	D40666P	20		AJ0022	03	YC004-YC030, YK901-YM670		
AE0301A	21	W0311	NA2	DISCONNECT BRACKET - E3-1									
D41817J	1		0136	20	PA	D43145J	A03		AE0301A	15	YK901-YM670		
D41817J	2		0137	20	PA	D43145J	A04		AE0301A	15	YK901-YM670		
AE0301A	21	W2201	LA2	DISCONNECT BRACKET - E3-1									
D41817P	1		0001	20	PA	D41805P	1		AP1800B	01	ALL		
D41817P	2		0002	20	PA	D41805P	2		AP1800B	01	ALL		
D41817P	3		0003	20	PA	D41805P	3		AP1800B	01	ALL		
D41817P	12		0010	20	PA	D41805P	10		AP1800B	01	ALL		
D41817P	11		0011	20	PA	D41805P	11		AP1800B	01	ALL		
D41817P	4		0019	16	PA	D41805P	19		AP1800B	01	ALL		
D41817P	5		0021	20	PA	D41805P	21		AP1800B	01	ALL		

SPARE WIRE LIST

D280A103

91-21-12
Section AE0301A
Page 4
Aug 10/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY		To Equip	Term	Type	Matewith	Pos	Effectivity
AE0301A	22	W2653	SA2	DISCONNECT BRACKET - E3-1							
D41837P	1		0001	20	PA	D41809P	1		AP1800B	09	ALL
D41837P	2		0002	22	PA	D41809P	2		AP1800B	09	ALL
D41837P	7		0019	16	PA	D41809P	19		AP1800B	09	ALL
D41837P	10		0023	18	PA	D41809P	23		AP1800B	09	ALL
AE0301A	23	W2231	RB2	DISCONNECT BRACKET - E3-1							
D46017P	6		0006	20	PA	D46067P	6		AP0600B	10	ALL
D46017P	5		0007	20	PA	D46067P	7		AP0600B	10	ALL
D46017P	7		0027	16	PA	D46067P	27		AP0600B	10	ALL
D46017P	8		0028	20	PA	D46067P	28		AP0600B	10	ALL
AE0301A	24	W2169	RB2	DISCONNECT BRACKET - E3-1							
D46035P	1		0001	20	PA	D46063P	1		AP0600B	19	ALL
D46035P	2		0002	22	PA	D46063P	2		AP0600B	19	ALL
D46035P	3		0003	20	PA	D46063P	3		AP0600B	19	ALL
D46035P	9		0009	20	PA	D46063P	9		AP0600B	19	YC011, YC031-YM670
D46035P	5		0010	20	PA	D46063P	10		AP0600B	19	YC011, YC031-YM670
AE0301A	28	W0313	NB2	DISCONNECT BRACKET - E3-1							
D43147J	B12		2534B	24	Y2	D40149J	A04		AE0301A	35	YK901-YM670
D43147J	B11		2534R	24	Y2	D40149J	A03		AE0301A	35	YK901-YM670
D43147J	PERG	1F	2534Z			D40149J	PERG	1F	AE0301A	35	YK901-YM670
AE0301A	28	W5163	RB2*	DISCONNECT BRACKET - E3-1							
D43147P	A01		0021	20	PA	D45247J	A16		AE0502A	04	ALL
D43147P	A02		0022	20	PA	D45247J	REF	VP	AE0502A	04	YC001-YC030
D43147P	A12		0023	20	PA	D45247J	REF	VP	AE0502A	04	YC001-YC030
D43147P	A07		0040	24	PK	D41147P	A07		AE0101B	11	ALL
D43147P	A20		2529B	24	Y2	D41157P	B11		AE0101B	12	ALL
D43147P	A19		2529R	24	Y2	D41157P	B10		AE0101B	12	ALL
D43147P	PERG	1F	2529Z			D41157P	PERG	1F	AE0101B	12	ALL
D43147P	A09		2530B	24	Y2	D41157P	REF	VP	AE0101B	12	YC001-YC030
D43147P	A08		2530R	24	Y2	D41157P	REF	VP	AE0101B	12	YC001-YC030
D43147P	PERG	1F	2530Z			D41157P	PERG	1F	AE0101B	12	YC001-YC030

SPARE WIRE LIST

D280A103

91-21-12

Section AE0301A

Page 5

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To					Pos	Effectivity	
				GA	TY	Equip	Term	Type	Matewith				
AE0301A	29	W5163	RB2*	DISCONNECT BRACKET - E3-1									
D43157P	A20		0013	22	PA	D45247J	A08		AE0502A		04	ALL	
D43157P	A09		2508B	24	Y2	D45257J	A10		AE0502A		05	ALL	
D43157P	A08		2508R	24	Y2	D45257J	A09		AE0502A		05	ALL	
D43157P	PERG	1F	2508Z			D45257J	PERG	1F	AE0502A		05	ALL	
D43157P	A11		2509B	24	Y2	D45257J	A12		AE0502A		05	ALL	
D43157P	A10		2509R	24	Y2	D45257J	A11		AE0502A		05	ALL	
D43157P	PERG	1F	2509Z			D45257J	PERG	1F	AE0502A		05	ALL	
AE0301A	31	W2237	NB2	DISCONNECT BRACKET - E3-1									
D04297P	A13		0003	22	PA	D04237P	13		AP0900A		06	ALL	
D04297P	A14		0004	22	PA	D04237P	14		AP0900A		06	ALL	
D04297P	B09		0029	22	PA	D04237P	29		AP0900A		06	ALL	
D04297P	B10		0030	22	PA	D04237P	30		AP0900A		06	ALL	
D04297P	B11		0031	22	PA	D04237P	31		AP0900A		06	ALL	
D04297P	B12		0032	22	PA	D04237P	32		AP0900A		06	ALL	
D04297P	B17		0037	22	PA	D04237P	37		AP0900A		06	ALL	
D04297P	B18		0038	22	PA	D04237P	38		AP0900A		06	ALL	
D04297P	B19		0040	22	CQ	D04237P	40		AP0900A		06	ALL	
D04297P	B20		0041	22	CQ	D04237P	41		AP0900A		06	ALL	
D04297P	A06		2003B	24	Y2	D04237P	6		AP0900A		06	ALL	
D04297P	A05		2003R	24	Y2	D04237P	5		AP0900A		06	ALL	
D04297P	PERG	1F	2003Z			D04237P	S/R		AP0900A		06	ALL	
D04297P	A08		2004B	24	Y2	D04237P	8		AP0900A		06	ALL	
D04297P	A07		2004R	24	Y2	D04237P	7		AP0900A		06	ALL	
D04297P	PERG	1F	2004Z			D04237P	S/R		AP0900A		06	ALL	
D04297P	A16		2008B	24	Y2	D04237P	16		AP0900A		06	ALL	
D04297P	A15		2008R	24	Y2	D04237P	15		AP0900A		06	ALL	
D04297P	PERG	1F	2008Z			D04237P	S/R		AP0900A		06	ALL	
D04297P	A18		2009B	24	Y2	D04237P	18		AP0900A		06	ALL	
D04297P	A17		2009R	24	Y2	D04237P	17		AP0900A		06	ALL	
D04297P	PERG	1F	2009Z			D04237P	S/R		AP0900A		06	ALL	
D04297P	A20		2010B	24	Y2	D04237P	20		AP0900A		06	ALL	
D04297P	A19		2010R	24	Y2	D04237P	19		AP0900A		06	ALL	
D04297P	PERG	1F	2010Z			D04237P	S/R		AP0900A		06	ALL	
D04297P	B02		2011B	24	Y2	D04237P	22		AP0900A		06	ALL	
D04297P	B01		2011R	24	Y2	D04237P	21		AP0900A		06	ALL	
D04297P	PERG	1F	2011Z			D04237P	S/R		AP0900A		06	ALL	
D04297P	B04		2012B	24	Y2	D04237P	24		AP0900A		06	ALL	

SPARE WIRE LIST

D280A103

91-21-12

Section AE0301A

Page 6

Aug 10/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY		To Equip	Term	Type	Matewith	Pos	Effectivity
AE0301A	31	W2237	NB2	DISCONNECT BRACKET - E3-1 (continued)							
D04297P	B03		2012R	24	Y2	D04237P	23		AP0900A	06	ALL
D04297P	PERG	1F	2012Z			D04237P	S/R		AP0900A	06	ALL
AE0301A	32	W5121	NB2	DISCONNECT BRACKET - E3-1							
D45121P	B01		0011	22	PA	D45127P	A01		AE0302A	46	YC001-YC030
D45121P	B03		2070B	24	Y2	D45147P	B05		AE0302A	56	YK901-YM670
D45121P	A03		2070R	24	Y2	D45147P	A05		AE0302A	56	YK901-YM670
D45121P	PERG	1F	2070Z			D45147P	PERG	1F	AE0302A	56	YK901-YM670
AE0301A	33	W5121	NB2	DISCONNECT BRACKET - E3-1							
D45141P	B15		2025B	24	Y2	D45127P	B19		AE0302A	46	YK901-YM670
D45141P	A15		2025R	24	Y2	D45127P	A19		AE0302A	46	YK901-YM670
D45141P	PERG	1F	2025Z			D45127P	PERG	1F	AE0302A	46	YK901-YM670
D45141P	B10		2051B	24	Y2	D43323P	B10		AE0303A	42	YK901-YL430
D45141P	A10		2051R	24	Y2	D43323P	A10		AE0303A	42	YK901-YL430
D45141P	PERG	1F	2051Z			D43323P	PERG	1F	AE0303A	42	YK901-YL430
D45141P	B20		2063B	24	Y2	D43323P	B11		AE0303A	42	YK901-YL430
D45141P	A20		2063R	24	Y2	D43323P	A11		AE0303A	42	YK901-YL430
D45141P	PERG	1F	2063Z			D43323P	PERG	1F	AE0303A	42	YK901-YL430
D45141P	B01		2084B	24	Y2	D45147P	B11		AE0302A	56	YK901-YM670
D45141P	A01		2084R	24	Y2	D45147P	A11		AE0302A	56	YK901-YM670
D45141P	PERG	1F	2084Z			D45147P	PERG	1F	AE0302A	56	YK901-YM670
D45141P	B02		2086B	24	Y2	D45147P	B16		AE0302A	56	YK901-YM670
D45141P	A02		2086R	24	Y2	D45147P	A16		AE0302A	56	YK901-YM670
D45141P	PERG	1F	2086Z			D45147P	PERG	1F	AE0302A	56	YK901-YM670
AE0301A	34	W6412	RB2*	DISCONNECT BRACKET - E3-1							
D40394P	A09		0508	20	PA	D41010P	2		AE0401A	33	ALL
D40394P	A13		2608B	24	Y2	D40392P	A05		AE0302A	45	ALL
D40394P	A14		2608R	24	Y2	D40392P	A06		AE0302A	45	ALL
D40394P	PERG	1F	2608Z			D40392P	PERG	1F	AE0302A	45	ALL
D40394P	A15		5535	20	PA	D40386P	29		AP0600B	14	YC001-YL430
AE0301A	35	W0313	NB2	DISCONNECT BRACKET - E3-1							
D40149J	A04		2534B	24	Y2	D43147J	B12		AE0301A	28	YK901-YM670
D40149J	A03		2534R	24	Y2	D43147J	B11		AE0301A	28	YK901-YM670
D40149J	PERG	1F	2534Z			D43147J	PERG	1F	AE0301A	28	YK901-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section AE0301A

Page 7

Aug 10/2009



From Matewith	Pos	Bundle	Sep	Description		To							
From				GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity		
Equip	Term	Type	Wire No.										
AE0301A	36	W4170	RA2*	DISCONNECT BRACKET - E3-1									
D40732P	A05		2605B	20	PB	D40730P	9		AB0405B	02	ALL		
D40732P	B05		2605R	20	PB	D40730P	10		AB0405B	02	ALL		
D40732P	A06		2606B	20	PB	D40730P	11		AB0405B	02	ALL		
D40732P	B06		2606R	20	PB	D40730P	12		AB0405B	02	ALL		
D40732P	A10		2609B	20	PB	D40728P	6		AB0405B	01	ALL		
D40732P	B10		2609R	20	PB	D40728P	7		AB0405B	01	ALL		

SPARE WIRE LIST

D280A103

91-21-12

Section AE0301A

Page 8 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To		Matewith	Pos	Effectivity
				GA	TY	Equip	Term			
AE0302A	04	W5310	LB2*	DISCONNECT BRACKET - E3-2 SHELF						
D40446P	A03		0502	22	PA	D40450P	A14	AE0202A	24	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40446P	A02		2802B	24	Y2	D40450P	A13	AE0202A	24	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40446P	B02		2802R	24	Y2	D40450P	B13	AE0202A	24	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40446P	PERG	1F	2802Z			D40450P	PERG	1F	24	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40446P	B10		5502	24	PK	D40450P	B06	AE0202A	24	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40446P	B03		6003	24	PK	D40448P	B09	AE0301A	11	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
AE0302A	05	W5612	SN2*	DISCONNECT BRACKET - E3-2 SHELF						
D40362P	A01		0001	20	PA	D40358P	A01	AE0201A	18	ALL
D40362P	A10		0555	22	PA	D40352P	17	AP0600B	16	YC030-YK909, YL401
D40362P	B07		2207B	22	PB	D40358P	B08	AE0201A	18	YC030-YM670
D40362P	A07		2207R	22	PB	D40358P	A04	AE0201A	18	YC030-YM670
AE0302A	07	W5610	SA2*	DISCONNECT BRACKET - E3-2 SHELF						
D40940P	A04		2801B	24	Y2	D40348P	A05	AE0202A	10	ALL
D40940P	B04		2801R	24	Y2	D40348P	B05	AE0202A	10	ALL
D40940P	PERG	1F	2801Z			D40348P	PERG	1F	10	ALL
D40940P	A05		2802B	24	Y2	D40348P	A06	AE0202A	10	ALL
D40940P	B05		2802R	24	Y2	D40348P	B06	AE0202A	10	ALL

SPARE WIRE LIST

D280A103

91-21-12

Section AE0302A

Page 1

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To					Pos	Effectivity		
				GA	TY	Equip	Term	Type	Matewith					
AE0302A	07	W5610	SA2*	DISCONNECT BRACKET - E3-2 SHELF (continued)										
D40940P	PERG	1F	2802Z			D40348P	PERG	1F	AE0202A		10	ALL		
AE0302A	09	W2805	NN2	DISCONNECT BRACKET - E3-2 SHELF										
D43215P	B04		2503B	24	Y2	D02649	B		M02195			YK901-YM670		
D43215P	A04		2503R	24	Y2	D02649	A		M02195			YK901-YM670		
D43215P	PERG	1F	2503Z			D02649			M02195			YK901-YM670		
AE0302A	14	W5205	SA2	DISCONNECT BRACKET - E3-2 SHELF										
D45207P	A03		0053	20	CQ	D45201J		31	AE0102A		10	YC001-YC030, YK901-YM670		
AE0302A	16	W5156	SA2*	DISCONNECT BRACKET - E3-2 SHELF										
D40594P	A08		0660	20	CQ	D40666P		9	AJ0022		03	YC001-YC030, YK901-YM670		
D40594P	A02		0671	22	PA	D48114P		B07	AJ0048A		17	YC004-YC030, YK901-YM670		
D40594P	B02		0672	22	PA	D48114P		B08	AJ0048A		17	YC004-YC030, YK901-YM670		
D40594P	B01		0673	22	PA	D48114P		B09	AJ0048A		17	YC004-YC030, YK901-YM670		
D40594P	A01		0674	22	PA	D48114P		B10	AJ0048A		17	YC004-YC030, YK901-YM670		
AE0302A	17	W5111	NA2	DISCONNECT BRACKET - E3-2 SHELF										
D45177P	B05		2058B	24	Y2	D43307P	B10		AE0303A		12	YC001-YC030		
D45177P	A05		2058R	24	Y2	D43307P	A10		AE0303A		12	YC001-YC030		
D45177P	PERG	1F	2058Z			D43307P	PERG	1F	AE0303A		12	YC001-YC030		
D45177P	B06		2059B	24	Y2	D43307P	B09		AE0303A		12	YC001-YC030		
D45177P	A06		2059R	24	Y2	D43307P	A09		AE0303A		12	YC001-YC030		
D45177P	PERG	1F	2059Z			D43307P	PERG	1F	AE0303A		12	YC001-YC030		
D45177P	B09		2072B	24	Y2	D45211J	B13		AE0502A		12	YC001-YC030		
D45177P	A09		2072R	24	Y2	D45211J	A13		AE0502A		12	YC001-YC030		
D45177P	PERG	1F	2072Z			D45211J	PERG	1F	AE0502A		12	YC001-YC030		
AE0302A	18	W0321	NN2	DISCONNECT BRACKET - E3-2 SHELF										
D45157J	A05		0159	20	G5	D40426J		8	AE0302A		28	YC001-YC002, YC004-YC007		

SPARE WIRE LIST

D280A103

91-21-12

Section AE0302A

Page 2

Aug 10/2009



From Equip	Matewith Term	Pos Type	Bundle Type	Sep Wire No.	Description		To		Matewith	Pos	Effectivity	
					GA	TY	Equip	Term				Type
AE0302A	18	W0321	NN2		DISCONNECT BRACKET - E3-2 SHELF (continued)							
D45157J	A06			0161	22	PA	D40426J	11	AE0302A	28	YC001-YC050	
D45157J	B05			0192	20	G5	D40426J	7	AE0302A	28	YC001-YC002, YC004-YC007	
AE0302A	18	W5111	NA2		DISCONNECT BRACKET - E3-2 SHELF							
D45157P	A05			0030	20	CQ	D43307P	B16	AE0303A	12	YC001-YC002, YC004-YC007, YK901-YM670	
D45157P	B05			0031	20	CQ	D43307P	A17	AE0303A	12	YC001-YC002, YC004-YC007, YK901-YM670	
D45157P	A06			0032	22	PA	D43307P	B17	AE0303A	12	YC001-YC030, YK901-YM670	
D45157P	A03			0038	22	PA	D43307P	A14	AE0303A	12	YC001-YC030	
D45157P	B03			0039	22	PA	D43307P	B14	AE0303A	12	YC001-YC030	
D45157P	B08			2062B	24	Y2	D43307P	B04	AE0303A	12	YK901-YM670	
D45157P	A08			2062R	24	Y2	D43307P	A04	AE0303A	12	YK901-YM670	
D45157P	PERG	1F		2062Z			D43307P	PERG	1F	AE0303A	12	YK901-YM670
AE0302A	19	W5111	NA2		DISCONNECT BRACKET - E3-2 SHELF							
D45137P	B15			2045B	24	Y2	D45111P	B20	AE0301A	07	YC001-YC030, YK901-YM670	
D45137P	A15			2045R	24	Y2	D45111P	A20	AE0301A	07	YC001-YC030, YK901-YM670	
D45137P	PERG	1F		2045Z			D45111P	PERG	1F	AE0301A	07	YC001-YC030, YK901-YM670
D45137P	B16			2048B	24	Y2	D45111P	B19	AE0301A	07	YC001-YC030, YK901-YM670	
D45137P	A16			2048R	24	Y2	D45111P	A19	AE0301A	07	YC001-YC030, YK901-YM670	
D45137P	PERG	1F		2048Z			D45111P	PERG	1F	AE0301A	07	YC001-YC030, YK901-YM670
D45137P	B18			2050B	22	X2	D45131P	B20	AE0301A	08	YC001-YC030, YK901-YM670	
D45137P	A18			2050R	22	X2	D45131P	A20	AE0301A	08	YC001-YC030, YK901-YM670	
D45137P	PERG	1F		2050Z			D45131P	PERG	1F	AE0301A	08	YC001-YC030, YK901-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section AE0302A

Page 3

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description		To				Pos	Effectivity		
Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith				
AE0302A	20	W5111	NA2	DISCONNECT BRACKET - E3-2 SHELF									
D45117P	B03		0005	22	PA	D45111P	B01		AE0301A	07	YC001-YC030, YK901-YM670		
D45117P	B11		2021B	24	Y2	D45111P	B08		AE0301A	07	YC001-YC030, YK901-YM670		
D45117P	A11		2021R	24	Y2	D45111P	A08		AE0301A	07	YC001-YC030, YK901-YM670		
D45117P	PERG	1F	2021Z			D45111P	PERG	1F	AE0301A	07	YC001-YC030, YK901-YM670		
D45117P	B12		2024B	22	X2	D45111P	CAP	Y	AE0301A	07	YC012-YC030, YK901-YM670		
D45117P	A12		2024R	22	X2	D45111P	CAP	Y	AE0301A	07	YC012-YC030, YK901-YM670		
D45117P	PERG	1F	2024Z			D45111P	DED		AE0301A	07	YC012-YC030, YK901-YM670		
D45117P	B17		2043B	24	Y2	D45111P	B18		AE0301A	07	YC001-YC030, YK901-YM670		
D45117P	A17		2043R	24	Y2	D45111P	A18		AE0301A	07	YC001-YC030, YK901-YM670		
D45117P	PERG	1F	2043Z			D45111P	PERG	1F	AE0301A	07	YC001-YC030, YK901-YM670		
AE0302A	25	W2231	RB2	DISCONNECT BRACKET - E3-2 SHELF									
D46021P	9		0009	20	PA	D46067P	9		AP0600B	10	ALL		
D46021P	1		0010	20	PA	D46067P	10		AP0600B	10	ALL		
D46021P	2		0011	20	PA	D46067P	11		AP0600B	10	ALL		
D46021P	3		0012	20	PA	D46067P	12		AP0600B	10	ALL		
AE0302A	26	W2653	SA2	DISCONNECT BRACKET - E3-2 SHELF									
D41839P	1		0011	20	PA	D41809P	11		AP1800B	09	ALL		
D41839P	2		0012	20	PA	D41809P	12		AP1800B	09	ALL		
AE0302A	27	W2201	LA2	DISCONNECT BRACKET - E3-2 SHELF									
D41819P	8		0008	20	PA	D41805P	8		AP1800B	01	YC001-YK909		
D41819P	8		0008	20	PA	D41805P	8	VP	AP1800B	01	YM643-YM646		
D41819P	13		0013	20	PA	D41805P	13		AP1800B	01	ALL		
D41819P	14		0014	20	PA	D41805P	14		AP1800B	01	YC001-YC013		
D41819P	15		0015	14	PA	D41805P	15		AP1800B	01	YC001-YK909		
D41819P	16		0016	20	PA	D41805P	16		AP1800B	01	ALL		

SPARE WIRE LIST

D280A103

91-21-12
Section AE0302A
Page 4
Aug 10/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To		Matewith	Pos	Effectivity	
				GA	TY	Equip	Term				Type
AE0302A	27	W2201	LA2	DISCONNECT BRACKET - E3-2 SHELF (continued)							
D41819P	17		0017	20	PA	D41805P	17	AP1800B	01	ALL	
D41819P	18		0018	20	PA	D41805P	18	AP1800B	01	ALL	
AE0302A	28	W0321	NN2	DISCONNECT BRACKET - E3-2 SHELF							
D40426J	8		0159	20	G5	D45157J	A05	AE0302A	18	YC001-YC002, YC004-YC007	
D40426J	11		0161	22	PA	D45157J	A06	AE0302A	18	YC001-YC050	
D40426J	7		0192	20	G5	D45157J	B05	AE0302A	18	YC001-YC002, YC004-YC007	
AE0302A	28	W5158	SB2*	DISCONNECT BRACKET - E3-2 SHELF							
D40426P	8		0545	20	CQ	D40702P	CAP	Y	AJ0024	06	YC001-YC002, YC004-YC030
D40426P	14		0634	20	PA	D40490J	21		AE0104A	20	YK911-YK917, YK919-YL401, YL427-YL430, YM651-YM670
D40426P	7		0682	20	CQ	D40702P	CAP	Y	AJ0024	06	YC001-YC002, YC004-YC030
D40426P	7		0682	20	CQ	D40702P	21		AJ0024	06	YK901-YM670
AE0302A	30	W2169	RB2	DISCONNECT BRACKET - E3-2 SHELF							
D46043P	4		0004	22	PA	D46063P	4	AP0600B	19	ALL	
D46043P	7		0007	22	PA	D46063P	7	AP0600B	19	ALL	
D46043P	8		0008	22	PA	D46063P	8	AP0600B	19	ALL	
D46043P	11		0011	20	PA	D46063P	11	AP0600B	19	YC011, YC031-YM670	
D46043P	12		0012	20	CQ	D46063P	12	AP0600B	19	YC031-YM670	
AE0302A	35	W3379	RB3	DISCONNECT BRACKET - E3-2 SHELF							
D40029P	A09		0002	20	CQ	D43399P	2	AB1050R	04	YC008-YM670	
D40029P	B02		2010B	22	X2	D43399P	37	AB1050R	04	YC008-YM670	
D40029P	B01		2010R	22	X2	D43399P	36	AB1050R	04	YC008-YM670	
D40029P	PERG	1F	2010Z			D43399P	S/R	AB1050R	04	YC008-YM670	
D40029P	B09		3007B	22	X3	D43399P	44	AB1050R	04	YC008-YM670	
D40029P	B08		3007R	22	X3	D43399P	43	AB1050R	04	YC008-YM670	
D40029P	B10		3007Y	22	X3	D43399P	45	AB1050R	04	YC008-YM670	

SPARE WIRE LIST

D280A103

91-21-12

Section AE0302A

Page 5

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To					Pos	Effectivity
				GA	TY	Equip	Term	Type	Matewith			
AE0302A	35	W3379	RB3	DISCONNECT BRACKET - E3-2 SHELF (continued)								
D40029P	PERG	1F	3007Z			D43399P	S/R		AB1050R		04	YC008-YM670
AE0302A	37	W5160	RB2*	DISCONNECT BRACKET - E3-2 SHELF								
D40470P	A01		0656	24	PK	D40466P	27		AE0103A		14	YC004-YC030, YK901-YM670
D40470P	A06		0657	24	PK	D40466P	28		AE0103A		14	YC004-YC030, YK901-YM670
D40470P	B07		2461B	24	Y2	D40466P	30		AE0103A		14	YC004-YC030, YK901-YL430
D40470P	B06		2461R	24	Y2	D40466P	29		AE0103A		14	YC004-YC030, YK901-YL430
D40470P	PERG	1F	2461Z			D40466P	31		AE0103A		14	YC004-YC030, YK901-YL430
AE0302A	40	W5461	LA2	DISCONNECT BRACKET - E3-2 SHELF								
D43261P	B10		2032B	24	Y2	D45261J	B10		AE0502A		18	YK901-YM670
D43261P	B09		2032R	24	Y2	D45261J	B09		AE0502A		18	YK901-YM670
D43261P	PERG	1F	2032Z			D45261J	PERG	1F	AE0502A		18	YK901-YM670
AE0302A	41	W5461	LA2	DISCONNECT BRACKET - E3-2 SHELF								
D42261P	B01		2003B	24	Y2	D41561J	B01		AE0502A		17	YC001-YC030, YK901-YM670
D42261P	A01		2003R	24	Y2	D41561J	A01		AE0502A		17	YC001-YC030, YK901-YM670
D42261P	PERG	1F	2003Z			D41561J	PERG	1F	AE0502A		17	YC001-YC030, YK901-YM670
D42261P	B15		2011B	24	Y2	D41561J	B15		AE0502A		17	YC001-YC030, YK901-YM670
D42261P	A15		2011R	24	Y2	D41561J	A15		AE0502A		17	YC001-YC030, YK901-YM670
D42261P	PERG	1F	2011Z			D41561J	PERG	1F	AE0502A		17	YC001-YC030, YK901-YM670
D42261P	B12		2103B	24	Y2	D42311P	A10		AE0101A		06	YC001-YC030, YK901-YM670
D42261P	B11		2103R	24	Y2	D42311P	A09		AE0101A		06	YC001-YC030, YK901-YM670
D42261P	PERG	1F	2103Z			D42311P	PERG	1F	AE0101A		06	YC001-YC030, YK901-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section AE0302A

Page 6

Aug 10/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY		To Equip	Term	Type	Matewith	Pos	Effectivity
AE0302A	42	W5160	RB2*	DISCONNECT BRACKET - E3-2 SHELF							
D40952P	A05		0620	20	PA	D40694P	31		AJ0024	07	YK907-YM670
AE0302A	43	W5461	LA2	DISCONNECT BRACKET - E3-2 SHELF							
D42361P	B11		0045	24	PK	D43211P	B15		AE0101A	21	YC001-YC030, YK901-YM670
D42361P	B15		0048	24	PK	D44161P	B15		AE0401A	24	YC008-YC030, YK901-YK906
D42361P	B06		0057	24	PK	D44161P	B04		AE0401A	24	YK901-YM670
D42361P	A06		0058	24	PK	D44161P	A06		AE0401A	24	YK901-YM670
D42361P	A14		0073	24	PK	D43211P	A14		AE0101A	21	YC001-YC030, YK901-YM670
D42361P	B13		0074	24	PK	D43211P	B13		AE0101A	21	YC001-YC030, YK901-YM670
D42361P	B05		2104B	24	Y2	D44161P	A05		AE0401A	24	YC001-YC011
D42361P	A12		2104R	24	Y2	D44161P	A04		AE0401A	24	YC001-YC011
D42361P	PERG	1F	2104Z			D44161P	PERG	1F	AE0401A	24	YC001-YC011
AE0302A	44	W5463	RB2	DISCONNECT BRACKET - E3-2 SHELF							
D43263P	A13		0055	20	PA	D41563P	A03		AE0101B	01	ALL
D43263P	B07		2013B	22	X2	D45263J	B07		AE0502A	06	YC001-YC030
D43263P	B07		2013B	24	Y2	D45263J	B07		AE0502A	06	YC031-YM670
D43263P	A07		2013R	22	X2	D45263J	A07		AE0502A	06	YC001-YC030
D43263P	A07		2013R	24	Y2	D45263J	A07		AE0502A	06	YC031-YM670
D43263P	PERG	1F	2013Z			D45263J	PERG	1F	AE0502A	06	ALL
D43263P	A08		2014B	22	X2	D41163P	A07		AE0101B	08	YC001-YC030
D43263P	B08		2014B	24	Y2	D45263J	B08		AE0502A	06	YC031-YM670
D43263P	B08		2014R	22	X2	D41163P	B05		AE0101B	08	YC001-YC030
D43263P	A08		2014R	24	Y2	D45263J	A08		AE0502A	06	YC031-YM670
D43263P	PERG	1F	2014Z			D41163P	PERG	1F	AE0101B	08	YC001-YC030
D43263P	PERG	1F	2014Z			D45263J	PERG	1F	AE0502A	06	YC031-YM670
D43263P	B14		2019B	24	Y2	D45263J	B14		AE0502A	06	ALL
D43263P	A14		2019R	24	Y2	D45263J	A14		AE0502A	06	ALL
D43263P	PERG	1F	2019Z			D45263J	PERG	1F	AE0502A	06	ALL
AE0302A	45	W6412	RB2*	DISCONNECT BRACKET - E3-2 SHELF							
D40392P	B18		2001B	24	Y2	D40390P	A06		AE0401A	52	YC031-YM670
D40392P	B17		2001R	24	Y2	D40390P	A05		AE0401A	52	YC031-YM670
D40392P	PERG	1F	2001Z			D40390P	PERG	1F	AE0401A	52	YC031-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section AE0302A

Page 7

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To					Pos	Effectivity
				GA	TY	Equip	Term	Type	Matewith			
AE0302A	45	W6412	RB2*	DISCONNECT BRACKET - E3-2 SHELF (continued)								
D40392P	A05		2608B	24	Y2	D40394P	A13		AE0301A		34	ALL
D40392P	A06		2608R	24	Y2	D40394P	A14		AE0301A		34	ALL
D40392P	PERG	1F	2608Z			D40394P	PERG	1F	AE0301A		34	ALL
D40392P	B03		5504	24	PK	D40390P	B03		AE0401A		52	ALL
D40392P	A14		5529	20	PA	D40390P	A17		AE0401A		52	ALL
D40392P	B14		5530	20	PA	D40390P	A18		AE0401A		52	YC001-YC030
D40392P	A18		5534	20	PA	D40386P	23		AP0600B		14	YC001-YL430
D40392P	A16		5548	24	PK	D40390P	B10		AE0401A		52	YC028-YK906
AE0302A	46	W5121	NB2	DISCONNECT BRACKET - E3-2 SHELF								
D45127P	A01		0011	22	PA	D45121P	B01		AE0301A		32	YC001-YC030
D45127P	A01		0011	22	PA	D45123J	2		AE0104A		12	YK901-YM670
D45127P	B03		0013	24	PK	D45123J	7		AE0104A		12	YC001-YC030, YK901-YM670
D45127P	B19		2025B	24	Y2	D45141P	B15		AE0301A		33	YK901-YM670
D45127P	A19		2025R	24	Y2	D45141P	A15		AE0301A		33	YK901-YM670
D45127P	PERG	1F	2025Z			D45141P	PERG	1F	AE0301A		33	YK901-YM670
D45127P	B16		2668B	24	Y2	D45125J	42		AE0105A		09	YK901-YM670
D45127P	A16		2668R	24	Y2	D45125J	41		AE0105A		09	YK901-YM670
D45127P	PERG	1F	2668Z			D45125J	S/R		AE0105A		09	YK901-YM670
AE0302A	47	W5375	RD3	DISCONNECT BRACKET - E3-2 SHELF								
D42053P	A10		0011	20	PA	D04077J	29		AE0104A		15	YC031-YC050, YK906-YM670
AE0302A	53	W5463	RB2	DISCONNECT BRACKET - E3-2 SHELF								
D42363P	A03		0030	24	PK	D41463J	44		AE0104A		11	ALL
D42363P	B03		0031	24	PK	D41463J	45		AE0104A		11	ALL
D42363P	A10		2022B	24	Y2	D45263J	A20		AE0502A		06	ALL
D42363P	A09		2022R	24	Y2	D45263J	A19		AE0502A		06	ALL
D42363P	PERG	1F	2022Z			D45263J	PERG	1F	AE0502A		06	ALL
AE0302A	56	W5121	NB2	DISCONNECT BRACKET - E3-2 SHELF								
D45147P	A01		0009	22	PA	D45123J	4		AE0104A		12	YK901-YM670
D45147P	B01		0010	22	PA	D45123J	5		AE0104A		12	YK901-YM670
D45147P	B13		2022B	24	Y2	D45123J	47		AE0104A		12	YK901-YM670
D45147P	A13		2022R	24	Y2	D45123J	46		AE0104A		12	YK901-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section AE0302A

Page 8

Aug 10/2009



From Matewith	Pos	Bundle	Sep	Description			To			Pos	Effectivity	
From					GA	TY	Equipment	Term	Type	Matewith		
Equip	Term	Type	Wire No.									
AE0302A	56	W5121	NB2	DISCONNECT BRACKET - E3-2 SHELF (continued)								
D45147P	PERG	1F	2022Z				D45123J	S/R		AE0104A	12	YK901-YM670
D45147P	B14		2023B	24	Y2		D45123J	49		AE0104A	12	YK901-YM670
D45147P	A14		2023R	24	Y2		D45123J	48		AE0104A	12	YK901-YM670
D45147P	PERG	1F	2023Z				D45123J	S/R		AE0104A	12	YK901-YM670
D45147P	B15		2024B	24	Y2		D45123J	51		AE0104A	12	YK901-YM670
D45147P	A15		2024R	24	Y2		D45123J	50		AE0104A	12	YK901-YM670
D45147P	PERG	1F	2024Z				D45123J	S/R		AE0104A	12	YK901-YM670
D45147P	B11		2044B	24	Y2		D45213J	B11		AE0502A	11	YC001-YC030
D45147P	A11		2044R	24	Y2		D45213J	A11		AE0502A	11	YC001-YC030
D45147P	PERG	1F	2044Z				D45213J	PERG	1F	AE0502A	11	YC001-YC030
D45147P	B17		2056B	24	Y2		D43323P	B17		AE0303A	42	YK901-YL430
D45147P	A17		2056R	24	Y2		D43323P	A17		AE0303A	42	YK901-YL430
D45147P	PERG	1F	2056Z				D43323P	PERG	1F	AE0303A	42	YK901-YL430
D45147P	B20		2065B	24	Y2		D43323P	B20		AE0303A	42	YK901-YL430
D45147P	A20		2065R	24	Y2		D43323P	A20		AE0303A	42	YK901-YL430
D45147P	PERG	1F	2065Z				D43323P	PERG	1F	AE0303A	42	YK901-YL430
D45147P	B05		2070B	24	Y2		D45121P	B03		AE0301A	32	YK901-YM670
D45147P	A05		2070R	24	Y2		D45121P	A03		AE0301A	32	YK901-YM670
D45147P	PERG	1F	2070Z				D45121P	PERG	1F	AE0301A	32	YK901-YM670
D45147P	B11		2084B	24	Y2		D45141P	B01		AE0301A	33	YK901-YM670
D45147P	A11		2084R	24	Y2		D45141P	A01		AE0301A	33	YK901-YM670
D45147P	PERG	1F	2084Z				D45141P	PERG	1F	AE0301A	33	YK901-YM670
D45147P	B16		2086B	24	Y2		D45141P	B02		AE0301A	33	YK901-YM670
D45147P	A16		2086R	24	Y2		D45141P	A02		AE0301A	33	YK901-YM670
D45147P	PERG	1F	2086Z				D45141P	PERG	1F	AE0301A	33	YK901-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section AE0302A

Page 9 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To		Matewith	Pos	Effectivity	
				GA	TY	Equip	Term				Type
AE0303A	05	W5723	RB2*	DISCONNECT BRACKET - E3-3 SHELF							
D43306P	B03		2511B	24	Y2	D41131P	35	AE0103A	22	YK901-YM670	
D43306P	A03		2511R	24	Y2	D41131P	34	AE0103A	22	YK901-YM670	
D43306P	PERG	1F	2511Z			D41131P	36	AE0103A	22	YK901-YM670	
D43306P	B04		2512B	24	Y2	D41213J	4	AE0102A	12	YK901-YM670	
D43306P	A04		2512R	24	Y2	D41213J	3	AE0102A	12	YK901-YM670	
D43306P	PERG	1F	2512Z			D41213J	S/R	AE0102A	12	YK901-YM670	
AE0303A	06	W5103	NA2	DISCONNECT BRACKET - E3-3 SHELF							
D43359P	A04		0001	22	PA	D40075P	A04	AE0801A	05	YK901-YK909	
D43359P	B04		0002	22	PA	D40075P	B04	AE0801A	05	YK901-YK906	
D43359P	A05		0003	22	PA	D40075P	A05	AE0801A	05	YK901-YK906	
D43359P	B05		0004	24	PK	D40075P	B05	AE0801A	05	YK901-YK906	
D43359P	B01		2501B	24	Y2	D40075P	B01	AE0801A	05	YK901-YK906	
D43359P	A01		2501R	24	Y2	D40075P	A01	AE0801A	05	YK901-YK906	
D43359P	PERG	1F	2501Z			D40075P	PERG	1F	AE0801A	05	YK901-YK906
D43359P	B03		2503B	24	Y2	D40075P	B03	AE0801A	05	YK901-YK906	
D43359P	A03		2503R	24	Y2	D40075P	A03	AE0801A	05	YK901-YK906	
D43359P	PERG	1F	2503Z			D40075P	PERG	1F	AE0801A	05	YK901-YK906
D43359P	B10		2510B	24	Y2	D40075P	A14	AE0801A	05	YK901-YL430	
D43359P	A10		2510R	24	Y2	D40075P	A13	AE0801A	05	YK901-YL430	
D43359P	PERG	1F	2510Z			D40075P	PERG	1F	AE0801A	05	YK901-YL430
D43359P	B06		2533B	24	Y2	D40075P	B08	AE0801A	05	YK901-YK909	
D43359P	A06		2533R	24	Y2	D40075P	A08	AE0801A	05	YK901-YK909	
D43359P	PERG	1F	2533Z			D40075P	PERG	1F	AE0801A	05	YK901-YK909
D43359P	B07		2534B	24	Y2	D40075P	B09	AE0801A	05	YK901-YL430	
D43359P	A07		2534R	24	Y2	D40075P	A09	AE0801A	05	YK901-YL430	
D43359P	PERG	1F	2534Z			D40075P	PERG	1F	AE0801A	05	YK901-YL430
AE0303A	10	W5105	NB2	DISCONNECT BRACKET - E3-3 SHELF							
D43361P	A02		0001	22	PA	D40077P	A02	AE0801A	06	YK907-YL430	
D43361P	A02		0001	22	PA	D40115P	A02	AE0602A	08	YM643-YM670	
D43361P	B04		2504B	24	Y2	D40115P	B06	AE0602A	08	YM643-YM670	
D43361P	A04		2504R	24	Y2	D40115P	A06	AE0602A	08	YM643-YM670	
D43361P	PERG	1F	2504Z			D40115P	PERG	1F	AE0602A	08	YM643-YM670
D43361P	B05		2505B	24	Y2	D40115P	B07	AE0602A	08	YM643-YM670	
D43361P	A05		2505R	24	Y2	D40115P	A07	AE0602A	08	YM643-YM670	
D43361P	PERG	1F	2505Z			D40115P	PERG	1F	AE0602A	08	YM643-YM670
D43361P	B08		2507B	24	Y2	D40115P	B08	AE0602A	08	YM643-YM670	

SPARE WIRE LIST

D280A103

91-21-12

Section AE0303A

Page 1

Aug 10/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY		To Equip	Term	Type	Matewith	Pos	Effectivity
AE0303A	10	W5105	NB2	DISCONNECT BRACKET - E3-3 SHELF (continued)							
D43361P	A08		2507R	24	Y2	D40115P	A08		AE0602A	08	YM643-YM670
D43361P	PERG	1F	2507Z			D40115P	PERG	1F	AE0602A	08	YM643-YM670
D43361P	B09		2508B	24	Y2	D40115P	B09		AE0602A	08	YM643-YM670
D43361P	A09		2508R	24	Y2	D40115P	A09		AE0602A	08	YM643-YM670
D43361P	PERG	1F	2508Z			D40115P	PERG	1F	AE0602A	08	YM643-YM670
D43361P	B06		2509B	24	Y2	D40115P	B10		AE0602A	08	YM643-YM670
D43361P	A06		2509R	24	Y2	D40115P	A10		AE0602A	08	YM643-YM670
D43361P	PERG	1F	2509Z			D40115P	PERG	1F	AE0602A	08	YM643-YM670
D43361P	B09		2510B	24	Y2	D40077P	B09		AE0801A	06	YK907-YL430
D43361P	A09		2510R	24	Y2	D40077P	A09		AE0801A	06	YK907-YL430
D43361P	PERG	1F	2510Z			D40077P	PERG	1F	AE0801A	06	YK907-YL430
D43361P	B06		2533B	24	Y2	D40077P	B07		AE0801A	06	YK907-YL430
D43361P	A06		2533R	24	Y2	D40077P	A07		AE0801A	06	YK907-YL430
D43361P	PERG	1F	2533Z			D40077P	PERG	1F	AE0801A	06	YK907-YL430
D43361P	B07		2534B	24	Y2	D40077P	B08		AE0801A	06	YK907-YL430
D43361P	A07		2534R	24	Y2	D40077P	A08		AE0801A	06	YK907-YL430
D43361P	PERG	1F	2534Z			D40077P	PERG	1F	AE0801A	06	YK907-YL430
D43361P	B10		2539B	24	Y2	D40077P	B14		AE0801A	06	YK907-YL430
D43361P	A10		2539R	24	Y2	D40077P	A14		AE0801A	06	YK907-YL430
D43361P	PERG	1F	2539Z			D40077P	PERG	1F	AE0801A	06	YK907-YL430
AE0303A	12	W0331	NA2	DISCONNECT BRACKET - E3-3 SHELF							
D43307J	B16		0139	20	PA	D43315J	A09		AE0303A	22	YC001-YC002, YC004-YC007
D43307J	A17		0140	20	PA	D43315J	A10		AE0303A	22	YC001-YC002, YC004-YC007
AE0303A	12	W5111	NA2	DISCONNECT BRACKET - E3-3 SHELF							
D43307P	B16		0030	20	CQ	D45157P	A05		AE0302A	18	YC001-YC002, YC004-YC007, YK901-YM670
D43307P	A17		0031	20	CQ	D45157P	B05		AE0302A	18	YC001-YC002, YC004-YC007, YK901-YM670
D43307P	B17		0032	22	PA	D45157P	A06		AE0302A	18	YC001-YC030, YK901-YM670
D43307P	A14		0038	22	PA	D45157P	A03		AE0302A	18	YC001-YC030
D43307P	B14		0039	22	PA	D45157P	B03		AE0302A	18	YC001-YC030

SPARE WIRE LIST

D280A103

91-21-12

Section AE0303A

Page 2

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To					Pos	Effectivity
				GA	TY	Equip	Term	Type	Matewith			
AE0303A	12	W5111	NA2	DISCONNECT BRACKET - E3-3 SHELF (continued)								
D43307P	B10		2058B	24	Y2	D45177P	B05		AE0302A	17	YC001-YC030	
D43307P	A10		2058R	24	Y2	D45177P	A05		AE0302A	17	YC001-YC030	
D43307P	PERG	1F	2058Z			D45177P	PERG	1F	AE0302A	17	YC001-YC030	
D43307P	B09		2059B	24	Y2	D45177P	B06		AE0302A	17	YC001-YC030	
D43307P	A09		2059R	24	Y2	D45177P	A06		AE0302A	17	YC001-YC030	
D43307P	PERG	1F	2059Z			D45177P	PERG	1F	AE0302A	17	YC001-YC030	
D43307P	B04		2062B	24	Y2	D45157P	B08		AE0302A	18	YK901-YM670	
D43307P	A04		2062R	24	Y2	D45157P	A08		AE0302A	18	YK901-YM670	
D43307P	PERG	1F	2062Z			D45157P	PERG	1F	AE0302A	18	YK901-YM670	
AE0303A	13	W5111	NA2	DISCONNECT BRACKET - E3-3 SHELF								
D43321P	B09		2063B	24	Y2	D45211J	B10		AE0502A	12	YC001-YC030	
D43321P	B20		2063B	24	Y2	D45211J	B10		AE0502A	12	YK901-YM670	
D43321P	A09		2063R	24	Y2	D45211J	A10		AE0502A	12	YC001-YC030	
D43321P	A20		2063R	24	Y2	D45211J	A10		AE0502A	12	YK901-YM670	
D43321P	PERG	1F	2063Z			D45211J	PERG	1F	AE0502A	12	YC001-YC030, YK901-YM670	
D43321P	B06		2067B	24	Y2	D45211J	B07		AE0502A	12	YK901-YM670	
D43321P	A06		2067R	24	Y2	D45211J	A07		AE0502A	12	YK901-YM670	
D43321P	PERG	1F	2067Z			D45211J	PERG	1F	AE0502A	12	YK901-YM670	
D43321P	B19		2071B	22	X2	D45211J	B19		AE0502A	12	YK901-YM670	
D43321P	A19		2071R	22	X2	D45211J	A19		AE0502A	12	YK901-YM670	
D43321P	PERG	1F	2071Z			D45211J	PERG	1F	AE0502A	12	YK901-YM670	
D43321P	B05		2080B	24	Y2	D45211J	B15		AE0502A	12	YK901-YM670	
D43321P	A05		2080R	24	Y2	D45211J	A15		AE0502A	12	YK901-YM670	
D43321P	PERG	1F	2080Z			D45211J	PERG	1F	AE0502A	12	YK901-YM670	
D43321P	B10		2082B	24	Y2	D45211J	B02		AE0502A	12	YK901-YM670	
D43321P	A10		2082R	24	Y2	D45211J	A02		AE0502A	12	YK901-YM670	
D43321P	PERG	1F	2082Z			D45211J	PERG	1F	AE0502A	12	YK901-YM670	
D43321P	B18		2092B	24	Y2	D45211J	B16		AE0502A	12	YK901-YM670	
D43321P	A18		2092R	24	Y2	D45211J	A16		AE0502A	12	YK901-YM670	
D43321P	PERG	1F	2092Z			D45211J	PERG	1F	AE0502A	12	YK901-YM670	
D43321P	B15		2099B	24	Y2	D45211J	B18		AE0502A	12	YK901-YM670	
D43321P	A15		2099R	24	Y2	D45211J	A18		AE0502A	12	YK901-YM670	
D43321P	PERG	1F	2099Z			D45211J	PERG	1F	AE0502A	12	YK901-YM670	
AE0303A	17	W5331	NA2	DISCONNECT BRACKET - E3-3 SHELF								
D43345P	B09		2503B	24	Y2	D04115P	B09		AE0401D	13	YK901-YM670	

SPARE WIRE LIST

D280A103

91-21-12

Section AE0303A

Page 3

Aug 10/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY		To Equip	Term	Type	Matewith	Pos	Effectivity
AE0303A	17	W5331	NA2	DISCONNECT BRACKET - E3-3 SHELF (continued)							
D43345P	A09		2503R	24	Y2	D04115P	A09		AE0401D	13	YK901-YM670
D43345P	PERG	1F	2503Z			D04115P	PERG	1F	AE0401D	13	YK901-YM670
D43345P	B10		2504B	24	Y2	D04115P	B10		AE0401D	13	YK901-YM670
D43345P	A10		2504R	24	Y2	D04115P	A10		AE0401D	13	YK901-YM670
D43345P	PERG	1F	2504Z			D04115P	PERG	1F	AE0401D	13	YK901-YM670
D43345P	B06		2505B	24	Y2	D04115P	B06		AE0401D	13	YK901-YM670
D43345P	A06		2505R	24	Y2	D04115P	A06		AE0401D	13	YK901-YM670
D43345P	PERG	1F	2505Z			D04115P	PERG	1F	AE0401D	13	YK901-YM670
D43345P	B05		2506B	24	Y2	D04115P	B05		AE0401D	13	YK901-YM670
D43345P	A05		2506R	24	Y2	D04115P	A05		AE0401D	13	YK901-YM670
D43345P	PERG	1F	2506Z			D04115P	PERG	1F	AE0401D	13	YK901-YM670
D43345P	B04		2507B	24	Y2	D04115P	B04		AE0401D	13	YK901-YM670
D43345P	A04		2507R	24	Y2	D04115P	A04		AE0401D	13	YK901-YM670
D43345P	PERG	1F	2507Z			D04115P	PERG	1F	AE0401D	13	YK901-YM670
D43345P	B11		2508B	24	Y2	D04115P	B11		AE0401D	13	YK901-YM670
D43345P	A11		2508R	24	Y2	D04115P	A11		AE0401D	13	YK901-YM670
D43345P	PERG	1F	2508Z			D04115P	PERG	1F	AE0401D	13	YK901-YM670
D43345P	B14		2511B	24	Y2	D04115P	B14		AE0401D	13	YK901-YM670
D43345P	A14		2511R	24	Y2	D04115P	A14		AE0401D	13	YK901-YM670
D43345P	PERG	1F	2511Z			D04115P	PERG	1F	AE0401D	13	YK901-YM670
D43345P	B16		2524B	24	Y2	D04115P	B16		AE0401D	13	YK901-YM670
D43345P	A16		2524R	24	Y2	D04115P	A16		AE0401D	13	YK901-YM670
D43345P	PERG	1F	2524Z			D04115P	PERG	1F	AE0401D	13	YK901-YM670
D43345P	B18		2529B	24	Y2	D04115P	B18		AE0401D	13	YL421-YM670
D43345P	A18		2529R	24	Y2	D04115P	A18		AE0401D	13	YL421-YM670
D43345P	PERG	1F	2529Z			D04115P	PERG	1F	AE0401D	13	YL421-YM670
D43345P	B19		2530B	24	Y2	D04115P	B19		AE0401D	13	YL421-YM670
D43345P	A19		2530R	24	Y2	D04115P	A19		AE0401D	13	YL421-YM670
D43345P	PERG	1F	2530Z			D04115P	PERG	1F	AE0401D	13	YL421-YM670
AE0303A	18	W5331	NA2	DISCONNECT BRACKET - E3-3 SHELF							
D43347P	A05		0022	24	PK	D04117P	A05		AE0401D	16	YK901-YM670
D43347P	B05		0023	24	PK	D04117P	B05		AE0401D	16	YK901-YM670
D43347P	A06		0024	24	PK	D04117P	A06		AE0401D	16	YK901-YM670
D43347P	B06		0025	24	PK	D04117P	B06		AE0401D	16	YK901-YM670
D43347P	A09		2518R	24	Y2	D04117P	A09		AE0401D	16	YK901-YK906
D43347P	PERG	1F	2518Z			D04117P	PERG	1F	AE0401D	16	YK901-YK906
D43347P	B20		2561B	24	M5	D04117P	B20		AE0401D	16	YK901-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section AE0303A

Page 4

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To					Pos	Effectivity
				GA	TY	Equip	Term	Type	Matewith			
AE0303A	18	W5331	NA2	DISCONNECT BRACKET - E3-3 SHELF (continued)								
D43347P	A20		2561R	24	M5	D04117P	A20		AE0401D		16	YK901-YM670
D43347P	A19		2561ZI			D04117P	A19		AE0401D		16	YK901-YM670
D43347P	PERG	1F	2561ZO			D04117P	PERG	1F	AE0401D		16	YK901-YM670
AE0303A	22	W0331	NA2	DISCONNECT BRACKET - E3-3 SHELF								
D43315J	A09		0139	20	PA	D43307J		B16	AE0303A		12	YC001-YC002, YC004-YC007
D43315J	A10		0140	20	PA	D43307J		A17	AE0303A		12	YC001-YC002, YC004-YC007
AE0303A	22	W5189	NA3	DISCONNECT BRACKET - E3-3 SHELF								
D43315P	CAP	Y	0016	22	PA	D48389P		A05	AE0801C		07	YC003
D43315P	B10		0017	22	PA	D48389P		B05	AE0801C		07	YC001-YC006
D43315P	B10		0017	22	PA	D48389P		B05	AE0801B		06	YC007-YC030
AE0303A	23	W2801	NA2	DISCONNECT BRACKET - E3-3 SHELF								
D43319P	B08		2503B	24	Y2	P008-00		CAP	Y			YK901-YM670
D43319P	A08		2503R	24	Y2	P008-00		CAP	Y			YK901-YM670
D43319P	PERG	1F	2503Z			P008-00						YK901-YM670
AE0303A	28	W2201	LA2	DISCONNECT BRACKET - E3-3 SHELF								
D43313P	9		0009	20	PA	D41805P		9	AP1800B		01	YC001-YC013
D43313P	12		0022	22	PA	D41805P		22	AP1800B		01	YC001-YC050
D43313P	4		0023	16	PA	D41805P		23	AP1800B		01	YC001-YL430, YM647-YM670
D43313P	4		0023	22	PA	D41805P		23	AP1800B		01	YM643-YM646
D43313P	2		0024	20	PA	D41805P		24	AP1800B		01	YC001-YL430, YM647-YM670
D43313P	2		0024	22	PA	D41805P		24	AP1800B		01	YM643-YM646
D43313P	5		0025	22	PA	D41805P		25	AP1800B		01	YK901-YM670
D43313P	6		0026	22	PA	D41805P		26	AP1800B		01	YK901-YK909, YM643-YM646
D43313P	6		0026	22	CQ	D41805P		26	AP1800B		01	YK910-YL430
D43313P	7		0027	16	PA	D41805P		27	AP1800B		01	YC001-YL430, YM647-YM670
D43313P	7		0027	22	PA	D41805P		27	AP1800B		01	YM643-YM646
D43313P	8		0028	20	PA	D41805P		28	AP1800B		01	YC001-YK909

SPARE WIRE LIST

D280A103

91-21-12

Section AE0303A

Page 5

Aug 10/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY		To Equip	Term	Type	Matewith	Pos	Effectivity
AE0303A	28	W2201	LA2	DISCONNECT BRACKET - E3-3 SHELF (continued)							
D43313P	8		0028	22	PA	D41805P	28	VP	AP1800B	01	YM643-YM646
AE0303A	29	W2231	RB2	DISCONNECT BRACKET - E3-3 SHELF							
D43309P	7		0019	16	CQ	D46067P	19		AP0600B	10	YK901-YM670
D43309P	1		0021	20	PA	D46067P	21		AP0600B	10	YC001-YC050, YM643-YM670
D43309P	2		0022	20	PA	D46067P	22		AP0600B	10	ALL
D43309P	10		0023	16	PA	D46067P	23		AP0600B	10	ALL
D43309P	5		0025	20	PA	D46067P	25		AP0600B	10	ALL
D43309P	6		0026	20	PA	D46067P	26		AP0600B	10	ALL
AE0303A	42	W5121	NB2	DISCONNECT BRACKET - E3-3 SHELF							
D43323P	B09		0023	24	PK	D45213J	B02		AE0502A	11	YK901-YL430
D43323P	B10		2051B	24	Y2	D45141P	B10		AE0301A	33	YK901-YL430
D43323P	A10		2051R	24	Y2	D45141P	A10		AE0301A	33	YK901-YL430
D43323P	PERG	1F	2051Z			D45141P	PERG	1F	AE0301A	33	YK901-YL430
D43323P	B17		2056B	24	Y2	D45147P	B17		AE0302A	56	YK901-YL430
D43323P	A17		2056R	24	Y2	D45147P	A17		AE0302A	56	YK901-YL430
D43323P	PERG	1F	2056Z			D45147P	PERG	1F	AE0302A	56	YK901-YL430
D43323P	B12		2057B	24	Y2	D45213J	B12		AE0502A	11	YK901-YL430
D43323P	A12		2057R	24	Y2	D45213J	A12		AE0502A	11	YK901-YL430
D43323P	PERG	1F	2057Z			D45213J	PERG	1F	AE0502A	11	YK901-YL430
D43323P	B13		2058B	24	Y2	D45213J	B13		AE0502A	11	YK901-YL430
D43323P	A13		2058R	24	Y2	D45213J	A13		AE0502A	11	YK901-YL430
D43323P	PERG	1F	2058Z			D45213J	PERG	1F	AE0502A	11	YK901-YL430
D43323P	B11		2063B	24	Y2	D45141P	B20		AE0301A	33	YK901-YL430
D43323P	A11		2063R	24	Y2	D45141P	A20		AE0301A	33	YK901-YL430
D43323P	PERG	1F	2063Z			D45141P	PERG	1F	AE0301A	33	YK901-YL430
D43323P	B16		2064B	24	Y2	D45213J	B16		AE0502A	11	YK901-YL430
D43323P	A16		2064R	24	Y2	D45213J	A16		AE0502A	11	YK901-YL430
D43323P	PERG	1F	2064Z			D45213J	PERG	1F	AE0502A	11	YK901-YL430
D43323P	B20		2065B	24	Y2	D45147P	B20		AE0302A	56	YK901-YL430
D43323P	A20		2065R	24	Y2	D45147P	A20		AE0302A	56	YK901-YL430
D43323P	PERG	1F	2065Z			D45147P	PERG	1F	AE0302A	56	YK901-YL430
D43323P	B19		2085B	24	Y2	D45213J	B19		AE0502A	11	YK901-YL430
D43323P	A19		2085R	24	Y2	D45213J	A19		AE0502A	11	YK901-YL430
D43323P	PERG	1F	2085Z			D45213J	PERG	1F	AE0502A	11	YK901-YL430

SPARE WIRE LIST

D280A103

91-21-12

Section AE0303A

Page 6

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To					Pos	Effectivity
				GA	TY	Equip	Term	Type	Matewith			
AE0303A	43	W5335	NB2	DISCONNECT BRACKET - E3-3 SHELF								
D43379P	A01		0001	22	PA	D04007P	A01		AE0401D		14	YK901-YM670
D43379P	A02		0003	22	PA	D04007P	A02		AE0401D		14	YK901-YM670
D43379P	B02		0004	22	PA	D04007P	B02		AE0401D		14	YK901-YM670
D43379P	B10		2503B	24	Y2	D04007P	B10		AE0401D		14	YK901-YM670
D43379P	A10		2503R	24	Y2	D04007P	A10		AE0401D		14	YK901-YM670
D43379P	PERG	1F	2503Z			D04007P	PERG	1F	AE0401D		14	YK901-YM670
D43379P	B07		2510B	24	Y2	D04007P	B07		AE0401D		14	YK901-YM670
D43379P	A07		2510R	24	Y2	D04007P	A07		AE0401D		14	YK901-YM670
D43379P	PERG	1F	2510Z			D04007P	PERG	1F	AE0401D		14	YK901-YM670
D43379P	B06		2566B	24	M5	D04007P	B06		AE0401D		14	YK901-YM670
D43379P	A06		2566R	24	M5	D04007P	A06		AE0401D		14	YK901-YM670
D43379P	A05		2566ZI			D04007P	A05		AE0401D		14	YK901-YM670
D43379P	PERG	1F	2566ZO			D04007P	PERG	1F	AE0401D		14	YK901-YM670
AE0303A	44	W5723	RB2*	DISCONNECT BRACKET - E3-3 SHELF								
D43333P	B10		2503B	24	Y2	D41507J	44		AE0105A		03	YK901-YM670
D43333P	A10		2503R	24	Y2	D41507J	43		AE0105A		03	YK901-YM670
D43333P	PERG	1F	2503Z			D41507J	S/R		AE0105A		03	YK901-YM670
D43333P	B07		2506B	24	Y2	D41507J	48		AE0105A		03	YK901-YM670
D43333P	A07		2506R	24	Y2	D41507J	47		AE0105A		03	YK901-YM670
D43333P	PERG	1F	2506Z			D41507J	S/R		AE0105A		03	YK901-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section AE0303A

Page 7 End

Aug 10/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To		Matewith	Pos	Effectivity
				GA	TY	Equip	Term			
AE0401A	13	W6412	RB2*	DISCONNECT BRACKET - E4-1 SHELF						
D41830P	A06		0029	20	PA	D41832P	7	AP0600B	07	YC028-YL430
AE0401A	21	W5189	NA3	DISCONNECT BRACKET - E4-1 SHELF						
D08123P	A10		0021	24	PK	D08189P	B07	AE0801A	01	YC008-YC011
AE0401A	24	W5461	LA2	DISCONNECT BRACKET - E4-1 SHELF						
D44161P	B15		0048	24	PK	D42361P	B15	AE0302A	43	YC008-YC030, YK901-YK906
D44161P	B04		0057	24	PK	D42361P	B06	AE0302A	43	YK901-YM670
D44161P	A06		0058	24	PK	D42361P	A06	AE0302A	43	YK901-YM670
D44161P	B11		2018B	24	Y2	D41561J	B11	AE0502A	17	YK901-YM670
D44161P	A11		2018R	24	Y2	D41561J	A11	AE0502A	17	YK901-YM670
D44161P	PERG	1F	2018Z			D41561J	PERG	1F	17	YK901-YM670
D44161P	B13		2029B	24	Y2	D45261J	B15	AE0502A	18	YK901-YM670
D44161P	B12		2029R	24	Y2	D45261J	B14	AE0502A	18	YK901-YM670
D44161P	PERG	1F	2029Z			D45261J	PERG	1F	18	YK901-YM670
D44161P	B17		2030B	24	Y2	D45261J	B17	AE0502A	18	YK901-YM670
D44161P	B16		2030R	24	Y2	D45261J	B16	AE0502A	18	YK901-YM670
D44161P	PERG	1F	2030Z			D45261J	PERG	1F	18	YK901-YM670
D44161P	B07		2031B	24	Y2	D46461P	B07	AE0101A	22	YK901-YM670
D44161P	B06		2031R	24	Y2	D46461P	B06	AE0101A	22	YK901-YM670
D44161P	PERG	1F	2031Z			D46461P	PERG	1F	22	YK901-YM670
D44161P	A05		2104B	24	Y2	D42361P	B05	AE0302A	43	YC001-YC011
D44161P	A04		2104R	24	Y2	D42361P	A12	AE0302A	43	YC001-YC011
D44161P	PERG	1F	2104Z			D42361P	PERG	1F	43	YC001-YC011
AE0401A	25	W5337	SN2	DISCONNECT BRACKET - E4-1 SHELF						
D04161P	A07		0001	22	PA	D04499P	1	D04499J		YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652
AE0401A	29	W5104	LA2	DISCONNECT BRACKET - E4-1 SHELF						
D40244P	B05		5520	20	PA	D40056P	18	AB0536L	02	ALL
D40244P	B06		5521	20	PA	D40056P	19	AB0536L	02	ALL

SPARE WIRE LIST

D280A103

91-21-12

Section AE0401A

Page 1

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To		Term	Type	Matewith	Pos	Effectivity
				GA	TY	Equip						
AE0401A	31	W6214	LA2*	DISCONNECT BRACKET - E4-1 SHELF								
D40328P	A03		5501	22	PA	D40444P		1		AP0600A	04	YC001-YC030
D40328P	B02		5544	20	PA	D40444P		4		AP0600A	04	YC001-YC030, YK901-YM670
D40328P	B03		5545	20	PA	D40444P		5		AP0600A	04	YC001-YC030, YK901-YM670
AE0401A	32	W2401	LN2	DISCONNECT BRACKET - E4-1 SHELF								
D04721P	B10		0020	24	PK	D00551		T		P008-66		YC001-YK906
AE0401A	33	W6412	RB2*	DISCONNECT BRACKET - E4-1 SHELF								
D41010P	18		0008	20	PA	D40386P		27		AP0600B	14	YC028-YM670
D41010P	19		0009	20	PA	D40386P		31		AP0600B	14	YC028-YM670
D41010P	20		0010	20	PA	D40386P		32		AP0600B	14	YC028-YM670
D41010P	2		0508	20	PA	D40394P		A09		AE0301A	34	ALL
AE0401A	38	W6168	SB2*	DISCONNECT BRACKET - E4-1 SHELF								
D40144P	A01		2601B	20	VG	D39930		2		AD0520		ALL
D40144P	B01		2601R	20	VG	D39930		3		AD0520		ALL
D40144P	PERG	1F	2601Z			D39930		S/R		AD0520		ALL
D40144P	A02		2602B	20	VG	D39930		4		AD0520		ALL
D40144P	B02		2602R	20	VG	D39930		5		AD0520		ALL
D40144P	PERG	1F	2602Z			D39930		S/R		AD0520		ALL
AE0401A	42	W6564	SN2*	DISCONNECT BRACKET - E4-1 SHELF								
D40158P	A02		2601B	20	VG	D39910		6		AD0520		ALL
D40158P	B02		2601R	20	VG	D39910		5		AD0520		ALL
D40158P	PERG	1F	2601Z			D39910		S/R		AD0520		ALL
AE0401A	46	W6214	LA2*	DISCONNECT BRACKET - E4-1 SHELF								
D40378P	B15		5536	20	PA	D40380P		B15		AE0202A	26	YC001-YC030, YK901-YM670
D40378P	B16		5540	20	PA	D40444P		9		AP0600A	04	YC001-YC030, YK901-YM670
D40378P	B14		5541	20	PA	D40444P		10		AP0600A	04	YC001-YC030, YK901-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section AE0401A

Page 2

Aug 10/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY		To Equip	Term	Type	Matewith	Pos	Effectivity
AE0401A	50	W6162	RB2*	DISCONNECT BRACKET - E4-1 SHELF							
D40156P	A14		2611B	20	PB	D39922	14		AD0520		YC001-YC003, YC008-YM670
D40156P	A14		2611B	20	GB	D39922	14		AD0520		YC004-YC007
D40156P	B14		2611R	20	PB	D39922	5		AD0520		YC001-YC003, YC008-YM670
D40156P	B14		2611R	20	GB	D39922	5		AD0520		YC004-YC007
D40156P	A15		2612B	20	PB	D39922	31		AD0520		YC001-YC003, YC008-YM670
D40156P	A15		2612B	20	GB	D39922	31		AD0520		YC004-YC007
D40156P	B15		2612R	20	PB	D39922	30		AD0520		YC001-YC003, YC008-YM670
D40156P	B15		2612R	20	GB	D39922	30		AD0520		YC004-YC007
AE0401A	51	W2218	RB2	DISCONNECT BRACKET - E4-1 SHELF							
D40542P	B20		8006	20	PA	D40538P	4		AP1800A	05	YC001-YC030, YK901-YL430
AE0401A	52	W6412	RB2*	DISCONNECT BRACKET - E4-1 SHELF							
D40390P	A06		2001B	24	Y2	D40392P	B18		AE0302A	45	YC031-YM670
D40390P	A05		2001R	24	Y2	D40392P	B17		AE0302A	45	YC031-YM670
D40390P	PERG	1F	2001Z			D40392P	PERG	1F	AE0302A	45	YC031-YM670
D40390P	B03		5504	24	PK	D40392P	B03		AE0302A	45	ALL
D40390P	A19		5508	22	PA	D40386P	9		AP0600B	14	YC001-YL430
D40390P	A17		5529	20	PA	D40392P	A14		AE0302A	45	ALL
D40390P	A18		5530	20	PA	D40392P	B14		AE0302A	45	YC001-YC030
D40390P	B10		5548	24	PK	D40392P	A16		AE0302A	45	YC028-YK906
D40390P	B14		6012	22	CQ	D40388P	B07		AE0402A	24	YC001-YC030

SPARE WIRE LIST

D280A103

91-21-12

Section AE0401A

Page 3 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To					Effectivity	
				GA	TY	Equip	Term	Type	Matewith	Pos		
AE0401D	13	W5331	NA2	DISCONNECT BRACKET - E4-1 SHELF								
D04115P	B09		2503B	24	Y2	D43345P	B09	AE0303A	17	YK901-YM670		
D04115P	A09		2503R	24	Y2	D43345P	A09	AE0303A	17	YK901-YM670		
D04115P	PERG	1F	2503Z			D43345P	PERG	1F	AE0303A	17	YK901-YM670	
D04115P	B10		2504B	24	Y2	D43345P	B10	AE0303A	17	YK901-YM670		
D04115P	A10		2504R	24	Y2	D43345P	A10	AE0303A	17	YK901-YM670		
D04115P	PERG	1F	2504Z			D43345P	PERG	1F	AE0303A	17	YK901-YM670	
D04115P	B06		2505B	24	Y2	D43345P	B06	AE0303A	17	YK901-YM670		
D04115P	A06		2505R	24	Y2	D43345P	A06	AE0303A	17	YK901-YM670		
D04115P	PERG	1F	2505Z			D43345P	PERG	1F	AE0303A	17	YK901-YM670	
D04115P	B05		2506B	24	Y2	D43345P	B05	AE0303A	17	YK901-YM670		
D04115P	A05		2506R	24	Y2	D43345P	A05	AE0303A	17	YK901-YM670		
D04115P	PERG	1F	2506Z			D43345P	PERG	1F	AE0303A	17	YK901-YM670	
D04115P	B04		2507B	24	Y2	D43345P	B04	AE0303A	17	YK901-YM670		
D04115P	A04		2507R	24	Y2	D43345P	A04	AE0303A	17	YK901-YM670		
D04115P	PERG	1F	2507Z			D43345P	PERG	1F	AE0303A	17	YK901-YM670	
D04115P	B11		2508B	24	Y2	D43345P	B11	AE0303A	17	YK901-YM670		
D04115P	A11		2508R	24	Y2	D43345P	A11	AE0303A	17	YK901-YM670		
D04115P	PERG	1F	2508Z			D43345P	PERG	1F	AE0303A	17	YK901-YM670	
D04115P	B14		2511B	24	Y2	D43345P	B14	AE0303A	17	YK901-YM670		
D04115P	A14		2511R	24	Y2	D43345P	A14	AE0303A	17	YK901-YM670		
D04115P	PERG	1F	2511Z			D43345P	PERG	1F	AE0303A	17	YK901-YM670	
D04115P	B16		2524B	24	Y2	D43345P	B16	AE0303A	17	YK901-YM670		
D04115P	A16		2524R	24	Y2	D43345P	A16	AE0303A	17	YK901-YM670		
D04115P	PERG	1F	2524Z			D43345P	PERG	1F	AE0303A	17	YK901-YM670	
D04115P	B18		2529B	24	Y2	D43345P	B18	AE0303A	17	YL421-YM670		
D04115P	A18		2529R	24	Y2	D43345P	A18	AE0303A	17	YL421-YM670		
D04115P	PERG	1F	2529Z			D43345P	PERG	1F	AE0303A	17	YL421-YM670	
D04115P	B19		2530B	24	Y2	D43345P	B19	AE0303A	17	YL421-YM670		
D04115P	A19		2530R	24	Y2	D43345P	A19	AE0303A	17	YL421-YM670		
D04115P	PERG	1F	2530Z			D43345P	PERG	1F	AE0303A	17	YL421-YM670	
AE0401D	14	W5335	NB2	DISCONNECT BRACKET - E4-1 SHELF								
D04007P	A01		0001	22	PA	D43379P	A01	AE0303A	43	YK901-YM670		
D04007P	A02		0003	22	PA	D43379P	A02	AE0303A	43	YK901-YM670		
D04007P	B02		0004	22	PA	D43379P	B02	AE0303A	43	YK901-YM670		
D04007P	B10		2503B	24	Y2	D43379P	B10	AE0303A	43	YK901-YM670		
D04007P	A10		2503R	24	Y2	D43379P	A10	AE0303A	43	YK901-YM670		
D04007P	PERG	1F	2503Z			D43379P	PERG	1F	AE0303A	43	YK901-YM670	

SPARE WIRE LIST

D280A103

91-21-12

Section AE0401D

Page 1

Aug 10/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY		To Equip		Term	Type	Matewith	Pos	Effectivity
AE0401D	14	W5335	NB2	DISCONNECT BRACKET - E4-1 SHELF (continued)								
D04007P	B07		2510B	24	Y2	D43379P	B07			AE0303A	43	YK901-YM670
D04007P	A07		2510R	24	Y2	D43379P	A07			AE0303A	43	YK901-YM670
D04007P	PERG	1F	2510Z			D43379P	PERG	1F		AE0303A	43	YK901-YM670
D04007P	B06		2566B	24	M5	D43379P	B06			AE0303A	43	YK901-YM670
D04007P	A06		2566R	24	M5	D43379P	A06			AE0303A	43	YK901-YM670
D04007P	A05		2566ZI			D43379P	A05			AE0303A	43	YK901-YM670
D04007P	PERG	1F	2566ZO			D43379P	PERG	1F		AE0303A	43	YK901-YM670
AE0401D	16	W5331	NA2	DISCONNECT BRACKET - E4-1 SHELF								
D04117P	A05		0022	24	PK	D43347P	A05			AE0303A	18	YK901-YM670
D04117P	B05		0023	24	PK	D43347P	B05			AE0303A	18	YK901-YM670
D04117P	A06		0024	24	PK	D43347P	A06			AE0303A	18	YK901-YM670
D04117P	B06		0025	24	PK	D43347P	B06			AE0303A	18	YK901-YM670
D04117P	A09		2518R	24	Y2	D43347P	A09			AE0303A	18	YK901-YK906
D04117P	PERG	1F	2518Z			D43347P	PERG	1F		AE0303A	18	YK901-YK906
D04117P	B20		2561B	24	M5	D43347P	B20			AE0303A	18	YK901-YM670
D04117P	A20		2561R	24	M5	D43347P	A20			AE0303A	18	YK901-YM670
D04117P	A19		2561ZI			D43347P	A19			AE0303A	18	YK901-YM670
D04117P	PERG	1F	2561ZO			D43347P	PERG	1F		AE0303A	18	YK901-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section AE0401D

Page 2 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To		Term	Type	Matewith	Pos	Effectivity
				GA	TY	Equip						
AE0402A	01	W5719	LA2	DISCONNECT BRACKET - E4-2 SHELF								
D42111P	B02		0030	22	PA	D41125P		B07		AE0101A	25	ALL
AE0402A	02	W5248	LN2*	DISCONNECT BRACKET - E4-2 SHELF								
D40584P	A01		0499	20	PA	D40500J		1		AB0500DL	05	ALL
D40584P	B01		0500	20	PA	D40500J		3		AB0500DL	05	ALL
AE0402A	07	W5110	LA2	DISCONNECT BRACKET - E4-2 SHELF								
D40338P	A10		0516	20	PA	D40340P				AE0201A	19	YC001-YC030, YK901-YM670
AE0402A	24	W6412	RB2*	DISCONNECT BRACKET - E4-2 SHELF								
D40388P	A16		5533	20	PA	D40386P		24		AP0600B	14	YC001-YL430
D40388P	B07		6012	22	CQ	D40390P		B14		AE0401A	52	YC001-YC030
AE0402A	27	W6164	RB1*	DISCONNECT BRACKET - E4-2 SHELF								
D40720P	A09		2602B	20	PB	D39934		26		AD0520		ALL
D40720P	B09		2602R	20	PB	D39934		25		AD0520		ALL
AE0402A	33	W5160	RB2*	DISCONNECT BRACKET - E4-2 SHELF								
D40472P	B06		2460B	22	PB	D10988		60		M02061		YC004-YC030, YK901-YM670
D40472P	B05		2460R	22	PB	D10988		61		M02061		YC004-YC030, YK901-YM670
AE0402A	37	W5160	RB2*	DISCONNECT BRACKET - E4-2 SHELF								
D40474P	B02		0530	22	PA	D40694P		16		AJ0024	07	YC004-YC030, YK901-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section AE0402A

Page 1 End

Aug 10/2009



From Matewith From	Pos	Bundle	Sep	Description		To						
Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity	
AE0502A	03	W5205	SA2	DISCONNECT BRACKET - E5-2 SHELF								
D45209J	A05		0025	20	PA	D45205P	A05		AE0301A	18	YC001-YC030, YK901-YM670	
D45209J	B03		2001B	22	X2	D45205P	B03		AE0301A	18	YC001-YC030, YK901-YM670	
D45209J	B02		2001R	22	X2	D45205P	B02		AE0301A	18	YC001-YC030, YK901-YM670	
D45209J	PERG	1F	2001Z			D45205P	PERG	1F	AE0301A	18	YC001-YC030, YK901-YM670	
D45209J	A07		2031B	24	Y2	D45201J	13		AE0102A	10	YC001-YC030, YK901-YM670	
D45209J	A06		2031R	24	Y2	D45201J	12		AE0102A	10	YC001-YC030, YK901-YM670	
D45209J	PERG	1F	2031Z			D45201J	S/R		AE0102A	10	YC001-YC030, YK901-YM670	
AE0502A	04	W5163	RB2*	DISCONNECT BRACKET - E5-2 SHELF								
D45247J	A08		0013	22	PA	D43157P	A20		AE0301A	29	ALL	
D45247J	A16		0021	20	PA	D43147P	A01		AE0301A	28	ALL	
D45247J	REF	VP	0022	20	PA	D43147P	A02		AE0301A	28	YC001-YC030	
D45247J	REF	VP	0023	20	PA	D43147P	A12		AE0301A	28	YC001-YC030	
AE0502A	05	W5163	RB2*	DISCONNECT BRACKET - E5-2 SHELF								
D45257J	A15		0004	22	PA	D41157P	A18		AE0101B	12	ALL	
D45257J	A07		0039	22	PA	D41157P	B20		AE0101B	12	ALL	
D45257J	A02		2501B	24	Y2	D41157P	A02		AE0101B	12	ALL	
D45257J	A01		2501R	24	Y2	D41157P	A01		AE0101B	12	ALL	
D45257J	PERG	1F	2501Z			D41157P	PERG	1F	AE0101B	12	ALL	
D45257J	A10		2508B	24	Y2	D43157P	A09		AE0301A	29	ALL	
D45257J	A09		2508R	24	Y2	D43157P	A08		AE0301A	29	ALL	
D45257J	PERG	1F	2508Z			D43157P	PERG	1F	AE0301A	29	ALL	
D45257J	A12		2509B	24	Y2	D43157P	A11		AE0301A	29	ALL	
D45257J	A11		2509R	24	Y2	D43157P	A10		AE0301A	29	ALL	
D45257J	PERG	1F	2509Z			D43157P	PERG	1F	AE0301A	29	ALL	
AE0502A	06	W5463	RB2	DISCONNECT BRACKET - E5-2 SHELF								
D45263J	A05		0022	22	PA	D41463J	14		AE0104A	11	ALL	
D45263J	B07		2013B	22	X2	D43263P	B07		AE0302A	44	YC001-YC030	
D45263J	B07		2013B	24	Y2	D43263P	B07		AE0302A	44	YC031-YM670	

SPARE WIRE LIST

D280A103

91-21-12

Section AE0502A

Page 1

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description		To					Pos	Effectivity		
Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith					
AE0502A	06	W5463	RB2	DISCONNECT BRACKET - E5-2 SHELF (continued)										
D45263J	A07		2013R	22	X2	D43263P	A07		AE0302A		44	YC001-YC030		
D45263J	A07		2013R	24	Y2	D43263P	A07		AE0302A		44	YC031-YM670		
D45263J	PERG	1F	2013Z			D43263P	PERG	1F	AE0302A		44	ALL		
D45263J	B08		2014B	24	Y2	D43263P	B08		AE0302A		44	YC031-YM670		
D45263J	A08		2014R	24	Y2	D43263P	A08		AE0302A		44	YC031-YM670		
D45263J	PERG	1F	2014Z			D43263P	PERG	1F	AE0302A		44	YC031-YM670		
D45263J	B14		2019B	24	Y2	D43263P	B14		AE0302A		44	ALL		
D45263J	A14		2019R	24	Y2	D43263P	A14		AE0302A		44	ALL		
D45263J	PERG	1F	2019Z			D43263P	PERG	1F	AE0302A		44	ALL		
D45263J	A20		2022B	24	Y2	D42363P	A10		AE0302A		53	ALL		
D45263J	A19		2022R	24	Y2	D42363P	A09		AE0302A		53	ALL		
D45263J	PERG	1F	2022Z			D42363P	PERG	1F	AE0302A		53	ALL		
AE0502A	07	W2135	RB2	DISCONNECT BRACKET - E5-2 SHELF										
D45237J	B20		0034	22	PA	D01817	CAP	Y	P005-28			YC001-YC030, YK901-YM670		
AE0502A	11	W5121	NB2	DISCONNECT BRACKET - E5-2 SHELF										
D45213J	B02		0023	24	PK	D43323P	B09		AE0303A		42	YK901-YL430		
D45213J	B11		2044B	24	Y2	D45147P	B11		AE0302A		56	YC001-YC030		
D45213J	A11		2044R	24	Y2	D45147P	A11		AE0302A		56	YC001-YC030		
D45213J	PERG	1F	2044Z			D45147P	PERG	1F	AE0302A		56	YC001-YC030		
D45213J	B12		2057B	24	Y2	D43323P	B12		AE0303A		42	YK901-YL430		
D45213J	A12		2057R	24	Y2	D43323P	A12		AE0303A		42	YK901-YL430		
D45213J	PERG	1F	2057Z			D43323P	PERG	1F	AE0303A		42	YK901-YL430		
D45213J	B13		2058B	24	Y2	D43323P	B13		AE0303A		42	YK901-YL430		
D45213J	A13		2058R	24	Y2	D43323P	A13		AE0303A		42	YK901-YL430		
D45213J	PERG	1F	2058Z			D43323P	PERG	1F	AE0303A		42	YK901-YL430		
D45213J	B16		2064B	24	Y2	D43323P	B16		AE0303A		42	YK901-YL430		
D45213J	A16		2064R	24	Y2	D43323P	A16		AE0303A		42	YK901-YL430		
D45213J	PERG	1F	2064Z			D43323P	PERG	1F	AE0303A		42	YK901-YL430		
D45213J	B19		2085B	24	Y2	D43323P	B19		AE0303A		42	YK901-YL430		
D45213J	A19		2085R	24	Y2	D43323P	A19		AE0303A		42	YK901-YL430		
D45213J	PERG	1F	2085Z			D43323P	PERG	1F	AE0303A		42	YK901-YL430		
AE0502A	12	W5111	NA2	DISCONNECT BRACKET - E5-2 SHELF										
D45211J	B10		2063B	24	Y2	D43321P	B09		AE0303A		13	YC001-YC030		
D45211J	B10		2063B	24	Y2	D43321P	B20		AE0303A		13	YK901-YM670		

SPARE WIRE LIST

D280A103

91-21-12

Section AE0502A

Page 2

Aug 10/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY		To Equip Term Type Matewith		Pos	Effectivity		
AE0502A	12	W5111	NA2	DISCONNECT BRACKET - E5-2 SHELF (continued)							
D45211J	A10		2063R	24	Y2	D43321P	A09	AE0303A	13	YC001-YC030	
D45211J	A10		2063R	24	Y2	D43321P	A20	AE0303A	13	YK901-YM670	
D45211J	PERG	1F	2063Z			D43321P	PERG	1F	AE0303A	13	YC001-YC030, YK901-YM670
D45211J	B07		2067B	24	Y2	D43321P	B06	AE0303A	13	YK901-YM670	
D45211J	A07		2067R	24	Y2	D43321P	A06	AE0303A	13	YK901-YM670	
D45211J	PERG	1F	2067Z			D43321P	PERG	1F	AE0303A	13	YK901-YM670
D45211J	B19		2071B	22	X2	D43321P	B19	AE0303A	13	YK901-YM670	
D45211J	A19		2071R	22	X2	D43321P	A19	AE0303A	13	YK901-YM670	
D45211J	PERG	1F	2071Z			D43321P	PERG	1F	AE0303A	13	YK901-YM670
D45211J	B13		2072B	24	Y2	D45177P	B09	AE0302A	17	YC001-YC030	
D45211J	A13		2072R	24	Y2	D45177P	A09	AE0302A	17	YC001-YC030	
D45211J	PERG	1F	2072Z			D45177P	PERG	1F	AE0302A	17	YC001-YC030
D45211J	B15		2080B	24	Y2	D43321P	B05	AE0303A	13	YK901-YM670	
D45211J	A15		2080R	24	Y2	D43321P	A05	AE0303A	13	YK901-YM670	
D45211J	PERG	1F	2080Z			D43321P	PERG	1F	AE0303A	13	YK901-YM670
D45211J	B02		2082B	24	Y2	D43321P	B10	AE0303A	13	YK901-YM670	
D45211J	A02		2082R	24	Y2	D43321P	A10	AE0303A	13	YK901-YM670	
D45211J	PERG	1F	2082Z			D43321P	PERG	1F	AE0303A	13	YK901-YM670
D45211J	B16		2092B	24	Y2	D43321P	B18	AE0303A	13	YK901-YM670	
D45211J	A16		2092R	24	Y2	D43321P	A18	AE0303A	13	YK901-YM670	
D45211J	PERG	1F	2092Z			D43321P	PERG	1F	AE0303A	13	YK901-YM670
D45211J	B18		2099B	24	Y2	D43321P	B15	AE0303A	13	YK901-YM670	
D45211J	A18		2099R	24	Y2	D43321P	A15	AE0303A	13	YK901-YM670	
D45211J	PERG	1F	2099Z			D43321P	PERG	1F	AE0303A	13	YK901-YM670
AE0502A	14	W5161	LA2	DISCONNECT BRACKET - E5-2 SHELF							
D45245J	B15		0004	20	PA	D43145P	A05	AE0301A	15	ALL	
D45245J	B13		0027	20	PA	D43145P	A03	AE0301A	15	ALL	
D45245J	B14		0028	20	PA	D43145P	A04	AE0301A	15	ALL	
AE0502A	15	W5161	LA2	DISCONNECT BRACKET - E5-2 SHELF							
D45255J	A06		2503B	24	Y2	D41155P	A06	AE0101A	20	YC031-YM670	
D45255J	A05		2503R	24	Y2	D41155P	A05	AE0101A	20	YC031-YM670	
D45255J	PERG	1F	2503Z			D41155P	PERG	1F	AE0101A	20	YC031-YM670
D45255J	B20		2518B	24	Y2	D43155P	B02	AE0301A	16	ALL	
D45255J	B19		2518R	24	Y2	D43155P	B01	AE0301A	16	ALL	
D45255J	PERG	1F	2518Z			D43155P	PERG	1F	AE0301A	16	ALL

SPARE WIRE LIST

D280A103

91-21-12

Section AE0502A

Page 3

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To					Pos	Effectivity
				GA	TY	Equip	Term	Type	Matewith			
AE0502A	16	W5161	LA2	DISCONNECT BRACKET - E5-2 SHELF								
D45265J	B02		2523B	24	Y2	D43155P	B10		AE0301A		16	ALL
D45265J	B01		2523R	24	Y2	D43155P	B09		AE0301A		16	ALL
D45265J	PERG	1F	2523Z			D43155P	PERG	1F	AE0301A		16	ALL
AE0502A	17	W5461	LA2	DISCONNECT BRACKET - E5-2 SHELF								
D41561J	B01		2003B	24	Y2	D42261P	B01		AE0302A		41	YC001-YC030, YK901-YM670
D41561J	A01		2003R	24	Y2	D42261P	A01		AE0302A		41	YC001-YC030, YK901-YM670
D41561J	PERG	1F	2003Z			D42261P	PERG	1F	AE0302A		41	YC001-YC030, YK901-YM670
D41561J	B15		2011B	24	Y2	D42261P	B15		AE0302A		41	YC001-YC030, YK901-YM670
D41561J	A15		2011R	24	Y2	D42261P	A15		AE0302A		41	YC001-YC030, YK901-YM670
D41561J	PERG	1F	2011Z			D42261P	PERG	1F	AE0302A		41	YC001-YC030, YK901-YM670
D41561J	B11		2018B	24	Y2	D44161P	B11		AE0401A		24	YK901-YM670
D41561J	A11		2018R	24	Y2	D44161P	A11		AE0401A		24	YK901-YM670
D41561J	PERG	1F	2018Z			D44161P	PERG	1F	AE0401A		24	YK901-YM670
AE0502A	18	W5461	LA2	DISCONNECT BRACKET - E5-2 SHELF								
D45261J	B20		2025B	24	Y2	D46461P	B20		AE0101A		22	YC001-YC030
D45261J	B19		2025R	24	Y2	D46461P	B19		AE0101A		22	YC001-YC030
D45261J	PERG	1F	2025Z			D46461P	PERG	1F	AE0101A		22	YC001-YC030
D45261J	A16		2026B	24	Y2	D46461P	B13		AE0101A		22	YC001-YC030
D45261J	A15		2026R	24	Y2	D46461P	B12		AE0101A		22	YC001-YC030
D45261J	PERG	1F	2026Z			D46461P	PERG	1F	AE0101A		22	YC001-YC030
D45261J	A18		2027B	24	Y2	D46461P	B15		AE0101A		22	YC001-YC030
D45261J	A17		2027R	24	Y2	D46461P	B14		AE0101A		22	YC001-YC030
D45261J	PERG	1F	2027Z			D46461P	PERG	1F	AE0101A		22	YC001-YC030
D45261J	B15		2029B	24	Y2	D44161P	B13		AE0401A		24	YK901-YM670
D45261J	B14		2029R	24	Y2	D44161P	B12		AE0401A		24	YK901-YM670
D45261J	PERG	1F	2029Z			D44161P	PERG	1F	AE0401A		24	YK901-YM670
D45261J	B17		2030B	24	Y2	D44161P	B17		AE0401A		24	YK901-YM670
D45261J	B16		2030R	24	Y2	D44161P	B16		AE0401A		24	YK901-YM670
D45261J	PERG	1F	2030Z			D44161P	PERG	1F	AE0401A		24	YK901-YM670
D45261J	B10		2032B	24	Y2	D43261P	B10		AE0302A		40	YK901-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section AE0502A

Page 4

Aug 10/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY	To Equip	Term	Type	Matewith	Pos	Effectivity		
AE0502A	18	W5461	LA2	DISCONNECT BRACKET - E5-2 SHELF (continued)								
D45261J	B09		2032R	24	Y2	D43261P		B09	40	YK901-YM670		
D45261J	PERG	1F	2032Z			D43261P	PERG	1F	40	YK901-YM670		
AE0502A	21	W2597	NA2	DISCONNECT BRACKET - E5-2 SHELF								
D45225J	B20		0017	22	PA	D40625P		40	13	YK901-YM670		
D45225J	B04		2502B	22	X2	D40625P		12	13	YC012-YM670		
D45225J	B03		2502R	22	X2	D40625P		11	13	YC012-YM670		
D45225J	PERG	1F	2502Z			D40625P	S/R		13	YC012-YM670		
D45225J	A20		2509B	24	Y2	D40625P		7	13	YK901-YM670		
D45225J	A19		2509R	24	Y2	D40625P		6	13	YK901-YM670		
D45225J	PERG	1F	2509Z			D40625P	S/R		13	YK901-YM670		
D45225J	B14		2513B	22	X2	D40625P		39	13	YK901-YM670		
D45225J	B13		2513R	22	X2	D40625P		38	13	YK901-YM670		
D45225J	PERG	1F	2513Z			D40625P	S/R		13	YK901-YM670		

SPARE WIRE LIST

D280A103

91-21-12

Section AE0502A

Page 5 End

Aug 10/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To					
				GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
AE0602A	08	W5105	NB2	DISCONNECT BRACKET - E6-2 SHELF							
D40115P	A02		0001	22	PA	D43361P	A02	AE0303A	10	YM643-YM670	
D40115P	B06		2504B	24	Y2	D43361P	B04	AE0303A	10	YM643-YM670	
D40115P	A06		2504R	24	Y2	D43361P	A04	AE0303A	10	YM643-YM670	
D40115P	PERG	1F	2504Z			D43361P	PERG	1F	AE0303A	10	YM643-YM670
D40115P	B07		2505B	24	Y2	D43361P	B05	AE0303A	10	YM643-YM670	
D40115P	A07		2505R	24	Y2	D43361P	A05	AE0303A	10	YM643-YM670	
D40115P	PERG	1F	2505Z			D43361P	PERG	1F	AE0303A	10	YM643-YM670
D40115P	B08		2507B	24	Y2	D43361P	B08	AE0303A	10	YM643-YM670	
D40115P	A08		2507R	24	Y2	D43361P	A08	AE0303A	10	YM643-YM670	
D40115P	PERG	1F	2507Z			D43361P	PERG	1F	AE0303A	10	YM643-YM670
D40115P	B09		2508B	24	Y2	D43361P	B09	AE0303A	10	YM643-YM670	
D40115P	A09		2508R	24	Y2	D43361P	A09	AE0303A	10	YM643-YM670	
D40115P	PERG	1F	2508Z			D43361P	PERG	1F	AE0303A	10	YM643-YM670
D40115P	B10		2509B	24	Y2	D43361P	B06	AE0303A	10	YM643-YM670	
D40115P	A10		2509R	24	Y2	D43361P	A06	AE0303A	10	YM643-YM670	
D40115P	PERG	1F	2509Z			D43361P	PERG	1F	AE0303A	10	YM643-YM670
AE0602A	11	W3555	RN2	DISCONNECT BRACKET - E6-2 SHELF							
D40125P	B02		0009	20	PA	D04245J	9	AB1030A	01	YM643-YM670	
D40125P	A03		0010	20	PA	D04245J	10	AB1030A	01	YM643-YM670	
AE0602A	12	W3553	LN2	DISCONNECT BRACKET - E6-2 SHELF							
D40121P	B02		0009	20	PA	D04227J	9	AB1030A	03	YM643-YM670	
D40121P	A03		0010	20	PA	D04227J	10	AB1030A	03	YM643-YM670	

SPARE WIRE LIST

D280A103



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To		Term	Type	Matewith	Pos	Effectivity
				GA	TY	Equip	Term					
AE0801A	01	W5189	NA3	DISCONNECT BRACKET - E8-1 SHELF								
D08189P	B07		0021	24	PK	D08123P	A10			AE0401A	21	YC008-YC011
AE0801A	03	W3509	LA2	DISCONNECT BRACKET - E8-1 SHELF								
D08509P	B02		0009	20	PA	D04227J	9			AB1030A	03	YK907-YL430
D08509P	A03		0010	20	PA	D04227J	10			AB1030A	03	YK907-YL430
AE0801A	05	W5103	NA2	DISCONNECT BRACKET - E8-1 SHELF								
D40075P	A04		0001	22	PA	D43359P	A04			AE0303A	06	YK901-YK909
D40075P	B04		0002	22	PA	D43359P	B04			AE0303A	06	YK901-YK906
D40075P	A05		0003	22	PA	D43359P	A05			AE0303A	06	YK901-YK906
D40075P	B05		0004	24	PK	D43359P	B05			AE0303A	06	YK901-YK906
D40075P	B01		2501B	24	Y2	D43359P	B01			AE0303A	06	YK901-YK906
D40075P	A01		2501R	24	Y2	D43359P	A01			AE0303A	06	YK901-YK906
D40075P	PERG	1F	2501Z			D43359P	PERG	1F		AE0303A	06	YK901-YK906
D40075P	B03		2503B	24	Y2	D43359P	B03			AE0303A	06	YK901-YK906
D40075P	A03		2503R	24	Y2	D43359P	A03			AE0303A	06	YK901-YK906
D40075P	PERG	1F	2503Z			D43359P	PERG	1F		AE0303A	06	YK901-YK906
D40075P	A14		2510B	24	Y2	D43359P	B10			AE0303A	06	YK901-YL430
D40075P	A13		2510R	24	Y2	D43359P	A10			AE0303A	06	YK901-YL430
D40075P	PERG	1F	2510Z			D43359P	PERG	1F		AE0303A	06	YK901-YL430
D40075P	B08		2533B	24	Y2	D43359P	B06			AE0303A	06	YK901-YK909
D40075P	A08		2533R	24	Y2	D43359P	A06			AE0303A	06	YK901-YK909
D40075P	PERG	1F	2533Z			D43359P	PERG	1F		AE0303A	06	YK901-YK909
D40075P	B09		2534B	24	Y2	D43359P	B07			AE0303A	06	YK901-YL430
D40075P	A09		2534R	24	Y2	D43359P	A07			AE0303A	06	YK901-YL430
D40075P	PERG	1F	2534Z			D43359P	PERG	1F		AE0303A	06	YK901-YL430
AE0801A	06	W5105	NB2	DISCONNECT BRACKET - E8-1 SHELF								
D40077P	A02		0001	22	PA	D43361P	A02			AE0303A	10	YK907-YL430
D40077P	B09		2510B	24	Y2	D43361P	B09			AE0303A	10	YK907-YL430
D40077P	A09		2510R	24	Y2	D43361P	A09			AE0303A	10	YK907-YL430
D40077P	PERG	1F	2510Z			D43361P	PERG	1F		AE0303A	10	YK907-YL430
D40077P	B07		2533B	24	Y2	D43361P	B06			AE0303A	10	YK907-YL430
D40077P	A07		2533R	24	Y2	D43361P	A06			AE0303A	10	YK907-YL430
D40077P	PERG	1F	2533Z			D43361P	PERG	1F		AE0303A	10	YK907-YL430
D40077P	B08		2534B	24	Y2	D43361P	B07			AE0303A	10	YK907-YL430
D40077P	A08		2534R	24	Y2	D43361P	A07			AE0303A	10	YK907-YL430
D40077P	PERG	1F	2534Z			D43361P	PERG	1F		AE0303A	10	YK907-YL430

SPARE WIRE LIST

D280A103

91-21-12

Section AE0801A

Page 1

Aug 10/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To					Pos	Effectivity		
				GA	TY	Equip	Term	Type	Matewith					
AE0801A	06	W5105	NB2	DISCONNECT BRACKET - E8-1 SHELF (continued)										
D40077P	B14		2539B	24	Y2	D43361P	B10		AE0303A		10	YK907-YL430		
D40077P	A14		2539R	24	Y2	D43361P	A10		AE0303A		10	YK907-YL430		
D40077P	PERG	1F	2539Z			D43361P	PERG	1F	AE0303A		10	YK907-YL430		
AE0801A	15	W2101	LA2	DISCONNECT BRACKET - E8-1 SHELF										
D40811P	9		0019	20	PA	D41801P	19		AP1800B		03	YC001-YC006		
D40811P	10		0020	20	PA	D41801P	20		AP1800B		03	YC001-YC006		
D40811P	11		0021	20	PA	D41801P	21		AP1800B		03	YC001-YC006		
D40811P	12		0022	20	PA	D41801P	22		AP1800B		03	YC001-YC006		
AE0801A	19	W2101	LA2	DISCONNECT BRACKET - E8-1 SHELF										
D40811P	6		0016	20	PA	D41801P	16		AP1800B		03	YC008-YC011		
D40811P	7		0017	20	PA	D41801P	17		AP1800B		03	YC008-YC011		
D40811P	8		0018	20	PA	D41801P	18		AP1800B		03	YC008-YC011		
D40811P	9		0019	20	PA	D41801P	19		AP1800B		03	YC007-YC011, YK907-YL430		
D40811P	10		0020	20	PA	D41801P	20		AP1800B		03	YC007-YC011, YK907-YL430		
D40811P	11		0021	20	PA	D41801P	21		AP1800B		03	YC007-YC011, YK907-YL430		
D40811P	12		0022	20	PA	D41801P	22		AP1800B		03	YC007-YC011, YK907-YL430		

SPARE WIRE LIST

D280A103

91-21-12
Section AE0801A
Page 2 End
Aug 10/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To		Matewith	Pos	Effectivity
				GA	TY	Equip	Term			
AE0801B	06	W0813	NN2	DISCONNECT BRACKET E08-01 SHELF						
D48389J	B05		0008	22	PA	D48389J	A01	AE0801B	06	YC007-YC050
D48389J	A01		0008	22	PA	D48389J	B05	AE0801B	06	YC007-YC050
D48389J	A05		0009	22	PA	D48389J	B01	AE0801B	06	YC007-YC050
D48389J	B01		0009	22	PA	D48389J	A05	AE0801B	06	YC007-YC050
AE0801B	06	W5189	NA3	DISCONNECT BRACKET E08-01 SHELF						
D48389P	A01		0001	22	PA	D04195P	42	AE0103A	18	YC007-YC030
D48389P	B01		0002	22	PA	D04195P	43	AE0103A	18	YC007-YC030
D48389P	B05		0017	22	PA	D43315P	B10	AE0303A	22	YC007-YC030
AE0801B	14	W2103	RB2	DISCONNECT BRACKET E08-01 SHELF						
D48323P	12		0030	20	PA	D46061P	39	AP0600B	23	YM647-YM652
D48323P	1		0031	20	PA	D46061P	31	AP0600B	23	YC007-YC030
D48323P	2		0032	20	PA	D46061P	32	AP0600B	23	YC007-YC030
D48323P	3		0033	20	PA	D46061P	33	AP0600B	23	YC007-YC030
D48323P	1		0045	20	PA	D46061P	24	AP0600B	23	YM643-YM652
D48323P	2		0046	20	PA	D46061P	25	AP0600B	23	YM643-YM652
D48323P	3		0047	20	PA	D46061P	26	AP0600B	23	YM643-YM652

SPARE WIRE LIST

D280A103

91-21-12

Section AE0801B

Page 1 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To					Pos	Effectivity	
				GA	TY	Equip	Term	Type	Matewith				
AE0801C	07	W0813	NN2	DISCONNECT BRACKET - E8-1 SHELF									
D48389J	B05		0008	22	PA	D48389J	A01		AE0801C		07	YC001-YC006	
D48389J	A01		0008	22	PA	D48389J	B05		AE0801C		07	YC001-YC006	
D48389J	A05		0009	22	PA	D48389J	B01		AE0801C		07	YC001-YC006	
D48389J	B01		0009	22	PA	D48389J	A05		AE0801C		07	YC001-YC006	
AE0801C	07	W5189	NA3	DISCONNECT BRACKET - E8-1 SHELF									
D48389P	A01		0001	22	PA	D04195P	42		AE0103A		18	YC001-YC006	
D48389P	B01		0002	22	PA	D04195P	43		AE0103A		18	YC001-YC006	
D48389P	A05		0016	22	PA	D43315P	CAP	Y	AE0303A		22	YC003	
D48389P	B05		0017	22	PA	D43315P	B10		AE0303A		22	YC001-YC006	
AE0801C	11	W2103	RB2	DISCONNECT BRACKET - E8-1 SHELF									
D48323P	1		0031	20	PA	D46061P	31		AP0600B		23	YC001-YC006	
D48323P	2		0032	20	PA	D46061P	32		AP0600B		23	YC001-YC006	
D48323P	3		0033	20	PA	D46061P	33		AP0600B		23	YC001-YC006	

SPARE WIRE LIST

D280A103

91-21-12

Section AE0801C

Page 1 End

Aug 10/2009



<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>					
Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
AJ0004		10	W5160	RB2*	DISCONNECT BRACKET-J4							
D40610P		2		0011	20	PA	D46102P	24		AJ0046A	14	YC004-YC030
D40610P		9		0012	20	PA	D46102P	25		AJ0046A	14	YC004-YC030

SPARE WIRE LIST

D280A103

91-21-12

Section AJ0004

Page 1 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY	To Equip	Term	Type	Matewith	Pos	Effectivity
AJ0020B	02	W5158	SB2*	DISCONNECT BRACKET-J20-B						
D40638P	12		0015	22 PA	D40490J	4		AE0104A	20	YK901-YL430
D40638P	14		0678	22 PA	D48116P	A03		AJ0048A	13	YC004-YM670
D40638P	2		0680	22 GA	TB1802X	B024	1A			YC001-YC002
D40638P	2		0680	22 PA	TB1802X	B024	1A			YC003
D40638P	2		0680	22 PA	D48116P	B04		AJ0048A	13	YC004-YM670
AJ0020B	03	W5158	SB2*	DISCONNECT BRACKET-J20-B						
D40640P	1		0706	20 PA	D46100P	24		AJ0046B	11	YK901-YL430

SPARE WIRE LIST

D280A103

91-21-12

Section AJ0020B

Page 1 End

Aug 10/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY		To Equip	Term	Type	Matewith	Pos	Effectivity
AJ0022	02	W5510	SA2*	DISCONNECT BRACKET-J22							
D40672P	11		5503	24	PK	D48122P	A03		AJ0048A	03	YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D40672P	15		5510	24	PK	D48122P	B09		AJ0048A	03	YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
AJ0022	03	W5156	SA2*	DISCONNECT BRACKET-J22							
D40666P	25		0588	24	B6	TB1802X	B004	1A			YC001-YC002
D40666P	25		0588	24	B6	D48114P	A03		AJ0048A	17	YC007-YC030, YK901-YM670
D40666P	30		0594	24	PK	TB1802X	A032	1A			YC001-YC002
D40666P	30		0594	24	PK	D48112P	A04		AJ0048A	16	YC007-YC030, YK901-YM670
D40666P	9		0660	20	CQ	D40594P	A08		AE0302A	16	YC001-YC030, YK901-YM670
D40666P	21		0667	24	PK	D40576P	8		AP1800B	02	YC004-YC030, YK901-YM670
D40666P	20		0668	22	PA	D40460P	B01		AE0301A	19	YC004-YC030, YK901-YM670
AJ0022	04	W5156	SA2*	DISCONNECT BRACKET-J22							
D40670P	28		0645	20	PA	D40498P	29		AE0103A	11	YC028-YC030
D40670P	28		0646	20	PA	D40460P	A08		AE0301A	19	YK901-YL430
D40670P	20		6025R	22	PH	D40724P	B17		AE0202A	28	YC004-YC030, YK901-YM670
AJ0022	06	W5100	SB2*	DISCONNECT BRACKET-J22							
D40668P	8		6001R	22	PH	D40698P	8		AJ0024	03	YC004-YC030, YK901-YM670
D40668P	20		6002R	22	PH	D40698P	20		AJ0024	03	YC004-YC030, YK901-YM670
D40668P	21		6003R	22	PH	D40698P	21		AJ0024	03	YC004-YC030, YK901-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section AJ0022

Page 1 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To					Pos	Effectivity	
				GA	TY	Equip	Term	Type	Matewith				
AJ0024	03	W5100	SB2*	DISCONNECT BRACKET-J24									
D40698P	8		6001R	22	PH	D40668P	8		AJ0022		06	YC004-YC030, YK901-YM670	
D40698P	20		6002R	22	PH	D40668P	20		AJ0022		06	YC004-YC030, YK901-YM670	
D40698P	21		6003R	22	PH	D40668P	21		AJ0022		06	YC004-YC030, YK901-YM670	
AJ0024	06	W5158	SB2*	DISCONNECT BRACKET-J24									
D40702P	CAP	Y	0545	20	CQ	D40426P	8		AE0302A		28	YC001-YC002, YC004-YC030	
D40702P	CAP	Y	0682	20	CQ	D40426P	7		AE0302A		28	YC001-YC002, YC004-YC030	
D40702P	21		0682	20	CQ	D40426P	7		AE0302A		28	YK901-YM670	
D40702P	23		0694	20	CQ	D40750P	15		AP0600B		02	YK901-YM670	
AJ0024	07	W5160	RB2*	DISCONNECT BRACKET-J24									
D40694P	16		0530	22	PA	D40474P	B02		AE0402A		37	YC004-YC030, YK901-YM670	
D40694P	13		0588	22	GK	TB0602X	B027	1A				YC001-YC002	
D40694P	13		0588	22	GK	D46122P	13		AJ0046A		16	YC007-YC030, YK901-YM670	
D40694P	31		0620	20	PA	D40952P	A05		AE0302A		42	YK907-YM670	
D40694P	21		1001R	22	X5	D40466P	47		AE0103A		14	YC004-YC030, YK901-YM670	
D40694P	DED		1001Z			D40466P	DED		AE0103A		14	YC004-YC030, YK901-YM670	
D40694P	22		1002R	22	X5	D40466P	48		AE0103A		14	YC004-YC030, YK901-YM670	
D40694P	DED		1002Z			D40466P	DED		AE0103A		14	YC004-YC030, YK901-YM670	

SPARE WIRE LIST

D280A103

91-21-12

Section AJ0024

Page 1 End

Aug 10/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To		Term	Type	Matewith	Pos	Effectivity
				GA	TY	Equip						
AJ0046A	04	W0066	RN2	DISCONNECT BRACKET - J46A								
D46110J	A02		0142	20	G5	D46102J		24		AJ0046A	14	YC004-YC050
AJ0046A	04	W6208	RA2	DISCONNECT BRACKET - J46A								
D46110P	A02		0712	20	PA	D40820P		11		AP0600B	17	YC004-YC030
AJ0046A	11	W0066	RN2	DISCONNECT BRACKET - J46A								
D46104J	23		0144	16	CQ	D46102J		23		AJ0046A	14	YC004-YC050
AJ0046A	13	W0066	RN2	DISCONNECT BRACKET - J46A								
D46116J	15		0004	22	PA	D46108J		2		AJ0046A	15	YM643-YM670
D46116J	14		0143	20	G5	D46102J		25		AJ0046A	14	YC004-YC050
D46116J	10		0212	20	CQ	D46108J		26		AJ0046A	15	YM643-YM670
AJ0046A	13	W5156	SA2*	DISCONNECT BRACKET - J46A								
D46116P	14		0021	20	PA	D10982		21		M02061		YC004-YC030
D46116P	20		0643	22	PA	TB5801X		B003	1A			YK901-YL430
AJ0046A	14	W0066	RN2	DISCONNECT BRACKET - J46A								
D46102J	20		0082	22	PA	D46138J		A04		AJ0046B	02	YC004-YM670
D46102J	24		0142	20	G5	D46110J		A02		AJ0046A	04	YC004-YC050
D46102J	25		0143	20	G5	D46116J		14		AJ0046A	13	YC004-YC050
D46102J	23		0144	16	CQ	D46104J		23		AJ0046A	11	YC004-YC050
AJ0046A	14	W5160	RB2*	DISCONNECT BRACKET - J46A								
D46102P	24		0011	20	PA	D40610P		2		AJ0004	10	YC004-YC030
D46102P	25		0012	20	PA	D40610P		9		AJ0004	10	YC004-YC030
D46102P	20		0629	22	PA	D10988		54		M02061		YC004-YC030, YK901-YM670
AJ0046A	15	W0066	RN2	DISCONNECT BRACKET - J46A								
D46108J	2		0004	22	PA	D46116J		15		AJ0046A	13	YM643-YM670
D46108J	16		0032	20	CQ	TB0660Y		B009	1A			YM643-YM670
D46108J	26		0212	20	CQ	D46116J		10		AJ0046A	13	YM643-YM670
D46108J	28		0216	20	CQ	D46122J		14		AJ0046A	16	YM643-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section AJ0046A

Page 1

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>					
Equip	Term	Type	Wire No.	GA	TY		Equip	Term	Type	Matewith	Pos	Effectivity
AJ0046A		16	W0066	RN2	DISCONNECT BRACKET - J46A							
D46122J	3		0162	24	PK		D46112J	9		AJ0046B	12	YC004-YC006, YC008-YM670
D46122J	14		0216	20	CQ		D46108J	28		AJ0046A	15	YM643-YM670
AJ0046A		16	W5160	RB2*	DISCONNECT BRACKET - J46A							
D46122P	3		0037	22	PA		D10988	37		M02061		YK901-YK906
D46122P	13		0588	22	GK		D40694P	13		AJ0024	07	YC007-YC030, YK901-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section AJ0046A

Page 2 End

Aug 10/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY		To Equip	Term	Type	Matewith	Pos	Effectivity
AJ0046B	02	W0066	RN2	DISCONNECT BRACKET - J46B							
D46138J	A04		0082	22	PA	D46102J	20		AJ0046A	14	YC004-YM670
D46138J	A05		0083	22	PA	D46100J	9		AJ0046B	11	YC004-YM670
AJ0046B	11	W0066	RN2	DISCONNECT BRACKET - J46B							
D46100J	9		0083	22	PA	D46138J	A05		AJ0046B	02	YC004-YM670
AJ0046B	11	W5158	SB2*	DISCONNECT BRACKET - J46B							
D46100P	18		0690	20	CQ	D40750P	4		AP0600B	02	YK901-YM670
D46100P	9		0695	22	PA	D40750P	6		AP0600B	02	YC004-YC030
D46100P	24		0706	20	PA	D40640P	1		AJ0020B	03	YK901-YL430
AJ0046B	12	W0066	RN2	DISCONNECT BRACKET - J46B							
D46112J	9		0162	24	PK	D46122J	3		AJ0046A	16	YC004-YC006, YC008-YM670
D46112J	9		0162	24	PK	TB0666Y	B001	1A			YC007

SPARE WIRE LIST

D280A103

91-21-12

Section AJ0046B

Page 1 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To		Term	Type	Matewith	Pos	Effectivity
				GA	TY	Equip						
AJ0048A	03	W5510	SA2*	DISCONNECT BRACKET - J48A								
D48122P	A03		5503	24	PK	D40672P		11		AJ0022	02	YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
D48122P	B09		5510	24	PK	D40672P		15		AJ0022	02	YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
AJ0048A	11	W0088	LN2	DISCONNECT BRACKET - J48A								
D40089J	B01		0055	22	PA	D48116J			B04	AJ0048A	13	YC004-YC006
AJ0048A	13	W0088	LN2	DISCONNECT BRACKET - J48A								
D48116J	A03		0047	22	PA	D48104J		A07		AJ0048A	20	YC004-YM670
D48116J	B04		0055	22	PA	D40089J		B01		AJ0048A	11	YC004-YC006
D48116J	B05		0206	20	PA	D48104J		B06		AJ0048A	20	YM643-YM670
AJ0048A	13	W5158	SB2*	DISCONNECT BRACKET - J48A								
D48116P	A03		0678	22	PA	D40638P		14		AJ0020B	02	YC004-YM670
D48116P	B04		0680	22	PA	D40638P		2		AJ0020B	02	YC004-YM670
AJ0048A	16	W0088	LN2	DISCONNECT BRACKET - J48A								
D48112J	A08		0201	20	PA	D48104J			B03	AJ0048A	20	YM643-YM670
AJ0048A	16	W5156	SA2*	DISCONNECT BRACKET - J48A								
D48112P	A04		0594	24	PK	D40666P		30		AJ0022	03	YC007-YC030, YK901-YM670
AJ0048A	17	W0088	LN2	DISCONNECT BRACKET - J48A								
D48114J	B07		0123	22	G5	D48130J		A05		AJ0048A	23	YC004-YM670
D48114J	B08		0124	22	G5	D48130J		A06		AJ0048A	23	YC004-YM670
D48114J	B09		0125	22	G5	D48130J		A07		AJ0048A	23	YC004-YM670
D48114J	B10		0126	22	G5	D48130J		A08		AJ0048A	23	YC004-YM670
AJ0048A	17	W5156	SA2*	DISCONNECT BRACKET - J48A								
D48114P	A03		0588	24	B6	D40666P		25		AJ0022	03	YC007-YC030, YK901-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section AJ0048A

Page 1

Aug 10/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To Equip	Term	Type	Matewith	Pos	Effectivity
AJ0048A	17	W5156	SA2*	DISCONNECT BRACKET - J48A (continued)							
D48114P	B07		0671	22	PA	D40594P	A02		AE0302A	16	YC004-YC030, YK901-YM670
D48114P	B08		0672	22	PA	D40594P	B02		AE0302A	16	YC004-YC030, YK901-YM670
D48114P	B09		0673	22	PA	D40594P	B01		AE0302A	16	YC004-YC030, YK901-YM670
D48114P	B10		0674	22	PA	D40594P	A01		AE0302A	16	YC004-YC030, YK901-YM670
AJ0048A	20	W0088	LN2	DISCONNECT BRACKET - J48A							
D48104J	A07		0047	22	PA	D48116J	A03		AJ0048A	13	YC004-YM670
D48104J	B03		0201	20	PA	D48112J	A08		AJ0048A	16	YM643-YM670
D48104J	B06		0206	20	PA	D48116J	B05		AJ0048A	13	YM643-YM670
AJ0048A	23	W0088	LN2	DISCONNECT BRACKET - J48A							
D48130J	A05		0123	22	G5	D48114J	B07		AJ0048A	17	YC004-YM670
D48130J	A06		0124	22	G5	D48114J	B08		AJ0048A	17	YC004-YM670
D48130J	A07		0125	22	G5	D48114J	B09		AJ0048A	17	YC004-YM670
D48130J	A08		0126	22	G5	D48114J	B10		AJ0048A	17	YC004-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section AJ0048A

Page 2 End

Aug 10/2009



<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>					<u>Effectivity</u>
Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity	
AL0720D	01	W6124	LA2	DISCONNECT BRACKET-MAIN WHEEL WELL								
D46040J	3		0539	22	PA	D40262P	19		D40262J		YC008-YK907, YL421	

SPARE WIRE LIST

D280A103

91-21-12

Section AL0720D

Page 1 End

Aug 10/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To		Matewith	Pos	Effectivity		
				GA	TY	Equip	Term	Type				
AP0600A	04	W6214	LA2*	DISCONNECT BRACKET-P5-P6 INTEGRATION								
D40444P	1		5501	22	PA	D40328P	A03	AE0401A	31	YC001-YC030		
D40444P	9		5540	20	PA	D40378P	B16	AE0401A	46	YC001-YC030, YK901-YM670		
D40444P	10		5541	20	PA	D40378P	B14	AE0401A	46	YC001-YC030, YK901-YM670		
D40444P	4		5544	20	PA	D40328P	B02	AE0401A	31	YC001-YC030, YK901-YM670		
D40444P	5		5545	20	PA	D40328P	B03	AE0401A	31	YC001-YC030, YK901-YM670		
AP0600A	05	W3058	RN2	DISCONNECT BRACKET-P5-P6 INTEGRATION								
D40226P	CAP	Y	0320	20	PA	GD11106	ST..	1		YK901-YM670		
D40226P	8		0381	20	PA	D40050J	8	AB0340A	05	YC001-YC030, YK901-YM670		
D40226P	9		0382	20	PA	D40050J	9	AB0340A	05	YC001-YC030, YK901-YM670		
D40226P	12		0383	20	PA	D40050J	11	AB0340A	05	YC001-YC030, YK901-YM670		

SPARE WIRE LIST

D280A103

91-21-12

Section AP0600A

Page 1 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To					Pos	Effectivity		
				GA	TY	Equip	Term	Type	Matewith					
AP0600B	02	W5158	SB2*	DISCONNECT BRACKET-LOWER P6 PANEL										
D40750P	4		0690	20	CQ	D46100P	18		AJ0046B		11	YK901-YM670		
D40750P	15		0694	20	CQ	D40702P	23		AJ0024		06	YK901-YM670		
D40750P	6		0695	22	PA	D46100P	9		AJ0046B		11	YC004-YC030		
D40750P	10		0707	22	PA	TB1808X	A003	%A				YK901-YL430		
AP0600B	03	W5514	SA2	DISCONNECT BRACKET-LOWER P6 PANEL										
D40822P	23		5568	20	GA	D40826J	10		AE0104A		27	YC001-YC030		
D40822P	24		5569	20	GA	D40826J	11		AE0104A		27	YC001-YC030		
AP0600B	05	W2138	LA1	DISCONNECT BRACKET-LOWER P6 PANEL										
D41430P	3		5503	16	HA	D41432P	3		AE0201A		15	ALL		
AP0600B	07	W6412	RB2*	DISCONNECT BRACKET-LOWER P6 PANEL										
D41832P	7		0029	20	PA	D41830P	A06		AE0401A		13	YC028-YL430		
AP0600B	09	W6110	LA2*	DISCONNECT BRACKET-LOWER P6 PANEL										
D40368P	5		0520	22	PA	D40364P	A04		AE0101A		12	YC001-YC030, YK901-YM670		
D40368P	6		0521	22	PA	D40364P	B03		AE0101A		12	YC001-YC030, YK901-YM670		
AP0600B	10	W2231	RB2	DISCONNECT BRACKET-LOWER P6 PANEL										
D46067P	6		0006	20	PA	D46017P	6		AE0301A		23	ALL		
D46067P	7		0007	20	PA	D46017P	5		AE0301A		23	ALL		
D46067P	9		0009	20	PA	D46021P	9		AE0302A		25	ALL		
D46067P	10		0010	20	PA	D46021P	1		AE0302A		25	ALL		
D46067P	11		0011	20	PA	D46021P	2		AE0302A		25	ALL		
D46067P	12		0012	20	PA	D46021P	3		AE0302A		25	ALL		
D46067P	19		0019	16	CQ	D43309P	7		AE0303A		29	YK901-YM670		
D46067P	21		0021	20	PA	D43309P	1		AE0303A		29	YC001-YC050, YM643-YM670		
D46067P	22		0022	20	PA	D43309P	2		AE0303A		29	ALL		
D46067P	23		0023	16	PA	D43309P	10		AE0303A		29	ALL		
D46067P	25		0025	20	PA	D43309P	5		AE0303A		29	ALL		
D46067P	26		0026	20	PA	D43309P	6		AE0303A		29	ALL		
D46067P	27		0027	16	PA	D46017P	7		AE0301A		23	ALL		
D46067P	28		0028	20	PA	D46017P	8		AE0301A		23	ALL		

SPARE WIRE LIST

D280A103

91-21-12

Section AP0600B

Page 1

Aug 10/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY		To Equip	Term	Type	Matewith	Pos	Effectivity
AP0600B	11	W2030	SN2	DISCONNECT BRACKET-LOWER P6 PANEL							
D46052P	9		5516	20	PA	D40924P	5		AP0900A	14	ALL
D46052P	11		5522	20	PA	D40924P	3		AP0900A	14	ALL
D46052P	12		5523	20	PA	D40924P	7		AP0900A	14	ALL
D46052P	26		5526	20	PA	D40924P	25		AP0900A	14	ALL
D46052P	27		5527	20	PA	D40924P	26		AP0900A	14	ALL
AP0600B	13	W2597	NA2	DISCONNECT BRACKET-LOWER P6 PANEL							
D40625P	40		0017	22	PA	D45225J	B20		AE0502A	21	YK901-YM670
D40625P	12		2502B	22	X2	D45225J	B04		AE0502A	21	YC012-YM670
D40625P	11		2502R	22	X2	D45225J	B03		AE0502A	21	YC012-YM670
D40625P	S/R		2502Z			D45225J	PERG	1F	AE0502A	21	YC012-YM670
D40625P	7		2509B	24	Y2	D45225J	A20		AE0502A	21	YK901-YM670
D40625P	6		2509R	24	Y2	D45225J	A19		AE0502A	21	YK901-YM670
D40625P	S/R		2509Z			D45225J	PERG	1F	AE0502A	21	YK901-YM670
D40625P	39		2513B	22	X2	D45225J	B14		AE0502A	21	YK901-YM670
D40625P	38		2513R	22	X2	D45225J	B13		AE0502A	21	YK901-YM670
D40625P	S/R		2513Z			D45225J	PERG	1F	AE0502A	21	YK901-YM670
AP0600B	14	W6412	RB2*	DISCONNECT BRACKET-LOWER P6 PANEL							
D40386P	27		0008	20	PA	D41010P	18		AE0401A	33	YC028-YM670
D40386P	31		0009	20	PA	D41010P	19		AE0401A	33	YC028-YM670
D40386P	32		0010	20	PA	D41010P	20		AE0401A	33	YC028-YM670
D40386P	9		5508	22	PA	D40390P	A19		AE0401A	52	YC001-YL430
D40386P	24		5533	20	PA	D40388P	A16		AE0402A	24	YC001-YL430
D40386P	23		5534	20	PA	D40392P	A18		AE0302A	45	YC001-YL430
D40386P	29		5535	20	PA	D40394P	A15		AE0301A	34	YC001-YL430
AP0600B	15	W2383	RB2	DISCONNECT BRACKET-LOWER P6 PANEL							
D46065P	9		0009	24	PK	D46031J	9		AE0104A	10	YC004-YC030, YK901-YM670
D46065P	15		0015	24	PK	D46033P	5		AP0900A	16	YC001-YC030, YK901-YM670
D46065P	8		0018	16	PA	D46023P	K		AE0101B	09	YK901-YL430
D46065P	19		0019	20	PA	D46033P	9		AP0900A	16	YC001-YC030, YK901-YM670
D46065P	23		0023	20	PA	D46023P	A05		AE0101B	09	YC001-YC030, YK901-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section AP0600B

Page 2

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To					Pos	Effectivity
				GA	TY	Equip	Term	Type	Matewith			
AP0600B	15	W2383	RB2	DISCONNECT BRACKET-LOWER P6 PANEL (continued)								
D46065P	24		0024	20	PA	D46031J	8		AE0104A	10	YC001-YC030, YK901-YM670	
D46065P	25		0025	20	PA	D46031J	5		AE0104A	10	YC001-YC030	
D46065P	26		0026	22	PA	D46031J	6		AE0104A	10	YC001-YC030, YK901-YM670	
D46065P	27		0027	22	PA	D46031J	7		AE0104A	10	YC001-YC030	
D46065P	31		0031	20	PA	D46033P	1		AP0900A	16	YC001-YC030, YK901-YM670	
D46065P	32		0032	20	PA	D46033P	2		AP0900A	16	YC001-YC030	
AP0600B	16	W5612	SN2*	DISCONNECT BRACKET-LOWER P6 PANEL								
D40352P	17		0555	22	PA	D40362P	A10		AE0302A	05	YC030-YK909, YL401	
D40352P	28		2204B	24	Y2	D40358P	B05		AE0201A	18	YC030-YM670	
D40352P	9		2204R	24	Y2	D40358P	B04		AE0201A	18	YC030-YM670	
D40352P	DED		2204Z			D40358P	DED		AE0201A	18	YC030-YM670	
I AP0600B	17	W6208	RA2	DISCONNECT BRACKET-LOWER P6 PANEL								
D40820P	10		0512	16	PA	TB0606V	B013	1			YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652	
D40820P	11		0712	20	PA	TB0604X	A045	1A			YC001-YC003	
D40820P	11		0712	20	PA	D46110P	A02		AJ0046A	04	YC004-YC030	
AP0600B	19	W2169	RB2	DISCONNECT BRACKET-LOWER P6 PANEL								
D46063P	1		0001	20	PA	D46035P	1		AE0301A	24	ALL	
D46063P	2		0002	22	PA	D46035P	2		AE0301A	24	ALL	
D46063P	3		0003	20	PA	D46035P	3		AE0301A	24	ALL	
D46063P	4		0004	22	PA	D46043P	4		AE0302A	30	ALL	
D46063P	7		0007	22	PA	D46043P	7		AE0302A	30	ALL	
D46063P	8		0008	22	PA	D46043P	8		AE0302A	30	ALL	
D46063P	9		0009	20	PA	D46035P	9		AE0301A	24	YC011, YC031-YM670	
D46063P	10		0010	20	PA	D46035P	5		AE0301A	24	YC011, YC031-YM670	
D46063P	11		0011	20	PA	D46043P	11		AE0302A	30	YC011, YC031-YM670	

SPARE WIRE LIST

D280A103

91-21-12

Section AP0600B

Page 3

Aug 10/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY		To Equip	Term	Type	Matewith	Pos	Effectivity
AP0600B	19	W2169	RB2	DISCONNECT BRACKET-LOWER P6 PANEL (continued)							
D46063P	12		0012	20	CQ	D46043P	12		AE0302A	30	YC031-YM670
AP0600B	20	W2661	SB2	DISCONNECT BRACKET-LOWER P6 PANEL							
D46069P	7		0007	18	PA	D46051P	7		AE0103A	03	ALL
D46069P	10		0010	16	PA	D46051P	10		AE0103A	03	ALL
AP0600B	22	W6414	RB2	DISCONNECT BRACKET-LOWER P6 PANEL							
D40396P	6		0502	24	PK	D11448	4		P0092		YC001-YM652
D40396P	4		5508	18	PA	D11448	33		P0092		YC031-YM652
AP0600B	23	W2103	RB2	DISCONNECT BRACKET-LOWER P6 PANEL							
D46061P	5		0005	20	PA	D46013P	A05		AE0101B	13	YC001-YC030, YK901-YM652
D46061P	6		0006	20	PA	D46013P	A06		AE0101B	13	YC001-YC030, YK901-YM652
D46061P	12		0012	20	PA	D46011J	12		AE0104A	09	YC001-YC030, YK901-YM652
D46061P	13		0013	20	PA	D46011J	13		AE0104A	09	YC001-YC030, YK901-YM652
D46061P	16		0016	20	PA	D46011J	6		AE0104A	09	YC001-YC030, YK901-YM652
D46061P	17		0017	20	PA	D46011J	7		AE0104A	09	YC001-YC030, YK901-YM652
D46061P	18		0018	20	PA	D46013P	A08		AE0101B	13	YC001-YC030, YK901-YM652
D46061P	19		0019	20	PA	D46013P	A09		AE0101B	13	YC001-YC030, YK901-YM652
D46061P	21		0021	20	PA	TB0604Y	A017	1A			YC001-YC002
D46061P	39		0030	20	PA	D48323P	12		AE0801B	14	YM647-YM652
D46061P	31		0031	20	PA	D48323P	1		AE0801C	11	YC001-YC006
D46061P	31		0031	20	PA	D48323P	1		AE0801B	14	YC007-YC030
D46061P	32		0032	20	PA	D48323P	2		AE0801C	11	YC001-YC006
D46061P	32		0032	20	PA	D48323P	2		AE0801B	14	YC007-YC030
D46061P	33		0033	20	PA	D48323P	3		AE0801C	11	YC001-YC006
D46061P	33		0033	20	PA	D48323P	3		AE0801B	14	YC007-YC030
D46061P	24		0045	20	PA	D48323P	1		AE0801B	14	YM643-YM652
D46061P	25		0046	20	PA	D48323P	2		AE0801B	14	YM643-YM652
D46061P	26		0047	20	PA	D48323P	3		AE0801B	14	YM643-YM652

SPARE WIRE LIST

D280A103

91-21-12

Section AP0600B

Page 4 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To					Pos	Effectivity	
				GA	TY	Equip	Term	Type	Matewith				
AP0900A	03	W0001	NA2	DISCONNECT BRACKET-P9-FWD INSTR PANEL									
D04207J	33		0168	22	PA	TB0201Z	A001	1A					YC001-YC002, YC007-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
AP0900A	03	W2207	NA2	DISCONNECT BRACKET-P9-FWD INSTR PANEL									
D04207P	13		0003	22	PA	D04267P	A13		AE0301A		06	ALL	
D04207P	14		0004	22	PA	D04267P	A14		AE0301A		06	ALL	
D04207P	31		0031	22	PA	D04267P	B11		AE0301A		06	ALL	
D04207P	32		0032	22	PA	D04267P	B12		AE0301A		06	ALL	
D04207P	37		0037	22	PA	D04267P	B17		AE0301A		06	ALL	
D04207P	38		0038	22	PA	D04267P	B18		AE0301A		06	ALL	
D04207P	40		0040	22	CQ	D04267P	B19		AE0301A		06	ALL	
D04207P	41		0041	22	CQ	D04267P	B20		AE0301A		06	ALL	
D04207P	6		2003B	24	Y2	D04267P	A06		AE0301A		06	ALL	
D04207P	5		2003R	24	Y2	D04267P	A05		AE0301A		06	ALL	
D04207P	S/R		2003Z			D04267P	PERG	1F	AE0301A		06	ALL	
D04207P	8		2004B	24	Y2	D04267P	A08		AE0301A		06	ALL	
D04207P	7		2004R	24	Y2	D04267P	A07		AE0301A		06	ALL	
D04207P	S/R		2004Z			D04267P	PERG	1F	AE0301A		06	ALL	
D04207P	16		2008B	24	Y2	D04267P	A16		AE0301A		06	ALL	
D04207P	15		2008R	24	Y2	D04267P	A15		AE0301A		06	ALL	
D04207P	S/R		2008Z			D04267P	PERG	1F	AE0301A		06	ALL	
D04207P	20		2010B	24	Y2	D04267P	A20		AE0301A		06	ALL	
D04207P	19		2010R	24	Y2	D04267P	A19		AE0301A		06	ALL	
D04207P	S/R		2010Z			D04267P	PERG	1F	AE0301A		06	ALL	
AP0900A	05	W5514	SA2	DISCONNECT BRACKET-P9-FWD INSTR PANEL									
D40824P	28		0502	24	B6	D40826J		7	AE0104A		27	YC001-YC030, YK901-YM670	
D40824P	29		0503	24	B6	D40826J		16	AE0104A		27	YC001-YC030, YK901-YM670	
D40824P	30		0504	24	B6	D40826J		17	AE0104A		27	YC001-YC030, YK901-YM670	
D40824P	31		0505	24	B6	D40826J		18	AE0104A		27	YC001-YC030, YK901-YM670	

SPARE WIRE LIST

D280A103

91-21-12

Section AP0900A

Page 1

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To					Pos	Effectivity		
				GA	TY	Equip	Term	Type	Matewith					
AP0900A	05	W5514	SA2	DISCONNECT BRACKET-P9-FWD INSTR PANEL (continued)										
D40824P	19		5564	20	PA	D40826J	6		AE0104A		27	YC001-YC030, YK901-YM670		
D40824P	20		5565	20	PA	D40826J	8		AE0104A		27	YC001-YC030, YK901-YM670		
D40824P	32		5570	20	PA	D40830P	1		AP1800B		07	YC001-YC030, YK901-YM670		
D40824P	33		5571	20	PA	D40830P	2		AP1800B		07	YC001-YC030, YK901-YM670		
AP0900A	06	W0003	NB2	DISCONNECT BRACKET-P9-FWD INSTR PANEL										
D04237J	33		0609	22	PA	D09004P	CAP	Y	P003-07			YC001-YC002, YC007		
D04237J	33		0609	22	PA	D01205	CAP	Y	P003-07			YC008-YC030, YK901-YL429, YM643-YM652		
AP0900A	06	W2237	NB2	DISCONNECT BRACKET-P9-FWD INSTR PANEL										
D04237P	13		0003	22	PA	D04297P	A13		AE0301A		31	ALL		
D04237P	14		0004	22	PA	D04297P	A14		AE0301A		31	ALL		
D04237P	29		0029	22	PA	D04297P	B09		AE0301A		31	ALL		
D04237P	30		0030	22	PA	D04297P	B10		AE0301A		31	ALL		
D04237P	31		0031	22	PA	D04297P	B11		AE0301A		31	ALL		
D04237P	32		0032	22	PA	D04297P	B12		AE0301A		31	ALL		
D04237P	37		0037	22	PA	D04297P	B17		AE0301A		31	ALL		
D04237P	38		0038	22	PA	D04297P	B18		AE0301A		31	ALL		
D04237P	40		0040	22	CQ	D04297P	B19		AE0301A		31	ALL		
D04237P	41		0041	22	CQ	D04297P	B20		AE0301A		31	ALL		
D04237P	6		2003B	24	Y2	D04297P	A06		AE0301A		31	ALL		
D04237P	5		2003R	24	Y2	D04297P	A05		AE0301A		31	ALL		
D04237P	S/R		2003Z			D04297P	PERG	1F	AE0301A		31	ALL		
D04237P	8		2004B	24	Y2	D04297P	A08		AE0301A		31	ALL		
D04237P	7		2004R	24	Y2	D04297P	A07		AE0301A		31	ALL		
D04237P	S/R		2004Z			D04297P	PERG	1F	AE0301A		31	ALL		
D04237P	16		2008B	24	Y2	D04297P	A16		AE0301A		31	ALL		
D04237P	15		2008R	24	Y2	D04297P	A15		AE0301A		31	ALL		
D04237P	S/R		2008Z			D04297P	PERG	1F	AE0301A		31	ALL		
D04237P	18		2009B	24	Y2	D04297P	A18		AE0301A		31	ALL		
D04237P	17		2009R	24	Y2	D04297P	A17		AE0301A		31	ALL		

SPARE WIRE LIST

D280A103

91-21-12

Section AP0900A

Page 2

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description		To						
						Equip	Term	Type	Matewith	Pos	Effectivity	
AP0900A	06	W2237	NB2	DISCONNECT BRACKET-P9-FWD INSTR PANEL (continued)								
D04237P	S/R		2009Z			D04297P	PERG	1F	AE0301A	31	ALL	
D04237P	20		2010B	24	Y2	D04297P	A20		AE0301A	31	ALL	
D04237P	19		2010R	24	Y2	D04297P	A19		AE0301A	31	ALL	
D04237P	S/R		2010Z			D04297P	PERG	1F	AE0301A	31	ALL	
D04237P	22		2011B	24	Y2	D04297P	B02		AE0301A	31	ALL	
D04237P	21		2011R	24	Y2	D04297P	B01		AE0301A	31	ALL	
D04237P	S/R		2011Z			D04297P	PERG	1F	AE0301A	31	ALL	
D04237P	24		2012B	24	Y2	D04297P	B04		AE0301A	31	ALL	
D04237P	23		2012R	24	Y2	D04297P	B03		AE0301A	31	ALL	
D04237P	S/R		2012Z			D04297P	PERG	1F	AE0301A	31	ALL	
AP0900A	09	W0003	NB2	DISCONNECT BRACKET-P9-FWD INSTR PANEL								
D04221J	13		0595	22	CQ	D03991		6	P003-01		YK901-YK906	
AP0900A	14	W2030	SN2	DISCONNECT BRACKET-P9-FWD INSTR PANEL								
D40924P	5		5516	20	PA	D46052P		9	AP0600B	11	ALL	
D40924P	3		5522	20	PA	D46052P		11	AP0600B	11	ALL	
D40924P	7		5523	20	PA	D46052P		12	AP0600B	11	ALL	
D40924P	25		5526	20	PA	D46052P		26	AP0600B	11	ALL	
D40924P	26		5527	20	PA	D46052P		27	AP0600B	11	ALL	
AP0900A	16	W2383	RB2	DISCONNECT BRACKET-P9-FWD INSTR PANEL								
D46033P	5		0015	24	PK	D46065P		15	AP0600B	15	YC001-YC030, YK901-YM670	
D46033P	9		0019	20	PA	D46065P		19	AP0600B	15	YC001-YC030, YK901-YM670	
D46033P	1		0031	20	PA	D46065P		31	AP0600B	15	YC001-YC030, YK901-YM670	
D46033P	2		0032	20	PA	D46065P		32	AP0600B	15	YC001-YC030	
AP0900A	17	W2175	LA2	DISCONNECT BRACKET-P9-FWD INSTR PANEL								
D41823P	4		0016	16	PA	D41803P		16	AP1800B	06	YC031-YM670	
D41823P	9		0019	20	PA	D41803P		19	AP1800B	06	YC031-YM670	
D41823P	10		0020	16	PA	D41803P		20	AP1800B	06	YC031-YM670	
D41823P	1		0021	20	PA	D41803P		21	AP1800B	06	YC031-YM670	
D41823P	3		0023	20	PA	D41803P		23	AP1800B	06	YC031-YM670	
D41823P	5		0025	20	PA	D41803P		25	AP1800B	06	YC031-YM670	

SPARE WIRE LIST

D280A103

91-21-12

Section AP0900A

Page 3

Aug 10/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY		To Equip	Term	Type	Matewith	Pos	Effectivity
AP0900A	19	W2651	SA2	DISCONNECT BRACKET-P9-FWD INSTR PANEL							
D41833P	2		0018	20	PA	D41807P	18		AP1800B	08	YC001-YC030, YK901-YM670
D41833P	3		0020	20	PA	D41807P	20		AP1800B	08	YC001-YC030, YK901-YM670
D41833P	5		0021	20	PA	D41807P	21		AP1800B	08	YC001-YC030, YK901-YM670
D41833P	6		0022	20	PA	D41807P	22		AP1800B	08	YC001-YC030, YK901-YM670
AP0900A	23	W2251	RF2	DISCONNECT BRACKET-P9-FWD INSTR PANEL							
D04251P	3		0003	22	PA	D04311J	3		AE0104A	06	ALL
D04251P	7		0007	22	CQ	D04311J	7		AE0104A	06	YK901-YM670
D04251P	9		0009	22	CQ	D04311J	9		AE0104A	06	ALL
D04251P	12		0012	20	PA	D04311J	12		AE0104A	06	ALL
D04251P	24		0024	22	CQ	D04311J	24		AE0104A	06	YC001-YC050
D04251P	20		2003B	24	Y2	D04311J	20		AE0104A	06	ALL
D04251P	19		2003R	24	Y2	D04311J	19		AE0104A	06	ALL
D04251P	S/R		2003Z			D04311J	S/R		AE0104A	06	ALL
D04251P	22		2004B	24	Y2	D04311J	22		AE0104A	06	ALL
D04251P	21		2004R	24	Y2	D04311J	21		AE0104A	06	ALL
D04251P	S/R		2004Z			D04311J	S/R		AE0104A	06	ALL

SPARE WIRE LIST

D280A103

91-21-12

Section AP0900A

Page 4 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To		Matewith	Pos	Effectivity
				GA	TY	Equip	Term			
AP1800A	01	W3150	LN2*	DISCONNECT BRACKET-P5-P18 INTEGRATION						
D40198P	1		0901	20	PA	D40270P	2	D40270J		ALL
D40198P	2		0902	20	PA	D40270P	3	D40270J		ALL
D40198P	3		0903	20	PA	D40270P	8	D40270J		ALL
D40198P	4		0904	20	PA	D40270P	9	D40270J		ALL
AP1800A	05	W2218	RB2	DISCONNECT BRACKET-P5-P18 INTEGRATION						
D40538P	4		8006	20	PA	D40542P	B20	AE0401A	51	YC001-YC030, YK901-YL430
AP1800A	06	W3144	LN2*	DISCONNECT BRACKET-P5-P18 INTEGRATION						
D40220P	13		0013	20	PA	D03738	CAP	Y	M01418	ALL
D40220P	14		0014	20	PA	D03738	CAP	Y	M01418	ALL
D40220P	15		0015	20	PA	D03732	CAP	Y	M01415	ALL
D40220P	16		0016	20	PA	D03732	CAP	Y	M01415	ALL
D40220P	21		0021	16	PA	D40216P	7	AB0340A	02	YK901-YL430
D40220P	25		0025	20	PA	D03738	CAP	Y	M01418	YC001-YK906
D40220P	26		0026	20	PA	D03732	CAP	Y	M01415	YC001-YK906
AP1800A	07	W4250	RN2*	DISCONNECT BRACKET-P5-P18 INTEGRATION						
D40298P	1		0901	20	PA	D40272P	2	D40272J		ALL
D40298P	3		0903	20	PA	D40272P	8	D40272J		ALL
D40298P	4		0904	20	PA	D40272P	9	D40272J		ALL
AP1800A	08	W2104	LA1	DISCONNECT BRACKET-P5-P18 INTEGRATION						
D40504P	12		6012	22	CQ	D40506P	A09	AE0202A	11	YC001-YK917, YL421-YL428, YL430-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section AP1800A

Page 1 End

Aug 10/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY		To Equip	Term	Type	Matewith	Pos	Effectivity
AP1800B	01	W2201	LA2	DISCONNECT BRACKET-LOWER P18 PANEL							
D41805P	1		0001	20	PA	D41817P	1		AE0301A	21	ALL
D41805P	2		0002	20	PA	D41817P	2		AE0301A	21	ALL
D41805P	3		0003	20	PA	D41817P	3		AE0301A	21	ALL
D41805P	8		0008	20	PA	D41819P	8		AE0302A	27	YC001-YK909
D41805P	8	VP	0008	20	PA	D41819P	8		AE0302A	27	YM643-YM646
D41805P	9		0009	20	PA	D43313P	9		AE0303A	28	YC001-YC013
D41805P	10		0010	20	PA	D41817P	12		AE0301A	21	ALL
D41805P	11		0011	20	PA	D41817P	11		AE0301A	21	ALL
D41805P	13		0013	20	PA	D41819P	13		AE0302A	27	ALL
D41805P	14		0014	20	PA	D41819P	14		AE0302A	27	YC001-YC013
D41805P	15		0015	14	PA	D41819P	15		AE0302A	27	YC001-YK909
D41805P	16		0016	20	PA	D41819P	16		AE0302A	27	ALL
D41805P	17		0017	20	PA	D41819P	17		AE0302A	27	ALL
D41805P	18		0018	20	PA	D41819P	18		AE0302A	27	ALL
D41805P	19		0019	16	PA	D41817P	4		AE0301A	21	ALL
D41805P	21		0021	20	PA	D41817P	5		AE0301A	21	ALL
D41805P	22		0022	22	PA	D43313P	12		AE0303A	28	YC001-YC050
D41805P	23		0023	16	PA	D43313P	4		AE0303A	28	YC001-YL430, YM647-YM670
D41805P	23		0023	22	PA	D43313P	4		AE0303A	28	YM643-YM646
D41805P	24		0024	20	PA	D43313P	2		AE0303A	28	YC001-YL430, YM647-YM670
D41805P	24		0024	22	PA	D43313P	2		AE0303A	28	YM643-YM646
D41805P	25		0025	22	PA	D43313P	5		AE0303A	28	YK901-YM670
D41805P	26		0026	22	PA	D43313P	6		AE0303A	28	YK901-YK909, YM643-YM646
D41805P	26		0026	22	CQ	D43313P	6		AE0303A	28	YK910-YL430
D41805P	27		0027	16	PA	D43313P	7		AE0303A	28	YC001-YL430, YM647-YM670
D41805P	27		0027	22	PA	D43313P	7		AE0303A	28	YM643-YM646
D41805P	28		0028	20	PA	D43313P	8		AE0303A	28	YC001-YK909
D41805P	28	VP	0028	22	PA	D43313P	8		AE0303A	28	YM643-YM646
AP1800B	02	W5156	SA2*	DISCONNECT BRACKET-LOWER P18 PANEL							
D40576P	8		0667	24	PK	D40666P	21		AJ0022	03	YC004-YC030, YK901-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section AP1800B

Page 1

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description		To					Effectivity	
Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity	
AP1800B	03	W2101	LA2	DISCONNECT BRACKET-LOWER P18 PANEL								
D41801P	1		0001	20	PA	D41811P	A01		AE0101A	13	ALL	
D41801P	2		0002	20	PA	D41811P	A02		AE0101A	13	ALL	
D41801P	3		0003	20	PA	D41811P	A03		AE0101A	13	ALL	
D41801P	8		0008	22	PA	D41811P	A08		AE0101A	13	ALL	
D41801P	9		0009	22	PA	D41811P	A09		AE0101A	13	YC003-YM670	
D41801P	10		0010	20	PA	D41811P	A10		AE0101A	13	ALL	
D41801P	11		0011	20	PA	D41811P	B01		AE0101A	13	ALL	
D41801P	12		0012	20	PA	D41811P	B02		AE0101A	13	ALL	
D41801P	13		0013	20	PA	D41811P	B03		AE0101A	13	ALL	
D41801P	14		0014	20	PA	D41811P	B04		AE0101A	13	ALL	
D41801P	15		0015	20	PA	D41811P	B05		AE0101A	13	ALL	
D41801P	16		0016	20	PA	D40811P	6		AE0801A	19	YC008-YC011	
D41801P	17		0017	20	PA	D40811P	7		AE0801A	19	YC008-YC011	
D41801P	18		0018	20	PA	D40811P	8		AE0801A	19	YC008-YC011	
D41801P	19		0019	20	PA	D40811P	9		AE0801A	15	YC001-YC006	
D41801P	19		0019	20	PA	D40811P	9		AE0801A	19	YC007-YC011, YK907-YL430	
D41801P	20		0020	20	PA	D40811P	10		AE0801A	15	YC001-YC006	
D41801P	20		0020	20	PA	D40811P	10		AE0801A	19	YC007-YC011, YK907-YL430	
D41801P	21		0021	20	PA	D40811P	11		AE0801A	15	YC001-YC006	
D41801P	21		0021	20	PA	D40811P	11		AE0801A	19	YC007-YC011, YK907-YL430	
D41801P	22		0022	20	PA	D40811P	12		AE0801A	15	YC001-YC006	
D41801P	22		0022	20	PA	D40811P	12		AE0801A	19	YC007-YC011, YK907-YL430	
AP1800B	06	W2175	LA2	DISCONNECT BRACKET-LOWER P18 PANEL								
D41803P	6		0006	22	PA	D41821P	A06		AE0101A	24	ALL	
D41803P	8		0008	20	PA	D41821P	A08		AE0101A	24	ALL	
D41803P	9		0009	22	PA	D41821P	A09		AE0101A	24	ALL	
D41803P	10		0010	22	PA	D41821P	A10		AE0101A	24	ALL	
D41803P	12		0012	20	PA	D41821P	B02		AE0101A	24	ALL	
D41803P	13		0013	20	PA	D41821P	B03		AE0101A	24	ALL	
D41803P	15		0015	20	PA	D41821P	B05		AE0101A	24	ALL	
D41803P	16		0016	16	PA	D41823P	4		AP0900A	17	YC031-YM670	
D41803P	17		0017	20	PA	D41821P	B07		AE0101A	24	ALL	
D41803P	19		0019	20	PA	D41823P	9		AP0900A	17	YC031-YM670	

SPARE WIRE LIST

D280A103

91-21-12

Section AP1800B

Page 2

Aug 10/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY		To Equip Term		Type	Matewith	Pos	Effectivity
AP1800B	06	W2175	LA2	DISCONNECT BRACKET-LOWER P18 PANEL (continued)							
D41803P	20		0020	16	PA	D41823P	10		AP0900A	17	YC031-YM670
D41803P	21		0021	20	PA	D41823P	1		AP0900A	17	YC031-YM670
D41803P	23		0023	20	PA	D41823P	3		AP0900A	17	YC031-YM670
D41803P	24		0024	16	PA	D41821P	G		AE0101A	24	YC001-YC019
D41803P	CAP	Y	0024	16	PA	D41821P	G		AE0101A	24	YC020-YM670
D41803P	25		0025	20	PA	D41823P	5		AP0900A	17	YC031-YM670
AP1800B	07	W5514	SA2	DISCONNECT BRACKET-LOWER P18 PANEL							
D40830P	1		5570	20	PA	D40824P	32		AP0900A	05	YC001-YC030, YK901-YM670
D40830P	2		5571	20	PA	D40824P	33		AP0900A	05	YC001-YC030, YK901-YM670
D40830P	3		5572	20	PA	D40826J	12		AE0104A	27	YC001-YC030, YK901-YM670
D40830P	4		5573	20	PA	D40826J	13		AE0104A	27	YC001-YC030, YK901-YM670
AP1800B	08	W2651	SA2	DISCONNECT BRACKET-LOWER P18 PANEL							
D41807P	1		0001	20	PA	D41827J	11		AE0102A	06	YC001-YC030, YK901-YM670
D41807P	9		0009	22	CQ	SP02186		S			YK901-YK920, YM643-YM670
D41807P	27		0010	20	PA	SP02085		S			YK901-YM670
D41807P	12		0012	20	PA	D41831P	1		AE0103A	17	YC001-YC030, YK901-YM670
D41807P	13		0013	20	PA	D41831P	2		AE0103A	17	YC001-YC030, YK901-YM670
D41807P	16		0016	20	PA	D41827J	8		AE0102A	06	YC001-YC002
D41807P	18		0018	20	PA	D41833P	2		AP0900A	19	YC001-YC030, YK901-YM670
D41807P	6		0019	16	PA	D41831P	7		AE0103A	17	YK901-YM670
D41807P	20		0020	20	PA	D41833P	3		AP0900A	19	YC001-YC030, YK901-YM670
D41807P	21		0021	20	PA	D41833P	5		AP0900A	19	YC001-YC030, YK901-YM670
D41807P	22		0022	20	PA	D41833P	6		AP0900A	19	YC001-YC030, YK901-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section AP1800B

Page 3

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>						
Equip	Term	Type	Wire No.		GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity	
AP1800B		09	W2653	SA2	DISCONNECT BRACKET-LOWER P18 PANEL								
D41809P		1		0001	20	PA	D41837P	1		AE0301A	22	ALL	
D41809P		2		0002	22	PA	D41837P	2		AE0301A	22	ALL	
D41809P		11		0011	20	PA	D41839P	1		AE0302A	26	ALL	
D41809P		12		0012	20	PA	D41839P	2		AE0302A	26	ALL	
D41809P		19		0019	16	PA	D41837P	7		AE0301A	22	ALL	
D41809P		23		0023	18	PA	D41837P	10		AE0301A	22	ALL	

SPARE WIRE LIST

D280A103

91-21-12

Section AP1800B

Page 4 End

Aug 10/2009



From Matewith From	Pos	Bundle	Sep	Description		To						
Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity	
AS0001L	01	W1168	LB2	DISCONNECT BRACKET-FIRE WALL(STRUT SIDE)								
D30260	39		2016B	20	HQ	D30084	31		AW0258L	03	YC001-YC011	
D30260	39		2016B	20	E5	D30084	31		AW0258L	03	YC012-YM670	
D30260	22		2016R	20	HQ	D30084	30		AW0258L	03	YC001-YC011	
D30260	22		2016R	20	E5	D30084	30		AW0258L	03	YC012-YM670	
D30260	PERB		2016Z			D30084	PERB		AW0258L	03	ALL	
AS0001L	03	W1170	LA2	DISCONNECT BRACKET-FIRE WALL(STRUT SIDE)								
D30212	2		2005B	20	HQ	D08056P	14		AW0258L	06	ALL	
D30212	1		2005R	20	HQ	D08056P	4		AW0258L	06	ALL	
D30212	S/R		2005Z			D08056P	S/R		AW0258L	06	ALL	
AS0001L	04	W1170	LA2	DISCONNECT BRACKET-FIRE WALL(STRUT SIDE)								
D30252	4		2004B	20	HQ	D08056P	13		AW0258L	06	ALL	
D30252	3		2004R	20	HQ	D08056P	12		AW0258L	06	ALL	
D30252	S/R		2004Z			D08056P	S/R		AW0258L	06	ALL	
AS0001L	05	W1166	SB2	DISCONNECT BRACKET-FIRE WALL(STRUT SIDE)								
D30220	2		2001B	20	HQ	D30064	16		AW0258L	05	ALL	
D30220	1		2001R	20	HQ	D30064	15		AW0258L	05	ALL	
D30220	S/R		2001Z			D30064	S/R		AW0258L	05	ALL	
AS0001L	06	W1170	LA2	DISCONNECT BRACKET-FIRE WALL(STRUT SIDE)								
D30228	16		2006B	20	HQ	D08056P	10		AW0258L	06	ALL	
D30228	15		2006R	20	HQ	D08056P	2		AW0258L	06	ALL	
D30228	S/R		2006Z			D08056P	S/R		AW0258L	06	ALL	
AS0001L	07	W1166	SB2	DISCONNECT BRACKET-FIRE WALL(STRUT SIDE)								
D30256	4		2002B	20	HQ	D30064	18		AW0258L	05	ALL	
D30256	3		2002R	20	HQ	D30064	17		AW0258L	05	ALL	
D30256	S/R		2002Z			D30064	S/R		AW0258L	05	ALL	
AS0001L	08	W1168	LB2	DISCONNECT BRACKET-FIRE WALL(STRUT SIDE)								
D30204	13		2015B	20	HQ	D30084	14		AW0258L	03	YC001-YC011	
D30204	13		2015B	20	E5	D30084	14		AW0258L	03	YC012-YM670	
D30204	4		2015R	20	HQ	D30084	5		AW0258L	03	YC001-YC011	
D30204	4		2015R	20	E5	D30084	5		AW0258L	03	YC012-YM670	
D30204	PERB		2015Z			D30084	PERB		AW0258L	03	ALL	

SPARE WIRE LIST

D280A103

91-21-12

Section AS0001L

Page 1

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From	Matewith	Pos	Bundle	Sep	Description		To					Effectivity
							Equip	Term	Type	Matewith	Pos	
I	AS0001L	09	W1164	SA1	DISCONNECT BRACKET-FIRE WALL(STRUT SIDE)							
	D30234	26		2005B	20	HQ	D30016	21	AW0258L	04	YC001-YK910, YK918, YL421-YL423, YM645-YM646	
	D30234	26		2005B	20	HQ	D30016	30	AW0258L	04	YK911-YK917, YK919-YL401, YL424-YM643, YM647-YM670	
	D30234	12		2005R	20	HQ	D30016	20	AW0258L	04	YC001-YK910, YK918, YL421-YL423, YM645-YM646	
	D30234	12		2005R	20	HQ	D30016	32	AW0258L	04	YK911-YK917, YK919-YL401, YL424-YM643, YM647-YM670	
I	D30234	S/R		2005Z			D30016	S/R	AW0258L	04	ALL	
I	D30234	37		2006B	20	HQ	D30016	37	AW0258L	04	ALL	
I	D30234	20		2006R	20	HQ	D30016	36	AW0258L	04	ALL	
I	D30234	S/R		2006Z			D30016	S/R	AW0258L	04	ALL	

SPARE WIRE LIST

D280A103

91-21-12

Section AS0001L

Page 2 End

Aug 10/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To		Matewith	Pos	Effectivity
				GA	TY	Equip	Term			
AS0001R	01	W1268	RB2	DISCONNECT BRACKET-FIRE WALL(STRUT SIDE)						
D30460	39		2016B	20	HQ	D30184	31	AW0258R	03	YC001-YC011
D30460	39		2016B	20	E5	D30184	31	AW0258R	03	YC012-YM670
D30460	22		2016R	20	HQ	D30184	30	AW0258R	03	YC001-YC011
D30460	22		2016R	20	E5	D30184	30	AW0258R	03	YC012-YM670
D30460	PERB		2016Z			D30184	PERB	AW0258R	03	ALL
AS0001R	03	W1270	RA2	DISCONNECT BRACKET-FIRE WALL(STRUT SIDE)						
D30412	2		2005B	20	HQ	D08156P	14	AW0258R	06	ALL
D30412	1		2005R	20	HQ	D08156P	4	AW0258R	06	ALL
D30412	S/R		2005Z			D08156P	S/R	AW0258R	06	ALL
AS0001R	04	W1270	RA2	DISCONNECT BRACKET-FIRE WALL(STRUT SIDE)						
D30452	4		2004B	20	HQ	D08156P	13	AW0258R	06	ALL
D30452	3		2004R	20	HQ	D08156P	12	AW0258R	06	ALL
D30452	S/R		2004Z			D08156P	S/R	AW0258R	06	ALL
AS0001R	05	W1266	SB2	DISCONNECT BRACKET-FIRE WALL(STRUT SIDE)						
D30420	2		2001B	20	HQ	D30164	16	AW0258R	05	ALL
D30420	1		2001R	20	HQ	D30164	15	AW0258R	05	ALL
D30420	S/R		2001Z			D30164	S/R	AW0258R	05	ALL
AS0001R	06	W1270	RA2	DISCONNECT BRACKET-FIRE WALL(STRUT SIDE)						
D30428	16		2006B	20	HQ	D08156P	10	AW0258R	06	ALL
D30428	15		2006R	20	HQ	D08156P	2	AW0258R	06	ALL
D30428	S/R		2006Z			D08156P	S/R	AW0258R	06	ALL
AS0001R	07	W1266	SB2	DISCONNECT BRACKET-FIRE WALL(STRUT SIDE)						
D30456	4		2002B	20	HQ	D30164	18	AW0258R	05	ALL
D30456	3		2002R	20	HQ	D30164	17	AW0258R	05	ALL
D30456	S/R		2002Z			D30164	S/R	AW0258R	05	ALL
AS0001R	08	W1268	RB2	DISCONNECT BRACKET-FIRE WALL(STRUT SIDE)						
D30404	13		2015B	20	HQ	D30184	14	AW0258R	03	YC001-YC011
D30404	13		2015B	20	E5	D30184	14	AW0258R	03	YC012-YM670
D30404	4		2015R	20	HQ	D30184	5	AW0258R	03	YC001-YC011
D30404	4		2015R	20	E5	D30184	5	AW0258R	03	YC012-YM670
D30404	PERB		2015Z			D30184	PERB	AW0258R	03	ALL

SPARE WIRE LIST

D280A103

91-21-12

Section AS0001R

Page 1

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To					Pos	Effectivity	
				GA	TY	Equip	Term	Type	Matewith				
AS0001R	09	W1264	SN1	DISCONNECT BRACKET-FIRE WALL(STRUT SIDE)									
D30434	26		2005B	20	HQ	D30116	21		AW0258R		04	YC001-YK910, YK918, YL421-YL423, YM645-YM646	
D30434	26		2005B	20	HQ	D30116	30		AW0258R		04	YK911-YK917, YK919-YL401, YL424-YM643, YM647-YM670	
D30434	12		2005R	20	HQ	D30116	20		AW0258R		04	YC001-YK910, YK918, YL421-YL423, YM645-YM646	
D30434	12		2005R	20	HQ	D30116	32		AW0258R		04	YK911-YK917, YK919-YL401, YL424-YM643, YM647-YM670	
D30434	S/R		2005Z			D30116	S/R		AW0258R		04	ALL	
D30434	37		2006B	20	HQ	D30116	37		AW0258R		04	ALL	
D30434	20		2006R	20	HQ	D30116	36		AW0258R		04	ALL	
D30434	S/R		2006Z			D30116	S/R		AW0258R		04	ALL	

SPARE WIRE LIST

D280A103

91-21-12

Section AS0001R

Page 2 End

Aug 10/2009



From Matewith	Pos	Bundle	Sep	Description		To							
From				GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity		
Equip	Term	Type	Wire No.										
AS0002L	02	W1172	LA2	DISCONNECT BRACKET-T/R LEFT STRUT									
D30202	11		2014B	20	RL	D30042	12		AW0258L	02	YC001-YC007		
D30202	11		2014B	20	HQ	D30042	12		AW0258L	02	YC008-YC011		
D30202	11		2014B	20	E5	D30042	12		AW0258L	02	YC012-YM670		
D30202	2		2014R	20	RL	D30042	3		AW0258L	02	YC001-YC007		
D30202	2		2014R	20	HQ	D30042	3		AW0258L	02	YC008-YC011		
D30202	2		2014R	20	E5	D30042	3		AW0258L	02	YC012-YM670		
D30202	S/R		2014Z			D30042	PERB		AW0258L	02	YC001-YC007		
D30202	PERB		2014Z			D30042	PERB		AW0258L	02	YC008-YM670		

SPARE WIRE LIST

D280A103

91-21-12

Section AS0002L

Page 1 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>		<u>Pos</u>	<u>Effectivity</u>		
Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith			
AS0002R		02	W1272	RA2	DISCONNECT BRACKET-T/R RIGHT STRUT							
D30402		11		2014B	20	RL	D30142		12	AW0258R	02	YC001-YC007
D30402		11		2014B	20	HQ	D30142		12	AW0258R	02	YC008-YC011
D30402		11		2014B	20	E5	D30142		12	AW0258R	02	YC012-YM670
D30402		2		2014R	20	RL	D30142		3	AW0258R	02	YC001-YC007
D30402		2		2014R	20	HQ	D30142		3	AW0258R	02	YC008-YC011
D30402		2		2014R	20	E5	D30142		3	AW0258R	02	YC012-YM670
D30402		S/R		2014Z			D30142		PERB	AW0258R	02	YC001-YC007
D30402		PERB		2014Z			D30142		PERB	AW0258R	02	YC008-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section AS0002R

Page 1 End

Aug 10/2009



From	Matewith	Pos	Bundle	Sep	Description		To							
Equip	Term	Type	Wire No.		GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity		
AS0003L		02	W1172	LA2	DISCONNECT BRACKET T/R LEFT STRUT									
D30206		11		2016B	20	RL	D30042	14		AW0258L	02	YC001-YC007		
D30206		11		2016B	20	HQ	D30042	14		AW0258L	02	YC008-YC011		
D30206		11		2016B	20	E5	D30042	14		AW0258L	02	YC012-YM670		
D30206		2		2016R	20	RL	D30042	5		AW0258L	02	YC001-YC007		
D30206		2		2016R	20	HQ	D30042	32		AW0258L	02	YC008-YC011		
D30206		2		2016R	20	E5	D30042	32		AW0258L	02	YC012-YM670		
D30206		S/R		2016Z			D30042	PERB		AW0258L	02	YC001-YC007		
D30206		PERB		2016Z			D30042	PERB		AW0258L	02	YC008-YM670		

SPARE WIRE LIST

D280A103

91-21-12

Section AS0003L

Page 1 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From	Pos	Bundle	Sep	Description		To							
Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity		
AS0003R	02	W1272	RA2	DISCONNECT BRACKET-T/R RIGHT STRUT									
D30406	11		2016B	20	RL	D30142	14		AW0258R	02	YC001-YC007		
D30406	11		2016B	20	HQ	D30142	14		AW0258R	02	YC008-YC011		
D30406	11		2016B	20	E5	D30142	14		AW0258R	02	YC012-YM670		
D30406	2		2016R	20	RL	D30142	5		AW0258R	02	YC001-YC007		
D30406	2		2016R	20	HQ	D30142	32		AW0258R	02	YC008-YC011		
D30406	2		2016R	20	E5	D30142	32		AW0258R	02	YC012-YM670		
D30406	S/R		2016Z			D30142	PERB		AW0258R	02	YC001-YC007		
D30406	PERB		2016Z			D30142	PERB		AW0258R	02	YC008-YM670		

SPARE WIRE LIST

D280A103

91-21-12

Section AS0003R

Page 1 End

Aug 10/2009



From Matewith From	Pos	Bundle	Sep	Description		To						
Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity	
AW0258L	02	W1172	LA2	DISCONNECT BRACKET								
D30042	12		2014B	20	RL	D30202	11		AS0002L	02	YC001-YC007	
D30042	12		2014B	20	HQ	D30202	11		AS0002L	02	YC008-YC011	
D30042	12		2014B	20	E5	D30202	11		AS0002L	02	YC012-YM670	
D30042	3		2014R	20	RL	D30202	2		AS0002L	02	YC001-YC007	
D30042	3		2014R	20	HQ	D30202	2		AS0002L	02	YC008-YC011	
D30042	3		2014R	20	E5	D30202	2		AS0002L	02	YC012-YM670	
D30042	PERB		2014Z			D30202	S/R		AS0002L	02	YC001-YC007	
D30042	PERB		2014Z			D30202	PERB		AS0002L	02	YC008-YM670	
D30042	14		2016B	20	RL	D30206	11		AS0003L	02	YC001-YC007	
D30042	14		2016B	20	HQ	D30206	11		AS0003L	02	YC008-YC011	
D30042	14		2016B	20	E5	D30206	11		AS0003L	02	YC012-YM670	
D30042	5		2016R	20	RL	D30206	2		AS0003L	02	YC001-YC007	
D30042	32		2016R	20	HQ	D30206	2		AS0003L	02	YC008-YC011	
D30042	32		2016R	20	E5	D30206	2		AS0003L	02	YC012-YM670	
D30042	PERB		2016Z			D30206	S/R		AS0003L	02	YC001-YC007	
D30042	PERB		2016Z			D30206	PERB		AS0003L	02	YC008-YM670	
AW0258L	02	W1174	LA2	DISCONNECT BRACKET								
D30040	12		2004B	20	HQ	D39919	12		AC0520		YC001-YC007	
D30040	3		2004R	20	HQ	D39919	3		AC0520		YC001-YC007	
D30040	PERB		2004Z			D39919	PERB		AC0520		YC001-YC007	
D30040	14		2005B	20	HQ	D39919	14		AC0520		YC001-YC007	
D30040	32		2005R	20	HQ	D39919	32		AC0520		YC001-YC007	
D30040	PERB		2005Z			D39919	PERB		AC0520		YC001-YC007	
AW0258L	03	W1168	LB2	DISCONNECT BRACKET								
D30084	14		2015B	20	HQ	D30204	13		AS0001L	08	YC001-YC011	
D30084	14		2015B	20	E5	D30204	13		AS0001L	08	YC012-YM670	
D30084	5		2015R	20	HQ	D30204	4		AS0001L	08	YC001-YC011	
D30084	5		2015R	20	E5	D30204	4		AS0001L	08	YC012-YM670	
D30084	PERB		2015Z			D30204	PERB		AS0001L	08	ALL	
D30084	31		2016B	20	HQ	D30260	39		AS0001L	01	YC001-YC011	
D30084	31		2016B	20	E5	D30260	39		AS0001L	01	YC012-YM670	
D30084	30		2016R	20	HQ	D30260	22		AS0001L	01	YC001-YC011	
D30084	30		2016R	20	E5	D30260	22		AS0001L	01	YC012-YM670	
D30084	PERB		2016Z			D30260	PERB		AS0001L	01	ALL	

SPARE WIRE LIST

D280A103

91-21-12

Section AW0258L

Page 1

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To					Pos	Effectivity	
				GA	TY	Equip	Term	Type	Matewith				
AW0258L	03	W1176	LB2	DISCONNECT BRACKET									
D30082	14		2001B	20	HQ	D39923	14		AC0520			YC001-YC007	
D30082	5		2001R	20	HQ	D39923	5		AC0520			YC001-YC007	
D30082	PERB		2001Z			D39923	PERB		AC0520			YC001-YC007	
D30082	31		2002B	20	HQ	D39923	31		AC0520			YC001-YC007	
D30082	30		2002R	20	HQ	D39923	30		AC0520			YC001-YC007	
D30082	PERB		2002Z			D39923	PERB		AC0520			YC001-YC007	
I AW0258L	04	W1164	SA1	DISCONNECT BRACKET									
D30016	21		2005B	20	HQ	D30234	26		AS0001L		09	YC001-YK910, YK918, YL421-YL423, YM645-YM646	
D30016	30		2005B	20	HQ	D30234	26		AS0001L		09	YK911-YK917, YK919-YL401, YL424-YM643, YM647-YM670	
D30016	20		2005R	20	HQ	D30234	12		AS0001L		09	YC001-YK910, YK918, YL421-YL423, YM645-YM646	
D30016	32		2005R	20	HQ	D30234	12		AS0001L		09	YK911-YK917, YK919-YL401, YL424-YM643, YM647-YM670	
D30016	S/R		2005Z			D30234	S/R		AS0001L		09	ALL	
D30016	37		2006B	20	HQ	D30234	37		AS0001L		09	ALL	
D30016	36		2006R	20	HQ	D30234	20		AS0001L		09	ALL	
D30016	S/R		2006Z			D30234	S/R		AS0001L		09	ALL	
AW0258L	04	W1184	SA1	DISCONNECT BRACKET									
D30014	21		2001B	20	HQ	D39935	26		DM0017			YC001-YC030, YK901-YK910, YK918, YL421-YL423, YM645-YM646	

SPARE WIRE LIST

D280A103

91-21-12

Section AW0258L

Page 2

Aug 10/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To		Matewith	Pos	Effectivity
				GA	TY	Equip	Term			
AW0258L	04	W1184	SA1	DISCONNECT BRACKET (continued)						
D30014	30		2001B	20	HQ	D39935	26	DM0017		YK911-YK917, YK919-YL401, YL424-YM643, YM647-YM670
D30014	20		2001R	20	HQ	D39935	25	DM0017		YC001-YC030, YK901-YK910, YK918, YL421-YL423, YM645-YM646
D30014	32		2001R	20	HQ	D39935	25	DM0017		YK911-YK917, YK919-YL401, YL424-YM643, YM647-YM670
D30014	S/R		2001Z			D39935	S/R	DM0017		YC001-YC030, YK901-YM670
D30014	37		2004B	20	HQ	D39911	6	AC0520		YC001-YC030, YK901-YM670
D30014	36		2004R	20	HQ	D39911	5	AC0520		YC001-YC030, YK901-YM670
D30014	S/R		2004Z			D39911	S/R	AC0520		YC001-YC030, YK901-YM670
AW0258L	05	W1166	SB2	DISCONNECT BRACKET						
D30064	16		2001B	20	HQ	D30220	2	AS0001L	05	ALL
D30064	15		2001R	20	HQ	D30220	1	AS0001L	05	ALL
D30064	S/R		2001Z			D30220	S/R	AS0001L	05	ALL
D30064	18		2002B	20	HQ	D30256	4	AS0001L	07	ALL
D30064	17		2002R	20	HQ	D30256	3	AS0001L	07	ALL
D30064	S/R		2002Z			D30256	S/R	AS0001L	07	ALL
AW0258L	05	W1182	SB2	DISCONNECT BRACKET						
D30062	16		2001B	20	HQ	D39931	2	AC0520		YC001-YC030, YK901-YM670
D30062	15		2001R	20	HQ	D39931	3	AC0520		YC001-YC030, YK901-YM670
D30062	S/R		2001Z			D39931	S/R	AC0520		YC001-YC030, YK901-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section AW0258L

Page 3

Aug 10/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To		Matewith	Pos	Effectivity
				GA	TY	Equip	Term			
AW0258L	05	W1182	SB2	DISCONNECT BRACKET (continued)						
D30062	18		2002B	20	HQ	D39931	4	AC0520		YC001-YC030, YK901-YM670
D30062	17		2002R	20	HQ	D39931	5	AC0520		YC001-YC030, YK901-YM670
D30062	S/R		2002Z			D39931	S/R	AC0520		YC001-YC030, YK901-YM670
AW0258L	06	W1170	LA2	DISCONNECT BRACKET						
D08056P	13		2004B	20	HQ	D30252	4	AS0001L	04	ALL
D08056P	12		2004R	20	HQ	D30252	3	AS0001L	04	ALL
D08056P	S/R		2004Z			D30252	S/R	AS0001L	04	ALL
D08056P	14		2005B	20	HQ	D30212	2	AS0001L	03	ALL
D08056P	4		2005R	20	HQ	D30212	1	AS0001L	03	ALL
D08056P	S/R		2005Z			D30212	S/R	AS0001L	03	ALL
D08056P	10		2006B	20	HQ	D30228	16	AS0001L	06	ALL
D08056P	2		2006R	20	HQ	D30228	15	AS0001L	06	ALL
D08056P	S/R		2006Z			D30228	S/R	AS0001L	06	ALL
AW0258L	06	W1178	LN2	DISCONNECT BRACKET						
D08056J	13		2001B	20	HQ	D39927	11	AC0520		ALL
D08056J	12		2001R	20	HQ	D39927	24	AC0520		ALL
D08056J	S/R		2001Z			D39927	S/R	AC0520		ALL
D08056J	10		2002B	20	HQ	D39927	10	AC0520		ALL
D08056J	2		2002R	20	HQ	D39927	2	AC0520		ALL
D08056J	S/R		2002Z			D39927	S/R	AC0520		ALL
D08056J	14		2003B	20	HQ	D39927	15	AC0520		ALL
D08056J	4		2003R	20	HQ	D39927	16	AC0520		ALL
D08056J	S/R		2003Z			D39927	S/R	AC0520		ALL

SPARE WIRE LIST

D280A103



From Matewith From	Pos	Bundle	Sep	Description			To						
Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity		
AW0258R	02	W1272	RA2	DISCONNECT BRACKET									
D30142	12		2014B	20	RL	D30402	11		AS0002R	02	YC001-YC007		
D30142	12		2014B	20	HQ	D30402	11		AS0002R	02	YC008-YC011		
D30142	12		2014B	20	E5	D30402	11		AS0002R	02	YC012-YM670		
D30142	3		2014R	20	RL	D30402	2		AS0002R	02	YC001-YC007		
D30142	3		2014R	20	HQ	D30402	2		AS0002R	02	YC008-YC011		
D30142	3		2014R	20	E5	D30402	2		AS0002R	02	YC012-YM670		
D30142	PERB		2014Z			D30402	S/R		AS0002R	02	YC001-YC007		
D30142	PERB		2014Z			D30402	PERB		AS0002R	02	YC008-YM670		
D30142	14		2016B	20	RL	D30406	11		AS0003R	02	YC001-YC007		
D30142	14		2016B	20	HQ	D30406	11		AS0003R	02	YC008-YC011		
D30142	14		2016B	20	E5	D30406	11		AS0003R	02	YC012-YM670		
D30142	5		2016R	20	RL	D30406	2		AS0003R	02	YC001-YC007		
D30142	32		2016R	20	HQ	D30406	2		AS0003R	02	YC008-YC011		
D30142	32		2016R	20	E5	D30406	2		AS0003R	02	YC012-YM670		
D30142	PERB		2016Z			D30406	S/R		AS0003R	02	YC001-YC007		
D30142	PERB		2016Z			D30406	PERB		AS0003R	02	YC008-YM670		
AW0258R	02	W1274	RA2	DISCONNECT BRACKET									
D30140	12		2004B	20	HQ	D39920	12		AD0520		YC001-YC007		
D30140	3		2004R	20	HQ	D39920	3		AD0520		YC001-YC007		
D30140	PERB		2004Z			D39920	PERB		AD0520		YC001-YC007		
D30140	14		2005B	20	HQ	D39920	14		AD0520		YC001-YC007		
D30140	32		2005R	20	HQ	D39920	32		AD0520		YC001-YC007		
D30140	PERB		2005Z			D39920	PERB		AD0520		YC001-YC007		
AW0258R	03	W1268	RB2	DISCONNECT BRACKET									
D30184	14		2015B	20	HQ	D30404	13		AS0001R	08	YC001-YC011		
D30184	14		2015B	20	E5	D30404	13		AS0001R	08	YC012-YM670		
D30184	5		2015R	20	HQ	D30404	4		AS0001R	08	YC001-YC011		
D30184	5		2015R	20	E5	D30404	4		AS0001R	08	YC012-YM670		
D30184	PERB		2015Z			D30404	PERB		AS0001R	08	ALL		
D30184	31		2016B	20	HQ	D30460	39		AS0001R	01	YC001-YC011		
D30184	31		2016B	20	E5	D30460	39		AS0001R	01	YC012-YM670		
D30184	30		2016R	20	HQ	D30460	22		AS0001R	01	YC001-YC011		
D30184	30		2016R	20	E5	D30460	22		AS0001R	01	YC012-YM670		
D30184	PERB		2016Z			D30460	PERB		AS0001R	01	ALL		

SPARE WIRE LIST

D280A103

91-21-12

Section AW0258R

Page 1

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To					Pos	Effectivity
				GA	TY	Equip	Term	Type	Matewith			
AW0258R	03	W1276	RB2	DISCONNECT BRACKET								
D30182	14		2001B	20	HQ	D39924	14		AD0520			YC001-YC007
D30182	5		2001R	20	HQ	D39924	5		AD0520			YC001-YC007
D30182	PERB		2001Z			D39924	PERB		AD0520			YC001-YC007
D30182	31		2002B	20	HQ	D39924	31		AD0520			YC001-YC007
D30182	30		2002R	20	HQ	D39924	30		AD0520			YC001-YC007
D30182	PERB		2002Z			D39924	PERB		AD0520			YC001-YC007
AW0258R	04	W1264	SN1	DISCONNECT BRACKET								
D30116	21		2005B	20	HQ	D30434	26		AS0001R	09		YC001-YK910, YK918, YL421-YL423, YM645-YM646
D30116	30		2005B	20	HQ	D30434	26		AS0001R	09		YK911-YK917, YK919-YL401, YL424-YM643, YM647-YM670
D30116	20		2005R	20	HQ	D30434	12		AS0001R	09		YC001-YK910, YK918, YL421-YL423, YM645-YM646
D30116	32		2005R	20	HQ	D30434	12		AS0001R	09		YK911-YK917, YK919-YL401, YL424-YM643, YM647-YM670
D30116	S/R		2005Z			D30434	S/R		AS0001R	09		ALL
D30116	37		2006B	20	HQ	D30434	37		AS0001R	09		ALL
D30116	36		2006R	20	HQ	D30434	20		AS0001R	09		ALL
D30116	S/R		2006Z			D30434	S/R		AS0001R	09		ALL
AW0258R	04	W1284	SN1	DISCONNECT BRACKET								
D30114	21		2001B	20	HQ	D39936	26		AD0520			YC001-YC030, YK901-YK910, YK918, YL421-YL423, YM645-YM646

SPARE WIRE LIST

D280A103

91-21-12

Section AW0258R

Page 2

Aug 10/2009



From Equip	Matewith Term	Pos	Bundle Type	Sep Wire No.	Description		To Equip	Term	Type	Matewith	Pos	Effectivity
					GA	TY						
AW0258R		04	W1284	SN1	DISCONNECT BRACKET (continued)							
D30114		30		2001B	20	HQ	D39936	26		AD0520		YK911-YK917, YK919-YL401, YL424-YM643, YM647-YM670
D30114		20		2001R	20	HQ	D39936	25		AD0520		YC001-YC030, YK901-YK910, YK918, YL421-YL423, YM645-YM646
D30114		32		2001R	20	HQ	D39936	25		AD0520		YK911-YK917, YK919-YL401, YL424-YM643, YM647-YM670
D30114		S/R		2001Z			D39936	S/R		AD0520		YC001-YC030, YK901-YM670
D30114		37		2004B	20	HQ	D39912	6		AD0520		YC001-YC030, YK901-YM670
D30114		36		2004R	20	HQ	D39912	5		AD0520		YC001-YC030, YK901-YM670
D30114		S/R		2004Z			D39912	S/R		AD0520		YC001-YC030, YK901-YM670
AW0258R		05	W1266	SB2	DISCONNECT BRACKET							
D30164		16		2001B	20	HQ	D30420	2		AS0001R	05	ALL
D30164		15		2001R	20	HQ	D30420	1		AS0001R	05	ALL
D30164		S/R		2001Z			D30420	S/R		AS0001R	05	ALL
D30164		18		2002B	20	HQ	D30456	4		AS0001R	07	ALL
D30164		17		2002R	20	HQ	D30456	3		AS0001R	07	ALL
D30164		S/R		2002Z			D30456	S/R		AS0001R	07	ALL
AW0258R		05	W1282	SB2*	DISCONNECT BRACKET							
D30162		16		2001B	20	HQ	D39932	2		AD0520		ALL
D30162		15		2001R	20	HQ	D39932	3		AD0520		ALL
D30162		S/R		2001Z			D39932	S/R		AD0520		ALL
D30162		18		2002B	20	HQ	D39932	4		AD0520		ALL
D30162		17		2002R	20	HQ	D39932	5		AD0520		ALL
D30162		S/R		2002Z			D39932	S/R		AD0520		ALL

SPARE WIRE LIST

D280A103

91-21-12

Section AW0258R

Page 3

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY		To Equip	Term	Type	Matewith	Pos	Effectivity
AW0258R	06	W1270	RA2	DISCONNECT BRACKET							
D08156P	13		2004B	20	HQ	D30452	4		AS0001R	04	ALL
D08156P	12		2004R	20	HQ	D30452	3		AS0001R	04	ALL
D08156P	S/R		2004Z			D30452	S/R		AS0001R	04	ALL
D08156P	14		2005B	20	HQ	D30412	2		AS0001R	03	ALL
D08156P	4		2005R	20	HQ	D30412	1		AS0001R	03	ALL
D08156P	S/R		2005Z			D30412	S/R		AS0001R	03	ALL
D08156P	10		2006B	20	HQ	D30428	16		AS0001R	06	ALL
D08156P	2		2006R	20	HQ	D30428	15		AS0001R	06	ALL
D08156P	S/R		2006Z			D30428	S/R		AS0001R	06	ALL
AW0258R	06	W1278	RN2	DISCONNECT BRACKET							
D08156J	13		2001B	20	HQ	D39928	11		AD0520		ALL
D08156J	12		2001R	20	HQ	D39928	24		AD0520		ALL
D08156J	S/R		2001Z			D39928	S/R		AD0520		ALL
D08156J	10		2002B	20	HQ	D39928	10		AD0520		ALL
D08156J	2		2002R	20	HQ	D39928	2		AD0520		ALL
D08156J	S/R		2002Z			D39928	S/R		AD0520		ALL
D08156J	14		2003B	20	HQ	D39928	15		AD0520		ALL
D08156J	4		2003R	20	HQ	D39928	16		AD0520		ALL
D08156J	S/R		2003Z			D39928	S/R		AD0520		ALL

SPARE WIRE LIST

D280A103

91-21-12

Section AW0258R

Page 4 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>					
Equip	Term	Type	Wire No.		GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
D04499J			W5337	SN2	RECP-P19 PNL							
D04499P	1		0001		22	PA	D04161P	A07		AE0401A	25	YC001-YK912, YK918-YK919, YL401-YL429, YM643-YM652

SPARE WIRE LIST

D280A103

91-21-12

Section D04499J

Page 1 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

<u>From</u> Equip	<u>Matewith</u> Term	<u>Bundle</u> Type	<u>Sep</u> Wire No.	<u>Description</u> GA TY		<u>To</u> Equip	Term	Type	Matewith	Pos	Effectivity
D40020P		W0142	LN2	PLUG-							
D40020J	17		0017	22	PA	D03160	5		L01086		YC001-YC030, YK901-YM670
D40020J	17		0017	22	PA	D03160	5		L01086		YC031-YC050
D40020J	18		0018	22	PA	D03160	1		L01086		YC001-YC030, YK901-YM670
D40020J	18		0018	22	PA	D03160	1		L01086		YC031-YC050

SPARE WIRE LIST

D280A103

91-21-12

Section D40020P

Page 1 End

Aug 10/2009



<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>					
Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
D40026P			W0152	SN2	PLUG-							
D40026J		17		0017	22	PA	D10180	5		L01223		YC001-YC030, YK901-YM670
D40026J		17		0017	22	PA	D10180	5		L01223		YC031-YC050
D40026J		18		0018	22	PA	D10180	1		L01223		YC001-YC030, YK901-YM670
D40026J		18		0018	22	PA	D10180	1		L01223		YC031-YC050

SPARE WIRE LIST

D280A103

91-21-12

Section D40026P

Page 1 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>				
Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
D40038J			W3146	LN2*	RCPT-						
D40038P	CAP	Y	0401	20	PA	D40052J	1		D40052P		YC001-YC030, YK901-YM670
D40038P	CAP	Y	0402	20	PA	D40052J	2		D40052P		YC001-YC030, YK901-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section D40038J

Page 1 End

Aug 10/2009



<u>From</u> From Equip	<u>Matewith</u> Term	<u>Pos</u> Term	<u>Bundle</u> Type	<u>Sep</u> Wire No.	<u>Description</u> GA TY		<u>To</u> Equip	Term	Type	Matewith	Pos	Effectivity
D40052P			W3146	LN2*	PLUG-							
D40052J		1		0401	20	PA	D40038P	CAP	Y	D40038J		YC001-YC030, YK901-YM670
D40052J		2		0402	20	PA	D40038P	CAP	Y	D40038J		YC001-YC030, YK901-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section D40052P

Page 1 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>					
Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
D40110J			W3158	LN1*	RCPT-							
D40110P		2		0203	20	PA	D40102J	3		AB0340A	09	YC001-YC030, YK901-YM670
D40110P		2		0203	20	PA	D40102J	3		AB0340A	09	YC031-YC050

SPARE WIRE LIST

D280A103

91-21-12

Section D40110J

Page 1 End

Aug 10/2009



<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>					
Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
D40110P			W3146	LN2*	PLUG-							
D40110J		2		0027	18	PA	D40984J	CAP	Y	D40984P		YK901-YL430

SPARE WIRE LIST

D280A103

91-21-12

Section D40110P

Page 1 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>					
Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
D40112J			W3158	LN1*	RCPT-							
D40112P		2		0225	20	PA	D40102J	25		AB0340A	09	YC001-YC030
D40112P		2		0225	20	PA	D40102J	25		AB0340A	09	YC031-YC050

SPARE WIRE LIST

D280A103

91-21-12

Section D40112J

Page 1 End

Aug 10/2009



<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>					
Equip	Term	Type	Wire No.		GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
D40114J			W3158	LN1*	RCPT-							
D40114P	2		0228		20	PA	D40102J	28		AB0340A	09	YC001-YC030
D40114P	2		0228		20	PA	D40102J	28		AB0340A	09	YC031-YC050

SPARE WIRE LIST

D280A103

91-21-12

Section D40114J

Page 1 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>					
Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
D40116J			W3158	LN1*	RCPT-							
D40116P		1		0111	20	PA	D40108J	11		AB0340A	06	ALL
D40116P		3		0112	20	PA	D40108J	12		AB0340A	06	ALL

SPARE WIRE LIST

D280A103

91-21-12

Section D40116J

Page 1 End

Aug 10/2009



<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>					
Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
D40210J			W4258	RN1	RCPT-							
D40210P		CAP	Y	0225	20	PA	D40202J	25		AB0340B	09	ALL
D40210P		CAP	Y	0226	20	PA	D40202J	26		AB0340B	09	ALL

SPARE WIRE LIST

D280A103

91-21-12

Section D40210J

Page 1 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>					
Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
D40214J			W4258	RN1	RCPT-							
D40214P		CAP	Y	0203	20	PA	D40202J	3		AB0340B	09	ALL
D40214P		CAP	Y	0204	20	PA	D40202J	4		AB0340B	09	ALL

SPARE WIRE LIST

D280A103

91-21-12

Section D40214J

Page 1 End

Aug 10/2009



<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>					
Equip	Term	Type	Wire No.		GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
D40262J			W6124	LA2	RCPT-							
D40262P	19		0539		22	PA	D46040J	3		AL0720D	01	YC008-YK907, YL421

SPARE WIRE LIST

D280A103

91-21-12

Section D40262J

Page 1 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>					
Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
D40270J			W3150	LN2*	RCPT-							
D40270P		2		0901	20	PA	D40198P	1		AP1800A	01	ALL
D40270P		3		0902	20	PA	D40198P	2		AP1800A	01	ALL
D40270P		8		0903	20	PA	D40198P	3		AP1800A	01	ALL
D40270P		9		0904	20	PA	D40198P	4		AP1800A	01	ALL

SPARE WIRE LIST

D280A103

91-21-12

Section D40270J

Page 1 End

Aug 10/2009



<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>					
Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
D40272J			W4250	RN2*	RCPT-							
D40272P		2		0901	20	PA	D40298P	1		AP1800A	07	ALL
D40272P		8		0903	20	PA	D40298P	3		AP1800A	07	ALL
D40272P		9		0904	20	PA	D40298P	4		AP1800A	07	ALL

SPARE WIRE LIST

D280A103

91-21-12

Section D40272J

Page 1 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>					
Equip	Term	Type	Wire No.		GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
D40984P			W3146	LN2*	PLUG-							
D40984J	CAP	Y	0027		18	PA	D40110J	2		D40110P		YK901-YL430

SPARE WIRE LIST

D280A103

91-21-12

Section D40984P

Page 1 End

Aug 10/2009



<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>					
Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
D40990P			W4146	LN2*	PLUG-							
D40990J		2		0363	18	PA	D42004J	3		D42004P		YK901-YL430

SPARE WIRE LIST

D280A103

91-21-12

Section D40990P

Page 1 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>					
Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
D40994J			W3158	LN1*	RCPT-							
D40994P		2		0228	20	PA	D40102J	28		AB0340A	09	YK901-YL430

SPARE WIRE LIST

D280A103

91-21-12

Section D40994J

Page 1 End

Aug 10/2009



<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>					
Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
D40994P			W3146	LN2*	PLUG-							
D40994J		3		0383	18	PA	D42010J	2		D42010P		YK901-YL430

SPARE WIRE LIST

D280A103

91-21-12

Section D40994P

Page 1 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>					
Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
D40996J			W3158	LN1*	RCPT-							
D40996P		2		0212	20	PA	D40102J	12		AB0340A	09	YK901-YL430

SPARE WIRE LIST

D280A103

91-21-12

Section D40996J

Page 1 End

Aug 10/2009



<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>					
Equip	Term	Type	Wire No.		GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
D42002J			W3158	LN1*	RCPT-							
D42002P	2		0204		20	PA	D40102J	4		AB0340A	09	YC001-YC030, YK901-YM670
D42002P	2		0204		20	PA	D40102J	4		AB0340A	09	YC031-YC050

SPARE WIRE LIST

D280A103

91-21-12

Section D42002J

Page 1 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>					
Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
D42004J			W3158	LN1*	RCPT-							
D42004P		2		0226	20	PA	D40102J	26		AB0340A	09	YC001-YC030, YK901-YM670
D42004P		2		0226	20	PA	D40102J	26		AB0340A	09	YC031-YC050

SPARE WIRE LIST

D280A103

91-21-12

Section D42004J

Page 1 End

Aug 10/2009



<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>					
Equip	Term	Type	Wire No.		GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
D42004P			W4146	LN2*	PLUG-							
D42004J	3		0363		18	PA	D40990J	2		D40990P		YK901-YL430

SPARE WIRE LIST

D280A103

91-21-12

Section D42004P

Page 1 End

Aug 10/2009



<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>					
Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
D42006J			W3158	LN1*	RCPT-							
D42006P		2		0212	20	PA	D40102J	12		AB0340A	09	YC001-YC030
D42006P		2		0212	20	PA	D40102J	12		AB0340A	09	YC031-YC050

SPARE WIRE LIST

D280A103

91-21-12

Section D42006J

Page 1 End

Aug 10/2009



<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>					
Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
D42010J			W3158	LN1*	RCPT-							
D42010P		2		0225	20	PA	D40102J	25		AB0340A	09	YK901-YL430

SPARE WIRE LIST

D280A103

91-21-12

Section D42010J

Page 1 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>					
Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
D42010P			W3146	LN2*	PLUG-							
D42010J		2		0383	18	PA	D40994J	3		D40994P		YK901-YL430

SPARE WIRE LIST

D280A103

91-21-12

Section D42010P

Page 1 End

Aug 10/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY		To Equip	Term	Type	Matewith	Pos	Effectivity
DM0017		W1184	SA1	CONNECTOR-FEED THROUGH							
D39935	26		2001B	20	HQ	D30014	21		AW0258L	04	YC001-YC030, YK901-YK910, YK918, YL421-YL423, YM645-YM646
D39935	26		2001B	20	HQ	D30014	30		AW0258L	04	YK911-YK917, YK919-YL401, YL424-YM643, YM647-YM670
D39935	25		2001R	20	HQ	D30014	20		AW0258L	04	YC001-YC030, YK901-YK910, YK918, YL421-YL423, YM645-YM646
D39935	25		2001R	20	HQ	D30014	32		AW0258L	04	YK911-YK917, YK919-YL401, YL424-YM643, YM647-YM670
D39935	S/R		2001Z			D30014	S/R		AW0258L	04	YC001-YC030, YK901-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section DM0017

Page 1 End

Aug 10/2009



<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>						
Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity	
L01086			W0142	LN2	SIGN-EXIT LOCATOR								
D03160		5		0017	22	PA	D40020J	17		D40020P		ALL	
D03160		1		0018	22	PA	D40020J	18		D40020P		ALL	

SPARE WIRE LIST

D280A103

91-21-12

Section L01086

Page 1 End

Aug 10/2009



<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>					
Equip	Term	Type	Wire No.		GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
L01223			W0152	SN2	SIGN-EXIT LOCATOR							
D10180		5		0017	22	PA	D40026J	17		D40026P		ALL
D10180		1		0018	22	PA	D40026J	18		D40026P		ALL

SPARE WIRE LIST

D280A103

91-21-12

Section L01223

Page 1 End

Aug 10/2009



<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>					
Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
M00276			W6248	LN2*	DETECTOR-AFT OVHT SEC 58							
D00866		CAP	Y	0499	20	PA	D40500P	1		AB0500DL	05	ALL
D00866		CAP	Y	0500	20	PA	D40500P	3		AB0500DL	05	ALL

SPARE WIRE LIST

D280A103

91-21-12

Section M00276

Page 1 End

Aug 10/2009



From Matewith	Pos	Bundle	Sep	Description		To					
From				GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
Equip	Term	Type	Wire No.								
M00414		W3393	LG2	ACTR-MACH TRIM							
D00545	15		1015	20	VF	D43393J	15		AB1050L	02	YC008-YM670
D00545	17		1017	20	VF	D43393J	17		AB1050L	02	YC008-YM670
D00545	19		1019	20	VF	D43393J	19		AB1050L	02	YC008-YM670
D00545	21		1021	20	VF	D43393J	21		AB1050L	02	YC008-YM670
D00545	S/R		1021Z			D43393J	S/R		AB1050L	02	YC008-YM670
M00414		W5301	LG2	ACTR-MACH TRIM							
D00545	15		0015	22	PA	D04425P	A05		AE0101A	08	YC001-YC007
D00545	17		0017	22	PA	D04425P	A07		AE0101A	08	YC001-YC007
D00545	19		0019	22	PA	D04425P	A09		AE0101A	08	YC001-YC007
D00545	21		0021	22	PA	D04425P	B01		AE0101A	08	YC001-YC007

SPARE WIRE LIST

D280A103

91-21-12

Section M00414

Page 1 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>				
Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
M00943			W5367	LC3	ACTR-HYD A/P (AILERON 'A')						
D01827	REF	VP	3013B	22	HG	D04073P	B02		AE0101A	27	ALL
D01827	REF	VP	3013R	22	HG	D04073P	B01		AE0101A	27	ALL
D01827	REF	VP	3013Y	22	HG	D04073P	B03		AE0101A	27	ALL
D01827	DED		3013Z			D04073P	PERG	1F	AE0101A	27	ALL

SPARE WIRE LIST

D280A103

91-21-12

Section M00943

Page 1 End

Aug 10/2009



From	Matewith	Pos	Bundle	Sep	Description		To					
Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
M01020			W3377	LA3	ACTR-HYD A/P (ELEVATOR 'A')							
D01681		REF	VP	3006B	22	GC	D04079P	B08		AE0101A	32	YC001-YC007
D01681		REF	VP	3006R	22	GC	D04079P	B07		AE0101A	32	YC001-YC007
D01681		REF	VP	3006Y	22	GC	D04079P	B09		AE0101A	32	YC001-YC007
M01020			W3397	LA3	ACTR-HYD A/P (ELEVATOR 'A')							
D01681		REF	VP	3006B	22	HG	D43397J	41		AB1050L	03	YC008-YM670
D01681		REF	VP	3006R	22	HG	D43397J	40		AB1050L	03	YC008-YM670
D01681		REF	VP	3006Y	22	HG	D43397J	42		AB1050L	03	YC008-YM670
D01681				3006Z			D43397J	S/R		AB1050L	03	YC008-YC030

SPARE WIRE LIST

D280A103

91-21-12

Section M01020

Page 1 End

Aug 10/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY	To Equip	Term	Type	Matewith	Pos	Effectivity
M01022		W3379	RB3	ACTR-HYD A/P (ELEVATOR 'B')						
D01687	REF	VP	3006B	22 GC	D04081J	28		AE0104A	03	YC001-YC007
D01687	REF	VP	3006R	22 GC	D04081J	27		AE0104A	03	YC001-YC007
D01687	REF	VP	3006Y	22 GC	D04081J	29		AE0104A	03	YC001-YC007
M01022		W3399	RB3	ACTR-HYD A/P (ELEVATOR 'B')						
D01687	REF	VP	3006B	22 HG	D43389J	11		AB1080	03	YC008-YM670
D01687	REF	VP	3006R	22 HG	D43389J	10		AB1080	03	YC008-YM670
D01687	REF	VP	3006Y	22 HG	D43389J	12		AB1080	03	YC008-YM670
D01687			3006Z		D43389J	S/R		AB1080	03	YC008-YC030

SPARE WIRE LIST

D280A103

91-21-12

Section M01022

Page 1 End

Aug 10/2009



From	Matewith	Pos	Bundle	Sep	Description		To					
Equip	Term	Type	Wire No.	GA	TY		Equip	Term	Type	Matewith	Pos	Effectivity
M01415			W3144	LN2*	MDL-LAV A (SEE Y004+++)							
D03732	CAP	Y	0015	20	PA		D40220P	15		AP1800A	06	ALL
D03732	CAP	Y	0016	20	PA		D40220P	16		AP1800A	06	ALL
D03732	CAP	Y	0026	20	PA		D40220P	26		AP1800A	06	YC001-YK906
M01415			W3307	NN2	MDL-LAV A (SEE Y004+++)							
D10019	40		0008	24	PK		D41337P	22		AE0103A	05	ALL
D10019	39		2003B	24	PL		D41337P	24		AE0103A	05	ALL
D10019	38		2003R	24	PL		D41337P	23		AE0103A	05	ALL

SPARE WIRE LIST

D280A103

91-21-12

Section M01415

Page 1 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY	To Equip	Term	Type	Matewith	Pos	Effectivity
M01418		W3058	RN2	AFT-LAV D (SEE Y007+++)						
D11066	CAP	Y	0387	20 PA	D40170J	18		AB0340A	04	YC001-YC030, YK901-YM670
D11066	CAP	Y	0388	20 PA	D40170J	19		AB0340A	04	YC001-YC030, YK901-YM670
D11066	CAP	Y	0389	20 PA	D40170J	31		AB0340A	04	YC001-YC030, YK901-YM670
D11070	CAP	Y	0284	20 PA	D40054J	5		AB0340A	01	YC001-YC030, YK901-YM670
D11070	CAP	Y	0285	20 PA	D40054J	6		AB0340A	01	YC001-YC030, YK901-YM670
D11070	CAP	Y	0286	20 PA	D40054J	8		AB0340A	01	YC001-YC030, YK901-YM670
M01418		W3144	LN2*	AFT-LAV D (SEE Y007+++)						
D03738	CAP	Y	0013	20 PA	D40220P	13		AP1800A	06	ALL
D03738	CAP	Y	0014	20 PA	D40220P	14		AP1800A	06	ALL
D03738	CAP	Y	0025	20 PA	D40220P	25		AP1800A	06	YC001-YK906

SPARE WIRE LIST

D280A103

91-21-12

Section M01418

Page 1 End

Aug 10/2009



From	Matewith	Pos	Bundle	Sep	Description		To						
Equip	Term	Type	Wire No.		GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity	
M01672			W4142	LB2*	BATTERY PACK-EMER LT (EO B7378-33-04-01)								
D10744	CAP	Y	0037		20	PA	D40296J	7		AB0340B	07	YC001-YC030	
D10744	CAP	Y	0037		20	PA	D40296J	7		AB0340B	07	ALL	
D10744	CAP	Y	0037		20	PA	D40296J	7		AB0340B	07	YC031-YM670	
D10744	CAP	Y	0039		20	PA	D40296J	CAP	Y	AB0340B	07	YC001-YC030	
D10744	CAP	Y	0039		20	PA	D40296J	CAP	Y	AB0340B	07	YC001-YM643, YM649-YM670	
D10744	CAP	Y	0039		20	PA	D40296J	CAP	Y	AB0340B	07	YC031-YM670	

SPARE WIRE LIST

D280A103

91-21-12

Section M01672

Page 1 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Equip	Matewith Term	Pos Type	Bundle Type	Sep Wire No.	Description		To					Pos	Effectivity
					GA	TY	Equip	Term	Type	Matewith			
I	M01673		W3142	LN2									
	D10746	CAP	Y	0038	20	PA	D40196J	8		AB0340A		03	YC001-YC012, YC015-YC026, YK901-YM652
	D10746	CAP	Y	0038	20	PA	D40196J	8		AB0340A		03	YC001-YC030
	D10746	CAP	Y	0038	20	PA	D40196J	8		AB0340A		03	YC013
	D10746	CAP	Y	0038	20	PA	D40196J	8		AB0340A		03	YK901-YM652
	D10746	CAP	Y	0039	20	PA	D40196J	CAP	Y	AB0340A		03	YC001-YC030
	D10746	CAP	Y	0039	20	PA	D40196J	CAP	Y	AB0340A		03	YC001-YC026, YK901-YM652
	D10746	CAP	Y	0039	20	PA	D40196J	CAP	Y	AB0340A		03	YK901-YM652

SPARE WIRE LIST

D280A103

91-21-12

Section M01673

Page 1 End

Aug 10/2009



<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>					
Equip	Term	Type	Wire No.		GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
M01674			W4142	LB2*	BATTERY PACK-EMER LT (EO B7378-33-04-01)							
D10748	CAP	Y	0036		20	PA	D40296J	4		AB0340B	07	YC001-YC030
D10748	CAP	Y	0036		20	PA	D40296J	4		AB0340B	07	ALL
D10748	CAP	Y	0036		20	PA	D40296J	4		AB0340B	07	YC031-YM670
D10748	CAP	Y	0038		20	PA	D40296J	15		AB0340B	07	YC001-YC030
D10748	CAP	Y	0038		20	PA	D40296J	15		AB0340B	07	ALL
D10748	CAP	Y	0038		20	PA	D40296J	15		AB0340B	07	YC031-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section M01674

Page 1 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY	To Equip	Term	Type	Matewith	Pos	Effectivity
M02061		W5156	SA2*	MDL-PSEU						
D10982	21		0021	20 PA	TB0604X	B048	1A			YC001-YC003
D10982	21		0021	20 PA	D46116P	14		AJ0046A	13	YC004-YC030
M02061		W5158	SB2*	MDL-PSEU						
D11140	8		0008	22 GA	TB1804X	A038	1A			YC001-YC002
D11140	8		0008	22 PA	TB1804X	A038	1A			YC003
D11140	8		0008	22 PA	TB1808X	B003	1A			YC004-YM670
M02061		W5160	RB2*	MDL-PSEU						
D10988	37		0037	22 PA	D46122P	3		AJ0046A	16	YK901-YK906
D10988	38		0038	22 PA	TB1808X	A003	1A			YC004-YC030, YK901-YM670
D10988	54		0629	22 PA	D46102P	20		AJ0046A	14	YC004-YC030, YK901-YM670
D10988	60		2460B	22 PB	D40472P	B06		AE0402A	33	YC004-YC030, YK901-YM670
D10988	61		2460R	22 PB	D40472P	B05		AE0402A	33	YC004-YC030, YK901-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section M02061

Page 1 End

Aug 10/2009



From	Matewith	Pos	Bundle	Sep	Description		To					
Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity	
M02195			W2805	NN2	PRINTER-ACMS ARINC 740							
D02649	B		2503B	24	Y2	D43215P	B04		AE0302A	09	YK901-YM670	
D02649	A		2503R	24	Y2	D43215P	A04		AE0302A	09	YK901-YM670	
D02649			2503Z			D43215P	PERG	1F	AE0302A	09	YK901-YM670	

SPARE WIRE LIST

D280A103

91-21-12

Section M02195

Page 1 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY		To Equip	Term	Type	Matewith	Pos	Effectivity
M02263		W5074	SB2								
D12820	2		6007	20	CQ	GD05066	DC..	E			YC008-YC030, YK901-YK912, YL421-YL428, YM643-YM652
D12820	3		6008	20	CQ	GD05064	ST..	E			YC008-YC030, YK901-YK912, YL421-YL428, YM643-YM652
D12820	1		6009	22	CQ	D46608P	9		AB0500DL	06	YC008-YC030, YK901-YK912, YL421-YL428, YM643-YM652

SPARE WIRE LIST

D280A103

91-21-12

Section M02263

Page 1 End

Aug 10/2009



From	Matewith	Pos	Bundle	Sep	Description		To					
Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
M02566			W5182	NN2	ISPS - POWER SUPPLY EE BAY							
D14008		CAP	Y	0004	20	PA	D14012	CAP	Y	M02622		YL421
D14008		CAP	Y	0004	22	PA	D14012	CAP	Y	M02622		YL422-YL430
M02566			W6182	NN2	ISPS - POWER SUPPLY EE BAY							
D14006		CAP	Y	0004	20	PA	D14010	CAP	Y	M02621		YL421
D14006		CAP	Y	0004	22	PA	D14010	CAP	Y	M02621		YL422-YL430

SPARE WIRE LIST

D280A103

91-21-12

Section M02566

Page 1 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>					<u>Effectivity</u>	
Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity	
M02621			W6182	NN2	PC POWER OUTLET (P6)								
I D14010		CAP	Y	0004	20	PA	D14006	CAP	Y	M02566		YL421	
I D14010		CAP	Y	0004	20	PA	D14006	CAP	Y	M02566		YL421	
I D14010		CAP	Y	0004	22	PA	D14006	CAP	Y	M02566		YL422-YL430	
I D14010		CAP	Y	0004	22	PA	D14006	CAP	Y	M02566		YL422-YL430	

SPARE WIRE LIST

D280A103

91-21-12

Section M02621

Page 1 End

Aug 10/2009



From	Matewith	Pos	Bundle	Sep	Description		To					
Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
M02622			W5182	NN2	PC POWER OUTLET (P18)							
D14012		CAP	Y	0004	20	PA	D14008	CAP	Y	M02566		YL421
D14012		CAP	Y	0004	22	PA	D14008	CAP	Y	M02566		YL422-YL430

SPARE WIRE LIST

D280A103

91-21-12

Section M02622

Page 1 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Equip	Matewith	Pos Term	Bundle Type	Sep Wire No.	Description		To						
					GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity	
M2263			W5074	SB2									
D12816		1		6001	20	PA	GD05062	ST..	E				YC008-YC030, YK901-YK912, YL421-YL428, YM643-YM652
D12816		2		6002	20	PA	GD05060	DC..	E				YC008-YC030, YK901-YK912, YL421-YL428, YM643-YM652
D12816		3		6003	22	PA	D46608P	1		AB0500DL	06		YC008-YC030, YK901-YK912, YL421-YL428, YM643-YM652
D12818		2		6004	20	CQ	GD05066	DC..	E				YC008-YC030, YK901-YK912, YL421-YL428, YM643-YM652
D12818		3		6005	20	CQ	GD05064	ST..	E				YC008-YC030, YK901-YK912, YL421-YL428, YM643-YM652
D12818		1		6006	22	CQ	D46608P	12		AB0500DL	06		YC008-YC030, YK901-YK912, YL421-YL428, YM643-YM652

SPARE WIRE LIST

D280A103

91-21-12

Section M2263

Page 1 End

Aug 10/2009



<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>					
Equip	Term	Type	Wire No.		GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
N00185			W2205	SN2	IND-RADIO MAGNETIC							
D03679	5	VP	0020		22	PA	D40049J	5		AE0104A	07	YC001-YC030, YK901-YM670
D03679	17	VP	0021		22	PA	D40049J	6		AE0104A	07	YC001-YC030, YK901-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section N00185

Page 1 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>						
Equip	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity		
N00186			W2205	SN2	IND-STANDBY ATTITUDE								
D03681	18	VP	0018	22	PA	D04205J	13		AE0102A	05	YC001-YC030		
D03681	12	VP	2504B	24	Y2	D40049J	12		AE0104A	07	YC001-YC030		
D03681	11	VP	2504R	24	Y2	D40049J	11		AE0104A	07	YC001-YC030		
D03681	DED		2504Z			D40049J	S/R		AE0104A	07	YC001-YC030		

SPARE WIRE LIST

D280A103

91-21-12

Section N00186

Page 1 End

Aug 10/2009



From Matewith	Pos	Bundle	Sep	Description		To					Pos	Effectivity		
From	Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith					
N00226		W2205	SN2	INTEGRATED STANDBY FLIGHT DISPLAY										
D10853	CAP	Y	0002	20	CQ	GD00179	AC..	1A				YK901-YM670		
D10853	CAP	Y	0005	20	CQ	GD00179	AC..	1A				YK901-YM670		
D10853	CAP	Y	0007	22	PA	SP02186		S				YK901-YM670		
D10853	CAP	Y	0008	20	PA	GD00179	DC..	1A				YK901-YM670		
D10853	CAP	Y	0009	20	PA	GD00179	ST..	1A				YK901-YM670		
D10853	CAP	Y	0013	20	PA	GD00179	DC..	1A				YK901-YM670		
D10853	CAP	Y	0014	20	PA	SP02085		S				YK901-YM670		
D10853	CAP	Y	0026	20	PA	GD00179	ST..	1A				YK901-YM670		
D10853	CAP	Y	2004B	24	Y2	D04205J	11		AE0102A		05	YK901-YM670		
D10853	CAP	Y	2004R	24	Y2	D04205J	10		AE0102A		05	YK901-YM670		
D10853	DED		2004Z			D04205J	S/R		AE0102A		05	YK901-YM670		
D10853	CAP	Y	2012B	24	Y2	D40049J	4		AE0104A		07	YK901-YM670		
D10853	CAP	Y	2012R	24	Y2	D40049J	3		AE0104A		07	YK901-YM670		
D10853	DED		2012Z			D40049J	S/R		AE0104A		07	YK901-YM670		
D10853	CAP	Y	2015B	24	Y2	D04205J	13		AE0102A		05	YK901-YM670		
D10853	CAP	Y	2015R	24	Y2	D04205J	12		AE0102A		05	YK901-YM670		
D10853	DED		2015Z			D04205J	S/R		AE0102A		05	YK901-YM670		

SPARE WIRE LIST

D280A103

91-21-12

Section N00226

Page 1 End

Aug 10/2009



<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>						
Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity	
P003-01			W0003	NB2	PNL-FIRST OFFICER INSTRUMENT								
D03991		6		0595	22	CQ	D04221J	13		AP0900A	09	YK901-YK906	

SPARE WIRE LIST

D280A103

91-21-12

Section P003-01
Page 1 End
Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>					
Equip	Term	Type	Wire No.		GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
P003-07			W0003	NB2	PNL-GND PROX TEST							
D01205	CAP	Y	0609		22	PA	D04237J	33		AP0900A	06	YC008-YC030, YK901-YL429, YM643-YM652
D09004P	CAP	Y	0609		22	PA	D04237J	33		AP0900A	06	YC001-YC002, YC007

SPARE WIRE LIST

D280A103

91-21-12

Section P003-07

Page 1 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>					
Equip	Term	Type	Wire No.		GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
P005-28			W2135	RB2	PNL-INSTRUMENT SWITCHING							
D01817	CAP	Y	0034		22	PA	D45237J	B20		AE0502A	07	YC001-YC030, YK901-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section P005-28

Page 1 End

Aug 10/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY	To Equip	Term	Type	Matewith	Pos	Effectivity
P008-25		W2149	NA2	PNL-CAPTAIN VHF NAVIGATION						
D00263	CAP	Y	0023	22 PA	D04029J	23		AE0102A	03	YC001-YC030, YK901-YM670
D00263	CAP	Y	2006B	24 Y2	D04029J	36		AE0102A	03	YC001-YC030, YK901-YM670
D00263	CAP	Y	2006R	24 Y2	D04029J	35		AE0102A	03	YC001-YC030, YK901-YM670
D00263	S/R		2006Z		D04029J	S/R		AE0102A	03	YC001-YC030, YK901-YM670
D00303	CAP	Y	0027	22 PA	D04029J	27		AE0102A	03	YC001-YC030, YK901-YM670
D00303	CAP	Y	2005B	24 Y2	D04029J	34		AE0102A	03	YC001-YC030, YK901-YM670
D00303	CAP	Y	2005R	24 Y2	D04029J	33		AE0102A	03	YC001-YC030, YK901-YM670
D00303	S/R		2005Z		D04029J	S/R		AE0102A	03	YC001-YC030, YK901-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section P008-25

Page 1 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Equip	Matewith Term	Pos Type	Bundle Type	Sep Wire No.	Description		To					
					GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
P008-26			W2151	NB2	PNL-FIRST OFFICER VHF NAVIGATION							
D00265	CAP	Y		0023	22	PA	D04031J	23		AE0105A	02	YC001-YC030, YK901-YM670
D00265	CAP	Y		2006B	24	Y2	D04031J	36		AE0105A	02	YC001-YC030, YK901-YM670
D00265	CAP	Y		2006R	24	Y2	D04031J	35		AE0105A	02	YC001-YC030, YK901-YM670
D00265	S/R			2006Z			D04031J	S/R		AE0105A	02	YC001-YC030, YK901-YM670
D00305	CAP	Y		0027	22	PA	D04031J	27		AE0105A	02	YC001-YC030, YK901-YM670
D00305	CAP	Y		2005B	24	Y2	D04031J	34		AE0105A	02	YC001-YC030, YK901-YM670
D00305	CAP	Y		2005R	24	Y2	D04031J	33		AE0105A	02	YC001-YC030, YK901-YM670
D00305	S/R			2005Z			D04031J	S/R		AE0105A	02	YC001-YC030, YK901-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section P008-26

Page 1 End

Aug 10/2009



<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>					
Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
P008-66			W2401	LN2								
D00551		T		0020	24	PK	D04721P	B10		AE0401A	32	YC001-YK906

SPARE WIRE LIST

D280A103

91-21-12

Section P008-66

Page 1 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>					<u>Effectivity</u>
Equip	Term	Type	Wire No.		GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
P008-73			W2417	NC2	PNL-RADIO TUNING 3							
D00549	13		0013		24	PK	SP00081		S			YK901-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section P008-73

Page 1 End

Aug 10/2009



<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>					
Equip	Term	Type	Wire No.		GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
P0091			W6110	LA2*								
D11418	CAP	Y	0011		20	PA	D40364P	B05		AE0101A	12	YC001-YC030, YK901-YM670
D11418	CAP	Y	0012		20	PA	D40364P	B06		AE0101A	12	YC001-YC030, YK901-YM670
D11418	CAP	Y	0013		20	PA	D40364P	A06		AE0101A	12	YC001-YC030, YK901-YM670

SPARE WIRE LIST

D280A103

91-21-12
Section P0091
Page 1 End
Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>					
Equip		Term	Type	Wire No.	GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
P0092			W6242	RN1								
D11452		CAP	Y	0059	20	PA	D40050P	8		AB0340A	05	ALL
D11452		CAP	Y	0060	20	PA	D40050P	9		AB0340A	05	ALL
P0092			W6414	RB2								
D11448		4		0502	24	PK	D40396P	6		AP0600B	22	YC001-YM652
D11448		33		5508	18	PA	D40396P	4		AP0600B	22	YC031-YM652

SPARE WIRE LIST

D280A103

91-21-12
Section P0092
Page 1 End
Aug 10/2009



<u>From</u>	<u>Matewith</u>	<u>Pos</u>	<u>Bundle</u>	<u>Sep</u>	<u>Description</u>		<u>To</u>					
Equip	Term	Type	Wire No.		GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity
P091-00			W5142	LN1*	PNL-POWER DISTRIBUTION NO.1							
D11416	CAP	Y	0054		20	PA	D40054P	5		AB0340A	01	YC001-YC030, YK901-YM670
D11416	CAP	Y	0054		20	PA	D40054P	5		AB0340A	01	YC031-YC050
D11416	CAP	Y	0055		20	PA	D40054P	6		AB0340A	01	YC001-YC030, YK901-YM670
D11416	CAP	Y	0055		20	PA	D40054P	6		AB0340A	01	YC031-YC050
D11416	CAP	Y	0056		20	PA	D40054P	8		AB0340A	01	YC001-YC030, YK901-YM670
D11416	CAP	Y	0056		20	PA	D40054P	8		AB0340A	01	YC031-YC050

SPARE WIRE LIST

D280A103

91-21-12

Section P091-00

Page 1 End

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY		To Equip	Term	Type	Matewith	Pos	Effectivity
UNK		W0001	NA2								
TB0201Z	A001	1A	0168	22	PA	D04207J	33		AP0900A	03	YC001-YC002, YC007-YC030, YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652
UNK		W0066	RN2								
TB0660Y	B009	1A	0032	20	CQ	D46108J	16		AJ0046A	15	YM643-YM670
TB0666Y	B001	1A	0162	24	PK	D46112J	9		AJ0046B	12	YC007
UNK		W0321	NN2								
D03685A	94		2027B	24	Y2	TB3201Z	B025	1A			YC001-YC006, YC008-YC011
D03685A	95		2027R	24	Y2	TB3201Z	A025	1A			YC001-YC006, YC008-YC011
TB3201Z	B025	1A	2027B	24	Y2	D03685A	94				YC001-YC006, YC008-YC011
TB3201Z	A025	1A	2027R	24	Y2	D03685A	95				YC001-YC006, YC008-YC011
UNK		W2103	RB2								
TB0604Y	A017	1A	0021	20	PA	D46061P	21		AP0600B	23	YC001-YC002
UNK		W2205	SN2								
GD00179	AC..	1A	0002	20	CQ	D10853	CAP	Y	N00226		YK901-YM670
GD00179	AC..	1A	0005	20	CQ	D10853	CAP	Y	N00226		YK901-YM670
GD00179	DC..	1A	0008	20	PA	D10853	CAP	Y	N00226		YK901-YM670
GD00179	ST..	1A	0009	20	PA	D10853	CAP	Y	N00226		YK901-YM670
GD00179	DC..	1A	0013	20	PA	D10853	CAP	Y	N00226		YK901-YM670
GD00179	ST..	1A	0026	20	PA	D10853	CAP	Y	N00226		YK901-YM670
SP02085	S		0014	20	PA	D10853	CAP	Y	N00226		YK901-YM670
SP02186	S		0007	22	PA	D10853	CAP	Y	N00226		YK901-YM670
UNK		W2417	NC2								
SP00081		S	0013	24	PK	D00549	13		P008-73		YK901-YM670

SPARE WIRE LIST

D280A103

91-21-12

Section UNK

Page 1

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY		To Equip	Term	Type	Matewith	Pos	Effectivity	
UNK		W2589	NN2									
GB00261	ST..	1A	2001Z			D04889P	8		AB0288	03	YK901-YM670	
TB0261X	B014	1A	2001B	24	Y2	D04889P	5		AB0288	03	YK901-YM670	
TB0261X	A014	1A	2001R	24	Y2	D04889P	4		AB0288	03	YK901-YM670	
UNK		W2651	SA2									
SP02085		S	0010	20	PA	D41807P	27		AP1800B	08	YK901-YM670	
SP02186		S	0009	22	CQ	D41807P	9		AP1800B	08	YK901-YK920, YM643-YM670	
UNK		W2801	NA2									
P008-00	CAP	Y	2503B	24	Y2	D43319P	B08		AE0303A	23	YK901-YM670	
P008-00	CAP	Y	2503R	24	Y2	D43319P	A08		AE0303A	23	YK901-YM670	
P008-00			2503Z			D43319P	PERG	1F	AE0303A	23	YK901-YM670	
UNK		W3058	RN2									
GD11106	ST..	1	0320	20	PA	D40226P		CAP	Y	AP0600A	05	YK901-YM670
UNK		W3393	LG2									
GD04809	ST..	E	1015Z			D43393J		S/R		AB1050L	02	YC008-YM670
GD04809	ST..	E	1017Z			D43393J		S/R		AB1050L	02	YC008-YM670
GD04809	ST..	E	1019Z			D43393J		S/R		AB1050L	02	YC008-YM670
UNK		W3397	LA3									
GD00949	ST..	E	3006Z			D43397J		S/R		AB1050L	03	YC031-YM670
UNK		W3399	RB3									
GD00973	ST..	E	3006Z			D43389J		S/R		AB1080	03	YC031-YM670
UNK		W3583	NN2									
GD04270	ST..	1	0016	20	PA	D45289J	31		AB0858	01	YK901-YM670	
UNK		W5074	SB2									
GD05060	DC..	E	6002	20	PA	D12816	2		M2263		YC008-YC030, YK901-YK912, YL421-YL428, YM643-YM652	

SPARE WIRE LIST

D280A103

91-21-12

Section UNK

Page 2

Aug 10/2009



737-700/800 WIRING DIAGRAM MANUAL

From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description		To						
				GA	TY	Equip	Term	Type	Matewith	Pos	Effectivity	
UNK		W5074	SB2	(continued)								
GD05062	ST..	E	6001	20	PA	D12816	1		M2263			YC008-YC030, YK901-YK912, YL421-YL428, YM643-YM652
GD05064	ST..	E	6005	20	CQ	D12818	3		M2263			YC008-YC030, YK901-YK912, YL421-YL428, YM643-YM652
GD05064	ST..	E	6008	20	CQ	D12820	3		M02263			YC008-YC030, YK901-YK912, YL421-YL428, YM643-YM652
GD05066	DC..	E	6004	20	CQ	D12818	2		M2263			YC008-YC030, YK901-YK912, YL421-YL428, YM643-YM652
GD05066	DC..	E	6007	20	CQ	D12820	2		M02263			YC008-YC030, YK901-YK912, YL421-YL428, YM643-YM652
UNK		W5156	SA2*									
TB0604X	B048	1A	0021	20	PA	D10982	21		M02061			YC001-YC003
TB1802X	B004	1A	0588	24	B6	D40666P	25		AJ0022	03		YC001-YC002
TB1802X	A032	1A	0594	24	PK	D40666P	30		AJ0022	03		YC001-YC002
TB5801X	B003	1A	0643	22	PA	D46116P	20		AJ0046A	13		YK901-YL430
UNK		W5158	SB2*									
TB1802X	B024	1A	0680	22	GA	D40638P	2		AJ0020B	02		YC001-YC002
TB1802X	B024	1A	0680	22	PA	D40638P	2		AJ0020B	02		YC003
TB1804X	A038	1A	0008	22	GA	D11140	8		M02061			YC001-YC002
TB1804X	A038	1A	0008	22	PA	D11140	8		M02061			YC003
TB1808X	B003	1A	0008	22	PA	D11140	8		M02061			YC004-YM670
TB1808X	A003	%A	0707	22	PA	D40750P	10		AP0600B	02		YK901-YL430
UNK		W5160	RB2*									
TB0602X	B027	1A	0588	22	GK	D40694P	13		AJ0024	07		YC001-YC002

SPARE WIRE LIST

D280A103

91-21-12

Section UNK

Page 3

Aug 10/2009



From Matewith From Equip	Pos Term	Bundle Type	Sep Wire No.	Description GA TY		To Equip	Term	Type	Matewith	Pos	Effectivity
UNK		W5160	RB2*	(continued)							
TB1808X	A003	1A	0038	22	PA	D10988	38		M02061		YC004-YC030, YK901-YM670
UNK		W5381	LA2								
D45551P	B02		2008B	22	VG	D45501P	15		AB1050L	05	YC020-YC022
D45551P	B02		2008B	22	VG	D45501J	15		AB1050L	05	YC023-YC026
D45551P	A02		2008R	22	VG	D45501P	14		AB1050L	05	YC020-YC022
D45551P	A02		2008R	22	VG	D45501J	14		AB1050L	05	YC023-YC026
D45551P	PERG	1F	2008Z			D45501P	S/R		AB1050L	05	YC020-YC022
D45551P	PERG	1F	2008Z			D45501J	S/R		AB1050L	05	YC023-YC026
D45551P	B08		2009B	20	HF	D45501P	17		AB1050L	05	YC020-YC022
D45551P	B08		2009B	20	HF	D45501J	17		AB1050L	05	YC023-YC026
D45551P	A08		2009R	20	HF	D45501P	16		AB1050L	05	YC020-YC022
D45551P	A08		2009R	20	HF	D45501J	16		AB1050L	05	YC023-YC026
D45551P	PERG	1F	2009Z			D45501P	S/R		AB1050L	05	YC020-YC022
D45551P	PERG	1F	2009Z			D45501J	S/R		AB1050L	05	YC023-YC026
D45551P	B02		2008B	22	VG	D45501J	13		AB1050L	05	YC028-YC030
D45551P	A02		2008R	22	VG	D45501J	4		AB1050L	05	YC028-YC030
D45551P	PERG	1F	2008Z			D45501J	S/R		AB1050L	05	YC028-YC030
D45551P	B09		2009B	20	HF	D45501J	10		AB1050L	05	YC028-YC030
D45551P	A09		2009R	20	HF	D45501J	2		AB1050L	05	YC028-YC030
D45551P	PERG	1F	2009Z			D45501J	S/R		AB1050L	05	YC028-YC030
I UNK		W6208	RA2								
TB0604X	A045	1A	0712	20	PA	D40820P	11		AP0600B	17	YC001-YC003
TB0606V	B013	1	0512	16	PA	D40820P	10		AP0600B	17	YK901-YK912, YK918-YK919, YL401-YL429, YM643-YM652

SPARE WIRE LIST

D280A103

91-21-12

Section UNK

Page 4 End

Aug 10/2009