



737-800

Structural Repair Manual

The Boeing Company

This document has EAR data with Export Control Classification Numbers (ECCN) of:
9E991

Export of this technology is controlled under the United States Export Administration Regulations (EAR) (15 CFR 730-774). An export license may be required before it is used for development, production or use by foreign persons from specific countries. The controller of this data has the individual responsibility to abide by all export laws.

BOEING PROPRIETARY, CONFIDENTIAL, AND/OR TRADE SECRET

Copyright © 1995 The Boeing Company
Unpublished Work - All Rights Reserved

Boeing claims copyright in each page of this document only to the extent that the page contains copyrightable subject matter. Boeing also claims copyright in this document as a compilation and/or collective work.

This document includes proprietary information owned by The Boeing Company and/or one or more third parties. Treatment of the document and the information it contains is governed by contract with Boeing. For more information, contact The Boeing Company, P.O. Box 3707, Seattle, Washington 98124.

Boeing, the Boeing signature, the Boeing symbol, 707, 717, 727, 737, 747, 757, 767, 777, 787, Dreamliner, BBJ, DC-8, DC-9, DC-10, KC-10, KDC-10, MD-10, MD-11, MD-80, MD-88, MD-90, P-8A, Poseidon and the Boeing livery are all trademarks owned by The Boeing Company; and no trademark license is granted in connection with this document unless provided in writing by Boeing.

DOCUMENT D634A210

ORIGINAL ISSUE DATE: JULY 5, 1997
PUBLISHED BY BOEING COMMERCIAL AIRPLANES GROUP, SEATTLE, WASHINGTON, USA
A DIVISION OF THE BOEING COMPANY
PAGE DATE: Jul 10/2009



737-800 STRUCTURAL REPAIR MANUAL

This list is for reference only.

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-8K5	HAP	006	YC001	27981	Y1001	7	D-AHFA
737-8K5	HAP	007	YC002	27982	Y1002	8	D-AHFB
737-8K5	HAP	001	YC003	27977	Y1003	9	D-AHFC
737-86J	BER	801	YC051	28068	Y1004	36	TC-SGH
737-8K5	HAP	002	YC004	27978	Y1005	40	D-AHFD
737-86J	BER	802	YC052	28069	Y1006	42	D-ABAO
737-8K5	HAP	003	YC005	27979	Y1007	44	D-AHFE
737-8K5	HAP	004	YC006	27980	Y1008	45	EI-EDZ
737-8Q8	GOT	408	YC101	28213	Y1009	50	PR-GIR
737-8K2	TAV	871	YC071	28373	Y1010	51	PH-HZA
737-8B6	RAM	801	YC301	28980	Y1011	55	CN-RNJ
737-824	CAL	210	YC321	28770	Y1012	56	N26210
737-8K2	TAV	872	YC072	28374	Y1013	57	PH-HZB
737-824	CAL	211	YC322	28771	Y1014	58	N24211
737-8K5	HAP	005	YC007	27989	Y1015	59	EI-EEA
737-8B6	RAM	802	YC302	28981	Y1016	60	CN-RNK
737-824	CAL	212	YC323	28772	Y1017	63	N24212
737-824	CAL	213	YC324	28773	Y1018	65	N27213
737-86N	GEF	801	YC401	28574	Y1019	67	B-2636
737-8Z9	LAL	001	YC381	28177	Y1020	69	OE-LNJ
737-824	CAL	214	YC325	28774	Y1021	74	N14214
737-8Q8	ILF	412	YC121	28215	Y1022	75	N806SY
737-824	CAL	215	YC326	28775	Y1023	76	N26215
737-8Q8	ILF	406	YC111	28226	Y1024	77	D-AXLG
737-8Q8	ILF	409	YC102	28214	Y1025	78	N78IVA
737-824	CAL	216	YC327	28776	Y1026	79	N12216
737-8F2	THY	001	YC501	29765	Y1027	80	TC-JFC
737-824	CAL	217	YC328	28777	Y1028	81	N16217
737-824	CAL	218	YC329	28778	Y1029	84	N12218
737-8K2	TAV	873	YC073	28375	Y1030	85	PH-HZC
737-8F2	THY	002	YC502	29766	Y1031	87	TC-JFD
737-824	CAL	219	YC330	28781	Y1032	88	N14219
737-86N	GOT	406	YC402	28578	Y1033	89	PR-GIV
737-86N	GOT	407	YC403	28575	Y1034	91	PR-GIW

EFFECTIVE AIRCRAFT



737-800
STRUCTURAL REPAIR MANUAL

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-8F2	THY	003	YC503	29767	Y1035	95	TC-JFE
737-8F2	THY	004	YC504	29768	Y1036	99	TC-JFF
737-8F2	THY	005	YC505	29769	Y1037	102	TC-JFG
737-86N	GEF	804	YC404	28576	Y1038	103	B-2637
737-86J	BER	803	YC053	28070	Y1039	106	D-ABAP
737-809	CHI	901	YC571	28402	Y1040	113	B-18601
737-8F2	THY	006	YC506	29770	Y1041	114	TC-JFH
737-832	DAL	701	YC601	29619	Y1042	115	N371DA
737-809	GOT	211	YC572	28403	Y1043	117	PR-GIT
737-832	DAL	702	YC602	29620	Y1044	118	N372DA
737-832	DAL	703	YC603	29621	Y1045	123	N373DA
737-832	DAL	704	YC604	29622	Y1046	128	N374DA
737-809	GOT	212	YC573	29103	Y1047	129	PR-GIU
737-809	CHI	904	YC574	28404	Y1048	130	B-18605
737-809	CHI	905	YC575	28405	Y1049	132	B-18606
737-86J	BER	804	YC054	28071	Y1050	133	D-ABAAQ
737-824	CAL	220	YC331	28929	Y1051	134	N18220
737-809	CHI	906	YC576	29104	Y1052	139	B-18607
737-809	CHI	907	YC577	28406	Y1053	141	B-18608
737-832	DAL	705	YC605	29623	Y1054	145	N375DA
737-86J	BER	805	YC055	28072	Y1055	147	D-ABAR
737-85F	GAX	001	YC701	28821	Y1056	151	D-ABBBL
737-824	CAL	221	YC332	28930	Y1057	153	N12221
737-824	CAL	222	YC333	28931	Y1058	159	N34222
737-8Q8	ILF	407	YC112	28218	Y1059	160	D-AXLF
737-809	CHI	908	YC578	28407	Y1060	161	B-18609
737-824	CAL	223	YC334	28932	Y1061	162	N18223
737-85R	JPL	801	YC731	29036	Y1062	164	VT-JNC
737-824	CAL	224	YC335	28933	Y1063	165	N24224
737-85F	GAX	002	YC702	28822	Y1064	166	TC-SUL
737-824	CAL	225	YC336	28934	Y1065	168	N12225
737-824	CAL	226	YC337	28935	Y1066	171	N26226
737-85F	GAX	003	YC703	28823	Y1067	174	D-ABBM
737-832	DAL	706	YC606	29624	Y1068	176	N376DA
737-85R	JPL	802	YC732	29037	Y1069	177	VT-JND

EFFECTIVE AIRCRAFT



737-800
STRUCTURAL REPAIR MANUAL

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-85H	TAV	001	YC751	29444	Y1070	178	F-GZHV
737-85F	GAX	004	YC704	28824	Y1071	180	HL7779
737-823	AAL	3AA	YC801	29503	Y1072	184	N901AN
737-85H	TAV	002	YC752	29445	Y1073	186	F-GZHN
737-85F	GAX	005	YC705	28825	Y1074	188	D-ABBR
737-823	AAL	3AB	YC802	29504	Y1075	190	N902AN
737-86N	GEF	805	YC405	28587	Y1076	192	4X-EKI
737-823	AAL	3AC	YC803	29505	Y1077	196	N903AN
737-8K2	KLM	301	YC781	29131	Y1078	198	PH-BXA
737-86J	BER	806	YC056	28073	Y1079	200	D-ABAS
737-86J	BER	807	YC057	29120	Y1080	202	D-ABAT
737-858	ELA	001	YC591	29957	Y1081	204	4X-EKA
737-823	AAL	3AD	YC804	29506	Y1082	207	N904AN
737-8AS	GOT	401	YC471	29916	Y1083	210	PR-VBA
737-8Q8	ILF	414	YC126	28220	Y1084	212	B-2638
737-8K5	HAP	008	YC008	27983	Y1085	218	D-AHFH
737-8K5	HAP	009	YC009	27984	Y1086	220	D-AHFI
737-8Z9	LAL	002	YC382	28178	Y1087	222	OE-LNK
737-82R	PGS	001	YC391	29329	Y1088	224	D-ABKA
737-8Q8	ILF	410	YC103	28221	Y1089	226	VQ-BDP
737-8F2	THY	007	YC507	29771	Y1090	228	TC-JFI
737-823	AAL	3AE	YC805	29507	Y1091	231	N905AN
737-86N	GEF	806	YC406	28591	Y1092	233	F-GZZA
737-85F	GAX	006	YC706	28826	Y1093	238	TC-SUM
737-86J	BER	808	YC058	29121	Y1094	239	D-ABAU
737-823	AAL	3AF	YC806	29508	Y1095	240	N906AN
737-8F2	THY	008	YC508	29772	Y1096	242	TC-JFJ
737-8K5	HAP	010	YC010	27990	Y1097	246	CN-RPE
737-8K5	HAP	011	YC011	27991	Y1098	248	HA-LKC
737-858	ELA	002	YC592	29958	Y1099	249	4X-EKB
737-85P	CIF	003	YC761	28381	Y1100	250	EC-HBL
737-8K2	TAV	874	YC074	28376	Y1101	252	PH-HZD
737-823	AAL	3AG	YC807	29509	Y1102	254	N907AN
737-85P	CIF	004	YC762	28382	Y1103	256	EC-HBM
737-86N	GEF	807	YC407	28592	Y1104	258	N975RY

EFFECTIVE AIRCRAFT



737-800
STRUCTURAL REPAIR MANUAL

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-8F2	THY	009	YC509	29773	Y1105	259	TC-JFK
737-8K2	KLM	302	YC782	29132	Y1106	261	PH-BXB
737-824	CAL	227	YC338	28788	Y1107	262	N13227
737-823	AAL	3AH	YC808	29510	Y1108	263	N908AN
737-832	DAL	707	YC607	29625	Y1109	264	N377DA
737-85P	CIF	005	YC763	28383	Y1110	266	EC-HBN
737-823	AAL	3AJ	YC809	29511	Y1111	267	N909AN
737-8F2	THY	010	YC510	29774	Y1112	269	TC-JFL
737-823	AAL	3AK	YC810	29512	Y1113	271	N910AN
737-8Q8	ILF	415	YC127	28056	Y1114	273	B-2646
737-8X2	APC	FJ2	YC931	29968	Y1115	275	DQ-FJG
737-8K2	TAV	875	YC075	28377	Y1116	277	PH-HZE
737-8F2	THY	011	YC511	29775	Y1117	279	TC-JFM
737-824	CAL	228	YC339	28792	Y1118	281	N14228
737-86N	GEF	808	YC408	28595	Y1119	285	OK-TVD
737-824	CAL	229	YC340	28793	Y1120	287	N17229
737-823	AAL	3AL	YC811	29513	Y1121	289	N912AN
737-8K2	TAV	876	YC076	28378	Y1122	291	PH-HZF
737-823	AAL	3AM	YC812	29514	Y1123	293	N913AN
737-809	CHI	909	YC579	29105	Y1124	295	B-18610
737-824	CAL	230	YC341	28794	Y1125	296	N14230
737-85R	JPL	803	YC733	29038	Y1126	297	VT-JNJ
737-8AS	GOT	402	YC472	29917	Y1127	298	PR-VBB
737-824	CAL	231	YC342	28795	Y1128	300	N14231
737-809	CHI	910	YC580	29106	Y1129	302	B-18617
737-824	CAL	232	YC343	28942	Y1130	304	N26232
737-8K2	KLM	303	YC783	29133	Y1131	305	PH-BXC
737-8AS	GOT	403	YC473	29918	Y1132	307	PR-VBC
737-8F2	THY	012	YC512	29776	Y1133	308	TC-JFN
737-8F2	THY	013	YC513	29777	Y1134	309	TC-JFO
737-858	ELA	003	YC593	29959	Y1135	314	4X-EKC
737-823	AAL	3AN	YC813	29515	Y1136	316	N914AN
737-823	AAL	3AP	YC814	29516	Y1137	322	N915AN
737-85R	JPL	804	YC734	29039	Y1138	326	VT-JNL
737-824	CAL	233	YC344	28943	Y1139	328	N17233

EFFECTIVE AIRCRAFT



**737-800
STRUCTURAL REPAIR MANUAL**

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-823	AAL	3AR	YC815	29517	Y1140	332	N916AN
737-824	CAL	234	YC345	28946	Y1141	334	N16234
737-89L	BEJ	001	YC941	29876	Y1142	337	B-2641
737-8X2	APC	FJ3	YC932	29969	Y1143	339	DQ-FJH
737-832	DAL	708	YC608	30265	Y1144	340	N378DA
737-8AS	GOT	404	YC474	29919	Y1145	341	PR-VBD
737-824	CAL	235	YC346	28947	Y1146	342	N14235
737-823	AAL	3AS	YC816	29518	Y1147	344	N917AN
737-84P	HNA	001	YC971	29947	Y1148	345	B-2647
737-8F2	THY	014	YC514	29778	Y1149	349	TC-JFP
737-832	DAL	709	YC609	30349	Y1150	351	N379DA
737-823	AAL	3AT	YC817	29519	Y1151	353	N918AN
737-8K2	KLM	304	YC784	29134	Y1152	355	PH-BXD
737-89L	BEJ	002	YC942	29877	Y1153	359	B-2642
737-832	DAL	710	YC610	30266	Y1154	361	N380DA
737-8AS	GOT	405	YC475	29920	Y1155	362	PR-VBE
737-823	AAL	3AU	YC818	29520	Y1156	363	N919AN
737-832	DAL	711	YC611	30350	Y1157	365	N381DN
737-824	CAL	236	YC347	28801	Y1158	367	N35236
737-8F2	THY	015	YC515	29779	Y1159	370	TC-JFR
737-824	CAL	237	YC348	28802	Y1160	374	N14237
737-823	AAL	3AV	YC819	29521	Y1161	378	N920AN
737-89L	BEJ	003	YC943	29878	Y1162	379	B-2643
737-8Z0	XIN	001	YC981	30071	Y1163	381	B-2510
737-823	AAL	3AW	YC820	29522	Y1164	383	N921AN
737-824	CAL	238	YC349	28804	Y1165	386	N12238
737-832	DAL	712	YC612	30345	Y1166	389	N382DA
737-824	CAL	239	YC350	28951	Y1167	391	N27239
737-832	DAL	713	YC613	30346	Y1168	393	N383DN
737-824	CAL	240	YC351	28952	Y1169	394	N14240
737-824	CAL	241	YC352	28953	Y1170	395	N54241
737-823	AAL	3AX	YC821	29523	Y1171	398	N922AN
737-824	CAL	242	YC353	28805	Y1172	402	N14242
737-824	CAL	243	YC354	28806	Y1173	403	N18243
737-823	AAL	3AY	YC822	29524	Y1174	405	N923AN

EFFECTIVE AIRCRAFT



737-800
STRUCTURAL REPAIR MANUAL

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-824	CAL	244	YC355	28954	Y1175	409	N17244
737-86N	GEF	816	YC461	28608	Y1176	410	D-ABBQ
737-824	CAL	245	YC356	28955	Y1177	411	N17245
737-832	DAL	714	YC614	30347	Y1178	412	N384DA
737-824	CAL	246	YC357	28956	Y1179	413	N27246
737-832	DAL	715	YC615	30348	Y1180	418	N385DN
737-85P	CIF	006	YC764	28384	Y1181	420	EC-HGO
737-85P	CIF	007	YC765	28385	Y1182	421	EC-HGP
737-81Q	TOM	101	YC901	29049	Y1183	424	VT-SIJ
737-85P	CIF	008	YC766	28386	Y1184	426	EC-HGQ
737-89L	BEJ	004	YC944	29879	Y1185	427	B-2645
737-8AR	CAF	001	YC396	30139	Y1186	428	3701
737-824	CAL	247	YC358	28807	Y1187	431	N36247
737-8Q8	ILF	424	YC136	28225	Y1188	433	9Y-GEO
737-823	AAL	3BA	YC823	29525	Y1189	434	N924AN
737-824	CAL	248	YC359	28808	Y1190	435	N13248
737-824	CAL	249	YC360	28809	Y1191	438	N14249
737-823	AAL	3BB	YC824	29526	Y1192	440	N925AN
737-824	CAL	250	YC361	28957	Y1193	441	N14250
737-824	CAL	201	YC362	28958	Y1194	443	N25201
737-81Q	TOM	102	YC902	29050	Y1195	444	VT-SIK
737-832	DAL	716	YC616	30373	Y1196	446	N386DA
737-86N	GEF	817	YC462	28610	Y1197	449	VT-SJF
737-86J	BER	809	YC059	30498	Y1198	450	D-ABAV
737-804	BRI	001	YD001	28227	Y1199	452	G-CDZH
737-823	AAL	3BC	YC825	29527	Y1200	453	N926AN
737-8F2	THY	016	YC516	29780	Y1201	454	TC-JFT
737-86N	GEF	812	YC451	28612	Y1202	455	F-GIRS
737-832	DAL	717	YC617	30374	Y1203	457	N387DA
737-86N	GEF	810	YC441	30230	Y1204	460	HL7555
737-8F2	THY	017	YC517	29781	Y1205	461	TC-JFU
737-823	AAL	3BD	YC826	30077	Y1206	462	N927AN
737-85R	JPL	805	YC735	29040	Y1207	465	VT-JNM
737-8Z0	XIN	002	YC982	30072	Y1208	466	B-2509
737-85F	GAX	007	YC707	28827	Y1209	467	HL7780

EFFECTIVE AIRCRAFT



737-800
STRUCTURAL REPAIR MANUAL

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-832	DAL	718	YC618	30375	Y1210	469	N388DA
737-8K5	HAP	012	YC012	27985	Y1211	470	HA-LKD
737-823	AAL	3BE	YC827	29528	Y1212	473	N928AN
737-8K5	HAP	013	YC013	27986	Y1213	474	D-AHFM
737-8S3	SNR	001	YD021	29246	Y1214	475	TC-MSO
737-86N	GEF	813	YC452	28614	Y1215	477	B-5080
737-804	BRI	002	YD002	28229	Y1216	478	G-CDZI
737-81Q	TOM	103	YC903	29051	Y1217	479	C-FXGG
737-85P	CIF	009	YC767	28535	Y1218	480	EC-HJP
737-86N	GEF	811	YC442	28615	Y1219	482	HL7556
737-86N	GOT	409	YC453	28616	Y1220	483	PR-GIQ
737-8K5	ILF	423	YC014	28228	Y1221	484	D-AHFN
737-86J	BER	810	YC060	30062	Y1222	485	B-5360
737-8Z0	XIN	003	YC983	30073	Y1223	487	B-2511
737-823	AAL	3BF	YC828	30078	Y1224	488	N929AN
737-85R	JPL	806	YC736	29041	Y1225	489	VT-JNN
737-8F2	THY	018	YC518	29782	Y1226	490	TC-JFV
737-8B6	RAM	803	YC303	28983	Y1227	492	CN-RNP
737-8S3	SNR	002	YD022	29247	Y1228	493	TC-MZZ
737-8F2	THY	019	YC519	29783	Y1229	497	TC-JFY
737-8K2	TAV	877	YC077	28379	Y1230	498	PH-HZG
737-8K5	HAP	015	YC015	27987	Y1231	499	D-AHFO
737-804	BRI	003	YD003	30465	Y1232	502	G-CDZL
737-823	AAL	3BG	YC829	29529	Y1233	503	N930AN
737-86N	GEF	818	YC463	28617	Y1234	504	SE-RHS
737-804	BRI	004	YD004	30466	Y1235	505	G-CDZM
737-8Q8	ILF	425	YC137	28230	Y1236	506	9Y-POS
737-8K5	HAP	016	YC016	27988	Y1237	508	D-AHFP
737-823	AAL	3BH	YC830	30079	Y1238	509	N931AN
737-89L	BEJ	005	YC945	29880	Y1239	511	B-2648
737-832	DAL	719	YC619	30376	Y1240	513	N389DA
737-86N	GEF	815	YC454	28618	Y1241	514	TF-JXH
737-86N	GEF	809	YC409	30231	Y1242	515	B-5081
737-86J	BER	811	YC061	30063	Y1243	517	B-5361
737-832	DAL	720	YC620	30536	Y1244	518	N390DA

EFFECTIVE AIRCRAFT



737-800
STRUCTURAL REPAIR MANUAL

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-85P	CIF	010	YC768	28387	Y1245	522	EC-HJQ
737-8K5	HAP	017	YC017	27992	Y1246	523	D-AHFQ
737-8K2	TAV	878	YC078	28380	Y1247	524	PH-HZI
737-823	AAL	3BJ	YC831	29530	Y1248	527	N932AN
737-8K5	HAP	019	YC018	30593	Y1249	528	D-AHFR
737-883	BRT	801	YD041	28318	Y1250	529	LN-RCN
737-823	AAL	3BK	YC832	30080	Y1251	531	N933AN
737-85P	CIF	011	YC769	28388	Y1252	533	EC-HKQ
737-86N	GEF	819	YC464	28619	Y1253	534	EI-DJU
737-832	DAL	721	YC621	30560	Y1254	535	N391DA
737-804	BRI	005	YD005	28231	Y1255	538	SE-DZK
737-8F2	THY	020	YC520	29784	Y1256	539	TC-JFZ
737-85P	CIF	012	YC770	28536	Y1257	540	EC-HKR
737-86N	GEF	820	YC455	28620	Y1258	542	LN-NON
737-8F2	THY	021	YC521	29785	Y1259	544	TC-JGA
737-8Q8	ILF	426	YC138	28232	Y1260	547	9Y-BGI
737-883	HNA	803	YD042	28319	Y1261	548	B-5083
737-8K2	TAV	879	YC079	30389	Y1262	549	PH-HZJ
737-883	HNA	804	YD043	28320	Y1263	551	B-5089
737-8K2	KLM	305	YC785	29595	Y1264	552	PH-BXE
737-823	AAL	3BL	YC833	29531	Y1265	553	N934AN
737-8K2	TAV	880	YC080	30390	Y1266	555	PH-HZK
737-8K5	HAP	018	YC019	28623	Y1267	556	D-AHFS
737-81Q	TOM	106	YC906	29052	Y1268	557	VP-BMI
737-823	AAL	3BM	YC834	30081	Y1269	559	N935AN
737-8AS	RYR	006	YC476	29921	Y1270	560	C-FTCX
737-8S3	SAA	103	YD023	29248	Y1271	561	ZS-SJA
737-86N	GEF	821	YC443	28622	Y1272	562	HL7557
737-832	DAL	722	YC622	30561	Y1273	564	N392DA
737-85F	SAA	008	YC708	28828	Y1274	565	ZS-SJC
737-8F2	THY	022	YC522	29786	Y1275	566	TC-JGB
737-86J	BER	812	YC062	30499	Y1276	567	B-5362
737-86N	GEF	824	YC465	28621	Y1277	570	VT-SPE
737-8AS	RYR	007	YC477	29922	Y1278	571	EI-CSG
737-89L	BEJ	006	YC946	30159	Y1279	572	B-2649

EFFECTIVE AIRCRAFT



**737-800
STRUCTURAL REPAIR MANUAL**

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-86N	GEF	822	YC410	28628	Y1280	573	HL7796
737-823	AAL	3BN	YC835	29532	Y1281	575	N936AN
737-8AS	RYR	008	YC478	29923	Y1282	576	C-FTCZ
737-883	HNA	805	YD044	28321	Y1283	577	B-5090
737-8AS	RYR	009	YC479	29924	Y1284	578	VP-BPG
737-823	AAL	3BP	YC836	30082	Y1285	579	N937AN
737-824	CAL	202	YC363	30429	Y1286	581	N24202
737-85F	SAA	009	YC709	28829	Y1287	582	ZS-SJD
737-8K2	KLM	306	YC786	29596	Y1288	583	PH-BXF
737-832	DAL	723	YC623	30377	Y1289	584	N393DA
737-86N	GEF	825	YC466	28624	Y1290	585	EI-DGZ
737-883	HNA	806	YD045	30193	Y1291	587	B-5082
737-8AS	RYR	010	YC480	29925	Y1292	588	YR-BIA
737-832	DAL	724	YC624	30562	Y1293	589	N394DA
737-86N	GEF	826	YC444	28625	Y1294	590	HL7558
737-824	CAL	203	YC364	30613	Y1295	591	N33203
737-86J	BER	813	YC063	30500	Y1296	593	B-5363
737-89L	BEJ	007	YC947	30160	Y1297	594	B-2650
737-8Q8	ILF	427	YC139	28233	Y1298	598	9Y-TAB
737-832	DAL	725	YC681	30773	Y1299	604	N395DN
737-8K2	KLM	307	YC787	30357	Y1300	605	PH-BXG
737-824	CAL	204	YC365	30576	Y1301	606	N35204
737-84P	HNA	002	YC972	30474	Y1302	607	B-2651
737-823	AAL	3BR	YC837	29533	Y1303	608	N938AN
737-8D6	ALG	001	YD101	30202	Y1304	610	7T-VJJ
737-86N	GEF	827	YC445	28626	Y1305	611	HL7559
737-823	AAL	3BS	YC838	30083	Y1306	612	N939AN
737-824	CAL	205	YC366	30577	Y1307	615	N27205
737-823	AAL	3BT	YC839	30598	Y1308	616	N940AN
737-824	CAL	206	YC367	30578	Y1309	618	N11206
737-86J	BER	814	YC064	30501	Y1310	619	B-5365
737-8B5	KAL	001	YD121	29981	Y1311	622	HL7560
737-823	AAL	3BU	YC840	29534	Y1312	624	N941AN
737-883	SAS	807	YD046	28323	Y1313	625	EC-IVV
737-824	CAL	207	YC368	30579	Y1314	627	N36207

EFFECTIVE AIRCRAFT



737-800
STRUCTURAL REPAIR MANUAL

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-823	AAL	3BV	YC841	30084	Y1315	629	N942AN
737-8K2	KLM	308	YC788	29597	Y1316	630	PH-BXH
737-832	DAL	726	YC682	30378	Y1317	632	N396DA
737-8K2	KLM	309	YC789	30358	Y1318	633	PH-BXI
737-883	SAS	808	YD047	30467	Y1319	634	SE-DTN
737-823	AAL	3BW	YC842	30599	Y1320	635	N943AN
737-8K5	HAP	020	YC020	30413	Y1321	636	D-AHFT
737-832	DAL	727	YC683	30537	Y1322	638	N397DA
737-8K2	KLM	310	YC790	29598	Y1323	639	PH-BXK
737-8D6	ALG	002	YD102	30203	Y1324	640	7T-VJK
737-832	DAL	728	YC684	30774	Y1325	641	N398DA
737-824	CAL	208	YC369	30580	Y1326	644	N26208
737-823	AAL	3BX	YC843	29535	Y1327	645	N944AN
737-824	CAL	209	YC370	30581	Y1328	647	N33209
737-823	AAL	3BY	YC844	30085	Y1329	649	N945AN
737-824	CAL	251	YC371	30582	Y1330	650	N73251
737-8D6	ALG	003	YD103	30204	Y1331	652	7T-VJL
737-8S3	SAA	104	YD024	29249	Y1332	653	ZS-SJB
737-823	AAL	3CA	YC845	30600	Y1333	655	N946AN
737-824	CAL	252	YC372	30583	Y1334	656	N37252
737-832	DAL	729	YC685	30379	Y1335	657	N399DA
737-8K2	KLM	311	YC791	30359	Y1336	659	PH-BXL
737-824	CAL	253	YC373	30584	Y1337	660	N37253
737-832	DAL	730	YC686	30538	Y1338	662	N3730B
737-8B5	KAL	002	YD122	29982	Y1339	663	HL7561
737-832	DAL	731	YC687	30775	Y1340	665	N3731T
737-883	SAS	809	YD048	30194	Y1341	666	EC-IYI
737-824	CAL	254	YC374	30779	Y1342	667	N76254
737-883	SAS	810	YD049	30468	Y1343	668	SE-DTP
737-85F	SAA	010	YC710	28830	Y1344	669	ZS-SJE
737-823	AAL	3CB	YC846	29536	Y1345	671	N947AN
737-883	BRT	802	YD050	30469	Y1346	673	LN-RPL
737-832	DAL	732	YC688	30380	Y1347	674	N3732J
737-8B5	KAL	003	YD123	29983	Y1348	678	HL7562
737-823	AAL	3CC	YC847	30086	Y1349	679	N948AN

EFFECTIVE AIRCRAFT



**737-800
STRUCTURAL REPAIR MANUAL**

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-8Q8	ILF	428	YC140	28234	Y1350	680	9Y-KIN
737-832	DAL	733	YC689	30539	Y1351	685	N3733Z
737-824	CAL	255	YC375	30610	Y1352	686	N37255
737-85F	SAA	011	YC711	30006	Y1353	688	ZS-SJF
737-832	DAL	734	YC690	30776	Y1354	689	N3734B
737-8D6	ALG	004	YD104	30205	Y1355	691	7T-VJM
737-824	CAL	256	YC376	30611	Y1356	692	N73256
737-832	DAL	735	YC691	30381	Y1357	694	N3735D
737-809	CHI	911	YC581	30173	Y1358	695	B-18612
737-883	BRT	803	YD081	30195	Y1359	696	LN-RPM
737-8Q8	ILF	429	YC141	28235	Y1360	697	9Y-ANU
737-823	AAL	3CD	YC848	29537	Y1361	699	N949AN
737-8Q8	ILF	501	YC146	30039	Y1362	701	N734MA
737-8K5	HAP	021	YC021	30414	Y1363	703	D-AHFU
737-823	AAL	3CE	YC849	30087	Y1364	704	N950AN
737-824	CAL	257	YC377	30612	Y1365	706	N38257
737-824	CAL	258	YC378	30802	Y1366	708	N77258
737-832	DAL	736	YC692	30540	Y1367	709	N3736C
737-8BG	SAA	020	YC720	32353	Y1368	711	ZS-SJG
737-832	DAL	737	YC693	30799	Y1369	712	N3737C
737-8K2	KLM	312	YC792	30355	Y1370	714	PH-BXM
737-883	SAS	843	YD082	30470	Y1371	717	LN-RPN
737-8K5	HAP	022	YC022	30415	Y1372	719	D-AHFV
737-823	AAL	3CF	YC850	29538	Y1373	720	N951AA
737-8AS	RYP	011	YC481	29926	Y1374	722	YR-BIB
737-832	DAL	738	YC694	30382	Y1375	723	N3738B
737-8BG	SAA	021	YC721	32354	Y1376	725	ZS-SJH
737-823	AAL	3CG	YC851	30088	Y1377	726	N952AA
737-8AS	RYP	012	YC482	29927	Y1378	727	PK-GEL
737-8K2	KLM	313	YC793	30356	Y1379	728	PH-BXN
737-832	DAL	739	YC695	30541	Y1380	729	N3739P
737-84P	HNA	003	YC973	30475	Y1381	731	B-2652
737-832	DAL	740	YC696	30800	Y1382	732	N3740C
737-883	BRT	804	YD083	30196	Y1383	733	LN-RCX
737-8AS	RYP	013	YC483	29928	Y1384	735	PK-GEM

EFFECTIVE AIRCRAFT



**737-800
STRUCTURAL REPAIR MANUAL**

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-809	ILF	511	YC587	28236	Y1385	739	B-16802
737-823	AAL	3CH	YC852	29539	Y1386	741	N953AN
737-809	ILF	512	YC588	30664	Y1387	743	TF-JXI
737-823	AAL	3CJ	YC853	30089	Y1388	745	N954AN
737-85F	SAA	012	YC712	30007	Y1389	746	ZS-SJI
737-85R	JPL	807	YC737	30403	Y1390	749	VT-JNR
737-832	DAL	741	YC625	30487	Y1391	750	N3741S
737-8D6	ALG	005	YD105	30206	Y1392	751	7T-VJN
737-8Q8	ILF	502	YC151	30627	Y1393	752	D-ABBU
737-8AS	RYR	014	YC484	29929	Y1394	753	PK-GEN
737-832	DAL	742	YC626	30835	Y1395	755	N3742C
737-86N	GEF	828	YC446	28636	Y1396	756	HL7563
737-8AS	RYR	015	YC485	29930	Y1397	757	PK-GEO
737-86J	BER	815	YC065	30876	Y1398	759	D-ABAD
737-8K5	HAP	023	YC023	30882	Y1399	760	D-AHFW
737-85F	SAA	013	YC713	30567	Y1400	761	ZS-SJJ
737-823	AAL	3CK	YC854	29540	Y1401	762	N955AN
737-823	AAL	3CL	YC855	30090	Y1402	764	N956AN
737-86N	GEF	829	YC447	28638	Y1403	765	HL7564
737-883	BRT	805	YD084	28324	Y1404	767	LN-RCY
737-809	ILF	513	YC589	30636	Y1405	768	PR-GIX
737-8Q8	ILF	504	YC104	28237	Y1406	769	N813SY
737-832	DAL	743	YC627	30836	Y1407	770	N3743H
737-8F2	THY	023	YC523	29787	Y1408	771	TC-JGC
737-86N	GEF	830	YC411	28639	Y1409	772	B-5049
737-8Q8	ILF	503	YC152	30332	Y1410	777	N801SY
737-8K5	HAP	024	YC024	30416	Y1411	778	D-AHFX
737-8ANBJ	BBJ	401	YD401	32438	Y3501	779	VP-BHN
737-8K5	HAP	025	YC025	30417	Y1412	781	D-AHFY
737-86J	BER	816	YC066	30877	Y1413	782	D-ABAE
737-8K5	HAP	026	YC026	30883	Y1414	783	D-AHFZ
737-86R	WUH	001	YD171	30494	Y1415	786	ET-ANA
737-8ECBJ	BBJ	402	YD402	32450	Y3502	787	A6-MRM
737-823	AAL	3CM	YC856	29541	Y1416	788	N957AN
737-85F	SAA	014	YC714	30476	Y1417	789	ZS-SJM

EFFECTIVE AIRCRAFT



**737-800
STRUCTURAL REPAIR MANUAL**

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-86N	GEF	835	YC416	30806	Y1418	790	TC-SUY
737-8F2	THY	024	YC524	29788	Y1419	791	TC-JGD
737-8S3	SNR	003	YD025	29250	Y1420	792	TC-APH
737-85F	GAX	027	YC727	30568	Y1421	793	PK-GEK
737-823	AAL	3CN	YC857	30091	Y1422	797	N958AN
737-883	SAS	812	YD051	30197	Y1423	798	LN-RCZ
737-8Q8	ILF	451	YC113	30637	Y1424	800	SE-RHR
737-823	AAL	3CP	YC858	30828	Y1425	801	N959AN
737-8K5	GUN	155	YC027	30783	Y1426	804	B-5155
737-832	DAL	744	YC628	30837	Y1427	805	N3744F
737-8BG	SAA	022	YC722	32355	Y1428	807	ZS-SJK
737-8Q8	ILF	505	YC153	30628	Y1429	808	B-2691
737-86N	GEF	831	YC412	28642	Y1430	813	LN-NOM
737-8K2	TAV	881	YC081	30391	Y1431	814	PH-HZL
737-823	AAL	3CR	YC859	29542	Y1432	818	N960AN
737-8BG	SAA	023	YC723	32356	Y1433	819	ZS-SJL
737-823	AAL	3CS	YC860	30092	Y1434	822	N961AN
737-86Q	BOU	801	YD201	30272	Y1435	824	TC-SUO
737-823	AAL	3CT	YC861	30858	Y1436	825	N962AN
737-86N	GEF	832	YC413	28643	Y1437	828	B-5050
737-86N	GEF	836	YC417	30807	Y1438	829	TC-SUV
737-81Q	TCI	104	YC904	30618	Y1439	830	N732MA
737-832	DAL	745	YC629	32373	Y1440	831	N3745B
737-8K2	TAV	882	YC082	30392	Y1441	833	PH-HZM
737-823	AAL	3CU	YC862	29543	Y1442	834	N963AN
737-8DPBJ	BBJ	403	YD403	32451	Y3503	836	HZ-102
737-823	AAL	3CV	YC863	30093	Y1443	837	N964AN
737-86N	GEF	837	YC421	28644	Y1444	839	VH-VOG
737-86N	GEF	838	YC467	28645	Y1445	840	TC-MAO
737-8Q8	ILF	506	YC154	28241	Y1446	841	B-2692
737-832	DAL	746	YC630	30488	Y1447	842	N3746H
737-86J	BER	817	YC067	30878	Y1448	844	D-ABAF
737-86Q	BOU	802	YD202	30274	Y1449	845	TC-SUU
737-832	DAL	747	YC631	32374	Y1450	846	N3747D
737-83N	ILF	301	YD301	28239	Y1451	847	VP-BQD

EFFECTIVE AIRCRAFT



**737-800
STRUCTURAL REPAIR MANUAL**

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-8B5	KAL	004	YD124	29984	Y1452	848	HL7565
737-82R	ILF	507	YC392	29344	Y1453	849	TC-APU
737-85F	SAA	015	YC715	30569	Y1454	850	ZS-SJN
737-8B5	KAL	005	YD125	29985	Y1455	852	HL7566
737-824	CAL	259	YC379	30803	Y1456	854	N73259
737-81Q	TCI	105	YC905	30619	Y1457	856	N733MA
737-823	AAL	3CW	YC864	29544	Y1458	860	N965AN
737-824	CAL	260	YC380	30855	Y1459	862	N35260
737-823	AAL	3CX	YC865	30094	Y1460	863	N966AN
737-832	DAL	748	YC632	30489	Y1461	865	N3748Y
737-832	DAL	749	YC633	30490	Y1462	867	N3749D
737-8D6	ALG	006	YD106	30207	Y1463	868	7T-VJO
737-86N	GEF	859	YC459	32243	Y1464	869	OK-TVA
737-832	DAL	750	YC634	32375	Y1465	870	N3750D
737-86J	BER	818	YC068	30879	Y1466	871	D-ABAG
737-83N	GOT	410	YD302	32576	Y1467	875	PH-HST
737-86R	WUH	002	YD172	30495	Y1468	876	B-2665
737-86N	GEF	848	YC448	28647	Y1469	878	HL7567
737-86J	GAX	030	YC069	30570	Y1470	879	D-ABBA
737-8DRBJ	BBJ	404	YD404	32777	Y3504	882	OE-ILX
737-823	AAL	3CY	YC866	29545	Y1471	883	N967AN
737-823	AAL	3DA	YC867	30095	Y1472	886	N968AN
737-83N	GOT	411	YD303	28648	Y1473	888	PR-GOZ
737-8B5	KAL	006	YD126	29986	Y1474	891	HL7568
737-832	DAL	751	YC635	30491	Y1475	892	N3751B
737-832	DAL	752	YC636	30492	Y1476	894	N3752
737-8D6	ALG	007	YD107	30208	Y1477	896	7T-VJP
737-824	CAL	261	YJ501	31582	Y1478	897	N77261
737-83N	ILF	304	YD304	30675	Y1479	898	N742MA
737-832	DAL	753	YC637	32626	Y1480	899	N3753
737-824	CAL	262	YJ502	32402	Y1481	901	N33262
737-824	CAL	263	YJ503	31583	Y1482	906	N37263
737-832	DAL	754	YC638	29626	Y1483	907	N3754A
737-8Q8	ILF	514	YC155	30689	Y1484	908	N804SY
737-823	AAL	3DB	YC868	29546	Y1485	910	N969AN

EFFECTIVE AIRCRAFT



**737-800
STRUCTURAL REPAIR MANUAL**

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-8AWBJ	BBJ	405	YD405	32806	Y3505	912	VP-CBB
737-832	DAL	755	YC639	29627	Y1486	914	N3755D
737-823	AAL	3DC	YC869	30096	Y1487	915	N970AN
737-824	CAL	264	YJ504	31584	Y1488	916	N33264
737-832	DAL	756	YC640	30493	Y1489	917	N3756
737-8BG	SAA	024	YC724	32357	Y1490	918	ZS-SJO
737-86Q	BOU	806	YD206	30276	Y1491	920	EC-HZS
737-832	DAL	757	YC641	30813	Y1492	921	N3757D
737-832	DAL	758	YC642	30814	Y1493	923	N3758Y
737-824	CAL	265	YJ505	31585	Y1494	928	N76265
737-83N	ILF	305	YD305	30706	Y1495	929	TC-SGG
737-824	CAL	266	YJ506	32403	Y1496	930	N33266
737-83N	GOT	412	YD306	32348	Y1497	933	PH-HSS
737-8Q8	ILF	516	YC147	30639	Y1498	935	4X-EKP
737-85F	GOT	414	YC728	30571	Y1499	936	PR-GIP
737-823	AAL	3DD	YC870	29547	Y1500	937	N971AN
737-824	CAL	267	YJ507	31586	Y1501	939	N37267
737-823	AAL	3DE	YC871	30097	Y1502	941	N972AN
737-8Q8	ILF	515	YC166	28242	Y1503	942	B-2153
737-83N	GOT	413	YD307	28653	Y1504	948	PR-GIA
737-832	DAL	759	YC643	30815	Y1505	949	N3759
737-832	DAL	760	YC644	30816	Y1506	952	N3760C
737-8BG	SAA	025	YC725	32358	Y1507	955	ZS-SJP
737-824	CAL	268	YJ508	31587	Y1508	957	N38268
737-83N	ILF	308	YD308	28244	Y1509	958	VP-BPI
737-86J	BER	820	YC070	32624	Y1510	961	D-ABBB
737-86Q	BOU	803	YD203	30278	Y1511	963	OK-TVC
737-832	DAL	761	YC645	29628	Y1512	964	N3761R
737-86N	GEF	841	YC426	28655	Y1513	965	B-2161
737-824	CAL	269	YJ509	31588	Y1514	966	N76269
737-832	DAL	762	YC646	30817	Y1515	968	N3762Y
737-8DVBJ	BBJ	406	YD406	32915	Y3506	969	VP-BZL
737-824	CAL	270	YJ510	31632	Y1516	970	N73270
737-823	AAL	3DF	YC872	29548	Y1517	971	N973AN
737-84P	HNA	004	YC974	32599	Y1518	972	B-2159

EFFECTIVE AIRCRAFT



**737-800
STRUCTURAL REPAIR MANUAL**

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-83N	GEF	009	YD309	32577	Y1519	973	VT-JGH
737-85F	GOT	415	YC729	30477	Y1520	976	PR-GIO
737-823	AAL	3DG	YC873	30098	Y1521	977	N974AN
737-824	CAL	271	YJ511	31589	Y1522	982	N35271
737-83N	ILF	310	YD310	28243	Y1523	984	VP-BQF
737-8Q8	ILF	524	YC156	30032	Y1524	985	N805SY
737-824	CAL	272	YJ512	31590	Y1525	987	N36272
737-8BK	TCI	201	YD251	30620	Y1526	991	VH-VOA
737-823	AAL	3DH	YC874	29549	Y1527	992	N975AN
737-86J	BER	821	YD151	32625	Y1528	995	D-ABBC
737-8EFBJ	BBJ	407	YD407	32971	Y3507	996	N371BC
737-85F	GAX	032	YC730	30478	Y1529	997	D-ABBZ
737-83N	GEF	011	YD311	32578	Y1530	998	VT-JGJ
737-823	AAL	3DJ	YC875	30099	Y1531	1001	N976AN
737-83N	GEF	012	YD312	32579	Y1532	1002	VT-JGK
737-832	DAL	763	YC647	29629	Y1533	1003	N3763D
737-832	DAL	764	YC648	30818	Y1534	1006	N3764D
737-81Q	TOM	107	YC907	30785	Y1535	1007	LN-NOC
737-832	DAL	765	YC649	30819	Y1536	1008	N3765
737-824	CAL	273	YJ513	31591	Y1537	1012	N37273
737-883	SAS	813	YD052	28325	Y1538	1014	LN-RRS
737-84P	HNA	005	YC975	32600	Y1539	1015	B-2157
737-8Q8	OMR	802	YC171	30652	Y1540	1018	A40-BN
737-823	AAL	3DK	YC876	29550	Y1541	1019	N977AN
737-8AS	RYS	016	YC486	29931	Y1542	1020	PK-GEP
737-823	AAL	3DL	YC877	30100	Y1543	1022	N978AN
737-83N	GUN	201	YD313	32580	Y1544	1024	B-5120
737-832	DAL	766	YC650	30820	Y1545	1029	N3766
737-8AS	RYS	017	YC487	29932	Y1546	1030	VQ-BCJ
737-832	DAL	767	YC651	30821	Y1547	1031	N3767
737-84P	HNA	006	YC976	32601	Y1548	1033	B-2158
737-83N	ILF	314	YD314	30640	Y1549	1035	VP-BNG
737-883	BRT	806	YD053	28326	Y1550	1036	LN-RRT
737-8AS	RYS	018	YC488	29933	Y1551	1038	C-FYQN
737-8CX	GOT	419	YJ471	32359	Y1552	1041	PR-GOJ

EFFECTIVE AIRCRAFT



**737-800
STRUCTURAL REPAIR MANUAL**

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-838	QAN	001	YC878	29551	Y1553	1042	VH-VXA
737-86J	BER	822	YD152	30880	Y1554	1043	D-ABBD
737-838	QAN	002	YC879	30101	Y1555	1045	VH-VXB
737-8K5	HAP	028	YC028	32905	Y1556	1046	VQ-BDN
737-8Q8	ILF	519	YC167	30631	Y1557	1047	B-2167
737-838	QAN	003	YC880	30897	Y1558	1049	VH-VXC
737-8AS	RYR	019	YC489	29934	Y1559	1050	C-FYQO
737-86Q	BOU	807	YD207	32773	Y1560	1051	EC-IDA
737-832	DAL	768	YC652	29630	Y1561	1053	N3768
737-83N	ILF	315	YD315	28245	Y1562	1054	VP-BND
737-89L	BEJ	008	YC948	30514	Y1563	1055	B-2670
737-86N	GEF	823	YC414	32732	Y1564	1056	TC-API
737-832	DAL	769	YC653	30822	Y1565	1057	N3769L
737-83N	GUN	202	YD316	32609	Y1566	1059	B-5121
737-8AS	RYR	020	YC490	29935	Y1567	1061	EI-CSW
737-824	CAL	274	YJ514	31592	Y1568	1062	N37274
737-838	QAN	004	YC881	29552	Y1569	1063	VH-VXD
737-86J	BER	823	YD153	30881	Y1571	1067	D-ABBE
737-883	BRT	807	YD054	28327	Y1572	1070	LN-RRU
737-838	QAN	005	YC882	30899	Y1573	1071	VH-VXE
737-85R	JPL	808	YC738	30407	Y1574	1073	VT-JNX
737-832	DAL	770	YC654	29631	Y1575	1074	N37700
737-8EVB	BBJ	408	YD408	33079	Y3508	1075	EW001PA
737-86Q	BOU	808	YD208	30281	Y1576	1076	EC-IDT
737-824	CAL	275	YJ515	31593	Y1577	1077	N73275
737-86N	GEF	834	YJ631	32733	Y1578	1078	I-NEOS
737-824	CAL	276	YJ516	31594	Y1579	1079	N73276
737-83N	ILF	317	YD317	28246	Y1580	1081	9Y-SLU
737-86N	GEF	839	YC436	29883	Y1581	1083	PK-GEI
737-8CX	GOT	420	YJ472	32360	Y1582	1084	PR-GOK
737-8Q8	ILF	520	YC168	30632	Y1583	1086	B-2168
737-8K5	HAP	029	YC029	32906	Y1584	1087	VQ-BDO
737-8F2	THY	026	YC526	29790	Y1585	1088	TC-JGF
737-83N	ILF	318	YD318	28247	Y1586	1091	VP-BPY
737-86N	GEF	833	YC422	29884	Y1587	1094	VH-VOH

EFFECTIVE AIRCRAFT



737-800 STRUCTURAL REPAIR MANUAL

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-8B6	RAM	804	YC304	28987	Y1588	1095	CN-RNU
737-838	QAN	006	YC883	29553	Y1589	1096	VH-VXF
737-8CX	GAT	803	YJ473	32361	Y1590	1098	PK-GEE
737-824	CAL	277	YJ517	31595	Y1591	1099	N37277
737-8Z9	LAL	003	YC383	30420	Y1592	1100	OE-LNP
737-838	QAN	007	YC884	30901	Y1593	1102	VH-VXG
737-832	DAL	771	YC655	29632	Y1594	1103	N3771K
737-86N	GEF	842	YC415	32735	Y1595	1104	TC-APJ
737-83N	ILF	319	YD319	30643	Y1596	1106	PK-GEH
737-8BK	TCI	202	YD252	30622	Y1597	1108	VH-VOB
737-83N	GUN	203	YD320	32610	Y1598	1110	B-5122
737-86N	GEF	844	YD391	32736	Y1599	1113	TC-AAP
737-8K5	HAP	030	YC030	32907	Y1600	1117	D-AHLR
737-86N	GEF	840	YC437	33003	Y1601	1121	PK-GEJ
737-8K2	TAV	521	YC091	30646	Y1602	1122	PH-HZY
737-83N	ILF	321	YD321	28249	Y1603	1123	TC-SGF
737-8EQBJ	BBJ	409	YD409	33361	Y3509	1124	N737M
737-8CX	GAT	804	YJ474	32362	Y1604	1125	OK-TVB
737-8K2	TAV	522	YC092	28248	Y1605	1126	PH-HZX
737-804	BRI	006	YD006	32903	Y1606	1127	SE-DZN
737-8Q8	ILF	518	YC176	30645	Y1607	1129	7O-ADL
737-8K2	TAV	413	YC093	29345	Y1608	1132	PH-HZW
737-86N	GEF	845	YC427	29888	Y1609	1133	B-2673
737-83N	GUN	204	YD322	32611	Y1610	1135	B-5123
737-8BK	TCI	203	YD253	30623	Y1611	1136	VH-VOC
737-838	QAN	008	YC885	33478	Y1612	1137	VH-VXH
737-81Q	GUN	156	YC921	30786	Y1613	1138	B-5156
737-8CX	GAT	805	YJ475	32363	Y1614	1139	PK-GEF
737-8AS	RYS	021	YC491	32778	Y1615	1140	VQ-BBR
737-838	QAN	009	YC886	33479	Y1616	1141	VH-VXI
737-86N	GEF	843	YJ632	33004	Y1617	1144	I-NEOT
737-85R	JPL	809	YC739	30408	Y1618	1146	VT-JNY
737-86Q	BOU	816	YD216	32885	Y1619	1147	B-2675
737-83N	ILF	323	YD323	30033	Y1620	1149	PK-GEG
737-86N	GEF	846	YC428	29889	Y1621	1153	B-2690

EFFECTIVE AIRCRAFT



**737-800
STRUCTURAL REPAIR MANUAL**

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-838	QAN	010	YC887	33480	Y1622	1157	VH-VXJ
737-8K2	TAV	529	YC094	30650	Y1623	1158	PH-HZV
737-838	QAN	011	YC888	33481	Y1624	1160	VH-VXK
737-83N	GUN	206	YD324	32882	Y1625	1163	B-5128
737-89L	BEJ	009	YC949	30515	Y1626	1165	B-2671
737-8CX	GAT	806	YJ476	32364	Y1627	1166	EI-CXV
737-8AS	RYR	022	YC492	32779	Y1628	1167	VQ-BBS
737-89L	BEJ	010	YC950	30516	Y1629	1168	B-2672
737-883	SAS	816	YD055	32278	Y1630	1169	LN-RRK
737-84P	HNA	007	YC977	32602	Y1631	1170	B-2676
737-838	QAN	012	YC889	33482	Y1632	1172	VH-VXL
737-809	CHI	912	YC582	30174	Y1633	1175	B-18615
737-844	SAA	181	YD481	32631	Y1634	1176	ZS-SJR
737-838	QAN	013	YC890	33483	Y1635	1177	VH-VXM
737-8AS	RYR	023	YC493	32780	Y1636	1178	VQ-BCM
737-838	QAN	014	YC891	33484	Y1637	1180	VH-VXN
737-83N	GUN	207	YD325	32884	Y1638	1181	B-5129
737-838	QAN	015	YC892	33485	Y1640	1183	VH-VXO
737-83N	GUN	208	YD326	32612	Y1641	1184	B-5125
737-85R	JPL	810	YC740	30409	Y1642	1185	VT-JNZ
737-8Q8	ILF	531	YC177	30661	Y1643	1186	7O-ADN
737-81B	GUN	001	YJ671	32921	Y1644	1187	B-2693
737-84P	HNA	008	YC978	32604	Y1645	1191	B-2677
737-86D	SHA	003	YJ871	33471	Y1646	1192	B-2688
737-8BK	TCI	204	YD254	30624	Y1647	1193	VH-VOD
737-8BK	GOT	416	YD256	30621	Y1648	1194	PR-GOP
737-8Q8	ILF	532	YC178	28252	Y1649	1195	7O-ADM
737-8EXBJ	BBJ	410	YD410	33473	Y3510	1196	A6-AUH
737-83N	GUN	209	YD327	32613	Y1650	1197	B-5126
737-81B	GUN	002	YJ672	32922	Y1651	1199	B-2694
737-8Q8	ILF	530	YC169	28251	Y1652	1200	B-2686
737-83N	GEF	028	YD328	32614	Y1653	1201	VT-JGM
737-844	SAA	182	YD482	32632	Y1654	1205	ZS-SJS
737-83N	GUN	205	YD329	32615	Y1655	1207	B-5127
737-8CX	GAT	807	YJ477	32365	Y1656	1209	TC-SUG

EFFECTIVE AIRCRAFT



737-800
STRUCTURAL REPAIR MANUAL

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-86J	BER	824	YD154	32917	Y1657	1210	D-ABBF
737-83N	GEF	030	YD330	32616	Y1658	1212	VT-JGN
737-81B	GUN	003	YJ673	32923	Y1659	1213	B-2695
737-89L	BEJ	011	YC951	30517	Y1660	1224	B-2657
737-844	SAA	183	YD483	32633	Y1661	1225	ZS-SJT
737-85R	JPL	811	YC741	30410	Y1662	1228	VT-JGA
737-81B	GUN	004	YJ674	32924	Y1663	1230	B-2696
737-86Q	BOU	809	YD209	30284	Y1664	1233	EC-III
737-81Q	GUN	157	YC922	30787	Y1665	1234	B-5157
737-8CX	GAT	808	YJ478	32366	Y1666	1235	TC-SUH
737-8AS	RYR	024	YC494	29936	Y1667	1236	EI-CTA
737-86Q	BOU	817	YD217	30285	Y1668	1237	OO-VAS
737-8AS	RYR	025	YC495	29937	Y1669	1238	EI-CTB
737-8AS	RYR	026	YC496	29938	Y1670	1240	EI-DAC
737-8BK	GOT	417	YD257	30625	Y1671	1248	PR-GOT
737-8AS	RYR	027	YC497	33544	Y1672	1249	EI-DAD
737-81B	GUN	005	YJ675	32925	Y1673	1250	B-2697
737-86N	GEF	860	YJ001	33419	Y1674	1251	TF-JXF
737-8AS	RYR	028	YC498	33545	Y1675	1252	EI-DAE
737-8CX	GAT	809	YJ479	32367	Y1676	1253	TC-SUI
737-86J	BER	825	YD155	32918	Y1677	1255	D-ABBG
737-8AS	RYR	029	YC499	29939	Y1678	1262	EI-DAF
737-86N	GEF	861	YJ002	29887	Y1679	1263	I-NEOU
737-8AS	RYR	030	YJ801	29940	Y1680	1265	EI-DAG
737-81B	GUN	006	YJ676	32926	Y1681	1268	B-5020
737-8AS	RYR	031	YJ802	33546	Y1682	1269	EI-DAH
737-8AS	RYR	032	YJ803	33547	Y1683	1271	EI-DAI
737-8Q8	ILF	533	YC186	32796	Y1684	1272	5B-DBU
737-8AS	RYR	033	YJ804	33548	Y1685	1274	EI-DAJ
737-86J	BER	826	YD156	32919	Y1686	1279	D-ABBH
737-86Q	BOU	818	YD218	30286	Y1687	1280	D-ABBJ
737-8Q8	ILF	552	YC201	32797	Y1688	1287	HA-LOC
737-8CX	GAT	810	YJ480	32368	Y1689	1289	TC-SUJ
737-81B	GUN	007	YJ677	32927	Y1690	1290	B-5021
737-86J	BER	827	YD157	32920	Y1691	1293	D-ABBI

EFFECTIVE AIRCRAFT



**737-800
STRUCTURAL REPAIR MANUAL**

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-8Q8	ILF	534	YC187	30654	Y1692	1295	5B-DBV
737-804	BRI	007	YD007	32904	Y1693	1302	SE-DZV
737-8Q8	ILF	535	YC188	30671	Y1694	1307	C-GLBW
737-86Q	BOU	819	YD219	30287	Y1695	1308	4X-EKO
737-8Q8	ILF	537	YC189	33699	Y1696	1309	C-GDBX
737-8AS	RYR	034	YJ805	33717	Y1697	1310	EI-DAK
737-8AS	RYR	035	YJ806	33718	Y1698	1311	EI-DAL
737-8AS	RYR	036	YJ807	33719	Y1699	1312	EI-DAM
737-8BK	TCI	211	YD261	33013	Y1700	1317	D-ABBK
737-81B	GUN	008	YJ678	32928	Y1701	1323	B-5022
737-838	QAN	016	YJ911	33722	Y1702	1324	VH-VXP
737-82R	ILF	556	YC393	30658	Y1703	1325	VH-VOV
737-83N	ILF	331	YD331	30660	Y1704	1330	VT-SPH
737-838	QAN	017	YJ912	33723	Y1705	1335	VH-VXQ
737-81M	OMR	801	YJ901	33104	Y1706	1337	A40-BR
737-838	QAN	018	YJ913	33724	Y1707	1340	VH-VXR
737-8Z9	LAL	004	YC384	30421	Y1708	1345	OE-LNQ
737-8B6	RAM	805	YC305	33057	Y1709	1347	CN-RNW
737-81B	GUN	009	YJ679	32929	Y1710	1348	B-5040
737-838	QAN	019	YJ914	33725	Y1711	1352	VH-VXS
737-81B	GUN	010	YJ680	32930	Y1712	1355	B-5041
737-8FE	VOZ	001	YJ861	33758	Y1713	1359	VH-VOK
737-8AS	RYR	037	YJ808	33549	Y1714	1361	EI-DAN
737-81B	GUN	011	YJ681	32931	Y1715	1362	B-5042
737-8FE	VOZ	002	YJ862	33759	Y1716	1364	VH-VOL
737-8AS	RYR	038	YJ809	33550	Y1717	1366	EI-DAO
737-8BK	TCI	250	YJ931	33014	Y1718	1367	OO-VAC
737-8AS	RYR	039	YJ810	33551	Y1719	1368	EI-DAP
737-8AS	RYR	040	YJ811	33552	Y1720	1371	EI-DAR
737-8AS	RYR	041	YJ812	33553	Y1721	1372	EI-DAS
737-8FE	VOZ	003	YJ863	33794	Y1722	1373	VH-VOM
737-8FE	VOZ	004	YJ864	33795	Y1723	1375	VH-VON
737-8FE	VOZ	005	YJ865	33796	Y1724	1377	ZK-PBA
737-844	SAA	184	YD484	32634	Y1725	1383	ZS-SJU
737-8V3	COP	480	YJ591	33709	Y1726	1387	HP-1522CMP

EFFECTIVE AIRCRAFT



**737-800
STRUCTURAL REPAIR MANUAL**

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-8FE	VOZ	006	YJ866	33797	Y1727	1389	ZK-PBB
737-824	CAL	278	YJ531	31596	Y1728	1390	N73278
737-8FE	VOZ	007	YJ867	33798	Y1729	1391	VH-VOQ
737-81B	GUN	012	YJ682	32932	Y1730	1395	B-5067
737-8V3	COP	481	YJ592	33710	Y1731	1397	HP-1523CMP
737-86Q	BOU	881	YK001	30289	Y1732	1399	LN-NOO
737-8Q8	ILF	804	YK101	30680	Y1733	1402	B-5073
737-83N	ILF	332	YD332	30679	Y1734	1404	B-2865
737-86Q	BOU	882	YK002	30290	Y1735	1406	EC-ISE
737-844	SAA	185	YD485	32635	Y1736	1407	ZS-SJV
737-8Q8	ILF	805	YK102	30692	Y1737	1410	B-5075
737-824	CAL	279	YJ532	31597	Y1738	1411	N79279
737-838	QAN	020	YJ915	33760	Y1739	1412	VH-VXT
737-8Q8	ILF	806	YK103	30690	Y1740	1414	B-5078
737-8AS	RYR	042	YJ813	33554	Y1741	1418	EI-DAT
737-838	QAN	021	YJ916	33761	Y1742	1420	VH-VXU
737-8Q8	ILF	807	YK104	30693	Y1743	1422	B-5079
737-824	CAL	280	YJ533	31598	Y1744	1423	N36280
737-883	BRT	808	YD056	28328	Y1745	1424	LN-RRL
737-824	CAL	281	YJ534	31599	Y1746	1425	N37281
737-8AS	RYR	043	YJ814	33555	Y1747	1426	EI-DAV
737-8AS	RYR	044	YJ815	33556	Y1748	1428	EI-DAW
737-8B6	RAM	701	YK301	33058	Y1749	1432	CN-RNZ
737-86N	GEF	862	YJ003	32739	Y1750	1434	B-5076
737-86Q	BOU	883	YK003	30291	Y1751	1435	EC-ISN
737-8Q8	ILF	101	YK111	30665	Y1752	1436	VH-VOU
737-8AS	RYR	045	YJ816	33557	Y1753	1438	EI-DAX
737-824	CAL	282	YJ535	31634	Y1754	1440	N34282
737-8AS	RYR	046	YJ817	33558	Y1755	1441	EI-DAY
737-8AS	RYR	047	YJ818	33559	Y1756	1443	EI-DAZ
737-86N	GEF	863	YJ011	32740	Y1757	1444	OK-TVK
737-8BK	TCI	251	YJ932	33017	Y1758	1446	VH-VOX
737-8AS	RYR	048	YJ819	33560	Y1759	1447	EI-DCB
737-8Q8	ILF	553	YC202	30667	Y1760	1448	HA-LOH
737-86Q	BOU	884	YK004	30292	Y1761	1451	C-FEAK

EFFECTIVE AIRCRAFT



**737-800
STRUCTURAL REPAIR MANUAL**

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-824	CAL	283	YJ536	31606	Y1762	1456	N73283
737-8B6	RAM	702	YK302	33059	Y1763	1457	CN-ROA
737-82R	ILF	557	YC394	30666	Y1764	1460	B-5088
737-8FE	VOZ	008	YK321	33799	Y1765	1462	ZK-PBF
737-8AS	RYR	049	YJ820	33561	Y1766	1463	EI-DCC
737-86N	GEF	865	YJ004	32742	Y1767	1464	B-5077
737-8AS	RYR	050	YJ821	33562	Y1768	1466	EI-DCD
737-8Q8	ILF	821	YK121	32799	Y1769	1467	N738MA
737-86Q	BOU	885	YK005	30294	Y1770	1469	OK-TVI
737-8Q8	ILF	812	YK112	32798	Y1771	1470	VH-VOW
737-8Q8	ILF	831	YK131	29351	Y1772	1471	OK-TVJ
737-8AS	RYR	051	YJ822	33563	Y1773	1473	EI-DCE
737-824	CAL	284	YJ537	31635	Y1774	1475	N33284
737-8K2	TAV	883	YC083	32943	Y1775	1478	PH-HZN
737-8Q8	ILF	554	YC206	30669	Y1776	1479	HA-LOK
737-8Q8	ILF	822	YK122	30670	Y1777	1481	N739MA
737-8FE	VOZ	009	YK322	33800	Y1778	1483	VH-VOS
737-86N	GEF	866	YJ021	33677	Y1779	1486	I-NEOX
737-8BK	TCI	252	YJ933	33018	Y1780	1488	LN-NOS
737-8Q8	ILF	555	YC203	30672	Y1781	1497	HA-LOM
737-83N	ILF	333	YD333	30673	Y1782	1500	B-2863
737-8BK	TCI	253	YJ934	33019	Y1783	1502	YR-BIC
737-8FE	VOZ	010	YK323	33801	Y1784	1504	VH-VOT
737-824	CAL	286	YJ538	31600	Y1785	1506	N33286
737-824	CAL	287	YJ539	31636	Y1786	1509	N37287
737-824	CAL	288	YJ540	33451	Y1787	1516	N76288
737-8AS	RYR	052	YJ823	33804	Y1788	1529	EI-DCF
737-8AS	RYR	053	YJ824	33805	Y1789	1530	EI-DCG
737-838	QAN	022	YJ917	33762	Y1790	1532	VH-VYA
737-838	QAN	023	YJ918	33763	Y1791	1534	VH-VYB
737-824	CAL	285	YJ541	33452	Y1792	1540	N78285
737-824	CAL	289	YJ542	31607	Y1793	1542	N33289
737-8AS	RYR	054	YJ825	33566	Y1794	1546	EI-DCH
737-8AS	RYR	055	YJ826	33567	Y1795	1547	EI-DCI
737-8FE	VOZ	011	YK324	33996	Y1796	1551	ZK-PBD

EFFECTIVE AIRCRAFT



**737-800
STRUCTURAL REPAIR MANUAL**

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-883	SAS	818	YD057	32277	Y1797	1554	LN-RRW
737-8FE	VOZ	012	YK325	33997	Y1798	1559	VH-VUA
737-8AS	RYR	056	YJ827	33564	Y1799	1562	EI-DCJ
737-8AS	RYR	057	YJ828	33565	Y3801	1563	EI-DCK
737-824	CAL	290	YJ543	31601	Y3802	1567	N37290
737-8FE	VOZ	013	YK326	34013	Y3803	1573	ZK-PBJ
737-8AS	RYR	058	YJ829	33806	Y3804	1576	EI-DCL
737-8AS	RYR	059	YJ830	33807	Y3805	1578	EI-DCM
737-85P	CIF	013	YK361	33971	Y3806	1580	EC-JAP
737-8FE	VOZ	014	YK327	34014	Y3807	1582	VH-VUC
737-8V3	COP	482	YJ593	34006	Y3808	1585	HP-1526CMP
737-8BK	TCI	254	YJ935	33016	Y3809	1588	D-APBC
737-8AS	RYR	060	YJ831	33808	Y3810	1590	EI-DCN
737-8AS	RYR	061	YJ832	33809	Y3811	1592	EI-DCO
737-8FE	VOZ	015	YK328	34015	Y3812	1594	ZK-PBG
737-8AS	RYR	062	YJ833	33810	Y3813	1595	EI-DCP
737-85P	CIF	014	YK362	33972	Y3814	1598	EC-JBJ
737-86Q	BOU	886	YK006	30295	Y3815	1600	HB-IIR
737-8AJBJ	BBJ	412	YD412	32825	Y3511	1602	A6-HEH
737-85P	CIF	015	YK363	33973	Y3816	1606	EC-JBK
737-83N	GEF	034	YD334	32663	Y3817	1608	VT-JGE
737-85P	CIF	016	YK364	33974	Y3818	1610	EC-JBL
737-824	CAL	291	YJ544	33454	Y3819	1611	N73291
737-838	QAN	024	YJ919	33991	Y3820	1612	VH-VYC
737-8AS	RYR	063	YJ834	33811	Y3821	1613	EI-DCR
737-8AS	RYR	064	YJ835	33812	Y3822	1615	EI-DCS
737-8AS	RYR	065	YJ836	33813	Y3823	1617	EI-DCT
737-8AS	RYR	066	YJ837	33814	Y3824	1618	EI-DCV
737-824	CAL	292	YJ545	33455	Y3825	1622	N33292
737-8AS	RYR	067	YJ838	33568	Y3826	1631	EI-DCW
737-86J	BER	828	YD158	30827	Y3827	1632	D-ABBO
737-8AS	RYR	068	YJ839	33569	Y3828	1635	EI-DCX
737-8AS	RYR	069	YJ840	33570	Y3829	1637	EI-DCY
737-8AS	RYR	070	YJ841	33815	Y3830	1639	EI-DCZ
737-890	ASA	401	YK431	30022	Y3831	1640	N546AS

EFFECTIVE AIRCRAFT



**737-800
STRUCTURAL REPAIR MANUAL**

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-8AS	RYR	071	YJ842	33571	Y3832	1642	EI-DHA
737-8FH	LOM	401	YK401	29639	Y3833	1643	VT-JGF
737-89P	ILF	456	YK456	30681	Y3834	1645	B-5100
737-8B6	RAM	703	YK303	33060	Y3835	1646	CN-ROB
737-86Q	BOU	887	YK007	30296	Y3836	1647	VT-AXA
737-8FH	LOM	402	YK402	29640	Y3837	1649	B-5115
737-8AS	RYR	072	YJ843	33572	Y3838	1652	EI-DHB
737-86J	BER	829	YD159	29641	Y3839	1654	D-ABBP
737-8AS	RYR	073	YJ844	33573	Y3840	1655	EI-DHC
737-8AS	RYR	074	YJ845	33816	Y3841	1657	EI-DHD
737-8AS	RYR	075	YJ846	33574	Y3842	1658	EI-DHE
737-8AS	RYR	076	YJ847	33575	Y3843	1660	EI-DHF
737-8B6	RAM	704	YK304	33061	Y3844	1661	CN-ROC
737-86N	GEF	868	YJ012	32655	Y3845	1662	LN-NOP
737-8FH	ASA	501	YK403	30824	Y3846	1664	N549AS
737-8Q8	ILF	559	YC170	32801	Y3847	1666	B-5130
737-8BK	TCI	255	YJ936	33021	Y3848	1667	D-APBD
737-8Q8	ILF	832	YK132	30683	Y3849	1669	N809SY
737-8AS	RYR	077	YJ848	33576	Y3850	1670	EI-DHG
737-8BK	TCI	256	YJ941	33022	Y3851	1672	G-CDEG
737-89P	ILF	457	YK457	30682	Y3852	1673	B-5101
737-81M	OMR	803	YJ902	34242	Y3853	1674	A40-BJ
737-8FE	VOZ	016	YK329	34167	Y3854	1676	VH-VUE
737-8AS	RYR	078	YJ849	33817	Y3855	1677	EI-DHH
737-8Z9	LAL	005	YC385	33833	Y3856	1680	OE-LNR
737-89P	ILF	458	YK458	32800	Y3857	1681	B-5086
737-8BK	TCI	257	YJ942	33023	Y3858	1682	VT-AXB
737-8CT	WJI	480	YK480	34151	Y3859	1684	C-GKWJ
737-8AS	RYR	079	YJ850	33818	Y3860	1685	EI-DHI
737-8FH	LOM	404	YK404	29668	Y3861	1686	VT-JGG
737-8BK	TCI	258	YJ943	33024	Y3862	1688	VT-AXC
737-8Q8	ILF	558	YC207	30684	Y3863	1689	HA-LOU
737-8AS	RYR	080	YJ851	33819	Y3864	1691	EI-DHJ
737-8FH	LOM	405	YK405	29669	Y3865	1692	OK-TVF
737-8Q8	ILF	836	YK136	30040	Y3866	1693	G-DLCH

EFFECTIVE AIRCRAFT



**737-800
STRUCTURAL REPAIR MANUAL**

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-86N	GEF	869	YJ013	32658	Y3867	1695	LN-NOQ
737-8AS	RYP	081	YJ852	33820	Y3868	1696	EI-DHK
737-8FE	VOZ	017	YK330	34168	Y3869	1697	VH-VUF
737-8AS	RYP	082	YJ853	33821	Y3870	1698	EI-DHM
737-8FH	FUA	001	YK426	29671	Y3871	1700	TC-SNI
737-89P	ILF	459	YK459	30691	Y3872	1702	B-5085
737-8Q8	ILF	491	YD491	30686	Y3873	1704	B-5131
737-8Q8	ILF	837	YK137	32841	Y3874	1705	G-SAAW
737-838	QAN	025	YJ920	33992	Y3875	1706	VH-VYD
737-86N	GEF	871	YK601	32659	Y3876	1709	PK-GEQ
737-8V3	COP	483	YJ594	29670	Y3877	1711	HP-1529CMP
737-838	QAN	026	YJ921	33993	Y3878	1712	VH-VYE
737-8CT	WJI	481	YK481	34152	Y3879	1714	C-GJWS
737-85P	ARE	017	YK365	33975	Y3880	1716	EC-JHK
737-8CT	WJI	482	YK482	32770	Y3881	1719	C-GZWS
737-8Z9	LAL	006	YC386	34262	Y3882	1720	OE-LNS
737-89P	ILF	460	YK460	32802	Y3883	1725	B-5087
737-85N	SHG	001	YK511	33664	Y3884	1726	B-5118
737-838	QAN	027	YJ922	33994	Y3885	1727	VH-VYF
737-8CT	WJI	483	YK483	34153	Y3886	1731	C-GWSA
737-8FH	FUA	002	YK427	30826	Y3887	1732	TC-SNH
737-8CT	WJI	484	YK484	34154	Y3888	1734	C-GWBL
737-838	QAN	028	YJ923	33995	Y3889	1736	VH-VYG
737-890	ASA	402	YK432	30020	Y3890	1738	N548AS
737-85P	ARE	018	YK366	33976	Y3891	1740	EC-JHL
737-824	CAL	293	YJ546	33453	Y3892	1743	N37293
737-8FH	LOM	406	YK406	29672	Y3893	1745	B-5116
737-8D6	ALG	008	YD108	34164	Y3894	1748	7T-VKA
737-85N	SHG	002	YK512	33660	Y3895	1752	B-5111
737-824	CAL	294	YJ547	34000	Y3896	1762	N33294
737-84P	HNA	009	YK701	32603	Y3897	1766	B-5135
737-8D6	ALG	009	YD109	34165	Y3898	1768	7T-VKB
737-85N	SHG	004	YK513	33661	Y3899	1770	B-5117
737-8D6	ALG	010	YD110	34166	Y3900	1773	7T-VKC
737-85N	SHG	005	YK514	33665	Y3901	1775	B-5119

EFFECTIVE AIRCRAFT



**737-800
STRUCTURAL REPAIR MANUAL**

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-824	CAL	295	YJ548	34001	Y3902	1779	N77295
737-8AS	RYS	083	YJ854	33577	Y3903	1782	EI-DHN
737-81B	GUN	013	YJ683	34250	Y3904	1784	B-5113
737-824	CAL	296	YJ549	34002	Y3905	1787	N77296
737-8Q8	ILF	492	YD492	30685	Y3906	1789	B-5132
737-824	CAL	297	YJ550	34003	Y3907	1791	N39297
737-8AS	RYS	084	YJ855	33578	Y3908	1792	EI-DHO
737-8AS	RYS	085	YJ856	33579	Y3909	1794	EI-DHP
737-84P	HNA	010	YK702	32605	Y3910	1796	B-5136
737-8AS	RYS	086	YJ857	33822	Y3911	1798	EI-DHR
737-84P	HNA	011	YK703	34030	Y3912	1800	B-5141
737-8GGBJ	BBJ	413	YD413	34620	Y3512	1803	VP-CSK
737-84P	HNA	012	YK704	32606	Y3913	1805	B-5137
737-81B	GUN	014	YJ684	34248	Y3914	1806	B-5112
737-8AS	RYS	087	YJ858	33580	Y3915	1807	EI-DHS
737-8AS	RYS	088	YJ859	33581	Y3916	1809	EI-DHT
737-8AS	RYS	089	YJ860	33582	Y3917	1811	EI-DHV
737-824	CAL	298	YJ551	34004	Y3918	1813	N37298
737-838	QAN	029	YJ924	34180	Y3919	1815	VH-VYH
737-86N	GEF	876	YK602	34251	Y3920	1817	EC-JKZ
737-8AS	RYS	090	YK801	33823	Y3921	1819	EI-DHW
737-824	CAL	299	YJ552	34005	Y3922	1821	N73299
737-8AS	RYS	091	YK802	33585	Y3923	1824	EI-DHX
737-8AS	RYS	092	YK803	33824	Y3924	1826	EI-DHY
737-8F2	THY	027	YK551	34405	Y3925	1828	TC-JGG
737-86N	SKM	001	YK611	34247	Y3926	1830	JA737H
737-84P	HNA	013	YK705	32607	Y3927	1832	B-5138
737-8AS	RYS	093	YK804	33583	Y3928	1834	EI-DHZ
737-8AS	RYS	094	YK805	33584	Y3929	1836	EI-DLB
737-838	QAN	030	YJ925	34181	Y3930	1840	VH-VYI
737-838	QAN	031	YJ926	34182	Y3931	1842	VH-VYJ
737-8EH	GOT	301	YK721	34474	Y3932	1843	PR-GTA
737-8AS	RYS	095	YK806	33586	Y3933	1844	EI-DLC
737-838	QAN	032	YJ927	34183	Y3934	1846	VH-VYK
737-8AS	RYS	096	YK807	33825	Y3935	1847	EI-DLD

EFFECTIVE AIRCRAFT



**737-800
STRUCTURAL REPAIR MANUAL**

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-81B	GUN	015	YJ685	34252	Y3936	1851	B-5133
737-8F2	THY	028	YK552	34406	Y3937	1852	TC-JGH
737-838	QAN	033	YJ928	34184	Y3938	1854	VH-VYL
737-84P	HNA	014	YK706	32608	Y3939	1855	B-5139
737-86N	SKM	002	YK612	34249	Y3940	1857	JA737K
737-890	ASA	403	YK433	34593	Y3941	1860	N551AS
737-8GJ	ROJ	001	YK941	34896	Y3942	1861	VT-SPF
737-8Q8	ILF	841	YK141	30694	Y3943	1863	VT-SJG
737-8AS	RYR	097	YK808	33587	Y3944	1864	EI-DLE
737-86N	GEF	882	YK621	34253	Y3945	1866	B-5146
737-8AS	RYR	098	YK809	33588	Y3946	1867	EI-DLF
737-8AS	RYR	099	YK810	33589	Y3947	1869	EI-DLG
737-8K5	HAP	031	YK901	34684	Y3948	1870	D-ATUC
737-8F2	THY	029	YK553	34407	Y3949	1873	TC-JGI
737-8DC	MIB	001	YK571	34596	Y3950	1875	N740EH
737-85P	ARE	019	YK367	33977	Y3951	1878	EC-JNF
737-8F2	THY	030	YK554	34408	Y3952	1880	TC-JGJ
737-890	ASA	404	YK434	34595	Y3953	1882	N552AS
737-8AS	RYR	100	YK811	33590	Y3954	1886	EI-DLH
737-808	SNR	004	YL001	34701	Y3955	1887	B-5167
737-8Q8	ILF	842	YK142	30695	Y3956	1891	VT-SJH
737-8Q8	ILF	851	YK151	30696	Y3957	1892	VT-AXD
737-8AS	RYR	101	YK812	33591	Y3958	1894	EI-DLI
737-86N	GEF	883	YK631	32669	Y3959	1895	SU-BPG
737-86N	GEF	884	YJ005	34254	Y3960	1897	B-5148
737-8AS	RYR	102	YK813	34177	Y3961	1899	EI-DLJ
737-8K5	HAP	032	YK902	34685	Y3962	1901	D-ATUD
737-8K5	HAP	033	YK903	34686	Y3963	1903	D-ATUE
737-8AS	RYR	103	YK814	33592	Y3964	1904	EI-DLK
737-890	ASA	405	YK435	34594	Y3965	1906	N553AS
737-8K5	HAP	034	YK904	34687	Y3966	1907	D-ATUF
737-8K5	HAP	035	YK905	34688	Y3967	1909	D-ATUG
737-8Q8	ILF	852	YK152	29368	Y3968	1910	VT-AXE
737-8Q8	ILF	493	YD493	30698	Y3969	1911	B-5140
737-8B6	RAM	705	YK305	33063	Y3970	1913	CN-ROE

EFFECTIVE AIRCRAFT



**737-800
STRUCTURAL REPAIR MANUAL**

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-8AS	RYR	104	YK815	33593	Y3971	1914	EI-DLL
737-81B	GUN	016	YJ690	30697	Y3972	1915	B-5147
737-808	SNR	005	YL002	34702	Y3973	1917	B-5168
737-8BK	GOT	418	YJ944	33027	Y3974	1918	PR-GIE
737-85R	JPL	812	YC742	34798	Y3975	1920	VT-JGP
737-84P	HNA	015	YK707	34029	Y3976	1921	B-5153
737-8AS	RYR	105	YK816	33594	Y3977	1923	EI-DLM
737-8F2	THY	031	YK555	34409	Y3978	1924	TC-JGK
737-8AS	RYR	106	YK817	33595	Y3979	1926	EI-DLN
737-8F2	THY	032	YK556	34410	Y3980	1927	TC-JGL
737-8AS	RYR	107	YK818	34178	Y3981	1929	EI-DLO
737-86N	GEF	887	YK641	32672	Y3982	1932	VT-SPW
737-81B	GUN	017	YJ691	30699	Y3983	1933	B-5149
737-8K5	HAP	036	YK906	34689	Y3984	1935	D-ATUH
737-8BK	KLM	314	YJ945	33028	Y3985	1936	PH-BXU
737-8Z9	LAL	007	YC387	33834	Y3986	1938	OE-LNT
737-8Q8	ILF	857	YK153	29369	Y3987	1939	VT-AXF
737-808	SNR	006	YL003	34703	Y3988	1941	B-5169
737-8Q8	ILF	494	YD494	30700	Y3989	1942	B-5142
737-8F2	THY	033	YK557	34411	Y3990	1944	TC-JGM
737-8BK	TCI	260	YJ946	33029	Y3991	1945	C-FYLC
737-8Q8	ILF	858	YK154	30701	Y3992	1946	VT-AXG
737-8FE	VOZ	018	YK331	34438	Y3993	1948	VH-VUG
737-8F2	THY	034	YK558	34412	Y3994	1949	TC-JGN
737-86N	GEF	888	YK642	32693	Y3995	1951	VT-SGE
737-8Q8	ILF	946	YK146	30702	Y3996	1953	9M-MLB
737-8Z6	TAF	001	YK476	35478	Y3997	1955	HS-TYS
737-85P	RAM	020	YK368	33978	Y3998	1957	CN-ROH
737-808	SNR	008	YL011	34704	Y3999	1958	C-FTDW
737-86N	SKM	003	YK613	32694	Y4000	1960	JA737L
737-81B	GUN	018	YJ692	30709	Y2201	1961	B-5165
737-85P	RAM	021	YK369	33979	Y2202	1963	CN-ROJ
737-8Q8	ILF	947	YK147	30703	Y2203	1964	9M-MLA
737-8E0BJ	BBJ	414	YD414	35238	Y3513	1966	A6-MRS
737-8BK	TCI	261	YJ947	33030	Y2204	1968	5B-DBZ

EFFECTIVE AIRCRAFT



737-800
STRUCTURAL REPAIR MANUAL

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-8F2	THY	035	YK559	34413	Y2205	1972	TC-JGO
737-86N	GEF	885	YK622	34255	Y2206	1975	B-5151
737-8F2	THY	036	YK560	34414	Y2207	1978	TC-JGP
737-890	ASA	406	YK436	35175	Y2208	1980	N556AS
737-81B	GUN	019	YJ693	33006	Y2209	1983	B-5166
737-8Q8	BEJ	859	YK161	30704	Y2210	1985	B-5172
737-8Q8	ILF	495	YD495	33007	Y2211	1986	B-5145
737-8F2	THY	037	YK561	34415	Y2212	1988	TC-JGR
737-86N	GEF	886	YK623	34256	Y2213	1990	B-5152
737-824	CAL	501	YJ553	31602	Y2214	1994	N78501
737-8F2	THY	038	YK562	34416	Y2215	1996	TC-JGS
737-808	SNR	007	YL004	34705	Y2216	1998	B-5170
737-8Q8	BEJ	860	YK162	30705	Y2217	2001	B-5173
737-8FE	VOZ	019	YK332	34440	Y2218	2003	ZK-PBI
737-85R	JPL	813	YC743	34797	Y2219	2007	VT-JGQ
737-8F2	THY	039	YK563	34417	Y2220	2009	TC-JGT
737-890	ASA	407	YK437	35176	Y2221	2010	N557AS
737-8F2	THY	040	YK564	34418	Y2222	2012	TC-JGU
737-808	SNR	009	YL005	34706	Y2223	2014	B-5171
737-8FE	VOZ	020	YK333	34441	Y2224	2015	VH-VUI
737-824	CAL	502	YJ554	31603	Y2225	2017	N76502
737-85C	XIA	801	YK961	35044	Y2226	2018	B-5159
737-8EH	GOT	302	YK722	34475	Y2227	2020	PR-GTB
737-8F2	THY	041	YK565	34419	Y2228	2021	TC-JGV
737-824	CAL	503	YJ555	33461	Y2229	2023	N76503
737-86N	GEF	890	YK632	34257	Y2230	2024	SU-BPH
737-890	ASA	408	YK438	35178	Y2231	2026	N559AS
737-8EH	GOT	303	YK723	34277	Y2232	2028	PR-GTC
737-8K9	BAV	201	YK576	34399	Y2233	2030	VT-SJI
737-890	ASA	409	YK439	35177	Y2234	2031	N558AS
737-86N	GEF	891	YJ006	32691	Y2235	2033	B-5143
737-824	CAL	504	YJ556	31604	Y2236	2035	N76504
737-852	AMX	201	YK580	35114	Y2237	2037	EI-DRA
737-8FH	LOM	407	YL051	35089	Y2239	2042	B-5180
737-85R	JPL	814	YC744	34799	Y2240	2044	VT-JGR

EFFECTIVE AIRCRAFT



737-800
STRUCTURAL REPAIR MANUAL

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-808	SNR	010	YL012	34707	Y2241	2046	B-5439
737-824	CAL	505	YJ557	32834	Y2242	2048	N76505
737-85C	XIA	802	YK962	35045	Y2243	2050	B-5160
737-8EH	GOT	305	YK725	34278	Y2244	2052	PR-GTE
737-8K9	BAV	202	YK577	34400	Y2245	2053	VT-SJJ
737-866	EGP	001	YK981	35558	Y2246	2054	SU-GCM
737-8FE	VOZ	021	YK334	34443	Y2247	2056	VH-VUJ
737-8AS	RYR	108	YK819	33596	Y2248	2057	EI-DLR
737-8AS	RYR	109	YK820	33621	Y2249	2058	EI-DLS
737-8AS	RYR	110	YK821	33597	Y2250	2060	EI-DLT
737-8EH	GOT	306	YK726	34279	Y2251	2061	PR-GTF
737-8AS	RYR	111	YK822	33598	Y2252	2063	EI-DLV
737-824	CAL	506	YJ558	32832	Y2253	2065	N78506
737-86N	GEF	892	YK651	35209	Y2254	2067	B-5175
737-8GJ	ROJ	002	YK942	34897	Y2255	2069	VT-SPJ
737-852	AMX	202	YK581	35115	Y2256	2070	EI-DRB
737-890	ASA	410	YK440	35179	Y2257	2072	N560AS
737-8FH	LOM	408	YL052	35090	Y2258	2073	B-5181
737-8GK	BQA	001	YK791	34948	Y2259	2074	5A-DMG
737-8EH	GOT	307	YK727	34654	Y2260	2075	PR-GTG
737-8AS	RYR	112	YK823	33599	Y2261	2078	EI-DLW
737-852	AMX	203	YK582	35116	Y2263	2081	EI-DRC
737-8AS	RYR	113	YK824	33600	Y2264	2082	EI-DLX
737-890	ASA	451	YK441	35091	Y2265	2084	N562AS
737-85R	JPL	815	YC745	34800	Y2266	2085	VT-JGS
737-81B	GUN	020	YJ694	30708	Y2267	2087	B-5163
737-8AS	RYR	114	YK825	33601	Y2268	2088	EI-DLY
737-890	ASA	411	YK442	35180	Y2269	2090	N563AS
737-8EH	GOT	308	YK728	34655	Y2270	2091	PR-GTH
737-846	JAL	301	YL201	35330	Y2271	2095	JA301J
737-86N	GEF	893	YK652	34258	Y2272	2096	B-5176
737-808	SNR	011	YL013	34708	Y2273	2097	B-5182
737-890	ASA	452	YK443	35103	Y2274	2099	N564AS
737-8EH	GOT	309	YK729	34280	Y2275	2100	PR-GTI
737-8AS	RYR	115	YK826	33622	Y2276	2101	EI-DLZ

EFFECTIVE AIRCRAFT



737-800
STRUCTURAL REPAIR MANUAL

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-8BK	TCI	262	YJ948	33020	Y2277	2103	B-5186
737-8GJ	ROJ	003	YK943	34898	Y2278	2104	VT-SPK
737-85C	XIA	803	YK963	35046	Y2279	2105	B-5161
737-8GK	BQA	002	YK792	34949	Y2280	2106	5A-DMH
737-8HG	IDC	001	YL461	36323	Y2281	2108	VT-AXH
737-8AS	RYR	116	YK827	33602	Y2282	2109	EI-DPA
737-8EH	GOT	310	YK730	34656	Y2283	2110	PR-GTJ
737-8AS	RYR	117	YK828	33603	Y2284	2112	EI-DPB
737-866	EGP	002	YK982	35559	Y2285	2113	SU-GCN
737-8AL	SIL	002	YL302	35070	Y2286	2115	5Y-KYB
737-8EH	GOT	311	YK731	34281	Y2287	2116	PR-GTK
737-86N	GEF	894	YK653	32682	Y2288	2117	B-5178
737-8GQ	PSF	001	YL271	35790	Y2289	2119	HL7757
737-8AS	RYR	118	YK829	33604	Y2290	2120	EI-DPC
737-808	SNR	012	YL014	34709	Y2291	2121	B-KBI
737-8AS	RYR	119	YK830	33623	Y2292	2123	EI-DPD
737-8BK	TCI	263	YJ949	33828	Y2293	2124	B-5187
737-85R	JPL	816	YC746	34801	Y2294	2125	VT-JGT
737-86N	GEF	895	YK654	35210	Y2295	2127	B-5177
737-8GJ	ROJ	004	YK944	34899	Y2296	2128	VT-SPL
737-85C	XIA	804	YK964	35047	Y2297	2130	B-5162
737-8HG	IDC	002	YL462	36324	Y2298	2132	VT-AXI
737-890	ASA	412	YK444	35181	Y2299	2134	N565AS
737-86N	SKM	004	YK614	32683	Y2300	2136	JA737M
737-8AL	SIL	003	YL303	35071	Y2301	2138	5Y-KYC
737-8AS	RYR	120	YK831	33605	Y2302	2140	EI-DPE
737-8HG	IDC	003	YL463	36325	Y2303	2142	VT-AXJ
737-808	SNR	013	YL015	34710	Y2304	2144	B-KXE
737-86N	GEF	897	YK655	35211	Y2305	2146	B-5179
737-8HG	IDC	004	YL464	36326	Y2306	2148	VT-AXM
737-8GQ	PSF	002	YL272	35791	Y2307	2150	HL7758
737-8K5	HAP	038	YL421	35134	Y2308	2152	G-FDZA
737-8HG	IDC	005	YL465	36327	Y2309	2154	VT-AXN
737-84P	SIL	101	YK716	35072	Y2310	2155	B-KBK
737-8AS	RYR	121	YK832	33606	Y2311	2158	EI-DPF

EFFECTIVE AIRCRAFT



**737-800
STRUCTURAL REPAIR MANUAL**

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-8Q8	ILF	496	YD496	30711	Y2312	2159	B-5183
737-8FH	THY	052	YL056	35092	Y2313	2160	TC-JHI
737-846	JAL	302	YL202	35331	Y2314	2162	JA302J
737-8AS	RYR	122	YK833	33607	Y2315	2163	EI-DPG
737-890	ASA	413	YK445	35182	Y2316	2164	N566AS
737-890	ASA	414	YK446	35183	Y2317	2166	N568AS
737-8GJ	ROJ	005	YK945	34900	Y2318	2167	VT-SPM
737-8AS	RYR	123	YK834	33624	Y2319	2168	EI-DPH
737-85R	JPL	817	YC747	34802	Y2320	2170	VT-JGU
737-8Q8	BEJ	163	YK163	29373	Y2321	2171	B-5311
737-8AS	RYR	124	YK835	33608	Y2322	2173	EI-DPI
737-86N	GEF	898	YK606	32686	Y2323	2175	B-5317
737-8FH	LOM	410	YL057	35093	Y2324	2176	D-AXLD
737-8HG	IDC	006	YL466	36328	Y2325	2177	VT-AXP
737-8AS	RYR	125	YK836	33609	Y2326	2179	EI-DPJ
737-8B6	RAM	706	YK306	33064	Y2327	2180	CN-ROK
737-82K	TUE	001	YK796	36088	Y2328	2181	EZ-A004
737-8AS	RYR	126	YK837	33610	Y2329	2183	EI-DPK
737-8K5	HAP	037	YK907	34690	Y2330	2184	G-FDZJ
737-86N	GEF	899	YC438	32685	Y2331	2186	I-NEOW
737-8AS	RYR	127	YK838	33611	Y2332	2189	EI-DPL
737-81B	GUN	021	YJ686	35365	Y2333	2191	B-5189
737-890	ASA	415	YK447	35184	Y2334	2192	N569AS
737-85C	XIA	805	YK965	35048	Y2335	2194	B-5301
737-8FH	LOM	411	YL061	35094	Y2336	2195	TC-AAK
737-8AL	SIL	004	YL311	35073	Y2337	2197	B-5321
737-8AS	RYR	128	YK839	33640	Y2338	2198	EI-DPM
737-8AS	RYR	129	YK840	35549	Y2339	2200	EI-DPN
737-8Q8	BEJ	164	YK164	29374	Y2340	2203	B-5312
737-8K2	KLM	315	YK921	30370	Y2341	2205	PH-BXV
737-8B6	RAM	707	YK307	33065	Y2342	2206	CN-ROL
737-8AS	RYR	130	YK841	33612	Y2343	2207	EI-DPO
737-85R	JPL	818	YC748	34803	Y2344	2209	VT-JGV
737-8Q8	BEJ	165	YK165	30716	Y2345	2210	B-5313
737-890	ASA	416	YK448	35185	Y2346	2212	N570AS

EFFECTIVE AIRCRAFT



737-800
STRUCTURAL REPAIR MANUAL

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-8AS	RYR	131	YK842	33613	Y2347	2213	EI-DPP
737-8EH	GOT	312	YK732	34962	Y2348	2215	PR-GTL
737-84P	SIL	102	YK717	35074	Y2349	2217	I-AIGN
737-86N	GEF	904	YK607	32688	Y2350	2218	B-5322
737-8AS	RYR	132	YK843	33614	Y2351	2219	EI-DPR
737-890	ASA	417	YK449	35186	Y2352	2221	N577AS
737-8AS	RYR	133	YK844	33641	Y2353	2222	EI-DPS
737-81B	GUN	022	YJ687	35366	Y2354	2223	B-5190
737-846	JAL	303	YL501	35332	Y2355	2225	JA303J
737-890	ASA	418	YK450	35187	Y2356	2226	N579AS
737-8AS	RYR	134	YK845	35550	Y2357	2227	EI-DPT
737-86N	GEF	905	YK624	32687	Y2358	2229	B-5308
737-8Q8	ILF	497	YD497	30715	Y2359	2230	B-5185
737-8BK	TCI	264	YJ950	29644	Y2360	2231	TC-SKH
737-82K	TUE	002	YK797	36089	Y2361	2233	EZ-A005
737-8Q8	ILF	538	YC190	30720	Y2362	2235	5B-DBR
737-8AS	RYR	135	YK846	35551	Y2363	2236	EI-DPV
737-81B	GUN	023	YJ688	35367	Y2364	2237	B-5191
737-808	SNR	014	YL021	34967	Y2365	2239	B-5407
737-8EH	GOT	313	YK733	34963	Y2366	2240	PR-GTM
737-8K5	HAP	042	YL422	35131	Y2367	2242	G-FDZB
737-8K2	TAV	884	YC084	34169	Y2368	2243	PH-HZO
737-85P	ARE	022	YK370	33980	Y2369	2245	EC-KBV
737-8K5	HAP	039	YK908	34691	Y2370	2246	CN-RPF
737-8BK	TCI	265	YJ951	29642	Y2371	2247	C-FTJH
737-8K5	HAP	040	YK909	34692	Y2372	2249	CN-RPG
737-86N	GEF	907	YC439	32690	Y2373	2250	9M-MLC
737-8Q8	ILF	498	YD498	30718	Y2374	2251	B-5320
737-846	JAL	304	YL502	35333	Y2375	2253	JA304J
737-86N	GEF	906	YK625	32689	Y2376	2254	B-5309
737-81M	OMR	804	YJ903	30721	Y2377	2255	A40-BB
737-8Q8	ILF	166	YK166	30719	Y2378	2257	OK-TVG
737-8HG	IDC	007	YL467	36329	Y2379	2258	VT-AXQ
737-890	ASA	419	YL101	35188	Y2380	2259	N581AS
737-8Q8	JXL	001	YK138	30722	Y2381	2261	TF-JXE

EFFECTIVE AIRCRAFT



**737-800
STRUCTURAL REPAIR MANUAL**

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-8AS	RYR	136	YK847	35552	Y2382	2263	EI-DPW
737-808	SNR	015	YL022	34968	Y2383	2265	B-5409
737-8GJ	TAV	006	YK946	34901	Y2384	2267	F-GZHA
737-85P	ARE	023	YK371	33981	Y2385	2269	EC-KCG
737-85C	XIA	806	YK966	35049	Y2386	2271	B-5302
737-81B	GUN	024	YJ689	35369	Y2387	2272	B-5192
737-852	AMX	204	YK583	35119	Y2388	2273	XA-MIA
737-86N	GEF	908	YK656	32692	Y2389	2275	B-5325
737-8K5	HAP	043	YL423	35132	Y2390	2276	G-FDZD
737-86N	GEF	910	YJ007	35212	Y2391	2277	B-5330
737-8AS	RYR	137	YK848	35553	Y2392	2279	EI-DPX
737-8Q8	JXL	002	YK139	30688	Y2393	2280	TF-JXD
737-8BK	TCI	267	YJ976	29646	Y2394	2282	G-CEJP
737-85C	ILF	971	YK967	30723	Y2395	2283	B-5318
737-8Q8	ILF	948	YK148	30724	Y2396	2286	D-AXLE
737-8AL	SIL	005	YL312	35075	Y2397	2287	B5331
737-846	JAL	305	YL503	35334	Y2398	2289	JA305J
737-852	AMX	205	YK584	35120	Y2399	2290	XA-ZAM
737-8Q8	ILF	499	YD499	30725	Y2400	2292	B-5323
737-808	SNR	016	YL023	34969	Y2401	2293	D-ABBX
737-8FH	LOM	412	YL066	35095	Y2402	2295	B-5332
737-85R	JPL	819	YC749	34804	Y2403	2297	VT-JGW
737-81B	GUN	025	YL431	35370	Y2404	2299	B-5193
737-86N	GEF	912	YK633	35213	Y2405	2300	SU-BPZ
737-81B	GUN	026	YL432	35371	Y2406	2302	B-5195
737-8BK	TCI	268	YJ977	29643	Y2407	2303	G-CEJO
737-85C	XIA	807	YK968	35050	Y2408	2305	B-5303
737-86N	GEF	911	YJ008	35215	Y2409	2306	B-5345
737-86N	GEF	909	YK657	35214	Y2410	2308	B-5326
737-8GJ	TAV	007	YK947	34902	Y2411	2309	F-GZHB
737-8EH	GOT	314	YK734	34267	Y2412	2311	PR-GTN
737-8K5	HAP	041	YK910	35133	Y2413	2313	OO-JAF
737-81B	GUN	027	YL433	35375	Y2414	2314	B-5300
737-86D	SHA	006	YJ872	35767	Y2415	2316	B-5315
737-8HG	IDC	008	YL468	36330	Y2416	2317	VT-AXR

EFFECTIVE AIRCRAFT



**737-800
STRUCTURAL REPAIR MANUAL**

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-86N	GEF	913	YK643	35216	Y2417	2321	VT-SPO
737-8CT	WJI	485	YK485	35502	Y2418	2323	C-FAWJ
737-8HG	IDC	009	YL469	36331	Y2419	2324	VT-AXT
737-8BK	TCI	269	YJ937	29635	Y2420	2326	N810SY
737-852	AMX	206	YK585	35121	Y2421	2327	XA-JOY
737-81B	GUN	028	YL434	35376	Y2422	2329	B-5310
737-84P	HNA	016	YK708	35749	Y2423	2330	B-5338
737-8EH	GOT	315	YK735	34964	Y2424	2332	PR-GTO
737-890	ASA	420	YL102	35681	Y2425	2333	N583AS
737-8GJ	ROJ	008	YK948	34903	Y2426	2335	VT-SPQ
737-8FH	LOM	413	YL067	35096	Y2427	2336	B-5333
737-85P	ARE	024	YK372	33982	Y2428	2338	EC-KEO
737-8HX	SKM	010	YL601	36845	Y2429	2339	JA737N
737-8EH	GOT	316	YK736	34965	Y2430	2341	PR-GTP
737-8V3	COP	484	YJ595	35068	Y2431	2343	HP-1532CMP
737-8FH	LOM	414	YL068	35097	Y2432	2345	B-5335
737-8GJ	ROJ	009	YK949	34904	Y2433	2347	VT-SPR
737-8GQ	PSF	003	YL281	35792	Y2434	2351	N737GQ
737-8FE	VOZ	022	YK335	36602	Y2435	2353	VH-VUK
737-8BK	TCI	266	YJ952	29660	Y2436	2355	N811SY
737-8FE	VOZ	023	YK336	36603	Y2437	2356	VH-VUL
737-8EH	GOT	317	YK737	36146	Y2438	2358	PR-GTQ
737-86N	GEF	914	YK644	35217	Y2439	2359	VT-SPP
737-8FH	LOM	415	YL069	35098	Y2440	2361	B-5336
737-86D	SHA	007	YJ873	35768	Y2441	2362	B-5316
737-85C	XIA	808	YK969	35051	Y2442	2364	B-5305
737-890	ASA	421	YL103	35682	Y2443	2365	N584AS
737-8EH	GOT	318	YK738	34966	Y2444	2367	PR-GTR
737-8HX	BOU	889	YL602	36846	Y2445	2368	VT-JBB
737-866	EGP	003	YK983	35561	Y2446	2369	SU-GCO
737-86N	GEF	915	YK658	35219	Y2447	2371	B-5327
737-81B	GUN	029	YL435	35380	Y2448	2372	B-5339
737-8BK	HNA	018	YJ953	29673	Y2449	2373	B-5346
737-8AS	RYR	138	YK849	33615	Y2450	2375	EI-DPY
737-8AS	RYR	139	YK850	33616	Y2451	2376	EI-DPZ

EFFECTIVE AIRCRAFT



**737-800
STRUCTURAL REPAIR MANUAL**

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-8AS	RYR	140	YK851	33617	Y2452	2377	EI-DWA
737-808	SNR	017	YL024	34970	Y2453	2379	D-ABBY
737-84P	SIL	103	YK718	35076	Y2454	2380	B-KBM
737-8HG	IDC	010	YL470	36332	Y2455	2381	VT-AXU
737-8AS	RYR	141	YK852	36075	Y2456	2382	EI-DWB
737-8AS	RYR	142	YK853	36076	Y2457	2384	EI-DWC
737-890	ASA	422	YL104	35683	Y2458	2385	N585AS
737-8Q8	ILF	500	YL531	30728	Y2459	2386	B-5353
737-8HX	BOU	890	YL603	36847	Y2460	2388	VT-JBC
737-8AS	RYR	143	YK854	33642	Y2461	2389	EI-DWD
737-8AS	RYR	144	YK855	36074	Y2462	2391	EI-DWE
737-8GJ	ROJ	010	YK950	34905	Y2463	2392	VT-SPS
737-890	ASA	423	YL105	35189	Y2464	2393	N586AS
737-846	JAL	306	YL203	35335	Y2465	2395	JA306J
737-8AS	RYR	145	YK856	33619	Y2466	2396	EI-DWF
737-8AS	RYR	146	YK857	33620	Y2467	2397	EI-DWG
737-8Q8	ILF	560	YC179	30730	Y2468	2399	7O-ADQ
737-808	SNR	018	YL016	34971	Y2469	2400	B-5449
737-81B	GUN	030	YL436	35381	Y2470	2402	B-5340
737-89L	BEJ	012	YL901	36483	Y2471	2403	B-5341
737-86N	GEF	916	YK634	35220	Y2472	2406	SU-BQA
737-8EH	GOT	319	YK739	34268	Y2473	2407	PR-GTT
737-8AS	RYR	147	YK858	33637	Y2474	2408	EI-DWH
737-8AS	RYR	148	YK859	33643	Y2475	2410	EI-DWI
737-8AS	RYR	149	YK860	36077	Y2476	2411	EI-DWJ
737-8EH	GOT	320	YK740	34269	Y2477	2412	PR-GTU
737-8BK	TCI	271	YJ954	29675	Y2478	2414	VH-VUM
737-8AS	RYR	150	YK861	36078	Y2479	2415	EI-DWK
737-8AS	RYR	151	YK862	33618	Y2480	2416	EI-DWL
737-85C	XIA	809	YK970	35052	Y2481	2418	B-5306
737-84P	SIL	104	YK719	35077	Y2482	2419	B-5358
737-8EH	GOT	321	YK741	34270	Y2483	2420	PR-GTV
737-890	ASA	424	YL106	35684	Y2484	2422	N587AS
737-8V3	COP	485	YJ596	35067	Y2485	2423	HP-1533CMP
737-8K5	HAP	054	YK918	35100	Y2486	2424	PH-TFA

EFFECTIVE AIRCRAFT



737-800
STRUCTURAL REPAIR MANUAL

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-8GQ	PSF	004	YL282	35793	Y2487	2428	B-5366
737-85N	SHG	006	YK515	36190	Y2488	2429	B-5347
737-8AS	RYR	152	YK863	36080	Y2489	2430	EI-DWM
737-8BK	TCI	272	YJ955	29676	Y2490	2432	VH-VUN
737-84P	HNA	017	YK709	35747	Y2491	2433	B-5337
737-866	EGP	004	YK984	35560	Y2492	2434	SU-GCP
737-82R	PGS	002	YL931	35700	Y2493	2435	TC-AAE
737-85R	LOM	416	YC750	35099	Y2494	2439	VT-JBD
737-8AS	RYR	153	YK864	36079	Y2495	2440	EI-DWO
737-89L	BEJ	013	YL902	36484	Y2496	2441	B-5342
737-8AS	RYR	154	YK865	36082	Y2497	2443	EI-DWP
737-86N	GEF	917	YK659	35221	Y2498	2444	B-5328
737-8EH	GOT	322	YK751	34271	Y2499	2445	PR-VBK
737-85C	XIA	810	YK971	35053	Y2500	2447	B-5307
737-8AS	RYR	155	YK866	36081	Y2501	2448	EI-DWR
737-8EH	GOT	323	YK752	34272	Y2502	2449	PR-VBL
737-846	JAL	307	YL204	35336	Y2503	2450	JA307J
737-8Q8	ILF	561	YK171	30733	Y2504	2452	B-5367
737-85N	SHG	007	YK516	36191	Y2505	2453	B-5348
737-890	ASA	425	YL107	35685	Y2506	2454	N588AS
737-8BK	OMR	805	YJ956	29685	Y2507	2457	A40-BA
737-890	ASA	426	YL108	35686	Y2508	2458	N589AS
737-8FH	LOM	417	YF106	35101	Y2509	2459	B-5359
737-86N	GEF	918	YK660	35222	Y2510	2463	B-5329
737-8EH	GOT	324	YK753	34273	Y2511	2464	PR-GTY
737-8K2	KLM	316	YK922	30360	Y2512	2467	PH-BXW
737-8EH	GOT	325	YK754	34274	Y2513	2468	PR-GTZ
737-89L	BEJ	014	YL903	36485	Y2514	2470	B-5343
737-8FH	LOM	418	YL076	35102	Y2515	2471	B-5319
737-8AS	RYR	156	YK867	33625	Y2516	2472	EI-DWS
737-8EH	GOT	326	YK755	35063	Y2517	2476	PR-GGA
737-838	ILF	562	YJ929	30734	Y2518	2477	YJ-AV1
737-890	ASA	427	YL109	35687	Y2519	2478	N590AS
737-846	JAL	308	YL205	35337	Y2520	2479	JA308J
737-8HG	IDC	011	YL471	36333	Y2521	2481	VT-AXV

EFFECTIVE AIRCRAFT



**737-800
STRUCTURAL REPAIR MANUAL**

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-8K5	HAP	044	YL424	35137	Y2522	2482	G-FDZE
737-8FZ	NSB	001	YF111	34954	Y2523	2483	LN-NOB
737-81B	GUN	031	YL437	35385	Y2524	2486	B-5356
737-824	CAL	507	YJ559	31637	Y2525	2487	N87507
737-8AS	RYR	157	YK868	33626	Y2526	2489	EI-DWT
737-8AS	RYR	158	YK869	33627	Y2527	2492	EI-DWV
737-8HX	SKM	011	YL604	29681	Y2528	2493	JA737P
737-8FH	LOM	419	YL077	35104	Y2529	2495	B-5355
737-82R	PGS	003	YL932	35701	Y2530	2496	TC-AAH
737-8EH	GOT	327	YK756	35064	Y2531	2498	PR-GGB
737-8K5	HAP	045	YL425	35138	Y2532	2499	G-FDZF
737-8FH	LOM	420	YF107	35105	Y2533	2501	B-KBP
737-838	QAN	034	YL561	34195	Y2534	2502	VH-VZA
737-8K2	KLM	317	YK923	30372	Y2535	2503	PH-BXY
737-8B6	RAM	708	YK308	33066	Y2536	2506	CN-ROP
737-8AS	RYR	159	YK870	33629	Y2537	2507	EI-DWW
737-8AS	RYR	160	YK871	33630	Y2538	2508	EI-DWX
737-846	JAL	310	YL504	35339	Y2539	2510	JA310J
737-890	ASA	428	YL110	35190	Y2540	2511	N592AS
737-8GJ	ROJ	011	YK951	34955	Y2541	2512	EY-787
737-824	CAL	508	YJ560	31639	Y2542	2514	N76508
737-8HX	BOU	892	YL605	29649	Y2543	2515	TC-SUZ
737-8AS	RYR	161	YK872	33638	Y2544	2518	EI-DWY
737-8AL	SIL	006	YL316	35081	Y2545	2519	B-5357
737-8AS	RYR	162	YK873	33628	Y2546	2520	EI-DWZ
737-846	JAL	309	YL206	35338	Y2547	2522	JA309J
737-824	CAL	509	YJ561	31638	Y2548	2523	N78509
737-8CT	WJI	486	YK495	35080	Y2549	2524	C-GWWJ
737-8FE	VOZ	024	YK337	36601	Y2550	2525	ZK-PBM
737-8B6	RAM	709	YK309	33067	Y2551	2527	CN-ROR
737-8AS	RYR	163	YK874	33631	Y2552	2529	EI-DYA
737-85R	LOM	421	YL371	35106	Y2553	2530	VT-JBE
737-8K2	KLM	318	YK924	30368	Y2554	2533	PH-BXZ
737-8K2	TAV	008	YF176	29651	Y2555	2534	F-GZHC
737-85R	SIL	007	YL372	35083	Y2556	2535	VT-JBG

EFFECTIVE AIRCRAFT



737-800
STRUCTURAL REPAIR MANUAL

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-81M	OMR	806	YJ908	35272	Y2557	2537	A40-BP
737-8K5	HAP	046	YL426	35139	Y2558	2538	G-FDZG
737-8HX	BOU	893	YL606	29684	Y2559	2539	TC-SNE
737-8AS	RYR	164	YK875	33633	Y2560	2542	EI-DYB
737-8AS	RYR	165	YK876	36567	Y2561	2543	EI-DYC
737-8AS	RYR	166	YK877	33632	Y2562	2544	EI-DYD
737-890	ASA	429	YL111	35107	Y2563	2545	N593AS
737-8AS	RYR	167	YK878	36568	Y2564	2548	EI-DYE
737-8AS	RYR	168	YK879	36569	Y2565	2549	EI-DYF
737-85R	SIL	008	YL373	35082	Y2566	2550	VT-JBF
737-8Q8	ILF	563	YL532	35271	Y2567	2551	B-5370
737-81M	OMR	807	YJ904	35108	Y2568	2554	A40-BU
737-8AL	SIL	009	YL317	35079	Y2569	2555	B-5377
737-84P	HNA	019	YK710	35752	Y2570	2556	B-5371
737-8AS	RYR	169	YK880	33639	Y2571	2557	EI-DYG
737-890	ASA	430	YL112	35191	Y2572	2560	N594AS
737-8EH	GOT	328	YK757	35065	Y2573	2561	PR-GGK
737-8AL	SIL	010	YL318	35085	Y2574	2563	B-5378
737-8HC	SNS	001	YL591	36529	Y2575	2566	TC-SNF
737-8Q8	ILF	564	YL533	35273	Y2576	2567	B-5368
737-8K2	KLM	319	YK925	37593	Y2577	2569	PH-BGA
737-84P	ILF	565	YK711	35274	Y2578	2570	B-KBQ
737-846	JAL	311	YL207	35340	Y2579	2571	JA311J
737-8AS	RYR	170	YK881	36570	Y2580	2573	EI-DYH
737-8AS	RYR	171	YK882	36571	Y2581	2574	EI-DYI
737-824	CAL	510	YJ562	32828	Y2582	2579	N77510
737-8AS	RYR	172	YK883	36572	Y2583	2580	EI-DYJ
737-8AS	RYR	173	YK884	36573	Y2584	2581	EI-DYK
737-8K2	TAV	009	YF177	29650	Y2585	2583	F-GZHD
737-846	JAL	312	YL505	35341	Y2586	2584	JA312J
737-85P	BRT	809	YK373	35706	Y2587	2586	LN-RRE
737-890	ASA	431	YL113	35688	Y2588	2587	N596AS
737-8EH	GOT	329	YK758	34275	Y2589	2588	PR-GGD
737-8F2	THY	042	YK566	35738	Y2590	2592	TC-JGY
737-84P	HNA	020	YF021	35758	Y2591	2593	B-5372

EFFECTIVE AIRCRAFT



**737-800
STRUCTURAL REPAIR MANUAL**

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-8K2	KLM	320	YK926	37594	Y2592	2594	PH-BGB
737-824	CAL	511	YJ563	33459	Y2593	2598	N78511
737-890	ASA	432	YL114	35689	Y2594	2601	N597AS
737-824	CAL	512	YJ564	33458	Y2595	2602	N87512
737-8Q8	ILF	567	YK167	35275	Y2596	2604	OK-TVH
737-8AL	SIL	011	YL319	35087	Y2597	2605	B-5379
737-89L	BEJ	015	YL904	36486	Y2598	2606	B-5390
737-881	ANA	851	YF051	33886	Y2599	2607	JA51AN
737-85P	BRT	810	YK374	35707	Y2600	2610	LN-RRF
737-84P	ILF	566	YK712	35276	Y2601	2611	B-KBR
737-8HG	IDC	012	YL472	36334	Y2602	2612	VT-AXW
737-8K2	TAV	010	YF178	29678	Y2603	2615	F-GZHE
737-87L	SHZ	801	YL661	35527	Y2604	2616	B-5380
737-86N	GEF	919	YJ009	35224	Y2605	2617	B-5399
737-84P	HNA	021	YF022	35754	Y2606	2618	B-5373
737-8K2	KLM	321	YK927	30361	Y2607	2619	PH-BGC
737-8HC	SNS	002	YL592	36530	Y2608	2622	TC-SNG
737-838	QAN	035	YL562	34196	Y2609	2623	VH-VZB
737-8V3	COP	486	YJ597	35125	Y2610	2624	HP1534CMP
737-8Q8	ILF	568	YK133	35278	Y2611	2625	D-APBB
737-8Q8	ILF	569	YF086	35279	Y2612	2626	F-HAXL
737-890	ASA	433	YL115	35690	Y2613	2627	N506AS
737-8Q8	NSB	002	YK176	35280	Y2614	2629	LN-NOD
737-86N	SKM	005	YK615	35228	Y2615	2630	JA737Q
737-87L	SHZ	802	YL662	35528	Y2616	2631	B-5381
737-86D	SHA	008	YJ874	35769	Y2617	2632	B-5393
737-846	JAL	313	YL208	35342	Y2618	2633	JA313J
737-8AS	RYR	174	YK885	36574	Y2619	2635	EI-DYL
737-8AS	RYR	175	YK886	36575	Y2620	2636	EI-DYM
737-8AS	RYR	176	YK887	36576	Y2621	2637	EI-DYN
737-86J	BER	830	YL951	37740	Y2622	2638	YR-BGP
737-86N	GEF	920	YJ010	35226	Y2623	2641	B-5376
737-85N	SHG	008	YK521	36192	Y2624	2642	B-5349
737-881	ANA	852	YF052	33887	Y2625	2643	JA52AN
737-89L	BEJ	016	YL905	36487	Y2626	2644	B-5391

EFFECTIVE AIRCRAFT



**737-800
STRUCTURAL REPAIR MANUAL**

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-86N	NSB	003	YK661	36809	Y2627	2647	LN-NOF
737-84P	HNA	022	YF023	35762	Y2628	2648	B-5375
737-838	QAN	036	YL563	34197	Y2629	2649	VH-VZC
737-8FE	VOZ	025	YK338	36604	Y2630	2650	ZK-PBK
737-85P	BRT	811	YK375	35708	Y2631	2653	LN-RRG
737-8F2	THY	043	YK567	35739	Y2632	2654	TC-JGZ
737-824	CAL	513	YJ565	31621	Y2633	2655	N87513
737-8HX	BOU	894	YL611	36552	Y2634	2658	C-FLSW
737-838	QAN	037	YL564	34198	Y2635	2659	VH-VZD
737-8K5	HAP	047	YK911	35142	Y2636	2660	OO-JBG
737-838	QAN	038	YL565	34199	Y2637	2661	VH-VZE
737-890	ASA	434	YL116	35691	Y2638	2662	N508AS
737-8EH	GOT	330	YK759	35824	Y2639	2665	PR-GGE
737-86N	SKM	006	YK616	35630	Y2640	2666	JA737R
737-84P	HNA	023	YF024	35759	Y2641	2668	B-5405
737-85N	SHG	009	YK522	36193	Y2642	2669	B-5350
737-8HG	IDC	013	YL473	36335	Y2643	2672	VT-AXX
737-8F2	THY	044	YK568	35740	Y2644	2673	TC-JHA
737-89L	BEJ	017	YL906	36488	Y2645	2674	B-5392
737-87L	SHZ	803	YL663	35529	Y2646	2677	B-5400
737-84P	HNA	024	YF025	35760	Y2647	2678	B-5406
737-824	CAL	514	YJ566	31626	Y2648	2680	N76514
737-86N	GEF	923	YK626	36540	Y2649	2681	B-5382
737-85N	SHG	010	YK523	36194	Y2650	2684	B-5351
737-8F2	THY	045	YK569	35741	Y2651	2685	TC-JHB
737-86J	BER	831	YL952	37741	Y2652	2686	YR-BGR
737-8GJ	THY	050	YK952	34958	Y2653	2688	TC-JHG
737-86N	GEF	924	YK671	35632	Y2654	2690	5Y-KYD
737-84P	HNA	025	YF026	35756	Y2655	2691	B-5403
737-86N	GEF	925	YK627	35631	Y2656	2693	B-5383
737-866	EGP	005	YK985	35563	Y2657	2695	SU-GCS
737-8KBBJ	BBJ	415	YD415	37545	Y3514	2696	A7-AAZ
737-86D	SHA	009	YJ875	35770	Y2658	2698	B-5395
737-86N	GEF	926	YF001	36810	Y2659	2699	B-5196
737-8EH	GOT	331	YK760	35066	Y2660	2700	PR-VBG

EFFECTIVE AIRCRAFT



**737-800
STRUCTURAL REPAIR MANUAL**

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-846	JAL	314	YL209	35343	Y2661	2701	JA314J
737-8HX	ELA	009	YL616	36433	Y2662	2702	4X-EKS
737-87L	SHZ	804	YL664	35530	Y2663	2703	B-5401
737-89L	BEJ	018	YL907	36489	Y2664	2704	B-5397
737-8HX	GOT	421	YL621	36434	Y2665	2706	PR-VBJ
737-8F2	THY	046	YK570	35742	Y2666	2708	TC-JHC
737-8Q8	ILF	580	YL534	35281	Y2667	2709	B-5369
737-8FE	VOZ	026	YK339	36605	Y2668	2710	VH-VUQ
737-890	ASA	435	YL117	39043	Y2669	2711	N512AS
737-82R	PGS	004	YL933	35699	Y2670	2712	TC-AAI
737-824	CAL	515	YJ567	31623	Y2671	2713	N76515
737-89L	BEJ	019	YL908	36490	Y2672	2715	B-5398
737-8EH	GOT	332	YK761	34276	Y2673	2716	PR-VBF
737-8F2	THY	047	YL351	35743	Y2674	2717	TC-JHD
737-824	CAL	516	YJ568	37096	Y2675	2718	N76516
737-8GJ	THY	051	YK953	34959	Y2676	2719	TC-JHH
737-890	ASA	436	YL118	35192	Y2677	2721	N513AS
737-824	CAL	517	YJ569	31628	Y2678	2723	N76517
737-87L	SHZ	805	YL676	35531	Y2679	2726	B-5402
737-890	ASA	437	YL119	35193	Y2680	2727	N514AS
737-8AS	RYR	177	YK888	33636	Y2681	2728	EI-DYO
737-8AS	RYR	178	YK889	37515	Y2682	2729	EI-DYP
737-846	JAL	315	YL506	35344	Y2683	2731	JA315J
737-86N	GEF	927	YK628	35634	Y2684	2732	B-5386
737-8F2	THY	048	YL352	35744	Y2685	2733	TC-JHE
737-8AS	RYR	179	YK890	37513	Y2686	2734	EI-DYR
737-8AS	RYR	180	YK891	37514	Y2687	2735	EI-DYS
737-81M	OMR	808	YJ909	35284	Y2688	2738	A40-BC
737-881	ANA	853	YF053	33891	Y2689	2739	JA53AN
737-86D	SHA	010	YJ876	35771	Y2690	2740	B-5396
737-86N	GEF	928	YK629	35633	Y2691	2741	B-5385
737-8Q8	NSB	004	YK177	35283	Y2692	2742	LN-NOE
737-8AS	RYR	181	YK892	33634	Y2693	2745	EI-DYT
737-8AS	RYR	182	YK893	37512	Y2694	2746	EI-DYV
737-8AS	RYR	183	YK894	33635	Y2695	2747	EI-DYW

EFFECTIVE AIRCRAFT



**737-800
STRUCTURAL REPAIR MANUAL**

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-8F2	THY	049	YL353	35745	Y2696	2748	TC-JHF
737-8EH	GOT	333	YK762	35826	Y2697	2749	PR-GGF
737-890	ASA	438	YL120	39044	Y2698	2751	N516AS
737-89P	CEA	101	YK461	36272	Y2699	2753	B-5199
737-8AS	RYR	184	YK895	37517	Y2700	2754	EI-DYX
737-8AS	RYR	185	YK896	37521	Y2701	2755	EI-DYY
737-8Q8	ILF	581	YK186	35286	Y2702	2757	5Y-KYE
737-89L	BEJ	020	YL909	36491	Y2703	2759	B-5198
737-8AS	RYR	186	YK897	37518	Y2704	2760	EI-DYZ
737-8AS	RYR	187	YK898	37516	Y2705	2761	EI-EBA
737-846	JAL	316	YL210	35345	Y2706	2762	JA316J
737-8K5	HAP	048	YL401	35143	Y2707	2763	D-AHLK
737-86N	GEF	929	YK630	35635	Y2708	2764	B-5388
737-8GJ	ROJ	014	YK954	34960	Y2709	2765	N960BB
737-8HX	ELA	010	YL617	29638	Y2710	2766	4X-EKF
737-824	CAL	518	YJ570	31605	Y2711	2768	N77518
737-86N	GEF	930	YK681	36541	Y2712	2769	B-5418
737-890	ASA	439	YL121	35197	Y2713	2770	N517AS
737-8AL	SIL	012	YL320	35088	Y2714	2771	B-5410
737-84P	ILF	582	YK713	35285	Y2715	2772	B-5427
737-8B6	RAM	710	YK310	37718	Y2716	2773	CN-ROS
737-86N	GEF	931	YL541	35636	Y2717	2775	B-5389
737-86N	GEF	932	YF002	36811	Y2718	2777	B-5197
737-84P	HNA	026	YF027	35764	Y2719	2778	B-5408
737-8AS	RYR	188	YK899	37519	Y2720	2779	EI-EBB
737-8AS	RYR	189	YF501	37520	Y2721	2780	EI-EBC
737-8AS	RYR	190	YF502	37522	Y2722	2781	EI-EBD
737-8HG	IDC	014	YL474	36336	Y2723	2782	VT-AXZ
737-8GJ	ROJ	015	YK955	37360	Y2724	2783	YR-BGS
737-890	ASA	440	YL122	35693	Y2725	2785	N518AS
737-8EH	GOT	334	YK763	35825	Y2726	2786	PR-GGJ
737-8AS	RYR	191	YF503	37523	Y2727	2788	EI-EBE
737-86N	GEF	933	YK676	35638	Y2728	2789	5N-MJN
737-8K5	HAP	049	YK912	35148	Y2729	2790	OO-JAQ
737-8AS	RYR	192	YF504	37524	Y2730	2791	EI-EBF

EFFECTIVE AIRCRAFT



**737-800
STRUCTURAL REPAIR MANUAL**

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-8AS	RYR	193	YF505	37525	Y2731	2792	EI-EBG
737-8KN	JXB	004	YL283	35794	Y2732	2794	A6-FDA
737-866	EGP	006	YK986	35568	Y2733	2795	SU-GCZ
737-86J	BER	832	YL953	37742	Y2734	2796	D-ABKD
737-8AS	RYR	194	YF506	37526	Y2735	2797	EI-EBH
737-8AS	RYR	195	YF507	37527	Y2736	2798	EI-EBI
737-890	ASA	441	YL123	36482	Y2737	2800	N519AS
737-84P	HNA	027	YF028	34031	Y2738	2801	B-5416
737-8CT	WJI	487	YK486	35288	Y2739	2802	C-GWSR
737-86N	GEF	934	YK672	35637	Y2740	2803	5Y-KYF
737-81M	OMR	809	YJ910	35287	Y2741	2804	A40-BD
737-8V3	COP	487	YJ598	35126	Y2742	2805	HP1535CMP
737-86N	GEF	935	YK682	36542	Y2743	2806	B-5428
737-8AS	RYR	196	YF508	37528	Y2744	2807	EI-EBK
737-8AS	RYR	197	YF509	37529	Y2745	2808	EI-EBL
737-8EH	GOT	335	YK764	36566	Y2746	2809	PR-GGG
737-82R	PGS	005	YL934	35702	Y2747	2810	TC-AAJ
737-85R	ILF	583	YL374	35289	Y2748	2811	VT-JBH
737-890	ASA	442	YL124	36481	Y2749	2812	N520AS
737-890	ASA	443	YL125	35194	Y2750	2816	N523AS
737-8Q8	SKM	015	YK191	35290	Y2751	2818	JA737T
737-86N	GEF	936	YK677	35640	Y2752	2819	N358MT
737-8K5	HAP	050	YK919	35149	Y2753	2820	PH-TFB
737-86N	GEF	937	YK683	35639	Y2754	2821	B5417
737-85N	SHG	011	YK524	36195	Y2755	2823	B-5352
737-846	JAL	317	YL507	35346	Y2756	2824	JA317J
737-866	EGP	007	YK987	35562	Y2757	2826	SU-GCR
737-84P	HNA	028	YF029	34032	Y2758	2827	B-5430
737-89L	BEJ	021	YL910	36492	Y2759	2828	B-5387
737-8KN	JXB	005	YL284	35795	Y2760	2829	A6-FDB
737-846	JAL	318	YL211	35347	Y2761	2830	JA318J
737-86N	GEF	938	YK684	36543	Y2762	2831	B-5429
737-881	ANA	854	YF054	33890	Y2763	2833	JA54AN
737-86J	BER	833	YL954	37743	Y2764	2834	D-ABKE
737-823	AAL	3DM	YF201	29568	Y2765	2838	N979AN

EFFECTIVE AIRCRAFT



**737-800
STRUCTURAL REPAIR MANUAL**

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-8AS	RYR	198	YF510	35002	Y2766	2839	EI-EBM
737-8AS	RYR	199	YF511	35003	Y2767	2840	EI-EBN
737-8CT	WJI	488	YK487	37158	Y2768	2841	C-GWSV
737-8AS	RYR	200	YF512	35004	Y2769	2843	EI-EBO
737-8AS	RYR	201	YF513	37531	Y2770	2844	EI-EBP
737-89L	BEJ	022	YL921	36741	Y2771	2845	B-5422
737-823	AAL	3DN	YF202	33203	Y2772	2846	N980AN
737-8K5	HAP	051	YL427	35145	Y2773	2849	G-FDZR
737-890	ASA	444	YL126	35195	Y2774	2850	N524AS
737-87L	SHZ	806	YL677	35532	Y2775	2851	B-5411
737-86N	GEF	939	YL542	35641	Y2776	2852	B-5432
737-8FZ	OMR	810	YF112	29682	Y2777	2853	A40-BM
737-84P	HNA	029	YF030	34033	Y2778	2854	B-5465
737-86N	GEF	940	YL543	35642	Y2779	2855	B-5433
737-8AS	RYR	202	YF514	37530	Y2780	2856	EI-EBR
737-8AS	RYR	203	YF515	35001	Y2781	2857	EI-EBS
737-8AS	RYR	204	YF516	35000	Y2782	2858	EI-EBT
737-890	ASA	445	YL127	35692	Y2783	2859	N525AS
737-8HG	IDC	015	YL475	36337	Y2784	2861	VT-AYA
737-890	ASA	446	YL128	35196	Y2785	2862	N526AS
737-8EH	GOT	336	YK765	36147	Y2786	2864	PR-GGH
737-8HX	BOU	898	YL612	29647	Y2787	2865	C-FTOH
737-8K5	HAP	052	YL428	35147	Y2788	2866	G-FDZS
737-846	JAL	319	YL212	35348	Y2789	2867	JA319J
737-8Q8	ILF	585	YK196	37159	Y2790	2868	LN-NOL
737-823	AAL	3DP	YF203	29569	Y2791	2870	N981AN
737-85P	ELA	006	YK376	35485	Y2792	2871	4X-EKH
737-8AS	RYR	205	YF517	35009	Y2793	2872	EI-EBV
737-8AS	RYR	206	YF518	35010	Y2794	2873	EI-EBW
737-85N	SHG	012	YK525	36773	Y2795	2874	B-5450
737-8K5	HAP	053	YL429	35146	Y2796	2875	PH-TFC
737-823	AAL	3DR	YF204	31067	Y2797	2876	N982AN
737-89L	BEJ	023	YL922	36742	Y2798	2877	B-5423
737-8K2	TAV	586	YC095	37160	Y2799	2880	PH-HSW
737-81B	GUN	032	YL438	35373	Y2800	2881	B-5421

EFFECTIVE AIRCRAFT



737-800
STRUCTURAL REPAIR MANUAL

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-8AS	RYR	207	YF519	35007	Y2801	2882	EI-EBX
737-8B6	RAM	711	YK311	33068	Y2802	2883	CN-ROT
737-86N	GEF	941	YK691	35643	Y2803	2884	TC-CTA
737-84P	HNA	030	YF031	36779	Y2804	2885	B-5467
737-8AS	RYR	208	YF520	35006	Y2805	2886	EI-EBY
737-8AS	RYR	209	YF521	35008	Y2806	2887	EI-EBZ
737-8FZ	SKM	020	YF116	29680	Y2807	2888	JA737U
737-881	ANA	855	YF055	33892	Y2808	2889	JA55AN
737-8EH	GOT	337	YK766	36148	Y2809	2890	PR-GGL
737-8AS	RYR	210	YF522	35005	Y2810	2892	EI-EFA
737-8AS	RYR	211	YF523	37532	Y2811	2893	EI-EFB
737-87L	SHZ	807	YL678	35535	Y2812	2895	B-5413
737-89L	BEJ	024	YL923	36743	Y2813	2896	B-5425
737-883	SAS	819	YF401	34546	Y2814	2898	LN-RRH
737-823	AAL	3DS	YF205	29570	Y2815	2899	N983AN
737-87L	SHZ	808	YL679	35533	Y2816	2900	B-5412
737-8AS	RYR	212	YF524	35015	Y2817	2901	EI-EFC
737-8AS	RYR	213	YF525	35011	Y2818	2903	EI-EFD
737-8AS	RYR	214	YF526	37533	Y2819	2905	EI-EFE
737-8Q8	ILF	587	YK201	37162	Y2820	2906	HL7785
737-823	AAL	3DT	YF206	31069	Y2821	2907	N987AN
737-85P	ELA	007	YK377	35486	Y2822	2908	4X-EKJ
737-8B6	RAM	712	YK312	33069	Y2823	2911	CN-ROU
737-84P	HNA	031	YF032	34034	Y2824	2912	B-5466
737-890	ASA	447	YL129	35694	Y2825	2913	N527AS
737-85C	XIA	811	YK972	35054	Y2826	2914	B-5456
737-823	AAL	3DU	YF207	33205	Y2827	2915	N989AN
737-8AS	RYR	215	YF527	35016	Y2828	2917	EI-EFF
737-86N	GEF	942	YF003	36812	Y2829	2918	B-5431
737-81M	OMR	811	YL691	37161	Y2830	2919	A40-BE
737-8EH	GOT	338	YK767	36149	Y2831	2920	PR-GGM
737-8AS	RYR	216	YF528	35014	Y2832	2921	EI-EFG
737-86N	GEF	943	YL544	35644	Y2833	2922	B-5435
737-8AS	RYR	217	YF529	35012	Y2834	2923	EI-EFH
737-8AS	RYR	218	YF530	35013	Y2835	2924	EI-EFI

EFFECTIVE AIRCRAFT



**737-800
STRUCTURAL REPAIR MANUAL**

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-881	ANA	856	YF056	33893	Y2836	2926	JA56AN
737-86N	NSB	005	YK662	35647	Y2837	2927	LN-NOG
737-890	ASA	448	YL130	35695	Y2838	2930	N528AS
737-823	AAL	3DW	YF208	29563	Y2839	2935	N990AN
737-8AS	RYR	219	YF531	37536	Y2840	2936	EI-EFJ
737-82R	PGS	006	YL935	35984	Y2841	2937	TC-AAL
737-84P	HNA	032	YF033	35748	Y2842	2938	B-5482
737-86D	SHA	011	YJ877	35773	Y2843	2939	B-5461
737-81B	GUN	033	YL439	35374	Y2844	2940	B-5420
737-85P	ELA	008	YK378	35487	Y2845	2941	4X-EKL
737-8U3	GIA	001	YL761	30151	Y2846	2942	PK-GMA
737-85N	SHG	013	YK526	36774	Y2847	2944	B-5455
737-823	AAL	3DV	YF209	30920	Y2848	2945	N991AN
737-8HX	TAV	011	YL626	29677	Y2849	2946	PH-ZOM
737-8AS	RYR	220	YF532	37537	Y2850	2948	EI-EFK
737-8K2	TAV	885	YF801	34171	Y2851	2950	PH-HSA
737-85N	SHG	014	YK527	36775	Y2852	2951	B-5457
737-8KN	JXB	001	YF701	40233	Y2853	2952	A6-FDC
737-846	JAL	320	YL508	35349	Y2854	2953	JA320J
737-823	AAL	3DX	YF210	31071	Y2855	2954	N992AN
737-8Q8	ILF	588	YK202	37163	Y2856	2955	HL7786
737-883	SAS	820	YF402	34547	Y2857	2956	LN-RRJ
737-81B	GUN	034	YL440	35379	Y2858	2957	B-5419
737-8AS	RYR	221	YF533	37534	Y2859	2958	EI-EFL
737-8AS	RYR	222	YF534	37535	Y2860	2960	EI-EFM
737-8HG	IDC	016	YL476	36338	Y2861	2962	VT-AYB
737-8V3	COP	488	YJ599	35127	Y2862	2963	HP-1536CM
737-823	AAL	3DY	YF211	29564	Y2863	2964	N800NN
737-8KN	JXB	002	YF702	40234	Y2864	2966	A6-FDD
737-8AS	RYR	223	YF535	37538	Y2865	2967	EI-EFN
737-89L	BEJ	025	YL924	36744	Y2866	2969	B-5426
737-8HX	BOU	899	YL631	29658	Y2867	2970	UR-PSA
737-823	AAL	3EA	YF212	29565	Y2868	2972	N801NN
737-86N	GEF	944	YK685	35648	Y2869	2973	B-5480
737-85R	BOU	901	YF831	36551	Y2870	2974	VT-JBJ

EFFECTIVE AIRCRAFT



**737-800
STRUCTURAL REPAIR MANUAL**

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-881	ANA	857	YF057	33894	Y2871	2975	JA57AN
737-86N	GEF	945	YF004	36813	Y2872	2976	B-5436
737-846	JAL	321	YL509	35350	Y2873	2977	JA321J
737-8AS	RYR	224	YF536	37539	Y2874	2978	EI-EFO
737-8AS	RYR	225	YF537	37540	Y2875	2979	EI-EFP
737-86N	GEF	946	YK686	35649	Y2876	2981	B-5481
737-823	AAL	3EB	YF213	31073	Y2877	2982	N802NN
737-8CT	WJI	496	YK496	36690	Y2878	2987	C-FWSE
737-838	QAN	039	YL566	34200	Y2879	2989	VH-VZF
737-8EH	GOT	339	YK768	35827	Y2880	2991	PR-GGN
737-85C	XIA	812	YK973	35057	Y2881	2992	B-5459
737-8JP	NSB	006	YF451	39162	Y2882	2994	LN-DYA
737-823	AAL	3EC	YF214	29566	Y2883	2995	N803NN
737-85N	SHG	015	YK528	36776	Y2884	2998	B-5451
737-866	EGP	008	YK988	35565	Y2885	2999	SU-GDA
737-85R	JPQ	001	YL731	35651	Y2886	3000	VT-JBL
737-89P	CEA	102	YK462	36761	Y2887	3001	TBD
737-846	JAL	322	YL213	35351	Y2888	3002	JA322J
737-87L	SHZ	809	YL680	35534	Y2889	3003	B-5440
737-823	AAL	3ED	YF215	29567	Y2890	3004	N804NN
737-838	QAN	040	YL567	34201	Y2891	3006	VH-VZG
737-84P	HNA	033	YF034	35750	Y2892	3007	B-5483
737-86D	SHA	012	YJ878	35774	Y2893	3010	B-5470
737-82R	PGS	007	YL936	38173	Y2894	3011	TC-AAN
737-8AS	RYR	226	YF538	37541	Y2895	3012	EI-EFR
737-823	AAL	3EE	YF216	31075	Y2896	3013	N805NN
737-86N	NSB	007	YK663	36814	Y2897	3015	LN-NOH
737-85C	XIA	813	YK974	35055	Y2898	3016	B-5458
737-866	EGP	009	YK989	35567	Y2899	3017	TBD
737-8HX	BOU	902	YL632	29654	Y2900	3018	UR-PSB
737-87L	SHZ	810	YL681	35536	Y2901	3019	B-5441
737-86N	GEF	947	YF005	36815	Y2902	3020	B-5437
737-8AS	RYR	227	YF539	37542	Y2903	3021	EI-EFS
737-8AS	RYR	228	YF540	37543	Y2904	3023	EI-EFT
737-8JMBJ	BBJ	416	YD416	37663	Y3515	3024	TBD

EFFECTIVE AIRCRAFT



**737-800
STRUCTURAL REPAIR MANUAL**

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-8EH	GOT	340	YK769	35828	Y2905	3025	PR-GGO
737-823	AAL	3EF	YF217	29561	Y2906	3028	N806NN
737-881	ANA	858	YF058	33895	Y2907	3029	JA58AN
737-8JE	AKD	101	YF191	38970	Y2908	3030	TBD
737-86N	GEF	948	YF006	36816	Y2909	3032	B-5438
737-823	AAL	3EG	YF218	31077	Y2910	3035	N807NN
737-89P	CEA	103	YK463	36763	Y2911	3036	TBD
737-84P	HNA	034	YF035	35751	Y2912	3038	TBD
737-8HG	IDC	017	YL477	36339	Y2913	3039	VT-AYC
737-866	EGP	010	YK990	35564	Y2914	3040	TBD
737-81B	GUN	035	YL441	35387	Y2915	3041	TBD
737-823	AAL	3EH	YF219	33206	Y2916	3042	N808NN
737-866	EGP	011	YK991	35569	Y2917	3043	TBD
737-86J	BER	834	YL955	37745	Y2918	3044	TBD
737-85N	SHG	016	YK529	36777	Y2919	3045	B-5452
737-86D	SHA	014	YJ879	35772	Y2920	3047	B-5460
737-838	QAN	041	YL568	34202	Y2921	3048	VH-VZH
737-89L	BEJ	026	YL925	36745	Y2922	3049	B-5442
737-823	AAL	3EJ	YF220	33519	Y2923	3050	N809NN
737-8FZ	OMR	812	YF113	29637	Y2924	3051	A40-BF
737-8AS	RYS	229	YF541	35017	Y2925	3052	EI-EFV
737-8KN	JXB	003	YF703	40235	Y2926	3053	A6-FDE
737-8JP	NSB	008	YF452	39163	Y2927	3054	TBD
737-86N	GEF	850	YQ001	36817	Y2928	3055	TBD
737-823	AAL	3EK	YF221	33207	Y2929	3056	N810NN
737-846	JAL	323	YL214	35352	Y2930	3057	JA323J
737-8FE	VOZ	027	YK340	36606	Y2931	3059	VH-VUR
737-8FZ	OMR	813	YF114	29664	Y2932	3060	AFO-BG
737-866	EGP	012	YK992	35566	Y2933	3061	TBD
737-89P	CEA	104	YK471	36765	Y2934	3062	TBD
737-823	AAL	3EL	YF222	31079	Y2935	3063	TBD
737-8JE	AKD	102	YF192	38971	Y2936	3065	TBD
737-84P	HNA	035	YF036	35753	Y2937	3066	TBD
737-81B	GUN	036	YL442	35386	Y2938	3068	TBD
737-823	AAL	3EM	YF223	33520	Y2939	3070	TBD

EFFECTIVE AIRCRAFT



737-800
STRUCTURAL REPAIR MANUAL

Model-Series	Operator		Manufacturer				Registration Number
	Identification Code	Effectivity Code	Block Number	Serial Number	Basic Number	Line Number	
737-89L	BEJ	027	YL926	36746	Y2940	3072	B-5443
737-881	ANA	859	YF059	33896	Y2941	3073	JA59AN
737-85R	CGP	001	YF832	36553	Y2942	3074	VT-JBK
737-8EH	GOT	341	YK770	35829	Y2943	3076	PR-GGP
737-823	AAL	3EN	YF224	30918	Y2944	3077	TBD
737-8AS	RYR	230	YF542	35018	Y2945	3078	EI-EFW
737-8AS	RYR	231	YF543	35019	Y2946	3079	EI-EFX
737-8U3	GIA	002	YL762	30155	Y2947	3081	PK-GMC
737-8FE	VOZ	030	YL701	36607	Y2948	3082	VH-VUS
737-89P	CGP	020	YK464	29661	Y2949	3083	TBD
737-8AS	RYR	232	YF544	35020	Y2950	3084	EI-EFY
737-823	AAL	3EP	YF225	29562	Y2951	3085	TBD
737-86N	GEF	851	YQ002	36818	Y2952	3087	TBD
737-8AL	SKM	025	YL321	36692	Y2953	3088	JA737X
737-8AS	RYR	233	YF545	38489	Y2954	3089	EI-EFZ
737-85C	XIA	814	YK975	35056	Y2955	3091	TBD
737-823	AAL	3ER	YF226	33208	Y2956	3094	TBD
737-823	AAL	3ES	YF227	31081	Y2964	3102	TBD

EFFECTIVE AIRCRAFT



737-800
STRUCTURAL REPAIR MANUAL

Revision No. 36
Jul 10/2009

To: All holders of this Boeing Document D634A210

Attached is the current revision to the 737-800 SRM

The Structural Repair Manual (SRM) is furnished either as a printed manual, on microfilm, or digital products, or any combination of the three. This revision replaces all previous microfilm cartridges or digital products. All microfilm and digital products are reissued with all obsolete data deleted and all updated pages added.

For printed manuals, changes are indicated on the List of Effective Pages (LEP). The pages which are revised will be identified on the LEP by an R (Revised), A (Added), O (Overflow, i.e. changes to the document structure and/or page layout), or D (Deleted). Each page in the LEP is identified by Chapter-Section-Subject number, page number and page date.

Pages replaced or made obsolete by this revision should be removed and destroyed.

ATTENTION

IF YOU RECEIVE PRINTED REVISIONS, PLEASE VERIFY THAT YOU HAVE RECEIVED AND FILED THE PREVIOUS REVISION. BOEING MUST BE NOTIFIED WITHIN 30 DAYS IF YOU HAVE NOT RECEIVED THE PREVIOUS REVISION. REQUESTS FOR REVISIONS OTHER THAN THE PREVIOUS REVISION WILL REQUIRE A COMPLETE MANUAL REPRINT SUBJECT TO REPRINT CHARGES SHOWN IN THE DATA AND SERVICES CATALOG.

TRANSMITTAL LETTER

D634A210

Page 1
Jul 10/2009



737-800
STRUCTURAL REPAIR MANUAL

TEMPORARY REVISIONS

Remove any Temporary Revisions that have a date earlier than the date of this revision.

Do not remove any Temporary Revisions (TRs) that have a date later than the date of this revision. TRs with a later date will be incorporated into the next revision of the manual (unless they are superseded by a subsequent TR).

A TR status report is sent with each TR. The TR status report has a list of all TRs that were sent for this manual during the last two revision cycles. At the top of the list is the date and time that the list was created.

When you have more than one TR, the TR status report with the latest date and time gives you the most current information.

TRANSMITTAL LETTER



737-800 STRUCTURAL REPAIR MANUAL

Location of Change

Description of Change

CHAPTER 53

53-10-08

ALLOWABLE DAMAGE 2

Removed an incorrect reference.

53-10-51

PGBLK 53-10-51-2R

Re-issued without change.
Added a repair for the Sta 328 Floor Beam.

53-10-72

REPAIR 9

Changed an incorrect temperature.

53-70-51

REPAIR 4

Changed the repair data.
Changed the data in the References list.
Changed Typo in Graphic.
Changed the graphics data.

CHAPTER 55

55-10-01

REPAIR 1

Changed the data for 737-NG.

CHAPTER 57

57-10-10

ALLOWABLE DAMAGE 2

Changed reference from "51-70-04" to "51-70-04, REPAIR 10"
Changed the data in the References list.
Added new data.

REPAIR 2

Added new data.
Changed the data in the References list.

57-53-01

IDENTIFICATION 2

Changed butline references.

IDENTIFICATION 4

Changed butline references.

ALLOWABLE DAMAGE 2

Changed butline references.

ALLOWABLE DAMAGE 4

Changed butline references.

57-53-02

PGBLK 57-53-02-2R

Added a repair for Inboard Flap Aft Flap Track Oversized Bushing Bore.

HIGHLIGHTS



**737-800
STRUCTURAL REPAIR MANUAL**

Subject/Page	Date	Subject/Page	Date	Subject/Page	Date
TITLE PAGE		EFFECTIVE AIRCRAFT (cont)		INTRODUCTION (cont)	
O 1	Jul 10/2009	R 37	Jul 10/2009	2	Nov 10/2006
2	BLANK	R 38	Jul 10/2009	3	Mar 10/2007
EFFECTIVE AIRCRAFT		R 39	Jul 10/2009	4	Nov 10/2006
R 1	Jul 10/2009	R 40	Jul 10/2009	5	Nov 01/2003
R 2	Jul 10/2009	R 41	Jul 10/2009	6	Nov 01/2003
R 3	Jul 10/2009	R 42	Jul 10/2009	7	Nov 01/2003
R 4	Jul 10/2009	R 43	Jul 10/2009	8	Nov 01/2003
R 5	Jul 10/2009	R 44	Jul 10/2009	9	Mar 10/2007
R 6	Jul 10/2009	R 45	Jul 10/2009	10	BLANK
R 7	Jul 10/2009	R 46	Jul 10/2009		
R 8	Jul 10/2009	R 47	Jul 10/2009		
R 9	Jul 10/2009	R 48	Jul 10/2009		
R 10	Jul 10/2009	R 49	Jul 10/2009		
R 11	Jul 10/2009	R 50	Jul 10/2009		
R 12	Jul 10/2009	A 51	Jul 10/2009		
R 13	Jul 10/2009	A 52	BLANK		
R 14	Jul 10/2009	TRANSMITTAL LETTER			
R 15	Jul 10/2009	R 1	Jul 10/2009		
R 16	Jul 10/2009	2	Nov 10/2007		
R 17	Jul 10/2009	HIGHLIGHTS			
R 18	Jul 10/2009	R 1	Jul 10/2009		
R 19	Jul 10/2009	2	BLANK		
R 20	Jul 10/2009	EFFECTIVE PAGES			
R 21	Jul 10/2009	1	Jul 10/2009		
R 22	Jul 10/2009	2	BLANK		
R 23	Jul 10/2009	EFFECTIVE CHAPTERS			
R 24	Jul 10/2009	R 1	Jul 10/2009		
R 25	Jul 10/2009	2	BLANK		
R 26	Jul 10/2009	REVISION RECORD			
R 27	Jul 10/2009	1	Nov 01/2003		
R 28	Jul 10/2009	2	Nov 01/2003		
R 29	Jul 10/2009	RECORD OF TEMPORARY REVISIONS			
R 30	Jul 10/2009	1	Nov 10/2006		
R 31	Jul 10/2009	2	Nov 10/2006		
R 32	Jul 10/2009	SERVICE BULLETIN LIST			
R 33	Jul 10/2009	1	Jul 10/2004		
R 34	Jul 10/2009	2	BLANK		
R 35	Jul 10/2009	INTRODUCTION			
R 36	Jul 10/2009	1	Nov 01/2003		

A = Added, R = Revised, O = Overflow, D = Deleted

EFFECTIVE PAGES



737-800
STRUCTURAL REPAIR MANUAL

	Chapter	Date	Title
	51	Mar 10/2009	STRUCTURES - GENERAL
	52	Jul 10/2008	DOORS
R	53	Jul 10/2009	FUSELAGE
	54	Mar 10/2009	NACELLES/PYLONS
R	55	Jul 10/2009	STABILIZERS
	56	Jul 10/2007	WINDOWS
R	57	Jul 10/2009	WINGS

EFFECTIVE CHAPTERS



737-800

STRUCTURAL REPAIR MANUAL

All revisions to this manual will be accompanied by transmittal sheet bearing the revision number. Enter the revision number in numerical order, together with the revision date, the date filed and the initials of the person filing.

Revision		Filed		Revision		Filed	
Number	Date	Date	Initials	Number	Date	Date	Initials

REVISION RECORD



737-800
STRUCTURAL REPAIR MANUAL

Revision		Filed		Revision		Filed	
Number	Date	Date	Initials	Number	Date	Date	Initials

REVISION RECORD



737-800
STRUCTURAL REPAIR MANUAL

All temporary revisions to this manual will be accompanied by a cover sheet bearing the temporary revision number. Enter the temporary revision number in numerical order, together with the temporary revision date, the date the temporary revision is inserted and the initials of the person filing. When the temporary revision is incorporated or cancelled, and the pages are removed, enter the date the pages are removed and the initials of the person who removed the temporary revision.

Temporary Revision		Inserted		Removed	
Number	Date	Date	Initials	Date	Initials

RECORD OF TEMPORARY REVISION



737-800

STRUCTURAL REPAIR MANUAL

Temporary Revision		Inserted		Removed		Temporary Revision		Inserted		Removed	
Number	Date	Date	Initials	Date	Initials	Number	Date	Date	Initials	Date	Initials

RECORD OF TEMPORARY REVISION

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details



737-800
STRUCTURAL REPAIR MANUAL

Number	Incorporated	Started/ Completed	ATA	Subject
SB 737-55-1062	MAR 10/2001	S	55-40-02	RUDDER - Leading Edge Rib Inspection - Installation
SB 737-55-1067	MAR 10/2001	S	55-10-90	Stabilizer - Horizontal Stabilizer - Hinge Plate Replacement
SB 737-55-1069	MAR 10/2001 MAR 10/2001	S	51-60-07 55-40-02	RUDDER - Lower Closure Rib & Rudder Hinge Plate Nut - Replacement

A = Added, R = Revised

SERVICE BULLETIN LIST

D634A210

Page 1
Jul 10/2004



**737-800
STRUCTURAL REPAIR MANUAL**

INTRODUCTION

1. General

- A. This Structural Repair Manual gives general data and special instructions for the repair of the Boeing 737-800 and 737-800 BBJ airplane structure. This manual gives general airplane data, usual procedures, and repair materials. This manual also includes material identification, allowable damage, and repair data for the airplane structure. Procedures usually done together with the structural repair (such as an airplane symmetry check or support of the airplane in the jiggled position) are also given. This manual was made as specified in the Air Transport Association Specification 100 - Specification for Manufacturer's Technical Data. The data in this manual which has an important effect on the airplane structure is approved by the Federal Aviation Administration.
- B. Some structural components that can be repaired are not included in this manual. It is possible that repairs are not given because a general repair was not easily applied to a specified structure. Also, it is possible that service experience has not shown that a repair is necessary for a specified structure. For some types of damage, an analysis by The Boeing Company is necessary before an applicable repair can be made. When an applicable repair is not found in this manual, look at these items:
 - (1) Do a repair as specified in the general repair practices and procedures given in Chapter 51 of this manual.
 - (2) Prepare a special repair for damage not included in this manual.
 - (3) Replace the damaged part.
- C. This manual will change to include more approved repairs when the service experience shows a necessary repair for a specified structure.
- D. For the most important structural damage, it is recommended that the data in this manual be used together with aid from the Boeing Customer Support Representative. Refer to Paragraph 4 for instructions on how to use the data in this manual to make an order for structural spare parts.

2. Manual Arrangement and Number System (Refer to Figure 1.)

- A. General
 - (1) The standard number system for Structural Repair Manuals is given in the Air Transport Association Specification 100 (ATA 100) - Specification for Manufacturer's Technical Data. This number system has three elements with two numbers in each element. The first element identifies the Chapter, the second element identifies the Section, and the third element identifies the Subject. Chapter numbers identify the fuselage, the wing, or other such large airplane structures. Section numbers identify the fuselage section 41, the wing center section, or other such smaller parts. Subject numbers identify the skin, the stringers, or other basic structural elements. Refer to Standard Number System, Figure/1 for a usual Chapter-Section-Subject number as follows:
- B. Chapter Numbers
 - (1) The Chapter numbers and titles given in Table 1 identify the data included in this manual:

Table 1:

SRM CHAPTER NUMBERS AND TITLES	
CHAPTER NUMBER	TITLE
51	Standard Practices and Structures-General
52	Doors
53	Fuselage

INTRODUCTION



**737-800
STRUCTURAL REPAIR MANUAL**

SRM CHAPTER NUMBERS AND TITLES	
CHAPTER NUMBER	TITLE
54	Nacelles/Pylons
55	Stabilizers
56	Windows
57	Wings

C. Section Numbers

- (1) The data in the Chapters is divided into specified Section numbers. Important structural differences between models are identified by special Section numbers.
- (2) Chapter 51 gives data for those subjects which are applicable to all of the airplane structure. Standard practices, general procedures, typical repairs, and other data applicable to more than one chapter is included in Chapter 51. The Chapter-Section numbers and titles given in Table 2 identify the data included in Chapter 51:

Table 2:

CHAPTER-SECTION NUMBERS AND TITLES FOR CHAPTER 51	
CHAPTER SECTION NUMBER	TITLE
51-00	General
51-10	Investigation and Cleanup of Damage and Aerodynamic Smoothness Requirements
51-20	Processes and Procedures
51-30	Materials
51-40	Fasteners
51-50	Support of Airplane for Repair and Alignment Check
51-60	Control Surface Balancing
51-70	Repairs

NOTE: Other important groups of data in Chapter 51 are identified with a different fourth number in the Chapter-Section number.

- (3) Chapters 52 through 57 give data for the primary airplane structure groups. Chapter-Section numbers identify the components included in each group. The Chapter-Section numbers and titles given in Table 3 identify the data included in Chapters 52 through 57:

Table 3:

CHAPTER-SECTION NUMBERS AND TITLES FOR CHAPTERS 52 THRU 57			
CHAPTER SECTION NUMBER	TITLE	CHAPTER SECTION NUMBER	TITLE
CHAPTER 52	DOORS	CHAPTER 55	STABILIZERS
52-00	General	55-00	General
52-10	Passenger/Crew	55-10	Horizontal Stabilizer

INTRODUCTION



**737-800
STRUCTURAL REPAIR MANUAL**

CHAPTER-SECTION NUMBERS AND TITLES FOR CHAPTERS 52 THRU 57			
CHAPTER SECTION NUMBER	TITLE	CHAPTER SECTION NUMBER	TITLE
52-20	Emergency Exit	55-20	Elevator
52-30	Cargo	55-30	Vertical Stabilizer
52-40	Service	55-40	Rudder
52-50	Fixed Interior		
52-80	Landing Gear		
52-82	Main Landing Gear Wing		
CHAPTER 53	FUSELAGE	CHAPTER 56	WINDOWS
53-00	General	56-00	General
53-10	Section 41	56-10	Flight Compartment
53-30	Section 43	56-20	Passenger Compartment
53-40	Section 44	56-30	Door
53-60	Section 46	56-40	Inspection and Observation
53-70	Section 47		
53-80	Section 48		
CHAPTER 54	NACELLES/PYLONS	CHAPTER 57	WINGS
54-00	General	57-00	General
54-10	Inlet Cowl - CFM56-7	57-10	Center Wing
54-20	Fan Cowl - CFM56-7	57-20	Outer Wing
54-30	Fan Duct Cowl and Thrust Reverser - CFM56-7	57-30	Wing Tip and Winglet
54-40	Exhaust - CFM56-7	57-40	Leading Edge and
54-50	Pylon - CFM56-7		Leading Edge Devices
		57-41	Leading Edge
		57-42	Leading Edge Slats
		57-43	Leading Edge Flaps
		57-50	Trailing Edge and Trailing Edge Devices
		57-51	Trailing Edge
		57-53	Trailing Edge Flaps
		57-60	Ailerons
		57-70	Spoilers

NOTE: Other important groups of data in Chapters 52-57, such as optional engines, are identified with a different fourth number in the Chapter-Section number.

D. Subject Numbers

INTRODUCTION



737-800

STRUCTURAL REPAIR MANUAL

- (1) In Chapter 51 the data included in a Chapter-Section is divided into Subject numbers given in a sequence.
- (2) In Chapters 52 through 57 the data included in a Chapter-Section is divided into specified Subject numbers. A given Chapter-Section will only use those subjects applicable to the structure included in that Chapter-Section of the manual. The Subject numbers and titles given in Table 4 identify the data included in Chapters 52 through 57:

Table 4:

SUBJECT NUMBERS AND TITLES FOR CHAPTERS 52 THRU 57			
CHAPTER SECTION SUBJECT NUMBER	TITLE	CHAPTER SECTION SUBJECT NUMBER	TITLE
5X-XX-00	General	5X-XX-50	Floor Panels
-01	Skins and Plates	-51	Floor Structure
-02	Structure Complete	-52	Seat Tracks
-03	Stringers and Skin Stiffeners	-53	Cargo Compartment Special Structure
-04	Intercostals		
-05	Longerons		
-06	Formers	-54	
-07	Frames	to	Not Used
-08	Bulkheads	-69	
-09	Ribs	-70	Fillets and Fairings,
-10	Spars		Skins and Plating
-11	Intermediate, Auxiliary and Subspars	-71	Fillets and Fairings, Structure
-12	Keel Structure	-72	Radomes and Antenna
-13	Beams		Fairings
-14	Landing Gear Support	-73	
-15	Door Surround Structure	to	Not Used
-16	Edge Members	-89	
-17 to -29	Not Used	-90 -91 to	Attachment Fittings Not Used
-30	Auxiliary	-99	
-31 to -49	Not Used		

NOTE: Attachment fittings identified in -90 are fittings with a lug (with a bushing or bearing), links, braces, and hinge fittings (with a bushing or bearing). Other fittings (backup, structural) such as door stop fittings, jack fittings, and splice fittings are identified in the applicable Subject (Example: -10 for spars).

E. Topics, Figure Numbers, and Page Numbers

- (1) In Chapter 51 the data included in a Chapter-Section-Subject is divided into topics with figure numbers and page numbers given in Table 5 below:

INTRODUCTION

737-800 STRUCTURAL REPAIR MANUAL


Table 5:

TOPIC, FIGURE, AND PAGE NUMBERS FOR CHAPTER 51		
CHAPTER 51 TOPIC	FIGURE NUMBER	PAGE NUMBER
General Information	Figure 1-99	Page 1-99
Repair General	Figure 201-999	Page 201-999
Repair 1, 2, 3, ...	Figure 201-999	Page 201-999

(2) In Chapters 52 through 57 the data included in a Chapter-Section-Subject is divided into topics with figure numbers and page numbers given in Table 6 below:

Table 6:

TOPIC, FIGURE, AND PAGE NUMBERS FOR CHAPTERS 52 THRU 57		
CHAPTER 52-57 TOPIC	FIGURE NUMBER	PAGE NUMBER
General Information	Figure 1-99	Page 1-99
Identification General	Figure 1-99	Page 1-99
Identification 1, 2, 3, ...	Figure 1-99	Page 1-99
Allowable Damage General	Figure 101-199	Page 101-199
Allowable Damage 1, 2, 3, ...	Figure 101-199	Page 101-199
Repair General	Figure 201-999	Page 201-999
Repair 1, 2, 3, ...	Figure 201-999	Page 201-999

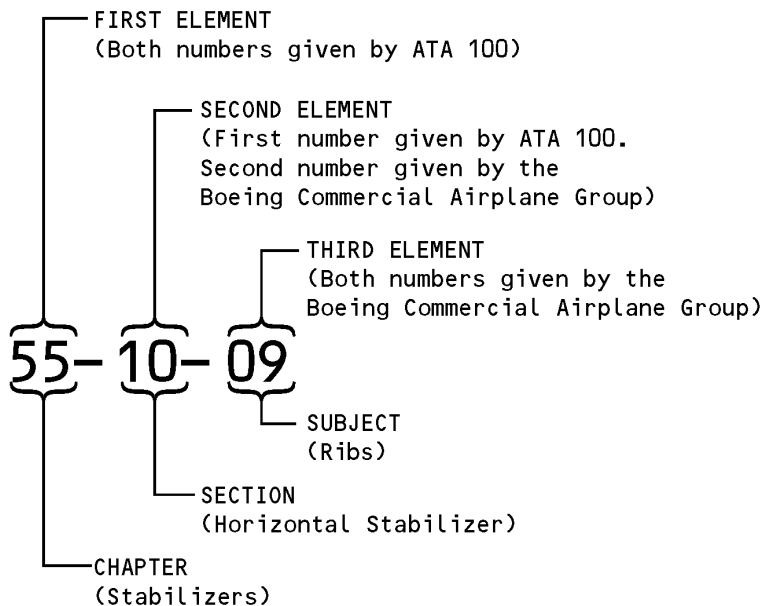

**Standard Number System
Figure 1**

INTRODUCTION



737-800

STRUCTURAL REPAIR MANUAL

3. How To Use The Manual (Refer to Figure 2)

CAUTION: MAKE SURE THAT YOU DO ALL OF THE STEPS TO THE END OF THE PROCEDURE. LARGE BLANK SPACES CAN OCCUR AT THE BOTTOM OF PAGES WHICH DO NOT ALWAYS INDICATE THAT YOU ARE AT THE END OF THE PROCEDURE. IF YOU DO NOT MAKE SURE THAT YOU HAVE COMPLETED THE PROCEDURE, DAMAGE TO EQUIPMENT OR SYSTEM MALFUNCTION COULD OCCUR.

- A. Identify the material of the damaged part. Refer to the applicable material identification data in this manual. For the example used before, in 55-10-09, the topic "Identification 1 - Horizontal Stabilizer Forward Box Ribs" gives the identification data for the damaged part.

NOTE: The material identification tables and some of the figures give reference drawing numbers. Refer to these reference drawings when the applicable structure is not identified.

- B. Find the allowable damage data for the damaged structure. Refer to the Manual Arrangement and Number System in the Introduction of this manual. Also refer to the List of Chapters for this manual and to the Table of Contents in the applicable chapter. As an example, if the damaged part was a rib in the forward box of the horizontal stabilizer, the allowable damage data is found as follows:

- (1) The List of Chapters for this manual shows that data on Stabilizers is included in Chapter 55.
- (2) The Table of Contents for Chapter 55 shows that all data on the Horizontal Stabilizer is included in the Chapter-Section 55-10-XX. The data on Ribs is given in Chapter-Section-Subject 55-10-09. The topic "Allowable Damage 1 - Horizontal Stabilizer Forward Box Ribs" gives the allowable damage data for the damaged part.

- C. Find the repair data for the damaged structure. For the example used before, in 55-10-09, the topic "Repair 1 - Horizontal Stabilizer Forward Box Ribs" gives the repair data for the damaged part.
- D. Unless specified differently, all dimensions in this manual are given in inches.

INTRODUCTION



737-800 STRUCTURAL REPAIR MANUAL

PROCEDURE TO FIND THE
APPLICABLE TOPIC



 737-800 STRUCTURAL REPAIR MANUAL			
CHAPTER 55 - STABILIZERS			
TABLE OF CONTENTS			
SUBJECT	CHAPTER SECTION SUBJECT	PAGE	
STABILIZERS - GENERAL	55-00-00	1	
HORIZONTAL STABILIZER	55-10-00	1	
RIBS Identification 1 - Horizontal Stabilizer Forward Box Ribs		55-10-09	1
Allowable Damage 1 - Horizontal Stabilizer Forward Box Ribs		55-10-09	101
Repair 1 - Horizontal Stabilizer Forward Box Ribs		55-10-09	201
55-CONTENTS			
<small>Page 2 Jan 05/97</small>			

How to Use the Manual
Figure 2

INTRODUCTION



737-800

STRUCTURAL REPAIR MANUAL

4. How to Use the Manual for Spare Parts Identification

- A. This Structural Repair Manual can be used to make an order for structural parts. This procedure can be used when structural parts are not easily identified from drawings or the Illustrated Parts Catalog.
- B. The procedure that follows can be used to get a kit of structural spare parts from the Commercial Spares Department.
 - (1) Make a copy of the page which identifies the damaged structural component.
 - (2) Show all of the damaged components on the applicable pages with a color or a shade. For structure shown only in a left-hand view, identify the left-hand or the right-hand structure.
 - (3) Give photographs.
 - (4) Give the airplane model and serial number.
 - (5) Send a completed Purchase Order with the data to: Boeing Commercial Airplane Group Spares Department P.O. Box 3707 Seattle, Washington, USA 98124-2207

NOTE: Identification of the structural damage and the necessary replacement items can be done quickly by SITA, ARINC, TWX (telex), Rapifax (facsimile), or direct distance dialing (telephone). Refer to the necessary structural parts with the Chapter-Section-Subject and page number from this manual together with any other data on the page that identifies the part.

- C. After the data and Purchase Order are received by the Spares Department, the necessary parts will be sent as a kit. Parts sent and not necessary can be sent back to The Boeing Company for credit.

5. Publications Change Requests

- A. To get more details about the data in this manual, write to this address: Boeing Commercial Aviation Services P.O. Box 3707 Seattle, Washington 98124-2207 U.S.A. Attention: Director, Retrofit Engineering and Overhaul Support

Use a Publications Change Request (PCR) form to make sure that your request is sent to the applicable Boeing organization. Boeing makes the PCR form available through your publications organization.

6. Revision Service

- A. This Structural Repair Manual is changed by Revision Service. A List of Effective Pages (LEP) will be given with each revision. Two types of Revision Service are used:
 - Normal Revision
 - Temporary Revision The two types of Revision Service are given as follows:
 - (1) Normal Revision Service
 - (a) The usual time for Normal Revision Service is each four months. A List of Effective Pages (LEP) and a Transmittal Letter are sent with each Normal Revision. The Transmittal Letter includes Highlights that give the causes for the changed data. Changed pages are identified on the LEP with these letters to the left of the page number: R = Revised Page A = Added Page D = Deleted Page O = Overflow Page The changed data is identified by a revision bar at the left side of each new or changed page. Pages sent again without a technical change are identified by a short revision bar at the lower left side of the page.
 - (2) Temporary Revision Service
 - (a) Temporary Revision Service is used to quickly send data and instructions before the date of the next Normal Revision. Most Temporary Revision data will be included in a Normal Revision before 120 days after the date of the Temporary Revision.

INTRODUCTION



737-800

STRUCTURAL REPAIR MANUAL

- (b) Temporary Revisions will not be revised. If changes are necessary, a new Temporary Revision will be issued.
- (c) The Temporary Revisions that are incorporated, canceled, or active are given in the Transmittal Letter that is sent with each Normal Revision.

7. Standard Tools

- A. Tools in this manual that are identified with an ST prefix are designed by The Boeing Company. Detail drawings of these tools are available by request.

8. Significant Rework Log (SRL)

- A. This log supplies the customer with important rework data which occurred when the airplane was assembled. This log was made by Boeing Engineering Liaison and Customer Product Assurance. This log can also be used by the customer to make record of important rework that can occur during the life of the airplane.
- B. When you see a reference to -M (Dash M) part numbers in this Structural Repair Manual (SRM), it is an indication of earlier Material Review Board (MRB) activity. The necessary data can often be found in the Significant Rework Log (SRL). The -M part numbers identify unique parts which are different from the standard production parts. The -M parts are usually identified with the regular part number, immediately followed by a letter then followed by a dash (-) and the associated nonconformance record number (For Example: 65C25592-5M-120442D).

NOTE: For multiple -M parts in an assembly or area, consecutive letter identifications (For Example: -N, -P, -Q) may be used. The letter 'O' is never used for a -M part number.

9. Service Bulletins

- A. The service bulletins that have been used to make or change the data contained in this manual are given in the Service Bulletin List.

10. Effective Aircraft Identification

- A. The Effective Aircraft List (EAL) gives the airplane effectivity identification and is provided for reference only. Missing or incorrect data in the EAL does not invalidate the use of this manual. The EAL shows the relation of these items:
 - Airplane Type and Model (shown as Model-Series)
 - Variable Number (shown as Block Number)
 - Serial Number
 - Production Cumulative Line Number (shown as Line Number)
 - Registry Number (shown as Registration Number)
- B. Effectivity identification is used to show differences in the airplane configuration. Data in this manual without effectivity identification is applicable to all airplanes. Examples of effectivity identification are given as follows:
 - (1) Production cumulative line numbers such as:
 - LINE NUMBERS: 1 THRU 24 (used in a note)
 - 1 THRU 24 (used in the material list effectivity column) identify the data as applicable to those airplanes with line numbers in the specified group.
 - (2) Special equipment is used to identify some data as applicable to those airplanes with the specified equipment. An optional cargo door or other such easily identified equipment is used for effectivity identification.

INTRODUCTION