



# **COMPONENT MAINTENANCE MANUAL WITH ILLUSTRATED PARTS LIST**

## **FAN DUCT COWL AND THRUST REVERSER PARTS COLLECTOR**

### **PART NUMBER**

**315A2295-103, -104, -105, -106, -107, -108, -109, -11,  
-110, -111, -112, -113, -114, -115, -116, -117, -118,  
-119, -12, -120, -121, -122, -123, -124, -125, -126,**

**BOEING PROPRIETARY, CONFIDENTIAL, AND/OR TRADE SECRET**

Copyright © 1995 The Boeing Company  
Unpublished Work - All Rights Reserved

Boeing claims copyright in each page of this document only to the extent that the page contains copyrightable subject matter. Boeing also claims copyright in this document as a compilation and/or collective work.

This document includes proprietary information owned by The Boeing Company and/or one or more third parties. Treatment of the document and the information it contains is governed by contract with Boeing. For more information, contact The Boeing Company, P.O. Box 3707, Seattle, Washington 98124.

Boeing, the Boeing signature, the Boeing symbol, 707, 717, 727, 737, 747, 757, 767, 777, 787, Dreamliner, BBJ, DC-8, DC-9, DC-10, KC-10, KDC-10, MD-10, MD-11, MD-80, MD-88, MD-90, P-8A, Poseidon and the Boeing livery are all trademarks owned by The Boeing Company; and no trademark license is granted in connection with this document unless provided in writing by Boeing.

PUBLISHED BY BOEING COMMERCIAL AIRPLANES GROUP, SEATTLE, WASHINGTON, USA  
A DIVISION OF THE BOEING COMPANY  
PAGE DATE: Jul 01/2009

**78-31-40**

Page 1  
Jul 01/2009



## COMPONENT MAINTENANCE MANUAL

### PART NUMBER (Cont.)

315A2295-127, -128, -129, -13, -130, -131, -132, -133, -134, -135, -136, -137, -138, -139, -14, -140, -141, -142, -143, -144, -145, -146, -147, -148, -149, -15, -150, -151, -152, -153, -154, -155, -156, -157, -158, -159, -16, -160, -161, -162, -163, -164, -165, -166, -167, -168, -169, -17, -170, -171, -172, -173, -174, -179, -18, -180, -181, -182, -183, -184, -185, -186, -187, -188, -189, -19, -190, -191, -192, -193, -194, -195, -196, -197, -198, -199, -20, -200, -201, -202, -21, -219, -22, -220, -221, -222, -223, -23, -24, -25, -26, -27, -28, -29, -3, -30, -31, -32, -33, -34, -35, -36, -37, -38, -39, -4, -40, -41, -42, -43, -44, -45, -46, -47, -48, -49, -5, -50, -51, -52, -53, -54, -597, -6, -63, -64, -65, -66, -67, -671, -672, -673, -674, -679, -68, -680, -681, -682, -683, -684, -685, -686, -687, -688, -689, -69, -690, -691, -692, -693, -694, -695, -696, -697, -698, -699, -70, -700, -701, -702, -71, -72, -73, -74, -75, -76, -77, -78, -79, -80, -81, -82, -83, -84, -85, -86, -87, -88, -89, -90, -91, -92, -93, -94, -95, -96, -97, -98

**78-31-40**



## COMPONENT MAINTENANCE MANUAL

Revision No. 10  
Jul 01/2009

To: All holders of FAN DUCT COWL AND THRUST REVERSER PARTS COLLECTOR 78-31-40.

Attached is the current revision to this COMPONENT MAINTENANCE MANUAL

The COMPONENT MAINTENANCE MANUAL is furnished either as a printed manual, on microfilm, or digital products, or any combination of the three. This revision replaces all previous microfilm cartridges or digital products. All microfilm and digital products are reissued with all obsolete data deleted and all updated pages added.

For printed manuals, changes are indicated on the List of Effective Pages (LEP). The pages which are revised will be identified on the LEP by an R (Revised), A (Added), O (Overflow, i.e. changes to the document structure and/or page layout), or D (Deleted). Each page in the LEP is identified by Chapter-Section-Subject number, page number and page date.

Pages replaced or made obsolete by this revision should be removed and destroyed.

### ATTENTION

IF YOU RECEIVE PRINTED REVISIONS, PLEASE VERIFY THAT YOU HAVE RECEIVED AND FILED THE PREVIOUS REVISION. BOEING MUST BE NOTIFIED WITHIN 30 DAYS IF YOU HAVE NOT RECEIVED THE PREVIOUS REVISION. REQUESTS FOR REVISIONS OTHER THAN THE PREVIOUS REVISION WILL REQUIRE A COMPLETE MANUAL REPRINT SUBJECT TO REPRINT CHARGES SHOWN IN THE DATA AND SERVICES CATALOG.

**78-31-40**  
TRANSMITTAL LETTER  
Page 1  
Jul 01/2009



## COMPONENT MAINTENANCE MANUAL

Location of Change

Description of Change

NO HIGHLIGHTS

**78-31-40**

HIGHLIGHTS

Page 1

Jul 01/2009



## COMPONENT MAINTENANCE MANUAL

Subject/Page	Date	Subject/Page	Date	Subject/Page	Date
TITLE PAGE		78-31-40 CLEANING		78-31-40 ILLUSTRATED PARTS LIST	
O 1	Jul 01/2009	401	Mar 01/2006	(cont)	
O 2	Jul 01/2009	402	BLANK	1021	Jul 01/2008
78-31-40 TRANSMITTAL LETTER		78-31-40 CHECK		1022	Jul 01/2008
O 1	Jul 01/2009	501	Mar 01/2006	1023	Jul 01/2008
2	BLANK	502	BLANK	1024	Jul 01/2008
78-31-40 HIGHLIGHTS		78-31-40 REPAIR - GENERAL		1025	Jul 01/2008
O 1	Jul 01/2009	601	Mar 01/2006	1026	Jul 01/2008
2	BLANK	602	BLANK	1027	Jul 01/2008
78-31-40 EFFECTIVE PAGES		78-31-40 ASSEMBLY		1028	Jul 01/2008
1 thru 3	Jul 01/2009	701	Mar 01/2006	1029	Jul 01/2008
4	BLANK	702	BLANK	1030	Jul 01/2008
78-31-40 CONTENTS		78-31-40 FITS AND CLEARANCES		1031	Jul 01/2008
1	Mar 01/2006	801	Mar 01/2006	1032	Mar 01/2009
2	BLANK	802	BLANK	1033	Jul 01/2008
78-31-40 TR AND SB RECORD		78-31-40 SPECIAL TOOLS, FIXTURES, AND EQUIPMENT		1034	Jul 01/2008
1	Mar 01/2008	901	Mar 01/2006	1035	Jul 01/2008
2	BLANK	902	BLANK	1036	Jul 01/2008
78-31-40 REVISION RECORD		78-31-40 ILLUSTRATED PARTS LIST		1037	Jul 01/2008
1	Mar 01/2006	1001	Nov 01/2008	1038	Jul 01/2008
2	Mar 01/2006	1002	Jul 01/2006	1039	Jul 01/2008
78-31-40 RECORD OF TEMPORARY REVISIONS		1003	Jul 01/2007	1040	Jul 01/2008
1	Mar 01/2006	1004	Jul 01/2008	1041	Jul 01/2008
2	Mar 01/2006	1005	Jul 01/2008	1042	Jul 01/2008
78-31-40 INTRODUCTION		1006	Jul 01/2008	1043	Jul 01/2008
1	Mar 01/2009	1007	Jul 01/2008	1044	Jul 01/2008
2	BLANK	1008	Jul 01/2008	1045	Jul 01/2008
78-31-40 DESCRIPTION AND OPERATION		1009	Jul 01/2008	1046	Jul 01/2008
1	Mar 01/2006	1010	Jul 01/2008	1047	Jul 01/2008
2	Nov 01/2007	1011	Jul 01/2008	1048	Jul 01/2008
3	Nov 01/2007	1012	Jul 01/2008	1049	Jul 01/2008
4	BLANK	1013	Jul 01/2008	1050	Jul 01/2008
78-31-40 TESTING AND FAULT ISOLATION		1014	Jul 01/2008	1051	Jul 01/2008
101	Mar 01/2006	1015	Jul 01/2008	1052	Jul 01/2008
102	BLANK	1016	Jul 01/2008	1053	Jul 01/2008
78-31-40 DISASSEMBLY		1017	Jul 01/2008	1054	Jul 01/2008
301	Mar 01/2006	1018	Jul 01/2008	1055	Jul 01/2008
302	BLANK	1019	Jul 01/2008	1056	Jul 01/2008
		1020	Jul 01/2008	1057	Jul 01/2008
				1058	Jul 01/2008

A = Added, R = Revised, D = Deleted, O = Overflow

# 78-31-40

EFFECTIVE PAGES

Page 1

Jul 01/2009



## COMPONENT MAINTENANCE MANUAL

Subject/Page	Date	Subject/Page	Date	Subject/Page	Date
78-31-40 ILLUSTRATED PARTS LIST (cont)		78-31-40 ILLUSTRATED PARTS LIST (cont)		78-31-40 ILLUSTRATED PARTS LIST (cont)	
1059	Jul 01/2008	1097	Jul 01/2008	1098.37	Jul 01/2008
1060	Jul 01/2008	1098	Jul 01/2008	1098.38	Jul 01/2008
1061	Jul 01/2008	1098.1	Jul 01/2008	1098.39	Jul 01/2008
1062	Jul 01/2008	1098.2	Jul 01/2008	1098.40	Jul 01/2008
1063	Jul 01/2008	1098.3	Jul 01/2008	1098.41	Jul 01/2008
1064	Jul 01/2008	1098.4	Jul 01/2008	1098.42	Jul 01/2008
1065	Jul 01/2008	1098.5	Mar 01/2009	1098.43	Jul 01/2008
1066	Jul 01/2008	1098.6	Jul 01/2008	1098.44	Jul 01/2008
1067	Jul 01/2008	1098.7	Jul 01/2008	1098.45	Jul 01/2008
1068	Jul 01/2008	1098.8	Jul 01/2008	1098.46	Jul 01/2008
1069	Jul 01/2008	1098.9	Jul 01/2008	1098.47	Jul 01/2008
1070	Jul 01/2008	1098.10	Jul 01/2008	1098.48	Jul 01/2008
1071	Jul 01/2008	1098.11	Jul 01/2008	1098.49	Jul 01/2008
1072	Jul 01/2008	1098.12	Jul 01/2008	1098.50	Jul 01/2008
1073	Jul 01/2008	1098.13	Jul 01/2008	1098.51	Jul 01/2008
1074	Jul 01/2008	1098.14	Jul 01/2008	1098.52	Jul 01/2008
1075	Jul 01/2008	1098.15	Jul 01/2008	1098.53	Jul 01/2008
1076	Jul 01/2008	1098.16	Jul 01/2008	1098.54	Jul 01/2008
1077	Jul 01/2008	1098.17	Jul 01/2008	1098.55	Jul 01/2008
1078	Jul 01/2008	1098.18	Jul 01/2008	1098.56	Jul 01/2008
1079	Jul 01/2008	1098.19	Jul 01/2008	1098.57	Jul 01/2008
1080	Jul 01/2008	1098.20	Jul 01/2008	1098.58	Jul 01/2008
1081	Jul 01/2008	1098.21	Jul 01/2008	1098.59	Jul 01/2008
1082	Jul 01/2008	1098.22	Jul 01/2008	1098.60	Jul 01/2008
1083	Jul 01/2008	1098.23	Jul 01/2008	1098.61	Jul 01/2008
1084	Jul 01/2008	1098.24	Jul 01/2008	1098.62	Jul 01/2008
1085	Jul 01/2008	1098.25	Jul 01/2008	1098.63	Jul 01/2008
1086	Jul 01/2008	1098.26	Jul 01/2008	1098.64	Jul 01/2008
1087	Jul 01/2008	1098.27	Jul 01/2008	1098.65	Jul 01/2008
1088	Jul 01/2008	1098.28	Jul 01/2008	1098.66	Jul 01/2008
1089	Jul 01/2008	1098.29	Jul 01/2008	1098.67	Jul 01/2008
1090	Jul 01/2008	1098.30	Jul 01/2008	1098.68	Jul 01/2008
1091	Jul 01/2008	1098.31	Jul 01/2008	1098.69	Jul 01/2008
1092	Jul 01/2008	1098.32	Jul 01/2008	1098.70	Jul 01/2008
1093	Jul 01/2008	1098.33	Jul 01/2008	1098.71	Jul 01/2008
1094	Jul 01/2008	1098.34	Jul 01/2008	1098.72	Jul 01/2008
1095	Jul 01/2008	1098.35	Jul 01/2008	1098.73	Jul 01/2008
1096	Jul 01/2008	1098.36	Jul 01/2008	1098.74	Jul 01/2008

A = Added, R = Revised, D = Deleted, O = Overflow

# 78-31-40

EFFECTIVE PAGES

Page 2

Jul 01/2009



## COMPONENT MAINTENANCE MANUAL

Subject/Page	Date	Subject/Page	Date	Subject/Page	Date
78-31-40 ILLUSTRATED PARTS LIST (cont)					
1098.75	Jul 01/2008				
1098.76	Jul 01/2008				
1098.77	Jul 01/2008				
1098.78	Jul 01/2008				
1098.79	Jul 01/2008				
1098.80	BLANK				

A = Added, R = Revised, D = Deleted, O = Overflow

# 78-31-40

EFFECTIVE PAGES

Page 3

Jul 01/2009



## COMPONENT MAINTENANCE MANUAL

### TABLE OF CONTENTS

<u>Paragraph Title</u>		<u>Page</u>
FAN DUCT COWL AND THRUST REVERSER ASSEMBLY COMPONENTS - DESCRIPTION AND OPERATION		1
TESTING AND FAULT ISOLATION	(Not Applicable)	
DISASSEMBLY	(Not Applicable)	
CLEANING	(Not Applicable)	
CHECK	(Not Applicable)	
REPAIR	(Not Applicable)	
ASSEMBLY	(Not Applicable)	
FITS AND CLEARANCES	(Not Applicable)	
SPECIAL TOOLS, FIXTURES, AND EQUIPMENT	(Not Applicable)	
ILLUSTRATED PARTS LIST		1001

# 78-31-40

CONTENTS

Page 1

Mar 01/2006















## COMPONENT MAINTENANCE MANUAL

### INTRODUCTION

#### 1. General

- A. The instructions in this manual supply the data necessary to do the maintenance functions together with the test, fault isolation, repair, and replacement of the defective parts.
- B. This manual is divided into different parts:
  - (1) Title Page
  - (2) Transmittal Letter
  - (3) Highlights
  - (4) List of Effective Pages
  - (5) Table of Contents
  - (6) Temporary Revision & Service Bulletin Record
  - (7) Record of Revisions
  - (8) Record of Temporary Revisions
  - (9) Introduction
  - (10) Procedures & IPL Sections
- C. Components that can be repaired have a different repair number for each specified repair. To find the repair number location of a component, look in the Repair-General procedure at the beginning of the REPAIR section. The Repair-General procedure also has an explanation of the True Position Dimension symbols used.
- D. All dimensions, measures, quantities and weights included are in English units. When metric equivalents are given they will be in the parentheses that follow the English units.
- E. The introduction to the Illustrated Parts List (IPL) shows how the IPL data is used.
- F. Design changes, optional parts, configuration differences and Service Bulletin modifications may cause different part numbers. These part numbers are identified in the IPL with an alphabetical letter which is added to the end of the basic item number. This new item number is referred to as an alpha-variant. Throughout the manual, IPL basic item number references also apply to alpha-variants unless shown differently.
- G. The tool reference numbers found in the individual procedures and in the Special Tools, Fixtures, and Equipment section are used to identify if a tool is a standard tool (STD-XXXX), a commercial tool (COM-XXXX), or a Special Tool (SPL-XXXX). This reference number is also used to distinguish between tools with similar names in the same procedure. These reference numbers are for use in the documentation only. They are not to be used for ordering tools.

# 78-31-40

INTRODUCTION

Page 1

Mar 01/2009



## COMPONENT MAINTENANCE MANUAL

### FAN DUCT COWL AND THRUST REVERSER ASSEMBLY COMPONENTS - DESCRIPTION AND OPERATION

#### 1. Description

A. The fan duct cowl and thrust reverser assembly has the following components: cascade vanes, actuation system, supporting stationary structure, translating sleeve, and blocker doors with linkages. The thrust reverser is assembled in two parts and may be removed/installed without removing/installing the engine. There is a hinge on the strut that will allow access for removal/installation.

#### 2. Operation

A. During operation, six mechanically synchronized and internally snubbed hydraulic actuators translate the thrust reverser sleeve in the aft direction. Sensors tell you when the sleeve unlocks from the stowed position. The movement between the sleeve and the fixed structure causes the twelve blocker doors to move and block the flow of fan air through the cascade vanes to provide reverse thrust. After the sleeve is retracted, two of the actuators lock the thrust reverser in the stowed position.

#### 3. Leading Particulars (Approximate)

- A. Length – 76 inches
- B. Width – 79 inches
- C. Height – 42 inches
- D. Weight – 1100 pounds (two halves)


# 78-31-40

DESCRIPTION AND OPERATION

Page 1

Mar 01/2006

COMPONENT MAINTENANCE MANUAL

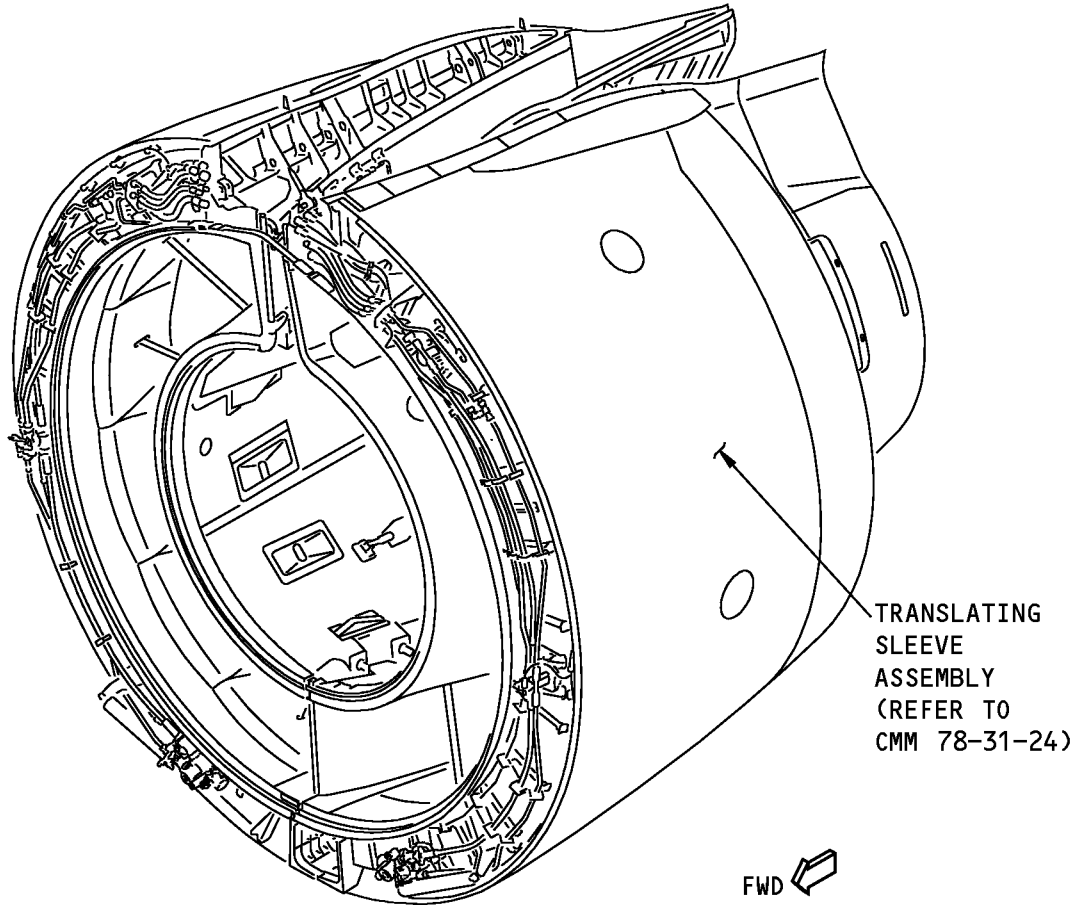

FAN DUCT COWL AND THRUST REVERSER COMPONENTS  
(REFER TO CMM 78-31-26 OR 78-31-37)

Fan Duct Cowl and Thrust Reverser Assembly  
Figure 1 (Sheet 1 of 2)

**78-31-40**


DESCRIPTION AND OPERATION

Page 2

Nov 01/2007



COMPONENT MAINTENANCE MANUAL

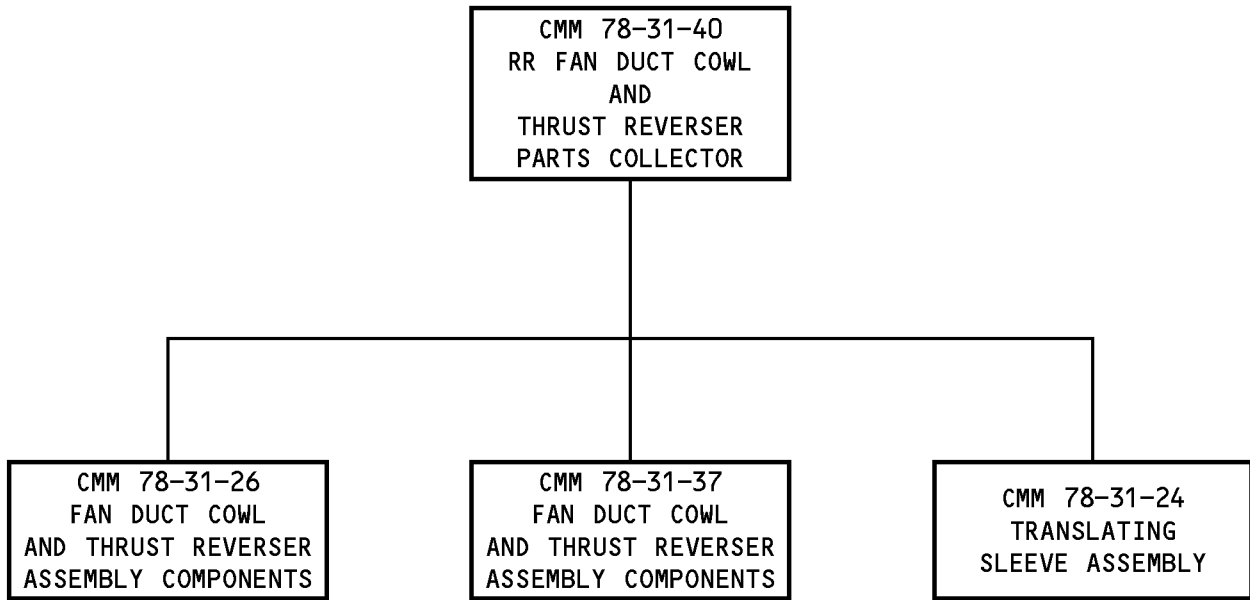

Fan Duct Cowl and Thrust Reverser Assembly  
Figure 1 (Sheet 2 of 2)

**78-31-40**

DESCRIPTION AND OPERATION

Page 3

Nov 01/2007



**COMPONENT MAINTENANCE MANUAL**

**TESTING AND FAULT ISOLATION**

**(NOT APPLICABLE)**

**78-31-40**

TESTING AND FAULT ISOLATION

Page 101

Mar 01/2006



COMPONENT MAINTENANCE MANUAL

DISASSEMBLY

**(NOT APPLICABLE)**

**78-31-40**

DISASSEMBLY

Page 301

Mar 01/2006



COMPONENT MAINTENANCE MANUAL

CLEANING

**(NOT APPLICABLE)**

**78-31-40**

CLEANING

Page 401

Mar 01/2006



COMPONENT MAINTENANCE MANUAL

CHECK

**(NOT APPLICABLE)**

**78-31-40**

CHECK  
Page 501  
Mar 01/2006



COMPONENT MAINTENANCE MANUAL

REPAIR

**(NOT APPLICABLE)**

**78-31-40**

REPAIR - GENERAL

Page 601

Mar 01/2006



**COMPONENT MAINTENANCE MANUAL**

**ASSEMBLY**

**(NOT APPLICABLE)**

**78-31-40**

ASSEMBLY

Page 701

Mar 01/2006



**COMPONENT MAINTENANCE MANUAL**

**FITS AND CLEARANCES**

**(NOT APPLICABLE)**

**78-31-40**

FITS AND CLEARANCES

Page 801

Mar 01/2006





**COMPONENT MAINTENANCE MANUAL**

**SPECIAL TOOLS, FIXTURES, AND EQUIPMENT**

**(NOT APPLICABLE)**

**78-31-40**

SPECIAL TOOLS, FIXTURES, AND EQUIPMENT

Page 901

Mar 01/2006



## COMPONENT MAINTENANCE MANUAL

### ILLUSTRATED PARTS LIST

#### 1. Introduction

- A. The Illustrated Parts List (IPL) contains an illustration and a list of component parts you can repair or replace. The Illustrated Parts Catalog (IPC) shows how to use the Boeing part number system.
- B. This shows how parts are related: The relation of each item to its next higher assembly (NHA) is shown in the NOMENCLATURE column. Use the indenture system that follows:

1	2	3	4	5	6	7
.	Assembly					
.	Attaching parts for assembly					
.	.	Detail parts for assembly				
.	.	Subassembly				
.	.	Attaching parts for subassembly				
.	.	.	Detail parts for subassembly			
.	.	.	Sub-subassembly			
.	.	.	Attaching parts for subassembly			
.	.	.	.	Details parts for sub-subassembly		
						Detail Installation Parts (Included only if installation parts may be sent to the shop as part of assembly)

- C. Each top assembly is given one use code letter (A, B, C, etc.) in the USAGE CODE column. All subsequent component parts in the list can have one or more of the use code letters to show effectivity to top assemblies. A component part without a use code applies to all top assemblies.
- D. An alphabetical letter is added after the item number for optional parts, parts changed by a Service Bulletin, configuration differences (except left-handed and right-handed parts), last engineering releases, and parts added between item numbers in a sequence. The alphabetical letter will not be shown on the illustration for equivalent parts of the same part number.
- E. Color-coded parts are identified with a single digit alpha following the dash number or with "SP" suffix. If the "SP" suffix is used, it represents consolidation of all color codes applicable for a given usage which are not separately listed. Orders for color-coded parts should include the registry number of the airplane for which the parts are ordered.
- F. If a part number is 15 characters long but will not fit in the part number column, the part number will be displayed with a "~" at the end of the line and will be continued on the next line. The "~" denotes that the part number continues on the next line.
- G. Parts changed by a Service Bulletin are shown by PRE SB XXXX and POST SB XXXX added to the NOMENCLATURE column.
- (1) When a new top assembly is added by a Service Bulletin, PRE SB XXXX and POST SB XXXX will be added at the top assembly level only. The configuration differences at the detail part level are shown by use code letters.
- (2) When the top assembly part number is not changed by the Service Bulletin, PRE SB XXXX and POST SB XXXX will be added at the detail level.
- H. Interchangeable Parts

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1001

Nov 01/2008



## COMPONENT MAINTENANCE MANUAL

Optional  
(OPT)

The part is optional to and interchangeable with other parts that have the same item number.

Replaces, Replaced by and not interchangeable with  
(REPLACES, REPLACED BY AND NOT INTCHG/W)

The part replaces and is not interchangeable with the initial part.

Replaces, Replaced by  
(REPLACES, REPLACED BY)

The part replaces and is interchangeable with, or is an alternative to, the initial part.

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1002

Jul 01/2006



## COMPONENT MAINTENANCE MANUAL

### NUMERICAL INDEX

PART NUMBER	AIRLINE PART NUMBER	FIGURE	ITEM	UNITS PER ASSEMBLY
		1		1
		1		1
315A2103-10		1	305C	1
315A2103-11		1	300A	1
		1	300C	1
		1	300F	1
315A2103-12		1	305A	1
		1	305D	1
315A2103-13		1	300G	1
315A2103-14		1	305E	1
315A2103-15		1	300H	1
315A2103-16		1	305F	1
315A2103-17		1	300J	1
315A2103-18		1	305G	1
315A2103-19		1	300K	1
315A2103-20		1	305H	1
315A2103-21		1	300L	1
315A2103-21REVA		1	300N	1
315A2103-21REVB		1	300P	1
315A2103-21REVC		1	300S	1
315A2103-22		1	305J	1
315A2103-22REVA		1	305L	1
315A2103-22REVB		1	305M	1
315A2103-22REVC		1	305Q	1
315A2103-23		1	300M	1
315A2103-23REVA		1	300Q	1
315A2103-23REVB		1	300R	1
315A2103-23REVC		1	300T	1
315A2103-24		1	305K	1
315A2103-24REVA		1	305N	1
315A2103-24REVB		1	305P	1
315A2103-24REVC		1	305R	1
315A2103-5		1	300	1
		1	300B	1

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1003

Jul 01/2007



## COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NUMBER	FIGURE	ITEM	UNITS PER ASSEMBLY
315A2103-6		1	305	1
315A2103-7		1	300D	1
315A2103-8		1	305B	1
315A2103-9		1	300E	1
315A2104-10		1	315B	1
315A2104-11		1	310C	1
315A2104-12		1	315C	1
315A2104-13		1	310D	1
315A2104-14		1	315D	1
315A2104-15		1	310E	1
		1	310F	1
315A2104-16		1	315E	1
		1	315F	1
315A2104-17		1	310H	1
		1	310J	1
315A2104-18		1	315J	1
		1	315K	1
315A2104-19		1	310G	1
315A2104-20		1	315G	1
315A2104-21		1	310K	1
315A2104-22		1	315L	1
315A2104-23		1	310L	1
315A2104-23REVA		1	310N	1
315A2104-23REVB		1	310P	1
315A2104-23REVC		1	310Q	1
315A2104-23REVD		1	310U	1
315A2104-23REVE		1	310W	1
		1	310X	1
315A2104-24		1	315H	1
315A2104-24REVA		1	315N	1
315A2104-24REVB		1	315P	1
315A2104-24REVC		1	315Q	1
315A2104-24REVD		1	315U	1
315A2104-24REVE		1	315W	1
315A2104-25		1	310M	1

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1004

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NUMBER	FIGURE	ITEM	UNITS PER ASSEMBLY
		1	310W	1
315A2104-25REVA		1	310R	1
315A2104-25REVB		1	310S	1
315A2104-25REVC		1	310T	1
315A2104-25REVD		1	310V	1
315A2104-25REVE		1	310Y	1
315A2104-26		1	315M	1
315A2104-26REVA		1	315R	1
315A2104-26REVB		1	315S	1
315A2104-26REVC		1	315T	1
315A2104-26REVD		1	315V	1
315A2104-26REVE		1	315X	1
315A2104-5		1	310	1
315A2104-6		1	315	1
315A2104-7		1	310A	1
315A2104-8		1	315A	1
315A2104-9		1	310B	1
315A2119-10		1	295C	1
		1	295D	1
315A2119-11		1	290F	1
		1	290G	1
315A2119-12		1	295F	1
		1	295G	1
315A2119-13		1	290E	1
		1	290J	1
315A2119-13REVA		1	290L	1
315A2119-14		1	295E	1
		1	295J	1
315A2119-14REVA		1	295L	1
315A2119-15		1	290H	1
		1	290K	1
315A2119-15REVA		1	290M	1
315A2119-16		1	295H	1
		1	295K	1
315A2119-16REVA		1	295M	1

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1005

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NUMBER	FIGURE	ITEM	UNITS PER ASSEMBLY
315A2119-3		1	290	1
315A2119-4		1	295	1
315A2119-5		1	290A	1
315A2119-6		1	295A	1
315A2119-7		1	290B	1
315A2119-8		1	295B	1
315A2119-9		1	290C	1
		1	290D	1
315A2124-1		1	260	1
315A2124-2		1	265	1
315A2124-3		1	260A	1
315A2124-3REVA		1	260C	1
315A2124-4		1	265A	1
315A2124-4REVA		1	265C	1
315A2124-5		1	260B	1
315A2124-5REVA		1	260D	1
315A2124-6		1	265B	1
315A2124-6REVA		1	265D	1
315A2130-1		1	140	1
		1	140A	1
315A2130-10		1	145D	1
315A2130-11		1	140E	1
315A2130-12		1	145E	1
315A2130-13		1	140F	1
315A2130-14		1	145F	1
315A2130-15		1	140G	1
		1	140H	1
315A2130-16		1	145G	1
315A2130-17		1	140L	1
		1	140M	1
315A2130-18		1	145H	1
315A2130-2		1	145	1
		1	145A	1
315A2130-20		1	145J	1
		1	145K	1

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1006

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NUMBER	FIGURE	ITEM	UNITS PER ASSEMBLY
315A2130-22		1	145N	1
		1	145P	1
315A2130-23		1	140J	1
315A2130-24		1	145L	1
315A2130-25		1	140N	1
315A2130-26		1	145Q	1
315A2130-27		1	140K	1
		1	140Q	1
315A2130-27REVA		1	140S	1
315A2130-27REVB		1	140T	1
315A2130-28		1	145M	1
		1	145S	1
315A2130-28REVA		1	145U	1
315A2130-28REVB		1	145V	1
315A2130-29		1	140P	1
		1	140R	1
315A2130-29REVA		1	140W	1
315A2130-29REVB		1	140X	1
315A2130-3		1	140B	1
315A2130-30		1	145R	1
		1	145T	1
315A2130-30REVA		1	145Y	1
315A2130-30REVB		1	145Z	1
315A2130-31REVA		1	140U	1
315A2130-31REVB		1	140V	1
315A2130-31REVC		1	141	1
315A2130-32REVA		1	145W	1
315A2130-32REVB		1	145X	1
315A2130-32REVC		1	146B	1
315A2130-33REVA		1	140Y	1
315A2130-33REVB		1	140Z	1
315A2130-33REVC		1	141C	1
315A2130-34REVA		1	146	1
315A2130-34REVB		1	146A	1
315A2130-34REVC		1	146E	1

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1007

Jul 01/2008





## COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NUMBER	FIGURE	ITEM	UNITS PER ASSEMBLY
315A2130-35REVA		1	141A	1
315A2130-36REVA		1	146C	1
315A2130-37REVA		1	141D	1
315A2130-38REVA		1	146F	1
315A2130-39REVB		1	141B	1
315A2130-4		1	145B	1
315A2130-40REVB		1	146D	1
315A2130-41REVB		1	141E	1
315A2130-42REVB		1	146G	1
315A2130-43REVA		1	141F	1
315A2130-43REVB		1	141G	1
315A2130-43REVC		1	141H	1
315A2130-43REVD		1	141J	1
315A2130-44REVA		1	146H	1
315A2130-44REVB		1	146J	1
315A2130-44REVC		1	146K	1
315A2130-44REVD		1	146L	1
315A2130-45REVA		1	141K	1
315A2130-45REVB		1	141L	1
315A2130-45REVC		1	141M	1
315A2130-45REVD		1	141N	1
315A2130-46REVA		1	146M	1
315A2130-46REVB		1	146N	1
315A2130-46REVC		1	146P	1
315A2130-46REVD		1	146P	1
315A2130-7		1	140C	1
315A2130-8		1	145C	1
315A2130-9		1	140D	1
315A2150-1		1	240	1
315A2150-10		1	245D	1
315A2150-11		1	240F	1
315A2150-12		1	245F	1
315A2150-13		1	240E	1
		1	240H	1
315A2150-13REVA		1	240K	1

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1008

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NUMBER	FIGURE	ITEM	UNITS PER ASSEMBLY
		1	240M	1
315A2150-14		1	245E	1
		1	245H	1
315A2150-14REVA		1	245K	1
		1	245M	1
315A2150-15		1	240G	1
		1	240J	1
315A2150-15REVA		1	240P	1
		1	240R	1
315A2150-16		1	245G	1
		1	245J	1
315A2150-16REVA		1	245P	1
		1	245R	1
315A2150-17REVA		1	240L	1
		1	240N	1
315A2150-17REVE		1	240T	1
315A2150-18REVA		1	245L	1
		1	245N	1
315A2150-18REVE		1	245T	1
315A2150-19REVA		1	240Q	1
		1	240S	1
315A2150-19REVE		1	240U	1
315A2150-2		1	245	1
315A2150-20REVA		1	245Q	1
		1	245S	1
315A2150-20REVE		1	245U	1
315A2150-21REVA		1	240V	1
315A2150-21REVB		1	240W	1
315A2150-22REVA		1	245V	1
315A2150-22REVB		1	245W	1
315A2150-23REVA		1	240X	1
315A2150-23REVB		1	240Y	1
315A2150-24REVA		1	245X	1
315A2150-24REVB		1	245Y	1
315A2150-3		1	240A	1

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1009

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NUMBER	FIGURE	ITEM	UNITS PER ASSEMBLY
315A2150-4		1	245A	1
315A2150-5		1	240B	1
315A2150-6		1	245B	1
315A2150-7		1	240C	1
315A2150-8		1	245C	1
315A2150-9		1	240D	1
315A2160-1		1	250	1
315A2160-10		1	255D	1
		1	255H	1
315A2160-10REVA		1	255K	1
315A2160-11		1	250G	1
		1	250J	1
315A2160-11REVA		1	250L	1
315A2160-12		1	255G	1
		1	255J	1
315A2160-12REVA		1	255L	1
315A2160-2		1	255	1
315A2160-3		1	250A	1
315A2160-4		1	255A	1
315A2160-5		1	250B	1
		1	250C	1
315A2160-6		1	255B	1
		1	255C	1
315A2160-7		1	250E	1
		1	250F	1
315A2160-8		1	255E	1
		1	255F	1
315A2160-9		1	250D	1
		1	250H	1
315A2160-9REVA		1	250K	1
315A2170-1		1	270	1
315A2170-2		1	275	1
315A2170-3		1	270A	1
315A2170-3REVA		1	270C	1
		1	270E	1

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1010

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NUMBER	FIGURE	ITEM	UNITS PER ASSEMBLY
315A2170-3REVB		1	270F	1
315A2170-3REVC		1	270G	1
315A2170-3REVD		1	270L	1
315A2170-4		1	275A	1
315A2170-4REVA		1	275C	1
		1	275E	1
315A2170-4REVB		1	275F	1
315A2170-4REVC		1	275G	1
315A2170-4REVD		1	275L	1
315A2170-5		1	270B	1
315A2170-5REVA		1	270D	1
		1	270H	1
315A2170-5REVB		1	270J	1
315A2170-5REVC		1	270K	1
315A2170-5REVD		1	270M	1
315A2170-5REVE		1	270N	1
315A2170-6		1	275B	1
315A2170-6REVA		1	275D	1
		1	275H	1
315A2170-6REVB		1	275J	1
315A2170-6REVC		1	275K	1
315A2170-6REVD		1	275M	1
315A2171-1		1	280	1
315A2171-10		1	285D	1
315A2171-11		1	280G	1
315A2171-12		1	285E	1
315A2171-13		1	280H	1
		1	280J	1
315A2171-14		1	285F	1
		1	285G	1
315A2171-15		1	280M	1
		1	280N	1
315A2171-16		1	285K	1
		1	285L	1
315A2171-17		1	280K	1

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1011

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NUMBER	FIGURE	ITEM	UNITS PER ASSEMBLY
315A2171-18		1	285H	1
315A2171-19		1	280P	1
315A2171-2		1	285	1
315A2171-20		1	285M	1
315A2171-21		1	280L	1
315A2171-22		1	285J	1
315A2171-23		1	280Q	1
315A2171-24		1	285N	1
315A2171-25		1	280R	1
315A2171-25REVA		1	280V	1
315A2171-26		1	285P	1
315A2171-26REVA		1	285T	1
315A2171-27		1	280S	1
315A2171-27REVA		1	280Y	1
315A2171-28		1	285Q	1
315A2171-28REVA		1	285W	1
315A2171-29		1	280T	1
315A2171-29REVA		1	280W	1
		1	280X	1
315A2171-29REVB		1	281A	1
315A2171-3		1	280A	1
315A2171-30		1	285R	1
315A2171-30REVA		1	285U	1
		1	285V	1
315A2171-30REVB		1	285Z	1
315A2171-31		1	280U	1
315A2171-31REVA		1	280Z	1
		1	281	1
315A2171-31REVB		1	281B	1
315A2171-32		1	285S	1
315A2171-32REVA		1	285X	1
		1	285Y	1
315A2171-32REVB		1	286	1
315A2171-4		1	285A	1
315A2171-5		1	280B	1

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1012

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NUMBER	FIGURE	ITEM	UNITS PER ASSEMBLY
315A2171-6		1	285B	1
315A2171-7		1	280C	1
		1	280D	1
315A2171-8		1	285C	1
315A2171-9		1	280E	1
		1	280F	1
315A2178-1		1	320	1
		1	320B	1
315A2178-11		1	320F	1
315A2178-12		1	325D	1
315A2178-13		1	320G	1
315A2178-14		1	325E	1
315A2178-15		1	320H	1
315A2178-16		1	325F	1
315A2178-17		1	320L	1
315A2178-18		1	325J	1
315A2178-19		1	320J	1
315A2178-2		1	325	1
315A2178-20		1	325G	1
315A2178-21		1	320M	1
315A2178-22		1	325K	1
315A2178-23		1	320K	1
315A2178-24		1	325H	1
315A2178-25		1	320N	1
315A2178-26		1	325L	1
315A2178-27		1	320P	1
315A2178-27REVA		1	320T	1
315A2178-28		1	325M	1
315A2178-28REVA		1	325R	1
315A2178-29		1	320R	1
315A2178-29REVA		1	320W	1
315A2178-3		1	320A	1
		1	320C	1
315A2178-30		1	325P	1
315A2178-30REVA		1	325U	1

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1013

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NUMBER	FIGURE	ITEM	UNITS PER ASSEMBLY
315A2178-31		1	320Q	1
315A2178-31REVA		1	320U	1
315A2178-32		1	325N	1
315A2178-32REVA		1	325S	1
315A2178-33		1	320S	1
		1	321E	1
315A2178-33REVA		1	320X	1
315A2178-34		1	325Q	1
315A2178-34REVA		1	325V	1
315A2178-35REVA		1	320V	1
		1	320Z	1
315A2178-35REVB		1	321	1
315A2178-35REVC		1	321C	1
315A2178-36REVA		1	325T	1
		1	325X	1
315A2178-36REVB		1	325Y	1
315A2178-36REVC		1	326A	1
315A2178-37REVA		1	320Y	1
		1	321A	1
315A2178-37REVB		1	321B	1
315A2178-37REVC		1	321D	1
315A2178-38REVA		1	325W	1
		1	325Z	1
315A2178-38REVB		1	326	1
315A2178-38REVC		1	326B	1
315A2178-39REVA		1	321F	1
315A2178-39REVB		1	321G	1
315A2178-39REVC		1	321H	1
315A2178-4		1	325A	1
315A2178-40REVA		1	326C	1
315A2178-40REVB		1	326D	1
315A2178-40REVC		1	326E	1
315A2178-41REVA		1	321J	1
315A2178-41REVB		1	321K	1
315A2178-41REVC		1	321L	1

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1014

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NUMBER	FIGURE	ITEM	UNITS PER ASSEMBLY
315A2178-42REVA		1	326F	1
315A2178-42REVB		1	326G	1
315A2178-42REVC		1	326H	1
315A2178-5		1	320D	1
315A2178-6		1	325B	1
315A2178-7		1	320E	1
315A2178-8		1	325C	1
315A2180-1		1	110	1
315A2180-10REVA		1	115H	1
		1	115K	1
315A2180-2		1	115	1
315A2180-3		1	110A	1
315A2180-3REVA		1	110C	1
		1	110E	1
315A2180-4		1	115A	1
315A2180-4REVA		1	115C	1
		1	115E	1
315A2180-5		1	110B	1
315A2180-5REVA		1	110G	1
		1	110J	1
315A2180-6		1	115B	1
315A2180-6REVA		1	115G	1
		1	115J	1
315A2180-7REVA		1	110D	1
		1	110F	1
315A2180-8REVA		1	115D	1
		1	115F	1
315A2180-9REVA		1	110H	1
		1	110K	1
315A2202-1		1	210	1
		1	210A	1
315A2202-10		1	215F	1
315A2202-11		1	210G	1
315A2202-11REVA		1	210J	1
315A2202-11REVB		1	210K	1

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1015

Jul 01/2008





## COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NUMBER	FIGURE	ITEM	UNITS PER ASSEMBLY
315A2202-12		1	215G	1
315A2202-12REVA		1	215J	1
315A2202-12REVB		1	215K	1
315A2202-12REVC		1	215N	1
315A2202-13		1	210H	1
315A2202-13REVA		1	210L	1
315A2202-13REVB		1	210M	1
315A2202-14		1	215H	1
315A2202-14REVA		1	215L	1
315A2202-14REVB		1	215M	1
315A2202-14REVC		1	215P	1
315A2202-2		1	215	1
		1	215A	1
315A2202-3		1	210B	1
		1	210C	1
315A2202-4		1	215B	1
		1	215C	1
315A2202-5		1	210D	1
315A2202-6		1	215D	1
315A2202-7		1	210E	1
315A2202-8		1	215E	1
315A2202-9		1	210F	1
315A2210-1		1	130	1
315A2210-1REVA		1	130B	1
315A2210-1REVB		1	130C	1
315A2210-1REVC		1	130F	1
315A2210-2		1	135	1
315A2210-2REVA		1	135B	1
315A2210-2REVB		1	135C	1
315A2210-2REVC		1	135F	1
315A2210-3		1	130A	1
315A2210-3REVA		1	130D	1
315A2210-3REVB		1	130E	1
315A2210-3REVC		1	130H	1
315A2210-4		1	135A	1

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1016

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NUMBER	FIGURE	ITEM	UNITS PER ASSEMBLY
315A2210-4REVA		1	135D	1
315A2210-4REVB		1	135E	1
315A2210-4REVC		1	135H	1
315A2210-5REVA		1	130L	1
315A2210-5REVB		1	130G	1
315A2210-5REVC		1	130M	1
315A2210-6REVA		1	135K	1
315A2210-6REVB		1	135G	1
315A2210-6REVC		1	135L	1
315A2210-7REVA		1	130N	1
315A2210-7REVB		1	130J	1
315A2210-7REVC		1	130P	1
315A2210-8REVA		1	135M	1
315A2210-8REVB		1	135J	1
315A2210-8REVC		1	135N	1
315A2231-1		1	230	1
315A2231-10		1	235F	1
315A2231-11		1	230G	1
315A2231-11REVA		1	230J	1
		1	230L	1
315A2231-11REVB		1	230M	1
315A2231-12		1	235G	1
315A2231-12REVA		1	235J	1
		1	235L	1
315A2231-12REVB		1	235M	1
315A2231-13		1	230H	1
315A2231-13REVA		1	230K	1
		1	230N	1
315A2231-13REVB		1	230P	1
315A2231-14		1	235H	1
315A2231-14REVA		1	235K	1
		1	235N	1
315A2231-14REVB		1	235P	1
315A2231-2		1	235	1
315A2231-3		1	230A	1

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1017

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NUMBER	FIGURE	ITEM	UNITS PER ASSEMBLY
		1	230B	1
315A2231-4		1	235A	1
		1	235B	1
315A2231-5		1	230C	1
		1	230D	1
315A2231-6		1	235C	1
		1	235D	1
315A2231-7		1	230E	1
315A2231-8		1	235E	1
315A2231-9		1	230F	1
315A2232-10		1	225E	1
		1	225F	1
315A2232-11		1	220H	1
		1	220J	1
315A2232-12		1	225H	1
		1	225J	1
315A2232-13		1	220L	1
315A2232-14		1	225L	1
315A2232-15		1	220G	1
		1	220M	1
315A2232-15REVA		1	220P	1
		1	220R	1
315A2232-15REVB		1	220S	1
315A2232-16		1	225G	1
		1	225M	1
315A2232-16REVA		1	225P	1
		1	225R	1
315A2232-16REVB		1	225S	1
315A2232-17		1	220K	1
		1	220N	1
315A2232-17REVA		1	220Q	1
		1	220T	1
315A2232-17REVB		1	220U	1
315A2232-18		1	225K	1
		1	225N	1

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1018

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NUMBER	FIGURE	ITEM	UNITS PER ASSEMBLY
315A2232-18REVA		1	225Q	1
		1	225T	1
315A2232-18REVB		1	225U	1
315A2232-3		1	220	1
315A2232-4		1	225	1
315A2232-5		1	220A	1
		1	220B	1
315A2232-6		1	225A	1
		1	225B	1
315A2232-7		1	220C	1
		1	220D	1
315A2232-8		1	225C	1
		1	225D	1
315A2232-9		1	220E	1
		1	220F	1
315A2246-1		1	150	1
315A2246-2		1	155	1
315A2246-3		1	150A	1
315A2246-3REVA		1	150C	1
		1	150E	1
315A2246-3REVB		1	150F	1
315A2246-3REVC		1	150J	1
315A2246-4		1	155A	1
315A2246-4REVA		1	155C	1
		1	155E	1
315A2246-4REVB		1	155F	1
315A2246-4REVC		1	155J	1
315A2246-5		1	150B	1
315A2246-5REVA		1	150D	1
		1	150G	1
315A2246-5REVB		1	150H	1
315A2246-5REVC		1	150L	1
315A2246-6		1	155B	1
315A2246-6REVA		1	155D	1
		1	155G	1

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1019

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NUMBER	FIGURE	ITEM	UNITS PER ASSEMBLY
315A2246-6REVB		1	155H	1
315A2246-6REVC		1	155K	1
315A2295-103		1	1X	RF
315A2295-104		1	5W	RF
315A2295-105		1	10W	RF
315A2295-106		1	15W	RF
315A2295-107		1	1Y	RF
315A2295-108		1	5X	RF
315A2295-109		1	10X	RF
315A2295-11		1	1B	RF
315A2295-110		1	15X	RF
315A2295-111		1	1Z	RF
315A2295-112		1	5Y	RF
315A2295-113		1	10Y	RF
315A2295-114		1	15Y	RF
315A2295-115		1	2	RF
315A2295-116		1	5Z	RF
315A2295-117		1	10Z	RF
315A2295-118		1	15Z	RF
315A2295-119		1	2A	RF
315A2295-12		1	5A	RF
315A2295-120		1	6	RF
315A2295-121		1	11	RF
315A2295-122		1	16	RF
315A2295-123		1	2B	RF
315A2295-124		1	6A	RF
315A2295-125		1	11A	RF
315A2295-126		1	16A	RF
315A2295-127		1	2C	RF
315A2295-128		1	6B	RF
315A2295-129		1	11B	RF
315A2295-13		1	10A	RF
315A2295-130		1	16B	RF
315A2295-131		1	2D	RF
315A2295-132		1	6C	RF

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1020

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NUMBER	FIGURE	ITEM	UNITS PER ASSEMBLY
315A2295-133		1	11C	RF
315A2295-134		1	16C	RF
315A2295-135		1	2E	RF
315A2295-136		1	6D	RF
315A2295-137		1	11D	RF
315A2295-138		1	16D	RF
315A2295-139		1	2F	RF
315A2295-14		1	15A	RF
315A2295-140		1	6E	RF
315A2295-141		1	11E	RF
315A2295-142		1	16E	RF
315A2295-143		1	2G	RF
315A2295-144		1	6F	RF
315A2295-145		1	11F	RF
315A2295-146		1	16F	RF
315A2295-147		1	2H	RF
315A2295-148		1	6G	RF
315A2295-149		1	11G	RF
315A2295-15		1	1C	RF
315A2295-150		1	16G	RF
315A2295-151		1	2J	RF
315A2295-152		1	6H	RF
315A2295-153		1	11H	RF
315A2295-154		1	16H	RF
315A2295-155		1	2K	RF
315A2295-156		1	6J	RF
315A2295-157		1	11J	RF
315A2295-158		1	16J	RF
315A2295-159		1	2L	RF
315A2295-16		1	5B	RF
315A2295-160		1	6K	RF
315A2295-161		1	11K	RF
315A2295-162		1	16K	RF
315A2295-163		1	2M	RF
315A2295-164		1	6L	RF

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1021

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NUMBER	FIGURE	ITEM	UNITS PER ASSEMBLY
315A2295-165		1	11L	RF
315A2295-166		1	16L	RF
315A2295-167		1	2N	RF
315A2295-168		1	6M	RF
315A2295-169		1	11M	RF
315A2295-17		1	10B	RF
315A2295-170		1	16M	RF
315A2295-171		1	2P	RF
315A2295-172		1	6N	RF
315A2295-173		1	11N	RF
315A2295-174		1	16N	RF
315A2295-179		1	2Q	RF
315A2295-18		1	15B	RF
315A2295-180		1	6P	RF
315A2295-181		1	11P	RF
315A2295-182		1	16Q	RF
315A2295-183		1	2R	RF
315A2295-184		1	6Q	RF
315A2295-185		1	11Q	RF
315A2295-186		1	16R	RF
315A2295-187		1	2V	RF
315A2295-188		1	6R	RF
315A2295-189		1	11R	RF
315A2295-19		1	1D	RF
315A2295-190		1	16S	RF
315A2295-191		1	2T	RF
315A2295-192		1	6S	RF
315A2295-193		1	11S	RF
315A2295-194		1	16T	RF
315A2295-195		1	2U	RF
315A2295-196		1	6T	RF
315A2295-197		1	11T	RF
315A2295-198		1	16U	RF
315A2295-199		1	2W	RF
315A2295-20		1	5C	RF

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1022

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NUMBER	FIGURE	ITEM	UNITS PER ASSEMBLY
315A2295-200		1	6U	RF
315A2295-201		1	11U	RF
315A2295-202		1	16V	RF
315A2295-203		1	2X	RF
315A2295-204		1	6V	RF
315A2295-205		1	11V	RF
315A2295-206		1	16W	RF
315A2295-207		1	2Y	RF
315A2295-208		1	6W	RF
315A2295-209		1	11W	RF
315A2295-21		1	10C	RF
315A2295-210		1	16X	RF
315A2295-211		1	2Z	RF
315A2295-212		1	6X	RF
315A2295-213		1	11X	RF
315A2295-214		1	16Y	RF
315A2295-215		1	3	RF
315A2295-216		1	6Y	RF
315A2295-217		1	11Y	RF
315A2295-218		1	16Z	RF
315A2295-219		1	12F	RF
315A2295-22		1	15C	RF
315A2295-220		1	17G	RF
315A2295-221		1	12G	RF
315A2295-222		1	17H	RF
315A2295-223		1	12H	RF
315A2295-23		1	1E	RF
315A2295-24		1	5D	RF
315A2295-25		1	10D	RF
315A2295-26		1	15D	RF
315A2295-27		1	1F	RF
315A2295-28		1	5E	RF
315A2295-29		1	10E	RF
315A2295-3		1	1A	RF
315A2295-30		1	15E	RF

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1023

Jul 01/2008





## COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NUMBER	FIGURE	ITEM	UNITS PER ASSEMBLY
315A2295-31		1	1G	RF
315A2295-32		1	5F	RF
315A2295-33		1	10F	RF
315A2295-34		1	15F	RF
315A2295-35		1	1H	RF
315A2295-36		1	5G	RF
315A2295-37		1	10G	RF
315A2295-38		1	15G	RF
315A2295-39		1	1J	RF
315A2295-4		1	5	RF
315A2295-40		1	5H	RF
315A2295-41		1	10H	RF
315A2295-42		1	15H	RF
315A2295-43		1	1K	RF
315A2295-44		1	5J	RF
315A2295-45		1	10J	RF
315A2295-46		1	15J	RF
315A2295-47		1	1L	RF
315A2295-48		1	5K	RF
315A2295-49		1	10K	RF
315A2295-5		1	10	RF
315A2295-50		1	15K	RF
315A2295-51		1	1M	RF
315A2295-52		1	5L	RF
315A2295-53		1	10L	RF
315A2295-54		1	15L	RF
315A2295-6		1	15	RF
315A2295-63		1	1N	RF
315A2295-64		1	5M	RF
315A2295-65		1	10M	RF
315A2295-66		1	15M	RF
315A2295-67		1	1P	RF
315A2295-671		1	3A	RF
315A2295-672		1	6Z	RF
315A2295-673		1	11Z	RF

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1024

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NUMBER	FIGURE	ITEM	UNITS PER ASSEMBLY
315A2295-674		1	17	RF
315A2295-679		1	3B	RF
315A2295-68		1	5N	RF
315A2295-680		1	7	RF
315A2295-681		1	12	RF
315A2295-682		1	17A	RF
315A2295-683		1	3C	RF
315A2295-684		1	7A	RF
315A2295-685		1	12A	RF
315A2295-686		1	17B	RF
315A2295-687		1	3D	RF
315A2295-688		1	7B	RF
315A2295-689		1	12B	RF
315A2295-69		1	10N	RF
315A2295-690		1	17C	RF
315A2295-691		1	3E	RF
315A2295-692		1	7C	RF
315A2295-693		1	12C	RF
315A2295-694		1	17D	RF
315A2295-695		1	3F	RF
315A2295-696		1	7D	RF
315A2295-697		1	12D	RF
315A2295-698		1	17E	RF
315A2295-699		1	3G	RF
315A2295-70		1	15N	RF
315A2295-700		1	7E	RF
315A2295-701		1	12E	RF
315A2295-702		1	17F	RF
315A2295-71		1	1Q	RF
315A2295-72		1	5P	RF
315A2295-73		1	10P	RF
315A2295-74		1	15P	RF
315A2295-75		1	1R	RF
315A2295-76		1	5Q	RF
315A2295-77		1	10Q	RF

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1025

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NUMBER	FIGURE	ITEM	UNITS PER ASSEMBLY
315A2295-78		1	15Q	RF
315A2295-79		1	1S	RF
315A2295-80		1	5R	RF
315A2295-81		1	10R	RF
315A2295-82		1	15R	RF
315A2295-83		1	1T	RF
315A2295-84		1	5S	RF
315A2295-85		1	10S	RF
315A2295-86		1	15S	RF
315A2295-87		1	1U	RF
315A2295-88		1	5T	RF
315A2295-89		1	10T	RF
315A2295-90		1	15T	RF
315A2295-91		1	1V	RF
315A2295-92		1	5U	RF
315A2295-93		1	10U	RF
315A2295-94		1	15U	RF
315A2295-95		1	1W	RF
315A2295-96		1	5V	RF
315A2295-97		1	10V	RF
315A2295-98		1	15V	RF
315A2300-1		1	190	1
315A2300-10		1	195F	1
		1	195H	1
315A2300-10REVA		1	195L	1
315A2300-10REVB		1	195M	1
315A2300-10REVC		1	195Q	1
315A2300-10REVD		1	195R	1
315A2300-2		1	195	1
315A2300-3		1	190A	1
		1	190B	1
315A2300-4		1	195A	1
		1	195B	1
315A2300-5		1	190D	1
		1	190E	1

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1026

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NUMBER	FIGURE	ITEM	UNITS PER ASSEMBLY
315A2300-6		1	195D	1
		1	195E	1
315A2300-7		1	190C	1
		1	190G	1
315A2300-7REVA		1	190J	1
315A2300-7REVB		1	190K	1
315A2300-7REVC		1	190N	1
315A2300-7REVD		1	190P	1
315A2300-8		1	195C	1
		1	195G	1
315A2300-8REVA		1	195J	1
315A2300-8REVB		1	195K	1
315A2300-8REVC		1	195N	1
315A2300-8REVD		1	195P	1
315A2300-9		1	190F	1
		1	190H	1
315A2300-9REVA		1	190L	1
315A2300-9REVB		1	190M	1
315A2300-9REVC		1	190Q	1
315A2300-9REVD		1	190R	1
315A2303-1		1	160	1
315A2303-2		1	165	1
315A2303-3		1	160A	1
315A2303-3REVA		1	160C	1
		1	160E	1
315A2303-3REVB		1	160F	1
315A2303-4		1	165A	1
315A2303-4REVA		1	165C	1
		1	165E	1
315A2303-4REVB		1	165F	1
315A2303-5		1	160B	1
315A2303-5REVA		1	160D	1
		1	160G	1
315A2303-5REVB		1	160H	1
315A2303-6		1	165B	1

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1027

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NUMBER	FIGURE	ITEM	UNITS PER ASSEMBLY
315A2303-6REVA		1	165D	1
		1	165G	1
315A2303-6REVB		1	165H	1
315A2330-3		1	180	1
315A2330-4		1	185	1
315A2330-5		1	180A	1
315A2330-5REVA		1	180C	1
315A2330-6		1	185A	1
315A2330-6REVA		1	185C	1
315A2330-7		1	180B	1
315A2330-7REVA		1	180D	1
315A2330-8		1	185B	1
315A2330-8REVA		1	185D	1
315A2401-1		1	200	1
		1	200A	1
315A2401-10		1	205D	1
315A2401-11		1	200G	1
315A2401-11REVA		1	200J	1
315A2401-11REVB		1	200K	1
315A2401-11REVC		1	200N	1
315A2401-11REVD		1	200P	1
315A2401-11REVE		1	200Q	1
315A2401-11REVF		1	200U	1
315A2401-11REVG		1	200V	1
315A2401-11REVH		1	200W	1
315A2401-12		1	205E	1
315A2401-12REVA		1	205G	1
315A2401-12REVB		1	205H	1
315A2401-12REVC		1	205L	1
315A2401-12REVD		1	205M	1
315A2401-12REVE		1	205N	1
315A2401-12REVF		1	205S	1
315A2401-12REVG		1	205T	1
315A2401-12REVH		1	205U	1
315A2401-13		1	200H	1

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1028

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NUMBER	FIGURE	ITEM	UNITS PER ASSEMBLY
315A2401-13REVA		1	200L	1
315A2401-13REVB		1	200M	1
315A2401-13REVC		1	200R	1
315A2401-13REVD		1	200S	1
315A2401-13REVE		1	200T	1
315A2401-13REVF		1	200X	1
315A2401-13REVG		1	200Y	1
315A2401-13REVH		1	200Z	1
315A2401-14		1	205F	1
315A2401-14REVA		1	205J	1
315A2401-14REVB		1	205K	1
315A2401-14REVC		1	205P	1
315A2401-14REVD		1	205Q	1
315A2401-14REVE		1	205R	1
315A2401-14REVF		1	205V	1
315A2401-14REVG		1	205W	1
315A2401-14REVH		1	205X	1
315A2401-2		1	205	1
315A2401-3		1	200B	1
		1	200C	1
315A2401-4		1	205A	1
315A2401-5		1	200D	1
315A2401-6		1	205B	1
315A2401-7		1	200E	1
315A2401-8		1	205C	1
315A2401-9		1	200F	1
315A2430-10		1	175C	1
		1	175D	1
315A2430-11		1	170F	1
		1	170G	1
315A2430-12		1	175F	1
		1	175G	1
315A2430-13		1	170E	1
		1	170J	1
315A2430-13REVA		1	170L	1

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1029

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NUMBER	FIGURE	ITEM	UNITS PER ASSEMBLY
		1	170N	1
315A2430-13REVB		1	170P	1
315A2430-13REVC		1	170S	1
315A2430-14		1	175E	1
		1	175J	1
315A2430-14REVA		1	175L	1
		1	175N	1
315A2430-14REVB		1	175P	1
315A2430-15		1	170H	1
		1	170K	1
315A2430-15REVA		1	170M	1
		1	170Q	1
315A2430-15REVB		1	170R	1
315A2430-15REVC		1	170T	1
315A2430-16		1	175H	1
		1	175K	1
315A2430-16REVA		1	175M	1
		1	175Q	1
315A2430-16REVB		1	175R	1
315A2430-3		1	170	1
315A2430-4		1	175	1
315A2430-5		1	170A	1
315A2430-6		1	175A	1
315A2430-7		1	170B	1
315A2430-8		1	175B	1
315A2430-9		1	170C	1
		1	170D	1
315A2500-10		1	85B	1
315A2500-11		1	80C	1
315A2500-12		1	85C	1
315A2500-13		1	80D	1
		1	80E	1
315A2500-14		1	85D	1
		1	85E	1
315A2500-15		1	80J	1

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1030

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NUMBER	FIGURE	ITEM	UNITS PER ASSEMBLY
		1	80K	1
315A2500-16		1	85J	1
		1	85K	1
315A2500-17		1	80F	1
315A2500-18		1	85F	1
315A2500-19		1	80L	1
315A2500-20		1	85L	1
315A2500-21		1	80G	1
315A2500-22		1	85G	1
315A2500-23		1	80M	1
315A2500-24		1	85M	1
315A2500-25		1	80H	1
		1	80P	1
315A2500-25REVA		1	80R	1
315A2500-26		1	85H	1
		1	85N	1
		1	85P	1
315A2500-26REVA		1	85R	1
315A2500-27		1	80N	1
		1	80Q	1
315A2500-27REVA		1	80U	1
315A2500-28		1	85Q	1
315A2500-28REVA		1	85U	1
315A2500-29REVA		1	80S	1
315A2500-29REVB		1	80T	1
315A2500-3		1	80	1
315A2500-30REVA		1	85S	1
315A2500-30REVB		1	85T	1
315A2500-31REVA		1	80V	1
315A2500-31REVB		1	80W	1
315A2500-32REVA		1	85V	1
315A2500-32REVB		1	85W	1
315A2500-4		1	85	1
315A2500-5		1	80A	1
315A2500-6		1	85A	1

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1031

Jul 01/2008





## COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NUMBER	FIGURE	ITEM	UNITS PER ASSEMBLY
315A2500-9		1	80B	1
315A2501-10		1	125B	1
315A2501-11		1	120C	1
315A2501-12		1	125C	1
315A2501-13		1	120D	1
		1	120E	1
315A2501-14		1	125D	1
		1	125E	1
315A2501-15		1	120G	1
		1	120H	1
315A2501-16		1	125G	1
		1	125H	1
315A2501-17		1	120F	1
		1	120K	1
315A2501-17REVA		1	120M	1
315A2501-17REVB		1	120N	1
315A2501-17REVC		1	120R	1
315A2501-17REVD		1	120S	1
315A2501-17REVE		1	120T	1
315A2501-17REVF		1	120X	1
315A2501-17REVG		1	120Z	1
		1	121	1
315A2501-18		1	125F	1
		1	125K	1
315A2501-18REVA		1	125M	1
315A2501-18REVB		1	125N	1
315A2501-18REVC		1	125R	1
315A2501-18REVD		1	125S	1
315A2501-18REVE		1	125T	1
315A2501-18REVF		1	125X	1
315A2501-18REVG		1	125Z	1
315A2501-19		1	120J	1
		1	120L	1
315A2501-19REVA		1	120P	1
315A2501-19REVB		1	120Q	1

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1032

Mar 01/2009



## COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NUMBER	FIGURE	ITEM	UNITS PER ASSEMBLY
315A2501-19REVC		1	120U	1
315A2501-19REVD		1	120V	1
315A2501-19REVE		1	120W	1
315A2501-19REVF		1	120Y	1
315A2501-20		1	125J	1
		1	125L	1
315A2501-20REVA		1	125P	1
315A2501-20REVB		1	125Q	1
315A2501-20REVC		1	125U	1
315A2501-20REVD		1	125V	1
315A2501-20REVE		1	125W	1
315A2501-20REVF		1	125Y	1
315A2501-20REVG		1	126	1
315A2501-3		1	120	1
315A2501-4		1	125	1
315A2501-5		1	120A	1
315A2501-6		1	125A	1
315A2501-9		1	120B	1
315A2503-3		1	90	1
315A2503-4		1	95	1
315A2503-5		1	90A	1
315A2503-5REVA		1	90C	1
		1	90E	1
315A2503-5REVB		1	90F	1
315A2503-6		1	95A	1
315A2503-6REVA		1	95C	1
		1	95E	1
315A2503-6REVB		1	95F	1
315A2503-7		1	90B	1
315A2503-7REVA		1	90D	1
		1	90G	1
315A2503-7REVB		1	90H	1
315A2503-8		1	95B	1
315A2503-8REVA		1	95D	1
		1	95G	1

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1033

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NUMBER	FIGURE	ITEM	UNITS PER ASSEMBLY
315A2503-8REVB		1	95H	1
315A2505-3		1	30	1
315A2505-4		1	35	1
315A2505-5		1	30A	1
315A2505-5REVA		1	30C	1
315A2505-6		1	35A	1
315A2505-6REVA		1	35C	1
315A2505-7		1	30B	1
315A2505-7REVA		1	30D	1
315A2505-8		1	35B	1
315A2505-8REVA		1	35D	1
315A2509-1		1	100	1
315A2509-10		1	105D	1
315A2509-11		1	100H	1
315A2509-12		1	105H	1
315A2509-13		1	100E	1
		1	100K	1
315A2509-13REVA		1	100M	1
315A2509-13REVB		1	100N	1
315A2509-13REVC		1	100R	1
315A2509-13REVD		1	100S	1
315A2509-13REVE		1	100V	1
315A2509-14		1	105E	1
		1	105K	1
315A2509-14REVA		1	105M	1
315A2509-14REVB		1	105N	1
315A2509-14REVC		1	105R	1
315A2509-14REVD		1	105S	1
315A2509-14REVE		1	105V	1
315A2509-15		1	100J	1
		1	100L	1
315A2509-15REVA		1	100P	1
315A2509-15REVB		1	100Q	1
315A2509-15REVC		1	100T	1
315A2509-15REVD		1	100U	1

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1034

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NUMBER	FIGURE	ITEM	UNITS PER ASSEMBLY
315A2509-15REVE		1	100W	1
315A2509-16		1	105J	1
		1	105L	1
315A2509-16REVA		1	105P	1
315A2509-16REVB		1	105Q	1
315A2509-16REVC		1	105T	1
315A2509-16REVD		1	105U	1
315A2509-16REVE		1	105W	1
315A2509-2		1	105	1
315A2509-3		1	100A	1
315A2509-4		1	105A	1
315A2509-5		1	100B	1
		1	100C	1
315A2509-6		1	105B	1
		1	105C	1
315A2509-7		1	100F	1
		1	100G	1
315A2509-8		1	105F	1
		1	105G	1
315A2509-9		1	100D	1
315A2565-1		1	60	1
315A2565-1REVA		1	60A	1
315A2565-2		1	75	1
315A2565-2REVA		1	75A	1
315A2565-3		1	70	1
315A2565-3REVA		1	70A	1
315A2565-4		1	65	1
315A2565-4REVA		1	65A	1
315A2600-10		1	45D	1
315A2600-11		1	40E	1
315A2600-11REVA		1	40G	1
		1	40J	1
315A2600-11REVB		1	40K	1
315A2600-11REVB1		1	40L	1
315A2600-11REVB3		1	40M	1

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1035

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NUMBER	FIGURE	ITEM	UNITS PER ASSEMBLY
315A2600-11REVC		1	40N	1
315A2600-11REVD		1	40P	1
315A2600-11REVE		1	40Q	1
315A2600-11REVF		1	40U	1
315A2600-12		1	45E	1
315A2600-12REVA		1	45G	1
		1	45J	1
315A2600-12REVB		1	45K	1
315A2600-12REVC		1	45L	1
315A2600-12REVE		1	45Q	1
315A2600-13		1	40F	1
315A2600-13REVA		1	40H	1
		1	40R	1
315A2600-13REVB		1	40S	1
315A2600-13REVC		1	40T	1
315A2600-13REVD		1	40V	1
315A2600-14		1	45F	1
315A2600-14REVA		1	45H	1
		1	45M	1
315A2600-14REVB		1	45N	1
315A2600-14REVC		1	45P	1
315A2600-14REVE		1	45R	1
315A2600-3		1	40	1
315A2600-4		1	45	1
315A2600-5		1	40A	1
		1	40B	1
315A2600-6		1	45A	1
		1	45B	1
315A2600-7		1	40C	1
315A2600-8		1	45C	1
315A2600-9		1	40D	1
315A2707-1		1	20	1
315A2707-15		1	20D	1
315A2707-16		1	25D	1
315A2707-17		1	20E	1

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1036

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NUMBER	FIGURE	ITEM	UNITS PER ASSEMBLY
315A2707-18		1	25E	1
315A2707-19		1	20F	1
315A2707-2		1	25	1
315A2707-20		1	25F	1
315A2707-21		1	20G	1
315A2707-22		1	25G	1
315A2707-23		1	20H	1
315A2707-23REVA		1	20K	1
315A2707-23REVB		1	20L	1
315A2707-24		1	25H	1
315A2707-24REVA		1	25K	1
315A2707-24REVB		1	25L	1
315A2707-25		1	20J	1
315A2707-25REVA		1	20P	1
315A2707-25REVB		1	20Q	1
315A2707-26		1	25J	1
315A2707-26REVA		1	25P	1
315A2707-26REVB		1	25Q	1
315A2707-27REVA		1	20M	1
		1	20N	1
315A2707-28REVA		1	25M	1
		1	25N	1
315A2707-29REVA		1	20R	1
		1	20S	1
315A2707-3		1	20A	1
		1	20C	1
315A2707-30REVA		1	25R	1
		1	25S	1
315A2707-4		1	25A	1
		1	25C	1
315A2707-5		1	20B	1
315A2707-6		1	25B	1
315A2711-10		1	55A	1
315A2711-13		1	50B	1
315A2711-13REVA		1	50D	1

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1037

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NUMBER	FIGURE	ITEM	UNITS PER ASSEMBLY
315A2711-14		1	55B	1
315A2711-14REVA		1	55D	1
315A2711-15		1	50C	1
315A2711-15REVA		1	50E	1
315A2711-16		1	55C	1
315A2711-16REVA		1	55E	1
315A2711-5		1	50	1
315A2711-6		1	55	1
315A2711-9		1	50A	1
315a2171-31		1	281C	1
MODREF100585		1	25Q	1
MODREF100586		1	20Q	1
MODREF100587		1	25L	1
MODREF100588		1	20L	1
MODREF101643		1	145Z	1
MODREF101644		1	140X	1
MODREF101645		1	145V	1
MODREF101646		1	140T	1
MODREF181954		1	320V	1
		1	320Z	1
MODREF181955		1	325T	1
		1	325X	1
MODREF181956		1	320Y	1
		1	321A	1
MODREF181957		1	325W	1
		1	325Z	1
MODREF184021		1	80S	1
MODREF184022		1	85S	1
MODREF184023		1	80V	1
MODREF184024		1	85V	1
MODREF186633		1	240L	1
		1	240N	1
MODREF186634		1	245L	1
		1	245N	1
MODREF186635		1	240Q	1

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1038

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NUMBER	FIGURE	ITEM	UNITS PER ASSEMBLY
		1	240S	1
MODREF186636		1	245Q	1
		1	245S	1
MODREF193276		1	115D	1
		1	115F	1
MODREF193277		1	110H	1
		1	110K	1
MODREF193278		1	115H	1
		1	115K	1
MODREF193279		1	110D	1
		1	110F	1
MODREF200411		1	100N	1
MODREF200412		1	105N	1
MODREF200413		1	100Q	1
MODREF200414		1	105Q	1
MODREF202151		1	120N	1
MODREF202152		1	125N	1
MODREF202153		1	120Q	1
MODREF202154		1	125Q	1
MODREF202736		1	300P	1
MODREF202737		1	305M	1
MODREF202738		1	300R	1
MODREF202739		1	305P	1
MODREF202740		1	310P	1
MODREF202741		1	315P	1
MODREF202742		1	310S	1
MODREF202743		1	315S	1
MODREF202744		1	140U	1
MODREF202745		1	145W	1
MODREF202746		1	140Y	1
MODREF202747		1	146	1
MODREF204518		1	80T	1
MODREF204519		1	85T	1
MODREF204520		1	80W	1
MODREF204521		1	85W	1

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1039

Jul 01/2008





## COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NUMBER	FIGURE	ITEM	UNITS PER ASSEMBLY
MODREF204855		1	140V	1
MODREF204856		1	145X	1
MODREF204857		1	140Z	1
MODREF204858		1	146A	1
MODREF207052		1	210K	1
MODREF207053		1	215K	1
MODREF207054		1	210M	1
MODREF207055		1	215M	1
MODREF208437		1	130C	1
MODREF208438		1	135C	1
MODREF208439		1	130E	1
MODREF208440		1	135E	1
MODREF209062		1	20M	1
		1	20N	1
MODREF209063		1	25M	1
		1	25N	1
MODREF209064		1	20R	1
		1	20S	1
MODREF209065		1	25R	1
		1	25S	1
MODREF213878		1	310Q	1
MODREF213879		1	315Q	1
MODREF213880		1	310T	1
MODREF213881		1	315T	1
MODREF215249		1	200K	1
MODREF215250		1	205H	1
MODREF215251		1	200M	1
MODREF215252		1	205K	1
MODREF217570		1	195M	1
MODREF217571		1	190K	1
MODREF217572		1	195K	1
MODREF217573		1	190M	1
MODREF222016		1	195Q	1
MODREF222017		1	190N	1
MODREF222018		1	195N	1

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1040

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NUMBER	FIGURE	ITEM	UNITS PER ASSEMBLY
MODREF222019		1	190Q	1
MODREF222123		1	200N	1
MODREF222124		1	205L	1
MODREF222125		1	200R	1
MODREF222126		1	205P	1
MODREF224331		1	100R	1
MODREF224334		1	105R	1
MODREF224344		1	100T	1
MODREF224345		1	105T	1
MODREF225832		1	120R	1
MODREF225833		1	125R	1
MODREF225834		1	120U	1
MODREF225835		1	125U	1
MODREF246227		1	40K	1
MODREF246228		1	45K	1
MODREF246229		1	40S	1
MODREF246230		1	45N	1
MODREF252029		1	270F	1
MODREF252030		1	275F	1
MODREF252031		1	270J	1
MODREF252032		1	275J	1
MODREF254450		1	200P	1
MODREF254451		1	205M	1
MODREF254452		1	200S	1
MODREF254453		1	205Q	1
MODREF257820		1	90F	1
MODREF257821		1	95F	1
MODREF257822		1	90H	1
MODREF257823		1	95H	1
MODREF258000		1	100S	1
MODREF258001		1	105S	1
MODREF258002		1	100U	1
MODREF258003		1	105U	1
MODREF260478		1	120S	1
MODREF260479		1	125S	1

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1041

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NUMBER	FIGURE	ITEM	UNITS PER ASSEMBLY
MODREF260480		1	120V	1
MODREF260481		1	125V	1
MODREF261773		1	321	1
MODREF261774		1	325Y	1
MODREF261775		1	321B	1
MODREF261776		1	326	1
MODREF264120		1	40N	1
MODREF264121		1	45L	1
MODREF264122		1	40T	1
MODREF264123		1	45P	1
MODREF265242		1	160F	1
MODREF265243		1	165F	1
MODREF265244		1	160H	1
MODREF265245		1	165H	1
MODREF270519		1	195R	1
MODREF270520		1	190P	1
MODREF270521		1	195P	1
MODREF270522		1	190R	1
MODREF270593		1	200Q	1
MODREF270594		1	205N	1
MODREF270595		1	200T	1
MODREF270596		1	205R	1
MODREF271751		1	40L	1
MODREF271752		1	40P	1
MODREF274147		1	120T	1
MODREF274148		1	125T	1
MODREF274149		1	120W	1
MODREF274150		1	125W	1
MODREF274504		1	230M	1
MODREF274505		1	235M	1
MODREF274506		1	230P	1
MODREF274507		1	235P	1
MODREF281052		1	270G	1
MODREF281053		1	275G	1
MODREF281054		1	270K	1

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1042

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NUMBER	FIGURE	ITEM	UNITS PER ASSEMBLY
MODREF281055		1	275K	1
MODREF281238		1	40M	1
MODREF281252		1	220S	1
MODREF281253		1	225S	1
MODREF281254		1	220U	1
MODREF281255		1	225U	1
MODREF281558		1	40Q	1
MODREF282161		1	310U	1
MODREF282162		1	315U	1
MODREF282163		1	310V	1
MODREF282164		1	315V	1
MODREF287514		1	200U	1
MODREF287515		1	205S	1
MODREF287516		1	200X	1
MODREF287517		1	205V	1
MODREF287751		1	141	1
MODREF287752		1	146B	1
MODREF287753		1	141C	1
MODREF287754		1	146E	1
MODREF288632		1	200V	1
MODREF288633		1	205T	1
MODREF288634		1	200Y	1
MODREF288635		1	205W	1
MODREF292696		1	200W	1
MODREF292697		1	205U	1
MODREF292698		1	200Z	1
MODREF292699		1	205X	1
MODREF296448		1	40U	1
MODREF296450		1	40V	1
MODREF296625		1	45Q	1
MODREF296626		1	45R	1
MODREF304375		1	130F	1
MODREF304376		1	135F	1
MODREF304377		1	130H	1
MODREF304378		1	135H	1

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1043

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NUMBER	FIGURE	ITEM	UNITS PER ASSEMBLY
MODREF304493		1	150F	1
MODREF304494		1	155F	1
MODREF304495		1	150H	1
MODREF304496		1	155H	1
MODREF307408		1	300S	1
MODREF307409		1	305Q	1
MODREF307410		1	300T	1
MODREF307411		1	305R	1
MODREF307412		1	281A	1
MODREF307413		1	285Z	1
MODREF307414		1	281B	1
MODREF307415		1	286	1
MODREF308769		1	170P	1
MODREF308770		1	175P	1
MODREF308771		1	170R	1
MODREF308772		1	175R	1
MODREF313140		1	120X	1
MODREF313141		1	125X	1
MODREF313142		1	120Y	1
MODREF313143		1	125Y	1
MODREF313359		1	141A	1
MODREF313360		1	146C	1
MODREF313361		1	141D	1
MODREF313362		1	146F	1
MODREF313579		1	130L	1
MODREF313580		1	135K	1
MODREF313581		1	130N	1
MODREF313582		1	135M	1
MODREF317575		1	215N	1
MODREF317576		1	215P	1
MODREF318434		1	130G	1
MODREF318435		1	135G	1
MODREF318436		1	130J	1
MODREF318437		1	135J	1
MODREF318786		1	141B	1

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1044

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NUMBER	FIGURE	ITEM	UNITS PER ASSEMBLY
MODREF318787		1	146D	1
MODREF318788		1	141E	1
MODREF318789		1	146G	1
MODREF321343		1	240T	1
MODREF321344		1	245T	1
MODREF321345		1	240U	1
MODREF321346		1	245U	1
MODREF325931		1	321C	1
MODREF325932		1	326A	1
MODREF325933		1	321D	1
MODREF325934		1	326B	1
MODREF330536		1	240V	1
MODREF330537		1	245V	1
MODREF330538		1	240X	1
MODREF330539		1	245X	1
MODREF330889		1	321J	1
MODREF330890		1	321F	1
MODREF330891		1	326C	1
MODREF330892		1	326F	1
MODREF331246		1	141F	1
MODREF331247		1	146H	1
MODREF331248		1	141K	1
MODREF331249		1	146M	1
MODREF331407		1	100V	1
MODREF331408		1	105V	1
MODREF331409		1	100W	1
MODREF331410		1	105W	1
MODREF333100		1	141G	1
MODREF333101		1	146J	1
MODREF333102		1	141L	1
MODREF333103		1	146N	1
MODREF333104		1	240W	1
MODREF333105		1	245W	1
MODREF333106		1	240Y	1
MODREF333107		1	245Y	1

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1045

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NUMBER	FIGURE	ITEM	UNITS PER ASSEMBLY
MODREF333108		1	321G	1
MODREF333109		1	326D	1
MODREF333110		1	321K	1
MODREF333111		1	326G	1
MODREF333308		1	310X	1
MODREF333309		1	315W	1
MODREF333310		1	310Y	1
MODREF333311		1	315X	1
MODREF337291		1	321H	1
MODREF337292		1	326E	1
MODREF337293		1	321L	1
MODREF337294		1	326H	1
MODREF337608		1	141M	1
MODREF337609		1	141H	1
MODREF337610		1	146P	1
MODREF337611		1	146K	1
MODREF352223		1	141J	1
MODREF352224		1	146L	1
MODREF352225		1	141N	1
MODREF352226		1	146P	1
MODREF353017		1	170S	1
MODREF353018		1	170T	1
MODREF353214		1	270L	1
MODREF353215		1	275L	1
MODREF353216		1	270M	1
MODREF353217		1	275M	1
MODREF353274		1	130M	1
MODREF353275		1	135L	1
MODREF353276		1	130P	1
MODREF353277		1	135N	1
MODREF357117		1	270N	1
MODREF371031		1	120Z	1
MODREF371032		1	125Z	1
MODREF371033		1	121	1
MODREF371034		1	126	1

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1046

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NUMBER	FIGURE	ITEM	UNITS PER ASSEMBLY
MODREF371494		1	150J	1
MODREF371495		1	155J	1
MODREF371496		1	150L	1
MODREF371497		1	155K	1
MODREF89116		1	300N	1
MODREF89117		1	305L	1
MODREF89118		1	300Q	1
MODREF89119		1	305N	1
MODREF89120		1	310N	1
MODREF89121		1	315N	1
MODREF89122		1	310R	1
MODREF89123		1	315R	1
MODREF89124		1	290L	1
MODREF89125		1	295L	1
MODREF89126		1	290M	1
MODREF89127		1	295M	1
MODREF89128		1	260C	1
MODREF89129		1	265C	1
MODREF89130		1	260D	1
MODREF89131		1	265D	1
MODREF89132		1	140S	1
MODREF89133		1	145U	1
MODREF89134		1	140W	1
MODREF89135		1	145Y	1
MODREF89136		1	240K	1
		1	240M	1
MODREF89137		1	245K	1
		1	245M	1
MODREF89138		1	240P	1
		1	240R	1
MODREF89139		1	245P	1
		1	245R	1
MODREF89140		1	255K	1
MODREF89141		1	250L	1
MODREF89142		1	255L	1

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1047

Jul 01/2008





## COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NUMBER	FIGURE	ITEM	UNITS PER ASSEMBLY
MODREF89143		1	250K	1
MODREF89144		1	270C	1
		1	270E	1
MODREF89145		1	275C	1
		1	275E	1
MODREF89146		1	270D	1
		1	270H	1
MODREF89147		1	275D	1
		1	275H	1
MODREF89148		1	280V	1
MODREF89149		1	285T	1
MODREF89150		1	280Y	1
MODREF89151		1	285W	1
MODREF89152		1	280W	1
		1	280X	1
MODREF89153		1	285U	1
		1	285V	1
MODREF89154		1	280Z	1
		1	281	1
MODREF89155		1	285X	1
		1	285Y	1
MODREF89156		1	320T	1
MODREF89157		1	325R	1
MODREF89158		1	320W	1
MODREF89159		1	325U	1
MODREF89160		1	320U	1
MODREF89161		1	325S	1
MODREF89162		1	320X	1
MODREF89163		1	325V	1
MODREF89164		1	110C	1
		1	110E	1
MODREF89165		1	115C	1
		1	115E	1
MODREF89166		1	110G	1
		1	110J	1

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1048

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NUMBER	FIGURE	ITEM	UNITS PER ASSEMBLY
MODREF89167		1	115G	1
		1	115J	1
MODREF89168		1	210J	1
MODREF89169		1	215J	1
MODREF89170		1	210L	1
MODREF89171		1	215L	1
MODREF89172		1	130B	1
MODREF89173		1	135B	1
MODREF89174		1	130D	1
MODREF89175		1	135D	1
MODREF89176		1	230J	1
		1	230L	1
MODREF89177		1	235J	1
		1	235L	1
MODREF89178		1	230K	1
		1	230N	1
MODREF89179		1	235K	1
		1	235N	1
MODREF89180		1	220P	1
		1	220R	1
MODREF89181		1	225P	1
		1	225R	1
MODREF89182		1	220Q	1
		1	220T	1
MODREF89183		1	225Q	1
		1	225T	1
MODREF89184		1	150C	1
		1	150E	1
MODREF89185		1	155C	1
		1	155E	1
MODREF89186		1	150D	1
		1	150G	1
MODREF89187		1	155D	1
		1	155G	1
MODREF89188		1	195L	1

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1049

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NUMBER	FIGURE	ITEM	UNITS PER ASSEMBLY
MODREF89189		1	190J	1
MODREF89190		1	195J	1
MODREF89191		1	190L	1
MODREF89192		1	160C	1
		1	160E	1
MODREF89193		1	165C	1
		1	165E	1
MODREF89194		1	160D	1
		1	160G	1
MODREF89195		1	165D	1
		1	165G	1
MODREF89196		1	180C	1
MODREF89197		1	185C	1
MODREF89198		1	180D	1
MODREF89199		1	185D	1
MODREF89200		1	200J	1
MODREF89201		1	205G	1
MODREF89202		1	200L	1
MODREF89203		1	205J	1
MODREF89204		1	170L	1
		1	170N	1
MODREF89205		1	175L	1
		1	175N	1
MODREF89206		1	170M	1
		1	170Q	1
MODREF89207		1	175M	1
		1	175Q	1
MODREF89208		1	80R	1
MODREF89209		1	85R	1
MODREF89210		1	80U	1
MODREF89211		1	85U	1
MODREF89212		1	120M	1
MODREF89213		1	125M	1
MODREF89214		1	120P	1
MODREF89215		1	125P	1

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1050

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NUMBER	FIGURE	ITEM	UNITS PER ASSEMBLY
MODREF89216		1	90C	1
		1	90E	1
MODREF89217		1	95C	1
		1	95E	1
MODREF89218		1	90D	1
		1	90G	1
MODREF89219		1	95D	1
		1	95G	1
MODREF89220		1	30C	1
MODREF89221		1	35C	1
MODREF89222		1	30D	1
MODREF89223		1	35D	1
MODREF89224		1	100M	1
MODREF89225		1	105M	1
MODREF89226		1	100P	1
MODREF89227		1	105P	1
MODREF89228		1	60A	1
MODREF89229		1	75A	1
MODREF89230		1	70A	1
MODREF89231		1	65A	1
MODREF89232		1	40G	1
		1	40J	1
MODREF89233		1	45G	1
		1	45J	1
MODREF89234		1	40H	1
		1	40R	1
MODREF89235		1	45H	1
		1	45M	1
MODREF89236		1	20K	1
MODREF89237		1	25K	1
MODREF89238		1	20P	1
MODREF89239		1	25P	1
MODREF89240		1	50D	1
MODREF89241		1	55D	1
MODREF89242		1	50E	1

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1051

Jul 01/2008

**COMPONENT MAINTENANCE MANUAL**

<b>PART NUMBER</b>	<b>AIRLINE PART NUMBER</b>	<b>FIGURE</b>	<b>ITEM</b>	<b>UNITS PER ASSEMBLY</b>
MODREF89243		1	55E	1

**78-31-40**

ILLUSTRATED PARTS LIST

Page 1052

Jul 01/2008



COMPONENT MAINTENANCE MANUAL

FIGURE NOT ILLUSTRATED

FAN DUCT COWL AND THRUST REVERSER ASSY COLLECTOR  
IPL Figure 1

**78-31-40**

ILLUSTRATED PARTS LIST

Page 1053

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY
			1	2	3	4	5	6	7		
1-											
-1A	315A2295-3									A	RF
-1B	315A2295-11									B	RF
-1C	315A2295-15									C	RF
-1D	315A2295-19									D	RF
-1E	315A2295-23									E	RF
-1F	315A2295-27									F	RF
-1G	315A2295-31									G	RF
-1H	315A2295-35									H	RF
-1J	315A2295-39									J	RF
-1K	315A2295-43									K	RF
-1L	315A2295-47									L	RF
-1M	315A2295-51									M	RF

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1054

Jul 01/2008







## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY
			1	2	3	4	5	6	7		
1-											
-2A	315A2295-119									AB	RF
-2B	315A2295-123									AC	RF
-2C	315A2295-127									AD	RF
-2D	315A2295-131									AE	RF
-2E	315A2295-135									AF	RF
-2F	315A2295-139									AG	RF
-2G	315A2295-143									AH	RF
-2H	315A2295-147									AJ	RF
-2J	315A2295-151									AK	RF
-2K	315A2295-155									AL	RF
-2L	315A2295-159									AM	RF
-2M	315A2295-163									AN	RF
-2N	315A2295-167									AP	RF
-2P	315A2295-171									AQ	RF

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1056

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY
			1	2	3	4	5	6	7		
1-											
-2Q	315A2295-179									AR	RF
-2R	315A2295-183									FS	RF
-2S	315A2295-183										
-2T	315A2295-191									FU	RF
-2U	315A2295-195									FV	RF
-2V	315A2295-187									FT	RF
-2W	315A2295-199									GL	RF
-2X	315A2295-203									GQ	RF
-2Y	315A2295-207									GR	RF
-2Z	315A2295-211									GS	RF
-3	315A2295-215									GT	RF
-3A	315A2295-671									HG	RF
-3B	315A2295-679									HL	RF
-3C	315A2295-683									HQ	RF
-3D	315A2295-687									HU	RF

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1057

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY
			1	2	3	4	5	6	7		
1-											
-3E	315A2295-691										
-3F	315A2295-695										
-3G	315A2295-699										
-5	315A2295-4										
-5A	315A2295-12										
-5B	315A2295-16										
-5C	315A2295-20										
-5D	315A2295-24										
-5E	315A2295-28										
-5F	315A2295-32										
-5G	315A2295-36										
-5H	315A2295-40										
-5J	315A2295-44										

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1058

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY
			1	2	3	4	5	6	7		
1-											
-5K	315A2295-48									BC	RF
-5L	315A2295-52									BD	RF
-5M	315A2295-64									BE	RF
-5N	315A2295-68									BF	RF
-5P	315A2295-72									BG	RF
-5Q	315A2295-76									BH	RF
-5R	315A2295-80									BJ	RF
-5S	315A2295-84									BK	RF
-5T	315A2295-88									BL	RF
-5U	315A2295-92									BM	RF
-5V	315A2295-96									BN	RF
-5W	315A2295-104									BP	RF
-5X	315A2295-108									BQ	RF

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1059

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY
			1	2	3	4	5	6	7		
1-											
-5Y	315A2295-112									BR	RF
-5Z	315A2295-116									BS	RF
-6	315A2295-120									BT	RF
-6A	315A2295-124									BU	RF
-6B	315A2295-128									BV	RF
-6C	315A2295-132									BW	RF
-6D	315A2295-136									BX	RF
-6E	315A2295-140									BY	RF
-6F	315A2295-144									BZ	RF
-6G	315A2295-148									CA	RF
-6H	315A2295-152									CB	RF
-6J	315A2295-156									CC	RF
-6K	315A2295-160									CD	RF
-6L	315A2295-164									CE	RF

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1060

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY
			1	2	3	4	5	6	7		
1-											
-6M	315A2295-168									CF	RF
-6N	315A2295-172									CG	RF
-6P	315A2295-180									CH	RF
-6Q	315A2295-184									FW	RF
-6R	315A2295-188									FX	RF
-6S	315A2295-192									FY	RF
-6T	315A2295-196									FZ	RF
-6U	315A2295-200									GM	RF
-6V	315A2295-204									GU	RF
-6W	315A2295-208									GV	RF
-6X	315A2295-212									GW	RF
-6Y	315A2295-216									GX	RF
-6Z	315A2295-672									HH	RF
-7	315A2295-680									HM	RF
-7A	315A2295-684									HR	RF

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1061

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY
			1	2	3	4	5	6	7		
1-											
-7B	315A2295-688									HV	RF
-7C	315A2295-692									HZ	RF
-7D	315A2295-696									JD	RF
-7E	315A2295-700									JH	RF
-10	315A2295-5									CJ	RF
-10A	315A2295-13									CK	RF
-10B	315A2295-17									CL	RF
-10C	315A2295-21									CM	RF
-10D	315A2295-25									CN	RF
-10E	315A2295-29									CP	RF
-10F	315A2295-33									CQ	RF
-10G	315A2295-37									CR	RF
-10H	315A2295-41									CS	RF

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1062

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY
			1	2	3	4	5	6	7		
1-											
-10J	315A2295-45									CT	RF
-10K	315A2295-49									CU	RF
-10L	315A2295-53									CV	RF
-10M	315A2295-65									CW	RF
-10N	315A2295-69									CX	RF
-10P	315A2295-73									CY	RF
-10Q	315A2295-77									CZ	RF
-10R	315A2295-81									DA	RF
-10S	315A2295-85									DB	RF
-10T	315A2295-89									DC	RF
-10U	315A2295-93									DD	RF
-10V	315A2295-97									DE	RF
-10W	315A2295-105									DF	RF

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1063

Jul 01/2008





## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY
			1	2	3	4	5	6	7		
1-											
-10X	315A2295-109									DG	RF
-10Y	315A2295-113									DH	RF
-10Z	315A2295-117									DJ	RF
-11	315A2295-121									DK	RF
-11A	315A2295-125									DL	RF
-11B	315A2295-129									DM	RF
-11C	315A2295-133									DN	RF
-11D	315A2295-137									DP	RF
-11E	315A2295-141									DQ	RF
-11F	315A2295-145									DR	RF
-11G	315A2295-149									DS	RF
-11H	315A2295-153									DT	RF
-11J	315A2295-157									DU	RF
-11K	315A2295-161									DV	RF

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1064

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY
			1	2	3	4	5	6	7		
1-											
-11L	315A2295-165									DW	RF
-11M	315A2295-169									DX	RF
-11N	315A2295-173									DY	RF
-11P	315A2295-181									DZ	RF
-11Q	315A2295-185									GA	RF
-11R	315A2295-189									GB	RF
-11S	315A2295-193									GC	RF
-11T	315A2295-197									GD	RF
-11U	315A2295-201									GN	RF
-11V	315A2295-205									GY	RF
-11W	315A2295-209									GZ	RF
-11X	315A2295-213									HA	RF
-11Y	315A2295-217									HB	RF
-11Z	315A2295-673									HJ	RF
-12	315A2295-681									HN	RF

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1065

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY
			1	2	3	4	5	6	7		
1-											
-12A	315A2295-685									HS	RF
-12B	315A2295-689									HW	RF
-12C	315A2295-693									JA	RF
-12D	315A2295-697									JE	RF
-12E	315A2295-701									JJ	RF
-12F	315A2295-219									JL	RF
-12G	315A2295-221									JN	RF
-12H	315A2295-223									JQ	RF
-15	315A2295-6									EA	RF
-15A	315A2295-14									EB	RF
-15B	315A2295-18									EC	RF
-15C	315A2295-22									ED	RF
-15D	315A2295-26									EE	RF
-15E	315A2295-30									EF	RF

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1066

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY
			1	2	3	4	5	6	7		
1-											
-15F	315A2295-34									EG	RF
-15G	315A2295-38									EH	RF
-15H	315A2295-42									EJ	RF
-15J	315A2295-46									EK	RF
-15K	315A2295-50									EL	RF
-15L	315A2295-54									EM	RF
-15M	315A2295-66									EN	RF
-15N	315A2295-70									EP	RF
-15P	315A2295-74									EQ	RF
-15Q	315A2295-78									ER	RF
-15R	315A2295-82									ES	RF
-15S	315A2295-86									ET	RF
-15T	315A2295-90									EU	RF

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1067

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY
			1	2	3	4	5	6	7		
1-											
-15U	315A2295-94									EV	RF
-15V	315A2295-98									EW	RF
-15W	315A2295-106									EX	RF
-15X	315A2295-110									EY	RF
-15Y	315A2295-114									EZ	RF
-15Z	315A2295-118									FA	RF
-16	315A2295-122									FB	RF
-16A	315A2295-126									FC	RF
-16B	315A2295-130									FD	RF
-16C	315A2295-134									FE	RF
-16D	315A2295-138									FF	RF
-16E	315A2295-142									FG	RF
-16F	315A2295-146									FH	RF
-16G	315A2295-150									FJ	RF

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1068

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY
			1	2	3	4	5	6	7		
1-											
-16H	315A2295-154									FK	RF
-16J	315A2295-158									FL	RF
-16K	315A2295-162									FM	RF
-16L	315A2295-166									FN	RF
-16M	315A2295-170									FP	RF
-16N	315A2295-174									FQ	RF
-16Q	315A2295-182									FR	RF
-16R	315A2295-186									GE	RF
-16S	315A2295-190									GH	RF
-16T	315A2295-194									GJ	RF
-16U	315A2295-198									GK	RF
-16V	315A2295-202									GP	RF
-16W	315A2295-206									HC	RF
-16X	315A2295-210									HD	RF
-16Y	315A2295-214									HE	RF

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1069

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY
			1	2	3	4	5	6	7		
1-											
-16Z	315A2295-218									HF	RF
-17	315A2295-674									HK	RF
-17A	315A2295-682									HP	RF
-17B	315A2295-686									HT	RF
-17C	315A2295-690									HX	RF
-17D	315A2295-694									JB	RF
-17E	315A2295-698									JF	RF
-17F	315A2295-702									JK	RF
-17G	315A2295-220									JK	RF
-17H	315A2295-222									JK	RF
-20	315A2707-1									A-D, F, G, J-M, Q-U, CJ- CM, CP, CQ, CS- CV, CY- DC	1
-20A	315A2707-3									H, N, X- AB, AE, AF, CR, CW, DF- DK, DN, DP	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1070

Jul 01/2008







## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY
			1	2	3	4	5	6	7		
1- -20P	MODREF89238		.	WIRE BUNDLE INSTL (LIMITED USAGE) (315A2707-25REVA) (REF CMM 78-31-37)						GA-GC, HS, HW, HZ	1
-20Q	MODREF100586		.	WIRE BUNDLE INSTL (LIMITED USAGE) (315A2707-25REVB) (REF CMM 78-31-37)						GA-GC, HS, HW, HZ	1
-20R	MODREF209064		.	WIRE BUNDLE INSTL (LIMITED USAGE) (315A2707-29REVA) (REF CMM 78-31-37)						GC, JA	1
-20S	MODREF209064		.	WIRE BUNDLE INSTL (315A2707-29REVA) (REF CMM 78-31-37)						GD, GN, GY-HB, JE, JJ, JN	1
-25	315A2707-2		.	WIRE BUNDLE INSTL (REF CMM 78-31-37)						AS-AV, AX, AY, BA-BD, BG-BL, EA-ED, EF, EG, EJ-EM, EQ-EU	1
-25A	315A2707-4		.	WIRE BUNDLE INSTL (OPT ITEM 25B) (REF CMM 78-31-37)						AZ, BE, BP-BT, BW, BX, EH, EN, EX-FB, FE, FF	1
-25B	315A2707-6		.	REWORK INSTL-WIRING (OPT ITEM 25A) (REF CMM 78-31-37)						AZ, BE, BP-BT, BW, BX, EH, EN, EX-FB, FE, FF	1
-25C	315A2707-4		.	WIRE BUNDLE INSTL (REF CMM 78-31-37)						BF, BM, BN, BU, EP, EV, EW, FC	1
-25D	315A2707-16		.	WIRE BUNDLE INSTL (REF CMM 78-31-37)						AW, BY- CC	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1072

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY
			1	2	3	4	5	6	7		
1-											
-25E	315A2707-18		.	WIRE BUNDLE INSTL (REF CMM 78-31-37)						EE, FG- FL	1
-25F	315A2707-20		.	REWORK INSTL-WIRING (REF CMM 78-31-37)						CD	1
-25G	315A2707-22		.	REWORK INSTL-WIRING (REF CMM 78-31-37)						FM	1
-25H	315A2707-24		.	WIRE BUNDLE INSTL (REF CMM 78-31-37)						CE-CH, HH, HM	1
-25J	315A2707-26		.	WIRE BUNDLE INSTL (REF CMM 78-31-37)						FN-FR, HK, HP	1
-25K	MODREF89237		.	WIRE BUNDLE INSTL (LIMITED USAGE) (315A2707-24REVA) (REF CMM 78-31-37)						FW-FY, HR, HV, HZ	1
-25L	MODREF100587		.	WIRE BUNDLE INSTL (LIMITED USAGE) (315A2707-24REVB) (REF CMM 78-31-37)						FW-FY, HR, HV, HZ	1
-25M	MODREF209063		.	WIRE BUNDLE INSTL (LIMITED USAGE) (315A2707-28REVA) (REF CMM 78-31-37)						FY, HZ	1
-25N	MODREF209063		.	WIRE BUNDLE INSTL (315A2707-28REVA) (REF CMM 78-31-37)						FZ, GM, GU-GX, JD, JH, JM	1
-25P	MODREF89239		.	WIRE BUNDLE INSTL (LIMITED USAGE) (315A2707-26REVA) (REF CMM 78-31-37)						GE-GG, HT	1
-25Q	MODREF100585		.	WIRE BUNDLE INSTL (LIMITED USAGE) (315A2707-26REVB) (REF CMM 78-31-37)						GE-GG, HT	1
-25R	MODREF209065		.	WIRE BUNDLE INSTL (LIMITED USAGE) (315A2707-30REVA) (REF CMM 78-31-37)						GG	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1073

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY
			1	2	3	4	5	6	7		
1-											
-25S	M0DREF209065		.	WIRE BUNDLE INSTL (315A2707-30REVA) (REF CMM 78-31-37)						GH, GP, HC-HF, HX, JK, JP	1
-30	315A2505-3		.	DOOR INSTL-THRUST REVERSER ACTR ACCESS (REF CMM 78-31-24)						A-AF, AH, AJ, AM, CJ- DP, DR, DS, DV	1
-30A	315A2505-5		.	DOOR INSTL-THRUST REVERSER ACTR ACCESS (REF CMM 78-31-24)						AG, AK, AL, AN- AR, HG, HL	1
-30B	315A2505-7		.	DOOR INSTL-THRUST REVERSER ACTR ACCESS (REF CMM 78-31-24)						DQ, DT, DU, DW- DZ, HJ, HN, JQ	1
-30C	M0DREF89220		.	DOOR INSTL-THRUST REVERSER ACTR ACCESS (315A2505-5REVA) (REF CMM 78-31-24)						FS-FV, GL, GQ- GT, HQ, HU, HY, JC, JG, JL	1
-30D	M0DREF89222		.	DOOR INSTL-THRUST REVERSER ACTR ACCESS (315A2505-7REVA) (REF CMM 78-31-24)						GA-GD, GN, GY- HB, HS, HW, JA, JE, JJ, JN	1
-35	315A2505-4		.	DOOR INSTL-THRUST REVERSER ACTR ACCESS (REF CMM 78-31-24)						AS-BX, BZ, CA, CD, EA- FF, FH, FJ, FM	1
-35A	315A2505-6		.	DOOR INSTL-THRUST REVERSER ACTR ACCESS (REF CMM 78-31-24)						BY, CB, CC, CE- CH, HH, HM	1
-35B	315A2505-8		.	DOOR INSTL-THRUST REVERSER ACTR ACCESS (REF CMM 78-31-24)						FG, FK, FL, FN- FR, HK, HP	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1074

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1- -35C	M0DREF89221		.								FW-FZ, GM, GU- GX, HR, HV, HZ, JD, JH, JM	1
-35D	M0DREF89223		.								GE-GH, GP, HC- HF, HT, HX, JP	1
-40	315A2600-3		.								A-C, E-H, M, N, Q, X, AE, CJ-CL, CN-CR, CV, CW, CY, DF, DN	1
-40A	315A2600-5		.								A-C, E-H, M, N, Q, X, AE, CJ-CL, CN-CR, CV, CW, CY, DF, DN	1
-40B	315A2600-5		.								D, J-L, P, R-W, Y- AD, AF, AH, AJ, AM, CM, CS-CU, CX, CZ- DE, DG- DM, DP, DR, DS, DV	1
-40C	315A2600-7		.								AG	1
-40D	315A2600-9		.								DQ	1
-40E	315A2600-11		.								AK, AL, AN-AR, HG, HL	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1075

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY
			1	2	3	4	5	6	7		
1-											
-40F	315A2600-13		.							DT, DU, DW-DZ, HJ, HN, JQ	1
-40G	MODREF89232		.							FS-FV, HQ, HU, HY, JC	1
-40H	MODREF89234		.							GA-GD, HS, HW, JA, JE	1
-40J	MODREF89232		.							GL, GQ- GT, JG, JL	1
-40K	MODREF246227		.							GL, GQ- GT, JG, JL	1
-40L	MODREF271751		.							GL, GQ- GT, JG, JL	1
-40M	MODREF281238		.							GL, GQ- GT, JG, JL	1
-40N	MODREF264120		.							GL, GQ- GT, JG, JL	1
-40P	MODREF271752		.							GL, GQ- GT, JG, JL	1
-40Q	MODREF281558		.							GL, GQ- GT, JG, JL	1
-40R	MODREF89234		.							GN, GY- HB, JJ, JN	1

-Item not Illustrated

**78-31-40**

ILLUSTRATED PARTS LIST

Page 1076

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1- -40S	M0DREF246229		.								GN, GY- HB, JJ, JN	1
-40T	M0DREF264122		.								GN, GY- HB, JJ, JN	1
-40U	M0DREF296448		.								GQ-GT, JL	1
-40V	M0DREF296450		.								GY-HB, JN	1
-45	315A2600-4		.								AS-AU, AW-AZ, BB, BE, BG, BP, BW, EA- EC, EE- EH, EM, EN, EQ, EX, FE	1
-45A	315A2600-6		.								AS-AU, AW-AZ, BB, BE, BG, BP, BW, EA- EC, EE- EH, EM, EN, EQ, EX, FE	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1077

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE	USAGE CODE	UNITS PER ASSY
1- -45B	315A2600-6		. ACTUATOR INSTL (REF CMM 78-31-37)	AV, BA- BC, BF, BH-BN, BQ-BV, BX, BZ, CA, CD, ED, EJ- EL, EP, ER-EW, EY-FD, FF, FH, FJ, FM	1
-45C	315A2600-8		. ACTUATOR INSTL (REF CMM 78-31-37)	BY	1
-45D	315A2600-10		. ACTUATOR INSTL (REF CMM 78-31-37)	FG	1
-45E	315A2600-12		. ACTUATOR INSTL (REF CMM 78-31-37)	CB, CC, CE-CH, HH, HM	1
-45F	315A2600-14		. ACTUATOR INSTL (REF CMM 78-31-37)	FK, FL, FN-FR, HK, HP	1
-45G	M0DREF89233		. ACTUATOR INSTL (315A2600-12REVA) (REF CMM 78-31-37)	FW-FZ, HR, HV, HZ, JD	1
-45H	M0DREF89235		. ACTUATOR INSTL (315A2600-14REVA) (REF CMM 78-31-37)	GE-GH, HT, HX	1
-45J	M0DREF89233		. ACTUATOR INSTL (LIMITED USAGE) (315A2600-12REVA) (REF CMM 78-31-37)	GM, GU- GX, JH, JM	1
-45K	M0DREF246228		. ACTUATOR INSTL (LIMITED USAGE) (315A2600-12REVB) (REF CMM 78-31-37)	GM, GU- GX, JH, JM	1
-45L	M0DREF264121		. ACTUATOR INSTL (LIMITED USAGE) (315A2600-12REVC) (REF CMM 78-31-37)	GM, GU- GX, JH, JM	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1078

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1- -45M	M0DREF89235		.	ACTUATOR	INSTL						GP, HC- HF, JK, JP	1
				(LIMITED USAGE)								
				(315A2600-14REVA)								
				(REF CMM 78-31-37)								
-45N	M0DREF246230		.	ACTUATOR	INSTL						GP, HC- HF, JK, JP	1
				(LIMITED USAGE)								
				(315A2600-14REVB)								
				(REF CMM 78-31-37)								
-45P	M0DREF264123		.	ACTUATOR	INSTL						GP, HC- HF, JK, JP	1
				(LIMITED USAGE)								
				(315A2600-14REVC)								
				(REF CMM 78-31-37)								
-45Q	M0DREF296625		.	ACTUATOR	INSTL						GU-GX, JM	1
				(LIMITED USAGE)								
				(315A2600-12REVE)								
				(REF CMM 78-31-37)								
-45R	M0DREF296626		.	ACTUATOR	INSTL						HC-HF, JP	1
				(LIMITED USAGE)								
				(315A2600-14REVE)								
				(REF CMM 78-31-37)								
-50	315A2711-5		.	SENSOR	INSTL-SLEEVE	STOWAGE					A, B, E- H, M, N, Q, X, CJ, CK, CN- CR, CV, CW, CY, DF	1
				(REF CMM 78-31-37)								
-50A	315A2711-9		.	SENSOR	INSTL-SLEEVE	STOWAGE					C, D, J-L, P, R-W, Y-AF, AH, AJ, AM, CL, CM, CS- CU, CX, CZ-DE, DG-DP, DR, DS, DV	1
				(REF CMM 78-31-37)								
-50B	315A2711-13		.	SENSOR	INSTL-SLEEVE	STOWAGE					AG, AK, AL, AN- AR, HG, HL	1
				(REF CMM 78-31-37)								

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1079

Jul 01/2008





## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1- -50C	315A2711-15		.								DQ, DT, DU, DW- DZ, HJ, HN, JQ	1
-50D	MODREF89240		.								FS-FV, GL, GQ- GT, HQ, HU, HY, JC, JG, JL	1
-50E	MODREF89242		.								GA-GD, GN, GY- HB, HS, HW, JA, JE, JJ, JN	1
-55	315A2711-6		.								AS, AT, AW-AZ, BD, BE, EA, EB, EE-EH, EM, EN	1
-55A	315A2711-10		.								AU, AV, BA-BC, BF-BX, BZ, CA, CD, EC, ED, EJ- EL, EP- FF, FH, FJ, FM	1
-55B	315A2711-14		.								BY, CB, CC, CE- CH, HH, HM	1
-55C	315A2711-16		.								FG, FK, FL, FN- FR, HK, HP	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1080

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1- -55D	M0DREF89241		.								FW-FZ, GM, GU- GX, HR, HV, HZ, JD, JH, JM	1
-55E	M0DREF89243		.								GE-GH, GP, HC- HF, HT, HX, JP	1
-60	315A2565-1		.								A-AR, HG, HL, JQ	1
-60A	M0DREF89228		.								FS-FV, GL, GQ- GT, HQ, HU, HY, JC, JG, JL	1
-65	315A2565-4		.								CJ-DZ, HJ, HN	1
-65A	M0DREF89231		.								GE-GH, GP, GU- GX, HT, HX, JP	1
-70	315A2565-3		.								AS-CH, HH, HM	1
-70A	M0DREF89230		.								GA-GD, GN, GY- HB, HS, HW, JA, JE, JJ, JN	1
-75	315A2565-2		.								EA-FR, HK, HP	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1081

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1- -75A	MODREF89229		.								FW-FZ, GM, HC- HF, HR, HV, HZ, JD, JH, JM	1
-80	315A2500-3		.								A-N, Q- U, W-AF, AM, CJ- CW, CY- DC, DE- DP, DV	1
-80A	315A2500-5		.								P, V, AH, AJ, CX, DD, DR, DS	1
-80B	315A2500-9		.								AG, AK, AL	1
-80C	315A2500-11		.								DQ, DT, DU	1
-80D	315A2500-13		.								AN, AP	1
-80E	315A2500-13		.								AQ, HG	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1082

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY
			1	2	3	4	5	6	7		
1- -80F	315A2500-17		. PANEL INSTL-THRUST REVERSER SLEEVE (LIMITED USAGE) (315A2500-21 MAY ALWAYS REPLACE 315A2500-17, BUT 315A2500-17 MAY ONLY REPLACE 315A2500-21 PROVIDED CUSTOMER ACCEPTS POTENTIAL RISK OF CORROSION ASSOC. WITH ALUMINUM LOCKING COLLARS WHICH ARE AN OPTIONAL COMPONENT ON THE -17 SLEEVE ASSYS) (315A2500-25 MAY ALWAYS REPLACE 315A2500-17, BUT 315A2500-17 MAY ONLY REPLACE 315A2500-25 PROVIDED CUSTOMER ACCEPTS POTENTIAL RISK OF CORROSION ASSOC. WITH ALUMINUM LOCKING COLLARS WHICH ARE AN OPTIONAL COMPONENT ON THE -17 SLEEVE ASSY) (FOR SPARES PROCURE 315A2521- 7) (REF CMM 78-31-24)							AQ, HG	1
-80G	315A2500-21		. PANEL INSTL-THRUST REVERSER SLEEVE (LIMITED USAGE) (315A2500-21 MAY ALWAYS REPLACE 315A2500-17, BUT 315A2500-17 MAY ONLY REPLACE 315A2500-21 PROVIDED CUSTOMER ACCEPTS POTENTIAL RISK OF CORROSION ASSOC. WITH ALUMINUM LOCKING COLLARS WHICH ARE AN OPTIONAL COMPONENT ON THE -17 SLEEVE ASSYS) (FOR SPARES PROCURE 315A2521- 13) (REF CMM 78-31-24)							AQ, HG	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1083

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1- -80H	315A2500-25									. PANEL INSTL-THRUST REVERSER SLEEVE (LIMITED USAGE) (315A2500-25 MAY ALWAYS REPLACE 315A2500-17, BUT 315A2500-17 MAY ONLY REPLACE 315A2500-25 PROVIDED CUSTOMER ACCEPTS POTENTIAL RISK OF CORROSION ASSOC. WITH ALUMINUM LOCKING COLLARS WHICH ARE AN OPTIONAL COMPONENT ON THE -17 SLEEVE ASSYS) (FOR SPARES PROCURE 315A2521- 13) (REF CMM 78-31-24)	AQ, HG	1
-80J	315A2500-15									. SLEEVE ASSY-THRUST REVERSER (FOR SPARES PROCURE 315A2521- 3) (REF CMM 78-31-24)	DW, DX	1
-80K	315A2500-15									. SLEEVE ASSY-THRUST REVERSER (LIMITED USAGE) (FOR SPARES PROCURE 315A2521- 3) (REF CMM 78-31-24)	DY, HJ	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1084

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY
			1	2	3	4	5	6	7		
1- -80L	315A2500-19		. PANEL INSTL-THRUST REVERSER SLEEVE (LIMITED USAGE) (315A2500-23 MAY ALWAYS REPLACE 315A2500-19, BUT 315A2500-19 MAY ONLY REPLACE 315A2500-23 PROVIDED CUSTOMER ACCEPTS POTENTIAL RISK OF CORROSION ASSOC. WITH ALUMINUM LOCKING COLLARS WHICH WERE AN OPTIONAL COMPONENT ON THE -19 SLEEVE ASSYS) (315A2500-27 MAY ALWAYS REPLACE 315A2500-19, BUT 315A2500-19 MAY ONLY REPLACE 315A2500-27 PROVIDED CUSTOMER ACCEPTS POTENTIAL RISK OF CORROSION ASSOC. WITH ALUMINUM LOCKING COLLARS WHICH WERE AN OPTIONAL COMPONENT ON THE -19 SLEEVE ASSYS) (FOR SPARES PROCURE 315A2521- 7) (REF CMM 78-31-24)							DY, HJ	1
-80M	315A2500-23		. PANEL INSTL-THRUST REVERSER SLEEVE (LIMITED USAGE) (315A2500-23 MAY ALWAYS REPLACE 315A2500-19, BUT 315A2500-19 MAY ONLY REPLACE 315A2500-23 PROVIDED CUSTOMER ACCEPTS POTENTIAL RISK OF CORROSION ASSOC. WITH ALUMINUM LOCKING COLLARS WHICH WERE AN OPTIONAL COMPONENT ON THE -19 SLEEVE ASSYS) (FOR SPARES PROCURE 315A2521- 13) (REF CMM 78-31-24)							DY, HJ	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1085

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY		
			1	2	3	4	5	6	7				
1- -80N	315A2500-27										. PANEL INSTL-THRUST REVERSER SLEEVE (LIMITED USAGE) (315A2500-27 MAY ALWAYS REPLACE 315A2500-19, BUT 315A2500-19 MAY ONLY REPLACE 315A2500-27 PROVIDED CUSTOMER ACCEPTS POTENTIAL RISK OF CORROSION ASSOC. WITH ALUMINUM LOCKING COLLARS WHICH ARE AN OPTIONAL COMPONENT ON THE -19 SLEEVE ASSYS) (FOR SPARES PROCURE 315A2521- 13) (REF CMM 78-31-24)	DY, HJ	1
-80P	315A2500-25										. PANEL INSTL-THRUST REVERSER SLEEVE (315A2500-25 MAY ALWAYS REPLACE 315A2500-17, BUT 315A2500-17 MAY ONLY REPLACE 315A2500-25 PROVIDED CUSTOMER ACCEPTS POTENTIAL RISK OF CORROSION ASSOC. WITH ALUMINUM LOCKING COLLARS WHICH ARE AN OPTIONAL COMPONENT ON THE -17 SLEEVE ASSYS) (FOR SPARES PROCURE 315A2521- 13) (REF CMM 78-31-24)	AR, HL	1
-80Q	315A2500-27										. PANEL INSTL-THRUST REVERSER SLEEVE (315A2500-27 MAY ALWAYS REPLACE 315A2500-19, BUT 315A2500-19 MAY ONLY REPLACE 315A2500-27 PROVIDED CUSTOMER ACCEPTS POTENTIAL RISK OF CORROSION ASSOC. WITH ALUMINUM LOCKING COLLARS WHICH ARE AN OPTIONAL COMPONENT ON THE -19 SLEEVE ASSYS) (FOR SPARES PROCURE 315A2521- 13) (REF CMM 78-31-24)	DZ, HN	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1086

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1- -80R	MODREF89208		.								FS, FT, HQ, HU	1
-80S	MODREF184021		.								FS-FV, GL, GQ- GT, HQ, HU, HY, JC, JG, JL	1
-80T	MODREF204518		.								FS-FV, GL, GQ- GT, HQ, HU, HY, JC, JG, JL	1
-80U	MODREF89210		.								GA, GB, HS, HW	1
-80V	MODREF184023		.								GA-GD, GN, GY- HB, HS, HW, JA, JE, JJ, JN, JQ	1
-80W	MODREF204520		.								GA-GD, GN, GY- HB, HS, HW, JA, JE, JJ, JN, JQ	1
-85	315A2500-4		.								AS-BE, BG-BL, BN-BX, CD, EA- EN, EQ- EU, EW- FF, FM	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1087

Jul 01/2008





## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY
			1	2	3	4	5	6	7		
1- -85A	315A2500-6		.	SLEEVE ASSY-THRUST REVERSER (FOR SPARES PROCURE 315A2521- 2) (REF CMM 78-31-24)						BF, BM, BZ, CA, EP, EV, FH, FJ	1
-85B	315A2500-10		.	SLEEVE ASSY-THRUST REVERSER (FOR SPARES PROCURE 315A2521- 4) (REF CMM 78-31-24)						BY, CB, CC	1
-85C	315A2500-12		.	SLEEVE ASSY-THRUST REVERSER (FOR SPARES PROCURE 315A2521- 4) (REF CMM 78-31-24)						FG, FK, FL	1
-85D	315A2500-14		.	SLEEVE ASSY-THRUST REVERSER (FOR SPARES PROCURE 315A2521- 4) (REF CMM 78-31-24)						CE, CF	1
-85E	315A2500-14		.	SLEEVE ASSY-THRUST REVERSER (LIMITED USAGE) (FOR SPARES PROCURE 315A2521- 4) (REF CMM 78-31-24)						CG, HH	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1088

Jul 01/2008



COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY
			1	2	3	4	5	6	7		
1- -85F	315A2500-18		. PANEL INSTL-THRUST REVERSER SLEEVE (LIMITED USAGE) (315A2500-22 MAY ALWAYS REPLACE 315A2500-18, BUT 315A2500-18 MAY ONLY REPLACE 315A2500-22 PROVIDED CUSTOMER ACCEPTS POTENTIAL RISK OF CORROSION ASSOC. WITH ALUMINUM LOCKING COLLARS WHICH ARE AN OPTIONAL COMPONENT ON THE -18 SLEEVE ASSYS) (315A2500-26 MAY ALWAYS REPLACE 315A2500-18, BUT 315A2500-18 MAY ONLY REPLACE 315A2500-26 PROVIDED CUSTOMER ACCEPTS POTENTIAL RISK OF CORROSION ASSOC. WITH ALUMINUM LOCKING COLLARS WHICH ARE AN OPTIONAL COMPONENT ON THE -18 SLEEVE ASSYS) (FOR SPARES PROCURE 315A2521- 8) (REF CMM 78-31-24)							CG, HH	1
-85G	315A2500-22		. PANEL INSTL-THRUST REVERSER SLEEVE (LIMITED USAGE) (315A2500-22 MAY ALWAYS REPLACE 315A2500-18, BUT 315A2500-18 MAY ONLY REPLACE 315A2500-22 PROVIDED CUSTOMER ACCEPTS POTENTIAL RISK OF CORROSION ASSOC. WITH ALUMINUM LOCKING COLLARS WHICH ARE AN OPTIONAL COMPONENT ON THE -18 SLEEVE ASSYS) (FOR SPARES PROCURE 315A2521- 12) (REF CMM 78-31-24)							CG, HH	1

-Item not Illustrated

**78-31-40**

ILLUSTRATED PARTS LIST

Page 1089

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY					
			1	2	3	4	5	6	7							
1- -85H	315A2500-26		.	PANEL	INSTL-THRUST	REVERSER	SLEEVE				CG, HH	1				
				(LIMITED USAGE)	(315A2500-26 MAY ALWAYS	REPLACE 315A2500-18, BUT	315A2500-18 MAY ONLY REPLACE	315A2500-26 PROVIDED CUSTOMER	ACCEPTS POTENTIAL RISK OF	CORROSION ASSOC. WITH	ALUMINUM LOCKING COLLARS	WHICH ARE AN OPTIONAL	COMPONENT ON THE -18 SLEEVE	ASSYS)	(FOR SPARES PROCURE 315A2521-14)	(REF CMM 78-31-24)
-85J	315A2500-16		.	SLEEVE	ASSY-THRUST	REVERSER					FN, FP	1				
				(FOR SPARES PROCURE 315A2521-4)	(REF CMM 78-31-24)											
-85K	315A2500-16		.	SLEEVE	ASSY-THRUST	REVERSER					FQ, HK	1				
				(LIMITED USAGE)	(FOR SPARES PROCURE 315A2521-4)	(REF CMM 78-31-24)										
-85L	315A2500-20		.	PANEL	INSTL-THRUST	REVERSER	SLEEVE				FQ, HK	1				
				(LIMITED USAGE)	(FOR SPARES PROCURE 315A2521-8)	(REF CMM 78-31-24)										
-85M	315A2500-24		.	PANEL	INSTL-THRUST	REVERSER	SLEEVE				FQ, HK	1				
				(LIMITED USAGE)	(FOR SPARES PROCURE 315A2521-14)	(REF CMM 78-31-24)										

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1090

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY
			1	2	3	4	5	6	7		
1- -85N	315A2500-26		. PANEL INSTL-THRUST REVERSER SLEEVE (LIMITED USAGE) (315A2500-26 MAY ALWAYS REPLACE 315A2500-18, BUT 315A2500-18 MAY ONLY REPLACE 315A2500-26 PROVIDED CUSTOMER ACCEPTS POTENTIAL RISK OF CORROSION ASSOC. WITH ALUMINUM LOCKING COLLARS WHICH ARE AN OPTIONAL COMPONENT ON THE -18 SLEEVE ASSYS) (FOR SPARES PROCURE 315A2521- 14) (REF CMM 78-31-24)							FQ, HK	1
-85P	315A2500-26		. PANEL INSTL-THRUST REVERSER SLEEVE (315A2500-26 MAY ALWAYS REPLACE 315A2500-18, BUT 315A2500-18 MAY ONLY REPLACE 315A2500-26 PROVIDED CUSTOMER ACCEPTS POTENTIAL RISK OF CORROSION ASSOC. WITH ALUMINUM LOCKING COLLARS WHICH ARE AN OPTIONAL COMPONENT ON THE -18 SLEEVE ASSYS) (FOR SPARES PROCURE 315A2521- 14) (REF CMM 78-31-24)							CH, HM	1
-85Q	315A2500-28		. PANEL INSTL-THRUST REVERSER SLEEVE (FOR SPARES PROCURE 315A2521- 14) (REF CMM 78-31-24)							FR, HP	1
-85R	MODREF89209		. PANEL INSTL-THRUST REVERSER SLEEVE (LIMITED USAGE) (315A2500-26REVA) (REF CMM 78-31-24)							FW, FX, HR, HV	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1091

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY																				
			1	2	3	4	5	6	7																						
1- -85S	MODREF184022		.	P	A	N	E	L	I	N	S	T	L	-	T	H	R	U	S	T	R	E	V	E	R	S	E	R		FW-FZ, GM, GU- GX, HR, HV, HZ, JD, JH, JM	1
-85T	MODREF204519		.	P	A	N	E	L	I	N	S	T	L	-	T	H	R	U	S	T	R	E	V	E	R	S	E	R		FW-FZ, GM, GU- GX, HR, HV, HZ, JD, JH, JM	1
-85U	MODREF89211		.	P	A	N	E	L	I	N	S	T	L	-	T	H	R	U	S	T	R	E	V	E	R	S	E	R		GE, GF, HT	1
-85V	MODREF184024		.	P	A	N	E	L	I	N	S	T	L	-	T	H	R	U	S	T	R	E	V	E	R	S	E	R		GE-GH, GP, HC- HF, HT, HX, JP	1
-85W	MODREF204521		.	P	A	N	E	L	I	N	S	T	L	-	T	H	R	U	S	T	R	E	V	E	R	S	E	R		GE-GH, GP, HC- HF, HT, HX, JP	1
-90	315A2503-3		.	L	I	N	K	A	S	S	-	D	R	A	G														A-AF, AH, AJ, AM, CJ- DP, DR, DS, DV	1	
-90A	315A2503-5		.	L	I	N	K	A	S	S	-	D	R	A	G														AG, AK, AL, AN- AR, HG, HL	1	
-90B	315A2503-7		.	L	I	N	K	A	S	S	-	D	R	A	G														DQ, DT, DU, DW- DZ, HJ, HN, JQ	1	
-90C	MODREF89216		.	L	I	N	K	A	S	S	-	D	R	A	G														FS-FV, HQ, HU, HY, JC	1	

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1092

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1-												
-90D	M0DREF89218		.	LINK	ASSY-DRAG						GA-GD, HS, HW, JA, JE	1
					(315A2503-7REVA)							
					(REF CMM 78-31-37)							
-90E	M0DREF89216		.	LINK	ASSY-DRAG						GL, GQ- GT, JG, JL	1
					(LIMITED USAGE)							
					(315A2503-5REVA)							
					(REF CMM 78-31-37)							
-90F	M0DREF257820		.	LINK	ASSY-DRAG						GL, GQ- GT, JG, JL	1
					(LIMITED USAGE)							
					(315A2503-5REVB)							
					(REF CMM 78-31-37)							
-90G	M0DREF89218		.	LINK	ASSY-DRAG						GN, GY- HB, JJ, JN	1
					(LIMITED USAGE)							
					(315A2503-7REVA)							
					(REF CMM 78-31-37)							
-90H	M0DREF257822		.	LINK	ASSY-DRAG						GN, GY- HB, JJ, JN	1
					(LIMITED USAGE)							
					(315A2503-7REVB)							
					(REF CMM 78-31-37)							
-95	315A2503-4		.	LINK	ASSY-DRAG						AS-BX, BZ, CA, CD, EA- FF, FH, FJ, FM	1
					(REF CMM 78-31-37)							
-95A	315A2503-6		.	LINK	ASSY-DRAG						BY, CB, CC, CE- CH, HH, HM	1
					(REF CMM 78-31-37)							
-95B	315A2503-8		.	LINK	ASSY-DRAG						FG, FK, FL, FN- FR, HK, HP	1
					(REF CMM 78-31-37)							
-95C	M0DREF89217		.	LINK	ASSY-DRAG						FW-FZ, HR, HV, HZ, JD	1
					(315A2503-6REVA)							
					(REF CMM 78-31-37)							
-95D	M0DREF89219		.	LINK	ASSY-DRAG						GE-GH, HT, HX	1
					(315A2503-8REVA)							
					(REF CMM 78-31-37)							
-95E	M0DREF89217		.	LINK	ASSY-DRAG						GM, GU- GX, JH, JM	1
					(LIMITED USAGE)							
					(315A2503-6REVA)							
					(REF CMM 78-31-37)							

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1093

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE	USAGE CODE	UNITS PER ASSY
1-					
-95F	MODREF257821		. LINK ASSY-DRAG (LIMITED USAGE) (315A2503-6REVB) (REF CMM 78-31-37)	GM, GU- GX, JH, JM	1
-95G	MODREF89219		. LINK ASSY-DRAG (LIMITED USAGE) (315A2503-8REVA) (REF CMM 78-31-37)	GP, HC- HF, JK, JP	1
-95H	MODREF257823		. LINK ASSY-DRAG (LIMITED USAGE) (315A2503-8REVB) (REF CMM 78-31-37)	GP, HC- HF, JK, JP	1
-100	315A2509-1		. DOOR INSTL-BLOCKER (REF CMM 78-31-24)	A-H, K-N, Q-T, X- AA, AE, AF, CJ- CR, CT- CW, CY- DB, DF- DJ, DN, DP	1
-100A	315A2509-3		. DOOR INSTL-BLOCKER (REF CMM 78-31-24)	J, P, U- W, AB- AD, AH, AJ, AM, CS, CX, DC-DE, DK-DM, DR, DS, DV	1
-100B	315A2509-5		. DOOR INSTL-BLOCKER (REF CMM 78-31-24)	AG, AK, AL, AN, AP	1
-100C	315A2509-5		. DOOR INSTL-BLOCKER (LIMITED USAGE) (REF CMM 78-31-24)	AQ, HG	1
-100D	315A2509-9		. DOOR INSTL-BLOCKER (LIMITED USAGE) (REF CMM 78-31-24)	AQ, HG	1
-100E	315A2509-13		. DOOR INSTL-BLOCKER (LIMITED USAGE) (REF CMM 78-31-24)	AQ, HG	1

-Item not Illustrated

**78-31-40**

ILLUSTRATED PARTS LIST

Page 1094

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1-												
-100F	315A2509-7		.								DQ, DT, DU, DW, DX	1
-100G	315A2509-7		.								DY, HJ	1
-100H	315A2509-11		.								DY, HJ	1
-100J	315A2509-15		.								DY, HJ	1
-100K	315A2509-13		.								AR, HL	1
-100L	315A2509-15		.								DZ, HN, JQ	1
-100M	MODREF89224		.								FS-FV, GL, GQ- GT, HQ, HU, HY, JC, JG, JL	1
-100N	MODREF200411		.								FS-FV, GL, GQ- GT, HQ, HU, HY, JC, JG, JL	1
-100P	MODREF89226		.								GA-GD, GN, GY- HB, HS, HW, JA, JE, JJ, JN	1
-100Q	MODREF200413		.								GA-GD, GN, GY- HB, HS, HW, JA, JE, JJ, JN	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1095

Jul 01/2008





## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY
			1	2	3	4	5	6	7		
1-											
-100R	M0DREF224331		.	DOOR	INSTL-BLOCKER					GL, GQ- GT, JG, JL	1
				(LIMITED USAGE)							
				(315A2509-13REVC)							
				(REF CMM 78-31-24)							
-100S	M0DREF258000		.	DOOR	INSTL-BLOCKER					GL, GQ- GT, JG, JL	1
				(LIMITED USAGE)							
				(315A2509-13REVD)							
				(REF CMM 78-31-24)							
-100T	M0DREF224344		.	DOOR	INSTL-BLOCKER					GN, GY- HB, JJ, JN	1
				(LIMITED USAGE)							
				(315A2509-15REVC)							
				(REF CMM 78-31-24)							
-100U	M0DREF258002		.	DOOR	INSTL-BLOCKER					GN, GY- HB, JJ, JN	1
				(LIMITED USAGE)							
				(315A2509-15REVD)							
				(REF CMM 78-31-24)							
-100V	M0DREF331407		.	DOOR	INSTL-BLOCKER					JL	1
				(LIMITED USAGE)							
				(315A2509-13REVE)							
				(REF CMM 78-31-24)							
-100W	M0DREF331409		.	DOOR	INSTL-BLOCKER					JN	1
				(LIMITED USAGE)							
				(315A2509-15REVE)							
				(REF CMM 78-31-24)							
-105	315A2509-2		.	DOOR	INSTL-BLOCKER					AS-AZ, BB-BE, BG-BK, BP-BS, BW, BX, EA-EH, EK-EN, EQ-ET, EX-FA, FE, FF	1
				(REF CMM 78-31-24)							
-105A	315A2509-4		.	DOOR	INSTL-BLOCKER					BA, BF, BL-BN, BT-BV, BZ, CA, CD, EJ, EP, EU- EW, FB- FD, FH, FJ, FM	1
				(REF CMM 78-31-24)							

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1096

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1-												
-105B	315A2509-6		.							DOOR INSTL-BLOCKER (REF CMM 78-31-24)	BY, CB, CC, CE, CF	1
-105C	315A2509-6		.							DOOR INSTL-BLOCKER (LIMITED USAGE) (REF CMM 78-31-24)	CG, HH	1
-105D	315A2509-10		.							DOOR INSTL-BLOCKER (LIMITED USAGE) (REF CMM 78-31-24)	CG, HH	1
-105E	315A2509-14		.							DOOR INSTL-BLOCKER (LIMITED USAGE) (REF CMM 78-31-24)	CG, HH	1
-105F	315A2509-8		.							DOOR INSTL-BLOCKER (REF CMM 78-31-24)	FG, FK, FL, FN, FP	1
-105G	315A2509-8		.							DOOR INSTL-BLOCKER (LIMITED USAGE) (REF CMM 78-31-24)	FQ, HK	1
-105H	315A2509-12		.							DOOR INSTL-BLOCKER (LIMITED USAGE) (REF CMM 78-31-24)	FQ, HK	1
-105J	315A2509-16		.							DOOR INSTL-BLOCKER (REF CMM 78-31-24)	FQ, HK	1
-105K	315A2509-14		.							DOOR INSTL-BLOCKER (REF CMM 78-31-24)	CH, HM	1
-105L	315A2509-16		.							DOOR INSTL-BLOCKER (REF CMM 78-31-24)	FR, HP	1
-105M	MODREF89225		.							DOOR INSTL-BLOCKER (LIMITED USAGE) (315A2509-14REVA) (REF CMM 78-31-24)	FW-FZ, GM, GU- GX, HR, HV, HZ, JD, JH, JM	1
-105N	MODREF200412		.							DOOR INSTL-BLOCKER (LIMITED USAGE) (315A2509-14REVB) (REF CMM 78-31-24)	FW-FZ, GM, GU- GX, HR, HV, HZ, JD, JH, JM	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1097

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1-												
-105P	M0DREF89227		.	DOOR	INSTL-BLOCKER						GE-GH, GP, HC- HF, HT, HX, JP	1
				(LIMITED USAGE)								
				(315A2509-16REVA)								
				(REF CMM 78-31-24)								
-105Q	M0DREF200414		.	DOOR	INSTL-BLOCKER						GE-GH, GP, HC- HF, HT, HX, JP	1
				(LIMITED USAGE)								
				(315A2509-16REVB)								
				(REF CMM 78-31-24)								
-105R	M0DREF224334		.	DOOR	INSTL-BLOCKER						GM, GU- GX, JH, JM	1
				(LIMITED USAGE)								
				(315A2509-14REVC)								
				(REF CMM 78-31-24)								
-105S	M0DREF258001		.	DOOR	INSTL-BLOCKER						GM, GU- GX, JH, JM	1
				(LIMITED USAGE)								
				(315A2509-14REVD)								
				(REF CMM 78-31-24)								
-105T	M0DREF224345		.	DOOR	INSTL-BLOCKER						GP, HC- HF, JK, JP	1
				(LIMITED USAGE)								
				(315A2509-16REVC)								
				(REF CMM 78-31-24)								
-105U	M0DREF258003		.	DOOR	INSTL-BLOCKER						GP, HC- HF, JK, JP	1
				(LIMITED USAGE)								
				(315A2509-16REVD)								
				(REF CMM 78-31-24)								
-105V	M0DREF331408		.	DOOR	INSTL-BLOCKER						JM	1
				(LIMITED USAGE)								
				(315A2509-14REVE)								
				(REF CMM 78-31-24)								
-105W	M0DREF331410		.	DOOR	INSTL-BLOCKER						JP	1
				(LIMITED USAGE)								
				(315A2509-16REVE)								
				(REF CMM 78-31-24)								
-110	315A2180-1		.	SEAL	INSTL-AERO BLOCKER DOOR						A-AF, AH, AJ, AM, CJ- DP, DR, DS, DV	1
				(REF CMM 78-31-37)								
-110A	315A2180-3		.	SEAL	INSTL-AERO BLOCKER DOOR						AG, AK, AL, AN- AR, HG, HL	1
				(REF CMM 78-31-37)								

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1-												
-110B	315A2180-5		.	SEAL	INSTL-AERO	BLOCKER	DOOR				DQ, DT, DU, DW- DZ, HJ, HN, JQ	1
				(REF CMM 78-31-37)								
-110C	M0DREF89164		.	SEAL	INSTL-AERO	BLOCKER	DOOR				FS, FU, HQ, HY	1
				(LIMITED USAGE)								
				(315A2180-3REVA)								
				(REF CMM 78-31-37)								
-110D	M0DREF193279		.	SEAL	INSTL-AERO	BLOCKER	DOOR				FS, FU, HQ, HY	1
				(LIMITED USAGE)								
				(315A2180-7REVA)								
				(REF CMM 78-31-37)								
-110E	M0DREF89164		.	SEAL	INSTL-AERO	BLOCKER	DOOR				FT, HU	1
				(315A2180-3REVA)								
				(REF CMM 78-31-37)								
-110F	M0DREF193279		.	SEAL	INSTL-AERO	BLOCKER	DOOR				FV, GL, GQ-GT, JC, JG, JL	1
				(315A2180-7REVA)								
				(REF CMM 78-31-37)								
-110G	M0DREF89166		.	SEAL	INSTL-AERO	BLOCKER	DOOR				GA, GC, HS, HZ	1
				(LIMITED USAGE)								
				(315A2180-5REVA)								
				(REF CMM 78-31-37)								
-110H	M0DREF193277		.	SEAL	INSTL-AERO	BLOCKER	DOOR				GA, GC, HS, HZ	1
				(LIMITED USAGE)								
				(315A2180-9REVA)								
				(REF CMM 78-31-37)								
-110J	M0DREF89166		.	SEAL	INSTL-AERO	BLOCKER	DOOR				GB, HW	1
				(315A2180-5REVA)								
				(REF CMM 78-31-37)								
-110K	M0DREF193277		.	SEAL	INSTL-AERO	BLOCKER	DOOR				GD, GN, GY-HB, JE, JJ, JN	1
				(315A2180-9REVA)								
				(REF CMM 78-31-37)								
-115	315A2180-2		.	SEAL	INSTL-AERO	BLOCKER	DOOR				AS-BX, BZ, CA, CD, EA- FF, FH, FJ, FM	1
				(REF CMM 78-31-37)								

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.1

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1-												
-115A	315A2180-4		.	SEAL	INSTL-AERO	BLOCKER	DOOR				BY, CB, CC, CE- CH, HH, HM	1
-115B	315A2180-6		.	SEAL	INSTL-AERO	BLOCKER	DOOR				FG, FK, FL, FN- FR, HK, HP	1
-115C	M0DREF89165		.	SEAL	INSTL-AERO	BLOCKER	DOOR				FW, FY, HR, HZ	1
-115D	M0DREF193276		.	SEAL	INSTL-AERO	BLOCKER	DOOR				FW, FY, HR, HZ	1
-115E	M0DREF89165		.	SEAL	INSTL-AERO	BLOCKER	DOOR				FX, HV	1
-115F	M0DREF193276		.	SEAL	INSTL-AERO	BLOCKER	DOOR				FZ, GM, GU-GX, JD, JH, JM	1
-115G	M0DREF89167		.	SEAL	INSTL-AERO	BLOCKER	DOOR				GE, GG, HT	1
-115H	M0DREF193278		.	SEAL	INSTL-AERO	BLOCKER	DOOR				GE, GG, HT	1
-115J	M0DREF89167		.	SEAL	INSTL-AERO	BLOCKER	DOOR				GF	1
-115K	M0DREF193278		.	SEAL	INSTL-AERO	BLOCKER	DOOR				GH, GP, HC-HF, HX, JK, JP	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.2

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1- -120	315A2501-3		.								A-H, M, N, Q, R, X, Y, AE, AF, CJ- CR, CV, CW, CY, CZ, DF, DG, DN, DP	1
-120A	315A2501-5		.								J-L, P, S- W, Z-AD, AH, AJ, AM, CS- CU, CX, DA-DE, DH-DM, DR, DS, DV	1
-120B	315A2501-9		.								AG, AK, AL	1
-120C	315A2501-11		.								DQ, DT, DU	1
-120D	315A2501-13		.								AN, AP	1
-120E	315A2501-13		.								AQ, HG	1
-120F	315A2501-17		.								AQ, HG	1
-120G	315A2501-15		.								DW, DX	1
-120H	315A2501-15		.								DY, HJ	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.3

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY																																																												
			1	2	3	4	5	6	7																																																														
1-																																																																							
-120J	315A2501-19		.	P	A	N	E	L	A	S	S	Y	-	A	C	O	U	S	T	I	C	, U	N	I	Q	U	E	, E	N	G	P	O	S	I	T	I	O	N	2	, L	H	(L	I	M	I	T	E	D	U	S	A	G	E	)	(R	E	F	C	M	M	7	8	-	3	1	-	2	4	)	DY, HJ	1
-120K	315A2501-17		.	P	A	N	E	L	A	S	S	Y	-	A	C	O	U	S	T	I	C	, U	N	I	Q	U	E	, E	N	G	P	O	S	I	T	I	O	N	1	, L	H	(R	E	F	C	M	M	7	8	-	3	1	-	2	4	)	AR, HL	1													
-120L	315A2501-19		.	P	A	N	E	L	A	S	S	Y	-	A	C	O	U	S	T	I	C	, U	N	I	Q	U	E	, E	N	G	P	O	S	I	T	I	O	N	2	, L	H	(R	E	F	C	M	M	7	8	-	3	1	-	2	4	)	DZ, HN, JQ	1													
-120M	M0DREF89212		.	P	A	N	E	L	A	S	S	Y	-	A	C	O	U	S	T	I	C	(L	I	M	I	T	E	D	U	S	A	G	E	)	(3	1	5	A	2	5	0	1	-	1	7	R	E	V	A	)	(R	E	F	C	M	M	7	8	-	3	1	-	2	4	)	FS-FV, GL, GQ- GT, HQ, HU, HY, JC, JG, JL	1				
-120N	M0DREF202151		.	P	A	N	E	L	A	S	S	Y	-	A	C	O	U	S	T	I	C	(L	I	M	I	T	E	D	U	S	A	G	E	)	(3	1	5	A	2	5	0	1	-	1	7	R	E	V	B	)	(R	E	F	C	M	M	7	8	-	3	1	-	2	4	)	FS-FV, GL, GQ- GT, HQ, HU, HY, JC, JG, JL	1				
-120P	M0DREF89214		.	P	A	N	E	L	A	S	S	Y	-	A	C	O	U	S	T	I	C	(L	I	M	I	T	E	D	U	S	A	G	E	)	(3	1	5	A	2	5	0	1	-	1	9	R	E	V	A	)	(R	E	F	C	M	M	7	8	-	3	1	-	2	4	)	GA-GD, GN, GY- HB, HS, HW, JA, JE, JJ, JN	1				
-120Q	M0DREF202153		.	P	A	N	E	L	A	S	S	Y	-	A	C	O	U	S	T	I	C	(L	I	M	I	T	E	D	U	S	A	G	E	)	(3	1	5	A	2	5	0	1	-	1	9	R	E	V	B	)	(R	E	F	C	M	M	7	8	-	3	1	-	2	4	)	GA-GD, GN, GY- HB, HS, HW, JA, JE, JJ, JN	1				
-120R	M0DREF225832		.	P	A	N	E	L	A	S	S	Y	-	A	C	O	U	S	T	I	C	(L	I	M	I	T	E	D	U	S	A	G	E	)	(3	1	5	A	2	5	0	1	-	1	7	R	E	V	C	)	(R	E	F	C	M	M	7	8	-	3	1	-	2	4	)	GL, GQ- GT, JG, JL	1				
-120S	M0DREF260478		.	P	A	N	E	L	A	S	S	Y	-	A	C	O	U	S	T	I	C	(L	I	M	I	T	E	D	U	S	A	G	E	)	(3	1	5	A	2	5	0	1	-	1	7	R	E	V	D	)	(R	E	F	C	M	M	7	8	-	3	1	-	2	4	)	GL, GQ- GT, JG, JL	1				

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.4

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY																																				
			1	2	3	4	5	6	7																																						
1- -120T	M0DREF274147		.	P	A	N	E	L	A	S	S	Y	-	A	C	O	U	S	T	I	C	(L	I	M	I	T	E	D	U	S	A	G	E)	(315A2501-17REVE)	(REF CMM 78-31-24)	GL, GQ- GT, JG, JL	1										
-120U	M0DREF225834		.	P	A	N	E	L	A	S	S	Y	-	A	C	O	U	S	T	I	C	(L	I	M	I	T	E	D	U	S	A	G	E)	(315A2501-19REVC)	(REF CMM 78-31-24)	GN, GY- HB, JJ, JN	1										
-120V	M0DREF260480		.	P	A	N	E	L	A	S	S	Y	-	A	C	O	U	S	T	I	C	(L	I	M	I	T	E	D	U	S	A	G	E)	(315A2501-19REVD)	(REF CMM 78-31-24)	GN, GY- HB, JJ, JN	1										
-120W	M0DREF274149		.	P	A	N	E	L	A	S	S	Y	-	A	C	O	U	S	T	I	C	(L	I	M	I	T	E	D	U	S	A	G	E)	(315A2501-19REVE)	(REF CMM 78-31-24)	GN, GY- HB, JJ, JN	1										
-120X	M0DREF313140		.	P	A	N	E	L	A	S	S	Y	-	A	C	O	U	S	T	I	C	(L	I	M	I	T	E	D	U	S	A	G	E)	(315A2501-17REVF)	(REF CMM 78-31-24)	GQ-GT, JL	1										
-120Y	M0DREF313142		.	P	A	N	E	L	A	S	S	Y	-	A	C	O	U	S	T	I	C	(L	I	M	I	T	E	D	U	S	A	G	E)	(315A2501-19REVF)	(REF CMM 78-31-24)	GY-HB, JN	1										
-120Z	M0DREF371031		.	P	A	N	E	L	A	S	S	Y	-	A	C	O	U	S	T	I	C	(L	I	M	I	T	E	D	U	S	A	G	E)	(315A2501-17REVG)	(REF CMM 78-31-24)	JL	1										
-121	M0DREF371033		.	P	A	N	E	L	A	S	S	Y	-	A	C	O	U	S	T	I	C	(L	I	M	I	T	E	D	U	S	A	G	E)	(315A2501-17REVG)	(REF CMM 78-31-24)	JN	1										
-125	315A2501-4		.	P	A	N	E	L	A	S	S	Y	-	A	C	O	U	S	T	I	C	, T	H	R	U	S	T	R	E	V	E	R	S	E	R	S	E	R	S	L	E	E	V	E	(REF CMM 78-31-24)	AS-AZ, BD, BE, BG, BH, BP, BQ, BW, BX, EA-EH, EM, EN, EQ, ER, EX, EY, FE, FF	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.5

Mar 01/2009





## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE	USAGE CODE	UNITS PER ASSY
1- -125A	315A2501-6		. PANEL ASSY-ACOUSTIC, THRUST REVERSER SLEEVE (REF CMM 78-31-24)	BA-BC, BF, BJ- BN, BR- BV, BZ, CA, CD, EJ-EL, EP, ES- EW, EZ- FD, FH, FJ, FM	1
-125B	315A2501-10		. PANEL ASSY-ACOUSTIC, THRUST REVERSER SLEEVE (REF CMM 78-31-24)	BY, CB, CC	1
-125C	315A2501-12		. PANEL ASSY-ACOUSTIC, THRUST REVERSER SLEEVE (REF CMM 78-31-24)	FG, FK, FL	1
-125D	315A2501-14		. PANEL ASSY-ACOUSTIC, THRUST REVERSER SLEEVE (REF CMM 78-31-24)	CE, CF	1
-125E	315A2501-14		. PANEL ASSY-ACOUSTIC, THRUST REVERSER SLEEVE (LIMITED USAGE) (REF CMM 78-31-24)	CG, HH	1
-125F	315A2501-18		. PANEL ASSY-ACOUSTIC, UNIQUE, ENG POSITION 1, RH (LIMITED USAGE) (REF CMM 78-31-24)	CG, HH	1
-125G	315A2501-16		. PANEL ASSY-ACOUSTIC, THRUST REVERSER SLEEVE (LIMITED USAGE) (REF CMM 78-31-24)	FN, FP	1
-125H	315A2501-16		. PANEL ASSY-ACOUSTIC, THRUST REVERSER SLEEVE (LIMITED USAGE) (REF CMM 78-31-24)	FQ, HK	1
-125J	315A2501-20		. PANEL ASSY-ACOUSTIC, UNIQUE, ENG POSITION 2, RH (LIMITED USAGE) (REF CMM 78-31-24)	FQ, HK	1
-125K	315A2501-18		. PANEL ASSY-ACOUSTIC, UNIQUE, ENG POSITION 1, RH (REF CMM 78-31-24)	CH, HM	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.6

Jul 01/2008







## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1-												
-130D	M0DREF89174		.	CASCADE	INSTL						GA-GD, GN, GY, HS, HW, JA, JE, JJ	1
				(LIMITED	USAGE)							
				(315A2210-3REVA)								
				(REF CMM 78-31-37)								
-130E	M0DREF208439		.	CASCADE	INSTL						GA-GD, GN, GY, HS, HW, JA, JE, JJ	1
				(LIMITED	USAGE)							
				(315A2210-3REVB)								
				(REF CMM 78-31-37)								
-130F	M0DREF304375		.	CASCADE	INSTL						GQ	1
				(LIMITED	USAGE)							
				(315A2210-1REVC)								
				(REF CMM 78-31-37)								
-130G	M0DREF318434		.	CASCADE	INSTL						GR-GT	1
				(LIMITED	USAGE)							
				(315A2210-5REVB)								
				(REF CMM 78-31-37)								
-130H	M0DREF304377		.	CASCADE	INSTL						GY	1
				(LIMITED	USAGE)							
				(315A2210-3REVC)								
				(REF CMM 78-31-37)								
-130J	M0DREF318436		.	CASCADE	INSTL						GZ-HB	1
				(LIMITED	USAGE)							
				(315A2210-7REVB)								
				(REF CMM 78-31-37)								
-130L	M0DREF313579		.	CASCADE	INSTL						JL	1
				(LIMITED	USAGE)							
				(315A2210-5REVA)								
				(REF CMM 78-31-26)								
-130M	M0DREF353274		.	CASCADE	INSTL						JL	1
				(LIMITED	USAGE)							
				(315A2210-5REVC)								
				(REF CMM 78-31-26)								
-130N	M0DREF313581		.	CASCADE	INSTL						JN	1
				(LIMITED	USAGE)							
				(315A2210-7REVA)								
				(REF CMM 78-31-26)								
-130P	M0DREF353276		.	CASCADE	INSTL						JN	1
				(LIMITED	USAGE)							
				(315A2210-7REVC)								
				(REF CMM 78-31-26)								

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.9

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY
			1	2	3	4	5	6	7		
1-											
-135	315A2210-2		.	CASCADE	INSTL					AS-CH, HH, HM	1
				(REF CMM 78-31-37)							
-135A	315A2210-4		.	CASCADE	INSTL					EA-FR, HK, HP	1
				(REF CMM 78-31-37)							
-135B	MODREF89173		.	CASCADE	INSTL					FW-FZ, GM, GU, HR, HV, HZ, JD, JH	1
				(LIMITED USAGE)							
				(315A2210-2REVA)							
				(REF CMM 78-31-37)							
-135C	MODREF208438		.	CASCADE	INSTL					FW-FZ, GM, GU, HR, HV, HZ, JD, JH	1
				(LIMITED USAGE)							
				(315A2210-2REVB)							
				(REF CMM 78-31-37)							
-135D	MODREF89175		.	CASCADE	INSTL					GE-GH, GP, HC, HT, HX	1
				(LIMITED USAGE)							
				(315A2210-4REVA)							
				(REF CMM 78-31-37)							
-135E	MODREF208440		.	CASCADE	INSTL					GE-GH, GP, HC, HT, HX	1
				(LIMITED USAGE)							
				(315A2210-4REVB)							
				(REF CMM 78-31-37)							
-135F	MODREF304376		.	CASCADE	INSTL					GU	1
				(LIMITED USAGE)							
				(315A2210-2REVC)							
				(REF CMM 78-31-37)							
-135G	MODREF318435		.	CASCADE	INSTL					GV-GX	1
				(LIMITED USAGE)							
				(315A2210-6REVB)							
				(REF CMM 78-31-37)							
-135H	MODREF304378		.	CASCADE	INSTL					HC	1
				(LIMITED USAGE)							
				(315A2210-4REVC)							
				(REF CMM 78-31-37)							
-135J	MODREF318437		.	CASCADE	INSTL					HD-HF	1
				(LIMITED USAGE)							
				(315A2210-8REVB)							
				(REF CMM 78-31-37)							
-135K	MODREF313580		.	CASCADE	INSTL					JM	1
				(LIMITED USAGE)							
				(315A2210-6REVA)							
				(REF CMM 78-31-26)							

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.10

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY
			1	2	3	4	5	6	7		
1-											
-135L	M0DREF353275		.	CASCADE	INSTL					JM	1
				(LIMITED	USAGE)						
				(315A2210-6REVC)							
				(REF CMM 78-31-26)							
-135M	M0DREF313582		.	CASCADE	INSTL					JP	1
				(LIMITED	USAGE)						
				(315A2210-8REVA)							
				(REF CMM 78-31-26)							
-135N	M0DREF353277		.	CASCADE	INSTL					JP	1
				(LIMITED	USAGE)						
				(315A2210-8REVC)							
				(REF CMM 78-31-26)							
-140	315A2130-1		.	BLANKET	INSTL-THRM	INSULATION,				A, F, G, M, CJ, CP, CQ, CV, DF	1
				INNER	WALL						
				(REF CMM 78-31-37)							
-140A	315A2130-1		.	BLANKET	INSTL-THRM	INSULATION,				B, C, E, H, CK, CL, CN, CR	1
				INNER	WALL						
				(REWORK DWG 315A2130-5)							
				(REF CMM 78-31-37)							
-140B	315A2130-3		.	BLANKET	INSTL-THRM	INSULATION,				D, J-L, AC, CM, CS-CU, DL	1
				INNER	WALL						
				(REF CMM 78-31-37)							
-140C	315A2130-7		.	BLANKET	INSTL-REWORK					N-U, W- AB, AD- AF, AM, CW-DC, DE-DK, DM-DP, DV	1
-140D	315A2130-9		.	BLANKET	INSTL-THRM	INSULATION,				AH, AJ, DR, DS	1
				INNER	WALL						
				(REF CMM 78-31-37)							
-140E	315A2130-11		.	BLANKET	INSTL-THRM	INSULATION,				AG	1
				INNER	WALL						
				(REF CMM 78-31-37)							
-140F	315A2130-13		.	BLANKET	INSTL-THRM	INSULATION,				DQ	1
				INNER	WALL						
				(REF CMM 78-31-37)							

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.11

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY
			1	2	3	4	5	6	7		
1-											
-140G	315A2130-15		.							AK, AL, AN, AP	1
-140H	315A2130-15		.							AQ, HG	1
-140J	315A2130-23		.							AQ, HG	1
-140K	315A2130-27		.							AQ, HG	1
-140L	315A2130-17		.							DT, DU, DW, DX	1
-140M	315A2130-17		.							DY, HJ	1
-140N	315A2130-25		.							DY, HJ	1
-140P	315A2130-29		.							DY, HJ	1
-140Q	315A2130-27		.							AR, HL	1
-140R	315A2130-29		.							DZ, HN	1
-140S	M0DREF89132		.							FS, HQ	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.12

Jul 01/2008









## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE	USAGE CODE	UNITS PER ASSY
1- -141J	M0DREF352223		. BLANKET INSTL-THRM INSULATION, INNER WALL (LIMITED USAGE) (315A2130-43REVD) (REF CMM 78-31-26)	JL	1
-141K	M0DREF331248		. BLANKET INSTL-THRM INSULATION, INNER WALL (LIMITED USAGE) (315A2130-45REVA) (REF CMM 78-31-26)	JN	1
-141L	M0DREF333102		. BLANKET INSTL-THRM INSULATION, INNER WALL (LIMITED USAGE) (315A2130-45REVB) (REF CMM 78-31-26)	JN	1
-141M	M0DREF337608		. BLANKET INSTL-THRM INSULATION, INNER WALL (LIMITED USAGE) (315A2130-45REVC) (REF CMM 78-31-26)	JN	1
-141N	M0DREF352225		. BLANKET INSTL-THRM INSULATION, INNER WALL (LIMITED USAGE) (315A2130-45REVD) (REF CMM 78-31-26)	JN	1
-145	315A2130-2		. BLANKET INSTL-THRM INSULATION, INNER WALL (REF CMM 78-31-37)	AS, AX, AY, BD, EA, EF, EG, EM	1
-145A	315A2130-2		. BLANKET INSTL-THRM INSULATION, INNER WALL (REWORK DWG 315A2130-6) (REF CMM 78-31-37)	AT, AU, AW, AZ, EB, EC, EE, EH	1
-145B	315A2130-4		. BLANKET INSTL-THRM INSULATION, INNER WALL (REF CMM 78-31-37)	AV, BA- BC, BU, ED, EJ- EL, FC	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.15

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY		
			1	2	3	4	5	6	7				
1- -145C	315A2130-8		.								BE-BL, BN-BT, BV-BX, CD, EN- EU, EW- FB, FD- FF, FM	1	
-145D	315A2130-10		.								BLANKET INSTL-THRM INSULATION, INNER WALL (REF CMM 78-31-37)	BM, BZ, CA, EV, FH, FJ	1
-145E	315A2130-12		.								BLANKET INSTL-THRM INSULATION, INNER WALL (REF CMM 78-31-37)	BY	1
-145F	315A2130-14		.								BLANKET INSTL-THRM INSULATION, INNER WALL (REF CMM 78-31-37)	FG	1
-145G	315A2130-16		.								BLANKET INSTL-THRM INSULATION, INNER WALL (REF CMM 78-31-37)	CB	1
-145H	315A2130-18		.								BLANKET INSTL-THRM INSULATION, INNER WALL (REF CMM 78-31-37)	FK	1
-145J	315A2130-20		.								BLANKET INSTL-THRM INSULATION, INNER WALL (REF CMM 78-31-37)	CC, CE, CF	1
-145K	315A2130-20		.								BLANKET INSTL-THRM INSULATION, INNER WALL (LIMITED USAGE) (REF CMM 78-31-37)	CG, HH	1
-145L	315A2130-24		.								BLANKET INSTL-THRM INSULATION, INNER WALL (LIMITED USAGE) (REF CMM 78-31-37)	CG, HH	1
-145M	315A2130-28		.								BLANKET INSTL-THRM INSULATION, INNER WALL (LIMITED USAGE) (REF CMM 78-31-37)	CG, HH	1
-145N	315A2130-22		.								BLANKET INSTL-THRM INSULATION, INNER WALL (REF CMM 78-31-37)	FL, FN, FP	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.16

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY
			1	2	3	4	5	6	7		
1-											
-145P	315A2130-22								. BLANKET INSTL-THRM INSULATION, INNER WALL (LIMITED USAGE) (REF CMM 78-31-37)	FQ, HK	1
-145Q	315A2130-26								. BLANKET INSTL-THRM INSULATION, INNER WALL (LIMITED USAGE) (REF CMM 78-31-37)	FQ, HK	1
-145R	315A2130-30								. BLANKET INSTL-THRM INSULATION, INNER WALL (LIMITED USAGE) (REF CMM 78-31-37)	FQ, HK	1
-145S	315A2130-28								. BLANKET INSTL-THRM INSULATION, INNER WALL (REF CMM 78-31-37)	CH, HM	1
-145T	315A2130-30								. BLANKET INSTL-THRM INSULATION, INNER WALL (REF CMM 78-31-37)	FR, HP	1
-145U	MODREF89133								. BLANKET INSTL-THRM INSULATION, INNER WALL (LIMITED USAGE) (315A2130-28REVA) (REF CMM 78-31-37)	FW, HR	1
-145V	MODREF101645								. BLANKET INSTL-THRM INSULATION, INNER WALL (LIMITED USAGE) (315A2130-28REVB) (REF CMM 78-31-37)	FW, HR	1
-145W	MODREF202745								. BLANKET INSTL-THRM INSULATION, INNER WALL (LIMITED USAGE) (315A2130-32REVA) (REF CMM 78-31-37)	FW-FZ, GM, GV, GX, HR, HV, HZ, JD, JH	1
-145X	MODREF204856								. BLANKET INSTL-THRM INSULATION, INNER WALL (LIMITED USAGE) (315A2130-32REVB) (REF CMM 78-31-37)	FW-FZ, GM, GV, GX, HR, HV, HZ, JD, JH	1
-145Y	MODREF89135								. BLANKET INSTL-THRM INSULATION, INNER WALL (LIMITED USAGE) (315A2130-30REVA) (REF CMM 78-31-37)	GE, HT	1

-Item not illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.17

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1- -145Z	M0DREF101643		.							BLANKET INSTL-THRM INSULATION, INNER WALL (LIMITED USAGE) (315A2130-30REVB) (REF CMM 78-31-37)	GE, HT	1
-146	M0DREF202747		.							BLANKET INSTL-THRM INSULATION, INNER WALL (LIMITED USAGE) (315A2130-34REVA) (REF CMM 78-31-37)	GE-GH, GP, HD, HF, HT, HX, JK	1
-146A	M0DREF204858		.							BLANKET INSTL-THRM INSULATION, INNER WALL (LIMITED USAGE) (315A2130-34REVB) (REF CMM 78-31-37)	GE-GH, GP, HD, HF, HT, HX, JK	1
-146B	M0DREF287752		.							BLANKET INSTL-THRM INSULATION, INNER WALL (LIMITED USAGE) (315A2130-32REVC) (REF CMM 78-31-26)	GV, GX	1
-146C	M0DREF313360		.							BLANKET INSTL-THRM INSULATION, INNER WALL (LIMITED USAGE) (315A2130-36REVA) (REF CMM 78-31-26)	GU, GW	1
-146D	M0DREF318787		.							BLANKET INSTL-THRM INSULATION, INNER WALL (LIMITED USAGE) (315A2130-40REVB) (REF CMM 78-31-26)	GU, GW	1
-146E	M0DREF287754		.							BLANKET INSTL-THRM INSULATION, INNER WALL (LIMITED USAGE) (315A2130-34REVC) (REF CMM 78-31-26)	HD, HF	1
-146F	M0DREF313362		.							BLANKET INSTL-THRM INSULATION, INNER WALL (LIMITED USAGE) (315A2130-38REVA) (REF CMM 78-31-26)	HC, HE	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.18

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1- -146G	M0DREF318789		.							BLANKET INSTL-THRM INSULATION, INNER WALL (LIMITED USAGE) (315A2130-42REVB) (REF CMM 78-31-26)	HC, HE	1
-146H	M0DREF331247		.							BLANKET INSTL-THRM INSULATION, INNER WALL (LIMITED USAGE) (315A2130-44REVA) (REF CMM 78-31-26)	JM	1
-146J	M0DREF333101		.							BLANKET INSTL-THRM INSULATION, INNER WALL (LIMITED USAGE) (315A2130-44REVB) (REF CMM 78-31-26)	JM	1
-146K	M0DREF337611		.							BLANKET INSTL-THRM INSULATION, INNER WALL (LIMITED USAGE) (315A2130-44REVC) (REF CMM 78-31-26)	JM	1
-146L	M0DREF352224		.							BLANKET INSTL-THRM INSULATION, INNER WALL (LIMITED USAGE) (315A2130-44REVD) (REF CMM 78-31-26)	JM	1
-146M	M0DREF331249		.							BLANKET INSTL-THRM INSULATION, INNER WALL (LIMITED USAGE) (315A2130-46REVA) (REF CMM 78-31-26)	JP	1
-146N	M0DREF333103		.							BLANKET INSTL-THRM INSULATION, INNER WALL (LIMITED USAGE) (315A2130-46REVB) (REF CMM 78-31-26)	JP	1
-146P	M0DREF337610		.							BLANKET INSTL-THRM INSULATION, INNER WALL (LIMITED USAGE) (315A2130-46REVC) (REF CMM 78-31-26)	JP	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.19

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1- -146P	M0DREF352226		.								JP	1
-150	315A2246-1		.								A-AF, AH, AJ, AM, CJ- DP, DR, DS, DV	1
-150A	315A2246-3		.								AG, AK, AL, AN- AR, HG, HL	1
-150B	315A2246-5		.								DQ, DT, DU, DW- DZ, HJ, HN, JQ	1
-150C	M0DREF89184		.								FS-FV, GL, HQ, HU, HY, JC, JG	1
-150D	M0DREF89186		.								GA-GD, GN, HS, HW, JA, JE, JJ	1
-150E	M0DREF89184		.								GQ-GT, JL	1
-150F	M0DREF304493		.								GQ-GT, JL	1
-150G	M0DREF89186		.								GY-HB, JN	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.20

Jul 01/2008







## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1- -155F	M0DREF304494		.	RUBSTRIP	INSTL-OUTER	WEB,					GU-GX, JM	1
				(LIMITED USAGE)								
				(315A2246-4REVB)								
				(REF CMM 78-31-37)								
-155G	M0DREF89187		.	RUBSTRIP	INSTL-OUTER	WEB,					HC-HF, JP	1
				(LIMITED USAGE)								
				(315A2246-6REVA)								
				(REF CMM 78-31-37)								
-155H	M0DREF304496		.	RUBSTRIP	INSTL-OUTER	WEB,					HC-HF, JP	1
				(LIMITED USAGE)								
				(315A2246-6REVB)								
				(REF CMM 78-31-37)								
-155J	M0DREF371495		.	RUBSTRIP	INSTL-OUTER	WEB,					JM	1
				(LIMITED USAGE)								
				(315A2246-4REVC)								
				(REF CMM 78-31-26)								
-155K	M0DREF371497		.	RUBSTRIP	INSTL-OUTER	WEB,					JP	1
				(LIMITED USAGE)								
				(315A2246-6REVC)								
				(REF CMM 78-31-26)								
-160	315A2303-1		.	CAM	INSTL-ALIGNMENT						A-AF, AH, AJ, AM, CJ- DP, DR, DS, DV	1
				(REF CMM 78-31-37)								
-160A	315A2303-3		.	CAM	INSTL-ALIGNMENT						AG, AK, AL, AN- AR, HG, HL	1
				(REF CMM 78-31-37)								
-160B	315A2303-5		.	CAM	INSTL-ALIGNMENT						DQ, DT, DU, DW- DZ, HJ, HN, JQ	1
				(REF CMM 78-31-37)								
-160C	M0DREF89192		.	CAM	INSTL-ALIGNMENT						FS-FV, HQ, HU, HY, JC	1
				(315A2303-3REVA)								
				(REF CMM 78-31-37)								

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.22

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1-												
-160D	M0DREF89194		.	CAM	INSTL-ALIGNMENT						GA-GD, HS, HW, JA, JE	1
					(315A2303-5REVA)							
					(REF CMM 78-31-37)							
-160E	M0DREF89192		.	CAM	INSTL-ALIGNMENT						GL, GQ- GT, JG, JL	1
					(LIMITED USAGE)							
					(315A2303-3REVA)							
					(REF CMM 78-31-37)							
-160F	M0DREF265242		.	CAM	INSTL-ALIGNMENT						GL, GQ- GT, JG, JL	1
					(LIMITED USAGE)							
					(315A2303-3REVB)							
					(REF CMM 78-31-37)							
-160G	M0DREF89194		.	CAM	INSTL-ALIGNMENT						GN, GY- HB, JJ, JN	1
					(LIMITED USAGE)							
					(315A2303-5REVA)							
					(REF CMM 78-31-37)							
-160H	M0DREF265244		.	CAM	INSTL-ALIGNMENT						GN, GY- HB, JJ, JN	1
					(LIMITED USAGE)							
					(315A2303-5REVB)							
					(REF CMM 78-31-37)							
-165	315A2303-2		.	CAM	INSTL-ALIGNMENT						AS-BX, BZ, CA, CD, EA- FF, FH, FJ, FM	1
					(REF CMM 78-31-37)							
-165A	315A2303-4		.	CAM	INSTL-ALIGNMENT						BY, CB, CC, CE- CH, HH, HM	1
					(REF CMM 78-31-37)							
-165B	315A2303-6		.	CAM	INSTL-ALIGNMENT						FG, FK, FL, FN- FR, HK, HP	1
					(REF CMM 78-31-37)							
-165C	M0DREF89193		.	CAM	INSTL-ALIGNMENT						FW-FZ, HR, HV, HZ, JD	1
					(315A2303-4REVA)							
					(REF CMM 78-31-37)							
-165D	M0DREF89195		.	CAM	INSTL-ALIGNMENT						GE-GH, HT, HX	1
					(315A2303-6REVA)							
					(REF CMM 78-31-37)							
-165E	M0DREF89193		.	CAM	INSTL-ALIGNMENT						GM, GU- GX, JH, JM	1
					(LIMITED USAGE)							
					(315A2303-4REVA)							
					(REF CMM 78-31-37)							

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.23

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1-												
-165F	M0DREF265243		.	CAM	INSTL-ALIGNMENT						GM, GU- GX, JH, JM	1
					(LIMITED USAGE)							
					(315A2303-4REVB)							
					(REF CMM 78-31-37)							
-165G	M0DREF89195		.	CAM	INSTL-ALIGNMENT						GP, HC- HF, JK, JP	1
					(LIMITED USAGE)							
					(315A2303-6REVA)							
					(REF CMM 78-31-37)							
-165H	M0DREF265245		.	CAM	INSTL-ALIGNMENT						GP, HC- HF, JK, JP	1
					(LIMITED USAGE)							
					(315A2303-6REVB)							
					(REF CMM 78-31-37)							
-170	315A2430-3		.	DETAILS	INSTL-FAIRING AND LATCH						A-D, F, G, J-M, AC, CJ- CM, CP, CQ, CS- CV, DL	1
					BEAM							
					(REF CMM 78-31-37)							
-170A	315A2430-5		.	DETAILS	INSTL-REWORK						E, H, N, Q-U, X- AB, AD- AF, AM, CN, CR, CW, CY- DC, DF- DK, DM- DP, DV	1
					(REF CMM 78-31-37)							
-170B	315A2430-7		.	DETAILS	INSTL-FAIRING AND LATCH						P, V, W, AH, AJ, CX, DD, DE, DR, DS	1
					BEAM							
					(REF CMM 78-31-37)							
-170C	315A2430-9		.	DETAILS	INSTL-FAIRING AND LATCH						AG, AK, AL, AN, AP	1
					BEAM							
					(REF CMM 78-31-37)							
-170D	315A2430-9		.	DETAILS	INSTL-FAIRING AND LATCH						AQ, HG	1
					BEAM							
					(LIMITED USAGE)							
					(REF CMM 78-31-37)							
-170E	315A2430-13		.	DETAILS	INSTL-FAIRING AND LATCH						AQ, HG	1
					BEAM							
					(LIMITED USAGE)							
					(REF CMM 78-31-37)							

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.24

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY
			1	2	3	4	5	6	7		
1-											
-170F	315A2430-11		.							DQ, DT, DU, DW, DX	1
-170G	315A2430-11		.							DY, HJ	1
-170H	315A2430-15		.							DY, HJ	1
-170J	315A2430-13		.							AR, HL	1
-170K	315A2430-15		.							DZ, HN, JQ	1
-170L	MODREF89204		.							FS-FV, GL, HQ, HV, HY, JC, JG	1
-170M	MODREF89206		.							GA-GD, GN, HS, HW, JA, JE, JJ	1
-170N	MODREF89204		.							GQ-GT, JL	1
-170P	MODREF308769		.							GQ-GT, JL	1
-170Q	MODREF89206		.							GY-HB, JN	1

-Item not illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.25

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1- -170R	M0DREF308771		.							DETAILS INSTL-FAIRING AND LATCH BEAM (LIMITED USAGE) (315A2430-15REVB) (REF CMM 78-31-37)	GY-HB, JN	1
-170S	M0DREF353017		.							DETAILS INSTL-FAIRING AND LATCH BEAM (LIMITED USAGE) (315A2430-13REVC) (REF CMM 78-31-26)	JL	1
-170T	M0DREF353018		.							DETAILS INSTL-FAIRING AND LATCH BEAM (LIMITED USAGE) (315A2430-15REVC) (REF CMM 78-31-26)	JN	1
-175	315A2430-4		.							DETAILS INSTL-FAIRING AND LATCH BEAM (REF CMM 78-31-37)	AS-AV, AX, AY, BA-BD, BU, EA- ED, EF, EG, EJ- EM, FC	1
-175A	315A2430-6		.							DETAILS INSTL-REWORK (REF CMM 78-31-37)	AW, AZ, BE, BG- BL, BP- BT, BV- BX, CD, EE, EH, EN, EQ- EU, EX- FB, FD- FF, FM	1
-175B	315A2430-8		.							DETAILS INSTL-FAIRING AND LATCH BEAM (REF CMM 78-31-37)	BF, BM, BN, BZ, CA, EP, EV, EW, FH, FJ	1
-175C	315A2430-10		.							DETAILS INSTL-FAIRING AND LATCH BEAM (REF CMM 78-31-37)	BY, CB, CC, CE, CF	1
-175D	315A2430-10		.							DETAILS INSTL-FAIRING AND LATCH BEAM (LIMITED USAGE) (REF CMM 78-31-37)	CG, HH	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.26

Jul 01/2008





## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY		
			1	2	3	4	5	6	7				
1- -175Q	M0DREF89207		.								DETAILS INSTL-FAIRING AND LATCH BEAM (LIMITED USAGE) (315A2430-16REVA) (REF CMM 78-31-37)	HC-HF, JP	1
-175R	M0DREF308772		.								DETAILS INSTL-FAIRING AND LATCH BEAM (LIMITED USAGE) (315A2430-16REVB) (REF CMM 78-31-37)	HC-HF, JP	1
-180	315A2330-3		.								LINER INSTL-HINGE AND LATCH BEAM (REF CMM 78-31-37)	A-AF, AH, AJ, AM, CJ- DP, DR, DS, DV	1
-180A	315A2330-5		.								LINER INSTL-HINGE AND LATCH BEAM (REF CMM 78-31-37)	AG, AK, AL, AN- AR, HG, HL	1
-180B	315A2330-7		.								LINER INSTL-HINGE AND LATCH BEAM (REF CMM 78-31-37)	DQ, DT, DU, DW- DZ, HJ, HN, JQ	1
-180C	M0DREF89196		.								LINER INSTL-HINGE AND LATCH BEAM (315A2330-5REVA) (REF CMM 78-31-37)	FS-FV, GL, GQ- GT, HQ, HU, HY, JC, JG, JL	1
-180D	M0DREF89198		.								LINER INSTL-HINGE AND LATCH BEAM (315A2330-7REVA) (REF CMM 78-31-37)	GA-GD, GN, GY- HB, HS, HW, JA, JE, JJ, JN	1
-185	315A2330-4		.								LINER INSTL-HINGE AND LATCH BEAM (REF CMM 78-31-37)	AS-BX, BZ, CA, CD, EA- FF, FH, FJ, FM	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.28

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY
			1	2	3	4	5	6	7		
1-											
-185A	315A2330-6		.	LINER	INSTL-HINGE	AND	LATCH	BEAM		BY, CB, CC, CE- CH, HH, HM	1
								(REF CMM 78-31-37)			
-185B	315A2330-8		.	LINER	INSTL-HINGE	AND	LATCH	BEAM		FG, FK, FL, FN- FR, HK, HP	1
								(REF CMM 78-31-37)			
-185C	MODREF89197		.	LINER	INSTL-HINGE	AND	LATCH	BEAM		FW-FZ, GM, GU- GX, HR, HV, HZ, JD, JH, JM	1
								(315A2330-6REVA) (REF CMM 78-31-37)			
-185D	MODREF89199		.	LINER	INSTL-HINGE	AND	LATCH	BEAM		GE-GH, GP, HC- HF, HT, HX, JP	1
								(315A2330-8REVA) (REF CMM 78-31-37)			
-190	315A2300-1		.	BEAM	INSTL-HINGE					A-AF, AH, AJ, AM, CJ- DP, DR, DS, DV	1
								(REF CMM 78-31-37)			
-190A	315A2300-3		.	BEAM	INSTL-HINGE					AG, AK, AL, AN, AP	1
								(REF CMM 78-31-37)			
-190B	315A2300-3		.	BEAM	INSTL-HINGE					AQ, HG	1
								(LIMITED USAGE) (REF CMM 78-31-37)			
-190C	315A2300-7		.	BEAM	INSTL-HINGE					AQ, HG	1
								(LIMITED USAGE) (REF CMM 78-31-37)			
-190D	315A2300-5		.	BEAM	INSTL-HINGE					DQ, DT, DU, DW, DX	1
								(REF CMM 78-31-37)			
-190E	315A2300-5		.	BEAM	INSTL-HINGE					DY, HJ	1
								(LIMITED USAGE) (REF CMM 78-31-37)			
-190F	315A2300-9		.	BEAM	INSTL-HINGE					DY, HJ	1
								(LIMITED USAGE) (REF CMM 78-31-37)			

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.29

Jul 01/2008





## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY
			1	2	3	4	5	6	7		
1-											
-190G	315A2300-7		.	BEAM	INSTL-HINGE					AR, HL	1
-190H	315A2300-9		.	BEAM	INSTL-HINGE					DZ, HN, JQ	1
-190J	M0DREF89189		.	BEAM	INSTL-HINGE					FS-FV, GL, GQ- GT, HQ, HU, HY, JC, JG, JL	1
-190K	M0DREF217571		.	BEAM	INSTL-HINGE					FS-FV, GL, GQ- GT, HQ, HU, HY, JC, JG, JL	1
-190L	M0DREF89191		.	BEAM	INSTL-HINGE					GA-GD, GN, GY- HB, HS, HW, JA, JE, JJ, JN	1
-190M	M0DREF217573		.	BEAM	INSTL-HINGE					GA-GD, GN, GY- HB, HS, HW, JA, JE, JJ, JN	1
-190N	M0DREF222017		.	BEAM	INSTL-HINGE					GL, GQ- GT, JG, JL	1
-190P	M0DREF270520		.	BEAM	INSTL-HINGE					GL, GQ- GT, JG, JL	1
-190Q	M0DREF222019		.	BEAM	INSTL-HINGE					GN, GY- HB, JJ, JN	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.30

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1-												
-190R	M0DREF270522		.	BEAM	INSTL-HINGE						GN, GY- HB, JJ, JN	1
					(LIMITED USAGE)							
					(315A2300-9REVD)							
					(REF CMM 78-31-37)							
-195	315A2300-2		.	BEAM	INSTL-HINGE						AS-BX, BZ, CA- CD, EA- FF, FH, FJ, FM	1
					(REF CMM 78-31-37)							
-195A	315A2300-4		.	BEAM	INSTL-HINGE						BY, CB, CC, CE- CH	1
					(REF CMM 78-31-37)							
-195B	315A2300-4		.	BEAM	INSTL-HINGE						CG, HH	1
					(LIMITED USAGE)							
					(REF CMM 78-31-37)							
-195C	315A2300-8		.	BEAM	INSTL-HINGE						CG, HH	1
					(LIMITED USAGE)							
					(REF CMM 78-31-37)							
-195D	315A2300-6		.	BEAM	INSTL-HINGE						FG, FK, FL, FN, FP	1
					(REF CMM 78-31-37)							
-195E	315A2300-6		.	BEAM	INSTL-HINGE						FQ, HK	1
					(LIMITED USAGE)							
					(REF CMM 78-31-37)							
-195F	315A2300-10		.	BEAM	INSTL-HINGE						FQ, HK	1
					(LIMITED USAGE)							
					(REF CMM 78-31-37)							
-195G	315A2300-8		.	BEAM	INSTL-HINGE						CH, HM	1
					(REF CMM 78-31-37)							
-195H	315A2300-10		.	BEAM	INSTL-HINGE						FR, HP	1
					(REF CMM 78-31-37)							
-195J	M0DREF89190		.	BEAM	INSTL-HINGE						FW-FZ, GM, GU- GX, HR, HV, HZ, JD, JH, JM	1
					(LIMITED USAGE)							
					(315A2300-8REVA)							
					(REF CMM 78-31-37)							

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.31

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1- -195K	M0DREF217572		.	BEAM	INSTL-HINGE						FW-FZ, GM, GU- GX, HR, HV, HZ, JD, JH, JM	1
				(LIMITED USAGE)								
				(315A2300-8REVB)								
				(REF CMM 78-31-37)								
-195L	M0DREF89188		.	BEAM	INSTL-HINGE						GE-GH, GP, HC- HF, HT, HX, JP	1
				(LIMITED USAGE)								
				(315A2300-10REVA)								
				(REF CMM 78-31-37)								
-195M	M0DREF217570		.	BEAM	INSTL-HINGE						GE-GH, GP, HC- HF, HT, HX, JP	1
				(LIMITED USAGE)								
				(315A2300-10REVB)								
				(REF CMM 78-31-37)								
-195N	M0DREF222018		.	BEAM	INSTL-HINGE						GM, GU- GX, JH, JM	1
				(LIMITED USAGE)								
				(315A2300-8REVC)								
				(REF CMM 78-31-37)								
-195P	M0DREF270521		.	BEAM	INSTL-HINGE						GM, GU- GX, JH, JM	1
				(LIMITED USAGE)								
				(315A2300-8REVD)								
				(REF CMM 78-31-37)								
-195Q	M0DREF222016		.	BEAM	INSTL-HINGE						GP, HC- HF, JK, JP	1
				(LIMITED USAGE)								
				(315A2300-10REVC)								
				(REF CMM 78-31-37)								
-195R	M0DREF270519		.	BEAM	INSTL-HINGE						GP, HC- HF, JK, JP	1
				(LIMITED USAGE)								
				(315A2300-10REVD)								
				(REF CMM 78-31-37)								
-200	315A2401-1		.	BEAM	INSTL-LATCH						A, B, E- H, M, N, Q, X, CJ, CK, CN- CR, CV, CW, CY, DF	1
				(REF CMM 78-31-37)								
-200A	315A2401-1		.	BEAM	INSTL-LATCH						C, AE, CL, DN	1
				(OPT ITEM 200B)								
				(REF CMM 78-31-37)								
-200B	315A2401-3		.	BEAM	INSTL-LATCH						C, AE, CL, DN	1
				(OPT ITEM 200A)								
				(REF CMM 78-31-37)								

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.32

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1- -200C	315A2401-3		.								D, J-L, R- U, Y-AD, AF, AM, CM, CS- CU, CZ- DC, DG- DM, DP, DV	1
-200D	315A2401-5		.								P, V, W, AH, AJ, CX, DD, DE, DR, DS	1
-200E	315A2401-7		.								AG, AK	1
-200F	315A2401-9		.								DQ, DT	1
-200G	315A2401-11		.								AL, AN- AR, HG, HL	1
-200H	315A2401-13		.								DU, DW- DZ, HJ, HN, JQ	1
-200J	MODREF89200		.								FS-FV, GL, GQ- GT, HQ, HU, HY, JC, JG, JL	1
-200K	MODREF215249		.								FS-FV, GL, GQ- GT, HQ, HU, HY, JC, JG, JL	1
-200L	MODREF89202		.								GA-GD, GN, GY- HB, HS, HW, JA, JE, JJ, JN	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.33

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1-												
-200M	M0DREF215251		.	BEAM	INSTL-LATCH						GA-GD, GN, GY- HB, JG, JN	1
				(LIMITED USAGE)								
				(315A2401-13REVB)								
				(REF CMM 78-31-37)								
-200N	M0DREF222123		.	BEAM	INSTL-LATCH						GL, GQ- GT, JG, JL	1
				(LIMITED USAGE)								
				(315A2401-11REVC)								
				(REF CMM 78-31-37)								
-200P	M0DREF254450		.	BEAM	INSTL-LATCH						GL, GQ- GT, JG, JL	1
				(LIMITED USAGE)								
				(315A2401-11REVD)								
				(REF CMM 78-31-37)								
-200Q	M0DREF270593		.	BEAM	INSTL-LATCH						GL, GQ- GT, JG, JL	1
				(LIMITED USAGE)								
				(315A2401-11REVE)								
				(REF CMM 78-31-37)								
-200R	M0DREF222125		.	BEAM	INSTL-LATCH						GN, GY- HB, JJ, JN	1
				(LIMITED USAGE)								
				(315A2401-13REVC)								
				(REF CMM 78-31-37)								
-200S	M0DREF254452		.	BEAM	INSTL-LATCH						GN, GY- HB, JJ, JN	1
				(LIMITED USAGE)								
				(315A2401-13REVD)								
				(REF CMM 78-31-37)								
-200T	M0DREF270595		.	BEAM	INSTL-LATCH						GN, GY- HB, JJ, JN	1
				(LIMITED USAGE)								
				(315A2401-13REVE)								
				(REF CMM 78-31-37)								
-200U	M0DREF287514		.	BEAM	INSTL-LATCH						GQ-GT, JL	1
				(LIMITED USAGE)								
				(315A2401-11REVF)								
				(REF CMM 78-31-26)								
-200V	M0DREF288632		.	BEAM	INSTL-LATCH						GQ-GT, JL	1
				(LIMITED USAGE)								
				(315A2401-11REVG)								
				(REF CMM 78-31-26)								
-200W	M0DREF292696		.	BEAM	INSTL-LATCH						GQ-GT, JL	1
				(LIMITED USAGE)								
				(315A2401-11REVH)								
				(REF CMM 78-31-26)								

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.34

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1-												
-200X	MODREF287516		.	BEAM	INSTL-LATCH						GY-HB, JN	1
					(LIMITED USAGE)							
					(315A2401-13REVF)							
					(REF CMM 78-31-26)							
-200Y	MODREF288634		.	BEAM	INSTL-LATCH						GY-HB, JN	1
					(LIMITED USAGE)							
					(315A2401-13REVG)							
					(REF CMM 78-31-26)							
-200Z	MODREF292698		.	BEAM	INSTL-LATCH						GY-HB, JN	1
					(LIMITED USAGE)							
					(315A2401-13REVF)							
					(REF CMM 78-31-26)							
-205	315A2401-2		.	BEAM	INSTL-LATCH						AS, AT, AW-AZ, BD, BE, EA, EB, EE-EH, EM, EN	1
					(REF CMM 78-31-37)							
-205A	315A2401-4		.	BEAM	INSTL-LATCH						AU, AV, BA-BC, BG-BL, BP-BX, CD, EC, ED, EJ- EL, EQ- EU, EX- FF, FM	1
					(REF CMM 78-31-37)							
-205B	315A2401-6		.	BEAM	INSTL-LATCH						BF, BM, BN, BZ, CA, EP, EV, EW, FH, FJ	1
					(REF CMM 78-31-37)							
-205C	315A2401-8		.	BEAM	INSTL-LATCH						BY, CB	1
					(REF CMM 78-31-37)							
-205D	315A2401-10		.	BEAM	INSTL-LATCH						FG, FK	1
					(REF CMM 78-31-37)							
-205E	315A2401-12		.	BEAM	INSTL-LATCH						CC, CE- CH, HH, HM	1
					(REF CMM 78-31-37)							
-205F	315A2401-14		.	BEAM	INSTL-LATCH						FL, FN- FR, HK, HP	1
					(REF CMM 78-31-37)							

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.35

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1- -205G	MODREF89201		.	BEAM	INSTL-LATCH						FW-FZ, GM, GU- GX, HR, HV, HZ, JD, JH, JM	1
				(LIMITED USAGE)								
				(315A2401-12REVA)								
				(REF CMM 78-31-37)								
-205H	MODREF215250		.	BEAM	INSTL-LATCH						FW-FZ, GM, GU- GX, HR, HV, HZ, JD, JH, JM	1
				(LIMITED USAGE)								
				(315A2401-12REVB)								
				(REF CMM 78-31-37)								
-205J	MODREF89203		.	BEAM	INSTL-LATCH						GE-GH, GP, GU- GX, HT, HX, JK, JP	1
				(LIMITED USAGE)								
				(315A2401-14REVA)								
				(REF CMM 78-31-37)								
-205K	MODREF215252		.	BEAM	INSTL-LATCH						GE-GH, GP, HC- HF, HT, HX, JK, JP	1
				(LIMITED USAGE)								
				(315A2401-14REVB)								
				(REF CMM 78-31-37)								
-205L	MODREF222124		.	BEAM	INSTL-LATCH						GM, GU- GX, JH, JM	1
				(LIMITED USAGE)								
				(315A2401-12REVC)								
				(REF CMM 78-31-37)								
-205M	MODREF254451		.	BEAM	INSTL-LATCH						GM, GU- GX, JH, JM	1
				(LIMITED USAGE)								
				(315A2401-12REVD)								
				(REF CMM 78-31-37)								
-205N	MODREF270594		.	BEAM	INSTL-LATCH						GM, GU- GX, JH, JM	1
				(LIMITED USAGE)								
				(315A2401-12REVE)								
				(REF CMM 78-31-37)								
-205P	MODREF222126		.	BEAM	INSTL-LATCH						GP, HC- HF, JK, JP	1
				(LIMITED USAGE)								
				(315A2401-14REVC)								
				(REF CMM 78-31-37)								
-205Q	MODREF254453		.	BEAM	INSTL-LATCH						GP, HC- HF, JK, JP	1
				(LIMITED USAGE)								
				(315A2401-14REVD)								
				(REF CMM 78-31-37)								

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.36

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1-												
-205R	M0DREF270596		.	BEAM	INSTL-LATCH						GP, HC- HF, JK, JP	1
				(LIMITED USAGE)								
				(315A2401-14REVE)								
				(REF CMM 78-31-37)								
-205S	M0DREF287515		.	BEAM	INSTL-LATCH						GU-GX, JM	1
				(LIMITED USAGE)								
				(315A2401-12REVF)								
				(REF CMM 78-31-26)								
-205T	M0DREF288633		.	BEAM	INSTL-LATCH						GU-GX, JM	1
				(LIMITED USAGE)								
				(315A2401-12REVG)								
				(REF CMM 78-31-26)								
-205U	M0DREF292697		.	BEAM	INSTL-LATCH						GU-GX, JM	1
				(LIMITED USAGE)								
				(315A2401-12REVF)								
				(REF CMM 78-31-26)								
-205V	M0DREF287517		.	BEAM	INSTL-LATCH						HC-HF, JP	1
				(LIMITED USAGE)								
				(315A2401-14REVF)								
				(REF CMM 78-31-26)								
-205W	M0DREF288635		.	BEAM	INSTL-LATCH						HC-HF, JP	1
				(LIMITED USAGE)								
				(315A2401-14REVG)								
				(REF CMM 78-31-26)								
-205X	M0DREF292699		.	BEAM	INSTL-LATCH						HC-HF, JP	1
				(LIMITED USAGE)								
				(315A2401-14REVF)								
				(REF CMM 78-31-26)								
-210	315A2202-1		.	BOX	INSTL-TORQUE						A-H, K, M, N, Q- S, X-Z, AE, AF, CJ-CR, CT, CV, CW, CY- DA, DF- DH, DN, DP	1
				(REF CMM 78-31-37)								
-210A	315A2202-1		.	BOX	INSTL-TORQUE						L, T, AA, CU, DB, DJ	1
				(ITEM 210B PLUS ITEM 230C PLUS								
				ITEM 220C OPT TO ITEM 210A PLUS								
				ITEM 230B PLUS ITEM 220B)								
				(REF CMM 78-31-37)								

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.37

Jul 01/2008





## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1-												
-210B	315A2202-3		.	BOX	INSL-TORQUE						L, T, AA, CU, DB, DJ	1
-210C	315A2202-3		.	BOX	INSL-TORQUE						J, P, U- W, AB- AD, AM, CS, CX, DC-DE, DK-DM, DV	1
-210D	315A2202-5		.	BOX	INSL-TORQUE						AG	1
-210E	315A2202-7		.	BOX	INSL-TORQUE						DQ	1
-210F	315A2202-9		.	BOX	INSL-TORQUE						AH, AJ, DR, DS	1
-210G	315A2202-11		.	BOX	INSL-TORQUE						AK, AL, AN-AR, GH, HL	1
-210H	315A2202-13		.	BOX	INSL-TORQUE						DT, DU, DW-DZ, HJ, HN, JQ	1
-210J	MODREF89168		.	BOX	INSL-TORQUE						FS-FV, GL, GQ- GT, HQ, HU, HY, JC, JG, JL	1
-210K	MODREF207052		.	BOX	INSL-TORQUE						FS-FV, GL, GQ- GT, HQ, HU, HY, JC, JG, JL	1
-210L	MODREF89170		.	BOX	INSL-TORQUE						GA-GD, GN, GY- HB, HS, HW, JA, JE, JJ, JN	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.38

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1- -210M	MODREF207054		.								GA-GD, GN, GY- HB, HS, HW, JA, JE, JJ, JN	1
-215	315A2202-2		.								AS-AZ, BB, BD, BE, BG- BJ, BP- BR, BW, BX, EA- EH, EK, EM, EN, EQ-ES, EX-EZ, FE, FF	1
-215A	315A2202-2		.								BC, BK, BS, EL, ET, FA	1
-215B	315A2202-4		.								BC, BK, BS, EL, ET, FA	1
-215C	315A2202-4		.								BA, BF, BL-BN, BT-BV, CD, EJ, EP, EU- EW, FB- FD, FM	1
-215D	315A2202-6		.								BY	1
-215E	315A2202-8		.								FG	1
-215F	315A2202-10		.								BZ, CA, FH, FJ	1
-215G	315A2202-12		.								CB, CC, CE-CH, HH, HM	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.39

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1-												
-215H	315A2202-14		.							BOX INSTL-TORQUE (REF CMM 78-31-37)	FK, FL, FN-FR, HK, HP	1
-215J	M0DREF89169		.							BOX INSTL-TORQUE (LIMITED USAGE) (315A2202-12REVA) (REF CMM 78-31-37)	FW-FZ, GM, GU- GX, HR, HV, HZ, JD, JH, JM	1
-215K	M0DREF207053		.							BOX INSTL-TORQUE (LIMITED USAGE) (315A2202-12REVB) (REF CMM 78-31-37)	FW-FZ, GM, GU- GX, HR, HV, HZ, JD, JH, JM	1
-215L	M0DREF89171		.							BOX INSTL-TORQUE (LIMITED USAGE) (315A2202-14REVA) (REF CMM 78-31-37)	GE-GH, GP, HC- HF, HT, HX, JP	1
-215M	M0DREF207055		.							BOX INSTL-TORQUE (LIMITED USAGE) (315A2202-14REVB) (REF CMM 78-31-37)	GE-GH, GP, HC- HF, HT, HX, JP	1
-215N	M0DREF317575		.							BOX INSTL-TORQUE (LIMITED USAGE) (315A2202-12REVC) (REF CMM 78-31-37)	GU-GX, JM	1
-215P	M0DREF317576		.							BOX INSTL-TORQUE (LIMITED USAGE) (315A2202-14REVC) (REF CMM 78-31-37)	HC-HF, JP	1
-220	315A2232-3		.							BOX ASSY-TORQUE (REF CMM 78-31-37)	A-C, E-H, M, N, Q, X, AE, CJ-CL, CN-CR, CV, CW, CY, DF, DN	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.40

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1-												
-220A	315A2232-5		.								D, K, R, S, Y, Z, AF, CM, CT, CZ, DA, DG, DH, DP	1
-220B	315A2232-5		.								L, T, AA, CU, DB, DJ	1
-220C	315A2232-7		.								L, T, A A, CU, DB, DJ	1
-220D	315A2232-7		.								J, P, U- W, AB- AD, AH, AM, CS, CX, DC- DE, DK- DM, DR, DV	1
-220E	315A2232-9		.								AG, AK, AL, AN, AP	1
-220F	315A2232-9		.								AQ, HG	1
-220G	315A2232-15		.								AQ, HG	1
-220H	315A2232-11		.								DQ, DT, DU, DW, DX	1
-220J	315A2232-11		.								DY, HJ	1
-220K	315A2232-17		.								DY, HJ	1

-Item not Illustrated

**78-31-40**

ILLUSTRATED PARTS LIST

Page 1098.41

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1-												
-220L	315A2232-13		.	BOX	ASSY-TORQUE						AJ, DS	1
					(REF CMM 78-31-37)							
-220M	315A2232-15		.	BOX	ASSY-TORQUE						AR, HL	1
					(REF CMM 78-31-37)							
-220N	315A2232-17		.	BOX	ASSY-TORQUE						DZ, HN, JQ	1
					(REF CMM 78-31-37)							
-220P	M0DREF89180		.	BOX	ASSY-TORQUE						FS-FV, HQ, HU, HY, JC	1
					(315A2232-15REVA)							
					(REF CMM 78-31-37)							
-220Q	M0DREF89182		.	BOX	ASSY-TORQUE						GA-GD, HS, HW, JA, JE	1
					(315A2232-17REVA)							
					(REF CMM 78-31-37)							
-220R	M0DREF89180		.	BOX	ASSY-TORQUE						GL, GQ- GT, JG, JL	1
					(LIMITED USAGE)							
					(315A2232-15REVA)							
					(REF CMM 78-31-37)							
-220S	M0DREF281252		.	BOX	ASSY-TORQUE						GL, GQ- GT, JG, JL	1
					(LIMITED USAGE)							
					(315A2232-15REVB)							
					(REF CMM 78-31-37)							
-220T	M0DREF89182		.	BOX	ASSY-TORQUE						GN, GY- HB, JJ, JN	1
					(LIMITED USAGE)							
					(315A2232-17REVA)							
					(REF CMM 78-31-37)							
-220U	M0DREF281254		.	BOX	ASSY-TORQUE						GN, GY- HB, JJ, JN	1
					(LIMITED USAGE)							
					(315A2232-17REVB)							
					(REF CMM 78-31-37)							
-225	315A2232-4		.	BOX	ASSY-TORQUE						AS-AU, AW-AZ, BD, BE, BG, BP, BW, EA- EC, EE- EH, EM, EN, EQ, EX, FE	1
					(REF CMM 78-31-37)							

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.42

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY
			1	2	3	4	5	6	7		
1-											
-225A	315A2232-6		.							AV, BB, BH, BJ, BQ, BR, BX, ED, EK, ER, ES, EY, EZ, FF	1
-225B	315A2232-6		.							BC, BK, BS, EL, ET, FA	1
-225C	315A2232-8		.							BC, BK, BS, EL, ET, FA	1
-225D	315A2232-8		.							BA, BF, BL-BN, BT-BV, BZ, CD, EJ, EP, EU-EW, FB-FD, FH, FM	1
-225E	315A2232-10		.							BY, CB, CC, CE, CF	1
-225F	315A2232-10		.							CG, HH	1
-225G	315A2232-16		.							CG, HH	1
-225H	315A2232-12		.							FG, FH, FL, FN, FP	1
-225J	315A2232-12		.							FQ, HK	1
-225K	315A2232-18		.							FQ, HK	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.43

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY
			1	2	3	4	5	6	7		
1-											
-225L	315A2232-14		.	BOX	ASSY-TORQUE					CA, FJ	1
					(REF CMM 78-31-37)						
-225M	315A2232-16		.	BOX	ASSY-TORQUE					CH, HM	1
					(REF CMM 78-31-37)						
-225N	315A2232-18		.	BOX	ASSY-TORQUE					FR, HP	1
					(REF CMM 78-31-37)						
-225P	M0DREF89181		.	BOX	ASSY-TORQUE					FW-FZ, HR, HV, HZ, JD	1
					(315A2232-16REVA)						
					(REF CMM 78-31-37)						
-225Q	M0DREF89183		.	BOX	ASSY-TORQUE					GE-GH, HT, HX	1
					(315A2232-18REVA)						
					(REF CMM 78-31-37)						
-225R	M0DREF89181		.	BOX	ASSY-TORQUE					GM, GU- GX, JH, JM	1
					(LIMITED USAGE)						
					(315A2232-16REVA)						
					(REF CMM 78-31-37)						
-225S	M0DREF281253		.	BOX	ASSY-TORQUE					GM, GU- GX, JH, JM	1
					(LIMITED USAGE)						
					(315A2232-16REVB)						
					(REF CMM 78-31-37)						
-225T	M0DREF89183		.	BOX	ASSY-TORQUE					GP, HC- HF, JK, JP	1
					(LIMITED USAGE)						
					(315A2232-18REVA)						
					(REF CMM 78-31-37)						
-225U	M0DREF281255		.	BOX	ASSY-TORQUE					GP, HC- HF, JK, JP	1
					(LIMITED USAGE)						
					(315A2232-18REVB)						
					(REF CMM 78-31-37)						
-230	315A2231-1		.	STRUCTURAL	ASSY-TORQUE BOX					A-C, E-H, M, N, Q, X, AE, CJ-CL, CN-CR, CV, CW, CY, DF, DN	1
					(REWORK DWG 315A2270-1)						
					(REF CMM 78-31-37)						
-230A	315A2231-3		.	STRUCTURAL	ASSY-TORQUE BOX					D, K, R, S, Y, Z, AF, CM, CT, CZ, DA, DG, DH, DP	1
					(REF CMM 78-31-37)						

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.44

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1- -230B	315A2231-3		.								L, T, AA, CU, DD, DJ	1
-230C	315A2231-5		.								L, T, AA, CU, DD, DJ	1
-230D	315A2231-5		.								J, P, U- W, AB- AD, AH, AJ, AM, CS, CX, DC-DE, DK-DM, DR, DS, DV	1
-230E	315A2231-7		.								AG	1
-230F	315A2231-9		.								DQ	1
-230G	315A2231-11		.								AK, AL, AN-AR, HG, HL	1
-230H	315A2231-13		.								DT, DU, DW-DZ, HJ, HN, JQ	1
-230J	M0DREF89176		.								FS-FV, HQ, HU, HY, JC	1
-230K	M0DREF89178		.								GA-GD, HS, HW, JA, JE	1
-230L	M0DREF89176		.								GL, GQ- GT, JG, JL	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.45

Jul 01/2008





## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1- -230M	M0DREF274504		.								GL, GQ- GT, JG, JL	1
-230N	M0DREF89178		.								GN, GY- HB, JJ, JN	1
-230P	M0DREF274506		.								GN, GY- HB, JJ, JN	1
-235	315A2231-2		.								AS-AU, AW-AZ, BD, BE, BG, BP, BW, EA- EC, EE- EH, EM, EN, EQ, EX, FE	1
-235A	315A2231-4		.								AV, BB, BH, BJ, BQ, BR, BX, ED, EK, ER, ES, EY, EZ, FF	1
-235B	315A2231-4		.								BC, BK, BS, EL, ET, FA	1
-235C	315A2231-6		.								BC, BK, BS, EL, ET, FA	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.46

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY		
			1	2	3	4	5	6	7				
1- -235D	315A2231-6		.								STRUCTURAL ASSY-TORQUE BOX (REF CMM 78-31-37)	BA, BF, BL-BN, BT-BV, BZ, CA, CD, EJ, EP, EU- EW, FB- FD, FH, FJ, FM	1
-235E	315A2231-8		.								STRUCTURAL ASSY-TORQUE BOX (REF CMM 78-31-37)	BY	1
-235F	315A2231-10		.								STRUCTURAL ASSY-TORQUE BOX (REF CMM 78-31-37)	FG	1
-235G	315A2231-12		.								STRUCTURAL ASSY-TORQUE BOX (REF CMM 78-31-37)	CB, CC, CE-CH, HH, HM	1
-235H	315A2231-14		.								STRUCTURAL ASSY-TORQUE BOX (REF CMM 78-31-37)	FK, FL, FN-FR, HK, HP	1
-235J	M0DREF89177		.								STRUCTURAL ASSY-TORQUE BOX (315A2231-12REVA) (REF CMM 78-31-37)	FW-FZ, HR, HV, HZ, JD	1
-235K	M0DREF89179		.								STRUCTURAL ASSY-TORQUE BOX (315A2231-14REVA) (REF CMM 78-31-37)	GE-GH, HT, HX	1
-235L	M0DREF89177		.								STRUCTURAL ASSY-TORQUE BOX (LIMITED USAGE) (315A2231-12REVA) (REF CMM 78-31-37)	GM, GU- GX, JH, JM	1
-235M	M0DREF274505		.								STRUCTURAL ASSY-TORQUE BOX (LIMITED USAGE) (315A2231-12REVB) (REF CMM 78-31-37)	GM, GU- GX, JH, JM	1
-235N	M0DREF89179		.								STRUCTURAL ASSY-TORQUE BOX (LIMITED USAGE) (315A2231-14REVA) (REF CMM 78-31-37)	GP, HC- HF, JK, JP	1
-235P	M0DREF274507		.								STRUCTURAL ASSY-TORQUE BOX (LIMITED USAGE) (315A2231-14REVB) (REF CMM 78-31-37)	GP, HC- HF, JK, JP	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.47

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1-												
-240	315A2150-1		.	PAD	INSTL-UPR	CPRSN					A-U, W- AF, AM, CJ-DC, DE-DP, DV	1
-240A	315A2150-3		.	PAD	INSTL-UPR	CPRSN					V, AH, AJ, DD, DR, DS	1
-240B	315A2150-5		.	PAD	INSTL-UPR	CPRSN					AG, AK, AL, AN, AP	1
-240C	315A2150-7		.	PAD	INSTL-UPR	CPRSN					DQ, DT, DU, DW, DX	1
-240D	315A2150-9		.	PAD	INSTL-UPR	CPRSN					AQ, HG	1
-240E	315A2150-13		.	PAD	INSTL-UPR	CPRSN					AQ, HG	1
-240F	315A2150-11		.	PAD	INSTL-UPR	CPRSN					DY, HJ	1
-240G	315A2150-15		.	PAD	INSTL-UPR	CPRSN					DY, HJ	1
-240H	315A2150-13		.	PAD	INSTL-UPR	CPRSN					AR, HL	1
-240J	315A2150-15		.	PAD	INSTL-UPR	CPRSN					DZ, HN, JQ	1
-240K	MODREF89136		.	PAD	INSTL-UPR	CPRSN					FS, HQ	1
-240L	MODREF186633		.	PAD	INSTL-UPR	CPRSN					FS, GQ- GT, HQ	1
-240M	MODREF89136		.	PAD	INSTL-UPR	CPRSN					FT, HU	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.48

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1-												
-240N	MODREF186633		.	PAD	INSTL-UPR	CPRSN					FU, FV, GL, HY, JC, JG	1
-240P	MODREF89138		.	PAD	INSTL-UPR	CPRSN					GA, HS	1
-240Q	MODREF186635		.	PAD	INSTL-UPR	CPRSN					GA, GY- HB, HS	1
-240R	MODREF89138		.	PAD	INSTL-UPR	CPRSN					GB, HW	1
-240S	MODREF186635		.	PAD	INSTL-UPR	CPRSN					GC, GD, GN, JA, JE	1
-240T	MODREF321343		.	PAD	INSTL-UPR	CPRSN					GQ-GT	1
-240U	MODREF321345		.	PAD	INSTL-UPR	CPRSN					GY-HB	1
-240V	MODREF330536		.	PAD	INSTL-UPR	CPRSN					JL	1
-240W	MODREF333104		.	PAD	INSTL-UPR	CPRSN					JL	1
-240X	MODREF330538		.	PAD	INSTL-UPR	CPRSN					JN	1
-240Y	MODREF333106		.	PAD	INSTL-UPR	CPRSN					JN	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.49

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1-												
-245	315A2150-2		.	PAD	INSTL-UPR	CPRSN					AS-BL, BN-BX, CD, EA- EU, EW- FF, FM	1
				(REF CMM 78-31-37)								
-245A	315A2150-4		.	PAD	INSTL-UPR	CPRSN					BM, BZ, CA, EV, FH, FJ	1
				(REF CMM 78-31-37)								
-245B	315A2150-6		.	PAD	INSTL-UPR	CPRSN					BY, CB, CC, CE, CF	1
				(REF CMM 78-31-37)								
-245C	315A2150-8		.	PAD	INSTL-UPR	CPRSN					FG, FK, FL, FN, FP	1
				(REF CMM 78-31-37)								
-245D	315A2150-10		.	PAD	INSTL-UPR	CPRSN					CG, HH	1
				(LIMITED USAGE)								
				(REF CMM 78-31-37)								
-245E	315A2150-14		.	PAD	INSTL-UPR	CPRSN					CG, HH	1
				(LIMITED USAGE)								
				(REF CMM 78-31-37)								
-245F	315A2150-12		.	PAD	INSTL-UPR	CPRSN					FQ, HK	1
				(LIMITED USAGE)								
				(REF CMM 78-31-37)								
-245G	315A2150-16		.	PAD	INSTL-UPR	CPRSN					FQ, HK	1
				(LIMITED USAGE)								
				(REF CMM 78-31-37)								
-245H	315A2150-14		.	PAD	INSTL-UPR	CPRSN					CH, HM	1
				(REF CMM 78-31-37)								
-245J	315A2150-16		.	PAD	INSTL-UPR	CPRSN					FR, HP	1
				(REF CMM 78-31-37)								
-245K	MODREF89137		.	PAD	INSTL-UPR	CPRSN					FW, HR	1
				(LIMITED USAGE)								
				(315A2150-14REVA)								
				(REF CMM 78-31-37)								
-245L	MODREF186634		.	PAD	INSTL-UPR	CPRSN					FW, GU- GX, HR	1
				(LIMITED USAGE)								
				(315A2150-18REVA)								
				(REF CMM 78-31-37)								
-245M	MODREF89137		.	PAD	INSTL-UPR	CPRSN					FX, HV	1
				(315A2150-14REVA)								
				(REF CMM 78-31-37)								

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.50

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE	USAGE CODE	UNITS PER ASSY
1-					
-245N	M0DREF186634		. PAD INSTL-UPR CPRSN (315A2150-18REVA) (REF CMM 78-31-37)	FY, FZ, GM, HZ, JD, JH	1
-245P	M0DREF89139		. PAD INSTL-UPR CPRSN (LIMITED USAGE) (315A2150-16REVA) (REF CMM 78-31-37)	GE, HT	1
-245Q	M0DREF186636		. PAD INSTL-UPR CPRSN (LIMITED USAGE) (315A2150-20REVA) (REF CMM 78-31-37)	GE, HC- HF, HT	1
-245R	M0DREF89139		. PAD INSTL-UPR CPRSN (315A2150-16REVA) (REF CMM 78-31-37)	GF	1
-245S	M0DREF186636		. PAD INSTL-UPR CPRSN (315A2150-20REVA) (REF CMM 78-31-37)	GG, GH, GP, HX, JK	1
-245T	M0DREF321344		. PAD INSTL-UPR CPRSN (LIMITED USAGE) (315A2150-18REVE) (REF CMM 78-31-26)	GU-GX	1
-245U	M0DREF321346		. PAD INSTL-UPR CPRSN (LIMITED USAGE) (315A2150-20REVE) (REF CMM 78-31-26)	HC-HF	1
-245V	M0DREF330537		. PAD INSTL-UPR CPRSN (LIMITED USAGE) (315A2150-22REVA) (REF CMM 78-31-26)	JM	1
-245W	M0DREF333105		. PAD INSTL-UPR CPRSN (LIMITED USAGE) (315A2150-22REVB) (REF CMM 78-31-26)	JM	1
-245X	M0DREF330539		. PAD INSTL-UPR CPRSN (LIMITED USAGE) (315A2150-24REVA) (REF CMM 78-31-26)	JP	1
-245Y	M0DREF333107		. PAD INSTL-UPR CPRSN (LIMITED USAGE) (315A2150-24REVB) (REF CMM 78-31-26)	JP	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.51

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1-												
-250	315A2160-1		.	PAD	INSTL-LWR	CPRSN					A-U, W- AF, AM, CJ-DC, DE-DP, DV	1
-250A	315A2160-3		.	PAD	INSTL-LWR	CPRSN					V, AH, AJ, DD, DR, DS	1
-250B	315A2160-5		.	PAD	INSTL-LWR	CPRSN					AG, AK, AL, AN, AP	1
-250C	315A2160-5		.	PAD	INSTL-LWR	CPRSN					AQ, HG	1
						(LIMITED USAGE)						
						(REF CMM 78-31-37)						
-250D	315A2160-9		.	PAD	INSTL-LWR	CPRSN					AQ, HG	1
						(LIMITED USAGE)						
						(REF CMM 78-31-37)						
-250E	315A2160-7		.	PAD	INSTL-LWR	CPRSN					DQ, DT, DU, DW, DX	1
						(REF CMM 78-31-37)						
-250F	315A2160-7		.	PAD	INSTL-LWR	CPRSN					DY, HJ	1
						(LIMITED USAGE)						
						(REF CMM 78-31-37)						
-250G	315A2160-11		.	PAD	INSTL-LWR	CPRSN					DY, HJ	1
						(LIMITED USAGE)						
						(REF CMM 78-31-37)						
-250H	315A2160-9		.	PAD	INSTL-LWR	CPRSN					AR, HL	1
						(REF CMM 78-31-37)						
-250J	315A2160-11		.	PAD	INSTL-LWR	CPRSN					DZ, HN, JQ	1
						(REF CMM 78-31-37)						
-250K	MODREF89143		.	PAD	INSTL-LWR	CPRSN					FS-FV, GL, GQ- GT, HQ, HV, HY, JC, JG, JL	1
						(315A2160-9REVA)						
						(REF CMM 78-31-37)						
-250L	MODREF89141		.	PAD	INSTL-LWR	CPRSN					GA-GD, GN, GY- HB, JN	1
						(315A2160-11REVA)						
						(REF CMM 78-31-37)						

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.52

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1-												
-255	315A2160-2		.	PAD	INSTL-LWR	CPRSN					AS-BL, BN-BX, CD, EA- EU, EW- FF, FM	1
				(REF CMM 78-31-37)								
-255A	315A2160-4		.	PAD	INSTL-LWR	CPRSN					BZ, CA, FH, FJ	1
				(REF CMM 78-31-37)								
-255B	315A2160-6		.	PAD	INSTL-LWR	CPRSN					BY, CB, CC, CE, CF	1
				(REF CMM 78-31-37)								
-255C	315A2160-6		.	PAD	INSTL-LWR	CPRSN					CG, HH	1
				(LIMITED USAGE)								
				(REF CMM 78-31-37)								
-255D	315A2160-10		.	PAD	INSTL-LWR	CPRSN					CG, HH	1
				(LIMITED USAGE)								
				(REF CMM 78-31-37)								
-255E	315A2160-8		.	PAD	INSTL-LWR	CPRSN					BM, BZ, CA, EV, FH, FJ	1
				(REF CMM 78-31-37)								
-255F	315A2160-8		.	PAD	INSTL-LWR	CPRSN					FQ, HK	1
				(LIMITED USAGE)								
				(REF CMM 78-31-37)								
-255G	315A2160-12		.	PAD	INSTL-LWR	CPRSN					FQ, HK	1
				(LIMITED USAGE)								
				(REF CMM 78-31-37)								
-255H	315A2160-10		.	PAD	INSTL-LWR	CPRSN					CH, HM	1
				(REF CMM 78-31-37)								
-255J	315A2160-12		.	PAD	INSTL-LWR	CPRSN					FR, HP	1
				(REF CMM 78-31-37)								
-255K	MODREF89140		.	PAD	INSTL-LWR	CPRSN					FW-FZ, GM, GU- GX, HR, HV, HZ, JD, JH, JM	1
				(315A2160-10REVA)								
				(REF CMM 78-31-37)								
-255L	MODREF89142		.	PAD	INSTL-LWR	CPRSN					GE-GH, GP, HC- HF, HT, HX, JK, JP	1
				(315A2160-12REVA)								
				(REF CMM 78-31-37)								

-Item not Illustrated

**78-31-40**  
ILLUSTRATED PARTS LIST  
Page 1098.53  
Jul 01/2008





## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1- -260	315A2124-1		.								A-AF, AH, AJ, AM, CJ- DP, DR, DS, DV	1
-260A	315A2124-3		.								AG, AK, AL, AN- AR, HG, HL	1
-260B	315A2124-5		.								DQ, DT, DU, DW- DZ, HJ, HN, JQ	1
-260C	M0DREF89128		.								FS-FV, GL, GQ- GT, HQ, HU, HY, JC, JG, JL	1
-260D	M0DREF89130		.								GA-GD, GN, GY- HB, HS, HW, JA, JE, JJ, JN	1
-265	315A2124-2		.								AS-BX, BZ, CA, CD, EA- FF, FH, FJ, FM	1
-265A	315A2124-4		.								BY, CB, CC, CE- CH, HH, HM	1
-265B	315A2124-6		.								FG, FK, FL, FN- FR, HK, HP	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.54

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1- -265C	M0DREF89129		.								FW-FZ, GM, GU- GX, HR, HV, HZ, JD, JH, JM	1
-265D	M0DREF89131		.								GE-GH, GP, HC- HF, HT, HX, JK, JM	1
-270	315A2170-1		.								A-AF, AH, AJ, AM, CJ- DP, DR, DS, DV	1
-270A	315A2170-3		.								AG, AK, AL, AN- AR, HG, HL	1
-270B	315A2170-5		.								DQ, DT, DU, DW- DZ, HJ, HN, JQ	1
-270C	M0DREF89144		.								FS-FV, HQ, HU, HY, JC	1
-270D	M0DREF89146		.								GA-GD, HS, HW, JA, JE	1
-270E	M0DREF89144		.								GL, GQ- GT, JG, JL	1
-270F	M0DREF252029		.								GL, GQ- GT, JG, JL	1
-270G	M0DREF281052		.								GL, GQ- GT, JG, JL	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.55

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1-												
-270H	M0DREF89146		.	FIRESEAL	INSTL						GN, GY- HB, JJ, JN	1
				(LIMITED USAGE)								
				(315A2170-5REVA)								
				(REF CMM 78-31-37)								
-270J	M0DREF252031		.	FIRESEAL	INSTL						GN, GY- HB, JJ, JN	1
				(LIMITED USAGE)								
				(315A2170-5REVB)								
				(REF CMM 78-31-37)								
-270K	M0DREF281054		.	FIRESEAL	INSTL						GN, GY- HB, JJ, JN	1
				(LIMITED USAGE)								
				(315A2170-5REVC)								
				(REF CMM 78-31-37)								
-270L	M0DREF353214		.	FIRESEAL	INSTL						JL	1
				(LIMITED USAGE)								
				(315A2170-3REVD)								
				(REF CMM 78-31-26)								
-270M	M0DREF353216		.	FIRESEAL	INSTL						JN	1
				(LIMITED USAGE)								
				(315A2170-5REVD)								
				(REF CMM 78-31-26)								
-270N	M0DREF357117		.	FIRESEAL	INSTL						JN	1
				(LIMITED USAGE)								
				(315A2170-5REVE)								
				(REF CMM 78-31-26)								
-275	315A2170-2		.	FIRESEAL	INSTL						AS-BX, BZ, CA, CD, EA- FF, FH, FJ, FM	1
				(REF CMM 78-31-37)								
-275A	315A2170-4		.	FIRESEAL	INSTL						BY, CB, CC, CE- CH, HH, HM	1
				(REF CMM 78-31-37)								
-275B	315A2170-6		.	FIRESEAL	INSTL						FG, FK, FL, FN- FR, HK, HP	1
				(REF CMM 78-31-37)								
-275C	M0DREF89145		.	FIRESEAL	INSTL						FW-FZ, HR, HV, HZ, JD	1
				(315A2170-4REVA)								
				(REF CMM 78-31-37)								

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.56

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1-												
-275D	M0DREF89147		.	FIRESEAL	INSTL						GE-GH, HT, HX	1
				(315A2170-6REVA)								
				(REF CMM 78-31-37)								
-275E	M0DREF89145		.	FIRESEAL	INSTL						GM, GU- GX, JH, JM	1
				(LIMITED USAGE)								
				(315A2170-4REVA)								
				(REF CMM 78-31-37)								
-275F	M0DREF252030		.	FIRESEAL	INSTL						GM, GU- GX, JH, JM	1
				(LIMITED USAGE)								
				(315A2170-4REVB)								
				(REF CMM 78-31-37)								
-275G	M0DREF281053		.	FIRESEAL	INSTL						GM, GU- GX, JH, JM	1
				(LIMITED USAGE)								
				(315A2170-4REVC)								
				(REF CMM 78-31-37)								
-275H	M0DREF89147		.	FIRESEAL	INSTL						GP, HC- HF, JK, JP	1
				(LIMITED USAGE)								
				(315A2170-6REVA)								
				(REF CMM 78-31-37)								
-275J	M0DREF252032		.	FIRESEAL	INSTL						GP, HC- HF, JK, JP	1
				(LIMITED USAGE)								
				(315A2170-6REVB)								
				(REF CMM 78-31-37)								
-275K	M0DREF281055		.	FIRESEAL	INSTL						GP, HC- HF, JK, JP	1
				(LIMITED USAGE)								
				(315A2170-6REVC)								
				(REF CMM 78-31-37)								
-275L	M0DREF353215		.	FIRESEAL	INSTL						JM	1
				(LIMITED USAGE)								
				(315A2170-4REVD)								
				(REF CMM 78-31-26)								
-275M	M0DREF353217		.	FIRESEAL	INSTL						JP	1
				(LIMITED USAGE)								
				(315A2170-6REVD)								
				(REF CMM 78-31-26)								
-280	315A2171-1		.	SUPPORT	INSTL-FIRESEAL						A, F, G, CJ, CP, CQ	1
				(REF CMM 78-31-37)								

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.57

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE	USAGE CODE	UNITS PER ASSY
1- -280A	315A2171-3		. SUPPORT INSTL-FIRESEAL (REF CMM 78-31-37)	J, P, U, W, AB- AD, AM, CS-CX, DC, DE, DK-DM, DV	1
-280B	315A2171-5		. REWORK INSTL-FIRESEAL SPRT (REF CMM 78-31-37)	E, H, N, Q-T, X- AA, AE, AF, CN, CR, CW, CY-DB, DF-DJ, DN, DP	1
-280C	315A2171-7		. SUPPORT INSTL-FIRESEAL (REF CMM 78-31-37)	B, M, CK, CV	1
-280D	315A2171-7		. SUPPORT INSTL-FIRESEAL (OPT ITEM 280E) (REF CMM 78-31-37)	C, CL	1
-280E	315A2171-9		. SUPPORT INSTL-FIRESEAL (OPT ITEM 280D) (REF CMM 78-31-37)	C, CL	1
-280F	315A2171-9		. SUPPORT INSTL-FIRESEAL (REF CMM 78-31-37)	D, K, L, CM, CT, CU	1
-280G	315A2171-11		. SUPPORT INSTL-FIRESEAL (REF CMM 78-31-37)	V, AH, AJ, DD, DR, DS	1
-280H	315A2171-13		. SUPPORT INSTL-FIRESEAL (REF CMM 78-31-37)	AG, AK, AL, AN, AP	1
-280J	315A2171-13		. SUPPORT INSTL-FIRESEAL (LIMITED USAGE) (REF CMM 78-31-37)	AQ, HG	1
-280K	315A2171-17		. SUPPORT INSTL-FIRESEAL (LIMITED USAGE) (REF CMM 78-31-37)	AQ, HG	1
-280L	315A2171-21		. SUPPORT INSTL-FIRESEAL (LIMITED USAGE) (REF CMM 78-31-37)	AQ, HG	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.58

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY		
			1	2	3	4	5	6	7				
1-													
-280M	315A2171-15		.								SUPPORT INSTL-FIRESEAL (REF CMM 78-31-37)	DQ, DT, DU, DW, DX	1
-280N	315A2171-15		.								SUPPORT INSTL-FIRESEAL (LIMITED USAGE) (REF CMM 78-31-37)	DY, HJ	1
-280P	315A2171-19		.								SUPPORT INSTL-FIRESEAL (LIMITED USAGE) (REF CMM 78-31-37)	DY, HJ	1
-280Q	315A2171-23		.								SUPPORT INSTL-FIRESEAL (LIMITED USAGE) (REF CMM 78-31-37)	DY, HJ	1
-280R	315A2171-25		.								SUPPORT INSTL-FIRESEAL (LIMITED USAGE) (REF CMM 78-31-37)	AQ, AR, HG, HL	1
-280S	315A2171-27		.								SUPPORT INSTL-FIRESEAL (LIMITED USAGE) (REF CMM 78-31-37)	DY, DZ, HJ, HN	1
-280T	315A2171-29		.								SUPPORT INSTL-FIRESEAL (LIMITED USAGE) (REF CMM 78-31-37)	AR, HL	1
-280U	315A2171-31		.								SUPPORT INSTL-FIRESEAL (LIMITED USAGE) (REF CMM 78-31-37)	DZ, HN	1
-280V	MODREF89148		.								SUPPORT INSTL-FIRESEAL (LIMITED USAGE) (315A2171-25REVA) (REF CMM 78-31-37)	FT, HU	1
-280W	MODREF89152		.								SUPPORT INSTL-FIRESEAL (LIMITED USAGE) (315A2171-29REVA) (REF CMM 78-31-37)	FT, GQ- GT, HU, JL	1
-280X	MODREF89152		.								SUPPORT INSTL-FIRESEAL (315A2171-29REVA) (REF CMM 78-31-37)	FS, FU, FV, GL, HQ, HY, JC, JG	1
-280Y	MODREF89150		.								SUPPORT INSTL-FIRESEAL (LIMITED USAGE) (315A2171-27REVA) (REF CMM 78-31-37)	GB, HW	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.59

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE	USAGE CODE	UNITS PER ASSY
1- -280Z	M0DREF89154		. SUPPORT INSTL-FIRESEAL (LIMITED USAGE) (315A2171-31REVA) (REF CMM 78-31-37)	GB, GY- HB, HW	1
-281	M0DREF89154		. SUPPORT INSTL-FIRESEAL (315A2171-31REVA) (REF CMM 78-31-37)	GA, GC, GD, GN, HS, JA, JE, JJ, JN	1
-281A	M0DREF307412		. SUPPORT INSTL-FIRESEAL (LIMITED USAGE) (315A2171-29REVB) (REF CMM 78-31-26)	GQ-GT, JL	1
-281B	M0DREF307414		. SUPPORT INSTL-FIRESEAL (LIMITED USAGE) (315A2171-31REVB) (REF CMM 78-31-26)	GY-HB, JN	1
-281C	315a2171-31		. SUPPORT INSTL-FIRESEAL (REF CMM 78-31-37)	JQ	1
-285	315A2171-2		. SUPPORT INSTL-FIRESEAL (REF CMM 78-31-37)	AS, AX, AY, EA, EF, EG	1
-285A	315A2171-4		. SUPPORT INSTL-FIRESEAL (REF CMM 78-31-37)	BA, BF, BL, BN, BT-BV, CD, EJ, EP, EU, EW, FB- FD, FM	1
-285B	315A2171-6		. REWORK INSTL-FIRESEAL SPRT (REF CMM 78-31-37)	AW, AZ, BE, BG- BK, BP- BS, BW, BX, EE, EH, EN, EQ-ET, EX-FA, FE, FF	1
-285C	315A2171-8		. SUPPORT INSTL-FIRESEAL (REF CMM 78-31-37)	AT, BD, EB, EM	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.60

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE	USAGE CODE	UNITS PER ASSY
1-					
-285D	315A2171-10		. SUPPORT INSTL-FIRESEAL (REF CMM 78-31-37)	AU, AV, BB, BC, EC, ED, EK, EL	1
-285E	315A2171-12		. SUPPORT INSTL-FIRESEAL (REF CMM 78-31-37)	BM, BZ, CA, EV, FH, FJ	1
-285F	315A2171-14		. SUPPORT INSTL-FIRESEAL (REF CMM 78-31-37)	BY, CB, CC, CE, CF	1
-285G	315A2171-14		. SUPPORT INSTL-FIRESEAL (LIMITED USAGE) (REF CMM 78-31-37)	CG, HH	1
-285H	315A2171-18		. SUPPORT INSTL-FIRESEAL (LIMITED USAGE) (REF CMM 78-31-37)	CG, HH	1
-285J	315A2171-22		. SUPPORT INSTL-FIRESEAL (LIMITED USAGE) (REF CMM 78-31-37)	CG, HH	1
-285K	315A2171-16		. SUPPORT INSTL-FIRESEAL (REF CMM 78-31-37)	FG, FK, FL, FN, FP	1
-285L	315A2171-16		. SUPPORT INSTL-FIRESEAL (LIMITED USAGE) (REF CMM 78-31-37)	FQ, HK	1
-285M	315A2171-20		. SUPPORT INSTL-FIRESEAL (LIMITED USAGE) (REF CMM 78-31-37)	FQ, HK	1
-285N	315A2171-24		. SUPPORT INSTL-FIRESEAL (LIMITED USAGE) (REF CMM 78-31-37)	FQ, HK	1
-285P	315A2171-26		. SUPPORT INSTL-FIRESEAL (LIMITED USAGE) (REF CMM 78-31-37)	CG, CH, HH, HM	1
-285Q	315A2171-28		. SUPPORT INSTL-FIRESEAL (LIMITED USAGE) (REF CMM 78-31-37)	FQ, FR, HK, HP	1
-285R	315A2171-30		. SUPPORT INSTL-FIRESEAL (LIMITED USAGE) (REF CMM 78-31-37)	CH, HM	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.61

Jul 01/2008





## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1-												
-285S	315A2171-32		.	SUPPORT	INSTL-FIRESEAL						FR, HP	1
				(LIMITED USAGE)								
				(REF CMM 78-31-37)								
-285T	M0DREF89149		.	SUPPORT	INSTL-FIRESEAL						FX, HV	1
				(LIMITED USAGE)								
				(315A2171-26REVA)								
				(REF CMM 78-31-37)								
-285U	M0DREF89153		.	SUPPORT	INSTL-FIRESEAL						FX, GU- GX, HV, JM	1
				(LIMITED USAGE)								
				(315A2171-30REVA)								
				(REF CMM 78-31-37)								
-285V	M0DREF89153		.	SUPPORT	INSTL-FIRESEAL						FW, FY, FZ, GL, HR, HZ, JD, JG	1
				(315A2171-30REVA)								
				(REF CMM 78-31-37)								
-285W	M0DREF89151		.	SUPPORT	INSTL-FIRESEAL						GF	1
				(LIMITED USAGE)								
				(315A2171-28REVA)								
				(REF CMM 78-31-37)								
-285X	M0DREF89155		.	SUPPORT	INSTL-FIRESEAL						GF, HC- HF, JP	1
				(LIMITED USAGE)								
				(315A2171-32REVA)								
				(REF CMM 78-31-37)								
-285Y	M0DREF89155		.	SUPPORT	INSTL-FIRESEAL						GE, GG, GH, GP, HT, HX, JK	1
				(315A2171-32REVA)								
				(REF CMM 78-31-37)								
-285Z	M0DREF307413		.	SUPPORT	INSTL-FIRESEAL						GU-GX, JM	1
				(LIMITED USAGE)								
				(315A2171-30REVB)								
				(REF CMM 78-31-26)								
-286	M0DREF307415		.	SUPPORT	INSTL-FIRESEAL						HC-HF, JP	1
				(LIMITED USAGE)								
				(315A2171-32REVB)								
				(REF CMM 78-31-26)								
-290	315A2119-3		.	BLADE	INSTL-V, INNER						A-AF, AH, AJ, AM, CJ- DP, DR, DS, DV	1
				(REF CMM 78-31-37)								
-290A	315A2119-5		.	BLADE	INSTL-V, INNER						AG, AK	1
				(REF CMM 78-31-37)								

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.62

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY
			1	2	3	4	5	6	7		
1-											
-290B	315A2119-7		.							DQ, DT	1
-290C	315A2119-9		.							AL, AN, AP	1
-290D	315A2119-9		.							AQ, HG	1
-290E	315A2119-13		.							AQ, HG	1
-290F	315A2119-11		.							DU, DW, DX	1
-290G	315A2119-11		.							DY, HJ	1
-290H	315A2119-15		.							DY, HJ	1
-290J	315A2119-13		.							AR, HL	1
-290K	315A2119-15		.							DZ, HN, JQ	1
-290L	MODREF89124		.							FS-FV, GL, GQ- GT, HQ, HU, HY, JC, JG, JM	1
-290M	MODREF89126		.							GA-GD, GN, GY- HB, HS, HW, JA, JE, JJ, JN, JP	1
-295	315A2119-4		.							AS-BX, BZ, CA, CD, EA- FF, FH, FJ, FM	1
-295A	315A2119-6		.							BY, CB	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.63

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY
			1	2	3	4	5	6	7		
1-											
-295B	315A2119-8		.	BLADE	INSTL-V,	INNER				FG, FK	1
				(REF	CMM	78-31-37)					
-295C	315A2119-10		.	BLADE	INSTL-V,	INNER				CC, CE, CF	1
				(REF	CMM	78-31-37)					
-295D	315A2119-10		.	BLADE	INSTL-V,	INNER				CG, HH	1
				(LIMITED	USAGE)						
				(REF	CMM	78-31-37)					
-295E	315A2119-14		.	BLADE	INSTL-V,	INNER				CG, HH	1
				(LIMITED	USAGE)						
				(REF	CMM	78-31-37)					
-295F	315A2119-12		.	BLADE	INSTL-V,	INNER				FL, FN, FP	1
				(REF	CMM	78-31-37)					
-295G	315A2119-12		.	BLADE	INSTL-V,	INNER				FQ, HK	1
				(LIMITED	USAGE)						
				(REF	CMM	78-31-37)					
-295H	315A2119-16		.	BLADE	INSTL-V,	INNER				FQ, HK	1
				(LIMITED	USAGE)						
				(REF	CMM	78-31-37)					
-295J	315A2119-14		.	BLADE	INSTL-V,	INNER				CH, HM	1
				(REF	CMM	78-31-37)					
-295K	315A2119-16		.	BLADE	INSTL-V,	INNER				FR, HP	1
				(REF	CMM	78-31-37)					
-295L	MODREF89125		.	BLADE	INSTL-V,	INNER				FW-FZ, GM, GU- GX, HR, HV, HZ, JD, JH	1
				(315A2119-14REVA)							
				(REF	CMM	78-31-37)					
-295M	MODREF89127		.	BLADE	INSTL-V,	INNER				GE-GH, GP, HC- HF, HT, HX, JK	1
				(315A2119-16REVA)							
				(REF	CMM	78-31-37)					
-300	315A2103-5		.	PANEL	INSTL-AFT	COWL				A, F, G, M, Q, X, CJ, CP, CQ, CV, CY, DF	1
				(OPT	ITEM	300A)					
				(REF	CMM	78-31-37)					
-300A	315A2103-11		.	PANEL	INSTL-AFT	COWL				A, F, G, M, Q, X, CJ, CP, CQ, CV, CY, DF	1
				(OPT	ITEM	300)					
				(REF	CMM	78-31-37)					

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.64

Jul 01/2008





## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY													
			1	2	3	4	5	6	7															
1- -300N	M0DREF89116		.	P	A	N	E	L	I	N	S	T	L	-	A	F	T	C	O	W	L		FS-FV, GL, GQ- GT, HQ, HU, HY, JC, JG, JL	1
-300P	M0DREF202736		.	P	A	N	E	L	I	N	S	T	L	-	A	F	T	C	O	W	L		FS-FV, GL, GQ- GT, HQ, HU, HY, JC, JG, JL	1
-300Q	M0DREF89118		.	P	A	N	E	L	I	N	S	T	L	-	A	F	T	C	O	W	L		GA-GD, GN, GY- HB, HS, HW, JA, JE, JJ, JN	1
-300R	M0DREF202738		.	P	A	N	E	L	I	N	S	T	L	-	A	F	T	C	O	W	L		GA-GD, GN, GY- HB, HS, HW, JA, JE, JJ, JN	1
-300S	M0DREF307408		.	P	A	N	E	L	I	N	S	T	L	-	A	F	T	C	O	W	L		GQ-GT, JL	1
-300T	M0DREF307410		.	P	A	N	E	L	I	N	S	T	L	-	A	F	T	C	O	W	L		GY-HB, JN	1
-305	315A2103-6		.	P	A	N	E	L	I	N	S	T	L	-	A	F	T	C	O	W	L		AS, AX, AY, BD, EA, EF, EG, EM	1
-305A	315A2103-12		.	P	A	N	E	L	I	N	S	T	L	-	A	F	T	C	O	W	L		AS, AX, AY, BD, EA, EF, EG, EM	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.66

Jul 01/2008







## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY												
			1	2	3	4	5	6	7														
1-																							
-310B	315A2104-9		.	P	A	N	E	L	A	S	S	Y	-	A	F	T	C	O	W	L		V, AH, AJ, DD, DR, DS	1
-310C	315A2104-11		.	P	A	N	E	L	A	S	S	Y	-	A	F	T	C	O	W	L		AG, AK, AL, AN	1
-310D	315A2104-13		.	P	A	N	E	L	A	S	S	Y	-	A	F	T	C	O	W	L		DQ, DT, DU, DW	1
-310E	315A2104-15		.	P	A	N	E	L	A	S	S	Y	-	A	F	T	C	O	W	L		AP	1
-310F	315A2104-15		.	P	A	N	E	L	A	S	S	Y	-	A	F	T	C	O	W	L		AQ, HG	1
-310G	315A2104-19		.	P	A	N	E	L	A	S	S	Y	-	A	F	T	C	O	W	L		AQ, AR, HG, HL	1
-310H	315A2104-17		.	P	A	N	E	L	A	S	S	Y	-	A	F	T	C	O	W	L		DX	1
-310J	315A2104-17		.	P	A	N	E	L	A	S	S	Y	-	A	F	T	C	O	W	L		DY, HJ	1
-310K	315A2104-21		.	P	A	N	E	L	A	S	S	Y	-	A	F	T	C	O	W	L		DY, DZ, HJ, HN	1
-310L	315A2104-23		.	P	A	N	E	L	A	S	S	Y	-	A	F	T	C	O	W	L		AR, HL	1
-310M	315A2104-25		.	P	A	N	E	L	A	S	S	Y	-	A	F	T	C	O	W	L		DZ, HN	1
-310N	MODREF89120		.	P	A	N	E	L	A	S	S	Y	-	A	F	T	C	O	W	L		FS-FV, GL, GQ- GT, HQ, HU, HY, JC, JG, JL	1
-310P	MODREF202740		.	P	A	N	E	L	A	S	S	Y	-	A	F	T	C	O	W	L		FS-FV, GL, GQ- GT, HQ, HU, HY, JC, JG, JL	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.69

Jul 01/2008





## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY												
			1	2	3	4	5	6	7														
1- -310Q	M0DREF213878		.	P	A	N	E	L	A	S	S	Y	-	A	F	T	C	O	W	L		FS-FV, GL, GQ- GT, HQ, HU, HY, JC, JG, JL	1
-310R	M0DREF89122		.	P	A	N	E	L	A	S	S	Y	-	A	F	T	C	O	W	L		GA-GD, GN, GY- HB, HS, HW, JA, JE, JJ, JN	1
-310S	M0DREF202742		.	P	A	N	E	L	A	S	S	Y	-	A	F	T	C	O	W	L		GA-GD, GN, GY- HB, HS, HW, JA, JE, JJ, JN	1
-310T	M0DREF213880		.	P	A	N	E	L	A	S	S	Y	-	A	F	T	C	O	W	L		GA-GD, GN, GY- HB, HS, HW, JA, JE, JJ, JN	1
-310U	M0DREF282161		.	P	A	N	E	L	A	S	S	Y	-	A	F	T	C	O	W	L		GL, GQ- GT, JG, JL	1
-310V	M0DREF282163		.	P	A	N	E	L	A	S	S	Y	-	A	F	T	C	O	W	L		GN, GY- HB, JJ, JN	1
-310W	315A2104-25		.	P	A	N	E	L	A	S	S	Y	-	A	F	T	C	O	W	L		JL	1
-310X	M0DREF333308		.	P	A	N	E	L	A	S	S	Y	-	A	F	T	C	O	W	L		JQ	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.70

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1- -310Y	MODREF333310		.	PANEL	ASSY-AFT	COWL					JN	1
				(LIMITED	USAGE)							
				(315A2104-25REVE)								
				(REF CMM 78-31-37)								
-315	315A2104-6		.	PANEL	ASSY-AFT	COWL					AS-AZ, BB, BD, BE, BG- BJ, BP- BR, BW, BX, EA- EH, EK, EM, EN, EQ-ES, EX-EZ, FE, FF	1
-315A	315A2104-8		.	PANEL	ASSY-AFT	COWL					BA, BF, BK, BL, BN, BS- BV, CD, EJ, EL, EP, ET, EU, EW, FA-FD, FM	1
-315B	315A2104-10		.	PANEL	ASSY-AFT	COWL					BM, BZ, CA, EV, FH, FJ	1
-315C	315A2104-12		.	PANEL	ASSY-AFT	COWL					BY, CB, CC, CE	1
-315D	315A2104-14		.	PANEL	ASSY-AFT	COWL					FG, FK, FL, FN	1
-315E	315A2104-16		.	PANEL	ASSY-AFT	COWL					CF	1
-315F	315A2104-16		.	PANEL	ASSY-AFT	COWL					CG, HH	1
				(LIMITED	USAGE)							
				(REF CMM 78-31-37)								
-315G	315A2104-20		.	PANEL	ASSY-AFT	COWL					CG, CH, HH, HM	1
				(LIMITED	USAGE)							
				(REF CMM 78-31-37)								
-315H	315A2104-24		.	PANEL	ASSY-AFT	COWL					CH, HM	1
				(LIMITED	USAGE)							
				(REF CMM 78-31-37)								

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.71

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY
			1	2	3	4	5	6	7		
1-											
-315J	315A2104-18		.	PANEL ASSY-AFT COWL (REF CMM 78-31-37)						FP	1
-315K	315A2104-18		.	PANEL ASSY-AFT COWL (LIMITED USAGE) (REF CMM 78-31-37)						FQ, HK	1
-315L	315A2104-22		.	PANEL ASSY-AFT COWL (LIMITED USAGE) (REF CMM 78-31-37)						FQ, FR, HK, HP	1
-315M	315A2104-26		.	PANEL ASSY-AFT COWL (LIMITED USAGE) (REF CMM 78-31-37)						FR, HP	1
-315N	M0DREF89121		.	PANEL ASSY-AFT COWL (LIMITED USAGE) (315A2104-24REVA) (REF CMM 78-31-37)						FW-FZ, GM, GU- GX, HR, HV, HZ, JD, JH, JM	1
-315P	M0DREF202741		.	PANEL ASSY-AFT COWL (LIMITED USAGE) (315A2104-24REVB) (REF CMM 78-31-37)						FW-FZ, GM, GU- GX, HR, HV, HZ, JD, JH, JM	1
-315Q	M0DREF213879		.	PANEL ASSY-AFT COWL (LIMITED USAGE) (315A2104-24REVC) (REF CMM 78-31-37)						FW-FZ, GM, GU- GX, HR, HV, HZ, JD, JH, JM	1
-315R	M0DREF89123		.	PANEL ASSY-AFT COWL (LIMITED USAGE) (315A2104-26REVA) (REF CMM 78-31-37)						GE-GH, GP, HC- HF, HT, HX, JP	1
-315S	M0DREF202743		.	PANEL ASSY-AFT COWL (LIMITED USAGE) (315A2104-26REVB) (REF CMM 78-31-37)						GE-GH, GP, HC- HF, HT, HX, JP	1
-315T	M0DREF213881		.	PANEL ASSY-AFT COWL (LIMITED USAGE) (315A2104-26REVC) (REF CMM 78-31-37)						GE-GH, GP, HC- HF, HT, HX, JP	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.72

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY
			1	2	3	4	5	6	7		
1-											
-315U	M0DREF282162		.	PANEL ASSY-AFT COWL (LIMITED USAGE) (315A2104-24REVD) (REF CMM 78-31-37)						GM, GU- GX, JH, JM	1
-315V	M0DREF282164		.	PANEL ASSY-AFT COWL (LIMITED USAGE) (315A2104-26REVD) (REF CMM 78-31-37)						GP, HC- HF, JK, JP	1
-315W	M0DREF333309		.	PANEL ASSY-AFT COWL (LIMITED USAGE) (315A2104-24REVE) (REF CMM 78-31-37)						JM	1
-315X	M0DREF333311		.	PANEL ASSY-AFT COWL (LIMITED USAGE) (315A2104-26REVE) (REF CMM 78-31-37)						JP	1
-320	315A2178-1		.	STUD INSTL-FAN DUCT (REF CMM 78-31-37)						A, F, G, M, CJ, CP, CQ, CV	1
-320A	315A2178-3		.	STUD INSTL-FAN DUCT (REF CMM 78-31-37)						B, D, K, L, CK, CM, CT, CU	1
-320B	315A2178-1		.	STUD INSTL-FAN DUCT (OPT ITEM 320C) (REF CMM 78-31-37)						C, CL	1
-320C	315A2178-3		.	STUD INSTL-FAN DUCT (OPT ITEM 320B) (REF CMM 78-31-37)						C, CL	1
-320D	315A2178-5		.	STUD INSTL-FAN DUCT, REWORK (REF CMM 78-31-37)						E, H, N, Q-T, X- AA, AE, AF, CN, CR, CW, CY-DB, DF-DJ, DN, DP	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.73

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1- -320E	315A2178-7		.								J, P, U- W, AB- AD, AH, AJ, AM, CS, CX, DC-DE, DK-DM, DR, DS, DV	1
-320F	315A2178-11		.								A, G, AK, AL, AN, AP	1
-320G	315A2178-13		.								DQ, DT, DU, DW, DX	1
-320H	315A2178-15		.								AQ	1
-320J	315A2178-19		.								AQ, HG	1
-320K	315A2178-23		.								AQ, HG	1
-320L	315A2178-17		.								DY, HJ	1
-320M	315A2178-21		.								DY, HJ	1
-320N	315A2178-25		.								DY, HJ	1
-320P	315A2178-27		.								AR, HL	1
-320Q	315A2178-31		.								AR, HL	1
-320R	315A2178-29		.								DZ, HN	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.74

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE	USAGE CODE	UNITS PER ASSY
1-					
-320S	315A2178-33		. WALL ASSY-FAN DUCT (LIMITED USAGE) (REF CMM 78-31-37)	DZ, HN	1
-320T	MODREF89156		. WALL ASSY-FAN DUCT (LIMITED USAGE) (315A2178-27REVA) (REF CMM 78-31-37)	FT, HU	1
-320U	MODREF89160		. WALL ASSY-FAN DUCT (LIMITED USAGE) (315A2178-31REVA) (REF CMM 78-31-37)	FT, HU	1
-320V	MODREF181954		. WALL ASSY-FAN DUCT (315A2178-35REVA) (REF CMM 78-31-37)	FS, FU, FV, HQ, HY, JC	1
-320W	MODREF89158		. WALL ASSY-FAN DUCT (LIMITED USAGE) (315A2178-29REVA) (REF CMM 78-31-37)	GB, HW	1
-320X	MODREF89162		. WALL ASSY-FAN DUCT (LIMITED USAGE) (315A2178-33REVA) (REF CMM 78-31-37)	GB, HW	1
-320Y	MODREF181956		. WALL ASSY-FAN DUCT (315A2178-37REVA) (REF CMM 78-31-37)	GA, GC, GD, HS, JA, JE	1
-320Z	MODREF181954		. WALL ASSY-FAN DUCT (LIMITED USAGE) (315A2178-35REVA) (REF CMM 78-31-37)	GL, GQ- GT, JG	1
-321	MODREF261773		. WALL ASSY-FAN DUCT (LIMITED USAGE) (315A2178-35REVB) (REF CMM 78-31-37)	GL, GQ- GT, JG	1
-321A	MODREF181956		. WALL ASSY-FAN DUCT (LIMITED USAGE) (315A2178-37REVA) (REF CMM 78-31-37)	GN, GY- HB, JJ	1
-321B	MODREF261775		. WALL ASSY-FAN DUCT (LIMITED USAGE) (315A2178-37REVB) (REF CMM 78-31-37)	GN, GY- HB, JJ	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.75

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE	USAGE CODE	UNITS PER ASSY
1-					
-321C	M0DREF325931		. WALL ASSY-FAN DUCT (LIMITED USAGE) (315A2178-35REVC) (REF CMM 78-31-26)	GQ-GT	1
-321D	M0DREF325933		. WALL ASSY-FAN DUCT (LIMITED USAGE) (315A2178-37REVC) (REF CMM 78-31-26)	GY-HB	1
-321E	315A2178-33		. WALL ASSY-FAN DUCT (REF CMM 78-31-37)	JQ	1
-321F	M0DREF330890		. WALL ASSY-FAN DUCT (LIMITED USAGE) (315A2178-39REVA) (REF CMM 78-31-26)	JL	1
-321G	M0DREF333108		. WALL ASSY-FAN DUCT (LIMITED USAGE) (315A2178-39REVB) (REF CMM 78-31-26)	JL	1
-321H	M0DREF337291		. WALL ASSY-FAN DUCT (LIMITED USAGE) (315A2178-39REVC) (REF CMM 78-31-26)	JL	1
-321J	M0DREF330889		. WALL ASSY-FAN DUCT (LIMITED USAGE) (315A2178-41REVA) (REF CMM 78-31-26)	JN	1
-321K	M0DREF333110		. WALL ASSY-FAN DUCT (LIMITED USAGE) (315A2178-41REVB) (REF CMM 78-31-26)	JN	1
-321L	M0DREF337293		. WALL ASSY-FAN DUCT (LIMITED USAGE) (315A2178-41REVC) (REF CMM 78-31-26)	JN	1
-325	315A2178-2		. STUD INSTL-FAN DUCT (REF CMM 78-31-37)	AS, AX, AY, BD, EA, EF, EG, EM	1
-325A	315A2178-4		. STUD INSTL-FAN DUCT (REF CMM 78-31-37)	AT, AV, BB, BC, EB-ED, EK, EL	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.76

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY	
			1	2	3	4	5	6	7			
1- -325B	315A2178-6		.								AW, AZ, BE, BG- BK, BP- BS, BW, BX, EE, EH, EN, EQ-ET, EX-FA, FE, FF	1
-325C	315A2178-8		.								BA, BF, BL-BN, BT-BV, BZ, CA, CD, EJ, EP, EU- EW, FB- FD, FH, FJ, FM	1
-325D	315A2178-12		.								BY, CB, CC, CE, CF	1
-325E	315A2178-14		.								FG, FK, FL, FN, FP	1
-325F	315A2178-16		.								CG, HH	1
-325G	315A2178-20		.								CG, HH	1
-325H	315A2178-24		.								CG, HH	1
-325J	315A2178-18		.								FQ, HK	1
-325K	315A2178-22		.								FQ, HK	1
-325L	315A2178-26		.								FQ, HK	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.77

Jul 01/2008





## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE							USAGE CODE	UNITS PER ASSY
			1	2	3	4	5	6	7		
1-											
-325M	315A2178-28		.	WALL ASSY-FAN DUCT (LIMITED USAGE) (REF CMM 78-31-37)						CH, HM	1
-325N	315A2178-32		.	WALL ASSY-FAN DUCT (LIMITED USAGE) (REF CMM 78-31-37)						CH, HM	1
-325P	315A2178-30		.	WALL ASSY-FAN DUCT (LIMITED USAGE) (REF CMM 78-31-37)						FR, HP	1
-325Q	315A2178-34		.	WALL ASSY-FAN DUCT (LIMITED USAGE) (REF CMM 78-31-37)						FR, HP	1
-325R	M0DREF89157		.	WALL ASSY-FAN DUCT (LIMITED USAGE) (315A2178-28REVA) (REF CMM 78-31-37)						FX, HV	1
-325S	M0DREF89161		.	WALL ASSY-FAN DUCT (LIMITED USAGE) (315A2178-32REVA) (REF CMM 78-31-37)						FX, HV	1
-325T	M0DREF181955		.	WALL ASSY-FAN DUCT (315A2178-36REVA) (REF CMM 78-31-37)						FW, FY, FZ, HR, HZ, JD	1
-325U	M0DREF89159		.	WALL ASSY-FAN DUCT (LIMITED USAGE) (315A2178-30REVA) (REF CMM 78-31-37)						GF	1
-325V	M0DREF89163		.	WALL ASSY-FAN DUCT (LIMITED USAGE) (315A2178-34REVA) (REF CMM 78-31-37)						GF	1
-325W	M0DREF181957		.	WALL ASSY-FAN DUCT (315A2178-38REVA) (REF CMM 78-31-37)						GE, GG, GH, HT, HX	1
-325X	M0DREF181955		.	WALL ASSY-FAN DUCT (LIMITED USAGE) (315A2178-36REVA) (REF CMM 78-31-37)						GM, GU- GX, JH	1
-325Y	M0DREF261774		.	WALL ASSY-FAN DUCT (LIMITED USAGE) (315A2178-36REVB) (REF CMM 78-31-37)						GM, GU- GX, JH	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.78

Jul 01/2008



## COMPONENT MAINTENANCE MANUAL

FIG/ ITEM	PART NUMBER	AIRLINE PART NUMBER	NOMENCLATURE	USAGE CODE	UNITS PER ASSY
1-					
-325Z	M0DREF181957		. WALL ASSY-FAN DUCT (LIMITED USAGE) (315A2178-38REVA) (REF CMM 78-31-37)	GP, HC- HF, JK	1
-326	M0DREF261776		. WALL ASSY-FAN DUCT (LIMITED USAGE) (315A2178-38REVB) (REF CMM 78-31-37)	GP, HC- HF, JK	1
-326A	M0DREF325932		. WALL ASSY-FAN DUCT (LIMITED USAGE) (315A2178-36REVC) (REF CMM 78-31-26)	GU-GX	1
-326B	M0DREF325934		. WALL ASSY-FAN DUCT (LIMITED USAGE) (315A2178-38REVC) (REF CMM 78-31-26)	HC-HF	1
-326C	M0DREF330891		. WALL ASSY-FAN DUCT (LIMITED USAGE) (315A2178-40REVA) (REF CMM 78-31-26)	JM	1
-326D	M0DREF333109		. WALL ASSY-FAN DUCT (LIMITED USAGE) (315A2178-40REVB) (REF CMM 78-31-26)	JM	1
-326E	M0DREF337292		. WALL ASSY-FAN DUCT (LIMITED USAGE) (315A2178-40REVC) (REF CMM 78-31-26)	JM	1
-326F	M0DREF330892		. WALL ASSY-FAN DUCT (LIMITED USAGE) (315A2178-42REVA) (REF CMM 78-31-26)	JP	1
-326G	M0DREF333111		. WALL ASSY-FAN DUCT (LIMITED USAGE) (315A2178-42REVB) (REF CMM 78-31-26)	JP	1
-326H	M0DREF337294		. WALL ASSY-FAN DUCT (LIMITED USAGE) (315A2178-42REVC) (REF CMM 78-31-26)	JP	1

-Item not Illustrated

# 78-31-40

ILLUSTRATED PARTS LIST

Page 1098.79

Jul 01/2008