



737

COMPONENT MAINTENANCE MANUAL

This document has EAR data with Export Control Classification Numbers (ECCN) of:
9E991

Export of this technology is controlled under the United States Export Administration Regulations (EAR) (15 CFR 730-774). An export license may be required before it is used for development, production or use by foreign persons from specific countries. The controller of this data has the individual responsibility to abide by all export laws.

BOEING PROPRIETARY, CONFIDENTIAL, AND/OR TRADE SECRET

Copyright © 1995 The Boeing Company
Unpublished Work - All Rights Reserved

Boeing claims copyright in each page of this document only to the extent that the page contains copyrightable subject matter. Boeing also claims copyright in this document as a compilation and/or collective work.

This document includes proprietary information owned by The Boeing Company and/or one or more third parties. Treatment of the document and the information it contains is governed by contract with Boeing. For more information, contact The Boeing Company, P.O. Box 3707, Seattle, Washington 98124.

Boeing, the Boeing signature, the Boeing symbol, 707, 717, 727, 737, 747, 757, 767, 777, 787, Dreamliner, BBJ, DC-8, DC-9, DC-10, KC-10, KDC-10, MD-10, MD-11, MD-80, MD-88, MD-90, P-8A, Poseidon and the Boeing livery are all trademarks owned by The Boeing Company; and no trademark license is granted in connection with this document unless provided in writing by Boeing.

DOCUMENT D6-17370

PUBLISHED BY BOEING COMMERCIAL AIRPLANES GROUP, SEATTLE, WASHINGTON, USA
A DIVISION OF THE BOEING COMPANY
PAGE DATE: Jul 01/2009



COMPONENT MAINTENANCE MANUAL

All revisions to this manual will be accompanied by transmittal sheet bearing the revision number. Enter the revision number in numerical order, together with the revision date, the date filed and the initials of the person filing.

Revision		Filed		Revision		Filed	
Number	Date	Date	Initials	Number	Date	Date	Initials



COMPONENT MAINTENANCE MANUAL

Revision No. 139

Jul 01/2009

To: All holders of this Boeing Document D6-17370

Attached is the current revision to the Component Maintenance Manual.

The COMPONENT MAINTENANCE MANUAL (CMM) is furnished either as a printed manual, on microfilm, or digital products, or any combination of the three. This revision replaces all previous microfilm cartridges or digital products. All microfilm and digital products are reissued with all obsolete data deleted and all updated pages added.

For printed manuals, changes are indicated on the List of Effective Pages (LEP). The pages which are revised will be identified on the LEP by an R (Revised), A (Added), O (Overflow, i.e. changes to the document structure and/or page layout), or D (Deleted). Each page in the LEP is identified by Chapter-Section-Subject number, page number and page date.

Pages replaced or made obsolete by this revision should be removed and destroyed.

ATTENTION

IF YOU RECEIVE PRINTED REVISIONS, PLEASE VERIFY THAT YOU HAVE RECEIVED AND FILED THE PREVIOUS REVISION. BOEING MUST BE NOTIFIED WITHIN 30 DAYS IF YOU HAVE NOT RECEIVED THE PREVIOUS REVISION. REQUESTS FOR REVISIONS OTHER THAN THE PREVIOUS REVISION WILL REQUIRE A COMPLETE MANUAL REPRINT SUBJECT TO REPRINT CHARGES SHOWN IN THE DATA AND SERVICES CATALOG.

TRANSMITTAL LETTER

Page 1

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

Subject/Page	Date	Subject/Page	Date	Subject/Page	Date
TITLE PAGE		NUMERICAL INDEX/NUMERIC (cont)		NUMERICAL INDEX/NUMERIC (cont)	
O 1	Jul 01/2009	R 14	Jul 01/2009	R 53	Jul 01/2009
2	BLANK	R 15	Jul 01/2009	R 54	Jul 01/2009
REVISION RECORD		R 16	Jul 01/2009	R 55	Jul 01/2009
1	Mar 01/2006	R 17	Jul 01/2009	R 56	Jul 01/2009
2	Mar 01/2006	R 18	Jul 01/2009	R 57	Jul 01/2009
TRANSMITTAL LETTER		R 19	Jul 01/2009	R 58	Jul 01/2009
O 1	Jul 01/2009	R 20	Jul 01/2009	NUMERICAL INDEX/MANUAL	
2	BLANK	R 21	Jul 01/2009	R 1	Jul 01/2009
EFFECTIVE PAGES		R 22	Jul 01/2009	R 2	Jul 01/2009
1 thru 2	Jul 01/2009	R 23	Jul 01/2009	3	Nov 01/2008
EFFECTIVE CHAPTERS		R 24	Jul 01/2009	4	Nov 01/2008
O 1	Jul 01/2009	R 25	Jul 01/2009	R 5	Jul 01/2009
2	BLANK	R 26	Jul 01/2009	R 6	Jul 01/2009
ADDED/DELETED SUBJECTS		R 27	Jul 01/2009	R 7	Jul 01/2009
1	Nov 01/2008	R 28	Jul 01/2009	R 8	Jul 01/2009
2	BLANK	R 29	Jul 01/2009	R 9	Jul 01/2009
INTRODUCTION		R 30	Jul 01/2009	R 10	Jul 01/2009
1	Mar 01/2006	R 31	Jul 01/2009	11	Nov 01/2007
2	Mar 01/2006	R 32	Jul 01/2009	12	Nov 01/2007
3	Mar 01/2007	R 33	Jul 01/2009	R 13	Jul 01/2009
4	Mar 01/2007	R 34	Jul 01/2009	R 14	Jul 01/2009
NUMERICAL INDEX/ALPHA		R 35	Jul 01/2009	R 15	Jul 01/2009
R 1	Jul 01/2009	R 36	Jul 01/2009	R 16	Jul 01/2009
2	BLANK	R 37	Jul 01/2009	R 17	Jul 01/2009
NUMERICAL INDEX/NUMERIC		R 38	Jul 01/2009	R 18	Jul 01/2009
R 1	Jul 01/2009	R 39	Jul 01/2009	19	Mar 01/2008
R 2	Jul 01/2009	R 40	Jul 01/2009	R 20	Jul 01/2009
R 3	Jul 01/2009	R 41	Jul 01/2009	R 21	Jul 01/2009
R 4	Jul 01/2009	R 42	Jul 01/2009	R 22	Jul 01/2009
R 5	Jul 01/2009	R 43	Jul 01/2009	R 23	Jul 01/2009
R 6	Jul 01/2009	R 44	Jul 01/2009	R 24	Jul 01/2009
R 7	Jul 01/2009	R 45	Jul 01/2009	R 25	Jul 01/2009
R 8	Jul 01/2009	R 46	Jul 01/2009	R 26	Jul 01/2009
R 9	Jul 01/2009	R 47	Jul 01/2009	R 27	Jul 01/2009
R 10	Jul 01/2009	R 48	Jul 01/2009	R 28	Jul 01/2009
R 11	Jul 01/2009	R 49	Jul 01/2009	R 29	Jul 01/2009
R 12	Jul 01/2009	R 50	Jul 01/2009	R 30	Jul 01/2009
R 13	Jul 01/2009	R 51	Jul 01/2009	R 31	Jul 01/2009
		R 52	Jul 01/2009	R 32	Jul 01/2009

A = Added, R = Revised, D = Deleted, O = Overflow

EFFECTIVE PAGES

Page 1

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

Subject/Page	Date	Subject/Page	Date	Subject/Page	Date
NUMERICAL INDEX/MANUAL (cont)					
R 33	Jul 01/2009				
R 34	Jul 01/2009				
R 35	Jul 01/2009				
R 36	Jul 01/2009				
R 37	Jul 01/2009				
R 38	Jul 01/2009				
R 39	Jul 01/2009				
R 40	Jul 01/2009				
R 41	Jul 01/2009				
R 42	Jul 01/2009				
R 43	Jul 01/2009				
R 44	Jul 01/2009				
R 45	Jul 01/2009				
R 46	Jul 01/2009				
R 47	Jul 01/2009				
R 48	Jul 01/2009				
R 49	Jul 01/2009				
R 50	Jul 01/2009				
R 51	Jul 01/2009				
R 52	Jul 01/2009				
R 53	Jul 01/2009				
R 54	Jul 01/2009				
R 55	Jul 01/2009				
R 56	Jul 01/2009				
R 57	Jul 01/2009				
R 58	Jul 01/2009				
R 59	Jul 01/2009				
R 60	Jul 01/2009				
R 61	Jul 01/2009				
62	BLANK				

A = Added, R = Revised, D = Deleted, O = Overflow

EFFECTIVE PAGES

Page 2

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

CHAPTER	DATE	TITLE
08	Oct 01/1967	LEVELING AND WEIGHING
R 21	Jul 01/2009	AIR CONDITIONING
R 22	Jul 01/2009	AUTOFLIGHT
R 23	Jul 01/2009	COMMUNICATIONS
24	Aug 10/1974	ELECTRICAL POWER
R 25	Jul 01/2009	EQUIPMENT/FURNISHINGS
R 26	Jul 01/2009	FIRE PROTECTION
R 27	Jul 01/2009	FLIGHT CONTROLS
R 28	Jul 01/2009	FUEL
R 29	Jul 01/2009	HYDRAULIC POWER
R 30	Jul 01/2009	ICE AND RAIN PROTECTION
R 31	Jul 01/2009	INDICATING/RECORDING SYSTEMS
R 32	Jul 01/2009	LANDING GEAR
R 33	Jul 01/2009	LIGHTS
34	Dec 05/1984	NAVIGATION
R 35	Jul 01/2009	OXYGEN
R 36	Jul 01/2009	PNEUMATIC
R 38	Jul 01/2009	WATER/WASTE
R 49	Jul 01/2009	AIRBORNE AUXILIARY POWER
R 52	Jul 01/2009	DOORS
R 54	Jul 01/2009	NACELLES/PYLONS
R 55	Jul 01/2009	STABILIZERS
R 56	Jul 01/2009	WINDOWS
R 57	Jul 01/2009	WINGS
R 71	Jul 01/2009	POWER PLANT
R 76	Jul 01/2009	ENGINE CONTROL
R 78	Jul 01/2009	EXHAUST

A = Added, R = Revised

EFFECTIVE CHAPTERS

Page 1

Jul 01/2009

D6-17370

BOEING PROPRIETARY – Copyright © Unpublished Work – See title page for details



COMPONENT MAINTENANCE MANUAL

Added Subjects

<u>Manual Number</u>	<u>Title</u>
----------------------	--------------

NONE

Deleted Subjects

<u>Manual Number</u>	<u>Title</u>
----------------------	--------------

NONE



COMPONENT MAINTENANCE MANUAL

INTRODUCTION

CAUTION: MAKE SURE THAT YOU DO ALL OF THE STEPS TO THE END OF THE PROCEDURE. LARGE BLANK SPACES CAN OCCUR AT THE BOTTOM OF PAGES WHICH DO NOT ALWAYS INDICATE THAT YOU ARE AT THE END OF THE PROCEDURE. IF YOU DO NOT MAKE SURE THAT YOU COMPLETED THE PROCEDURE, DAMAGE TO EQUIPMENT OR SYSTEM MALFUNCTION COULD OCCUR.

1. General

- A. This Boeing Component Maintenance Manual includes: a Title Page, a Revision Record, a Transmittal Letter, a List of Effective Pages, an Introduction, alphanumeric Indexes, Tab Dividers and sufficient binders to hold all of the printed Boeing proprietary Component Maintenance Manuals that are applicable to the model.
- B. The individual manuals for specific Boeing proprietary items are prepared by the Boeing Commercial Airplanes, Component Maintenance Manual group. The manuals are non-customized and are prepared in accordance with the Air Transport Association of America Specification Number 100, titled "Specification for Manufacturers' Technical Data". Data on supplier items of equipment is supplied directly to the airlines by the equipment manufacturer.
- C. Each component maintenance manual includes: a Title Page, a Revision Record, a Temporary Revision and Service Bulletin Record, a Table of Contents, and an Introduction together with the technical data that is required to maintain the component. This data includes (if applicable): description and operation of the component, testing and fault isolation, disassembly, cleaning, check, repair, assembly, fits and clearances, special tools, and an illustrated parts list. The parts list covers the configuration of the components as delivered on the airplane and as modified by Boeing Service Bulletins. Data on Boeing components is revised in accordance with the applicable purchase agreement between the Boeing Company and the customer. Component maintenance data will be supplied on new components as required.
- D. Some of the procedures in this manual identify tools or equipment. But you can use equivalent alternatives unless the procedure tells you the specified tool or equipment item is mandatory. If you use alternative tools or equipment, make sure that they give the same results and are safe to the parts and personnel as the tools or equipment specified in the procedure.
- E. Component maintenance manuals do not contain data relative to work that is normally performed on the flight line or in the airline maintenance operation. Instructions are given that will permit shop personnel to repair and/or overhaul and fully test repairable assemblies that have been removed from the airplane. Instructions for servicing, removal and installation of these components is provided in the Boeing Aircraft Maintenance Manual.
- F. This manual does not include data that is necessary to repair supplier components. Refer to the Illustrated Parts Catalog to find the applicable supplier part number and CAGE Code. Then go to the OHM/CMM index, document D6-47081, to find the supplier's Overhaul or Component Maintenance Manual.

2. Component Maintenance Manual Identification

- A. The individual proprietary manuals are organized into systems (chapters), subsystems (sections) and units (subjects). Each assembly or component is identified by a separate manual number.



COMPONENT MAINTENANCE MANUAL

- B. Information on all units of a system is identified by a specific reference to that system. Thus, all units that relate to the generation and distribution of electrical power are included in Chapter 24, ELECTRICAL POWER, while electrically-driven pumps and valves servicing the fuel system are included in Chapter 28, FUEL. General information to support component maintenance practices is included in Boeing Document D6-51702, Chapter 20, STANDARD OVERHAUL PRACTICES.
 - C. Each individual component maintenance manual is identified by a three-element, six-digit number. The first element in the three-part number is the chapter number which identifies the functional system to which the manual pertains. The middle element is the section number which groups all related individual manuals, into a subsystem. The last element identifies a specific manual, and identifies and groups all pages that are related to a specific assembly component.
3. How to Locate Information
- A. A Numerical Index is provided to help locate all available component maintenance manuals for Boeing proprietary equipment used on 7x7 airplanes. The index is divided into three parts: The Numerical Index-Alpha lists manuals that are not identified with a specific part number. The manuals are listed alphabetically by the manual's title. The Numerical Index-Numeric lists manuals sequentially by part number. The Numerical Index-Manuals lists manuals sequentially by manual number.
 - B. To find a specific manual, the part number, the name, or the related system of the assembly must be known. To find assemblies that have a specific part number, turn to the Numerical Index-Numeric and find the part number in the PART NUMBER column. When the part number is found, follow across the page to determine the manual's title, manual number, and last revision number and date. If the part number is not listed, the item concerned may be a repairable sub-assembly. In this case, refer to appendix A in Boeing Document D6-47081, "OHM/CMM Index" to find the manual location of these units.
 - C. To find subjects for units which are not identified by a specific part number, turn to the Numerical Index-Alpha to find the name in the TITLE column. When the desired title is found, follow across the page to determine the manuals number and the last revision number and date.
 - D. The Numerical Index-Manuals lists all of the Component Maintenance Manuals that are released against the 7x7 airplane numerically in chapter-section-subject order. This index groups and identifies all manuals released against any ATA system or subsystem. Thus, all manuals having 32-11 as the first four digits of their manual number pertain to the main landing gear components, and those with 32-21 pertain to the nose landing gear components.
4. Revision Service
- A. The Component Maintenance Manual will be kept current by revision service. A list of effective pages will be provided with each revision of each individual CMM. Two revision services will be used to keep the manual current: they are normal and temporary, and are described below.
 - (1) Normal Revision Service
 - (a) Component Maintenance Manual owners who have contracted for continuous normal revision service for this manual will receive revisions three times per year.
 - (b) The pages which are revised will be identified on the List of Effective Pages (LEP) by an R (Revised), A (Added), D (Deleted) or O (Overflow - this is a condition where unchanged data has flowed onto or off of a page due to revisions elsewhere in the document). When a section of a document spans multiple rows in the LEP, a (cont) will be placed next to the title of the section at the top of the row.



COMPONENT MAINTENANCE MANUAL

- (c) On each individual page the revised area is indicated by a revision bar on the left margin.
 - (d) Each page is positively identified by a date in the lower right corner. The LEP carries this information and is to be used as the authority for manual content.
- (2) Temporary Revision Service
- (a) Temporary Revisions (TRs) are used to provide information to the airlines until such time as the information can be included in the affected manual through the normal revision service.
 - (b) TRs are printed on yellow paper and are numbered consecutively, starting with number 1, for each chapter and for each airplane model. For example: a TR is to be issued against CMM 52-36-01. Four TRs have been previously issued for chapter 52 for this model airplane; therefore the TR number assigned for this CMM will be 52-5. Because not all customers receive all CMMs for a given model, not all customers will receive all TRs for a given model. This will cause gaps in the TR numbers that any given customer may receive.
 - (c) Information in the TR is normally incorporated in the next scheduled revision to the affected manual. When the TR is incorporated, the TR number will be added to the TR/SB page in the CMM. A highlight is also added to advise the reader that the TR has been incorporated.
 - (d) Since occasions do arise when the TR cannot be incorporated in the next scheduled revision, please confirm that the TR is included in the manual before you discard the TR.
5. Publications Change Requests
- A. Please send any problems that you find with this manual to Boeing Commercial Airplanes, Maintenance Engineering Technical Services: Attention: Supervisor, Component Maintenance Manuals. Use of the Boeing Publications Change Request (PCR) form is recommended. This form will help with the routing of your problems to the proper Boeing organization. The PCR form should be available at your publications department.
6. Substitution of Standard Parts
- A. Substitution of Standard Parts, such as BACB10A-02; as identified in the Supersession List of the D-590 Parts Standards or SRM 51-40-XX, is acceptable.
7. SPARES Interchangeability Data
- A. SPARES Interchangeability data is available in STEPS, which the operator can access through MyBoeingFleet.com.
8. Illustrated Parts List
- A. Where a part is annotated for "Limited" it indicates that the part is not applicable to all versions of the next higher assembly. In these instances airplane effectivity maybe obtained by reference to the Illustrated Parts Catalog.
 - B. Use of the letter "Y" in place of the "-" identifies a spare or retrofit part identical to the production part except it requires a deviation from the design engineering configuration or definition, for example; to add excess trim on assembly, etc.
 - C. Use of the letter "U" in place of the "-" identifies a spare or retrofit part identical to the production part except without pilot holes.



COMPONENT MAINTENANCE MANUAL

- D. Use of the letter "W" in place of the "-" identifies a spare or retrofit part identical to the production part except a component part such as a Chemical Oxygen Generator, battery, etc., has been omitted for safety reasons.
9. Use of Standard Industry Practices
- A. The use of Standard Industry Practices to repair simple parts is permitted when no specific instructions are given in a CMM. The term "Standard Industry Practices" is defined in the Introduction of Standard Overhaul Practices Manual (SOPM) D6-51702. If the user determines that the use of Standard Industry Practices is insufficient, a request for detailed repair instructions can be made through Boeing Service Engineering.



COMPONENT MAINTENANCE MANUAL

NUMERICAL INDEX/ALPHA

<u>TITLE</u>	<u>MANUAL NUMBER</u>	<u>REV</u>	<u>MANUAL REVISION DATE</u>
APPLICATION AND REPAIR OF BMS 10-102 INSULATIVE COATING	71-00-01	19	Jul 01/2009
AUTOMATIC SPEED BRAKE DRUM MECHANISM/ACTUATOR BUILDUP	27-67-03	3	Dec 05/1989
BALL TRANSFER PANEL GENERAL INFORMATION	25-57-20	2	Jun 01/1997
EXECUTIVE AIRPLANE FURNITURE	25-25-00	0	Jan 05/1978
FIRE RESISTANT HYDRAULIC FLUID	29-00-01	6	Mar 01/1997
FORWARD ENTRY DOOR BODY SIDE TORQUE TUBE BUILDUP	52-46-11	4	Mar 01/2004
INSTRUMENT PANEL ELECTRICAL MODULE GENERAL INFORMATION	31-10-01	8	Jul 01/2000
LANDING GEAR PARTS LUBRICATION FITTING REPLACEMENT	32-00-03	15	Jul 01/2009
MAIN GEAR BUILDUP	32-16-11	83	Nov 01/2008
MISCELLANEOUS AIRPLANE-INTERIOR	25-00-66	15	Jul 01/2009
NOSE GEAR BUILDUP	32-21-38	61	Jul 01/2009
NOSE GEAR BUILDUP	32-26-11	60	Mar 01/2009
PASSENGER SERVICE UNIT OVERHAUL PROCEDURES	25-20-00	20	Mar 01/2004
POSITIVE LOCK FASTENER INSTALLATION (ASP AND MAF FASTENERS)	78-00-08	5	Jul 01/2009
REPAIR OF ALUMINUM FUEL TUBES	28-00-10	8	Jul 01/2009
REPAIR OF HIGH-STRENGTH STEEL LANDING GEAR PARTS	32-00-05	9	Jul 01/2009
REPAIR OF KEVLAR/EPOXY AND GRAPHITE/EPOXY DUCTS	21-20-15	7	Jul 01/2009
REPAIR OF PNEUMATIC DUCTS	36-10-03	58	Jul 01/2009
REPAIR OF POLYCARBONATE DUCTS	21-20-10	6	Jul 01/2009
REPAIR OF POLYURETHANE AND POLYISOCYANURATE DUCTS	36-10-12	8	Jul 01/2009



COMPONENT MAINTENANCE MANUAL

NUMERICAL INDEX/NUMERIC

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
I 001A6103	MAIN GEAR CUSTOMER END ITEM	32-11-16	14	Jul 01/2009
I 001A6200	NOSE LANDING GEAR CUSTOMER END ITEM	32-21-16	15	Jul 01/2009
I 002A0016	ELEVATOR ASSEMBLY AND TAB ASSEMBLY	55-20-17	17	Jul 01/2009
10-61813	737 THRUST REVERSER ASSEMBLY	78-30-12	55	Nov 01/2006
I 110U6011	FUEL TANK ACCESS DOOR ASSEMBLY	28-11-07	20	Jul 01/2009
I 110U6012	FUEL TANK ACCESS DOOR ASSEMBLY	28-11-07	20	Jul 01/2009
I 110U6021	FUEL TANK ACCESS DOOR ASSEMBLY	28-11-07	20	Jul 01/2009
I 110U6022	FUEL TANK ACCESS DOOR ASSEMBLY	28-11-07	20	Jul 01/2009
I 112N6101	FUEL TANK ACCESS DOOR ASSEMBLY	28-11-07	20	Jul 01/2009
I 112N6102	FUEL TANK ACCESS DOOR ASSEMBLY	28-11-07	20	Jul 01/2009
I 112T4607	FUEL TANK ACCESS DOOR ASSEMBLY	28-11-07	20	Jul 01/2009
I 112W6201	FUEL TANK ACCESS DOOR ASSEMBLY	28-11-07	20	Jul 01/2009
I 112W6202	FUEL TANK ACCESS DOOR ASSEMBLY	28-11-07	20	Jul 01/2009
I 112W8201	FUEL TANK ACCESS DOOR ASSEMBLY	28-11-07	20	Jul 01/2009
I 112W8202	FUEL TANK ACCESS DOOR ASSEMBLY	28-11-07	20	Jul 01/2009
I 113A1110	INBOARD AND OUTBOARD FLAP TRACK ASSEMBLY	57-53-03	13	Jul 01/2009
I 113A1120	TRAILING EDGE FLAP COMPONENTS	27-55-79	12	Jul 01/2009
I 113A1150	TRAILING EDGE FLAP COMPONENTS	27-55-79	12	Jul 01/2009
I 113A1160	INBOARD AND OUTBOARD FLAP TRACK ASSEMBLY	57-53-03	13	Jul 01/2009
I 113A1220	TRAILING EDGE FLAP COMPONENTS	27-55-79	12	Jul 01/2009
I 113A1310	INBOARD AND OUTBOARD FLAP TRACK ASSEMBLY	57-53-03	13	Jul 01/2009
I 113A1317	TRAILING EDGE FLAP COMPONENTS	27-55-79	12	Jul 01/2009
I 113A1320	TRAILING EDGE FLAP COMPONENTS	27-55-79	12	Jul 01/2009
I 113A1350	TRAILING EDGE FLAP COMPONENTS	27-55-79	12	Jul 01/2009
I 113A1360	INBOARD AND OUTBOARD FLAP TRACK ASSEMBLY	57-53-03	13	Jul 01/2009
I 113A1510	INBOARD AND OUTBOARD FLAP TRACK ASSEMBLY	57-53-03	13	Jul 01/2009
I 113A1517	TRAILING EDGE FLAP COMPONENTS	27-55-79	12	Jul 01/2009
I 113A1520	TRAILING EDGE FLAP COMPONENTS	27-55-79	12	Jul 01/2009
I 113A1550	TRAILING EDGE FLAP COMPONENTS	27-55-79	12	Jul 01/2009

NUMERICAL INDEX/NUMERIC

Page 1

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
I 113A1560	INBOARD AND OUTBOARD FLAP TRACK ASSEMBLY	57-53-03	13	Jul 01/2009
I 113A1710	INBOARD AND OUTBOARD FLAP TRACK ASSEMBLY	57-53-03	13	Jul 01/2009
I 113A1717	TRAILING EDGE FLAP COMPONENTS	27-55-79	12	Jul 01/2009
I 113A1720	TRAILING EDGE FLAP COMPONENTS	27-55-79	12	Jul 01/2009
I 113A1750	TRAILING EDGE FLAP COMPONENTS	27-55-79	12	Jul 01/2009
I 113A1760	INBOARD AND OUTBOARD FLAP TRACK ASSEMBLY	57-53-03	13	Jul 01/2009
I 113A2002	INBOARD FLAP FLAP ASSEMBLY	57-53-04	11	Jul 01/2009
I 113A2100	INBOARD FLAP MAIN FLAP FINAL ASSEMBLY	57-53-05	12	Jul 01/2009
I 113A2610	TE FLAP DRIVE COMPONENTS	27-55-66	10	Jul 01/2009
I 113A2612	TE FLAP DRIVE COMPONENTS	27-55-66	10	Jul 01/2009
I 113A2620	TE FLAP DRIVE COMPONENTS	27-55-66	10	Jul 01/2009
I 113A2630	TE FLAP DRIVE COMPONENTS	27-55-66	10	Jul 01/2009
I 113A2700	AFT INBOARD FLAP FLAP ASSEMBLY	57-53-09	11	Jul 01/2009
I 113A2800	INBOARD FLAP INBOARD CARRIAGE ASSEMBLY	27-55-71	10	Jul 01/2009
I 113A2850	INBOARD FLAP OUTBOARD CARRIAGE ASSEMBLY	27-55-72	9	Jul 01/2009
I 113A3002	OUTBOARD TRAILING EDGE FLAP ASSEMBLY	57-53-06	12	Jul 01/2009
I 113A3100	OUTBOARD TRAILING EDGE FLAP MAIN FLAP ASSEMBLY	57-53-07	13	Jul 01/2009
I 113A3700	AFT OUTBOARD TRAILING EDGE FLAP ASSEMBLY	57-53-08	13	Jul 01/2009
I 113A3800	OUTBOARD TRAILING EDGE FLAP OUTBOARD CARRIAGE ASSEMBLY	27-55-73	11	Jul 01/2009
I 113A3850	OUTBOARD TRAILING EDGE FLAP INBOARD CARRIAGE ASSEMBLY	27-55-74	9	Jul 01/2009
I 113A4100	OUTBOARD GROUND SPOILER ASSEMBLY NO. 1 AND 12	57-56-63	7	Jul 01/2009
I 113A4200	FLIGHT SPOILER ASSEMBLY NO. 2 AND 11	57-56-53	8	Jul 01/2009
I 113A4300	FLIGHT SPOILER ASSEMBLY NO. 3 AND 10	57-56-54	7	Jul 01/2009
I 113A4400	FLIGHT SPOILER ASSEMBLY NO. 4 AND 9	57-56-55	7	Jul 01/2009
I 113A4500	FLIGHT SPOILER ASSEMBLY NO. 5 AND 8	57-56-56	8	Jul 01/2009
I 113A4600	NO. 6 AND 7 INBOARD GROUND SPOILER ASSEMBLY	57-56-64	9	Jul 01/2009

NUMERICAL INDEX/NUMERIC

Page 2

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
I 113A7002	AILERON AND TAB ASSEMBLY	57-50-26	9	Jul 01/2009
I 113A8100	MAIN LANDING GEAR DOOR COMPONENTS	32-13-23	12	Jul 01/2009
I 113A8200	MAIN LANDING GEAR DOOR COMPONENTS	32-13-23	12	Jul 01/2009
I 113A8331	MAIN LANDING GEAR DOOR COMPONENTS	32-13-23	12	Jul 01/2009
I 113A8500	MAIN LANDING GEAR DOOR COMPONENTS	32-13-23	12	Jul 01/2009
I 113A8600	MAIN LANDING GEAR DOOR COMPONENTS	32-13-23	12	Jul 01/2009
I 113A9104	FAIRING FLAP SUPPORT INSTALLATION COMPONENTS	57-26-47	11	Jul 01/2009
I 113A9105	FAIRING FLAP SUPPORT INSTALLATION COMPONENTS	57-26-47	11	Jul 01/2009
I 113A9106	FAIRING FLAP SUPPORT INSTALLATION COMPONENTS	57-26-47	11	Jul 01/2009
I 113A9204	FAIRING FLAP SUPPORT INSTALLATION COMPONENTS	57-26-47	11	Jul 01/2009
I 113A9205	FAIRING FLAP SUPPORT INSTALLATION COMPONENTS	57-26-47	11	Jul 01/2009
I 113A9206	FAIRING FLAP SUPPORT INSTALLATION COMPONENTS	57-26-47	11	Jul 01/2009
I 113A9207	FAIRING FLAP SUPPORT INSTALLATION COMPONENTS	57-26-47	11	Jul 01/2009
I 113A9304	FAIRING FLAP SUPPORT INSTALLATION COMPONENTS	57-26-47	11	Jul 01/2009
I 113A9305	FAIRING FLAP SUPPORT INSTALLATION COMPONENTS	57-26-47	11	Jul 01/2009
I 113A9306	FAIRING FLAP SUPPORT INSTALLATION COMPONENTS	57-26-47	11	Jul 01/2009
I 113A9307	FAIRING FLAP SUPPORT INSTALLATION COMPONENTS	57-26-47	11	Jul 01/2009
I 114A1110	NO. 1 AND 4 KRUEGER FLAP AND BULLNOSE ASSEMBLY	57-56-33	9	Jul 01/2009
I 114A1220	NO. 2 AND 3 KRUEGER FLAP AND BULLNOSE ASSEMBLY	57-56-44	14	Jul 01/2009
I 114A5010	WING LEADING EDGE NO. 1 AND 8 SLAT ASSEMBLY	57-43-01	13	Jul 01/2009
I 114A5020	WING LEADING EDGE NO. 2 AND 7 SLAT ASSEMBLY	57-43-02	12	Jul 01/2009
I 114A5030	WING LEADING EDGE NO. 3 AND 6 SLAT ASSEMBLY	57-43-03	13	Jul 01/2009

NUMERICAL INDEX/NUMERIC

Page 3

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
I 114A5040	WING LEADING EDGE NO. 4 AND 5 SLAT ASSEMBLY	57-43-04	11	Jul 01/2009
I 115A1100	MAIN LANDING GEAR BEAM INSTALLATION COMPONENTS	57-15-01	16	Jul 01/2009
I 115A1210	MAIN LANDING GEAR BEAM INSTALLATION COMPONENTS	57-15-01	16	Jul 01/2009
I 115A1220	MAIN LANDING GEAR BEAM INSTALLATION COMPONENTS	57-15-01	16	Jul 01/2009
I 115A1310	MAIN LANDING GEAR BEAM INSTALLATION COMPONENTS	57-15-01	16	Jul 01/2009
I 115A1320	MAIN LANDING GEAR BEAM INSTALLATION COMPONENTS	57-15-01	16	Jul 01/2009
I 115A1500	MAIN LANDING GEAR BEAM INSTALLATION COMPONENTS	57-15-01	16	Jul 01/2009
I 115A1610	MAIN LANDING GEAR BEAM INSTALLATION COMPONENTS	57-15-01	16	Jul 01/2009
I 115A1630	MAIN LANDING GEAR BEAM INSTALLATION COMPONENTS	57-15-01	16	Jul 01/2009
I 115A1640	MAIN LANDING GEAR BEAM INSTALLATION COMPONENTS	57-15-01	16	Jul 01/2009
I 115A5002	MAIN LANDING GEAR BEAM INSTALLATION COMPONENTS	57-15-01	16	Jul 01/2009
I 115A5005	MAIN LANDING GEAR BEAM INSTALLATION COMPONENTS	57-15-01	16	Jul 01/2009
I 115A5300	MAIN LANDING GEAR BEAM INSTALLATION COMPONENTS	57-15-01	16	Jul 01/2009
I 140N2139	PASSENGER WINDOW ASSEMBLY AND PASSENGER WINDOW PLUG ASSEMBLY	56-21-51	21	Jul 01/2009
I 140N2312	PASSENGER WINDOW ASSEMBLY AND PASSENGER WINDOW PLUG ASSEMBLY	56-21-51	21	Jul 01/2009
I 141A4810	SLIDING WINDSHIELD ASSEMBLY	56-10-02	18	Jul 01/2009
I 141A6075	FORWARD ENTRY DOOR GUIDE ARM ASSEMBLY	52-17-05	13	Jul 01/2009
I 141A6081	FORWARD ENTRY DOOR GUIDE ARM ASSEMBLY	52-17-05	13	Jul 01/2009
I 141A6100	FORWARD ENTRY DOOR ASSEMBLY	52-16-12	10	Jul 01/2009
I 141A6105	PASSENGER DOOR SNUBBER ASSEMBLY	52-11-09	13	Jul 01/2009
I 141A6150	FORWARD ENTRY DOOR ASSEMBLY	52-16-12	10	Jul 01/2009

NUMERICAL INDEX/NUMERIC

Page 4

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
I 141A6270	FORWARD ENTRY DOOR BODY SIDE TORQUE TUBE BUILDUP	52-11-13	6	Jul 01/2009
I 141A6402	FORWARD AIRSTAIR DOOR ASSEMBLY	52-61-02	7	Jul 01/2009
I 141A6510	FORWARD GALLEY DOOR BODY SIDE TORQUE TUBE ASSEMBLY	52-41-06	7	Jul 01/2009
I 141A6516	FORWARD GALLEY DOOR ASSEMBLY	52-41-05	11	Jul 01/2009
I 141A6710	EQUIPMENT ACCESS DOOR ASSEMBLY	52-48-13	10	Jul 01/2009
I 141A6802	FORWARD ACCESS DOOR ASSEMBLY	52-48-01	9	Jul 01/2009
I 141A6902	NOSE WHEEL WELL DOOR ASSEMBLY	32-22-37	12	Jul 01/2009
I 142A6000	MAIN DECK CARGO DOOR ASSEMBLY	52-36-64	7	Jul 01/2009
I 143A6110	FORWARD CARGO DOOR ASSEMBLY	52-31-15	9	Jul 01/2009
I 144A6505	AUTOMATIC OVERWING EXIT DOOR ASSEMBLY	52-26-07	14	Jul 01/2009
I 144A6631	OVERWING EXIT COUNTERBALANCE MECHANISM ASSEMBLY	52-26-09	11	Jul 01/2009
I 146A6110	AFT CARGO DOOR ASSEMBLY	52-31-14	12	Jul 01/2009
I 146A6200	MID EXIT DOOR ASSEMBLY	52-21-03	5	Jul 01/2009
I 146A6516	Flight Lock Assembly	52-21-04	5	Jul 01/2009
I 147A6112	AFT ENTRY/AFT GALLEY BODY SIDE TORQUE TUBE ASSEMBLY	52-13-13	10	Jul 01/2009
I 147A6116	AFT ENTRY DOOR ASSEMBLY	52-16-15	14	Jul 01/2009
I 147A6502	AFT GALLEY DOOR ASSEMBLY	52-41-04	8	Jul 01/2009
I 148A6110	ACCESS AND BLOWOUT DOOR ASSEMBLY	52-49-13	8	Jul 01/2009
I 148A6350	AUXILIARY POWER UNIT DOOR ASSEMBLY	52-46-12	9	Jul 01/2009
I 148A7201	TAIL SKID INSTALLATION	32-71-15	8	Jul 01/2009
I 161A0101	MAIN LANDING GEAR INSTALLATION COMPONENTS	32-11-09	13	Jul 01/2009
I 161A1100	MAIN LANDING GEAR COMPONENT ASSEMBLY	32-11-12	24	Jul 01/2009
I 161A1191	MAIN LANDING GEAR INSTALLATION COMPONENTS	32-11-09	13	Jul 01/2009
I 161A1192	MAIN LANDING GEAR INSTALLATION COMPONENTS	32-11-09	13	Jul 01/2009
I 161A2100	MAIN LANDING GEAR SIDE STRUT ASSEMBLY	32-11-13	18	Jul 01/2009
I 161A2125	MAIN LANDING GEAR INSTALLATION COMPONENTS	32-11-09	13	Jul 01/2009
I 161A2318	MAIN LANDING GEAR INSTALLATION COMPONENTS	32-11-09	13	Jul 01/2009

NUMERICAL INDEX/NUMERIC

Page 5

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
I 161A2330	MAIN LANDING GEAR INSTALLATION COMPONENTS	32-11-09	13	Jul 01/2009
I 161A2331	MAIN LANDING GEAR INSTALLATION COMPONENTS	32-11-09	13	Jul 01/2009
I 161A2332	MAIN LANDING GEAR INSTALLATION COMPONENTS	32-11-09	13	Jul 01/2009
I 161A2333	MAIN LANDING GEAR INSTALLATION COMPONENTS	32-11-09	13	Jul 01/2009
I 161A6100	MAIN LANDING GEAR UPLOCK ASSEMBLY	32-32-34	13	Jul 01/2009
I 161A7000	MAIN LANDING GEAR WALKING BEAM COMPONENTS	32-32-27	10	Jul 01/2009
I 161A7100	MAIN LANDING GEAR WALKING BEAM COMPONENTS	32-32-27	10	Jul 01/2009
I 161A7119	MAIN LANDING GEAR WALKING BEAM COMPONENTS	32-32-27	10	Jul 01/2009
I 161A7301	MAIN LANDING GEAR WALKING BEAM COMPONENTS	32-32-27	10	Jul 01/2009
I 161A7303	MAIN LANDING GEAR WALKING BEAM COMPONENTS	32-32-27	10	Jul 01/2009
I 161A7304	MAIN LANDING GEAR WALKING BEAM COMPONENTS	32-32-27	10	Jul 01/2009
I 162A0301	NOSE LANDING GEAR INSTALLATION COMPONENTS	32-21-07	12	Jul 01/2009
I 162A0302	NOSE LANDING GEAR INSTALLATION COMPONENTS	32-21-07	12	Jul 01/2009
I 162A1100	NOSE LANDING GEAR COMPONENT ASSEMBLY	32-21-12	28	Jul 01/2009
I 162A2100	NOSE LANDING GEAR DRAG STRUT ASSEMBLY	32-21-22	18	Jul 01/2009
I 162A2118	NOSE LANDING GEAR INSTALLATION COMPONENTS	32-21-07	12	Jul 01/2009
I 162A2301	NOSE LANDING GEAR INSTALLATION COMPONENTS	32-21-07	12	Jul 01/2009
I 162A2302	NOSE LANDING GEAR INSTALLATION COMPONENTS	32-21-07	12	Jul 01/2009
I 162A3100	NOSE LANDING GEAR DOOR MECHANISM ASSEMBLY	32-22-11	11	Jul 01/2009
I 163A0001	TAIL SKID INSTALLATION	32-71-16	4	Jul 01/2009
173-1010	737 THRUST REVERSER ASSEMBLY	78-30-12	55	Nov 01/2006

NUMERICAL INDEX/NUMERIC

Page 6

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
173A0100	RUDDER ASSEMBLY	55-40-09	11	Jul 01/2009
173A0103	RUDDER ASSEMBLY	55-40-09	11	Jul 01/2009
180A1610	HORIZONTAL TAIL CENTER SECTION (PARTS COLLECTOR)	55-10-07	7	Jul 01/2009
181A1000	HORIZONTAL TAIL CENTER SECTION (PARTS COLLECTOR)	55-10-07	7	Jul 01/2009
181A2000	HORIZONTAL TAIL CENTER SECTION (PARTS COLLECTOR)	55-10-07	7	Jul 01/2009
183A0101	ELEVATOR ASSEMBLY AND TAB ASSEMBLY	55-20-17	17	Jul 01/2009
183A0102	ELEVATOR ASSEMBLY AND TAB ASSEMBLY	55-20-17	17	Jul 01/2009
183A0103	ELEVATOR ASSEMBLY AND TAB ASSEMBLY	55-20-17	17	Jul 01/2009
183A0104	ELEVATOR ASSEMBLY AND TAB ASSEMBLY	55-20-17	17	Jul 01/2009
183A0107	ELEVATOR ASSEMBLY AND TAB ASSEMBLY	55-20-17	17	Jul 01/2009
183A0109	ELEVATOR ASSEMBLY AND TAB ASSEMBLY	55-20-17	17	Jul 01/2009
183A8100	ELEVATOR ASSEMBLY AND TAB ASSEMBLY	55-20-17	17	Jul 01/2009
183A8109	ELEVATOR ASSEMBLY AND TAB ASSEMBLY	55-20-17	17	Jul 01/2009
213A3170	RAM AIR INLET PANEL ASSEMBLY	21-53-03	8	Jul 01/2009
213A3410	RAM AIR INLET FORWARD/AFT PANEL ASSEMBLY	21-53-02	10	Jul 01/2009
213A3420	RAM AIR INLET FORWARD/AFT PANEL ASSEMBLY	21-53-02	10	Jul 01/2009
250N2004	CONTROL ROD ASSEMBLY	27-00-12	23	Jul 01/2009
251A1111	AILERON CONTROL QUADRANT ASSEMBLY	27-11-33	7	Jul 01/2009
251A1120	AILERON TAB ROD ASSEMBLY	27-11-34	11	Jul 01/2009
251A1240	SPOILER ACTUATION POWER CONTROL UNIT ASSEMBLY	27-60-42	15	Jul 01/2009
251A1270	SPOILER ACTUATION POWER CONTROL UNIT ASSEMBLY	27-60-42	15	Jul 01/2009
251A1510	OUTBOARD GROUND SPOILER ACTUATOR ASSEMBLY	27-62-71	28	Jul 01/2009
251A1631	AILERON CONTROL QUADRANT ASSEMBLY	27-11-24	10	Jul 01/2009
251A1641	AILERON CENTERING MECHANISM ASSEMBLY	27-14-22	8	Jul 01/2009
251A1661	LATERAL SYSTEM AILERON POWER CONTROL ASSEMBLY	27-64-02	10	Jul 01/2009
251A1741	SPOILER MIXER ASSEMBLY	27-67-04	10	Jul 01/2009
251A1814	AILERON CONTROL WHEEL DRUM ASSEMBLY	27-11-35	11	Jul 01/2009

NUMERICAL INDEX/NUMERIC

Page 7

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
251A1817	AILERON CONTROL TRANSFER MECHANISM ASSEMBLY	27-16-08	7	Jul 01/2009
251A1911	SPEED BRAKE MECHANISM ASSEMBLY	27-67-10	9	Jul 01/2009
251A2131	ELEVATOR PCU CONTROL POGO ROD ASSEMBLY	27-31-07	5	Jul 01/2009
251A2160	AILERON/ELEVATOR POWER CONTROL UNIT ASSEMBLY	27-09-23	11	Jul 01/2009
251A2196	ELEVATOR CONTROL QUADRANT ASSEMBLY	27-37-17	10	Jul 01/2009
251A2340	ELEVATOR CONTROLS MECHANISM ASSEMBLY	27-37-15	9	Jul 01/2009
251A2341	ELEVATOR BUS ASSEMBLY	27-37-20	8	Jul 01/2009
251A2379	ELEVATOR CONTROLS TUBE AND CRANK ASSEMBLY	27-37-10	8	Jul 01/2009
251A2420	ELEVATOR TAB CONTROL VALVE ASSEMBLY	27-37-25	9	Jul 01/2009
251A2430	ELEVATOR CONTROL-TAB MECHANISM ASSEMBLY	27-34-03	11	Jul 01/2009
251A3132	RUDDER PEDAL ASSEMBLY	27-27-07	11	Jul 01/2009
251A3145	RUDDER CONTROL JACK SHAFT ASSEMBLY	27-24-05	9	Jul 01/2009
251A3416	VERNIER ADJUSTMENT CONTROL ROD ASSEMBLY	27-37-09	16	Jul 01/2008
251A3440	RUDDER CONTROL TORQUE TUBE ASSEMBLY	27-27-06	10	Jul 01/2009
251A3471	RUDDER CONTROL QUADRANT ASSEMBLY	27-27-05	9	Jul 01/2009
251A3495	VERNIER ADJUSTMENT CONTROL ROD ASSEMBLY	27-37-09	16	Jul 01/2008
251A4115	STABILIZER TRIM FWD MECHANISM ASSEMBLY	27-44-03	14	Jul 01/2009
251A4410	COLUMN CUTOUT SWITCH ASSEMBLY	27-41-94	12	Jul 01/2009
251A4430	STABILIZER TRIM COLUMN ACTUATED CUTOUT SWITCH ASSEMBLY	27-41-95	13	Jul 01/2009
251A4510	STABILIZER TRIM ACTUATOR ASSEMBLY	27-45-12	18	Jul 01/2009
251A4510-11	STABILIZER TRIM ACTUATOR ASSEMBLY	27-45-12	18	Jul 01/2009
251A4510-13	STABILIZER TRIM ACTUATOR ASSEMBLY	27-45-12	18	Jul 01/2009
254A1110	AUTOTHROTTLE ASSEMBLY	22-32-24	9	Jul 01/2009
254A1141	AUTOTHROTTLE BRAKE ASSEMBLY	22-35-03	14	Jul 01/2009
254A1147	CONTROL STAND AUTOTHROTTLE GEARBOX ASSEMBLY	22-35-02	10	Jul 01/2009
254A1150	AUTOTHROTTLE SWITCHPACK ASSEMBLY	22-32-34	16	Jul 01/2009

NUMERICAL INDEX/NUMERIC

Page 8

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
254A1220	CAPTAIN AND FIRST OFFICER CONTROL STAND ASSEMBLY	25-11-13	15	Jul 01/2009
254A1240	CONTROL STAND THRUST LEVER ASSEMBLY	76-11-07	13	Jul 01/2009
254A1260	CONTROL STAND FLAP CONTROL HANDLE ASSEMBLY	27-09-44	6	Jul 01/2009
254A1290	ENGINE START BRAKE ASSEMBLY	76-11-09	15	Jul 01/2009
256A3110	POSITIONS 1 AND 8 FLAP ACTUATOR TRANSMISSION ASSEMBLY	27-55-67	17	Jul 01/2009
256A3150	FLAP ACTUATION LOW SETTING TORQUE BRAKE ASSEMBLY	27-55-82	11	Jul 01/2009
256A3151	FLAP ACTUATION HIGH SETTING TORQUE BRAKE ASSEMBLY	27-55-84	11	Jul 01/2009
256A3210	POSITIONS 2 AND 7 FLAP ACTUATOR TRANSMISSION ASSEMBLY	27-55-68	17	Jul 01/2009
256A3310	TE FLAP TRANSMISSION ASSEMBLY NO. 3 AND 6	27-55-80	17	Jul 01/2009
256A3410	POSITIONS 4 AND 5 FLAP ACTUATOR TRANSMISSION ASSEMBLY	27-55-70	17	Jul 01/2009
256A3510	POWER DRIVE UNIT ASSEMBLY	27-55-77	10	Jul 01/2009
256A3515	FLAP ACTUATION GEARBOX ASSEMBLY	27-55-87	17	Jul 01/2009
256A3550	FLAP CONTROL UNIT ASSEMBLY	27-53-03	7	Jul 01/2009
256A3580	TE FLAP CONTROL VALVE ASSEMBLY	27-55-85	8	Jul 01/2009
256A3630	FLAP ACTUATION SEAL RIB ANGLE GEARBOX ASSEMBLY	27-55-78	12	Jul 01/2009
256A3640	FLAP ACTUATION MLG BEAM ANGLE GEARBOX ASSEMBLY	27-55-75	13	Jul 01/2009
256A3650	FLAP ACTUATION WHEEL WELL TEE GEARBOX ASSEMBLY	27-55-81	15	Jul 01/2009
256A3710	TORQUE TUBE ASSEMBLY	27-55-76	7	Jul 01/2009
256A3720	TORQUE TUBE ASSEMBLY	27-55-76	7	Jul 01/2009
258A4301	OVERWING EMERGENCY DOOR SNUBBER ASSEMBLY	52-26-10	9	Jul 01/2009
273A1101	NOSE LANDING GEAR RETRACT ACTUATOR ASSEMBLY	32-33-12	14	Jul 01/2009
273A1201	NOSE LANDING GEAR LOCK ACTUATOR ASSEMBLY	32-33-22	13	Jul 01/2009
273A1301	LANDING GEAR HYDRAULIC TRANSFER CYLINDER ASSEMBLY	32-40-01	20	Mar 01/2003

NUMERICAL INDEX/NUMERIC

Page 9

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
I 273A1401	NOSE GEAR LOCK VALVE MANIFOLD ASSEMBLY	32-33-23	8	Jul 01/2009
I 273A2101	MAIN LANDING GEAR RETRACT ACTUATOR ASSEMBLY	32-32-37	16	Jul 01/2009
I 273A2201	MAIN LANDING GEAR DOWNLOCK ACTUATOR ASSEMBLY	32-32-52	14	Jul 01/2009
273A2310	LANDING GEAR HYDRAULIC TRANSFER CYLINDER ASSEMBLY	32-40-01	20	Mar 01/2003
I 273A2501	MAIN LANDING GEAR UPLOCK ACTUATOR ASSEMBLY	32-32-42	13	Jul 01/2009
I 273A3610	MAIN GEAR SHIMMY DAMPER ASSEMBLY	32-30-62	14	Jul 01/2009
I 273A4510	NOSE LANDING GEAR MANUAL RELEASE RELEASE ASSEMBLY	32-35-05	10	Jul 01/2009
I 273A4701	MAIN LANDING GEAR MANUAL RELEASE MECHANISM ASSEMBLY	32-34-24	10	Jul 01/2009
I 273T4702	TAILSKID ACTUATOR ASSEMBLY	32-71-12	7	Jul 01/2009
I 274A2813	LANDING GEAR BRAKE METERING QUADRANT AND SHAFT ASSEMBLY	32-41-16	9	Jul 01/2009
I 274N1003	BRAKE ACCUMULATOR ISOLATION VALVE ASSEMBLY/ALTERNATE BRAKE SELECTOR VALVE ASSEMBLY	32-41-12	22	Jul 01/2009
I 274N1028	BRAKE ACCUMULATOR ISOLATION VALVE ASSEMBLY/ALTERNATE BRAKE SELECTOR VALVE ASSEMBLY	32-41-12	22	Jul 01/2009
I 274N1051	BRAKE ACCUMULATOR ISOLATION VALVE ASSEMBLY/ALTERNATE BRAKE SELECTOR VALVE ASSEMBLY	32-41-12	22	Jul 01/2009
I 274U0003	BRAKE ACCUMULATOR ISOLATION VALVE ASSEMBLY/ALTERNATE BRAKE SELECTOR VALVE ASSEMBLY	32-41-12	22	Jul 01/2009
I 275A1101	NOSE LANDING GEAR STEERING ACTUATOR ASSEMBLY	32-51-52	20	Jul 01/2009
I 275A5104	RUDDER PEDAL STEERING ASSEMBLY	32-51-33	10	Jul 01/2009
276A2001	STANDBY SYSTEM MODULAR PACKAGE ASSEMBLY	29-23-21	19	Jul 01/2003
I 276A2003	HYDRAULIC SYSTEM A AND B PRESSURE MODULAR ASSEMBLY	29-13-03	13	Jul 01/2009
I 276A3100	SYSTEM A HYDRAULIC RESERVOIR ASSEMBLY -4, -9	29-11-18	10	Jul 01/2009

NUMERICAL INDEX/NUMERIC

Page 10

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
I 276A3100	SYSTEM B HYDRAULIC RESERVOIR ASSEMBLY -8, -11	29-11-19	11	Jul 01/2009
I 276A3100	STANDBY SYSTEM HYDRAULIC RESERVOIR ASSEMBLY -7, -10	29-15-01	10	Jul 01/2009
I 277A6000	MAIN LANDING GEAR WHEEL AND TIRE INSTALLATION COMPONENTS -11, -12, -41, -42, -101, -102, -103, -104, -105, -106, -107, -108, -109, -110, -301, -302, -303, -304, -701, -702, -703, -704, -705, -706, -1001, -1002, -1003, -1004, -1005, -1006, -1007, -1008, -1009, -1010, -1011, -1012	32-11-17	11	Jul 01/2009
I 277A6000	NOSE LANDING GEAR WHEEL AND TIRE INSTALLATION COMPONENTS -31, -401, -402, -403, -404, -405, -406, -801, -802, -803, -804, -805	32-21-17	12	Jul 01/2009
I 301A1030	CFM56-3 TURBINE EXHAUST PRIMARY SLEEVE ASSEMBLY	78-11-23	21	Jul 01/2009
I 301A1050	CFM56-3 TURBINE EXHAUST PLUG ASSEMBLY	78-11-13	15	Jul 01/2009
I 301A1054	FAN CFM56-3 COWL ASSEMBLY	71-13-26	28	Jul 01/2009
I 301A1067	FAN DUCT AND THRUST REV (CFM-56) COWL ASSEMBLY	78-31-13	39	Jul 01/2009
I 301A1080	INLET CFM56-3 COWL ASSEMBLY	71-13-27	15	Jul 01/2009
I 310A1020	CFM-56 ENGINE MOUNT COMPONENTS	71-21-13	49	Jul 01/2009
I 310A1022	ENGINE STRUT INSTALLATION COMPONENTS	54-50-01	30	Jul 01/2009
I 310A1031	ENGINE STRUT INSTALLATION COMPONENTS	54-50-01	30	Jul 01/2009
I 310A2020	FORWARD AND AFT ENGINE (CFM56-7) MOUNT ASSEMBLY	71-21-37	19	Jul 01/2009
I 310A2030	FORWARD AND AFT ENGINE (CFM56-7) MOUNT ASSEMBLY	71-21-37	19	Jul 01/2009
I 310A2041	CFM-56 MINOR COMPONENTS	71-04-26	13	Jul 01/2009
I 311A1090	ENGINE STRUT INSTALLATION COMPONENTS	54-50-01	30	Jul 01/2009
I 311A1091	ENGINE STRUT INSTALLATION COMPONENTS	54-50-01	30	Jul 01/2009
I 311A1092	ENGINE STRUT INSTALLATION COMPONENTS	54-50-01	30	Jul 01/2009
I 311A1093	ENGINE STRUT INSTALLATION COMPONENTS	54-50-01	30	Jul 01/2009
I 311A1094	ENGINE STRUT INSTALLATION COMPONENTS	54-50-01	30	Jul 01/2009
I 311A1096	ENGINE STRUT INSTALLATION COMPONENTS	54-50-01	30	Jul 01/2009
I 311A1213	ENGINE STRUT INSTALLATION COMPONENTS	54-50-01	30	Jul 01/2009

NUMERICAL INDEX/NUMERIC

Page 11

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
311A1215	ENGINE STRUT INSTALLATION COMPONENTS	54-50-01	30	Jul 01/2009
311A1515	ENGINE STRUT INSTALLATION COMPONENTS	54-50-01	30	Jul 01/2009
311A1555	ENGINE STRUT INSTALLATION COMPONENTS	54-50-01	30	Jul 01/2009
311A1561	ENGINE STRUT INSTALLATION COMPONENTS	54-50-01	30	Jul 01/2009
311A1562	ENGINE STRUT INSTALLATION COMPONENTS	54-50-01	30	Jul 01/2009
311A1710	ENGINE STRUT INSTALLATION COMPONENTS	54-50-01	30	Jul 01/2009
311A1730	ENGINE STRUT INSTALLATION COMPONENTS	54-50-01	30	Jul 01/2009
311A1740	ENGINE STRUT INSTALLATION COMPONENTS	54-50-01	30	Jul 01/2009
311A2090	ENGINE STRUT INSTALLATION COMPONENTS	54-50-02	11	Jul 01/2009
311A2091	ENGINE STRUT INSTALLATION COMPONENTS	54-50-02	11	Jul 01/2009
311A2092	ENGINE STRUT INSTALLATION COMPONENTS	54-50-02	11	Jul 01/2009
311A2093	ENGINE STRUT INSTALLATION COMPONENTS	54-50-02	11	Jul 01/2009
311A2094	ENGINE STRUT INSTALLATION COMPONENTS	54-50-02	11	Jul 01/2009
311A2097	ENGINE STRUT INSTALLATION COMPONENTS	54-50-02	11	Jul 01/2009
311A2098	ENGINE STRUT INSTALLATION COMPONENTS	54-50-02	11	Jul 01/2009
311A2551	ENGINE STRUT INSTALLATION COMPONENTS	54-50-02	11	Jul 01/2009
311A2552	ENGINE STRUT INSTALLATION COMPONENTS	54-50-02	11	Jul 01/2009
311A2553	ENGINE STRUT INSTALLATION COMPONENTS	54-50-02	11	Jul 01/2009
311A2710	ENGINE STRUT INSTALLATION COMPONENTS	54-50-02	11	Jul 01/2009
311A2730	ENGINE STRUT INSTALLATION COMPONENTS	54-50-02	11	Jul 01/2009
311A2740	ENGINE STRUT INSTALLATION COMPONENTS	54-50-02	11	Jul 01/2009
311A2741	ENGINE STRUT INSTALLATION COMPONENTS	54-50-02	11	Jul 01/2009
313A2310	AFT FAIRING INSTALLATION COMPONENTS	54-52-02	8	Jul 01/2009
314A1010	INLET CFM56-3 COWL ASSEMBLY	71-13-27	15	Jul 01/2009
314A1110	FAN CFM56-3 COWL ASSEMBLY	71-13-26	28	Jul 01/2009
314A1501	CFM56-3 TURBINE EXHAUST PLUG ASSEMBLY	78-11-13	15	Jul 01/2009
314A1502	CFM56-3 TURBINE EXHAUST PRIMARY SLEEVE ASSEMBLY	78-11-23	21	Jul 01/2009
314A2610	CFM56-7B TURBINE EXHAUST PRIMARY NOZZLE ASSEMBLY	78-11-37	9	Jul 01/2009
314A2620	CFM56-7B TURBINE EXHAUST PRIMARY PLUG ASSEMBLY	78-11-38	9	Jul 01/2009
315A1001	FAN DUCT AND THRUST REV (CFM-56) COWL ASSEMBLY	78-31-13	39	Jul 01/2009
315A1002	FAN DUCT CFM56-3 COWL ASSEMBLY	71-13-28	37	Jul 01/2009

NUMERICAL INDEX/NUMERIC

Page 12

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
I 315A1016	(CFM56) STRUT DRUM CONTROL BOX ASSEMBLY	76-11-14	19	Jul 01/2009
I 315A1040	CFM56 ENGINE THROTTLE FUEL CONTROL BOX ASSEMBLY	76-11-13	26	Jul 01/2009
I 315A1060	FUEL SHUTOFF ASSEMBLY	76-11-16	15	Jul 01/2009
I 315A1500	THRUST REVERSER SLEEVE ASSEMBLY	78-31-23	38	Jul 01/2009
I 315A1701	FAN DUCT AND THRUST REV (CFM-56) COWL ASSEMBLY	78-31-13	39	Jul 01/2009
I 315A1800	THRUST REVERSER NON-LOCKING ACTUATOR ASSEMBLY	78-31-05	31	Jul 01/2009
I 315A1801	THRUST REVERSER LOCKING ACTUATOR ASSEMBLY -14, -15, -18, -19, -22, -23, -26, -27	78-31-02	20	Jul 01/2009
I 315A1801	THRUST REVERSER LOCKING ACTUATOR ASSEMBLY -13, -17, -21, -25	78-31-04	42	Jul 01/2009
I 315A1802	FLOW CONTROL TEE ASSEMBLY	78-34-03	11	Jul 01/2009
I 315A1803	THRUST REVERSER MANUAL DRIVE ASSEMBLY	78-31-07	10	Jul 01/2009
I 315A2103	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY COMPONENTS -21, -22, -23, -24	78-31-26	6	Jul 01/2009
I 315A2103	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY -5, -6, -7, -8, -9, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24	78-31-37	15	Jul 01/2009
I 315A2104	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY	78-31-37	15	Jul 01/2009
I 315A2119	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY	78-31-37	15	Jul 01/2009
I 315A2124	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY	78-31-37	15	Jul 01/2009
I 315A2130	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY COMPONENTS -31, -32, -33, -34, -35, -36, -37, -38, -39, -40, -41, -42, -43, -44, -45, -46	78-31-26	6	Jul 01/2009



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
I 315A2130	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY -1, -2, -3, -4, -5, -6, -7, -8, -9, -10, -11, -12, -13, -14, -15, -16, -17, -18, -20, -22, -23, -24, -25, -26, -27, -28, -29, -30, -31, -32, -33, -34	78-31-37	15	Jul 01/2009
I 315A2150	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY COMPONENTS -17, -18, -19, -20, -21, -22, -23, -24	78-31-26	6	Jul 01/2009
I 315A2150	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY -1, -2, -3, -4, -5, -6, -7, -8, -9, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20	78-31-37	15	Jul 01/2009
I 315A2160	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY	78-31-37	15	Jul 01/2009
I 315A2170	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY	78-31-37	15	Jul 01/2009
I 315A2171	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY COMPONENTS -29, -30, -31, -32	78-31-26	6	Jul 01/2009
I 315A2171	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY -1, -2, -3, -4, -5, -6, -7, -8, -9, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, -26, -27, -28, -29, -30, -31, -32	78-31-37	15	Jul 01/2009
I 315A2178	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY COMPONENTS -35, -36, -37, -38, -39, -40, -41, -42	78-31-26	6	Jul 01/2009
I 315A2178	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY -1, -2, -3, -4, -5, -6, -7, -8, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, -26, -27, -28, -29, -30, -31, -32, -33, -34, -35, -36, -37, -38	78-31-37	15	Jul 01/2009
I 315A2180	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY	78-31-37	15	Jul 01/2009
I 315A2202	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY	78-31-37	15	Jul 01/2009
I 315A2210	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY	78-31-37	15	Jul 01/2009
I 315A2231	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY	78-31-37	15	Jul 01/2009



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
I 315A2232	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY	78-31-37	15	Jul 01/2009
I 315A2246	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY	78-31-37	15	Jul 01/2009
I 315A2295	FAN DUCT COWL AND THRUST REVERSER PARTS COLLECTOR	78-31-40	10	Jul 01/2009
I 315A2300	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY	78-31-37	15	Jul 01/2009
I 315A2303	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY	78-31-37	15	Jul 01/2009
I 315A2330	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY	78-31-37	15	Jul 01/2009
I 315A2401	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY COMPONENTS -11, -12, -13, -14	78-31-26	6	Jul 01/2009
I 315A2401	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY -1, -2, -3, -4, -5, -6, -7, -8, -9, -10, -11, -12, -13, -14	78-31-37	15	Jul 01/2009
I 315A2430	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY	78-31-37	15	Jul 01/2009
I 315A2500	THRUST REVERSER (CFM56-7) SLEEVE ASSEMBLY	78-31-24	16	Jul 01/2009
I 315A2501	THRUST REVERSER (CFM56-7) SLEEVE ASSEMBLY	78-31-24	16	Jul 01/2009
I 315A2503	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY	78-31-37	15	Jul 01/2009
I 315A2505	THRUST REVERSER (CFM56-7) SLEEVE ASSEMBLY	78-31-24	16	Jul 01/2009
I 315A2509	THRUST REVERSER (CFM56-7) SLEEVE ASSEMBLY	78-31-24	16	Jul 01/2009
I 315A2521	THRUST REVERSER (CFM56-7) SLEEVE ASSEMBLY	78-31-24	16	Jul 01/2009
I 315A2565	THRUST REVERSER (CFM56-7) SLEEVE ASSEMBLY	78-31-24	16	Jul 01/2009
I 315A2600	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY	78-31-37	15	Jul 01/2009
I 315A2707	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY	78-31-37	15	Jul 01/2009

NUMERICAL INDEX/NUMERIC

Page 15

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
I 315A2711	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY	78-31-37	15	Jul 01/2009
I 315A2800	THRUST REVERSER NON-LOCKING ACTUATOR ASSEMBLY	78-31-18	14	Jul 01/2009
I 315A2801	THRUST REVERSER LOCKING ACTUATOR ASSEMBLY	78-31-19	14	Jul 01/2009
I 315N3800	THRUST REVERSER NON-LOCKING ACTUATOR ASSEMBLY	78-31-05	31	Jul 01/2009
I 322A2341	PRECOOLER INSTALLATION COMPONENTS	36-12-07	8	Jul 01/2009
I 332A1908	CFM-56 MINOR COMPONENTS	71-04-26	13	Jul 01/2009
I 332A2341	PRECOOLER INSTALLATION COMPONENTS	36-12-07	8	Jul 01/2009
I 332A2371	PRECOOLER INSTALLATION COMPONENTS	36-12-07	8	Jul 01/2009
I 333A1100	EXTENSION (CFM56-3) RING ASSEMBLY	78-31-33	33	Jul 01/2009
I 333A1130	EXTENSION (CFM56-3) RING ASSEMBLY	78-31-33	33	Jul 01/2009
I 342W2801	FUEL TANK ACCESS DOOR ASSEMBLY	28-11-07	20	Jul 01/2009
I 352A1200	APU SUPPORT STRUT ASSEMBLY	49-13-12	8	Jul 01/2009
I 354A3000	AUXILIARY POWER UNIT MUFFLER ASSEMBLY	49-13-02	7	Jul 01/2009
I 413N3206	FORWARD RIGHT CLOSET ASSEMBLY	25-24-08	9	Jul 01/2009
I 417A2093	WASTE WATER DRAIN MAST ASSEMBLY	38-31-04	13	Jul 01/2009
I 417A2508	POTABLE WATER SYSTEM TANK ASSEMBLY	38-11-01	7	Jul 01/2009
I 417N2117	WASTE WATER DRAIN MAST ASSEMBLY	38-31-01	15	Jul 01/2009
I 417N3011	PASSENGER SERVICE UNIT ASSEMBLY	25-23-38	18	Jul 01/2009
I 417N3051	OVERDOOR PASSENGER SERVICE UNIT ASSEMBLY	25-23-39	10	Jul 01/2009



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
417N3100	UNDERBIN PASSENGER SERVICE UNIT ASSEMBLY -137, -138, -139, -140, -153, -154, -157, -158, -159, -160, -168, -181, -182, -183, -184, -185, -186, -188, -231, -232, -233, -234, -235, -236, -238, -273, -274, -275, -276, -280, -289, -290, -291, -292, -303, -304, -305, -306, -328, -334, -338, -347, -348, -349, -350, -353, -354, -361, -362, -391, -393, -395, -396, -401, -403, -405, -410, -412, -414, -416, -431, -433, -444, -446, -448, -450, -472, -547, -548, -549, -550, -552, -611, -612, -613, -614, -615, -616, -676, -678, -679, -680, -681, -682, -683, -684, -700, -701, -702, -703, -704, -705, -707, -708, -712, -713, -714, -717, -718, -719, -720, -723, -724, -728, -735SP, -736SP, -737SP, -738SP, -741SP, -742SP, -743SP, -744SP, -748SP, -749SP, -751SP	25-23-30	17	Jul 01/2009
417N3100	UNDERBIN PASSENGER SERVICE UNIT ASSEMBLY -1SP, -2SP, -3SP, -4SP, -11SP, -12SP, -13SP, -14SP, -21SP, -23SP, -61SP, -62SP, -63SP, -64SP, -68SP, -126SP, -175SP, -176SP, -191SP, -192SP, -193SP, -194SP, -206SP, -208SP, -221SP, -223SP, -230SP, -261SP, -262SP, -264SP, -277SP, -278SP, -323SP, -325SP, -327SP, -439SP, -441SP, -443SP, -455SP, -457SP, -460SP, -462SP, -464SP, -477SP, -482SP, -535SP, -536SP, -554SP, -638SP, -640SP, -660SP	25-23-32	14	Jul 01/2009



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
417N3100	UNDERBIN PASSENGER SERVICE UNIT ASSEMBLY -28SP, -34SP, -36SP, -38SP, -56SP, -58SP, -91SP, -93SP, -96SP, -98SP, -111SP, -113SP, -115SP, -117SP, -119SP, -121SP, -128SP, -144SP, -145SP, -146SP, -147SP, -173SP, -174SP, -317SP, -318SP, -319SP, -320SP, -371SP, -372SP, -373SP, -374SP, -375SP, -376SP, -382SP, -384SP, -386SP, -400SP, -402SP, -404SP, -406SP, -408SP, -411SP, -413SP, -425SP, -427SP, -432SP, -434SP, -435SP, -436SP, -437SP, -438SP, -442SP, -454SP, -456SP, -458SP, -467SP, -469SP, -475SP, -490SP, -496SP, -498SP, -513SP, -515SP, -539SP, -540SP, -621SP, -622SP, -623SP, -624SP, -625SP, -626SP, -641SP, -653SP, -655SP, -667SP, -668SP, -669SP, -670SP, -671SP, -672SP	25-23-33	17	Jul 01/2009
417N3100	UNDERBIN PASSENGER SERVICE UNIT ASSEMBLY -122SP, -123SP, -124SP, -125SP, -162SP, -164SP, -177SP, -179SP, -203SP, -205SP, -213SP, -214SP, -215SP, -216SP, -222SP, -224SP, -241SP, -242SP, -243SP, -244SP, -250SP, -251SP, -258SP, -266SP, -268SP, -283SP, -284SP, -285SP, -286SP, -293SP, -294SP, -295SP, -296SP, -313SP, -314SP, -322SP, -324SP, -333SP, -336SP, -342SP, -344SP, -363SP, -364SP, -365SP, -366SP, -367SP, -369SP, -407SP, -409SP, -415SP, -417SP, -418SP, -419SP, -420SP, -421SP, -422SP, -423SP, -424SP, -426SP, -428SP, -429SP, -430SP, -440SP, -445SP, -447SP, -449SP, -451SP, -452SP, -453SP, -459SP, -461SP, -466SP, -468SP, -470SP, -471SP, -473SP, -474SP, -476SP, -478SP, -479SP, -480SP, -486SP, -488SP, -492SP, -494SP, -503SP, -504SP, -533SP, -595SP, -596SP, -600SP, -601SP, -602SP, -603SP, -604SP, -605SP, -633SP, -634SP, -643SP, -645SP, -647SP, -649SP, -650SP, -657SP, -658SP, -659SP, -662SP, -687SP, -688SP, -689SP, -690SP, -691SP, -692SP	25-23-34	17	Jul 01/2009

NUMERICAL INDEX/NUMERIC

Page 18

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
417N3100	AFT PARTIAL UNDERBIN PASSENGER SERVICE UNIT ASSEMBLY -135SP, -136SP, -537SP, -538SP, -541SP, -542SP, -543SP, -544SP, -619SP, -620SP, -635SP, -636SP, -746SP, -747SP	25-23-36	11	Jul 01/2009
417N3100	PARTIAL UNDERBIN PASSENGER SERVICE UNIT ASSEMBLY -129SP, -130SP, -131SP, -132SP, -133SP, -134SP, -141SP, -142SP, -143SP, -148SP, -156SP, -166SP, -170SP, -171SP, -172SP, -195SP, -198SP, -201SP, -202SP, -209SP, -211SP, -212SP, -217SP, -218SP, -219SP, -226SP, -228SP, -245SP, -246SP, -247SP, -248SP, -249SP, -252SP, -259SP, -271SP, -272SP, -281SP, -282SP, -287SP, -288SP, -298SP, -299SP, -301SP, -308SP, -315SP, -321SP, -326SP, -329SP, -330SP, -331SP, -332SP, -335SP, -346SP, -351SP, -352SP, -356SP, -358SP, -387SP, -388SP, -398SP, -501SP, -502SP, -505SP, -506SP, -507SP, -508SP, -509SP, -510SP, -511SP, -512SP, -514SP, -516SP, -517SP, -518SP, -519SP, -520SP, -521SP, -522SP, -523SP, -524SP, -525SP, -528SP, -529SP, -530SP, -531SP, -532SP, -545SP, -546SP, -617SP, -618SP, -627SP, -628SP, -661SP, -665SP, -666SP, -673SP, -674SP, -685SP, -686SP, -687SP, -688SP, -689SP, -690SP, -691SP, -692SP, -706SP, -709SP, -721SP, -722SP, -725SP, -729SP, -730SP, -739SP, -740SP, -745SP, -750SP, -752SP, -753SP, -754SP	25-23-37	16	Jul 01/2009



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
417N3130	OXYGEN BOX ASSEMBLY -25SP, -26SP, -27SP, -28SP, -29SP, -30SP, -31SP, -32SP, -33SP, -34SP, -35SP, -36SP, -39SP, -40SP, -41SP, -42SP, -43SP, -44SP, -45SP, -46SP, -57SP, -58SP, -61SP, -62SP, -63SP, -64SP, -65SP, -66SP, -71SP, -72SP, -73SP, -74SP, -75SP, -76SP, -77SP, -78SP, -79SP, -80SP, -81SP, -82SP, -85SP, -86SP, -87SP, -88SP, -90SP, -93SP, -94SP, -96SP, -98SP, -101SP, -102SP, -103SP, -104SP, -107SP, -108SP, -111SP, -112SP, -113SP, -114SP, -115SP, -116SP, -120SP, -122SP, -127SP, -128SP, -129SP, -130SP, -131SP, -132SP, -133SP, -134SP, -134A, -135SP, -137SP, -138SP, -139SP, -140SP, -141SP, -143SP, -144SP, -145SP, -146SP, -147SP, -167SP, -168SP, -183SP, -184SP, -186SP, -188SP, -227SP, -228SP, -229SP, -230SP, -233SP, -234SP, -235SP	35-21-02	18	Jul 01/2009
417N3130	OXYGEN BOX ASSEMBLY -1SP, -2SP, -4SP, -5SP, -6SP, -8SP, -9SP, -10SP, -15SP, -16SP, -18SP, -21SP, -22SP, -23SP, -24SP, -47SP, -48SP, -49SP, -50SP, -51SP, -52SP, -53SP, -54SP, -60SP, -83SP, -84SP, -89SP, -92SP, -99SP, -105SP, -117SP, -118SP, -119SP, -122SP, -123SP, -124SP, -169SP, -182SP	35-21-03	21	Jul 01/2009
417N3700	UNDERBIN ATTENDANT SERVICE UNIT ASSEMBLY	35-21-05	15	Jul 01/2009
417N3810	ATTENDANTS SERVICE UNIT OXYGEN BOX ASSEMBLY -10SP	35-21-32	9	Jul 01/2009



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
417N3810	ATTENDANT'S SERVICE UNIT AND LAVATORY OXYGEN BOX ASSEMBLY -1SP, -2SP, -5SP, -6SP, -13SP, -14SP, -15SP, -18SP, -30SP, -36SP, -41SP, -42SP, -54SP, -57SP, -59SP, -61SP, -63SP, -65SP, -67SP, -69SP, -71SP, -76SP, -78SP, -79SP, -80SP, -81SP, -82SP, -87SP, -88SP, -89SP, -90SP, -92SP, -95SP, -97SP, -98SP, -99SP, -100SP, -102SP, -104SP, -105SP, -106SP, -107SP, -108SP, -109SP, -110SP, -111SP, -115SP, -117SP, -118SP, -119SP, -120SP, -121SP, -125SP, -126SP, -127SP, -128SP, -129SP, -130SP, -131SP, -132SP, -133SP, -134SP, -135SP, -136SP, -137SP, -145SP, -146SP, -147SP, -148SP, -151SP, -152SP, -153SP, -154SP, -155SP, -156SP, -157SP, -158SP, -162SP, -165SP, -166SP, -167SP, -168SP, -169SP	35-21-34	31	Jul 01/2009
417T2093	WASTE WATER DRAIN MAST ASSEMBLY	38-31-01	15	Jul 01/2009
453A1810	CARGO NET/STANCHION ASSEMBLY	25-50-01	22	Jul 01/2009
478W1610	WASTE WATER DRAIN MAST ASSEMBLY	38-31-01	15	Jul 01/2009
5-71761	CONTROL CABIN WINDOWS	56-11-11	31	Jul 01/2009
5-71762	SLIDING WINDOW ASSEMBLY	56-10-01	51	Mar 01/2009
5-71763	CONTROL CABIN WINDOWS	56-11-11	31	Jul 01/2009
5-71764	CONTROL CABIN WINDOWS	56-11-11	31	Jul 01/2009
5-71765	CONTROL CABIN WINDOWS	56-11-11	31	Jul 01/2009
5-89354	CONTROL CABIN WINDOWS	56-11-11	31	Jul 01/2009
5-89356	CONTROL CABIN WINDOWS	56-11-11	31	Jul 01/2009
5-89357	CONTROL CABIN WINDOWS	56-11-11	31	Jul 01/2009
5-89358	CONTROL CABIN WINDOWS	56-11-11	31	Jul 01/2009
5-95631	RUDDER PEDAL ASSEMBLY	27-27-01	4	Nov 01/2002
5-97613	RUDDER CONTROL JACKSHAFT ASSEMBLY	27-24-02	3	Mar 01/1996
50-7945	FORWARD ENTRY DOOR ASSEMBLY	52-16-01	49	Jul 01/2005
50-7978	EMERGENCY HATCH ASSEMBLY	52-26-01	17	Jul 01/2005
6-63931	CONTROL STAND STABILIZER TRIM JACK ASSEMBLY	27-44-02	2	Mar 05/1985
65-16323	CONTROL CABIN WINDOWS	56-11-11	31	Jul 01/2009
65-1754	LANDING GEAR CONTROL LEVER ASSEMBLY	32-34-02	3	Jul 01/2004
65-17819	LANDING GEAR LOCK ACTUATOR ASSEMBLY	32-30-31	20	Jul 01/2002

NUMERICAL INDEX/NUMERIC

Page 21

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
65-17821	SYSTEM A HYDRAULIC MODULAR PACKAGE ASSEMBLY -1, -2, -3, -4, -5, -6, -7, -8, -9, -10, -11, -12, -14, -15, -17, -19	29-13-01	19	Dec 05/1993
I 65-17821	HYDRAULIC SYSTEM A AND B PRESSURE MODULAR ASSEMBLY -18, -20, -21	29-13-03	13	Jul 01/2009
65-17822	SYSTEM B HYDRAULIC MODULAR PACKAGE ASSEMBLY	29-23-31	11	Dec 05/1993
65-17832	LANDING GEAR HYDRAULIC TRANSFER CYLINDER ASSEMBLY	32-40-01	20	Mar 01/2003
65-17851	SYSTEM B HYDRAULIC MODULAR PACKAGE ASSEMBLY	29-23-31	11	Dec 05/1993
65-17862	SYSTEM A HYDRAULIC MODULAR PACKAGE ASSEMBLY	29-13-01	19	Dec 05/1993
65-17882	LANDING GEAR LOCK ACTUATOR ASSEMBLY	32-30-31	20	Jul 01/2002
I 65-19328	CARGO NET/STANCHION ASSEMBLY	25-50-01	22	Jul 01/2009
I 65-19329	CARGO NET/STANCHION ASSEMBLY	25-50-01	22	Jul 01/2009
65-19592	JT8D ENGINE MOUNT COMPONENTS	71-23-01	29	Mar 01/2004
65-19684	NOSE DOME ASSEMBLY	71-13-16	2	Mar 01/2004
65-21831	RUDDER TRIM ACTUATOR ASSEMBLY	27-24-01	14	Nov 01/1999
65-22216	LOWER BODY FORWARD ACCESS DOOR ASSEMBLY	52-46-03	11	Nov 01/2008
65-22732	STABILIZER TRIM FORWARD MECHANISM ASSEMBLY	27-44-01	12	Mar 01/2002
65-2346	GALLEY DOOR SNUBBER ASSEMBLY	52-11-01	18	Jul 01/2006
65-23761	ENGINE CONTROL COMPONENTS	76-14-11	11	Nov 01/2002
65-25747	AILERON AND ELEVATOR CONTROL COLUMN/WHEEL ASSEMBLY	27-16-01	30	Nov 01/2008
I 65-25756	CARGO NET/STANCHION ASSEMBLY	25-50-01	22	Jul 01/2009
I 65-25757	CARGO NET/STANCHION ASSEMBLY	25-50-01	22	Jul 01/2009
65-26174	RUDDER PEDAL STEERING SYSTEM ASSEMBLY	32-57-01	9	Jul 01/2005
65-26277	AFT ATTENDANT'S OXYGEN SERVICE UNIT ASSEMBLY	25-21-01	1	Sep 05/1977
65-27808	JT8D THRUST REVERSER TAILPLUG ASSEMBLY	78-38-71	1	Jun 05/1991
65-27942	FORWARD AIRSTAIR DOOR ASSEMBLY	52-68-01	6	Jul 01/2004

NUMERICAL INDEX/NUMERIC

Page 22

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
65-29994	ENTRY DOOR GUIDE ARM ASSEMBLY	52-17-01	8	Jul 01/2005
65-32603	WASTE WATER DRAIN MAST ASSEMBLY	38-31-02	8	Jul 01/2009
65-34679	ANTENNA DISCONNECT ASSEMBLY	23-13-01	2	Sep 05/1993
65-37244	PALLETIZED CARGO SYSTEM SIDE RESTRAINT GUIDE ASSEMBLY	25-56-22	0	Dec 25/1975
65-37251	PALLETIZED CARGO SYSTEM PALLET LOCK ASSEMBLY	25-35-11	0	Mar 10/1970
65-37288	PALLETIZED CARGO SYSTEM RETRACTABLE SIDE GUIDE ASSEMBLY	25-56-24	1	Mar 05/1981
65-37289	PALLETIZED CARGO SYSTEM BRAKE ASSEMBLY	25-35-10	0	May 10/1974
65-37831	THRUST REVERSER DIRECTIONAL VALVE ASSEMBLY	78-33-10	7	Nov 01/2000
65-37988	THRUST REVERSER LOCKOUT ACTUATOR ASSEMBLY	78-32-04	1	Jul 01/2003
65-38210	CONTROL CABIN WINDOWS	56-11-11	31	Jul 01/2009
65-40514	CHASSIS ASSEMBLY	24-01-01	0	Aug 10/1974
65-42163	AUTOTHROTTLE GEARBOX ASSEMBLY	22-35-01	0	May 15/1967
65-42354	AUTOTHROTTLE CLUTCH ASSEMBLY	22-34-11	9	Nov 01/2003
65-42355	AUTO THROTTLE CLUTCH/CAM ASSEMBLY	22-34-02	8	Mar 05/1984
65-42500	PALLETIZED CARGO SYSTEM PALLET LOCK ASSEMBLY -2	25-35-11	0	Mar 10/1970
65-42500	MAIN DECK PALLETIZED CARGO SYSTEM ROLLER TRAY AND ROLLER TRAY TIEDOWN ASSEMBLIES -3, -4, -5, -6, -7, -8, -9	25-57-08	1	Sep 05/1984
65-42638	MAIN DECK PALLETIZED CARGO SYSTEM ROLLER TRAY AND ROLLER TRAY TIEDOWN ASSEMBLIES	25-57-08	1	Sep 05/1984
65-44503	RUDDER AND ELEVATOR FEEL ACTUATOR CYLINDER ASSEMBLY	27-09-09	33	Jul 01/2007
65-44504	MAIN GEAR DAMPER ASSEMBLY	32-30-61	37	Jul 01/2006
65-44531	THRUST REVERSER HYDRAULIC CONTROL VALVE ASSEMBLY	78-33-11	7	Nov 01/1999
65-44550	LEADING EDGE FLAP ACTUATOR ASSEMBLY	27-80-01	34	Jul 01/2007
65-44551	LEADING EDGE FLAP ACTUATOR ASSEMBLY	27-80-01	34	Jul 01/2007
65-44560	NOSE GEAR GRAVEL DEFLECTOR ASSEMBLY	32-26-15	10	Nov 01/2004

NUMERICAL INDEX/NUMERIC

Page 23

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
65-44561	FLIGHT SPOILER POWER CONTROL UNIT ASSEMBLY	27-60-41	53	Nov 01/2008
65-44571	HYDRAULIC A AND B SYSTEMS HEAT EXCHANGER COIL ASSEMBLY	29-09-01	4	Jun 05/1993
65-44580	SYSTEM A HYDRAULIC MODULAR PACKAGE ASSEMBLY -2, -3, -6, -7, -8, -9, -10, -11, -14, -16, -18	29-13-01	19	Dec 05/1993
65-44580	HYDRAULIC SYSTEM A AND B PRESSURE MODULAR ASSEMBLY -15, -17, -19	29-13-03	13	Jul 01/2009
65-44581	SHUTOFF VALVE MODULAR PACKAGE ASSEMBLY	32-43-22	6	Mar 05/1991
65-44590	SYSTEM B HYDRAULIC MODULAR PACKAGE ASSEMBLY	29-23-31	11	Dec 05/1993
65-44600	SYSTEM A HYDRAULIC RESERVOIR ASSEMBLY -19, -20, -22, -23, -24	29-11-16	15	Jul 01/2009
65-44600	SYSTEM A HYDRAULIC RESERVOIR ASSEMBLY -2, -3, -4, -7, -8, -11, -13, -14, -15, -16, -17	29-16-31	8	Nov 01/1999
65-44601	SYSTEM A HYDRAULIC RESERVOIR ASSEMBLY	29-11-16	15	Jul 01/2009
65-44610	NOSE GEAR HYDRAULIC ACTUATOR ASSEMBLY	32-30-41	17	Mar 01/2007
65-44625	LANDING GEAR LOCK ACTUATOR ASSEMBLY -4, -6, -10, -14	32-30-31	20	Jul 01/2002
65-44625	NOSE GEAR LOCK ACTUATOR ASSEMBLY -18	32-30-33	20	Jul 01/2009
65-44625	NOSE GEAR HYDRAULIC ACTUATOR ASSEMBLY -5, -8, -9, -11	32-30-41	17	Mar 01/2007
65-44631	VALVE ASSY, TRAILING EDGE FLAP CONTROL	27-53-12	9	Mar 01/2003
65-44650	LEADING EDGE SLAT ACTUATOR ASSEMBLY	27-80-11	51	Nov 01/2007
65-44651	LEADING EDGE SLAT ACTUATOR ASSEMBLY	27-80-11	51	Nov 01/2007
65-44660	GRAVEL DEFLECTOR ACTUATOR ASSEMBLY	32-26-18	3	Nov 01/2004
65-44676	SYSTEM A HYDRAULIC RESERVOIR ASSEMBLY	29-16-31	8	Nov 01/1999
65-44680	STANDBY SYSTEM MODULAR PACKAGE ASSEMBLY	29-23-21	19	Jul 01/2003
65-44681	STANDBY SYSTEM MODULAR PACKAGE ASSEMBLY	29-23-21	19	Jul 01/2003
65-44690	LANDING GEAR HYDRAULIC TRANSFER CYLINDER ASSEMBLY	32-40-01	20	Mar 01/2003

NUMERICAL INDEX/NUMERIC

Page 24

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
65-44691	LANDING GEAR MODULAR PACKAGE ASSEMBLY	32-09-11	11	Mar 01/2003
65-44699	AIR MANIFOLD ASSEMBLY	29-13-31	4	Mar 05/1993
65-44700	SYSTEM B HYDRAULIC RESERVOIR ASSEMBLY	29-26-11	6	Dec 01/1995
65-44701	SYSTEM B HYDRAULIC RESERVOIR ASSEMBLY	29-26-11	6	Dec 01/1995
65-44710	NOSE WHEEL STEERING CYLINDER ASSEMBLY	32-50-11	32	Nov 01/2007
65-44713	NOSE WHEEL STEERING METERING VALVE COVER ASSEMBLY	32-50-12	7	Jul 01/2009
65-44725	LEADING EDGE SLAT ACTUATOR ASSEMBLY -3, -4, -5, -6, -10, -11, -12, -13, -15, -16, -17, -18, -19, -20, -21, -22, -23, -25, -33, -34, -35, -36, -37, -38, -39, -40, -41, -42, -43, -44	27-80-11	51	Nov 01/2007
65-44725	LEADING EDGE SLAT HYDRAULIC ACTUATOR ASSEMBLY -45, -47, -48, -50, -52, -54, -55, -57, -58, -59, -60, -61, -62, -63, -64, -65, -76, -77, -79, -85, -86, -87, -88, -89, -90, -91, -92, -93, -94, -95, -96, -97, -98, -99, -101, -102, -103, -104, -105	27-81-47	43	Jul 01/2009
65-44751	TAB LOCK ACTUATOR ASSEMBLY	27-30-01	7	Sep 01/1994
65-44760	LEADING EDGE SLAT HYDRAULIC ACTUATOR ASSEMBLY	27-81-47	43	Jul 01/2009
65-44761	AILERON AND ELEVATOR POWER CONTROL UNIT ASSEMBLY	27-09-21	54	Jul 01/2009
65-44771	MAIN GEAR DAMPER ASSEMBLY	32-30-61	37	Jul 01/2006
65-44800	STANDBY HYDRAULIC SYSTEM RESERVOIR ASSEMBLY	29-26-01	9	Sep 01/1995
65-44801	STANDBY HYDRAULIC SYSTEM RESERVOIR ASSEMBLY	29-26-01	9	Sep 01/1995
65-44810	MAIN GEAR LOCK ACTUATOR ASSEMBLY	32-30-21	16	Mar 01/2009
65-44821	TRAILING EDGE FLAP CONTROL VALVE ASSEMBLY	27-53-11	10	Mar 01/2001
65-44825	MAIN GEAR LOCK ACTUATOR ASSEMBLY	32-30-21	16	Mar 01/2009
65-44851	GROUND SPOILER LOCKING ACTUATOR ASSEMBLY	27-60-32	25	Nov 01/2008
65-44861	RUDDER POWER CONTROL UNIT ASSEMBLY	27-20-01	57	Jul 01/2003
65-44891	FLIGHT CONTROL MODULAR PACKAGE ASSEMBLY	29-09-11	12	Jul 01/2007
65-44896	SHUTOFF VALVE MODULAR PACKAGE ASSEMBLY	32-43-22	6	Mar 05/1991

NUMERICAL INDEX/NUMERIC

Page 25

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
65-44897	LANDING GEAR HYDRAULIC TRANSFER CYLINDER ASSEMBLY	32-40-01	20	Mar 01/2003
65-44898	MAIN GEAR DAMPER ASSEMBLY	32-30-61	37	Jul 01/2006
I 65-44910	MAIN GEAR ACTUATOR ASSEMBLY	32-30-11	50	Jul 01/2009
I 65-44925	MAIN GEAR ACTUATOR ASSEMBLY -7, -8, -9, -11, -12, -15, -16, -21, -22, -28, -29, -30, -31, -33, -34, -36, -41	32-30-11	50	Jul 01/2009
I 65-44925	MAIN LANDING GEAR RETRACT ACTUATOR ASSEMBLY -27, -32, -35, -42	32-30-13	30	Jul 01/2009
65-44931	FEEL ACTUATOR/BRAKE METERING VALVE ASSEMBLY	32-43-21	19	Nov 01/2000
65-44951	GROUND SPOILER ACTUATOR ASSEMBLY	27-60-31	8	Mar 01/1999
65-44960	OUTBOARD GROUND SPOILER LOCKING ACTUATOR ASSEMBLY -2, -4, -5, -6, -8, -9, -10, -11, -13, -15, -29, -30	27-60-33	16	Mar 01/2002
I 65-44960	OUTBOARD GROUND SPOILER ACTUATOR ASSEMBLY -23, -24, -25, -27, -28	27-62-71	28	Jul 01/2009
65-44961	OUTBOARD GROUND SPOILER LOCKING ACTUATOR ASSEMBLY	27-60-33	16	Mar 01/2002
I 65-44975	STEERING DEPRESSURIZATION VALVE ASSEMBLY	32-51-43	13	Jul 01/2009
65-44980	GROUND SERVICE DISCONNECT MODULAR PACKAGE ASSEMBLY	29-13-21	5	Dec 01/1995
65-44981	GROUND SERVICE DISCONNECT MODULAR PACKAGE ASSEMBLY	29-13-21	5	Dec 01/1995
65-44990	HYDRAULIC SYSTEM ISOLATION VALVE MODULAR ASSEMBLY	29-13-02	4	Sep 01/1997
65-44991	HYDRAULIC SYSTEM ISOLATION VALVE MODULAR ASSEMBLY	29-13-02	4	Sep 01/1997
65-45120	RUDDER PEDAL ASSEMBLY	27-27-01	4	Nov 01/2002
65-45121	AILERON AND ELEVATOR CONTROL COLUMN/ WHEEL ASSEMBLY	27-16-01	30	Nov 01/2008
65-45125	CONTROL STAND UPPER MECHANISM ASSEMBLY	27-16-11	20	Mar 01/2004
65-45132	COMPUTER ASSEMBLY	27-09-31	20	Jul 01/2006
65-45133	ELEVATOR/RUDDER CENTERING UNIT ASSEMBLY	27-24-31	5	Sep 01/1995

NUMERICAL INDEX/NUMERIC

Page 26

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
65-45134	RUDDER AND ELEVATOR FEEL ACTUATOR CYLINDER ASSEMBLY	27-09-09	33	Jul 01/2007
65-45136	ENGINE CONTROL COMPONENTS	76-14-11	11	Nov 01/2002
65-45140	RUDDER AND ELEVATOR FEEL ACTUATOR CYLINDER ASSEMBLY	27-09-09	33	Jul 01/2007
65-45142	RUDDER CONTROL TORQUE TUBE ASSEMBLY	27-27-04	7	Jul 01/2003
65-45150	RUDDER CONTROL QUADRANT ASSEMBLY	27-27-03	1	Nov 01/2007
65-45160	RUDDER POWER CONTROL UNIT ASSEMBLY	27-20-01	57	Jul 01/2003
65-45166	VERNIER ADJUSTMENT CONTROL ROD ASSEMBLY	27-37-09	16	Jul 01/2008
65-45171	POTENTIOMETER DRIVE ASSEMBLY	27-09-32	5	Mar 05/1991
I 65-45180	AILERON AND ELEVATOR POWER CONTROL UNIT ASSEMBLY	27-09-21	54	Jul 01/2009
65-45187	ELEVATOR CONTROL TORQUE TUBE ASSEMBLY	27-37-07	17	Mar 01/2008
65-45190	TAB LOCK ACTUATOR ASSEMBLY -4, -9, -10	27-30-01	7	Sep 01/1994
65-45190	ELEVATOR TAB CONTROL MECHANISM ASSEMBLY -3, -5	27-34-01	2	Jun 01/1994
65-45260	PASSENGER SERVICE UNIT ASSEMBLY	25-20-05	3	Jan 05/1981
65-45790	PASSENGER WINDOW ASSEMBLY -3, -13, -19, -505, -510, -512	56-21-31	15	Jul 01/2001
I 65-45790	PASSENGER WINDOW ASSEMBLY AND PASSENGER WINDOW PLUG ASSEMBLY -20, -38, -44, -56, -57, -58, -59, -61, -79, -83, -84, -85, -86, -87, -88, -89, -90, -509	56-21-51	21	Jul 01/2009
65-45830	EQUIPMENT ACCESS DOOR ASSEMBLY	52-46-04	10	Mar 01/2004
65-45849	AFT GALLEY DOOR ASSEMBLY -2, -159, -166, -169, -170, -536	52-46-05	37	Jul 01/2005
65-45849	AFT ENTRY GALLEY DOOR TORQUE TUBE ASSEMBLY -91, -139, -160, -178	52-46-21	4	Jul 01/2003
65-45871	FORWARD GALLEY DOOR ASSEMBLY -2, -114, -124, -132, -517, -519, -523	52-46-06	35	Jul 01/2006
I 65-45871	FWD GALLEY DOOR TORQUE TUBE ASSEMBLY -88, -102, -113, -142	52-46-22	14	Jul 01/2009
I 65-45953	CARGO NET/STANCHION ASSEMBLY -1	25-50-01	22	Jul 01/2009

NUMERICAL INDEX/NUMERIC

Page 27

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
65-45953	CARGO NET STANCHION ASSEMBLY -1, -2, -3, -4	25-56-05	2	Mar 01/1997
I 65-46100	MAIN GEAR SHOCK STRUT ASSEMBLY	32-11-11	100	Jul 01/2009
I 65-46108	MAIN GEAR MINOR COMPONENTS	32-16-31	72	Jul 01/2009
I 65-46112	MAIN GEAR MINOR COMPONENTS	32-16-31	72	Jul 01/2009
65-46141	MAIN GEAR UPLOCK ASSEMBLY	32-17-01	57	Nov 01/2008
I 65-46146	MAIN GEAR MINOR COMPONENTS	32-16-31	72	Jul 01/2009
65-46200	NOSE GEAR SHOCK STRUT ASSEMBLY -16, -17, -19, -21, -22, -25, -26, -27, -28, -29, -30, -32, -33, -34, -35, -36, -37, -38, -39, -40, -41, -42, -43, -46, -47, -48, -49, -50, -51, -52, -53, -55, -56, -63, -64, -65, -66, -67	32-21-11	79	Mar 01/2009
I 65-46200	NOSE GEAR SHOCK STRUT ASSEMBLY -60, -61, -62, -68, -69, -74, -76, -77, -78, -80, -81, -82, -83	32-21-58	69	Jul 01/2009
I 65-46204	NOSE GEAR MINOR COMPONENTS	32-01-03	63	Jul 01/2009
I 65-46205	NOSE GEAR MINOR COMPONENTS	32-01-03	63	Jul 01/2009
I 65-46230	NOSE GEAR MINOR COMPONENTS	32-01-03	63	Jul 01/2009
I 65-46232	NOSE GEAR MINOR COMPONENTS	32-01-03	63	Jul 01/2009
65-46245	NOSE GEAR LOCK LINK ASSEMBLY	32-34-13	27	Nov 01/2007
65-46329	MANUAL NOSE GEAR EXTENSION MECHANISM ASSEMBLY	32-34-10	2	Jun 01/1994
65-46360	SPOILER MIXER ASSEMBLY	27-67-01	20	Jul 01/2007
65-46370	RATIO CHANGER ASSEMBLY	27-67-11	25	Nov 01/2008
65-46375	BRAKE PEDAL BUS ASSEMBLY	32-47-01	4	Mar 01/2003
65-46401	MAIN LANDING GEAR BEAM INSTALLATION COMPONENTS	57-41-01	15	Nov 01/2007
I 65-46421	WING LEADING EDGE NO. 1 AND 6 SLAT ASSEMBLIES	57-56-01	24	Jul 01/2009
I 65-46422	WING LEADING EDGE NO. 2 AND 5 SLAT ASSEMBLIES	57-56-11	20	Jul 01/2009
65-46423	WING LEADING EDGE NO. 3 AND 4 SLAT ASSEMBLIES	57-56-21	13	Nov 01/2007
65-46424	WING LEADING EDGE NO. 1 AND 4 FLAP ASSEMBLIES	57-56-31	8	Jul 01/2006
65-46425	KRUEGER FLAP AND NO. 2 AND NO. 3 TAILGATE ASSEMBLIES -1, -2, -5, -6, -19, -20	57-56-41	3	Sep 01/1994

NUMERICAL INDEX/NUMERIC

Page 28

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
65-46425	KRUEGER FLAP AND NO. 2 AND NO. 3 TAILGATE ASSEMBLIES -7, -8, -17, -18, -25, -26, -27, -28, -29, -30, -31, -32, -33, -34, -35, -36	57-56-42	9	Nov 01/2007
65-46428	OUTBOARD FLAP TRACK ASSEMBLY	57-53-15	31	Mar 01/2009
I 65-46430	INBOARD TRAILING EDGE FORE FLAP ASSEMBLY	57-53-26	29	Jul 01/2009
I 65-46431	OUTBOARD TRAILING EDGE FORE FLAP ASSEMBLY	57-53-37	16	Jul 01/2009
I 65-46434	INBOARD TRAILING EDGE AFT FLAP ASSEMBLY	57-53-28	18	Jul 01/2009
I 65-46435	AFT FLAP ASSEMBLY	57-53-20	14	Jul 01/2009
65-46436	INBOARD TRAILING EDGE FLAP ASSEMBLY -5, -6, -7, -8, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -31, -32, -33SP, -34SP, -35SP, -36SP, -39SP, -40SP, -41SP, -42SP, -43SP, -44SP, -59, -60	57-53-22	49	Mar 01/2009
I 65-46436	INBOARD TRAILING EDGE FLAP ASSEMBLY -45SP, -46SP, -51SP, -52SP, -53SP, -54SP, -55SP, -56SP, -57SP, -58SP, -61SP, -62SP, -63SP, -64SP, -65SP, -66SP, -69SP, -70SP, -71SP, -72SP	57-53-24	39	Jul 01/2009
65-46437	OUTBOARD TRAILING EDGE FLAP ASSEMBLY -1, -2, -3, -4, -5, -6, -7, -8, -9, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -25, -26, -31, -32, -37, -38	57-53-32	51	Jul 01/2006
I 65-46437	OUTBOARD FLAP ASSEMBLY -21, -22, -27, -28, -29, -30, -33, -34, -35, -36, -39, -40, -45, -46	57-53-38	30	Jul 01/2009
65-46438	INBOARD FLAP TRACK ASSEMBLY	57-53-16	31	Jul 01/2008
65-46439	INBOARD FLAP TRACK ASSEMBLY	57-53-16	31	Jul 01/2008
65-46451	FLIGHT SPOILER PANEL ASSEMBLY	57-56-51	10	Mar 01/2007
65-46452	GROUND SPOILER PANEL ASSEMBLY	57-56-61	8	Mar 01/2009
65-46454	AILERON ASSEMBLY CONTROL TAB ASSEMBLY AND BALANCE PANEL ASSEMBLY	57-50-21	18	Mar 01/2006
65-46455	AILERON ASSEMBLY CONTROL TAB ASSEMBLY AND BALANCE PANEL ASSEMBLY	57-50-21	18	Mar 01/2006

NUMERICAL INDEX/NUMERIC

Page 29

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
65-46457	AILERON ASSEMBLY CONTROL TAB ASSEMBLY AND BALANCE PANEL ASSEMBLY	57-50-21	18	Mar 01/2006
65-46481	OUTBOARD FLAP CARRIAGE ASSEMBLY -1, -8, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, -26, -27, -28, -31, -32, -33, -34, -37, -38, -39, -40, -41, -42, -45, -46, -47, -48, -49, -50, -51, -52, -53, -54, -55, -56, -57, -58, -59, -60, -61, -62, -63, -64, -65, -66, -67, -68, -69, -70, -72, -73, -74, -75, -76, -81, -82, -83, -84, -85, -86, -95, -96	57-53-35	56	Mar 01/2007
65-46481	OUTBOARD FLAP CARRIAGE ASSEMBLY -87, -88, -89, -90, -91, -92, -93, -94, -97, -98, -101, -102, -103, -104, -105, -106, -107, -108, -109, -110, -111, -112, -113, -114, -115, -116, -117, -118, -119, -120, -121, -122, -123, -124, -133, -134, -135, -136, -143, -144, -145, -146, -147, -148, -149, -150	57-53-36	44	Jul 01/2009
65-46506	ENGINE CONTROL COMPONENTS	76-14-11	11	Nov 01/2002
65-46583	ACCESS AND BLOWOUT DOOR BUILDUP	52-46-09	1	Dec 05/1992
65-46591	AFT CARGO DOOR ASSEMBLY	52-36-12	30	Nov 01/2008
65-46921	FORWARD CARGO DOOR ASSEMBLY	52-36-02	35	Mar 01/2005
65-47300	PALLETIZED CARGO SYSTEM SIDE RESTRAINT GUIDE RAIL ASSEMBLY	25-56-27	1	Nov 10/1985
65-47301	PALLETIZED CARGO SYSTEM SIDE RESTRAINT GUIDE RAIL ASSEMBLY	25-56-27	1	Nov 10/1985
65-47836	OUTBOARD FOREFLAP SEQUENCING CARRIAGE/TOGGLE ASSEMBLY	27-57-22	19	Jul 01/2009
65-47952	AFT CARGO DOOR ASSEMBLY	52-36-12	30	Nov 01/2008
65-49110	CARGO SYSTEM ROLLER TRAY ASSEMBLY	25-56-35	0	Dec 25/1975
65-49115	CARGO PALLET LOCK ASSEMBLY	25-57-05	3	Dec 05/1984
65-49116	QC CARGO SYSTEM PALLET LOCK ASSEMBLY	25-57-06	0	Dec 25/1975
65-49118	QC CARGO SYSTEM SEAT PALLET LATCH ASSEMBLY	25-56-32	0	Dec 25/1975
65-49140	QC CARGO SYSTEM SIDE RESTRAINT ASSEMBLY	25-56-09	1	May 10/1977
65-49181	JT8D ENGINE MOUNT COMPONENTS	71-23-01	29	Mar 01/2004
65-49442	MAIN LANDING GEAR BEAM INSTALLATION COMPONENTS	57-41-01	15	Nov 01/2007

NUMERICAL INDEX/NUMERIC

Page 30

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
I 65-49509	OUTBD FLAP TRACK FAIRING INSTALLATION COMPONENTS	57-26-46	27	Jul 01/2009
I 65-49529	FLAP DRIVE COMPONENTS	27-55-41	19	Jul 01/2009
65-49580	FLIGHT SPOILER POWER CONTROL UNIT ASSEMBLY	27-60-41	53	Nov 01/2008
65-49582	AILERON CONTROL SHAFT ASSEMBLY	27-17-02	11	Mar 01/2008
I 65-49625	CARGO NET/STANCHION ASSEMBLY	25-50-01	22	Jul 01/2009
I 65-49626	CARGO NET/STANCHION ASSEMBLY	25-50-01	22	Jul 01/2009
I 65-49627	CARGO NET/STANCHION ASSEMBLY	25-50-01	22	Jul 01/2009
I 65-49628	CARGO NET/STANCHION ASSEMBLY	25-50-01	22	Jul 01/2009
I 65-49629	CARGO NET/STANCHION ASSEMBLY	25-50-01	22	Jul 01/2009
65-49662	PASSENGER WATER SYSTEM TANK ASSEMBLY	38-16-04	8	Nov 01/2004
I 65-49874	AILERON AND ELEVATOR POWER CONTROL UNIT ASSEMBLY -15, -28, -29, -30, -32, -34, -37, -39, -40, -43, -44, -47, -48, -49, -50, -52, -54	27-09-21	54	Jul 01/2009
65-49874	A AND B HYDRAULIC SYSTEM AILERON POWER CONTROL ASSEMBLY -10, -11, -16, -17, -21, -22, -23, -24, -56, -57, -60, -61, -62, -63, -64, -66	27-64-01	13	Jul 01/2008
I 65-49970	STABILIZER TRIM ACTUATOR ASSEMBLY	27-45-11	55	Jul 01/2009
65-50251	TRAILING EDGE FLAP DRIVE NO. 1 AND 8 TRANSMISSION ASSEMBLY	27-55-51	27	Mar 01/2005
65-50252	TRAILING EDGE FLAP DRIVE NO. 2 AND 7 TRANSMISSION ASSEMBLY	27-55-52	27	Mar 01/2005
65-50253	TRAILING EDGE FLAP DRIVE NO. 3 AND 6 TRANSMISSION ASSEMBLY	27-55-53	21	Mar 01/2005
65-50254	TRAILING EDGE FLAP DRIVE NO. 4 AND 5 TRANSMISSION ASSEMBLY	27-55-54	36	Mar 01/2005
65-50255	TRAILING EDGE FLAP DRIVE NO. 4 AND 5 TRANSMISSION ASSEMBLY	27-55-54	36	Mar 01/2005
65-50256	TRAILING EDGE FLAP DRIVE NO. 3 AND 6 TRANSMISSION ASSEMBLY	27-55-53	21	Mar 01/2005
65-50257	TRAILING EDGE FLAP DRIVE NO. 2 AND 7 TRANSMISSION ASSEMBLY	27-55-52	27	Mar 01/2005
65-50258	TRAILING EDGE FLAP DRIVE NO. 1 AND 8 TRANSMISSION ASSEMBLY	27-55-51	27	Mar 01/2005

NUMERICAL INDEX/NUMERIC

Page 31

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
65-50301	TRAILING EDGE FLAP DRIVE NO. 1 AND 8 TRANSMISSION ASSEMBLY	27-55-55	29	Mar 01/2005
65-50302	TRAILING EDGE FLAP DRIVE NO. 2 AND 7 TRANSMISSION ASSEMBLY	27-55-56	40	Mar 01/2005
65-50303	TRAILING EDGE FLAP DRIVE NO. 3 AND 6 TRANSMISSION ASSEMBLY	27-55-57	32	Mar 01/2008
65-50304	TRAILING EDGE FLAP DRIVE NO. 4 AND 5 TRANSMISSION ASSEMBLY	27-55-58	41	Nov 01/2007
65-50305	TRAILING EDGE FLAP DRIVE NO. 4 AND 5 TRANSMISSION ASSEMBLY	27-55-58	41	Nov 01/2007
65-50306	TRAILING EDGE FLAP DRIVE NO. 3 AND 6 TRANSMISSION ASSEMBLY	27-55-57	32	Mar 01/2008
65-50307	TRAILING EDGE FLAP DRIVE NO. 2 AND 7 TRANSMISSION ASSEMBLY	27-55-56	40	Mar 01/2005
65-50308	TRAILING EDGE FLAP DRIVE NO. 1 AND 8 TRANSMISSION ASSEMBLY	27-55-55	29	Mar 01/2005
65-50321	TRAILING EDGE FLAP DRIVE NO. 1 AND 8 TRANSMISSION ASSEMBLY	27-55-55	29	Mar 01/2005
65-50322	TRAILING EDGE FLAP DRIVE NO. 2 AND 7 TRANSMISSION ASSEMBLY	27-55-56	40	Mar 01/2005
65-50323	TRAILING EDGE FLAP DRIVE NO. 3 AND 6 TRANSMISSION ASSEMBLY	27-55-57	32	Mar 01/2008
65-50324	TRAILING EDGE FLAP DRIVE NO. 4 AND 5 TRANSMISSION ASSEMBLY	27-55-58	41	Nov 01/2007
65-50325	TRAILING EDGE FLAP DRIVE NO. 4 AND 5 TRANSMISSION ASSEMBLY	27-55-58	41	Nov 01/2007
65-50326	TRAILING EDGE FLAP DRIVE NO. 3 AND 6 TRANSMISSION ASSEMBLY	27-55-57	32	Mar 01/2008
65-50327	TRAILING EDGE FLAP DRIVE NO. 2 AND 7 TRANSMISSION ASSEMBLY	27-55-56	40	Mar 01/2005
65-50328	TRAILING EDGE FLAP DRIVE NO. 1 AND 8 TRANSMISSION ASSEMBLY	27-55-55	29	Mar 01/2005
65-50520	NOSE WHEEL WELL DOOR ASSEMBLY	32-22-35	17	Jul 01/2009
65-50538	JT8D ENGINE MOUNT COMPONENTS	71-23-01	29	Mar 01/2004
65-50587	FLAP DRIVE COMPONENTS	27-55-41	19	Jul 01/2009
65-50706	ENGINE MOUNT SUPPORT BRACKET ASSEMBLY	57-40-13	0	Jul 05/1981
65-50765	OUTBD FLAP TRACK FAIRING INSTALLATION COMPONENTS	57-26-46	27	Jul 01/2009

NUMERICAL INDEX/NUMERIC

Page 32

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
65-50901	AUXILIARY POWER UNIT ASSEMBLY	49-10-21	43	Jul 01/2008
65-50904	AUXILIARY POWER UNIT ACCESS DOOR ASSEMBLY	52-46-10	7	Sep 05/1991
I 65-50909	FIRE CONTROL AUXILIARY POWER UNIT ASSEMBLY	26-22-01	7	Jul 01/2009
65-50949	PNEUMATIC ACTUATOR ASSEMBLY	49-50-01	0	Mar 25/1975
65-51201	RAM AIR MODULATION EXHAUST DUCT ASSEMBLY	21-26-05	8	Mar 01/2003
I 65-51280	FLAP DRIVE COMPONENTS	27-55-41	19	Jul 01/2009
65-51296	ENGINE CONTROL DRUM INSTALLATION COMPONENTS	76-14-22	5	Nov 01/2000
65-51500	UNIT ASSY, TRAILING EDGE FLAP DRIVE POWER	27-55-31	1	Dec 05/1990
65-51510	GEARBOX ASSY, TRAILING EDGE FLAP DRIVE RIGHT ANGLE	27-55-11	5	Nov 01/2002
65-51513	GEARBOX ASSY, TRAILING EDGE FLAP DRIVE ANGLE	27-55-21	3	Dec 05/1992
65-51530	AFT AIRSTAIR ENTRY DOOR ASSEMBLY	52-16-02	0	Jun 25/1973
65-51600	FLAP CONTROL INPUT QUADRANT SUPPORT ASSEMBLY	27-57-02	7	Nov 01/2003
65-51602	TRAILING EDGE FLAP CONTROL VALVE ASSEMBLY -2, -29, -30	27-53-11	10	Mar 01/2001
65-51602	VALVE ASSY, TRAILING EDGE FLAP CONTROL -11	27-53-12	9	Mar 01/2003
65-51602	LEADING EDGE AND TRAILING EDGE FLAPS CONTROL ASSEMBLY -5, -6, -7, -8, -9, -10, -20, -21, -27, -31, -32, -33, -35	27-54-11	10	Jun 01/1994
65-51602	CONTROL ASSY, LEADING EDGE AND TRAILING EDGE FLAPS -39, -43, -47, -49, -51, -53	27-54-12	11	Jul 01/2001
65-51705	PALLETIZED CARGO SYSTEM SIDE RESTRAINT ASSEMBLY	25-56-38	2	Dec 05/1991
65-51719	QC CARGO SYSTEM SEAT PALLET LATCH ASSEMBLY	25-56-32	0	Dec 25/1975
I 65-52144	LE AUXILIARY SLAT TRACK ASSEMBLY	27-81-52	8	Jul 01/2009
I 65-52145	LE AUXILIARY SLAT TRACK ASSEMBLY	27-81-52	8	Jul 01/2009
I 65-52146	LE AUXILIARY SLAT TRACK ASSEMBLY	27-81-52	8	Jul 01/2009

NUMERICAL INDEX/NUMERIC

Page 33

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
65-52201	MAIN GEAR INNER DOOR ASSEMBLY	32-16-02	5	Jul 01/2004
65-52202	MAIN LANDING GEAR CENTER DOOR ASSEMBLY	32-16-03	5	Mar 01/2006
65-52209	LANDING GEAR BEAM INBOARD ATTACH LINK ASSEMBLY	57-41-21	10	Mar 01/2003
65-52235	MAIN LANDING GEAR BEAM INSTALLATION COMPONENTS	57-41-01	15	Nov 01/2007
65-52263	ENGINE FIXED FAIRING ASSEMBLY	71-13-14	3	Mar 01/2003
65-52283	AILERON CENTERING MECHANISM ASSEMBLY	27-14-21	21	Mar 01/2008
65-52284	AILERON GEARED TRIM ASSEMBLY	27-14-11	1	Jul 05/1978
65-52459	ENGINE CONTROL DRUM INSTALLATION COMPONENTS	76-14-22	5	Nov 01/2000
65-52811	LANDING GEAR ACCESSORY UNIT ASSEMBLY, M338 -21, -23, -25, -30, -31, -44, -51, -54, -73, -74, -75, -76, -77, -84, -85, -117, -118, -119, -120, -121, -135, -137, -144, -145, -146, -147, -148, -151	32-66-40	18	Sep 01/1997
65-52811	LANDING GEAR ACCESSORY UNIT ASSEMBLY, M338 -100, -101, -139, -166, -167	32-66-43	6	Jun 05/1992
65-52811	LANDING GEAR ACCESSORY UNIT ASSEMBLY, M338 -32, -34, -40, -42, -49, -58, -60, -62, -64, -66, -78, -82, -83, -89, -96, -109, -111, -113, -115, -122, -123, -126, -127, -133, -140, -149, -155, -162, -175, -176, -183, -184	32-66-44	36	Jul 01/2005
65-52811	LANDING GEAR ACCESSORY UNIT ASSEMBLY, M338 -50, -70, -71, -90, -98, -99, -103, -134, -142, -143, -156, -164, -165, -169, -179	32-66-45	23	Jul 01/2008
65-52811	LANDING GEAR ACCESSORY UNIT ASSEMBLY, M338 -181	32-66-47	12	Jul 01/2009
65-52811	LANDING GEAR ACCESSORY UNIT ASSEMBLY, M338 -187	32-66-50	9	Jul 01/2009
65-52823	AIRPLANE IDENTIFICATION UNIT MODULE ASSEMBLY	23-27-03	9	Jul 01/2009

NUMERICAL INDEX/NUMERIC

Page 34

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
65-52854	GALLEY/SERVICE DOOR GUIDE ARM ASSEMBLY	52-41-02	6	Nov 01/2001
65-52873	AFT ENTRY DOOR ASSEMBLY -2, -159, -167, -168, -176, -180, -182, -189, -567	52-16-03	37	Mar 01/2007
65-52873	AFT ENTRY GALLEY DOOR TORQUE TUBE ASSEMBLY -91, -156, -157, -169, -195, -528	52-46-21	4	Jul 01/2003
65-52925	FLAP DRIVE COMPONENTS	27-55-41	19	Jul 01/2009
65-52956	CARGO NET/STANCHION ASSEMBLY	25-50-01	22	Jul 01/2009
65-52966	ENGINE CONTROL DRUM INSTALLATION COMPONENTS	76-14-22	5	Nov 01/2000
65-52970	CARGO NET/STANCHION ASSEMBLY -6, -15, -16, -17, -18, -26	25-50-01	22	Jul 01/2009
65-52970	CARGO NET STANCHION ASSEMBLY -1, -2, -6, -15, -16, -17, -18, -24, -26, -28	25-56-05	2	Mar 01/1997
65-52985	ENGINE CONTROL DRUM INSTALLATION COMPONENTS	76-14-22	5	Nov 01/2000
65-53521	AFT LAVATORY SERVICE UNIT ASSEMBLY	25-46-02	0	Mar 10/1970
65-53544	AFT ATTENDANT OXYGEN SERVICE UNIT ASSEMBLY	25-26-01	3	Mar 05/1990
65-53788	AILERON POWER CONTROL SPRING CARTRIDGE ASSEMBLY	27-12-21	5	Mar 01/2008
65-53882	CARGO NET/STANCHION ASSEMBLY -1, -2, -3, -4, -5, -6, -21, -22, -23, -24, -25, -26, -33, -34, -39, -40, -501, -502, -503, -504, -505, -506	25-50-01	22	Jul 01/2009
65-53882	CARGO NET STANCHION ASSEMBLY -1, -2, -3, -4, -5, -6, -21, -22, -23, -24, -25, -26, -33, -34, -39, -40, -501, -502, -503, -504, -505, -506	25-56-05	2	Mar 01/1997
65-54137	PALLETIZED CARGO SYSTEM MAIN CARGO DOOR THRESHOLD ASSEMBLY	25-56-13	1	Apr 05/1977
65-54200	AILERON CONTROL TRANSFER MECHANISM ASSEMBLY	27-16-05	13	Mar 01/2003
65-54204	ELEVATOR CONTROL QUADRANT ASSEMBLY	27-37-02	7	Nov 01/2007
65-54219	LANDING GEAR CONTROL LEVER ASSEMBLY	32-34-08	11	Mar 01/2009
65-54220	NOSE GEAR SPRING CARTRIDGE ASSEMBLY	32-22-31	3	Mar 01/2000
65-54221	LANDING GEAR CONTROL LEVER ASSEMBLY	32-34-02	3	Jul 01/2004

NUMERICAL INDEX/NUMERIC

Page 35

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
I 65-54404	CARGO NET/STANCHION ASSEMBLY	25-50-01	22	Jul 01/2009
65-54852	ACCESS AND BLOWOUT DOOR BUILDUP	52-46-09	1	Dec 05/1992
65-54860	ACCESS AND BLOWOUT DOOR BUILDUP	52-46-09	1	Dec 05/1992
65-54916	MAIN CARGO DOOR ASSEMBLY	52-36-63	7	Dec 01/1996
I 65-55300	CONTROL CABIN FOOT OUTLET ASSEMBLY	21-40-01	9	Jul 01/2009
I 65-55509	FLAP DRIVE COMPONENTS	27-55-41	19	Jul 01/2009
I 65-55510	OUTBD FLAP TRACK FAIRING INSTALLATION COMPONENTS	57-26-46	27	Jul 01/2009
I 65-55552	FLAP DRIVE COMPONENTS	27-55-41	19	Jul 01/2009
65-55731	CONTROL WHEEL STEERING AILERON DRUM ASSEMBLY -21, -23, -24, -26, -27, -35, -55, -57, -62, -63, -64, -65, -66, -70, -73, -74, -75, -80, -81	27-16-09	8	Nov 01/2005
65-55731	CONTROL WHEEL STEERING AILERON DRUM ASSEMBLY -5, -12, -14, -15, -54, -56	27-16-10	6	Mar 01/2001
65-55896	ANNUNCIATOR LIGHTS MODULE ASSEMBLY, M238	31-36-48	0	May 15/1969
65-56600	FLAP ASYMMETRY SHUTOFF MECHANISM ASSEMBLY	27-57-01	0	Dec 25/1975
65-56632	AFT AIRSTAIR ASSY	52-66-02	12	Mar 01/2005
65-56645	ENGINE CONTROL DRUM INSTALLATION COMPONENTS	76-14-22	5	Nov 01/2000
65-57177	PALLETIZED CARGO SYSTEM RETRACTABLE SIDE GUIDE ASSEMBLY	25-56-28	0	Dec 25/1975
65-57481	AIR CONDITIONING PRINTED CIRCUIT ASSEMBLY	21-09-05	0	Jun 10/1970
65-58116	AFT AIRSTAIRS MECHANISM REDUCTION GEARBOX ASSEMBLY	52-65-01	1	Mar 01/1999
I 65-58220	GALLEY FLUORESCENT LIGHT ASSEMBLY	33-20-20	9	Jul 01/2009
I 65-58255	FORWARD LAVATORY OXYGEN SERVICE UNIT INSTALLATION	25-26-02	6	Jul 01/2009
65-59642	AFT AIRSTAIRS GOVERNOR ASSEMBLY	52-64-02	1	Jul 05/1976
65-60500	AFT AIRSTAIRS CONTROL CONSOLE MECHANISM ASSEMBLY	52-64-03	2	Sep 05/1993
65-60529	NOSE COWL ASSEMBLY	71-13-01	4	Sep 05/1993
65-60584	ELEVATOR CONTROLS FEEL AND CENTERING ROD ASSEMBLY	27-37-06	0	May 15/1969

NUMERICAL INDEX/NUMERIC

Page 36

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
65-60586	ELEVATOR CONTROL FEEL AND CENTERING TUBE/CRANK ASSEMBLY	27-37-13	5	Jun 05/1988
65-62238	CARGO DOOR LATCH ACTUATOR ASSEMBLY	52-30-61	2	Nov 01/2000
I 65-62575	AUXILIARY POWER UNIT EXHAUST DUCT MUFFLER ASSEMBLY	49-13-01	16	Jul 01/2009
65-62598	APU FIRE WARNING HORN ASSEMBLY, M277	26-10-33	0	Nov 10/1969
I 65-63413	OUTBOARD FOREFLAP SEQUENCING CARRIAGE/TOGGLE ASSEMBLY	27-57-22	19	Jul 01/2009
I 65-63415	MAIN LANDING GEAR DOOR INSTALLATION COMPONENTS	32-16-25	7	Jul 01/2009
65-63416	MAIN GEAR INNER DOOR ASSEMBLY	32-16-02	5	Jul 01/2004
65-63629	PALLETIZED CARGO SYSTEM CANTED TRACK PALLET LOCK ASSEMBLY	25-57-11	1	Jul 05/1977
65-63630	PALLETIZED CARGO SYSTEM CANTED TRACK PALLET LOCK ASSEMBLY	25-57-12	0	Dec 25/1975
65-63633	PALLETIZED CARGO SYSTEM TRANSFER PANEL ASSEMBLY	25-56-46	1	Jul 05/1981
65-63639	PALLETIZED CARGO SYSTEM SIDE RESTRAINT GUIDE RAIL ASSEMBLY	25-56-30	2	Dec 05/1985
65-63642	PALLETIZED CARGO SYSTEM SIDE RESTRAINT GUIDE RAIL ASSEMBLY	25-56-30	2	Dec 05/1985
65-63851	UNIT ASSY, TRAILING EDGE FLAP DRIVE POWER	27-55-32	17	Jul 01/2003
65-65310	ELEVATOR BUSS ASSEMBLY	27-37-08	18	Mar 01/2005
65-65382	CENTER WING TANK SUMP DRAIN ASSEMBLY	28-12-11	5	Mar 05/1990
65-65919	JT8D THRUST REVERSER TAILPLUG ASSEMBLY	78-38-71	1	Jun 05/1991
I 65-66213	AUXILIARY POWER UNIT LOWER SHROUD ASSEMBLY	49-10-25	8	Jul 01/2009
65-66218	AUXILIARY POWER UNIT COOLING AIR VALVE ASSEMBLY	49-50-03	4	Mar 05/1989
65-67158	OUTBOARD FLAP TRACK ASSEMBLY	57-53-15	31	Mar 01/2009
65-67172	MAIN LANDING GEAR BEAM INSTALLATION COMPONENTS	57-41-01	15	Nov 01/2007
I 65-67173	LE AUXILIARY SLAT TRACK ASSEMBLY	27-81-52	8	Jul 01/2009
I 65-67174	LE AUXILIARY SLAT TRACK ASSEMBLY	27-81-52	8	Jul 01/2009
I 65-67175	LE AUXILIARY SLAT TRACK ASSEMBLY	27-81-52	8	Jul 01/2009
65-67194	MAIN GEAR OUTBOARD DOOR ASSEMBLY	32-16-04	4	Mar 01/2009

NUMERICAL INDEX/NUMERIC

Page 37

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
65-67303	AFT AIRSTAIR DRIVE EMERGENCY EXTENSION LATCH/LOCKOUT MECHANISM ASSEMBLY	52-64-05	3	Jul 05/1981
65-67747	ACCESS AND BLOWOUT DOOR BUILDUP	52-46-09	1	Dec 05/1992
65-67832	PALLETIZED CARGO SYSTEM MAIN CARGO DOOR THRESHOLD ASSEMBLY	25-56-13	1	Apr 05/1977
I 65-67905	MLG MANUAL EXTENSION UPLOCK RELEASE MECHANISM ASSEMBLY	32-34-17	9	Jul 01/2009
65-67906	RAM AIR DEFLECTOR EXTENSION LINK ASSEMBLY	21-50-01	0	Jul 05/1981
I 65-68243	LE AUXILIARY SLAT TRACK ASSEMBLY	27-81-52	8	Jul 01/2009
I 65-68269	OUTBD FLAP TRACK FAIRING INSTALLATION COMPONENTS	57-26-46	27	Jul 01/2009
I 65-68271	FLAP DRIVE COMPONENTS	27-55-41	19	Jul 01/2009
I 65-68275	LE AUXILIARY SLAT TRACK ASSEMBLY	27-81-52	8	Jul 01/2009
I 65-68276	LE AUXILIARY SLAT TRACK ASSEMBLY	27-81-52	8	Jul 01/2009
65-68297	INBOARD MID FLAP CARRIAGE ASSEMBLY	57-53-40	10	Mar 01/2004
65-68621	NOSE COWL ASSEMBLY	71-13-01	4	Sep 05/1993
65-68935	AUXILIARY POWER UNIT COOLING AIR VALVE ASSEMBLY	49-50-02	4	Jun 01/1996
65-68945	APU FIRE WARNING HORN ASSEMBLY, M277	26-10-34	4	Jul 01/2005
65-68967	AFT ATTENDANT OXYGEN SERVICE UNIT ASSEMBLY	25-26-01	3	Mar 05/1990
65-69584	HOIST FITTING ASSEMBLY	57-27-01	3	Dec 05/1990
65-70190	ENGINE TAILPIPE ASSEMBLY	78-38-43	15	Mar 01/2003
65-70973	RUDDER CONTROLS CENTERING UNIT ASSEMBLY	27-24-32	7	Nov 01/2002
65-71926	FLIPPER FLAP ASSEMBLY	57-53-23	5	Nov 01/2000
65-71930	HINGED FLAP ASSEMBLY	57-53-33	4	Mar 01/1999
65-71940	INBOARD TRAILING EDGE FLAP ASSEMBLY	57-53-22	49	Mar 01/2009
65-71969	INBOARD TRAILING EDGE FLAP ASSEMBLY	57-53-22	49	Mar 01/2009
65-71972	OUTBOARD TRAILING EDGE FLAP ASSEMBLY	57-53-32	51	Jul 01/2006
I 65-73271	FLAP DRIVE COMPONENTS	27-55-41	19	Jul 01/2009
65-73654	ENGINE CONTROL DRUM INSTALLATION COMPONENTS	76-14-22	5	Nov 01/2000
65-73675	THRUST REVERSER HYDRAULIC CONTROL VALVE ASSEMBLY	78-33-11	7	Nov 01/1999

NUMERICAL INDEX/NUMERIC

Page 38

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
I 65-73732	OUTBOARD FOREFLAP SEQUENCING CARRIAGE/TOGGLE ASSEMBLY	27-57-22	19	Jul 01/2009
I 65-73761	MAIN GEAR ASSEMBLY -11, -12, -13, -14, -15, -16, -31, -32, -33, -34, -35, -36, -37, -38, -39, -40, -41, -42, -65, -66, -81, -82, -87, -88, -97, -98, -109, -110, -115, -116, -121, -122, -125, -126, -127, -128	32-16-01	93	Jul 01/2009
65-73761	MAIN GEAR SIDE STRUT ASSEMBLY -21, -22, -23, -24, -25, -26, -43, -44, -45, -46, -47, -48, -49, -50, -55, -56, -77, -78, -85, -86, -93, -94, -95, -96, -103, -105, -106, -111, -112, -113, -114, -123, -124	32-17-11	77	Mar 01/2009
I 65-73762	NOSE GEAR ASSEMBLY -21, -25, -26, -27, -28	32-21-48	63	Jul 01/2009
65-73762	NOSE GEAR ASSEMBLY -4, -5, -7, -9, -18	32-26-01	69	Nov 01/2007
65-73769	737 POWER PLANT BUILDUP	71-03-01	65	Mar 01/2005
65-73773	COWL LH PANEL ASSEMBLY	71-13-11	3	Nov 01/2004
65-73774	COWL RH PANEL ASSEMBLY	71-13-12	1	Jan 05/1980
65-73781	HORIZONTAL TAIL CENTER SECTION ASSEMBLY -2, -7, -501	55-10-05	14	Jul 01/2002
I 65-73781	HORIZONTAL TAIL CENTER SECTION ASSEMBLY -7	55-10-06	16	Jul 01/2009
65-73784	ELEVATOR ASSEMBLY AND TAB ASSEMBLY	55-20-10	12	Jul 01/2004
65-73788	RUDDER ASSEMBLY	55-40-10	7	Jul 01/2008
65-73799	ELEVATOR ASSEMBLY AND TAB ASSEMBLY	55-20-10	12	Jul 01/2004
65-73874	SYSTEM B HYDRAULIC MODULAR PACKAGE ASSEMBLY	29-23-31	11	Dec 05/1993
65-74536	ENGINE CONTROL DRUM INSTALLATION COMPONENTS	76-14-22	5	Nov 01/2000
65-74537	ENGINE CONTROL DRUM INSTALLATION COMPONENTS	76-14-22	5	Nov 01/2000
65-74572	PASSENGER SEAT PALLET QC CARGO SYSTEM STOP ASSEMBLY	25-56-34	0	Jun 05/1984
65-75339	RUDDER ASSEMBLY	55-40-10	7	Jul 01/2008
65-75957	RUDDER ASSEMBLY	55-40-10	7	Jul 01/2008
65-75960	AILERON CENTERING MECHANISM ASSEMBLY	27-14-21	21	Mar 01/2008

NUMERICAL INDEX/NUMERIC

Page 39

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
65-76611	NOSE GEAR GRAVEL DEFLECTOR ASSEMBLY -26	32-26-16	9	Nov 01/2005
65-76611	NOSE GEAR GRAVEL DEFLECTOR ASSEMBLY -28, -43	32-26-17	11	Nov 01/2008
I 65-76642	NOSE WHEEL WELL DOOR ASSEMBLY	32-22-35	17	Jul 01/2009
65-76670	PASSENGER SEAT PALLET QC CARGO SYSTEM STOP ASSEMBLY	25-56-34	0	Jun 05/1984
65-76944	SEAT PALLET ATTACH FITTING ASSEMBLY	25-56-33	1	Jun 05/1984
I 65-78966	CARGO NET/STANCHION ASSEMBLY	25-50-01	22	Jul 01/2009
65-78980	NOSE COWL ASSEMBLY	71-13-01	4	Sep 05/1993
65-78987	PNEUMATIC ACTUATOR ASSEMBLY	49-50-01	0	Mar 25/1975
65-79164	PASSENGER SERVICE UNIT ASSEMBLY -119, -120, -121, -122, -123, -124, -125, -126, -127, -128, -129, -130, -131, -132, -133, -134, -135, -136, -159, -160, -161, -162	25-20-94	9	Mar 01/2003
65-79164	PASSENGER SERVICE UNIT ASSEMBLY -139, -140, -141, -142, -143, -144, -145, -146, -147, -148, -149, -150, -151, -152, -153, -154, -155, -156, -165, -166, -167, -168, -169, -170, -171, -172, -173, -174	25-20-95	4	Sep 05/1979
65-79164	PASSENGER SERVICE UNIT ASSEMBLY -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, -26, -27, -28, -29, -30, -31, -32, -35, -36, -37, -38, -39, -40, -45, -46, -47, -48, -53, -54, -55, -56, -57, -58, -59, -60, -67, -68, -69, -70, -71, -72, -73, -74, -75, -76, -77, -78, -83, -84, -85, -86, -87, -88, -89, -90, -91, -92, -93, -94, -95, -96, -97, -98, -99, -100, -101, -102, -103, -104, -105, -106, -109, -110, -111, -112, -113, -114, -115, -116, -117, -118, -175, -176	25-21-03	3	Nov 10/1982
65-79165	PASSENGER SERVICE UNIT BASIC SHELL ASSEMBLY	25-20-96	1	Nov 10/1982
65-79425	ELEVATOR TAB CONTROL MECHANISM ASSEMBLY	27-34-02	6	Nov 01/2003
65-79474	ENGINE CONTROLS DRUM/BRAKE ASSEMBLY	76-14-21	5	Jul 01/2000
65-79475	ENGINE CONTROLS DRUM/BRAKE ASSEMBLY	76-14-21	5	Jul 01/2000
65-79949	OUTBOARD FLAP CARRIAGE ASSEMBLY	57-53-35	56	Mar 01/2007
65-79950	FLIGHT SPOILER PANEL ASSEMBLY -7	57-56-51	10	Mar 01/2007

NUMERICAL INDEX/NUMERIC

Page 40

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
65-79950	GROUND SPOILER PANEL ASSEMBLY -1, -13, -14	57-56-61	8	Mar 01/2009
65-79952	FLIGHT SPOILER PANEL ASSEMBLY -7, -8	57-56-51	10	Mar 01/2007
65-79952	GROUND SPOILER PANEL ASSEMBLY -4, -5, -6	57-56-61	8	Mar 01/2009
65-79964	OUTBD FLAP TRACK FAIRING INSTALLATION COMPONENTS	57-26-46	27	Jul 01/2009
65-80021	AIR CONDITIONING ACCESSORY UNIT ASSEMBLY, M324	21-09-01	14	Jul 01/2008
65-80025	AUTO THROTTLE CLUTCH/CAM ASSEMBLY	22-34-02	8	Mar 05/1984
65-80051	NOSE GEAR MINOR COMPONENTS	32-01-03	63	Jul 01/2009
65-80055	FLAP POSITION AND STALL WARNING TRANSMITTER GEARBOX ASSEMBLY	27-56-51	6	Dec 01/1994
65-80079	NOSE COWL ASSEMBLY	71-13-01	4	Sep 05/1993
65-80145	STOWAGE COMPARTMENT SNUBBER ASSEMBLY	25-21-04	4	Jun 05/1986
65-80213	PALLETIZED CARGO SYSTEM SIDE RESTRAINT GUIDE ASSEMBLY -7, -15, -20	25-56-22	0	Dec 25/1975
65-80213	PALLETIZED CARGO SYSTEM SIDE RESTRAINT GUIDE RAIL ASSEMBLY -3, -5, -6, -13	25-56-27	1	Nov 10/1985
65-80930	NOSE GEAR SPRING CARTRIDGE ASSEMBLY	32-22-32	2	Nov 01/2002
65-80984	LE AUXILIARY SLAT TRACK ASSEMBLY	27-81-52	8	Jul 01/2009
65-80990	LE AUXILIARY SLAT TRACK ASSEMBLY	27-81-52	8	Jul 01/2009
65-81432	CARGO SYSTEM ROLLER TRAY ASSEMBLY -17	25-56-35	0	Dec 25/1975
65-81432	CARGO PALLET LOCK ASSEMBLY -15, -16	25-57-05	3	Dec 05/1984
65-81643	FLIGHT INSTRUMENT MODULE ASSEMBLY, P1-3 ,P2-1 ,P3-1 ,P3-3	31-36-75	1	Jun 10/1972
65-81684	FLIGHT INSTRUMENT MODULE ASSEMBLY, P1-3, P3-3	31-36-82	0	Mar 25/1973



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
65-82721	PARTIAL SECTIONS PASSENGER SERVICE UNIT ASSEMBLY -1, -2, -3, -4, -5, -6, -7, -8, -19, -23, -24, -25, -26, -27, -28, -29, -30, -37, -38, -39, -40, -45, -46, -47, -48, -49, -50, -51, -52, -53, -54, -67, -68, -69, -70, -71, -72, -75, -77, -78, -79	25-20-11	0	Dec 25/1975
65-82721	PARTIAL SECTIONS PASSENGER SERVICE UNIT ASSEMBLY -83, -84, -87, -88, -89, -90, -91, -92, -93, -94	25-20-16	1	Jan 05/1977
65-82764	MAIN LANDING GEAR BEAM INSTALLATION COMPONENTS	57-41-01	15	Nov 01/2007
65-82768	LANDING GEAR BEAM INBOARD ATTACH LINK ASSEMBLY	57-41-21	10	Mar 01/2003
65-82788	ENGINE TAILPIPE ASSEMBLY	78-38-43	15	Mar 01/2003
65-84131	ENGINE AND APU FIRE CONTROL MODULE ASSEMBLY, P8-1	26-10-46	23	Jul 01/2008
65-84161	MAIN GEAR MINOR COMPONENTS	32-16-31	72	Jul 01/2009
65-84163	NOSE GEAR MINOR COMPONENTS	32-01-03	63	Jul 01/2009
65-85316	AUDIO ACCESSORY UNIT ASSEMBLY, M69, M769 -11	23-56-07	33	Jul 01/2008
65-85316	AUDIO ACCESSORY UNIT ASSEMBLY, M69 -5, -9	23-56-17	10	Jul 01/2008
65-85369	EXTENDED NOSE DOME ASSEMBLY -1, -2, -3, -4, -11, -12, -13, -14, -15, -16, -21, -22	71-13-15	6	Mar 05/1992
65-85369	NOSE DOME ASSEMBLY -11, -12, -15, -16	71-13-16	2	Mar 01/2004
65-85378	NOSE FAT LIP COWL ASSEMBLY	71-13-02	19	Nov 01/2002
65-86025	NOSE FAT LIP COWL ASSEMBLY	71-13-02	19	Nov 01/2002
65-86054	FLIGHT INSTRUMENT MODULE ASSEMBLY	31-36-86	1	Mar 25/1975
65-86412	PASSENGER SERVICE UNIT BASIC SHELL ASSEMBLY	25-20-15	1	Nov 10/1980
65-86413	PASSENGER SERVICE UNIT ASSEMBLY -1, -2, -3, -4, -5, -6, -7, -8, -9, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -28, -29, -30, -31, -32, -33, -34, -35, -36, -37, -38, -39, -40, -41, -42, -43, -45, -46, -47, -48, -49, -50, -51, -53, -56, -99, -100, -104, -106	25-20-12	5	Jun 05/1987

NUMERICAL INDEX/NUMERIC

Page 42

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
65-86413	PASSENGER SERVICE UNIT ASSEMBLY -57, -58, -59, -60, -61, -62, -63, -64, -65, -66, -67, -68, -69, -70, -71, -72, -73, -74, -75, -76, -77, -78, -79, -80	25-20-13	2	Jul 01/2002
65-86413	PASSENGER SERVICE UNIT ASSEMBLY -81, -82, -83, -84, -85, -86, -87, -88, -89, -90, -91, -92, -93, -94, -95, -97, -98, -101, -102, -103	25-20-14	2	Nov 10/1982
65-86747	NOSE GEAR GRAVEL DEFLECTOR ASSEMBLY	32-26-15	10	Nov 01/2004
65-86762	NOSE GEAR GRAVEL DEFLECTOR ASSEMBLY	32-26-15	10	Nov 01/2004
65-87833	FLIGHT INSTRUMENT MODULE ASSEMBLY, P1-1, P1-3, P2-1, P3-1, P3-3	31-36-87	0	Jun 25/1974
65-88936	AUXILIARY POWER UNIT ASSEMBLY	49-10-21	43	Jul 01/2008
65-89347	POWER INTERRUPTION FLAG DELAY, M1240 AND DFDR/QAR POWER SWITCH MODULE ASSEMBLY, M1079	34-21-06	3	Dec 05/1984
65C10321	PASSENGER SERVICE MODIFIED UNIT ASSEMBLY	25-21-08	7	Sep 05/1990
65C10324	PASSENGER SERVICE UNIT MODULE ASSEMBLY	25-21-09	1	Jul 05/1976
65C10585	OXYGEN DROP SERVICE UNIT ASSEMBLY	25-21-10	4	Jul 05/1981
65C10590	PARTIAL SECTION PASSENGER SERVICE UNIT ASSEMBLY	25-21-11	3	Jun 05/1984
65C14098	AUTO THROTTLE CLUTCH/CAM ASSEMBLY	22-34-02	8	Mar 05/1984
65C14964	CENTER INSTRUMENT MODULE ASSEMBLY, P2-2	31-36-13	6	Nov 01/2008
65C16136	PASSENGER SEAT PALLET QC CARGO SYSTEM STOP ASSEMBLY	25-56-34	0	Jun 05/1984
65C16481	ENGINE CONTROL COMPONENTS	76-14-11	11	Nov 01/2002
65C16839	CARRY ALL PASSENGER SERVICE UNIT ASSEMBLY	25-23-95	8	Sep 01/1995
65C18257	CONTROL STAND THRUST HANDLE ASSEMBLY	76-18-05	14	Mar 01/2003
65C18297	AUTO THROTTLE CLUTCH/CAM ASSEMBLY	22-34-02	8	Mar 05/1984
65C20204	CARRY-ALL COMPARTMENT TWO-LINK ARTICULATED HINGE ASSEMBLY	25-21-05	3	Mar 01/2000
65C21465	WINDOW AND COMBINED PITOT STATIC HEAT MODULE ASSEMBLY, P5-9	31-10-68	19	Nov 01/2008
65C21468	CARGO COMPARTMENT PROTECTIVE GRILL ASSEMBLY	25-50-04	9	Jul 01/2009

NUMERICAL INDEX/NUMERIC

Page 43

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
65C21854	AURAL WARNING BOX ASSEMBLY	31-26-01	28	Jul 01/2008
65C22117	CONTROL STAND THRUST HANDLE ASSEMBLY	76-18-05	14	Mar 01/2003
I 65C25242	INBOARD SPOILER PANEL ASSEMBLY	57-56-62	14	Jul 01/2009
I 65C25251	OUTBOARD SPOILER PANEL ASSEMBLY	57-56-52	15	Jul 01/2009
I 65C25410	RUDDER CONTROL CENTERING UNIT ASSEMBLY	27-21-85	17	Jul 01/2009
I 65C25416	BRAKE METERING VALVE CONTROL INSTALLATION COMPONENTS	32-41-20	7	Jul 01/2009
I 65C25442	BRAKE METERING VALVE CONTROL INSTALLATION COMPONENTS	32-41-20	7	Jul 01/2009
I 65C25449	CONTROL STAND PANEL LIGHTS SWITCH MODULE ASSEMBLY	33-11-01	6	Jul 01/2009
I 65C25465	FEEL AND CENTERING ELEVATOR CONTROL UNIT ASSEMBLY	27-31-95	28	Jul 01/2009
I 65C25479	BRAKE METERING VALVE CONTROL INSTALLATION COMPONENTS	32-41-20	7	Jul 01/2009
I 65C25503	CONTROL STAND UPPER MECHANISM ASSEMBLY	27-09-45	21	Jul 01/2009
I 65C25529	STABILIZER TRIM COLUMN ACTUATED CUTOUT SWITCH ASSEMBLY	27-41-91	23	Jul 01/2009
I 65C25576	BRAKE METERING VALVE CONTROL INSTALLATION COMPONENTS	32-41-20	7	Jul 01/2009
I 65C25746	ELEVATOR ASSEMBLY AND TAB ASSEMBLY	55-20-16	37	Jul 01/2009
I 65C25796	ELEVATOR ASSEMBLY AND TAB ASSEMBLY	55-20-16	37	Jul 01/2009
I 65C25841	RUDDER ASSEMBLY	55-40-12	19	Jul 01/2009
65C25911	AILERON ASSEMBLY CONTROL TAB ASSEMBLY AND BALANCE PANEL ASSEMBLY -1SP, -2SP, -7SP, -8SP, -9SP, -10SP, -11SP, -12SP, -17SP, -18SP, -23SP, -24SP, -27SP, -28SP, -29SP, -30SP	57-50-21	18	Mar 01/2006
I 65C25911	AILERON ASSEMBLY -1SP, -2SP, -7SP, -8SP, -9SP, -10SP, -11SP, -12SP, -15SP, -16SP, -17SP, -18SP, -19SP, -20SP, -23SP, -24SP, -27SP, -28SP, -29SP, -30SP	57-50-25	23	Jul 01/2009
I 65C26300	INBOARD FLAP OUTBOARD TRACK FAIRING AND TAILCONE ASSEMBLY	57-26-45	19	Jul 01/2009

NUMERICAL INDEX/NUMERIC

Page 44

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
I 65C26310	INBOARD WING TRAILING EDGE MIDFLAP ASSEMBLY	57-53-17	20	Jul 01/2009
I 65C26320	OUTBOARD WING TRAILING EDGE MIDFLAP ASSEMBLY	57-53-18	25	Jul 01/2009
I 65C26384	ELEVATOR ASSEMBLY AND TAB ASSEMBLY	55-20-16	37	Jul 01/2009
I 65C26601	WING LEADING EDGE NO. 1 AND NO. 6 SLAT ASSEMBLY	57-56-02	27	Jul 01/2009
I 65C26602	WING LEADING EDGE NO. 2 AND NO. 5 SLAT ASSEMBLY	57-56-12	26	Jul 01/2009
I 65C26603	WING LEADING EDGE NO. 3 AND NO. 4 SLAT ASSEMBLY	57-56-22	28	Jul 01/2009
I 65C26770	INBOARD LEADING EDGE WING SEAL DOOR ASSEMBLY	57-56-23	8	Jul 01/2009
I 65C26816	BRAKE ACCUMULATOR ISOLATION VALVE ASSEMBLY/ALTERNATE BRAKE SELECTOR VALVE ASSEMBLY	32-41-12	22	Jul 01/2009
I 65C26833	STEERING DEPRESSURIZATION VALVE ASSEMBLY	32-51-43	13	Jul 01/2009
I 65C26859	BRAKE FEEL ACTUATOR ASSEMBLY	32-43-23	11	Jul 01/2009
I 65C26860	SYSTEM B HYDRAULIC RESERVOIR ASSEMBLY	29-12-11	18	Jul 01/2009
I 65C26861	SYSTEM B HYDRAULIC RESERVOIR ASSEMBLY	29-12-11	18	Jul 01/2009
I 65C26864	OUTBOARD GROUND SPOILER ACTUATOR ASSEMBLY	27-62-71	28	Jul 01/2009
I 65C26869	AUTO SLAT CONTROL VALVE ASSEMBLY	27-81-33	12	Jul 01/2009
I 65C26870	AUTO SLAT CONTROL VALVE ASSEMBLY	27-81-33	12	Jul 01/2009
I 65C26873	HYDRAULIC SYSTEM A AND B PRESSURE MODULAR ASSEMBLY	29-13-03	13	Jul 01/2009
I 65C26885	STEERING DEPRESSURIZATION VALVE ASSEMBLY	32-51-43	13	Jul 01/2009
I 65C27005	OVERHEAD STOWAGE COMPARTMENT ASSEMBLY -1, -4, -9, -11, -13, -41, -44, -49, -51, -53, -57, -61, -63, -65, -67, -69, -81, -83, -85, -87, -98, -102, -105, -107, -111, -113, -115, -117, -119, -124	25-28-30	13	Jul 01/2009



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
I 65C27005	OUTBD OVERHEAD STOWAGE, 60-IN-STD BIN ASSEMBLY -2, -3, -10, -12, -14, -42, -43, -50, -52, -54, -58, -62, -64, -66, -68, -70, -72, -79, -80, -84, -86, -88, -101, -106, -108, -112, -114, -116, -118, -120, -123, -125	25-28-35	11	Jul 01/2009
I 65C27005	OVERHEAD STOWAGE COMPARTMENT ASSEMBLY -15, -16, -55, -56, -74, -91, -92, -95, -103, -104	25-28-36	12	Jul 01/2009
I 65C27005	OVERHEAD STOWAGE COMPARTMENT ASSEMBLY -6, -8, -46, -48, -59, -89, -93, -96, -97, -100, -109	25-28-37	10	Jul 01/2009
I 65C27005	OVERHEAD STOWAGE COMPARTMENT ASSEMBLY -71, -77, -82, -121, -122	25-28-38	10	Jul 01/2009
I 65C27005	OVERHEAD STOWAGE COMPARTMENT ASSEMBLY -73, -90	25-28-39	7	Jul 01/2009
I 65C27005	OVERHEAD STOWAGE COMPARTMENT ASSEMBLY -5, -7, -45, -47, -60, -110	25-28-40	9	Jul 01/2009
I 65C27005	OVERHEAD STOWAGE COMPARTMENT ASSEMBLY -76	25-28-43	8	Jul 01/2009
I 65C27006	OVERHEAD STOWAGE COMPARTMENT ASSEMBLY -21, -22, -37, -43, -57, -61, -63, -65, -69, -72, -82, -83, -84, -93, -95, -96, -103, -104, -112, -113, -117, -118, -124, -127, -128, -133, -137	25-28-44	9	Jul 01/2009
I 65C27006	OVERHEAD STOWAGE COMPARTMENT ASSEMBLY -47, -94	25-28-45	7	Jul 01/2009
I 65C27006	OVERHEAD STOWAGE COMPARTMENT ASSEMBLY -5, -6, -7, -8, -23, -25, -26, -27, -33, -35, -39, -40, -41, -44, -45, -46, -48, -49, -53, -54, -64, -66, -67, -68, -71, -75, -85, -89, -91, -92, -98, -99, -107, -111, -115, -116, -121, -125, -135, -136, -138	25-28-46	10	Jul 01/2009

NUMERICAL INDEX/NUMERIC

Page 46

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
I 65C27006	OVERHEAD STOWAGE COMPARTMENT ASSEMBLY -50, -51, -52, -55, -56, -59, -60, -62, -70, -73, -74, -76, -77, -78, -79, -80, -81, -88, -90, -97, -101, -102, -106, -108, -109, -110, -114, -120, -122, -134, -139	25-28-47	10	Jul 01/2009
65C27298	LEADING EDGE AND TRAILING EDGE FLAPS CONTROL ASSEMBLY	27-54-11	10	Jun 01/1994
I 65C27360	NOSE GEAR MINOR COMPONENTS	32-01-03	63	Jul 01/2009
I 65C27383	ATTENDANT'S SERVICE UNIT OXYGEN BOX ASSEMBLY	25-23-35	17	Jul 01/2009
I 65C27501	TE FLAP DRIVE, NO. 1 AND 8 TRANSMISSION ASSEMBLY	27-55-59	23	Jul 01/2009
I 65C27502	TE FLAP DRIVE, NO. 2 AND 7 TRANSMISSION ASSEMBLY	27-55-60	26	Jul 01/2009
I 65C27503	TE FLAP DRIVE, NO. 3 AND 6 TRANSMISSION ASSEMBLY	27-55-61	25	Jul 01/2009
I 65C27506	TE FLAP DRIVE, NO. 3 AND 6 TRANSMISSION ASSEMBLY	27-55-61	25	Jul 01/2009
I 65C27507	TE FLAP DRIVE, NO. 2 AND 7 TRANSMISSION ASSEMBLY	27-55-60	26	Jul 01/2009
I 65C27508	TE FLAP DRIVE, NO. 1 AND 8 TRANSMISSION ASSEMBLY	27-55-59	23	Jul 01/2009
I 65C27531	NOSE GEAR MINOR COMPONENTS	32-01-03	63	Jul 01/2009
65C27540	FORWARD RIGHT HAND CLOSET ASSEMBLY	25-24-06	1	Mar 05/1991
I 65C28111	NOSE WHEEL WELL DOOR ASSEMBLY	32-22-35	17	Jul 01/2009
I 65C28167	MAIN LANDING GEAR OUTBOARD DOOR ASSEMBLY	32-16-14	11	Jul 01/2009
I 65C28176	MAIN LANDING GEAR CENTER DOOR ASSEMBLY	32-16-13	15	Jul 01/2009
I 65C28178	MAIN LANDING GEAR INNER DOOR ASSEMBLY	32-16-12	11	Jul 01/2009
I 65C30461	NO. 1 AND 4 KRUEGER FLAP ASSEMBLY	57-56-32	16	Jul 01/2009
I 65C30462	NO. 2 AND 3 KRUEGER FLAP AND TAILGATE ASSEMBLY	57-56-43	12	Jul 01/2009
I 65C30843	FLAP DRIVE COMPONENTS	27-55-41	19	Jul 01/2009
I 65C30844	FLAP DRIVE COMPONENTS	27-55-41	19	Jul 01/2009
I 65C30846	FLAP DRIVE COMPONENTS	27-55-41	19	Jul 01/2009

NUMERICAL INDEX/NUMERIC

Page 47

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
I 65C30878	ELEV TAB CONTROL GEARING MECHANISM CRANK ASSEMBLY	27-31-97	13	Jul 01/2009
I 65C31099	NOSE GEAR LOCK ACTUATOR ASSEMBLY	32-30-33	20	Jul 01/2009
I 65C31332	MAIN GEAR MINOR COMPONENTS	32-16-31	72	Jul 01/2009
I 65C31503	CONTROL STAND MECHANISM ASSEMBLY	27-09-46	18	Jul 01/2009
I 65C31786	NOSE GEAR MINOR COMPONENTS	32-01-03	63	Jul 01/2009
65C32102	MAIN LANDING GEAR BEAM INSTALLATION COMPONENTS	57-41-01	15	Nov 01/2007
I 65C32649	MAIN GEAR MINOR COMPONENTS	32-16-31	72	Jul 01/2009
65C32664	LANDING GEAR BEAM INBOARD ATTACH LINK ASSEMBLY	57-41-21	10	Mar 01/2003
65C32697	MAIN LANDING GEAR BEAM INSTALLATION COMPONENTS	57-41-01	15	Nov 01/2007
65C32699	MAIN LANDING GEAR BEAM INSTALLATION COMPONENTS	57-41-01	15	Nov 01/2007
65C32918	MAIN LANDING GEAR BEAM INSTALLATION COMPONENTS	57-41-01	15	Nov 01/2007
I 65C32942	OVERHEAD STOWAGE COMPARTMENT ASSEMBLY	25-28-48	12	Jul 01/2009
I 65C32944	OVERHEAD STOWAGE COMPARTMENT ASSEMBLY	25-28-49	9	Jul 01/2009
I 65C32956	MAIN LANDING GEAR RETRACT ACTUATOR ASSEMBLY	32-30-13	30	Jul 01/2009
I 65C33092	FUEL TANK ACCESS DOOR ASSEMBLY	28-11-07	20	Jul 01/2009
I 65C33147	FUEL TANK ACCESS DOOR ASSEMBLY	28-11-07	20	Jul 01/2009
I 65C33219	MAIN LANDING GEAR CENTER DOOR ASSEMBLY	32-16-23	10	Jul 01/2009
I 65C33221	MAIN LANDING GEAR OUTBD DOOR ASSEMBLY	32-16-24	11	Jul 01/2009
I 65C33679	FLAP DRIVE COMPONENTS	27-55-41	19	Jul 01/2009
I 65C33680	FLAP DRIVE COMPONENTS	27-55-41	19	Jul 01/2009
I 65C33723	MAIN GEAR MINOR COMPONENTS	32-16-31	72	Jul 01/2009
I 65C33730	MAIN LANDING GEAR OUTBD DOOR ASSEMBLY	32-16-24	11	Jul 01/2009
I 65C33819	CONTROL CABIN WINDOWS	56-11-11	31	Jul 01/2009
I 65C33822	CONTROL CABIN WINDOWS	56-11-11	31	Jul 01/2009
I 65C33823	CONTROL CABIN WINDOWS	56-11-11	31	Jul 01/2009

NUMERICAL INDEX/NUMERIC

Page 48

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
I 65C34015	OUTBOARD FOREFLAP SEQUENCING CARRIAGE/TOGGLE ASSEMBLY	27-57-22	19	Jul 01/2009
I 65C34314	OUTBOARD FOREFLAP SEQUENCING CARRIAGE/TOGGLE ASSEMBLY	27-57-22	19	Jul 01/2009
I 65C34348	CONTROL CABIN WINDOWS	56-11-11	31	Jul 01/2009
I 65C34483	OUTBOARD FLAP CARRIAGE ASSEMBLY	57-53-36	44	Jul 01/2009
I 65C34485	OVERHEAD STOWAGE COMPARTMENT ASSEMBLY -5, -7, -11, -13, -15, -17, -19	25-28-30	13	Jul 01/2009
I 65C34485	OUTBD OVERHEAD STOWAGE, 60-IN-STD BIN ASSEMBLY -6, -8, -12, -14, -16, -18, -20, -22	25-28-35	11	Jul 01/2009
I 65C34485	OVERHEAD STOWAGE COMPARTMENT ASSEMBLY -3, -4	25-28-36	12	Jul 01/2009
I 65C34485	OVERHEAD STOWAGE COMPARTMENT ASSEMBLY -9	25-28-37	10	Jul 01/2009
I 65C34485	OVERHEAD STOWAGE COMPARTMENT ASSEMBLY -23	25-28-38	10	Jul 01/2009
I 65C34485	OVERHEAD STOWAGE COMPARTMENT ASSEMBLY -10, -24	25-28-40	9	Jul 01/2009
I 65C34589	OUTBD FLAP TRACK FAIRING INSTALLATION COMPONENTS	57-26-46	27	Jul 01/2009
I 65C34751	STABILIZER TRIM ACTUATOR ASSEMBLY	27-45-11	55	Jul 01/2009
I 65C34782	OUTBOARD FOREFLAP SEQUENCING CARRIAGE/TOGGLE ASSEMBLY	27-57-22	19	Jul 01/2009
65C34812	OUTBOARD FLAP TRACK ASSEMBLY	57-53-15	31	Mar 01/2009
I 65C34946	OUTBOARD FLAP MID/AFT FLAP ASSEMBLY	57-53-30	10	Jul 01/2009
65C35000	EMERGENCY HATCH ASSEMBLY	52-26-01	17	Jul 01/2005
65C35276	INBOARD FLAP TRACK ASSEMBLY	57-53-16	31	Jul 01/2008
65C35424	AUXILIARY POWER UNIT ASSEMBLY	49-10-21	43	Jul 01/2008
65C35450	ACCESS AND BLOWOUT DOOR BUILDUP	52-46-09	1	Dec 05/1992
65C35615	OUTBOARD FLAP TRACK ASSEMBLY	57-53-15	31	Mar 01/2009
65C35616	OUTBOARD FLAP TRACK ASSEMBLY	57-53-15	31	Mar 01/2009
65C35617	INBOARD FLAP TRACK ASSEMBLY	57-53-16	31	Jul 01/2008

NUMERICAL INDEX/NUMERIC

Page 49

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
65C35694	AUXILIARY POWER UNIT ASSEMBLY	49-10-21	43	Jul 01/2008
I 65C35703	OUTBOARD FLAP FOREFLAP ASSEMBLY	57-53-34	8	Jul 01/2009
I 65C36408	LEADING EDGE SLAT HYDRAULIC ACTUATOR ASSEMBLY	27-81-47	43	Jul 01/2009
I 65C36459	MAIN GEAR MINOR COMPONENTS	32-16-31	72	Jul 01/2009
I 65C36486	STABILIZER TRIM ACTUATOR ASSEMBLY	27-45-11	55	Jul 01/2009
I 65C36505	INBOARD TRAILING EDGE TRAILING ASSEMBLY FLAP ASSEMBLY	57-53-29	7	Jul 01/2009
I 65C36725	AUTOTHROTTLE SWITCH PACK ASSEMBLY	22-35-05	8	Jul 01/2009
I 65C36813	CREW DOOR LATCH ASSEMBLY	52-51-06	8	Jul 01/2009
65C36867	INBOARD FLAP TRACK ASSEMBLY	57-53-16	31	Jul 01/2008
I 65C36935	AUXILIARY POWER UNIT EXHAUST DUCT MUFFLER ASSEMBLY	49-13-01	16	Jul 01/2009
I 65C36936	AUXILIARY POWER UNIT EXHAUST DUCT MUFFLER ASSEMBLY	49-13-01	16	Jul 01/2009
I 65C36937	AUXILIARY POWER UNIT EXHAUST DUCT MUFFLER ASSEMBLY	49-13-01	16	Jul 01/2009
I 65C37030	AILERON CONTROL TRANSFER MECHANISM ASSEMBLY	27-16-07	11	Jul 01/2009
65C37052	RUDDER POWER CONTROL UNIT ASSEMBLY	27-20-01	57	Jul 01/2003
65C37053	RUDDER POWER CONTROL UNIT ASSEMBLY	27-20-01	57	Jul 01/2003
I 65C37270	AUTOFLIGHT CONTROL SYSTEM (AFCS) FLOODLIGHT CONTROL MODULE ASSEMBLY	33-40-02	14	Jul 01/2009
65C37439	CONTROL STAND THRUST HANDLE ASSEMBLY	76-18-05	14	Mar 01/2003
65C37931	VERNIER ADJUSTMENT CONTROL ROD ASSEMBLY	27-37-09	16	Jul 01/2008
I 65C38058	LEADING EDGE SLAT HYDRAULIC ACTUATOR ASSEMBLY	27-81-47	43	Jul 01/2009
I 65C38059	LEADING EDGE SLAT HYDRAULIC ACTUATOR ASSEMBLY	27-81-47	43	Jul 01/2009
65C38199	RAM AIR MODULATION EXHAUST DUCT ASSEMBLY	21-26-05	8	Mar 01/2003
65V10153	DECK LIGHT PASSENGER SERVICE UNIT ASSEMBLY	25-21-14	0	Apr 05/1976
65V10605	OXYGEN SERVICE UNIT ASSEMBLY	25-21-16	0	Jul 05/1977
65V10687	OXYGEN MASK CONTAINER ASSEMBLY	25-21-17	0	Jul 05/1977

NUMERICAL INDEX/NUMERIC

Page 50

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
65V10695	DECK LIGHT PASSENGER SERVICE UNIT ASSEMBLY	25-21-14	0	Apr 05/1976
65V10739	TELEPHONE ASSEMBLY	23-48-02	1	Jul 05/1977
65V10794	PASSENGER SERVICE UNIT ASSEMBLY -45	25-20-12	5	Jun 05/1987
65V10794	PASSENGER SERVICE UNIT ASSEMBLY -41, -42, -43, -44	25-20-94	9	Mar 01/2003
65V10794	PASSENGER SERVICE UNIT ASSEMBLY -1, -2, -3, -4, -5, -6, -7, -8, -13, -14, -15, -16, -19, -20, -21, -22, -25, -26, -27, -28, -31, -32	25-21-13	2	Jul 05/1977
65V10794	PARTIAL SECTION PASSENGER SERVICE UNIT ASSEMBLY -9, -10, -11, -17, -18, -23, -24, -29, -30, -33, -34, -38, -301, -302, -401	25-21-15	4	Mar 05/1978
65V11226	TELEPHONE ASSEMBLY	23-02-14	0	Jan 05/1979
65V11529	OXYGEN SERVICE CONTAINER ASSEMBLY	25-21-20	0	Jan 05/1979
69-14106	LANDING GEAR HYDRAULIC TRANSFER CYLINDER ASSEMBLY	32-40-01	20	Mar 01/2003
69-20321	GALLEY/SERVICE DOOR GUIDE ARM ASSEMBLY	52-41-02	6	Nov 01/2001
69-26245	AIRSTAIR CARRIAGE ASSEMBLY	52-64-06	2	Sep 05/1989
69-2914	GROUND SERVICE SWING CHECK VALVE ASSEMBLY	21-23-20	7	Jul 01/2009
69-29567	APU FIRE WARNING HORN ASSEMBLY	26-10-11	2	Nov 20/1987
69-33942	MAIN DECK PALLETIZED CARGO SYSTEM ROLLER TRAY AND ROLLER TRAY TIEDOWN ASSEMBLIES	25-57-08	1	Sep 05/1984
69-34511	RAIN REPELLENT SYSTEM VISUAL RESERVOIR ASSEMBLY	30-46-02	3	May 10/1987
69-35293	PALLETIZED CARGO SYSTEM AFT STOP ASSEMBLY	25-57-04	2	Jun 05/1986
69-35354	ENGINE CONTROL COMPONENTS	76-14-11	11	Nov 01/2002
69-35385	NOSE GEAR MINOR COMPONENTS	32-01-03	63	Jul 01/2009
69-35391	NOSE GEAR MINOR COMPONENTS	32-01-03	63	Jul 01/2009
69-35394	NOSE GEAR MINOR COMPONENTS	32-01-03	63	Jul 01/2009
69-35396	NOSE GEAR MINOR COMPONENTS	32-01-03	63	Jul 01/2009
69-35500	MAIN GEAR LOCK ACTUATOR ASSEMBLY	32-30-21	16	Mar 01/2009

NUMERICAL INDEX/NUMERIC

Page 51

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
I 69-35852	LEADING EDGE SLAT HYDRAULIC ACTUATOR ASSEMBLY	27-81-47	43	Jul 01/2009
I 69-35879	LEADING EDGE SLAT HYDRAULIC ACTUATOR ASSEMBLY	27-81-47	43	Jul 01/2009
69-36355	HOIST FITTING ASSEMBLY	57-27-01	3	Dec 05/1990
69-37290	VERNIER ADJUSTMENT CONTROL ROD ASSEMBLY	27-37-09	16	Jul 01/2008
69-37312	FUEL SYSTEM MODULE ASSEMBLY, P5-2 -9, -13, -15, -17, -18, -22	28-23-01	2	Jul 05/1983
69-37312	FUEL SYSTEM MODULE ASSEMBLY, P5-2 -21, -30	28-23-02	3	Mar 05/1986
69-37313	FLIGHT CONTROLS MODULE ASSEMBLY, P5-3 -32, -35, -36, -37, -38, -39, -40, -41, -44, -46, -48, -49, -50, -51, -58, -61, -62, -63, -64, -67, -68, -69, -70, -74, -78, -86, -87, -88, -89, -90, -91, -92, -93, -94, -95, -96, -97, -98, -102, -400, -409, -429, -430, -431, -432, -433, -434, -435, -436, -437, -438, -439, -440, -441, -442, -443, -444, -445, -446, -447, -448, -449, -450, -451, -452, -453, -454, -455, -456, -457, -458, -459, -460, -461, -462, -463, -464, -529, -530, -531, -532, -533, -534, -535, -536, -537, -538, -539, -540, -541, -542, -543, -544, -545, -546, -547, -548, -549, -550, -551, -552, -553, -554, -555, -556, -557, -558, -559, -560, -561, -562, -563, -564	31-36-04	43	Nov 01/2008
I 69-37313	FLIGHT CONTROLS MODULE ASSEMBLY, P5-3 -99, -104, -106, -108, -401, -403, -405, -410	31-36-81	30	Jul 01/2009
I 69-37313	FLIGHT CONTROLS MODULE ASSEMBLY, P5-3 -105, -107, -109, -110, -111, -112, -113, -114, -115, -116, -117, -118, -119, -120, -121, -122, -123, -124, -125, -126, -300, -301, -302, -402, -404, -406, -407, -408, -411, -412, -413, -414, -415, -416, -417, -418, -419, -420, -421, -422, -423, -424, -425, -426, -427, -428, -511, -512, -513, -514, -515, -516, -517, -518, -519, -520, -521, -522, -523, -524, -525, -526, -527, -528	31-37-04	27	Jul 01/2009
69-37314	AC SYSTEM GENERATOR AND APU MODULE ASSEMBLY, P5-4 -12, -13, -15, -16, -18, -19, -20, -22, -23, -24, -28, -30, -31, -35, -38, -40, -41, -42, -43, -44, -49, -50, -53, -54	31-36-30	32	Nov 01/2005



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
I 69-37314	AC SYSTEM GENERATOR AND APU MODULE ASSEMBLY, P5-4 -45, -46, -47, -48, -55, -56, -57, -58, -59, -60, -61, -62, -63, -64, -65, -66, -67, -68, -71, -72, -81, -82	31-37-30	24	Jul 01/2009
I 69-37320	ENGINE AND WING ANTI-ICE MODULE ASSEMBLY, P5-11	30-12-02	6	Nov 01/2008
69-37323	AUTO-THROTTLE MODULE ASSEMBLY, P9-11	31-36-21	1	Jul 05/1977
I 69-37325	FLIGHT RECORDER AND MACH AIRSPEED TEST MODULE ASSEMBLY, P5-19 -132, -133, -134, -135, -136, -137, -138, -164, -165, -166, -167, -168	31-24-01	20	Jul 01/2009
I 69-37325	FLIGHT RECORDER AND MACH AIRSPEED WARNING TEST MODULE ASSEMBLY, P5-19 -139, -140, -141, -142, -143, -144, -145, -146, -147, -148	31-24-02	11	Jul 01/2009
I 69-37325	FLIGHT RECORDER AND MACH AIRSPEED WARNING TEST MODULE ASSEMBLY, P5-19 -149, -151, -152, -153, -154	31-24-03	12	Jul 01/2009
I 69-37325	FLIGHT RECORDER AND MACH AIRSPEED TEST MODULE ASSEMBLY, P5-19 -150, -155, -156, -157, -158, -159, -160, -161, -162, -163	31-24-04	11	Jul 01/2009
69-37325	FLIGHT RECORDER AND MACH AIRSPEED WARNING TEST MODULE ASSEMBLY, P5-19 -14, -17, -20, -24, -25, -26, -27, -28, -29, -33, -35, -36, -37, -38	31-36-01	8	Nov 01/2000
69-37325	FLIGHT RECORDER AND MACH AIRSPEED WARNING TEST MODULE ASSEMBLY, P5-19 -39, -46, -49, -51, -52, -53, -62	31-36-08	13	Nov 01/2002
69-37325	FLIGHT RECORDER AND MACH AIRSPEED WARNING TEST MODULE ASSEMBLY, P5-19 -43, -65, -72, -74, -79, -95, -97, -99, -105, -108, -109	31-36-90	21	Mar 01/2008
I 69-37325	FLIGHT RECORDER AND MACH AIRSPEED TEST MODULE ASSEMBLY, P5-19 -111, -112, -113, -114, -115, -116, -117, -118, -119, -120, -121, -122, -123, -125, -126, -127, -128, -129, -130, -131	31-36-98	23	Jul 01/2009
69-37326	DOOR WARNING ANNUNCIATOR MODULE ASSEMBLY, P5-20	31-36-03	8	Mar 01/2005

NUMERICAL INDEX/NUMERIC

Page 53

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
69-37333	FIRST OBSERVER'S MIKE SELECTOR MODULE ASSEMBLY, P10-2	31-36-25	0	Mar 10/1970
69-37347	AIRSPEED WARNING SWITCH MODE MODULE ASSEMBLY, P1-6	31-36-51	0	Feb 15/1969
69-37351	LIGHTING CONTROL MODULE ASSEMBLY, P3-4	33-10-04	0	Mar 10/1970
69-37356	RADAR ROTATION MODULE ASSEMBLY, P3-6	34-41-01	0	Aug 15/1969
69-37367	INSTRUMENT SWITCHING MODULE ASSEMBLY, P5-32	31-36-45	1	Dec 05/1987
69-37377	VIP COMMUNICATIONS MODULE ASSEMBLY, M771, P5-45, P5-81	23-02-03	6	Nov 20/1987
69-37856	FORWARD ENGINE SUPPORT LINK ASSEMBLY	57-40-11	6	Nov 01/1998
69-37865	FORWARD ENGINE MOUNT SUPPORT ASSEMBLY	57-40-12	0	Dec 25/1975
I 69-37876	MAIN GEAR MINOR COMPONENTS	32-16-31	72	Jul 01/2009
I 69-37880	OUTBOARD FOREFLAP SEQUENCING CARRIAGE/TOGGLE ASSEMBLY	27-57-22	19	Jul 01/2009
I 69-38709	NOSE GEAR MINOR COMPONENTS	32-01-03	63	Jul 01/2009
I 69-38710	NOSE GEAR MINOR COMPONENTS	32-01-03	63	Jul 01/2009
I 69-38753	RAM AIR MODULATION SYSTEM EXHAUST DUCT TORQUE SHAFT AND UNIVERSAL JOINT ASSEMBLY	21-26-06	9	Jul 01/2009
I 69-38943	FLAP DRIVE COMPONENTS	27-55-41	19	Jul 01/2009
69-38953	ENGINE CONTROL DRUM INSTALLATION COMPONENTS	76-14-22	5	Nov 01/2000
69-38971	ENGINE CONTROL DRUM INSTALLATION COMPONENTS	76-14-22	5	Nov 01/2000
I 69-38991	MAIN GEAR MINOR COMPONENTS	32-16-31	72	Jul 01/2009
I 69-38993	MAIN GEAR MINOR COMPONENTS	32-16-31	72	Jul 01/2009
I 69-39236	FLAP DRIVE COMPONENTS	27-55-41	19	Jul 01/2009
69-39383	PALLET ROLLOUT STOP ASSEMBLY	25-57-07	3	Jul 01/1998
I 69-39464	MAIN GEAR MINOR COMPONENTS	32-16-31	72	Jul 01/2009
I 69-40205	FLAP DRIVE COMPONENTS	27-55-41	19	Jul 01/2009
I 69-41625	MAIN GEAR MINOR COMPONENTS	32-16-31	72	Jul 01/2009
I 69-42196	MAIN GEAR MINOR COMPONENTS	32-16-31	72	Jul 01/2009
I 69-42199	MAIN GEAR MINOR COMPONENTS	32-16-31	72	Jul 01/2009
I 69-42376	MAIN LANDING GEAR DOOR INSTALLATION COMPONENTS	32-16-25	7	Jul 01/2009

NUMERICAL INDEX/NUMERIC

Page 54

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
I 69-42380	MAIN LANDING GEAR DOOR INSTALLATION COMPONENTS	32-16-25	7	Jul 01/2009
I 69-42388	MAIN LANDING GEAR DOOR INSTALLATION COMPONENTS	32-16-25	7	Jul 01/2009
I 69-42394	MAIN LANDING GEAR DOOR INSTALLATION COMPONENTS	32-16-25	7	Jul 01/2009
I 69-42775	CONTROL CABIN FOOT OUTLET ASSEMBLY	21-40-01	9	Jul 01/2009
69-42999	DIODE CARD ASSEMBLY	31-36-49	1	Mar 10/1970
69-43490	VERNIER ADJUSTMENT CONTROL ROD ASSEMBLY	27-37-09	16	Jul 01/2008
69-44331	GALLEY/SERVICE DOOR GUIDE ARM ASSEMBLY	52-41-02	6	Nov 01/2001
69-44427	ROD ASSEMBLY	27-37-12	2	Jul 01/2008
69-44628	WINDSHIELD WIPER RESISTOR BOX ASSEMBLY	30-46-03	4	Mar 01/2005
I 69-44671	FLAP DRIVE COMPONENTS	27-55-41	19	Jul 01/2009
I 69-45163	FLAP DRIVE COMPONENTS	27-55-41	19	Jul 01/2009
I 69-46429	OUTBD FLAP TRACK FAIRING INSTALLATION COMPONENTS	57-26-46	27	Jul 01/2009
I 69-46430	OUTBD FLAP TRACK FAIRING INSTALLATION COMPONENTS	57-26-46	27	Jul 01/2009
I 69-46648	FLAP DRIVE COMPONENTS	27-55-41	19	Jul 01/2009
I 69-46649	FLAP DRIVE COMPONENTS	27-55-41	19	Jul 01/2009
I 69-51838	MAIN GEAR MINOR COMPONENTS	32-16-31	72	Jul 01/2009
69-5338	ENTRY DOOR GUIDE ARM ASSEMBLY	52-17-01	8	Jul 01/2005
I 69-53800	NOSE GEAR MINOR COMPONENTS	32-01-03	63	Jul 01/2009
I 69-53869	MAIN GEAR MINOR COMPONENTS	32-16-31	72	Jul 01/2009
69-54600	LANDING GEAR HYDRAULIC TRANSFER CYLINDER ASSEMBLY	32-40-01	20	Mar 01/2003
69-54784	HYDRAULIC SWIVEL ASSEMBLY	29-09-21	5	Jun 01/1994
I 69-54904	FLAP DRIVE COMPONENTS	27-55-41	19	Jul 01/2009
I 69-54975	MAIN GEAR MINOR COMPONENTS	32-16-31	72	Jul 01/2009
I 69-54978	MAIN GEAR MINOR COMPONENTS	32-16-31	72	Jul 01/2009
69-55187	QC CARGO SYSTEM FIXED SIDE GUIDE ASSEMBLY	25-56-49	0	Sep 05/1985
69-55190	QC CARGO SYSTEM ROLLER SUPPORT ASSEMBLY	25-56-50	0	Sep 05/1985

NUMERICAL INDEX/NUMERIC

Page 55

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
69-56500	WINDSHIELD WIPER RESISTOR BOX ASSEMBLY	30-46-03	4	Mar 01/2005
I 69-58822	MAIN LANDING GEAR DOOR INSTALLATION COMPONENTS	32-16-25	7	Jul 01/2009
I 69-58854	MAIN GEAR MINOR COMPONENTS	32-16-31	72	Jul 01/2009
I 69-58871	MAIN GEAR MINOR COMPONENTS	32-16-31	72	Jul 01/2009
I 69-58873	MAIN GEAR MINOR COMPONENTS	32-16-31	72	Jul 01/2009
I 69-61946	MAIN GEAR MINOR COMPONENTS	32-16-31	72	Jul 01/2009
69-62234	LANDING GEAR ACCESSORY UNIT ASSEMBLY, M338	32-66-43	6	Jun 05/1992
69-62790	LEADING EDGE FLAP AND SLAT POSITION INDICATOR ACCESSORY UNIT ASSEMBLY, M229 -2	27-56-40	40	Jul 01/2008
69-62790	LEADING EDGE FLAP/SLAT COMPARATOR LOGIC PRINTED CIRCUIT ASSEMBLY -3	27-56-47	6	Nov 01/2008
69-64953	AUDIO ACCESSORY UNIT ASSEMBLY, M69, M769	23-56-02	12	Nov 01/2008
I 69-67545	NOSE GEAR MINOR COMPONENTS	32-01-03	63	Jul 01/2009
I 69-68115	NOSE GEAR MINOR COMPONENTS	32-01-03	63	Jul 01/2009
69-68134	ENGINE AND WING ANTI-ICE MODULE ASSEMBLY, P5-11 -2	30-12-01	6	Nov 01/2008
I 69-68134	ENGINE AND WING ANTI-ICE MODULE ASSEMBLY, P5-11 -3, -4	30-12-02	6	Nov 01/2008
I 69-68151	MAIN GEAR MINOR COMPONENTS	32-16-31	72	Jul 01/2009
69-68561	VIP COMMUNICATIONS MODULE ASSEMBLY, M771, P5-45, P5-81	23-02-03	6	Nov 20/1987
69-68858	CENTER INSTRUMENT MODULE ASSEMBLY, P2-1	31-13-02	3	Nov 01/2008
69-69882	HYDRAULIC SWIVEL ASSEMBLY	29-09-21	5	Jun 01/1994
69-70991	AILERON/ELEVATOR AUTOPILOT ACTUATOR LEVER ASSEMBLY	27-09-05	5	Mar 01/1999
69-71002	AILERON/ELEVATOR AUTOPILOT ACTUATOR LEVER ASSEMBLY	27-09-05	5	Mar 01/1999
69-71010	VERNIER ADJUSTMENT CONTROL ROD ASSEMBLY	27-37-09	16	Jul 01/2008

NUMERICAL INDEX/NUMERIC

Page 56

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
69-71799	FLIGHT RECORDER AND MACH AIRSPEED WARNING TEST MODULE ASSEMBLY, P5-19	31-36-08	13	Nov 01/2002
69-72631	MASTER CAUTION DISPLAY MODULE ASSEMBLY, P5-64	33-10-07	1	Jan 05/1983
69-73033	CENTER INSTRUMENT MODULE ASSEMBLY, P2-2 -12	31-36-13	6	Nov 01/2008
69-73033	CENTER INSTRUMENT MODULE ASSEMBLY, P2-2 -7, -9, -32	31-36-68	4	Nov 01/2008
69-73033	CENTER INSTRUMENT MODULE ASSEMBLY, P2-2 -3, -4, -8, -13, -14, -33, -34	31-36-88	17	Nov 01/2008
I 69-73176	MAIN GEAR MINOR COMPONENTS	32-16-31	72	Jul 01/2009
69-73371	VERNIER ADJUSTMENT CONTROL ROD ASSEMBLY	27-37-09	16	Jul 01/2008
I 69-73677	NOSE GEAR MINOR COMPONENTS	32-01-03	63	Jul 01/2009
I 69-74714	BRAKE METERING VALVE CONTROL INSTALLATION COMPONENTS	32-41-20	7	Jul 01/2009
69-76472	GENERATOR DRIVE AND STANDBY POWER MODULE ASSEMBLY, P5-5	31-10-05	5	Dec 05/1993
I 69-76497	BROADCAST RADIO CONTROL MODULE ASSEMBLY	23-50-03	8	Jul 01/2009
I 69-77044	MAIN GEAR MINOR COMPONENTS	32-16-31	72	Jul 01/2009
I 69-77045	MAIN GEAR MINOR COMPONENTS	32-16-31	72	Jul 01/2009
69-77055	DOOR WARNING ANNUNCIATOR MODULE ASSEMBLY, P5-20	31-36-03	8	Mar 01/2005
I 69-77063	MAIN GEAR MINOR COMPONENTS	32-16-31	72	Jul 01/2009
I 69-77496	MAIN GEAR ACTUATOR ASSEMBLY	32-30-11	50	Jul 01/2009
I 69-77524	MAIN GEAR MINOR COMPONENTS	32-16-31	72	Jul 01/2009
I 69-77729	AUTOFLIGHT CONTROL SYSTEM (AFCS) FLOODLIGHT CONTROL MODULE ASSEMBLY	33-40-02	14	Jul 01/2009
69-78547	FLIGHT RECORDER AND MACH AIRSPEED WARNING TEST MODULE ASSEMBLY, P5-19 -1	31-36-90	21	Mar 01/2008
I 69-78547	FLIGHT RECORDER AND MACH AIRSPEED TEST MODULE ASSEMBLY, P5-19 -2	31-36-98	23	Jul 01/2009

NUMERICAL INDEX/NUMERIC

Page 57

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL REVISION DATE
I 737-8904	CAPTAIN AND FIRST OFFICER CONTROL STAND ASSEMBLY	25-11-13	15	Jul 01/2009
90-10072	ENTRY DOOR SNUBBER ASSEMBLY	52-11-02	7	Nov 01/2007
F70043	AIRPLANE ATTITUDE GAGE ASSEMBLY	08-06-01	0	Oct 01/1967



COMPONENT MAINTENANCE MANUAL

NUMERICAL INDEX/MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
08-06-01	AIRPLANE ATTITUDE GAGE ASSEMBLY	F70043	0	Oct 01/1967
21-09-01	AIR CONDITIONING ACCESSORY UNIT ASSEMBLY, M324	65-80021	14	Jul 01/2008
21-09-05	AIR CONDITIONING PRINTED CIRCUIT ASSEMBLY	65-57481	0	Jun 10/1970
I 21-20-10	REPAIR OF POLYCARBONATE DUCTS		6	Jul 01/2009
I 21-20-15	REPAIR OF KEVLAR/EPOXY AND GRAPHITE/ EPOXY DUCTS		7	Jul 01/2009
I 21-23-20	GROUND SERVICE SWING CHECK VALVE ASSEMBLY	69-2914	7	Jul 01/2009
21-26-05	RAM AIR MODULATION EXHAUST DUCT ASSEMBLY	65-51201	8	Mar 01/2003
21-26-05	RAM AIR MODULATION EXHAUST DUCT ASSEMBLY	65C38199	8	Mar 01/2003
I 21-26-06	RAM AIR MODULATION SYSTEM EXHAUST DUCT TORQUE SHAFT AND UNIVERSAL JOINT ASSEMBLY	69-38753	9	Jul 01/2009
I 21-40-01	CONTROL CABIN FOOT OUTLET ASSEMBLY	65-55300	9	Jul 01/2009
I 21-40-01	CONTROL CABIN FOOT OUTLET ASSEMBLY	69-42775	9	Jul 01/2009
21-50-01	RAM AIR DEFLECTOR EXTENSION LINK ASSEMBLY	65-67906	0	Jul 05/1981
I 21-53-02	RAM AIR INLET FORWARD/AFT PANEL ASSEMBLY	213A3410	10	Jul 01/2009
I 21-53-02	RAM AIR INLET FORWARD/AFT PANEL ASSEMBLY	213A3420	10	Jul 01/2009
I 21-53-03	RAM AIR INLET PANEL ASSEMBLY	213A3170	8	Jul 01/2009
I 22-32-24	AUTOTHROTTLE ASSEMBLY	254A1110	9	Jul 01/2009
I 22-32-34	AUTOTHROTTLE SWITCHPACK ASSEMBLY	254A1150	16	Jul 01/2009
22-34-02	AUTO THROTTLE CLUTCH/CAM ASSEMBLY	65-42355	8	Mar 05/1984
22-34-02	AUTO THROTTLE CLUTCH/CAM ASSEMBLY	65-80025	8	Mar 05/1984
22-34-02	AUTO THROTTLE CLUTCH/CAM ASSEMBLY	65C14098	8	Mar 05/1984
22-34-02	AUTO THROTTLE CLUTCH/CAM ASSEMBLY	65C18297	8	Mar 05/1984
22-34-11	AUTOTHROTTLE CLUTCH ASSEMBLY	65-42354	9	Nov 01/2003
22-35-01	AUTOTHROTTLE GEARBOX ASSEMBLY	65-42163	0	May 15/1967

NUMERICAL INDEX/MANUAL

Page 1

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
I 22-35-02	CONTROL STAND AUTOTHROTTLE GEARBOX ASSEMBLY	254A1147	10	Jul 01/2009
I 22-35-03	AUTOTHROTTLE BRAKE ASSEMBLY	254A1141	14	Jul 01/2009
I 22-35-05	AUTOTHROTTLE SWITCH PACK ASSEMBLY	65C36725	8	Jul 01/2009
23-02-03	VIP COMMUNICATIONS MODULE ASSEMBLY, M771, P5-45, P5-81	69-37377	6	Nov 20/1987
23-02-03	VIP COMMUNICATIONS MODULE ASSEMBLY, M771, P5-45, P5-81	69-68561	6	Nov 20/1987
23-02-14	TELEPHONE ASSEMBLY	65V11226	0	Jan 05/1979
23-13-01	ANTENNA DISCONNECT ASSEMBLY	65-34679	2	Sep 05/1993
I 23-27-03	AIRPLANE IDENTIFICATION UNIT MODULE ASSEMBLY	65-52823	9	Jul 01/2009
23-48-02	TELEPHONE ASSEMBLY	65V10739	1	Jul 05/1977
I 23-50-03	BROADCAST RADIO CONTROL MODULE ASSEMBLY	69-76497	8	Jul 01/2009
23-56-02	AUDIO ACCESSORY UNIT ASSEMBLY, M69, M769	69-64953	12	Nov 01/2008
23-56-07	AUDIO ACCESSORY UNIT ASSEMBLY, M69, M769 -11	65-85316	33	Jul 01/2008
23-56-17	AUDIO ACCESSORY UNIT ASSEMBLY, M69 -5, -9	65-85316	10	Jul 01/2008
24-01-01	CHASSIS ASSEMBLY	65-40514	0	Aug 10/1974
I 25-00-66	MISCELLANEOUS AIRPLANE-INTERIOR		15	Jul 01/2009
I 25-11-13	CAPTAIN AND FIRST OFFICER CONTROL STAND ASSEMBLY	254A1220	15	Jul 01/2009
I 25-11-13	CAPTAIN AND FIRST OFFICER CONTROL STAND ASSEMBLY	737-8904	15	Jul 01/2009
25-20-00	PASSENGER SERVICE UNIT OVERHAUL PROCEDURES		20	Mar 01/2004
25-20-05	PASSENGER SERVICE UNIT ASSEMBLY	65-45260	3	Jan 05/1981
25-20-11	PARTIAL SECTIONS PASSENGER SERVICE UNIT ASSEMBLY -1, -2, -3, -4, -5, -6, -7, -8, -19, -23, -24, -25, -26, -27, -28, -29, -30, -37, -38, -39, -40, -45, -46, -47, -48, -49, -50, -51, -52, -53, -54, -67, -68, -69, -70, -71, -72, -75, -77, -78, -79	65-82721	0	Dec 25/1975

NUMERICAL INDEX/MANUAL

Page 2

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
25-20-12	PASSENGER SERVICE UNIT ASSEMBLY -1, -2, -3, -4, -5, -6, -7, -8, -9, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -28, -29, -30, -31, -32, -33, -34, -35, -36, -37, -38, -39, -40, -41, -42, -43, -45, -46, -47, -48, -49, -50, -51, -53, -56, -99, -100, -104, -106	65-86413	5	Jun 05/1987
25-20-12	PASSENGER SERVICE UNIT ASSEMBLY -45	65V10794	5	Jun 05/1987
25-20-13	PASSENGER SERVICE UNIT ASSEMBLY -57, -58, -59, -60, -61, -62, -63, -64, -65, -66, -67, -68, -69, -70, -71, -72, -73, -74, -75, -76, -77, -78, -79, -80	65-86413	2	Jul 01/2002
25-20-14	PASSENGER SERVICE UNIT ASSEMBLY -81, -82, -83, -84, -85, -86, -87, -88, -89, -90, -91, -92, -93, -94, -95, -97, -98, -101, -102, -103	65-86413	2	Nov 10/1982
25-20-15	PASSENGER SERVICE UNIT BASIC SHELL ASSEMBLY	65-86412	1	Nov 10/1980
25-20-16	PARTIAL SECTIONS PASSENGER SERVICE UNIT ASSEMBLY -83, -84, -87, -88, -89, -90, -91, -92, -93, -94	65-82721	1	Jan 05/1977
25-20-94	PASSENGER SERVICE UNIT ASSEMBLY -119, -120, -121, -122, -123, -124, -125, -126, -127, -128, -129, -130, -131, -132, -133, -134, -135, -136, -159, -160, -161, -162	65-79164	9	Mar 01/2003
25-20-94	PASSENGER SERVICE UNIT ASSEMBLY -41, -42, -43, -44	65V10794	9	Mar 01/2003
25-20-95	PASSENGER SERVICE UNIT ASSEMBLY -139, -140, -141, -142, -143, -144, -145, -146, -147, -148, -149, -150, -151, -152, -153, -154, -155, -156, -165, -166, -167, -168, -169, -170, -171, -172, -173, -174	65-79164	4	Sep 05/1979
25-20-96	PASSENGER SERVICE UNIT BASIC SHELL ASSEMBLY	65-79165	1	Nov 10/1982
25-21-01	AFT ATTENDANT'S OXYGEN SERVICE UNIT ASSEMBLY	65-26277	1	Sep 05/1977



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
25-21-03	PASSENGER SERVICE UNIT ASSEMBLY -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, -26, -27, -28, -29, -30, -31, -32, -35, -36, -37, -38, -39, -40, -45, -46, -47, -48, -53, -54, -55, -56, -57, -58, -59, -60, -67, -68, -69, -70, -71, -72, -73, -74, -75, -76, -77, -78, -83, -84, -85, -86, -87, -88, -89, -90, -91, -92, -93, -94, -95, -96, -97, -98, -99, -100, -101, -102, -103, -104, -105, -106, -109, -110, -111, -112, -113, -114, -115, -116, -117, -118, -175, -176	65-79164	3	Nov 10/1982
25-21-04	STOWAGE COMPARTMENT SNUBBER ASSEMBLY	65-80145	4	Jun 05/1986
25-21-05	CARRY-ALL COMPARTMENT TWO-LINK ARTICULATED HINGE ASSEMBLY	65C20204	3	Mar 01/2000
25-21-08	PASSENGER SERVICE MODIFIED UNIT ASSEMBLY	65C10321	7	Sep 05/1990
25-21-09	PASSENGER SERVICE UNIT MODULE ASSEMBLY	65C10324	1	Jul 05/1976
25-21-10	OXYGEN DROP SERVICE UNIT ASSEMBLY	65C10585	4	Jul 05/1981
25-21-11	PARTIAL SECTION PASSENGER SERVICE UNIT ASSEMBLY	65C10590	3	Jun 05/1984
25-21-13	PASSENGER SERVICE UNIT ASSEMBLY -1, -2, -3, -4, -5, -6, -7, -8, -13, -14, -15, -16, -19, -20, -21, -22, -25, -26, -27, -28, -31, -32	65V10794	2	Jul 05/1977
25-21-14	DECK LIGHT PASSENGER SERVICE UNIT ASSEMBLY	65V10153	0	Apr 05/1976
25-21-14	DECK LIGHT PASSENGER SERVICE UNIT ASSEMBLY	65V10695	0	Apr 05/1976
25-21-15	PARTIAL SECTION PASSENGER SERVICE UNIT ASSEMBLY -9, -10, -11, -17, -18, -23, -24, -29, -30, -33, -34, -38, -301, -302, -401	65V10794	4	Mar 05/1978
25-21-16	OXYGEN SERVICE UNIT ASSEMBLY	65V10605	0	Jul 05/1977
25-21-17	OXYGEN MASK CONTAINER ASSEMBLY	65V10687	0	Jul 05/1977
25-21-20	OXYGEN SERVICE CONTAINER ASSEMBLY	65V11529	0	Jan 05/1979



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
I 25-23-30	UNDERBIN PASSENGER SERVICE UNIT ASSEMBLY -137, -138, -139, -140, -153, -154, -157, -158, -159, -160, -168, -181, -182, -183, -184, -185, -186, -188, -231, -232, -233, -234, -235, -236, -238, -273, -274, -275, -276, -280, -289, -290, -291, -292, -303, -304, -305, -306, -328, -334, -338, -347, -348, -349, -350, -353, -354, -361, -362, -391, -393, -395, -396, -401, -403, -405, -410, -412, -414, -416, -431, -433, -444, -446, -448, -450, -472, -547, -548, -549, -550, -552, -611, -612, -613, -614, -615, -616, -676, -678, -679, -680, -681, -682, -683, -684, -700, -701, -702, -703, -704, -705, -707, -708, -712, -713, -714, -717, -718, -719, -720, -723, -724, -728, -735SP, -736SP, -737SP, -738SP, -741SP, -742SP, -743SP, -744SP, -748SP, -749SP, -751SP	417N3100	17	Jul 01/2009
I 25-23-32	UNDERBIN PASSENGER SERVICE UNIT ASSEMBLY -1SP, -2SP, -3SP, -4SP, -11SP, -12SP, -13SP, -14SP, -21SP, -23SP, -61SP, -62SP, -63SP, -64SP, -68SP, -126SP, -175SP, -176SP, -191SP, -192SP, -193SP, -194SP, -206SP, -208SP, -221SP, -223SP, -230SP, -261SP, -262SP, -264SP, -277SP, -278SP, -323SP, -325SP, -327SP, -439SP, -441SP, -443SP, -455SP, -457SP, -460SP, -462SP, -464SP, -477SP, -482SP, -535SP, -536SP, -554SP, -638SP, -640SP, -660SP	417N3100	14	Jul 01/2009



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
I 25-23-33	UNDERBIN PASSENGER SERVICE UNIT ASSEMBLY -28SP, -34SP, -36SP, -38SP, -56SP, -58SP, -91SP, -93SP, -96SP, -98SP, -111SP, -113SP, -115SP, -117SP, -119SP, -121SP, -128SP, -144SP, -145SP, -146SP, -147SP, -173SP, -174SP, -317SP, -318SP, -319SP, -320SP, -371SP, -372SP, -373SP, -374SP, -375SP, -376SP, -382SP, -384SP, -386SP, -400SP, -402SP, -404SP, -406SP, -408SP, -411SP, -413SP, -425SP, -427SP, -432SP, -434SP, -435SP, -436SP, -437SP, -438SP, -442SP, -454SP, -456SP, -458SP, -467SP, -469SP, -475SP, -490SP, -496SP, -498SP, -513SP, -515SP, -539SP, -540SP, -621SP, -622SP, -623SP, -624SP, -625SP, -626SP, -641SP, -653SP, -655SP, -667SP, -668SP, -669SP, -670SP, -671SP, -672SP	417N3100	17	Jul 01/2009
I 25-23-34	UNDERBIN PASSENGER SERVICE UNIT ASSEMBLY -122SP, -123SP, -124SP, -125SP, -162SP, -164SP, -177SP, -179SP, -203SP, -205SP, -213SP, -214SP, -215SP, -216SP, -222SP, -224SP, -241SP, -242SP, -243SP, -244SP, -250SP, -251SP, -258SP, -266SP, -268SP, -283SP, -284SP, -285SP, -286SP, -293SP, -294SP, -295SP, -296SP, -313SP, -314SP, -322SP, -324SP, -333SP, -336SP, -342SP, -344SP, -363SP, -364SP, -365SP, -366SP, -367SP, -369SP, -407SP, -409SP, -415SP, -417SP, -418SP, -419SP, -420SP, -421SP, -422SP, -423SP, -424SP, -426SP, -428SP, -429SP, -430SP, -440SP, -445SP, -447SP, -449SP, -451SP, -452SP, -453SP, -459SP, -461SP, -466SP, -468SP, -470SP, -471SP, -473SP, -474SP, -476SP, -478SP, -479SP, -480SP, -486SP, -488SP, -492SP, -494SP, -503SP, -504SP, -533SP, -595SP, -596SP, -600SP, -601SP, -602SP, -603SP, -604SP, -605SP, -633SP, -634SP, -643SP, -645SP, -647SP, -649SP, -650SP, -657SP, -658SP, -659SP, -662SP, -687SP, -688SP, -689SP, -690SP, -691SP, -692SP	417N3100	17	Jul 01/2009



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
I 25-23-35	ATTENDANT'S SERVICE UNIT OXYGEN BOX ASSEMBLY	65C27383	17	Jul 01/2009
I 25-23-36	AFT PARTIAL UNDERBIN PASSENGER SERVICE UNIT ASSEMBLY -135SP, -136SP, -537SP, -538SP, -541SP, -542SP, -543SP, -544SP, -619SP, -620SP, -635SP, -636SP, -746SP, -747SP	417N3100	11	Jul 01/2009
I 25-23-37	PARTIAL UNDERBIN PASSENGER SERVICE UNIT ASSEMBLY -129SP, -130SP, -131SP, -132SP, -133SP, -134SP, -141SP, -142SP, -143SP, -148SP, -156SP, -166SP, -170SP, -171SP, -172SP, -195SP, -198SP, -201SP, -202SP, -209SP, -211SP, -212SP, -217SP, -218SP, -219SP, -226SP, -228SP, -245SP, -246SP, -247SP, -248SP, -249SP, -252SP, -259SP, -271SP, -272SP, -281SP, -282SP, -287SP, -288SP, -298SP, -299SP, -301SP, -308SP, -315SP, -321SP, -326SP, -329SP, -330SP, -331SP, -332SP, -335SP, -346SP, -351SP, -352SP, -356SP, -358SP, -387SP, -388SP, -398SP, -501SP, -502SP, -505SP, -506SP, -507SP, -508SP, -509SP, -510SP, -511SP, -512SP, -514SP, -516SP, -517SP, -518SP, -519SP, -520SP, -521SP, -522SP, -523SP, -524SP, -525SP, -528SP, -529SP, -530SP, -531SP, -532SP, -545SP, -546SP, -617SP, -618SP, -627SP, -628SP, -661SP, -665SP, -666SP, -673SP, -674SP, -685SP, -686SP, -687SP, -688SP, -689SP, -690SP, -691SP, -692SP, -706SP, -709SP, -721SP, -722SP, -725SP, -729SP, -730SP, -739SP, -740SP, -745SP, -750SP, -752SP, -753SP, -754SP	417N3100	16	Jul 01/2009
I 25-23-38	PASSENGER SERVICE UNIT ASSEMBLY	417N3011	18	Jul 01/2009
I 25-23-39	OVERDOOR PASSENGER SERVICE UNIT ASSEMBLY	417N3051	10	Jul 01/2009
25-23-95	CARRY ALL PASSENGER SERVICE UNIT ASSEMBLY	65C16839	8	Sep 01/1995
25-24-06	FORWARD RIGHT HAND CLOSET ASSEMBLY	65C27540	1	Mar 05/1991
I 25-24-08	FORWARD RIGHT CLOSET ASSEMBLY	413N3206	9	Jul 01/2009
25-25-00	EXECUTIVE AIRPLANE FURNITURE		0	Jan 05/1978

NUMERICAL INDEX/MANUAL

Page 7

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
25-26-01	AFT ATTENDANT OXYGEN SERVICE UNIT ASSEMBLY	65-53544	3	Mar 05/1990
25-26-01	AFT ATTENDANT OXYGEN SERVICE UNIT ASSEMBLY	65-68967	3	Mar 05/1990
I 25-26-02	FORWARD LAVATORY OXYGEN SERVICE UNIT INSTALLATION	65-58255	6	Jul 01/2009
I 25-28-30	OVERHEAD STOWAGE COMPARTMENT ASSEMBLY -1, -4, -9, -11, -13, -41, -44, -49, -51, -53, -57, -61, -63, -65, -67, -69, -81, -83, -85, -87, -98, -102, -105, -107, -111, -113, -115, -117, -119, -124	65C27005	13	Jul 01/2009
I 25-28-30	OVERHEAD STOWAGE COMPARTMENT ASSEMBLY -5, -7, -11, -13, -15, -17, -19	65C34485	13	Jul 01/2009
I 25-28-35	OUTBD OVERHEAD STOWAGE, 60-IN-STD BIN ASSEMBLY -2, -3, -10, -12, -14, -42, -43, -50, -52, -54, -58, -62, -64, -66, -68, -70, -72, -79, -80, -84, -86, -88, -101, -106, -108, -112, -114, -116, -118, -120, -123, -125	65C27005	11	Jul 01/2009
I 25-28-35	OUTBD OVERHEAD STOWAGE, 60-IN-STD BIN ASSEMBLY -6, -8, -12, -14, -16, -18, -20, -22	65C34485	11	Jul 01/2009
I 25-28-36	OVERHEAD STOWAGE COMPARTMENT ASSEMBLY -15, -16, -55, -56, -74, -91, -92, -95, -103, -104	65C27005	12	Jul 01/2009
I 25-28-36	OVERHEAD STOWAGE COMPARTMENT ASSEMBLY -3, -4	65C34485	12	Jul 01/2009
I 25-28-37	OVERHEAD STOWAGE COMPARTMENT ASSEMBLY -6, -8, -46, -48, -59, -89, -93, -96, -97, -100, -109	65C27005	10	Jul 01/2009
I 25-28-37	OVERHEAD STOWAGE COMPARTMENT ASSEMBLY -9	65C34485	10	Jul 01/2009
I 25-28-38	OVERHEAD STOWAGE COMPARTMENT ASSEMBLY -71, -77, -82, -121, -122	65C27005	10	Jul 01/2009



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
I 25-28-38	OVERHEAD STOWAGE COMPARTMENT ASSEMBLY -23	65C34485	10	Jul 01/2009
I 25-28-39	OVERHEAD STOWAGE COMPARTMENT ASSEMBLY -73, -90	65C27005	7	Jul 01/2009
I 25-28-40	OVERHEAD STOWAGE COMPARTMENT ASSEMBLY -5, -7, -45, -47, -60, -110	65C27005	9	Jul 01/2009
I 25-28-40	OVERHEAD STOWAGE COMPARTMENT ASSEMBLY -10, -24	65C34485	9	Jul 01/2009
I 25-28-43	OVERHEAD STOWAGE COMPARTMENT ASSEMBLY -76	65C27005	8	Jul 01/2009
I 25-28-44	OVERHEAD STOWAGE COMPARTMENT ASSEMBLY -21, -22, -37, -43, -57, -61, -63, -65, -69, -72, -82, -83, -84, -93, -95, -96, -103, -104, -112, -113, -117, -118, -124, -127, -128, -133, -137	65C27006	9	Jul 01/2009
I 25-28-45	OVERHEAD STOWAGE COMPARTMENT ASSEMBLY -47, -94	65C27006	7	Jul 01/2009
I 25-28-46	OVERHEAD STOWAGE COMPARTMENT ASSEMBLY -5, -6, -7, -8, -23, -25, -26, -27, -33, -35, -39, -40, -41, -44, -45, -46, -48, -49, -53, -54, -64, -66, -67, -68, -71, -75, -85, -89, -91, -92, -98, -99, -107, -111, -115, -116, -121, -125, -135, -136, -138	65C27006	10	Jul 01/2009
I 25-28-47	OVERHEAD STOWAGE COMPARTMENT ASSEMBLY -50, -51, -52, -55, -56, -59, -60, -62, -70, -73, -74, -76, -77, -78, -79, -80, -81, -88, -90, -97, -101, -102, -106, -108, -109, -110, -114, -120, -122, -134, -139	65C27006	10	Jul 01/2009
I 25-28-48	OVERHEAD STOWAGE COMPARTMENT ASSEMBLY	65C32942	12	Jul 01/2009
I 25-28-49	OVERHEAD STOWAGE COMPARTMENT ASSEMBLY	65C32944	9	Jul 01/2009

NUMERICAL INDEX/MANUAL

Page 9

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
25-35-10	PALLETIZED CARGO SYSTEM BRAKE ASSEMBLY	65-37289	0	May 10/1974
25-35-11	PALLETIZED CARGO SYSTEM PALLET LOCK ASSEMBLY	65-37251	0	Mar 10/1970
25-35-11	PALLETIZED CARGO SYSTEM PALLET LOCK ASSEMBLY -2	65-42500	0	Mar 10/1970
25-46-02	AFT LAVATORY SERVICE UNIT ASSEMBLY	65-53521	0	Mar 10/1970
I 25-50-01	CARGO NET/STANCHION ASSEMBLY	453A1810	22	Jul 01/2009
I 25-50-01	CARGO NET/STANCHION ASSEMBLY	65-19328	22	Jul 01/2009
I 25-50-01	CARGO NET/STANCHION ASSEMBLY	65-19329	22	Jul 01/2009
I 25-50-01	CARGO NET/STANCHION ASSEMBLY	65-25756	22	Jul 01/2009
I 25-50-01	CARGO NET/STANCHION ASSEMBLY	65-25757	22	Jul 01/2009
I 25-50-01	CARGO NET/STANCHION ASSEMBLY -1	65-45953	22	Jul 01/2009
I 25-50-01	CARGO NET/STANCHION ASSEMBLY	65-49625	22	Jul 01/2009
I 25-50-01	CARGO NET/STANCHION ASSEMBLY	65-49626	22	Jul 01/2009
I 25-50-01	CARGO NET/STANCHION ASSEMBLY	65-49627	22	Jul 01/2009
I 25-50-01	CARGO NET/STANCHION ASSEMBLY	65-49628	22	Jul 01/2009
I 25-50-01	CARGO NET/STANCHION ASSEMBLY	65-49629	22	Jul 01/2009
I 25-50-01	CARGO NET/STANCHION ASSEMBLY	65-52956	22	Jul 01/2009
I 25-50-01	CARGO NET/STANCHION ASSEMBLY -6, -15, -16, -17, -18, -26	65-52970	22	Jul 01/2009
I 25-50-01	CARGO NET/STANCHION ASSEMBLY -1, -2, -3, -4, -5, -6, -21, -22, -23, -24, -25, -26, -33, -34, -39, -40, -501, -502, -503, -504, -505, -506	65-53882	22	Jul 01/2009
I 25-50-01	CARGO NET/STANCHION ASSEMBLY	65-54404	22	Jul 01/2009
I 25-50-01	CARGO NET/STANCHION ASSEMBLY	65-78966	22	Jul 01/2009
I 25-50-04	CARGO COMPARTMENT PROTECTIVE GRILL ASSEMBLY	65C21468	9	Jul 01/2009
25-56-05	CARGO NET STANCHION ASSEMBLY -1, -2, -3, -4	65-45953	2	Mar 01/1997
25-56-05	CARGO NET STANCHION ASSEMBLY -1, -2, -6, -15, -16, -17, -18, -24, -26, -28	65-52970	2	Mar 01/1997



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
25-56-05	CARGO NET STANCHION ASSEMBLY -1, -2, -3, -4, -5, -6, -21, -22, -23, -24, -25, -26, -33, -34, -39, -40, -501, -502, -503, -504, -505, -506	65-53882	2	Mar 01/1997
25-56-09	QC CARGO SYSTEM SIDE RESTRAINT ASSEMBLY	65-49140	1	May 10/1977
25-56-13	PALLETIZED CARGO SYSTEM MAIN CARGO DOOR THRESHOLD ASSEMBLY	65-54137	1	Apr 05/1977
25-56-13	PALLETIZED CARGO SYSTEM MAIN CARGO DOOR THRESHOLD ASSEMBLY	65-67832	1	Apr 05/1977
25-56-22	PALLETIZED CARGO SYSTEM SIDE RESTRAINT GUIDE ASSEMBLY	65-37244	0	Dec 25/1975
25-56-22	PALLETIZED CARGO SYSTEM SIDE RESTRAINT GUIDE ASSEMBLY -7, -15, -20	65-80213	0	Dec 25/1975
25-56-24	PALLETIZED CARGO SYSTEM RETRACTABLE SIDE GUIDE ASSEMBLY	65-37288	1	Mar 05/1981
25-56-27	PALLETIZED CARGO SYSTEM SIDE RESTRAINT GUIDE RAIL ASSEMBLY	65-47300	1	Nov 10/1985
25-56-27	PALLETIZED CARGO SYSTEM SIDE RESTRAINT GUIDE RAIL ASSEMBLY	65-47301	1	Nov 10/1985
25-56-27	PALLETIZED CARGO SYSTEM SIDE RESTRAINT GUIDE RAIL ASSEMBLY -3, -5, -6, -13	65-80213	1	Nov 10/1985
25-56-28	PALLETIZED CARGO SYSTEM RETRACTABLE SIDE GUIDE ASSEMBLY	65-57177	0	Dec 25/1975
25-56-30	PALLETIZED CARGO SYSTEM SIDE RESTRAINT GUIDE RAIL ASSEMBLY	65-63639	2	Dec 05/1985
25-56-30	PALLETIZED CARGO SYSTEM SIDE RESTRAINT GUIDE RAIL ASSEMBLY	65-63642	2	Dec 05/1985
25-56-32	QC CARGO SYSTEM SEAT PALLET LATCH ASSEMBLY	65-49118	0	Dec 25/1975
25-56-32	QC CARGO SYSTEM SEAT PALLET LATCH ASSEMBLY	65-51719	0	Dec 25/1975
25-56-33	SEAT PALLET ATTACH FITTING ASSEMBLY	65-76944	1	Jun 05/1984
25-56-34	PASSENGER SEAT PALLET QC CARGO SYSTEM STOP ASSEMBLY	65-74572	0	Jun 05/1984



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
25-56-34	PASSENGER SEAT PALLET QC CARGO SYSTEM STOP ASSEMBLY	65-76670	0	Jun 05/1984
25-56-34	PASSENGER SEAT PALLET QC CARGO SYSTEM STOP ASSEMBLY	65C16136	0	Jun 05/1984
25-56-35	CARGO SYSTEM ROLLER TRAY ASSEMBLY	65-49110	0	Dec 25/1975
25-56-35	CARGO SYSTEM ROLLER TRAY ASSEMBLY -17	65-81432	0	Dec 25/1975
25-56-38	PALLETIZED CARGO SYSTEM SIDE RESTRAINT ASSEMBLY	65-51705	2	Dec 05/1991
25-56-46	PALLETIZED CARGO SYSTEM TRANSFER PANEL ASSEMBLY	65-63633	1	Jul 05/1981
25-56-49	QC CARGO SYSTEM FIXED SIDE GUIDE ASSEMBLY	69-55187	0	Sep 05/1985
25-56-50	QC CARGO SYSTEM ROLLER SUPPORT ASSEMBLY	69-55190	0	Sep 05/1985
25-57-04	PALLETIZED CARGO SYSTEM AFT STOP ASSEMBLY	69-35293	2	Jun 05/1986
25-57-05	CARGO PALLET LOCK ASSEMBLY	65-49115	3	Dec 05/1984
25-57-05	CARGO PALLET LOCK ASSEMBLY -15, -16	65-81432	3	Dec 05/1984
25-57-06	QC CARGO SYSTEM PALLET LOCK ASSEMBLY	65-49116	0	Dec 25/1975
25-57-07	PALLET ROLLOUT STOP ASSEMBLY	69-39383	3	Jul 01/1998
25-57-08	MAIN DECK PALLETIZED CARGO SYSTEM ROLLER TRAY AND ROLLER TRAY TIEDOWN ASSEMBLIES -3, -4, -5, -6, -7, -8, -9	65-42500	1	Sep 05/1984
25-57-08	MAIN DECK PALLETIZED CARGO SYSTEM ROLLER TRAY AND ROLLER TRAY TIEDOWN ASSEMBLIES	65-42638	1	Sep 05/1984
25-57-08	MAIN DECK PALLETIZED CARGO SYSTEM ROLLER TRAY AND ROLLER TRAY TIEDOWN ASSEMBLIES	69-33942	1	Sep 05/1984
25-57-11	PALLETIZED CARGO SYSTEM CANTED TRACK PALLET LOCK ASSEMBLY	65-63629	1	Jul 05/1977
25-57-12	PALLETIZED CARGO SYSTEM CANTED TRACK PALLET LOCK ASSEMBLY	65-63630	0	Dec 25/1975



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
25-57-20	BALL TRANSFER PANEL GENERAL INFORMATION		2	Jun 01/1997
26-10-11	APU FIRE WARNING HORN ASSEMBLY	69-29567	2	Nov 20/1987
26-10-33	APU FIRE WARNING HORN ASSEMBLY, M277	65-62598	0	Nov 10/1969
26-10-34	APU FIRE WARNING HORN ASSEMBLY, M277	65-68945	4	Jul 01/2005
26-10-46	ENGINE AND APU FIRE CONTROL MODULE ASSEMBLY, P8-1	65-84131	23	Jul 01/2008
I 26-22-01	FIRE CONTROL AUXILIARY POWER UNIT ASSEMBLY	65-50909	7	Jul 01/2009
I 27-00-12	CONTROL ROD ASSEMBLY	250N2004	23	Jul 01/2009
27-09-05	AILERON/ELEVATOR AUTOPILOT ACTUATOR LEVER ASSEMBLY	69-70991	5	Mar 01/1999
27-09-05	AILERON/ELEVATOR AUTOPILOT ACTUATOR LEVER ASSEMBLY	69-71002	5	Mar 01/1999
27-09-09	RUDDER AND ELEVATOR FEEL ACTUATOR CYLINDER ASSEMBLY	65-44503	33	Jul 01/2007
27-09-09	RUDDER AND ELEVATOR FEEL ACTUATOR CYLINDER ASSEMBLY	65-45134	33	Jul 01/2007
27-09-09	RUDDER AND ELEVATOR FEEL ACTUATOR CYLINDER ASSEMBLY	65-45140	33	Jul 01/2007
I 27-09-21	AILERON AND ELEVATOR POWER CONTROL UNIT ASSEMBLY	65-44761	54	Jul 01/2009
I 27-09-21	AILERON AND ELEVATOR POWER CONTROL UNIT ASSEMBLY	65-45180	54	Jul 01/2009
I 27-09-21	AILERON AND ELEVATOR POWER CONTROL UNIT ASSEMBLY -15, -28, -29, -30, -32, -34, -37, -39, -40, -43, -44, -47, -48, -49, -50, -52, -54	65-49874	54	Jul 01/2009
I 27-09-23	AILERON/ELEVATOR POWER CONTROL UNIT ASSEMBLY	251A2160	11	Jul 01/2009
27-09-31	COMPUTER ASSEMBLY	65-45132	20	Jul 01/2006
27-09-32	POTENTIOMETER DRIVE ASSEMBLY	65-45171	5	Mar 05/1991
I 27-09-44	CONTROL STAND FLAP CONTROL HANDLE ASSEMBLY	254A1260	6	Jul 01/2009
I 27-09-45	CONTROL STAND UPPER MECHANISM ASSEMBLY	65C25503	21	Jul 01/2009

NUMERICAL INDEX/MANUAL

Page 13

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
I 27-09-46	CONTROL STAND MECHANISM ASSEMBLY	65C31503	18	Jul 01/2009
I 27-11-24	AILERON CONTROL QUADRANT ASSEMBLY	251A1631	10	Jul 01/2009
I 27-11-33	AILERON CONTROL QUADRANT ASSEMBLY	251A1111	7	Jul 01/2009
I 27-11-34	AILERON TAB ROD ASSEMBLY	251A1120	11	Jul 01/2009
I 27-11-35	AILERON CONTROL WHEEL DRUM ASSEMBLY	251A1814	11	Jul 01/2009
27-12-21	AILERON POWER CONTROL SPRING CARTRIDGE ASSEMBLY	65-53788	5	Mar 01/2008
27-14-11	AILERON GEARED TRIM ASSEMBLY	65-52284	1	Jul 05/1978
27-14-21	AILERON CENTERING MECHANISM ASSEMBLY	65-52283	21	Mar 01/2008
27-14-21	AILERON CENTERING MECHANISM ASSEMBLY	65-75960	21	Mar 01/2008
I 27-14-22	AILERON CENTERING MECHANISM ASSEMBLY	251A1641	8	Jul 01/2009
27-16-01	AILERON AND ELEVATOR CONTROL COLUMN/WHEEL ASSEMBLY	65-25747	30	Nov 01/2008
27-16-01	AILERON AND ELEVATOR CONTROL COLUMN/WHEEL ASSEMBLY	65-45121	30	Nov 01/2008
27-16-05	AILERON CONTROL TRANSFER MECHANISM ASSEMBLY	65-54200	13	Mar 01/2003
I 27-16-07	AILERON CONTROL TRANSFER MECHANISM ASSEMBLY	65C37030	11	Jul 01/2009
I 27-16-08	AILERON CONTROL TRANSFER MECHANISM ASSEMBLY	251A1817	7	Jul 01/2009
27-16-09	CONTROL WHEEL STEERING AILERON DRUM ASSEMBLY -21, -23, -24, -26, -27, -35, -55, -57, -62, -63, -64, -65, -66, -70, -73, -74, -75, -80, -81	65-55731	8	Nov 01/2005
27-16-10	CONTROL WHEEL STEERING AILERON DRUM ASSEMBLY -5, -12, -14, -15, -54, -56	65-55731	6	Mar 01/2001
27-16-11	CONTROL STAND UPPER MECHANISM ASSEMBLY	65-45125	20	Mar 01/2004
27-17-02	AILERON CONTROL SHAFT ASSEMBLY	65-49582	11	Mar 01/2008
27-20-01	RUDDER POWER CONTROL UNIT ASSEMBLY	65-44861	57	Jul 01/2003
27-20-01	RUDDER POWER CONTROL UNIT ASSEMBLY	65-45160	57	Jul 01/2003
27-20-01	RUDDER POWER CONTROL UNIT ASSEMBLY	65C37052	57	Jul 01/2003



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
27-20-01	RUDDER POWER CONTROL UNIT ASSEMBLY	65C37053	57	Jul 01/2003
I 27-21-85	RUDDER CONTROL CENTERING UNIT ASSEMBLY	65C25410	17	Jul 01/2009
27-24-01	RUDDER TRIM ACTUATOR ASSEMBLY	65-21831	14	Nov 01/1999
27-24-02	RUDDER CONTROL JACKSHAFT ASSEMBLY	5-97613	3	Mar 01/1996
I 27-24-05	RUDDER CONTROL JACK SHAFT ASSEMBLY	251A3145	9	Jul 01/2009
27-24-31	ELEVATOR/RUDDER CENTERING UNIT ASSEMBLY	65-45133	5	Sep 01/1995
27-24-32	RUDDER CONTROLS CENTERING UNIT ASSEMBLY	65-70973	7	Nov 01/2002
27-27-01	RUDDER PEDAL ASSEMBLY	5-95631	4	Nov 01/2002
27-27-01	RUDDER PEDAL ASSEMBLY	65-45120	4	Nov 01/2002
27-27-03	RUDDER CONTROL QUADRANT ASSEMBLY	65-45150	1	Nov 01/2007
27-27-04	RUDDER CONTROL TORQUE TUBE ASSEMBLY	65-45142	7	Jul 01/2003
I 27-27-05	RUDDER CONTROL QUADRANT ASSEMBLY	251A3471	9	Jul 01/2009
I 27-27-06	RUDDER CONTROL TORQUE TUBE ASSEMBLY	251A3440	10	Jul 01/2009
I 27-27-07	RUDDER PEDAL ASSEMBLY	251A3132	11	Jul 01/2009
27-30-01	TAB LOCK ACTUATOR ASSEMBLY	65-44751	7	Sep 01/1994
27-30-01	TAB LOCK ACTUATOR ASSEMBLY -4, -9, -10	65-45190	7	Sep 01/1994
I 27-31-07	ELEVATOR PCU CONTROL POGO ROD ASSEMBLY	251A2131	5	Jul 01/2009
I 27-31-95	FEEL AND CENTERING ELEVATOR CONTROL UNIT ASSEMBLY	65C25465	28	Jul 01/2009
I 27-31-97	ELEV TAB CONTROL GEARING MECHANISM CRANK ASSEMBLY	65C30878	13	Jul 01/2009
27-34-01	ELEVATOR TAB CONTROL MECHANISM ASSEMBLY -3, -5	65-45190	2	Jun 01/1994
27-34-02	ELEVATOR TAB CONTROL MECHANISM ASSEMBLY	65-79425	6	Nov 01/2003
I 27-34-03	ELEVATOR CONTROL-TAB MECHANISM ASSEMBLY	251A2430	11	Jul 01/2009
27-37-02	ELEVATOR CONTROL QUADRANT ASSEMBLY	65-54204	7	Nov 01/2007



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
27-37-06	ELEVATOR CONTROLS FEEL AND CENTERING ROD ASSEMBLY	65-60584	0	May 15/1969
27-37-07	ELEVATOR CONTROL TORQUE TUBE ASSEMBLY	65-45187	17	Mar 01/2008
27-37-08	ELEVATOR BUSS ASSEMBLY	65-65310	18	Mar 01/2005
27-37-09	VERNIER ADJUSTMENT CONTROL ROD ASSEMBLY	251A3416	16	Jul 01/2008
27-37-09	VERNIER ADJUSTMENT CONTROL ROD ASSEMBLY	251A3495	16	Jul 01/2008
27-37-09	VERNIER ADJUSTMENT CONTROL ROD ASSEMBLY	65-45166	16	Jul 01/2008
27-37-09	VERNIER ADJUSTMENT CONTROL ROD ASSEMBLY	65C37931	16	Jul 01/2008
27-37-09	VERNIER ADJUSTMENT CONTROL ROD ASSEMBLY	69-37290	16	Jul 01/2008
27-37-09	VERNIER ADJUSTMENT CONTROL ROD ASSEMBLY	69-43490	16	Jul 01/2008
27-37-09	VERNIER ADJUSTMENT CONTROL ROD ASSEMBLY	69-71010	16	Jul 01/2008
27-37-09	VERNIER ADJUSTMENT CONTROL ROD ASSEMBLY	69-73371	16	Jul 01/2008
27-37-10	ELEVATOR CONTROLS TUBE AND CRANK ASSEMBLY	251A2379	8	Jul 01/2009
27-37-12	ROD ASSEMBLY	69-44427	2	Jul 01/2008
27-37-13	ELEVATOR CONTROL FEEL AND CENTERING TUBE/CRANK ASSEMBLY	65-60586	5	Jun 05/1988
27-37-15	ELEVATOR CONTROLS MECHANISM ASSEMBLY	251A2340	9	Jul 01/2009
27-37-17	ELEVATOR CONTROL QUADRANT ASSEMBLY	251A2196	10	Jul 01/2009
27-37-20	ELEVATOR BUS ASSEMBLY	251A2341	8	Jul 01/2009
27-37-25	ELEVATOR TAB CONTROL VALVE ASSEMBLY	251A2420	9	Jul 01/2009
27-41-91	STABILIZER TRIM COLUMN ACTUATED CUTOUT SWITCH ASSEMBLY	65C25529	23	Jul 01/2009
27-41-94	COLUMN CUTOUT SWITCH ASSEMBLY	251A4410	12	Jul 01/2009
27-41-95	STABILIZER TRIM COLUMN ACTUATED CUTOUT SWITCH ASSEMBLY	251A4430	13	Jul 01/2009

NUMERICAL INDEX/MANUAL

Page 16

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
27-44-01	STABILIZER TRIM FORWARD MECHANISM ASSEMBLY	65-22732	12	Mar 01/2002
27-44-02	CONTROL STAND STABILIZER TRIM JACK ASSEMBLY	6-63931	2	Mar 05/1985
I 27-44-03	STABILIZER TRIM FWD MECHANISM ASSEMBLY	251A4115	14	Jul 01/2009
I 27-45-11	STABILIZER TRIM ACTUATOR ASSEMBLY	65-49970	55	Jul 01/2009
I 27-45-11	STABILIZER TRIM ACTUATOR ASSEMBLY	65C34751	55	Jul 01/2009
I 27-45-11	STABILIZER TRIM ACTUATOR ASSEMBLY	65C36486	55	Jul 01/2009
I 27-45-12	STABILIZER TRIM ACTUATOR ASSEMBLY	251A4510	18	Jul 01/2009
I 27-45-12	STABILIZER TRIM ACTUATOR ASSEMBLY	251A4510-11	18	Jul 01/2009
I 27-45-12	STABILIZER TRIM ACTUATOR ASSEMBLY	251A4510-13	18	Jul 01/2009
I 27-53-03	FLAP CONTROL UNIT ASSEMBLY	256A3550	7	Jul 01/2009
27-53-11	TRAILING EDGE FLAP CONTROL VALVE ASSEMBLY	65-44821	10	Mar 01/2001
27-53-11	TRAILING EDGE FLAP CONTROL VALVE ASSEMBLY -2, -29, -30	65-51602	10	Mar 01/2001
27-53-12	VALVE ASSY, TRAILING EDGE FLAP CONTROL	65-44631	9	Mar 01/2003
27-53-12	VALVE ASSY, TRAILING EDGE FLAP CONTROL -11	65-51602	9	Mar 01/2003
27-54-11	LEADING EDGE AND TRAILING EDGE FLAPS CONTROL ASSEMBLY -5, -6, -7, -8, -9, -10, -20, -21, -27, -31, -32, -33, -35	65-51602	10	Jun 01/1994
27-54-11	LEADING EDGE AND TRAILING EDGE FLAPS CONTROL ASSEMBLY	65C27298	10	Jun 01/1994
27-54-12	CONTROL ASSY, LEADING EDGE AND TRAILING EDGE FLAPS -39, -43, -47, -49, -51, -53	65-51602	11	Jul 01/2001
27-55-11	GEARBOX ASSY, TRAILING EDGE FLAP DRIVE RIGHT ANGLE	65-51510	5	Nov 01/2002
27-55-21	GEARBOX ASSY, TRAILING EDGE FLAP DRIVE ANGLE	65-51513	3	Dec 05/1992
27-55-31	UNIT ASSY, TRAILING EDGE FLAP DRIVE POWER	65-51500	1	Dec 05/1990
27-55-32	UNIT ASSY, TRAILING EDGE FLAP DRIVE POWER	65-63851	17	Jul 01/2003



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
27-55-41	FLAP DRIVE COMPONENTS	65-49529	19	Jul 01/2009
27-55-41	FLAP DRIVE COMPONENTS	65-50587	19	Jul 01/2009
27-55-41	FLAP DRIVE COMPONENTS	65-51280	19	Jul 01/2009
27-55-41	FLAP DRIVE COMPONENTS	65-52925	19	Jul 01/2009
27-55-41	FLAP DRIVE COMPONENTS	65-55509	19	Jul 01/2009
27-55-41	FLAP DRIVE COMPONENTS	65-55552	19	Jul 01/2009
27-55-41	FLAP DRIVE COMPONENTS	65-68271	19	Jul 01/2009
27-55-41	FLAP DRIVE COMPONENTS	65-73271	19	Jul 01/2009
27-55-41	FLAP DRIVE COMPONENTS	65C30843	19	Jul 01/2009
27-55-41	FLAP DRIVE COMPONENTS	65C30844	19	Jul 01/2009
27-55-41	FLAP DRIVE COMPONENTS	65C30846	19	Jul 01/2009
27-55-41	FLAP DRIVE COMPONENTS	65C33679	19	Jul 01/2009
27-55-41	FLAP DRIVE COMPONENTS	65C33680	19	Jul 01/2009
27-55-41	FLAP DRIVE COMPONENTS	69-38943	19	Jul 01/2009
27-55-41	FLAP DRIVE COMPONENTS	69-39236	19	Jul 01/2009
27-55-41	FLAP DRIVE COMPONENTS	69-40205	19	Jul 01/2009
27-55-41	FLAP DRIVE COMPONENTS	69-44671	19	Jul 01/2009
27-55-41	FLAP DRIVE COMPONENTS	69-45163	19	Jul 01/2009
27-55-41	FLAP DRIVE COMPONENTS	69-46648	19	Jul 01/2009
27-55-41	FLAP DRIVE COMPONENTS	69-46649	19	Jul 01/2009
27-55-41	FLAP DRIVE COMPONENTS	69-54904	19	Jul 01/2009
27-55-51	TRAILING EDGE FLAP DRIVE NO. 1 AND 8 TRANSMISSION ASSEMBLY	65-50251	27	Mar 01/2005
27-55-51	TRAILING EDGE FLAP DRIVE NO. 1 AND 8 TRANSMISSION ASSEMBLY	65-50258	27	Mar 01/2005
27-55-52	TRAILING EDGE FLAP DRIVE NO. 2 AND 7 TRANSMISSION ASSEMBLY	65-50252	27	Mar 01/2005
27-55-52	TRAILING EDGE FLAP DRIVE NO. 2 AND 7 TRANSMISSION ASSEMBLY	65-50257	27	Mar 01/2005
27-55-53	TRAILING EDGE FLAP DRIVE NO. 3 AND 6 TRANSMISSION ASSEMBLY	65-50253	21	Mar 01/2005

NUMERICAL INDEX/MANUAL

Page 18

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
27-55-53	TRAILING EDGE FLAP DRIVE NO. 3 AND 6 TRANSMISSION ASSEMBLY	65-50256	21	Mar 01/2005
27-55-54	TRAILING EDGE FLAP DRIVE NO. 4 AND 5 TRANSMISSION ASSEMBLY	65-50254	36	Mar 01/2005
27-55-54	TRAILING EDGE FLAP DRIVE NO. 4 AND 5 TRANSMISSION ASSEMBLY	65-50255	36	Mar 01/2005
27-55-55	TRAILING EDGE FLAP DRIVE NO. 1 AND 8 TRANSMISSION ASSEMBLY	65-50301	29	Mar 01/2005
27-55-55	TRAILING EDGE FLAP DRIVE NO. 1 AND 8 TRANSMISSION ASSEMBLY	65-50308	29	Mar 01/2005
27-55-55	TRAILING EDGE FLAP DRIVE NO. 1 AND 8 TRANSMISSION ASSEMBLY	65-50321	29	Mar 01/2005
27-55-55	TRAILING EDGE FLAP DRIVE NO. 1 AND 8 TRANSMISSION ASSEMBLY	65-50328	29	Mar 01/2005
27-55-56	TRAILING EDGE FLAP DRIVE NO. 2 AND 7 TRANSMISSION ASSEMBLY	65-50302	40	Mar 01/2005
27-55-56	TRAILING EDGE FLAP DRIVE NO. 2 AND 7 TRANSMISSION ASSEMBLY	65-50307	40	Mar 01/2005
27-55-56	TRAILING EDGE FLAP DRIVE NO. 2 AND 7 TRANSMISSION ASSEMBLY	65-50322	40	Mar 01/2005
27-55-56	TRAILING EDGE FLAP DRIVE NO. 2 AND 7 TRANSMISSION ASSEMBLY	65-50327	40	Mar 01/2005
27-55-57	TRAILING EDGE FLAP DRIVE NO. 3 AND 6 TRANSMISSION ASSEMBLY	65-50303	32	Mar 01/2008
27-55-57	TRAILING EDGE FLAP DRIVE NO. 3 AND 6 TRANSMISSION ASSEMBLY	65-50306	32	Mar 01/2008
27-55-57	TRAILING EDGE FLAP DRIVE NO. 3 AND 6 TRANSMISSION ASSEMBLY	65-50323	32	Mar 01/2008
27-55-57	TRAILING EDGE FLAP DRIVE NO. 3 AND 6 TRANSMISSION ASSEMBLY	65-50326	32	Mar 01/2008
27-55-58	TRAILING EDGE FLAP DRIVE NO. 4 AND 5 TRANSMISSION ASSEMBLY	65-50304	41	Nov 01/2007
27-55-58	TRAILING EDGE FLAP DRIVE NO. 4 AND 5 TRANSMISSION ASSEMBLY	65-50305	41	Nov 01/2007
27-55-58	TRAILING EDGE FLAP DRIVE NO. 4 AND 5 TRANSMISSION ASSEMBLY	65-50324	41	Nov 01/2007



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
27-55-58	TRAILING EDGE FLAP DRIVE NO. 4 AND 5 TRANSMISSION ASSEMBLY	65-50325	41	Nov 01/2007
I 27-55-59	TE FLAP DRIVE, NO. 1 AND 8 TRANSMISSION ASSEMBLY	65C27501	23	Jul 01/2009
I 27-55-59	TE FLAP DRIVE, NO. 1 AND 8 TRANSMISSION ASSEMBLY	65C27508	23	Jul 01/2009
I 27-55-60	TE FLAP DRIVE, NO. 2 AND 7 TRANSMISSION ASSEMBLY	65C27502	26	Jul 01/2009
I 27-55-60	TE FLAP DRIVE, NO. 2 AND 7 TRANSMISSION ASSEMBLY	65C27507	26	Jul 01/2009
I 27-55-61	TE FLAP DRIVE, NO. 3 AND 6 TRANSMISSION ASSEMBLY	65C27503	25	Jul 01/2009
I 27-55-61	TE FLAP DRIVE, NO. 3 AND 6 TRANSMISSION ASSEMBLY	65C27506	25	Jul 01/2009
I 27-55-66	TE FLAP DRIVE COMPONENTS	113A2610	10	Jul 01/2009
I 27-55-66	TE FLAP DRIVE COMPONENTS	113A2612	10	Jul 01/2009
I 27-55-66	TE FLAP DRIVE COMPONENTS	113A2620	10	Jul 01/2009
I 27-55-66	TE FLAP DRIVE COMPONENTS	113A2630	10	Jul 01/2009
I 27-55-67	POSITIONS 1 AND 8 FLAP ACTUATOR TRANSMISSION ASSEMBLY	256A3110	17	Jul 01/2009
I 27-55-68	POSITIONS 2 AND 7 FLAP ACTUATOR TRANSMISSION ASSEMBLY	256A3210	17	Jul 01/2009
I 27-55-70	POSITIONS 4 AND 5 FLAP ACTUATOR TRANSMISSION ASSEMBLY	256A3410	17	Jul 01/2009
I 27-55-71	INBOARD FLAP INBOARD CARRIAGE ASSEMBLY	113A2800	10	Jul 01/2009
I 27-55-72	INBOARD FLAP OUTBOARD CARRIAGE ASSEMBLY	113A2850	9	Jul 01/2009
I 27-55-73	OUTBOARD TRAILING EDGE FLAP OUTBOARD CARRIAGE ASSEMBLY	113A3800	11	Jul 01/2009
I 27-55-74	OUTBOARD TRAILING EDGE FLAP INBOARD CARRIAGE ASSEMBLY	113A3850	9	Jul 01/2009
I 27-55-75	FLAP ACTUATION MLG BEAM ANGLE GEARBOX ASSEMBLY	256A3640	13	Jul 01/2009
I 27-55-76	TORQUE TUBE ASSEMBLY	256A3710	7	Jul 01/2009
I 27-55-76	TORQUE TUBE ASSEMBLY	256A3720	7	Jul 01/2009

NUMERICAL INDEX/MANUAL

Page 20

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
27-55-77	POWER DRIVE UNIT ASSEMBLY	256A3510	10	Jul 01/2009
27-55-78	FLAP ACTUATION SEAL RIB ANGLE GEARBOX ASSEMBLY	256A3630	12	Jul 01/2009
27-55-79	TRAILING EDGE FLAP COMPONENTS	113A1120	12	Jul 01/2009
27-55-79	TRAILING EDGE FLAP COMPONENTS	113A1150	12	Jul 01/2009
27-55-79	TRAILING EDGE FLAP COMPONENTS	113A1220	12	Jul 01/2009
27-55-79	TRAILING EDGE FLAP COMPONENTS	113A1317	12	Jul 01/2009
27-55-79	TRAILING EDGE FLAP COMPONENTS	113A1320	12	Jul 01/2009
27-55-79	TRAILING EDGE FLAP COMPONENTS	113A1350	12	Jul 01/2009
27-55-79	TRAILING EDGE FLAP COMPONENTS	113A1517	12	Jul 01/2009
27-55-79	TRAILING EDGE FLAP COMPONENTS	113A1520	12	Jul 01/2009
27-55-79	TRAILING EDGE FLAP COMPONENTS	113A1550	12	Jul 01/2009
27-55-79	TRAILING EDGE FLAP COMPONENTS	113A1717	12	Jul 01/2009
27-55-79	TRAILING EDGE FLAP COMPONENTS	113A1720	12	Jul 01/2009
27-55-79	TRAILING EDGE FLAP COMPONENTS	113A1750	12	Jul 01/2009
27-55-80	TE FLAP TRANSMISSION ASSEMBLY NO. 3 AND 6	256A3310	17	Jul 01/2009
27-55-81	FLAP ACTUATION WHEEL WELL TEE GEARBOX ASSEMBLY	256A3650	15	Jul 01/2009
27-55-82	FLAP ACTUATION LOW SETTING TORQUE BRAKE ASSEMBLY	256A3150	11	Jul 01/2009
27-55-84	FLAP ACTUATION HIGH SETTING TORQUE BRAKE ASSEMBLY	256A3151	11	Jul 01/2009
27-55-85	TE FLAP CONTROL VALVE ASSEMBLY	256A3580	8	Jul 01/2009
27-55-87	FLAP ACTUATION GEARBOX ASSEMBLY	256A3515	17	Jul 01/2009
27-56-40	LEADING EDGE FLAP AND SLAT POSITION INDICATOR ACCESSORY UNIT ASSEMBLY, M229 -2	69-62790	40	Jul 01/2008
27-56-47	LEADING EDGE FLAP/SLAT COMPARATOR LOGIC PRINTED CIRCUIT ASSEMBLY -3	69-62790	6	Nov 01/2008
27-56-51	FLAP POSITION AND STALL WARNING TRANSMITTER GEARBOX ASSEMBLY	65-80055	6	Dec 01/1994

NUMERICAL INDEX/MANUAL

Page 21

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
27-57-01	FLAP ASYMMETRY SHUTOFF MECHANISM ASSEMBLY	65-56600	0	Dec 25/1975
27-57-02	FLAP CONTROL INPUT QUADRANT SUPPORT ASSEMBLY	65-51600	7	Nov 01/2003
I 27-57-22	OUTBOARD FOREFLAP SEQUENCING CARRIAGE/ TOGGLE ASSEMBLY	65-47836	19	Jul 01/2009
I 27-57-22	OUTBOARD FOREFLAP SEQUENCING CARRIAGE/ TOGGLE ASSEMBLY	65-63413	19	Jul 01/2009
I 27-57-22	OUTBOARD FOREFLAP SEQUENCING CARRIAGE/ TOGGLE ASSEMBLY	65-73732	19	Jul 01/2009
I 27-57-22	OUTBOARD FOREFLAP SEQUENCING CARRIAGE/ TOGGLE ASSEMBLY	65C34015	19	Jul 01/2009
I 27-57-22	OUTBOARD FOREFLAP SEQUENCING CARRIAGE/ TOGGLE ASSEMBLY	65C34314	19	Jul 01/2009
I 27-57-22	OUTBOARD FOREFLAP SEQUENCING CARRIAGE/ TOGGLE ASSEMBLY	65C34782	19	Jul 01/2009
I 27-57-22	OUTBOARD FOREFLAP SEQUENCING CARRIAGE/ TOGGLE ASSEMBLY	69-37880	19	Jul 01/2009
27-60-31	GROUND SPOILER ACTUATOR ASSEMBLY	65-44951	8	Mar 01/1999
27-60-32	GROUND SPOILER LOCKING ACTUATOR ASSEMBLY	65-44851	25	Nov 01/2008
27-60-33	OUTBOARD GROUND SPOILER LOCKING ACTUATOR ASSEMBLY -2, -4, -5, -6, -8, -9, -10, -11, -13, -15, -29, -30	65-44960	16	Mar 01/2002
27-60-33	OUTBOARD GROUND SPOILER LOCKING ACTUATOR ASSEMBLY	65-44961	16	Mar 01/2002
27-60-41	FLIGHT SPOILER POWER CONTROL UNIT ASSEMBLY	65-44561	53	Nov 01/2008
27-60-41	FLIGHT SPOILER POWER CONTROL UNIT ASSEMBLY	65-49580	53	Nov 01/2008
I 27-60-42	SPOILER ACTUATION POWER CONTROL UNIT ASSEMBLY	251A1240	15	Jul 01/2009
I 27-60-42	SPOILER ACTUATION POWER CONTROL UNIT ASSEMBLY	251A1270	15	Jul 01/2009
I 27-62-71	OUTBOARD GROUND SPOILER ACTUATOR ASSEMBLY	251A1510	28	Jul 01/2009

NUMERICAL INDEX/MANUAL

Page 22

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
I 27-62-71	OUTBOARD GROUND SPOILER ACTUATOR ASSEMBLY -23, -24, -25, -27, -28	65-44960	28	Jul 01/2009
I 27-62-71	OUTBOARD GROUND SPOILER ACTUATOR ASSEMBLY	65C26864	28	Jul 01/2009
27-64-01	A AND B HYDRAULIC SYSTEM AILERON POWER CONTROL ASSEMBLY -10, -11, -16, -17, -21, -22, -23, -24, -56, -57, -60, -61, -62, -63, -64, -66	65-49874	13	Jul 01/2008
I 27-64-02	LATERAL SYSTEM AILERON POWER CONTROL ASSEMBLY	251A1661	10	Jul 01/2009
27-67-01	SPOILER MIXER ASSEMBLY	65-46360	20	Jul 01/2007
27-67-03	AUTOMATIC SPEED BRAKE DRUM MECHANISM/ ACTUATOR BUILDUP		3	Dec 05/1989
I 27-67-04	SPOILER MIXER ASSEMBLY	251A1741	10	Jul 01/2009
I 27-67-10	SPEED BRAKE MECHANISM ASSEMBLY	251A1911	9	Jul 01/2009
27-67-11	RATIO CHANGER ASSEMBLY	65-46370	25	Nov 01/2008
27-80-01	LEADING EDGE FLAP ACTUATOR ASSEMBLY	65-44550	34	Jul 01/2007
27-80-01	LEADING EDGE FLAP ACTUATOR ASSEMBLY	65-44551	34	Jul 01/2007
27-80-11	LEADING EDGE SLAT ACTUATOR ASSEMBLY	65-44650	51	Nov 01/2007
27-80-11	LEADING EDGE SLAT ACTUATOR ASSEMBLY	65-44651	51	Nov 01/2007
27-80-11	LEADING EDGE SLAT ACTUATOR ASSEMBLY -3, -4, -5, -6, -10, -11, -12, -13, -15, -16, -17, -18, -19, -20, -21, -22, -23, -25, -33, -34, -35, -36, -37, -38, -39, -40, -41, -42, -43, -44	65-44725	51	Nov 01/2007
I 27-81-33	AUTO SLAT CONTROL VALVE ASSEMBLY	65C26869	12	Jul 01/2009
I 27-81-33	AUTO SLAT CONTROL VALVE ASSEMBLY	65C26870	12	Jul 01/2009
I 27-81-47	LEADING EDGE SLAT HYDRAULIC ACTUATOR ASSEMBLY -45, -47, -48, -50, -52, -54, -55, -57, -58, -59, -60, -61, -62, -63, -64, -65, -76, -77, -79, -85, -86, -87, -88, -89, -90, -91, -92, -93, -94, -95, -96, -97, -98, -99, -101, -102, -103, -104, -105	65-44725	43	Jul 01/2009
I 27-81-47	LEADING EDGE SLAT HYDRAULIC ACTUATOR ASSEMBLY	65-44760	43	Jul 01/2009



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
I 27-81-47	LEADING EDGE SLAT HYDRAULIC ACTUATOR ASSEMBLY	65C36408	43	Jul 01/2009
I 27-81-47	LEADING EDGE SLAT HYDRAULIC ACTUATOR ASSEMBLY	65C38058	43	Jul 01/2009
I 27-81-47	LEADING EDGE SLAT HYDRAULIC ACTUATOR ASSEMBLY	65C38059	43	Jul 01/2009
I 27-81-47	LEADING EDGE SLAT HYDRAULIC ACTUATOR ASSEMBLY	69-35852	43	Jul 01/2009
I 27-81-47	LEADING EDGE SLAT HYDRAULIC ACTUATOR ASSEMBLY	69-35879	43	Jul 01/2009
I 27-81-52	LE AUXILIARY SLAT TRACK ASSEMBLY	65-52144	8	Jul 01/2009
I 27-81-52	LE AUXILIARY SLAT TRACK ASSEMBLY	65-52145	8	Jul 01/2009
I 27-81-52	LE AUXILIARY SLAT TRACK ASSEMBLY	65-52146	8	Jul 01/2009
I 27-81-52	LE AUXILIARY SLAT TRACK ASSEMBLY	65-67173	8	Jul 01/2009
I 27-81-52	LE AUXILIARY SLAT TRACK ASSEMBLY	65-67174	8	Jul 01/2009
I 27-81-52	LE AUXILIARY SLAT TRACK ASSEMBLY	65-67175	8	Jul 01/2009
I 27-81-52	LE AUXILIARY SLAT TRACK ASSEMBLY	65-68243	8	Jul 01/2009
I 27-81-52	LE AUXILIARY SLAT TRACK ASSEMBLY	65-68275	8	Jul 01/2009
I 27-81-52	LE AUXILIARY SLAT TRACK ASSEMBLY	65-68276	8	Jul 01/2009
I 27-81-52	LE AUXILIARY SLAT TRACK ASSEMBLY	65-80984	8	Jul 01/2009
I 27-81-52	LE AUXILIARY SLAT TRACK ASSEMBLY	65-80990	8	Jul 01/2009
I 28-00-10	REPAIR OF ALUMINUM FUEL TUBES		8	Jul 01/2009
I 28-11-07	FUEL TANK ACCESS DOOR ASSEMBLY	110U6011	20	Jul 01/2009
I 28-11-07	FUEL TANK ACCESS DOOR ASSEMBLY	110U6012	20	Jul 01/2009
I 28-11-07	FUEL TANK ACCESS DOOR ASSEMBLY	110U6021	20	Jul 01/2009
I 28-11-07	FUEL TANK ACCESS DOOR ASSEMBLY	110U6022	20	Jul 01/2009
I 28-11-07	FUEL TANK ACCESS DOOR ASSEMBLY	112N6101	20	Jul 01/2009
I 28-11-07	FUEL TANK ACCESS DOOR ASSEMBLY	112N6102	20	Jul 01/2009
I 28-11-07	FUEL TANK ACCESS DOOR ASSEMBLY	112T4607	20	Jul 01/2009
I 28-11-07	FUEL TANK ACCESS DOOR ASSEMBLY	112W6201	20	Jul 01/2009
I 28-11-07	FUEL TANK ACCESS DOOR ASSEMBLY	112W6202	20	Jul 01/2009
I 28-11-07	FUEL TANK ACCESS DOOR ASSEMBLY	112W8201	20	Jul 01/2009

NUMERICAL INDEX/MANUAL

Page 24

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
I 28-11-07	FUEL TANK ACCESS DOOR ASSEMBLY	112W8202	20	Jul 01/2009
I 28-11-07	FUEL TANK ACCESS DOOR ASSEMBLY	342W2801	20	Jul 01/2009
I 28-11-07	FUEL TANK ACCESS DOOR ASSEMBLY	65C33092	20	Jul 01/2009
I 28-11-07	FUEL TANK ACCESS DOOR ASSEMBLY	65C33147	20	Jul 01/2009
28-12-11	CENTER WING TANK SUMP DRAIN ASSEMBLY	65-65382	5	Mar 05/1990
28-23-01	FUEL SYSTEM MODULE ASSEMBLY, P5-2 -9, -13, -15, -17, -18, -22	69-37312	2	Jul 05/1983
28-23-02	FUEL SYSTEM MODULE ASSEMBLY, P5-2 -21, -30	69-37312	3	Mar 05/1986
29-00-01	FIRE RESISTANT HYDRAULIC FLUID		6	Mar 01/1997
29-09-01	HYDRAULIC A AND B SYSTEMS HEAT EXCHANGER COIL ASSEMBLY	65-44571	4	Jun 05/1993
29-09-11	FLIGHT CONTROL MODULAR PACKAGE ASSEMBLY	65-44891	12	Jul 01/2007
29-09-21	HYDRAULIC SWIVEL ASSEMBLY	69-54784	5	Jun 01/1994
29-09-21	HYDRAULIC SWIVEL ASSEMBLY	69-69882	5	Jun 01/1994
I 29-11-16	SYSTEM A HYDRAULIC RESERVOIR ASSEMBLY -19, -20, -22, -23, -24	65-44600	15	Jul 01/2009
I 29-11-16	SYSTEM A HYDRAULIC RESERVOIR ASSEMBLY	65-44601	15	Jul 01/2009
I 29-11-18	SYSTEM A HYDRAULIC RESERVOIR ASSEMBLY -4, -9	276A3100	10	Jul 01/2009
I 29-11-19	SYSTEM B HYDRAULIC RESERVOIR ASSEMBLY -8, -11	276A3100	11	Jul 01/2009
I 29-12-11	SYSTEM B HYDRAULIC RESERVOIR ASSEMBLY	65C26860	18	Jul 01/2009
I 29-12-11	SYSTEM B HYDRAULIC RESERVOIR ASSEMBLY	65C26861	18	Jul 01/2009
29-13-01	SYSTEM A HYDRAULIC MODULAR PACKAGE ASSEMBLY -1, -2, -3, -4, -5, -6, -7, -8, -9, -10, -11, -12, -14, -15, -17, -19	65-17821	19	Dec 05/1993
29-13-01	SYSTEM A HYDRAULIC MODULAR PACKAGE ASSEMBLY	65-17862	19	Dec 05/1993
29-13-01	SYSTEM A HYDRAULIC MODULAR PACKAGE ASSEMBLY -2, -3, -6, -7, -8, -9, -10, -11, -14, -16, -18	65-44580	19	Dec 05/1993

NUMERICAL INDEX/MANUAL

Page 25

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
29-13-02	HYDRAULIC SYSTEM ISOLATION VALVE MODULAR ASSEMBLY	65-44990	4	Sep 01/1997
29-13-02	HYDRAULIC SYSTEM ISOLATION VALVE MODULAR ASSEMBLY	65-44991	4	Sep 01/1997
I 29-13-03	HYDRAULIC SYSTEM A AND B PRESSURE MODULAR ASSEMBLY	276A2003	13	Jul 01/2009
I 29-13-03	HYDRAULIC SYSTEM A AND B PRESSURE MODULAR ASSEMBLY -18, -20, -21	65-17821	13	Jul 01/2009
I 29-13-03	HYDRAULIC SYSTEM A AND B PRESSURE MODULAR ASSEMBLY -15, -17, -19	65-44580	13	Jul 01/2009
I 29-13-03	HYDRAULIC SYSTEM A AND B PRESSURE MODULAR ASSEMBLY	65C26873	13	Jul 01/2009
29-13-21	GROUND SERVICE DISCONNECT MODULAR PACKAGE ASSEMBLY	65-44980	5	Dec 01/1995
29-13-21	GROUND SERVICE DISCONNECT MODULAR PACKAGE ASSEMBLY	65-44981	5	Dec 01/1995
29-13-31	AIR MANIFOLD ASSEMBLY	65-44699	4	Mar 05/1993
I 29-15-01	STANDBY SYSTEM HYDRAULIC RESERVOIR ASSEMBLY -7, -10	276A3100	10	Jul 01/2009
29-16-31	SYSTEM A HYDRAULIC RESERVOIR ASSEMBLY -2, -3, -4, -7, -8, -11, -13, -14, -15, -16, -17	65-44600	8	Nov 01/1999
29-16-31	SYSTEM A HYDRAULIC RESERVOIR ASSEMBLY	65-44676	8	Nov 01/1999
29-23-21	STANDBY SYSTEM MODULAR PACKAGE ASSEMBLY	276A2001	19	Jul 01/2003
29-23-21	STANDBY SYSTEM MODULAR PACKAGE ASSEMBLY	65-44680	19	Jul 01/2003
29-23-21	STANDBY SYSTEM MODULAR PACKAGE ASSEMBLY	65-44681	19	Jul 01/2003
29-23-31	SYSTEM B HYDRAULIC MODULAR PACKAGE ASSEMBLY	65-17822	11	Dec 05/1993
29-23-31	SYSTEM B HYDRAULIC MODULAR PACKAGE ASSEMBLY	65-17851	11	Dec 05/1993
29-23-31	SYSTEM B HYDRAULIC MODULAR PACKAGE ASSEMBLY	65-44590	11	Dec 05/1993

NUMERICAL INDEX/MANUAL

Page 26

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
29-23-31	SYSTEM B HYDRAULIC MODULAR PACKAGE ASSEMBLY	65-73874	11	Dec 05/1993
29-26-01	STANDBY HYDRAULIC SYSTEM RESERVOIR ASSEMBLY	65-44800	9	Sep 01/1995
29-26-01	STANDBY HYDRAULIC SYSTEM RESERVOIR ASSEMBLY	65-44801	9	Sep 01/1995
29-26-11	SYSTEM B HYDRAULIC RESERVOIR ASSEMBLY	65-44700	6	Dec 01/1995
29-26-11	SYSTEM B HYDRAULIC RESERVOIR ASSEMBLY	65-44701	6	Dec 01/1995
30-12-01	ENGINE AND WING ANTI-ICE MODULE ASSEMBLY, P5-11 -2	69-68134	6	Nov 01/2008
I 30-12-02	ENGINE AND WING ANTI-ICE MODULE ASSEMBLY, P5-11	69-37320	6	Nov 01/2008
I 30-12-02	ENGINE AND WING ANTI-ICE MODULE ASSEMBLY, P5-11 -3, -4	69-68134	6	Nov 01/2008
30-46-02	RAIN REPELLENT SYSTEM VISUAL RESERVOIR ASSEMBLY	69-34511	3	May 10/1987
30-46-03	WINDSHIELD WIPER RESISTOR BOX ASSEMBLY	69-44628	4	Mar 01/2005
30-46-03	WINDSHIELD WIPER RESISTOR BOX ASSEMBLY	69-56500	4	Mar 01/2005
31-10-01	INSTRUMENT PANEL ELECTRICAL MODULE GENERAL INFORMATION		8	Jul 01/2000
31-10-05	GENERATOR DRIVE AND STANDBY POWER MODULE ASSEMBLY, P5-5	69-76472	5	Dec 05/1993
31-10-68	WINDOW AND COMBINED PITOT STATIC HEAT MODULE ASSEMBLY, P5-9	65C21465	19	Nov 01/2008
31-13-02	CENTER INSTRUMENT MODULE ASSEMBLY, P2-1	69-68858	3	Nov 01/2008
I 31-24-01	FLIGHT RECORDER AND MACH AIRSPEED TEST MODULE ASSEMBLY, P5-19 -132, -133, -134, -135, -136, -137, -138, -164, -165, -166, -167, -168	69-37325	20	Jul 01/2009
I 31-24-02	FLIGHT RECORDER AND MACH AIRSPEED WARNING TEST MODULE ASSEMBLY, P5-19 -139, -140, -141, -142, -143, -144, -145, -146, -147, -148	69-37325	11	Jul 01/2009



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
I 31-24-03	FLIGHT RECORDER AND MACH AIRSPEED WARNING TEST MODULE ASSEMBLY, P5-19 -149, -151, -152, -153, -154	69-37325	12	Jul 01/2009
I 31-24-04	FLIGHT RECORDER AND MACH AIRSPEED TEST MODULE ASSEMBLY, P5-19 -150, -155, -156, -157, -158, -159, -160, -161, -162, -163	69-37325	11	Jul 01/2009
31-26-01	AURAL WARNING BOX ASSEMBLY	65C21854	28	Jul 01/2008
31-36-01	FLIGHT RECORDER AND MACH AIRSPEED WARNING TEST MODULE ASSEMBLY, P5-19 -14, -17, -20, -24, -25, -26, -27, -28, -29, -33, -35, -36, -37, -38	69-37325	8	Nov 01/2000
31-36-03	DOOR WARNING ANNUNCIATOR MODULE ASSEMBLY, P5-20	69-37326	8	Mar 01/2005
31-36-03	DOOR WARNING ANNUNCIATOR MODULE ASSEMBLY, P5-20	69-77055	8	Mar 01/2005
31-36-04	FLIGHT CONTROLS MODULE ASSEMBLY, P5-3 -32, -35, -36, -37, -38, -39, -40, -41, -44, -46, -48, -49, -50, -51, -58, -61, -62, -63, -64, -67, -68, -69, -70, -74, -78, -86, -87, -88, -89, -90, -91, -92, -93, -94, -95, -96, -97, -98, -102, -400, -409, -429, -430, -431, -432, -433, -434, -435, -436, -437, -438, -439, -440, -441, -442, -443, -444, -445, -446, -447, -448, -449, -450, -451, -452, -453, -454, -455, -456, -457, -458, -459, -460, -461, -462, -463, -464, -529, -530, -531, -532, -533, -534, -535, -536, -537, -538, -539, -540, -541, -542, -543, -544, -545, -546, -547, -548, -549, -550, -551, -552, -553, -554, -555, -556, -557, -558, -559, -560, -561, -562, -563, -564	69-37313	43	Nov 01/2008
31-36-08	FLIGHT RECORDER AND MACH AIRSPEED WARNING TEST MODULE ASSEMBLY, P5-19 -39, -46, -49, -51, -52, -53, -62	69-37325	13	Nov 01/2002
31-36-08	FLIGHT RECORDER AND MACH AIRSPEED WARNING TEST MODULE ASSEMBLY, P5-19	69-71799	13	Nov 01/2002
31-36-13	CENTER INSTRUMENT MODULE ASSEMBLY, P2-2	65C14964	6	Nov 01/2008
31-36-13	CENTER INSTRUMENT MODULE ASSEMBLY, P2-2 -12	69-73033	6	Nov 01/2008
31-36-21	AUTO-THROTTLE MODULE ASSEMBLY, P9-11	69-37323	1	Jul 05/1977

NUMERICAL INDEX/MANUAL

Page 28

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
31-36-25	FIRST OBSERVER'S MIKE SELECTOR MODULE ASSEMBLY, P10-2	69-37333	0	Mar 10/1970
31-36-30	AC SYSTEM GENERATOR AND APU MODULE ASSEMBLY, P5-4 -12, -13, -15, -16, -18, -19, -20, -22, -23, -24, -28, -30, -31, -35, -38, -40, -41, -42, -43, -44, -49, -50, -53, -54	69-37314	32	Nov 01/2005
31-36-45	INSTRUMENT SWITCHING MODULE ASSEMBLY, P5-32	69-37367	1	Dec 05/1987
31-36-48	ANNUNCIATOR LIGHTS MODULE ASSEMBLY, M238	65-55896	0	May 15/1969
31-36-49	DIODE CARD ASSEMBLY	69-42999	1	Mar 10/1970
31-36-51	AIRSPEED WARNING SWITCH MODE MODULE ASSEMBLY, P1-6	69-37347	0	Feb 15/1969
31-36-68	CENTER INSTRUMENT MODULE ASSEMBLY, P2-2 -7, -9, -32	69-73033	4	Nov 01/2008
31-36-75	FLIGHT INSTRUMENT MODULE ASSEMBLY, P1-3 ,P2-1 ,P3-1 ,P3-3	65-81643	1	Jun 10/1972
31-36-81	FLIGHT CONTROLS MODULE ASSEMBLY, P5-3 -99, -104, -106, -108, -401, -403, -405, -410	69-37313	30	Jul 01/2009
31-36-82	FLIGHT INSTRUMENT MODULE ASSEMBLY, P1-3, P3-3	65-81684	0	Mar 25/1973
31-36-86	FLIGHT INSTRUMENT MODULE ASSEMBLY	65-86054	1	Mar 25/1975
31-36-87	FLIGHT INSTRUMENT MODULE ASSEMBLY, P1-1, P1-3, P2-1, P3-1, P3-3	65-87833	0	Jun 25/1974
31-36-88	CENTER INSTRUMENT MODULE ASSEMBLY, P2-2 -3, -4, -8, -13, -14, -33, -34	69-73033	17	Nov 01/2008
31-36-90	FLIGHT RECORDER AND MACH AIRSPEED WARNING TEST MODULE ASSEMBLY, P5-19 -43, -65, -72, -74, -79, -95, -97, -99, -105, -108, -109	69-37325	21	Mar 01/2008
31-36-90	FLIGHT RECORDER AND MACH AIRSPEED WARNING TEST MODULE ASSEMBLY, P5-19 -1	69-78547	21	Mar 01/2008



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
I 31-36-98	FLIGHT RECORDER AND MACH AIRSPEED TEST MODULE ASSEMBLY, P5-19 -111, -112, -113, -114, -115, -116, -117, -118, -119, -120, -121, -122, -123, -125, -126, -127, -128, -129, -130, -131	69-37325	23	Jul 01/2009
I 31-36-98	FLIGHT RECORDER AND MACH AIRSPEED TEST MODULE ASSEMBLY, P5-19 -2	69-78547	23	Jul 01/2009
I 31-37-04	FLIGHT CONTROLS MODULE ASSEMBLY, P5-3 -105, -107, -109, -110, -111, -112, -113, -114, -115, -116, -117, -118, -119, -120, -121, -122, -123, -124, -125, -126, -300, -301, -302, -402, -404, -406, -407, -408, -411, -412, -413, -414, -415, -416, -417, -418, -419, -420, -421, -422, -423, -424, -425, -426, -427, -428, -511, -512, -513, -514, -515, -516, -517, -518, -519, -520, -521, -522, -523, -524, -525, -526, -527, -528	69-37313	27	Jul 01/2009
I 31-37-30	AC SYSTEM GENERATOR AND APU MODULE ASSEMBLY, P5-4 -45, -46, -47, -48, -55, -56, -57, -58, -59, -60, -61, -62, -63, -64, -65, -66, -67, -68, -71, -72, -81, -82	69-37314	24	Jul 01/2009
I 32-00-03	LANDING GEAR PARTS LUBRICATION FITTING REPLACEMENT		15	Jul 01/2009
I 32-00-05	REPAIR OF HIGH-STRENGTH STEEL LANDING GEAR PARTS		9	Jul 01/2009
I 32-01-03	NOSE GEAR MINOR COMPONENTS	65-46204	63	Jul 01/2009
I 32-01-03	NOSE GEAR MINOR COMPONENTS	65-46205	63	Jul 01/2009
I 32-01-03	NOSE GEAR MINOR COMPONENTS	65-46230	63	Jul 01/2009
I 32-01-03	NOSE GEAR MINOR COMPONENTS	65-46232	63	Jul 01/2009
I 32-01-03	NOSE GEAR MINOR COMPONENTS	65-80051	63	Jul 01/2009
I 32-01-03	NOSE GEAR MINOR COMPONENTS	65-84163	63	Jul 01/2009
I 32-01-03	NOSE GEAR MINOR COMPONENTS	65C27360	63	Jul 01/2009
I 32-01-03	NOSE GEAR MINOR COMPONENTS	65C27531	63	Jul 01/2009
I 32-01-03	NOSE GEAR MINOR COMPONENTS	65C31786	63	Jul 01/2009
I 32-01-03	NOSE GEAR MINOR COMPONENTS	69-35385	63	Jul 01/2009
I 32-01-03	NOSE GEAR MINOR COMPONENTS	69-35391	63	Jul 01/2009

NUMERICAL INDEX/MANUAL

Page 30

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
I 32-01-03	NOSE GEAR MINOR COMPONENTS	69-35394	63	Jul 01/2009
I 32-01-03	NOSE GEAR MINOR COMPONENTS	69-35396	63	Jul 01/2009
I 32-01-03	NOSE GEAR MINOR COMPONENTS	69-38709	63	Jul 01/2009
I 32-01-03	NOSE GEAR MINOR COMPONENTS	69-38710	63	Jul 01/2009
I 32-01-03	NOSE GEAR MINOR COMPONENTS	69-53800	63	Jul 01/2009
I 32-01-03	NOSE GEAR MINOR COMPONENTS	69-67545	63	Jul 01/2009
I 32-01-03	NOSE GEAR MINOR COMPONENTS	69-68115	63	Jul 01/2009
I 32-01-03	NOSE GEAR MINOR COMPONENTS	69-73677	63	Jul 01/2009
32-09-11	LANDING GEAR MODULAR PACKAGE ASSEMBLY	65-44691	11	Mar 01/2003
I 32-11-09	MAIN LANDING GEAR INSTALLATION COMPONENTS	161A0101	13	Jul 01/2009
I 32-11-09	MAIN LANDING GEAR INSTALLATION COMPONENTS	161A1191	13	Jul 01/2009
I 32-11-09	MAIN LANDING GEAR INSTALLATION COMPONENTS	161A1192	13	Jul 01/2009
I 32-11-09	MAIN LANDING GEAR INSTALLATION COMPONENTS	161A2125	13	Jul 01/2009
I 32-11-09	MAIN LANDING GEAR INSTALLATION COMPONENTS	161A2318	13	Jul 01/2009
I 32-11-09	MAIN LANDING GEAR INSTALLATION COMPONENTS	161A2330	13	Jul 01/2009
I 32-11-09	MAIN LANDING GEAR INSTALLATION COMPONENTS	161A2331	13	Jul 01/2009
I 32-11-09	MAIN LANDING GEAR INSTALLATION COMPONENTS	161A2332	13	Jul 01/2009
I 32-11-09	MAIN LANDING GEAR INSTALLATION COMPONENTS	161A2333	13	Jul 01/2009
I 32-11-11	MAIN GEAR SHOCK STRUT ASSEMBLY	65-46100	100	Jul 01/2009
I 32-11-12	MAIN LANDING GEAR COMPONENT ASSEMBLY	161A1100	24	Jul 01/2009
I 32-11-13	MAIN LANDING GEAR SIDE STRUT ASSEMBLY	161A2100	18	Jul 01/2009
I 32-11-16	MAIN GEAR CUSTOMER END ITEM	001A6103	14	Jul 01/2009



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
32-11-17	MAIN LANDING GEAR WHEEL AND TIRE INSTALLATION COMPONENTS -11, -12, -41, -42, -101, -102, -103, -104, -105, -106, -107, -108, -109, -110, -301, -302, -303, -304, -701, -702, -703, -704, -705, -706, -1001, -1002, -1003, -1004, -1005, -1006, -1007, -1008, -1009, -1010, -1011, -1012	277A6000	11	Jul 01/2009
32-13-23	MAIN LANDING GEAR DOOR COMPONENTS	113A8100	12	Jul 01/2009
32-13-23	MAIN LANDING GEAR DOOR COMPONENTS	113A8200	12	Jul 01/2009
32-13-23	MAIN LANDING GEAR DOOR COMPONENTS	113A8331	12	Jul 01/2009
32-13-23	MAIN LANDING GEAR DOOR COMPONENTS	113A8500	12	Jul 01/2009
32-13-23	MAIN LANDING GEAR DOOR COMPONENTS	113A8600	12	Jul 01/2009
32-16-01	MAIN GEAR ASSEMBLY -11, -12, -13, -14, -15, -16, -31, -32, -33, -34, -35, -36, -37, -38, -39, -40, -41, -42, -65, -66, -81, -82, -87, -88, -97, -98, -109, -110, -115, -116, -121, -122, -125, -126, -127, -128	65-73761	93	Jul 01/2009
32-16-02	MAIN GEAR INNER DOOR ASSEMBLY	65-52201	5	Jul 01/2004
32-16-02	MAIN GEAR INNER DOOR ASSEMBLY	65-63416	5	Jul 01/2004
32-16-03	MAIN LANDING GEAR CENTER DOOR ASSEMBLY	65-52202	5	Mar 01/2006
32-16-04	MAIN GEAR OUTBOARD DOOR ASSEMBLY	65-67194	4	Mar 01/2009
32-16-11	MAIN GEAR BUILDUP		83	Nov 01/2008
32-16-12	MAIN LANDING GEAR INNER DOOR ASSEMBLY	65C28178	11	Jul 01/2009
32-16-13	MAIN LANDING GEAR CENTER DOOR ASSEMBLY	65C28176	15	Jul 01/2009
32-16-14	MAIN LANDING GEAR OUTBOARD DOOR ASSEMBLY	65C28167	11	Jul 01/2009
32-16-23	MAIN LANDING GEAR CENTER DOOR ASSEMBLY	65C33219	10	Jul 01/2009
32-16-24	MAIN LANDING GEAR OUTBD DOOR ASSEMBLY	65C33221	11	Jul 01/2009
32-16-24	MAIN LANDING GEAR OUTBD DOOR ASSEMBLY	65C33730	11	Jul 01/2009
32-16-25	MAIN LANDING GEAR DOOR INSTALLATION COMPONENTS	65-63415	7	Jul 01/2009
32-16-25	MAIN LANDING GEAR DOOR INSTALLATION COMPONENTS	69-42376	7	Jul 01/2009
32-16-25	MAIN LANDING GEAR DOOR INSTALLATION COMPONENTS	69-42380	7	Jul 01/2009

NUMERICAL INDEX/MANUAL

Page 32

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
I 32-16-25	MAIN LANDING GEAR DOOR INSTALLATION COMPONENTS	69-42388	7	Jul 01/2009
I 32-16-25	MAIN LANDING GEAR DOOR INSTALLATION COMPONENTS	69-42394	7	Jul 01/2009
I 32-16-25	MAIN LANDING GEAR DOOR INSTALLATION COMPONENTS	69-58822	7	Jul 01/2009
I 32-16-31	MAIN GEAR MINOR COMPONENTS	65-46108	72	Jul 01/2009
I 32-16-31	MAIN GEAR MINOR COMPONENTS	65-46112	72	Jul 01/2009
I 32-16-31	MAIN GEAR MINOR COMPONENTS	65-46146	72	Jul 01/2009
I 32-16-31	MAIN GEAR MINOR COMPONENTS	65-84161	72	Jul 01/2009
I 32-16-31	MAIN GEAR MINOR COMPONENTS	65C31332	72	Jul 01/2009
I 32-16-31	MAIN GEAR MINOR COMPONENTS	65C32649	72	Jul 01/2009
I 32-16-31	MAIN GEAR MINOR COMPONENTS	65C33723	72	Jul 01/2009
I 32-16-31	MAIN GEAR MINOR COMPONENTS	65C36459	72	Jul 01/2009
I 32-16-31	MAIN GEAR MINOR COMPONENTS	69-37876	72	Jul 01/2009
I 32-16-31	MAIN GEAR MINOR COMPONENTS	69-38991	72	Jul 01/2009
I 32-16-31	MAIN GEAR MINOR COMPONENTS	69-38993	72	Jul 01/2009
I 32-16-31	MAIN GEAR MINOR COMPONENTS	69-39464	72	Jul 01/2009
I 32-16-31	MAIN GEAR MINOR COMPONENTS	69-41625	72	Jul 01/2009
I 32-16-31	MAIN GEAR MINOR COMPONENTS	69-42196	72	Jul 01/2009
I 32-16-31	MAIN GEAR MINOR COMPONENTS	69-42199	72	Jul 01/2009
I 32-16-31	MAIN GEAR MINOR COMPONENTS	69-51838	72	Jul 01/2009
I 32-16-31	MAIN GEAR MINOR COMPONENTS	69-53869	72	Jul 01/2009
I 32-16-31	MAIN GEAR MINOR COMPONENTS	69-54975	72	Jul 01/2009
I 32-16-31	MAIN GEAR MINOR COMPONENTS	69-54978	72	Jul 01/2009
I 32-16-31	MAIN GEAR MINOR COMPONENTS	69-58854	72	Jul 01/2009
I 32-16-31	MAIN GEAR MINOR COMPONENTS	69-58871	72	Jul 01/2009
I 32-16-31	MAIN GEAR MINOR COMPONENTS	69-58873	72	Jul 01/2009
I 32-16-31	MAIN GEAR MINOR COMPONENTS	69-61946	72	Jul 01/2009
I 32-16-31	MAIN GEAR MINOR COMPONENTS	69-68151	72	Jul 01/2009
I 32-16-31	MAIN GEAR MINOR COMPONENTS	69-73176	72	Jul 01/2009



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
I 32-16-31	MAIN GEAR MINOR COMPONENTS	69-77044	72	Jul 01/2009
I 32-16-31	MAIN GEAR MINOR COMPONENTS	69-77045	72	Jul 01/2009
I 32-16-31	MAIN GEAR MINOR COMPONENTS	69-77063	72	Jul 01/2009
I 32-16-31	MAIN GEAR MINOR COMPONENTS	69-77524	72	Jul 01/2009
32-17-01	MAIN GEAR UPLOCK ASSEMBLY	65-46141	57	Nov 01/2008
32-17-11	MAIN GEAR SIDE STRUT ASSEMBLY -21, -22, -23, -24, -25, -26, -43, -44, -45, -46, -47, -48, -49, -50, -55, -56, -77, -78, -85, -86, -93, -94, -95, -96, -103, -105, -106, -111, -112, -113, -114, -123, -124	65-73761	77	Mar 01/2009
I 32-21-07	NOSE LANDING GEAR INSTALLATION COMPONENTS	162A0301	12	Jul 01/2009
I 32-21-07	NOSE LANDING GEAR INSTALLATION COMPONENTS	162A0302	12	Jul 01/2009
I 32-21-07	NOSE LANDING GEAR INSTALLATION COMPONENTS	162A2118	12	Jul 01/2009
I 32-21-07	NOSE LANDING GEAR INSTALLATION COMPONENTS	162A2301	12	Jul 01/2009
I 32-21-07	NOSE LANDING GEAR INSTALLATION COMPONENTS	162A2302	12	Jul 01/2009
32-21-11	NOSE GEAR SHOCK STRUT ASSEMBLY -16, -17, -19, -21, -22, -25, -26, -27, -28, -29, -30, -32, -33, -34, -35, -36, -37, -38, -39, -40, -41, -42, -43, -46, -47, -48, -49, -50, -51, -52, -53, -55, -56, -63, -64, -65, -66, -67	65-46200	79	Mar 01/2009
I 32-21-12	NOSE LANDING GEAR COMPONENT ASSEMBLY	162A1100	28	Jul 01/2009
I 32-21-16	NOSE LANDING GEAR CUSTOMER END ITEM	001A6200	15	Jul 01/2009
I 32-21-17	NOSE LANDING GEAR WHEEL AND TIRE INSTALLATION COMPONENTS -31, -401, -402, -403, -404, -405, -406, -801, -802, -803, -804, -805	277A6000	12	Jul 01/2009
I 32-21-22	NOSE LANDING GEAR DRAG STRUT ASSEMBLY	162A2100	18	Jul 01/2009
I 32-21-38	NOSE GEAR BUILDUP		61	Jul 01/2009
I 32-21-48	NOSE GEAR ASSEMBLY -21, -25, -26, -27, -28	65-73762	63	Jul 01/2009



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
I 32-21-58	NOSE GEAR SHOCK STRUT ASSEMBLY -60, -61, -62, -68, -69, -74, -76, -77, -78, -80, -81, -82, -83	65-46200	69	Jul 01/2009
I 32-22-11	NOSE LANDING GEAR DOOR MECHANISM ASSEMBLY	162A3100	11	Jul 01/2009
32-22-31	NOSE GEAR SPRING CARTRIDGE ASSEMBLY	65-54220	3	Mar 01/2000
32-22-32	NOSE GEAR SPRING CARTRIDGE ASSEMBLY	65-80930	2	Nov 01/2002
I 32-22-35	NOSE WHEEL WELL DOOR ASSEMBLY	65-50520	17	Jul 01/2009
I 32-22-35	NOSE WHEEL WELL DOOR ASSEMBLY	65-76642	17	Jul 01/2009
I 32-22-35	NOSE WHEEL WELL DOOR ASSEMBLY	65C28111	17	Jul 01/2009
I 32-22-37	NOSE WHEEL WELL DOOR ASSEMBLY	141A6902	12	Jul 01/2009
32-26-01	NOSE GEAR ASSEMBLY -4, -5, -7, -9, -18	65-73762	69	Nov 01/2007
32-26-11	NOSE GEAR BUILDUP		60	Mar 01/2009
32-26-15	NOSE GEAR GRAVEL DEFLECTOR ASSEMBLY	65-44560	10	Nov 01/2004
32-26-15	NOSE GEAR GRAVEL DEFLECTOR ASSEMBLY	65-86747	10	Nov 01/2004
32-26-15	NOSE GEAR GRAVEL DEFLECTOR ASSEMBLY	65-86762	10	Nov 01/2004
32-26-16	NOSE GEAR GRAVEL DEFLECTOR ASSEMBLY -26	65-76611	9	Nov 01/2005
32-26-17	NOSE GEAR GRAVEL DEFLECTOR ASSEMBLY -28, -43	65-76611	11	Nov 01/2008
32-26-18	GRAVEL DEFLECTOR ACTUATOR ASSEMBLY	65-44660	3	Nov 01/2004
I 32-30-11	MAIN GEAR ACTUATOR ASSEMBLY	65-44910	50	Jul 01/2009
I 32-30-11	MAIN GEAR ACTUATOR ASSEMBLY -7, -8, -9, -11, -12, -15, -16, -21, -22, -28, -29, -30, -31, -33, -34, -36, -41	65-44925	50	Jul 01/2009
I 32-30-11	MAIN GEAR ACTUATOR ASSEMBLY	69-77496	50	Jul 01/2009
I 32-30-13	MAIN LANDING GEAR RETRACT ACTUATOR ASSEMBLY -27, -32, -35, -42	65-44925	30	Jul 01/2009
I 32-30-13	MAIN LANDING GEAR RETRACT ACTUATOR ASSEMBLY	65C32956	30	Jul 01/2009
32-30-21	MAIN GEAR LOCK ACTUATOR ASSEMBLY	65-44810	16	Mar 01/2009
32-30-21	MAIN GEAR LOCK ACTUATOR ASSEMBLY	65-44825	16	Mar 01/2009

NUMERICAL INDEX/MANUAL

Page 35

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
32-30-21	MAIN GEAR LOCK ACTUATOR ASSEMBLY	69-35500	16	Mar 01/2009
32-30-31	LANDING GEAR LOCK ACTUATOR ASSEMBLY	65-17819	20	Jul 01/2002
32-30-31	LANDING GEAR LOCK ACTUATOR ASSEMBLY	65-17882	20	Jul 01/2002
32-30-31	LANDING GEAR LOCK ACTUATOR ASSEMBLY -4, -6, -10, -14	65-44625	20	Jul 01/2002
I 32-30-33	NOSE GEAR LOCK ACTUATOR ASSEMBLY -18	65-44625	20	Jul 01/2009
I 32-30-33	NOSE GEAR LOCK ACTUATOR ASSEMBLY	65C31099	20	Jul 01/2009
32-30-41	NOSE GEAR HYDRAULIC ACTUATOR ASSEMBLY	65-44610	17	Mar 01/2007
32-30-41	NOSE GEAR HYDRAULIC ACTUATOR ASSEMBLY -5, -8, -9, -11	65-44625	17	Mar 01/2007
32-30-61	MAIN GEAR DAMPER ASSEMBLY	65-44504	37	Jul 01/2006
32-30-61	MAIN GEAR DAMPER ASSEMBLY	65-44771	37	Jul 01/2006
32-30-61	MAIN GEAR DAMPER ASSEMBLY	65-44898	37	Jul 01/2006
I 32-30-62	MAIN GEAR SHIMMY DAMPER ASSEMBLY	273A3610	14	Jul 01/2009
I 32-32-27	MAIN LANDING GEAR WALKING BEAM COMPONENTS	161A7000	10	Jul 01/2009
I 32-32-27	MAIN LANDING GEAR WALKING BEAM COMPONENTS	161A7100	10	Jul 01/2009
I 32-32-27	MAIN LANDING GEAR WALKING BEAM COMPONENTS	161A7119	10	Jul 01/2009
I 32-32-27	MAIN LANDING GEAR WALKING BEAM COMPONENTS	161A7301	10	Jul 01/2009
I 32-32-27	MAIN LANDING GEAR WALKING BEAM COMPONENTS	161A7303	10	Jul 01/2009
I 32-32-27	MAIN LANDING GEAR WALKING BEAM COMPONENTS	161A7304	10	Jul 01/2009
I 32-32-34	MAIN LANDING GEAR UPLOCK ASSEMBLY	161A6100	13	Jul 01/2009
I 32-32-37	MAIN LANDING GEAR RETRACT ACTUATOR ASSEMBLY	273A2101	16	Jul 01/2009
I 32-32-42	MAIN LANDING GEAR UPLOCK ACTUATOR ASSEMBLY	273A2501	13	Jul 01/2009
I 32-32-52	MAIN LANDING GEAR DOWNLOCK ACTUATOR ASSEMBLY	273A2201	14	Jul 01/2009

NUMERICAL INDEX/MANUAL

Page 36

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
I 32-33-12	NOSE LANDING GEAR RETRACT ACTUATOR ASSEMBLY	273A1101	14	Jul 01/2009
I 32-33-22	NOSE LANDING GEAR LOCK ACTUATOR ASSEMBLY	273A1201	13	Jul 01/2009
I 32-33-23	NOSE GEAR LOCK VALVE MANIFOLD ASSEMBLY	273A1401	8	Jul 01/2009
32-34-02	LANDING GEAR CONTROL LEVER ASSEMBLY	65-1754	3	Jul 01/2004
32-34-02	LANDING GEAR CONTROL LEVER ASSEMBLY	65-54221	3	Jul 01/2004
32-34-08	LANDING GEAR CONTROL LEVER ASSEMBLY	65-54219	11	Mar 01/2009
32-34-10	MANUAL NOSE GEAR EXTENSION MECHANISM ASSEMBLY	65-46329	2	Jun 01/1994
32-34-13	NOSE GEAR LOCK LINK ASSEMBLY	65-46245	27	Nov 01/2007
I 32-34-17	MLG MANUAL EXTENSION UPLOCK RELEASE MECHANISM ASSEMBLY	65-67905	9	Jul 01/2009
I 32-34-24	MAIN LANDING GEAR MANUAL RELEASE MECHANISM ASSEMBLY	273A4701	10	Jul 01/2009
I 32-35-05	NOSE LANDING GEAR MANUAL RELEASE RELEASE ASSEMBLY	273A4510	10	Jul 01/2009
32-40-01	LANDING GEAR HYDRAULIC TRANSFER CYLINDER ASSEMBLY	273A1301	20	Mar 01/2003
32-40-01	LANDING GEAR HYDRAULIC TRANSFER CYLINDER ASSEMBLY	273A2310	20	Mar 01/2003
32-40-01	LANDING GEAR HYDRAULIC TRANSFER CYLINDER ASSEMBLY	65-17832	20	Mar 01/2003
32-40-01	LANDING GEAR HYDRAULIC TRANSFER CYLINDER ASSEMBLY	65-44690	20	Mar 01/2003
32-40-01	LANDING GEAR HYDRAULIC TRANSFER CYLINDER ASSEMBLY	65-44897	20	Mar 01/2003
32-40-01	LANDING GEAR HYDRAULIC TRANSFER CYLINDER ASSEMBLY	69-14106	20	Mar 01/2003
32-40-01	LANDING GEAR HYDRAULIC TRANSFER CYLINDER ASSEMBLY	69-54600	20	Mar 01/2003
I 32-41-12	BRAKE ACCUMULATOR ISOLATION VALVE ASSEMBLY/ALTERNATE BRAKE SELECTOR VALVE ASSEMBLY	274N1003	22	Jul 01/2009



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
I 32-41-12	BRAKE ACCUMULATOR ISOLATION VALVE ASSEMBLY/ALTERNATE BRAKE SELECTOR VALVE ASSEMBLY	274N1028	22	Jul 01/2009
I 32-41-12	BRAKE ACCUMULATOR ISOLATION VALVE ASSEMBLY/ALTERNATE BRAKE SELECTOR VALVE ASSEMBLY	274N1051	22	Jul 01/2009
I 32-41-12	BRAKE ACCUMULATOR ISOLATION VALVE ASSEMBLY/ALTERNATE BRAKE SELECTOR VALVE ASSEMBLY	274U0003	22	Jul 01/2009
I 32-41-12	BRAKE ACCUMULATOR ISOLATION VALVE ASSEMBLY/ALTERNATE BRAKE SELECTOR VALVE ASSEMBLY	65C26816	22	Jul 01/2009
I 32-41-16	LANDING GEAR BRAKE METERING QUADRANT AND SHAFT ASSEMBLY	274A2813	9	Jul 01/2009
I 32-41-20	BRAKE METERING VALVE CONTROL INSTALLATION COMPONENTS	65C25416	7	Jul 01/2009
I 32-41-20	BRAKE METERING VALVE CONTROL INSTALLATION COMPONENTS	65C25442	7	Jul 01/2009
I 32-41-20	BRAKE METERING VALVE CONTROL INSTALLATION COMPONENTS	65C25479	7	Jul 01/2009
I 32-41-20	BRAKE METERING VALVE CONTROL INSTALLATION COMPONENTS	65C25576	7	Jul 01/2009
I 32-41-20	BRAKE METERING VALVE CONTROL INSTALLATION COMPONENTS	69-74714	7	Jul 01/2009
32-43-21	FEEL ACTUATOR/BRAKE METERING VALVE ASSEMBLY	65-44931	19	Nov 01/2000
32-43-22	SHUTOFF VALVE MODULAR PACKAGE ASSEMBLY	65-44581	6	Mar 05/1991
32-43-22	SHUTOFF VALVE MODULAR PACKAGE ASSEMBLY	65-44896	6	Mar 05/1991
I 32-43-23	BRAKE FEEL ACTUATOR ASSEMBLY	65C26859	11	Jul 01/2009
32-47-01	BRAKE PEDAL BUS ASSEMBLY	65-46375	4	Mar 01/2003
32-50-11	NOSE WHEEL STEERING CYLINDER ASSEMBLY	65-44710	32	Nov 01/2007
I 32-50-12	NOSE WHEEL STEERING METERING VALVE COVER ASSEMBLY	65-44713	7	Jul 01/2009
I 32-51-33	RUDDER PEDAL STEERING ASSEMBLY	275A5104	10	Jul 01/2009



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
I 32-51-43	STEERING DEPRESSURIZATION VALVE ASSEMBLY	65-44975	13	Jul 01/2009
I 32-51-43	STEERING DEPRESSURIZATION VALVE ASSEMBLY	65C26833	13	Jul 01/2009
I 32-51-43	STEERING DEPRESSURIZATION VALVE ASSEMBLY	65C26885	13	Jul 01/2009
I 32-51-52	NOSE LANDING GEAR STEERING ACTUATOR ASSEMBLY	275A1101	20	Jul 01/2009
32-57-01	RUDDER PEDAL STEERING SYSTEM ASSEMBLY	65-26174	9	Jul 01/2005
32-66-40	LANDING GEAR ACCESSORY UNIT ASSEMBLY, M338 -21, -23, -25, -30, -31, -44, -51, -54, -73, -74, -75, -76, -77, -84, -85, -117, -118, -119, -120, -121, -135, -137, -144, -145, -146, -147, -148, -151	65-52811	18	Sep 01/1997
32-66-43	LANDING GEAR ACCESSORY UNIT ASSEMBLY, M338 -100, -101, -139, -166, -167	65-52811	6	Jun 05/1992
32-66-43	LANDING GEAR ACCESSORY UNIT ASSEMBLY, M338	69-62234	6	Jun 05/1992
32-66-44	LANDING GEAR ACCESSORY UNIT ASSEMBLY, M338 -32, -34, -40, -42, -49, -58, -60, -62, -64, -66, -78, -82, -83, -89, -96, -109, -111, -113, -115, -122, -123, -126, -127, -133, -140, -149, -155, -162, -175, -176, -183, -184	65-52811	36	Jul 01/2005
32-66-45	LANDING GEAR ACCESSORY UNIT ASSEMBLY, M338 -50, -70, -71, -90, -98, -99, -103, -134, -142, -143, -156, -164, -165, -169, -179	65-52811	23	Jul 01/2008
I 32-66-47	LANDING GEAR ACCESSORY UNIT ASSEMBLY, M338 -181	65-52811	12	Jul 01/2009
I 32-66-50	LANDING GEAR ACCESSORY UNIT ASSEMBLY, M338 -187	65-52811	9	Jul 01/2009
I 32-71-12	TAILSKID ACTUATOR ASSEMBLY	273T4702	7	Jul 01/2009
I 32-71-15	TAIL SKID INSTALLATION	148A7201	8	Jul 01/2009



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
I 32-71-16	TAIL SKID INSTALLATION	163A0001	4	Jul 01/2009
33-10-04	LIGHTING CONTROL MODULE ASSEMBLY, P3-4	69-37351	0	Mar 10/1970
33-10-07	MASTER CAUTION DISPLAY MODULE ASSEMBLY, P5-64	69-72631	1	Jan 05/1983
I 33-11-01	CONTROL STAND PANEL LIGHTS SWITCH MODULE ASSEMBLY	65C25449	6	Jul 01/2009
I 33-20-20	GALLEY FLUORESCENT LIGHT ASSEMBLY	65-58220	9	Jul 01/2009
I 33-40-02	AUTOFLIGHT CONTROL SYSTEM (AFCS) FLOODLIGHT CONTROL MODULE ASSEMBLY	65C37270	14	Jul 01/2009
I 33-40-02	AUTOFLIGHT CONTROL SYSTEM (AFCS) FLOODLIGHT CONTROL MODULE ASSEMBLY	69-77729	14	Jul 01/2009
34-21-06	POWER INTERRUPTION FLAG DELAY, M1240 AND DFDR/QAR POWER SWITCH MODULE ASSEMBLY, M1079	65-89347	3	Dec 05/1984
34-41-01	RADAR ROTATION MODULE ASSEMBLY, P3-6	69-37356	0	Aug 15/1969
I 35-21-02	OXYGEN BOX ASSEMBLY -25SP, -26SP, -27SP, -28SP, -29SP, -30SP, -31SP, -32SP, -33SP, -34SP, -35SP, -36SP, -39SP, -40SP, -41SP, -42SP, -43SP, -44SP, -45SP, -46SP, -57SP, -58SP, -61SP, -62SP, -63SP, -64SP, -65SP, -66SP, -71SP, -72SP, -73SP, -74SP, -75SP, -76SP, -77SP, -78SP, -79SP, -80SP, -81SP, -82SP, -85SP, -86SP, -87SP, -88SP, -90SP, -93SP, -94SP, -96SP, -98SP, -101SP, -102SP, -103SP, -104SP, -107SP, -108SP, -111SP, -112SP, -113SP, -114SP, -115SP, -116SP, -120SP, -122SP, -127SP, -128SP, -129SP, -130SP, -131SP, -132SP, -133SP, -134SP, -134A, -135SP, -137SP, -138SP, -139SP, -140SP, -141SP, -143SP, -144SP, -145SP, -146SP, -147SP, -167SP, -168SP, -183SP, -184SP, -186SP, -188SP, -227SP, -228SP, -229SP, -230SP, -233SP, -234SP, -235SP	417N3130	18	Jul 01/2009



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
I 35-21-03	OXYGEN BOX ASSEMBLY -1SP, -2SP, -4SP, -5SP, -6SP, -8SP, -9SP, -10SP, -15SP, -16SP, -18SP, -21SP, -22SP, -23SP, -24SP, -47SP, -48SP, -49SP, -50SP, -51SP, -52SP, -53SP, -54SP, -60SP, -83SP, -84SP, -89SP, -92SP, -99SP, -105SP, -117SP, -118SP, -119SP, -122SP, -123SP, -124SP, -169SP, -182SP	417N3130	21	Jul 01/2009
I 35-21-05	UNDERBIN ATTENDANT SERVICE UNIT ASSEMBLY	417N3700	15	Jul 01/2009
I 35-21-32	ATTENDANTS SERVICE UNIT OXYGEN BOX ASSEMBLY -10SP	417N3810	9	Jul 01/2009
I 35-21-34	ATTENDANT'S SERVICE UNIT AND LAVATORY OXYGEN BOX ASSEMBLY -1SP, -2SP, -5SP, -6SP, -13SP, -14SP, -15SP, -18SP, -30SP, -36SP, -41SP, -42SP, -54SP, -57SP, -59SP, -61SP, -63SP, -65SP, -67SP, -69SP, -71SP, -76SP, -78SP, -79SP, -80SP, -81SP, -82SP, -87SP, -88SP, -89SP, -90SP, -92SP, -95SP, -97SP, -98SP, -99SP, -100SP, -102SP, -104SP, -105SP, -106SP, -107SP, -108SP, -109SP, -110SP, -111SP, -115SP, -117SP, -118SP, -119SP, -120SP, -121SP, -125SP, -126SP, -127SP, -128SP, -129SP, -130SP, -131SP, -132SP, -133SP, -134SP, -135SP, -136SP, -137SP, -145SP, -146SP, -147SP, -148SP, -151SP, -152SP, -153SP, -154SP, -155SP, -156SP, -157SP, -158SP, -162SP, -165SP, -166SP, -167SP, -168SP, -169SP	417N3810	31	Jul 01/2009
I 36-10-03	REPAIR OF PNEUMATIC DUCTS		58	Jul 01/2009
I 36-10-12	REPAIR OF POLYURETHANE AND POLYISOCYANURATE DUCTS		8	Jul 01/2009
I 36-12-07	PRECOOLER INSTALLATION COMPONENTS	322A2341	8	Jul 01/2009
I 36-12-07	PRECOOLER INSTALLATION COMPONENTS	332A2341	8	Jul 01/2009
I 36-12-07	PRECOOLER INSTALLATION COMPONENTS	332A2371	8	Jul 01/2009
I 38-11-01	POTABLE WATER SYSTEM TANK ASSEMBLY	417A2508	7	Jul 01/2009
38-16-04	PASSENGER WATER SYSTEM TANK ASSEMBLY	65-49662	8	Nov 01/2004
I 38-31-01	WASTE WATER DRAIN MAST ASSEMBLY	417N2117	15	Jul 01/2009



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
I 38-31-01	WASTE WATER DRAIN MAST ASSEMBLY	417T2093	15	Jul 01/2009
I 38-31-01	WASTE WATER DRAIN MAST ASSEMBLY	478W1610	15	Jul 01/2009
I 38-31-02	WASTE WATER DRAIN MAST ASSEMBLY	65-32603	8	Jul 01/2009
I 38-31-04	WASTE WATER DRAIN MAST ASSEMBLY	417A2093	13	Jul 01/2009
49-10-21	AUXILIARY POWER UNIT ASSEMBLY	65-50901	43	Jul 01/2008
49-10-21	AUXILIARY POWER UNIT ASSEMBLY	65-88936	43	Jul 01/2008
49-10-21	AUXILIARY POWER UNIT ASSEMBLY	65C35424	43	Jul 01/2008
49-10-21	AUXILIARY POWER UNIT ASSEMBLY	65C35694	43	Jul 01/2008
I 49-10-25	AUXILIARY POWER UNIT LOWER SHROUD ASSEMBLY	65-66213	8	Jul 01/2009
I 49-13-01	AUXILIARY POWER UNIT EXHAUST DUCT MUFFLER ASSEMBLY	65-62575	16	Jul 01/2009
I 49-13-01	AUXILIARY POWER UNIT EXHAUST DUCT MUFFLER ASSEMBLY	65C36935	16	Jul 01/2009
I 49-13-01	AUXILIARY POWER UNIT EXHAUST DUCT MUFFLER ASSEMBLY	65C36936	16	Jul 01/2009
I 49-13-01	AUXILIARY POWER UNIT EXHAUST DUCT MUFFLER ASSEMBLY	65C36937	16	Jul 01/2009
I 49-13-02	AUXILIARY POWER UNIT MUFFLER ASSEMBLY	354A3000	7	Jul 01/2009
I 49-13-12	APU SUPPORT STRUT ASSEMBLY	352A1200	8	Jul 01/2009
49-50-01	PNEUMATIC ACTUATOR ASSEMBLY	65-50949	0	Mar 25/1975
49-50-01	PNEUMATIC ACTUATOR ASSEMBLY	65-78987	0	Mar 25/1975
49-50-02	AUXILIARY POWER UNIT COOLING AIR VALVE ASSEMBLY	65-68935	4	Jun 01/1996
49-50-03	AUXILIARY POWER UNIT COOLING AIR VALVE ASSEMBLY	65-66218	4	Mar 05/1989
52-11-01	GALLEY DOOR SNUBBER ASSEMBLY	65-2346	18	Jul 01/2006
52-11-02	ENTRY DOOR SNUBBER ASSEMBLY	90-10072	7	Nov 01/2007
I 52-11-09	PASSENGER DOOR SNUBBER ASSEMBLY	141A6105	13	Jul 01/2009
I 52-11-13	FORWARD ENTRY DOOR BODY SIDE TORQUE TUBE BUILDUP	141A6270	6	Jul 01/2009
I 52-13-13	AFT ENTRY/AFT GALLEY BODY SIDE TORQUE TUBE ASSEMBLY	147A6112	10	Jul 01/2009

NUMERICAL INDEX/MANUAL

Page 42

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
52-16-01	FORWARD ENTRY DOOR ASSEMBLY	50-7945	49	Jul 01/2005
52-16-02	AFT AIRSTAIR ENTRY DOOR ASSEMBLY	65-51530	0	Jun 25/1973
52-16-03	AFT ENTRY DOOR ASSEMBLY -2, -159, -167, -168, -176, -180, -182, -189, -567	65-52873	37	Mar 01/2007
I 52-16-12	FORWARD ENTRY DOOR ASSEMBLY	141A6100	10	Jul 01/2009
I 52-16-12	FORWARD ENTRY DOOR ASSEMBLY	141A6150	10	Jul 01/2009
I 52-16-15	AFT ENTRY DOOR ASSEMBLY	147A6116	14	Jul 01/2009
52-17-01	ENTRY DOOR GUIDE ARM ASSEMBLY	65-29994	8	Jul 01/2005
52-17-01	ENTRY DOOR GUIDE ARM ASSEMBLY	69-5338	8	Jul 01/2005
I 52-17-05	FORWARD ENTRY DOOR GUIDE ARM ASSEMBLY	141A6075	13	Jul 01/2009
I 52-17-05	FORWARD ENTRY DOOR GUIDE ARM ASSEMBLY	141A6081	13	Jul 01/2009
I 52-21-03	MID EXIT DOOR ASSEMBLY	146A6200	5	Jul 01/2009
I 52-21-04	Flight Lock Assembly	146A6516	5	Jul 01/2009
52-26-01	EMERGENCY HATCH ASSEMBLY	50-7978	17	Jul 01/2005
52-26-01	EMERGENCY HATCH ASSEMBLY	65C35000	17	Jul 01/2005
I 52-26-07	AUTOMATIC OVERWING EXIT DOOR ASSEMBLY	144A6505	14	Jul 01/2009
I 52-26-09	OVERWING EXIT COUNTERBALANCE MECHANISM ASSEMBLY	144A6631	11	Jul 01/2009
I 52-26-10	OVERWING EMERGENCY DOOR SNUBBER ASSEMBLY	258A4301	9	Jul 01/2009
52-30-61	CARGO DOOR LATCH ACTUATOR ASSEMBLY	65-62238	2	Nov 01/2000
I 52-31-14	AFT CARGO DOOR ASSEMBLY	146A6110	12	Jul 01/2009
I 52-31-15	FORWARD CARGO DOOR ASSEMBLY	143A6110	9	Jul 01/2009
52-36-02	FORWARD CARGO DOOR ASSEMBLY	65-46921	35	Mar 01/2005
I 52-36-12	AFT CARGO DOOR ASSEMBLY	65-46591	30	Nov 01/2008
I 52-36-12	AFT CARGO DOOR ASSEMBLY	65-47952	30	Nov 01/2008
52-36-63	MAIN CARGO DOOR ASSEMBLY	65-54916	7	Dec 01/1996
I 52-36-64	MAIN DECK CARGO DOOR ASSEMBLY	142A6000	7	Jul 01/2009
52-41-02	GALLEY/SERVICE DOOR GUIDE ARM ASSEMBLY	65-52854	6	Nov 01/2001
52-41-02	GALLEY/SERVICE DOOR GUIDE ARM ASSEMBLY	69-20321	6	Nov 01/2001
52-41-02	GALLEY/SERVICE DOOR GUIDE ARM ASSEMBLY	69-44331	6	Nov 01/2001

NUMERICAL INDEX/MANUAL

Page 43

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
I 52-41-04	AFT GALLEY DOOR ASSEMBLY	147A6502	8	Jul 01/2009
I 52-41-05	FORWARD GALLEY DOOR ASSEMBLY	141A6516	11	Jul 01/2009
I 52-41-06	FORWARD GALLEY DOOR BODY SIDE TORQUE TUBE ASSEMBLY	141A6510	7	Jul 01/2009
52-46-03	LOWER BODY FORWARD ACCESS DOOR ASSEMBLY	65-22216	11	Nov 01/2008
52-46-04	EQUIPMENT ACCESS DOOR ASSEMBLY	65-45830	10	Mar 01/2004
52-46-05	AFT GALLEY DOOR ASSEMBLY -2, -159, -166, -169, -170, -536	65-45849	37	Jul 01/2005
52-46-06	FORWARD GALLEY DOOR ASSEMBLY -2, -114, -124, -132, -517, -519, -523	65-45871	35	Jul 01/2006
52-46-09	ACCESS AND BLOWOUT DOOR BUILDUP	65-46583	1	Dec 05/1992
52-46-09	ACCESS AND BLOWOUT DOOR BUILDUP	65-54852	1	Dec 05/1992
52-46-09	ACCESS AND BLOWOUT DOOR BUILDUP	65-54860	1	Dec 05/1992
52-46-09	ACCESS AND BLOWOUT DOOR BUILDUP	65-67747	1	Dec 05/1992
52-46-09	ACCESS AND BLOWOUT DOOR BUILDUP	65C35450	1	Dec 05/1992
52-46-10	AUXILIARY POWER UNIT ACCESS DOOR ASSEMBLY	65-50904	7	Sep 05/1991
52-46-11	FORWARD ENTRY DOOR BODY SIDE TORQUE TUBE BUILDUP		4	Mar 01/2004
I 52-46-12	AUXILIARY POWER UNIT DOOR ASSEMBLY	148A6350	9	Jul 01/2009
52-46-21	AFT ENTRY GALLEY DOOR TORQUE TUBE ASSEMBLY -91, -139, -160, -178	65-45849	4	Jul 01/2003
52-46-21	AFT ENTRY GALLEY DOOR TORQUE TUBE ASSEMBLY -91, -156, -157, -169, -195, -528	65-52873	4	Jul 01/2003
I 52-46-22	FWD GALLEY DOOR TORQUE TUBE ASSEMBLY -88, -102, -113, -142	65-45871	14	Jul 01/2009
I 52-48-01	FORWARD ACCESS DOOR ASSEMBLY	141A6802	9	Jul 01/2009
I 52-48-13	EQUIPMENT ACCESS DOOR ASSEMBLY	141A6710	10	Jul 01/2009
I 52-49-13	ACCESS AND BLOWOUT DOOR ASSEMBLY	148A6110	8	Jul 01/2009
I 52-51-06	CREW DOOR LATCH ASSEMBLY	65C36813	8	Jul 01/2009
I 52-61-02	FORWARD AIRSTAIR DOOR ASSEMBLY	141A6402	7	Jul 01/2009

NUMERICAL INDEX/MANUAL

Page 44

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
52-64-02	AFT AIRSTAIRS GOVERNOR ASSEMBLY	65-59642	1	Jul 05/1976
52-64-03	AFT AIRSTAIRS CONTROL CONSOLE MECHANISM ASSEMBLY	65-60500	2	Sep 05/1993
52-64-05	AFT AIRSTAIR DRIVE EMERGENCY EXTENSION LATCH/LOCKOUT MECHANISM ASSEMBLY	65-67303	3	Jul 05/1981
52-64-06	AIRSTAIR CARRIAGE ASSEMBLY	69-26245	2	Sep 05/1989
52-65-01	AFT AIRSTAIRS MECHANISM REDUCTION GEARBOX ASSEMBLY	65-58116	1	Mar 01/1999
52-66-02	AFT AIRSTAIR ASSY	65-56632	12	Mar 01/2005
52-68-01	FORWARD AIRSTAIR DOOR ASSEMBLY	65-27942	6	Jul 01/2004
I 54-50-01	ENGINE STRUT INSTALLATION COMPONENTS	310A1022	30	Jul 01/2009
I 54-50-01	ENGINE STRUT INSTALLATION COMPONENTS	310A1031	30	Jul 01/2009
I 54-50-01	ENGINE STRUT INSTALLATION COMPONENTS	311A1090	30	Jul 01/2009
I 54-50-01	ENGINE STRUT INSTALLATION COMPONENTS	311A1091	30	Jul 01/2009
I 54-50-01	ENGINE STRUT INSTALLATION COMPONENTS	311A1092	30	Jul 01/2009
I 54-50-01	ENGINE STRUT INSTALLATION COMPONENTS	311A1093	30	Jul 01/2009
I 54-50-01	ENGINE STRUT INSTALLATION COMPONENTS	311A1094	30	Jul 01/2009
I 54-50-01	ENGINE STRUT INSTALLATION COMPONENTS	311A1096	30	Jul 01/2009
I 54-50-01	ENGINE STRUT INSTALLATION COMPONENTS	311A1213	30	Jul 01/2009
I 54-50-01	ENGINE STRUT INSTALLATION COMPONENTS	311A1215	30	Jul 01/2009
I 54-50-01	ENGINE STRUT INSTALLATION COMPONENTS	311A1515	30	Jul 01/2009
I 54-50-01	ENGINE STRUT INSTALLATION COMPONENTS	311A1555	30	Jul 01/2009
I 54-50-01	ENGINE STRUT INSTALLATION COMPONENTS	311A1561	30	Jul 01/2009
I 54-50-01	ENGINE STRUT INSTALLATION COMPONENTS	311A1562	30	Jul 01/2009
I 54-50-01	ENGINE STRUT INSTALLATION COMPONENTS	311A1710	30	Jul 01/2009
I 54-50-01	ENGINE STRUT INSTALLATION COMPONENTS	311A1730	30	Jul 01/2009
I 54-50-01	ENGINE STRUT INSTALLATION COMPONENTS	311A1740	30	Jul 01/2009
I 54-50-02	ENGINE STRUT INSTALLATION COMPONENTS	311A2090	11	Jul 01/2009
I 54-50-02	ENGINE STRUT INSTALLATION COMPONENTS	311A2091	11	Jul 01/2009
I 54-50-02	ENGINE STRUT INSTALLATION COMPONENTS	311A2092	11	Jul 01/2009
I 54-50-02	ENGINE STRUT INSTALLATION COMPONENTS	311A2093	11	Jul 01/2009

NUMERICAL INDEX/MANUAL

Page 45

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
I 54-50-02	ENGINE STRUT INSTALLATION COMPONENTS	311A2094	11	Jul 01/2009
I 54-50-02	ENGINE STRUT INSTALLATION COMPONENTS	311A2097	11	Jul 01/2009
I 54-50-02	ENGINE STRUT INSTALLATION COMPONENTS	311A2098	11	Jul 01/2009
I 54-50-02	ENGINE STRUT INSTALLATION COMPONENTS	311A2551	11	Jul 01/2009
I 54-50-02	ENGINE STRUT INSTALLATION COMPONENTS	311A2552	11	Jul 01/2009
I 54-50-02	ENGINE STRUT INSTALLATION COMPONENTS	311A2553	11	Jul 01/2009
I 54-50-02	ENGINE STRUT INSTALLATION COMPONENTS	311A2710	11	Jul 01/2009
I 54-50-02	ENGINE STRUT INSTALLATION COMPONENTS	311A2730	11	Jul 01/2009
I 54-50-02	ENGINE STRUT INSTALLATION COMPONENTS	311A2740	11	Jul 01/2009
I 54-50-02	ENGINE STRUT INSTALLATION COMPONENTS	311A2741	11	Jul 01/2009
I 54-52-02	AFT FAIRING INSTALLATION COMPONENTS	313A2310	8	Jul 01/2009
55-10-05	HORIZONTAL TAIL CENTER SECTION ASSEMBLY -2, -7, -501	65-73781	14	Jul 01/2002
I 55-10-06	HORIZONTAL TAIL CENTER SECTION ASSEMBLY -7	65-73781	16	Jul 01/2009
I 55-10-07	HORIZONTAL TAIL CENTER SECTION (PARTS COLLECTOR)	180A1610	7	Jul 01/2009
I 55-10-07	HORIZONTAL TAIL CENTER SECTION (PARTS COLLECTOR)	181A1000	7	Jul 01/2009
I 55-10-07	HORIZONTAL TAIL CENTER SECTION (PARTS COLLECTOR)	181A2000	7	Jul 01/2009
55-20-10	ELEVATOR ASSEMBLY AND TAB ASSEMBLY	65-73784	12	Jul 01/2004
55-20-10	ELEVATOR ASSEMBLY AND TAB ASSEMBLY	65-73799	12	Jul 01/2004
I 55-20-16	ELEVATOR ASSEMBLY AND TAB ASSEMBLY	65C25746	37	Jul 01/2009
I 55-20-16	ELEVATOR ASSEMBLY AND TAB ASSEMBLY	65C25796	37	Jul 01/2009
I 55-20-16	ELEVATOR ASSEMBLY AND TAB ASSEMBLY	65C26384	37	Jul 01/2009
I 55-20-17	ELEVATOR ASSEMBLY AND TAB ASSEMBLY	002A0016	17	Jul 01/2009
I 55-20-17	ELEVATOR ASSEMBLY AND TAB ASSEMBLY	183A0101	17	Jul 01/2009
I 55-20-17	ELEVATOR ASSEMBLY AND TAB ASSEMBLY	183A0102	17	Jul 01/2009
I 55-20-17	ELEVATOR ASSEMBLY AND TAB ASSEMBLY	183A0103	17	Jul 01/2009
I 55-20-17	ELEVATOR ASSEMBLY AND TAB ASSEMBLY	183A0104	17	Jul 01/2009
I 55-20-17	ELEVATOR ASSEMBLY AND TAB ASSEMBLY	183A0107	17	Jul 01/2009

NUMERICAL INDEX/MANUAL

Page 46

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
55-20-17	ELEVATOR ASSEMBLY AND TAB ASSEMBLY	183A0109	17	Jul 01/2009
55-20-17	ELEVATOR ASSEMBLY AND TAB ASSEMBLY	183A8100	17	Jul 01/2009
55-20-17	ELEVATOR ASSEMBLY AND TAB ASSEMBLY	183A8109	17	Jul 01/2009
55-40-09	RUDDER ASSEMBLY	173A0100	11	Jul 01/2009
55-40-09	RUDDER ASSEMBLY	173A0103	11	Jul 01/2009
55-40-10	RUDDER ASSEMBLY	65-73788	7	Jul 01/2008
55-40-10	RUDDER ASSEMBLY	65-75339	7	Jul 01/2008
55-40-10	RUDDER ASSEMBLY	65-75957	7	Jul 01/2008
55-40-12	RUDDER ASSEMBLY	65C25841	19	Jul 01/2009
56-10-01	SLIDING WINDOW ASSEMBLY	5-71762	51	Mar 01/2009
56-10-02	SLIDING WINDSHIELD ASSEMBLY	141A4810	18	Jul 01/2009
56-11-11	CONTROL CABIN WINDOWS	5-71761	31	Jul 01/2009
56-11-11	CONTROL CABIN WINDOWS	5-71763	31	Jul 01/2009
56-11-11	CONTROL CABIN WINDOWS	5-71764	31	Jul 01/2009
56-11-11	CONTROL CABIN WINDOWS	5-71765	31	Jul 01/2009
56-11-11	CONTROL CABIN WINDOWS	5-89354	31	Jul 01/2009
56-11-11	CONTROL CABIN WINDOWS	5-89356	31	Jul 01/2009
56-11-11	CONTROL CABIN WINDOWS	5-89357	31	Jul 01/2009
56-11-11	CONTROL CABIN WINDOWS	5-89358	31	Jul 01/2009
56-11-11	CONTROL CABIN WINDOWS	65-16323	31	Jul 01/2009
56-11-11	CONTROL CABIN WINDOWS	65-38210	31	Jul 01/2009
56-11-11	CONTROL CABIN WINDOWS	65C33819	31	Jul 01/2009
56-11-11	CONTROL CABIN WINDOWS	65C33822	31	Jul 01/2009
56-11-11	CONTROL CABIN WINDOWS	65C33823	31	Jul 01/2009
56-11-11	CONTROL CABIN WINDOWS	65C34348	31	Jul 01/2009
56-21-31	PASSENGER WINDOW ASSEMBLY -3, -13, -19, -505, -510, -512	65-45790	15	Jul 01/2001
56-21-51	PASSENGER WINDOW ASSEMBLY AND PASSENGER WINDOW PLUG ASSEMBLY	140N2139	21	Jul 01/2009
56-21-51	PASSENGER WINDOW ASSEMBLY AND PASSENGER WINDOW PLUG ASSEMBLY	140N2312	21	Jul 01/2009



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
I 56-21-51	PASSENGER WINDOW ASSEMBLY AND PASSENGER WINDOW PLUG ASSEMBLY -20, -38, -44, -56, -57, -58, -59, -61, -79, -83, -84, -85, -86, -87, -88, -89, -90, -509	65-45790	21	Jul 01/2009
I 57-15-01	MAIN LANDING GEAR BEAM INSTALLATION COMPONENTS	115A1100	16	Jul 01/2009
I 57-15-01	MAIN LANDING GEAR BEAM INSTALLATION COMPONENTS	115A1210	16	Jul 01/2009
I 57-15-01	MAIN LANDING GEAR BEAM INSTALLATION COMPONENTS	115A1220	16	Jul 01/2009
I 57-15-01	MAIN LANDING GEAR BEAM INSTALLATION COMPONENTS	115A1310	16	Jul 01/2009
I 57-15-01	MAIN LANDING GEAR BEAM INSTALLATION COMPONENTS	115A1320	16	Jul 01/2009
I 57-15-01	MAIN LANDING GEAR BEAM INSTALLATION COMPONENTS	115A1500	16	Jul 01/2009
I 57-15-01	MAIN LANDING GEAR BEAM INSTALLATION COMPONENTS	115A1610	16	Jul 01/2009
I 57-15-01	MAIN LANDING GEAR BEAM INSTALLATION COMPONENTS	115A1630	16	Jul 01/2009
I 57-15-01	MAIN LANDING GEAR BEAM INSTALLATION COMPONENTS	115A1640	16	Jul 01/2009
I 57-15-01	MAIN LANDING GEAR BEAM INSTALLATION COMPONENTS	115A5002	16	Jul 01/2009
I 57-15-01	MAIN LANDING GEAR BEAM INSTALLATION COMPONENTS	115A5005	16	Jul 01/2009
I 57-15-01	MAIN LANDING GEAR BEAM INSTALLATION COMPONENTS	115A5300	16	Jul 01/2009
I 57-26-45	INBOARD FLAP OUTBOARD TRACK FAIRING AND TAILCONE ASSEMBLY	65C26300	19	Jul 01/2009
I 57-26-46	OUTBD FLAP TRACK FAIRING INSTALLATION COMPONENTS	65-49509	27	Jul 01/2009
I 57-26-46	OUTBD FLAP TRACK FAIRING INSTALLATION COMPONENTS	65-50765	27	Jul 01/2009
I 57-26-46	OUTBD FLAP TRACK FAIRING INSTALLATION COMPONENTS	65-55510	27	Jul 01/2009



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
I 57-26-46	OUTBD FLAP TRACK FAIRING INSTALLATION COMPONENTS	65-68269	27	Jul 01/2009
I 57-26-46	OUTBD FLAP TRACK FAIRING INSTALLATION COMPONENTS	65-79964	27	Jul 01/2009
I 57-26-46	OUTBD FLAP TRACK FAIRING INSTALLATION COMPONENTS	65C34589	27	Jul 01/2009
I 57-26-46	OUTBD FLAP TRACK FAIRING INSTALLATION COMPONENTS	69-46429	27	Jul 01/2009
I 57-26-46	OUTBD FLAP TRACK FAIRING INSTALLATION COMPONENTS	69-46430	27	Jul 01/2009
I 57-26-47	FAIRING FLAP SUPPORT INSTALLATION COMPONENTS	113A9104	11	Jul 01/2009
I 57-26-47	FAIRING FLAP SUPPORT INSTALLATION COMPONENTS	113A9105	11	Jul 01/2009
I 57-26-47	FAIRING FLAP SUPPORT INSTALLATION COMPONENTS	113A9106	11	Jul 01/2009
I 57-26-47	FAIRING FLAP SUPPORT INSTALLATION COMPONENTS	113A9204	11	Jul 01/2009
I 57-26-47	FAIRING FLAP SUPPORT INSTALLATION COMPONENTS	113A9205	11	Jul 01/2009
I 57-26-47	FAIRING FLAP SUPPORT INSTALLATION COMPONENTS	113A9206	11	Jul 01/2009
I 57-26-47	FAIRING FLAP SUPPORT INSTALLATION COMPONENTS	113A9207	11	Jul 01/2009
I 57-26-47	FAIRING FLAP SUPPORT INSTALLATION COMPONENTS	113A9304	11	Jul 01/2009
I 57-26-47	FAIRING FLAP SUPPORT INSTALLATION COMPONENTS	113A9305	11	Jul 01/2009
I 57-26-47	FAIRING FLAP SUPPORT INSTALLATION COMPONENTS	113A9306	11	Jul 01/2009
I 57-26-47	FAIRING FLAP SUPPORT INSTALLATION COMPONENTS	113A9307	11	Jul 01/2009
57-27-01	HOIST FITTING ASSEMBLY	65-69584	3	Dec 05/1990
57-27-01	HOIST FITTING ASSEMBLY	69-36355	3	Dec 05/1990
57-40-11	FORWARD ENGINE SUPPORT LINK ASSEMBLY	69-37856	6	Nov 01/1998
57-40-12	FORWARD ENGINE MOUNT SUPPORT ASSEMBLY	69-37865	0	Dec 25/1975

NUMERICAL INDEX/MANUAL

Page 49

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
57-40-13	ENGINE MOUNT SUPPORT BRACKET ASSEMBLY	65-50706	0	Jul 05/1981
57-41-01	MAIN LANDING GEAR BEAM INSTALLATION COMPONENTS	65-46401	15	Nov 01/2007
57-41-01	MAIN LANDING GEAR BEAM INSTALLATION COMPONENTS	65-49442	15	Nov 01/2007
57-41-01	MAIN LANDING GEAR BEAM INSTALLATION COMPONENTS	65-52235	15	Nov 01/2007
57-41-01	MAIN LANDING GEAR BEAM INSTALLATION COMPONENTS	65-67172	15	Nov 01/2007
57-41-01	MAIN LANDING GEAR BEAM INSTALLATION COMPONENTS	65-82764	15	Nov 01/2007
57-41-01	MAIN LANDING GEAR BEAM INSTALLATION COMPONENTS	65C32102	15	Nov 01/2007
57-41-01	MAIN LANDING GEAR BEAM INSTALLATION COMPONENTS	65C32697	15	Nov 01/2007
57-41-01	MAIN LANDING GEAR BEAM INSTALLATION COMPONENTS	65C32699	15	Nov 01/2007
57-41-01	MAIN LANDING GEAR BEAM INSTALLATION COMPONENTS	65C32918	15	Nov 01/2007
57-41-21	LANDING GEAR BEAM INBOARD ATTACH LINK ASSEMBLY	65-52209	10	Mar 01/2003
57-41-21	LANDING GEAR BEAM INBOARD ATTACH LINK ASSEMBLY	65-82768	10	Mar 01/2003
57-41-21	LANDING GEAR BEAM INBOARD ATTACH LINK ASSEMBLY	65C32664	10	Mar 01/2003
57-43-01	WING LEADING EDGE NO. 1 AND 8 SLAT ASSEMBLY	114A5010	13	Jul 01/2009
57-43-02	WING LEADING EDGE NO. 2 AND 7 SLAT ASSEMBLY	114A5020	12	Jul 01/2009
57-43-03	WING LEADING EDGE NO. 3 AND 6 SLAT ASSEMBLY	114A5030	13	Jul 01/2009
57-43-04	WING LEADING EDGE NO. 4 AND 5 SLAT ASSEMBLY	114A5040	11	Jul 01/2009
57-50-21	AILERON ASSEMBLY CONTROL TAB ASSEMBLY AND BALANCE PANEL ASSEMBLY	65-46454	18	Mar 01/2006



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
57-50-21	AILERON ASSEMBLY CONTROL TAB ASSEMBLY AND BALANCE PANEL ASSEMBLY	65-46455	18	Mar 01/2006
57-50-21	AILERON ASSEMBLY CONTROL TAB ASSEMBLY AND BALANCE PANEL ASSEMBLY	65-46457	18	Mar 01/2006
57-50-21	AILERON ASSEMBLY CONTROL TAB ASSEMBLY AND BALANCE PANEL ASSEMBLY -1SP, -2SP, -7SP, -8SP, -9SP, -10SP, -11SP, -12SP, -17SP, -18SP, -23SP, -24SP, -27SP, -28SP, -29SP, -30SP	65C25911	18	Mar 01/2006
I 57-50-25	AILERON ASSEMBLY -1SP, -2SP, -7SP, -8SP, -9SP, -10SP, -11SP, -12SP, -15SP, -16SP, -17SP, -18SP, -19SP, -20SP, -23SP, -24SP, -27SP, -28SP, -29SP, -30SP	65C25911	23	Jul 01/2009
I 57-50-26	AILERON AND TAB ASSEMBLY	113A7002	9	Jul 01/2009
I 57-53-03	INBOARD AND OUTBOARD FLAP TRACK ASSEMBLY	113A1110	13	Jul 01/2009
I 57-53-03	INBOARD AND OUTBOARD FLAP TRACK ASSEMBLY	113A1160	13	Jul 01/2009
I 57-53-03	INBOARD AND OUTBOARD FLAP TRACK ASSEMBLY	113A1310	13	Jul 01/2009
I 57-53-03	INBOARD AND OUTBOARD FLAP TRACK ASSEMBLY	113A1360	13	Jul 01/2009
I 57-53-03	INBOARD AND OUTBOARD FLAP TRACK ASSEMBLY	113A1510	13	Jul 01/2009
I 57-53-03	INBOARD AND OUTBOARD FLAP TRACK ASSEMBLY	113A1560	13	Jul 01/2009
I 57-53-03	INBOARD AND OUTBOARD FLAP TRACK ASSEMBLY	113A1710	13	Jul 01/2009
I 57-53-03	INBOARD AND OUTBOARD FLAP TRACK ASSEMBLY	113A1760	13	Jul 01/2009
I 57-53-04	INBOARD FLAP FLAP ASSEMBLY	113A2002	11	Jul 01/2009
I 57-53-05	INBOARD FLAP MAIN FLAP FINAL ASSEMBLY	113A2100	12	Jul 01/2009
I 57-53-06	OUTBOARD TRAILING EDGE FLAP ASSEMBLY	113A3002	12	Jul 01/2009
I 57-53-07	OUTBOARD TRAILING EDGE FLAP MAIN FLAP ASSEMBLY	113A3100	13	Jul 01/2009

NUMERICAL INDEX/MANUAL

Page 51

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
I 57-53-08	AFT OUTBOARD TRAILING EDGE FLAP ASSEMBLY	113A3700	13	Jul 01/2009
I 57-53-09	AFT INBOARD FLAP FLAP ASSEMBLY	113A2700	11	Jul 01/2009
57-53-15	OUTBOARD FLAP TRACK ASSEMBLY	65-46428	31	Mar 01/2009
57-53-15	OUTBOARD FLAP TRACK ASSEMBLY	65-67158	31	Mar 01/2009
57-53-15	OUTBOARD FLAP TRACK ASSEMBLY	65C34812	31	Mar 01/2009
57-53-15	OUTBOARD FLAP TRACK ASSEMBLY	65C35615	31	Mar 01/2009
57-53-15	OUTBOARD FLAP TRACK ASSEMBLY	65C35616	31	Mar 01/2009
57-53-16	INBOARD FLAP TRACK ASSEMBLY	65-46438	31	Jul 01/2008
57-53-16	INBOARD FLAP TRACK ASSEMBLY	65-46439	31	Jul 01/2008
57-53-16	INBOARD FLAP TRACK ASSEMBLY	65C35276	31	Jul 01/2008
57-53-16	INBOARD FLAP TRACK ASSEMBLY	65C35617	31	Jul 01/2008
57-53-16	INBOARD FLAP TRACK ASSEMBLY	65C36867	31	Jul 01/2008
I 57-53-17	INBOARD WING TRAILING EDGE MIDFLAP ASSEMBLY	65C26310	20	Jul 01/2009
I 57-53-18	OUTBOARD WING TRAILING EDGE MIDFLAP ASSEMBLY	65C26320	25	Jul 01/2009
I 57-53-20	AFT FLAP ASSEMBLY	65-46435	14	Jul 01/2009
57-53-22	INBOARD TRAILING EDGE FLAP ASSEMBLY -5, -6, -7, -8, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -31, -32, -33SP, -34SP, -35SP, -36SP, -39SP, -40SP, -41SP, -42SP, -43SP, -44SP, -59, -60	65-46436	49	Mar 01/2009
57-53-22	INBOARD TRAILING EDGE FLAP ASSEMBLY	65-71940	49	Mar 01/2009
57-53-22	INBOARD TRAILING EDGE FLAP ASSEMBLY	65-71969	49	Mar 01/2009
57-53-23	FLIPPER FLAP ASSEMBLY	65-71926	5	Nov 01/2000
I 57-53-24	INBOARD TRAILING EDGE FLAP ASSEMBLY -45SP, -46SP, -51SP, -52SP, -53SP, -54SP, -55SP, -56SP, -57SP, -58SP, -61SP, -62SP, -63SP, -64SP, -65SP, -66SP, -69SP, -70SP, -71SP, -72SP	65-46436	39	Jul 01/2009
I 57-53-26	INBOARD TRAILING EDGE FORE FLAP ASSEMBLY	65-46430	29	Jul 01/2009
I 57-53-28	INBOARD TRAILING EDGE AFT FLAP ASSEMBLY	65-46434	18	Jul 01/2009

NUMERICAL INDEX/MANUAL

Page 52

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
I 57-53-29	INBOARD TRAILING EDGE TRAILING ASSEMBLY FLAP ASSEMBLY	65C36505	7	Jul 01/2009
I 57-53-30	OUTBOARD FLAP MID/AFT FLAP ASSEMBLY	65C34946	10	Jul 01/2009
57-53-32	OUTBOARD TRAILING EDGE FLAP ASSEMBLY -1, -2, -3, -4, -5, -6, -7, -8, -9, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -25, -26, -31, -32, -37, -38	65-46437	51	Jul 01/2006
57-53-32	OUTBOARD TRAILING EDGE FLAP ASSEMBLY	65-71972	51	Jul 01/2006
57-53-33	HINGED FLAP ASSEMBLY	65-71930	4	Mar 01/1999
I 57-53-34	OUTBOARD FLAP FOREFLAP ASSEMBLY	65C35703	8	Jul 01/2009
57-53-35	OUTBOARD FLAP CARRIAGE ASSEMBLY -1, -8, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, -26, -27, -28, -31, -32, -33, -34, -37, -38, -39, -40, -41, -42, -45, -46, -47, -48, -49, -50, -51, -52, -53, -54, -55, -56, -57, -58, -59, -60, -61, -62, -63, -64, -65, -66, -67, -68, -69, -70, -72, -73, -74, -75, -76, -81, -82, -83, -84, -85, -86, -95, -96	65-46481	56	Mar 01/2007
57-53-35	OUTBOARD FLAP CARRIAGE ASSEMBLY	65-79949	56	Mar 01/2007
I 57-53-36	OUTBOARD FLAP CARRIAGE ASSEMBLY -87, -88, -89, -90, -91, -92, -93, -94, -97, -98, -101, -102, -103, -104, -105, -106, -107, -108, -109, -110, -111, -112, -113, -114, -115, -116, -117, -118, -119, -120, -121, -122, -123, -124, -133, -134, -135, -136, -143, -144, -145, -146, -147, -148, -149, -150	65-46481	44	Jul 01/2009
I 57-53-36	OUTBOARD FLAP CARRIAGE ASSEMBLY	65C34483	44	Jul 01/2009
I 57-53-37	OUTBOARD TRAILING EDGE FORE FLAP ASSEMBLY	65-46431	16	Jul 01/2009
I 57-53-38	OUTBOARD FLAP ASSEMBLY -21, -22, -27, -28, -29, -30, -33, -34, -35, -36, -39, -40, -45, -46	65-46437	30	Jul 01/2009
57-53-40	INBOARD MID FLAP CARRIAGE ASSEMBLY	65-68297	10	Mar 01/2004
I 57-56-01	WING LEADING EDGE NO. 1 AND 6 SLAT ASSEMBLIES	65-46421	24	Jul 01/2009
I 57-56-02	WING LEADING EDGE NO. 1 AND NO. 6 SLAT ASSEMBLY	65C26601	27	Jul 01/2009



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
I 57-56-11	WING LEADING EDGE NO. 2 AND 5 SLAT ASSEMBLIES	65-46422	20	Jul 01/2009
I 57-56-12	WING LEADING EDGE NO. 2 AND NO. 5 SLAT ASSEMBLY	65C26602	26	Jul 01/2009
57-56-21	WING LEADING EDGE NO. 3 AND 4 SLAT ASSEMBLIES	65-46423	13	Nov 01/2007
I 57-56-22	WING LEADING EDGE NO. 3 AND NO. 4 SLAT ASSEMBLY	65C26603	28	Jul 01/2009
I 57-56-23	INBOARD LEADING EDGE WING SEAL DOOR ASSEMBLY	65C26770	8	Jul 01/2009
57-56-31	WING LEADING EDGE NO. 1 AND 4 FLAP ASSEMBLIES	65-46424	8	Jul 01/2006
I 57-56-32	NO. 1 AND 4 KRUEGER FLAP ASSEMBLY	65C30461	16	Jul 01/2009
I 57-56-33	NO. 1 AND 4 KRUEGER FLAP AND BULLNOSE ASSEMBLY	114A1110	9	Jul 01/2009
57-56-41	KRUEGER FLAP AND NO. 2 AND NO. 3 TAILGATE ASSEMBLIES -1, -2, -5, -6, -19, -20	65-46425	3	Sep 01/1994
57-56-42	KRUEGER FLAP AND NO. 2 AND NO. 3 TAILGATE ASSEMBLIES -7, -8, -17, -18, -25, -26, -27, -28, -29, -30, -31, -32, -33, -34, -35, -36	65-46425	9	Nov 01/2007
I 57-56-43	NO. 2 AND 3 KRUEGER FLAP AND TAILGATE ASSEMBLY	65C30462	12	Jul 01/2009
I 57-56-44	NO. 2 AND 3 KRUEGER FLAP AND BULLNOSE ASSEMBLY	114A1220	14	Jul 01/2009
57-56-51	FLIGHT SPOILER PANEL ASSEMBLY	65-46451	10	Mar 01/2007
57-56-51	FLIGHT SPOILER PANEL ASSEMBLY -7	65-79950	10	Mar 01/2007
57-56-51	FLIGHT SPOILER PANEL ASSEMBLY -7, -8	65-79952	10	Mar 01/2007
I 57-56-52	OUTBOARD SPOILER PANEL ASSEMBLY	65C25251	15	Jul 01/2009
I 57-56-53	FLIGHT SPOILER ASSEMBLY NO. 2 AND 11	113A4200	8	Jul 01/2009
I 57-56-54	FLIGHT SPOILER ASSEMBLY NO. 3 AND 10	113A4300	7	Jul 01/2009
I 57-56-55	FLIGHT SPOILER ASSEMBLY NO. 4 AND 9	113A4400	7	Jul 01/2009
I 57-56-56	FLIGHT SPOILER ASSEMBLY NO. 5 AND 8	113A4500	8	Jul 01/2009

NUMERICAL INDEX/MANUAL

Page 54

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
57-56-61	GROUND SPOILER PANEL ASSEMBLY	65-46452	8	Mar 01/2009
57-56-61	GROUND SPOILER PANEL ASSEMBLY -1, -13, -14	65-79950	8	Mar 01/2009
57-56-61	GROUND SPOILER PANEL ASSEMBLY -4, -5, -6	65-79952	8	Mar 01/2009
I 57-56-62	INBOARD SPOILER PANEL ASSEMBLY	65C25242	14	Jul 01/2009
I 57-56-63	OUTBOARD GROUND SPOILER ASSEMBLY NO. 1 AND 12	113A4100	7	Jul 01/2009
I 57-56-64	NO. 6 AND 7 INBOARD GROUND SPOILER ASSEMBLY	113A4600	9	Jul 01/2009
I 71-00-01	APPLICATION AND REPAIR OF BMS 10-102 INSULATIVE COATING		19	Jul 01/2009
71-03-01	737 POWER PLANT BUILDUP	65-73769	65	Mar 01/2005
I 71-04-26	CFM-56 MINOR COMPONENTS	310A2041	13	Jul 01/2009
I 71-04-26	CFM-56 MINOR COMPONENTS	332A1908	13	Jul 01/2009
71-13-01	NOSE COWL ASSEMBLY	65-60529	4	Sep 05/1993
71-13-01	NOSE COWL ASSEMBLY	65-68621	4	Sep 05/1993
71-13-01	NOSE COWL ASSEMBLY	65-78980	4	Sep 05/1993
71-13-01	NOSE COWL ASSEMBLY	65-80079	4	Sep 05/1993
71-13-02	NOSE FAT LIP COWL ASSEMBLY	65-85378	19	Nov 01/2002
71-13-02	NOSE FAT LIP COWL ASSEMBLY	65-86025	19	Nov 01/2002
71-13-11	COWL LH PANEL ASSEMBLY	65-73773	3	Nov 01/2004
71-13-12	COWL RH PANEL ASSEMBLY	65-73774	1	Jan 05/1980
71-13-14	ENGINE FIXED FAIRING ASSEMBLY	65-52263	3	Mar 01/2003
71-13-15	EXTENDED NOSE DOME ASSEMBLY -1, -2, -3, -4, -11, -12, -13, -14, -15, -16, -21, -22	65-85369	6	Mar 05/1992
71-13-16	NOSE DOME ASSEMBLY	65-19684	2	Mar 01/2004
71-13-16	NOSE DOME ASSEMBLY -11, -12, -15, -16	65-85369	2	Mar 01/2004
I 71-13-26	FAN CFM56-3 COWL ASSEMBLY	301A1054	28	Jul 01/2009
I 71-13-26	FAN CFM56-3 COWL ASSEMBLY	314A1110	28	Jul 01/2009
I 71-13-27	INLET CFM56-3 COWL ASSEMBLY	301A1080	15	Jul 01/2009
I 71-13-27	INLET CFM56-3 COWL ASSEMBLY	314A1010	15	Jul 01/2009

NUMERICAL INDEX/MANUAL

Page 55

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
I 71-13-28	FAN DUCT CFM56-3 COWL ASSEMBLY	315A1002	37	Jul 01/2009
I 71-21-13	CFM-56 ENGINE MOUNT COMPONENTS	310A1020	49	Jul 01/2009
I 71-21-37	FORWARD AND AFT ENGINE (CFM56-7) MOUNT ASSEMBLY	310A2020	19	Jul 01/2009
I 71-21-37	FORWARD AND AFT ENGINE (CFM56-7) MOUNT ASSEMBLY	310A2030	19	Jul 01/2009
71-23-01	JT8D ENGINE MOUNT COMPONENTS	65-19592	29	Mar 01/2004
71-23-01	JT8D ENGINE MOUNT COMPONENTS	65-49181	29	Mar 01/2004
71-23-01	JT8D ENGINE MOUNT COMPONENTS	65-50538	29	Mar 01/2004
I 76-11-07	CONTROL STAND THRUST LEVER ASSEMBLY	254A1240	13	Jul 01/2009
I 76-11-09	ENGINE START BRAKE ASSEMBLY	254A1290	15	Jul 01/2009
I 76-11-13	CFM56 ENGINE THROTTLE FUEL CONTROL BOX ASSEMBLY	315A1040	26	Jul 01/2009
I 76-11-14	(CFM56) STRUT DRUM CONTROL BOX ASSEMBLY	315A1016	19	Jul 01/2009
I 76-11-16	FUEL SHUTOFF ASSEMBLY	315A1060	15	Jul 01/2009
76-14-11	ENGINE CONTROL COMPONENTS	65-23761	11	Nov 01/2002
76-14-11	ENGINE CONTROL COMPONENTS	65-45136	11	Nov 01/2002
76-14-11	ENGINE CONTROL COMPONENTS	65-46506	11	Nov 01/2002
76-14-11	ENGINE CONTROL COMPONENTS	65C16481	11	Nov 01/2002
76-14-11	ENGINE CONTROL COMPONENTS	69-35354	11	Nov 01/2002
76-14-21	ENGINE CONTROLS DRUM/BRAKE ASSEMBLY	65-79474	5	Jul 01/2000
76-14-21	ENGINE CONTROLS DRUM/BRAKE ASSEMBLY	65-79475	5	Jul 01/2000
76-14-22	ENGINE CONTROL DRUM INSTALLATION COMPONENTS	65-51296	5	Nov 01/2000
76-14-22	ENGINE CONTROL DRUM INSTALLATION COMPONENTS	65-52459	5	Nov 01/2000
76-14-22	ENGINE CONTROL DRUM INSTALLATION COMPONENTS	65-52966	5	Nov 01/2000
76-14-22	ENGINE CONTROL DRUM INSTALLATION COMPONENTS	65-52985	5	Nov 01/2000
76-14-22	ENGINE CONTROL DRUM INSTALLATION COMPONENTS	65-56645	5	Nov 01/2000

NUMERICAL INDEX/MANUAL

Page 56

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
76-14-22	ENGINE CONTROL DRUM INSTALLATION COMPONENTS	65-73654	5	Nov 01/2000
76-14-22	ENGINE CONTROL DRUM INSTALLATION COMPONENTS	65-74536	5	Nov 01/2000
76-14-22	ENGINE CONTROL DRUM INSTALLATION COMPONENTS	65-74537	5	Nov 01/2000
76-14-22	ENGINE CONTROL DRUM INSTALLATION COMPONENTS	69-38953	5	Nov 01/2000
76-14-22	ENGINE CONTROL DRUM INSTALLATION COMPONENTS	69-38971	5	Nov 01/2000
76-18-05	CONTROL STAND THRUST HANDLE ASSEMBLY	65C18257	14	Mar 01/2003
76-18-05	CONTROL STAND THRUST HANDLE ASSEMBLY	65C22117	14	Mar 01/2003
76-18-05	CONTROL STAND THRUST HANDLE ASSEMBLY	65C37439	14	Mar 01/2003
I 78-00-08	POSITIVE LOCK FASTENER INSTALLATION (ASP AND MAF FASTENERS)		5	Jul 01/2009
I 78-11-13	CFM56-3 TURBINE EXHAUST PLUG ASSEMBLY	301A1050	15	Jul 01/2009
I 78-11-13	CFM56-3 TURBINE EXHAUST PLUG ASSEMBLY	314A1501	15	Jul 01/2009
I 78-11-23	CFM56-3 TURBINE EXHAUST PRIMARY SLEEVE ASSEMBLY	301A1030	21	Jul 01/2009
I 78-11-23	CFM56-3 TURBINE EXHAUST PRIMARY SLEEVE ASSEMBLY	314A1502	21	Jul 01/2009
I 78-11-37	CFM56-7B TURBINE EXHAUST PRIMARY NOZZLE ASSEMBLY	314A2610	9	Jul 01/2009
I 78-11-38	CFM56-7B TURBINE EXHAUST PRIMARY PLUG ASSEMBLY	314A2620	9	Jul 01/2009
78-30-12	737 THRUST REVERSER ASSEMBLY	10-61813	55	Nov 01/2006
78-30-12	737 THRUST REVERSER ASSEMBLY	173-1010	55	Nov 01/2006
I 78-31-02	THRUST REVERSER LOCKING ACTUATOR ASSEMBLY -14, -15, -18, -19, -22, -23, -26, -27	315A1801	20	Jul 01/2009
I 78-31-04	THRUST REVERSER LOCKING ACTUATOR ASSEMBLY -13, -17, -21, -25	315A1801	42	Jul 01/2009
I 78-31-05	THRUST REVERSER NON-LOCKING ACTUATOR ASSEMBLY	315A1800	31	Jul 01/2009



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
I 78-31-05	THRUST REVERSER NON-LOCKING ACTUATOR ASSEMBLY	315N3800	31	Jul 01/2009
I 78-31-07	THRUST REVERSER MANUAL DRIVE ASSEMBLY	315A1803	10	Jul 01/2009
I 78-31-13	FAN DUCT AND THRUST REV (CFM-56) COWL ASSEMBLY	301A1067	39	Jul 01/2009
I 78-31-13	FAN DUCT AND THRUST REV (CFM-56) COWL ASSEMBLY	315A1001	39	Jul 01/2009
I 78-31-13	FAN DUCT AND THRUST REV (CFM-56) COWL ASSEMBLY	315A1701	39	Jul 01/2009
I 78-31-18	THRUST REVERSER NON-LOCKING ACTUATOR ASSEMBLY	315A2800	14	Jul 01/2009
I 78-31-19	THRUST REVERSER LOCKING ACTUATOR ASSEMBLY	315A2801	14	Jul 01/2009
I 78-31-23	THRUST REVERSER SLEEVE ASSEMBLY	315A1500	38	Jul 01/2009
I 78-31-24	THRUST REVERSER (CFM56-7) SLEEVE ASSEMBLY	315A2500	16	Jul 01/2009
I 78-31-24	THRUST REVERSER (CFM56-7) SLEEVE ASSEMBLY	315A2501	16	Jul 01/2009
I 78-31-24	THRUST REVERSER (CFM56-7) SLEEVE ASSEMBLY	315A2505	16	Jul 01/2009
I 78-31-24	THRUST REVERSER (CFM56-7) SLEEVE ASSEMBLY	315A2509	16	Jul 01/2009
I 78-31-24	THRUST REVERSER (CFM56-7) SLEEVE ASSEMBLY	315A2521	16	Jul 01/2009
I 78-31-24	THRUST REVERSER (CFM56-7) SLEEVE ASSEMBLY	315A2565	16	Jul 01/2009
I 78-31-26	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY COMPONENTS -21, -22, -23, -24	315A2103	6	Jul 01/2009
I 78-31-26	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY COMPONENTS -31, -32, -33, -34, -35, -36, -37, -38, -39, -40, -41, -42, -43, -44, -45, -46	315A2130	6	Jul 01/2009
I 78-31-26	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY COMPONENTS -17, -18, -19, -20, -21, -22, -23, -24	315A2150	6	Jul 01/2009

NUMERICAL INDEX/MANUAL

Page 58

Jul 01/2009

D6-17370



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
I 78-31-26	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY COMPONENTS -29, -30, -31, -32	315A2171	6	Jul 01/2009
I 78-31-26	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY COMPONENTS -35, -36, -37, -38, -39, -40, -41, -42	315A2178	6	Jul 01/2009
I 78-31-26	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY COMPONENTS -11, -12, -13, -14	315A2401	6	Jul 01/2009
I 78-31-33	EXTENSION (CFM56-3) RING ASSEMBLY	333A1100	33	Jul 01/2009
I 78-31-33	EXTENSION (CFM56-3) RING ASSEMBLY	333A1130	33	Jul 01/2009
I 78-31-37	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY -5, -6, -7, -8, -9, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24	315A2103	15	Jul 01/2009
I 78-31-37	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY	315A2104	15	Jul 01/2009
I 78-31-37	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY	315A2119	15	Jul 01/2009
I 78-31-37	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY	315A2124	15	Jul 01/2009
I 78-31-37	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY -1, -2, -3, -4, -5, -6, -7, -8, -9, -10, -11, -12, -13, -14, -15, -16, -17, -18, -20, -22, -23, -24, -25, -26, -27, -28, -29, -30, -31, -32, -33, -34	315A2130	15	Jul 01/2009
I 78-31-37	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY -1, -2, -3, -4, -5, -6, -7, -8, -9, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20	315A2150	15	Jul 01/2009
I 78-31-37	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY	315A2160	15	Jul 01/2009
I 78-31-37	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY	315A2170	15	Jul 01/2009
I 78-31-37	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY -1, -2, -3, -4, -5, -6, -7, -8, -9, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, -26, -27, -28, -29, -30, -31, -32	315A2171	15	Jul 01/2009



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
I 78-31-37	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY -1, -2, -3, -4, -5, -6, -7, -8, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, -26, -27, -28, -29, -30, -31, -32, -33, -34, -35, -36, -37, -38	315A2178	15	Jul 01/2009
I 78-31-37	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY	315A2180	15	Jul 01/2009
I 78-31-37	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY	315A2202	15	Jul 01/2009
I 78-31-37	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY	315A2210	15	Jul 01/2009
I 78-31-37	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY	315A2231	15	Jul 01/2009
I 78-31-37	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY	315A2232	15	Jul 01/2009
I 78-31-37	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY	315A2246	15	Jul 01/2009
I 78-31-37	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY	315A2300	15	Jul 01/2009
I 78-31-37	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY	315A2303	15	Jul 01/2009
I 78-31-37	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY	315A2330	15	Jul 01/2009
I 78-31-37	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY -1, -2, -3, -4, -5, -6, -7, -8, -9, -10, -11, -12, -13, -14	315A2401	15	Jul 01/2009
I 78-31-37	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY	315A2430	15	Jul 01/2009
I 78-31-37	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY	315A2503	15	Jul 01/2009
I 78-31-37	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY	315A2600	15	Jul 01/2009
I 78-31-37	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY	315A2707	15	Jul 01/2009
I 78-31-37	FAN DUCT COWL AND THRUST REVERSER ASSEMBLY	315A2711	15	Jul 01/2009



COMPONENT MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL REVISION DATE
I 78-31-40	FAN DUCT COWL AND THRUST REVERSER PARTS COLLECTOR	315A2295	10	Jul 01/2009
78-32-04	THRUST REVERSER LOCKOUT ACTUATOR ASSEMBLY	65-37988	1	Jul 01/2003
78-33-10	THRUST REVERSER DIRECTIONAL VALVE ASSEMBLY	65-37831	7	Nov 01/2000
78-33-11	THRUST REVERSER HYDRAULIC CONTROL VALVE ASSEMBLY	65-44531	7	Nov 01/1999
78-33-11	THRUST REVERSER HYDRAULIC CONTROL VALVE ASSEMBLY	65-73675	7	Nov 01/1999
I 78-34-03	FLOW CONTROL TEE ASSEMBLY	315A1802	11	Jul 01/2009
78-38-43	ENGINE TAILPIPE ASSEMBLY	65-70190	15	Mar 01/2003
78-38-43	ENGINE TAILPIPE ASSEMBLY	65-82788	15	Mar 01/2003
78-38-71	JT8D THRUST REVERSER TAILPLUG ASSEMBLY	65-27808	1	Jun 05/1991
78-38-71	JT8D THRUST REVERSER TAILPLUG ASSEMBLY	65-65919	1	Jun 05/1991