

NUMERICAL INDEX



757

ILLUSTRATED TOOL AND EQUIPMENT MANUAL

Subject/Page	Date	Subject/Page	Date	Subject/Page	Date
EFFECTIVE PAGES					
1	Sep 20/2008				
2	BLANK				
NUMERICAL INDEX					
O 1	Sep 20/2008				
O 2	Sep 20/2008				
O 3	Sep 20/2008				
O 4	Sep 20/2008				
O 5	Sep 20/2008				
O 6	Sep 20/2008				
O 7	Sep 20/2008				
O 8	Sep 20/2008				
O 9	Sep 20/2008				
O 10	Sep 20/2008				
O 11	Sep 20/2008				
O 12	Sep 20/2008				
O 13	Sep 20/2008				
O 14	Sep 20/2008				
O 15	Sep 20/2008				
O 16	Sep 20/2008				
O 17	Sep 20/2008				
O 18	Sep 20/2008				
O 19	Sep 20/2008				
20	BLANK				

A = Added, R = Revised, O = Overflow, D = Deleted

EFFECTIVE PAGES

Page 1
Sep 20/2008

D634N501



757

ILLUSTRATED TOOL AND EQUIPMENT MANUAL

<u>Part No.</u>	<u>Title</u>	<u>Subject</u>
A09003-1	LOCKPIN - NOSE GEAR TOWING LEVER	09-00-02
A10002-1	REMOVAL/INSTALLATION POLE - PITOT PROBE COVER	10-00-01
A20001-82, -83	BOOM HOIST - GENERAL	20-00-02
A20005-9	CLAMP - CONTROL CABLE	20-10-01
A20006-32	INSTALLATION SET - NAS1368 GROMMET	20-00-08
A20007-1	TEST TOOL - STRIPPING FORCE, WRAPPED WIRE CONNECTION	20-10-02
A20008-1	SOCKET SET - SPHERICAL BEARING	20-00-10
A20013-1	WORK TABLE - PILOT'S AISLE STAND	20-00-23
A21001-44, -45	HOIST ADAPTERS - AIR CONDITIONING PACK	21-50-01
A21004-1	TEST BOX - CURRENT SENSOR, FAN, ENVIRONMENTAL CONTROL SYSTEM	21-20-01
A21007-1	HOLD-OPEN ROD - RAM AIR DOOR, FLIGHT DISPATCH	21-50-02
A21008-2	HOLD OPEN SET - CABIN AIR OUTFLOW	21-30-04
A21010-57, -69, -70, -72	VACUUM TANK - PRESSURE RELIEF VALVE TEST	21-30-02
A22001-15, -22	REMOTE CONTROL UNIT - MAINTENANCE CONTROL DISPLAY PANEL	22-10-01
A22003-22	COMPONENT MAINTENANCE EQUIPMENT - AUTOTHROTTLE CLUTCH	22-30-01
A22004-1	CHECKING FIXTURE - AUTOTHROTTLE GEARBOX	22-30-02
A22005-1, -9	BREAKOUT BOX - AUTOMATIC TEST STATION (ATS) LOADBOARD YAW DAMPER MONITOR RECEIVER, PRINTED CIRCUIT ASSEMBLY (PCA)	22-20-03
A23001-1, -4, -8, -9	ACOUSTIC COUPLER - ATTENDANT'S HANDSET	23-40-06
A23003-29, -30, -41, -42	TEST BOX - PRINTED CIRCUIT CARD (PCA), AUDIO ACCESSORY UNIT	23-40-02
A23004-1	TEST BOX - INTERPHONE, FLIGHT ATTENDANT	23-40-01
A23006-45, -47	TEST BOX - AUDIO ACCESSORY UNIT	23-40-03
A23009-20, -31	TEST BOX - AUDIO SELECTOR PANEL	23-40-04
A23011-1	TEST BOX - POWER SUPPLY, AUDIO ACCESSORY UNIT	23-10-01
A24004-2	TEST RELAY - ISOLATION REQUEST, POWER DISTRIBUTION SYSTEM	24-20-01
A24005-1	LOAD BANK - DC GENERATION SYSTEM	24-30-01
A24008-19, -27, -37	TEST BOX - HYDRAULIC MOTOR GENERATOR, GENERATOR CONTROL UNIT	24-20-02
A25017-1	ADJUSTOR - FRICTION BALL CATCH	25-10-01
A25020-1, -4, -8	GAGE - INSPECTION, SEAT TRACK, FLIGHT CREW	25-20-01
A26001-165, -174, -187	ELECTRICAL TEST EQUIPMENT - BOTTLE SQUIB, FIRE EXTINGUISHER SYSTEM	26-20-01
A26002-54	TEST BOX - TIME DELAY, CARGO FIRE EXTINGUISHER BOTTLE	26-20-05

NUMERICAL INDEX



757

ILLUSTRATED TOOL AND EQUIPMENT MANUAL

<u>Part No.</u>	<u>Title</u>	<u>Subject</u>
A26003-7, -10	TEST EQUIPMENT - REGULATOR, CARGO FIRE EXTINGUISHING	26-20-03
A27021-29, -69, -97, -98	ADAPTER EQUIPMENT - CONTROL WHEEL	27-10-03
A27030-66	TEST BOX - POWER SUPPLY, CONTROL SYSTEM ELECTRONICS UNIT	27-00-03
A27035-1	ADAPTER - RUDDER/ELEVATOR FEEL ACTUATOR CYLINDER	27-30-13
A27036-16	TEST BOX - FLAP/SLAT ELECTRONIC UNIT (FSEU) POWER SUPPLY/ YAW DAMPER ELECTRO MAGNETIC INTERFERENCE (EMI) FILTER	27-50-15
A27038-1, -6, -10	BREAKOUT BOX - PRINTED CIRCUIT CARD	27-00-01
A27039-1, -19, -26, -27	BREAKOUT BOX - BENCH TEST	27-00-02
A27041-176	TEST EQUIPMENT - ELEVATOR FEEL AND CENTERING UNIT	27-30-12
A27044-53	TEST BOX - CONVERTER, CONTROL SYSTEM ELECTRONICS UNIT (CSEU) POWER SUPPLY	27-00-07
A27045-16	TEST BOX - NOISE, CONTROL SYSTEM ELECTRONICS UNIT (CSEU) POWER SUPPLY	27-00-04
A27052-1	TEST BOX - REGULATOR, CONTROL SYSTEM ELECTRONICS UNIT (CSEU) POWER SUPPLY	27-00-06
A27053-26, -29	TEST BOX - MONITOR, CONTROL SYSTEM ELECTRONICS UNIT (CSEU) POWER SUPPLY	27-00-05
A27059-1	BREAKOUT BOX - CHOPPER/REGULATOR/FILTER	27-00-08
A27063-88, -91	BREAKOUT BOX EQUIPMENT - POSITION SENSORS, FLIGHT CONTROLS RIGGING	27-00-10
A27081-1	READOUT AND CONTROL EQUIPMENT - FUNCTIONAL TEST STAND	27-00-12
A27083-1	TEST BOX - ANALOG PRINTED CIRCUIT, RUDDER RATIO	27-20-07
A27088-6, -13	LINK - DUMMY TRIM ACTUATOR, AILERON	27-10-07
A27092-84, -106	ACTUATOR/DEACTUATOR SET - PROXIMITY SENSORS	27-30-22
A27096-1	BREAKOUT BOX - SPOILER PANEL POSITION MONITOR AND RELAY CIRCUIT PRINTED CIRCUIT ASSEMBLY (PCA)	27-60-02
A27113-1	CHECK EQUIPMENT - BREAKOUT TORQUE, ELEVATOR CONTROLS OVERRIDE	27-30-21
A27124-1	FORCE EQUIPMENT - RUDDER FREEPLAY CHECK	27-20-12
A28003-1, -43	VENTILATION EQUIPMENT - FUEL TANK	28-10-06
A28004-1	CHECK FIXTURE - SURGE TANK PRESSURE RELIEF VALVE	28-10-05
A28005-42, -50, -53	TEST EQUIPMENT - LEAK AND PRESSURE, AUXILIARY POWER UNIT (APU) FUEL LINE SHROUD	28-20-06
A28006-2	TEST BOX - FUEL LEVEL SENSORS, SURGE TANK	28-20-04
A28007-41	TEST BOX - FUEL QUANTITY INDICATING SYSTEM (FQIS)	28-40-01
A28009-8, -13	EXTENDER BOARD - SURGE TANK FUEL LEVEL SENSOR	28-40-03
A29003-49	TOOL SET - OVERHAUL, HYDRAULIC FILTER	29-10-02
A29004-1	TOOL SET - OVERHAUL, HYDRAULIC FILTER	29-10-01
A29005-1	CAP - SEALING, PRESSURE TRANSMITTER MOUNT	29-10-06

NUMERICAL INDEX



757

ILLUSTRATED TOOL AND EQUIPMENT MANUAL

<u>Part No.</u>	<u>Title</u>	<u>Subject</u>
A29006-19	TEST EQUIPMENT - SWITCH, PRESSURE/THERMAL	29-10-05
A31003-33, -34	TEST BOX - POWER SUPPLY, WARNING ELECTRONIC UNIT (WEU)	31-50-01
A31004-1	BREAKOUT BOX - POWER SUPPLY AND MONITOR, WARNING ELECTRONICS UNIT (WEU)	31-50-04
A31005-1, -14	TEST BOX - NOISE, WARNING ELECTRONIC UNIT (WEU) POWER SUPPLY	31-50-02
A31006-7	SHORTING MODULE - MASTER WARNING PRINTED CIRCUIT ASSEMBLY	31-50-03
A31007-1, -30, -49, -59	ADAPTER CABLE - TESTER, DIGITAL FLIGHT RECORDER SYSTEM	31-30-01
A31008-1	TEST CABLE - WARNING ELECTRONIC UNIT (WEU) POWER SUPPLY	31-00-01
A31010-1	BREAKOUT BOX - POWER SUPPLY UNIT, WARNING ELECTRONICS UNIT (WEU)	31-00-02
A32008-52, -53	SLING EQUIPMENT - MAIN LANDING GEAR (MLG) COMPONENTS	32-10-11
A32015-9	REMOVAL/INSTALLATION TOOL - MAIN LANDING GEAR AND NOSE LANDING GEAR DOWNLOCK	32-00-05
A32027-53, -175, -176, -178	PUMP - RETRACTION/EXTENSION, LANDING GEAR ACTUATOR	32-30-03
A32035-1	WRENCH - STEERING ACTUATOR, NOSE LANDING GEAR (NLG)	32-20-15
A32038-23	TRANSPORTATION DOLLY - NOSE LANDING GEAR (NLG), 757 AND 767	32-20-04
A32045-19, -20, -23, -37, -38, -54, -62, -64, -83, -85, -90, -91	WRENCHES - SPANNER	20-00-20
A32057-10, -40	BUILDUP STAND - NOSE LANDING GEAR	32-20-11
A32066-1	DRAIN EQUIPMENT - SHOCK STRUT - MLG/NLG	12-10-02
A32074-1	BREAKOUT BOX - RELAY SYSTEM, AIR/GROUND	32-00-03
A32075-1, -9, -10	ADAPTER - ANTI-SKID TRANSDUCER SPIN-UP	32-40-04
A32080-1	BRAKE DISCONNECT - FLIGHT DISPATCH	32-40-05
A32091	HOLE SAW	20-00-13
A32102-1, -25	ACTUATOR SET - PROXIMITY SENSOR	32-60-01
A33001-1	TEST BOX - MASTER DIM AND TEST PRINTED CIRCUIT (PC) CARD	33-10-01
A33003-359	BREAKOUT BOX - MULTIPURPOSE	33-00-02
A33004-32	TEST BOX - AUTOBRIGHT SENSOR	33-00-01
A34003-1, -43, -46	TEST BOX - REAR MODULE AND CONTROL PANEL AIR TRAFFIC CONTROL (ATC)	34-50-03
A34004-27, -30	TEST BOX - FRONT MODULE, AIR TRAFFIC CONTROL (ATC)	34-50-06
A34005-1	TEST BOX - AUTOMATIC DIRECTION FINDER (ADF) FRONT MODULE ASSEMBLY	34-50-04
A34006-1, -21	TEST BOX - AUTOMATIC DIRECTION FINDER (ADF) CONTROL PANEL AND REAR MODULE	34-50-05

NUMERICAL INDEX



757

ILLUSTRATED TOOL AND EQUIPMENT MANUAL

<u>Part No.</u>	<u>Title</u>	<u>Subject</u>
A34007-33, -36	TEST BOX - REAR MODULE AND CONTROL PANEL, INSTRUMENT LANDING SYSTEM (ILS)	34-30-02
A34008-1	TEST BOX - FRONT MODULE, INSTRUMENT LANDING SYSTEM (ILS)	34-30-01
A34009-29	TEST BOX - REAR MODULE AND CONTROL PANEL, VERY HIGH FREQUENCY OMNIRANGE/DISTANCE MEASURING EQUIPMENT (VOR/DME)	34-50-01
A34010-21	TEST BOX - FRONT MODULE, VERY HIGH FREQUENCY OMNIRANGE/DISTANCE MEASURING EQUIPMENT (VOR/DME)	34-50-02
A34011-1, -112	BREAKOUT BOX EQUIPMENT - ARINC 600, LINE MAINTENANCE	34-00-01
A34012-1, -19, -24	TEST FIXTURE - ANGLE OF ATTACK (AOA)	34-10-01
A34013-1, -18	TEST BOX - CONTROL PANEL POWER SUPPLY	34-00-02
A34014-14	TEST BOX - POWER SUPPLY CONTROL PANEL	34-30-03
A34015-26, -27, -35	TEST BOX - POWER INTERRUPT/PULSE	34-50-07
A34016-1, -2, -5, -7, -8, -9, -10, -11, -16, -21, -22, -23, -24, -27, -28, -33, -34, -35	BREAKOUT BOX EQUIPMENT - ARINC 600, LINE MAINTENANCE	34-10-03
A35001-10	RETRACTION EQUIPMENT - FIRING PIN, OXYGEN SYSTEM	35-00-01
A36001-51	REMOVAL/INSTALLATION EQUIPMENT - ENGINE PRECOOLER	36-00-02
A36014-1	PRESSURE TEST EQUIPMENT - DUCT ASSEMBLY	36-10-09
A36016-1	PRESSURE TEST PLUG - DUCT ASSEMBLY	36-10-11
A38001-22, -68	VACUUM TEST EQUIPMENT - VACUUM WASTE SYSTEM	38-30-08
A38003-20	BLOCKAGE REMOVER - VACUUM TOILET	38-30-03
A38006-1	TESTER - TOILET VACUUM	38-30-07
A38007-1	PLUG, VACUUM WASTE SYSTEM	38-30-05
A38009-11	SENSOR CLEANER - LAVATORY WASTE TANK	38-30-11
A38011-2	PLUG EQUIPMENT - DRAIN MAST, WASTE WATER	38-30-01
A38012-1, -18	PUMP EQUIPMENT - VACUUM LAVATORY SYSTEM	38-30-09
A49001-3, -17, -73, -78, -83, -84	CRADLE - APU	49-00-07
A49002-1, -2	LIFTING EYE - APU GENERATORS AND STARTERS	24-20-03
A49003-1, -12	TRANSPORTATION DOLLY - AUXILIARY POWER UNIT	49-00-08
A49005-1	SLING - APU SHOP HANDLING	49-00-05
A52010-49, -51	CLAMP EQUIPMENT - SPRING INSTALLATION/REMOVAL, BULK CARGO DOOR	52-30-01
A52037-1	TEST BOX - FLIGHT DECK ACCESS SYSTEM (FDAS)	52-50-01
A53001-14	SLING - RADOME	53-10-01
A54008-1, -13	PULLER EQUIPMENT - FUSE PIN	54-10-01
A56001-15	SLING SET - NUMBER 1 AND 3 CABIN WINDOW	56-00-01
A71005-33	SLING EQUIPMENT - ENGINE INLET COWL	71-10-05

NUMERICAL INDEX



757

ILLUSTRATED TOOL AND EQUIPMENT MANUAL

<u>Part No.</u>	<u>Title</u>	<u>Subject</u>
A71013-19, -32, -55, -82	HOIST ADAPTER - INTEGRATED DRIVE GENERATOR (IDG)	71-00-09
A71015-107	LIFT FIXTURE - ENGINE ACCESSORY	71-00-08
A71016-1	SLING EQUIPMENT - CORE COWL	71-10-03
A71040	FLUSH CART SPECIFICATION - INTEGRATED DRIVE GENERATOR (IDG) COOLING SYSTEM	71-00-23
A71042-1, -2, -29	GUARD - INLET, ENGINE RUN-UP	12-10-03
A76001-1	TEST FIXTURE - THRUST LEVER, CONTROL STAND	76-10-01
A77001-1	TEST BOX - POWER SUPPLY, ELECTRONIC ENGINE CONTROL MONITOR	77-30-01
A78002-1	THREAD PROTECTOR EQUIPMENT - THRUST REVERSER INSTALLATION AND REMOVAL	78-00-01
A78019-21	HAND PUMP - OPENING SYSTEM, THRUST REVERSER	78-30-24
A78025-1, -77	BREAKOUT BOX - TEST, THRUST REVERSER	78-30-34
AA1364	ALIGNMENT FIXTURE	32-40-07
AKS-36331	CRIMPING TOOL	29-20-05
B07001-7	JACKING ADAPTER - FORWARD BODY	07-00-02
B07002-1	JACKING ADAPTER - AIRPLANE STABILIZATION	07-00-05
B07003-1, -13, -15	JACKING BAR SET - MAIN LANDING GEAR AXLE	07-00-03
B07004-1, -12	JACKING BAR SET - NOSE LANDING GEAR AXLE	07-00-06
B07005-1	TETHER ATTACHMENT FITTINGS - STRUT AIRPLANE RECOVERY	07-20-01
B07008-1	JACKING BAR EQUIPMENT-MAIN LANDING GEAR AXLE	07-00-07
B09001	DATA SHEET - 757 TOWBAR	09-00-01
B12004-1	RECEPTACLE - FUEL SAMPLING	12-10-01
B12006-1	ADAPTER - LUBRICATION, SPOILER OUTER HINGE LINK ASSEMBLY	12-20-02
B12007-35, -37	LADDER ASSEMBLY - ACCESS DOOR, E/E BAY	12-00-03
B20001-5	ATTACH LANYARD - WING/HORIZONTAL STABILIZER SAFETY HARNESS	20-00-06
B20002-1	TORQUE ADAPTER - SOCKET TYPE	27-00-11
B20003-83, -84, -88, -91	SET - RIG PIN	20-00-07
B20004-21	LEVERAGE ADAPTER - ACCESS PANEL	20-00-09
B20005-41, -52, -75, -82	TEST EQUIPMENT - VELOCITY/POSITION TRANSDUCER	20-00-12
B21001-1	CLAMP - HOLD OPEN UNPRESSURIZED FLIGHT RELIEF VALVE	21-30-01
B21003-1	JUMPER TEST WIRE - ENGINE SPEED CARD (ENGINE RUN SIMULATION)	77-10-02
B21005-1, -10	CLEANING WAND EQUIPMENT - HEAT EXCHANGER	21-50-03
B22001-1	JIG EQUIPMENT - AUTO THROTTLE	22-30-03
B22002-1	BREAKOUT BOX - YAW DAMPER ELECTROMAGNETIC INTERFERENCE (EMI) FILTER	22-20-01
B22003-39	TEST EQUIPMENT - AUTOTHROTTLE CLUTCH	22-30-05

NUMERICAL INDEX



757

ILLUSTRATED TOOL AND EQUIPMENT MANUAL

<u>Part No.</u>	<u>Title</u>	<u>Subject</u>
B23001-1, -6	EXTENDER BOARD - AUDIO ACCESSORY UNIT ASSEMBLY	23-40-05
B24001-91, -93, -119, -120	HOIST EQUIPMENT - MAIN BATTERY	24-00-01
B24002-1	TEST BOX - TIME DELAY RELAY 10 SECOND DROPOUT	24-00-02
B25001-1	TEST BOX - OFF-WING ESCAPE SYSTEM	25-60-02
B25002-37	FUNCTIONAL TEST EQUIPMENT - ADAPTER, OFF WING ESCAPE SLIDE	25-60-01
B25003-1	REMOVAL/INSTALLATION TOOL - AFT GALLEY G4B AIR CHILLER	25-30-01
B26001-1	TEST EQUIPMENT - ENGINE AND APU FIRE DETECTION SYSTEM (GRAVINER)	26-10-01
B26002-1	TEST EQUIPMENT - DISCHARGE LINE CARGO FIRE EXTINGUISHER	26-20-04
B26003-1, -2, -3	TEST EQUIPMENT - ENGINE FIRE EXTINGUISHER	26-20-02
B26004-1	TEST BOX - AUTOMATIC FIRE/OVERHEAT LOGIC TEST SYSTEM (AFOLTS) PRINTED CIRCUIT ASSEMBLY (PCA)	26-10-04
B27001-1, -33, -40, -51	RIGGING EQUIPMENT - LEADING EDGE SLAT, INBOARD/ OUTBOARD	27-80-02
B27005-35	SLING EQUIPMENT - RUDDER	27-20-03
B27006-65	HOIST EQUIPMENT - POWER DRIVE UNIT (PDU), LEADING EDGE SLATS, REMOVAL/INSTALLATION	27-80-01
B27007-15	LOCK - SET, SPOILER ACTUATOR	27-60-01
B27008-1	LOCK - TRAILING EDGE FLAP, POWER DRIVE UNIT	27-50-01
B27009-12	LOCK-OUT EQUIPMENT - POWER CONTROL ACTUATOR, ELEVATOR	27-30-01
B27010-5	LOCK - AILERON ACTUATOR	27-10-01
B27011-79	INSTALLATION/REMOVAL EQUIPMENT - HORIZONTAL STABILIZER JACKSCREW	27-40-01
B27012-1	REMOVE/INSTALL SLING EQUIPMENT - AILERON	27-10-02
B27013-19, -20	LOCK EQUIPMENT - RUDDER POWER CONTROL UNIT	27-20-02
B27014-20	LOCK EQUIPMENT - OUTBOARD TRAILING EDGE FLAP	27-50-02
B27016-37	LOCK EQUIPMENT - INBOARD TRAILING EDGE FLAP	27-50-03
B27017-1	TEST BOX - POWER SUPPLY, FLAP SLAT ELECTRONIC UNIT (FSEU)	27-50-09
B27018-19	BREAKOUT BOX - POWER SUPPLY, FLAP/SLAT ELECTRONICS UNIT/CONTROL SYSTEM ELECTRONICS UNIT (FSEU/CSEU)	27-00-09
B27019-10	SLING EQUIPMENT - LEADING EDGE SLAT	27-80-03
B27020-29, -31	LOCK SET - LEADING EDGE SLAT DRIVE	27-80-04
B27021-1	REMOVAL/INSTALLATION SLING - ELEVATOR	27-30-02
B27022-4, -16	HOLDING TOOL - ELEVATOR CABLE TENSION REGULATOR RIGGING	27-30-04
B27023-47	RIGGING BLOCK EQUIPMENT - ELEVATOR AFT QUADRANT	27-30-05
B27024-1	REMOVAL/INSTALLATION FIXTURE - NEUTRAL SHIFT ROD SPRING	27-30-03
B27025-42	SLING EQUIPMENT - INBOARD/OUTBOARD AFT FLAP	27-50-04

NUMERICAL INDEX



757

ILLUSTRATED TOOL AND EQUIPMENT MANUAL

<u>Part No.</u>	<u>Title</u>	<u>Subject</u>
B27026-60	SLING - TRAILING EDGE FLAPS, INBOARD, OUTBOARD	27-50-06
B27027-1	PRESSURE FITTING - FLAP TRANSMISSION, TRAILING EDGE	27-50-05
B27028-1	TEST EQUIPMENT - TORQUE LIMITER, TRANSMISSION TRAILING EDGE FLAP	27-50-07
B27029-1	LUG SPANNER - TORQUE ADAPTER, RUDDER JACKSHAFT	27-20-04
B27030-125	RIGGING BAR EQUIPMENT - INBOARD AND OUTBOARD FLAPS	27-50-12
B27031-16	CHECKING FIXTURE - ELEVATOR POGO ROD ASSEMBLY	27-30-06
B27032-9	COMPRESSOR - ELEVATOR PCU POGO ROD	27-30-07
B27033-1	TORQUE ADAPTER - AILERON POWER CONTROL UNIT INSTALLATION	27-10-04
B27034-1	CHECKING EQUIPMENT - JACKSCREW BACKLASH, HORIZONTAL STABILIZER	27-40-02
B27035-63	TEST EQUIPMENT - TRAILING EDGE FLAP TRANSMISSION, AFT U- JOINT AND BALLSCREW	27-50-13
B27036-1	TEST EQUIPMENT - ANGLE GEARBOX, LEADING EDGE SLAT DRIVE	27-80-07
B27037-1	FIXTURE - TRAILING EDGE FLAP TRANSMISSION TORQUE LIMITER	27-50-08
B27038-1, -13, -26, -37	TEST AND OVERHAUL EQUIPMENT - ANGLE TEE GEARBOX, TRAILING EDGE FLAP	27-50-10
B27039-13	RIGGING EQUIPMENT - ELEVATOR AND STABILIZER TRIM SYSTEMS CONTROL INSTALLATION	27-30-08
B27040-1	RIGGING BUSHING - ELEVATOR CONTROL CRANK AND SHAFT ASSEMBLY	27-30-09
B27042-1	OVERHAUL AND TEST EQUIPMENT - OUTBOARD TEE GEARBOX, INBOARD FLAP	27-50-11
B27043-1	JIG EQUIPMENT - ELEVATOR FEEL AND CENTERING UNIT	27-30-11
B27045-5, -12	HANDLE - OUTPUT ARM, RUDDER RATIO CHANGER	27-20-05
B27046-6	SWAGING TOOL - RUDDER CONTROLS RATIO CHANGER SHEAR PIN	27-20-06
B27047-1	PIN PULLER SET - STABILIZER TRIM TRUNNION	27-40-03
B27049-1	RIGGING BEAM - CONTROL WHEELS	27-10-05
B27050-28	TOOL SET - STABILIZER TRIM DRIVE	27-40-05
B27051-1	SLEEVE - SEAL PROTECTOR, BULL GEAR, HORIZONTAL STABILIZER TRIM	27-40-04
B27052-70	TEST EQUIPMENT - STABILIZER TRIM DRIVE MECHANISM	27-40-06
B27053-1	FIXTURE - SPRING INSTALLATION AND REMOVAL, RUDDER NEUTRAL SHIFT ROD	27-20-08
B27054-14	BLOCK - AILERON PCU LEAK TEST	27-10-06
B27055-1	CLAMP SET - TRAILING EDGE FLAP TORQUE TUBE	27-50-17
B27060-1	SPRING REMOVAL/INSTL SET - DECENTERING, ELEVATOR CONTROLS	27-30-15

NUMERICAL INDEX



757

ILLUSTRATED TOOL AND EQUIPMENT MANUAL

<u>Part No.</u>	<u>Title</u>	<u>Subject</u>
B27061-1	TEST BOX - RUDDER/ELEVATOR PCU MONITOR SYSTEM	27-30-17
B27062-1	TEST FIXTURE - SHEAR LEVER, ELEVATOR PCU	27-30-16
B27063-1, -10	CABLE TENSION RELIEF HOLDER - ELEVATOR CABLE TENSION REGULATOR	27-30-10
B27064-1, -2	TORQUE EQUIPMENT - RUDDER PEDAL ADJUSTMENT	27-20-09
B27065-1, -2, -9, -12	LOCK SET - CIRCUIT BREAKER	27-00-13
B27066-36	SLING EQUIPMENT - RUDDER	27-20-10
B27067-1	SLING EQUIPMENT - TRAILING EDGE FLAP POWER DRIVE UNIT REMOVAL/INSTALLATION	27-50-18
B27068-1	TEST EQUIPMENT - ELEVATOR CONTROL NEUTRAL SHIFT SPRING	27-30-19
B27069-1	SOCKET SET - SLEEVE RETAINER NUT, HORIZONTAL STABILIZER, FIXED TRAILING EDGE	27-30-23
B27070-1	ALIGNMENT PIN - FEEL ACTUATOR PISTON	27-30-18
B27071-34, -51	TEST BOX - ELEVATOR HARDOVER TEST	27-30-20
B27072-1	ADAPTER KIT - OUTBOARD/AFT, FLAP SLING	27-50-21
B27073-1	LOCKOUT TOOL - OUTBOARD SLAT	27-80-06
B27074-1	HARNESS ASSEMBLY - BALLSCREW, INBOARD TRAILING EDGE FLAP	27-50-22
B27075-1, -20	HOIST ADAPTER - INSTALLATION/REMOVAL, FLAP TRACK	27-50-24
B27076-6	PRESSURE GAGE - DEPRESSURIZATION MODULE PRIORITY VALVE, FLAP/SLAT	27-50-23
B27077-1	LOCK - LEADING EDGE SLAT DRIVE	27-80-05
B27078-1	SLING EQUIPMENT - TRAILING EDGE FLAPS	27-50-27
B27079-19	TEST BOX - POWER SUPPLY, CONTROL SYSTEM ELECTRONICS UNIT (CSEU)	27-00-15
B28001-1	ADAPTER - SUMP DRAIN VALVE, REMOVAL/INSTALLATION	28-20-01
B28002-1	HOSE ADAPTER - SUMP FUEL DRAIN	12-10-04
B28003-1	PULLER - MAIN TANK BOOST PUMP ASSEMBLY	28-20-02
B28004-1	SOCKET - INSTALLATION/REMOVAL, COLLIMATOR SLEEVE	28-40-02
B28005-1	PRESSURE PLUG EQUIPMENT - FUEL SYSTEM	28-10-08
B28007-1, -2	PRESSURE TEST ADAPTERS - ENGINE FUEL FEED	28-20-05
B28008-10	PRESSURIZATION EQUIPMENT - WING DRY BAY, FUEL LEAK DETECTION	28-10-11
B28009-1	ALIGNMENT EQUIPMENT - FUEL SHUTOFF VALVE	28-20-03
B28010-1, -2	WRENCH KIT - AUXILIARY FUEL TANK	28-10-15
B29001-23, -46	SCREEN EQUIPMENT - RAM AIR TURBINE	29-20-10
B29002-1	LOCK SET - RESERVOIR VENT VALVE	29-10-03
B29003-8	OVERHAUL EQUIPMENT - HYDRAULIC FILTER, PRESSURE AND RETURN MODULE	29-10-04

NUMERICAL INDEX



757

ILLUSTRATED TOOL AND EQUIPMENT MANUAL

<u>Part No.</u>	<u>Title</u>	<u>Subject</u>
B29004-1	INSTALLATION TOOL - CONNECTOR RETAINER MANIFOLD	29-20-04
B29005-17	SIMULATOR - YAW DAMPER MODULE	22-20-02
B29006-1	SIMULATOR - YAW DAMPER/STABILIZER TRIM MODULE	27-20-11
B30001-7	TEST EQUIPMENT - WINDSHIELD RAIN REPELLENT SYSTEM	30-40-01
B30002-1	CLEANING TANK ASSEMBLY - WINDSHIELD RAIN REPELLENT SYSTEM	30-40-02
B31001-1	CABLE - ADAPTER, BUS ANALYZER, ARINC 429	31-30-02
B32001-1, -4	DOWNLOCK - MAIN LANDING GEAR (MLG) AND NOSE LANDING GEAR (NLG)	32-00-01
B32002-1	EXTENDER - DOWNLOCK SPRING, MAIN LANDING GEAR AND NOSE LANDING GEAR (MLG AND NLG)	32-20-01
B32003-1	PIN PULLER - TRUNNION, NOSE LANDING GEAR (NLG)	32-20-02
B32004-1	HOIST ADAPTER - DRAG STRUT, NOSE LANDING GEAR (NLG)	32-20-03
B32005-67, -68	OVERHEAD INSTALLATION/REMOVAL EQUIPMENT - NOSE LANDING GEAR	32-20-05
B32006-13	LINK - SHOCK STRUT POSITIONER, MAIN LANDING GEAR (MLG)	32-10-02
B32007-1	SLING EQUIPMENT - RETRACT ACTUATOR, NOSE LANDING GEAR (NLG)	32-30-01
B32008-1	HOIST ADAPTER - RETRACT ACTUATOR, MAIN LANDING GEAR (MLG)	32-30-23
B32009-1	STRUT - HOLD OPEN, NOSE LANDING GEAR DOOR	32-20-06
B32010-1, -2, -14, -15	CHANGE EQUIPMENT - WHEEL AND BRAKE, MAIN LANDING GEAR (MLG)	32-10-04
B32011-14	THREAD PROTECTOR SET - MAIN LANDING GEAR (MLG) COMPONENTS	32-10-05
B32012-45	LOCK EQUIPMENT - DOOR ACTUATOR, MAIN LANDING GEAR (MLG)	32-30-02
B32013-12, -17	LOCK - DOOR ACTUATOR, NOSE LANDING GEAR	32-20-07
B32015-38	HOISTING ADAPTER SET - MAIN LANDING GEAR COMPONENTS	32-10-07
B32016-13	BRAKE PULLER - MAIN LANDING GEAR	32-40-01
B32017-1	STRUT - HOLD OPEN, MAIN LANDING GEAR (MLG) DOOR	32-30-22
B32018-1	ALIGNMENT PIN - TRUNNION LINK TO STRUT, MAIN LANDING GEAR (MLG)	32-10-09
B32019-1	RESTRAINT - SHOCK STRUT, NOSE LANDING GEAR	32-20-08
B32020-1, -33, -40, -45	INSTALLATION/REMOVAL EQUIPMENT - MAIN LANDING GEAR	32-10-12
B32021-1	AXLE PROTECTOR - NOSE LANDING GEAR (NLG)	32-20-09
B32022-1, -6	BRAKE DISCONNECT - FLIGHT DISPATCH	32-40-02
B32023-1	SLING - SHOP HANDLING, NOSE LANDING GEAR	32-20-10
B32024-82	PULLER EQUIPMENT - LOWER BEARING SEAL RETAINER, NOSE LANDING GEAR (NLG)	32-20-12

NUMERICAL INDEX



757

ILLUSTRATED TOOL AND EQUIPMENT MANUAL

<u>Part No.</u>	<u>Title</u>	<u>Subject</u>
B32025-75, -78	PULLER EQUIPMENT - LOWER BEARING SEAL RETAINER, MAIN LANDING GEAR (MLG)	32-10-13
B32026-1	FIXTURE - STAKING, ACTUATOR, NOSE LANDING GEAR LOCK	32-30-04
B32027-1	SOCKET SET - TRUNNION BEARING RETENTION NUTS	57-50-01
B32028-1, -21	LOCK EQUIPMENT - SHOCK STRUT, MAIN LANDING GEAR (MLG)	32-10-23
B32029-1	SUPPORT - TRUNNION LINK, MAIN LANDING GEAR (MLG)	32-10-14
B32030-1	FIXTURE - LOCK ACTUATOR, OVERHAUL EQUIPMENT, NOSE LANDING GEAR (NLG)	32-30-05
B32031-1	TORQUING EQUIPMENT - RETRACT ACTUATOR, NOSE LANDING GEAR (NLG)	32-30-08
B32032-1	TEST EQUIPMENT - NOSE WHEEL STEERING DRUM MECHANISM	32-50-01
B32033-1	WRENCH EQUIPMENT - ALTERNATE LOCKUP RELEASE, ACTUATOR LOCK RING, MAIN LANDING GEAR (MLG)	32-30-06
B32034-1	WRENCH EQUIPMENT - ALTERNATE UPLOCK RELEASE ACTUATOR, LOCK RING, NOSE LANDING GEAR (NLG)	32-30-07
B32035-10	INSTALLATION TOOL SET - RETAINER NUT, ANTI-SKID TRANSDUCER	32-40-03
B32036-1	ADAPTER - ACTUATOR, LANDING GEAR TRUCK POSITIONER	32-30-09
B32037-1	TEST EQUIPMENT - UPLOCK ASSEMBLY, MAIN LANDING GEAR (MLG)	32-30-10
B32038-1	EXTENDER - UPLOCK SPRING, MAIN LANDING GEAR (MLG)	32-30-11
B32039-134, -135	FIXTURE - FUNCTIONAL TEST, RETRACT ACTUATOR, LANDING GEAR	32-30-12
B32040-1, -35, -36, -37	BUILD-UP EQUIPMENT - ACTUATOR, NOSE GEAR STEERING	32-50-02
B32041-1	TEST FIXTURE - TRUCK POSITION ACTUATOR, MAIN LANDING GEAR	32-30-13
B32043-1	HANDLING EQUIPMENT - MAIN LANDING GEAR (MLG) DOOR AND AIR CONDITIONING DOOR	32-10-15
B32044-12	PULLER EQUIPMENT - STRUCTURAL FUSE PIN, MAIN LANDING GEAR (MLG)	32-10-16
B32045-1, -11	LOCATING FIXTURE - VALVE, GEAR OPERATED SEQUENCE, NOSE LANDING GEAR (NLG)	32-30-14
B32046-1	ALIGNMENT PIN - MAIN LANDING GEAR (MLG) AXLE AND TOW FITTING	32-10-17
B32048-1	EQUIPMENT - SHOCK STRUT BUILDUP, MAIN LANDING GEAR (MLG)	32-10-18
B32049-6	PIN SET - MAIN NOSE LANDING GEAR (NLG) AND MAIN LANDING GEAR (MLG) DOWNLOCK	32-00-04
B32050-1, -50	ASSEMBLY FIXTURE - MAIN LANDING GEAR (MLG)	32-10-19
B32051-1	SPRING EXTENDER - LOCK RELEASE ACTUATOR, MAIN LANDING GEAR (MLG) AND NOSE LANDING GEAR (NLG) DOOR	32-30-15

NUMERICAL INDEX

Page 10
Sep 20/2008

D634N501



757

ILLUSTRATED TOOL AND EQUIPMENT MANUAL

<u>Part No.</u>	<u>Title</u>	<u>Subject</u>
B32052-1	INSTALLATION/REMOVAL EQUIPMENT - ORIFICE, NOSE LANDING GEAR (NLG) SHOCK STRUT	32-20-13
B32053-1	CONTOUR TEMPLATE - NOSE LANDING GEAR (NLG) DOOR	32-20-14
B32054-1	ADAPTER - UPLOCK, MAIN LANDING GEAR (MLG)	32-30-16
B32055-1	INSTALLATION EQUIPMENT - GLAND NUT, SHOCK STRUT, MAIN LANDING GEAR	32-10-20
B32057-1	OVERHAUL EQUIPMENT - RETRACT ACTUATOR ASSEMBLY, MAIN LANDING GEAR (MLG)	32-30-17
B32058-27	ALIGNMENT EQUIPMENT - BRAKE ROTOR, MAIN LANDING GEAR (MLG)	32-40-06
B32059-15	PULLER EQUIPMENT - AXLE SLEEVE, MAIN LANDING GEAR (MLG)	32-30-18
B32060-1	DRILL JIG - AXLE SLEEVE	32-30-19
B32061-1	SPRING COMPRESSION EQUIPMENT - NOSE WHEEL STEERING CONTROL	32-50-03
B32062-1	TORQUE EQUIPMENT - SEQUENCE VALVE/BYPASS VALVE NOSE LANDING GEAR (NLG)	32-30-20
B32063-1	TEST FIXTURE EQUIPMENT - AUTOBRAKE ACTUATOR	32-40-08
B32064-1	RIGGING FIXTURE - MAIN LANDING GEAR DOOR OPERATED SEQUENCE VALVE ASSEMBLY	32-30-24
B32065-1	TEST FIXTURE - MAIN LANDING GEAR DOWNLOCK ACTUATOR	32-10-21
B32066-1	ROLLER SWAGING AND REMOVAL EQUIPMENT - BEARING	32-20-16
B32067-1	WRENCH ADAPTER - NOSE WHEEL STEERING TILLER HANDLE	32-50-04
B32068-1, -33	SLING - MAIN LANDING GEAR HANDLING	32-10-22
B32069-8	LOCKOUT PIN - FORWARD AND AFT LOCK LINK, RETRACTABLE TAIL SKID	32-70-01
B34001-1	TEST FIXTURE - POWER SUPPLY CARDS/CONTROL PANEL ASSEMBLY	34-50-08
B36001-1	PLATFORM - PRECOOLER, INSTALLATION AND REMOVAL, RB211 ENGINE	36-00-01
B36002-1	PLUG EQUIPMENT - AIR CONDITIONING SYSTEM	36-10-01
B36003-1	LEVERAGE EQUIPMENT - INSTALLATION/REMOVAL, PNEUMATIC DUCT, ENGINE STRUT	36-10-02
B36004-1	PLUG EQUIPMENT - PRESSURE TEST, LOW PRESSURE DUCTS	36-10-03
B36005-2, -3, -4	PLUG EQUIPMENT - DUCT TEST	36-10-08
B36007-1	REMOVAL/INSTALLATION EQUIPMENT - PRECOOLER, RB211-535 ENGINES	36-00-03
B36008-1	REMOVAL/INSTALLATION EQUIPMENT - PRECOOLER, PW2000 ENGINE	36-00-04
B49001-1, -35	FRAME - AUXILIARY POWER UNIT (APU) INSTALLATION AND REMOVAL	49-00-01

NUMERICAL INDEX

Page 11
Sep 20/2008

D634N501



757

ILLUSTRATED TOOL AND EQUIPMENT MANUAL

<u>Part No.</u>	<u>Title</u>	<u>Subject</u>
B49002-64	MAINTENANCE/TRANSPORTATION STAND - AUXILIARY POWER UNIT (APU)	49-00-02
B49003-1, -10	HANDLING SLING - AUXILIARY POWER UNIT (APU)	49-00-03
B49004-1	SUPPORT EQUIPMENT - AUXILIARY POWER UNIT (APU)	49-00-04
B49006-1	DISPATCH KIT - APU GENERATOR (REMOVED)	49-00-06
B52001-1	SLING - PASSENGER DOOR	52-00-01
B52002-1	SLING - MAIN CARGO DOOR	52-30-08
B52003-15	SAFETY BARRIER - PASSENGER DOOR	52-10-01
B52004-1	INSTALLATION TOOL - DOOR SEAL	52-00-02
B52005-19	SAFETY BARRIER - CARGO DOOR, FORWARD OR AFT	52-30-02
B52006-1	SAFETY BARRIER - ELECTRICAL/ELECTRONIC ACCESS DOOR	52-40-01
B52007-1	TEST FIXTURE - PASSENGER DOOR LATCHING MECHANISM	25-60-03
B52008-1	ADAPTER - CLOCKING, NUMBER 1 AND 2 CARGO DOOR ROTARY ACTUATOR	52-30-03
B52009-1	SAFETY PIN SET - EMERGENCY POWER SYSTEM, ENTRY DOOR	52-10-03
B52010-1	FIXTURE - BACKLASH, NUMBER 1 & 2 DOOR MANUAL DRIVE GEARBOX ASSEMBLY	52-30-04
B52011-1	SAFETY BARRIER - NUMBER 3 CARGO DOOR	52-30-05
B52012-1	WRENCH - GUIDE ARM INSTALLATION/REMOVAL, PASSENGER DOOR	52-10-04
B52013-6	SUPPORT ASSEMBLY - NUMBER 3 EMERGENCY DOOR	52-20-01
B52014-1	REPLACEMENT EQUIPMENT - BULK CARGO DOOR	52-30-06
B52015-9	SAFETY BARRIER - NUMBER 3 EMERGENCY EXIT DOOR	52-20-03
B52016-1	SLING - MAIN CARGO DOOR	52-30-07
B52017-1	COMPRESSOR - SPRING, PASSENGER DOOR COUNTERBALANCE	52-10-06
B52018-1	SLING - CREW ENTRY DOOR	52-10-09
B52019-14	SAFETY BARRIER - CREW ENTRY DOOR	52-10-08
B52020-1	ROTATION EQUIPMENT - MAIN CARGO DOOR LATCHES	52-30-11
B52021-1	WRENCH - THRUST COLLAR	52-10-10
B52022-21	MEASUREMENT TOOL - EMERGENCY POWER RESERVOIR, CABLE TRAVEL	52-20-02
B52023-1, -5	SPANNER WRENCH, HINGE NUT, NUMBER 1, 2 AND 4 DOORS	52-10-11
B52026-1, -2	SERVICE PLATFORMS - ELEVATOR/SERVICE ACCESS DOOR	52-40-02
B52027-1	RIGGING SIMULATOR - ESCAPE SLIDE, PASSENGER DOOR	52-10-13
B52028-1	CANOPY EQUIPMENT - NUMBER 2 LEFT HAND PASSENGER ENTRY DOOR	52-10-14
B54001-30	HYDRAULIC PUMP - ENGINE "C" DUCT	78-30-33
B54002-41, -52	SLING EQUIPMENT - STRUT, RB211-535 ENGINE	54-00-02
B54003-8	PRELOAD FIXTURE - STRUT, RB211-535 ENGINE STRUT	54-00-03

NUMERICAL INDEX

Page 12
Sep 20/2008

D634N501



757

ILLUSTRATED TOOL AND EQUIPMENT MANUAL

<u>Part No.</u>	<u>Title</u>	<u>Subject</u>
B54004-13	PRELOAD FIXTURE EQUIPMENT - STRUT, PW2000 SERIES ENGINES	54-50-01
B54005-35	SLING - STRUT, PW2000 ENGINES	54-50-02
B54006-1, -12	ALIGN FIXTURE - NACELLE SIDE LINK	54-50-03
B54007-1	DRILL JIG - NACELLE SIDE LINK	54-50-07
B54008-1, -2	ALIGN FIXTURE - NACELLE DIAGONAL BRACE	54-50-04
B54009-19	SLING - RB211-535 ENGINE	54-50-14
B54010-30	DRILL JIG - NACELLE DIAGONAL BRACE, RB211-535	54-50-05
B54011-1	DRILL JIG - NACELLE DIAGONAL BRACE, PW2000	54-50-06
B54012-1	JIG EQUIPMENT - SIDE LINK, STRUT	54-50-08
B54013-38, -48	SLING EQUIPMENT - DIAGONAL BRACE UNLOAD, PW2000 SERIES ENGINE	54-50-15
B54014-1	GREASE REMOVER - MIDSPAR FUSE PIN	54-50-09
B54015-1	TORQUE WRENCH - MIDSPAR FUSE PIN IMMOBILIZER	54-50-10
B54017-22	SLING EQUIPMENT - FUSE PIN, REMOVAL/INSTALLATION - RB211-535 ENGINE	54-50-11
B54018-29, -42, -44, -45	REMOVAL/INSTALLATION KIT - FUSE PIN	54-50-12
B54019-23, -24, -40, -41	ADAPTER EQUIPMENT - STRUT UNLOAD, FORWARD ENGINE MOUNT	54-50-13
B55001-31	SLING EQUIPMENT - VERTICAL STABILIZER	55-30-01
B55002-15	SUPPORT EQUIPMENT - HORIZONTAL STABILIZER	55-10-01
B55003-27	TOOL SET - HORIZONTAL STABILIZER HINGE BEARING	55-10-02
B57001-1, -23	INSTALLATION/REMOVAL EQUIPMENT - TORQUE TUBE, INBOARD TRAILING EDGE FLAP	27-50-16
B57002-1	EXTRACTION TOOL - CLAMP-UP BUSHING, AFT FLAP SUPPORT	27-50-19
B57003-3, -4, -33, -34	ADAPTER EQUIPMENT - TRUNNION BEARING AND MOUNT, MAIN LANDING GEAR (MLG) INSTALLATION AND REMOVAL	57-50-03
B57005-1	SOCKET ASSEMBLY - RETENTION NUT, ACTUATOR SUPPORT, MAIN LANDING GEAR (MLG) BEAM	57-50-04
B57006-1	REMOVAL/INSTALLATION EQUIPMENT - FLUTTER WEIGHTS	57-20-01
B71001-313, -365, -366	ENGINE HANDLING EQUIPMENT - RB211-535	71-00-01
B71003-1	SLING EQUIPMENT - ENGINE NOSE COWL, RB211-535	71-00-02
B71005-48, -49, -50, -51, -52, -53	TOOL SET - RB211-535 ENGINE CHANGE	71-00-03
B71006-79	HOLD OPEN EQUIPMENT - 'C' DUCT RB211-535 ENGINE	78-30-01
B71007-1, -83, -117, -127	CRADLE - RB211-535 ENGINE	71-00-35
B71008-1	PROOF LOAD EQUIPMENT - RB211-535 ENGINE	71-00-04
B71009-1, -9	LOCK - 'C' DUCT ACTUATOR, RB211-535 ENGINE	71-00-05
B71010-1	PROOF LOAD FIXTURE - RB211-535 ENGINE CRADLE	71-00-06

NUMERICAL INDEX

Page 13
Sep 20/2008

D634N501



757

ILLUSTRATED TOOL AND EQUIPMENT MANUAL

<u>Part No.</u>	<u>Title</u>	<u>Subject</u>
B71011-1	SAFETY ROD - "C" DUCT, RB211-535C	71-00-31
B71013-1	SLING - RB211-535 ENGINE FAN COWL	71-10-02
B71014-5, -98, -150, -151, -152, -155	HANDLING FRAME EQUIPMENT - "C" DUCT, RB211-535 ENGINE	78-30-27
B71015-1	SLING - RB211-535 ENGINE	71-00-07
B71016-1	HOIST/TRANSPORTER - THRUST REVERSER AND FAN COWL	78-30-30
B71017-15	PROOF LOAD FIXTURE - RB211-535 "C" DUCT FRAME	78-30-28
B71018-28	HANDLING FIXTURE - HIGH SPEED GEARBOX, RB211-535	72-00-01
B71019	REFERENCE INFORMATION - RB211-535 ENGINE HANDLING EQUIPMENT	71-00-18
B71020-39, -74	HOLD OPEN EQUIPMENT - THRUST REVERSER/CORE COWL, PRATT AND WHITNEY ENGINE	71-10-04
B71021-1	PROOF LOAD FIXTURE - ENGINE HANDLING EQUIPMENT, PW2000 SERIES	71-00-14
B71022-172	ENGINE HANDLING EQUIPMENT - PW2000 SERIES	71-00-15
B71023-88	SLING - THRUST REVERSER, PW2000 SERIES ENGINES	78-30-04
B71024-35, -36	TOOL SET - ENGINE CHANGE, PW2000 SERIES	71-20-01
B71025-9	SAFETY ROD - RB211-535E4 "C" DUCT	71-00-32
B71026-1	PROOF LOAD FIXTURE - THRUST REVERSER SLING, PW2000	78-30-06
B71027-1	SLING - ENGINE HANDLING, PW2000 SERIES ENGINES	71-00-16
B71028-1, -37	CRADLE - EXHAUST NOZZLE, PW2000 SERIES ENGINES	78-10-01
B71029-1	HOIST EQUIPMENT - "C" DUCT, RB211-535	78-30-31
B71030-1	SLING - COMMON NOZZLE ASSEMBLY, RB211-535E4	78-10-02
B71031-1	SLING - SLEEVE, THRUST REVERSER, PW2000 SERIES ENGINES	78-30-07
B71032-1	LOCATING JIG - ENGINE BUILDUP TO STRUT, PW2000 SERIES ENGINES	71-00-21
B71033-21, -25	CRADLE - EXHAUST NOZZLE	78-10-03
B71034-63	TEST EQUIPMENT - ENGINE PRESSURE MONITORING	71-00-33
B71035-1	FUEL SYSTEM PRESERVATION SUPPLY AND DRAINAGE ADAPTER KIT	73-10-01
B71036-1	HOIST SLING - PW2000 SERIES ENGINE AND STAND	71-00-24
B71039-9	REMOVAL EQUIPMENT - BARREL NUT, ENGINE MOUNT	71-00-25
B71040-36, -37, -39	SLING EQUIPMENT - INLET COWL	71-10-06
B71042-154	HANDLING FRAME EQUIPMENT - "C" DUCT, RB211-535 ENGINE	78-30-32
B71043-1	TEST EQUIPMENT - FUEL PUMP PRESSURE, PW2000 SERIES ENGINES	71-00-34
B71044-10, -28	ADAPTER EQUIPMENT - LOAD TEST, PRESSURE RELIEF DOOR LATCH	71-00-28
B71046-1	SLING ASSEMBLY - OVERHEAD REMOVAL/INSTALLATION, PW ENGINE	71-00-29

NUMERICAL INDEX

Page 14
Sep 20/2008

D634N501



757

ILLUSTRATED TOOL AND EQUIPMENT MANUAL

<u>Part No.</u>	<u>Title</u>	<u>Subject</u>
B71047-9	GAUGE - GAP MEASUREMENT, ENGINE V-GROOVE	78-30-25
B72001-1, -19	BALANCE EQUIPMENT - ENGINE TRIM	72-00-02
B73001-1	WRENCH - ENGINE TRIM ADJUSTMENT, RB211-535	71-00-19
B73002-1	TEST BOX - POWER SUPPLY, PROPULSION DISCRETE INTERFACE UNIT (PDIU)	73-20-02
B76002-1, -11	RIGGING EQUIPMENT - PW2037 AUTOTHROTTLE RESOLVER	22-30-04
B76003-1	RIGGING EQUIPMENT - ENGINE CONTROL SYSTEM	76-10-02
B76004-1	ADAPTER - THRUST CONTROL INNER SHAFT	76-10-03
B78001-1, -2, -8	LOCK - THRUST REVERSER ISOLATION VALVE (GROUND AND FLYAWAY)	78-30-26
B78002-18, -36	TOOL SET - "C" DUCT REMOVAL/INSTALLATION, RB211-535 ENGINE	78-30-29
B78003-1, -6	PIN - THRUST REVERSER DEACTIVATION, PW2000 SERIES ENGINES	78-30-09
B78004-1	RIGGING FIXTURE - SPRING BUMPER, FAN DUCT COWL AND THRUST REVERSER	78-30-08
B78005-1	BONDING FIXTURE - THRUST REVERSER SLEEVE ASSEMBLY	78-30-10
B78006-1	RIGGING BAR - THRUST REVERSER, POSITION FEEDBACK LINEAR VARIABLE DIFFERENTIAL TRANSFORMER (LVDT)	78-30-11
B78007-41, -43	SUPPORT EQUIPMENT - FAN DUCT COWL AND THRUST REVERSER PW2000 SERIES ENGINES	78-30-12
B78008-19	WRENCH SET - THRUST REVERSER ACTUATOR	78-30-13
B78010-9, -28	STAND - FUNCTIONAL TEST EQUIPMENT, LOCKING AND NON-LOCKING THRUST REVERSER ACTUATOR	78-30-14
B78011-25	TORQUE FIXTURE - LOCKING AND NON-LOCKING THRUST REVERSER ACTUATOR ASSEMBLY	78-30-15
B78012-1	TEST EQUIPMENT - FAN DUCT REVERSER, MANUAL DRIVE ASSEMBLY	78-30-16
B78013-2	OVERHAUL EQUIPMENT - THRUST REVERSER LOCKING ACTUATOR ASSEMBLY	78-30-17
B78014-29, -37	TEST FIXTURE - ROD END AND STROKE STOP, LOCKING AND NON-LOCKING THRUST REVERSER ACTUATOR	78-30-18
B78015-17, -23	OVERHAUL SET - THRUST/REVERSER LOCKING ACTUATOR ASSEMBLY	78-30-20
B78016-1	OVERHAUL SET - THRUST REVERSER LOCKING AND NON-LOCKING ACTUATOR ASSEMBLY	78-30-21
B78017-1	INSTALLATION EQUIPMENT - BEARING-LEAD SCREW, THRUST REVERSER NON-LOCKING ACTUATOR ASSEMBLY	78-30-19
B78019-1	VIBRATION ISOLATOR EQUIPMENT - THRUST REVERSER, REMOVAL/INSTALLATION	78-30-22
B78020-1	RETAINING PIN SET - THRUST REVERSER RB211-535E4	78-30-23
BLS-34529	ASSEMBLY BULLET	29-20-06

NUMERICAL INDEX

Page 15
Sep 20/2008

D634N501



757

ILLUSTRATED TOOL AND EQUIPMENT MANUAL

<u>Part No.</u>	<u>Title</u>	<u>Subject</u>
BLS-34533	ASSEMBLY BULLET	29-20-07
C12002-7	DRAIN HOSE - SURGE TANK SUMP	12-20-01
C25001-1	WRENCH - ANTI-RATTLE NUT	25-20-04
C27030-2, -33	TEST EQUIPMENT - FLAP SCREW BACKLASH	27-50-25
C27067-81, -83	TEST EQUIPMENT - TORQUE LIMITER, TRANSMISSION, TRAILING EDGE FLAP	27-50-26
C27072-1, -3	TEST EQUIPMENT - TRAILING EDGE FLAP TRANSMISSION, AFT U- JOINT AND BALLSCREW	27-50-28
C28013-5	Protective Equipment - Protective Ring For Lower Wing Panel Access Door	57-00-01
C32011-7	SOCKET EQUIPMENT - BRAKE DISCONNECT VALVE	32-40-09
C34005-1, -16	EXTENDER BOX - RADIO ALTIMETER RECEIVER TRANSMITTER	34-00-03
C34006-53, -57	ADAPTER, TRAY - ELECTRONIC FLIGHT INSTRUMENTS SYSTEM (EFIS) SYMBOL GENERATOR SOFTWARE LOADING	34-00-04
C34012-2	Test Box - Rosemount Total Air Temperature Probe, Air Data System	34-10-04
C35003-1	RETRACTION EQUIPMENT - FIRING PIN, OXYGEN SYSTEM	35-20-01
C36001-44	TEST EQUIPMENT - ENGINE BLEED AIR SYSTEMS	36-10-10
C38001-1	DRAIN MAST PLUG - WASTE WATER	38-30-02
C52008-1	TORQUE WRENCH ASSEMBLY - GALLEY AND ENTRY DOOR	52-10-15
C52009-2	LIFTING FIXTURE EQUIPMENT - MAIN DECK CARGO DOOR	52-30-12
C77004-10	TEST BOX - GENERIC AIRBORNE VIBRATION MONITOR (AVM) INTERFACE	77-30-02
C78005-21	HAND PUMP - OPENING SYSTEM, THRUST REVERSER	78-30-02
DAS-34530	SIZING DIE	29-20-08
DAS-34534	SIZING DIE	29-20-09
F70199-1, -18	INFLATION TOOL - TIRE	12-00-01
F70200-14	INFLATION TOOL - STRUT	12-00-02
F70206-1	ADAPTER ASSEMBLY - HOLLOW BOLT, FUEL LEAK TRACING	28-10-01
F70230-1	TEMPORARY REPAIR TOOL - SELF-SEALING RIVETS, FUEL SYSTEM	28-10-02
F70244-17	SLING ASSEMBLY - FUSELAGE LIFTING	07-00-01
F70250-35, -36	LIFTING FIXTURE ASSEMBLY - MAIN CARGO DOOR	52-30-09
F70258-1	PERSONNEL SAFETY BARRIER - MAIN DECK CARGO DOOR	52-30-10
F70284-1	WEAR GAGE SET - PLUG AND RECEPTACLE, GROUND POWER	24-40-01
F70300-1	FLAP DRIVE ADAPTER	27-50-14
F70312-22, -27, -30, -31, -36, -37, -38, -47, -51	KIT - CROWFOOT WRENCHES	32-00-02
F70313-1, -2, -3, -4	STANDARD BOX - SUPPORT EQUIPMENT	20-00-22

NUMERICAL INDEX

Page 16
Sep 20/2008

D634N501



757

ILLUSTRATED TOOL AND EQUIPMENT MANUAL

<u>Part No.</u>	<u>Title</u>	<u>Subject</u>
F70321-1, -2, -3, -4, -5, -6, -7, -8, -9, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, -26, -27, -28, -29, -30, -31, -32, -33, -34, -35, -36, -37, -38, -39, -40	MANDREL - SHRINK FIT BUSHING INSTALLATION	20-00-21
F70324-1	CANOPY - FORWARD ENTRY DOOR	52-10-07
F70328-1	PROBE - FILM RESISTANCE MEASURING	51-20-01
F70330-4, -99	STATIC BALANCE EQUIPMENT - CONTROL SURFACES	51-60-01
F70336-1	SPANNER WRENCH - ASSIST HANDLE, MAIN ENTRY DOOR	52-10-12
F71313-19, -44	WRENCH - SOCKET, ROD END BEARING	52-30-13
F71329	LEAKAGE TRACING DEVICE - INTEGRAL TANK LEAKAGE TEST	28-10-03
F72951-1	WATER MANOMETER - TEST EQUIPMENT	28-10-10
F72959-1, -2, -3, -4, -5, -6, -7, -8, -9, -10, -11, -12, -31, -32, -33, -34, -35, -36, -37, -38, -39, -40, -41, -42	SPANNER WRENCH - AN STANDARD TYPE	20-00-01
F72977-62	GAGE EQUIPMENT - HYDRAULIC BRAKE SYSTEM PRESSURE CHECKING	32-40-11
F80060-6	ADAPTER - AIRPLANE JACKING	07-00-04
F80085-1, -12	TEST FIXTURE - CYLINDER ASSEMBLY, FEEL ACTUATOR	27-30-14
F80113-37, -50, -61, -64, -70, -88	KIT - ROLLER SWAGE	20-00-14
F80212-19	CHECK ADAPTER - RUDDER PEDAL FORCE	27-20-01
G21007-1	AIR FLOW CUP - LOW/HIGH BLOW TEST	05-50-02
G22003-132, -133, -134, -135	TEST EQUIPMENT - AUTOTHROTTLE CLUTCH	22-30-06
G23001-37, -41	TEST BOX - RADIO COMMUNICATIONS PANEL (RCP) PROCESSOR CARD	23-10-02
G25012-1	ANTI-RATTLE NUT WRENCH KIT	25-20-05
G26004-39, -40	EXTENDER CARD - ELECTRONIC CARD FILE	26-10-02
G26005-9, -13, -17	ADAPTER - HOT WIRE ANEMOMETER	26-10-03
G28005-14, -18, -23, -29, -35, -42	CHECK FIXTURE EQUIPMENT - PRESSURE RELIEF VALVE	28-10-12
G32021-18	FORCE GAGE EQUIPMENT - LANDING GEAR LEVER	32-30-21
G34004-11, -17	ADJUSTMENT EQUIPMENT - WEATHER RADAR ANTENNA MOUNT	34-40-01
G36006-1, -2, -4, -5, -6	PLUG EQUIPMENT - DUCT TEST	36-10-04
G36013-3, -6	PLUG EQUIPMENT - DUCT TEST, JANITROL 12J08 FLANGED DUCTS	36-10-05

NUMERICAL INDEX

Page 17
Sep 20/2008

D634N501



757

ILLUSTRATED TOOL AND EQUIPMENT MANUAL

<u>Part No.</u>	<u>Title</u>	<u>Subject</u>
G36015-8	PLUG EQUIPMENT - DUCT TEST (MS33660, TYPE A BEAD)	36-10-06
G36020-34	PLUG EQUIPMENT - DUCT TEST (20° MACHINED FLANGES)	36-10-07
G38004-10, -13	BLOCKAGE REMOVAL TOOL - VACUUM LAVATORY SYSTEM	38-30-04
G38005-1, -111, -114, -115	TEST CHAMBER EQUIPMENT - LAVATORY SERVICE PANEL	38-30-10
G38006-1	BLOCKAGE REMOVAL EQUIPMENT - VACUUM WASTE SYSTEM	38-30-06
G51002-1	FALL PROTECTION - OVERHEAD PERSONNEL SUPPORT	51-00-02
G51003-1	FALL PROTECTION - OVERHEAD PERSONNEL SUPPORT	51-00-01
G76002-15	PROTRACTOR - THRUST REVERSER LEVERS, FORWARD AND REVERSE	76-10-04
J20002-36	LOAD POSITIONER - ENGINE ACCESSORIES, 250 LB CAPACITY	20-00-24
J20009-38, -70, -78	JACKING EQUIPMENT - HYDRAULIC TELESCOPING	49-00-09
J28006-1	SEALING TOOL - RIVET, FUEL TANK	28-10-09
J28007-1, -9, -10	PRESSURIZATION EQUIPMENT - WING DRY BAY, FUEL LEAK DETECTION	28-10-14
J28010-1	CONSOLE - SHOP AIR SUPPLY	28-10-13
J32001-63, -64	MEASURING EQUIPMENT - BRAKE PEDAL	32-40-10
J32060-1	DRAIN EQUIPMENT - OLEO STRUT, MAIN LANDING GEAR/NOSE LANDING GEAR	32-10-25
J34002-18, -19	TEST FIXTURE - ANGLE OF ATTACK	34-10-02
J71006	SPECIFICATION - POWERED HOIST SYSTEM, GROUND SUPPORT EQUIPMENT (GSE) OPERATIONS	71-00-30
MIT65B92408-1	ADAPTER SHAFT ALIGNMENT FIXTURE	28-20-07
SE20-0002	REMOVAL TOOL - ACCESS PANEL SCREW	20-00-03
ST2580-302	TORQUE SPANNER	28-10-07
ST2580-163A	WRENCH, SPANNER TYPE	25-20-03
ST2580-334C	STANDARD TOOL - SPANNER NOSE PLIERS	25-20-02
ST732	CUTTER - SCOTCHCAL MARKING MATERIAL	20-00-11
ST848	INSTALLATION TOOL - O-RINGS	20-10-03
ST8709H	GO/NO-GO GAGE FOR ASSEMBLY OF WIGGINS BACC42R COUPLING	28-20-08
ST878D	SLEEVE SET TOOL - FOR PRESETTING BACS13AP FLARELESS TUBE FITTINGS	20-10-04
ST879A	TUBE PRESETTING TOOL - FLARELESS	20-00-18
ST879AF	HOLDING FIXTURE - HAND PRESET TOOLS	20-00-19
ST895A-3	MEASUREMENT PROBE - SURFACE RESISTIVITY	20-00-04
ST922C	STAKING TOOL	20-00-16
ST927	REMOVAL TOOL - BEARING	20-00-17
ST927C-*	BEARING REMOVAL TOOL	20-00-15

NUMERICAL INDEX

Page 18
Sep 20/2008

D634N501



757

ILLUSTRATED TOOL AND EQUIPMENT MANUAL

<u>Part No.</u>	<u>Title</u>	<u>Subject</u>
TE65B40719	BREAKOUT BOX - GROUND SAFETY RELAY	32-60-02
WAS-33662	WRENCH - ATTACH BOLTS, RAM AIR TURBINE (RAT) HUB	29-20-01
289544-6	TESTER - APU FUEL MANIFOLD	49-10-01
294864-1	WRENCH - APU TRANSDUCER REMOVAL	49-50-01
2ME65B00002	WRENCH - SPANNER, SAFETY LANYARD, TIE DOWN LOCKS	27-00-14
4MIT65B80307-1	PROTRACTOR ASSEMBLY - CONTROL COLUMN	27-10-08
65-92528-1	KIT - HYDRAULIC TUBING REPAIR	20-00-05
732021	COVER - TURBINE BLADE, RAM AIR TURBINE (RAT)	29-20-02
734734	PROTECTIVE COVER - RAM AIR TURBINE (RAT) HUB	29-20-03
900-24999	INSPECTION PLATE - QUICK ATTACH DETACH (QAD)	24-10-01
906-10246-3	LOOP RESISTANCE TEST SET	20-10-05
906-10272-5	CALIBRATION UNIT - LOOP RESISTANCE TESTER	20-10-06

NUMERICAL INDEX

Page 19
Sep 20/2008

D634N501