

# **CHAPTER**

# **91**

# **CHARTS**



757-200

## WIRING DIAGRAM MANUAL

### CHAPTER 91 CHARTS

CH-SC-SU	Schem	Page	Sheet	Date	CH-SC-SU	Schem	Page	Sheet	Date
91-EFFECTIVE PAGES		1 thru 3		Oct 09/2008	91-01-42 (cont.)		2		Jan 21/2005
		4		BLANK	91-01-43		1		Jan 21/2005
91-CONTENTS		1		Dec 18/2007		2			Jan 21/2005
R		2		Oct 09/2008	91-01-44		1		Jan 21/2005
R		3		Oct 09/2008		2			Jan 21/2005
R		4		Oct 09/2008	91-02-01		1		Jan 21/2005
O		5		Oct 09/2008		2			Jan 21/2005
O		6		Oct 09/2008	91-02-02		1		Jan 21/2005
O		7		Oct 09/2008		2			Jan 21/2005
O		8		Oct 09/2008	91-02-03		1		Jan 21/2005
91-ALPHABETICAL INDEX		1		Jan 21/2005		2			Jan 21/2005
		2		May 17/2006	R 91-02-04		1		Oct 09/2008
		3		May 17/2006	91-02-05		1		Jan 21/2005
		4		May 17/2006	91-02-06		1		Jan 21/2005
91-00-01		1		Jan 21/2005	91-02-07		1		Jan 21/2005
91-00-02		1		Jan 21/2005	91-02-08		1		Jan 21/2005
91-01-01		1		Jan 21/2005	91-02-09		1		Jan 21/2005
91-01-02		1		Jan 21/2005		2			Jan 21/2005
		1		Jan 21/2005	91-02-10		1		Jan 21/2005
91-01-03		2		Jan 21/2005		2			Jan 21/2005
91-01-21		1		Jan 21/2005	91-02-11		1		Jan 21/2005
91-01-22		1		Jan 21/2005	91-02-12		1		Jan 21/2005
		1		Jan 21/2005	91-02-13		1		Jan 21/2005
91-01-23		1		May 17/2006	91-02-14		1		Jan 21/2005
91-01-24		2		May 17/2006	91-02-15		1		Jan 21/2005
91-01-25		1		Jan 21/2005	91-02-16		1		Jan 21/2005
91-01-26		1		Jan 21/2005		1			Jan 21/2005
91-01-27		1		Jan 21/2005	91-02-17		1		Jan 21/2005
		2		Jan 21/2005		2			Jan 21/2005
91-01-28		1		Jan 21/2005	91-02-18		1		Jan 21/2005
		2		Jan 21/2005		1			Jan 21/2005
91-01-41		1		Jan 21/2005		2			Jan 21/2005
91-01-42		1		Jan 21/2005					
		1		Jan 21/2005					

A = Added, R = Revised, D = Deleted, O = Overflow

## 91-EFFECTIVE PAGES

Page 1  
Oct 09/2008

D280N032



**757-200**  
**WIRING DIAGRAM MANUAL**

**CHAPTER 91**  
**CHARTS**

CH-SC-SU	Schem	Page	Sheet	Date	CH-SC-SU	Schem	Page	Sheet	Date
91-02-19		1	1	Jan 21/2005	91-02-32		1		Jan 21/2005
			2	Jan 21/2005			2		Jan 21/2005
A		1.1	1	Oct 09/2008	91-02-33				
A			2	Oct 09/2008			1		Jan 21/2005
		2	1	Jan 21/2005	91-02-34				
			2	Jan 21/2005			1		Jan 21/2005
A		2.1	1	Oct 09/2008	91-02-35				
A			2	Oct 09/2008			1		Jan 21/2005
91-02-20							2		Jan 21/2005
		1		Jan 21/2005	91-03-01				
91-02-21							1		Aug 01/2005
		1		Jan 21/2005			2		Aug 01/2005
		2		Jan 21/2005	91-03-02				
91-02-22							1		Jan 21/2005
		1		Jan 21/2005			1.1		Jan 21/2005
		2		Jan 21/2005			2		Jan 21/2005
91-02-23							2.1		Jan 21/2005
		1	1	Dec 18/2007	91-03-03				
			2	Jan 21/2005			1		Jan 21/2005
			3	Jan 21/2005			2		Jan 21/2005
		2	1	Jan 21/2005	91-03-04				
			2	Jan 21/2005			1		Jan 21/2005
			3	Jan 21/2005			2		Jan 21/2005
91-02-26					91-03-05				
		1	1	Jan 21/2005			1		Jan 21/2005
			2	Jan 21/2005			2		Jan 21/2005
			3	Jan 21/2005	91-03-06				
			4	Jan 21/2005			1	1	Jan 21/2005
			5	Jan 21/2005				2	Jan 21/2005
		1.1	1	Jan 21/2005			2	1	Jan 21/2005
R			2	Oct 09/2008				2	Jan 21/2005
			3	Jan 21/2005	91-04-01				
			4	Jan 21/2005			1		Jan 21/2005
R			5	Oct 09/2008	91-04-02				
		2	1	Jan 21/2005			1		Jan 21/2005
			2	Jan 21/2005	91-04-03				
			3	Jan 21/2005			1		Jan 21/2005
			4	Jan 21/2005	91-04-04				
			5	Jan 21/2005			1		Aug 01/2005
		2.1	1	Jan 21/2005	91-04-05				
R			2	Oct 09/2008			1		Jan 21/2005
			3	Jan 21/2005	91-04-06				
			4	Jan 21/2005			1		Jan 21/2005
R			5	Oct 09/2008	91-04-07				
91-02-27							1		Jan 21/2005
		1		May 17/2006	91-04-08				
91-02-28							1		Jan 21/2005
		1		Dec 18/2007	91-04-09				
		2		Dec 18/2007			1		Jan 21/2005
91-02-31					91-04-10				
		1		Jan 21/2005			1		Jan 21/2005

A = Added, R = Revised, D = Deleted, O = Overflow

**91-EFFECTIVE PAGES**

D280N032

Page 2  
Oct 09/2008



757-200

## WIRING DIAGRAM MANUAL

### CHAPTER 91 CHARTS

CH-SC-SU	Schem	Page	Sheet	Date	CH-SC-SU	Schem	Page	Sheet	Date
91-04-11		1		Jan 21/2005	91-05-15		1		Jan 21/2005
91-04-12		1		Jan 21/2005			2		Jan 21/2005
91-04-13		1		Jan 21/2005	91-05-16		1		Jan 21/2005
91-04-14		1		Jan 21/2005			2		Jan 21/2005
91-05-00		1		Jan 21/2005	91-05-17		1		Jan 21/2005
91-05-01		1		Jan 21/2005			2		Jan 21/2005
		1		Jan 21/2005	91-05-18		1		Jan 21/2005
		2		Jan 21/2005					
91-05-02		1		Jan 21/2005					
		2		Jan 21/2005					
91-05-03		1		Jan 21/2005					
		2		Jan 21/2005					
91-05-04		1		Jan 21/2005					
		2		Jan 21/2005					
91-05-05		1		Jan 21/2005					
91-05-06		1		Jan 21/2005					
		2		Jan 21/2005					
91-05-07		1		Jan 21/2005					
		2		Jan 21/2005					
91-05-08		1		Jan 21/2005					
		2		Jan 21/2005					
91-05-09		1		Jan 21/2005					
		2		Jan 21/2005					
91-05-10		1		Jan 21/2005					
		2		Jan 21/2005					
91-05-11		1		Jan 21/2005					
		2		Jan 21/2005					
91-05-12		1		Jan 21/2005					
		2		Jan 21/2005					
91-05-13		1		Jan 21/2005					
		2		Jan 21/2005					
91-05-14		1		Jan 21/2005					
		2		Jan 21/2005					

A = Added, R = Revised, D = Deleted, O = Overflow

## 91-EFFECTIVE PAGES

Page 3  
Oct 09/2008

D280N032



757-200

## WIRING DIAGRAM MANUAL

### CHAPTER 91 CHARTS

Title	CH-SC-SU	Schem	Page	Sheet	Date	Effectivity
<b><u>AIRPLANE STATIONS</u></b>						
AIRPLANE STATIONS - BODY, VERTICAL STAB., HORIZ STAB.AND ELEVATOR	91-00-01		1		Jan 21/2005	ALL
AIRPLANE STATIONS - WING, ENGINE AND NACELLE	91-00-02		1		Jan 21/2005	ALL
<b><u>WIRE ZONES</u></b>						
WIRE ZONES	91-01-01		1		Jan 21/2005	ALL
ELECTRICAL/ELECTRONIC MAJOR ROUTING PATHWAYS	91-01-02		1		Jan 21/2005	001-099
			2		Jan 21/2005	115-199
ELECTRICAL/ELECTRONIC SPARE WIRES	91-01-03		1		Jan 21/2005	001-099
PANEL LOCATIONS	91-01-21		1		Jan 21/2005	001-099
MAJOR EQUIPMENT CENTERS - SHELVES	91-01-22		1		Jan 21/2005	001-099
			2		Jan 21/2005	115-199
DISCONNECT PANEL LOCATIONS	91-01-23		1		Jan 21/2005	ALL
ANTENNA LOCATIONS	91-01-24		1		Jan 21/2005	ALL
INTERPHONE JACK LOCATIONS - GENERAL	91-01-25		1		May 17/2006	001-099
			2		May 17/2006	115-199
EXTERIOR LIGHTS	91-01-26		1		Jan 21/2005	ALL
EMERGENCY LIGHT LOCATIONS	91-01-27		1		Jan 21/2005	001-099
			2		Jan 21/2005	115-199
ENGINE EQUIPMENT LOCATIONS (RB 211535C-37)	91-01-28		1		Jan 21/2005	001-099
			2		Jan 21/2005	115-199
757 ANTENNA CABLES - ILS, TCAS	91-01-41		1		Jan 21/2005	ALL
757 ANTENNA CABLES - ATC, DME, MARKER BEACON, VOR, VHF COMM, HF COMM	91-01-42		1		Jan 21/2005	001-099

## 91-CONTENTS

Page 1  
Dec 18/2007

D280N032

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details



**757-200**  
**WIRING DIAGRAM MANUAL**

**CHAPTER 91**  
**CHARTS**

Title	CH-SC-SU	Schem	Page	Sheet	Date	Effectivity
757 ANTENNA CABLES - ATC, DME, MARKER BEACON, VOR, VHF COMM, HF COMM (cont.)	91-01-42		2		Jan 21/2005	115-199
757 ANTENNA CABLES - RADIO ALTIMETER, ADF	91-01-43		1		Jan 21/2005	001-099
			2		Jan 21/2005	115-199
INTERPHONE JACKS NETWORK	91-01-44		1		Jan 21/2005	001-099
			2		Jan 21/2005	115-199
<b><u>CIRCUIT BREAKER PANELS</u></b>						
P1-1, P1-3 AND EFIS PANELS CAPTAINS INSTRUMENT	91-02-01		1		Jan 21/2005	001-099
			2		Jan 21/2005	115-199
P3-1, P3-3, EFIS AND EICAS PANELS F/O INSTRUMENT	91-02-02		1		Jan 21/2005	001-099
			2		Jan 21/2005	115-199
P5 PANEL PILOTS OVERHEAD	91-02-03		1		Oct 09/2008	ALL
P6-1 AND P6-2 PANELS MAIN POWER DISTRIBUTION (CIRCUIT BREAKER)	91-02-04		1		Jan 21/2005	ALL
P6-1 AND P6-2 PANELS MAIN POWER DISTRIBUTION (INTERNAL)	91-02-05		1		Jan 21/2005	001-099
			2		Jan 21/2005	115-199
P6-3 AND P6-4 PANELS MAIN POWER DISTRIBUTION (CIRCUIT BREAKER)	91-02-06		1		Jan 21/2005	ALL
P6-3 AND P6-4 PANELS MAIN POWER DISTRIBUTION (INTERNAL)	91-02-07		1		Jan 21/2005	ALL
P7 AND P55 PANELS GLARESHIELD	91-02-08		1		Jan 21/2005	ALL
P8 AND P9 PANELS AFT AND FORWARD CONTROL STANDS	91-02-09		1		Jan 21/2005	001-099
			2		Jan 21/2005	115-199
P10 PANEL QUADRANT CONTROL STAND	91-02-10		1		Jan 21/2005	001-099

**91-CONTENTS**

Page 2  
Oct 09/2008

D280N032

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details



757-200

## WIRING DIAGRAM MANUAL

### CHAPTER 91 CHARTS

Title	CH-SC-SU	Schem	Page	Sheet	Date	Effectivity
P10 PANEL QUADRANT CONTROL STAND (cont.)	91-02-10		2		Jan 21/2005	115-199
P11-1 PANEL OVERHEAD CIRCUIT BREAKER	91-02-11		1		Jan 21/2005	ALL
P11-2 PANEL OVERHEAD CIRCUIT BREAKER	91-02-12		1		Jan 21/2005	ALL
P11-3 PANEL OVERHEAD CIRCUIT BREAKER	91-02-13		1		Jan 21/2005	ALL
P11-4 PANEL OVERHEAD CIRCUIT BREAKER	91-02-14		1		Jan 21/2005	ALL
P26 PANEL LIGHTING EQUIPMENT	91-02-15		1		Jan 21/2005	ALL
P61 PANEL RIGHT SIDE	91-02-16		1		Jan 21/2005	001-099
			2		Jan 21/2005	115-199
P31 PANEL GENERATOR SHIELD - LEFT	91-02-17		1		Jan 21/2005	ALL
P32 PANEL GENERATOR SHIELD - RIGHT	91-02-18		1		Jan 21/2005	001-099
			2		Jan 21/2005	115-199
P33 PANEL MISCELLANEOUS RELAY	91-02-19		1	1	Jan 21/2005	001-099
				2	Jan 21/2005	001-099
			1.1	1	Oct 09/2008	001-011
				2	Oct 09/2008	001-011
			2	1	Jan 21/2005	115-199
				2	Jan 21/2005	115-199
			2.1	1	Oct 09/2008	115
				2	Oct 09/2008	115
P34 PANEL APU/EXTERNAL POWER SHIELD	91-02-20		1		Jan 21/2005	ALL
P34 PANEL APU/EXTERNAL POWER SHIELD	91-02-21		1		Jan 21/2005	001-099
			2		Jan 21/2005	115-199
P34 PANEL APU/EXTERNAL POWER SHIELD	91-02-22		1		Jan 21/2005	001-099
			2		Jan 21/2005	115-199

## 91-CONTENTS

Page 3  
Oct 09/2008

D280N032



**757-200**  
**WIRING DIAGRAM MANUAL**

**CHAPTER 91**  
**CHARTS**

Title	CH-SC-SU	Schem	Page	Sheet	Date	Effectivity
P36 PANEL MISCELLANEOUS ELECTRICAL EQUIPMENT	91-02-23		1	1	Dec 18/2007	001-099
				2	Jan 21/2005	001-099
				3	Jan 21/2005	001-099
			2	1	Jan 21/2005	115-199
				2	Jan 21/2005	115-199
				3	Jan 21/2005	115-199
P37 PANEL MISCELLANEOUS ELECTRICAL EQUIPMENT - RIGHT	91-02-26		1	1	Jan 21/2005	001-099
				2	Jan 21/2005	001-099
				3	Jan 21/2005	001-099
				4	Jan 21/2005	001-099
				5	Jan 21/2005	001-099
			1.1	1	Jan 21/2005	001-011
				2	Oct 09/2008	001-011
				3	Jan 21/2005	001-011
				4	Jan 21/2005	001-011
				5	Oct 09/2008	001-011
			2	1	Jan 21/2005	115-199
				2	Jan 21/2005	115-199
				3	Jan 21/2005	115-199
				4	Jan 21/2005	115-199
				5	Jan 21/2005	115-199
			2.1	1	Jan 21/2005	115
				2	Oct 09/2008	115
				3	Jan 21/2005	115
				4	Jan 21/2005	115
				5	Oct 09/2008	115
P65 MISC ELEC EQUIP PNL	91-02-27		1		May 17/2006	ALL
P71 HYD GEN CONT PNL ASSY	91-02-28		1		Dec 18/2007	001-002 115-199
			2		Dec 18/2007	003-099

**91-CONTENTS**

Page 4  
Oct 09/2008

D280N032





757-200

## WIRING DIAGRAM MANUAL

### CHAPTER 91 CHARTS

Title	CH-SC-SU	Schem	Page	Sheet	Date	Effectivity
P50 PANEL ELECTRICAL SYSTEMS CARD FILE	91-02-31		1		Jan 21/2005	ALL
P51 PANEL WARNING ELECTRONIC UNIT CARD FILE	91-02-32		1		Jan 21/2005	001-099
			2		Jan 21/2005	115-199
P54 PANEL FIRE DETECTION CARD FILE	91-02-33		1		Jan 21/2005	ALL
P70 PANEL MISCELLANEOUS ELECTRICAL EQUIPMENT (CIRCUIT BREAKER)	91-02-34		1		Jan 21/2005	ALL
P70 PANEL MISCELLANEOUS ELECTRICAL EQUIPMENT	91-02-35		1		Jan 21/2005	001-099
			2		Jan 21/2005	115-199
<b>MAIN EQUIPMENT CENTER</b>						
E1 RACK - MAIN EQUIPMENT CENTER	91-03-01		1		Aug 01/2005	001-002 115-199
			2		Aug 01/2005	003-099
E2 RACK - MAIN EQUIPMENT CENTER	91-03-02		1		Jan 21/2005	001-099
			1.1		Jan 21/2005	001-011
			2		Jan 21/2005	115-199
			2.1		Jan 21/2005	115
E3 RACK - MAIN EQUIPMENT CENTER	91-03-03		1		Jan 21/2005	001-099
			2		Jan 21/2005	115-199
E4 RACK - MAIN EQUIPMENT CENTER	91-03-04		1		Jan 21/2005	001-099
			2		Jan 21/2005	115-199
E5 RACK - MAIN EQUIPMENT CENTER	91-03-05		1		Jan 21/2005	001-099
			2		Jan 21/2005	115-199
E6 RACK - AFT EQUIPMENT CENTER	91-03-06		1	1	Jan 21/2005	001-099
				2	Jan 21/2005	001-099
			2	1	Jan 21/2005	115-199
				2	Jan 21/2005	115-199

## 91-CONTENTS

Page 5  
Oct 09/2008

D280N032



757-200

## WIRING DIAGRAM MANUAL

### CHAPTER 91 CHARTS

Title	CH-SC-SU	Schem	Page	Sheet	Date	Effectivity
<b><u>DISCONNECT BRACKETS</u></b>						
DISCONNECT BRACKETS LOCATIONS	91-04-01		1		Jan 21/2005	ALL
P1, P3, P7, SPEEDBRAKE AND P10 DISCONNECT BRACKETS	91-04-02		1		Jan 21/2005	ALL
P5, P6, P11, P26 AND P61 DISCONNECT BRACKETS	91-04-03		1		Jan 21/2005	ALL
P65, SERVICE PANEL OVHD GALLEY, LAV "A", FWD LWR CLG, DISC.BRACKETS	91-04-04		1		Aug 01/2005	ALL
P31, P32, P33, P34, TCAS AND NOSE WHEEL WELL DISCONNECT BRACKETS	91-04-05		1		Jan 21/2005	ALL
P37, P50, P51, P54 AND PSU DISCONNECT BRACKETS	91-04-06		1		Jan 21/2005	ALL
E1 AND E2 DISCONNECT BRACKETS	91-04-07		1		Jan 21/2005	ALL
E3 AND E4 DISCONNECT BRACKETS	91-04-08		1		Jan 21/2005	ALL
E5, P36 AND P70 DISCONNECT BRACKETS	91-04-09		1		Jan 21/2005	ALL
R AND L ENG STRUT FW, HORIZ FW ROLLS ROYCE DISCONNECT BRACKETS	91-04-10		1		Jan 21/2005	ALL
WG LE STRUT, VAPOR SEAL, ENG OUTBD CLOS RIB, ROLLS ROYCE RS DISC. BRKTS	91-04-11		1		Jan 21/2005	ALL
FRONT & REAR SPAR, SPOILER, A/C AND KEEL BEAM DISC.BRKTS	91-04-12		1		Jan 21/2005	ALL
E6, R AFT CAB.DISCONNECT	91-04-13		1		Jan 21/2005	ALL
PASS.CAB.OVHD, STAB.TRIM, UPPER AREA INTRF GAL., APU FW DISC.BRKTS	91-04-14		1		Jan 21/2005	ALL
<b><u>MASTER BUNDLE MATRIX</u></b>						
MASTER BUNDLE ELECTRICAL/ELECTRONIC CONFIGURATION	91-05-00		1		Jan 21/2005	ALL

## 91-CONTENTS

Page 6  
Oct 09/2008

D280N032



757-200

## WIRING DIAGRAM MANUAL

### CHAPTER 91 CHARTS

Title	CH-SC-SU	Schem	Page	Sheet	Date	Effectivity
MASTER BUNDLE MATRIX (W2000-W2090)	91-05-01		1		Jan 21/2005	001-099
MASTER BUNDLE MATRIX (W2000-W2080)	91-05-01		2		Jan 21/2005	115-199
MASTER BUNDLE MATRIX (W2134-W2265)	91-05-02		1		Jan 21/2005	001-099
			2		Jan 21/2005	115-199
MASTER BUNDLE MATRIX (W2267-W2348)	91-05-03		1		Jan 21/2005	001-099
MASTER BUNDLE MATRIX (W2267-W2345)	91-05-03		2		Jan 21/2005	115-199
MASTER BUNDLE MATRIX (W2350-W2451)	91-05-04		1		Jan 21/2005	001-099
			2		Jan 21/2005	115-199
MASTER BUNDLE MATRIX (W2502-W2520)	91-05-05		1		Jan 21/2005	ALL
MASTER BUNDLE MATRIX (W2602-W2638)	91-05-06		1		Jan 21/2005	001-099
			2		Jan 21/2005	115-199
MASTER BUNDLE MATRIX (W2642-W2735)	91-05-07		1		Jan 21/2005	001-099
MASTER BUNDLE MATRIX (W2642-W2729)	91-05-07		2		Jan 21/2005	115-199
MASTER BUNDLE MATRIX (W2800-W3012)	91-05-08		1		Jan 21/2005	001-099
			2		Jan 21/2005	115-199
MASTER BUNDLE MATRIX (W3020-W3304)	91-05-09		1		Jan 21/2005	001-099
			2		Jan 21/2005	115-199
MASTER BUNDLE MATRIX (W3305-W3416)	91-05-10		1		Jan 21/2005	001-099
			2		Jan 21/2005	115-199
MASTER BUNDLE MATRIX (W3418-W3532)	91-05-11		1		Jan 21/2005	001-099
			2		Jan 21/2005	115-199
MASTER BUNDLE MATRIX (W3533-W3650)	91-05-12		1		Jan 21/2005	001-099
			2		Jan 21/2005	115-199

## 91-CONTENTS

Page 7  
Oct 09/2008

D280N032



**757-200**  
**WIRING DIAGRAM MANUAL**

**CHAPTER 91**  
**CHARTS**

<b>Title</b>	<b>CH-SC-SU</b>	<b>Schem</b>	<b>Page</b>	<b>Sheet</b>	<b>Date</b>	<b>Effectivity</b>
MASTER BUNDLE MATRIX (W3660-W4086)	91-05-13		1		Jan 21/2005	001-099
MASTER BUNDLE MATRIX (W3654-W4086)	91-05-13		2		Jan 21/2005	115-199
MASTER BUNDLE MATRIX (W4104-W4406)	91-05-14		1		Jan 21/2005	001-099
			2		Jan 21/2005	115-199
MASTER BUNDLE MATRIX (W4420-W4910)	91-05-15		1		Jan 21/2005	001-099
			2		Jan 21/2005	115-199
MASTER BUNDLE MATRIX (W4912-W5022)	91-05-16		1		Jan 21/2005	001-099
			2		Jan 21/2005	115-199
MASTER BUNDLE MATRIX (W5100-W5214)	91-05-17		1		Jan 21/2005	001-099
MASTER BUNDLE MATRIX (W5023-W5214)	91-05-17		2		Jan 21/2005	115-199
MASTER BUNDLE MATRIX (W5500-W5616)	91-05-18		1		Jan 21/2005	ALL

**91-CONTENTS**

Page 8  
Oct 09/2008

D280N032



757-200

## WIRING DIAGRAM MANUAL

### CHAPTER 91 CHARTS

CH-SC-SU	Title
91-01-42	757 ANTENNA CABLES - ATC, DME, MARKER BEACON, VOR, VHF COMM, HF COMM
91-01-41	757 ANTENNA CABLES - ILS, TCAS
91-01-43	757 ANTENNA CABLES - RADIO ALTIMETER, ADF
91-00-01	AIRPLANE STATIONS - BODY, VERTICAL STAB., HORIZ STAB.AND ELEVATOR
91-00-02	AIRPLANE STATIONS - WING, ENGINE AND NACELLE
91-01-24	ANTENNA LOCATIONS
91-04-01	DISCONNECT BRACKETS LOCATIONS
91-01-23	DISCONNECT PANEL LOCATIONS
91-04-07	E1 AND E2 DISCONNECT BRACKETS
91-03-01	E1 RACK - MAIN EQUIPMENT CENTER
91-03-02	E2 RACK - MAIN EQUIPMENT CENTER
91-04-08	E3 AND E4 DISCONNECT BRACKETS
91-03-03	E3 RACK - MAIN EQUIPMENT CENTER
91-03-04	E4 RACK - MAIN EQUIPMENT CENTER
91-03-05	E5 RACK - MAIN EQUIPMENT CENTER
91-04-09	E5, P36 AND P70 DISCONNECT BRACKETS
91-03-06	E6 RACK - AFT EQUIPMENT CENTER
91-04-13	E6, R AFT CAB.DISCONNECT
91-01-02	ELECTRICAL/ELECTRONIC MAJOR ROUTING PATHWAYS
91-01-03	ELECTRICAL/ELECTRONIC SPARE WIRES
91-01-27	EMERGENCY LIGHT LOCATIONS
91-01-28	ENGINE EQUIPMENT LOCATIONS (RB 211535C-37)
91-01-26	EXTERIOR LIGHTS
91-04-12	FRONT & REAR SPAR, SPOILER, A/C AND KEEL BEAM DISC.BRKTS
91-01-25	INTERPHONE JACK LOCATIONS - GENERAL
91-01-44	INTERPHONE JACKS NETWORK
91-01-22	MAJOR EQUIPMENT CENTERS - SHELVES
91-05-00	MASTER BUNDLE ELECTRICAL/ELECTRONIC CONFIGURATION

## 91-ALPHABETICAL INDEX

D280N032

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

Page 1  
Jan 21/2005



**757-200**  
**WIRING DIAGRAM MANUAL**

**CHAPTER 91**  
**CHARTS**

<b>CH-SC-SU</b>	<b>Title</b>
91-05-01	MASTER BUNDLE MATRIX (W2000-W2090)
91-05-02	MASTER BUNDLE MATRIX (W2134-W2265)
91-05-03	MASTER BUNDLE MATRIX (W2267-W2348)
91-05-04	MASTER BUNDLE MATRIX (W2350-W2451)
91-05-05	MASTER BUNDLE MATRIX (W2502-W2520)
91-05-06	MASTER BUNDLE MATRIX (W2602-W2638)
91-05-07	MASTER BUNDLE MATRIX (W2642-W2735)
91-05-08	MASTER BUNDLE MATRIX (W2800-W3012)
91-05-09	MASTER BUNDLE MATRIX (W3020-W3304)
91-05-10	MASTER BUNDLE MATRIX (W3305-W3416)
91-05-11	MASTER BUNDLE MATRIX (W3418-W3532)
91-05-12	MASTER BUNDLE MATRIX (W3533-W3650)
91-05-13	MASTER BUNDLE MATRIX (W3660-W4086)
91-05-14	MASTER BUNDLE MATRIX (W4104-W4406)
91-05-15	MASTER BUNDLE MATRIX (W4420-W4910)
91-05-16	MASTER BUNDLE MATRIX (W4912-W5022)
91-05-17	MASTER BUNDLE MATRIX (W5100-W5214)
91-05-18	MASTER BUNDLE MATRIX (W5500-W5616)
91-04-02	P1, P3, P7, SPEEDBRAKE AND P10 DISCONNECT BRACKETS
91-02-01	P1-1, P1-3 AND EFIS PANELS CAPTAINS INSTRUMENT
91-02-10	P10 PANEL QUADRANT CONTROL STAND
91-02-11	P11-1 PANEL OVERHEAD CIRCUIT BREAKER
91-02-12	P11-2 PANEL OVERHEAD CIRCUIT BREAKER
91-02-13	P11-3 PANEL OVERHEAD CIRCUIT BREAKER
91-02-14	P11-4 PANEL OVERHEAD CIRCUIT BREAKER
91-02-15	P26 PANEL LIGHTING EQUIPMENT
91-02-02	P3-1, P3-3, EFIS AND EICAS PANELS F/O INSTRUMENT
91-02-17	P31 PANEL GENERATOR SHIELD - LEFT

**91-ALPHABETICAL INDEX**

D280N032

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

Page 2  
May 17/2006



757-200

## WIRING DIAGRAM MANUAL

### CHAPTER 91 CHARTS

CH-SC-SU	Title
91-04-05	P31, P32, P33, P34, TCAS AND NOSE WHEEL WELL DISCONNECT BRACKETS
91-02-18	P32 PANEL GENERATOR SHIELD - RIGHT
91-02-19	P33 PANEL MISCELLANEOUS RELAY
91-02-20	P34 PANEL APU/EXTERNAL POWER SHIELD
91-02-21	P34 PANEL APU/EXTERNAL POWER SHIELD
91-02-22	P34 PANEL APU/EXTERNAL POWER SHIELD
91-02-23	P36 PANEL MISCELLANEOUS ELECTRICAL EQUIPMENT
91-02-26	P37 PANEL MISCELLANEOUS ELECTRICAL EQUIPMENT - RIGHT
91-04-06	P37, P50, P51, P54 AND PSU DISCONNECT BRACKETS
91-02-03	P5 PANEL PILOTS OVERHEAD
91-04-03	P5, P6, P11, P26 AND P61 DISCONNECT BRACKETS
91-02-31	P50 PANEL ELECTRICAL SYSTEMS CARD FILE
91-02-32	P51 PANEL WARNING ELECTRONIC UNIT CARD FILE
91-02-33	P54 PANEL FIRE DETECTION CARD FILE
91-02-04	P6-1 AND P6-2 PANELS MAIN POWER DISTRIBUTION (CIRCUIT BREAKER)
91-02-05	P6-1 AND P6-2 PANELS MAIN POWER DISTRIBUTION (INTERNAL)
91-02-06	P6-3 AND P6-4 PANELS MAIN POWER DISTRIBUTION (CIRCUIT BREAKER)
91-02-07	P6-3 AND P6-4 PANELS MAIN POWER DISTRIBUTION (INTERNAL)
91-02-16	P61 PANEL RIGHT SIDE
91-02-27	P65 MISC ELEC EQUIP PNL
91-04-04	P65, SERVICE PANEL OVHD GALLEY, LAV "A", FWD LWR CLG, DISC.BRACKETS
91-02-08	P7 AND P55 PANELS GLARESHIELD
91-02-35	P70 PANEL MISCELLANEOUS ELECTRICAL EQUIPMENT
91-02-34	P70 PANEL MISCELLANEOUS ELECTRICAL EQUIPMENT (CIRCUIT BREAKER)
91-02-28	P71 HYD GEN CONT PNL ASSY
91-02-09	P8 AND P9 PANELS AFT AND FORWARD CONTROL STANDS
91-01-21	PANEL LOCATIONS
91-04-14	PASS.CAB.OVHD, STAB.TRIM, UPPER AREA INTRF GAL., APU FW DISC.BRKTS

## 91-ALPHABETICAL INDEX

D280N032

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

Page 3  
May 17/2006



757-200

## WIRING DIAGRAM MANUAL

### CHAPTER 91 CHARTS

CH-SC-SU	Title
91-04-10	R AND L ENG STRUT FW, HORIZ FW ROLLS ROYCE DISCONNECT BRACKETS
91-04-11	WG LE STRUT, VAPOR SEAL, ENG OUTBD CLOS RIB, ROLLS ROYCE RS DISC. BRKTS
91-01-01	WIRE ZONES

## 91-ALPHABETICAL INDEX


D280N032

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details


Page 4  
May 17/2006




**HORIZONTAL STABILIZER AND ELEVATOR STATIONS**

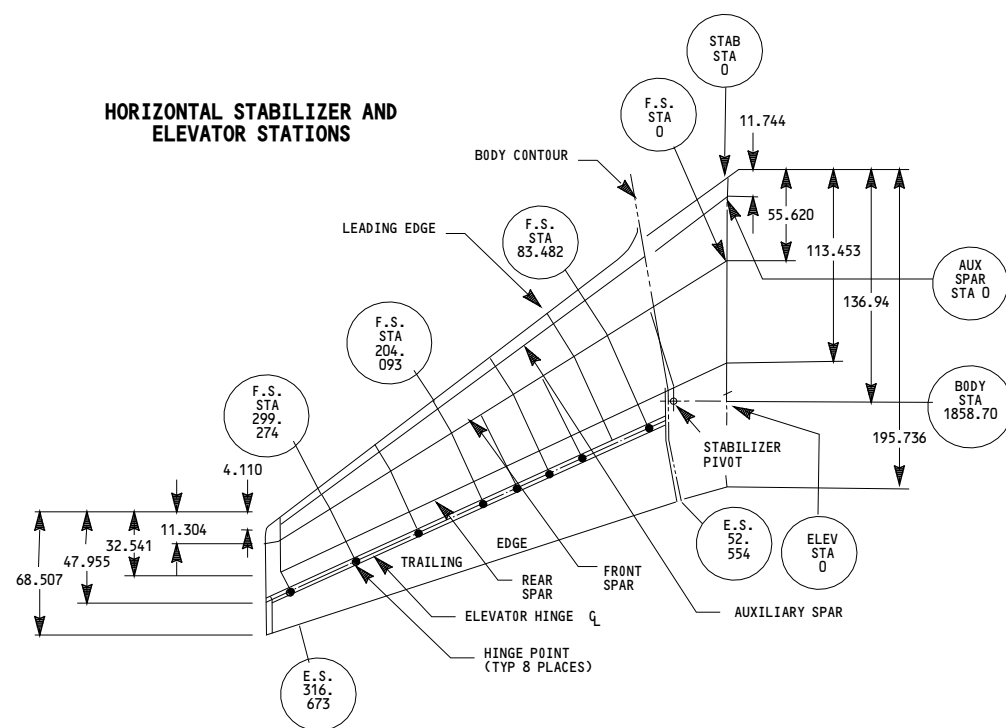


**TYPICAL CROSS SECTION**

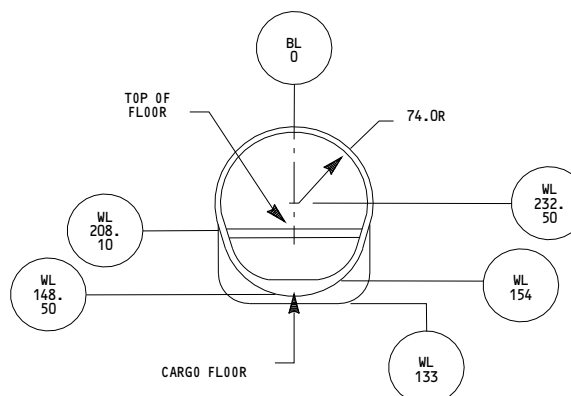

**VERTICAL STABILIZER AND RUDDER STATION**

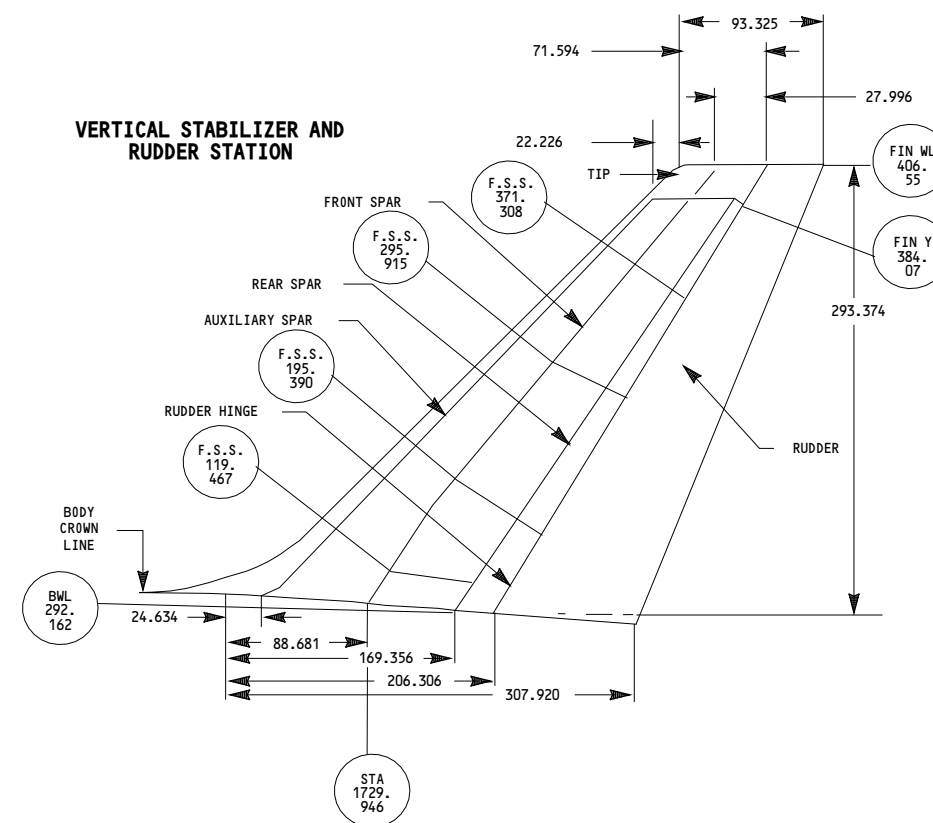

**BODY STATIONS**

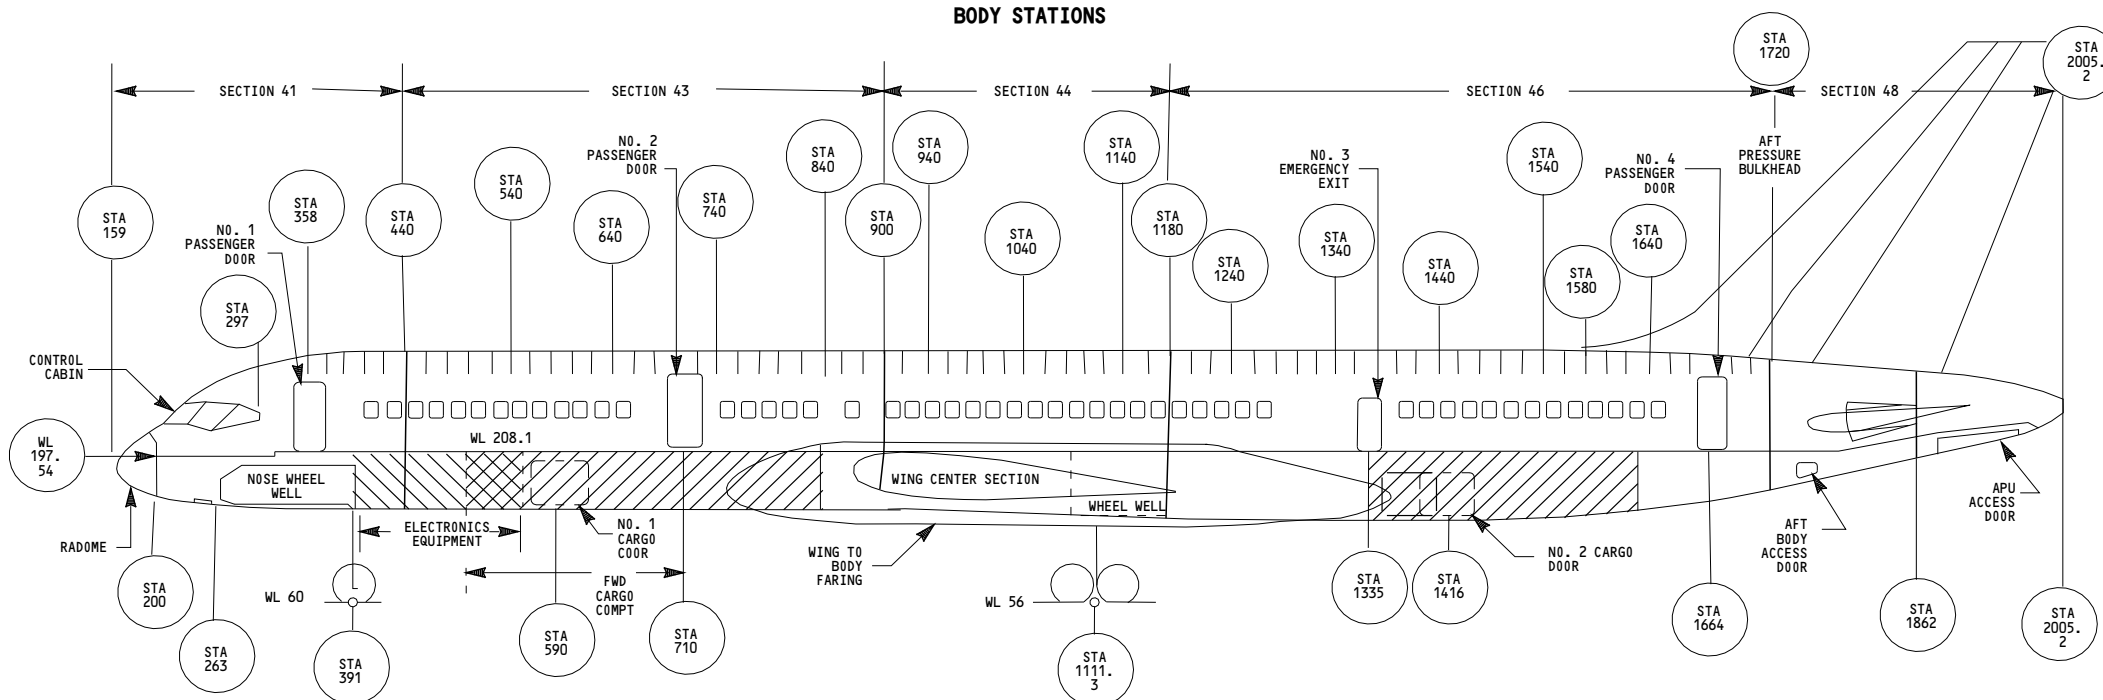

ALL

**AIRPLANE STATIONS - BODY,  
VERTICAL STAB., HORIZ  
STAB. AND ELEVATOR**

D280N032

**91-00-01**

Page 1

Jan 21/2005

**91-00-01**

Page 1

Jan 21/2005



## ENGINE & NACELLE STATIONS



## PROPULSION SYSTEM

### AIRPLANE STATIONS - WING, ENGINE AND NACELLE

**91-00-02**

Page 1

Jan 21/2005


D280N032






**91-00-02**

Page 1

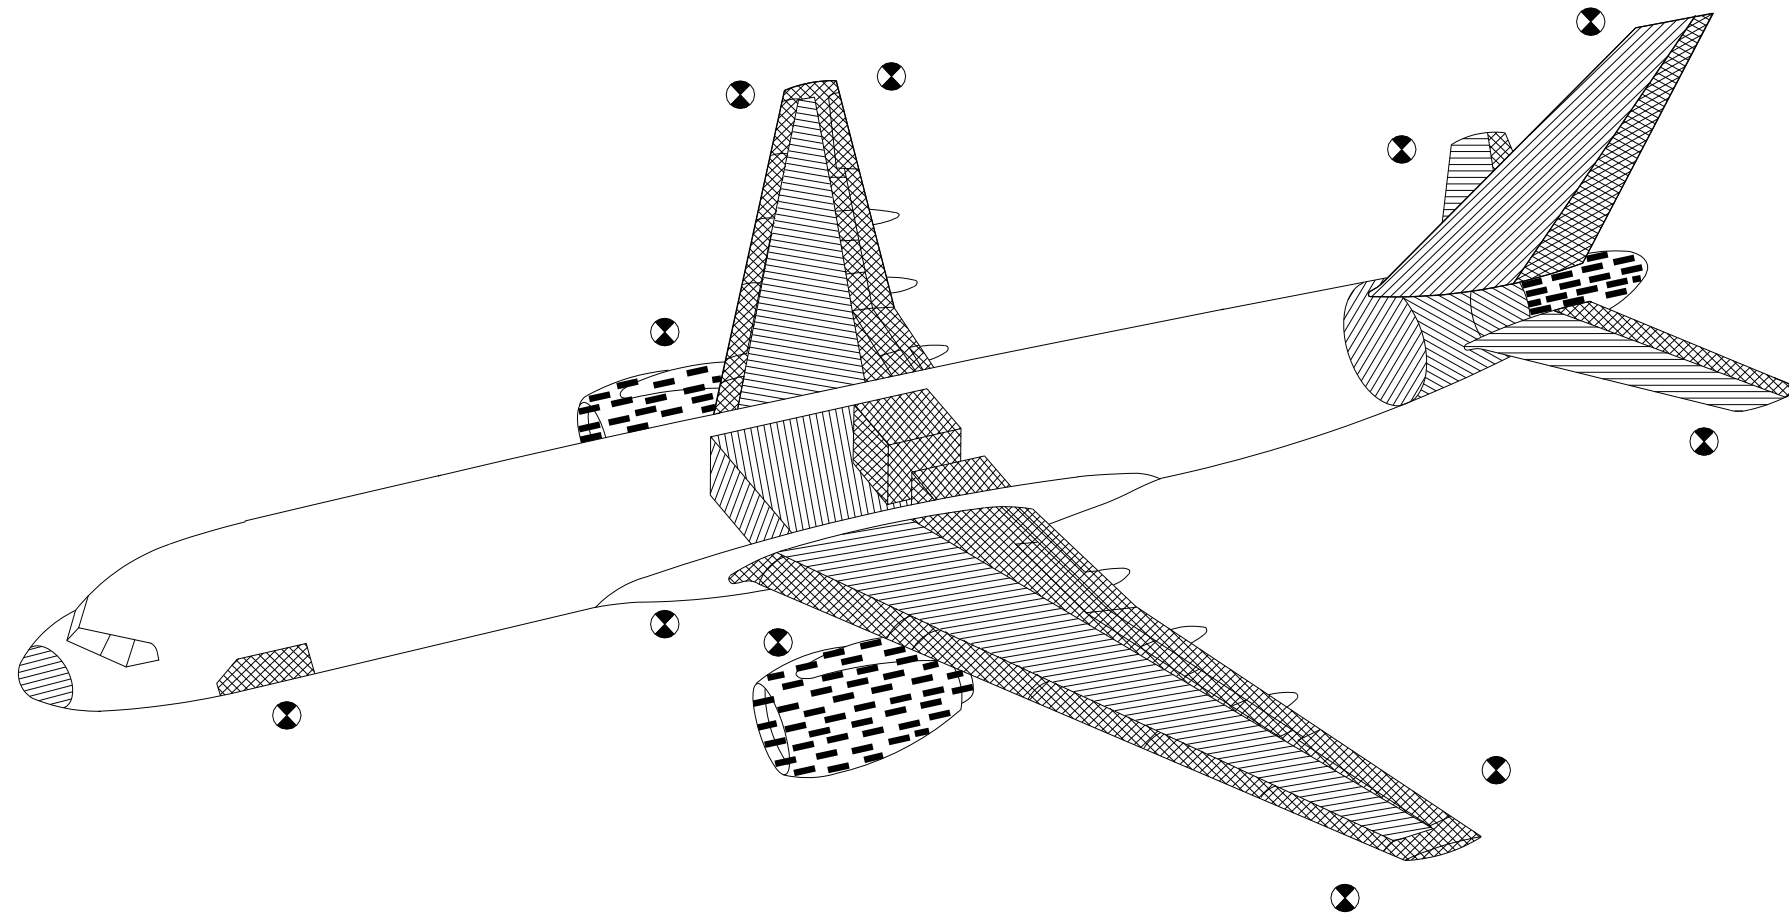Jan 21/2005

BOEING PROPRIETARY - Copyright © - Unpublished Work - See title page for details.



-  PRESSURIZED AREA
-  UNPRESSURIZED AREA
-  SWAMP AREA
-  HIGH TEMPERATURE AREA
-  HIGH VIBRATION AREA ENGINES, STRUTS,  
WING TIPS - LEADING EDGE AND TRAILING EDGE,  
HORIZONTAL STABILIZERS, VERTICAL FIN 48 SECTION,  
WHEEL WELL AREAS

ALL	WIRE ZONES
	D280N032

**91-01-01**


Page 1

Jan 21/2005

**91-01-01**

Page 1

Jan 21/2005

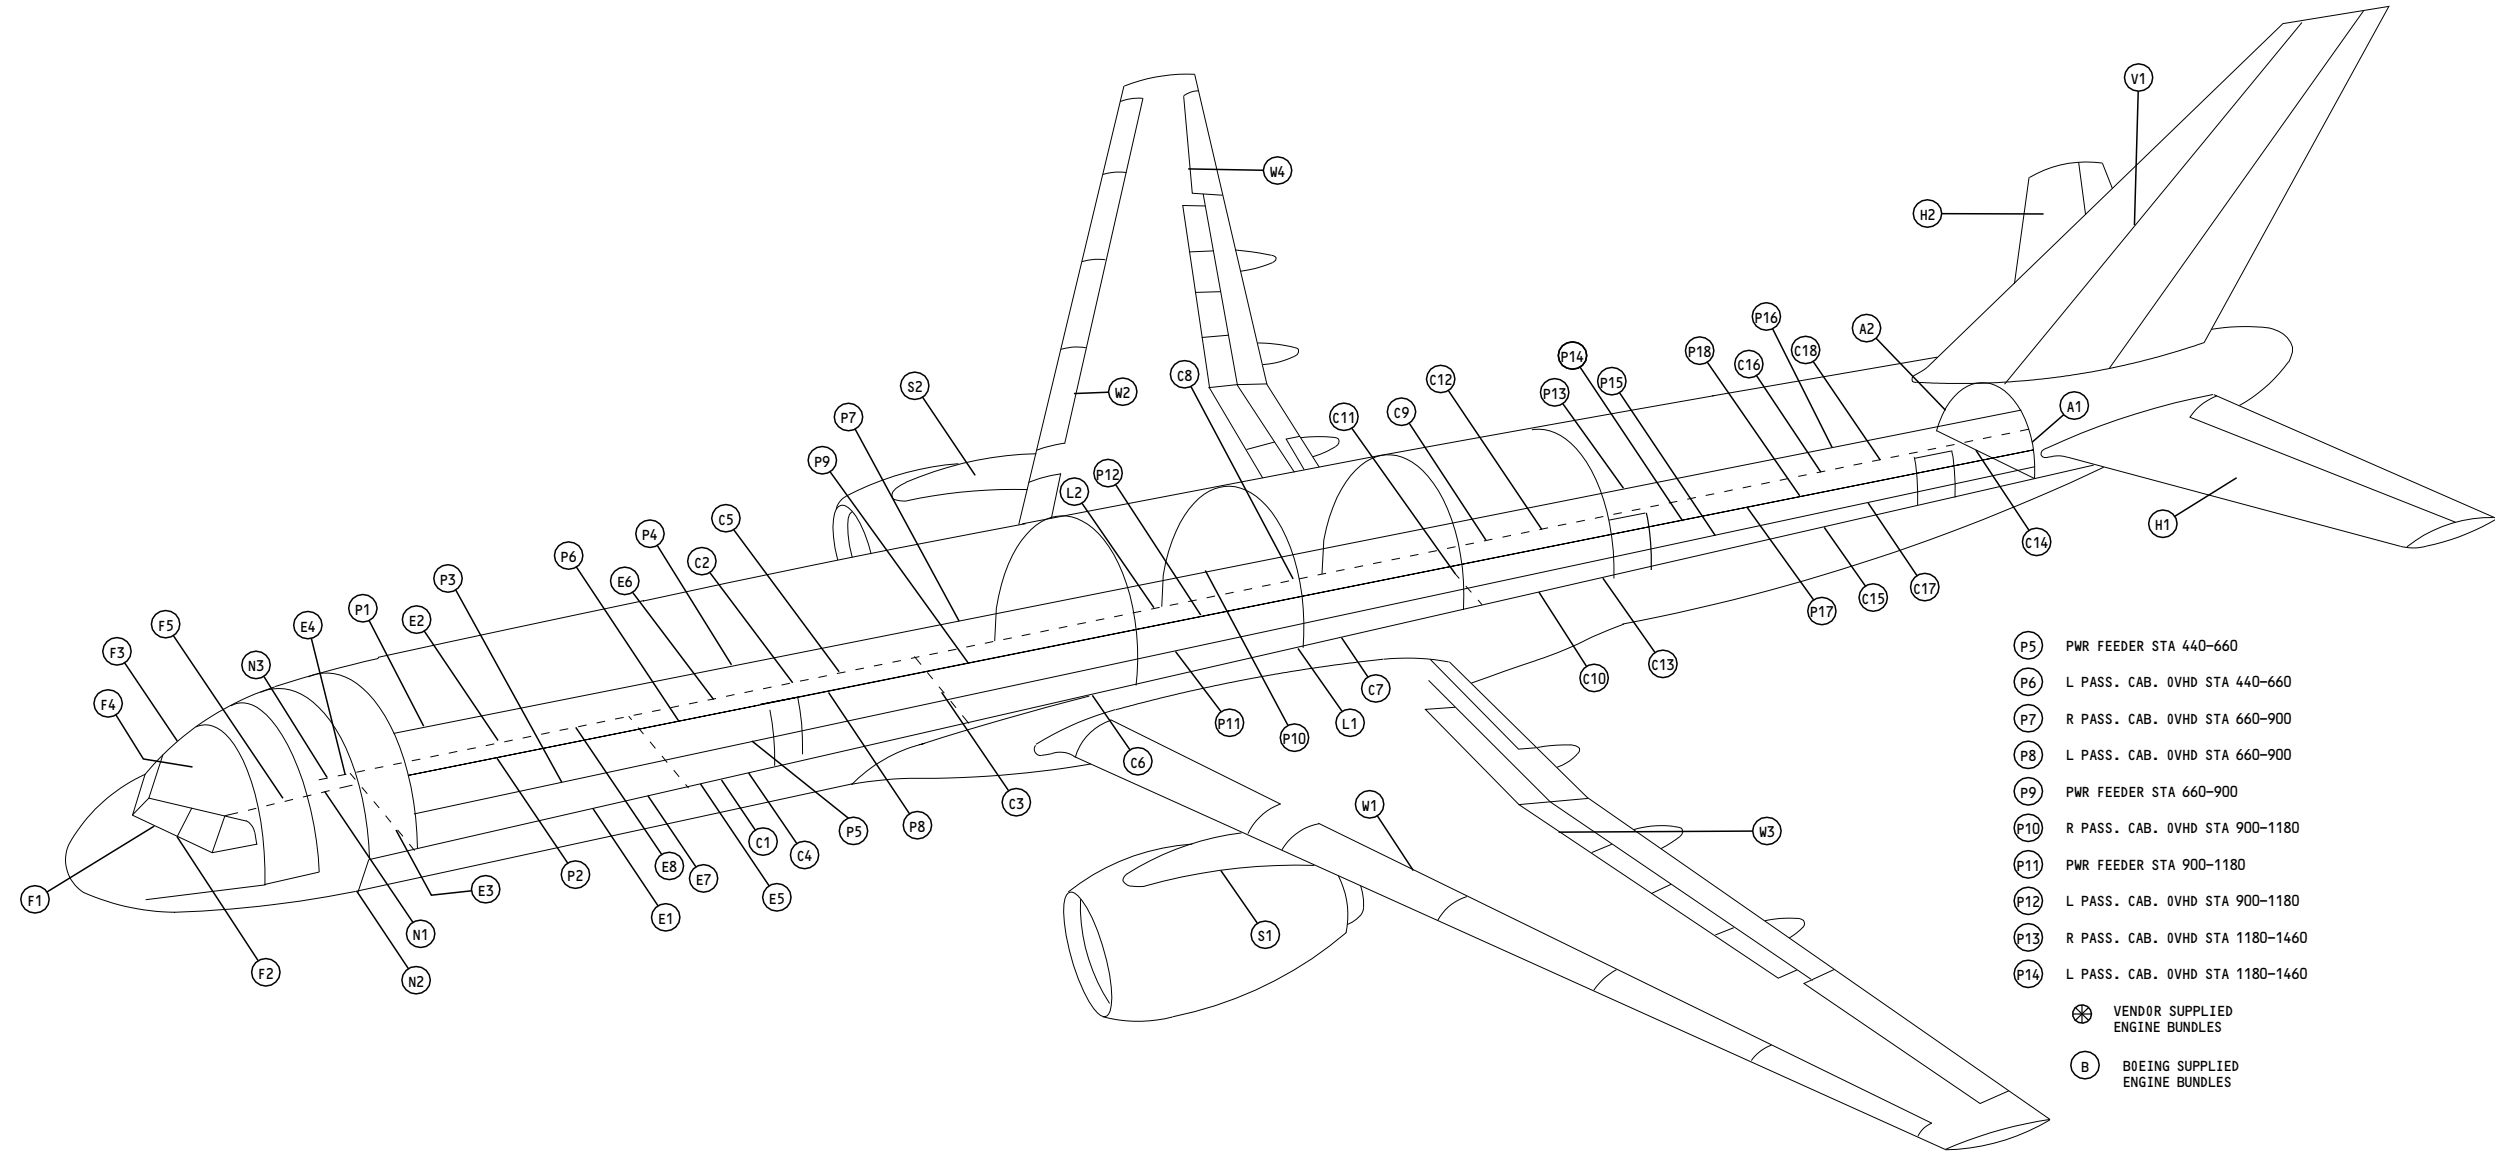

- (A1) LH S/W STA 1720-2005
- (A2) RH S/W STA 1720-2005
- (C1) LH FLOOR BEAMS STA 660-900 (LNGDT)
- (C2) RH FLOOR BEAMS STA 660-900 (LNGDT)
- (C3) LH & RH FLOOR BEAMS STA 660-900 (LAT)
- (C4) LWR L FWD CARGO AREA STA 560-900
- (C5) LWR R FWD CARGO AREA STA 560-900
- (C6) MIX BAY AREA STA 845-900
- (C7) LH FLOOR BEAMS STA 900-1180 (LNGDT)
- (C8) RH FLOOR BEAMS STA 900-1180 (LNGDT)
- (C9) RH FLOOR BEAMS STA 1180-1460 (LNGDT)

- (C10) LH FLOOR BEAMS STA 1180-1460 (LNGDT)
- (C11) FLOOR BEAMS STA 1180-1460 (LAT)
- (C12) RH FLOOR BEAMS STA 1460-1720 (LNGDT)
- (C13) LH FLOOR BEAMS STA 1460-1720 (LNGDT)
- (C14) LH & RH FLOOR BEAMS STA 1460-1720 (LAT)
- (C15) LWR L AFT CARGO AREA STA 1180-1460
- (C16) LWR R AFT CARGO AREA STA 1180-1460
- (C17) LWR L AFT CARGO AREA STA 1460-1720
- (C18) LWR R AFT CARGO AREA STA 1460-1720
- (E1) LH FLOOR BEAMS STA 297-440
- (E2) RH FLOOR BEAMS STA 297-440

- (E3) LH CONTROL CAB. FLOOR THRU TO E/E BAY
- (E4) RH CONTROL CAB. FLOOR THRU TO E/E BAY
- (E5) LH FLOOR BEAMS STA 440-660
- (E6) RH FLOOR BEAMS STA 440-660
- (E7) L ELEX BAY STA 395-560
- (E8) R ELEX BAY STA 395-560
- (F1) BULKHEAD AND FWD CABIN
- (F2) UPPER LH CABIN STA 199-297
- (F3) UPPER RH CABIN STA 199-297
- (F4) OVHD CONTROL CABIN BL O
- (F5) FLOOR BEAMS STA 199-297 AND FWD LANDING GEAR HOUSING

- (H1) HORIZ STAB. LH SEC 82
- (H2) HORIZ STAB. RH SEC 82
- (L1) LH WHEEL WELL AREA STA 900-1180
- (L2) RH WHEEL WELL AREA STA 900-1180
- (N1) NOSE WHEEL WELL
- (N2) LWR LH SIDE STA 199-395
- (N3) LWR RH SIDE STA 199-395
- (P1) R PASS. CAB. OVHD STA 297-440
- (P2) L PASS. CAB. OVHD STA 297-440
- (P3) PWR FEEDER STA 297-440
- (P4) R PASS. CAB. OVHD STA 440-660

- (P15) PWR FEEDER STA 1180-1460
- (P16) R PASS. CAB. OVHD STA 1460-1720
- (P17) PWR FEEDER STA 1460-1720
- (P18) L PASS. CAB. OVHD STA 1460-1720
- (S1) LEFT ENGINE STRUT
- (S2) RIGHT ENGINE STRUT
- (V1) VERTICAL FIN SEC 70
- (W1) LH LEADING EDGE/LH WING TIP
- (W2) RH LEADING EDGE/RH WING TIP
- (W3) LH REAR SPAR
- (W4) RH REAR SPAR

- (P5) PWR FEEDER STA 440-660
- (P6) L PASS. CAB. OVHD STA 440-660
- (P7) R PASS. CAB. OVHD STA 660-900
- (P8) L PASS. CAB. OVHD STA 660-900
- (P9) PWR FEEDER STA 660-900
- (P10) R PASS. CAB. OVHD STA 900-1180
- (P11) PWR FEEDER STA 900-1180
- (P12) L PASS. CAB. OVHD STA 900-1180
- (P13) R PASS. CAB. OVHD STA 1180-1460
- (P14) L PASS. CAB. OVHD STA 1180-1460
- (\*) VENDOR SUPPLIED ENGINE BUNDLES
- (B) BOEING SUPPLIED ENGINE BUNDLES

001-099

**ELECTRICAL/ELECTRONIC  
MAJOR ROUTING PATHWAYS**

**91-01-02**

Page 1


Jan 21/2005

D280N032

**91-01-02**

Page 1

Jan 21/2005

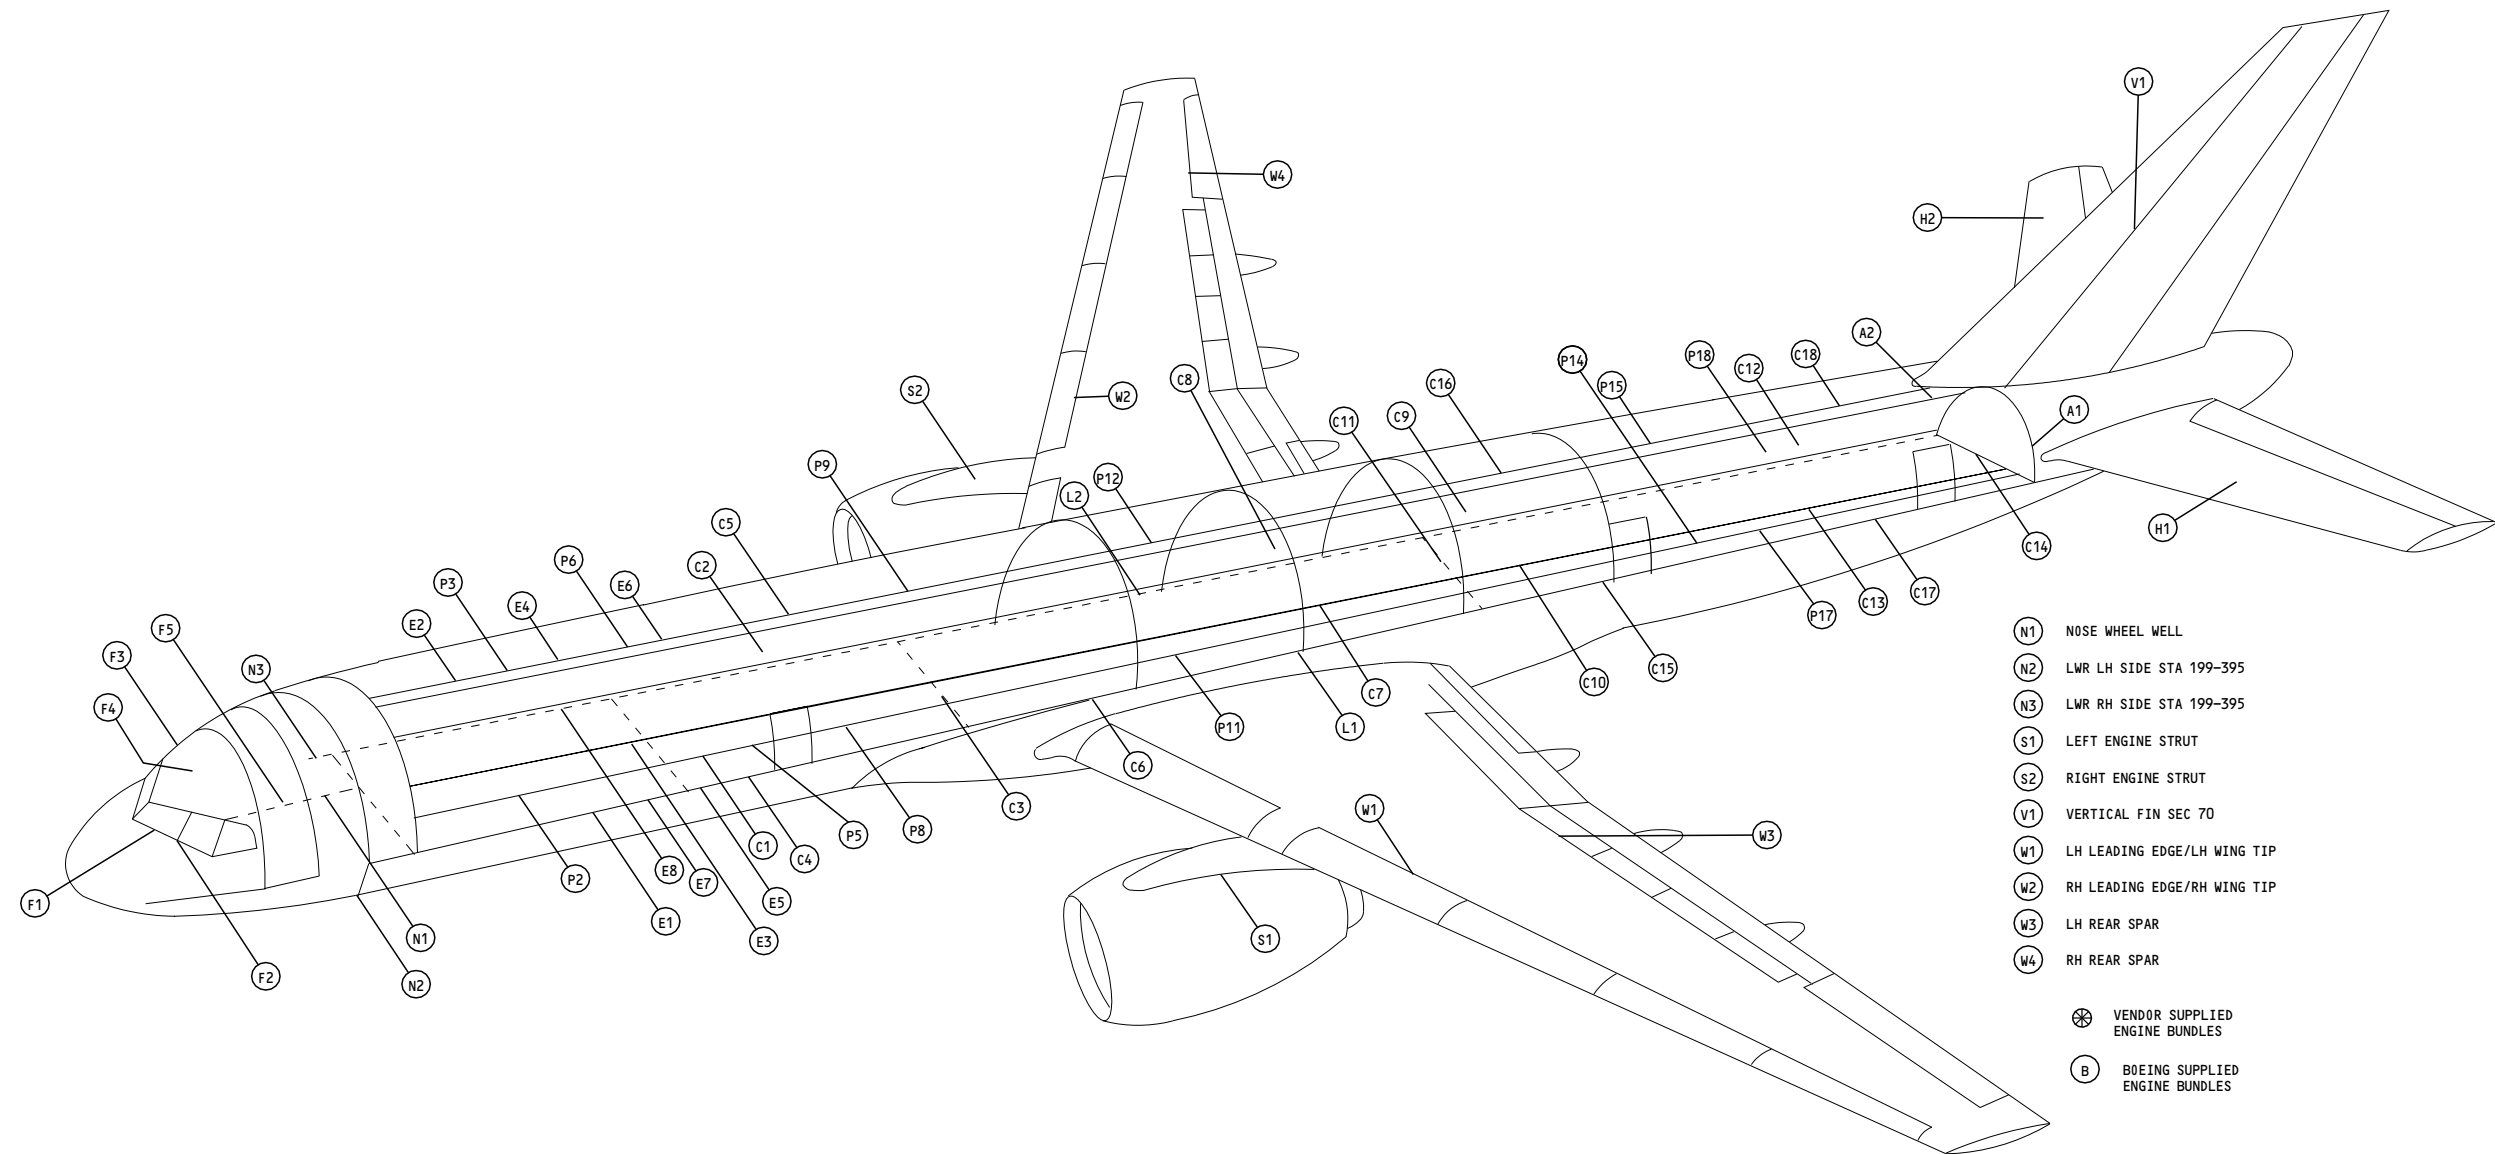

- (N1) NOSE WHEEL WELL
- (N2) LWR LH SIDE STA 199-395
- (N3) LWR RH SIDE STA 199-395
- (S1) LEFT ENGINE STRUT
- (S2) RIGHT ENGINE STRUT
- (V1) VERTICAL FIN SEC 70
- (W1) LH LEADING EDGE/LH WING TIP
- (W2) RH LEADING EDGE/RH WING TIP
- (W3) LH REAR SPAR
- (W4) RH REAR SPAR
- VENDOR SUPPLIED ENGINE BUNDLES
- BOEING SUPPLIED ENGINE BUNDLES

- (A1) LH S/W STA 1720-2005
- (A2) RH S/W STA 1720-2005
- (C1) LH FLOOR BEAMS STA 660-900 (LNGDT)
- (C2) RH FLOOR BEAMS STA 660-900 (LNGDT)
- (C3) LH & RH FLOOR BEAMS STA 660-900 (LAT)
- (C4) LWR L FWD CARGO AREA STA 560-900
- (C5) LWR R FWD CARGO AREA STA 560-900
- (C6) MIX BAY AREA STA 845-900
- (C7) LH FLOOR BEAMS STA 900-1180 (LNGDT)
- (C8) RH FLOOR BEAMS STA 900-1180 (LNGDT)
- (C9) RH FLOOR BEAMS STA 1180-1460 (LNGDT)

- (C10) LH FLOOR BEAMS STA 1180-1460 (LNGDT)
- (C11) LH & RH FLOOR BEAMS STA 1180-1460 (LAT)
- (C12) RH FLOOR BEAMS STA 1460-1720 (LNGDT)
- (C13) LH FLOOR BEAMS STA 1460-1720 (LNGDT)
- (C14) LH & RH FLOOR BEAMS STA 1460-1720 (LAT)
- (C15) LWR L AFT CARGO AREA STA 1180-1460
- (C16) LWR R AFT CARGO AREA STA 1180-1460
- (C17) LWR L AFT CARGO AREA STA 1460-1720
- (C18) LWR R AFT CARGO AREA STA 1460-1720
- (E1) LH FLOOR BEAMS STA 297-440
- (E2) RH FLOOR BEAMS STA 297-440


- (E3) LH CONTROL CAB. FLOOR THRU TO E/E BAY
- (E4) RH CONTROL CAB. FLOOR THRU TO E/E BAY
- (E5) LH FLOOR BEAMS STA 440-660
- (E6) RH FLOOR BEAMS STA 440-660
- (E7) L ELEX BAY STA 395-560
- (E8) R ELEX BAY STA 395-560
- (F1) BULKHEAD AND FWD CABIN
- (F2) UPPER LH CABIN STA 199-297
- (F3) UPPER RH CABIN STA 199-297
- (F4) OVHD CONTROL CABIN BL O
- (F5) FLOOR BEAMS STA 199-297 AND FWD LANDING GEAR HOUSING



- (H1) HORIZ STAB. LH SEC 82
- (H2) HORIZ STAB. RH SEC 82
- (L1) LH WHEEL WELL AREA STA 900-1180
- (L2) RH WHEEL WELL AREA STA 900-1180
- (P2) PASS. CAB. LH S/W STA 297-440
- (P3) PASS. CAB. RH S/W STA 297-440
- (P5) PASS. CAB. LH S/W STA 440-660
- (P6) PASS. CAB. RH S/W STA 440-660
- (P8) PASS. CAB. LH S/W STA 660-900
- (P9) PASS. CAB. RH S/W STA 660-900
- (P11) PASS. CAB. LH S/W STA 900-1180

- (P12) PASS. CAB. RH S/W STA 900-1180
- (P14) PASS. CAB. LH S/W STA 1180-1460
- (P15) PASS. CAB. RH S/W STA 1180-1460
- (P17) PASS. CAB. LH S/W STA 1460-1720
- (P18) PASS. CAB. RH S/W STA 1460-1720

TABLE I MAJOR EQUIPMENT CENTERS	
A	P1 CAPTAINS MAIN PANEL P3 FIRST OFFICERS MAIN PANEL P5 PILOTS OVERHEAD PANEL P6 MAIN POWER DISTRIBUTION PANEL P7 GLARESHIELD PANEL P8 ELECTRONIC AFT P10 QUADRANT STAND P11 OVERHEAD CIRCUIT BREAKER PANEL P33 MISCELLANEOUS RELAY PANEL P55 CENTER GLARESHIELD P61 MAINTENANCE PANEL
B	P21 ATTENDANT PANEL FWD P22 ATTENDANT PANEL AFT P23 ATTENDANT PANEL MID P31 LEFT GENERATOR POWER PANEL P32 RIGHT GENERATOR POWER PANEL P34 APU/EXT POWER SHIELD P36 MISCELLANEOUS ELEC EQUIP PANEL P37 RIGHT MISCELLANEOUS ELEC EQUIP PANEL P50 ELECTRICAL SYSTEM CARD FILE P51 WARNING ELECTRONICS UNIT P54 FIRE DETECTION CARD FILE P70 MISCELLANEOUS ELEC EQUIP PANEL E1 } E2 } E/E EQUIPMENT CENTER E3 } E4 } E5 }
C	NOSE WHEEL WELL DISC.
D	LEFT AFT CABIN DISC
E	E6 E/E EQUIPMENT CENTER
F	LEFT FRONT, REAR SPAR DISC.
G	RIGHT FRONT, REAR SPAR DISC.
H	RIGHT SPOILER DISC. - RIGHT WHEEL WELL
I	LEFT SPOILER DISC. - LEFT WHEEL WELL
J	LEFT WING REAR SPAR/BODY DISC
K	RIGHT WING REAR SPAR/BODY DISC
L	RIGHT AFT CABIN DISC.
M	APU FIRE WALL DISC.
N	RIGHT WING - ENGINE STRUT OUTBOARD CLOSURE RIB & STRUT VAPOR SEAL - BOEING INTERFACE
O	LEFT WING - ENGINE STRUT OUTBOARD CLOSURE RIB & STRUT VAPOR SEAL - BOEING INTERFACE
R	NOSE RADOME DISC
S	ANTENNA HF DISC
T	PSU DISC
U	L STAB DISC
V	R STAB DISC
W	AFT CARGO DISC


TABLE II MAJOR TRUNKLINES							
A	W2010, W2364, W2366, W2368	B-E	W2626, W2628, W2650, W4106, W4210, W4515	C	W3050	G-P	W3420, W3422, W3428
A-B	W2064, W2066, W2070, W2072, W2078, W2080, W2150, W2152, W2156, W2240, W2241, W2243, W2244, W2245, W2247, W2250, W2251, W2253, W2256, W2258, W2260, W2299, W2311, W2313, W2350, W2351, W2352, W2353, W2354, W2356, W2358, W2359, W2360, W2362, W2370, W2441, W2447, W2611, W4202, W4204, W4208	B-F	W4006, W4206, W4208, W4210, W4226,	E	W2632, W2642, W2644, W2646, W2648, W2654	J-Q	W5114
		B-G	W4106, W4212, W4216, W4218, W4220, W4234, W4236	E-F	W2642, W2646	K-N	W3426, W3428, W5214
		B-H	W4220, W4236	E-G	W2644, W2648	M	W2028, W2048
		B-I	W4210	E-M	W2654	N	W3416, W3418, W3430, W3462, W5200, W5202, W5204, W5208, W5214
A-D	W2241	B-J	W2626, W4006, W4024, W4202, W4204, W4206, W4208, W4228, W4230, W4232, W4238, W4300, W4302, W4517	F-O	W3300, W3302, W3304, W3314, W3320 W3322, W3328, W3342, W3380	O	W3316, W3318, W3326, W3330, W5100, W5102, W5104, W5108, W5114
A-E	W2700	B-K	W4212, W4216, W4218, W4220, W4234, W4236, W4300, W4302	G-N	W3400, W3402, W3404, W3414, W3424, W3446, W3458, W3460, W3480		
A-I	W2441, W2447	B-L	W2611, W2621				
A-H	W2441, W2447	B-M	W2626, W2628, W2818				
B	W1275, W2311, W2313, W2602, W2605, W2611, W2621, W2626, W2818, W3576, W4006, W4018, W4024, W4026, W4104, W4202, W4204, W4206, W4208, W4210, W4212, W4218, W4220, W4226, W4228, W4230, W4232, W4234, W4236, W4238, W4302, W4420, W4421, W4422, W4423, W4424, W4425, W4427, W4471, W4473, W4475, W4477, W4479, W4481, W4500, W4502, W4504	B-S	W2626, W2663, W2665				
		B-T	W2626, W3702, W3704				
B-C	W2150, W2152	B-W	W2602				
B-D	W2605						

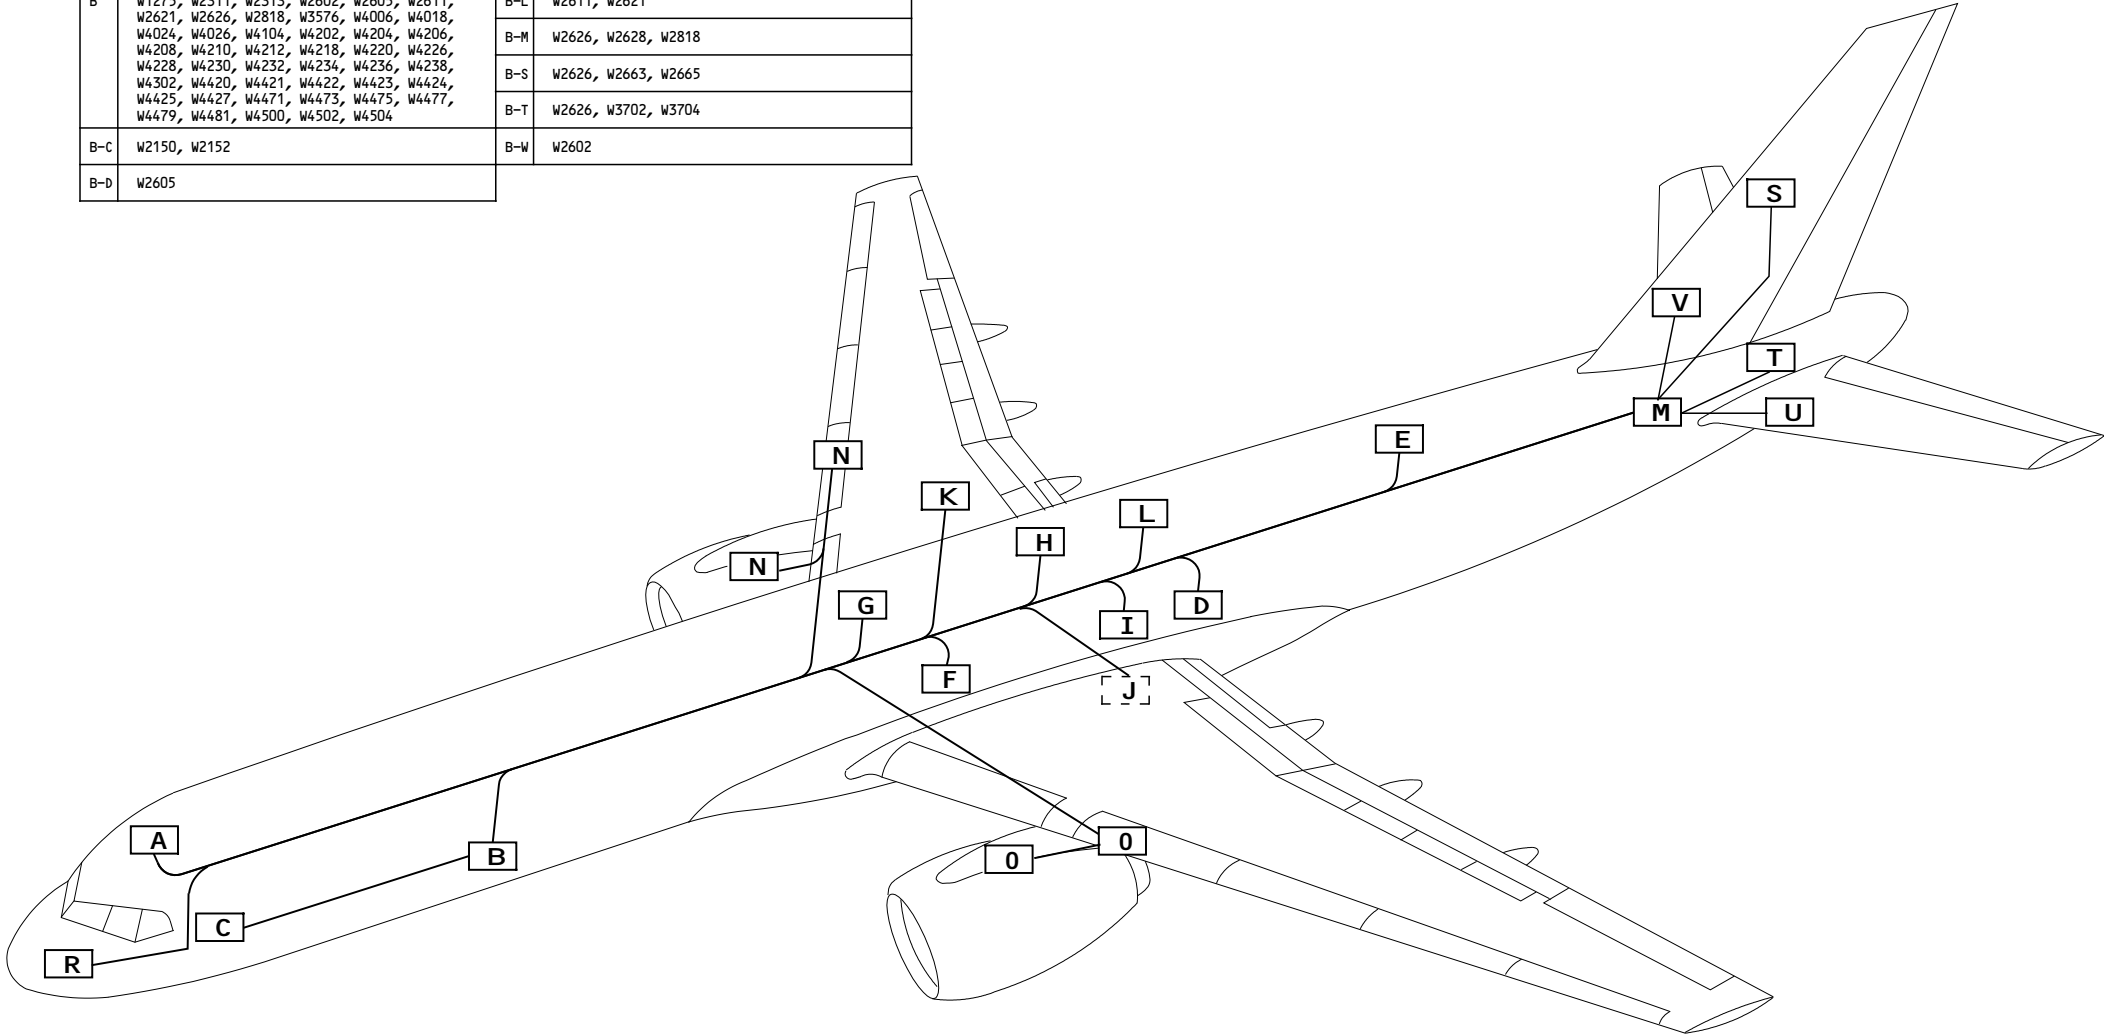

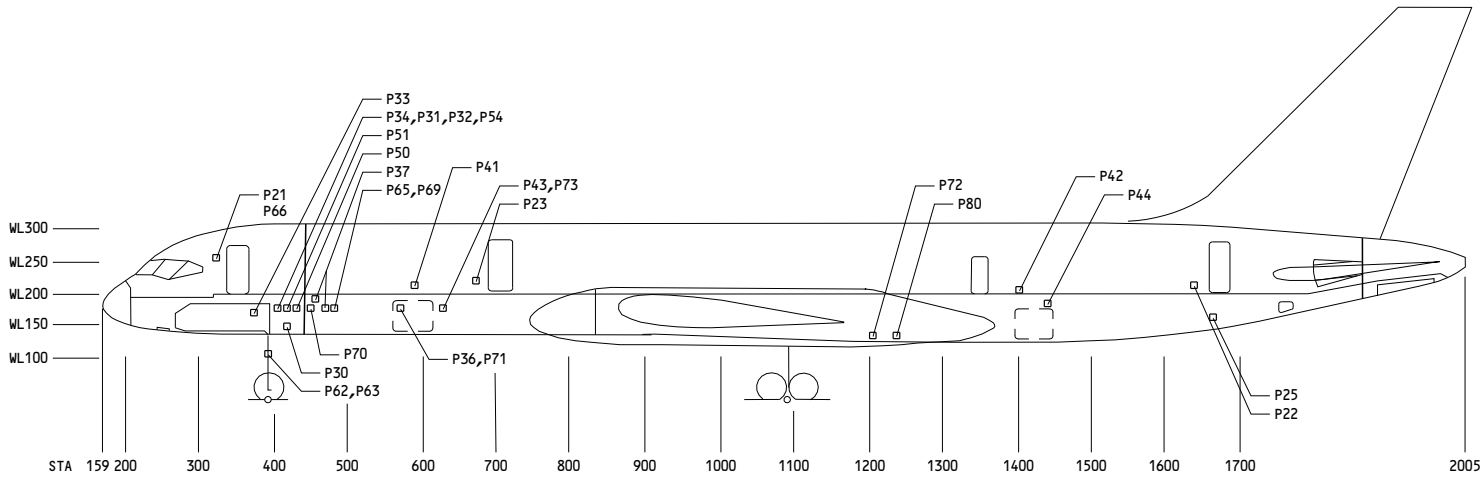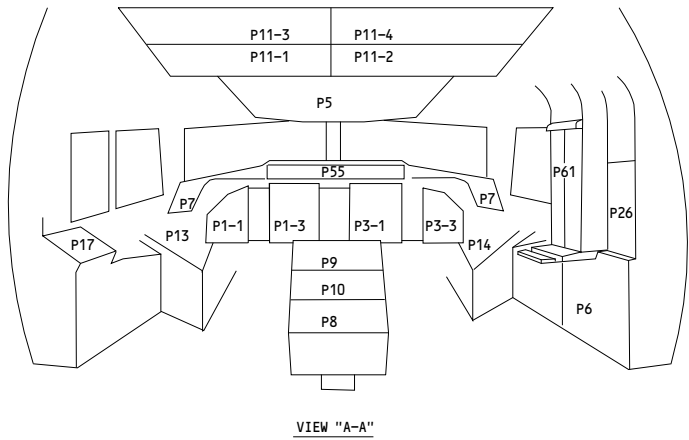

PANEL NOMENCLATURE

P1-1 PANEL-CAPT MAIN INSTR	P33 PANEL-MISC ELEC EQUIP
P1-3 PANEL-CAPT CTR INSTR	P34 PANEL-APU EXT POWER
P3-1 PANEL-F/O CTR INSTR	P36 PANEL-MISC ELEC EQUIP
P3-3 PANEL-F/O MAIN INSTR	P37 PANEL-MISC ELEC EQUIP, R
P5 PANEL-PLT OVHD	P41 CONT PANEL-INT, NO.1 CARGO DOOR
P6 PANEL-MN PWR DISTR	P42 CONT PANEL-INT, NO.2 CARGO DOOR
P7 PANEL-GLARESHIELD	P43 CONT PANEL-EXT, NO.1 CARGO DR
P8 PANEL-ELECTRONICS, AFT	P44 CONT PANEL-EXT, NO.2 CARGO DR
P9 PANEL-ELECTRONICS, FWD	P50 PANEL-ELECT SYS CARD FILE
P10 STAND-QUADRANT	P51 PANEL-WARN ELEC CARD FILE
P11 PANEL-OVHD CIRCUIT BREAKER	P54 PANEL-FIRE DET CARD FILE
P13 PANEL-CAPT AUX INSTR, FWD	P55 PANEL-GLARE SHIELD, CTR
P14 PANEL-F/O AUX INSTR, FWD	P61 PANEL-SIDEWALL
P17 PANEL-FIRST OBSERVER INSTR	P62 CONT PANEL-NLG, R
P21 PANEL-ATTENDANT, FWD	P63 CONT PANEL-NLG, L
P22 PANEL-ATTENDANT, AFT	P65 EQPT PANEL - MISC ELEC
P23 PANEL-ATTENDANT, MID (DOOR 2 LH)	P66 PANEL-ANNOUNCE SELECT
P25 PANEL-WATER SERVICE	P69 PANEL-EICAS RELAY
P26 PANEL-LIGHTING EQUIPMENT	P70 PANEL-MISC ELEC EQUIP
P28 PANEL-FUELING	P71 PANEL-HYDR GEN CONTROL
P30 PANEL-EXT PWR RCPT PNL	P72 PANEL-MAIN W/W ELEC SERVICE
P31 PANEL-LEFT GEN PWR	P80 PANEL-LEFT W/W ELEC SERVICE
P32 PANEL-R GEN PWR	

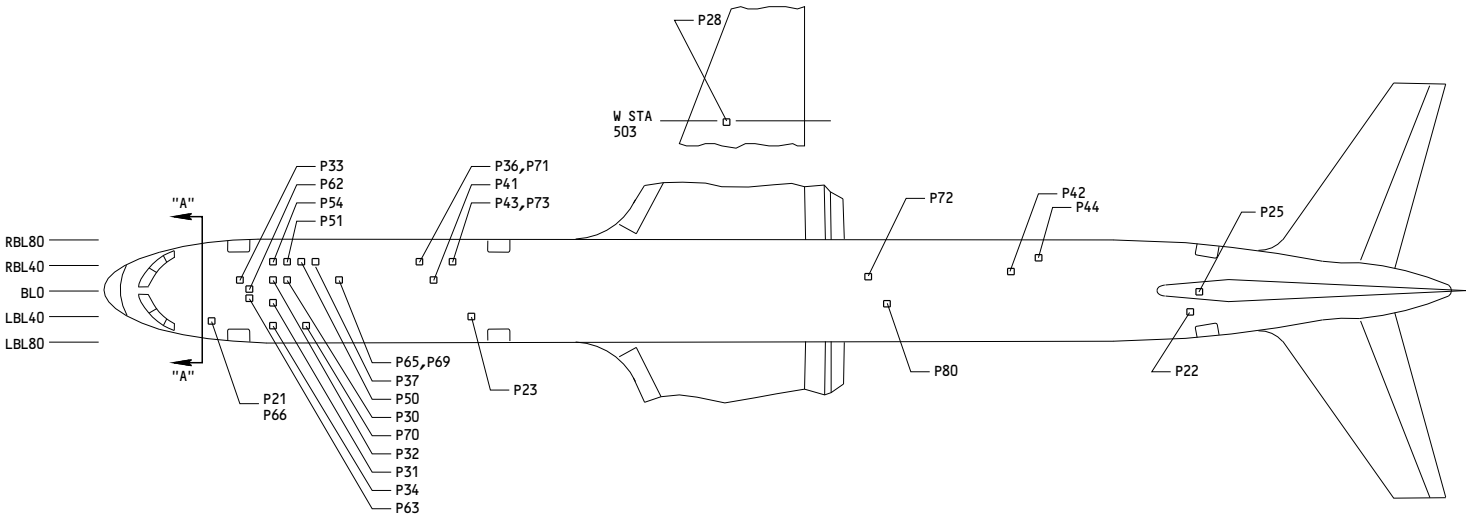

NOTES: THIS IS A GENERIC DRAWING. SEE EQUIPMENT LIST FOR ITEMS INSTALLED.

001-099	PANEL LOCATIONS
	D280N032

91-01-21

Page 1

Jan 21/2005

91-01-21

Page 1

Jan 21/2005

E1 - MAIN EQUIPMENT CENTER

1 E1-1 ELECTRICAL - RIGHT  
E1-2 ELECTRICAL - LEFT

E2 - MAIN EQUIPMENT CENTER

E2-1 FLIGHT MANAGEMENT/CONTROLS - LEFT  
E2-2 FLIGHT MANAGEMENT/CONTROLS - RIGHT  
E2-3 FLIGHT MANAGEMENT/CONTROLS - CENTER  
E2-4 INERTIAL REFERENCE UNIT

E3 - MAIN EQUIPMENT CENTER

E3-1 CONTROLS  
E3-2 FLIGHT MANAGEMENT/CONTROLS  
E3-3 FLIGHT MANAGEMENT  
E3-4 ELECTRICAL

FLIGHT AND VOICE RECORDER LOCATIONS

FLIGHT RECORDER  
VOICE RECORDER

SEE VIEW A

SEE VIEW B

VOICE RECORDER

FLIGHT RECORDER

VIEW B  
FLT AND VOICE RCDR LOC

E4 - MAIN EQUIPMENT CENTER

E4-1 CONTROLS  
E4-2 FLIGHT MANAGEMENT  
E4-3 COMMUNICATION AUDIO  
E4-4 COMMUNICATION AUDIO

E5 - MAIN EQUIPMENT CENTER

E5-1 CONTROLS/ELECTRICAL/FLT MANAGEMENT  
E5-2 CONTROLS/ELECTRICAL/FLT MANAGEMENT  
E5-3 CONTROLS/ELECTRICAL/FLT MANAGEMENT

E6 - AFT EQUIPMENT CENTER

E6-1 FLIGHT MANAGEMENT/COMMUNICATION  
E6-2 ELECTRICAL  
E6-3 FLIGHT MANAGEMENT/ELECTRICAL

FWD EQUIPMENT AREA

INVERTER  
BATTERY CHARGER  
WEATHER RADAR NO.1  
MAIN BATTERY

WEATHER RADAR NO.1

MAIN BATTERY

BATTERY CHARGER

INVERTER

VIEW A  
FWD EQPT AREA

001-099

**MAJOR EQUIPMENT CENTERS -  
SHELVES**

**91-01-22**

Page 1

Jan 21/2005

D280N032

**91-01-22**

Page 1

Jan 21/2005



E1 - MAIN EQUIPMENT CENTER

2 E1-1 ELECTRICAL - RIGHT  
E1-2 ELECTRICAL - LEFT

E2 - MAIN EQUIPMENT CENTER

E2-1 FLIGHT MANAGEMENT/CONTROLS - LEFT  
E2-2 FLIGHT MANAGEMENT/CONTROLS - RIGHT  
E2-3 FLIGHT MANAGEMENT/CONTROLS - CENTER  
E2-4 INERTIAL REFERENCE UNIT

E3 - MAIN EQUIPMENT CENTER

E3-1 CONTROLS  
E3-2 FLIGHT MANAGEMENT/CONTROLS  
E3-3 FLIGHT MANAGEMENT  
E3-4 ELECTRICAL

FLIGHT AND VOICE RECORDER LOCATIONS

FLIGHT RECORDER  
VOICE RECORDER

SEE VIEW A

SEE VIEW B

E4 - MAIN EQUIPMENT CENTER

E4-1 CONTROLS  
E4-2 FLIGHT MANAGEMENT  
E4-3 COMMUNICATION AUDIO  
E4-4 COMMUNICATION AUDIO

E5 - MAIN EQUIPMENT CENTER

E5-1 CONTROLS/ELECTRICAL/FLT MANAGEMENT  
E5-2 CONTROLS/ELECTRICAL/FLT MANAGEMENT  
E5-3 CONTROLS/ELECTRICAL/FLT MANAGEMENT

E6 - AFT EQUIPMENT CENTER

E6-1 FLIGHT MANAGEMENT/COMMUNICATION  
E6-2 ELECTRICAL  
E6-3 FLIGHT MANAGEMENT/ELECTRICAL

FWD EQUIPMENT AREA

INVERTER  
BATTERY CHARGER  
WEATHER RADAR NO.1  
MAIN BATTERY



VIEW A  
FWD EQPT AREA

VIEW B  
FLT AND VOICE RCDR LOC

115-199

MAJOR EQUIPMENT CENTERS -  
SHELVES

D280N032

91-01-22

Page 2


Jan 21/2005

91-01-22

Page 2

Jan 21/2005

-A  
5

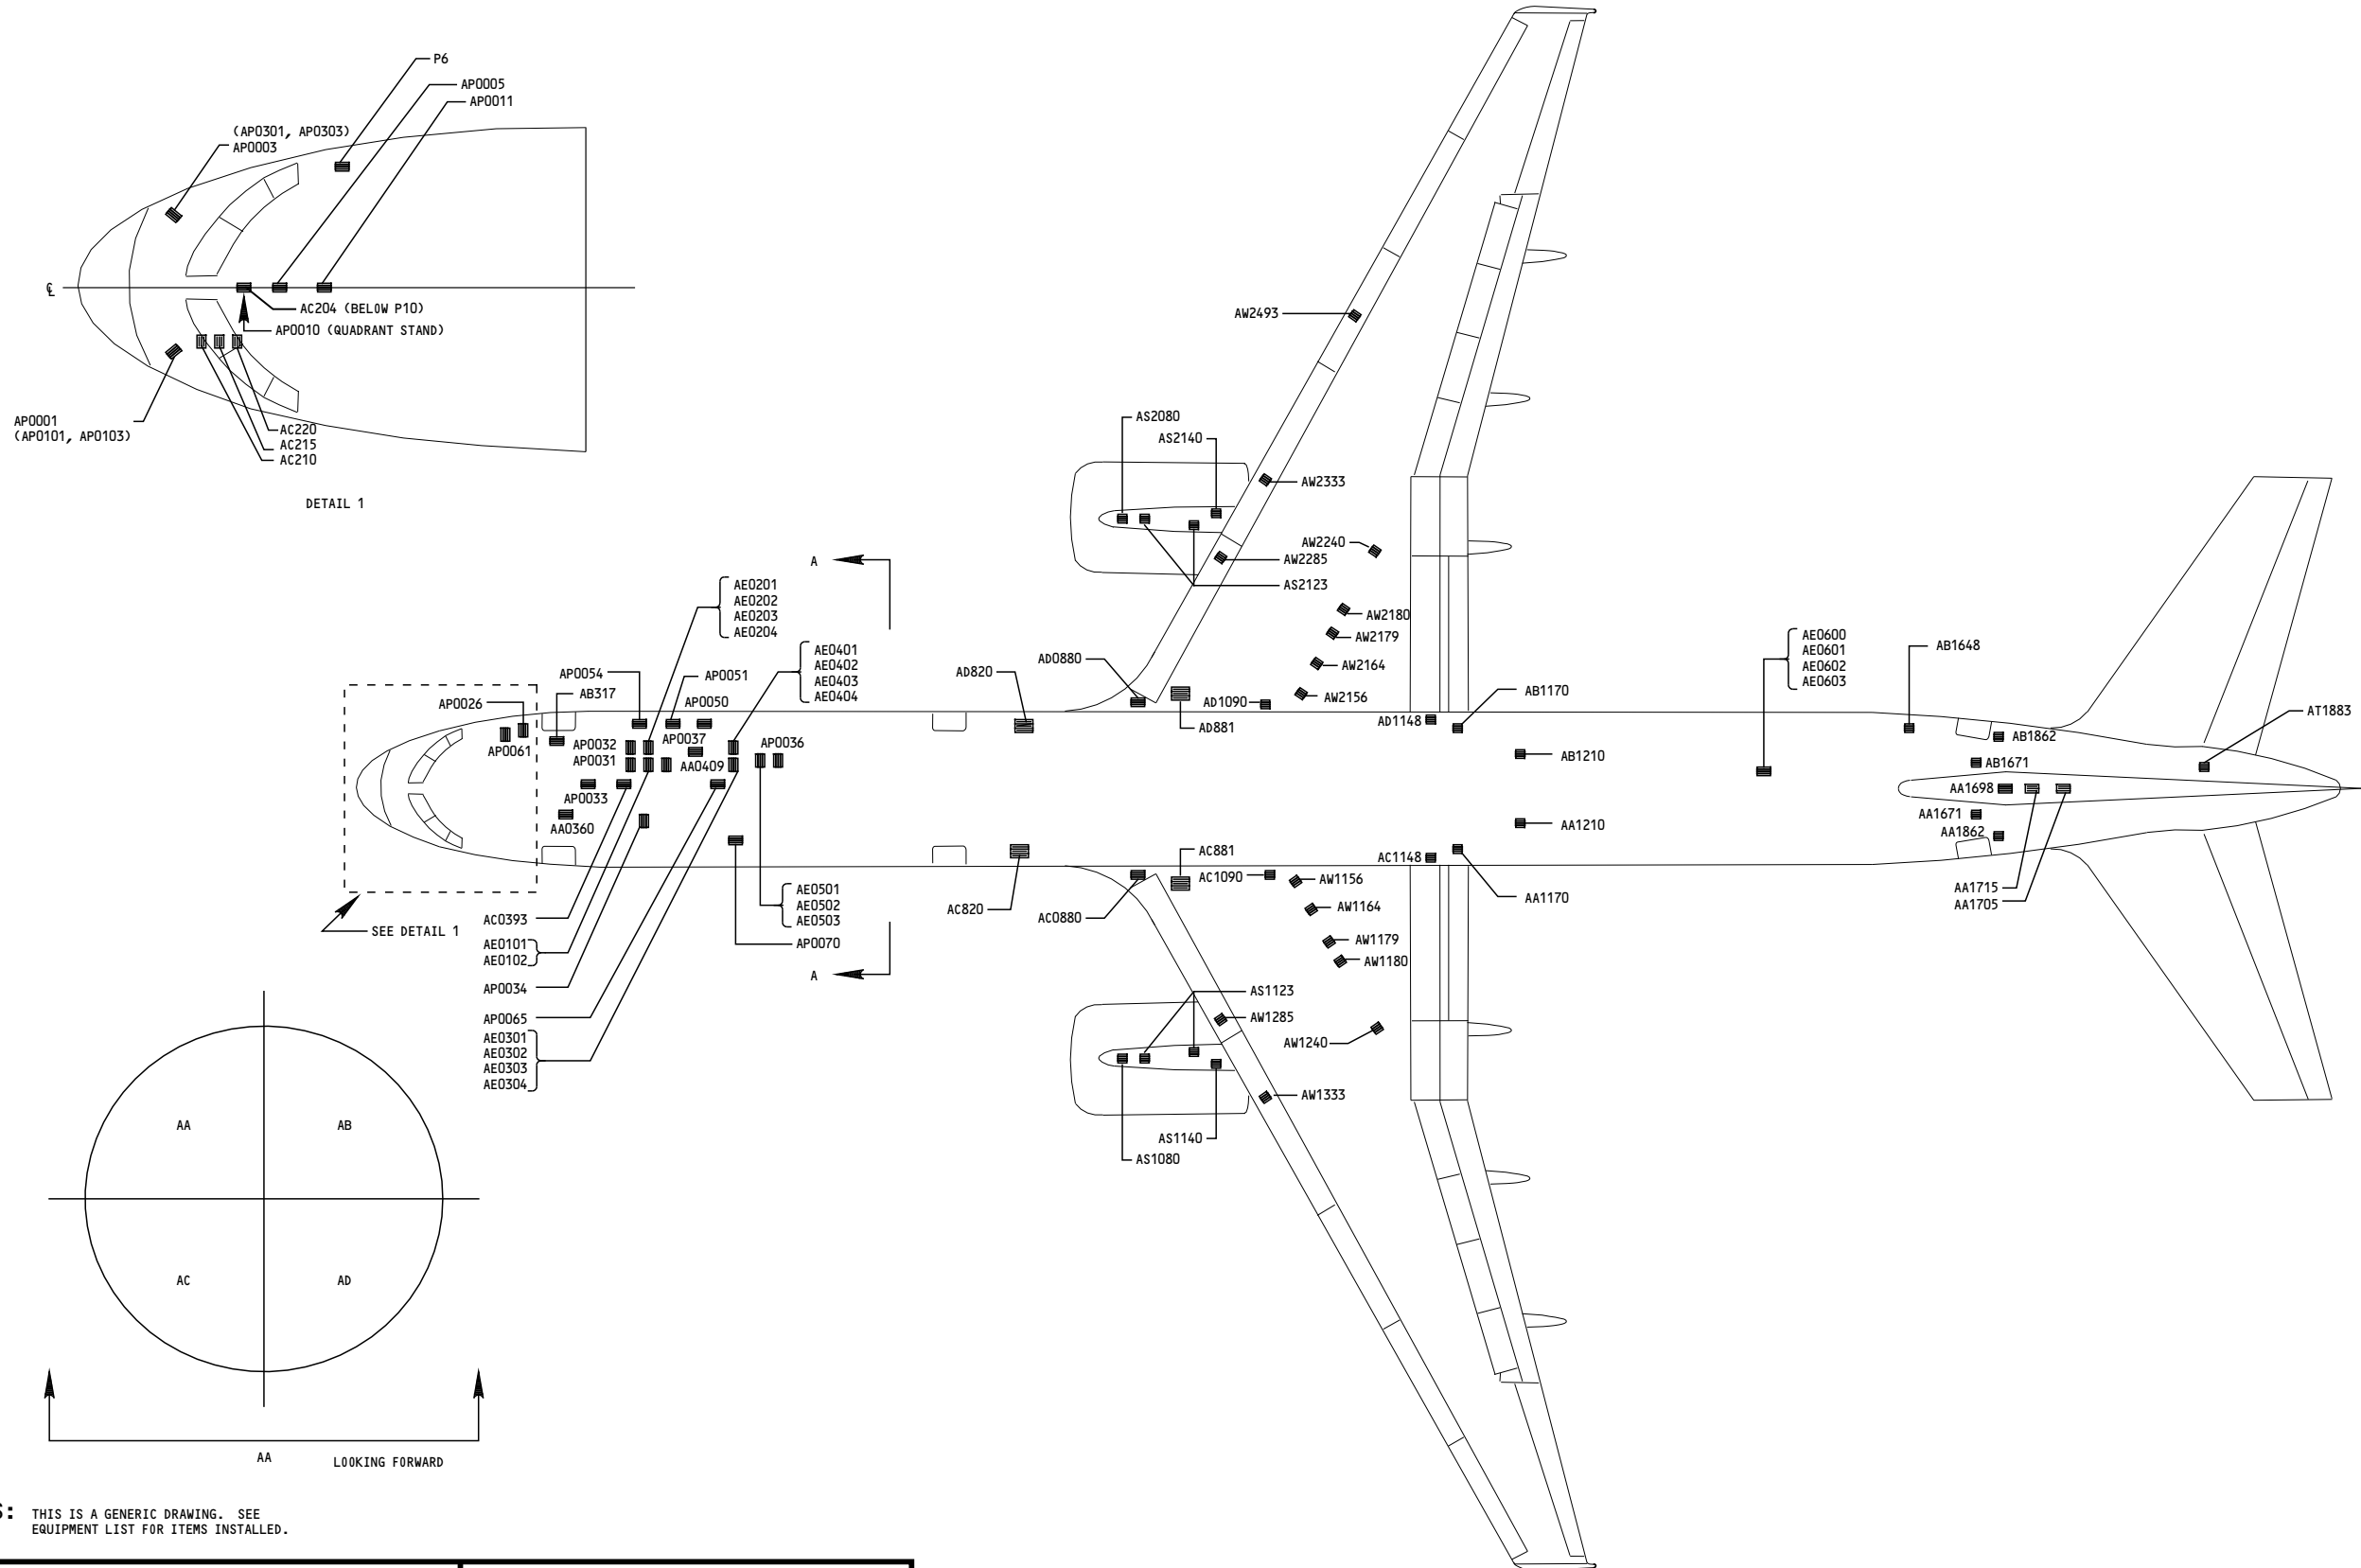

**NOTES:** THIS IS A GENERIC DRAWING. SEE EQUIPMENT LIST FOR ITEMS INSTALLED.

ALL

**DISCONNECT PANEL  
LOCATIONS**

D280N032

**91-01-23**


Page 1

Jan 21/2005

**91-01-23**

Page 1

Jan 21/2005

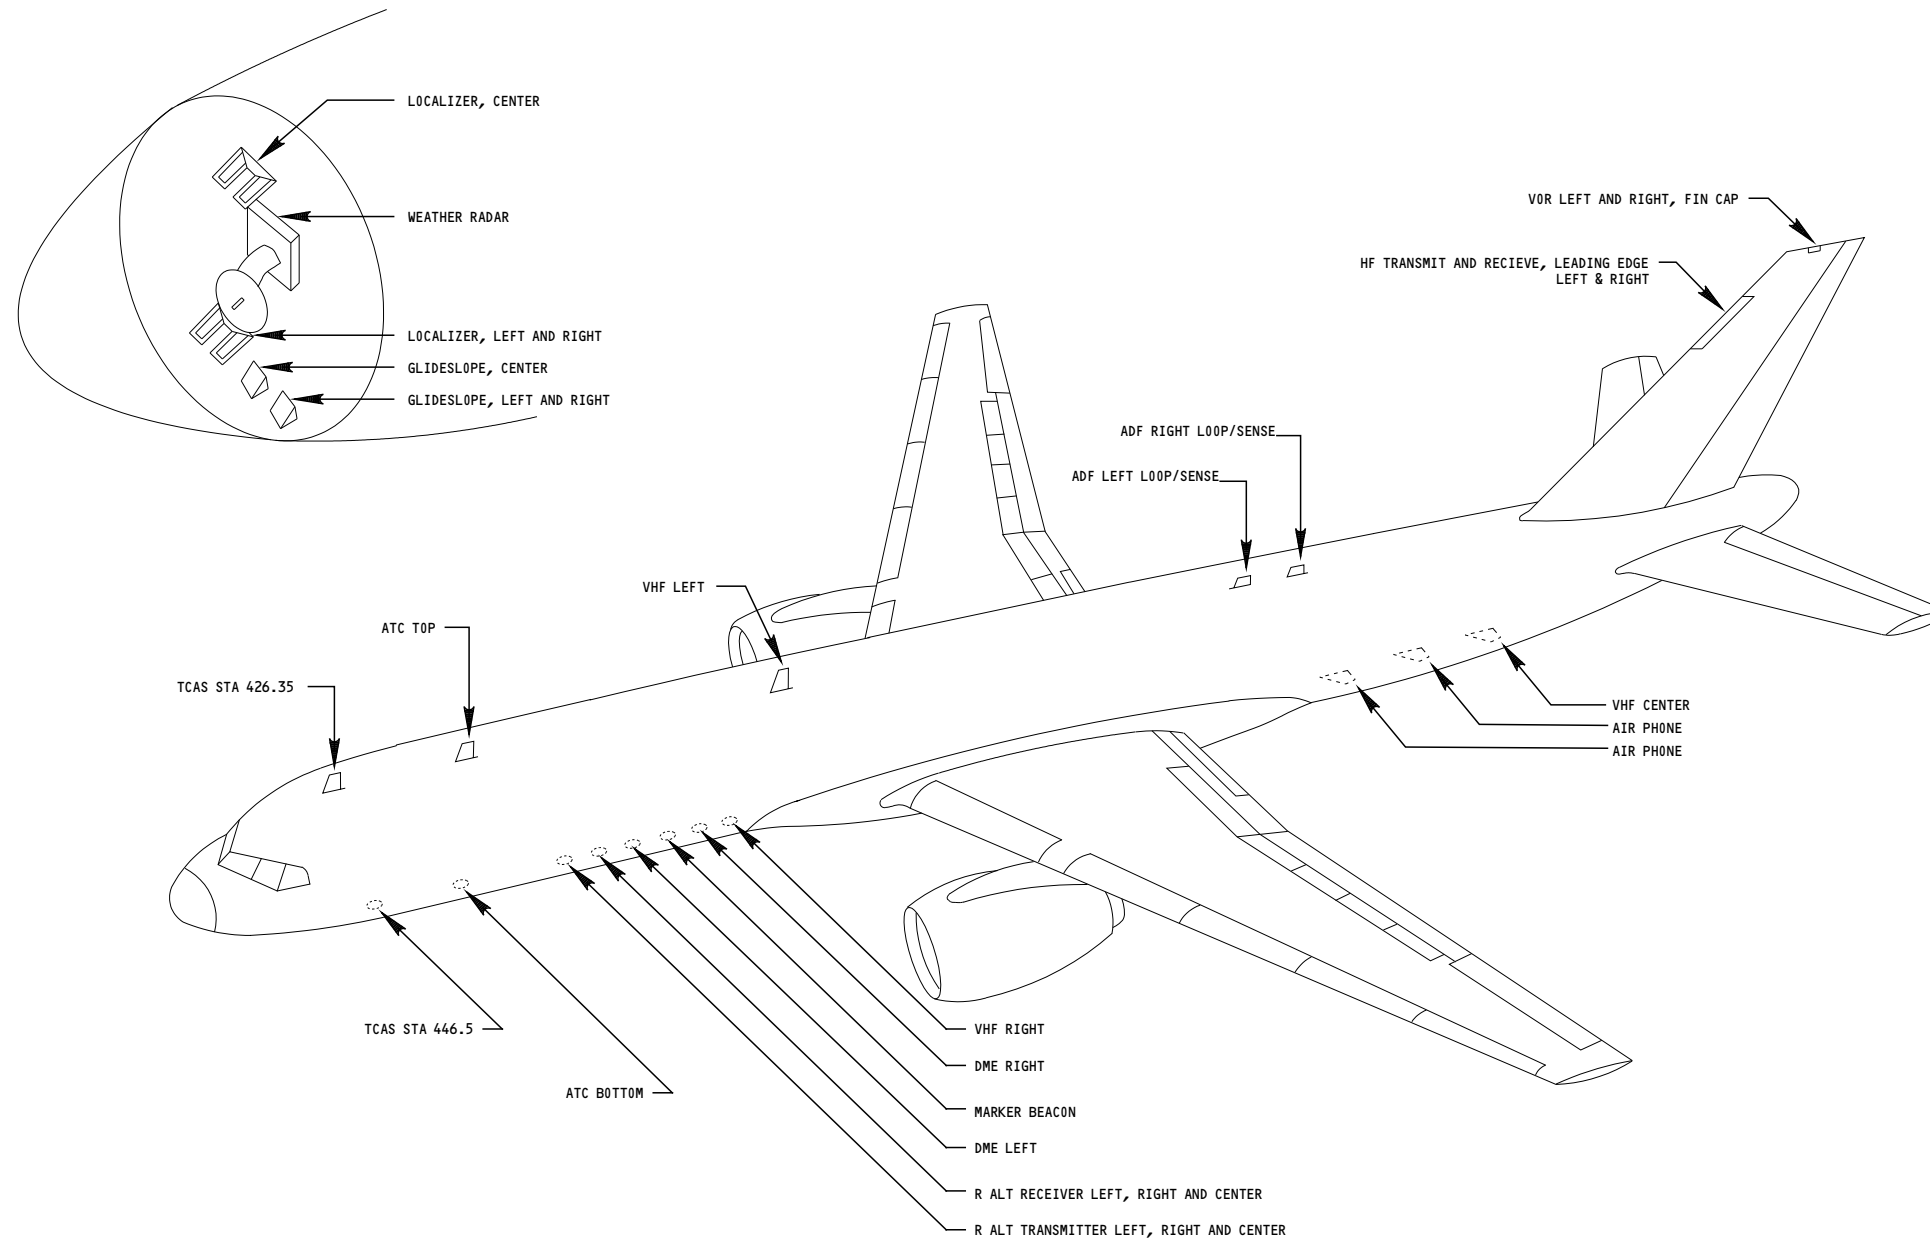

**NOTES:** THIS IS A GENERIC DRAWING. SEE EQUIPMENT LIST FOR ITEMS INSTALLED.

ALL	<b>ANTENNA LOCATIONS</b>
	D280N032

**91-01-24**

Page 1

Jan 21/2005


**91-01-24**

Page 1

Jan 21/2005


## INTERPHONE JACK LOCATIONS


- D425 P62 NLG CONTROL PANEL-R
- D427 RIGHT MAIN W/W SERVICE PANEL (P72)
- D417 RIGHT WING FUELING PANEL (P28)
- D413 APU COMPARTMENT PANEL
- D423 MAIN E/E BAY (STA 225)
- D429 HORIZONTAL STABILIZER PANEL
- D415 AFT EQUIPMENT CENTER (STA 1351)
- D843 E5 EQUIPMENT RACK
- D471 P61 SIDEWALL PANEL

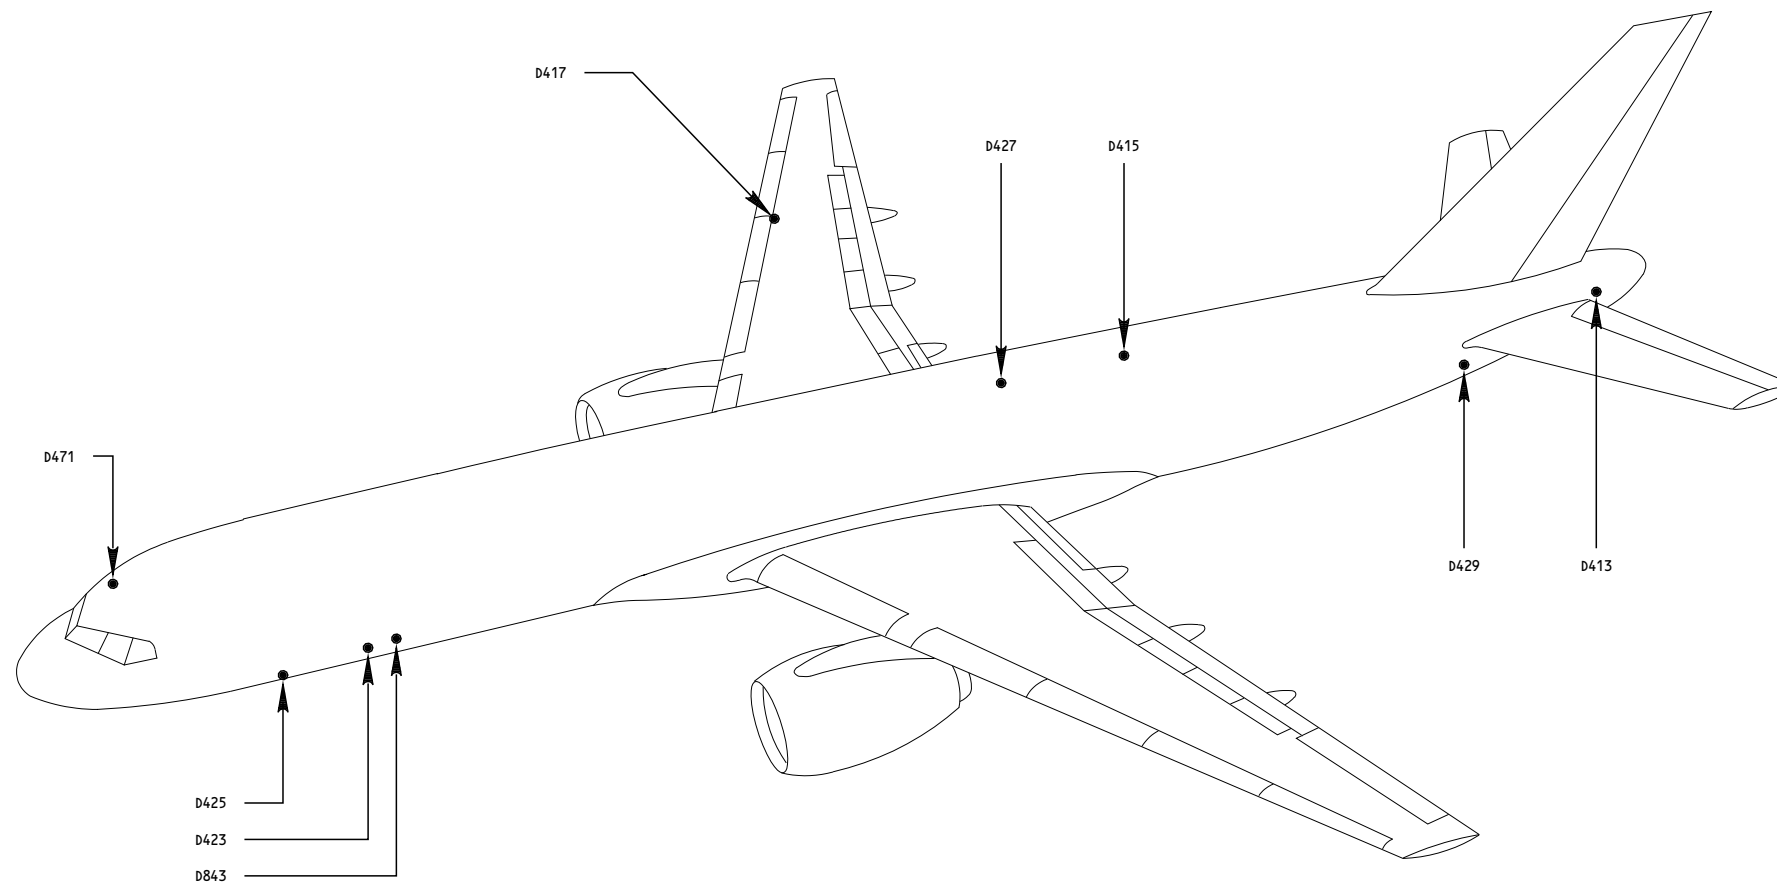

## INTERPHONE JACK LOCATIONS

- D425 P62 NLG CONTROL PANEL-R
- D427 RIGHT MAIN W/W SERVICE PANEL (P72)
- D417 RIGHT WING FUELING PANEL (P28)
- D413 APU COMPARTMENT PANEL
- D423 MAIN E/E BAY (STA 470)
- D429 HORIZONTAL STABILIZER PANEL
- D415 AFT EQUIPMENT CENTER (STA 1351)
- D843 E5 EQUIPMENT RACK
- D471 P61 SIDEWALL PANEL

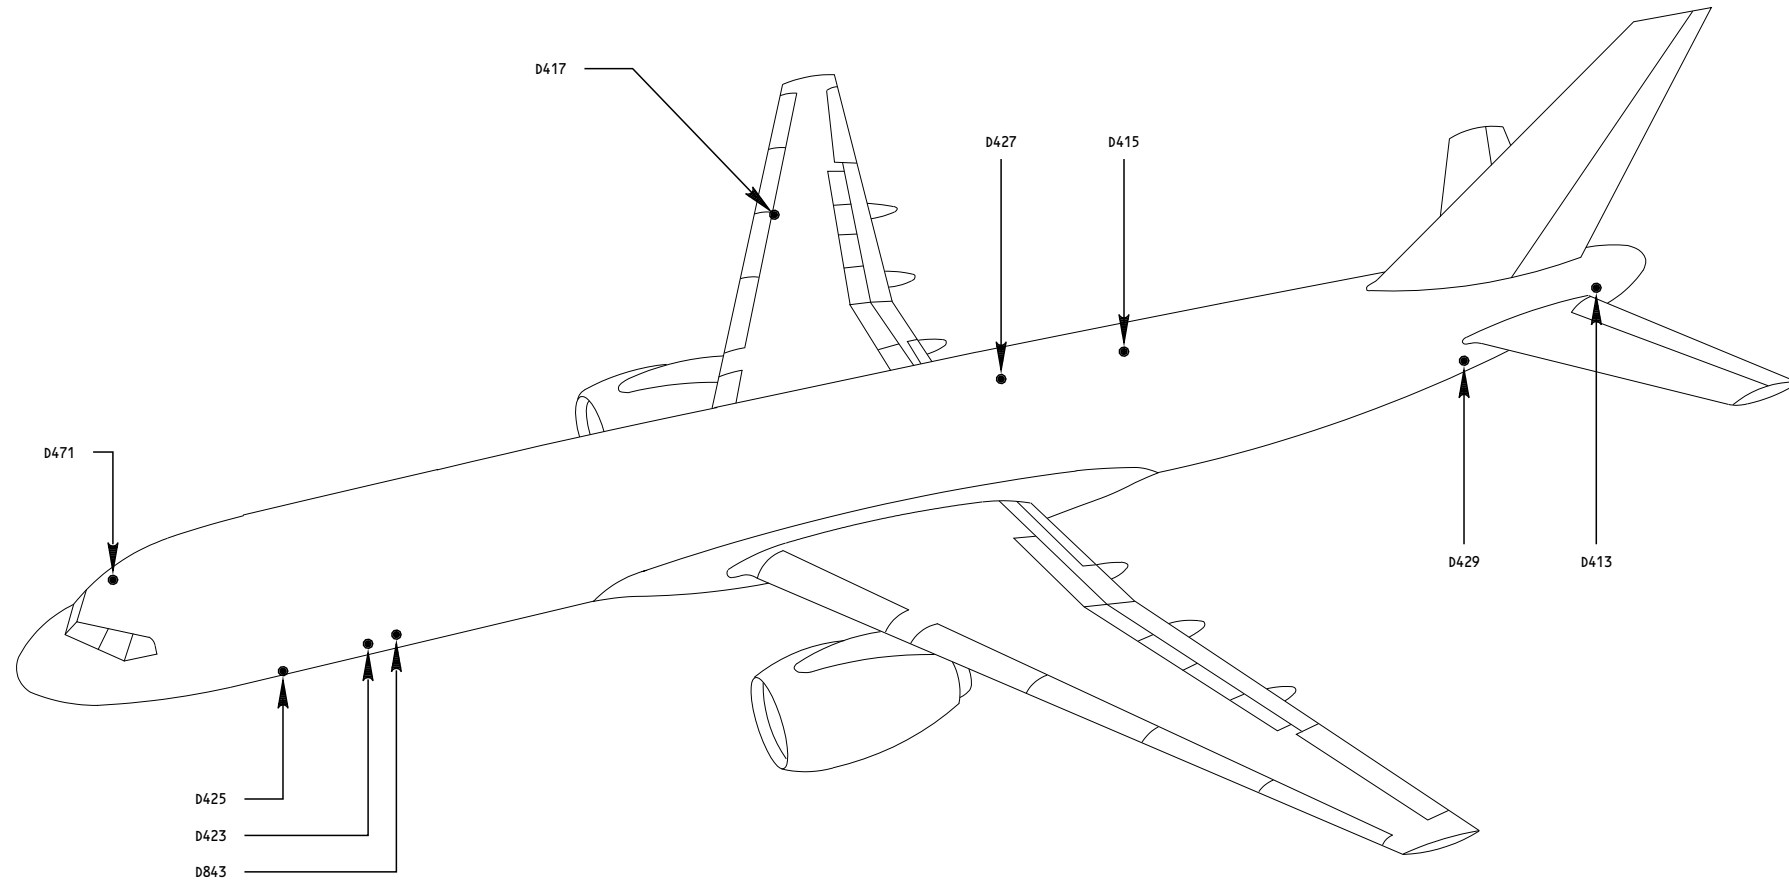

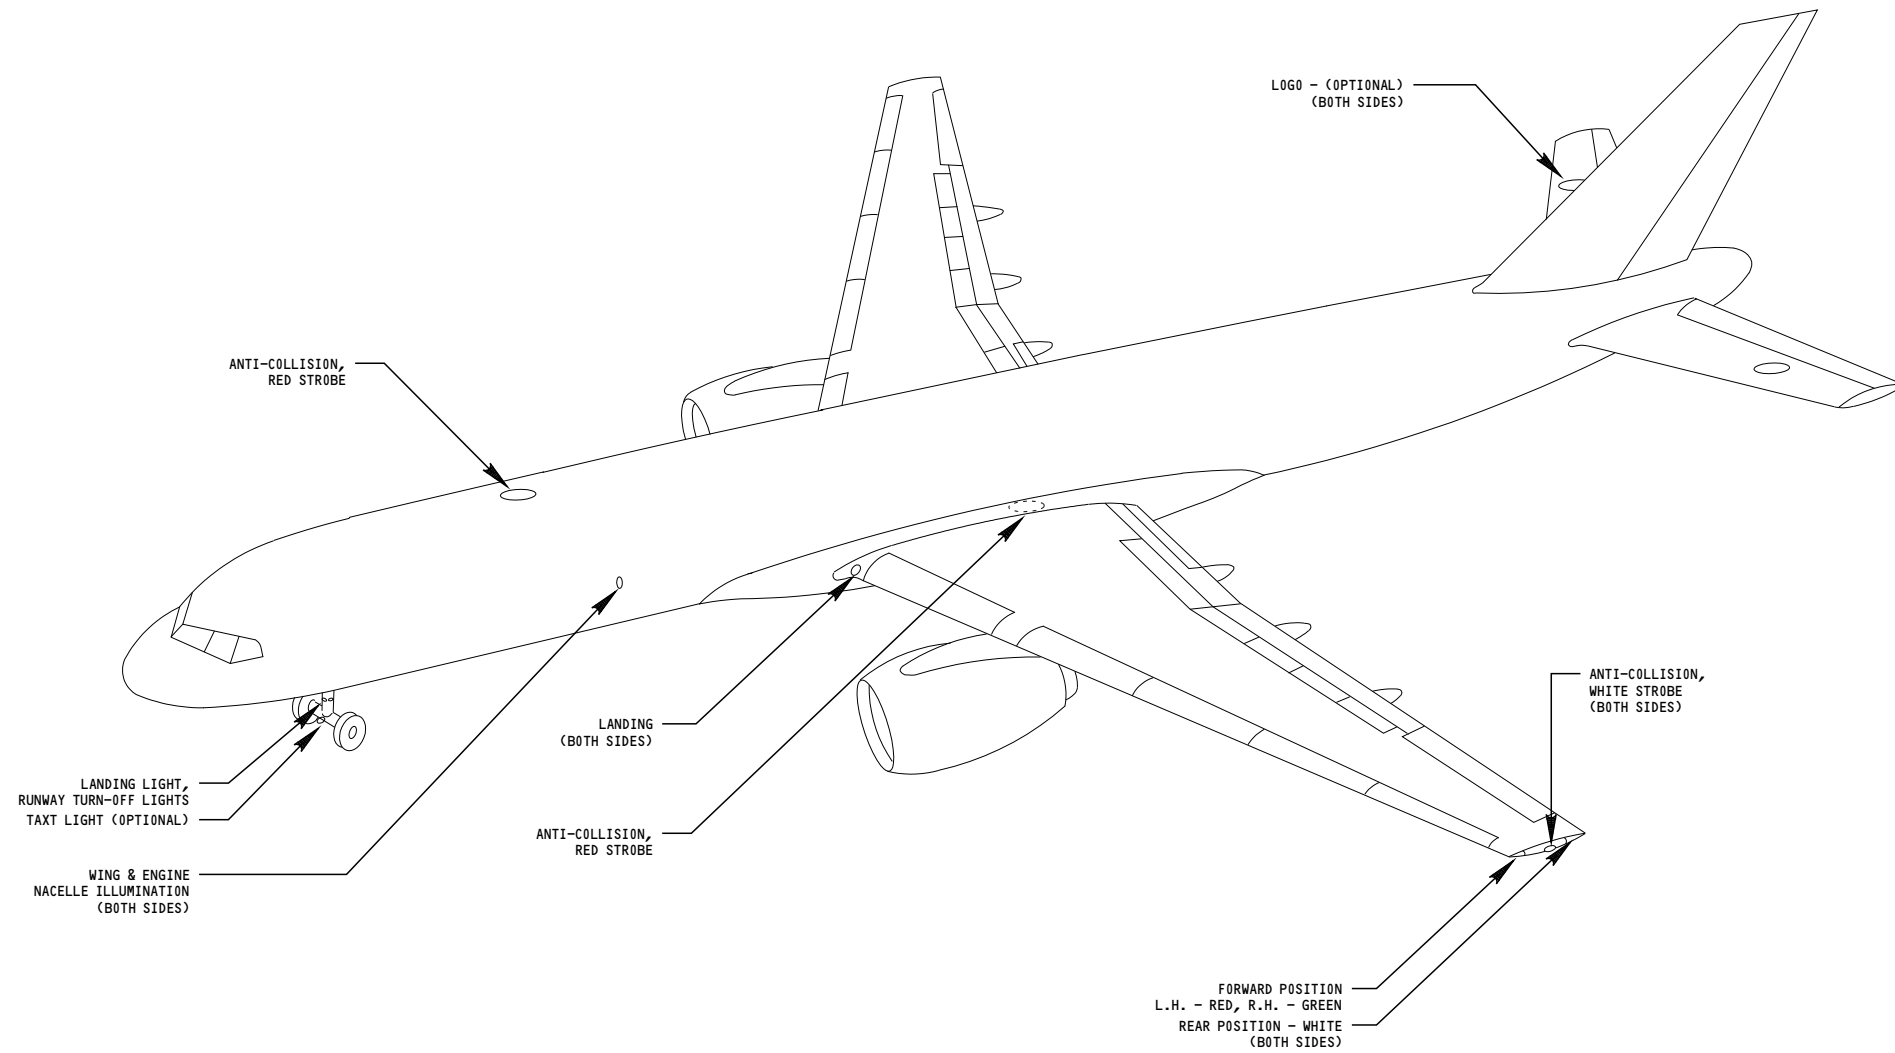

ALL	EXTERIOR LIGHTS
	D280N032

**91-01-26**


Page 1

Jan 21/2005

**91-01-26**


Page 1

Jan 21/2005

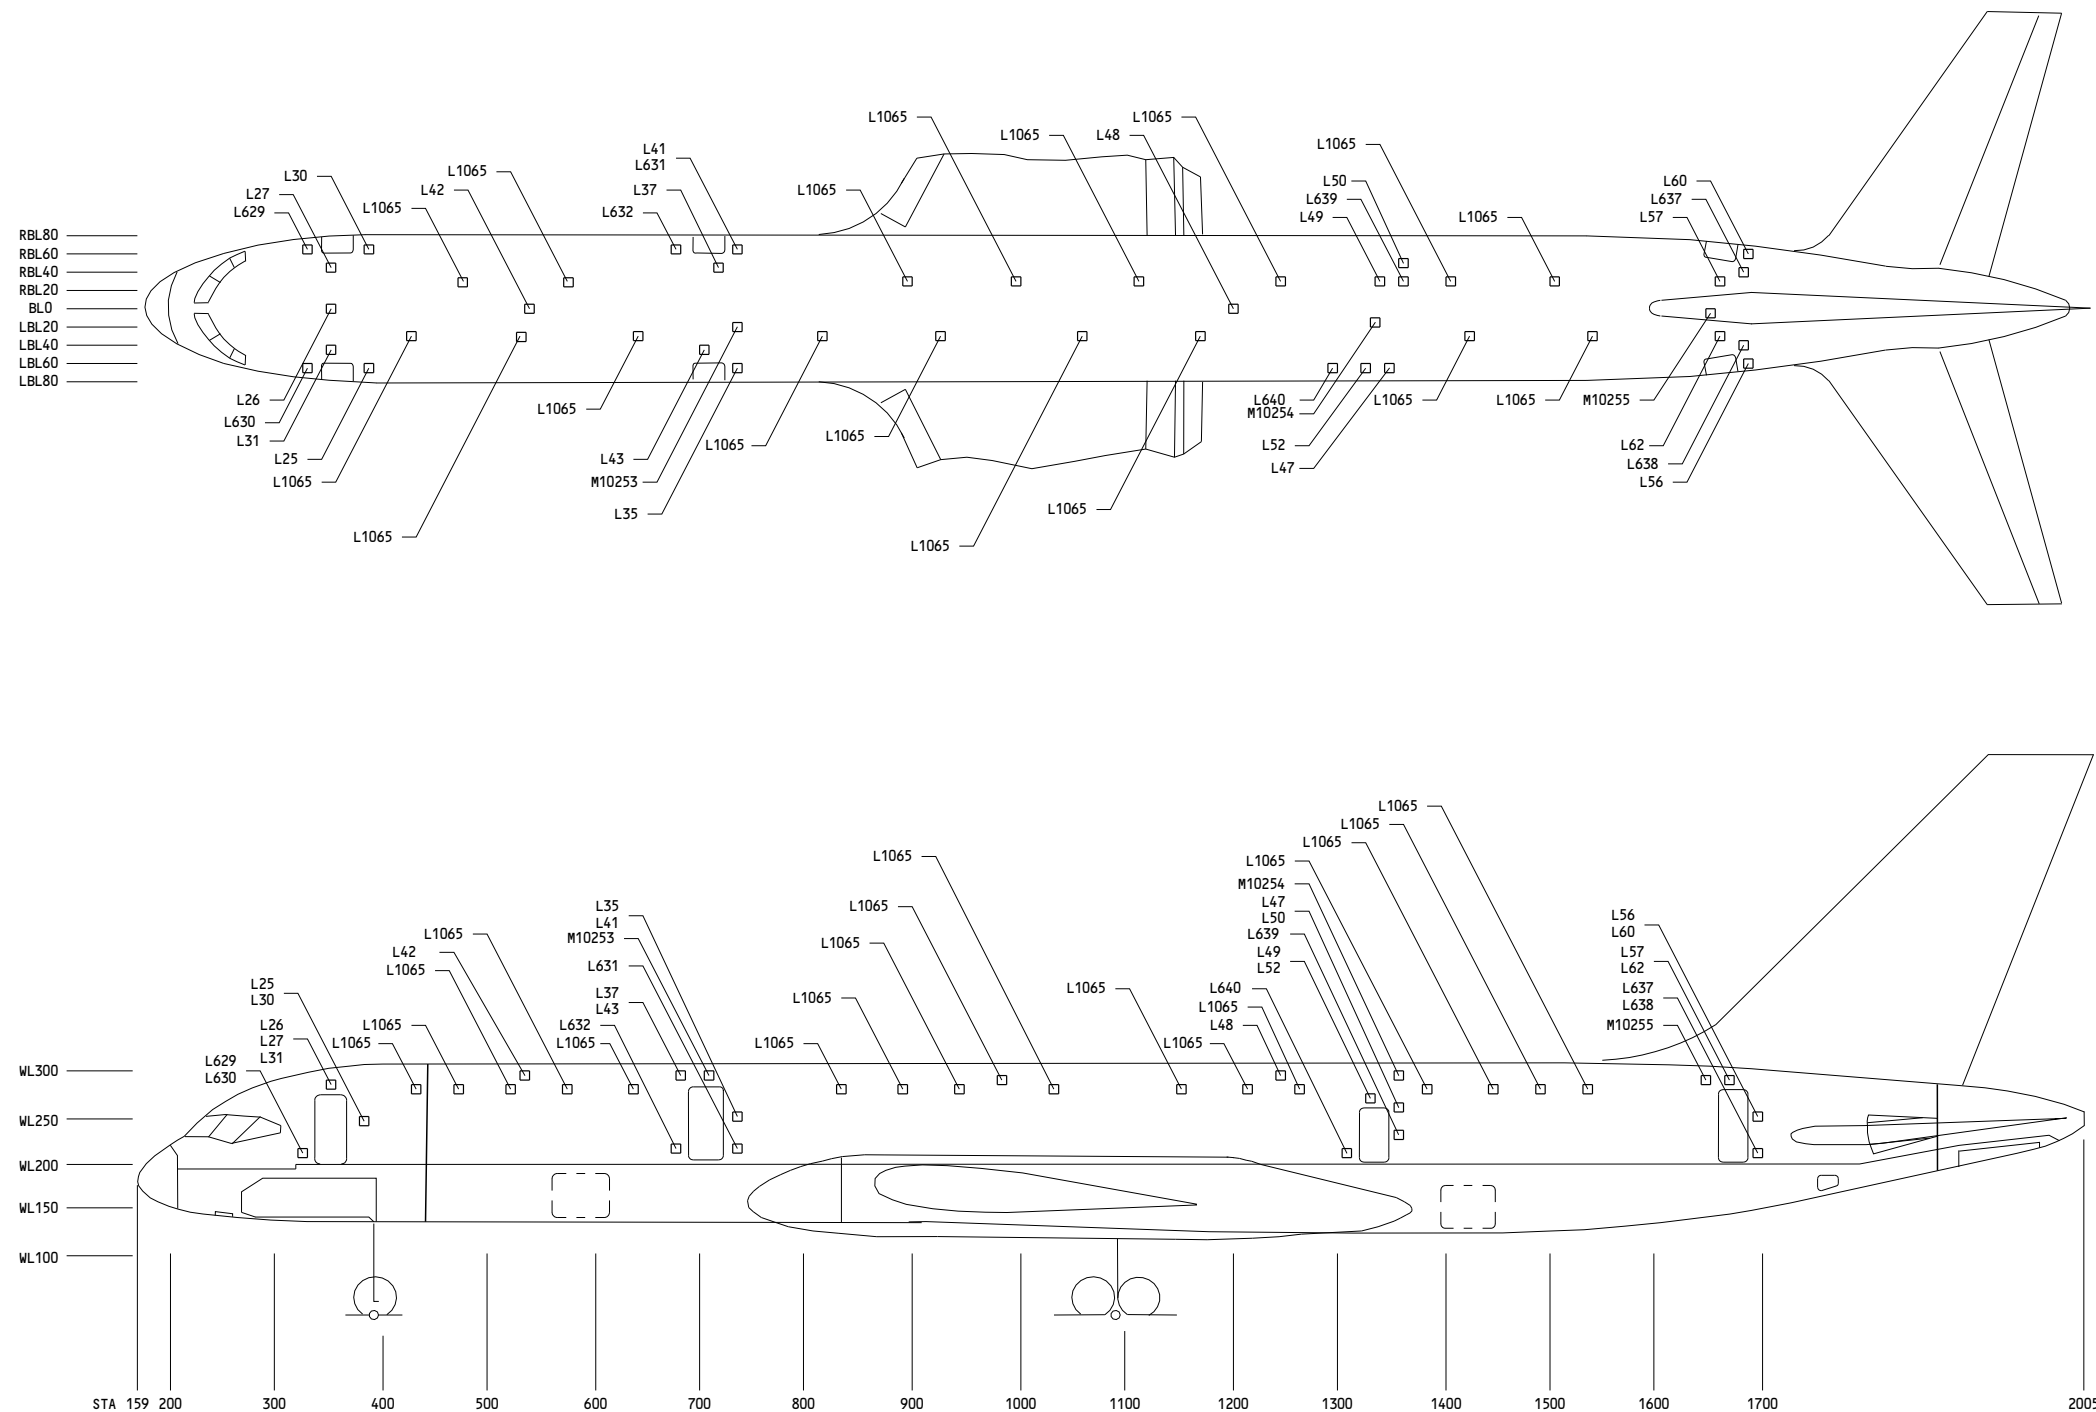


## EMERGENCY LIGHT LOCATIONS


L25 LT - EMER SLIDE, DR 1 L  
L26 LT - EMER EXIT LOCATOR SIGN  
L27 LT - EMER EXIT SIGN, DR 1 R  
L30 LT - EMER SLIDE, DR 1 R  
L31 LT - EMER EXIT SIGN, DR 1 L  
L35 LT - EMER SLIDE, DR 2 L  
L37 LT - EMER EXIT SIGN, DR 2 R  
L41 LT - EMER SLIDE, DR 2 R  
L43 LT - EMER EXIT SIGN, DR 2 L  
L47 LT - EMER SLIDE, DR 3 L  
L48 LT - EMER EXIT LOCATOR SIGN  
L49 LT - EMER EXIT SIGN, DR 3 R  
L50 LT - EMER SLIDE, DR 3 R  
L52 LT - EMER EXIT SIGN, DR 3 L  
L56 LT - EMER SLIDE, DR 4 L  
L57 LT - EMER EXIT SIGN, DR 4 R  
L60 LT - EMER SLIDE, DR 4 R  
L62 LT - EMER EXIT SIGN, DR 4 L  
L629 LT - EXIT IND  
L630 LT - EXIT IND  
L631 LT - EXIT IND  
L632 LT - EXIT IND  
L637 LT - EXIT IND  
L638 LT - EXIT IND  
L639 LT - EXIT IND  
L640 LT - EXIT IND  
L1065 LT - AISLE LT  
M10253 - LT ASSY - EMER EXIT LOCATOR SIGN  
M10254 - LT ASSY - EMER EXIT LOCATOR SIGN  
M10255 - LT ASSY - EMER EXIT LOCATOR SIGN

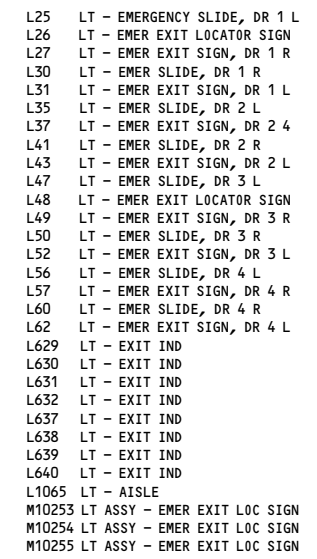



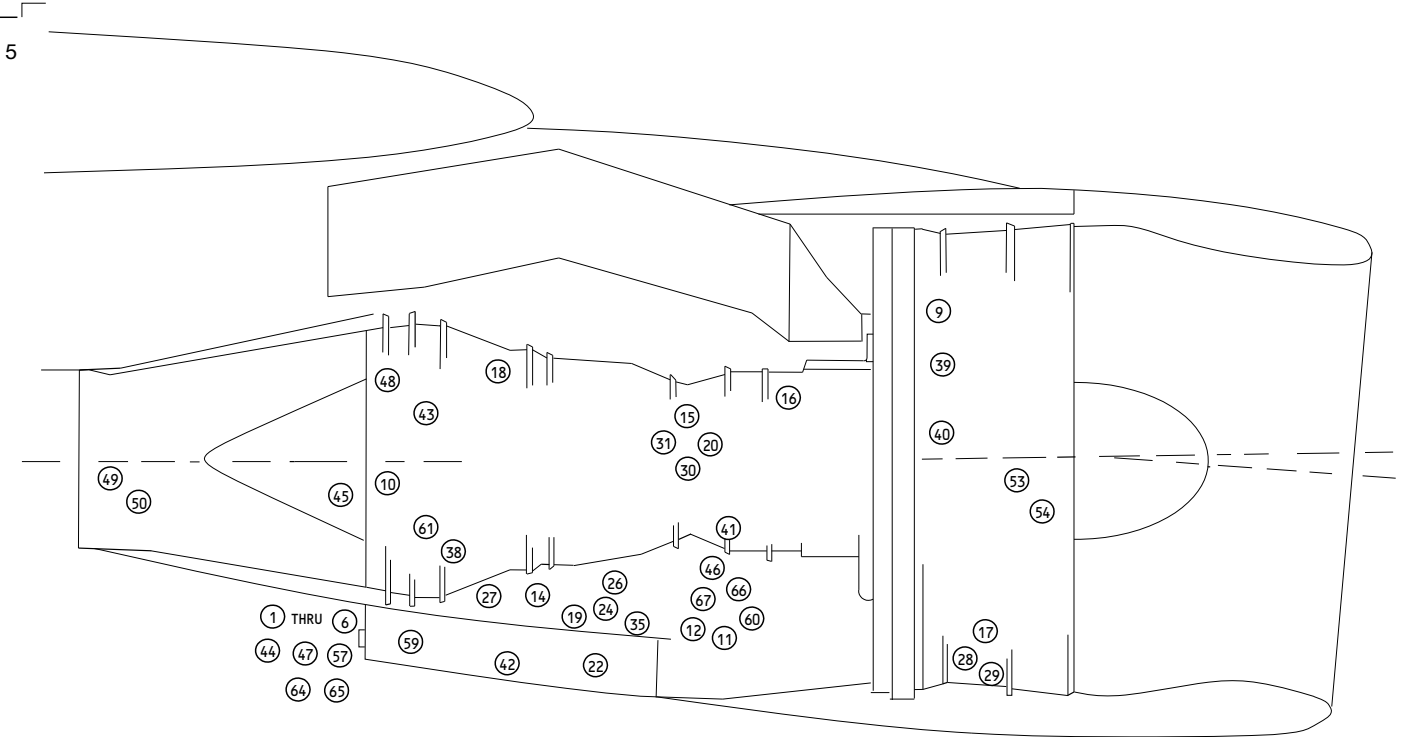

ENGINE R.H. SIDE VIEW

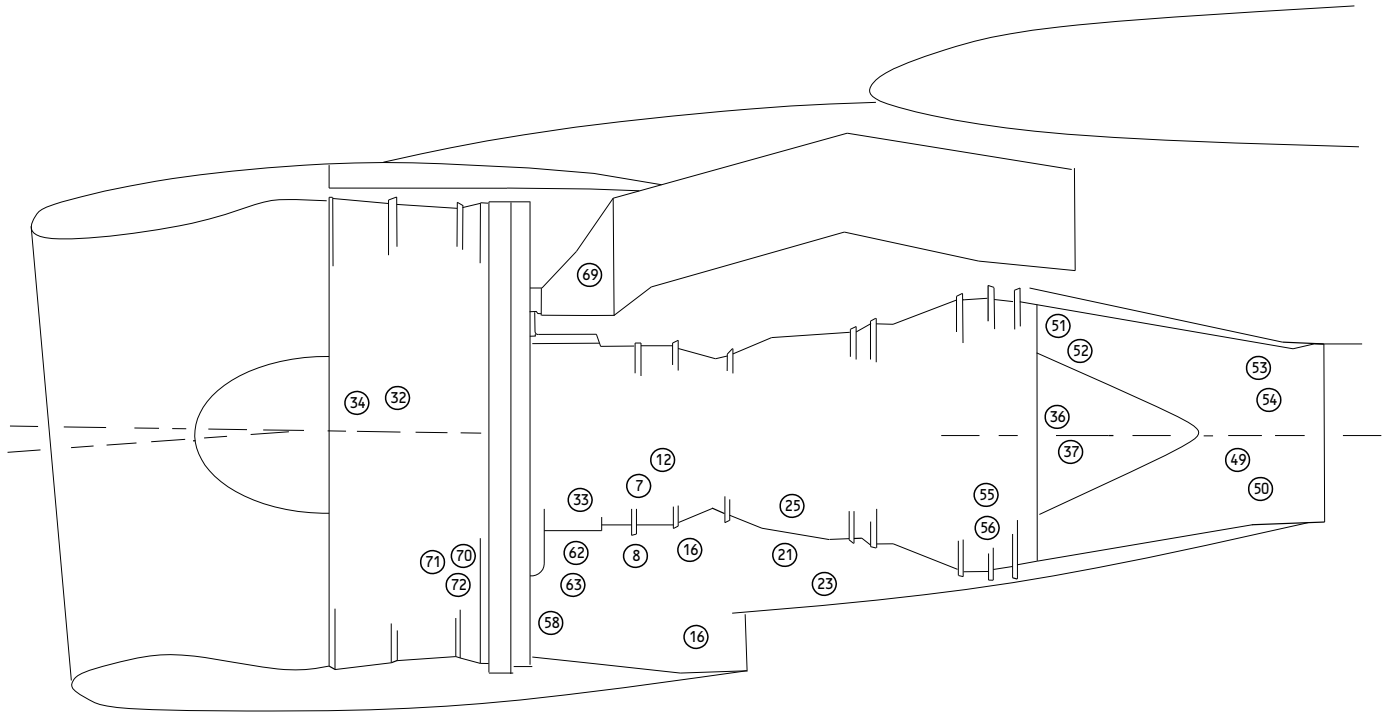

ENGINE L.H. SIDE VIEW

NOT TO SCALE

- ① B10004-W5006, N1 BALANCE PROBE

② B10005-W5006, N1 SPEED PROBE NO.1

③ B10006-W5006, N1 SPEED PROBE NO.2

④ B10007-W5006, N2 SPEED PROBE NO.1

⑤ B10008-W5006, N2 SPEED PROBE NO.2

⑥ B10009-W5006, N2 SPEED PROBE NO.3

⑦ M10149-D1314, IGNITION BOX NO.1

⑧ M10150-D1316, IGNITION BOX NO.2

⑨ M10158-D1376, D1378, D1380, ECC PATCH MDL

⑩ M10151-D1328, FUEL FLOW METER

⑪ M10152-D1338, N3 TACHO XMTR

⑫ M10153-D1362, D1364, D1478, BLEED VLV CONT UNIT

⑬ M10154-D1370, FFR TRIM MOTOR

⑭ M10156-D1384, DEDICATED GEN (ROTOR)

⑮ M10157-D1388, DEDICATED GEN CONT UNIT "A"

⑯ M10160-D1394, D1396, IDG UNIT

⑰ M10161-W5014, INTERPHONE JACK POINT (NOSE COWL POS)

⑱ M10162-D1368, EPR XMTR

⑲ M10164-D1384, DEDICATED GEN (STATOR)

⑳ M10165-D1482, D1484, DEDICATED GEN CONT UNIT "B"

㉑ S164-W5019, LH SLEEVE ACTR LKD PROXIMITY SNSR SW

㉒ S165-W5020, RH SLEEVE ACTR LKD PROXIMITY SNSR SW

㉓ S166-W5017, LH SLEEVE DEPLOY PROXIMITY SNSR SW

㉔ S167-W5018, RH SLEEVE DEPLOY PROXIMITY SNSR SW

㉕ S10105-W5023, LH SLEEVE STOW PROXIMITY SNSR SW

㉖ S10108-W5022, RH SLEEVE STOW PROXIMITY SNSR SW

㉗ S10130-D1300, LOW OIL PRESS. SW

㉘ S10131-D1302, OIL FLTR DIFF PRESS. SW (MAIN)

㉙ S10132-D1304, OIL FLTR DIFF PRESS. SW (SCAVENGE)

㉚ S10133-D1310, FUEL FLTR DIFF PRESS. SW (BYPASS)

㉛ S10134-D1312, FUEL LOW PRESS. SW

㉜ S10135-D1320, NOSE COWL ANTI-ICING PRESS. SW (LOW)

㉝ S10136-W5000, THRUST REVERSER GND OVERRIDE

㉞ S10137-D1422, NOSE COWL ANTI-ICING PRESS. SW (HIGH)

㉟ S10138-D1398, FFR FUEL SHUT-OFF VLV POS SW

㊱ S10139-W5008, ENG INTERNAL OVHT SYS NO.1

㊲ S10140-W5007, ENG INTERNAL OVHT SYS NO.2

㊳ S10141-D1404, IDLE RESET POS IND

㊴ S10142-D1480, ALTITUDE SW

㊵ TS5019-D1308, OIL QTY XMTR

㊶ TS5020-D1322, OIL TEMP BULB

㊷ TS5021-D1324, OIL PRESS. XMTR

㊸ TS5023-D1366, PWR LVL ANGLE XDCR (BLEED VLV CONT UNIT)

㊹ TS5024-W5009, T2 THERMOCOUPLE

㊺ TS5025-W5031, TGT DUAL HD THERMOCOUPLE

㊻ TS5027-D1372, FFR TRIM MTR POS XMTR

㊼ TS5028-W5005, VIBRATION XDCR NO.1

㊽ TS5029-D1424, PWR LVL ANGLE XDCR (PLT AUTOTHROTTLE)

㊾ TS5141-D1472, D1476, FIRE DET

㊿ TS5142-D1470, D1474, FIRE DET

1 TS5143-D1464, D1468, FIRE DET

2 TS5144-D1462, D1466, FIRE DET

3 TS5145-D1456, D1460, FIRE DET

4 TS5146-D1454, D1458, FIRE DET

5 TS5147-D1448, D1452, FIRE DET

6 TS5148-D1446, D1450, FIRE DET

7 TS5038-W5005, VIBRATION XDCR NO.2

8 V10008-D1306, ENGINE START VLV

9 V10009-D1330, MIN FLOW RESET SOL

10 V10010-D1332, IDLE RESET SOL

11 V10011-D1334, COLD DAY ENRICHMENT SOL

12 V10014-D1340, HP3 AIR BLEED VLV SOL NO.1

13 V10018-D1348, HP3 AIR BLEED VLV SOL NO.2

14 V10019-D1350, 1P BLEED VLV SOL NO.1 (LH)

15 V10020-D1352, 1P BLEED VLV SOL NO.2 (RH)

16 V10025-D1374, FAIL FIX SOL

17 V10026-D1390, FFR FUEL SHUT-OFF VLV


18 V10027-D1392, HYD PUMP CONT SOL

19 V10028-D1318, NOSE COWL ANTI-ICING SOL VLV


20 M10166-D7104 TRANSIENT PRESS. UNIT

21 M10167-D7108, D7110 16N RLY-1

22 S10151-TPU GND TEST SW

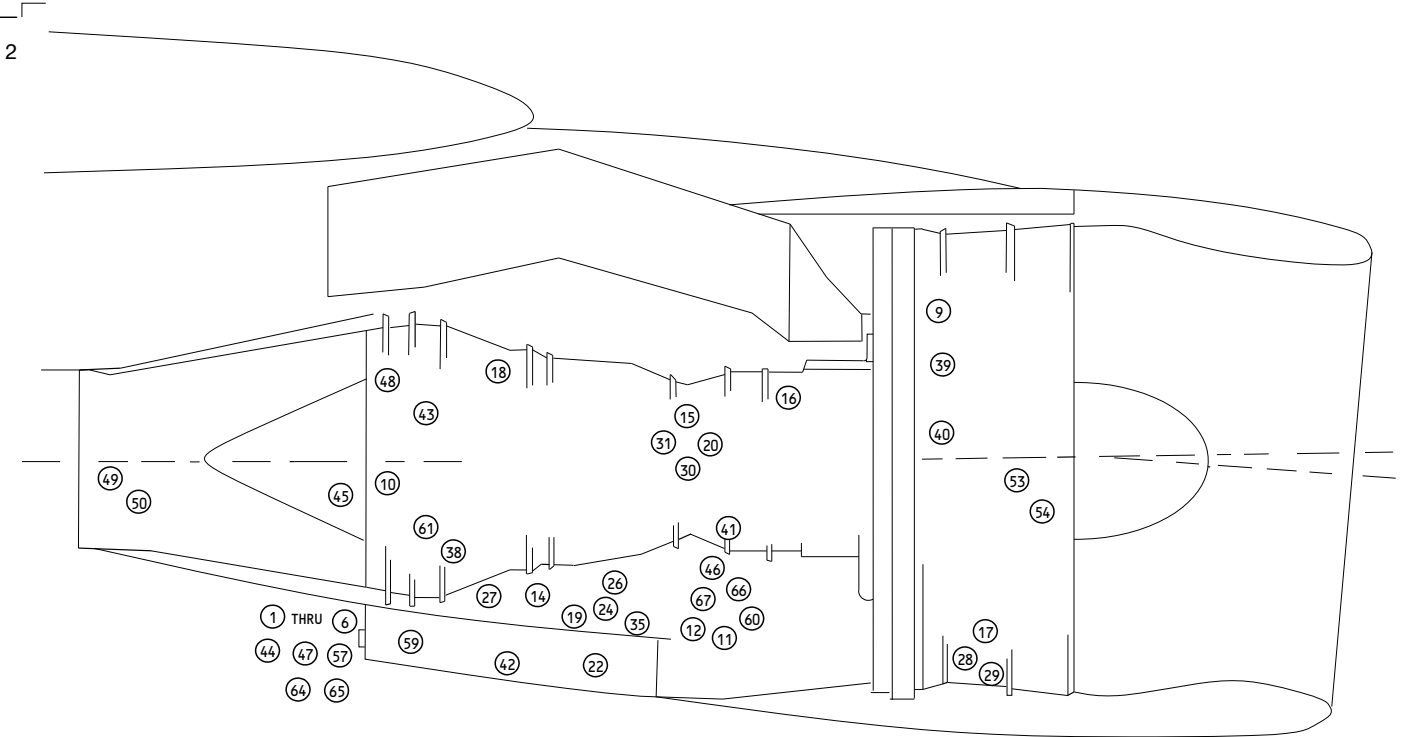


ENGINE R.H. SIDE VIEW

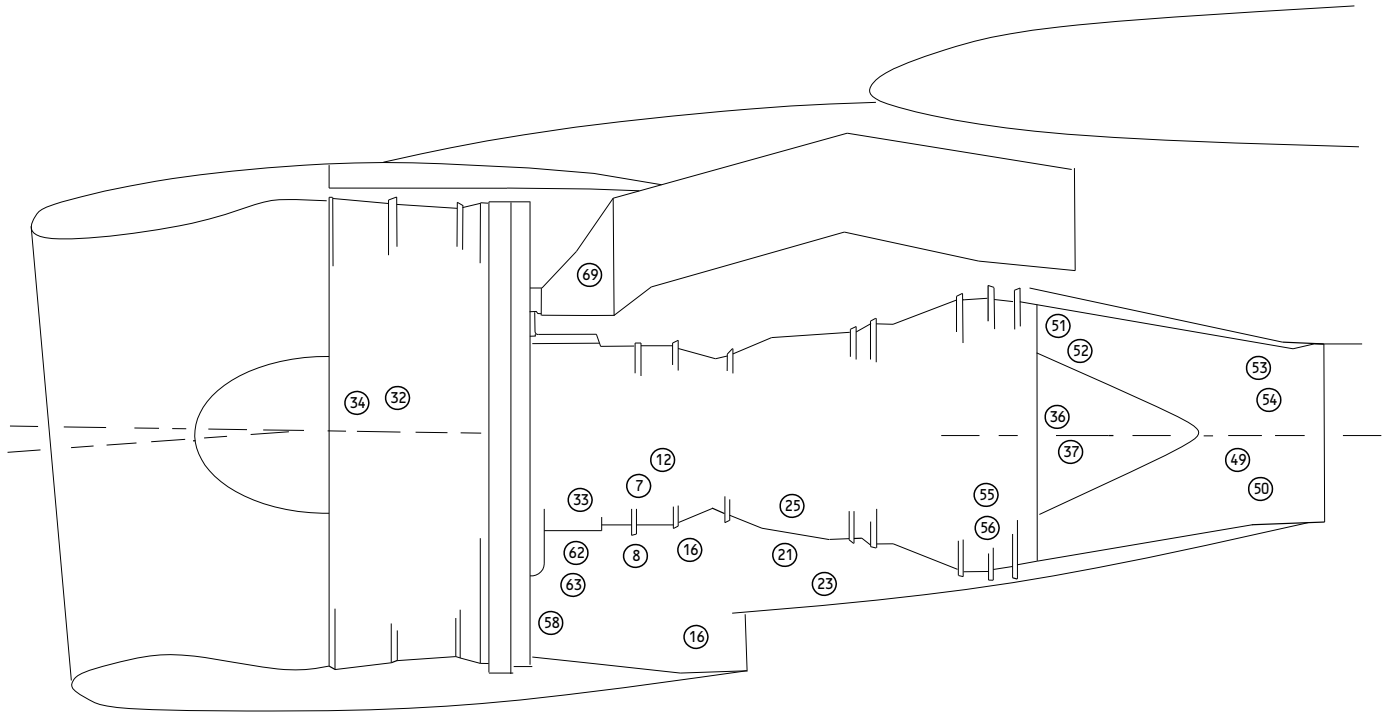

ENGINE L.H. SIDE VIEW

NOT TO SCALE

- |                                                       |                                                           |
|-------------------------------------------------------|-----------------------------------------------------------|
| ① B10004-W5006, N1 BALANCE PROBE                      | ③⑥ S10139-W5008, ENG INTERNAL OVHT SYS NO.1               |
| ② B10005-W5006, N1 SPEED PROBE NO.1                   | ③⑦ S10140-W5007, ENG INTERNAL OVHT SYS NO.2               |
| ③ B10006-W5006, N1 SPEED PROBE NO.2                   | ③⑧ S10141-D1404, IDLE RESET POS IND                       |
| ④ B10007-W5006, N2 SPEED PROBE NO.1                   | ③⑨ S10142-D1480, ALTITUDE SW                              |
| ⑤ B10008-W5006, N2 SPEED PROBE NO.2                   | ④① TS5019-D1308, OIL QTY XMTR                             |
| ⑥ B10009-W5006, N2 SPEED PROBE NO.3                   | ④② TS5020-D1322, OIL TEMP BULB                            |
| ⑦ M10149-D1314, IGNITION BOX NO.1                     | ④③ TS5021-D1324, OIL PRESS XMTR                           |
| ⑧ M10150-D1316, IGNITION BOX NO.2                     | ④④ TS5023-D1366, PWR LVL ANGLE XDCR (BLEED VLV CONT UNIT) |
| ⑨ M10150-D1376, D1378, D1380, ECC PATCH MDL           | ④⑤ TS5024-W5009, T2 THERMOCOUPLE                          |
| ⑩ M10151-D1328, FUEL FLOW METER                       | ④⑥ TS5025-W5010, TGT DUAL HD THERMOCOUPLE                 |
| ⑪ M10152-D1338, N3 TACHO XMTR                         | ④⑦ TS5027-D1372, FFR TRIM MTR POS XMTR                    |
| ⑫ M10153-D1362, D1364, D1478, BLEED VLV CONT UNIT     | ④⑧ TS5028-W5005, VIBRATION XDCR NO.1                      |
| ⑬ M10154-D1370, FFR TRIM MOTOR                        | ④⑨ TS5029-D1424, PWR LVL ANGLE XDCR (PLT AUTOTHROTTLE)    |
| ⑭ M10156-D1384, DEDICATED GEN (ROTOR)                 | ④⑩ TS5141-D1472, D1476, FIRE DET                          |
| ⑮ M10157-D1388, DEDICATED GEN CONT UNIT "A"           | ⑤① TS5142-D1470, D1474, FIRE DET                          |
| ⑯ M10160-D1394, D1396, IDG UNIT                       | ⑤② TS5143-D1464, D1468, FIRE DET                          |
| ⑰ M10161-W5014, INTERPHONE JACK POINT (NOSE COWL POS) | ⑤③ TS5144-D1462, D1466, FIRE DET                          |
| ⑱ M10162-D1368, EPR XMTR                              | ⑤④ TS5145-D1456, D1460, FIRE DET                          |
| ⑲ M10164-D1384, DEDICATED GEN (STATOR)                | ⑤⑤ TS5146-D1454, D1458, FIRE DET                          |
| ⑳ M10165-D1482, D1484, DEDICATED GEN CONT UNIT "B"    | ⑤⑥ TS5147-D1448, D1452, FIRE DET                          |
| ㉑ S164-W5019, LH SLEEVE ACTR LKD PROXIMITY SNSR SW    | ⑤⑦ TS5148-D1446, D1450, FIRE DET                          |
| ㉒ S165-W5020, RH SLEEVE ACTR LKD PROXIMITY SNSR SW    | ⑤⑧ TS5038-W5005, VIBRATION XDCR NO.2                      |
| ㉓ S166-W5017, LH SLEEVE DEPLOY PROXIMITY SNSR SW      | ⑤⑨ V10008-D1306, ENGINE START VLV                         |
| ㉔ S167-W5018, RH SLEEVE DEPLOY PROXIMITY SNSR SW      | ⑤⑩ V10009-D1330, MIN FLOW RESET SOL                       |
| ㉕ S10105-W5023, LH SLEEVE STOW PROXIMITY SNSR SW      | ⑥① V10010-D1332, IDLE RESET SOL                           |
| ㉖ S10108-W5022, RH SLEEVE STOW PROXIMITY SNSR SW      | ⑥② V10011-D1334, COLD DAY ENRICHMENT SOL                  |
| ㉗ S10130-D1300, LOW OIL PRESS SW                      | ⑥③ V10014-D1340, HP3 AIR BLEED VLV SOL NO.1               |
| ㉘ S10131-D1302, OIL FLTR DIFF PRESS SW (MAIN)         | ⑥④ V10018-D1348, HP3 AIR BLEED VLV SOL NO.2               |
| ㉙ S10132-D1304, OIL FLTR DIFF PRESS SW (SCAVENGE)     | ⑥⑤ V10019-D1350, 1P BLEED VLV SOL NO.1 (LH)               |
| ㉚ S10133-D1310, FUEL FLTR DIFF PRESS SW (BYPASS)      | ⑥⑥ V10020-D1352, 1P BLEED VLV SOL NO.2 (RH)               |
| ㉛ S10134-D1312, FUEL LOW PRESS SW                     | ⑥⑦ V10025-D1374, FAIL FIX SOL                             |
| ㉜ S10135-D1320, NOSE COWL ANTI-ICING PRESS SW (LOW)   | ⑥⑧ V10026-D1390, FFR FUEL SHUTOFF VLV                     |
| ㉝ S10136-W5000, THRUST REVERSER GND OVERRIDE          | ⑥⑨ V10027-D1392, HYD PUMP CONT SOL                        |
| ㉞ S10137-D1422, NOSE COWL ANTI-ICING PRESS SW (HIGH)  | ⑦① V10028-D1318, NOSE COWL ANTI-ICING SOL VLV             |
| ㉟ S10138-D1398, FFR FUEL SHUTOFF VLV POS SW           |                                                           |

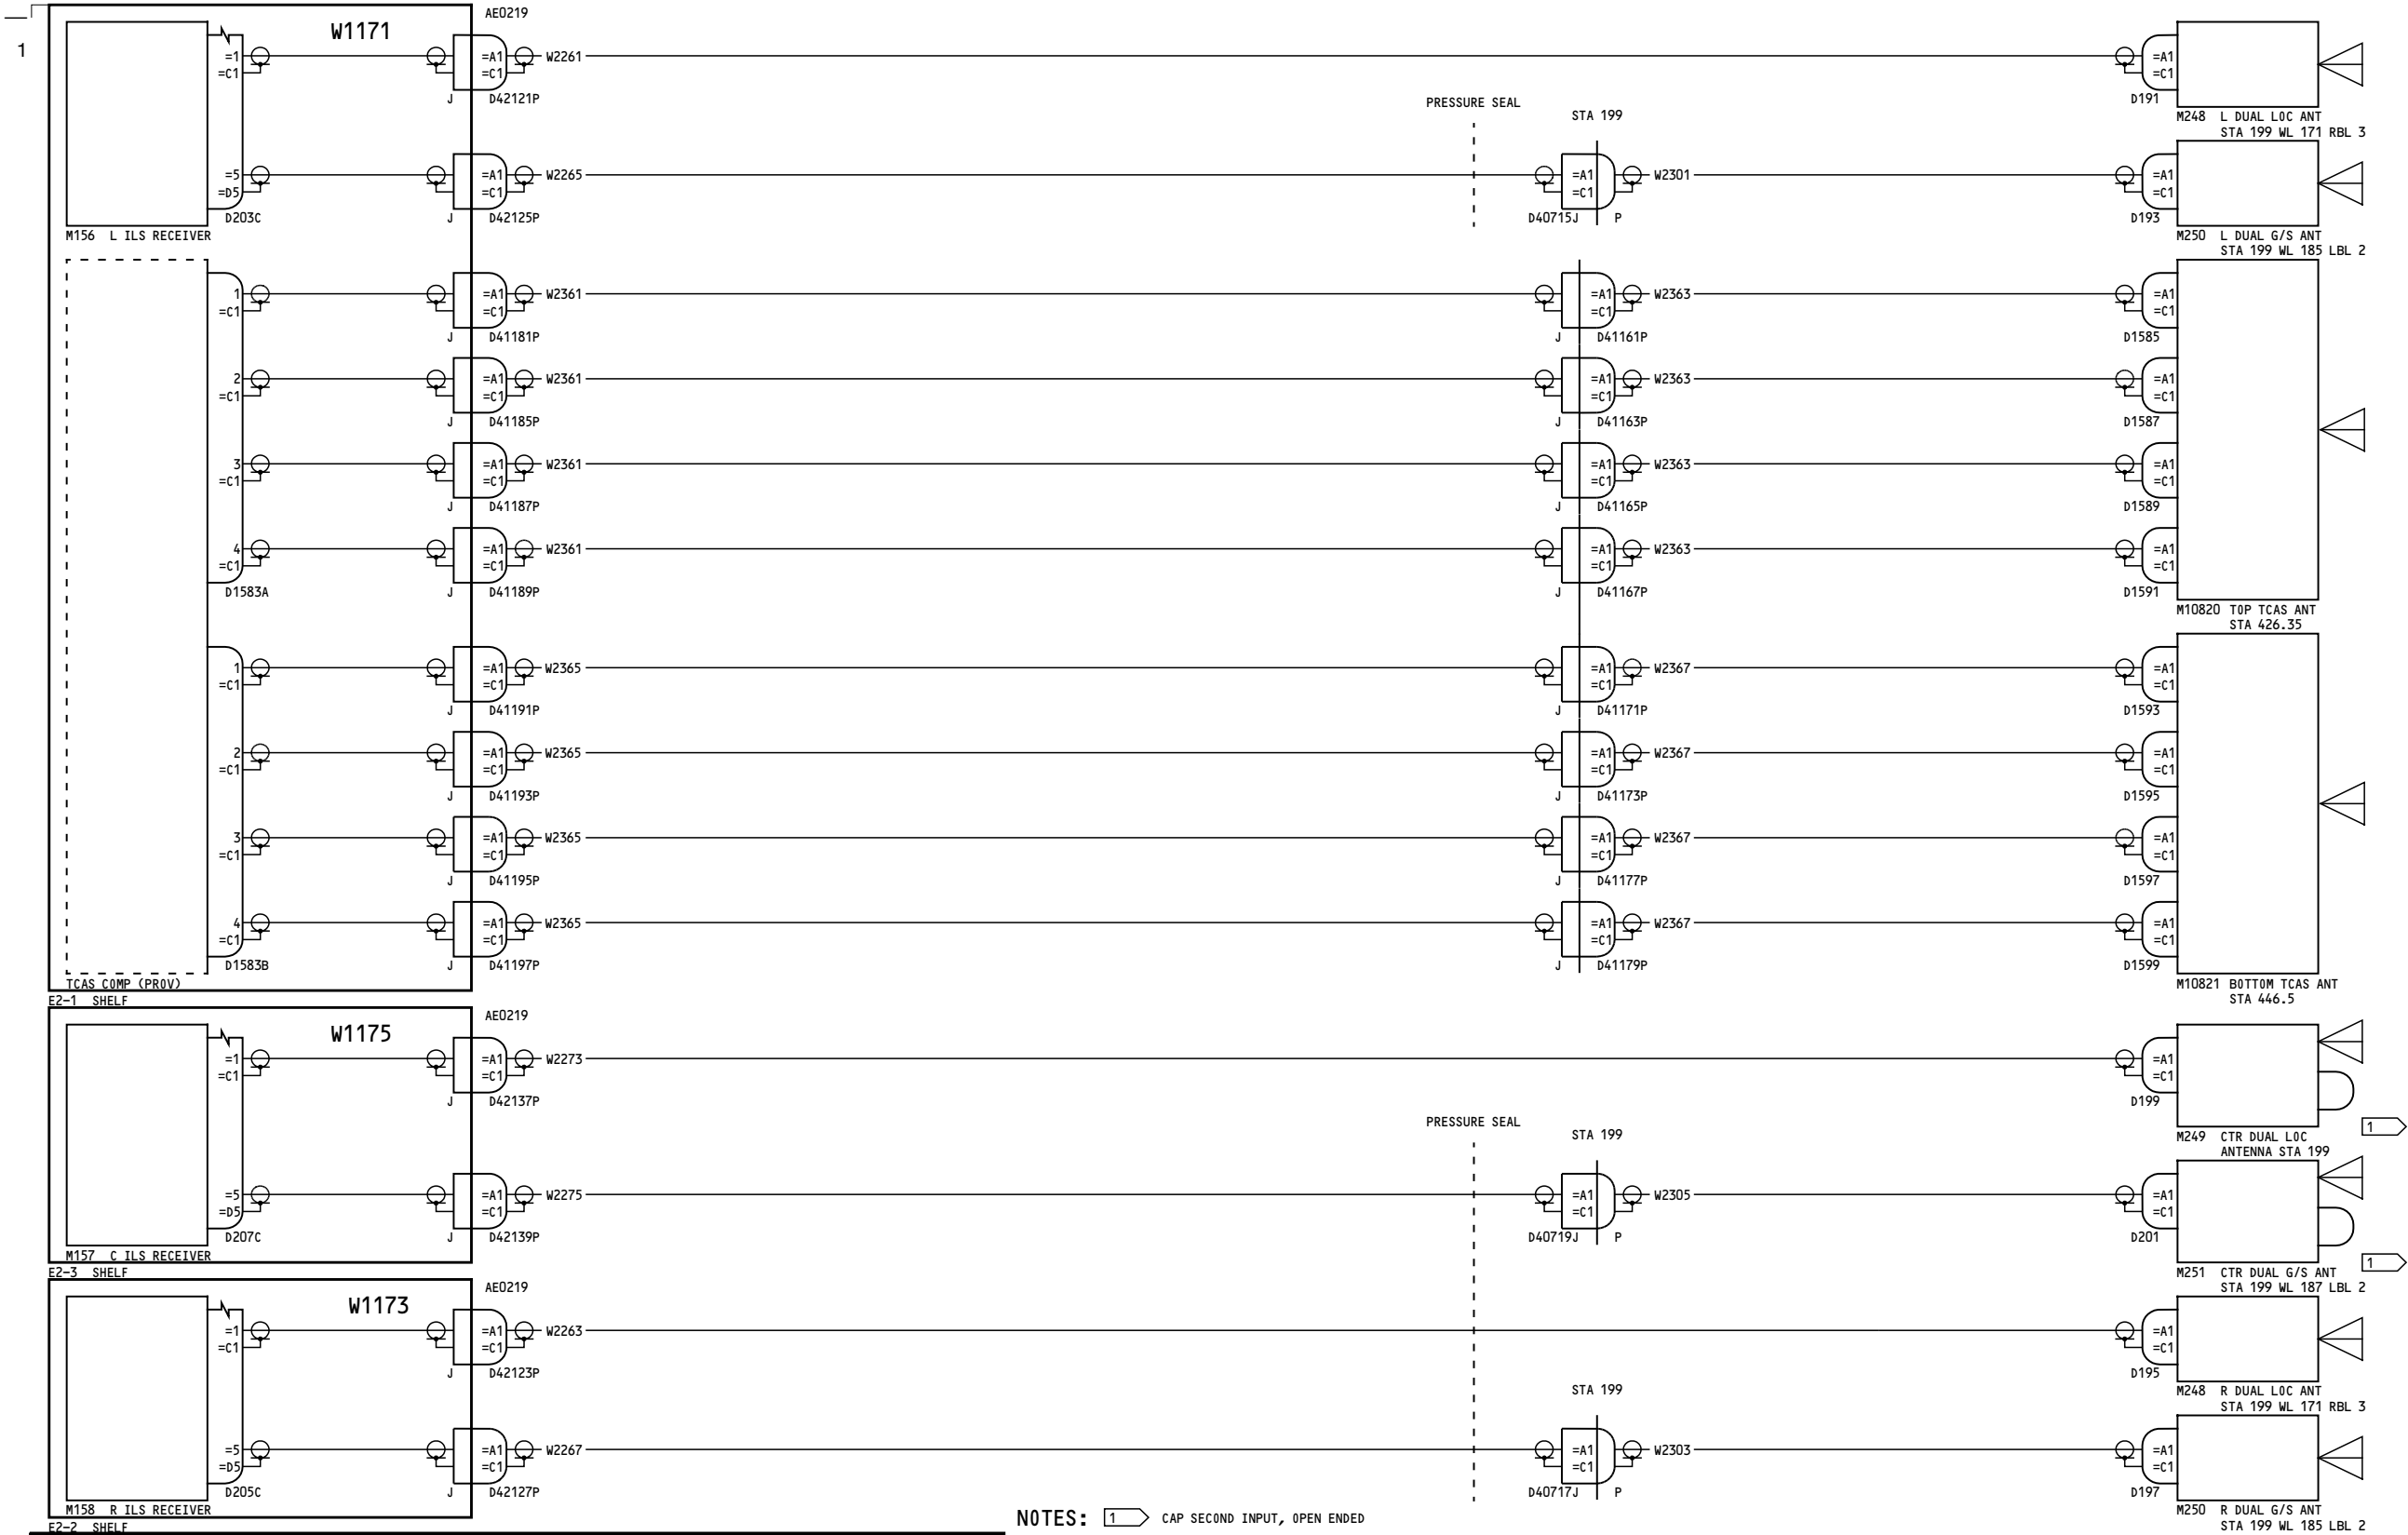

NOTES: 1 CAP SECOND INPUT, OPEN ENDED

ALL

757 ANTENNA CABLES - ILS, TCAS

91-01-41

Page 1

Jan 21/2005

D280N032


91-01-41

Page 1

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

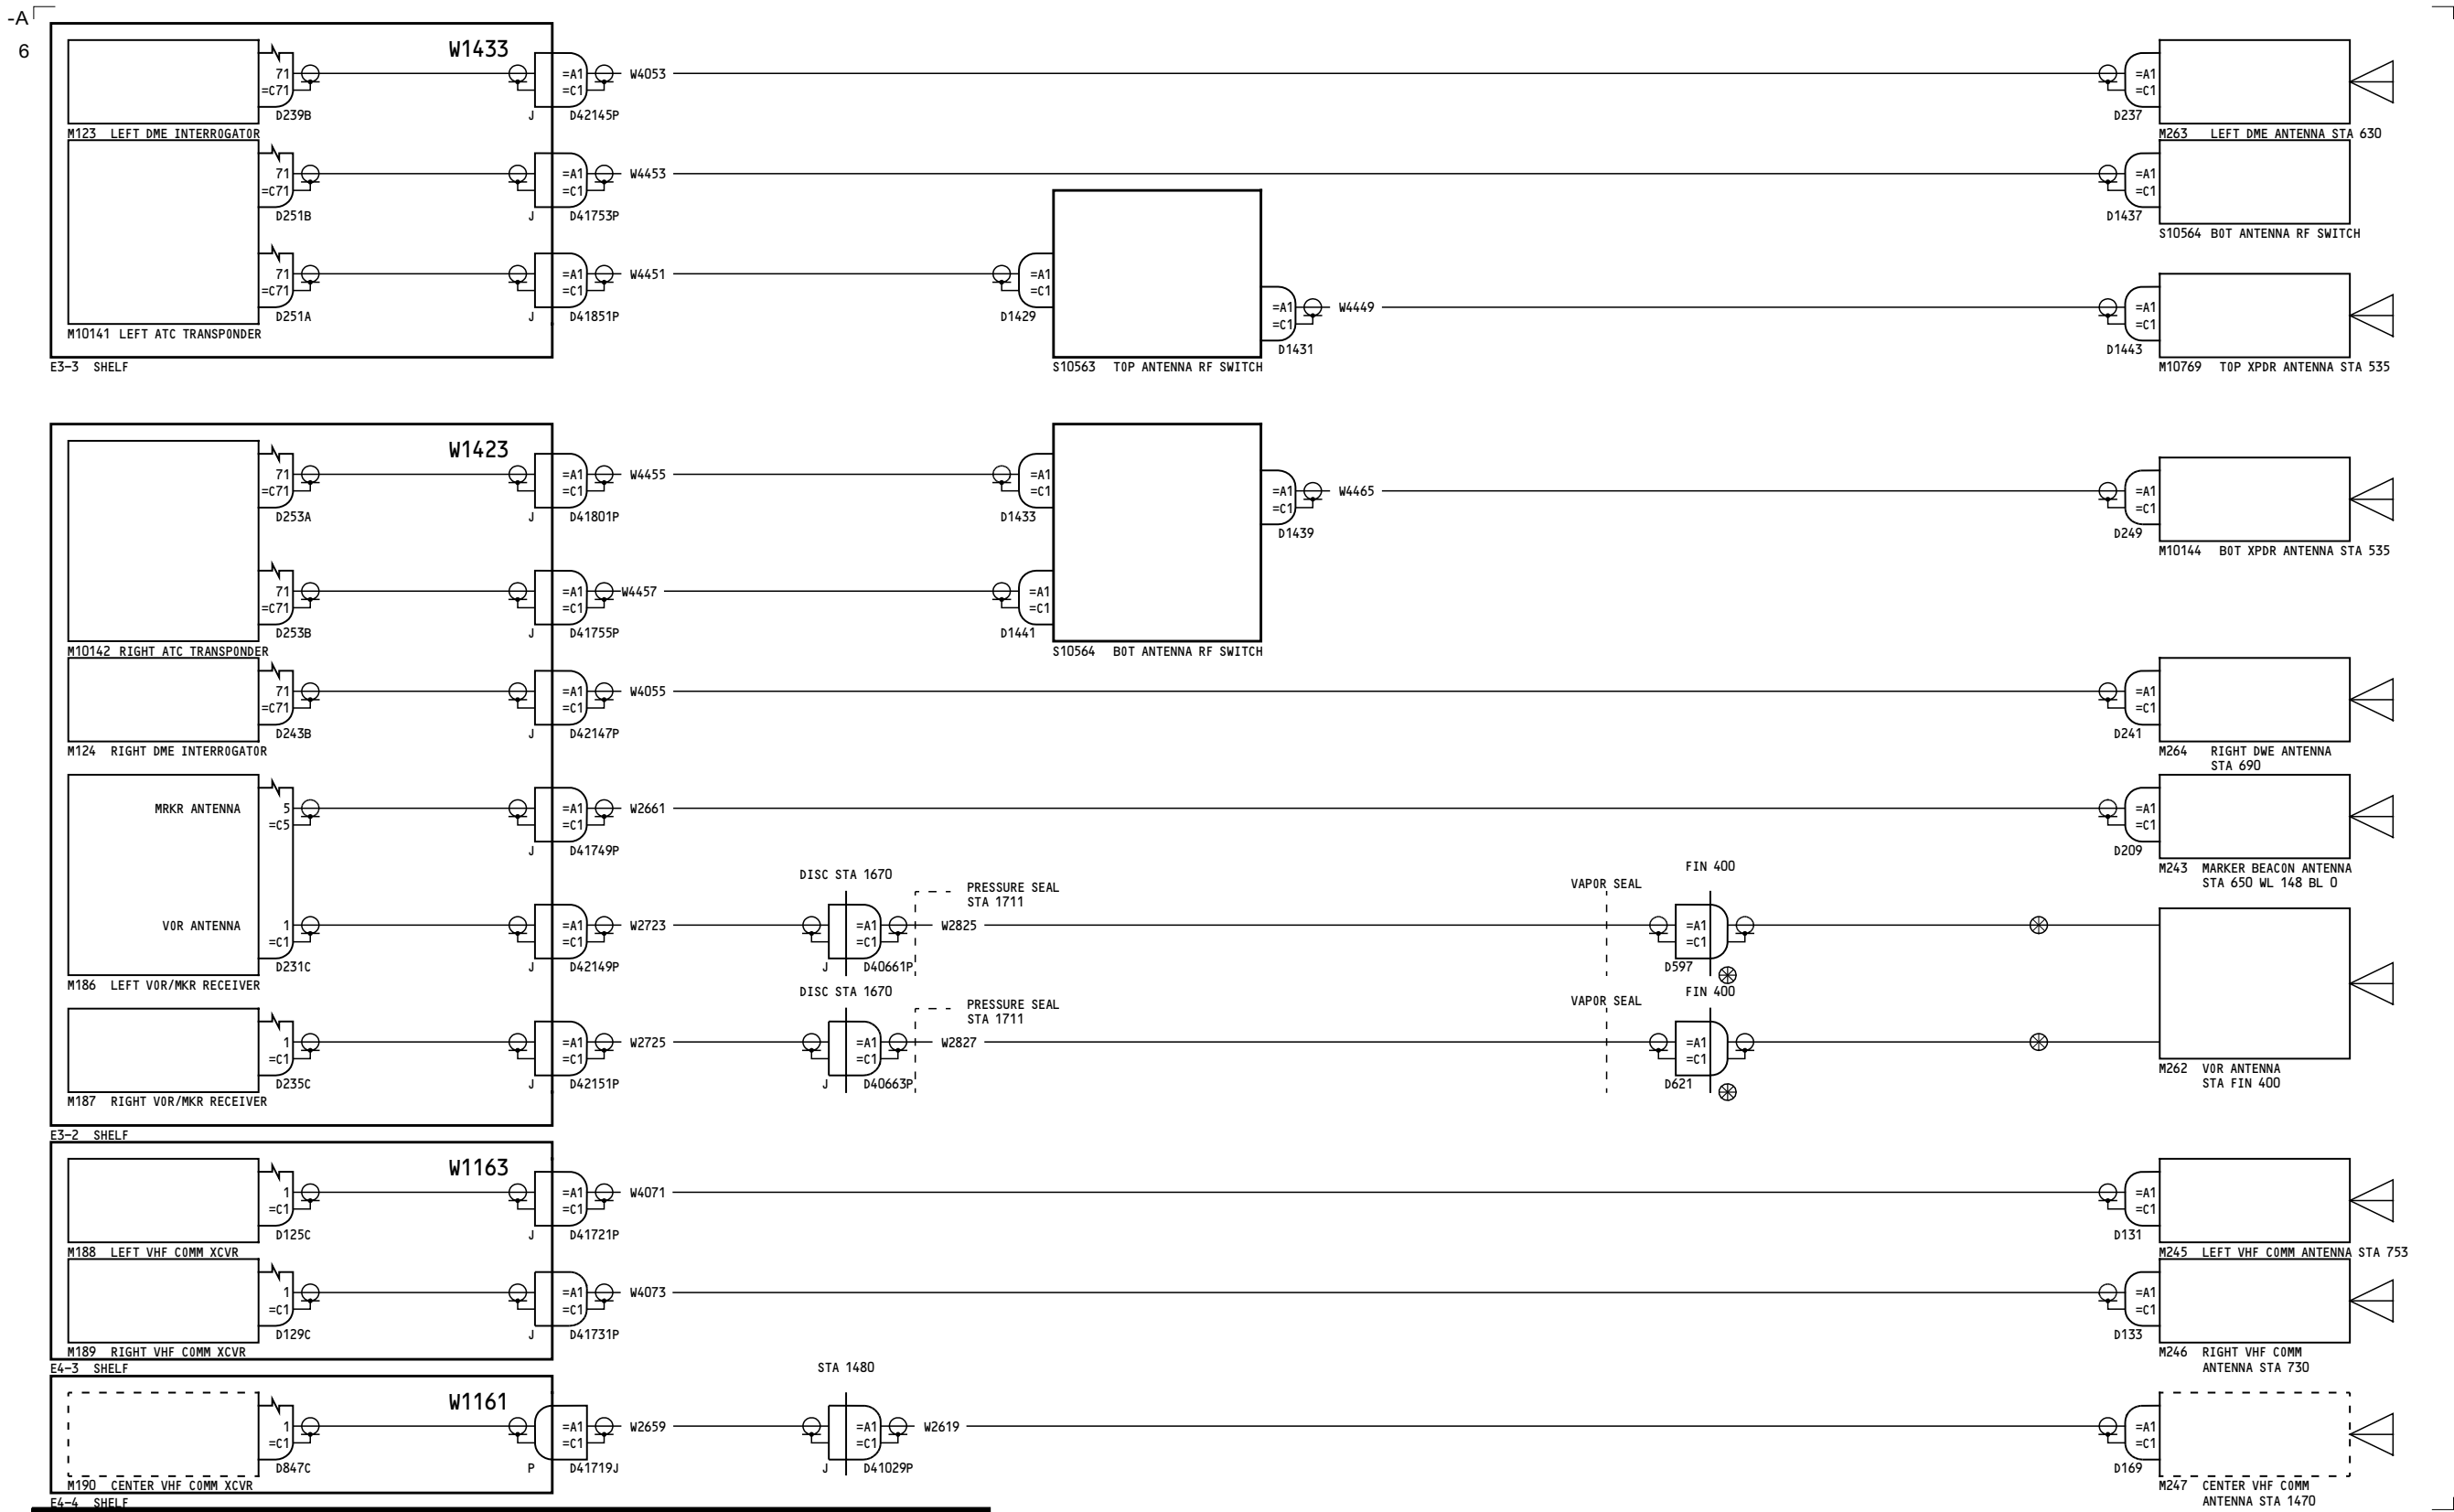

91-01-42

Page 1


Jan 21/2005

D280N032

91-01-42

Page 1

Jan 21/2005

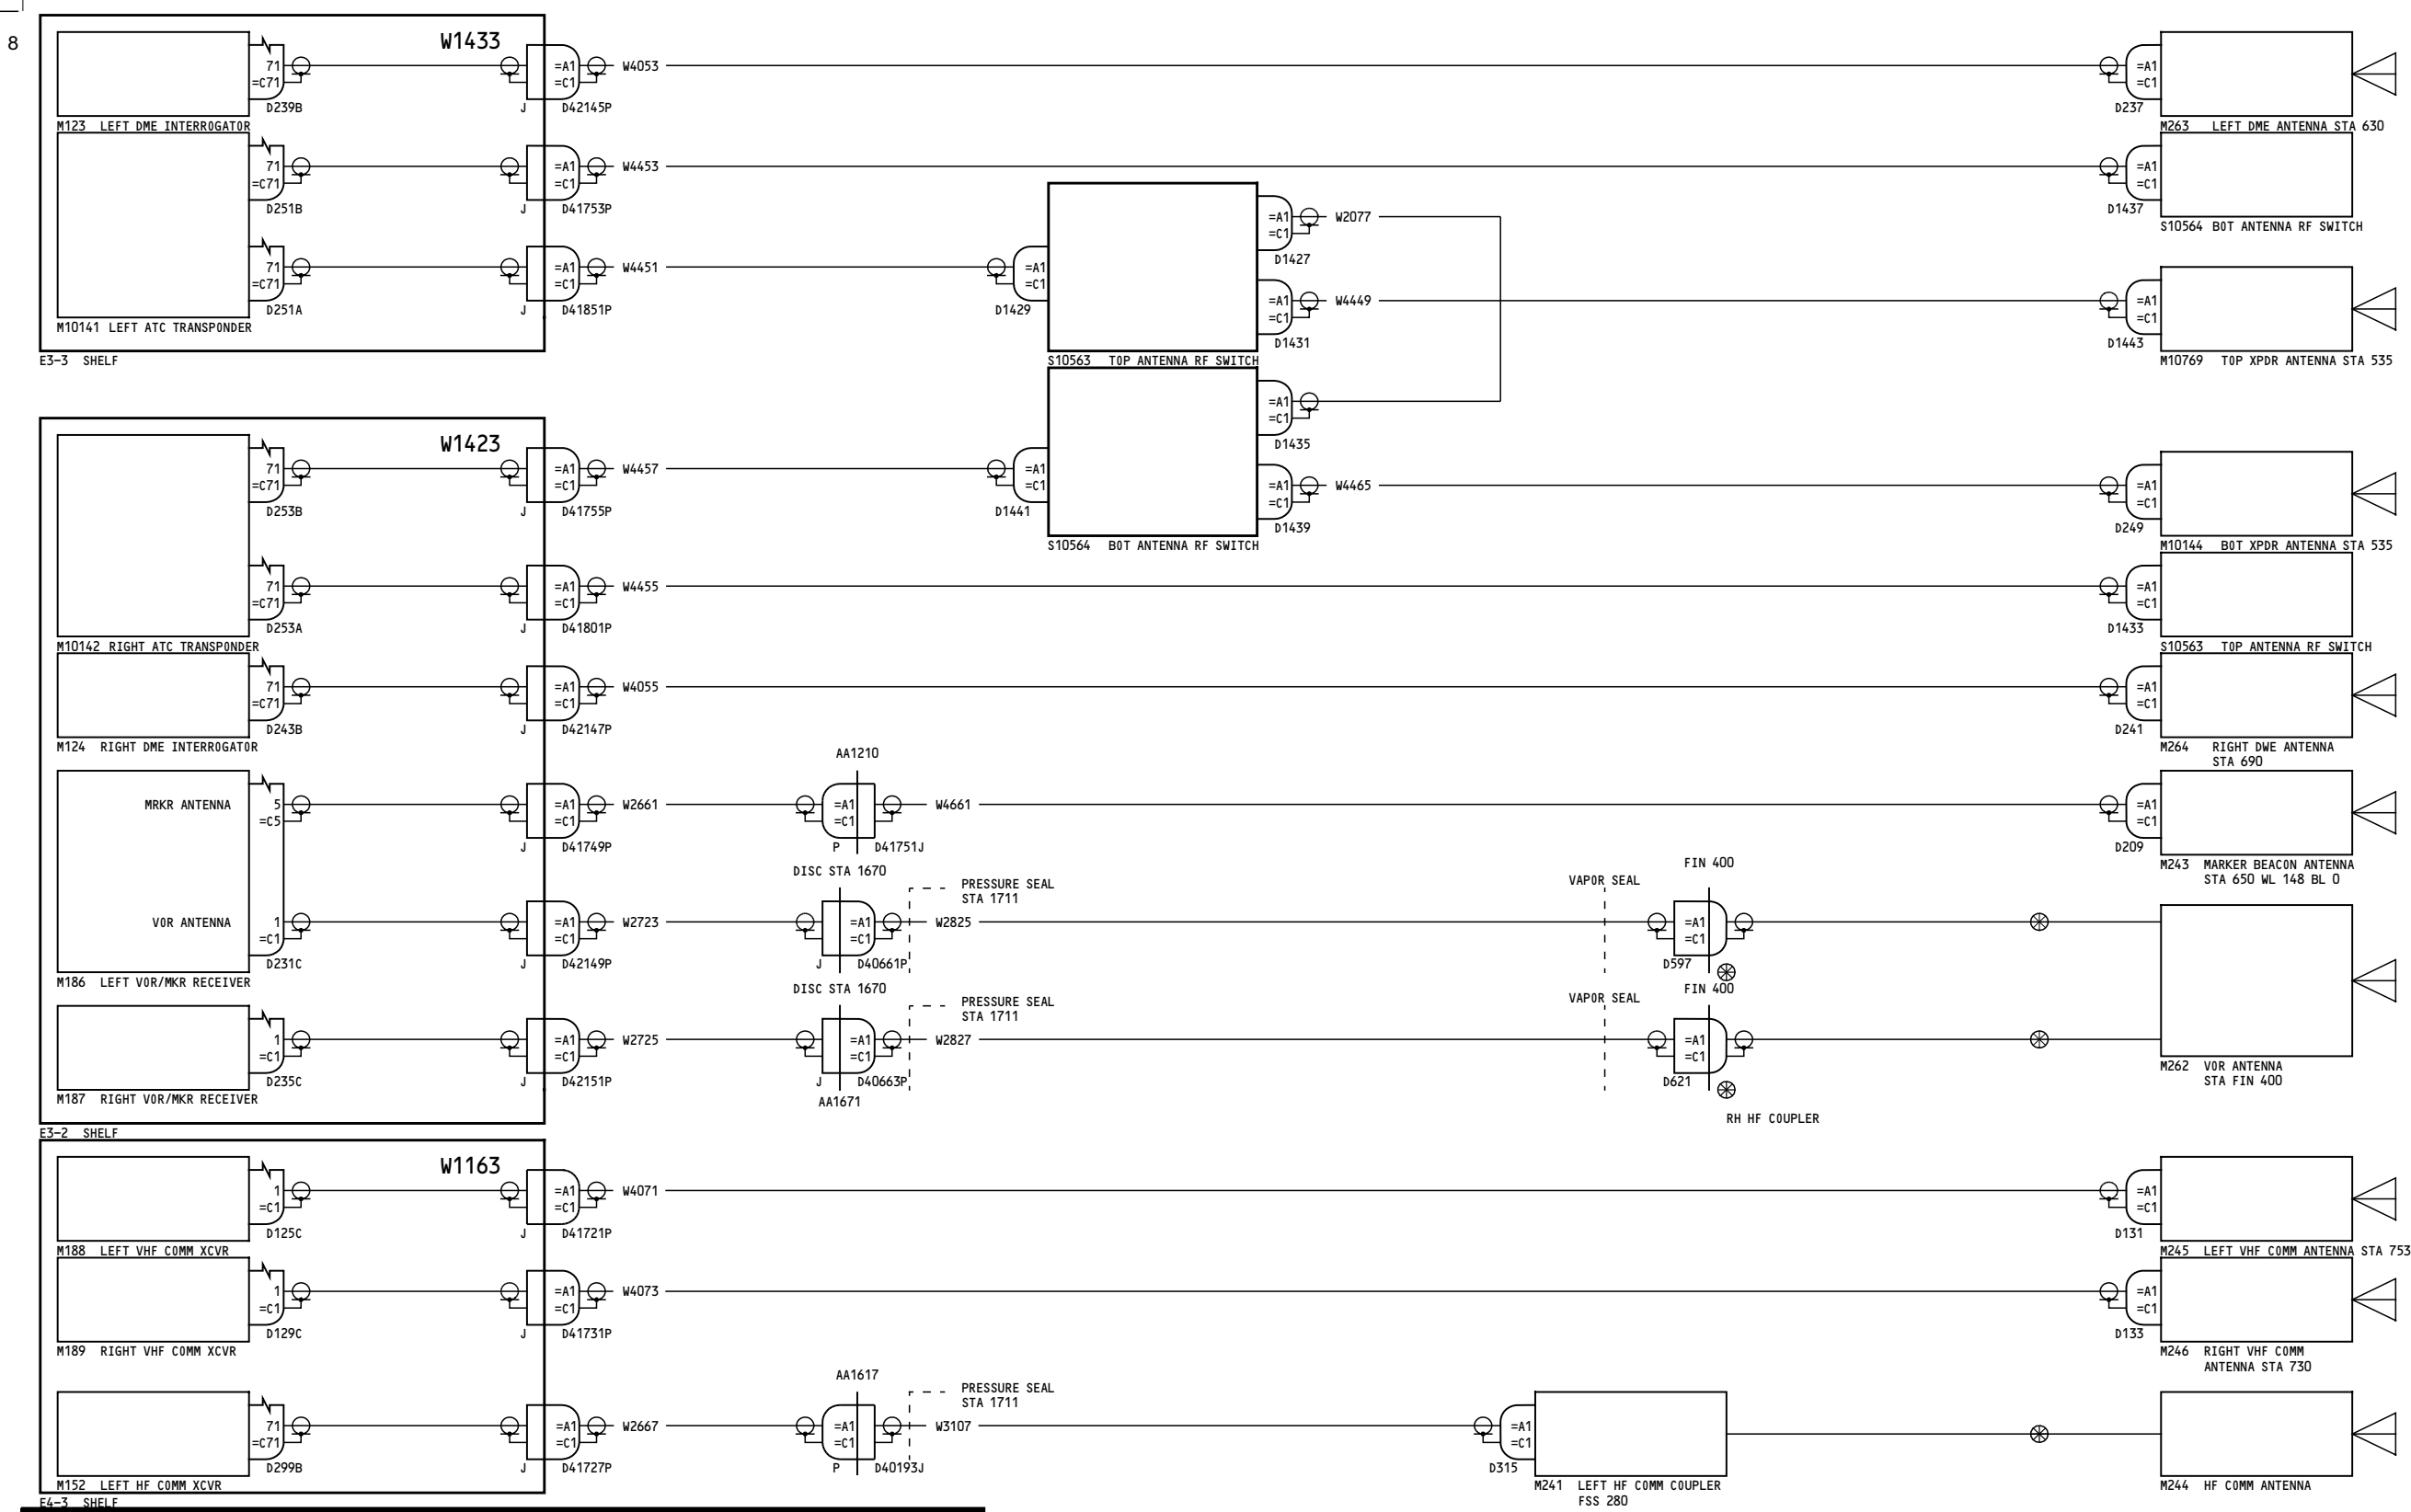

115-199

757 ANTENNA CABLES - ATC, DME, MARKER BEACON, VOR, VHF COMM, HF COMM

D280N032

91-01-42

Page 2

Jan 21/2005

91-01-42

Page 2

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL



- NOTES:
- 1 CRITICAL LENGTH OF 15 FEET 11 INCHES PLUS OR MINUS 1 INCH
- 2 CRITICAL LENGTH OF 17 FEET 3 INCHES PLUS OR MINUS 1 INCH

001-099

757 ANTENNA CABLES -  
RADIO ALTIMETER, ADF

D280N032

91-01-43

Page 1

Jan 21/2005


91-01-43

Page 1

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

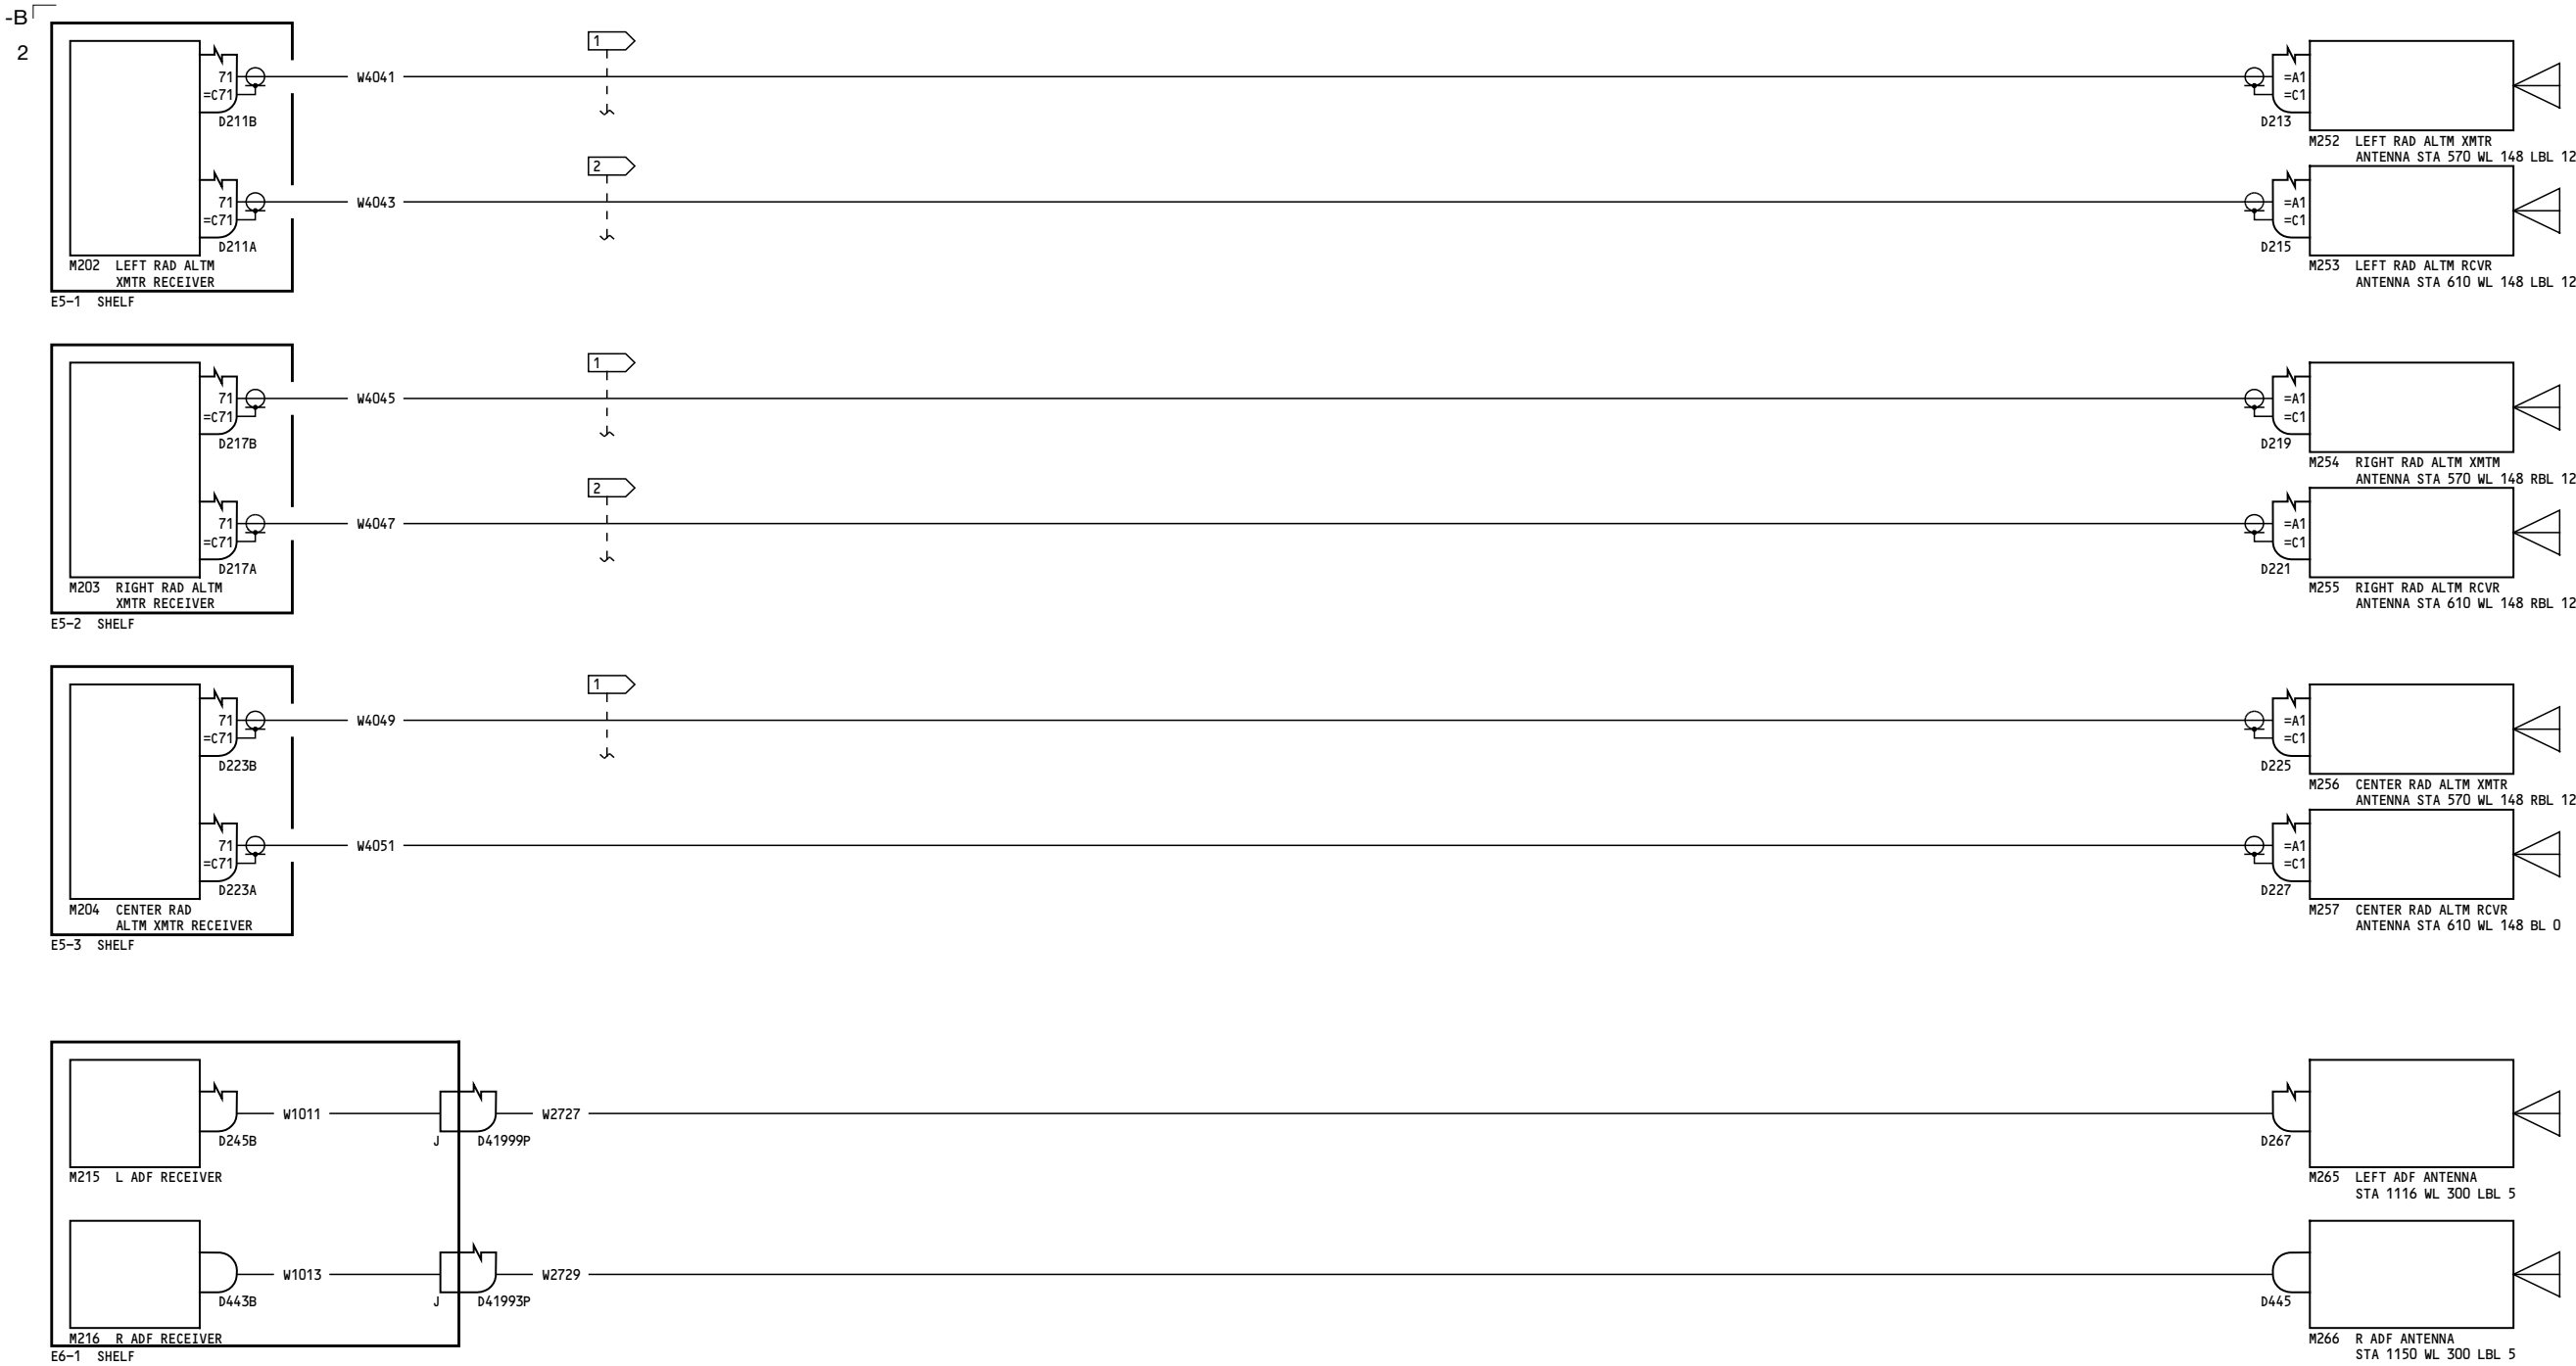

- NOTES:
- 1 CRITICAL LENGTH OF 15 FEET 11 INCHES PLUS OR MINUS 1 INCH
- 2 CRITICAL LENGTH OF 17 FEET 3 INCHES PLUS OR MINUS 1 INCH

115-199

757 ANTENNA CABLES -  
RADIO ALTIMETER, ADF

D280N032

91-01-43


Page 2

Jan 21/2005


91-01-43


Page 2

Jan 21/2005

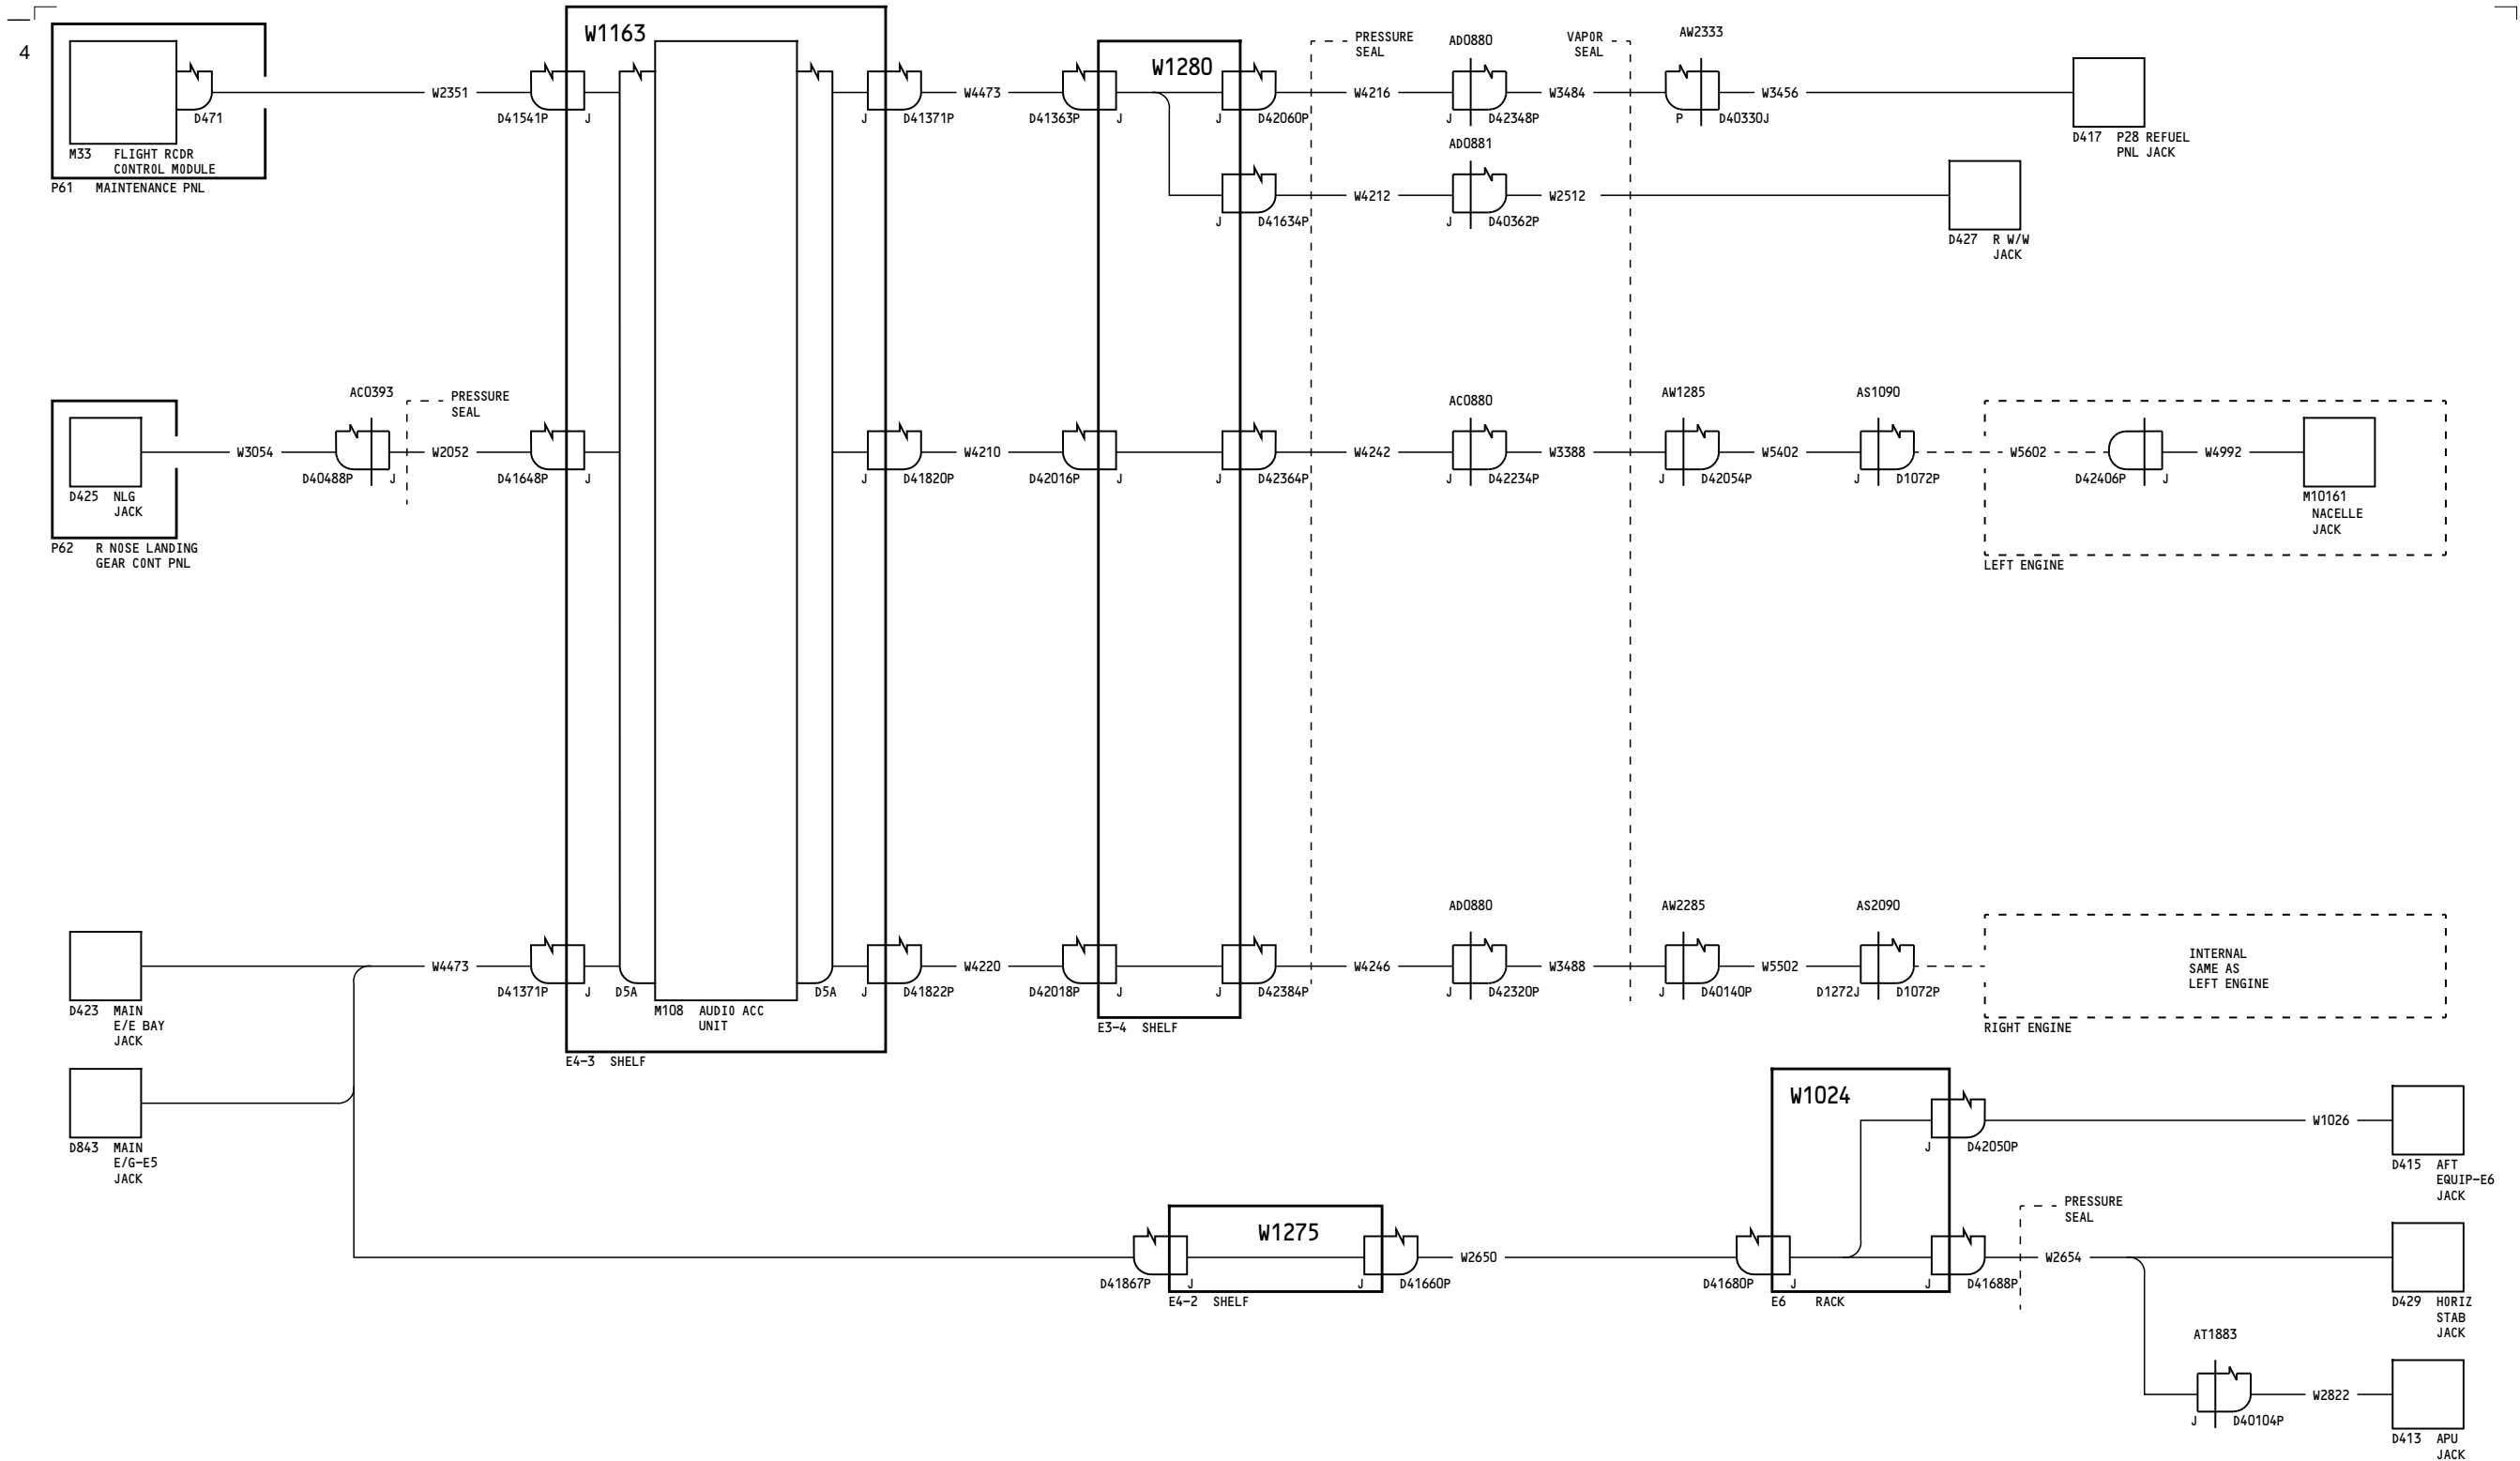



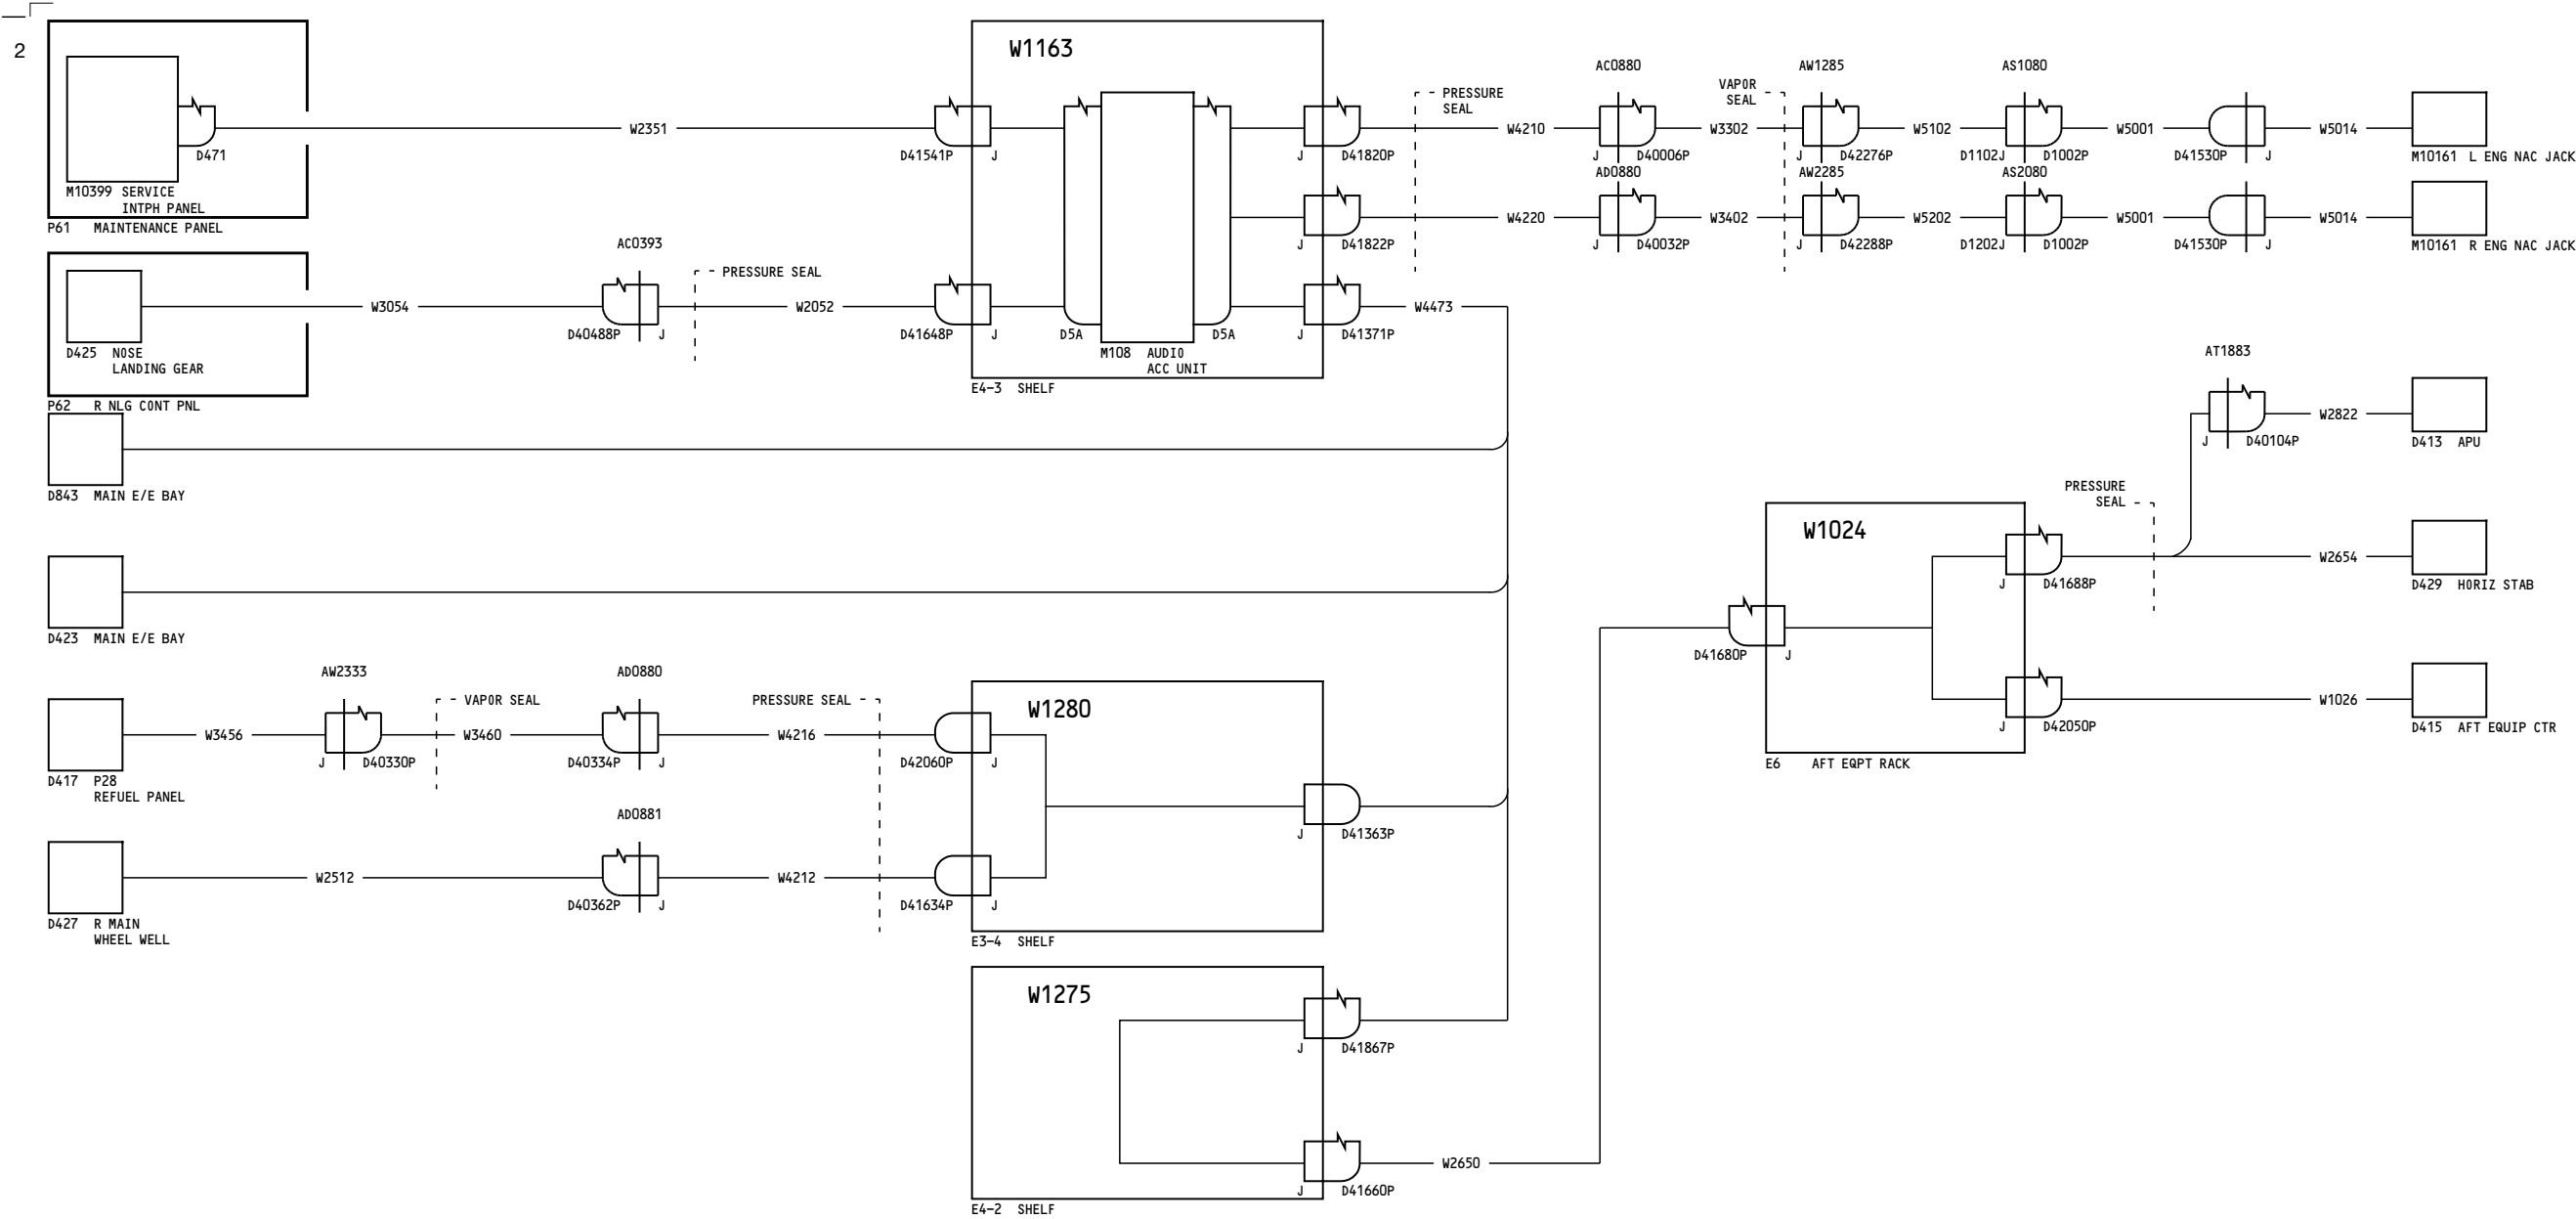


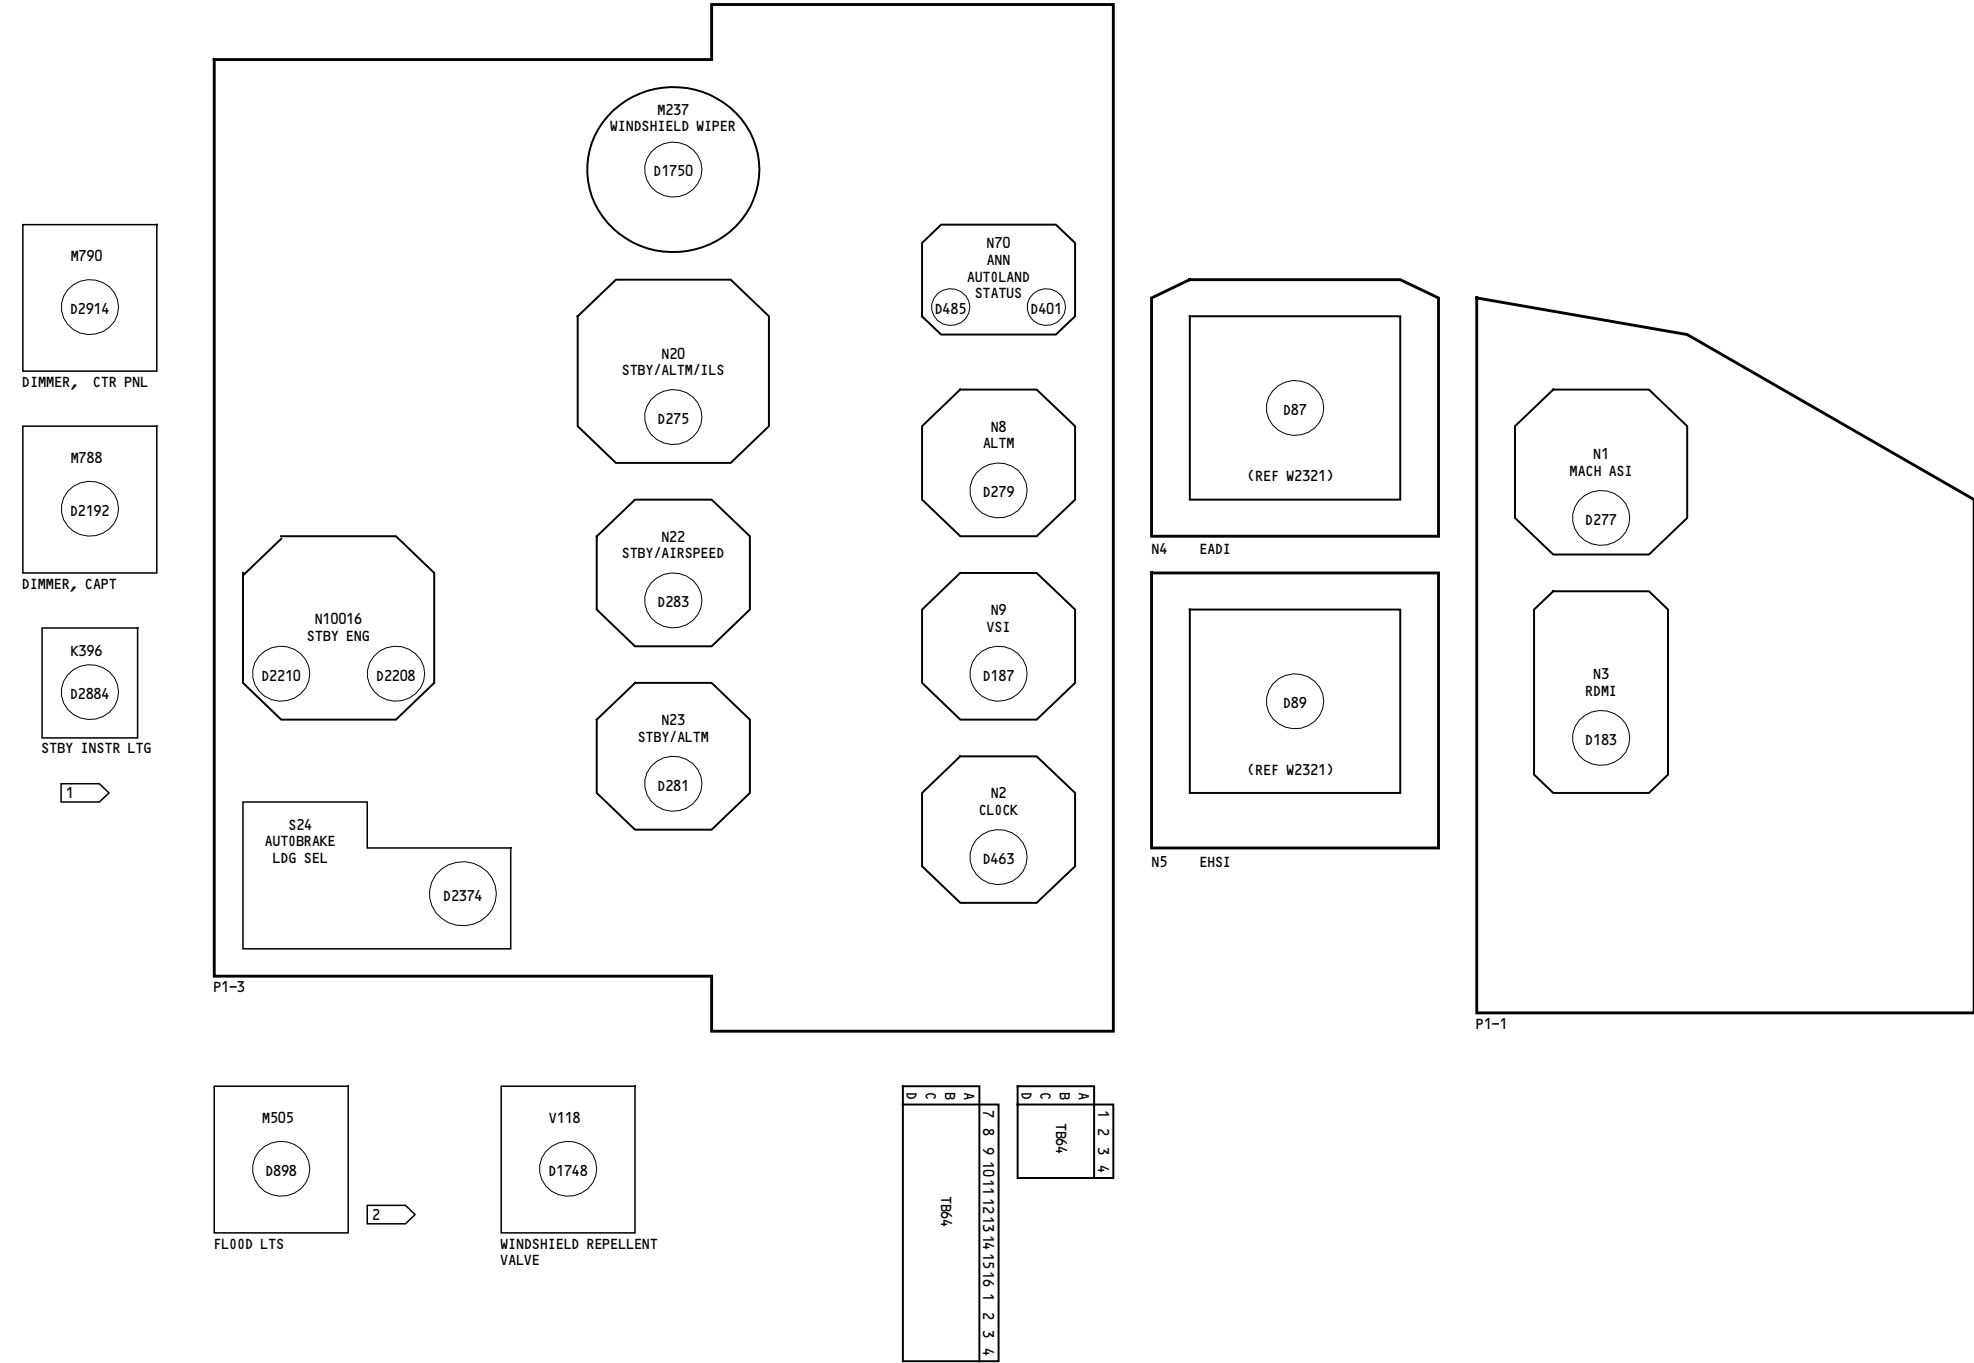

**NOTES:** FOR PANEL DISCONNECT BRACKETS AND CONNECTOR POSITIONS, SEE 91-04-XX.

1 K396, M788 AND M790 MOUNTED BEHIND P1 PANEL

2 M505 AND V118 MOUNTED UNDERNEATH P1 PANEL

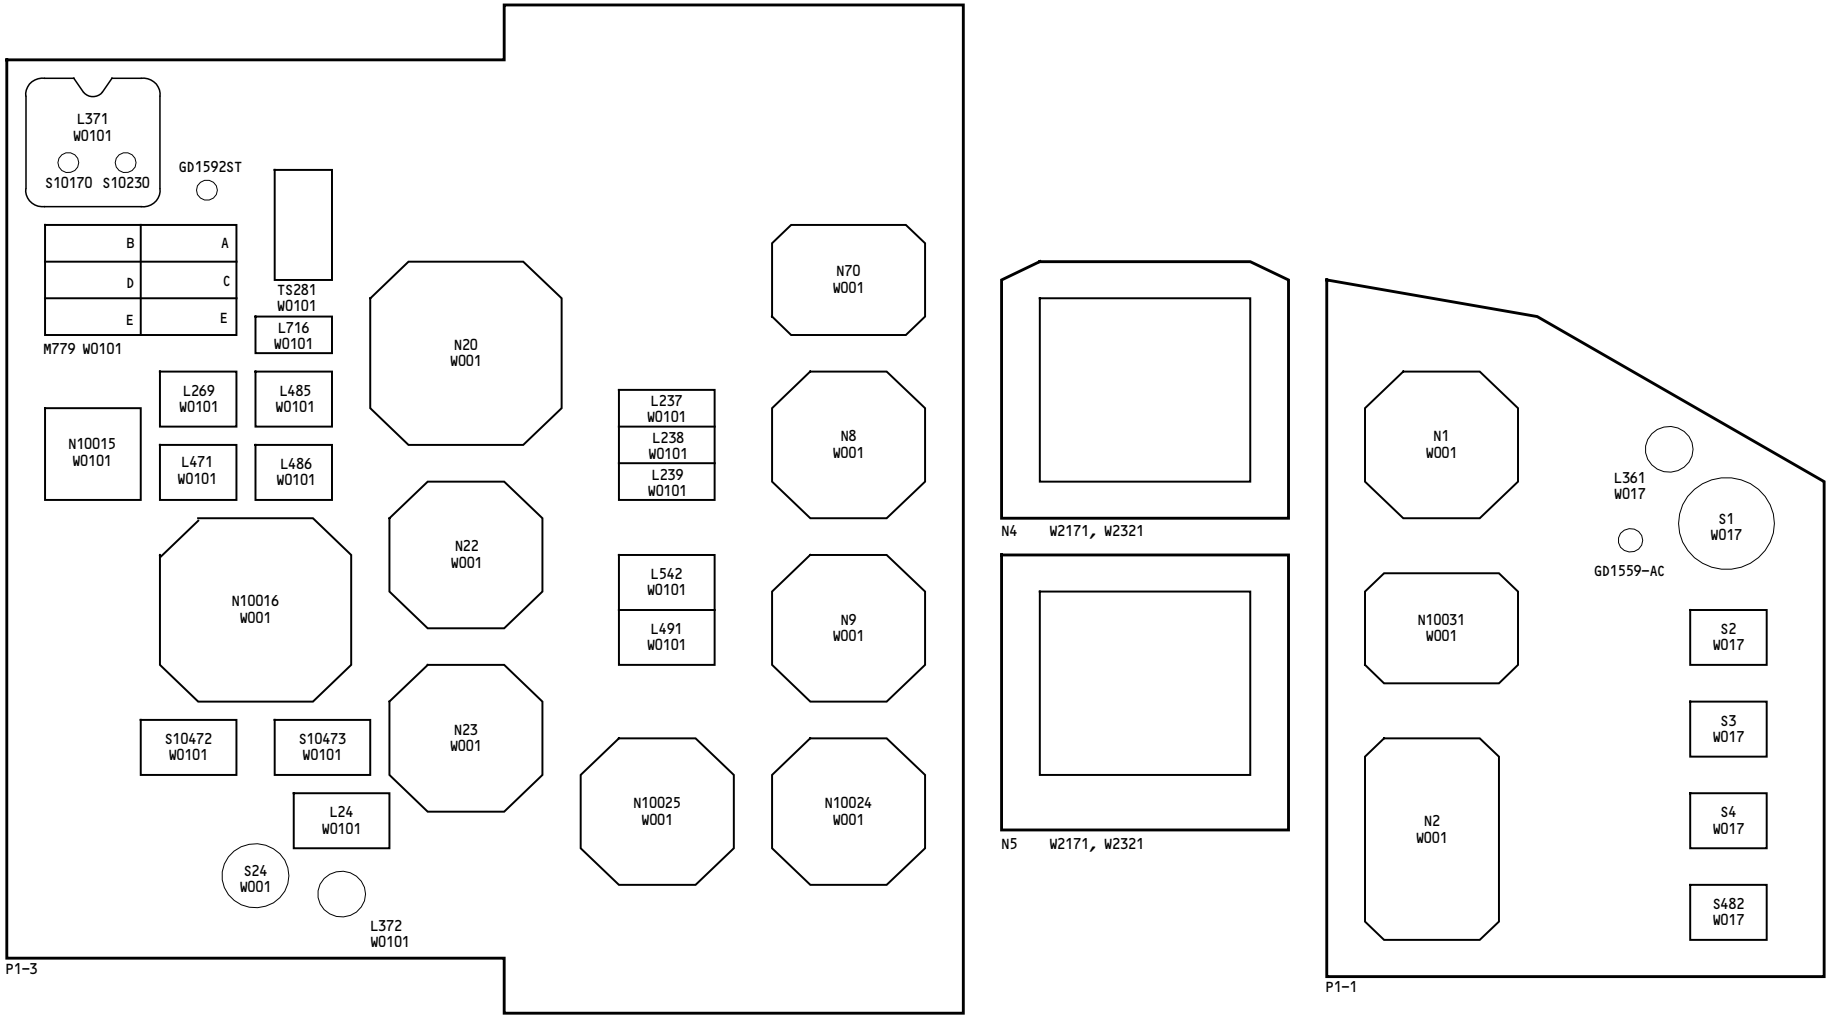

A	1	2	3	4
B	TB64			
C				
D				

A	7	8	9	10	11	12	13	14	15	16	1	2	3	4
B	TB64													
C														
D														

**NOTES:**  
REFER TO 91-04-00 FOR DISCONNECT PANEL INFORMATION

115-199

**P1-1, P1-3 AND  
EFIS PANELS  
CAPTAINS INSTRUMENT**

D280N032

**91-02-01**


Page 2

Jan 21/2005

**91-02-01**

Page 2

Jan 21/2005

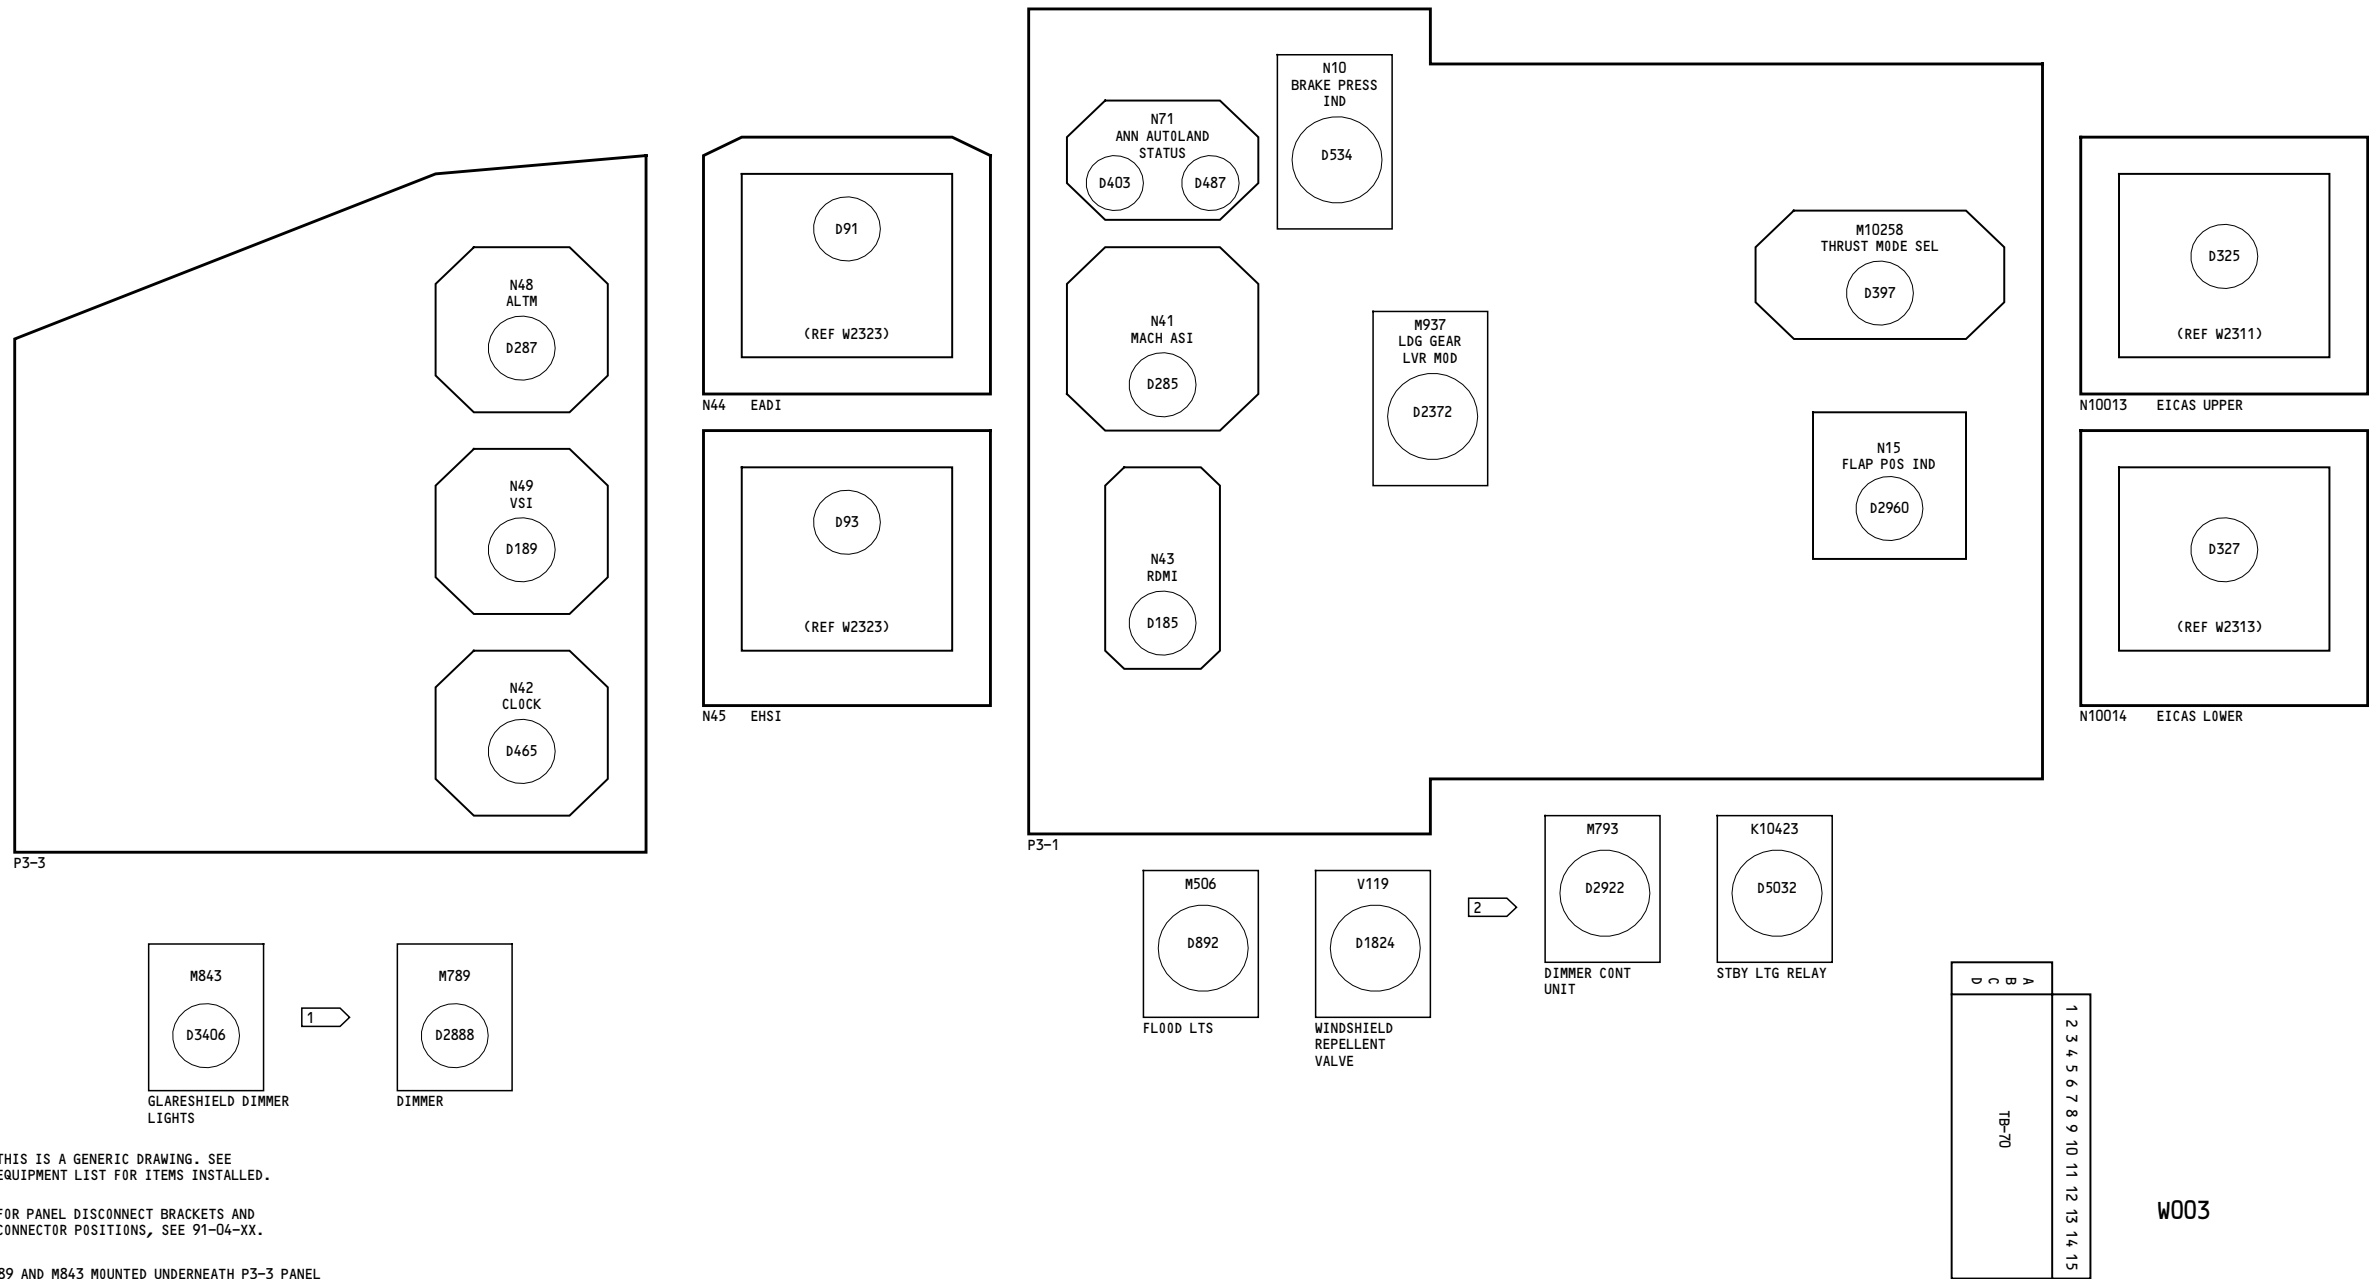

001-099

**P3-1, P3-3, EFIS  
AND EICAS PANELS  
F/O INSTRUMENT**

D280N032

**91-02-02**


Page 1

Jan 21/2005

**91-02-02**

Page 1

Jan 21/2005

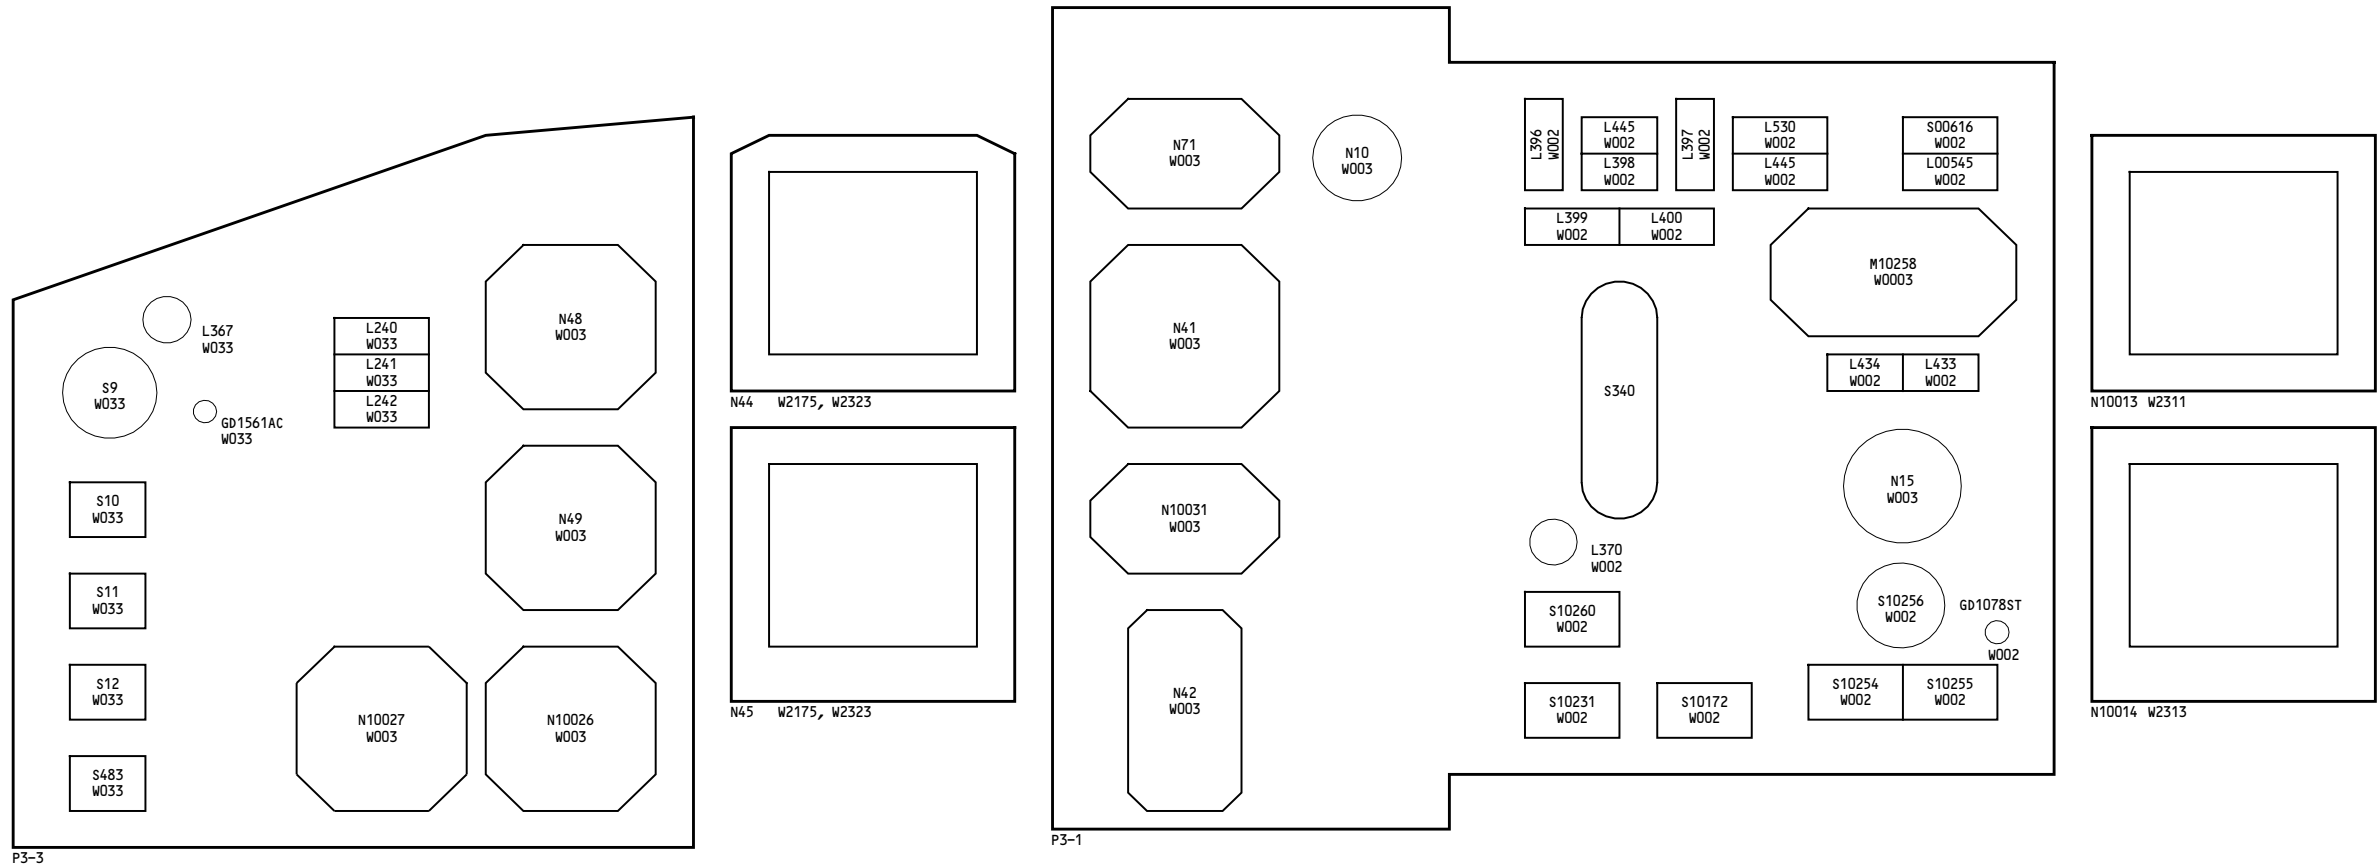

**NOTES:**  
REFER TO 91-04-00 FOR DISCONNECT PANEL INFORMATION

115-199

**P3-1, P3-3, EFIS  
AND EICAS PANELS  
F/O INSTRUMENT**

D280N032

**91-02-02**

Page 2

Jan 21/2005

**91-02-02**







Page 2

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

-A  
2

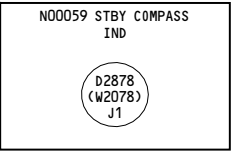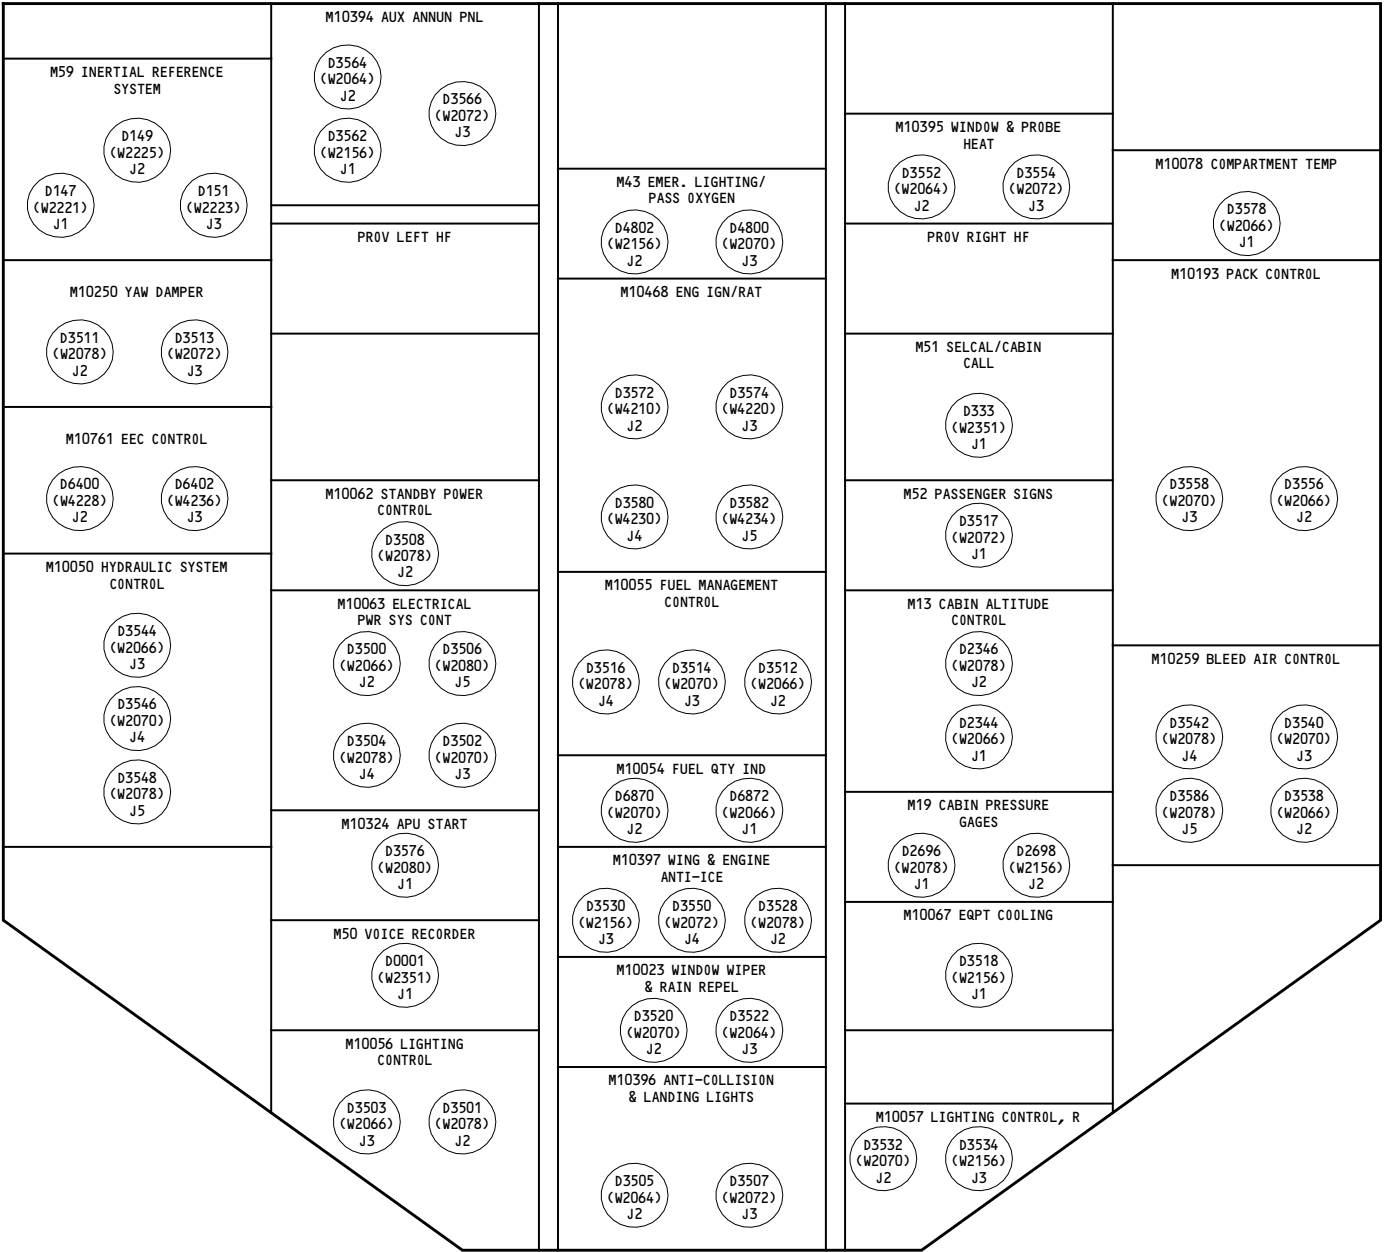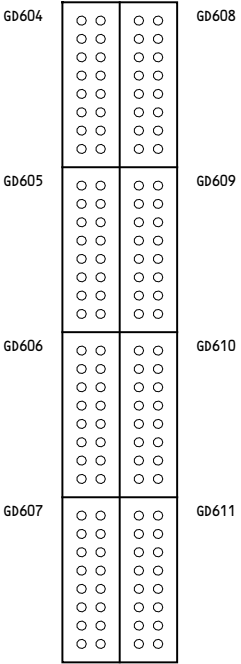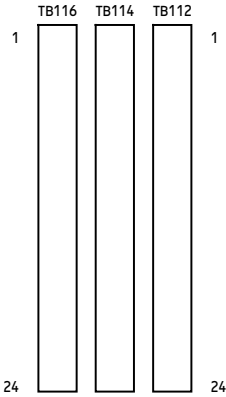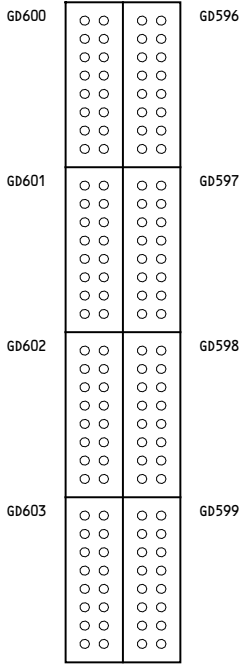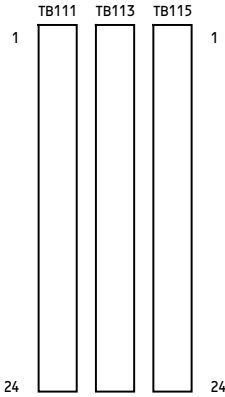

NOTES:  
REFER TO 91-04-00 FOR DISCONNECT PANEL INFORMATION

ALL	P5 PANEL PILOTS OVERHEAD
	D280N032

91-02-03



Page 1

Oct 09/2008

91-02-03

Page 1

Oct 09/2008

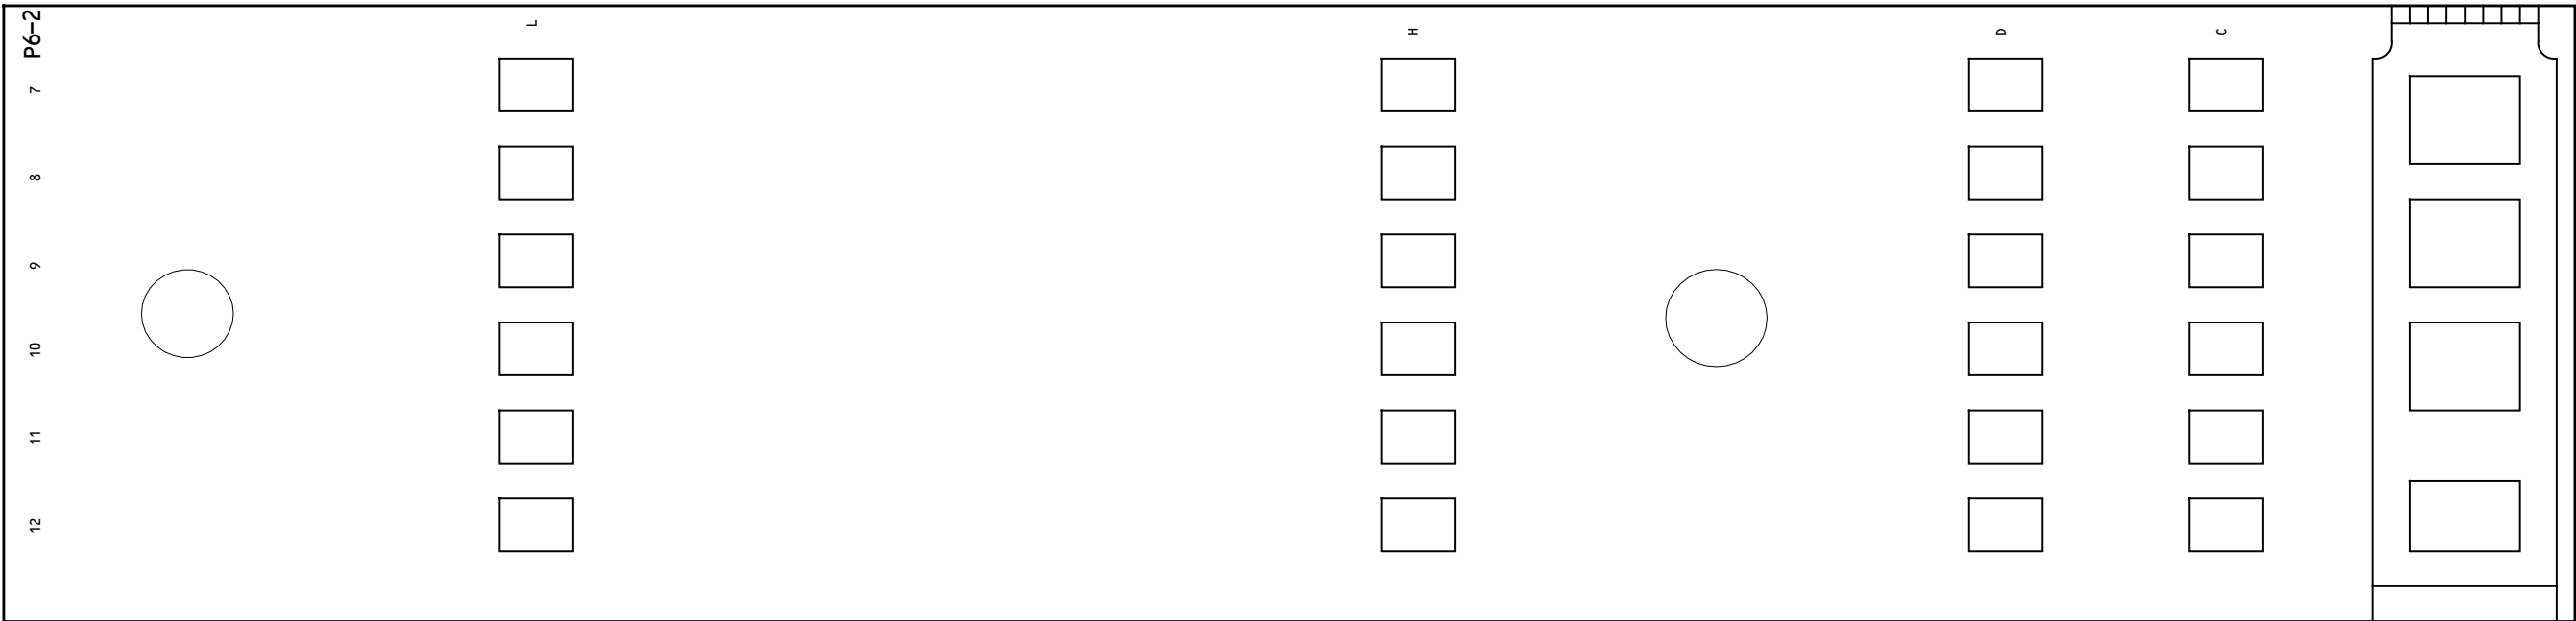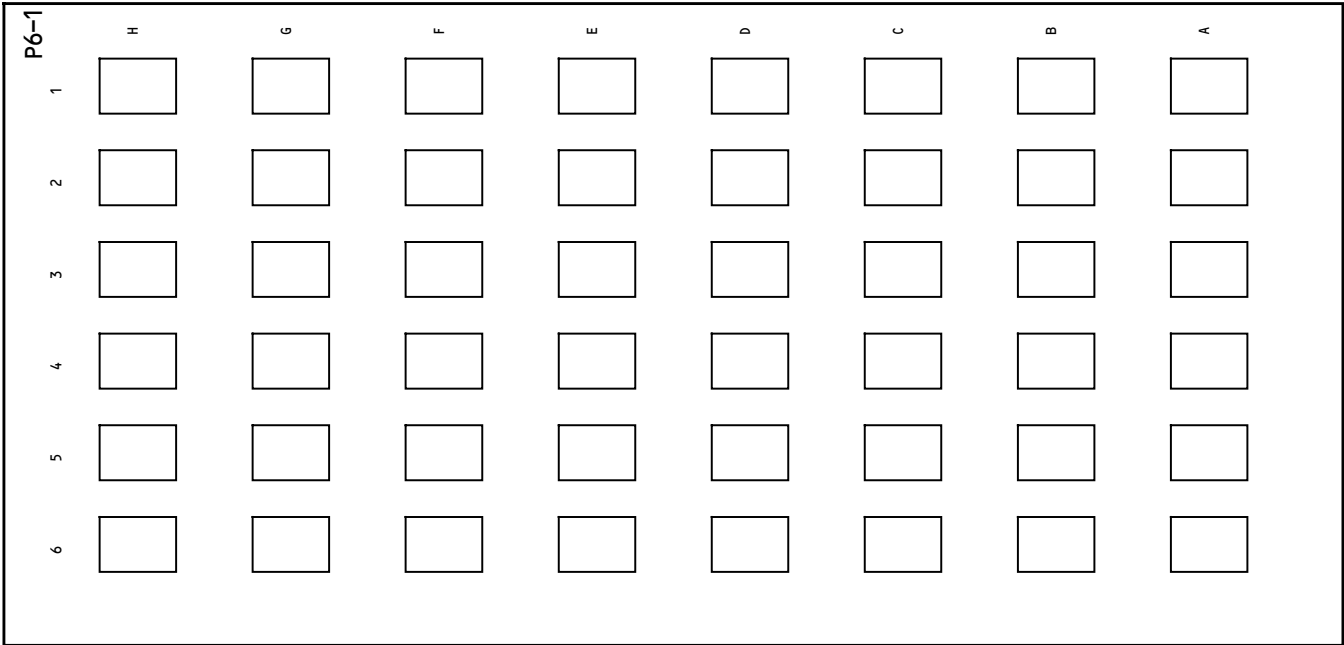

**NOTES:**  
REFER TO 91-02-00 FOR CIRCUIT BREAKER INFORMATION

ALL

**P6-1 AND P6-2 PANELS  
MAIN POWER DISTRIBUTION  
(CIRCUIT BREAKER)**

D280N032

**91-02-04**



Page 1

Jan 21/2005

**91-02-04**

Page 1

Jan 21/2005

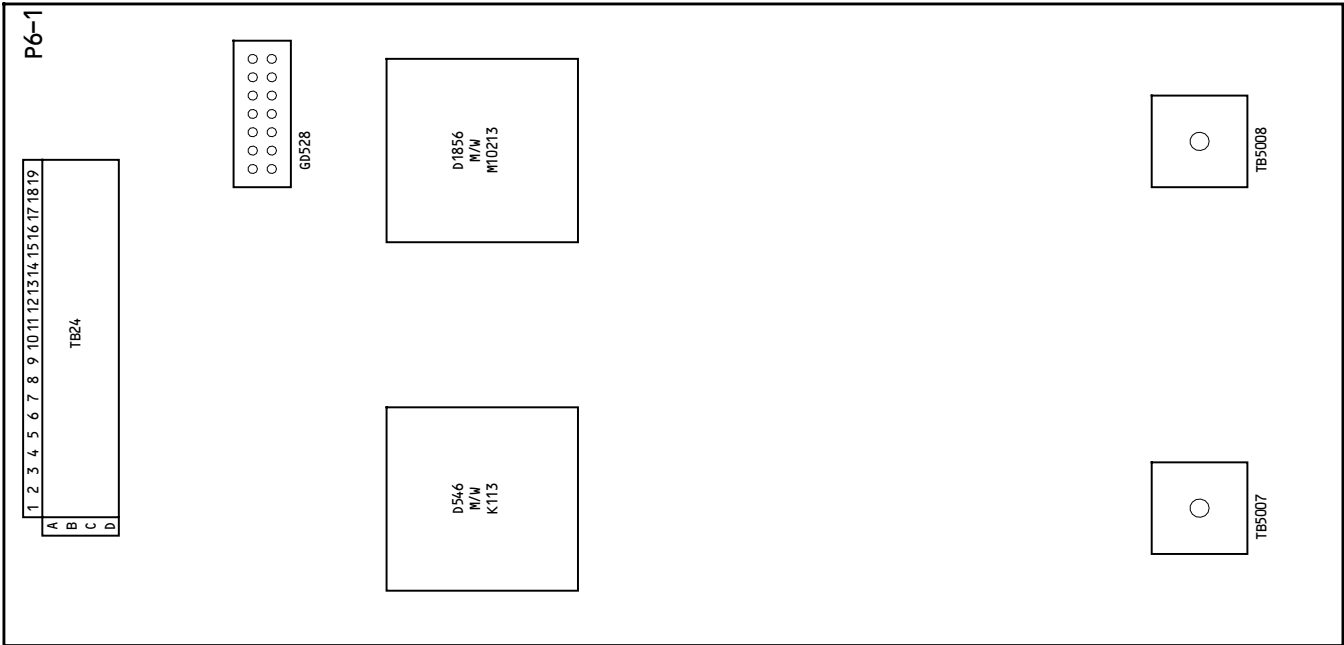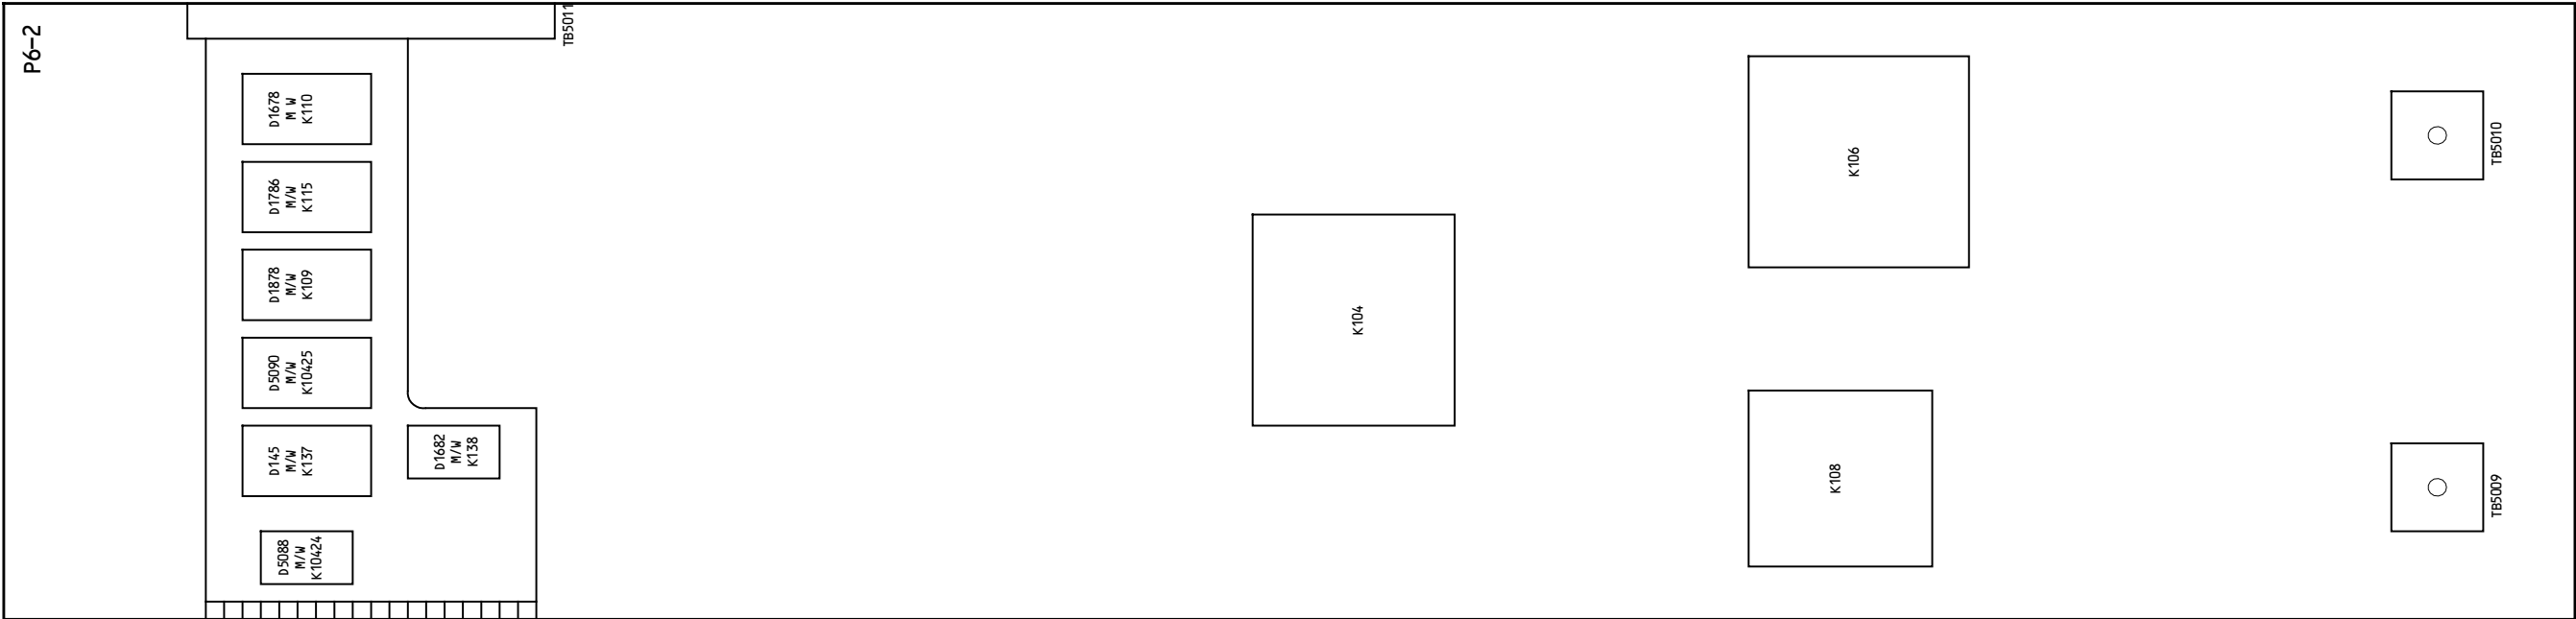

**NOTES:**  
REFER TO 91-04-00 FOR DISCONNECT PANEL INFORMATION

001-099

**P6-1 AND P6-2 PANELS  
MAIN POWER DISTRIBUTION  
(INTERNAL)**

D280N032

**91-02-05**

Page 1



Jan 21/2005

**91-02-05**

Page 1

Jan 21/2005



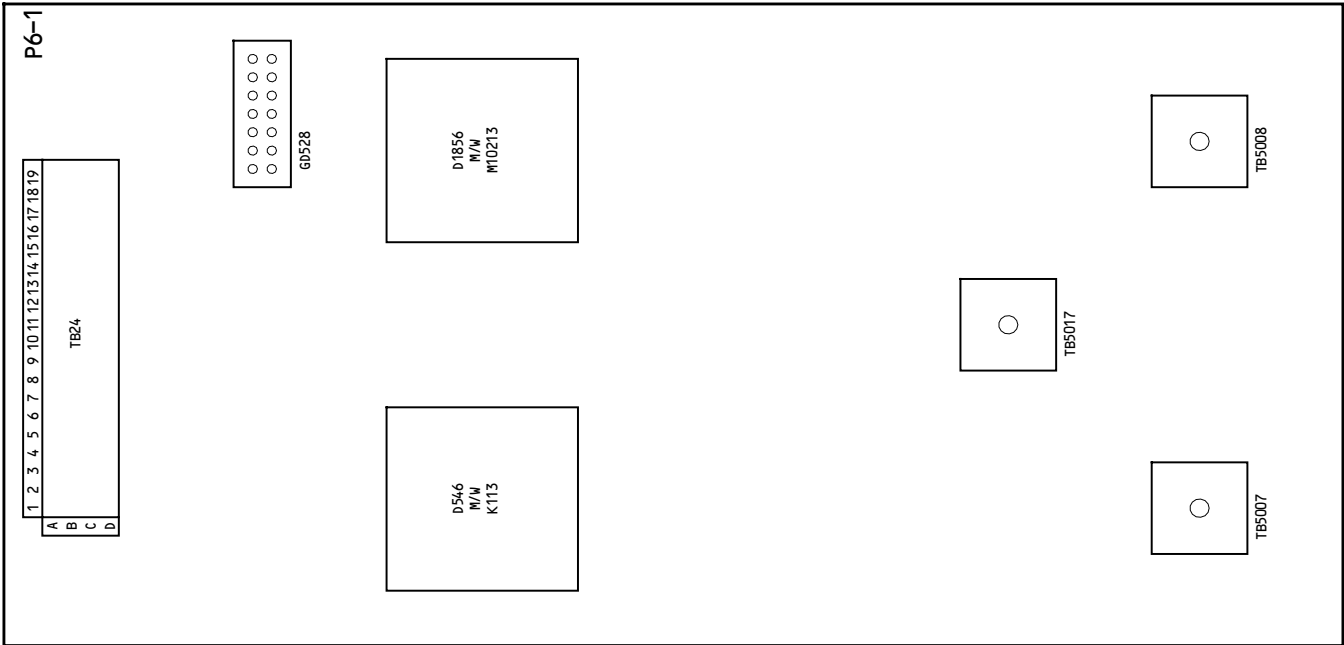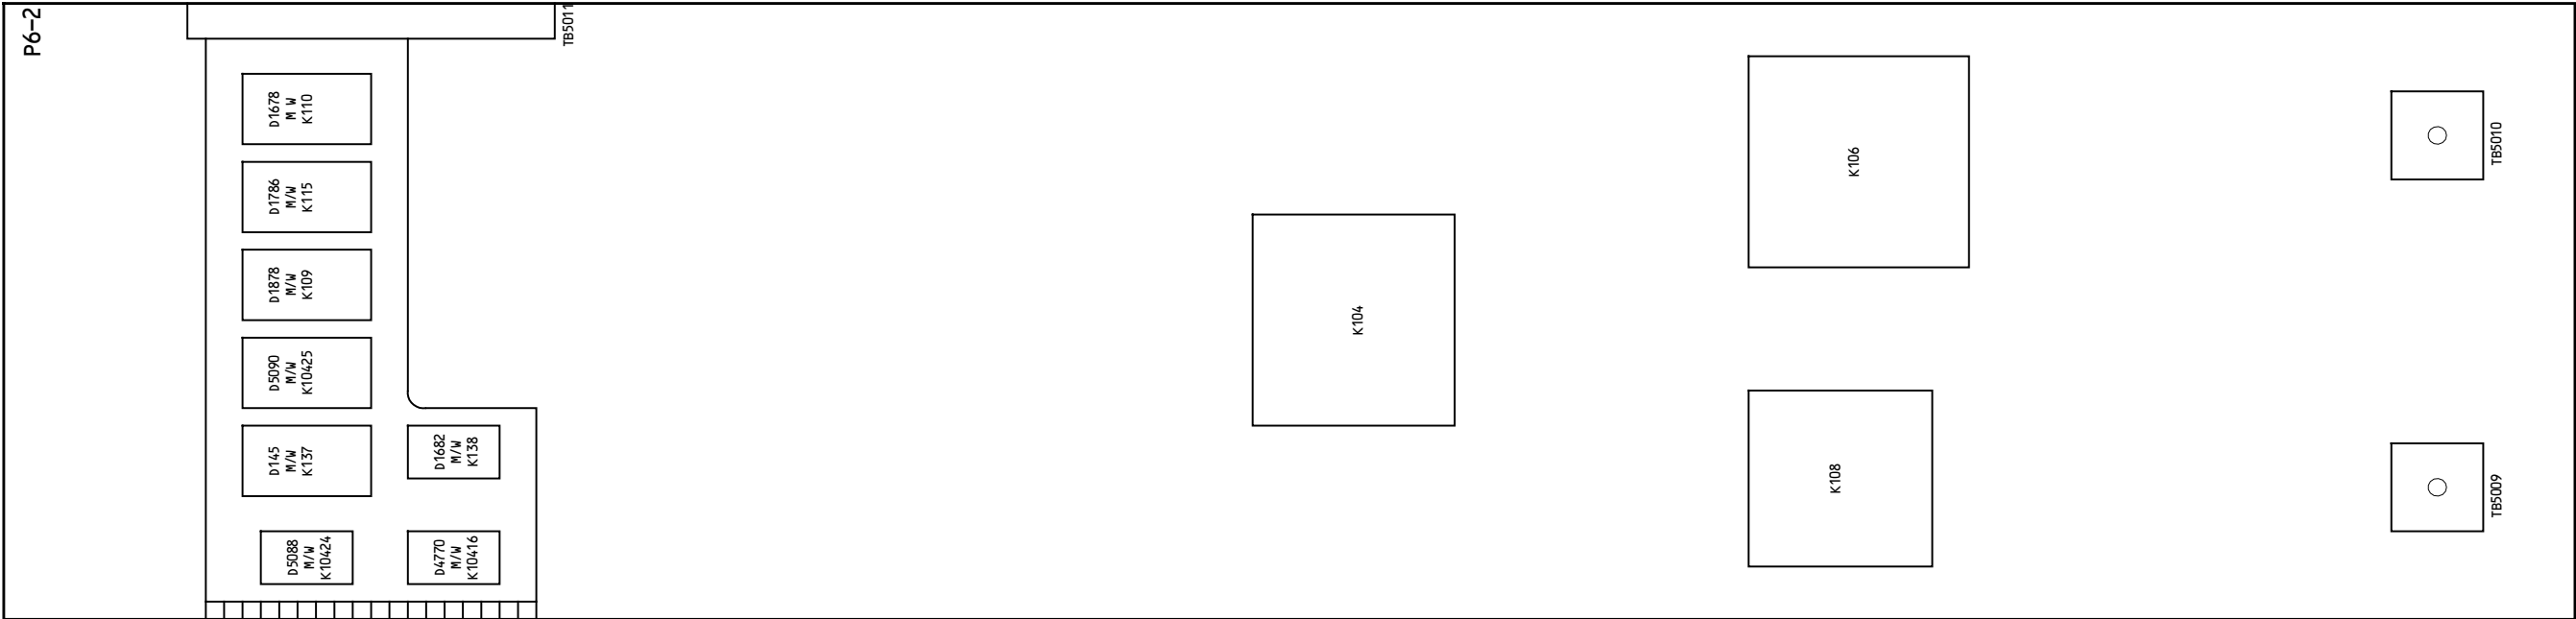

**NOTES:**  
REFER TO 91-04-00 FOR DISCONNECT PANEL INFORMATION

115-199	<b>P6-1 AND P6-2 PANELS MAIN POWER DISTRIBUTION (INTERNAL)</b>
	D280N032

91-02-05



Page 2

Jan 21/2005

91-02-05

Page 2

Jan 21/2005

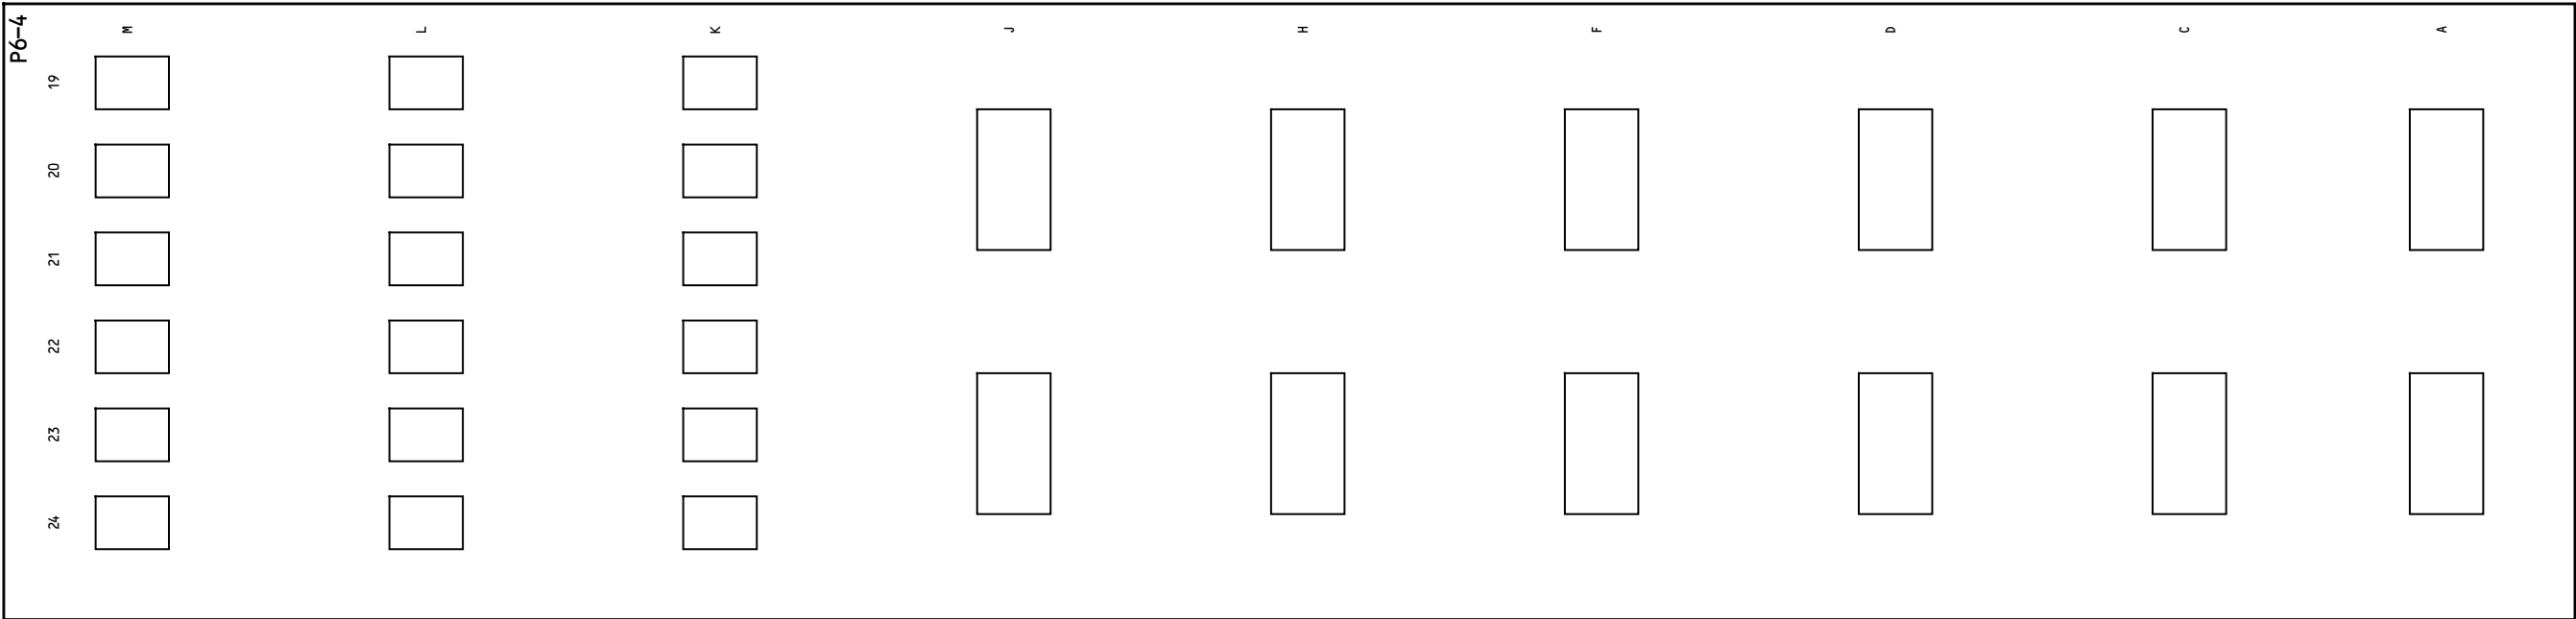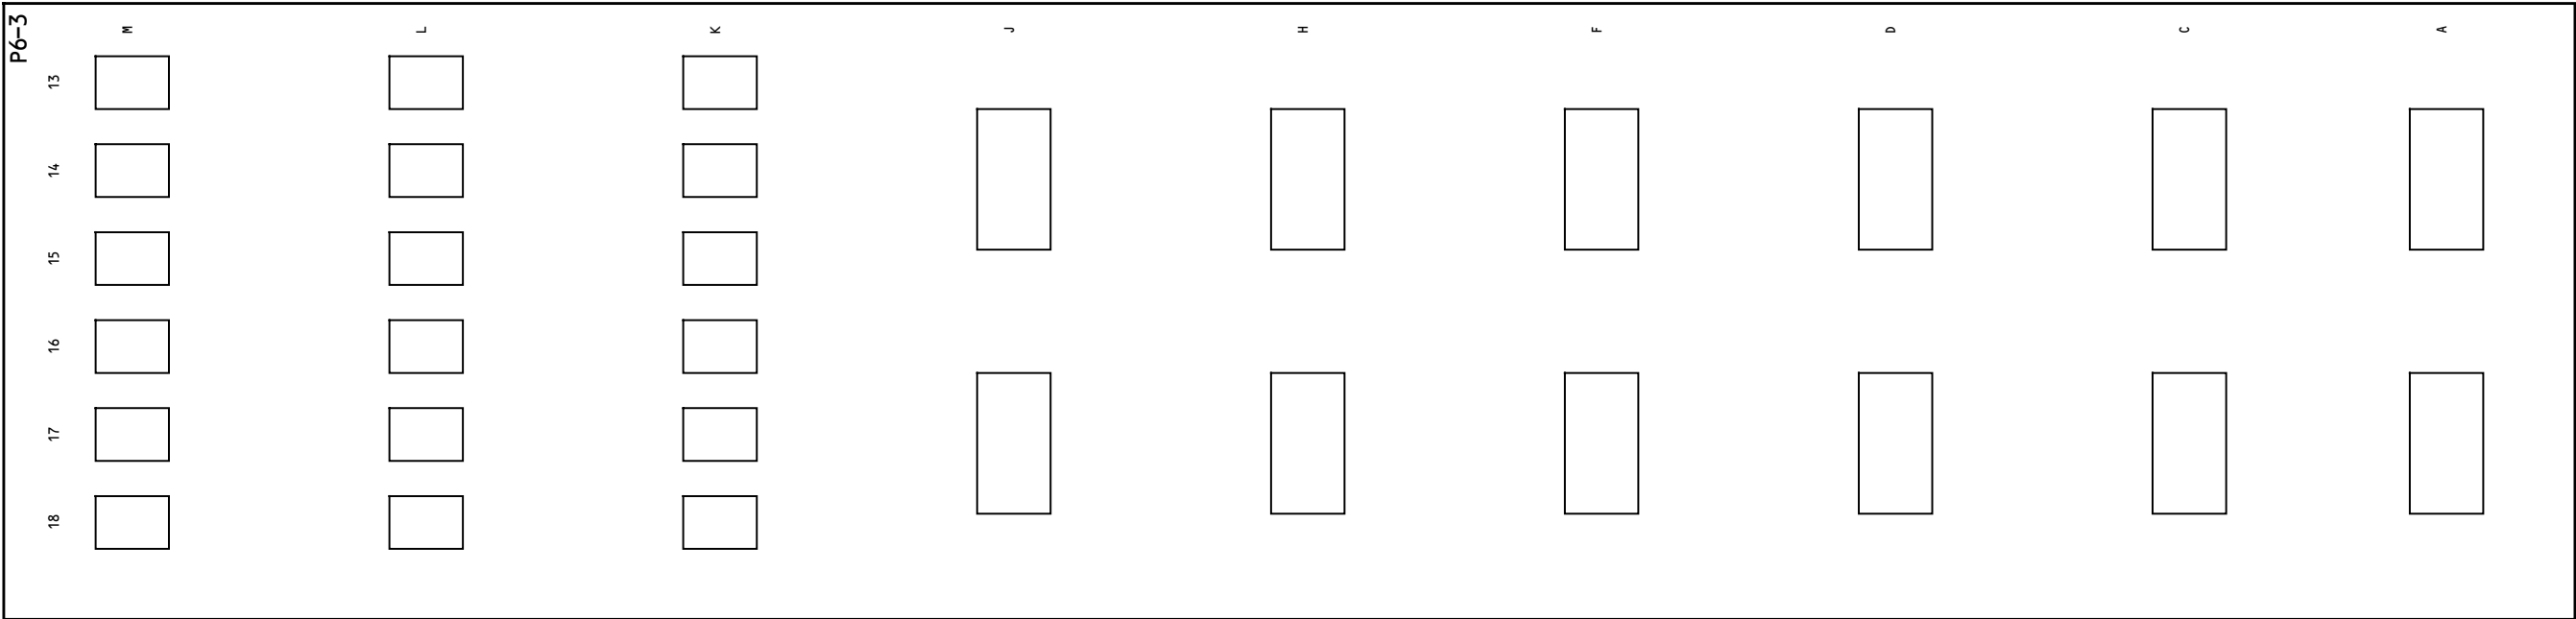

**NOTES:**  
REFER TO 91-02-00 FOR CIRCUIT BREAKER INFORMATION

ALL	<b>P6-3 AND P6-4 PANELS MAIN POWER DISTRIBUTION (CIRCUIT BREAKER)</b>
	D280N032

**91-02-06**


Page 1

Jan 21/2005



**91-02-06**

Page 1

Jan 21/2005

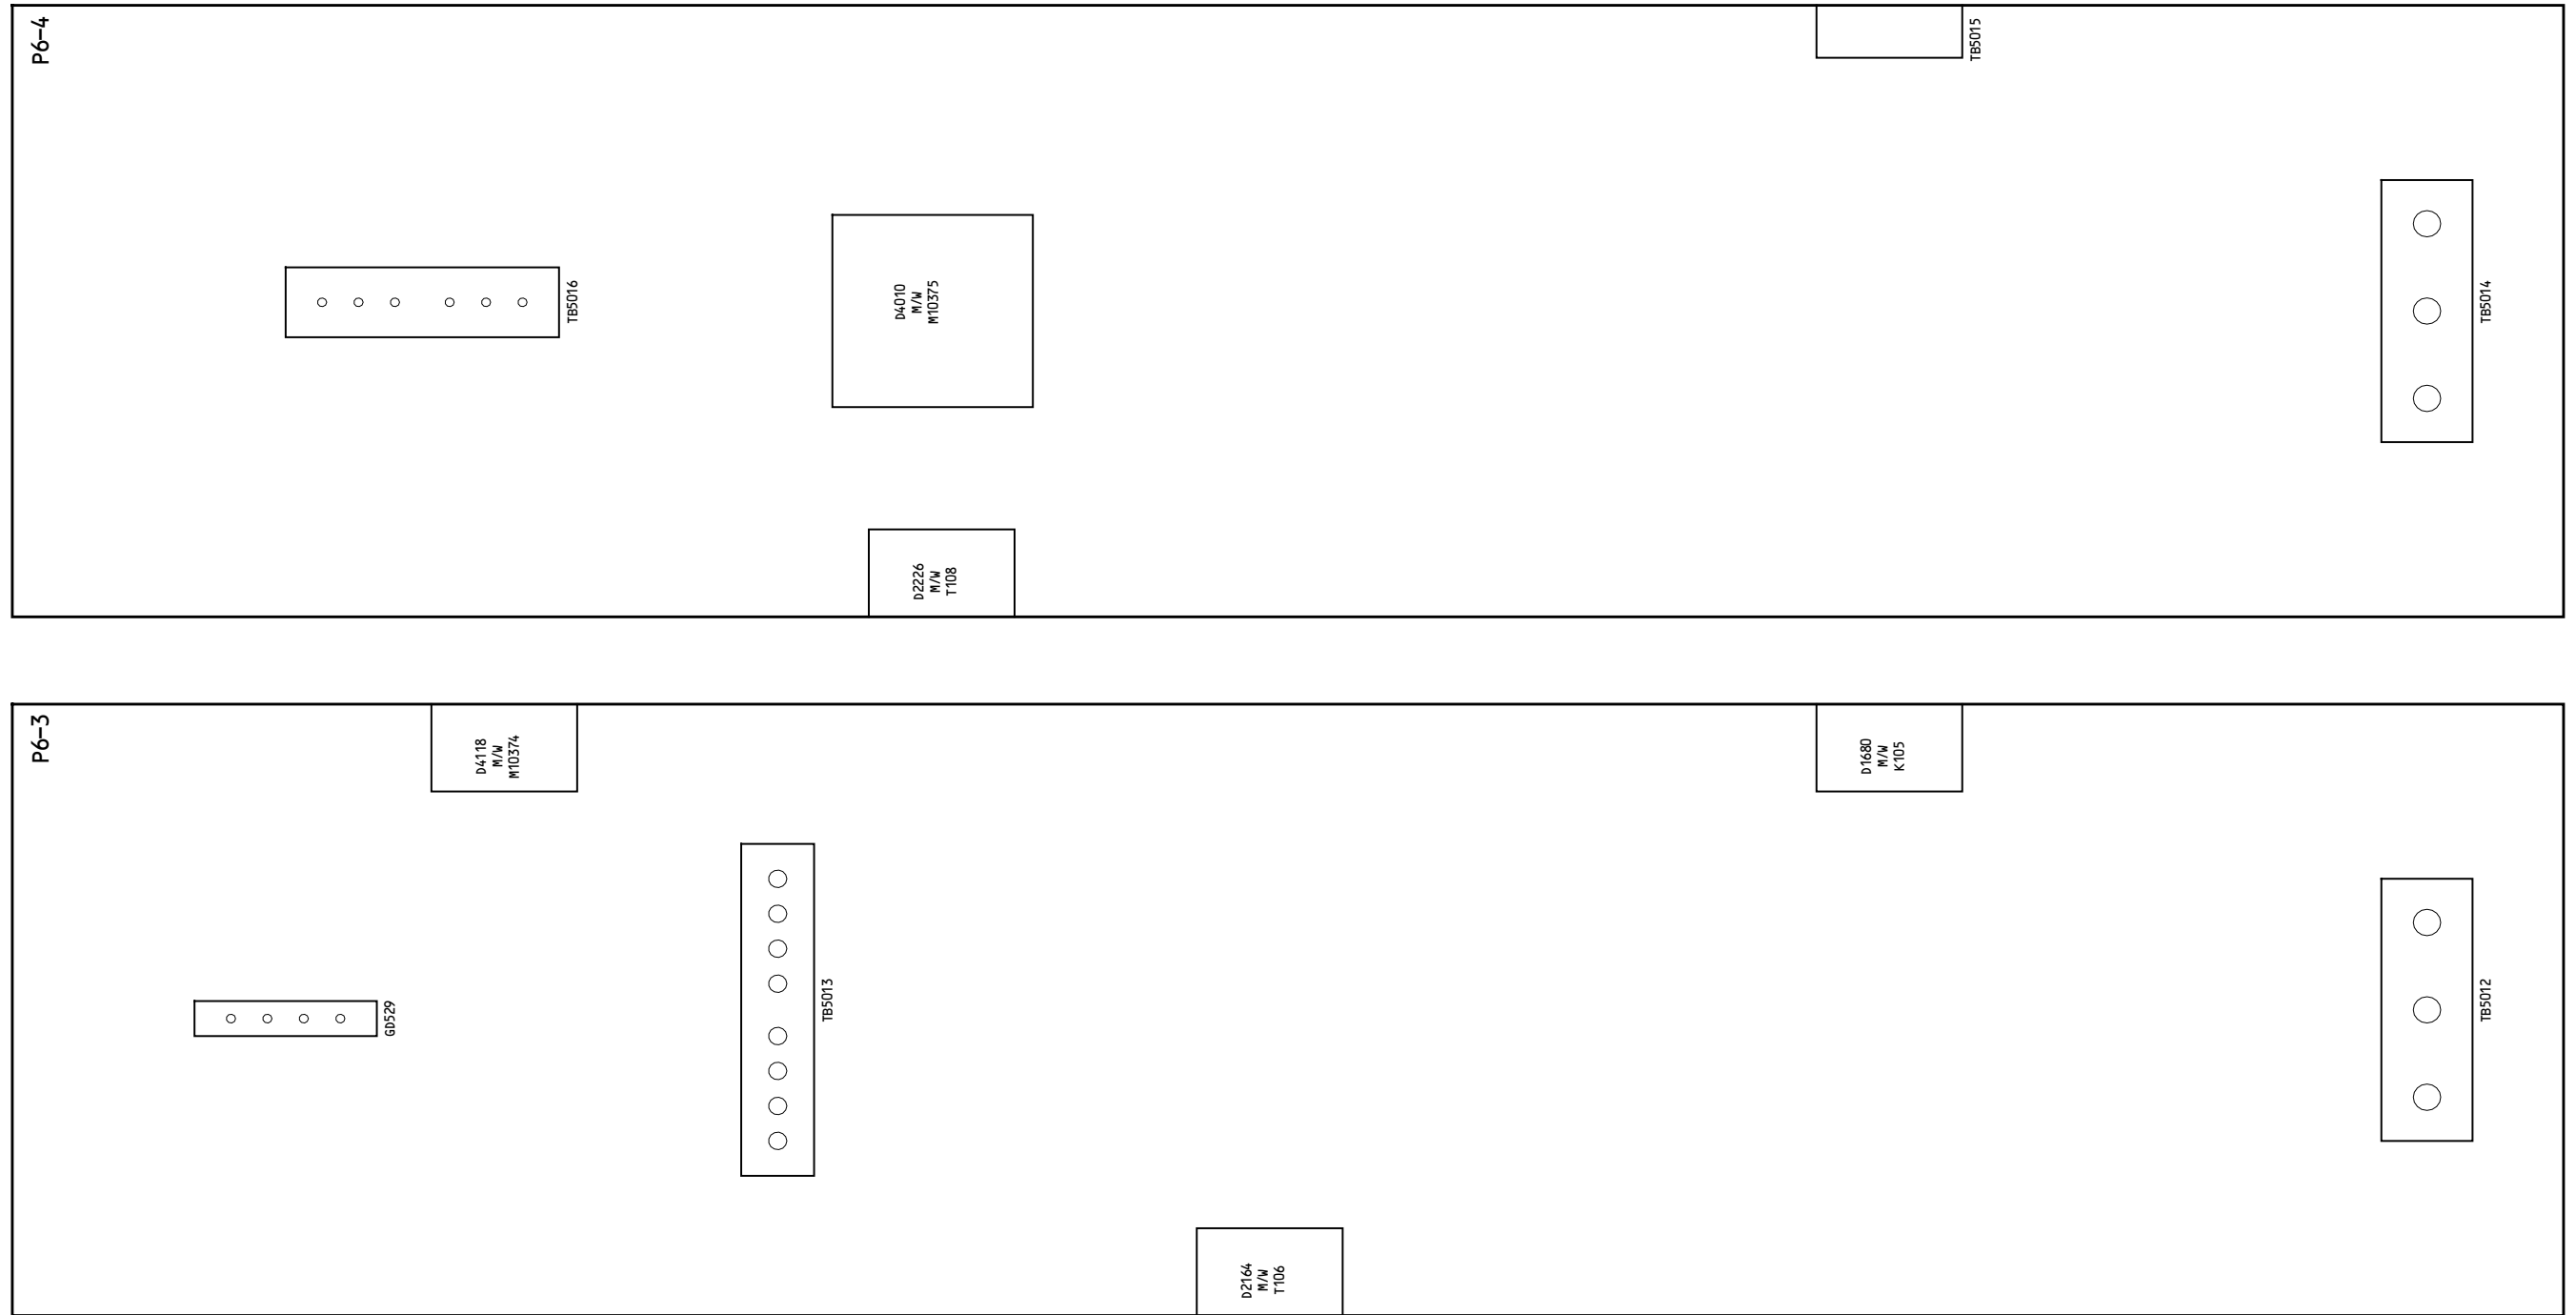

**NOTES:**  
REFER TO 91-04-00 FOR DISCONNECT PANEL INFORMATION

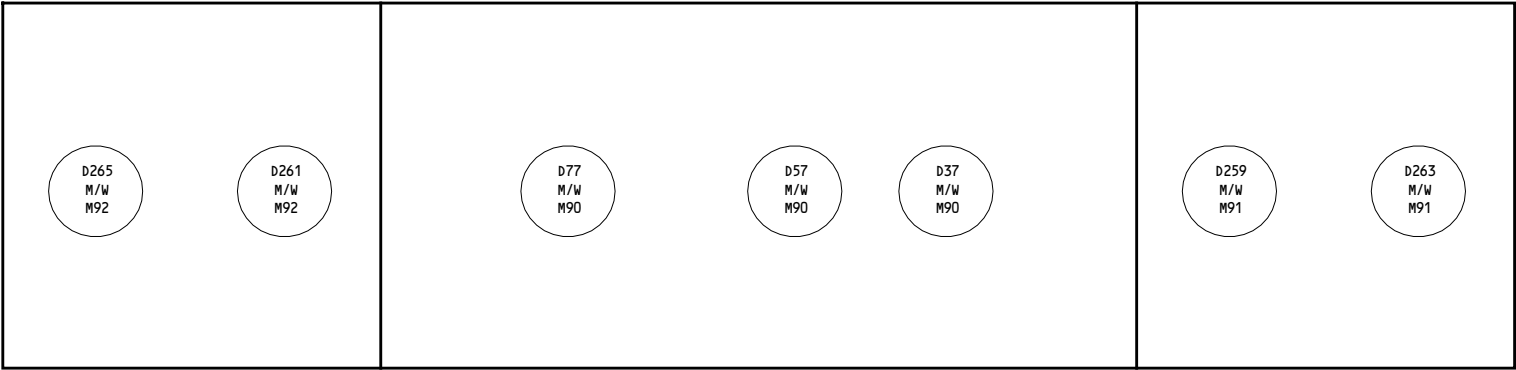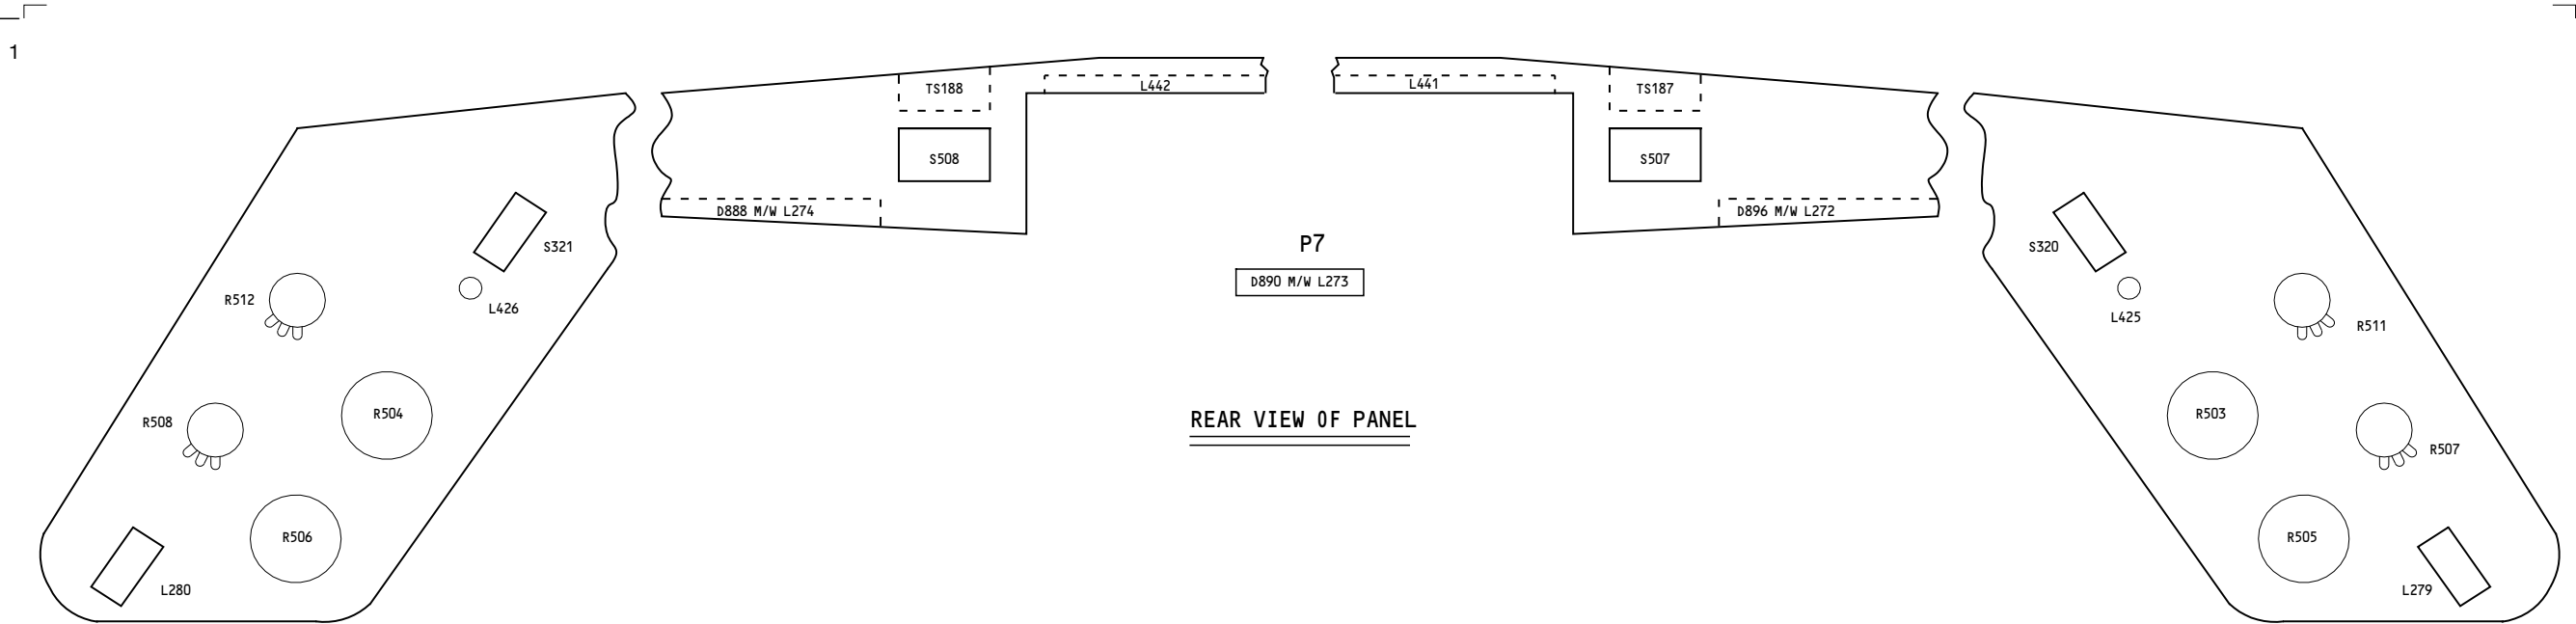

**REAR VIEW OF PANEL**

**NOTES:**  
FOR PANEL DISCONNECT BRACKETS AND  
CONNECTORS POSITIONS, SEE 91-04-XX

ALL	<b>P7 AND P55 PANELS GLARESHIELD</b>
	D280N032

**91-02-08**

Page 1

Jan 21/2005



**91-02-08**

Page 1


Jan 21/2005



 1

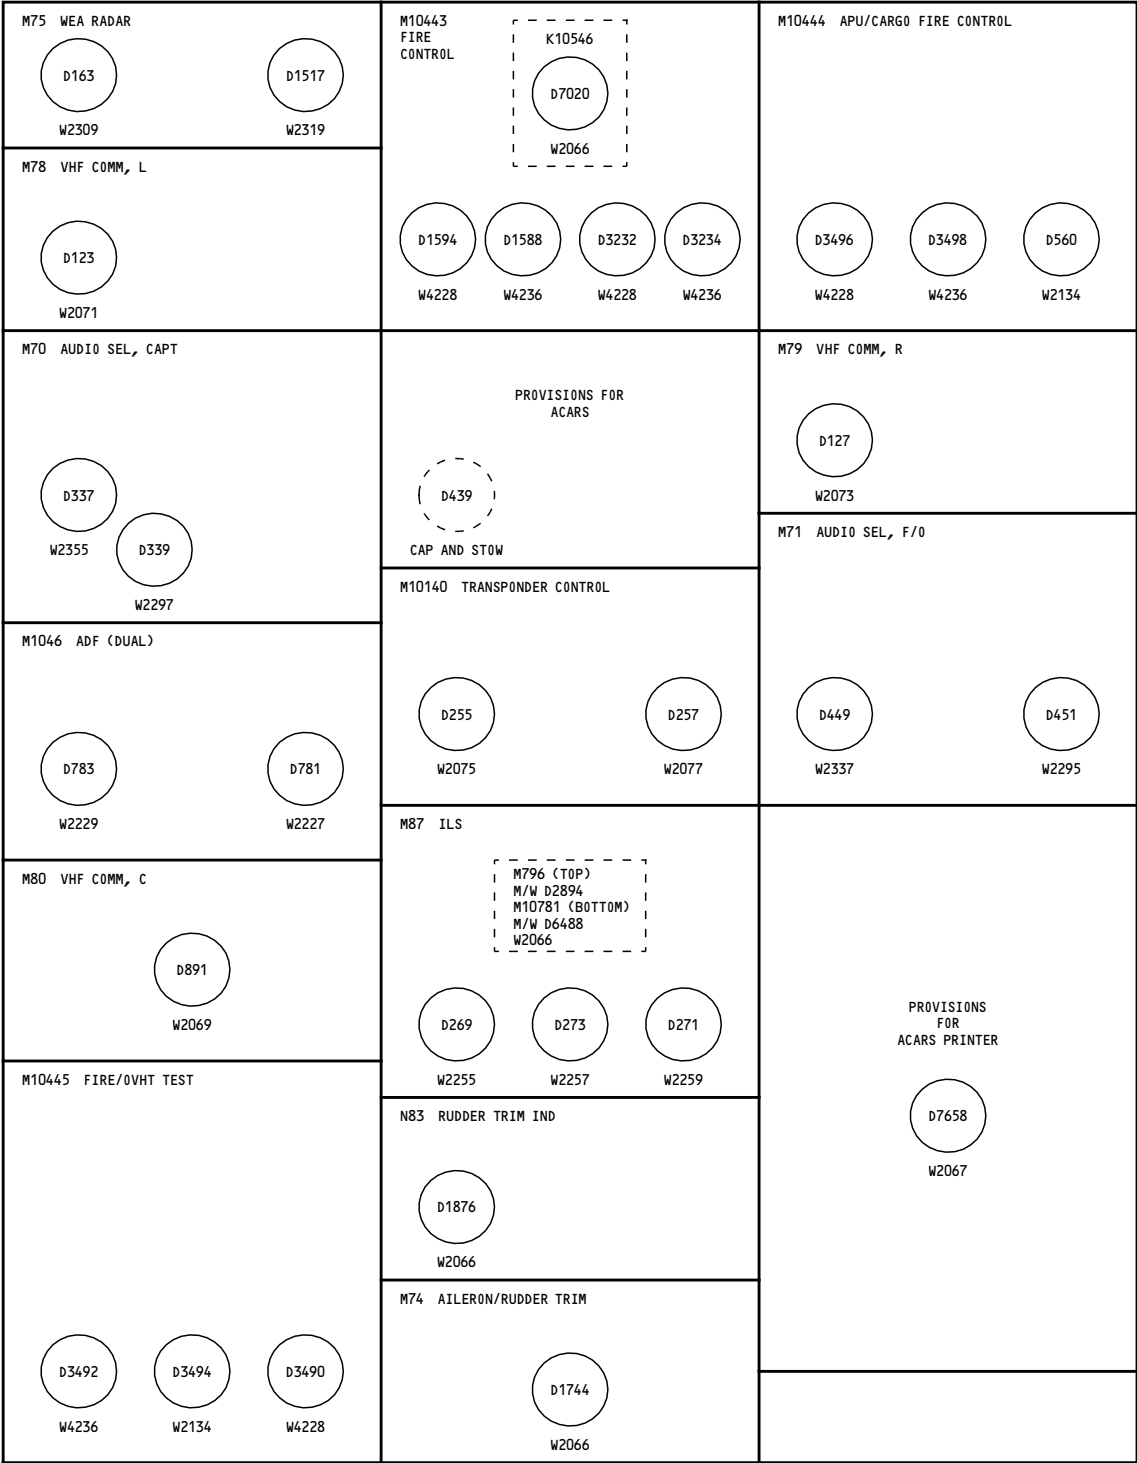

P8  
PLAN VIEW OF PANEL

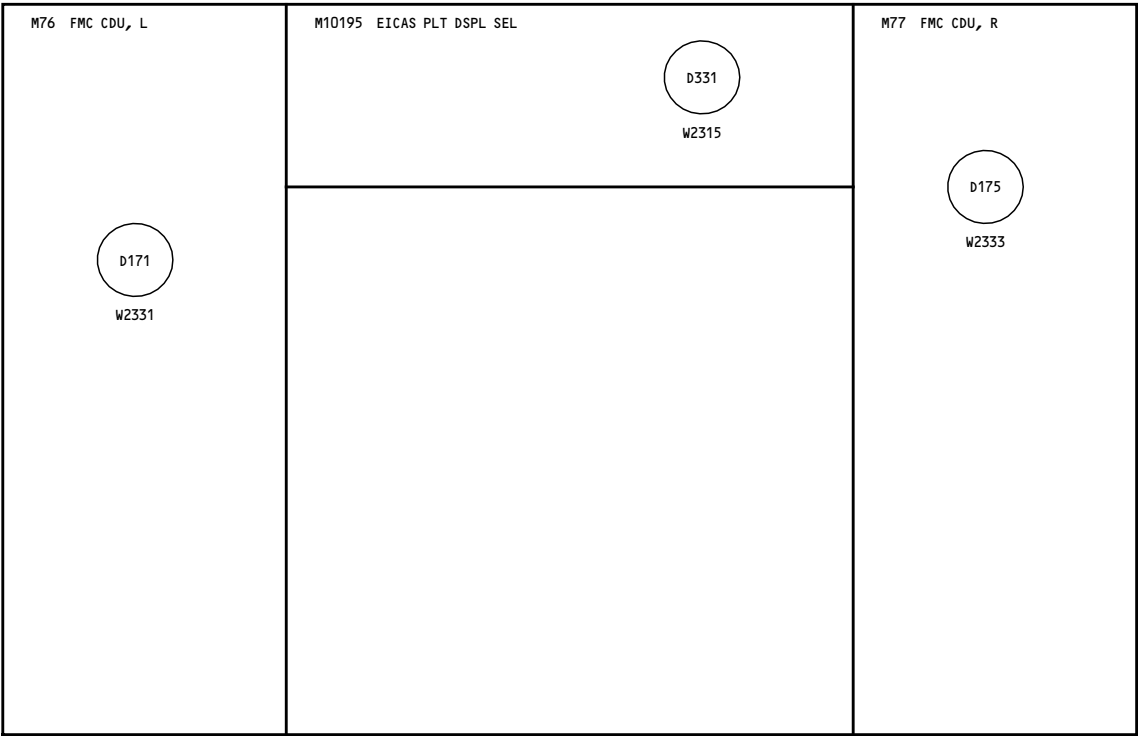

P9  
PLAN VIEW OF PANEL

**NOTES:** THIS IS A GENERIC DRAWING. SEE EQUIPMENT LIST FOR ITEMS INSTALLED.  
  
FOR PANEL DISCONNECT BRACKETS AND CONNECTOR POSITIONS, SEE 91-04-XX.  
  
M794 AND M795 LOCATED BELOW FLOOR OF CONTROL COLUMN HOUSING.

001-099

**P8 AND P9 PANELS  
AFT AND FORWARD  
CONTROL STANDS**

**91-02-09**

Page 1



D280N032

Jan 21/2005


**91-02-09**

Page 1

Jan 21/2005

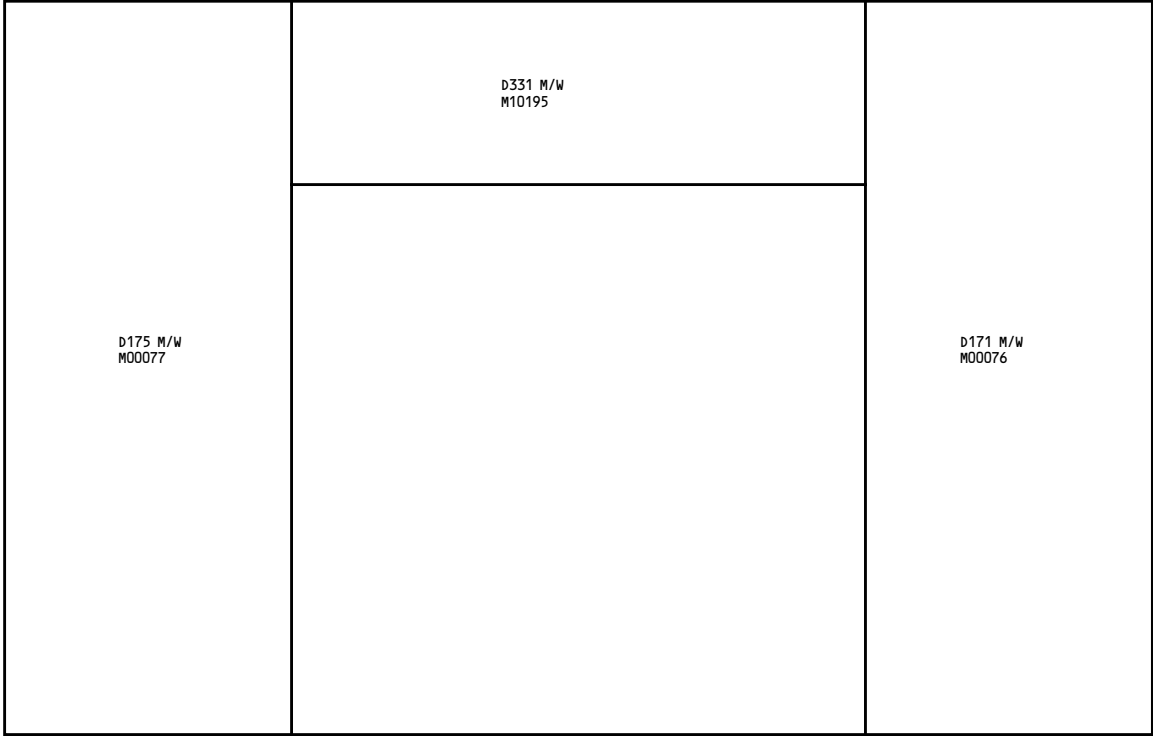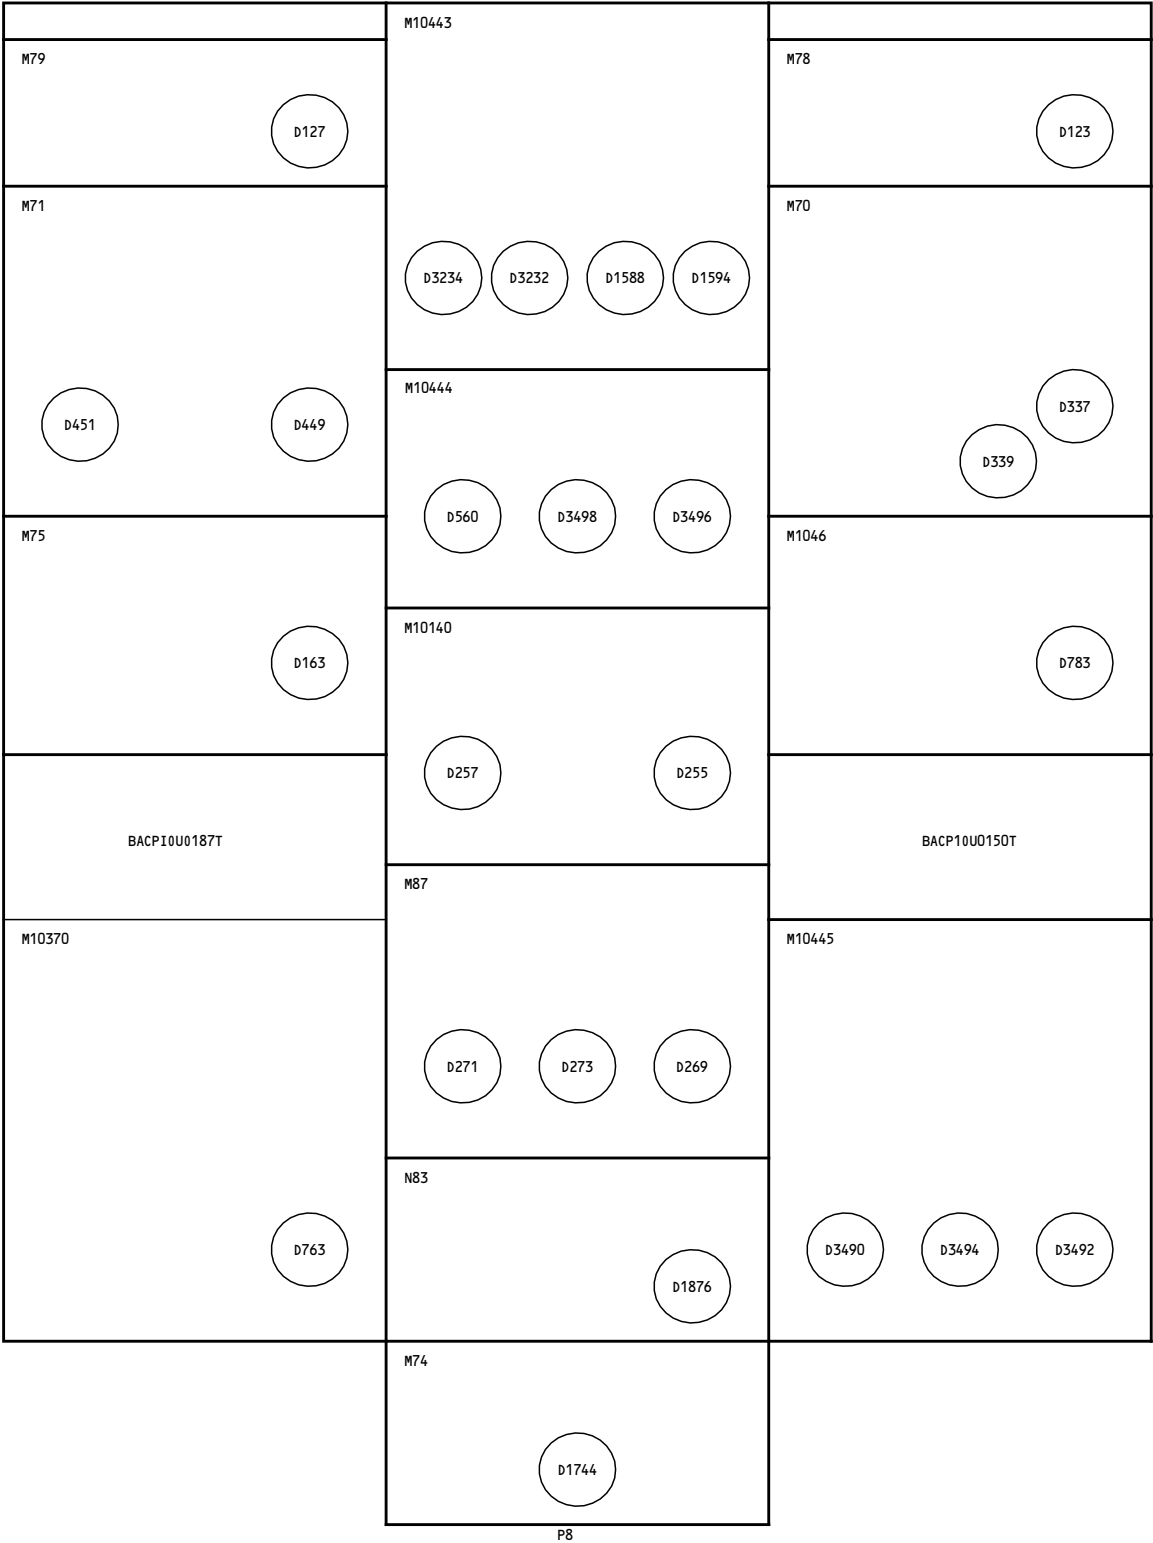

P9

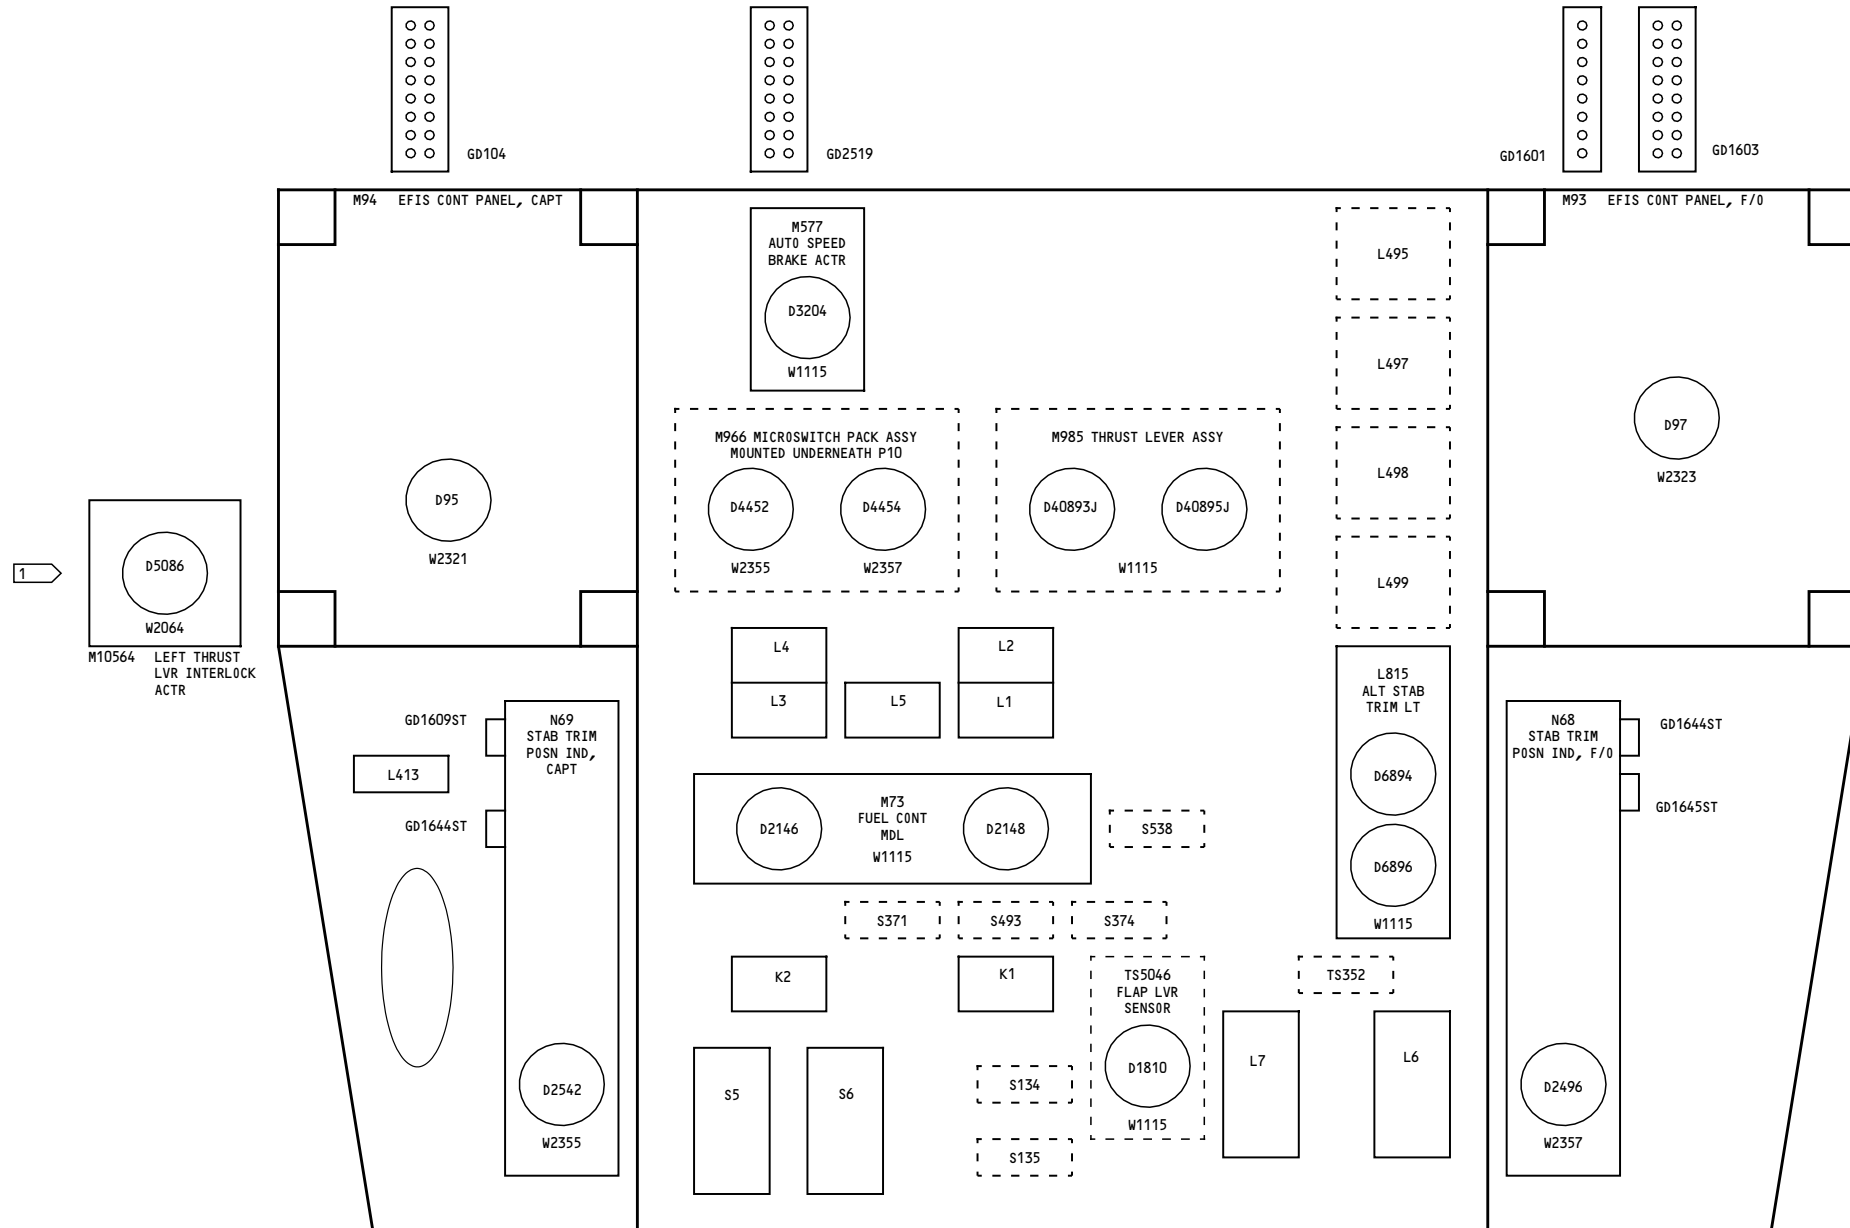

PLAN VIEW OF PANEL

**NOTES:**

1 M10564 MOUNTED UNDERNEATH FLOOR BEAM OF P10 PANEL

FOR PANEL DISCONNECT BRACKETS AND CONNECTOR POSITIONS, SEE 91-04-XX

THIS IS A GENERIC DRAWING. SEE EQUIPMENT LIST FOR ITEMS INSTALLED.

001-099

**P10 PANEL QUADRANT  
CONTROL STAND**

D280N032

**91-02-10**


Page 1

Jan 21/2005

**91-02-10**

Page 1

Jan 21/2005

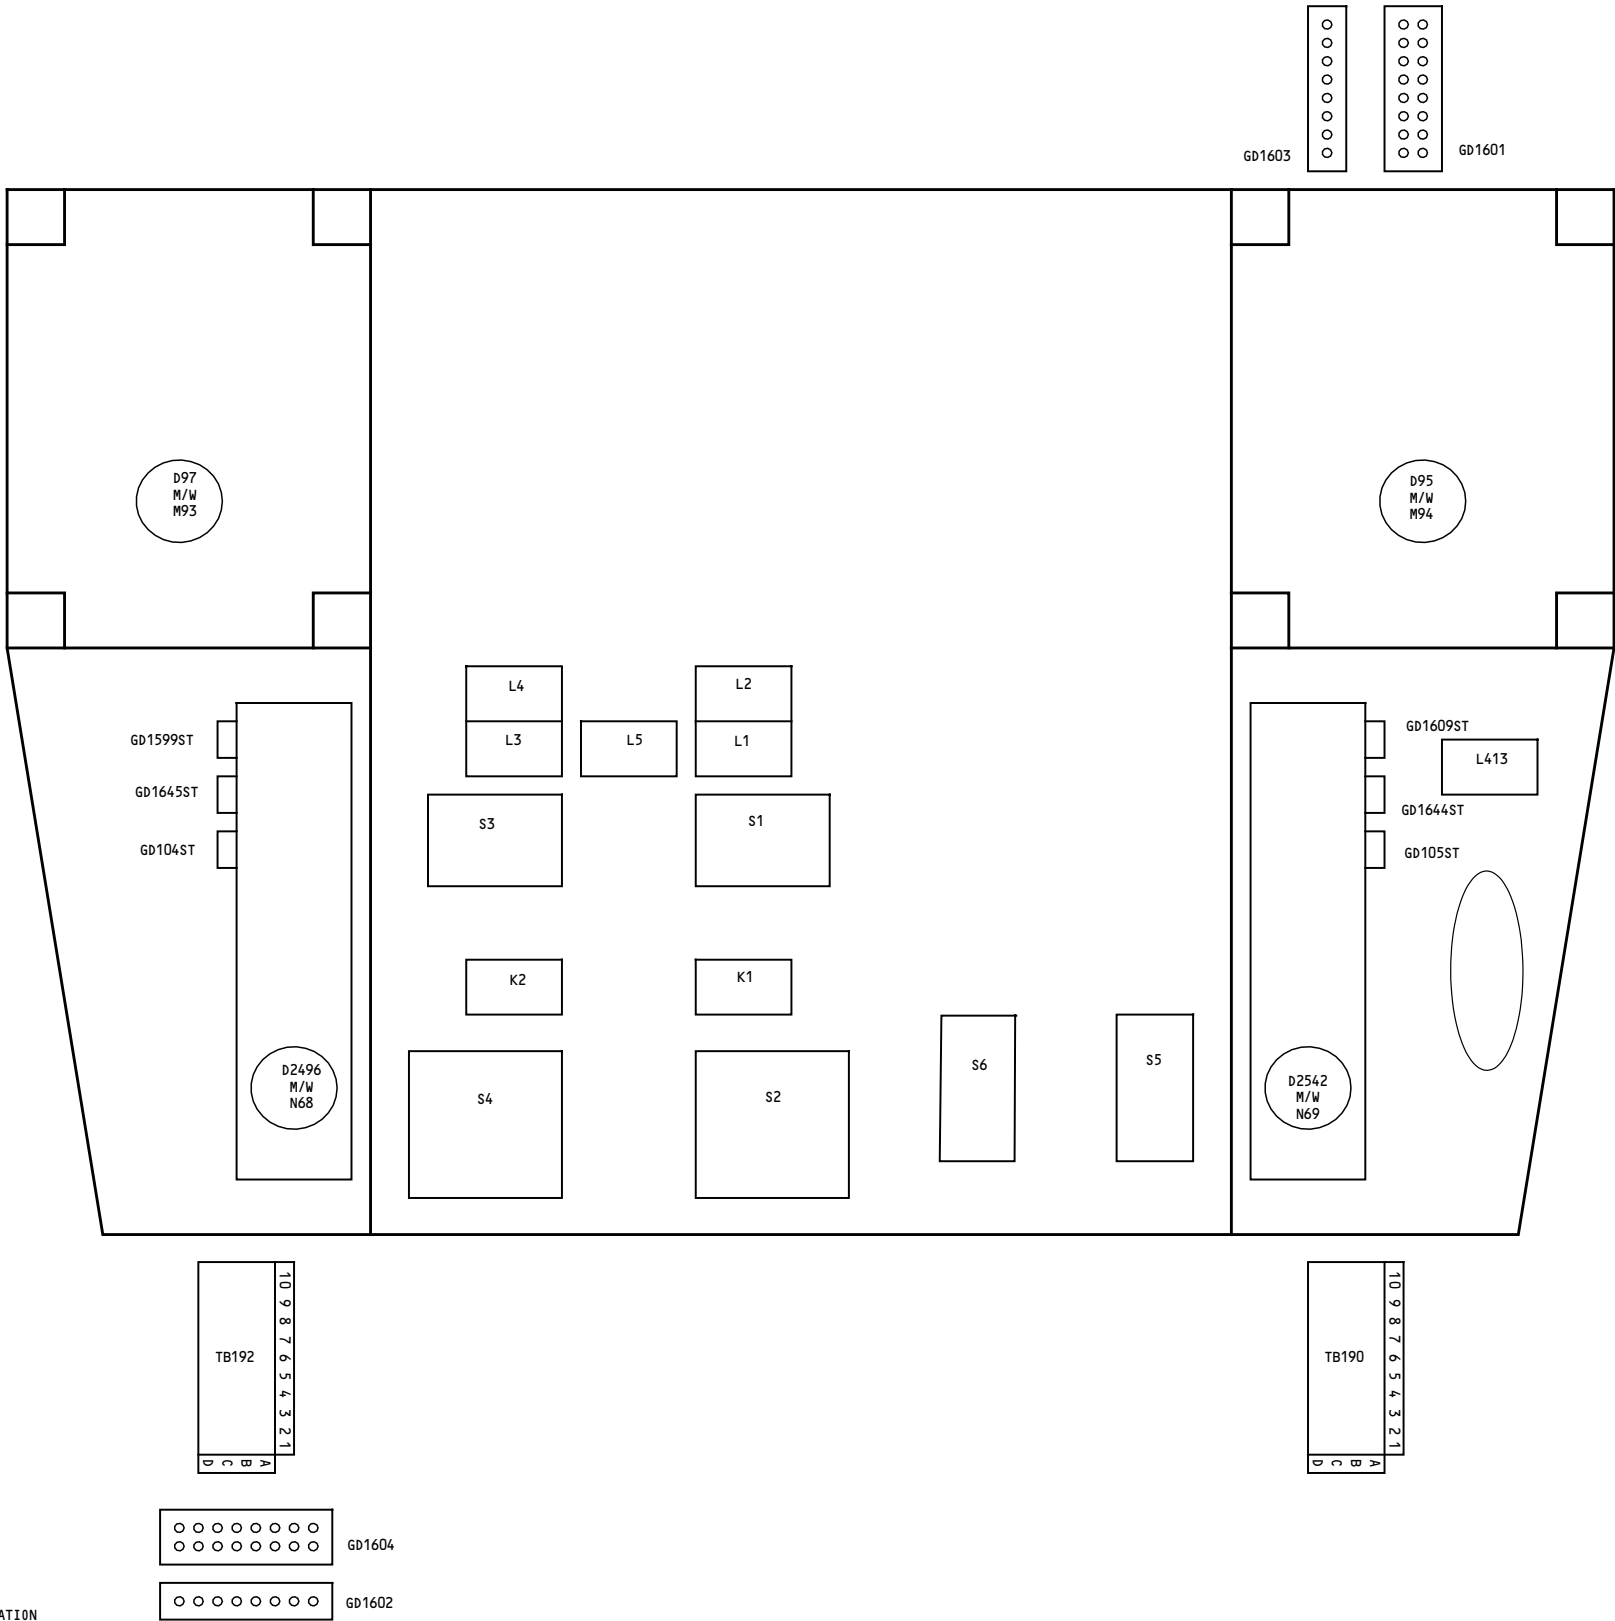

**NOTES:** REFER TO 91-04-00 FOR DISCONNECT PANEL INFORMATION

115-199

**P10 PANEL QUADRANT  
CONTROL STAND**

D280N032

**91-02-10**

Page 2


Jan 21/2005

**91-02-10**

Page 2

Jan 21/2005



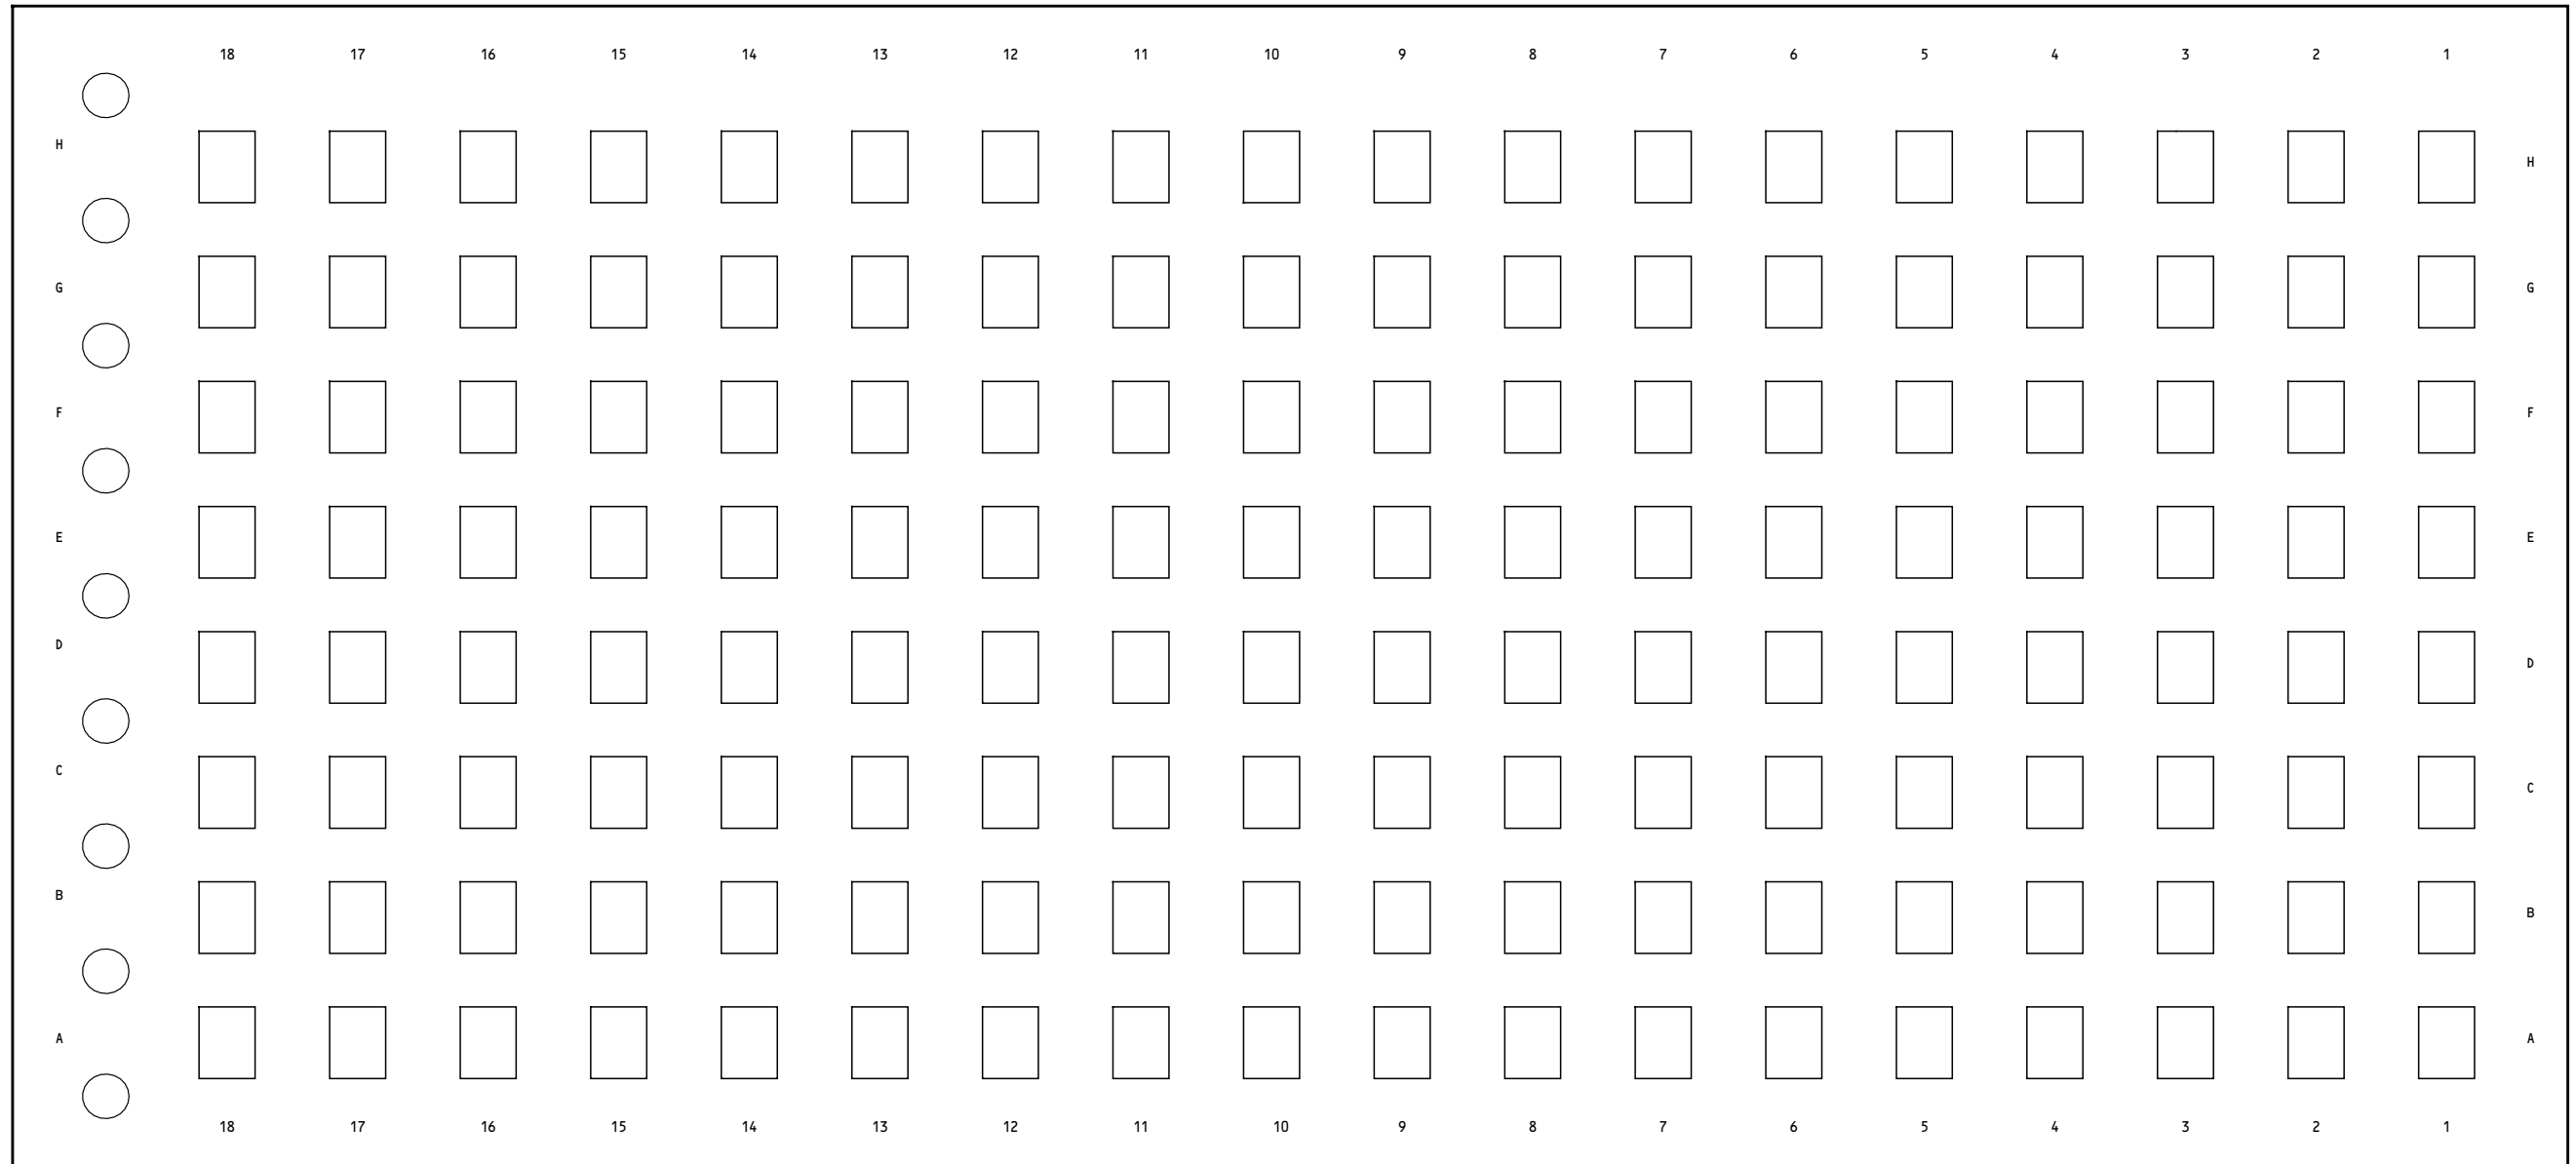

**NOTES:**

REFER TO 91-02-00 FOR CIRCUIT BREAKER INFORMATION

ALL	<b>P11-1 PANEL OVERHEAD CIRCUIT BREAKER</b>  D280N032
-----	-----------------------------------------------------------------

**91-02-11**


Page 1

Jan 21/2005

**91-02-11**

Page 1

Jan 21/2005

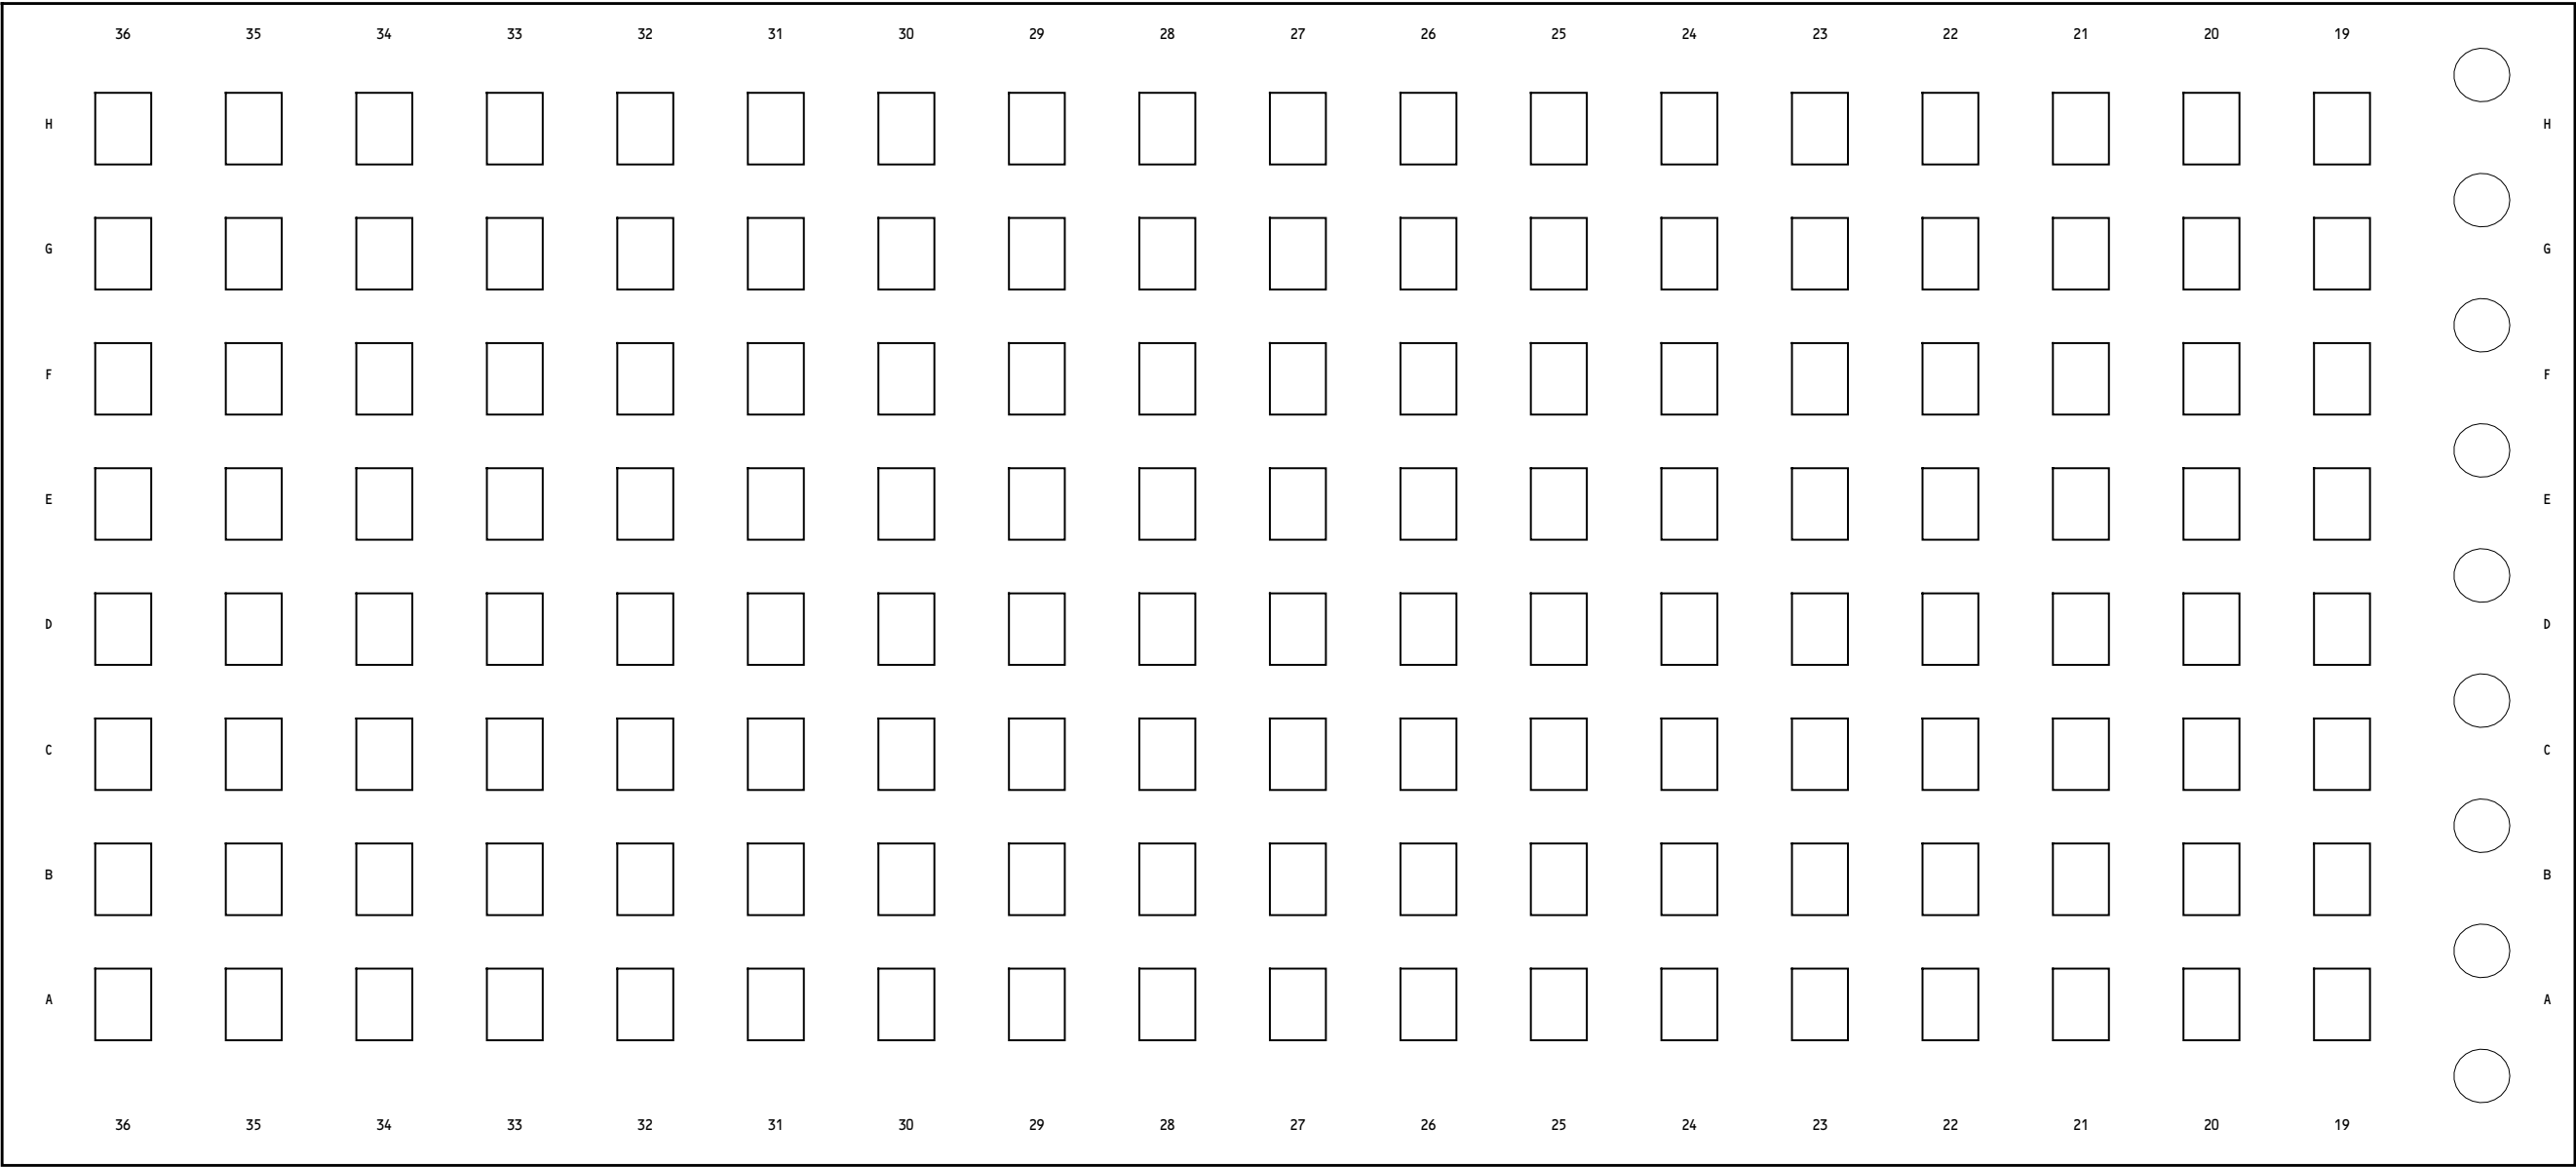


**NOTES**  
REFER TO 91-02-00 FOR CIRCUIT BREAKER INFORMATION

ALL	<b>P11-2 PANEL OVERHEAD CIRCUIT BREAKER</b>
	D280N032

**91-02-12**  
Page 1  
Jan 21/2005

**91-02-12**  
Page 1  
Jan 21/2005

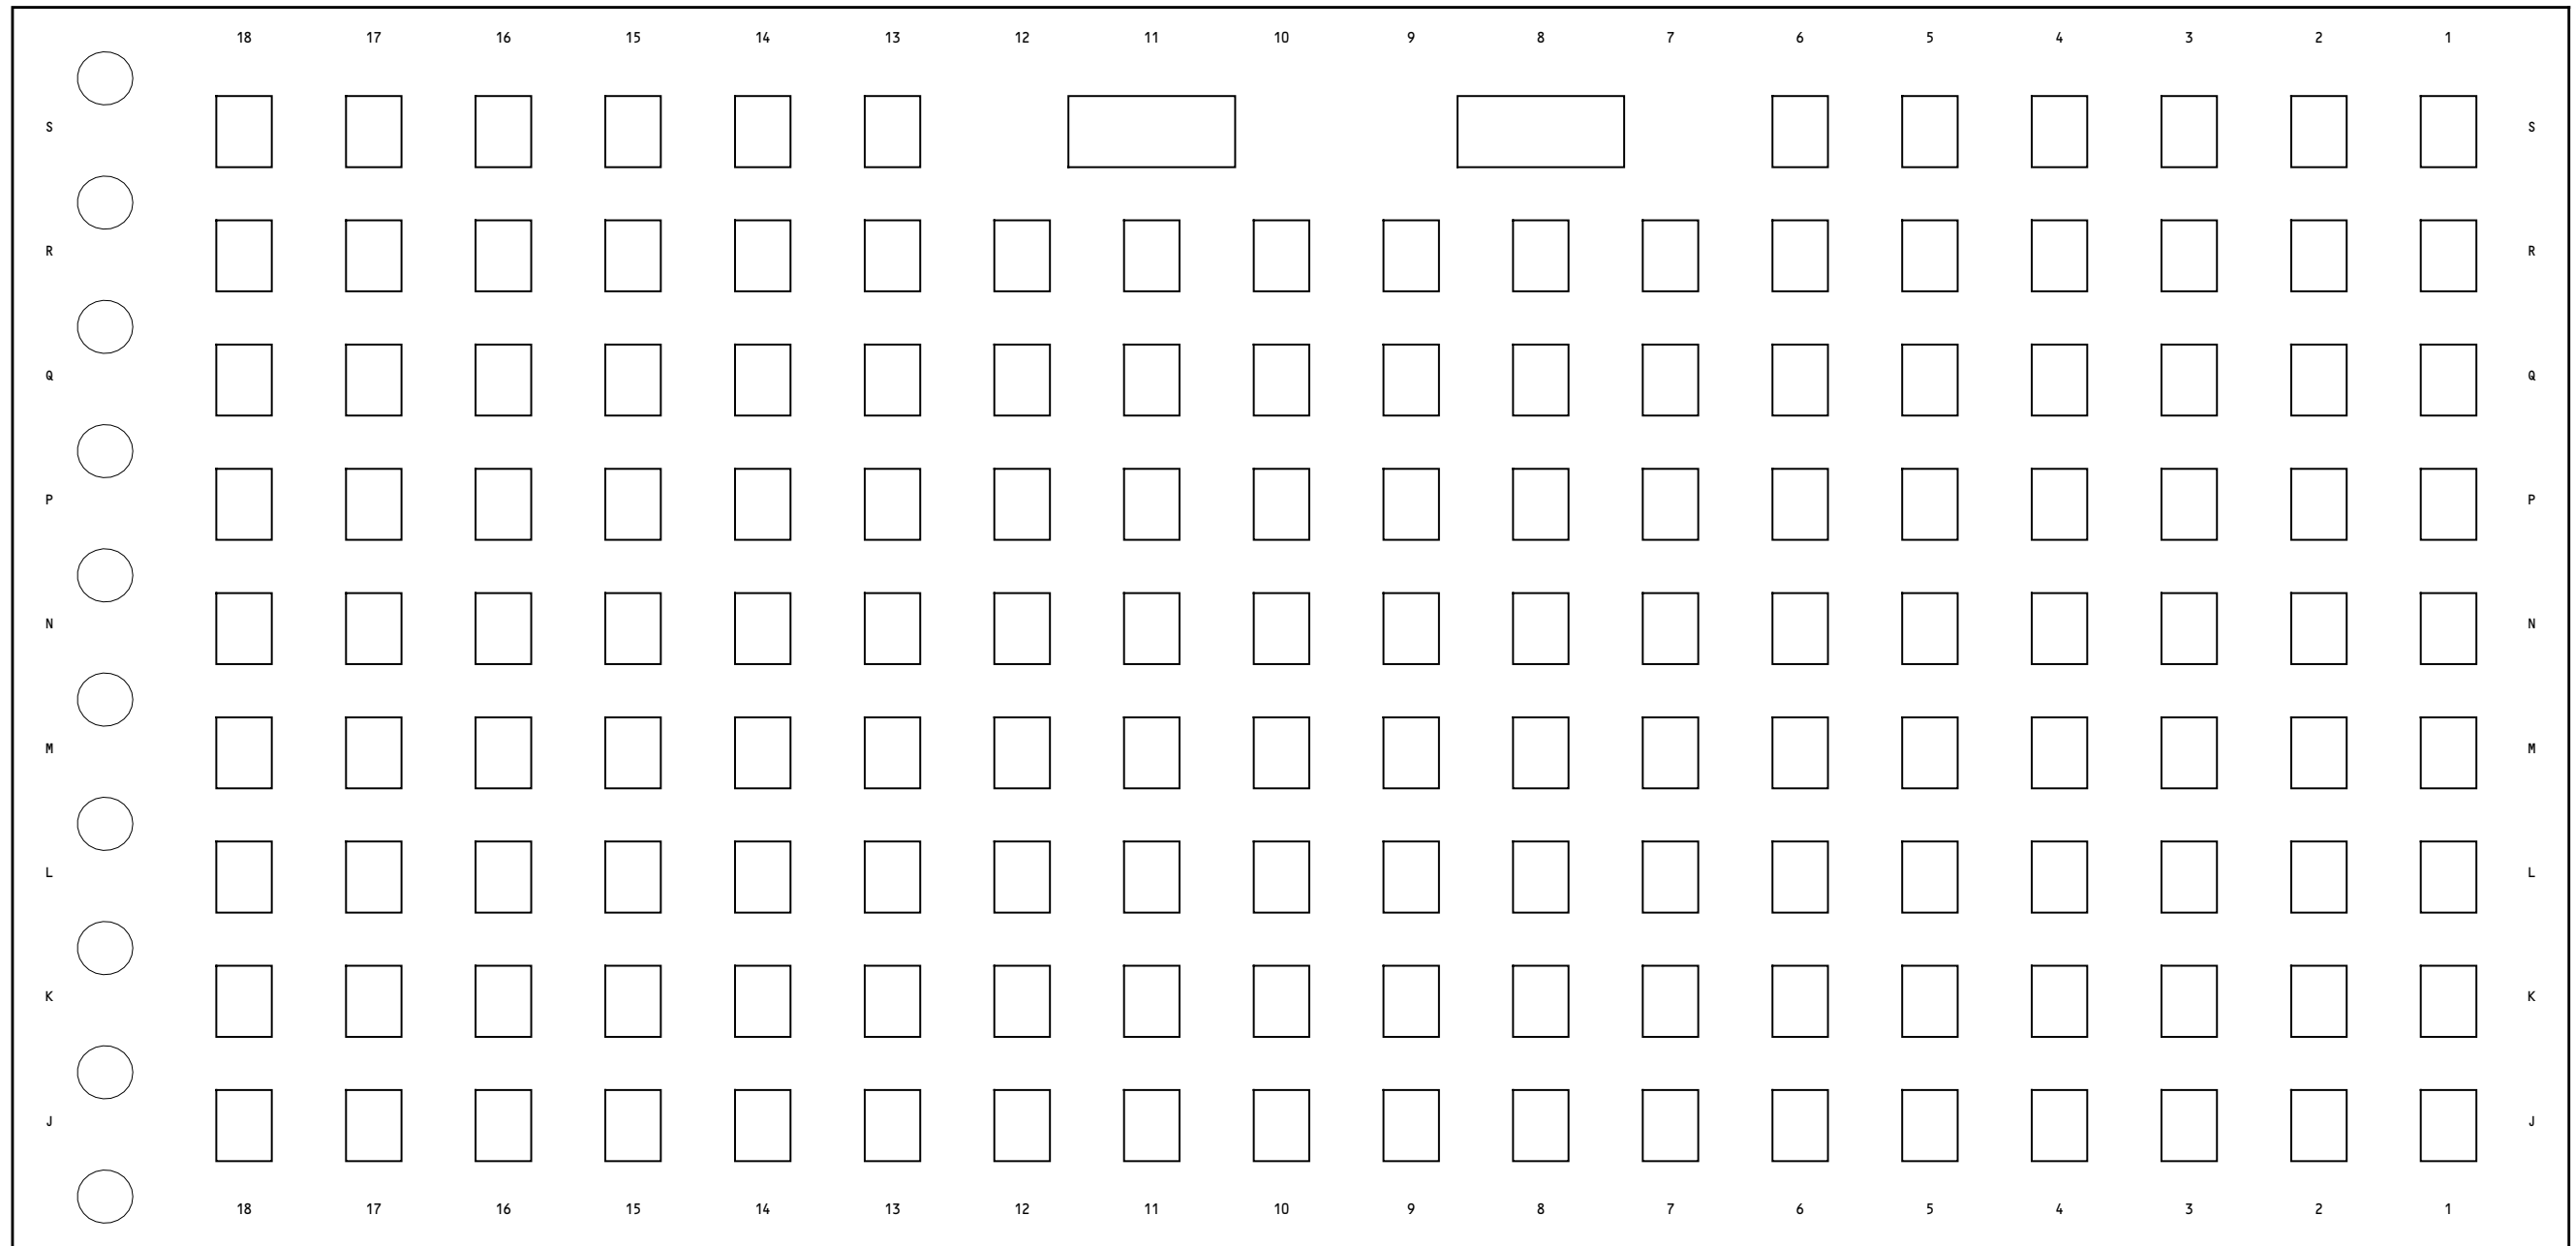

**NOTES:**  
REFER TO 91-02-00 FOR CIRCUIT BREAKER INFORMATION

ALL

**P11-3 PANEL OVERHEAD  
CIRCUIT BREAKER**

D280N032

**91-02-13**


Page 1

Jan 21/2005

**91-02-13**

Page 1

Jan 21/2005

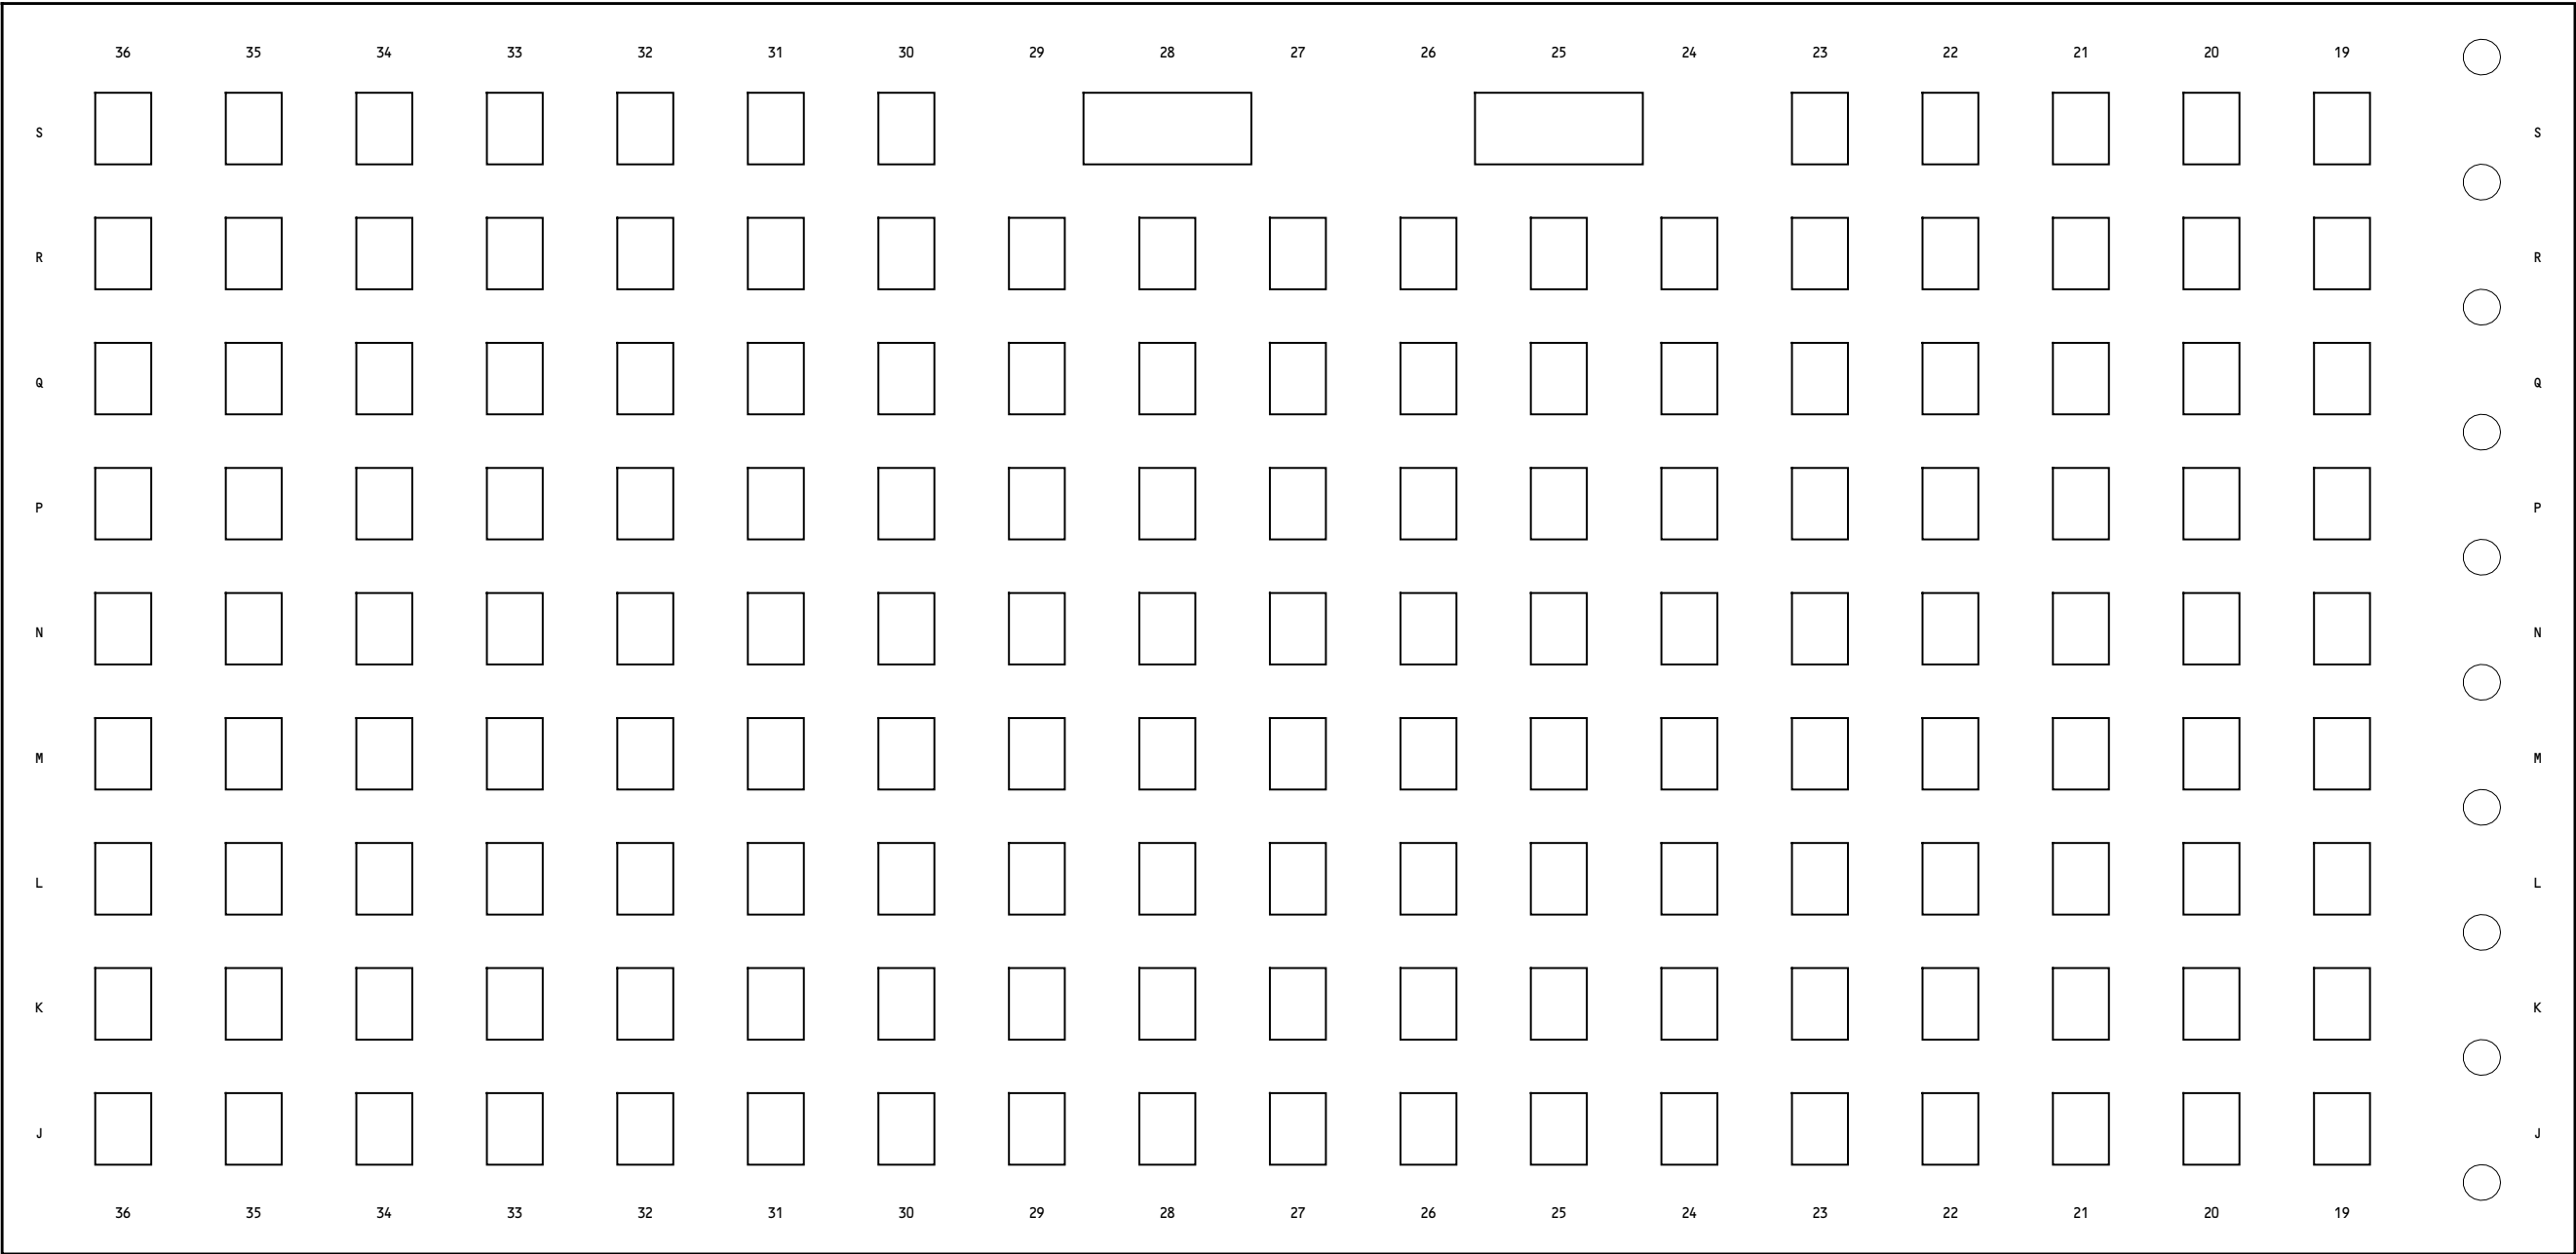

NOTES:  
REFER TO 91-02-00 FOR CIRCUIT BREAKER INFORMATION


ALL

P11-4 PANEL OVERHEAD  
CIRCUIT BREAKER

D280N032


91-02-14  
Page 1  
Jan 21/2005

91-02-14  
Page 1  
Jan 21/2005

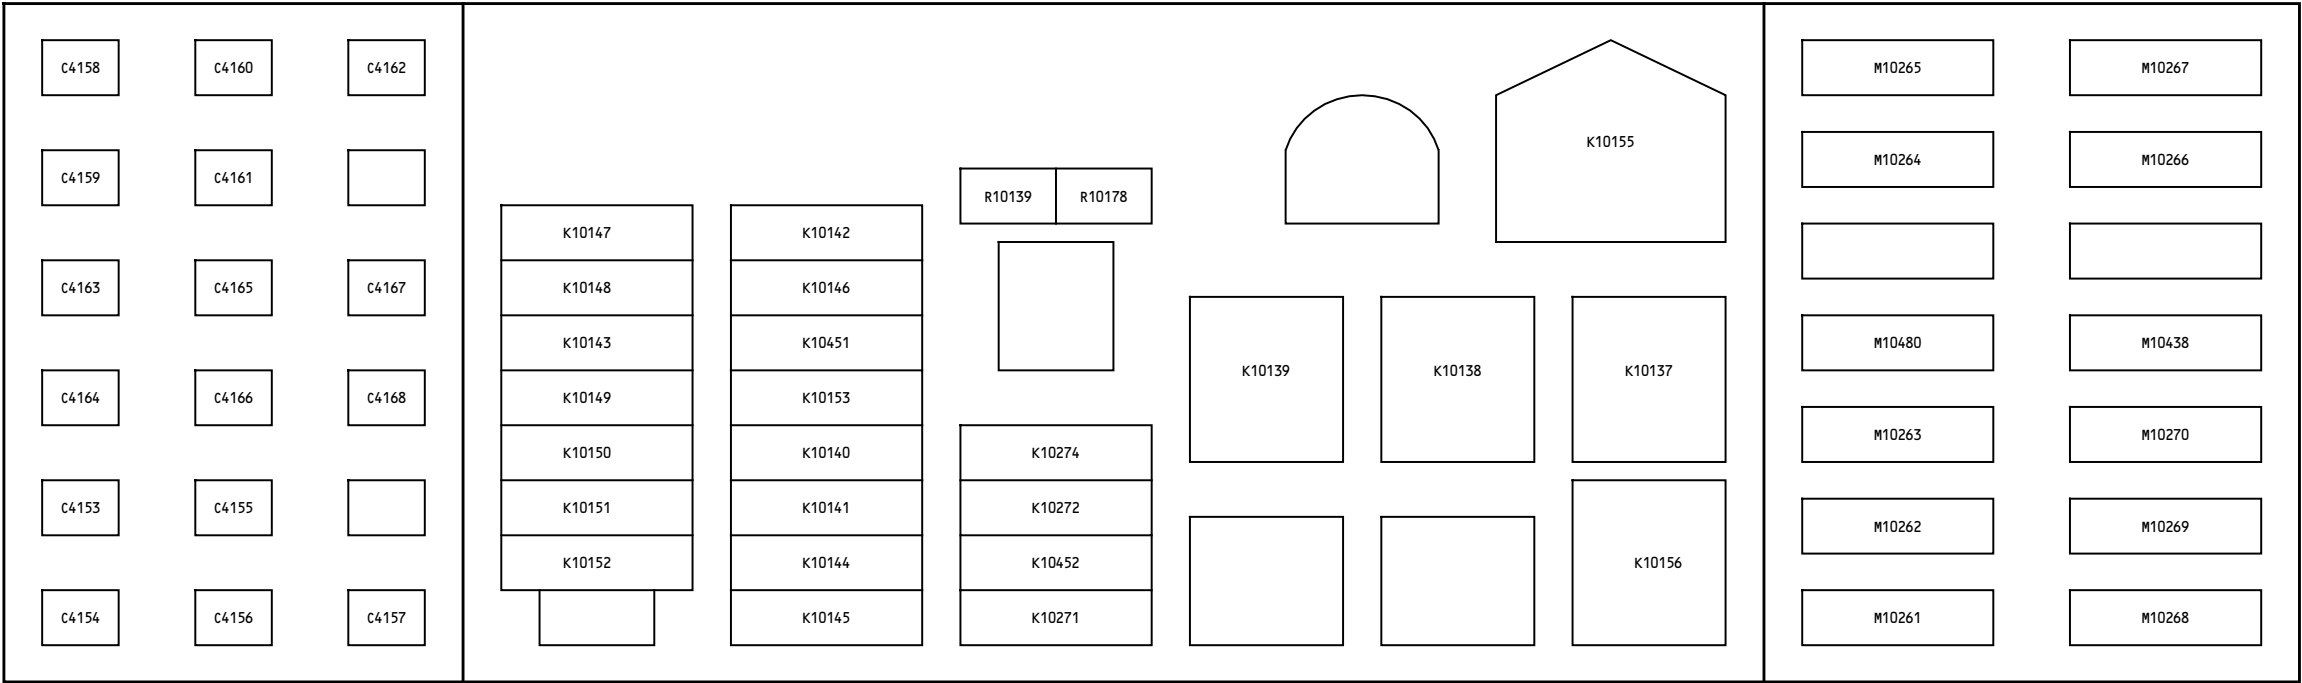

**NOTES:**  
REFER TO 91-04-00 FOR DISCONNECT PANEL INFORMATION

ALL	<b>P26 PANEL LIGHTING EQUIPMENT</b>
	D280N032

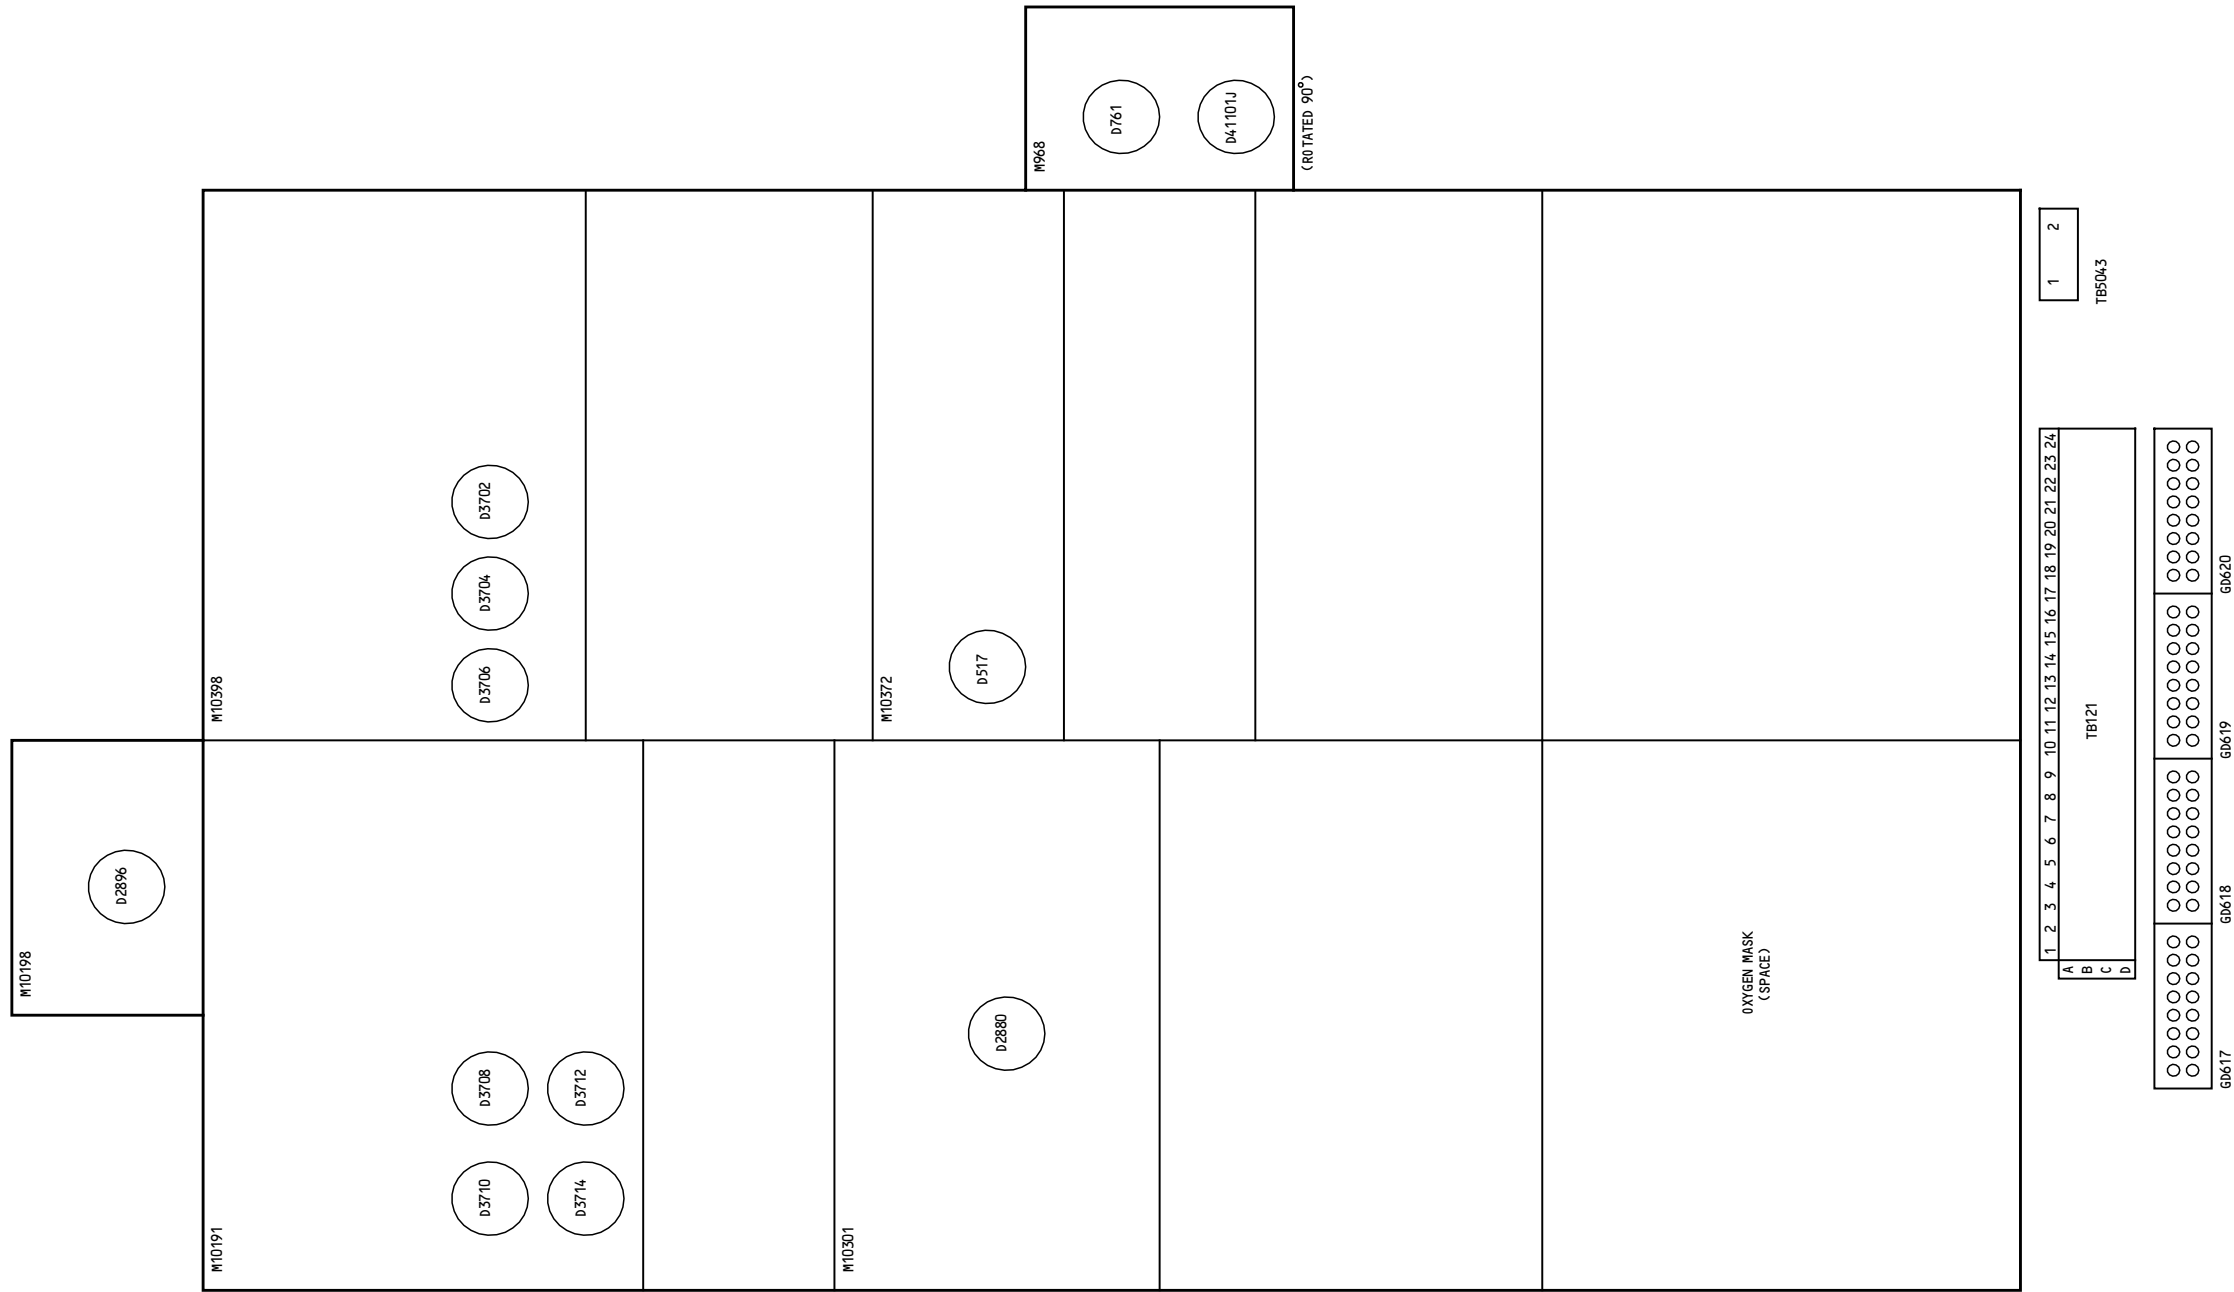

NOTES: REFER TO 91-04-00 FOR DISCONNECT PANEL INFORMATION

001-099

P61 PANEL RIGHT SIDE

D280N032

91-02-16


Page 1

Jan 21/2005

91-02-16


Page 1

Jan 21/2005

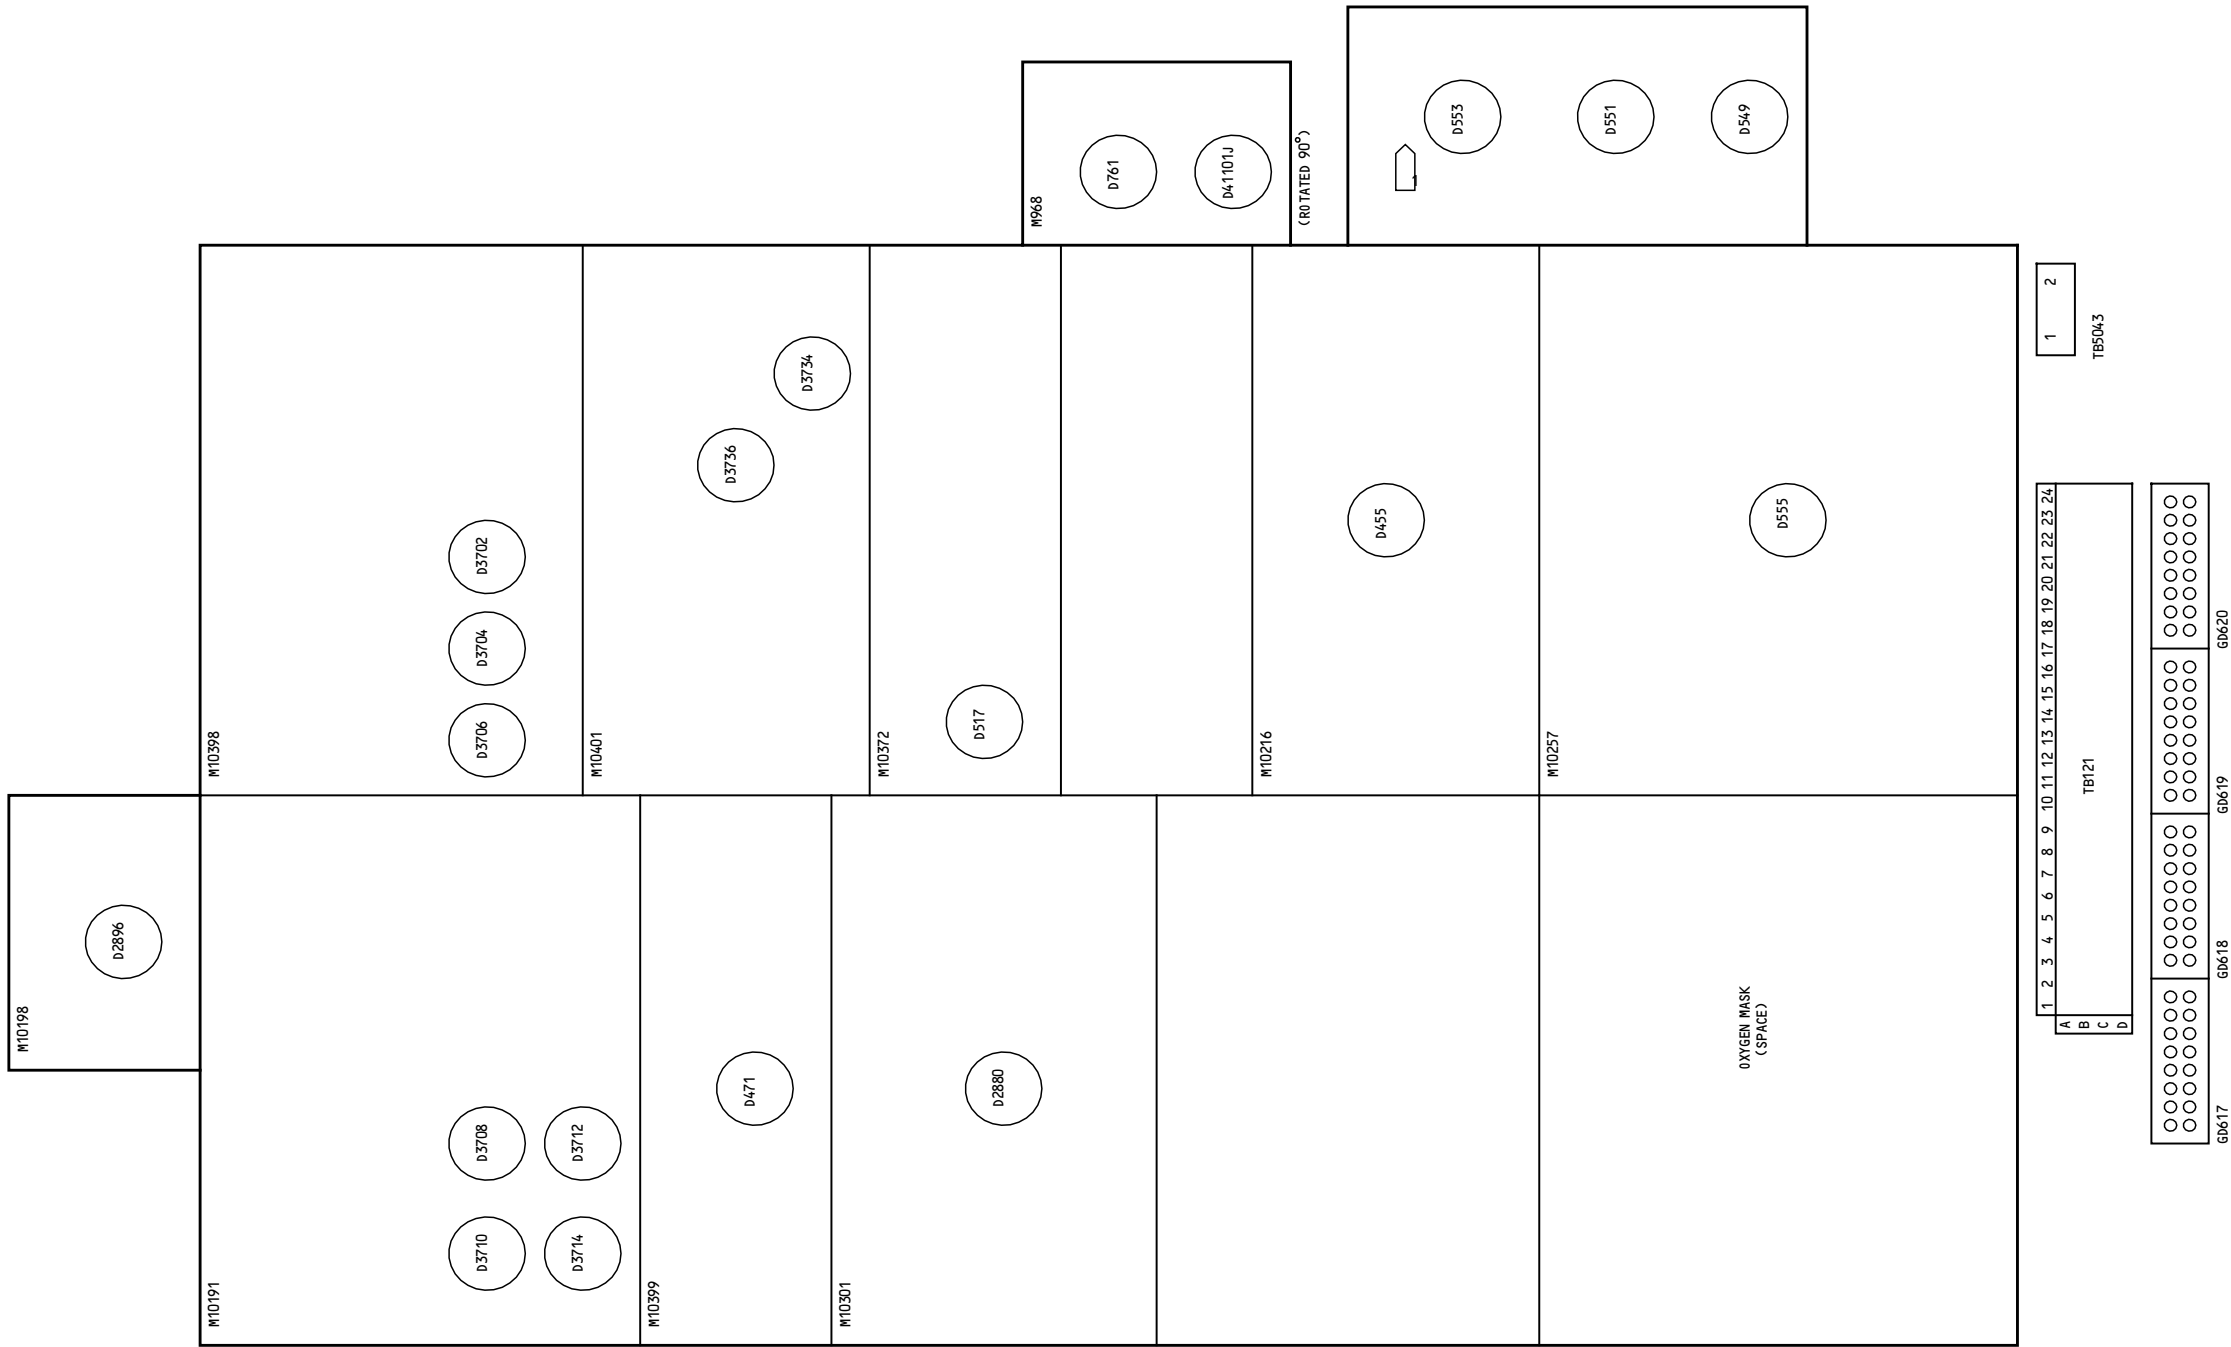

NOTES: REFER TO 91-04-00 FOR DISCONNECT PANEL INFORMATION

1 B10060 M/W D553

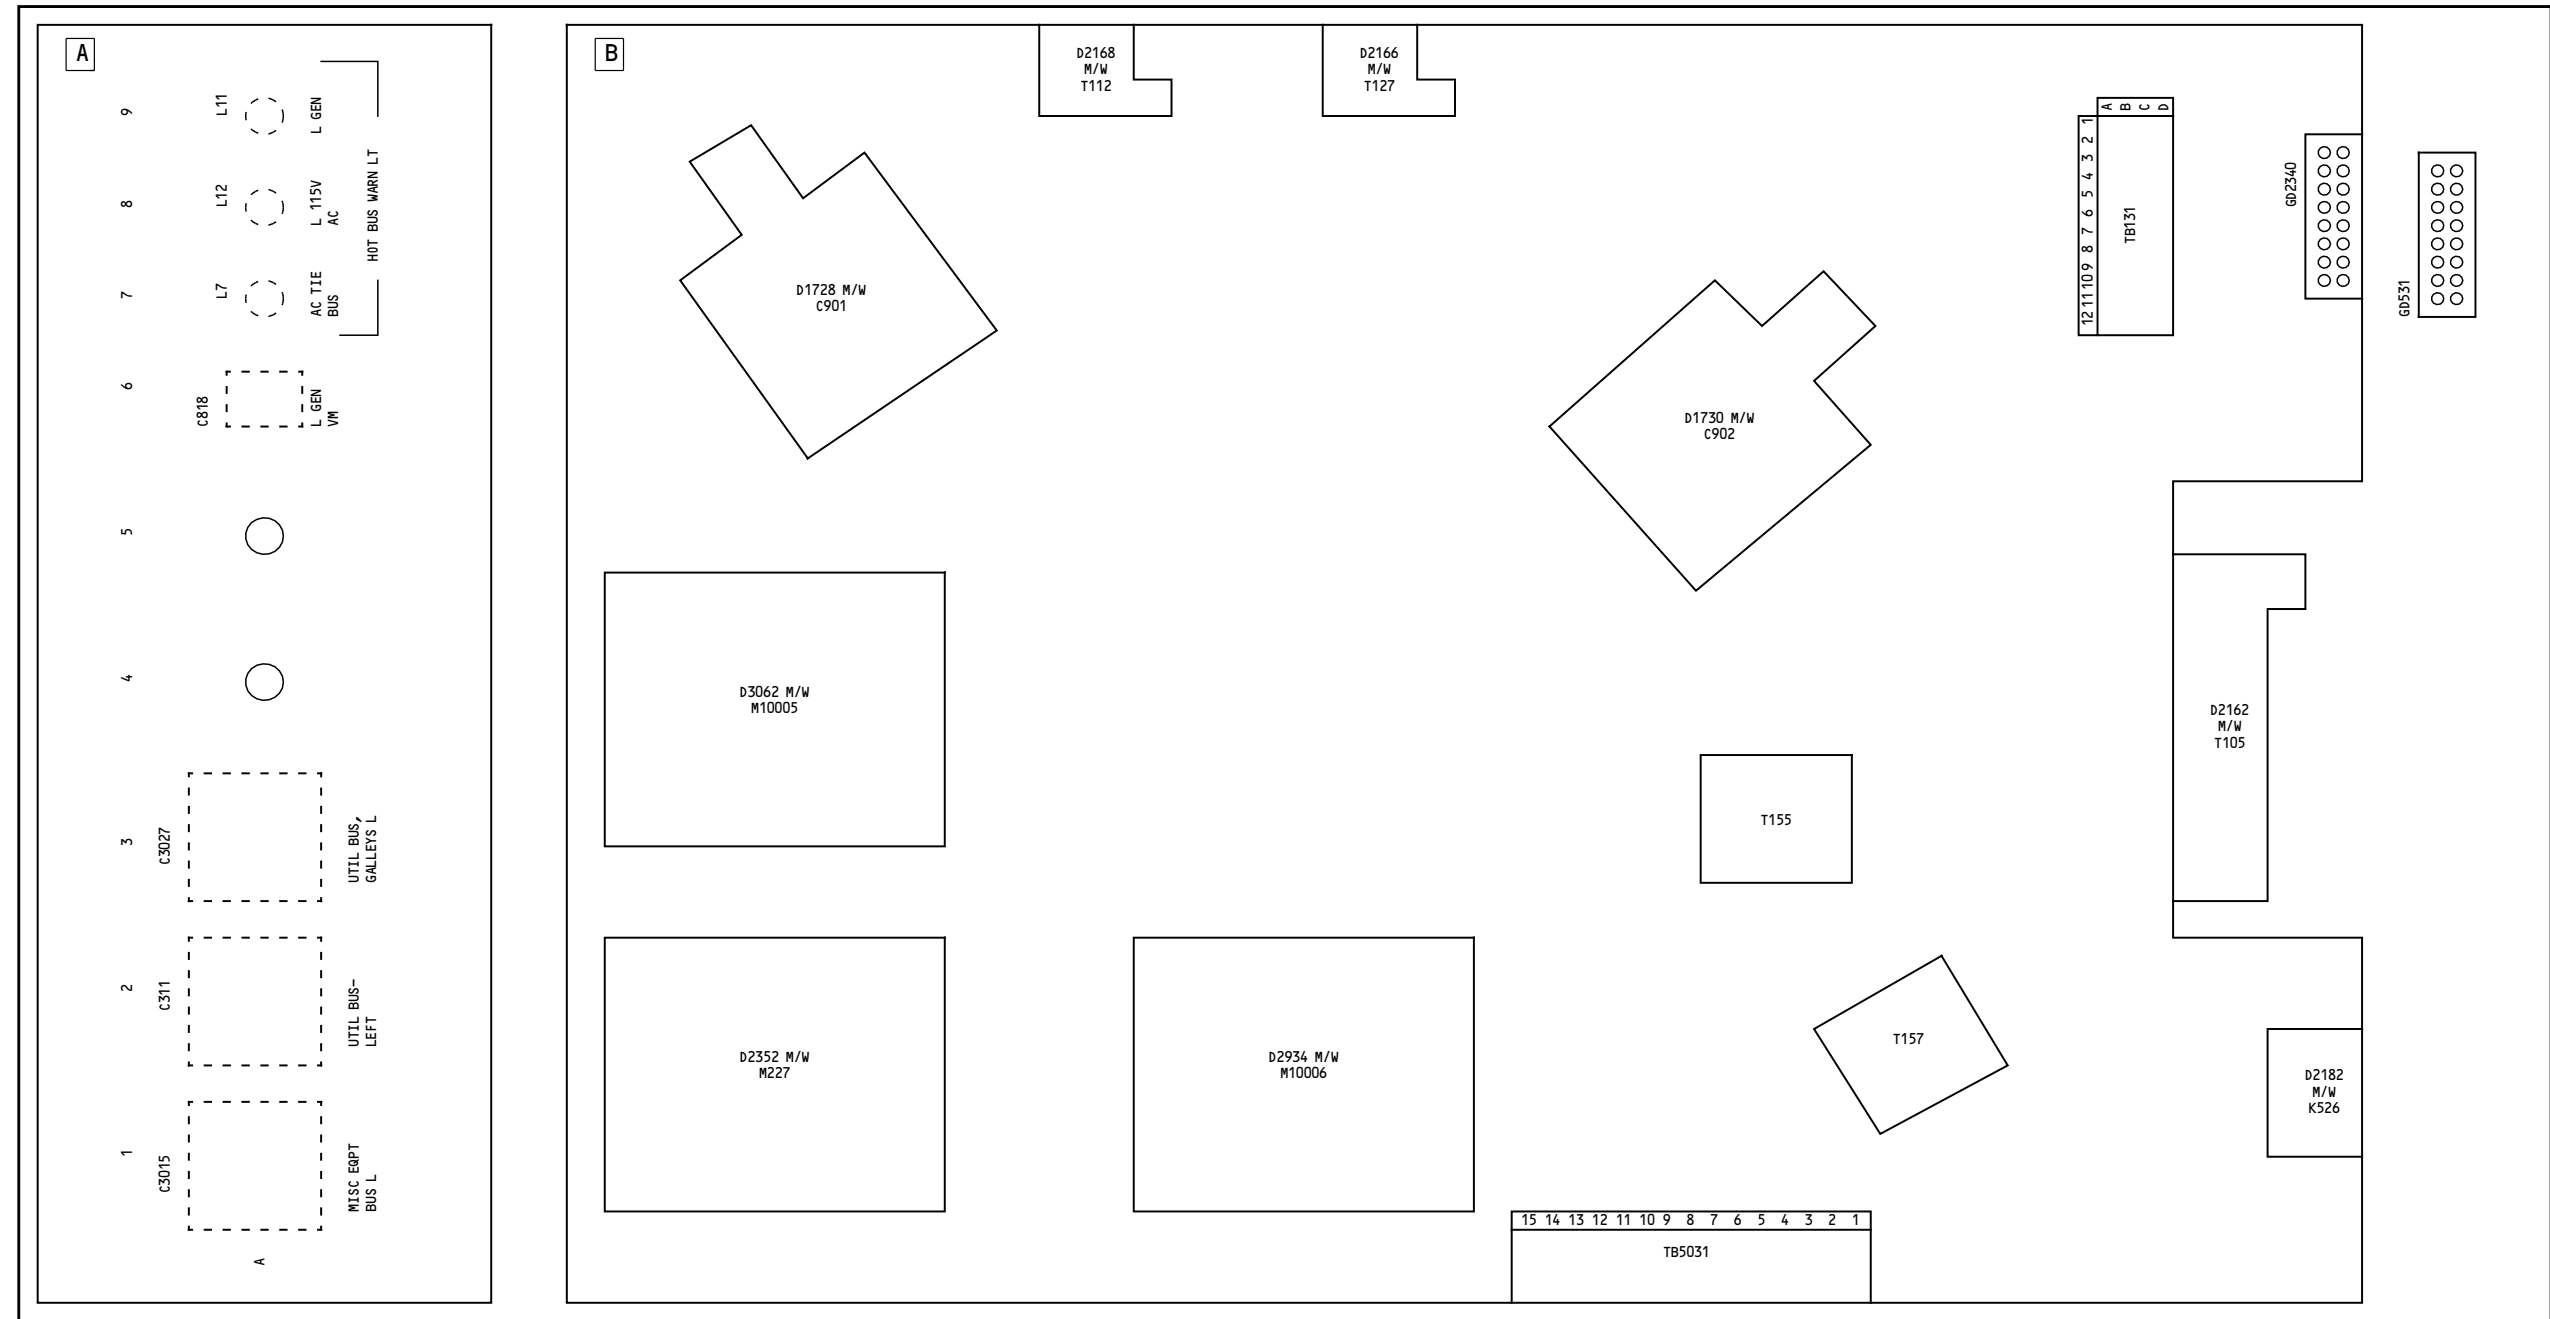

**NOTES:** REFER TO 91-04-00 FOR DISCONNECT PANEL INFORMATION

ALL

**P31 PANEL GENERATOR  
SHIELD - LEFT**

D280N032

**91-02-17**

Page 1


Jan 21/2005

**91-02-17**

Page 1

Jan 21/2005



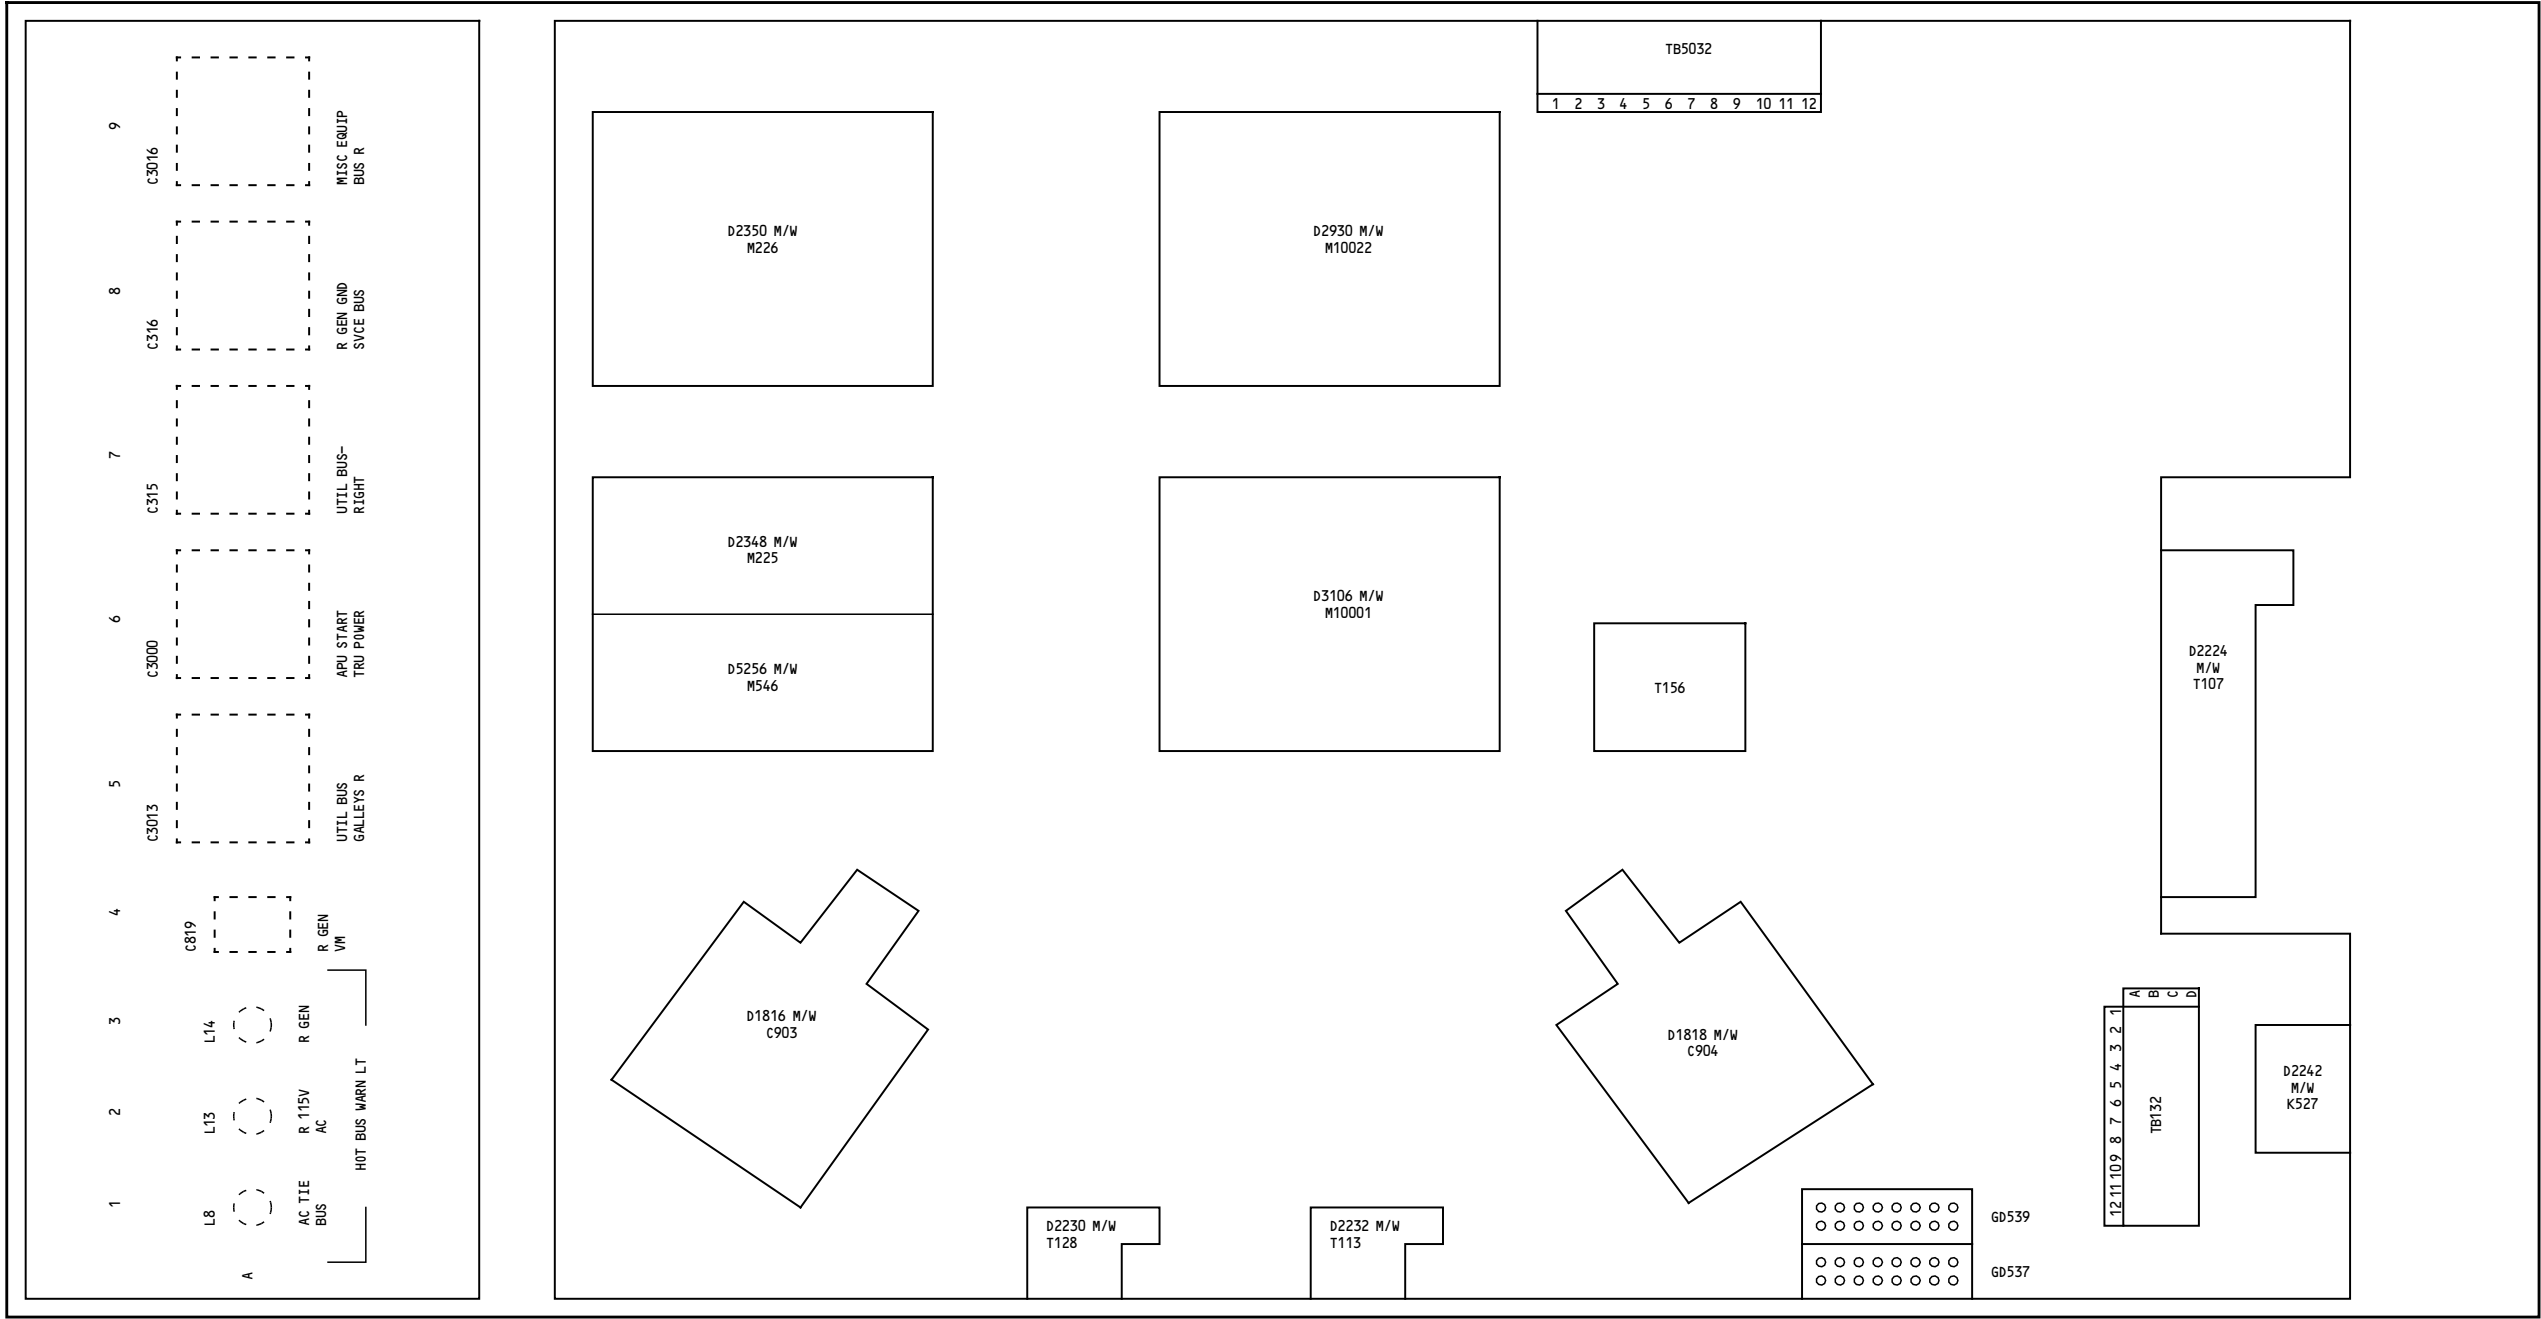

NOTES: REFER TO 91-04-00 FOR DISCONNECT PANEL INFORMATION

001-099

**P32 PANEL GENERATOR  
SHIELD - RIGHT**

D280N032

**91-02-18**


Page 1

Jan 21/2005

**91-02-18**

Page 1

Jan 21/2005

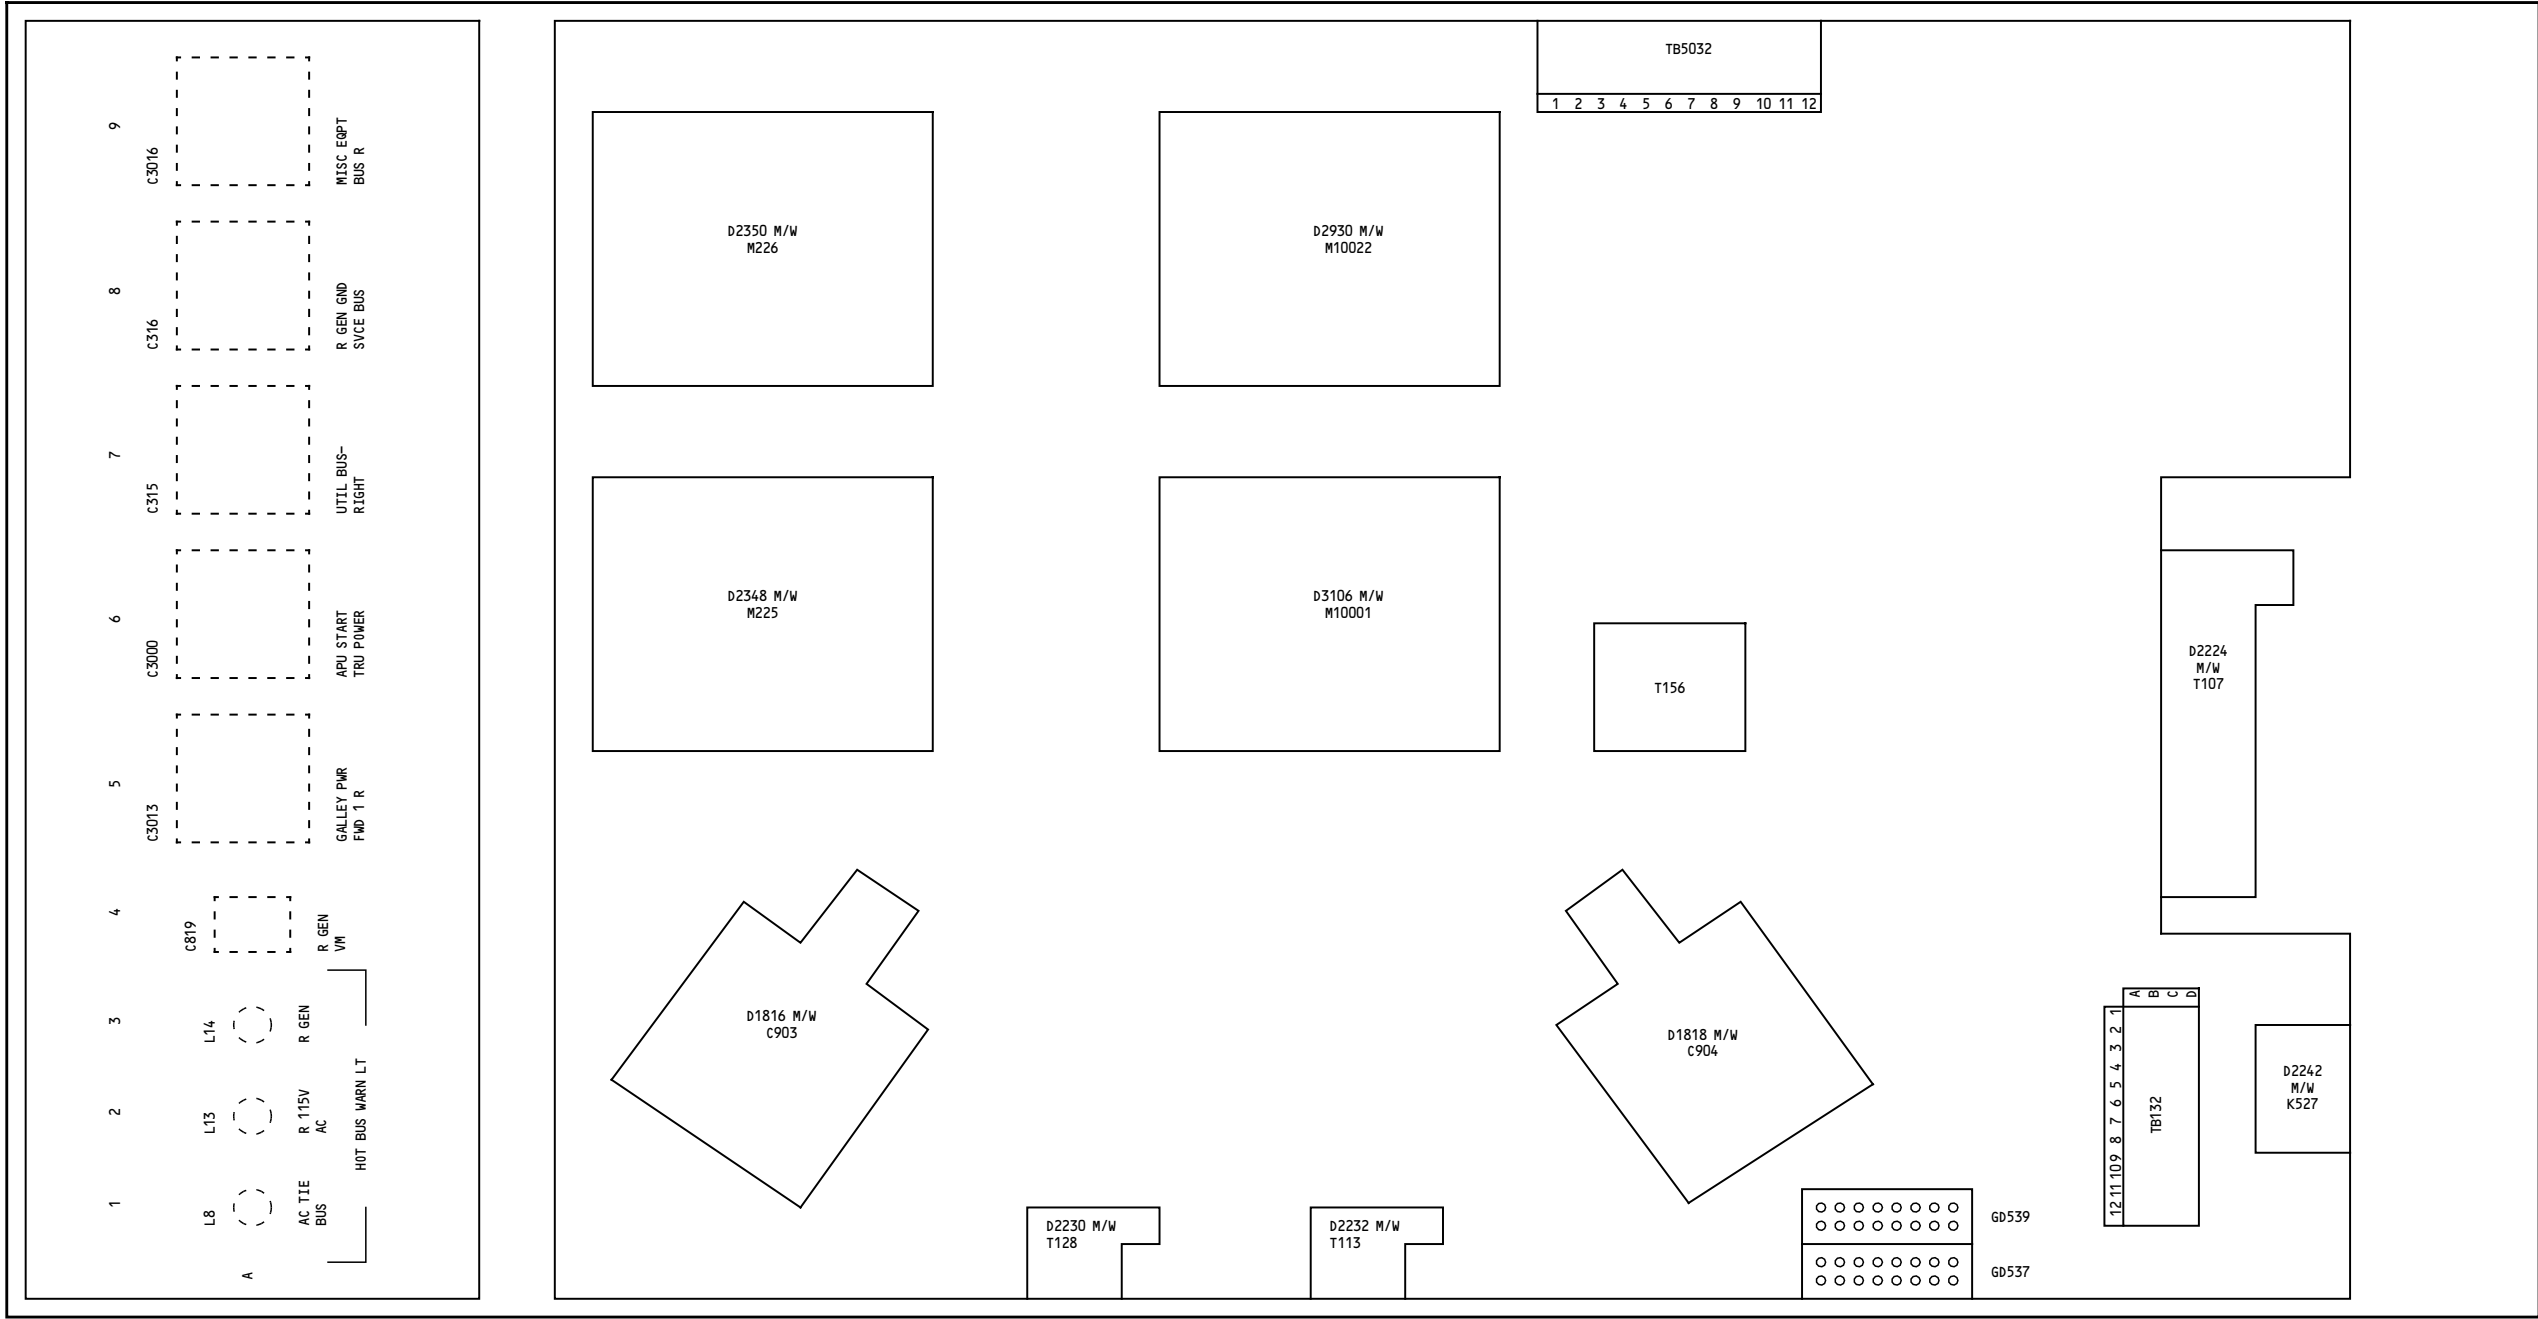

NOTES: REFER TO 91-04-00 FOR DISCONNECT PANEL INFORMATION

115-199

P32 PANEL GENERATOR  
SHIELD - RIGHT

D280N032

91-02-18

Page 2



Jan 21/2005

91-02-18


Page 2

Jan 21/2005

3

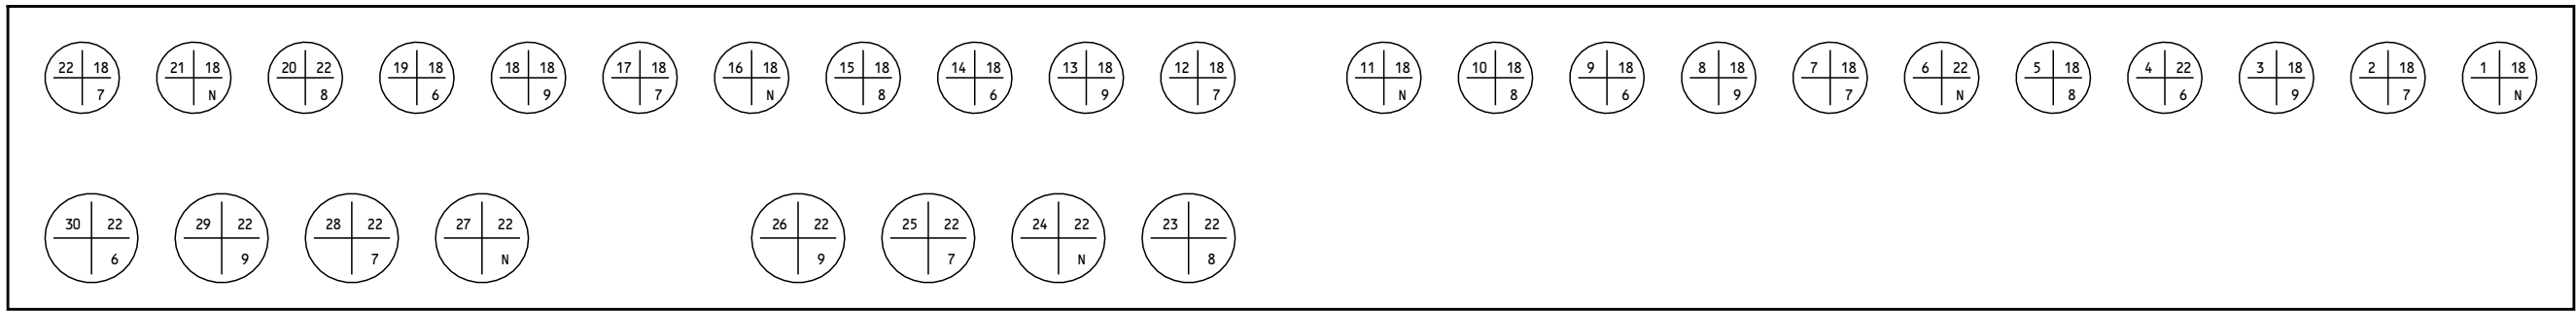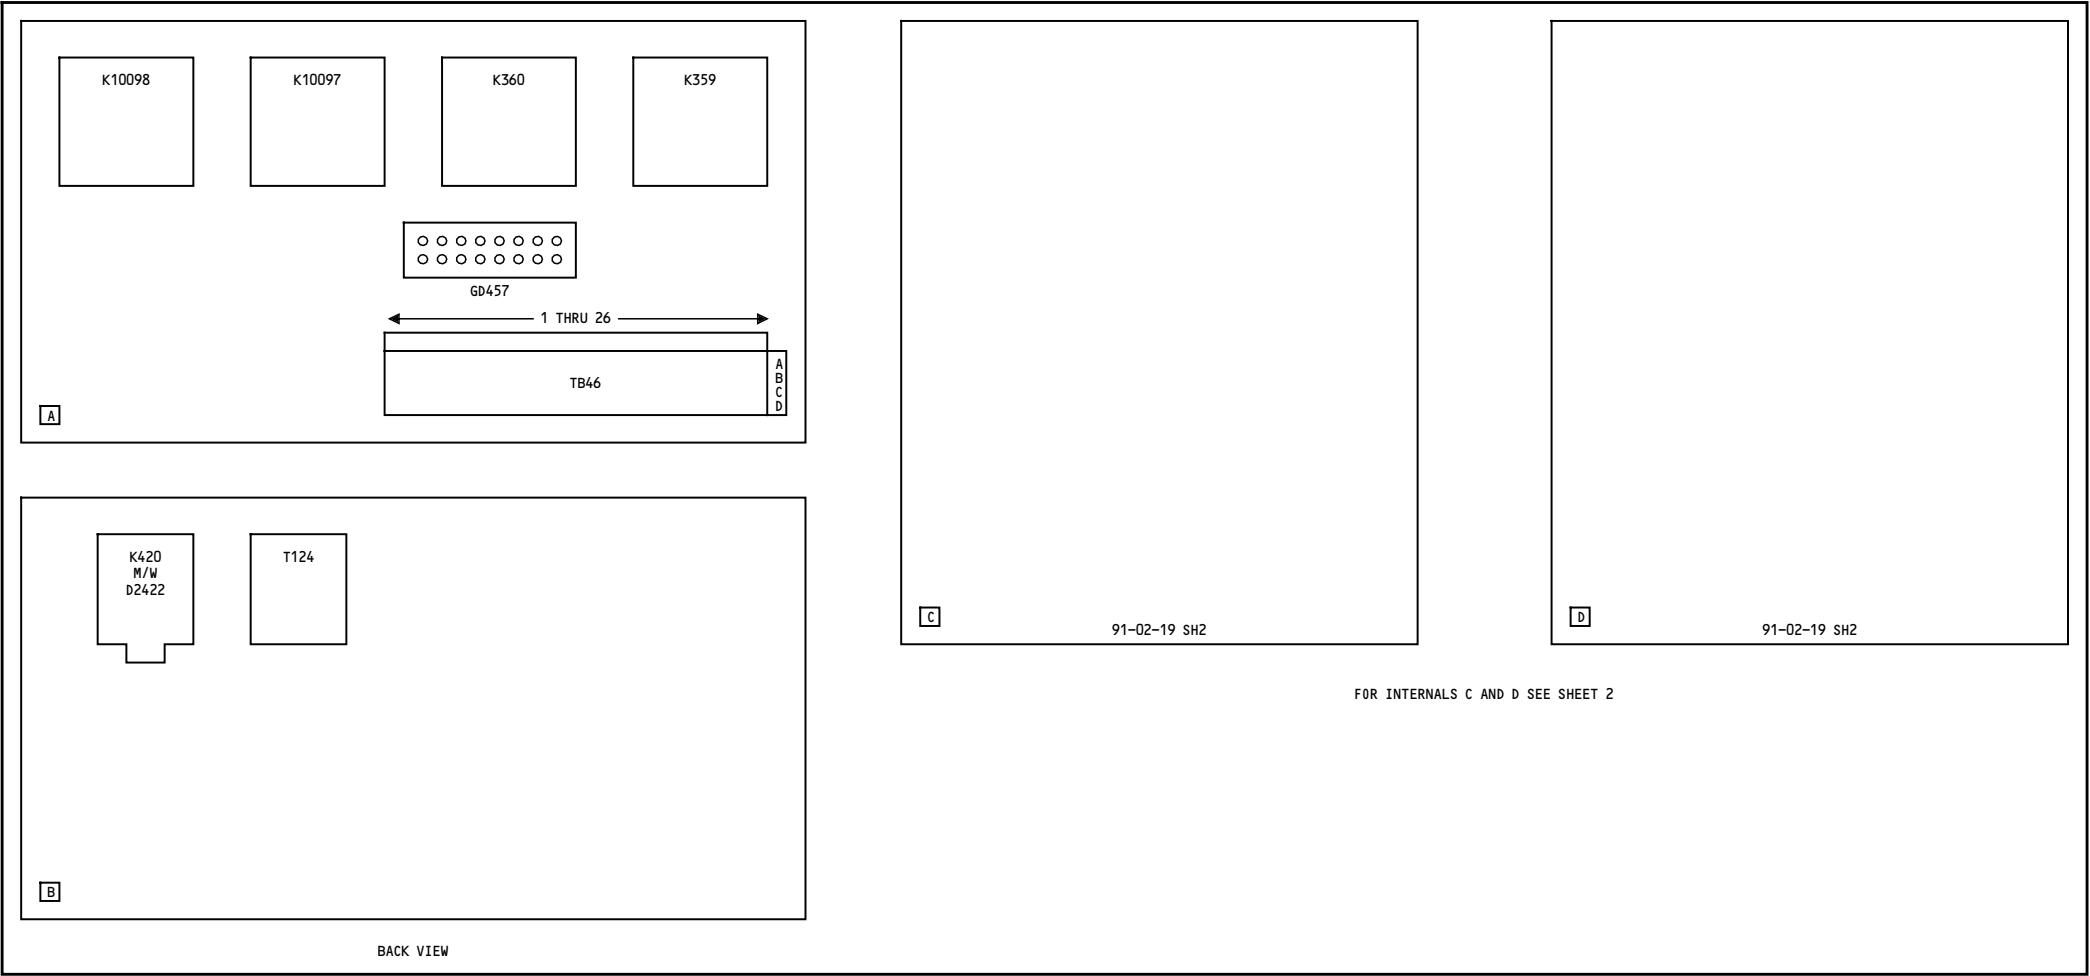

P33 MISCELLANEOUS RELAY PANEL

 

001-099

**P33 PANEL MISCELLANEOUS  
RELAY**

D280N032



**91-02-19**

Page 1  
Sheet 1  
Jan 21/2005

**91-02-19**

Page 1  
Sheet 1  
Jan 21/2005

3

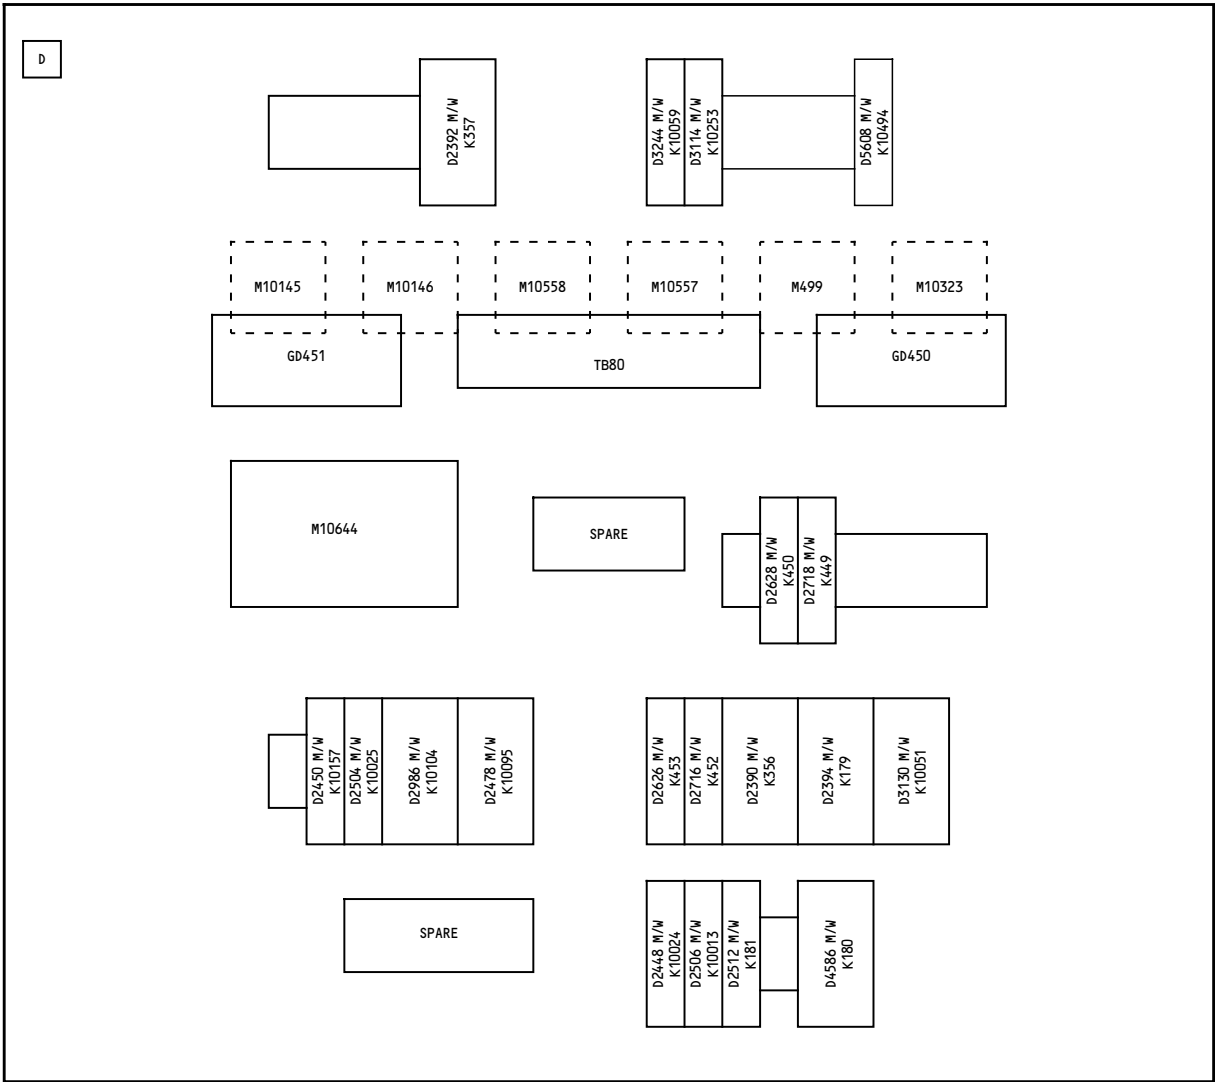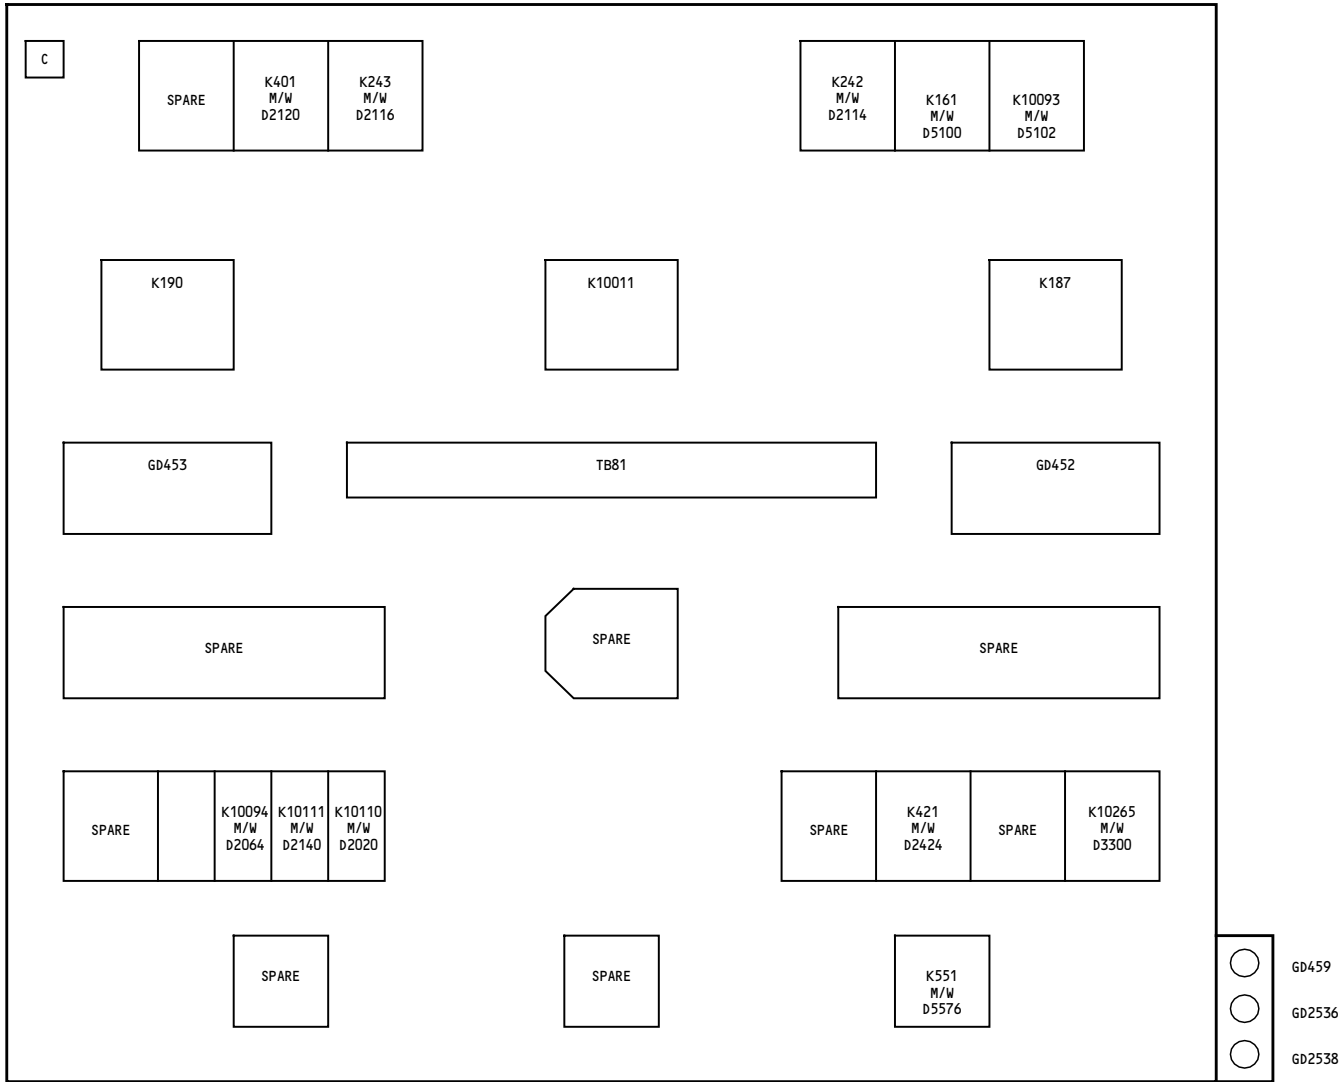

001-099

**P33 PANEL MISCELLANEOUS  
RELAY**



D280N032

**91-02-19**


Page 1  
Sheet 2  
Jan 21/2005

**91-02-19**

Page 1  
Sheet 2  
Jan 21/2005

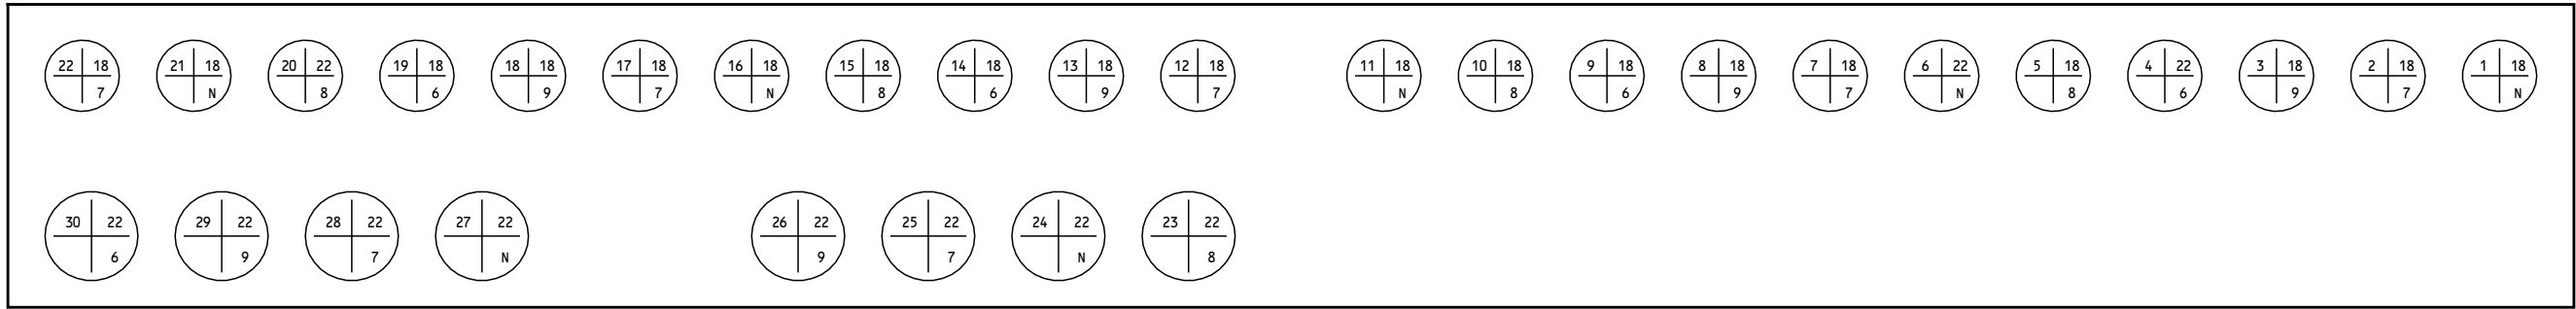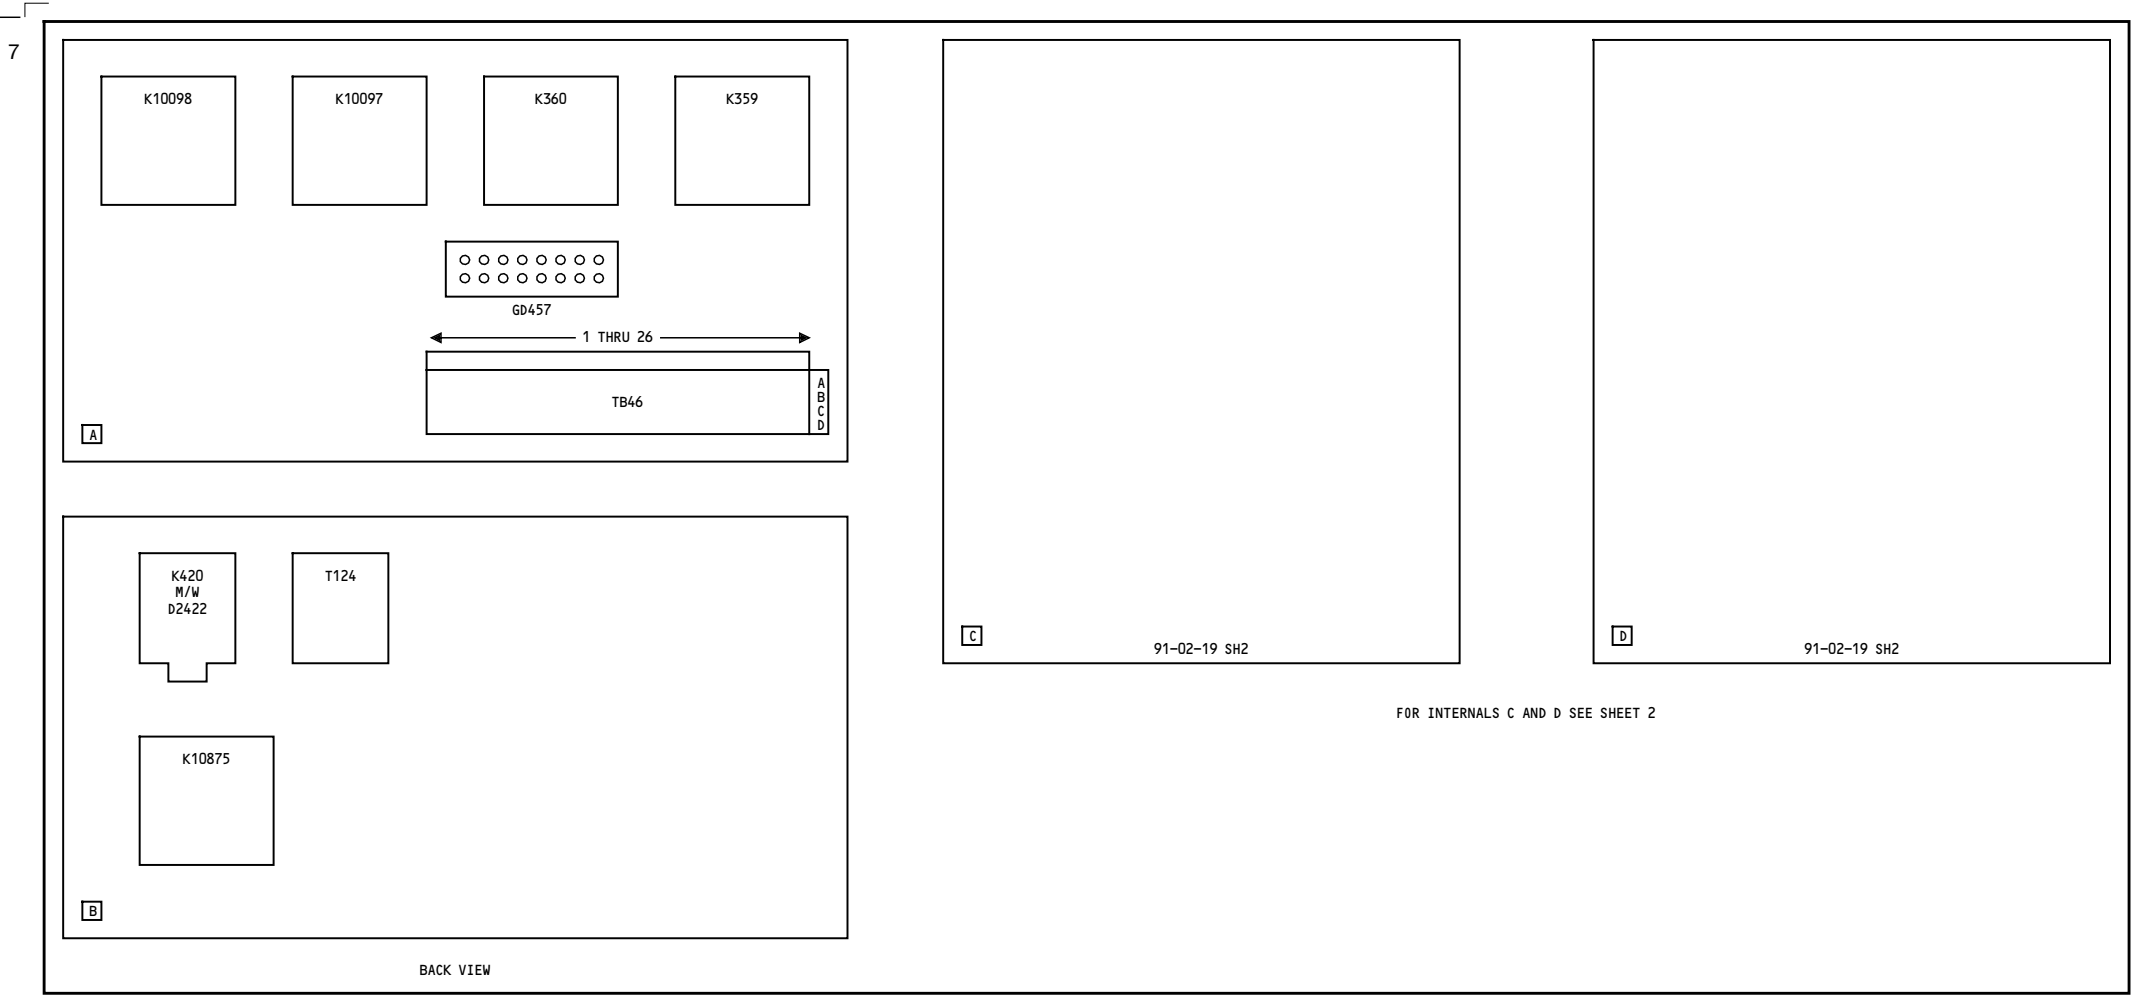

P33 MISCELLANEOUS RELAY PANEL

 

001-011

**P33 PANEL MISCELLANEOUS  
RELAY**

D280N032

**91-02-19**



Page 1.1  
Sheet 1  
Oct 09/2008

Incorporates  
➤ 28A0105 R01

**91-02-19**

Page 1.1  
Sheet 1  
Oct 09/2008

13

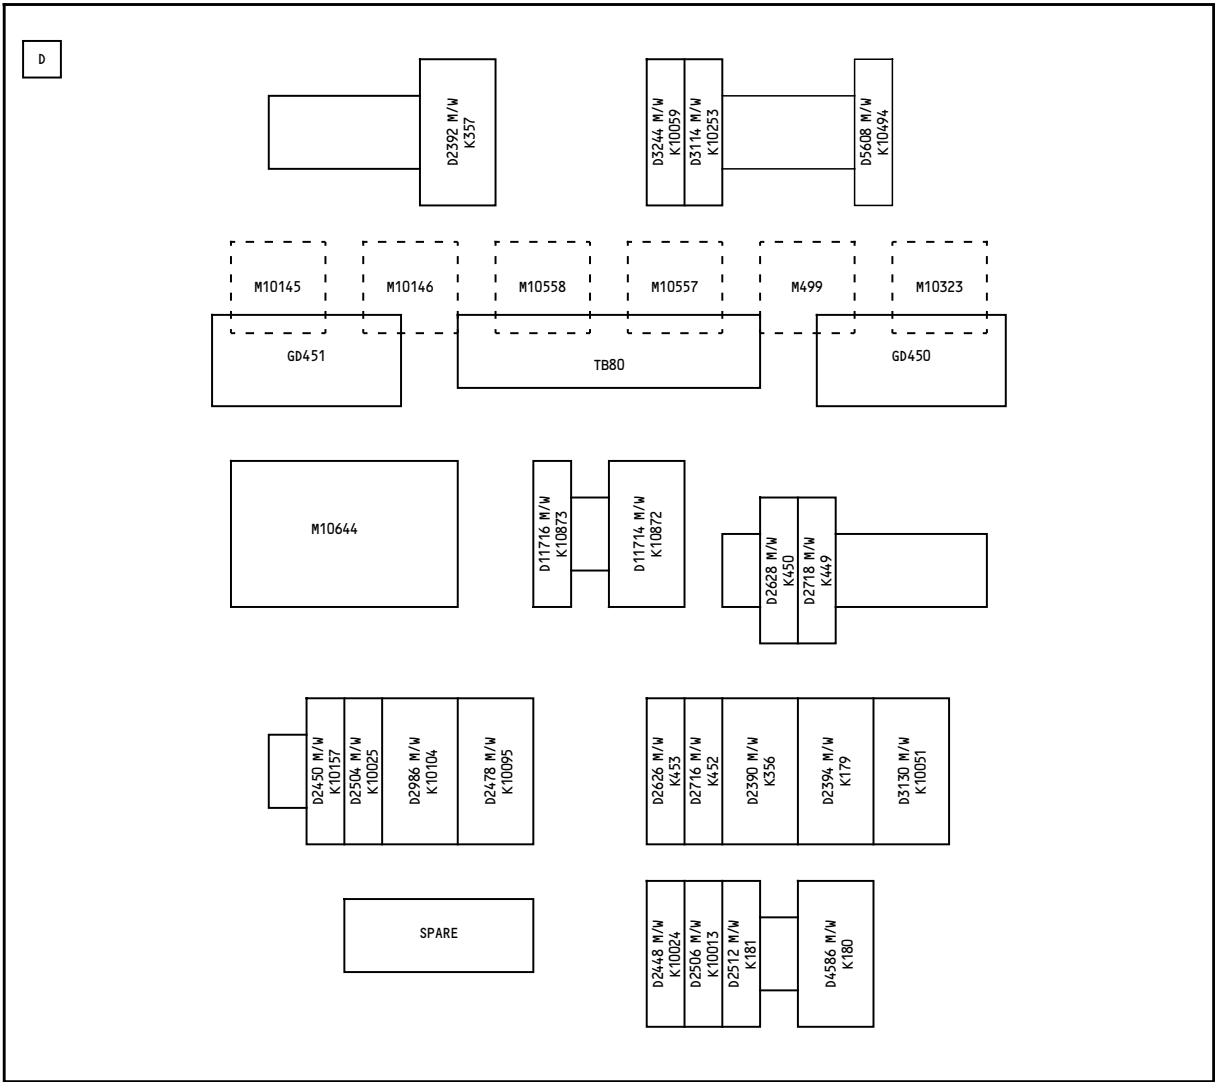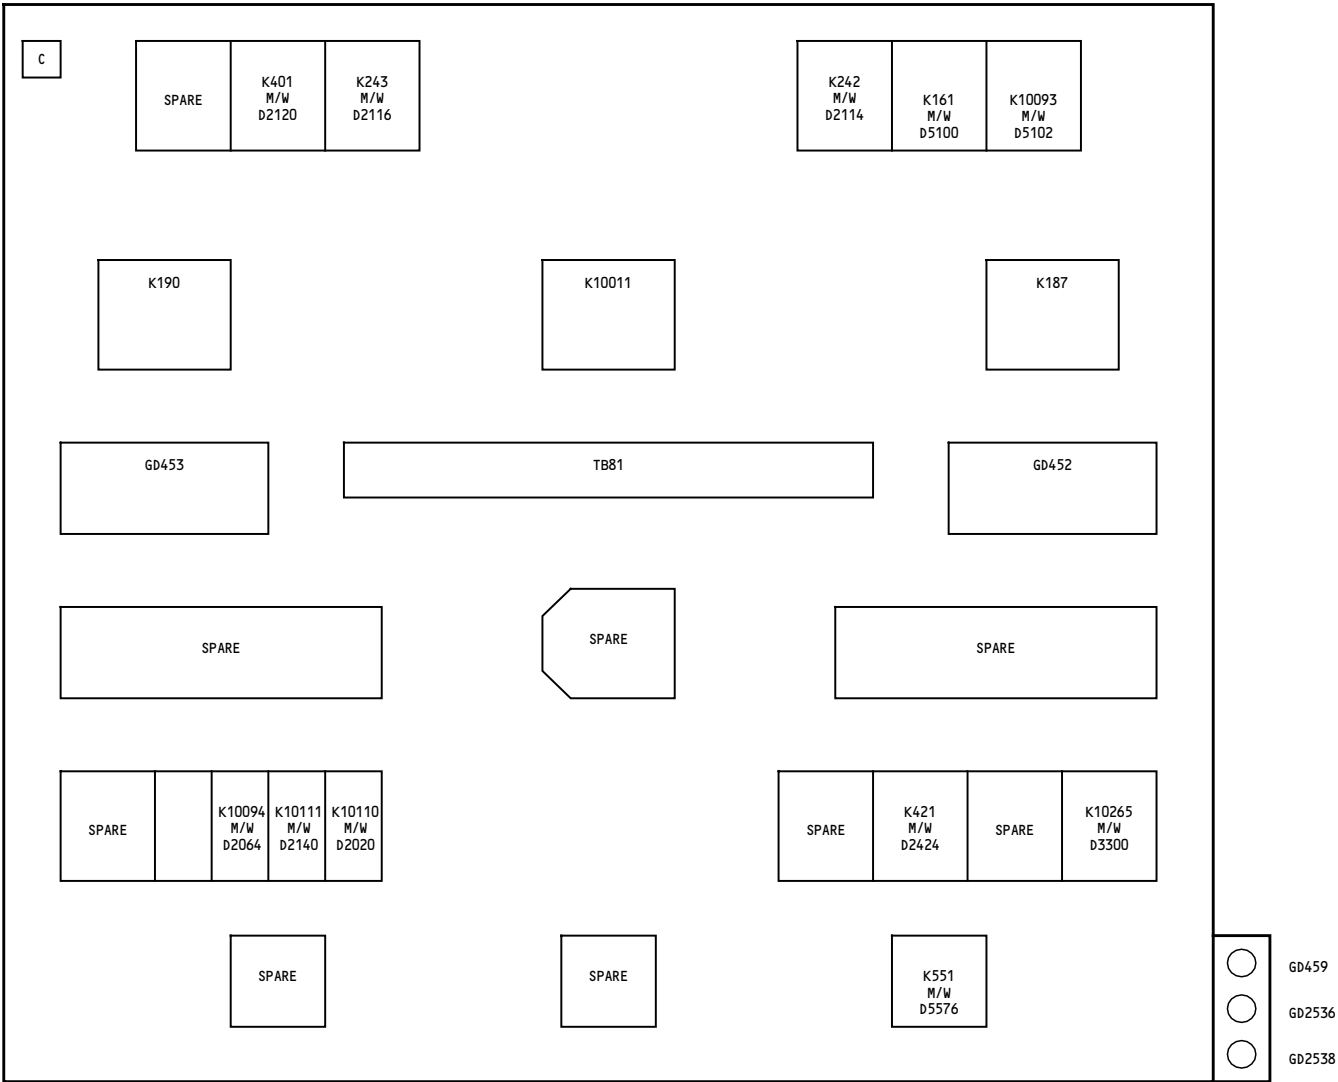

001-011

**P33 PANEL MISCELLANEOUS  
RELAY**

D280N032



**91-02-19**

Page 1.1  
Sheet 2  
Oct 09/2008

Incorporates  
28A0081

**91-02-19**

Page 1.1  
Sheet 2  
Oct 09/2008

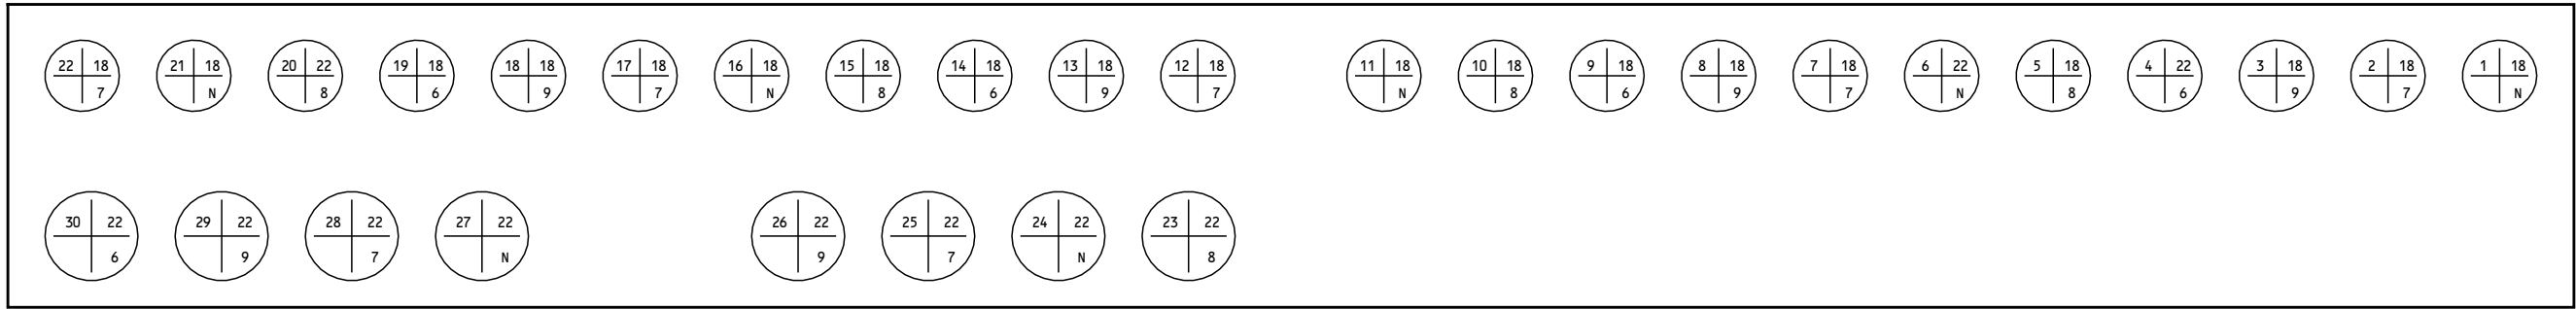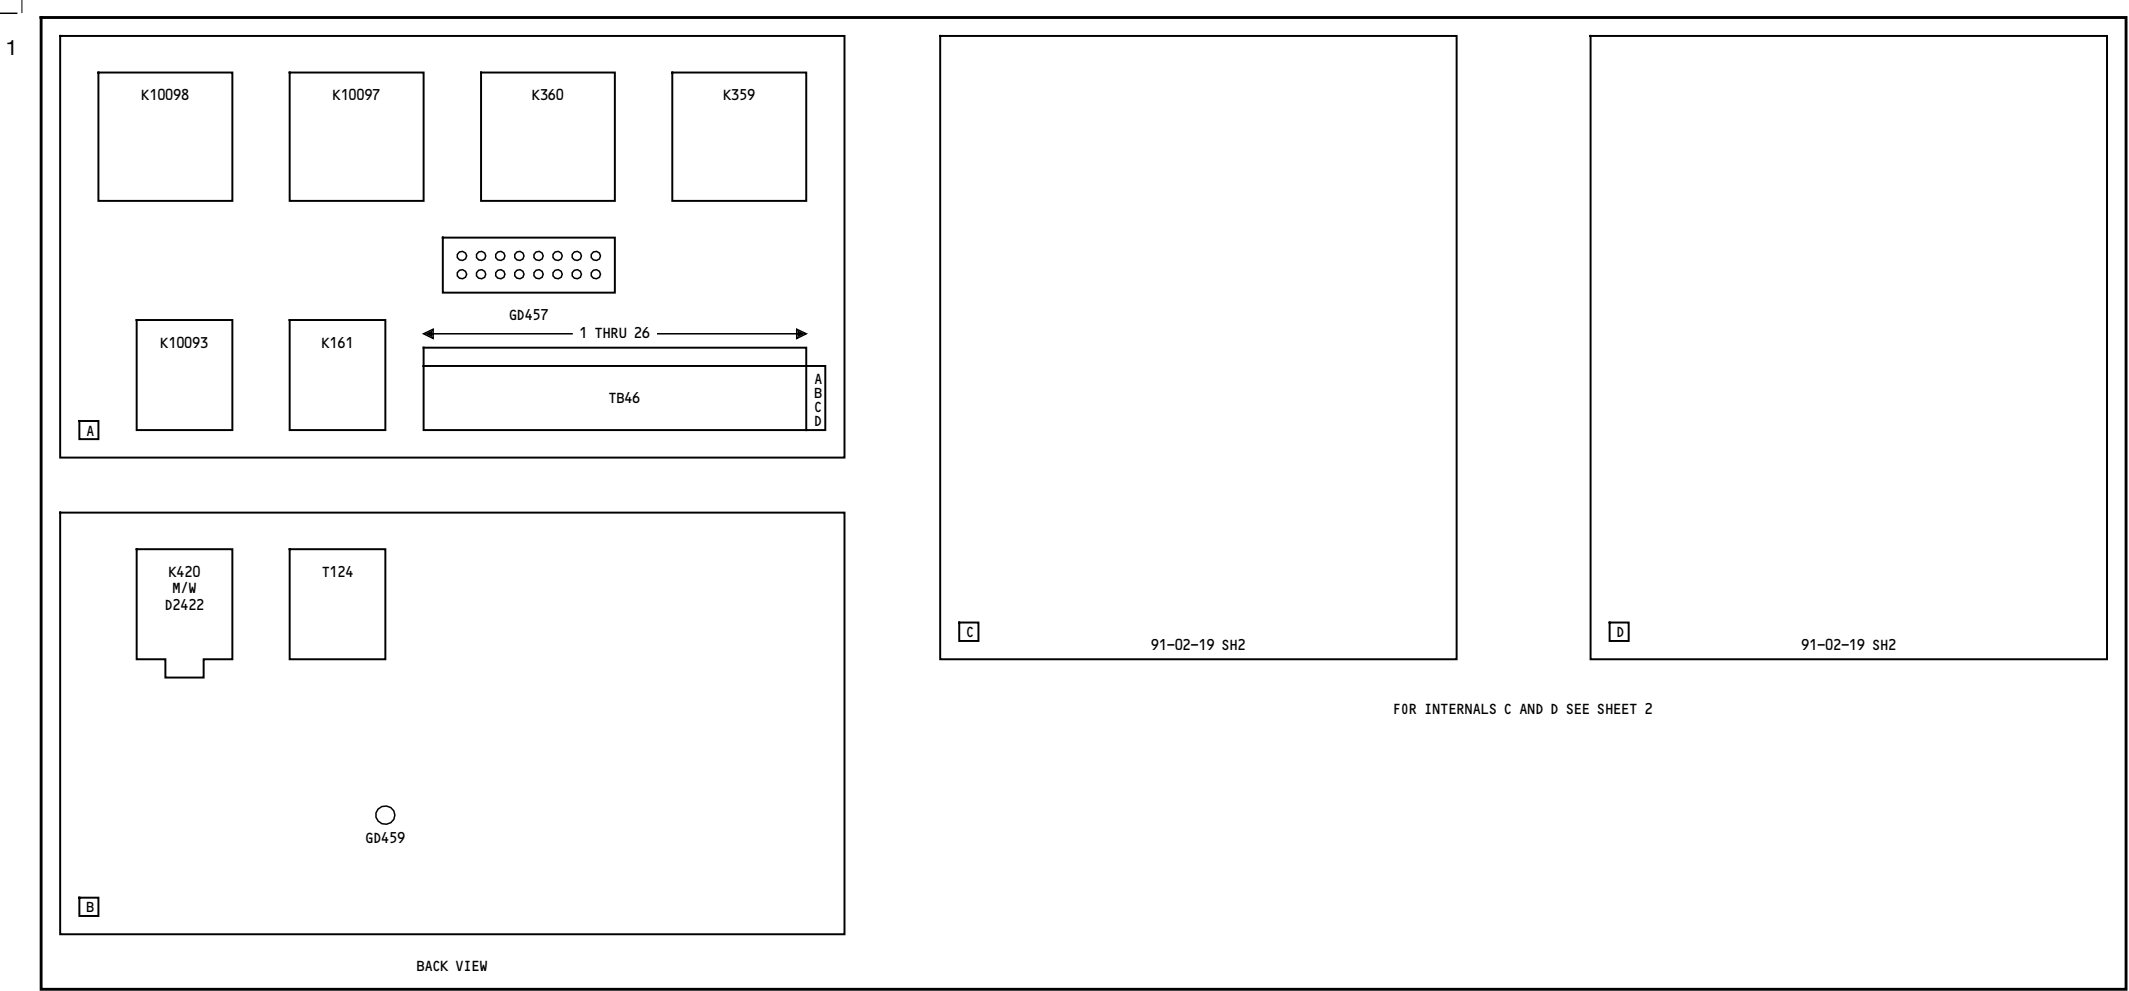

P33 MISCELLANEOUS RELAY PANEL

POSITION  
X X CUTOUT SIZE  
X KEYING

115-199

**P33 PANEL MISCELLANEOUS  
RELAY**

D280N032



**91-02-19**

Page 2  
Sheet 1  
Jan 21/2005

**91-02-19**


Page 2  
Sheet 1  
Jan 21/2005

1

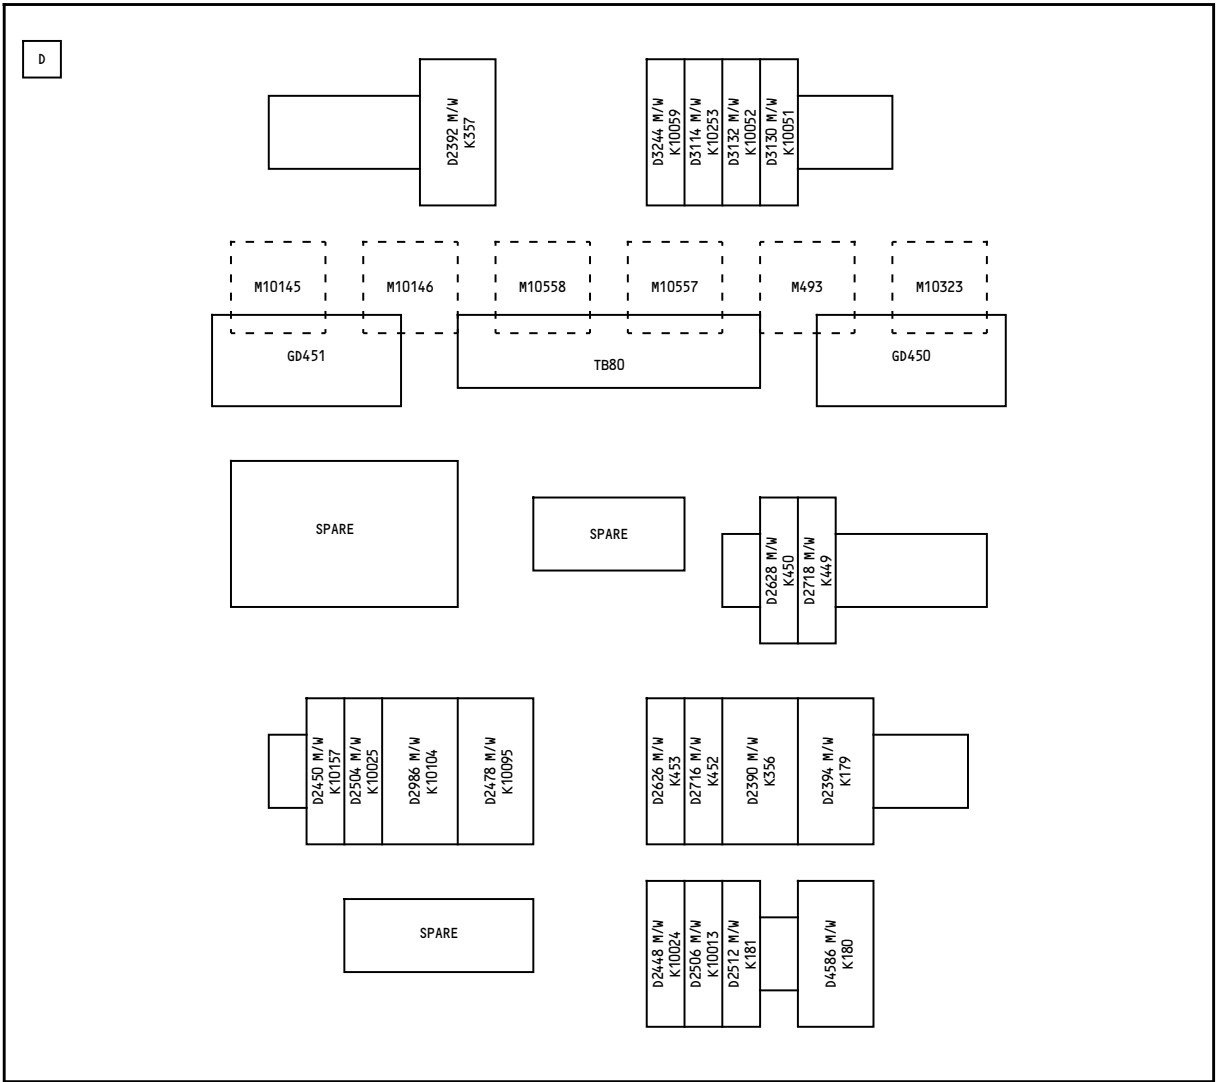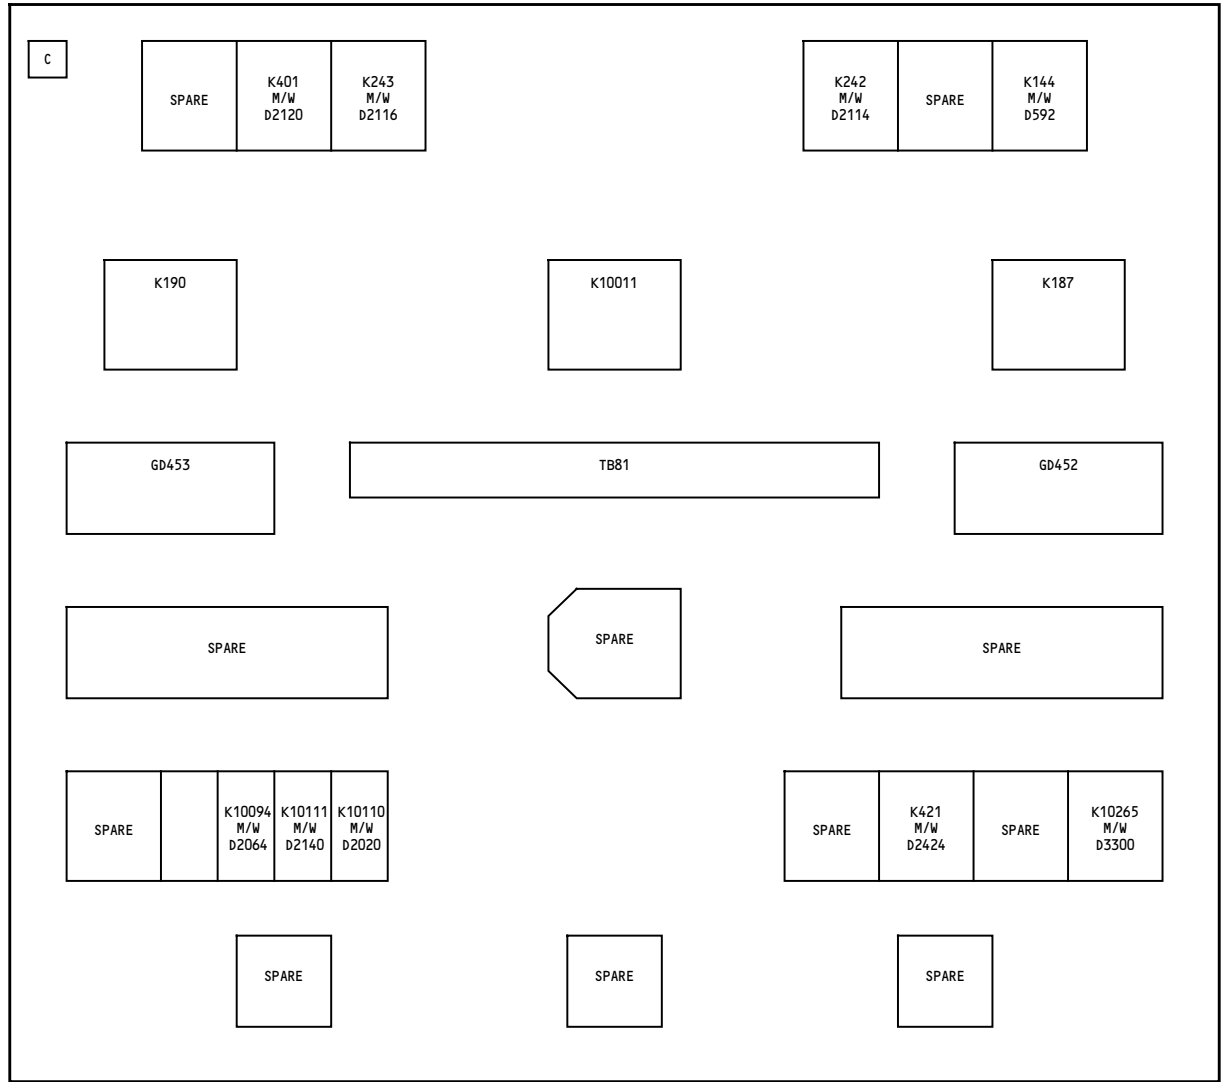





6

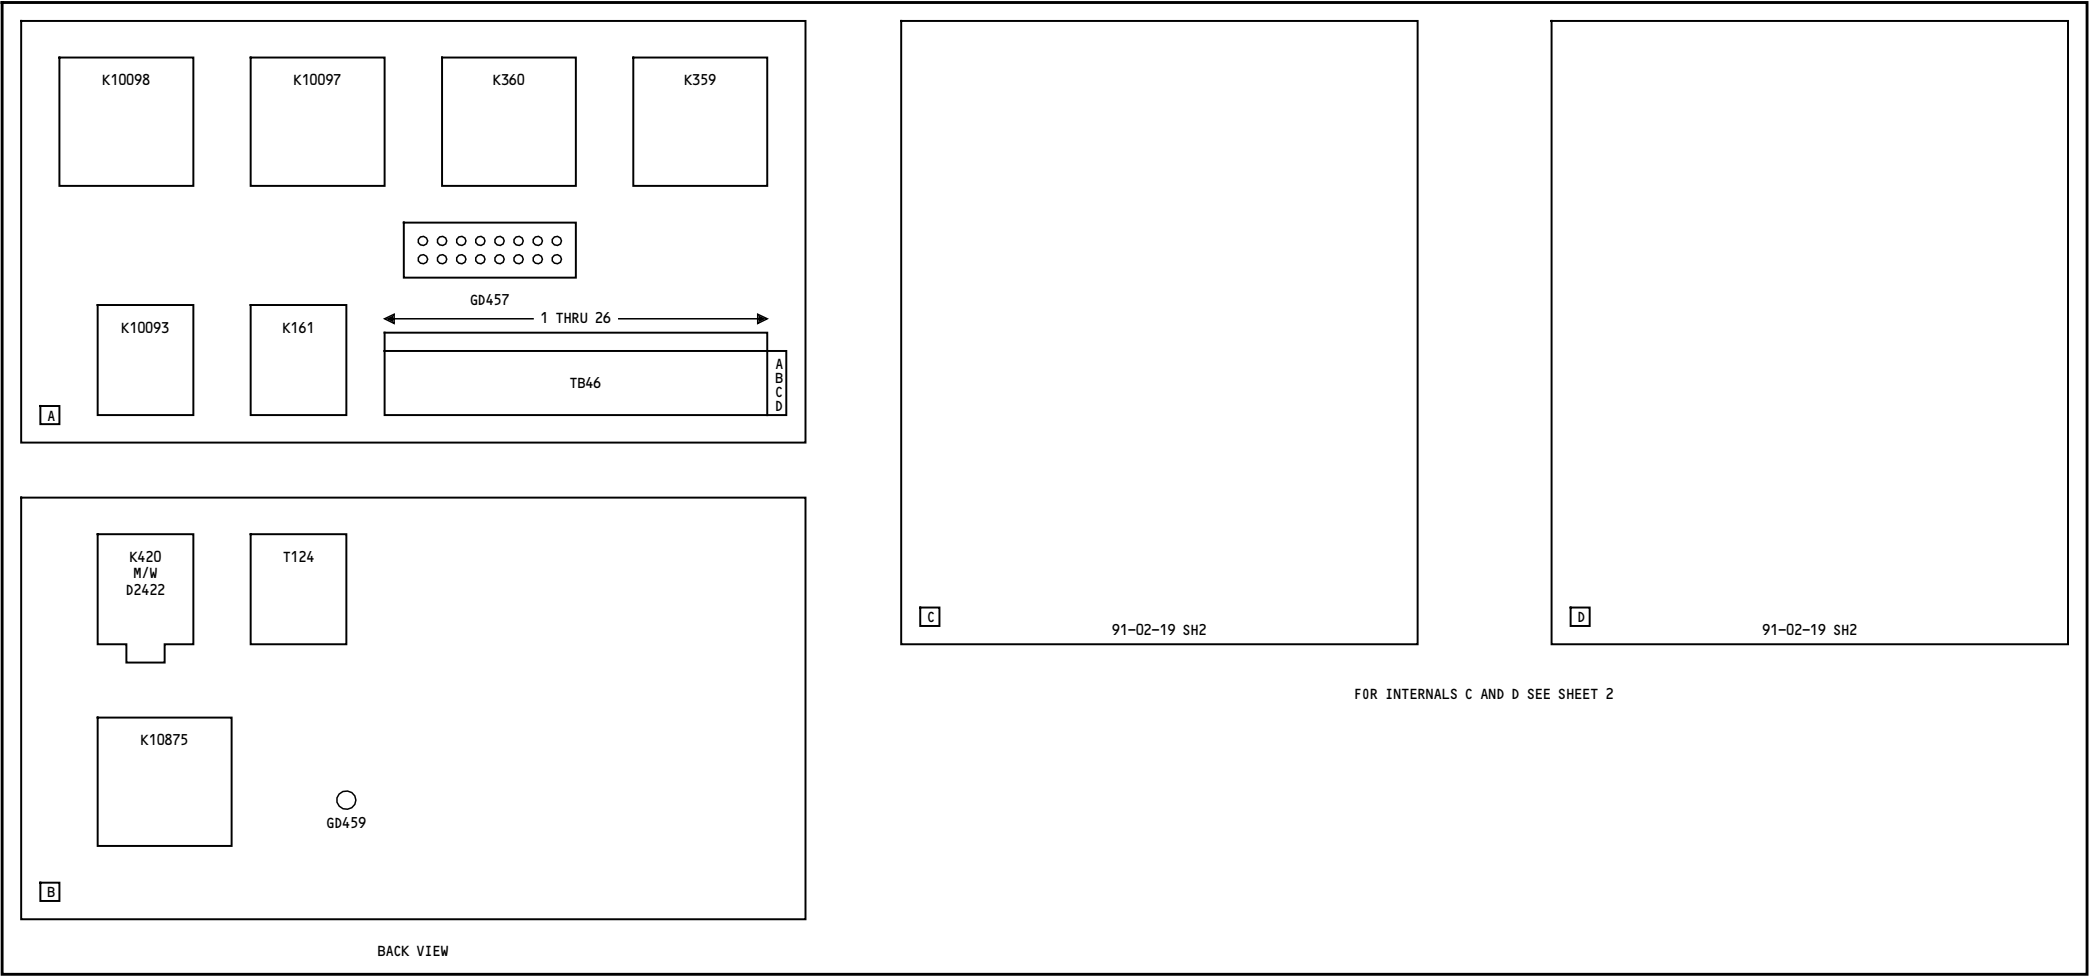

FOR INTERNALS C AND D SEE SHEET 2

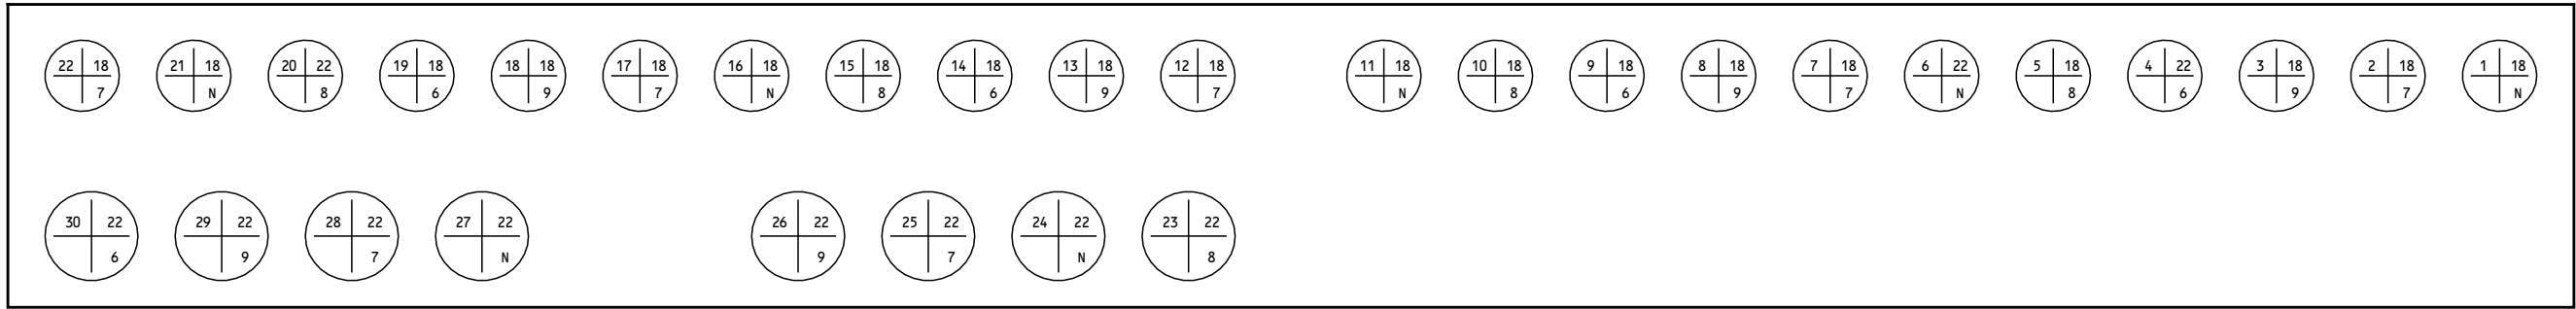

P33 MISCELLANEOUS RELAY PANEL

 

115

**P33 PANEL MISCELLANEOUS RELAY**

D280N032

**91-02-19**



Page 2.1  
Sheet 1  
Oct 09/2008



Incorporates  
28A0105 R01

**91-02-19**

Page 2.1  
Sheet 1  
Oct 09/2008

11

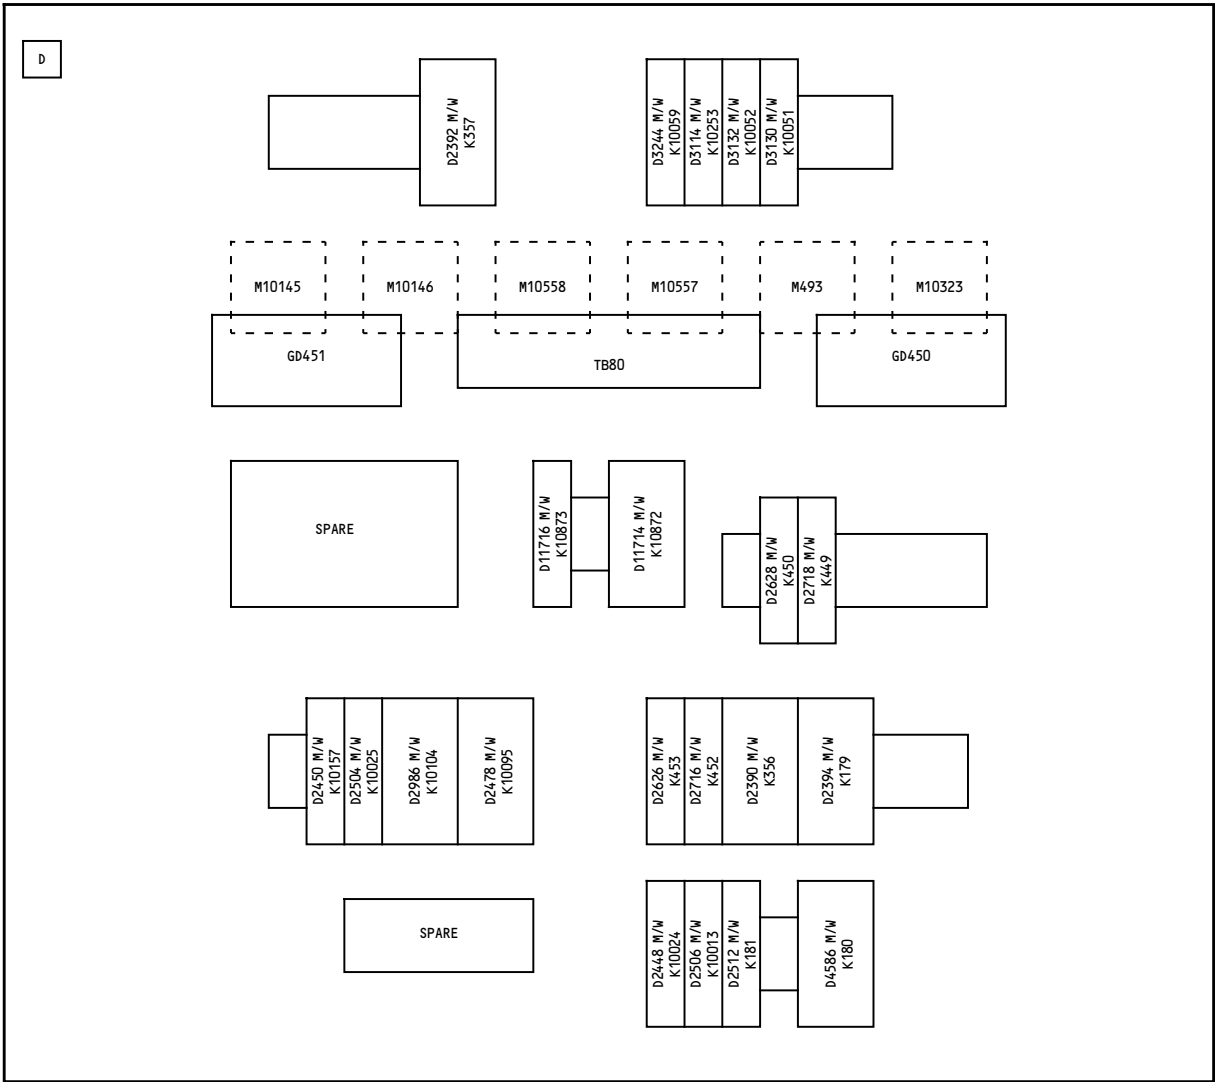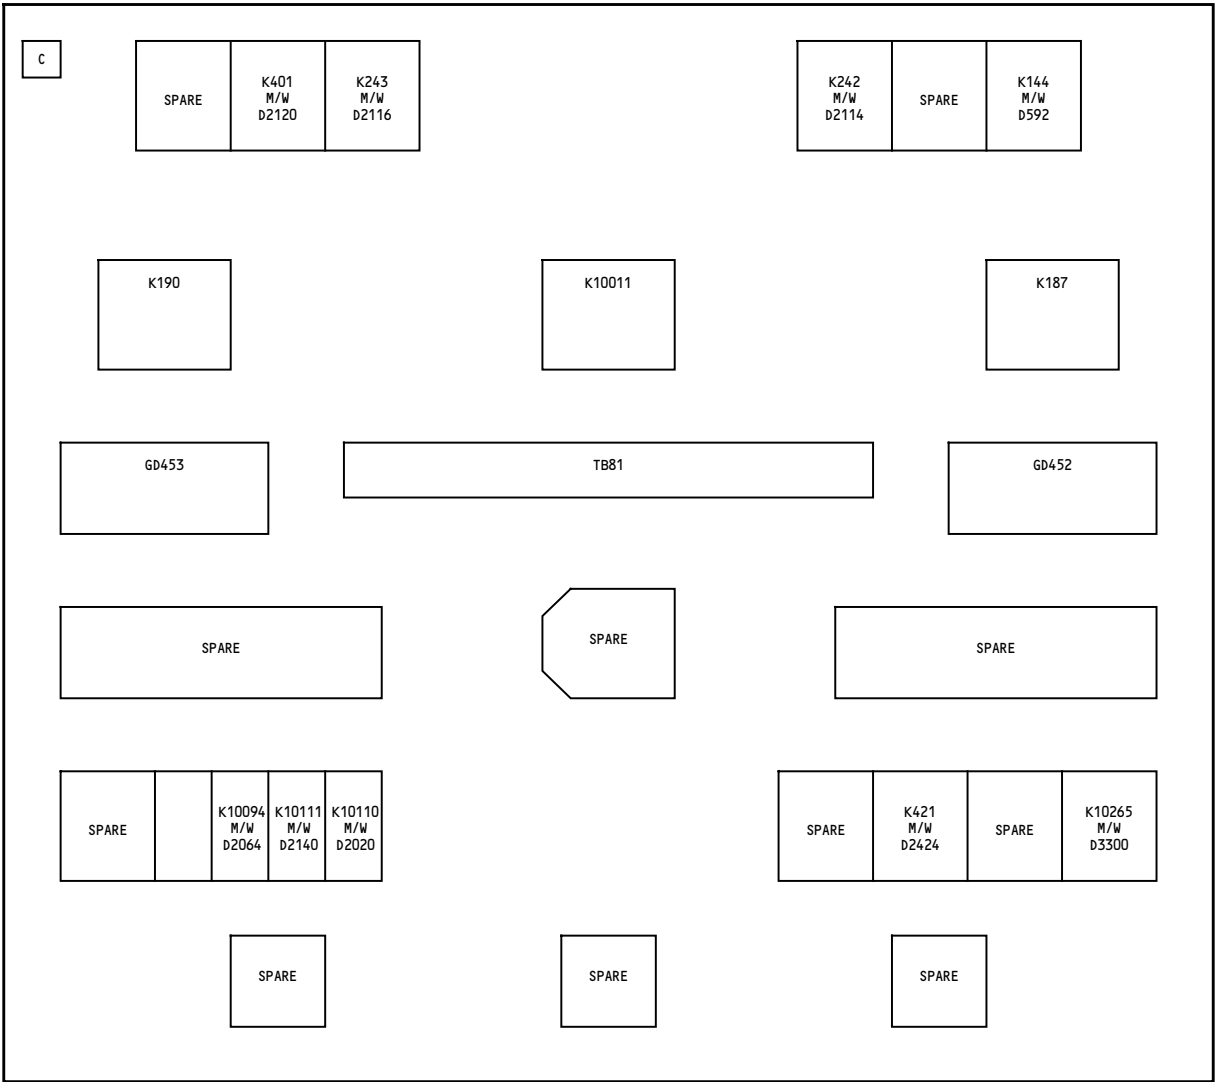

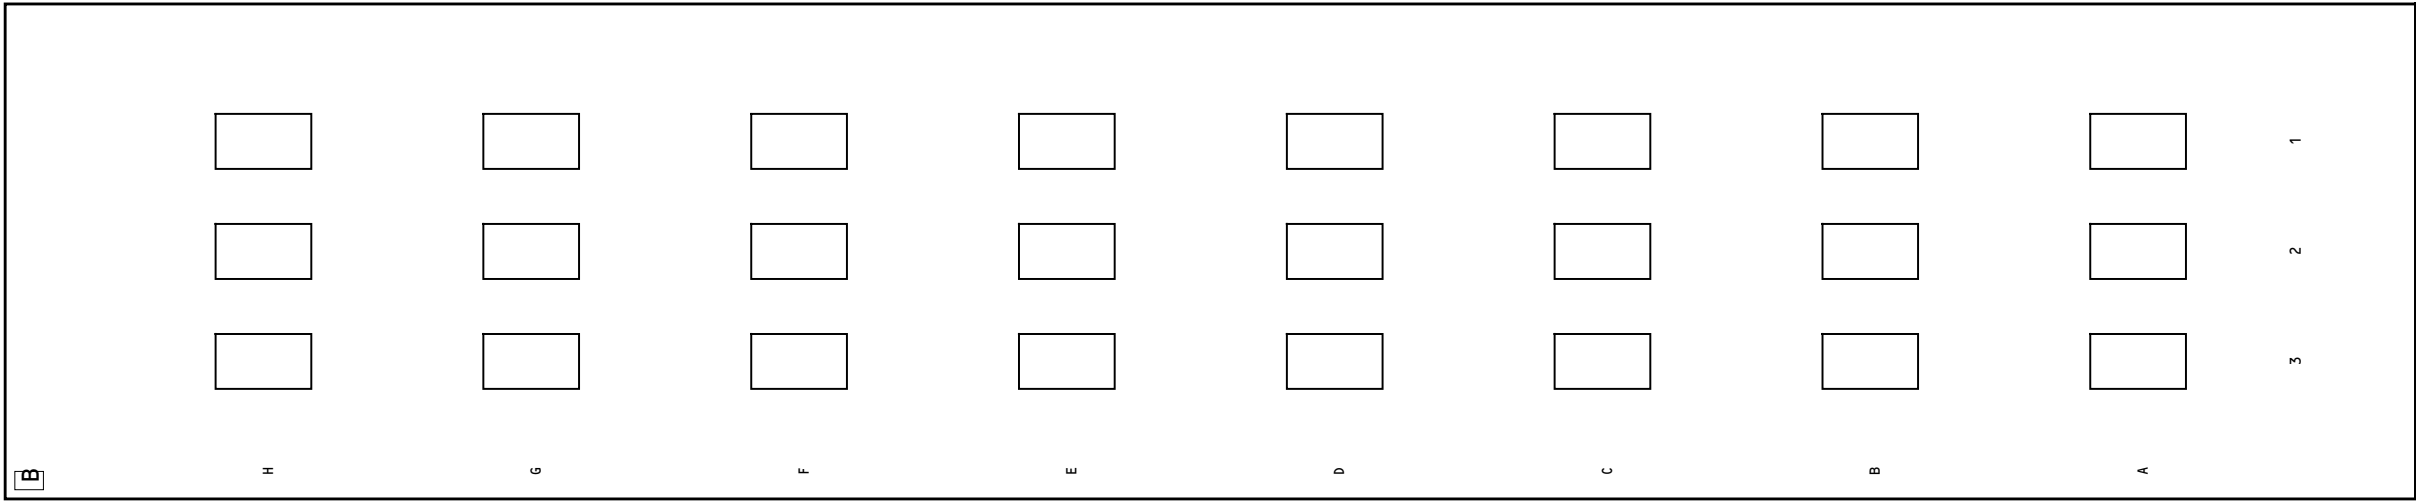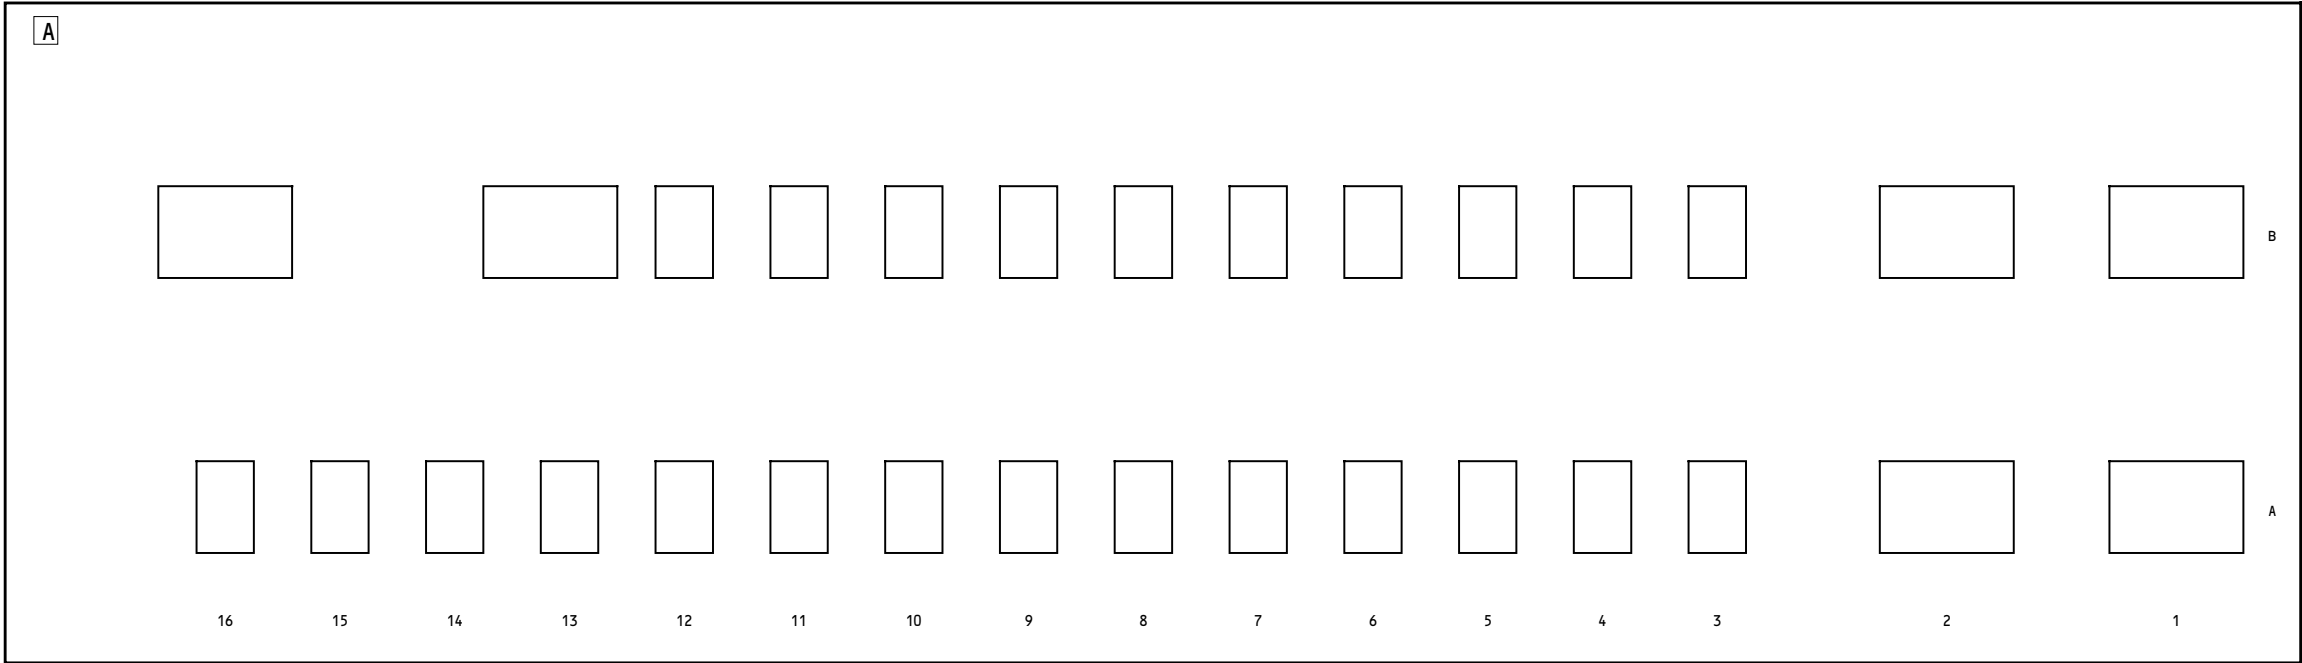

**NOTES:**  
REFER TO 91-21-00 FOR CIRCUIT BREAKER INFORMATION

ALL	<b>P34 PANEL APU/EXTERNAL POWER SHIELD</b>
	D280N032

**91-02-20**


Page 1

Jan 21/2005

**91-02-20**

Page 1

Jan 21/2005

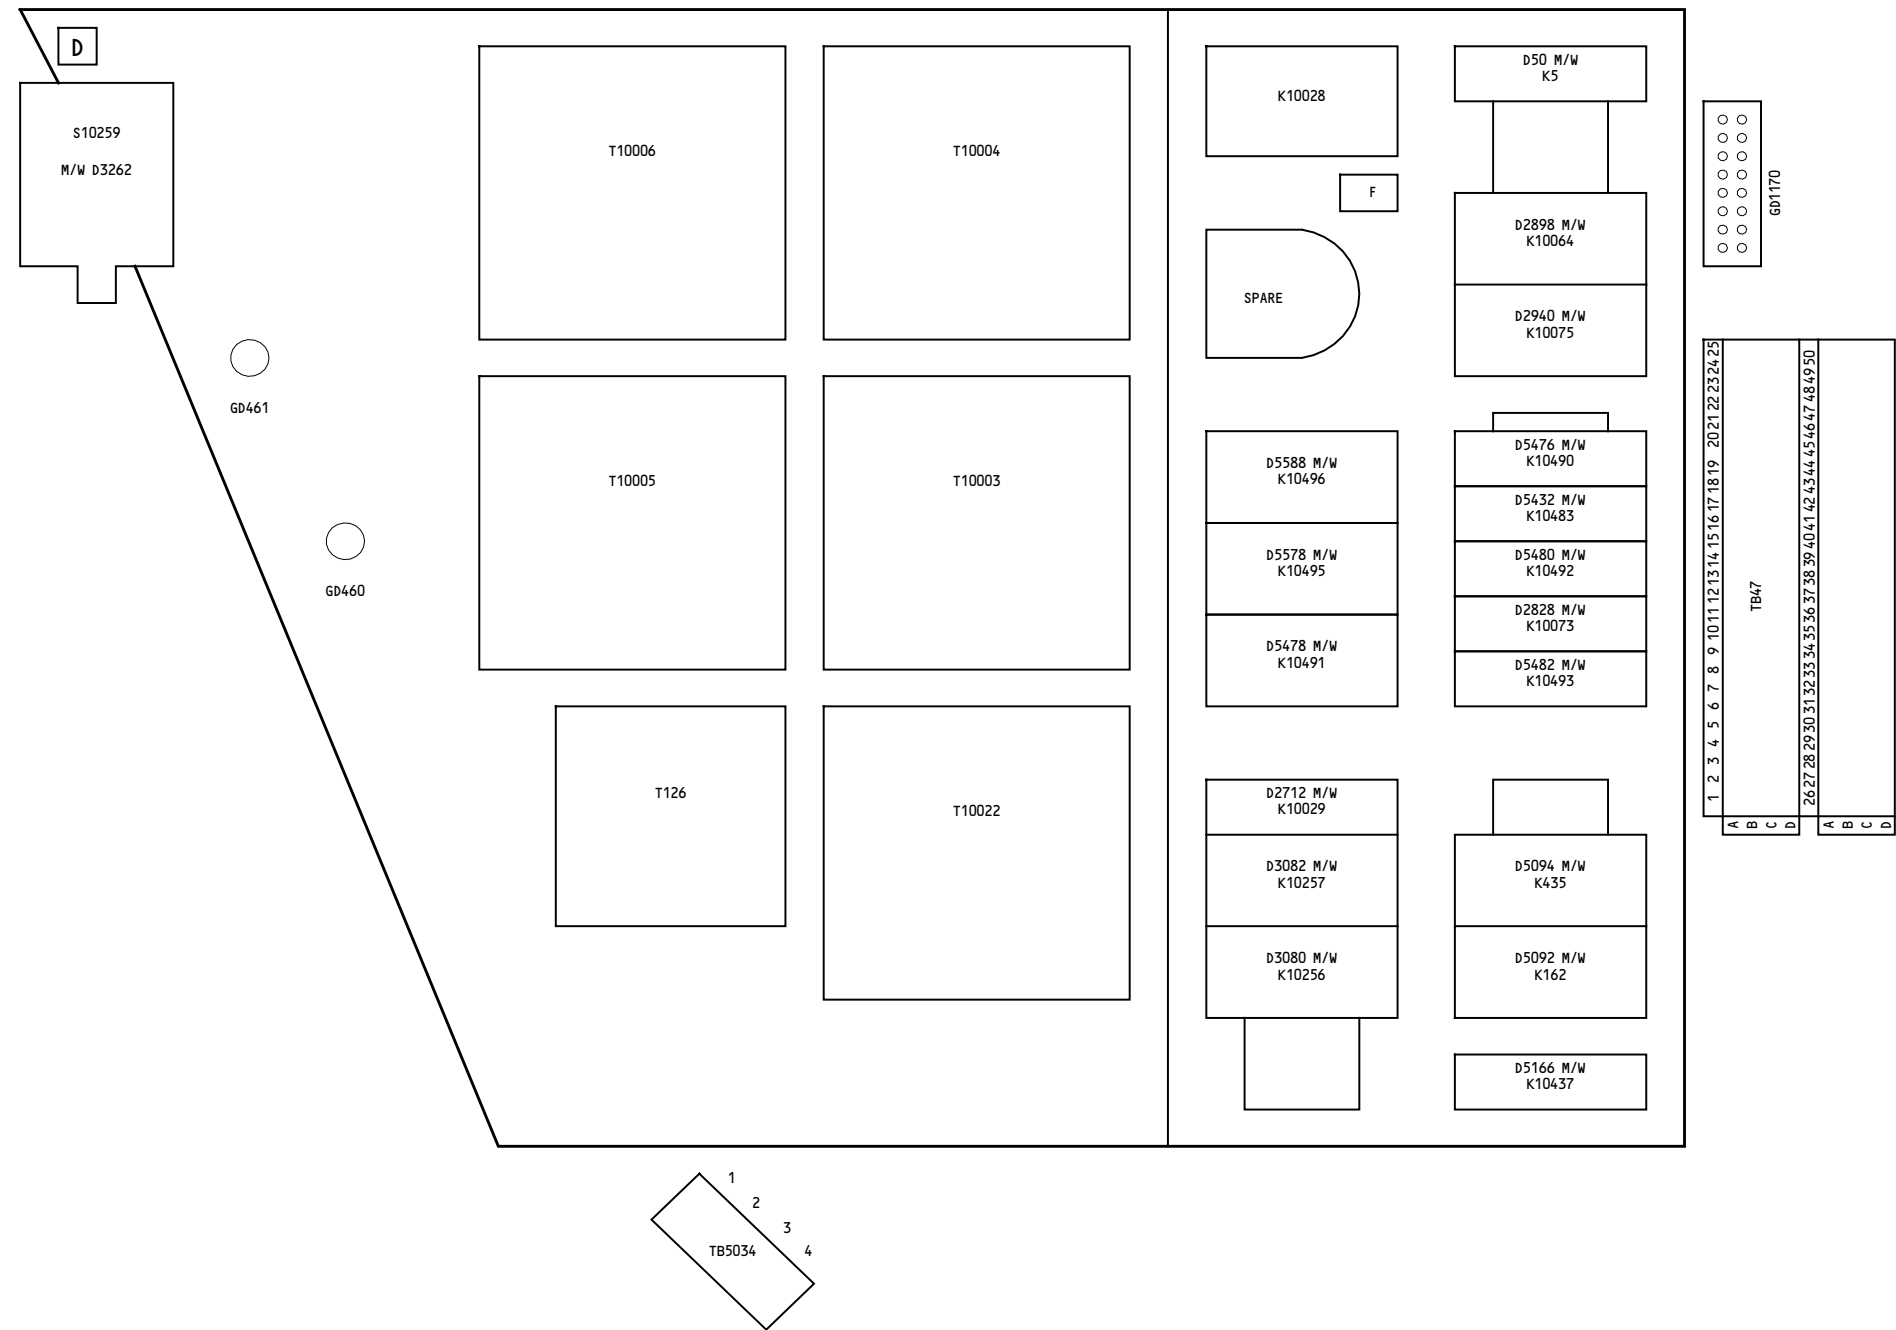

**NOTES:**  
REFER TO 91-04-00 FOR DISCONNECT PANEL INFORMATION

001-099	<b>P34 PANEL APU/EXTERNAL POWER SHIELD</b>
	D280N032

**91-02-21**

Page 1



Jan 21/2005

**91-02-21**

Page 1

Jan 21/2005

Jan 21/2005

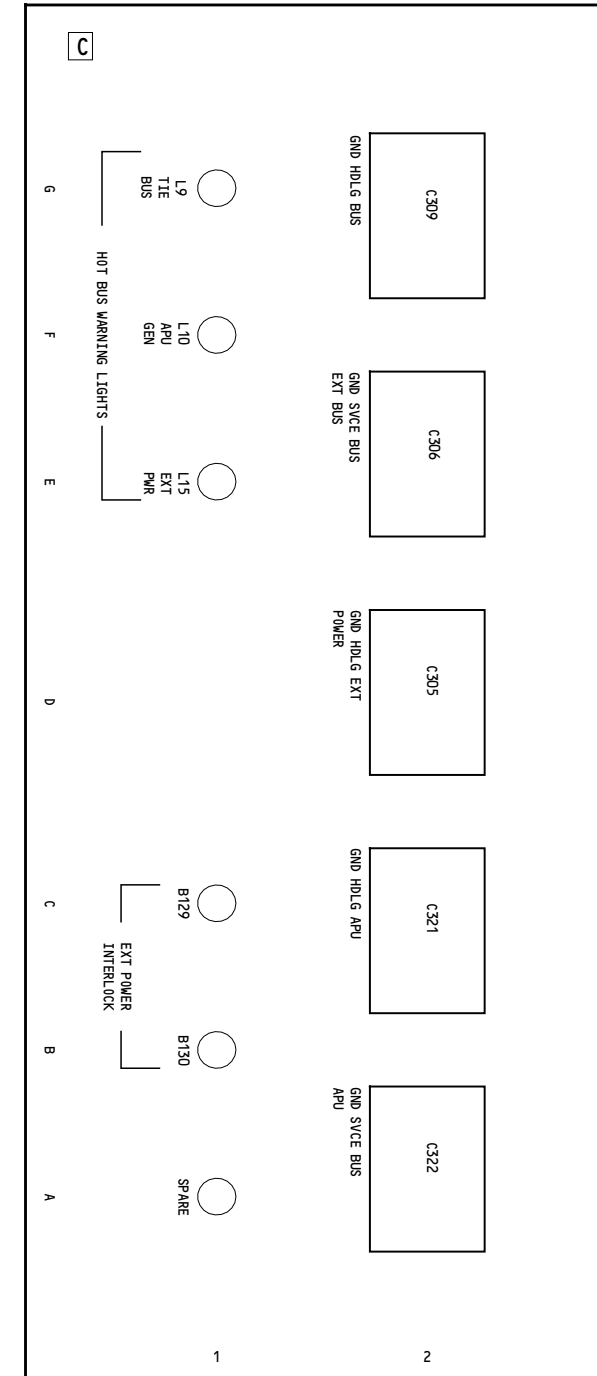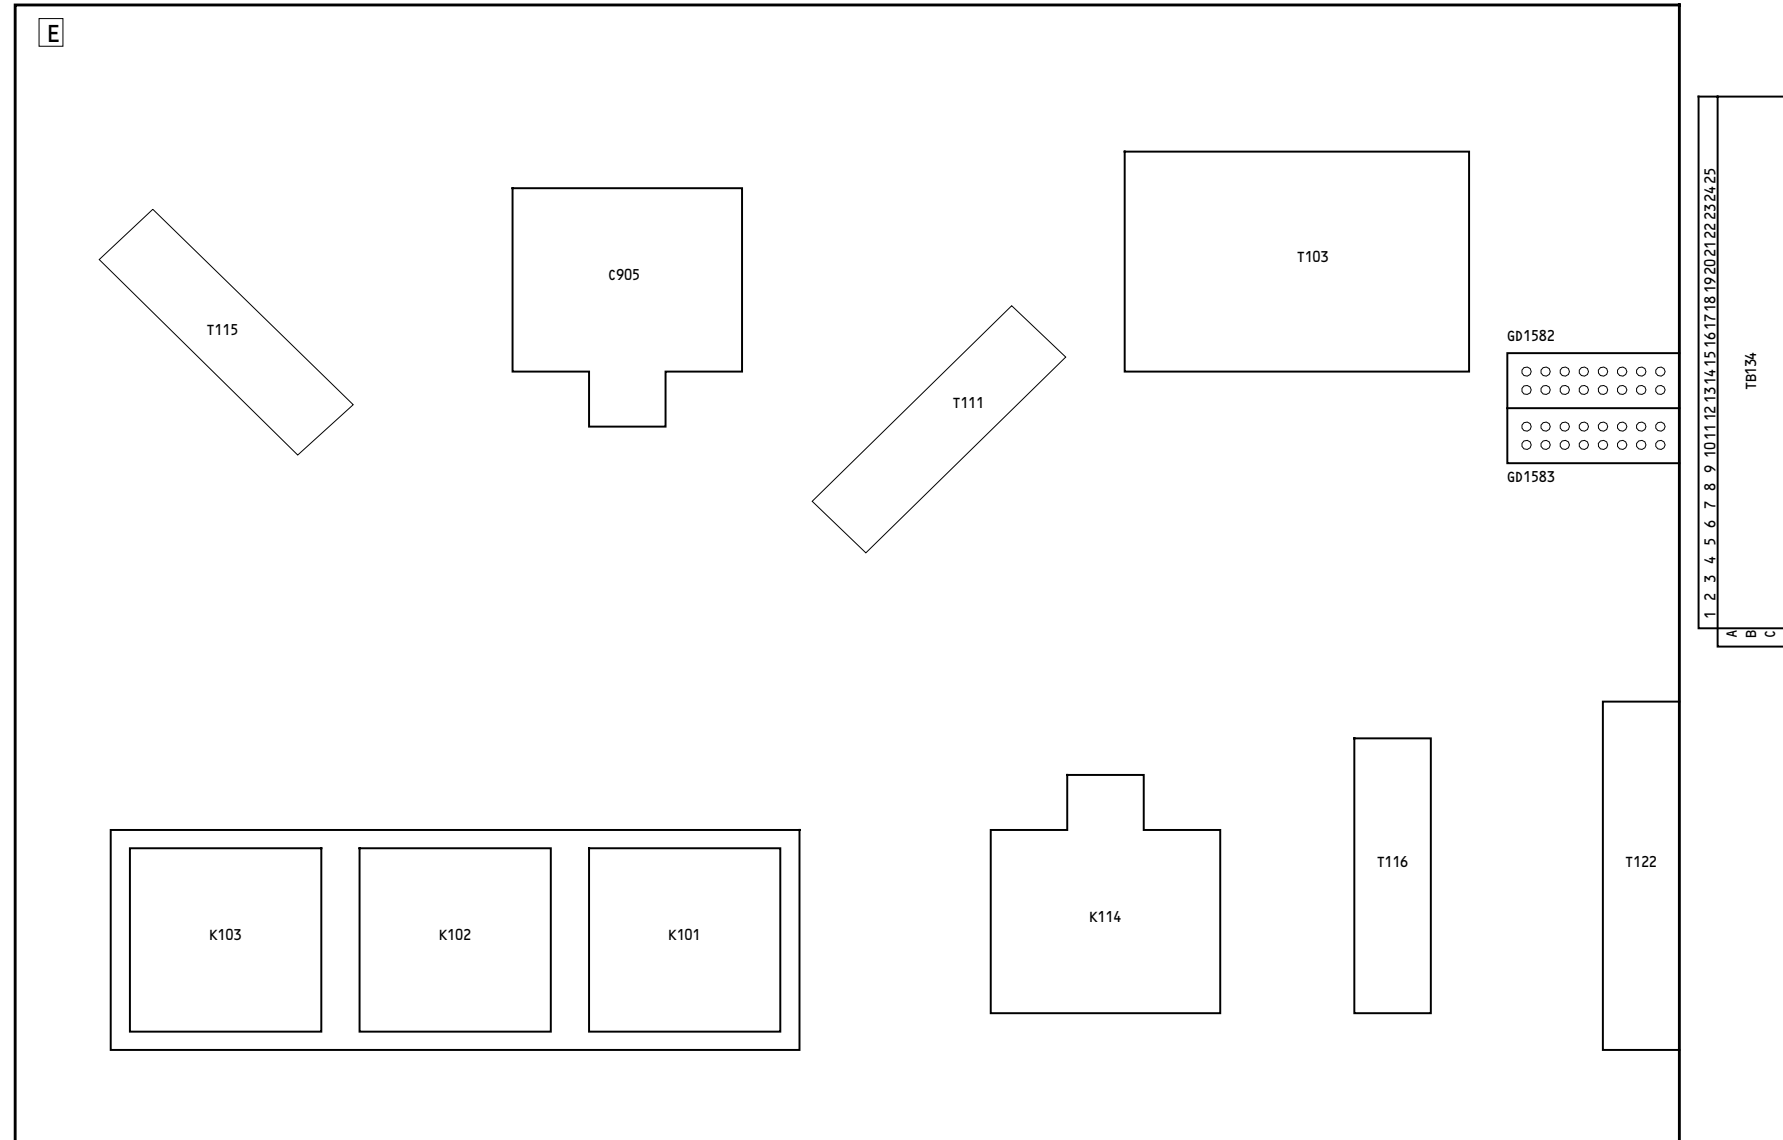

**NOTES:**  
REFER TO 91-02-22 FOR DISCONNECT PANEL INFORMATION

001-099

**P34 PANEL APU/EXTERNAL  
POWER SHIELD**

D280N032

**91-02-22**

Page 1



Jan 21/2005

**91-02-22**

Page 1

Jan 21/2005

-A  
1

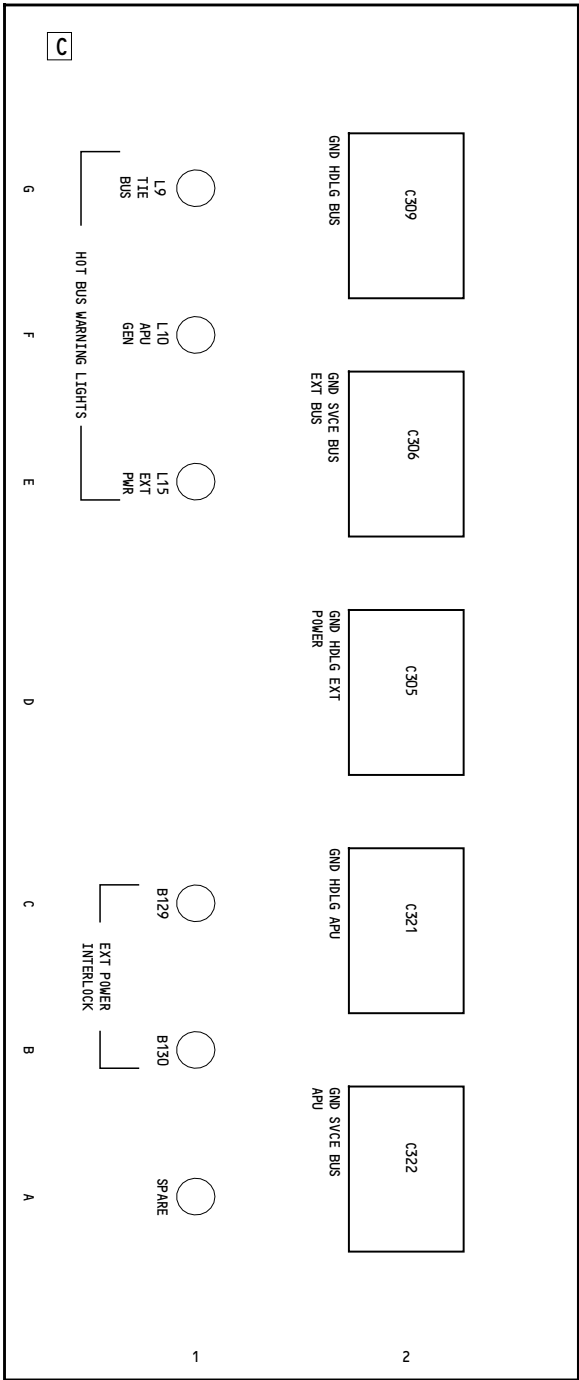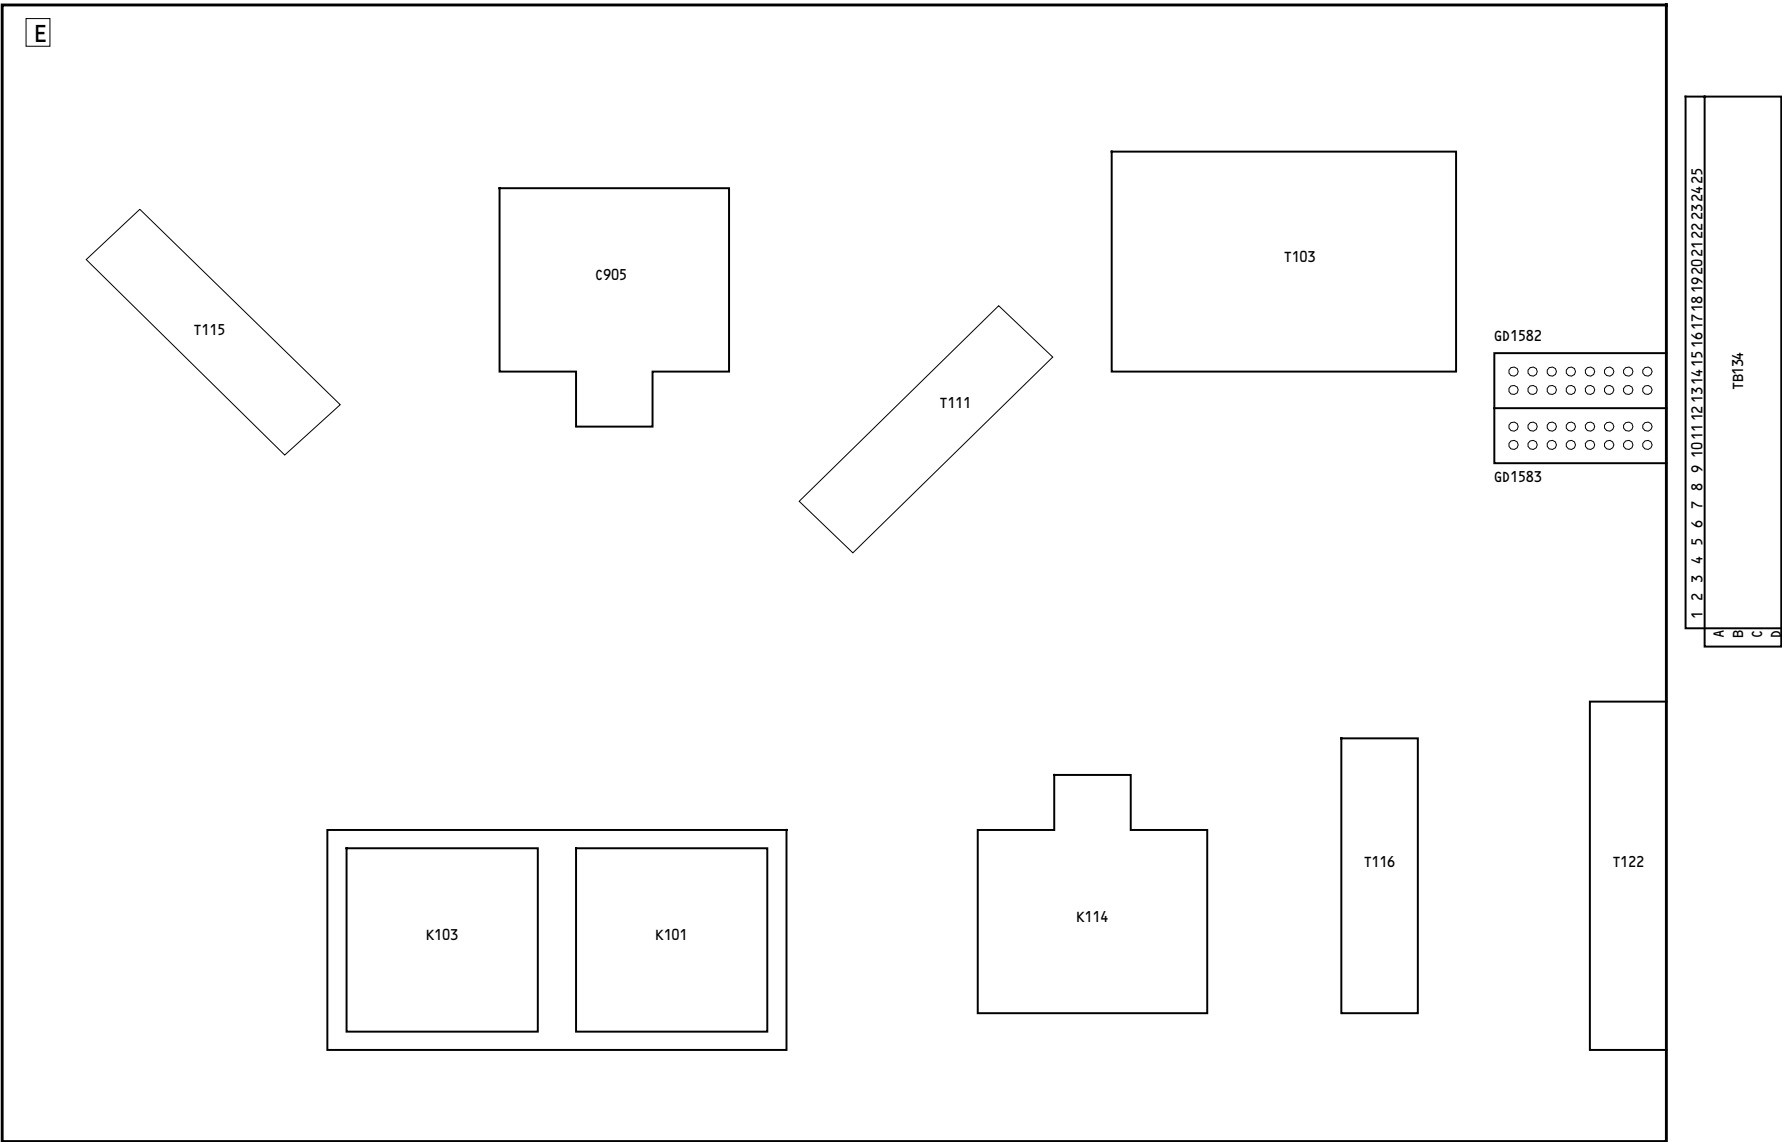

**NOTES:**  
REFER TO 91-02-22 FOR DISCONNECT PANEL INFORMATION

115-199

**P34 PANEL APU/EXTERNAL  
POWER SHIELD**

D280N032

**91-02-22**

Page 2

Jan 21/2005


**91-02-22**

Page 2

Jan 21/2005

-A


33

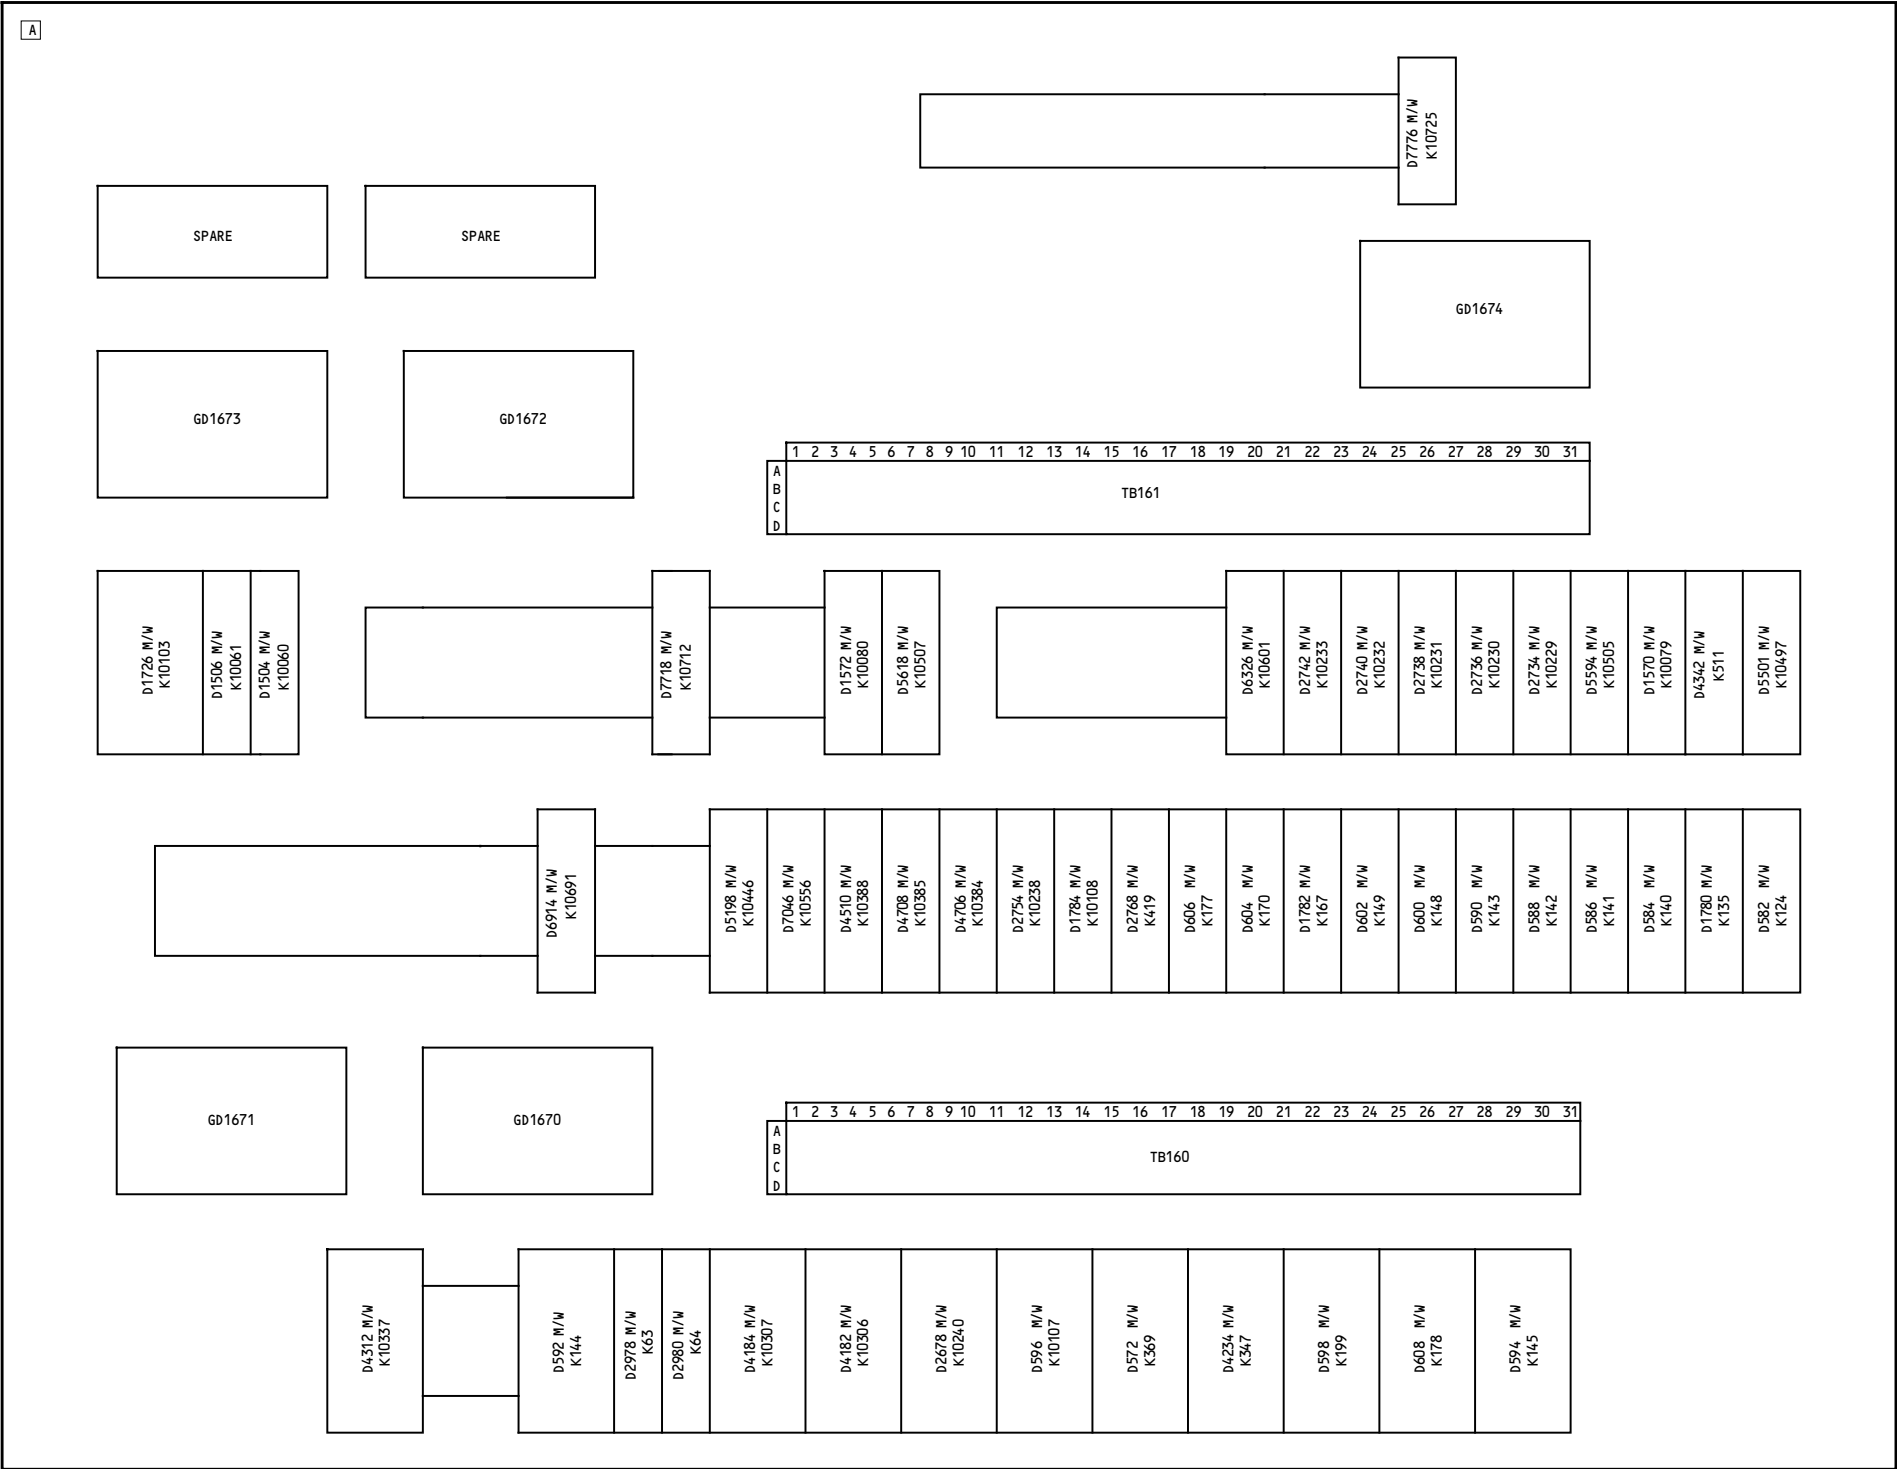


INTERNAL P36 - PLATE "A"




-A  
4

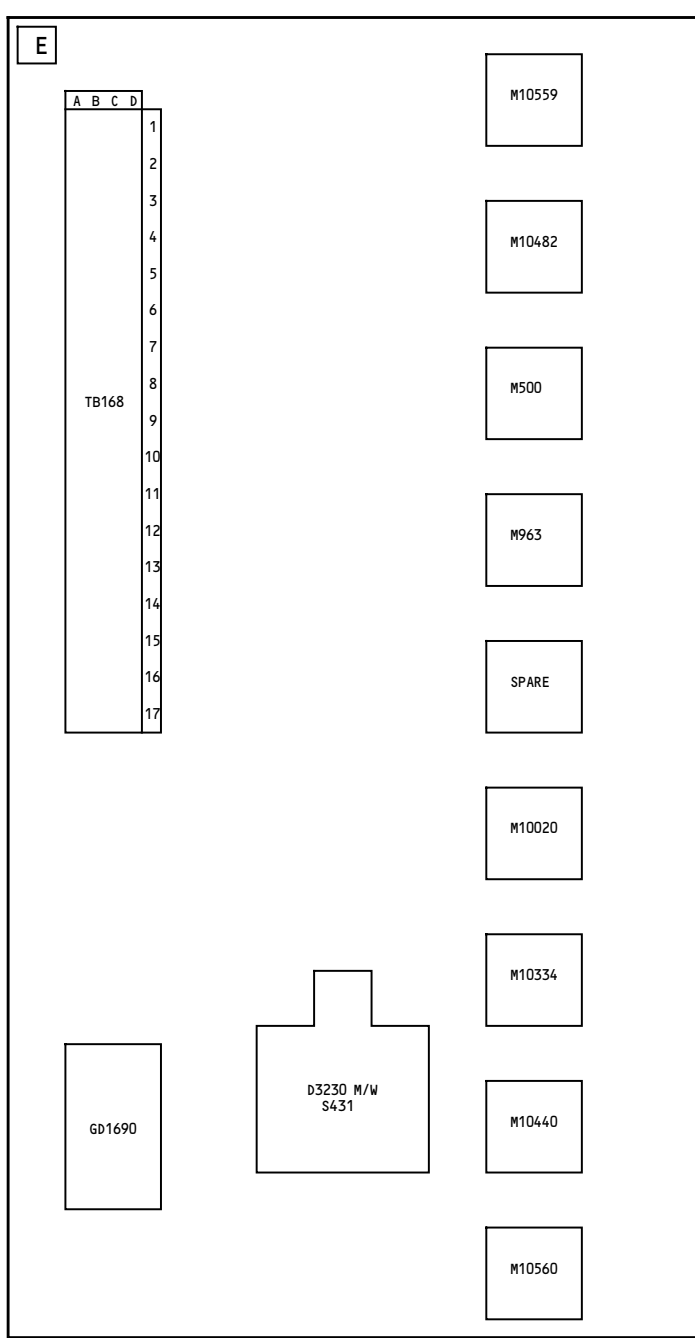

INTERNAL P36 - PLATE "E"

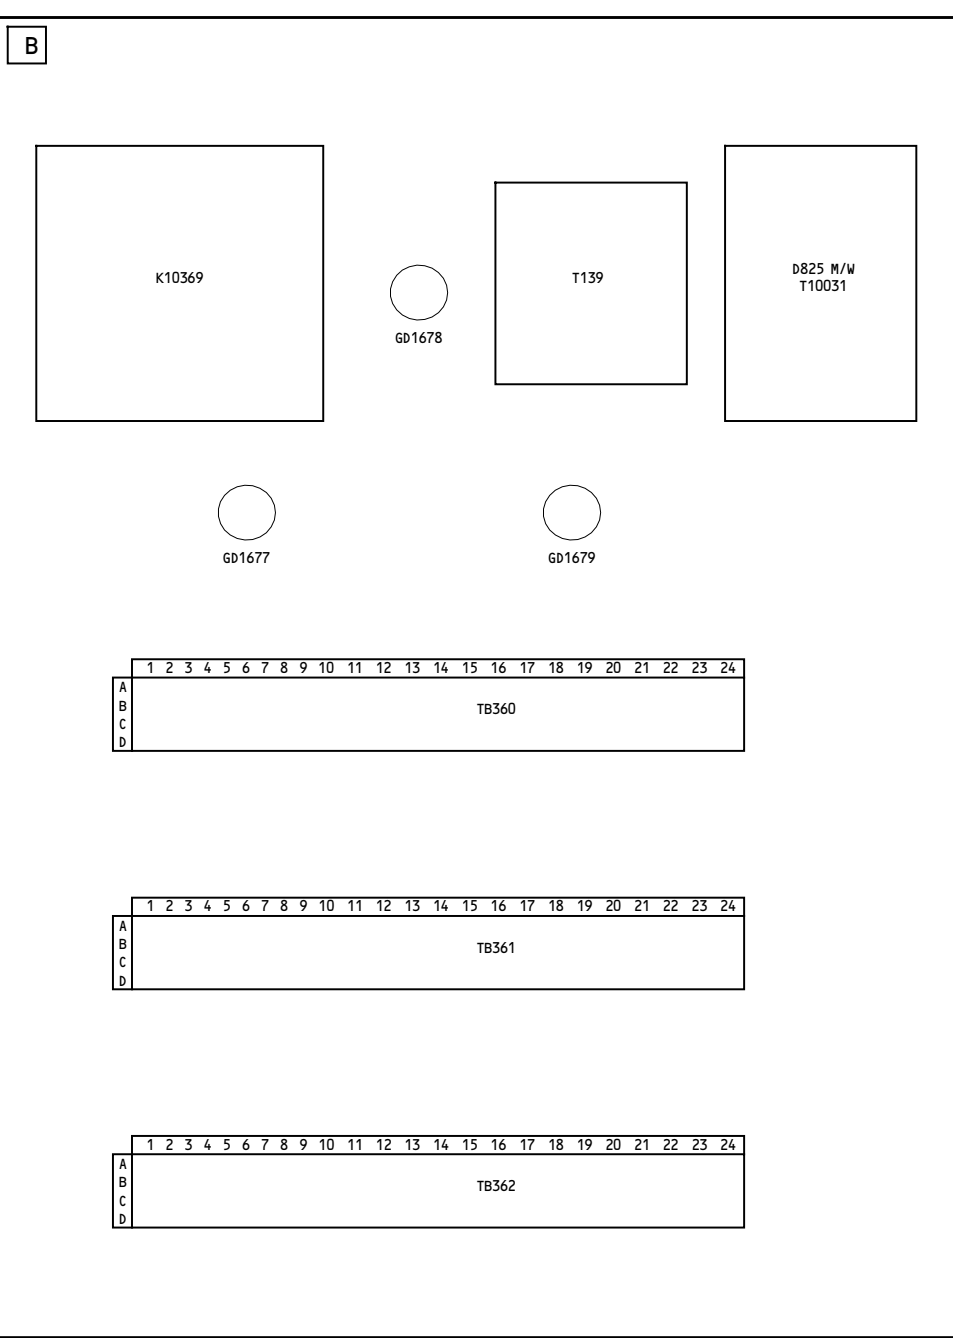


INTERNAL P36 - PLATE "B"

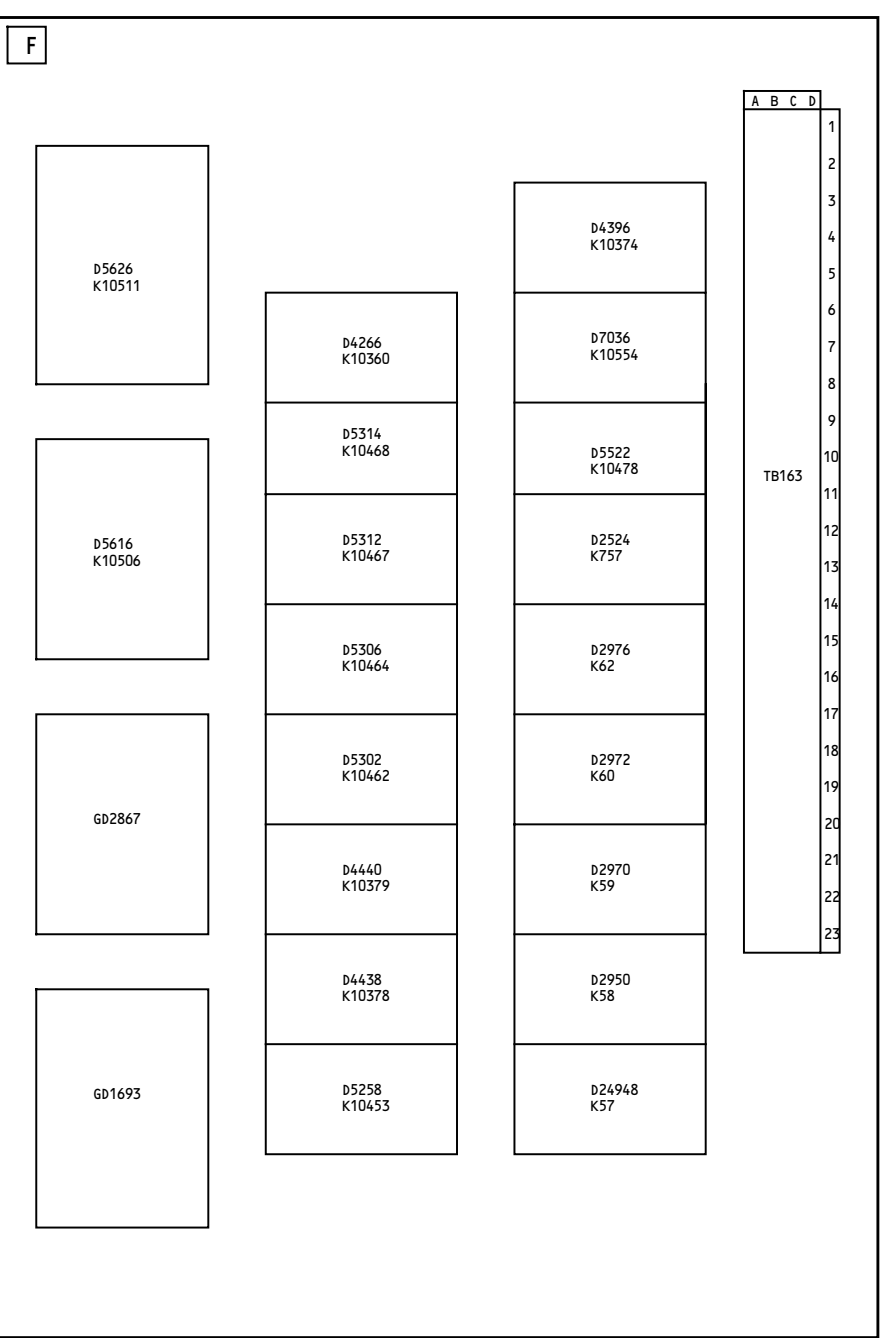


INTERNAL P36 - PLATE "F"

-A  
4

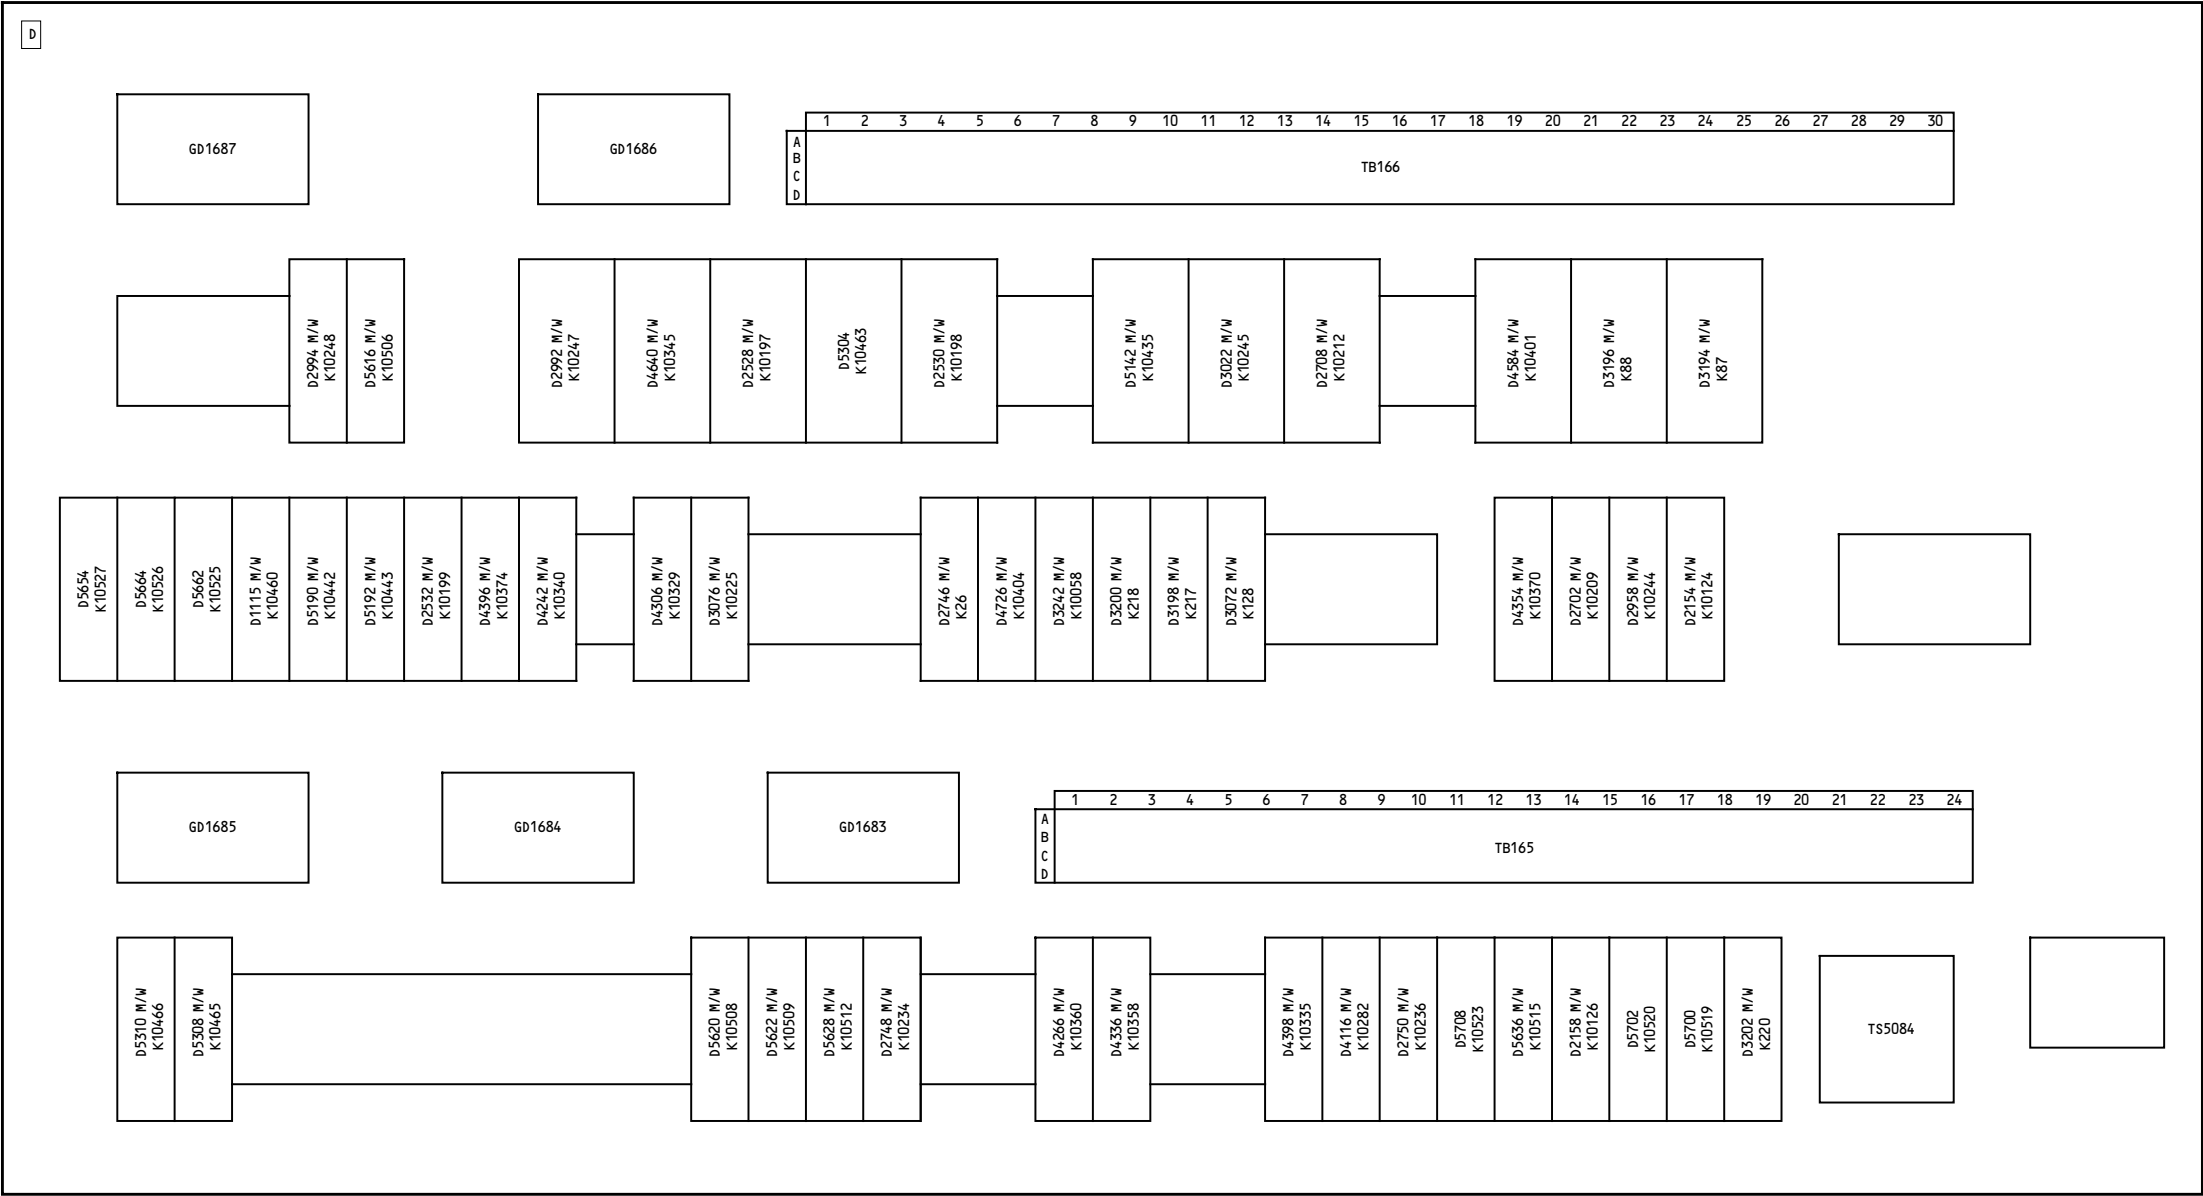


11

A

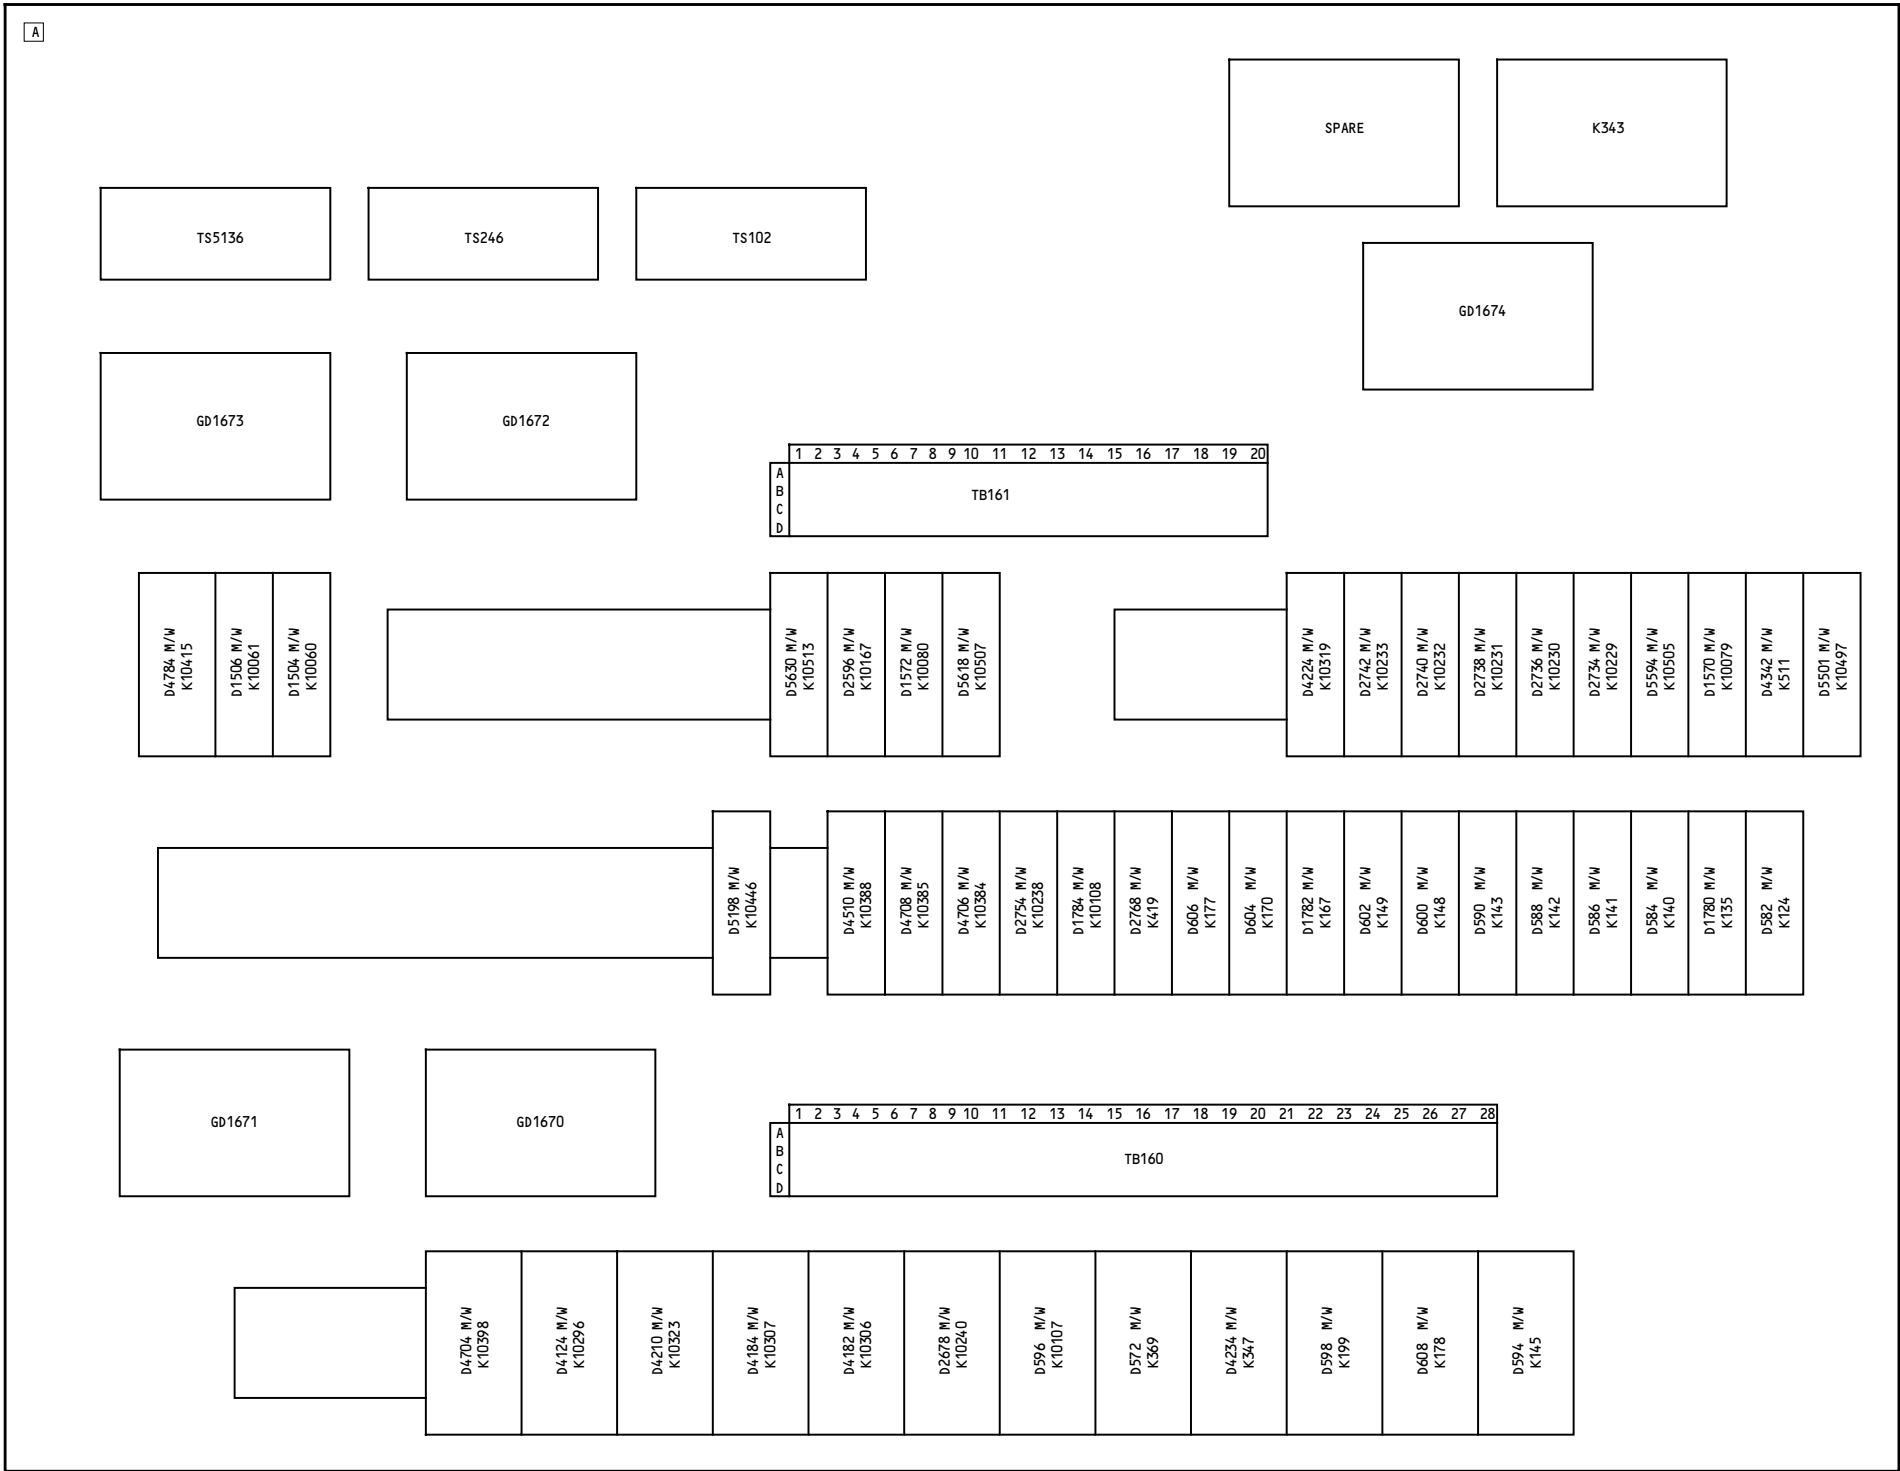


INTERNAL P36 - PLATE "A"


11

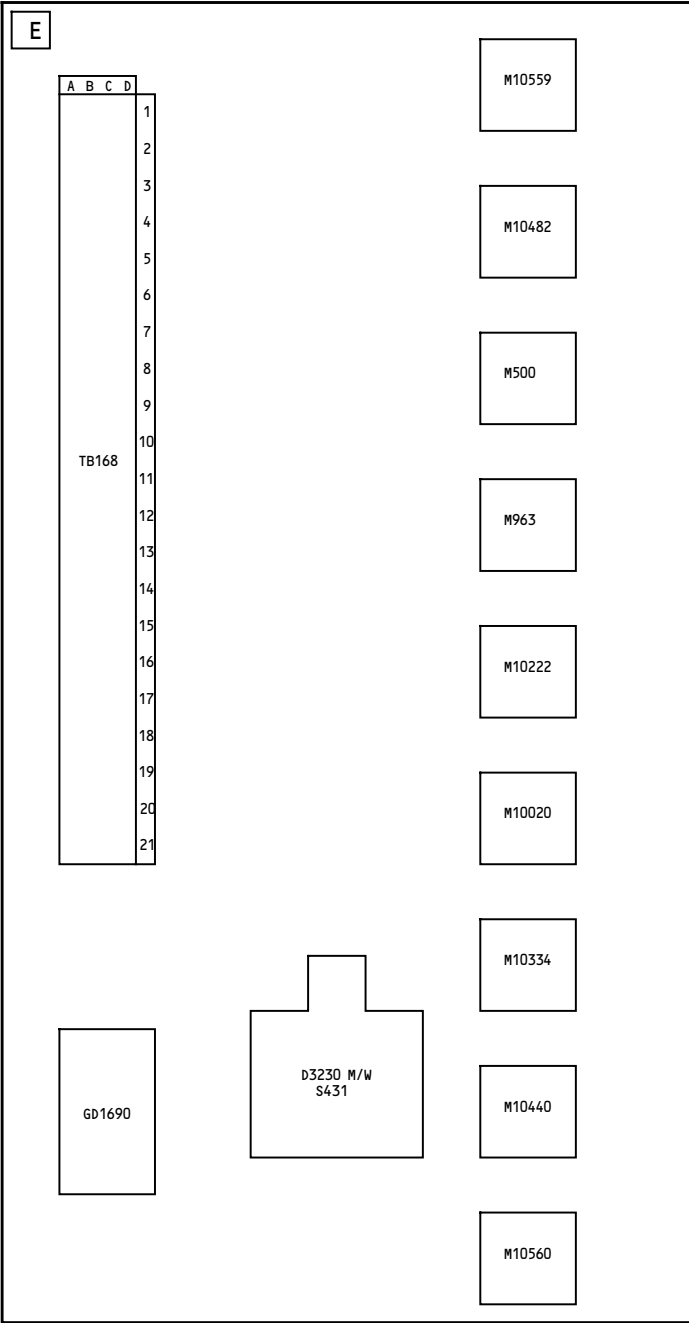

INTERNAL P36 – PLATE "E"

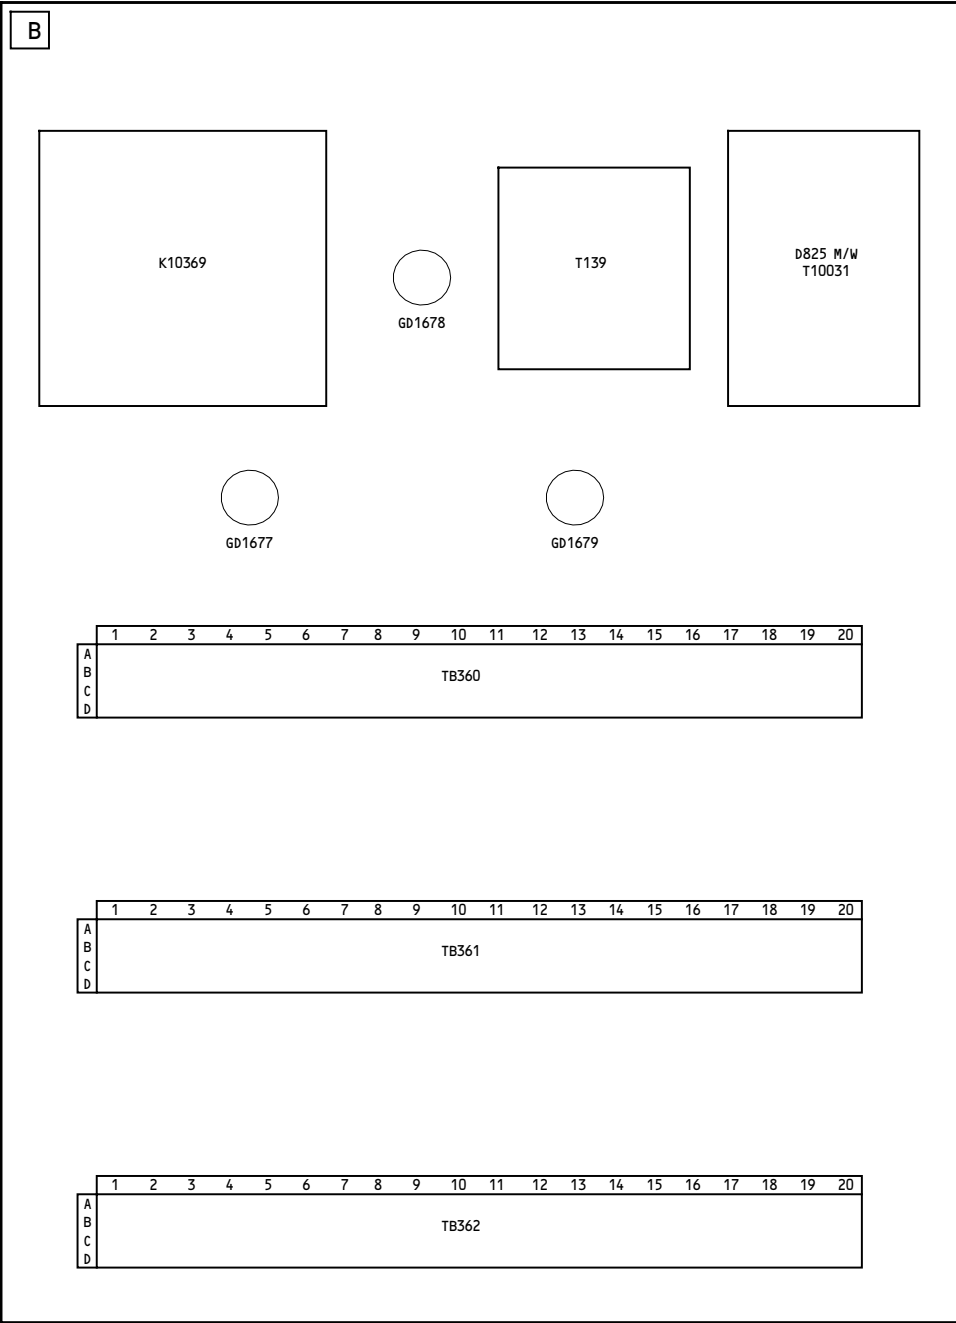

INTERNAL P36 – PLATE "B"

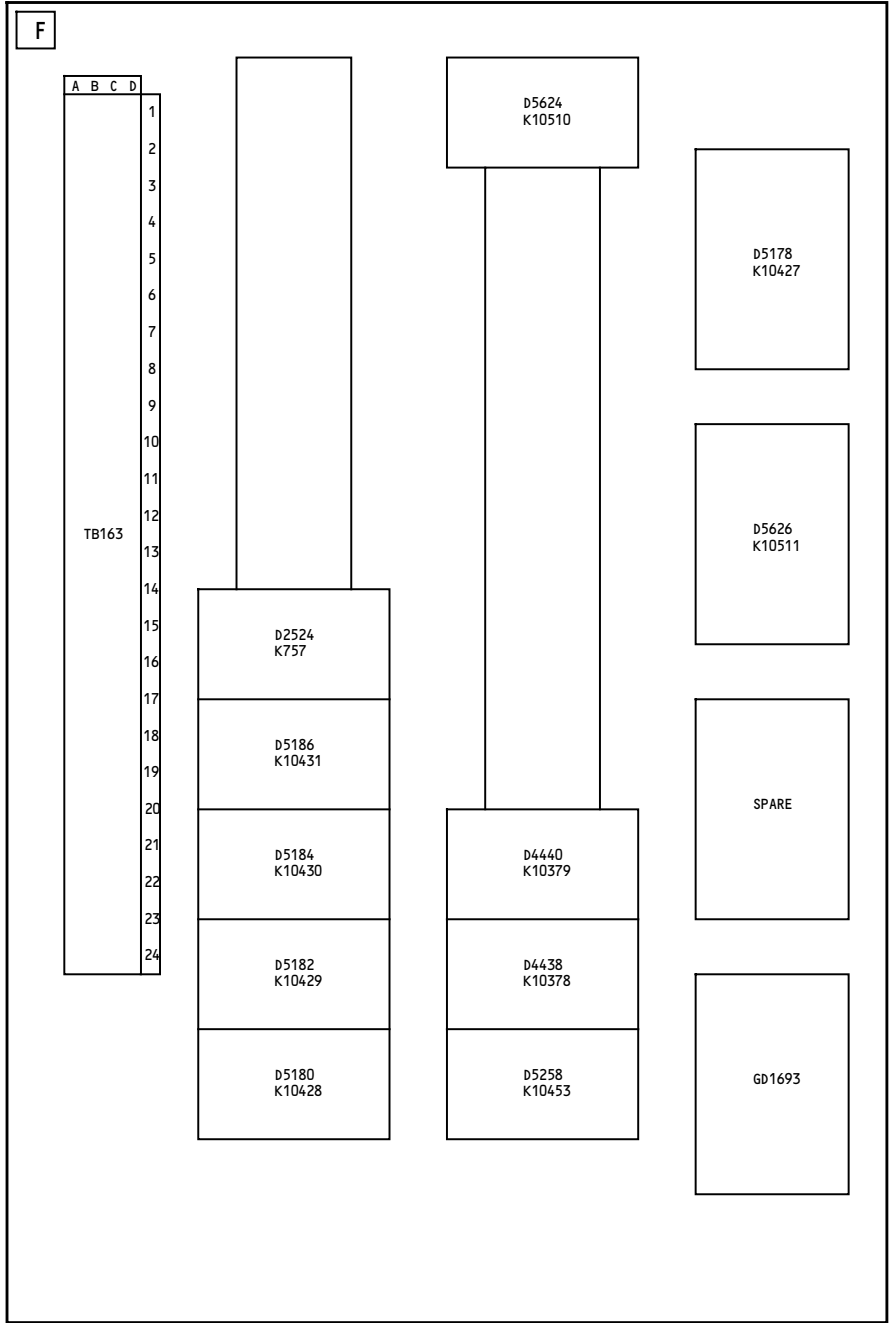


INTERNAL P36 – PLATE "F"



-A

4

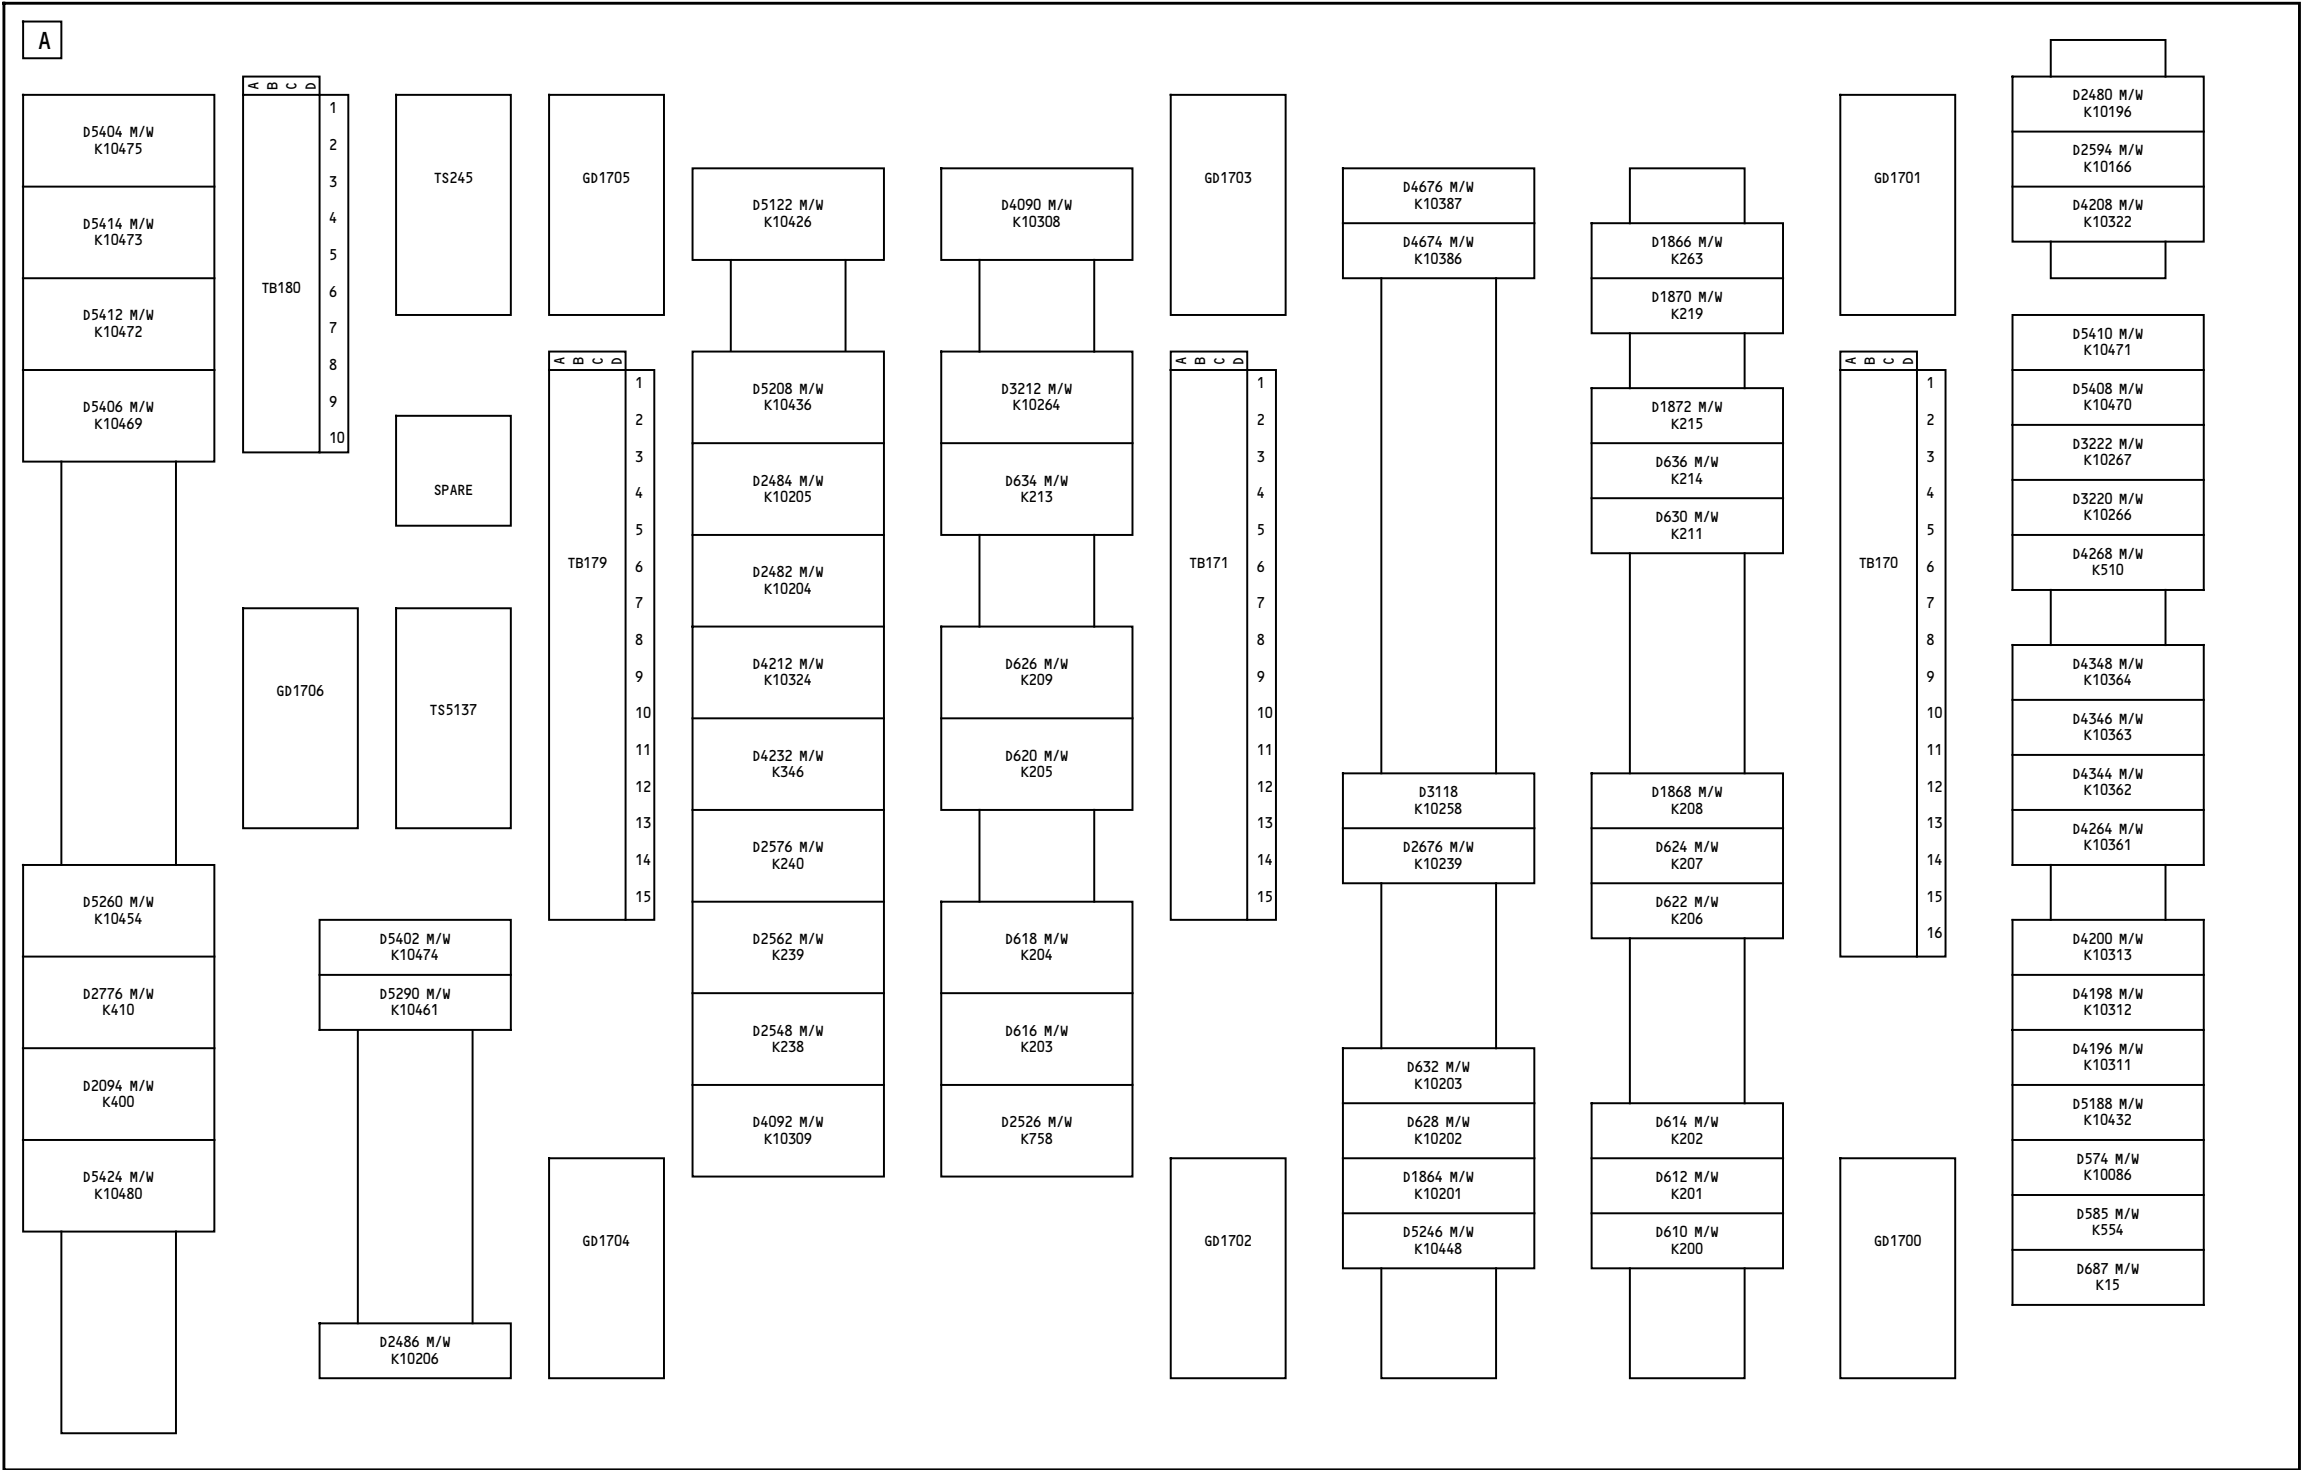

001-099

P37 PANEL MISCELLANEOUS  
ELECTRICAL EQUIPMENT -  
RIGHT

D280N032


91-02-26

Page 1  
Sheet 1  
Jan 21/2005

91-02-26

Page 1  
Sheet 1  
Jan 21/2005

-A  
4

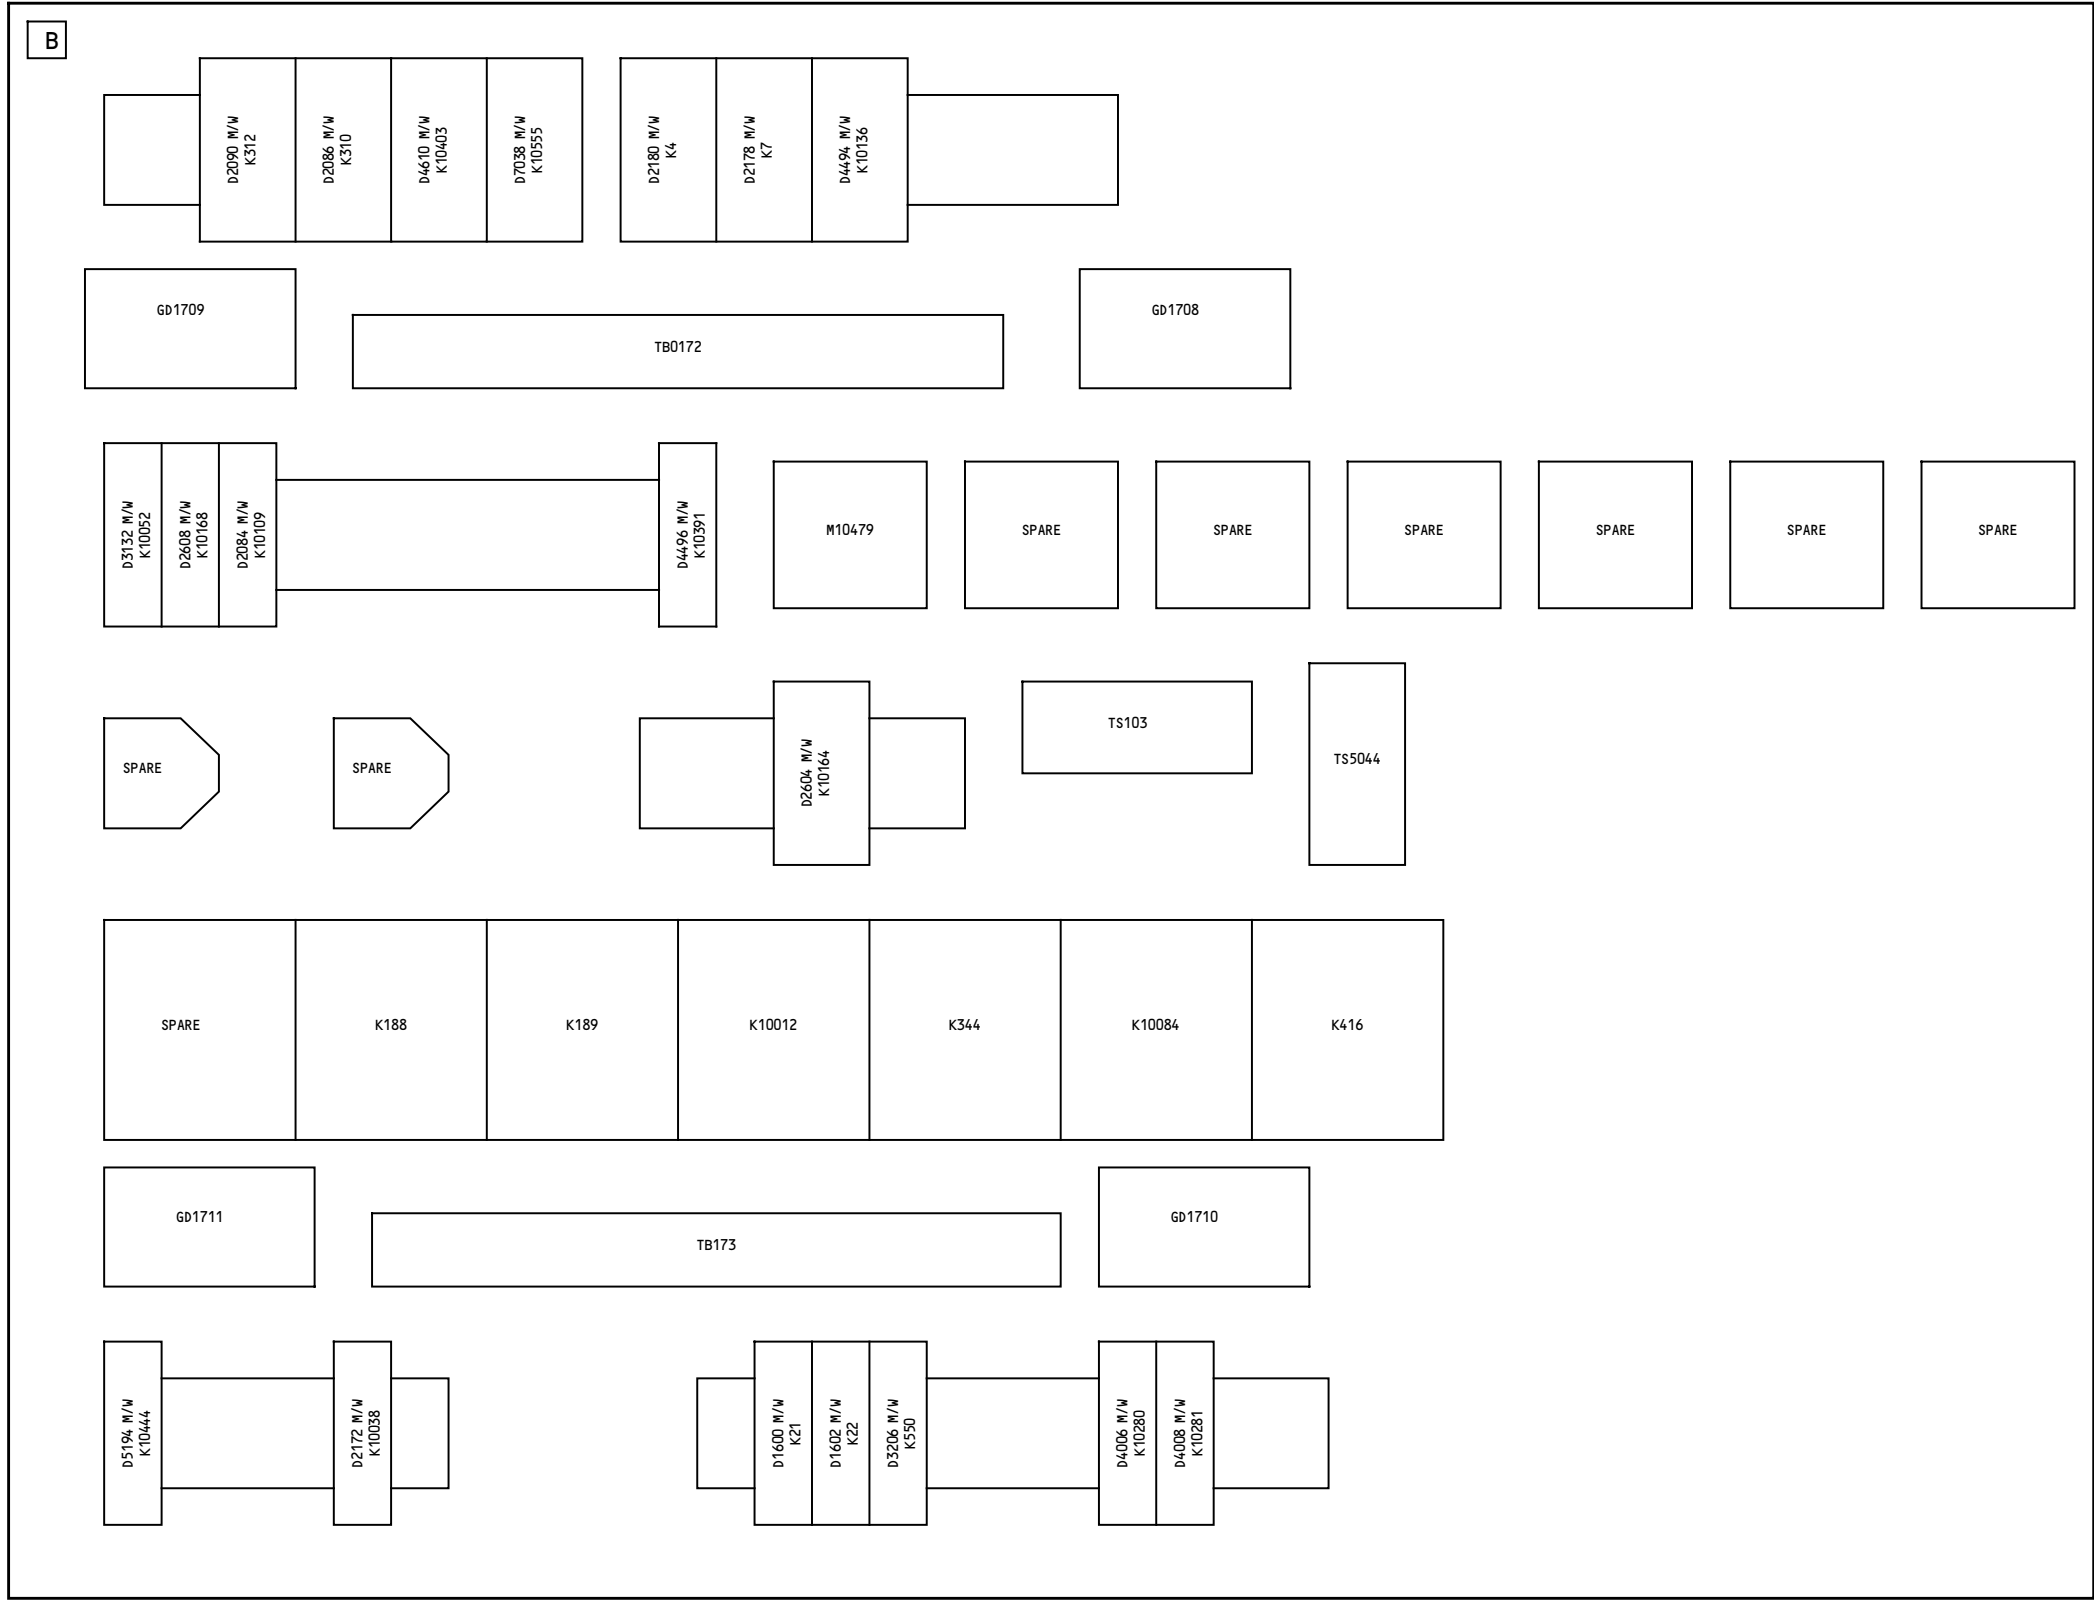

INTERNAL P37-PLATE "B"

001-099

P37 PANEL MISCELLANEOUS  
ELECTRICAL EQUIPMENT -  
RIGHT

D280N032


91-02-26

Page 1  
Sheet 2  
Jan 21/2005


91-02-26

Page 1  
Sheet 2  
Jan 21/2005

-A  
4

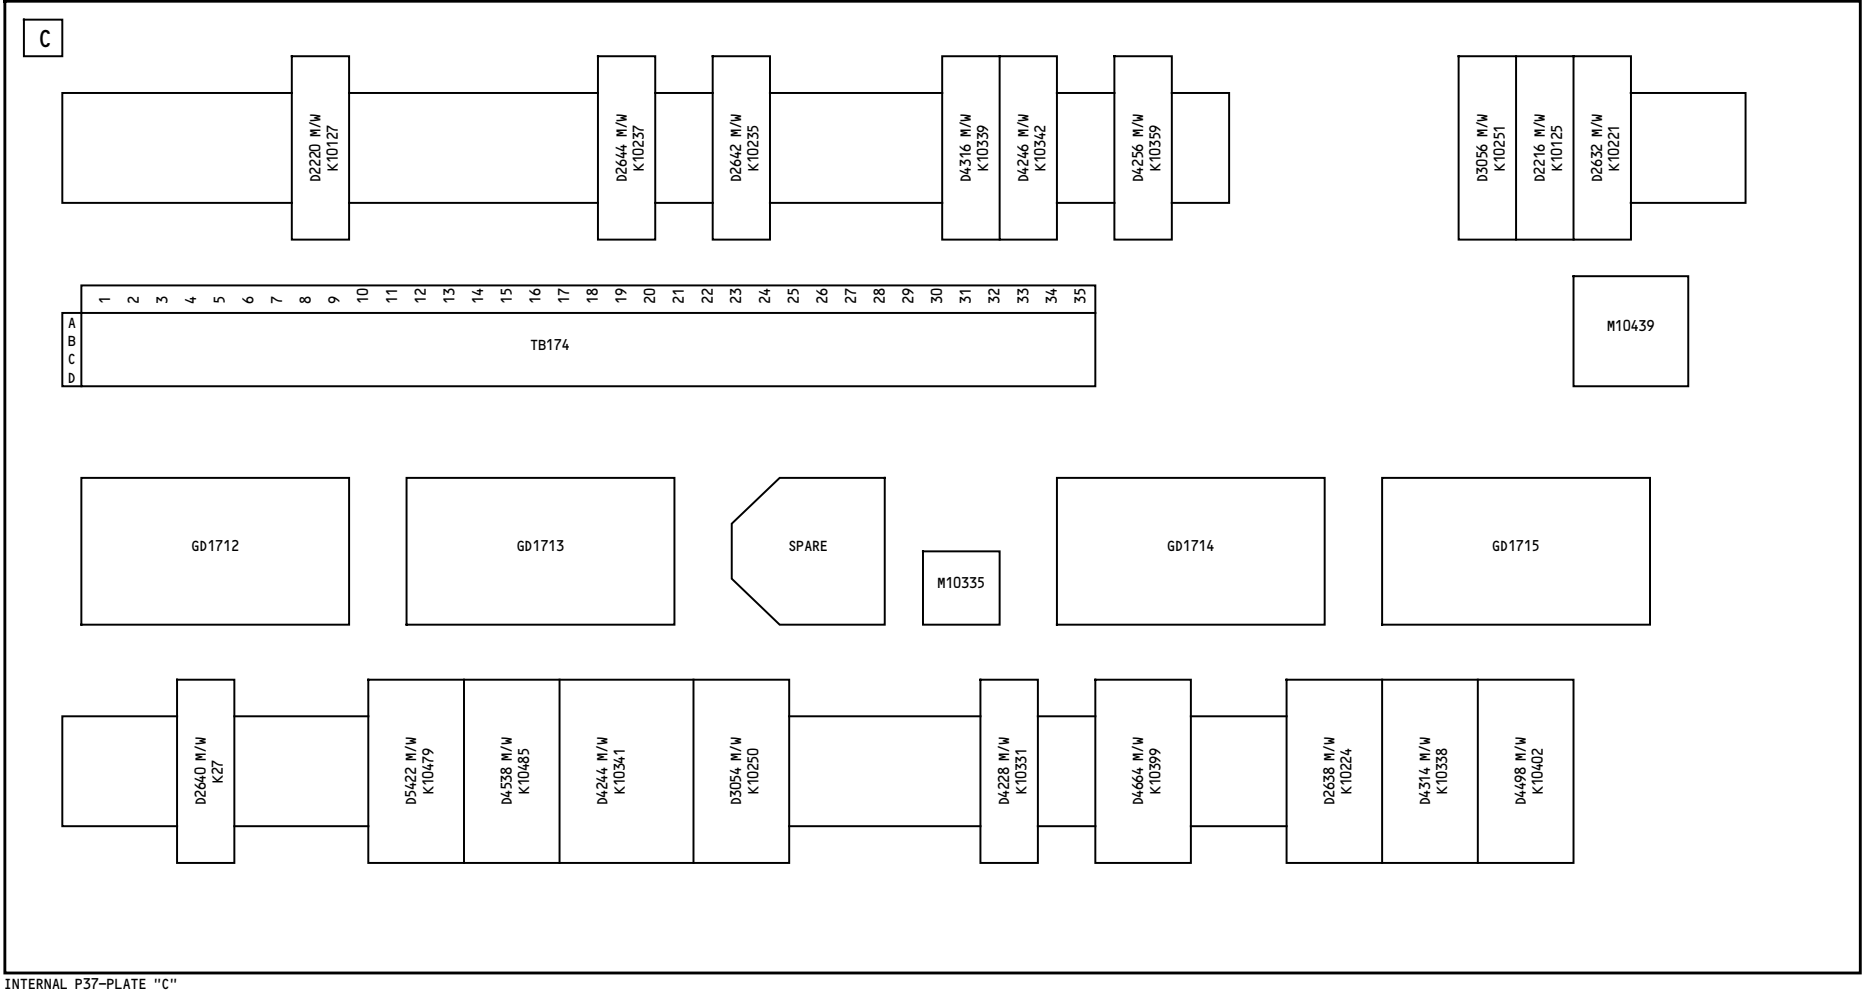



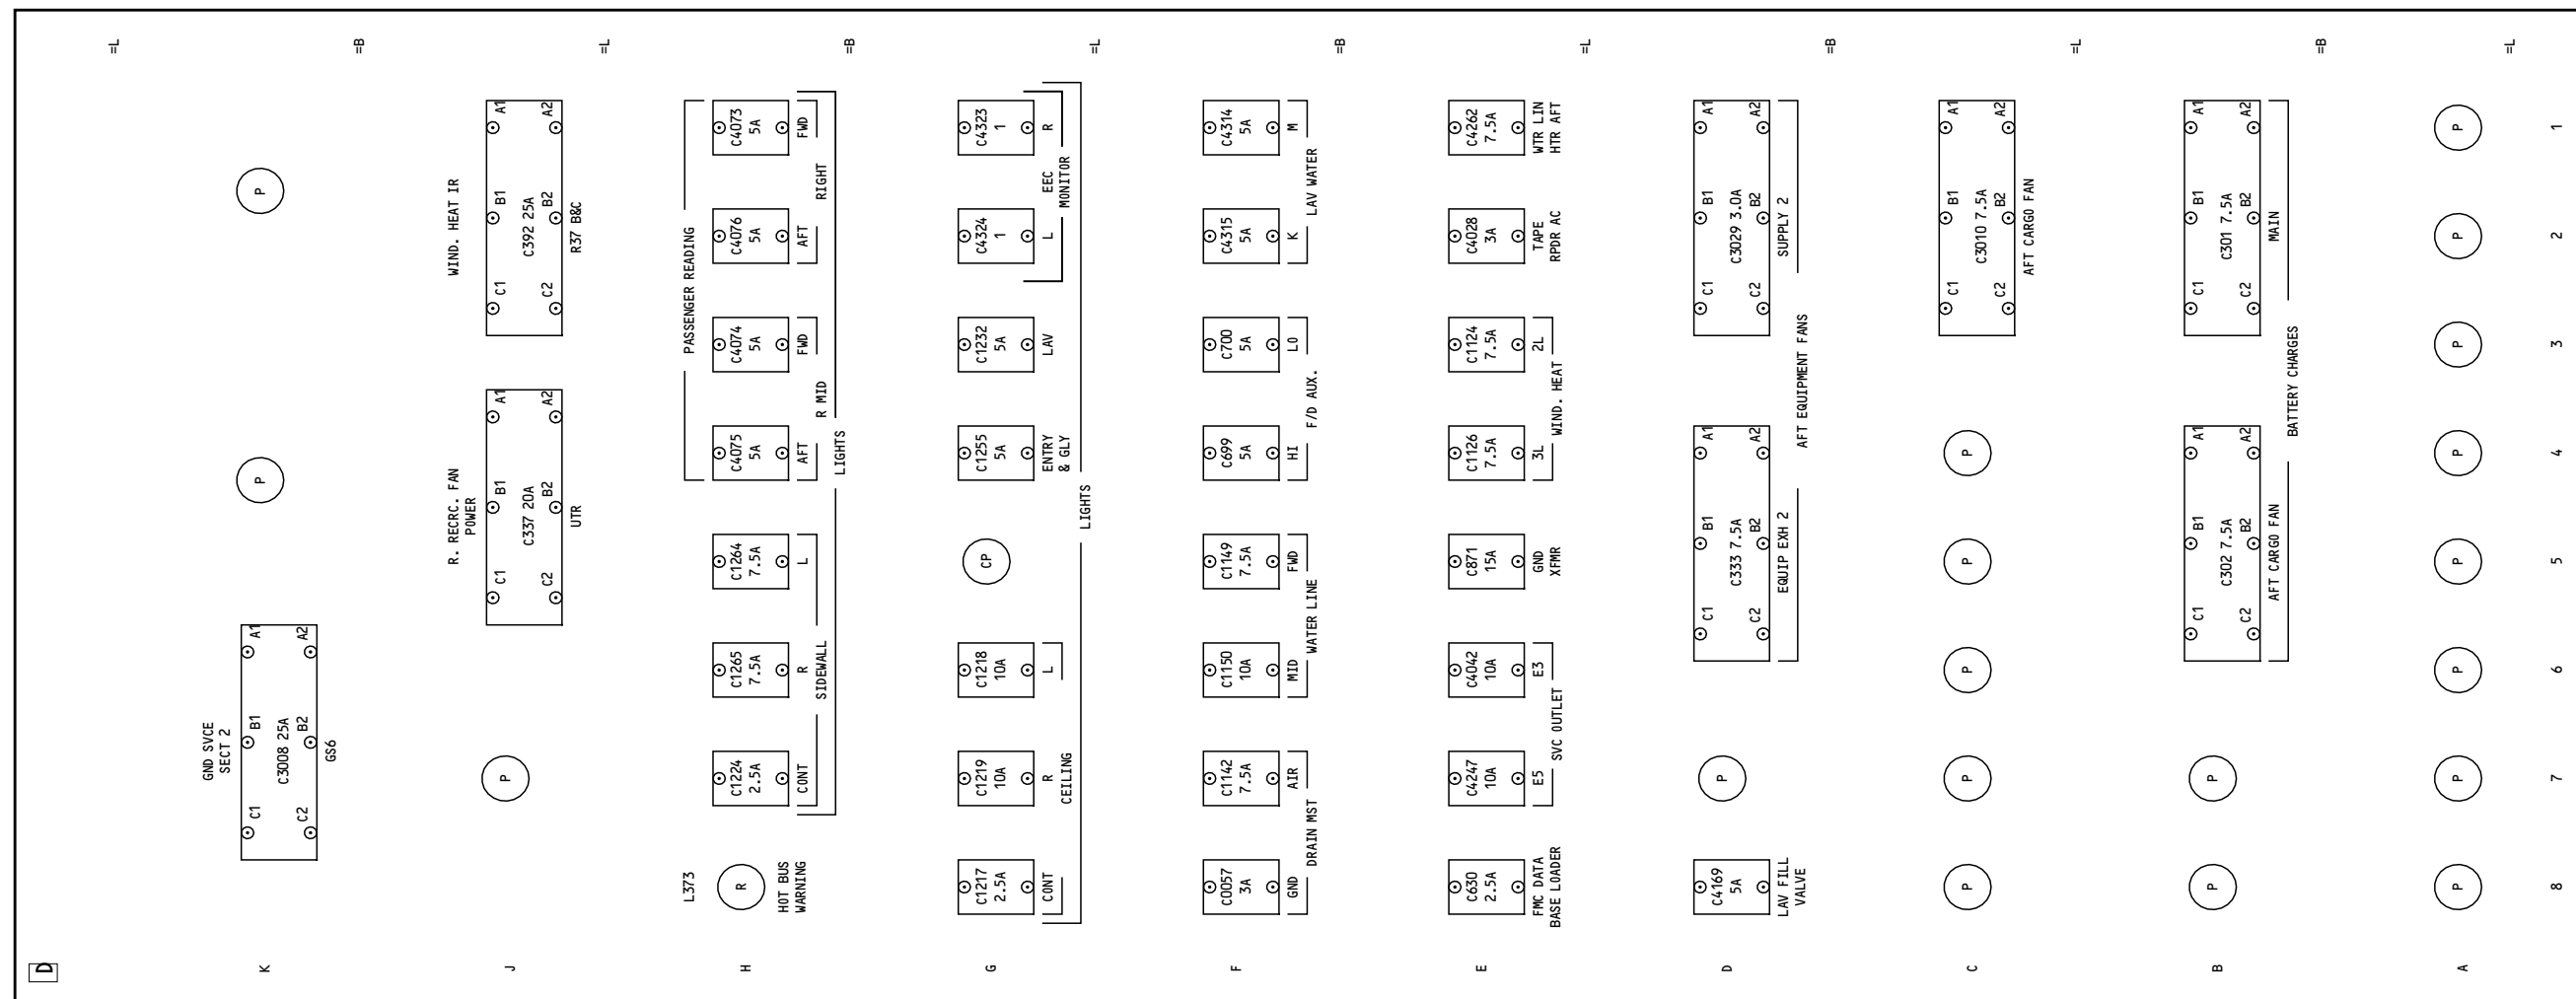

REAR VIEW

001-099

**P37 PANEL MISCELLANEOUS  
ELECTRICAL EQUIPMENT -  
RIGHT**

D280N032



**91-02-26**

Page 1  
Sheet 4  
Jan 21/2005


**91-02-26**

Page 1  
Sheet 4  
Jan 21/2005

 
-A  
4

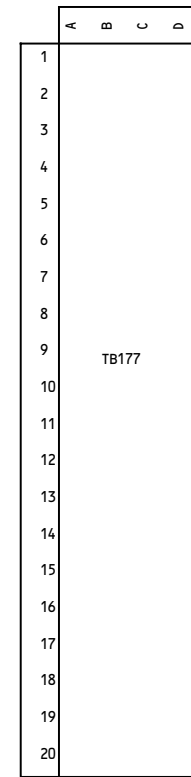


TB5071

 


TB5070

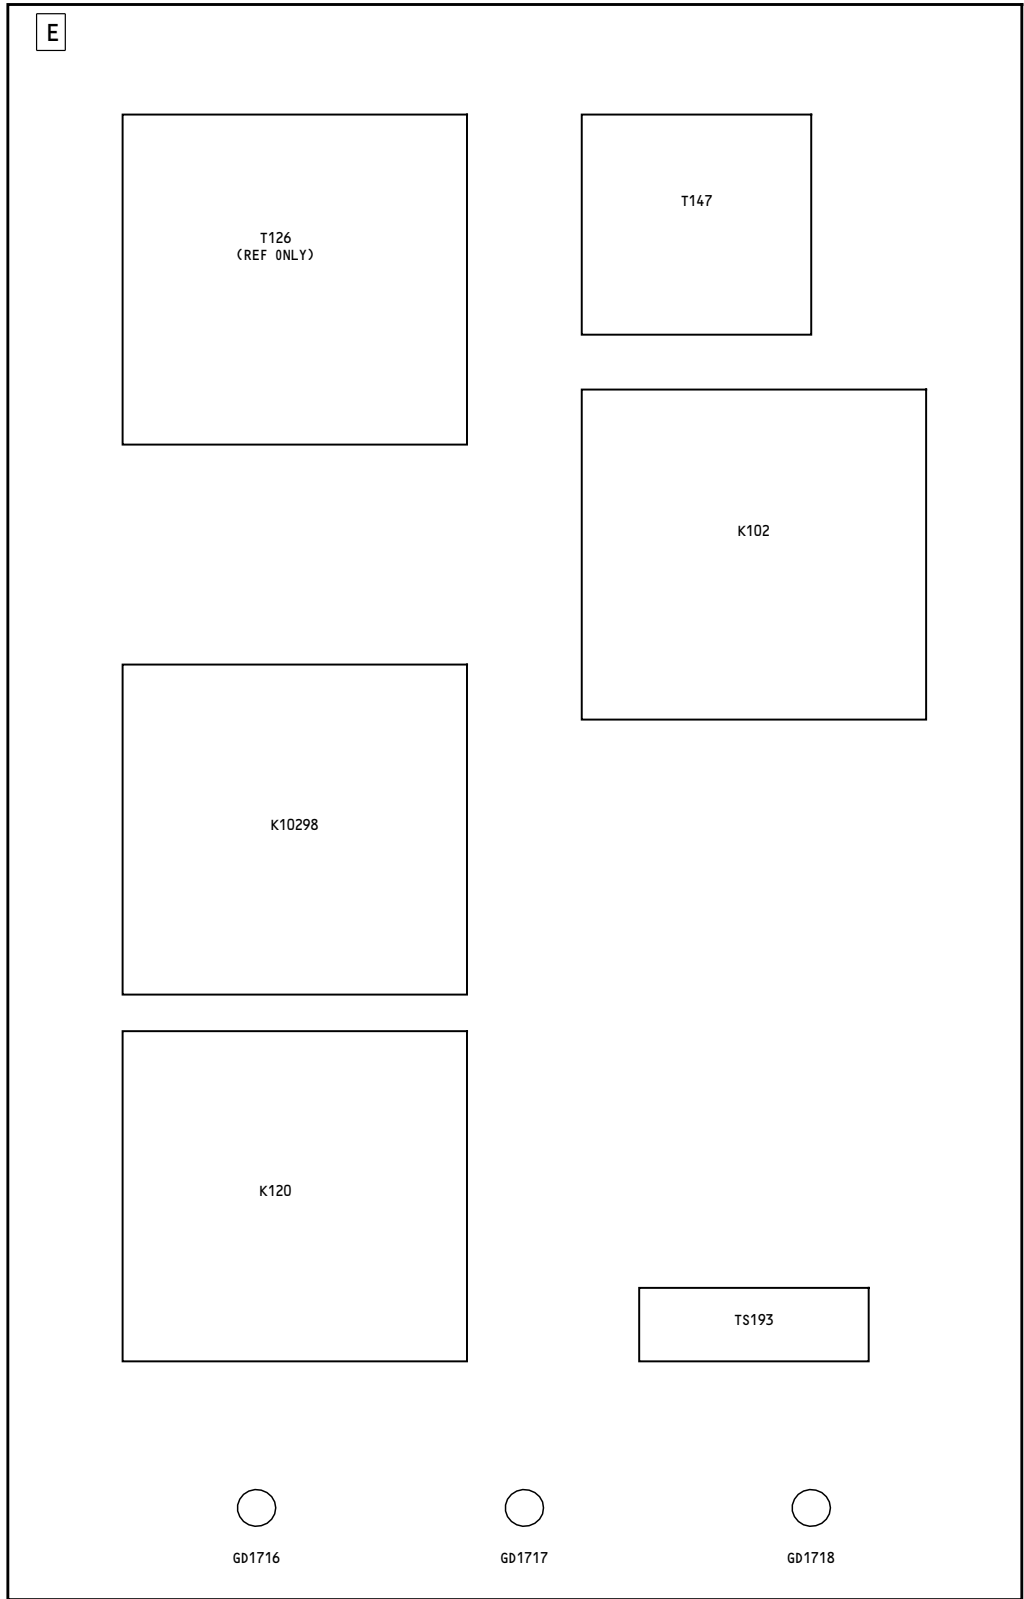



INTERNAL P37-PLATE "E"

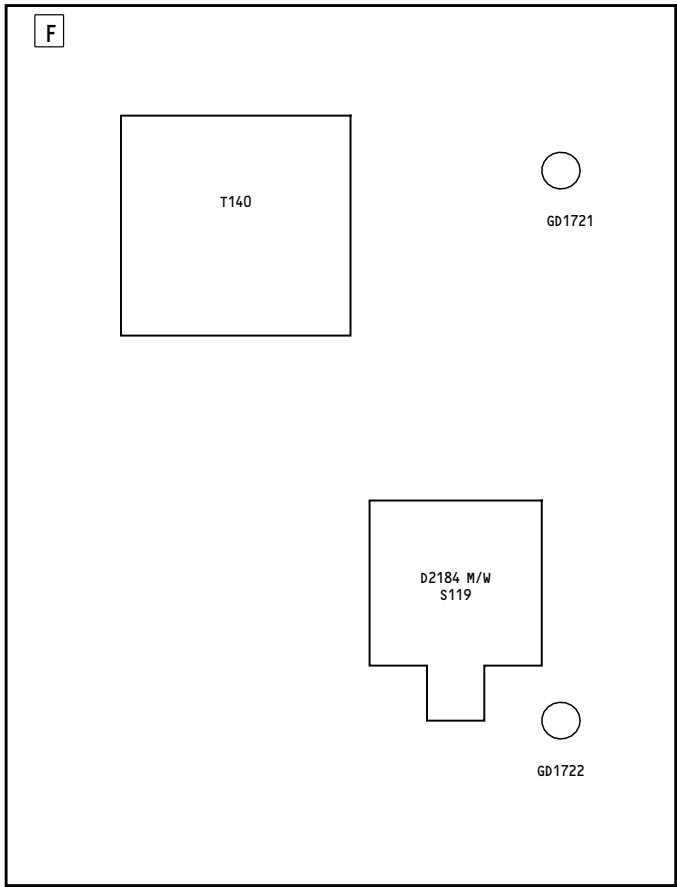

INTERNAL P37-PLATE "F"

 

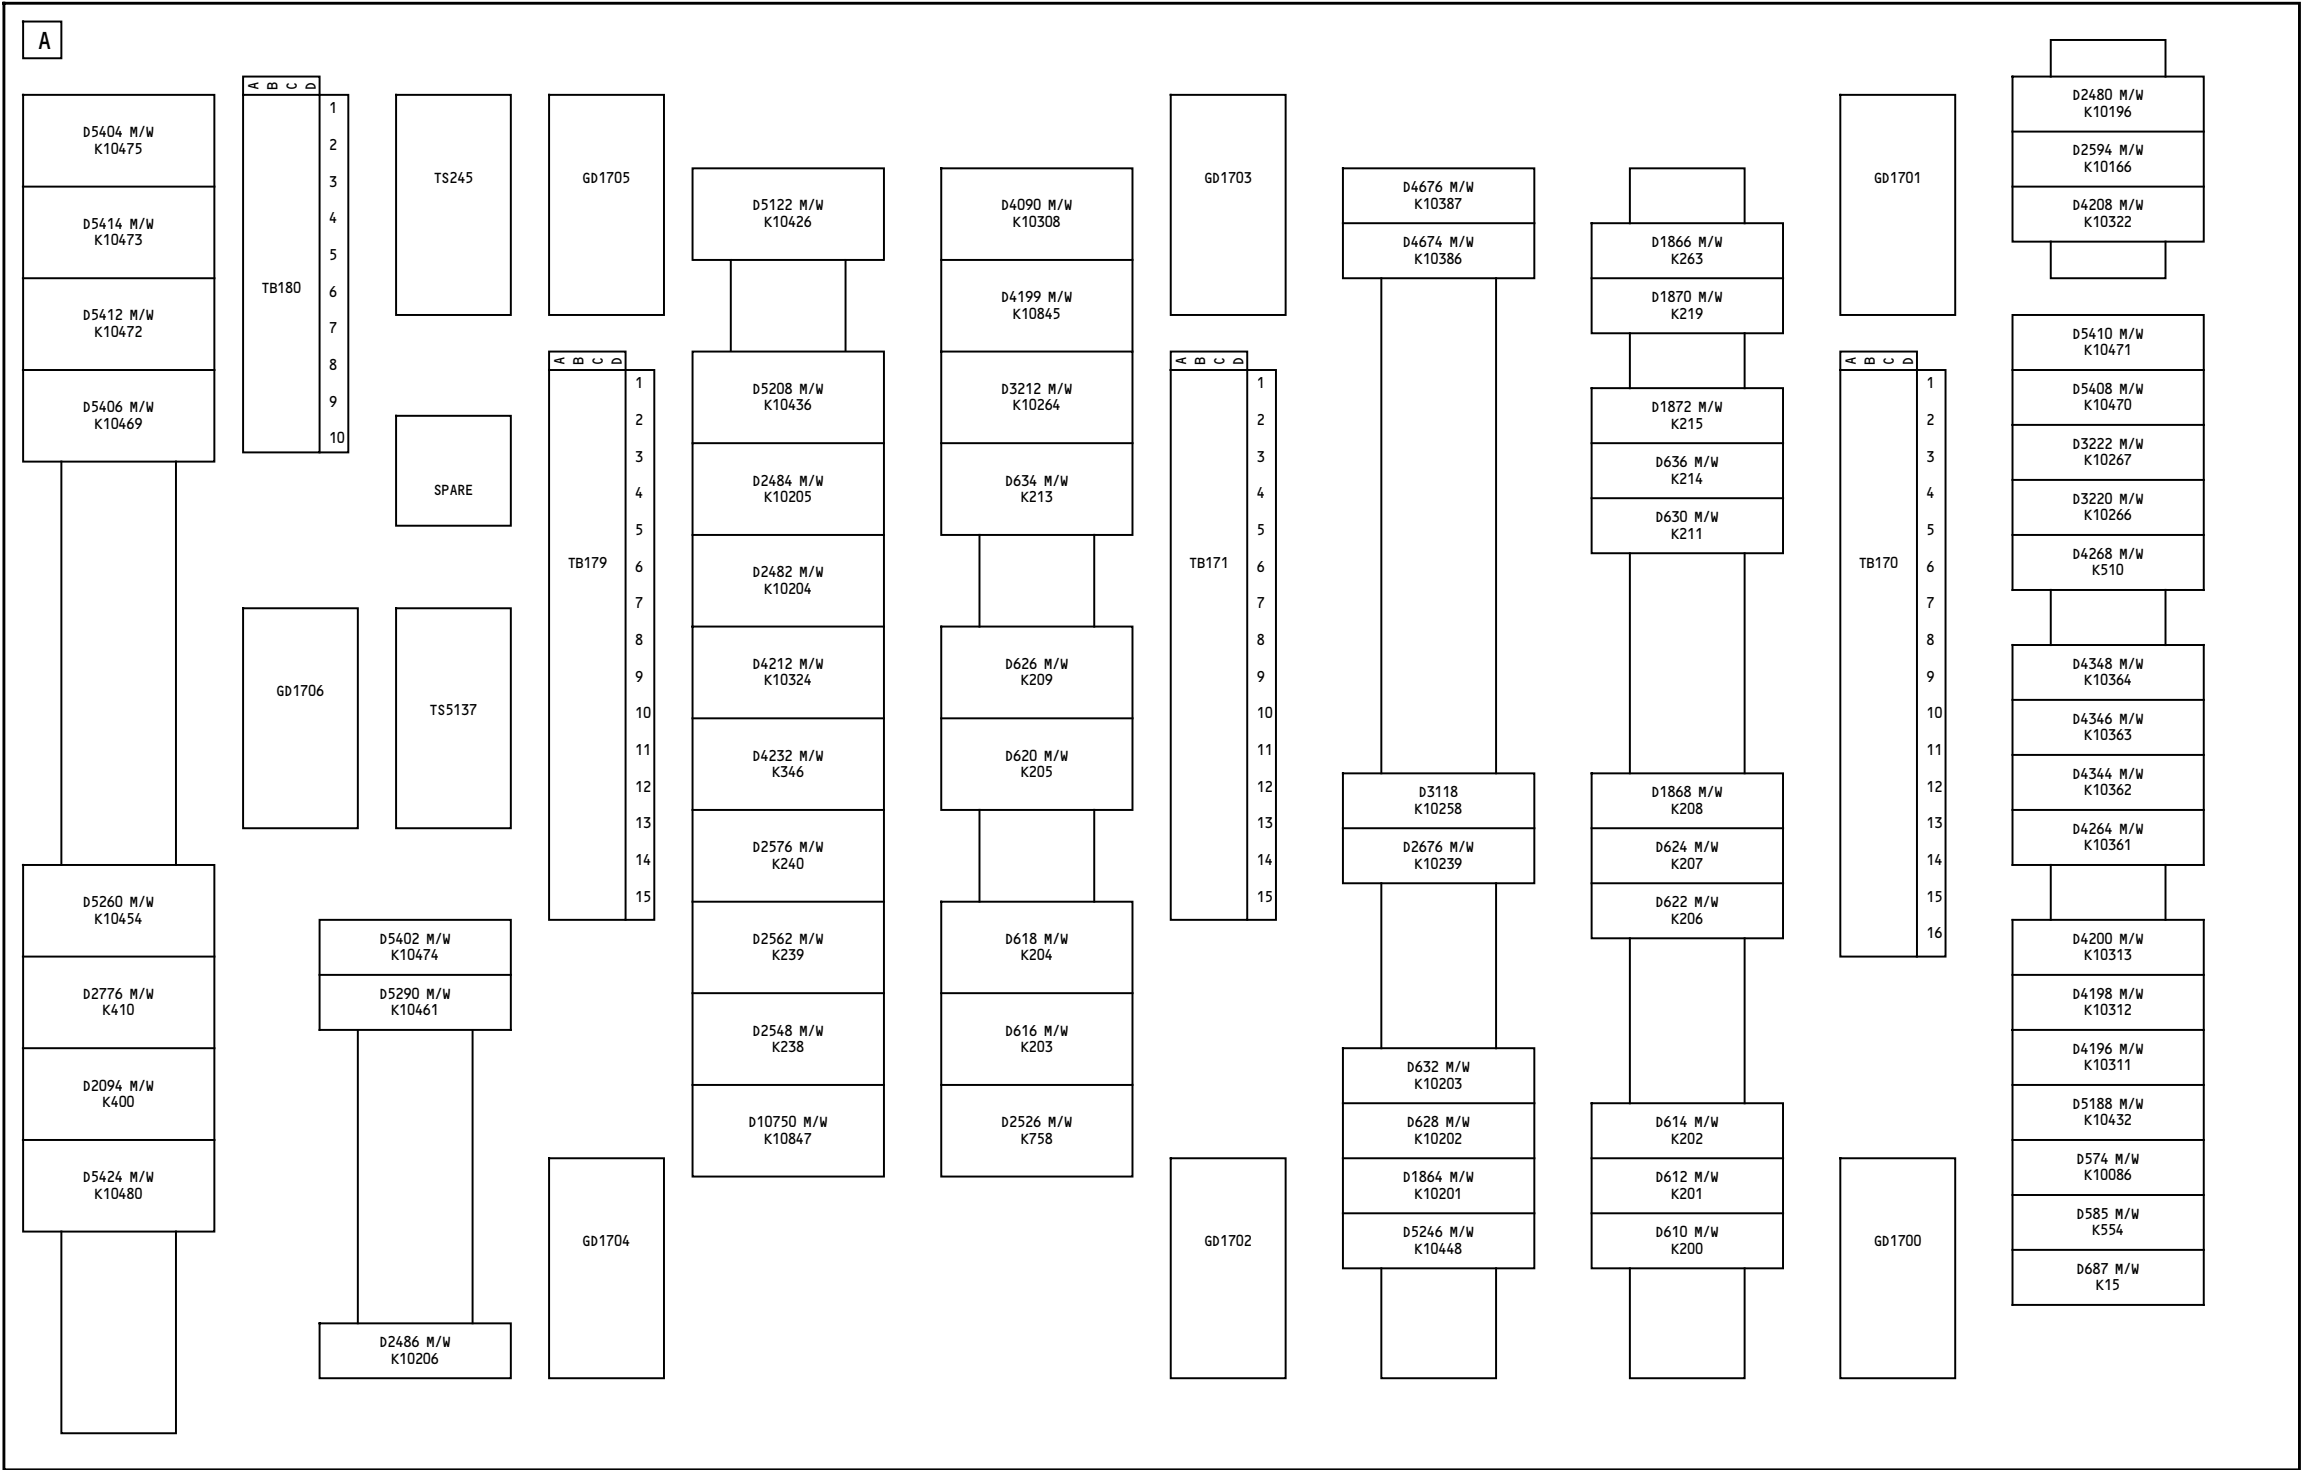

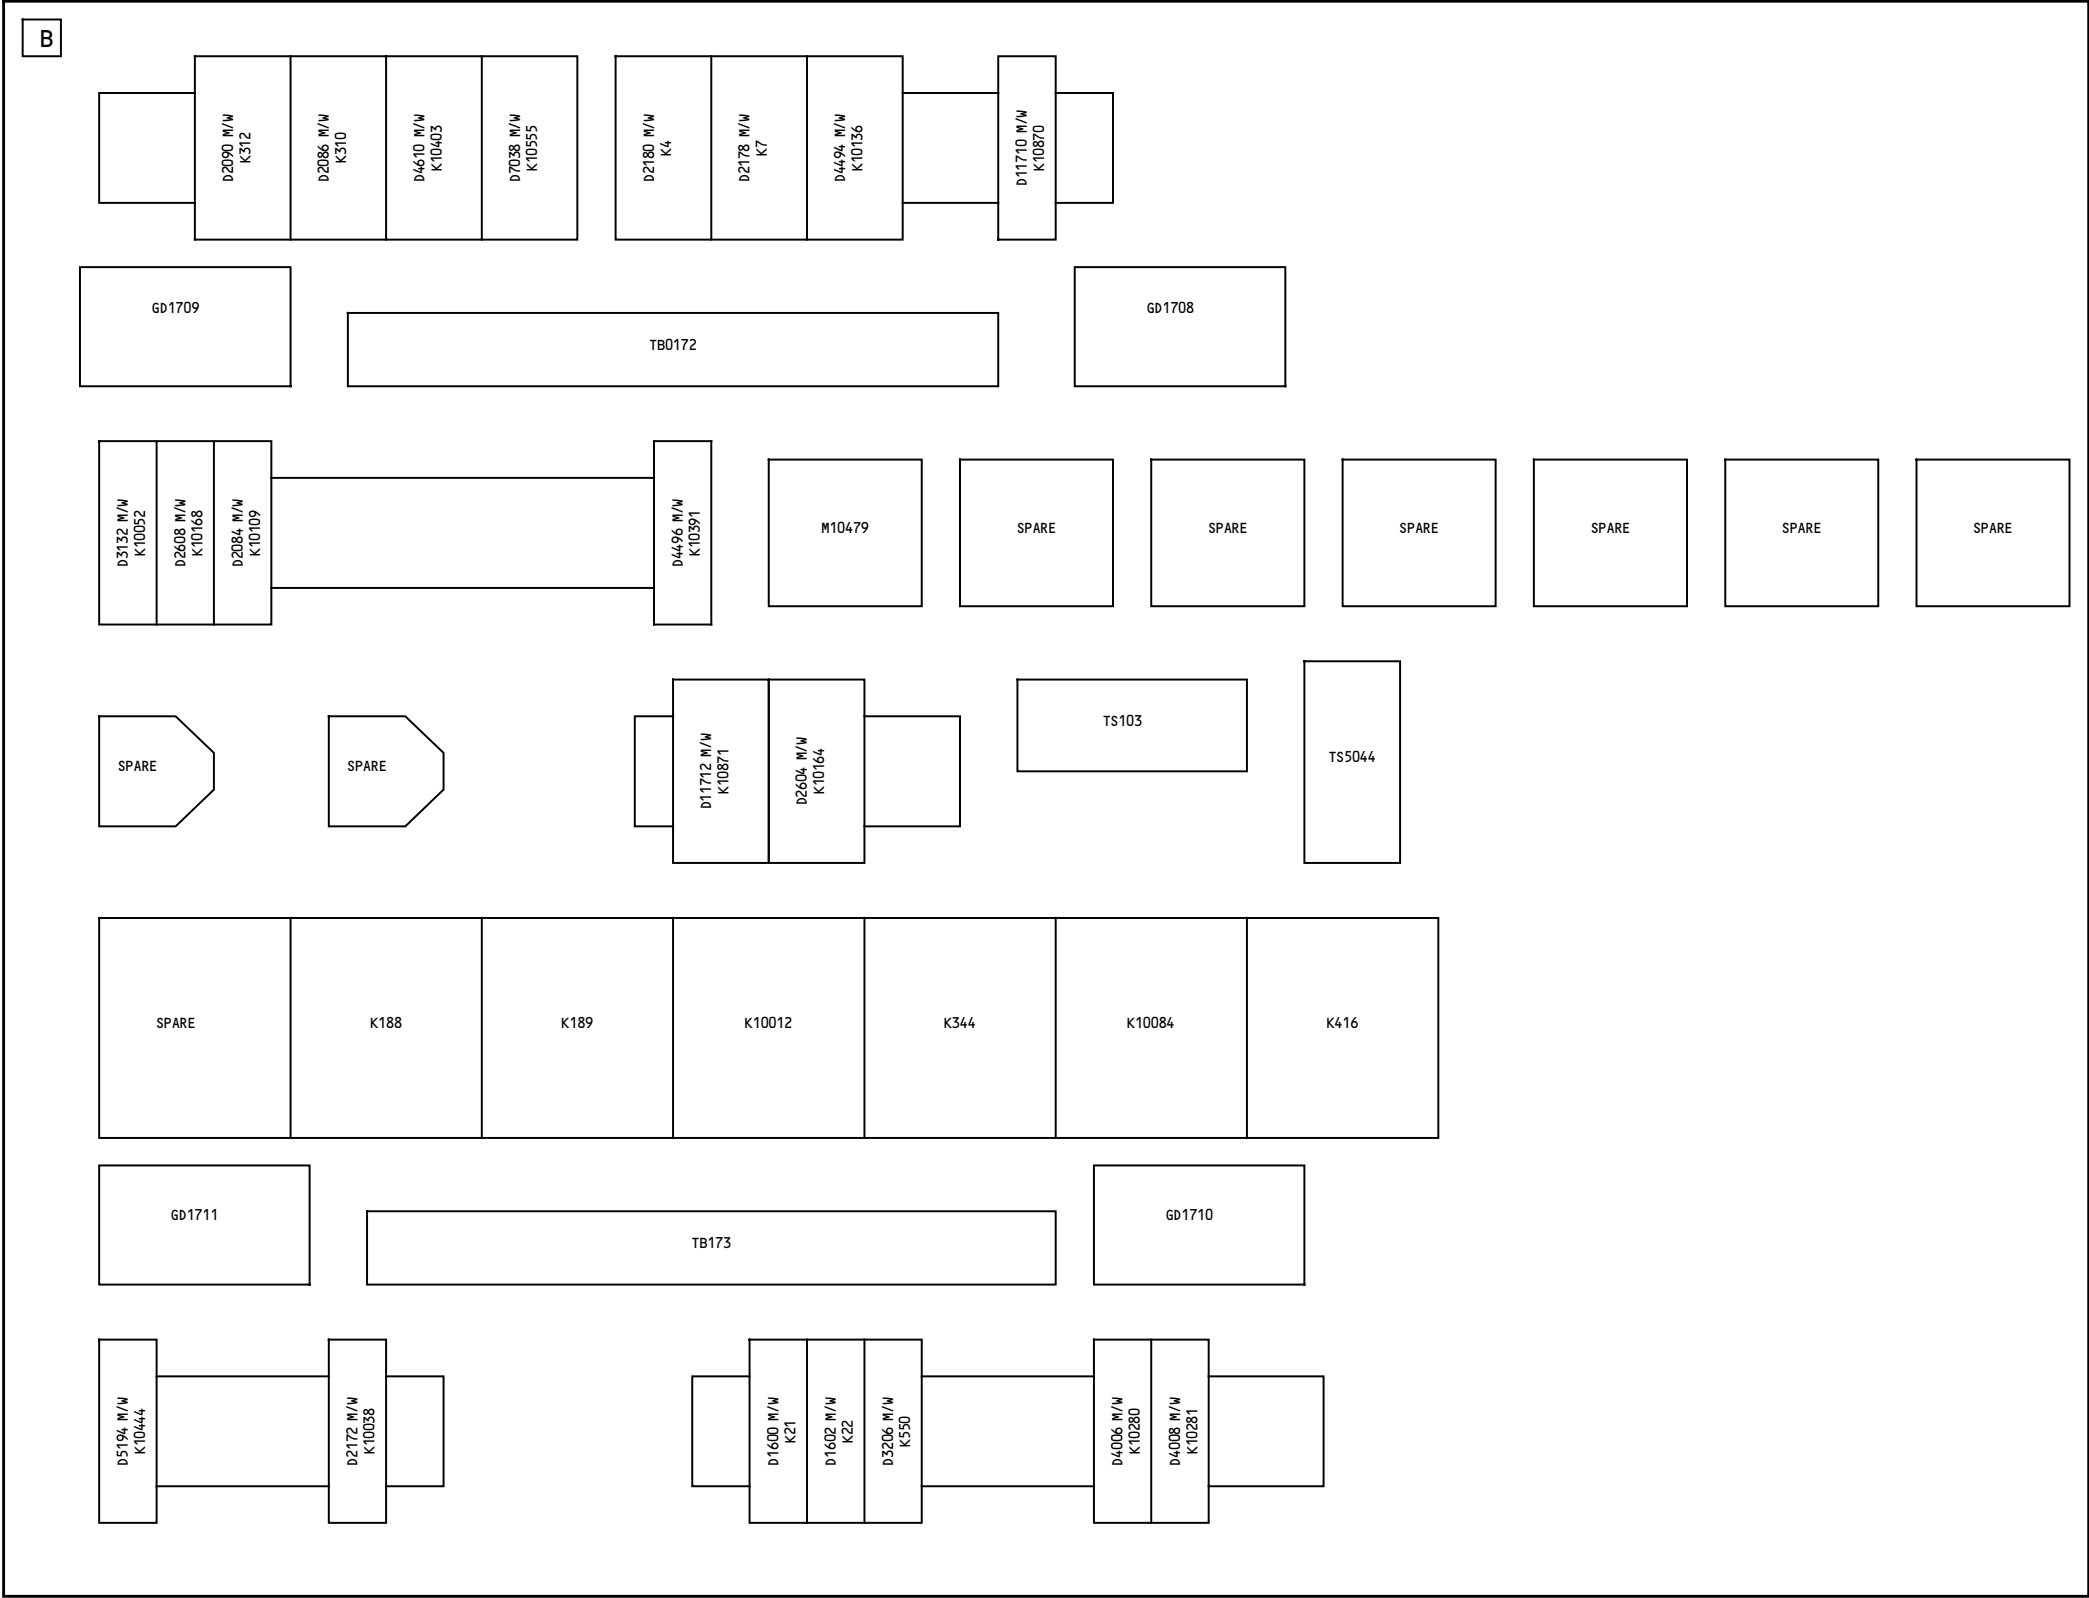

INTERNAL P37-PLATE "B"

001-011

**P37 PANEL MISCELLANEOUS  
ELECTRICAL EQUIPMENT -  
RIGHT**

D280N032


**91-02-26**


Page 1.1  
Sheet 2  
Oct 09/2008

Incorporates  
➤ 28A0081

**91-02-26**

Page 1.1  
Sheet 2  
Oct 09/2008

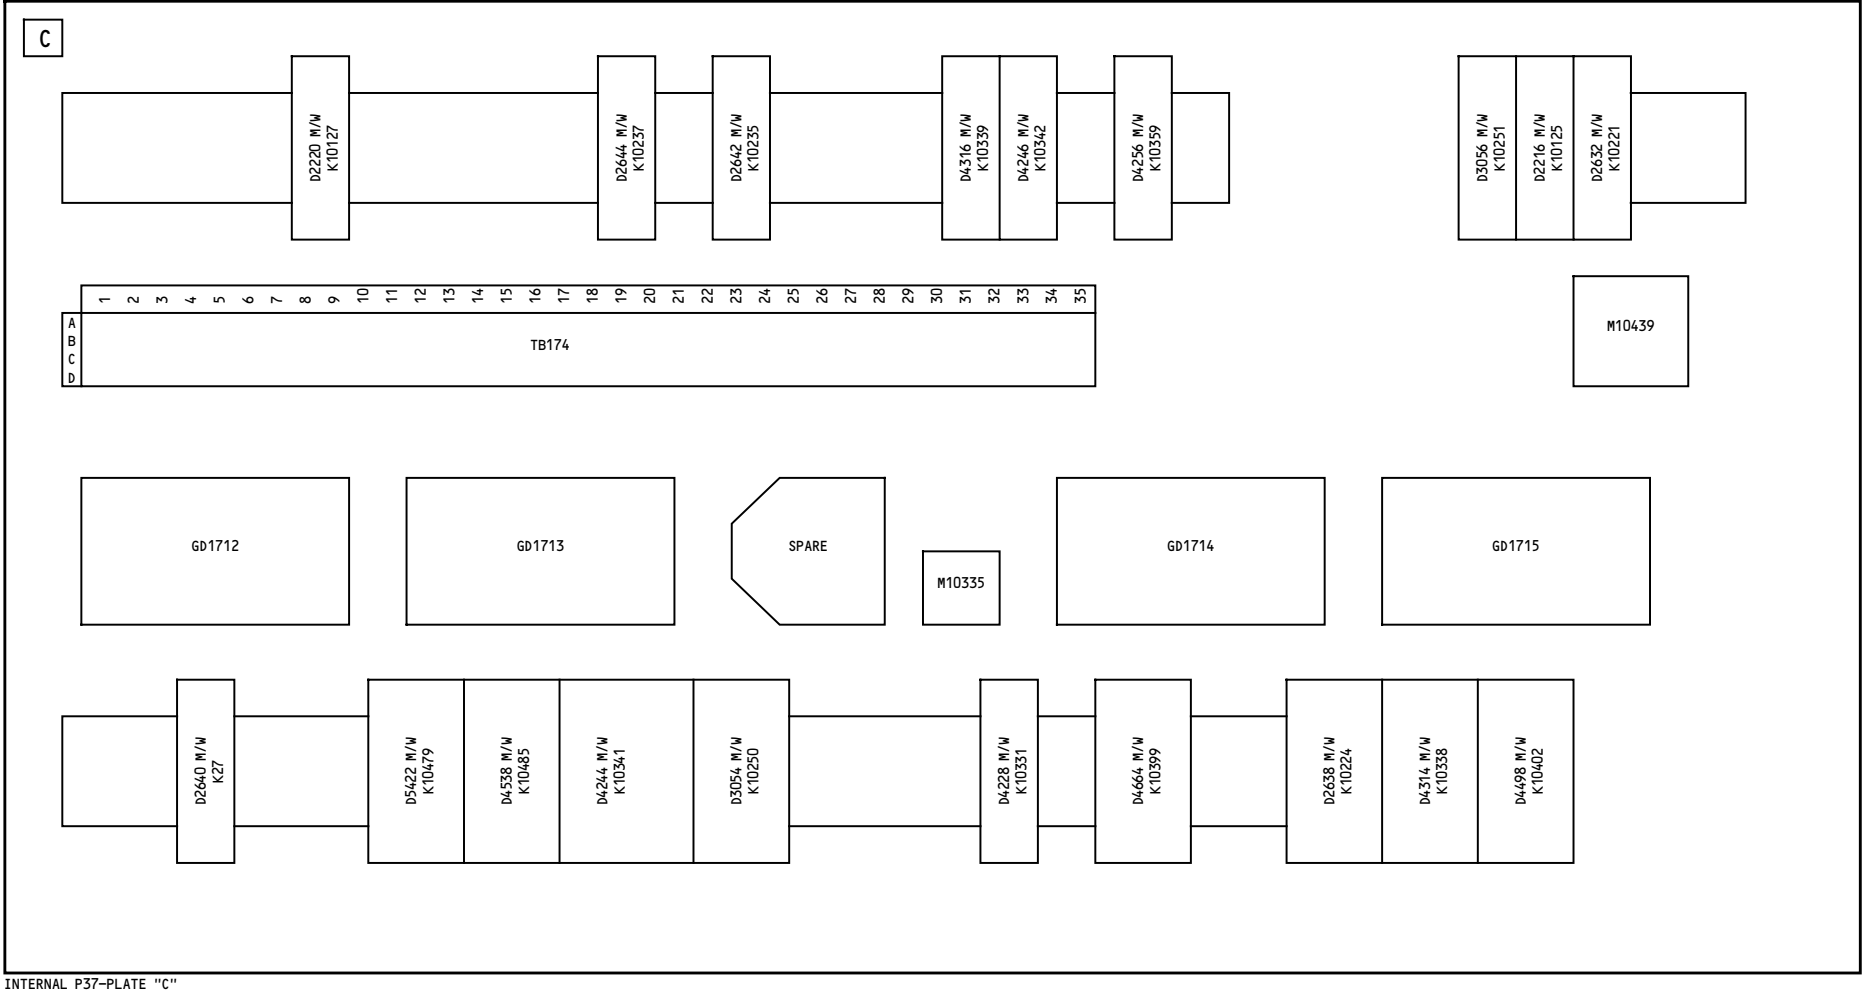

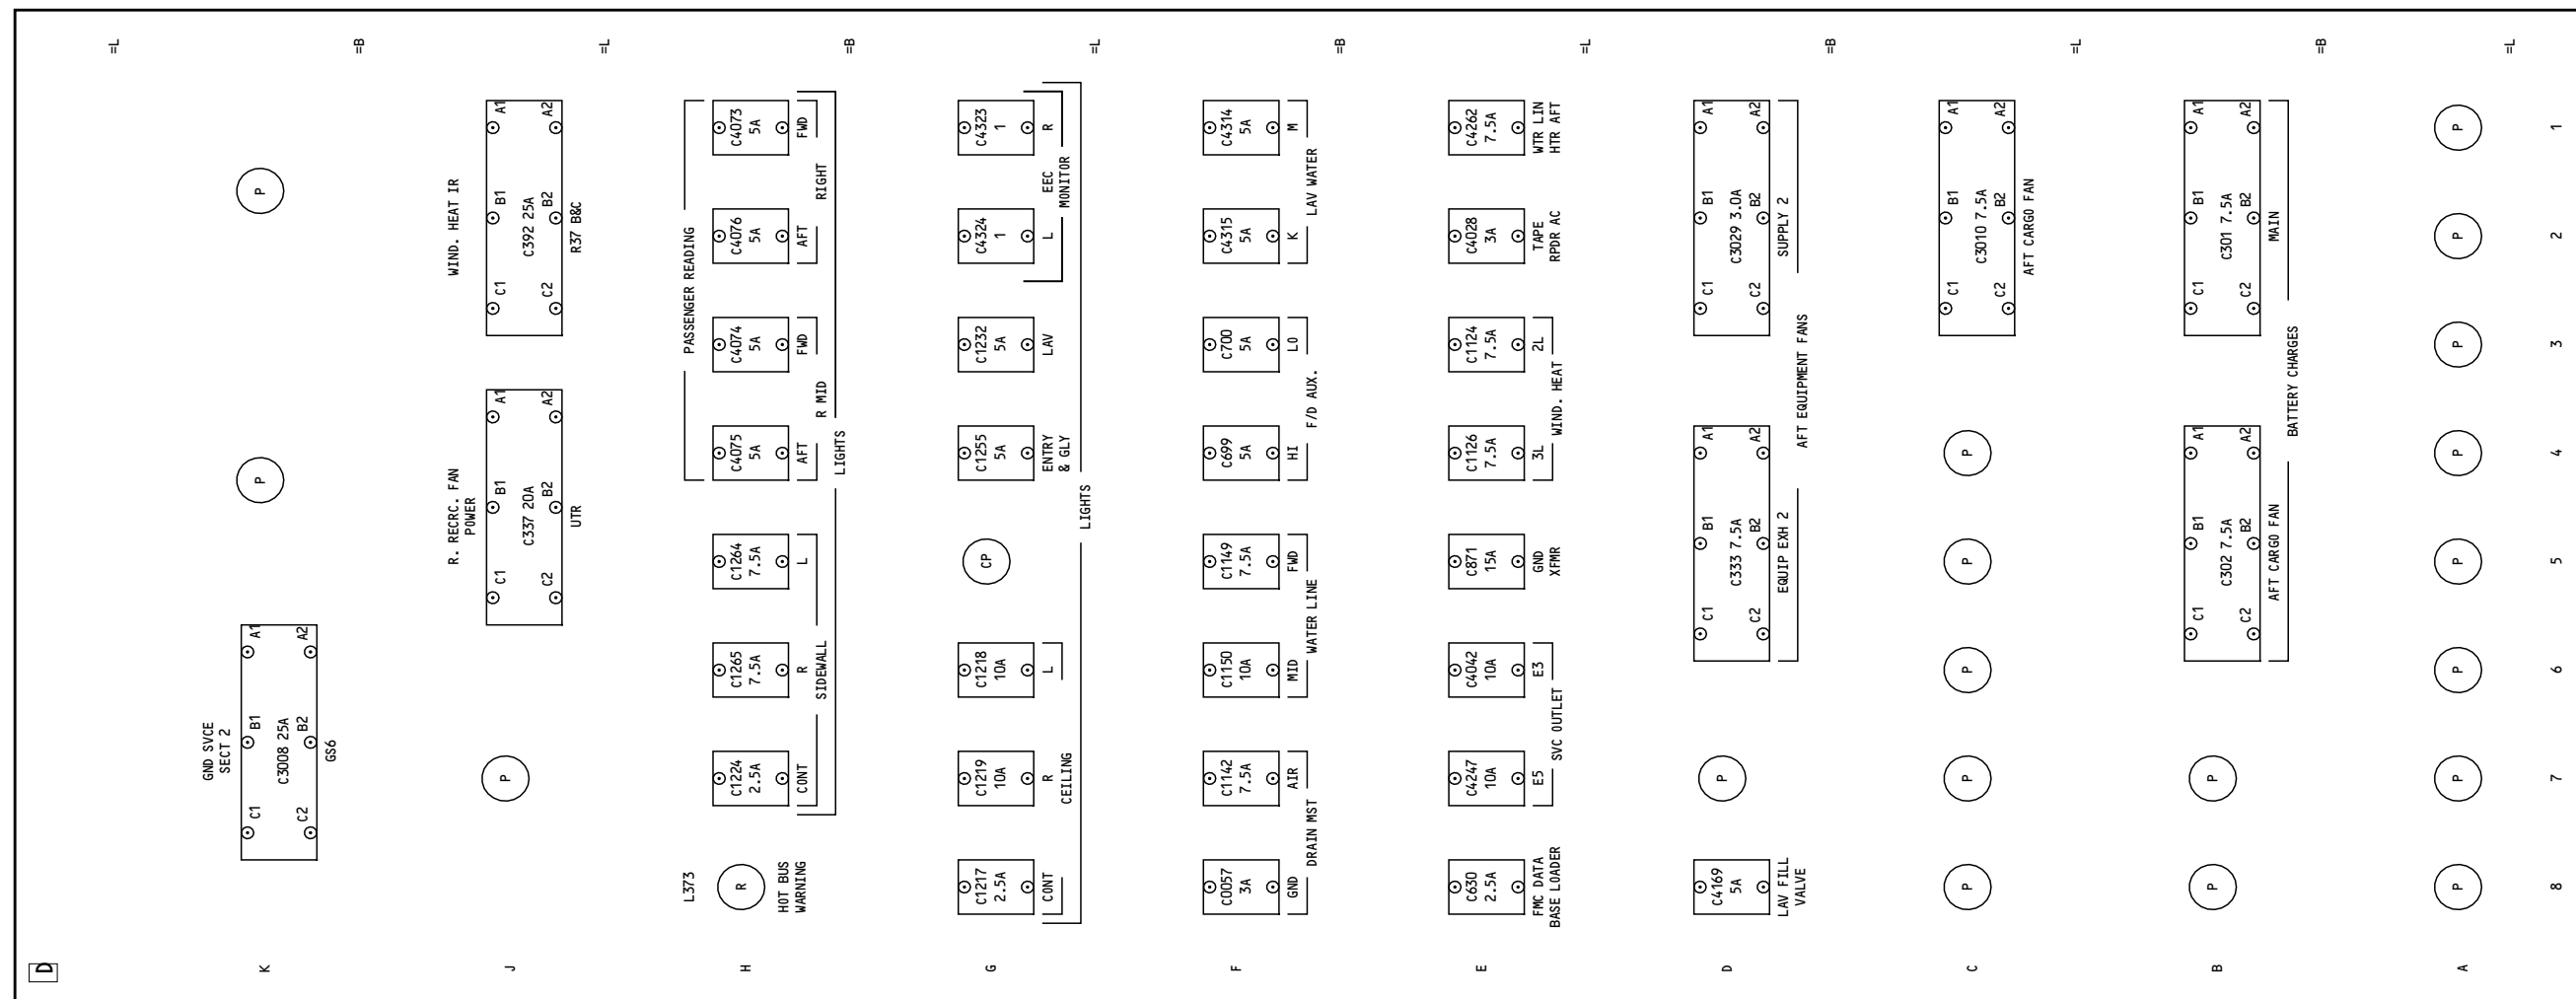

## REAR VIEW

001-011

**P37 PANEL MISCELLANEOUS  
ELECTRICAL EQUIPMENT -  
RIGHT**





D280N032

**91-02-26**


Page 1.1  
Sheet 4  
Jan 21/2005

**91-02-26**

  

Page 1.1  
Sheet 4  
Jan 21/2005

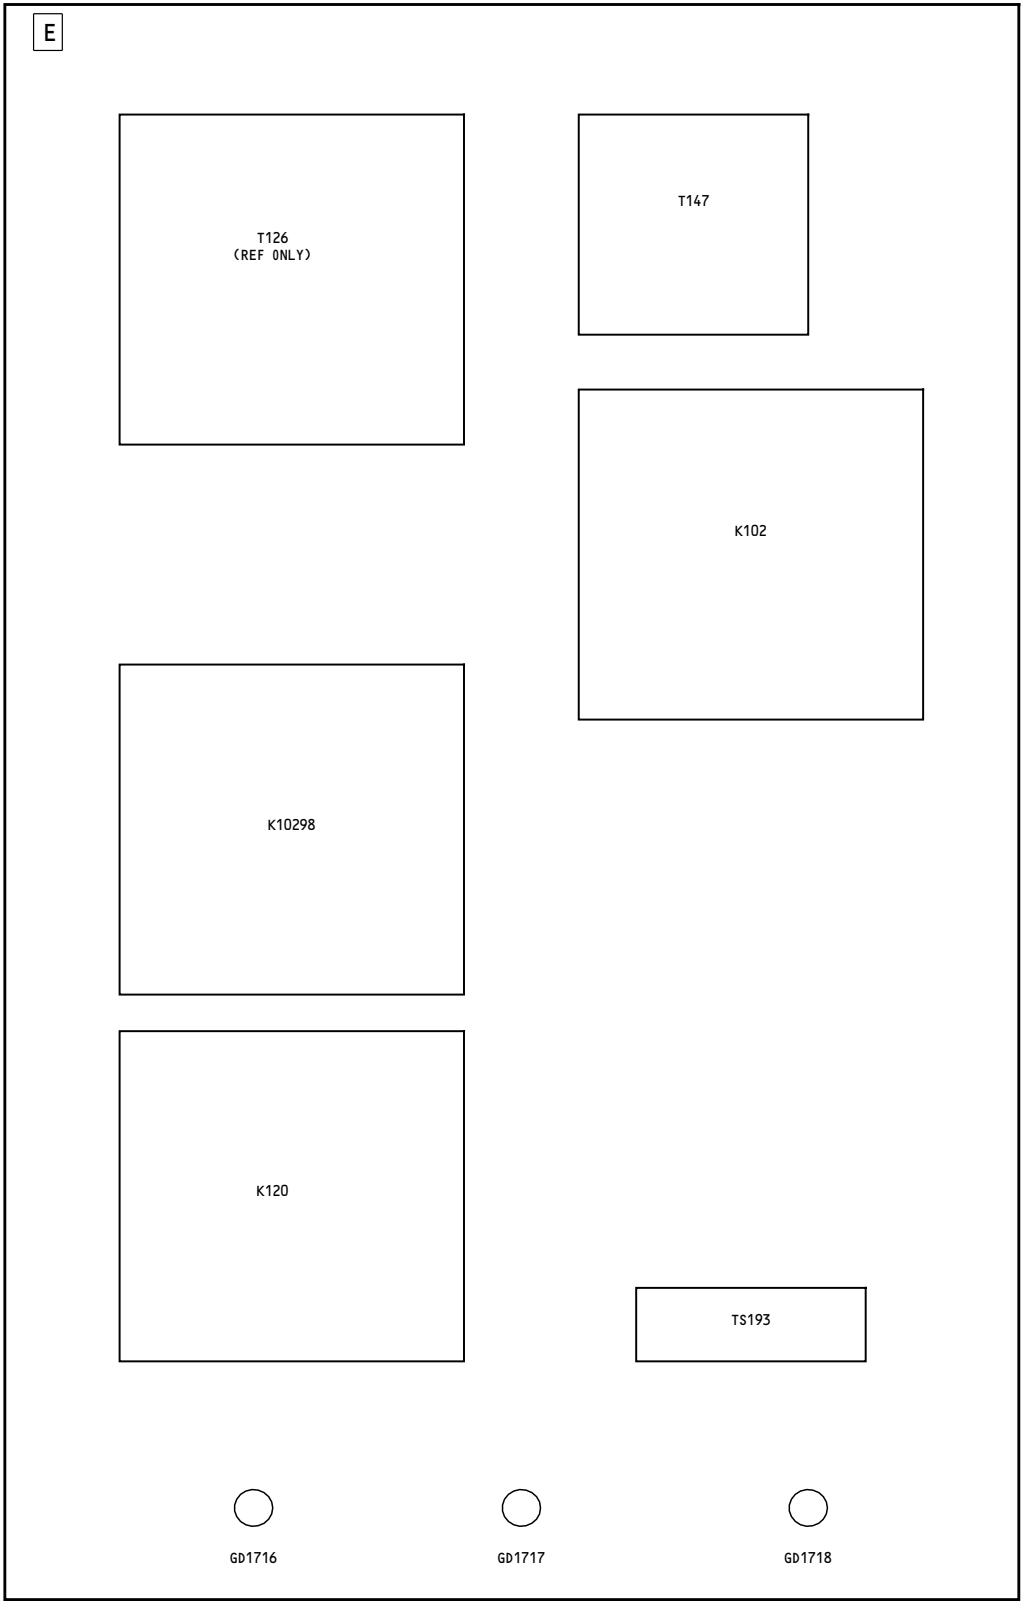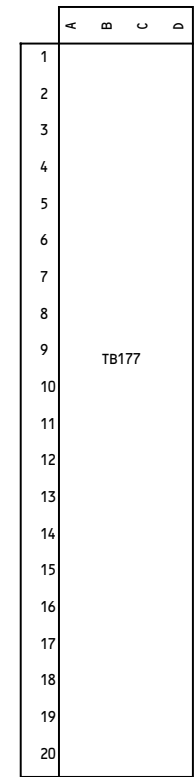

INTERNAL P37-PLATE "E"

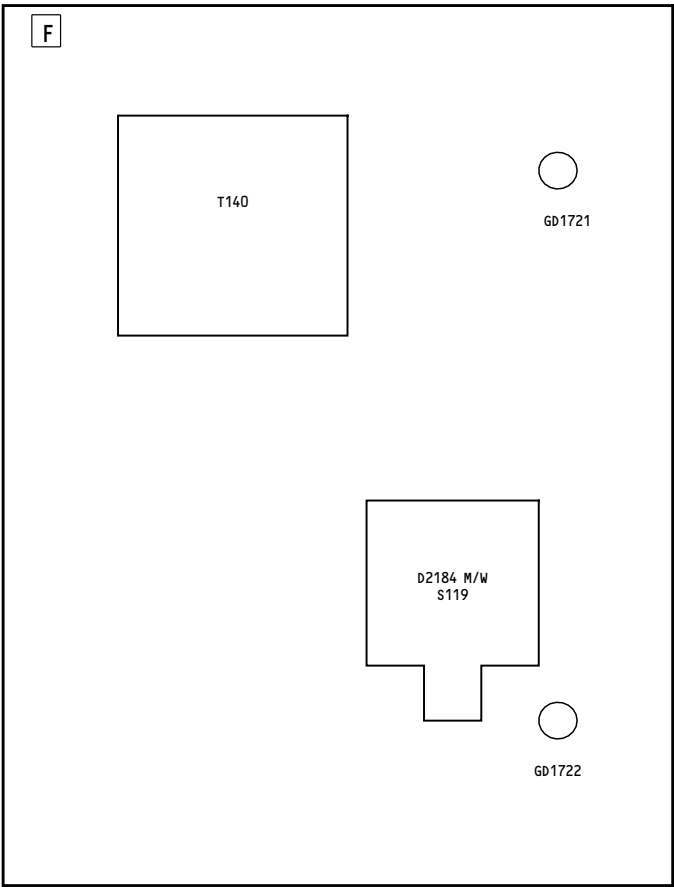


INTERNAL P37-PLATE "F"

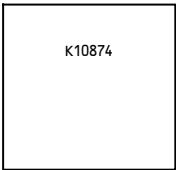 

LOCATED INSIDE TOP OF FWD END OF PANEL

2

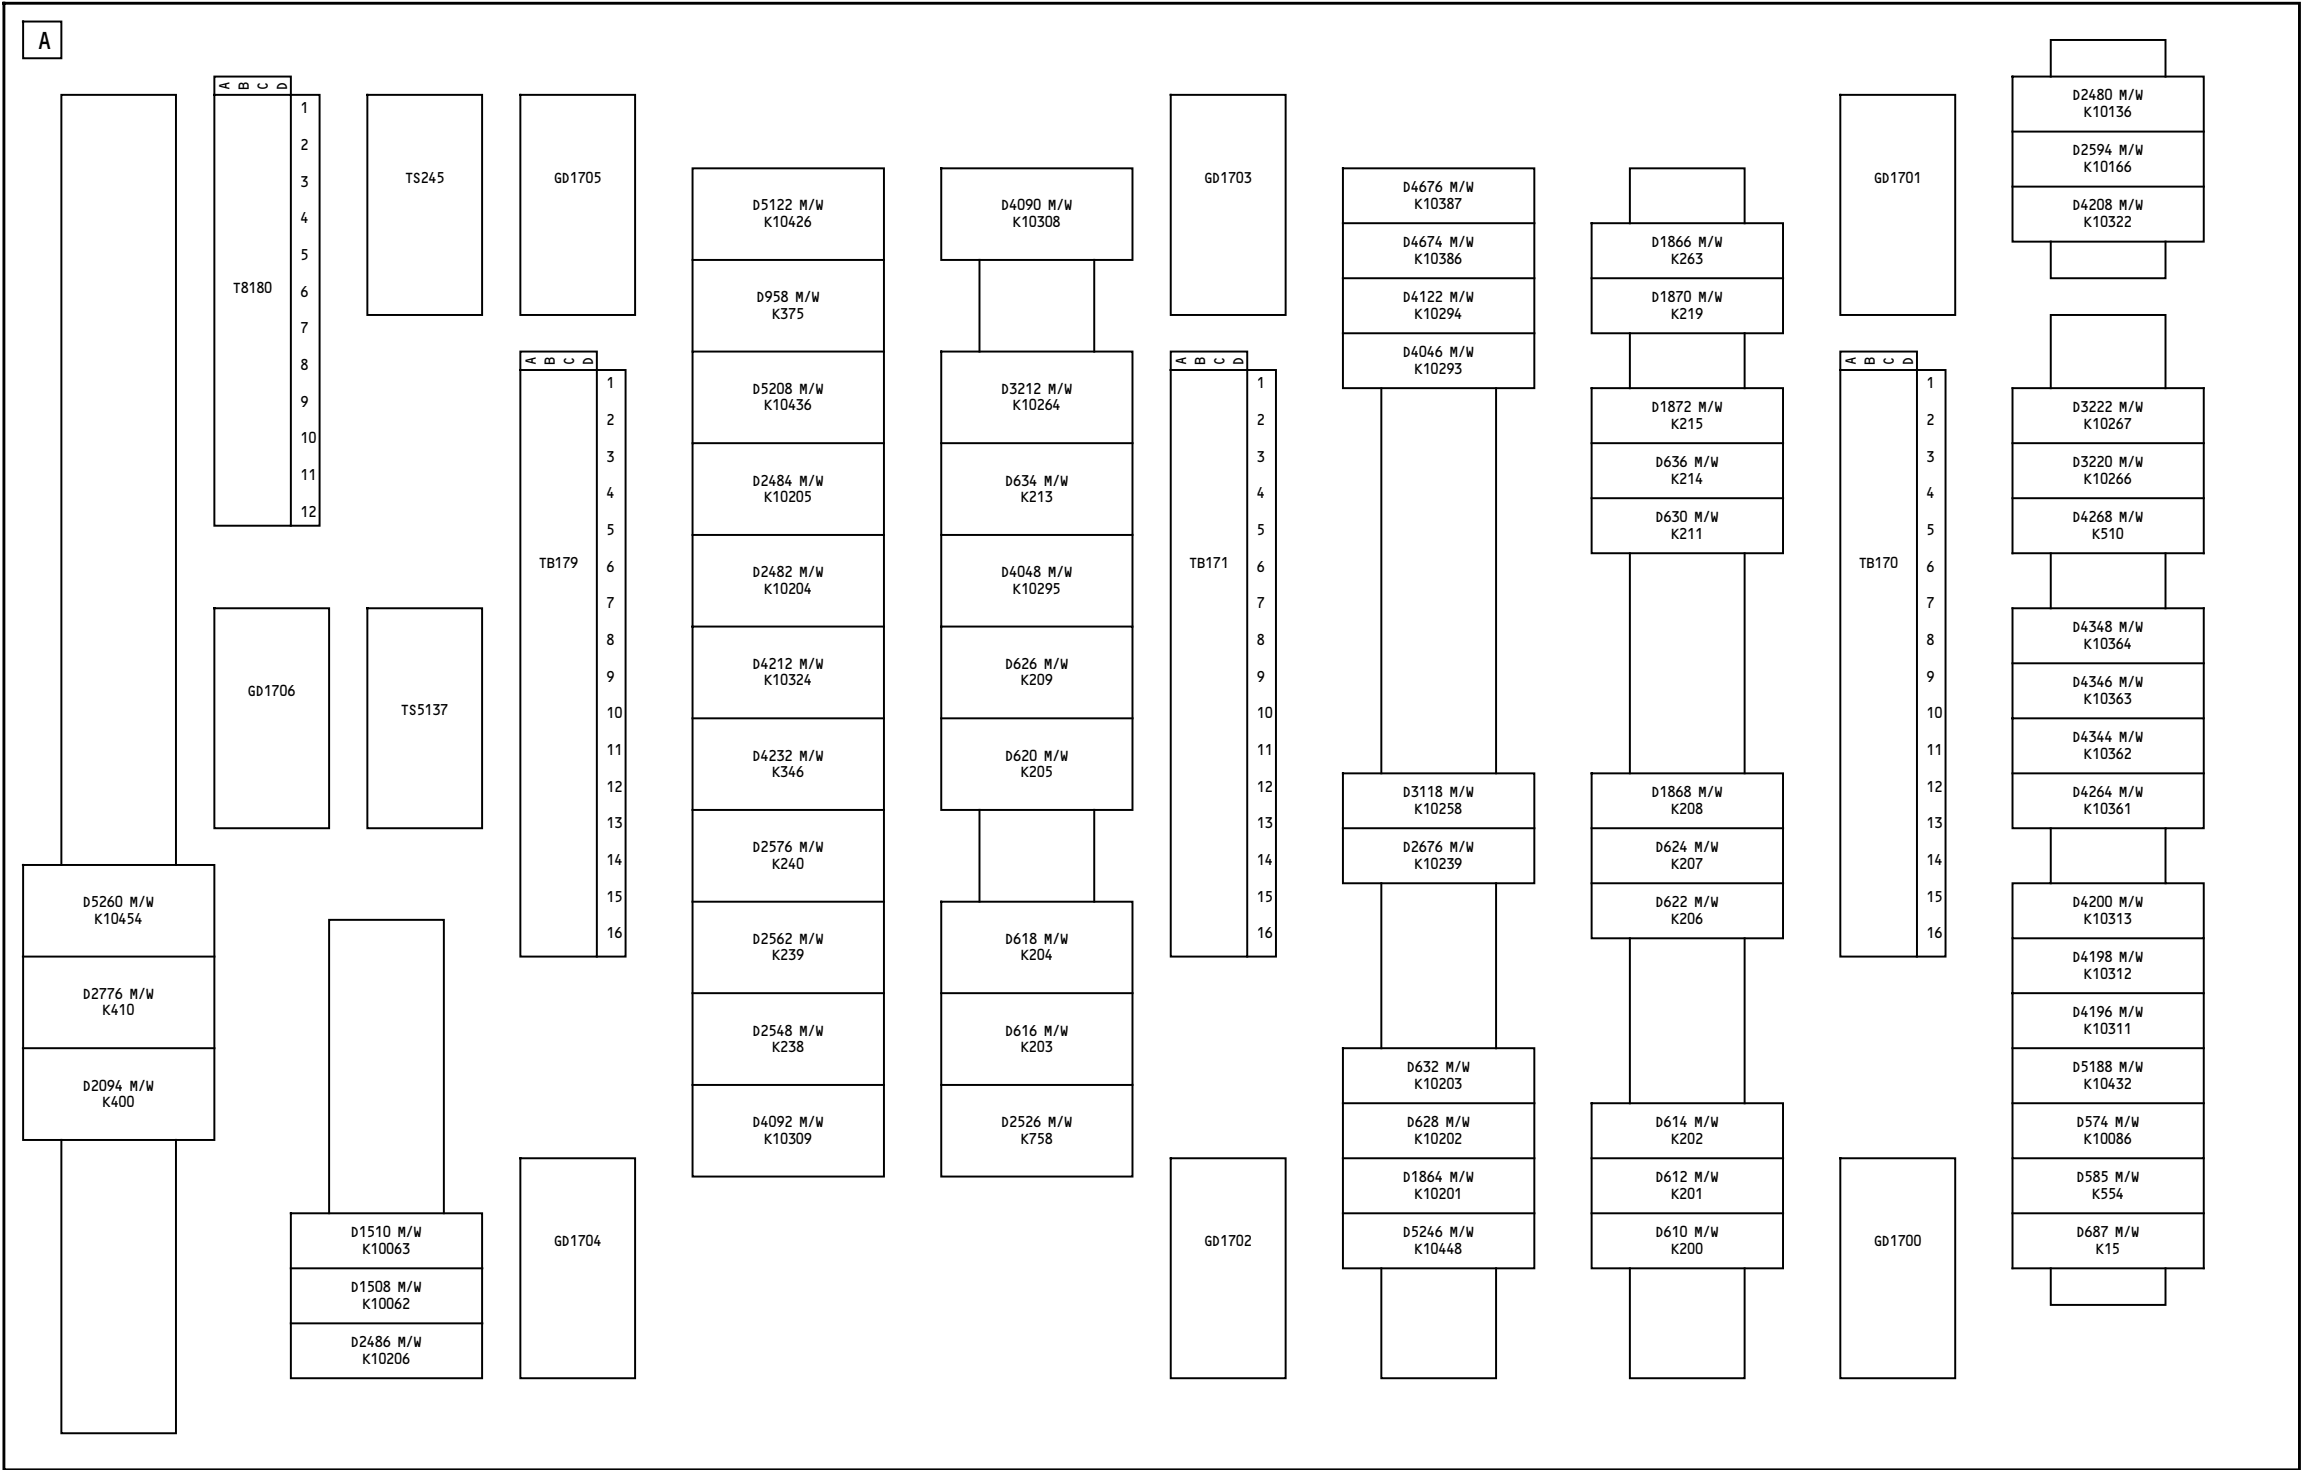

115-199

P37 PANEL MISCELLANEOUS  
ELECTRICAL EQUIPMENT -  
RIGHT

D280N032


91-02-26

Page 2  
Sheet 1  
Jan 21/2005


91-02-26


Page 2  
Sheet 1  
Jan 21/2005



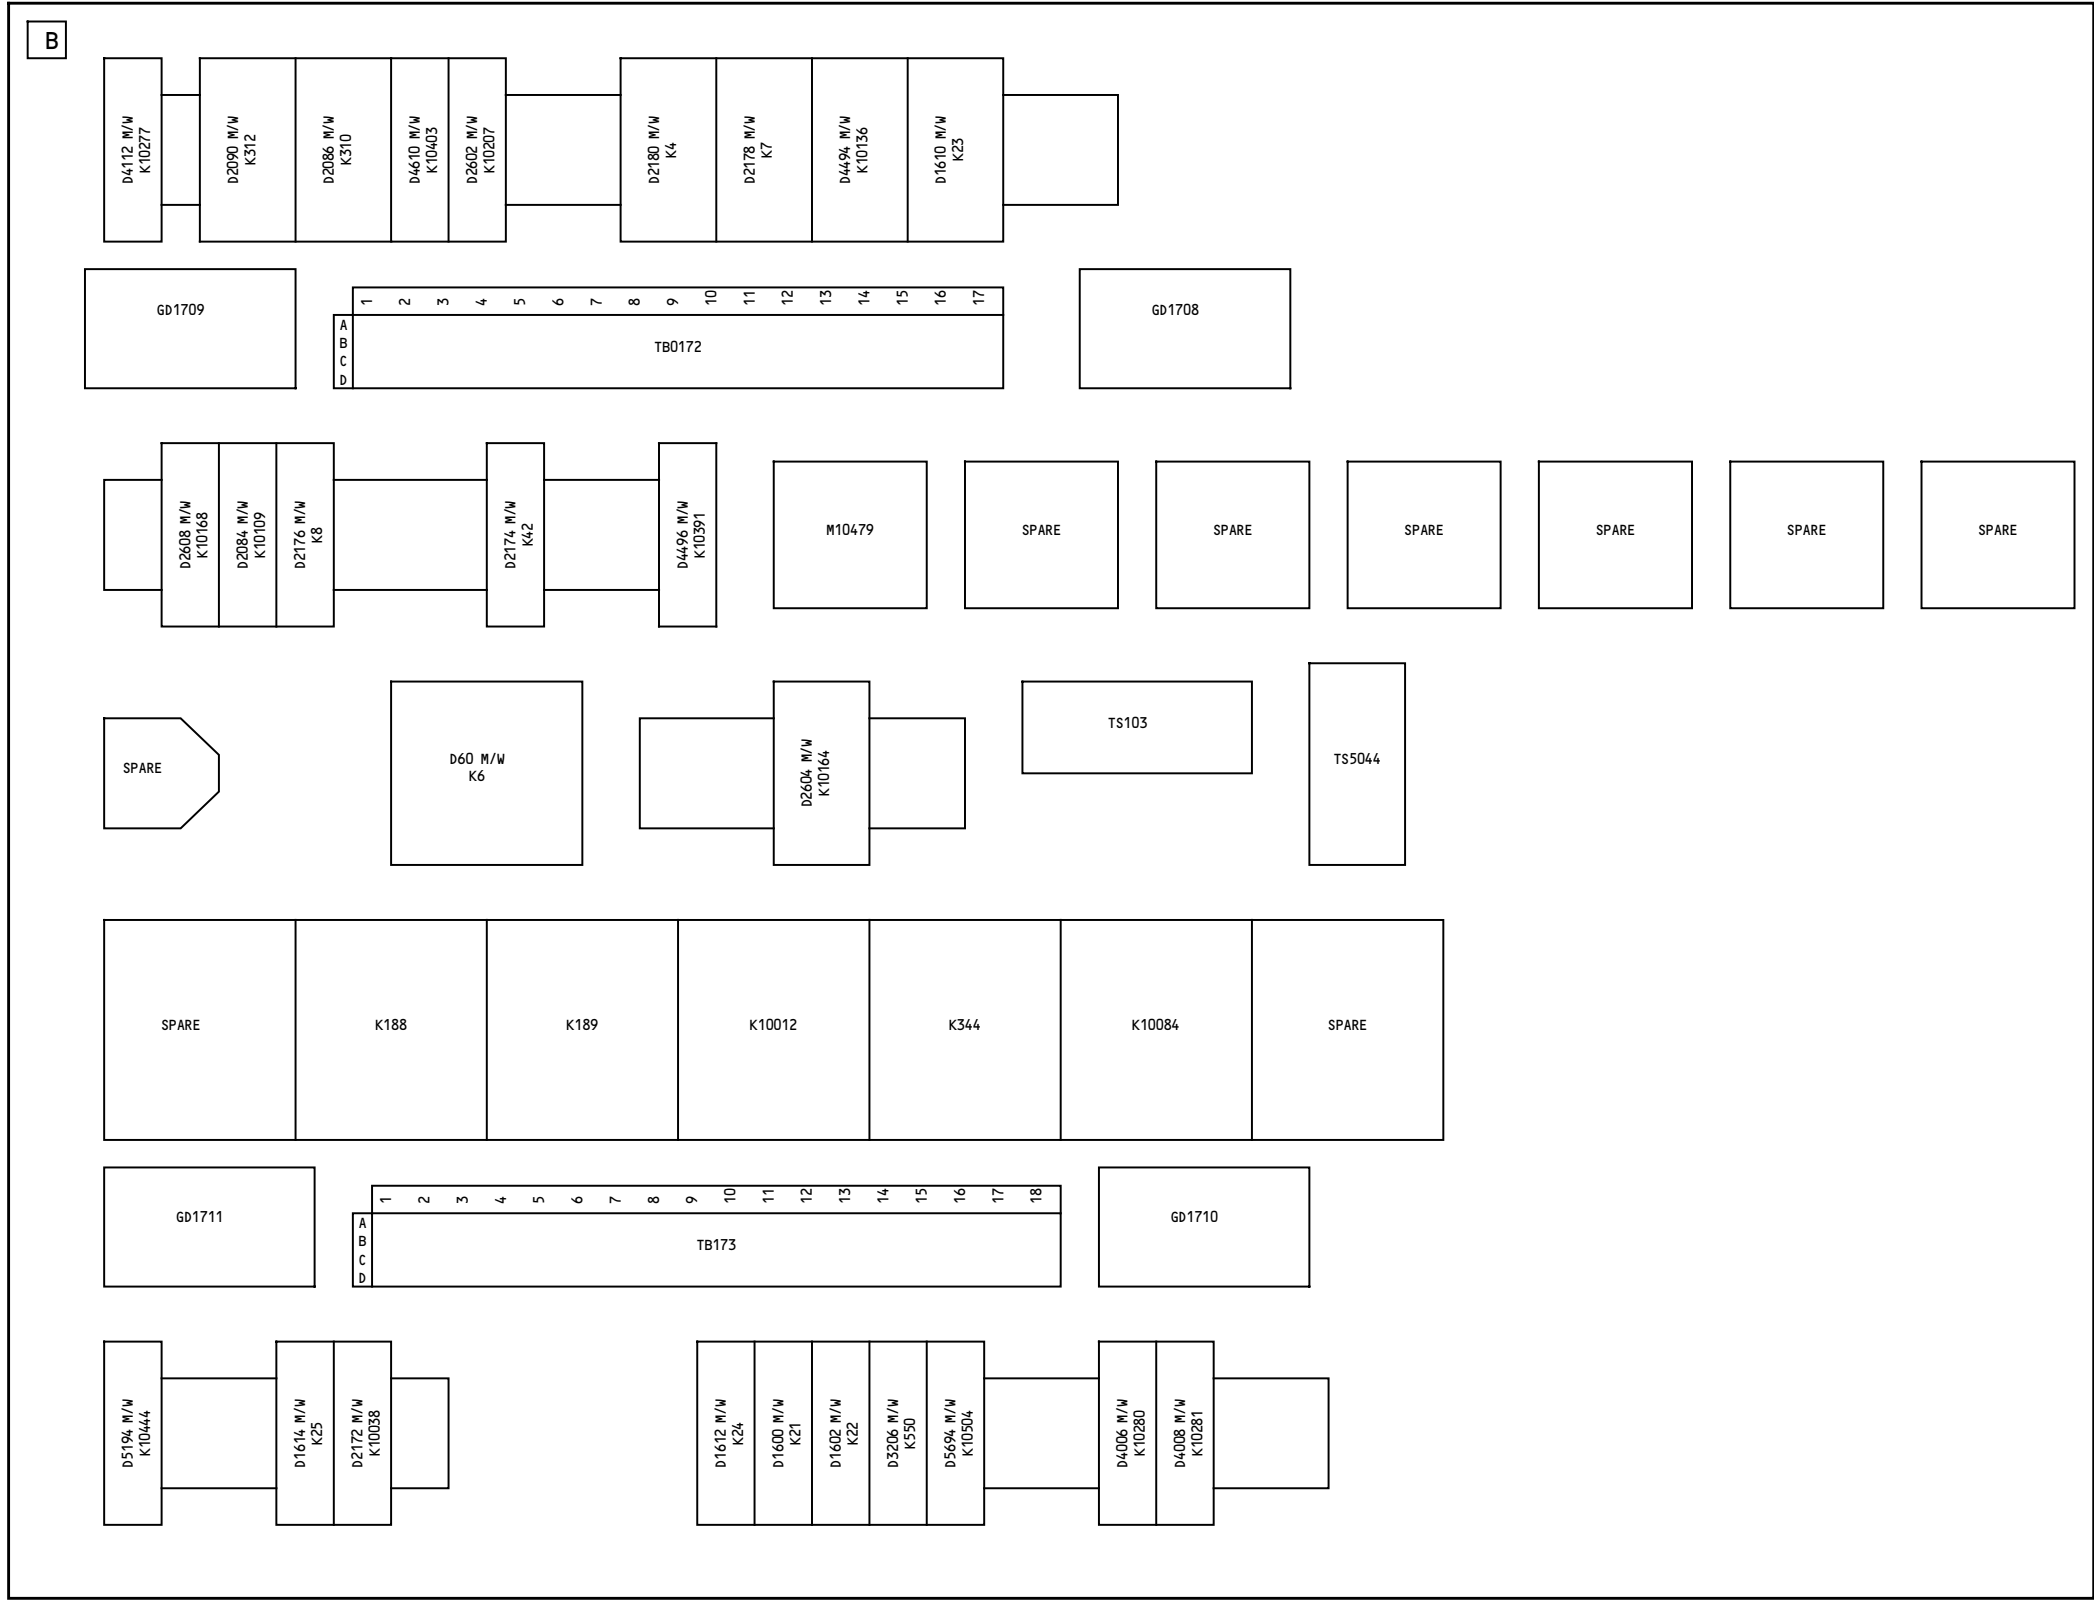


INTERNAL P37-PLATE "B"

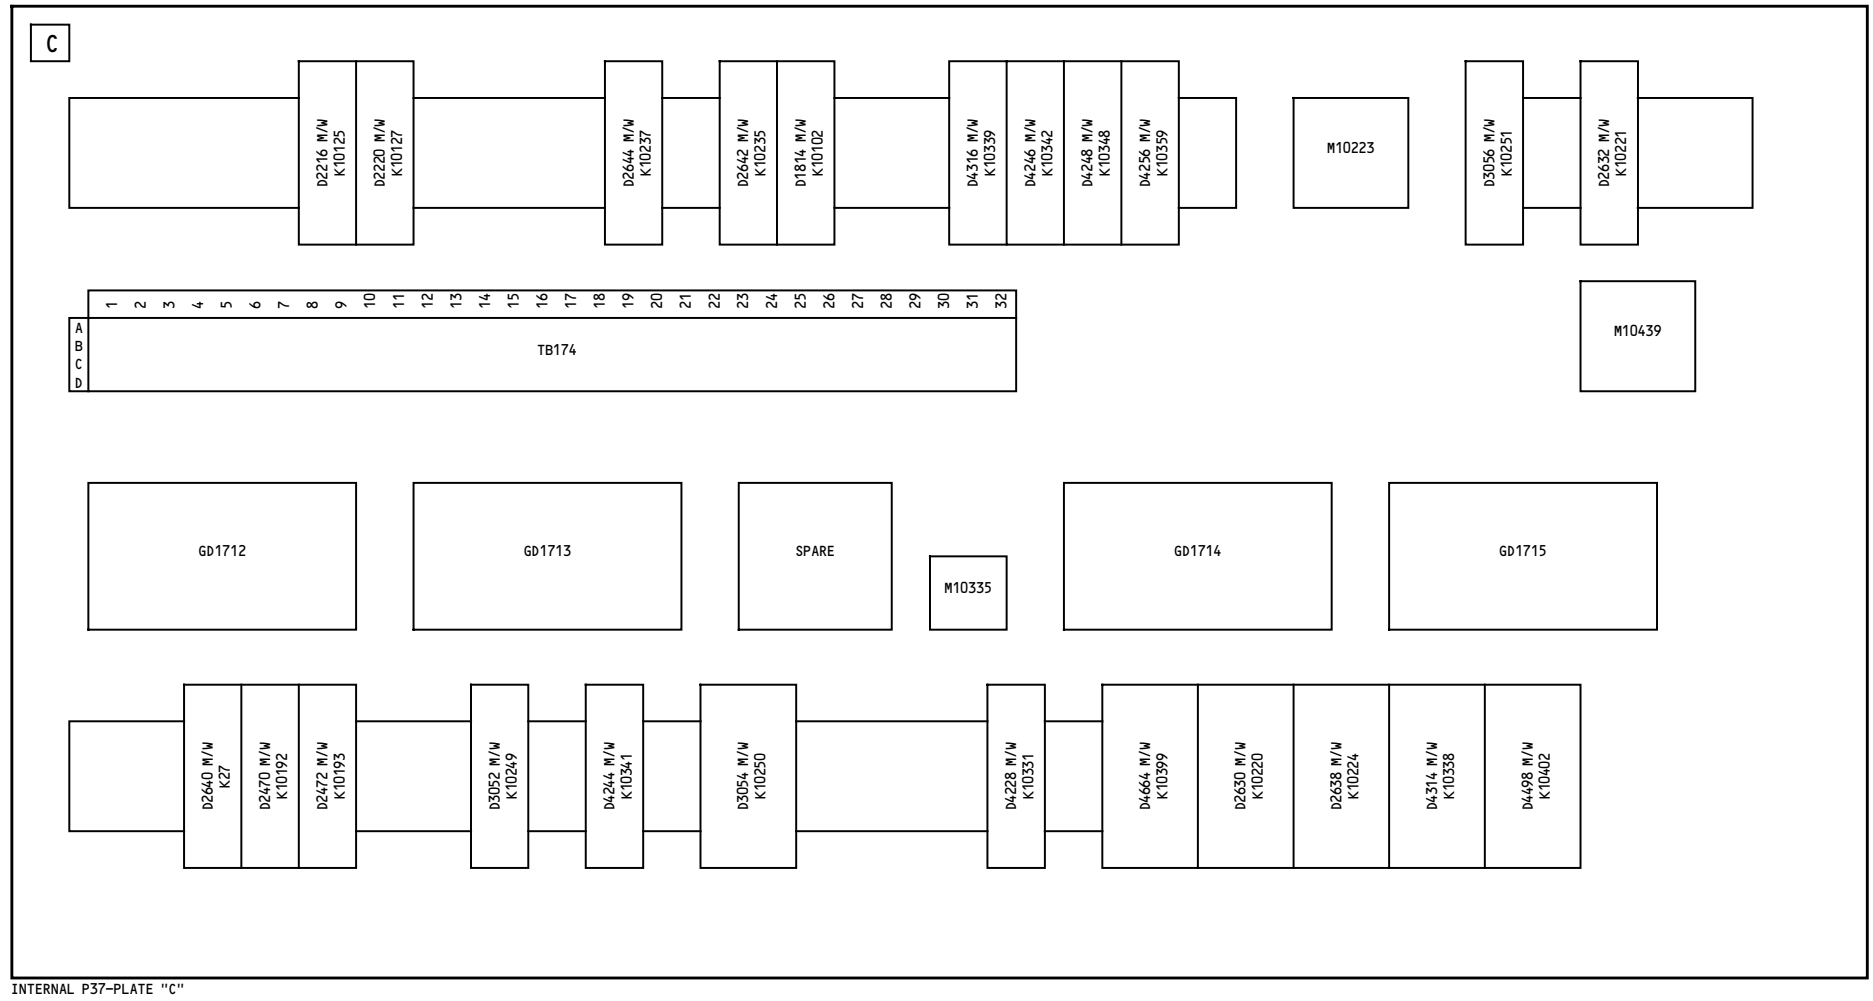

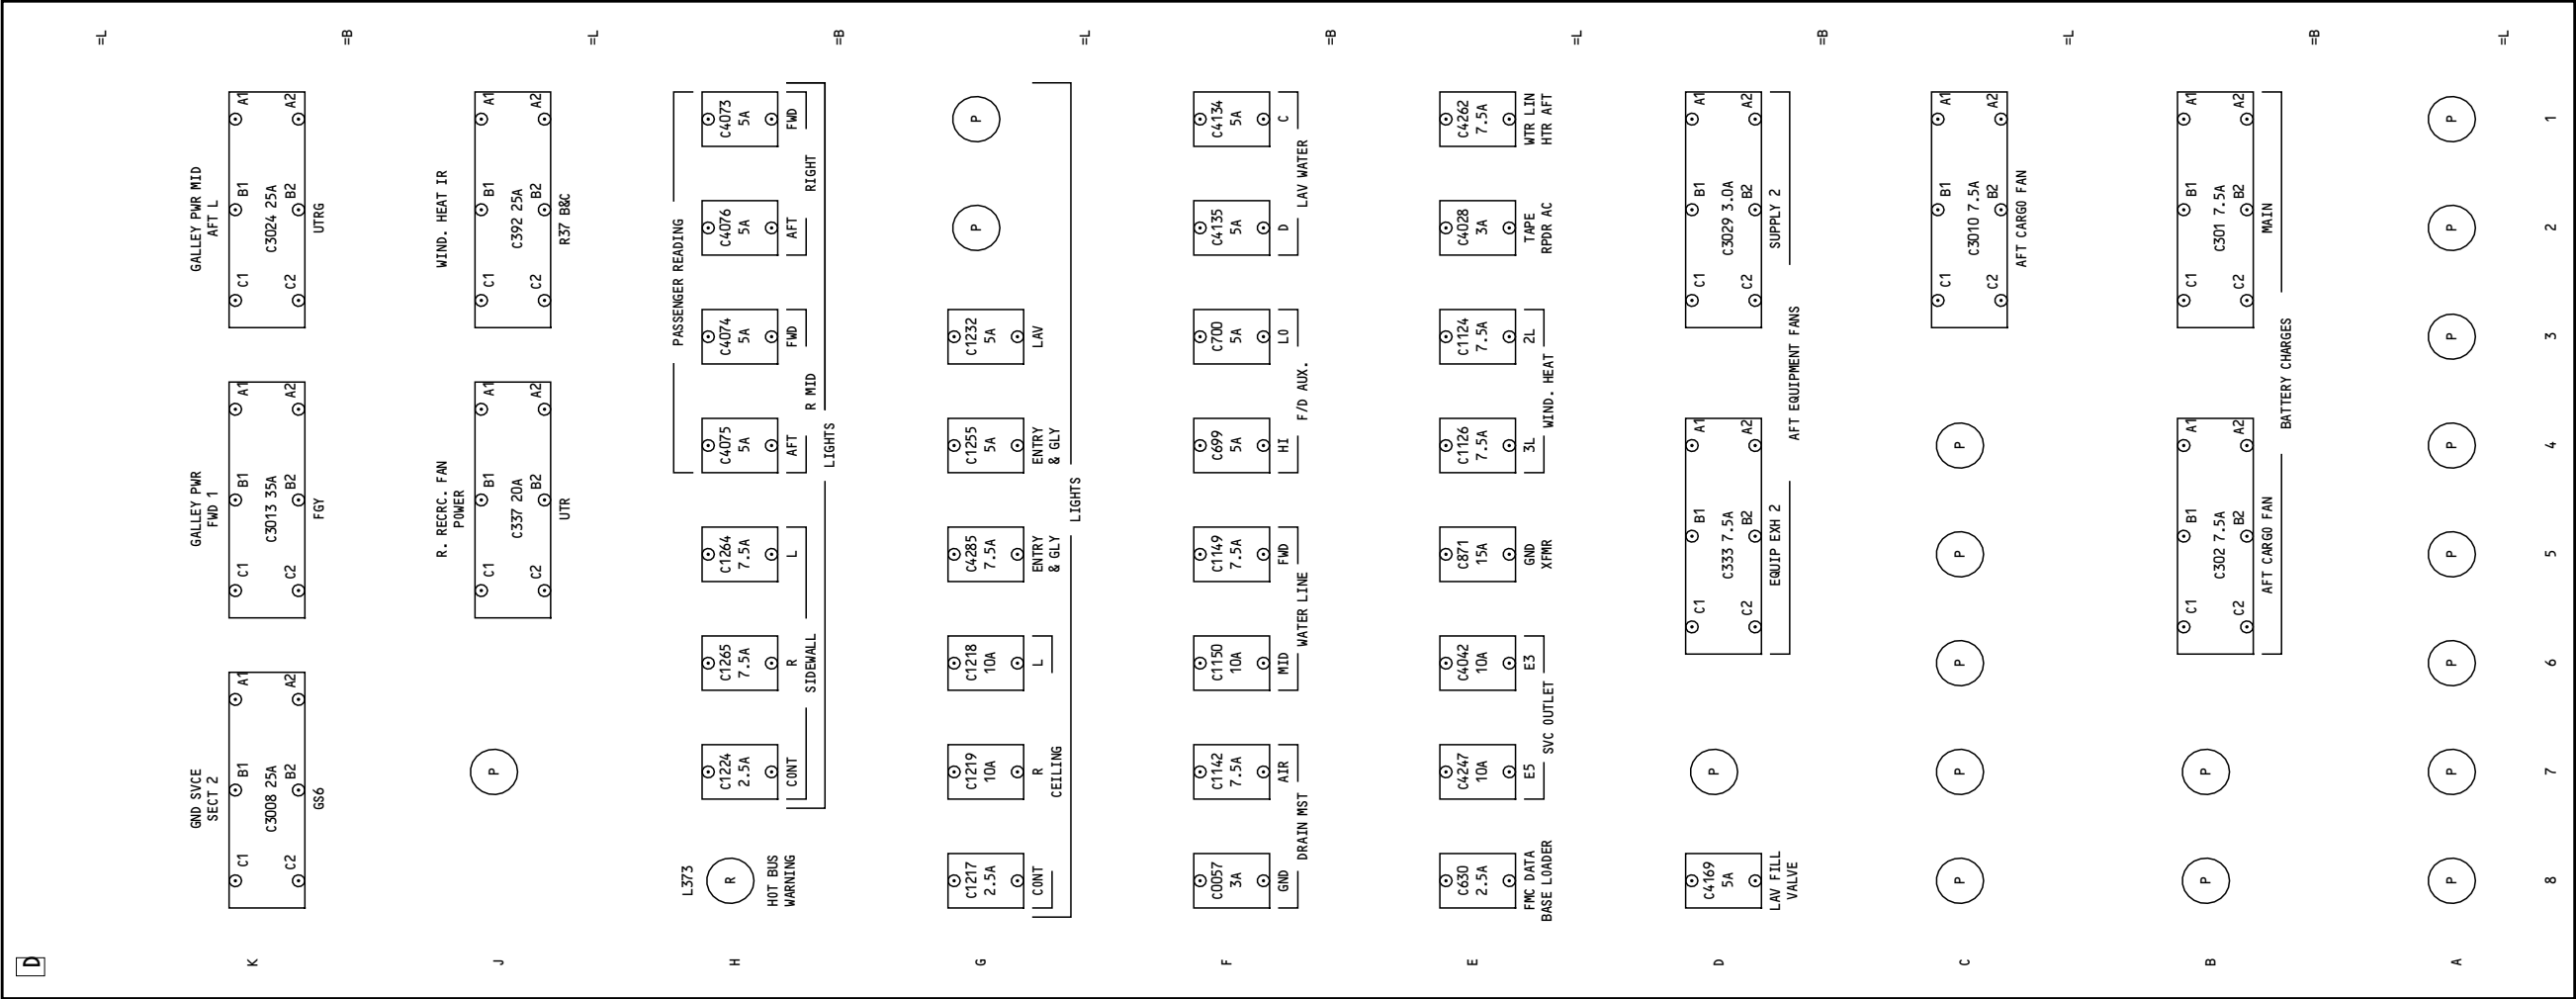


REAR VIEW

	A	B	C	D
1	TB177			
2				
3				
4				
5				
6				
7				
8				
9				
10				
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				

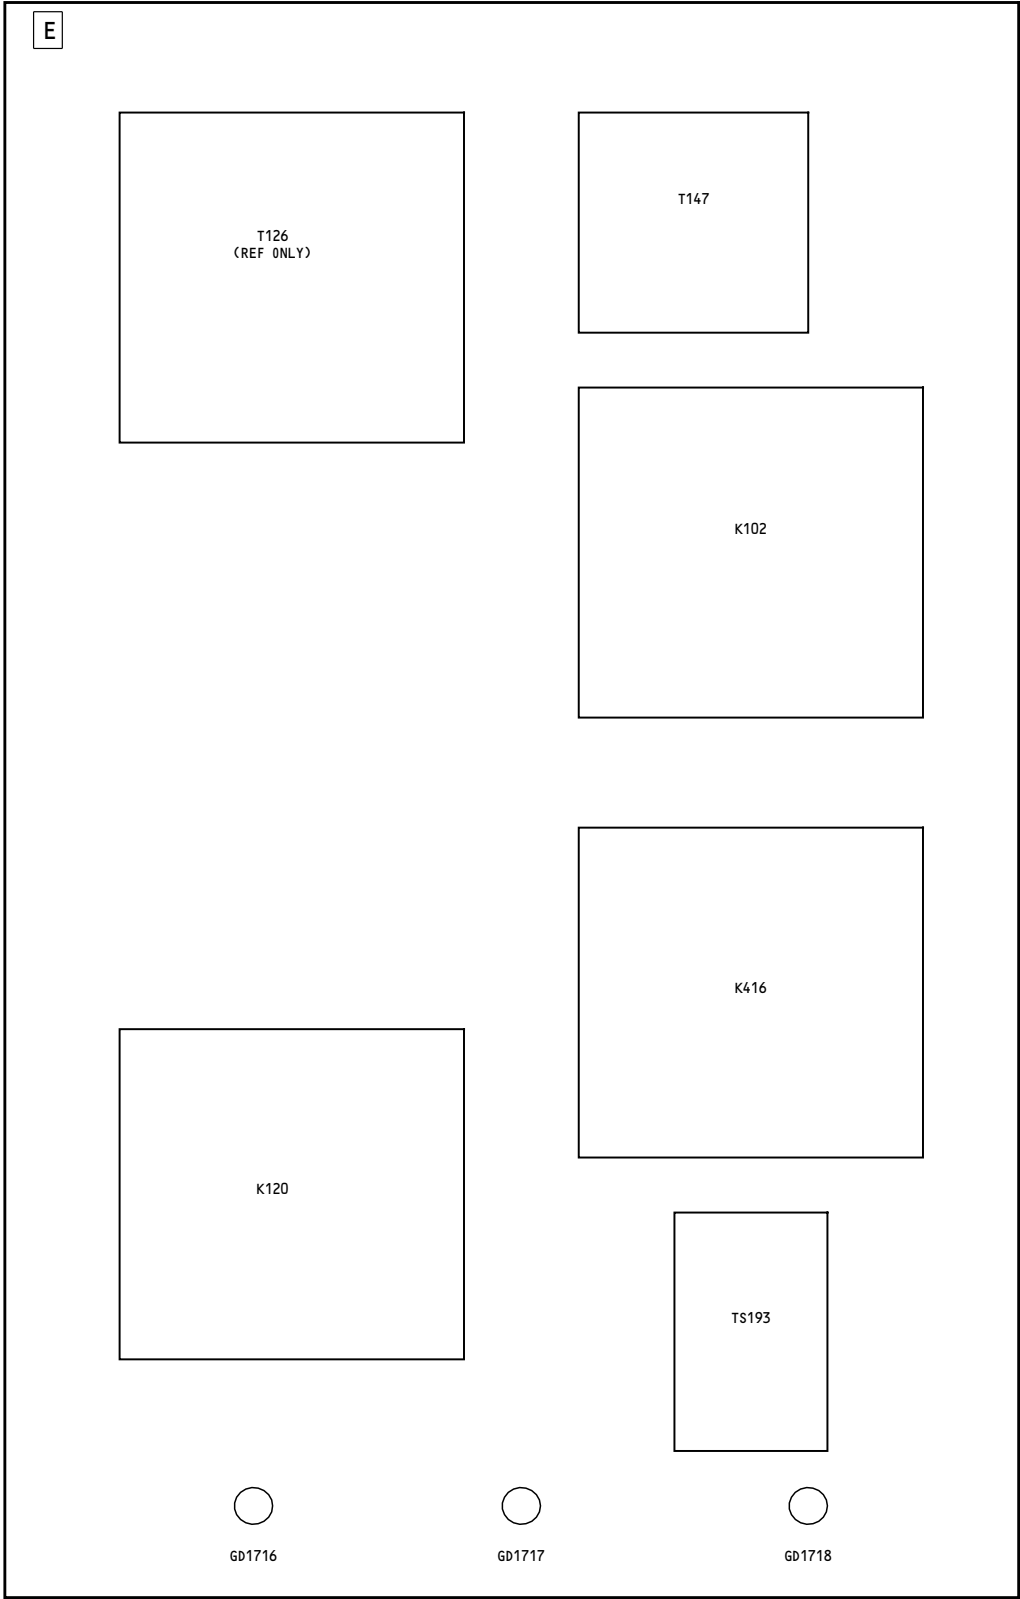



INTERNAL P37-PLATE "E"

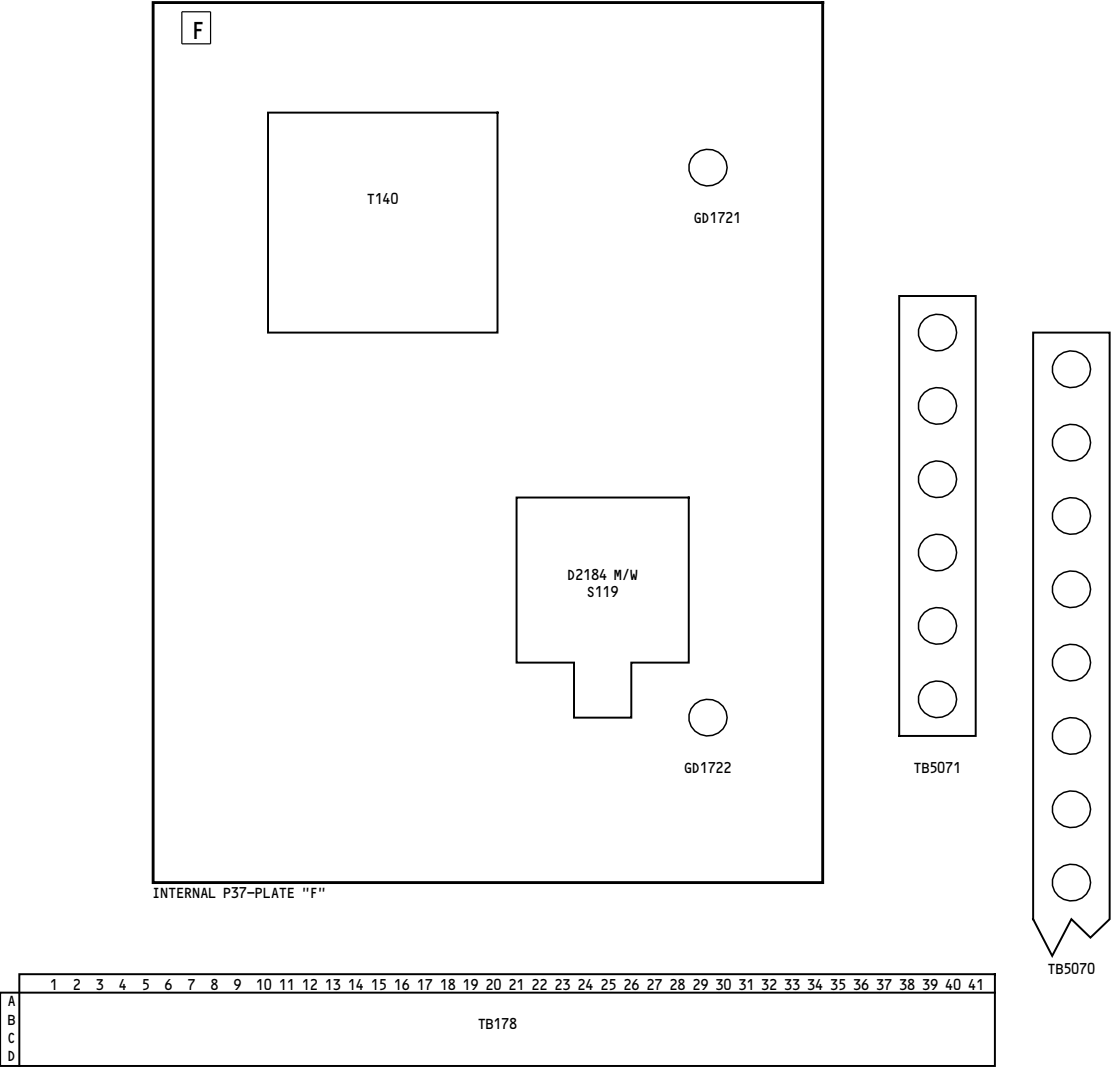


INTERNAL P37-PLATE "F"


	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41
A	TB178																																								
B																																									
C																																									
D																																									

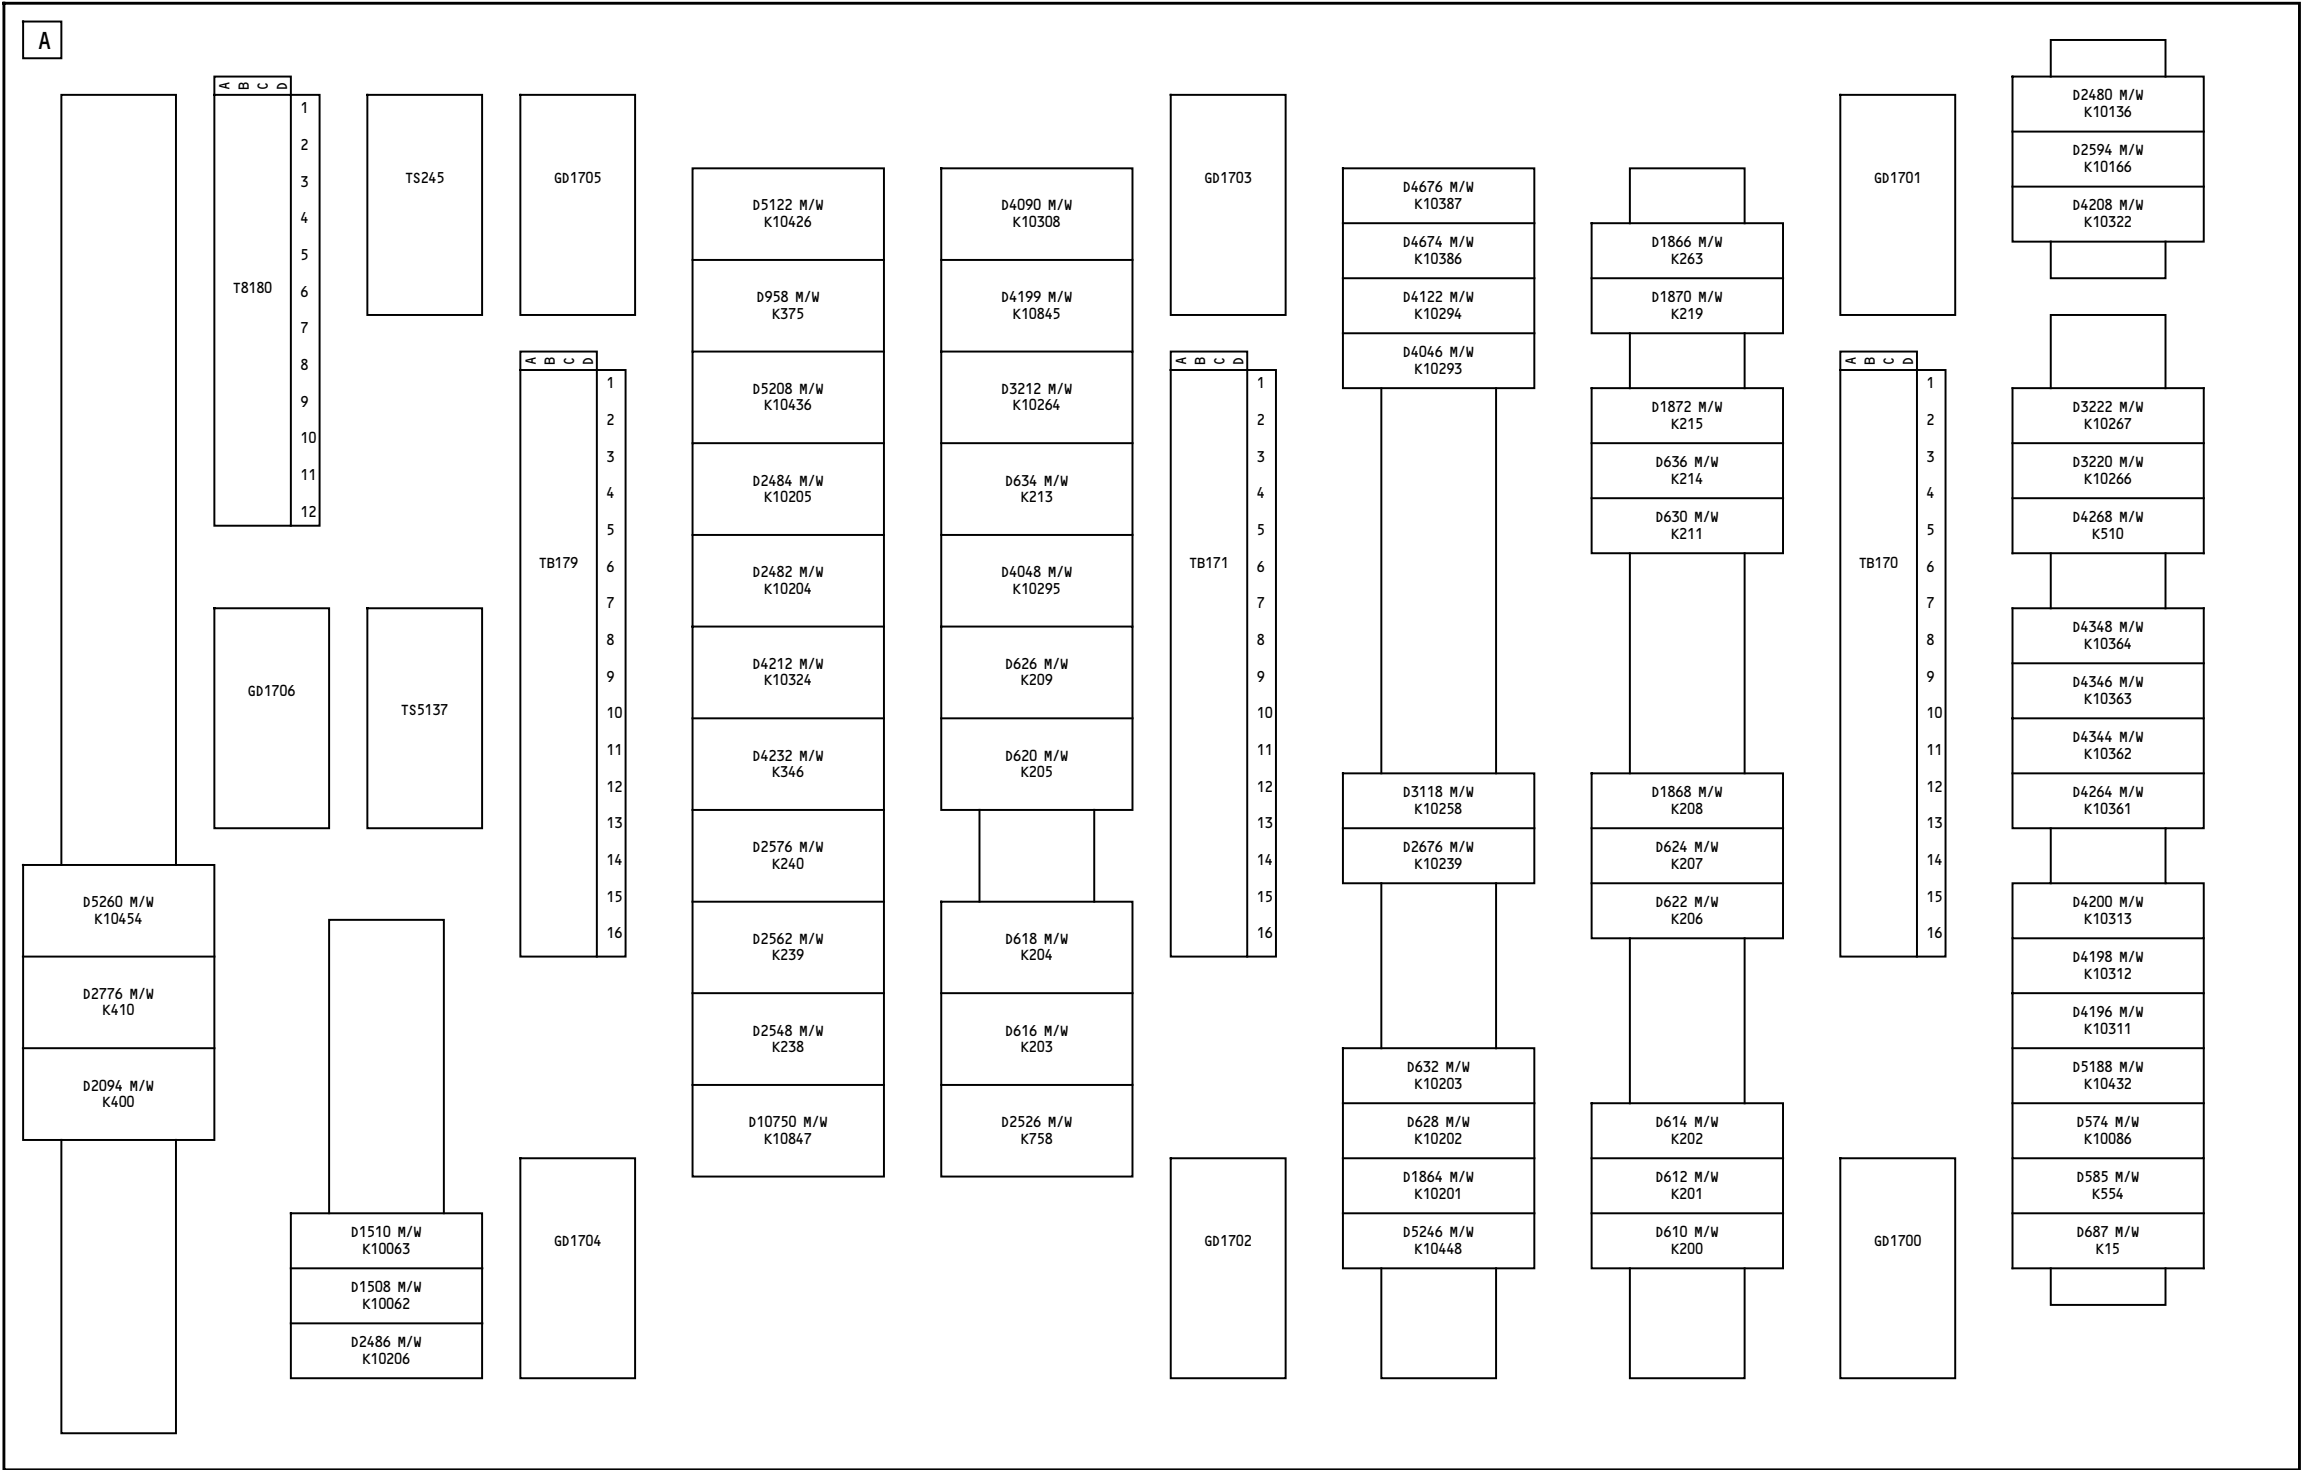

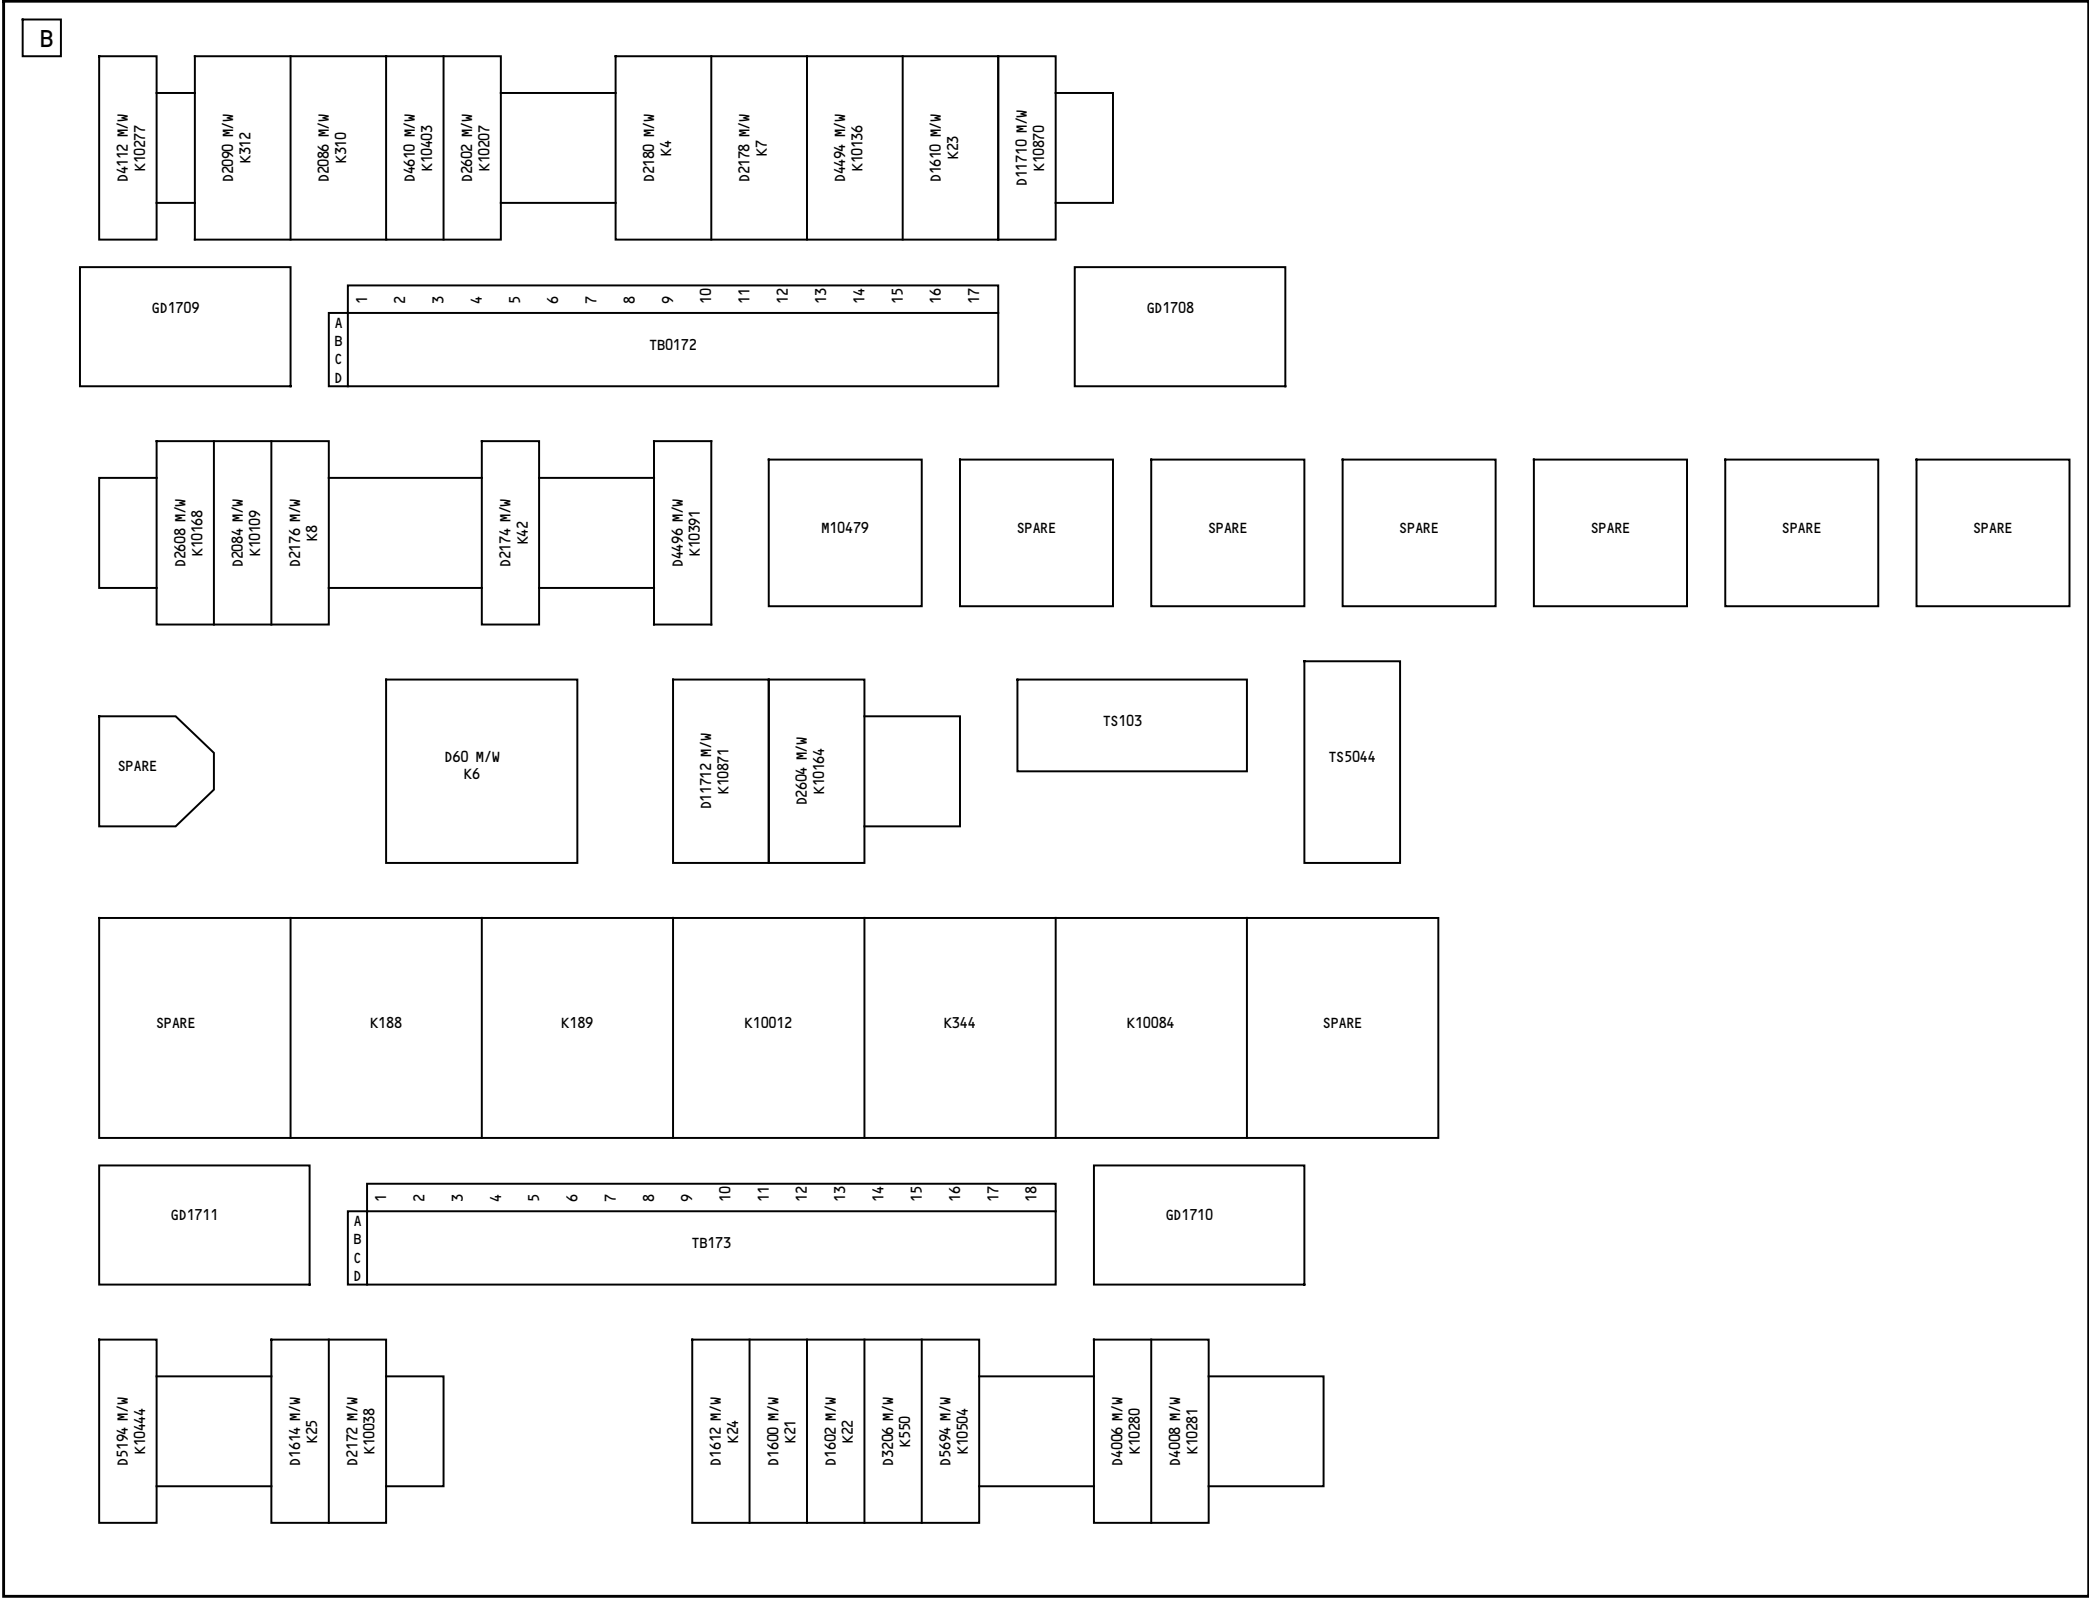

INTERNAL P37-PLATE "B"


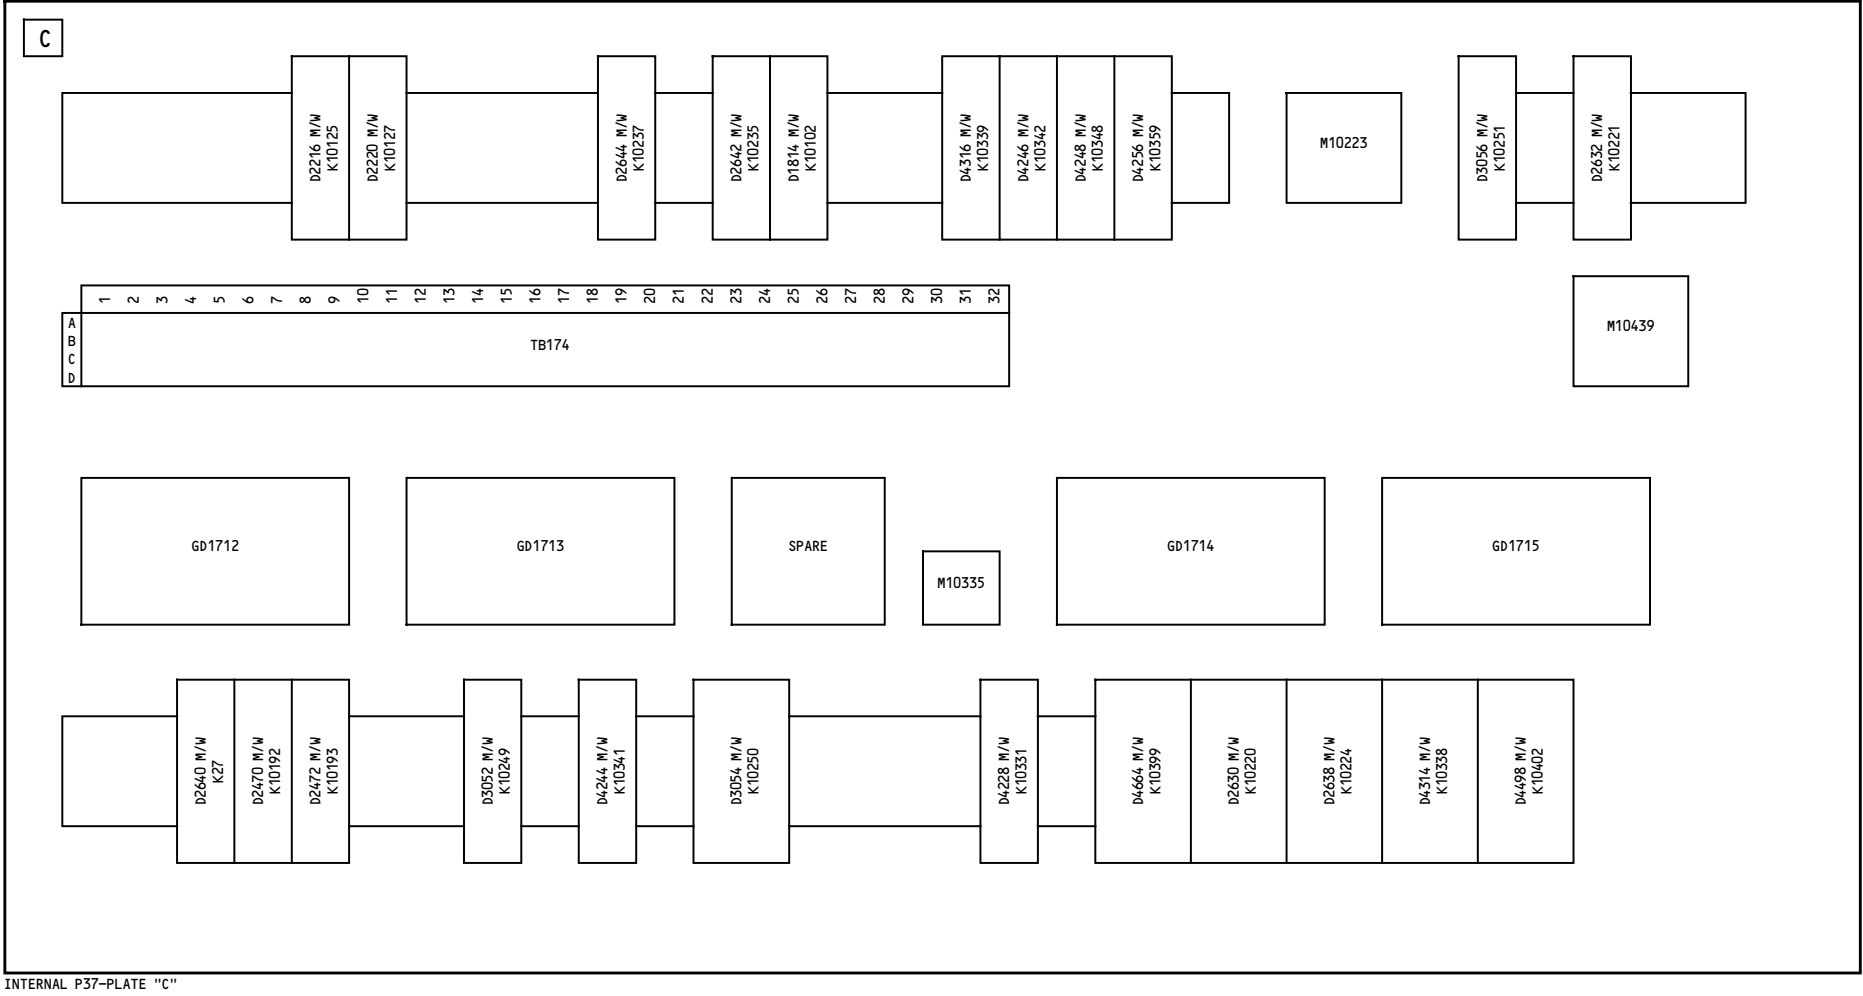


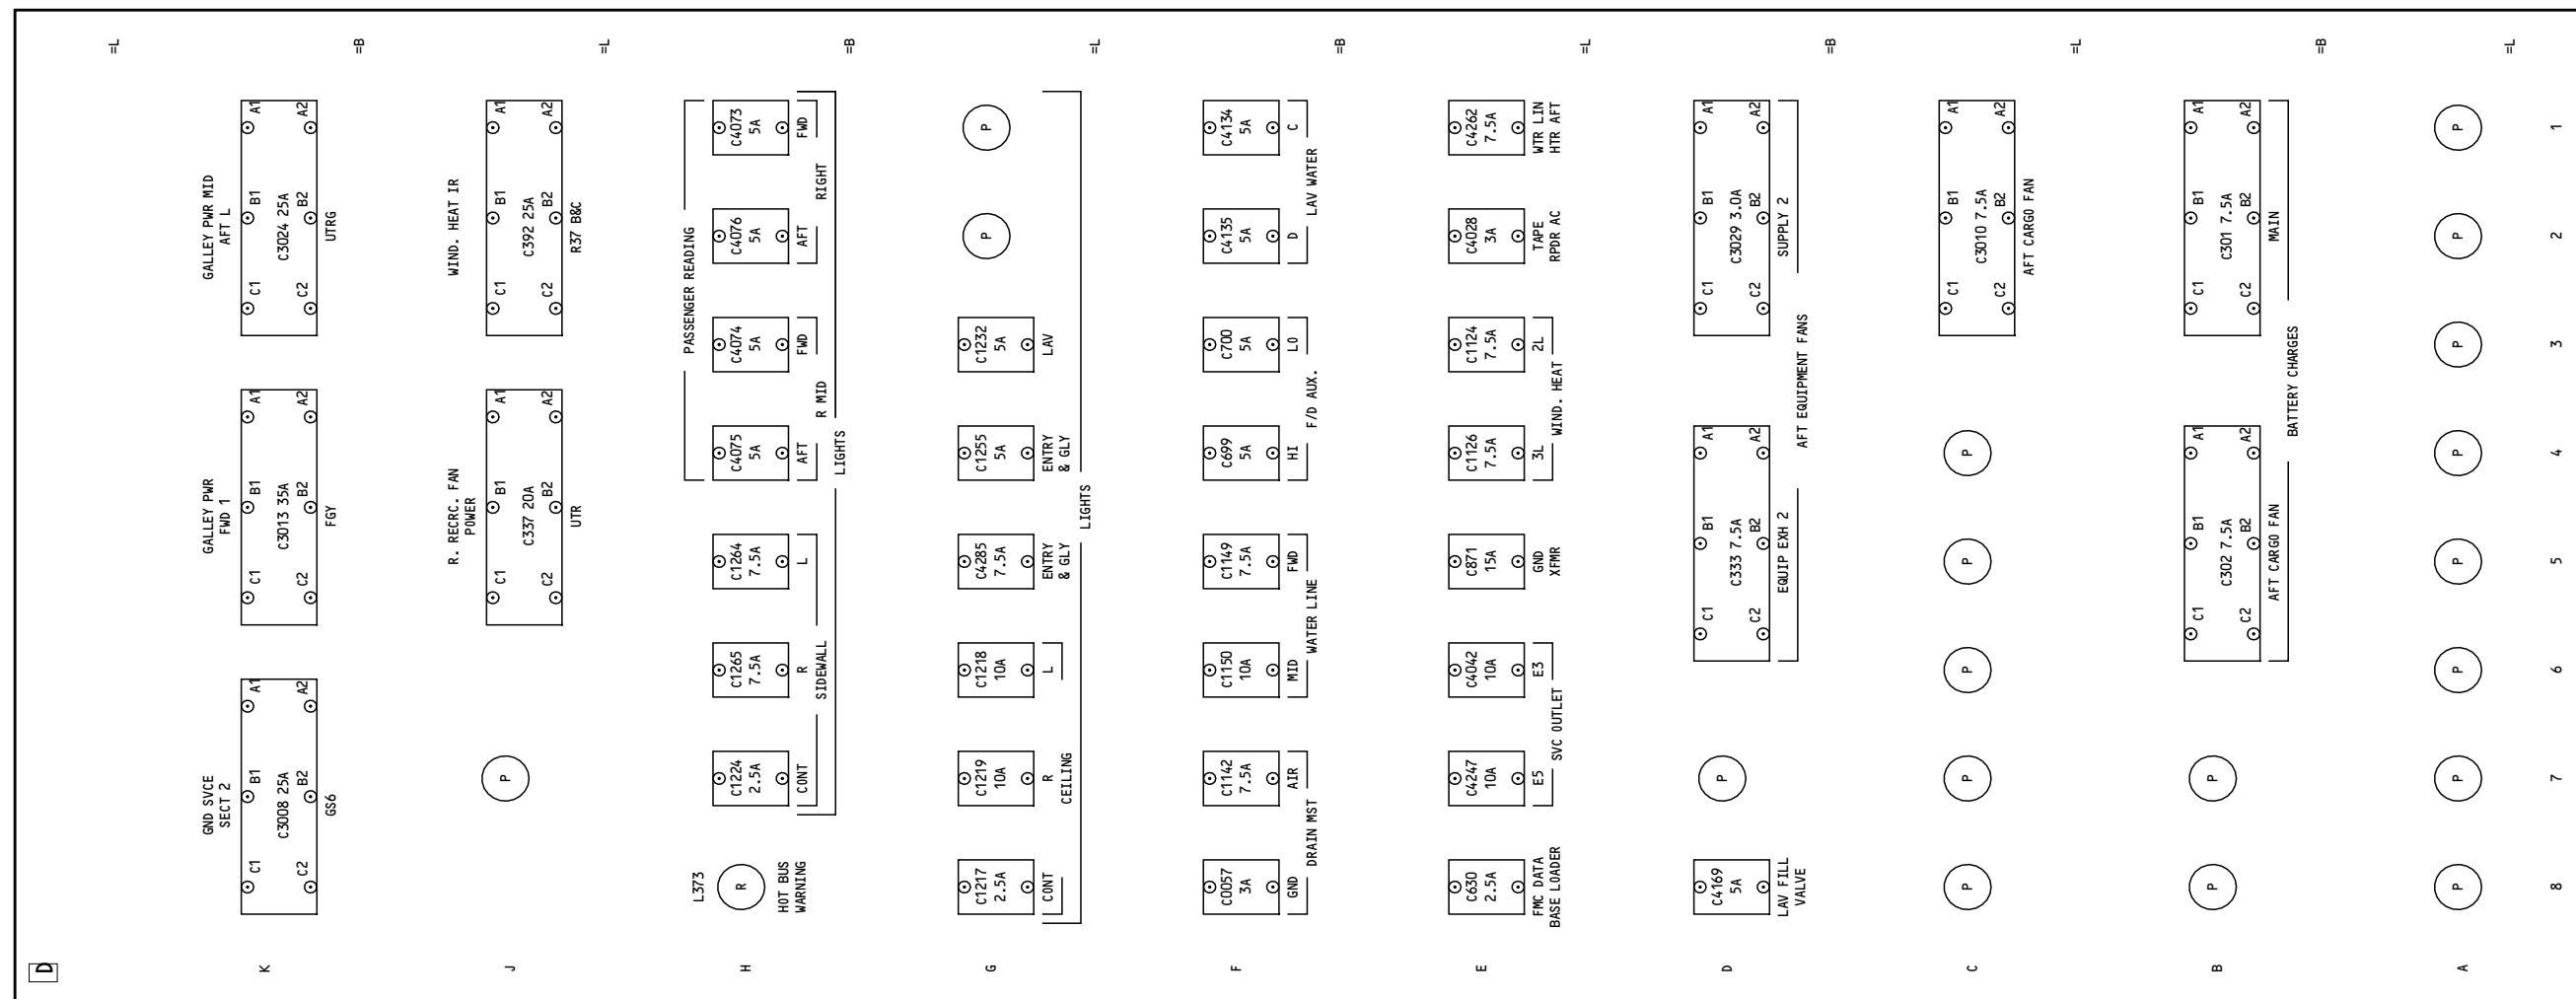


## REAR VIEW





	A	B	C	D
1	TB177			
2				
3				
4				
5				
6				
7				
8				
9				
10				
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				

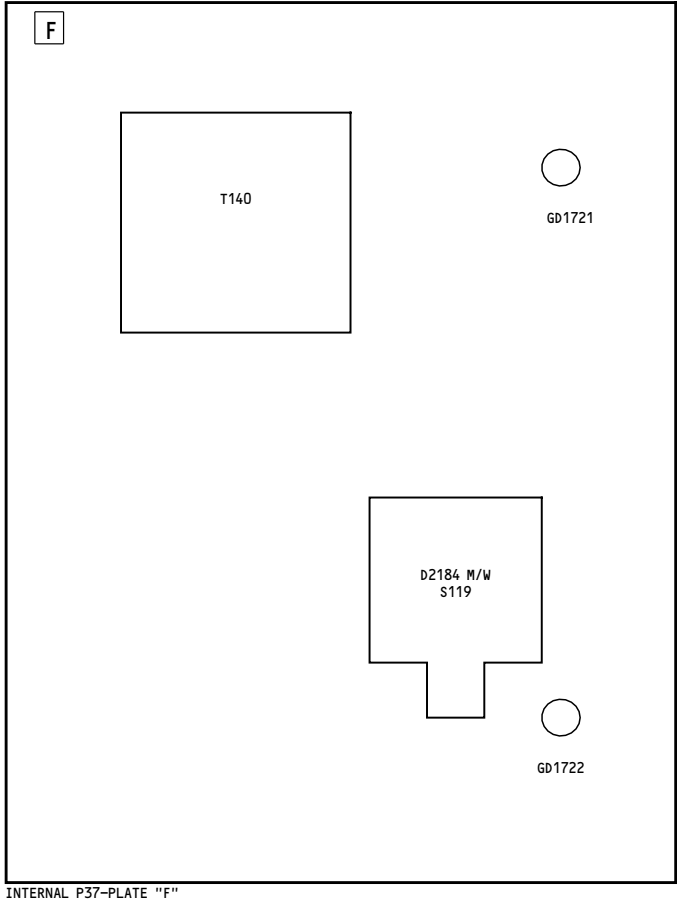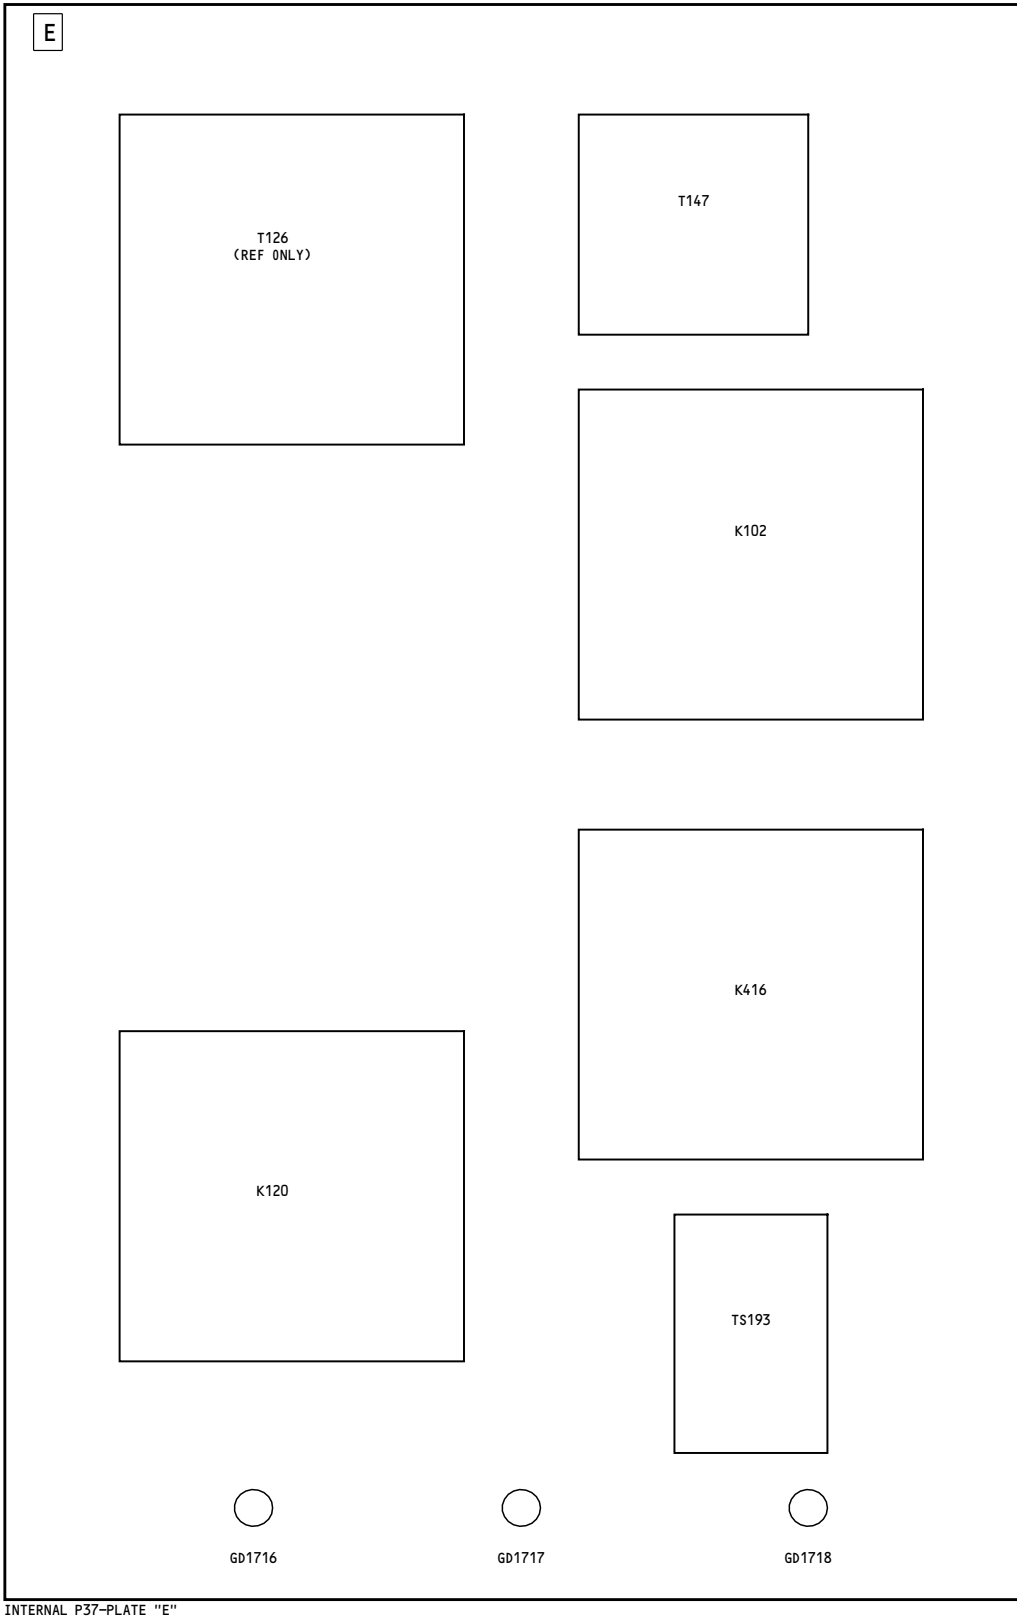


	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41
A	TB178																																								
B																																									
C																																									
D																																									

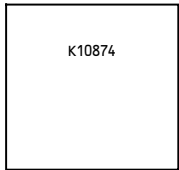


LOCATED INSIDE TOP OF FWD END OF PANEL

  

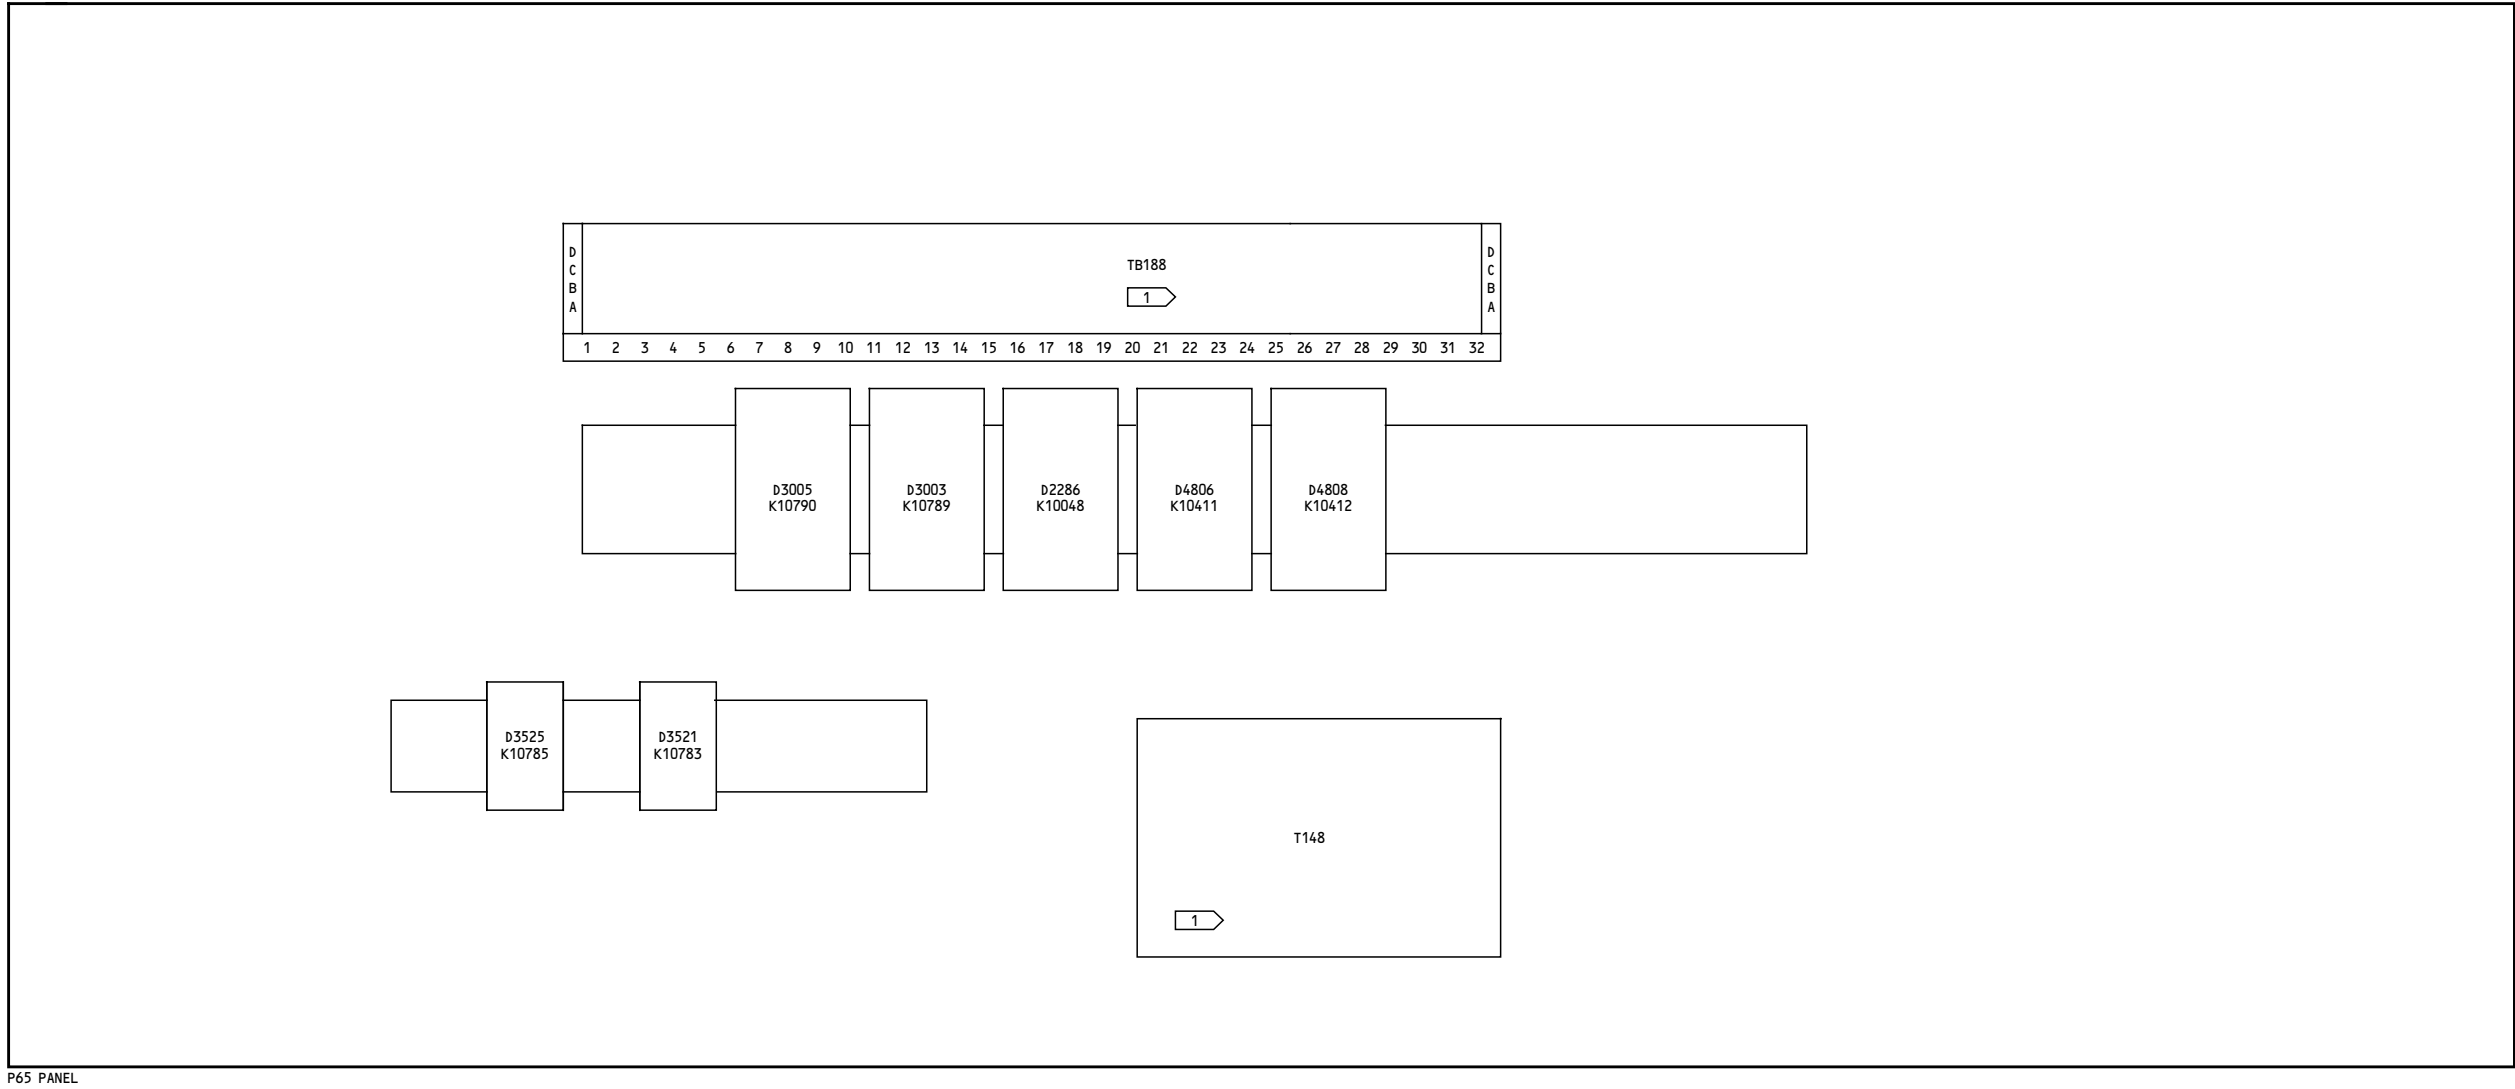

P65 PANEL

**NOTES:**

  COMPONENT MOUNTED ON REVERSE SIDE OF PANEL

ALL	<b>P65 MISC ELEC EQUIP PNL</b>
	D280N032

**91-02-27**


Page 1

May 17/2006

**91-02-27**


Page 1

May 17/2006

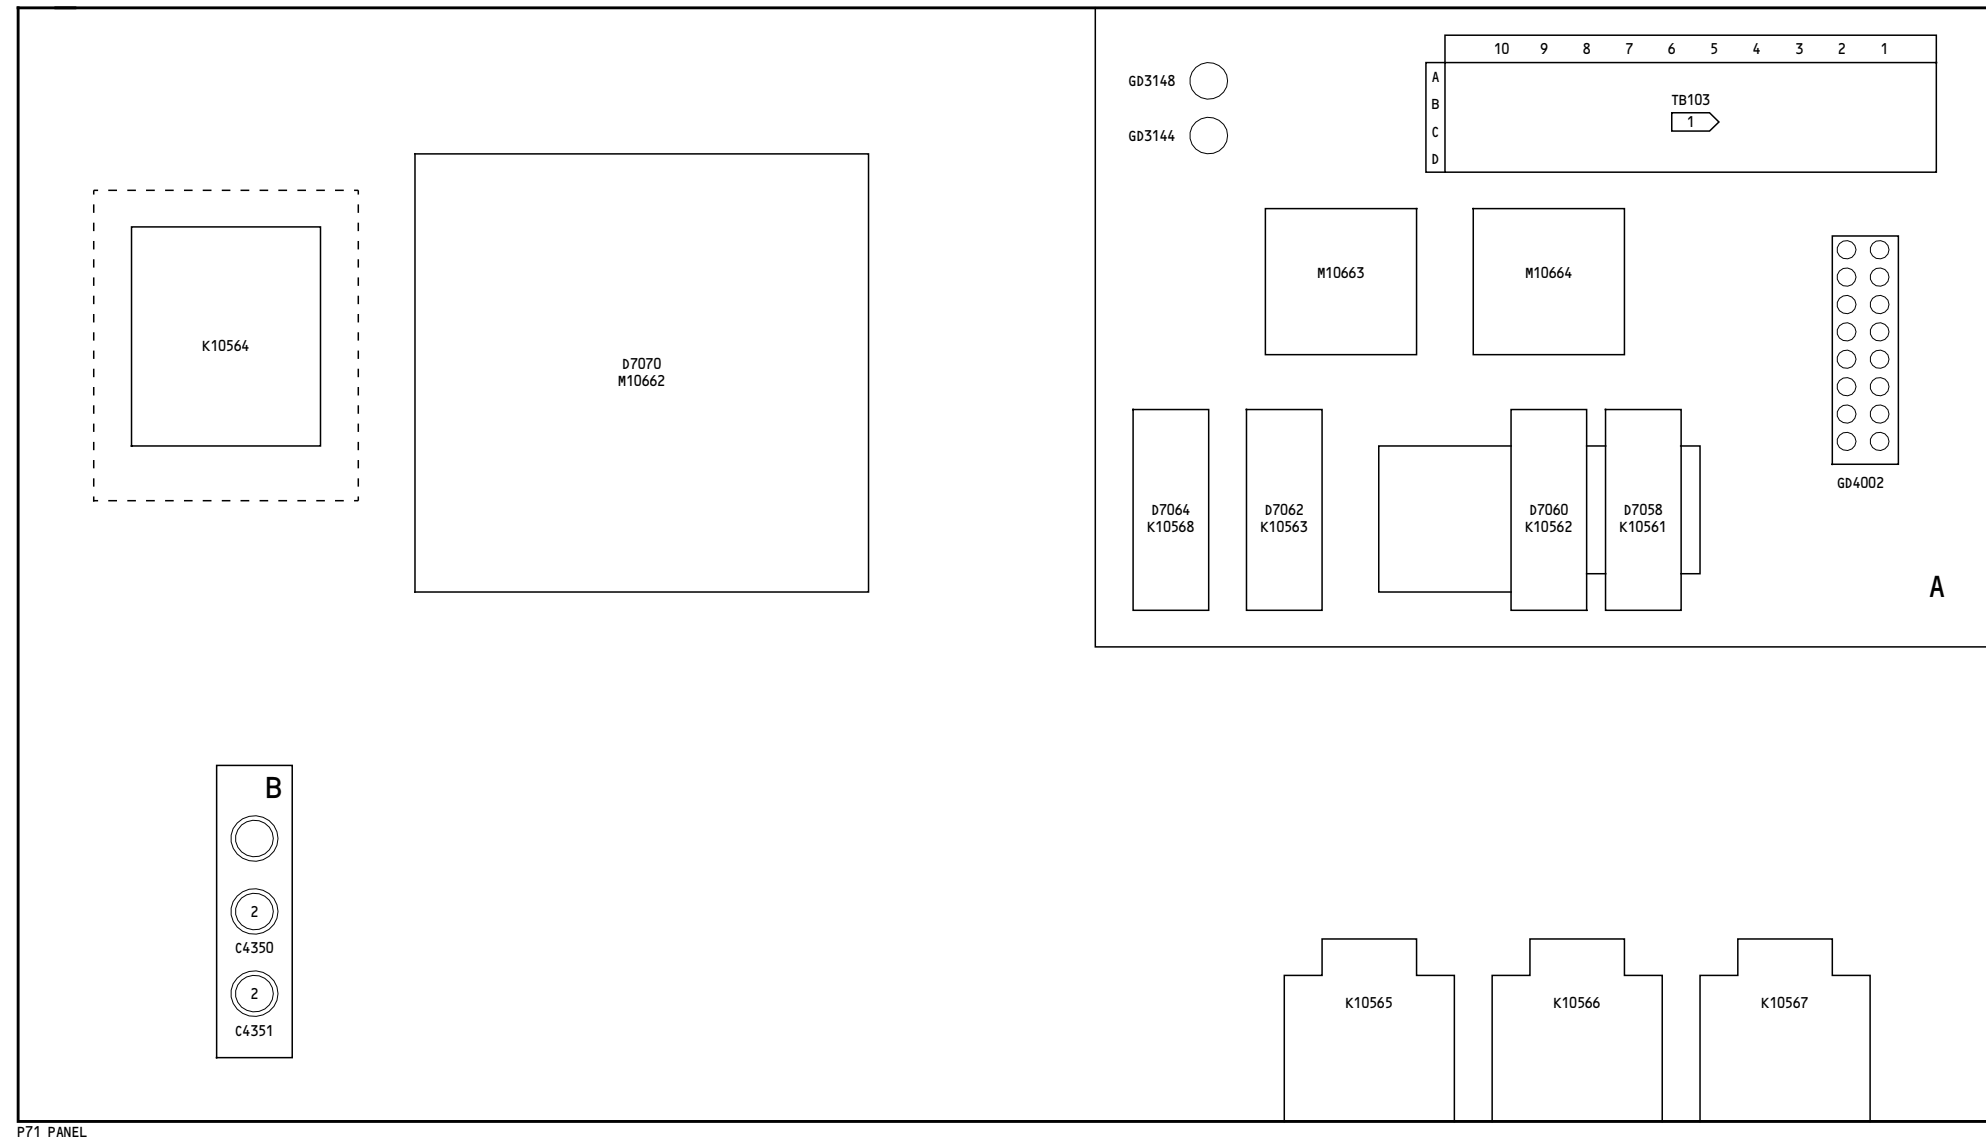


P71 PANEL


- Dec 18/2007

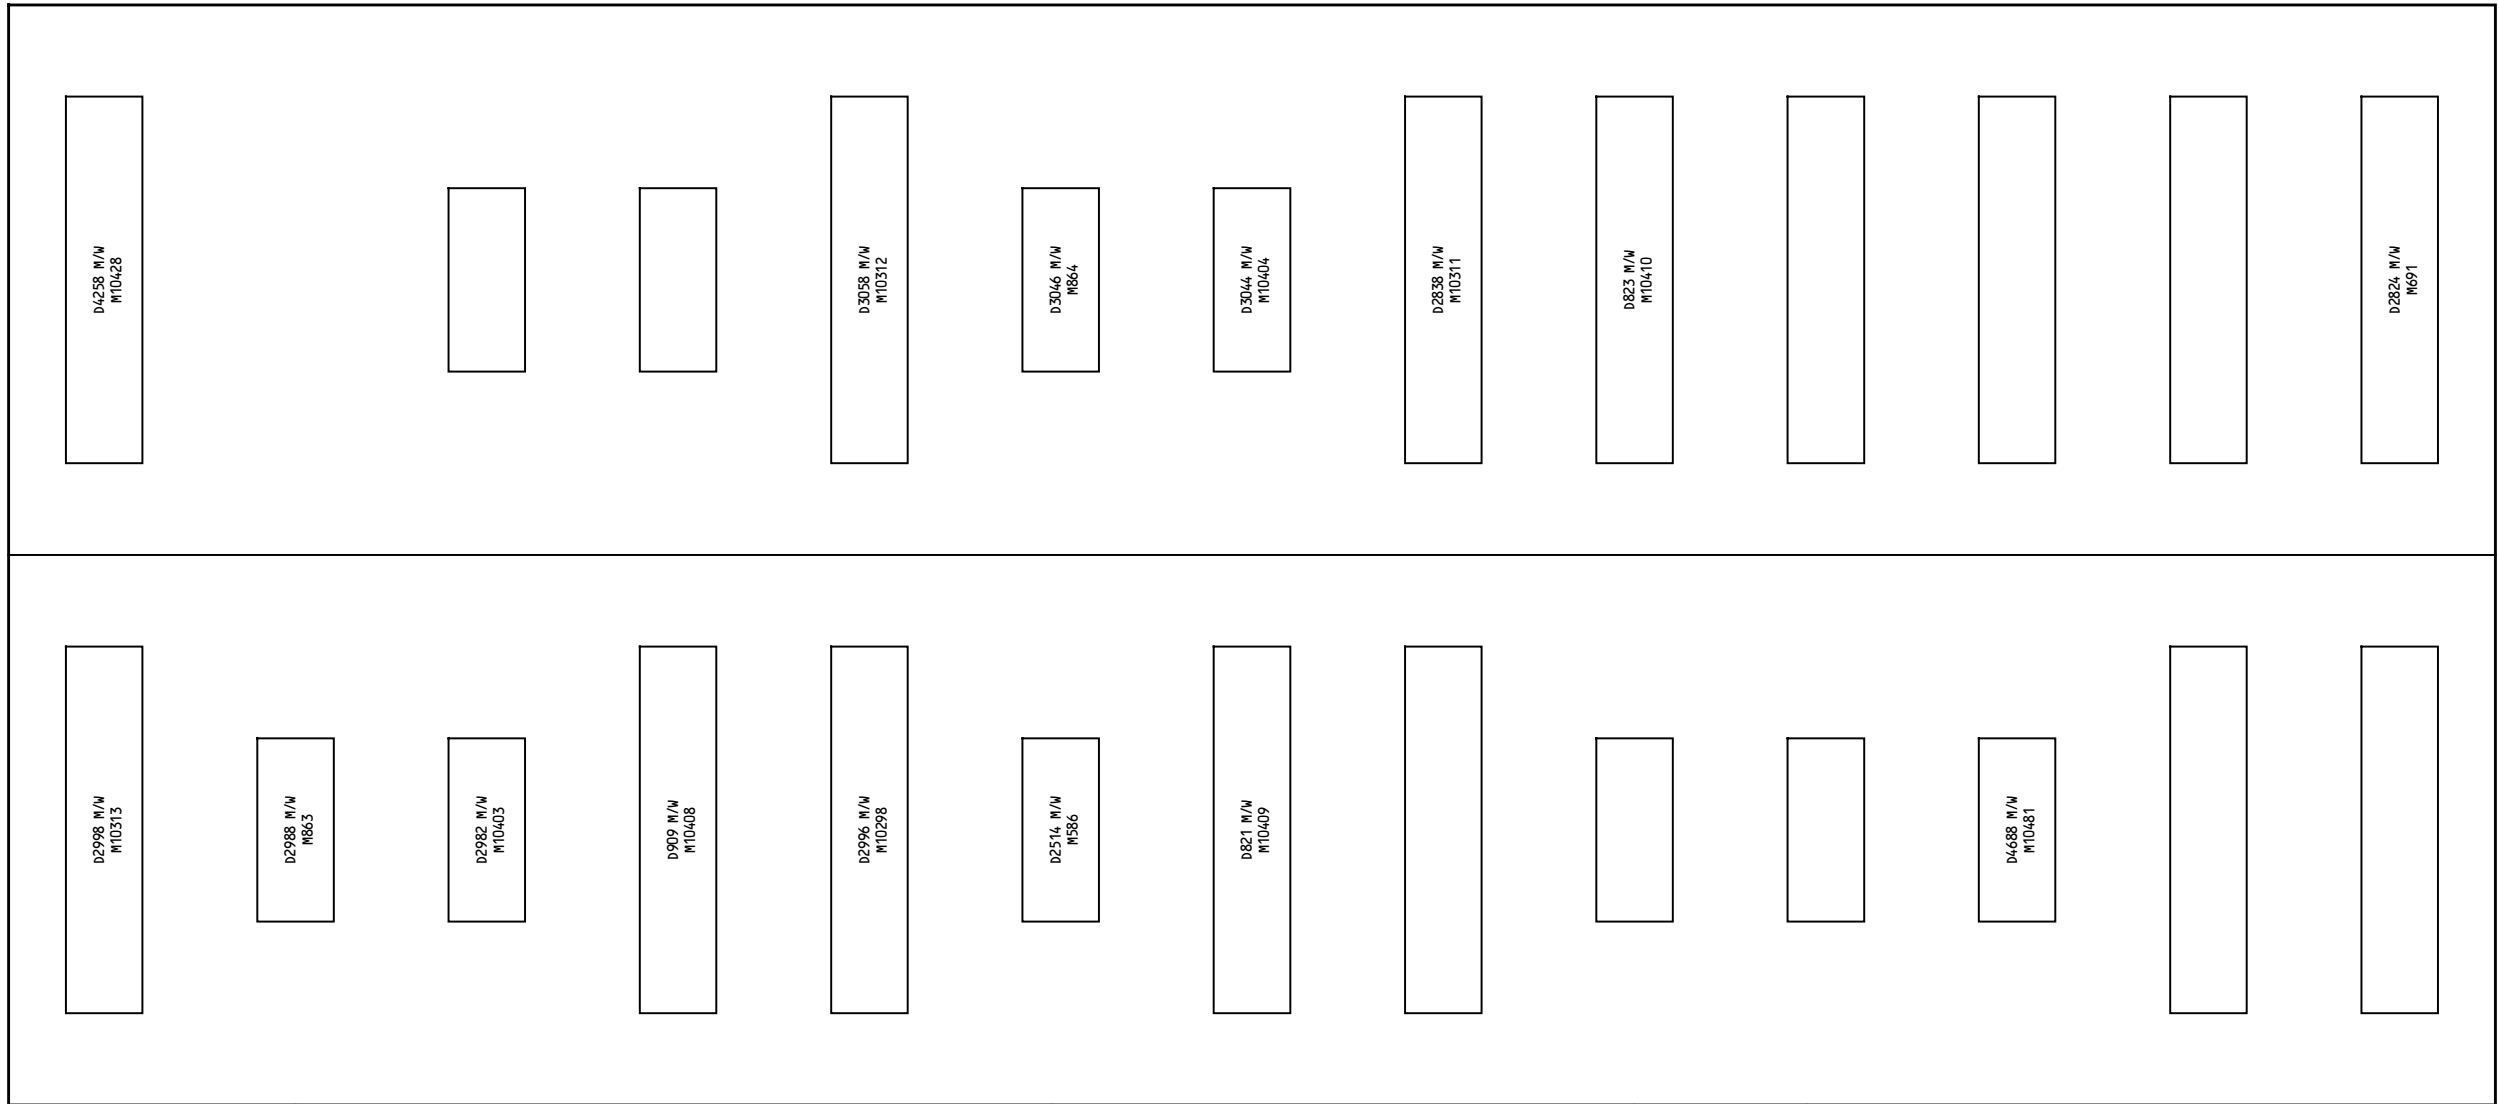


	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
A	TB147																			
B																				
C																				
D																				

 


GD210

 

GD209

 

GD208

 

GD207

**NOTES:**  
REFER TO 91-04-00 FOR DISCONNECT PANEL INFORMATION

ALL	<b>P50 PANEL ELECTRICAL SYSTEMS CARD FILE</b>
	D280N032

**91-02-31**



Page 1

Jan 21/2005

**91-02-31**

Page 1

Jan 21/2005

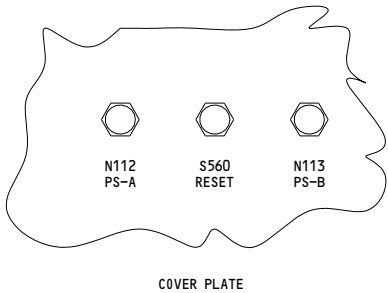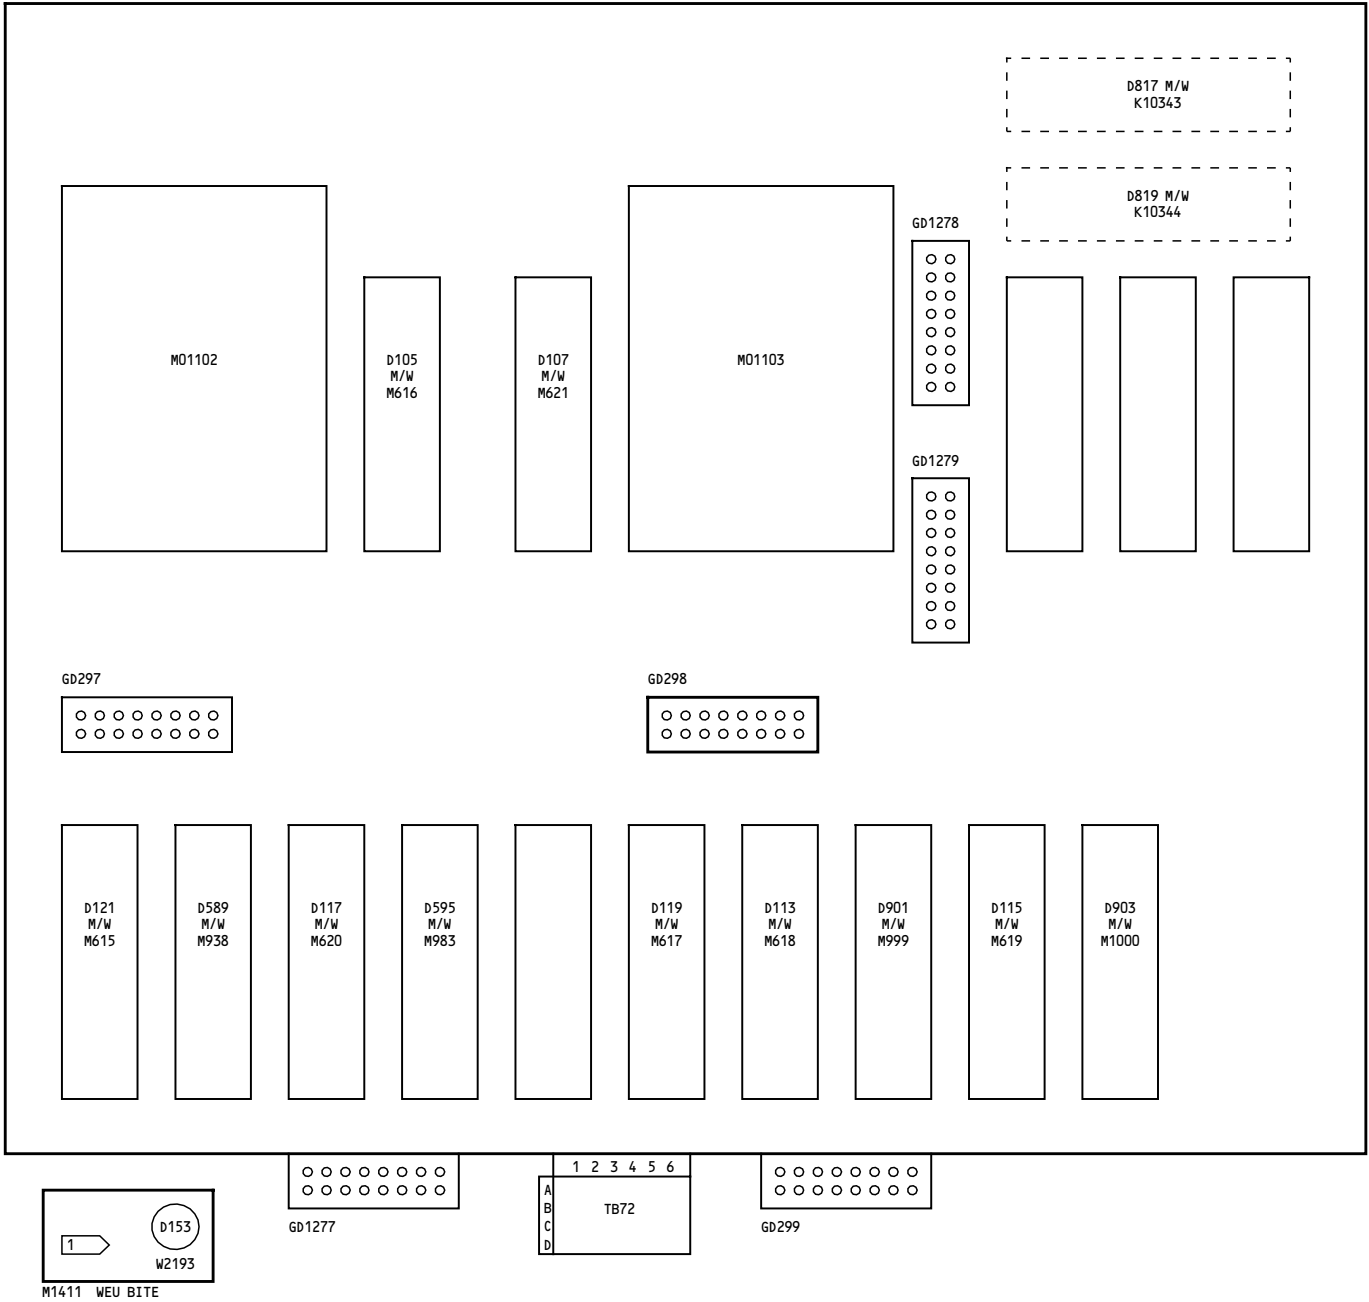

FRONT VIEW OF PANEL

**NOTES:** FOR PANEL DISCONNECT BRACKET AND CONNECTOR POSITIONS, SEE 91-04-XX

THIS IS A GENERIC DRAWING. SEE EQUIPMENT LIST FOR ITEMS INSTALLED.

1 MOUNTED AT BASE NEAR P51

001-099

**P51 PANEL WARNING  
ELECTRONIC UNIT CARD FILE**

D280N032

**91-02-32**



Page 1

Jan 21/2005

**91-02-32**

Page 1

Jan 21/2005

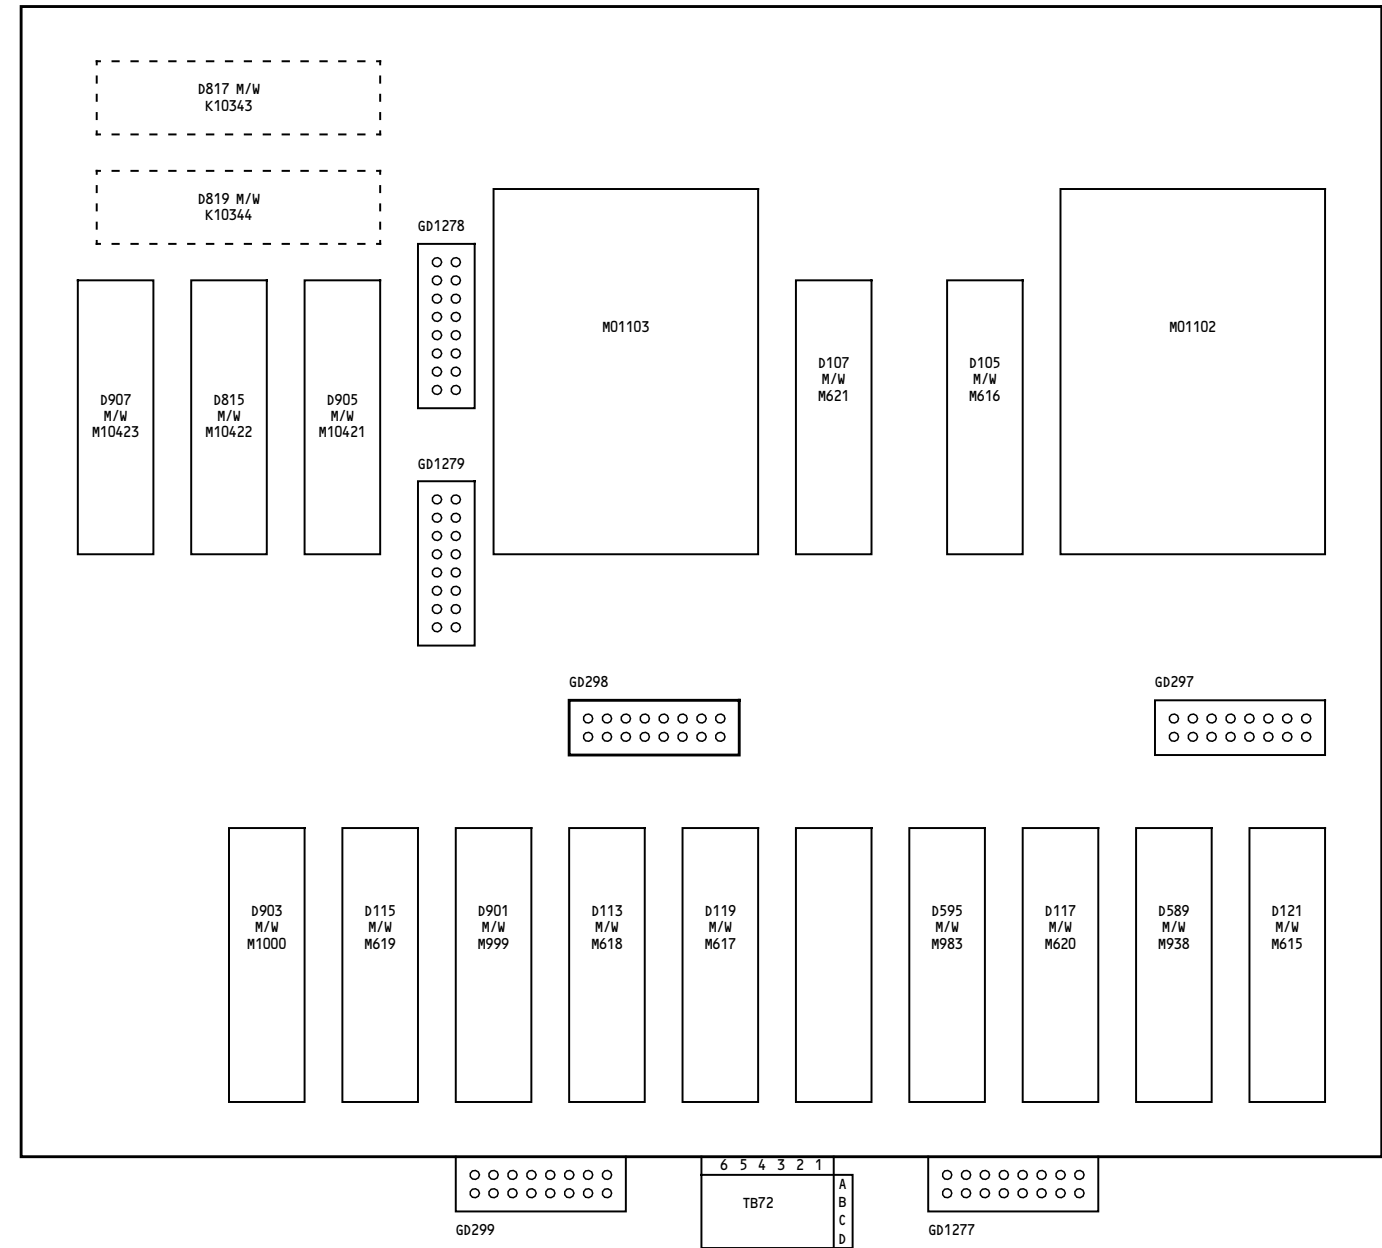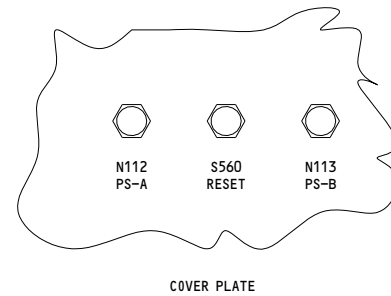

NOTES: REFER TO 91-04-00 FOR DISCONNECT PANEL INFORMATION

115-199

**P51 PANEL WARNING  
ELECTRONIC UNIT CARD FILE**

D280N032

**91-02-32**


Page 2

Jan 21/2005

**91-02-32**

Page 2

Jan 21/2005

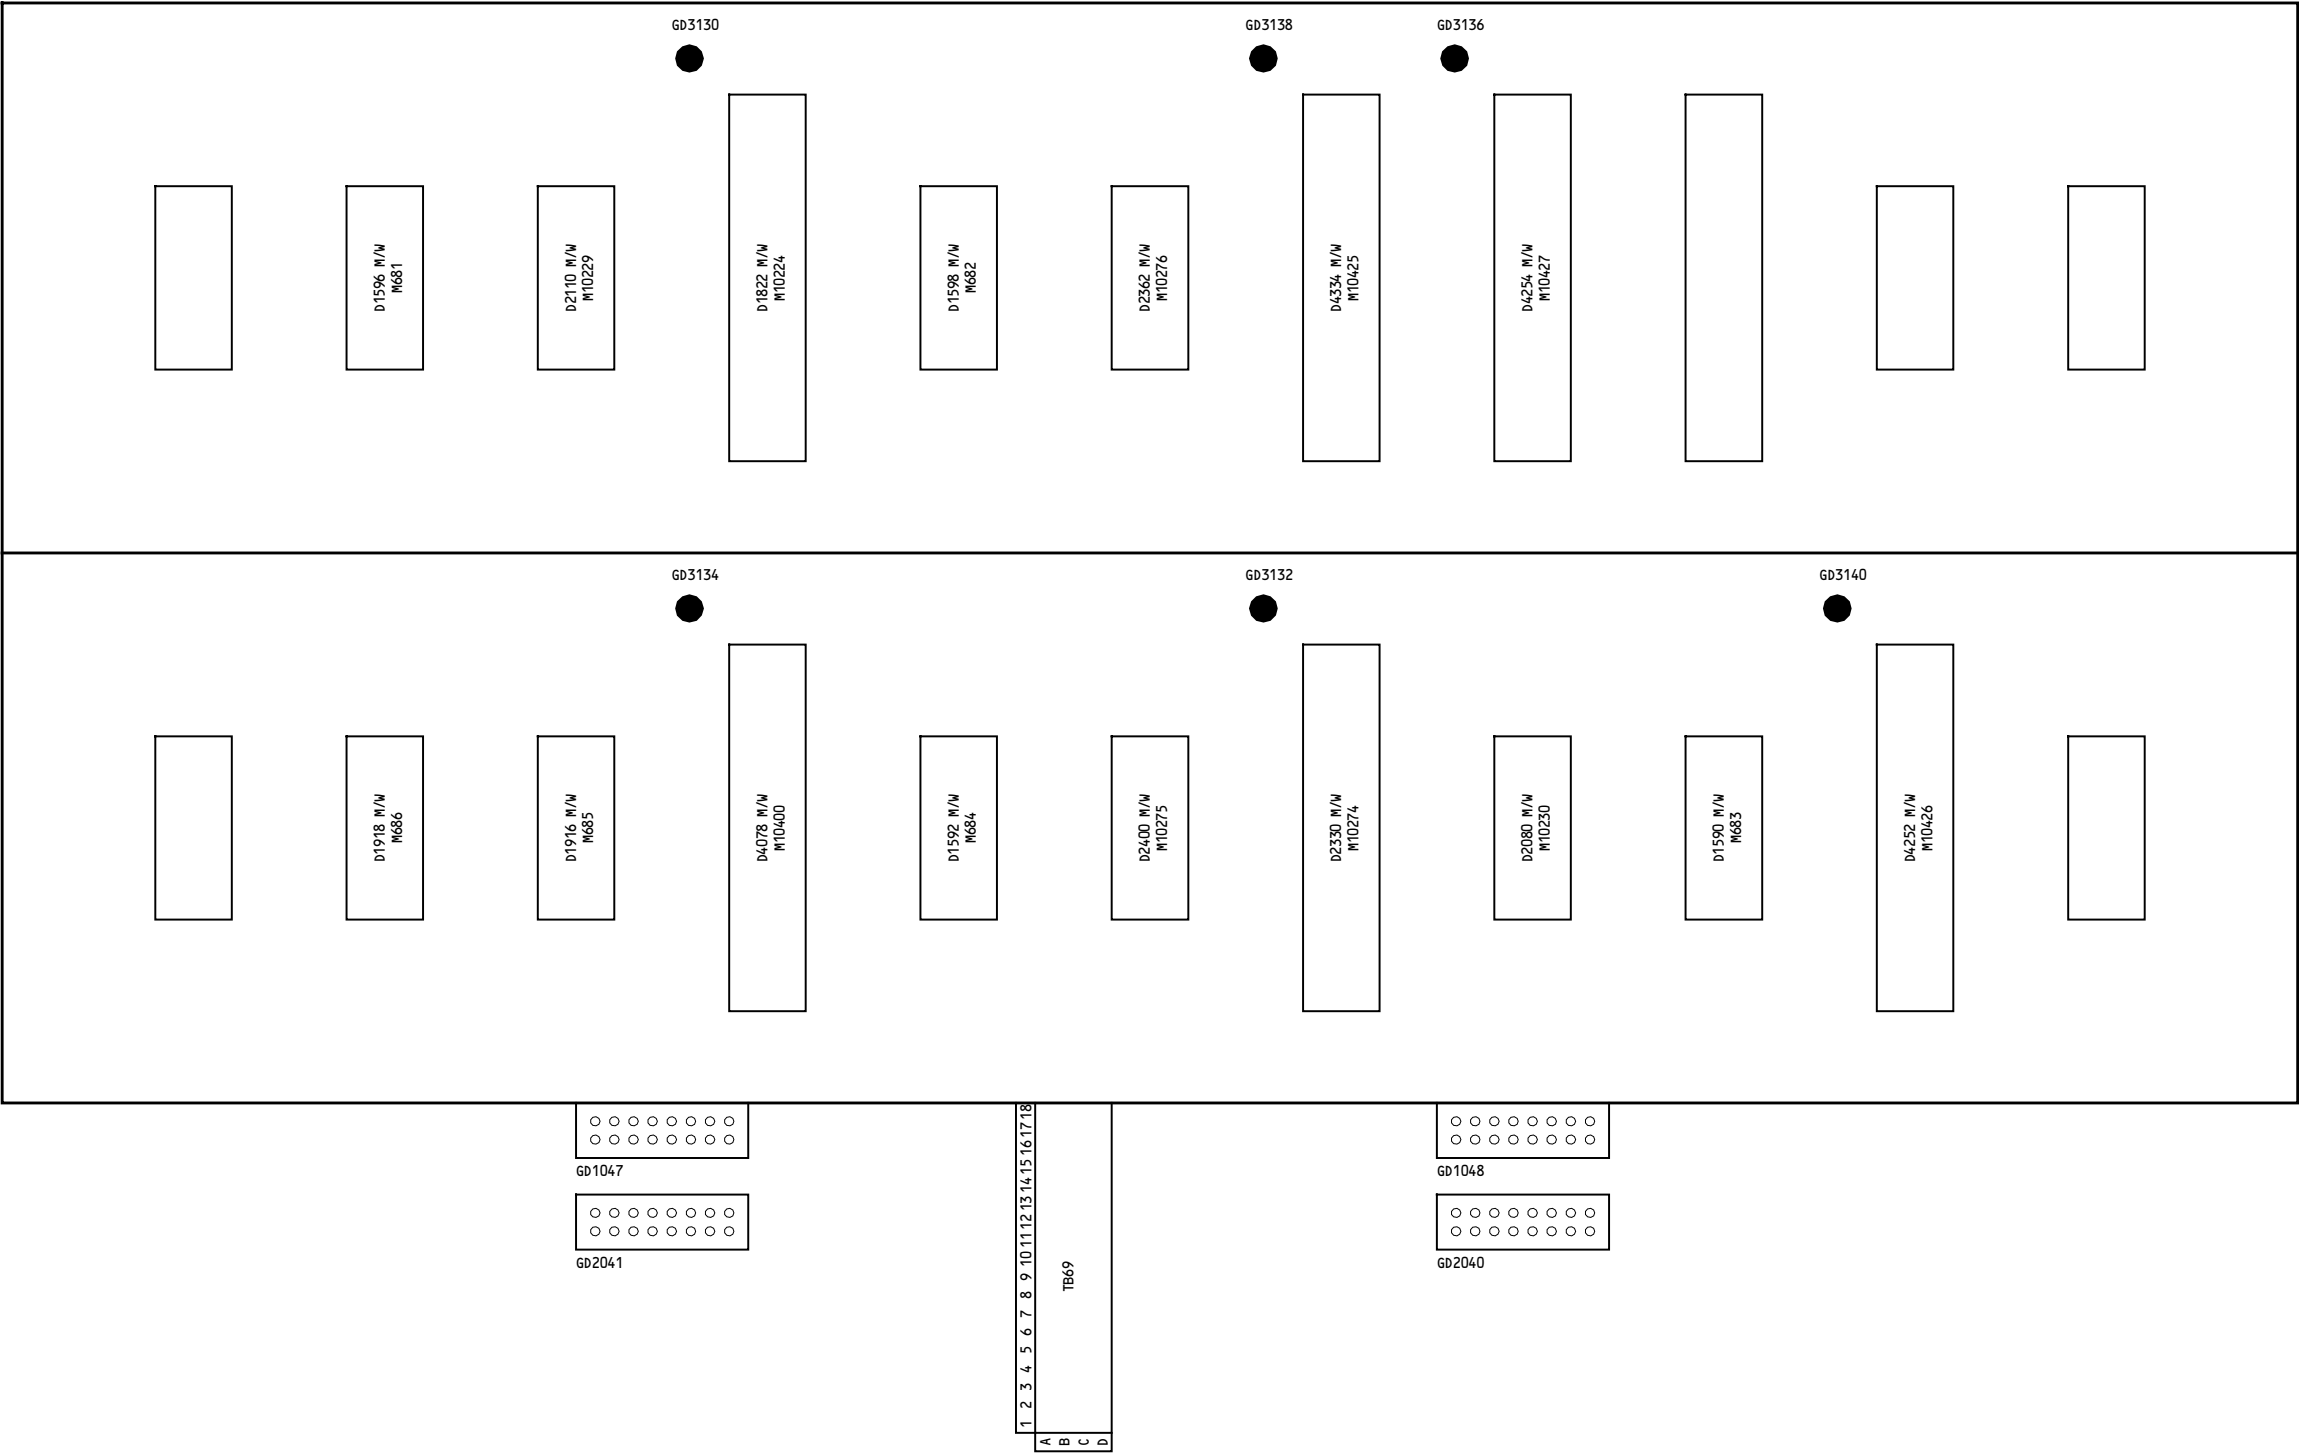

**NOTES:**  
REFER TO 91-04-00 FOR DISCONNECT PANEL INFORMATION

ALL	<b>P54 PANEL FIRE DETECTION CARD FILE</b>  D280N032
-----	---------------------------------------------------------------

**91-02-33**

Page 1


Jan 21/2005

**91-02-33**

Page 1

Jan 21/2005



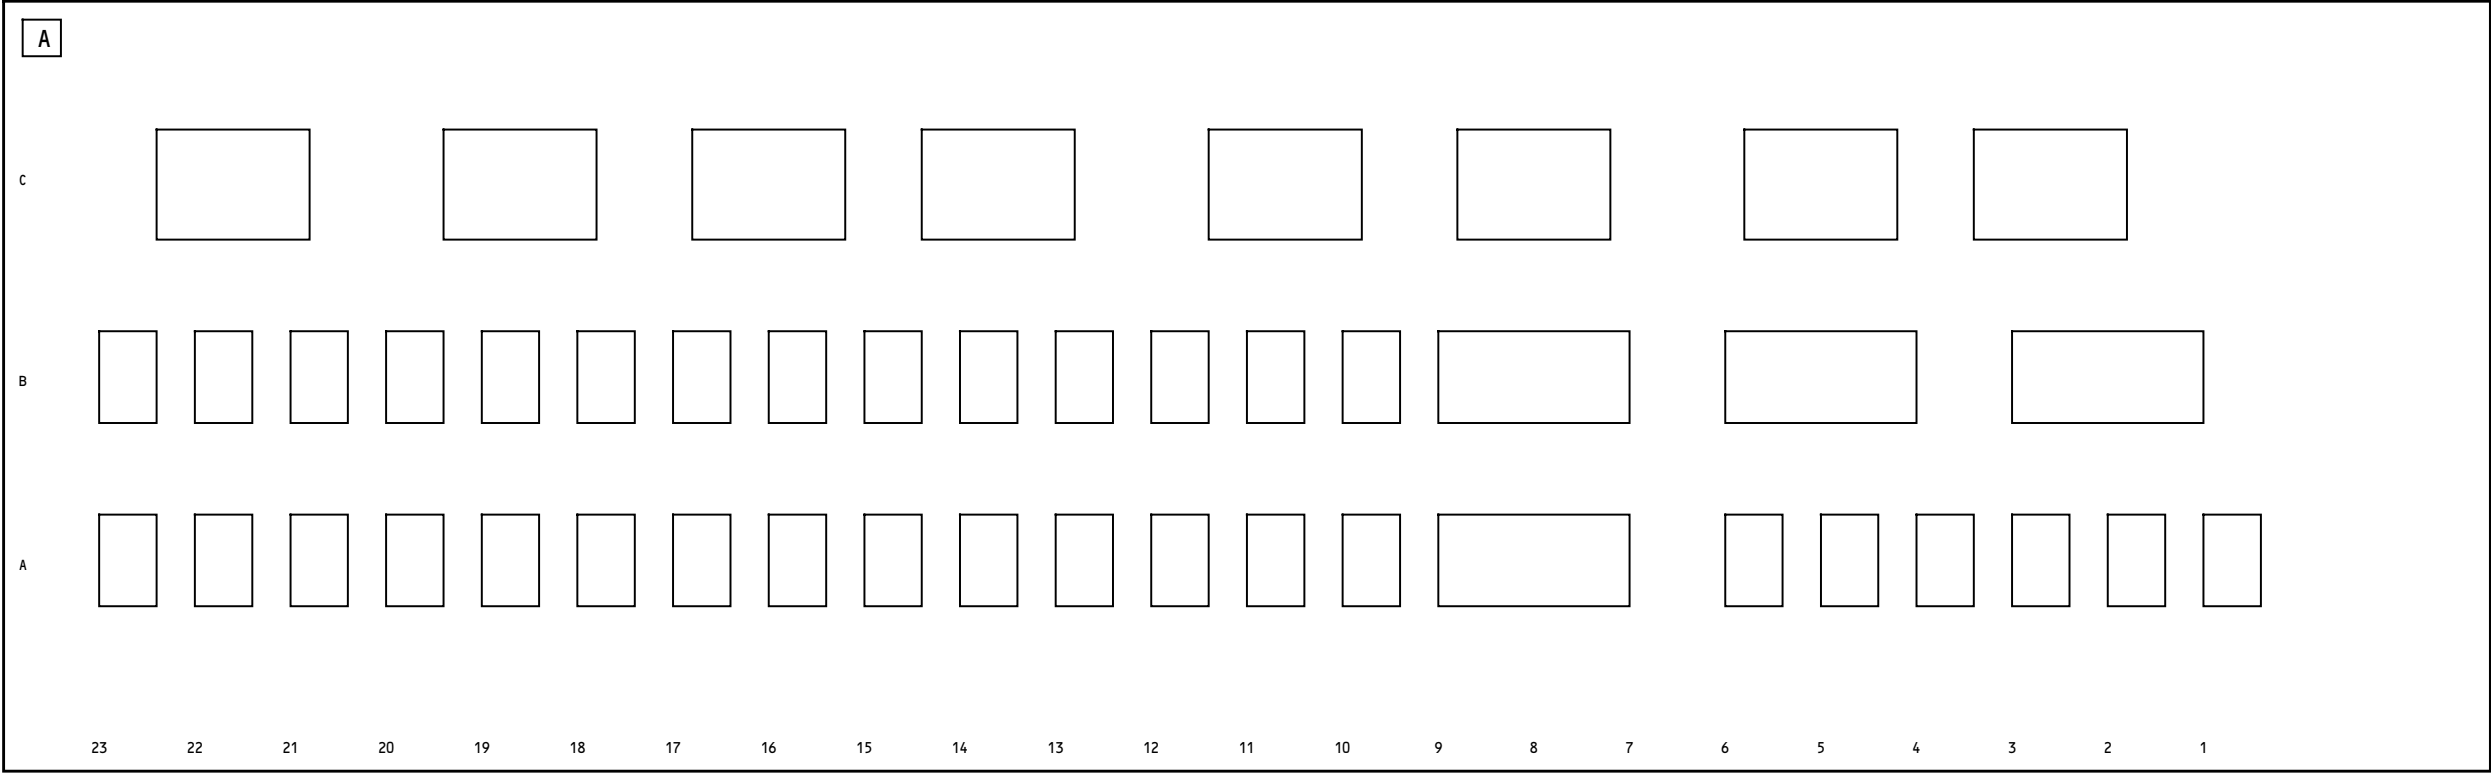

**NOTES:**  
REFER TO 91-02-00 FOR CIRCUIT BREAKER INFORMATION

ALL	<b>P70 PANEL MISCELLANEOUS ELECTRICAL EQUIPMENT (CIRCUIT BREAKER)</b>
	D280N032

**91-02-34**


Page 1

Jan 21/2005

**91-02-34**

Page 1

Jan 21/2005

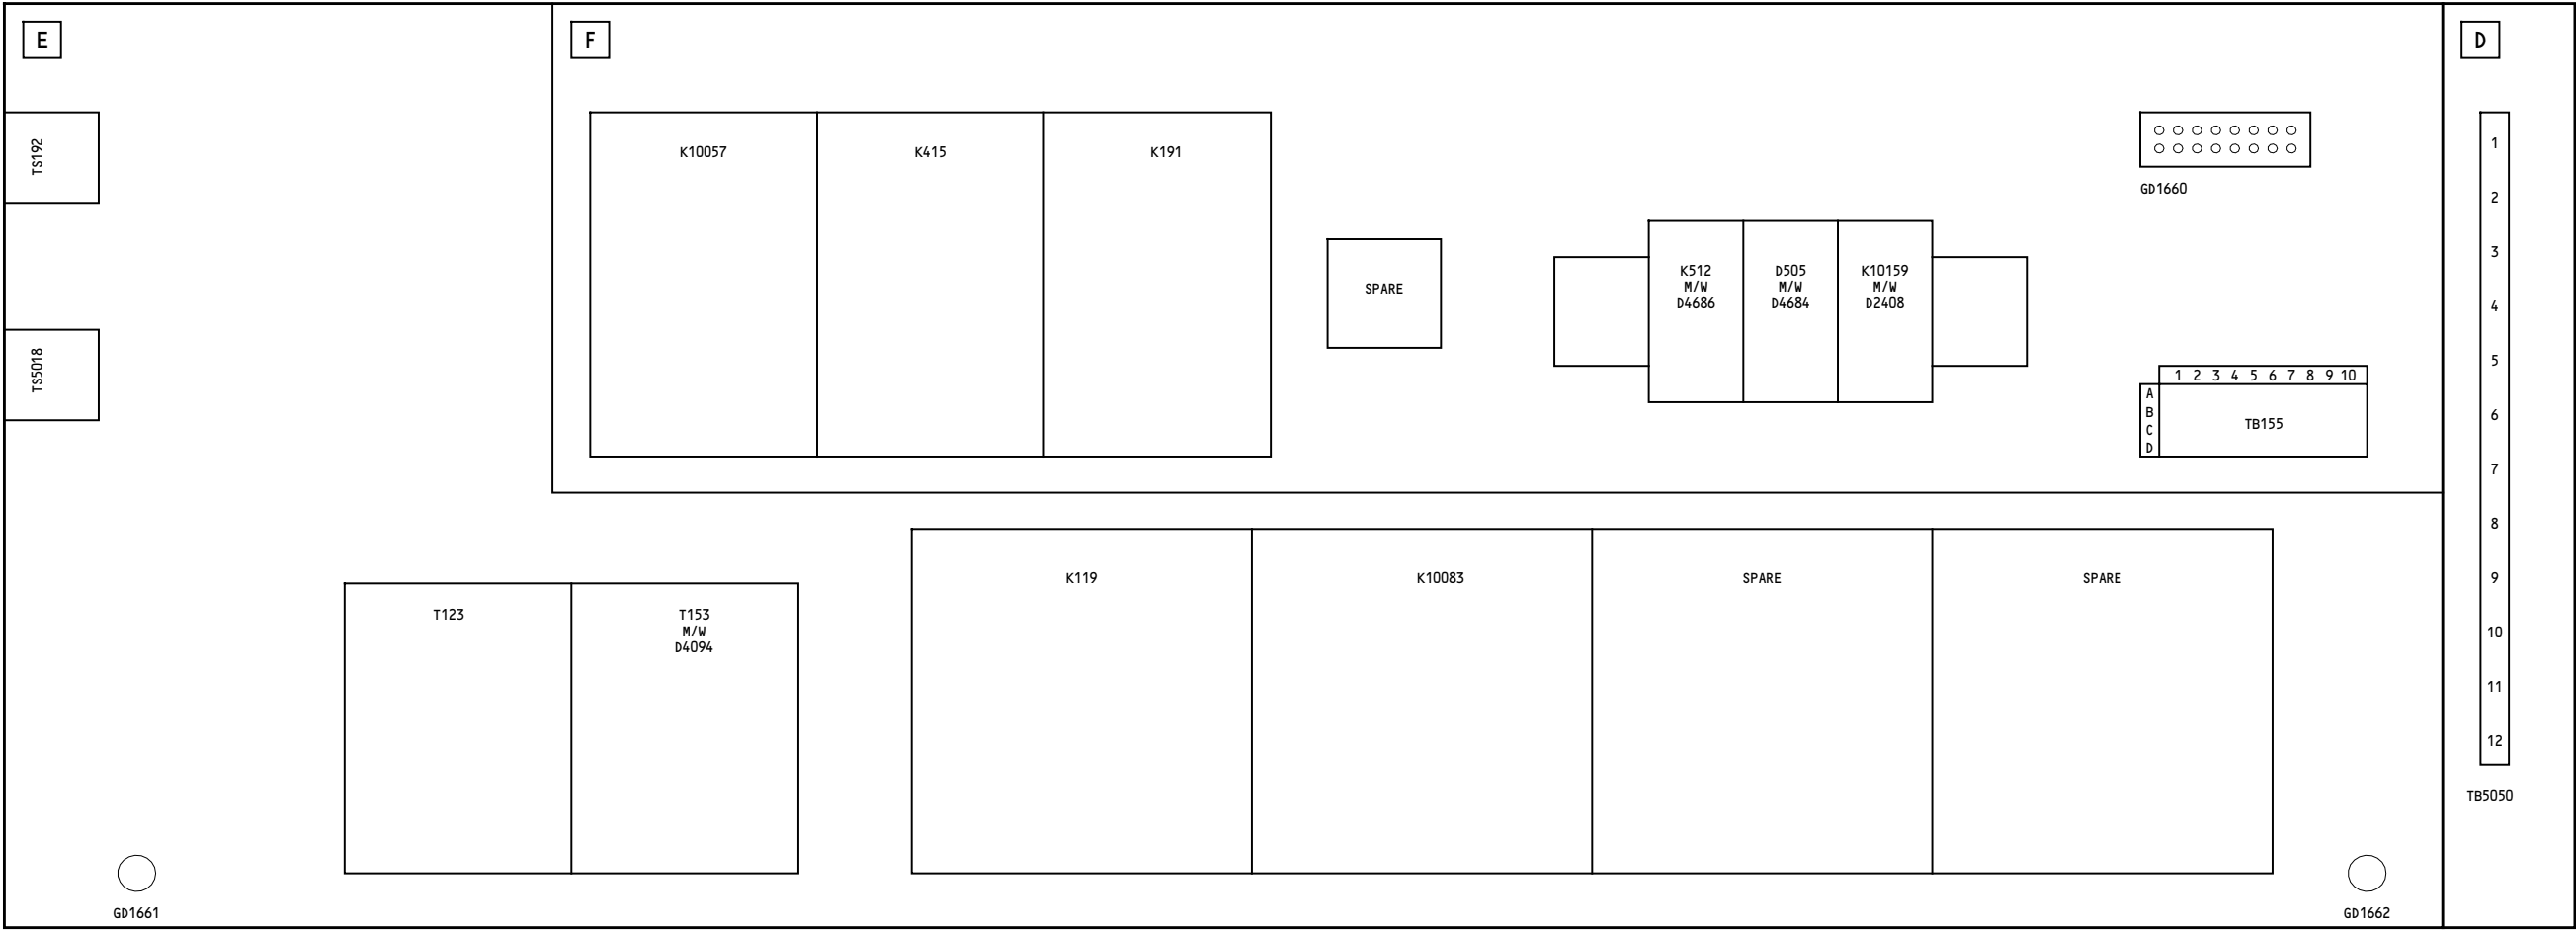

**NOTES:**  
REFER TO 91-04-00 FOR DISCONNECT PANEL INFORMATION

001-099	<b>P70 PANEL MISCELLANEOUS ELECTRICAL EQUIPMENT</b>
	D280N032

**91-02-35**


Page 1

Jan 21/2005

**91-02-35**

Page 1

Jan 21/2005

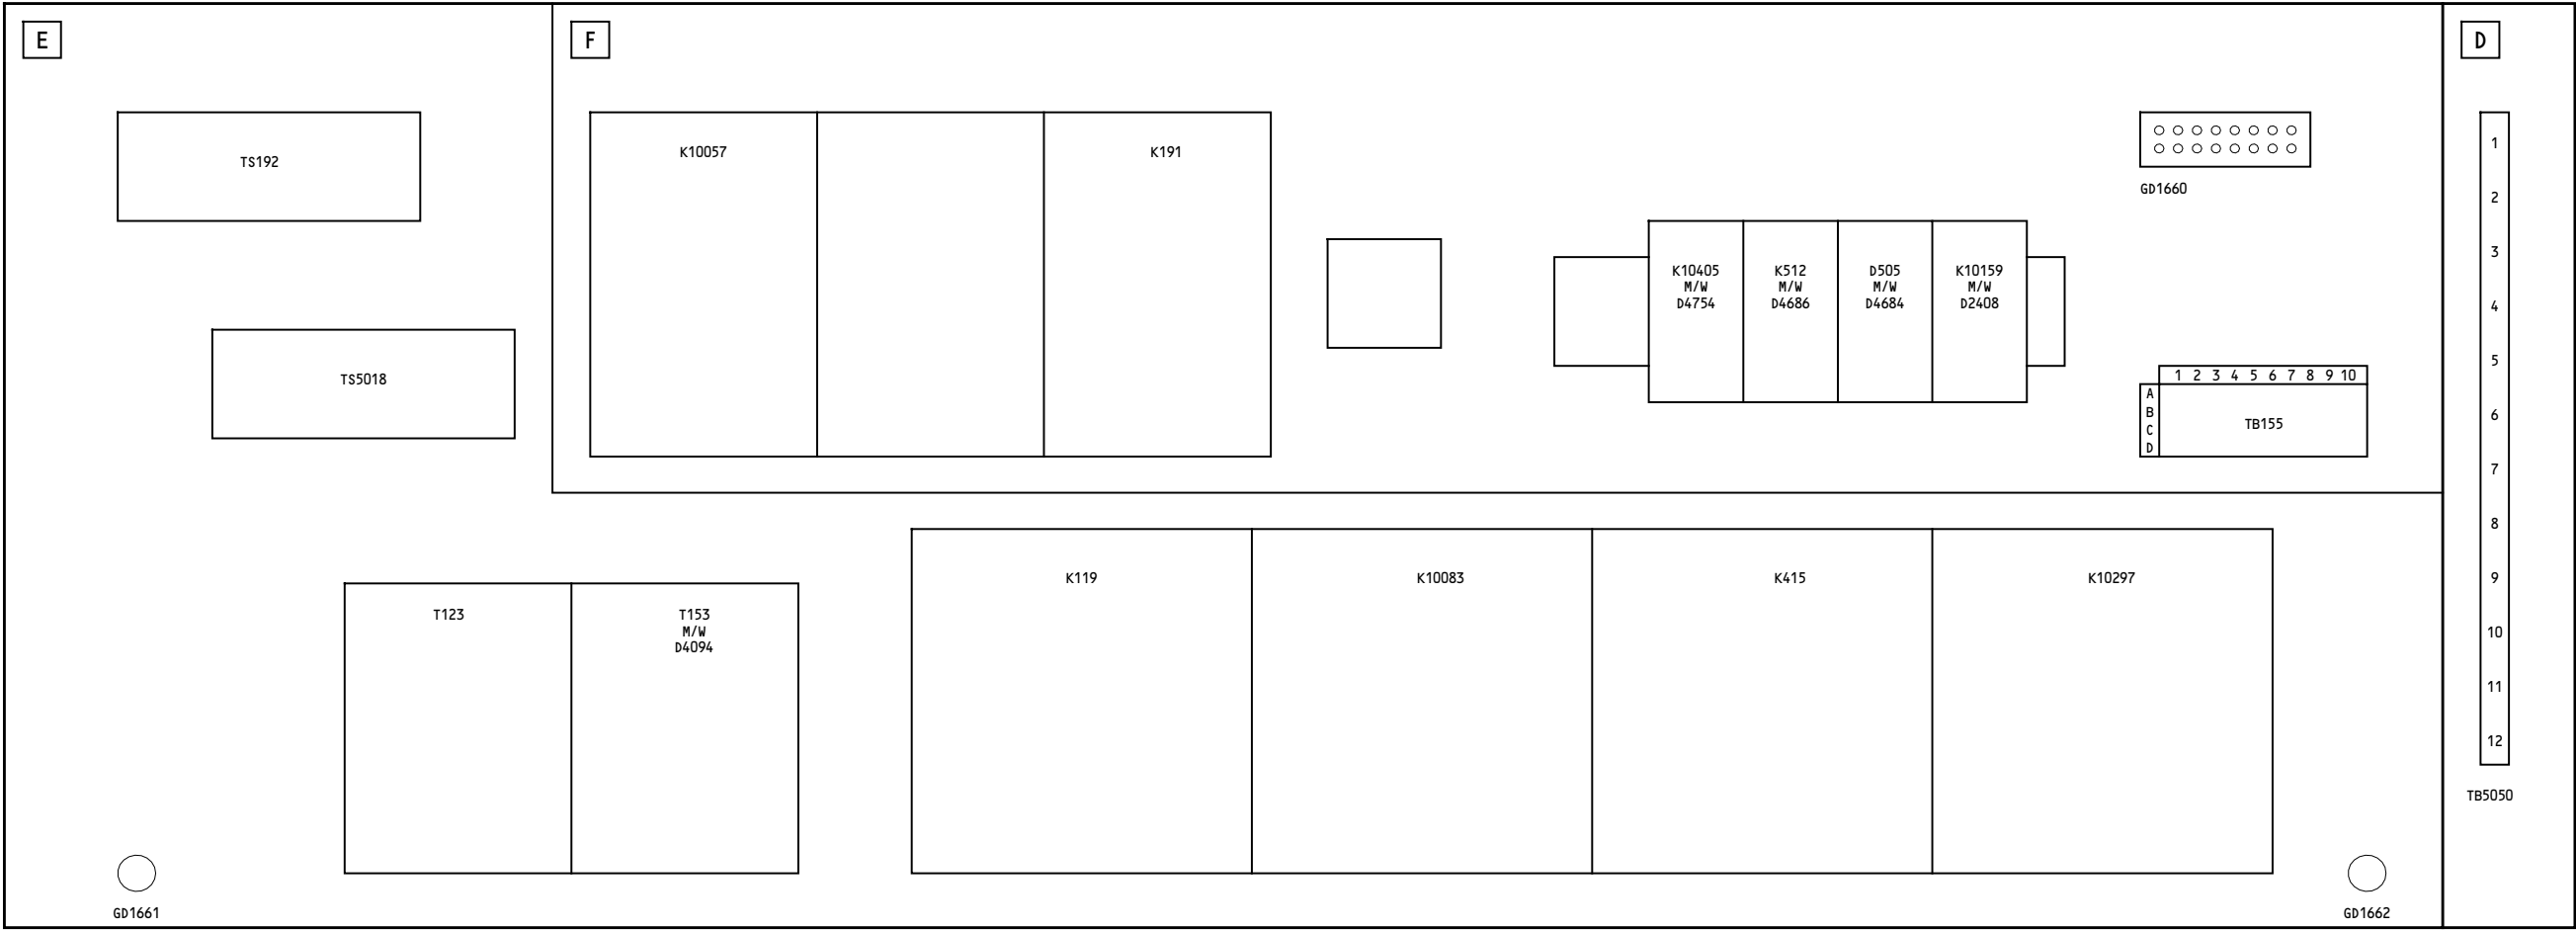


**NOTES:**  
REFER TO 91-04-00 FOR DISCONNECT PANEL INFORMATION


115-199	<b>P70 PANEL MISCELLANEOUS ELECTRICAL EQUIPMENT</b>
	D280N032

**91-02-35**  
Page 2  
Jan 21/2005


**91-02-35**  
Page 2  
Jan 21/2005

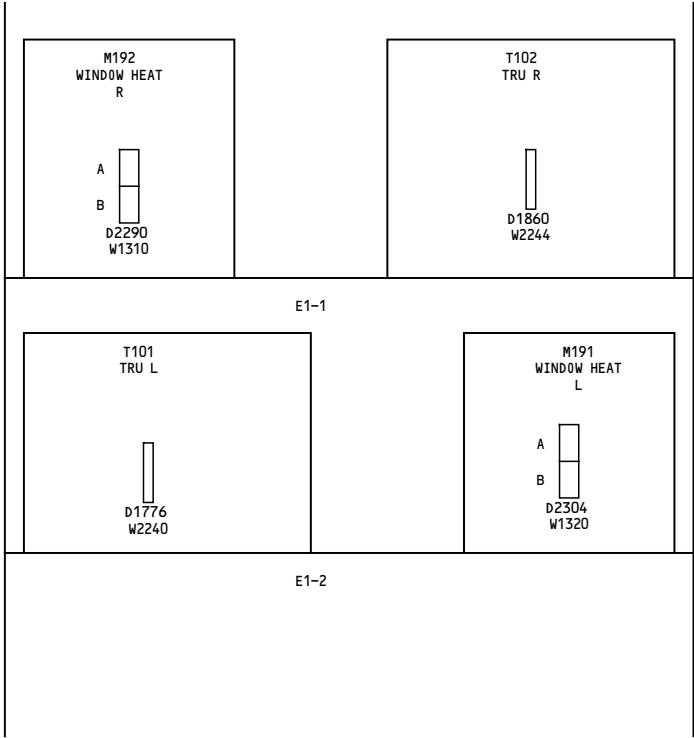


E1 RACK  
LOOKING AFT  
(NO SCALE)

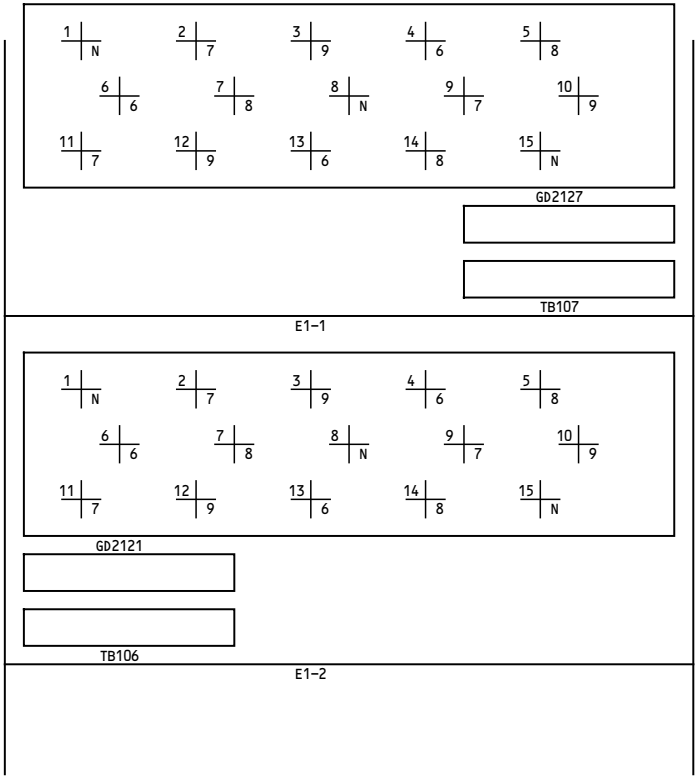

E1 RACK  
LOOKING FORWARD  
(NO SCALE)

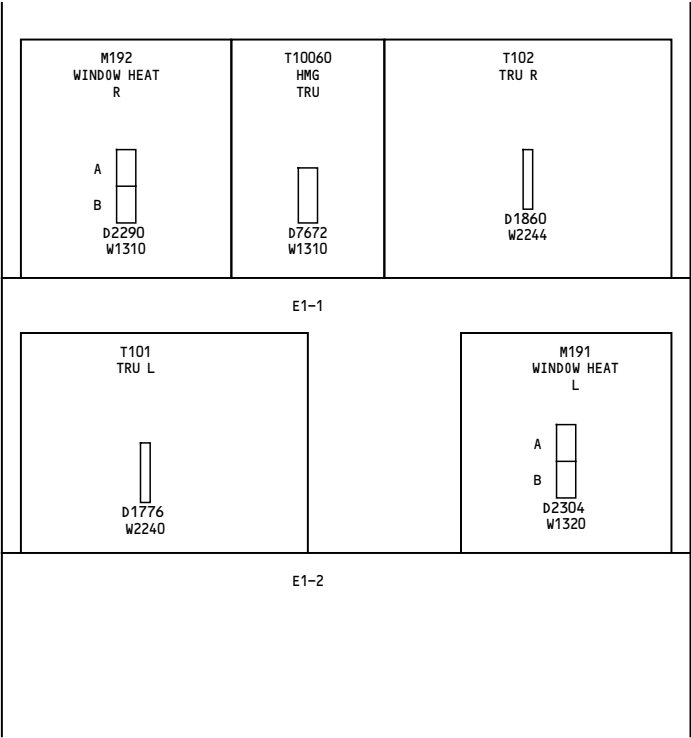


E1 RACK  
LOOKING AFT  
(NO SCALE)

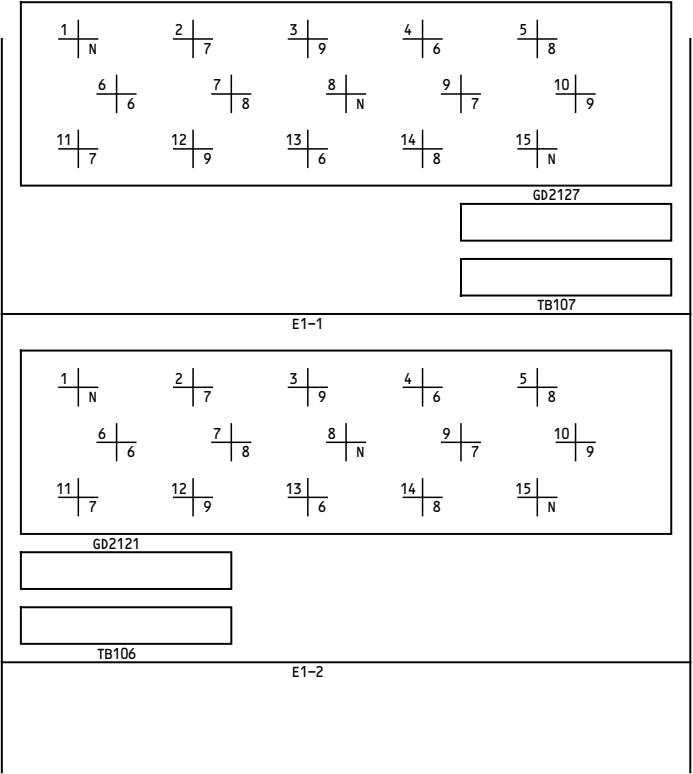

E1 RACK  
LOOKING FORWARD  
(NO SCALE)



-B  
7

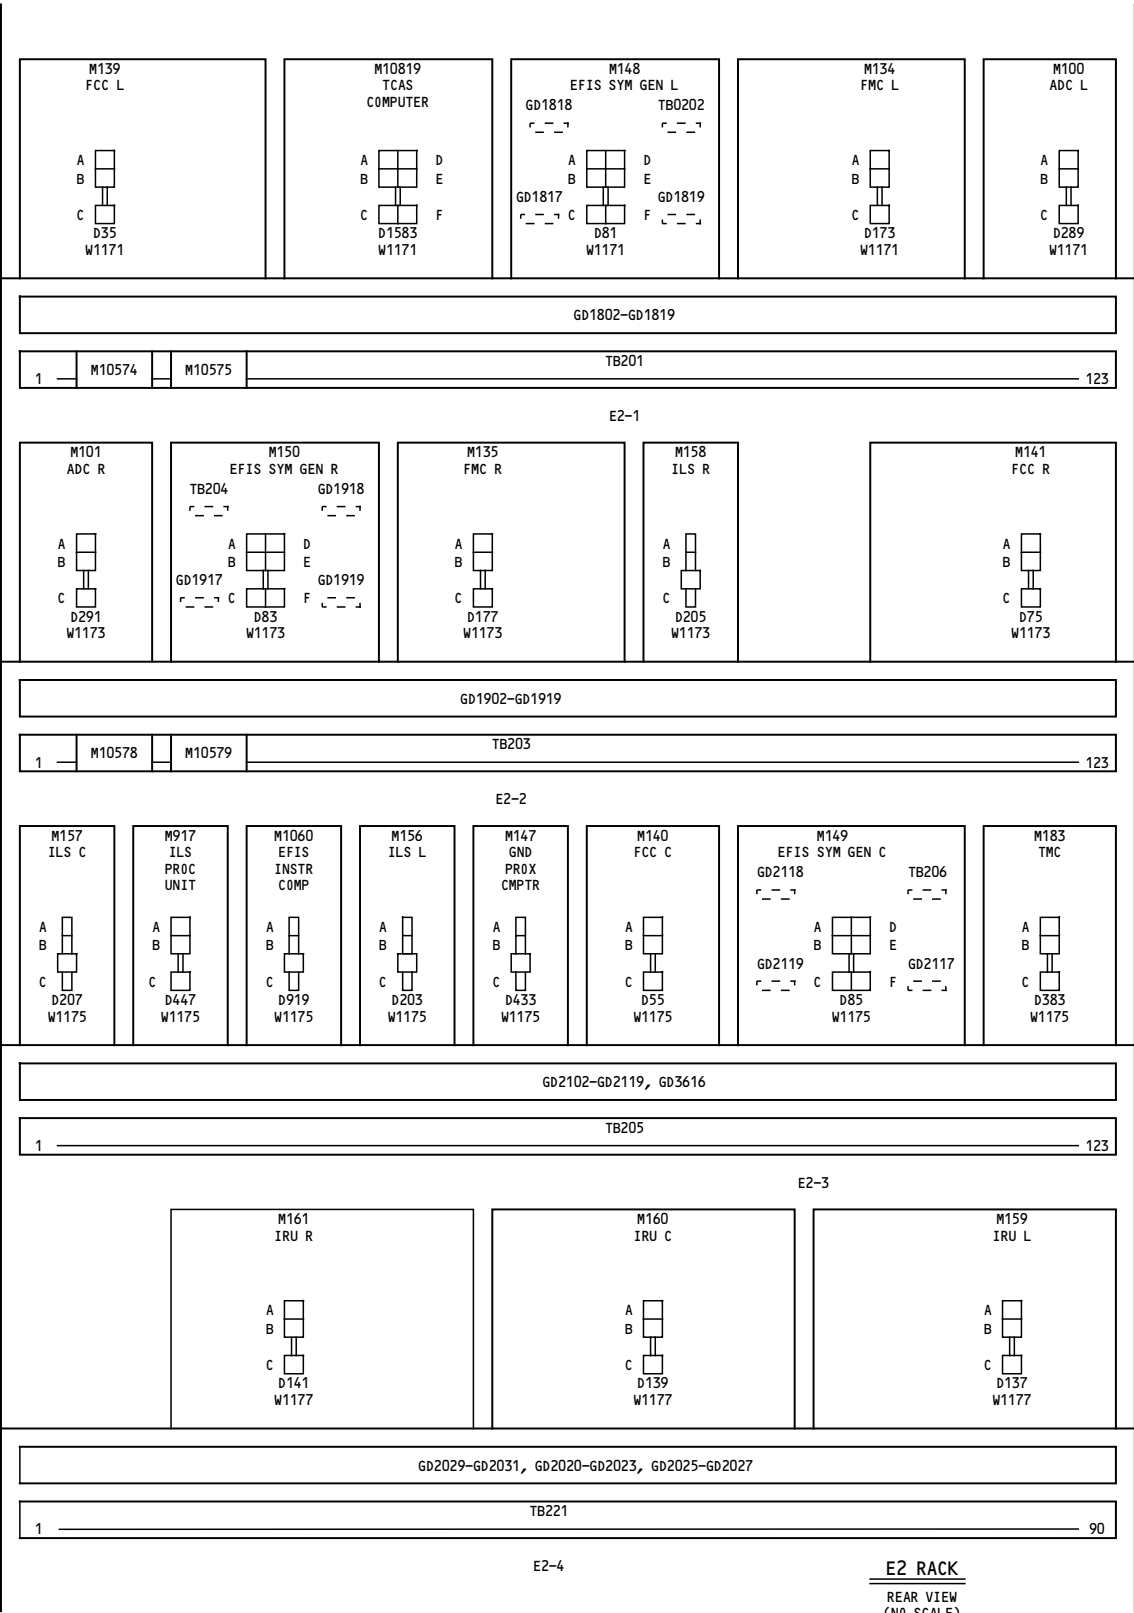

NOTES: FOR SHELF DISCONNECT BRACKETS AND CONNECTOR POSITIONS, SEE 91-04-XX

THIS IS A GENERIC DRAWING. SEE EQUIPMENT LIST FOR ITEMS INSTALLED

001-099

E2 RACK - MAIN EQUIPMENT CENTER

D280N032

91-03-02


Page 1

Jan 21/2005

91-03-02

Page 1

Jan 21/2005

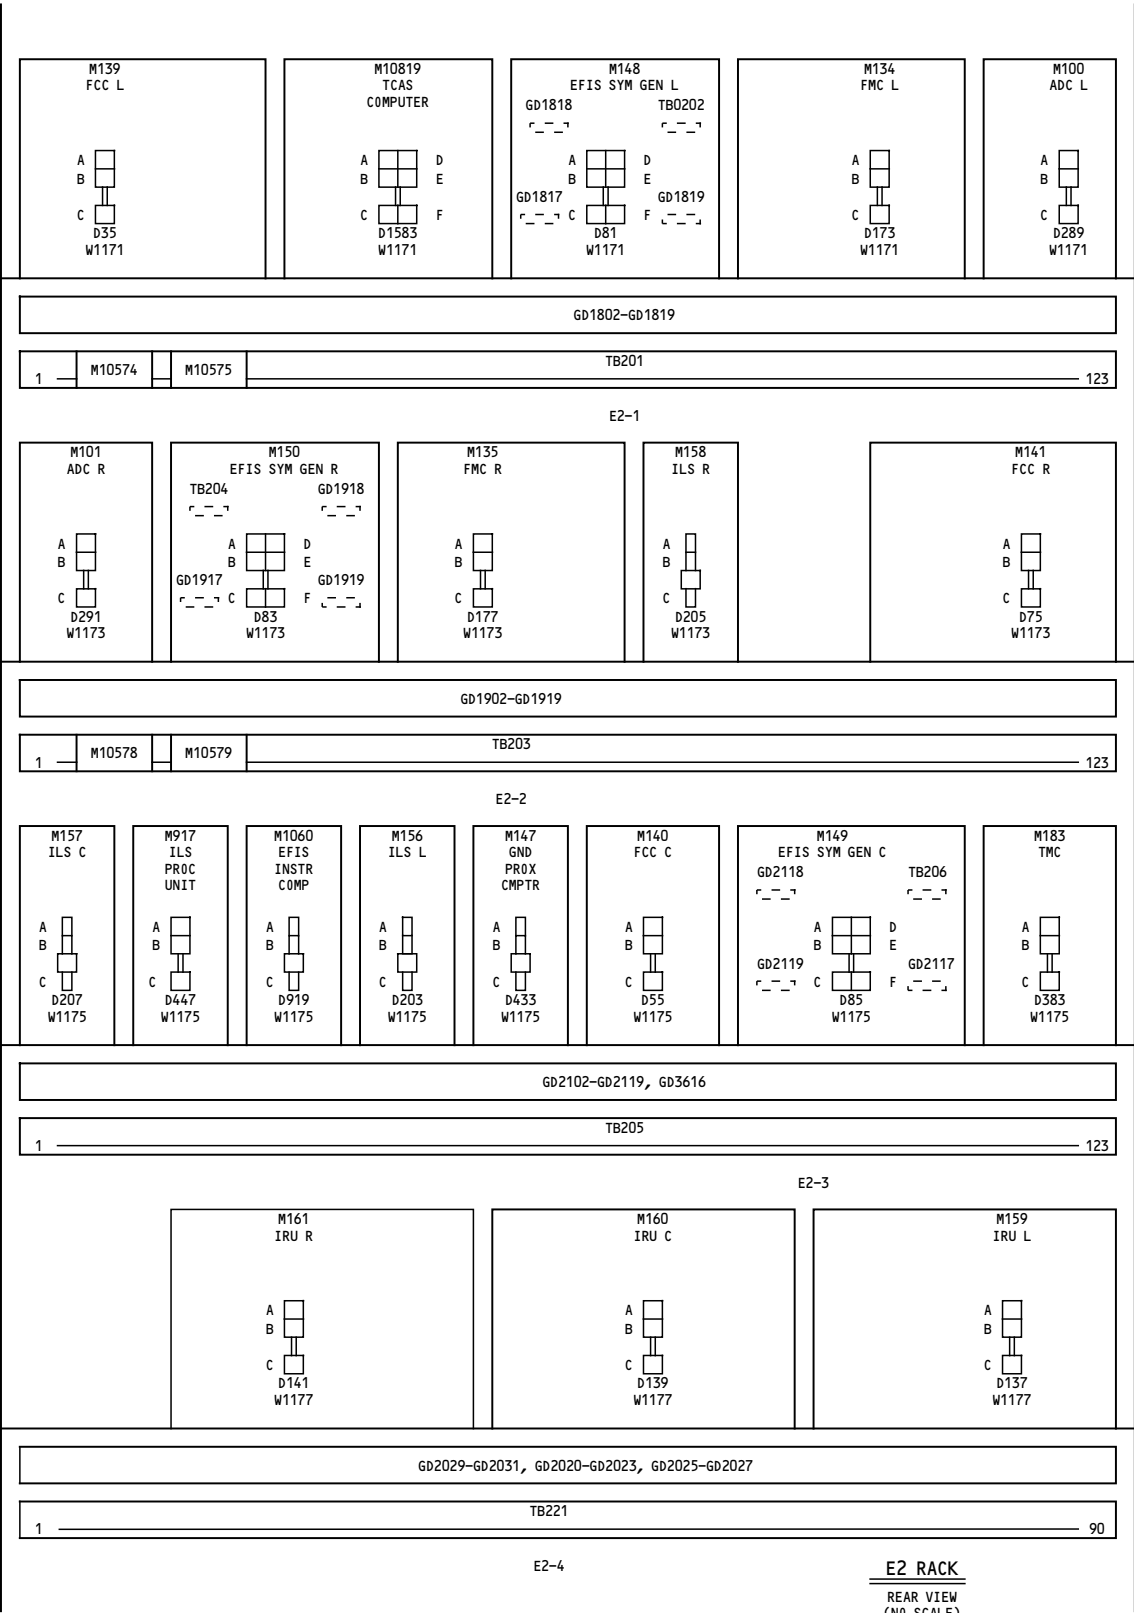

NOTES: FOR SHELF DISCONNECT BRACKETS AND CONNECTOR POSITIONS, SEE 91-04-XX

THIS IS A GENERIC DRAWING. SEE EQUIPMENT LIST FOR ITEMS INSTALLED

001-011

E2 RACK - MAIN EQUIPMENT CENTER

D280N032

91-03-02

Page 1.1

Jan 21/2005

Incorporates  
34A0222


91-03-02

Page 1.1

Jan 21/2005



-A  
2

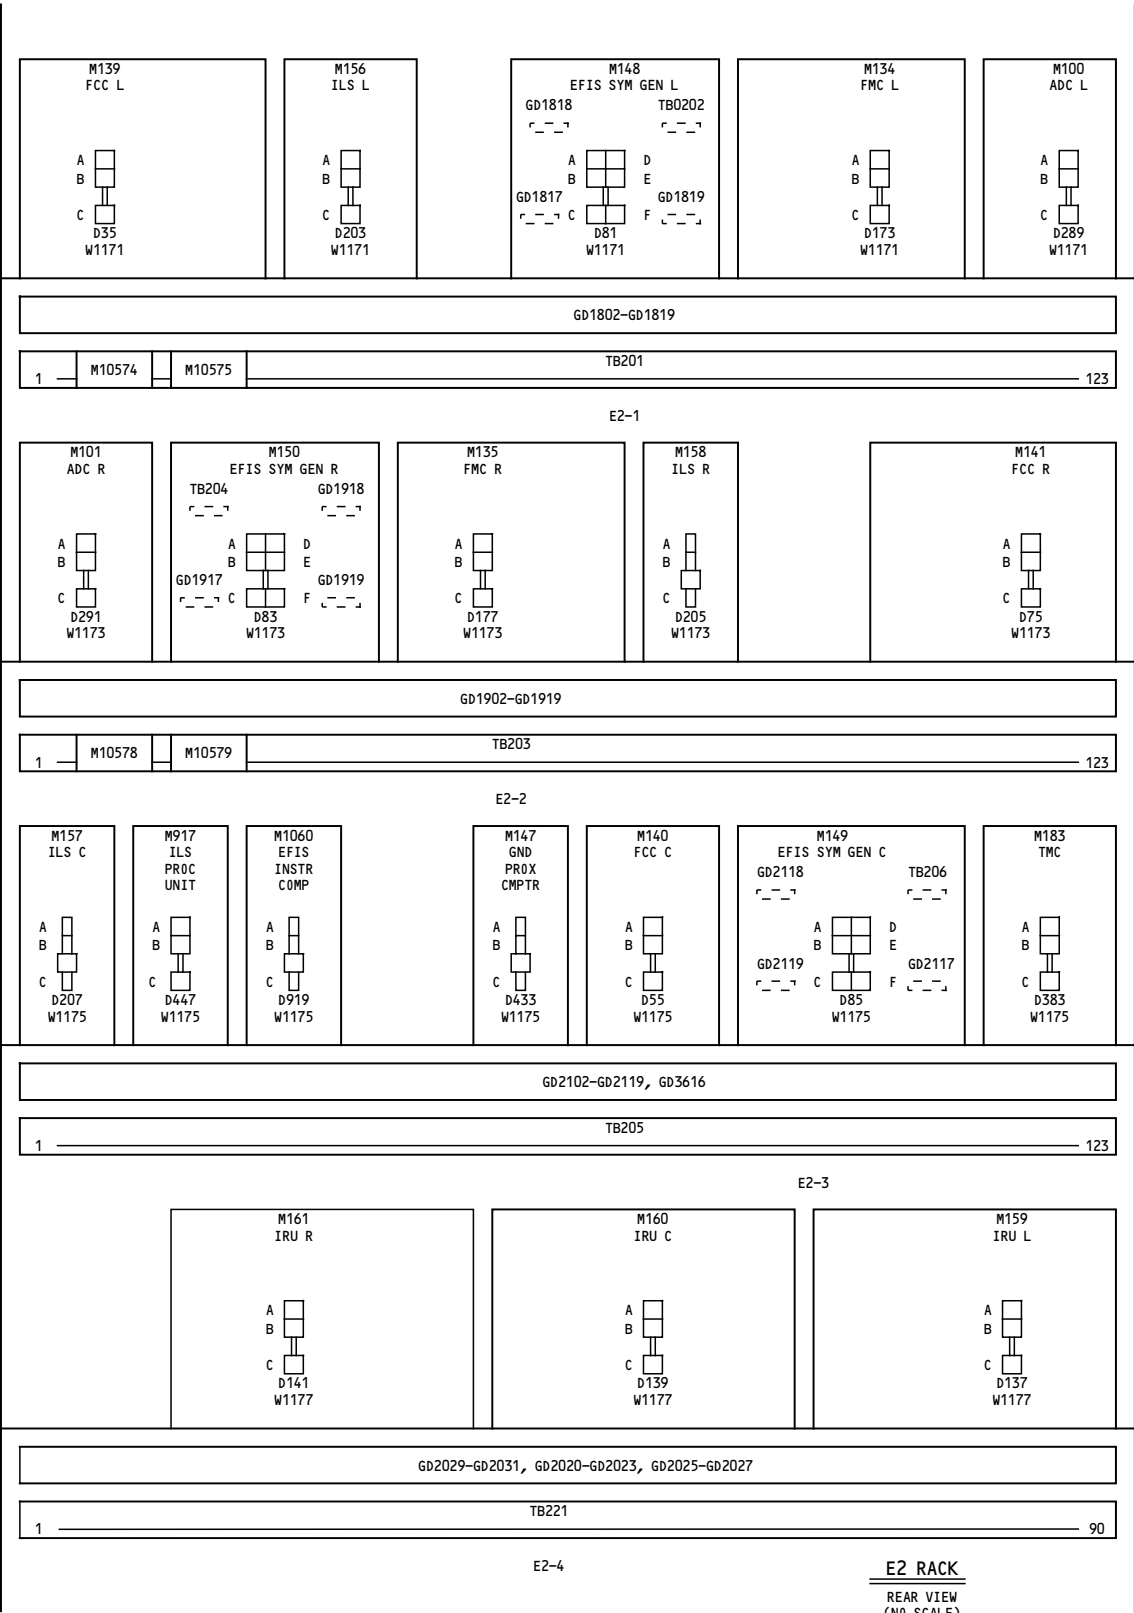

NOTES: FOR SHELF DISCONNECT BRACKETS AND CONNECTOR POSITIONS, SEE 91-04-XX

THIS IS A GENERIC DRAWING. SEE EQUIPMENT LIST FOR ITEMS INSTALLED

E2 RACK  
REAR VIEW  
(NO SCALE)

115-199

E2 RACK - MAIN EQUIPMENT CENTER

D280N032

91-03-02

Page 2


Jan 21/2005

91-03-02

Page 2


Jan 21/2005



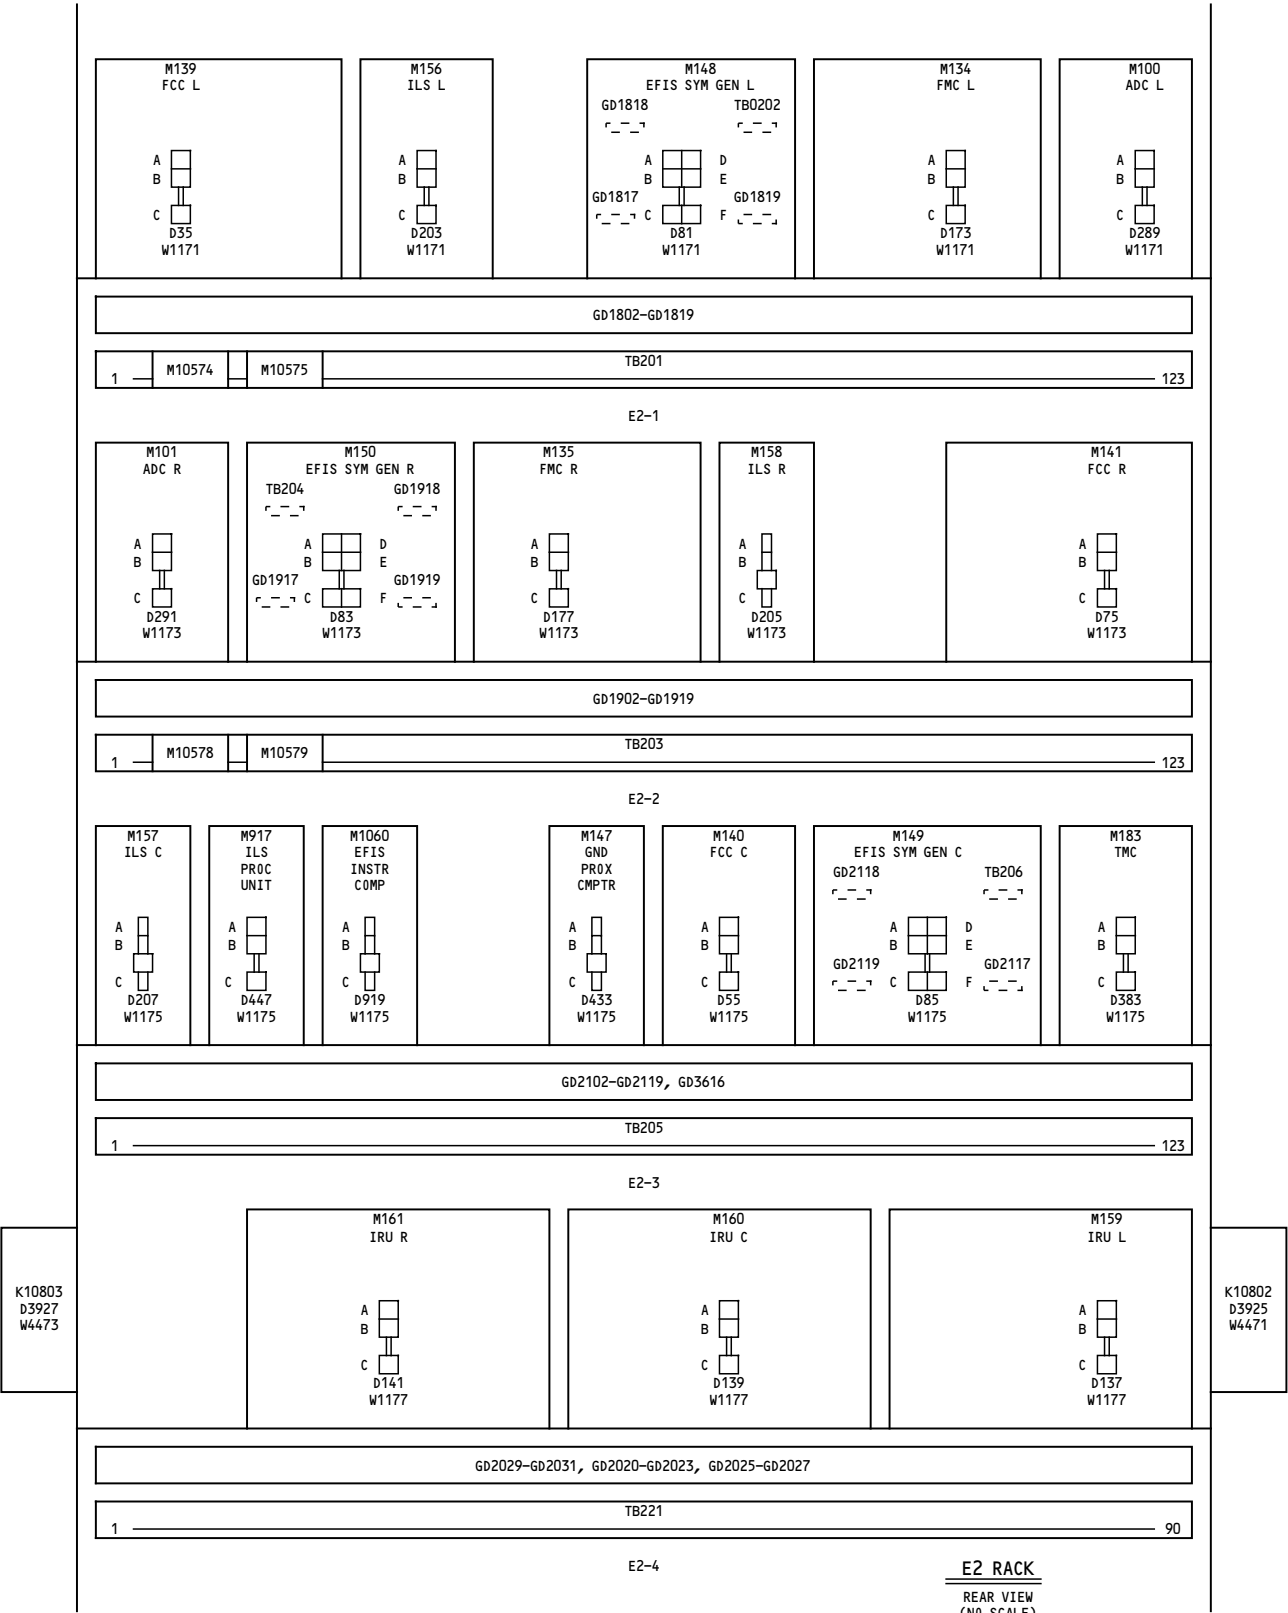

NOTES: FOR SHELF DISCONNECT BRACKETS AND CONNECTOR POSITIONS, SEE 91-04-XX


THIS IS A GENERIC DRAWING. SEE EQUIPMENT LIST FOR ITEMS INSTALLED

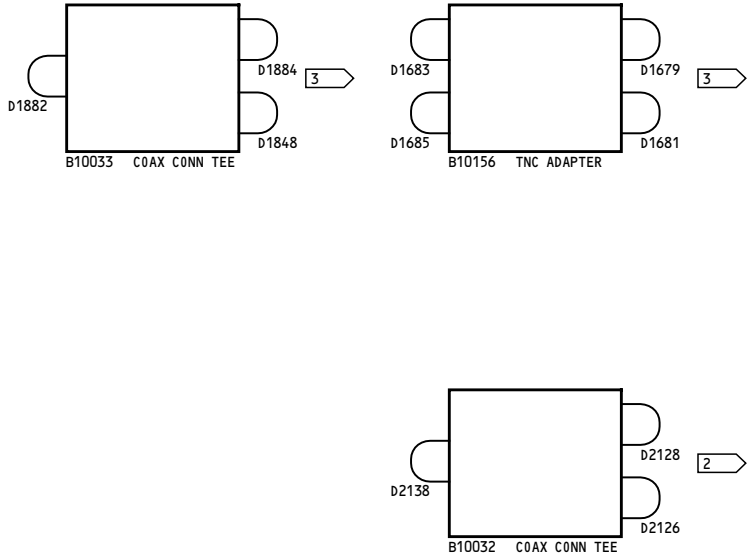

NOTES: FOR SHELF DISCONNECT BRACKETS AND CONNECTOR POSITIONS, SEE 91-04-XX

- 1 MOUNTED AT BASE BEHIND M531
- 2 MOUNTED AT BASE BEHIND M10141
- 3 MOUNTED AT BASE BEHIND M10142

THIS IS A GENERIC DRAWING. SEE EQUIPMENT LIST FOR ITEMS INSTALLED

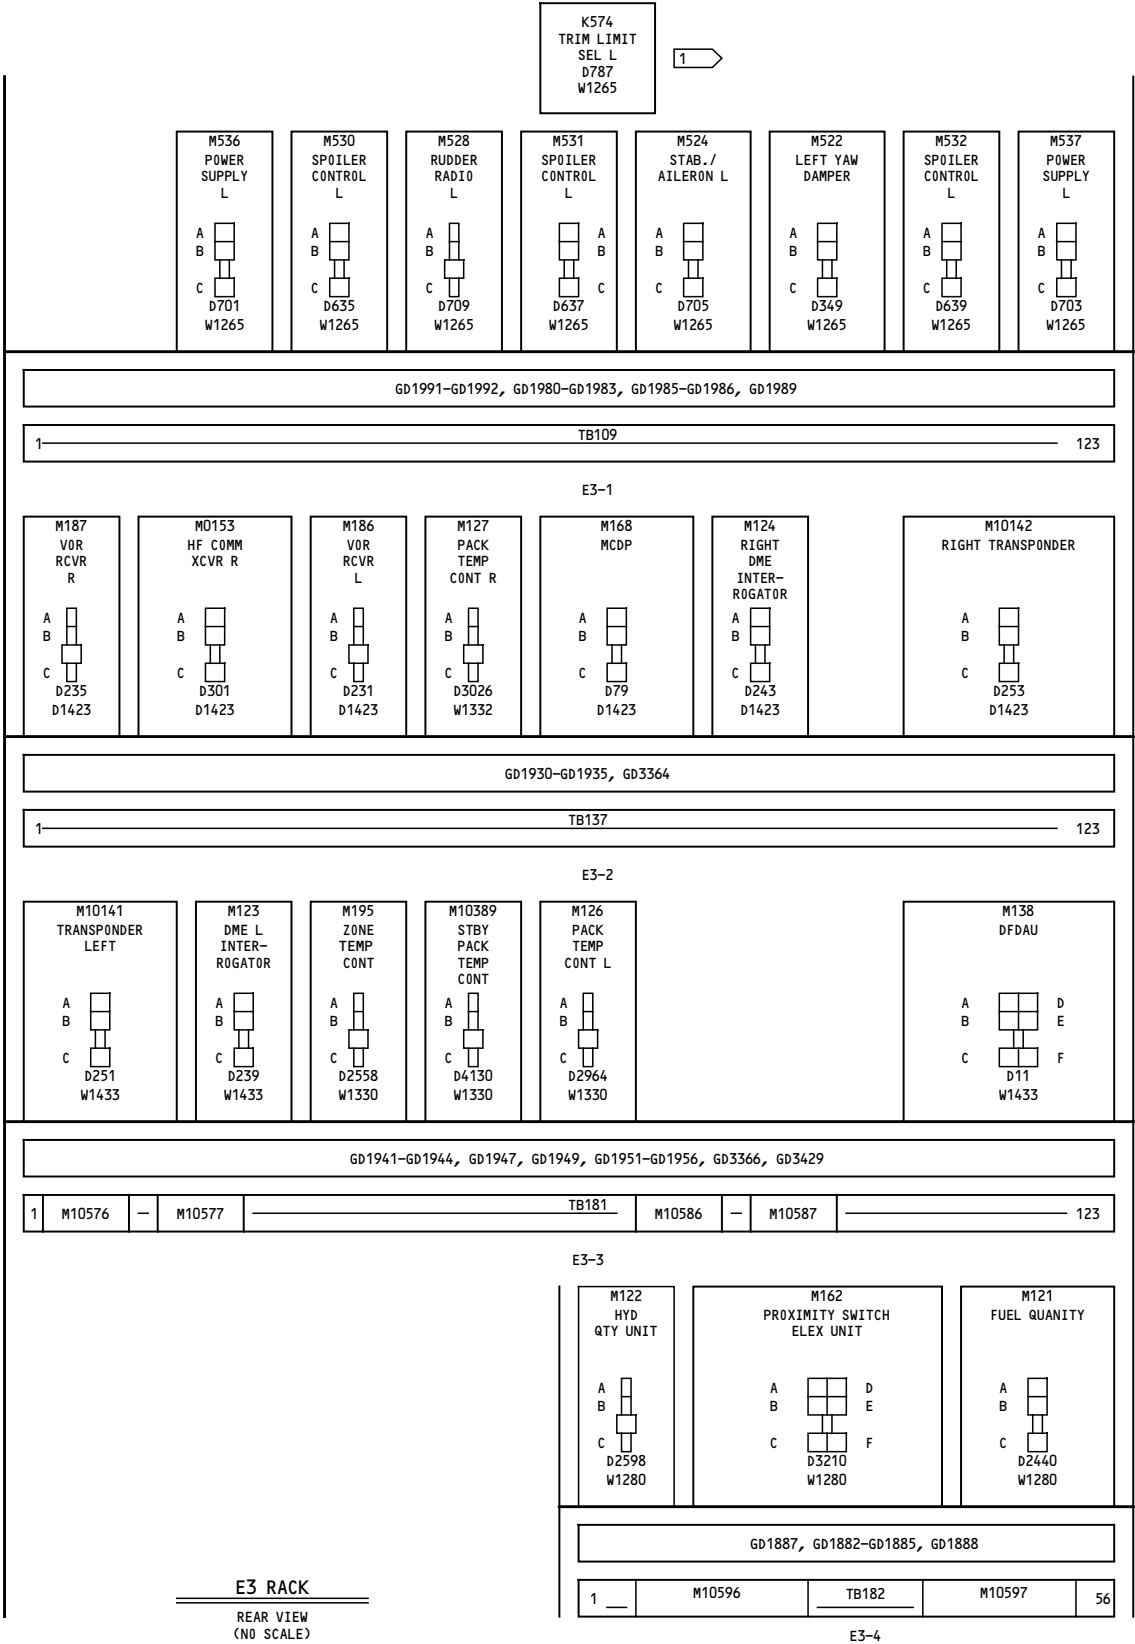

001-099

E3 RACK - MAIN EQUIPMENT CENTER

D280N032

91-03-03



Page 1

Jan 21/2005


91-03-03


Page 1

Jan 21/2005

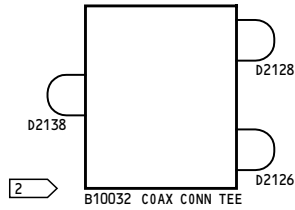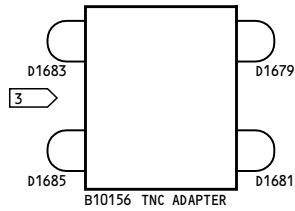

- NOTES:** FOR SELF DISCONNECT BRACKETS AND CONNECTOR POSITIONS, SEE 91-04-XX
- THIS IS A GENERIC DRAWING. SEE EQUIPMENT LIST FOR ITEMS INSTALLED.
- 1 MOUNTED AT BASE BEHIND M531
  - 2 MOUNTED AT BASE BEHIND M10141
  - 3 MOUNTED AT BASE BEHIND M10142

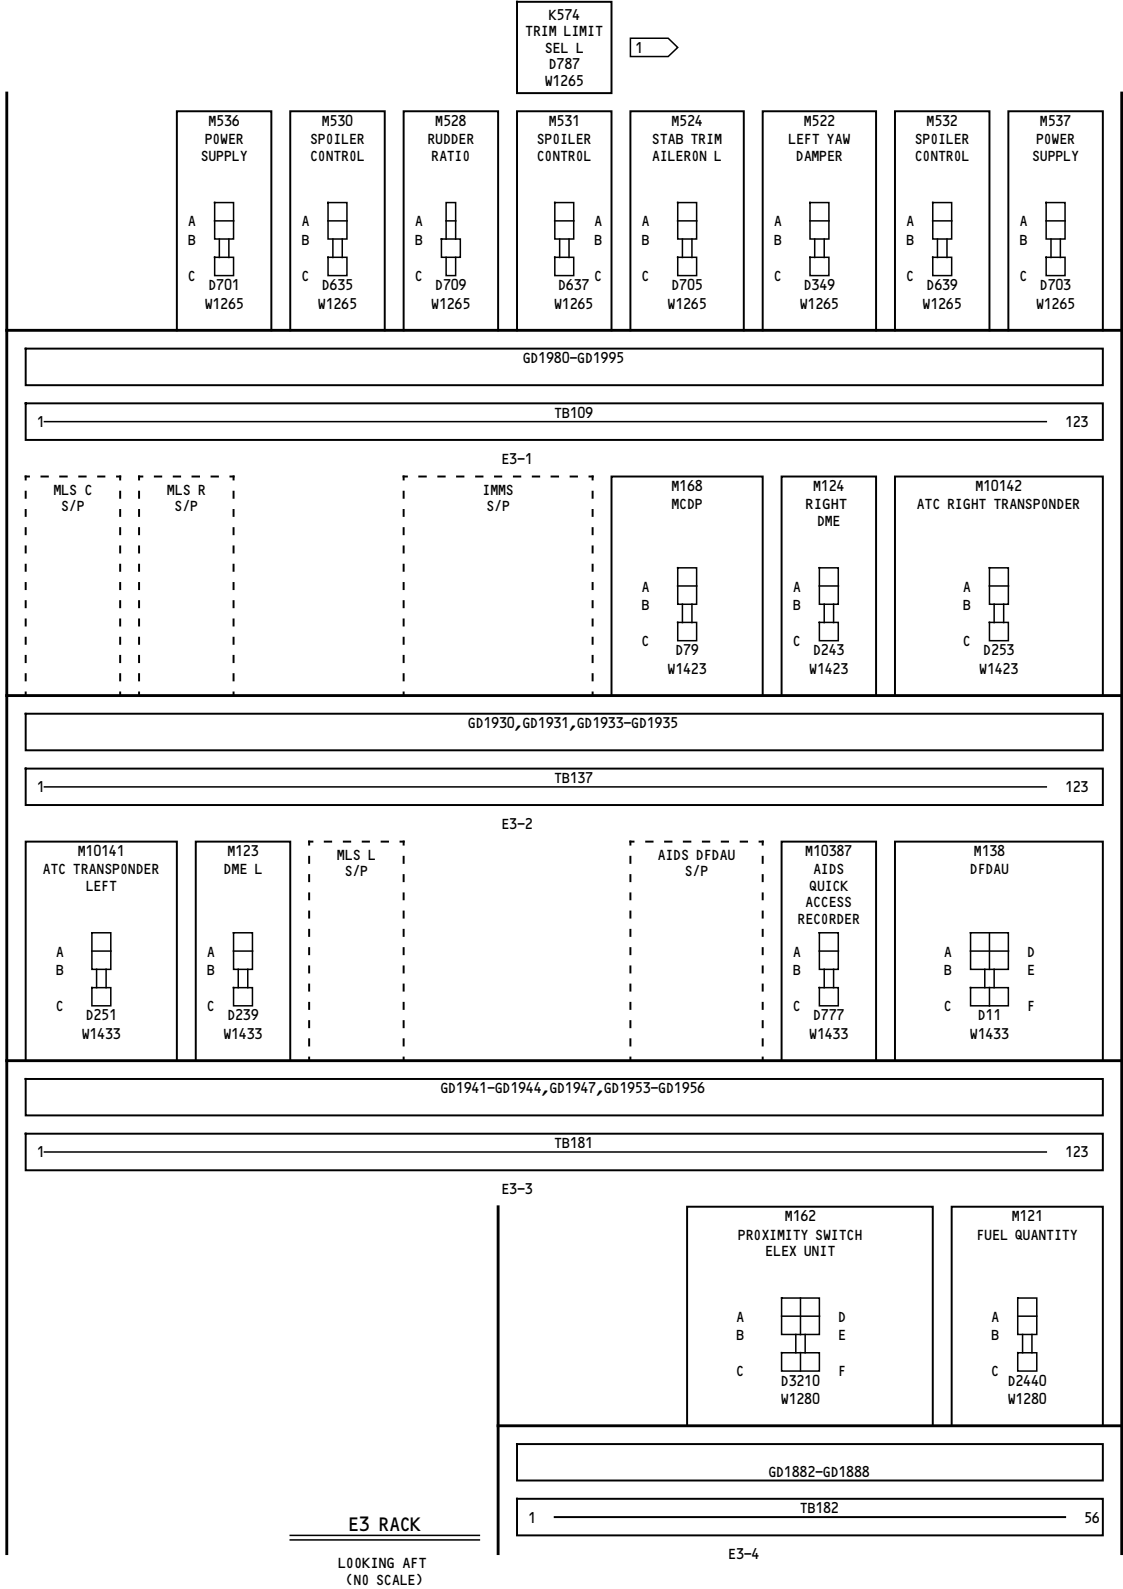

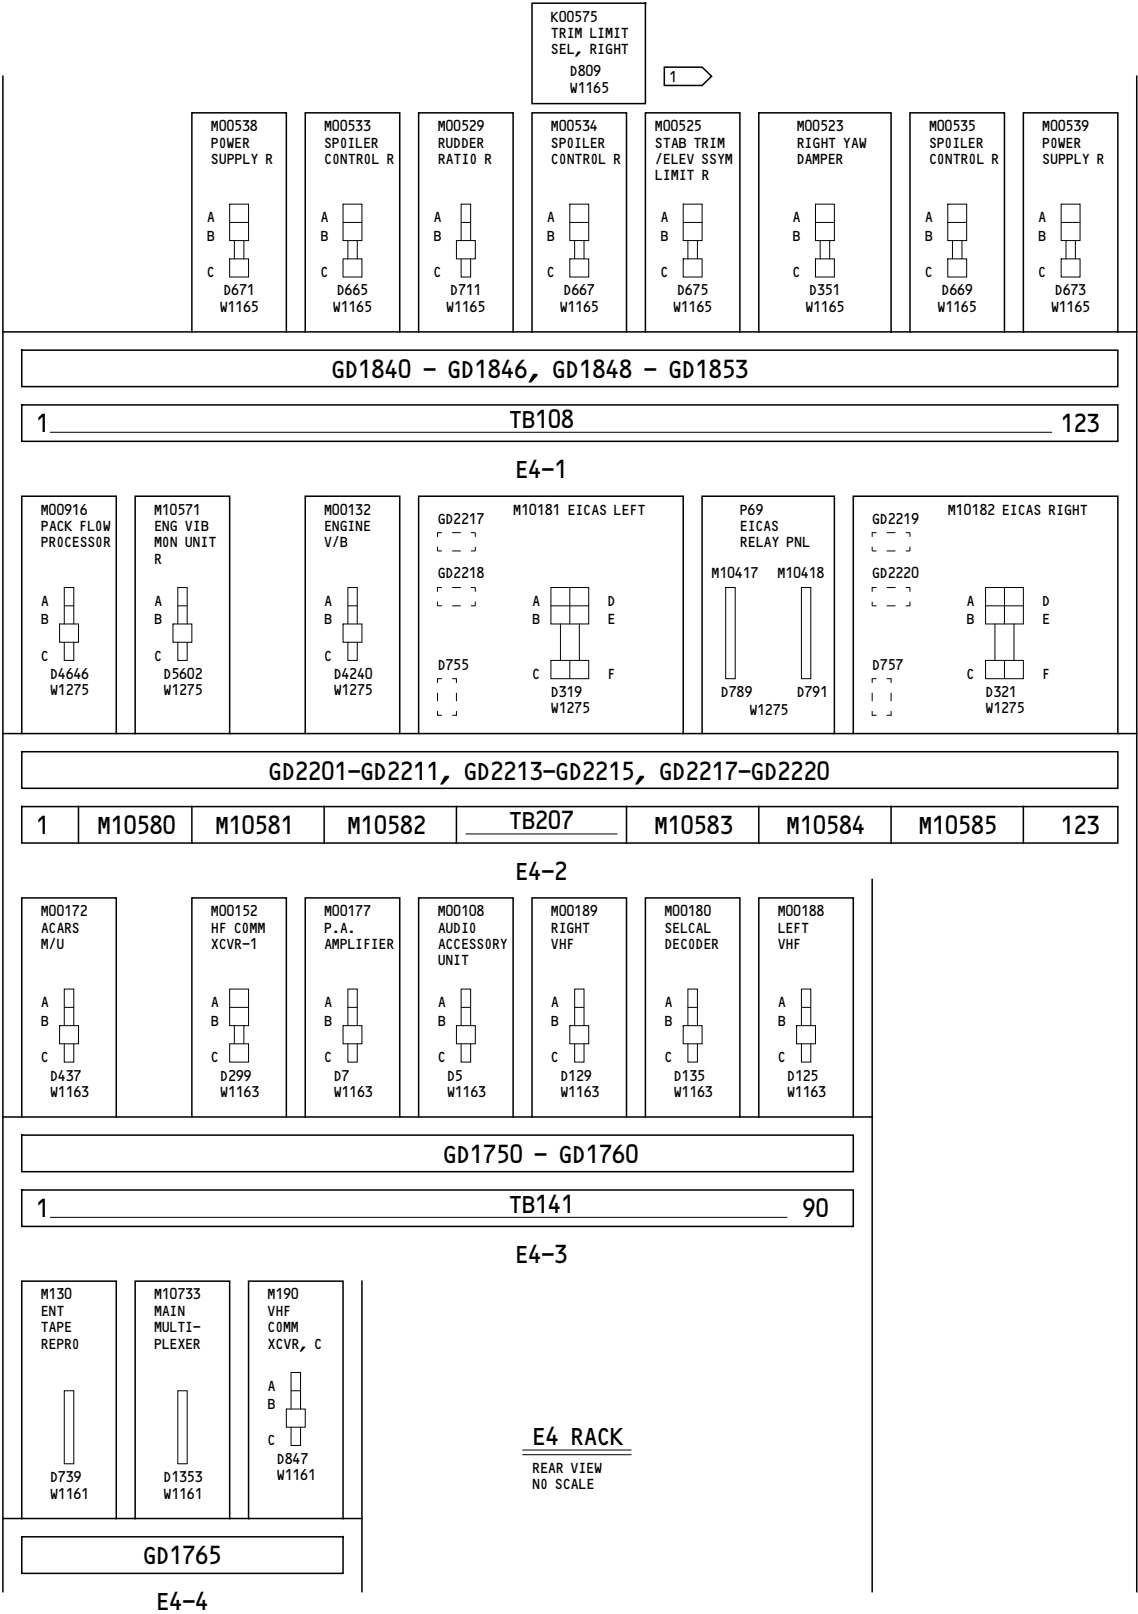

THIS IS A GENERIC DRAWING.  
SEE EQUIPMENT LIST FOR  
ITEMS INSTALLED.

**NOTES:** FOR SHELF DISCONNECT BRACKETS AND  
CONNECTORS POSITIONS, SEE 91-04-XX.

 MOUNTED AT BASE BEHIND M534 ON E4-1 SHELF.

001-099

**E4 RACK - MAIN EQUIPMENT  
CENTER**

D280N032

**91-03-04**

Page 1

Jan 21/2005

**91-03-04**

Page 1

Jan 21/2005



K575  
TRIM LIMIT  
SEL R  
D809  
W1165




1 MOUNTED AT BASE BEHIND M534.


Jan 21/2005



6

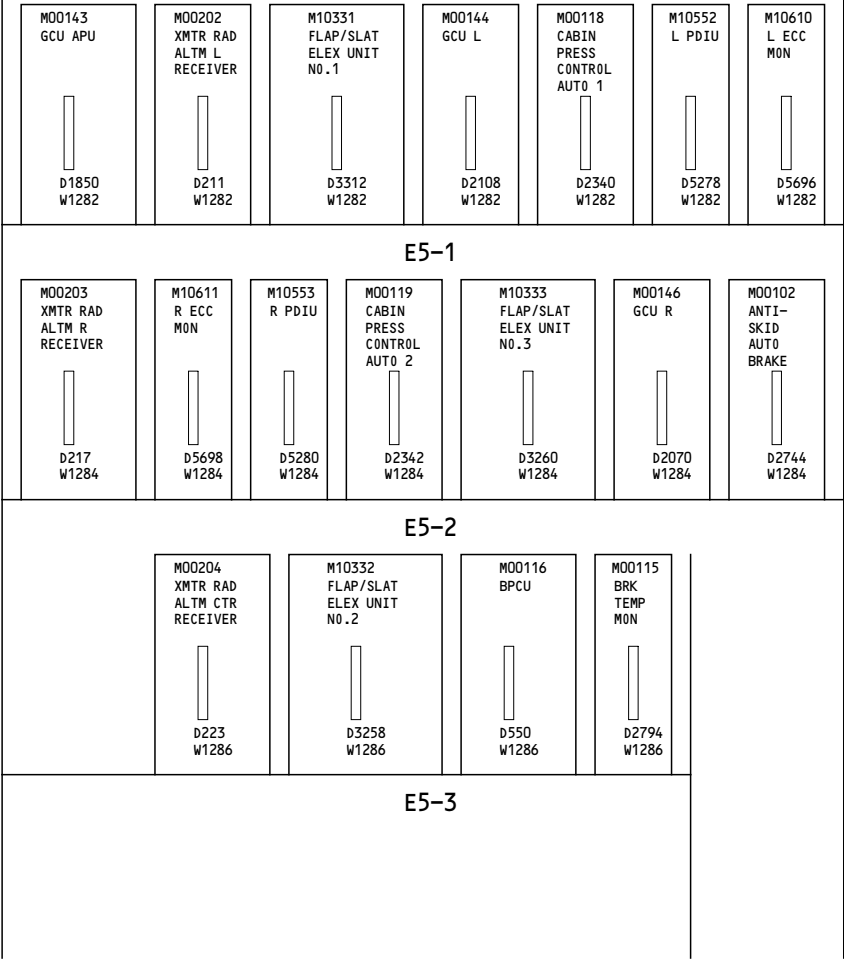

**E5 RACK**  
LOOKING AFT  
(NO SCALE)

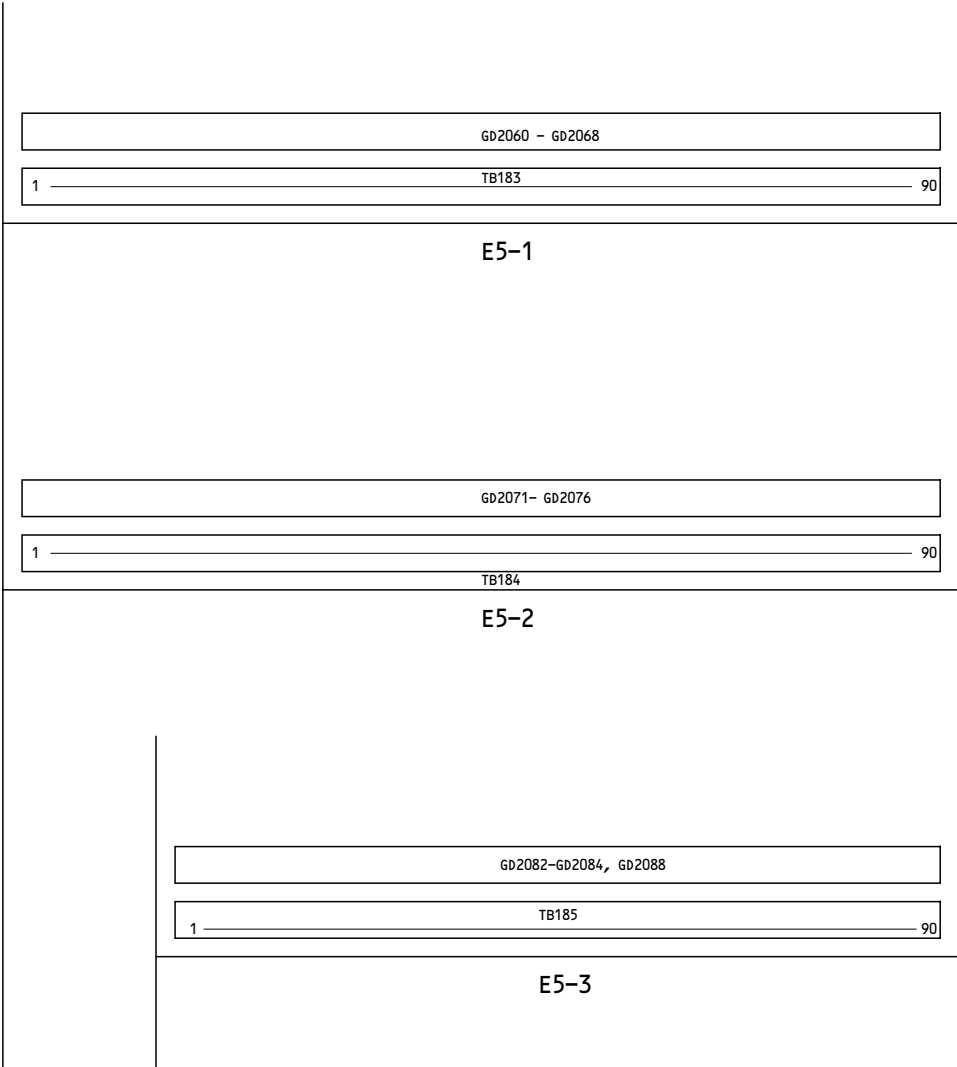

**E5 RACK**  
LOOKING FORWARD  
(NO SCALE)

001-099

**E5 RACK - MAIN EQUIPMENT  
CENTER**

**91-03-05**

Page 1


Jan 21/2005

D280N032


**91-03-05**

Page 1


Jan 21/2005

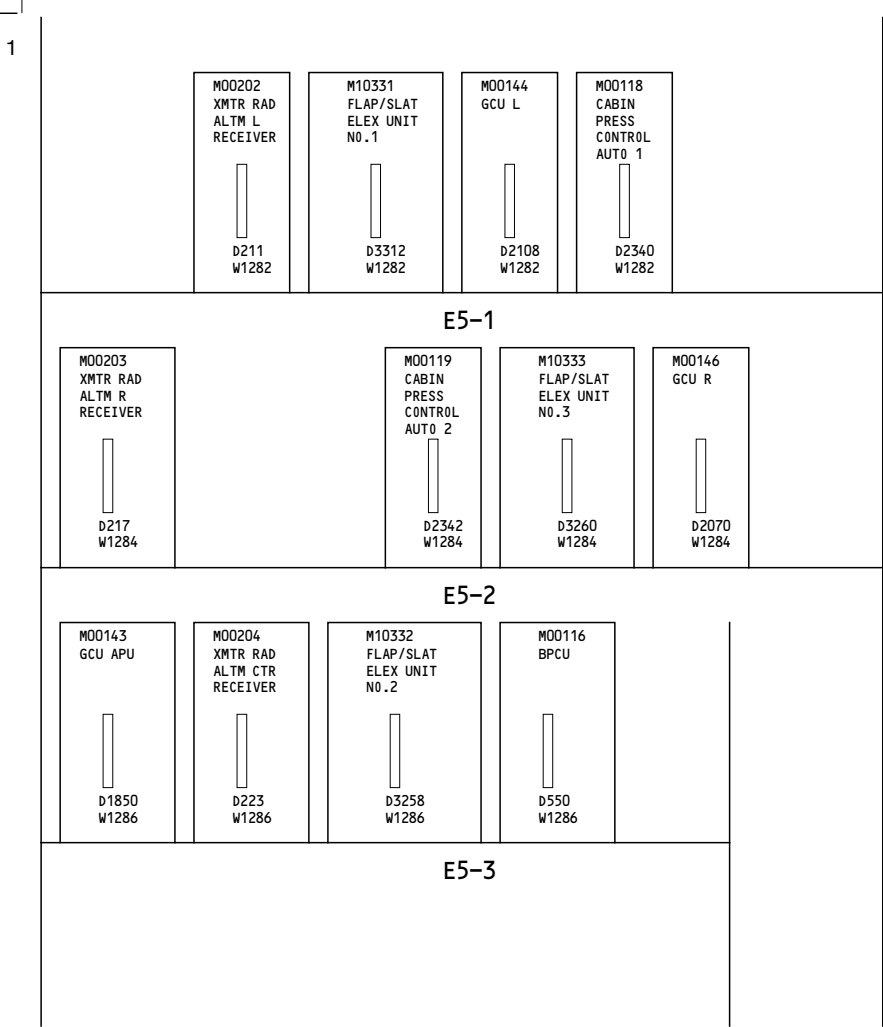

**E5 RACK**  
LOOKING AFT  
(NO SCALE)

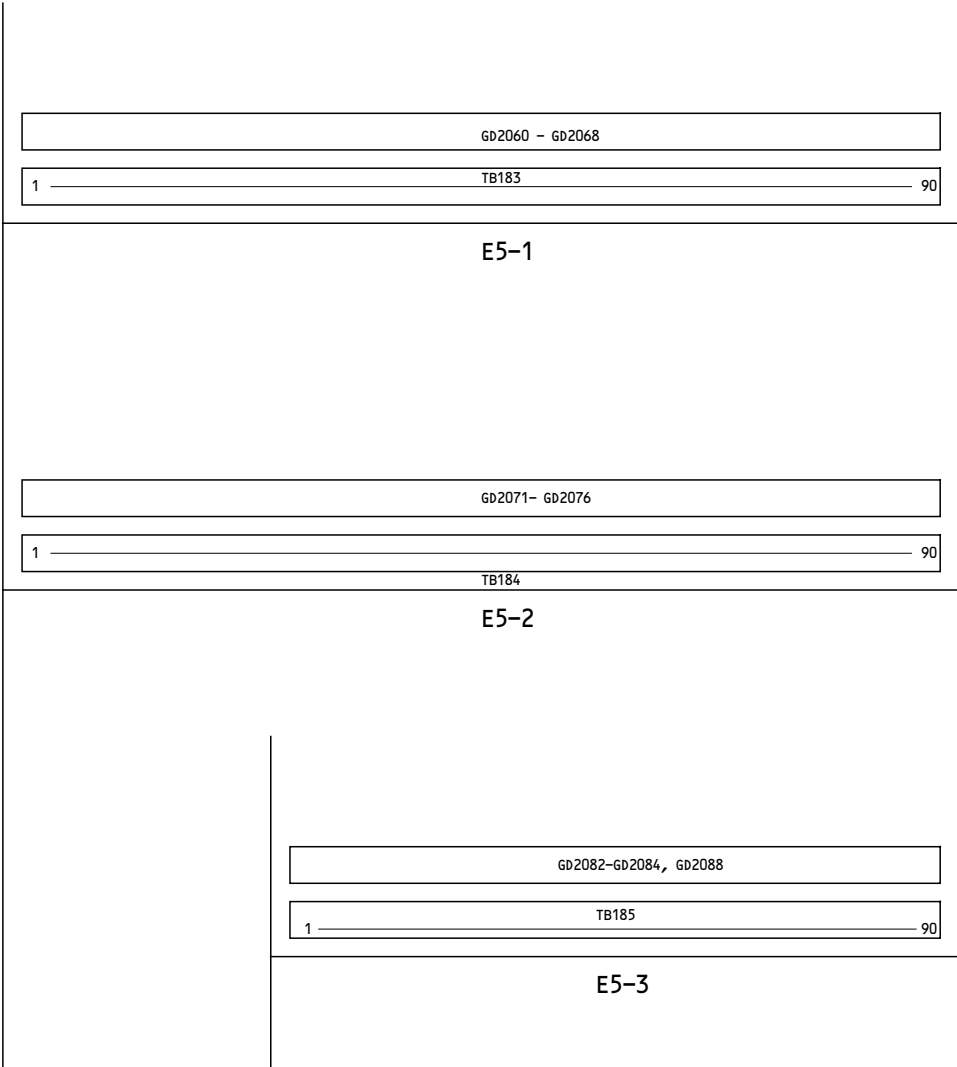

**E5 RACK**  
LOOKING FORWARD  
(NO SCALE)

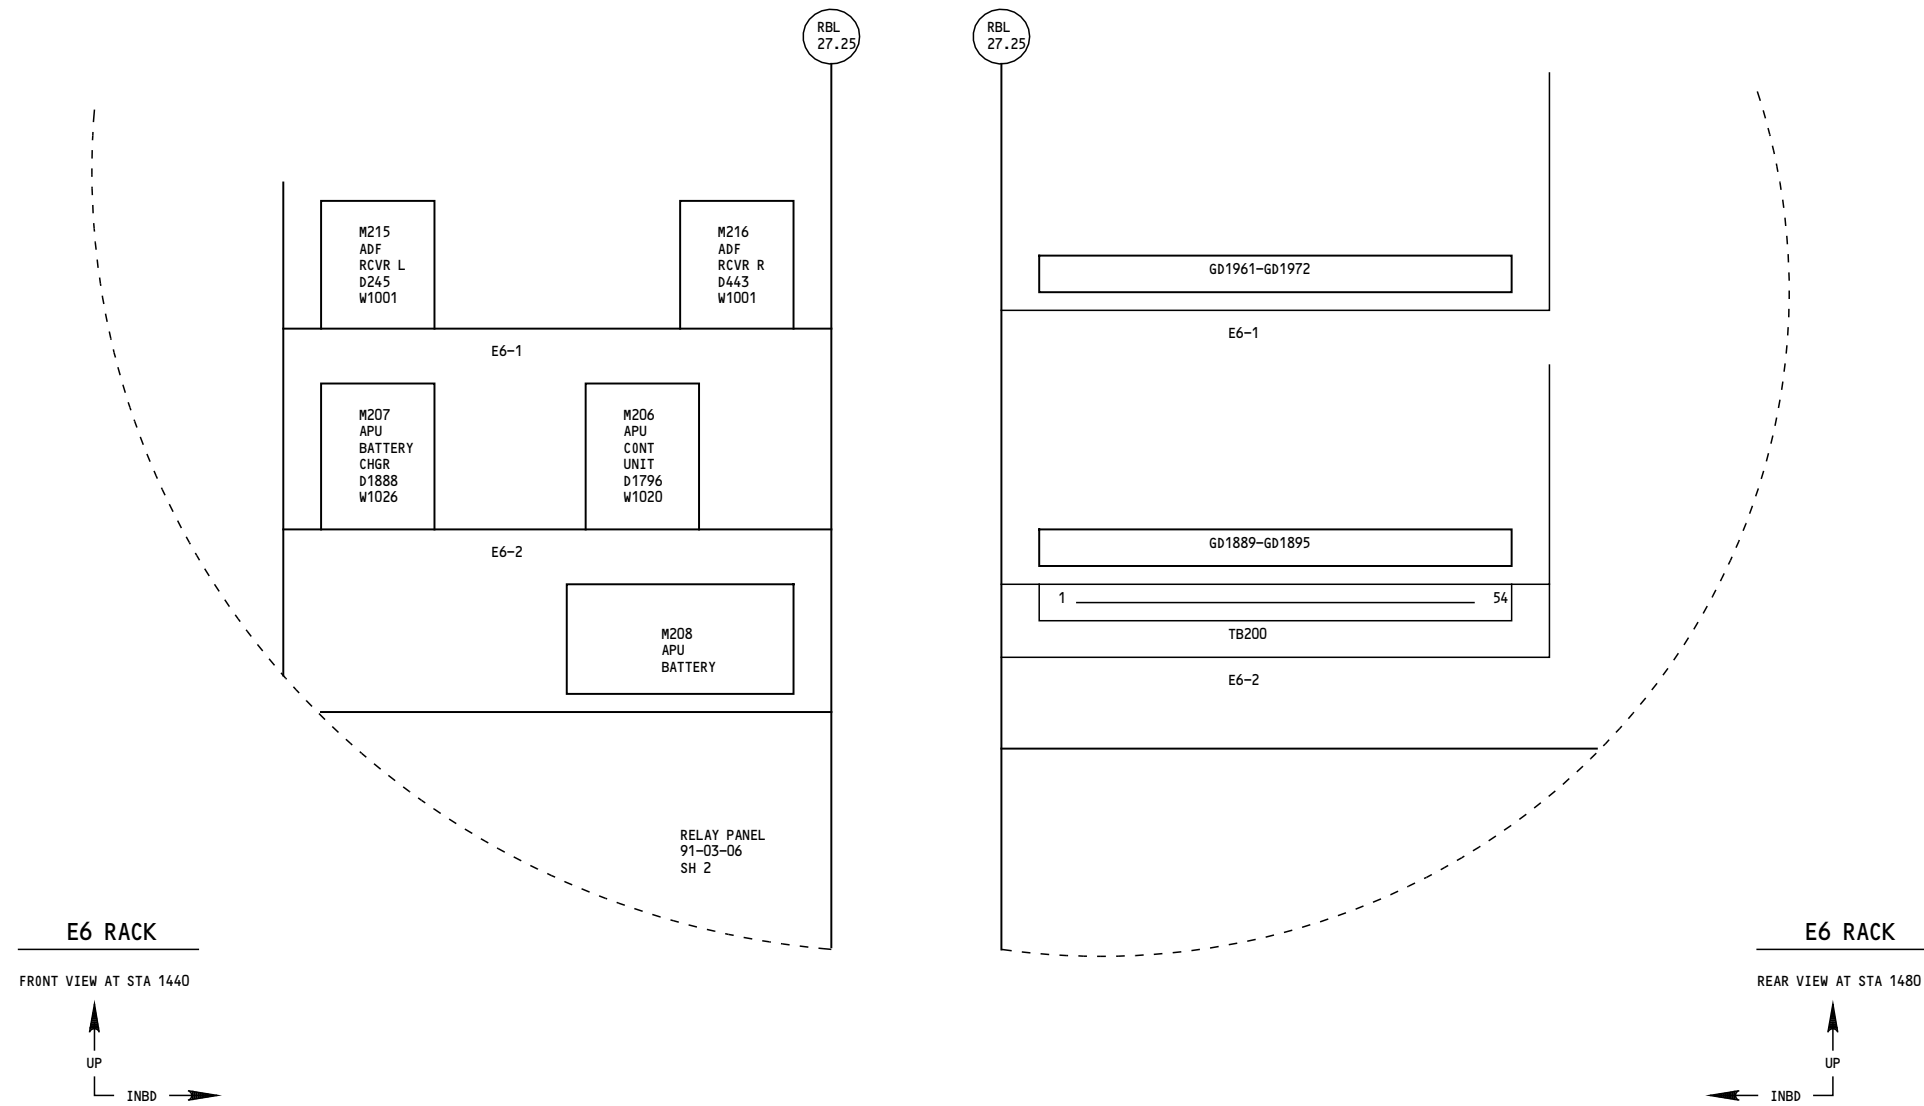

001-099

**E6 RACK - AFT EQUIPMENT CENTER**

D280N032


**91-03-06**

Page 1  
Sheet 1  
Jan 21/2005


**91-03-06**

Page 1  
Sheet 1  
Jan 21/2005




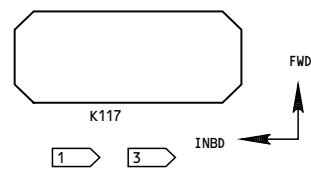

- NOTES:
- 1 RELAY K117 MOUNTED ABOVE AFT END OF TB037
  - 2 CONNECTOR BRACKET FOR E6 SHELF (REF. 91-02-06 SHT. 1)
  - 3 MOUNTED ON TOP OF SHELF

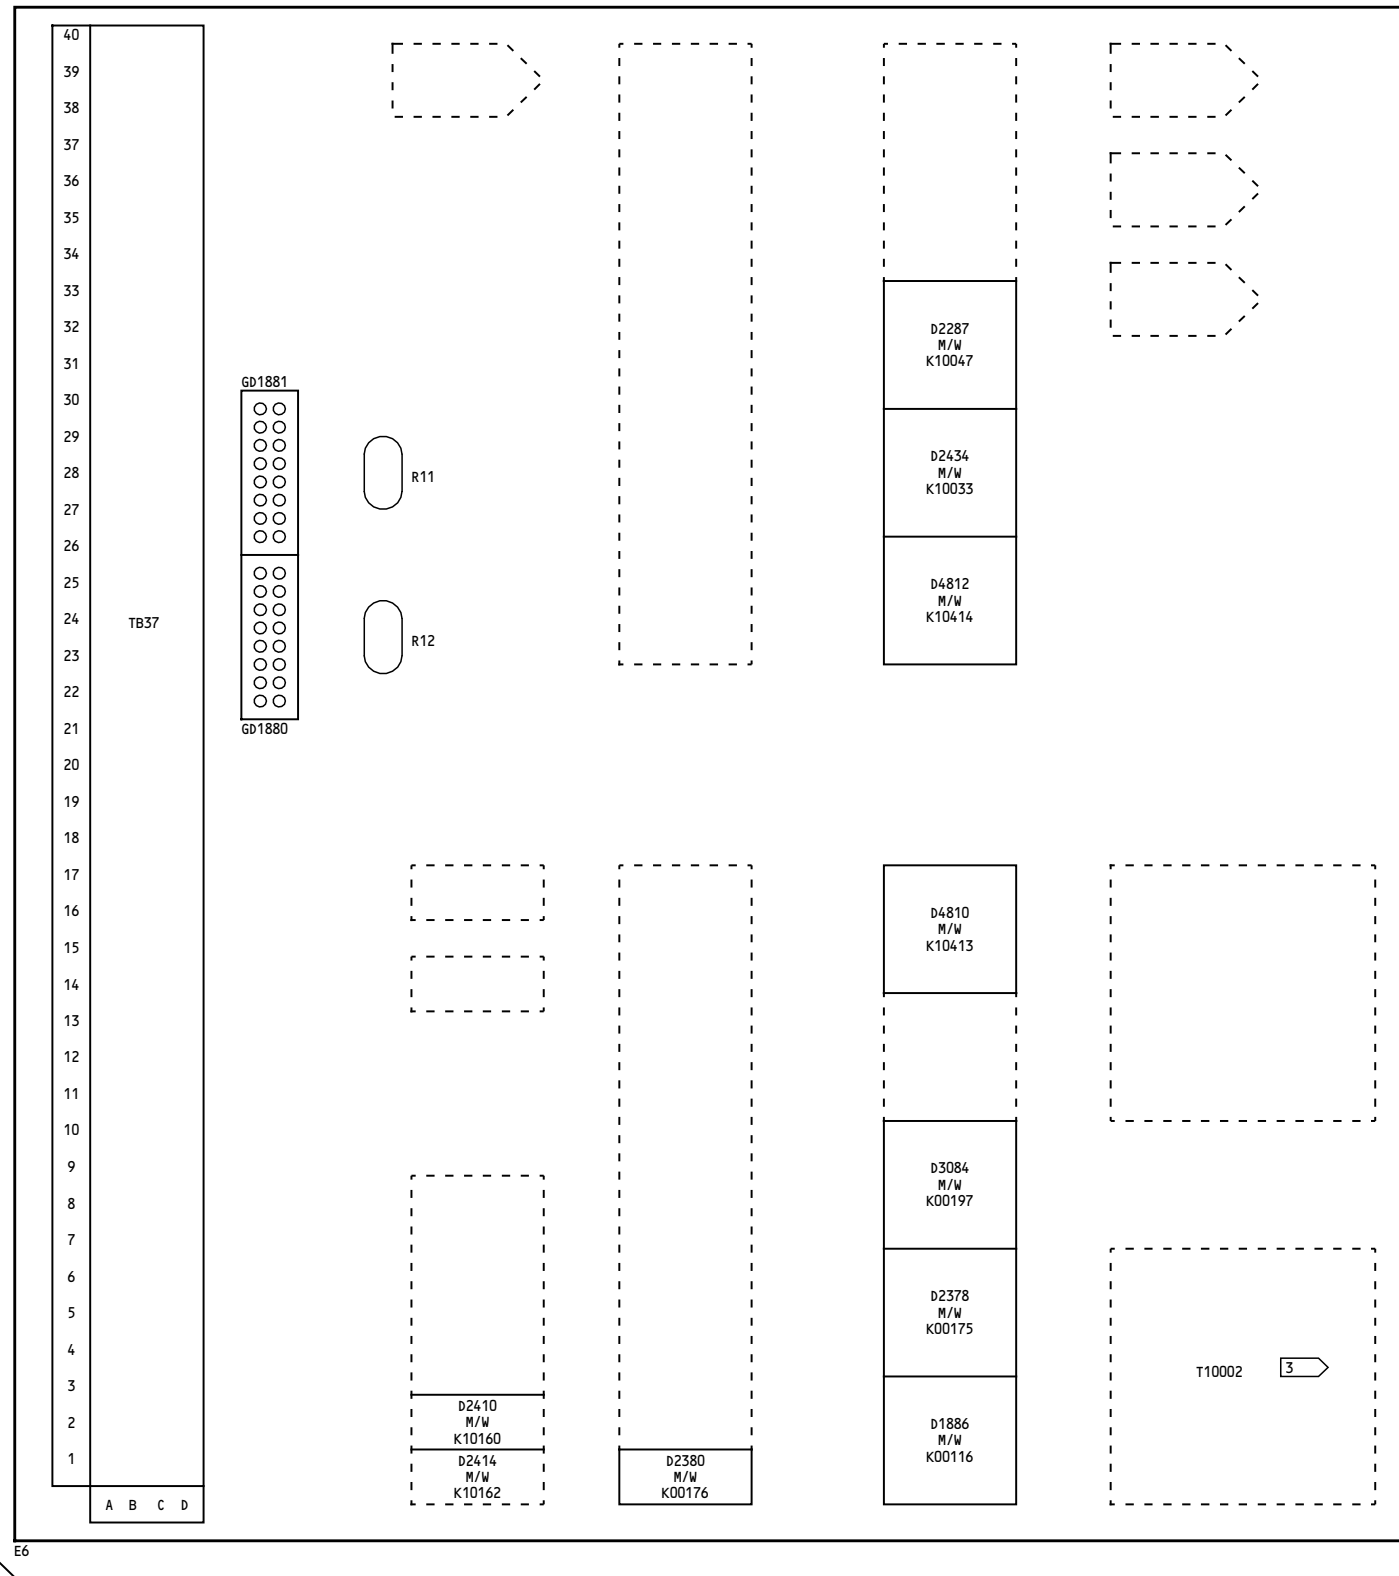

BOTTOM VIEW  
E6 RELAY SHELF

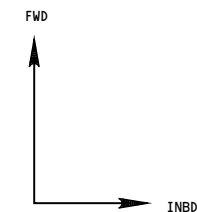

001-099

E6 RACK - AFT EQUIPMENT  
CENTER


D280N032

91-03-06


Page 1  
Sheet 2  
Jan 21/2005

91-03-06


Page 1  
Sheet 2  
Jan 21/2005

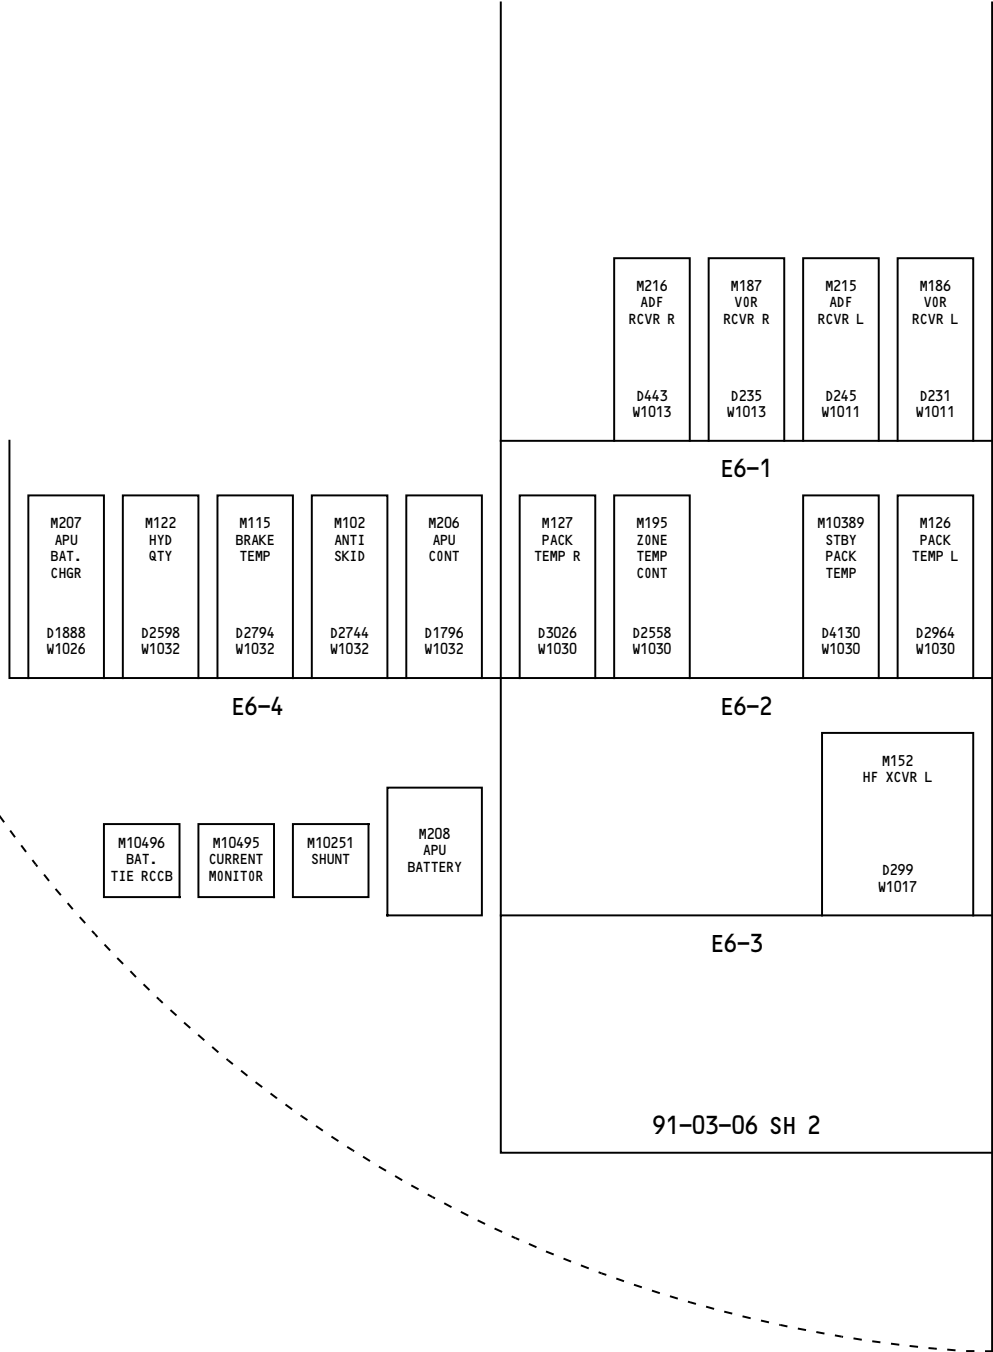

**E6 RACK  
LOOKING AFT  
(NO SCALE)**


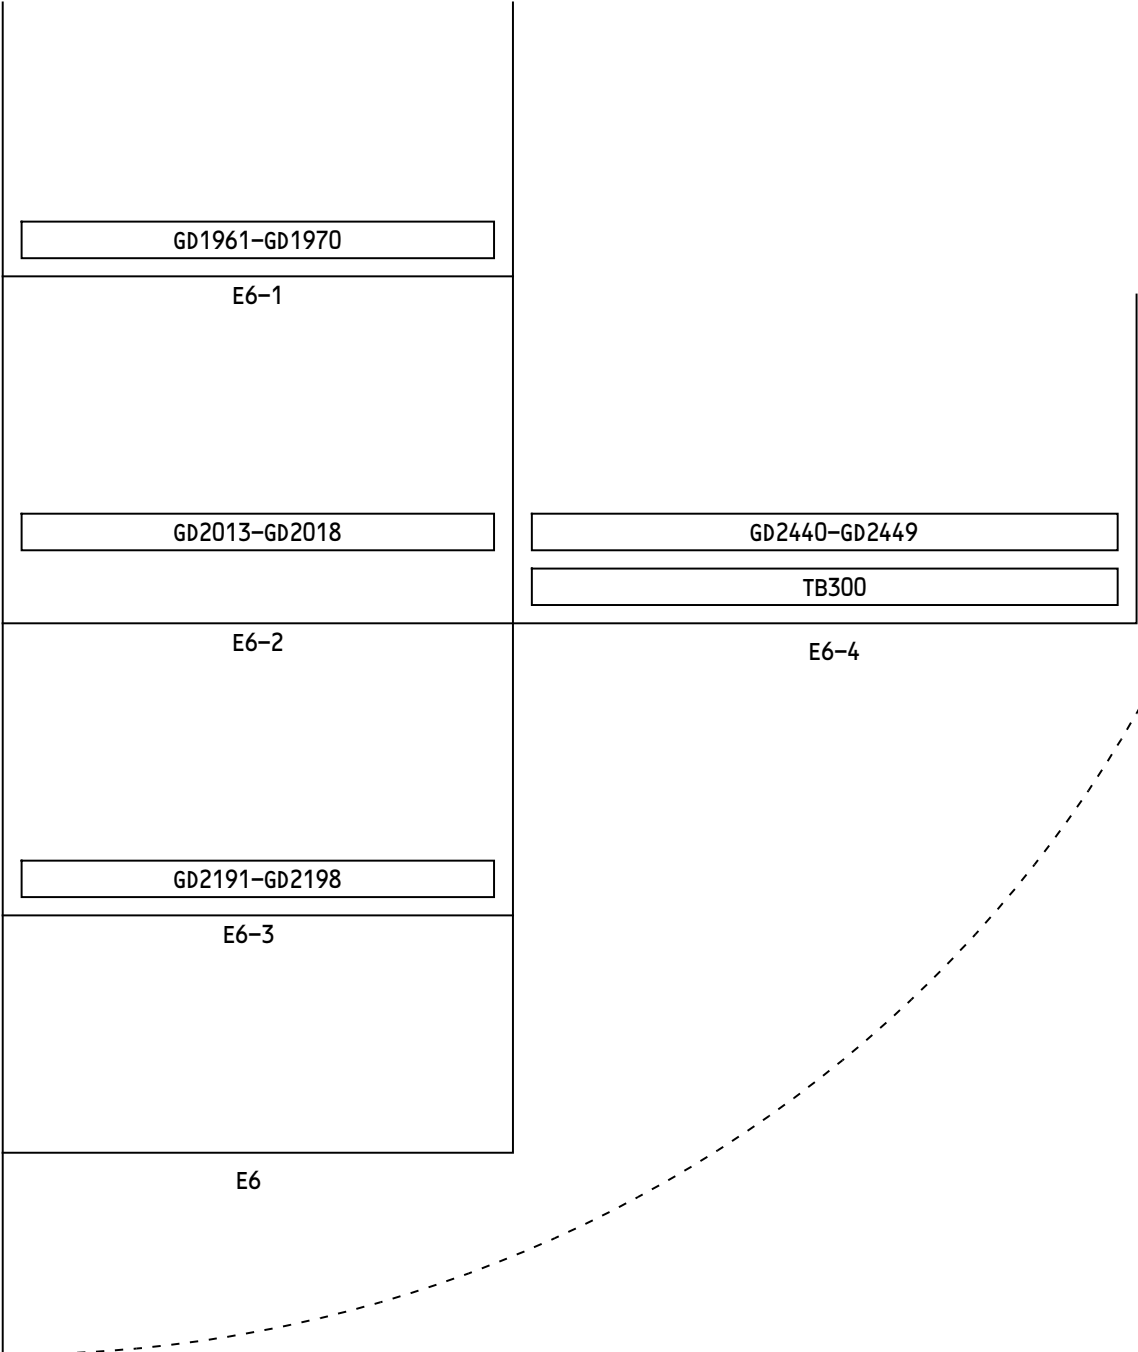



**E6 RACK  
LOOKING FORWARD  
(NO SCALE)**

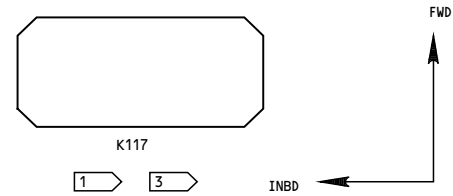

NOTES:

- 1 RELAY K117 MOUNTED ABOVE AFT END OF TB037
- 2 CONNECTOR BRACKET FOR E6 SHELF (REF 91-03-06 SH 1)
- 3 MOUNTED ON TOP OF SHELF

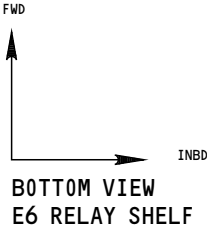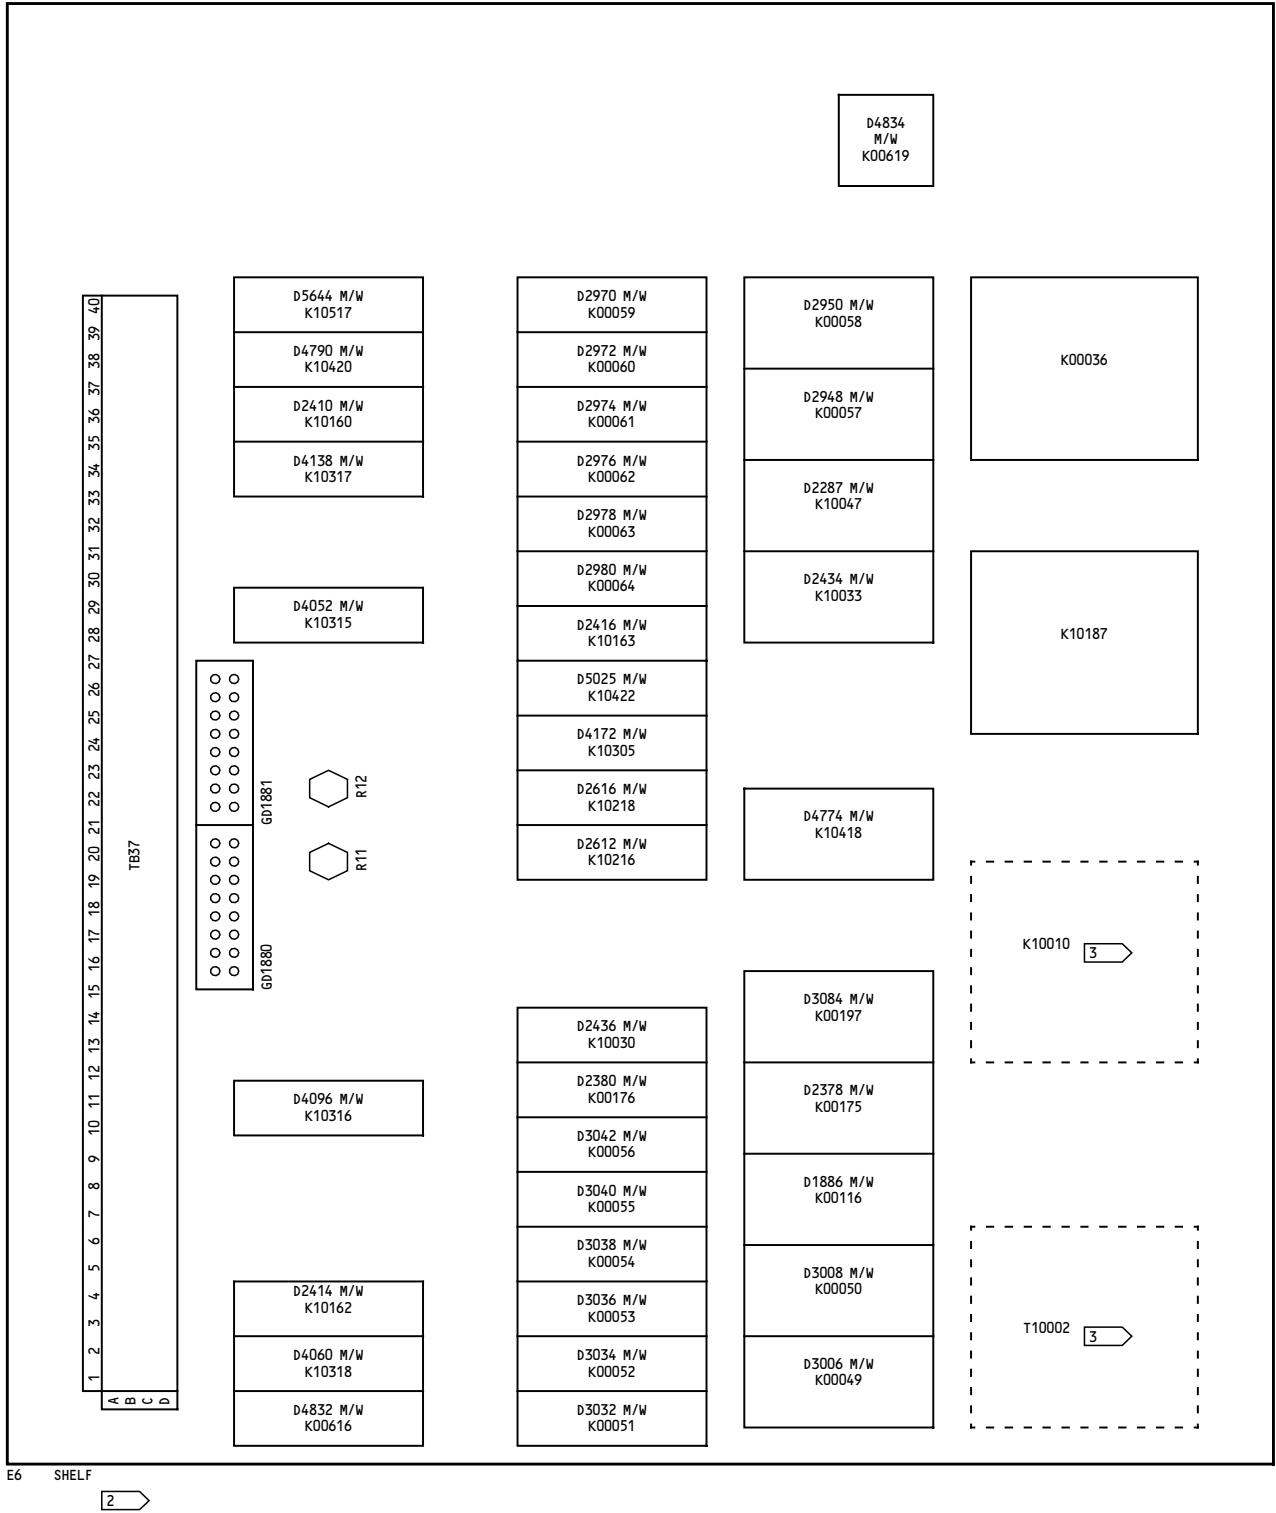

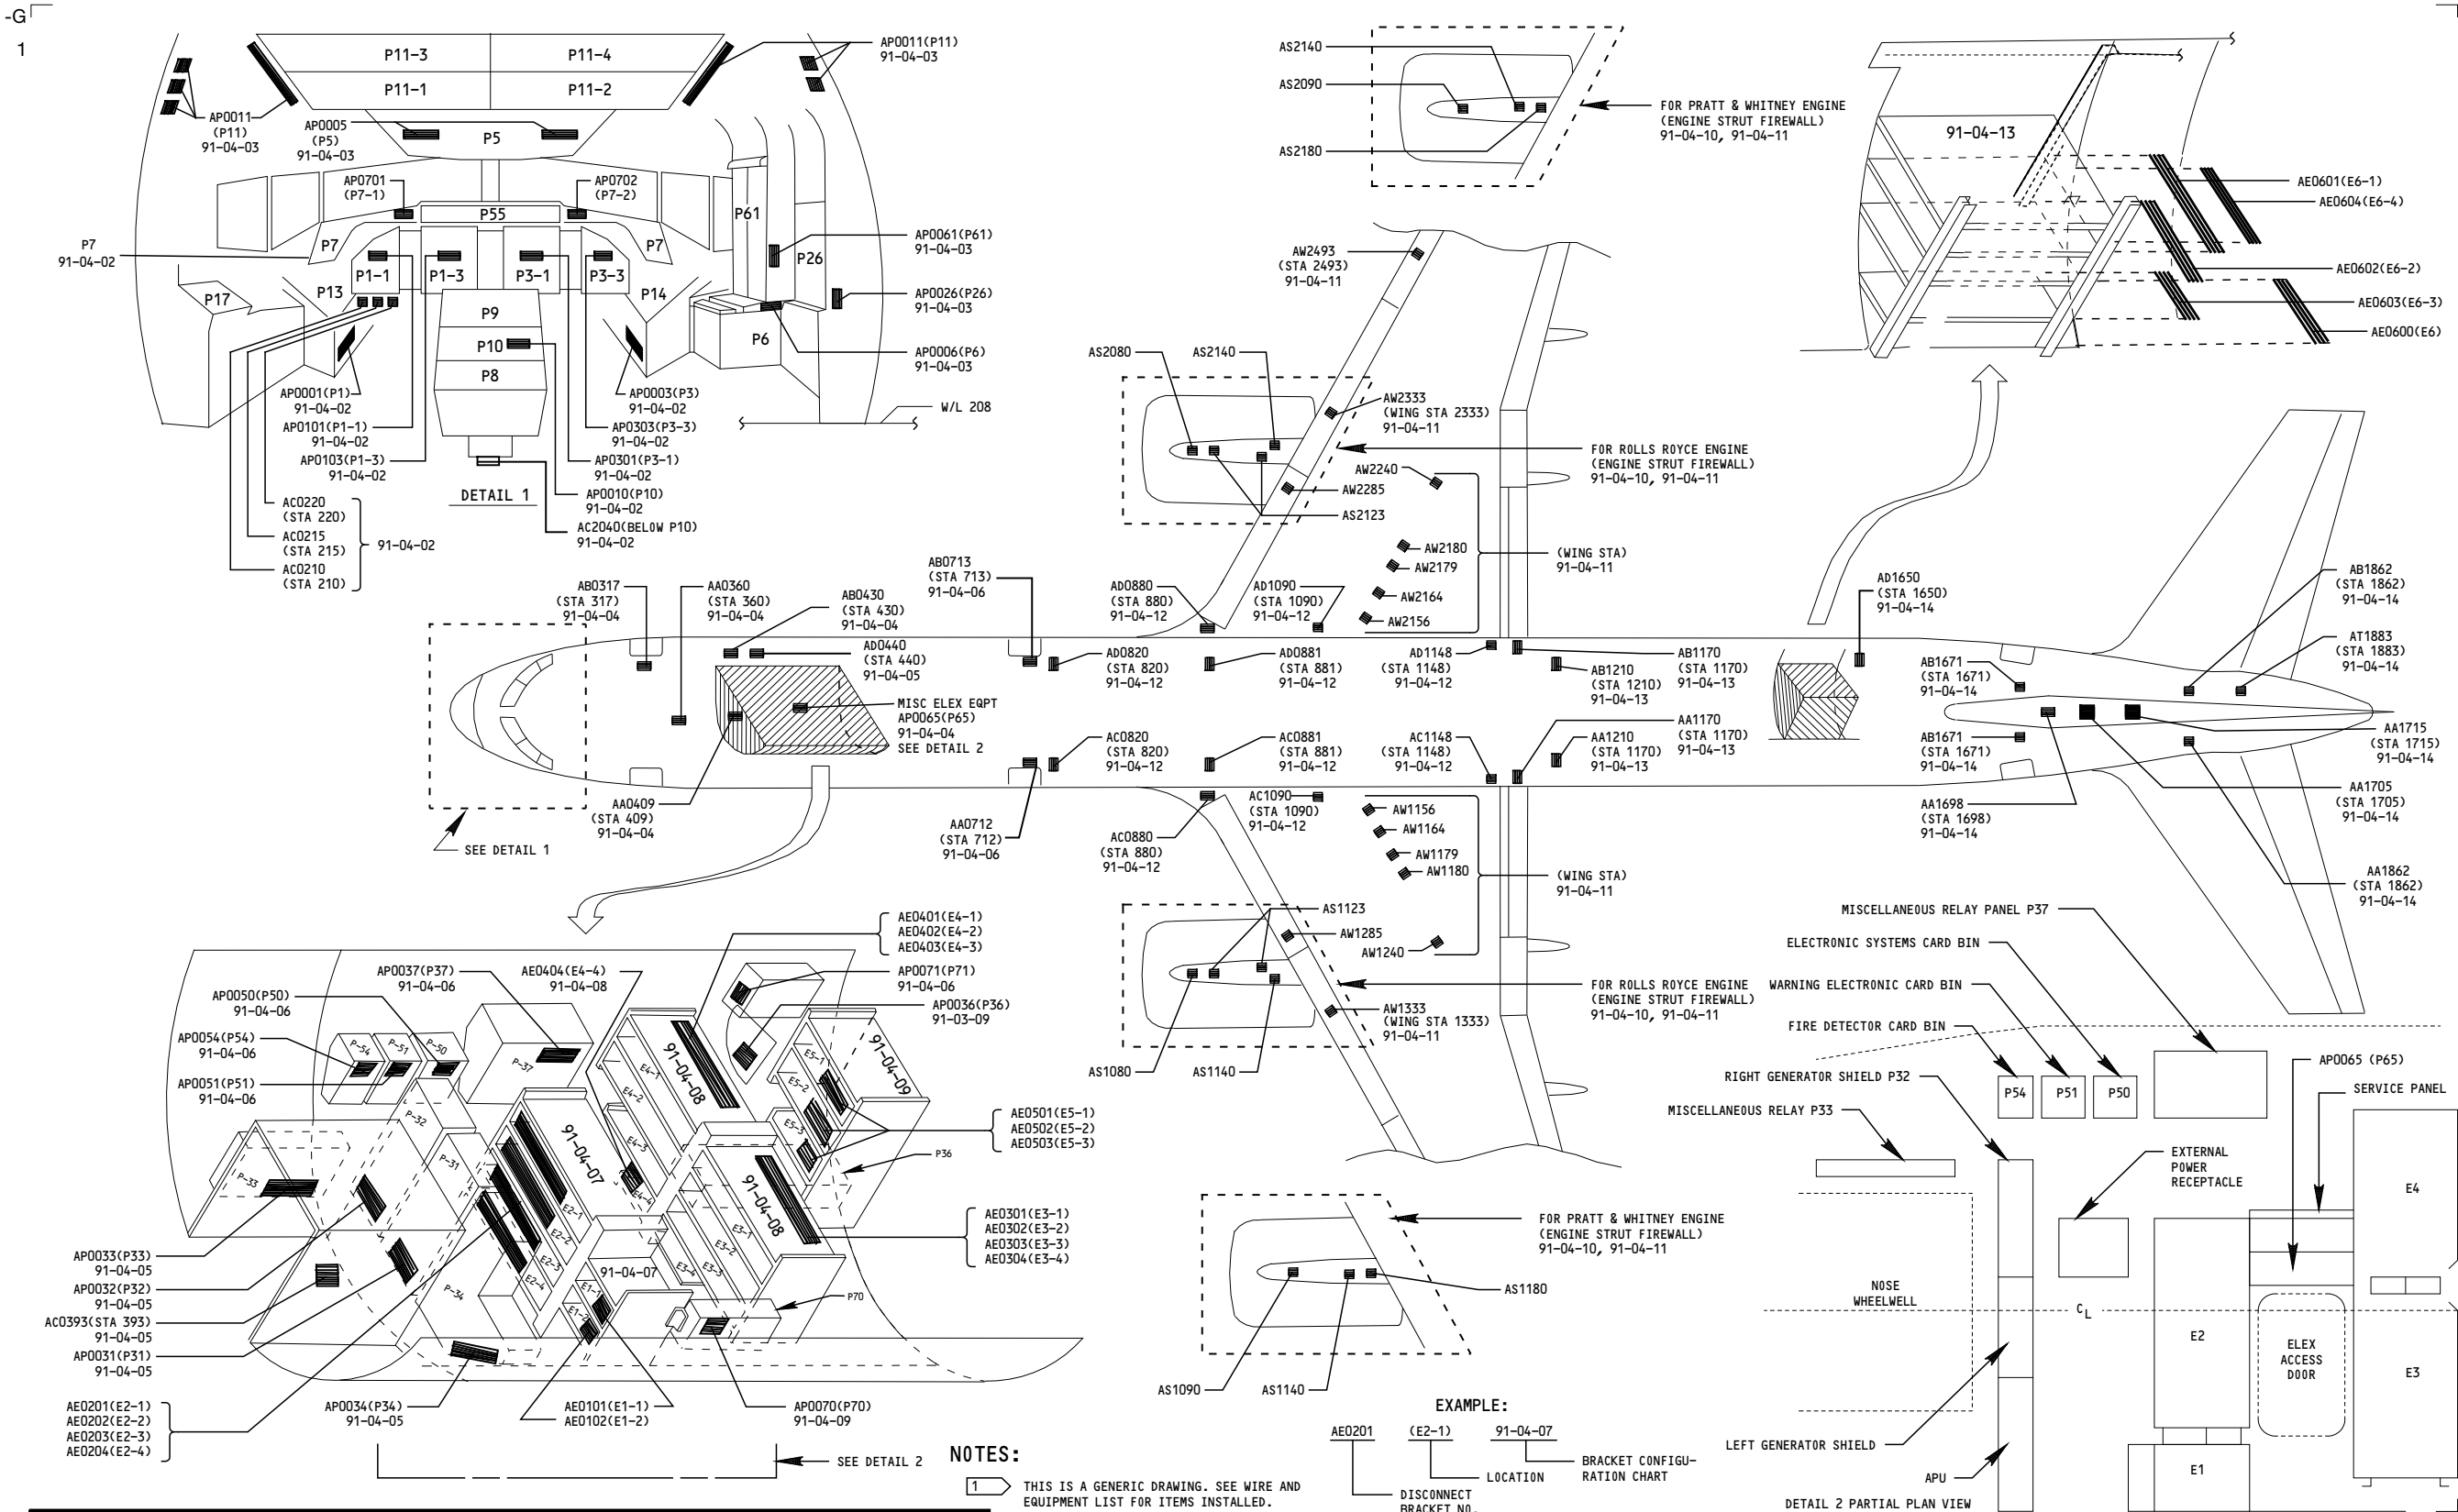

ALL

**DISCONNECT BRACKETS LOCATIONS**

D280N032

**91-04-01**

Page 1


Jan 21/2005

**91-04-01**


Page 1

Jan 21/2005


-A  
1

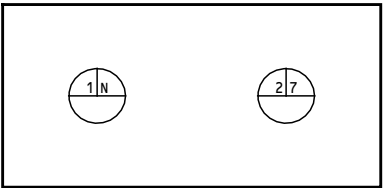


AP0101

 


P1 CAPTAINS INSTRUMENT PANEL

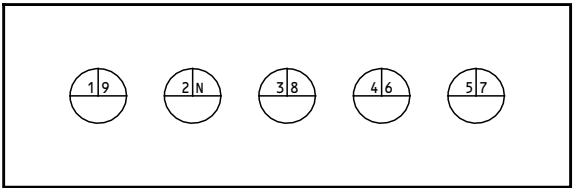


AP0103

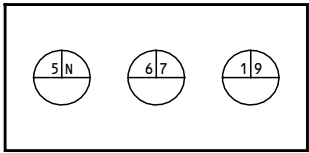


AP0301

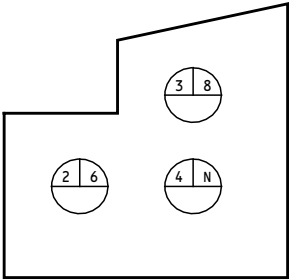


AP0303

 


P3 F/O INSTRUMENT PANEL

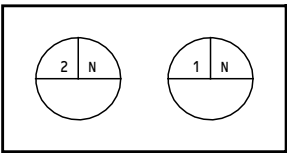

AC0210


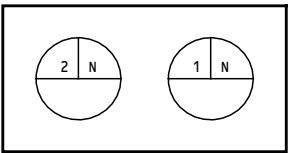


AC0215

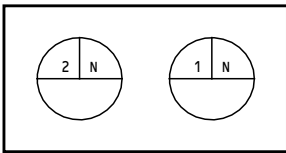


AC0220

 SPEEDBRAKE

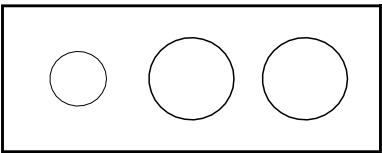


P7-1

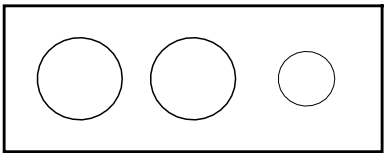



P7-2

P7 GLARESHIELD PANEL  
(VENDOR FURNISH)

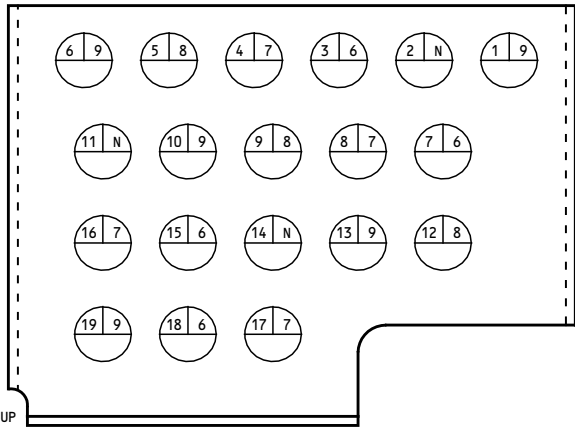

AP0001

 
P1 CAPTAINS INSTRUMENT PANEL

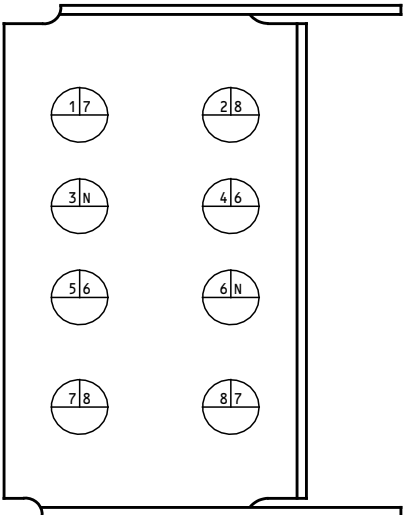

AP0010


P10 QUADRANT STAND

 FRONT VIEW



P1, P3, P7, SPEEDBRAKE  
AND P10 DISCONNECT  
BRACKETS


D280N032

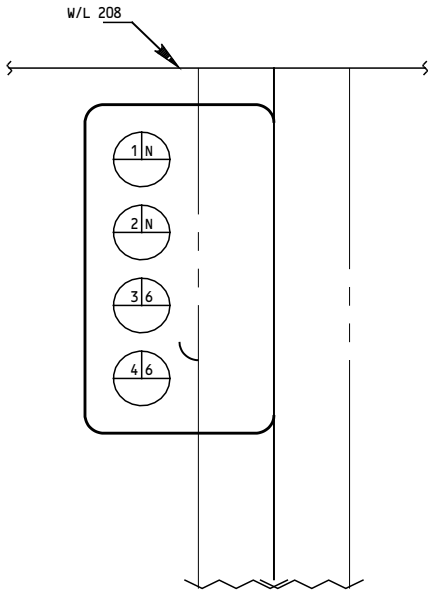

AC204


RBL 0.08 BELOW P10

W/L 208

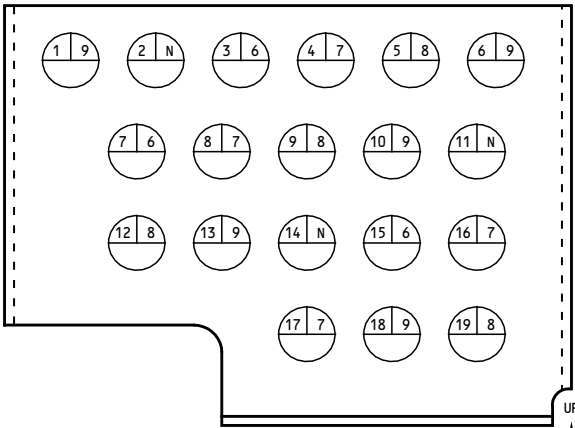

AP0003

 P3 F/O INSTRUMENT PANEL



NOTES:  
BRACKET IS SHOWN IN A MAXIMUM CONFIGURATION;  
FOR EXACT USAGE AND AVAILABILITY SEE 91-04-00.

ALL

91-04-02


Page 1

Jan 21/2005

91-04-02

Page 1

Jan 21/2005

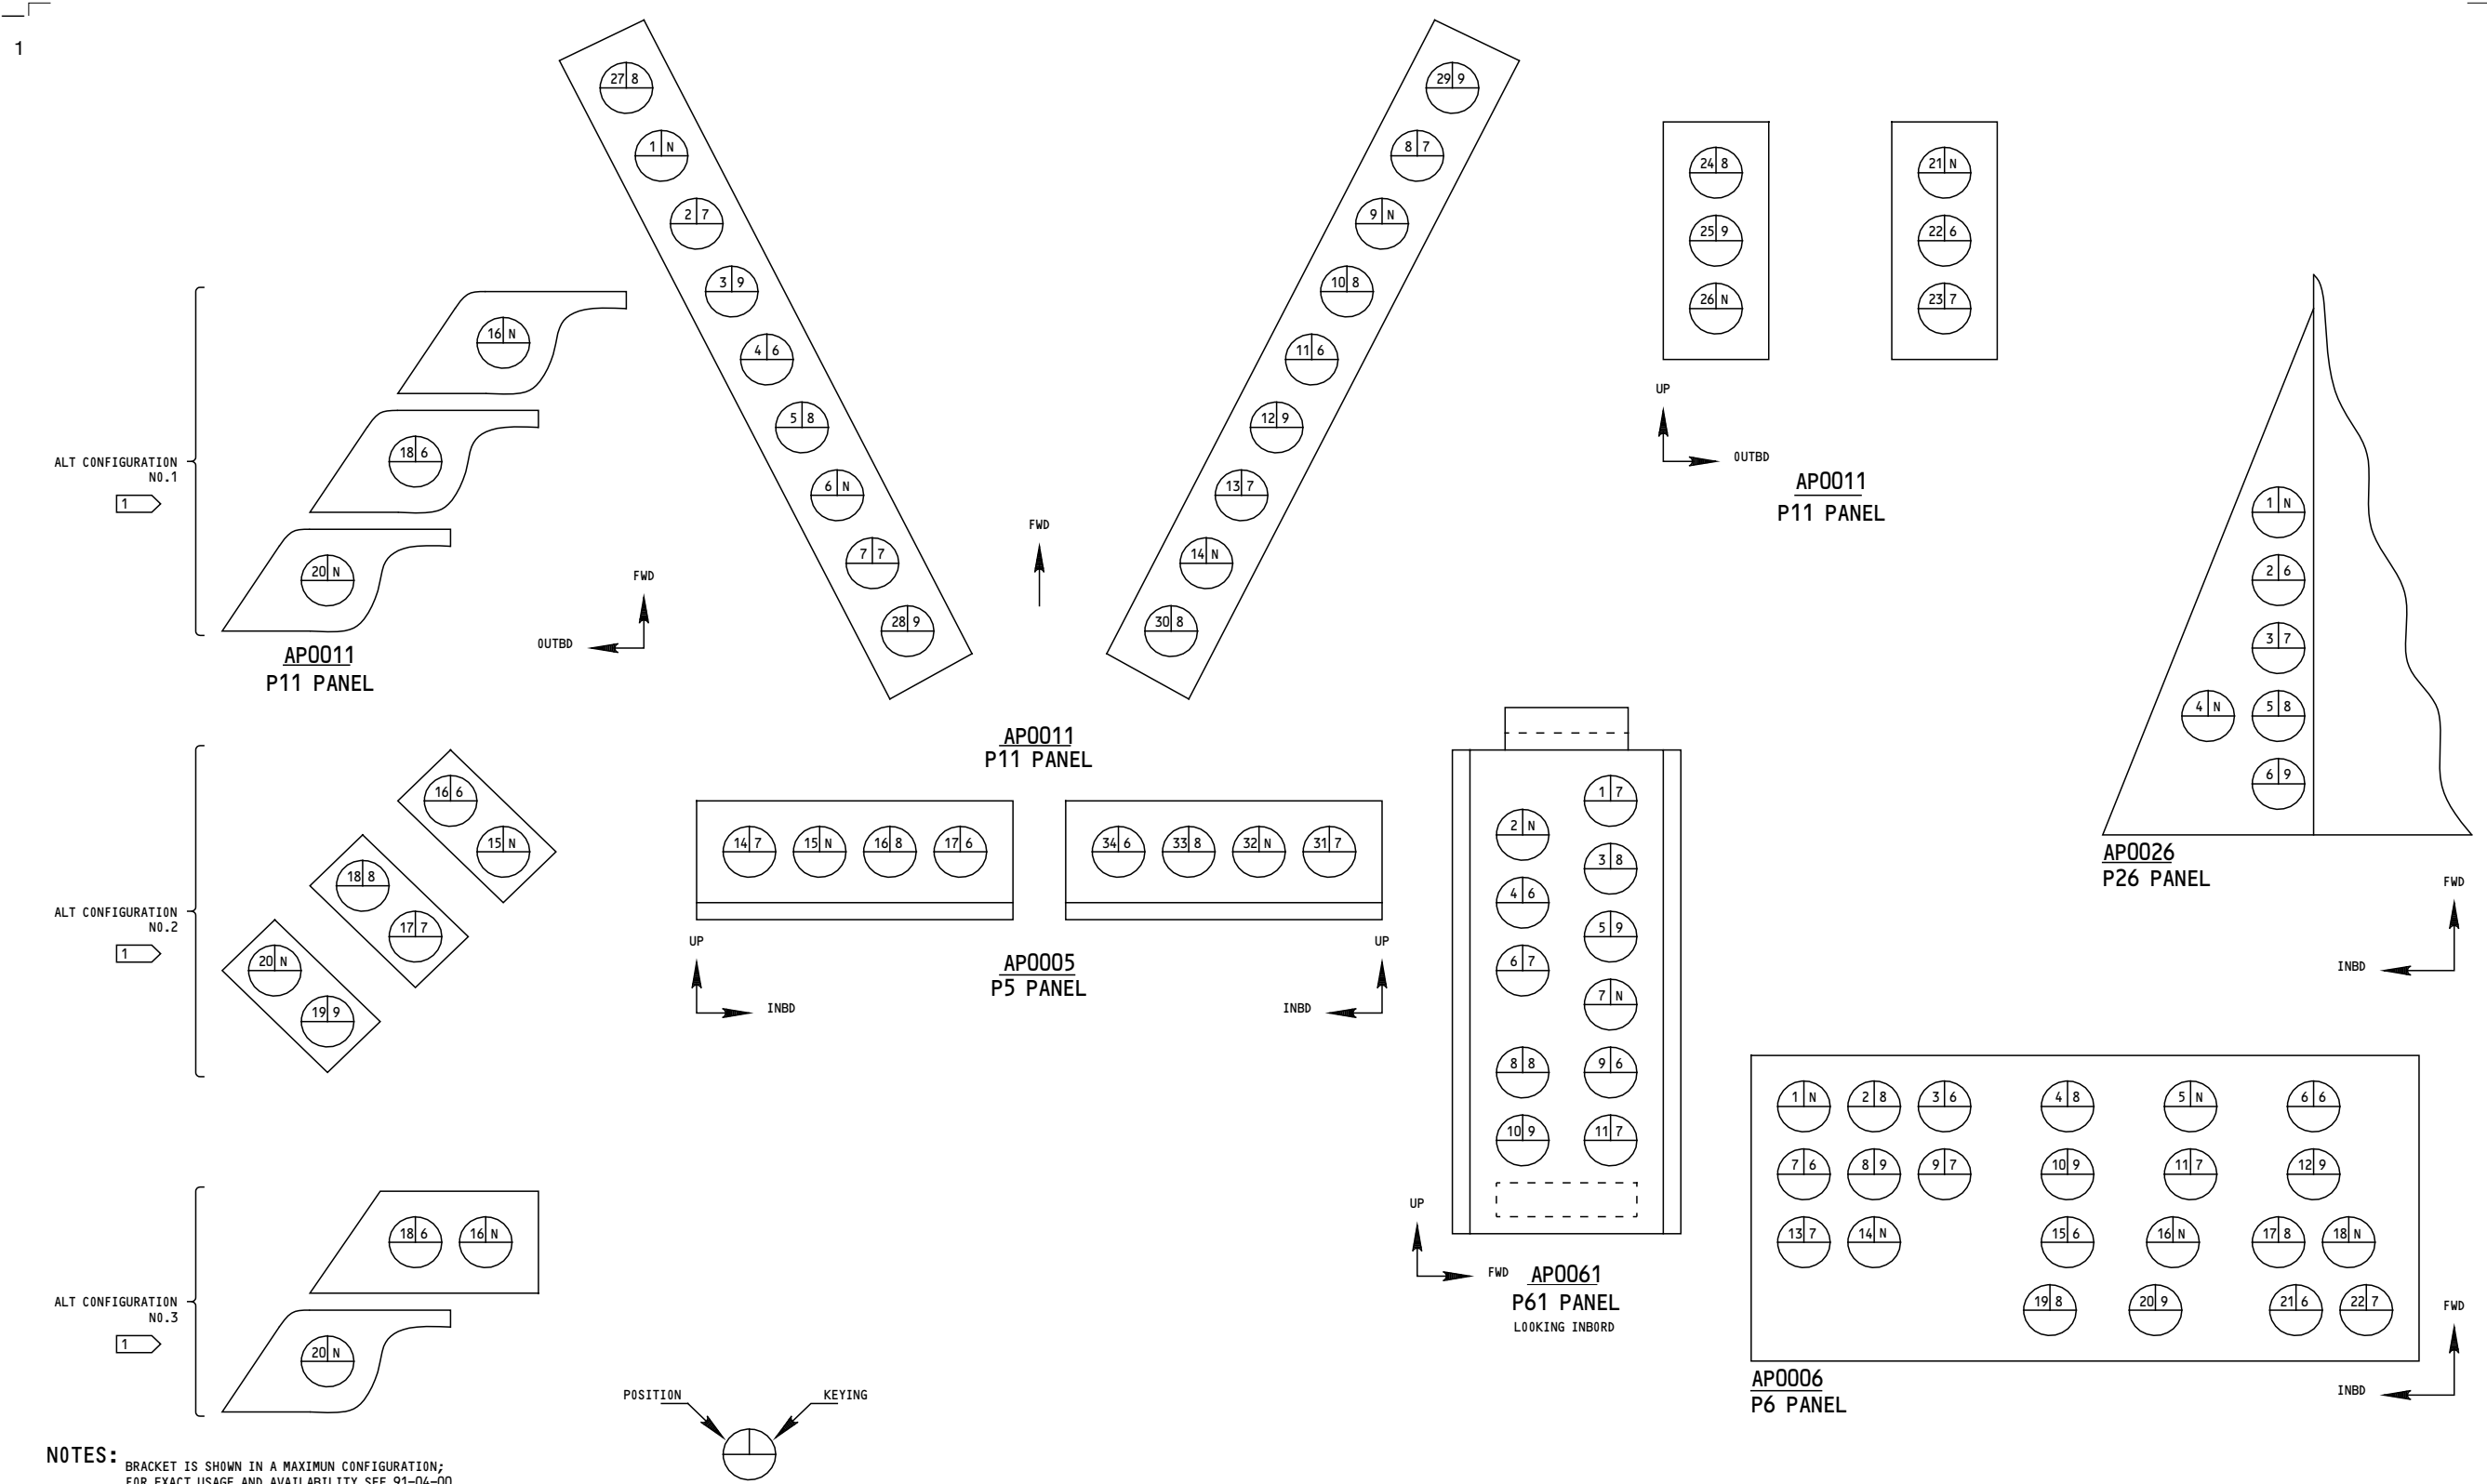

ALL

**P5, P6, P11, P26 AND P61  
DISCONNECT BRACKETS**

D280N032

**91-04-03**







Page 1

Jan 21/2005

**91-04-03**

Page 1








Jan 21/2005

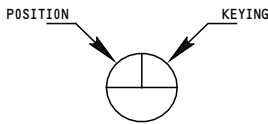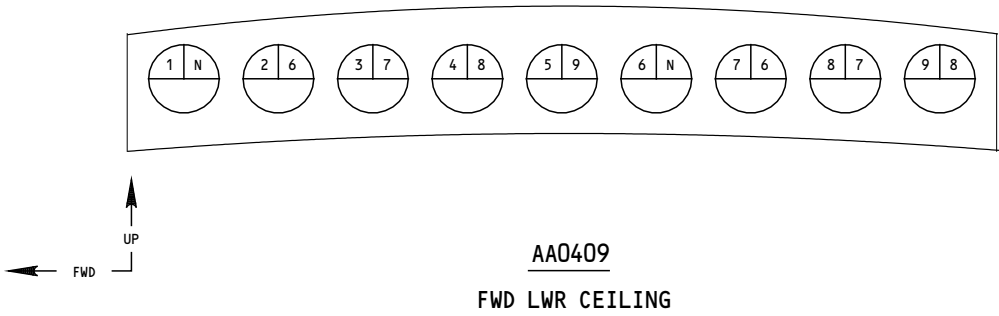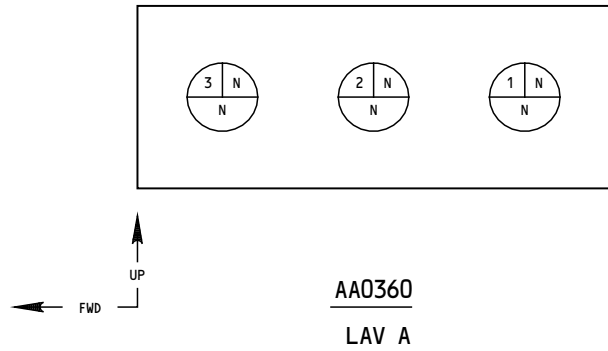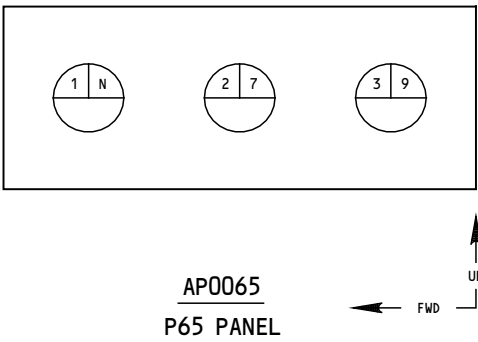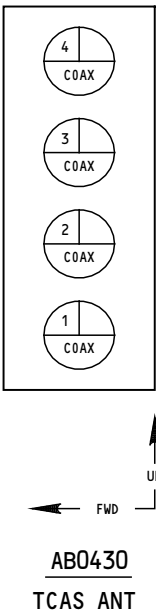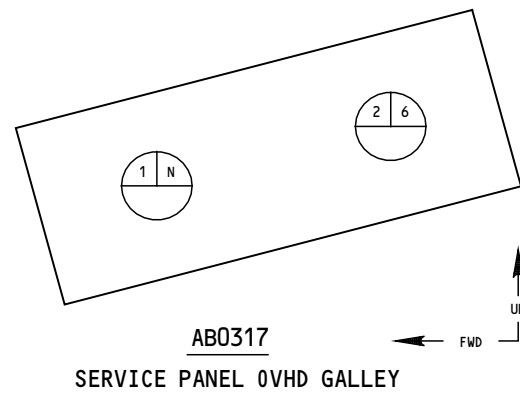

**NOTES:**  
BRACKET IS SHOWN IN A MAXIMUM CONFIGURATION.  
FOR EXACT USAGE AND AVAILABILITY SEE 91-04-00.

ALL	<b>P65, SERVICE PANEL OVHD GALLEY, LAV "A", FWD LWR CLG, DISC.BRACKETS</b>
	D280N032

-C  
1

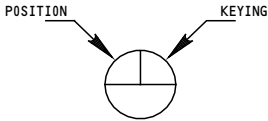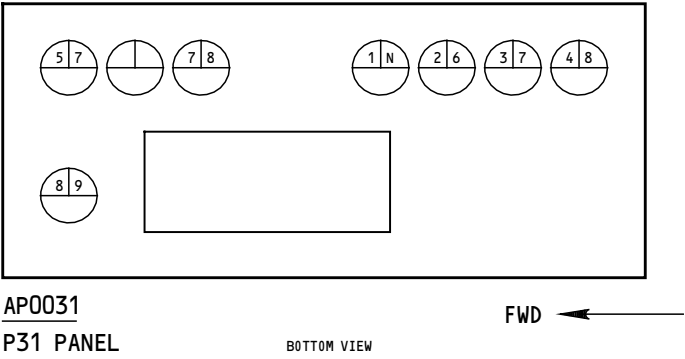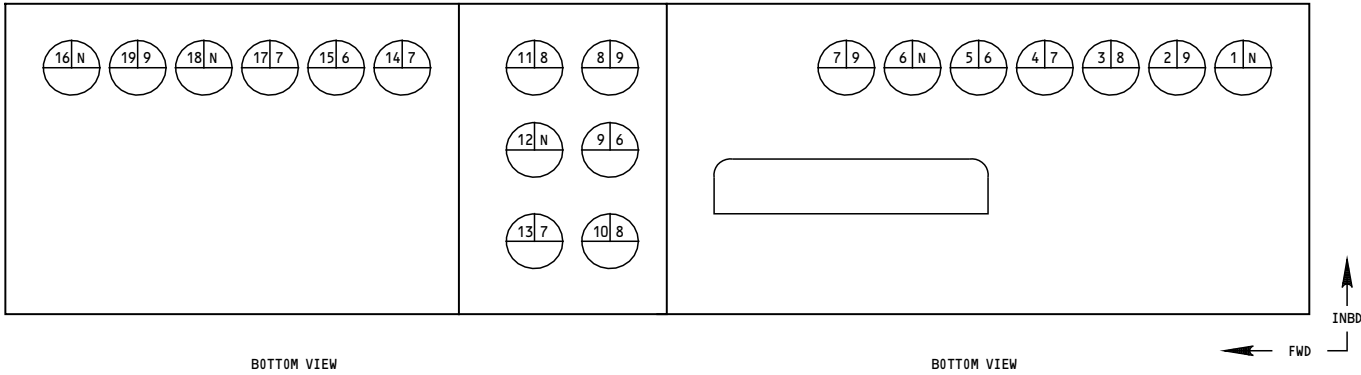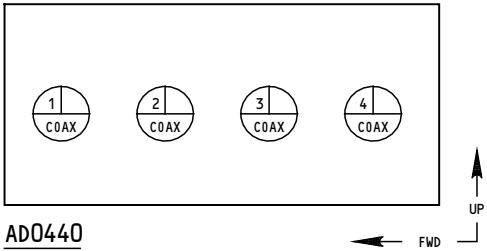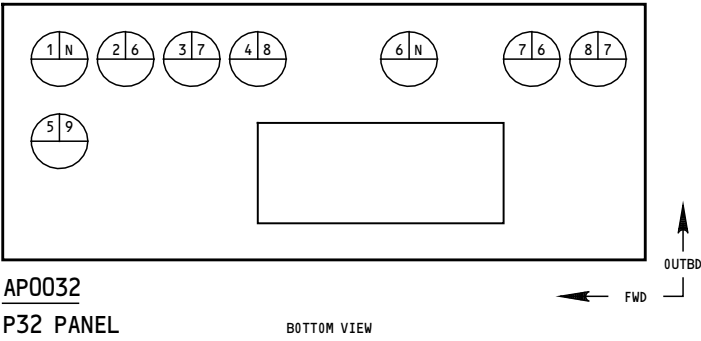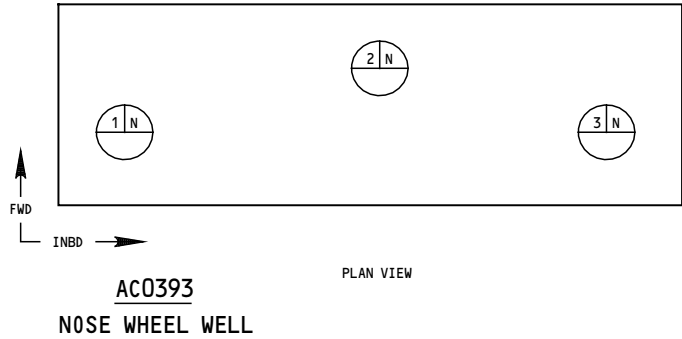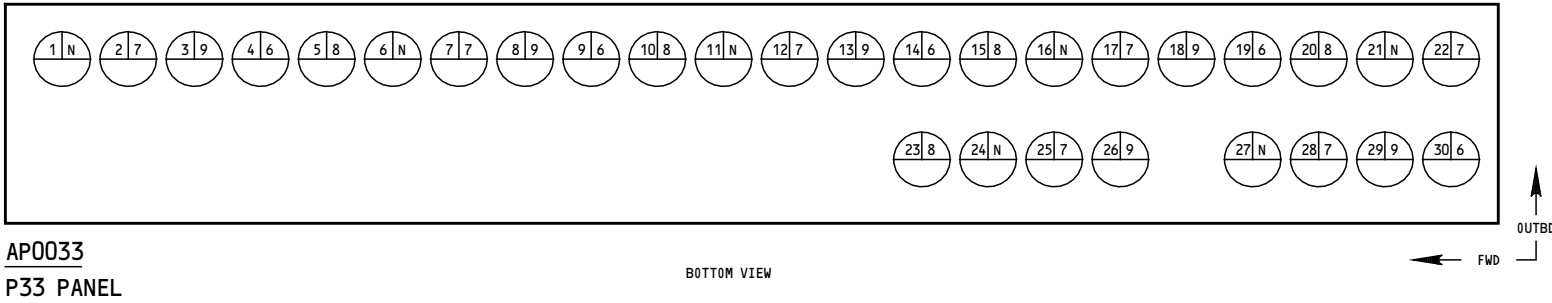

**NOTES:**

BRACKET IS SHOWN IN A MAXIMUM CONFIGURATION,  
FOR EXACT USAGE AND AVAILABILITY SEE 91-04-00.

ALL

**P31, P32, P33, P34, TCAS  
AND NOSE WHEEL WELL  
DISCONNECT BRACKETS**

D280N032

**91-04-05**

Page 1

Jan 21/2005








**91-04-05**

Page 1

Jan 21/2005



-A  
1

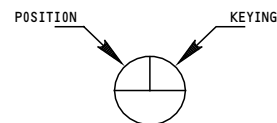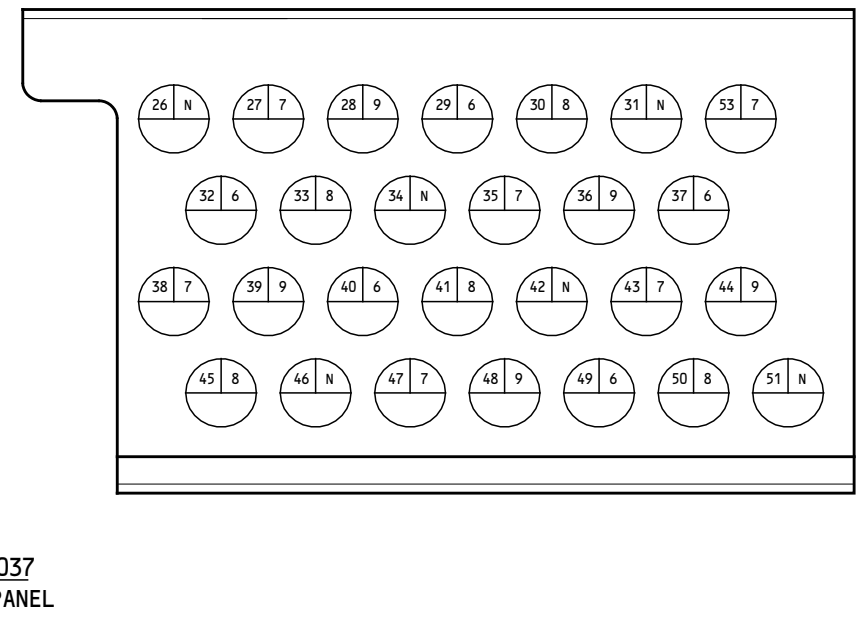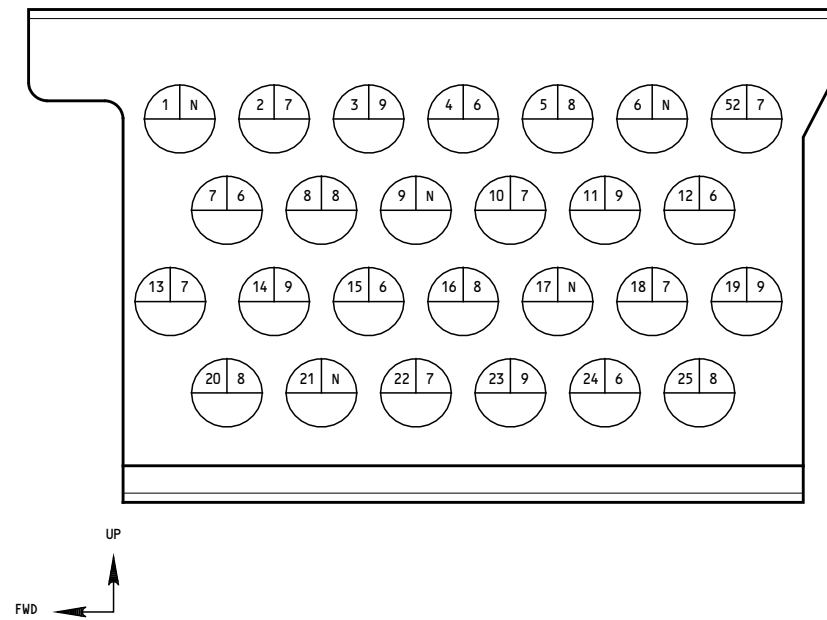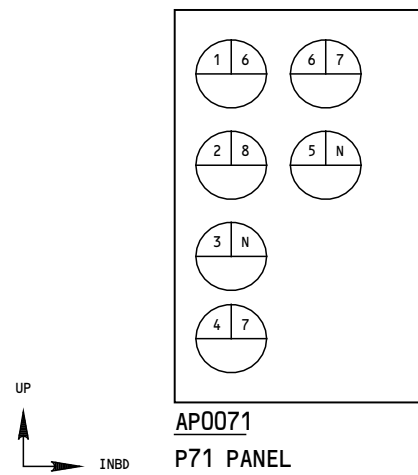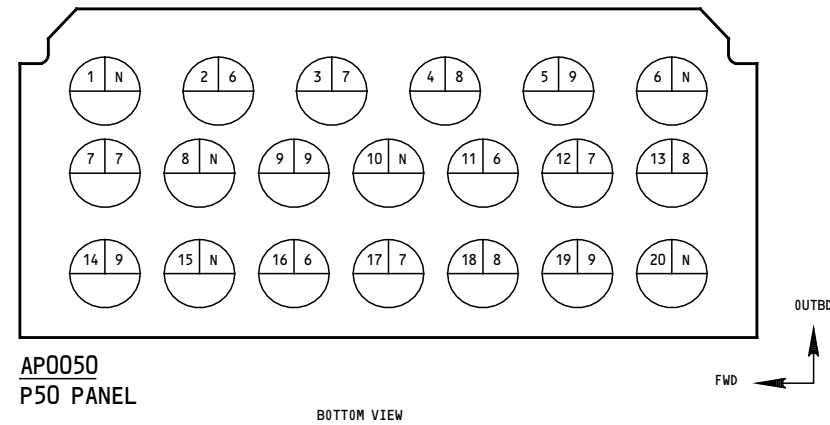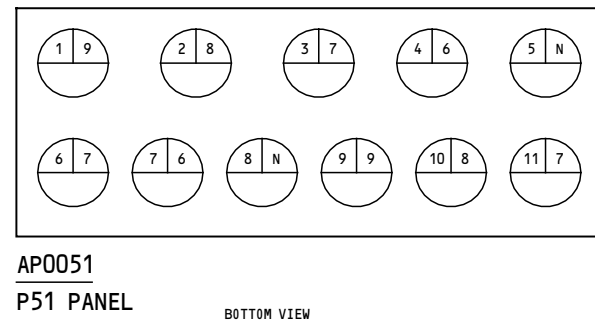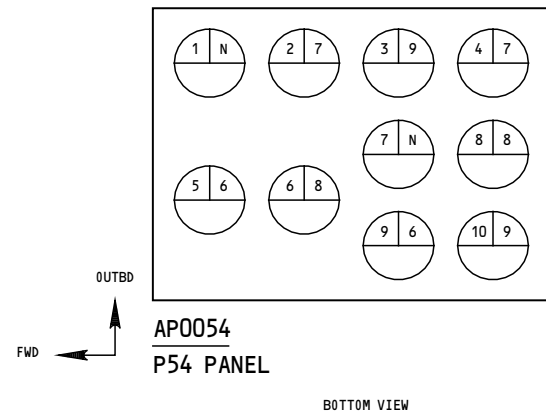

**NOTES:**  
BRACKET IS SHOWN IN A MAXIMUM CONFIGURATION;  
FOR EXACT USAGE AND AVAILABILITY SEE 91-04-00.

ALL



**P37, P50, P51, P54 AND  
PSU DISCONNECT BRACKETS**

D280N032

**91-04-06**

Page 1

Jan 21/2005

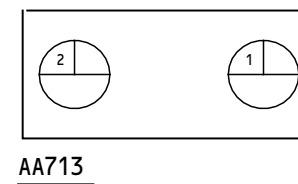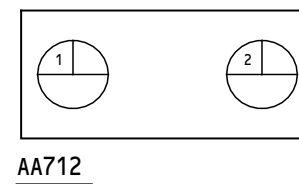

**PSU**  
BOTTOM VIEW


**91-04-06**

Page 1


Jan 21/2005

**757-200 WIRING DIAGRAM MANUAL**


1

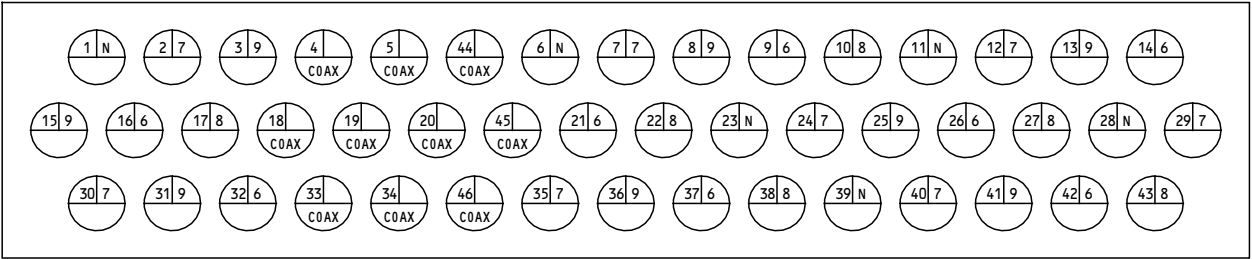


AE0201  
E2-1 SHELF

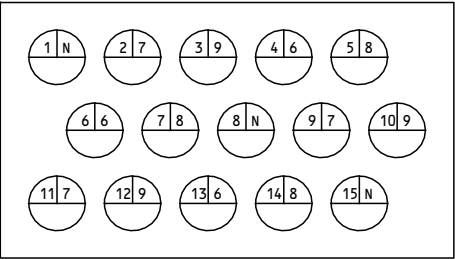


AE0101  
E1-1 SHELF

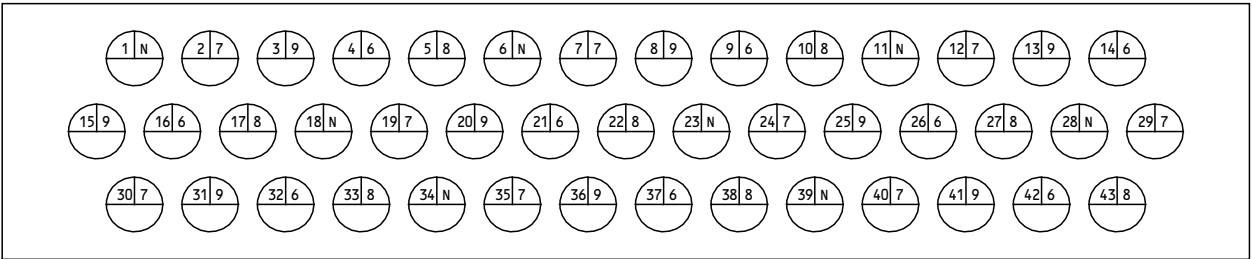



AE0202  
E2-2 SHELF

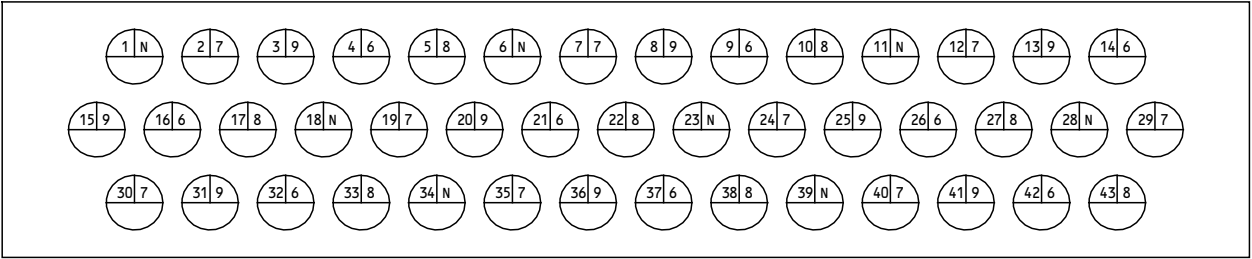

AE0203  
E2-3 SHELF

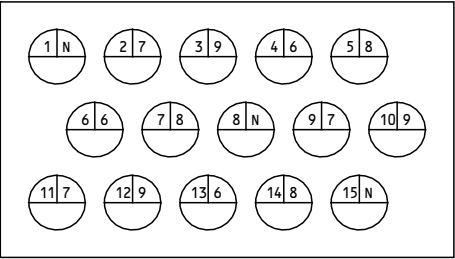

AE0102  
E1-2 SHELF

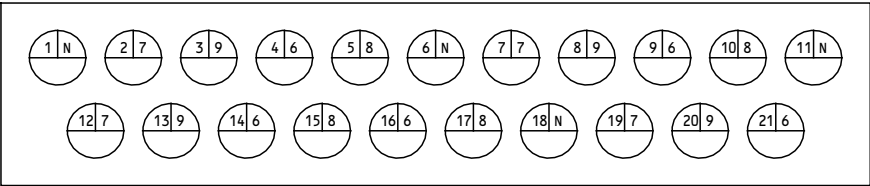 

AE0204  
E2-4 SHELF

LOOKING AFT

**NOTES:**

BRACKET IS SHOWN IN A MAXIMUM CONFIGURATION;  
FOR EXACT USAGE AND AVAILABILITY SEE 91-04-00.

ALL	<b>E1 AND E2 DISCONNECT BRACKETS</b>
	D280N032

**91-04-07**


Page 1

Jan 21/2005


**91-04-07**

Page 1


Jan 21/2005

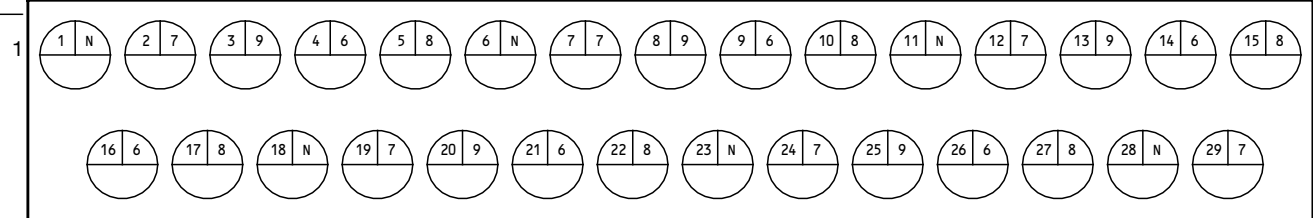


**AE0301**  
**E3-1 SHELF**

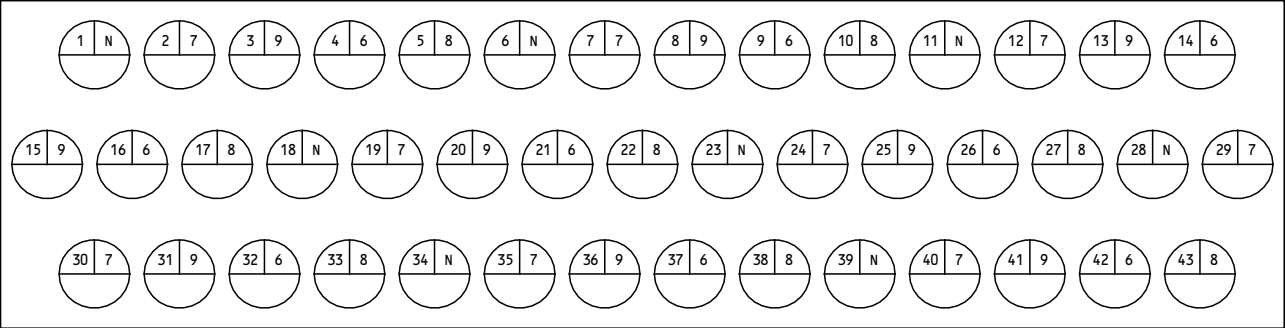


**AE0302**  
**E3-2 SHELF**

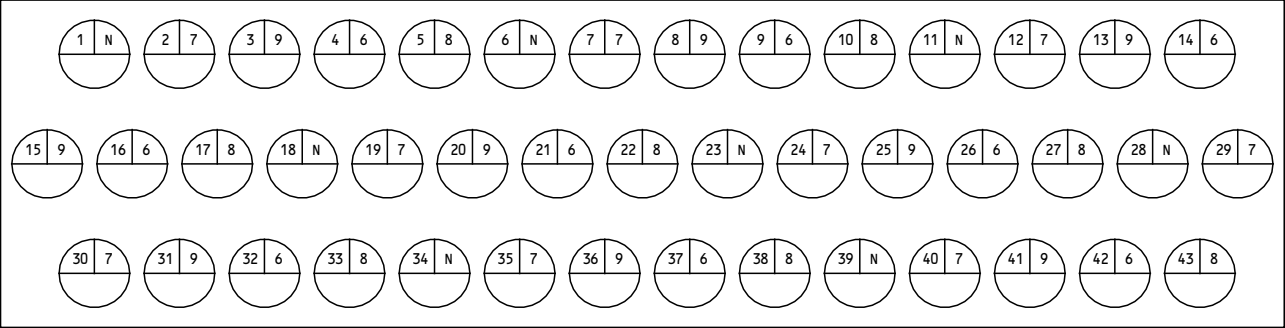


**AE0303**  
**E3-3 SHELF**

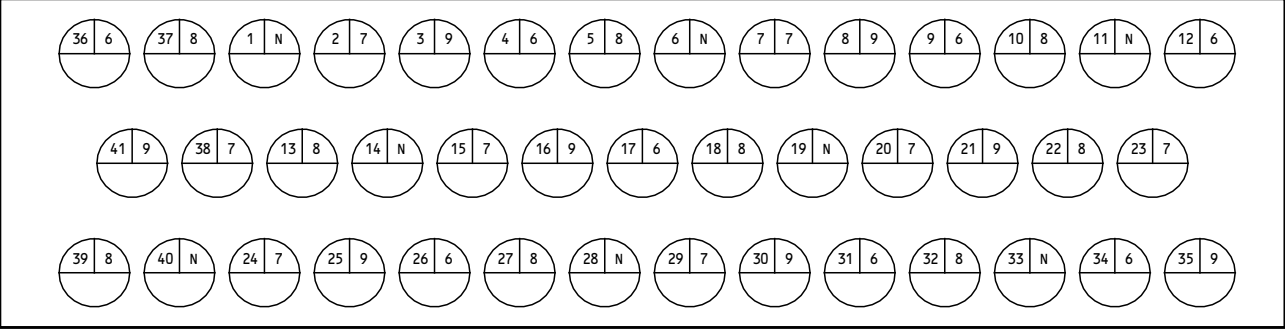


**AE0304**  
**E3-4 SHELF**

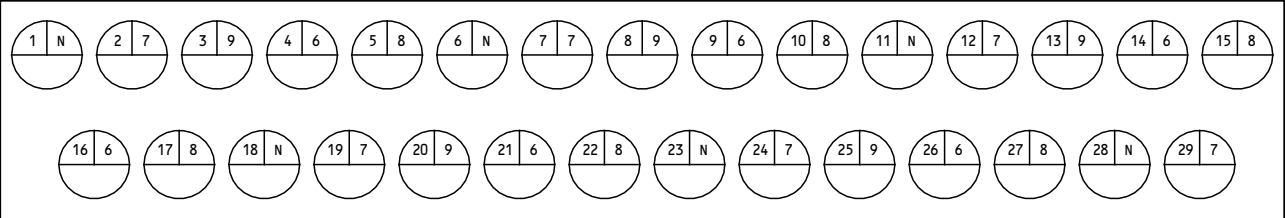


**AE0401**  
**E4-1 SHELF**

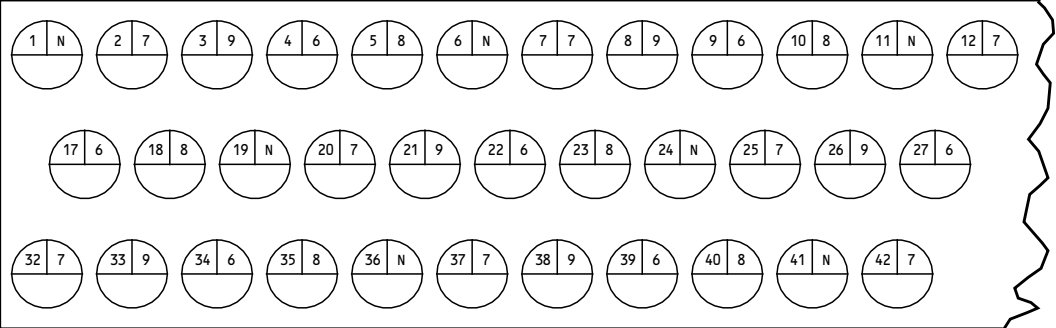


**AE0402**  
**E4-2 SHELF**

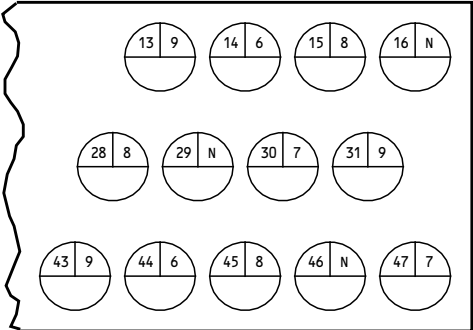


**AE0402**  
**E4-2 SHELF CONTINUED**

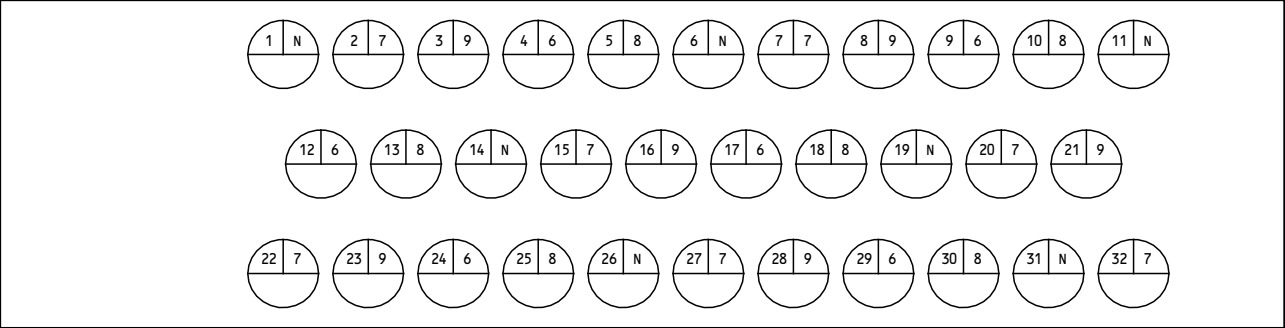

**AE0403**  
**E4-3 SHELF**

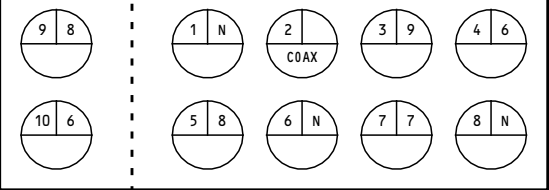

**AE0404**  
**E4-4 SHELF**

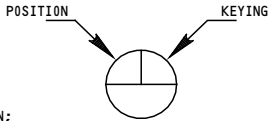

LOOKING FORWARD

**NOTES:**  
BRACKET IS SHOWN IN A MAXIMUM CONFIGURATION;  
FOR EXACT USAGE AND AVAILABILITY SEE 91-04-00.

ALL	<b>E3 AND E4 DISCONNECT BRACKETS</b>
	D280N032

**91-04-08**


Page 1

Jan 21/2005


**91-04-08**

Page 1


Jan 21/2005

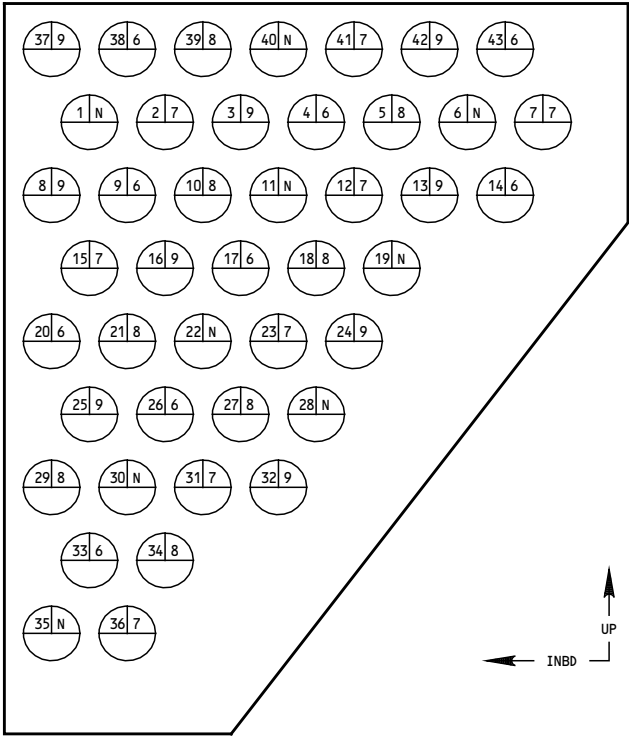


**AP0036**  
**P36 PANEL**

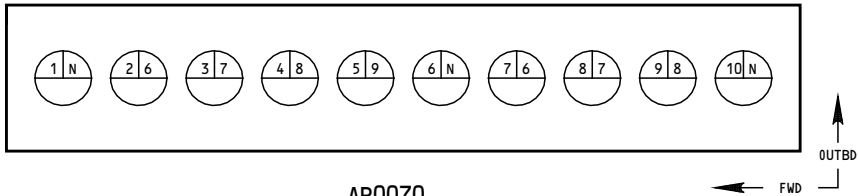


**AP0070**  
**P70 PANEL**

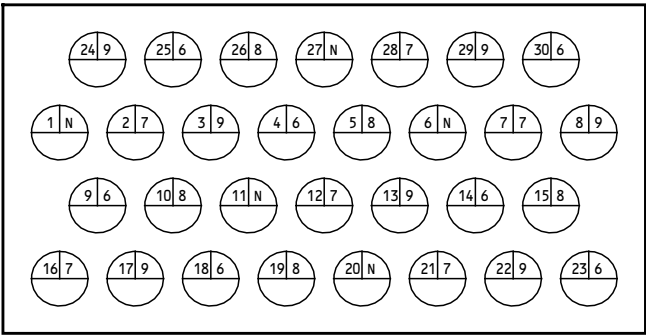

**AE0501**  
**E5-1 SHELF**

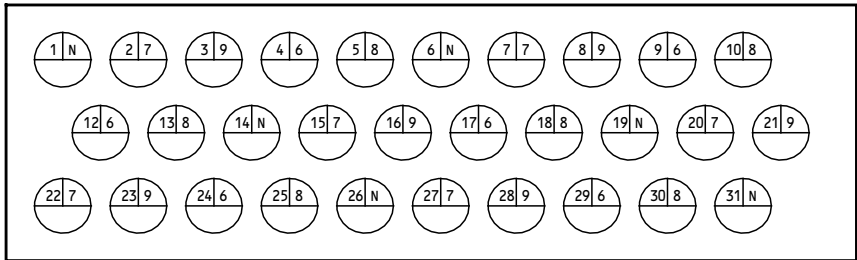


**AE0502**  
**E5-2 SHELF**

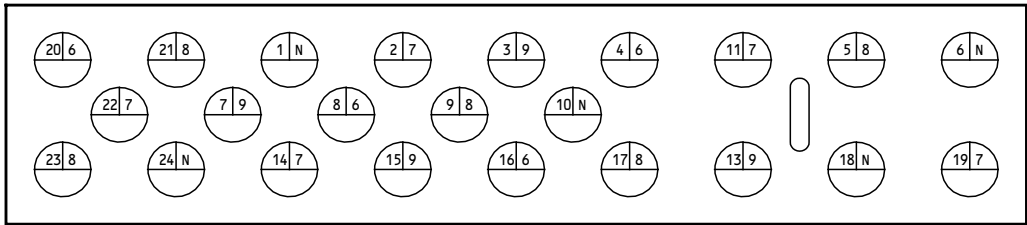

**AE0503**  
**E5-3 SHELF**

**LOOKING AFT**

 **NOTES:** BRACKET IS SHOWN IN A MAXIMUM CONFIGURATION;  
FOR EXACT USAGE AND AVAILABILITY SEE 91-04-00.



ALL

**E5, P36 AND P70  
DISCONNECT BRACKETS**

D280N032

**91-04-09**


Page 1

Jan 21/2005


**91-04-09**

Page 1


Jan 21/2005

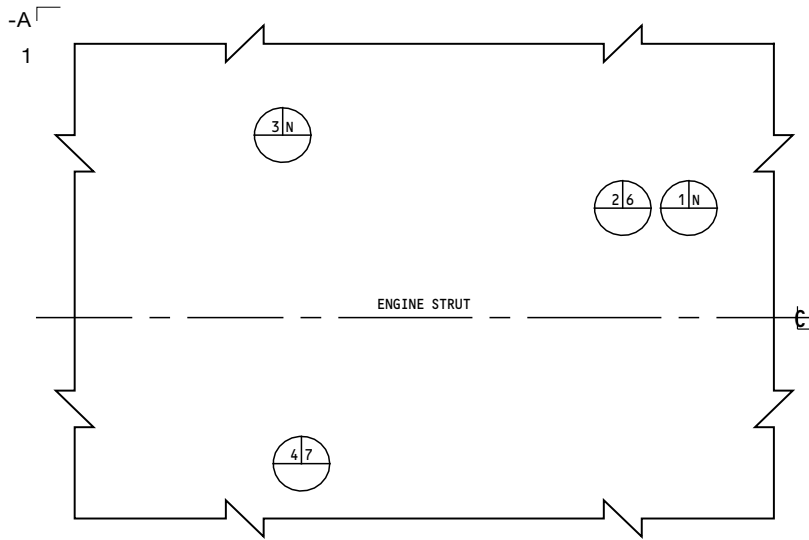


**AS1123**  
LOOKING DOWN

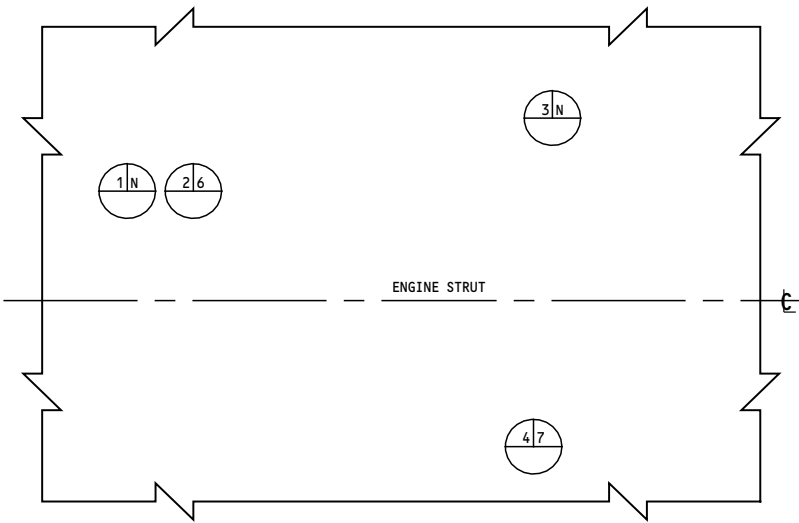


**AS2123**  
LOOKING DOWN

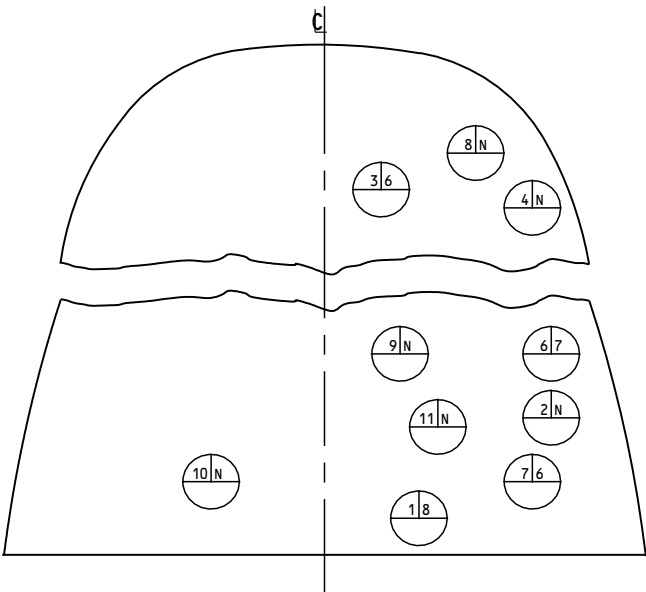


**AS1080**  
**ENGINE STRUT FIREWALL**  
LOOKING FORWARD

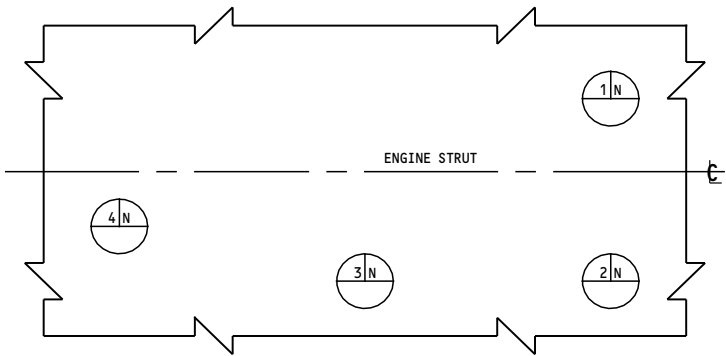


**AS1140**  
LOOKING UP

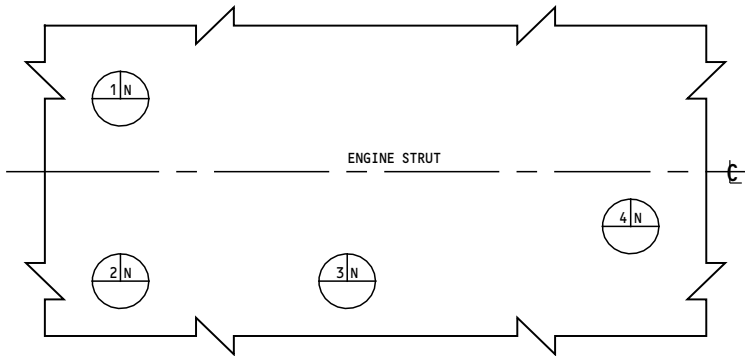

**AS2140**  
LOOKING UP

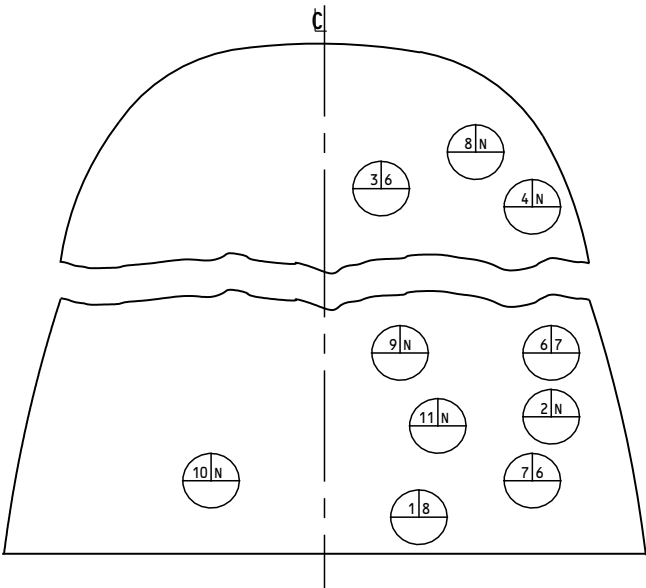

**AS2080**  
**ENGINE STRUT FIREWALL**  
LOOKING FORWARD

 

**NOTES:**  
BRACKET IS SHOWN IN A MAXIMUM CONFIGURATION;  
FOR EXACT USAGE AND AVAILABILITY SEE 91-04-00.

ALL

**R AND L ENG STRUT FW,  
HORIZ FW ROLLS ROYCE  
DISCONNECT BRACKETS**

D280N032

**91-04-10**

Page 1


Jan 21/2005

**91-04-10**

Page 1


Jan 21/2005

-A  
1

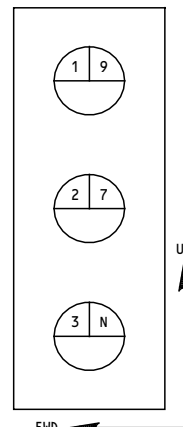


**AW1156**

**L REAR SPAR**  
LOOKING INBOARD

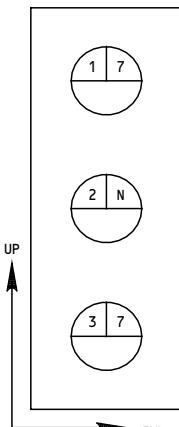


**AW2156**

**R REAR SPAR**  
LOOKING INBOARD

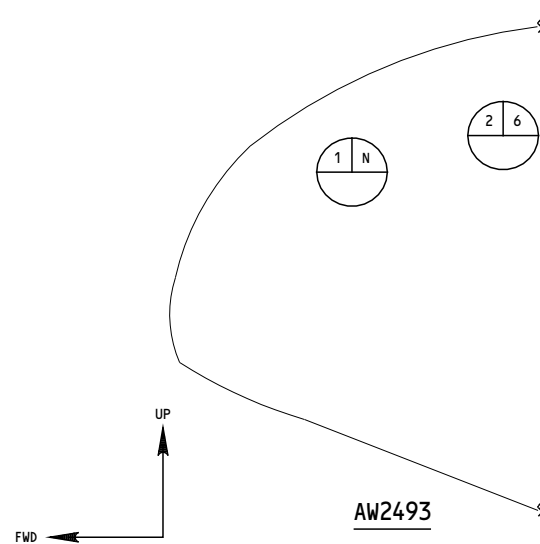


**AW2493**

**WING LE STRUT**  
LOOKING OUTBOARD

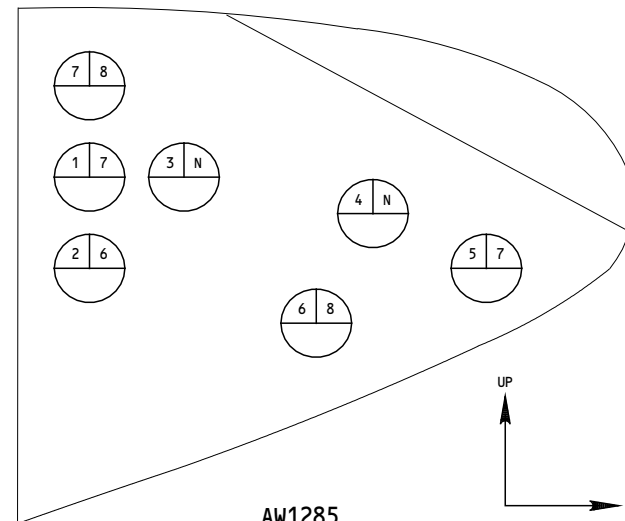


**AW1285**

**L VAPOR SEAL**  
LOOKING OUTBOARD

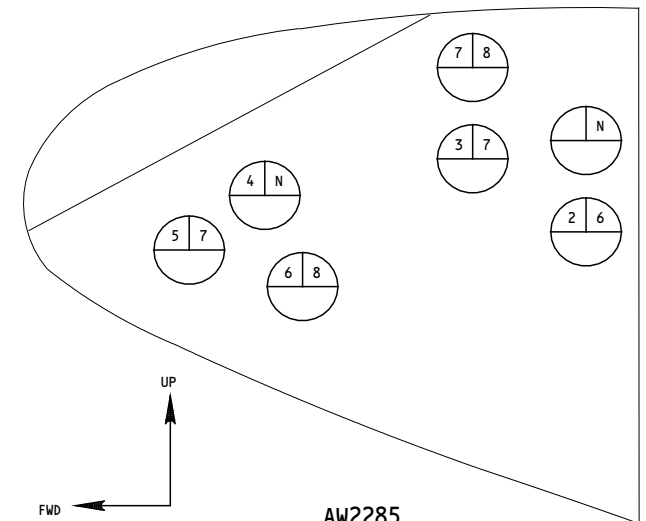


**AW2285**

**R VAPOR SEAL**  
LOOKING OUTBOARD

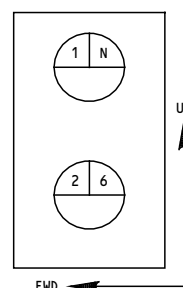


**AW1164**

**L REAR SPAR**  
LOOKING INBOARD

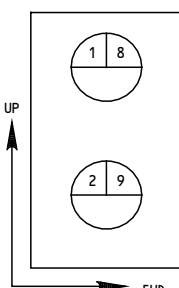


**AW2164**

**R REAR SPAR**  
LOOKING INBOARD

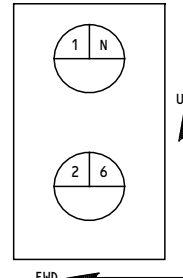


**AW1179**

**L REAR SPAR**  
LOOKING INBOARD

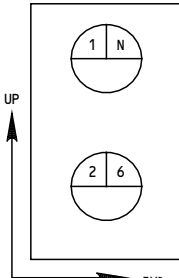


**AW2179**

**R REAR SPAR**  
LOOKING INBOARD

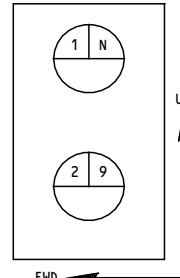


**AW1180**

**L REAR SPAR**  
LOOKING INBOARD

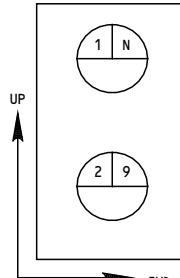


**AW2180**

 **R REAR SPAR**  
LOOKING INBOARD





**AW1240**

 **L REAR SPAR**




**AW2240**

**R REAR SPAR**

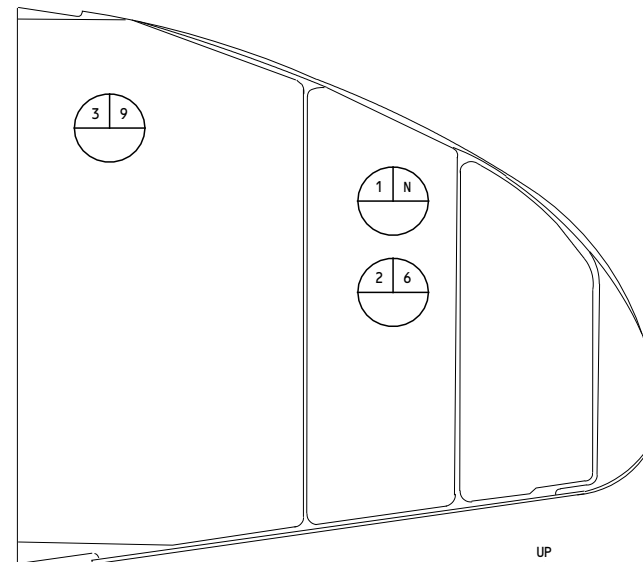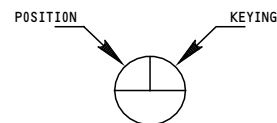

**AW1333**

**L ENGINE OUTBD CLOSURE RIB**  
LOOKING OUTBOARD

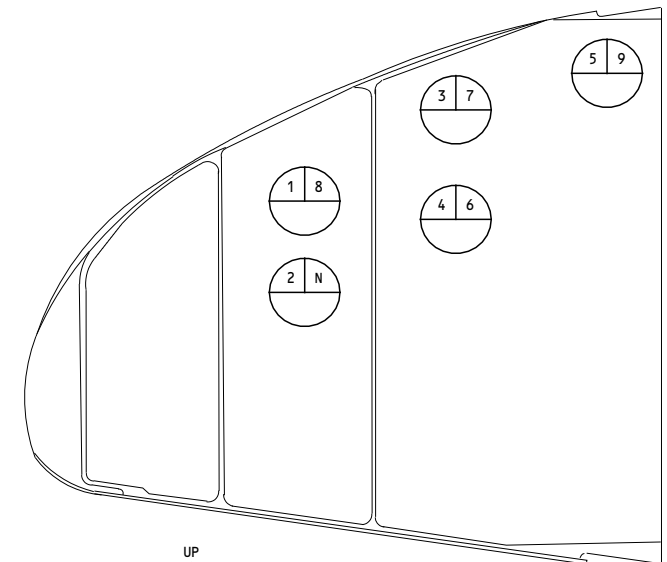

**AW2333**

**R ENGINE OUTBD CLOSURE RIB**  
LOOKING OUTBOARD

**NOTES:** BRACKET IS SHOWN IN A MAXIMUM CONFIGURATION;  
FOR EXACT CUAGE AND AVAILABILITY SEE 91-04-00.

ALL

**WG LE STRUT, VAPOR SEAL,  
ENG OUTBD CLOS RIB, ROLLS  
ROYCE RS DISC. BRKTS**

D280N032

**91-04-11**


Page 1

Jan 21/2005

**91-04-11**

Page 1

Jan 21/2005

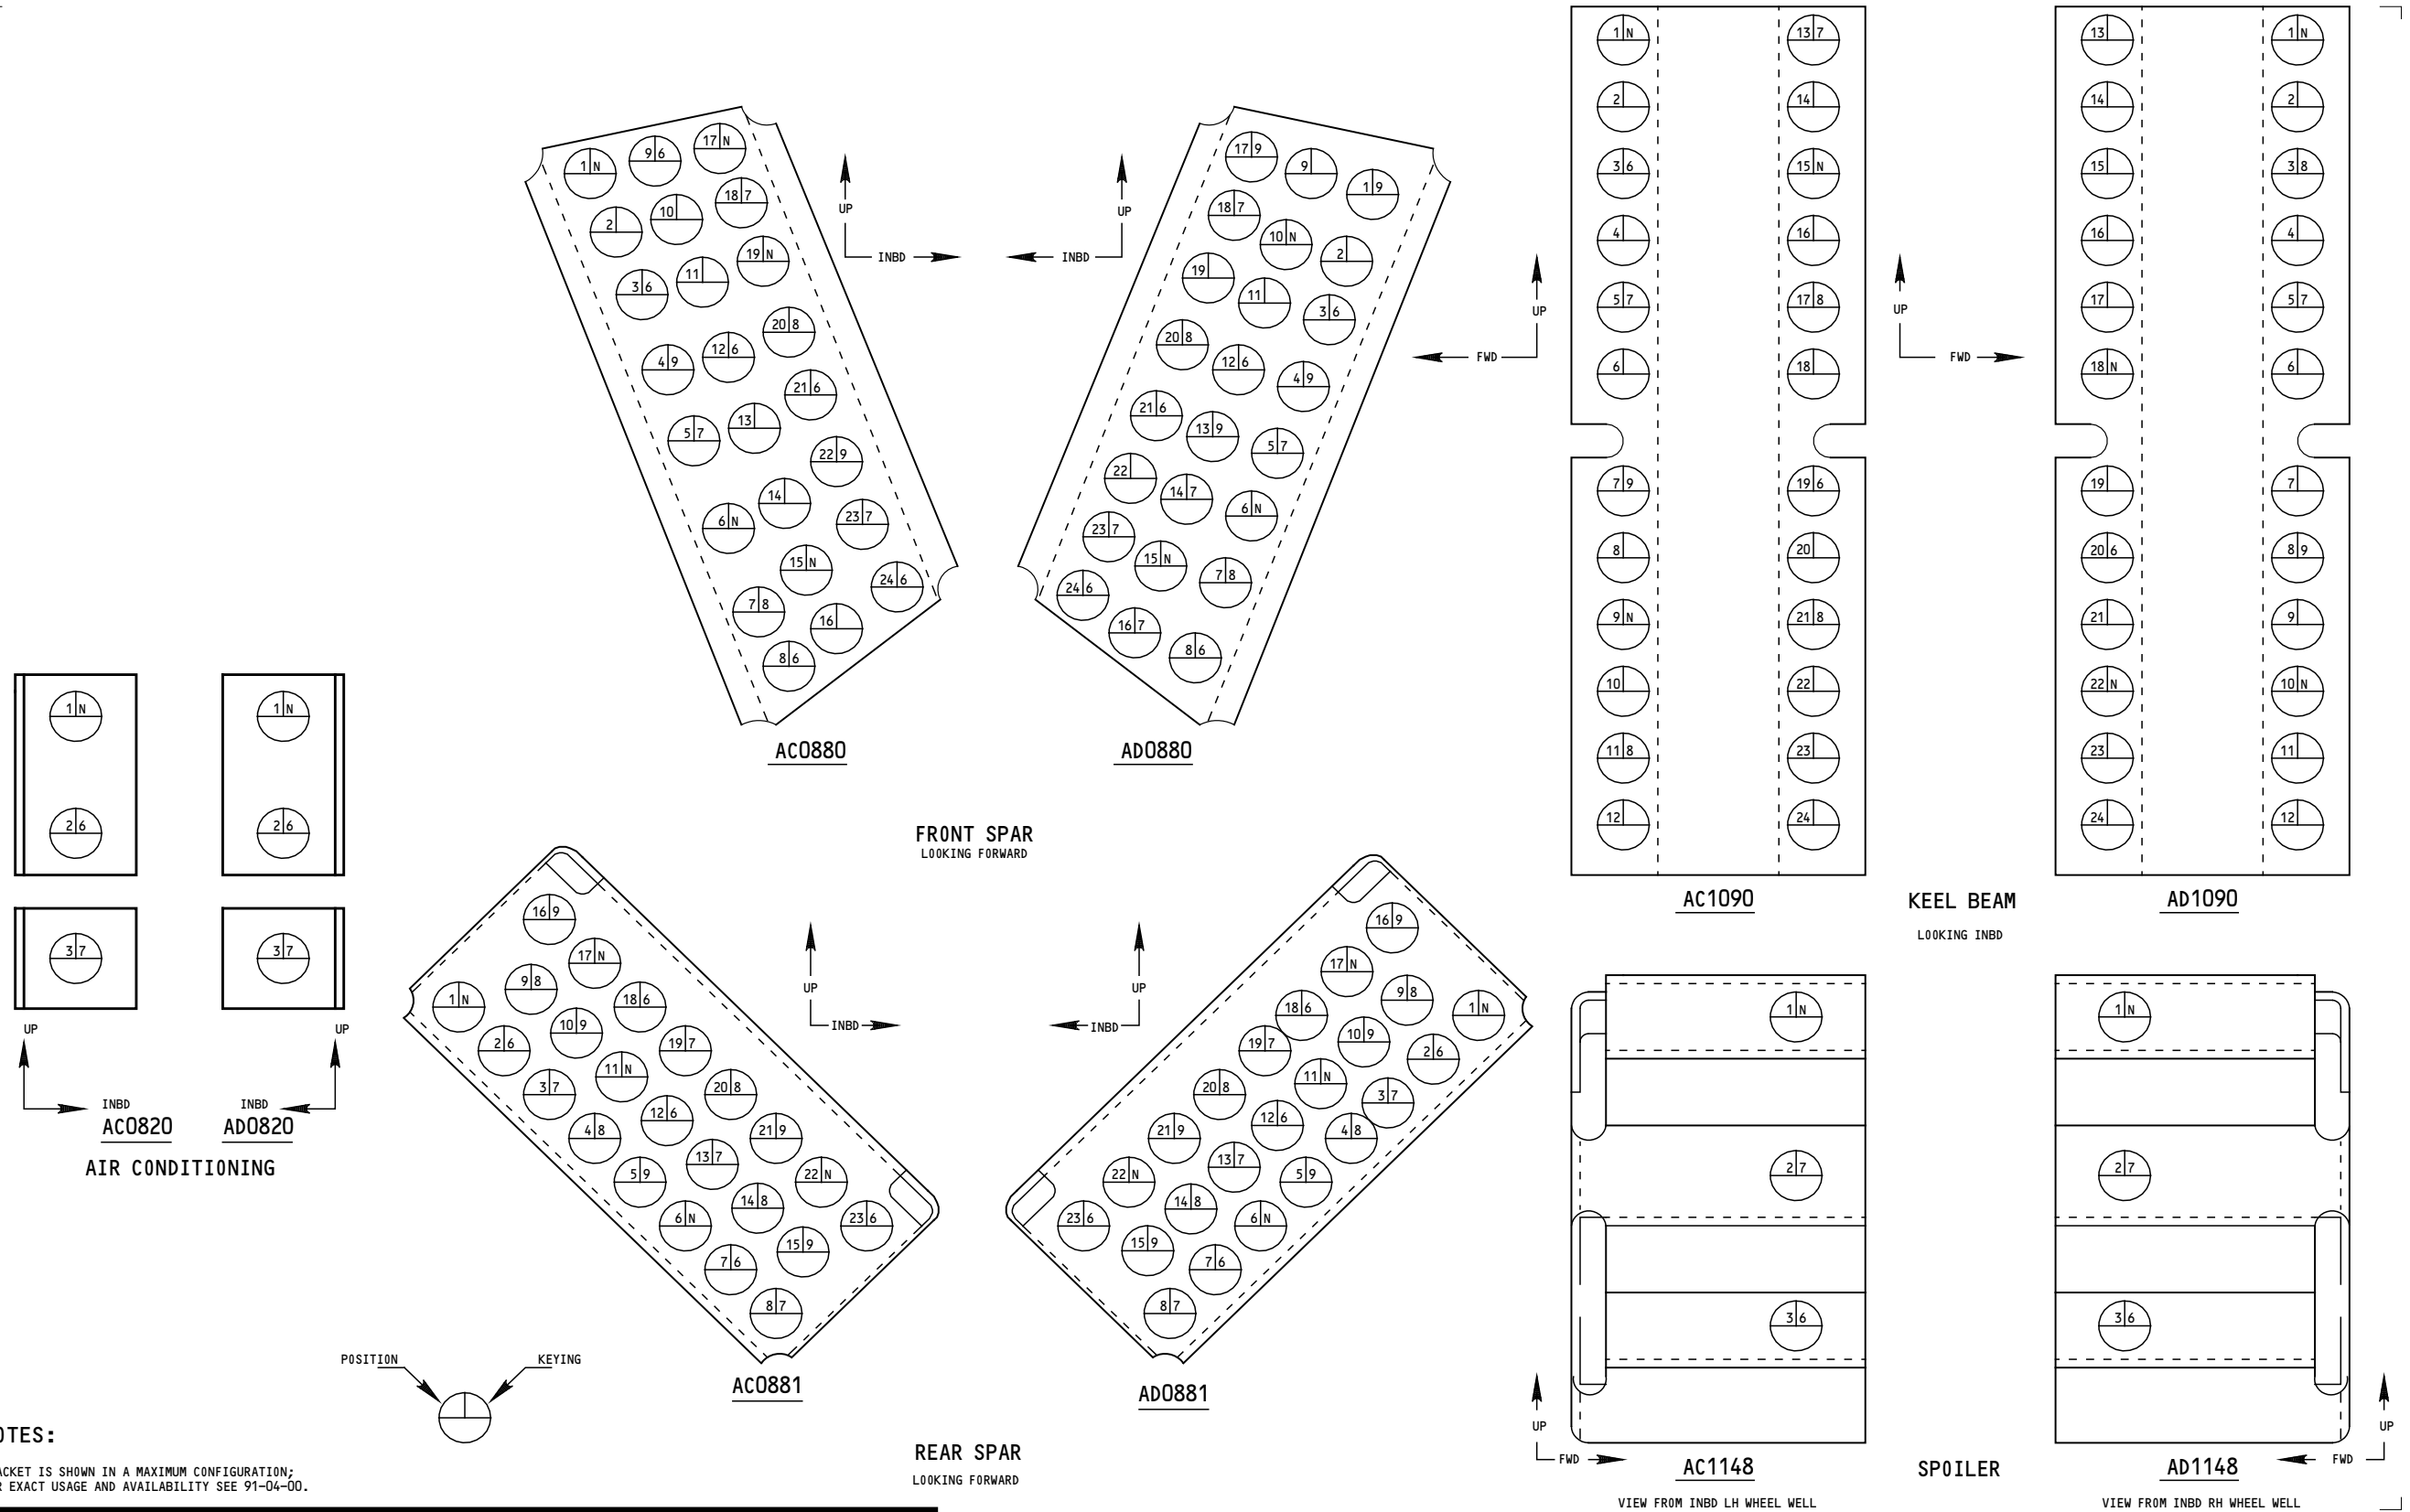

ALL	<b>FRONT &amp; REAR SPAR, SPOILER, A/C AND KEEL BEAM DISC.BRKTS</b>
	D280N032

**91-04-12**


Page 1

Jan 21/2005




**91-04-12**

Page 1



Jan 21/2005

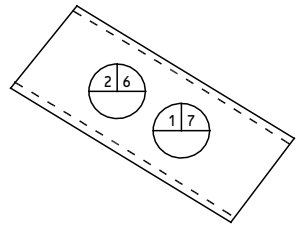


AB1210  
RIGHT CABIN  
LOOKING FORWARD

 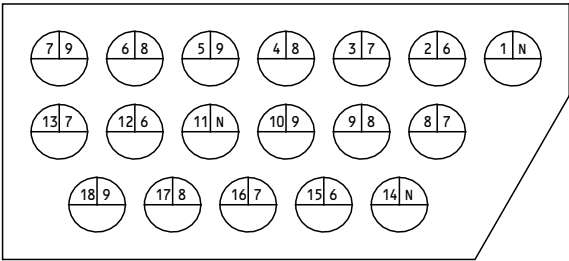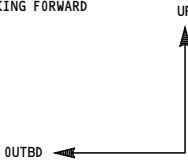


AE0600  
E6 SHELF

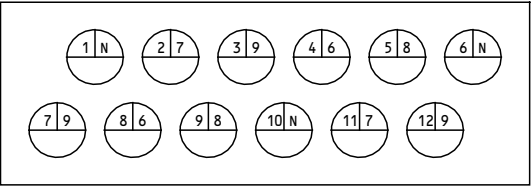 


AE0601  
E6-1 SHELF

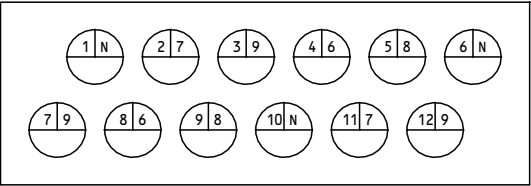


AE0602  
E6-2 SHELF

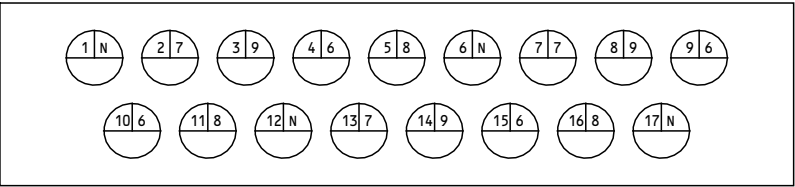

AE0603  
E6-3 SHELF

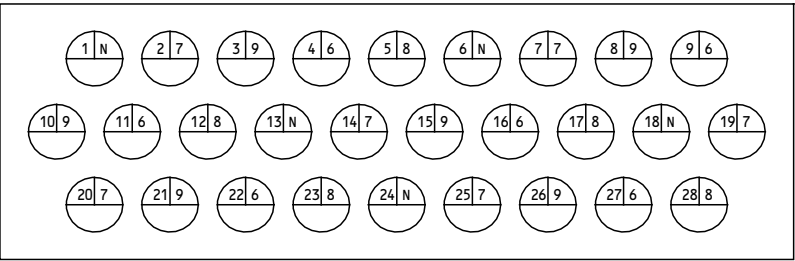

AE0604  
E6-4 SHELF

 

NOTES:  
BRACKET IS SHOWN IN A MAXIMUN CONFIGURATION;  
FOR EXACT USAGE AND AVAILABILITY SEE 91-04-00.

ALL	E6, R AFT CAB.DISCONNECT
	D280N032

91-04-13

Page 1

Jan 21/2005


91-04-13

Page 1


Jan 21/2005





-B  
1

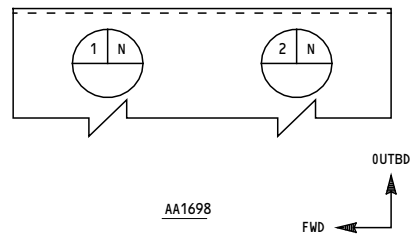


**UPPER AREA  
INTERFACE GALLEY**

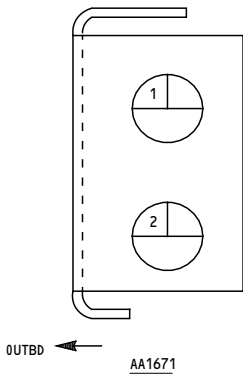


**PASSENGER CABIN OVHD  
LOOKING FORWARD**

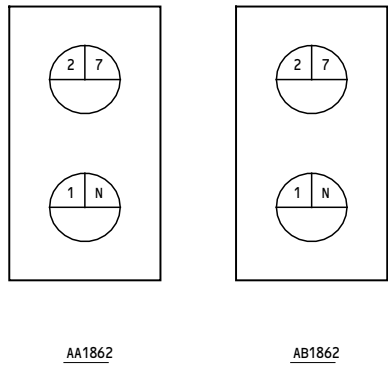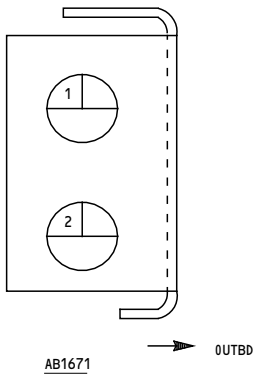

**DISC BKT  
LOOKING OUTBD**

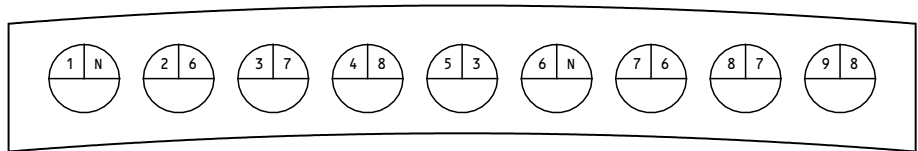


AA1705

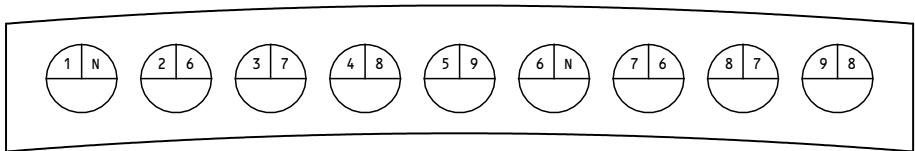


AA1715

**PASSENGER CABIN OVHD  
LOOKING FORWARD**

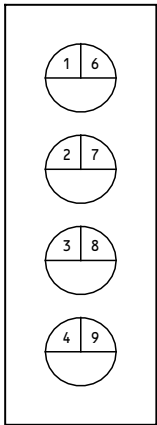


AD1650

**STAB TRIM**

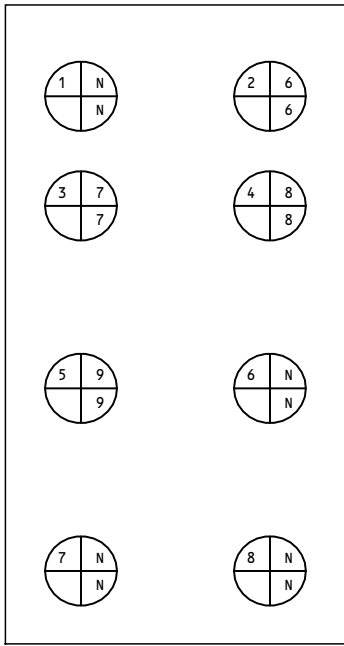

AT1883

**APU FIREWALL  
REAR VIEW**

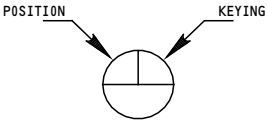

**NOTES:** BRACKET IS SHOWN IN A MAXIMUM CONFIGURATION;  
FOR EXACT USAGE AND AVAILABILITY SEE 91-04-00.

ALL

**PASS.CAB.OVHD, STAB.TRIM,  
UPPER AREA INTRF GAL.,  
APU FW DISC.BRKTS**

D280N032

**91-04-14**

Page 1

Jan 21/2005

**91-04-14**

Page 1


Jan 21/2005



1 EACH MAJOR ROUTING PATHWAY IS ASSIGNED AN ALPHA DESIGNATOR THAT IDENTIFIES ITS APPROXIMATE LOCATION WITHIN THE AIRPLANE. THIS LETTER, IN ADDITION TO A TWO DIGIT NUMERIC PATHWAY NUMBER, LOCATES EACH MAJOR PATHWAY AS DEFINED PICTORIALY ON DIAGRAM 91-01-02.

MATRIX PAGES ARE ARRANGED IN A MANNER SO THAT WIRE BUNDLE AND PATHWAY IDENTIFIERS INTERSECT ON A MATRIX GRID.

EACH SHIPS WIRE BUNDLE IS LISTED NUMERICALLY DOWN THE LEFT-HAND SIDE OF THE MATRIX. EACH MAJOR PATHWAY IS LISTED HORIZONTALLY ACROSS THE TOP OF THE PAGE. A BUNDLE IS INDICATED AS ROUTING WITHIN A PATHWAY WHEN THE SYMBOL "●" APPEARS AT THE INTERSECTION OF THE BUNDLE NUMBER COLUMN AND THE PATHWAY IDENTIFIER COLUMN.

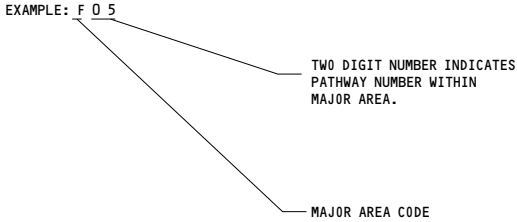

USING THE MATRIX PAGES IN ADDITION TO DIAGRAM 91-01-02, EACH WIRE BUNDLE MAY BE TRACED AS IT ROUTES THRU THE AIRPLANE AS SHOWN BELOW:

WIRE BUNDLE NUMBER	SEP CAT	MAJOR PATHWAY (SEE 91-01-02)																			
		F01	F02	F03	F04	F05	E01	E02	E03	E04	E05	E06	E07	E08	N01	N02	N03	C01	C02	C03	C04
W2018	L1			●		●		●					●	●							

MAJOR AREA CODES

- F=FLIGHT DECK AREA
- E=EQUIPMENT RACK AREAS
- N=NOSE WHEELWELL AREA
- C=CARGO COMPARTMENT AREAS
- L=MAIN WHEELWELL AREAS
- P=PASSENGER AREA
- A=AFT BODY
- W=WING AREA
- S=STRUT AREA
- H=HORIZONTAL STABILIZER
- V=VERTICAL STABILIZER

THE EXAMPLE BUNDLE, W2018 ABOVE, READS:

"L1" SEPARATION CODE, PLUG TO PLUG BUNDLE, THAT ROUTES FROM THE P6 CIRCUIT BREAKER PANEL (PATHWAY F3), THROUGH THE CONTROL CAB FLOOR (PATHWAYS F05 AND E02) TO THE P36 PANEL IN THE E/E BAY. (PATHWAYS E07 AND E08)

ALL

MASTER BUNDLE ELECTRICAL/ELECTRONIC CONFIGURATION

D280N032

91-05-00

Page 1

Jan 21/2005

91-05-00

Page 1

Jan 21/2005



21

001-099	<b>MASTER BUNDLE MATRIX (W2000-W2090)</b>	<b>91-05-01</b>	<b>91-05-01</b>
	D280N032	Page 1 Jan 21/2005	Page 1 Jan 21/2005



-A

1

115-199	<b>MASTER BUNDLE MATRIX (W2000-W2080)</b>  D280N032	<b>91-05-01</b>  Page 2  Jan 21/2005	<b>91-05-01</b>  Page 2  Jan 21/2005
---------	---------------------------------------------------------------	--------------------------------------------------	--------------------------------------------------



16

001-099	<b>MASTER BUNDLE MATRIX (W2134-W2265)</b>	<b>91-05-02</b>	<b>91-05-02</b>
	D280N032	Page 1 Jan 21/2005	Page 1 Jan 21/2005



115-199	<b>MASTER BUNDLE MATRIX (W2134-W2265)</b>  D280N032	<b>91-05-02</b>  Page 2  Jan 21/2005	<b>91-05-02</b>  Page 2  Jan 21/2005
---------	---------------------------------------------------------------	--------------------------------------------------	--------------------------------------------------



-A  
15

001-099	<b>MASTER BUNDLE MATRIX (W2267-W2348)</b>	<b>91-05-03</b>	<b>91-05-03</b>
	D280N032	Page 1 Jan 21/2005	Page 1 Jan 21/2005



$-A$

1

115-199	<b>MASTER BUNDLE MATRIX (W2267-W2345)</b>  D280N032	<b>91-05-03</b>  Page 2  Jan 21/2005	<b>91-05-03</b>  Page 2  Jan 21/2005
---------	---------------------------------------------------------------	--------------------------------------------------	--------------------------------------------------

BOEING PROPRIETARY - Copyright © - Unpublished Work - See title page for details





001-099	<b>MASTER BUNDLE MATRIX (W2350-W2451)</b>	<b>91-05-04</b>	<b>91-05-04</b>
		Page 1	Page 1
	D280N032	Jan 21/2005	Jan 21/2005



115-199	<b>MASTER BUNDLE MATRIX (W2350-W2451)</b>  D280N032	<b>91-05-04</b>  Page 2  Jan 21/2005	<b>91-05-04</b>  Page 2  Jan 21/2005
---------	---------------------------------------------------------------	--------------------------------------------------	--------------------------------------------------



ALL	<b>MASTER BUNDLE MATRIX (W2502-W2520)</b>	<b>91-05-05</b>	<b>91-05-05</b>
	D280N032	Page 1 Jan 21/2005	Page 1 Jan 21/2005



17

001-099	<b>MASTER BUNDLE MATRIX (W2602-W2638)</b>	<b>91-05-06</b>	<b>91-05-06</b>
		Page 1	Page 1
	D280N032	Jan 21/2005	Jan 21/2005



115-199	<b>MASTER BUNDLE MATRIX (W2602-W2638)</b>  D280N032	<b>91-05-06</b>  Page 2  Jan 21/2005	<b>91-05-06</b>  Page 2  Jan 21/2005
---------	---------------------------------------------------------------	--------------------------------------------------	--------------------------------------------------



-A  
24

001-099	<b>MASTER BUNDLE MATRIX (W2642-W2735)</b>	<b>91-05-07</b>	<b>91-05-07</b>
	D280N032	Page 1 Jan 21/2005	Page 1 Jan 21/2005



115-199	<b>MASTER BUNDLE MATRIX (W2642-W2729)</b>  D280N032	<b>91-05-07</b>  Page 2  Jan 21/2005	<b>91-05-07</b>  Page 2  Jan 21/2005
---------	---------------------------------------------------------------	--------------------------------------------------	--------------------------------------------------



21

001-099	<b>MASTER BUNDLE MATRIX (W2800-W3012)</b>	<b>91-05-08</b>	<b>91-05-08</b>
		Page 1	Page 1
	D280N032	Jan 21/2005	Jan 21/2005





115-199	<b>MASTER BUNDLE MATRIX (W2800-W3012)</b>  D280N032	<b>91-05-08</b>  Page 2  Jan 21/2005	<b>91-05-08</b>  Page 2  Jan 21/2005
---------	---------------------------------------------------------------	--------------------------------------------------	--------------------------------------------------



001-099	<b>MASTER BUNDLE MATRIX</b> <b>(W3020-W3304)</b>	<b>91-05-09</b>  Page 1  Jan 21/2005	<b>91-05-09</b>  Page 1  Jan 21/2005
	D280N032		



115-199	<b>MASTER BUNDLE MATRIX (W3020-W3304)</b>  D280N032	<b>91-05-09</b>  Page 2  Jan 21/2005	<b>91-05-09</b>  Page 2  Jan 21/2005
---------	---------------------------------------------------------------	--------------------------------------------------	--------------------------------------------------



001-099	<b>MASTER BUNDLE MATRIX</b> <b>(W3305-W3416)</b>  D280N032	<b>91-05-10</b>  Page 1  Jan 21/2005	<b>91-05-10</b>  Page 1  Jan 21/2005
---------	---------------------------------------------------------------------	--------------------------------------------------	--------------------------------------------------



115-199	<b>MASTER BUNDLE MATRIX (W3305-W3416)</b>  D280N032	<b>91-05-10</b>  Page 2  Jan 21/2005	<b>91-05-10</b>  Page 2  Jan 21/2005
---------	---------------------------------------------------------------	--------------------------------------------------	--------------------------------------------------



001-099	<b>MASTER BUNDLE MATRIX</b> <b>(W3418-W3532)</b>	<b>91-05-11</b>	<b>91-05-11</b>
	D280N032	Page 1 Jan 21/2005	Page 1 Jan 21/2005



115-199	<b>MASTER BUNDLE MATRIX (W3418-W3532)</b>  D280N032	<b>91-05-11</b>  Page 2  Jan 21/2005	<b>91-05-11</b>  Page 2  Jan 21/2005
---------	---------------------------------------------------------------	--------------------------------------------------	--------------------------------------------------



22

001-099	<b>MASTER BUNDLE MATRIX (W3533-W3650)</b>	<b>91-05-12</b>	<b>91-05-12</b>
	D280N032	Page 1 Jan 21/2005	Page 1 Jan 21/2005





115-199	<b>MASTER BUNDLE MATRIX (W3533-W3650)</b>  D280N032	<b>91-05-12</b>  Page 2  Jan 21/2005	<b>91-05-12</b>  Page 2  Jan 21/2005
---------	---------------------------------------------------------------	--------------------------------------------------	--------------------------------------------------



-A

23

001-099	<b>MASTER BUNDLE MATRIX (W3660-W4086)</b>	<b>91-05-13</b>	<b>91-05-13</b>
	D280N032	Page 1 Jan 21/2005	Page 1 Jan 21/2005



115-199	<b>MASTER BUNDLE MATRIX (W3654-W4086)</b>	<b>91-05-13</b>	<b>91-05-13</b>
		Page 2	Page 2
	D280N032	Jan 21/2005	Jan 21/2005



-C

18

001-099	<b>MASTER BUNDLE MATRIX</b> <b>(W4104-W4406)</b>  D280N032	<b>91-05-14</b>  Page 1  Jan 21/2005	<b>91-05-14</b>  Page 1  Jan 21/2005
---------	---------------------------------------------------------------------	--------------------------------------------------	--------------------------------------------------



115-199	<b>MASTER BUNDLE MATRIX (W4104-W4406)</b>  D280N032	<b>91-05-14</b>  Page 2  Jan 21/2005	<b>91-05-14</b>  Page 2  Jan 21/2005
---------	---------------------------------------------------------------	--------------------------------------------------	--------------------------------------------------



20

001-099	<b>MASTER BUNDLE MATRIX (W4420-W4910)</b>	<b>91-05-15</b>	<b>91-05-15</b>
	D280N032	Page 1 Jan 21/2005	Page 1 Jan 21/2005



115-199	<b>MASTER BUNDLE MATRIX (W4420-W4910)</b>  D280N032	<b>91-05-15</b>  Page 2  Jan 21/2005	<b>91-05-15</b>  Page 2  Jan 21/2005
---------	---------------------------------------------------------------	--------------------------------------------------	--------------------------------------------------



001-099	<b>MASTER BUNDLE MATRIX (W4912-W5022)</b>  D280N032	<b>91-05-16</b>  Page 1  Jan 21/2005	<b>91-05-16</b>  Page 1  Jan 21/2005
---------	---------------------------------------------------------------	--------------------------------------------------	--------------------------------------------------





115-199	<b>MASTER BUNDLE MATRIX (W4912-W5022)</b>  D280N032	<b>91-05-16</b>  Page 2  Jan 21/2005	<b>91-05-16</b>  Page 2  Jan 21/2005
---------	---------------------------------------------------------------	--------------------------------------------------	--------------------------------------------------



001-099	<b>MASTER BUNDLE MATRIX (W5100-W5214)</b>	<b>91-05-17</b>	<b>91-05-17</b>
		Page 1	Page 1
	D280N032	Jan 21/2005	Jan 21/2005



115-199	<b>MASTER BUNDLE MATRIX (W5023-W5214)</b>	<b>91-05-17</b>	<b>91-05-17</b>
	D280N032	Page 2 Jan 21/2005	Page 2 Jan 21/2005



ALL	<b>MASTER BUNDLE MATRIX</b> <b>(W5500-W5616)</b>	<b>91-05-18</b>  Page 1  Jan 21/2005	<b>91-05-18</b>  Page 1  Jan 21/2005
	D280N032		