

91-04-00

**DISCONNECT BRACKET
LIST**

91-04-00
DISCONNECT BRACKET LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
EFFECTIVE PAGES			AD1600	1	Dec 18/2007	AP0100	1	Dec 18/2007
	1	Oct 09/2008	AE0100	1	Dec 18/2007	AP0300	1	Dec 18/2007
	2	BLANK	R AE0200	1	Oct 09/2008	AS1000	1	Dec 18/2007
AA0200	1	Dec 18/2007	R	2	Oct 09/2008	AS1100	1	Dec 18/2007
AA0300	1	Dec 18/2007	O	3	Oct 09/2008	AS2000	1	Dec 18/2007
AA0400	1	Dec 18/2007	O	4	Oct 09/2008	AS2100	1	Dec 18/2007
AA0700	1	Dec 18/2007	AE0300	1	Dec 18/2007	AT1800	1	Dec 18/2007
AA1200	1	Dec 18/2007		2	Dec 18/2007	AW1100	1	Dec 18/2007
AA1600	1	Dec 18/2007		3	Dec 18/2007		2	Dec 18/2007
AA1700	1	Dec 18/2007		4	Dec 18/2007	AW1200	1	Dec 18/2007
AA1800	1	Dec 18/2007	AE0400	1	Dec 18/2007	AW1300	1	Dec 18/2007
AB0200	1	Dec 18/2007		2	Dec 18/2007	AW2100	1	Dec 18/2007
AB0300	1	Dec 18/2007		3	Dec 18/2007	R	2	Oct 09/2008
AB0400	1	Dec 18/2007	AE0500	1	Dec 18/2007	AW2200	1	Dec 18/2007
AB0700	1	Dec 18/2007		2	Dec 18/2007	AW2300	1	Dec 18/2007
AB1200	1	Dec 18/2007	AE0600	1	Dec 18/2007	AW2400	1	Dec 18/2007
AB1600	1	Dec 18/2007	R	2	Oct 09/2008		2	BLANK
AB1800	1	Dec 18/2007		3	Dec 18/2007			
AC0200	1	Dec 18/2007	AP0000	1	Dec 18/2007			
AC0300	1	Dec 18/2007		2	Dec 18/2007			
AC0800	1	Dec 18/2007		3	Dec 18/2007			
AC1000	1	Dec 18/2007		4	Dec 18/2007			
AC1100	1	Dec 18/2007		5	Dec 18/2007			
AD0400	1	Dec 18/2007		6	Dec 18/2007			
AD0500	1	Dec 18/2007	R	7	Oct 09/2008			
AD0800	1	Dec 18/2007		8	Dec 18/2007			
AD1000	1	Dec 18/2007		9	Dec 18/2007			
AD1100	1	Dec 18/2007		10	Dec 18/2007			

A = Added, R = Revised, D = Deleted, O = Overflow

DISCONNECT BRACKET LIST

D280N032

EFFECTIVE PAGES

Page 1
Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AA0260								ALL
	01	D41578J	W2306	D41578P	W2386			ALL

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AA0200

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AA0360	DISC BKT-LAV A DISC					004	0360/290/L024	ALL
	01	D00042	W3572					ALL
	02	D41548J	W3702	D41548P	W3572			ALL
	03	D03456	W3576					115-199

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AA0300

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AA0409	DISC BKT-FWD LOWER CEILING DISC BRACKET					009	0409/300/000	ALL
	01	D41120J	W3572	D41120P	W0126			ALL
	02			D01229	W3541			ALL
	02	D01231	W3702					ALL
	03	D40454J	W3632	D40454P	W2066			ALL
	04	D40494J	W3672	D40494P	W0130			ALL
	05	D40456J	W3634	D40456P	W2066			ALL
	06	D40356J	W3534	D40356P	W2070			ALL
	09	D40354J	W3532	D40354P	W2070			ALL

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AA0400

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AA0712								001-099
	01	D05930	W3702					001-099
	02	D05932	W3702					001-099

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AA0700

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AA1210	DISC BKT-LEFT AFT CABIN DISC					009	1210/298/L019	ALL

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AA1200

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AA1671	DISC BKT-LEFT PASSENGER CABIN OVERHEAD					002	1651/299/L010	ALL
	01	D40193J	W3107	D40193P	W2667			ALL
	02	D40661J	W2723	D40661P	W2825			ALL
AA1698	DISC BKT-UPPER AREA INTERF GAL					002	1698/298/	ALL
	01	D01940	W3536					ALL
	02	D01938	W3538					ALL

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AA1600

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AA1705	DISC BKT-LEFT PASSENGER CABIN OVERHEAD					009	1705/298/	ALL
	02	D40475J	W2631	D40475P	W3103			ALL
	03	D40471J	W2605	D40471P	W3101			ALL
	04	D40142J	W4204	D40142P	W3100			ALL
	06	D40473J	W2621	D40473P	W3121			ALL
	07	D40487J	W2611	D40487P	W3111			ALL
	08	D40489J	W2617	D40489P	W3113			ALL
	09			D40258P	W4018			001-099
	09	D40258J	W2818					001-099
	09	D40258J	W4018	D40258P	W2818			115-199
	09	D40258J	W4018					115-199
	09			D40258P	W2818			115-199
AA1715	DISC BKT-LEFT PASSENGER CABIN OVERHEAD					009	1715/298/	ALL
	01	D40697J	W2803	D40697P	W2605			ALL
	02	D40491J	W2801	D40491P	W2605			ALL
	03	D40120J	W2812	D40120P	W4204			ALL
	04	D40957J	W2805	D40957P	W2631			ALL
	05	D40497J	W2821	D40497P	W2621			ALL
	06	D40164J	W2814	D40164P	W4224			ALL
	07	D40699J	W2813	D40699P	W2611			ALL
	08	D40481J	W2811	D40481P	W2611			ALL
	09	D40959J	W2815	D40959P	W2617			ALL

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AA1700

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AA1862	DISC BKT-					002	1863/245/L035	ALL
	01	D41112J	W2812	D41112P	W3200			ALL
	02	D42044J	W2812	D42044P	W3204			ALL

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AA1800

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AB0254								ALL
	01	D41576J	W2316	D41576P	W2388			ALL

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AB0200

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AB0308								ALL
	01	D41106J	W2070	D41106P	W0502			ALL
AB0317	DISC BKT-SERVICE PANEL OVERHEAD GALLEY					000	0317/291/R009	ALL
	01	D01650	W3650					ALL

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AB0300

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AB0430								ALL
	01	D41161J	W2361	D41161P	W2363			ALL
	02	D41163J	W2361	D41163P	W2363			ALL
	03	D41165J	W2361	D41165P	W2363			ALL
	04	D41167J	W2361	D41167P	W2363			ALL

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AB0400

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AB0713								001-099
	01	D06032	W3802					001-099
	02	D06034	W3802					001-099

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AB0700

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AB1210	DISC BKT-RIGHT AFT CABIN DISC					009	1210/298/R014	ALL
	01	D40178J	W2602	D40178P	W2632			ALL
	02	D40176J	W2602	D40176P	W2632			ALL

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AB1200

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AB1671	DISC BKT-RIGHT PASSENGER CABIN OVERHEAD					002	1651/299/R010	ALL
	01	D40197J	W3117	D40197P	W2669			ALL
	02	D40663J	W2725	D40663P	W2827			ALL

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AB1600

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AB1862	DISC BKT-					002	1863/245/R035	ALL
	01	D41114J	W2814	D41114P	W3202			ALL
	02	D42098J	W2814	D42098P	W3206			ALL

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AB1800

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AC0204	DISC BKT-P10					000	/ /	ALL
	1	D07688	W4028					ALL
	02	D04452	W2355					ALL
	03	D04454	W2357					ALL
	4	D07710	W4108					ALL
AC0210	DISC BKT-SPEED BRAKE DISCONNECT					002	220/195/L014	ALL
	01	D00871	W2441					ALL
	02	D00875	W2443					ALL
	03	D01827	W2615					ALL
	04	D01825	W2613					ALL
AC0215	DISC BKT-SPEED BRAKE DISCONNECT					002	0215/195/L014	ALL
	01	D00877	W2451					ALL
	02	D00881	W2447					ALL
AC0220	DISC BKT-SPEED BRAKE DISCONNECT					002	210/195/L014	ALL
	01	D00873	W2449					ALL
	02	D00879	W2445					ALL

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AC0200

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AC0393	DISC BKT-NOSE WHEEL WELL DISC					003	0393/160/L020	ALL
	01	D40488J	W2052	D40488P	W3054			ALL
	02	D40162J	W2150	D40162P	W3050			ALL
	03	D40388J	W2152	D40388P	W3052			ALL

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AC0300

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AC0820	DISC BKT-AIR CONDITIONING SYSTEM,LEFT					003	0829/226/L070	ALL
	01	D40628J	W4006	D40628P	W2706			115-199
	02	D40630J	W4006	D40630P	W2706			115-199
	03	D40632J	W4006	D40632P	W2706			115-199
AC0880	DISC BKT-LEFT FRONT SPAR DISC					024	880/120/L045	ALL
	02	D41448J	W4028	D41448P	W3322			ALL
	03	D40478J	W4210	D40478P	W2400			ALL
	04	D40268J	W4210	D40268P	W3322			ALL
	05	D41208J	W4006	D41208P	W3328			ALL
	06	D40042J	W4210	D40042P	W3328			ALL
	07	D40288J	W4300	D40288P	W3314			ALL
	08	D41354J	W4230	D41354P	W3380			ALL
	09	D41100J	W4006	D41100P	W2406			ALL
	12	D41394J	W4206	D41394P	W3342			ALL
	15	D40006J	W4210	D40006P	W3302			ALL
	17	D40072J	W4006	D40072P	W2406			ALL
	18	D40026J	W4228	D40026P	W3320			ALL
	19	D40302J	W4204	D40302P	W3346			ALL
	20	D40018J	W4232	D40018P	W3304			ALL
	21	D40076J	W4208	D40076P	W3342			ALL
	22	D40002J	W4228	D40002P	W3300			ALL
	23	D40014J	W4228	D40014P	W3300			ALL
	24	D40074J	W4006	D40074P	W2406			ALL
AC0881	DISC BKT-LEFT REAR SPAR DISC					023	881/ /L045	ALL

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AC0800

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AC1090	DISC BKT-LEFT KEEL BEAM					024	1090/200/	ALL
	01	D41812J	W2646	D41812P	W2412			ALL
	03	D42189J	W2646	D42189P	W2412			ALL
	05	D40964J	W4206	D40964P	W2412			ALL
	07	D41406J	W4210	D41406P	W2416			ALL
	09	D40350J	W4210	D40350P	W2416			ALL
	11	D40348J	W4202	D40348P	W2414			ALL
	13	D40352J	W4226	D40352P	W2418			ALL
	15	D40366J	W4210	D40366P	W2418			ALL
	19	D40346J	W4202	D40346P	W2414			ALL
	21	D40342J	W4208	D40342P	W2410			ALL

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AC1000

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AC1148	DISC BKT-L. SPOILER DISC L. WHEEL WELL					003	1147/180/L068	ALL
	01	D40577J	W3305	D40577P	W2449			ALL
	02	D40573J	W3301	D40573P	W2441			ALL
	03	D40581J	W3309	D40581P	W2451			ALL

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AC1100

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AD0440								ALL
	01	D41171J	W2365	D41171P	W2367			ALL
	02	D41173J	W2365	D41173P	W2367			ALL
	03	D41177J	W2365	D41177P	W2367			ALL
	04	D41179J	W2365	D41179P	W2367			ALL

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AD0400

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AD0530	DISCONNECT BRACKET					000	530/ /	115-199
		D41640J	W4106	D41640P	W2728			001-099

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AD0500

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AD0820	DISC BKT-AIR CONDITIONING SYSTEM,RIGHT					003	0829/226/L070	ALL
	01	D41638P	W2716	D41638J	W4106			115-199
	01	D41638J	W4106	D41638P	W2716			115-199
	02	D41640P	W2716	D41640J	W4106			115-199
	02	D41640J	W4106	D41640P	W2716			115-199
	03	D41642P	W2716	D41642J	W4106			115-199
	03	D41642J	W4106	D41642P	W2716			115-199
AD0880	DISC BKT-RIGHT FRONT SPAR DISC					024	880/120/R045	ALL
	01	D40068J	W4106	D40068P	W2506			115-199
	02	D41458J	W4108	D41458P	W3422			ALL
	03	D41358J	W4234	D41358P	W3480			ALL
	04	D42076J	W4212	D42076P	W3446			ALL
	05	D40032J	W4220	D40032P	W3402			ALL
	06	D40334J	W4216	D40334P	W3460			ALL
	06	D40334P	W3460	D40334J	W4216			ALL
	07	D40332J	W4216	D40332P	W3458			ALL
	08	D40004J	W4236	D40004P	W3400			ALL
	10	D40402J	W4218	D40402P	W3424			ALL
	12	D40274J	W4236	D40274P	W3420			ALL
	13	D41210J	W4106	D41210P	W3428			ALL
	14	D40280J	W4220	D40280P	W3422			ALL
	15	D40016J	W4236	D40016P	W3400			ALL
	16	D40070J	W4106	D40070P	W2506			ALL
	17	D41116J	W4220	D41116P	W2502			ALL
	18	D41198J	W4218	D41198P	W3424			ALL
	20	D40020J	W4238	D40020P	W3404			ALL
	21	D40046J	W4220	D40046P	W3428			ALL
	22	D40068J	W4106	D40068P	W2506			001-099
	23	D40290J	W4302	D40290P	W3414			ALL
	24	D41102J	W4106	D41102P	W2506			ALL
AD0881	DISC BKT-RIGHT REAR SPAR DISC					023	881/ /R045	ALL

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AD0800

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AD1090	DISC BKT-RIGHT KEEL BEAM					024	1090/200/	ALL
	01	D40364J	W4236	D40364P	W2514			ALL
	03	D40370J	W4220	D40370P	W2516			ALL
	05	D40368J	W4220	D40368P	W2516			ALL
	8	D40358J	W4216					115-199
	08	D40358J	W4216	D40358P	W2510			001-099
	08			D40358P	W2510			115-199
	10	D40360J	W4216	D40360P	W2510			ALL
	18	D43010J	W2644	D43010P	W2512			ALL
	20	D41818J	W2644	D41818P	W2512			ALL
	22	D40362J	W4212	D40362P	W2512			ALL

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AD1000

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AD1148	DISC BKT-R. SPOILER DISC R. WHEEL WELL					003	1147/190/R068	ALL
	01	D40579J	W3405	D40579P	W2449			ALL
	02	D40591J	W3409	D40591P	W2451			ALL
	03	D40575J	W3401	D40575P	W2441			ALL

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AD1100

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AD1650								ALL
	01	D41225J	W2815	D41225P	W2615			ALL
	02	D41337J	W2805	D41337P	W2615			ALL
	03	D41227J	W2813	D41227P	W2613			ALL
	04	D41335J	W2821	D41335P	W2613			ALL

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AD1600

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AE0101	DISC BKT-E1-1 SHELF DISC					015	0430/188/R021	ALL
	02	D41440J	W1310	D41440P	W2398			003-099
	06	D41600J	W1310	D41600P	W2386			ALL
	08	D41602J	W1310	D41602P	W2390			ALL
	10	D41604J	W1310	D41604P	W2390			ALL
	12	D41756J	W1310	D41756P	W2244			ALL
	14	D41872J	W1310	D41872P	W2072			ALL
AE0102	DISC BKT-E1-2 SHELF DISC					046	0430/178/R021	ALL
	06	D41594J	W1320	D41594P	W2384			ALL
	08	D41592J	W1320	D41592P	W2384			ALL
	10	D41596J	W1320	D41596P	W2388			ALL
	12	D41914J	W1320	D41914P	W2352			ALL
	14	D41874J	W1320	D41874P	W2064			ALL

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AE0100

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AE0201	DISC BKT-E2-1 SHELF DISC					043	0430/178/R021	ALL
	01	D41595J	W1171	D41595P	W4479			ALL
	02	D41391J	W1171	D41391P	W4475			ALL
	03	D43003J	W1171	D43003P	W4471			ALL
	04	D41191J	W1171	D41191P	W2365			ALL
	06	D41073J	W1171	D41073P	W2321			ALL
	07	D41075J	W1171	D41075P	W2321			ALL
	08	D41085J	W1171	D41085P	W4441			ALL
	09	D41715J	W1171	D41715P	W2357			115-199
	10	D41089J	W1171	D41089P	W4471			ALL
	11	D41601J	W1171	D41601P	W4481			ALL
	12	D43023J	W1171	D43023P	W4471			115-199
	13	D42065J	W1171	D42065P	W2251			ALL
	14	D42135J	W1171	D42135P	W2271			ALL
	15	D42013J	W1171	D42013P	W2241			ALL
	16	D41701J	W1171	D41701P	W2355			ALL
	17	D41910J	W1171	D41910P	W2350			ALL
	18	D41193J	W1171	D41193P	W2365			ALL
	19	D41195J	W1171	D41195P	W2365			ALL
	20	D41185J	W1171	D41185P	W2361			ALL
	21	D41091J	W1171	D41091P	W4471			ALL
	22	D41745J	W1171	D41745P	W4481			ALL
	23	D42175J	W1171	D42175P	W4471			001-099
	23	D21001J	W1171	D21001P	W2379			002
	23	D41810J	W1171	D41810P	W4106			115-199
	24	D42175J	W1171	D42175P	W4471			115-199
	25	D41081J	W1171	D41081P	W2331			ALL
	26	D42183J	W1171	D42183P	W2329			ALL
	27	D41831J	W1171	D41831P	W4063			115-199
	27	D42173J	W1171	D42173P	W4473			115-199
	28	D42011J	W1171	D42011P	W2241			ALL
	29	D42230J	W1171	D42230P	W4228			ALL
	30	D41691J	W1171	D41691P	W2605			ALL
	31	D41606J	W1171	D41606P	W4202			ALL
	32	D41429J	W1171	D41429P	W4477			ALL
	33	D41197J	W1171	D41197P	W2365			ALL
	34	D41199J	W1171	D41199P	W4607			ALL
	35	D41905J	W1171	D41905P	W4471			ALL
	36	D41061J	W1171	D41061P	W2309			ALL
	37	D41093J	W1171	D41093P	W4471			ALL
	38	D41339J	W1171	D41339P	W4473			ALL

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AE0200

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AE0201	DISC BKT-E2-1 SHELF DISC (continued)					043	0430/178/R021	ALL
	39	D41238J	W1171	D41238P	W2309			002
	40	D41563J	W1171	D41563P	W4479			ALL
	41	D41817J	W1171	D41817P	W4479			ALL
	42	D42129J	W1171	D42129P	W2269			ALL
	44	D41181J	W1171	D41181P	W2361			ALL
	45	D41187J	W1171	D41187P	W2361			ALL
	46	D41189J	W1171	D41189P	W2361			ALL
AE0202	DISC BKT-E2-2 SHELF DISC					043	0430/178/R021	ALL
	01	D42133J	W1173	D42133P	W2271			ALL
	02	D41347J	W1173	D41347P	W4473			ALL
	03	D41079J	W1173	D41079P	W2323			ALL
	04	D41328J	W1173	D41328P	W2354			ALL
	05			D41083P	W2333			115-199
	05	D45019J	W1173	D45019P	W4081			115-199
	06	D41083J	W1173	D41083P	W2333			001-099
	06	D41083J	W1173					115-199
	07	D41565J	W1173	D41565P	W4479			ALL
	08	D41345J	W1173	D41345P	W4473			ALL
	09	D42123J	W1173	D42123P	W2263			ALL
	10	D41431J	W1173	D41431P	W4477			ALL
	11	D41881J	W1173	D41881P	W4473			ALL
	12	D41743J	W1173	D41743P	W4479			ALL
	13	D41393J	W1173	D41393P	W4475			ALL
	14	D42035J	W1173	D42035P	W2243			ALL
	16	D42143J	W1173	D42143P	W2277			ALL
	17	D42087J	W1173	D42087P	W2253			ALL
	18	D40881J	W1173	D40881P	W4443			ALL
	20	D43021J	W1173	D43021P	W4473			010-099
	20			D43021P	W4473			115-199
	21	D41200J	W1173	D41200P	W4481			002
	22	D41063J	W1173	D41063P	W2309			ALL
	23	D42107J	W1173	D42107P	W2257			ALL
	24	D43007J	W1173	D43007P	W4473			001-099
	25			D22001P	W2381			002
	26	D41907J	W1173	D41907P	W4473			ALL
	27	D41624J	W1173	D41624P	W4208			ALL
	28	D41095J	W1173	D41095P	W4471			ALL
	29	D41703J	W1173	D41703P	W2357			ALL
	30	D41821J	W1173	D41821P	W4481			ALL

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AE0200

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AE0202	DISC BKT-E2-2 SHELF DISC (continued)					043	0430/178/R021	ALL
	31	D42085J	W1173	D42085P	W2253			ALL
	32	D41077J	W1173	D41077P	W2323			ALL
	33	D41603J	W1173	D41603P	W4481			ALL
	36	D42127J	W1173	D42127P	W2267			ALL
	37	D41829J	W1173	D41829P	W4061			115-199
	38	D42221J	W1173	D42221P	W4471			ALL
	39	D42233J	W1173	D42233P	W4473			ALL
	41	D41679J	W1173	D41679P	W4481			ALL
	42	D41693J	W1173	D41693P	W2611			ALL
AE0203	DISC BKT-E2-3 SHELF DISC					043	0430/178/R021	ALL
	01	D42137J	W1175	D42137P	W2273			ALL
	02	D23003J	W1175	D23003P	W2381			002
	03	D41433J	W1175	D41433P	W4477			ALL
	04	D45017J	W1175	D45017P	W4079			115-199
	05	D41705J	W1175	D41705P	W2359			ALL
	06	D41695J	W1175	D41695P	W2621			ALL
	07	D41815J	W1175	D41815P	W4475			ALL
	08	D42049J	W1175	D42049P	W2245			ALL
	09	D41087J	W1175	D41087P	W4441			ALL
	10	D40674J	W1175	D40674P	W2350			ALL
	11	D42021J	W1175	D42021P	W2241			ALL
	12	D41823J	W1175	D41823P	W4481			ALL
	13	D41567J	W1175	D41567P	W4479			ALL
	14	D41711J	W1175	D41711P	W2355			ALL
	15	D23005J	W1175	D23005P	W2379			002
	16	D42109J	W1175	D42109P	W2259			ALL
	17	D42167J	W1175	D42167P	W2247			ALL
	17	D42167P	W2247	D42167J	W1175			ALL
	18	D41884J	W1175	D41884P	W2358			ALL
	19	D42121J	W1175	D42121P	W2261			ALL
	20	D41605J	W1175	D41605P	W4481			ALL
	21	D41097J	W1175	D41097P	W4471			ALL
	22	D41890J	W1175	D41890P	W2362			ALL
	23	D41395J	W1175	D41395P	W4475			ALL
	24	D40883J	W1175	D40883P	W4443			ALL
	25	D41888J	W1175	D41888P	W2370			ALL
	26	D42083J	W1175	D42083P	W2253			ALL
	27	D42063J	W1175	D42063P	W2251			ALL
	28	D41784J	W1175	D41784P	W4238			ALL

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AE0200

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AE0203	DISC BKT-E2-3 SHELF DISC (continued)					043	0430/178/R021	ALL
	29	D41782J	W1175	D41782P	W4232			ALL
	31	D41643J	W1175	D41643P	W4471			ALL
	33	D41349J	W1175	D41349P	W4473			ALL
	34	D42125J	W1175	D42125P	W2265			ALL
	35	D42139J	W1175	D42139P	W2275			ALL
	36	D42105J	W1175	D42105P	W2255			ALL
	38	D41622J	W1175	D41622P	W4226			ALL
	43	D41819J	W1175	D41819P	W4479			ALL
AE0204	DISC BKT-E2-4 SHELF DISC					029	0440/178/R021	ALL
	02	D41351J	W1177	D41351P	W4473			ALL
	03	D42225J	W1177	D42225P	W2250			001-099
	03			D42225P	W2250			ALL
	03	D42225J	W1179	D42225P	W2250			115-199
	05	D41001J	W1177	D41001P	W4473			ALL
	06	D42051J	W1177	D42051P	W2245			ALL
	08	D42205J	W1177	D42205P	W2225			ALL
	09	D42015J	W1177	D42015P	W2241			ALL
	10	D41569J	W1177	D41569P	W4479			ALL
	12	D41916J	W1177	D41916P	W2354			001-099
	12			D41916P	W2354			ALL
	12	D41916J	W1179	D41916P	W2354			115-199
	13	D42203J	W1177	D42203P	W2223			ALL
	14	D42089J	W1177	D42089P	W2253			ALL
	16	D41397J	W1177	D41397P	W4475			ALL
	17	D42229J	W1177	D42229P	W2250			001-099
	17			D42229P	W2250			ALL
	17	D42229J	W1179	D42229P	W2250			115-199
	18	D41758J	W1177	D41758P	W2250			001-099
	18			D41758P	W2250			ALL
	18	D41758J	W1179	D41758P	W2250			115-199
	19	D42227J	W1177	D42227P	W2250			001-099
	19			D42227P	W2250			ALL
	19	D42227J	W1179	D42227P	W2250			115-199
	20	D41099J	W1177	D41099P	W4471			ALL
	21	D42201J	W1177	D42201P	W2221			ALL

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AE0200

Page 4 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AE0301	DISC BKT-E3-1 SHELF DISC					043	0440/188/L021	ALL
	02	D41964J	W1265	D41964P	W2358			ALL
	03	D41761J	W1265	D41761P	W2441			ALL
	04	D41783J	W1265	D41783P	W4425			ALL
	05	D41775J	W1265	D41775P	W4421			ALL
	06	D41353J	W1265	D41353P	W4473			ALL
	08	D41301J	W1265	D41301P	W4471			ALL
	09	D42026J	W1265	D42026P	W4228			ALL
	10	D41841J	W1265	D41841P	W2605			ALL
	11	D41795J	W1265	D41795P	W2631			ALL
	12	D41437J	W1265	D41437P	W4477			ALL
	14	D41765J	W1265	D41765P	W2451			ALL
	17	D41399J	W1265	D41399P	W4475			ALL
	19	D40676J	W1265	D40676P	W2350			ALL
	20	D41838J	W1265	D41838P	W2156			ALL
	22	D41763J	W1265	D41763P	W2449			ALL
	23	D41779J	W1265	D41779P	W4423			ALL
	25	D41709J	W1265	D41709P	W2355			ALL
	26	D41787J	W1265	D41787P	W4427			ALL
	27	D41789J	W1265	D41789P	W2647			ALL
	29	D41902J	W1265	D41902P	W2360			ALL
AE0302	DISC BKT-E3-2 SHELF DISC					043	0440/178/L021	ALL
	01			D43683P	W2229			001-009
	02	D43005J	W1423	D43005P	W4473			ALL
	03	D42059J	W1423	D42059P	W2665			001-099
	04	D42057J	W1423	D42057P	W2669			001-099
	5			D43009P	W2241			001-099
	05			D43009J	W1423			001-099
	09	D45001J	W1423	D45001P	W4515			001-099
	10	D41203J	W1423	D41203P	W4607			ALL
	11	D40700J	W1423	D40700P	W2354			001-099
	12	D41801J	W1423	D41801P	W4455			ALL
	14	D41755J	W1423	D41755P	W4457			ALL
	15	D43685J	W1423					001
	16	D42151J	W1423	D42151P	W2725			001-099
	17	D40666P	W4106	D40666J	W1332			001-099
	17	D40666J	W1332	D40666P	W4106			001-099
	18	D40774P	W4006	D40774J	W1332			001-099
	18	D40774J	W1332	D40774P	W4006			001-099
	19	D43011P	W2358	D43011J	W1423			001-099

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AE0300

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AE0302	DISC BKT-E3-2 SHELF DISC (continued)					043	0440/178/L021	ALL
	19	D43011J	W1423	D43011P	W2358			001-099
	20	D42149J	W1423	D42149P	W2723			001-099
	23	D41401J	W1423	D41401P	W4475			ALL
	25	D42147J	W1423	D42147P	W4055			ALL
	26	D42091J	W1423	D42091P	W2253			ALL
	28	D41527J	W1423	D41527P	W2077			ALL
	29	D45005J	W1423	D45005P	W4517			001-099
	30	D43015P	W2354	D43015J	W1423			001-099
	30	D43015J	W1423	D43015P	W2354			001-099
	31	D42045J	W1423	D42045P	W2345			001-099
	33	D43001J	W1423	D43001P	W4471			001-099
	34	D41749J	W1423	D41749P	W2661			001-099
	38	D41741J	W1423	D41741P	W2353			ALL
	40	D41303J	W1423	D41303P	W4471			ALL
	41	D41355J	W1423	D41355P	W4473			ALL
	42			D01685	W4467			ALL
	43	D42039J	W1423	D42039P	W2243			115-199
AE0303	DISC BKT-E3-3 SHELF DISC					040	0440/168/L021	ALL
	02	D41523J	W1433	D41523P	W2079			115-199
	03	D42145J	W1433	D42145P	W4053			ALL
	04	D43309J	W1433	D43309P	W4477			010-099
	05	D41309J	W1433	D41309P	W4471			ALL
	06	D41525J	W1433	D41525P	W2075			ALL
	08	D41443J	W1433	D41443P	W4477			ALL
	13	D41307J	W1433	D41307P	W4471			ALL
	14	D41521J	W1433	D41521P	W2651			ALL
	15	D41753J	W1433	D41753P	W4453			ALL
	16	D42071J	W1433	D42071P	W2251			ALL
	17	D41851J	W1433	D41851P	W4451			ALL
	18	D40678J	W1433	D40678P	W2350			ALL
	21	D40656P	W4006	D40656J	W1330			001-099
	21	D40656J	W1330	D40656P	W4006			001-099
	22	D40670P	W4106	D40670J	W1330			001-099
	22	D40670J	W1330	D40670P	W4106			001-099
	23	D40844P	W4106	D40844J	W1330			001-099
	23	D40844J	W1330	D40844P	W4106			001-099
	24	D40846P	W4006	D40846J	W1330			001-099
	24	D40846J	W1330	D40846P	W4006			001-099
	25	D40255J	W1433	D40255P	W2067			001-099

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AE0300

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AE0303	DISC BKT-E3-3 SHELF DISC (continued)					040	0440/168/L021	ALL
	26	D41519J	W1433	D41519P	W2299			ALL
	27	D41113J	W1433	D41113P	W2733			001-099
	28	D41115J	W1433	D41115P	W2735			001-099
	30	D42019J	W1433	D42019P	W2241			ALL
	32	D43315J	W1433	D43315P	W4473			010-099
	33			D02126	W4467			ALL
	36	D41361J	W1433	D41361P	W4473			ALL
	40	D41403J	W1433	D41403P	W4475			ALL
	41	D41145J	W1433	D41145P	W0447			001-099
	42	D40927J	W1433	D40927P	W2359			115-199
	43	D41956J	W1433	D41956P	W4210			ALL
AE0304	DISC BKT-E3-4 SHELF DISC					029	0440/158/L021	ALL
	01	D42222J	W1280	D42222P	W4026			001-099
	01	D42226J	W1280	D42226P	W4218			115-199
	02	D41270J	W1280	D41270P	W4026			001-099
	02	D42224J	W1280	D42224P	W4206			115-199
	03	D42016J	W1280	D42016P	W4210			ALL
	04	D42018J	W1280	D42018P	W4220			ALL
	05	D41445J	W1280	D41445P	W4477			ALL
	06	D41634J	W1280	D41634P	W4212			ALL
	07	D41618J	W1280	D41618P	W4204			001-099
	07	D41311J	W1280	D41311P	W4471			115-199
	08	D41363J	W1280	D41363P	W4473			ALL
	09	D41876J	W1280	D41876P	W2070			001-099
	09	D41610J	W1280	D41610P	W4202			115-199
	10	D41610J	W1280	D41610P	W4202			001-099
	10	D41876J	W1280	D41876P	W2070			115-199
	11	D42169J	W1280	D42169P	W2247			ALL
	12	D42012J	W1280	D42012P	W4228			ALL
	13	D41276J	W1280	D41276P	W4022			ALL
	13	D42220J	W1280	D42220P	W4206			115-199
	14	D42226J	W1280	D42226P	W4026			001-099
	14	D42222J	W1280	D42222P	W4218			115-199
	15	D42014J	W1280	D42014P	W4236			001-099
	15	D42060J	W1280	D42060P	W4216			115-199
	16	D41706J	W1280	D41706P	W3582			ALL
	17	D41928J	W1280	D41928P	W4104			ALL
	18	D41930J	W1280	D41930P	W2602			ALL
	19	D41646J	W1280	D41646P	W2052			ALL

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AE0300

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AE0304	DISC BKT-E3-4 SHELF DISC (continued)					029	0440/158/L021	ALL
	20	D41636J	W1280	D41636P	W4206			ALL
	21	D40996J	W1280	D40996P	W2066			ALL
	22	D41272J	W1280	D41272P	W4020			ALL
	23	D40680J	W1280	D40680P	W2350			ALL
	24	D40702J	W1280	D40702P	W2354			ALL
	25	D41708J	W1280	D41708P	W3682			ALL
	26	D40924J	W1280	D40924P	W2072			ALL
	27	D41650J	W1280	D41650P	W2152			ALL
	28	D42060J	W1280	D42060P	W4216			001-099
	28	D42014J	W1280	D42014P	W4236			115-199
	29	D41311J	W1280	D41311P	W4471			001-099
	29	D41618J	W1280	D41618P	W4204			115-199
	30	D41614J	W1280	D41614P	W4216			115-199
	31	D41620J	W1280	D41620P	W4218			ALL
	33	D41614J	W1280	D41614P	W4216			001-099
	36	D42132J	W1280	D42132P	W4210			001-099
	37	D42134J	W1280	D42134P	W4220			001-099
	38	D42138J	W1280	D42138P	W4210			001-099
	39	D42220J	W1280	D42220P	W4024			001-099
	40	D41268J	W1280	D41268P	W4024			001-099
	41	D42224J	W1280	D42224P	W4024			001-099

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AE0300

Page 4 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AE0401	DISC BKT-E4-1 SHELF DISC					047	0440/188/R021	ALL
	02	D40682J	W1165	D40682P	W2350			ALL
	03	D41767J	W1165	D41767P	W2443			ALL
	07	D41769J	W1165	D41769P	W2445			ALL
	08	D41773J	W1165	D41773P	W4421			ALL
	09	D41707J	W1165	D41707P	W2357			ALL
	10	D41781J	W1165	D41781P	W4425			ALL
	11	D41771J	W1165	D41771P	W2447			ALL
	13	D41862J	W1165	D41862P	W2072			ALL
	14	D41918J	W1165	D41918P	W2354			ALL
	20	D40015J	W1165	D40015P	W4471			ALL
	21	D41777J	W1165	D41777P	W4423			ALL
	22	D41785J	W1165	D41785P	W4427			ALL
	23	D41367J	W1165	D41367P	W4473			ALL
	24	D41843J	W1165	D41843P	W2611			ALL
	25	D41793J	W1165	D41793P	W2617			ALL
	26	D42020J	W1165	D42020P	W4220			001-099
	26	D42020J	W1165					ALL
	26	D42020J	W1165	D42020P	W4232			115-199
	27	D41791J	W1165	D41791P	W2649			ALL
AE0402	DISC BKT-E4-2 SHELF DISC					043	0440/178/R021	ALL
	01	D41867J	W1275	D41867P	W4473			ALL
	02	D41794J	W1275	D41794P	W4212			ALL
	03	D41792J	W1275	D41792P	W4206			ALL
	04	D41844J	W1275	D41844P	W2078			001-099
	04	D41764J	W1275	D41764P	W4230			115-199
	05	D41069J	W1275	D41069P	W2311			ALL
	06	D41840J	W1275	D41840P	W2064			ALL
	07	D41317J	W1275	D41317P	W4471			ALL
	08	D41698J	W1275	D41698P	W4202			ALL
	09	D41664J	W1275	D41664P	W4006			ALL
	10	D41776J	W1275	D41776P	W4236			ALL
	11	D41736J	W1275	D41736P	W4220			ALL
	12	D41451J	W1275	D41451P	W4477			ALL
	13	D40904J	W1275	D40904P	W2250			ALL
	14	D41774J	W1275	D41774P	W4234			001-099
	15	D42093J	W1275	D42093P	W2253			ALL
	16	D41738J	W1275	D41738P	W4228			ALL
	17	D42084J	W1275	D42084P	W4006			ALL
	18	D41772J	W1275	D41772P	W4232			ALL

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AE0400

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AE0402	DISC BKT-E4-2 SHELF DISC (continued)					043	0440/178/R021	ALL
	19	D40602J	W1275	D40602P	W2080			ALL
	20	D41788J	W1275	D41788P	W4238			001-099
	20	D41844J	W1275	D41844P	W2078			115-199
	21	D41660J	W1275	D41660P	W2650			ALL
	22	D41058J	W1275	D41058P	W2070			ALL
	23	D41764J	W1275	D41764P	W4230			001-099
	24	D42185J	W1275	D42185P	W4477			ALL
	25	D42073J	W1275	D42073P	W2251			ALL
	26	D41632J	W1275	D41632P	W4218			ALL
	27	D41720J	W1275	D41720P	W4216			ALL
	28	D40214J	W1275	D40214P	W2612			ALL
	29	D41409J	W1275	D41409P	W4475			ALL
	30	D41788J	W1275	D41788P	W4238			115-199
	31	D41842J	W1275	D41842P	W2072			ALL
	32	D41369J	W1275	D41369P	W4473			ALL
	33	D42041J	W1275	D42041P	W2243			ALL
	34	D41065J	W1275	D41065P	W2315			ALL
	35	D40684J	W1275	D40684P	W2350			ALL
	36	D42086J	W1275	D42086P	W4106			ALL
	37	D41071J	W1275	D41071P	W2313			ALL
	38	D41879J	W1275	D41879P	W4471			ALL
	39	D42023J	W1275	D42023P	W2241			ALL
	40	D41628J	W1275	D41628P	W4204			ALL
	41	D41734J	W1275	D41734P	W4210			ALL
	42	D40704J	W1275	D40704P	W2354			ALL
	45	D40892J	W1275	D40892P	W2244			ALL
	46	D41774J	W1275	D41774P	W4234			115-199
	47	D40584J	W1275	D40584P	W2066			ALL
AE0403	DISC BKT-E4-3 SHELF DISC					021	0440/168/R021	ALL
	01	D41457J	W1163	D41457P	W4477			001-099
	02	D41689J	W1163	D41689P	W4063			115-199
	04	D41700J	W1163	D41700P	W3672			ALL
	05	D41561J	W1163	D41561P	W2653			ALL
	06	D41551J	W1163	D41551P	W3525			ALL
	07	D41453J	W1163	D41453P	W4477			ALL
	08	D42043J	W1163	D42043P	W2667			001-099
	08	D41220J	W1163	D41220P	W2013			115-199
	09	D42033J	W1163	D42033P	W2663			001-099
	10	D41531J	W1163	D41531P	W2071			ALL

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AE0400

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AE0403	DISC BKT-E4-3 SHELF DISC (continued)					021	0440/168/R021	ALL
	11	D41721J	W1163	D41721P	W4071			ALL
	12	D41319J	W1163	D41319P	W4471			ALL
	14	D41371J	W1163	D41371P	W4473			ALL
	15	D40734J	W1163	D40734P	W2358			ALL
	16	D41559J	W1163	D41559P	W2341			ALL
	17	D41555J	W1163	D41555P	W2337			ALL
	18	D40672J	W1163	D40672P	W2354			ALL
	20	D41533J	W1163	D41533P	W2073			ALL
	21			D00849	W1163			ALL
	22	D41731J	W1163	D41731P	W4073			ALL
	23	D41541J	W1163	D41541P	W2351			ALL
	24	D41687J	W1163	D41687P	W4061			115-199
	25	D41513J	W1163	D41513P	W2843			ALL
	26	D41557J	W1163	D41557P	W2339			115-199
	27	D41553J	W1163	D41553P	W2335			ALL
	29	D41648J	W1163	D41648P	W2052			ALL
	30	D41820J	W1163	D41820P	W3576			001-099
	31	D42031J	W1163	D42031P	W2343			001-099
	32	D40686J	W1163	D40686P	W2350			ALL
AE0404	DISC BKT-E4-4 SHELF DISC					023	0440/158/R021	ALL
	01	D41455J	W4477	D41455P	W1161			ALL
	02	D41719J	W2659	D41719P	W1161			001-099
	03	D41547J	W4057	D41547P	W1161			ALL
	04	D40688J	W2350	D40688P	W1161			001-099
	05	D41549J	W4059	D41549P	W1161			ALL
	06	D41529J	W2069	D41529P	W1161			001-099
	07	D41702J	W3576	D41702P	W1161			ALL
	08	D41515P	W1161	D41515J	W2843			001-099
	08	D41515J	W2843	D41515P	W1161			ALL
	08	D41515P	W1161					115-199

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AE0400

Page 3 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AE0501	DISC BKT-E5-1 SHELF DISC					031	0560/188/R025	ALL
	01	D41652J	W1282	D41652P	W4202			ALL
	02	D40029J	W1282	D40029P	W2443			ALL
	03	D41459J	W1282	D41459P	W4477			ALL
	04	D41898J	W1282	D41898P	W4300			ALL
	05	D41377J	W1282	D41377P	W4473			ALL
	06	D42118J	W1282	D42118P	W4504			001-099
	07	D41696J	W1282	D41696P	W4208			ALL
	08	D41924J	W1282	D41924P	W2634			ALL
	10	D41882J	W1282	D41882P	W2350			ALL
	11	D41894J	W1282	D41894P	W2250			ALL
	12	D41752J	W1282	D41752P	W2240			ALL
	13	D42228J	W1282	D42228P	W4220			001-099
	13	D42228J	W1282					ALL
	13	D42228J	W1282	D42228P	W4232			115-199
	14	D41630J	W1282	D41630P	W4204			ALL
	15	D42069J	W1282	D42069P	W2251			ALL
	16	D41325J	W1282	D41325P	W4471			ALL
	17	D42187J	W1282	D42187P	W4471			ALL
	20	D41742J	W1282	D41742P	W4500			ALL
	21	D41654J	W1282	D41654P	W4212			ALL
	22	D41864J	W1282	D41864P	W2066			ALL
	23	D41912J	W1282	D41912P	W2650			001-099
	25	D42120J	W1282	D42120P	W4018			001-099
	27	D41920J	W1282	D41920P	W2250			001-099
	28	D42368J	W1282	D42368P	W2080			001-099
AE0502	DISC BKT-E5-2 SHELF DISC					019	0560/178/R025	ALL
	02	D40894J	W1284	D40894P	W2244			ALL
	03	D41379J	W1284	D41379P	W4473			ALL
	04	D42510J	W1284	D42510P	W2644			001-099
	05	D42512J	W1284	D42512P	W2644			001-099
	06	D40182J	W1284	D40182P	W2602			ALL
	07	D40190J	W1284	D40190P	W4006			001-099
	09	D40600J	W1284	D40600P	W2078			ALL
	10	D41730J	W1284	D41730P	W4216			ALL
	12	D40492J	W1284	D40492P	W4502			ALL
	13	D42095J	W1284	D42095P	W2253			ALL
	14	D42412J	W1284	D42412P	W2357			001-099
	15	D42514J	W1284	D42514P	W2646			001-099
	16	D41327J	W1284	D41327P	W4471			ALL

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AE0500

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AE0502	DISC BKT-E5-2 SHELF DISC (continued)					019	0560/178/R025	ALL
	17	D42516J	W1284	D42516P	W2646			001-099
	18	D40219J	W1284	D40219P	W2241			001-099
	20	D40007J	W1284	D40007P	W4204			ALL
	21	D42414J	W1284	D42414P	W2355			001-099
	23	D40398J	W1284	D40398P	W4302			ALL
	24	D41694J	W1284	D41694P	W4208			ALL
	25	D42518J	W1284	D42518P	W2642			001-099
	26	D40598J	W1284	D40598P	W2070			ALL
	27	D40908J	W1284	D40908P	W2250			ALL
	28	D41461J	W1284	D41461P	W4477			ALL
	29	D42520J	W1284	D42520P	W2648			001-099
	30	D40710J	W1284	D40710P	W2354			ALL
	31	D41883J	W1284	D41883P	W4473			ALL
AE0503	DISC BKT-E5-3 SHELF DISC					025	0560/168/R025	ALL
	01	D41868J	W1286	D41868P	W2080			ALL
	03	D41656J	W1286	D41656P	W4206			ALL
	04	D41966J	W1286	D41966P	W2358			ALL
	05	D41463J	W1286	D41463P	W4477			ALL
	06	D41900J	W1286	D41900P	W4504			ALL
	07	D41750J	W1286	D41750P	W4502			ALL
	08	D41892J	W1286	D41892P	W2362			ALL
	09	D41744J	W1286	D41744P	W4500			ALL
	10	D41828J	W1286	D41828P	W4218			ALL
	11	D42053J	W1286	D42053P	W2247			ALL
	13	D41896J	W1286	D41896P	W2250			ALL
	14	D40590J	W1286	D40590P	W2070			ALL
	15	D41419J	W1286	D41419P	W4475			ALL
	16	D41381J	W1286	D41381P	W4473			ALL
	17	D41329J	W1286	D41329P	W4471			ALL
	18	D41658J	W1286	D41658P	W4216			ALL
	19	D41644J	W1286	D41644P	W4018			115-199

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AE0500

Page 2 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AE0600	DISC BKT-E6 SHELF DISC					000	/ /	ALL
	01	D42238J	W1024	D42238P	W2358			001-099
	01	D42212J	W1024	D42212P	W2354			115-199
	02	D42178J	W1024	D42178P	W1026			115-199
	03	D41680J	W1024	D41680P	W2650			001-099
	04	D40170J	W1024	D40170P	W2700			115-199
	05	D42032J	W1024	D42032P	W2662			115-199
	06	D40170J	W1024	D40170P	W2700			001-099
	07	D41062J	W1024	D41062P	W2626			001-099
	07	D42216J	W1024	D42216P	W2350			115-199
	08	D42050J	W1024	D42050P	W1026			ALL
	09	D41845J	W1024	D41845P	W2706			115-199
	10	D41062J	W1024	D41062P	W2626			115-199
	11	D42178J	W1024	D42178P	W1026			001-099
	11	D42238J	W1024	D42238P	W2358			115-199
	12	D41688J	W1024	D41688P	W2654			115-199
	13	D41688J	W1024	D41688P	W2654			001-099
	13	D41932J	W1024	D41932P	W2662			115-199
	14	D41932J	W1024	D41932P	W2662			001-099
	14	D41855J	W1024	D41855P	W2716			115-199
	15	D41770J	W1024	D41770P	W2658			ALL
	16	D42038J	W1024	D42038P	W2632			001-099
	16	D41680J	W1024	D41680P	W2650			115-199
	18	D42038J	W1024	D42038P	W2632			115-199
AE0601	DISC BKT-E6-1 SHELF DISC					012	E006-01/ /	ALL
	01	D41681J	W1003	D41681P	W2229			001-099
	01	D42001J	W1011	D42001P	W2241			115-199
	02	D42005J	W1011	D42005P	W2227			115-199
	03	D41917J	W1011	D41917P	W2661			115-199
	04	D41995J	W1011	D41995P	W2723			115-199
	05	D42163J	W1001	D42163P	W2727			001-099
	06	D42005J	W1001	D42005P	W2227			001-099
	06	D41997J	W1013	D41997P	W2725			115-199
	07	D41993J	W1003	D41993P	W2729			001-099
	07			D41993P	W2729			ALL
	07	D41993J	W1013	D41993P	W2729			115-199
	09	D45007J	W1003	D45007P	W4517			001-099
	12	D45003J	W1001	D45003P	W4515			001-099
	13	D42007J	W1013	D42007P	W2229			115-199
	14	D41962J	W1011	D41962P	W2358			115-199

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AE0600

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AE0601	DISC BKT-E6-1 SHELF DISC (continued)					012	E006-01/ /	ALL
	15	D41999J	W1011	D41999P	W2727			115-199
	16	D41685J	W1011	D41685P	W4063			115-199
	18	D41908J	W1013	D41908P	W2354			115-199
	21	D42003J	W1013	D42003P	W2253			115-199
	22	D41683P	W4061	D41683J	W1013			115-199
	22	D41683J	W1013	D41683P	W4061			115-199
AE0602	DISC BKT-E6-2 SHELF DISC					012	/ /	ALL
	01	D42218J	W1020	D42218P	W2358			001-099
	01	D42182J	W1030	D42182P	W2706			115-199
	02	D41676J	W1020	D41676P	W2654			001-099
	05	D42188J	W1030	D42188P	W2706			115-199
	06	D42186J	W1030	D42186P	W2716			115-199
	07	D41662J	W1020	D41662P	W2650			001-099
	07	D42190J	W1030	D42190P	W2716			115-199
	08	D42208J	W1020	D42208P	W2350			001-099
	08	D42196J	W1030	D42196P	W2716			115-199
	09	D41678J	W1020	D41678P	W2654			001-099
AE0603	DISC BKT-E6-3 SHELF DISC					017	/ /	ALL
		D41747J	W1017	D41747P	W2345			115-199
		D41805J	W1017	D41805P	W2669			115-199
		D41813J	W1017	D41813P	W2665			115-199
		D41830J	W1017					115-199
		D42207J	W1017					115-199
				D42211P	W4063			115-199
	01	D41797J	W1017	D41797P	W2343			115-199
	02	D42211J	W1017					115-199
	03	D41807J	W1017	D41807P	W2667			115-199
	04			D41830P	W2354			115-199
	10	D41974J	W1017	D41974P	W2350			115-199
	11	D41799J	W1017	D41799P	W2663			115-199
	13			D42207P	W4061			115-199
AE0604	DISC BKT-E6-4 SHELF DISC					028	/ /	115-199
				D41833P	W2241			115-199
	02	D41678J	W1032	D41678P	W2654			115-199
	03	D42184J	W1032	D42184P	W2716			115-199
	05	D42180J	W1032	D42180P	W2706			115-199
	06	D43012J	W1032	D43012P	W2644			115-199

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AE0600

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AE0604	DISC BKT-E6-4 SHELF DISC (continued)					028	/ /	115-199
	07	D40464J	W1032	D40464P	W4210			115-199
	08	D41662J	W1032	D41662P	W2650			115-199
	09	D41686J	W1032	D41686P	W4210			115-199
	11	D40480J	W1032	D40480P	W4210			115-199
	12	D41672J	W1032	D41672P	W2646			115-199
	13	D41833J	W1032					115-199
	14	D41674J	W1032	D41674P	W2648			115-199
	15	D41670J	W1032	D41670P	W2644			115-199
	16	D43014J	W1032	D43014P	W2646			115-199
	17	D41668J	W1032	D41668P	W2642			115-199
	18	D40518J	W1032	D40518P	W4220			115-199
	19	D42028J	W1032	D42028P	W4220			115-199
	20	D42208J	W1032	D42208P	W2350			115-199
	22	D42218J	W1032	D42218P	W2358			115-199
	24	D42214J	W1032	D42214P	W2354			115-199
	28	D41676J	W1032	D41676P	W2654			115-199

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AE0600

Page 3 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AP0001	DISC BKT-CAPT. INSTRUMENT PANEL DISC-L					016	0223/205/L040	ALL
	06	D40633J	W2245	D40633P	W2061			ALL
	07	D40077J	W2243	D40077P	W0001			ALL
	08	D40629J	W2241	D40629P	W2041			ALL
	09	D40758J	W2368	D40758P	W0001			ALL
	10	D42047J	W2245	D42047P	W0001			ALL
	11	D40754J	W2364	D40754P	W0001			ALL
	12	D40039J	W2241	D40039P	W0001			ALL
	14	D41846J	W2064	D41846P	W0001			ALL
	15	D40523J	W2241	D40523P	W0001			ALL
	16	D40031J	W2241	D40031P	W0001			ALL
AP0003	DISC BKT-F/O INSTRUMENT PANEL DISC-L					016	0223/205/R040	ALL
	03	D41170J	W2066	D41170P	W0003			ALL
	04	D41834J	W2066	D41834P	W0001			ALL
	07	D41172J	W2070	D41172P	W0003			ALL
	08	D40631J	W2253	D40631P	W2051			ALL
	09	D42165J	W2247	D42165P	W0003			ALL
	10	D40073J	W2253	D40073P	W0003			ALL
	11	D40756J	W2366	D40756P	W0003			ALL
	12	D40035J	W2251	D40035P	W0003			ALL
	13	D40099J	W2253	D40099P	W0003			ALL
	14	D41878J	W2078	D41878P	W0001			ALL
	15	D41174J	W2078	D41174P	W0003			ALL
	16	D41041J	W2253	D41041P	W0003			ALL
	19	D42055J	W2251	D42055P	W0003			ALL
AP0005	DISC BKT-PILOTS OVERHEAD PANEL DISC					008	0278/275/L008	ALL
	14	D40798J	W2064	D40798P	W0126			ALL
	16	D40800J	W2066	D40800P	W0126			ALL
	17	D40806J	W2078	D40806P	W0124			001-099
	17	D40806J	W2078					ALL
	17	D40806J	W2078	D40806P	W0132			115-199
	31	D40802J	W2070	D40802P	W0128			ALL
	33	D40804P	W0130	D40804J	W2072			001-099
	33	D40804J	W2072	D40804P	W0130			ALL
	33	D40804P	W0130					115-199
	34	D40808J	W2156	D40808P	W0128			001-099
	34	D40808J	W2156					ALL
	34	D40808J	W2156	D40808P	W0134			115-199

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AP0000

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AP0006	DISC BKT-MAIN PWR DISTRIBUTION PNL DISC					022	0297/220/L050	ALL
	01	D40296J	W0074	D40296P	W2078			ALL
	02	D40298J	W0074	D40298P	W2010			ALL
	03	D40870J	W0060	D40870P	W2260			001-002, 115-199
	03	D41904J	W0060	D41904P	W2156			003-099
	04	D40240J	W0062	D40240P	W2012			ALL
	05	D40246J	W0060	D40246P	W2250			ALL
	06	D40248J	W0064	D40248P	W2014			ALL
	07	D41904J	W0060	D41904P	W2156			001-002, 115-199
	07	D40870J	W0060	D40870P	W2260			003-099
	08	D40284J	W0072	D40284P	W2240			ALL
	09	D40286J	W0074	D40286P	W2244			ALL
	10	D40866J	W0062	D40866P	W2256			ALL
	11	D40244J	W0068	D40244P	W2016			ALL
	12	D40868J	W0064	D40868P	W2258			ALL
	13	D40282J	W0074	D40282P	W2034			ALL
	14	D40300J	W0074	D40300P	W2370			ALL
	15	D40242J	W0062	D40242P	W2240			ALL
	16	D40294J	W0064	D40294P	W2244			115-199
	17	D40168J	W0064	D40168P	W2700			ALL
	18	D40250J	W0064	D40250P	W2244			ALL
	19	D42204J	W0064	D42204P	W2014			ALL
	21	D42206J	W0074	D42206P	W2012			ALL
AP0010	DISC BKT-QUADRANT STAND					000	/ /	ALL
	01	D40901J	W1115	D40901P	W4228			ALL
	02	D40501J	W1115	D40501P	W2355			ALL
	03	D40503J	W1115	D40503P	W2359			ALL
	04	D40495J	W1115	D40495P	W2357			ALL
	05	D40784J	W1115	D40784P	W4220			001-099
	05	D40784J	W1115					ALL
	05	D40784J	W1115	D40784P	W4238			115-199
	06	D40782J	W1115	D40782P	W4220			001-099
	06	D40782J	W1115					ALL
	06	D40782J	W1115	D40782P	W4232			115-199
	08	D40899J	W1115	D40899P	W4236			ALL
	09	D02146	W1115					ALL
	10	D02148	W1115					ALL
	11	D40893J	W1115					ALL
	12	D40897J	W1115					ALL
	13	D40895J	W1115					ALL

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AP0000

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AP0011	DISC BKT-CIRCUIT BREAKER PANEL					027	AP0011/ /	001-099
AP0011	DISC BKT-CIRCUIT BREAKER PANEL					023	AP0011/ /	115-199
	01	D40614J	W0126	D40614P	W2352			ALL
	02	D40616J	W0124	D40616P	W2352			ALL
	03	D40610J	W0124	D40610P	W2350			ALL
	04	D40612J	W0126	D40612P	W2350			ALL
	05	D40622J	W0124	D40622P	W2358			001-099
	05			D40622P	W2358			ALL
	05	D40622J	W0132	D40622P	W2358			115-199
	06	D40838J	W0128	D40838P	W2358			001-099
	06			D40838P	W2358			ALL
	06	D40838J	W0134	D40838P	W2358			115-199
	08	D41970J	W0128	D41970P	W2356			ALL
	09	D41972J	W0128	D41972P	W2360			001-099
	09			D41972P	W2360			ALL
	09	D41972J	W0134	D41972P	W2360			115-199
	10	D40620J	W0130	D40620P	W2356			ALL
	11	D40626J	W0128	D40626P	W2362			001-099
	11			D40626P	W2362			ALL
	11	D40626J	W0136	D40626P	W2362			115-199
	12	D40624J	W0124	D40624P	W2360			001-099
	12			D40624P	W2360			ALL
	12	D40624J	W0132	D40624P	W2360			115-199
	13	D40618J	W0128	D40618P	W2354			ALL
	14	D40824J	W0130	D40824P	W2354			ALL
	16	D40748J	W0124	D40748P	W2364			ALL
	18	D40752J	W0124	D40752P	W2368			001-099
	18			D40752P	W2368			ALL
	18	D40752J	W0132	D40752P	W2368			115-199
	21	D40750J	W0130	D40750P	W2366			ALL
AP0026	DISC BKT-MASTER DIMMER AND TEST UNIT					000	/ /	ALL
	01			D41004P	W2070			ALL
	02			D41006P	W2070			ALL
	03			D41000P	W2066			ALL
	04			D41002P	W2066			ALL
	05			D41010P	W2078			ALL
	06			D41008P	W2078			ALL
AP0031	DISC BKT-LEFT GEN SHIELD					007	0400/160/	ALL
	01	D41318J	W1136	D41318P	W4502			ALL

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AP0000

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AP0031	DISC BKT-LEFT GEN SHIELD (continued)					007	0400/160/	ALL
	02	D40662J	W1136	D40662P	W3536			ALL
	03	D40580J	W1136	D40580P	W2066			ALL
	04	D40392J	W1136	D40392P	W4500			ALL
	07	D41104J	W1136	D41104P	W3572			001-099
AP0032	DISC BKT-RIGHT GEN SHIELD					006	0400/160/R020	ALL
	01	D41320J	W1138	D41320P	W2370			ALL
	02	D40664J	W1138	D40664P	W3644			ALL
	03	D40592J	W1138	D40592P	W2070			ALL
	04	D40394J	W1138	D40394P	W4502			ALL
	05	D41316J	W1138	D41316P	W4502			ALL
AP0033	DISC BKT-MISCELLANEOUS RELAY PANEL					030	0357/168/R025	ALL
	04	D41418J	W1230	D41418P	W2244			001-099
	04			D41418P	W2244			ALL
	04	D41418J	W1234	D41418P	W2244			115-199
	05	D42094J	W1230	D42094P	W4220			ALL
	06	D41410J	W1230	D41410P	W2064			001-099
	06			D41410P	W2064			ALL
	06	D41410J	W1232	D41410P	W2064			115-199
	07	D42030J	W1230	D42030P	W2042			001-099
	07			D42030P	W2042			ALL
	07	D42030J	W1232	D42030P	W2042			115-199
	08	D41096J	W1230	D41096P	W2150			001-099
	08			D41096P	W2150			ALL
	08	D41096J	W1234	D41096P	W2150			115-199
	10	D41412J	W1230	D41412P	W2070			115-199
	13	D41420J	W1230	D41420P	W2260			ALL
	14	D41426J	W1230	D41426P	W2358			001-099
	14			D41426P	W2358			ALL
	14	D41426J	W1232	D41426P	W2358			115-199
	15	D41422J	W1230	D41422P	W2350			ALL
	16	D42006J	W1230	D42006P	W4228			001-099
	16			D42006P	W4228			ALL
	16	D42006J	W1232	D42006P	W4228			115-199
	19	D41950J	W1230	D41950P	W4236			001-099
	19			D41950P	W4236			ALL
	19	D41950J	W1232	D41950P	W4236			115-199
	21	D41722J	W1230	D41722P	W4212			001-099
	21			D41722P	W4212			ALL

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AP0000

Page 4

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AP0033	DISC BKT-MISCELLANEOUS RELAY PANEL (continued)					030	0357/168/R025	ALL
	21	D41722J	W1232	D41722P	W4212			115-199
	22	D41626J	W1230	D41626P	W4204			001-099
	22			D41626P	W4204			ALL
	22	D41626J	W1234	D41626P	W4204			115-199
	23	D41870J	W1230	D41870P	W2066			001-099
	23			D41870P	W2066			ALL
	23	D41870J	W1232	D41870P	W2066			115-199
	24	D41704J	W1230	D41704P	W4202			001-099
	24			D41704P	W4202			ALL
	24	D41704J	W1232	D41704P	W4202			115-199
	25	D41416J	W1230	D41416P	W2256			001-099
	25			D41416P	W2256			ALL
	25	D41416J	W1232	D41416P	W2256			115-199
	26	D41414J	W1230	D41414P	W2078			001-099
	26			D41414P	W2078			ALL
	26	D41414J	W1232	D41414P	W2078			115-199
	27	D41424J	W1230	D41424P	W2356			ALL
	28	D41692J	W1230	D41692P	W4208			ALL
	29	D41718J	W1230	D41718P	W4216			ALL
	30	D41412J	W1230	D41412P	W2070			001-099
AP0034	DISC BKT-APU/EXT POWER SHIELD					019	0400/165/L040	ALL
	01	D40188J	W1190	D40188P	W2602			ALL
	02	D40080J	W1190	D40080P	W4104			ALL
	03	D40400J	W1128	D40400P	W4504			ALL
	04	D40956J	W1128	D40956P	W4502			ALL
	05	D41326J	W1190	D41326P	W4504			ALL
	06	D40378J	W1128	D40378P	W2038			ALL
	08	D40474J	W1240	D40474P	W3824			ALL
	09	D41470J	W1240	D41470P	W2070			ALL
	10	D41476J	W1240	D41476P	W2356			ALL
	11	D40376J	W1240	D40376P	W3514			001-099
	11			D40376P	W3514			ALL
	11	D40376J	W1242	D40376P	W3514			115-199
	12	D41848J	W1240	D41848P	W2072			ALL
	13	D41472J	W1240	D41472P	W2356			ALL
	14	D40374J	W1240	D40374P	W3724			ALL
	15	D40476J	W1240	D40476P	W3614			001-099
	15			D40476P	W3614			ALL
	15	D40476J	W1242	D40476P	W3614			115-199

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AP0000

Page 5

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AP0034	DISC BKT-APU/EXT POWER SHIELD (continued)					019	0400/165/L040	ALL
	16	D41474J	W1240	D41474P	W3576			ALL
AP0036	DISC BKT-LEFT MISCELLANEOUS RELAY PANEL					043	0520/180/R040	ALL
	01	D40860J	W1260	D40860P	W2054			115-199
	02	D41475J	W1260	D41475P	W4471			ALL
	03	D42080J	W1260	D42080P	W2650			ALL
	04	D40910J	W1260	D40910P	W2256			ALL
	05	D41544J	W1260	D41544P	W4006			ALL
	06	D40608J	W1260	D40608P	W2070			ALL
	07	D40060J	W1260	D40060P	W4006			ALL
	08	D40390J	W1260	D40390P	W2152			ALL
	09	D40056J	W1260	D40056P	W4004			ALL
	10	D40206J	W1260	D40206P	W2634			ALL
	11	D41024J	W1260	D41024P	W4424			ALL
	12	D41497J	W1260	D41497P	W4477			ALL
	13	D41958J	W1260	D41958P	W4210			ALL
	14	D41850J	W1260	D41850P	W2078			ALL
	15	D40918J	W1260	D40918P	W2240			ALL
	16	D40914J	W1260	D40914P	W2260			ALL
	17	D40874J	W1260	D40874P	W2066			ALL
	18	D41020J	W1260	D41020P	W4420			ALL
	19	D41690J	W1260	D41690P	W4212			ALL
	20	D40716J	W1260	D40716P	W2356			ALL
	21	D41473J	W1260	D41473P	W4471			ALL
	22	D41948J	W1260	D41948P	W4228			ALL
	23	D41938J	W1260	D41938P	W4230			ALL
	24	D41060J	W1260	D41060P	W2156			ALL
	25	D40582J	W1260	D40582P	W2064			ALL
	26	D40696J	W1260	D40696P	W2352			ALL
	27	D40728J	W1260	D40728P	W2358			ALL
	28	D41612J	W1260	D41612P	W4202			ALL
	29	D41493J	W1260	D41493P	W4475			ALL
	30	D40542J	W1260	D40542P	W4500			ALL
	31	D41713J	W1260	D41713P	W2355			ALL
	32	D41022J	W1260	D41022P	W4422			ALL
	33	D41988J	W1260	D41988P	W4232			ALL
	34	D40310J	W1260	D40310P	W3702			ALL
	35	D42096J	W1260	D42096P	W4236			ALL
	36	D40574J	W1260	D40574P	W4204			001-099
	38	D40292J	W1260	D40292P	W2348			ALL

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AP0000

Page 6

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AP0036	DISC BKT-LEFT MISCELLANEOUS RELAY PANEL (continued)					043	0520/180/R040	ALL
	40	D43019J	W1260	D43019P	W4471			115-199
	41	D41248J	W1260	D41248P	W4228			ALL
	43	D41462J	W1260	D41462P	W4028			ALL
AP0037	DISC BKT-RIGHT MISCELLANEOUS RELAY PANEL					053	0440/170/R044	ALL
	01	D41082J	W1272	D41082P	W2700			ALL
	02	D40594J	W1270	D40594P	W2072			ALL
	03	D40760J	W1270	D40760P	W4086			115-199
	04	D41408J	W1270	D41408P	W2356			ALL
	05	D42176J	W1270	D42176P	W2070			ALL
	06	D40570J	W1270	D40570P	W2078			ALL
	07	D41766P	W4208					001-099
	07	D41766J	W1270	D41766P	W4208			ALL
	07	D41766P	W4208	D41766J	W1270			115-199
	08	D40978J	W1270	D40978P	W4504			ALL
	09	D41122J	W1272	D41122P	W2244			ALL
	10	D41852J	W1270	D41852P	W2064			ALL
	11	D41860J	W1270	D41860P	W2070			ALL
	12	D40184J	W1270	D40184P	W2602			ALL
	13	D40050J	W1270	D40050P	W4104			ALL
	14	D40186J	W1270	D40186P	W2602			ALL
	15	D40496J	W1270	D40496P	W3572			001-099
	15	D41302J	W1270	D41302P	W3672			115-199
	16	D40490J	W1270	D40490P	W2052			ALL
	18	D41684J	W1270	D41684P	W2650			ALL
	19	D43017J	W1270	D43017P	W4473			115-199
	20	D41909J	W1270	D41909P	W4473			ALL
	21	D41302J	W1270	D41302P	W3672			001-099
	21	D40496J	W1270	D40496P	W3572			115-199
	22	D42008J	W1270	D42008P	W4234			001-099
	22	D41998J	W1270	D41998P	W4238			115-199
	23	D41034J	W1270	D41034P	W4424			001-099
	24	D41728J	W1270	D41728P	W4218			ALL
	25	D41748J	W1270	D41748P	W4502			ALL
	26	D40410J	W1270	D40410P	W3802			ALL
	27	D40738J	W1270	D40738P	W2360			ALL
	28	D41732J	W1270	D41732P	W4206			ALL
	29	D41739J	W1270	D41739P	W4477			ALL
	30	D41495J	W1270	D41495P	W4475			ALL
	31	D41546P	W4106	D41546J	W1270			ALL

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AP0000

Page 7

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AP0037	DISC BKT-RIGHT MISCELLANEOUS RELAY PANEL (continued)					053	0440/170/R044	ALL
	31	D41546J	W1270	D41546P	W4106			ALL
	32	D41034J	W1270	D41034P	W4424			115-199
	33	D41856J	W1270	D41856P	W2070			ALL
	34	D41994J	W1270	D41994P	W4220			ALL
	35	D40862P	W2142	D40862J	W1270			115-199
	35	D40862J	W1270	D40862P	W2142			115-199
	36	D41637J	W1270	D41637P	W4471			ALL
	37	D41030J	W1270	D41030P	W4420			ALL
	38	D40718J	W1270	D40718P	W2356			ALL
	39	D42062J	W1270	D42062P	W4216			ALL
	40	D40064J	W1270	D40064P	W4106			ALL
	41	D41998J	W1270	D41998P	W4238			001-099
	41	D42008J	W1270	D42008P	W4234			115-199
	42	D40864P	W2154	D40864J	W1270			115-199
	42	D40864J	W1270	D40864P	W2154			115-199
	43	D41858J	W1270	D41858P	W2156			ALL
	44	D41032J	W1270	D41032P	W4422			ALL
	45	D40912J	W1270	D40912P	W2258			ALL
	46	D40920J	W1270	D40920P	W2244			115-199
	47	D41854J	W1270	D41854P	W2066			ALL
	48	D42010J	W1270	D42010P	W4236			ALL
	49	D41616J	W1270	D41616P	W4216			ALL
	50	D41487J	W1270	D41487P	W4473			ALL
	52	D41258J	W1270	D41258P	W4236			ALL
	53	D41478J	W1270	D41478P	W4108			ALL
AP0050	DISC BKT-ELECTRICAL SYSTEM CARD FILE					020	0425/176/R050	ALL
	01	D40974J	W1140	D40974P	W4006			ALL
	02	D41477J	W1140	D41477P	W4471			ALL
	03	D40972J	W1140	D40972P	W2066			ALL
	04	D40976J	W1140	D40976P	W4106			ALL
	05	D40970J	W1140	D40970P	W2070			ALL
	06	D41990J	W1140	D41990P	W4236			ALL
	07	D41835J	W1140	D41835P	W2605			ALL
	08	D42004J	W1140	D42004P	W4228			ALL
	09	D42000J	W1140	D42000P	W4210			ALL
	10	D41839J	W1140	D41839P	W2621			ALL
	12	D41489J	W1140	D41489P	W4473			ALL
	13	D41837J	W1140	D41837P	W2611			ALL
	15	D40810J	W1140	D40810P	W2352			ALL

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AP0000

Page 8

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AP0050	DISC BKT-ELECTRICAL SYSTEM CARD FILE (continued)					020	0425/176/R050	ALL
	16	D41675J	W1140	D41675P	W4475			ALL
	17	D41380J	W1140	D41380P	W2078			ALL
	18	D42002J	W1140	D42002P	W4220			ALL
	19	D40812J	W1140	D40812P	W2356			ALL
AP0051	DISC BKT-WARNING ELECTRONICS UNIT					011	0415/176/R050	ALL
	01	D41481J	W1451	D41481P	W4471			ALL
	02	D41599J	W1451	D41599P	W4475			115-199
	03	D41059J	W1451	D41059P	W4477			ALL
	04	D40587J	W1451	D40587P	W2193			ALL
	05	D41491J	W1451	D41491P	W4473			ALL
	07	D40639J	W1451	D40639P	W2241			ALL
	08	D40714J	W1451	D40714P	W2356			ALL
	09	D42081J	W1451	D42081P	W2253			ALL
	10	D40736J	W1451	D40736P	W2360			ALL
	11	D40585J	W1451	D40585P	W2195			ALL
AP0054	DISC BKT-FIRE DETECTION CARD FILE					010	0400/176/R050	ALL
	01	D41944J	W1120	D41944P	W4228			ALL
	02	D41946J	W1120	D41946P	W4236			ALL
	03	D40946J	W1120	D40946P	W2134			ALL
	04	D40218J	W1120	D40218P	W2626			ALL
	05	D41986J	W1120	D41986P	W4210			ALL
	07	D41936J	W1120	D41936P	W4230			ALL
	08	D41992J	W1120	D41992P	W4220			ALL
	09	D41940J	W1120	D41940P	W4234			ALL
	10	D40220J	W1120	D40220P	W2628			ALL
AP0061	DISC BKT-MAINTENANCE PANEL					011	0280/250/R040	ALL
	02	D44106J	W2156	D44106P	W4236			ALL
	04	D40003J	W0069	D40003P	W2299			ALL
	06	D44108J	W2156	D44108P	W4228			ALL
	09	D44102J	W2078	D44102P	W4228			ALL
	10	D44104J	W2078	D44104P	W4236			ALL
AP0065	DISC BKT-MISCELLANEOUS EQUIPMENT PANEL					003	0470/152/R023	ALL
	01	D41922J	W4104	D41922P	W0808			ALL
	02	D41926J	W4162	D41926P	W0808			ALL
	04	D65001J	W2379	D65001P	W0814			002
	05	D65003P	W0814	D65003J	W2381			002

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AP0000

Page 9

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AP0065	DISC BKT-MISCELLANEOUS EQUIPMENT PANEL (continued)					003	0470/152/R023	ALL
	05	D65003J	W2381	D65003P	W0814			002
AP0070	DISC BKT-RELAY PANEL					009	0465/183/L045	ALL
	01	D41934J	W1250	D41934P	W4004			ALL
	02	D41746J	W1250	D41746P	W2256			ALL
	03	D42166J	W1250	D42166P	W2070			ALL
	04	D41942J	W1250	D41942P	W2634			ALL
	05	D42074J	W1250	D42074P	W2066			ALL
	06	D40022J	W1250	D40022P	W4210			ALL
	07	D41880J	W1252	D41880P	W2352			ALL
	08	D41968J	W1252	D41968P	W2358			ALL
	09	D41754J	W1252	D41754P	W2352			ALL
AP0071	DISC BKT-HYDRAULIC GENERATOR CONTROL					000	P071-00/ /	001-099
AP0071	DISC BKT-HYDRAULIC GENERATOR CONTROL					000	520/189/R054	115-199
	1	D40416P	W2344	D40416J	W1254			ALL
	1	D40416J	W1254	D40416P	W2344			ALL
	2	D40452P	W2344	D40452J	W1254			ALL
	2	D40452J	W1254	D40452P	W2344			ALL
	3	D40270J	W1254	D40270P	W2348			ALL
	4	D40460P	W2346	D40460J	W1254			ALL
	4	D40460J	W1254	D40460P	W2346			ALL
	5	D40450P	W2396	D40450J	W1254			ALL
	5	D40450J	W1254	D40450P	W2396			ALL
	6	D40418J	W1254	D40418P	W2394			ALL
	08	D41390P	W2398	D41390J	W1254			003-099

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AP0000

Page 10 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AP0101	DISC BKT-CAPT. INSTRUMENT PANEL DISC-L					002	/ /	ALL
	01	D40281J	W0017	D40281P	W0001			ALL
	02	D40671J	W0017	D40671P	W0001			ALL
AP0103	DISC BKT-CAPTAINS INSTRUMENT PANEL DISC					005	/ /	ALL
	02	D40209J	W0101	D40209P	W0001			ALL
	03	D40427J	W0101	D40427P	W0001			ALL
	04	D40677J	W0101	D40677P	W0001			ALL

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AP0100

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AP0301	DISC BKT-F/O INSTRUMENT PANEL DISC-L					006	229/230/C000	ALL
	02	D42174J	W0002	D42174P	W0003			ALL
	03	D40834J	W0002	D40834P	W0003			ALL
	04	D40836J	W0002	D40836P	W0003			ALL
AP0303	DISC BKT-F/O INSTRUMENT PANEL DISC					002	/ /	ALL
	01	D40249J	W0033	D40249P	W0003			ALL
	02	D40525J	W0033	D40525P	W0003			ALL

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AP0300

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AS1080	DISC BKT-L. ENG. STRUT FIREWALL					011	/ /	ALL
	01	D01106J	W5104					ALL
	02	D01110J	W5108					ALL
	03	D01112J	W5104					ALL
	04	D01108J	W5100					ALL
	06	D01104J	W5100					ALL
	07	D01102J	W5102					ALL
	08	D01100J	W5108					ALL
	10	D01114J	W5114					ALL
AS1090	DISC BKT-L. LEAD. EDGE STRUT VAPOR SEAL					007	/285/	ALL

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AS1000

Page 1 End

Dec 18/2007



Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AS1123	DISC BKT-LEFT ENGINE STRUT VAPOR SEAL					004	/ /	ALL
	01	D40012J	W3316	D40012P	W3320			ALL
	02	D40266J	W3318	D40266P	W3322			ALL
	03	D40044J	W3330	D40044P	W3328			ALL
	04	D41162J	W3370	D41162P	W3320			ALL
AS1140	DISC BKT-LEFT HORIZ ENG. STRUT FIREWALL					004	/ /	ALL
	01	D01118J	W3318					ALL
	02	D01120J	W3316					ALL
	03	D41072J	W3370	D41072P	W3368			ALL
	04	D40816J	W3330	D40816P	W3366			ALL
AS1180	DISC BKT-L. LEAD. EDGE STRUT VAPOR SEAL					007	/285/	ALL

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AS1100

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AS2080	DISC BKT-R. ENG. STRUT FIREWALL					011	/ /	ALL
	01	D01206J	W5204					ALL
	02	D01210J	W5208					ALL
	03	D01212J	W5204					ALL
	04	D01208J	W5200					ALL
	06	D01204J	W5200					ALL
	07	D01202J	W5202					ALL
	08	D01200J	W5208					ALL
	10	D01214J	W5214					ALL
AS2090	DISC BKT-L. LEAD. EDGE STRUT VAPOR SEAL					007	/285/	ALL

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AS2000

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AS2123	DISC BKT-RIGHT ENGINE STRUT VAPOR SEAL					004	/ /	ALL
	01	D40272J	W3416	D40272P	W3420			ALL
	02	D40278J	W3418	D40278P	W3422			ALL
	03	D40048J	W3430	D40048P	W3428			ALL
	04	D41164J	W3470	D41164P	W3420			ALL
AS2140	DISC BKT-RIGHT HORIZ ENG. STRUT FIREWALL					004	/ /	ALL
	01	D01218J	W3418					ALL
	02	D01220J	W3416					ALL
	03	D41074J	W3470	D41074P	W3468			ALL
	04	D40818J	W3430	D40818P	W3466			ALL
AS2180	DISC BKT-L. LEAD. EDGE STRUT VAPOR SEAL					007	/285/	ALL

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AS2100

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AT1883	DISC BKT-APU FIREWALL DISCONNECT					008	1883/240/R035	ALL
	01	D40104J	W2654	D40104P	W2822			ALL
	02	D40316J	W2028	D40316P	W2826			001-099
	02			D40316P	W2826			ALL
	02	D40316J	W2626	D40316P	W2826			115-199
	03	D40230J	W2818	D40230P	W2808			ALL
	04	D40318J	W2048	D40318P	W2828			001-099
	04			D40318P	W2828			ALL
	04	D40318J	W2628	D40318P	W2828			115-199
	05	D40228J	W2800	D40228P	W2806			ALL
	06	D40198J	W2654					ALL
	07	D40222J	W2802	D40222P	W2810			ALL
	08	D40200J	W2654					ALL

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AT1800

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AW1156	DISC BKT-LEFT WING REAR SPAR					003	0159/ /	ALL
	01	D40505J	W3311	D40505P	W2443			001-099
	01			D40505P	W2443			001-099
	01	D40505J	W3311					001-099
	01	D40505J	W2443	D40505P	W3311			115-199
	01	D40505J	W2443					115-199
	01			D40505P	W3311			115-199
	02	D40922J	W3306	D40922P	W4206			001-099
	02			D40922P	W4206			001-099
	02	D40922J	W3306					001-099
	02	D40922J	W4206	D40922P	W3306			115-199
	02	D40922J	W4206					115-199
	02			D40922P	W3306			115-199
AW1164	DISC BKT-RIGHT WING REAR SPAR					003	0166/ /	ALL
	01	D40902J	W3306	D40902P	W2626			001-099
	01			D40902P	W2626			001-099
	01	D40902J	W3306					001-099
	01	D40902J	W2626	D40902P	W3306			115-199
	01	D40902J	W2626					115-199
	01			D40902P	W3306			115-199
	02	D40543J	W3319	D40543P	W2447			001-099
	02			D40543P	W2447			001-099
	02	D40543J	W3319					001-099
	02	D40543J	W2447	D40543P	W3319			115-199
	02	D40543J	W2447					115-199
	02			D40543P	W3319			115-199
AW1179	DISC BKT-LEFT WING REAR SPAR					002	0182/ /	ALL
	01	D40382J	W4206	D40382P	W3022			ALL
	02	D40380J	W4202	D40380P	W3020			ALL
AW1180	DISC BKT-LEFT WING REAR SPAR					003	0159/ /	ALL
	01	D40529J	W3315	D40529P	W2445			001-099
	01			D40529P	W2445			001-099
	01	D40529J	W3315					001-099
	01	D40529J	W2445	D40529P	W3315			115-199
	01	D40529J	W2445					115-199
	01			D40529P	W3315			115-199
	02	D40898J	W3306	D40898P	W4202			001-099
	02			D40898P	W4202			001-099

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AW1100

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AW1180	DISC BKT-LEFT WING REAR SPAR (continued)					003	0159/ /	ALL
	02	D40898J	W3306					001-099
	02	D40898J	W4202	D40898P	W3306			115-199
	02	D40898J	W4202					115-199
	02			D40898P	W3306			115-199

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AW1100

Page 2 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AW1240	DISC BKT-LEFT WING REAR SPAR					000	0242/ /	ALL
	01	D40084J	W2646	D40084P	W3012			ALL
	02	D40082J	W2642	D40082P	W3010			ALL
AW1285	DISC BKT-L. LEAD. EDGE STRUT VAPOR SEAL					007	FSS285/ /L	ALL
	01	D42278J	W3380	D42278P	W5108			ALL
	03	D40024J	W3314	D40024P	W5114			ALL
	04	D42282J	W5100	D42282P	W3300			ALL
	05	D42280J	W5100	D42280P	W3300			ALL
	06	D42272P	W3304	D42272J	W5104			ALL
	06	D42272J	W5104	D42272P	W3304			ALL
	07	D42276J	W3302	D42276P	W5102			ALL

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AW1200

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AW1333	DISC BKT-L. ENG. STRUT OUTBD CLOSURE RIB					009	/ /	ALL
	01	D40304J	W3326	D40304P	W3342			ALL
	02	D41192J	W3326	D41192P	W3342			ALL
	03	D41392J	W3326	D41392P	W3346			ALL

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AW1300

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AW2156	DISC BKT-RIGHT WING REAR SPAR					003	0159/ /	ALL
	01	D40944J	W3406	D40944P	W4212			001-099
	01			D40944P	W4212			001-099
	01	D40944J	W3406					001-099
	01	D40944J	W4212	D40944P	W3406			115-199
	01	D40944J	W4212					115-199
	01			D40944P	W3406			115-199
	02	D40571J	W3419	D40571P	W2447			001-099
	02			D40571P	W2447			001-099
	02	D40571J	W3419					001-099
	02	D40571J	W2447	D40571P	W3419			115-199
	02	D40571J	W2447					115-199
	02			D40571P	W3419			115-199
AW2164	DISC BKT-RIGHT WING REAR SPAR					002	0166/ /	ALL
	01	D40942P	W2628	D40942J	W3406			001-099
	01	D40942J	W3406	D40942P	W2628			001-099
	01			D40942P	W2628			001-099
	01			D40942J	W3406			001-099
	01	D40942J	W3406					001-099
	01	D40942J	W2628	D40942P	W3406			115-199
	01	D40942J	W2628					115-199
	01	D40942P	W3406					115-199
	01			D40942P	W3406			115-199
	02	D40519J	W3411	D40519P	W2443			001-099
	02			D40519P	W2443			001-099
	02	D40519J	W3411					001-099
	02	D40519J	W2443	D40519P	W3411			115-199
	02	D40519J	W2443					115-199
	02			D40519P	W3411			115-199
AW2179	DISC BKT-RIGHT WING REAR SPAR					002	0182/ /	ALL
	01	D40440J	W4216	D40440P	W4922			ALL
	02	D40432J	W4212	D40432P	W4920			ALL
AW2180	DISC BKT-RIGHT WING REAR SPAR					000	0182/ /	ALL
	01	D40930J	W3406	D40930P	W4216			001-099
	01			D40930P	W4216			001-099
	01	D40930J	W3406					001-099
	01	D40930J	W4216	D40930P	W3406			115-199
	01	D40930J	W4216					115-199

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AW2100

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AW2180	DISC BKT-RIGHT WING REAR SPAR (continued)					000	0182/ /	ALL
	01			D40930P	W3406			115-199
	02	D40541J	W3415	D40541P	W2445			001-099
	02			D40541P	W2445			001-099
	02	D40541J	W3415					001-099
	02	D40541J	W2445	D40541P	W3415			115-199
	02	D40541J	W2445					115-199
	02			D40541P	W3415			115-199

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AW2100

Page 2 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AW2240	DISC BKT-RIGHT WING REAR SPAR					002	0242/ /	ALL
	01	D40434J	W2648	D40434P	W4912			ALL
	02	D40442J	W2644	D40442P	W4910			ALL
AW2285	DISC BKT-R. LEAD. EDGE STRUT VAPOR SEAL					007	FSS285/ /R	ALL
	01	D42288J	W3402	D42288P	W5202			ALL
	02	D40028J	W3414	D40028P	W5214			ALL
	04	D42294J	W5200	D42294P	W3400			ALL
	05	D42292J	W5200	D42292P	W3400			ALL
	06	D42284P	W3404	D42284J	W5204			001-099
	06	D42284J	W5204	D42284P	W3404			ALL
	06	D42284P	W3404					115-199
	07	D42290J	W3480	D42290P	W5208			ALL

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AW2200

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AW2333	DISC BKT-R. ENG. STRUT OUTBD CLOSURE RIB					005	/ /	ALL
	01	D40330J	W3426	D40330P	W3460			ALL
	02	D40404J	W3426	D40404P	W3446			ALL
	03	D40328J	W3426	D40328P	W3458			ALL
	04	D41196J	W3462	D41196P	W3424			115-199
	05	D41396J	W3426	D41396P	W3424			ALL

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AW2300

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AW2493	DISC BKT-WING LE STRUT					000	0493/ /	ALL
	01	D40324J	W3426	D40324P	W1500			ALL
	02	D40326J	W3426	D40326P	W1500			ALL

DISCONNECT BRACKET LIST

D280N032

91-04-00

Section AW2400

Page 1 End

Dec 18/2007