

91-02-00

CIRCUIT BREAKER LIST



91-02-00
CIRCUIT BREAKER LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
EFFECTIVE PAGES			P034-00 cont.					
	1	Oct 09/2008	R	2	Oct 09/2008			
	2	BLANK	R P037-00	1	Oct 09/2008			
0460	1	Dec 18/2007	O	2	Oct 09/2008			
R E006-00	1	Oct 09/2008	R P070-00	1	Oct 09/2008			
P006-01	1	Dec 18/2007	R P071-00	1	Oct 09/2008			
	2	Dec 18/2007	D	2	BLANK			
P006-02	1	Dec 18/2007						
P006-03	1	Dec 18/2007						
P006-04	1	Dec 18/2007						
R P011-01	1	Oct 09/2008						
R	2	Oct 09/2008						
R	3	Oct 09/2008						
A	4	Oct 09/2008						
O P011-02	1	Oct 09/2008						
R	2	Oct 09/2008						
R	3	Oct 09/2008						
O	4	Oct 09/2008						
R P011-03	1	Oct 09/2008						
O	2	Oct 09/2008						
R	3	Oct 09/2008						
R P011-04	1	Oct 09/2008						
O	2	Oct 09/2008						
R	3	Oct 09/2008						
O P026-00	1	Oct 09/2008						
O P031-00	1	Oct 09/2008						
R P032-00	1	Oct 09/2008						
O P034-00	1	Oct 09/2008						

A = Added, R = Revised, D = Deleted, O = Overflow

CIRCUIT BREAKER LIST

D280N032

EFFECTIVE PAGES

Page 1
Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Panel/Access Door		Description		Diagram	
Grid No	Ckt Bkr	Description		Diagram	Effectivity
0460					
R030	C04048	CB-FWD CARGO COMPARTMENT LIGHTS		33-37-11	ALL
R030	C04149	CB-CARGO LIGHTS NO 1 DOOR		33-37-11	ALL

CIRCUIT BREAKER LIST

D280N032

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

91-02-00

Section 0460

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Panel/Access Door		Description	Diagram		
Grid No	Ckt Bkr	Description	Diagram	Effectivity	
E006-00	RACK		91-03-06	ALL	
I	C00020	CB-APU START	49-61-11	ALL	
I	C00089	CB-APU TRU FAN	24-32-41	ALL	
I	C00820	CB-APU BAT OVHT PROT	24-31-41	ALL	
I	C00821	CB-APU BAT DC VOLT	24-34-11	ALL	
	C00868	CB-APU BAT CHGR	24-31-41	ALL	
	C00869	CB-APU BAT BUS	24-31-41	ALL	
I	C01382	CB-APU CONT	49-61-11	ALL	
I	C01385	CB-APU INLET DOOR ACTR	49-61-14	ALL	
I	C04046	CB-CARGO LIGHTS L	33-37-21	ALL	
I	C04047	CB-CARGO LIGHTS R	33-37-21	ALL	
I	C04150	CB-NO 2 DOOR CARGO LIGHTS	33-37-21	ALL	
I	C04246	CB-APU TOTALIZER	49-72-11	ALL	
I	C04286	CB-BAT DISCH IND INHIBIT	24-31-41	001-099	

CIRCUIT BREAKER LIST

D280N032

91-02-00

Section E006-00

Page 1 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Panel/Access Door		Description	Diagram		Effectivity
Grid No	Ckt Bkr	Description	Diagram		
P006-01					ALL
A001	C00829	CB-BAT BUS DISTR	24-54-71		ALL
A002	C00872	CB-DC STBY	24-33-11		ALL
A003	C00811	CB-DC STBY BUS OFF	24-33-11		ALL
A004	C04097	CB-BAT CUR MON PWR	24-34-11		ALL
A005	C00828	CB-STBY PWR CONT	24-33-11		ALL
A006	C00879	CB-DC BUS TIE CONT	24-34-11		ALL
B001	C00804	CB-L GEN CONT UNIT	24-11-11		ALL
B002	C00805	CB-R GEN CONT UNIT	24-11-21		ALL
B003	C00806	CB-APU GEN CONT UNIT	24-22-41		ALL
B004	C00809	CB-BUS PWR CONT UNIT	24-41-11		ALL
B005	C00807	CB-L GEN DRIVE DISC	24-11-11		ALL
B006	C00808	CB-R GEN DRIVE DISC	24-11-21		ALL
C001	C04136	CB-FUEL COND CONT L	76-11-11		ALL
C002	C04137	CB-FUEL COND CONT R	76-11-12		ALL
C003	C04349	CB-HYD GEN CONT	24-25-11		ALL
C007	C04348	CB-HYD GEN 28V DC PWR	24-31-11		001-002
D001	C00827	CB-BAT OVHT PROT	24-31-11		ALL
D002	C00814	CB-BAT XFR CONT	24-33-11		ALL
D003	C00614	CB-IRS L	34-21-11		ALL
D004	C00621	CB-IRS C	34-21-31		ALL
D005	C00620	CB-IRS R	34-21-21		ALL
D006	C04070	CB-EQUIP COOL GND WARN AND TEST	21-58-11		ALL
E001	C01061	CB-L SPAR FUEL VALVES	28-22-21		ALL
E002	C01062	CB-R SPAR FUEL VALVES	28-22-21		ALL
E003	C01063	CB-APU FUEL VALVES	28-25-21		ALL
E004	C01045	CB-FUELING QTY	28-21-11		ALL
E005	C01043	CB-FUELING CONTROL	28-21-11		ALL
E006	C01046	CB-FUELING VALVES	28-21-11		ALL
F001	C04062	CB-RAT MAN PWR	29-21-31		ALL
F002	C04287	CB-RAT MAN CONT	29-21-31		001-099
F004	C01179	CB-LANDING GEAR PARKING BRAKE VLV	32-44-11		ALL
F005	C04177	CB-LANDING GEAR ALTN EXT CONT	32-12-11		ALL
F006	C04248	CB-LANDING GEAR ALTN EXT MOTOR	32-35-11		ALL
G001	C00780	CB-FIRE EXT APU	26-22-21		ALL
G002	C00563	CB-CLOCK TIME BASE L	31-25-11		ALL
G003	C00576	CB-CLOCK TIME BASE R	31-25-11		ALL
G005	C04217	CB-STBY BUS OFF LT BAT VM	24-33-11		ALL
G006	C00880	CB-CENTER BUS CONT	24-51-31		ALL
H001	C00778	CB-BTL 1 ENG L FIRE EXTINGUISHING	26-21-11		ALL
H002	C00786	CB-BTL 2 ENG L FIRE EXTINGUISHING	26-21-11		ALL

CIRCUIT BREAKER LIST

D280N032

91-02-00

Section P006-01

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Panel/Access Door		Description		Diagram	
Grid No	Ckt Bkr	Description		Diagram	Effectivity
P006-01		(continued)			ALL
H003	C00779	CB-BTL 1 ENG R FIRE EXTINGUISHING		26-21-11	ALL
H004	C00787	CB-BTL 2 ENG R FIRE EXTINGUISHING		26-21-11	ALL
H005	C00781	CB-BTL 1 CARGO FIRE EXTINGUISHING		26-23-11	ALL
H006	C00773	CB-BTL 2 CARGO FIRE EXTINGUISHING		26-23-11	ALL

CIRCUIT BREAKER LIST

D280N032

91-02-00

Section P006-01

Page 2 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Panel/Access Door		Description	Diagram		Effectivity
Grid No	Ckt Bkr	Description	Diagram		
P006-02					ALL
C007	C04348	CB-HYD GEN 28V DC PWR	24-31-11		003-099, 115-199
C008	C00550	CB-HYD GEN 28VDC SENSE	24-31-11		003-099
C009	C00884	CB-C BUS PWR	24-51-31		ALL
C010	C00887	CB-BAT BUS CONT	24-33-11		ALL
C011	C04142	CB-L DC VOLT SENSE	24-34-11		ALL
C012	C04472	CB-LEFT ENG SYNC LOCK CONT	78-34-51		001-002, 115-199
C012	C04472	CB-LEFT ENG SYNCH LOCK	78-34-51		003-099
D007	C00883	CB-SECT 2	24-54-11		ALL
D008	C00882	CB-SECT 1	24-54-11		ALL
D009	C00881	CB-TIE L	24-32-11		ALL
D010	C00885	CB-INV PWR TRU	24-33-11		ALL
D011	C00886	CB-BAT BUS PWR TRU	24-33-11		ALL
D012	C04474	CB- RIGHT ENG SYNC LOCK CONT	78-34-61		001-002, 115-199
D012	C04474	CB-RIGHT ENG SYNCH LOCK	78-34-61		003-099
H007	C00890	CB-SECT 2	24-54-21		ALL
H008	C00891	CB-SECT 1	24-54-21		ALL
H009	C00889	CB-TIE R	24-32-11		ALL
H010	C04143	CB-R DC VOLT SENSE	24-34-11		ALL
H011	C04234	CB-28V DC OUTLET	25-29-11		ALL
H012	C00865	CB-APU START TRU CONT	24-32-41		ALL
L007	C04282	CB-APU/MAIN BAT TIE	24-31-11		ALL
L008	C00896	CB-MAIN BAT CHGR	24-31-11		ALL
L009	C00897	CB-HOT BAT BUS	24-54-72		ALL
L010	C00898	CB-BAT BUS PWR	24-33-11		ALL
L011	C00813	CB-INV PWR BAT	24-33-11		ALL
L012	C00899	CB-CENTER BUS DC	24-51-31		ALL

CIRCUIT BREAKER LIST

D280N032

91-02-00

Section P006-02

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Panel/Access Door		Description	Diagram		
Grid No	Ckt Bkr	Description	Diagram	Effectivity	
P006-03					ALL
A014	C00310	CB-115 VAC BUS L SECT 3	24-51-13	ALL	
A017	C00308	CB-115 VAC BUS L SECT 2	24-51-12	ALL	
C014	C00313	CB-115 VAC BUS L SECT 1	24-51-11	ALL	
C017	C00312	CB-L TRU	24-32-11	ALL	
D017	C03044	CB-EQ COOL AUX FAN	21-58-15	ALL	
F014	C00369	CB-L FUEL OVRD PUMP	28-22-11	ALL	
F017	C00331	CB-FWD EQUIP COOL SUPPLY FAN 1	21-58-13	ALL	
H014	C00366	CB-L AFT FUEL BOOST PUMP	28-22-11	ALL	
H017	C00368	CB-R FWD FUEL BOOST PUMP	28-22-11	ALL	
J017	C00326	CB-115V AC BUS L XFR	24-51-15	001-099	
K013	C04329	CB-HYD EMP ENABLE C1	29-11-31	ALL	
K014	C04330	CB-HYD EMP ENABLE R	29-11-22	ALL	
K016	C00874	CB-AC STBY BUS PWR	24-33-11	ALL	
K017	C00876	CB-CENTER BUS AC	24-51-31	ALL	
K018	C00877	CB-28V AC BUS L	24-53-11	ALL	
L013	C04353	CB-28V AC BUS L XFR	24-51-15	ALL	
L015	C01110	CB-CAPT MAIN PITOT HEAT	30-31-11	ALL	
L016	C01112	CB-L AUX PITOT HEAT	30-31-11	ALL	
L017	C01134	CB-L AOA HEAT	30-32-11	ALL	
M013	C00892	CB-AC STBY BUS OFF	24-33-11	ALL	
M014	C00875	CB-CENTER BUS AC INVERTER	24-51-31	ALL	
M015	C00817	CB-VOLT SENSE INVERTER	24-28-11	ALL	
M016	C04264	CB-CAPT PRIM INSTR BUS A	24-51-72	ALL	
M017	C04265	CB-CAPT PRIM INSTR BUS B	24-51-72	ALL	
M018	C04266	CB-CAPT PRIM INSTR BUS C	24-51-72	ALL	

CIRCUIT BREAKER LIST

D280N032

91-02-00

Section P006-03

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Panel/Access Door		Description	Diagram		Effectivity
Grid No	Ckt Bkr	Description	Diagram		
P006-04					ALL
	C00327	CB-115V AC BUS R XFR	24-51-21		001-002
A020	C00317	CB-115 VAC BUS R SECT 3	24-51-23		ALL
A023	C00307	CB-115 VAC BUS R SECT 2	24-51-22		ALL
C020	C00319	CB-115 VAC BUS R SECT 1	24-51-21		ALL
C023	C00318	CB-R TRU	24-32-11		ALL
D020	C03014	CB-ALTN SLAT PWR	27-81-11		ALL
D023	C00323	CB-ALTN FLAP PWR	27-51-11		ALL
F020	C00370	CB-R FUEL OVRD PUMP	28-22-11		ALL
F023	C00332	CB-FWD EQUIP COOL SUPPLY FAN 2	21-58-13		ALL
H020	C00371	CB-R AFT FUEL BOOST PUMP	28-22-11		ALL
H023	C00372	CB-L FWD FUEL BOOST PUMP	28-22-11		ALL
J017	C00326	CB-115V AC BUS L XFR	24-51-15		115-199
J020	C03007	CB-115VAC GND SVCE SECT 1	24-51-52		ALL
J023	C00327	CB-115V AC BUS R XFR	24-51-21		003-099, 115-199
K019	C04331	CB-HYD EMP ENABLE C2	29-11-31		ALL
K021	C00397	CB-POT WATER CPRSR	38-15-11		ALL
K024	C00878	CB-28V AC BUS R	24-53-21		ALL
L021	C01114	CB-R AUX PITOT HEAT	30-31-12		ALL
L022	C01116	CB-F/O MAIN PITOT HEAT	30-31-12		ALL
L023	C01135	CB-R AOA HEAT	30-32-11		ALL
L024	C04003	CB-TAT PROBE HEAT	30-33-11		ALL
M019	C03020	CB-PASS SERVICE OUTLET	25-29-11		ALL
M021	C04355	CB-28V AC BUS R XFR	24-51-25		ALL
M022	C04267	CB-F/O PRIM INSTR BUS A	24-51-72		ALL
M023	C04268	CB-F/O PRIM INSTR BUS B	24-51-72		ALL
M024	C04269	CB-F/O PRIM INSTR BUS C	24-51-72		ALL

CIRCUIT BREAKER LIST

D280N032

91-02-00

Section P006-04

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Panel/Access Door	Description		Diagram	
Grid No	Ckt Bkr	Description	Diagram	Effectivity
P011-01	PNL ASSY-CIRCUIT BREAKER		91-02-11	ALL
A002	C00595	CB-VOR/MKR L	34-51-11	ALL
A003	C00606	CB-ILS C	34-31-31	001-099
A003	C04602	CB-MMR C	34-31-31	115-199
A004	C04118	CB-ADF R	34-57-21	001-099
A005	C00619	CB-STBY ATT IND	34-24-11	ALL
A006	C00635	CB-RDMI L	34-22-81	001-099
A006	C04239	CB-RBA	34-22-83	115-199
A007	C00622	CB-EFIS DSPL SW L	34-22-16	001-099
A007	C04259	CB-RMI	34-22-83	115-199
A008	C00591	CB-STBY ALTM VIB	34-13-11	ALL
A009	C00604	CB-STBY ILS IND	34-24-11	ALL
A010	C00625	CB-AIR DATA CMPTR L	34-12-11	ALL
A011	C00001	CB-AIR DATA AOA SENSOR L	34-12-11	ALL
A012	C00002	CB-AIR DATA BARO CORRECT L	34-12-11	ALL
A013	C00702	CB-AIR COND PACK LEFT AUTO CONT	21-51-12	001-099
A014	C00653	CB-AIR COND PACK LEFT FLOW CONT	21-51-11	001-099
A014	C00702	CB-LEFT PACK AUTO CONT	21-51-12	115-199
A015	C00653	CB-LEFT PACK FLOW CONT	21-51-11	115-199
A015	C04039	CB-RIGHT PACK STBY CONT	21-51-23	001-099
A016	C04039	CB-RIGHT PACK STANDBY CONT	21-51-23	115-199
A017	C00521	CB-AUTO FLT WARN	22-11-32	ALL
A018	C01560	CB-YAW DAMPER L	22-21-11	ALL
B002	C01338	CB-ISOL VALVE CONT	36-11-31	ALL
B003	C01337	CB-ISOL VALVE PWR	36-11-31	ALL
B004	C04664	CB-L AIR DATA SOURCE SEL RLY(SB 34A0222)	34-12-61	ALL
B005	C04665	CB-R AIR DATA SOURCE SEL RLY(SB 34A0222)	34-12-62	ALL
B006	C01283	CB-FLOOD MAIN PANEL LIGHTS	33-11-11	ALL
B007	C01246	CB-STBY INSTR LIGHTS	33-13-12	ALL
B010	C00770	CB-W/W FIRE DET	26-17-11	ALL
B012	C04206	CB-CABIN DIFF PRESS IND	21-33-11	ALL
B013	C04205	CB-CABIN ALTM	21-33-11	ALL
B014	C00683	CB-CABIN ALT/PRESS MAN	21-31-31	ALL
B015	C00658	CB-CABIN ALTITUDE CONTROL SEL	21-31-11	ALL
B016	C00567	CB-AURAL WARN SPKR L	31-51-11	ALL
B017	C00573	CB-CLOCK IND LEFT	31-25-11	001-099
B017	C00573	CB-CLOCK IND L	31-25-11	115-199
B018	C00566	CB-WARN ELEX B	31-51-12	ALL
C003	C00544	CB-VHF COMM L	23-12-11	ALL
C004	C00622	CB-EFIS DSPL SW L	34-22-16	115-199
C005	C01017	CB-STAB TRIM CONT L	27-41-11	ALL

CIRCUIT BREAKER LIST

D280N032

91-02-00

Section P011-01

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Panel/Access Door		Description	Diagram		Effectivity
Grid No	Ckt Bkr	Description	Diagram		
P011-01		PNL ASSY-CIRCUIT BREAKER (continued)	91-02-11		ALL
	C006	C01538 CB-FLT CONT ELEC 1L AC	27-09-11		001-099
	C006	C01538 CB-CSEU 1L AC	27-09-11		115-199
	C007	C01534 CB-FLT CONT ELEC 1L DC	27-09-11		001-099
	C007	C01534 CB-CSEU 1L DC	27-09-11		115-199
	C008	C01537 CB-FLT CONT ELEC 2L AC	27-09-11		001-099
	C008	C01537 CB-CSEU 2L AC	27-09-11		115-199
	C009	C01533 CB-FLT CONT ELEC 2L DC	27-09-11		001-099
	C009	C01533 CB-CSEU 2L DC	27-09-11		115-199
	C010	C01033 CB-RUDDER TRIM	27-21-11		ALL
	C011	C01039 CB-STICK SHAKER L	27-32-11		ALL
	C012	C01528 CB-STAB TRIM SHUTOFF L	27-41-11		ALL
	C013	C01529 CB-STAB TRIM SHUTOFF R	27-41-21		ALL
	C014	C01521 CB-FLAP/SLAT ELEC UNIT 2 PWR	27-51-61		ALL
	C015	C01541 CB-FLAP/SLAT ELEC UNIT 2 CONT	27-51-61		ALL
	C016	C01524 CB-FLAP/SLAT ELEC UNIT 2 SENSOR	27-51-61		ALL
	C017	C04110 CB-FLAP/SLAT SHUTOFF 1	27-51-31		001-099
	C018	C04110 CB-FLAP/SLAT SHUTOFF 1	27-51-31		115-199
	D004	C01120 CB-PROBE HEAT IND PITOT L	30-31-11		ALL
	D005	C04194 CB-PROBE HEAT IND AOA LEFT	30-32-11		ALL
	D006	C00826 CB-CAT III BUS ISOL BAT	24-51-31		ALL
	D007	C01434 CB-ENGINES STBY IGN L 1	74-31-11		ALL
	D008	C01435 CB-ENGINES STBY IGN L 2	74-31-11		ALL
	D009	C01437 CB-ENGINES STBY IGN R 1	74-31-21		ALL
	D010	C01438 CB-ENGINES STBY IGN R 2	74-31-21		ALL
	D011	C01480 CB-LEFT ENGINE T/R IND	78-36-11		001-099
	D012	C01482 CB-ENGINE T/R CONT-L	78-34-11		ALL
	D018	C01031 CB-RUD RATIO	27-21-12		ALL
	E001	C00580 CB-IAS MACH L	34-13-11		ALL
	E002	C00584 CB-ALTM L	34-13-11		ALL
	E003	C00593 CB-ADI L	34-22-16		ALL
	E004	C00633 CB-EFIS CONT PNL L	34-22-16		ALL
	E005	C00586 CB-VSI L	34-22-82		ALL
	E006	C00588 CB-HSI L	34-22-16		ALL
	E007	C00725 CB-FMS SW, L (SB 34-0427)	34-61-15		001
	E007	C00725 CB-FMS SW, L (SB 34-0414)	34-61-15		115-199
	E007	C04499 CB-METRIC ALTM,L	34-13-11		010-099
	E008	C00597 CB-FMCS CDU L	34-61-11		ALL
	E009	C00609 CB-FMCS CMPTR L	34-61-11		ALL
	E010	C00603 CB-ILS L	34-31-11		001-099
	E010	C04600 CB-MMR L	34-31-11		115-199

CIRCUIT BREAKER LIST

D280N032

91-02-00

Section P011-01

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Panel/Access Door		Description	Diagram	Effectivity
Grid No	Ckt Bkr	Description		
P011-01	PNL ASSY-CIRCUIT BREAKER (continued)		91-02-11	ALL
E011	C00582	CB-DME L	34-55-11	ALL
E012	C04509	CB-TERR DSPL	34-46-14	002
E016	C00516	CB-MODE CONT PNL L	22-11-12	ALL
E017	C00513	CB-FLT CONT CMPTR PWR L	22-11-11	ALL
E018	C00522	CB-FLT CONT CMPTR SERVO L	22-11-12	ALL
F001	C00611	CB-IRS L	34-21-11	ALL
F002	C00615	CB-WX RADAR L	34-43-11	ALL
F003	C04443	CB-TCAS	34-45-01	001-099
F004	C00592	CB-GND PROX CMPTR	34-46-11	ALL
F005	C00600	CB-RAD ALTM L	34-33-11	ALL
F006	C00607	CB-ADF L	34-57-11	ALL
F007	C04051	CB-ATC L	34-53-11	ALL
F008	C00637	CB-EFIS SYM GEN L	34-22-16	ALL
F009	C00639	CB-EFIS SYM GEN C	34-22-36	ALL
F010	C04263	CB-EFIS INSTR CMPTR	34-25-11	ALL
F013	C00641	CB-FMC TUNING L (DEL SB 34-0427)	34-61-15	001
F013	C00641	CB-FMC TUNING L	34-61-15	ALL
F013	C00641	CB-FMC TUNING L - DELETE (SB 34-0414)	34-61-15	115-199
F014	C00501	CB-TMC AC	22-31-11	ALL
F015	C00525	CB-TMC DC	22-31-12	ALL
F016	C00512	CB-TMC SERVO	22-31-12	ALL
G002	C04443	CKTBKR-TCAS	34-45-01	115-199
G003	C00539	CB-SELCAL	23-21-11	ALL
G004	C00546	CB-VHF COMM C	23-12-31	001-099
G008	C03005	CB-HF COMM L	23-11-11	ALL
G010	C01031	CB-RUD RATIO	27-21-12	001-004, 115-199
G011	C01023	CB-AUTO SPEED BRAKE	27-62-11	ALL
G012	C01025	CB-FLAP/SLAT ELEC UNIT 1 PWR	27-51-41	ALL
G013	C01539	CB-FSEU 1 CONT	27-51-41	ALL
G014	C01037	CB-FLAP/SLAT ELEC UNIT 1 SENSOR	27-51-41	ALL
G015	C01523	CB-STAB POS MOD L	27-48-21	ALL
G017	C01536	CB-FLT CONT ELEC 1R AC	27-09-11	001-099
G017	C01536	CB-CSEU 1R AC	27-09-11	115-199
G018	C01531	CB-FLT CONT ELEC 1R DC	27-09-11	001-099
G018	C01531	CB-CSEU 1R DC	27-09-11	115-199
H010	C01002	CB-STAB TRIM POS IND L	27-48-11	001-099
H011	C01017	CB-STAB TRIM CONT L	27-41-11	001-004, 115-199
H012	C01008	CB-FLAP POS IND L	27-58-11	ALL
H013	C01522	CB-FLAP POS IND R	27-58-11	ALL
H017	C04033	CB-FLT CONT SHUTOFF TAIL L	27-23-11	ALL

CIRCUIT BREAKER LIST

D280N032

91-02-00

Section P011-01

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Panel/Access Door		Description		Diagram	
Grid No	Ckt Bkr	Description		Diagram	Effectivity
P011-01		PNL ASSY-CIRCUIT BREAKER (continued)		91-02-11	ALL
H018	C04035	CB-FLT CONT SHUTOFF TAIL C		27-23-11	ALL
M010	C01002	CB-STAB TRIM POS IND L		27-48-11	115-199

CIRCUIT BREAKER LIST

D280N032

91-02-00

Section P011-01

Page 4 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Panel/Access Door		Description	Diagram		Effectivity
Grid No	Ckt Bkr	Description	Diagram		
P011-02		PNL ASSY-CIRCUIT BREAKER	91-02-12		ALL
A019	C04276	CB-EXT STBY BAT	24-33-12		ALL
A020	C04275	CB-EXT STBY CONT	24-33-12		001-099
A020	C04275	CB-EXT STBY CONT	24-33-11		115-199
A021	C01321	CB-PASSENGER OXYGEN L	35-21-11		ALL
A023	C01322	CB-PASSENGER OXYGEN R	35-21-11		ALL
A024	C01323	CB-PASSENGER OXYGEN CONT	35-21-11		ALL
A025	C01325	CB-PASSENGER OXYGEN MANUAL DEPLOY	35-21-11		ALL
A026	C04037	CB-LEFT PACK STBY CONT	21-51-13		001-099
A026	C04037	CB-L PACK STANDBY CONT	21-51-13		115-199
A028	C00703	CB-RIGHT PACK AUTO CONT	21-51-22		ALL
A029	C00704	CB-AIR COND PACK RIGHT FLOW CONT	21-51-21		001-099
A029	C00704	CB-RIGHT PACK FLOW CONT	21-51-21		115-199
A030	C01214	CB-F/D DOME LTS DC	33-11-31		ALL
A031	C01307	CB-IND LIGHTS TEST	33-16-51		ALL
A032	C01200	CB-IND LIGHTS 1	33-16-51		ALL
A033	C01201	CB-IND LIGHTS 2	33-16-61		ALL
A034	C01308	CB-IND LIGHTS 3	33-16-61		ALL
A035	C01306	CB-IND LIGHTS 4	33-16-61		ALL
B019	C01010	CB-STAB TRIM-ALTERNATE CONTROL	27-41-31		ALL
B020	C00774	CB-FIRE DETECTION L ENG 1	26-11-11		ALL
B021	C00783	CB-FIRE DETECTION L ENG 2	26-11-11		ALL
B022	C00775	CB-FIRE DETECTION R ENG 1	26-11-21		ALL
B023	C00784	CB-FIRE DETECTION R ENG 2	26-11-21		ALL
B024	C00776	CB-FIRE DETECTION APU 1	26-15-11		ALL
B025	C00785	CB-FIRE DETECTION APU 2	26-15-11		ALL
B026	C00772	CB-FIRE DETECTION CARGO 1	26-16-11		ALL
B027	C00788	CB-FIRE DETECTION CARGO 2	26-16-11		ALL
B029	C01481	CB-RIGHT ENG T/R IND	78-36-21		001-099
B029	C01481	CB-RIGHT ENGINE T/R IND	78-36-21		115-199
B030	C01483	CB-RIGHT ENGINE T/R CONT	78-34-21		ALL
B031	C04251	CB-ENGINE SPEED CARD L	77-12-41		ALL
B032	C04252	CB-ENGINE SPEED CARD R	77-12-42		ALL
B033	C00796	CB-APU REMOTE FIRE IND	26-15-12		ALL
B034	C01390	CB-APU ALTN CONT	49-61-11		001-099
B034	C01390	CB-APU MN BAT CONT	49-61-11		115-199
B035	C04290	CB-W/W FIRE TEST	26-17-11		ALL
C019	C04478	CB-LANDING GEAR POS SYS 2 ALTN	32-61-11		ALL
C020	C01175	CB-LANDING GEAR POS SYS 1	32-61-11		001-099
C020	C04085	CB-EQUIP COOL SMOKE DET/CONT	21-58-12		ALL
C021	C01121	CB-PROBE HEAT IND PITOT R	30-31-12		ALL

CIRCUIT BREAKER LIST

D280N032

91-02-00

Section P011-02

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Panel/Access Door		Description	Diagram		Effectivity
Grid No	Ckt Bkr	Description	Diagram		
P011-02		PNL ASSY-CIRCUIT BREAKER (continued)	91-02-12		ALL
	C0022	C00548 CB-PASS ADRS AMPL	23-31-11		ALL
	C0023	C00551 CB-INTERPHONE CABIN SERVICE	23-42-11		115-199
	C0024	C00551 CB-INTERPHONE CABIN SERVICE	23-42-11		001-099
	C0025	C00552 CB-INTERPHONE CAPT	23-51-11		001-099
	C0025	C04255 CB-INTERPHONE FLT AMPL ASP 1 BAT PWR	23-51-11		115-199
	C0026	C00553 CB-INTERPHONE F/O AUDIO	23-51-21		001-099
	C0026	C04257 CB-INTERPHONE ASP 2 BAT PWR	23-51-21		115-199
	C0027	C01147 CB-ENG ANTI-ICE L	30-21-11		ALL
	C0028	C01148 CB-ENG ANTI-ICE R	30-21-11		ALL
	C0029	C01132 CB-WING ANTI-ICE	30-11-11		ALL
	C0030	C01175 CB-LANDING GEAR POS SYS 1	32-61-11		115-199
	C0031	C01183 CB-LANDING GEAR ANTI-SKID 2-6	32-42-11		001-099
	C0031	C01183 CB-LDG GEAR ANTI-SKID 2-6	32-42-11		115-199
	C0032	C01184 CB-LANDING GEAR ANTI-SKID 3-7	32-42-11		ALL
	C0033	C01058 CB-FUEL DC PUMP APU	28-25-11		ALL
	C0034	C01048 CB-FUEL QTY 1	28-21-11		001-099
	C0034	C01048 CB-FUEL QTY L	28-21-11		115-199
	C0035	C01303 CB-EMERGENCY CHARGER ALT L	33-51-11		ALL
	C0036	C01310 CB-EMERGENCY CHARGER ALT R	33-51-11		ALL
	D0019	C01510 CB-ENGINES START CONT L	80-11-11		ALL
	D0020	C01511 CB-ENGINES START CONT R	80-11-21		ALL
	D0021	C04113 CB-ENGINES HP BLD VLV L	75-31-11		ALL
	D0022	C04114 CB-ENGINES HP BLD VLV R	75-31-11		ALL
	D0023	C04151 CB-STBY IND	77-12-11		ALL
	D0024	C04152 CB-ENGINES STBY IND 2	77-12-11		115-199
	D0024	C04476 CB-FWD FUEL CROSSFEED VALVE	28-22-31		009-099
	D0025	C04281 CB-PARK BRAKE GND IND	32-44-11		115-199
	D0025	C04477 CB-AFT FUEL CROSSFEED VALVE	28-22-31		009-099
	D0026	C04061 CB-RAT AUTO CONT	29-21-31		ALL
	D0027	C04216 CB-RAT AUTO PWR	29-21-31		ALL
	D0028	C04023 CB-HYDRAULICS ENG PUMP SUPPLY L	29-11-11		ALL
	D0029	C04025 CB-HYDRAULICS ENG PUMP SUPPLY RIGHT	29-11-21		001-099
	D0029	C04025 CB-HYDRAULICS ENG PUMP SOV R	29-11-21		115-199
	D0031	C04054 CB-HYDRAULICS PTU CONT	29-22-11		ALL
	D0032	C04175 CB-FUEL DISAGREE ENABLE APU	28-25-21		ALL
	D0033	C04133 CB-FUEL DISAGREE ENABLE L	28-22-21		ALL
	D0034	C04132 CB-FUEL DISAGREE ENABLE R	28-22-21		ALL
	D0035	C01052 CB-FUEL DC PUMP CONT	28-25-11		ALL
	D0036	C01051 CB-FUEL CROSSFEED	28-22-31		001-008, 115-199
	D0036	C04485 CB-FUEL XFEED IND	28-22-31		009-099

CIRCUIT BREAKER LIST

D280N032

91-02-00

Section P011-02

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Panel/Access Door		Description	Diagram		
Grid No	Ckt Bkr	Description	Diagram	Effectivity	
P011-02	PNL ASSY-CIRCUIT BREAKER (continued)		91-02-12	ALL	
E020	C00515	CB-FLT CONT CMPTR PWR C	22-11-31	ALL	
E021	C00524	CB-FLT CONT CMPTR SERVO C	22-11-32	ALL	
E022	C00581	CB-IAS MACH R	34-13-21	ALL	
E023	C00585	CB-ALTM R	34-13-21	ALL	
E024	C00594	CB-ADI R	34-22-26	ALL	
E025	C00634	CB-EFIS CONT PNL R	34-22-26	ALL	
E026	C00587	CB-VSI R	34-22-92	ALL	
E027	C00589	CB-HSI R	34-22-26	ALL	
E028	C04423	CB-ATC ANT SWITCH	34-53-21	ALL	
E029	C00598	CB-FMCS CDU R	34-61-21	ALL	
E030	C00610	CB-FMCS CMPTR R	34-61-21	ALL	
E031	C00605	CB-ILS R	34-31-21	001-099	
E031	C04601	CB-MMR R	34-31-21	115-199	
E032	C00583	CB-DME R	34-55-21	ALL	
E033	C00596	CB-VOR R	34-51-21	ALL	
E034	C00517	CB-MODE CONT PNL R	22-11-22	ALL	
E035	C00514	CB-FLT CONT CMPTR PWR R	22-11-21	ALL	
E036	C00523	CB-FLT CONT CMPTR SERVO R	22-11-22	ALL	
F019	C01525	CB-STAB POS MOD C	27-48-21	ALL	
F020	C00602	CB-RAD ALTM C	34-33-31	ALL	
F021	C00613	CB-IRS C	34-21-31	ALL	
F022	C00612	CB-IRS R	34-21-21	ALL	
F023	C04260	CB-RMI R	34-22-93	115-199	
F024	C00623	CB-EFIS DSPL SW R	34-22-26	ALL	
F025	C00636	CB-RDMI R	34-22-91	001-099	
F025	C04240	CB-RBA,R	34-22-93	115-199	
F026	C00601	CB-RAD ALTM R	34-33-21	ALL	
F027	C00630	CB-FMC DATA BASE LOADER	34-61-15	009-099	
F027	C04118	CB-ADF R	34-57-21	115-199	
F028	C04052	CB-ATC R	34-53-21	ALL	
F029	C00638	CB-EFIS SYM GEN R	34-22-26	ALL	
F030	C00626	CB-AIR DATA CMPTR R	34-12-21	ALL	
F031	C00003	CB-AIR DATA AOA SENSOR R	34-12-21	ALL	
F032	C00004	CB-AIR DATA BARO CORRECT R	34-12-21	ALL	
F033	C00640	CB-FMC TUNING R (DEL SB 34-0427)	34-61-25	001	
F033	C00640	CB-FMC TUNING R	34-61-25	ALL	
F033	C00640	CB-FMC TUNING R - DELETE (SB 34-0414)	34-61-25	115-199	
F033	C00726	CB-FMS SW, R (SB 34-0427)	34-61-25	001	
F033	C00726	CB-FMS SW, R (SB 34-0414)	34-61-25	115-199	
F034	C01561	CB-YAW DAMPER R	22-21-21	ALL	

CIRCUIT BREAKER LIST

D280N032

91-02-00

Section P011-02

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Panel/Access Door		Description	Description	Diagram	Effectivity
Grid No	Ckt Bkr			Diagram	
P011-02		PNL ASSY-CIRCUIT BREAKER (continued)		91-02-12	ALL
G021	C04210	CB-FLAP/SLAT ELEC UNIT 3 PWR		27-81-11	001-099
G021	C04210	CB-FSEU 3 PWR		27-81-11	115-199
G022	C01540	CB-FLAP/SLAT ELEC UNIT 3 CONT		27-81-11	ALL
G023	C01038	CB-FLAP/SLAT ELEC UNIT 3 CONT		27-81-11	ALL
G024	C01526	CB-STAB POS MOD R		27-48-21	ALL
G027	C01535	CB-FLT CONT ELEC 2R AC		27-09-11	001-099
G027	C01535	CB-CSEU 2R AC		27-09-11	115-199
G028	C01532	CB-FLT CONT ELEC 2R DC		27-09-11	001-099
G028	C01532	CB-CSEU 2R DC		27-09-11	115-199
G029	C00554	CB-INTERPHONE CAPT AUDIO		23-51-11	001-099
G029	C04256	CB-INTERPHONE FLT AMPL ASP 1 R PWR		23-51-11	115-199
G030	C00557	CB-INTERPHONE OBSR CAPT		23-51-21	001-099
G030	C04258	CB-INTERPHONE ASP 2 R PWR		23-51-11	115-199
G031	C00545	CB-VHF COMM R		23-12-21	ALL
G034	C03006	CB-HF COMM R		23-11-21	ALL
H019	C01009	CB-STAB TRIM POS IND R		27-48-11	ALL
H020	C01018	CB-STAB TRIM CONT R		27-41-21	ALL
H023	C04212	CB-FLAP/SLAT ALTN DR ARM		27-51-21	ALL
H024	C04271	CB-FLAP/SLAT SHUTOFF 2		27-51-31	ALL
H028	C04034	CB-FLT/CONT S/O TAIL R		27-23-11	ALL
H030	C04364	CB-DC,VIDEO SYSTEM CONT		23-32-02	ALL
H031	C00560	CB-GND CALL		23-43-11	ALL
H033	C00532	CB-VOICE RECORDER		23-71-11	ALL
H035	C00568	CB-AURAL WARN SPKR R		31-51-12	ALL

CIRCUIT BREAKER LIST

D280N032

91-02-00

Section P011-02

Page 4 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Panel/Access Door	Description		Diagram	
Grid No	Ckt Bkr	Description	Diagram	Effectivity
P011-03	PNL ASSY-CIRCUIT BREAKER		91-02-13	ALL
H010	C01022	CB-FLAP LOAD RELIEF	27-51-51	ALL
J002	C04078	CB-EICAS CMPTR L	31-41-11	ALL
J003	C04081	CB-EICAS UPPER IND	31-41-11	ALL
J007	C00561	CB-FLIGHT RECORDER AC	31-31-01	ALL
J008	C00578	CB-FLIGHT RECORDER DC	31-31-11	ALL
J010	C04283	CB-PCU MON SENSOR	27-23-21	ALL
J011	C04270	CB-PCU MON MOD	27-23-21	ALL
J012	C04032	CB-ELEVATOR LIMIT	27-31-22	ALL
J013	C04101	CB-ELEVATOR POS L	27-38-11	ALL
J014	C04099	CB-AILERON POS L	27-18-11	ALL
J015	C01035	CB-AILERON TRIM	27-11-11	ALL
J016	C01005	CB-RUDDER POS	27-28-11	ALL
J017	C01034	CB-RUDDER TRIM POS	27-28-13	ALL
K002	C01464	CB-LEFT ENGINE VIB MONITOR	77-31-11	ALL
K005	C01480	CB-LEFT ENGINE T/R IND	78-36-11	115-199
K009	C01498	CB-LEFT ENGINE OIL PRESS	79-32-11	ALL
K014	C04024	CB-HYDRAULICS LEFT ENGINE PUMP DEPRESS	29-11-11	001-099
K014	C04024	CB-HYDRAULICS L ENG PUMP VLV DEPRESS	29-11-11	115-199
K015	C04043	CB-HYDRAULICS ELEC PUMP C-1	29-11-31	ALL
K016	C04044	CB-HYDRAULICS ELEC PUMP R	29-11-22	ALL
K017	C01080	CB-HYDRAULICS SYSTEM PRESS L	29-31-11	ALL
K018	C01082	CB-HYDRAULICS SYSTEM PRESS C	29-31-11	ALL
L001	C01430	CB-LEFT ENGINE IGN 1	74-31-11	ALL
L004	C04119	CB-LEFT ENGINE EEC LIMITER	73-21-11	ALL
L005	C04129	CB-LEFT ENGINE EEC SUPV	73-21-12	ALL
L007	C04107	CB-LEFT ENGINE IDLE CONT	76-11-21	ALL
L009	C04103	CB-LEFT ENGINE EPR XMTR	77-11-11	ALL
L012	C01412	CB-FUEL TEMP IND(MR69018-002 INOP)	28-43-11	115-199
L013	C04679	CB FUEL-AUTO S/O OVRD CTR L (SB 28A0081)	28-22-11	ALL
M003	C01247	CB-NOSE GEAR LANDING L	33-42-11	ALL
M004	C01248	CB-NOSE GEAR LANDING R	33-42-11	001-099
M005	C01249	CB-WING LANDING L	33-42-11	ALL
M006	C01276	CB-RUNWAY TURNOFF L	33-42-21	ALL
M007	C01226	CB-ANTI-COLL WHITE	33-44-21	ALL
M008	C01271	CB-TAXI LT	33-42-31	001-099
M011	C00673	CB-LEFT PACK AUTO PWR	21-51-12	ALL
M015	C04038	CB-RIGHT PACK STANDBY PWR	21-51-23	ALL
M017	C00709	CB-PACK FLOW IND	21-52-31	ALL
N001	C01242	CB-INSTRUMENT & PANEL AISLE STAND	33-13-51	ALL
N002	C01237	CB-INSTRUMENT & PANEL CAPT	33-13-11	ALL

CIRCUIT BREAKER LIST

D280N032

91-02-00

Section P011-03

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Panel/Access Door		Description	Diagram		Effectivity
Grid No	Ckt Bkr	Description	Diagram		
P011-03		PNL ASSY-CIRCUIT BREAKER (continued)	91-02-13		ALL
N004	C01241	CB-INSTRUMENT & PANEL OVHD	33-13-31		ALL
N005	C01244	CB-OVHD C/B PNL	33-13-61		ALL
N006	C01289	CB-F/O PNL FLOOD	33-11-11		ALL
N007	C01252	CB-CHART TABLE	33-14-21		ALL
N008	C04376	CB-PASS CALL/LAV SMOKE,L	33-25-11		ALL
N009	C04375	CB-PASS CALL/LAV SMOKE,R	33-25-21		ALL
N011	C00705	CB-EQUIP COOLING FAN CONT AFT EXH XFR	21-58-21		ALL
N012	C04059	CB-FAN CONTROL FWD CARGO	21-43-11		115-199
N013	C04069	CB-EQUIP COOLING LO FLOW DET	21-58-11		001-099
N015	C00686	CB-CABIN ALT/PRESS AUTO 1	21-31-11		ALL
N017	C04059	CB-FAN CONTROL FWD CARGO	21-43-11		001-099
N017	C04069	CB-EQUIP COOLING LO FLOW DET	21-58-11		115-199
N018	C04071	CB-AFT CARGO HEAT	21-44-11		ALL
P001	C01297	CB-L IND LTS 1	33-16-11		ALL
P002	C01298	CB-L IND LTS 2	33-16-21		ALL
P005	C01290	CB-IND LTS DIM CONT	33-16-11		ALL
P006	C04087	CB-SIDEWALL	33-13-71		115-199
P007	C04280	CB-GLARESHIELD FLOOD	33-11-21		ALL
P009	C01254	CB-PASS SIGN CONT	33-24-11		ALL
P014	C00660	CB-RECIRC CARGO FIRE CONT LEFT	21-25-11		ALL
P015	C00670	CB-CABIN TRIM AIR	21-61-51		ALL
P016	C00667	CB-CABIN ZONE CNTLR	21-61-51		ALL
P017	C04019	CB-CABIN ZONE TEMP IND	21-65-11		ALL
Q006	C04224	CB-F/O INSTR TRANSFER CONT	24-51-72		ALL
Q007	C04226	CB-F/O INSTR TRANSFER ALTN BUS A	24-51-72		ALL
Q008	C04228	CB-F/O INSTR TRANSFER ALTN BUS B	24-51-72		ALL
Q009	C04230	CB-F/O INSTR TRANSFER ALTN BUS C	24-51-72		ALL
Q010	C01339	CB-ENG BLEED CONT L	36-11-11		ALL
Q015	C04221	CB-DUCT PRESS IND PWR	36-21-11		ALL
Q016	C01332	CB-DUCT PRESS IND L	36-21-11		001-099
Q016	C01332	CB-DUCT PRESS XMTR L	36-21-11		115-199
Q017	C04207	CB-DUCT LEAK DET L	26-18-11		ALL
Q018	C04196	CB-HI STAGE SW OVER L	36-11-12		ALL
R002	C04126	CB-ENG START LD SHD RESET	24-51-71		ALL
R003	C00824	CB-CAT III ISOL BUS L	24-51-31		ALL
R004	C00822	CB-UTIL BUS L	24-51-14		ALL
R005	C01400	CB-F/D DOOR LOCK	52-51-11		ALL
R006	C04356	CB-L AC BUS SENSE RELAY (REF 24-51-11)	24-25-11		ALL
R012	C01136	CB-RAIN REPEL R (INOP)	30-43-11		ALL
R013	C01143	CB-WSHLD WIPER L	30-42-11		ALL

CIRCUIT BREAKER LIST

D280N032

91-02-00

Section P011-03

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Panel/Access Door		Description		Diagram	Effectivity
Grid No	Ckt Bkr	Description	Diagram	Effectivity	
P011-03		PNL ASSY-CIRCUIT BREAKER (continued)	91-02-13	ALL	
	R014	C04298 CB-ENG PROBE HTR L	30-34-21	ALL	
	R015	C01128 CB-WINDOW HEAT TEST	30-41-11	ALL	
	R016	C04308 CB-PROBE HEAT IND ENG L	30-34-21	ALL	
	S001	C00564 CB-AIDS SENSOR	31-31-01	ALL	
	S003	C00520 CB-MAINT CONT DSPL	22-41-11	001-099	
	S003	C00743 CB-GALLEY G4B	25-31-33	001-099	
	S005	C00743 CB-GALLEY AFT	25-31-33	115-199	
	S006	C00520 CB-MAINT CONT DSPL	22-41-11	115-199	
	S006	C03003 CB-LAV FLUSH MOTOR A	38-32-11	001-099	
	S008	C03003 CB-LAV FLUSH MOTOR A	38-32-11	115-199	
	S008	C03004 CB-LAV FLUSH MOTOR B	38-32-11	001-099	
	S009	C03043 CB-LAV FLUSH MOTOR S	38-32-11	001-099	
	S011	C03004 CB-LAV FLUSH MOTOR B	38-32-11	115-199	
	S013	C01180 CB-LANDING GEAR BRAKE PRESS IND	32-41-11	ALL	
	S014	C01176 CB-LDG GEAR AUTOBK ANTISKID TEST IND 1	32-42-11	ALL	
	S015	C01182 CB-LANDING GEAR AIR/GND SYS 1	32-09-11	ALL	
	S016	C01181 CB-LANDING GEAR BRAKE TEMP	32-46-11	115-199	
	S017	C04178 CB-LANDING GEAR DOORS CLOSED GROUND ACS	32-12-12	ALL	
	S018	C01171 CB-LANDING GEAR ANTISKID 1-5	32-42-11	ALL	

CIRCUIT BREAKER LIST

D280N032

91-02-00

Section P011-03

Page 3 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Panel/Access Door		Description	Diagram	Effectivity
Grid No	Ckt Bkr	Description		
P011-04	PNL ASSY-CIRCUIT BREAKER		91-02-14	ALL
J021	C04209	CB-STICK SHAKER R	27-32-21	ALL
J022	C04102	CB-ELEV POS R	27-38-11	ALL
J023	C04100	CB-AILERON POS R	27-18-11	ALL
J024	C00766	CB-FIRE DET ALTN PWR CARGO	26-16-11	ALL
J025	C00765	CB-FIRE DET ALTN PWR APU	26-15-11	ALL
J026	C00763	CB-FIRE DET ALTN PWR ENG L	26-11-11	ALL
J027	C00764	CB-FIRE DET ALTN PWR ENG R	26-11-21	ALL
J029	C04079	CB-EICAS CMPTR R	31-41-21	ALL
J030	C04082	CB-EICAS LOWER IND	31-41-21	ALL
J031	C04189	CB-EICAS DISPLAY SW	31-41-21	ALL
J032	C04094	CB-EICAS PILOTS DSP	31-41-19	ALL
J033	C00565	CB-WARN ELEX A	31-51-11	ALL
J034	C04459	CB-ACMS	31-31-02	001-099
J035	C00574	CB-CLOCK IND RIGHT	31-25-11	ALL
K019	C04192	CB-HYDRAULICS QTY CTR	29-33-11	ALL
K020	C01101	CB-HYDRAULICS QTY L	29-33-11	ALL
K021	C04193	CB-HYDRAULICS QTY R	29-33-11	ALL
K022	C04292	CB-HYDRAULICS RESERVE BRAKE SOURCE	29-21-32	ALL
K023	C04026	CB-HYDRAULICS R ENG PUMP DEPRESS	29-11-21	001-099
K023	C04026	CB-HYDRAULICS R ENG PUMP VLV DEPRESS	29-11-21	115-199
K024	C04014	CB-HYDRAULICS ELEC PUMP C-2	29-11-31	ALL
K025	C04045	CB-HYDRAULICS ELEC PUMP L	29-11-12	ALL
K026	C01081	CB-HYDRAULICS PRESSURE SYSTEM R	29-31-11	ALL
K028	C04317	CB-RIGHT ENGINE VIB MONITOR	77-31-11	ALL
K032	C04470	CB-SYNC-LOCK-R	78-34-61	ALL
K033	C04471	CB-T/R CONT-R	78-34-21	ALL
K035	C01499	CB-RIGHT ENGINE OIL PRESS	79-32-11	ALL
L016	C04104	CB-RIGHT ENGINE EPR XMTR	77-11-11	115-199
L019	C01053	CB-FUEL QTY 2	28-21-11	001-099
L019	C01053	CB-FUEL QTY R	28-21-11	115-199
L025	C04680	CB FUEL-AUTO S/O OVRD CTR R (SB 28A0081)	28-22-11	ALL
L028	C01432	CB-RIGHT ENGINE IGN 1	74-31-21	ALL
L031	C04127	CB-RIGHT ENGINE EEC LIMITER	73-21-21	ALL
L032	C04130	CB-RIGHT ENGINE EEC SUPV	73-21-22	ALL
L033	C04108	CB-RIGHT ENGINE IDLE CONT	76-11-21	ALL
L036	C04104	CB-RIGHT ENGINE EPR XMTR	77-11-11	001-099
M019	C00674	CB-RIGHT PACK AUTO PWR	21-51-22	ALL
M024	C04036	CB-LEFT PACK STBY PWR	21-51-13	ALL
M030	C01248	CB-NOSE GEAR LANDING R	33-42-11	115-199
M031	C01202	CB-LDG & TAXI CONT	33-42-11	ALL

CIRCUIT BREAKER LIST

D280N032

91-02-00

Section P011-04

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Panel/Access Door	Description		Diagram		Effectivity
	Grid No	Ckt Bkr	Description	Diagram	
P011-04			PNL ASSY-CIRCUIT BREAKER (continued)	91-02-14	ALL
	M032	C01250	CB-WING LANDING R	33-42-11	ALL
	M033	C01277	CB-RUNWAY TURNOFF R	33-42-21	ALL
	M034	C01225	CB-ANTI-COLL RED	33-44-11	ALL
	M035	C01227	CB-WING ILLUM	33-41-11	ALL
	N021	C04072	CB-FAN CONT AFT CARGO	21-44-11	115-199
	N022	C04072	CB-FAN CONT AFT CARGO	21-44-11	001-099
	N024	C00701	CB-CABIN ALTITUDE CONTROL AUTO 2	21-31-21	ALL
	N025	C04184	CB-ZONE TEMP CONT VLV CL FLT DECK	21-61-11	001-099
	N025	C04184	CB-ZONE TRIM VLV CLOSE F/D	21-61-11	115-199
	N026	C04185	CB-ZONE TEMP CONT VLV CL FWD	21-61-21	001-099
	N026	C04185	CB-ZONE TRIM VLV CLOSE FWD	21-61-21	115-199
	N027	C04186	CB-ZONE TEMP CONT VLV CL AFT	21-61-31	001-099
	N027	C04186	CB-ZONE TRIM VLV CLOSE AFT	21-61-31	115-199
	N028	C01239	CB-INST & PANEL F/O	33-13-21	ALL
	N030	C01240	CB-INST & PANEL GLARESHIELD	33-13-41	ALL
	N031	C01251	CB-MAP	33-14-11	ALL
	N032	C01281	CB-UTILITY	33-14-31	ALL
	N033	C01288	CB-CAPT PNL FLOOD	33-11-11	ALL
	N034	C01287	CB-FLOOD AISLE STAND	33-11-21	001-099
	N035	C01302	CB-EMERGENCY CHARGER L	33-51-11	ALL
	N036	C01280	CB-EMERGENCY CHARGER R	33-51-11	ALL
	P020	C04253	CB-FLT DECK FAN	21-61-11	115-199
	P021	C04021	CB-ZONE FAN FWD	21-61-21	115-199
	P022	C04020	CB-ZONE FAN AFT	21-61-31	115-199
	P023	C00661	CB-RECIRC CARGO FIRE CONT RIGHT	21-25-11	ALL
	P025	C04029	CB-ZONE DUCT OVHT F/D	21-61-11	ALL
	P026	C04030	CB-ZONE DUCT OVHT FWD	21-61-21	ALL
	P027	C04031	CB-ZONE DUCT OVHT AFT	21-61-31	ALL
	P028	C01273	CB-R IND LTS 1	33-16-31	ALL
	P029	C01284	CB-R IND LTS 2	33-16-41	ALL
	P032	C04235	CB-SPARE LAMP TEST	33-14-51	115-199
	Q019	C01340	CB-R ENG BLEED CONT	36-11-21	ALL
	Q022	C01336	CB-APU BLEED PWR	36-11-41	ALL
	Q023	C01333	CB-APU BLEED CONT	36-11-41	ALL
	Q024	C01342	CB-DUCT PRESS IND R	36-21-11	001-099
	Q024	C01342	CB-DUCT PRESS XMTR R	36-21-11	115-199
	Q025	C04208	CB-DUCT LEAK DET R	26-18-11	ALL
	Q026	C04261	CB-DUCT LEAK CONT	26-18-11	ALL
	Q027	C04197	CB-HI STAGE SW OVER R	36-11-22	ALL
	Q028	C01294	CB-POSITION LT LEFT	33-43-11	ALL

CIRCUIT BREAKER LIST

D280N032

91-02-00

Section P011-04

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Panel/Access Door	Description		Diagram	Effectivity
	Grid No	Ckt Bkr Description		
P011-04	PNL ASSY-CIRCUIT BREAKER (continued)		91-02-14	ALL
	Q030	C01314 CB-POSITION LT RIGHT	33-43-11	ALL
	Q032	C01287 CB-FLOOD AISLE STAND	33-11-21	115-199
	Q033	C04225 CB-CAPT INSTR XFR CONT	24-51-72	ALL
	Q034	C04227 CB-CAPT INSTR ALT BUS A	24-51-72	ALL
	Q035	C04229 CB-CAPT INSTR ALT BUS B	24-51-72	ALL
	Q036	C04231 CB-CAPT INSTR ALT BUS C	24-51-72	ALL
	R019	C04313 CB-ICE DETECTOR	30-81-11	010-099
	R021	C01145 CB-RAIN REPEL L (INOP)	30-43-11	ALL
	R022	C01144 CB-WSHLD WIPER R	30-42-11	ALL
	R023	C04299 CB-ENG PROBE HTR R	30-34-22	ALL
	R024	C04309 CB-PROBE HEAT IND ENG R	30-34-22	ALL
	R025	C04131 CB-PROBE HEAT IND TAT	30-33-11	ALL
	R027	C04195 CB-PROBE HEAT IND AOA R	30-32-11	ALL
	R029	C04357 CB-R AC BUS SENSE RELAY (REF 24-51-21)	24-25-11	ALL
	R030	C00825 CB-CAT III BUS ISOL R	24-51-31	ALL
	R031	C00823 CB-UTIL BUS R	24-51-24	ALL
	R032	C00803 CB-BPCU SEC	24-41-11	ALL
	R033	C04144 CB-DOOR IND	52-71-11	ALL
	R034	C04183 CB-DOOR GIRT BAR ENT DIM	25-66-11	ALL
	R036	C04223 CB-PROX SW TEST	32-09-11	ALL
	S019	C01170 CB-LANDING GEAR AIR/GND SYS 2	32-09-12	ALL
	S020	C01174 CB-LANDING GEAR LEVER LOCK	32-31-11	ALL
	S021	C01173 CB-LDG GEAR AUTOBK ANTISKID TEST IND 2	32-42-12	ALL
	S022	C01172 CB-LANDING GEAR ANTISKID 4-8	32-42-11	ALL
	S023	C04279 CB-LANDING GEAR POS SYS 2	32-61-11	ALL
	S025	C03011 CB-LAV FLUSH MOTOR C	38-32-11	115-199
	S027	C03011 CB-LAV FLUSH MOTOR C	38-32-11	001-099
	S028	C03012 CB-LAV FLUSH MOTOR D	38-32-11	115-199
	S030	C01355 CB-POTABLE WATER CONT FLT	38-14-11	ALL
	S030	C03012 CB-LAV FLUSH MOTOR D	38-32-11	001-099
	S031	C01320 CB-OXYGEN PRESS	35-11-13	115-199
	S033	C01320 CB-OXYGEN PRESS	35-11-13	001-099
	S034	C00740 CB-GALLEYS FWD	25-31-11	001-099
	S034	C00741 CB-GALLEYS MID FWD	25-31-21	115-199
	S035	C00795 CB-FIRE DET CARGO FAN CONT	26-16-21	ALL
	S036	C00794 CB-FIRE DET CARGO FAN PWR	26-16-21	ALL

CIRCUIT BREAKER LIST

D280N032

91-02-00

Section P011-04

Page 3 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Panel/Access Door		Description		Diagram	
Grid No	Ckt Bkr	Description		Diagram	Effectivity
P026-00		PNL-LIGHTING EQUIPMENT		33-16-11	ALL
A001	C04162	CB-R2B SEC		33-16-11	ALL
A003	C04167	CB-S2 SEC		33-16-11	001-099
A004	C04167	CB-S2 SEC		33-16-11	115-199
A006	C04157	CB-L AUTOBRT SEC		33-16-11	ALL
B001	C04160	CB-R1B SEC		33-16-11	ALL
B002	C04161	CB-R2A SEC		33-16-11	ALL
B003	C04165	CB-S4 SEC		33-16-61	ALL
B004	C04166	CB-S3 SEC		33-16-11	ALL
B005	C04155	CB-L2A SEC		33-16-11	ALL
B006	C04156	CB-L2B SEC		33-16-11	ALL
C001	C04158	CB-R NEUT SEC		33-16-11	ALL
C002	C04159	CB-R1A SEC		33-16-11	ALL
C003	C04163	CB-BAT NEUT SEC		33-16-11	ALL
C004	C04164	CB-S1 SEC		33-16-11	ALL
C005	C04153	CB-L NEUT SEC		33-16-11	ALL
C006	C04154	CB-L1 SEC		33-16-11	ALL

CIRCUIT BREAKER LIST

D280N032

91-02-00

Section P026-00

Page 1 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Panel/Access Door		Description		Diagram	
Grid No	Ckt Bkr	Description		Diagram	Effectivity
P031-00		PANEL-LEFT GEN PWR		91-02-17	ALL
		C00901	CB-L GEN	24-22-11	ALL
		C00902	CB-L BUS TIE	24-22-12	ALL
A001		C03015	CB-MISC EQPT PWR L	24-51-11	ALL
A002		C00311	CB-UTIL BUS LEFT	24-51-14	ALL
A003		C03027	CB-UTIL BUS GALLEYS L	24-21-14	115-199
A006		C00818	CB-L GEN VM	24-28-11	ALL

CIRCUIT BREAKER LIST

D280N032

91-02-00

Section P031-00

Page 1 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Panel/Access Door		Description		Diagram	
Grid No	Ckt Bkr	Description		Diagram	Effectivity
P032-00		PANEL-R GEN PWR		91-02-18	ALL
I I		C00903	CB-R GEN	24-22-21	ALL
		C00904	CB-R BUS TIE	24-22-22	ALL
	A004	C00819	CB-R GEN VM	24-28-11	ALL
	A005	C03026	CB-UTIL BUS GALLEYS R	24-21-24	ALL
	A006	C03000	CB-APU START TRU POWER	24-32-41	ALL
	A007	C00315	CB-UTIL BUS RIGHT	24-21-24	ALL
	A008	C00316	CB-R GEN GND SVCE BUS	24-51-52	ALL
	A009	C03016	CB-MISC EQPT BUS R	24-51-21	ALL

CIRCUIT BREAKER LIST

D280N032

91-02-00

Section P032-00

Page 1 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Panel/Access Door	Description		Diagram	
Grid No	Ckt Bkr	Description	Diagram	Effectivity
P034-00	PANEL-APU/EXT POWER		91-02-20	ALL
	C00905	CB-AUX PWR	24-22-41	ALL
A007	C04180	CB-AFT CARGO LOADER CONT	25-51-21	115-199
AA01	C00360	CB-1 CARGO DOOR	52-34-11	ALL
AA02	C00361	CB-2 CARGO DOOR	52-35-11	ALL
AA03	C04086	CB-FILL CONT LAV	38-32-21	ALL
AA04	C01356	CB-POTW CONT GND	38-14-11	ALL
AA05	C01403	CB-CARGO DOOR CONT	52-34-11	ALL
AA09	C01047	CB-FLNG VALVE-FUEL	28-21-11	ALL
AA10	C01040	CB-FUEL QTY-FUEL	28-21-11	ALL
AA11	C01041	CB-FLNG CONT-FUEL	28-21-11	ALL
AA16	C04291	CB-MN/APU BAT CHGR DET ENABLE	24-34-11	ALL
AB01	C00304	CB-GROUND HANDLING TRU	24-54-61	ALL
AB02	C00320	CB-GROUND POWER BPCU	24-41-11	ALL
AB03	C00815	CB-APU GEN VOLTMETER	24-28-11	ALL
AB04	C00816	CB-EXT PWR VOLTMETER	24-28-11	ALL
AB05	C01206	CB-MN GEAR WHEELWELL SERVICE LIGHTS	33-31-11	ALL
AB06	C01215	CB-LAV SERVICE LIGHTS	33-26-11	ALL
AB07	C01256	CB-APU & TAIL CONE COMPARTMENT LIGHTS	33-31-31	ALL
AB08	C01211	CB-FWD CARGO COMPARTMENT LIGHTS	33-37-11	ALL
AB09	C01210	CB-AFT CARGO COMPARTMENT LIGHTS	33-37-21	ALL
AB10	C01300	CB-AIR COND COMPT HYD SVCE LIGHTS	33-31-21	ALL
AB11	C01266	CB-LEFT SIDEWALL LIGHTS	33-21-31	ALL
AB12	C04211	CB-RIGHT SIDEWALL LIGHTS	33-21-31	ALL
AB16	C03018	CB-CARGO LOADER DRIVE AFT	25-51-21	115-199
BA01	C04359	CB-EMER NIGHT LTS	33-21-51	115-199
BA02	C04360	CB-LAV DOME,OCCUPY LTS ALTN	33-26-11	001-099
BA02	C04360	CB-LAV DOME,OCCUPY LTS ALTN	33-26-11	115-199
BA03	C04366	CB-LIGHTS,EMER ATTEND WORK	33-22-11	ALL
BB02	C04220	CB-OXY PRESS IND	35-11-13	115-199
BB03	C04367	CB-GND-DRAIN MAST HTR	30-71-11	ALL
BC01	C01257	CB-FWD ELEC EQUIP CTR LIGHTS	33-31-41	ALL
BC02	C04146	CB-MAIN ELEC EQUIP CTR LIGHTS	33-31-41	ALL
BD01	C01270	CB-OCCUPY & DOME LAV LIGHTS	33-26-11	ALL
BD02	C04095	CB-THSHD LAV LIGHTS	33-26-31	ALL
BE01	C01296	CB-SEAT BELT SIGNS L	33-24-11	ALL
BE02	C04218	CB-SEAT BELT SIGNS R	33-24-11	ALL
BF01	C04219	CB-NO SMOKING SIGNS L	33-24-11	ALL
BF02	C01253	CB-NO SMOKING SIGNS R	33-24-11	ALL
BG01	C01205	CB-NOSE WHEELWELL LIGHTS	33-31-11	ALL
BG02	C01213	CB-FLT DECK DOME AC LIGHTS	33-11-31	ALL

CIRCUIT BREAKER LIST

D280N032

91-02-00

Section P034-00

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Panel/Access Door		Description		Diagram	
Grid No	Ckt Bkr	Description		Diagram	Effectivity
P034-00		PANEL-APU/EXT POWER (continued)		91-02-20	ALL
	BG03	C01269	CB-FWD ENTRY ATTND LIGHTS	33-22-11	ALL
	BH01	C01203	CB-NIGHT LIGHTS	33-21-51	ALL
	BH01	C04359	CB-EMER NIGHT LTS	33-21-51	001-099
	CA02	C00322	CB-GND SVCE BUS APU	24-51-52	ALL
	CB02	C00321	CB-GND HDLG APU	24-51-61	ALL
	CD02	C00305	CB-GND HDLG EXT PWR	24-51-61	ALL
	CE02	C00306	CB-GND SVCE BUS EXT PWR	24-51-52	ALL
	G002	C00309	CB-GND HDLG BUS	24-51-61	115-199

CIRCUIT BREAKER LIST

D280N032

91-02-00

Section P034-00

Page 2 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Panel/Access Door		Description	Diagram		Effectivity
Grid No	Ckt Bkr	Description	Diagram		
P037-00		PANEL-MISC ELEC EQUIP,R	91-02-26		ALL
		C03046 CB-GALLEY G4A	25-31-31		001-099
		C04362 CB-VIDEO SYSTEM MONITOR AFT-UTIL	23-32-01		115-199
		C04403 CB-MULTIPLEXER	23-34-15		115-199
A005		C03013 CB-GALLEY G1A	25-31-11		001-099
A006		C04440 CB-VIDEO MONITOR FWD-MAIN	23-32-01		ALL
A007		C04441 CB-VIDEO SYSTEM MONITOR AFT MAIN(BUS)	23-32-01		ALL
A008		C04442 CB-AC,VIDEO SYSTEM MAIN(BUS)	23-32-01		ALL
B002		C00301 CB-MAIN BATTERY CHARGER	24-31-11		ALL
B005		C00302 CB-APU BATTERY CHARGER	24-31-41		ALL
B007		C04426 CB-ENT TAPE RPDR	23-34-15		001-099
B008		C04403 CB-MULTIPLEXER	23-34-15		001-099
C002		C03010 CB-AFT CARGO FAN	21-44-11		ALL
C004		C00075 CB-FUELING PANEL DOOR LTS	28-21-11		001-099
C006		C04361 CB-VIDEO MONITOR FWD-UTILITY	23-32-01		001-099
C007		C04361 CB-VIDEO MONITOR FWD-UTILITY	23-32-01		115-199
C007		C04362 CB-VIDEO SYSTEM MONITOR AFT-UTIL	23-32-01		001-099
C008		C04363 CB-AC,VIDEO SYSTEM CONT-UTILITY	23-32-01		ALL
D002		C03023 CB-FWD 2 GALLEY PWR	25-31-13		001-099
D002		C03029 CB-AFT EQPT COOLING FANS SPLY NO.1	21-58-24		115-199
D005		C00333 CB-AFT EQUIP COOLING FAN EXH 2	21-58-21		ALL
D007		C04374 CB-R RECIRC FAN CONT	21-25-11		ALL
D008		C04169 CB-LAV FILL VLV	38-32-21		ALL
E001		C04262 CB-AFT WATERLINE HEATERS	30-71-21		ALL
E002		C04028 CB-TAPE RPDR	23-31-19		ALL
E003		C01124 CB-WINDOW HTR 2L	30-41-12		ALL
E004		C01126 CB-WINDOW HTR 3L	30-41-12		ALL
E005		C00871 CB-GND XFMR	24-53-51		ALL
E006		C04042 CB-SVCE OUTLET E3	25-29-11		ALL
E007		C04247 CB-SVCE OUTLETS E5	25-29-11		ALL
E008		C00630 CB-FMC DATA BASE LOADER	34-61-15		001-008, 115-199
F001		C04134 CB-LAV WATER HEATERS C	38-13-11		ALL
F002		C04135 CB-LAV WATER HEATERS D	38-13-11		ALL
F003		C00700 CB-LO F/O AUX HEATERS	21-45-11		ALL
F004		C00699 CB-HI F/O AUX HEATERS	21-45-11		ALL
F005		C01149 CB-FWD WATERLINE HEATERS	30-71-21		ALL
F006		C01150 CB-MID WATERLINE HEATERS	30-71-21		ALL
F007		C01142 CB-AIR DRAIN MST HEATERS	30-71-11		ALL
G003		C01232 CB-LAV LIGHTS	33-26-11		ALL
G004		C01255 CB-ENTRY & GALLEY LIGHTS	33-22-11		ALL
G005		C04285 CB-ENTRY & GALLEY LIGHTS PWR	33-22-11		115-199

CIRCUIT BREAKER LIST

D280N032

91-02-00

Section P037-00

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Panel/Access Door		Description		Diagram	
Grid No	Ckt Bkr	Description		Diagram	Effectivity
P037-00		PANEL-MISC ELEC EQUIP,R (continued)		91-02-26	ALL
G006	C01218	CB-CEILING LIGHTS L		33-21-11	ALL
G007	C01219	CB-CEILING LIGHTS R		33-21-11	ALL
G008	C01217	CB-CEILING LIGHTS CONT		33-21-11	ALL
H001	C04073	CB-PASS READING LIGHTS FWD RIGHT		33-23-21	ALL
H002	C04076	CB-PASS READING LIGHTS AFT RIGHT		33-23-24	ALL
H003	C04074	CB-PASS READING LIGHTS RIGHT MID FWD		33-23-22	ALL
H004	C04075	CB-PASS READING LIGHTS RIGHT MID AFT		33-23-23	ALL
H005	C01264	CB-SIDEWALL LIGHTS L		33-21-31	ALL
H006	C01265	CB-SIDEWALL LIGHTS R		33-21-31	ALL
H007	C01224	CB-SIDEWALL LIGHTS CONT		33-21-31	ALL
J002	C00392	CB-WINDOW HTR 1R		30-41-12	ALL
J005	C00337	CB-RECIRC FAN R		21-25-11	ALL
K002	C03024	CB-GALLEY PWR MID AFT R		25-31-23	115-199
K005	C03013	CB-GALLEY PWR FWD 1		25-31-11	115-199
K008	C03008	CB-GND SVCE SECT 2		24-51-52	ALL

CIRCUIT BREAKER LIST

D280N032

91-02-00

Section P037-00

Page 2 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Panel/Access Door		Description	Diagram		Effectivity
Grid No	Ckt Bkr	Description	Diagram		
P070-00		PANEL-MISC ELEC EQUIP	91-02-35		ALL
A001	C04001	CB-LAV WTR HTR A	38-13-11		115-199
A002	C04002	CB-LAV WTR HTR B (INOP)	38-13-11		001-099
A002	C04002	CB-LAVATORY WATER HEATER B	38-13-11		115-199
A002	C04341	CB-LAV WTR HTR S	38-13-11		001-099
A003	C01125	CB-WINDOW HTR 2R	30-41-11		ALL
A004	C01127	CB-WINDOW HTR 3R	30-41-11		ALL
A005	C00663	CB-CAPT AUX HTR LO	21-45-11		ALL
A006	C00662	CB-CAPT AUX HTR HI	21-45-11		ALL
B002	C00334	CB-AFT EQUIP COOLING FAN EXH 2	21-58-21		ALL
B005	C03028	CB-AFT EQPT COOLING FANS SPLY NO.2	21-58-24		115-199
B008	C03002	CB-FWD CARGO FAN	21-43-11		ALL
B010	C00060	CB-SMOKE DET BLOWER 1	26-16-21		ALL
B011	C00061	CB-SMOKE DET BLOWER 2	26-16-21		ALL
B012	C00062	CB-SMOKE DET BLOWER 3	26-16-21		ALL
B013	C00063	CB-SMOKE DET BLOWER 4	26-16-21		ALL
B014	C00070	CB-L TANK DEFUELING VALVE	28-26-11		ALL
B015	C00071	CB-R TANK DEFUELING VALVE	28-26-11		ALL
B016	C04373	CB-L RECIRC FAN CONT	21-25-11		ALL
B018	C01259	CB-PASS READING LTS LEFT FWD	33-23-11		ALL
B019	C01292	CB-PASS READING LTS LEFT AFT	33-23-14		ALL
B020	C01260	CB-MID FWD LEFT PASS READING LTS	33-23-12		ALL
B021	C01261	CB-PASS READING LTS MID AFT LEFT	33-23-13		ALL
B022	C04203	CB-LOGO LTS L	33-45-11		ALL
B023	C04204	CB-LOGO LTS R	33-45-11		ALL
C008	C03009	CB-AFT CARGO HTR	21-44-11		ALL
C010	C00336	CB-RECIRC FAN L	21-25-11		ALL
C013	C00391	CB-WINDOW HTR 1L	30-41-11		ALL
C016	C03023	CB-FWD 2 GALLEY PWR	25-31-13		115-199
C019	C03025	CB-MIDAFT GALLEY PWR	25-31-27		115-199

CIRCUIT BREAKER LIST

D280N032

91-02-00

Section P070-00

Page 1 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Panel/Access Door	Description		Diagram		Effectivity
	Grid No	Ckt Bkr	Description	Diagram	
P071-00			PANEL ASSY-HYDRAULIC GENERATOR CONTROL	24-25-11	ALL
I		C03058	CB-HMG L XFR BUS	24-25-12	003-099
I		C03059	CB-HMG R XFR BUS	24-25-12	003-099
I		C03060	CB-HMG INST XFR BUS	24-25-12	003-099
I		C03061	CB-HMG BAT CHGR	24-25-12	003-099
I		C04350	CB-HYD GEN DC VOLT SENSE	24-25-13	001-002, 115-199
I		C04351	CB-HYD GEN AC VOLT SENSE	24-25-13	ALL

CIRCUIT BREAKER LIST

D280N032

91-02-00

Section P071-00

Page 1 End

Oct 09/2008