

91-21-51

HOOKUP LIST

91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
EFFECTIVE PAGES			C00500 cont.			C00900		
	1 thru 45	Oct 09/2008		4	Jan 21/2005		1	Jan 21/2005
	46	BLANK		5	Jan 21/2005		2	Jan 21/2005
B00000	1	Jan 21/2005	R	6	Oct 09/2008	C01000	3	Jan 21/2005
B00100	1	Jan 21/2005		7	Jan 21/2005		1	Jan 21/2005
	2	Jan 21/2005		8	Jan 21/2005		2	Jan 21/2005
B10000	1	Jan 21/2005		9	Jan 21/2005		3	Jan 21/2005
	2	Jan 21/2005	C00600		1	Dec 18/2007	4	Jan 21/2005
B10100	1	Jan 21/2005		2	Dec 18/2007		5	Jan 21/2005
	2	Jan 21/2005		3	Dec 18/2007	C01100	6	Jan 21/2005
B10200	1	Jan 21/2005		4	Jan 21/2005		1	Jan 21/2005
C00000	1	Jan 21/2005	R	5	Oct 09/2008		2	Jan 21/2005
	2	Jan 21/2005		6	Oct 09/2008		3	Jan 21/2005
C00300	1	Jan 21/2005	O	7	Oct 09/2008		4	Jan 21/2005
	2	Jan 21/2005	O	1	Jan 21/2005		5	Jan 21/2005
	3	Jan 21/2005		2	Oct 09/2008	C01200	6	Jan 21/2005
	4	Jan 21/2005		3	Oct 09/2008		1	Jan 21/2005
	5	Jan 21/2005	R	4	Oct 09/2008		2	Jan 21/2005
	6	Jan 21/2005	O	5	Oct 09/2008		3	Jan 21/2005
	7	Jan 21/2005	O	6	Oct 09/2008		4	Jan 21/2005
	8	Jan 21/2005	O	1	Jan 21/2005		5	Jan 21/2005
	9	Jan 21/2005		2	Oct 09/2008		6	Jan 21/2005
	10	Jan 21/2005		3	Oct 09/2008		7	Jan 21/2005
	11	Jan 21/2005	R	4	Oct 09/2008		8	Jan 21/2005
	12	Jan 21/2005	O	5	Oct 09/2008		9	Jan 21/2005
O C00500	1	Oct 09/2008	O	6	Oct 09/2008	R C01300	1	Oct 09/2008
	2	Jan 21/2005		7	Oct 09/2008		2	Oct 09/2008
	3	Jan 21/2005		8	Jan 21/2005		3	Oct 09/2008
			R				4	Oct 09/2008

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280N032

EFFECTIVE PAGES

Page 1
Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

91-21-51 HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
O C01300 cont.			O C04000 cont.			O C04400 cont.		
O C01400	5	Oct 09/2008	O	8	Oct 09/2008	O C04500	3	Oct 09/2008
	1	May 17/2006	O	9	Oct 09/2008	R C04600	1	Oct 09/2008
	2	Jan 21/2005	A C04100	10	Oct 09/2008	O D00000	1	Oct 09/2008
	3	Jan 21/2005	O	1	Oct 09/2008	O	2	Oct 09/2008
	4	Jan 21/2005	O	2	Oct 09/2008	O	3	Oct 09/2008
C01500	1	Dec 18/2007	O	3	Oct 09/2008	O	4	Oct 09/2008
	2	Jan 21/2005	O	4	Oct 09/2008	O	5	Oct 09/2008
	3	Jan 21/2005	O	5	Oct 09/2008	O	6	Oct 09/2008
	4	Jan 21/2005	O	6	Oct 09/2008	O	7	Oct 09/2008
	5	Jan 21/2005	O	7	Oct 09/2008	O	8	Oct 09/2008
C03000	1	Jan 21/2005	O C04200	8	Oct 09/2008	O	9	Oct 09/2008
	2	Jan 21/2005	O	1	Oct 09/2008	O	10	Oct 09/2008
	3	Jan 21/2005	O	2	Oct 09/2008	O	11	Oct 09/2008
	4	Jan 21/2005	O	3	Oct 09/2008	O	12	Oct 09/2008
	5	Jan 21/2005	O	4	Oct 09/2008	O	13	Oct 09/2008
	6	Jan 21/2005	O	5	Oct 09/2008	O	14	Oct 09/2008
	7	Jan 21/2005	O	6	Oct 09/2008	O	15	Oct 09/2008
	8	Jan 21/2005	O	7	Oct 09/2008	O	16	Oct 09/2008
R	9	Oct 09/2008	R	8	Oct 09/2008	O	17	Oct 09/2008
O	10	Oct 09/2008	R	9	Oct 09/2008	O	18	Oct 09/2008
C04000	1	Jan 21/2005	O	10	Oct 09/2008	O	19	Oct 09/2008
	2	Jan 21/2005	R C04300	1	Oct 09/2008	O	20	Oct 09/2008
R	3	Oct 09/2008	R	2	Oct 09/2008	O	21	Oct 09/2008
O	4	Oct 09/2008	R	3	Oct 09/2008	O	22	Oct 09/2008
O	5	Oct 09/2008	O	4	Oct 09/2008	O	23	Oct 09/2008
O	6	Oct 09/2008	O C04400	1	Oct 09/2008	O	24	Oct 09/2008
O	7	Oct 09/2008	O	2	Oct 09/2008			

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280N032

EFFECTIVE PAGES

Page 2
Oct 09/2008

91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D00000 cont.			D00000 cont.			D00000 cont.		
O	25	Oct 09/2008	O	52	Oct 09/2008	O	79	Oct 09/2008
O	26	Oct 09/2008	O	53	Oct 09/2008	O	80	Oct 09/2008
O	27	Oct 09/2008	O	54	Oct 09/2008	O	81	Oct 09/2008
O	28	Oct 09/2008	O	55	Oct 09/2008	O	82	Oct 09/2008
O	29	Oct 09/2008	O	56	Oct 09/2008	O	83	Oct 09/2008
O	30	Oct 09/2008	O	57	Oct 09/2008	O	84	Oct 09/2008
O	31	Oct 09/2008	O	58	Oct 09/2008	O	85	Oct 09/2008
O	32	Oct 09/2008	O	59	Oct 09/2008	O	86	Oct 09/2008
O	33	Oct 09/2008	O	60	Oct 09/2008	O	87	Oct 09/2008
O	34	Oct 09/2008	O	61	Oct 09/2008	O	88	Oct 09/2008
O	35	Oct 09/2008	O	62	Oct 09/2008	O	89	Oct 09/2008
O	36	Oct 09/2008	O	63	Oct 09/2008	O	90	Oct 09/2008
O	37	Oct 09/2008	O	64	Oct 09/2008	O	91	Oct 09/2008
O	38	Oct 09/2008	O	65	Oct 09/2008	O	92	Oct 09/2008
O	39	Oct 09/2008	O	66	Oct 09/2008	O	93	Oct 09/2008
O	40	Oct 09/2008	O	67	Oct 09/2008	O	94	Oct 09/2008
O	41	Oct 09/2008	O	68	Oct 09/2008	O	95	Oct 09/2008
O	42	Oct 09/2008	O	69	Oct 09/2008	O	96	Oct 09/2008
O	43	Oct 09/2008	O	70	Oct 09/2008	O	97	Oct 09/2008
O	44	Oct 09/2008	O	71	Oct 09/2008	O	98	Oct 09/2008
O	45	Oct 09/2008	O	72	Oct 09/2008	R	99	Oct 09/2008
O	46	Oct 09/2008	O	73	Oct 09/2008	R	100	Oct 09/2008
O	47	Oct 09/2008	O	74	Oct 09/2008	R	101	Oct 09/2008
O	48	Oct 09/2008	O	75	Oct 09/2008	O	102	Oct 09/2008
O	49	Oct 09/2008	O	76	Oct 09/2008	O	103	Oct 09/2008
O	50	Oct 09/2008	O	77	Oct 09/2008	O	104	Oct 09/2008
O	51	Oct 09/2008	O	78	Oct 09/2008	O	105	Oct 09/2008

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280N032

EFFECTIVE PAGES

Page 3
Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

91-21-51 HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D00000 cont.			D00000 cont.			D00000 cont.		
O	106	Oct 09/2008	O	133	Oct 09/2008	O	160	Oct 09/2008
O	107	Oct 09/2008	O	134	Oct 09/2008	O	161	Oct 09/2008
O	108	Oct 09/2008	O	135	Oct 09/2008	O	162	Oct 09/2008
O	109	Oct 09/2008	O	136	Oct 09/2008	O	163	Oct 09/2008
O	110	Oct 09/2008	O	137	Oct 09/2008	O	164	Oct 09/2008
R	111	Oct 09/2008	O	138	Oct 09/2008	O	165	Oct 09/2008
O	112	Oct 09/2008	O	139	Oct 09/2008	O	166	Oct 09/2008
O	113	Oct 09/2008	O	140	Oct 09/2008	O	167	Oct 09/2008
R	114	Oct 09/2008	O	141	Oct 09/2008	O	168	Oct 09/2008
R	115	Oct 09/2008	O	142	Oct 09/2008	O	169	Oct 09/2008
R	116	Oct 09/2008	O	143	Oct 09/2008	O	170	Oct 09/2008
R	117	Oct 09/2008	O	144	Oct 09/2008	O	171	Oct 09/2008
R	118	Oct 09/2008	R	145	Oct 09/2008	O	172	Oct 09/2008
O	119	Oct 09/2008	R	146	Oct 09/2008	O	173	Oct 09/2008
O	120	Oct 09/2008	O	147	Oct 09/2008	O D00100	1	Oct 09/2008
O	121	Oct 09/2008	R	148	Oct 09/2008	O	2	Oct 09/2008
R	122	Oct 09/2008	R	149	Oct 09/2008	O	3	Oct 09/2008
O	123	Oct 09/2008	R	150	Oct 09/2008	O	4	Oct 09/2008
O	124	Oct 09/2008	O	151	Oct 09/2008	O	5	Oct 09/2008
O	125	Oct 09/2008	O	152	Oct 09/2008	O	6	Oct 09/2008
O	126	Oct 09/2008	R	153	Oct 09/2008	O	7	Oct 09/2008
O	127	Oct 09/2008	O	154	Oct 09/2008	O	8	Oct 09/2008
O	128	Oct 09/2008	O	155	Oct 09/2008	O	9	Oct 09/2008
O	129	Oct 09/2008	O	156	Oct 09/2008	O	10	Oct 09/2008
O	130	Oct 09/2008	O	157	Oct 09/2008	O	11	Oct 09/2008
O	131	Oct 09/2008	R	158	Oct 09/2008	O	12	Oct 09/2008
O	132	Oct 09/2008	O	159	Oct 09/2008	O	13	Oct 09/2008

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280N032

EFFECTIVE PAGES

Page 4
Oct 09/2008

91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D00100 cont.			D00100 cont.			D00100 cont.		
O	14	Oct 09/2008	O	41	Oct 09/2008	R	68	Oct 09/2008
O	15	Oct 09/2008	R	42	Oct 09/2008	R	69	Oct 09/2008
O	16	Oct 09/2008	O	43	Oct 09/2008	O	70	Oct 09/2008
O	17	Oct 09/2008	O	44	Oct 09/2008	O	71	Oct 09/2008
O	18	Oct 09/2008	O	45	Oct 09/2008	R	72	Oct 09/2008
O	19	Oct 09/2008	R	46	Oct 09/2008	R	73	Oct 09/2008
O	20	Oct 09/2008	O	47	Oct 09/2008	R	74	Oct 09/2008
O	21	Oct 09/2008	O	48	Oct 09/2008	R	75	Oct 09/2008
O	22	Oct 09/2008	O	49	Oct 09/2008	R	76	Oct 09/2008
O	23	Oct 09/2008	O	50	Oct 09/2008	R	77	Oct 09/2008
O	24	Oct 09/2008	R	51	Oct 09/2008	R	78	Oct 09/2008
O	25	Oct 09/2008	O	52	Oct 09/2008	R	79	Oct 09/2008
O	26	Oct 09/2008	O	53	Oct 09/2008	R	80	Oct 09/2008
O	27	Oct 09/2008	R	54	Oct 09/2008	O	81	Oct 09/2008
O	28	Oct 09/2008	O	55	Oct 09/2008	O	82	Oct 09/2008
O	29	Oct 09/2008	O	56	Oct 09/2008	O	83	Oct 09/2008
O	30	Oct 09/2008	O	57	Oct 09/2008	O	84	Oct 09/2008
O	31	Oct 09/2008	O	58	Oct 09/2008	O	85	Oct 09/2008
O	32	Oct 09/2008	O	59	Oct 09/2008	O	86	Oct 09/2008
O	33	Oct 09/2008	O	60	Oct 09/2008	O	87	Oct 09/2008
R	34	Oct 09/2008	O	61	Oct 09/2008	O	88	Oct 09/2008
O	35	Oct 09/2008	O	62	Oct 09/2008	O	89	Oct 09/2008
O	36	Oct 09/2008	O	63	Oct 09/2008	O	90	Oct 09/2008
R	37	Oct 09/2008	O	64	Oct 09/2008	O	91	Oct 09/2008
O	38	Oct 09/2008	O	65	Oct 09/2008	O	92	Oct 09/2008
O	39	Oct 09/2008	O	66	Oct 09/2008	O	93	Oct 09/2008
O	40	Oct 09/2008	R	67	Oct 09/2008	O	94	Oct 09/2008

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280N032

EFFECTIVE PAGES

Page 5
Oct 09/2008

91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D00100 cont.			D00200 cont.			D00200 cont.		
A	95	Oct 09/2008	O	26	Oct 09/2008	O	53	Oct 09/2008
A	96	Oct 09/2008	O	27	Oct 09/2008	O	54	Oct 09/2008
O D00200	1	Oct 09/2008	O	28	Oct 09/2008	O	55	Oct 09/2008
O	2	Oct 09/2008	O	29	Oct 09/2008	O	56	Oct 09/2008
O	3	Oct 09/2008	O	30	Oct 09/2008	O	57	Oct 09/2008
O	4	Oct 09/2008	O	31	Oct 09/2008	O	58	Oct 09/2008
O	5	Oct 09/2008	O	32	Oct 09/2008	O	59	Oct 09/2008
O	6	Oct 09/2008	O	33	Oct 09/2008	O	60	Oct 09/2008
O	7	Oct 09/2008	O	34	Oct 09/2008	O	61	Oct 09/2008
O	8	Oct 09/2008	O	35	Oct 09/2008	O	62	Oct 09/2008
O	9	Oct 09/2008	O	36	Oct 09/2008	O	63	Oct 09/2008
O	10	Oct 09/2008	O	37	Oct 09/2008	O	64	Oct 09/2008
O	11	Oct 09/2008	O	38	Oct 09/2008	O	65	Oct 09/2008
O	12	Oct 09/2008	O	39	Oct 09/2008	O	66	Oct 09/2008
O	13	Oct 09/2008	O	40	Oct 09/2008	O	67	Oct 09/2008
O	14	Oct 09/2008	O	41	Oct 09/2008	O	68	Oct 09/2008
O	15	Oct 09/2008	O	42	Oct 09/2008	O	69	Oct 09/2008
O	16	Oct 09/2008	O	43	Oct 09/2008	O	70	Oct 09/2008
O	17	Oct 09/2008	O	44	Oct 09/2008	O	71	Oct 09/2008
O	18	Oct 09/2008	O	45	Oct 09/2008	O	72	Oct 09/2008
O	19	Oct 09/2008	O	46	Oct 09/2008	O	73	Oct 09/2008
O	20	Oct 09/2008	O	47	Oct 09/2008	O	74	Oct 09/2008
O	21	Oct 09/2008	O	48	Oct 09/2008	O	75	Oct 09/2008
O	22	Oct 09/2008	O	49	Oct 09/2008	O	76	Oct 09/2008
O	23	Oct 09/2008	O	50	Oct 09/2008	O	77	Oct 09/2008
O	24	Oct 09/2008	O	51	Oct 09/2008	O	78	Oct 09/2008
O	25	Oct 09/2008	O	52	Oct 09/2008	O	79	Oct 09/2008

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280N032

EFFECTIVE PAGES

Page 6
Oct 09/2008

91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D00200 cont.			D00300 cont.			D00300 cont.		
O	80	Oct 09/2008	O	9	Oct 09/2008	O	36	Oct 09/2008
O	81	Oct 09/2008	O	10	Oct 09/2008	O	37	Oct 09/2008
O	82	Oct 09/2008	O	11	Oct 09/2008	O	38	Oct 09/2008
O	83	Oct 09/2008	O	12	Oct 09/2008	O	39	Oct 09/2008
O	84	Oct 09/2008	O	13	Oct 09/2008	O	40	Oct 09/2008
O	85	Oct 09/2008	O	14	Oct 09/2008	O	41	Oct 09/2008
O	86	Oct 09/2008	O	15	Oct 09/2008	O	42	Oct 09/2008
O	87	Oct 09/2008	O	16	Oct 09/2008	O	43	Oct 09/2008
O	88	Oct 09/2008	O	17	Oct 09/2008	O	44	Oct 09/2008
O	89	Oct 09/2008	O	18	Oct 09/2008	R	45	Oct 09/2008
O	90	Oct 09/2008	O	19	Oct 09/2008	O	46	Oct 09/2008
O	91	Oct 09/2008	O	20	Oct 09/2008	R	47	Oct 09/2008
O	92	Oct 09/2008	O	21	Oct 09/2008	R	48	Oct 09/2008
O	93	Oct 09/2008	O	22	Oct 09/2008	R	49	Oct 09/2008
O	94	Oct 09/2008	O	23	Oct 09/2008	O	50	Oct 09/2008
O	95	Oct 09/2008	R	24	Oct 09/2008	R	51	Oct 09/2008
O	96	Oct 09/2008	O	25	Oct 09/2008	R	52	Oct 09/2008
O	97	Oct 09/2008	O	26	Oct 09/2008	O	53	Oct 09/2008
O	98	Oct 09/2008	O	27	Oct 09/2008	O	54	Oct 09/2008
O D00300	1	Oct 09/2008	R	28	Oct 09/2008	O	55	Oct 09/2008
O	2	Oct 09/2008	O	29	Oct 09/2008	O	56	Oct 09/2008
O	3	Oct 09/2008	R	30	Oct 09/2008	O	57	Oct 09/2008
O	4	Oct 09/2008	R	31	Oct 09/2008	O	58	Oct 09/2008
O	5	Oct 09/2008	O	32	Oct 09/2008	O	59	Oct 09/2008
O	6	Oct 09/2008	O	33	Oct 09/2008	O	60	Oct 09/2008
O	7	Oct 09/2008	O	34	Oct 09/2008	O	61	Oct 09/2008
O	8	Oct 09/2008	O	35	Oct 09/2008	O	62	Oct 09/2008

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280N032

EFFECTIVE PAGES

Page 7
Oct 09/2008

91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D00300 cont.			D00300 cont.			D00400 cont.		
O	63	Oct 09/2008	O	90	Oct 09/2008	O	20	Oct 09/2008
O	64	Oct 09/2008	O	91	Oct 09/2008	O	21	Oct 09/2008
O	65	Oct 09/2008	O	92	Oct 09/2008	O	22	Oct 09/2008
O	66	Oct 09/2008	O	93	Oct 09/2008	O	23	Oct 09/2008
O	67	Oct 09/2008	O	94	Oct 09/2008	O	24	Oct 09/2008
O	68	Oct 09/2008	O	95	Oct 09/2008	O	25	Oct 09/2008
O	69	Oct 09/2008	O	96	Oct 09/2008	O	26	Oct 09/2008
O	70	Oct 09/2008	O	97	Oct 09/2008	O	27	Oct 09/2008
O	71	Oct 09/2008	O D00400	1	Oct 09/2008	O	28	Oct 09/2008
O	72	Oct 09/2008	O	2	Oct 09/2008	O	29	Oct 09/2008
O	73	Oct 09/2008	O	3	Oct 09/2008	O	30	Oct 09/2008
O	74	Oct 09/2008	O	4	Oct 09/2008	O	31	Oct 09/2008
O	75	Oct 09/2008	O	5	Oct 09/2008	O	32	Oct 09/2008
O	76	Oct 09/2008	O	6	Oct 09/2008	O	33	Oct 09/2008
O	77	Oct 09/2008	O	7	Oct 09/2008	O	34	Oct 09/2008
O	78	Oct 09/2008	O	8	Oct 09/2008	O	35	Oct 09/2008
O	79	Oct 09/2008	O	9	Oct 09/2008	O	36	Oct 09/2008
O	80	Oct 09/2008	O	10	Oct 09/2008	O	37	Oct 09/2008
O	81	Oct 09/2008	O	11	Oct 09/2008	O D00500	1	Oct 09/2008
O	82	Oct 09/2008	O	12	Oct 09/2008	O	2	Oct 09/2008
O	83	Oct 09/2008	O	13	Oct 09/2008	O	3	Oct 09/2008
O	84	Oct 09/2008	O	14	Oct 09/2008	O	4	Oct 09/2008
O	85	Oct 09/2008	O	15	Oct 09/2008	R	5	Oct 09/2008
O	86	Oct 09/2008	O	16	Oct 09/2008	O	6	Oct 09/2008
O	87	Oct 09/2008	O	17	Oct 09/2008	O	7	Oct 09/2008
O	88	Oct 09/2008	O	18	Oct 09/2008	O	8	Oct 09/2008
O	89	Oct 09/2008	O	19	Oct 09/2008	O	9	Oct 09/2008

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280N032

EFFECTIVE PAGES

Page 8
Oct 09/2008

91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D00500 cont.			D00600 cont.			D00600 cont.		
O	10	Oct 09/2008	O	14	Oct 09/2008	O	41	Oct 09/2008
O	11	Oct 09/2008	O	15	Oct 09/2008	O	42	Oct 09/2008
O	12	Oct 09/2008	O	16	Oct 09/2008	O	43	Oct 09/2008
O	13	Oct 09/2008	O	17	Oct 09/2008	O	44	Oct 09/2008
O	14	Oct 09/2008	O	18	Oct 09/2008	O	45	Oct 09/2008
O	15	Oct 09/2008	O	19	Oct 09/2008	O	46	Oct 09/2008
O	16	Oct 09/2008	O	20	Oct 09/2008	O	47	Oct 09/2008
O	17	Oct 09/2008	O	21	Oct 09/2008	O	48	Oct 09/2008
O	18	Oct 09/2008	O	22	Oct 09/2008	O	49	Oct 09/2008
O	19	Oct 09/2008	O	23	Oct 09/2008	O	50	Oct 09/2008
O	20	Oct 09/2008	O	24	Oct 09/2008	O	51	Oct 09/2008
O	21	Oct 09/2008	O	25	Oct 09/2008	O	52	Oct 09/2008
O	22	Oct 09/2008	O	26	Oct 09/2008	O	53	Oct 09/2008
O	23	Oct 09/2008	O	27	Oct 09/2008	O	54	Oct 09/2008
O D00600	1	Oct 09/2008	O	28	Oct 09/2008	O	55	Oct 09/2008
O	2	Oct 09/2008	O	29	Oct 09/2008	O	56	Oct 09/2008
O	3	Oct 09/2008	O	30	Oct 09/2008	O	57	Oct 09/2008
O	4	Oct 09/2008	O	31	Oct 09/2008	O	58	Oct 09/2008
O	5	Oct 09/2008	O	32	Oct 09/2008	O	59	Oct 09/2008
O	6	Oct 09/2008	O	33	Oct 09/2008	O	60	Oct 09/2008
O	7	Oct 09/2008	O	34	Oct 09/2008	O	61	Oct 09/2008
O	8	Oct 09/2008	O	35	Oct 09/2008	O	62	Oct 09/2008
O	9	Oct 09/2008	O	36	Oct 09/2008	O	63	Oct 09/2008
O	10	Oct 09/2008	O	37	Oct 09/2008	O	64	Oct 09/2008
O	11	Oct 09/2008	O	38	Oct 09/2008	O	65	Oct 09/2008
O	12	Oct 09/2008	O	39	Oct 09/2008	O	66	Oct 09/2008
O	13	Oct 09/2008	O	40	Oct 09/2008	O	67	Oct 09/2008

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280N032

EFFECTIVE PAGES

Page 9
Oct 09/2008

91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D00600 cont.			D00600 cont.			D00700 cont.		
O	68	Oct 09/2008	O	95	Oct 09/2008	O	21	Oct 09/2008
O	69	Oct 09/2008	O	96	Oct 09/2008	O	22	Oct 09/2008
O	70	Oct 09/2008	O	97	Oct 09/2008	O	23	Oct 09/2008
O	71	Oct 09/2008	O	98	Oct 09/2008	O	24	Oct 09/2008
O	72	Oct 09/2008	O	99	Oct 09/2008	O	25	Oct 09/2008
O	73	Oct 09/2008	O	100	Oct 09/2008	O	26	Oct 09/2008
O	74	Oct 09/2008	O	101	Oct 09/2008	O	27	Oct 09/2008
O	75	Oct 09/2008	O D00700	1	Oct 09/2008	O	28	Oct 09/2008
O	76	Oct 09/2008	O	2	Oct 09/2008	O	29	Oct 09/2008
O	77	Oct 09/2008	O	3	Oct 09/2008	O	30	Oct 09/2008
O	78	Oct 09/2008	O	4	Oct 09/2008	O	31	Oct 09/2008
O	79	Oct 09/2008	O	5	Oct 09/2008	O	32	Oct 09/2008
O	80	Oct 09/2008	O	6	Oct 09/2008	O	33	Oct 09/2008
O	81	Oct 09/2008	O	7	Oct 09/2008	O	34	Oct 09/2008
O	82	Oct 09/2008	O	8	Oct 09/2008	O	35	Oct 09/2008
O	83	Oct 09/2008	O	9	Oct 09/2008	O	36	Oct 09/2008
O	84	Oct 09/2008	O	10	Oct 09/2008	O	37	Oct 09/2008
O	85	Oct 09/2008	O	11	Oct 09/2008	O	38	Oct 09/2008
O	86	Oct 09/2008	O	12	Oct 09/2008	O	39	Oct 09/2008
O	87	Oct 09/2008	O	13	Oct 09/2008	O	40	Oct 09/2008
O	88	Oct 09/2008	O	14	Oct 09/2008	O	41	Oct 09/2008
O	89	Oct 09/2008	O	15	Oct 09/2008	O	42	Oct 09/2008
O	90	Oct 09/2008	O	16	Oct 09/2008	O	43	Oct 09/2008
O	91	Oct 09/2008	O	17	Oct 09/2008	O	44	Oct 09/2008
O	92	Oct 09/2008	O	18	Oct 09/2008	O	45	Oct 09/2008
O	93	Oct 09/2008	O	19	Oct 09/2008	O	46	Oct 09/2008
O	94	Oct 09/2008	O	20	Oct 09/2008	O	47	Oct 09/2008

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280N032

EFFECTIVE PAGES

Page 10
Oct 09/2008

91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D00700 cont.			D00800 cont.			D00900 cont.		
O	48	Oct 09/2008	O	8	Oct 09/2008	O	13	Oct 09/2008
O	49	Oct 09/2008	O	9	Oct 09/2008	O	14	Oct 09/2008
O	50	Oct 09/2008	O	10	Oct 09/2008	O	15	Oct 09/2008
O	51	Oct 09/2008	O	11	Oct 09/2008	O	16	Oct 09/2008
O	52	Oct 09/2008	O	12	Oct 09/2008	O	17	Oct 09/2008
O	53	Oct 09/2008	O	13	Oct 09/2008	O D01000	1	Oct 09/2008
O	54	Oct 09/2008	O	14	Oct 09/2008	O D01100	1	Oct 09/2008
O	55	Oct 09/2008	O	15	Oct 09/2008	O	2	Oct 09/2008
O	56	Oct 09/2008	O	16	Oct 09/2008	O	3	Oct 09/2008
O	57	Oct 09/2008	O	17	Oct 09/2008	O	4	Oct 09/2008
O	58	Oct 09/2008	O	18	Oct 09/2008	O	5	Oct 09/2008
O	59	Oct 09/2008	O	19	Oct 09/2008	O	6	Oct 09/2008
O	60	Oct 09/2008	O	20	Oct 09/2008	O	7	Oct 09/2008
O	61	Oct 09/2008	O	21	Oct 09/2008	O	8	Oct 09/2008
O	62	Oct 09/2008	O	22	Oct 09/2008	O	9	Oct 09/2008
O	63	Oct 09/2008	O D00900	1	Oct 09/2008	O	10	Oct 09/2008
O	64	Oct 09/2008	O	2	Oct 09/2008	O D01200	1	Oct 09/2008
O	65	Oct 09/2008	O	3	Oct 09/2008	O	2	Oct 09/2008
O	66	Oct 09/2008	O	4	Oct 09/2008	O	3	Oct 09/2008
O	67	Oct 09/2008	O	5	Oct 09/2008	O	4	Oct 09/2008
O D00800	1	Oct 09/2008	O	6	Oct 09/2008	O	5	Oct 09/2008
O	2	Oct 09/2008	O	7	Oct 09/2008	O	6	Oct 09/2008
O	3	Oct 09/2008	O	8	Oct 09/2008	O	7	Oct 09/2008
O	4	Oct 09/2008	O	9	Oct 09/2008	O	8	Oct 09/2008
O	5	Oct 09/2008	O	10	Oct 09/2008	O	9	Oct 09/2008
O	6	Oct 09/2008	O	11	Oct 09/2008	O	10	Oct 09/2008
O	7	Oct 09/2008	O	12	Oct 09/2008	O	11	Oct 09/2008

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280N032

EFFECTIVE PAGES

Page 11
Oct 09/2008

91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D01200 cont.			D01500 cont.			D01700 cont.		
O	12	Oct 09/2008	O	9	Oct 09/2008		5	Dec 18/2007
O	13	Oct 09/2008	O	10	Oct 09/2008		6	Dec 18/2007
O	14	Oct 09/2008	O	11	Oct 09/2008		7	Dec 18/2007
O	15	Oct 09/2008	O	12	Oct 09/2008		8	Dec 18/2007
O	16	Oct 09/2008	O	13	Oct 09/2008		9	Dec 18/2007
O D01300	1	Oct 09/2008	O	14	Oct 09/2008	R	10	Oct 09/2008
O	2	Oct 09/2008	O	15	Oct 09/2008		11	Dec 18/2007
O	3	Oct 09/2008	O	16	Oct 09/2008		12	Dec 18/2007
O	4	Oct 09/2008	O	17	Oct 09/2008		13	Dec 18/2007
O	5	Oct 09/2008	O	18	Oct 09/2008		14	Dec 18/2007
O	6	Oct 09/2008	O	19	Oct 09/2008		15	Dec 18/2007
O	7	Oct 09/2008	O	20	Oct 09/2008		16	Dec 18/2007
O	8	Oct 09/2008	O	21	Oct 09/2008		17	Dec 18/2007
O	9	Oct 09/2008	A	22	Oct 09/2008		18	Dec 18/2007
O D01400	1	Oct 09/2008	D01600	1	Dec 18/2007		19	Dec 18/2007
O	2	Oct 09/2008		2	Dec 18/2007		20	Dec 18/2007
R	3	Oct 09/2008		3	Dec 18/2007		21	Dec 18/2007
A	4	Oct 09/2008		4	Dec 18/2007		22	Dec 18/2007
A	5	Oct 09/2008		5	Dec 18/2007		23	Dec 18/2007
O D01500	1	Oct 09/2008		6	Dec 18/2007		24	Dec 18/2007
R	2	Oct 09/2008		7	Dec 18/2007	D01800	1	Dec 18/2007
O	3	Oct 09/2008		8	Dec 18/2007		2	Dec 18/2007
O	4	Oct 09/2008		9	Dec 18/2007		3	Dec 18/2007
O	5	Oct 09/2008	D01700	1	Dec 18/2007		4	Dec 18/2007
O	6	Oct 09/2008		2	Dec 18/2007		5	Dec 18/2007
O	7	Oct 09/2008		3	Dec 18/2007		6	Dec 18/2007
O	8	Oct 09/2008		4	Dec 18/2007		7	Dec 18/2007

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280N032

EFFECTIVE PAGES

Page 12
Oct 09/2008

91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D01800 cont.			D01900 cont.			D02100 cont.		
	8	Dec 18/2007		5	Dec 18/2007		12	Dec 18/2007
	9	Dec 18/2007		6	Dec 18/2007		13	Dec 18/2007
	10	Dec 18/2007		7	Dec 18/2007		14	Dec 18/2007
	11	Dec 18/2007		8	Dec 18/2007		15	Dec 18/2007
R	12	Oct 09/2008		9	Dec 18/2007	D02200	1	Dec 18/2007
	13	Dec 18/2007	D02000	1	Dec 18/2007		2	Dec 18/2007
	14	Dec 18/2007		2	Dec 18/2007		3	Dec 18/2007
	15	Dec 18/2007		3	Dec 18/2007		4	Dec 18/2007
	16	Dec 18/2007		4	Dec 18/2007		5	Dec 18/2007
	17	Dec 18/2007		5	Dec 18/2007		6	Dec 18/2007
	18	Dec 18/2007	R	6	Oct 09/2008	R	7	Oct 09/2008
	19	Dec 18/2007		7	Dec 18/2007	R	8	Oct 09/2008
	20	Dec 18/2007		8	Dec 18/2007	R	9	Oct 09/2008
	21	Dec 18/2007		9	Dec 18/2007	O	10	Oct 09/2008
	22	Dec 18/2007		10	Dec 18/2007	A	11	Oct 09/2008
	23	Dec 18/2007		11	Dec 18/2007	A	12	Oct 09/2008
	24	Dec 18/2007	D02100	1	Dec 18/2007	D02300	1	Dec 18/2007
	25	Dec 18/2007	R	2	Oct 09/2008		2	Dec 18/2007
	26	Dec 18/2007		3	Dec 18/2007		3	Dec 18/2007
	27	Dec 18/2007		4	Dec 18/2007		4	Dec 18/2007
R	28	Oct 09/2008		5	Dec 18/2007		5	Dec 18/2007
O	29	Oct 09/2008		6	Dec 18/2007		6	Dec 18/2007
R	30	Oct 09/2008		7	Dec 18/2007		7	Dec 18/2007
D01900	1	Dec 18/2007		8	Dec 18/2007		8	Dec 18/2007
	2	Dec 18/2007		9	Dec 18/2007		9	Dec 18/2007
	3	Dec 18/2007		10	Dec 18/2007		10	Dec 18/2007
	4	Dec 18/2007		11	Dec 18/2007		11	Dec 18/2007

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280N032

EFFECTIVE PAGES

Page 13
Oct 09/2008

91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D02300 cont.			D02400 cont.			D02500 cont.		
	12	Dec 18/2007		15	Dec 18/2007		19	Dec 18/2007
	13	Dec 18/2007		16	Dec 18/2007		20	Dec 18/2007
	14	Dec 18/2007		17	Dec 18/2007		21	Dec 18/2007
	15	Dec 18/2007		18	Dec 18/2007		22	Dec 18/2007
	16	Dec 18/2007		19	Dec 18/2007	D02600	1	Dec 18/2007
	17	Dec 18/2007		20	Dec 18/2007		2	Dec 18/2007
	18	Dec 18/2007		21	Dec 18/2007		3	Dec 18/2007
	19	Dec 18/2007		22	Dec 18/2007		4	Dec 18/2007
	20	Dec 18/2007		23	Dec 18/2007		5	Dec 18/2007
	21	Dec 18/2007	D02500	1	Dec 18/2007		6	Dec 18/2007
	22	Dec 18/2007		2	Dec 18/2007		7	Dec 18/2007
	23	Dec 18/2007		3	Dec 18/2007		8	Dec 18/2007
	24	Dec 18/2007		4	Dec 18/2007		9	Dec 18/2007
D02400	1	Dec 18/2007		5	Dec 18/2007	D02700	10	Dec 18/2007
	2	Dec 18/2007		6	Dec 18/2007		1	Dec 18/2007
	3	Dec 18/2007		7	Dec 18/2007		2	Dec 18/2007
	4	Dec 18/2007		8	Dec 18/2007		3	Dec 18/2007
	5	Dec 18/2007		9	Dec 18/2007		4	Dec 18/2007
	6	Dec 18/2007		10	Dec 18/2007		5	Dec 18/2007
	7	Dec 18/2007		11	Dec 18/2007		6	Dec 18/2007
	8	Dec 18/2007		12	Dec 18/2007		7	Dec 18/2007
	9	Dec 18/2007		13	Dec 18/2007		8	Dec 18/2007
	10	Dec 18/2007		14	Dec 18/2007		9	Dec 18/2007
	11	Dec 18/2007		15	Dec 18/2007		10	Dec 18/2007
	12	Dec 18/2007		16	Dec 18/2007		11	Dec 18/2007
	13	Dec 18/2007		17	Dec 18/2007		12	Dec 18/2007
	14	Dec 18/2007		18	Dec 18/2007		13	Dec 18/2007

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280N032

EFFECTIVE PAGES

Page 14
Oct 09/2008

91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D02700 cont.			D02900 cont.			D02900 cont.		
	14	Dec 18/2007		10	Dec 18/2007		37	Dec 18/2007
	15	Dec 18/2007		11	Dec 18/2007	D03000	1	Dec 18/2007
	16	Dec 18/2007		12	Dec 18/2007		2	Dec 18/2007
	17	Dec 18/2007		13	Dec 18/2007		3	Dec 18/2007
	18	Dec 18/2007		14	Dec 18/2007		4	Dec 18/2007
	19	Dec 18/2007		15	Dec 18/2007		5	Dec 18/2007
D02800	1	Dec 18/2007		16	Dec 18/2007		6	Dec 18/2007
	2	Dec 18/2007		17	Dec 18/2007		7	Dec 18/2007
	3	Dec 18/2007		18	Dec 18/2007		8	Dec 18/2007
	4	Dec 18/2007		19	Dec 18/2007		9	Dec 18/2007
	5	Dec 18/2007		20	Dec 18/2007		10	Dec 18/2007
	6	Dec 18/2007		21	Dec 18/2007		11	Dec 18/2007
	7	Dec 18/2007		22	Dec 18/2007		12	Dec 18/2007
	8	Dec 18/2007		23	Dec 18/2007		13	Dec 18/2007
	9	Dec 18/2007		24	Dec 18/2007		14	Dec 18/2007
	10	Dec 18/2007		25	Dec 18/2007		15	Dec 18/2007
	11	Dec 18/2007		26	Dec 18/2007		16	Dec 18/2007
	12	Dec 18/2007		27	Dec 18/2007		17	Dec 18/2007
D02900	1	Dec 18/2007		28	Dec 18/2007		18	Dec 18/2007
	2	Dec 18/2007		29	Dec 18/2007		19	Dec 18/2007
	3	Dec 18/2007		30	Dec 18/2007		20	Dec 18/2007
	4	Dec 18/2007		31	Dec 18/2007		21	Dec 18/2007
	5	Dec 18/2007		32	Dec 18/2007		22	Dec 18/2007
	6	Dec 18/2007		33	Dec 18/2007	R	23	Oct 09/2008
	7	Dec 18/2007		34	Dec 18/2007	O	24	Oct 09/2008
	8	Dec 18/2007		35	Dec 18/2007	D03100	1	Dec 18/2007
	9	Dec 18/2007		36	Dec 18/2007		2	Dec 18/2007

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280N032

EFFECTIVE PAGES

Page 15
Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

91-21-51 HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D03100 cont.			D03200 cont.			D03400	1	Dec 18/2007
	3	Dec 18/2007		25	Dec 18/2007		2	Dec 18/2007
	4	Dec 18/2007		26	Dec 18/2007		3	Dec 18/2007
	5	Dec 18/2007		27	Dec 18/2007		4	Dec 18/2007
D03200	1	Dec 18/2007		28	Dec 18/2007		5	Dec 18/2007
	2	Dec 18/2007		29	Dec 18/2007		6	Dec 18/2007
	3	Dec 18/2007		30	Dec 18/2007		7	Dec 18/2007
	4	Dec 18/2007		31	Dec 18/2007		8	Dec 18/2007
	5	Dec 18/2007		32	Dec 18/2007		9	Dec 18/2007
	6	Dec 18/2007		33	Dec 18/2007		10	Dec 18/2007
	7	Dec 18/2007		34	Dec 18/2007		11	Dec 18/2007
	8	Dec 18/2007		35	Dec 18/2007		12	Dec 18/2007
	9	Dec 18/2007		36	Dec 18/2007		13	Dec 18/2007
	10	Dec 18/2007		37	Dec 18/2007		14	Dec 18/2007
	11	Dec 18/2007		38	Dec 18/2007			
	12	Dec 18/2007	O	39	Oct 09/2008	D03500	1	Dec 18/2007
	13	Dec 18/2007	O	40	Oct 09/2008		2	Dec 18/2007
	14	Dec 18/2007		1	Dec 18/2007		3	Dec 18/2007
	15	Dec 18/2007	D03300	2	Dec 18/2007		4	Dec 18/2007
	16	Dec 18/2007		3	Dec 18/2007		5	Dec 18/2007
	17	Dec 18/2007		4	Dec 18/2007		6	Dec 18/2007
	18	Dec 18/2007		5	Dec 18/2007		7	Dec 18/2007
	19	Dec 18/2007		6	Dec 18/2007		8	Dec 18/2007
	20	Dec 18/2007		7	Dec 18/2007	R	9	Oct 09/2008
	21	Dec 18/2007		8	Dec 18/2007	R	10	Oct 09/2008
	22	Dec 18/2007		9	Dec 18/2007	O	11	Oct 09/2008
	23	Dec 18/2007	O	10	Oct 09/2008	R	12	Oct 09/2008
	24	Dec 18/2007	O	11	Oct 09/2008	R	13	Oct 09/2008
						R	14	Oct 09/2008

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280N032

EFFECTIVE PAGES

Page 16
Oct 09/2008

91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D03500 cont.			D03700 cont.			D04100 cont.		
O	15	Oct 09/2008		2	Dec 18/2007		2	Dec 18/2007
O	16	Oct 09/2008		3	Dec 18/2007		3	Dec 18/2007
O	17	Oct 09/2008		4	Dec 18/2007		4	Dec 18/2007
O	18	Oct 09/2008		5	Dec 18/2007		5	Dec 18/2007
O	19	Oct 09/2008		6	Dec 18/2007		6	Dec 18/2007
O	20	Oct 09/2008		7	Dec 18/2007		7	Dec 18/2007
O	21	Oct 09/2008		8	Dec 18/2007		8	Dec 18/2007
O	22	Oct 09/2008	D03800	1	Dec 18/2007		9	Dec 18/2007
O	23	Oct 09/2008		2	Dec 18/2007		10	Dec 18/2007
O	24	Oct 09/2008	D03900	1	Dec 18/2007		11	Dec 18/2007
O	25	Oct 09/2008		2	Dec 18/2007		12	Dec 18/2007
O	26	Oct 09/2008		3	Dec 18/2007		13	Dec 18/2007
O	27	Oct 09/2008	D04000	1	Dec 18/2007	D04200	1	Dec 18/2007
O	28	Oct 09/2008		2	Dec 18/2007		2	Dec 18/2007
O	29	Oct 09/2008		3	Dec 18/2007		3	Dec 18/2007
O	30	Oct 09/2008		4	Dec 18/2007		4	Dec 18/2007
O	31	Oct 09/2008		5	Dec 18/2007		5	Dec 18/2007
O	32	Oct 09/2008		6	Dec 18/2007		6	Dec 18/2007
O	33	Oct 09/2008		7	Dec 18/2007		7	Dec 18/2007
O	34	Oct 09/2008		8	Dec 18/2007		8	Dec 18/2007
O	35	Oct 09/2008		9	Dec 18/2007		9	Dec 18/2007
O	36	Oct 09/2008		10	Dec 18/2007		10	Dec 18/2007
O	37	Oct 09/2008		11	Dec 18/2007		11	Dec 18/2007
O	38	Oct 09/2008		12	Dec 18/2007		12	Dec 18/2007
O	39	Oct 09/2008		13	Dec 18/2007		13	Dec 18/2007
O	40	Oct 09/2008		14	Dec 18/2007		14	Dec 18/2007
D03700	1	Dec 18/2007	D04100	1	Dec 18/2007		15	Dec 18/2007

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280N032

EFFECTIVE PAGES

Page 17
Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

91-21-51 HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D04200 cont.			D04500 cont.			D04800 cont.		
	16	Dec 18/2007		5	Dec 18/2007		4	Dec 18/2007
	17	Dec 18/2007		6	Dec 18/2007		5	Dec 18/2007
	18	Dec 18/2007		7	Dec 18/2007		6	Dec 18/2007
D04300	1	Dec 18/2007	D04600	1	Dec 18/2007	R D05000	1	Oct 09/2008
	2	Dec 18/2007		2	Dec 18/2007	R	2	Oct 09/2008
	3	Dec 18/2007		3	Dec 18/2007	O	3	Oct 09/2008
	4	Dec 18/2007		4	Dec 18/2007	O	4	Oct 09/2008
	5	Dec 18/2007		5	Dec 18/2007	D05100	1	Dec 18/2007
	6	Dec 18/2007		6	Dec 18/2007		2	Dec 18/2007
	7	Dec 18/2007		7	Dec 18/2007		3	Dec 18/2007
	8	Dec 18/2007		8	Dec 18/2007		4	Dec 18/2007
	9	Dec 18/2007		9	Dec 18/2007		5	Dec 18/2007
D04400	1	Dec 18/2007	O	10	Oct 09/2008		6	Dec 18/2007
	2	Dec 18/2007	O	11	Oct 09/2008		7	Dec 18/2007
	3	Dec 18/2007	O	12	Oct 09/2008	D05200	1	Dec 18/2007
	4	Dec 18/2007	O	13	Oct 09/2008		2	Dec 18/2007
	5	Dec 18/2007	D04700	1	Dec 18/2007		3	Dec 18/2007
	6	Dec 18/2007		2	Dec 18/2007		4	Dec 18/2007
	7	Dec 18/2007		3	Dec 18/2007		5	Dec 18/2007
	8	Dec 18/2007		4	Dec 18/2007	D05300	1	Dec 18/2007
	9	Dec 18/2007		5	Dec 18/2007	D05400	1	Dec 18/2007
	10	Dec 18/2007	R	6	Oct 09/2008	D05500	1	Dec 18/2007
	11	Dec 18/2007	R	7	Oct 09/2008		2	Dec 18/2007
D04500	1	Dec 18/2007	R	8	Oct 09/2008	D05600	1	Dec 18/2007
	2	Dec 18/2007	D04800	1	Dec 18/2007		2	Dec 18/2007
	3	Dec 18/2007		2	Dec 18/2007		3	Dec 18/2007
	4	Dec 18/2007		3	Dec 18/2007		4	Dec 18/2007

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280N032

EFFECTIVE PAGES

Page 18
Oct 09/2008

91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D05600 cont.			D05900 cont.			D06000 cont.		
	5	Dec 18/2007		20	Dec 18/2007		21	Dec 18/2007
	6	Dec 18/2007		21	Dec 18/2007		22	Dec 18/2007
	7	Dec 18/2007		22	Dec 18/2007		23	Dec 18/2007
	8	Dec 18/2007		23	Dec 18/2007		24	Dec 18/2007
	9	Dec 18/2007		24	Dec 18/2007		25	Dec 18/2007
D05700	1	Dec 18/2007		25	Dec 18/2007		26	Dec 18/2007
D05800	1	Dec 18/2007		26	Dec 18/2007	D06200	1	Dec 18/2007
	2	Dec 18/2007	D06000	1	Dec 18/2007	D06300	1	Dec 18/2007
D05900	1	Dec 18/2007		2	Dec 18/2007		2	Dec 18/2007
	2	Dec 18/2007		3	Dec 18/2007		3	Dec 18/2007
	3	Dec 18/2007		4	Dec 18/2007		4	Dec 18/2007
	4	Dec 18/2007		5	Dec 18/2007		5	Dec 18/2007
	5	Dec 18/2007		6	Dec 18/2007	D06400	1	Dec 18/2007
	6	Dec 18/2007		7	Dec 18/2007		2	Dec 18/2007
	7	Dec 18/2007		8	Dec 18/2007		3	Dec 18/2007
	8	Dec 18/2007		9	Dec 18/2007	D06700	1	Dec 18/2007
	9	Dec 18/2007		10	Dec 18/2007	D06800	1	Dec 18/2007
	10	Dec 18/2007		11	Dec 18/2007		2	Dec 18/2007
	11	Dec 18/2007		12	Dec 18/2007		3	Dec 18/2007
	12	Dec 18/2007		13	Dec 18/2007		4	Dec 18/2007
	13	Dec 18/2007		14	Dec 18/2007	R	5	Oct 09/2008
	14	Dec 18/2007		15	Dec 18/2007		6	Dec 18/2007
	15	Dec 18/2007		16	Dec 18/2007	D06900	1	Dec 18/2007
	16	Dec 18/2007		17	Dec 18/2007		2	Dec 18/2007
	17	Dec 18/2007		18	Dec 18/2007	D07000	1	Dec 18/2007
	18	Dec 18/2007		19	Dec 18/2007		2	Dec 18/2007
	19	Dec 18/2007		20	Dec 18/2007		3	Dec 18/2007

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280N032

EFFECTIVE PAGES

Page 19
Oct 09/2008

91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D07000 cont.			D07600 cont.			D40000 cont.		
	4	Dec 18/2007		4	Dec 18/2007	O	4	Oct 09/2008
	5	Dec 18/2007		5	Dec 18/2007	O	5	Oct 09/2008
	6	Dec 18/2007	D07700	1	Dec 18/2007	O	6	Oct 09/2008
	7	Dec 18/2007		2	Dec 18/2007	O	7	Oct 09/2008
	8	Dec 18/2007		3	Dec 18/2007	O	8	Oct 09/2008
	9	Dec 18/2007		4	Dec 18/2007	O	9	Oct 09/2008
	10	Dec 18/2007	D07800	1	Dec 18/2007	O	10	Oct 09/2008
	11	Dec 18/2007	D07900	1	Dec 18/2007	O	11	Oct 09/2008
	12	Dec 18/2007	D10600	1	Dec 18/2007	O	12	Oct 09/2008
D07100	1	Dec 18/2007	D10700	1	Dec 18/2007	O	13	Oct 09/2008
D07200	1	Dec 18/2007	A D11700	1	Oct 09/2008	O	14	Oct 09/2008
	2	Dec 18/2007	A	2	Oct 09/2008	O	15	Oct 09/2008
	3	Dec 18/2007	A	3	Oct 09/2008	O	16	Oct 09/2008
D07300	1	Dec 18/2007	O D21000	1	Oct 09/2008	O	17	Oct 09/2008
	2	Dec 18/2007	O	2	Oct 09/2008	O	18	Oct 09/2008
D07400	1	Dec 18/2007	O	3	Oct 09/2008	O	19	Oct 09/2008
	2	Dec 18/2007	O D22000	1	Oct 09/2008	O	20	Oct 09/2008
	3	Dec 18/2007	O	2	Oct 09/2008	O	21	Oct 09/2008
	4	Dec 18/2007	O	3	Oct 09/2008	O	22	Oct 09/2008
D07500	1	Dec 18/2007	O D23000	1	Oct 09/2008	O	23	Oct 09/2008
	2	Dec 18/2007	O	2	Oct 09/2008	O	24	Oct 09/2008
	3	Dec 18/2007	O	3	Oct 09/2008	O	25	Oct 09/2008
	4	Dec 18/2007	O	4	Oct 09/2008	O	26	Oct 09/2008
	5	Dec 18/2007	O	5	Oct 09/2008	O	27	Oct 09/2008
D07600	1	Dec 18/2007	O D40000	1	Oct 09/2008	O	28	Oct 09/2008
	2	Dec 18/2007	O	2	Oct 09/2008	O	29	Oct 09/2008
	3	Dec 18/2007	O	3	Oct 09/2008	O	30	Oct 09/2008

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280N032

EFFECTIVE PAGES

Page 20
Oct 09/2008

91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D40000 cont.			D40000 cont.			D40000 cont.		
O	31	Oct 09/2008	O	58	Oct 09/2008	O	85	Oct 09/2008
O	32	Oct 09/2008	O	59	Oct 09/2008	O	86	Oct 09/2008
O	33	Oct 09/2008	O	60	Oct 09/2008	O	87	Oct 09/2008
O	34	Oct 09/2008	O	61	Oct 09/2008	O	88	Oct 09/2008
O	35	Oct 09/2008	O	62	Oct 09/2008	R	89	Oct 09/2008
O	36	Oct 09/2008	O	63	Oct 09/2008	O	90	Oct 09/2008
O	37	Oct 09/2008	O	64	Oct 09/2008	R	91	Oct 09/2008
O	38	Oct 09/2008	O	65	Oct 09/2008	O	92	Oct 09/2008
O	39	Oct 09/2008	O	66	Oct 09/2008	R	93	Oct 09/2008
O	40	Oct 09/2008	O	67	Oct 09/2008	O	94	Oct 09/2008
O	41	Oct 09/2008	O	68	Oct 09/2008	O	95	Oct 09/2008
O	42	Oct 09/2008	O	69	Oct 09/2008	O	96	Oct 09/2008
O	43	Oct 09/2008	O	70	Oct 09/2008	O	97	Oct 09/2008
O	44	Oct 09/2008	O	71	Oct 09/2008	O	98	Oct 09/2008
O	45	Oct 09/2008	O	72	Oct 09/2008	R	99	Oct 09/2008
O	46	Oct 09/2008	O	73	Oct 09/2008	R	100	Oct 09/2008
O	47	Oct 09/2008	O	74	Oct 09/2008	R	101	Oct 09/2008
O	48	Oct 09/2008	O	75	Oct 09/2008	O D40100	1	Oct 09/2008
R	49	Oct 09/2008	O	76	Oct 09/2008	O	2	Oct 09/2008
R	50	Oct 09/2008	O	77	Oct 09/2008	O	3	Oct 09/2008
O	51	Oct 09/2008	O	78	Oct 09/2008	O	4	Oct 09/2008
R	52	Oct 09/2008	O	79	Oct 09/2008	O	5	Oct 09/2008
O	53	Oct 09/2008	O	80	Oct 09/2008	O	6	Oct 09/2008
O	54	Oct 09/2008	R	81	Oct 09/2008	O	7	Oct 09/2008
O	55	Oct 09/2008	O	82	Oct 09/2008	O	8	Oct 09/2008
O	56	Oct 09/2008	R	83	Oct 09/2008	O	9	Oct 09/2008
O	57	Oct 09/2008	O	84	Oct 09/2008	O	10	Oct 09/2008

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280N032

EFFECTIVE PAGES

Page 21
Oct 09/2008

91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D40100 cont.			D40200 cont.			D40200 cont.		
O	11	Oct 09/2008	O	14	Oct 09/2008	O	41	Oct 09/2008
O	12	Oct 09/2008	O	15	Oct 09/2008	O	42	Oct 09/2008
O	13	Oct 09/2008	O	16	Oct 09/2008	O	43	Oct 09/2008
O	14	Oct 09/2008	R	17	Oct 09/2008	O	44	Oct 09/2008
O	15	Oct 09/2008	R	18	Oct 09/2008	O D40300	1	Oct 09/2008
O	16	Oct 09/2008	O	19	Oct 09/2008	O	2	Oct 09/2008
O	17	Oct 09/2008	O	20	Oct 09/2008	O	3	Oct 09/2008
O	18	Oct 09/2008	O	21	Oct 09/2008	O	4	Oct 09/2008
O	19	Oct 09/2008	O	22	Oct 09/2008	O	5	Oct 09/2008
O	20	Oct 09/2008	O	23	Oct 09/2008	O	6	Oct 09/2008
O	21	Oct 09/2008	O	24	Oct 09/2008	O	7	Oct 09/2008
O	22	Oct 09/2008	O	25	Oct 09/2008	O	8	Oct 09/2008
O	23	Oct 09/2008	O	26	Oct 09/2008	O	9	Oct 09/2008
O	24	Oct 09/2008	O	27	Oct 09/2008	O	10	Oct 09/2008
O D40200	1	Oct 09/2008	O	28	Oct 09/2008	O	11	Oct 09/2008
O	2	Oct 09/2008	O	29	Oct 09/2008	O	12	Oct 09/2008
O	3	Oct 09/2008	O	30	Oct 09/2008	O	13	Oct 09/2008
O	4	Oct 09/2008	R	31	Oct 09/2008	O	14	Oct 09/2008
O	5	Oct 09/2008	R	32	Oct 09/2008	O	15	Oct 09/2008
O	6	Oct 09/2008	O	33	Oct 09/2008	O	16	Oct 09/2008
O	7	Oct 09/2008	O	34	Oct 09/2008	O	17	Oct 09/2008
O	8	Oct 09/2008	O	35	Oct 09/2008	O	18	Oct 09/2008
O	9	Oct 09/2008	O	36	Oct 09/2008	O	19	Oct 09/2008
O	10	Oct 09/2008	O	37	Oct 09/2008	O	20	Oct 09/2008
O	11	Oct 09/2008	O	38	Oct 09/2008	O	21	Oct 09/2008
O	12	Oct 09/2008	O	39	Oct 09/2008	O	22	Oct 09/2008
O	13	Oct 09/2008	O	40	Oct 09/2008	O	23	Oct 09/2008

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280N032

EFFECTIVE PAGES

Page 22
Oct 09/2008

91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D40300 cont.			D40300 cont.			D40400 cont.		
O	24	Oct 09/2008	O	51	Oct 09/2008	O	11	Oct 09/2008
O	25	Oct 09/2008	O	52	Oct 09/2008	O	12	Oct 09/2008
O	26	Oct 09/2008	O	53	Oct 09/2008	O	13	Oct 09/2008
O	27	Oct 09/2008	O	54	Oct 09/2008	O	14	Oct 09/2008
O	28	Oct 09/2008	O	55	Oct 09/2008	O	15	Oct 09/2008
O	29	Oct 09/2008	O	56	Oct 09/2008	O	16	Oct 09/2008
O	30	Oct 09/2008	O	57	Oct 09/2008	O	17	Oct 09/2008
O	31	Oct 09/2008	O	58	Oct 09/2008	O	18	Oct 09/2008
O	32	Oct 09/2008	O	59	Oct 09/2008	O	19	Oct 09/2008
O	33	Oct 09/2008	O	60	Oct 09/2008	O	20	Oct 09/2008
O	34	Oct 09/2008	O	61	Oct 09/2008	O	21	Oct 09/2008
O	35	Oct 09/2008	O	62	Oct 09/2008	O	22	Oct 09/2008
O	36	Oct 09/2008	O	63	Oct 09/2008	O	23	Oct 09/2008
O	37	Oct 09/2008	O	64	Oct 09/2008	O	24	Oct 09/2008
O	38	Oct 09/2008	O	65	Oct 09/2008	O	25	Oct 09/2008
O	39	Oct 09/2008	O	66	Oct 09/2008	O	26	Oct 09/2008
O	40	Oct 09/2008	O	67	Oct 09/2008	O	27	Oct 09/2008
O	41	Oct 09/2008	O D40400	1	Oct 09/2008	O	28	Oct 09/2008
O	42	Oct 09/2008	O	2	Oct 09/2008	O	29	Oct 09/2008
O	43	Oct 09/2008	O	3	Oct 09/2008	O	30	Oct 09/2008
O	44	Oct 09/2008	O	4	Oct 09/2008	O	31	Oct 09/2008
O	45	Oct 09/2008	O	5	Oct 09/2008	O	32	Oct 09/2008
O	46	Oct 09/2008	O	6	Oct 09/2008	O	33	Oct 09/2008
O	47	Oct 09/2008	O	7	Oct 09/2008	O	34	Oct 09/2008
O	48	Oct 09/2008	O	8	Oct 09/2008	O	35	Oct 09/2008
O	49	Oct 09/2008	O	9	Oct 09/2008	O	36	Oct 09/2008
O	50	Oct 09/2008	O	10	Oct 09/2008	O	37	Oct 09/2008

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280N032

EFFECTIVE PAGES

Page 23
Oct 09/2008

91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D40400 cont.			D40500 cont.			D40500 cont.		
O	38	Oct 09/2008	R	13	Oct 09/2008	O	40	Oct 09/2008
O	39	Oct 09/2008	O	14	Oct 09/2008	O	41	Oct 09/2008
O	40	Oct 09/2008	O	15	Oct 09/2008	O	42	Oct 09/2008
O	41	Oct 09/2008	O	16	Oct 09/2008	O	43	Oct 09/2008
O	42	Oct 09/2008	O	17	Oct 09/2008	R	44	Oct 09/2008
O	43	Oct 09/2008	O	18	Oct 09/2008	R	45	Oct 09/2008
O	44	Oct 09/2008	O	19	Oct 09/2008	R	46	Oct 09/2008
O	45	Oct 09/2008	O	20	Oct 09/2008	O	47	Oct 09/2008
O	46	Oct 09/2008	O	21	Oct 09/2008	R	48	Oct 09/2008
O	47	Oct 09/2008	O	22	Oct 09/2008	A	49	Oct 09/2008
O	48	Oct 09/2008	O	23	Oct 09/2008	D40600	1	Dec 18/2007
O	49	Oct 09/2008	O	24	Oct 09/2008		2	Dec 18/2007
O	50	Oct 09/2008	O	25	Oct 09/2008		3	Dec 18/2007
O	51	Oct 09/2008	O	26	Oct 09/2008		4	Dec 18/2007
O	52	Oct 09/2008	O	27	Oct 09/2008		5	Dec 18/2007
O D40500	1	Oct 09/2008	O	28	Oct 09/2008		6	Dec 18/2007
O	2	Oct 09/2008	O	29	Oct 09/2008		7	Dec 18/2007
O	3	Oct 09/2008	O	30	Oct 09/2008		8	Dec 18/2007
O	4	Oct 09/2008	O	31	Oct 09/2008		9	Dec 18/2007
O	5	Oct 09/2008	R	32	Oct 09/2008		10	Dec 18/2007
O	6	Oct 09/2008	O	33	Oct 09/2008	R	11	Oct 09/2008
O	7	Oct 09/2008	R	34	Oct 09/2008		12	Dec 18/2007
O	8	Oct 09/2008	O	35	Oct 09/2008	R	13	Oct 09/2008
O	9	Oct 09/2008	O	36	Oct 09/2008	O	14	Oct 09/2008
R	10	Oct 09/2008	O	37	Oct 09/2008	O	15	Oct 09/2008
R	11	Oct 09/2008	O	38	Oct 09/2008	O	16	Oct 09/2008
R	12	Oct 09/2008	O	39	Oct 09/2008	O	17	Oct 09/2008

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280N032

EFFECTIVE PAGES

Page 24
Oct 09/2008

91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D40600 cont.			D40600 cont.			D40600 cont.		
O	18	Oct 09/2008	O	45	Oct 09/2008	O	72	Oct 09/2008
O	19	Oct 09/2008	O	46	Oct 09/2008	O	73	Oct 09/2008
O	20	Oct 09/2008	O	47	Oct 09/2008	O	74	Oct 09/2008
R	21	Oct 09/2008	O	48	Oct 09/2008	O	75	Oct 09/2008
	22	Dec 18/2007	O	49	Oct 09/2008	O	76	Oct 09/2008
	23	Dec 18/2007	O	50	Oct 09/2008	O	77	Oct 09/2008
	24	Dec 18/2007	O	51	Oct 09/2008	O	78	Oct 09/2008
	25	Dec 18/2007	O	52	Oct 09/2008	O	79	Oct 09/2008
	26	Dec 18/2007	O	53	Oct 09/2008	O	80	Oct 09/2008
	27	Dec 18/2007	O	54	Oct 09/2008	O	81	Oct 09/2008
R	28	Oct 09/2008	O	55	Oct 09/2008	O	82	Oct 09/2008
O	29	Oct 09/2008	O	56	Oct 09/2008	A	83	Oct 09/2008
R	30	Oct 09/2008	O	57	Oct 09/2008	O D40700	1	Oct 09/2008
O	31	Oct 09/2008	O	58	Oct 09/2008	O	2	Oct 09/2008
O	32	Oct 09/2008	O	59	Oct 09/2008	O	3	Oct 09/2008
O	33	Oct 09/2008		60	Dec 18/2007	O	4	Oct 09/2008
O	34	Oct 09/2008		61	Dec 18/2007	O	5	Oct 09/2008
O	35	Oct 09/2008		62	Dec 18/2007	O	6	Oct 09/2008
O	36	Oct 09/2008	R	63	Oct 09/2008	O	7	Oct 09/2008
O	37	Oct 09/2008	R	64	Oct 09/2008	O	8	Oct 09/2008
O	38	Oct 09/2008	R	65	Oct 09/2008	O	9	Oct 09/2008
O	39	Oct 09/2008	O	66	Oct 09/2008	O	10	Oct 09/2008
O	40	Oct 09/2008	O	67	Oct 09/2008	O	11	Oct 09/2008
O	41	Oct 09/2008	O	68	Oct 09/2008	R	12	Oct 09/2008
O	42	Oct 09/2008	O	69	Oct 09/2008	O	13	Oct 09/2008
O	43	Oct 09/2008	O	70	Oct 09/2008	O	14	Oct 09/2008
O	44	Oct 09/2008	O	71	Oct 09/2008	O	15	Oct 09/2008

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280N032

EFFECTIVE PAGES

Page 25
Oct 09/2008

91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D40700 cont.			D40800 cont.			D40800 cont.		
O	16	Oct 09/2008	R	7	Oct 09/2008	O	34	Oct 09/2008
O	17	Oct 09/2008		8	Dec 18/2007	O	35	Oct 09/2008
O	18	Oct 09/2008	R	9	Oct 09/2008	O	36	Oct 09/2008
R	19	Oct 09/2008		10	Dec 18/2007	O	37	Oct 09/2008
R	20	Oct 09/2008	R	11	Oct 09/2008	O	38	Oct 09/2008
R	21	Oct 09/2008		12	Dec 18/2007	O	39	Oct 09/2008
R	22	Oct 09/2008	R	13	Oct 09/2008	O	40	Oct 09/2008
O	23	Oct 09/2008	R	14	Oct 09/2008	O	41	Oct 09/2008
R	24	Oct 09/2008	R	15	Oct 09/2008	O	42	Oct 09/2008
O	25	Oct 09/2008	R	16	Oct 09/2008	O	43	Oct 09/2008
R	26	Oct 09/2008	R	17	Oct 09/2008	O	44	Oct 09/2008
R	27	Oct 09/2008	O	18	Oct 09/2008	O	45	Oct 09/2008
R	28	Oct 09/2008	O	19	Oct 09/2008	O	46	Oct 09/2008
O	29	Oct 09/2008	O	20	Oct 09/2008	O	47	Oct 09/2008
O	30	Oct 09/2008	O	21	Oct 09/2008	O	48	Oct 09/2008
O	31	Oct 09/2008	O	22	Oct 09/2008	O	49	Oct 09/2008
O	32	Oct 09/2008	O	23	Oct 09/2008	O	50	Oct 09/2008
O	33	Oct 09/2008	O	24	Oct 09/2008	O	51	Oct 09/2008
O	34	Oct 09/2008	O	25	Oct 09/2008	O	52	Oct 09/2008
O	35	Oct 09/2008	O	26	Oct 09/2008	O	53	Oct 09/2008
A	36	Oct 09/2008	O	27	Oct 09/2008	O	54	Oct 09/2008
D40800	1	Dec 18/2007	O	28	Oct 09/2008	O	55	Oct 09/2008
	2	Dec 18/2007	O	29	Oct 09/2008	O	56	Oct 09/2008
	3	Dec 18/2007	R	30	Oct 09/2008	O	57	Oct 09/2008
	4	Dec 18/2007	R	31	Oct 09/2008	O	58	Oct 09/2008
	5	Dec 18/2007	R	32	Oct 09/2008	O	59	Oct 09/2008
	6	Dec 18/2007	R	33	Oct 09/2008	O	60	Oct 09/2008

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280N032

EFFECTIVE PAGES

Page 26
Oct 09/2008

91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D40800 cont.			D40900 cont.			D40900 cont.		
O	61	Oct 09/2008	R	18	Oct 09/2008	O	45	Oct 09/2008
O	62	Oct 09/2008	R	19	Oct 09/2008	O	46	Oct 09/2008
O	63	Oct 09/2008	R	20	Oct 09/2008	O	47	Oct 09/2008
O	64	Oct 09/2008	R	21	Oct 09/2008	D	48	Oct 09/2008
O	65	Oct 09/2008	O	22	Oct 09/2008	O D41000	1	Oct 09/2008
R	66	Oct 09/2008	O	23	Oct 09/2008	O	2	Oct 09/2008
R	67	Oct 09/2008	O	24	Oct 09/2008	O	3	Oct 09/2008
R	68	Oct 09/2008	O	25	Oct 09/2008	O	4	Oct 09/2008
R	69	Oct 09/2008	O	26	Oct 09/2008	O	5	Oct 09/2008
O	70	Oct 09/2008	O	27	Oct 09/2008	O	6	Oct 09/2008
D40900	1	Dec 18/2007	O	28	Oct 09/2008	O	7	Oct 09/2008
	2	Dec 18/2007	O	29	Oct 09/2008	O	8	Oct 09/2008
	3	Dec 18/2007	O	30	Oct 09/2008	O	9	Oct 09/2008
R	4	Oct 09/2008	O	31	Oct 09/2008	O	10	Oct 09/2008
	5	Dec 18/2007	O	32	Oct 09/2008	O	11	Oct 09/2008
	6	Dec 18/2007	R	33	Oct 09/2008	O	12	Oct 09/2008
	7	Dec 18/2007	O	34	Oct 09/2008	O	13	Oct 09/2008
	8	Dec 18/2007	O	35	Oct 09/2008	O	14	Oct 09/2008
	9	Dec 18/2007	O	36	Oct 09/2008	O	15	Oct 09/2008
	10	Dec 18/2007	O	37	Oct 09/2008	O	16	Oct 09/2008
	11	Dec 18/2007	O	38	Oct 09/2008	O	17	Oct 09/2008
	12	Dec 18/2007	O	39	Oct 09/2008	O	18	Oct 09/2008
	13	Dec 18/2007	O	40	Oct 09/2008	O	19	Oct 09/2008
	14	Dec 18/2007	O	41	Oct 09/2008	O	20	Oct 09/2008
	15	Dec 18/2007	O	42	Oct 09/2008	O	21	Oct 09/2008
	16	Dec 18/2007	O	43	Oct 09/2008	O	22	Oct 09/2008
	17	Dec 18/2007	O	44	Oct 09/2008	O	23	Oct 09/2008

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280N032

EFFECTIVE PAGES

Page 27
Oct 09/2008

91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D41000 cont.			D41000 cont.			D41000 cont.		
O	24	Oct 09/2008	O	51	Oct 09/2008	O	78	Oct 09/2008
O	25	Oct 09/2008	O	52	Oct 09/2008	O	79	Oct 09/2008
O	26	Oct 09/2008	O	53	Oct 09/2008	O	80	Oct 09/2008
O	27	Oct 09/2008	O	54	Oct 09/2008	O	81	Oct 09/2008
O	28	Oct 09/2008	O	55	Oct 09/2008	O	82	Oct 09/2008
O	29	Oct 09/2008	O	56	Oct 09/2008	O	83	Oct 09/2008
O	30	Oct 09/2008	O	57	Oct 09/2008	O	84	Oct 09/2008
O	31	Oct 09/2008	O	58	Oct 09/2008	O	85	Oct 09/2008
O	32	Oct 09/2008	O	59	Oct 09/2008	O	86	Oct 09/2008
R	33	Oct 09/2008	O	60	Oct 09/2008	O	87	Oct 09/2008
R	34	Oct 09/2008	O	61	Oct 09/2008	O	88	Oct 09/2008
R	35	Oct 09/2008	R	62	Oct 09/2008	O	89	Oct 09/2008
R	36	Oct 09/2008	R	63	Oct 09/2008	O	90	Oct 09/2008
O	37	Oct 09/2008	R	64	Oct 09/2008	O	91	Oct 09/2008
O	38	Oct 09/2008	R	65	Oct 09/2008	O	92	Oct 09/2008
O	39	Oct 09/2008	R	66	Oct 09/2008	O	93	Oct 09/2008
O	40	Oct 09/2008	O	67	Oct 09/2008	O	94	Oct 09/2008
O	41	Oct 09/2008	O	68	Oct 09/2008	O	95	Oct 09/2008
O	42	Oct 09/2008	O	69	Oct 09/2008	O	96	Oct 09/2008
O	43	Oct 09/2008	O	70	Oct 09/2008	A	97	Oct 09/2008
O	44	Oct 09/2008	O	71	Oct 09/2008	D41100	1	May 17/2006
O	45	Oct 09/2008	O	72	Oct 09/2008		2	May 17/2006
O	46	Oct 09/2008	O	73	Oct 09/2008		3	May 17/2006
O	47	Oct 09/2008	O	74	Oct 09/2008		4	May 17/2006
O	48	Oct 09/2008	O	75	Oct 09/2008		5	May 17/2006
O	49	Oct 09/2008	O	76	Oct 09/2008		6	May 17/2006
O	50	Oct 09/2008	O	77	Oct 09/2008		7	May 17/2006

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280N032

EFFECTIVE PAGES

Page 28
Oct 09/2008

91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D41100 cont.			D41200 cont.			D41300 cont.		
	8	May 17/2006		2	May 17/2006		5	Aug 01/2005
	9	May 17/2006		3	May 17/2006		6	Aug 01/2005
	10	May 17/2006		4	May 17/2006		7	Aug 01/2005
	11	May 17/2006		5	May 17/2006		8	Aug 01/2005
	12	May 17/2006		6	May 17/2006		9	Aug 01/2005
	13	May 17/2006		7	May 17/2006		10	Aug 01/2005
	14	May 17/2006		8	May 17/2006		11	Aug 01/2005
	15	May 17/2006		9	May 17/2006		12	May 17/2006
	16	May 17/2006		10	May 17/2006		13	Aug 01/2005
	17	Dec 18/2007		11	May 17/2006		14	Aug 01/2005
	18	Dec 18/2007		12	May 17/2006		15	Aug 01/2005
	19	Dec 18/2007		13	May 17/2006		16	Aug 01/2005
	20	Dec 18/2007		14	May 17/2006		17	Aug 01/2005
	21	Dec 18/2007		15	May 17/2006		18	Aug 01/2005
	22	Dec 18/2007		16	May 17/2006		19	Aug 01/2005
	23	Dec 18/2007		17	May 17/2006		20	Aug 01/2005
	24	Dec 18/2007		18	May 17/2006		21	Aug 01/2005
	25	Dec 18/2007		19	May 17/2006		22	Aug 01/2005
	26	Dec 18/2007		20	May 17/2006		23	May 17/2006
	27	Dec 18/2007		21	May 17/2006		24	May 17/2006
	28	Dec 18/2007		22	May 17/2006		25	May 17/2006
	29	Dec 18/2007		23	May 17/2006		26	May 17/2006
	30	Dec 18/2007		24	May 17/2006		27	May 17/2006
	31	Dec 18/2007	D41300	1	Aug 01/2005		28	May 17/2006
	32	Dec 18/2007		2	Aug 01/2005		29	Dec 18/2007
	33	Dec 18/2007		3	Aug 01/2005		30	Dec 18/2007
D41200	1	May 17/2006		4	Aug 01/2005		31	Dec 18/2007

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280N032

EFFECTIVE PAGES

Page 29
Oct 09/2008

91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D41300 cont.			D41300 cont.			D41300 cont.		
	32	Dec 18/2007	O	59	Oct 09/2008	O	86	Oct 09/2008
	33	Dec 18/2007	O	60	Oct 09/2008	O	87	Oct 09/2008
	34	Dec 18/2007	O	61	Oct 09/2008	O	88	Oct 09/2008
	35	Dec 18/2007	O	62	Oct 09/2008	O	89	Oct 09/2008
	36	Dec 18/2007	O	63	Oct 09/2008	O	90	Oct 09/2008
	37	Dec 18/2007	O	64	Oct 09/2008	O	91	Oct 09/2008
	38	Dec 18/2007	O	65	Oct 09/2008		92	Dec 18/2007
	39	Dec 18/2007	O	66	Oct 09/2008		93	Dec 18/2007
	40	Dec 18/2007	O	67	Oct 09/2008		94	Dec 18/2007
	41	Dec 18/2007	O	68	Oct 09/2008		95	Dec 18/2007
	42	Dec 18/2007	O	69	Oct 09/2008		96	Dec 18/2007
	43	Dec 18/2007	O	70	Oct 09/2008		97	Dec 18/2007
	44	Dec 18/2007	O	71	Oct 09/2008		98	Dec 18/2007
	45	Dec 18/2007	O	72	Oct 09/2008		99	Dec 18/2007
	46	Dec 18/2007	O	73	Oct 09/2008		100	Dec 18/2007
	47	Dec 18/2007	O	74	Oct 09/2008	R	101	Oct 09/2008
	48	Dec 18/2007	O	75	Oct 09/2008		102	Dec 18/2007
	49	Dec 18/2007	O	76	Oct 09/2008		103	Dec 18/2007
	50	Dec 18/2007	O	77	Oct 09/2008		104	Dec 18/2007
	51	Dec 18/2007	O	78	Oct 09/2008		105	Dec 18/2007
R	52	Oct 09/2008	O	79	Oct 09/2008		106	Dec 18/2007
O	53	Oct 09/2008	O	80	Oct 09/2008		107	Dec 18/2007
O	54	Oct 09/2008	O	81	Oct 09/2008		108	Dec 18/2007
O	55	Oct 09/2008	O	82	Oct 09/2008		109	Dec 18/2007
O	56	Oct 09/2008	O	83	Oct 09/2008		110	Dec 18/2007
O	57	Oct 09/2008	O	84	Oct 09/2008		111	Dec 18/2007
O	58	Oct 09/2008	O	85	Oct 09/2008		112	Dec 18/2007

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280N032

EFFECTIVE PAGES

Page 30
Oct 09/2008

91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D41300 cont.			D41300 cont.			D41400 cont.		
	113	Dec 18/2007	O	140	Oct 09/2008		21	Aug 01/2005
	114	Dec 18/2007	O	141	Oct 09/2008		22	Aug 01/2005
	115	Dec 18/2007	O	142	Oct 09/2008		23	Aug 01/2005
	116	Dec 18/2007	O	143	Oct 09/2008		24	Aug 01/2005
	117	Dec 18/2007	O	144	Oct 09/2008		25	Aug 01/2005
	118	Dec 18/2007	O	145	Oct 09/2008		26	Aug 01/2005
	119	Dec 18/2007	O	146	Oct 09/2008		27	Aug 01/2005
	120	Dec 18/2007					28	May 17/2006
	121	Dec 18/2007	D41400	1	Aug 01/2005		29	May 17/2006
	122	Dec 18/2007		2	Aug 01/2005		30	Oct 09/2008
	123	Dec 18/2007		3	Aug 01/2005	R	31	Aug 01/2005
	124	Dec 18/2007		4	Aug 01/2005		32	Aug 01/2005
	125	Dec 18/2007		5	Aug 01/2005		33	Aug 01/2005
	126	Dec 18/2007		6	Aug 01/2005		34	Oct 09/2008
	127	Dec 18/2007		7	Aug 01/2005	R	35	Aug 01/2005
	128	Dec 18/2007		8	Aug 01/2005		36	Oct 09/2008
	129	Dec 18/2007		9	Aug 01/2005	R	37	Aug 01/2005
	130	Dec 18/2007		10	Aug 01/2005		38	Aug 01/2005
	131	Dec 18/2007		11	Aug 01/2005		39	Aug 01/2005
	132	Dec 18/2007		12	Aug 01/2005		40	Aug 01/2005
R	133	Oct 09/2008		13	Aug 01/2005		41	Oct 09/2008
R	134	Oct 09/2008		14	Aug 01/2005	R	42	Oct 09/2008
R	135	Oct 09/2008		15	Aug 01/2005	O	43	Oct 09/2008
O	136	Oct 09/2008		16	Aug 01/2005	R	44	Oct 09/2008
O	137	Oct 09/2008		17	Aug 01/2005	O	45	Oct 09/2008
O	138	Oct 09/2008		18	Aug 01/2005	O	46	Oct 09/2008
O	139	Oct 09/2008		19	Aug 01/2005	R	47	Oct 09/2008
				20	Aug 01/2005	O		

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280N032

EFFECTIVE PAGES

Page 31
Oct 09/2008

91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D41400 cont.			D41400 cont.			D41400 cont.		
O	48	Oct 09/2008		75	May 17/2006	R	102	Oct 09/2008
O	49	Oct 09/2008		76	May 17/2006	O	103	Oct 09/2008
O	50	Oct 09/2008		77	May 17/2006	O	104	Oct 09/2008
	51	Aug 01/2005		78	May 17/2006	O	105	Oct 09/2008
	52	Aug 01/2005		79	May 17/2006	O	106	Oct 09/2008
	53	Aug 01/2005		80	May 17/2006	O	107	Oct 09/2008
	54	Aug 01/2005	R	81	Oct 09/2008	O	108	Oct 09/2008
	55	Aug 01/2005	R	82	Oct 09/2008	O	109	Oct 09/2008
	56	Aug 01/2005		83	May 17/2006	O	110	Oct 09/2008
	57	May 17/2006		84	May 17/2006	O	111	Oct 09/2008
	58	May 17/2006		85	May 17/2006	O	112	Oct 09/2008
	59	May 17/2006		86	May 17/2006	O	113	Oct 09/2008
	60	May 17/2006		87	May 17/2006	O	114	Oct 09/2008
	61	May 17/2006		88	May 17/2006	O	115	Oct 09/2008
	62	May 17/2006		89	May 17/2006	O	116	Oct 09/2008
	63	May 17/2006		90	May 17/2006	O	117	Oct 09/2008
	64	May 17/2006		91	May 17/2006	O	118	Oct 09/2008
	65	May 17/2006		92	May 17/2006	O	119	Oct 09/2008
	66	May 17/2006		93	May 17/2006	O	120	Oct 09/2008
	67	May 17/2006		94	May 17/2006	O	121	Oct 09/2008
	68	May 17/2006		95	May 17/2006	O	122	Oct 09/2008
	69	May 17/2006		96	May 17/2006	O	123	Oct 09/2008
	70	May 17/2006		97	May 17/2006	O	124	Oct 09/2008
	71	May 17/2006		98	May 17/2006	R	125	Oct 09/2008
	72	May 17/2006		99	May 17/2006	O	126	Oct 09/2008
	73	May 17/2006		100	May 17/2006	R	127	Oct 09/2008
	74	May 17/2006	R	101	Oct 09/2008	O	128	Oct 09/2008

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280N032

EFFECTIVE PAGES

Page 32
Oct 09/2008

91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D41400 cont.			D41500 cont.			D41500 cont.		
R	129	Oct 09/2008	O	21	Oct 09/2008	O	48	Oct 09/2008
R	130	Oct 09/2008	O	22	Oct 09/2008	R	49	Oct 09/2008
R	131	Oct 09/2008	O	23	Oct 09/2008	O	50	Oct 09/2008
O	132	Oct 09/2008	O	24	Oct 09/2008	O	51	Oct 09/2008
R	133	Oct 09/2008	O	25	Oct 09/2008	O	52	Oct 09/2008
O	134	Oct 09/2008	O	26	Oct 09/2008	R	53	Oct 09/2008
A	135	Oct 09/2008	O	27	Oct 09/2008	R	54	Oct 09/2008
O D41500	1	Oct 09/2008	O	28	Oct 09/2008	R	55	Oct 09/2008
O	2	Oct 09/2008	O	29	Oct 09/2008	R	56	Oct 09/2008
O	3	Oct 09/2008	O	30	Oct 09/2008	O	57	Oct 09/2008
O	4	Oct 09/2008	O	31	Oct 09/2008	O	58	Oct 09/2008
O	5	Oct 09/2008	O	32	Oct 09/2008	O	59	Oct 09/2008
O	6	Oct 09/2008	O	33	Oct 09/2008	O	60	Oct 09/2008
O	7	Oct 09/2008	O	34	Oct 09/2008	O	61	Oct 09/2008
O	8	Oct 09/2008	O	35	Oct 09/2008	O	62	Oct 09/2008
O	9	Oct 09/2008	O	36	Oct 09/2008	O	63	Oct 09/2008
O	10	Oct 09/2008	O	37	Oct 09/2008	O	64	Oct 09/2008
O	11	Oct 09/2008	O	38	Oct 09/2008	R	65	Oct 09/2008
O	12	Oct 09/2008	O	39	Oct 09/2008	R	66	Oct 09/2008
O	13	Oct 09/2008	O	40	Oct 09/2008	R	67	Oct 09/2008
O	14	Oct 09/2008	O	41	Oct 09/2008	O	68	Oct 09/2008
O	15	Oct 09/2008	O	42	Oct 09/2008	O	69	Oct 09/2008
O	16	Oct 09/2008	O	43	Oct 09/2008	A	70	Oct 09/2008
O	17	Oct 09/2008	O	44	Oct 09/2008	D41600	1	Aug 01/2005
O	18	Oct 09/2008	O	45	Oct 09/2008	R	2	Oct 09/2008
O	19	Oct 09/2008	O	46	Oct 09/2008	R	3	Oct 09/2008
O	20	Oct 09/2008	R	47	Oct 09/2008	R	4	Oct 09/2008

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280N032

EFFECTIVE PAGES

Page 33
Oct 09/2008

91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D41600 cont.			D41600 cont.			D41600 cont.		
R	5	Oct 09/2008	O	32	Oct 09/2008	O	59	Oct 09/2008
R	6	Oct 09/2008	O	33	Oct 09/2008	O	60	Oct 09/2008
O	7	Oct 09/2008	O	34	Oct 09/2008	O	61	Oct 09/2008
O	8	Oct 09/2008	O	35	Oct 09/2008	O	62	Oct 09/2008
R	9	Oct 09/2008	O	36	Oct 09/2008	O	63	Oct 09/2008
O	10	Oct 09/2008	O	37	Oct 09/2008	O	64	Oct 09/2008
O	11	Oct 09/2008	O	38	Oct 09/2008	O	65	Oct 09/2008
R	12	Oct 09/2008	O	39	Oct 09/2008	O	66	Oct 09/2008
R	13	Oct 09/2008	O	40	Oct 09/2008	R	67	Oct 09/2008
R	14	Oct 09/2008	O	41	Oct 09/2008	R	68	Oct 09/2008
R	15	Oct 09/2008	O	42	Oct 09/2008	R	69	Oct 09/2008
R	16	Oct 09/2008	O	43	Oct 09/2008	O	70	Oct 09/2008
O	17	Oct 09/2008	O	44	Oct 09/2008	O	71	Oct 09/2008
O	18	Oct 09/2008	O	45	Oct 09/2008	O	72	Oct 09/2008
O	19	Oct 09/2008	O	46	Oct 09/2008	O	73	Oct 09/2008
O	20	Oct 09/2008	O	47	Oct 09/2008	O	74	Oct 09/2008
O	21	Oct 09/2008	O	48	Oct 09/2008	O	75	Oct 09/2008
O	22	Oct 09/2008	O	49	Oct 09/2008	O	76	Oct 09/2008
O	23	Oct 09/2008	O	50	Oct 09/2008	O	77	Oct 09/2008
O	24	Oct 09/2008	O	51	Oct 09/2008	O	78	Oct 09/2008
O	25	Oct 09/2008	O	52	Oct 09/2008	O	79	Oct 09/2008
O	26	Oct 09/2008	O	53	Oct 09/2008	O	80	Oct 09/2008
O	27	Oct 09/2008	O	54	Oct 09/2008	O	81	Oct 09/2008
O	28	Oct 09/2008	O	55	Oct 09/2008	R	82	Oct 09/2008
O	29	Oct 09/2008	O	56	Oct 09/2008	R	83	Oct 09/2008
O	30	Oct 09/2008	O	57	Oct 09/2008	R	84	Oct 09/2008
O	31	Oct 09/2008	O	58	Oct 09/2008	R	85	Oct 09/2008

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280N032

EFFECTIVE PAGES

Page 34
Oct 09/2008

91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D41600 cont.			D41600 cont.			D41600 cont.		
O	86	Oct 09/2008	O	113	Oct 09/2008	O	140	Oct 09/2008
O	87	Oct 09/2008	O	114	Oct 09/2008	O	141	Oct 09/2008
O	88	Oct 09/2008	O	115	Oct 09/2008	O	142	Oct 09/2008
O	89	Oct 09/2008	O	116	Oct 09/2008	O	143	Oct 09/2008
O	90	Oct 09/2008	O	117	Oct 09/2008	O	144	Oct 09/2008
O	91	Oct 09/2008	O	118	Oct 09/2008	O	145	Oct 09/2008
O	92	Oct 09/2008	O	119	Oct 09/2008	O	146	Oct 09/2008
O	93	Oct 09/2008	O	120	Oct 09/2008	O	147	Oct 09/2008
O	94	Oct 09/2008	O	121	Oct 09/2008	A	148	Oct 09/2008
O	95	Oct 09/2008	O	122	Oct 09/2008	O D41700	1	Oct 09/2008
O	96	Oct 09/2008	O	123	Oct 09/2008	O	2	Oct 09/2008
O	97	Oct 09/2008	O	124	Oct 09/2008	O	3	Oct 09/2008
O	98	Oct 09/2008	O	125	Oct 09/2008	O	4	Oct 09/2008
O	99	Oct 09/2008	O	126	Oct 09/2008	O	5	Oct 09/2008
O	100	Oct 09/2008	O	127	Oct 09/2008	O	6	Oct 09/2008
O	101	Oct 09/2008	O	128	Oct 09/2008	O	7	Oct 09/2008
O	102	Oct 09/2008	O	129	Oct 09/2008	O	8	Oct 09/2008
O	103	Oct 09/2008	O	130	Oct 09/2008	O	9	Oct 09/2008
O	104	Oct 09/2008	O	131	Oct 09/2008	R	10	Oct 09/2008
O	105	Oct 09/2008	O	132	Oct 09/2008	R	11	Oct 09/2008
O	106	Oct 09/2008	O	133	Oct 09/2008	R	12	Oct 09/2008
R	107	Oct 09/2008	O	134	Oct 09/2008	O	13	Oct 09/2008
R	108	Oct 09/2008	O	135	Oct 09/2008	O	14	Oct 09/2008
R	109	Oct 09/2008	O	136	Oct 09/2008	O	15	Oct 09/2008
R	110	Oct 09/2008	O	137	Oct 09/2008	O	16	Oct 09/2008
R	111	Oct 09/2008	O	138	Oct 09/2008	O	17	Oct 09/2008
R	112	Oct 09/2008	O	139	Oct 09/2008	O	18	Oct 09/2008

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280N032

EFFECTIVE PAGES

Page 35
Oct 09/2008

91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D41700 cont.			D41700 cont.			D41700 cont.		
O	19	Oct 09/2008	O	46	Oct 09/2008	O	73	Oct 09/2008
O	20	Oct 09/2008	O	47	Oct 09/2008	O	74	Oct 09/2008
O	21	Oct 09/2008	O	48	Oct 09/2008	O	75	Oct 09/2008
O	22	Oct 09/2008	O	49	Oct 09/2008	O	76	Oct 09/2008
O	23	Oct 09/2008	O	50	Oct 09/2008	O	77	Oct 09/2008
O	24	Oct 09/2008	O	51	Oct 09/2008	O	78	Oct 09/2008
O	25	Oct 09/2008	O	52	Oct 09/2008	O	79	Oct 09/2008
O	26	Oct 09/2008	O	53	Oct 09/2008	O	80	Oct 09/2008
O	27	Oct 09/2008	O	54	Oct 09/2008	O	81	Oct 09/2008
O	28	Oct 09/2008	O	55	Oct 09/2008	O	82	Oct 09/2008
O	29	Oct 09/2008	O	56	Oct 09/2008	O	83	Oct 09/2008
O	30	Oct 09/2008	O	57	Oct 09/2008	O	84	Oct 09/2008
O	31	Oct 09/2008	O	58	Oct 09/2008	O	85	Oct 09/2008
O	32	Oct 09/2008	O	59	Oct 09/2008	O	86	Oct 09/2008
O	33	Oct 09/2008	O	60	Oct 09/2008	O	87	Oct 09/2008
O	34	Oct 09/2008	O	61	Oct 09/2008	O	88	Oct 09/2008
O	35	Oct 09/2008	O	62	Oct 09/2008	O	89	Oct 09/2008
O	36	Oct 09/2008	R	63	Oct 09/2008	O	90	Oct 09/2008
O	37	Oct 09/2008	O	64	Oct 09/2008	O	91	Oct 09/2008
O	38	Oct 09/2008	O	65	Oct 09/2008	O	92	Oct 09/2008
O	39	Oct 09/2008	O	66	Oct 09/2008	O	93	Oct 09/2008
O	40	Oct 09/2008	O	67	Oct 09/2008	O	94	Oct 09/2008
O	41	Oct 09/2008	O	68	Oct 09/2008	O	95	Oct 09/2008
O	42	Oct 09/2008	O	69	Oct 09/2008	O	96	Oct 09/2008
O	43	Oct 09/2008	O	70	Oct 09/2008	O	97	Oct 09/2008
O	44	Oct 09/2008	O	71	Oct 09/2008	O	98	Oct 09/2008
O	45	Oct 09/2008	O	72	Oct 09/2008	O	99	Oct 09/2008

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280N032

EFFECTIVE PAGES

Page 36
Oct 09/2008

91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D41700 cont.			D41700 cont.			D41800 cont.		
O	100	Oct 09/2008	O	127	Oct 09/2008	R	10	Oct 09/2008
O	101	Oct 09/2008	O	128	Oct 09/2008	O	11	Oct 09/2008
O	102	Oct 09/2008	O	129	Oct 09/2008	R	12	Oct 09/2008
O	103	Oct 09/2008	O	130	Oct 09/2008	R	13	Oct 09/2008
O	104	Oct 09/2008	O	131	Oct 09/2008	R	14	Oct 09/2008
O	105	Oct 09/2008	O	132	Oct 09/2008	O	15	Oct 09/2008
O	106	Oct 09/2008	O	133	Oct 09/2008	O	16	Oct 09/2008
O	107	Oct 09/2008	O	134	Oct 09/2008	O	17	Oct 09/2008
O	108	Oct 09/2008	O	135	Oct 09/2008	O	18	Oct 09/2008
O	109	Oct 09/2008	O	136	Oct 09/2008	O	19	Oct 09/2008
O	110	Oct 09/2008	O	137	Oct 09/2008	O	20	Oct 09/2008
O	111	Oct 09/2008	O	138	Oct 09/2008	O	21	Oct 09/2008
O	112	Oct 09/2008	O	139	Oct 09/2008	O	22	Oct 09/2008
O	113	Oct 09/2008	O	140	Oct 09/2008	O	23	Oct 09/2008
O	114	Oct 09/2008	O	141	Oct 09/2008	O	24	Oct 09/2008
O	115	Oct 09/2008	O	142	Oct 09/2008	O	25	Oct 09/2008
O	116	Oct 09/2008	O	143	Oct 09/2008	O	26	Oct 09/2008
O	117	Oct 09/2008	O	144	Oct 09/2008	O	27	Oct 09/2008
O	118	Oct 09/2008	O D41800	1	Oct 09/2008	O	28	Oct 09/2008
O	119	Oct 09/2008	O	2	Oct 09/2008	O	29	Oct 09/2008
O	120	Oct 09/2008	O	3	Oct 09/2008	O	30	Oct 09/2008
O	121	Oct 09/2008	O	4	Oct 09/2008	O	31	Oct 09/2008
O	122	Oct 09/2008	O	5	Oct 09/2008	O	32	Oct 09/2008
O	123	Oct 09/2008	O	6	Oct 09/2008	O	33	Oct 09/2008
O	124	Oct 09/2008	R	7	Oct 09/2008	O	34	Oct 09/2008
O	125	Oct 09/2008	R	8	Oct 09/2008	O	35	Oct 09/2008
O	126	Oct 09/2008	O	9	Oct 09/2008	O	36	Oct 09/2008

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280N032

EFFECTIVE PAGES

Page 37
Oct 09/2008

91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D41800 cont.			D41800 cont.			D41800 cont.		
O	37	Oct 09/2008	O	64	Oct 09/2008	O	91	Oct 09/2008
O	38	Oct 09/2008	O	65	Oct 09/2008	O	92	Oct 09/2008
O	39	Oct 09/2008	O	66	Oct 09/2008	O	93	Oct 09/2008
O	40	Oct 09/2008	O	67	Oct 09/2008	O	94	Oct 09/2008
O	41	Oct 09/2008	O	68	Oct 09/2008	O	95	Oct 09/2008
O	42	Oct 09/2008	O	69	Oct 09/2008	O	96	Oct 09/2008
O	43	Oct 09/2008	O	70	Oct 09/2008	O	97	Oct 09/2008
O	44	Oct 09/2008	O	71	Oct 09/2008	O	98	Oct 09/2008
O	45	Oct 09/2008	R	72	Oct 09/2008	O	99	Oct 09/2008
R	46	Oct 09/2008	R	73	Oct 09/2008	O	100	Oct 09/2008
R	47	Oct 09/2008	O	74	Oct 09/2008	O	101	Oct 09/2008
O	48	Oct 09/2008	R	75	Oct 09/2008	O	102	Oct 09/2008
O	49	Oct 09/2008	O	76	Oct 09/2008	O	103	Oct 09/2008
O	50	Oct 09/2008	R	77	Oct 09/2008	O	104	Oct 09/2008
O	51	Oct 09/2008	O	78	Oct 09/2008	O	105	Oct 09/2008
O	52	Oct 09/2008	R	79	Oct 09/2008	O	106	Oct 09/2008
O	53	Oct 09/2008	O	80	Oct 09/2008	O	107	Oct 09/2008
O	54	Oct 09/2008	O	81	Oct 09/2008	O	108	Oct 09/2008
O	55	Oct 09/2008	O	82	Oct 09/2008	O	109	Oct 09/2008
O	56	Oct 09/2008	O	83	Oct 09/2008	O	110	Oct 09/2008
O	57	Oct 09/2008	O	84	Oct 09/2008	O	111	Oct 09/2008
O	58	Oct 09/2008	R	85	Oct 09/2008	O	112	Oct 09/2008
O	59	Oct 09/2008	R	86	Oct 09/2008	O	113	Oct 09/2008
O	60	Oct 09/2008	R	87	Oct 09/2008	O	114	Oct 09/2008
O	61	Oct 09/2008	O	88	Oct 09/2008	R	115	Oct 09/2008
O	62	Oct 09/2008	O	89	Oct 09/2008	O	116	Oct 09/2008
O	63	Oct 09/2008	O	90	Oct 09/2008	O	117	Oct 09/2008

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280N032

EFFECTIVE PAGES

Page 38
Oct 09/2008

91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D41800 cont.			D41900 cont.			D41900 cont.		
O	118	Oct 09/2008	O	23	Oct 09/2008	O	50	Oct 09/2008
O	119	Oct 09/2008	O	24	Oct 09/2008	O	51	Oct 09/2008
O	120	Oct 09/2008	O	25	Oct 09/2008	O	52	Oct 09/2008
O	121	Oct 09/2008	O	26	Oct 09/2008	O	53	Oct 09/2008
O	122	Oct 09/2008	O	27	Oct 09/2008	O	54	Oct 09/2008
O D41900	1	Oct 09/2008	O	28	Oct 09/2008	O	55	Oct 09/2008
O	2	Oct 09/2008	O	29	Oct 09/2008	O	56	Oct 09/2008
O	3	Oct 09/2008	O	30	Oct 09/2008	O	57	Oct 09/2008
O	4	Oct 09/2008	O	31	Oct 09/2008	O	58	Oct 09/2008
R	5	Oct 09/2008	O	32	Oct 09/2008	O	59	Oct 09/2008
R	6	Oct 09/2008	O	33	Oct 09/2008	O	60	Oct 09/2008
O	7	Oct 09/2008	O	34	Oct 09/2008	O	61	Oct 09/2008
R	8	Oct 09/2008	O	35	Oct 09/2008	O	62	Oct 09/2008
O	9	Oct 09/2008	O	36	Oct 09/2008	O	63	Oct 09/2008
O	10	Oct 09/2008	O	37	Oct 09/2008	O	64	Oct 09/2008
O	11	Oct 09/2008	O	38	Oct 09/2008	O	65	Oct 09/2008
O	12	Oct 09/2008	O	39	Oct 09/2008	O	66	Oct 09/2008
O	13	Oct 09/2008	O	40	Oct 09/2008	O	67	Oct 09/2008
O	14	Oct 09/2008	O	41	Oct 09/2008	O	68	Oct 09/2008
O	15	Oct 09/2008	O	42	Oct 09/2008	O	69	Oct 09/2008
R	16	Oct 09/2008	O	43	Oct 09/2008	O	70	Oct 09/2008
O	17	Oct 09/2008	O	44	Oct 09/2008	O	71	Oct 09/2008
O	18	Oct 09/2008	O	45	Oct 09/2008	O	72	Oct 09/2008
O	19	Oct 09/2008	O	46	Oct 09/2008	O	73	Oct 09/2008
O	20	Oct 09/2008	O	47	Oct 09/2008	O	74	Oct 09/2008
O	21	Oct 09/2008	O	48	Oct 09/2008	O	75	Oct 09/2008
O	22	Oct 09/2008	O	49	Oct 09/2008	O	76	Oct 09/2008

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280N032

EFFECTIVE PAGES

Page 39
Oct 09/2008

91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D41900 cont.			D42000 cont.			D42000 cont.		
O	77	Oct 09/2008	O	17	Oct 09/2008	R	44	Oct 09/2008
O	78	Oct 09/2008	O	18	Oct 09/2008	O	45	Oct 09/2008
O	79	Oct 09/2008	R	19	Oct 09/2008	O	46	Oct 09/2008
O	80	Oct 09/2008	O	20	Oct 09/2008	O	47	Oct 09/2008
O	81	Oct 09/2008	O	21	Oct 09/2008	O	48	Oct 09/2008
O	82	Oct 09/2008	O	22	Oct 09/2008	O	49	Oct 09/2008
O	83	Oct 09/2008	O	23	Oct 09/2008	O	50	Oct 09/2008
O	84	Oct 09/2008	O	24	Oct 09/2008	O	51	Oct 09/2008
O	85	Oct 09/2008	R	25	Oct 09/2008	R	52	Oct 09/2008
O	86	Oct 09/2008	O	26	Oct 09/2008	O	53	Oct 09/2008
O	87	Oct 09/2008	R	27	Oct 09/2008	O	54	Oct 09/2008
O D42000	1	Oct 09/2008	O	28	Oct 09/2008	O	55	Oct 09/2008
O	2	Oct 09/2008	O	29	Oct 09/2008	O	56	Oct 09/2008
O	3	Oct 09/2008	O	30	Oct 09/2008	O	57	Oct 09/2008
O	4	Oct 09/2008	O	31	Oct 09/2008	O	58	Oct 09/2008
O	5	Oct 09/2008	O	32	Oct 09/2008	O	59	Oct 09/2008
O	6	Oct 09/2008	O	33	Oct 09/2008	O	60	Oct 09/2008
O	7	Oct 09/2008	O	34	Oct 09/2008	O	61	Oct 09/2008
O	8	Oct 09/2008	O	35	Oct 09/2008	O	62	Oct 09/2008
O	9	Oct 09/2008	O	36	Oct 09/2008	R	63	Oct 09/2008
O	10	Oct 09/2008	O	37	Oct 09/2008	O	64	Oct 09/2008
O	11	Oct 09/2008	O	38	Oct 09/2008	O	65	Oct 09/2008
O	12	Oct 09/2008	O	39	Oct 09/2008	R	66	Oct 09/2008
O	13	Oct 09/2008	O	40	Oct 09/2008	O	67	Oct 09/2008
O	14	Oct 09/2008	O	41	Oct 09/2008	R	68	Oct 09/2008
O	15	Oct 09/2008	O	42	Oct 09/2008	O	69	Oct 09/2008
O	16	Oct 09/2008	O	43	Oct 09/2008	O	70	Oct 09/2008

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280N032

EFFECTIVE PAGES

Page 40
Oct 09/2008

91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D42000 cont.			D42000 cont.			D42000 cont.		
O	71	Oct 09/2008	O	98	Oct 09/2008	O	125	Oct 09/2008
O	72	Oct 09/2008	O	99	Oct 09/2008	O D42100	1	Oct 09/2008
R	73	Oct 09/2008	O	100	Oct 09/2008	O	2	Oct 09/2008
O	74	Oct 09/2008	O	101	Oct 09/2008	O	3	Oct 09/2008
O	75	Oct 09/2008	O	102	Oct 09/2008	O	4	Oct 09/2008
R	76	Oct 09/2008	O	103	Oct 09/2008	O	5	Oct 09/2008
O	77	Oct 09/2008	O	104	Oct 09/2008	O	6	Oct 09/2008
O	78	Oct 09/2008	R	105	Oct 09/2008	O	7	Oct 09/2008
O	79	Oct 09/2008	R	106	Oct 09/2008	O	8	Oct 09/2008
R	80	Oct 09/2008	O	107	Oct 09/2008	O	9	Oct 09/2008
R	81	Oct 09/2008	O	108	Oct 09/2008	O	10	Oct 09/2008
O	82	Oct 09/2008	O	109	Oct 09/2008	O	11	Oct 09/2008
R	83	Oct 09/2008	O	110	Oct 09/2008	O	12	Oct 09/2008
O	84	Oct 09/2008	O	111	Oct 09/2008	O	13	Oct 09/2008
R	85	Oct 09/2008	R	112	Oct 09/2008	O	14	Oct 09/2008
O	86	Oct 09/2008	O	113	Oct 09/2008	O	15	Oct 09/2008
O	87	Oct 09/2008	O	114	Oct 09/2008	O	16	Oct 09/2008
O	88	Oct 09/2008	O	115	Oct 09/2008	O	17	Oct 09/2008
O	89	Oct 09/2008	O	116	Oct 09/2008	O	18	Oct 09/2008
O	90	Oct 09/2008	O	117	Oct 09/2008	O	19	Oct 09/2008
O	91	Oct 09/2008	O	118	Oct 09/2008	O	20	Oct 09/2008
O	92	Oct 09/2008	O	119	Oct 09/2008	O	21	Oct 09/2008
O	93	Oct 09/2008	O	120	Oct 09/2008	O	22	Oct 09/2008
O	94	Oct 09/2008	O	121	Oct 09/2008	R	23	Oct 09/2008
O	95	Oct 09/2008	O	122	Oct 09/2008	R	24	Oct 09/2008
O	96	Oct 09/2008	O	123	Oct 09/2008	O	25	Oct 09/2008
O	97	Oct 09/2008	O	124	Oct 09/2008	O	26	Oct 09/2008

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280N032

EFFECTIVE PAGES

Page 41
Oct 09/2008

91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D42100 cont.			D42100 cont.			D42200 cont.		
O	27	Oct 09/2008	O	54	Oct 09/2008	O	19	Oct 09/2008
O	28	Oct 09/2008	O	55	Oct 09/2008	O	20	Oct 09/2008
O	29	Oct 09/2008	O	56	Oct 09/2008	O	21	Oct 09/2008
R	30	Oct 09/2008	O	57	Oct 09/2008	O	22	Oct 09/2008
R	31	Oct 09/2008	O	58	Oct 09/2008	O	23	Oct 09/2008
R	32	Oct 09/2008	O	59	Oct 09/2008	R	24	Oct 09/2008
O	33	Oct 09/2008	O	60	Oct 09/2008	R	25	Oct 09/2008
O	34	Oct 09/2008	A	61	Oct 09/2008	O	26	Oct 09/2008
O	35	Oct 09/2008	A	62	Oct 09/2008	O	27	Oct 09/2008
O	36	Oct 09/2008	O D42200	1	Oct 09/2008	O	28	Oct 09/2008
O	37	Oct 09/2008	O	2	Oct 09/2008	O	29	Oct 09/2008
O	38	Oct 09/2008	O	3	Oct 09/2008	O	30	Oct 09/2008
O	39	Oct 09/2008	O	4	Oct 09/2008	O	31	Oct 09/2008
O	40	Oct 09/2008	O	5	Oct 09/2008	O	32	Oct 09/2008
O	41	Oct 09/2008	O	6	Oct 09/2008	O	33	Oct 09/2008
O	42	Oct 09/2008	O	7	Oct 09/2008	O	34	Oct 09/2008
O	43	Oct 09/2008	O	8	Oct 09/2008	O	35	Oct 09/2008
O	44	Oct 09/2008	O	9	Oct 09/2008	O	36	Oct 09/2008
O	45	Oct 09/2008	O	10	Oct 09/2008	O	37	Oct 09/2008
O	46	Oct 09/2008	O	11	Oct 09/2008	O	38	Oct 09/2008
O	47	Oct 09/2008	O	12	Oct 09/2008	O	39	Oct 09/2008
O	48	Oct 09/2008	O	13	Oct 09/2008	O	40	Oct 09/2008
O	49	Oct 09/2008	O	14	Oct 09/2008	O	41	Oct 09/2008
O	50	Oct 09/2008	O	15	Oct 09/2008	O	42	Oct 09/2008
O	51	Oct 09/2008	O	16	Oct 09/2008	O	43	Oct 09/2008
O	52	Oct 09/2008	O	17	Oct 09/2008	O	44	Oct 09/2008
O	53	Oct 09/2008	O	18	Oct 09/2008	O	45	Oct 09/2008

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280N032

EFFECTIVE PAGES

Page 42
Oct 09/2008

91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
D42200 cont.			D43000 cont.			O D45000	1	Oct 09/2008
O	46	Oct 09/2008	O	11	Oct 09/2008	O	2	Oct 09/2008
O	47	Oct 09/2008	O	12	Oct 09/2008	O	3	Oct 09/2008
O	48	Oct 09/2008	O	13	Oct 09/2008	O	4	Oct 09/2008
O	49	Oct 09/2008	O	14	Oct 09/2008	O	5	Oct 09/2008
O	50	Oct 09/2008	O	15	Oct 09/2008	O	6	Oct 09/2008
O	51	Oct 09/2008	O	16	Oct 09/2008	O D52100	1	Oct 09/2008
O	52	Oct 09/2008	O	17	Oct 09/2008	O D65000	1	Oct 09/2008
O	53	Oct 09/2008	R	18	Oct 09/2008	O	2	Oct 09/2008
O	54	Oct 09/2008	R	19	Oct 09/2008	O	3	Oct 09/2008
O D42300	1	Oct 09/2008	R	20	Oct 09/2008	O	4	Oct 09/2008
O D42400	1	Oct 09/2008	R	21	Oct 09/2008	O	5	Oct 09/2008
O	2	Oct 09/2008	O	22	Oct 09/2008	O	6	Oct 09/2008
O D42500	1	Oct 09/2008	O	23	Oct 09/2008	O	7	Oct 09/2008
O	2	Oct 09/2008	O	24	Oct 09/2008	O GD0000	1	Oct 09/2008
O	3	Oct 09/2008	A	25	Oct 09/2008	O GD0100	1	Oct 09/2008
O	4	Oct 09/2008	A	26	Oct 09/2008	O GD0300	1	Oct 09/2008
O	5	Oct 09/2008	A	27	Oct 09/2008	O K00000	1	Oct 09/2008
O D43000	1	Oct 09/2008	A	28	Oct 09/2008	O K00100	1	Oct 09/2008
O	2	Oct 09/2008	O D43300	1	Oct 09/2008	R	2	Oct 09/2008
O	3	Oct 09/2008	O	2	Oct 09/2008	R	3	Oct 09/2008
O	4	Oct 09/2008	O	3	Oct 09/2008	O	4	Oct 09/2008
O	5	Oct 09/2008	O	4	Oct 09/2008	O	5	Oct 09/2008
O	6	Oct 09/2008	O D43600	1	Oct 09/2008	O	6	Oct 09/2008
O	7	Oct 09/2008	O	2	Oct 09/2008	O	7	Oct 09/2008
O	8	Oct 09/2008	O D44100	1	Oct 09/2008	O K00300	1	Oct 09/2008
O	9	Oct 09/2008	O	2	Oct 09/2008	O	2	Oct 09/2008
O	10	Oct 09/2008	O	3	Oct 09/2008	O	3	Oct 09/2008

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280N032

EFFECTIVE PAGES

Page 43
Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

91-21-51 HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
O K00400	1	Oct 09/2008	L00300 cont.			M10000 cont.		
R K10000	1	Oct 09/2008		7	May 17/2006		2	May 17/2006
R	2	Oct 09/2008		8	May 17/2006	M10100	1	May 17/2006
O	3	Oct 09/2008	L00400	1	May 17/2006	M10200	1	May 17/2006
O	4	Oct 09/2008		2	May 17/2006	R M10300	1	Oct 09/2008
O K10100	1	Oct 09/2008		3	May 17/2006	R M10400	1	Oct 09/2008
O K10200	1	Oct 09/2008		4	May 17/2006	M10500	1	May 17/2006
O K10300	1	Oct 09/2008		5	May 17/2006	M10600	1	May 17/2006
O K10500	1	Oct 09/2008		6	May 17/2006	N10000	1	May 17/2006
O	2	Oct 09/2008		7	May 17/2006	QD0000	1	May 17/2006
O	3	Oct 09/2008		8	May 17/2006		2	May 17/2006
A K10800	1	Oct 09/2008		9	May 17/2006		3	May 17/2006
L00000	1	May 17/2006		10	May 17/2006		4	May 17/2006
	2	May 17/2006	L00500	1	May 17/2006	R00000	1	May 17/2006
	3	May 17/2006		2	May 17/2006	R00500	1	May 17/2006
	4	May 17/2006		3	May 17/2006	R10100	1	May 17/2006
L00200	1	May 17/2006	L00600	1	May 17/2006	R10200	1	May 17/2006
	2	May 17/2006	L00700	1	May 17/2006	R10300	1	May 17/2006
	3	May 17/2006	L01000	1	May 17/2006	R10400	1	May 17/2006
	4	May 17/2006	M00200	1	May 17/2006	R S00000	1	Oct 09/2008
	5	May 17/2006		2	May 17/2006	R	2	Oct 09/2008
	6	May 17/2006	M00400	1	May 17/2006	R	3	Oct 09/2008
L00300	1	May 17/2006	M00500	1	May 17/2006	A	4	Oct 09/2008
	2	May 17/2006	M00700	1	May 17/2006	O S00300	1	Oct 09/2008
	3	May 17/2006	M00800	1	May 17/2006	O	2	Oct 09/2008
	4	May 17/2006	M00900	1	May 17/2006	O	3	Oct 09/2008
	5	May 17/2006	M01100	1	May 17/2006	O S00400	1	Oct 09/2008
	6	May 17/2006	M10000	1	May 17/2006	O	2	Oct 09/2008

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280N032

EFFECTIVE PAGES

Page 44
Oct 09/2008

91-21-51
HOOKUP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
S00400 cont.			S10300 cont.			O TB0200	1	Oct 09/2008
O	3	Oct 09/2008	O	5	Oct 09/2008	O	2	Oct 09/2008
O	4	Oct 09/2008	O	6	Oct 09/2008	O	3	Oct 09/2008
O S00500	1	Oct 09/2008	O S10400	1	Oct 09/2008	O TB5000	1	Oct 09/2008
O S00600	1	Oct 09/2008	O S10500	1	Oct 09/2008	O TS0100	1	Oct 09/2008
O S10000	1	Oct 09/2008	O S10600	1	Oct 09/2008	O TS0200	1	Oct 09/2008
O	2	Oct 09/2008	A S10700	1	Oct 09/2008	O TS0300	1	Oct 09/2008
O	3	Oct 09/2008	SM0000	1	Aug 01/2005	R TS5000	1	Oct 09/2008
O	4	Oct 09/2008		2	Aug 01/2005	O TS5100	1	Oct 09/2008
O S10100	1	Oct 09/2008		3	Dec 18/2007	O V00000	1	Oct 09/2008
O	2	Oct 09/2008		4	Dec 18/2007	A	2	BLANK
O	3	Oct 09/2008	SM00	1	Aug 01/2005			
O	4	Oct 09/2008		2	Aug 01/2005			
O S10200	1	Oct 09/2008	SP0000	1	Aug 01/2005			
O	2	Oct 09/2008	SP0100	1	Aug 01/2005			
O	3	Oct 09/2008		2	Aug 01/2005			
O	4	Oct 09/2008		3	Aug 01/2005			
O	5	Oct 09/2008	SP0200	1	Aug 01/2005			
O	6	Oct 09/2008	A SP0500	1	Oct 09/2008			
O	7	Oct 09/2008	R T00100	1	Oct 09/2008			
O	8	Oct 09/2008	O	2	Oct 09/2008			
O	9	Oct 09/2008	O T10000	1	Oct 09/2008			
O	10	Oct 09/2008	O	2	Oct 09/2008			
O	11	Oct 09/2008	O TB0000	1	Oct 09/2008			
O S10300	1	Oct 09/2008	O	2	Oct 09/2008			
O	2	Oct 09/2008	O TB0100	1	Oct 09/2008			
O	3	Oct 09/2008	O	2	Oct 09/2008			
O	4	Oct 09/2008	R	3	Oct 09/2008			

A = Added, R = Revised, D = Deleted, O = Overflow

HOOKUP LIST

D280N032

EFFECTIVE PAGES

Page 45
Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
B00041		0871/140/L015		HTR-FWD DRAIN MAST				ALL
	=1		W2506	C-PN			30-71-11	ALL
	=2		W2506	C-AC			30-71-11	ALL
	=3		W2506	C-ST			30-71-11	ALL
B00042		1670/170/R025		HTR-AFT DRAIN MAST				ALL
	=1		W2632	H-PR			30-71-11	ALL
	=2		W2632	H-AC			30-71-11	ALL
	=3		W2632	H-ST			30-71-11	ALL
B00043		425/160/L010		HTR GASKET-FWD TOILET DRAIN LAV "A"				001-099
B00043		425/150/L011		HTR GASKET-FWD TOILET DRAIN LAV "A"				115-199
	=1		W4104	G-PR			30-71-21	001-099
	=1		W4106	H-PR			30-71-21	115-199
	=2		W4104	H-GD			30-71-21	001-099
	=2		W4106	H-GD			30-71-21	115-199
B00060		0330/171/L020		HORN-GND CREW CALL				ALL
	=G	C	W2152	0019	20		23-43-11	ALL
	=P	C	W2152	0018	20		23-43-11	ALL
B00085		425/160/L030		THERMOSTAT-DRAIN LINE HTR BLNKT LAV "A"				001-099
B00085		425/157/L030		THERMOSTAT-DRAIN LINE HTR BLNKT LAV "A"				115-199
	=1		W4104	E-PR			30-71-21	001-099
	=1		W4106	M-PR			30-71-21	115-199
	=2		W4104	F-GD			30-71-21	001-099
	=2		W4106	I-GD			30-71-21	115-199
B00092		1185/139/		HTR GASKET-TOILET DRAIN LAV "B","C"OR"D"				001-099
B00092		1188/139/R010		HTR GASKET-TOILET DRAIN LAV "B","C"OR"D"				115-199
	=1		W2632	B-PR			30-71-21	ALL
	=2		W2632	B-GD			30-71-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section B00000

Page 1 End

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
B00107		0425/160/L015		HTR BLANKET-DRAIN LINE LAV "A"				ALL
	= 1		W4104	C-BK			30-71-21	001-099
	= 2		W4104	D-WT			30-71-21	001-099
	BLK		W4106	I-BK			30-71-21	115-199
	WHT		W4106	K-WT			30-71-21	115-199
B00109		1665/182/R050		HTR TAPE-WATER SUPPLY LINE				115-199
	BLK		W2632	O-BK			30-71-21	115-199
	WHT		W2632	O-WT			30-71-21	115-199
B00111		1665/182/R050		HTR TAPE-WATER SUPPLY LINE				115-199
	BLK		W2632	N-BK			30-71-21	115-199
	WHT		W2632	N-WT			30-71-21	115-199
B00113		1663/182/R053		HTR TAPE-WATER SUPPLY LINE				115-199
	BLK		W2632	M-BK			30-71-21	115-199
	WHT		W2632	M-WT			30-71-21	115-199
B00114		1619/198/R045		HTR TAPE-WATER SUPPLY LINE				115-199
	BLK		W2632	D-BK			30-71-21	115-199
	WHT		W2632	D-WT			30-71-21	115-199
B00116		1650/165/R016		HTR TAPE-WATER SUPPLY LINE				115-199
	BLK		W2632	E-BK			30-71-21	115-199
	WHT		W2632	E-WT			30-71-21	115-199
B00117		0425/157/L017		HTR BLANKET-DRAIN LINE LAV "A"				ALL
	= 1		W4104	A-BK			30-71-21	001-099
	= 2		W4104	B-WT			30-71-21	001-099
	BLK		W4106	J-BK			30-71-21	115-199
	WHT		W4106	L-WT			30-71-21	115-199
B00118		0857/154/L017		HTR TAPE-WATER SUPPLY LINE				002-099, 115-199
	= 1		W4104	T-BK			30-71-21	002-099
	= 2		W4104	T-WT			30-71-21	002-099
	BLK		W4106	A-BK			30-71-21	115-199
	WHT		W4106	A-WT			30-71-21	115-199
B00122		P062-00/ /		HORN-APU FIRE WARNING				ALL
	+	D	W3060	0004	20		26-15-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section B00100

Page 1

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
B00122		P062-00/ /		HORN-APU FIRE WARNING (continued)				ALL
	-	D	W3060	0003	20		26-15-12	ALL
B00129		P034-00/ /		FUSEHOLDER-EXT PWR INTERLOCK				ALL
	=1	\$	W1128	0123	22		24-41-11	ALL
	=2	\$	W1128	0126	22		24-41-11	ALL
B00130		P034-00/ /		FUSEHOLDER-EXT PWR INTERLOCK				ALL
	=1	\$	W1128	0124	22		24-41-11	ALL
	=2	\$	W1128	0125	22		24-41-11	ALL
B00144		0360/288/R002		CHIME-FWD ATT L				115-199
	H/L	C	W3672	0155	24		23-42-12	115-199
	28V	C	W3672	0153	22		23-42-12	115-199
	HI	C	W3672	0148	22		33-25-21	115-199
	GND	C	W3672	0154	20		23-42-12	115-199
B00145		1315/289/		CHIME-MID ATT R				115-199
	H/L	C	W3672	0166	24		23-42-12	115-199
	28V	C	W3672	0164	22		23-42-12	115-199
	HI	C	W3672	0167	22		33-25-24	115-199
	GND	C	W3672	0165	20		23-42-12	115-199
B00148		1648/288/L019		CHIME-AFT ATT L				115-199
	H/L	C	W3672	0161	24		23-42-12	115-199
	28V	C	W3672	0159	22		23-42-12	115-199
	HI	C	W3672	0140	22		33-25-14	115-199
	GND	C	W3672	0160	20		23-42-12	115-199

HOOKUP LIST

D280N032

91-21-51

Section B00100

Page 2 End

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
B10054		MULTI/ /		ACTUATOR-PASS OXY LATCH				ALL
	GRN		W0512	A-A			35-21-31	001-099
	GRN		W0512	D-G			35-21-31	115-199
	RED		W0512	A-B			35-21-31	001-099
	RED		W0512	D-P			35-21-31	115-199
B10055		MULTI/ /		ACTUATOR-PASS OXY LATCH				ALL
	GRN		W0514	A-A			35-21-31	001-099
	GRN		W0514	D-G			35-21-31	115-199
	RED		W0514	A-B			35-21-31	001-099
	RED		W0514	D-P			35-21-31	115-199
B10056		MULTI/ /		ACTUATOR-PASS OXY LATCH				ALL
	GRN		W0522	A-A			35-21-31	001-099
	GRN		W0522	D-G			35-21-31	115-199
	RED		W0522	A-B			35-21-31	001-099
	RED		W0522	D-P			35-21-31	115-199
B10057		MULTI/ /		ACTUATOR-PASS OXY LATCH				ALL
	GRN		W0520	D-G			35-21-31	115-199
	RED		W0520	D-P			35-21-31	115-199
B10058		MULTI/ /		ACTUATOR-PASS OXY LATCH				001-099
	GRN		W0524	D-G			35-21-31	001-099
	RED		W0524	D-P			35-21-31	001-099
B10063		0871/140/L015		HTR-FWD DRAIN MAST COILED HOSE				ALL
	= 1		W2506	A-PR			30-71-11	ALL
	= 2		W2506	B-PR			30-71-11	ALL
B10064		0871/140/L015		THERMOSTAT-HTR TAPE CONT				ALL
	= 1		W2506	C-PR			30-71-11	ALL
	= 2		W2506	A-GD			30-71-11	ALL
B10068		MULTI/ /		ACTUATOR-PASS OXY LATCH				115-199
	GRN		W0534	D-G			35-21-31	115-199
	RED		W0534	D-P			35-21-31	115-199
B10071		MULTI/ /		ACTUATOR-PASS OXY LATCH				004-099
	GRN		W0536	A-A			35-21-31	004-099

HOOKUP LIST

D280N032

91-21-51

Section B10000

Page 1

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
B10071		MULTI/ /		ACTUATOR-PASS OXY LATCH (continued)				004-099
	RED		W0536	A-B			35-21-31	004-099

HOOKUP LIST

D280N032

91-21-51

Section B10000

Page 2 End

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
B10101		685.5/ /L029		CHIME-MID ATT L				115-199
	H/L	C	W0511	0005	24		23-42-12	115-199
	28V	C	W0511	0003	22		23-42-12	115-199
	HI	C	W0511	0001	22		33-25-12	115-199
	HI	C	W0511	0002	22		33-25-12	115-199
	GND	C	W0511	0004	20		23-42-12	115-199
B10102		705/188/L055		HTR BLANKET-FWD DRAIN LINE LAV"S"				001-099
	=1		W4104	I-BK			30-71-21	001-099
	=2		W4104	J-WT			30-71-21	001-099
B10104								001-099
	=1		W4104	K-PR			30-71-21	001-099
	=2		W4104	L-GD			30-71-21	001-099
B10105		1670/170/R008		THERMOSTAT-WTR SUPPLY LINE HTR TAPE				115-199
	=1		W2632	R-PR			30-71-21	115-199
	=2		W2632	S-GD			30-71-21	115-199
B10110		1650/290/R010		SPEAKER-MUTED AFT				ALL
	1K	AD	W3501	2003R	22		23-31-22	ALL
	COM	AC	W3501	2003B	22		23-31-22	ALL
B10111		340/295/R019		SPEAKER-MUTED FWD				001-099
B10111		340/288/R015		SPEAKER-MUTED FWD				115-199
	2K	AD	W3541	2003R	22		23-31-21	ALL
	COM	AC	W3541	2003B	22		23-31-21	ALL
B10112		0367/295/L010		SPEAKER-MUTED FWD				ALL
	2K	AD	W3541	2002R	22		23-31-21	ALL
	COM	AC	W3541	2002B	22		23-31-21	ALL
B10114		0712/280/L060		SPEAKER-MID				001-099
B10114		0700/280/R020		SPEAKER-MUTED MID				115-199
	2K	AD	W0515	2001R	22		23-31-31	ALL
	COM	AC	W0515	2001B	22		23-31-31	ALL
B10116		0700/280/R060		SPEAKER-MUTED MID				ALL
	2K	AD	W0513	2003R	22		23-31-21	ALL
	COM	AC	W0513	2003B	22		23-31-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section B10100

Page 1

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
B10122		710/180/L055		HTR GASKET-TOILET DRAIN LAV "S & T"				001-099
	=1		W4104	I-PR			30-71-21	001-099
	=2		W4104	I-GD			30-71-21	001-099
B10126		1188/138/		HTR TAPE-DRAIN LINE LAV "B" OR "C"				001
B10126		1187/138/L002		HTR TAPE-DRAIN LINE LAV "B" OR "C"				115-199
	=1		W2632	X-BN			30-71-21	001-099
	=2		W2632	X-OR			30-71-21	001-099
	BRN		W2632	X-BN			30-71-21	115-199
	ORG		W2632	X-OR			30-71-21	115-199
B10127		1188/146/		HTR TAPE-DRAIN LINE LAV "D"				001-099
B10127		1187/145/R004		HTR TAPE-DRAIN LINE LAV "D"				115-199
	=1		W2632	W-BN			30-71-21	001-099
	=2		W2632	W-OR			30-71-21	001-099
	BRN		W2632	W-BN			30-71-21	115-199
	ORG		W2632	W-OR			30-71-21	115-199
B10140		1650/290/L010		SPEAKER-MUTED AFT				ALL
	1K	AD	W0519	2002R	22		23-31-32	ALL
	COM	AC	W0519	2002B	22		23-31-32	ALL

HOOKUP LIST

D280N032

91-21-51

Section B10100

Page 2 End

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
B10201		1610/192/R056		HTR TAPE-WATER SUPPLY LINE				001-099
	=1		W2632	A-BU			30-71-21	001-099
	=2		W2632	A-BW			30-71-21	001-099
B10217		1618/204/R050		HTR TAPE-AFT WATER SUPPLY LINE				001-099
	=1		W2632	A-BG			30-71-21	001-099
	=2		W2632	A-BH			30-71-21	001-099
B10219		1664/195/R052		HTR TAPE-AFT WATER SUPPLY LINE				001-099
	=1		W2632	A-BQ			30-71-21	001-099
	=2		W2632	A-BR			30-71-21	001-099
B10220		1674/195/R052		HTR TAPE-AFT WATER SUPPLY LINE				001-099
	=1		W2632	A-BI			30-71-21	001-099
	=2		W2632	A-BM			30-71-21	001-099
B10221		1664/195/R052		HTR TAPE-AFT WATER SUPPLY LINE				001-099
	=1		W2632	A-BO			30-71-21	001-099
	=2		W2632	A-BP			30-71-21	001-099
B10222		1650/165/R019		HTR TAPE-AFT WATER SUPPLY LINE				001-099
	=1		W2632	A-BS			30-71-21	001-099
	=2		W2632	A-BT			30-71-21	001-099
B10223		1650/165/R019		THERMOSTAT-AFT WATER SUPPLY LINE				001-099
	=1		W2632	A-BE			30-71-21	001-099
	=2		W2632	A-BF			30-71-21	001-099

HOOKUP LIST

D280N032

91-21-51

Section B10200

Page 1 End

Jan 21/2005

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00001		P011-01/ /A011		CB-AIR DATA AOA SENSOR L				ALL
	=B	D	W0124	0079	20		34-12-11	ALL
	=B	D	W0124	0080	20		34-12-11	ALL
	=L	D	W0124	0038	22		34-12-11	ALL
C00002		P011-01/ /A012		CB-AIR DATA BARO CORRECT L				ALL
	=B	D	W0124	0079	20		34-12-11	ALL
	=L	D	W0124	0037	22		34-12-11	ALL
C00003		P011-02/ /F031		CB-AIR DATA AOA SENSOR R				ALL
	=B	D	W0128	0033	20		34-12-21	ALL
	=B	D	W0128	0034	20		34-12-21	ALL
	=L	D	W0128	0026	22		34-12-21	ALL
C00004		P011-02/ /F032		CB-AIR DATA BARO CORRECT R				ALL
	=B	D	W0128	0034	20		34-12-21	ALL
	=L	D	W0128	0025	22		34-12-21	ALL
C00020		E006-00/ /		CB-APU START				ALL
	=B	D	W1026	0010	16		49-61-11	ALL
	=L	D	W1026	0047	22		49-72-11	ALL
	=L	D	W1026	0051	20		49-61-11	ALL
C00060		P070-00/ /B010		CB-SMOKE DET BLOWER 1				ALL
	=B	D	W1252	0093	24		26-16-21	ALL
	=L	D	W1252	0204	24		26-16-21	ALL
C00061		P070-00/ /B011		CB-SMOKE DET BLOWER 2				ALL
	=B	D	W1252	0092	24		26-16-21	ALL
	=L	D	W1252	0203	24		26-16-21	ALL
C00062		P070-00/ /B012		CB-SMOKE DET BLOWER 3				ALL
	=B	D	W1252	0091	24		26-16-21	ALL
	=L	D	W1252	0202	24		26-16-21	ALL
C00063		P070-00/ /B013		CB-SMOKE DET BLOWER 4				ALL
	=B	D	W1252	0090	24		26-16-21	ALL
	=L	D	W1252	0201	24		26-16-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section C00000

Page 1

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00070		P070-00/ /B014		CB-L TANK DEFUELING VALVE				ALL
	=B	D	W1252	0301	20		28-26-11	ALL
	=L	D	W1252	0302	22		28-26-11	ALL
C00071		P070-00/ /B015		CB-R TANK DEFUELING VALVE				ALL
	=B	D	W1252	0303	20		28-26-11	ALL
	=L	D	W1252	0304	22		28-26-11	ALL
C00075		P037-00/ /C004		CB-FUELING PANEL DOOR LTS				001-099
	=B	D	W1272	0027	20		28-21-11	001-099
	=L	D	W1272	0090	20		28-21-11	001-099
C00089		E006-00/ /		CB-APU TRU FAN				ALL
	A1	D	W1026	0091	10		24-32-41	ALL
	A2	D	W1026	0088	20		24-32-41	ALL
	B1	D	W1026	0092	10		24-32-41	ALL
	B2	D	W1026	0089	20		24-32-41	ALL
	C1	D	W1026	0093	10		24-32-41	ALL
	C2	D	W1026	0090	20		24-32-41	ALL

HOOKUP LIST

D280N032

91-21-51

Section C00000

Page 2 End

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00301		P037-00/ /B002		CB-MAIN BATTERY CHARGER				ALL
	A1	D	W1272	0201	20		24-31-11	ALL
	A2	D	W1272	0014	12		24-51-52	001-099
	A2	D	W1272	ZZYE	02		24-51-52	ALL
	A2	D	W1272	ZZXG	02		24-51-52	115-199
	B1	D	W1272	0202	20		24-31-11	ALL
	B2	D	W1272	0015	12		24-51-52	001-099
	B2	D	W1272	ZZYF	02		24-51-52	ALL
	B2	D	W1272	ZZXH	02		24-51-52	115-199
	C1	D	W1272	0203	20		24-31-11	ALL
	C2	D	W1272	0016	12		24-51-52	001-099
	C2	D	W1272	ZZYG	02		24-51-52	ALL
	C2	D	W1272	ZZXI	02		24-51-52	115-199
C00302		P037-00/ /B005		CB-APU BATTERY CHARGER				ALL
	A1	D	W1272	0204	18		24-31-41	ALL
	A2	D	W1272	0014	12		24-51-52	001-099
	A2	D	W1272	0070	22		24-51-52	ALL
	A2	D	W1272	ZZXG	02		24-51-52	115-199
	B1	D	W1272	0205	18		24-31-41	ALL
	B2	D	W1272	0015	12		24-51-52	001-099
	B2	D	W1272	ZZXH	02		24-51-52	115-199
	C1	D	W1272	0206	18		24-31-41	ALL
	C2	D	W1272	0016	12		24-51-52	001-099
	C2	D	W1272	ZZXI	02		24-51-52	115-199
C00304		P034-00/ /AB01		CB-GROUND HANDLING TRU				ALL
	A1	D	W1190	0001	14		24-51-61	ALL
	A1	D	W1190	0004	14		24-51-61	ALL
	A1	D	W1190	0017	14		24-51-61	ALL
	A2	D	W1128	0032	22		24-54-61	ALL
	B1	D	W1190	0002	14		24-51-61	ALL
	B1	D	W1190	0005	14		24-51-61	ALL
	B1	D	W1190	0021	14		24-51-61	ALL
	B2	D	W1128	0033	22		24-54-61	ALL
	C1	D	W1190	0003	14		24-51-61	ALL
	C1	D	W1190	0006	14		24-51-61	ALL
	C1	D	W1190	0020	14		24-51-61	ALL
	C2	D	W1128	0034	22		24-54-61	ALL

HOOKUP LIST

D280N032

91-21-51

Section C00300

Page 1

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00305		P034-00/ /CD02		CB-GND HDLG EXT PWR				ALL
	A1	D	W1134	0022	08		24-51-61	ALL
	A2	D	W1134	0019	14		24-51-61	001-099
	A2	D	W1134	0019	10		24-51-61	115-199
	B1	D	W1134	0023	08		24-51-61	ALL
	B2	D	W1134	0020	14		24-51-61	001-099
	B2	D	W1134	0020	10		24-51-61	115-199
	C1	D	W1134	0024	08		24-51-61	ALL
	C2	D	W1134	0021	14		24-51-61	001-099
	C2	D	W1134	0021	10		24-51-61	115-199
C00306		P034-00/ /CE02		CB-GND SVCE BUS EXT PWR				ALL
	A1	D	W1134	0007	08		24-51-52	ALL
	A2	D	W1134	0001	08		24-51-52	ALL
	B1	D	W1134	0008	08		24-51-52	ALL
	B2	D	W1134	0002	08		24-51-52	ALL
	C1	D	W1134	0009	08		24-51-52	ALL
	C2	D	W1134	0003	08		24-51-52	ALL
C00307		P006-04/ /A023		CB-115 VAC BUS R SECT 2				ALL
	A1	D	W0064	0022	14		24-51-21	001-002, 115-199
	A1	D	W0064	ZZXD	02		24-51-21	ALL
	A1	D	W0064	0022	12		24-51-21	003-099
	A2	D	W0064	0501	16		24-51-22	ALL
	A2	D	W0064	0701	16		24-51-22	ALL
	B1	D	W0064	0023	14		24-51-21	001-002, 115-199
	B1	D	W0064	ZZXE	02		24-51-21	ALL
	B1	D	W0064	0023	12		24-51-21	003-099
	B2	D	W0064	0502	16		24-51-22	ALL
	B2	D	W0064	0702	16		24-51-22	ALL
	C1	D	W0064	0024	14		24-51-21	001-002, 115-199
	C1	D	W0064	0033	12		24-51-21	ALL
	C1	D	W0064	ZZXF	02		24-51-21	ALL
	C1	D	W0064	0024	12		24-51-21	003-099
	C2	D	W0064	0503	16		24-51-22	ALL
	C2	D	W0064	0703	16		24-51-22	ALL
C00308		P006-03/ /A017		CB-115 VAC BUS L SECT 2				ALL
	A1	D	W0062	ZZXD	02		24-51-11	ALL
	A2	D	W0062	0055	16		24-51-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section C00300

Page 2

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00308		P006-03/ /A017		CB-115 VAC BUS L SECT 2 (continued)				ALL
	A2	D	W0062	0201	16		24-51-12	ALL
	B1	D	W0062	0017	14		24-51-11	ALL
	B1	D	W0062	ZZXE	02		24-51-11	ALL
	B2	D	W0062	0054	16		24-51-12	ALL
	B2	D	W0062	0202	16		24-51-12	ALL
	C1	D	W0062	0016	14		24-51-11	ALL
	C1	D	W0062	ZZXF	02		24-51-11	ALL
	C2	D	W0062	0053	16		24-51-12	ALL
	C2	D	W0062	0203	16		24-51-12	ALL
C00309		P034-00/ /G002		CB-GND HDLG BUS				115-199
	A1	D	W1134	0025	10		24-51-61	115-199
	A2	D	W1190	0001	14		24-51-61	115-199
	B1	D	W1134	0026	10		24-51-61	115-199
	B2	D	W1190	0002	14		24-51-61	115-199
	C1	D	W1134	0027	10		24-51-61	115-199
	C2	D	W1190	0003	14		24-51-61	115-199
C00310		P006-03/ /A014		CB-115 VAC BUS L SECT 3				ALL
	A1	D	W0062	0001	06		24-51-11	ALL
	A1	D	W0062	0056	08		24-51-11	ALL
	A2	D	W0062	0013	10		24-51-13	001-099
	A2	D	W0062	0013	12		24-51-13	115-199
	B1	D	W0062	0002	06		24-51-11	ALL
	B1	D	W0062	0057	08		24-51-11	ALL
	B2	D	W0062	0014	10		24-51-13	001-099
	B2	D	W0062	0014	12		24-51-13	115-199
	C1	D	W0062	0003	06		24-51-11	ALL
	C1	D	W0062	0058	08		24-51-11	ALL
	C2	D	W0062	0015	10		24-51-13	001-099
	C2	D	W0062	0015	12		24-51-13	115-199
C00311		P031-00/ /A002		CB-UTIL BUS LEFT				ALL
	A1	KA	W1130	0010	04		24-21-11	ALL
	A1	KA	W1130	0022	04		24-21-11	ALL
	A2	D	W1130	0025	08		24-51-14	ALL
	B1	KA	W1130	0011	04		24-21-11	ALL
	B1	KA	W1130	0023	04		24-21-11	ALL
	B2	D	W1130	0026	08		24-51-14	ALL
	C1	KA	W1130	0012	04		24-21-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section C00300

Page 3

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00311		P031-00/ /A002		CB-UTIL BUS LEFT (continued)				ALL
	C1	KA	W1130	0024	04		24-21-11	ALL
	C2	D	W1130	0027	08		24-51-14	ALL
C00312		P006-03/ /C017		CB-L TRU				ALL
	A1	D	W0062	0303	14		24-32-11	ALL
	A2	D	W0062	0004	10		24-51-11	ALL
	A2	D	W0062	ZZXD	02		24-51-11	ALL
	B1	D	W0062	0304	14		24-32-11	ALL
	B2	D	W0062	0005	10		24-51-11	ALL
	B2	D	W0062	ZZXE	02		24-51-11	ALL
	C1	D	W0062	0305	14		24-32-11	ALL
	C2	D	W0062	0006	10		24-51-11	ALL
	C2	D	W0062	ZZXF	02		24-51-11	ALL
C00313		P006-03/ /C014		CB-115 VAC BUS L SECT 1				ALL
	A1	D	W0062	0207	16		24-51-11	ALL
	A2	D	W0062	0004	10		24-51-11	ALL
	A2	D	W0062	0007	12		24-51-11	ALL
	A2	D	W0062	0056	08		24-51-11	ALL
	B1	D	W0062	0206	16		24-51-11	ALL
	B2	D	W0062	0005	10		24-51-11	ALL
	B2	D	W0062	0008	12		24-51-11	ALL
	B2	D	W0062	0057	08		24-51-11	ALL
	C1	D	W0062	0205	16		24-51-11	ALL
	C2	D	W0062	0006	10		24-51-11	ALL
	C2	D	W0062	0009	12		24-51-11	ALL
	C2	D	W0062	0058	08		24-51-11	ALL
C00315		P032-00/ /A007		CB-UTIL BUS RIGHT				ALL
	A1	KA	W1132	0055	04		24-21-21	001-099
	A1	KA	W1132	0010	04		24-21-21	ALL
	A1	KA	W1132	0028	04		24-21-21	115-199
	A2	D	W1132	0037	08		24-51-24	ALL
	B1	KA	W1132	0054	04		24-21-21	001-099
	B1	KA	W1132	0011	04		24-21-21	ALL
	B1	KA	W1132	0029	04		24-21-21	115-199
	B2	D	W1132	0038	08		24-51-24	ALL
	C1	KA	W1132	0053	04		24-21-21	001-099
	C1	KA	W1132	0012	04		24-21-21	ALL
	C1	KA	W1132	0030	04		24-21-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section C00300

Page 4

Jan 21/2005

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00315		P032-00/ /A007		CB-UTIL BUS RIGHT (continued)				ALL
	C2	D	W1132	0039	08		24-51-24	ALL
C00316		P032-00/ /A008		CB-R GEN GND SVCE BUS				ALL
	A1	KA	W1132	0028	04		24-21-21	001-099
	A1	KA	W1132	0025	04		24-21-21	ALL
	A1	KA	W1132	0022	04		24-21-21	115-199
	A2	D	W1132	0031	08		24-51-52	ALL
	B1	KA	W1132	0029	04		24-21-21	001-099
	B1	KA	W1132	0026	04		24-21-21	ALL
	B1	KA	W1132	0023	04		24-21-21	115-199
	B2	D	W1132	0032	08		24-51-52	ALL
	C1	KA	W1132	0030	04		24-21-21	001-099
	C1	KA	W1132	0027	04		24-21-21	ALL
	C1	KA	W1132	0024	04		24-21-21	115-199
	C2	D	W1132	0033	08		24-51-52	ALL
C00317		P006-04/ /A020		CB-115 VAC BUS R SECT 3				ALL
	A1	D	W0064	0001	06		24-51-21	ALL
	A1	D	W0064	0058	08		24-51-21	ALL
	A2	D	W0064	0007	08		24-51-23	ALL
	B1	D	W0064	0002	06		24-51-21	ALL
	B1	D	W0064	0059	08		24-51-21	ALL
	B2	D	W0064	0008	08		24-51-23	ALL
	C1	D	W0064	0003	06		24-51-21	ALL
	C1	D	W0064	0060	08		24-51-21	ALL
	C2	D	W0064	0009	08		24-51-23	ALL
C00318		P006-04/ /C023		CB-R TRU				ALL
	A1	D	W0064	0206	14		24-32-11	ALL
	A2	D	W0064	0004	10		24-51-21	ALL
	A2	D	W0064	ZZXD	02		24-51-21	ALL
	B1	D	W0064	0207	14		24-32-11	ALL
	B2	D	W0064	0005	10		24-51-21	ALL
	B2	D	W0064	ZZXE	02		24-51-21	ALL
	C1	D	W0064	0208	14		24-32-11	ALL
	C2	D	W0064	0006	10		24-51-21	ALL
	C2	D	W0064	ZZXF	02		24-51-21	ALL
C00319		P006-04/ /C020		CB-115 VAC BUS R SECT 1				ALL
	A1	D	W0064	0506	16		24-51-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section C00300

Page 5

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00319		P006-04/ /C020		CB-115 VAC BUS R SECT 1 (continued)				ALL
	A2	D	W0064	0004	10		24-51-21	ALL
	A2	D	W0064	0058	08		24-51-21	ALL
	B1	D	W0064	0505	16		24-51-21	ALL
	B2	D	W0064	0005	10		24-51-21	ALL
	B2	D	W0064	0059	08		24-51-21	ALL
	C1	D	W0064	0504	16		24-51-21	ALL
	C2	D	W0064	0006	10		24-51-21	ALL
	C2	D	W0064	0060	08		24-51-21	ALL
C00320		P034-00/ /AB02		CB-GROUND POWER BPCU				ALL
	A1	D	W1128	0037	16		24-41-11	ALL
	A2	D	W1128	0139	24		24-41-11	ALL
	B1	D	W1128	0038	16		24-41-11	ALL
	B1	D	W1128	0146	22		24-28-11	ALL
	B2	D	W1128	0140	24		24-41-11	ALL
	C1	D	W1128	0039	16		24-41-11	ALL
	C2	D	W1128	0141	24		24-41-11	ALL
C00321		P034-00/ /CB02		CB-GND HDLG APU				ALL
	A1	D	W1134	0013	08		24-51-61	ALL
	A2	D	W1134	0016	14		24-51-61	001-099
	A2	D	W1134	0016	10		24-51-61	115-199
	B1	D	W1134	0014	08		24-51-61	ALL
	B2	D	W1134	0017	14		24-51-61	001-099
	B2	D	W1134	0017	10		24-51-61	115-199
	C1	D	W1134	0015	08		24-51-61	ALL
	C2	D	W1134	0018	14		24-51-61	001-099
	C2	D	W1134	0018	10		24-51-61	115-199
C00322		P034-00/ /CA02		CB-GND SVCE BUS APU				ALL
	A1	D	W1134	0010	08		24-51-52	ALL
	A2	D	W1134	0004	08		24-51-52	ALL
	B1	D	W1134	0011	08		24-51-52	ALL
	B2	D	W1134	0005	08		24-51-52	ALL
	C1	D	W1134	0012	08		24-51-52	ALL
	C2	D	W1134	0006	08		24-51-52	ALL
C00323		P006-04/ /D023		CB-ALTN FLAP PWR				ALL
	A1	D	W0064	0013	12		24-51-23	ALL
	A1	D	W0064	0016	12		24-51-23	ALL

HOOKUP LIST

D280N032

91-21-51

Section C00300

Page 6

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00323		P006-04/ /D023		CB-ALTN FLAP PWR (continued)				ALL
	A1	D	W0064	ZZXG	02		24-51-23	ALL
	A2	D	W0064	0209	14		27-51-11	ALL
	B1	D	W0064	0014	12		24-51-23	ALL
	B1	D	W0064	0017	12		24-51-23	ALL
	B1	D	W0064	ZZXH	02		24-51-23	ALL
	B2	D	W0064	0210	14		27-51-11	ALL
	C1	D	W0064	0015	12		24-51-23	ALL
	C1	D	W0064	0018	12		24-51-23	ALL
	C1	D	W0064	ZZXJ	02		24-51-23	ALL
	C2	D	W0064	0211	14		27-51-11	ALL
C00326		P006-03/ /J017		CB-115V AC BUS L XFR				001-099
C00326		P006-04/ /J017		CB-115V AC BUS L XFR				115-199
	A1	D	W0062	0068	12		24-51-11	ALL
	A2	D	W0062	0374	14		24-51-15	ALL
	B1	D	W0062	0069	12		24-51-11	ALL
	B2	D	W0062	0375	14		24-51-15	ALL
	C1	D	W0062	0070	12		24-51-11	ALL
	C2	D	W0062	0376	14		24-51-15	ALL
C00327		P006-04/ /		CB-115V AC BUS R XFR				001-002
C00327		P006-04/ /J023		CB-115V AC BUS R XFR				003-099, 115-199
	A1	D	W0064	0064	14		24-51-21	001-002, 115-199
	A1	D	W0064	0022	12		24-51-21	003-099
	A2	D	W0064	0081	18		24-51-25	001-002, 115-199
	A2	D	W0064	0081	12		24-51-25	003-099
	B1	D	W0064	0065	14		24-51-21	001-002, 115-199
	B1	D	W0064	0020	14		24-51-21	ALL
	B1	D	W0064	0023	12		24-51-21	003-099
	B2	D	W0064	0082	18		24-51-25	001-002, 115-199
	B2	D	W0064	0082	12		24-51-25	003-099
	C1	D	W0064	0066	14		24-51-21	001-002, 115-199
	C1	D	W0064	0024	12		24-51-21	003-099
	C2	D	W0064	0083	18		24-51-25	001-002, 115-199
	C2	D	W0064	0083	12		24-51-25	003-099
C00331		P006-03/ /F017		CB-FWD EQUIP COOL SUPPLY FAN 1				ALL
	A1	D	W0062	0029	12		24-51-13	ALL
	A1	D	W0062	ZZXG	02		24-51-13	ALL
	A2	D	W0062	0306	16		21-58-13	ALL

HOOKUP LIST

D280N032

91-21-51

Section C00300

Page 7

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00331		P006-03/ /F017		CB-FWD EQUIP COOL SUPPLY FAN 1 (continued)				ALL
	B1	D	W0062	ZZXH	02		24-51-13	ALL
	B2	D	W0062	0307	16		21-58-13	ALL
	C1	D	W0062	ZZXJ	02		24-51-13	ALL
	C2	D	W0062	0308	16		21-58-13	ALL
C00332		P006-04/ /F023		CB-FWD EQUIP COOL SUPPLY FAN 2				ALL
	A1	D	W0064	0301	16		21-58-13	ALL
	A2	D	W0064	0025	12		24-51-23	ALL
	A2	D	W0064	ZZXG	02		24-51-23	ALL
	B1	D	W0064	0302	16		21-58-13	ALL
	B2	D	W0064	0027	12		24-51-23	ALL
	B2	D	W0064	ZZXH	02		24-51-23	ALL
	C1	D	W0064	0303	16		21-58-13	ALL
	C2	D	W0064	ZZXJ	02		24-51-23	ALL
C00333		P037-00/ /D005		CB-AFT EQUIP COOLING FAN EXH 2				ALL
	A1	D	W1272	0207	18		21-58-21	ALL
	A2	D	W1272	ZZYE	02		24-51-52	001-099
	A2	D	W1272	0004	12		24-51-52	ALL
	A2	D	W1272	ZZXD	02		24-51-52	115-199
	B1	D	W1272	0208	18		21-58-21	ALL
	B2	D	W1272	ZZYF	02		24-51-52	001-099
	B2	D	W1272	0005	12		24-51-52	ALL
	B2	D	W1272	ZZXE	02		24-51-52	115-199
	C1	D	W1272	0209	18		21-58-21	ALL
	C2	D	W1272	ZZYG	02		24-51-52	001-099
	C2	D	W1272	0006	12		24-51-52	ALL
	C2	D	W1272	ZZXF	02		24-51-52	115-199
C00334		P070-00/ /B002		CB-AFT EQUIP COOLING FAN EXH 2				ALL
	A1	D	W1252	0014	12		24-51-11	ALL
	A2	D	W1252	0113	18		21-58-21	ALL
	B1	D	W1252	0015	12		24-51-11	ALL
	B2	D	W1252	0114	18		21-58-21	ALL
	C1	D	W1252	0003	12		24-51-11	ALL
	C1	D	W1252	0019	12		24-51-11	ALL
	C2	D	W1252	0115	18		21-58-21	ALL
C00336		P070-00/ /C010		CB-RECIRC FAN L				ALL
	A1	D	W1252	0116	14		21-25-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section C00300

Page 8

Jan 21/2005

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00336		P070-00/ /C010		CB-RECIRC FAN L (continued)				ALL
	A2	D	W1252	0014	12		24-51-11	001-099
	A2	D	W1252	0012	08		24-51-11	ALL
	A2	D	W1252	0013	12		24-51-11	115-199
	B1	D	W1252	0119	14		21-25-11	ALL
	B2	D	W1252	0015	12		24-51-11	001-099
	B2	D	W1252	0018	08		24-51-11	ALL
	B2	D	W1252	0016	12		24-51-11	115-199
	C1	D	W1252	0030	16		21-25-11	ALL
	C1	D	W1252	0118	14		21-25-11	ALL
	C2	D	W1252	0019	12		24-51-11	001-099
	C2	D	W1252	0021	08		24-51-11	ALL
	C2	D	W1252	0020	12		24-51-11	115-199
C00337		P037-00/ /J005		CB-RECIRC FAN R				ALL
	A1	D	W1272	0050	12		24-51-24	001-099
	A1	D	W1272	0032	10		24-51-24	ALL
	A1	D	W1272	0050	10		24-51-24	115-199
	A2	D	W1272	0210	14		21-25-11	ALL
	B1	D	W1272	0040	12		24-51-24	001-099
	B1	D	W1272	0031	10		24-51-24	ALL
	B1	D	W1272	0040	10		24-51-24	115-199
	B2	D	W1272	0211	14		21-25-11	ALL
	C1	D	W1272	0033	12		24-51-24	001-099
	C1	D	W1272	0030	10		24-51-24	ALL
	C1	D	W1272	0033	10		24-51-24	115-199
	C2	D	W1272	0028	16		21-25-11	ALL
	C2	D	W1272	0212	14		21-25-11	ALL
C00360		P034-00/ /AA01		CB-1 CARGO DOOR				ALL
	A1	D	W1190	0101	20		52-34-11	ALL
	A2	D	W1190	0004	14		24-51-61	ALL
	A2	D	W1190	0007	14		24-51-61	ALL
	B1	D	W1190	0102	20		52-34-11	ALL
	B2	D	W1190	0005	14		24-51-61	ALL
	B2	D	W1190	0008	14		24-51-61	ALL
	C1	D	W1190	0103	20		52-34-11	ALL
	C2	D	W1190	0006	14		24-51-61	ALL
	C2	D	W1190	0009	14		24-51-61	ALL

HOOKUP LIST

D280N032

91-21-51

Section C00300

Page 9

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00361		P034-00/ /AA02		CB-2 CARGO DOOR				ALL
	A1	D	W1190	0201	20		52-35-11	ALL
	A2	D	W1190	0007	14		24-51-61	ALL
	A2	D	W1190	0010	14		24-51-61	115-199
	B1	D	W1190	0202	20		52-35-11	ALL
	B2	D	W1190	0008	14		24-51-61	ALL
	B2	D	W1190	0011	14		24-51-61	115-199
	C1	D	W1190	0203	20		52-35-11	ALL
	C2	D	W1190	0009	14		24-51-61	ALL
	C2	D	W1190	0012	14		24-51-61	115-199
C00366		P006-03/ /H014		CB-L AFT FUEL BOOST PUMP				ALL
	A1	D	W0062	0010	12		24-51-13	ALL
	A1	D	W0062	0019	12		24-51-13	ALL
	A2	D	W0062	0113	18		28-22-11	ALL
	B1	D	W0062	0011	12		24-51-13	ALL
	B1	D	W0062	0020	12		24-51-13	ALL
	B2	D	W0062	0114	18		28-22-11	ALL
	C1	D	W0062	0012	12		24-51-13	ALL
	C1	D	W0062	0021	12		24-51-13	ALL
	C2	D	W0062	0112	18		28-22-11	ALL
C00368		P006-03/ /H017		CB-R FWD FUEL BOOST PUMP				ALL
	A1	D	W0062	0116	18		28-22-11	ALL
	A2	D	W0062	0010	12		24-51-13	ALL
	A2	D	W0062	ZZXG	02		24-51-13	ALL
	B1	D	W0062	0117	18		28-22-11	ALL
	B2	D	W0062	0011	12		24-51-13	ALL
	B2	D	W0062	ZZXH	02		24-51-13	ALL
	C1	D	W0062	0115	18		28-22-11	ALL
	C2	D	W0062	0012	12		24-51-13	ALL
	C2	D	W0062	ZZXJ	02		24-51-13	ALL
C00369		P006-03/ /F014		CB-L FUEL OVRD PUMP				ALL
	A1	D	W0062	0007	12		24-51-11	ALL
	A1	D	W0062	0068	12		24-51-11	ALL
	A2	D	W0062	0104	16		28-22-11	ALL
	B1	D	W0062	0008	12		24-51-11	ALL
	B1	D	W0062	0069	12		24-51-11	ALL
	B2	D	W0062	0106	16		28-22-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section C00300

Page 10

Jan 21/2005

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00369		P006-03/ /F014		CB-L FUEL OVRD PUMP (continued)				ALL
	C1	D	W0062	0009	12		24-51-11	ALL
	C1	D	W0062	0070	12		24-51-11	ALL
	C2	D	W0062	0102	16		28-22-11	ALL
C00370		P006-04/ /F020		CB-R FUEL OVRD PUMP				ALL
	A1	D	W0064	0104	16		28-22-11	ALL
	A2	D	W0064	0022	14		24-51-21	001-002, 115-199
	A2	D	W0064	0064	14		24-51-21	001-002, 115-199
	A2	D	W0064	0118	12		24-51-25	003-099
	B1	D	W0064	0106	16		28-22-11	ALL
	B2	D	W0064	0023	14		24-51-21	001-002, 115-199
	B2	D	W0064	0065	14		24-51-21	001-002, 115-199
	B2	D	W0064	0119	12		24-51-25	003-099
	C1	D	W0064	0102	16		28-22-11	ALL
	C2	D	W0064	0024	14		24-51-21	001-002, 115-199
	C2	D	W0064	0066	14		24-51-21	001-002, 115-199
	C2	D	W0064	0120	12		24-51-25	003-099
C00371		P006-04/ /H020		CB-R AFT FUEL BOOST PUMP				ALL
	A1	D	W0064	0116	18		28-22-11	ALL
	A2	D	W0064	0016	12		24-51-23	ALL
	B1	D	W0064	0117	18		28-22-11	ALL
	B2	D	W0064	0017	12		24-51-23	ALL
	C1	D	W0064	0115	18		28-22-11	ALL
	C2	D	W0064	0018	12		24-51-23	ALL
C00372		P006-04/ /H023		CB-L FWD FUEL BOOST PUMP				ALL
	A1	D	W0064	0030	12		24-51-52	ALL
	A1	D	W0064	0040	12		24-51-52	ALL
	A2	D	W0064	0113	18		28-22-11	ALL
	B1	D	W0064	0031	12		24-51-52	ALL
	B1	D	W0064	0041	12		24-51-52	ALL
	B2	D	W0064	0114	18		28-22-11	ALL
	C1	D	W0064	0032	12		24-51-52	ALL
	C1	D	W0064	0042	12		24-51-52	ALL
	C2	D	W0064	0112	18		28-22-11	ALL
C00391		P070-00/ /C013		CB-WINDOW HTR 1L				ALL
	A1	D	W1252	2001R	12		30-41-11	ALL
	A2	D	W1252	0012	08		24-51-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section C00300

Page 11

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00391		P070-00/ /C013		CB-WINDOW HTR 1L (continued)				ALL
	A2	D	W1252	0024	08		24-51-11	ALL
	B1	D	W1252	2001B	12		30-41-11	ALL
	B2	D	W1252	0018	08		24-51-11	ALL
	B2	D	W1252	0023	08		24-51-11	ALL
	C2	D	W1252	0021	08		24-51-11	ALL
	C2	D	W1252	0022	08		24-51-11	ALL
C00392		P037-00/ /J002		CB-WINDOW HTR 1R				ALL
	A1	D	W1272	0060	12		24-51-21	ALL
	A1	D	W1272	0063	12		24-51-21	ALL
	B1	D	W1272	0061	12		24-51-21	ALL
	B1	D	W1272	0079	12		24-51-21	ALL
	B2	D	W1272	2001R	12		30-41-12	ALL
	C1	D	W1272	0062	12		24-51-21	ALL
	C1	D	W1272	0080	12		24-51-21	ALL
	C2	D	W1272	2001B	12		30-41-12	ALL
C00397		P006-04/ /K021		CB-POT WATER CPRSR				ALL
	A1	D	W0064	0128	18		38-15-11	ALL
	A2	D	W0064	0026	12		24-51-52	ALL
	A2	D	W0064	0030	12		24-51-52	ALL
	B1	D	W0064	0129	18		38-15-11	ALL
	B2	D	W0064	0028	12		24-51-52	ALL
	B2	D	W0064	0031	12		24-51-52	ALL
	C1	D	W0064	0130	18		38-15-11	ALL
	C2	D	W0064	0029	12		24-51-52	ALL
	C2	D	W0064	0032	12		24-51-52	ALL

HOOKUP LIST

D280N032

91-21-51

Section C00300

Page 12 End

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00501		P011-01/ /F014		CB-TMC AC				ALL
	= B	D	W0110	ZZXA	02		24-51-12	ALL
	= B	D	W0110	ZZXB	02		24-51-12	ALL
	= B	D	W0110	0035	16		24-51-12	003-099, 115-199
	= L	D	W0124	0016	20		22-31-11	ALL
C00512		P011-01/ /F016		CB-TMC SERVO				ALL
	= B	D	W0110	0038	12		24-54-11	001-099
	= B	D	W0110	ZZAH	02		24-54-11	ALL
	= B	D	W0110	ZZXT	02		24-54-11	ALL
	= L	D	W0124	0014	20		22-31-12	ALL
C00513		P011-01/ /E017		CB-FLT CONT CMPTR PWR L				ALL
	= B	D	W0110	0001	16		24-51-12	001-099
	= B	D	W0110	ZZXB	02		24-51-12	ALL
	= L	D	W0124	0017	20		22-11-11	ALL
C00514		P011-02/ /E035		CB-FLT CONT CMPTR PWR R				ALL
	= B	D	W0114	0021	16		24-51-22	ALL
	= B	D	W0114	0029	16		24-51-22	ALL
	= L	D	W0128	0003	20		22-11-21	ALL
C00515		P011-02/ /E020		CB-FLT CONT CMPTR PWR C				ALL
	= B	D	W0114	ZZZA	02		24-51-31	001-099
	= B	D	W0122	ZZXA	02		24-51-31	115-199
	= L	D	W0128	0951	20		22-11-31	001-099
	= L	D	W0136	0001	20		22-11-31	115-199
C00516		P011-01/ /E016		CB-MODE CONT PNL L				ALL
	= B	D	W0110	ZZXL	02		24-54-11	ALL
	= B	D	W0110	ZZXT	02		24-54-11	ALL
	= L	D	W0124	0020	20		22-11-12	ALL
C00517		P011-02/ /E034		CB-MODE CONT PNL R				ALL
	= B	D	W0114	ZZYB	02		24-54-21	001-099
	= B	D	W0114	ZZYA	02		24-54-21	ALL
	= B	D	W0114	ZZXA	02		24-54-21	115-199
	= L	D	W0128	0015	20		22-11-22	ALL

HOOKUP LIST

D280N032

91-21-51

Section C00500

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00520		P011-03/ /S003		CB-MAINT CONT DSPL				001-099
C00520		P011-03/ /S006		CB-MAINT CONT DSPL				115-199
	=B	D	W0112	0205	16		24-51-12	001-099
	=B	D	W0112	0206	16		24-51-12	001-099
	=B	D	W0112	0205	12		24-51-12	115-199
	=B	D	W0112	0206	12		24-51-12	115-199
	=L	D	W0126	0500	20		22-41-11	ALL
C00521		P011-01/ /A017		CB-AUTO FLT WARN				ALL
	=B	D	W0110	ZZJD	02		24-54-73	001-099
	=B	D	W0110	ZZZG	02		24-54-73	001-099
	=B	D	W0118	ZZAD	02		24-54-73	115-199
	=B	D	W0118	ZZZG	02		24-54-73	115-199
	=L	D	W0124	0710	20		22-31-12	001-099
	=L	D	W0124	0711	20		22-11-32	001-099
	=L	D	W0132	0010	20		22-31-12	115-199
	=L	D	W0132	0011	20		22-11-32	115-199
C00522		P011-01/ /E018		CB-FLT CONT CMPTR SERVO L				ALL
	=B	D	W0110	ZZXL	02		24-54-11	ALL
	=L	D	W0124	0021	20		22-11-12	ALL
C00523		P011-02/ /E036		CB-FLT CONT CMPTR SERVO R				ALL
	=B	D	W0114	ZZYB	02		24-54-21	001-099
	=B	D	W0114	ZZXA	02		24-54-21	115-199
	=L	D	W0128	0007	20		22-11-22	ALL
C00524		P011-02/ /E021		CB-FLT CONT CMPTR SERVO C				ALL
	=B	D	W0114	0801	18		24-51-31	001-099
	=B	D	W0122	0001	18		24-51-31	115-199
	=L	D	W0128	0953	20		22-11-32	001-099
	=L	D	W0136	0003	20		22-11-32	115-199
C00525		P011-01/ /F015		CB-TMC DC				ALL
	=B	D	W0110	ZZXS	02		24-54-11	001-099
	=B	D	W0110	0017	12		24-54-11	ALL
	=B	D	W0110	ZZAH	02		24-54-11	ALL
	=B	D	W0110	ZZZW	02		24-54-11	115-199
	=L	D	W0124	0015	20		22-31-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section C00500

Page 2

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00532		P011-02/ /H033		CB-VOICE RECORDER				ALL
	=B	D	W0114	0101	16		24-51-22	001-099
	=B	D	W0114	ZZYK	02		24-51-22	ALL
	=B	D	W0114	0042	16		24-51-22	115-199
	=L	D	W0128	0028	20		23-71-11	ALL
C00539		P011-01/ /G003		CB-SELCAL				ALL
	=B	D	W0110	ZZBD	02		24-54-11	001-099
	=B	D	W0110	0018	12		24-54-11	ALL
	=L	D	W0124	0026	22		23-21-11	ALL
C00544		P011-01/ /C003		CB-VHF COMM L				ALL
	=B	D	W0110	ZZZD	02		24-54-73	001-099
	=B	D	W0118	ZZOS	02		24-54-73	115-199
	=B	D	W0118	ZZXD	02		24-54-73	115-199
	=B	D	W0118	ZZYE	02		24-54-73	115-199
	=L	D	W0124	0752	16		23-12-11	001-099
	=L	D	W0132	0102	16		23-12-11	115-199
C00545		P011-02/ /G031		CB-VHF COMM R				ALL
	=B	D	W0114	ZZOF	00		24-54-21	001-099
	=B	D	W0114	0002	08		24-54-21	ALL
	=B	D	W0114	ZZAF	04		24-54-21	ALL
	=B	D	W0114	ZZOA	00		24-54-21	115-199
	=L	D	W0128	0101	16		23-12-21	ALL
C00546		P011-01/ /G004		CB-VHF COMM C				001-099
	=B	D	W0110	ZZBD	02		24-54-11	001-099
	=B	D	W0110	0071	12		24-54-11	002
	=L	D	W0124	0110	16		23-12-31	001-099
C00548		P011-02/ /C022		CB-PASS ADRS AMPL				ALL
	=B	D	W0114	ZZNJ	00		24-54-71	001-099
	=B	D	W0114	ZZPB	00		24-54-71	001-099
	=B	D	W0120	ZZDK	00		24-54-71	115-199
	=B	D	W0120	ZZPB	00		24-54-71	115-199
	=L	D	W0128	0751	18		23-31-11	001-099
	=L	D	W0134	0101	18		23-31-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section C00500

Page 3

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00550		P006-02/ /C008		CB-HYD GEN 28VDC SENSE				003-099
	=B	D	W0066	0013	06		24-31-11	003-099
	=B	D	W0066	0016	08		24-31-11	003-099
	=L	D	W0066	0014	20		24-31-11	003-099
C00551		P011-02/ /C024		CB-INTERPHONE CABIN SERVICE				001-099
C00551		P011-02/ /C023		CB-INTERPHONE CABIN SERVICE				115-199
	=B	D	W0114	ZZAJ	04		24-54-71	001-099
	=B	D	W0114	ZZPB	00		24-54-71	001-099
	=B	D	W0114	ZZXE	02		24-54-71	001-099
	=B	D	W0120	ZZDH	04		24-54-71	115-199
	=B	D	W0120	ZZPB	00		24-54-71	115-199
	=B	D	W0120	ZZXE	02		24-54-71	115-199
	=L	D	W0128	0712	22		23-42-11	001-099
	=L	D	W0134	0012	22		23-42-11	115-199
C00552		P011-02/ /C025		CB-INTERPHONE CAPT				001-099
	=B	D	W0114	ZZCE	04		24-54-71	001-099
	=B	D	W0114	ZZOM	00		24-54-71	001-099
	=L	D	W0128	0772	22		23-51-11	001-099
C00553		P011-02/ /C026		CB-INTERPHONE F/O AUDIO				001-099
	=B	D	W0114	ZZOL	00		24-54-71	001-099
	=B	D	W0114	ZZOM	00		24-54-71	001-099
	=L	D	W0128	0820	22		23-51-21	001-099
C00554		P011-02/ /G029		CB-INTERPHONE CAPT AUDIO				001-099
	=B	D	W0114	ZZOG	00		24-54-21	001-099
	=B	D	W0114	ZZOH	00		24-54-21	001-099
	=B	D	W0114	ZZYW	02		24-54-21	001-099
	=L	D	W0128	0120	22		23-51-11	001-099
C00557		P011-02/ /G030		CB-INTERPHONE OBSR CAPT				001-099
	=B	D	W0114	ZZOF	00		24-54-21	001-099
	=B	D	W0114	ZZOG	00		24-54-21	001-099
	=B	D	W0114	ZZYX	02		24-54-21	001-099
	=L	D	W0128	0121	22		23-51-21	001-099
C00560		P011-02/ /H031		CB-GND CALL				ALL
	=B	D	W0114	0031	12		24-54-21	001-099

HOOKUP LIST

D280N032

91-21-51

Section C00500

Page 4

Jan 21/2005

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00560		P011-02/ /H031		CB-GND CALL (continued)				ALL
	=B	D	W0114	ZZBB	02		24-54-21	ALL
	=B	D	W0114	0061	12		24-54-21	115-199
	=L	D	W0128	0024	22		23-43-11	ALL
C00561		P011-03/ /J007		CB-FLIGHT RECORDER AC				ALL
	=B	D	W0112	0206	16		24-51-12	001-099
	=B	D	W0112	0216	16		24-51-12	001-099
	=B	D	W0112	0206	12		24-51-12	115-199
	=L	D	W0126	0063	22		31-31-01	001-099
	=L	D	W0126	0063	22		31-31-11	115-199
C00563		P006-01/ /G002		CB-CLOCK TIME BASE L				ALL
	=B	D	W0060	ZZJK	00		24-54-72	ALL
	=B	D	W0060	ZZJL	00		24-54-72	ALL
	=L	D	W0060	0304	22		31-25-11	ALL
C00564		P011-03/ /S001		CB-AIDS SENSOR				ALL
	=B	D	W0112	0204	14		24-53-11	ALL
	=L	D	W0126	0048	22		31-31-01	001-099
	=L	D	W0126	0048	22		31-31-31	115-199
C00565		P011-04/ /J033		CB-WARN ELEX A				ALL
	=B	D	W0116	ZZAW	02		24-51-22	001-099
	=B	D	W0116	0023	16		24-51-22	ALL
	=L	D	W0130	0001	22		31-51-11	ALL
C00566		P011-01/ /B018		CB-WARN ELEX B				ALL
	=B	D	W0110	0730	16		24-54-73	001-099
	=B	D	W0118	0030	16		24-54-73	115-199
	=L	D	W0124	0763	22		31-51-12	001-099
	=L	D	W0132	0113	22		31-51-12	115-199
C00567		P011-01/ /B016		CB-AURAL WARN SPKR L				ALL
	=B	D	W0110	ZZAC	00		24-54-73	001-099
	=B	D	W0110	ZZPI	00		24-54-73	001-099
	=B	D	W0110	ZZZL	02		24-54-73	001-099
	=B	D	W0110	0050	16		24-54-73	ALL
	=B	D	W0118	ZZOD	00		24-54-73	115-199
	=B	D	W0118	ZZOK	00		24-54-73	115-199

HOOKUP LIST

D280N032

91-21-51

Section C00500

Page 5

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00567		P011-01/ /B016		CB-AURAL WARN SPKR L (continued)				ALL
	=B	D	W0118	ZZZL	02		24-54-73	115-199
	=L	D	W0124	0810	22		31-51-11	001-099
	=L	D	W0132	0210	22		31-51-11	115-199
C00568		P011-02/ /H035		CB-AURAL WARN SPKR R				ALL
	=B	KA	W0114	0001	08		24-54-21	ALL
	=B	KA	W0114	0002	08		24-54-21	ALL
	=L	D	W0128	0129	22		31-51-12	ALL
C00573		P011-01/ /B017		CB-CLOCK IND LEFT				001-099
C00573		P011-01/ /B017		CB-CLOCK IND L				115-199
	=B	D	W0110	ZZAC	00		24-54-73	001-099
	=B	D	W0110	ZZLE	04		24-54-73	001-099
	=B	D	W0110	ZZXG	02		24-54-73	001-099
	=B	D	W0110	ZZXJ	02		24-54-73	115-199
	=B	D	W0118	ZZHE	04		24-54-73	115-199
	=B	D	W0118	ZZOK	00		24-54-73	115-199
	=B	D	W0118	ZZXG	02		24-54-73	115-199
	=L	D	W0124	0103	22		31-25-11	001-099
	=L	D	W0132	0058	22		31-25-11	115-199
C00574		P011-04/ /J035		CB-CLOCK IND RIGHT				ALL
	=B	D	W0116	0502	12		24-54-21	ALL
	=B	D	W0116	0503	12		24-54-21	ALL
	=B	D	W0116	0506	12		24-54-21	ALL
	=L	D	W0130	0106	22		31-25-11	ALL
C00576		P006-01/ /G003		CB-CLOCK TIME BASE R				ALL
	=B	D	W0060	ZZJJ	03		24-54-72	001-099
	=B	D	W0060	ZZXJ	02		24-54-72	001-099
	=B	D	W0060	ZZJL	00		24-54-72	ALL
	=B	D	W0060	ZZJM	00		24-54-72	115-199
	=L	D	W0060	0305	22		31-25-11	ALL
C00578		P011-03/ /J008		CB-FLIGHT RECORDER DC				ALL
	=B	D	W0112	0208	12		24-54-11	ALL
	=B	D	W0112	0213	12		24-54-11	ALL
	=L	D	W0126	0064	22		31-31-01	001-099
	=L	D	W0126	0064	22		31-31-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section C00500

Page 6

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00580		P011-01/ /E001		CB-IAS MACH L				ALL
	=B	D	W0110	ZZOE	00		24-51-72	001-099
	=B	D	W0110	ZZAP	04		24-51-72	ALL
	=B	D	W0110	ZZEF	00		24-51-72	115-199
	=L	D	W0124	0202	24		34-13-11	ALL
C00581		P011-02/ /E022		CB-IAS MACH R				ALL
	=B	D	W0114	ZZAB	03		24-51-72	ALL
	=B	D	W0114	ZZOE	00		24-51-72	ALL
	=L	D	W0128	0117	22		34-13-21	ALL
C00582		P011-01/ /E011		CB-DME L				ALL
	=B	D	W0110	0042	12		24-51-15	ALL
	=B	D	W0110	0043	12		24-51-15	ALL
	=L	D	W0124	0029	22		34-55-11	ALL
C00583		P011-02/ /E032		CB-DME R				ALL
	=B	D	W0114	0101	16		24-51-22	001-099
	=B	D	W0114	0042	16		24-51-22	115-199
	=L	D	W0128	0016	22		34-55-21	ALL
C00584		P011-01/ /E002		CB-ALTM L				ALL
	=B	D	W0110	ZZOD	00		24-51-72	001-099
	=B	D	W0110	ZZOE	00		24-51-72	001-099
	=B	D	W0110	0029	16		24-51-72	ALL
	=B	D	W0110	ZZEF	00		24-51-72	115-199
	=B	D	W0110	ZZFF	00		24-51-72	115-199
	=L	D	W0124	0203	22		34-13-11	ALL
C00585		P011-02/ /E023		CB-ALTM R				ALL
	=B	D	W0114	ZZOD	00		24-51-72	ALL
	=B	D	W0114	ZZOE	00		24-51-72	ALL
	=L	D	W0128	0116	22		34-13-21	ALL
C00586		P011-01/ /E005		CB-VSI L				ALL
	=B	D	W0110	0010	16		24-51-72	ALL
	=B	D	W0110	ZZDB	02		24-51-72	ALL
	=L	D	W0124	0214	22		34-22-82	ALL

HOOKUP LIST

D280N032

91-21-51

Section C00500

Page 7

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00587		P011-02/ /E026		CB-VSI R				ALL
	=B	D	W0114	0012	22		24-51-72	ALL
	=B	D	W0114	ZZYJ	02		24-51-72	ALL
	=L	D	W0128	0205	22		34-22-92	ALL
C00588		P011-01/ /E006		CB-HSI L				ALL
	=B	D	W0110	0034	16		24-51-72	ALL
	=B	D	W0110	ZZDB	02		24-51-72	ALL
	=L	D	W0124	0350	22		34-22-16	ALL
C00589		P011-02/ /E027		CB-HSI R				ALL
	=B	D	W0114	0014	22		24-51-72	ALL
	=B	D	W0114	ZZYD	02		24-51-72	ALL
	=L	D	W0128	0310	22		34-22-26	ALL
C00591		P011-01/ /A008		CB-STBY ALTM VIB				ALL
	=B	D	W0110	ZZAD	00		24-54-73	001-099
	=B	D	W0110	ZZAJ	00		24-54-73	001-099
	=B	D	W0110	ZZZJ	02		24-54-73	001-099
	=B	D	W0118	ZZAC	02		24-54-73	115-199
	=B	D	W0118	ZZZJ	02		24-54-73	115-199
	=L	D	W0124	0754	22		34-13-11	001-099
	=L	D	W0132	0104	22		34-13-11	115-199
C00592		P011-01/ /F004		CB-GND PROX CMPTR				ALL
	=B	D	W0110	ZZXE	02		24-51-15	001-099
	=B	D	W0110	ZZXH	02		24-51-12	001-099
	=B	D	W0110	0002	16		24-51-12	ALL
	=B	D	W0110	ZZXG	02		24-51-12	115-199
	=L	D	W0124	0024	22		34-46-11	ALL
C00593		P011-01/ /E003		CB-ADI L				ALL
	=B	D	W0110	ZZOD	00		24-51-72	001-099
	=B	D	W0110	ZZEE	00		24-51-72	ALL
	=B	D	W0110	ZZFF	00		24-51-72	115-199
	=L	D	W0124	0351	22		34-22-16	ALL
C00594		P011-02/ /E024		CB-ADI R				ALL
	=B	D	W0114	ZZAB	03		24-51-72	ALL
	=B	D	W0114	ZZOD	00		24-51-72	ALL

HOOKUP LIST

D280N032

91-21-51

Section C00500

Page 8

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00594		P011-02/ /E024		CB-ADI R (continued)				ALL
	=B	D	W0114	ZZYD	02		24-51-72	ALL
	=L	D	W0128	0311	22		34-22-26	ALL
C00595		P011-01/ /A002		CB-VOR/MKR L				ALL
	=B	D	W0110	ZZAT	00		24-54-73	001-099
	=B	D	W0110	ZZKE	03		24-54-73	001-099
	=B	D	W0110	ZZZR	02		24-54-73	001-099
	=B	D	W0118	ZZBB	03		24-54-73	115-199
	=B	D	W0118	ZZBE	00		24-54-73	115-199
	=B	D	W0118	ZZXC	02		24-54-73	115-199
	=L	D	W0124	0714	20		34-51-11	001-099
	=L	D	W0132	0014	20		34-51-11	115-199
C00596		P011-02/ /E033		CB-VOR R				ALL
	=B	D	W0114	0051	16		24-51-22	ALL
	=B	D	W0114	ZZYP	02		24-51-22	ALL
	=L	D	W0128	0017	22		34-51-21	ALL
C00597		P011-01/ /E008		CB-FMCS CDU L				ALL
	=B	D	W0110	ZZAB	02		24-51-15	ALL
	=B	D	W0110	ZZXC	02		24-51-15	ALL
	=L	D	W0124	0023	20		34-61-11	ALL
C00598		P011-02/ /E029		CB-FMCS CDU R				ALL
	=B	D	W0114	0029	16		24-51-22	ALL
	=B	D	W0114	0030	16		24-51-22	ALL
	=L	D	W0128	0032	22		34-61-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section C00500

Page 9 End

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00600		P011-01/ /F005		CB-RAD ALTM L				ALL
	=B	D	W0110	0034	16		24-51-72	ALL
	=L	D	W0124	0027	22		34-33-11	ALL
C00601		P011-02/ /F026		CB-RAD ALTM R				ALL
	=B	D	W0114	ZZYJ	02		24-51-72	ALL
	=L	D	W0128	0001	22		34-33-21	ALL
C00602		P011-02/ /F020		CB-RAD ALTM C				ALL
	=B	D	W0114	ZZOA	00		24-51-31	001-099
	=B	D	W0114	ZZOB	00		24-51-31	001-099
	=B	D	W0114	ZZZA	02		24-51-31	001-099
	=B	D	W0122	ZZOA	00		24-51-31	115-199
	=B	D	W0122	ZZOB	00		24-51-31	115-199
	=B	D	W0122	ZZXA	02		24-51-31	115-199
	=L	D	W0128	0960	22		34-33-31	001-099
	=L	D	W0136	0010	22		34-33-31	115-199
C00603		P011-01/ /E010		CB-ILS L				001-099
	=B	D	W0110	0041	16		24-51-72	001-099
	=L	D	W0124	0018	22		34-31-11	001-099
C00604		P011-01/ /A009		CB-STBY ILS IND				ALL
	=B	D	W0110	0727	12		24-54-73	001-099
	=B	D	W0110	ZZAD	00		24-54-73	001-099
	=B	D	W0110	ZZJC	03		24-54-73	001-099
	=B	D	W0118	0027	12		24-54-73	115-199
	=B	D	W0118	ZZAC	02		24-54-73	115-199
	=L	D	W0124	0709	22		34-24-11	001-099
	=L	D	W0132	0009	22		34-24-11	115-199
C00605		P011-02/ /E031		CB-ILS R				001-099
	=B	D	W0114	0018	22		24-51-72	001-099
	=L	D	W0128	0004	22		34-31-21	001-099
C00606		P011-01/ /A003		CB-ILS C				001-099
	=B	D	W0110	ZZAS	00		24-54-73	001-099
	=B	D	W0110	ZZAT	00		24-54-73	001-099
	=B	D	W0110	ZZZE	02		24-54-73	001-099
	=B	D	W0118	ZZAK	00		24-54-73	115-199

HOOKUP LIST

D280N032

91-21-51

Section C00600

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00606		P011-01/ /A003		CB-ILS C (continued)				001-099
	=B	D	W0118	ZZBE	00		24-54-73	115-199
	=L	D	W0124	0707	22		34-31-31	001-099
C00607		P011-01/ /F006		CB-ADF L				ALL
	=B	D	W0110	0019	16		24-54-73	001-002
	=B	D	W0110	0035	16		24-51-12	003-099, 115-199
	=L	D	W0124	0072	22		34-57-11	ALL
C00609		P011-01/ /E009		CB-FMCS CMPTR L				ALL
	=B	D	W0110	ZZAB	02		24-51-15	ALL
	=L	D	W0124	0022	20		34-61-11	ALL
C00610		P011-02/ /E030		CB-FMCS CMPTR R				ALL
	=B	D	W0114	ZZYP	02		24-51-22	ALL
	=B	D	W0114	ZZYQ	02		24-51-22	ALL
	=L	D	W0128	0005	22		34-61-21	ALL
C00611		P011-01/ /F001		CB-IRS L				ALL
	=B	D	W0110	0043	12		24-51-15	ALL
	=B	D	W0110	0048	12		24-51-15	ALL
	=L	D	W0124	0013	22		34-21-11	ALL
C00612		P011-02/ /F022		CB-IRS R				ALL
	=B	D	W0114	0102	16		24-51-22	ALL
	=B	D	W0114	ZZYL	02		24-51-22	115-199
	=L	D	W0128	0008	20		34-21-21	ALL
C00613		P011-02/ /F021		CB-IRS C				ALL
	=B	D	W0114	0802	22		24-51-31	001-099
	=B	D	W0114	ZZDB	03		24-51-31	001-099
	=B	D	W0114	ZZOA	00		24-51-31	001-099
	=B	D	W0122	0002	22		24-51-31	115-199
	=B	D	W0122	ZZAB	03		24-51-31	115-199
	=B	D	W0122	ZZOA	00		24-51-31	115-199
	=L	D	W0128	0961	22		34-21-31	001-099
	=L	D	W0136	0011	22		34-21-31	115-199
C00614		P006-01/ /D003		CB-IRS L				ALL
	=B	D	W0060	ZZFH	00		24-54-72	ALL

HOOKUP LIST

D280N032

91-21-51

Section C00600

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00614		P006-01/ /D003		CB-IRS L (continued)				ALL
	=B	D	W0060	ZZFI	00		24-54-72	ALL
	=L	D	W0060	0016	16		34-21-11	ALL
C00615		P011-01/ /F002		CB-WX RADAR L				ALL
	=B	D	W0110	0003	16		24-51-12	ALL
	=L	D	W0124	0033	20		34-43-11	ALL
C00619		P011-01/ /A005		CB-STBY ATT IND				ALL
	=B	D	W0110	ZZYM	02		24-54-73	001-099
	=B	D	W0110	ZZZJ	02		24-54-73	001-099
	=B	D	W0110	ZZZM	02		24-54-73	001-099
	=B	D	W0118	ZZAF	02		24-54-73	115-199
	=B	D	W0118	ZZOR	00		24-54-73	115-199
	=B	D	W0118	ZZYE	02		24-54-73	115-199
	=B	D	W0118	ZZYM	02		24-54-73	115-199
	=B	D	W0118	ZZZJ	02		24-54-73	115-199
	=L	D	W0124	0708	20		34-24-11	001-099
	=L	D	W0132	0008	20		34-24-11	115-199
C00620		P006-01/ /D005		CB-IRS R				ALL
	=B	D	W0060	ZZFG	00		24-54-72	ALL
	=B	D	W0060	ZZFJ	00		24-54-72	ALL
	=L	D	W0060	0209	16		34-21-21	ALL
C00621		P006-01/ /D004		CB-IRS C				ALL
	=B	D	W0060	ZZFI	00		24-54-72	ALL
	=B	D	W0060	ZZFJ	00		24-54-72	ALL
	=L	D	W0060	0017	16		34-21-31	001-099
	=L	D	W0060	0036	16		34-21-31	115-199
C00622		P011-01/ /A007		CB-EFIS DSPL SW L				001-099
C00622		P011-01/ /C004		CB-EFIS DSPL SW L				115-199
	=B	D	W0110	ZZAJ	00		24-54-73	001-099
	=B	D	W0110	ZZJC	03		24-54-73	001-099
	=B	D	W0118	ZZOS	02		24-54-73	115-199
	=L	D	W0124	0031	22		34-22-16	001-099
	=L	D	W0132	0055	22		34-22-16	115-199

HOOKUP LIST

D280N032

91-21-51

Section C00600

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00623		P011-02/ /F024		CB-EFIS DSPL SW R				ALL
	=B	D	W0114	0006	12		24-54-21	ALL
	=B	D	W0114	0026	12		24-54-21	ALL
	=B	D	W0114	ZZAA	02		24-54-21	115-199
	=L	D	W0128	0023	22		34-22-26	ALL
C00625		P011-01/ /A010		CB-AIR DATA CMPTR L				ALL
	=B	D	W0110	ZZZI	02		24-54-73	001-099
	=B	D	W0118	0602	16		24-54-73	115-199
	=B	D	W0118	ZZZI	02		24-54-73	115-199
	=L	D	W0124	0725	22		34-12-11	001-099
	=L	D	W0132	0025	22		34-12-11	115-199
C00626		P011-02/ /F030		CB-AIR DATA CMPTR R				ALL
	=B	D	W0114	0018	22		24-51-72	ALL
	=B	D	W0114	ZZAD	02		24-51-72	ALL
	=L	D	W0128	0027	22		34-12-21	ALL
C00630		P037-00/ /E008		CB-FMC DATA BASE LOADER				001-008, 115-199
C00630		P011-02/ /F027		CB-FMC DATA BASE LOADER				009-099
	=B	D	W1272	0022	12		24-51-52	001-008, 115-199
	=B	D	W1272	0255	12		24-51-52	001-008, 115-199
	=B	D	W0114	0036	12		24-51-52	009-099
	=B	D	W1272	0023	12		24-51-52	115-199
	=L	D	W1272	0215	22		34-61-15	001-008, 115-199
	=L	D	W0128	0155	22		34-61-15	009-099
C00633		P011-01/ /E004		CB-EFIS CONT PNL L				ALL
	=B	D	W0110	ZZAP	04		24-51-72	ALL
	=B	D	W0110	ZZEE	00		24-51-72	ALL
	=L	D	W0124	0204	22		34-22-16	ALL
C00634		P011-02/ /E025		CB-EFIS CONT PNL R				ALL
	=B	D	W0114	0016	22		24-51-72	ALL
	=B	D	W0114	0017	22		24-51-72	ALL
	=L	D	W0128	0309	22		34-22-26	ALL
C00635		P011-01/ /A006		CB-RDMI L				001-099
	=B	D	W0110	ZZZE	02		24-54-73	001-099
	=B	D	W0110	ZZZF	02		24-54-73	001-099

HOOKUP LIST

D280N032

91-21-51

Section C00600

Page 4

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00635		P011-01/ /A006		CB-RDMI L (continued)				001-099
	=L	D	W0124	0761	22		34-22-81	001-099
C00636		P011-02/ /F025		CB-RDMI R				001-099
	=B	D	W0114	ZZYE	02		24-51-22	001-099
	=L	D	W0128	0102	22		34-22-91	001-099
C00637		P011-01/ /F008		CB-EFIS SYM GEN L				ALL
	=B	D	W0110	0030	16		24-51-72	ALL
	=B	D	W0110	0041	16		24-51-72	ALL
	=L	D	W0124	0019	22		34-22-16	ALL
C00638		P011-02/ /F029		CB-EFIS SYM GEN R				ALL
	=B	D	W0114	0017	22		24-51-72	ALL
	=B	D	W0114	ZZAD	02		24-51-72	ALL
	=L	D	W0128	0006	22		34-22-26	ALL
C00639		P011-01/ /F009		CB-EFIS SYM GEN C				ALL
	=B	D	W0110	ZZAA	02		24-51-72	001, 003-099, 115-199
	=B	D	W0110	0010	16		24-51-72	ALL
	=B	D	W0110	0031	16		24-51-72	ALL
	=L	D	W0124	0039	22		34-22-36	ALL
I C00640		P011-02/ /F033		CB-FMC TUNING R (DEL SB 34-0427)				001
I C00640		P011-02/ /F033		CB-FMC TUNING R				ALL
I C00640		P011-02/ /F033		CB-FMC TUNING R - DELETE (SB 34-0414)				115-199
I	=B	D	W0114	ZZAG	02		24-54-21	001-099
I	=B	D	W0114	ZZYX	02		24-54-21	001-099
I	=L	D	W0128	0059	22		34-61-25	001-099
I C00641		P011-01/ /F013		CB-FMC TUNING L (DEL SB 34-0427)				001
I C00641		P011-01/ /F013		CB-FMC TUNING L				ALL
I C00641		P011-01/ /F013		CB-FMC TUNING L - DELETE (SB 34-0414)				115-199
	=B	D	W0110	0038	12		24-54-11	001-099
	=L	D	W0124	0302	22		34-61-15	001-099
C00653		P011-01/ /A014		CB-AIR COND PACK LEFT FLOW CONT				001-099
C00653		P011-01/ /A015		CB-LEFT PACK FLOW CONT				115-199
	=B	D	W0110	ZZOA	00		24-54-73	001-099
	=B	D	W0110	ZZOB	00		24-54-73	001-099

HOOKUP LIST

D280N032

91-21-51

Section C00600

Page 5

Oct 09/2008

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00653		P011-01/ /A014		CB-AIR COND PACK LEFT FLOW CONT (continued)				001-099
C00653		P011-01/ /A015		CB-LEFT PACK FLOW CONT (continued)				115-199
	=B	D	W0118	ZZOL	00		24-54-73	115-199
	=B	D	W0118	ZZOM	00		24-54-73	115-199
	=L	D	W0124	0040	20		21-51-11	001-099
	=L	D	W0126	0029	20		21-51-11	115-199
C00658		P011-01/ /B015		CB-CABIN ALTITUDE CONTROL SEL				ALL
	=B	D	W0110	ZZPI	00		24-54-73	001-099
	=B	D	W0110	ZZPJ	00		24-54-73	001-099
	=B	D	W0110	ZZZG	02		24-54-73	001-099
	=B	D	W0118	ZZOD	00		24-54-73	115-199
	=B	D	W0118	ZZOE	00		24-54-73	115-199
	=B	D	W0118	ZZZG	02		24-54-73	115-199
	=L	D	W0124	0911	20		21-31-11	001-099
	=L	D	W0132	0501	20		21-31-11	115-199
C00660		P011-03/ /P014		CB-RECIRC CARGO FIRE CONT LEFT				ALL
	=B	D	W0112	ZZZW	02		24-54-11	001-099
	=B	D	W0112	0009	08		24-54-11	ALL
	=B	D	W0112	ZZFC	02		24-54-11	ALL
	=L	D	W0126	0502	24		21-25-11	ALL
C00661		P011-04/ /P023		CB-RECIRC CARGO FIRE CONT RIGHT				ALL
	=B	D	W0116	ZZYK	02		24-54-21	ALL
	=B	D	W0116	ZZYP	02		24-54-21	ALL
	=L	D	W0130	0226	24		21-25-11	ALL
C00662		P070-00/ /A006		CB-CAPT AUX HTR HI				ALL
	=B	D	W1252	0068	12		24-51-14	001-099
	=B	D	W1252	0004	12		24-51-14	ALL
	=B	D	W1252	0011	12		24-51-14	115-199
	=L	D	W1252	0105	20		21-45-11	ALL
C00663		P070-00/ /A005		CB-CAPT AUX HTR LO				ALL
	=B	D	W1252	0002	12		24-51-14	ALL
	=B	D	W1252	0010	12		24-51-14	ALL
	=L	D	W1252	0106	20		21-45-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section C00600

Page 6

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00667		P011-03/ /P016		CB-CABIN ZONE CNTLR				ALL
	=B	D	W0112	0403	16		24-51-11	ALL
	=B	D	W0112	ZZXZ	02		24-51-11	ALL
	=L	D	W0126	0503	24		21-61-51	ALL
C00670		P011-03/ /P015		CB-CABIN TRIM AIR				ALL
	=B	D	W0112	0504	12		24-54-11	001-099
	=B	D	W0112	ZZFC	02		24-54-11	ALL
	=B	D	W0112	0504	08		24-54-11	115-199
	=B	D	W0112	ZZZU	02		24-54-11	115-199
	=L	D	W0126	0328	24		21-61-11	ALL
	=L	D	W0126	0599	20		21-61-51	ALL
C00673		P011-03/ /M011		CB-LEFT PACK AUTO PWR				ALL
	=B	D	W0112	0025	12		24-51-15	ALL
	=B	D	W0112	ZZYK	02		24-51-15	ALL
	=L	D	W0126	0504	20		21-51-12	ALL
C00674		P011-04/ /M019		CB-RIGHT PACK AUTO PWR				ALL
	=B	D	W0116	0040	12		24-51-25	ALL
	=L	D	W0130	0060	20		21-51-22	ALL
C00683		P011-01/ /B014		CB-CABIN ALT/PRESS MAN				ALL
	=B	D	W0110	ZZLE	04		24-54-73	001-099
	=B	D	W0110	ZZPJ	00		24-54-73	001-099
	=B	D	W0110	ZZYJ	02		24-54-73	001-099
	=B	D	W0118	ZZHE	04		24-54-73	115-199
	=B	D	W0118	ZZOE	00		24-54-73	115-199
	=B	D	W0118	ZZYJ	02		24-54-73	115-199
	=L	D	W0124	0803	20		21-31-31	001-099
	=L	D	W0132	0203	20		21-31-31	115-199
C00686		P011-03/ /N015		CB-CABIN ALT/PRESS AUTO 1				ALL
	=B	D	W0112	0027	12		24-51-15	ALL
	=L	D	W0126	0505	20		21-31-11	ALL
C00699		P037-00/ /F004		CB-HI F/O AUX HEATERS				ALL
	=B	D	W1272	0034	14		24-51-24	ALL
	=B	D	W1272	ZZXR	02		24-51-24	ALL
	=L	D	W1272	0216	20		21-45-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section C00600

Page 7 End

Oct 09/2008

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00700		P037-00/ /F003		CB-LO F/O AUX HEATERS				ALL
	=B	D	W1272	0041	14		24-51-24	ALL
	=B	D	W1272	ZZYA	02		24-51-24	ALL
	=L	D	W1272	0217	20		21-45-11	ALL
C00701		P011-04/ /N024		CB-CABIN ALTITUDE CONTROL AUTO 2				ALL
	=B	D	W0116	ZZYL	02		24-51-25	ALL
	=L	D	W0130	0202	20		21-31-21	ALL
C00702		P011-01/ /A013		CB-AIR COND PACK LEFT AUTO CONT				001-099
C00702		P011-01/ /A014		CB-LEFT PACK AUTO CONT				115-199
	=B	D	W0110	ZZAL	03		24-54-73	001-099
	=B	D	W0110	ZZOB	00		24-54-73	001-099
	=B	D	W0118	ZZAH	03		24-54-73	115-199
	=B	D	W0118	ZZOL	00		24-54-73	115-199
	=L	D	W0124	0506	24		21-51-12	001-099
	=L	D	W0132	0050	24		21-51-12	115-199
C00703		P011-02/ /A028		CB-RIGHT PACK AUTO CONT				ALL
	=B	D	W0114	ZZCK	08		24-54-71	001-099
	=B	D	W0114	ZZOK	00		24-54-71	001-099
	=B	D	W0120	ZZAK	08		24-54-71	115-199
	=B	D	W0120	ZZBF	00		24-54-71	115-199
	=L	D	W0128	0242	24		21-51-22	ALL
C00704		P011-02/ /A029		CB-AIR COND PACK RIGHT FLOW CONT				001-099
C00704		P011-02/ /A029		CB-RIGHT PACK FLOW CONT				115-199
	=B	D	W0114	ZZOC	00		24-54-71	001-099
	=B	D	W0114	ZZOK	00		24-54-71	001-099
	=B	D	W0120	ZZBF	00		24-54-71	115-199
	=B	D	W0120	ZZBG	00		24-54-71	115-199
	=L	D	W0128	0019	20		21-51-21	ALL
C00705		P011-03/ /N011		CB-EQUIP COOLING FAN CONT AFT EXH XFR				ALL
	=B	D	W0112	0008	08		24-54-11	ALL
	=B	D	W0112	ZZZD	02		24-54-11	ALL
	=B	D	W0112	ZZZY	02		24-54-11	ALL
	=L	D	W0126	0004	24		21-58-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section C00700

Page 1

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00709		P011-03/ /M017		CB-PACK FLOW IND				ALL
	=B	D	W0112	0415	16		24-51-11	001-099
	=B	D	W0112	0414	16		24-51-11	ALL
	=L	D	W0126	0444	22		21-52-31	ALL
I C00725		P011-01/ /E007		CB-FMS SW, L (SB 34-0427)				001
I C00725		P011-01/ /E007		CB-FMS SW, L (SB 34-0414)				115-199
I	=B	D	W0110	ZZXJ	02		24-54-73	115-199
I	=L	D	W0124	0302	22		34-61-15	115-199
I C00726		P011-02/ /F033		CB-FMS SW, R (SB 34-0427)				001
I C00726		P011-02/ /F033		CB-FMS SW, R (SB 34-0414)				115-199
I	=B	D	W0114	ZZAG	02		24-54-21	115-199
I	=L	D	W0128	0175	22		34-61-25	115-199
C00740		P011-04/ /S034		CB-GALLEYS FWD				001-099
	=B	D	W0116	ZZOW	02		24-54-21	001-099
	=B	D	W0116	ZZYY	02		24-54-21	001-099
	=L	D	W0130	0301	22		25-31-11	001-099
C00741		P011-04/ /S034		CB-GALLEYS MID FWD				115-199
	=B	D	W0116	ZZXX	02		24-54-21	115-199
	=B	D	W0116	ZZYY	02		24-54-21	115-199
	=L	D	W0130	0215	20		25-31-21	115-199
C00743		P011-03/ /S003		CB-GALLEY G4B				001-099
C00743		P011-03/ /S005		CB-GALLEY AFT				115-199
	=B	D	W0112	0002	08		24-54-11	ALL
	=B	D	W0112	ZZXM	02		24-54-11	ALL
	=L	D	W0126	0321	18		25-31-33	ALL
C00763		P011-04/ /J026		CB-FIRE DET ALTN PWR ENG L				ALL
	=B	D	W0116	0503	12		24-54-21	001-099
	=B	D	W0116	ZZOZ	00		24-54-21	ALL
	=B	D	W0116	ZZPA	00		24-54-21	ALL
	=L	D	W0130	0205	24		26-11-11	ALL
C00764		P011-04/ /J027		CB-FIRE DET ALTN PWR ENG R				ALL
	=B	D	W0116	ZZAK	04		24-54-21	ALL
	=B	D	W0116	ZZPA	00		24-54-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section C00700

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00764		P011-04/ /J027		CB-FIRE DET ALTN PWR ENG R (continued)				ALL
	=L	D	W0130	0310	24		26-11-21	ALL
C00765		P011-04/ /J025		CB-FIRE DET ALTN PWR APU				ALL
	=B	D	W0116	0100	12		24-54-21	001-099
	=B	D	W0116	ZZOY	00		24-54-21	ALL
	=B	D	W0116	ZZOZ	00		24-54-21	ALL
	=B	D	W0116	0100	10		24-54-21	115-199
	=L	D	W0130	0308	24		26-15-11	ALL
C00766		P011-04/ /J024		CB-FIRE DET ALTN PWR CARGO				ALL
	=B	D	W0116	ZZAK	04		24-54-21	ALL
	=B	D	W0116	ZZOY	00		24-54-21	ALL
	=L	D	W0130	0402	24		26-16-11	ALL
C00770		P011-01/ /B010		CB-W/W FIRE DET				ALL
	=B	D	W0110	ZZZH	02		24-54-73	001-099
	=B	D	W0110	ZZZQ	02		24-54-73	001-099
	=B	D	W0118	ZZXB	02		24-54-73	115-199
	=L	D	W0124	0927	24		26-17-11	001-099
	=L	D	W0132	0570	24		26-17-11	115-199
C00772		P011-02/ /B026		CB-FIRE DETECTION CARGO 1				ALL
	=B	D	W0114	ZZPL	00		24-54-71	001-099
	=B	D	W0114	ZZPO	00		24-54-71	001-099
	=B	D	W0120	ZZDD	00		24-54-71	115-199
	=B	D	W0120	ZZDG	00		24-54-71	115-199
	=L	D	W0128	0902	24		26-16-11	001-099
	=L	D	W0134	0402	24		26-16-11	115-199
C00773		P006-01/ /H006		CB-BTL 2 CARGO FIRE EXTINGUISHING				ALL
	=B	D	W0060	ZZKK	06		24-54-72	ALL
	=B	D	W0060	ZZKQ	00		24-54-72	ALL
	=L	D	W0060	0121	20		26-23-11	ALL
C00774		P011-02/ /B020		CB-FIRE DETECTION L ENG 1				ALL
	=B	D	W0114	ZZBD	00		24-54-71	001-099
	=B	D	W0114	ZZOR	00		24-54-71	001-099
	=B	D	W0120	ZZOQ	00		24-54-71	115-199
	=B	D	W0120	ZZOR	00		24-54-71	115-199

HOOKUP LIST

D280N032

91-21-51

Section C00700

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00774		P011-02/ /B020		CB-FIRE DETECTION L ENG 1 (continued)				ALL
	=L	D	W0128	0800	24		26-11-11	001-099
	=L	D	W0134	0200	24		26-11-11	115-199
C00775		P011-02/ /B022		CB-FIRE DETECTION R ENG 1				ALL
	=B	D	W0114	ZZOP	00		24-54-71	001-099
	=B	D	W0114	ZZOQ	00		24-54-71	001-099
	=B	D	W0114	ZZXJ	02		24-54-71	001-099
	=B	D	W0120	ZZOO	00		24-54-71	115-199
	=B	D	W0120	ZZOP	00		24-54-71	115-199
	=B	D	W0120	ZZYB	02		24-54-71	115-199
	=L	D	W0128	0856	24		26-11-21	001-099
	=L	D	W0134	0306	24		26-11-21	115-199
C00776		P011-02/ /B024		CB-FIRE DETECTION APU 1				ALL
	=B	D	W0114	ZZPM	00		24-54-71	001-099
	=B	D	W0114	ZZPN	00		24-54-71	001-099
	=B	D	W0120	ZZDE	00		24-54-71	115-199
	=B	D	W0120	ZZDF	00		24-54-71	115-199
	=L	D	W0128	0854	24		26-15-11	001-099
	=L	D	W0134	0304	24		26-15-11	115-199
C00778		P006-01/ /H001		CB-BTL 1 ENG L FIRE EXTINGUISHING				ALL
	=B	D	W0060	ZZKK	06		24-54-72	ALL
	=B	D	W0060	ZZKN	00		24-54-72	ALL
	=B	D	W0060	ZZXD	02		24-54-72	ALL
	=L	D	W0060	0211	20		26-21-11	ALL
	=L	D	W0060	0403	20		26-21-11	ALL
C00779		P006-01/ /H003		CB-BTL 1 ENG R FIRE EXTINGUISHING				ALL
	=B	D	W0060	ZZKL	00		24-54-72	ALL
	=B	D	W0060	ZZKM	00		24-54-72	ALL
	=L	D	W0060	0106	20		26-21-11	ALL
	=L	D	W0060	0406	20		26-21-11	ALL
C00780		P006-01/ /G001		CB-FIRE EXT APU				ALL
	=B	D	W0060	ZZJJ	03		24-54-72	001-099
	=B	D	W0060	ZZJK	00		24-54-72	ALL
	=B	D	W0060	ZZXD	02		24-54-72	ALL
	=B	D	W0060	ZZJJ	06		24-54-72	115-199
	=L	D	W0060	0214	20		26-22-21	001-099

HOOKUP LIST

D280N032

91-21-51

Section C00700

Page 4

Oct 09/2008

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00780		P006-01/ /G001		CB-FIRE EXT APU (continued)				ALL
	=L	D	W0060	0213	20		26-22-21	ALL
C00781		P006-01/ /H005		CB-BTL 1 CARGO FIRE EXTINGUISHING				ALL
	=B	D	W0060	ZZKP	00		24-54-72	ALL
	=B	D	W0060	ZZKQ	00		24-54-72	ALL
	=L	D	W0060	0307	20		26-23-11	ALL
C00783		P011-02/ /B021		CB-FIRE DETECTION L ENG 2				ALL
	=B	D	W0114	ZZOQ	00		24-54-71	001-099
	=B	D	W0114	ZZOR	00		24-54-71	001-099
	=B	D	W0114	ZZXC	02		24-54-71	001-099
	=B	D	W0120	ZZOP	00		24-54-71	115-199
	=B	D	W0120	ZZOQ	00		24-54-71	115-199
	=B	D	W0120	ZZXC	02		24-54-71	115-199
	=L	D	W0128	0852	24		26-11-11	001-099
	=L	D	W0134	0302	24		26-11-11	115-199
C00784		P011-02/ /B023		CB-FIRE DETECTION R ENG 2				ALL
	=B	D	W0114	ZZOP	00		24-54-71	001-099
	=B	D	W0114	ZZPM	00		24-54-71	001-099
	=B	D	W0114	ZZXE	02		24-54-71	001-099
	=B	D	W0120	ZZDE	00		24-54-71	115-199
	=B	D	W0120	ZZOO	00		24-54-71	115-199
	=B	D	W0120	ZZXE	02		24-54-71	115-199
	=L	D	W0128	0715	24		26-11-21	001-099
	=L	D	W0134	0015	24		26-11-21	115-199
C00785		P011-02/ /B025		CB-FIRE DETECTION APU 2				ALL
	=B	D	W0114	ZZPN	00		24-54-71	001-099
	=B	D	W0114	ZZPO	00		24-54-71	001-099
	=B	D	W0120	ZZDF	00		24-54-71	115-199
	=B	D	W0120	ZZDG	00		24-54-71	115-199
	=L	D	W0128	0718	24		26-15-11	001-099
	=L	D	W0134	0018	24		26-15-11	115-199
C00786		P006-01/ /H002		CB-BTL 2 ENG L FIRE EXTINGUISHING				ALL
	=B	D	W0060	ZZKM	00		24-54-72	ALL
	=B	D	W0060	ZZKN	00		24-54-72	ALL
	=L	D	W0060	0212	20		26-21-11	ALL
	=L	D	W0060	0404	20		26-21-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section C00700

Page 5

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00787		P006-01/ /H004		CB-BTL 2 ENG R FIRE EXTINGUISHING				ALL
	=B	D	W0060	ZZKL	00		24-54-72	ALL
	=B	D	W0060	ZZKP	00		24-54-72	ALL
	=L	D	W0060	0105	20		26-21-11	ALL
	=L	D	W0060	0405	20		26-21-11	ALL
C00788		P011-02/ /B027		CB-FIRE DETECTION CARGO 2				ALL
	=B	D	W0114	ZZCG	09		24-54-71	001-099
	=B	D	W0114	ZZPL	00		24-54-71	001-099
	=B	D	W0120	0101	16		24-54-71	115-199
	=B	D	W0120	ZZAG	09		24-54-71	115-199
	=B	D	W0120	ZZDD	00		24-54-71	115-199
	=L	D	W0128	0925	24		26-16-11	001-099
	=L	D	W0134	0425	24		26-16-11	115-199
C00794		P011-04/ /S036		CB-FIRE DET CARGO FAN PWR				ALL
	=B	D	W0116	0315	12		24-51-52	ALL
	=L	D	W0130	0315	24		26-16-21	ALL
C00795		P011-04/ /S035		CB-FIRE DET CARGO FAN CONT				ALL
	=B	D	W0116	ZZOW	02		24-54-21	001-099
	=B	D	W0116	ZZZG	02		24-54-21	ALL
	=L	D	W0130	0300	24		26-16-21	ALL
C00796		P011-02/ /B033		CB-APU REMOTE FIRE IND				ALL
	=B	D	W0114	ZZOY	00		24-54-71	001-099
	=B	D	W0114	ZZOZ	00		24-54-71	001-099
	=B	D	W0114	ZZXF	02		24-54-71	001-099
	=B	D	W0120	ZZBA	00		24-54-71	115-199
	=B	D	W0120	ZZOZ	00		24-54-71	115-199
	=L	D	W0128	0853	24		26-15-12	001-099
	=L	D	W0134	0303	24		26-15-12	115-199

HOOKUP LIST

D280N032

91-21-51

Section C00700

Page 6 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00803		P011-04/ /R032		CB-BPCU SEC				ALL
	= B	D	W0116	ZZOF	00		24-54-21	001-099
	= B	D	W0116	ZZOG	00		24-54-21	ALL
	= B	D	W0116	ZZXF	02		24-54-21	ALL
	= B	D	W0116	ZZOH	00		24-54-21	115-199
	= L	D	W0130	0118	22		24-41-11	ALL
C00804		P006-01/ /B001		CB-L GEN CONT UNIT				ALL
	= B	D	W0060	0010	12		24-54-71	ALL
	= B	D	W0060	ZZCC	06		24-54-71	ALL
	= B	D	W0060	ZZCD	00		24-54-71	ALL
	= B	D	W0060	ZZXE	02		24-54-71	ALL
	= L	D	W0060	0201	20		24-11-11	ALL
C00805		P006-01/ /B002		CB-R GEN CONT UNIT				ALL
	= B	D	W0060	ZZCD	00		24-54-71	ALL
	= B	D	W0060	ZZCE	00		24-54-71	ALL
	= L	D	W0060	0202	20		24-11-21	ALL
C00806		P006-01/ /B003		CB-APU GEN CONT UNIT				ALL
	= B	D	W0060	ZZCE	00		24-54-71	ALL
	= B	D	W0060	ZZCF	00		24-54-71	ALL
	= L	D	W0060	0203	20		24-22-41	ALL
C00807		P006-01/ /B005		CB-L GEN DRIVE DISC				ALL
	= B	D	W0060	ZZCG	00		24-54-71	ALL
	= B	D	W0060	ZZCH	00		24-54-71	ALL
	= L	D	W0060	0301	16		24-11-11	ALL
C00808		P006-01/ /B006		CB-R GEN DRIVE DISC				ALL
	= B	D	W0060	ZZCC	06		24-54-71	ALL
	= B	D	W0060	ZZCH	00		24-54-71	ALL
	= B	D	W0060	ZZXA	02		24-54-71	ALL
	= L	D	W0060	0303	16		24-11-21	ALL
C00809		P006-01/ /B004		CB-BUS PWR CONT UNIT				ALL
	= B	D	W0060	ZZCF	00		24-54-71	ALL
	= B	D	W0060	ZZCG	00		24-54-71	ALL
	= L	D	W0060	0204	20		24-41-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section C00800

Page 1

Jan 21/2005

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00811		P006-01/ /A003		CB-DC STBY BUS OFF				ALL
	=B	D	W0060	0003	12		24-33-11	ALL
	=B	D	W0060	0401	12		24-54-73	ALL
	=L	D	W0060	0004	22		24-33-11	ALL
C00813		P006-02/ /L011		CB-INV PWR BAT				ALL
	=B	F	W0066	ZZOA	00		24-31-11	ALL
	=B	F	W0066	ZZOB	00		24-31-11	ALL
	=L	F	W0066	0002	06		24-33-11	ALL
C00814		P006-01/ /D002		CB-BAT XFR CONT				ALL
	=B	D	W0060	ZZFH	00		24-54-72	ALL
	=B	D	W0060	ZZFK	00		24-54-72	ALL
	=L	D	W0060	0015	22		24-33-11	ALL
C00815		P034-00/ /AB03		CB-APU GEN VOLTMETER				ALL
	=B	D	W1128	0145	18		24-28-11	ALL
	=L	D	W1128	0138	24		24-28-11	ALL
C00816		P034-00/ /AB04		CB-EXT PWR VOLTMETER				ALL
	=B	D	W1128	0146	22		24-28-11	ALL
	=L	D	W1128	0137	24		24-28-11	ALL
C00817		P006-03/ /M015		CB-VOLT SENSE INVERTER				ALL
	=B	D	W0068	0001	14		24-33-11	ALL
	=B	D	W0068	ZZAA	02		24-33-11	ALL
	=L	D	W0068	0003	24		24-28-11	ALL
C00818		P031-00/ /A006		CB-L GEN VM				ALL
	=B	D	W1136	0122	18		24-28-11	ALL
	=L	D	W1136	0121	24		24-28-11	ALL
C00819		P032-00/ /A004		CB-R GEN VM				ALL
	=B	D	W1138	0023	18		24-28-11	ALL
	=L	D	W1138	0024	24		24-28-11	ALL
C00820		E006-00/ /		CB-APU BAT OVHT PROT				ALL
I	=B	D	W1026	ZZAB	03		24-31-41	001-099
I	=B	D	W1026	ZZOB	00		24-31-41	001-099
I	=B	D	W1026	ZZXC	02		24-31-41	001-099

HOOKUP LIST

D280N032

91-21-51

Section C00800

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00820		E006-00/ /		CB-APU BAT OVHT PROT (continued)				ALL
	= B	D	W1026	0008	16		24-31-41	115-199
	= B	D	W1026	ZZOB	02		24-31-41	115-199
	= L	D	W1026	0020	22		24-31-41	ALL
C00821		E006-00/ /		CB-APU BAT DC VOLT				ALL
	= B	D	W1026	ZZOA	00		24-31-41	001-099
	= B	D	W1026	ZZOB	00		24-31-41	001-099
	= B	D	W1026	ZZXA	02		24-31-41	001-099
	= B	D	W1026	0003	16		24-31-41	115-199
	= B	D	W1026	ZZOB	02		24-31-41	115-199
	= L	D	W1026	0083	24		24-34-11	001-099
	= L	D	W1026	0083	22		24-34-11	115-199
C00822		P011-03/ /R004		CB-UTIL BUS L				ALL
	= B	D	W0112	ZZOG	00		24-54-11	001-099
	= B	D	W0112	ZZOH	00		24-54-11	001-099
	= B	D	W0112	ZZXM	02		24-54-11	ALL
	= B	D	W0112	ZZOE	00		24-54-11	115-199
	= B	D	W0112	ZZOF	00		24-54-11	115-199
	= L	D	W0126	0310	20		24-51-14	ALL
C00823		P011-04/ /R031		CB-UTIL BUS R				ALL
	= B	D	W0116	ZZOG	00		24-54-21	001-099
	= B	D	W0116	ZZOH	00		24-54-21	ALL
	= B	D	W0116	ZZYZ	02		24-54-21	ALL
	= B	D	W0116	ZZOI	00		24-54-21	115-199
	= L	D	W0130	0220	20		24-51-24	ALL
C00824		P011-03/ /R003		CB-CAT III ISOL BUS L				ALL
	= B	D	W0112	0011	12		24-54-11	001-099
	= B	D	W0112	ZZOH	00		24-54-11	001-099
	= B	D	W0112	ZZOI	00		24-54-11	001-099
	= B	D	W0112	0011	08		24-54-11	115-199
	= B	D	W0112	ZZOF	00		24-54-11	115-199
	= B	D	W0112	ZZOG	00		24-54-11	115-199
	= L	D	W0126	0507	24		24-51-31	001-099
	= L	D	W0126	0507	22		24-51-31	115-199
C00825		P011-04/ /R030		CB-CAT III BUS ISOL R				ALL
	= B	D	W0116	ZZOH	00		24-54-21	001-099

HOOKUP LIST

D280N032

91-21-51

Section C00800

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00825		P011-04/ /R030		CB-CAT III BUS ISOL R (continued)				ALL
	=B	D	W0116	ZZAF	04		24-54-21	ALL
	=B	D	W0116	ZZZA	02		24-54-21	ALL
	=B	D	W0116	ZZOI	00		24-54-21	115-199
	=L	D	W0130	0053	24		24-51-31	001-099
	=L	D	W0130	0053	22		24-51-31	115-199
C00826		P011-01/ /D006		CB-CAT III BUS ISOL BAT				ALL
	=B	D	W0110	0701	12		24-54-73	001-099
	=B	D	W0110	ZZAR	03		24-54-73	001-099
	=B	D	W0110	ZZOF	00		24-54-73	001-099
	=B	D	W0110	ZZZP	02		24-54-73	001-099
	=B	D	W0118	0001	12		24-54-73	115-199
	=B	D	W0118	ZZAG	03		24-54-73	115-199
	=B	D	W0118	ZZOF	00		24-54-73	115-199
	=B	D	W0118	ZZZP	02		24-54-73	115-199
	=L	D	W0124	0950	24		24-51-31	001-099
	=L	D	W0132	0350	22		24-51-31	115-199
C00827		P006-01/ /D001		CB-BAT OVHT PROT				ALL
	=B	D	W0060	0012	08		24-54-72	ALL
	=B	D	W0060	0013	10		24-54-72	ALL
	=B	D	W0060	ZZFF	06		24-54-72	ALL
	=B	D	W0060	ZZFK	00		24-54-72	ALL
	=L	D	W0060	0014	22		24-31-11	ALL
C00828		P006-01/ /A005		CB-STBY PWR CONT				ALL
	=B	D	W0060	ZZAB	00		24-54-71	ALL
	=B	D	W0060	ZZAC	00		24-54-71	ALL
	=L	D	W0060	0006	22		24-33-11	ALL
C00829		P006-01/ /A001		CB-BAT BUS DISTR				ALL
	=B	D	W0060	0001	08		24-33-11	ALL
	=B	D	W0060	ZZBB	02		24-33-11	ALL
	=L	D	W0060	ZZXE	02		24-54-71	ALL
C00865		P006-02/ /H012		CB-APU START TRU CONT				ALL
	=B	D	W0070	ZZAB	00		24-54-21	001-099
	=B	D	W0070	ZZAC	03		24-54-21	ALL
	=B	D	W0070	ZZOE	00		24-54-21	115-199
	=L	D	W0070	0011	22		24-32-41	ALL

HOOKUP LIST

D280N032

91-21-51

Section C00800

Page 4

Oct 09/2008

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00868		E006-00/ /		CB-APU BAT CHGR				ALL
	=B	F	W1026	0002	08		24-31-41	ALL
	=B	F	W1026	0005	08		24-31-41	ALL
	=L	F	W1026	0001	*1		24-31-41	ALL
C00869		E006-00/ /		CB-APU BAT BUS				ALL
	=B	D	W1026	0005	08		24-31-41	ALL
	=L	D	W1026	ZZXC	02		24-31-41	001-099
	=L	D	W1026	0003	16		24-31-41	115-199
C00871		P037-00/ /E005		CB-GND XFMR				ALL
	=B	D	W1272	ZZXL	02		24-51-52	ALL
	=B	D	W1272	ZZYC	02		24-51-52	ALL
	=L	D	W1272	0218	14		24-53-51	ALL
C00872		P006-01/ /A002		CB-DC STBY				ALL
	=B	D	W0060	ZZBB	02		24-33-11	ALL
	=L	D	W0060	0002	12		24-33-11	ALL
C00874		P006-03/ /K016		CB-AC STBY BUS PWR				ALL
	=B	D	W0062	0386	12		24-51-15	ALL
	=L	D	W0062	0025	18		24-33-11	ALL
	=L	D	W0062	0026	18		24-33-11	ALL
C00875		P006-03/ /M014		CB-CENTER BUS AC INVERTER				ALL
	=B	D	W0068	ZZAA	02		24-33-11	ALL
	=L	D	W0068	0004	22		24-51-31	ALL
C00876		P006-03/ /K017		CB-CENTER BUS AC				ALL
	=B	D	W0062	0017	14		24-51-11	ALL
	=B	D	W0062	0035	14		24-51-11	ALL
	=L	D	W0062	0027	22		24-51-31	ALL
C00877		P006-03/ /K018		CB-28V AC BUS L				ALL
	=B	D	W0062	0016	14		24-51-11	ALL
	=B	D	W0062	0036	14		24-51-11	ALL
	=L	D	W0062	0103	20		24-53-11	ALL
C00878		P006-04/ /K024		CB-28V AC BUS R				ALL
	=B	D	W0064	0033	12		24-51-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section C00800

Page 5

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00878		P006-04/ /K024		CB-28V AC BUS R (continued)				ALL
	=L	D	W0064	0202	20		24-53-21	ALL
C00879		P006-01/ /A006		CB-DC BUS TIE CONT				ALL
	=B	D	W0060	ZZAA	03		24-54-71	ALL
	=B	D	W0060	ZZAC	00		24-54-71	ALL
	=L	D	W0060	0007	22		24-34-11	ALL
C00880		P006-01/ /G006		CB-CENTER BUS CONT				ALL
	=B	D	W0060	ZZHK	02		24-54-72	001-099
	=B	D	W0060	ZZXG	02		24-54-72	ALL
	=B	D	W0060	ZZHK	00		24-54-72	115-199
	=B	D	W0060	ZZJJ	06		24-54-72	115-199
	=L	D	W0060	0021	22		24-51-31	ALL
C00881		P006-02/ /D009		CB-TIE L				ALL
	=B	F	W0072	0001	02		24-32-11	ALL
	=B	F	W0072	ZZOB	00		24-32-11	ALL
	=B	F	W0072	ZZOD	00		24-32-11	ALL
	=L	F	W0072	0008	04		24-32-11	ALL
C00882		P006-02/ /D008		CB-SECT 1				ALL
	=B	D	W0072	ZZOC	00		24-32-11	ALL
	=B	D	W0072	ZZOD	00		24-32-11	ALL
	=L	D	W0072	0009	08		24-54-11	ALL
C00883		P006-02/ /D007		CB-SECT 2				ALL
	=B	D	W0072	ZZOC	00		24-32-11	ALL
	=L	D	W0072	0002	08		24-54-11	ALL
C00884		P006-02/ /C009		CB-C BUS PWR				ALL
	=B	D	W0072	ZZCC	03		24-32-11	ALL
	=B	D	W0072	ZZDD	00		24-32-11	ALL
	=L	D	W0072	0010	18		24-51-31	ALL
C00885		P006-02/ /D010		CB-INV PWR TRU				ALL
	=B	D	W0072	ZZOA	00		24-32-11	ALL
	=B	D	W0072	ZZOB	00		24-32-11	ALL
	=L	D	W0072	0006	08		24-33-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section C00800

Page 6

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00886		P006-02/ /D011		CB-BAT BUS PWR TRU				ALL
	=B	D	W0072	ZZOA	00		24-32-11	ALL
	=L	D	W0072	0005	08		24-33-11	ALL
	=L	D	W0072	0019	12		24-32-11	ALL
C00887		P006-02/ /C010		CB-BAT BUS CONT				ALL
	=B	D	W0072	ZZDD	00		24-32-11	ALL
	=B	D	W0072	ZZEE	00		24-32-11	ALL
	=L	D	W0072	0011	22		24-33-11	ALL
	=L	D	W0072	0012	22		24-33-11	ALL
C00889		P006-02/ /H009		CB-TIE R				ALL
	=B	F	W0070	0001	02		24-32-11	ALL
	=B	F	W0070	ZZOB	00		24-32-11	ALL
	=L	F	W0070	0002	04		24-32-11	ALL
C00890		P006-02/ /H007		CB-SECT 2				ALL
	=B	D	W0070	ZZOA	00		24-32-11	ALL
	=L	D	W0070	0004	08		24-54-21	ALL
	=L	D	W0070	ZZXB	02		24-54-21	ALL
C00891		P006-02/ /H008		CB-SECT 1				ALL
	=B	D	W0070	ZZOA	00		24-32-11	ALL
	=B	D	W0070	ZZOB	00		24-32-11	ALL
	=L	D	W0070	0005	08		24-54-21	ALL
C00892		P006-03/ /M013		CB-AC STBY BUS OFF				ALL
	=B	D	W0068	0002	16		24-54-73	ALL
	=B	D	W0068	0005	16		24-33-11	ALL
	=L	D	W0068	0007	22		24-33-11	ALL
C00896		P006-02/ /L008		CB-MAIN BAT CHGR				ALL
	=B	F	W0066	ZZOE	00		24-31-11	001-099
	=B	F	W0066	0006	02		24-31-11	ALL
	=B	F	W0066	ZZOD	00		24-31-11	ALL
	=L	F	W0066	0005	02		24-31-11	ALL
C00897		P006-02/ /L009		CB-HOT BAT BUS				ALL
	=B	D	W0066	ZZOC	00		24-31-11	ALL
	=B	D	W0066	ZZOD	00		24-31-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section C00800

Page 7

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00897		P006-02/ /L009		CB-HOT BAT BUS (continued)				ALL
	=L	D	W0066	0004	08		24-54-72	ALL
C00898		P006-02/ /L010		CB-BAT BUS PWR				ALL
	=B	D	W0066	ZZOB	00		24-31-11	ALL
	=B	D	W0066	ZZOC	00		24-31-11	ALL
	=L	D	W0066	0003	08		24-33-11	ALL
C00899		P006-02/ /L012		CB-CENTER BUS DC				ALL
	=B	D	W0066	0011	06		24-31-11	001-002, 115-199
	=B	D	W0066	ZZOA	00		24-31-11	ALL
	=B	D	W0066	0013	06		24-31-11	003-099
	=L	D	W0066	0001	18		24-51-31	001-099
	=L	D	W0066	0001	16		24-51-31	115-199

HOOKUP LIST

D280N032

91-21-51

Section C00800

Page 8 End

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00901		P031-00/ /		CB-L GEN				ALL
	L1	H	W1130	0001	04		24-21-11	ALL
	L1	H	W1130	0002	04		24-21-11	ALL
	L1	H	W2018	0001	06		24-51-11	ALL
	L2	H	W1130	0003	04		24-21-11	ALL
	L2	H	W1130	0004	04		24-21-11	ALL
	L2	H	W1136	0107	18		24-22-11	ALL
	L2	H	W2018	0002	06		24-51-11	ALL
	L3	H	W1130	0005	04		24-21-11	ALL
	L3	H	W1130	0006	04		24-21-11	ALL
	L3	H	W2018	0003	06		24-51-11	ALL
	T1	H	W1136	0100	18		24-21-11	ALL
	T1	H*	W3312	0001	*2		24-21-11	ALL
	T2	H	W1136	0101	18		24-21-11	ALL
	T2	H	W1136	0122	18		24-28-11	ALL
	T2	H*	W3312	0002	*2		24-21-11	ALL
	T3	H	W1136	0003	18		24-21-11	ALL
	T3	H	W1136	0102	18		24-21-11	ALL
	T3	H*	W3312	0003	*2		24-21-11	ALL
C00902		P031-00/ /		CB-L BUS TIE				ALL
	L1	H	W4406	0003	04		24-21-51	ALL
	L1	H	W4406	0004	04		24-21-51	ALL
	L2	H	W1136	0104	18		24-22-12	ALL
	L2	H	W4406	0007	04		24-21-51	ALL
	L2	H	W4406	0008	04		24-21-51	ALL
	L3	H	W1136	0006	18		24-21-51	ALL
	L3	H	W4406	0011	04		24-21-51	ALL
	L3	H	W4406	0012	04		24-21-51	ALL
	T1	H	W1130	0019	04		24-21-11	001-099
	T1	H	W1130	0001	04		24-21-11	ALL
	T1	H	W1130	0002	04		24-21-11	ALL
	T1	H	W1130	0010	04		24-21-11	ALL
	T1	H	W1130	0007	04		24-21-11	115-199
	T2	H	W1130	0020	04		24-21-11	001-099
	T2	H	W1130	0003	04		24-21-11	ALL
	T2	H	W1130	0004	04		24-21-11	ALL
	T2	H	W1130	0011	04		24-21-11	ALL
	T2	H	W1130	0008	04		24-21-11	115-199
	T3	H	W1130	0021	04		24-21-11	001-099
	T3	H	W1130	0005	04		24-21-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section C00900

Page 1

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00902		P031-00/ /		CB-L BUS TIE (continued)				ALL
	T3	H	W1130	0006	04		24-21-11	ALL
	T3	H	W1130	0012	04		24-21-11	ALL
	T3	H	W1136	0001	18		24-21-11	ALL
	T3	H	W1130	0009	04		24-21-11	115-199
C00903		P032-00/ /		CB-R GEN				ALL
	L1	H	W1132	0001	04		24-21-21	ALL
	L1	H	W1132	0002	04		24-21-21	ALL
	L1	H	W1132	0046	08		24-51-21	ALL
	L1	H	W2020	0001	06		24-51-21	ALL
	L2	H	W1132	0003	04		24-21-21	ALL
	L2	H	W1132	0004	04		24-21-21	ALL
	L2	H	W1132	0047	08		24-51-21	ALL
	L2	H	W1138	0040	18		24-22-21	ALL
	L2	H	W2020	0002	06		24-51-21	ALL
	L3	H	W1132	0005	04		24-21-21	ALL
	L3	H	W1132	0006	04		24-21-21	ALL
	L3	H	W1132	0048	08		24-51-21	ALL
	L3	H	W2020	0003	06		24-51-21	ALL
	T1	H	W1138	0055	18		24-21-21	ALL
	T1	H*	W3412	0001	*2		24-21-21	ALL
	T2	H	W1138	0023	18		24-28-11	ALL
	T2	H	W1138	0048	18		24-21-21	ALL
	T2	H*	W3412	0002	*2		24-21-21	ALL
	T3	H	W1138	0049	18		24-21-21	ALL
	T3	H	W1138	0050	18		24-21-21	ALL
	T3	H*	W3412	0003	*2		24-21-21	ALL
C00904		P032-00/ /		CB-R BUS TIE				ALL
	L1	H	W4406	0001	04		24-21-51	ALL
	L1	H	W4406	0004	04		24-21-51	ALL
	L2	H	W1138	0020	18		24-22-22	ALL
	L2	H	W4406	0005	04		24-21-51	ALL
	L2	H	W4406	0008	04		24-21-51	ALL
	L3	H	W1138	0039	18		24-21-51	ALL
	L3	H	W4406	0009	04		24-21-51	ALL
	L3	H	W4406	0012	04		24-21-51	ALL
	T1	H	W1132	0022	04		24-21-21	001-099
	T1	H	W1132	0001	04		24-21-21	ALL
	T1	H	W1132	0002	04		24-21-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section C00900

Page 2

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C00904		P032-00/ /		CB-R BUS TIE (continued)				ALL
	T1	H	W1132	0010	04		24-21-21	ALL
	T1	H	W1132	0007	04		24-21-21	115-199
	T2	H	W1132	0023	04		24-21-21	001-099
	T2	H	W1132	0003	04		24-21-21	ALL
	T2	H	W1132	0004	04		24-21-21	ALL
	T2	H	W1132	0011	04		24-21-21	ALL
	T2	H	W1132	0008	04		24-21-21	115-199
	T3	H	W1132	0024	04		24-21-21	001-099
	T3	H	W1132	0005	04		24-21-21	ALL
	T3	H	W1132	0006	04		24-21-21	ALL
	T3	H	W1132	0012	04		24-21-21	ALL
	T3	H	W1138	0052	18		24-21-21	ALL
	T3	H	W1132	0009	04		24-21-21	115-199
C00905		P034-00/ /		CB-AUX PWR				ALL
	L1	H	W1128	0103	18		24-21-41	ALL
	L1	H	W1134	0012	08		24-51-52	ALL
	L1	H	W1134	0015	08		24-51-61	ALL
	L1	R	W2800	0010	*1		24-21-41	ALL
	L2	H	W1128	0102	18		24-21-41	ALL
	L2	H	W1128	0145	18		24-28-11	ALL
	L2	H	W1134	0011	08		24-51-52	ALL
	L2	H	W1134	0014	08		24-51-61	ALL
	L2	R	W2800	0009	*1		24-21-41	ALL
	L3	H	W1128	0004	18		24-21-41	ALL
	L3	H	W1128	0101	18		24-21-41	ALL
	L3	H	W1134	0010	08		24-51-52	ALL
	L3	H	W1134	0013	08		24-51-61	ALL
	L3	R	W2800	0008	*1		24-21-41	ALL
	T1	H	W4406	0009	04		24-21-51	ALL
	T1	H	W4406	0010	04		24-21-51	ALL
	T2	H	W1128	0110	18		24-22-41	ALL
	T2	H	W4406	0005	04		24-21-51	ALL
	T2	H	W4406	0006	04		24-21-51	ALL
	T3	H	W4406	0001	04		24-21-51	ALL
	T3	H	W4406	0002	04		24-21-51	ALL

HOOKUP LIST

D280N032

91-21-51

Section C00900

Page 3 End

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01002		P011-01/ /H010		CB-STAB TRIM POS IND L				001-099
C01002		P011-01/ /M010		CB-STAB TRIM POS IND L				115-199
	=B	D	W0110	ZZXW	02		24-53-11	ALL
	=L	D	W0124	0106	22		27-48-11	ALL
C01005		P011-03/ /J016		CB-RUDDER POS				ALL
	=B	D	W0112	ZZXG	02		24-53-11	ALL
	=B	D	W0112	ZZXV	02		24-53-11	ALL
	=L	D	W0126	0108	24		27-28-11	001-099
	=L	D	W0126	0108	22		27-28-11	115-199
C01008		P011-01/ /H012		CB-FLAP POS IND L				ALL
	=B	D	W0110	0044	18		24-51-15	ALL
	=B	D	W0110	ZZAK	02		24-51-15	ALL
	=L	D	W0124	0010	24		27-58-11	001-099
	=L	D	W0124	0011	24		27-58-11	001-099
	=L	D	W0124	0010	22		27-58-11	115-199
	=L	D	W0124	0011	22		27-58-11	115-199
C01009		P011-02/ /H019		CB-STAB TRIM POS IND R				ALL
	=B	D	W0114	0071	14		24-53-21	ALL
	=B	D	W0114	0072	14		24-53-21	ALL
	=L	D	W0128	0115	22		27-48-11	ALL
C01010		P011-02/ /B019		CB-STAB TRIM-ALTERNATE CONTROL				ALL
	=B	D	W0114	ZZBD	00		24-54-71	001-099
	=B	D	W0114	ZZCG	09		24-54-71	001-099
	=B	D	W0120	ZZAG	09		24-54-71	115-199
	=B	D	W0120	ZZOR	00		24-54-71	115-199
	=L	D	W0128	0133	20		27-41-31	001-099
	=L	D	W0134	0133	20		27-41-31	115-199
C01017		P011-01/ /H011		CB-STAB TRIM CONT L				001-004, 115-199
C01017		P011-01/ /C005		CB-STAB TRIM CONT L				ALL
	=B	D	W0110	0052	16		24-54-73	ALL
	=L	D	W0124	0012Y	22		27-41-11	ALL
C01018		P011-02/ /H020		CB-STAB TRIM CONT R				ALL
	=B	D	W0114	ZZYH	02		24-54-21	ALL
	=B	D	W0114	ZZYN	02		24-54-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section C01000

Page 1

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01018		P011-02/ /H020		CB-STAB TRIM CONT R (continued)				ALL
	=L	D	W0128	0109Y	22		27-41-21	ALL
C01022		P011-03/ /H010		CB-FLAP LOAD RELIEF				ALL
	=B	D	W0112	0213	12		24-54-11	001-099
	=B	D	W0112	ZZZA	02		24-54-11	ALL
	=B	D	W0112	ZZXA	02		24-54-11	115-199
	=L	D	W0126	0535	22		27-51-51	ALL
C01023		P011-01/ /G011		CB-AUTO SPEED BRAKE				ALL
	=B	D	W0110	0018	12		24-54-11	ALL
	=B	D	W0110	ZZXR	02		24-54-11	ALL
	=L	D	W0124	0122	20		27-62-11	ALL
	=L	D	W0124	0141	20		27-62-11	ALL
C01025		P011-01/ /G012		CB-FLAP/SLAT ELEC UNIT 1 PWR				ALL
	=B	D	W0110	0005	16		24-51-12	ALL
	=B	D	W0110	ZZXA	02		24-51-12	ALL
	=B	D	W0110	0001	16		24-51-12	115-199
	=L	D	W0124	0036	24		27-51-41	001-099
	=L	D	W0124	0036	22		27-51-41	115-199
C01031		P011-01/ /G010		CB-RUD RATIO				001-004, 115-199
C01031		P011-01/ /D018		CB-RUD RATIO				ALL
	=B	D	W0110	0050	16		24-54-73	ALL
	=L	D	W0124	0032	22		27-21-12	ALL
C01033		P011-01/ /C010		CB-RUDDER TRIM				ALL
	=B	D	W0110	ZZPK	00		24-54-73	001-099
	=B	D	W0110	ZZPL	00		24-54-73	001-099
	=B	D	W0118	ZZON	00		24-54-73	115-199
	=B	D	W0118	ZZOP	00		24-54-73	115-199
	=L	D	W0124	0729	20		27-21-11	001-099
	=L	D	W0132	0029	20		27-21-11	115-199
C01034		P011-03/ /J017		CB-RUDDER TRIM POS				ALL
	=B	D	W0112	0026	12		24-51-15	ALL
	=L	D	W0126	0109	22		27-28-13	ALL

HOOKUP LIST

D280N032

91-21-51

Section C01000

Page 2

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01035		P011-03/ /J015		CB-AILERON TRIM				ALL
	=B	D	W0112	ZZZA	02		24-54-11	ALL
	=B	D	W0112	ZZZB	02		24-54-11	ALL
	=L	D	W0126	0508	22		27-11-11	ALL
C01037		P011-01/ /G014		CB-FLAP/SLAT ELEC UNIT 1 SENSOR				ALL
	=B	D	W0110	0026	14		24-53-11	ALL
	=B	D	W0110	ZZHV	02		24-53-11	ALL
	=L	D	W0124	0047	24		27-51-41	001-099
	=L	D	W0124	0047	22		27-51-41	115-199
C01038		P011-02/ /G023		CB-FLAP/SLAT ELEC UNIT 3 CONT				ALL
	=B	D	W0114	0072	14		24-53-21	ALL
	=B	D	W0114	ZZAR	02		24-53-21	ALL
	=L	D	W0128	0029	24		27-81-11	001-099
	=L	D	W0128	0029	22		27-81-11	115-199
C01039		P011-01/ /C011		CB-STICK SHAKER L				ALL
	=B	D	W0110	ZZPH	00		24-54-73	001-099
	=B	D	W0110	ZZPK	00		24-54-73	001-099
	=B	D	W0110	ZZZN	02		24-54-73	001-099
	=B	D	W0118	ZZOJ	00		24-54-73	115-199
	=B	D	W0118	ZZON	00		24-54-73	115-199
	=B	D	W0118	ZZYC	02		24-54-73	115-199
	=L	D	W0124	0951	22		27-32-11	001-099
	=L	D	W0132	0351	22		27-32-11	115-199
C01040		P034-00/ /AA10		CB-FUEL QTY-FUEL				ALL
	=B	D	W1190	ZZAG	00		24-54-61	ALL
	=B	D	W1190	ZZAH	00		24-54-61	ALL
	=L	D	W1190	0402	16		28-21-11	ALL
C01041		P034-00/ /AA11		CB-FLNG CONT-FUEL				ALL
	=B	D	W1190	ZZAF	03		24-54-61	001-099
	=B	D	W1190	0018	14		24-54-61	ALL
	=B	D	W1190	ZZAG	00		24-54-61	ALL
	=B	D	W1190	ZZAF	09		24-54-61	115-199
	=L	D	W1190	0403	16		28-21-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section C01000

Page 3

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01043		P006-01/ /E005		CB-FUELING CONTROL				ALL
	=B	D	W0060	ZZHI	00		24-54-72	ALL
	=B	D	W0060	ZZHJ	00		24-54-72	ALL
	=L	D	W0060	0109	16		28-21-11	ALL
C01045		P006-01/ /E004		CB-FUELING QTY				ALL
	=B	D	W0060	ZZGJ	00		24-54-72	ALL
	=B	D	W0060	ZZHI	00		24-54-72	ALL
	=L	D	W0060	0025	18		28-21-11	001-099
	=L	D	W0060	0111	16		28-21-11	ALL
C01046		P006-01/ /E006		CB-FUELING VALVES				ALL
	=B	D	W0060	ZZHH	06		24-54-72	ALL
	=B	D	W0060	ZZHJ	00		24-54-72	ALL
	=L	D	W0060	0116	16		28-21-11	ALL
C01047		P034-00/ /AA09		CB-FLNG VALVE-FUEL				ALL
	=B	D	W1190	0027	14		24-54-61	001-099
	=B	D	W1190	ZZAF	03		24-54-61	001-099
	=B	D	W1190	ZZAH	00		24-54-61	ALL
	=B	D	W1190	ZZAI	00		24-54-61	115-199
	=L	D	W1190	0401	16		28-21-11	ALL
C01048		P011-02/ /C034		CB-FUEL QTY 1				001-099
C01048		P011-02/ /C034		CB-FUEL QTY L				115-199
	=B	D	W0114	ZZNF	00		24-54-71	001-099
	=B	D	W0114	ZZOV	00		24-54-71	001-099
	=B	D	W0120	ZZDA	00		24-54-71	115-199
	=B	D	W0120	ZZOJ	00		24-54-71	115-199
	=L	D	W0128	0723	22		28-21-11	001-099
	=L	D	W0134	0023	22		28-21-11	115-199
C01051		P011-02/ /D036		CB-FUEL CROSSFEED				001-008, 115-199
	=B	D	W0114	0701	08		24-54-71	001-008
	=B	D	W0114	ZZCB	06		24-54-71	001-008
	=B	D	W0114	ZZPS	00		24-54-71	001-008
	=B	D	W0120	0001	08		24-54-71	115-199
	=B	D	W0120	ZZAA	11		24-54-71	115-199
	=B	D	W0120	ZZOA	00		24-54-71	115-199
	=L	D	W0128	0805	20		28-22-31	001-008

HOOKUP LIST

D280N032

91-21-51

Section C01000

Page 4

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01051		P011-02/ /D036		CB-FUEL CROSSFEED (continued)				001-008, 115-199
	=L	D	W0134	0205	20		28-22-31	115-199
C01052		P011-02/ /D035		CB-FUEL DC PUMP CONT				ALL
	=B	D	W0114	ZZPS	00		24-54-71	001-099
	=B	D	W0114	ZZPT	00		24-54-71	001-099
	=B	D	W0120	ZZOA	00		24-54-71	115-199
	=B	D	W0120	ZZOB	00		24-54-71	115-199
	=L	D	W0128	0710	24		28-25-11	001-099
	=L	D	W0128	0714	24		28-25-11	001-099
	=L	D	W0134	0010	22		28-25-11	115-199
	=L	D	W0134	0014	22		28-25-11	115-199
C01053		P011-04/ /L019		CB-FUEL QTY 2				001-099
C01053		P011-04/ /L019		CB-FUEL QTY R				115-199
	=B	D	W0116	ZZZH	02		24-54-21	001-099
	=B	D	W0116	ZZXC	02		24-54-21	ALL
	=B	D	W0116	0019	12		24-54-21	115-199
	=L	D	W0130	0028	22		28-21-11	ALL
C01058		P011-02/ /C033		CB-FUEL DC PUMP APU				ALL
	=B	D	W0114	ZZOV	00		24-54-71	001-099
	=B	D	W0114	ZZPW	00		24-54-71	001-099
	=B	D	W0114	ZZXF	02		24-54-71	001-099
	=B	D	W0120	ZZOJ	00		24-54-71	115-199
	=B	D	W0120	ZZOK	00		24-54-71	115-199
	=L	D	W0128	0708	12		28-25-11	001-099
	=L	D	W0134	0008	12		28-25-11	115-199
C01061		P006-01/ /E001		CB-L SPAR FUEL VALVES				ALL
	=B	D	W0060	ZZXH	02		24-54-72	001-099
	=B	D	W0060	0013	10		24-54-72	ALL
	=B	D	W0060	ZZGH	00		24-54-72	ALL
	=B	D	W0060	ZZHH	06		24-54-72	ALL
	=B	D	W0060	0020	10		24-54-72	115-199
	=L	D	W0060	0207	20		28-22-21	ALL
C01062		P006-01/ /E002		CB-R SPAR FUEL VALVES				ALL
	=B	D	W0060	ZZGH	00		24-54-72	ALL
	=B	D	W0060	ZZGI	00		24-54-72	ALL
	=L	D	W0060	0120	20		28-22-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section C01000

Page 5

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01063		P006-01/ /E003		CB-APU FUEL VALVES				ALL
	=B	D	W0060	ZZGI	00		24-54-72	ALL
	=B	D	W0060	ZZGJ	00		24-54-72	ALL
	=L	D	W0060	0103	22		28-25-21	ALL
C01080		P011-03/ /K017		CB-HYDRAULICS SYSTEM PRESS L				ALL
	=B	D	W0112	0632	14		24-53-11	ALL
	=B	D	W0112	ZZCA	02		24-53-11	ALL
	=L	D	W0126	0024	22		29-31-11	ALL
C01081		P011-04/ /K026		CB-HYDRAULICS PRESSURE SYSTEM R				ALL
	=B	D	W0116	0104	14		24-53-21	ALL
	=B	D	W0116	0105	14		24-53-21	ALL
	=L	D	W0130	0044	22		29-31-11	ALL
C01082		P011-03/ /K018		CB-HYDRAULICS SYSTEM PRESS C				ALL
	=B	D	W0112	ZZCA	02		24-53-11	ALL
	=B	D	W0112	ZZXG	02		24-53-11	ALL
	=L	D	W0126	0023	22		29-31-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section C01000

Page 6 End

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01101		P011-04/ /K020		CB-HYDRAULICS QTY L				ALL
	=B	D	W0116	0305	12		24-51-52	ALL
	=L	D	W0130	0046	22		29-33-11	ALL
C01110		P006-03/ /L015		CB-CAPT MAIN PITOT HEAT				ALL
	=B	D	W0062	0386	12		24-51-15	ALL
	=B	D	W0062	0388	12		24-51-15	ALL
	=L	D	W0062	0105	24		30-31-11	001-099
	=L	D	W0062	0105	20		30-31-11	115-199
C01112		P006-03/ /L016		CB-L AUX PITOT HEAT				ALL
	=B	D	W0062	0029	12		24-51-13	ALL
	=L	D	W0062	0107	24		30-31-11	001-099
	=L	D	W0062	0107	20		30-31-11	115-199
C01114		P006-04/ /L021		CB-R AUX PITOT HEAT				ALL
	=B	D	W0064	0086	12		24-51-25	ALL
	=L	D	W0064	0111	24		30-31-12	ALL
C01116		P006-04/ /L022		CB-F/O MAIN PITOT HEAT				ALL
	=B	D	W0064	0027	12		24-51-23	ALL
	=L	D	W0064	0105	24		30-31-12	ALL
C01120		P011-01/ /D004		CB-PROBE HEAT IND PITOT L				ALL
	=B	D	W0110	ZZAR	03		24-54-73	001-099
	=B	D	W0110	ZZOG	00		24-54-73	001-099
	=B	D	W0118	ZZAG	03		24-54-73	115-199
	=B	D	W0118	ZZOG	00		24-54-73	115-199
	=L	D	W0124	0001	24		30-31-11	001-099
	=L	D	W0132	0048	22		30-31-11	115-199
C01121		P011-02/ /C021		CB-PROBE HEAT IND PITOT R				ALL
	=B	D	W0114	ZZNJ	00		24-54-71	001-099
	=B	D	W0114	ZZPD	00		24-54-71	001-099
	=B	D	W0120	ZZDJ	00		24-54-71	115-199
	=B	D	W0120	ZZDK	00		24-54-71	115-199
	=L	D	W0128	0072	24		30-31-12	001-099
	=L	D	W0128	0085	22		30-31-12	115-199

HOOKUP LIST

D280N032

91-21-51

Section C01100

Page 1

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01124		P037-00/ /E003		CB-WINDOW HTR 2L				ALL
	=B	D	W1272	0063	12		24-51-21	ALL
	=B	D	W1272	ZZYB	02		24-51-21	ALL
	=L	D	W1272	0213	20		30-41-12	001-099
	=L	D	W1272	0213	18		30-41-12	115-199
C01125		P070-00/ /A003		CB-WINDOW HTR 2R				ALL
	=B	D	W1252	0003	12		24-51-11	ALL
	=B	D	W1252	ZZBB	02		24-51-11	ALL
	=L	D	W1252	0108	20		30-41-11	ALL
C01126		P037-00/ /E004		CB-WINDOW HTR 3L				ALL
	=B	D	W1272	0078	12		24-51-21	ALL
	=B	D	W1272	ZZYB	02		24-51-21	ALL
	=L	D	W1272	0214	20		30-41-12	001-099
	=L	D	W1272	0214	18		30-41-12	115-199
C01127		P070-00/ /A004		CB-WINDOW HTR 3R				ALL
	=B	D	W1252	ZZBB	02		24-51-11	ALL
	=L	D	W1252	0107	20		30-41-11	ALL
C01128		P011-03/ /R015		CB-WINDOW HEAT TEST				ALL
	=B	D	W0112	ZZOS	02		24-54-11	001-099
	=B	KA	W0112	0019	08		24-54-11	ALL
	=B	KA	W0112	0020	08		24-54-11	ALL
	=B	D	W0112	ZZAT	02		24-54-11	115-199
	=L	D	W0126	0509	22		30-41-11	ALL
C01132		P011-02/ /C029		CB-WING ANTI-ICE				ALL
	=B	D	W0114	ZZCF	08		24-54-71	001-099
	=B	D	W0114	ZZNG	00		24-54-71	001-099
	=B	D	W0120	ZZOX	00		24-54-71	115-199
	=B	D	W0120	ZZOY	00		24-54-71	115-199
	=L	D	W0128	0224	22		30-11-11	ALL
C01134		P006-03/ /L017		CB-L AOA HEAT				ALL
	=B	D	W0062	0389	12		24-51-15	ALL
	=L	D	W0062	0121	22		30-32-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section C01100

Page 2

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01135		P006-04/ /L023		CB-R AOA HEAT				ALL
	=B	D	W0064	0025	12		24-51-23	ALL
	=B	D	W0064	ZZAA	02		24-51-23	ALL
	=L	D	W0064	0121	22		30-32-11	ALL
C01136		P011-03/ /R012		CB-RAIN REPEL R (INOP)				ALL
	=B	D	W0112	0002	08		24-54-11	ALL
	=B	D	W0112	ZZAS	02		24-54-11	ALL
	CAP	Y	W0126	0510	22		30-43-11	ALL
C01142		P037-00/ /F007		CB-AIR DRAIN MST HEATERS				ALL
	=B	D	W1272	0025	12		24-51-52	ALL
	=B	D	W1272	ZZXO	02		24-51-52	ALL
	=B	D	W1272	ZZXS	02		24-51-52	115-199
	=L	D	W1272	0219	20		30-71-11	ALL
C01143		P011-03/ /R013		CB-WSHLD WIPER L				ALL
	=B	D	W0112	0020	08		24-54-11	ALL
	=B	D	W0112	ZZAS	02		24-54-11	ALL
	=L	D	W0126	0020	16		30-42-11	ALL
	=L	D	W0126	0305	18		30-42-11	ALL
C01144		P011-04/ /R022		CB-WSHLD WIPER R				ALL
	=B	D	W0116	ZZOL	02		24-54-21	ALL
	=B	D	W0116	ZZZB	02		24-54-21	ALL
	=L	D	W0130	0227	18		30-42-11	ALL
	=L	D	W0130	0228	16		30-42-11	ALL
C01145		P011-04/ /R021		CB-RAIN REPEL L (INOP)				ALL
	=B	D	W0116	0030	08		24-54-21	ALL
	=B	D	W0116	ZZOL	02		24-54-21	ALL
	=B	D	W0116	ZZYQ	02		24-54-21	ALL
	CAP	Y	W0130	0214	22		30-43-11	ALL
C01147		P011-02/ /C027		CB-ENG ANTI-ICE L				ALL
	=B	D	W0114	ZZOL	00		24-54-71	001-099
	=B	D	W0114	ZZPY	00		24-54-71	001-099
	=B	D	W0114	ZZXH	02		24-54-71	001-099
	=B	D	W0120	ZZHA	00		24-54-71	115-199
	=B	D	W0120	ZZOI	00		24-54-71	115-199

HOOKUP LIST

D280N032

91-21-51

Section C01100

Page 3

Jan 21/2005

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01147		P011-02/ /C027		CB-ENG ANTI-ICE L (continued)				ALL
	=L	D	W0128	0400	22		30-21-11	001-099
	=L	D	W0128	0405	22		30-21-11	001-099
	=L	D	W0134	0400	22		30-21-11	115-199
	=L	D	W0134	0405	22		30-21-11	115-199
C01148		P011-02/ /C028		CB-ENG ANTI-ICE R				ALL
	=B	D	W0114	ZZCE	04		24-54-71	001-099
	=B	D	W0114	ZZPY	00		24-54-71	001-099
	=B	D	W0120	ZZHA	00		24-54-71	115-199
	=B	D	W0120	ZZOY	00		24-54-71	115-199
	=L	D	W0128	0406	22		30-21-11	001-099
	=L	D	W0128	0407	22		30-21-11	001-099
	=L	D	W0134	0406	22		30-21-11	115-199
	=L	D	W0134	0407	22		30-21-11	115-199
C01149		P037-00/ /F005		CB-FWD WATERLINE HEATERS				ALL
	=B	D	W1272	ZZXO	02		24-51-52	ALL
	=B	D	W1272	ZZXP	02		24-51-52	ALL
	=L	D	W1272	0220	20		30-71-21	001-099
	=L	D	W1272	0220	24		30-71-21	115-199
C01150		P037-00/ /F006		CB-MID WATERLINE HEATERS				ALL
	=B	D	W1272	0026	12		24-51-52	ALL
	=B	D	W1272	0045	12		24-51-52	ALL
	=B	D	W1272	ZZXL	02		24-51-52	ALL
	=L	D	W1272	0221	20		30-71-21	001-099
	=L	D	W1272	0221	24		30-71-21	115-199
C01170		P011-04/ /S019		CB-LANDING GEAR AIR/GND SYS 2				ALL
	=B	D	W0116	ZZOE	00		24-54-21	001-099
	=B	D	W0116	ZZAA	05		24-54-21	ALL
	=B	D	W0116	ZZOF	00		24-54-21	115-199
	=L	D	W0130	0011	22		32-09-12	ALL
C01171		P011-03/ /S018		CB-LANDING GEAR ANTISKID 1-5				ALL
	=B	D	W0112	ZZAA	02		24-54-11	001-099
	=B	D	W0112	0001	08		24-54-11	ALL
	=B	D	W0112	ZZAA	05		24-54-11	115-199
	=B	D	W0112	ZZOA	00		24-54-11	115-199
	=L	D	W0126	0015	22		32-42-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section C01100

Page 4

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01172		P011-04/ /S022		CB-LANDING GEAR ANTISKID 4-8				ALL
	=B	D	W0116	ZZOS	00		24-54-21	001-099
	=B	D	W0116	ZZOC	00		24-54-21	ALL
	=B	D	W0116	ZZOD	00		24-54-21	115-199
	=L	D	W0130	0034	22		32-42-11	ALL
C01173		P011-04/ /S021		CB-LDG GEAR AUTOBK ANTISKID TEST IND 2				ALL
	=B	D	W0116	ZZOC	00		24-54-21	001-099
	=B	D	W0116	0001	08		24-54-21	ALL
	=B	D	W0116	ZZOD	00		24-54-21	ALL
	=B	D	W0116	ZZOE	00		24-54-21	115-199
	=L	D	W0130	0107	22		32-42-12	001-099
	=L	D	W0130	0107	20		32-42-12	115-199
C01174		P011-04/ /S020		CB-LANDING GEAR LEVER LOCK				ALL
	=B	D	W0116	ZZOD	00		24-54-21	001-099
	=B	D	W0116	0030	08		24-54-21	ALL
	=B	D	W0116	ZZOE	00		24-54-21	ALL
	=B	D	W0116	ZZOF	00		24-54-21	115-199
	=L	D	W0130	0113	22		32-31-11	ALL
C01175		P011-02/ /C020		CB-LANDING GEAR POS SYS 1				001-099
C01175		P011-02/ /C030		CB-LANDING GEAR POS SYS 1				115-199
	=B	D	W0114	ZZNG	00		24-54-71	001-099
	=B	D	W0114	ZZOW	00		24-54-71	001-099
	=B	D	W0120	ZZOM	00		24-54-71	115-199
	=B	D	W0120	ZZOX	00		24-54-71	115-199
	=L	D	W0128	0726	22		32-61-11	001-099
	=L	D	W0134	0026	22		32-61-11	115-199
C01176		P011-03/ /S014		CB-LDG GEAR AUTOBK ANTISKID TEST IND 1				ALL
	=B	D	W0112	ZZOD	02		24-54-11	001-099
	=B	D	W0112	ZZAA	05		24-54-11	115-199
	=B	D	W0112	ZZAD	00		24-54-11	115-199
	=L	D	W0126	0539	22		32-42-11	ALL
C01179		P006-01/ /F004		CB-LANDING GEAR PARKING BRAKE VLV				ALL
	=B	D	W0060	ZZXK	02		24-54-72	001-099
	=B	D	W0060	ZZGG	02		24-54-72	ALL
	=B	D	W0060	0019	12		24-54-72	115-199
	=B	D	W0060	0020	10		24-54-72	115-199

HOOKUP LIST

D280N032

91-21-51

Section C01100

Page 5

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01179		P006-01/ /F004		CB-LANDING GEAR PARKING BRAKE VLV (continued)				ALL
	=L	D	W0060	0302	22		32-44-11	ALL
C01180		P011-03/ /S013		CB-LANDING GEAR BRAKE PRESS IND				ALL
	=B	D	W0112	0632	14		24-53-11	ALL
	=L	D	W0126	0033	24		32-41-11	ALL
C01181		P011-03/ /S016		CB-LANDING GEAR BRAKE TEMP				115-199
	=B	D	W0112	0019	08		24-54-11	115-199
	=B	D	W0112	ZZOB	00		24-54-11	115-199
	=B	D	W0112	ZZOC	00		24-54-11	115-199
	=L	D	W0126	0046	22		32-46-11	115-199
C01182		P011-03/ /S015		CB-LANDING GEAR AIR/GND SYS 1				ALL
	=B	D	W0112	0019	08		24-54-11	001-099
	=B	D	W0112	ZZOD	02		24-54-11	001-099
	=B	D	W0112	ZZXD	02		24-54-11	001-099
	=B	D	W0112	ZZAD	00		24-54-11	115-199
	=B	D	W0112	ZZOC	00		24-54-11	115-199
	=L	D	W0126	0006	22		32-09-11	ALL
	=L	D	W0126	0039	22		32-09-11	115-199
C01183		P011-02/ /C031		CB-LANDING GEAR ANTI-SKID 2-6				001-099
C01183		P011-02/ /C031		CB-LDG GEAR ANTI-SKID 2-6				115-199
	=B	D	W0114	ZZOW	00		24-54-71	001-099
	=B	D	W0114	ZZPX	00		24-54-71	001-099
	=B	D	W0120	ZZOL	00		24-54-71	115-199
	=B	D	W0120	ZZOM	00		24-54-71	115-199
	=L	D	W0128	0721	22		32-42-11	001-099
	=L	D	W0134	0021	22		32-42-11	115-199
C01184		P011-02/ /C032		CB-LANDING GEAR ANTI-SKID 3-7				ALL
	=B	D	W0114	ZZPW	00		24-54-71	001-099
	=B	D	W0114	ZZPX	00		24-54-71	001-099
	=B	D	W0114	ZZXG	02		24-54-71	001-099
	=B	D	W0120	ZZOK	00		24-54-71	115-199
	=B	D	W0120	ZZOL	00		24-54-71	115-199
	=B	D	W0120	ZZXG	02		24-54-71	115-199
	=L	D	W0128	0722	22		32-42-11	001-099
	=L	D	W0134	0022	22		32-42-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section C01100

Page 6 End

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01200		P011-02/ /A032		CB-IND LIGHTS 1				ALL
	=B	D	W0114	ZZPQ	00		24-54-71	001-099
	=B	D	W0114	ZZPR	00		24-54-71	001-099
	=B	D	W0120	ZZEB	00		24-54-71	115-199
	=B	D	W0120	ZZEC	00		24-54-71	115-199
	=L	D	W0128	0863	22		33-16-51	001-099
	=L	D	W0134	0313	22		33-16-51	115-199
C01201		P011-02/ /A033		CB-IND LIGHTS 2				ALL
	=B	D	W0114	ZZPP	00		24-54-71	001-099
	=B	D	W0114	ZZPQ	00		24-54-71	001-099
	=B	D	W0120	ZZEA	00		24-54-71	115-199
	=B	D	W0120	ZZEB	00		24-54-71	115-199
	=L	D	W0128	0807	22		33-16-61	001-099
	=L	D	W0134	0207	22		33-16-61	115-199
C01202		P011-04/ /M031		CB-LDG & TAXI CONT				ALL
	=B	D	W0116	0016	12		24-54-21	001-099
	=B	D	W0116	ZZYD	02		24-54-21	001-099
	=B	D	W0116	ZZYI	02		24-54-21	001-099
	=B	D	W0116	0036	08		24-54-21	115-199
	=L	D	W0130	0002	24		33-42-12	001-099
	=L	D	W0130	0002	20		33-42-12	115-199
C01203		P034-00/ /BH01		CB-NIGHT LIGHTS				ALL
	=B	D	W1196	0001	10		24-53-51	ALL
	=B	D	W1196	0022	10		24-53-51	ALL
	=L	D	W1196	0201	20		33-21-51	001-099
	=L	D	W1196	0201	22		33-21-11	115-199
C01205		P034-00/ /BG01		CB-NOSE WHEELWELL LIGHTS				ALL
	=B	D	W1196	0015	12		24-54-61	ALL
	=L	D	W1196	0303	22		33-31-11	ALL
C01206		P034-00/ /AB05		CB-MN GEAR WHEELWELL SERVICE LIGHTS				ALL
	=B	D	W1190	0017	14		24-51-61	ALL
	=B	D	W1190	ZZXB	02		24-51-61	ALL
	=L	D	W1190	0301	22		33-31-11	001-099
	=L	D	W1190	0301	20		33-31-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section C01200

Page 1

Jan 21/2005

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01210		P034-00/ /AB09		CB-AFT CARGO COMPARTMENT LIGHTS				ALL
	=B	D	W1190	0020	14		24-51-61	ALL
	=B	D	W1190	ZZAB	02		24-51-61	ALL
	=L	D	W1190	0204	20		33-37-21	ALL
C01211		P034-00/ /AB08		CB-FWD CARGO COMPARTMENT LIGHTS				ALL
	=B	D	W1190	ZZAB	02		24-51-61	ALL
	=L	D	W1190	0104	22		33-37-11	001-099
	=L	D	W1190	0104	20		33-37-11	115-199
C01213		P034-00/ /BG02		CB-FLT DECK DOME AC LIGHTS				ALL
	=B	D	W1196	0001	10		24-53-51	ALL
	=B	D	W1196	ZZAB	02		24-53-51	ALL
	=L	D	W1196	0402	22		33-11-31	ALL
C01214		P011-02/ /A030		CB-F/D DOME LTS DC				ALL
	=B	D	W0114	ZZOC	00		24-54-71	001-099
	=B	D	W0114	ZZOS	00		24-54-71	001-099
	=B	D	W0120	ZZBG	00		24-54-71	115-199
	=B	D	W0120	ZZOV	00		24-54-71	115-199
	=L	D	W0128	0811	22		33-11-31	001-099
	=L	D	W0134	0211	22		33-11-31	115-199
C01215		P034-00/ /AB06		CB-LAV SERVICE LIGHTS				ALL
	=B	D	W1190	0021	14		24-51-61	ALL
	=L	D	W1190	0304	22		33-26-11	ALL
C01217		P037-00/ /G008		CB-CEILING LIGHTS CONT				ALL
	=B	D	W1272	0045	12		24-51-52	ALL
	=L	D	W1272	0222	24		33-21-11	ALL
C01218		P037-00/ /G006		CB-CEILING LIGHTS L				ALL
	=B	D	W1272	0001	08		24-51-52	ALL
	=B	D	W1272	ZZAX	02		24-51-52	ALL
	=L	D	W1272	0223	16		33-21-11	ALL
C01219		P037-00/ /G007		CB-CEILING LIGHTS R				ALL
	=B	D	W1272	0020	08		24-51-52	ALL
	=B	D	W1272	ZZAX	02		24-51-52	ALL
	=L	D	W1272	0224	16		33-21-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section C01200

Page 2

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01224		P037-00/ /H007		CB-SIDEWALL LIGHTS CONT				ALL
	=B	D	W1272	0024	12		24-51-52	ALL
	=L	D	W1272	0225	24		33-21-31	ALL
C01225		P011-04/ /M034		CB-ANTI-COLL RED				ALL
	=B	D	W0116	0302	12		24-51-52	ALL
	=B	D	W0116	ZZEE	02		24-51-52	ALL
	=L	D	W0130	0245	20		33-44-11	ALL
C01226		P011-03/ /M007		CB-ANTI-COLL WHITE				ALL
	=B	D	W0112	0304	16		24-51-11	ALL
	=B	D	W0112	ZZZN	02		24-51-11	ALL
	=L	D	W0126	0306	20		33-44-21	ALL
C01227		P011-04/ /M035		CB-WING ILLUM				ALL
	=B	D	W0116	ZZEE	02		24-51-52	ALL
	=L	D	W0130	0250	20		33-41-11	ALL
C01232		P037-00/ /G003		CB-LAV LIGHTS				ALL
	=B	D	W1272	0021	12		24-51-52	ALL
	=B	D	W1272	ZZYD	02		24-51-52	ALL
	=L	D	W1272	0228	22		33-26-11	001-099
	=L	D	W1272	0229	22		33-26-11	001-099
	=L	D	W1272	0228	20		33-26-11	115-199
	=L	D	W1272	0229	20		33-26-11	115-199
C01237		P011-03/ /N002		CB-INSTRUMENT & PANEL CAPT				ALL
	=B	D	W0112	0108	16		24-51-72	ALL
	=L	D	W0126	0210	22		33-13-11	ALL
C01239		P011-04/ /N028		CB-INST & PANEL F/O				ALL
	=B	D	W0116	0200	22		24-51-72	ALL
	=L	D	W0130	0111	22		33-13-21	ALL
C01240		P011-04/ /N030		CB-INST & PANEL GLARESHIELD				ALL
	=B	D	W0116	0213	16		24-51-21	ALL
	=B	D	W0116	0214	16		24-51-21	ALL
	=L	D	W0130	0101	22		33-13-41	ALL

HOOKUP LIST

D280N032

91-21-51

Section C01200

Page 3

Jan 21/2005

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01241		P011-03/ /N004		CB-INSTRUMENT & PANEL OVHD				ALL
	=B	D	W0112	0022	12		24-51-15	ALL
	=B	D	W0112	ZZYJ	02		24-51-15	ALL
	=L	D	W0126	0058	22		33-13-31	ALL
C01242		P011-03/ /N001		CB-INSTRUMENT & PANEL AISLE STAND				ALL
	=B	D	W0112	ZZYJ	02		24-51-15	ALL
	=L	D	W0126	0312	22		33-13-51	ALL
C01244		P011-03/ /N005		CB-OVHD C/B PNL				ALL
	=B	D	W0112	ZZXH	02		24-51-11	ALL
	=B	D	W0112	ZZZN	02		24-51-11	ALL
	=L	D	W0126	0313	24		33-13-61	ALL
C01246		P011-01/ /B007		CB-STBY INSTR LIGHTS				ALL
	=B	D	W0110	ZZKC	02		24-54-73	001-099
	=B	D	W0110	ZZZC	02		24-54-73	001-099
	=B	D	W0118	ZZBC	02		24-54-73	115-199
	=B	D	W0118	ZZZC	02		24-54-73	115-199
	=L	D	W0124	0750	24		33-13-31	001-099
	=L	D	W0124	0753	24		33-13-12	001-099
	=L	D	W0132	0100	24		33-13-31	115-199
	=L	D	W0132	0103	24		33-13-12	115-199
C01247		P011-03/ /M003		CB-NOSE GEAR LANDING L				ALL
	=B	D	W0112	ZZYF	02		24-51-11	001-099
	=B	D	W0112	ZZYA	02		24-51-11	ALL
	=B	D	W0112	0661	16		24-51-11	115-199
	=L	D	W0126	0511	20		33-42-11	ALL
C01248		P011-03/ /M004		CB-NOSE GEAR LANDING R				001-099
C01248		P011-04/ /M030		CB-NOSE GEAR LANDING R				115-199
	=B	D	W0112	0102	16		24-51-11	001-099
	=B	D	W0112	0111	16		24-51-11	001-099
	=B	D	W0116	0214	16		24-51-21	115-199
	=B	D	W0116	0215	16		24-51-21	115-199
	=L	D	W0126	0308	20		33-42-12	001-099
	=L	D	W0130	0210	20		33-42-12	115-199

HOOKUP LIST

D280N032

91-21-51

Section C01200

Page 4

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01249		P011-03/ /M005		CB-WING LANDING L				ALL
	=B	D	W0112	0650	16		24-51-11	ALL
	=B	D	W0112	ZZXH	02		24-51-11	ALL
	=L	D	W0126	0512	20		33-42-11	ALL
C01250		P011-04/ /M032		CB-WING LANDING R				ALL
	=B	D	W0116	0209	16		24-51-21	ALL
	=B	D	W0116	0210	16		24-51-21	ALL
	=L	D	W0130	0211	20		33-42-12	ALL
C01251		P011-04/ /N031		CB-MAP				ALL
	=B	D	W0116	0103	14		24-53-21	ALL
	=B	D	W0116	ZZBA	02		24-53-21	ALL
	=L	D	W0130	0114	24		33-14-11	ALL
	=L	D	W0130	0213	24		33-11-61	ALL
C01252		P011-03/ /N007		CB-CHART TABLE				ALL
	=B	D	W0112	0201	14		24-53-11	ALL
	=B	D	W0112	0202	14		24-53-11	ALL
	=B	D	W0112	0204	14		24-53-11	ALL
	=L	D	W0126	0202	22		33-14-21	ALL
C01253		P034-00/ /BF02		CB-NO SMOKING SIGNS R				ALL
	=B	D	W1196	0003	10		24-53-51	ALL
	=B	D	W1196	ZZAC	02		24-53-51	ALL
	=L	D	W1196	0009	22		33-24-11	ALL
C01254		P011-03/ /P009		CB-PASS SIGN CONT				ALL
	=B	D	W0112	ZZXR	02		24-54-11	001-099
	=B	D	W0112	ZZZC	02		24-54-11	115-199
	=L	D	W0126	0068	22		33-24-11	ALL
C01255		P037-00/ /G004		CB-ENTRY & GALLEY LIGHTS				ALL
	=B	D	W1272	0022	12		24-51-52	ALL
	=B	D	W1272	ZZYD	02		24-51-52	ALL
	=L	D	W1272	0230	22		33-22-11	ALL
C01256		P034-00/ /AB07		CB-APU & TAIL CONE COMPARTMENT LIGHTS				ALL
	=B	D	W1190	0025	14		24-51-61	ALL
	=B	D	W1190	ZZXB	02		24-51-61	ALL

HOOKUP LIST

D280N032

91-21-51

Section C01200

Page 5

Jan 21/2005

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01256		P034-00/ /AB07		CB-APU & TAIL CONE COMPARTMENT LIGHTS (continued)				ALL
	=L	D	W1190	0302	22		33-31-31	ALL
C01257		P034-00/ /BC01		CB-FWD ELEC EQUIP CTR LIGHTS				ALL
	=B	D	W1196	ZZAF	02		24-53-51	ALL
	=L	D	W1196	0305	22		33-31-41	ALL
C01259		P070-00/ /B018		CB-PASS READING LTS LEFT FWD				ALL
	=B	D	W1252	0010	12		24-51-14	ALL
	=L	D	W1252	0101	20		33-23-11	ALL
C01260		P070-00/ /B020		CB-MID FWD LEFT PASS READING LTS				ALL
	=B	D	W1252	0001	12		24-51-14	ALL
	=B	D	W1252	ZZAA	02		24-51-14	ALL
	=L	D	W1252	0102	20		33-23-12	ALL
C01261		P070-00/ /B021		CB-PASS READING LTS MID AFT LEFT				ALL
	=B	D	W1252	0006	12		24-51-14	ALL
	=B	D	W1252	ZZAA	02		24-51-14	ALL
	=L	D	W1252	0103	20		33-23-13	ALL
C01264		P037-00/ /H005		CB-SIDEWALL LIGHTS L				ALL
	=B	D	W1272	0042	14		24-51-24	ALL
	=B	D	W1272	0051	14		24-51-24	ALL
	=B	D	W1272	0050	10		24-51-24	115-199
	=L	D	W1272	0226	16		33-21-31	ALL
C01265		P037-00/ /H006		CB-SIDEWALL LIGHTS R				ALL
	=B	D	W1272	0042	14		24-51-24	ALL
	=B	D	W1272	0077	14		24-51-24	ALL
	=L	D	W1272	0227	16		33-21-31	ALL
C01266		P034-00/ /AB11		CB-LEFT SIDEWALL LIGHTS				ALL
	=B	D	W1190	0025	14		24-51-61	ALL
	=B	D	W1190	0026	14		24-51-61	ALL
	=L	D	W1190	0023	16		33-21-31	ALL
C01269		P034-00/ /BG03		CB-FWD ENTRY ATTND LIGHTS				ALL
	=B	D	W1196	0002	10		24-53-51	ALL
	=B	D	W1196	ZZAB	02		24-53-51	ALL

HOOKUP LIST

D280N032

91-21-51

Section C01200

Page 6

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01269		P034-00/ /BG03		CB-FWD ENTRY ATTND LIGHTS (continued)				ALL
	=L	D	W1196	0007	20		33-22-11	ALL
C01270		P034-00/ /BD01		CB-OCCUPY & DOME LAV LIGHTS				ALL
	=B	D	W1196	0004	10		24-53-51	ALL
	=B	D	W1196	ZZAE	02		24-53-51	ALL
	=L	D	W1196	0300	16		33-26-11	001-099
	=L	D	W1196	0300	22		33-26-11	115-199
C01271		P011-03/ /M008		CB-TAXI LT				001-099
	=B	D	W0112	0415	16		24-51-11	001-099
	=L	D	W0126	0411	20		33-42-31	001-099
C01273		P011-04/ /P028		CB-R IND LTS 1				ALL
	=B	D	W0116	ZZOT	00		24-54-21	001-099
	=B	D	W0116	ZZAG	04		24-54-21	ALL
	=B	D	W0116	0036	08		24-54-21	115-199
	=B	D	W0116	ZZOM	00		24-54-21	115-199
	=L	D	W0130	0203	22		33-16-31	ALL
C01276		P011-03/ /M006		CB-RUNWAY TURNOFF L				ALL
	=B	D	W0112	0414	16		24-51-11	001-099
	=B	D	W0112	ZZYA	02		24-51-11	ALL
	=B	D	W0112	0404	16		24-51-11	115-199
	=L	D	W0126	0307	20		33-42-21	ALL
C01277		P011-04/ /M033		CB-RUNWAY TURNOFF R				ALL
	=B	D	W0116	0683	16		24-51-21	001-099
	=B	D	W0116	0204	16		24-51-21	ALL
	=B	D	W0116	0203	16		24-51-21	115-199
	=L	D	W0130	0229	20		33-42-21	ALL
C01280		P011-04/ /N036		CB-EMERGENCY CHARGER R				ALL
	=B	D	W0116	ZZAJ	02		24-54-21	ALL
	=B	D	W0116	0013	12		24-54-21	115-199
	=L	D	W0130	0009	22		33-51-11	ALL
C01281		P011-04/ /N032		CB-UTILITY				ALL
	=B	D	W0116	ZZYX	02		24-53-21	001-099
	=B	D	W0116	ZZBA	02		24-53-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section C01200

Page 7

Jan 21/2005

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01281		P011-04/ /N032		CB-UTILITY (continued)				ALL
	=B	D	W0116	0102	14		24-53-21	115-199
	=L	D	W0130	0115	22		33-14-31	ALL
	=L	D	W0130	0255	22		33-14-31	ALL
C01283		P011-01/ /B006		CB-FLOOD MAIN PANEL LIGHTS				ALL
	=B	D	W0110	ZZKC	02		24-54-73	001-099
	=B	D	W0110	ZZZF	02		24-54-73	001-099
	=B	D	W0118	ZZBC	02		24-54-73	115-199
	=B	D	W0118	ZZZE	02		24-54-73	115-199
	=L	D	W0124	0812	22		33-11-11	ALL
C01284		P011-04/ /P029		CB-R IND LTS 2				ALL
	=B	D	W0116	0501	10		24-54-21	001-099
	=B	D	W0116	0502	12		24-54-21	ALL
	=B	D	W0116	0504	12		24-54-21	ALL
	=B	D	W0116	0404	08		24-54-21	115-199
	=B	D	W0116	0501	12		24-54-21	115-199
	=L	D	W0130	0219	22		33-16-41	ALL
C01287		P011-04/ /N034		CB-FLOOD AISLE STAND				001-099
C01287		P011-04/ /Q032		CB-FLOOD AISLE STAND				115-199
	=B	D	W0116	ZZYX	02		24-53-21	001-099
	=B	D	W0116	0102	14		24-53-21	ALL
	=B	D	W0116	0633	14		24-53-21	115-199
	=L	D	W0130	0251	22		33-11-21	ALL
C01288		P011-04/ /N033		CB-CAPT PNL FLOOD				ALL
	=B	D	W0116	0043	12		24-51-25	ALL
	=L	D	W0130	0216	22		33-11-11	ALL
C01289		P011-03/ /N006		CB-F/O PNL FLOOD				ALL
	=B	D	W0112	0025	12		24-51-15	ALL
	=B	D	W0112	0027	12		24-51-15	ALL
	=L	D	W0126	0426	22		33-11-11	ALL
C01290		P011-03/ /P005		CB-IND LTS DIM CONT				ALL
	=B	D	W0112	0207	08		24-54-11	ALL
	=B	D	W0112	ZZZV	02		24-54-11	ALL
	=L	D	W0126	0256	22		33-16-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section C01200

Page 8

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01292		P070-00/ /B019		CB-PASS READING LTS LEFT AFT				ALL
	=B	D	W1252	0046	12		24-51-14	001-099
	=B	D	W1252	0011	12		24-51-14	ALL
	=L	D	W1252	0104	20		33-23-14	ALL
C01294		P011-04/ /Q028		CB-POSITION LT LEFT				ALL
	=B	D	W0116	0303	12		24-51-52	ALL
	=B	D	W0116	ZZYT	02		24-51-52	ALL
	=L	D	W0130	0260	20		33-43-11	ALL
C01296		P034-00/ /BE01		CB-SEAT BELT SIGNS L				ALL
	=B	D	W1196	0004	10		24-53-51	ALL
	=B	D	W1196	ZZAD	02		24-53-51	ALL
	=L	D	W1196	0010	18		33-24-11	001-099
	=L	D	W1196	0010	20		33-24-11	115-199
C01297		P011-03/ /P001		CB-L IND LTS 1				ALL
	=B	D	W0112	0011	12		24-54-11	001-099
	=B	D	W0112	0011	08		24-54-11	115-199
	=L	D	W0126	0255	22		33-16-11	ALL
C01298		P011-03/ /P002		CB-L IND LTS 2				ALL
	=B	D	W0112	0208	12		24-54-11	ALL
	=B	D	W0112	ZZZV	02		24-54-11	ALL
	=L	D	W0126	0317	22		33-16-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section C01200

Page 9 End

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01300		P034-00/ /AB10		CB-AIR COND COMPT HYD SVCE LIGHTS				ALL
	=B	D	W1190	0018	14		24-54-61	ALL
	=B	D	W1190	0028	14		24-54-61	ALL
	=L	D	W1190	0303	18		33-31-21	ALL
C01302		P011-04/ /N035		CB-EMERGENCY CHARGER L				ALL
	=B	D	W0116	0016	12		24-54-21	001-099
	=B	D	W0116	ZZAJ	02		24-54-21	ALL
	=B	D	W0116	0643	16		24-54-21	115-199
	=L	D	W0130	0008	22		33-51-11	ALL
C01303		P011-02/ /C035		CB-EMERGENCY CHARGER ALT L				ALL
	=B	D	W0114	ZZNB	00		24-54-71	001-099
	=B	D	W0114	ZZNF	00		24-54-71	001-099
	=B	D	W0120	ZZDA	00		24-54-71	115-199
	=B	D	W0120	ZZDB	00		24-54-71	115-199
	=L	D	W0128	0012	22		33-51-11	001-099
	CAP	Y	W0134	0054	22		33-51-11	115-199
C01306		P011-02/ /A035		CB-IND LIGHTS 4				ALL
	=B	D	W0114	ZZCK	08		24-54-71	001-099
	=B	D	W0114	ZZON	00		24-54-71	001-099
	=B	D	W0120	ZZAK	08		24-54-71	115-199
	=B	D	W0120	ZZOU	00		24-54-71	115-199
	=L	D	W0128	0727	22		33-16-61	001-099
	=L	D	W0134	0027	22		33-16-61	115-199
C01307		P011-02/ /A031		CB-IND LIGHTS TEST				ALL
	=B	D	W0114	ZZOS	00		24-54-71	001-099
	=B	D	W0114	ZZPR	00		24-54-71	001-099
	=B	D	W0120	0101	16		24-54-71	115-199
	=B	D	W0120	ZZEC	00		24-54-71	115-199
	=B	D	W0120	ZZOV	00		24-54-71	115-199
	=L	D	W0128	0862	22		33-16-51	001-099
	=L	D	W0134	0312	22		33-16-51	115-199
C01308		P011-02/ /A034		CB-IND LIGHTS 3				ALL
	=B	D	W0114	ZZON	00		24-54-71	001-099
	=B	D	W0114	ZZPP	00		24-54-71	001-099
	=B	D	W0114	ZZXD	02		24-54-71	001-099
	=B	D	W0120	ZZEA	00		24-54-71	115-199

HOOKUP LIST

D280N032

91-21-51

Section C01300

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01308		P011-02/ /A034		CB-IND LIGHTS 3 (continued)				ALL
	=B	D	W0120	ZZOU	00		24-54-71	115-199
	=B	D	W0120	ZZXD	02		24-54-71	115-199
	=L	D	W0128	0806	22		33-16-61	001-099
	=L	D	W0134	0206	22		33-16-61	115-199
C01310		P011-02/ /C036		CB-EMERGENCY CHARGER ALT R				ALL
	=B	D	W0114	ZZCF	08		24-54-71	001-099
	=B	D	W0114	ZZNB	00		24-54-71	001-099
	=B	D	W0120	ZZAD	12		24-54-71	115-199
	=B	D	W0120	ZZDB	00		24-54-71	115-199
	=L	D	W0128	0011	22		33-51-11	001-099
	CAP	Y	W0134	0053	22		33-51-11	115-199
C01314		P011-04/ /Q030		CB-POSITION LT RIGHT				ALL
	=B	D	W0116	0305	12		24-51-52	ALL
	=B	D	W0116	0315	12		24-51-52	ALL
	=B	D	W0116	ZZYT	02		24-51-52	ALL
	=L	D	W0130	0207	20		33-43-12	ALL
C01320		P011-04/ /S033		CB-OXYGEN PRESS				001-099
C01320		P011-04/ /S031		CB-OXYGEN PRESS				115-199
	=B	D	W0116	ZZAB	02		24-54-21	ALL
	=B	D	W0116	ZZYZ	02		24-54-21	ALL
	=L	D	W0130	0324	22		35-11-13	ALL
C01321		P011-02/ /A021		CB-PASSENGER OXYGEN L				ALL
	=B	D	W0114	ZZAK	02		24-54-71	001-099
	=B	D	W0114	ZZXC	02		24-54-71	001-099
	=B	D	W0120	ZZXC	02		24-54-71	115-199
	=L	D	W0128	0707	16		35-21-11	001-099
	=L	D	W0134	0007	16		35-21-11	115-199
C01322		P011-02/ /A023		CB-PASSENGER OXYGEN R				ALL
	=B	D	W0114	ZZCJ	04		24-54-71	001-099
	=B	D	W0114	ZZOU	00		24-54-71	001-099
	=B	D	W0120	ZZAJ	04		24-54-71	115-199
	=B	D	W0120	ZZOW	00		24-54-71	115-199
	=L	D	W0128	0702	16		35-21-11	001-099
	=L	D	W0134	0002	16		35-21-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section C01300

Page 2

Oct 09/2008

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01323		P011-02/ /A024		CB-PASSENGER OXYGEN CONT				ALL
	=B	D	W0114	ZZOT	00		24-54-71	001-099
	=B	D	W0114	ZZOU	00		24-54-71	001-099
	=B	D	W0114	ZZXJ	02		24-54-71	001-099
	=B	D	W0120	ZZOT	00		24-54-71	115-199
	=B	D	W0120	ZZOW	00		24-54-71	115-199
	=B	D	W0120	ZZYB	02		24-54-71	115-199
	=L	D	W0128	0703	24		35-21-11	001-099
	=L	D	W0134	0003	22		35-21-11	115-199
C01325		P011-02/ /A025		CB-PASSENGER OXYGEN MANUAL DEPLOY				ALL
	=B	D	W0114	ZZNH	00		24-54-71	001-099
	=B	D	W0114	ZZOT	00		24-54-71	001-099
	=B	D	W0120	ZZCD	00		24-54-71	115-199
	=B	D	W0120	ZZOT	00		24-54-71	115-199
	=L	D	W0128	0704	24		35-21-11	001-099
	=L	D	W0134	0004	22		35-21-11	115-199
C01332		P011-03/ /Q016		CB-DUCT PRESS IND L				001-099
C01332		P011-03/ /Q016		CB-DUCT PRESS XMTR L				115-199
	=B	D	W0112	ZZZW	02		24-54-11	001-099
	=B	D	W0112	ZZZT	02		24-54-11	ALL
	=B	D	W0112	ZZZU	02		24-54-11	115-199
	=L	D	W0126	0012	22		36-21-11	ALL
C01333		P011-04/ /Q023		CB-APU BLEED CONT				ALL
	=B	D	W0116	ZZAL	02		24-54-21	001-099
	=B	D	W0116	ZZYP	02		24-54-21	ALL
	=B	D	W0116	ZZYR	02		24-54-21	115-199
	=L	D	W0130	0010	24		36-11-41	ALL
C01336		P011-04/ /Q022		CB-APU BLEED PWR				ALL
	=B	D	W0116	0212	16		24-51-21	ALL
	=B	D	W0116	0213	16		24-51-21	ALL
	=L	D	W0130	0038	20		36-11-41	ALL
C01337		P011-01/ /B003		CB-ISOL VALVE PWR				ALL
	=B	D	W0110	ZZZR	02		24-54-73	001-099
	=B	D	W0118	ZZXC	02		24-54-73	115-199
	=L	D	W0124	0727	24		36-11-31	001-099

HOOKUP LIST

D280N032

91-21-51

Section C01300

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01337		P011-01/ /B003		CB-ISOL VALVE PWR (continued)				ALL
	=L	D	W0132	0027	24		36-11-31	115-199
C01338		P011-01/ /B002		CB-ISOL VALVE CONT				ALL
	=B	D	W0110	ZZZD	02		24-54-73	001-099
	=B	D	W0110	ZZZM	02		24-54-73	001-099
	=B	D	W0118	ZZXD	02		24-54-73	115-199
	=L	D	W0124	0746	24		36-11-31	001-099
	=L	D	W0132	0046	24		36-11-31	115-199
C01339		P011-03/ /Q010		CB-ENG BLEED CONT L				ALL
	=B	KA	W0112	0008	08		24-54-11	ALL
	=B	KA	W0112	0009	08		24-54-11	ALL
	=L	D	W0126	0028	20		36-11-11	ALL
C01340		P011-04/ /Q019		CB-R ENG BLEED CONT				ALL
	=B	D	W0116	ZZYQ	02		24-54-21	ALL
	=L	D	W0130	0018	20		36-11-21	ALL
C01342		P011-04/ /Q024		CB-DUCT PRESS IND R				001-099
C01342		P011-04/ /Q024		CB-DUCT PRESS XMTR R				115-199
	=B	D	W0116	ZZAL	02		24-54-21	001-099
	=B	D	W0116	ZZYO	02		24-54-21	ALL
	=B	D	W0116	ZZYR	02		24-54-21	115-199
	=L	D	W0130	0021	22		36-21-11	ALL
C01355		P011-04/ /S030		CB-POTABLE WATER CONT FLT				ALL
	=B	D	W0116	ZZAB	02		24-54-21	ALL
	=L	D	W0130	0003	22		38-14-11	ALL
C01356		P034-00/ /AA04		CB-POTW CONT GND				ALL
	=B	D	W1128	0035	12		24-54-61	ALL
	=B	D	W1190	ZZAM	00		24-54-61	ALL
	=B	D	W1190	ZZAN	00		24-54-61	ALL
	=L	D	W1190	0306	22		38-14-11	ALL
C01382		E006-00/ /		CB-APU CONT				ALL
	=B	D	W1026	ZZAC	02		24-31-41	001-099
	=B	D	W1026	ZZXB	02		24-31-41	001-099
	=B	D	W1026	0007	16		24-31-41	115-199

HOOKUP LIST

D280N032

91-21-51

Section C01300

Page 4

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01382		E006-00/ /		CB-APU CONT (continued)				ALL
	= B	D	W1026	ZZAA	02		24-31-41	115-199
	= L	D	W1026	0050	16		49-61-11	ALL
C01385		E006-00/ /		CB-APU INLET DOOR ACTR				ALL
	= B	D	W1026	ZZXB	02		24-31-41	001-099
	= B	D	W1026	0007	16		24-31-41	115-199
	= B	D	W1026	0008	16		24-31-41	115-199
	= L	D	W1026	0016	18		49-61-14	ALL
C01390		P011-02/ /B034		CB-APU ALTN CONT				001-099
C01390		P011-02/ /B034		CB-APU MN BAT CONT				115-199
	= B	D	W0114	ZZOZ	00		24-54-71	001-099
	= B	D	W0114	ZZPA	00		24-54-71	001-099
	= B	D	W0114	ZZXD	02		24-54-71	001-099
	= B	D	W0120	ZZOZ	00		24-54-71	115-199
	= B	D	W0120	ZZPA	00		24-54-71	115-199
	= B	D	W0120	ZZXD	02		24-54-71	115-199
	= L	D	W0128	0908	16		49-61-11	001-099
	= L	D	W0134	0408	16		49-61-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section C01300

Page 5 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01400		P011-03/ /R005		CB-F/D DOOR LOCK				ALL
	=B	D	W0112	ZZOG	00		24-54-11	001-099
	=B	D	W0112	ZZAC	04		24-54-11	ALL
	=B	D	W0112	ZZOE	00		24-54-11	115-199
	=L	D	W0126	0311	22		52-51-11	ALL
C01403		P034-00/ /AA05		CB-CARGO DOOR CONT				ALL
	=B	D	W1190	0027	14		24-54-61	001-099
	=B	D	W1190	ZZAA	03		24-54-61	001-099
	=B	D	W1190	ZZAM	00		24-54-61	ALL
	=B	D	W1190	ZZAK	00		24-54-61	115-199
	=L	D	W1190	0105	22		52-34-11	ALL
C01412		P011-03/ /L012		CB-FUEL TEMP IND(MR69018-002 INOP)				115-199
	=B	D	W0112	0213	12		24-54-11	115-199
	=B	D	W0112	ZZXA	02		24-54-11	115-199
	=L	+	W0126	0248	22		28-43-11	115-199
C01430		P011-03/ /L001		CB-LEFT ENGINE IGN 1				ALL
	=B	D	W0112	0403	16		24-51-11	001-099
	=B	D	W0112	ZZYF	02		24-51-11	001-099
	=B	D	W0112	0414	16		24-51-11	115-199
	=B	D	W0112	0661	16		24-51-11	115-199
	=L	D	W0126	0206	20		74-31-11	ALL
C01432		P011-04/ /L028		CB-RIGHT ENGINE IGN 1				ALL
	=B	D	W0116	0204	16		24-51-21	ALL
	=L	D	W0130	0020	20		74-31-21	001-099
	=L	D	W0130	0020	22		74-31-21	115-199
C01434		P011-01/ /D007		CB-ENGINES STBY IGN L 1				ALL
	=B	D	W0110	ZZKA	04		24-54-73	001-099
	=B	D	W0110	ZZPF	00		24-54-73	001-099
	=B	D	W0110	ZZZB	02		24-54-73	001-099
	=B	D	W0118	ZZBA	04		24-54-73	115-199
	=B	D	W0118	ZZOC	00		24-54-73	115-199
	=B	D	W0118	ZZZB	02		24-54-73	115-199
	=L	D	W0124	0807	20		74-31-11	001-099
	=L	D	W0132	0207	20		74-31-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section C01400

Page 1

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01435		P011-01/ /D008		CB-ENGINES STBY IGN L 2				ALL
	=B	D	W0110	ZZPE	00		24-54-73	001-099
	=B	D	W0110	ZZPF	00		24-54-73	001-099
	=B	D	W0110	ZZZA	02		24-54-73	001-099
	=B	D	W0118	ZZOB	00		24-54-73	115-199
	=B	D	W0118	ZZOC	00		24-54-73	115-199
	=B	D	W0118	ZZZA	02		24-54-73	115-199
	=L	D	W0124	0811	20		74-31-11	001-099
	=L	D	W0132	0211	20		74-31-11	115-199
C01437		P011-01/ /D009		CB-ENGINES STBY IGN R 1				ALL
	=B	D	W0110	0714	16		24-54-73	001-099
	=B	D	W0110	ZZPD	00		24-54-73	001-099
	=B	D	W0110	ZZPE	00		24-54-73	001-099
	=B	D	W0118	0014	16		24-54-73	115-199
	=B	D	W0118	ZZOA	00		24-54-73	115-199
	=B	D	W0118	ZZOB	00		24-54-73	115-199
	=L	D	W0124	0808	20		74-31-21	001-099
	=L	D	W0132	0208	22		74-31-21	115-199
C01438		P011-01/ /D010		CB-ENGINES STBY IGN R 2				ALL
	=B	D	W0110	0738	16		24-54-73	001-099
	=B	D	W0110	ZZKA	04		24-54-73	001-099
	=B	D	W0110	ZZPD	00		24-54-73	001-099
	=B	D	W0118	0038	16		24-54-73	115-199
	=B	D	W0118	ZZBA	04		24-54-73	115-199
	=B	D	W0118	ZZOA	00		24-54-73	115-199
	=L	D	W0124	0813	20		74-31-21	001-099
	=L	D	W0132	0213	22		74-31-21	115-199
C01464		P011-03/ /K002		CB-LEFT ENGINE VIB MONITOR				ALL
	=B	D	W0112	0650	16		24-51-11	ALL
	=B	D	W0112	ZZXJ	02		24-51-11	ALL
	=L	D	W0126	0516	22		77-31-11	ALL
C01480		P011-01/ /D011		CB-LEFT ENGINE T/R IND				001-099
C01480		P011-03/ /K005		CB-LEFT ENGINE T/R IND				115-199
	=B	D	W0110	ZZPA	02		24-54-73	001-099
	=B	D	W0110	ZZZN	02		24-54-73	001-099
	=B	D	W0118	ZZAJ	02		24-54-73	115-199

HOOKUP LIST

D280N032

91-21-51

Section C01400

Page 2

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01480		P011-01/ /D011		CB-LEFT ENGINE T/R IND (continued)				001-099
C01480		P011-03/ /K005		CB-LEFT ENGINE T/R IND (continued)				115-199
	=B	D	W0118	ZZYC	02		24-54-73	115-199
	=L	D	W0124	0025	24		78-36-11	001-099
	=L	D	W0132	0057	24		78-36-11	115-199
C01481		P011-02/ /B029		CB-RIGHT ENG T/R IND				001-099
C01481		P011-02/ /B029		CB-RIGHT ENGINE T/R IND				115-199
	=B	D	W0114	0034	18		24-54-71	001-099
	=B	D	W0114	ZZCM	07		24-54-71	001-099
	=B	D	W0114	ZZPK	00		24-54-71	001-099
	=B	D	W0120	0014	18		24-54-71	115-199
	=B	D	W0120	ZZAM	07		24-54-71	115-199
	=B	D	W0120	ZZBL	00		24-54-71	115-199
	=L	D	W0128	0035	24		78-36-21	001-002
	=L	D	W0128	0103	24		78-36-21	003-099
	=L	D	W0134	0056	24		78-36-21	115-199
C01482		P011-01/ /D012		CB-ENGINE T/R CONT-L				ALL
	=B	D	W0110	ZZPA	02		24-54-73	001-099
	=B	D	W0118	ZZAJ	02		24-54-73	115-199
	=L	D	W0124	0411	22		78-34-11	001-099
	=L	D	W0132	0056	22		78-34-11	115-199
C01483		P011-02/ /B030		CB-RIGHT ENGINE T/R CONT				ALL
	=B	D	W0114	ZZND	00		24-54-71	001-099
	=B	D	W0114	ZZPK	00		24-54-71	001-099
	=B	D	W0120	ZZBL	00		24-54-71	115-199
	=B	D	W0120	ZZBM	00		24-54-71	115-199
	=L	D	W0128	0270	22		78-34-21	001-099
	=L	D	W0134	0055	22		78-34-21	115-199
C01498		P011-03/ /K009		CB-LEFT ENGINE OIL PRESS				ALL
	=B	D	W0112	0202	14		24-53-11	ALL
	=B	D	W0112	0203	14		24-53-11	ALL
	=L	D	W0126	0518	24		79-32-11	001-099
	=L	D	W0126	0518	22		79-32-11	115-199
C01499		P011-04/ /K035		CB-RIGHT ENGINE OIL PRESS				ALL
	=B	D	W0116	0103	14		24-53-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section C01400

Page 3

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01499		P011-04/ /K035		CB-RIGHT ENGINE OIL PRESS (continued)				ALL
	=B	D	W0116	0104	14		24-53-21	ALL
	=L	D	W0130	0275	24		79-32-11	001-099
	=L	D	W0130	0275	22		79-32-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section C01400

Page 4 End

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01510		P011-02/ /D019		CB-ENGINES START CONT L				ALL
	=B	D	W0114	ZZCO	05		24-54-71	001-099
	=B	D	W0114	ZZDA	00		24-54-71	001-099
	=B	D	W0120	ZZAN	07		24-54-71	115-199
	=B	D	W0120	ZZOG	00		24-54-71	115-199
	=L	D	W0128	0909	22		80-11-11	001-099
	=L	D	W0134	0409	22		80-11-11	115-199
C01511		P011-02/ /D020		CB-ENGINES START CONT R				ALL
	=B	D	W0114	ZZAC	00		24-54-71	001-099
	=B	D	W0114	ZZDA	00		24-54-71	001-099
	=B	D	W0114	ZZXK	02		24-54-71	001-099
	=B	D	W0120	ZZOF	00		24-54-71	115-199
	=B	D	W0120	ZZOG	00		24-54-71	115-199
	=B	D	W0120	ZZYH	02		24-54-71	115-199
	=L	D	W0128	0804	22		80-11-21	001-099
	=L	D	W0134	0204	22		80-11-21	115-199
C01521		P011-01/ /C014		CB-FLAP/SLAT ELEC UNIT 2 PWR				ALL
	=B	D	W0110	0019	16		24-54-73	001-002
	=B	D	W0110	0738	16		24-54-73	001-099
	=B	D	W0118	0038	16		24-54-73	115-199
	=L	D	W0124	0791	24		27-51-61	001-099
	=L	D	W0124	0794	24		27-51-61	001-099
	=L	D	W0132	0141	22		27-51-61	115-199
	=L	D	W0132	0144	22		27-51-61	115-199
C01522		P011-01/ /H013		CB-FLAP POS IND R				ALL
	=B	D	W0110	ZZAK	02		24-51-15	ALL
	=L	D	W0124	0008	24		25-58-11	001-099
	=L	D	W0124	0009	24		27-58-11	001-099
	=L	D	W0124	0008	22		27-58-11	115-199
	=L	D	W0124	0009	22		27-58-11	115-199
C01523		P011-01/ /G015		CB-STAB POS MOD L				ALL
	=B	D	W0110	ZZHV	02		24-53-11	ALL
	=B	D	W0110	ZZXW	02		24-53-11	ALL
	=L	D	W0124	0065	22		27-48-21	ALL
C01524		P011-01/ /C016		CB-FLAP/SLAT ELEC UNIT 2 SENSOR				ALL
	=B	D	W0124	0795	24		27-51-61	001-099

HOOKUP LIST

D280N032

91-21-51

Section C01500

Page 1

Dec 18/2007

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01524		P011-01/ /C016		CB-FLAP/SLAT ELEC UNIT 2 SENSOR (continued)				ALL
	=B	D	W0132	0145	22		27-51-61	115-199
	=L	D	W0124	0793	24		27-51-61	001-099
	=L	D	W0132	0143	22		27-51-61	115-199
C01525		P011-02/ /F019		CB-STAB POS MOD C				ALL
	=B	D	W0114	ZZDB	03		24-51-31	001-099
	=B	D	W0114	ZZOB	00		24-51-31	001-099
	=B	D	W0122	ZZAB	03		24-51-31	115-199
	=B	D	W0122	ZZOB	00		24-51-31	115-199
	=L	D	W0128	0959	22		27-48-21	001-099
	=L	D	W0136	0009	22		27-48-21	115-199
C01526		P011-02/ /G024		CB-STAB POS MOD R				ALL
	=B	D	W0114	ZZAR	02		24-53-21	ALL
	=L	D	W0128	0122	22		27-48-21	ALL
C01528		P011-01/ /C012		CB-STAB TRIM SHUTOFF L				ALL
	=B	D	W0110	ZZPG	00		24-54-73	001-099
	=B	D	W0110	ZZPH	00		24-54-73	001-099
	=B	D	W0110	ZZYG	02		24-54-73	001-099
	=B	D	W0118	ZZOH	00		24-54-73	115-199
	=B	D	W0118	ZZOJ	00		24-54-73	115-199
	=B	D	W0118	ZZYG	02		24-54-73	115-199
	=L	D	W0124	0952Y	20		27-41-11	001-099
	=L	D	W0132	0352Y	20		27-41-11	115-199
C01529		P011-01/ /C013		CB-STAB TRIM SHUTOFF R				ALL
	=B	D	W0110	ZZJB	05		24-54-73	001-099
	=B	D	W0110	ZZPG	00		24-54-73	001-099
	=B	D	W0110	ZZYJ	02		24-54-73	001-099
	=B	D	W0118	ZZAB	05		24-54-73	115-199
	=B	D	W0118	ZZOH	00		24-54-73	115-199
	=B	D	W0118	ZZYJ	02		24-54-73	115-199
	=L	D	W0124	0958Y	20		27-41-21	001-099
	=L	D	W0132	0358Y	20		27-41-21	115-199
C01531		P011-01/ /G018		CB-FLT CONT ELEC 1R DC				001-099
C01531		P011-01/ /G018		CB-CSEU 1R DC				115-199
	=B	D	W0110	ZZXS	02		24-54-11	001-099
	=B	D	W0110	ZZXZ	02		24-54-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section C01500

Page 2

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01531		P011-01/ /G018		CB-FLT CONT ELEC 1R DC (continued)				001-099
C01531		P011-01/ /G018		CB-CSEU 1R DC (continued)				115-199
	=B	D	W0110	ZZYZ	02		24-54-11	115-199
	=B	D	W0110	ZZZW	02		24-54-11	115-199
	=L	D	W0124	0101	22		27-09-11	ALL
C01532		P011-02/ /G028		CB-FLT CONT ELEC 2R DC				001-099
C01532		P011-02/ /G028		CB-CSEU 2R DC				115-199
	=B	D	W0114	ZZOH	00		24-54-21	001-099
	=B	D	W0114	ZZAF	04		24-54-21	ALL
	=B	D	W0114	ZZOC	00		24-54-21	115-199
	=L	D	W0128	0152	22		27-09-11	ALL
C01533		P011-01/ /C009		CB-FLT CONT ELEC 2L DC				001-099
C01533		P011-01/ /C009		CB-CSEU 2L DC				115-199
	=B	D	W0110	ZZJB	05		24-54-73	001-099
	=B	D	W0110	ZZPL	00		24-54-73	001-099
	=B	D	W0110	ZZZK	02		24-54-73	001-099
	=B	D	W0118	ZZAB	05		24-54-73	115-199
	=B	D	W0118	ZZOP	00		24-54-73	115-199
	=B	D	W0118	ZZYD	02		24-54-73	115-199
	=L	D	W0124	0953	22		27-09-11	001-099
	=L	D	W0132	0353	22		27-09-11	115-199
C01534		P011-01/ /C007		CB-FLT CONT ELEC 1L DC				001-099
C01534		P011-01/ /C007		CB-CSEU 1L DC				115-199
	=B	D	W0110	ZZZK	02		24-54-73	001-099
	=B	D	W0110	ZZZP	02		24-54-73	001-099
	=B	D	W0118	ZZYD	02		24-54-73	115-199
	=B	D	W0118	ZZZP	02		24-54-73	115-199
	=L	D	W0124	0704	22		27-09-11	001-099
	=L	D	W0132	0004	22		27-09-11	115-199
C01535		P011-02/ /G027		CB-FLT CONT ELEC 2R AC				001-099
C01535		P011-02/ /G027		CB-CSEU 2R AC				115-199
	=B	D	W0114	0024	16		24-51-22	ALL
	=B	D	W0114	0030	16		24-51-22	ALL
	=L	D	W0128	0151	22		27-09-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section C01500

Page 3

Jan 21/2005

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01536		P011-01/ /G017		CB-FLT CONT ELEC 1R AC				001-099
C01536		P011-01/ /G017		CB-CSEU 1R AC				115-199
	=B	D	W0110	0005	16		24-51-12	ALL
	=L	D	W0124	0102	22		27-09-11	ALL
C01537		P011-01/ /C008		CB-FLT CONT ELEC 2L AC				001-099
C01537		P011-01/ /C008		CB-CSEU 2L AC				115-199
	=B	D	W0110	ZZZA	02		24-54-73	001-099
	=B	D	W0110	ZZZH	02		24-54-73	001-099
	=B	D	W0118	0602	16		24-54-73	115-199
	=B	D	W0118	ZZZA	02		24-54-73	115-199
	=L	D	W0124	0954	22		27-09-11	001-099
	=L	D	W0132	0354	22		27-09-11	115-199
C01538		P011-01/ /C006		CB-FLT CONT ELEC 1L AC				001-099
C01538		P011-01/ /C006		CB-CSEU 1L AC				115-199
	=B	D	W0110	ZZZB	02		24-54-73	001-099
	=B	D	W0110	ZZZC	02		24-54-73	001-099
	=B	D	W0118	ZZZB	02		24-54-73	115-199
	=B	D	W0118	ZZZC	02		24-54-73	115-199
	=L	D	W0124	0702	22		27-09-11	001-099
	=L	D	W0132	0002	22		27-09-11	115-199
C01539		P011-01/ /G013		CB-FSEU 1 CONT				ALL
	=B	D	W0110	0017	12		24-54-11	ALL
	=B	D	W0110	ZZXR	02		24-54-11	ALL
	=L	D	W0124	0043	24		27-51-41	001-099
	=L	D	W0124	0043	20		27-51-41	115-199
C01540		P011-02/ /G022		CB-FLAP/SLAT ELEC UNIT 3 CONT				ALL
	=B	D	W0114	0006	12		24-54-21	ALL
	=B	D	W0114	ZZYN	02		24-54-21	ALL
	=L	D	W0128	0030	24		27-81-11	001-099
	=L	D	W0128	0030	22		27-81-11	115-199
C01541		P011-01/ /C015		CB-FLAP/SLAT ELEC UNIT 2 CONT				ALL
	=B	D	W0110	ZZYG	02		24-54-73	001-099
	=B	D	W0110	0052	16		24-54-73	ALL
	=B	D	W0118	ZZYG	02		24-54-73	115-199
	=L	D	W0124	0792	24		27-51-61	001-099

HOOKUP LIST

D280N032

91-21-51

Section C01500

Page 4

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C01541		P011-01/ /C015		CB-FLAP/SLAT ELEC UNIT 2 CONT (continued)				ALL
	=L	D	W0132	0142	22		27-51-61	115-199
C01560		P011-01/ /A018		CB-YAW DAMPER L				ALL
	=B	D	W0110	0727	12		24-54-73	001-099
	=B	D	W0110	ZZJD	02		24-54-73	001-099
	=B	D	W0118	0027	12		24-54-73	115-199
	=B	D	W0118	ZZAD	02		24-54-73	115-199
	=L	D	W0124	0805	20		22-21-11	001-099
	=L	D	W0132	0205	20		22-21-11	115-199
C01561		P011-02/ /F034		CB-YAW DAMPER R				ALL
	=B	D	W0114	ZZAG	02		24-54-21	ALL
	=B	D	W0114	ZZYA	02		24-54-21	ALL
	=B	D	W0114	0008	12		24-54-21	115-199
	=L	D	W0128	0355	22		22-21-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section C01500

Page 5 End

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C03000		P032-00/ /A006		CB-APU START TRU POWER				ALL
	A1	D	W1132	0046	08		24-51-21	ALL
	A2	D	W1132	0043	10		24-32-41	ALL
	B1	D	W1132	0047	08		24-51-21	ALL
	B2	D	W1132	0044	10		24-32-41	ALL
	C1	D	W1132	0048	08		24-51-21	ALL
	C2	D	W1132	0045	10		24-32-41	ALL
C03002		P070-00/ /B008		CB-FWD CARGO FAN				ALL
	A1	D	W1252	0005	10		24-51-14	ALL
	A1	D	W1252	0006	12		24-51-14	ALL
	A2	D	W1252	0109	20		21-43-11	ALL
	B1	D	W1252	0007	10		24-51-14	ALL
	B1	D	W1252	0008	12		24-51-14	ALL
	B2	D	W1252	0122	20		21-43-11	ALL
	C1	D	W1252	0004	12		24-51-14	ALL
	C1	D	W1252	0009	10		24-51-14	ALL
	C2	D	W1252	0123	20		21-43-11	ALL
C03003		P011-03/ /S006		CB-LAV FLUSH MOTOR A				001-099
C03003		P011-03/ /S008		CB-LAV FLUSH MOTOR A				115-199
	A1	D	W0126	0519	24		38-32-11	001-099
	A1	D	W0126	0519	20		38-32-11	115-199
	A2	D	W0112	0501	10		24-51-13	001-099
	A2	D	W0112	ZZYT	02		24-51-13	ALL
	B1	D	W0126	0520	24		38-32-11	001-099
	B1	D	W0126	0520	20		38-32-11	115-199
	B2	D	W0112	0502	10		24-51-13	001-099
	B2	D	W0112	ZZYW	02		24-51-13	ALL
	C1	D	W0126	0521	24		38-32-11	001-099
	C1	D	W0126	0521	20		38-32-11	115-199
	C2	D	W0112	0503	10		24-51-13	001-099
	C2	D	W0112	ZZYX	02		24-51-13	ALL
C03004		P011-03/ /S008		CB-LAV FLUSH MOTOR B				001-099
C03004		P011-03/ /S011		CB-LAV FLUSH MOTOR B				115-199
	A1	D	W0126	0352	24		38-32-11	001-099
	A1	D	W0126	0522	18		38-32-11	115-199
	A2	D	W0112	ZZZE	02		24-51-13	001-099
	A2	D	W0112	ZZYT	02		24-51-13	ALL
	A2	D	W0112	0501	08		24-51-13	115-199

HOOKUP LIST

D280N032

91-21-51

Section C03000

Page 1

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C03004		P011-03/ /S008		CB-LAV FLUSH MOTOR B (continued)				001-099
C03004		P011-03/ /S011		CB-LAV FLUSH MOTOR B (continued)				115-199
	B1	D	W0126	0353	24		38-32-11	001-099
	B1	D	W0126	0523	18		38-32-11	115-199
	B2	D	W0112	ZZZF	02		24-51-13	001-099
	B2	D	W0112	ZZYW	02		24-51-13	ALL
	B2	D	W0112	0502	08		24-51-13	115-199
	C1	D	W0126	0354	24		38-32-11	001-099
	C1	D	W0126	0524	18		38-32-11	115-199
	C2	D	W0112	ZZZG	02		24-51-13	001-099
	C2	D	W0112	ZZYX	02		24-51-13	ALL
	C2	D	W0112	0503	08		24-51-13	115-199
C03005		P011-01/ /G008		CB-HF COMM L				ALL
	A1	D	W0124	0050	20		23-11-11	ALL
	A2	D	W0110	0300	12		24-51-15	ALL
	B1	D	W0124	0051	20		23-11-11	ALL
	B2	D	W0110	ZZXE	02		24-51-15	001-099
	B2	D	W0110	0042	12		24-51-15	ALL
	B2	D	W0110	0301	12		24-51-15	ALL
	C1	D	W0124	0052	20		23-11-11	ALL
	C1	D	W0124	0353	20		23-11-11	ALL
	C2	D	W0110	0302	12		24-51-15	ALL
	C2	D	W0110	ZZXC	02		24-51-15	ALL
C03006		P011-02/ /G034		CB-HF COMM R				ALL
	A1	D	W0128	0106	20		23-11-21	ALL
	A2	D	W0114	0021	16		24-51-22	ALL
	A2	D	W0114	0301	16		24-51-22	ALL
	B1	D	W0128	0107	20		23-11-21	ALL
	B2	D	W0114	0302	16		24-51-22	ALL
	B2	D	W0114	ZZYK	02		24-51-22	ALL
	C1	D	W0128	0108	20		23-11-21	ALL
	C1	D	W0128	0200	20		23-11-21	ALL
	C2	D	W0114	0051	16		24-51-22	ALL
	C2	D	W0114	0303	16		24-51-22	ALL
C03007		P006-04/ /J020		CB-115VAC GND SVCE SECT 1				ALL
	A1	D	W0064	0509	12		24-51-52	ALL
	A2	D	W0064	0026	12		24-51-52	ALL
	A2	D	W0064	0034	12		24-51-52	ALL

HOOKUP LIST

D280N032

91-21-51

Section C03000

Page 2

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C03007		P006-04/ /J020		CB-115VAC GND SVCE SECT 1 (continued)				ALL
	B1	D	W0064	0508	12		24-51-52	ALL
	B2	D	W0064	0028	12		24-51-52	ALL
	B2	D	W0064	0035	12		24-51-52	ALL
	C1	D	W0064	0507	12		24-51-52	ALL
	C2	D	W0064	0029	12		24-51-52	ALL
	C2	D	W0064	0036	12		24-51-52	ALL
C03008		P037-00/ /K008		CB-GND SVCE SECT 2				ALL
	A1	D	W1272	0021	12		24-51-52	ALL
	A2	D	W1272	0003	08		24-51-52	ALL
	A2	D	W1272	0004	12		24-51-52	ALL
	B1	D	W1272	0025	12		24-51-52	ALL
	B2	D	W1272	0002	08		24-51-52	ALL
	B2	D	W1272	0005	12		24-51-52	ALL
	C1	D	W1272	0026	12		24-51-52	ALL
	C2	D	W1272	0006	12		24-51-52	ALL
	C2	D	W1272	0020	08		24-51-52	ALL
C03009		P070-00/ /C008		CB-AFT CARGO HTR				ALL
	A1	D	W1252	0117	14		21-44-11	ALL
	A2	D	W1252	0005	10		24-51-14	ALL
	A2	D	W1252	0026	08		24-51-14	ALL
	B1	D	W1252	0121	14		21-44-11	ALL
	B2	D	W1252	0007	10		24-51-14	ALL
	B2	D	W1252	0025	08		24-51-14	ALL
	C1	D	W1252	0120	14		21-44-11	ALL
	C2	D	W1252	0009	10		24-51-14	ALL
	C2	D	W1252	0017	08		24-51-14	ALL
	C2	D	W1252	0046	12		24-51-14	115-199
C03010		P037-00/ /C002		CB-AFT CARGO FAN				ALL
	A1	D	W1272	0050	12		24-51-24	001-099
	A1	D	W1272	0053	12		24-51-24	001-099
	A1	D	W1272	0053	14		24-51-24	115-199
	A2	D	W1272	0234	18		21-44-11	ALL
	B1	D	W1272	0040	12		24-51-24	001-099
	B1	D	W1272	0043	12		24-51-24	001-099
	B1	D	W1272	0043	14		24-51-24	115-199
	B2	D	W1272	0235	18		21-44-11	ALL
	C1	D	W1272	0033	12		24-51-24	001-099

HOOKUP LIST

D280N032

91-21-51

Section C03000

Page 3

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C03010		P037-00/ /C002		CB-AFT CARGO FAN (continued)				ALL
	C1	D	W1272	0036	12		24-51-24	001-099
	C1	D	W1272	0036	14		24-51-24	115-199
	C1	D	W1272	0076	12		24-51-24	115-199
	C2	D	W1272	0236	18		21-44-11	ALL
C03011		P011-04/ /S027		CB-LAV FLUSH MOTOR C				001-099
C03011		P011-04/ /S025		CB-LAV FLUSH MOTOR C				115-199
	A1	D	W0130	0305	24		38-32-11	001-099
	A1	D	W0130	0305	18		38-32-11	115-199
	A2	D	W0116	0401	12		24-51-23	ALL
	A2	D	W0116	ZZZF	02		24-51-23	ALL
	B1	D	W0130	0306	24		38-32-11	001-099
	B1	D	W0130	0306	18		38-32-11	115-199
	B2	D	W0116	0402	12		24-51-23	ALL
	B2	D	W0116	ZZZE	02		24-51-23	ALL
	C1	D	W0130	0307	24		38-32-11	001-099
	C1	D	W0130	0307	18		38-32-11	115-199
	C2	D	W0116	0403	12		24-51-23	ALL
	C2	D	W0116	ZZZD	02		24-51-23	ALL
C03012		P011-04/ /S030		CB-LAV FLUSH MOTOR D				001-099
C03012		P011-04/ /S028		CB-LAV FLUSH MOTOR D				115-199
	A1	D	W0130	0302	24		38-32-11	001-099
	A1	D	W0130	0302	18		38-32-11	115-199
	A2	D	W0116	ZZZF	02		24-51-23	ALL
	B1	D	W0130	0303	24		38-32-11	001-099
	B1	D	W0130	0303	18		38-32-11	115-199
	B2	D	W0116	ZZZE	02		24-51-23	ALL
	C1	D	W0130	0304	24		38-32-11	001-099
	C1	D	W0130	0304	18		38-32-11	115-199
	C2	D	W0116	ZZZD	02		24-51-23	ALL
C03013		P037-00/ /A005		CB-GALLEY G1A				001-099
C03013		P037-00/ /K005		CB-GALLEY PWR FWD 1				115-199
	A1	D	W1272	0304	10		25-31-11	115-199
	A2	D	W1272	0101	08		24-51-24	115-199
	A2	D	W1272	ZZYH	02		24-51-24	115-199
	B1	D	W1272	0305	10		25-31-11	115-199
	B2	D	W1272	0102	08		24-51-24	115-199
	B2	D	W1272	ZZYJ	02		24-51-24	115-199

HOOKUP LIST

D280N032

91-21-51

Section C03000

Page 4

Jan 21/2005

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C03013		P037-00/ /A005		CB-GALLEY G1A (continued)				001-099
C03013		P037-00/ /K005		CB-GALLEY PWR FWD 1 (continued)				115-199
	C1	D	W1272	0306	10		25-31-11	115-199
	C2	D	W1272	0103	08		24-51-24	115-199
	C2	D	W1272	ZZYK	02		24-51-24	115-199
C03014		P006-04/ /D020		CB-ALTN SLAT PWR				ALL
	A1	D	W0064	0010	08		24-51-23	ALL
	A1	D	W0064	0013	12		24-51-23	ALL
	A2	D	W0064	0203	14		27-81-11	ALL
	B1	D	W0064	0011	08		24-51-23	ALL
	B1	D	W0064	0014	12		24-51-23	ALL
	B2	D	W0064	0204	14		27-81-11	ALL
	C1	D	W0064	0012	08		24-51-23	ALL
	C1	D	W0064	0015	12		24-51-23	ALL
	C2	D	W0064	0212	14		27-81-11	ALL
C03015		P031-00/ /A001		CB-MISC EQPT PWR L				ALL
	A1	KA	W1130	0007	04		24-21-11	001-099
	A1	KA	W1130	0022	04		24-21-11	ALL
	A1	KA	W1130	0019	04		24-21-11	115-199
	A2	D	W1130	0028	08		24-51-11	ALL
	B1	KA	W1130	0008	04		24-21-11	001-099
	B1	KA	W1130	0023	04		24-21-11	ALL
	B1	KA	W1130	0020	04		24-21-11	115-199
	B2	D	W1130	0029	08		24-51-11	ALL
	C1	KA	W1130	0009	04		24-21-11	001-099
	C1	KA	W1130	0024	04		24-21-11	ALL
	C1	KA	W1130	0021	04		24-21-11	115-199
	C2	D	W1130	0030	08		24-51-11	ALL
C03016		P032-00/ /A009		CB-MISC EQPT BUS R				ALL
	A1	KA	W1132	0007	04		24-21-21	001-099
	A1	KA	W1132	0025	04		24-21-21	ALL
	A1	KA	W1132	0028	04		24-21-21	115-199
	A2	D	W1132	0034	08		24-51-21	ALL
	B1	KA	W1132	0008	04		24-21-21	001-099
	B1	KA	W1132	0026	04		24-21-21	ALL
	B1	KA	W1132	0029	04		24-21-21	115-199
	B2	D	W1132	0035	08		24-51-21	ALL
	C1	KA	W1132	0009	04		24-21-21	001-099

HOOKUP LIST

D280N032

91-21-51

Section C03000

Page 5

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C03016		P032-00/ /A009		CB-MISC EQPT BUS R (continued)				ALL
	C1	KA	W1132	0027	04		24-21-21	ALL
	C1	KA	W1132	0030	04		24-21-21	115-199
	C2	D	W1132	0036	08		24-51-21	ALL
C03018		P034-00/ /AB16		CB-CARGO LOADER DRIVE AFT				115-199
	A1	D	W1190	0010	14		24-51-61	115-199
	A2	D	W1190	0206	18		25-51-21	115-199
	B1	D	W1190	0011	14		24-51-61	115-199
	B2	D	W1190	0207	18		25-51-21	115-199
	C1	D	W1190	0012	14		24-51-61	115-199
	C2	D	W1190	0208	18		25-51-21	115-199
	CAP	Y	W1190	0107	18		25-51-11	115-199
	CAP	Y	W1190	0108	18		25-51-11	115-199
	CAP	Y	W1190	0109	18		25-51-11	115-199
C03020		P006-04/ /M019		CB-PASS SERVICE OUTLET				ALL
	A1	D	W0064	0404	18		25-29-11	ALL
	A2	D	W0064	0040	12		24-51-52	ALL
	B1	D	W0064	0405	18		25-29-11	ALL
	B2	D	W0064	0041	12		24-51-52	ALL
	C1	D	W0064	0043	18		25-29-11	ALL
	C2	D	W0064	0042	12		24-51-52	ALL
C03023		P037-00/ /D002		CB-FWD 2 GALLEY PWR				001-099
C03023		P070-00/ /C016		CB-FWD 2 GALLEY PWR				115-199
	A1	D	W1272	0057	08		24-51-24	001-099
	A1	D	W1272	0318	08		24-51-24	001-099
	A1	D	W1252	0034	10		25-31-13	115-199
	A2	D	W1272	0094	10		25-31-13	001-099
	A2	D	W1252	0040	08		24-51-14	115-199
	B1	D	W1272	0058	08		24-51-24	001-099
	B1	D	W1272	0319	08		24-51-24	001-099
	B1	D	W1252	0035	10		25-31-13	115-199
	B2	D	W1272	0095	10		25-31-13	001-099
	B2	D	W1252	0041	08		24-51-14	115-199
	C1	D	W1272	0059	08		24-51-24	001-099
	C1	D	W1272	0320	08		24-51-24	001-099
	C1	D	W1252	0036	10		25-31-13	115-199
	C2	D	W1272	0096	10		25-31-13	001-099
	C2	D	W1252	0042	08		24-51-14	115-199

HOOKUP LIST

D280N032

91-21-51

Section C03000

Page 6

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C03024		P037-00/ /K002		CB-GALLEY PWR MID AFT R				115-199
	A1	D	W1272	0301	12		25-31-23	115-199
	A2	D	W1272	ZZYH	02		24-51-24	115-199
	B1	D	W1272	0302	12		25-31-23	115-199
	B2	D	W1272	ZZYJ	02		24-51-24	115-199
	C1	D	W1272	0303	12		25-31-23	115-199
	C2	D	W1272	ZZYK	02		24-51-24	115-199
C03025		P070-00/ /C019		CB-MIDAF T GALLEY PWR				115-199
	A1	D	W1252	0037	10		25-31-27	115-199
	A2	D	W1252	0040	08		24-51-14	115-199
	A2	D	W1252	0043	10		24-51-14	115-199
	B1	D	W1252	0038	10		25-31-27	115-199
	B2	D	W1252	0041	08		24-51-14	115-199
	B2	D	W1252	0044	10		24-51-14	115-199
	C1	D	W1252	0039	10		25-31-27	115-199
	C2	D	W1252	0042	08		24-51-14	115-199
	C2	D	W1252	0045	10		24-51-14	115-199
C03026		P032-00/ /A005		CB-UTIL BUS GALLEYS R				ALL
	A1	KA	W1132	0028	04		24-21-21	001-099
	A1	KA	W1132	0055	04		24-21-21	001-099
	A1	KA	W1132	0013	04		24-21-21	115-199
	A1	KA	W1132	0022	04		24-21-21	115-199
	A2	D	W1132	0059	08		24-51-24	001-099
	A2	D	W1132	0040	08		24-51-24	115-199
	B1	KA	W1132	0029	04		24-21-21	001-099
	B1	KA	W1132	0054	04		24-21-21	001-099
	B1	KA	W1132	0014	04		24-21-21	115-199
	B1	KA	W1132	0023	04		24-21-21	115-199
	B2	D	W1132	0060	08		24-51-24	001-099
	B2	D	W1132	0041	08		24-51-24	115-199
	C1	KA	W1132	0030	04		24-21-21	001-099
	C1	KA	W1132	0053	04		24-21-21	001-099
	C1	KA	W1132	0015	04		24-21-21	115-199
	C1	KA	W1132	0024	04		24-21-21	115-199
	C2	D	W1132	0061	08		24-51-24	001-099
	C2	D	W1132	0042	08		24-51-24	115-199
C03027		P031-00/ /A003		CB-UTIL BUS GALLEYS L				115-199
	A1	KA	W1130	0019	04		24-21-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section C03000

Page 7

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C03027		P031-00/ /A003		CB-UTIL BUS GALLEYS L (continued)				115-199
	A1	KA	W1130	0031	04		24-21-11	115-199
	A2	D	W1130	0034	08		24-51-14	115-199
	B1	KA	W1130	0020	04		24-21-11	115-199
	B1	KA	W1130	0032	04		24-21-11	115-199
	B2	D	W1130	0035	08		24-51-14	115-199
	C1	KA	W1130	0021	04		24-21-11	115-199
	C1	KA	W1130	0033	04		24-21-11	115-199
	C2	D	W1130	0036	08		24-51-14	115-199
C03028		P070-00/ /B005		CB-AFT EQPT COOLING FANS SPLY NO.2				115-199
	A1	D	W1252	0013	12		24-51-11	115-199
	A1	D	W1252	0014	12		24-51-11	115-199
	A2	D	W1252	0110	22		21-58-24	115-199
	B1	D	W1252	0015	12		24-51-11	115-199
	B1	D	W1252	0016	12		24-51-11	115-199
	B2	D	W1252	0111	22		21-58-24	115-199
	C1	D	W1252	0019	12		24-51-11	115-199
	C1	D	W1252	0020	12		24-51-11	115-199
	C2	D	W1252	0112	22		21-58-24	115-199
C03029		P037-00/ /D002		CB-AFT EQPT COOLING FANS SPLY NO.1				115-199
	A1	D	W1272	0237	22		21-58-24	115-199
	A2	D	W1272	ZZXD	02		24-51-52	115-199
	A2	D	W1272	ZZYE	02		24-51-52	115-199
	B1	D	W1272	0238	22		21-58-24	115-199
	B2	D	W1272	ZZXE	02		24-51-52	115-199
	B2	D	W1272	ZZYF	02		24-51-52	115-199
	C1	D	W1272	0239	22		21-58-24	115-199
	C2	D	W1272	ZZXF	02		24-51-52	115-199
	C2	D	W1272	ZZYG	02		24-51-52	115-199
C03043		P011-03/ /S009		CB-LAV FLUSH MOTOR S				001-099
	A1	D	W0126	0522	24		38-32-11	001-099
	A2	D	W0112	ZZZE	02		24-51-13	001-099
	B1	D	W0126	0523	24		38-32-11	001-099
	B2	D	W0112	ZZZF	02		24-51-13	001-099
	C1	D	W0126	0524	24		38-32-11	001-099
	C2	D	W0112	ZZZG	02		24-51-13	001-099

HOOKUP LIST

D280N032

91-21-51

Section C03000

Page 8

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C03044		P006-03/ /D017		CB-EQ COOL AUX FAN				ALL
	A1	D	W0062	0370	12		24-51-15	ALL
	A1	D	W0062	0388	12		24-51-15	ALL
	A2	D	W0062	0309	22		21-58-15	001-099
	B1	D	W0062	0371	12		24-51-15	ALL
	B1	D	W0062	0389	12		24-51-15	ALL
	B2	D	W0062	0310	22		21-58-15	001-099
	C1	D	W0062	0372	12		24-51-15	ALL
	C1	D	W0062	0373	12		24-51-15	ALL
	C2	D	W0062	0311	22		21-58-15	001-099
	CAP	Y	W0062	0309	22		21-58-15	115-199
	CAP	Y	W0062	0310	22		21-58-15	115-199
	CAP	Y	W0062	0311	22		21-58-15	115-199
C03046		P037-00/ /		CB-GALLEY G4A				001-099
	A1	D	W1272	0057	08		24-51-24	001-099
	A2	D	W1272	0315	10		25-31-31	001-099
	B1	D	W1272	0058	08		24-51-24	001-099
	B2	D	W1272	0316	10		25-31-31	001-099
	C1	D	W1272	0059	08		24-51-24	001-099
	C2	D	W1272	0317	10		25-31-31	001-099
C03058		P071-00/ /		CB-HMG L XFR BUS				003-099
	A1	D	W1254	0132	12		24-25-12	003-099
	A1	D	W1254	0141	12		24-25-12	003-099
	A2	D	W1254	0133	12		24-25-12	003-099
	B1	D	W1254	0131	12		24-25-12	003-099
	B1	D	W1254	0140	12		24-25-12	003-099
	B2	D	W1254	0134	12		24-25-12	003-099
	C1	D	W1254	0130	12		24-25-12	003-099
	C1	D	W1254	0139	12		24-25-12	003-099
	C2	D	W1254	0135	12		24-25-12	003-099
C03059		P071-00/ /		CB-HMG R XFR BUS				003-099
	A1	D	W1254	0141	12		24-25-12	003-099
	A1	D	W1254	0144	12		24-25-12	003-099
	A2	D	W1254	0138	12		24-25-12	003-099
	B1	D	W1254	0140	12		24-25-12	003-099
	B1	D	W1254	0143	12		24-25-12	003-099
	B2	D	W1254	0137	12		24-25-12	003-099

HOOKUP LIST

D280N032

91-21-51

Section C03000

Page 9

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C03059		P071-00/ /		CB-HMG R XFR BUS (continued)				003-099
	C1	D	W1254	0139	12		24-25-12	003-099
	C1	D	W1254	0142	12		24-25-12	003-099
	C2	D	W1254	0136	12		24-25-12	003-099
C03060		P071-00/ /		CB-HMG INST XFR BUS				003-099
	A1	D	W1254	0121	20		24-25-12	003-099
	A1	D	W1254	0129	12		24-25-12	003-099
	A1	D	W1254	0132	12		24-25-12	003-099
	A2	D	W1254	0126	12		24-25-12	003-099
	B1	D	W1254	0122	20		24-25-12	003-099
	B1	D	W1254	0128	12		24-25-12	003-099
	B1	D	W1254	0131	12		24-25-12	003-099
	B2	D	W1254	0125	12		24-25-12	003-099
	C1	D	W1254	0123	20		24-25-12	003-099
	C1	D	W1254	0127	12		24-25-12	003-099
	C1	D	W1254	0130	12		24-25-12	003-099
	C2	D	W1254	0124	12		24-25-12	003-099
C03061		P071-00/ /		CB-HMG BAT CHGR				003-099
	A1	D	W1254	0144	12		24-25-12	003-099
	A2	D	W1254	0147	20		24-25-12	003-099
	B1	D	W1254	0143	12		24-25-12	003-099
	B2	D	W1254	0146	20		24-25-12	003-099
	C1	D	W1254	0142	12		24-25-12	003-099
	C2	D	W1254	0145	20		24-25-12	003-099

HOOKUP LIST

D280N032

91-21-51

Section C03000

Page 10 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C04001		P070-00/ /A001		CB-LAV WTR HTR A				115-199
	=B	D	W1252	0001	12		24-51-14	ALL
	=L	D	W1252	0124	22		38-13-11	001-099
	=L	D	W1252	0124	20		38-13-11	115-199
C04002		P070-00/ /A002		CB-LAV WTR HTR B (INOP)				001-099
C04002		P070-00/ /A002		CB-LAVATORY WATER HEATER B				115-199
	=B	D	W1252	0011	12		24-51-14	001-099
	=B	D	W1252	0068	12		24-51-14	001-099
	=B	D	W1252	0002	12		24-51-14	115-199
	=B	D	W1252	0008	12		24-51-14	115-199
	=L	D	W1252	0066	20		38-13-11	001-099
	=L	D	W1252	0125	20		38-13-11	115-199
C04003		P006-04/ /L024		CB-TAT PROBE HEAT				ALL
	=B	D	W0064	ZZAA	02		24-51-23	ALL
	=L	D	W0064	0201	20		30-33-11	ALL
C04014		P011-04/ /K024		CB-HYDRAULICS ELEC PUMP C-2				ALL
	=B	D	W0116	ZZOQ	00		24-54-21	001-099
	=B	D	W0116	ZZOR	00		24-54-21	001-099
	=B	D	W0116	0019	12		24-54-21	115-199
	=B	D	W0116	ZZOT	00		24-54-21	115-199
	=B	D	W0116	ZZOV	00		24-54-21	115-199
	=L	D	W0130	0280	16		29-11-31	ALL
C04019		P011-03/ /P017		CB-CABIN ZONE TEMP IND				ALL
	=B	D	W0112	ZZXC	02		24-54-11	ALL
	=B	D	W0112	ZZZT	02		24-54-11	ALL
	=L	D	W0126	0525	24		21-65-11	ALL
C04020		P011-04/ /P022		CB-ZONE FAN AFT				115-199
	=B	D	W0116	ZZCB	03		24-51-21	115-199
	=B	D	W0116	ZZCC	00		24-51-21	115-199
	=B	D	W0116	ZZXH	02		24-51-21	115-199
	=L	D	W0130	0285	24		21-61-31	115-199
C04021		P011-04/ /P021		CB-ZONE FAN FWD				115-199
	=B	D	W0116	ZZCC	00		24-51-21	115-199
	=B	D	W0116	ZZCD	00		24-51-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section C04000

Page 1

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C04021		P011-04/ /P021		CB-ZONE FAN FWD (continued)				115-199
	=L	D	W0130	0290	24		21-61-21	115-199
C04023		P011-02/ /D028		CB-HYDRAULICS ENG PUMP SUPPLY L				ALL
	=B	D	W0114	ZZPI	00		24-54-71	001-099
	=B	D	W0114	ZZPV	00		24-54-71	001-099
	=B	D	W0120	ZZBH	00		24-54-71	115-199
	=B	D	W0120	ZZOC	00		24-54-71	115-199
	=B	D	W0120	ZZXF	02		24-54-71	115-199
	=L	D	W0128	0910	22		29-11-11	001-099
	=L	D	W0134	0410	22		29-11-11	115-199
C04024		P011-03/ /K014		CB-HYDRAULICS LEFT ENGINE PUMP DEPRESS				001-099
C04024		P011-03/ /K014		CB-HYDRAULICS L ENG PUMP VLV DEPRESS				115-199
	=B	D	W0112	0010	12		24-54-11	001-099
	=B	D	W0112	ZZOP	00		24-54-11	001-099
	=B	D	W0112	ZZAQ	03		24-54-11	ALL
	=B	D	W0112	ZZOM	00		24-54-11	115-199
	=L	D	W0126	0135	22		29-11-11	ALL
C04025		P011-02/ /D029		CB-HYDRAULICS ENG PUMP SUPPLY RIGHT				001-099
C04025		P011-02/ /D029		CB-HYDRAULICS ENG PUMP SOV R				115-199
	=B	D	W0114	ZZPI	00		24-54-71	001-099
	=B	D	W0114	ZZPJ	04		24-54-71	001-099
	=B	D	W0114	ZZYC	02		24-54-71	001-099
	=B	D	W0120	ZZBH	00		24-54-71	115-199
	=B	D	W0120	ZZBJ	00		24-54-71	115-199
	=L	D	W0128	0720	22		29-11-21	001-099
	=L	D	W0134	0020	22		29-11-21	115-199
C04026		P011-04/ /K023		CB-HYDRAULICS R ENG PUMP DEPRESS				001-099
C04026		P011-04/ /K023		CB-HYDRAULICS R ENG PUMP VLV DEPRESS				115-199
	=B	D	W0116	ZZOR	00		24-54-21	001-099
	=B	D	W0116	ZZOA	00		24-54-21	ALL
	=B	D	W0116	ZZOV	00		24-54-21	115-199
	=L	D	W0130	0295	22		29-11-21	ALL
C04028		P037-00/ /E002		CB-TAPE RPDR				ALL
	=B	D	W1272	0036	12		24-51-24	001-099
	=B	D	W1272	ZZXR	02		24-51-24	ALL
	=B	D	W1272	0036	14		24-51-24	115-199

HOOKUP LIST

D280N032

91-21-51

Section C04000

Page 2

Jan 21/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C04028		P037-00/ /E002		CB-TAPE RPDR (continued)				ALL
	=L	D	W1272	0240	22		23-31-19	001-099
	=L	D	W1272	0240	22		23-34-15	115-199
C04029		P011-04/ /P025		CB-ZONE DUCT OVHT F/D				ALL
	=B	D	W0116	ZZOU	00		24-54-21	001-099
	=B	D	W0116	ZZAG	04		24-54-21	ALL
	=B	D	W0116	ZZOP	00		24-54-21	115-199
	=L	D	W0130	0016	24		21-61-11	ALL
C04030		P011-04/ /P026		CB-ZONE DUCT OVHT FWD				ALL
	=B	D	W0116	ZZOU	00		24-54-21	001-099
	=B	D	W0116	ZZOV	00		24-54-21	001-099
	=B	D	W0116	ZZYO	02		24-54-21	ALL
	=B	D	W0116	ZZON	00		24-54-21	115-199
	=B	D	W0116	ZZOP	00		24-54-21	115-199
	=L	D	W0130	0017	24		21-61-21	ALL
C04031		P011-04/ /P027		CB-ZONE DUCT OVHT AFT				ALL
	=B	D	W0116	ZZOT	00		24-54-21	001-099
	=B	D	W0116	ZZOV	00		24-54-21	001-099
	=B	D	W0116	ZZXB	02		24-54-21	ALL
	=B	D	W0116	ZZOM	00		24-54-21	115-199
	=B	D	W0116	ZZON	00		24-54-21	115-199
	=L	D	W0130	0006	24		21-61-31	ALL
C04032		P011-03/ /J012		CB-ELEVATOR LIMIT				ALL
	=B	D	W0112	ZZAT	02		24-54-11	001-099
	=B	D	W0112	0219	12		24-54-11	ALL
	=B	D	W0112	ZZZB	02		24-54-11	ALL
	=B	D	W0112	ZZFG	02		24-54-11	115-199
	=L	D	W0126	0007	20		27-31-22	ALL
C04033		P011-01/ /H017		CB-FLT CONT SHUTOFF TAIL L				ALL
	=B	D	W0110	ZZXZ	02		24-54-11	001-099
	=B	D	W0110	ZZAF	02		24-54-11	ALL
	=B	D	W0110	ZZYZ	02		24-54-11	115-199
	=L	D	W0124	0316	22		27-23-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section C04000

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C04034		P011-02/ /H028		CB-FLT/CONT S/O TAIL R				ALL
	=B	D	W0114	ZZYW	02		24-54-21	001-099
	=B	D	W0114	0003	12		24-54-21	ALL
	=B	D	W0114	ZZYM	02		24-54-21	115-199
	=L	D	W0128	0210	22		27-23-11	ALL
C04035		P011-01/ /H018		CB-FLT CONT SHUTOFF TAIL C				ALL
	=B	D	W0110	0016	08		24-54-11	ALL
	=B	D	W0110	ZZAF	02		24-54-11	ALL
	=L	D	W0124	0315	22		27-23-11	ALL
C04036		P011-04/ /M024		CB-LEFT PACK STBY PWR				ALL
	=B	D	W0116	0041	12		24-51-25	ALL
	=B	D	W0116	ZZYL	02		24-51-25	ALL
	=L	D	W0130	0014	22		21-51-13	ALL
C04037		P011-02/ /A026		CB-LEFT PACK STBY CONT				001-099
C04037		P011-02/ /A026		CB-L PACK STANDBY CONT				115-199
	=B	D	W0114	ZZCJ	04		24-54-71	001-099
	=B	D	W0114	ZZNH	00		24-54-71	001-099
	=B	D	W0120	ZZAJ	04		24-54-71	115-199
	=B	D	W0120	ZZCD	00		24-54-71	115-199
	=L	D	W0128	0010	22		21-51-13	001-099
	=L	D	W0134	0050	22		21-51-13	115-199
C04038		P011-03/ /M015		CB-RIGHT PACK STANDBY PWR				ALL
	=B	D	W0112	0024	12		24-51-15	ALL
	=B	D	W0112	ZZYK	02		24-51-15	ALL
	=L	D	W0126	0527	20		21-51-23	ALL
C04039		P011-01/ /A015		CB-RIGHT PACK STBY CONT				001-099
C04039		P011-01/ /A016		CB-RIGHT PACK STANDBY CONT				115-199
	=B	D	W0110	ZZAL	03		24-54-73	001-099
	=B	D	W0110	ZZOA	00		24-54-73	001-099
	=B	D	W0110	ZZZL	02		24-54-73	001-099
	=B	D	W0118	ZZAH	03		24-54-73	115-199
	=B	D	W0118	ZZOM	00		24-54-73	115-199
	=B	D	W0118	ZZZL	02		24-54-73	115-199
	=L	D	W0124	0528	20		21-51-23	001-099
	=L	D	W0124	0628	20		21-51-23	001-099

HOOKUP LIST

D280N032

91-21-51

Section C04000

Page 4

Oct 09/2008

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C04039		P011-01/ /A015		CB-RIGHT PACK STBY CONT (continued)				001-099
C04039		P011-01/ /A016		CB-RIGHT PACK STANDBY CONT (continued)				115-199
	=L	D	W0132	0051	20		21-51-23	115-199
	=L	D	W0132	0052	20		21-51-23	115-199
C04042		P037-00/ /E006		CB-SVCE OUTLET E3				ALL
	=B	D	W1272	ZZYC	02		24-51-52	ALL
	=L	D	W1272	0241	18		25-29-11	ALL
C04043		P011-03/ /K015		CB-HYDRAULICS ELEC PUMP C-1				ALL
	=B	D	W0112	0013	12		24-54-11	001-099
	=B	D	W0112	ZZON	00		24-54-11	001-099
	=B	D	W0112	ZZOP	00		24-54-11	001-099
	=B	D	W0112	0013	08		24-54-11	115-199
	=B	D	W0112	ZZOL	00		24-54-11	115-199
	=B	D	W0112	ZZOM	00		24-54-11	115-199
	=L	D	W0126	0529	16		29-11-31	ALL
C04044		P011-03/ /K016		CB-HYDRAULICS ELEC PUMP R				ALL
	=B	D	W0112	ZZON	00		24-54-11	001-099
	=B	D	W0112	ZZXP	02		24-54-11	001-099
	=B	D	W0112	ZZAQ	03		24-54-11	ALL
	=B	D	W0112	ZZOL	00		24-54-11	115-199
	=L	D	W0126	0530	16		29-11-22	ALL
C04045		P011-04/ /K025		CB-HYDRAULICS ELEC PUMP L				ALL
	=B	D	W0116	ZZOQ	00		24-54-21	001-099
	=B	D	W0116	ZZAM	04		24-54-21	ALL
	=B	D	W0116	ZZOT	00		24-54-21	115-199
	=L	D	W0130	0246	16		29-11-12	ALL
C04046		E006-00/ /		CB-CARGO LIGHTS L				ALL
	=B	D	W2662	0038	12		33-37-21	ALL
	=B	D	W2662	0039	14		33-37-21	ALL
	=L	D	W2662	0020	18		33-37-21	ALL
C04047		E006-00/ /		CB-CARGO LIGHTS R				ALL
	=B	D	W2662	0039	14		33-37-21	ALL
	=B	D	W2662	0040	14		33-37-21	ALL
	=L	D	W2662	0012	18		33-37-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section C04000

Page 5

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C04048		0460/163/R030		CB-FWD CARGO COMPARTMENT LIGHTS				ALL
	=B	D	W4162	0037	14		33-37-11	ALL
	=B	D	W4162	0038	14		33-37-11	ALL
	=L	D	W4162	0012	18		33-37-11	ALL
C04051		P011-01/ /F007		CB-ATC L				ALL
	=B	D	W0110	0048	12		24-51-15	ALL
	=L	D	W0124	0044	22		34-53-11	ALL
C04052		P011-02/ /F028		CB-ATC R				ALL
	=B	D	W0114	0102	16		24-51-22	ALL
	=B	D	W0114	ZZYQ	02		24-51-22	ALL
	=L	D	W0128	0020	22		34-53-21	ALL
C04054		P011-02/ /D031		CB-HYDRAULICS PTU CONT				ALL
	=B	D	W0114	ZZCB	06		24-54-71	001-099
	=B	D	W0114	ZZPH	00		24-54-71	001-099
	=B	D	W0114	ZZYC	02		24-54-71	001-099
	=B	D	W0120	ZZBE	00		24-54-71	115-199
	=B	D	W0120	ZZBJ	00		24-54-71	115-199
	=L	D	W0128	0725	22		29-22-11	001-099
	=L	D	W0134	0025	20		29-22-11	115-199
C04059		P011-03/ /N017		CB-FAN CONTROL FWD CARGO				001-099
C04059		P011-03/ /N012		CB-FAN CONTROL FWD CARGO				115-199
	=B	D	W0112	ZZHH	02		24-54-11	001-099
	=B	D	W0112	0641	16		24-54-11	115-199
	=B	D	W0112	ZZZD	02		24-54-11	115-199
	=L	D	W0126	0010	24		21-43-11	ALL
C04061		P011-02/ /D026		CB-RAT AUTO CONT				ALL
	=B	D	W0114	ZZPJ	04		24-54-71	001-099
	=B	D	W0114	ZZPU	00		24-54-71	001-099
	=B	D	W0114	ZZXB	02		24-54-71	001-099
	=B	D	W0120	ZZAA	11		24-54-71	115-199
	=B	D	W0120	ZZOD	00		24-54-71	115-199
	=L	D	W0128	0911	22		29-21-31	001-099
	=L	D	W0134	0411	20		29-21-31	115-199

HOOKUP LIST

D280N032

91-21-51

Section C04000

Page 6

Oct 09/2008

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C04062		P006-01/ /F001		CB-RAT MAN PWR				ALL
	=B	D	W0060	ZZGD	02		24-54-72	001-099
	=B	D	W0060	ZZXH	02		24-54-72	001-099
	=B	D	W0060	0019	12		24-54-72	115-199
	=L	D	W0060	0312	18		29-21-31	ALL
C04069		P011-03/ /N013		CB-EQUIP COOLING LO FLOW DET				001-099
C04069		P011-03/ /N017		CB-EQUIP COOLING LO FLOW DET				115-199
	=B	D	W0112	0013	12		24-54-11	001-099
	=B	D	W0112	ZZZD	02		24-54-11	001-099
	=B	D	W0112	0641	16		24-54-11	115-199
	=B	D	W0112	ZZHH	02		24-54-11	115-199
	=L	D	W0126	0011	22		21-58-11	ALL
C04070		P006-01/ /D006		CB-EQUIP COOL GND WARN AND TEST				ALL
	=B	D	W0060	ZZFF	06		24-54-72	ALL
	=B	D	W0060	ZZFG	00		24-54-72	ALL
	=L	D	W0060	0027	24		21-58-12	ALL
	=L	D	W0060	0115	22		21-58-11	ALL
C04071		P011-03/ /N018		CB-AFT CARGO HEAT				ALL
	=B	D	W0112	ZZXP	02		24-54-11	001-099
	=B	D	W0112	ZZHH	02		24-54-11	ALL
	=B	D	W0112	0013	08		24-54-11	115-199
	=L	D	W0126	0014	22		21-44-11	ALL
C04072		P011-04/ /N022		CB-FAN CONT AFT CARGO				001-099
C04072		P011-04/ /N021		CB-FAN CONT AFT CARGO				115-199
	=B	D	W0116	ZZYI	02		24-54-21	001-099
	=B	D	W0116	ZZXC	02		24-54-21	ALL
	=B	D	W0116	ZZYK	02		24-54-21	ALL
	=L	D	W0130	0012	24		21-44-11	ALL
C04073		P037-00/ /H001		CB-PASS READING LIGHTS FWD RIGHT				ALL
	=B	D	W1272	0051	14		24-51-24	ALL
	=B	D	W1272	0052	14		24-51-24	ALL
	=L	D	W1272	0243	20		33-23-21	ALL
C04074		P037-00/ /H003		CB-PASS READING LIGHTS RIGHT MID FWD				ALL
	=B	D	W1272	0017	14		24-51-24	ALL

HOOKUP LIST

D280N032

91-21-51

Section C04000

Page 7

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C04074		P037-00/ /H003		CB-PASS READING LIGHTS RIGHT MID FWD (continued)				ALL
	=B	D	W1272	0041	14		24-51-24	ALL
	=B	D	W1272	0040	10		24-51-24	115-199
	=L	D	W1272	0244	20		33-23-22	ALL
C04075		P037-00/ /H004		CB-PASS READING LIGHTS RIGHT MID AFT				ALL
	=B	D	W1272	0076	12		24-51-24	001-099
	=B	D	W1272	ZZXJ	02		24-51-24	ALL
	=B	D	W1272	0033	10		24-51-24	115-199
	=L	D	W1272	0245	20		33-23-23	ALL
C04076		P037-00/ /H002		CB-PASS READING LIGHTS AFT RIGHT				ALL
	=B	D	W1272	0034	14		24-51-24	ALL
	=B	D	W1272	ZZXJ	02		24-51-24	ALL
	=L	D	W1272	0246	20		33-23-24	ALL
C04078		P011-03/ /J002		CB-EICAS CMPTR L				ALL
	=B	D	W0112	0112	16		24-51-11	001-099
	=B	D	W0112	ZZXJ	02		24-51-11	ALL
	=B	D	W0112	0209	16		24-51-11	115-199
	=L	D	W0126	0059	20		31-41-11	ALL
C04079		P011-04/ /J029		CB-EICAS CMPTR R				ALL
	=B	D	W0116	0209	16		24-51-21	ALL
	=L	D	W0130	0123	22		31-41-21	ALL
C04081		P011-03/ /J003		CB-EICAS UPPER IND				ALL
	=B	D	W0112	0111	16		24-51-11	001-099
	=B	D	W0112	ZZYE	02		24-51-11	001-099
	=B	D	W0112	0630	16		24-51-11	115-199
	=B	D	W0112	0631	16		24-51-11	115-199
	=L	D	W0126	0209	22		31-41-11	ALL
C04082		P011-04/ /J030		CB-EICAS LOWER IND				ALL
	=B	D	W0116	0214	16		24-51-21	001-099
	=B	D	W0116	ZZXD	02		24-51-21	ALL
	=B	D	W0116	0215	16		24-51-21	115-199
	=L	D	W0130	0108	22		31-41-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section C04000

Page 8

Oct 09/2008

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C04085		P011-02/ /C020		CB-EQUIP COOL SMOKE DET/CONT				ALL
	=B	D	W0114	ZZAJ	04		24-54-71	001-099
	=B	D	W0114	ZZPD	00		24-54-71	001-099
	=B	D	W0114	ZZXK	02		24-54-71	001-099
	=B	D	W0120	ZZDH	04		24-54-71	115-199
	=B	D	W0120	ZZDJ	00		24-54-71	115-199
	=B	D	W0120	ZZYH	02		24-54-71	115-199
	=L	D	W0128	0865	24		21-58-12	001-099
	=L	D	W0128	0920	22		21-58-12	001-099
	=L	D	W0134	0315	24		21-58-12	115-199
	=L	D	W0134	0420	22		21-58-12	115-199
C04086		P034-00/ /AA03		CB-FILL CONT LAV				ALL
	=B	D	W1190	ZZAA	03		24-54-61	001-099
	=B	D	W1190	ZZAN	00		24-54-61	ALL
	=B	D	W1190	ZZAF	09		24-54-61	115-199
	=L	D	W1190	0305	24		38-32-21	001-099
	=L	D	W1190	0305	20		38-32-21	115-199
C04087		P011-03/ /P006		CB-SIDEWALL				115-199
	=B	D	W0112	0403	16		24-51-11	115-199
	=B	D	W0112	0404	16		24-51-11	115-199
	=L	D	W0126	0314	22		33-13-71	115-199
C04094		P011-04/ /J032		CB-EICAS PILOTS DSP				ALL
	=B	D	W0116	0011	16		24-51-21	ALL
	=B	D	W0116	ZZXD	02		24-51-21	ALL
	=L	D	W0130	0222	22		31-41-19	ALL
C04095		P034-00/ /BD02		CB-THSHD LAV LIGHTS				ALL
	=B	D	W1196	0005	10		24-53-51	ALL
	=B	D	W1196	ZZAE	02		24-53-51	ALL
	=L	D	W1196	0304	22		33-26-31	ALL
C04097		P006-01/ /A004		CB-BAT CUR MON PWR				ALL
	=B	D	W0060	ZZAA	03		24-54-71	ALL
	=B	D	W0060	ZZAB	00		24-54-71	ALL
	=B	D	W0060	ZZXA	02		24-54-71	ALL
	=L	D	W0060	0005	22		24-34-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section C04000

Page 9

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C04099		P011-03/ /J014		CB-AILERON POS L				ALL
	=B	D	W0112	ZZCD	02		24-53-11	ALL
	=B	D	W0112	ZZXV	02		24-53-11	ALL
	=L	D	W0126	0003	22		27-18-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section C04000

Page 10 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C04100		P011-04/ /J023		CB-AILERON POS R				ALL
	=B	D	W0116	0105	14		24-53-21	ALL
	=B	D	W0116	ZZBB	02		24-53-21	ALL
	=L	D	W0130	0007	22		27-18-11	ALL
C04101		P011-03/ /J013		CB-ELEVATOR POS L				ALL
	=B	D	W0112	0203	14		24-53-11	ALL
	=B	D	W0112	ZZCD	02		24-53-11	ALL
	=L	D	W0126	0111	22		27-38-11	ALL
C04102		P011-04/ /J022		CB-ELEV POS R				ALL
	=B	D	W0116	ZZBB	02		24-53-21	ALL
	=L	D	W0130	0121	22		27-38-11	ALL
C04103		P011-03/ /L009		CB-LEFT ENGINE EPR XMTR				ALL
	=B	D	W0112	ZZYE	02		24-51-11	001-099
	=B	D	W0112	0631	16		24-51-11	115-199
	=L	D	W0126	0025	22		77-11-11	ALL
C04104		P011-04/ /L036		CB-RIGHT ENGINE EPR XMTR				001-099
C04104		P011-04/ /L016		CB-RIGHT ENGINE EPR XMTR				115-199
	=B	D	W0116	0011	16		24-51-21	ALL
	=B	D	W0116	0031	16		24-51-21	ALL
	=L	D	W0130	0037	22		77-11-11	ALL
C04107		P011-03/ /L007		CB-LEFT ENGINE IDLE CONT				ALL
	=B	D	W0112	ZZYH	02		24-54-11	ALL
	=B	D	W0112	ZZXB	02		24-54-11	115-199
	=B	D	W0112	ZZXR	02		24-54-11	115-199
	=L	D	W0126	0009	22		76-11-21	ALL
C04108		P011-04/ /L033		CB-RIGHT ENGINE IDLE CONT				ALL
	=B	D	W0116	ZZAP	03		24-54-21	001-099
	=B	D	W0116	ZZAR	00		24-54-21	001-099
	=B	D	W0116	0013	12		24-54-21	115-199
	=B	D	W0116	ZZYC	02		24-54-21	115-199
	=L	D	W0130	0025	22		76-11-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section C04100

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C04110		P011-01/ /C017		CB-FLAP/SLAT SHUTOFF 1				001-099
C04110		P011-01/ /C018		CB-FLAP/SLAT SHUTOFF 1				115-199
	=B	D	W0110	ZZXG	02		24-54-73	001-099
	=B	D	W0118	ZZXG	02		24-54-73	115-199
	=L	D	W0124	0041	22		27-51-31	001-099
	=L	D	W0132	0053	22		27-51-31	115-199
C04113		P011-02/ /D021		CB-ENGINES HP BLD VLV L				ALL
	=B	D	W0114	ZZAC	00		24-54-71	001-099
	=B	D	W0114	ZZAE	00		24-54-71	001-099
	=B	D	W0120	ZZBP	00		24-54-71	115-199
	=B	D	W0120	ZZOF	00		24-54-71	115-199
	=L	D	W0128	0412	16		75-31-11	001-099
	=L	D	W0134	0412	16		75-31-11	115-199
C04114		P011-02/ /D022		CB-ENGINES HP BLD VLV R				ALL
	=B	D	W0114	ZZAE	00		24-54-71	001-099
	=B	D	W0114	ZZAH	00		24-54-71	001-099
	=B	D	W0120	ZZBN	00		24-54-71	115-199
	=B	D	W0120	ZZBP	00		24-54-71	115-199
	=L	D	W0128	0002	16		75-31-11	001-099
	=L	D	W0134	0005	16		75-31-11	115-199
C04118		P011-01/ /A004		CB-ADF R				001-099
C04118		P011-02/ /F027		CB-ADF R				115-199
	=B	D	W0110	ZZAS	00		24-54-73	001-099
	=B	D	W0110	ZZKE	03		24-54-73	001-099
	=B	D	W0118	ZZAK	00		24-54-73	115-199
	=B	D	W0118	ZZBB	03		24-54-73	115-199
	=L	D	W0124	0116	22		34-57-21	001-099
	=L	D	W0132	0049	22		34-57-21	115-199
C04119		P011-03/ /L004		CB-LEFT ENGINE EEC LIMITER				ALL
	=B	D	W0112	0010	12		24-54-11	001-099
	=B	D	W0112	ZZAD	02		24-54-11	001-099
	=B	D	W0112	ZZXB	02		24-54-11	115-199
	=L	D	W0126	0031	18		73-21-11	ALL
C04126		P011-03/ /R002		CB-ENG START LD SHD RESET				ALL
	=B	D	W0112	ZZOI	00		24-54-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section C04100

Page 2

Oct 09/2008

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C04126		P011-03/ /R002		CB-ENG START LD SHD RESET (continued)				ALL
	=B	D	W0112	ZZAC	04		24-54-11	ALL
	=B	D	W0112	ZZOG	00		24-54-11	115-199
	=L	D	W0126	0061	24		24-51-71	001-099
	=L	D	W0126	0061	22		24-51-71	115-199
C04127		P011-04/ /L031		CB-RIGHT ENGINE EEC LIMITER				ALL
	=B	D	W0116	ZZAP	03		24-54-21	001-099
	=B	D	W0116	ZZPD	00		24-54-21	001-099
	=B	D	W0116	ZZAI	02		24-54-21	115-199
	=B	D	W0116	ZZXA	02		24-54-21	115-199
	=L	D	W0130	0041	18		73-21-21	ALL
C04129		P011-03/ /L005		CB-LEFT ENGINE EEC SUPV				ALL
	=B	D	W0112	ZZAD	02		24-54-11	001-099
	=B	D	W0112	ZZYH	02		24-54-11	ALL
	=L	D	W0126	0044	18		73-21-12	ALL
C04130		P011-04/ /L032		CB-RIGHT ENGINE EEC SUPV				ALL
	=B	D	W0116	0037	12		24-54-21	001-002
	=B	D	W0116	ZZAR	00		24-54-21	001-099
	=B	D	W0116	ZZPD	00		24-54-21	001-099
	=B	D	W0116	ZZYD	02		24-54-21	001-099
	=B	D	W0116	ZZYC	02		24-54-21	003-099
	=B	D	W0116	ZZAI	02		24-54-21	115-199
	=L	D	W0130	0043	18		73-21-22	ALL
C04131		P011-04/ /R025		CB-PROBE HEAT IND TAT				ALL
	=B	D	W0116	ZZOI	02		24-54-21	001-099
	=B	D	W0116	ZZXE	02		24-54-21	001-099
	=B	D	W0116	ZZZB	02		24-54-21	001-099
	=B	D	W0116	ZZYS	02		24-54-21	ALL
	=B	D	W0116	ZZBC	02		24-54-21	115-199
	=B	D	W0116	ZZYV	02		24-54-21	115-199
	=L	D	W0130	0045	22		30-33-11	ALL
C04132		P011-02/ /D034		CB-FUEL DISAGREE ENABLE R				ALL
	=B	D	W0114	ZZPF	00		24-54-71	001-099
	=B	D	W0114	ZZPT	00		24-54-71	001-099
	=B	D	W0114	ZZXG	02		24-54-71	001-099
	=B	D	W0120	ZZBC	00		24-54-71	115-199

HOOKUP LIST

D280N032

91-21-51

Section C04100

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C04132		P011-02/ /D034		CB-FUEL DISAGREE ENABLE R (continued)				ALL
	=B	D	W0120	ZZOB	00		24-54-71	115-199
	=B	D	W0120	ZZXG	02		24-54-71	115-199
	=L	D	W0128	0818	22		28-22-21	001-099
	=L	D	W0134	0218	22		28-22-21	115-199
C04133		P011-02/ /D033		CB-FUEL DISAGREE ENABLE L				ALL
	=B	D	W0114	ZZPF	00		24-54-71	001-099
	=B	D	W0114	ZZPG	00		24-54-71	001-099
	=B	D	W0120	ZZBC	00		24-54-71	115-199
	=B	D	W0120	ZZBD	00		24-54-71	115-199
	=L	D	W0128	0915	22		28-22-21	001-099
	=L	D	W0134	0415	22		28-22-21	115-199
C04134		P037-00/ /F001		CB-LAV WATER HEATERS C				ALL
	=B	D	W1272	0053	12		24-51-24	001-099
	=B	D	W1272	0052	14		24-51-24	ALL
	=B	D	W1272	0053	14		24-51-24	115-199
	=L	D	W1272	0247	20		38-13-11	ALL
C04135		P037-00/ /F002		CB-LAV WATER HEATERS D				ALL
	=B	D	W1272	0043	12		24-51-24	001-099
	=B	D	W1272	ZZYA	02		24-51-24	ALL
	=B	D	W1272	0043	14		24-51-24	115-199
	=L	D	W1272	0248	20		38-13-11	001-099
	=L	D	W1272	0248	18		38-13-11	115-199
C04136		P006-01/ /C001		CB-FUEL COND CONT L				ALL
	=B	D	W0060	0010	12		24-54-71	ALL
	=B	D	W0060	ZZEE	02		24-54-71	ALL
	=L	D	W0060	0205	22		76-11-11	ALL
C04137		P006-01/ /C002		CB-FUEL COND CONT R				ALL
	=B	D	W0060	ZZEE	02		24-54-71	ALL
	=B	D	W0060	ZZXB	02		24-54-71	ALL
	=B	D	W0072	0022	14		24-54-71	ALL
	=L	D	W0060	0101	22		76-11-12	ALL
C04142		P006-02/ /C011		CB-L DC VOLT SENSE				ALL
	=B	D	W0072	0019	12		24-32-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section C04100

Page 4

Oct 09/2008

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C04142		P006-02/ /C011		CB-L DC VOLT SENSE (continued)				ALL
	= B	D	W0072	ZZCC	03		24-32-11	ALL
	= B	D	W0072	ZZEE	00		24-32-11	ALL
	= L	D	W0072	0004	22		24-34-11	ALL
	= L	D	W0072	0007	22		24-34-11	ALL
C04143		P006-02/ /H010		CB-R DC VOLT SENSE				ALL
	= B	D	W0070	ZZAD	00		24-54-21	001-099
	= B	D	W0070	ZZAC	03		24-54-21	ALL
	= B	D	W0070	ZZXB	02		24-54-21	ALL
	= B	D	W0070	ZZOD	00		24-54-21	115-199
	= L	D	W0070	0006	22		24-34-11	ALL
	= L	D	W0070	0008	22		24-34-11	ALL
C04144		P011-04/ /R033		CB-DOOR IND				ALL
	= B	D	W0116	ZZOF	00		24-54-21	001-099
	= B	D	W0116	ZZAF	04		24-54-21	ALL
	= B	D	W0116	ZZYY	02		24-54-21	ALL
	= B	D	W0116	ZZOG	00		24-54-21	115-199
	= L	D	W0130	0055	22		52-71-11	ALL
C04146		P034-00/ /BC02		CB-MAIN ELEC EQUIP CTR LIGHTS				ALL
	= B	D	W1196	0005	10		24-53-51	ALL
	= B	D	W1196	ZZAF	02		24-53-51	ALL
	= L	D	W1196	0110	18		33-31-41	ALL
C04149		0460/163/R030		CB-CARGO LIGHTS NO 1 DOOR				ALL
	= B	D	W4162	0038	14		33-37-11	ALL
	= L	D	W4162	0039	16		33-37-11	ALL
C04150		E006-00/ /		CB-NO 2 DOOR CARGO LIGHTS				ALL
	= B	D	W2662	0040	14		33-37-21	ALL
	= L	D	W2662	0029	16		33-37-21	001-099
	= L	D	W2662	0042	20		33-37-21	115-199
C04151		P011-02/ /D023		CB-STBY IND				ALL
	= B	D	W0114	ZZAH	00		24-54-71	001-099
	= B	D	W0114	ZZCO	05		24-54-71	001-099
	= B	D	W0114	ZZXB	02		24-54-71	001-099
	= B	D	W0120	0102	12		24-54-71	115-199

HOOKUP LIST

D280N032

91-21-51

Section C04100

Page 5

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C04151		P011-02/ /D023		CB-STBY IND (continued)				ALL
	=B	D	W0120	ZZBN	00		24-54-71	115-199
	=B	D	W0120	ZZOE	00		24-54-71	115-199
	=L	D	W0128	0916	24		77-12-11	001-099
	=L	D	W0134	0416	24		77-12-11	115-199
C04152		P011-02/ /D024		CB-ENGINES STBY IND 2				115-199
	=B	D	W0120	ZZBR	00		24-54-71	115-199
	=B	D	W0120	ZZOE	00		24-54-71	115-199
	=L	D	W0134	0104	24		77-12-11	115-199
C04169		P037-00/ /D008		CB-LAV FILL VLV				ALL
	=B	D	W1272	ZZYH	02		24-51-52	001-099
	=B	D	W1272	0024	12		24-51-52	ALL
	=B	D	W1272	0023	12		24-51-52	115-199
	=L	D	W1272	0307	22		38-32-21	001-099
	=L	D	W1272	0308	22		38-32-21	001-099
	=L	D	W1272	0307	20		38-32-21	115-199
	=L	D	W1272	0308	20		38-32-21	115-199
C04175		P011-02/ /D032		CB-FUEL DISAGREE ENABLE APU				ALL
	=B	D	W0114	ZZPG	00		24-54-71	001-099
	=B	D	W0114	ZZPH	00		24-54-71	001-099
	=B	D	W0120	ZZBD	00		24-54-71	115-199
	=B	D	W0120	ZZBE	00		24-54-71	115-199
	=L	D	W0128	0918	22		28-25-21	001-099
	=L	D	W0134	0418	20		28-25-21	115-199
C04177		P006-01/ /F005		CB-LANDING GEAR ALTN EXT CONT				ALL
	=B	D	W0060	ZZGG	02		24-54-72	ALL
	=B	D	W0060	ZZXG	02		24-54-72	ALL
	=L	D	W0060	0206	18		32-35-11	ALL
C04178		P011-03/ /S017		CB-LANDING GEAR DOORS CLOSED GROUND ACS				ALL
	=B	D	W0112	ZZAA	02		24-54-11	001-099
	=B	D	W0112	ZZXD	02		24-54-11	001-099
	=B	D	W0112	0018	08		24-54-11	115-199
	=B	D	W0112	ZZOA	00		24-54-11	115-199
	=B	D	W0112	ZZOB	00		24-54-11	115-199
	=L	D	W0126	0081	20		32-12-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section C04100

Page 6

Oct 09/2008

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C04180		P034-00/ /A007		CB-AFT CARGO LOADER CONT				115-199
	=B	D	W1190	ZZAI	00		24-54-61	115-199
	=B	D	W1190	ZZAK	00		24-54-61	115-199
	=L	+	W1190	0106	22		25-51-11	115-199
	=L	D	W1190	0205	22		25-51-21	115-199
C04183		P011-04/ /R034		CB-DOOR GIRT BAR ENT DIM				ALL
	=B	D	W0116	0102	14		24-53-21	001-099
	=B	D	W0116	0101	14		24-53-21	ALL
	=B	D	W0116	0633	14		24-53-21	115-199
	=L	D	W0130	0247	22		25-66-11	ALL
C04184		P011-04/ /N025		CB-ZONE TEMP CONT VLV CL FLT DECK				001-099
C04184		P011-04/ /N025		CB-ZONE TRIM VLV CLOSE F/D				115-199
	=B	D	W0116	0683	16		24-51-21	001-099
	=B	D	W0116	ZZCA	02		24-51-21	ALL
	=B	D	W0116	ZZXH	02		24-51-21	115-199
	=L	D	W0130	0232	24		21-61-11	001-099
	=L	D	W0130	0040	24		21-61-11	ALL
C04185		P011-04/ /N026		CB-ZONE TEMP CONT VLV CL FWD				001-099
C04185		P011-04/ /N026		CB-ZONE TRIM VLV CLOSE FWD				115-199
	=B	D	W0116	0201	16		24-51-21	ALL
	=B	D	W0116	ZZCA	02		24-51-21	ALL
	=L	D	W0130	0290	24		21-61-21	001-099
	=L	D	W0130	0005	24		21-61-21	ALL
C04186		P011-04/ /N027		CB-ZONE TEMP CONT VLV CL AFT				001-099
C04186		P011-04/ /N027		CB-ZONE TRIM VLV CLOSE AFT				115-199
	=B	D	W0116	0208	16		24-51-21	ALL
	=B	D	W0116	0210	16		24-51-21	ALL
	=L	D	W0130	0285	24		21-61-31	001-099
	=L	D	W0130	0033	24		21-61-31	ALL
C04189		P011-04/ /J031		CB-EICAS DISPLAY SW				ALL
	=B	D	W0116	0037	12		24-54-21	001-002
	=B	D	W0116	ZZYB	02		24-54-21	ALL
	=B	D	W0116	ZZXA	02		24-54-21	115-199
	=B	D	W0116	ZZYC	02		24-54-21	115-199
	=L	D	W0130	0122	22		31-41-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section C04100

Page 7

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C04192		P011-04/ /K019		CB-HYDRAULICS QTY CTR				ALL
	=B	D	W0116	0301	12		24-51-52	ALL
	=B	D	W0116	0302	12		24-51-52	ALL
	=L	D	W0130	0048	22		29-33-11	ALL
C04193		P011-04/ /K021		CB-HYDRAULICS QTY R				ALL
	=B	D	W0116	0308	12		24-51-52	ALL
	=L	D	W0130	0047	22		29-33-11	ALL
C04194		P011-01/ /D005		CB-PROBE HEAT IND AOA LEFT				ALL
	=B	D	W0110	ZZOF	00		24-54-73	001-099
	=B	D	W0110	ZZOG	00		24-54-73	001-099
	=B	D	W0118	ZZOF	00		24-54-73	115-199
	=B	D	W0118	ZZOG	00		24-54-73	115-199
	=L	D	W0124	0081	24		30-32-11	001-099
	=L	D	W0132	0054	22		30-32-11	115-199
C04195		P011-04/ /R027		CB-PROBE HEAT IND AOA R				ALL
	=B	D	W0116	ZZXE	02		24-54-21	001-099
	=B	D	W0116	ZZZA	02		24-54-21	ALL
	=B	D	W0116	ZZYV	02		24-54-21	115-199
	=L	D	W0130	0051	24		30-32-11	001-099
	=L	D	W0130	0051	22		30-32-11	115-199
C04196		P011-03/ /Q018		CB-HI STAGE SW OVER L				ALL
	=B	D	W0112	ZZXK	02		24-54-11	001-099
	=B	D	W0112	ZZXC	02		24-54-11	ALL
	=B	D	W0112	0018	08		24-54-11	115-199
	=L	D	W0126	0002	22		36-11-12	ALL
C04197		P011-04/ /Q027		CB-HI STAGE SW OVER R				ALL
	=B	D	W0116	ZZXB	02		24-54-21	ALL
	=B	D	W0116	ZZYS	02		24-54-21	ALL
	=L	D	W0130	0049	24		36-11-22	ALL

HOOKUP LIST

D280N032

91-21-51

Section C04100

Page 8 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C04203		P070-00/ /B022		CB-LOGO LTS L				ALL
	=B	D	W1252	0046	12		24-51-14	ALL
	=B	D	W1252	ZZCC	02		24-51-14	ALL
	=L	D	W1252	0047	20		33-45-11	ALL
C04204		P070-00/ /B023		CB-LOGO LTS R				ALL
	=B	D	W1252	ZZCC	02		24-51-14	ALL
	=L	D	W1252	0048	20		33-45-11	ALL
C04205		P011-01/ /B013		CB-CABIN ALTM				ALL
	=B	D	W0110	0730	16		24-54-73	001-099
	=B	D	W0110	ZZKD	02		24-54-73	001-099
	=B	D	W0118	0030	16		24-54-73	115-199
	=B	D	W0118	ZZBD	02		24-54-73	115-199
	=L	D	W0124	0957	24		21-33-11	001-099
	=L	D	W0132	0357	24		21-33-11	115-199
C04206		P011-01/ /B012		CB-CABIN DIFF PRESS IND				ALL
	=B	D	W0110	ZZKD	02		24-54-73	001-099
	=B	D	W0110	ZZZI	02		24-54-73	001-099
	=B	D	W0110	ZZZQ	02		24-54-73	001-099
	=B	D	W0118	ZZBD	02		24-54-73	115-199
	=B	D	W0118	ZZXB	02		24-54-73	115-199
	=B	D	W0118	ZZZI	02		24-54-73	115-199
	=L	D	W0124	0859	24		21-33-11	001-099
	=L	D	W0132	0259	24		21-33-11	115-199
C04207		P011-03/ /Q017		CB-DUCT LEAK DET L				ALL
	=B	D	W0112	0401	16		24-51-11	ALL
	=B	D	W0112	ZZXZ	02		24-51-11	ALL
	=L	D	W0126	0532	24		26-18-11	ALL
C04208		P011-04/ /Q025		CB-DUCT LEAK DET R				ALL
	=B	D	W0116	0206	16		24-51-21	ALL
	=B	D	W0116	0623	16		24-51-21	ALL
	=L	D	W0130	0248	24		26-18-11	ALL
C04209		P011-04/ /J021		CB-STICK SHAKER R				ALL
	=B	D	W0116	0100	12		24-54-21	001-099
	=B	D	W0116	0100	10		24-54-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section C04200

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C04209		P011-04/ /J021		CB-STICK SHAKER R (continued)				ALL
	=B	D	W0116	0503	12		24-54-21	115-199
	=L	D	W0130	0027	22		27-32-21	ALL
C04210		P011-02/ /G021		CB-FLAP/SLAT ELEC UNIT 3 PWR				001-099
C04210		P011-02/ /G021		CB-FSEU 3 PWR				115-199
	=B	D	W0114	ZZYE	02		24-51-22	001-099
	=B	D	W0114	0024	16		24-51-22	ALL
	=L	D	W0128	0031	24		27-81-11	001-099
	=L	D	W0128	0031	22		27-81-11	115-199
C04211		P034-00/ /AB12		CB-RIGHT SIDEWALL LIGHTS				ALL
	=B	D	W1190	0026	14		24-51-61	ALL
	=L	D	W1190	0022	16		33-21-31	ALL
C04212		P011-02/ /H023		CB-FLAP/SLAT ALTN DR ARM				ALL
	=B	D	W0114	0003	12		24-54-21	ALL
	=B	D	W0114	ZZBA	02		24-54-21	ALL
	=B	D	W0114	ZZYH	02		24-54-21	ALL
	=L	D	W0128	0099	22		27-51-21	ALL
C04216		P011-02/ /D027		CB-RAT AUTO PWR				ALL
	=B	D	W0114	ZZPU	00		24-54-71	001-099
	=B	D	W0114	ZZPV	00		24-54-71	001-099
	=B	D	W0114	ZZXH	02		24-54-71	001-099
	=B	D	W0120	0102	12		24-54-71	115-199
	=B	D	W0120	ZZOC	00		24-54-71	115-199
	=B	D	W0120	ZZOD	00		24-54-71	115-199
	=L	D	W0128	0901	12		29-21-31	001-099
	=L	D	W0134	0401	12		29-21-31	115-199
C04217		P006-01/ /G005		CB-STBY BUS OFF LT BAT VM				ALL
	=B	D	W0060	ZZHK	02		24-54-72	001-099
	=B	D	W0060	ZZXJ	02		24-54-72	001-099
	=B	D	W0060	ZZHK	00		24-54-72	115-199
	=B	D	W0060	ZZJM	00		24-54-72	115-199
	=L	D	W0060	0208	22		24-34-11	ALL
	=L	D	W0060	0306	22		24-33-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section C04200

Page 2

Oct 09/2008

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C04218		P034-00/ /BE02		CB-SEAT BELT SIGNS R				ALL
	=B	D	W1196	0006	06		24-53-51	001-099
	=B	D	W1196	0003	10		24-53-51	ALL
	=B	D	W1196	ZZAD	02		24-53-51	ALL
	=B	D	W1196	0006	08		24-53-51	115-199
	=L	D	W1196	0011	18		33-24-11	001-099
	=L	D	W1196	0011	20		33-24-11	115-199
C04219		P034-00/ /BF01		CB-NO SMOKING SIGNS L				ALL
	=B	D	W1196	0002	10		24-53-51	ALL
	=B	D	W1196	ZZAC	02		24-53-51	ALL
	=L	D	W1196	0008	22		33-24-11	ALL
C04220		P034-00/ /BB02		CB-OXY PRESS IND				115-199
	=B	D	W1196	0013	12		24-54-61	115-199
	=B	D	W1196	0015	12		24-54-61	115-199
	=L	D	W1196	0014	22		35-11-13	115-199
C04221		P011-03/ /Q015		CB-DUCT PRESS IND PWR				ALL
	=B	D	W0112	0301	16		24-51-11	ALL
	=B	D	W0112	0304	16		24-51-11	ALL
	=L	D	W0126	0309	22		36-21-11	ALL
C04223		P011-04/ /R036		CB-PROX SW TEST				ALL
	=B	D	W0116	ZZZG	02		24-54-21	ALL
	=B	D	W0116	ZZXX	02		24-54-21	115-199
	=L	D	W0130	0042	22		32-09-11	001-099
	=L	D	W0130	0042	22		32-01-11	115-199
C04224		P011-03/ /Q006		CB-F/O INSTR TRANSFER CONT				ALL
	=B	D	W0112	0504	12		24-54-11	001-099
	=B	D	W0112	0504	08		24-54-11	115-199
	=L	D	W0126	0601	22		24-51-72	ALL
C04225		P011-04/ /Q033		CB-CAPT INSTR XFR CONT				ALL
	=B	D	W0116	ZZXF	02		24-54-21	ALL
	=B	D	W0116	0643	16		24-54-21	115-199
	=L	D	W0130	0330	22		24-51-72	ALL

HOOKUP LIST

D280N032

91-21-51

Section C04200

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C04226		P011-03/ /Q007		CB-F/O INSTR TRANSFER ALTN BUS A				ALL
	=B	D	W0112	0214	16		24-51-12	ALL
	=L	D	W0112	0210	22		24-51-72	ALL
C04227		P011-04/ /Q034		CB-CAPT INSTR ALT BUS A				ALL
	=B	D	W0116	0023	16		24-51-22	ALL
	=B	D	W0116	0029	16		24-51-22	ALL
	=L	D	W0116	0026	22		24-51-72	001-099
	=L	D	W0116	0026	16		24-51-72	115-199
C04228		P011-03/ /Q008		CB-F/O INSTR TRANSFER ALTN BUS B				ALL
	=B	D	W0112	0215	16		24-51-12	ALL
	=B	D	W0112	0217	16		24-51-12	115-199
	=L	D	W0112	0211	22		24-51-72	ALL
C04229		P011-04/ /Q035		CB-CAPT INSTR ALT BUS B				ALL
	=B	D	W0116	0028	16		24-51-22	ALL
	=L	D	W0116	0025	22		24-51-72	001-099
	=L	D	W0116	0025	16		24-51-72	115-199
C04230		P011-03/ /Q009		CB-F/O INSTR TRANSFER ALTN BUS C				ALL
	=B	D	W0112	0216	16		24-51-12	ALL
	=L	D	W0112	0212	22		24-51-72	ALL
C04231		P011-04/ /Q036		CB-CAPT INSTR ALT BUS C				ALL
	=B	D	W0116	0027	16		24-51-22	ALL
	=L	D	W0116	0024	22		24-51-72	001-099
	=L	D	W0116	0024	16		24-51-72	115-199
C04234		P006-02/ /H011		CB-28V DC OUTLET				ALL
	=B	D	W0070	ZZAB	00		24-54-21	001-099
	=B	D	W0070	ZZAD	00		24-54-21	001-099
	=B	D	W0070	ZZOD	00		24-54-21	115-199
	=B	D	W0070	ZZOE	00		24-54-21	115-199
	=L	D	W0070	0009	18		25-29-11	ALL
C04235		P011-04/ /P032		CB-SPARE LAMP TEST				115-199
	=B	D	W0116	0404	08		24-54-21	115-199
	=L	D	W0130	0404	22		33-14-51	115-199

HOOKUP LIST

D280N032

91-21-51

Section C04200

Page 4

Oct 09/2008

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C04239		P011-01/ /A006		CB-RBA				115-199
	=B	D	W0118	ZZAF	02		24-54-73	115-199
	=B	D	W0118	ZZOR	00		24-54-73	115-199
	=L	D	W0132	0031	22		34-22-83	115-199
C04240		P011-02/ /F025		CB-RBA,R				115-199
	=B	D	W0114	ZZAA	02		24-54-21	115-199
	=L	D	W0128	0040	22		34-22-93	115-199
C04246		E006-00/ /		CB-APU TOTALIZER				ALL
	=B	D	W1026	ZZAC	02		24-31-41	001-099
	=B	D	W1026	ZZXA	02		24-31-41	001-099
	=B	D	W1026	ZZAA	02		24-31-41	115-199
	=L	D	W1026	0046	22		49-72-11	ALL
C04247		P037-00/ /E007		CB-SVCE OUTLETS E5				ALL
	=B	D	W1272	ZZXP	02		24-51-52	ALL
	=L	D	W1272	0242	18		25-29-11	ALL
C04248		P006-01/ /F006		CB-LANDING GEAR ALTN EXT MOTOR				ALL
	=B	D	W0060	0311	06		24-31-11	ALL
	=L	D	W0060	0310	10		32-35-11	ALL
C04251		P011-02/ /B031		CB-ENGINE SPEED CARD L				ALL
	=B	D	W0114	ZZND	00		24-54-71	001-099
	=B	D	W0114	ZZOX	00		24-54-71	001-099
	=B	D	W0120	ZZBB	00		24-54-71	115-199
	=B	D	W0120	ZZBM	00		24-54-71	115-199
	=L	D	W0128	0746	22		77-12-41	001-099
	=L	D	W0134	0046	22		77-12-41	115-199
C04252		P011-02/ /B032		CB-ENGINE SPEED CARD R				ALL
	=B	D	W0114	ZZOX	00		24-54-71	001-099
	=B	D	W0114	ZZOY	00		24-54-71	001-099
	=B	D	W0120	ZZBA	00		24-54-71	115-199
	=B	D	W0120	ZZBB	00		24-54-71	115-199
	=L	D	W0128	0747	22		77-12-42	001-099
	=L	D	W0134	0047	22		77-12-42	115-199

HOOKUP LIST

D280N032

91-21-51

Section C04200

Page 5

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C04253		P011-04/ /P020		CB-FLT DECK FAN				115-199
	=B	D	W0116	0203	16		24-51-21	115-199
	=B	D	W0116	ZZCB	03		24-51-21	115-199
	=B	D	W0116	ZZCD	00		24-51-21	115-199
	=L	D	W0130	0232	24		21-61-11	115-199
C04255		P011-02/ /C025		CB-INTERPHONE FLT AMPL ASP 1 BAT PWR				115-199
	=B	D	W0120	ZZAD	12		24-54-71	115-199
	=B	D	W0120	ZZOS	00		24-54-71	115-199
	=L	D	W0134	0122	22		23-51-11	115-199
C04256		P011-02/ /G029		CB-INTERPHONE FLT AMPL ASP 1 R PWR				115-199
	=B	D	W0114	ZZOB	00		24-54-21	115-199
	=B	D	W0114	ZZOC	00		24-54-21	115-199
	=B	D	W0114	ZZYM	02		24-54-21	115-199
	=L	D	W0128	0120	22		23-51-11	115-199
C04257		P011-02/ /C026		CB-INTERPHONE ASP 2 BAT PWR				115-199
	=B	D	W0120	ZZOI	00		24-54-71	115-199
	=B	D	W0120	ZZOS	00		24-54-71	115-199
	=B	D	W0120	ZZXF	02		24-54-71	115-199
	=L	D	W0134	0220	22		23-51-21	115-199
C04258		P011-02/ /G030		CB-INTERPHONE ASP 2 R PWR				115-199
	=B	D	W0114	0008	12		24-54-21	115-199
	=B	D	W0114	ZZOA	00		24-54-21	115-199
	=B	D	W0114	ZZOB	00		24-54-21	115-199
	=L	D	W0128	0121	22		23-51-21	115-199
C04259		P011-01/ /A007		CB-RMI				115-199
	=B	D	W0118	ZZZE	02		24-54-73	115-199
	=B	D	W0118	ZZZF	02		24-54-73	115-199
	=L	D	W0132	0030	22		34-22-83	115-199
C04260		P011-02/ /F023		CB-RMI R				115-199
	=B	D	W0114	ZZYL	02		24-51-22	115-199
	=L	D	W0128	0041	22		34-22-93	115-199
C04261		P011-04/ /Q026		CB-DUCT LEAK CONT				ALL
	=B	D	W0116	0504	12		24-54-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section C04200

Page 6

Oct 09/2008

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C04261		P011-04/ /Q026		CB-DUCT LEAK CONT (continued)				ALL
	=L	D	W0130	0320	24		26-18-11	ALL
C04262		P037-00/ /E001		CB-AFT WATERLINE HEATERS				ALL
	=B	D	W1272	0255	12		24-51-52	001-008, 115-199
	=B	D	W1272	ZZYH	02		24-51-52	001-099
	=B	D	W1272	0022	12		24-51-52	009-099
	=L	D	W1272	0254	20		30-71-21	001-099
	=L	D	W1272	0254	24		30-71-21	115-199
C04263		P011-01/ /F010		CB-EFIS INSTR COMPTR				ALL
	=B	D	W0110	ZZAA	02		24-51-72	001, 003-099, 115-199
	=L	D	W0124	0093	22		34-25-11	001, 003-099, 115-199
C04264		P006-03/ /M016		CB-CAPT PRIM INSTR BUS A				ALL
	=B	D	W0062	0055	16		24-51-12	ALL
	=L	D	W0062	0045	16		24-51-72	ALL
C04265		P006-03/ /M017		CB-CAPT PRIM INSTR BUS B				ALL
	=B	D	W0062	0054	16		24-51-12	ALL
	=L	D	W0062	0044	16		24-51-72	ALL
C04266		P006-03/ /M018		CB-CAPT PRIM INSTR BUS C				ALL
	=B	D	W0062	0053	16		24-51-12	ALL
	=L	D	W0062	0043	16		24-51-72	ALL
C04267		P006-04/ /M022		CB-F/O PRIM INSTR BUS A				ALL
	=B	D	W0064	0701	16		24-51-22	ALL
	=L	D	W0064	0606	16		24-51-72	ALL
C04268		P006-04/ /M023		CB-F/O PRIM INSTR BUS B				ALL
	=B	D	W0064	0702	16		24-51-22	ALL
	=L	D	W0064	0605	16		24-51-72	ALL
C04269		P006-04/ /M024		CB-F/O PRIM INSTR BUS C				ALL
	=B	D	W0064	0703	16		24-51-22	ALL
	=L	D	W0064	0604	16		24-51-72	ALL
C04270		P011-03/ /J011		CB-PCU MON MOD				ALL
	=B	D	W0112	ZZAT	02		24-54-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section C04200

Page 7

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C04270		P011-03/ /J011		CB-PCU MON MOD (continued)				ALL
	=B	D	W0112	ZZFG	02		24-54-11	115-199
	=L	D	W0126	0613	22		27-23-21	ALL
C04271		P011-02/ /H024		CB-FLAP/SLAT SHUTOFF 2				ALL
	=B	D	W0114	ZZBA	02		24-54-21	ALL
	=L	D	W0128	0351	24		27-51-31	001-099
	=L	D	W0128	0351	22		27-51-31	115-199
C04275		P011-02/ /A020		CB-EXT STBY CONT				ALL
	=B	D	W0114	ZZAK	02		24-54-71	001-099
	=L	D	W0128	0146	22		24-33-12	001-099
C04276		P011-02/ /A019		CB-EXT STBY BAT				ALL
	=B	D	W0128	0141	20		24-33-12	001-099
	=L	D	W0128	0140	22		24-33-12	001-099
C04279		P011-04/ /S023		CB-LANDING GEAR POS SYS 2				ALL
	=B	D	W0116	ZZOS	00		24-54-21	001-099
	=B	D	W0116	ZZAA	05		24-54-21	ALL
	=B	D	W0116	ZZOC	00		24-54-21	115-199
	=L	D	W0130	0032	22		32-61-11	ALL
C04280		P011-03/ /P007		CB-GLARESHIELD FLOOD				ALL
	=B	D	W0112	0102	16		24-51-11	001-099
	=B	D	W0112	0101	16		24-51-11	ALL
	=B	D	W0112	0630	16		24-51-11	115-199
	=L	D	W0126	0005	22		33-11-21	ALL
C04281		P011-02/ /D025		CB-PARK BRAKE GND IND				115-199
	=B	D	W0120	ZZAN	07		24-54-71	115-199
	=B	D	W0120	ZZBR	00		24-54-71	115-199
	=L	D	W0134	0045	22		32-44-11	115-199
C04282		P006-02/ /L007		CB-APU/MAIN BAT TIE				ALL
	=B	F	W0066	ZZOE	00		24-31-11	001-099
	=L	F	W0066	0010	02		24-33-12	001-099
C04283		P011-03/ /J010		CB-PCU MON SENSOR				ALL
	=B	D	W0112	0209	16		24-51-12	001-099

HOOKUP LIST

D280N032

91-21-51

Section C04200

Page 8

Oct 09/2008

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C04283		P011-03/ /J010		CB-PCU MON SENSOR (continued)				ALL
	=B	D	W0112	0215	16		24-51-12	001-099
	=B	D	W0112	0217	16		24-51-12	115-199
	=L	D	W0126	0017	22		27-23-21	ALL
C04285		P037-00/ /G005		CB-ENTRY & GALLEY LIGHTS PWR				115-199
	=B	D	W1272	ZZXS	02		24-51-52	115-199
	=L	D	W1272	0100	20		33-22-11	115-199
C04286		E006-00/ /		CB-BAT DISCH IND INHIBIT				001-099
	=B	D	W1026	ZZAB	03		24-31-41	001-099
	=B	D	W1026	ZZOA	00		24-31-41	001-099
	=L	D	W1026	0033	22		24-33-12	001-099
C04287		P006-01/ /F002		CB-RAT MAN CONT				001-099
	=B	D	W0060	ZZGD	02		24-54-72	001-099
	=B	D	W0060	ZZXK	02		24-54-72	001-099
	=L	D	W0060	0024	22		29-21-31	001-099
C04290		P011-02/ /B035		CB-W/W FIRE TEST				ALL
	=B	D	W0114	ZZCM	07		24-54-71	001-099
	=B	D	W0114	ZZPA	00		24-54-71	001-099
	=B	D	W0120	ZZAM	07		24-54-71	115-199
	=B	D	W0120	ZZPA	00		24-54-71	115-199
	=L	D	W0128	0728	24		26-17-11	001-099
	=L	D	W0134	0028	24		26-17-11	115-199
C04291		P034-00/ /AA16		CB-MN/APU BAT CHGR DET ENABLE				ALL
	=B	D	W1190	0028	14		24-54-61	ALL
	=L	D	W1190	0100	24		24-34-11	001-099
	=L	D	W1190	0100	22		24-34-11	115-199
C04292		P011-04/ /K022		CB-HYDRAULICS RESERVE BRAKE SOURCE				ALL
	=B	D	W0116	ZZZH	02		24-54-21	001-099
	=B	D	W0116	ZZAM	04		24-54-21	ALL
	=B	D	W0116	ZZOA	00		24-54-21	ALL
	=L	D	W0130	0061	20		29-21-32	ALL
	=L	D	W0130	0062	20		29-21-32	ALL

HOOKUP LIST

D280N032

91-21-51

Section C04200

Page 9

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C04298		P011-03/ /R014		CB-ENG PROBE HTR L				ALL
	=B	D	W0112	0023	12		24-51-15	ALL
	=L	D	W0126	0134	18		30-34-21	ALL
C04299		P011-04/ /R023		CB-ENG PROBE HTR R				ALL
	=B	D	W0116	0042	12		24-51-25	ALL
	=B	D	W0116	0043	12		24-51-25	ALL
	=L	D	W0130	0218	18		30-34-22	ALL

HOOKUP LIST

D280N032

91-21-51

Section C04200

Page 10 End

Oct 09/2008

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C04308		P011-03/ /R016		CB-PROBE HEAT IND ENG L				ALL
	=B	D	W0112	ZZOS	02		24-54-11	001-099
	=B	D	W0112	ZZXK	02		24-54-11	001-099
	=B	D	W0112	ZZAT	02		24-54-11	115-199
	=L	D	W0126	0141	22		30-34-21	ALL
C04309		P011-04/ /R024		CB-PROBE HEAT IND ENG R				ALL
	=B	D	W0116	ZZOI	02		24-54-21	001-099
	=B	D	W0116	ZZBC	02		24-54-21	115-199
	=B	D	W0116	ZZZB	02		24-54-21	115-199
	=L	D	W0130	0231	22		30-34-22	ALL
C04317		P011-04/ /K028		CB-RIGHT ENGINE VIB MONITOR				ALL
	=B	D	W0116	0031	16		24-51-21	ALL
	=L	D	W0130	0059	22		77-31-11	ALL
C04329		P006-03/ /K013		CB-HYD EMP ENABLE C1				ALL
	=B	D	W0062	0035	14		24-51-11	ALL
	=L	D	W0062	0037	20		29-11-31	ALL
C04330		P006-03/ /K014		CB-HYD EMP ENABLE R				ALL
	=B	D	W0062	0036	14		24-51-11	ALL
	=L	D	W0062	0038	20		29-11-22	ALL
C04331		P006-04/ /K019		CB-HYD EMP ENABLE C2				ALL
	=B	D	W0064	0020	14		24-51-21	ALL
	=L	D	W0064	0021	20		29-11-31	ALL
C04341		P070-00/ /A002		CB-LAV WTR HTR S				001-099
	=B	D	W1252	0002	12		24-51-14	001-099
	=B	D	W1252	0008	12		24-51-14	001-099
	=L	D	W1252	0125	22		38-13-11	001-099
C04348		P006-01/ /C007		CB-HYD GEN 28V DC PWR				001-002
C04348		P006-02/ /C007		CB-HYD GEN 28V DC PWR				003-099, 115-199
	=B	D	W0066	0011	06		24-31-11	001-002, 115-199
	=B	D	W0066	0016	08		24-31-11	003-099
	=L	D	W0066	0012	06		24-31-11	001-002
	=L	D	W0066	0017	08		24-31-11	003-099
	CAP	Y	W0066	0012	06		24-31-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section C04300

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C04349		P006-01/ /C003		CB-HYD GEN CONT				ALL
I	=B	D	W0060	ZZXB	02		24-54-71	ALL
I	=L	D	W0060	0026	22		24-25-11	001-099
	CAP	Y	W0060	0026	22		24-25-11	115-199
C04350		P071-00/ /		CB-HYD GEN DC VOLT SENSE				001-002, 115-199
	=B	D	W1254	0053	10		24-25-13	001-002, 115-199
	=B	D	W1254	0084	10		24-25-13	001-002, 115-199
I	=L	D	W1254	0056	22		24-25-13	001-002
I	CAP	Y	W1254	0056	22		24-25-13	115-199
C04351		P071-00/ /		CB-HYD GEN AC VOLT SENSE				ALL
	=B	D	W1254	0054	12		24-25-13	ALL
I	=L	D	W1254	0057	22		24-25-13	001-002
	=L	D	W1254	0057	24		24-25-13	003-099
I	CAP	Y	W1254	0057	22		24-25-13	115-199
C04353		P006-03/ /L013		CB-28V AC BUS L XFR				ALL
	=B	D	W0062	0373	12		24-51-15	ALL
	=L	D	W0062	0377	22		24-51-15	ALL
C04355		P006-04/ /M021		CB-28V AC BUS R XFR				ALL
	=B	D	W0064	0084	12		24-51-25	ALL
I	=L	D	W0064	0088	22		24-51-25	001-099
I	CAP	Y	W0064	0088	22		24-51-25	115-199
C04356		P011-03/ /R006		CB-L AC BUS SENSE RELAY (REF 24-51-11)				ALL
	=B	D	W0112	0112	16		24-51-11	001-099
	=B	D	W0112	0209	16		24-51-11	115-199
I	=L	D	W0126	0067	22		24-25-11	001-099
I	CAP	Y	W0126	0067	22		24-25-11	115-199
C04357		P011-04/ /R029		CB-R AC BUS SENSE RELAY (REF 24-51-21)				ALL
	=B	D	W0116	0208	16		24-51-21	ALL
	=B	D	W0116	0623	16		24-51-21	ALL
I	=L	D	W0130	0080	22		24-25-11	001-099
I	CAP	Y	W0130	0080	22		24-25-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section C04300

Page 2

Oct 09/2008

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C04359		P034-00/ /BH01		CB-EMER NIGHT LTS				001-099
C04359		P034-00/ /BA01		CB-EMER NIGHT LTS				115-199
	= B	D	W1196	0019	18		24-51-25	ALL
	= B	D	W1196	ZZBC	03		24-51-25	ALL
	= B	D	W1196	ZZBE	00		24-51-25	ALL
	= L	D	W1196	0202	22		33-21-51	001-099
	CAP	Y	W1196	0202	22		33-21-51	115-199
C04360		P034-00/ /BA02		CB-LAV DOME,OCCUPY LTS ALTN				001-099
C04360		P034-00/ /BA02		CB-LAV DOME,OCCUPY LTS ALTN				115-199
	= B	D	W1196	ZZBD	00		24-51-25	ALL
	= B	D	W1196	ZZBE	00		24-51-25	ALL
	= L	D	W1196	0018	16		33-26-11	001-099
	CAP	Y	W1196	0018	22		33-26-11	115-199
C04361		P037-00/ /C006		CB-VIDEO MONITOR FWD-UTILITY				001-099
C04361		P037-00/ /C007		CB-VIDEO MONITOR FWD-UTILITY				115-199
	= B	D	W1272	0065	12		24-51-24	001-099
	= B	D	W1272	0076	12		24-51-24	ALL
	= L	D	W1272	0082	20		23-32-02	ALL
C04362		P037-00/ /C007		CB-VIDEO SYSTEM MONITOR AFT-UTIL				001-099
C04362		P037-00/ /		CB-VIDEO SYSTEM MONITOR AFT-UTIL				115-199
	= B	D	W1272	0075	12		24-51-24	ALL
	= L	D	W1272	0084	20		23-32-02	ALL
C04363		P037-00/ /C008		CB-AC,VIDEO SYSTEM CONT-UTILITY				ALL
	= B	D	W1272	0077	14		24-51-24	ALL
	= L	D	W1272	0086	20		23-32-02	ALL
C04364		P011-02/ /H030		CB-DC,VIDEO SYSTEM CONT				ALL
	= B	D	W0114	ZZBB	02		24-54-21	ALL
	= L	D	W0128	0036	18		23-32-01	ALL
	= L	D	W0128	0130	18		23-32-01	ALL
C04366		P034-00/ /BA03		CB-LIGHTS,EMER ATTEND WORK				ALL
	= B	D	W1196	ZZBC	03		24-51-25	ALL
	= B	D	W1196	ZZBD	00		24-51-25	ALL
	= L	D	W1196	0023	22		33-22-11	001-099
	CAP	Y	W1196	0023	22		33-22-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section C04300

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C04367		P034-00/ /BB03		CB-GND-DRAIN MAST HTR				ALL
	=B	D	W1196	0022	10		24-53-51	ALL
	=L	D	W1196	0016	20		30-71-11	ALL
C04373		P070-00/ /B016		CB-L RECIRC FAN CONT				ALL
	=B	D	W1252	0030	16		21-25-11	ALL
	=L	D	W1252	0031	24		21-25-11	ALL
C04374		P037-00/ /D007		CB-R RECIRC FAN CONT				ALL
	=B	D	W1272	0028	16		21-25-11	ALL
	=L	D	W1272	0029	24		21-25-11	ALL
C04375		P011-03/ /N009		CB-PASS CALL/LAV SMOKE,R				ALL
	=B	D	W0112	ZZAJ	02		24-54-11	ALL
	=B	D	W0112	ZZZY	02		24-54-11	ALL
	=B	D	W0112	ZZXR	02		24-54-11	115-199
	=L	D	W0126	0531	20		33-25-21	ALL
C04376		P011-03/ /N008		CB-PASS CALL/LAV SMOKE,L				ALL
	=B	D	W0112	ZZXR	02		24-54-11	001-099
	=B	D	W0112	ZZAJ	02		24-54-11	ALL
	=B	D	W0112	ZZZC	02		24-54-11	115-199
	=L	D	W0126	0018	22		33-25-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section C04300

Page 4 End

Oct 09/2008

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C04403		P037-00/ /B008		CB-MULTIPLEXER				001-099
C04403		P037-00/ /		CB-MULTIPLEXER				115-199
	=B	D	W1272	0017	14		24-51-24	ALL
	=B	D	W1272	0075	12		24-51-24	ALL
	=L	D	W1272	0018	22		23-34-15	001-099
	=L	D	W1272	0016	22		23-34-15	115-199
C04423		P011-02/ /E028		CB-ATC ANT SWITCH				ALL
	=B	D	W0114	0026	12		24-54-21	ALL
	=L	D	W0128	0149	24		34-53-21	ALL
C04426		P037-00/ /B007		CB-ENT TAPE RPDR				001-099
	=B	D	W1272	0065	12		24-51-24	001-099
	=L	D	W1272	0087	22		23-34-15	001-099
C04440		P037-00/ /A006		CB-VIDEO MONITOR FWD-MAIN				ALL
	=B	D	W1272	0080	12		24-51-21	ALL
	=L	D	W1272	0081	20		23-32-02	ALL
C04441		P037-00/ /A007		CB-VIDEO SYSTEM MONITOR AFT MAIN(BUS)				ALL
	=B	D	W1272	0079	12		24-51-21	ALL
	=L	D	W1272	0083	20		23-32-02	ALL
C04442		P037-00/ /A008		CB-AC,VIDEO SYSTEM MAIN(BUS)				ALL
	=B	D	W1272	0078	12		24-51-21	ALL
	=L	D	W1272	0085	20		23-32-02	ALL
C04443		P011-01/ /F003		CB-TCAS				001-099
C04443		P011-01/ /G002		CKTBKR-TCAS				115-199
	=B	D	W0110	ZZXH	02		24-51-12	001-099
	=B	D	W0110	ZZXG	02		24-51-12	115-199
	=L	D	W0124	0123	20		34-45-01	ALL
C04459		P011-04/ /J034		CB-ACMS				001-099
	=B	D	W0116	ZZAW	02		24-51-22	001-099
	=L	D	W0130	0092	22		31-31-02	001-099
C04470		P011-04/ /K032		CB-SYNC-LOCK-R				ALL
	=B	D	W0116	ZZAN	02		24-54-21	ALL
	=B	D	W0116	ZZYB	02		24-54-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section C04400

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C04470		P011-04/ /K032		CB-SYNC-LOCK-R (continued)				ALL
	=L	D	W0130	0096	16		78-34-61	ALL
C04471		P011-04/ /K033		CB-T/R CONT-R				ALL
	=B	D	W0116	ZZAN	02		24-54-21	ALL
	=B	D	W0116	ZZYC	02		24-54-21	003-099
	=L	D	W0130	0095	22		78-34-21	001-099
	=L		W0130	0095	22		78-34-21	115-199
C04472		P006-02/ /C012		CB-LEFT ENG SYNC LOCK CONT				001-002, 115-199
C04472		P006-02/ /C012		CB-LEFT ENG SYNCH LOCK				003-099
	=B	D	W0072	0022	14		24-54-71	ALL
	=B	D	W0072	0023	16		24-54-71	ALL
	=L	D	W0072	0018	16		78-34-51	ALL
C04474		P006-02/ /D012		CB- RIGHT ENG SYNC LOCK CONT				001-002, 115-199
C04474		P006-02/ /D012		CB-RIGHT ENG SYNCH LOCK				003-099
	=B	D	W0072	0023	16		24-54-71	ALL
	=L	D	W0072	0021	16		78-34-61	ALL
C04476		P011-02/ /D024		CB-FWD FUEL CROSSFEED VALVE				009-099
	=B	D	W0114	0035	18		24-54-71	009-099
	=B	D	W0114	ZZMA	02		24-54-71	009-099
	=L	D	W0128	0153	20		28-22-32	009-099
C04477		P011-02/ /D025		CB-AFT FUEL CROSSFEED VALVE				009-099
	=B	D	W0114	ZZMA	02		24-54-71	009-099
	=L	D	W0128	0805	20		28-22-31	009-099
C04478		P011-02/ /C019		CB-LANDING GEAR POS SYS 2 ALTN				ALL
	=B	D	W0114	0034	18		24-54-71	001-099
	=B	D	W0120	0014	18		24-54-71	115-199
	=L	D	W0128	0150	22		32-61-11	001-099
	=L	D	W0134	0063	22		32-61-11	115-199
C04485		P011-02/ /D036		CB-FUEL XFEED IND				009-099
	=B	D	W0114	0035	18		24-54-71	009-099
	=B	D	W0114	0701	08		24-54-71	009-099
	=B	D	W0114	ZZCB	06		24-54-71	009-099
	=B	D	W0114	ZZPS	00		24-54-71	009-099

HOOKUP LIST

D280N032

91-21-51

Section C04400

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C04485		P011-02/ /D036		CB-FUEL XFEED IND (continued)				009-099
	= L	D	W0128	0154	20		28-22-31	009-099

HOOKUP LIST

D280N032

91-21-51

Section C04400

Page 3 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C04509		P011-01/ /E012		CB-TERR DSPL				002
	=B	D	W0110	0071	12		24-54-11	002
	=L	D	W0124	0164	22		34-46-14	002
	=L	D	W0124	0177	22		34-43-14	002

HOOKUP LIST

D280N032

91-21-51

Section C04500

Page 1 End

Oct 09/2008

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
C04600		P011-01/ /E010		CB-MMR L				115-199
	= B	D	W0110	0041	16		24-51-72	115-199
	= L	D	W0124	0018	22		34-31-11	115-199
C04601		P011-02/ /E031		CB-MMR R				115-199
	= B	D	W0114	0018	22		24-51-72	115-199
	= L	D	W0128	0004	22		34-31-21	115-199
C04602		P011-01/ /A003		CB-MMR C				115-199
	= B	D	W0118	ZZZF	02		24-54-73	115-199
	= L	D	W0132	0007	22		34-31-31	115-199
C04664		P011-01/ /B004		CB-L AIR DATA SOURCE SEL RLY(SB 34A0222)				ALL
	= B	D	W0110	ZZDC	02		24-54-73	001-099
	= B	D	W0118	ZZDC	02		24-54-73	115-199
	= L	D	W0124	0119	20		34-12-61	001-099
	= L	D	W0132	0006	20		34-12-61	115-199
C04665		P011-01/ /B005		CB-R AIR DATA SOURCE SEL RLY(SB 34A0222)				ALL
	= B	D	W0110	ZZDC	02		24-54-73	001-099
	= B	D	W0110	ZZYM	02		24-54-73	001-099
	= B	D	W0118	ZZDC	02		24-54-73	115-199
	= B	D	W0118	ZZYM	02		24-54-73	115-199
	= L	D	W0124	0124	20		34-12-62	001-099
	= L	D	W0132	0015	20		34-12-62	115-199
I C04679		P011-03/ /L013		CB FUEL-AUTO S/O OVRD CTR L (SB 28A0081)				ALL
I	= B	D	W0112	0219	12		24-54-11	ALL
I	= L	D	W0126	0022	22		28-22-11	ALL
I C04680		P011-04/ /L025		CB FUEL-AUTO S/O OVRD CTR R (SB 28A0081)				ALL
I	= B	D	W0116	0506	12		24-54-21	ALL
I	= L	D	W0130	0030	22		28-22-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section C04600

Page 1 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00001 D00001		P005-00/ / P5/ /		PLUG- PLUG-				001-099 115-199
	A		W2351	0041	24		23-71-11	ALL
	B		W2351	0038	24		23-71-11	ALL
	C		W2351	0037	22		23-71-11	ALL
	D		W2351	0039	24		23-71-11	ALL
	E		W2351	0040	24		23-71-11	ALL
	F		W2351	0036	20		23-71-11	ALL
	G		W2351	0028	22		23-71-11	ALL
	H		W2351	0031	22		23-71-11	ALL
	J	UNUSED						ALL
	K		W2351	2502B	24		23-71-11	001-099
	K		W2351	2504B	24		23-71-11	115-199
	L		W2351	2502R	24		23-71-11	001-099
	L		W2351	2504R	24		23-71-11	115-199
	M	UNUSED						ALL
	N		W2351	0030	22		23-71-11	ALL
	P		W2351	0029	22		23-71-11	ALL
	R	UNUSED						ALL
	S	UNUSED						ALL
	T	UNUSED						ALL
	U	UNUSED						ALL
	V		W2351	2503B	24		23-71-11	ALL
	W		W2351	2503R	24		23-71-11	ALL
	X	UNUSED						ALL
	Y	UNUSED						001-099
	Y		W2351	0022	20		33-13-31	115-199
	Z	UNUSED						001-099
	Z		W2351	0023	20		33-13-31	115-199
DED			W2351	2502Z			23-71-11	001-099
DED			W2351	2503Z			23-71-11	ALL
DED			W2351	2504Z			23-71-11	ALL
	A-	UNUSED						ALL
	B-	UNUSED						ALL
	C-	UNUSED						ALL
	D-	UNUSED						ALL
	E-	UNUSED						ALL
	F-		W2351	0030	22		23-71-11	001-099
	F-		W2351	0054	22		23-71-11	115-199
	G-		W2351	0029	22		23-71-11	001-099
	G-		W2351	0055	22		23-71-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00001		P005-00/ /		PLUG- (continued)				001-099
D00001		P5/ /		PLUG- (continued)				115-199
	H-		W2351	0060	24		23-71-11	001-099
	H-	UNUSED						115-199
	I-		W2351	2504R	24		23-71-11	001-099
	I-	UNUSED						115-199
	J-		W2351	2504B	24		23-71-11	001-099
	J-	UNUSED						115-199
	K-	UNUSED						ALL
	M-	UNUSED						ALL
	N-	UNUSED						ALL
	P-		W2351	0044	20		23-71-11	ALL
	Q-		W2351	0043	20		23-71-11	ALL
	R-		W2351	0042	20		23-71-11	ALL
	S-	UNUSED						ALL
	T-	UNUSED						ALL
D00003		1625/293/R006		PLUG-				001-099
D00003		1625/290/R006		PLUG-				115-199
	1	UNUSED						ALL
	2		W2653	0001	20		23-71-11	ALL
	3		W2653	0002	20		23-71-11	ALL
	4	UNUSED						ALL
	5		W2653	2501B	24		23-71-11	ALL
	6		W2653	2501R	24		23-71-11	ALL
	7		W2653	0003	24		23-71-11	ALL
	8		W2653	0003	24		23-71-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W2653	0010	24		23-71-11	ALL
	13		W2653	0007	24		23-71-11	ALL
	14		W2653	0006	22		23-71-11	ALL
	15		W2653	0008	24		23-71-11	ALL
	16		W2653	0009	24		23-71-11	ALL
	17		W2653	0004	20		23-71-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00003		1625/293/R006		PLUG- (continued)				001-099
D00003		1625/290/R006		PLUG- (continued)				115-199
	23		W2653	0013	24		23-71-11	001-099
	23	UNUSED						115-199
	24		W2653	2506R	24		23-71-11	001-099
	24	UNUSED						115-199
	25		W2653	2506B	24		23-71-11	001-099
	25	UNUSED						115-199
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W2653	2505B	24		23-71-11	ALL
	31	UNUSED						ALL
	32		W2653	2505R	24		23-71-11	ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W2653	2504B	24		23-71-11	ALL
	36	UNUSED						ALL
	37		W2653	2504R	24		23-71-11	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41		W2653	2503B	24		23-71-11	ALL
	42	UNUSED						ALL
	43		W2653	2503R	24		23-71-11	ALL
	44	UNUSED						ALL
	45		W2653	2502B	24		23-71-11	ALL
	46	UNUSED						ALL
	47		W2653	2502R	24		23-71-11	ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55		W2653	0012	22		23-71-11	ALL
	56	UNUSED						ALL
	57		W2653	0011	22		23-71-11	ALL
			W2653	2506Z			23-71-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00003		1625/293/R006		PLUG- (continued)				001-099
D00003		1625/290/R006		PLUG- (continued)				115-199
			W2653	2501Z			23-71-11	ALL
			W2653	2502Z			23-71-11	ALL
			W2653	2503Z			23-71-11	ALL
			W2653	2504Z			23-71-11	ALL
			W2653	2505Z			23-71-11	ALL
			W2653	FRAA			23-71-11	ALL
D00005A		E004-03/ /		PLUG-				001-099
D00005A		E4-3/ /		PLUG-				115-199
	A01		W1163	4254R	24		23-42-11	ALL
	A02		W1163	4254B	24		23-42-11	ALL
	A03		W1163	4254Y	24		23-42-11	ALL
	A04		W1163	4254G	24		23-42-11	ALL
	A05		W1163	4252R	24		23-42-11	ALL
	A06		W1163	4252B	24		23-42-11	ALL
	A07		W1163	4252Y	24		23-42-11	ALL
	A08		W1163	4252G	24		23-42-11	ALL
	A09		W1163	4251R	24		23-42-11	ALL
	A10		W1163	4251B	24		23-42-11	ALL
	A11		W1163	4251Y	24		23-42-11	ALL
	A12		W1163	4251G	24		23-42-11	ALL
	A13		W1163	0429	24		31-51-33	ALL
	A14		W1163	4255R	24		23-42-11	001-099
	A14	UNUSED						115-199
	A15		W1163	4255B	24		23-42-11	001-099
	A15	UNUSED						115-199
	B01		W1163	0233	22		23-51-11	ALL
	B02	UNUSED						ALL
	B03		W1163	0297	24		23-51-21	ALL
	B04		W1163	0371	24		23-51-41	ALL
	B05	UNUSED						001-099
	B05		W1163	0335	24		23-51-51	115-199
	B06	UNUSED						001-099
	B06		W1163	0203	24		23-51-11	115-199
	B07		W1163	0204	24		23-51-11	ALL
	B08		W1163	2504R	24		23-41-11	ALL
	B09		W1163	2504B	24		23-41-11	ALL
	B10		W1163	2502R	24		23-41-11	ALL
	B11		W1163	2502B	24		23-41-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 4

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00005A		E004-03/ /		PLUG- (continued)				001-099
D00005A		E4-3/ /		PLUG- (continued)				115-199
	B12		W1163	1001	22		23-42-11	ALL
	B13		W1163	1001Z			23-42-11	ALL
	B14		W1163	4255Y	24		23-42-11	001-099
	B14	UNUSED						115-199
	B15		W1163	4255G	24		23-42-11	001-099
	B15	UNUSED						115-199
	C01	UNUSED						001-099
	C01		W1163	0464	24		23-42-12	115-199
	C02	UNUSED						001-099
	C02		W1163	0465	24		23-42-12	115-199
	C03	UNUSED						001-099
	C03		W1163	0466	24		23-42-12	115-199
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08		W1163	0180	22		23-42-11	ALL
	C09		W1163	0181	22		23-42-11	ALL
	C10		W1163	0182	22		23-42-11	ALL
	C11		W1163	0183	22		23-42-11	ALL
	C12		W1163	0185	22		23-42-11	ALL
	C13		W1163	0186	22		23-42-11	ALL
	C14		W1163	0188	22		23-42-11	ALL
	C15	UNUSED						ALL
	D01		W1163	0178	22		23-42-11	001-099
	D01		W1163	0461	22		23-42-11	115-199
	D02		W1163	0179	22		23-42-11	ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						001-099
	D08		W1163	4253R	24		23-42-11	115-199
	D09	UNUSED						001-099
	D09		W1163	4253B	24		23-42-11	115-199
	D10	UNUSED						001-099
	D10		W1163	4253Y	24		23-42-11	115-199
	D11	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 5

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00005A		E004-03/ /		PLUG- (continued)				001-099
D00005A		E4-3/ /		PLUG- (continued)				115-199
	D11		W1163	4253G	24		23-42-11	115-199
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	CAP	Y	W1163	0203	24		23-51-11	001-099
	CAP	Y	W1163	4255B	24		23-42-11	115-199
	CAP	Y	W1163	4255G	24		23-42-11	115-199
	CAP	Y	W1163	4255R	24		23-42-11	115-199
	CAP	Y	W1163	4255Y	24		23-42-11	115-199
	DED		W1163	2502Z			23-41-11	ALL
	DED		W1163	2504Z			23-41-11	ALL
	DED		W1163	4251Z			23-42-11	ALL
	DED		W1163	4252Z			23-42-11	ALL
	DED		W1163	4254Z			23-42-11	ALL
	DED		W1163	4255Z			23-42-11	ALL
	DED		W1163	4253Z			23-42-11	115-199
D00005B		E004-03/ /		PLUG-				001-099
D00005B		E4-3/ /		PLUG-				115-199
	A01		W1163	0192	22		23-51-11	ALL
	A02		W1163	0193	22		23-51-11	ALL
	A03	UNUSED						ALL
	A04		W1163	0200	24		23-51-11	ALL
	A05		W1163	0301	24		23-51-21	ALL
	A06		W1163	0196	24		23-51-11	ALL
	A07		W1163	0497	24		23-51-11	001-099
	A07	UNUSED						115-199
	A08	UNUSED						ALL
	A09		W1163	0061	24		23-31-11	001-099
	A09		W1163	0457	24		23-31-11	115-199
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 6

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00005B		E004-03/ /		PLUG- (continued)				001-099
D00005B		E4-3/ /		PLUG- (continued)				115-199
	B03		W1163	0199	24		23-51-11	ALL
	B04		W1163	0299	24		23-51-21	ALL
	B05	UNUSED						001-099
	B05		W1163	0337	24		23-51-51	115-199
	B06		W1163	0373	24		23-51-41	ALL
	B07		W1163	0195	24		23-51-11	ALL
	B08		W1163	0160	24		23-31-13	ALL
	B09		W1163	0161	24		23-31-13	ALL
	B10		W1163	0158	24		23-31-13	ALL
	B11		W1163	0159	24		23-31-13	ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01		W1163	0072	22		23-42-11	001-099
	C01	UNUSED						115-199
	C02		W1163	0194	22		23-51-11	ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06		W1163	0539	24		23-31-41	ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09		W1163	0126	24		23-31-41	001-099
	C09	UNUSED						115-199
	C10		W1163	0157	24		23-31-13	001-099
	C10	UNUSED						115-199
	C11		W1163	0156	24		23-31-13	ALL
	C12	UNUSED						001-099
	C12		W1163	0126	24		23-31-41	115-199
	C13		W1163	0540	24		23-31-41	ALL
	C14		W1163	0536	24		23-31-41	ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 7

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00005B		E004-03/ /		PLUG- (continued)				001-099
D00005B		E4-3/ /		PLUG- (continued)				115-199
	D07	UNUSED						ALL
	D08		W1163	0146	22		23-31-11	ALL
	D09		W1163	0147	22		23-31-11	ALL
	D10		W1163	0496	24		23-51-11	001-099
	D10	UNUSED						115-199
	D11		W1163	0145	24		23-31-11	ALL
	D12	UNUSED						001-099
	D12		W1163	0144	24		23-31-11	115-199
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
D00005C		E004-03/ /		PLUG-				001-099
D00005C		E4-3/ /		PLUG-				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	= C1	UNUSED						ALL
	= C5	UNUSED						ALL
D00007A		E004-03/ /		PLUG-				001-099
D00007A		E4-3/ /		PLUG-				115-199
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 8

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00007A		E004-03/ /		PLUG- (continued)				001-099
D00007A		E4-3/ /		PLUG- (continued)				115-199
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 9

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00007A		E004-03/ /		PLUG- (continued)				001-099
D00007A		E4-3/ /		PLUG- (continued)				115-199
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
D00007B		E004-03/ /		PLUG-				001-099
D00007B		E4-3/ /		PLUG-				115-199
	A01		W1163	0210	24		23-51-11	ALL
	A02		W1163	0061	24		23-31-11	001-099
	A02		W1163	0456	24		23-31-11	115-199
	A03	UNUSED						ALL
	A04		W1163	2030R	24		23-31-19	001-099
	A04		W1163	2015R	22		23-32-02	115-199
	A05		W1163	2023R	24		23-31-19	001-099
	A05		W1163	2011R	22		23-34-16	115-199
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09		W1163	0160	24		23-31-13	ALL
	A10		W1163	0154	24		23-31-13	ALL
	A11		W1163	0415	22		33-25-11	001-099
	A11	UNUSED						115-199
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14		W1163	0213	24		23-51-11	ALL
	A15		W1163	2012R	22		23-31-21	ALL
	B01		W1163	0209	24		23-51-11	ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04		W1163	2030B	24		23-31-19	001-099
	B04		W1163	2015B	22		23-32-02	115-199
	B05		W1163	2023B	24		23-31-19	001-099
	B05		W1163	2011B	22		23-34-16	115-199
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09		W1163	0161	24		23-31-13	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 10

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00007B		E004-03/ /		PLUG- (continued)				001-099
D00007B		E4-3/ /		PLUG- (continued)				115-199
	B10		W1163	0154	24		23-31-13	ALL
	B11		W1163	0157	24		23-31-13	001-099
	B11	UNUSED						115-199
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14		W1163	0212	24		23-51-11	ALL
	B15		W1163	2012B	22		23-31-21	ALL
	C01		W1163	0211	24		23-51-11	ALL
	C02		W1163	0142	24		23-31-11	ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09		W1163	0155	24		23-31-13	ALL
	C10	UNUSED						ALL
	C11		W1163	0152	22		23-31-13	ALL
	C12	UNUSED						ALL
	C13		W1163	0158	24		23-31-13	ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04		W1163	0143	22		23-31-19	001-099
	D04		W1163	0143	24		23-31-11	115-199
	D05		W1163	0150	24		23-31-19	001-099
	D05		W1163	0150	24		23-34-16	115-199
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09		W1163	0153	24		23-31-13	ALL
	D10		W1163	0156	24		23-31-13	ALL
	D11		W1163	0151	22		23-31-13	ALL
	D12	UNUSED						ALL
	D13		W1163	0159	24		23-31-13	ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 11

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00007C		E004-03/ /		PLUG-				001-099
D00007C		E4-3/ /		PLUG-				115-199
	1	UNUSED						ALL
	2		W1163	0139	20		23-31-11	ALL
	3	UNUSED						ALL
	4		W1163	0140	20		23-31-11	ALL
	5	UNUSED						ALL
	= C1	UNUSED						ALL
	= C5	UNUSED						ALL
D00009		P061-00/ /		PLUG-				001-099
	1	UNUSED						001-099
	2	UNUSED						001-099
	3		W0069	0067	22		33-16-13	001-099
	4		W0069	0068	22		33-16-13	001-099
	5		W0069	0025	22		31-31-01	001-099
	6		W0069	0006	24		31-31-01	001-099
	7		W0069	0028	20		31-31-01	001-099
	8	UNUSED						001-099
	9		W0069	0005	24		31-31-01	001-099
	10	UNUSED						001-099
	11		W0069	0024	22		31-31-01	001-099
	12		W0069	0002	22		31-31-01	001-099
	13		W0069	0001	22		31-31-01	001-099
	14		W0069	0029	20		31-31-01	001-099
	15		W0069	0003	24		31-31-01	001-099
	16	UNUSED						001-099
	17	UNUSED						001-099
	18	UNUSED						001-099
	19	UNUSED						001-099
	20	UNUSED						001-099
	21	UNUSED						001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
D00011A		E3-3/ /		PLUG-				ALL
	A01		W1433	0143	24		31-31-61	001-099
	A01		W1433	0143	24		31-31-32	115-199
	A02	UNUSED						ALL
	A03		W1433	0142	24		31-31-61	001-099

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 12

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00011A		E3-3/ /		PLUG- (continued)				ALL
	A03		W1433	0142	24		31-31-31	115-199
	A04	UNUSED						ALL
	A05	UNUSED						001-099
	A05		W1433	0221	24		31-31-32	115-199
	A06	UNUSED						ALL
	A07	UNUSED						001-099
	A07		W1433	0212	22		31-31-31	115-199
	A08	UNUSED						ALL
	A09		W1433	5056R	24		31-31-01	001-099
	A09		W1433	5056R	24		31-31-11	115-199
	A10	UNUSED						ALL
	A11		W1433	0076	24		31-31-01	001-099
	A11		W1433	0076	22		31-31-11	115-199
	A12	UNUSED						ALL
	A13		W1433	5138R	24		31-31-44	001-099
	A13		W1433	5053R	24		31-31-23	115-199
	A14		W1433	5016R	24		31-31-41	001-099
	A14		W1433	5016R	24		31-31-21	115-199
	A15		W1433	5072R	24		31-31-43	001-099
	A15		W1433	5042R	24		31-31-22	115-199
	B01		W1433	0277	24		31-31-61	001-099
	B01	UNUSED						115-199
	B02	UNUSED						ALL
	B03		W1433	0208	24		31-31-61	001-099
	B03		W1433	0208	24		31-31-32	115-199
	B04	UNUSED						ALL
	B05	UNUSED						001-099
	B05		W1433	0182	24		31-31-31	115-199
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09		W1433	5056B	24		31-31-01	001-099
	B09		W1433	5056B	24		31-31-11	115-199
	B10	UNUSED						ALL
	B11		W1433	0078	24		31-31-01	001-099
	B11		W1433	0078	22		31-31-11	115-199
	B12	UNUSED						ALL
	B13		W1433	5138B	24		31-31-44	001-099
	B13		W1433	5053B	24		31-31-23	115-199
	B14		W1433	5016B	24		31-31-41	001-099

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 13

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00011A		E3-3/ /		PLUG- (continued)				ALL
	B14		W1433	5016B	24		31-31-21	115-199
	B15		W1433	5072B	24		31-31-43	001-099
	B15		W1433	5042B	24		31-31-22	115-199
	C01		W1433	0144	24		31-31-61	001-099
	C01		W1433	0144	24		31-31-32	115-199
	C02	UNUSED						ALL
	C03	UNUSED						001-009
	C03		W1433	0578	22		31-31-61	010-099
	C03		W1433	0179	22		31-31-31	115-199
	C04	UNUSED						ALL
	C05	UNUSED						001-099
	C05		W1433	0184	24		31-31-31	115-199
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						001-099
	C09		W1433	5036R	24		31-31-13	115-199
	C10	UNUSED						001-099
	C10		W1433	5038R	24		31-31-13	115-199
	C11		W1433	3501R	24		31-31-02	001-099
	C11		W1433	1001	22		31-31-13	115-199
	C12	UNUSED						ALL
	C13		W1433	5053R	24		31-31-42	001-099
	C13		W1433	5041R	24		31-31-22	115-199
	C14		W1433	5018R	24		31-31-42	001-099
	C14		W1433	5048R	24		31-31-22	115-199
	C15		W1433	5071R	24		31-31-43	001-099
	C15		W1433	5046R	24		31-31-22	115-199
	D01		W1433	0349	24		31-31-61	001-099
	D01	UNUSED						115-199
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						001-099
	D05		W1433	0201	22		31-31-32	115-199
	D06	UNUSED						ALL
	D07	UNUSED						001-009, 115-199
	D07		W1433	0577	22		31-31-61	010-099
	D08	UNUSED						ALL
	D09	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 14

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00011A		E3-3/ /		PLUG- (continued)				ALL
	D09		W1433	5036B	24		31-31-13	115-199
	D10	UNUSED						001-099
	D10		W1433	5038B	24		31-31-13	115-199
	D11		W1433	3501B	24		31-31-02	001-099
	D11		W1433	1002	22		31-31-13	115-199
	D12	UNUSED						ALL
	D13		W1433	5053B	24		31-31-42	001-099
	D13		W1433	5041B	24		31-31-22	115-199
	D14		W1433	5018B	24		31-31-42	001-099
	D14		W1433	5048B	24		31-31-22	115-199
	D15		W1433	5071B	24		31-31-43	001-099
	D15		W1433	5046B	24		31-31-22	115-199
	E01		W1433	0148	24		31-31-61	001-099
	E01		W1433	0188	24		31-31-31	115-199
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05		W1433	0211	24		31-31-62	001-099
	E05		W1433	0202	22		31-31-32	115-199
	E06	UNUSED						ALL
	E07	UNUSED						001-009, 115-199
	E07		W1433	0539	22		31-31-61	010-099
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						001-099
	E10		W1433	5039R	24		31-31-13	115-199
	E11		W1433	3501Y	24		31-31-02	001-099
	E11		W1433	1003	22		31-31-13	115-199
	E12	UNUSED						ALL
	E13		W1433	5017R	24		31-31-41	001-099
	E13		W1433	5017R	24		31-31-21	115-199
	E14		W1433	5140R	24		31-31-43	001-099
	E14		W1433	5018R	24		31-31-21	115-199
	E15	UNUSED						ALL
	F01		W1433	0149	24		31-31-63	001-099
	F01		W1433	0149	24		31-31-31	115-199
	F02	UNUSED						ALL
	F03		W1433	0123	24		31-31-62	001-099
	F03		W1433	0123	22		31-31-21	115-199
	F04	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 15

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00011A		E3-3/ /		PLUG- (continued)				ALL
	F05		W1433	0212	24		31-31-62	001-099
	F05		W1433	0209	22		31-31-32	115-199
	F06	UNUSED						ALL
	F07	UNUSED						001, 115-199
	F07	VP	W1433	0394	24		31-31-65	002-009
	F07		W1433	0536	22		31-31-61	010-099
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						001-099
	F10		W1433	5039B	24		31-31-13	115-199
	F11		W1433	0455	24		31-31-02	001-009
	F11	UNUSED						010-099, 115-199
	F12	UNUSED						ALL
	F13		W1433	5017B	24		31-31-41	001-099
	F13		W1433	5017B	24		31-31-21	115-199
	F14		W1433	5140B	24		31-31-43	001-099
	F14		W1433	5018B	24		31-31-21	115-199
	F15	UNUSED						ALL
	G01		W1433	0282	24		31-31-62	001-099
	G01		W1433	0126	22		31-31-21	115-199
	G02	UNUSED						ALL
	G03	UNUSED						001-099
	G03		W1433	0185	24		31-31-32	115-199
	G04	UNUSED						ALL
	G05		W1433	0397	24		31-31-62	001-099
	G05		W1433	0210	22		31-31-32	115-199
	G06	UNUSED						ALL
	G07		W1433	0294	24		31-31-62	001-099
	G07	UNUSED						115-199
	G08	UNUSED						ALL
	G09		W1433	5146R	24		31-31-02	001-099
	G09		W1433	5013R	24		31-31-11	115-199
	G10	UNUSED						ALL
	G11		W1433	5147R	24		31-31-02	001-099
	G11		W1433	5011R	24		31-31-11	115-199
	G12	UNUSED						ALL
	G13		W1433	5019R	24		31-31-41	001-099
	G13		W1433	5019R	24		31-31-21	115-199
	G14		W1433	5047R	24		31-31-43	001-099
	G14		W1433	5047R	24		31-31-22	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 16

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00011A		E3-3/ /		PLUG- (continued)				ALL
	G15		W1433	0077	24		31-31-01	001-099
	G15		W1433	0077	22		31-31-11	115-199
	H01		W1433	0187	24		31-31-62	001-099
	H01	UNUSED						115-199
	H02	UNUSED						ALL
	H03		W1433	0075	22		31-31-61	001-099
	H03		W1433	0075	22		31-31-11	115-199
	H04	UNUSED						ALL
	H05		W1433	0383	24		31-31-62	001-099
	H05		W1433	0200	22		31-31-32	115-199
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09		W1433	5146B	24		31-31-02	001-099
	H09		W1433	5013B	24		31-31-11	115-199
	H10	UNUSED						ALL
	H11		W1433	5147B	24		31-31-02	001-099
	H11		W1433	5011B	24		31-31-11	115-199
	H12	UNUSED						ALL
	H13		W1433	5019B	24		31-31-41	001-099
	H13		W1433	5019B	24		31-31-21	115-199
	H14		W1433	5047B	24		31-31-43	001-099
	H14		W1433	5047B	24		31-31-22	115-199
	H15	UNUSED						ALL
	J01		W1433	0194	24		31-31-62	001-099
	J01		W1433	0187	24		31-31-31	115-199
	J02	UNUSED						001-099
	J02		W1433	5037R	24		31-31-13	115-199
	J03		W1433	0120	22		31-31-61	001-099
	J03		W1433	0120	22		31-31-21	115-199
	J04	UNUSED						ALL
	J05	UNUSED						001-099
	J05		W1433	0213	22		31-31-31	115-199
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09		W1433	5012R	24		31-31-01	001-099
	J09		W1433	5012R	24		31-31-11	115-199
	J10	UNUSED						ALL
	J11		W1433	5015R	24		31-31-01	001-099

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 17

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00011A		E3-3/ /		PLUG- (continued)				ALL
	J11		W1433	5015R	24		31-31-11	115-199
	J12	UNUSED						ALL
	J13		W1433	5021R	24		31-31-43	001-099
	J13		W1433	5022R	24		31-31-22	115-199
	J14		W1433	5065R	24		31-31-43	001-099
	J14		W1433	5050R	24		31-31-22	115-199
	J15		W1433	0079	22		31-31-01	001-099
	J15		W1433	0079	22		31-31-11	115-199
	K01		W1433	0141	24		31-31-61	001-099
	K01		W1433	0141	24		31-31-31	115-199
	K02	UNUSED						001-099
	K02		W1433	5037B	24		31-31-13	115-199
	K03		W1433	0206	24		31-31-62	001-099
	K03		W1433	0232	24		31-31-32	115-199
	K04	UNUSED						ALL
	K05	UNUSED						001-099
	K05		W1433	0211	22		31-31-31	115-199
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09		W1433	5012B	24		31-31-01	001-099
	K09		W1433	5012B	24		31-31-11	115-199
	K10	UNUSED						ALL
	K11		W1433	5015B	24		31-31-01	001-099
	K11		W1433	5015B	24		31-31-11	115-199
	K12	UNUSED						ALL
	K13		W1433	5021B	24		31-31-43	001-099
	K13		W1433	5022B	24		31-31-22	115-199
	K14		W1433	5065B	24		31-31-43	001-099
	K14		W1433	5050B	24		31-31-22	115-199
	K15		W1433	0080	22		31-31-01	001-099
	K15		W1433	0080	22		31-31-11	115-199
	CAP	Y	W1433	0455	24		31-31-02	010-099
	DED		W1433	5012Z			31-31-01	001-099
	DED		W1433	5015Z			31-31-01	001-099
	DED		W1433	5016Z			31-31-41	001-099
	DED		W1433	5017Z			31-31-41	001-099
	DED		W1433	5018Z			31-31-42	001-099
	DED		W1433	5019Z			31-31-41	001-099
	DED		W1433	5021Z			31-31-43	001-099

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 18

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00011A		E3-3/ /		PLUG- (continued)				ALL
	DED		W1433	5047Z			31-31-43	001-099
	DED		W1433	5053Z			31-31-42	001-099
	DED		W1433	5056Z			31-31-01	001-099
	DED		W1433	5065Z			31-31-43	001-099
	DED		W1433	5071Z			31-31-43	001-099
	DED		W1433	5072Z			31-31-43	001-099
	DED		W1433	5138Z			31-31-44	001-099
	DED		W1433	5140Z			31-31-43	001-099
	DED		W1433	1001Z			31-31-13	115-199
	DED		W1433	1002Z			31-31-13	115-199
	DED		W1433	1003Z			31-31-13	115-199
	DED		W1433	5011Z			31-31-11	115-199
	DED		W1433	5012Z			31-31-11	115-199
	DED		W1433	5013Z			31-31-11	115-199
	DED		W1433	5015Z			31-31-11	115-199
	DED		W1433	5016Z			31-31-21	115-199
	DED		W1433	5017Z			31-31-21	115-199
	DED		W1433	5018Z			31-31-21	115-199
	DED		W1433	5019Z			31-31-21	115-199
	DED		W1433	5022Z			31-31-22	115-199
	DED		W1433	5036Z			31-31-13	115-199
	DED		W1433	5037Z			31-31-13	115-199
	DED		W1433	5038Z			31-31-13	115-199
	DED		W1433	5039Z			31-31-13	115-199
	DED		W1433	5041Z			31-31-22	115-199
	DED		W1433	5042Z			31-31-22	115-199
	DED		W1433	5046Z			31-31-22	115-199
	DED		W1433	5047Z			31-31-22	115-199
	DED		W1433	5048Z			31-31-22	115-199
	DED		W1433	5050Z			31-31-22	115-199
	DED		W1433	5053Z			31-31-23	115-199
	DED		W1433	5056Z			31-31-11	115-199
	DED		W1433	5142Z			34-45-01	115-199
	REF	VP	W1433	5142B	24		34-45-01	115-199
	REF	VP	W1433	5142R	24		34-45-01	115-199
			W1433	0448	20		31-31-02	001-099
			W1433	0449	20		31-31-02	001-099
			W1433	0454	20		31-31-02	001-099
			W1433	3501Z			31-31-02	001-099
			W1433	5146Z			31-31-02	001-099

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 19

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00011A		E3-3/ /		PLUG- (continued)				ALL
			W1433	5147Z			31-31-02	001-099
D00011B		E3-3/ /		PLUG-				ALL
	A01		W1433	2501R	24		31-31-51	001-099
	A01		W1433	2501R	24		31-31-31	115-199
	A02		W1433	2501B	24		31-31-51	001-099
	A02		W1433	2501B	24		31-31-31	115-199
	A03	UNUSED						ALL
	A04		W1433	2502R	24		31-31-51	001-099
	A04		W1433	2502R	24		31-31-31	115-199
	A05		W1433	2502B	24		31-31-51	001-099
	A05		W1433	2502B	24		31-31-31	115-199
	A06	UNUSED						ALL
	A07		W1433	2011R	24		31-31-51	001-099
	A07	UNUSED						115-199
	A08		W1433	0338	22		31-31-51	001-099
	A08	UNUSED						115-199
	A09		W1433	2011B	24		31-31-51	001-099
	A09	UNUSED						115-199
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04		W1433	2503R	24		31-31-51	001-099
	B04		W1433	2503R	24		31-31-31	115-199
	B05		W1433	2503B	24		31-31-51	001-099
	B05		W1433	2503B	24		31-31-31	115-199
	B06	UNUSED						ALL
	B07	UNUSED						001-099
	B07		W1433	2006R	22		31-31-31	115-199
	B08	UNUSED						001-099
	B08		W1433	0176	22		31-31-31	115-199
	B09	UNUSED						001-099
	B09		W1433	2006B	22		31-31-31	115-199
	B10	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 20

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00011B		E3-3/ /		PLUG- (continued)				ALL
	B10		W1433	2003R	24		31-31-32	115-199
	B11	UNUSED						001-099
	B11		W1433	0134	22		31-31-32	115-199
	B12	UNUSED						001-099
	B12		W1433	2003B	24		31-31-32	115-199
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						001-099
	C01		W1433	2005R	24		31-31-32	115-199
	C02	UNUSED						001-099
	C02		W1433	0136	22		31-31-32	115-199
	C03	UNUSED						001-099
	C03		W1433	2005B	24		31-31-32	115-199
	C04		W1433	0257	24		31-31-52	001-099
	C04	UNUSED						115-199
	C05		W1433	0262	22		31-31-52	001-099
	C05	UNUSED						115-199
	C06		W1433	0263	24		31-31-52	001-099
	C06	UNUSED						115-199
	C07		W1433	0260	24		31-31-52	001-099
	C07	UNUSED						115-199
	C08		W1433	0265	22		31-31-52	001-099
	C08	UNUSED						115-199
	C09		W1433	0264	24		31-31-52	001-099
	C09	UNUSED						115-199
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 21

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00011B		E3-3/ /		PLUG- (continued)				ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14		W1433	2002R	22		31-31-51	001-099
	F14		W1433	2002R	22		31-31-31	115-199
	F15		W1433	2002B	22		31-31-51	001-099
	F15		W1433	2002B	22		31-31-31	115-199
	G01	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 22

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00011B		E3-3/ /		PLUG- (continued)				ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04		W1433	0138	24		31-31-51	001-099
	H04		W1433	0138	24		31-31-32	115-199
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02		W1433	0296	24		31-31-62	001-099
	J02	UNUSED						115-199
	J03	UNUSED						001-009, 115-199
	J03		W1433	0593	22		31-31-61	010-099
	J04	UNUSED						001-009, 115-199
	J04		W1433	0595	22		31-31-61	010-099
	J05	UNUSED						001-009, 115-199
	J05		W1433	0421	22		31-31-65	010-099
	J06	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 23

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00011B		E3-3/ /		PLUG- (continued)				ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01		W1433	0350	24		31-31-62	001-099
	K01	UNUSED						115-199
	K02	UNUSED						001-009, 115-199
	K02		W1433	0592	22		31-31-61	010-099
	K03	UNUSED						001-009, 115-199
	K03		W1433	0594	22		31-31-61	010-099
	K04	UNUSED						ALL
	K05	UNUSED						001-009, 115-199
	K05		W1433	0422	22		31-31-65	010-099
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
	DED		W1433	2501Z			31-31-51	001-099
	DED		W1433	2502Z			31-31-51	001-099
	DED		W1433	2503Z			31-31-51	001-099
	DED		W1433	2501Z			31-31-31	115-199
	DED		W1433	2502Z			31-31-31	115-199
	DED		W1433	2503Z			31-31-31	115-199
D00011C		E3-3/ /		PLUG-				ALL
	1		W1433	0085	22		31-31-01	001-099
	1		W1433	0085	22		31-31-11	115-199
	2	UNUSED						ALL
	3	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 24

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00011C		E3-3/ /		PLUG- (continued)				ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1433	0086	22		31-31-01	001-099
	7		W1433	0086	22		31-31-11	115-199
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	=C12	UNUSED						ALL
	=C13	UNUSED						ALL
D00011D		E3-3/ /		PLUG-				ALL
	A01	UNUSED						001-099
	A01		W1433	0194	24		31-31-32	115-199
	A02	UNUSED						ALL
	A03		W1433	0139	24		31-31-61	001-099
	A03		W1433	0139	24		31-31-31	115-199
	A04	UNUSED						ALL
	A05	UNUSED						001-099
	A05		W1433	0220	24		31-31-32	115-199
	A06	UNUSED						ALL
	A07	UNUSED						001-099
	A07		W1433	0215	22		31-31-31	115-199
	A08	UNUSED						ALL
	A09		W1433	0101	24		31-31-65	001-099
	A09		W1433	0101	24		31-31-21	115-199
	A10	UNUSED						ALL
	A11		W1433	0111	24		31-31-65	001, 003-099
	A11	VP	W1433	0111	24		31-31-65	002
	A11		W1433	0111	24		31-31-21	115-199
	A12		W1433	5061R	24		31-31-42	001-099
	A12	UNUSED						115-199
	A13		W1433	5137R	24		31-31-44	001-099
	A13		W1433	5054R	24		31-31-23	115-199
	A14	UNUSED						001-099
	A14		W1433	5027R	24		31-31-22	115-199
	A15		W1433	5067R	24		31-31-43	001-099

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 25

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00011D		E3-3/ /		PLUG- (continued)				ALL
	A15		W1433	5052R	24		31-31-22	115-199
	B01		W1433	0145	24		31-31-61	001-099
	B01		W1433	0145	24		31-31-32	115-199
	B02	UNUSED						ALL
	B03		W1433	0140	24		31-31-61	001-099
	B03		W1433	0140	24		31-31-31	115-199
	B04	UNUSED						ALL
	B05	UNUSED						001-099
	B05		W1433	0222	24		31-31-32	115-199
	B06	UNUSED						ALL
	B07	UNUSED						001-099
	B07		W1433	0216	22		31-31-31	115-199
	B08	UNUSED						ALL
	B09		W1433	0102	24		31-31-65	001-099
	B09		W1433	0102	24		31-31-21	115-199
	B10	UNUSED						ALL
	B11	VP	W1433	0112	24		31-31-65	001
	B11		W1433	0112	24		31-31-65	002-099
	B11		W1433	0112	24		31-31-21	115-199
	B12		W1433	5061B	24		31-31-42	001-099
	B12	UNUSED						115-199
	B13		W1433	5137B	24		31-31-44	001-099
	B13		W1433	5054B	24		31-31-23	115-199
	B14	UNUSED						001-099
	B14		W1433	5027B	24		31-31-22	115-199
	B15		W1433	5067B	24		31-31-43	001-099
	B15		W1433	5052B	24		31-31-22	115-199
	C01	UNUSED						001-099
	C01		W1433	0195	24		31-31-32	115-199
	C02	UNUSED						ALL
	C03		W1433	0298	22		31-31-63	001-099
	C03		W1433	0207	24		31-31-32	115-199
	C04	UNUSED						ALL
	C05	UNUSED						001-099
	C05		W1433	0183	24		31-31-31	115-199
	C06	UNUSED						ALL
	C07	UNUSED						001-099
	C07		W1433	0240	24		31-31-32	115-199
	C08	UNUSED						ALL
	C09	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 26

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00011D		E3-3/ /		PLUG- (continued)				ALL
	C10	UNUSED						ALL
	C11	VP	W1433	0113	24		31-31-65	001-002
	C11		W1433	0113	24		31-31-65	003-099
	C11		W1433	0113	24		31-31-21	115-199
	C12	UNUSED						001-009, 115-199
	C12		W1433	5127R	22		31-31-42	010-099
	C13		W1433	5063R	24		31-31-42	001-099
	C13		W1433	5043R	24		31-31-22	115-199
	C14		W1433	5020R	24		31-31-41	001-099
	C14		W1433	5020R	24		31-31-21	115-199
	C15		W1433	5074R	24		31-31-43	001-099
	C15		W1433	5045R	24		31-31-22	115-199
	D01		W1433	0146	24		31-31-61	001-099
	D01	UNUSED						115-199
	D02	UNUSED						ALL
	D03	UNUSED						001-099
	D03		W1433	0230	24		31-31-32	115-199
	D04	UNUSED						ALL
	D05	UNUSED						001-099
	D05		W1433	0177	24		31-31-31	115-199
	D06	UNUSED						ALL
	D07	UNUSED						001-099
	D07		W1433	0241	24		31-31-32	115-199
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11		W1433	0114	24		31-31-65	001-099
	D11		W1433	0114	24		31-31-21	115-199
	D12	UNUSED						001-009, 115-199
	D12		W1433	5127B	22		31-31-42	010-099
	D13		W1433	5063B	24		31-31-42	001-099
	D13		W1433	5043B	24		31-31-22	115-199
	D14		W1433	5020B	24		31-31-41	001-099
	D14		W1433	5020B	24		31-31-21	115-199
	D15		W1433	5074B	24		31-31-43	001-099
	D15		W1433	5045B	24		31-31-22	115-199
	E01		W1433	0192	24		31-31-61	001-099
	E01		W1433	0192	24		31-31-32	115-199
	E02	UNUSED						ALL
	E03	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 27

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00011D		E3-3/ /		PLUG- (continued)				ALL
	E04	UNUSED						ALL
	E05	UNUSED						001-099
	E05		W1433	0178	24		31-31-31	115-199
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10		W1433	5027R	24		31-31-43	001-099
	E10	UNUSED						115-199
	E11		W1433	0115	24		31-31-65	001-099
	E11		W1433	0115	24		31-31-21	115-199
	E12	UNUSED						ALL
	E13		W1433	5028R	24		31-31-42	001-099
	E13		W1433	5028R	24		31-31-22	115-199
	E14	VP	W1433	5142R	24		34-45-01	001-002
	E14		W1433	5142R	24		34-45-01	003-099
	E14		W1433	5040R	24		SPARE	115-199
	E15		W1433	5148R	24		31-31-02	001-099
	E15		W1433	5031R	24		31-31-13	115-199
	F01		W1433	0283	24		31-31-63	001-099
	F01	UNUSED						115-199
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05		W1433	0215	24		31-31-62	001-099
	F05		W1433	0203	22		31-31-32	115-199
	F06	UNUSED						ALL
	F07	UNUSED						001-009, 115-199
	F07		W1433	0538	22		31-31-61	010-099
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10		W1433	5027B	24		31-31-43	001-099
	F10	UNUSED						115-199
	F11		W1433	0116	24		31-31-65	001-099
	F11		W1433	0116	24		31-31-21	115-199
	F12	UNUSED						ALL
	F13		W1433	5028B	24		31-31-42	001-099
	F13		W1433	5028B	24		31-31-22	115-199
	F14	VP	W1433	5142B	24		34-45-01	001-002
	F14		W1433	5142B	24		34-45-01	003-099

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 28

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00011D		E3-3/ /		PLUG- (continued)				ALL
	F14		W1433	5040B	24		SPARE	115-199
	F15		W1433	5148B	24		31-31-02	001-099
	F15		W1433	5031B	24		31-31-13	115-199
	G01		W1433	0189	24		31-31-61	001-099
	G01		W1433	0189	24		31-31-31	115-199
	G02	UNUSED						ALL
	G03		W1433	0295	24		31-31-62	001-099
	G03	UNUSED						115-199
	G04	UNUSED						ALL
	G05		W1433	0216	24		31-31-62	001-099
	G05		W1433	0204	22		31-31-32	115-199
	G06	UNUSED						ALL
	G07	UNUSED						001-009, 115-199
	G07		W1433	0537	22		31-31-61	010-099
	G08	UNUSED						ALL
	G09		W1433	0107	24		31-31-65	001-099
	G09		W1433	0107	24		31-31-21	115-199
	G10		W1433	5039R	24		31-31-43	001-009
	G10		W1433	5105R	22		31-31-41	010-099
	G10	UNUSED						115-199
	G11		W1433	0117	24		31-31-65	001-099
	G11		W1433	0117	24		31-31-21	115-199
	G12	UNUSED						ALL
	G13		W1433	5024R	24		31-31-43	001-099
	G13		W1433	5025R	24		31-31-22	115-199
	G14		W1433	5075R	24		31-31-43	001-099
	G14		W1433	5051R	24		31-31-22	115-199
	G15		W1433	0087	24		31-31-01	001-099
	G15		W1433	0087	24		31-31-11	115-199
	H01		W1433	0126	24		31-31-62	001-099
	H01		W1433	0148	24		31-31-31	115-199
	H02	UNUSED						ALL
	H03	UNUSED						001-099
	H03		W1433	0186	24		31-31-32	115-199
	H04	UNUSED						ALL
	H05		W1433	0398	24		31-31-62	001-099
	H05		W1433	0205	22		31-31-32	115-199
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 29

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00011D		E3-3/ /		PLUG- (continued)				ALL
	H09	VP	W1433	0108	24		31-31-65	001-002
	H09		W1433	0108	24		31-31-65	003-099
	H09	UNUSED						115-199
	H10		W1433	5039B	24		31-31-43	001-009
	H10		W1433	5105B	22		31-31-41	010-099
	H10	UNUSED						115-199
	H11		W1433	0118	24		31-31-65	001-099
	H11		W1433	0118	24		31-31-21	115-199
	H12	UNUSED						ALL
	H13		W1433	5024B	24		31-31-43	001-099
	H13		W1433	5025B	24		31-31-22	115-199
	H14		W1433	5075B	24		31-31-43	001-099
	H14		W1433	5051B	24		31-31-22	115-199
	H15		W1433	0088	24		31-31-01	001-099
	H15		W1433	0088	24		31-31-11	115-199
	J01		W1433	0191	24		31-31-62	001-099
	J01		W1433	0193	24		31-31-32	115-199
	J02	UNUSED						ALL
	J03		W1433	0293	24		31-31-62	001-099
	J03		W1433	0231	24		31-31-32	115-199
	J04	UNUSED						ALL
	J05		W1433	0221	24		31-31-62	001-099
	J05		W1433	0206	22		31-31-32	115-199
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	VP	W1433	0109	24		31-31-65	001-002
	J09		W1433	0109	24		31-31-65	003-099
	J09	UNUSED						115-199
	J10		W1433	5054R	24		31-31-42	001-099
	J10	UNUSED						115-199
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13		W1433	5049R	24		31-31-42	001-099
	J13		W1433	5049R	24		31-31-22	115-199
	J14		W1433	5069R	24		31-31-43	001-099
	J14		W1433	5044R	24		31-31-22	115-199
	J15		W1433	0089	22		31-31-01	001-099
	J15		W1433	0089	22		31-31-11	115-199
	K01		W1433	0193	24		31-31-62	001-099

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 30

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00011D		E3-3/ /		PLUG- (continued)				ALL
	K01		W1433	0191	24		31-31-31	115-199
	K02	UNUSED						ALL
	K03		W1433	0205	24		31-31-62	001-099
	K03	UNUSED						115-199
	K04	UNUSED						ALL
	K05	UNUSED						001-099
	K05		W1433	0214	22		31-31-31	115-199
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	VP	W1433	0110	24		31-31-65	001-002
	K09		W1433	0110	24		31-31-65	003-099
	K09	UNUSED						115-199
	K10		W1433	5054B	24		31-31-42	001-099
	K10	UNUSED						115-199
	K11		W1433	0119	24		31-31-65	001-099
	K11		W1433	0119	24		31-31-21	115-199
	K12	UNUSED						ALL
	K13		W1433	5049B	24		31-31-42	001-099
	K13		W1433	5049B	24		31-31-22	115-199
	K14		W1433	5069B	24		31-31-43	001-099
	K14		W1433	5044B	24		31-31-22	115-199
	K15		W1433	0090	22		31-31-01	001-099
	K15		W1433	0090	22		31-31-11	115-199
	DED		W1433	5039Z			31-31-43	001-009
	DED		W1433	5020Z			31-31-41	001-099
	DED		W1433	5024Z			31-31-43	001-099
	DED		W1433	5027Z			31-31-43	001-099
	DED		W1433	5028Z			31-31-42	001-099
	DED		W1433	5049Z			31-31-42	001-099
	DED		W1433	5054Z			31-31-42	001-099
	DED		W1433	5061Z			31-31-42	001-099
	DED		W1433	5063Z			31-31-42	001-099
	DED		W1433	5067Z			31-31-43	001-099
	DED		W1433	5069Z			31-31-43	001-099
	DED		W1433	5074Z			31-31-43	001-099
	DED		W1433	5075Z			31-31-43	001-099
	DED		W1433	5137Z			31-31-44	001-099
	DED		W1433	5142Z			34-45-01	001-099
	DED		W1433	5105Z			31-31-41	010-099

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 31

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00011D		E3-3/ /		PLUG- (continued)				ALL
	DED		W1433	5127Z			31-31-42	010-099
	DED		W1433	5020Z			31-31-21	115-199
	DED		W1433	5025Z			31-31-22	115-199
	DED		W1433	5027Z			31-31-22	115-199
	DED		W1433	5028Z			31-31-22	115-199
	DED		W1433	5031Z			31-31-13	115-199
	DED		W1433	5040Z			SPARE	115-199
	DED		W1433	5043Z			31-31-22	115-199
	DED		W1433	5044Z			31-31-22	115-199
	DED		W1433	5045Z			31-31-22	115-199
	DED		W1433	5049Z			31-31-22	115-199
	DED		W1433	5051Z			31-31-22	115-199
	DED		W1433	5052Z			31-31-22	115-199
	DED		W1433	5054Z			31-31-23	115-199
			W1433	0450	20		31-31-02	001-099
			W1433	5148Z			31-31-02	001-099
D00011E		E3-3/ /		PLUG-				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04		W1433	2009R	24		31-31-51	001-099
	A04	UNUSED						115-199
	A05		W1433	0336	22		31-31-51	001-099
	A05	UNUSED						115-199
	A06		W1433	2009B	24		31-31-51	001-099
	A06	UNUSED						115-199
	A07		W1433	2010R	24		31-31-51	001-099
	A07	UNUSED						115-199
	A08		W1433	0337	22		31-31-51	001-099
	A08	UNUSED						115-199
	A09		W1433	2010B	24		31-31-51	001-099
	A09	UNUSED						115-199
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						001-009, 115-199
	A13		W1433	2034R	22		31-31-51	010-099
	A14	UNUSED						001-009, 115-199
	A14		W1433	0586	22		31-31-51	010-099

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 32

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00011E		E3-3/ /		PLUG- (continued)				ALL
	A15	UNUSED						001-009, 115-199
	A15		W1433	2034B	22		31-31-51	010-099
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						001-099
	B04		W1433	2007R	24		31-31-31	115-199
	B05	UNUSED						001-099
	B05		W1433	2007B	24		31-31-31	115-199
	B06	UNUSED						ALL
	B07	UNUSED						001-099
	B07		W1433	2004R	24		31-31-32	115-199
	B08	UNUSED						001-099
	B08		W1433	0135	22		31-31-32	115-199
	B09	UNUSED						001-099
	B09		W1433	2004B	24		31-31-32	115-199
	B10		W1433	2007R	24		31-31-51	001-099
	B10	UNUSED						115-199
	B11		W1433	2007B	24		31-31-51	001-099
	B11	UNUSED						115-199
	B12	UNUSED						ALL
	B13	UNUSED						001-009, 115-199
	B13		W1433	2035R	22		31-31-51	010-099
	B14	UNUSED						001-009, 115-199
	B14		W1433	0587	22		31-31-51	010-099
	B15	UNUSED						001-009, 115-199
	B15		W1433	2035B	22		31-31-51	010-099
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04		W1433	0267	24		31-31-52	001-099
	C04	UNUSED						115-199
	C05		W1433	0275	22		31-31-52	001-099
	C05	UNUSED						115-199
	C06		W1433	0274	24		31-31-52	001-099
	C06	UNUSED						115-199
	C07		W1433	0270	24		31-31-52	001-099
	C07	UNUSED						115-199
	C08		W1433	0272	22		31-31-52	001-099
	C08	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 33

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00011E		E3-3/ /		PLUG- (continued)				ALL
	C09		W1433	0273	24		31-31-52	001-099
	C09	UNUSED						115-199
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 34

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00011E		E3-3/ /		PLUG- (continued)				ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 35

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00011E		E3-3/ /		PLUG- (continued)				ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02		W1433	0222	24		31-31-62	001-099
	J02	UNUSED						115-199
	J03	UNUSED						001-009, 115-199
	J03		W1433	0588	22		31-31-61	010-099
	J04	UNUSED						001-009, 115-199
	J04		W1433	0590	22		31-31-61	010-099
	J05	UNUSED						ALL
	J06	VP	W1433	0395	22		31-31-65	001
	J06	UNUSED						002-009, 115-199
	J06		W1433	0423	22		31-31-65	010-099
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02		W1433	0230	24		31-31-62	001-099
	K02	UNUSED						115-199
	K03	UNUSED						001-009, 115-199
	K03		W1433	0589	22		31-31-61	010-099
	K04	UNUSED						001-009, 115-199
	K04		W1433	0591	22		31-31-61	010-099
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 36

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00011E		E3-3/ /		PLUG- (continued)				ALL
	K15	UNUSED						ALL
D00011F		E3-3/ /		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	=C12	UNUSED						ALL
	=C13	UNUSED						ALL
D00013A		1620/295/L005		PLUG-				ALL
	1		W2651	0002	22		31-31-01	001-099
	1		W2651	0002	22		31-31-13	115-199
	2		W2651	0007	20		31-31-01	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W2651	0006	20		31-31-01	001-099
	6		W2651	0006	20		31-31-13	115-199
	7		W2651	5001R	24		31-31-01	001-099
	7		W2651	5001R	24		31-31-13	115-199
	8		W2651	5001B	24		31-31-01	001-099
	8		W2651	5001B	24		31-31-13	115-199
	9		W2651	5002R	24		31-31-13	ALL
	10		W2651	5002B	24		31-31-01	001-099
	10		W2651	5002B	24		31-31-13	115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 37

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00013A		1620/295/L005		PLUG- (continued)				ALL
	16	UNUSED						ALL
	17	UNUSED						001-009, 115-199
	17		W2651	0015	22		31-31-01	010-099
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W2651	0004	24		31-31-01	001-099
	21		W2651	0004	24		31-31-13	115-199
	22		W2651	0005	24		31-31-01	001-099
	22		W2651	0005	24		31-31-13	115-199
	23		W2651	0001	22		31-31-01	001-099
	23		W2651	0001	22		31-31-13	115-199
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 38

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00013A		1620/295/L005		PLUG- (continued)				ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	56	UNUSED						ALL
	57	UNUSED						ALL
	CAP	Y	W2651	0003	22		31-31-13	115-199
D00017		1069/186/L025		PLUG				ALL
	A		W2416	2504R	20		31-31-31	001-008, 115-199
	A		W2416	2504R	20		31-31-51	009-099
	B		W2416	2504B	20		31-31-31	001-008, 115-199
	B		W2416	2504B	20		31-31-51	009-099
	C		W2416	2501R	20		31-31-31	001-008
	C		W2416	2501R	20		31-31-51	009-099, 115-199
	D		W2416	2501B	20		31-31-51	001-099
	D		W2416	2501B	20		31-31-31	115-199
	E		W2416	2502R	20		31-31-31	001-008, 115-199
	E		W2416	2502R	20		31-31-51	009-099
	F		W2416	2502B	20		31-31-31	001-008, 115-199
	F		W2416	2502B	20		31-31-51	009-099
	G		W2416	2503R	20		31-31-31	001-008, 115-199
	G		W2416	2503R	20		31-31-51	009-099
	H		W2416	2503B	20		31-31-31	001-008, 115-199
	H		W2416	2503B	20		31-31-51	009-099
	J	UNUSED						ALL
	K	UNUSED						ALL
			W2416	2502Z			31-31-31	001-008, 115-199
			W2416	2503Z			31-31-31	001-008, 115-199
			W2416	2504Z			31-31-31	001-008, 115-199
			W2416	2501Z			31-31-51	001-099
			W2416	FRAC			31-31-31	ALL
			W2416	2502Z			31-31-51	009-099
			W2416	2503Z			31-31-51	009-099
			W2416	2504Z			31-31-51	009-099
			W2416	2501Z			31-31-31	115-199
D00018		WS817/ /L		PLUG-				ALL
	1		W3326	2509B	18		33-44-21	ALL
	2		W3326	2509R	18		33-44-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 39

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00018		WS817/ /L		PLUG- (continued)				ALL
	3		W3326	0007	18		33-44-21	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D00020		WS817/ /R		PLUG-				ALL
	1		W3426	2509B	18		33-44-21	ALL
	2		W3426	2509R	18		33-44-21	ALL
	3		W3426	0007	18		33-44-21	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D00022		WBL740/ /L		PLUG-				ALL
	1		W3348	2001B	12		33-43-11	ALL
	2		W3348	2001R	12		33-43-11	ALL
	3		W3348	2002B	12		33-43-11	ALL
	4		W3348	2002R	12		33-43-11	ALL
D00025		1040/185/L50		PLUG.				ALL
	1		W2414	1010	20		22-11-12	ALL
	2		W2414	1022	20		22-11-12	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W2414	2511B	20		22-13-11	ALL
	6		W2414	2511R	20		22-13-11	ALL
	7		W2414	2003B	20		22-11-11	ALL
	8		W2414	2003R	20		22-11-11	ALL
	9		W2414	3505R	20		22-13-11	ALL
	10		W2414	3505B	20		22-13-11	ALL
	11		W2414	3505Y	20		22-13-11	ALL
	12		W2414	2002B	20		22-11-11	ALL
	13		W2414	2002R	20		22-11-11	ALL
	14		W2414	3504R	20		22-13-11	ALL
	15		W2414	3504B	20		22-13-11	ALL
	16		W2414	3504Y	20		22-13-11	ALL
	17		W2414	1009	20		22-11-12	ALL
	18		W2414	1021	20		22-11-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 40

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00025		1040/185/L50		PLUG. (continued)				ALL
	19		W2414	0009	18		22-11-12	ALL
D00028		WBL740/ /R		PLUG-				ALL
	1		W3448	2001B	12		33-43-12	ALL
	2		W3448	2001R	12		33-43-12	ALL
	3		W3448	2002B	12		33-43-12	ALL
	4		W3448	2002R	12		33-43-12	ALL
D00029		1860/245/R10		PLUG-				ALL
	1		W2801	0004	20		22-11-12	ALL
	2		W2801	0001	20		22-11-12	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W2801	2003B	20		22-12-11	ALL
	6		W2801	2003R	20		22-12-11	ALL
	7		W2801	2005B	20		22-11-11	ALL
	8		W2801	2005R	20		22-11-11	ALL
	9		W2801	3001R	20		22-12-11	ALL
	10		W2801	3001B	20		22-12-11	ALL
	11		W2801	3001Y	20		22-12-11	ALL
	12		W2801	2004B	20		22-11-11	ALL
	13		W2801	2004R	20		22-11-11	ALL
	14		W2801	3002R	20		22-12-11	ALL
	15		W2801	3002B	20		22-12-11	ALL
	16		W2801	3002Y	20		22-12-11	ALL
	17		W2801	0003	20		22-11-12	ALL
	18		W2801	0002	20		22-11-12	ALL
	19		W2801	0005	20		22-11-12	ALL
	CAP	Y	W2801	3003B	20		22-12-11	ALL
	CAP	Y	W2801	3003R	20		22-12-11	ALL
	CAP	Y	W2801	3003Y	20		22-12-11	ALL
D00030		WBL740/ /R		PLUG-				ALL
	1		W3448	2003B	12		33-43-12	ALL
	2		W3448	2003R	12		33-43-12	ALL
	3		W3448	2004B	12		33-43-12	ALL
	4		W3448	2004R	12		33-43-12	ALL
D00031		FIN90/RS/		PLUG-				ALL
	1		W3101	0004	20		22-11-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 41

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00031		FIN90/RS/		PLUG- (continued)				ALL
	2		W3101	0001	20		22-11-12	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W3101	2004R	20		22-13-11	ALL
	6		W3101	2004B	20		22-13-11	ALL
	7		W3101	2003B	20		22-11-11	ALL
	8		W3101	2003R	20		22-11-11	ALL
	9		W3101	3001Y	20		22-13-11	ALL
	10		W3101	3001B	20		22-13-11	ALL
	11		W3101	3001R	20		22-13-11	ALL
	12		W3101	2002B	20		22-11-11	ALL
	13		W3101	2002R	20		22-11-11	ALL
	14		W3101	3002Y	20		22-13-11	ALL
	15		W3101	3002B	20		22-13-11	ALL
	16		W3101	3002R	20		22-13-11	ALL
	17		W3101	0003	20		22-11-12	ALL
	18		W3101	0002	20		22-11-12	ALL
	19		W3101	0005	20		22-11-12	ALL
	CAP	Y	W3101	3003B	20		22-13-11	ALL
	CAP	Y	W3101	3003R	20		22-13-11	ALL
	CAP	Y	W3101	3003Y	20		22-13-11	ALL
D00035A D00035A		E002-01/ / E2-1/ /		PLUG- PLUG-				001-099 115-199
	A01		W1171	5090R	24		22-41-12	ALL
	A02		W1171	5090B	24		22-41-12	ALL
	A03		W1171	0194	22		22-41-11	ALL
	A04		W1171	0233	22		22-11-12	ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09		W1171	5111R	24		22-13-11	ALL
	A10		W1171	5058R	24		22-12-11	ALL
	A11		W1171	0224	22		22-11-12	001-008, 115-199
	A11		W1171	0224	22		22-11-13	009-099
	A12		W1171	0224	22		22-11-12	001-008, 115-199
	A12		W1171	0224	22		22-11-13	009-099
	A13		W1171	0223	22		22-11-12	001-008, 115-199
	A13		W1171	0223	22		22-11-13	009-099

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 42

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00035A		E002-01/ /		PLUG- (continued)				001-099
D00035A		E2-1/ /		PLUG- (continued)				115-199
	A14		W1171	0223	22		22-11-12	001-008, 115-199
	A14		W1171	0223	22		22-11-13	009-099
	A15		W1171	0232	22		22-11-12	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09		W1171	5111B	24		22-13-11	ALL
	B10		W1171	5058B	24		22-12-11	ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09		W1171	5101R	24		22-12-11	ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13		W1171	0111	22		22-14-11	ALL
	C14	UNUSED						ALL
	C15		W1171	0228	22		22-11-12	ALL
	D01		W1171	5131R	24		22-15-11	ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04		W1171	0491	22		22-11-12	001-008, 115-199
	D04		W1171	0677	22		22-11-13	009-099
	D05	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 43

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00035A		E002-01/ /		PLUG- (continued)				001-099
D00035A		E2-1/ /		PLUG- (continued)				115-199
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09		W1171	5101B	24		22-12-11	ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01		W1171	5131B	24		22-15-11	ALL
	E02	UNUSED						ALL
	E03		W1171	0416	22		22-15-12	001-099
	E03		W1171	1029	22		22-15-12	115-199
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						001-008, 115-199
	E10		W1171	0674	22		22-11-13	009-099
	E11	UNUSED						ALL
	E12		W1171	0395	22		22-14-11	001-099
	E12		W1171	1006	22		22-14-11	115-199
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03		W1171	0393	22		22-14-11	001-099
	F03		W1171	1004	22		22-14-11	115-199
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09		W1171	0329	22		22-15-12	ALL
	F10	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 44

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00035A		E002-01/ /		PLUG- (continued)				001-099
D00035A		E2-1/ /		PLUG- (continued)				115-199
	F11	UNUSED						ALL
	F12		W1171	0250	22		22-12-11	ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15		W1171	0244	22		22-12-11	ALL
	G01		W1171	0415	22		22-15-12	001-099
	G01		W1171	1028	22		22-15-12	115-199
	G02	UNUSED						001-008, 115-199
	G02		W1171	0675	22		22-11-13	009-099
	G03		W1171	5133R	24		22-15-11	ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						001-008, 115-199
	G08		W1171	0673	22		22-11-13	009-099
	G09		W1171	0241	22		22-12-11	ALL
	G10		W1171	0267	22		22-15-12	ALL
	G11		W1171	0234	22		22-11-12	ALL
	G12		W1171	0402	22		22-14-11	001-099
	G12		W1171	1013	22		22-14-11	115-199
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						001-008, 115-199
	H02		W1171	0676	22		22-11-13	009-099
	H03		W1171	5133B	24		22-15-11	ALL
	H04	UNUSED						ALL
	H05		W1171	3012Y	22		22-13-11	ALL
	H06		W1171	3012R	22		22-13-11	ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09		W1171	3007Y	22		22-12-11	ALL
	H10		W1171	3007B	22		22-12-11	ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 45

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00035A		E002-01/ /		PLUG- (continued)				001-099
D00035A		E2-1/ /		PLUG- (continued)				115-199
	H15		W1171	0209	22		22-11-12	ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05		W1171	3010R	22		22-13-11	ALL
	J06		W1171	3012B	22		22-13-11	ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09		W1171	3007R	22		22-12-11	ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01		W1171	0406	22		22-15-12	001-099
	K01		W1171	1017	22		22-15-12	115-199
	K02	UNUSED						ALL
	K03		W1171	0407	22		22-15-12	001-099
	K03		W1171	1018	22		22-15-12	115-199
	K04	UNUSED						ALL
	K05		W1171	3010Y	22		22-13-11	ALL
	K06		W1171	3010B	22		22-13-11	ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15		W1171	0237	22		22-11-12	ALL
	DED		W1171	5058Z			22-12-11	ALL
	DED		W1171	5090Z			22-41-12	ALL
	DED		W1171	5101Z			22-12-11	ALL
	DED		W1171	5111Z			22-13-11	ALL
	DED		W1171	5131Z			22-15-11	ALL
	DED		W1171	5133Z			22-15-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 46

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00035A		E002-01/ /		PLUG- (continued)				001-099
D00035A		E2-1/ /		PLUG- (continued)				115-199
	DED		W1171	1004Z			22-14-11	115-199
	DED		W1171	1006Z			22-14-11	115-199
	DED		W1171	1013Z			22-14-11	115-199
	DED		W1171	1017Z			22-15-12	115-199
	DED		W1171	1018Z			22-15-12	115-199
	DED		W1171	1028Z			22-15-12	115-199
	DED		W1171	1029Z			22-15-12	115-199
D00035B		E002-01/ /		PLUG-				001-099
D00035B		E2-1/ /		PLUG-				115-199
	A01		W1171	5113R	24		22-13-11	ALL
	A02		W1171	5113B	24		22-13-11	ALL
	A03		W1171	0230	22		22-11-12	001-008, 115-199
	A03		W1171	0641	22		22-11-13	009-099
	A04		W1171	0491	22		22-11-12	001-008, 115-199
	A04		W1171	0651	22		22-11-13	009-099
	A05	UNUSED						ALL
	A06		W1171	0226	22		22-11-12	ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12		W1171	0512	22		22-11-12	001-008, 115-199
	A12		W1171	0627	22		22-11-13	009-099
	A13	UNUSED						001-008, 115-199
	A13		W1171	0630	22		22-11-13	009-099
	A14	UNUSED						001-008, 115-199
	A14		W1171	0657	22		22-11-13	009-099
	A15		W1171	0231	22		22-11-12	ALL
	B01		W1171	5103R	24		22-12-11	ALL
	B02		W1171	5103B	24		22-12-11	ALL
	B03		W1171	5100R	24		22-12-11	ALL
	B04		W1171	5100B	24		22-12-11	ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 47

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00035B		E002-01/ /		PLUG- (continued)				001-099
D00035B		E2-1/ /		PLUG- (continued)				115-199
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12		W1171	0623	22		22-11-12	001-008, 115-199
	B12		W1171	0628	22		22-11-13	009-099
	B13	UNUSED						001-008, 115-199
	B13		W1171	0631	22		22-11-13	009-099
	B14	UNUSED						001-008, 115-199
	B14		W1171	0658	22		22-11-13	009-099
	B15		W1171	0512	22		22-11-12	001-008, 115-199
	B15		W1171	0653	22		22-11-13	009-099
	C01		W1171	5102R	24		22-12-11	ALL
	C02		W1171	5102B	24		22-12-11	ALL
	C03		W1171	5091R	24		22-41-11	ALL
	C04		W1171	5091B	24		22-41-11	ALL
	C05		W1171	3008R	22		22-12-11	ALL
	C06		W1171	0411	22		22-41-11	001-099
	C06		W1171	1022	22		22-41-11	115-199
	C07		W1171	0227	22		22-11-12	ALL
	C08	UNUSED						001-008
	C08		W1171	0644	22		22-11-13	009-099
	C08		W1171	0366	22		22-11-12	115-199
	C09		W1171	0247	22		22-12-11	ALL
	C10	UNUSED						001-008, 115-199
	C10		W1171	0638	22		22-11-13	009-099
	C11	UNUSED						001-008
	C11		W1171	0632	22		22-11-13	009-099
	C11		W1171	0632	22		22-11-12	115-199
	C12	UNUSED						001-008, 115-199
	C12		W1171	0629	22		22-11-13	009-099
	C13	UNUSED						001
	C13		W1171	0418	22		22-11-12	002-008
	C13		W1171	0626	22		22-11-13	009-099
	C13		W1171	0429	22		22-11-12	115-199
	C14	UNUSED						001-008, 115-199
	C14		W1171	0665	22		22-11-13	009-099
	C15		W1171	0229	22		22-11-12	ALL
	D01		W1171	5059R	24		31-31-42	001-099
	D01		W1171	5059R	24		31-31-22	115-199
	D02		W1171	5059B	24		31-31-42	001-099

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 48

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00035B		E002-01/ /		PLUG- (continued)				001-099
D00035B		E2-1/ /		PLUG- (continued)				115-199
	D02		W1171	5059B	24		31-31-22	115-199
	D03	UNUSED						001-008
	D03		W1171	0639	22		22-11-13	009-099
	D03		W1171	0370	22		22-11-12	115-199
	D04	UNUSED						001-008, 115-199
	D04		W1171	0645	22		22-11-13	009-099
	D05		W1171	3008B	22		22-12-11	ALL
	D06		W1171	3008Y	22		22-12-11	ALL
	D07	UNUSED						ALL
	D08		W1171	0246	22		22-12-11	ALL
	D09		W1171	0249	22		22-12-11	ALL
	D10		W1171	0248	22		22-12-11	ALL
	D11		W1171	2017B	22		22-12-11	ALL
	D12	UNUSED						001-008, 115-199
	D12		W1171	0634	22		22-11-13	009-099
	D13	UNUSED						ALL
	D14	UNUSED						001-008, 115-199
	D14		W1171	0661	22		22-11-13	009-099
	D15		W1171	0623	22		22-11-12	001-008, 115-199
	D15		W1171	0654	22		22-11-13	009-099
	E01		W1171	5112R	24		22-13-11	ALL
	E02		W1171	5112B	24		22-13-11	ALL
	E03		W1171	5132R	24		22-15-11	ALL
	E04		W1171	0230	22		22-11-12	001-008, 115-199
	E04		W1171	0667	22		22-11-13	009-099
	E05	UNUSED						001-008, 115-199
	E05		W1171	0655	22		22-11-13	009-099
	E06		W1171	2018B	22		22-13-11	ALL
	E07		W1171	2019B	22		22-13-11	ALL
	E08	UNUSED						001-008
	E08		W1171	0670	22		22-11-13	009-099
	E08		W1171	0366	22		22-11-12	115-199
	E09	UNUSED						ALL
	E10		W1171	0251	22		22-12-11	ALL
	E11		W1171	2017R	22		22-12-11	ALL
	E12		W1171	0108	22		22-14-11	ALL
	E13		W1171	2006R	22		22-12-11	ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 49

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00035B		E002-01/ /		PLUG- (continued)				001-099
D00035B		E2-1/ /		PLUG- (continued)				115-199
	F01		W1171	5130R	24		22-15-11	ALL
	F02		W1171	5130B	24		22-15-11	ALL
	F03		W1171	5132B	24		22-15-11	ALL
	F04	UNUSED						001
	F04		W1171	0418	22		22-11-12	002-008
	F04		W1171	0652	22		22-11-13	009-099
	F04		W1171	0429	22		22-11-12	115-199
	F05	UNUSED						ALL
	F06		W1171	2018R	22		22-13-11	ALL
	F07		W1171	2019R	22		22-13-11	ALL
	F08	UNUSED						ALL
	F09		W1171	0413	22		22-41-13	001-099
	F09		W1171	1026	22		22-41-13	115-199
	F10		W1171	0414	22		22-41-13	001-099
	F10		W1171	1027	22		22-41-13	115-199
	F11		W1171	0563	22		22-11-12	001, 115-199
	F11	UNUSED						002-008
	F11		W1171	0633	22		22-11-13	009-099
	F12	UNUSED						001-008, 115-199
	F12		W1171	0635	22		22-11-13	009-099
	F13		W1171	2006B	22		22-12-11	ALL
	F14	UNUSED						ALL
	F15		W1171	0214	22		22-11-12	ALL
	G01	UNUSED						001-008, 115-199
	G01		W1171	0649	22		22-11-13	009-099
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09		W1171	0240	22		22-12-11	ALL
	G10	UNUSED						001-008, 115-199
	G10		W1171	0647	22		22-11-13	009-099
	G11	UNUSED						001-099
	G11		W1171	0211	22		22-11-12	115-199
	G12		W1171	0400	22		22-14-11	001-099
	G12		W1171	1011	22		22-14-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 50

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00035B		E002-01/ /		PLUG- (continued)				001-099
D00035B		E2-1/ /		PLUG- (continued)				115-199
	G13	UNUSED						001-008
	G13		W1171	0637	22		22-11-13	009-099
	G13		W1171	0215	22		22-11-12	115-199
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						001-008, 115-199
	H01		W1171	0650	22		22-11-13	009-099
	H02		W1171	0368	22		22-13-11	ALL
	H03		W1171	0252	22		22-13-11	ALL
	H04	UNUSED						001-008, 115-199
	H04		W1171	0671	22		22-11-13	009-099
	H05		W1171	3011Y	22		22-13-11	ALL
	H06		W1171	3011R	22		22-13-11	ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09		W1171	3006Y	22		22-12-11	ALL
	H10		W1171	3006B	22		22-12-11	ALL
	H11		W1171	0217	22		22-11-12	ALL
	H12	UNUSED						001-008, 115-199
	H12		W1171	0636	22		22-11-13	009-099
	H13	UNUSED						001-008
	H13		W1171	0643	22		22-11-13	009-099
	H13		W1171	0643	22		22-11-12	115-199
	H14	UNUSED						001-008
	H14		W1171	0664	22		22-11-13	009-099
	H14		W1171	0215	22		22-11-12	115-199
	H15		W1171	0210	22		22-11-12	ALL
	J01	UNUSED						ALL
	J02		W1171	0622	22		22-11-12	001-008
	J02		W1171	0646	22		22-11-13	009-099
	J02	UNUSED						115-199
	J03	UNUSED						ALL
	J04		W1171	0622	22		22-11-12	001-008
	J04		W1171	0672	22		22-11-13	009-099
	J04	UNUSED						115-199
	J05		W1171	3009R	22		22-13-11	ALL
	J06		W1171	3011B	22		22-13-11	ALL
	J07	UNUSED						ALL
	J08	UNUSED						001-008

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 51

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00035B		E002-01/ /		PLUG- (continued)				001-099
D00035B		E2-1/ /		PLUG- (continued)				115-199
	J08		W1171	0659	22		22-11-13	009-099
	J08		W1171	0632	22		22-11-12	115-199
	J09		W1171	3006R	22		22-12-11	ALL
	J10	UNUSED						001-008, 115-199
	J10		W1171	0648	22		22-11-13	009-099
	J11		W1171	0362	22		22-14-11	ALL
	J12		W1171	0113	22		22-14-11	ALL
	J13	UNUSED						ALL
	J14	UNUSED						001-008
	J14		W1171	0669	22		22-11-13	009-099
	J14		W1171	0643	22		22-11-12	115-199
	J15	UNUSED						001-008, 115-199
	J15		W1171	0663	22		22-11-13	009-099
	K01	UNUSED						ALL
	K02		W1171	0396	22		22-14-11	001-099
	K02		W1171	1007	22		22-14-11	115-199
	K03		W1171	0104	22		22-14-11	ALL
	K04	UNUSED						001-008
	K04		W1171	0666	22		22-11-13	009-099
	K04		W1171	0370	22		22-11-12	115-199
	K05		W1171	3009Y	22		22-13-11	ALL
	K06		W1171	3009B	22		22-13-11	ALL
	K07	UNUSED						001-008, 115-199
	K07		W1171	0662	22		22-11-13	009-099
	K08	UNUSED						ALL
	K09		W1171	0563	22		22-11-12	001, 115-199
	K09	UNUSED						002-008
	K09		W1171	0660	22		22-11-13	009-099
	K10		W1171	0355	22		22-14-11	ALL
	K11		W1171	0357	22		22-14-11	ALL
	K12		W1171	0358	22		22-14-11	ALL
	K13		W1171	0283	22		22-11-12	001-008
	K13		W1171	0642	22		22-11-13	009-099
	K13	UNUSED						115-199
	K14		W1171	0283	22		22-11-12	001-008
	K14		W1171	0668	22		22-11-13	009-099
	K14	UNUSED						115-199
	K15		W1171	0236	22		22-11-12	ALL
	DED		W1171	5059Z			31-31-42	001-099

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 52

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00035B		E002-01/ /		PLUG- (continued)				001-099
D00035B		E2-1/ /		PLUG- (continued)				115-199
	DED		W1171	5091Z			22-41-11	ALL
	DED		W1171	5100Z			22-12-11	ALL
	DED		W1171	5102Z			22-12-11	ALL
	DED		W1171	5103Z			22-12-11	ALL
	DED		W1171	5112Z			22-13-11	ALL
	DED		W1171	5113Z			22-13-11	ALL
	DED		W1171	5130Z			22-15-11	ALL
	DED		W1171	5132Z			22-15-11	ALL
	DED		W1171	1007Z			22-14-11	115-199
	DED		W1171	1011Z			22-14-11	115-199
	DED		W1171	1022Z			22-41-11	115-199
	DED		W1171	1026Z			22-41-13	115-199
	DED		W1171	1027Z			22-41-13	115-199
	DED		W1171	5059Z			31-31-22	115-199
D00035C		E002-01/ /		PLUG-				001-099
D00035C		E2-1/ /		PLUG-				115-199
	1		W1171	0205	22		22-11-12	ALL
	2		W1171	0203	20		22-11-12	ALL
	3	UNUSED						ALL
	4		W1171	0201	20		22-11-11	ALL
	5		W1171	0204	20		22-11-12	ALL
	6		W1171	0199	20		22-11-11	ALL
	7		W1171	0200	20		22-11-11	ALL
	8	UNUSED						ALL
	9		W1171	0397	22		22-11-12	001-099
	9		W1171	1008	22		22-11-12	115-199
	10		W1171	2012R	20		22-11-11	ALL
	11		W1171	2012B	20		22-11-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
	DED		W1171	1008Z			22-11-12	115-199
D00036		WBL740/ /		PLUG-				ALL
	1		W3348	2003B	12		33-43-11	ALL
	2		W3348	2003R	12		33-43-11	ALL
	3		W3348	2004B	12		33-43-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 53

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00036		WBL740/ /		PLUG- (continued)				ALL
	4		W3348	2004R	12		33-43-11	ALL
D00037		P055-00/ /		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W2041	0016	22		33-16-21	ALL
	4	UNUSED						ALL
	5		W2041	0006	22		22-11-12	ALL
	6	UNUSED						ALL
	7		W2041	0003	22		22-11-12	ALL
	8		W2041	0017	24		22-32-15	ALL
	9		W2041	0015	22		33-16-11	ALL
	10	UNUSED						001-099
	10		W2041	0010	20		22-11-12	115-199
	11	UNUSED						001-099
	11		W2041	0028	20		22-11-12	115-199
	12	UNUSED						ALL
	13	UNUSED						001-099
	13		W2041	0033	22		34-12-12	115-199
	14	UNUSED						001-099
	14		W2041	0034	22		34-12-12	115-199
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W2041	0008	20		22-11-12	ALL
	19		W2041	0009	20		22-11-12	ALL
	20		W2041	5001R	24		22-12-11	ALL
	21		W2041	5001B	24		22-12-11	ALL
	22	UNUSED						001-099
	22		W2041	0004	22		22-11-12	115-199
	23		W2041	5007B	24		22-14-11	ALL
	24		W2041	5007R	24		22-14-11	ALL
	25		W2041	0018	24		22-32-15	ALL
	26		W2041	5008R	24		22-14-11	ALL
	27		W2041	5008B	24		22-14-11	ALL
	28		W2041	5002R	24		22-13-11	ALL
	29		W2041	5002B	24		22-13-11	ALL
	30		W2041	0005	22		22-11-12	ALL
	31	UNUSED						ALL
	CAP	Y	W2041	0027	22		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 54

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00038		1030/140/L010		PLUG				001-099
D00038		1030/134/L010		PLUG				115-199
	1		W2506	1013	18		33-44-11	ALL
	2		W2506	0073	18		33-44-11	ALL
	3		W2506	0109	18		33-44-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D00040		591/295/R30		PLUG-				ALL
	1		W3672	0001	18		33-44-11	ALL
	2		W3672	0002	20		33-44-11	ALL
	3		W3672	0003	18		33-44-11	001-099
	3	18	W3672	0003	18		33-44-11	115-199
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D00042		354/290/L30		RCPT-				001-099
D00042		AA0360/ /		RCPT-				115-199
	1		W3572	0041	16		33-26-11	ALL
	2		W3572	0105	22		33-25-11	ALL
	3	16	W3572	0050	16		33-26-21	001-099
	3		W3572	0050	22		33-26-21	115-199
	4	16	W3572	0125	16		33-26-21	001-099
	4		W3572	0157	22		33-26-21	115-199
	5		W3572	0106	22		33-25-11	ALL
	6		W3572	0035	22		33-26-11	ALL
	7		W3572	0113	20		33-24-11	001-099
	7	18	W3572	0113	18		33-24-11	115-199
	8		W3572	0114	20		33-24-11	001-099
	8	18	W3572	0114	18		33-24-11	115-199
	9		W3572	0157	20		33-24-12	001-099
	9	UNUSED						115-199
	10		W3572	0152	20		33-24-12	001-099
	10	UNUSED						115-199
	11		W3572	0087	20		35-21-12	ALL
	12		W3572	0155	20		SPARE	001-099
	12	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 55

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00042		354/290/L30		RCPT- (continued)				001-099
D00042		AA0360/ /		RCPT- (continued)				115-199
	13		W3572	2001B	22		23-31-21	001-099
	13		W3572	2003B	22		23-31-21	115-199
	14		W3572	2001R	22		23-31-21	001-099
	14		W3572	2003R	22		23-31-21	115-199
	15		W3572	0108	18		35-21-12	ALL
	16		W3572	0034	22		33-26-11	ALL
	17		W3572	0107	22		33-25-11	ALL
	18	16	W3572	0038	16		33-26-11	001-099
	18		W3572	0038	22		33-26-11	115-199
	19		W3572	0079	22		38-32-21	001-099
	19		W3572	0079	20		38-32-21	115-199
	20		W3572	0080	24		38-32-21	001-099
	20		W3572	0080	20		38-32-21	115-199
	21	UNUSED						ALL
	22		W3572	0081	20		38-32-21	001-099
	22		W3572	0081	18		38-32-21	115-199
	23		W3572	0086	22		33-14-41	ALL
	24	UNUSED						ALL
	25		W3572	0090	20		SPARE	ALL
	26		W3572	0091	20		SPARE	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W3572	0121	16		38-32-11	ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34		W3572	0070	24		38-32-11	001-099
	34		W3572	0070	20		38-32-11	115-199
	35		W3572	0071	24		38-32-11	001-099
	35		W3572	0071	20		38-32-11	115-199
	36		W3572	0072	24		38-32-11	001-099
	36		W3572	0072	20		38-32-11	115-199
	37		W3572	0076	18		38-32-11	001-099
	37		W3572	0162	18		38-32-11	115-199
	38		W3572	0067	22		38-13-11	001-099
	38		W3572	0067	18		38-13-11	115-199
	39		W3572	0039	18		33-26-11	ALL
	40		W3572	0040	18		33-26-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 56

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00042		354/290/L30		RCPT- (continued)				001-099
D00042		AA0360/ /		RCPT- (continued)				115-199
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	CAP	Y	W3572	0151	20		SPARE	001-099
D00044		1246/290/L24		PLUG-				001-099
D00044		380/295/L37		PLUG-				115-199
	1		W3572	0045	16		33-26-11	001-099
	1		W3572	0153	16		33-26-11	115-199
	2		W3572	0118	22		33-25-14	001-099
	2		W3572	0169	22		33-25-11	115-199
	3	16	W3572	0056	16		33-26-21	001-099
	3		W3572	0157	22		33-26-21	115-199
	4	16	W3572	0055	16		33-26-21	001-099
	4		W3572	0156	22		33-26-21	115-199
	5		W3572	0119	22		33-25-14	001-099
	5		W3572	0170	22		33-25-11	115-199
	6		W3572	0043	22		33-26-11	001-099
	6		W3572	0151	22		33-26-11	115-199
	7		W3572	0137	20		33-24-11	001-099
	7	18	W3572	0115	18		33-24-11	115-199
	8		W3572	0138	20		33-24-11	001-099
	8	18	W3572	0116	18		33-24-11	115-199
	9	UNUSED						001-099
	9		W3572	0174	20		33-24-12	115-199
	10	UNUSED						001-099
	10		W3572	0175	20		33-24-12	115-199
	11		W3572	0088	20		35-21-13	001-099
	11		W3572	0173	20		35-21-12	115-199
	12	UNUSED						001-099
	12		W3572	0089	20		SPARE	115-199
	13		W3572	2002B	22		23-31-22	001-099
	13		W3572	2004B	22		23-31-21	115-199
	14		W3572	2002R	22		23-31-22	001-099
	14		W3572	2004R	22		23-31-21	115-199
	15		W3572	0120	18		35-21-13	001-099
	15		W3572	0171	18		35-21-12	115-199
	16		W3572	0042	22		33-26-11	001-099
	16		W3572	0150	22		33-26-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 57

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00044		1246/290/L24		PLUG- (continued)				001-099
D00044		380/295/L37		PLUG- (continued)				115-199
	17		W3572	0117	22		33-25-14	001-099
	17		W3572	0168	22		33-25-11	115-199
	18	16	W3572	0044	16		33-26-11	001-099
	18		W3572	0152	22		33-26-11	115-199
	19		W3572	0082	22		38-32-21	001-099
	19		W3572	0164	20		38-32-21	115-199
	20		W3572	0083	24		38-32-21	001-099
	20		W3572	0165	20		38-32-21	115-199
	21	UNUSED						ALL
	22		W3572	0085	20		38-32-21	001-099
	22		W3572	0167	18		38-32-21	115-199
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						001-099
	25		W3572	0092	20		SPARE	115-199
	26	UNUSED						001-099
	26		W3572	0093	20		SPARE	115-199
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W3572	0122	16		38-32-11	001-099
	30		W3572	0172	16		38-32-11	115-199
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34		W3572	0073	24		38-32-11	001-099
	34		W3572	0159	18		38-32-11	115-199
	35		W3572	0074	24		38-32-11	001-099
	35		W3572	0160	18		38-32-11	115-199
	36		W3572	0075	24		38-32-11	001-099
	36		W3572	0161	18		38-32-11	115-199
	37		W3572	0077	18		38-32-11	001-099
	37		W3572	0163	18		38-32-11	115-199
	38		W3572	0093	20		38-13-11	001-099
	38		W3572	0158	18		38-13-11	115-199
	39		W3572	0046	18		33-26-11	001-099
	39		W3572	0154	18		33-26-11	115-199
	40		W3572	0047	18		33-26-11	001-099
	40		W3572	0155	18		33-26-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 58

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00044		1246/290/L24		PLUG- (continued)				001-099
D00044		380/295/L37		PLUG- (continued)				115-199
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
D00045		1055/165/L015		PLUG				ALL
	1		W2418	0017	20		22-11-32	ALL
	2		W2418	1010	18		22-11-32	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W2418	2501B	20		22-13-31	ALL
	6		W2418	2501R	20		22-13-31	ALL
	7		W2418	2006B	20		22-11-31	ALL
	8		W2418	2006R	20		22-11-31	ALL
	9		W2418	3502R	20		22-13-31	ALL
	10		W2418	3502B	20		22-13-31	ALL
	11		W2418	3502Y	20		22-13-31	ALL
	12		W2418	2005B	20		22-11-31	ALL
	13		W2418	2005R	20		22-11-31	ALL
	14		W2418	3501R	20		22-13-31	ALL
	15		W2418	3501B	20		22-13-31	ALL
	16		W2418	3501Y	20		22-13-31	ALL
	17		W2418	0016	20		22-11-32	ALL
	18		W2418	1009	18		22-11-32	ALL
	19		W2418	0023	18		22-11-32	ALL
D00046		1305/290/L22		PLUG-				001-099
D00046		1284/295/L35		PLUG-				115-199
	1		W3672	0104	16		33-26-11	ALL
	2		W3672	0047	22		33-25-14	ALL
	3	16	W3672	0075	16		33-26-21	001-099
	3		W3672	0075	22		33-26-21	115-199
	4	16	W3672	0074	16		33-26-21	001-099
	4		W3672	0074	22		33-26-21	115-199
	5		W3672	0046	22		33-25-14	ALL
	6		W3672	0040	22		33-26-11	ALL
	7		W3672	0041	20		33-24-11	001-099
	7	18	W3672	0041	18		33-24-11	115-199
	8		W3672	0042	20		33-24-11	001-099
	8	18	W3672	0042	18		33-24-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 59

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00046		1305/290/L22		PLUG- (continued)				001-099
D00046		1284/295/L35		PLUG- (continued)				115-199
	9	UNUSED						ALL
	10		W3672	0175	20		SPARE	001-099
	10	UNUSED						115-199
	11		W3672	0109	20		35-21-13	ALL
	12	UNUSED						ALL
	13		W3672	2001B	22		23-31-22	ALL
	14		W3672	2001R	22		23-31-22	ALL
	15		W3672	0048	18		35-21-13	ALL
	16		W3672	0039	22		33-26-11	ALL
	17		W3672	0098	22		33-25-14	ALL
	18	16	W3672	0038	16		33-26-11	001-099
	18		W3672	0038	22		33-26-11	115-199
	19		W3672	0036	22		38-32-21	001-099
	19		W3672	0036	20		38-32-21	115-199
	20		W3672	0037	24		38-32-21	001-099
	20		W3672	0037	20		38-32-21	115-199
	21	UNUSED						ALL
	22		W3672	0053	20		38-32-21	001-099
	22		W3672	0053	18		38-32-21	115-199
	23	UNUSED						ALL
	24		W3672	0117	20		SPARE	ALL
	25		W3672	2004B	24		SPARE	001-099
	25		W3672	0118	20		SPARE	115-199
	26		W3672	2004R	24		SPARE	001-099
	26		W3672	0119	20		SPARE	115-199
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W3672	0107	16		38-32-11	ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34		W3672	0013	24		38-32-11	001-099
	34		W3672	0013	18		38-32-11	115-199
	35		W3672	0014	24		38-32-11	001-099
	35		W3672	0014	18		38-32-11	115-199
	36		W3672	0015	24		38-32-11	001-099
	36		W3672	0015	18		38-32-11	115-199
	37		W3672	0050	16		38-32-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 60

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00046		1305/290/L22		PLUG- (continued)				001-099
D00046		1284/295/L35		PLUG- (continued)				115-199
	38		W3672	0020	20		38-13-11	001-099
	38		W3672	0020	18		38-13-11	115-199
	39		W3672	0105	18		33-26-11	ALL
	40		W3672	0106	18		33-26-11	ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	CAP	Y	W3672	0118	20		SPARE	001-099
	CAP	Y	W3672	0119	20		SPARE	001-099
D00048		1290/290/R22		PLUG-				001-099
D00048		1284/295/R35		PLUG-				115-199
	1		W3672	0101	16		33-26-11	ALL
	2		W3672	0059	22		33-25-24	ALL
	3	16	W3672	0074	16		33-26-21	001-099
	3		W3672	0074	22		33-26-21	115-199
	4	16	W3672	0078	16		33-26-21	001-099
	4		W3672	0072	22		33-26-21	115-199
	5		W3672	0060	22		33-25-24	ALL
	6		W3672	0044	22		33-26-11	ALL
	7		W3672	0045	20		33-24-11	001-099
	7	18	W3672	0045	18		33-24-11	115-199
	8		W3672	0058	20		33-24-11	001-099
	8	18	W3672	0058	18		33-24-11	115-199
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W3672	0110	20		35-21-22	ALL
	12	UNUSED						ALL
	13		W3672	2002B	22		23-31-32	ALL
	14		W3672	2002R	22		23-31-32	ALL
	15		W3672	0062	18		35-21-22	ALL
	16		W3672	0057	22		33-26-11	ALL
	17		W3672	0099	22		33-25-24	ALL
	18	16	W3672	0056	16		33-26-11	001-099
	18		W3672	0056	22		33-26-11	115-199
	19		W3672	0054	22		38-32-21	001-099
	19		W3672	0054	20		38-32-21	115-199
	20		W3672	0055	24		38-32-21	001-099
	20		W3672	0055	20		38-32-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 61

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00048		1290/290/R22		PLUG- (continued)				001-099
D00048		1284/295/R35		PLUG- (continued)				115-199
	21	UNUSED						ALL
	22		W3672	0067	20		38-32-21	001-099
	22		W3672	0067	18		38-32-21	115-199
	23	UNUSED						ALL
	24		W3672	0182	24		SPARE	001-099
	24	UNUSED						115-199
	25		W3672	2004B	24		SPARE	001-099
	25	UNUSED						115-199
	26		W3672	2004R	24		SPARE	001-099
	26	UNUSED						115-199
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W3672	0108	16		38-32-11	ALL
	31		W3672	0114	20		SPARE	ALL
	32		W3672	0115	20		SPARE	ALL
	33		W3672	0116	20		SPARE	ALL
	34		W3672	0016	24		38-32-11	001-099
	34		W3672	0016	18		38-32-11	115-199
	35		W3672	0017	24		38-32-11	001-099
	35		W3672	0017	18		38-32-11	115-199
	36		W3672	0018	24		38-32-11	001-099
	36		W3672	0018	18		38-32-11	115-199
	37		W3672	0064	16		38-32-11	ALL
	38		W3672	0019	20		38-13-11	001-099
	38		W3672	0019	18		38-13-11	115-199
	39		W3672	0102	18		33-26-11	ALL
	40		W3672	0103	18		33-26-11	ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	CAP	Y	W3672	0078	20		33-22-13	115-199
D00049		1860/235/R10		PLUG-				ALL
	1		W2821	0004	20		22-11-32	ALL
	2		W2821	0001	20		22-11-32	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W2821	2003B	20		22-12-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 62

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00049		1860/235/R10		PLUG- (continued)				ALL
	6		W2821	2003R	20		22-12-31	ALL
	7		W2821	2005B	20		22-11-31	ALL
	8		W2821	2005R	20		22-11-31	ALL
	9		W2821	3001R	20		22-12-31	ALL
	10		W2821	3001B	20		22-12-31	ALL
	11		W2821	3001Y	20		22-12-31	ALL
	12		W2821	2004B	20		22-11-31	ALL
	13		W2821	2004R	20		22-11-31	ALL
	14		W2821	3002R	20		22-12-31	ALL
	15		W2821	3002B	20		22-12-31	ALL
	16		W2821	3002Y	20		22-12-31	ALL
	17		W2821	0003	20		22-11-32	ALL
	18		W2821	0002	20		22-11-32	ALL
	19		W2821	0005	20		22-11-32	ALL
	CAP	Y	W2821	3005B	20		22-12-31	ALL
	CAP	Y	W2821	3005R	20		22-12-31	ALL
	CAP	Y	W2821	3005Y	20		22-12-31	ALL
D00050		P34/ I		RELAY SOCKET				ALL
	A1		W1240	0087	22		38-14-11	ALL
	A2		W1240	0090	22		38-14-11	ALL
	A3		W1240	0086	22		38-14-11	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1240	0088	22		38-14-11	ALL
	X2		W1240	0089	22		38-14-11	ALL
D00051		FIN 90/89/		PLUG-				ALL
	1		W3121	0004	20		22-11-32	ALL
	2		W3121	0001	20		22-11-32	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W3121	2004R	20		22-13-31	ALL
	6		W3121	2004B	20		22-13-31	ALL
	7		W3121	2003B	20		22-11-31	ALL
	8		W3121	2003R	20		22-11-31	ALL
	9		W3121	3001Y	20		22-13-31	ALL
	10		W3121	3001B	20		22-13-31	ALL
	11		W3121	3001R	20		22-13-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 63

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00051		FIN 90/89/		PLUG- (continued)				ALL
	12		W3121	2002B	20		22-11-31	ALL
	13		W3121	2002R	20		22-11-31	ALL
	14		W3121	3002Y	20		22-13-31	ALL
	15		W3121	3002B	20		22-13-31	ALL
	16		W3121	3002R	20		22-13-31	ALL
	17		W3121	0003	20		22-11-32	ALL
	18		W3121	0002	20		22-11-32	ALL
	19		W3121	0005	20		22-11-32	ALL
	CAP	Y	W3121	3003B	20		22-13-31	ALL
	CAP	Y	W3121	3003R	20		22-13-31	ALL
	CAP	Y	W3121	3003Y	20		22-13-31	ALL
D00052		1670/187/0		PLUG				001-099
D00052		1670/197/0		PLUG				115-199
	1		W2632	0023	22		38-14-11	ALL
	2		W2632	0024	22		38-14-11	ALL
	3		W2632	0022	22		38-14-11	ALL
	4		W2632	0020	20		38-14-11	ALL
	5		W2632	0021	20		38-14-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00055A		E002-03/ /		PLUG-				001-099
D00055A		E2-3/ /		PLUG-				115-199
	A01		W1175	5027R	24		22-41-12	ALL
	A02		W1175	5027B	24		22-41-12	ALL
	A03		W1175	0395	22		22-41-11	001-099
	A03		W1175	1024	22		22-41-11	115-199
	A04		W1175	0185	22		22-11-32	ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09		W1175	5056R	24		22-13-31	ALL
	A10		W1175	5089R	24		22-12-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 64

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00055A		E002-03/ /		PLUG- (continued)				001-099
D00055A		E2-3/ /		PLUG- (continued)				115-199
	A11		W1175	0188	22		22-11-32	001-008, 115-199
	A11		W1175	0188	22		22-11-33	009-099
	A12		W1175	0188	22		22-11-32	001-008, 115-199
	A12		W1175	0188	22		22-11-33	009-099
	A13		W1175	0178	22		22-11-32	001-008, 115-199
	A13		W1175	0178	22		22-11-33	009-099
	A14		W1175	0178	22		22-11-32	001-008, 115-199
	A14		W1175	0178	22		22-11-33	009-099
	A15		W1175	0184	22		22-11-32	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09		W1175	5056B	24		22-13-31	ALL
	B10		W1175	5089B	24		22-12-31	ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13		W1175	0179	22		22-11-32	001-008, 115-199
	B13		W1175	0179	22		22-11-33	009-099
	B14		W1175	0179	22		22-11-32	001-008, 115-199
	B14		W1175	0179	22		22-11-33	009-099
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09		W1175	5050R	24		22-12-31	ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 65

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00055A		E002-03/ /		PLUG- (continued)				001-099
D00055A		E2-3/ /		PLUG- (continued)				115-199
	C14	UNUSED						ALL
	C15		W1175	0189	22		22-11-32	ALL
	D01		W1175	5062R	24		22-15-11	ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04		W1175	0491	22		22-11-32	001-008, 115-199
	D04		W1175	0677	22		22-11-33	009-099
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09		W1175	5050B	24		22-12-31	ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01		W1175	5062B	24		22-15-11	ALL
	E02	UNUSED						ALL
	E03		W1175	0297	22		22-15-12	ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						001-008, 115-199
	E10		W1175	0674	22		22-11-33	009-099
	E11	UNUSED						ALL
	E12		W1175	0224	22		22-14-31	ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01		W1175	0384	22		22-14-31	001-099
	F01		W1175	1014	22		22-14-31	115-199
	F02	UNUSED						ALL
	F03		W1175	0388	22		22-14-31	001-099
	F03		W1175	1017	22		22-14-31	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 66

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00055A		E002-03/ /		PLUG- (continued)				001-099
D00055A		E2-3/ /		PLUG- (continued)				115-199
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09		W1175	0298	22		22-15-12	ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12		W1175	0204	22		22-12-31	ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15		W1175	0197	22		22-12-31	ALL
	G01		W1175	0397	22		22-15-12	001-099
	G01		W1175	1026	22		22-15-12	115-199
	G02	UNUSED						001-008, 115-199
	G02		W1175	0675	22		22-11-33	009-099
	G03		W1175	5063R	24		22-15-11	ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						001-008, 115-199
	G08		W1175	0673	22		22-11-33	009-099
	G09		W1175	0203	22		22-12-31	ALL
	G10		W1175	0232	22		22-15-12	ALL
	G11		W1175	0186	22		22-11-32	ALL
	G12		W1175	0223	22		22-14-31	ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						001-008, 115-199
	H02		W1175	0676	22		22-11-33	009-099
	H03		W1175	5063B	24		22-15-11	ALL
	H04	UNUSED						ALL
	H05		W1175	3009Y	22		22-13-31	ALL
	H06		W1175	3009R	22		22-13-31	ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 67

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00055A		E002-03/ /		PLUG- (continued)				001-099
D00055A		E2-3/ /		PLUG- (continued)				115-199
	H09		W1175	3003Y	22		22-12-31	ALL
	H10		W1175	3003B	22		22-12-31	ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15		W1175	0166	22		22-11-32	ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05		W1175	3007R	22		22-13-31	ALL
	J06		W1175	3009B	22		22-13-31	ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09		W1175	3003R	22		22-12-31	ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01		W1175	0392	22		22-15-12	001-099
	K01		W1175	1021	22		22-15-12	115-199
	K02	UNUSED						ALL
	K03		W1175	0391	22		22-15-12	001-099
	K03		W1175	1020	22		22-15-12	115-199
	K04	UNUSED						ALL
	K05		W1175	3007Y	22		22-13-31	ALL
	K06		W1175	3007B	22		22-13-31	ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15		W1175	0181	22		22-11-32	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 68

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00055A		E002-03/ /		PLUG- (continued)				001-099
D00055A		E2-3/ /		PLUG- (continued)				115-199
	DED		W1175	5027Z			22-41-12	ALL
	DED		W1175	5050Z			22-12-31	ALL
	DED		W1175	5056Z			22-13-31	ALL
	DED		W1175	5062Z			22-15-11	ALL
	DED		W1175	5063Z			22-15-11	ALL
	DED		W1175	5089Z			22-12-31	ALL
	DED		W1175	1014Z			22-14-31	115-199
	DED		W1175	1017Z			22-14-31	115-199
	DED		W1175	1020Z			22-15-12	115-199
	DED		W1175	1021Z			22-15-12	115-199
	DED		W1175	1024Z			22-41-11	115-199
	DED		W1175	1026Z			22-15-12	115-199
D00055B		E002-03/ /		PLUG-				001-099
D00055B		E2-3/ /		PLUG-				115-199
	A01		W1175	5057R	24		22-13-31	ALL
	A02		W1175	5057B	24		22-13-31	ALL
	A03		W1175	0176	22		22-11-32	001-008, 115-199
	A03		W1175	0641	22		22-11-33	009-099
	A04		W1175	0491	22		22-11-32	001-008, 115-199
	A04		W1175	0651	22		22-11-33	009-099
	A05	UNUSED						ALL
	A06		W1175	0400	22		22-11-32	001-099
	A06		W1175	0172	22		22-11-32	115-199
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12		W1175	0512	22		22-11-32	001-008, 115-199
	A12		W1175	0627	22		22-11-33	009-099
	A13	UNUSED						001-008, 115-199
	A13		W1175	0630	22		22-11-33	009-099
	A14	UNUSED						001-008, 115-199
	A14		W1175	0678	22		22-11-33	009-099
	A15		W1175	0183	22		22-11-32	ALL
	B01		W1175	5052R	24		22-12-31	ALL
	B02		W1175	5052B	24		22-12-31	ALL
	B03		W1175	5048R	24		22-12-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 69

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00055B		E002-03/ /		PLUG- (continued)				001-099
D00055B		E2-3/ /		PLUG- (continued)				115-199
	B04		W1175	5048B	24		22-12-31	ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12		W1175	0623	22		22-11-32	001-008, 115-199
	B12		W1175	0628	22		22-11-33	009-099
	B13	UNUSED						001-008, 115-199
	B13		W1175	0631	22		22-11-33	009-099
	B14	UNUSED						001-008, 115-199
	B14		W1175	0679	22		22-11-33	009-099
	B15		W1175	0512	22		22-11-32	001-008, 115-199
	B15		W1175	0653	22		22-11-33	009-099
	C01		W1175	5049R	24		22-12-31	ALL
	C02		W1175	5049B	24		22-12-31	ALL
	C03		W1175	5029R	24		22-41-11	ALL
	C04		W1175	5029B	24		22-41-11	ALL
	C05		W1175	3005R	22		22-12-31	ALL
	C06		W1175	0398	22		22-41-11	001-099
	C06		W1175	1027	22		22-41-11	115-199
	C07		W1175	0403	22		22-11-32	001-099
	C07		W1175	0175	22		22-11-32	115-199
	C08	UNUSED						001-008
	C08		W1175	0644	22		22-11-33	009-099
	C08		W1175	0343	22		22-11-32	115-199
	C09		W1175	0199	22		22-12-31	ALL
	C10	UNUSED						001-008, 115-199
	C10		W1175	0638	22		22-11-33	009-099
	C11	UNUSED						001-008
	C11		W1175	0632	22		22-11-33	009-099
	C11		W1175	0659	22		22-11-32	115-199
	C12	UNUSED						001-008, 115-199
	C12		W1175	0629	22		22-11-33	009-099
	C13		W1175	0385	22		22-11-32	001
	C13	UNUSED						002-008, 115-199
	C13		W1175	0626	22		22-11-33	009-099

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 70

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00055B		E002-03/ /		PLUG- (continued)				001-099
D00055B		E2-3/ /		PLUG- (continued)				115-199
	C14	UNUSED						001-008, 115-199
	C14		W1175	0665	22		22-11-33	009-099
	C15		W1175	0190	22		22-11-32	ALL
	D01		W1175	5203R	24		31-31-42	001-099
	D01		W1175	5084R	24		31-31-22	115-199
	D02		W1175	5203B	24		31-31-42	001-099
	D02		W1175	5084B	24		31-31-22	115-199
	D03	UNUSED						001-008
	D03		W1175	0639	22		22-11-33	009-099
	D03		W1175	0295	22		22-11-32	115-199
	D04	UNUSED						001-008, 115-199
	D04		W1175	0645	22		22-11-33	009-099
	D05		W1175	3005B	22		22-12-31	ALL
	D06		W1175	3005Y	22		22-12-31	ALL
	D07	UNUSED						ALL
	D08		W1175	0198	22		22-12-31	ALL
	D09		W1175	0201	22		22-12-31	ALL
	D10		W1175	0200	22		22-12-31	ALL
	D11		W1175	2024B	22		22-12-31	ALL
	D12	UNUSED						001-008, 115-199
	D12		W1175	0634	22		22-11-33	009-099
	D13	UNUSED						ALL
	D14	UNUSED						001-008, 115-199
	D14		W1175	0661	22		22-11-33	009-099
	D15		W1175	0623	22		22-11-32	001-008, 115-199
	D15		W1175	0654	22		22-11-33	009-099
	E01		W1175	5055R	24		22-13-31	ALL
	E02		W1175	5055B	24		22-13-31	ALL
	E03		W1175	5064R	24		22-15-11	ALL
	E04		W1175	0176	22		22-11-32	001-008, 115-199
	E04		W1175	0667	22		22-11-33	009-099
	E05	UNUSED						001-008, 115-199
	E05		W1175	0655	22		22-11-33	009-099
	E06		W1175	2025B	22		22-13-31	ALL
	E07		W1175	2026B	22		22-13-31	ALL
	E08	UNUSED						001-008
	E08		W1175	0670	22		22-11-33	009-099
	E08		W1175	0343	22		22-11-32	115-199
	E09	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 71

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00055B		E002-03/ /		PLUG- (continued)				001-099
D00055B		E2-3/ /		PLUG- (continued)				115-199
	E10		W1175	0195	22		22-12-31	ALL
	E11		W1175	2024R	22		22-12-31	ALL
	E12		W1175	0389	22		22-14-31	001-099
	E12		W1175	1018	22		22-14-31	115-199
	E13		W1175	2028R	22		22-12-31	ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01		W1175	5061R	24		22-15-11	ALL
	F02		W1175	5061B	24		22-15-11	ALL
	F03		W1175	5064B	24		22-15-11	ALL
	F04		W1175	0385	22		22-11-32	001
	F04	UNUSED						002-008, 115-199
	F04		W1175	0652	22		22-11-33	009-099
	F05	UNUSED						ALL
	F06		W1175	2025R	22		22-13-31	ALL
	F07		W1175	2026R	22		22-13-31	ALL
	F08	UNUSED						ALL
	F09		W1175	0393	22		22-41-13	001-099
	F09		W1175	1022	22		22-41-13	115-199
	F10		W1175	0394	22		22-41-13	001-099
	F10		W1175	1023	22		22-41-13	115-199
	F11		W1175	0563	22		22-11-32	001, 115-199
	F11	UNUSED						002-008
	F11		W1175	0633	22		22-11-33	009-099
	F12	UNUSED						001-008, 115-199
	F12		W1175	0635	22		22-11-33	009-099
	F13		W1175	2028B	22		22-12-31	ALL
	F14	UNUSED						ALL
	F15		W1175	0177	22		22-11-32	ALL
	G01	UNUSED						001-008, 115-199
	G01		W1175	0649	22		22-11-33	009-099
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09		W1175	0202	22		22-12-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 72

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00055B		E002-03/ /		PLUG- (continued)				001-099
D00055B		E2-3/ /		PLUG- (continued)				115-199
	G10	UNUSED						001-008, 115-199
	G10		W1175	0647	22		22-11-33	009-099
	G11	UNUSED						001-099
	G11		W1175	0170	22		22-11-32	115-199
	G12		W1175	0387	22		22-14-31	001-099
	G12		W1175	1016	22		22-14-31	115-199
	G13	UNUSED						001-008
	G13		W1175	0637	22		22-11-33	009-099
	G13		W1175	0171	22		22-11-32	115-199
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						001-008, 115-199
	H01		W1175	0650	22		22-11-33	009-099
	H02		W1175	0325	22		22-13-31	ALL
	H03		W1175	0208	22		22-13-31	ALL
	H04	UNUSED						001-008, 115-199
	H04		W1175	0671	22		22-11-33	009-099
	H05		W1175	3008Y	22		22-13-31	ALL
	H06		W1175	3008R	22		22-13-31	ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09		W1175	3004Y	22		22-12-31	ALL
	H10		W1175	3004B	22		22-12-31	ALL
	H11		W1175	0191	22		22-11-32	ALL
	H12	UNUSED						001-008, 115-199
	H12		W1175	0636	22		22-11-33	009-099
	H13	UNUSED						001-008
	H13		W1175	0643	22		22-11-33	009-099
	H13		W1175	0643	22		22-11-32	115-199
	H14	UNUSED						001-008
	H14		W1175	0664	22		22-11-33	009-099
	H14		W1175	0171	22		22-11-32	115-199
	H15		W1175	0169	22		22-11-32	ALL
	J01	UNUSED						ALL
	J02		W1175	0622	22		22-11-32	001-008
	J02		W1175	0646	22		22-11-33	009-099
	J02	UNUSED						115-199
	J03	UNUSED						ALL
	J04		W1175	0622	22		22-11-32	001-008

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 73

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00055B		E002-03/ /		PLUG- (continued)				001-099
D00055B		E2-3/ /		PLUG- (continued)				115-199
	J04		W1175	0672	22		22-11-33	009-099
	J04	UNUSED						115-199
	J05		W1175	3006R	22		22-13-31	ALL
	J06		W1175	3008B	22		22-13-31	ALL
	J07	UNUSED						ALL
	J08	UNUSED						001-008
	J08		W1175	0659	22		22-11-33	009-099
	J08		W1175	0659	22		22-11-32	115-199
	J09		W1175	3004R	22		22-12-31	ALL
	J10	UNUSED						001-008, 115-199
	J10		W1175	0648	22		22-11-33	009-099
	J11		W1175	0220	22		22-14-31	ALL
	J12		W1175	0219	22		22-14-31	ALL
	J13	UNUSED						ALL
	J14	UNUSED						001-008
	J14		W1175	0669	22		22-11-33	009-099
	J14		W1175	0643	22		22-11-32	115-199
	J15	UNUSED						001-008, 115-199
	J15		W1175	0663	22		22-11-33	009-099
	K01	UNUSED						ALL
	K02		W1175	0390	22		22-14-31	001-099
	K02		W1175	1019	22		22-14-31	115-199
	K03		W1175	0386	22		22-14-31	001-099
	K03		W1175	1015	22		22-14-31	115-199
	K04	UNUSED						001-008
	K04		W1175	0666	22		22-11-33	009-099
	K04		W1175	0295	22		22-11-32	115-199
	K05		W1175	3006Y	22		22-13-31	ALL
	K06		W1175	3006B	22		22-13-31	ALL
	K07	UNUSED						001-008, 115-199
	K07		W1175	0662	22		22-11-33	009-099
	K08	UNUSED						ALL
	K09		W1175	0563	22		22-11-32	001, 115-199
	K09	UNUSED						002-008
	K09		W1175	0660	22		22-11-33	009-099
	K10		W1175	0218	22		22-14-31	ALL
	K11		W1175	0216	22		22-14-31	ALL
	K12		W1175	0217	22		22-14-31	ALL
	K13		W1175	0296	22		22-11-32	001-008

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 74

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00055B		E002-03/ /		PLUG- (continued)				001-099
D00055B		E2-3/ /		PLUG- (continued)				115-199
	K13	UNUSED	W1175	0642	22		22-11-33	009-099
	K13							115-199
	K14	UNUSED	W1175	0296	22		22-11-32	001-008
	K14		W1175	0668	22		22-11-33	009-099
	K14	UNUSED						115-199
	K15		W1175	0182	22		22-11-32	ALL
	CAP	Y	W1175	0324	22		22-11-32	115-199
	DED		W1175	5203Z			31-31-42	001-099
	DED		W1175	5029Z			22-41-11	ALL
	DED		W1175	5048Z			22-12-31	ALL
	DED		W1175	5049Z			22-12-31	ALL
	DED		W1175	5052Z			22-12-31	ALL
	DED		W1175	5055Z			22-13-31	ALL
	DED		W1175	5057Z			22-13-31	ALL
	DED		W1175	5061Z			22-15-11	ALL
	DED		W1175	5064Z			22-15-11	ALL
	DED		W1175	1015Z			22-14-31	115-199
	DED		W1175	1016Z			22-14-31	115-199
	DED		W1175	1018Z			22-14-31	115-199
	DED		W1175	1019Z			22-14-31	115-199
	DED		W1175	1022Z			22-41-13	115-199
	DED		W1175	1023Z			22-41-13	115-199
	DED		W1175	1027Z			22-41-11	115-199
	DED		W1175	5084Z			31-31-22	115-199
D00055C		E002-03/ /		PLUG-				001-099
D00055C		E2-3/ /		PLUG-				115-199
	1	UNUSED	W1175	0165	22		22-11-32	ALL
	2		W1175	0162	20		22-11-32	ALL
	3							ALL
	4		W1175	0159	20		22-11-31	ALL
	5	UNUSED	W1175	0164	20		22-11-32	ALL
	6		W1175	0157	20		22-11-31	ALL
	7		W1175	0158	20		22-11-31	ALL
	8							ALL
	9	UNUSED	W1175	0380	22		22-11-32	001-099
	9		W1175	1010	20		22-11-32	115-199
	10		W1175	2036R	20		22-11-31	001-099
	10		W1175	2019R	20		22-11-31	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 75

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00055C		E002-03/ /		PLUG- (continued)				001-099
D00055C		E2-3/ /		PLUG- (continued)				115-199
	11		W1175	2036B	20		22-11-31	001-099
	11		W1175	2019B	20		22-11-31	115-199
	12	UNUSED						ALL
	13	UNUSED						ALL
	=C12	UNUSED						ALL
	=C13	UNUSED						ALL
	DED		W1175	1010Z			22-11-32	115-199
D00056		1650/158/L011		PLUG				ALL
	1		W2632	0045	20		38-14-11	ALL
	2		W2632	0044	20		38-14-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D00057		P055-00/ /		PLUG-				ALL
	1		W2061	0007	20		33-13-41	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W2061	0006	20		33-13-41	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W2061	0001	22		22-11-32	ALL
	8	UNUSED						ALL
	9	UNUSED						001-099
	9		W2061	0009	22		SPARE	115-199
	10	UNUSED						001-099
	10		W2061	0010	22		SPARE	115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W2061	0005	20		22-11-32	ALL
	19		W2061	0004	20		22-11-32	ALL
	20		W2061	5001R	24		22-12-31	ALL
	21		W2061	5001B	24		22-12-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 76

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00057		P055-00/ /		PLUG- (continued)				ALL
	22	UNUSED						001-099
	22		W2061	0003	22		22-11-32	115-199
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W2061	0002	22		22-11-32	ALL
	31	UNUSED						ALL
D00060 D00060		P037-00/ / P37/ /		RELAY SOCKET (PLATE 'B') RELAY SOCKET (PLATE 'B')				001-099 115-199
	A1		W1270	0509	18		38-15-11	ALL
	A2		W1270	0505	18		38-15-11	ALL
	A3	UNUSED						ALL
	B1		W1270	0508	18		38-15-11	ALL
	B2		W1270	0504	18		38-15-11	ALL
	B3	UNUSED						ALL
	C1		W1270	0507	18		38-15-11	ALL
	C2		W1270	0502	18		38-15-11	ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	G1	UNUSED						001-099
	G1		W1270	PB01			38-15-11	115-199
	G2		W1270	PA01			38-15-11	001-099
	G2	UNUSED						115-199
	G3		W1270	PA01			38-15-11	001-099
	G3		W1270	PB01			38-15-11	115-199
	X1		W1270	0503	18		38-15-11	ALL
	X2		W1270	0506	18		38-15-11	ALL
D00062 D00062		1670/202/R031 1670/192/R040		PLUG PLUG				001-099 115-199
	1	18	W2632	0025	18		38-15-11	ALL
	2	18	W2632	0026	18		38-15-11	ALL
	3	18	W2632	0027	18		38-15-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 77

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00062		1670/202/R031		PLUG (continued)				001-099
D00062		1670/192/R040		PLUG (continued)				115-199
	4	UNUSED						ALL
	5	18	W2632	0028	18		38-15-11	ALL
D00064		1684/200/R031		PLUG				001-099
D00064		1684/200/R005		PLUG				115-199
	1	UNUSED						ALL
	2	18	W2632	0051	18		38-15-11	ALL
	3	18	W2632	0052	18		38-15-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D00065		1048/170/R013		PLUG				ALL
	1		W2410	0046	18		22-11-22	ALL
	2		W2410	1020	18		22-11-22	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W2410	2506R	20		22-13-21	ALL
	6		W2410	2506B	20		22-13-21	ALL
	7		W2410	2003B	20		22-11-21	ALL
	8		W2410	2003R	20		22-11-21	ALL
	9		W2410	3503Y	20		22-13-21	ALL
	10		W2410	3503B	20		22-13-21	ALL
	11		W2410	3503R	20		22-13-21	ALL
	12		W2410	2002B	20		22-11-21	ALL
	13		W2410	2002R	20		22-11-21	ALL
	14		W2410	3502Y	20		22-13-21	ALL
	15		W2410	3502B	20		22-13-21	ALL
	16		W2410	3502R	20		22-13-21	ALL
	17		W2410	0045	18		22-11-22	ALL
	18		W2410	1021	18		22-11-22	ALL
	19		W2410	0015	18		22-11-22	ALL
D00066		340/290/L05		PLUG-				ALL
	1	16	W3632	0001	16		33-51-12	ALL
	2		W3632	0002	22		33-51-12	ALL
	3		W3632	0003	22		33-51-12	ALL
	4		W3632	0004	22		33-51-12	ALL
	5	16	W3632	0005	16		33-51-12	001-099
	5		W3632	0005	22		33-51-12	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 78

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00066		340/290/L05		PLUG- (continued)				ALL
	6	16	W3632	0005	16		33-51-12	001-099
	6		W3632	0005	22		33-51-12	115-199
	7		W3632	0007	20		33-51-12	ALL
	8		W3632	0008	24		33-51-12	ALL
	9	18	W3632	0009	18		33-51-12	ALL
	10		W3632	0501	20		33-51-21	ALL
	11		W3632	0011	20		33-51-12	ALL
	12		W3632	0502	22		33-51-21	001-099
	12	UNUSED						115-199
	13		W3632	0013	22		33-51-12	ALL
	14	UNUSED						001-099
	14		W3632	0014	22		33-51-12	115-199
	15		W3632	0015	20		33-51-12	001-099
	15		W3632	0502	22		33-51-21	115-199
	16		W3632	0166	20		33-51-12	001-099
	16		W3632	0166	22		33-51-12	115-199
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W3632	0020	22		33-51-12	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W3632	0020	22		33-51-12	ALL
D00068		368/289/L005		PLUG-				001-099
D00068		369/289/L005		PLUG-				115-199
	1	16	W3532	0001	16		33-51-12	ALL
	2		W3532	0002	22		33-51-12	ALL
	3		W3532	0003	22		33-51-12	ALL
	4		W3532	0004	22		33-51-12	ALL
	5	16	W3532	0005	16		33-51-12	001-099
	5		W3532	0005	22		33-51-12	115-199
	6	16	W3532	0005	16		33-51-12	001-099
	6		W3532	0005	22		33-51-12	115-199
	7		W3532	0007	20		33-51-12	ALL
	8		W3532	0008	24		33-51-12	ALL
	9	16	W3532	0009	16		33-51-12	001-099
	9	18	W3532	0009	18		33-51-12	115-199
	10		W3532	0110	20		33-51-21	001-099

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 79

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00068		368/289/L005		PLUG- (continued)				001-099
D00068		369/289/L005		PLUG- (continued)				115-199
	10		W3532	0010	20		33-51-12	115-199
	11		W3532	0011	20		33-51-12	001-099
	11		W3532	0011	22		33-51-12	115-199
	12		W3532	0502	22		33-51-21	001-099
	12		W3532	0160	22		33-51-12	115-199
	13		W3532	0160	22		33-51-12	001-099
	13		W3532	0502	20		33-51-21	115-199
	14	UNUSED						001-099
	14		W3532	0014	20		33-51-12	115-199
	15		W3532	0015	22		33-51-12	001-099
	15		W3532	0517	22		33-51-21	115-199
	16		W3532	0016	20		33-51-12	001-099
	16	UNUSED						115-199
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W3532	0020	22		33-51-12	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W3532	0020	22		33-51-12	ALL
D00069		1860/225/R10		PLUG-				ALL
	1		W2811	0004	20		22-11-22	ALL
	2		W2811	0001	20		22-11-22	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W2811	2003B	20		22-12-21	ALL
	6		W2811	2003R	20		22-12-21	ALL
	7		W2811	2005B	20		22-11-21	ALL
	8		W2811	2005R	20		22-11-21	ALL
	9		W2811	3001R	20		22-12-21	ALL
	10		W2811	3001B	20		22-12-21	ALL
	11		W2811	3001Y	20		22-12-21	ALL
	12		W2811	2004B	20		22-11-21	ALL
	13		W2811	2004R	20		22-11-21	ALL
	14		W2811	3002R	20		22-12-21	ALL
	15		W2811	3002B	20		22-12-21	ALL
	16		W2811	3002Y	20		22-12-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 80

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00069		1860/225/R10		PLUG- (continued)				ALL
	17		W2811	0003	20		22-11-22	ALL
	18		W2811	0002	20		22-11-22	ALL
	19		W2811	0005	20		22-11-22	ALL
	CAP	Y	W2811	3005B	20		22-12-21	ALL
	CAP	Y	W2811	3005R	20		22-12-21	ALL
	CAP	Y	W2811	3005Y	20		22-12-21	ALL
D00070		705/287/R46		PLUG-				ALL
	1	16	W3632	0101	16		33-51-13	ALL
	2		W3632	0102	22		33-51-13	ALL
	3		W3632	0103	22		33-51-13	ALL
	4		W3632	0104	22		33-51-13	ALL
	5	16	W3632	0105	16		33-51-13	001-099
	5		W3632	0105	22		33-51-13	115-199
	6	16	W3632	0105	16		33-51-13	001-099
	6		W3632	0105	22		33-51-13	115-199
	7		W3632	0107	20		33-51-13	ALL
	8		W3632	0108	24		33-51-13	ALL
	9	18	W3632	0109	18		33-51-13	ALL
	10		W3632	0510	20		33-51-21	001-099
	10		W3632	0110	22		33-51-13	115-199
	11		W3632	0111	20		33-51-13	001-099
	11		W3632	0111	22		33-51-13	115-199
	12		W3632	0512	22		33-51-21	001-099
	12	UNUSED						115-199
	13		W3632	0113	20		33-51-13	001-099
	13	UNUSED						115-199
	14	UNUSED						ALL
	15	UNUSED						001-099
	15		W3632	0504	20		33-51-21	115-199
	16		W3632	0116	22		33-51-13	001-099
	16		W3632	0505	22		33-51-21	115-199
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W3632	0120	22		33-51-13	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W3632	0120	22		33-51-13	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 81

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00070		705/287/R46		PLUG- (continued)				ALL
	CAP	Y	W3632	0040	20		SPARE	ALL
	CAP	Y	W3632	0041	20		SPARE	ALL
D00071		FIN90/RS4/		PLUG-				ALL
	1		W3111	0004	20		22-11-22	ALL
	2		W3111	0001	20		22-11-22	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W3111	2004R	20		22-13-21	ALL
	6		W3111	2004B	20		22-13-21	ALL
	7		W3111	2003B	20		22-11-21	ALL
	8		W3111	2003R	20		22-11-21	ALL
	9		W3111	3001Y	20		22-13-21	ALL
	10		W3111	3001B	20		22-13-21	ALL
	11		W3111	3001R	20		22-13-21	ALL
	12		W3111	2002B	20		22-11-21	ALL
	13		W3111	2002R	20		22-11-21	ALL
	14		W3111	3002Y	20		22-13-21	ALL
	15		W3111	3002B	20		22-13-21	ALL
	16		W3111	3002R	20		22-13-21	ALL
	17		W3111	0003	20		22-11-22	ALL
	18		W3111	0002	20		22-11-22	ALL
	19		W3111	0005	20		22-11-22	ALL
	CAP	Y	W3111	3003B	20		22-13-21	ALL
	CAP	Y	W3111	3003R	20		22-13-21	ALL
	CAP	Y	W3111	3003Y	20		22-13-21	ALL
D00072		705/287/L046		PLUG-				001-099
D00072		705/287/L46		PLUG-				115-199
	1	16	W3532	0101	16		33-51-13	ALL
	2		W3532	0102	22		33-51-13	ALL
	3		W3532	0103	22		33-51-13	ALL
	4		W3532	0104	22		33-51-13	ALL
	5	16	W3532	0105	16		33-51-13	001-099
	5		W3532	0105	22		33-51-13	115-199
	6	16	W3532	0105	16		33-51-13	001-099
	6		W3532	0105	22		33-51-13	115-199
	7		W3532	0107	20		33-51-13	ALL
	8		W3532	0108	24		33-51-13	ALL
	9	18	W3532	0109	18		33-51-13	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 82

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00072		705/287/L046		PLUG- (continued)				001-099
D00072		705/287/L46		PLUG- (continued)				115-199
	10		W3532	0510	20		33-51-21	001-099
	10		W3532	0114	22		33-51-13	115-199
	11		W3532	0111	20		33-51-13	ALL
	12		W3532	0512	22		33-51-21	001-099
	12		W3532	0112	22		33-51-13	115-199
	13		W3532	0113	22		33-51-13	ALL
	14		W3532	0114	22		33-51-13	001-099
	14		W3532	0513	20		33-51-21	115-199
	15		W3532	0115	20		33-51-13	001-099
	15		W3532	0519	22		33-51-21	115-199
	16		W3532	0116	20		33-51-13	001-099
	16		W3532	0116	22		33-51-13	115-199
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W3532	0120	22		33-51-13	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W3532	0120	22		33-51-13	ALL
	CAP	Y	W3532	0040	20		SPARE	ALL
	CAP	Y	W3532	0041	20		SPARE	ALL
D00074		1322/272/R49		PLUG-				ALL
	1	16	W3634	0001	16		33-51-14	ALL
	2		W3634	0002	22		33-51-14	ALL
	3		W3634	0003	22		33-51-14	ALL
	4		W3634	0004	22		33-51-14	ALL
	5	16	W3634	0005	16		33-51-14	001-099
	5		W3634	0005	22		33-51-14	115-199
	6	16	W3634	0005	16		33-51-14	001-099
	6		W3634	0005	22		33-51-14	115-199
	7		W3634	0007	20		33-51-14	ALL
	8		W3634	0008	24		33-51-14	ALL
	9	18	W3634	0009	18		33-51-14	ALL
	10		W3634	0010	20		33-51-22	001-099
	10	UNUSED						115-199
	11		W3634	0011	20		33-51-14	ALL
	12		W3634	0522	22		33-51-22	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 83

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00074		1322/272/R49		PLUG- (continued)				ALL
	13	UNUSED						ALL
	14		W3634	0014	20		33-51-14	001-099
	14		W3634	0524	20		33-51-22	115-199
	15		W3634	0015	22		33-51-14	ALL
	16		W3634	0016	22		33-51-14	001-099
	16	UNUSED						115-199
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W3634	0020	22		33-51-14	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W3634	0020	22		33-51-14	ALL
D00075A		E002-02/ /		PLUG-				001-099
D00075A		E2-2/ /		PLUG-				115-199
	A01		W1173	5104R	24		22-41-12	ALL
	A02		W1173	5104B	24		22-41-12	ALL
	A03		W1173	0378	22		22-41-11	001-099
	A03		W1173	1068	22		22-41-11	115-199
	A04		W1173	0092	22		22-11-22	ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09		W1173	5053R	24		22-13-21	ALL
	A10		W1173	5135R	24		22-12-21	ALL
	A11		W1173	0096	22		22-11-22	001-008, 115-199
	A11		W1173	0096	22		22-11-23	009-099
	A12		W1173	0096	22		22-11-22	001-008, 115-199
	A12		W1173	0096	22		22-11-23	009-099
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15		W1173	0106	22		22-11-22	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 84

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00075A		E002-02/ /		PLUG- (continued)				001-099
D00075A		E2-2/ /		PLUG- (continued)				115-199
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09		W1173	5053B	24		22-13-21	ALL
	B10		W1173	5135B	24		22-12-21	ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13		W1173	0095	22		22-11-22	001-008, 115-199
	B13		W1173	0095	22		22-11-23	009-099
	B14		W1173	0095	22		22-11-22	001-008, 115-199
	B14		W1173	0095	22		22-11-23	009-099
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09		W1173	5058R	24		22-12-21	ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13		W1173	0149	22		22-14-21	ALL
	C14	UNUSED						ALL
	C15		W1173	0102	22		22-11-22	ALL
	D01		W1173	5102R	24		22-15-11	ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04		W1173	0491	22		22-11-22	001-008, 115-199
	D04		W1173	0677	22		22-11-23	009-099
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09		W1173	5058B	24		22-12-21	ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 85

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00075A		E002-02/ /		PLUG- (continued)				001-099
D00075A		E2-2/ /		PLUG- (continued)				115-199
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01		W1173	5102B	24		22-15-11	ALL
	E02	UNUSED						ALL
	E03		W1173	0377	22		22-15-12	001-099
	E03		W1173	1300	22		22-15-12	115-199
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						001-008, 115-199
	E10		W1173	0674	22		22-11-23	009-099
	E11	UNUSED						ALL
	E12		W1173	0366	22		22-14-21	001-099
	E12		W1173	1147	22		22-14-21	115-199
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01		W1173	0367	22		22-14-21	001-099
	F01		W1173	1148	22		22-14-21	115-199
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09		W1173	0302	22		22-15-12	ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12		W1173	0119	22		22-22-21	ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15		W1173	0112	22		22-12-21	ALL
	G01		W1173	0375	22		22-15-12	001-099

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 86

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00075A		E002-02/ /		PLUG- (continued)				001-099
D00075A		E2-2/ /		PLUG- (continued)				115-199
	G01		W1173	1299	22		22-15-12	115-199
	G02	UNUSED						001-008, 115-199
	G02		W1173	0675	22		22-11-23	009-099
	G03		W1173	5099R	24		22-15-11	ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						001-008, 115-199
	G08		W1173	0673	22		22-11-23	009-099
	G09		W1173	0118	22		22-22-21	ALL
	G10		W1173	0152	22		22-15-12	ALL
	G11		W1173	0093	22		22-11-22	ALL
	G12		W1173	0379	22		22-14-21	001-099
	G12		W1173	1074	22		22-14-21	115-199
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						001-008, 115-199
	H02		W1173	0676	22		22-11-23	009-099
	H03		W1173	5099B	24		22-15-11	ALL
	H04	UNUSED						ALL
	H05		W1173	3012Y	22		22-13-21	ALL
	H06		W1173	3012R	22		22-13-21	ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09		W1173	3006Y	22		22-12-21	ALL
	H10		W1173	3006B	22		22-12-21	ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15		W1173	0084	22		22-11-22	ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05		W1173	3011R	22		22-13-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 87

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00075A		E002-02/ /		PLUG- (continued)				001-099
D00075A		E2-2/ /		PLUG- (continued)				115-199
	J06		W1173	3012B	22		22-13-21	ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09		W1173	3006R	22		22-12-21	ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01		W1173	0369	22		22-15-12	001-099
	K01		W1173	1154	22		22-15-12	115-199
	K02	UNUSED						ALL
	K03		W1173	0368	22		22-15-12	001-099
	K03		W1173	1150	22		22-15-12	115-199
	K04	UNUSED						ALL
	K05		W1173	3011Y	22		22-13-21	ALL
	K06		W1173	3011B	22		22-13-21	ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15		W1173	0103	22		22-11-22	ALL
	DED		W1173	5053Z			22-13-21	ALL
	DED		W1173	5058Z			22-12-21	ALL
	DED		W1173	5099Z			22-15-11	ALL
	DED		W1173	5102Z			22-15-11	ALL
	DED		W1173	5104Z			22-41-12	ALL
	DED		W1173	5135Z			22-12-21	ALL
	DED		W1173	1068Z			22-41-11	115-199
	DED		W1173	1074Z			22-14-21	115-199
	DED		W1173	1147Z			22-14-21	115-199
	DED		W1173	1148Z			22-14-21	115-199
	DED		W1173	1150Z			22-15-12	115-199
	DED		W1173	1154Z			22-15-12	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 88

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00075A		E002-02/ /		PLUG- (continued)				001-099
D00075A		E2-2/ /		PLUG- (continued)				115-199
	DED		W1173	1299Z			22-15-12	115-199
	DED		W1173	1300Z			22-15-12	115-199
D00075B		E002-02/ /		PLUG-				001-099
D00075B		E2-2/ /		PLUG-				115-199
	A01		W1173	5097R	24		22-13-21	ALL
	A02		W1173	5097B	24		22-13-21	ALL
	A03		W1173	0094	22		22-11-22	001-008, 115-199
	A03		W1173	0641	22		22-11-23	009-099
	A04		W1173	0491	22		22-11-22	001-008, 115-199
	A04		W1173	0651	22		22-11-23	009-099
	A05	UNUSED						ALL
	A06		W1173	0100	22		22-11-22	ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12		W1173	0512	22		22-11-22	001-008, 115-199
	A12		W1173	0627	22		22-11-23	009-099
	A13	UNUSED						001-008, 115-199
	A13		W1173	0630	22		22-11-23	009-099
	A14	UNUSED						001-008, 115-199
	A14		W1173	0657	22		22-11-23	009-099
	A15		W1173	0105	22		22-11-22	ALL
	B01		W1173	5087R	24		22-12-21	ALL
	B02		W1173	5087B	24		22-12-21	ALL
	B03		W1173	5092R	24		22-12-21	ALL
	B04		W1173	5092B	24		22-12-21	ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12		W1173	0623	22		22-11-22	001-008, 115-199
	B12		W1173	0628	22		22-11-23	009-099
	B13	UNUSED						001-008, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 89

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00075B		E002-02/ /		PLUG- (continued)				001-099
D00075B		E2-2/ /		PLUG- (continued)				115-199
	B13		W1173	0631	22		22-11-23	009-099
	B14	UNUSED						001-008, 115-199
	B14		W1173	0658	22		22-11-23	009-099
	B15		W1173	0512	22		22-11-22	001-008, 115-199
	B15		W1173	0653	22		22-11-23	009-099
	C01		W1173	5093R	24		22-12-21	ALL
	C02		W1173	5093B	24		22-12-21	ALL
	C03		W1173	5117R	24		22-41-11	ALL
	C04		W1173	5117B	24		22-41-11	ALL
	C05		W1173	3019R	22		22-12-21	ALL
	C06		W1173	0374	22		22-41-11	001-099
	C06		W1173	1292	22		22-41-11	115-199
	C07		W1173	0099	22		22-11-22	ALL
	C08	UNUSED						001-008
	C08		W1173	0644	22		22-11-23	009-099
	C08		W1173	0279	22		22-11-22	115-199
	C09		W1173	0114	22		22-12-21	ALL
	C10	UNUSED						001-008, 115-199
	C10		W1173	0638	22		22-11-23	009-099
	C11	UNUSED						001-008
	C11		W1173	0632	22		22-11-23	009-099
	C11		W1173	0632	22		22-11-22	115-199
	C12	UNUSED						001-008, 115-199
	C12		W1173	0629	22		22-11-23	009-099
	C13	UNUSED						001
	C13		W1173	0381	22		22-11-22	002-008
	C13		W1173	0626	22		22-11-23	009-099
	C13		W1173	0429	22		22-11-22	115-199
	C14	UNUSED						001-008, 115-199
	C14		W1173	0665	22		22-11-23	009-099
	C15		W1173	0101	22		22-11-22	ALL
	D01		W1173	5312R	24		31-31-42	001-099
	D01		W1173	5128R	24		31-31-22	115-199
	D02		W1173	5312B	24		31-31-42	001-099
	D02		W1173	5128B	24		31-31-22	115-199
	D03	UNUSED						001-008
	D03		W1173	0639	22		22-11-23	009-099
	D03		W1173	0328	22		22-11-22	115-199
	D04	UNUSED						001-008, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 90

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00075B		E002-02/ /		PLUG- (continued)				001-099
D00075B		E2-2/ /		PLUG- (continued)				115-199
	D04		W1173	0645	22		22-11-23	009-099
	D05		W1173	3019B	22		22-12-21	ALL
	D06		W1173	3019Y	22		22-12-21	ALL
	D07	UNUSED						ALL
	D08		W1173	0113	22		22-12-21	ALL
	D09		W1173	0116	22		22-12-21	ALL
	D10		W1173	0115	22		22-12-21	ALL
	D11		W1173	2017B	22		22-12-21	ALL
	D12	UNUSED						001-008, 115-199
	D12		W1173	0634	22		22-11-23	009-099
	D13	UNUSED						ALL
	D14	UNUSED						001-008, 115-199
	D14		W1173	0661	22		22-11-23	009-099
	D15		W1173	0623	22		22-11-22	001-008, 115-199
	D15		W1173	0654	22		22-11-23	009-099
	E01		W1173	5098R	24		22-13-21	ALL
	E02		W1173	5098B	24		22-13-21	ALL
	E03		W1173	5100R	24		22-15-11	ALL
	E04		W1173	0094	22		22-11-22	001-008, 115-199
	E04		W1173	0667	22		22-11-23	009-099
	E05	UNUSED						001-008, 115-199
	E05		W1173	0655	22		22-11-23	009-099
	E06		W1173	2018B	22		22-13-21	ALL
	E07		W1173	2019B	22		22-13-21	ALL
	E08	UNUSED						001-008
	E08		W1173	0670	22		22-11-23	009-099
	E08		W1173	0279	22		22-11-22	115-199
	E09	UNUSED						ALL
	E10		W1173	0110	22		22-12-21	ALL
	E11		W1173	2017R	22		22-12-21	ALL
	E12		W1173	0364	22		22-14-21	001-099
	E12		W1173	1146	22		22-14-21	115-199
	E13		W1173	2003R	22		22-12-21	ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01		W1173	5101R	24		22-15-11	ALL
	F02		W1173	5101B	24		22-15-11	ALL
	F03		W1173	5100B	24		22-15-11	ALL
	F04	UNUSED						001

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 91

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00075B		E002-02/ /		PLUG- (continued)				001-099
D00075B		E2-2/ /		PLUG- (continued)				115-199
	F04		W1173	0381	22		22-11-22	002-008
	F04		W1173	0652	22		22-11-23	009-099
	F04		W1173	0429	22		22-11-22	115-199
	F05	UNUSED						ALL
	F06		W1173	2018R	22		22-13-21	ALL
	F07		W1173	2019R	22		22-13-21	ALL
	F08	UNUSED						ALL
	F09		W1173	0158	22		22-41-13	ALL
	F10		W1173	0370	22		22-41-13	001-099
	F10		W1173	1157	22		22-41-13	115-199
	F11		W1173	0563	22		22-11-22	001, 115-199
	F11	UNUSED						002-008
	F11		W1173	0633	22		22-11-23	009-099
	F12	UNUSED						001-008, 115-199
	F12		W1173	0635	22		22-11-23	009-099
	F13		W1173	2003B	22		22-12-21	ALL
	F14	UNUSED						ALL
	F15		W1173	0089	22		22-11-22	ALL
	G01	UNUSED						001-008, 115-199
	G01		W1173	0649	22		22-11-23	009-099
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09		W1173	0117	22		22-22-21	ALL
	G10	UNUSED						001-008, 115-199
	G10		W1173	0647	22		22-11-23	009-099
	G11	UNUSED						001-099
	G11		W1173	0085	22		22-11-22	115-199
	G12		W1173	0198	22		22-14-21	ALL
	G13	UNUSED						001-008
	G13		W1173	0637	22		22-11-23	009-099
	G13		W1173	0090	22		22-11-22	115-199
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						001-008, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 92

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00075B		E002-02/ /		PLUG- (continued)				001-099
D00075B		E2-2/ /		PLUG- (continued)				115-199
	H01		W1173	0650	22		22-11-23	009-099
	H02		W1173	0340	22		22-13-21	ALL
	H03		W1173	0070	22		22-13-21	ALL
	H04	UNUSED						001-008, 115-199
	H04		W1173	0671	22		22-11-23	009-099
	H05		W1173	3013Y	22		22-13-21	ALL
	H06		W1173	3013R	22		22-13-21	ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09		W1173	3007Y	22		22-12-21	ALL
	H10		W1173	3007B	22		22-12-21	ALL
	H11		W1173	0097	22		22-11-22	ALL
	H12	UNUSED						001-008, 115-199
	H12		W1173	0636	22		22-11-23	009-099
	H13	UNUSED						001-008
	H13		W1173	0643	22		22-11-23	009-099
	H13		W1173	0643	22		22-11-22	115-199
	H14	UNUSED						001-008
	H14		W1173	0664	22		22-11-23	009-099
	H14		W1173	0090	22		22-11-22	115-199
	H15		W1173	0086	22		22-11-22	ALL
	J01	UNUSED						ALL
	J02		W1173	0622	22		22-11-22	001-008
	J02		W1173	0646	22		22-11-23	009-099
	J02	UNUSED						115-199
	J03	UNUSED						ALL
	J04		W1173	0622	22		22-11-22	001-008
	J04		W1173	0672	22		22-11-23	009-099
	J04	UNUSED						115-199
	J05		W1173	3010R	22		22-13-21	ALL
	J06		W1173	3013B	22		22-13-21	ALL
	J07	UNUSED						ALL
	J08	UNUSED						001-008
	J08		W1173	0659	22		22-11-23	009-099
	J08		W1173	0632	22		22-11-22	115-199
	J09		W1173	3007R	22		22-12-21	ALL
	J10	UNUSED						001-008, 115-199
	J10		W1173	0648	22		22-11-23	009-099
	J11		W1173	0137	22		22-14-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 93

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00075B		E002-02/ /		PLUG- (continued)				001-099
D00075B		E2-2/ /		PLUG- (continued)				115-199
	J12		W1173	0144	22		22-14-21	ALL
	J13	UNUSED						ALL
	J14	UNUSED						001-008
	J14		W1173	0669	22		22-11-23	009-099
	J14		W1173	0643	22		22-11-22	115-199
	J15	UNUSED						001-008, 115-199
	J15		W1173	0663	22		22-11-23	009-099
	K01	UNUSED						ALL
	K02		W1173	0199	22		22-14-21	ALL
	K03		W1173	0363	22		22-14-21	001-099
	K03		W1173	1145	22		22-14-21	115-199
	K04	UNUSED						001-008
	K04		W1173	0666	22		22-11-23	009-099
	K04		W1173	0328	22		22-11-22	115-199
	K05		W1173	3010Y	22		22-13-21	ALL
	K06		W1173	3010B	22		22-13-21	ALL
	K07	UNUSED						001-008, 115-199
	K07		W1173	0662	22		22-11-23	009-099
	K08	UNUSED						ALL
	K09		W1173	0563	22		22-11-22	001, 115-199
	K09	UNUSED						002-008
	K09		W1173	0660	22		22-11-23	009-099
	K10		W1173	0135	22		22-14-21	ALL
	K11		W1173	0140	22		22-14-21	ALL
	K12		W1173	0143	22		22-14-21	ALL
	K13		W1173	0297	22		22-11-22	001-008
	K13		W1173	0642	22		22-11-23	009-099
	K13	UNUSED						115-199
	K14		W1173	0297	22		22-11-22	001-008
	K14		W1173	0668	22		22-11-23	009-099
	K14	UNUSED						115-199
	K15		W1173	0104	22		22-11-22	ALL
	DED		W1173	5312Z			31-31-42	001-099
	DED		W1173	5087Z			22-12-21	ALL
	DED		W1173	5092Z			22-12-21	ALL
	DED		W1173	5093Z			22-12-21	ALL
	DED		W1173	5097Z			22-13-21	ALL
	DED		W1173	5098Z			22-13-21	ALL
	DED		W1173	5100Z			22-15-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 94

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00075B		E002-02/ /		PLUG- (continued)				001-099
D00075B		E2-2/ /		PLUG- (continued)				115-199
	DED		W1173	5101Z			22-15-11	ALL
	DED		W1173	5117Z			22-41-11	ALL
	DED		W1173	1145Z			22-14-21	115-199
	DED		W1173	1146Z			22-14-21	115-199
	DED		W1173	1157Z			22-41-13	115-199
	DED		W1173	1292Z			22-41-11	115-199
	DED		W1173	5128Z			31-31-22	115-199
D00075C		E002-02/ /		PLUG-				001-099
D00075C		E2-2/ /		PLUG-				115-199
	1		W1173	0083	22		22-11-22	ALL
	2		W1173	0080	20		22-11-22	ALL
	3	UNUSED						ALL
	4		W1173	0078	20		22-11-21	ALL
	5		W1173	0082	20		22-11-22	ALL
	6		W1173	0076	20		22-11-21	ALL
	7		W1173	0077	20		22-11-21	ALL
	8	UNUSED						ALL
	9		W1173	0380	22		22-11-22	001-099
	9		W1173	1098	22		22-11-22	115-199
	10		W1173	2012R	20		22-11-21	ALL
	11		W1173	2012B	20		22-11-21	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
	DED		W1173	1098Z			22-11-22	115-199
D00076		1322/272/L049		PLUG-EMER LT MID-AFT				001-099
D00076		1322/272/L49		PLUG-EMER LT MID-AFT				115-199
	1	16	W3534	0001	16		33-51-14	ALL
	2		W3534	0002	22		33-51-14	ALL
	3		W3534	0003	22		33-51-14	ALL
	4		W3534	0004	22		33-51-14	ALL
	5	16	W3534	0005	16		33-51-14	001-099
	5		W3534	0005	22		33-51-14	115-199
	6	16	W3534	0005	16		33-51-14	001-099
	6		W3534	0005	22		33-51-14	115-199
	7		W3534	0007	20		33-51-14	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 95

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00076		1322/272/L049		PLUG-EMER LT MID-AFT (continued)				001-099
D00076		1322/272/L49		PLUG-EMER LT MID-AFT (continued)				115-199
	8		W3534	0008	24		33-51-14	ALL
	9	18	W3534	0009	18		33-51-14	ALL
	10		W3534	0010	20		33-51-22	001-099
	10	UNUSED						115-199
	11		W3534	0011	20		33-51-14	001-099
	11		W3534	0011	22		33-51-14	115-199
	12		W3534	0012	22		33-51-22	001-099
	12		W3534	0506	20		33-51-22	115-199
	13		W3534	0113	20		33-51-14	001-099
	13		W3534	0113	22		33-51-14	115-199
	14	UNUSED						001-099
	14		W3534	0014	20		33-51-14	115-199
	15	UNUSED						001-099
	15		W3534	0015	22		33-51-14	115-199
	16		W3534	0016	20		33-51-14	001-099
	16		W3534	0519	22		33-51-22	115-199
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W3534	0020	22		33-51-14	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W3534	0020	22		33-51-14	ALL
D00077		P055-00/ /		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W2051	0019	22		33-16-41	ALL
	4	UNUSED						ALL
	5		W2051	0005	22		22-11-22	ALL
	6	UNUSED						ALL
	7		W2051	0006	22		22-11-22	ALL
	8	UNUSED						ALL
	9		W2051	0020	22		33-16-41	ALL
	10	UNUSED						001-099
	10		W2051	0025	20		22-11-22	115-199
	11	UNUSED						001-099
	11		W2051	0009	20		22-11-22	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 96

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00077		P055-00/ /		PLUG- (continued)				ALL
	12	UNUSED						ALL
	13	UNUSED						001-099
	13		W2051	0027	22		34-12-22	115-199
	14	UNUSED						001-099
	14		W2051	0028	22		34-12-22	115-199
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W2051	0010	20		22-11-22	ALL
	19		W2051	0011	20		22-11-22	ALL
	20		W2051	5001R	24		22-12-21	ALL
	21		W2051	5001B	24		22-12-21	ALL
	22	UNUSED						001-099
	22		W2051	0007	22		22-11-22	115-199
	23		W2051	5003B	24		22-14-21	ALL
	24		W2051	5003R	24		22-14-21	ALL
	25	UNUSED						ALL
	26		W2051	5004R	24		22-14-21	ALL
	27		W2051	5004B	24		22-14-21	ALL
	28		W2051	5002R	24		22-13-21	ALL
	29		W2051	5002B	24		22-13-21	ALL
	30		W2051	0008	22		22-11-22	ALL
	31	UNUSED						ALL
	CAP	Y	W2051	0023	22		SPARE	115-199
	CAP	Y	W2051	0024	22		SPARE	115-199
D00078		1678/289/R03		PLUG-				ALL
	1	16	W3634	0101	16		33-51-15	ALL
	2		W3634	0102	22		33-51-15	ALL
	3		W3634	0103	22		33-51-15	ALL
	4		W3634	0104	22		33-51-15	ALL
	5	16	W3634	0105	16		33-51-15	001-099
	5		W3634	0105	22		33-51-15	115-199
	6	16	W3634	0105	16		33-51-15	001-099
	6		W3634	0105	22		33-51-15	115-199
	7		W3634	0107	20		33-51-15	ALL
	8		W3634	0108	24		33-51-15	ALL
	9	18	W3634	0109	18		33-51-15	ALL
	10		W3634	0110	20		33-51-22	001-099
	10	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 97

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00078		1678/289/R03		PLUG- (continued)				ALL
	11		W3634	0111	20		33-51-15	001-099
	11		W3634	0111	22		33-51-15	115-199
	12		W3634	0112	22		33-51-22	001-099
	12		W3634	0528	20		33-51-22	115-199
	13		W3634	0113	20		33-51-15	ALL
	14	UNUSED						001-099
	14		W3634	0114	22		33-51-15	115-199
	15	UNUSED						ALL
	16		W3634	0116	22		33-51-15	001-099
	16		W3634	0527	22		33-51-22	115-199
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W3634	0120	22		33-51-15	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W3634	0120	22		33-51-15	ALL
	CAP	Y	W3634	0040	20		SPARE	ALL
	CAP	Y	W3634	0041	20		SPARE	ALL
D00079A D00079A		E003-02/ / E3-2/ /		PLUG- PLUG-				001-099 115-199
	A01		W1423	5013R	24		22-41-11	ALL
	A02	UNUSED						ALL
	A03		W1423	5014R	24		22-41-11	ALL
	A04		W1423	5015R	24		22-41-11	ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09		W1423	5017R	24		22-41-12	ALL
	A10		W1423	5018R	24		22-41-12	ALL
	A11		W1423	5021R	24		22-41-12	ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15		W1423	5011R	24		22-41-11	ALL
	B01		W1423	5013B	24		22-41-11	ALL
	B02	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 98

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00079A		E003-02/ /		PLUG- (continued)				001-099
D00079A		E3-2/ /		PLUG- (continued)				115-199
	B03		W1423	5014B	24		22-41-11	ALL
	B04		W1423	5015B	24		22-41-11	ALL
	B05	UNUSED						ALL
	B06		W1423	0090	22		22-41-11	001-099
	B06	UNUSED						115-199
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09		W1423	5017B	24		22-41-12	ALL
	B10		W1423	5018B	24		22-41-12	ALL
	B11		W1423	5021B	24		22-41-12	ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14		W1423	0090	22		22-41-11	001-099
	B14	UNUSED						115-199
	B15		W1423	5011B	24		22-41-11	ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09		W1423	0074	22		22-41-11	ALL
	C10		W1423	0075	22		22-41-11	ALL
	C11		W1423	0071	22		22-41-11	ALL
	C12	UNUSED						ALL
	C13		W1423	0095	22		22-41-11	ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04		W1423	0072	22		22-14-31	001-099
	D04		W1423	1001	22		22-14-31	115-199
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 99

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00079A		E003-02/ /		PLUG- (continued)				001-099
D00079A		E3-2/ /		PLUG- (continued)				115-199
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06		W1423	0095	22		22-41-11	ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14		W1423	0070	22		22-41-11	ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						001-099
	F06		W1423	0099	22		22-41-11	115-199
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 100

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00079A		E003-02/ /		PLUG- (continued)				001-099
D00079A		E3-2/ /		PLUG- (continued)				115-199
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04		W1423	0073	22		22-14-31	001-099
	H04		W1423	1002	22		22-14-31	115-199
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14		W1423	0098	22		22-41-11	ALL
	H15	UNUSED						001-099
	H15		W1423	0099	22		22-41-11	115-199
	J01		W1423	5012R	24		22-41-11	ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04		W1423	5016R	24		22-41-11	ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 101

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00079A		E003-02/ /		PLUG- (continued)				001-099
D00079A		E3-2/ /		PLUG- (continued)				115-199
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12		W1423	0081	22		22-41-13	ALL
	J13		W1423	0080	22		22-41-13	ALL
	J14		W1423	0078	22		22-41-13	ALL
	J15		W1423	5020R	24		22-41-13	ALL
	K01		W1423	5012B	24		22-41-11	ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04		W1423	5016B	24		22-41-11	ALL
	K05	UNUSED						ALL
	K06		W1423	0098	22		22-41-11	ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11		W1423	0076	22		22-41-13	ALL
	K12		W1423	0082	22		22-41-13	ALL
	K13		W1423	0079	22		22-41-13	ALL
	K14		W1423	0077	22		22-41-13	ALL
	K15		W1423	5020B	24		22-41-13	ALL
	DED		W1423	5011Z			22-41-11	ALL
	DED		W1423	5012Z			22-41-11	ALL
	DED		W1423	5013Z			22-41-11	ALL
	DED		W1423	5014Z			22-41-11	ALL
	DED		W1423	5015Z			22-41-11	ALL
	DED		W1423	5016Z			22-41-11	ALL
	DED		W1423	5017Z			22-41-12	ALL
	DED		W1423	5018Z			22-41-12	ALL
	DED		W1423	5020Z			22-41-13	ALL
	DED		W1423	5021Z			22-41-12	ALL
	DED		W1423	1001Z			22-14-31	115-199
	DED		W1423	1002Z			22-14-31	115-199
D00079B		E003-02/ /		PLUG-				001-099
D00079B		E3-2/ /		PLUG-				115-199
	A01	UNUSED						ALL
	A02	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 102

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00079B		E003-02/ /		PLUG- (continued)				001-099
D00079B		E3-2/ /		PLUG- (continued)				115-199
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 103

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00079B		E003-02/ /		PLUG- (continued)				001-099
D00079B		E3-2/ /		PLUG- (continued)				115-199
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 104

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00079B		E003-02/ /		PLUG- (continued)				001-099
D00079B		E3-2/ /		PLUG- (continued)				115-199
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 105

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00079B		E003-02/ /		PLUG- (continued)				001-099
D00079B		E3-2/ /		PLUG- (continued)				115-199
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
D00079C		E003-02/ /		PLUG-				001-099
D00079C		E3-2/ /		PLUG-				115-199
	1	UNUSED						ALL
	2		W1423	0085	20		22-41-11	ALL
	3		W1423	0084	20		22-41-11	ALL
	4	UNUSED						ALL
	5		W1423	0086	20		22-41-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 106

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00079C		E003-02/ /		PLUG- (continued)				001-099
D00079C		E3-2/ /		PLUG- (continued)				115-199
	6	UNUSED						ALL
	7		W1423	0087	20		22-41-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W1423	0088	20		22-41-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
D00080		1678/289/L003		PLUG-EMER LT AFT				001-099
D00080		1678/289/L03		PLUG-EMER LT AFT				115-199
	1	16	W3534	0101	16		33-51-15	ALL
	2		W3534	0102	22		33-51-15	ALL
	3		W3534	0103	22		33-51-15	ALL
	4		W3534	0104	22		33-51-15	ALL
	5	16	W3534	0105	16		33-51-15	001-099
	5		W3534	0105	22		33-51-15	115-199
	6	16	W3534	0105	16		33-51-15	001-099
	6		W3534	0105	22		33-51-15	115-199
	7		W3534	0107	20		33-51-15	ALL
	8		W3534	0108	24		33-51-15	ALL
	9	18	W3534	0109	18		33-51-15	ALL
	10		W3534	0510	20		33-51-22	001-099
	10		W3534	0110	20		33-51-15	115-199
	11		W3534	0111	20		33-51-15	001-099
	11		W3534	0111	22		33-51-15	115-199
	12		W3534	0517	22		33-51-22	001-099
	12	UNUSED						115-199
	13	UNUSED						001-099
	13		W3534	0510	20		33-51-22	115-199
	14	UNUSED						001-099
	14		W3534	0114	22		33-51-15	115-199
	15		W3534	0115	20		33-51-15	001-099
	15	UNUSED						115-199
	16		W3534	0116	22		33-51-15	001-099
	16		W3534	0517	22		33-51-22	115-199
	17	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 107

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00080		1678/289/L003		PLUG-EMER LT AFT (continued)				001-099
D00080		1678/289/L03		PLUG-EMER LT AFT (continued)				115-199
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W3534	0120	22		33-51-15	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W3534	0120	22		33-51-15	ALL
	CAP	Y	W3534	0041	20		SPARE	ALL
		Y	W3534	0040	20		SPARE	ALL
D00081A		E002-01/ /		PLUG-				001-099
D00081A		E2-1/ /		PLUG-				115-199
	A01		W1171	5105R	24		22-12-11	ALL
	A02	UNUSED						ALL
	A03		W1171	5014R	24		34-22-18	ALL
	A04	UNUSED						ALL
	A05		W1171	5019R	24		34-22-18	ALL
	A06	UNUSED						ALL
	A07		W1171	5177R	24		34-22-19	ALL
	A08	UNUSED						ALL
	A09		W1171	0002	24		34-22-14	ALL
	A10	UNUSED						ALL
	A11		W1171	0498	24		34-22-17	ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						001, 003-099, 115-199
	A14		W1171	8041	22		34-22-16	002
	A15	UNUSED						ALL
	B01		W1171	5105B	24		22-12-11	ALL
	B02	UNUSED						ALL
	B03		W1171	5014B	24		34-22-18	ALL
	B04	UNUSED						ALL
	B05		W1171	5019B	24		34-22-18	ALL
	B06	UNUSED						ALL
	B07		W1171	5177B	24		34-22-19	ALL
	B08	UNUSED						ALL
	B09		W1171	0004	24		34-22-14	ALL
	B10	UNUSED						001-002, 115-199
	B10		W1171	0523	22		34-22-16	003-099

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 108

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00081A		E002-01/ /		PLUG- (continued)				001-099
D00081A		E2-1/ /		PLUG- (continued)				115-199
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						001, 003-099, 115-199
	C02		W1171	5236R	22		34-25-12	002
	C03	UNUSED						ALL
	C04		W1171	5008R	24		34-22-19	ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09		W1171	0006	24		34-22-14	ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14		W1171	0494	22		34-22-16	ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						001, 003-099, 115-199
	D02		W1171	5236B	22		34-25-12	002
	D03	UNUSED						ALL
	D04		W1171	5008B	24		34-22-19	ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01		W1171	5026W	24		34-43-11	001, 003-099, 115-199
	E01		W1171	5026W	24		34-43-15	002

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 109

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00081A		E002-01/ /		PLUG- (continued)				001-099
D00081A		E2-1/ /		PLUG- (continued)				115-199
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05		W1171	5002R	24		34-22-14	ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11		W1171	0014	24		34-22-17	ALL
	E12		W1171	0091	22		34-31-11	ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01		W1171	5026B	24		34-43-11	001, 003-099, 115-199
	F01		W1171	5026B	24		34-43-15	002
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05		W1171	5002B	24		34-22-14	ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09		W1171	0025	24		34-22-15	ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12		W1171	0021	24		34-22-17	001-008, 010-099
	F12		W1171	0351	24		34-22-17	009, 115-199
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02		W1171	5005R	24		34-22-19	ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						001-099
	G06		W1171	5181R	24		34-22-18	115-199
	G07	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 110

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00081A		E002-01/ /		PLUG- (continued)				001-099
D00081A		E2-1/ /		PLUG- (continued)				115-199
	G08	UNUSED						ALL
	G09		W1171	0026	24		34-22-15	ALL
	G10	UNUSED						ALL
	G11		W1171	0016	24		34-22-17	ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						001-099
	G15		W1171	0830	24		34-22-17	115-199
	H01	UNUSED						ALL
	H02		W1171	5005B	24		34-22-19	ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						001-099
	H06		W1171	5181B	24		34-22-18	115-199
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09		W1171	0027	24		34-22-15	ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						001, 003-099, 115-199
	H14		W1171	0810	22		34-22-16	002
	H15	UNUSED						ALL
	J01		W1171	5007R	24		34-22-19	ALL
	J02	UNUSED						ALL
	J03		W1171	5003R	24		34-22-19	ALL
	J04	UNUSED						ALL
	J05		W1171	5010R	24		34-22-19	ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09		W1171	5193R	24		34-45-01	001-099
	J09	UNUSED						115-199
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12		W1171	0018	24		34-22-17	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 111

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00081A		E002-01/ /		PLUG- (continued)				001-099
D00081A		E2-1/ /		PLUG- (continued)				115-199
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01		W1171	5007B	24		34-22-19	ALL
	K02	UNUSED						ALL
	K03		W1171	5003B	24		34-22-19	ALL
	K04	UNUSED						ALL
	K05		W1171	5010B	24		34-22-19	ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09		W1171	5193B	24		34-45-01	001-099
	K09	UNUSED						115-199
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12		W1171	0020	24		34-22-17	ALL
	K13		W1171	0496	22		34-22-16	ALL
	K14	UNUSED						001, 003-099, 115-199
	K14		W1171	0811	22		34-22-16	002
	K15	UNUSED						ALL
	DED		W1171	5026Z			34-43-11	001, 003-099, 115-199
	DED		W1171	5002Z			34-22-14	ALL
	DED		W1171	5003Z			34-22-19	ALL
	DED		W1171	5005Z			34-22-19	ALL
	DED		W1171	5007Z			34-22-19	ALL
	DED		W1171	5008Z			34-22-19	ALL
	DED		W1171	5010Z			34-22-19	ALL
	DED		W1171	5014Z			34-22-18	ALL
	DED		W1171	5019Z			34-22-18	ALL
	DED		W1171	5105Z			22-12-11	ALL
	DED		W1171	5177Z			34-22-19	ALL
	DED		W1171	5193Z			34-45-01	ALL
	DED		W1171	5026Z			34-43-15	002
	DED		W1171	5236Z			34-25-12	002
	DED		W1171	5181Z			34-22-18	115-199
	REF	VP	W1171	0460	24		34-45-01	115-199
	REF	VP	W1171	5193B	24		34-45-01	115-199
	REF	VP	W1171	5193R	24		34-45-01	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 112

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00081B D00081B		E002-01/ / E2-1/ /		PLUG- PLUG-				001-099 115-199
	A01		W1171	5108R	24		22-12-31	ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05		W1171	5018R	24		34-22-18	ALL
	A06	UNUSED						ALL
	A07		W1171	2519T	24		34-22-35	ALL
	A08		W1171	2520T	24		34-22-35	ALL
	A09		W1171	2521T	24		34-22-35	ALL
	A10		W1171	2522T	24		34-22-35	ALL
	A11		W1171	2523T	24		34-22-35	ALL
	A12		W1171	2524T	24		34-22-35	ALL
	A13		W1171	2525T	24		34-22-35	ALL
	A14		W1171	2526T	24		34-22-35	ALL
	A15		W1171	2527T	24		34-22-35	ALL
	B01		W1171	5108B	24		22-12-31	ALL
	B02	UNUSED						001-008, 115-199
	B02		W1171	0557	22		34-22-16	009-099
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05		W1171	5018B	24		34-22-18	ALL
	B06	UNUSED						ALL
	B07		W1171	2519W	24		34-22-35	ALL
	B08		W1171	2520W	24		34-22-35	ALL
	B09		W1171	2521W	24		34-22-35	ALL
	B10		W1171	2522W	24		34-22-35	ALL
	B11		W1171	2523W	24		34-22-35	ALL
	B12		W1171	2524W	24		34-22-35	ALL
	B13		W1171	2525W	24		34-22-35	ALL
	B14		W1171	2526W	24		34-22-35	ALL
	B15		W1171	2527W	24		34-22-35	ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 113

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00081B		E002-01/ /		PLUG- (continued)				001-099
D00081B		E2-1/ /		PLUG- (continued)				115-199
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						001, 003-099, 115-199
	D02		W1171	8007	22		34-22-16	002
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05		W1171	0575	22		34-22-16	001-099
	D05	UNUSED						115-199
	D06	UNUSED						001-099
	D06		W1171	0596	22		34-22-16	115-199
	D07		W1171	0327	22		34-22-16	ALL
	D08		W1171	0372	22		34-22-16	ALL
	D09		W1171	0373	22		34-22-16	ALL
	D10		W1171	0245	22		34-22-16	ALL
	D11		W1171	0116	22		34-22-16	ALL
	D12		W1171	0582	22		34-22-16	ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						001, 003-099
	E06		W1171	8026	22		34-22-16	002
	E06		W1171	0592	22		34-22-16	115-199
	E07	UNUSED						ALL
	E08		W1171	0115	22		34-22-16	ALL
	E09		W1171	0122	22		34-22-16	ALL
	E10		W1171	0049	22		34-22-16	ALL
	E11		W1171	0374	22		34-22-16	ALL
	E12	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 114

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00081B		E002-01/ /		PLUG- (continued)				001-099
D00081B		E2-1/ /		PLUG- (continued)				115-199
	E12		W1171	0583	22		34-22-16	115-199
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06		W1171	0576	22		34-22-16	001-099
	F06	UNUSED						115-199
	F07	UNUSED						ALL
	F08		W1171	0009	22		34-22-16	ALL
	F09		W1171	0050	22		34-22-16	ALL
	F10	UNUSED						ALL
	F11		W1171	0375	22		34-22-16	ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						001-002, 115-199
	G03		W1171	0524	22		34-22-16	003-099
	G04		W1171	5011R	24		34-22-19	ALL
	G05	UNUSED						ALL
	G06	UNUSED						001, 003-009, 115-199
	G06		W1171	8022	22		34-22-16	002
	G06		W1171	0596	22		34-22-16	010-099
	G07	UNUSED						ALL
	G08		W1171	0320	22		34-22-16	ALL
	G09		W1171	0342	22		34-22-16	ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 115

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00081B		E002-01/ /		PLUG- (continued)				001-099
D00081B		E2-1/ /		PLUG- (continued)				115-199
	H02	UNUSED						ALL
	H03	UNUSED						001-002, 115-199
	H03		W1171	0525	22		34-22-16	003-099
	H04		W1171	5011B	24		34-22-19	ALL
	H05	UNUSED						ALL
	H06	UNUSED						001-009, 115-199
	H06		W1171	0569	22		34-22-16	010-099
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						001, 003-099
	J02		W1171	8046	22		34-22-16	002, 115-199
	J03	UNUSED						ALL
	J04	UNUSED						001-002, 115-199
	J04		W1171	0526	22		34-22-16	003-099
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07		W1171	2528T	24		34-22-35	ALL
	J08		W1171	2529T	24		34-22-35	ALL
	J09		W1171	2530T	24		34-22-35	ALL
	J10		W1171	2531T	24		34-22-35	ALL
	J11		W1171	2532T	24		34-22-35	ALL
	J12		W1171	2533T	24		34-22-35	ALL
	J13		W1171	2534T	24		34-22-35	ALL
	J14		W1171	2535T	24		34-22-35	ALL
	J15		W1171	2536T	24		34-22-35	ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04		W1171	0577	22		34-22-16	001-099
	K04	UNUSED						115-199
	K05	UNUSED						001, 003-099, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 116

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00081B		E002-01/ /		PLUG- (continued)				001-099
D00081B		E2-1/ /		PLUG- (continued)				115-199
	K05	UNUSED	W1171	8027	22		34-22-16	002
	K06							ALL
	K07		W1171	2528W	24		34-22-35	ALL
	K08		W1171	2529W	24		34-22-35	ALL
	K09		W1171	2530W	24		34-22-35	ALL
	K10		W1171	2531W	24		34-22-35	ALL
	K11		W1171	2532W	24		34-22-35	ALL
	K12		W1171	2533W	24		34-22-35	ALL
	K13		W1171	2534W	24		34-22-35	ALL
	K14		W1171	2535W	24		34-22-35	ALL
	K15		W1171	2536W	24		34-22-35	ALL
	DED		W1171	5011Z			34-22-19	ALL
	DED		W1171	5018Z			34-22-18	ALL
	DED		W1171	5108Z			22-12-31	ALL
D00081C		E002-01/ /		PLUG-				001-099
D00081C		E2-1/ /		PLUG-				115-199
	1	UNUSED	W1171	0008	22		34-22-16	ALL
	2							ALL
	3							ALL
	4		W1171	0011	20		34-22-16	ALL
	5							ALL
	6		W1171	0012	20		34-22-16	ALL
	7							ALL
	8							ALL
	9							ALL
	10							ALL
	11							ALL
	12							ALL
	13							ALL
	=C12	UNUSED						ALL
	=C13	UNUSED						ALL
D00081D		E002-01/ /		PLUG-				001-099
D00081D		E2-1/ /		PLUG-				115-199
	A01	UNUSED	W1171	5106R	24		22-12-21	ALL
	A02							ALL
	A03		W1171	5017R	24		34-22-18	001-099
	A03		W1171	5020R	24		34-22-18	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 117

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00081D		E002-01/ /		PLUG- (continued)				001-099
D00081D		E2-1/ /		PLUG- (continued)				115-199
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09		W1171	0033	24		34-22-14	ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01		W1171	5106B	24		22-12-21	ALL
	B02	UNUSED						ALL
	B03		W1171	5017B	24		34-22-18	001-099
	B03		W1171	5020B	24		34-22-18	115-199
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09		W1171	0032	24		34-22-14	ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12		W1171	0321	24		34-22-16	ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						001, 003-099, 115-199
	C02		W1171	5235R	22		34-25-12	002
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						001, 003-099, 115-199
	C08		W1171	5281R	22		34-46-12	002
	C09		W1171	0031	24		34-22-14	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 118

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00081D		E002-01/ /		PLUG- (continued)				001-099
D00081D		E2-1/ /		PLUG- (continued)				115-199
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						001, 003-099, 115-199
	D02		W1171	5235B	22		34-25-12	002
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						001, 003-099, 115-199
	D08		W1171	5281B	22		34-46-12	002
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12		W1171	0497	22		34-22-16	ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 119

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00081D		E002-01/ /		PLUG- (continued)				001-099
D00081D		E2-1/ /		PLUG- (continued)				115-199
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09		W1171	0028	24		34-22-15	ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						001, 003-099, 115-199
	F13		W1171	0554	22		34-25-12	002
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						001-099
	G06		W1171	5183R	24		34-22-18	115-199
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09		W1171	0029	24		34-22-15	ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12		W1171	0733	24		34-22-19	001-099
	G12	UNUSED						115-199
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						001-099
	H06		W1171	5183B	24		34-22-18	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 120

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00081D		E002-01/ /		PLUG- (continued)				001-099
D00081D		E2-1/ /		PLUG- (continued)				115-199
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09		W1171	0030	24		34-22-15	ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01		W1171	5176R	24		34-22-19	ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01		W1171	5176B	24		34-22-19	ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 121

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00081D		E002-01/ /		PLUG- (continued)				001-099
D00081D		E2-1/ /		PLUG- (continued)				115-199
	DED		W1171	5017Z			34-22-18	001-099
	DED		W1171	5106Z			22-12-21	ALL
	DED		W1171	5176Z			34-22-19	ALL
	DED		W1171	5235Z			34-25-12	002
	DED		W1171	5281Z			34-46-12	002
	DED		W1171	5020Z			34-22-18	115-199
	DED		W1171	5183Z			34-22-18	115-199
D00081E		E002-01/ /		PLUG-				001-099
D00081E		E002-01/ /		PLUG				002
D00081E		E2-1/ /		PLUG-				115-199
	A01		W1171	2501T	24		34-22-14	ALL
	A02		W1171	2502T	24		34-22-14	ALL
	A03		W1171	2503T	24		34-22-14	ALL
	A04		W1171	2504T	24		34-22-14	ALL
	A05		W1171	2505T	24		34-22-14	ALL
	A06		W1171	2506T	24		34-22-14	ALL
	A07		W1171	2507T	24		34-22-14	ALL
	A08		W1171	2508T	24		34-22-14	ALL
	A09		W1171	2509T	24		34-22-14	ALL
	A10	UNUSED						ALL
	A11		W1171	0118	24		34-46-12	001, 003-099, 115-199
	A11	UNUSED						002
	A12	UNUSED						ALL
	A13		W1171	5138R	24		34-22-19	001, 003-099, 115-199
	A13		W1171	5138R	22		34-25-12	002
	A14	UNUSED						001, 003-099, 115-199
	A14		W1171	5280R	22		34-22-18	002
	A15	UNUSED						ALL
	B01		W1171	2501W	24		34-22-14	ALL
	B02		W1171	2502W	24		34-22-14	ALL
	B03		W1171	2503W	24		34-22-14	ALL
	B04		W1171	2504W	24		34-22-14	ALL
	B05		W1171	2505W	24		34-22-14	ALL
	B06		W1171	2506W	24		34-22-14	ALL
	B07		W1171	2507W	24		34-22-14	ALL
	B08		W1171	2508W	24		34-22-14	ALL
	B09		W1171	2509W	24		34-22-14	ALL
	B10	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 122

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00081E		E002-01/ /		PLUG- (continued)				001-099
D00081E		E002-01/ /		PLUG (continued)				002
D00081E		E2-1/ /		PLUG- (continued)				115-199
	B11	UNUSED						001-008, 010-099
	B11		W1171	0114	24		31-51-34	009, 115-199
	B12	UNUSED						ALL
	B13		W1171	5138B	24		34-22-19	001, 003-099, 115-199
	B13		W1171	5138B	22		34-25-12	002
	B14	UNUSED						001, 003-099, 115-199
	B14		W1171	5280B	22		34-22-18	002
	B15	UNUSED						ALL
	C01		W1171	2510T	24		34-22-15	ALL
	C02		W1171	2511T	24		34-22-15	ALL
	C03		W1171	2512T	24		34-22-15	ALL
	C04		W1171	2513T	24		34-22-15	ALL
	C05		W1171	2514T	24		34-22-15	ALL
	C06		W1171	2515T	24		34-22-15	ALL
	C07		W1171	2516T	24		34-22-15	ALL
	C08		W1171	2517T	24		34-22-15	ALL
	C09		W1171	2518T	24		34-22-15	ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01		W1171	2510W	24		34-22-15	ALL
	D02		W1171	2511W	24		34-22-15	ALL
	D03		W1171	2512W	24		34-22-15	ALL
	D04		W1171	2513W	24		34-22-15	ALL
	D05		W1171	2514W	24		34-22-15	ALL
	D06		W1171	2515W	24		34-22-15	ALL
	D07		W1171	2516W	24		34-22-15	ALL
	D08		W1171	2517W	24		34-22-15	ALL
	D09		W1171	2518W	24		34-22-15	ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 123

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00081E		E002-01/ /		PLUG- (continued)				001-099
D00081E		E002-01/ /		PLUG (continued)				002
D00081E		E2-1/ /		PLUG- (continued)				115-199
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11		W1171	0460	24		34-45-01	001-099
	E11	UNUSED						115-199
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 124

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00081E		E002-01/ /		PLUG- (continued)				001-099
D00081E		E002-01/ /		PLUG (continued)				002
D00081E		E2-1/ /		PLUG- (continued)				115-199
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H11	UNUSED	W1171	0817	22		34-22-18	001, 003-099, 115-199
	H12	UNUSED						002
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 125

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00081E		E002-01/ /		PLUG- (continued)				001-099
D00081E		E002-01/ /		PLUG (continued)				002
D00081E		E2-1/ /		PLUG- (continued)				115-199
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
	DED		W1171	5138Z			34-22-19	001, 003-099, 115-199
	DED		W1171	5138Z			34-25-12	002
	DED		W1171	5280Z			34-22-18	002
D00081F		E002-01/ /		PLUG-				001-099
D00081F		E2-1/ /		PLUG-				115-199
	1		W1171	0007	24		34-22-16	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1171	0010	22		34-22-16	001-099
	4		W1171	0010	24		34-22-16	115-199
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 126

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00083A D00083A		E002-02/ / E2-2/ /		PLUG- PLUG-				001-099 115-199
	A01		W1173	5085R	24		22-12-11	ALL
	A02	UNUSED						ALL
	A03		W1173	5011R	24		34-22-28	ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09		W1173	0016	24		34-22-24	ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						001, 003-099, 115-199
	A14		W1173	8041	22		34-22-26	002
	A15	UNUSED						ALL
	B01		W1173	5085B	24		22-12-11	ALL
	B02	UNUSED						ALL
	B03		W1173	5011B	24		34-22-28	ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09		W1173	0233	24		34-22-24	ALL
	B10	UNUSED						001-002, 115-199
	B10		W1173	0523	22		34-22-26	003-099
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						001, 003-099, 115-199
	C02		W1173	5173R	22		34-25-12	002
	C03	UNUSED						ALL
	C04		W1173	5013R	24		34-22-29	ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 127

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00083A		E002-02/ /		PLUG- (continued)				001-099
D00083A		E2-2/ /		PLUG- (continued)				115-199
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09		W1173	0018	24		34-22-24	ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14		W1173	0494	22		34-22-26	ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						001, 003-099, 115-199
	D02		W1173	5173B	22		34-25-12	002
	D03	UNUSED						ALL
	D04		W1173	5013B	24		34-22-29	ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03		W1173	5082W	24		34-43-11	001, 003-099, 115-199
	E03		W1173	5310W	24		34-43-15	002
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12		W1173	0166	24		34-31-21	ALL
	E13	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 128

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00083A		E002-02/ /		PLUG- (continued)				001-099
D00083A		E2-2/ /		PLUG- (continued)				115-199
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03		W1173	5082B	24		34-43-11	001, 003-099, 115-199
	F03		W1173	5310B	24		34-43-15	002
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09		W1173	0025	24		34-22-25	ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12		W1173	0007	24		34-22-27	ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						001-099
	G06		W1173	5181R	24		34-22-28	115-199
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09		W1173	0026	24		34-22-25	ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12		W1173	0012	22		34-22-27	ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 129

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00083A		E002-02/ /		PLUG- (continued)				001-099
D00083A		E2-2/ /		PLUG- (continued)				115-199
	H06	UNUSED						001-099
	H06		W1173	5181B	24		34-22-28	115-199
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09		W1173	0027	24		34-22-25	ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						001, 003-099, 115-199
	H14		W1173	0562	22		34-22-26	002
	H15	UNUSED						ALL
	J01		W1173	5153R	24		34-22-29	ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05		W1173	5045R	24		34-22-29	ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01		W1173	5153B	24		34-22-29	ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05		W1173	5045B	24		34-22-29	ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 130

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00083A		E002-02/ /		PLUG- (continued)				001-099
D00083A		E2-2/ /		PLUG- (continued)				115-199
	K13		W1173	0496	22		34-22-26	ALL
	K14	UNUSED						001, 003-099, 115-199
	K14		W1173	0564	22		34-22-26	002
	K15	UNUSED						ALL
	DED		W1173	5082Z			34-43-11	001, 003-099, 115-199
	DED		W1173	5011Z			34-22-28	ALL
	DED		W1173	5013Z			34-22-29	ALL
	DED		W1173	5045Z			34-22-29	ALL
	DED		W1173	5085Z			22-12-11	ALL
	DED		W1173	5153Z			34-22-29	ALL
	DED		W1173	5173Z			34-25-12	002
	DED		W1173	5310Z			34-43-15	002
	DED		W1173	5162Z			34-45-01	115-199
	DED		W1173	5181Z			34-22-28	115-199
	REF	VM	W1173	0401	24		34-45-01	115-199
	REF	VM	W1173	5162B	24		34-45-01	115-199
	REF	VM	W1173	5162R	24		34-45-01	115-199
D00083B		E002-02/ /		PLUG-				001-099
D00083B		E2-2/ /		PLUG-				115-199
	A01		W1173	5075R	24		22-12-31	ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05		W1173	5030R	24		34-22-28	ALL
	A06	UNUSED						ALL
	A07		W1173	2519T	24		34-22-34	ALL
	A08		W1173	2520T	24		34-22-34	ALL
	A09		W1173	2521T	24		34-22-34	ALL
	A10		W1173	2522T	24		34-22-34	ALL
	A11		W1173	2523T	24		34-22-34	ALL
	A12		W1173	2524T	24		34-22-34	ALL
	A13		W1173	2525T	24		34-22-34	ALL
	A14		W1173	2526T	24		34-22-34	ALL
	A15		W1173	2527T	24		34-22-34	ALL
	B01		W1173	5075B	24		22-12-31	ALL
	B02	UNUSED						001-008, 115-199
	B02		W1173	0557	22		34-22-26	009-099
	B03	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 131

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00083B		E002-02/ /		PLUG- (continued)				001-099
D00083B		E2-2/ /		PLUG- (continued)				115-199
	B04	UNUSED						ALL
	B05		W1173	5030B	24		34-22-28	ALL
	B06	UNUSED						ALL
	B07		W1173	2519W	24		34-22-34	ALL
	B08		W1173	2520W	24		34-22-34	ALL
	B09		W1173	2521W	24		34-22-34	ALL
	B10		W1173	2522W	24		34-22-34	ALL
	B11		W1173	2523W	24		34-22-34	ALL
	B12		W1173	2524W	24		34-22-34	ALL
	B13		W1173	2525W	24		34-22-34	ALL
	B14		W1173	2526W	24		34-22-34	ALL
	B15		W1173	2527W	24		34-22-34	ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						001, 003-099, 115-199
	D02		W1173	8014	22		34-22-26	002
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05		W1173	0575	22		34-22-26	001-099
	D05	UNUSED						115-199
	D06	UNUSED						ALL
	D07		W1173	0333	22		34-22-26	ALL
	D08		W1173	0335	22		34-22-26	ALL
	D09		W1173	0338	22		34-22-26	ALL
	D10		W1173	0305	22		34-22-26	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 132

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00083B		E002-02/ /		PLUG- (continued)				001-099
D00083B		E2-2/ /		PLUG- (continued)				115-199
	D11		W1173	0319	22		34-22-26	ALL
	D12		W1173	0582	22		34-22-26	ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						001, 003-099
	E06		W1173	8026	22		34-22-26	002, 115-199
	E07	UNUSED						ALL
	E08		W1173	0318	22		34-22-26	ALL
	E09		W1173	0327	22		34-22-26	ALL
	E10		W1173	0316	22		34-22-26	ALL
	E11		W1173	0336	22		34-22-26	ALL
	E12	UNUSED						001-099
	E12		W1173	0583	22		34-22-26	115-199
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06		W1173	0576	22		34-22-26	001-099
	F06	UNUSED						115-199
	F07	UNUSED						ALL
	F08		W1173	0004	22		34-22-26	ALL
	F09		W1173	0317	22		34-22-26	ALL
	F10	UNUSED						ALL
	F11		W1173	0337	22		34-22-26	ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 133

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00083B		E002-02/ /		PLUG- (continued)				001-099
D00083B		E2-2/ /		PLUG- (continued)				115-199
	G02	UNUSED						ALL
	G03	UNUSED						001-002, 115-199
	G03		W1173	0524	22		34-22-26	003-099
	G04		W1173	5012R	24		34-22-29	ALL
	G05	UNUSED						ALL
	G06	UNUSED						001, 003-009
	G06		W1173	8022	22		34-22-26	002, 115-199
	G06		W1173	0596	22		34-22-26	010-099
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09		W1173	0334	22		34-22-26	ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						001-002, 115-199
	H03		W1173	0525	22		34-22-26	003-099
	H04		W1173	5012B	24		34-22-29	ALL
	H05	UNUSED						ALL
	H06	UNUSED						001-009, 115-199
	H06		W1173	0569	22		34-22-26	010-099
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						001, 003-099, 115-199
	J02		W1173	8046	22		34-22-26	002
	J03	UNUSED						ALL
	J04	UNUSED						001-002, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 134

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00083B		E002-02/ /		PLUG- (continued)				001-099
D00083B		E2-2/ /		PLUG- (continued)				115-199
	J04		W1173	0526	22		34-22-26	003-099
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07		W1173	2528T	24		34-22-34	ALL
	J08		W1173	2529T	24		34-22-34	ALL
	J09		W1173	2530T	24		34-22-34	ALL
	J10		W1173	2531T	24		34-22-34	ALL
	J11		W1173	2532T	24		34-22-34	ALL
	J12		W1173	2533T	24		34-22-34	ALL
	J13		W1173	2534T	24		34-22-34	ALL
	J14		W1173	2535T	24		34-22-34	ALL
	J15		W1173	2536T	24		34-22-34	ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04		W1173	0577	22		34-22-26	001-099
	K04	UNUSED						115-199
	K05	UNUSED						001, 003-099, 115-199
	K05		W1173	8027	22		34-22-26	002
	K06	UNUSED						ALL
	K07		W1173	2528W	24		34-22-34	ALL
	K08		W1173	2529W	24		34-22-34	ALL
	K09		W1173	2530W	24		34-22-34	ALL
	K10		W1173	2531W	24		34-22-34	ALL
	K11		W1173	2532W	24		34-22-34	ALL
	K12		W1173	2533W	24		34-22-34	ALL
	K13		W1173	2534W	24		34-22-34	ALL
	K14		W1173	2535W	24		34-22-34	ALL
	K15		W1173	2536W	24		34-22-34	ALL
	DED		W1173	5012Z			34-22-29	ALL
	DED		W1173	5030Z			34-22-28	ALL
	DED		W1173	5075Z			22-12-31	ALL
D00083C		E002-02/ /		PLUG-				001-099
D00083C		E2-2/ /		PLUG-				115-199
	1		W1173	0001	24		34-22-26	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1173	0005	20		34-22-26	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 135

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00083C		E002-02/ /		PLUG- (continued)				001-099
D00083C		E2-2/ /		PLUG- (continued)				115-199
	5	UNUSED						ALL
	6		W1173	0006	20		34-22-26	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	=C12	UNUSED						ALL
	=C13	UNUSED						ALL
D00083D		E002-02/ /		PLUG-				001-099
D00083D		E2-2/ /		PLUG-				115-199
	A01		W1173	5089R	24		22-12-21	ALL
	A02	UNUSED						ALL
	A03		W1173	5002R	24		34-22-28	ALL
	A04	UNUSED						ALL
	A05		W1173	5119R	24		34-22-28	ALL
	A06	UNUSED						ALL
	A07		W1173	5154R	24		34-22-29	ALL
	A08	UNUSED						ALL
	A09		W1173	0232	24		34-22-24	ALL
	A10	UNUSED						ALL
	A11		W1173	0009	22		34-22-27	ALL
	A12		W1173	0008	22		34-22-27	ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01		W1173	5089B	24		22-12-21	ALL
	B02	UNUSED						ALL
	B03		W1173	5002B	24		34-22-28	ALL
	B04	UNUSED						ALL
	B05		W1173	5119B	24		34-22-28	ALL
	B06	UNUSED						ALL
	B07		W1173	5154B	24		34-22-29	ALL
	B08	UNUSED						ALL
	B09		W1173	0017	24		34-22-24	ALL
	B10	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 136

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00083D		E002-02/ /		PLUG- (continued)				001-099
D00083D		E2-2/ /		PLUG- (continued)				115-199
	B11	UNUSED						ALL
	B12		W1173	0141	24		34-22-16	ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						001, 003-099, 115-199
	C02		W1173	5174R	22		34-25-12	002
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						001, 003-099, 115-199
	C08		W1173	5241R	22		34-46-12	002
	C09		W1173	0234	24		34-22-24	ALL
	C10	UNUSED						ALL
	C11		W1173	0010	22		34-22-27	ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						001, 003-099, 115-199
	D02		W1173	5174B	22		34-25-12	002
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						001, 003-099, 115-199
	D08		W1173	5241B	22		34-46-12	002
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12		W1173	0497	22		34-22-26	ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 137

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00083D		E002-02/ /		PLUG- (continued)				001-099
D00083D		E2-2/ /		PLUG- (continued)				115-199
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05		W1173	5006R	24		34-22-24	ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11		W1173	0040	24		34-22-27	ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05		W1173	5006B	24		34-22-24	ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09		W1173	0235	24		34-22-25	ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						001, 003-099, 115-199
	F13		W1173	0411	22		34-25-12	002
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02		W1173	5028R	24		34-22-29	ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						001-099
	G06		W1173	5183R	24		34-22-28	115-199
	G07	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 138

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00083D		E002-02/ /		PLUG- (continued)				001-099
D00083D		E2-2/ /		PLUG- (continued)				115-199
	G08	UNUSED						ALL
	G09		W1173	0236	24		34-22-25	ALL
	G10	UNUSED						ALL
	G11		W1173	0039	24		34-22-27	ALL
	G12		W1173	0755	24		34-22-29	001-099
	G12	UNUSED						115-199
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02		W1173	5028B	24		34-22-29	ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						001-099
	H06		W1173	5183B	24		34-22-28	115-199
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09		W1173	0237	24		34-22-25	ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01		W1173	5152R	24		34-22-29	ALL
	J02	UNUSED						ALL
	J03		W1173	5025R	24		34-22-29	ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09		W1173	5162R	24		34-45-01	001-099
	J09	UNUSED						115-199
	J10	UNUSED						ALL
	J11		W1173	0011	22		34-22-27	ALL
	J12		W1173	0033	24		34-22-27	ALL
	J13		W1173	0498	22		34-22-27	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 139

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00083D		E002-02/ /		PLUG- (continued)				001-099
D00083D		E2-2/ /		PLUG- (continued)				115-199
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01		W1173	5152B	24		34-22-29	ALL
	K02	UNUSED						ALL
	K03		W1173	5025B	24		34-22-29	ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09		W1173	5162B	24		34-45-01	001-099
	K09	UNUSED						115-199
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12		W1173	0034	24		34-22-27	ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
	DED		W1173	5162Z			34-45-01	001-099
	DED		W1173	5002Z			34-22-28	ALL
	DED		W1173	5006Z			34-22-24	ALL
	DED		W1173	5025Z			34-22-29	ALL
	DED		W1173	5028Z			34-22-29	ALL
	DED		W1173	5089Z			22-12-21	ALL
	DED		W1173	5119Z			34-22-28	ALL
	DED		W1173	5152Z			34-22-29	ALL
	DED		W1173	5154Z			34-22-29	ALL
	DED		W1173	5174Z			34-25-12	002
	DED		W1173	5241Z			34-46-12	002
	DED		W1173	5183Z			34-22-28	115-199
D00083E		E002-02/ /		PLUG-				001-099
D00083E		E2-2/ /		PLUG-				115-199
	A01		W1173	2501T	24		34-22-24	ALL
	A02		W1173	2502T	24		34-22-24	ALL
	A03		W1173	2503T	24		34-22-24	ALL
	A04		W1173	2504T	24		34-22-24	ALL
	A05		W1173	2505T	24		34-22-24	ALL
	A06		W1173	2506T	24		34-22-24	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 140

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00083E		E002-02/ /		PLUG- (continued)				001-099
D00083E		E2-2/ /		PLUG- (continued)				115-199
	A07		W1173	2507T	24		34-22-24	ALL
	A08		W1173	2508T	24		34-22-24	ALL
	A09		W1173	2509T	24		34-22-24	ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13		W1173	5124R	24		34-25-11	001, 003-099, 115-199
	A13		W1173	5316R	22		34-25-12	002
	A14	UNUSED						001, 003-099, 115-199
	A14		W1173	5239R	22		34-22-28	002
	A15	UNUSED						ALL
	B01		W1173	2501W	24		34-22-24	ALL
	B02		W1173	2502W	24		34-22-24	ALL
	B03		W1173	2503W	24		34-22-24	ALL
	B04		W1173	2504W	24		34-22-24	ALL
	B05		W1173	2505W	24		34-22-24	ALL
	B06		W1173	2506W	24		34-22-24	ALL
	B07		W1173	2507W	24		34-22-24	ALL
	B08		W1173	2508W	24		34-22-24	ALL
	B09		W1173	2509W	24		34-22-24	ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13		W1173	5124B	24		34-25-11	001, 003-099, 115-199
	B13		W1173	5316B	22		34-25-12	002
	B14	UNUSED						001, 003-099, 115-199
	B14		W1173	5239B	22		34-22-28	002
	B15	UNUSED						ALL
	C01		W1173	2510T	24		34-22-25	ALL
	C02		W1173	2511T	24		34-22-25	ALL
	C03		W1173	2512T	24		34-22-25	ALL
	C04		W1173	2513T	24		34-22-25	ALL
	C05		W1173	2514T	24		34-22-25	ALL
	C06		W1173	2515T	24		34-22-25	ALL
	C07		W1173	2516T	24		34-22-25	ALL
	C08		W1173	2517T	24		34-22-25	ALL
	C09		W1173	2518T	24		34-22-25	ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 141

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00083E		E002-02/ /		PLUG- (continued)				001-099
D00083E		E2-2/ /		PLUG- (continued)				115-199
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01		W1173	2510W	24		34-22-25	ALL
	D02		W1173	2511W	24		34-22-25	ALL
	D03		W1173	2512W	24		34-22-25	ALL
	D04		W1173	2513W	24		34-22-25	ALL
	D05		W1173	2514W	24		34-22-25	ALL
	D06		W1173	2515W	24		34-22-25	ALL
	D07		W1173	2516W	24		34-22-25	ALL
	D08		W1173	2517W	24		34-22-25	ALL
	D09		W1173	2518W	24		34-22-25	ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 142

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00083E		E002-02/ /		PLUG- (continued)				001-099
D00083E		E2-2/ /		PLUG- (continued)				115-199
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED	W1173	0401	24		34-45-01	001-099 115-199
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED	W1173	0571	22		34-22-28	001, 003-099, 115-199 002
	H12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 143

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00083E		E002-02/ /		PLUG- (continued)				001-099
D00083E		E2-2/ /		PLUG- (continued)				115-199
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
	DED		W1173	5124Z			34-25-11	001, 003-099, 115-199
	DED		W1173	5239Z			34-22-28	002
	DED		W1173	5316Z			34-25-12	002

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 144

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00083F D00083F		E002-02/ / E2-2/ /		PLUG- PLUG-				001-099 115-199
	1		W1173	0002	24		34-22-26	001, 003-099, 115-199
	1		W1173	0002	22		34-22-26	002
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1173	0003	22		34-22-26	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	=C12	UNUSED						ALL
	=C13	UNUSED						ALL
D00085A D00085A		E002-03/ / E2-3/ /		PLUG- PLUG-				001-099 115-199
	A01		W1175	5046R	24		22-12-11	ALL
	A02	UNUSED						ALL
	A03		W1175	5008R	24		34-22-38	001-099
	A03		W1175	5077R	24		34-22-38	115-199
	A04	UNUSED						ALL
	A05		W1175	5005R	24		34-22-38	ALL
	A06	UNUSED						ALL
	A07		W1175	5108R	24		34-22-39	ALL
	A08	UNUSED						ALL
	A09		W1175	0007	24		34-22-35	ALL
	A10	UNUSED						ALL
	A11		W1175	0619	24		34-22-37	ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						001, 003-099, 115-199
	A14		W1175	0516	22		34-22-36	002
	A15	UNUSED						ALL
	B01		W1175	5046B	24		22-12-11	ALL
	B02	UNUSED						ALL
	B03		W1175	5008B	24		34-22-38	001-099

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 145

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00085A		E002-03/ /		PLUG- (continued)				001-099
D00085A		E2-3/ /		PLUG- (continued)				115-199
	B03		W1175	5077B	24		34-22-38	115-199
	B04	UNUSED						ALL
	B05		W1175	5005B	24		34-22-38	ALL
	B06	UNUSED						ALL
	B07		W1175	5108B	24		34-22-39	ALL
	B08	UNUSED						ALL
	B09		W1175	0008	24		SPARE	001-099
	B09		W1175	0008	24		34-22-35	115-199
	B10	UNUSED						001-002, 115-199
	B10		W1175	0523	22		34-22-36	003-099
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						001, 003-099, 115-199
	C02		W1175	5124R	22		34-25-12	002
	C03	UNUSED						ALL
	C04		W1175	5013R	24		34-22-39	ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09		W1175	0009	24		34-22-35	ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14		W1175	0611	22		34-22-36	ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						001, 003-099, 115-199
	D02		W1175	5124B	22		34-25-12	002
	D03	UNUSED						ALL
	D04		W1175	5013B	24		34-22-39	ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 146

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00085A		E002-03/ /		PLUG- (continued)				001-099
D00085A		E2-3/ /		PLUG- (continued)				115-199
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01		W1175	5019W	24		34-43-11	001, 003-099, 115-199
	E01		W1175	5019W	24		34-43-15	002
	E02	UNUSED						ALL
	E03		W1175	5020W	24		34-43-11	001, 003-099, 115-199
	E03		W1175	5020W	24		34-43-15	002
	E04	UNUSED						ALL
	E05		W1175	5003R	24		34-22-35	ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11		W1175	0028	24		34-22-37	ALL
	E12		W1175	0046	22		34-31-31	ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01		W1175	5019B	24		34-43-11	001, 003-099, 115-199
	F01		W1175	5019B	24		34-43-15	002
	F02	UNUSED						ALL
	F03		W1175	5020B	24		34-43-11	001, 003-099, 115-199
	F03		W1175	5020B	24		34-43-15	002
	F04	UNUSED						ALL
	F05		W1175	5003B	24		34-22-35	ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09		W1175	0010	24		34-22-35	ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12		W1175	0025	24		34-22-37	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 147

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00085A		E002-03/ /		PLUG- (continued)				001-099
D00085A		E2-3/ /		PLUG- (continued)				115-199
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02		W1175	5017R	24		34-22-39	ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						001-099
	G06		W1175	5181R	24		34-22-38	115-199
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09		W1175	0011	24		34-22-35	ALL
	G10	UNUSED						ALL
	G11		W1175	0029	24		34-22-37	ALL
	G12		W1175	0016	24		34-22-37	ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						001-099
	G15		W1175	0695	24		34-22-37	115-199
	H01	UNUSED						ALL
	H02		W1175	5017B	24		34-22-39	ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						001-099
	H06		W1175	5181B	24		34-22-38	115-199
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09		W1175	0012	24		34-22-35	ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						001, 003-099, 115-199
	H14		W1175	0587	22		34-22-36	002
	H15	UNUSED						ALL
	J01		W1175	5015R	24		34-22-39	ALL
	J02	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 148

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00085A		E002-03/ /		PLUG- (continued)				001-099
D00085A		E2-3/ /		PLUG- (continued)				115-199
	J03		W1175	5016R	24		34-22-39	ALL
	J04	UNUSED						ALL
	J05		W1175	5014R	24		34-22-39	ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09		W1175	5109R	24		34-45-01	001-099
	J09	UNUSED						115-199
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12		W1175	0026	24		34-22-37	ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01		W1175	5015B	24		34-22-39	ALL
	K02	UNUSED						ALL
	K03		W1175	5016B	24		34-22-39	ALL
	K04	UNUSED						ALL
	K05		W1175	5014B	24		34-22-39	ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09		W1175	5109B	24		34-45-01	001-099
	K09	UNUSED						115-199
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12		W1175	0027	24		34-22-37	ALL
	K13		W1175	0610	22		34-22-36	ALL
	K14	UNUSED						001, 003-099, 115-199
	K14		W1175	0588	22		34-22-36	002
	K15	UNUSED						ALL
	DED		W1175	5019Z			34-43-11	001, 003-099, 115-199
	DED		W1175	5020Z			34-43-11	001, 003-099, 115-199
	DED		W1175	5008Z			34-22-38	001-099
	DED		W1175	5003Z			34-22-35	ALL
	DED		W1175	5005Z			34-22-38	ALL
	DED		W1175	5013Z			34-22-39	ALL
	DED		W1175	5014Z			34-22-39	ALL
	DED		W1175	5015Z			34-22-39	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 149

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00085A		E002-03/ /		PLUG- (continued)				001-099
D00085A		E2-3/ /		PLUG- (continued)				115-199
	DED		W1175	5016Z			34-22-39	ALL
	DED		W1175	5017Z			34-22-39	ALL
	DED		W1175	5046Z			22-12-11	ALL
	DED		W1175	5108Z			34-22-39	ALL
	DED		W1175	5109Z			34-45-01	ALL
	DED		W1175	5019Z			34-43-15	002
	DED		W1175	5020Z			34-43-15	002
	DED		W1175	5124Z			34-25-12	002
	DED		W1175	5077Z			34-22-38	115-199
	DED		W1175	5181Z			34-22-38	115-199
	REF	VM	W1175	0369	24		34-45-01	115-199
	REF	VM	W1175	5109B	24		34-45-01	115-199
	REF	VM	W1175	5109R	24		34-45-01	115-199
D00085B		E002-03/ /		PLUG-				001-099
D00085B		E2-3/ /		PLUG-				115-199
	A01		W1175	5053R	24		22-12-31	ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05		W1175	5006R	24		34-22-38	ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01		W1175	5053B	24		22-12-31	ALL
	B02	UNUSED						001-008, 115-199
	B02		W1175	0557	22		34-22-36	009-099
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05		W1175	5006B	24		34-22-38	ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 150

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00085B		E002-03/ /		PLUG- (continued)				001-099
D00085B		E2-3/ /		PLUG- (continued)				115-199
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						001, 003-099, 115-199
	D02		W1175	8028	22		34-22-36	002
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05		W1175	0575	22		34-22-36	001-099
	D05	UNUSED						115-199
	D06	UNUSED						ALL
	D07		W1175	0352	22		34-22-36	ALL
	D08		W1175	0354	22		34-22-36	ALL
	D09		W1175	0355	22		34-22-36	ALL
	D10		W1175	0351	22		34-22-36	ALL
	D11		W1175	0340	22		34-22-36	ALL
	D12		W1175	0582	22		34-22-36	ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 151

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00085B		E002-03/ /		PLUG- (continued)				001-099
D00085B		E2-3/ /		PLUG- (continued)				115-199
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						001, 003-099
	E06		W1175	0572	22		34-22-36	002, 115-199
	E07	UNUSED						ALL
	E08		W1175	0341	22		34-22-36	ALL
	E09		W1175	0304	22		34-22-36	ALL
	E10		W1175	0058	22		34-22-36	ALL
	E11		W1175	0356	22		34-22-36	ALL
	E12	UNUSED						001-099
	E12		W1175	0584	22		34-22-36	115-199
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06		W1175	0576	22		34-22-36	001-099
	F06	UNUSED						115-199
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09		W1175	0057	22		34-22-36	ALL
	F10	UNUSED						ALL
	F11		W1175	0358	22		34-22-36	ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						001-002, 115-199
	G03		W1175	0524	22		34-22-36	003-099
	G04		W1175	5009R	24		34-22-39	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 152

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00085B		E002-03/ /		PLUG- (continued)				001-099
D00085B		E2-3/ /		PLUG- (continued)				115-199
	G05	UNUSED						ALL
	G06	UNUSED						001, 003-009
	G06		W1175	0596	22		34-22-36	002, 010-099, 115-199
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09		W1175	0353	22		34-22-36	ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						001-002, 115-199
	H03		W1175	0525	22		34-22-36	003-099
	H04		W1175	5009B	24		34-22-39	ALL
	H05	UNUSED						ALL
	H06	UNUSED						001-009, 115-199
	H06		W1175	0569	22		34-22-36	010-099
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						001, 003-099
	J02		W1175	0551	22		34-22-36	002, 115-199
	J03	UNUSED						ALL
	J04	UNUSED						001-002, 115-199
	J04		W1175	0526	22		34-22-36	003-099
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 153

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00085B		E002-03/ /		PLUG- (continued)				001-099
D00085B		E2-3/ /		PLUG- (continued)				115-199
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04		W1175	0577	22		34-22-36	001-099
	K04	UNUSED						115-199
	K05	UNUSED						001, 003-099, 115-199
	K05		W1175	0568	22		34-22-36	002
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
	DED		W1175	5006Z			34-22-38	ALL
	DED		W1175	5009Z			34-22-39	ALL
	DED		W1175	5053Z			22-12-31	ALL
D00085C		E002-03/ /		PLUG-				001-099
D00085C		E2-3/ /		PLUG-				115-199
	1		W1175	0013	24		34-22-36	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1175	0014	20		34-22-36	ALL
	5	UNUSED						ALL
	6		W1175	0015	20		34-22-36	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 154

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00085C		E002-03/ /		PLUG- (continued)				001-099
D00085C		E2-3/ /		PLUG- (continued)				115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	=C12	UNUSED						ALL
	=C13	UNUSED						ALL
D00085D		E002-03/ /		PLUG-				001-099
D00085D		E2-3/ /		PLUG-				115-199
	A01		W1175	5071R	24		22-12-21	ALL
	A02	UNUSED						ALL
	A03		W1175	5007R	24		34-22-38	ALL
	A04	UNUSED						ALL
	A05		W1175	5004R	24		34-22-38	ALL
	A06	UNUSED						ALL
	A07		W1175	5107R	24		34-22-39	ALL
	A08	UNUSED						ALL
	A09		W1175	0001	24		34-22-34	ALL
	A10	UNUSED						ALL
	A11		W1175	0023	22		34-22-37	ALL
	A12		W1175	0022	22		34-22-37	ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01		W1175	5071B	24		22-12-21	ALL
	B02	UNUSED						ALL
	B03		W1175	5007B	24		34-22-38	ALL
	B04	UNUSED						ALL
	B05		W1175	5004B	24		34-22-38	ALL
	B06	UNUSED						ALL
	B07		W1175	5107B	24		34-22-39	ALL
	B08	UNUSED						ALL
	B09		W1175	0002	24		34-22-34	ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12		W1175	0287	24		34-22-16	ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 155

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00085D		E002-03/ /		PLUG- (continued)				001-099
D00085D		E2-3/ /		PLUG- (continued)				115-199
	C01	UNUSED						ALL
	C02	UNUSED						001, 003-099, 115-199
	C02		W1175	5121R	22		34-25-12	002
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						001, 003-099, 115-199
	C08		W1175	5159R	22		34-22-38	002
	C09		W1175	0003	24		34-22-34	ALL
	C10	UNUSED						ALL
	C11		W1175	0024	22		34-22-37	ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						001, 003-099, 115-199
	D02		W1175	5121B	22		34-25-12	002
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						001, 003-099, 115-199
	D08		W1175	5159B	22		34-22-38	002
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12		W1175	0617	22		34-22-36	ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05		W1175	5002R	24		34-22-34	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 156

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00085D		E002-03/ /		PLUG- (continued)				001-099
D00085D		E2-3/ /		PLUG- (continued)				115-199
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11		W1175	0018	24		34-22-37	ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05		W1175	5002B	24		34-22-34	ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09		W1175	0004	24		34-22-34	ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						001, 003-099, 115-199
	F13		W1175	0433	22		34-25-12	002
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02		W1175	5010R	24		34-22-39	ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						001-099
	G06		W1175	5183R	24		34-22-38	115-199
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09		W1175	0005	24		34-22-34	ALL
	G10	UNUSED						ALL
	G11		W1175	0020	24		34-22-37	ALL
	G12		W1175	0743	24		34-22-39	001-099

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 157

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00085D		E002-03/ /		PLUG- (continued)				001-099
D00085D		E2-3/ /		PLUG- (continued)				115-199
	G12	UNUSED						115-199
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02		W1175	5010B	24		34-22-39	ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						001-099
	H06		W1175	5183B	24		34-22-38	115-199
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09		W1175	0006	24		34-22-34	ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01		W1175	5012R	24		34-22-39	ALL
	J02	UNUSED						ALL
	J03		W1175	5011R	24		34-22-39	ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						001-002, 115-199
	J09		W1175	5115R	24		34-45-01	003-099
	J10	UNUSED						ALL
	J11		W1175	0021	22		34-22-37	ALL
	J12		W1175	0017	24		34-22-37	ALL
	J13		W1175	0618	22		34-22-37	ALL
	J14	UNUSED						ALL
	J15	UNUSED						001-099
	J15		W1175	0694	24		34-22-37	115-199
	K01		W1175	5012B	24		34-22-39	ALL
	K02	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 158

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00085D		E002-03/ /		PLUG- (continued)				001-099
D00085D		E2-3/ /		PLUG- (continued)				115-199
	K03		W1175	5011B	24		34-22-39	ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						001-002, 115-199
	K09		W1175	5115B	24		34-45-01	003-099
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12		W1175	0019	24		34-22-37	ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
	DED		W1175	5002Z			34-22-34	ALL
	DED		W1175	5004Z			34-22-38	ALL
	DED		W1175	5007Z			34-22-38	ALL
	DED		W1175	5010Z			34-22-39	ALL
	DED		W1175	5011Z			34-22-39	ALL
	DED		W1175	5012Z			34-22-39	ALL
	DED		W1175	5071Z			22-12-21	ALL
	DED		W1175	5107Z			34-22-39	ALL
	DED		W1175	5121Z			34-25-12	002
	DED		W1175	5159Z			34-22-38	002
	DED		W1175	5115Z			34-45-01	003-099
	DED		W1175	5183Z			34-22-38	115-199
D00085E		E002-03/ /		PLUG-				001-099
D00085E		E2-3/ /		PLUG-				115-199
	A01		W1175	2519T	24		34-22-35	ALL
	A02		W1175	2520T	24		34-22-35	ALL
	A03		W1175	2521T	24		34-22-35	ALL
	A04		W1175	2522T	24		34-22-35	ALL
	A05		W1175	2523T	24		34-22-35	ALL
	A06		W1175	2524T	24		34-22-35	ALL
	A07		W1175	2525T	24		34-22-35	ALL
	A08		W1175	2526T	24		34-22-35	ALL
	A09		W1175	2527T	24		34-22-35	ALL
	A10	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 159

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00085E		E002-03/ /		PLUG- (continued)				001-099
D00085E		E2-3/ /		PLUG- (continued)				115-199
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13		W1175	5079R	24		34-22-39	001, 003-099, 115-199
	A13		W1175	5079R	24		34-25-12	002
	A14	UNUSED						001, 003-099, 115-199
	A14		W1175	5149R	22		34-22-38	002
	A15	UNUSED						ALL
	B01		W1175	2519W	24		34-22-35	ALL
	B02		W1175	2520W	24		34-22-35	ALL
	B03		W1175	2521W	24		34-22-35	ALL
	B04		W1175	2522W	24		34-22-35	ALL
	B05		W1175	2523W	24		34-22-35	ALL
	B06		W1175	2524W	24		34-22-35	ALL
	B07		W1175	2525W	24		34-22-35	ALL
	B08		W1175	2526W	24		34-22-35	ALL
	B09		W1175	2527W	24		34-22-35	ALL
	B10	UNUSED						ALL
	B11	UNUSED						001-008, 010-099
	B11		W1175	0277	24		31-51-34	009, 115-199
	B12	UNUSED						ALL
	B13		W1175	5079B	24		34-22-39	001, 003-099, 115-199
	B13		W1175	5079B	24		34-25-12	002
	B14	UNUSED						001, 003-099, 115-199
	B14		W1175	5149B	22		34-22-38	002
	B15	UNUSED						ALL
	C01		W1175	2528T	24		34-22-35	ALL
	C02		W1175	2529T	24		34-22-35	ALL
	C03		W1175	2530T	24		34-22-35	ALL
	C04		W1175	2531T	24		34-22-35	ALL
	C05		W1175	2532T	24		34-22-35	ALL
	C06		W1175	2533T	24		34-22-35	ALL
	C07		W1175	2534T	24		34-22-35	ALL
	C08		W1175	2535T	24		34-22-35	ALL
	C09		W1175	2536T	24		34-22-35	ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 160

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00085E		E002-03/ /		PLUG- (continued)				001-099
D00085E		E2-3/ /		PLUG- (continued)				115-199
	C15	UNUSED						ALL
	D01		W1175	2528W	24		34-22-35	ALL
	D02		W1175	2529W	24		34-22-35	ALL
	D03		W1175	2530W	24		34-22-35	ALL
	D04		W1175	2531W	24		34-22-35	ALL
	D05		W1175	2532W	24		34-22-35	ALL
	D06		W1175	2533W	24		34-22-35	ALL
	D07		W1175	2534W	24		34-22-35	ALL
	D08		W1175	2535W	24		34-22-35	ALL
	D09		W1175	2536W	24		34-22-35	ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11		W1175	0369	24		34-45-01	001-099 115-199
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 161

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00085E		E002-03/ /		PLUG- (continued)				001-099
D00085E		E2-3/ /		PLUG- (continued)				115-199
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01		W1175	2510T	24		34-22-34	ALL
	G02		W1175	2511T	24		34-22-34	ALL
	G03		W1175	2512T	24		34-22-34	ALL
	G04		W1175	2513T	24		34-22-34	ALL
	G05		W1175	2514T	24		34-22-34	ALL
	G06		W1175	2515T	24		34-22-34	ALL
	G07		W1175	2516T	24		34-22-34	ALL
	G08		W1175	2517T	24		34-22-34	ALL
	G09		W1175	2518T	24		34-22-34	ALL
	G10	UNUSED						ALL
	G11	UNUSED						001-002, 115-199
	G11		W1175	0501	24		34-45-01	003-099
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01		W1175	2510W	24		34-22-34	ALL
	H02		W1175	2511W	24		34-22-34	ALL
	H03		W1175	2512W	24		34-22-34	ALL
	H04		W1175	2513W	24		34-22-34	ALL
	H05		W1175	2514W	24		34-22-34	ALL
	H06		W1175	2515W	24		34-22-34	ALL
	H07		W1175	2516W	24		34-22-34	ALL
	H08		W1175	2517W	24		34-22-34	ALL
	H09		W1175	2518W	24		34-22-34	ALL
	H10	UNUSED						ALL
	H11	UNUSED						001, 003-099, 115-199
	H11		W1175	0566	22		34-22-18	002
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 162

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00085E		E002-03/ /		PLUG- (continued)				001-099
D00085E		E2-3/ /		PLUG- (continued)				115-199
	H15	UNUSED						ALL
	J01		W1175	2501T	24		34-22-34	ALL
	J02		W1175	2502T	24		34-22-34	ALL
	J03		W1175	2503T	24		34-22-34	ALL
	J04		W1175	2504T	24		34-22-34	ALL
	J05		W1175	2505T	24		34-22-34	ALL
	J06		W1175	2506T	24		34-22-34	ALL
	J07		W1175	2507T	24		34-22-34	ALL
	J08		W1175	2508T	24		34-22-34	ALL
	J09		W1175	2509T	24		34-22-34	ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01		W1175	2501W	24		34-22-34	ALL
	K02		W1175	2502W	24		34-22-34	ALL
	K03		W1175	2503W	24		34-22-34	ALL
	K04		W1175	2504W	24		34-22-34	ALL
	K05		W1175	2505W	24		34-22-34	ALL
	K06		W1175	2506W	24		34-22-34	ALL
	K07		W1175	2507W	24		34-22-34	ALL
	K08		W1175	2508W	24		34-22-34	ALL
	K09		W1175	2509W	24		34-22-34	ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
	DED		W1175	5079Z			34-22-39	001, 003-099, 115-199
	DED		W1175	5079Z			34-25-12	002
	DED		W1175	5149Z			34-22-38	002
D00085F		E002-03/ /		PLUG-				001-099
D00085F		E2-3/ /		PLUG-				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 163

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00085F		E002-03/ /		PLUG- (continued)				001-099
D00085F		E2-3/ /		PLUG- (continued)				115-199
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	=C12	UNUSED						ALL
	=C13	UNUSED						ALL
D00087		P001-00/ /		PLUG ELEX ATTD DIR IND, CAPT				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W2321	0014	24		34-22-16	ALL
	7		W2321	0013	22		34-22-16	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W2321	2002R	24		34-22-14	ALL
	13		W2321	2002B	24		34-22-14	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W2321	0012	22		34-22-16	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W2321	0009	24		34-22-14	ALL
	23		W2321	0010	24		34-22-14	ALL
	24		W2321	0011	24		34-22-14	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 164

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00087		P001-00/ /		PLUG ELEX ATTD DIR IND, CAPT (continued)				ALL
	25	UNUSED						ALL
	26		W2321	2001R	24		34-22-14	ALL
	27		W2321	2001B	24		34-22-14	ALL
	28		W2321	2511R	24		34-22-14	ALL
	29		W2321	2511B	24		34-22-14	ALL
	30		W2321	3003R	24		34-22-14	ALL
	31		W2321	3003B	24		34-22-14	ALL
	32		W2321	3003Y	24		34-22-14	ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41		W2321	0035	24		34-22-14	ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49		W2321	2512T	24		34-22-14	ALL
	50		W2321	2512W	24		34-22-14	ALL
	51		W2321	2513T	24		34-22-14	ALL
	52		W2321	2513W	24		34-22-14	ALL
	53		W2321	2514T	24		34-22-14	ALL
	54		W2321	2514W	24		34-22-14	ALL
	55		W2321	2515T	24		34-22-14	ALL
	56		W2321	2515W	24		34-22-14	ALL
	57		W2321	2516T	24		34-22-14	ALL
	58		W2321	2516W	24		34-22-14	ALL
	59		W2321	2517T	24		34-22-14	ALL
	60		W2321	2517W	24		34-22-14	ALL
	61		W2321	2518T	24		34-22-14	ALL
	62		W2321	2518W	24		34-22-14	ALL
	63		W2321	2519T	24		34-22-14	ALL
	64		W2321	2519W	24		34-22-14	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 165

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00087		P001-00/ /		PLUG ELEX ATTD DIR IND, CAPT (continued)				ALL
	65		W2321	2520T	24		34-22-14	ALL
	66		W2321	2520W	24		34-22-14	ALL
	67		W2321	0008	24		34-22-14	ALL
D00089		P001-00/ /		PLUG ELEX HORIZ SITUATION IND,CAPT				ALL
	1		W2321	0005	24		34-22-15	ALL
	2		W2321	0006	24		34-22-15	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W2321	0015	24		34-22-16	ALL
	7		W2321	0016	22		34-22-16	ALL
	8		W2321	0007	24		34-22-15	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W2321	2001R	24		34-22-14	ALL
	13		W2321	2001B	24		34-22-14	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W2321	0017	22		34-22-16	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W2321	0002	24		34-22-15	ALL
	23		W2321	0003	24		34-22-15	ALL
	24		W2321	0004	24		34-22-15	ALL
	25	UNUSED						ALL
	26		W2321	2002R	24		34-22-14	ALL
	27		W2321	2002B	24		34-22-14	ALL
	28		W2321	2510R	24		34-22-15	ALL
	29		W2321	2510B	24		34-22-15	ALL
	30		W2321	3002R	24		34-22-15	ALL
	31		W2321	3002B	24		34-22-15	ALL
	32		W2321	3002Y	24		34-22-15	ALL
	33		W2321	3001R	24		34-22-15	ALL
	34		W2321	3001B	24		34-22-15	ALL
	35		W2321	3001Y	24		34-22-15	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 166

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00089		P001-00/ /		PLUG ELEX HORIZ SITUATION IND,CAPT (continued)				ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41		W2321	0029	24		34-22-15	ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49		W2321	2501T	24		34-22-15	ALL
	50		W2321	2501W	24		34-22-15	ALL
	51		W2321	2502T	24		34-22-15	ALL
	52		W2321	2502W	24		34-22-15	ALL
	53		W2321	2503T	24		34-22-15	ALL
	54		W2321	2503W	24		34-22-15	ALL
	55		W2321	2504T	24		34-22-15	ALL
	56		W2321	2504W	24		34-22-15	ALL
	57		W2321	2505T	24		34-22-15	ALL
	58		W2321	2505W	24		34-22-15	ALL
	59		W2321	2506T	24		34-22-15	ALL
	60		W2321	2506W	24		34-22-15	ALL
	61		W2321	2507T	24		34-22-15	ALL
	62		W2321	2507W	24		34-22-15	ALL
	63		W2321	2508T	24		34-22-15	ALL
	64		W2321	2508W	24		34-22-15	ALL
	65		W2321	2509T	24		34-22-15	ALL
	66		W2321	2509W	24		34-22-15	ALL
	67		W2321	0001	24		34-22-15	ALL
D00091		P003-00/ /		PLUG ELEX ATTD DIR IND, F/O				001-099
D00091		P003-00/ /		PLUG ELEX ATTD DIR IND,F/O				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 167

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00091		P003-00/ /		PLUG ELEX ATTD DIR IND, F/O (continued)				001-099
D00091		P003-00/ /		PLUG ELEX ATTD DIR IND,F/O (continued)				115-199
	6		W2323	0007	24		34-22-26	ALL
	7		W2323	0006	22		34-22-26	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W2323	2001R	24		34-22-24	ALL
	13		W2323	2001B	24		34-22-24	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W2323	0005	22		34-22-26	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W2323	0001	24		34-22-24	ALL
	23		W2323	0002	24		34-22-24	ALL
	24		W2323	0003	24		34-22-24	ALL
	25	UNUSED						ALL
	26		W2323	2002R	24		34-22-24	ALL
	27		W2323	2002B	24		34-22-24	ALL
	28		W2323	2510R	24		34-22-24	ALL
	29		W2323	2510B	24		34-22-24	ALL
	30		W2323	3001R	24		34-22-24	ALL
	31		W2323	3001B	24		34-22-24	ALL
	32		W2323	3001Y	24		34-22-24	ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41		W2323	0035	24		34-22-24	ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 168

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00091		P003-00/ /		PLUG ELEX ATTD DIR IND, F/O (continued)				001-099
D00091		P003-00/ /		PLUG ELEX ATTD DIR IND,F/O (continued)				115-199
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49		W2323	2501T	24		34-22-24	ALL
	50		W2323	2501W	24		34-22-24	ALL
	51		W2323	2502T	24		34-22-24	ALL
	52		W2323	2502W	24		34-22-24	ALL
	53		W2323	2503T	24		34-22-24	ALL
	54		W2323	2503W	24		34-22-24	ALL
	55		W2323	2504T	24		34-22-24	ALL
	56		W2323	2504W	24		34-22-24	ALL
	57		W2323	2505T	24		34-22-24	ALL
	58		W2323	2505W	24		34-22-24	ALL
	59		W2323	2506T	24		34-22-24	ALL
	60		W2323	2506W	24		34-22-24	ALL
	61		W2323	2507T	24		34-22-24	ALL
	62		W2323	2507W	24		34-22-24	ALL
	63		W2323	2508T	24		34-22-24	ALL
	64		W2323	2508W	24		34-22-24	ALL
	65		W2323	2509T	24		34-22-24	ALL
	66		W2323	2509W	24		34-22-24	ALL
	67		W2323	0004	24		34-22-24	ALL
D00093		P003-00/ /		PLUG ELEX HORIZ SITUATION IND, F/O				ALL
	1		W2323	0020	24		34-22-25	ALL
	2		W2323	0021	24		34-22-25	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W2323	0008	24		34-22-26	ALL
	7		W2323	0009	22		34-22-26	ALL
	8		W2323	0022	24		34-22-25	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W2323	2002R	24		34-22-24	ALL
	13		W2323	2002B	24		34-22-24	ALL
	14	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 169

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00093		P003-00/ /		PLUG ELEX HORIZ SITUATION IND, F/O (continued)				ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W2323	0010	22		34-22-26	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W2323	0016	24		34-22-25	ALL
	23		W2323	0017	24		34-22-25	ALL
	24		W2323	0018	24		34-22-25	ALL
	25	UNUSED						ALL
	26		W2323	2001R	24		34-22-24	ALL
	27		W2323	2001B	24		34-22-24	ALL
	28		W2323	2520R	24		34-22-25	ALL
	29		W2323	2520B	24		34-22-25	ALL
	30		W2323	3003R	24		34-22-25	ALL
	31		W2323	3003B	24		34-22-25	ALL
	32		W2323	3003Y	24		34-22-25	ALL
	33		W2323	3002R	24		34-22-25	ALL
	34		W2323	3002B	24		34-22-25	ALL
	35		W2323	3002Y	24		34-22-25	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41		W2323	0030	24		34-22-25	ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49		W2323	2511T	24		34-22-25	ALL
	50		W2323	2511W	24		34-22-25	ALL
	51		W2323	2512T	24		34-22-25	ALL
	52		W2323	2512W	24		34-22-25	ALL
	53		W2323	2513T	24		34-22-25	ALL
	54		W2323	2513W	24		34-22-25	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 170

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00093		P003-00/ /		PLUG ELEX HORIZ SITUATION IND, F/O (continued)				ALL
	55		W2323	2514T	24		34-22-25	ALL
	56		W2323	2514W	24		34-22-25	ALL
	57		W2323	2515T	24		34-22-25	ALL
	58		W2323	2515W	24		34-22-25	ALL
	59		W2323	2516T	24		34-22-25	ALL
	60		W2323	2516W	24		34-22-25	ALL
	61		W2323	2517T	24		34-22-25	ALL
	62		W2323	2517W	24		34-22-25	ALL
	63		W2323	2518T	24		34-22-25	ALL
	64		W2323	2518W	24		34-22-25	ALL
	65		W2323	2519T	24		34-22-25	ALL
	66		W2323	2519W	24		34-22-25	ALL
	67		W2323	0019	24		34-22-25	ALL
D00095		P010-00/ /		PLUG-EFIS CONTROL PANEL,CAPT				ALL
	1		W2321	0031	20		33-13-52	ALL
	2		W2321	0032	20		33-13-52	ALL
	3		W2321	0018	24		34-22-16	ALL
	4		W2321	0019	20		34-22-16	ALL
	5		W2321	0021	20		34-22-16	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W2321	0023	24		34-43-12	ALL
	15	UNUSED						ALL
	16		W2321	0028	22		34-22-18	ALL
	17		W2321	0025	24		34-22-18	ALL
	18		W2321	0027	24		34-22-18	ALL
	19	UNUSED						ALL
	20		W2321	0026	24		34-22-18	ALL
	21		W2321	0024	24		34-22-18	ALL
	22	UNUSED						ALL
	23		W2321	0001	24		34-22-15	ALL
	24		W2321	0008	24		34-22-14	ALL
	25		W2321	3002Y	24		34-22-15	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 171

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00095		P010-00/ /		PLUG-EFIS CONTROL PANEL,CAPT (continued)				ALL
	26		W2321	3002B	24		34-22-15	ALL
	27		W2321	3002R	24		34-22-15	ALL
	28		W2321	3001Y	24		34-22-15	ALL
	29		W2321	3001B	24		34-22-15	ALL
	30		W2321	3001R	24		34-22-15	ALL
	31		W2321	3003Y	24		34-22-14	ALL
	32		W2321	3003B	24		34-22-14	ALL
	33		W2321	3003R	24		34-22-14	ALL
	34		W2321	0020	20		34-22-16	ALL
	35		W2321	5001B	24		34-22-14	ALL
	36		W2321	5001R	24		34-22-14	ALL
	37	UNUSED						ALL
	38		W2321	0022	20		34-22-16	ALL
	39	UNUSED						001-099
	39		W2321	0037	20		34-22-16	115-199
	40	UNUSED						ALL
	41	UNUSED						ALL
D00097		P010-00/ /		PLUG-EFIS CONTROL PANEL,F/O				ALL
	1		W2323	0031	20		33-13-51	ALL
	2		W2323	0032	20		33-13-51	ALL
	3		W2323	0011	24		34-22-26	ALL
	4		W2323	0012	20		34-22-26	ALL
	5		W2323	0014	20		34-22-26	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W2323	0028	24		34-43-12	001, 003-099, 115-199
	14		W2323	0028	24		SPARE	002
	15	UNUSED						ALL
	16		W2323	0027	22		34-22-28	ALL
	17		W2323	0026	24		34-22-28	ALL
	18		W2323	0024	24		34-22-28	ALL
	19	UNUSED						ALL
	20		W2323	0023	24		34-22-28	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 172

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00097		P010-00/ /		PLUG-EFIS CONTROL PANEL,F/O (continued)				ALL
	21		W2323	0025	24		34-22-28	ALL
	22	UNUSED						ALL
	23		W2323	0019	24		34-22-25	ALL
	24		W2323	0004	24		34-22-24	ALL
	25		W2323	3003Y	24		34-22-25	ALL
	26		W2323	3003B	24		34-22-25	ALL
	27		W2323	3003R	24		34-22-25	ALL
	28		W2323	3002Y	24		34-22-25	ALL
	29		W2323	3002B	24		34-22-25	ALL
	30		W2323	3002R	24		34-22-25	ALL
	31		W2323	3001Y	24		34-22-24	ALL
	32		W2323	3001B	24		34-22-24	ALL
	33		W2323	3001R	24		34-22-24	ALL
	34		W2323	0013	20		34-22-26	ALL
	35		W2323	5001B	24		34-22-24	ALL
	36		W2323	5001R	24		34-22-24	ALL
	37	UNUSED						ALL
	38		W2323	0015	20		34-22-26	ALL
	39	UNUSED						001-099
	39		W2323	0037	20		34-22-26	115-199
	40	UNUSED						ALL
	41	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00000

Page 173 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00105		P051-00/ /		RCPT-				ALL
	1		W1451	0347	22		31-51-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1451	1002	22		31-51-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1451	0271	22		31-51-11	ALL
	8		W1451	0272	22		31-51-11	ALL
	9		W1451	0273	22		31-51-11	ALL
	10		W1451	1003	24		31-51-11	ALL
	11		W1451	1006	24		31-51-11	ALL
	12		W1451	1009	24		31-51-11	ALL
	13		W1451	1015	24		31-51-11	ALL
	14		W1451	1016	24		31-51-11	ALL
	15		W1451	1005	24		31-51-11	ALL
	16		W1451	1008	24		31-51-11	ALL
	17		W1451	1011	24		31-51-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W1451	1004	24		31-51-11	ALL
	21		W1451	1007	24		31-51-11	ALL
	22		W1451	1010	24		31-51-11	ALL
	23		W1451	1017	24		31-51-11	ALL
	24		W1451	0275	22		31-51-11	ALL
	25		W1451	0276	22		31-51-11	ALL
	26		W1451	1012	24		31-51-11	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33		W1451	0037	22		31-51-11	ALL
	34		W1451	0036	22		31-51-11	ALL
	35		W1451	1013	24		31-51-11	ALL
	36		W1451	1025	24		31-51-11	ALL
	37		W1451	0277	22		31-51-11	ALL
	38		W1451	0279	22		31-51-11	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00105		P051-00/ /		RCPT- (continued)				ALL
	41		W1451	0283	22		31-51-11	ALL
	42		W1451	0284	22		31-51-11	ALL
	43		W1451	0285	22		31-51-11	ALL
	44	UNUSED						ALL
	45		W1451	1023	24		31-51-11	ALL
	46		W1451	0040	24		31-51-11	ALL
	47		W1451	1021	24		31-51-11	ALL
	48		W1451	1018	24		31-51-11	ALL
	49		W1451	1014	24		31-51-11	ALL
	50		W1451	1024	24		31-51-11	ALL
	51		W1451	1019	24		31-51-11	ALL
	52	UNUSED						ALL
	53	UNUSED						001-008, 010-099
	53		W1451	1028	24		31-51-11	009, 115-199
	54	UNUSED						ALL
	55	UNUSED						ALL
	56	UNUSED						ALL
	57		W1451	0280	22		31-51-11	ALL
	58		W1451	0281	22		31-51-11	ALL
	59		W1451	1002Z			31-51-11	ALL
	60		W1451	0050	22		31-51-11	ALL
	61	UNUSED						ALL
	62	UNUSED						001-008, 010-099
	62		W1451	1026	24		31-51-11	009, 115-199
	63		W1451	0009	24		31-51-11	ALL
	64		W1451	0032	24		31-51-11	ALL
	65		W1451	0014	24		31-51-11	ALL
	66	UNUSED						001-008, 010-099
	66		W1451	0361	24		31-51-11	009, 115-199
	67	UNUSED						ALL
	68		W1451	0331	22		31-51-11	ALL
	69		W1451	0332	22		31-51-11	ALL
	70		W1451	1022	24		31-51-11	ALL
	71	UNUSED						ALL
	72	UNUSED						ALL
	73	UNUSED						ALL
	74		W1451	1020	24		31-51-11	ALL
	75		W1451	0042	24		31-51-11	ALL
	76	UNUSED						001-008, 010-099
	76		W1451	1027	24		31-51-11	009, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00105		P051-00/ /		RCPT- (continued)				ALL
	77	UNUSED						ALL
	78	UNUSED						ALL
			W1451	1003Z			31-51-11	ALL
			W1451	1004Z			31-51-11	ALL
			W1451	1005Z			31-51-11	ALL
			W1451	1006Z			31-51-11	ALL
			W1451	1007Z			31-51-11	ALL
			W1451	1008Z			31-51-11	ALL
			W1451	1009Z			31-51-11	ALL
			W1451	1010Z			31-51-11	ALL
			W1451	1011Z			31-51-11	ALL
			W1451	1012Z			31-51-11	ALL
			W1451	1013Z			31-51-11	ALL
			W1451	1014Z			31-51-11	ALL
			W1451	1015Z			31-51-11	ALL
			W1451	1016Z			31-51-11	ALL
			W1451	1017Z			31-51-11	ALL
			W1451	1018Z			31-51-11	ALL
			W1451	1019Z			31-51-11	ALL
			W1451	1020Z			31-51-11	ALL
			W1451	1021Z			31-51-11	ALL
			W1451	1022Z			31-51-11	ALL
			W1451	1023Z			31-51-11	ALL
			W1451	1024Z			31-51-11	ALL
			W1451	1025Z			31-51-11	ALL
			W1451	FRAF			31-51-11	ALL
			W1451	FRAG			31-51-11	ALL
			W1451	FRAH			31-51-11	ALL
			W1451	FRAI			31-51-11	ALL
			W1451	FRAJ			31-51-11	ALL
			W1451	FRAK			31-51-11	ALL
			W1451	FRAL			31-51-11	ALL
			W1451	1026Z			31-51-11	009, 115-199
			W1451	1027Z			31-51-11	009, 115-199
			W1451	1028Z			31-51-11	009, 115-199
			W1451	FRAU			31-51-11	009, 115-199
D00107		P051-00/ /		RCPT-				ALL
	1		W1451	0349	22		31-51-12	ALL
	2	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00107		P051-00/ /		RCPT- (continued)				ALL
	3	UNUSED						ALL
	4		W1451	1032	22		31-51-12	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1451	0301	22		31-51-12	ALL
	8		W1451	0302	22		31-51-12	ALL
	9		W1451	0303	22		31-51-12	ALL
	10		W1451	1033	24		31-51-12	ALL
	11		W1451	1036	24		31-51-12	ALL
	12		W1451	1039	24		31-51-12	ALL
	13		W1451	1045	24		31-51-12	ALL
	14		W1451	1046	24		31-51-12	ALL
	15		W1451	1035	24		31-51-12	ALL
	16		W1451	1038	24		31-51-12	ALL
	17		W1451	1041	24		31-51-12	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W1451	1034	24		31-51-12	ALL
	21		W1451	1037	24		31-51-12	ALL
	22		W1451	1040	24		31-51-12	ALL
	23		W1451	1047	24		31-51-12	ALL
	24		W1451	0305	22		31-51-12	ALL
	25		W1451	0306	22		31-51-12	ALL
	26		W1451	1042	24		31-51-12	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33		W1451	0137	22		31-51-12	ALL
	34		W1451	0136	22		31-51-12	ALL
	35		W1451	1043	24		31-51-12	ALL
	36		W1451	1055	24		31-51-12	ALL
	37		W1451	0307	22		31-51-12	ALL
	38		W1451	0309	22		31-51-12	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41		W1451	0313	22		31-51-12	ALL
	42		W1451	0314	22		31-51-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 4

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00107		P051-00/ /		RCPT- (continued)				ALL
	43		W1451	0315	22		31-51-12	ALL
	44	UNUSED						ALL
	45		W1451	1053	24		31-51-12	ALL
	46		W1451	0140	24		31-51-12	ALL
	47		W1451	1051	24		31-51-12	ALL
	48		W1451	1048	24		31-51-12	ALL
	49		W1451	1044	24		31-51-12	ALL
	50		W1451	1054	24		31-51-12	ALL
	51		W1451	1049	24		31-51-12	ALL
	52	UNUSED						ALL
	53	UNUSED						001-008, 010-099
	53		W1451	1058	24		31-51-12	009, 115-199
	54	UNUSED						ALL
	55	UNUSED						ALL
	56	UNUSED						ALL
	57		W1451	0310	22		31-51-12	ALL
	58		W1451	0311	22		31-51-12	ALL
	59		W1451	1032Z			31-51-12	ALL
	60		W1451	0150	22		31-51-12	ALL
	61	UNUSED						ALL
	62	UNUSED						001-008, 010-099
	62		W1451	1056	24		31-51-12	009, 115-199
	63		W1451	0109	24		31-51-12	ALL
	64		W1451	0132	24		31-51-12	ALL
	65		W1451	0114	24		31-51-12	ALL
	66	UNUSED						001-008, 010-099
	66		W1451	0381	24		31-51-12	009, 115-199
	67	UNUSED						ALL
	68		W1451	0333	22		31-51-12	ALL
	69		W1451	0334	22		31-51-12	ALL
	70		W1451	1052	24		31-51-12	ALL
	71	UNUSED						ALL
	72	UNUSED						ALL
	73	UNUSED						ALL
	74		W1451	1050	24		31-51-12	ALL
	75		W1451	0142	24		31-51-12	ALL
	76	UNUSED						001-008, 010-099
	76		W1451	1057	24		31-51-12	009, 115-199
	77	UNUSED						ALL
	78	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 5

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00107		P051-00/ /		RCPT- (continued)				ALL
			W1451	1033Z			31-51-12	ALL
			W1451	1034Z			31-51-12	ALL
			W1451	1035Z			31-51-12	ALL
			W1451	1036Z			31-51-12	ALL
			W1451	1037Z			31-51-12	ALL
			W1451	1038Z			31-51-12	ALL
			W1451	1039Z			31-51-12	ALL
			W1451	1040Z			31-51-12	ALL
			W1451	1041Z			31-51-12	ALL
			W1451	1042Z			31-51-12	ALL
			W1451	1043Z			31-51-12	ALL
			W1451	1044Z			31-51-12	ALL
			W1451	1045Z			31-51-12	ALL
			W1451	1046Z			31-51-12	ALL
			W1451	1047Z			31-51-12	ALL
			W1451	1048Z			31-51-12	ALL
			W1451	1049Z			31-51-12	ALL
			W1451	1050Z			31-51-12	ALL
			W1451	1051Z			31-51-12	ALL
			W1451	1052Z			31-51-12	ALL
			W1451	1053Z			31-51-12	ALL
			W1451	1054Z			31-51-12	ALL
			W1451	1055Z			31-51-12	ALL
			W1451	FRAM			31-51-12	ALL
			W1451	FRAN			31-51-12	ALL
			W1451	FRAP			31-51-12	ALL
			W1451	FRAQ			31-51-12	ALL
			W1451	FRAR			31-51-12	ALL
			W1451	FRAS			31-51-12	ALL
			W1451	FRAT			31-51-12	ALL
			W1451	1056Z			31-51-12	009, 115-199
			W1451	1057Z			31-51-12	009, 115-199
			W1451	1058Z			31-51-12	009, 115-199
			W1451	FRAV			31-51-12	009, 115-199
D00109		250/252/L50		PLUG-				001-099
D00109		250/252/L050		PLUG-				115-199
	1	UNUSED						001, 003-099, 115-199
	1		W4471	5228R	22		34-43-14	002
	2	UNUSED						001, 003-099, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 6

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00109		250/252/L50		PLUG- (continued)				001-099
D00109		250/252/L050		PLUG- (continued)				115-199
	2		W4471	5228B	22		34-43-14	002
	3		W2193	3501R	24		31-51-31	ALL
	4		W2193	0001	22		31-51-11	ALL
	5		W2193	3501B	24		31-51-31	ALL
	6		W2193	3501Y	24		31-51-31	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	DED		W2193	3501Z			31-51-31	ALL
	DED		W4471	5228Z			34-43-14	002
D00111		250/252/R50		PLUG-				001-099
D00111		250/252/R050		PLUG-				115-199
	1	UNUSED						001, 003-099, 115-199
	1		W4477	5086R	22		34-43-14	002
	2	UNUSED						001, 003-099, 115-199
	2		W4477	5086B	22		34-43-14	002
	3		W2195	3501R	24		31-51-32	ALL
	4		W2195	0001	22		31-51-12	ALL
	5		W2195	3501B	24		31-51-32	ALL
	6		W2195	3501Y	24		31-51-32	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	DED		W2195	3501Z			31-51-32	ALL
	DED		W4477	5086Z			34-43-14	002
D00113		P051-00/ /		RCPT-				ALL
	1		W1451	0071	24		31-51-21	ALL
	2		W1451	0080	24		31-51-21	ALL
	3	UNUSED						ALL
	4		W1451	0235	24		31-51-21	ALL
	5	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 7

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00113		P051-00/ /		RCPT- (continued)				ALL
	6		W1451	0424	24		31-51-21	ALL
	7		W1451	0408	24		31-51-21	ALL
	8		W1451	0239	24		31-51-21	ALL
	9	UNUSED						ALL
	10		W1451	0233	24		31-51-21	ALL
	11		W1451	0238	24		31-51-21	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1451	0261	22		31-51-11	ALL
	15		W1451	0291	22		31-51-12	ALL
	16		W1451	0230	24		31-51-21	ALL
	17		W1451	1010	24		31-51-11	ALL
	18	UNUSED						ALL
	19		W1451	5018B	24		31-51-21	ALL
	20	UNUSED						ALL
	21		W1451	0110	24		31-51-12	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W1451	1040	24		31-51-12	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W1451	1009	24		31-51-11	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W1451	1039	24		31-51-12	ALL
	31	UNUSED						ALL
	32		W1451	1011	24		31-51-11	ALL
	33		W1451	1041	24		31-51-12	ALL
	34		W1451	0234	24		31-51-21	ALL
	35		W1451	0171	24		31-51-21	ALL
	36		W1451	0317	24		31-51-21	ALL
	37		W1451	0074	24		31-51-21	001-008, 010-099
	37		W1451	1063	24		31-51-21	009, 115-199
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41		W1451	0413	24		31-51-21	001-008, 010-099
	41		W1451	1073	24		31-51-21	009, 115-199
	42		W1451	0077	24		31-51-21	001-008, 010-099
	42		W1451	1064	24		31-51-21	009, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 8

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00113		P051-00/ /		RCPT- (continued)				ALL
	43		W1451	0232	24		31-51-21	ALL
	44		W1451	0320	24		31-51-21	ALL
	45		W1451	0242	24		31-51-21	001-008, 010-099
	45		W1451	1070	24		31-51-21	009, 115-199
	46		W1451	0240	24		31-51-21	ALL
	47		W1451	PA01			31-51-21	ALL
	48		W1451	0230	24		31-51-21	ALL
	49		W1451	0231	24		31-51-21	ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52		W1451	5018R	24		31-51-21	ALL
	53	UNUSED						ALL
	54		W1451	0010	24		31-51-11	ALL
	55		W1451	0231	24		31-51-21	ALL
	56	UNUSED						ALL
	57	UNUSED						ALL
	58	UNUSED						ALL
	59	UNUSED						ALL
	60	UNUSED						ALL
	61	UNUSED						ALL
	62	UNUSED						ALL
	63		W1451	PA01			31-51-21	ALL
	64	UNUSED						ALL
	65	UNUSED						ALL
	66		W1451	0237	24		31-51-21	ALL
	DED		W1451	1009Z			31-51-11	ALL
	DED		W1451	1010Z			31-51-11	ALL
	DED		W1451	1011Z			31-51-11	ALL
	DED		W1451	1039Z			31-51-12	ALL
	DED		W1451	1040Z			31-51-12	ALL
	DED		W1451	1041Z			31-51-12	ALL
	DED		W1451	5018Z			31-51-21	ALL
	DED		W1451	1063Z			31-51-21	009, 115-199
	DED		W1451	1064Z			31-51-21	009, 115-199
	DED		W1451	1070Z			31-51-21	009, 115-199
	DED		W1451	1073Z			31-51-21	009, 115-199
D00115		P051-00/ /		RCPT-				ALL
	1		W1451	0076	24		31-51-32	001-008, 010-099, 115-199
	1	UNUSED						009

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 9

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00115		P051-00/ /		RCPT- (continued)				ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W1451	PB01			31-51-32	ALL
	9		W1451	0393	24		31-51-32	ALL
	10		W1451	0191	24		31-51-32	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W1451	0252	24		31-51-32	ALL
	14		W1451	0265	22		31-51-11	ALL
	15		W1451	0295	22		31-51-12	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W1451	0182	24		31-51-32	ALL
	20	UNUSED						001-008, 010-099, 115-199
	20		W1451	0326	24		31-51-32	009
	21	UNUSED						ALL
	22		W1451	0192	24		31-51-32	ALL
	23		W1451	2002R	24		31-51-32	ALL
	24		W1451	2002B	24		31-51-32	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W1451	1019	24		31-51-11	ALL
	28		W1451	2005R	24		31-51-32	ALL
	29	UNUSED						ALL
	30		W1451	1049	24		31-51-12	ALL
	31	UNUSED						ALL
	32		W1451	1020	24		31-51-11	ALL
	33		W1451	1050	24		31-51-12	ALL
	34		W1451	0194	24		31-51-32	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 10

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00115		P051-00/ /		RCPT- (continued)				ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45		W1451	0033	24		31-51-11	ALL
	46		W1451	0183	24		31-51-32	ALL
	47		W1451	0190	24		31-51-32	ALL
	48	UNUSED						ALL
	49		W1451	0414	24		31-51-32	001-008, 010-099
	49	UNUSED						009, 115-199
	50		W1451	0079	24		31-51-32	001-008, 010-099, 115-199
	50	UNUSED						009
	51		W1451	0189	24		31-51-32	ALL
	52		W1451	0402	24		31-51-32	ALL
	53	UNUSED						001-008, 010-099
	53		W1451	0345	24		31-51-36	009, 115-199
	54	UNUSED						ALL
	55		W1451	0193	24		31-51-32	ALL
	56		W1451	0133	24		31-51-12	ALL
	57		W1451	PB01			31-51-32	ALL
	58	UNUSED						ALL
	59	UNUSED						ALL
	60		W1451	2005B	24		31-51-32	ALL
	61	UNUSED						ALL
	62		W1451	2008R	24		31-51-32	001-099
	62		W1451	0397	24		31-51-32	115-199
	63		W1451	2008B	24		31-51-32	001-099
	63		W1451	0398	24		31-51-32	115-199
	64	UNUSED						ALL
	65	UNUSED						ALL
	66		W1451	0195	24		31-51-32	ALL
	DED		W1451	1019Z			31-51-11	ALL
	DED		W1451	1020Z			31-51-11	ALL
	DED		W1451	1049Z			31-51-12	ALL
	DED		W1451	1050Z			31-51-12	ALL
D00117		P051-00/ /		RCPT-				ALL
	1		W1451	0203	24		31-51-41	ALL
	2		W1451	0205	24		31-51-41	ALL
	3		W1451	0119	24		31-51-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 11

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00117		P051-00/ /		RCPT- (continued)				ALL
	4	UNUSED						ALL
	5		W1451	0233	24		31-51-21	ALL
	6		W1451	0211	24		31-51-41	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W1451	0202	24		31-51-41	ALL
	10		W1451	0201	24		31-51-41	ALL
	11		W1451	0209	24		31-51-41	ALL
	12		W1451	0208	24		31-51-41	ALL
	13	UNUSED						ALL
	14		W1451	0263	22		31-51-11	ALL
	15		W1451	0293	22		31-51-12	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W1451	0068	24		31-51-41	ALL
	21		W1451	0200	24		31-51-41	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W1451	1015	24		31-51-11	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W1451	1045	24		31-51-12	ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W1451	0204	24		31-51-41	ALL
	36		W1451	0206	24		31-51-41	ALL
	37		W1451	0019	24		31-51-11	ALL
	38	UNUSED						ALL
	39		W1451	0212	24		31-51-41	ALL
	40	UNUSED						ALL
	41		W1451	PC01			31-51-41	ALL
	42	UNUSED						ALL
	43		W1451	0207	24		31-51-41	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 12

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00117		P051-00/ /		RCPT- (continued)				ALL
	44	UNUSED						ALL
	45		W1451	0210	24		31-51-41	ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53		W1451	0168	24		31-51-41	ALL
	54	UNUSED						ALL
	55		W1451	PC01			31-51-41	ALL
	56	UNUSED						ALL
	57	UNUSED						ALL
	58	UNUSED						ALL
	59	UNUSED						ALL
	60	UNUSED						ALL
	61	UNUSED						ALL
	62	UNUSED						ALL
	63	UNUSED						ALL
	64	UNUSED						ALL
	65	UNUSED						ALL
	66	UNUSED						ALL
	DED		W1451	1015Z			31-51-11	ALL
	DED		W1451	1045Z			31-51-12	ALL
D00119		P051-00/ /		RCPT-				ALL
	1		W1451	5006R	24		22-14-11	ALL
	2		W1451	5004R	24		34-16-11	ALL
	3		W1451	5016R	24		22-14-21	ALL
	4		W1451	5014R	24		34-16-11	ALL
	5	UNUSED						ALL
	6		W1451	0226	24		34-16-11	ALL
	7		W1451	0229	24		34-16-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 13

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00119		P051-00/ /		RCPT- (continued)				ALL
	14		W1451	0262	22		31-51-11	ALL
	15		W1451	0292	22		31-51-12	ALL
	16	UNUSED						ALL
	17		W1451	1013	24		31-51-11	ALL
	18		W1451	0188	24		34-16-11	ALL
	19		W1451	0115	24		31-51-12	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W1451	0188	24		34-16-11	ALL
	23	UNUSED						ALL
	24		W1451	1043	24		31-51-12	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W1451	1012	24		31-51-11	001-008, 010-099
	27		W1451	0351	24		31-51-11	009, 115-199
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W1451	1042	24		31-51-12	001-008, 010-099
	30		W1451	0371	24		31-51-12	009, 115-199
	31		W1451	0213	24		34-16-11	ALL
	32		W1451	1014	24		31-51-11	001-008, 010-099
	32		W1451	0353	24		31-51-11	009, 115-199
	33		W1451	1044	24		31-51-12	001-008, 010-099
	33		W1451	0373	24		31-51-12	009, 115-199
	34		W1451	0225	24		34-13-21	ALL
	35		W1451	5006B	24		22-14-11	ALL
	36		W1451	5004B	24		34-16-11	ALL
	37		W1451	5016B	24		22-14-21	ALL
	38		W1451	5014B	24		34-16-11	ALL
	39	UNUSED						ALL
	40		W1451	0227	24		34-16-11	ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43		W1451	PD01			34-16-11	ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48		W1451	0187	24		34-16-11	ALL
	49	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 14

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00119		P051-00/ /		RCPT- (continued)				ALL
	50		W1451	0187	24		34-16-11	ALL
	51		W1451	0015	24		31-51-11	ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	56	UNUSED						ALL
	57	UNUSED						ALL
	58	UNUSED						ALL
	59	UNUSED						ALL
	60		W1451	PD01			34-16-11	ALL
	61	UNUSED						ALL
	62	UNUSED						ALL
	63	UNUSED						ALL
	64	UNUSED						ALL
	65		W1451	0228	24		34-16-11	ALL
	66		W1451	0224	24		34-16-11	ALL
	DED		W1451	1012Z			31-51-11	001-008, 010-099
	DED		W1451	1014Z			31-51-11	001-008, 010-099
	DED		W1451	1042Z			31-51-12	001-008, 010-099
	DED		W1451	1044Z			31-51-12	001-008, 010-099
	DED		W1451	1013Z			31-51-11	ALL
	DED		W1451	1043Z			31-51-12	ALL
	DED		W1451	5004Z			34-16-11	ALL
	DED		W1451	5006Z			22-14-11	ALL
	DED		W1451	5014Z			34-16-11	ALL
	DED		W1451	5016Z			22-14-21	ALL
D00121		P051-00/ /		RCPT-				ALL
	1		W1451	0104	24		31-51-12	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1451	0056	24		27-32-11	ALL
	5	UNUSED						ALL
	6		W1451	0460	22		27-32-12	001-008, 010-099
	6	UNUSED						009, 115-199
	7	UNUSED						ALL
	8		W1451	0465	24		27-32-11	001-099
	8	UNUSED						115-199
	9	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 15

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00121		P051-00/ /		RCPT- (continued)				ALL
	10		W1451	0459	22		27-32-12	001-008, 010-099
	10	UNUSED						009, 115-199
	11		W1451	0428	24		27-32-12	ALL
	12		W1451	5023R	24		27-32-11	ALL
	13		W1451	5023B	24		27-32-11	ALL
	14		W1451	0051	22		31-51-11	ALL
	15		W1451	0260	22		31-51-12	ALL
	16		W1451	5001R	24		27-32-11	ALL
	17		W1451	1004	24		31-51-11	ALL
	18		W1451	5001B	24		27-32-11	ALL
	19		W1451	5029R	24		27-32-11	001-099
	19	UNUSED						115-199
	20		W1451	5029B	24		27-32-11	001-099
	20	UNUSED						115-199
	21		W1451	0432	24		27-32-12	ALL
	22	UNUSED						ALL
	23		W1451	5025R	24		34-46-12	ALL
	24		W1451	1034	24		31-51-12	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W1451	1003	24		31-51-11	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W1451	1033	24		31-51-12	ALL
	31		W1451	0060	24		27-32-11	ALL
	32		W1451	1005	24		31-51-11	ALL
	33		W1451	1035	24		31-51-12	ALL
	34		W1451	0065	22		27-32-11	ALL
	35		W1451	0004	24		31-51-11	ALL
	36	UNUSED						ALL
	37		W1451	0404	24		27-32-11	ALL
	38		W1451	0055	24		27-32-11	ALL
	39		W1451	0064	24		27-32-11	ALL
	40		W1451	0062	24		27-32-11	ALL
	41	UNUSED						ALL
	42		W1451	0430	22		27-32-12	ALL
	43	UNUSED						ALL
	44		W1451	0429	22		27-32-12	ALL
	45	UNUSED						ALL
	46		W1451	0437	24		27-32-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 16

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00121		P051-00/ /		RCPT- (continued)				ALL
	47		W1451	0436	24		27-32-12	ALL
	48		W1451	0052	22		31-51-11	ALL
	49		W1451	0435	24		27-32-12	ALL
	50		W1451	0434	24		27-32-12	ALL
	51		W1451	0433	24		27-32-12	ALL
	52		W1451	PP01			27-32-11	ALL
	53		W1451	0438	24		27-32-12	ALL
	54		W1451	5025B	24		34-46-12	ALL
	55		W1451	0431	24		27-32-12	ALL
	56		W1451	0427	24		27-32-12	ALL
	57	UNUSED						ALL
	58		W1451	0440	24		27-32-12	ALL
	59	UNUSED						ALL
	60	UNUSED						ALL
	61	UNUSED						ALL
	62		W1451	0439	24		27-32-12	ALL
	63		W1451	0054	24		27-32-11	ALL
	64	UNUSED						ALL
	65		W1451	PP01			27-32-11	ALL
	66	UNUSED						ALL
	DED		W1451	5029Z			27-32-11	001-099
	DED		W1451	1003Z			31-51-11	ALL
	DED		W1451	1004Z			31-51-11	ALL
	DED		W1451	1005Z			31-51-11	ALL
	DED		W1451	1033Z			31-51-12	ALL
	DED		W1451	1034Z			31-51-12	ALL
	DED		W1451	1035Z			31-51-12	ALL
	DED		W1451	5001Z			27-32-11	ALL
	DED		W1451	5023Z			27-32-11	ALL
	DED		W1451	5025Z			34-46-12	ALL
D00123		P008-00/ /		PLUG-				ALL
	1		W2071	0001	20		33-13-52	ALL
	2		W2071	0002	20		33-13-52	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W2071	0005	24		23-12-11	ALL
	6		W2071	0006	24		23-12-11	ALL
	7		W2071	0007	24		23-12-11	ALL
	8		W2071	0008	24		23-12-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 17

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00123		P008-00/ /		PLUG- (continued)				ALL
	9		W2071	0009	24		23-12-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	18	W2071	0003	18		23-12-11	ALL
	14		W2071	0010	20		23-12-11	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W2071	5001R	24		23-12-11	ALL
	18		W2071	5001B	24		23-12-11	ALL
	19		W2071	5001Z			23-12-11	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D00125A		E004-03/ /		PLUG-				001-099
D00125A		E4-3/ /		PLUG-				115-199
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 18

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00125A		E004-03/ /		PLUG- (continued)				001-099
D00125A		E4-3/ /		PLUG- (continued)				115-199
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 19

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00125B		E004-03/ /		PLUG-				001-099
D00125B		E4-3/ /		PLUG-				115-199
	A01		W1163	0226	24		23-51-11	ALL
	A02	UNUSED						ALL
	A03		W1163	0424	24		23-12-11	ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07		W1163	5016R	24		23-12-11	ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13		W1163	2009R	24		23-21-11	001-099
	A13		W1163	2001R	24		23-21-11	115-199
	A14	UNUSED						ALL
	A15		W1163	0229	24		23-51-11	ALL
	B01		W1163	0225	24		23-51-11	ALL
	B02	UNUSED						ALL
	B03		W1163	0425	24		23-12-11	ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07		W1163	5016B	24		23-12-11	ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13		W1163	2009B	24		23-21-11	001-099
	B13		W1163	2001B	24		23-21-11	115-199
	B14		W1163	0005	24		23-12-11	ALL
	B15		W1163	0228	24		23-51-11	ALL
	C01		W1163	0227	24		23-51-11	ALL
	C02	UNUSED						ALL
	C03		W1163	0426	24		23-12-11	ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 20

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00125B		E004-03/ /		PLUG- (continued)				001-099
D00125B		E4-3/ /		PLUG- (continued)				115-199
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13		W1163	0427	24		23-12-11	ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01		W1163	0420	24		31-31-61	001-099
	D01		W1163	0420	24		31-31-32	115-199
	D02	UNUSED						ALL
	D03		W1163	0422	22		23-12-11	ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13		W1163	0428	24		23-12-11	ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	DED		W1163	5016Z			23-12-11	ALL
D00125C		E004-03/ /		PLUG-				001-099
D00125C		E4-3/ /		PLUG-				115-199
	1	JD	W1163	001CX			23-12-11	001-099
	1	JD	W1163	002CX			23-12-11	115-199
	2		W1163	0462	16		23-12-11	001-099
	2		W1163	1002	16		23-12-11	115-199
	3	UNUSED						ALL
	4		W1163	0464	16		23-12-11	001-099
	4		W1163	1003	16		23-12-11	115-199
	5	UNUSED						ALL
	= C1		W1163	001CO			23-12-11	001-099
	= C1		W1163	002CO			23-12-11	115-199
	= C5	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 21

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00125C		E004-03/ /		PLUG- (continued)				001-099
D00125C		E4-3/ /		PLUG- (continued)				115-199
	DED		W1163	1002Z			23-12-11	115-199
	DED		W1163	1003Z			23-12-11	115-199
D00127		P008-00/ /		PLUG-				ALL
	1		W2073	0001	20		33-13-52	ALL
	2		W2073	0002	20		33-13-52	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W2073	0005	24		23-12-21	ALL
	6		W2073	0006	24		23-12-21	ALL
	7		W2073	0007	24		23-12-21	ALL
	8		W2073	0008	24		23-12-21	ALL
	9		W2073	0009	24		23-12-21	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	18	W2073	0003	18		23-12-21	ALL
	14		W2073	0010	20		23-12-21	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W2073	5001R	24		23-12-21	ALL
	18		W2073	5001B	24		23-12-21	ALL
	19		W2073	5001Z			23-12-21	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D00129A		E004-03/ /		PLUG-				001-099
D00129A		E4-3/ /		PLUG-				115-199
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 22

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00129A		E004-03/ /		PLUG- (continued)				001-099
D00129A		E4-3/ /		PLUG- (continued)				115-199
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 23

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00129A		E004-03/ /		PLUG- (continued)				001-099
D00129A		E4-3/ /		PLUG- (continued)				115-199
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
D00129B		E004-03/ /		PLUG-				001-099
D00129B		E4-3/ /		PLUG-				115-199
	A01		W1163	0218	24		23-51-11	ALL
	A02	UNUSED						ALL
	A03		W1163	0431	24		23-12-21	ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07		W1163	5017R	24		23-12-21	ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13		W1163	2021R	24		23-21-11	001-099
	A13		W1163	5002R	24		23-21-11	115-199
	A14	UNUSED						ALL
	A15		W1163	0221	24		23-51-11	ALL
	B01		W1163	0217	24		23-51-11	ALL
	B02	UNUSED						ALL
	B03		W1163	0432	24		23-12-21	ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07		W1163	5017B	24		23-12-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 24

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00129B		E004-03/ /		PLUG- (continued)				001-099
D00129B		E4-3/ /		PLUG- (continued)				115-199
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13		W1163	2021B	24		23-21-11	001-099
	B13		W1163	5002B	24		23-21-11	115-199
	B14		W1163	0006	24		23-12-21	ALL
	B15		W1163	0220	24		23-51-11	ALL
	C01		W1163	0219	24		23-51-11	ALL
	C02	UNUSED						ALL
	C03		W1163	0433	24		23-12-21	ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13		W1163	0458	24		23-12-21	001-099
	C13		W1163	0471	24		23-12-21	115-199
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01		W1163	0421	24		31-31-61	001-099
	D01		W1163	0421	24		31-31-32	115-199
	D02	UNUSED						ALL
	D03		W1163	0430	22		23-12-21	ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13		W1163	0459	24		23-12-21	001-099

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 25

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00129B		E004-03/ /		PLUG- (continued)				001-099
D00129B		E4-3/ /		PLUG- (continued)				115-199
	D13		W1163	0472	24		23-12-21	115-199
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	DED		W1163	5017Z			23-12-21	ALL
	DED		W1163	5002Z			23-21-11	115-199
D00129C		E004-03/ /		PLUG-				001-099
D00129C		E4-3/ /		PLUG-				115-199
	1	JD	W1163	002CX			23-12-21	001-099
	1	JD	W1163	001CX			23-12-21	115-199
	2		W1163	0466	16		23-12-21	001-099
	2		W1163	1006	16		23-12-21	115-199
	3	UNUSED						ALL
	4		W1163	0468	16		23-12-21	001-099
	4		W1163	1007	16		23-12-21	115-199
	5	UNUSED						ALL
	= C1		W1163	002CO			23-12-21	001-099
	= C1		W1163	001CO			23-12-21	115-199
	= C5	UNUSED						ALL
	DED		W1163	1006Z			23-12-21	115-199
	DED		W1163	1007Z			23-12-21	115-199
D00131		753/305/L5		PLUG-				ALL
	= A1		W4071	001CX			23-12-11	ALL
	= C1		W4071	001CO			23-12-11	ALL
D00133		730/150/O		PLUG-				ALL
	= A1		W4073	001CX			23-12-21	ALL
	= C1		W4073	001CO			23-12-21	ALL
D00135A		E004-03/ /		PLUG-				001-099
D00135A		E4-3/ /		PLUG-				115-199
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 26

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00135A		E004-03/ /		PLUG- (continued)				001-099
D00135A		E4-3/ /		PLUG- (continued)				115-199
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 27

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00135A		E004-03/ /		PLUG- (continued)				001-099
D00135A		E4-3/ /		PLUG- (continued)				115-199
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
D00135B		E004-03/ /		PLUG-				001-099
D00135B		E4-3/ /		PLUG-				115-199
	A01		W1163	0012	24		23-21-11	ALL
	A02		W1163	0016	24		23-21-11	ALL
	A03		W1163	2022R	24		23-21-11	001-099
	A03		W1163	5001R	24		23-21-11	115-199
	A04		W1163	0004	22		23-21-11	ALL
	A05		W1163	2018R	24		23-21-11	001-099
	A05	UNUSED						115-199
	A06		W1163	2025R	24		23-21-11	001-099
	A06		W1163	2002R	24		23-21-11	115-199
	A07		W1163	0008	24		23-21-11	ALL
	A08		W1163	0022	22		23-21-11	ALL
	A09	UNUSED						ALL
	A10		W1163	0024	24		23-21-12	ALL
	A11		W1163	0028	24		23-21-12	ALL
	A12	UNUSED						ALL
	A13		W1163	0032	24		23-21-12	ALL
	A14	UNUSED						ALL
	A15		W1163	0036	24		23-21-12	ALL
	B01		W1163	0013	24		23-21-11	ALL
	B02		W1163	2008R	24		23-21-11	ALL
	B03		W1163	2022B	24		23-21-11	001-099
	B03		W1163	5001B	24		23-21-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 28

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00135B		E004-03/ /		PLUG- (continued)				001-099
D00135B		E4-3/ /		PLUG- (continued)				115-199
	B04		W1163	0442	24		23-21-11	ALL
	B05		W1163	2018B	24		23-21-11	001-099
	B05	UNUSED						115-199
	B06		W1163	2025B	24		23-21-11	001-099
	B06		W1163	2002B	24		23-21-11	115-199
	B07		W1163	0009	24		23-21-11	ALL
	B08		W1163	2002R	24		23-21-11	001-099
	B08		W1163	2003R	24		23-21-11	115-199
	B09		W1163	0023	24		23-21-12	ALL
	B10		W1163	0025	24		23-21-12	ALL
	B11		W1163	0029	24		23-21-12	ALL
	B12	UNUSED						ALL
	B13		W1163	0033	24		23-21-12	ALL
	B14	UNUSED						ALL
	B15		W1163	0037	24		23-21-12	ALL
	C01		W1163	0014	24		23-21-11	ALL
	C02		W1163	2008B	24		23-21-11	ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07		W1163	0010	24		23-21-11	ALL
	C08		W1163	2002B	24		23-21-11	001-099
	C08		W1163	2003B	24		23-21-11	115-199
	C09		W1163	0040	24		23-21-12	ALL
	C10		W1163	0026	24		23-21-12	ALL
	C11		W1163	0030	24		23-21-12	ALL
	C12	UNUSED						ALL
	C13		W1163	0034	24		23-21-12	ALL
	C14	UNUSED						ALL
	C15		W1163	0038	24		23-21-12	ALL
	D01		W1163	0015	24		23-21-11	ALL
	D02	UNUSED						ALL
	D03		W1163	0017	24		23-21-11	ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06		W1163	0007	24		23-21-11	ALL
	D07		W1163	0011	24		23-21-11	ALL
	D08	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 29

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00135B		E004-03/ /		PLUG- (continued)				001-099
D00135B		E4-3/ /		PLUG- (continued)				115-199
	D09		W1163	0041	24		23-21-12	ALL
	D10		W1163	0027	24		23-21-12	ALL
	D11		W1163	0031	24		23-21-12	ALL
	D12	UNUSED						ALL
	D13		W1163	0035	24		23-21-12	ALL
	D14	UNUSED						ALL
	D15		W1163	0039	24		23-21-12	ALL
	DED		W1163	5001Z			23-21-11	115-199
D00135C		E004-03/ /		PLUG-				001-099
D00135C		E4-3/ /		PLUG-				115-199
	1	UNUSED						ALL
	2		W1163	0001	22		23-21-11	ALL
	3		W1163	0002	22		23-21-11	ALL
	4		W1163	0003	22		23-21-11	ALL
	5	UNUSED						ALL
	= C1	UNUSED						ALL
	= C5	UNUSED						ALL
D00137A		*/ /		PLUG				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 30

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00137A		* / /		PLUG (continued)				ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 31

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00137A		* / /		PLUG (continued)				ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 32

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00137A		* / /		PLUG (continued)				ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 33

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00137A		* / /		PLUG (continued)				ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
D00137B		* / /		PLUG				ALL
I	A01		W1177	0116	22		34-21-11	ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08		W1177	5009R	24		34-21-11	ALL
	A09		W1177	5009B	24		34-21-11	ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13		W1177	5005R	24		34-21-11	ALL
	A14		W1177	5005B	24		34-21-11	ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 34

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00137B		* / /		PLUG (continued)				ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05		W1177	5002R	24		34-21-11	ALL
	C06		W1177	5002B	24		34-21-11	ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10		W1177	5003R	24		34-21-11	ALL
	C11		W1177	5003B	24		34-21-11	ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01		W1177	0010	22		34-21-11	ALL
	D02		W1177	0011	22		34-21-11	ALL
	D03		W1177	0012	22		34-21-11	ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05		W1177	5055R	24		34-21-11	ALL
	E06		W1177	5055B	24		34-21-11	ALL
	E07	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 35

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00137B		* / /		PLUG (continued)				ALL
	E08		W1177	0061	22		33-16-21	ALL
	E09		W1177	0013	22		22-21-11	ALL
	E10		W1177	0006	22		34-21-11	ALL
	E11		W1177	0005	22		34-21-11	ALL
	E12		W1177	0004	22		34-21-11	ALL
	E13		W1177	0003	22		34-21-11	ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01		W1177	0002	24		34-21-11	ALL
	F02		W1177	0001	24		34-21-11	ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07		W1177	5016R	24		34-21-11	ALL
	G08		W1177	5016B	24		34-21-11	ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 36

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00137B		* / /		PLUG (continued)				ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10		W1177	5001R	24		34-21-11	ALL
	J11		W1177	5001B	24		34-21-11	ALL
	J12	UNUSED						ALL
	J13		W1177	0055	24		34-21-11	ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03		W1177	0116	22		34-21-11	ALL
	K04		W1177	5008R	24		34-21-11	ALL
	K05		W1177	5008B	24		34-21-11	ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 37

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00137B		* / /		PLUG (continued)				ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
	DED		W1177	5001Z			34-21-11	ALL
	DED		W1177	5002Z			34-21-11	ALL
	DED		W1177	5003Z			34-21-11	ALL
	DED		W1177	5005Z			34-21-11	ALL
	DED		W1177	5008Z			34-21-11	ALL
	DED		W1177	5009Z			34-21-11	ALL
	DED		W1177	5016Z			34-21-11	ALL
	DED		W1177	5055Z			34-21-11	ALL
D00137C		* / /		PLUG				ALL
	1		W1177	0105	24		34-21-11	001-099
	1		W1179	0005	24		34-21-11	115-199
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W1177	0101	20		34-21-11	001-099
	5		W1179	0001	20		34-21-11	115-199
	6	UNUSED						ALL
	7		W1177	0104	14		34-21-11	001-099
	7		W1179	0004	14		34-21-11	115-199
	8		W1177	0102	14		34-21-11	001-099
	8		W1179	0002	14		34-21-11	115-199
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W1177	0103	16		34-21-11	001-099
	11		W1179	0003	16		34-21-11	115-199
	12	UNUSED						ALL
	13	UNUSED						ALL
	=C12	UNUSED						ALL
	=C13	UNUSED						ALL
D00139A		* / /		PLUG				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 38

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00139A		* / /		PLUG (continued)				ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 39

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00139A		* / /		PLUG (continued)				ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 40

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00139A		* / /		PLUG (continued)				ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 41

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00139A		* / /		PLUG (continued)				ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
D00139B		* / /		PLUG				ALL
I	A01		W1177	0122	22		34-21-31	ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08		W1177	5043R	24		34-21-31	ALL
	A09		W1177	5043B	24		34-21-31	ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13		W1177	5041R	24		34-21-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 42

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00139B		* / /		PLUG (continued)				ALL
	A14		W1177	5041B	24		34-21-31	ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05		W1177	5040R	24		34-21-31	ALL
	C06		W1177	5040B	24		34-21-31	ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10		W1177	5038R	24		34-21-31	ALL
	C11		W1177	5038B	24		34-21-31	ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01		W1177	0051	22		34-21-31	ALL
	D02		W1177	0052	22		34-21-31	ALL
	D03		W1177	0053	22		34-21-31	ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 43

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00139B		* / /		PLUG (continued)				ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05		W1177	5047R	24		34-21-31	ALL
	E06		W1177	5047B	24		34-21-31	ALL
	E07	UNUSED						ALL
	E08		W1177	0063	22		33-16-61	ALL
	E09		W1177	0054	22		22-21-11	ALL
	E10		W1177	0044	22		34-21-31	ALL
	E11		W1177	0043	22		34-21-31	ALL
	E12		W1177	0042	22		34-21-31	ALL
	E13		W1177	0041	22		34-21-31	ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01		W1177	0040	24		34-21-31	ALL
	F02		W1177	0039	24		34-21-31	ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 44

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00139B		* / /		PLUG (continued)				ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07		W1177	5044R	24		34-21-31	ALL
	G08		W1177	5044B	24		34-21-31	ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10		W1177	5037R	24		34-21-31	ALL
	J11		W1177	5037B	24		34-21-31	ALL
	J12	UNUSED						ALL
	J13		W1177	0038	24		34-21-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 45

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00139B		* / /		PLUG (continued)				ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03		W1177	0122	22		34-21-31	ALL
	K04		W1177	5042R	24		34-21-31	ALL
	K05		W1177	5042B	24		34-21-31	ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
	DED		W1177	5037Z			34-21-31	ALL
	DED		W1177	5038Z			34-21-31	ALL
	DED		W1177	5040Z			34-21-31	ALL
	DED		W1177	5041Z			34-21-31	ALL
	DED		W1177	5042Z			34-21-31	ALL
	DED		W1177	5043Z			34-21-31	ALL
	DED		W1177	5044Z			34-21-31	ALL
	DED		W1177	5047Z			34-21-31	ALL
D00139C		* / /		PLUG				ALL
	1		W1177	0072	20		34-21-31	001-099
	1		W1179	0015	24		34-21-31	115-199
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W1177	0114	20		34-21-31	001-099
	5		W1179	0014	20		34-21-31	115-199
	6	UNUSED						ALL
	7		W1177	0112	14		34-21-31	001-099
	7		W1179	0012	14		34-21-31	115-199
	8		W1177	0111	14		34-21-31	001-099
	8		W1179	0011	14		34-21-31	115-199
	9	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 46

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00139C		* / /		PLUG (continued)				ALL
	10	UNUSED						ALL
	11		W1177	0113	16		34-21-31	001-099
	11		W1179	0013	16		34-21-31	115-199
	12	UNUSED						ALL
	13	UNUSED						ALL
	=C12	UNUSED						ALL
	=C13	UNUSED						ALL
D00141A		* / /		PLUG				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 47

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00141A		* / /		PLUG (continued)				ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 48

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00141A		* / /		PLUG (continued)				ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 49

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00141A		* / /		PLUG (continued)				ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 50

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00141B		* / /		PLUG				ALL
I	A01		W1177	0119	22		34-21-21	ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08		W1177	5023R	24		34-21-21	ALL
	A09		W1177	5023B	24		34-21-21	ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13		W1177	5026R	24		34-21-21	ALL
	A14		W1177	5026B	24		34-21-21	ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05		W1177	5020R	24		34-21-21	ALL
	C06		W1177	5020B	24		34-21-21	ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10		W1177	5021R	24		34-21-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 51

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00141B		* / /		PLUG (continued)				ALL
	C11		W1177	5021B	24		34-21-21	ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01		W1177	0027	22		34-21-21	ALL
	D02		W1177	0028	22		34-21-21	ALL
	D03		W1177	0029	22		34-21-21	ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05		W1177	5060R	24		34-21-21	ALL
	E06		W1177	5060B	24		34-21-21	ALL
	E07	UNUSED						ALL
	E08		W1177	0062	22		33-16-31	ALL
	E09		W1177	0032	22		22-21-21	ALL
	E10		W1177	0025	22		34-21-21	ALL
	E11		W1177	0030	22		34-21-21	ALL
	E12		W1177	0023	22		34-21-21	ALL
	E13		W1177	0022	22		34-21-21	ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01		W1177	0021	24		34-21-21	ALL
	F02		W1177	0020	24		34-21-21	ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 52

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00141B		* / /		PLUG (continued)				ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07		W1177	5035R	24		34-21-21	ALL
	G08		W1177	5035B	24		34-21-21	ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 53

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00141B		* / /		PLUG (continued)				ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10		W1177	5019R	24		34-21-21	ALL
	J11		W1177	5019B	24		34-21-21	ALL
	J12	UNUSED						ALL
	J13		W1177	0034	24		34-21-21	ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03		W1177	0119	22		34-21-21	ALL
	K04		W1177	5024R	24		34-21-21	ALL
	K05		W1177	5024B	24		34-21-21	ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
	DED		W1177	5019Z			34-21-21	ALL
	DED		W1177	5020Z			34-21-21	ALL
	DED		W1177	5021Z			34-21-21	ALL
	DED		W1177	5023Z			34-21-21	ALL
	DED		W1177	5024Z			34-21-21	ALL
	DED		W1177	5026Z			34-21-21	ALL
	DED		W1177	5035Z			34-21-21	ALL
	DED		W1177	5060Z			34-21-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 54

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00141C		* / /		PLUG				ALL
	1		W1177	0110	20		34-21-21	001-099
	1		W1179	0010	24		34-21-21	115-199
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W1177	0109	20		34-21-21	001-099
	5		W1179	0009	20		34-21-21	115-199
	6	UNUSED						ALL
	7		W1177	0107	14		34-21-21	001-099
	7		W1179	0007	14		34-21-21	115-199
	8		W1177	0106	14		34-21-21	001-099
	8		W1179	0006	14		34-21-21	115-199
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W1177	0108	16		34-21-21	001-099
	11		W1179	0008	16		34-21-21	115-199
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
D00145		P006-00/ /		RELAY SOCKET-				ALL
	A1	UNUSED						ALL
	A2	UNUSED						ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2		W0060	0209	16		34-21-21	ALL
	B3		W0074	0201	16		34-21-21	001-099
	B3		W0074	0069	16		34-21-21	115-199
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0074	0013	20		34-21-11	001-099
	X1		W0074	0013	20		34-21-21	115-199
	X2		W0074	0017	20		34-21-11	001-099
	X2		W0074	0017	20		34-21-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 55

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00147		P005-00/ /		PLUG-				ALL
	1		W2221	0012	20		33-13-31	ALL
	2		W2221	0011	20		33-13-31	ALL
	3		W2221	0007	20		34-21-11	ALL
	4		W2221	0008	20		34-21-11	ALL
	5		W2221	0009	20		34-21-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W2221	0010	20		34-21-11	ALL
	9	UNUSED						ALL
	10		W2221	0015	22		33-16-12	ALL
	11		W2221	0016	22		33-16-12	ALL
	12		W2221	0002	24		34-21-11	ALL
	13		W2221	0001	24		34-21-11	ALL
	14		W2221	0003	22		34-21-11	ALL
	15		W2221	0004	22		34-21-11	ALL
	16		W2221	0005	22		34-21-11	ALL
	17		W2221	0006	22		34-21-11	ALL
	18		W2221	0014	22		33-16-12	ALL
	19		W2221	0017	24		21-58-11	ALL
	20		W2221	0018	24		21-58-11	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W2221	5002R	24		34-21-11	ALL
	25		W2221	5002B	24		34-21-11	ALL
	26		W2221	5001R	24		34-21-11	ALL
	27		W2221	5001B	24		34-21-11	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D00149		P005-00/ /		PLUG				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W2225	0007	20		34-21-31	ALL
	4		W2225	0008	20		34-21-31	ALL
	5		W2225	0009	20		34-21-31	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 56

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00149		P005-00/ /		PLUG (continued)				ALL
	8		W2225	0010	20		34-21-31	ALL
	9	UNUSED						ALL
	10		W2225	0016	22		33-16-32	ALL
	11		W2225	0015	22		33-16-32	ALL
	12		W2225	0002	24		34-21-31	ALL
	13		W2225	0001	24		34-21-31	ALL
	14		W2225	0003	22		34-21-31	ALL
	15		W2225	0004	22		34-21-31	ALL
	16		W2225	0005	22		34-21-31	ALL
	17		W2225	0006	22		34-21-31	ALL
	18		W2225	0014	22		33-16-62	ALL
	19		W2225	0011	24		21-58-11	ALL
	20		W2225	0012	24		21-58-11	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W2225	5002R	24		34-21-31	ALL
	25		W2225	5002B	24		34-21-31	ALL
	26		W2225	5001R	24		34-21-31	ALL
	27		W2225	5001B	24		34-21-31	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D00151		P005-00/ /		PLUG				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W2223	0006	20		34-21-21	ALL
	4		W2223	0007	20		34-21-21	ALL
	5		W2223	0008	20		34-21-21	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W2223	0010	20		34-21-21	ALL
	9	UNUSED						ALL
	10		W2223	0013	22		33-16-62	ALL
	11		W2223	0012	22		33-16-62	ALL
	12		W2223	0002	24		34-21-21	ALL
	13		W2223	0001	24		34-21-21	ALL
	14		W2223	0003	22		34-21-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 57

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00151		P005-00/ /		PLUG (continued)				ALL
	15		W2223	0004	22		34-21-21	ALL
	16		W2223	0009	22		34-21-21	ALL
	17		W2223	0005	22		34-21-21	ALL
	18		W2223	0011	22		33-16-32	ALL
	19		W2223	0015	24		21-58-11	ALL
	20		W2223	0016	24		21-58-11	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W2223	5002R	24		34-21-21	ALL
	25		W2223	5002B	24		34-21-21	ALL
	26		W2223	5001R	24		34-21-21	ALL
	27		W2223	5001B	24		34-21-21	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D00153		P51/ /		PLUG-				001-099
D00153		P051-00/ /		PLUG-				115-199
	1		W2193	0028	22		31-51-12	ALL
	2		W2193	0007	24		27-32-12	ALL
	3		W2193	0006	24		27-32-12	ALL
	4		W2193	0005	24		27-32-12	ALL
	5		W2193	0011	24		27-32-12	ALL
	6		W2193	0004	24		27-32-12	ALL
	7		W2193	0008	24		27-32-12	ALL
	8		W2193	0009	24		27-32-12	ALL
	9		W2193	0010	24		27-32-12	ALL
	10	UNUSED						ALL
	11		W2193	0029	22		31-51-11	ALL
	12		W2193	0016	24		27-32-22	ALL
	13		W2193	0015	24		27-32-22	ALL
	14		W2193	0014	24		27-32-22	ALL
	15		W2193	0020	24		27-32-22	ALL
	16		W2193	0013	24		27-32-22	ALL
	17		W2193	0017	24		27-32-22	ALL
	18		W2193	0018	24		27-32-22	ALL
	19		W2193	0019	24		27-32-22	ALL
	20	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 58

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00153		P51/ /		PLUG- (continued)				001-099
D00153		P051-00/ /		PLUG- (continued)				115-199
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W2193	0012	24		27-32-12	ALL
	25		W2193	0022	22		31-51-11	ALL
	26		W2193	0023	22		31-51-11	ALL
	27		W2193	0024	22		31-51-11	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34		W2193	0021	24		27-32-22	ALL
	35		W2193	0025	22		31-51-12	ALL
	36		W2193	0026	22		31-51-12	ALL
	37		W2193	0027	22		31-51-12	ALL
D00159A		215/170/R020		PLUG-				ALL
	A1	UNUSED						ALL
	C1	UNUSED						ALL
D00159B		215/170/R020		PLUG-				ALL
	A01	UNUSED						ALL
	A02	UNUSED						001, 003-099, 115-199
	A02		W2309	0077	22		34-43-14	002
	A03	UNUSED						001, 003-099, 115-199
	A03	VM	W2309	0078	22		34-43-14	002
	A04	UNUSED						001, 003-099, 115-199
	A04		W2309	0501	22		34-43-14	002
	A05	UNUSED						001, 003-099, 115-199
	A05	VM	W2309	5009R	22		34-43-14	002
	A06	UNUSED						001, 003-099, 115-199
	A06	VM	W2309	5009B	22		34-43-14	002
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10		W2309	3503R	22		34-43-12	ALL
	A11		W2309	3503B	22		34-43-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 59

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00159B		215/170/R020		PLUG- (continued)				ALL
	A12		W2309	3503Y	22		34-43-12	ALL
	A13		W2309	2503R	22		34-43-12	ALL
	A14		W2309	2503B	22		34-43-12	ALL
	A15		W2309	2505R	22		34-43-12	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03		W2309	5001R	24		34-43-11	ALL
	B04		W2309	5001B	24		34-43-11	ALL
	B05	UNUSED						ALL
	B06		W2309	0004	24		34-43-12	ALL
	B07		W2309	2506R	24		34-43-12	ALL
	B08		W2309	2506B	24		34-43-12	ALL
	B09	UNUSED						001, 003-099, 115-199
	B09		W2309	0074	22		34-43-14	002
	B10	UNUSED						001, 003-099, 115-199
	B10		W2309	0075	22		34-43-14	002
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						001, 003-099, 115-199
	B14		W2309	0073	22		34-43-14	002
	B15		W2309	2505B	22		34-43-12	ALL
	C01	UNUSED						001, 003-099, 115-199
	C01	VM	W2309	5006R	22		34-43-14	002
	C02	UNUSED						001, 003-099, 115-199
	C02	VM	W2309	5006B	22		34-43-14	002
	C03	UNUSED						001, 003-099, 115-199
	C03	VM	W2309	0080	22		34-43-14	002
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06		W2309	0001	24		34-43-12	ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10		W2309	3501R	22		34-43-12	ALL
	C11		W2309	3501B	22		34-43-12	ALL
	C12		W2309	3501Y	22		34-43-12	ALL
	C13		W2309	2501R	22		34-43-12	ALL
	C14		W2309	2501B	22		34-43-12	ALL
	C15	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 60

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00159B		215/170/R020		PLUG- (continued)				ALL
	D01	UNUSED						001, 003-099, 115-199
	D01		W2309	0070	22		34-43-14	002
	D02		W2309	5102W	24		34-43-11	ALL
	D03		W2309	5102B	24		34-43-11	ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06		W2309	0002	24		34-43-12	ALL
	D07		W2309	0003	24		34-43-12	ALL
	D08		W2309	0007	24		34-43-12	ALL
	D09	UNUSED						ALL
	D10	UNUSED						001, 003-099, 115-199
	D10		W2309	0087	22		34-43-14	002
	D11		W2309	0012	22		34-43-12	ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15		W2309	2504B	22		34-43-12	ALL
	E01	UNUSED						001, 003-099, 115-199
	E01		W2309	0088	22		34-43-14	002
	E02	UNUSED						001, 003-099, 115-199
	E02	VM	W2309	0076	22		34-43-14	002
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06		W2309	0005	24		34-43-12	ALL
	E07		W2309	0006	24		34-43-12	ALL
	E08	UNUSED						ALL
	E09	UNUSED						001, 003-099, 115-199
	E09		W2309	0089	22		34-43-14	002
	E10		W2309	3502R	22		34-43-12	ALL
	E11		W2309	3502B	22		34-43-12	ALL
	E12		W2309	3502Y	22		34-43-12	ALL
	E13		W2309	2502R	22		34-43-12	ALL
	E14		W2309	2502B	22		34-43-12	ALL
	E15		W2309	2504R	22		34-43-12	ALL
	F01	UNUSED						001, 003-099, 115-199
	F01		W2309	0091	22		34-43-15	002
	F02	UNUSED						001, 003-099, 115-199
	F02		W2309	0093	22		34-43-14	002
	F03	UNUSED						001, 009, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 61

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00159B		215/170/R020		PLUG- (continued)				ALL
	F03		W2309	0096	22		34-43-14	002
	F03		W2309	0035	24		34-43-12	003-008, 010-099
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						001, 009, 115-199
	F07		W2309	0079	22		34-43-14	002
	F07		W2309	0035	24		34-43-12	003-008, 010-099
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						001, 003-099, 115-199
	F14		W2309	0068	22		34-43-14	002
	F15	UNUSED						001, 003-099, 115-199
	F15		W2309	0072	22		34-43-14	002
	G01	UNUSED						001, 003-099, 115-199
	G01	VM	W2309	0035	22		34-43-14	002
	G02		W2309	5104W	24		34-43-11	ALL
	G03		W2309	5104B	24		34-43-11	ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12		W2309	5105R	24		34-43-11	ALL
	G13		W2309	5105B	24		34-43-11	ALL
	G14		W2309	0017	22		34-43-11	ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 62

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00159B		215/170/R020		PLUG- (continued)				ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						001, 003-099, 115-199
	J02		W2350	0103	22		34-43-14	002
	J03		W2309	5002R	24		34-43-11	ALL
	J04		W2309	5002B	24		34-43-11	ALL
	J05	UNUSED						001, 003-099, 115-199
	J05		W2309	5107R	22		34-43-15	002
	J06	UNUSED						001, 003-099, 115-199
	J06		W2309	5107B	22		34-43-15	002
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						001, 003-099, 115-199
	J09		W2309	5008R	22		34-43-14	002
	J10	UNUSED						001, 003-099, 115-199
	J10		W2309	5008B	22		34-43-14	002
	J11		W2309	5106R	24		34-43-11	ALL
	J12		W2309	5106B	24		34-43-11	ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						001, 003-099, 115-199
	K08		W2309	5010R	22		34-43-14	002
	K09	UNUSED						001, 003-099, 115-199
	K09		W2309	5010B	22		34-43-14	002

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 63

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00159B		215/170/R020		PLUG- (continued)				ALL
	K10	UNUSED						001, 003-099, 115-199
	K10		W2309	0084	22		34-43-14	002
	K11	UNUSED						001, 003-099, 115-199
	K11		W2309	5007R	22		34-43-14	002
	K12	UNUSED						001, 003-099, 115-199
	K12		W2309	5007B	22		34-43-14	002
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
	DED		W2309	5102Z			34-43-11	ALL
	DED		W2309	5104Z			34-43-11	ALL
	DED		W2309	5006Z			34-43-14	002
	DED		W2309	5009Z			34-43-14	002
			W2309	2501Z			34-43-12	ALL
			W2309	2502Z			34-43-12	ALL
			W2309	2503Z			34-43-12	ALL
			W2309	2504Z			34-43-12	ALL
			W2309	2505Z			34-43-12	ALL
			W2309	3501Z			34-43-12	ALL
			W2309	3502Z			34-43-12	ALL
			W2309	3503Z			34-43-12	ALL
			W2309	FRAA			34-43-12	ALL
			W2309	FRAB			34-43-12	ALL
			W2309	5007Z			34-43-14	002
			W2309	5008Z			34-43-14	002
			W2309	5010Z			34-43-14	002
			W2309	5107Z			34-43-15	002
			W2309	8000	20		34-43-15	002
			W2309	8001	20		34-43-14	002
			W2309	8002	20		34-43-14	002
			W2309	8003	20		34-43-14	002
D00159C		215/170/R020		PLUG-				ALL
	1	UNUSED						ALL
	2		W2309	0016	20		34-43-11	ALL
	3		W2309	0015	22		34-43-12	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W2309	0018	22		34-43-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 64

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00159C		215/170/R020		PLUG- (continued)				ALL
	8		W2309	0014	22		34-43-12	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W2309	0019	22		34-43-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	=C12	UNUSED						ALL
	=C13	UNUSED						ALL
D00163		P008-00/ /		PLUG-				ALL
	A		W2309	0008	20		34-43-12	ALL
	B	UNUSED						ALL
	C	UNUSED						ALL
	D		W2309	0007	24		34-43-12	ALL
	E	UNUSED						ALL
	F	UNUSED						ALL
	G		W2309	0009	24		34-43-12	ALL
	H	UNUSED						ALL
	J	UNUSED						ALL
	K		W2309	0001	24		34-43-12	ALL
	L		W2309	0002	24		34-43-12	ALL
	M		W2309	0003	24		34-43-12	ALL
	N	UNUSED						ALL
	P		W2309	0023	20		33-13-52	ALL
	R	UNUSED						ALL
	S	UNUSED						ALL
	T	UNUSED						ALL
	U		W2309	0005	24		34-43-12	ALL
	V		W2309	0004	24		34-43-12	ALL
	W	UNUSED						ALL
	X	UNUSED						ALL
	Y	UNUSED						ALL
	Z	UNUSED						ALL
			W2309	0038	20		34-43-12	ALL
			W2309	2506Z			34-43-12	ALL
	A-	UNUSED						ALL
	B-	UNUSED						ALL
	C-	UNUSED						ALL
	D-	UNUSED						ALL
	E-		W2309	0024	20		33-13-52	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 65

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00163		P008-00/ /		PLUG- (continued)				ALL
	F-	UNUSED	W2309	0006	24		34-43-12	ALL
	G-							ALL
	H-		W2309	2506R	24		34-43-12	ALL
	J-		W2309	2506B	24		34-43-12	ALL
D00167		196/200/L3		PLUG				ALL
	A	UNUSED	W2021	3502R	22		34-43-12	ALL
	B		W2021	3502B	22		34-43-12	ALL
	C		W2021	3502Y	22		34-43-12	ALL
	D		W2021	3501R	22		34-43-12	ALL
	E		W2021	3501B	22		34-43-12	ALL
	F		W2021	3501Y	22		34-43-12	ALL
	G		W2021	3503R	22		34-43-12	ALL
	H		W2021	3503B	22		34-43-12	ALL
	J		W2021	3503Y	22		34-43-12	ALL
	K							ALL
	L							ALL
	M							ALL
	N							ALL
	P							ALL
	R							ALL
	S							ALL
	T							ALL
	U							ALL
	V							ALL
	W	UNUSED	W2021	3502Z			34-43-12	ALL
	X		W2021	2504R	22		34-43-12	ALL
	Y		W2021	2504B	22		34-43-12	ALL
	Z							ALL
	AA	UNUSED						ALL
	BB		W2021	2502Z			34-43-12	ALL
	CC							ALL
	DD		W2021	2501Z			34-43-12	ALL
	EE	UNUSED	W2021	2503Z			34-43-12	ALL
	FF							ALL
	GG							ALL
	HH		W2021	0004	22		34-43-12	ALL
	CAP	Y	W2021	2506B	22		SPARE	ALL
	CAP	Y	W2021	2506R	22		SPARE	ALL
	DED		W2021	2506Z			SPARE	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 66

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00167		196/200/L3		PLUG (continued)				ALL
	PER		W2021	YAAA			34-43-12	ALL
	A-		W2021	3501Z			34-43-12	ALL
	B-	UNUSED						ALL
	C-	UNUSED						ALL
	D-		W2021	3503Z			34-43-12	ALL
	E-		W2021	2505R	22		34-43-12	ALL
	F-		W2021	2505B	22		34-43-12	ALL
	G-	UNUSED						ALL
	H-	UNUSED						ALL
	I-		W2021	0002	22		34-43-12	ALL
	J-	UNUSED						ALL
	K-	UNUSED						ALL
	M-	UNUSED						ALL
	N-		W2021	0003	20		34-43-12	ALL
	P-		W2021	2502R	22		34-43-12	ALL
	Q-		W2021	2502B	22		34-43-12	ALL
	R-		W2021	2504Z			34-43-12	ALL
	S-		W2021	2501R	22		34-43-12	ALL
	T-		W2021	2501B	22		34-43-12	ALL
	U-		W2021	2503R	22		34-43-12	ALL
	V-		W2021	2503B	22		34-43-12	ALL
	W-		W2021	2505Z			34-43-12	ALL
	X-	UNUSED						ALL
	Y-	UNUSED						ALL
	Z-		W2021	0001	22		34-43-12	ALL
D00169		1470/140/		PLUG-COAX				001-099
	= A1		W2619	001CX			23-12-31	001-099
	= C1		W2619	001CO			23-12-31	001-099
D00171		P009-00/ /		PLUG-				ALL
	1	UNUSED						ALL
	2		W2331	5001R	24		34-61-11	ALL
	3		W2331	5001B	24		34-61-11	ALL
	4	UNUSED						ALL
	5		W2331	5003R	24		34-61-11	ALL
	6		W2331	5003B	24		34-61-11	ALL
	7	UNUSED						ALL
	8		W2331	5002R	24		34-61-11	001-099
	8	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 67

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00171		P009-00/ /		PLUG- (continued)				ALL
	9		W2331	5002B	24		34-61-11	001-099
	9	UNUSED						115-199
	10		W2331	0010	24		34-61-11	001-099
	10	UNUSED						115-199
	11		W2331	0011	22		34-61-11	001-099
	11	UNUSED						115-199
	12	UNUSED						ALL
	13		W2331	0004	24		34-61-11	001-099
	13	UNUSED						115-199
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	VP	W2331	5006R	24		34-61-11	001-099
	16	UNUSED						115-199
	17	VP	W2331	5006B	24		34-61-11	001-099
	17	UNUSED						115-199
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						001-099
	21		W2331	0016	22		34-61-16	115-199
	22	UNUSED						ALL
	23		W2331	0007	22		33-16-51	001-099
	23	UNUSED						115-199
	24	UNUSED						ALL
	25		W2331	0003	20		34-61-11	001-099
	25		W2331	5002B	24		34-61-11	115-199
	26		W2331	0005	20		34-61-11	001-099
	26		W2331	5002R	24		34-61-11	115-199
	27		W2331	0006	22		33-16-51	001-099
	27	UNUSED						115-199
	28		W2331	0008	20		33-13-52	001-099
	28	UNUSED						115-199
	29		W2331	0009	20		33-13-52	001-099
	29	UNUSED						115-199
	30		W2331	0001	24		34-61-11	001-099
	30		W2331	0011	22		34-61-11	115-199
	31		W2331	0002	20		34-61-11	001-099
	31	UNUSED						115-199
	32	UNUSED						115-199
	33		W2331	0007	22		33-16-51	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 68

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00171		P009-00/ /		PLUG- (continued)				ALL
	34		W2331	0003	20		34-61-11	115-199
	35		W2331	0006	22		33-16-51	115-199
	36		W2331	0005	20		34-61-11	115-199
	37		W2331	0008	20		33-13-52	115-199
	38		W2331	0009	20		33-13-52	115-199
	39	UNUSED						115-199
	40		W2331	0001	24		34-61-11	115-199
	41		W2331	0002	20		34-61-11	115-199
	CAP	Y	W2331	0004	24		34-61-11	115-199
	CAP	Y	W2331	5004B	24		SPARE	115-199
	CAP	Y	W2331	5004R	24		SPARE	115-199
D00173A D00173A		E002-01/ / E2-1/ /		PLUG- PLUG-				001-099 115-199
	A01		W1171	5122R	24		34-61-12	ALL
	A02	UNUSED						ALL
	A03		W1171	5129R	24		34-61-12	ALL
	A04	UNUSED						ALL
	A05		W1171	5079R	24		34-61-14	ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09		W1171	5068R	24		34-61-11	ALL
	A10	UNUSED						ALL
	A11		W1171	5015R	24		34-61-15	ALL
	A12	UNUSED						ALL
	A13		W1171	5071R	24		34-61-11	ALL
	A14	UNUSED						ALL
	A15	UNUSED						001-099
	A15		W1171	5245R	22		34-58-21	115-199
	B01		W1171	5122B	24		34-61-12	ALL
	B02	UNUSED						ALL
	B03		W1171	5129B	24		34-61-12	ALL
	B04	UNUSED						ALL
	B05		W1171	5079B	24		34-61-14	ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09		W1171	5068B	24		34-61-11	ALL
	B10	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 69

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00173A		E002-01/ /		PLUG- (continued)				001-099
D00173A		E2-1/ /		PLUG- (continued)				115-199
	B11		W1171	5015B	24		34-61-15	ALL
	B12	UNUSED						ALL
	B13		W1171	5071B	24		34-61-11	ALL
	B14	UNUSED						ALL
	B15	UNUSED						001-099
	B15		W1171	5245B	22		34-58-21	115-199
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01		W1171	5125R	24		34-61-12	ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05		W1171	5077R	24		34-61-14	ALL
	D06	UNUSED						ALL
	D07		W1171	5121R	24		34-61-12	ALL
	D08	UNUSED						ALL
	D09		W1171	5080B	24		34-61-14	ALL
	D10	UNUSED						ALL
	D11		W1171	5087R	24		34-61-21	ALL
	D12	UNUSED						ALL
	D13		W1171	5066R	24		34-61-11	ALL
	D14	UNUSED						ALL
	D15		W1171	5126R	24		34-61-12	ALL
	E01		W1171	5125B	24		34-61-12	ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 70

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00173A		E002-01/ /		PLUG- (continued)				001-099
D00173A		E2-1/ /		PLUG- (continued)				115-199
	E04	UNUSED						ALL
	E05		W1171	5077B	24		34-61-14	ALL
	E06	UNUSED						ALL
	E07		W1171	5121B	24		34-61-12	ALL
	E08	UNUSED						ALL
	E09		W1171	5080R	24		34-61-14	ALL
	E10	UNUSED						ALL
	E11		W1171	5087B	24		34-61-21	ALL
	E12	UNUSED						ALL
	E13		W1171	5066B	24		34-61-11	ALL
	E14	UNUSED						ALL
	E15		W1171	5126B	24		34-61-12	ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09		W1171	0161	24		34-61-14	ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01		W1171	5119R	24		34-61-12	ALL
	G02	UNUSED						ALL
	G03		W1171	5076R	24		34-61-14	ALL
	G04	UNUSED						ALL
	G05		W1171	5120R	24		34-61-12	ALL
	G06	UNUSED						ALL
	G07		W1171	5078R	24		34-61-14	ALL
	G08	UNUSED						ALL
	G09		W1171	5082R	24		34-61-15	ALL
	G10	UNUSED						ALL
	G11		W1171	5081R	24		34-61-15	ALL
	G12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 71

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00173A		E002-01/ /		PLUG- (continued)				001-099
D00173A		E2-1/ /		PLUG- (continued)				115-199
	G13		W1171	5086R	24		34-61-21	ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01		W1171	5119B	24		34-61-12	ALL
	H02	UNUSED						ALL
	H03		W1171	5076B	24		34-61-14	ALL
	H04	UNUSED						ALL
	H05		W1171	5120B	24		34-61-12	ALL
	H06	UNUSED						ALL
	H07		W1171	5078B	24		34-61-14	ALL
	H08	UNUSED						ALL
	H09		W1171	5082B	24		34-61-15	ALL
	H10	UNUSED						ALL
	H11		W1171	5081B	24		34-61-15	ALL
	H12	UNUSED						ALL
	H13		W1171	5086B	24		34-61-21	ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13		W1171	0174	24		34-61-21	001-099
	J13	UNUSED						115-199
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01		W1171	0160	24		34-61-14	ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04		W1171	0096	22		34-61-14	ALL
	K05	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 72

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00173A		E002-01/ /		PLUG- (continued)				001-099
D00173A		E2-1/ /		PLUG- (continued)				115-199
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09		W1171	0135	24		34-61-13	ALL
	K10	UNUSED						ALL
	K11		W1171	0127	24		34-61-13	ALL
	K12	UNUSED						ALL
	K13		W1171	0166	22		34-61-15	ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
	CAP	Y	W1171	0174	24		34-61-21	115-199
	DED		W1171	5015Z			34-61-15	ALL
	DED		W1171	5066Z			34-61-11	ALL
	DED		W1171	5068Z			34-61-11	ALL
	DED		W1171	5071Z			34-61-11	ALL
	DED		W1171	5076Z			34-61-14	ALL
	DED		W1171	5077Z			34-61-14	ALL
	DED		W1171	5078Z			34-61-14	ALL
	DED		W1171	5079Z			34-61-14	ALL
	DED		W1171	5080Z			34-61-14	ALL
	DED		W1171	5081Z			34-61-15	ALL
	DED		W1171	5082Z			34-61-15	ALL
	DED		W1171	5086Z			34-61-21	ALL
	DED		W1171	5087Z			34-61-21	ALL
	DED		W1171	5119Z			34-61-12	ALL
	DED		W1171	5120Z			34-61-12	ALL
	DED		W1171	5121Z			34-61-12	ALL
	DED		W1171	5122Z			34-61-12	ALL
	DED		W1171	5125Z			34-61-12	ALL
	DED		W1171	5126Z			34-61-12	ALL
	DED		W1171	5129Z			34-61-12	ALL
	DED		W1171	5245Z			34-58-21	115-199
D00173B		E002-01/ /		PLUG-				001-099
D00173B		E2-1/ /		PLUG-				115-199
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03		W1171	5075R	24		34-61-13	ALL
	A04	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 73

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00173B		E002-01/ /		PLUG- (continued)				001-099
D00173B		E2-1/ /		PLUG- (continued)				115-199
	A05	UNUSED						001-099
	A05		W1171	5220R	22		34-61-14	115-199
	A06	UNUSED						ALL
	A07	UNUSED						001-099
	A07		W1171	5244R	22		34-58-11	115-199
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13		W1171	0129	22		34-61-13	ALL
	A14		W1171	0149	24		34-61-13	ALL
	A15		W1171	0131	24		34-61-13	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03		W1171	5075B	24		34-61-13	ALL
	B04	UNUSED						ALL
	B05	UNUSED						001-099
	B05		W1171	5220B	22		34-61-14	115-199
	B06	UNUSED						ALL
	B07	UNUSED						001-099
	B07		W1171	5244B	22		34-58-11	115-199
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13		W1171	0326	22		34-61-13	001-099
	B13	UNUSED						115-199
	B14		W1171	0137	24		34-61-13	ALL
	B15	UNUSED						001-010, 115-199
	B15		W1171	0385	22		34-61-13	011-099
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 74

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00173B		E002-01/ /		PLUG- (continued)				001-099
D00173B		E2-1/ /		PLUG- (continued)				115-199
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11		W1171	0381	22		34-61-14	ALL
	C12	UNUSED						ALL
	C13		W1171	0387	22		34-61-13	001, 009, 011-099
	C13	UNUSED						002-008, 010
	C13		W1171	0420	22		34-61-13	115-199
	C14		W1171	0139	24		34-61-13	ALL
	C15		W1171	0376	22		34-61-14	ALL
	D01		W1171	5072R	24		34-61-13	ALL
	D02	UNUSED						ALL
	D03		W1171	5061R	24		31-25-11	ALL
	D04	UNUSED						ALL
	D05		W1171	5074R	24		34-61-13	ALL
	D06	UNUSED						ALL
	D07		W1171	5083R	24		34-61-15	ALL
	D08	UNUSED						ALL
	D09		W1171	5208R	24		34-61-14	001-099
	D09		W1171	5208R	22		34-61-14	115-199
	D10	UNUSED						ALL
	D11		W1171	0155	22		34-61-14	ALL
	D12	UNUSED						ALL
	D13	UNUSED						001-010, 115-199
	D13		W1171	0386	22		34-61-13	011-099
	D14		W1171	0278	24		34-61-13	ALL
	D15		W1171	0377	22		34-61-14	ALL
	E01		W1171	5072B	24		34-61-13	ALL
	E02	UNUSED						ALL
	E03		W1171	5061B	24		31-25-11	ALL
	E04	UNUSED						ALL
	E05		W1171	5074B	24		34-61-13	ALL
	E06	UNUSED						ALL
	E07		W1171	5083B	24		34-61-15	ALL
	E08	UNUSED						ALL
	E09		W1171	5208B	24		34-61-14	001-099
	E09		W1171	5208B	22		34-61-14	115-199
	E10	UNUSED						ALL
	E11		W1171	0156	22		34-61-14	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 75

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00173B		E002-01/ /		PLUG- (continued)				001-099
D00173B		E2-1/ /		PLUG- (continued)				115-199
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14		W1171	0272	24		34-61-13	ALL
	E15		W1171	0378	22		34-61-14	ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06		W1171	0124	24		34-61-11	001-099
	F06	UNUSED						115-199
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11		W1171	0157	22		34-61-14	ALL
	F12	UNUSED						ALL
	F13		W1171	0151	24		34-61-13	ALL
	F14		W1171	0141	24		34-61-13	ALL
	F15		W1171	0379	22		34-61-14	ALL
	G01		W1171	5088R	24		34-61-21	ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07		W1171	5073R	24		34-61-13	ALL
	G08	UNUSED						ALL
	G09	UNUSED						001-099
	G09		W1171	5213R	22		34-61-26	115-199
	G10	UNUSED						ALL
	G11		W1171	0382	22		34-61-14	ALL
	G12	UNUSED						ALL
	G13		W1171	0143	24		34-61-13	ALL
	G14	UNUSED						ALL
	G15		W1171	0162	24		34-61-14	ALL
	H01		W1171	5088B	24		34-61-21	ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 76

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00173B		E002-01/ /		PLUG- (continued)				001-099
D00173B		E2-1/ /		PLUG- (continued)				115-199
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07		W1171	5073B	24		34-61-13	ALL
	H08	UNUSED						ALL
	H09	UNUSED						001-099
	H09		W1171	5213B	22		34-61-26	115-199
	H10	UNUSED						ALL
	H11		W1171	0383	22		34-61-14	ALL
	H12	UNUSED						ALL
	H13		W1171	0274	24		34-61-13	ALL
	H14		W1171	0276	24		34-61-13	ALL
	H15	UNUSED						001-010, 115-199
	H15		W1171	0505	22		34-61-14	011-099
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						001-099
	J09		W1171	0724	24		34-61-18	115-199
	J10	UNUSED						ALL
	J11	UNUSED						001-010, 115-199
	J11		W1171	0506	22		34-61-14	011-099
	J12	UNUSED						ALL
	J13		W1171	0147	24		34-61-13	ALL
	J14		W1171	0145	24		34-61-13	ALL
	J15		W1171	0599	22		34-61-13	001-099
	J15	UNUSED						115-199
	K01		W1171	0154	22		34-61-14	ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05		W1171	0152	22		34-61-14	ALL
	K06	UNUSED						ALL
	K07		W1171	0170	24		34-61-15	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 77

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00173B		E002-01/ /		PLUG- (continued)				001-099
D00173B		E2-1/ /		PLUG- (continued)				115-199
I	K08	UNUSED						ALL
I	K09	UNUSED						001-099
	K09		W1171	0725	24		34-61-18	115-199
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						001-010, 115-199
I	K13		W1171	0546	24		34-61-13	011-099
I	K14	UNUSED						001-099
	K14		W1171	0550	22		34-61-13	115-199
	K15	UNUSED						001-010, 115-199
	K15		W1171	0437	22		34-61-14	011-099
I	CAP	Y	W1171	0124	24		34-61-11	115-199
I	DED		W1171	5061Z			31-25-11	ALL
I	DED		W1171	5072Z			34-61-13	ALL
I	DED		W1171	5073Z			34-61-13	ALL
I	DED		W1171	5074Z			34-61-13	ALL
I	DED		W1171	5075Z			34-61-13	ALL
I	DED		W1171	5083Z			34-61-15	ALL
I	DED		W1171	5088Z			34-61-21	ALL
I	DED		W1171	5208Z			34-61-14	ALL
I	DED		W1171	5213Z			34-61-26	115-199
I	DED		W1171	5220Z			34-61-14	115-199
I	DED		W1171	5244Z			34-58-11	115-199
D00173C		E002-01/ /		PLUG-				001-099
D00173C		E2-1/ /		PLUG-				115-199
	1		W1171	0119	22		34-61-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1171	0120	20		34-61-11	ALL
	8		W1171	0121	20		34-61-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 78

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00173C		E002-01/ /		PLUG- (continued)				001-099
D00173C		E2-1/ /		PLUG- (continued)				115-199
	13	UNUSED						ALL
	=C12	UNUSED						ALL
	=C13	UNUSED						ALL
I D00175		P009-00/ /		PLUG-				001-099
I D00175		P009-00/ /		PLUG- (34-0414)				115-199
	1	UNUSED						ALL
	2		W2333	5001R	24		34-61-21	ALL
	3		W2333	5001B	24		34-61-21	ALL
	4	UNUSED						ALL
	5		W2333	5003R	24		34-61-21	ALL
	6		W2333	5003B	24		34-61-21	ALL
	7	UNUSED						ALL
I	8		W2333	5002R	24		34-61-21	001-099
I	8	UNUSED						115-199
I	9		W2333	5002B	24		34-61-21	001-099
I	9	UNUSED						115-199
I	10		W2333	0010	24		34-61-21	001-099
I	10	UNUSED						115-199
	11	UNUSED						ALL
I	12		W2333	0011	22		34-61-21	001-099
I	12	UNUSED						115-199
I	13		W2333	0005	24		34-61-21	001-099
I	13	UNUSED						115-199
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	VP	W2333	5006R	24		34-61-21	001-099
	16	UNUSED						115-199
	17	VP	W2333	5006B	24		34-61-21	001-099
	17	UNUSED						115-199
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
I	23		W2333	0006	22		33-16-41	001-099
I	23	UNUSED						115-199
	24	UNUSED						ALL
I	25		W2333	0004	20		34-61-21	001-099

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 79

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00175		P009-00/ /		PLUG- (continued)				001-099
D00175		P009-00/ /		PLUG- (34-0414) (continued)				115-199
	25	UNUSED						115-199
	26		W2333	0003	20		34-61-21	001-099
	26	UNUSED						115-199
	27		W2333	0007	22		33-16-31	001-099
	27		W2333	5002R	24		34-61-21	115-199
	28		W2333	0008	20		33-13-51	001-099
	28		W2333	5002B	24		34-61-21	115-199
	29		W2333	0009	20		33-13-51	001-099
	29		W2333	0010	24		34-61-26	115-199
	30		W2333	0001	24		34-61-21	001-099
	30	UNUSED						115-199
	31		W2333	0002	20		34-61-21	001-099
	31		W2333	0011	22		34-61-21	115-199
	32	UNUSED						115-199
	33		W2333	0006	22		33-16-41	115-199
	34		W2333	0004	20		34-61-21	115-199
	35		W2333	0007	22		33-16-31	115-199
	36		W2333	0003	20		34-61-21	115-199
	37		W2333	0008	20		33-13-51	115-199
	38		W2333	0009	20		33-13-51	115-199
	39	UNUSED						115-199
	40		W2333	0001	24		34-61-21	115-199
	41		W2333	0002	20		34-61-21	115-199
	CAP	Y	W2333	0005	24		34-61-21	115-199
	CAP	Y	W2333	5004B	24		SPARE	115-199
	CAP	Y	W2333	5004R	24		SPARE	115-199
	DED		W2333	5004Z			SPARE	115-199
D00177A		E002-02/ /		PLUG-				001-099
D00177A		E2-2/ /		PLUG-				115-199
	A01		W1173	5112R	24		34-61-23	ALL
	A02	UNUSED						ALL
	A03		W1173	5115R	24		34-61-23	ALL
	A04	UNUSED						ALL
	A05		W1173	5009R	24		34-61-24	ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09		W1173	5108R	24		34-61-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 80

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00177A		E002-02/ /		PLUG- (continued)				001-099
D00177A		E2-2/ /		PLUG- (continued)				115-199
	A10	UNUSED						ALL
	A11		W1173	5003R	24		34-61-25	ALL
	A12	UNUSED						ALL
	A13		W1173	5111R	24		34-61-21	ALL
	A14	UNUSED						ALL
	A15	UNUSED						001-099
	A15		W1173	5194R	22		34-58-21	115-199
	B01		W1173	5112B	24		34-61-23	ALL
	B02	UNUSED						ALL
	B03		W1173	5115B	24		34-61-23	ALL
	B04	UNUSED						ALL
	B05		W1173	5009B	24		34-61-24	ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09		W1173	5108B	24		34-61-21	ALL
	B10	UNUSED						ALL
	B11		W1173	5003B	24		34-61-25	ALL
	B12	UNUSED						ALL
	B13		W1173	5111B	24		34-61-21	ALL
	B14	UNUSED						ALL
	B15	UNUSED						001-099
	B15		W1173	5194B	22		34-58-21	115-199
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01		W1173	5113R	24		34-61-23	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 81

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00177A		E002-02/ /		PLUG- (continued)				001-099
D00177A		E2-2/ /		PLUG- (continued)				115-199
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05		W1173	5055R	24		34-61-24	ALL
	D06	UNUSED						ALL
	D07		W1173	5114R	24		34-61-23	ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11		W1173	5034R	24		34-61-11	ALL
	D12	UNUSED						ALL
	D13		W1173	5106R	24		34-61-21	ALL
	D14	UNUSED						ALL
	D15		W1173	5047R	24		34-61-22	ALL
	E01		W1173	5113B	24		34-61-23	ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05		W1173	5055B	24		34-61-24	ALL
	E06	UNUSED						ALL
	E07		W1173	5114B	24		34-61-23	ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11		W1173	5034B	24		34-61-11	ALL
	E12	UNUSED						ALL
	E13		W1173	5106B	24		34-61-21	ALL
	E14	UNUSED						ALL
	E15		W1173	5047B	24		34-61-22	ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09		W1173	0230	24		34-61-24	ALL
	F10	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 82

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00177A		E002-02/ /		PLUG- (continued)				001-099
D00177A		E2-2/ /		PLUG- (continued)				115-199
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01		W1173	5014R	24		34-61-22	ALL
	G02	UNUSED						ALL
	G03		W1173	5142R	24		34-61-24	ALL
	G04	UNUSED						ALL
	G05		W1173	5046R	24		34-61-22	ALL
	G06	UNUSED						ALL
	G07		W1173	5051R	24		34-61-24	ALL
	G08	UNUSED						ALL
	G09		W1173	5059R	24		34-61-25	ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13		W1173	5033R	24		34-61-11	ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01		W1173	5014B	24		34-61-22	ALL
	H02	UNUSED						ALL
	H03		W1173	5142B	24		34-61-24	ALL
	H04	UNUSED						ALL
	H05		W1173	5046B	24		34-61-22	ALL
	H06	UNUSED						ALL
	H07		W1173	5051B	24		34-61-24	ALL
	H08	UNUSED						ALL
	H09		W1173	5059B	24		34-61-25	ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13		W1173	5033B	24		34-61-11	ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 83

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00177A		E002-02/ /		PLUG- (continued)				001-099
D00177A		E2-2/ /		PLUG- (continued)				115-199
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13		W1173	0043	24		34-61-11	ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01		W1173	0229	24		34-61-24	ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04		W1173	0339	22		34-61-24	ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07		W1173	0212	22		34-61-24	ALL
	K08	UNUSED						ALL
	K09		W1173	0051	24		34-61-23	ALL
	K10	UNUSED						ALL
	K11		W1173	0045	24		34-61-23	ALL
	K12	UNUSED						ALL
	K13		W1173	0063	24		34-61-25	ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
	DED		W1173	5003Z			34-61-25	ALL
	DED		W1173	5009Z			34-61-24	ALL
	DED		W1173	5014Z			34-61-22	ALL
	DED		W1173	5033Z			34-61-11	ALL
	DED		W1173	5034Z			34-61-11	ALL
	DED		W1173	5046Z			34-61-22	ALL
	DED		W1173	5047Z			34-61-22	ALL
	DED		W1173	5051Z			34-61-24	ALL
	DED		W1173	5055Z			34-61-24	ALL
	DED		W1173	5059Z			34-61-25	ALL
	DED		W1173	5106Z			34-61-21	ALL
	DED		W1173	5108Z			34-61-21	ALL
	DED		W1173	5111Z			34-61-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 84

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00177A		E002-02/ /		PLUG- (continued)				001-099
D00177A		E2-2/ /		PLUG- (continued)				115-199
	DED		W1173	5112Z			34-61-23	ALL
	DED		W1173	5113Z			34-61-23	ALL
	DED		W1173	5114Z			34-61-23	ALL
	DED		W1173	5115Z			34-61-23	ALL
	DED		W1173	5142Z			34-61-24	ALL
	DED		W1173	5194Z			34-58-21	115-199
D00177B		E002-02/ /		PLUG-				001-099
D00177B		E2-2/ /		PLUG-				115-199
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03		W1173	5044R	24		34-61-22	ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						001-099
	A07		W1173	5193R	22		34-58-11	115-199
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13		W1173	0050	22		34-61-23	ALL
	A14		W1173	0058	24		34-61-23	ALL
	A15		W1173	0049	22		34-61-23	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03		W1173	5044B	24		34-61-22	ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						001-099
	B07		W1173	5193B	22		34-58-11	115-199
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13		W1173	0331	22		34-61-23	001-099

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 85

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00177B		E002-02/ /		PLUG- (continued)				001-099
D00177B		E2-2/ /		PLUG- (continued)				115-199
	B13		W1173	0194	22		34-61-23	115-199
	B14		W1173	0052	24		34-61-23	ALL
	B15	UNUSED						001-010, 115-199
	B15		W1173	0350	22		34-61-23	011-099
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11		W1173	0341	22		34-61-24	ALL
	C12	UNUSED						ALL
	C13		W1173	0383	22		34-61-23	001, 011-099, 115-199
	C13	UNUSED						002-008, 010
	C13		W1173	0387	22		34-61-23	009
	C14		W1173	0053	24		34-61-23	ALL
	C15		W1173	0344	22		34-61-24	ALL
	D01		W1173	5038R	24		34-61-22	ALL
	D02	UNUSED						ALL
	D03		W1173	5116R	24		31-25-11	ALL
	D04	UNUSED						ALL
	D05		W1173	5049R	24		34-61-22	ALL
	D06	UNUSED						ALL
	D07		W1173	5074R	24		34-61-25	ALL
	D08	UNUSED						ALL
	D09		W1173	5212R	24		34-61-24	001-099
	D09	UNUSED						115-199
	D10	UNUSED						ALL
	D11		W1173	0209	22		34-61-24	ALL
	D12	UNUSED						ALL
	D13	UNUSED						001-010, 115-199
	D13		W1173	0349	22		34-61-23	011-099
	D14		W1173	0227	24		34-61-23	ALL
	D15		W1173	0346	22		34-61-24	ALL
	E01		W1173	5038B	24		34-61-22	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 86

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00177B		E002-02/ /		PLUG- (continued)				001-099
D00177B		E2-2/ /		PLUG- (continued)				115-199
	E02	UNUSED						ALL
	E03		W1173	5116B	24		31-25-11	ALL
	E04	UNUSED						ALL
	E05		W1173	5049B	24		34-61-22	ALL
	E06	UNUSED						ALL
	E07		W1173	5074B	24		34-61-25	ALL
	E08	UNUSED						ALL
	E09		W1173	5212B	24		34-61-24	001-099
	E09	UNUSED						115-199
	E10	UNUSED						ALL
	E11		W1173	0210	22		34-61-24	ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14		W1173	0226	24		34-61-23	ALL
	E15		W1173	0347	22		34-61-24	ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06		W1173	0205	24		34-61-21	ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11		W1173	0211	22		34-61-24	ALL
	F12	UNUSED						ALL
	F13		W1173	0059	24		34-61-23	ALL
	F14		W1173	0054	24		34-61-23	ALL
	F15		W1173	0348	22		34-61-24	ALL
	G01		W1173	5035R	24		34-61-11	ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07		W1173	5041R	24		34-61-22	ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 87

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00177B		E002-02/ /		PLUG- (continued)				001-099
D00177B		E2-2/ /		PLUG- (continued)				115-199
	G10	UNUSED						ALL
	G11		W1173	0342	22		34-61-24	ALL
	G12	UNUSED						ALL
	G13		W1173	0055	24		34-61-23	ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01		W1173	5035B	24		34-61-11	ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07		W1173	5041B	24		34-61-22	ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11		W1173	0343	22		34-61-24	ALL
	H12	UNUSED						ALL
	H13		W1173	0228	24		34-61-23	ALL
	H14		W1173	0231	24		34-61-23	ALL
	H15	UNUSED						001-010, 115-199
	H15		W1173	0501	22		34-61-24	011-099
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						001-010, 115-199
	J11		W1173	0502	22		34-61-24	011-099
	J12	UNUSED						ALL
	J13		W1173	0057	24		34-61-23	ALL
	J14		W1173	0056	24		34-61-23	ALL
	J15		W1173	0599	22		34-61-23	001-010
	J15		W1173	0768	22		34-61-23	011-099

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 88

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00177B		E002-02/ /		PLUG- (continued)				001-099
D00177B		E2-2/ /		PLUG- (continued)				115-199
	J15	UNUSED						115-199
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03		W1173	0208	22		34-61-24	ALL
	K04	UNUSED						ALL
	K05		W1173	0207	22		34-61-24	ALL
	K06	UNUSED						ALL
	K07		W1173	0064	24		34-61-25	ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						001-010, 115-199
	K13		W1173	0544	22		34-61-23	011-099
	K14	UNUSED						ALL
	K15	UNUSED						001-010, 115-199
	K15		W1173	0398	22		34-61-24	011-099
	DED		W1173	5212Z			34-61-24	001-099
	DED		W1173	5035Z			34-61-11	ALL
	DED		W1173	5038Z			34-61-22	ALL
	DED		W1173	5041Z			34-61-22	ALL
	DED		W1173	5044Z			34-61-22	ALL
	DED		W1173	5049Z			34-61-22	ALL
	DED		W1173	5074Z			34-61-25	ALL
	DED		W1173	5116Z			31-25-11	ALL
	DED		W1173	5193Z			34-58-11	115-199
D00177C		E002-02/ /		PLUG-				001-099
D00177C		E2-2/ /		PLUG-				115-199
	1		W1173	0200	22		34-61-21	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1173	0202	20		34-61-21	ALL
	8		W1173	0203	20		34-61-21	ALL
	9	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 89

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00177C		E002-02/ /		PLUG- (continued)				001-099
D00177C		E2-2/ /		PLUG- (continued)				115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	=C12	UNUSED						ALL
	=C13	UNUSED						ALL
D00183		P003-01/ /		PLUG				001-099
	1		W0001	0079	20		33-13-11	001-099
	2		W0001	0088	20		33-13-11	001-099
	3		W0001	0407	20		34-22-81	001-099
	4	UNUSED						001-099
	5	UNUSED						001-099
	6		W0001	0408	20		34-22-81	001-099
	7	UNUSED						001-099
	8	UNUSED						001-099
	9		W0001	5035R	24		34-22-81	001-099
	10		W0001	5035B	24		34-22-81	001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
	13		W0001	5033R	24		34-22-81	001-099
	14		W0001	5033B	24		34-22-81	001-099
	15	UNUSED						001-099
	16		W0001	0405	24		34-22-81	001-099
	17		W0001	0492	22		34-22-36	001-099
	18		W0001	5038R	24		34-22-81	001-099
	19		W0001	5038B	24		34-22-81	001-099
	20	UNUSED						001-099
	21		W0001	0410	24		34-22-81	001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
	25	UNUSED						001-099
	26	UNUSED						001-099
	27	UNUSED						001-099
	28		W0001	0411	20		34-22-81	001-099
	29		W0001	0409	24		34-22-81	001-099
	30	UNUSED						001-099
	31		W0001	5050R	24		34-22-81	001-099

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 90

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00183		P003-01/ /		PLUG (continued)				001-099
	32		W0001	5050B	24		34-22-81	001-099
	33	UNUSED						001-099
	34	UNUSED						001-099
	35	UNUSED						001-099
	36	UNUSED						001-099
	37	UNUSED						001-099
	38		W0001	5036R	24		34-22-81	001-099
	39		W0001	5036B	24		34-22-81	001-099
	40	UNUSED						001-099
	41		W0001	5032R	24		34-22-81	001-099
	42		W0001	5032B	24		34-22-81	001-099
	43	UNUSED						001-099
	44		W0001	5039R	24		34-22-81	001-099
	45		W0001	5039B	24		34-22-81	001-099
	46	UNUSED						001-099
	47	UNUSED						001-099
	48		W0001	5034R	24		34-22-81	001-099
	49		W0001	5034B	24		34-22-81	001-099
	50	UNUSED						001-099
	51	UNUSED						001-099
	52	UNUSED						001-099
	53	UNUSED						001-099
	54		W0001	0304	24		34-22-81	001-099
	55		W0001	0345	20		34-22-81	001-099
	DED		W0001	5032Z			34-22-81	001-099
	DED		W0001	5033Z			34-22-81	001-099
	DED		W0001	5034Z			34-22-81	001-099
	DED		W0001	5035Z			34-22-81	001-099
	DED		W0001	5036Z			34-22-81	001-099
	DED		W0001	5038Z			34-22-81	001-099
	DED		W0001	5039Z			34-22-81	001-099
	DED		W0001	5050Z			34-22-81	001-099
D00185		P3-1/ /		PLUG				001-099
	1		W0003	0166	20		33-13-21	001-099
	2		W0003	0183	20		33-13-21	001-099
	3		W0003	0025	20		34-22-91	001-099
	4	UNUSED						001-099
	5	UNUSED						001-099
	6		W0003	0026	20		34-22-91	001-099

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 91

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00185		P3-1/ /		PLUG (continued)				001-099
	7	UNUSED						001-099
	8	UNUSED						001-099
	9		W0003	5010R	24		34-22-91	001-099
	10		W0003	5010B	24		34-22-91	001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
	13		W0003	5011R	24		34-22-91	001-099
	14		W0003	5011B	24		34-22-91	001-099
	15	UNUSED						001-099
	16		W0003	0027	24		34-22-91	001-099
	17		W0003	0492	22		34-22-36	001-099
	18		W0003	5008R	24		34-22-91	001-099
	19		W0003	5008B	24		34-22-91	001-099
	20	UNUSED						001-099
	21		W0003	0070	24		34-22-81	001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
	25	UNUSED						001-099
	26	UNUSED						001-099
	27	UNUSED						001-099
	28		W0003	0028	20		34-22-91	001-099
	29		W0003	0069	24		34-22-81	001-099
	30	UNUSED						001-099
	31		W0003	5050R	24		34-22-91	001-099
	32		W0003	5050B	24		34-22-91	001-099
	33	UNUSED						001-099
	34	UNUSED						001-099
	35	UNUSED						001-099
	36	UNUSED						001-099
	37	UNUSED						001-099
	38		W0003	5007R	24		34-22-91	001-099
	39		W0003	5007B	24		34-22-91	001-099
	40	UNUSED						001-099
	41		W0003	5027R	24		34-22-91	001-099
	42		W0003	5027B	24		34-22-91	001-099
	43	UNUSED						001-099
	44		W0003	5009R	24		34-22-91	001-099
	45		W0003	5009B	24		34-22-91	001-099
	46	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 92

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00185		P3-1/ /		PLUG (continued)				001-099
	47	UNUSED						001-099
	48		W0003	5013R	24		34-22-91	001-099
	49		W0003	5013B	24		34-22-91	001-099
	50	UNUSED						001-099
	51	UNUSED						001-099
	52	UNUSED						001-099
	53	UNUSED						001-099
	54		W0003	0304	24		34-22-91	001-099
	55		W0003	0345	20		34-22-91	001-099
	DED		W0003	5007Z			34-22-91	001-099
	DED		W0003	5008Z			34-22-91	001-099
	DED		W0003	5009Z			34-22-91	001-099
	DED		W0003	5010Z			34-22-91	001-099
	DED		W0003	5011Z			34-22-91	001-099
	DED		W0003	5013Z			34-22-91	001-099
	DED		W0003	5027Z			34-22-91	001-099
	DED		W0003	5050Z			34-22-91	001-099
D00187		P1-3/ /		PLUG				001-099
D00187		P001-3/ /		PLUG				115-199
	1		W0001	0106	20		33-13-11	ALL
	2		W0001	0107	20		33-13-11	ALL
	3		W0001	0412	22		34-22-82	001-099
	3		W0001	0412	24		34-22-82	115-199
	4		W0001	0413	20		34-22-82	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0001	0414	20		34-22-82	ALL
	8		W0001	0417	24		34-22-82	ALL
	9	UNUSED						ALL
	10		W0001	0415	20		34-22-82	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 93

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00187		P1-3/ /		PLUG (continued)				001-099
D00187		P001-3/ /		PLUG (continued)				115-199
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W0001	5028R	24		34-22-82	ALL
	29		W0001	5028B	24		34-22-82	ALL
	30		W0001	5029R	24		34-22-82	ALL
	31		W0001	5029B	24		34-22-82	ALL
	DED		W0001	5028Z			34-22-82	ALL
	DED		W0001	5029Z			34-22-82	ALL
D00188		P063-00/ /		PLUG-				ALL
	1	UNUSED						ALL
	2		W3052	0013	18		33-42-21	ALL
	3		W3052	0010	18		33-42-21	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W3052	0012	20		33-42-21	ALL
	8		W3052	0014	18		33-42-21	ALL
D00189		P3-3/ /		PLUG				ALL
	1		W0003	0264	20		33-13-21	ALL
	2		W0003	0265	20		33-13-21	ALL
	3		W0003	0029	22		34-22-92	ALL
	4		W0003	0030	20		34-22-92	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0003	0031	20		34-22-92	ALL
	8		W0003	0033	24		34-22-92	ALL
	9	UNUSED						ALL
	10		W0003	0032	20		34-22-92	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 94

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00189		P3-3/ /		PLUG (continued)				ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W0003	5015R	24		34-22-92	ALL
	29		W0003	5015B	24		34-22-92	ALL
	30		W0003	5028R	24		34-22-92	ALL
	31		W0003	5028B	24		34-22-92	ALL
	DED		W0003	5015Z			34-22-92	ALL
	DED		W0003	5028Z			34-22-92	ALL
D00190		P62/ /		PLUG-				ALL
	1	UNUSED						ALL
	2		W3054	0021	16		33-42-21	ALL
	3		W3054	0025	16		33-42-21	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W3054	0020	20		33-42-21	ALL
	8		W3054	0022	16		33-42-21	ALL
D00191		199/173/L003		PLUG				ALL
	=A1		W2261	001CX			34-31-11	ALL
	=C1		W2261	001CO			34-31-11	ALL
D00193		199/185/L003		ANGLE PLUG				ALL
	=A1		W2301	001CX			34-31-11	ALL
	=C1		W2301	001CO			34-31-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 95

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00195		199/171/R003		PLUG				ALL
	= A1		W2263	001CX			34-31-21	ALL
	= C1		W2263	001CO			34-31-21	ALL
D00197		199/165/R3		ANGLE PLUG				ALL
	= A1		W2303	001CX			34-31-21	ALL
	= C1		W2303	001CO			34-31-21	ALL
D00199		132/ /		PLUG				ALL
	= A1		W2273	001CX			34-31-31	ALL
	= C1		W2273	001CO			34-31-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00100

Page 96 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00201		199/170/L003		ANGLE PLUG				ALL
	= A1		W2305	001CX			34-31-31	ALL
	= C1		W2305	001CO			34-31-31	ALL
D00203A		E002-03/ /		PLUG-				001-099
	A01	UNUSED						001-099
	A02	UNUSED						001-099
	A03	UNUSED						001-099
	A04	UNUSED						001-099
	A05	UNUSED						001-099
	A06	UNUSED						001-099
	A07	UNUSED						001-099
	A08	UNUSED						001-099
	A09	UNUSED						001-099
	A10	UNUSED						001-099
	A11	UNUSED						001-099
	A12	UNUSED						001-099
	A13	UNUSED						001-099
	A14	UNUSED						001-099
	A15	UNUSED						001-099
	B01	UNUSED						001-099
	B02	UNUSED						001-099
	B03	UNUSED						001-099
	B04	UNUSED						001-099
	B05	UNUSED						001-099
	B06	UNUSED						001-099
	B07	UNUSED						001-099
	B08	UNUSED						001-099
	B09	UNUSED						001-099
	B10	UNUSED						001-099
	B11	UNUSED						001-099
	B12	UNUSED						001-099
	B13	UNUSED						001-099
	B14	UNUSED						001-099
	B15	UNUSED						001-099
	C01	UNUSED						001-099
	C02	UNUSED						001-099
	C03	UNUSED						001-099
	C04	UNUSED						001-099
	C05	UNUSED						001-099
	C06	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00203A		E002-03/ /		PLUG- (continued)				001-099
	C07	UNUSED						001-099
	C08	UNUSED						001-099
	C09	UNUSED						001-099
	C10	UNUSED						001-099
	C11	UNUSED						001-099
	C12	UNUSED						001-099
	C13	UNUSED						001-099
	C14	UNUSED						001-099
	C15	UNUSED						001-099
	D01	UNUSED						001-099
	D02	UNUSED						001-099
	D03	UNUSED						001-099
	D04	UNUSED						001-099
	D05	UNUSED						001-099
	D06	UNUSED						001-099
	D07	UNUSED						001-099
	D08	UNUSED						001-099
	D09	UNUSED						001-099
	D10	UNUSED						001-099
	D11	UNUSED						001-099
	D12	UNUSED						001-099
	D13	UNUSED						001-099
	D14	UNUSED						001-099
	D15	UNUSED						001-099
D00203B		E002-03/ /		PLUG-				001-099
	A01		W1175	2539R	24		23-51-13	001-099
	A02	UNUSED						001-099
	A03	UNUSED						001-099
	A04	UNUSED						001-099
	A05	UNUSED						001-099
	A06	UNUSED						001-099
	A07	UNUSED						001-099
	A08	UNUSED						001-099
	A09	UNUSED						001-099
	A10	UNUSED						001-099
	A11	UNUSED						001-099
	A12	UNUSED						001-099
	A13	UNUSED						001-099
	A14	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00203B		E002-03/ /		PLUG- (continued)				001-099
	A15	UNUSED						001-099
	B01		W1175	2539B	24		23-51-13	001-099
	B02	UNUSED						001-099
	B03		W1175	0419	24		34-31-11	001-099
	B04	UNUSED						001-099
	B05		W1175	0420	24		34-31-11	001-099
	B06	UNUSED						001-099
	B07		W1175	5110R	24		22-13-11	001-099
	B08	UNUSED						001-099
	B09	UNUSED						001-099
	B10	UNUSED						001-099
	B11		W1175	5114R	24		34-31-11	001-099
	B12	UNUSED						001-099
	B13		W1175	5112R	24		34-31-11	001-099
	B14	UNUSED						001-099
	B15		W1175	2018R	22		34-31-11	001-099
	C01		W1175	0428	22		22-13-11	001-099
	C02	UNUSED						001-099
	C03		W1175	0419	24		34-31-11	001-099
	C04	UNUSED						001-099
	C05		W1175	0420	24		34-31-11	001-099
	C06	UNUSED						001-099
	C07		W1175	5110B	24		22-13-11	001-099
	C08	UNUSED						001-099
	C09	UNUSED						001-099
	C10	UNUSED						001-099
	C11		W1175	5114B	24		34-31-11	001-099
	C12	UNUSED						001-099
	C13		W1175	5112B	24		34-31-11	001-099
	C14	UNUSED						001-099
	C15		W1175	2018B	22		34-31-11	001-099
	D01	UNUSED						001-099
	D02	UNUSED						001-099
	D03	UNUSED						001-099
	D04	UNUSED						001-099
	D05	UNUSED						001-099
	D06	UNUSED						001-099
	D07	UNUSED						001-099
	D08	UNUSED						001-099
	D09	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00203B		E002-03/ /		PLUG- (continued)				001-099
	D10	UNUSED						001-099
	D11	UNUSED						001-099
	D12	UNUSED						001-099
	D13	UNUSED						001-099
	D14	UNUSED						001-099
	D15		W1175	0421	22		34-31-11	001-099
	DED		W1175	2539Z			23-51-13	001-099
	DED		W1175	5110Z			22-13-11	001-099
	DED		W1175	5112Z			34-31-11	001-099
	DED		W1175	5114Z			34-31-11	001-099
	DED		W1175	5162Z			34-58-11	002
	REF	VM	W1175	5162B	22		34-58-11	002
	REF	VM	W1175	5162R	22		34-58-11	002
D00203C		E002-03/ /		PLUG-				001-099
	1		W1175	006CX			34-31-11	001-099
	2		W1175	0416	22		34-31-11	001-099
	3		W1175	0417	22		34-31-11	001-099
	4		W1175	0418	22		34-31-11	001-099
	5		W1175	005CX			34-31-11	001-099
	= C1		W1175	006CO			34-31-11	001-099
	= C5		W1175	005CO			34-31-11	001-099
D00205A		E002-02/ /		PLUG-				001-099
	A01	UNUSED						001-099
	A02	UNUSED						001-099
	A03	UNUSED						001-099
	A04	UNUSED						001-099
	A05	UNUSED						001-099
	A06	UNUSED						001-099
	A07	UNUSED						001-099
	A08	UNUSED						001-099
	A09	UNUSED						001-099
	A10	UNUSED						001-099
	A11	UNUSED						001-099
	A12	UNUSED						001-099
	A13	UNUSED						001-099
	A14	UNUSED						001-099
	A15	UNUSED						001-099
	B01	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 4

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00205A		E002-02/ /		PLUG- (continued)				001-099
	B02	UNUSED						001-099
	B03	UNUSED						001-099
	B04	UNUSED						001-099
	B05	UNUSED						001-099
	B06	UNUSED						001-099
	B07	UNUSED						001-099
	B08	UNUSED						001-099
	B09	UNUSED						001-099
	B10	UNUSED						001-099
	B11	UNUSED						001-099
	B12	UNUSED						001-099
	B13	UNUSED						001-099
	B14	UNUSED						001-099
	B15	UNUSED						001-099
	C01	UNUSED						001-099
	C02	UNUSED						001-099
	C03	UNUSED						001-099
	C04	UNUSED						001-099
	C05	UNUSED						001-099
	C06	UNUSED						001-099
	C07	UNUSED						001-099
	C08	UNUSED						001-099
	C09	UNUSED						001-099
	C10	UNUSED						001-099
	C11	UNUSED						001-099
	C12	UNUSED						001-099
	C13	UNUSED						001-099
	C14	UNUSED						001-099
	C15	UNUSED						001-099
	D01	UNUSED						001-099
	D02	UNUSED						001-099
	D03	UNUSED						001-099
	D04	UNUSED						001-099
	D05	UNUSED						001-099
	D06	UNUSED						001-099
	D07	UNUSED						001-099
	D08	UNUSED						001-099
	D09	UNUSED						001-099
	D10	UNUSED						001-099
	D11	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 5

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00205A		E002-02/ /		PLUG- (continued)				001-099
	D12	UNUSED						001-099
	D13	UNUSED						001-099
	D14	UNUSED						001-099
	D15	UNUSED						001-099
D00205B		E002-02/ /		PLUG-				001-099
	A01		W1173	2540R	24		23-51-13	001-099
	A02	UNUSED						001-099
	A03	UNUSED						001-099
	A04	UNUSED						001-099
	A05	UNUSED						001-099
	A06	UNUSED						001-099
	A07	UNUSED						001-099
	A08	UNUSED						001-099
	A09	UNUSED						001-099
	A10	UNUSED						001-099
	A11	UNUSED						001-099
	A12	UNUSED						001-099
	A13	UNUSED						001-099
	A14	UNUSED						001-099
	A15	UNUSED						001-099
	B01		W1173	2540B	24		23-51-13	001-099
	B02	UNUSED						001-099
	B03		W1173	0168	24		34-31-21	001-099
	B04	UNUSED						001-099
	B05		W1173	0169	24		34-31-21	001-099
	B06	UNUSED						001-099
	B07		W1173	5076R	24		22-13-21	001-099
	B08	UNUSED						001-099
	B09	UNUSED						001-099
	B10	UNUSED						001-099
	B11		W1173	5010R	24		34-31-21	001-099
	B12	UNUSED						001-099
	B13		W1173	5069R	24		34-31-21	001-099
	B14	UNUSED						001-099
	B15		W1173	2021R	22		34-31-21	001-099
	C01		W1173	0069	22		22-13-21	001-099
	C02	UNUSED						001-099
	C03		W1173	0168	24		34-31-21	001-099
	C04	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 6

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00205B		E002-02/ /		PLUG- (continued)				001-099
	C05		W1173	0169	24		34-31-21	001-099
	C06	UNUSED						001-099
	C07		W1173	5076B	24		22-13-21	001-099
	C08	UNUSED						001-099
	C09	UNUSED						001-099
	C10	UNUSED						001-099
	C11		W1173	5010B	24		34-31-21	001-099
	C12	UNUSED						001-099
	C13		W1173	5069B	24		34-31-21	001-099
	C14	UNUSED						001-099
	C15		W1173	2021B	22		34-31-21	001-099
	D01	UNUSED						001-099
	D02	UNUSED						001-099
	D03	UNUSED						001-099
	D04	UNUSED						001-099
	D05	UNUSED						001-099
	D06	UNUSED						001-099
	D07	UNUSED						001-099
	D08	UNUSED						001-099
	D09	UNUSED						001-099
	D10	UNUSED						001-099
	D11	UNUSED						001-099
	D12	UNUSED						001-099
	D13	UNUSED						001-099
	D14	UNUSED						001-099
	D15		W1173	0164	22		34-31-21	001-099
	DED		W1173	2540Z			23-51-13	001-099
	DED		W1173	5010Z			34-31-21	001-099
	DED		W1173	5069Z			34-31-21	001-099
	DED		W1173	5076Z			22-13-21	001-099
	DED		W1173	5249Z			34-58-21	002
	REF	VP	W1173	5249B	22		34-58-21	002
	REF	VP	W1173	5249R	22		34-58-21	002
D00205C		E002-02/ /		PLUG-				001-099
	1		W1173	004CX			34-31-21	001-099
	2		W1173	0161	22		34-31-21	001-099
	3		W1173	0162	20		34-31-21	001-099
	4		W1173	0163	20		34-31-21	001-099
	5		W1173	005CX			34-31-21	001-099

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 7

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00205C		E002-02/ /		PLUG- (continued)				001-099
	= C1		W1173	004CO			34-31-21	001-099
	= C5		W1173	005CO			34-31-21	001-099
D00207A		E002-03/ /		PLUG-				001-099
	A01	UNUSED						001-099
	A02	UNUSED						001-099
	A03	UNUSED						001-099
	A04	UNUSED						001-099
	A05	UNUSED						001-099
	A06	UNUSED						001-099
	A07	UNUSED						001-099
	A08	UNUSED						001-099
	A09	UNUSED						001-099
	A10	UNUSED						001-099
	A11	UNUSED						001-099
	A12	UNUSED						001-099
	A13	UNUSED						001-099
	A14	UNUSED						001-099
	A15	UNUSED						001-099
	B01	UNUSED						001-099
	B02	UNUSED						001-099
	B03	UNUSED						001-099
	B04	UNUSED						001-099
	B05	UNUSED						001-099
	B06	UNUSED						001-099
	B07	UNUSED						001-099
	B08	UNUSED						001-099
	B09	UNUSED						001-099
	B10	UNUSED						001-099
	B11	UNUSED						001-099
	B12	UNUSED						001-099
	B13	UNUSED						001-099
	B14	UNUSED						001-099
	B15	UNUSED						001-099
	C01	UNUSED						001-099
	C02	UNUSED						001-099
	C03	UNUSED						001-099
	C04	UNUSED						001-099
	C05	UNUSED						001-099
	C06	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 8

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00207A		E002-03/ /		PLUG- (continued)				001-099
	C07	UNUSED						001-099
	C08	UNUSED						001-099
	C09	UNUSED						001-099
	C10	UNUSED						001-099
	C11	UNUSED						001-099
	C12	UNUSED						001-099
	C13	UNUSED						001-099
	C14	UNUSED						001-099
	C15	UNUSED						001-099
	D01	UNUSED						001-099
	D02	UNUSED						001-099
	D03	UNUSED						001-099
	D04	UNUSED						001-099
	D05	UNUSED						001-099
	D06	UNUSED						001-099
	D07	UNUSED						001-099
	D08	UNUSED						001-099
	D09	UNUSED						001-099
	D10	UNUSED						001-099
	D11	UNUSED						001-099
	D12	UNUSED						001-099
	D13	UNUSED						001-099
	D14	UNUSED						001-099
	D15	UNUSED						001-099
D00207B		E002-03/ /		PLUG-				001-099
	A01		W1175	2538R	24		23-51-13	001-099
	A02	UNUSED						001-099
	A03	UNUSED						001-099
	A04	UNUSED						001-099
	A05	UNUSED						001-099
	A06	UNUSED						001-099
	A07	UNUSED						001-099
	A08	UNUSED						001-099
	A09	UNUSED						001-099
	A10	UNUSED						001-099
	A11	UNUSED						001-099
	A12	UNUSED						001-099
	A13	UNUSED						001-099
	A14	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 9

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00207B		E002-03/ /		PLUG- (continued)				001-099
	A15	UNUSED						001-099
	B01		W1175	2538B	24		23-51-13	001-099
	B02	UNUSED						001-099
	B03		W1175	0043	22		34-31-31	001-099
	B04	UNUSED						001-099
	B05		W1175	0044	22		34-31-31	001-099
	B06	UNUSED						001-099
	B07		W1175	5058R	24		22-13-31	001-099
	B08	UNUSED						001-099
	B09	UNUSED						001-099
	B10	UNUSED						001-099
	B11		W1175	5075R	24		34-31-31	001-099
	B12	UNUSED						001-099
	B13		W1175	5024R	24		34-31-31	001-099
	B14	UNUSED						001-099
	B15		W1175	2006R	22		34-31-31	001-099
	C01		W1175	0207	22		22-13-31	001-099
	C02	UNUSED						001-099
	C03		W1175	0043	22		34-31-31	001-099
	C04	UNUSED						001-099
	C05		W1175	0044	22		34-31-31	001-099
	C06	UNUSED						001-099
	C07		W1175	5058B	24		22-13-31	001-099
	C08	UNUSED						001-099
	C09	UNUSED						001-099
	C10	UNUSED						001-099
	C11		W1175	5075B	24		34-31-31	001-099
	C12	UNUSED						001-099
	C13		W1175	5024B	24		34-31-31	001-099
	C14	UNUSED						001-099
	C15		W1175	2006B	22		34-31-31	001-099
	D01	UNUSED						001-099
	D02	UNUSED						001-099
	D03	UNUSED						001-099
	D04	UNUSED						001-099
	D05	UNUSED						001-099
	D06	UNUSED						001-099
	D07	UNUSED						001-099
	D08	UNUSED						001-099
	D09	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 10

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00207B		E002-03/ /		PLUG- (continued)				001-099
	D10	UNUSED						001-099
	D11	UNUSED						001-099
	D12	UNUSED						001-099
	D13	UNUSED						001-099
	D14	UNUSED						001-099
	D15		W1175	0042	24		34-31-31	001-099
	DED		W1175	2538Z			23-51-13	001-099
	DED		W1175	5024Z			34-31-31	001-099
	DED		W1175	5058Z			22-13-31	001-099
	DED		W1175	5075Z			34-31-31	001-099
D00207C		E002-03/ /		PLUG-				001-099
	1		W1175	004CX			34-31-31	001-099
	2		W1175	0038	22		34-31-31	001-099
	3		W1175	0039	20		34-31-31	001-099
	4		W1175	0040	20		34-31-31	001-099
	5		W1175	003CX			34-31-31	001-099
	= C1		W1175	004CO			34-31-31	001-099
	= C5		W1175	003CO			34-31-31	001-099
D00209		650/148/0000		PLUG-				ALL
	= A1		W2661	001CX			34-32-11	ALL
	= C1		W2661	001CO			34-32-11	ALL
D00211A		E5-1/ /		PLUG				ALL
	71	5E	W4043	001CX			34-33-11	ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 11

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00211A		E5-1/ /		PLUG (continued)				ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 12

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00211A		E5-1/ /		PLUG (continued)				ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	= C71		W4043	001CO			34-33-11	ALL
D00211B		E5-1/ /		PLUG				ALL
	71	5E	W4041	002CX			34-33-11	ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	B01	UNUSED						ALL
	B02		W1282	5002R	24		22-12-11	ALL
	B03		W1282	5002B	24		22-12-11	ALL
	B04	UNUSED						ALL
	B05		W1282	0006	24		34-33-11	ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05		W1282	0006	24		34-33-11	ALL
	C06	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 13

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00211B		E5-1/ /		PLUG (continued)				ALL
	C07	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	F01	UNUSED						ALL
	F02		W1282	0005	24		34-33-11	ALL
	F03		W1282	0005	24		34-33-11	ALL
	F04		W1282	0008	24		34-33-11	ALL
	F05		W1282	0011	22		34-33-11	001-099
	F05		W1282	0011	24		34-33-11	115-199
	F06		W1282	0009	22		34-33-11	001-099
	F06		W1282	0009	24		34-33-11	115-199
	F07	UNUSED						ALL
	G01	UNUSED						ALL
	G02		W1282	5001R	24		34-33-11	ALL
	G03		W1282	5001B	24		34-33-11	ALL
	G04	UNUSED						ALL
	G05		W1282	0007	24		34-33-11	ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 14

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00211B		E5-1/ /		PLUG (continued)				ALL
	J03	UNUSED						ALL
	J04		W1282	0004	24		34-33-11	ALL
	J05	UNUSED						ALL
	J06		W1282	0004	24		34-33-11	ALL
	J07	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06		W1282	0010	22		22-12-11	ALL
	K07	UNUSED						ALL
	=C71		W4041	002CO			34-33-11	ALL
	DED		W1282	5001Z			34-33-11	ALL
D00211C		E5-1/ /		PLUG				ALL
	1	UNUSED						ALL
	2		W1282	0002	20		34-33-11	ALL
	3		W1282	0003	20		34-33-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W1282	0001	22		34-33-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	=C12	UNUSED						ALL
	=C13	UNUSED						ALL
D00213		570/148/L12		PLUG				ALL
	= A1		W4041	002CX			34-33-11	ALL
	= C1		W4041	002CO			34-33-11	ALL
D00215		610/148/L12		PLUG				ALL
	= A1		W4043	001CX			34-33-11	ALL
	= C1		W4043	001CO			34-33-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 15

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00217A		E5-2/ /		PLUG				ALL
	71	5E	W4047	001CX			34-33-21	ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 16

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00217A		E5-2/ /		PLUG (continued)				ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	=C71		W4047	001CO			34-33-21	ALL
D00217B		E5-2/ /		PLUG				ALL
	71	5E	W4045	002CX			34-33-21	ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 17

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00217B		E5-2/ /		PLUG (continued)				ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	B01	UNUSED						ALL
	B02		W1284	5002R	24		22-12-21	ALL
	B03		W1284	5002B	24		22-12-21	ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06		W1284	0006	24		34-33-21	ALL
	B07	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05		W1284	0006	24		34-33-21	ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	F01	UNUSED						ALL
	F02		W1284	0005	24		34-33-21	ALL
	F03		W1284	0005	24		34-33-21	ALL
	F04		W1284	0010	24		34-33-21	ALL
	F05		W1284	0008	22		34-33-21	ALL
	F06		W1284	0009	22		34-33-21	ALL
	F07	UNUSED						ALL
	G01	UNUSED						ALL
	G02		W1284	5001R	24		34-22-29	001-099
	G02		W1284	5001R	24		34-33-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 18

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00217B		E5-2/ /		PLUG (continued)				ALL
	G03		W1284	5001B	24		34-22-29	001-099
	G03		W1284	5001B	24		34-33-21	115-199
	G04	UNUSED						ALL
	G05		W1284	0007	24		34-33-21	ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04		W1284	0004	24		34-33-21	ALL
	J05	UNUSED						ALL
	J06		W1284	0004	24		34-33-21	ALL
	J07	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06		W1284	0011	22		22-12-21	ALL
	K07	UNUSED						ALL
	=C71		W4045	002CO			34-33-21	ALL
	DED		W1284	5001Z			34-22-29	001-099
	DED		W1284	5002Z			22-12-21	ALL
	DED		W1284	5001Z			34-33-21	115-199
D00217C		E5-2/ /		PLUG				ALL
	1	UNUSED						ALL
	2		W1284	0003	20		34-33-21	ALL
	3		W1284	0002	20		34-33-21	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 19

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00217C		E5-2/ /		PLUG (continued)				ALL
	8		W1284	0001	22		34-33-21	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
D00219		570/148/R012		PLUG				ALL
	= A1		W4045	002CX			34-33-21	ALL
	= C1		W4045	002CO			34-33-21	ALL
D00221		610/148/R12		PLUG				ALL
	= A1		W4047	001CX			34-33-21	ALL
	= C1		W4047	001CO			34-33-21	ALL
D00223A		E005-03/ /		PLUG-				001-099
D00223A		E5-3/ /		PLUG-				115-199
	71	5E	W4051	001CX			34-33-31	ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 20

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00223A		E005-03/ /		PLUG- (continued)				001-099
D00223A		E5-3/ /		PLUG- (continued)				115-199
	C07	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 21

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00223A		E005-03/ /		PLUG- (continued)				001-099
D00223A		E5-3/ /		PLUG- (continued)				115-199
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	=C71		W4051	001CO			34-33-31	ALL
D00223B		E005-03/ /		PLUG-				001-099
D00223B		E5-3/ /		PLUG-				115-199
	71	5E	W4049	002CX			34-33-31	ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	B01	UNUSED						ALL
	B02		W1286	5009R	24		22-12-31	ALL
	B03		W1286	5009B	24		22-12-31	ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05		W1286	0008	24		34-33-31	ALL
	C06		W1286	0008	24		34-33-31	ALL
	C07	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 22

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00223B		E005-03/ /		PLUG- (continued)				001-099
D00223B		E5-3/ /		PLUG- (continued)				115-199
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	F01	UNUSED						ALL
	F02		W1286	0007	24		34-33-31	ALL
	F03		W1286	0007	24		34-33-31	ALL
	F04		W1286	0016	24		34-33-31	ALL
	F05		W1286	0014	22		34-33-31	001-099
	F05		W1286	0002	24		34-33-31	115-199
	F06		W1286	0015	22		34-33-31	001-099
	F06		W1286	0020	24		34-33-31	115-199
	F07	UNUSED						ALL
	G01	UNUSED						ALL
	G02		W1286	5003R	24		34-22-39	001-099
	G02		W1286	5003R	24		34-33-31	115-199
	G03		W1286	5003B	24		34-22-39	001-099
	G03		W1286	5003B	24		34-33-31	115-199
	G04	UNUSED						ALL
	G05		W1286	0009	24		34-33-31	ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 23

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00223B		E005-03/ /		PLUG- (continued)				001-099
D00223B		E5-3/ /		PLUG- (continued)				115-199
	J03	UNUSED						ALL
	J04		W1286	0006	24		34-33-31	ALL
	J05	UNUSED						ALL
	J06		W1286	0006	24		34-33-31	ALL
	J07	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06		W1286	0023	22		22-12-31	ALL
	K07	UNUSED						ALL
	= C71		W4049	002CO			34-33-31	ALL
	DED		W1286	5003Z			34-22-39	001-099
	DED		W1286	5003Z			34-33-31	115-199
D00223C		E005-03/ /		PLUG-				001-099
D00223C		E5-3/ /		PLUG-				115-199
	1	UNUSED						ALL
	2		W1286	0005	20		34-33-31	ALL
	3		W1286	0003	20		34-33-31	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W1286	0004	22		34-33-31	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
D00225		570/148/		PLUG				ALL
	= A1		W4049	002CX			34-33-31	ALL
	= C1		W4049	002CO			34-33-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 24

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00227		610/148/		PLUG				ALL
	= A1		W4051	001CX			34-33-31	ALL
	= C1		W4051	001CO			34-33-31	ALL
D00231A		E003-02/ /		PLUG-				001-099
D00231A		E6-1/ /		PLUG-				115-199
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 25

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00231A		E003-02/ /		PLUG- (continued)				001-099
D00231A		E6-1/ /		PLUG- (continued)				115-199
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
D00231B		E003-02/ /		PLUG-				001-099
D00231B		E6-1/ /		PLUG-				115-199
	A01	UNUSED						ALL
	A02		W1423	0137	22		34-32-11	001-099
	A02		W1011	0037	22		34-32-11	115-199
	A03	UNUSED						ALL
	A04		W1423	5103R	24		34-51-11	001-099
	A04		W1011	5003R	24		34-51-11	115-199
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 26

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00231B		E003-02/ /		PLUG- (continued)				001-099
D00231B		E6-1/ /		PLUG- (continued)				115-199
	A10	UNUSED						ALL
	A11		W1423	0128	22		34-51-11	001-099
	A11		W1011	0028	22		34-51-11	115-199
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15		W1423	0129	22		34-51-11	001-099
	A15		W1011	0029	22		34-51-11	115-199
	B01	UNUSED						ALL
	B02		W1423	0138	22		34-32-11	001-099
	B02		W1011	0038	22		34-32-11	115-199
	B03	UNUSED						ALL
	B04		W1423	5103B	24		34-51-11	001-099
	B04		W1011	5003B	24		34-51-11	115-199
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07		W1423	2103R	24		23-51-12	001-099
	B07		W1011	2003R	24		23-51-12	115-199
	B08	UNUSED						ALL
	B09		W1423	5101R	24		34-51-11	001-099
	B09		W1011	5001R	24		34-51-11	115-199
	B10	UNUSED						ALL
	B11		W1423	5102R	24		34-51-11	001-099
	B11		W1011	5002R	24		34-51-11	115-199
	B12	UNUSED						ALL
	B13		W1423	5104R	24		34-22-19	001-099
	B13		W1011	5004R	24		34-22-19	115-199
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02		W1423	0139	22		34-32-11	001-099
	C02		W1011	0039	22		34-32-11	115-199
	C03	UNUSED						ALL
	C04		W1423	2104R	24		23-51-12	001-099
	C04		W1011	2004R	24		23-51-12	115-199
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07		W1423	2103B	24		23-51-12	001-099
	C07		W1011	2003B	24		23-51-12	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 27

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00231B		E003-02/ /		PLUG- (continued)				001-099
D00231B		E6-1/ /		PLUG- (continued)				115-199
	C08	UNUSED						ALL
	C09		W1423	5101B	24		34-51-11	001-099
	C09		W1011	5001B	24		34-51-11	115-199
	C10	UNUSED						ALL
	C11		W1423	5102B	24		34-51-11	001-099
	C11		W1011	5002B	24		34-51-11	115-199
	C12	UNUSED						ALL
	C13		W1423	5104B	24		34-22-19	001-099
	C13		W1011	5004B	24		34-22-19	115-199
	C14	UNUSED						ALL
	C15		W1423	2102R	22		34-51-11	001-099
	C15		W1011	2002R	22		34-51-11	115-199
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04		W1423	2104B	24		23-51-12	001-099
	D04		W1011	2004B	24		23-51-12	115-199
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15		W1423	2102B	22		34-51-11	001-099
	D15		W1011	2002B	22		34-51-11	115-199
	DED		W1423	5101Z			34-51-11	001-099
	DED		W1423	5102Z			34-51-11	001-099
	DED		W1423	5103Z			34-51-11	001-099
	DED		W1423	5104Z			34-22-19	001-099
	DED		W1011	5001Z			34-51-11	115-199
	DED		W1011	5002Z			34-51-11	115-199
	DED		W1011	5003Z			34-51-11	115-199
	DED		W1011	5004Z			34-22-19	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 28

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00231C D00231C		E003-02/ / E6-1/ /		PLUG- PLUG-				001-099 115-199
	1		W1423	012CX			34-51-11	001-099
	1		W1011	002CX			34-51-11	115-199
	2		W1423	1101	22		34-51-11	001-099
	2		W1011	1001	22		34-51-11	115-199
	3		W1423	0126	20		34-51-11	001-099
	3		W1011	0026	20		34-51-11	115-199
	4		W1423	0127	20		34-51-11	001-099
	4		W1011	0027	20		34-51-11	115-199
	5		W1423	013CX			34-32-11	001-099
	5		W1011	003CX			34-32-11	115-199
	= C1		W1423	012CO			34-51-11	001-099
	= C1		W1011	002CO			34-51-11	115-199
	= C5		W1423	013CO			34-32-11	001-099
	= C5		W1011	003CO			34-32-11	115-199
	DED		W1011	1001Z			34-51-11	115-199
D00235A D00235A		E003-02/ / E6-1/ /		PLUG- PLUG-				001-099 115-199
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 29

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00235A		E003-02/ /		PLUG- (continued)				001-099
D00235A		E6-1/ /		PLUG- (continued)				115-199
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 30

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00235B		E003-02/ /		PLUG-				001-099
D00235B		E6-1/ /		PLUG-				115-199
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04		W1423	5203R	24		34-51-21	001-099
	A04		W1013	5003R	24		34-51-21	115-199
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11		W1423	0228	22		34-51-21	001-099
	A11		W1013	0028	22		34-51-21	115-199
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15		W1423	0229	22		34-51-21	001-099
	A15		W1013	0029	22		34-51-21	115-199
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04		W1423	5203B	24		34-51-21	001-099
	B04		W1013	5003B	24		34-51-21	115-199
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07		W1423	2203R	24		23-51-12	001-099
	B07		W1013	2003R	24		23-51-12	115-199
	B08	UNUSED						ALL
	B09		W1423	5201R	24		34-51-21	001-099
	B09		W1013	5001R	24		34-51-21	115-199
	B10	UNUSED						ALL
	B11		W1423	5202R	24		34-51-21	001-099
	B11		W1013	5002R	24		34-51-21	115-199
	B12	UNUSED						ALL
	B13		W1423	5204R	24		34-22-29	001-099
	B13		W1013	5004R	24		34-22-29	115-199
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 31

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00235B		E003-02/ /		PLUG- (continued)				001-099
D00235B		E6-1/ /		PLUG- (continued)				115-199
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07		W1423	2203B	24		23-51-12	001-099
	C07		W1013	2003B	24		23-51-12	115-199
	C08	UNUSED						ALL
	C09		W1423	5201B	24		34-51-21	001-099
	C09		W1013	5001B	24		34-51-21	115-199
	C10	UNUSED						ALL
	C11		W1423	5202B	24		34-51-21	001-099
	C11		W1013	5002B	24		34-51-21	115-199
	C12	UNUSED						ALL
	C13		W1423	5204B	24		34-22-29	001-099
	C13		W1013	5004B	24		34-22-29	115-199
	C14	UNUSED						ALL
	C15		W1423	2202R	22		34-51-21	001-099
	C15		W1013	2002R	22		34-51-21	115-199
	D01	UNUSED						ALL
	D02		W1423	0236	22		34-51-21	001-099
	D02		W1013	0036	22		34-51-21	115-199
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15		W1423	2202B	22		34-51-21	001-099
	D15		W1013	2002B	22		34-51-21	115-199
	DED		W1423	5201Z			34-51-21	001-099
	DED		W1423	5202Z			34-51-21	001-099
	DED		W1423	5203Z			34-51-21	001-099

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 32

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00235B		E003-02/ /		PLUG- (continued)				001-099
D00235B		E6-1/ /		PLUG- (continued)				115-199
	DED		W1423	5204Z			34-22-29	001-099
	DED		W1013	5001Z			34-51-21	115-199
	DED		W1013	5002Z			34-51-21	115-199
	DED		W1013	5003Z			34-51-21	115-199
	DED		W1013	5004Z			34-22-29	115-199
D00235C		E003-02/ /		PLUG-				001-099
D00235C		E6-1/ /		PLUG-				115-199
	1		W1423	022CX			34-51-21	001-099
	1		W1013	002CX			34-51-21	115-199
	2		W1423	0225	22		34-51-21	001-099
	2		W1013	0025	22		34-51-21	115-199
	3		W1423	0226	20		34-51-21	001-099
	3		W1013	0026	20		34-51-21	115-199
	4		W1423	0227	20		34-51-21	001-099
	4		W1013	0027	20		34-51-21	115-199
	5	UNUSED						ALL
	= C1		W1423	022CO			34-51-21	001-099
	= C1		W1013	002CO			34-51-21	115-199
	= C5	UNUSED						ALL
D00237		630/150/		PLUG				ALL
	= A1		W4053	001CX			34-55-11	ALL
	= C1		W4053	001CO			34-55-11	ALL
D00239A		E3-3/ /		PLUG-				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 33

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00239A		E3-3/ /		PLUG- (continued)				ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 34

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00239A		E3-3/ /		PLUG- (continued)				ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 35

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00239A		E3-3/ /		PLUG- (continued)				ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 36

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00239A		E3-3/ /		PLUG- (continued)				ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
D00239B		E3-3/ /		PLUG-				ALL
	71		W1433	003CX			34-55-11	ALL
	A01		W1433	0048	24		23-51-12	ALL
	A02	UNUSED						ALL
	A03		W1433	5007R	24		34-55-11	ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	B01		W1433	0047	24		23-51-12	ALL
	B02	UNUSED						ALL
	B03		W1433	5007B	24		34-55-11	ALL
	B04	UNUSED						ALL
	B05		W1433	0045	24		34-55-11	ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 37

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00239B		E3-3/ /		PLUG- (continued)				ALL
	C07	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03		W1433	5006R	24		34-55-11	ALL
	D04	UNUSED						ALL
	D05		W1433	0052	22		34-55-11	001-099
	D05		W1433	0052	24		34-55-11	115-199
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03		W1433	5006B	24		34-55-11	ALL
	E04	UNUSED						ALL
	E05		W1433	0053	22		34-55-11	001-099
	E05		W1433	0053	24		34-55-11	115-199
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	G01		W1433	5008R	24		34-61-12	ALL
	G02	UNUSED						ALL
	G03		W1433	5009R	24		34-22-19	ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	H01		W1433	5008B	24		34-61-12	ALL
	H02	UNUSED						ALL
	H03		W1433	5009B	24		34-22-19	ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 38

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00239B		E3-3/ /		PLUG- (continued)				ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05		W1433	0051	24		34-55-11	ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	=C71		W1433	003CO			34-55-11	ALL
	DED		W1433	5006Z			34-55-11	ALL
	DED		W1433	5007Z			34-55-11	ALL
	DED		W1433	5008Z			34-61-12	ALL
	DED		W1433	5009Z			34-22-19	ALL
D00239C		E3-3/ /		PLUG-				ALL
	1		W1433	0041	22		34-55-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1433	0042	20		34-55-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W1433	0043	20		34-55-11	ALL
	12		W1433	004CX			34-55-11	ALL
	13	UNUSED						ALL
	=C12		W1433	004CO			34-55-11	ALL
	=C13	UNUSED						ALL
D00241		690/148/L12		PLUG				ALL
	=A1		W4055	001CX			34-55-21	ALL
	=C1		W4055	001CO			34-55-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 39

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00243A D00243A		E003-02/ / E3-2/ /		PLUG- PLUG-				001-099 115-199
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 40

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00243A		E003-02/ /		PLUG- (continued)				001-099
D00243A		E3-2/ /		PLUG- (continued)				115-199
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 41

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00243A		E003-02/ /		PLUG- (continued)				001-099
D00243A		E3-2/ /		PLUG- (continued)				115-199
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 42

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00243A		E003-02/ /		PLUG- (continued)				001-099
D00243A		E3-2/ /		PLUG- (continued)				115-199
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
D00243B		E003-02/ /		PLUG-				001-099
D00243B		E3-2/ /		PLUG-				115-199
	71		W1423	003CX			34-55-21	ALL
	A01		W1423	0048	24		23-51-12	ALL
	A02	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 43

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00243B		E003-02/ /		PLUG- (continued)				001-099
D00243B		E3-2/ /		PLUG- (continued)				115-199
	A03		W1423	5007R	24		34-55-21	ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	B01		W1423	0047	24		23-51-12	ALL
	B02	UNUSED						ALL
	B03		W1423	5007B	24		34-55-21	ALL
	B04	UNUSED						ALL
	B05		W1423	0045	24		34-55-21	ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03		W1423	5006R	24		34-55-21	ALL
	D04	UNUSED						ALL
	D05		W1423	0052	22		34-55-21	ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03		W1423	5006B	24		34-55-21	ALL
	E04	UNUSED						ALL
	E05		W1423	0053	22		34-55-21	ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 44

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00243B		E003-02/ /		PLUG- (continued)				001-099
D00243B		E3-2/ /		PLUG- (continued)				115-199
	F07	UNUSED						ALL
	G01		W1423	5008R	24		34-61-13	ALL
	G02	UNUSED						ALL
	G03		W1423	5009R	24		34-22-29	ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	H01		W1423	5008B	24		34-61-13	ALL
	H02	UNUSED						ALL
	H03		W1423	5009B	24		34-22-29	ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05		W1423	0051	24		34-55-21	ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	=C71		W1423	003CO			34-55-21	ALL
	DED		W1423	5006Z			34-55-21	ALL
	DED		W1423	5007Z			34-55-21	ALL
	DED		W1423	5008Z			34-61-13	ALL
	DED		W1423	5009Z			34-22-29	ALL
D00243C		E003-02/ /		PLUG-				001-099
D00243C		E3-2/ /		PLUG-				115-199
	1		W1423	0041	22		34-55-21	ALL
	2	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 45

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00243C		E003-02/ /		PLUG- (continued)				001-099
D00243C		E3-2/ /		PLUG- (continued)				115-199
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1423	0042	20		34-55-21	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W1423	0043	20		34-55-21	ALL
	12		W1423	004CX			34-55-21	ALL
	13	UNUSED						ALL
	=C12		W1423	004CO			34-55-21	ALL
	=C13	UNUSED						ALL
D00245A		E006-01/ /		PLUG-				001-099
D00245A		E6-1/ /		PLUG-				115-199
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 46

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00245A		E006-01/ /		PLUG- (continued)				001-099
D00245A		E6-1/ /		PLUG- (continued)				115-199
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 47

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00245B D00245B		E006-01/ / E6-1/ /		PLUG- PLUG-				001-099 115-199
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01		W1001	2504R	24		23-51-13	001-099
	B01		W1011	2504R	24		23-51-13	115-199
	B02		W1001	2504B	24		23-51-13	001-099
	B02		W1011	2504B	24		23-51-13	115-199
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07		W1001	5005R	24		34-57-11	001-099
	B07		W1011	5005R	24		34-57-11	115-199
	B08		W1001	5005B	24		34-57-11	001-099
	B08		W1011	5005B	24		34-57-11	115-199
	B09	UNUSED						ALL
	B10		W1001	5006R	24		34-22-81	001-099
	B10		W1011	5006R	24		34-22-83	115-199
	B11		W1001	5006B	24		34-22-81	001-099
	B11		W1011	5006B	24		34-22-83	115-199
	B12	UNUSED						ALL
	B13	UNUSED						001-099
	B13		W1011	5008R	24		34-22-18	115-199
	B14	UNUSED						001-099
	B14		W1011	5008B	24		34-22-18	115-199
	B15		W1001	0040	22		34-57-11	001-099
	B15		W1011	0040	22		34-57-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 48

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00245B		E006-01/ /		PLUG- (continued)				001-099
D00245B		E6-1/ /		PLUG- (continued)				115-199
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05		W1001	0052	24		34-57-11	001-099
	C05		W1011	0003	24		34-57-11	115-199
	C06	UNUSED						ALL
	C07	UNUSED						001, 009
	C07		W1001	0053	24		34-57-11	002-008, 010-099
	C07		W1011	0002	24		34-57-11	115-199
	C08		W1001	0053	24		34-57-11	001, 009
	C08	UNUSED						002-008, 010-099, 115-199
	C09		W1001	0054	24		34-57-11	001-099
	C09		W1011	0001	24		34-57-11	115-199
	C10		W1001	2005R	22		34-57-11	001-099
	C10		W1011	2005R	22		34-57-11	115-199
	C11		W1001	2005B	22		34-57-11	001-099
	C11		W1011	2005B	22		34-57-11	115-199
	C12		W1001	0051	22		34-57-11	001-099
	C12		W1011	0051	22		34-57-11	115-199
	C13		W1001	0050	22		34-57-11	001-099
	C13		W1011	0050	22		34-57-11	115-199
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01		W1001	2505B	24		34-57-11	001-099
	D01		W1011	2505B	24		34-57-11	115-199
	D02		W1001	2505N	24		34-57-11	001-099
	D02		W1011	2505N	24		34-57-11	115-199
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07		W1001	2506B	24		34-57-11	001-099
	D07		W1011	2506B	24		34-57-11	115-199
	D08		W1001	2506N	24		34-57-11	001-099
	D08		W1011	2506N	24		34-57-11	115-199
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 49

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00245B		E006-01/ /		PLUG- (continued)				001-099
D00245B		E6-1/ /		PLUG- (continued)				115-199
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14		W1001	2507B	24		34-57-11	001-099
	D14		W1011	2507B	24		34-57-11	115-199
	D15		W1001	2507N	24		34-57-11	001-099
	D15		W1011	2507N	24		34-57-11	115-199
	DED		W1001	2504Z			23-51-13	001-099
	DED		W1001	2505Z			34-57-11	001-099
	DED		W1001	2506Z			34-57-11	001-099
	DED		W1001	2507Z			34-57-11	001-099
	DED		W1001	5005Z			34-57-11	001-099
	DED		W1001	5006Z			34-22-81	001-099
	DED		W1011	2504Z			23-51-13	115-199
	DED		W1011	2505Z			34-57-11	115-199
	DED		W1011	2506Z			34-57-11	115-199
	DED		W1011	2507Z			34-57-11	115-199
	DED		W1011	5005Z			34-57-11	115-199
	DED		W1011	5006Z			34-22-83	115-199
	DED		W1011	5008Z			34-22-18	115-199
D00245C		E006-01/ /		PLUG-				001-099
D00245C		E6-1/ /		PLUG-				115-199
	1	UNUSED						ALL
	2		W1001	0041	22		34-57-11	001-099
	2		W1011	1002	22		34-57-11	115-199
	3		W1001	0043	20		34-57-11	001-099
	3		W1011	0043	20		34-57-11	115-199
	4		W1001	0042	20		34-57-11	001-099
	4		W1011	0042	20		34-57-11	115-199
	5	UNUSED						ALL
	= C1	UNUSED						ALL
	= C5	UNUSED						ALL
D00249		535/148/R015		PLUG-				ALL
	= A1		W4465	001CX			34-53-11	ALL
	= C1		W4465	001CO			34-53-11	ALL
D00251A		E3-3/ /		PLUG-				ALL
	71		W1433	005CX			34-53-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 50

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00251A		E3-3/ /		PLUG- (continued)				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03		W1433	0199	24		34-53-11	001-099
	B03	UNUSED						115-199
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05		W1433	0054	24		34-53-12	ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05		W1433	0055	24		34-53-12	ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05		W1433	5004R	24		34-45-02	ALL
	E06	UNUSED						ALL
	E07		W1433	5001R	24		34-53-11	001-099
	E07		W1433	0027	24		34-53-11	115-199
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 51

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00251A		E3-3/ /		PLUG- (continued)				ALL
	F04	UNUSED						ALL
	F05		W1433	5004B	24		34-45-02	ALL
	F06	UNUSED						ALL
	F07		W1433	5001B	24		34-53-11	001-099
	F07		W1433	0130	24		34-53-11	115-199
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05		W1433	5005R	24		34-45-02	ALL
	G06	UNUSED						ALL
	G07		W1433	0300	24		34-53-11	001-099
	G07		W1433	0129	24		34-53-11	115-199
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05		W1433	5005B	24		34-45-02	ALL
	H06	UNUSED						ALL
	H07		W1433	5002R	24		34-53-11	ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05		W1433	0137	24		34-53-11	001-099
	J05		W1433	0110	24		34-53-11	115-199
	J06	UNUSED						ALL
	J07		W1433	5002B	24		34-53-11	ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05		W1433	0198	24		34-53-11	001-099
	K05	UNUSED						115-199
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	=C71		W1433	005CO			34-53-11	ALL
	DED		W1433	5001Z			34-53-11	001-099
	DED		W1433	5002Z			34-53-11	ALL
	DED		W1433	5004Z			34-45-02	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 52

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00251A		E3-3/ /		PLUG- (continued)				ALL
	DED		W1433	5005Z			34-45-02	ALL
D00251B		E3-3/ /		PLUG-				ALL
	71		W1433	001CX			34-53-11	ALL
	A01		W1433	0001	24		34-53-12	ALL
	A02		W1433	0011	24		34-53-12	ALL
	A03		W1433	0021	24		34-53-12	ALL
	A04	UNUSED						ALL
	A05		W1433	5003R	24		34-53-11	ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	B01		W1433	0002	24		34-53-12	ALL
	B02		W1433	0012	24		34-53-12	ALL
	B03		W1433	0022	24		34-53-12	ALL
	B04	UNUSED						ALL
	B05		W1433	5003B	24		34-53-11	ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	C01		W1433	0003	24		34-53-12	ALL
	C02		W1433	0013	24		34-53-12	ALL
	C03		W1433	0023	24		34-53-12	ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	D01		W1433	0004	24		34-53-12	ALL
	D02		W1433	0014	24		34-53-12	ALL
	D03		W1433	0024	24		34-53-12	ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	E01		W1433	0005	24		34-53-12	ALL
	E02		W1433	0015	24		34-53-12	ALL
	E03		W1433	0025	24		34-53-12	ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06		W1433	0342	22		34-53-11	001-099
	E06		W1433	0031	22		34-53-11	115-199
	E07	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 53

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00251B		E3-3/ /		PLUG- (continued)				ALL
	F01		W1433	0006	24		34-53-12	ALL
	F02		W1433	0016	24		34-53-12	ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	G01		W1433	0007	24		34-53-12	ALL
	G02		W1433	0017	24		34-53-12	ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05		W1433	0106	22		34-53-11	001-002
	G05	UNUSED						003-099, 115-199
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	H01		W1433	0008	24		34-53-12	ALL
	H02		W1433	0018	24		34-53-12	ALL
	H03		W1433	0026	24		34-53-11	001-002, 115-199
	H03	UNUSED						003-099
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	J01		W1433	0009	24		34-53-12	ALL
	J02		W1433	0019	24		34-53-12	ALL
	J03		W1433	0027	24		34-53-11	001-002
	J03	UNUSED						003-099, 115-199
	J04	UNUSED						ALL
	J05		W1433	0344	24		34-53-12	001-099
	J05		W1433	0034	22		34-53-11	115-199
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	K01		W1433	0010	24		34-53-12	ALL
	K02		W1433	0020	24		34-53-12	ALL
	K03		W1433	0028	24		34-53-11	ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	=C71		W1433	001CO			34-53-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 54

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00251B		E3-3/ /		PLUG- (continued)				ALL
	DED		W1433	5003Z			34-53-11	ALL
D00251C		E3-3/ /		PLUG-				ALL
	1		W1433	0037	22		34-53-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1433	0038	20		34-53-11	ALL
	8		W1433	0040	20		34-53-11	001-099 115-199
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W1433	0039	20		34-53-11	ALL
	12		W1433	002CX			34-53-11	ALL
	13	UNUSED						ALL
	=C12		W1433	002CO			34-53-11	ALL
	=C13	UNUSED						ALL
D00253A		E003-02/ /		PLUG-				001-099
D00253A		E3-2/ /		PLUG-				115-199
	71		W1423	014CX			34-53-21	ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03		W1423	0112	24		34-53-21	001-099 115-199
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 55

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00253A		E003-02/ /		PLUG- (continued)				001-099
D00253A		E3-2/ /		PLUG- (continued)				115-199
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05		W1423	0054	24		34-53-22	ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05		W1423	0055	24		34-53-22	ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05		W1423	5225R	24		34-45-02	ALL
	E06	UNUSED						ALL
	E07		W1423	5001R	24		34-53-21	ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05		W1423	5225B	24		34-45-02	ALL
	F06	UNUSED						ALL
	F07		W1423	5001B	24		34-53-21	ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05		W1423	5226R	24		34-45-02	ALL
	G06	UNUSED						ALL
	G07		W1423	0107	24		34-53-21	001-099
	G07		W1423	0142	24		34-53-21	115-199
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05		W1423	5226B	24		34-45-02	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 56

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00253A		E003-02/ /		PLUG- (continued)				001-099
D00253A		E3-2/ /		PLUG- (continued)				115-199
	H06	UNUSED						ALL
	H07		W1423	5003R	24		34-53-21	ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05		W1423	0115	24		34-53-21	001-099
	J05		W1423	0143	24		34-53-21	115-199
	J06	UNUSED						ALL
	J07		W1423	5003B	24		34-53-21	ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05		W1423	0111	24		34-53-21	001-099
	K05	UNUSED						115-199
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	=C71		W1423	014CO			34-53-21	ALL
	DED		W1423	5001Z			34-53-21	ALL
	DED		W1423	5003Z			34-53-21	ALL
	DED		W1423	5225Z			34-45-02	ALL
	DED		W1423	5226Z			34-45-02	ALL
D00253B		E003-02/ /		PLUG-				001-099
D00253B		E3-2/ /		PLUG-				115-199
	71		W1423	001CX			34-53-21	ALL
	A01		W1423	0001	24		34-53-22	ALL
	A02		W1423	0011	24		34-53-22	ALL
	A03		W1423	0021	24		34-53-22	ALL
	A04	UNUSED						ALL
	A05		W1423	5002R	24		34-53-21	ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	B01		W1423	0002	24		34-53-22	ALL
	B02		W1423	0012	24		34-53-22	ALL
	B03		W1423	0022	24		34-53-22	ALL
	B04	UNUSED						ALL
	B05		W1423	5002B	24		34-53-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 57

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00253B		E003-02/ /		PLUG- (continued)				001-099
D00253B		E3-2/ /		PLUG- (continued)				115-199
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	C01		W1423	0003	24		34-53-22	ALL
	C02		W1423	0013	24		34-53-22	ALL
	C03		W1423	0023	24		34-53-22	ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	D01		W1423	0004	24		34-53-22	ALL
	D02		W1423	0014	24		34-53-22	ALL
	D03		W1423	0024	24		34-53-22	ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	E01		W1423	0005	24		34-53-22	ALL
	E02		W1423	0015	24		34-53-22	ALL
	E03		W1423	0025	24		34-53-22	ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06		W1423	0029	22		34-53-21	ALL
	E07	UNUSED						ALL
	F01		W1423	0006	24		34-53-22	ALL
	F02		W1423	0016	24		34-53-22	ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	G01		W1423	0007	24		34-53-22	ALL
	G02		W1423	0017	24		34-53-22	ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05		W1423	0117	24		34-53-21	001-002
	G05	UNUSED						003-099, 115-199
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	H01		W1423	0008	24		34-53-22	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 58

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00253B		E003-02/ /		PLUG- (continued)				001-099
D00253B		E3-2/ /		PLUG- (continued)				115-199
	H02		W1423	0018	24		34-53-22	ALL
	H03		W1423	0026	24		34-53-21	001-002, 115-199
	H03	UNUSED						003-099
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	J01		W1423	0009	24		34-53-22	ALL
	J02		W1423	0019	24		34-53-22	ALL
	J03		W1423	0119	24		34-53-21	001-002
	J03	UNUSED						003-099, 115-199
	J04	UNUSED						ALL
	J05		W1423	0027	24		34-53-22	ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	K01		W1423	0010	24		34-53-22	ALL
	K02		W1423	0020	24		34-53-22	ALL
	K03		W1423	0028	24		34-53-21	ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	=C71		W1423	001CO			34-53-21	ALL
	DED		W1423	5002Z			34-53-21	ALL
D00253C		E003-02/ /		PLUG-				001-099
D00253C		E3-2/ /		PLUG-				115-199
	1		W1423	0037	22		34-53-21	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1423	0038	20		34-53-21	ALL
	8		W1423	0108	20		34-53-21	001-099
	8		W1423	0380	20		34-53-21	115-199
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W1423	0039	20		34-53-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 59

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00253C		E003-02/ /		PLUG- (continued)				001-099
D00253C		E3-2/ /		PLUG- (continued)				115-199
	12		W1423	002CX			34-53-21	ALL
	13	UNUSED						ALL
	= C12		W1423	002CO			34-53-21	ALL
	= C13	UNUSED						ALL
D00255		P008-00/ /		PLUG-				001-099
D00255		P8/ /		PLUG-				115-199
	1		W2075	0001	20		33-13-52	ALL
	2		W2075	0002	20		33-13-52	ALL
	3		W2075	0003	22		34-53-11	ALL
	4		W2075	0004	20		34-53-11	ALL
	5		W2075	0005	22		34-53-11	001-099
	5	UNUSED						115-199
	6		W2075	0006	20		34-53-11	001-099
	6		W2075	0060	20		34-53-11	115-199
	7		W2075	0007	24		34-53-11	001-099
	7		W2075	0017	24		34-53-11	115-199
	8		W2075	0008	20		34-53-11	001-099
	8		W2075	0006	20		34-53-11	115-199
	9		W2075	0009	24		34-53-11	001-099
	9		W2075	0008	24		34-53-11	115-199
	10		W2075	0010	24		34-53-11	001-099
	10		W2075	0013	24		34-53-11	115-199
	11		W2075	0111	24		34-53-11	001-099
	11	UNUSED						115-199
	12		W2075	0112	24		34-53-11	001-099
	12	UNUSED						115-199
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W2075	0015	24		34-53-11	ALL
	16		W2075	0016	24		34-53-11	001-099
	16	UNUSED						115-199
	17		W2075	0017	22		34-53-11	001-099
	17	UNUSED						115-199
	18		W2075	0011	22		33-16-61	001-099
	18		W2075	0011	22		33-16-11	115-199
	19		W2075	0019	24		34-53-11	001-099
	19		W2075	0009	24		SPARE	115-199
	20		W2075	0020	24		34-53-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 60

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00255		P008-00/ /		PLUG- (continued)				001-099
D00255		P8/ /		PLUG- (continued)				115-199
	20		W2075	0010	24		34-53-11	115-199
	21		W2075	0012	22		33-16-51	001-099
	21		W2075	0012	22		33-16-11	115-199
	22		W2075	5001R	24		34-53-11	ALL
	23		W2075	5001B	24		34-53-11	ALL
	24		W2075	0024	24		34-53-11	ALL
			W2075	0100	20		34-53-11	001-099
			W2075	5001Z			34-53-11	ALL
			W2075	0100	22		34-53-11	115-199
D00257		P008-00/ /		PLUG-				001-099
D00257		P8/ /		PLUG-				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W2077	0003	22		34-53-21	ALL
	4		W2077	0004	20		34-53-21	ALL
	5		W2077	0005	22		34-53-21	ALL
	6		W2077	0006	20		34-53-21	001-099
	6		W2077	0016	20		34-53-21	115-199
	7		W2077	0007	24		34-53-21	001-099
	7		W2077	0017	24		34-53-21	115-199
	8		W2077	0008	20		34-53-21	001-099
	8		W2077	0006	20		34-53-21	115-199
	9		W2077	0009	24		34-53-21	001-099
	9		W2077	0008	24		34-53-21	115-199
	10		W2077	0010	24		34-53-21	001-099
	10		W2077	0013	24		34-53-21	115-199
	11		W2077	0111	24		34-53-21	001-099
	11	UNUSED						115-199
	12		W2077	0012	24		34-53-21	001-099
	12	UNUSED						115-199
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W2077	0015	24		34-53-21	ALL
	16		W2077	0016	24		34-53-21	001-099
	16	UNUSED						115-199
	17		W2077	0017	24		34-53-21	001-099
	17		W2077	0007	22		SPARE	115-199
	18	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 61

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00257		P008-00/ /		PLUG- (continued)				001-099
D00257		P8/ /		PLUG- (continued)				115-199
	18		W2077	0011	22		33-16-41	115-199
	19		W2077	0019	24		34-53-21	001-099
	19		W2077	0009	24		SPARE	115-199
	20		W2077	0020	24		34-53-21	001-099
	20		W2077	0010	24		34-53-21	115-199
	21	UNUSED						ALL
	22		W2077	5001R	24		34-53-21	ALL
	23		W2077	5001B	24		34-53-21	ALL
	24		W2077	0024	24		34-53-21	ALL
			W2077	0100	20		34-53-21	ALL
			W2077	5001Z			34-53-21	ALL
D00259		P055-00/ /		PLUG-				ALL
	1		W2041	2001R	22		34-51-11	ALL
	2		W2041	2001B	22		34-51-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W2041	0014	22		34-51-11	ALL
	7		W2041	0013	22		34-55-11	ALL
	8		W2041	5004R	24		34-51-11	ALL
	9	UNUSED						ALL
	10		W2041	5006R	24		34-31-11	ALL
	11	UNUSED						ALL
	12		W2041	3501Y	24		23-51-12	ALL
	13	UNUSED						ALL
	14		W2041	0031	20		34-51-11	ALL
	15	UNUSED						ALL
	16		W2041	5003R	24		34-55-11	ALL
	17	UNUSED						ALL
	18		W2041	5005R	24		34-51-11	ALL
	19	UNUSED						ALL
	20		W2041	5004Z			34-51-11	ALL
	21		W2041	5004B	24		34-51-11	ALL
	22		W2041	5006B	24		34-31-11	ALL
	23		W2041	5006Z			34-31-11	ALL
	24		W2041	3501R	24		23-51-12	ALL
	25		W2041	3501B	24		23-51-12	ALL
	26		W2041	0025	24		34-22-18	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 62

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00259		P055-00/ /		PLUG- (continued)				ALL
	27		W2041	0026	24		34-22-18	ALL
	28		W2041	5003Z			34-55-11	ALL
	29		W2041	5003B	24		34-55-11	ALL
	30		W2041	5005Z			34-51-11	ALL
	31		W2041	5005B	24		34-51-11	ALL
	CAP	Y	W2041	0029	22		SPARE	115-199
	CAP	Y	W2041	0030	22		SPARE	115-199
	DED		W2041	3501Z			23-51-12	ALL
D00261		P055-00/ /		PLUG-				ALL
	1		W2051	2001R	22		34-51-21	ALL
	2		W2051	2001B	22		34-51-21	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W2051	0013	22		34-51-21	ALL
	7		W2051	0014	24		34-55-21	ALL
	8		W2051	5006R	24		34-51-21	ALL
	9	UNUSED						ALL
	10		W2051	5005R	24		34-51-21	ALL
	11	UNUSED						ALL
	12		W2051	3501Y	24		23-51-12	ALL
	13	UNUSED						ALL
	14		W2051	0012	20		34-51-21	ALL
	15	UNUSED						ALL
	16		W2051	5008R	24		34-55-21	ALL
	17	UNUSED						ALL
	18		W2051	5007R	24		34-51-21	ALL
	19	UNUSED						ALL
	20		W2051	5006Z			34-51-21	ALL
	21		W2051	5006B	24		34-51-21	ALL
	22		W2051	5005B	24		34-51-21	ALL
	23		W2051	5005Z			34-51-21	ALL
	24		W2051	3501R	24		23-51-12	ALL
	25		W2051	3501B	24		23-51-12	ALL
	26		W2051	0004	24		34-22-28	ALL
	27		W2051	0003	24		34-22-28	ALL
	28		W2051	5008Z			34-55-21	ALL
	29		W2051	5008B	24		34-55-21	ALL
	30		W2051	5007Z			34-51-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 63

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00261		P055-00/ /		PLUG- (continued)				ALL
	31		W2051	5007B	24		34-51-21	ALL
	CAP	Y	W2051	0026	22		SPARE	115-199
	DED		W2051	3501Z			23-51-12	ALL
D00263		P055-00/ /		PLUG-				ALL
	1		W2041	0022	20		33-13-41	ALL
	2		W2041	0021	20		33-13-41	ALL
	3	UNUSED						ALL
	4		W2041	0024	22		33-16-61	ALL
	5		W2041	0023	22		33-16-51	ALL
	6		W2041	0019	20		34-55-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W2041	0020	20		34-55-11	ALL
D00265		P055-00/ /		PLUG-				ALL
	1		W2051	0021	20		33-13-41	ALL
	2		W2051	0022	20		33-13-41	ALL
	3	UNUSED						ALL
	4		W2051	0017	22		33-16-41	ALL
	5		W2051	0018	22		33-16-41	ALL
	6		W2051	0015	20		34-55-21	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W2051	0016	20		34-55-21	ALL
D00267		1116/300/L5		PLUG				ALL
	1		W2727	8991R	24		34-57-11	ALL
	2		W2727	8991B	24		34-57-11	ALL
	3	UNUSED						ALL
	4		W2727	8991Y	24		34-57-11	ALL
	5		W2727	8991G	24		34-57-11	ALL
	6	UNUSED						ALL
	7		W2727	8991V	24		34-57-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 64

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00267		1116/300/L5		PLUG (continued)				ALL
	8		W2727	8991K	24		34-57-11	ALL
	9	UNUSED						ALL
	10		W2727	8991O	22		34-57-11	ALL
	11		W2727	8991N	22		34-57-11	ALL
	12		W2727	8991W	20		34-57-11	ALL
	13	UNUSED						ALL
	14		W2727	0003	20		34-57-11	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
			W2727	0001	20		34-57-11	ALL
			W2727	8991ZA			34-57-11	ALL
			W2727	8991ZB			34-57-11	ALL
			W2727	8991ZC			34-57-11	ALL
			W2727	8991Z			34-57-11	115-199
			W2727	FRAA			34-57-11	115-199
D00269		P008-00/ /		PLUG				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W2255	0002	24		34-31-11	ALL
	6	UNUSED						ALL
	7		W2255	0001	20		34-31-11	ALL
	8		W2255	2001B	22		34-31-11	ALL
	9		W2255	2001R	22		34-31-11	ALL
	10	UNUSED						ALL
	11		W2255	0003	24		34-31-11	ALL
	12		W2255	5001Z			34-31-11	ALL
	13		W2255	5001B	24		34-31-11	ALL
	14		W2255	5001R	24		34-31-11	ALL
	15	UNUSED						ALL
D00271		P008-00/ /		PLUG				ALL
	1		W2259	0004	20		33-13-52	ALL
	2		W2259	0005	20		33-13-52	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W2259	0002	24		34-31-31	ALL
	6	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 65

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00271		P008-00/ /		PLUG (continued)				ALL
	7		W2259	0001	20		34-31-31	ALL
	8		W2259	2001B	22		34-31-31	ALL
	9		W2259	2001R	22		34-31-31	ALL
	10	UNUSED						ALL
	11		W2259	0003	24		34-31-31	ALL
	12		W2259	5001Z			34-31-31	ALL
	13		W2259	5001B	24		34-31-31	ALL
	14		W2259	5001R	24		34-31-31	ALL
	15	UNUSED						ALL
D00273		P008-00/ /		PLUG				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W2257	0002	24		34-31-21	ALL
	6	UNUSED						ALL
	7		W2257	0001	20		34-31-21	ALL
	8		W2257	2001B	22		34-31-21	ALL
	9		W2257	2001R	22		34-31-21	ALL
	10	UNUSED						ALL
	11		W2257	0003	24		34-31-21	ALL
	12		W2257	5001Z			34-31-21	ALL
	13		W2257	5001B	24		34-31-21	ALL
	14		W2257	5001R	24		34-31-21	ALL
	15	UNUSED						ALL
D00275		P1-3/ /		PLUG				001-099
D00275		P001-3/ /		PLUG				115-199
	1		W0001	0119	20		33-13-12	ALL
	2		W0001	0120	20		33-13-12	ALL
	3		W0001	3005R	22		34-24-11	ALL
	4		W0001	3005B	22		34-24-11	ALL
	5		W0001	3005Y	22		34-24-11	ALL
	6	UNUSED						ALL
	7		W0001	2015R	24		34-24-11	ALL
	8		W0001	2015B	24		34-24-11	ALL
	9		W0001	2016R	24		34-24-11	ALL
	10		W0001	2016B	24		34-24-11	ALL
	11		W0001	2014R	24		34-24-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 66

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00275		P1-3/ /		PLUG (continued)				001-099
D00275		P001-3/ /		PLUG (continued)				115-199
	12		W0001	2014B	24		34-24-11	ALL
	13		W0001	2017R	24		34-24-11	ALL
	14		W0001	2017B	24		34-24-11	ALL
	15		W0001	0477	24		34-24-11	ALL
	16		W0001	0478	24		34-24-11	ALL
	17		W0001	0479	24		34-24-11	ALL
	18		W0001	0476	24		34-24-11	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0001	2013R	24		34-24-11	ALL
	22		W0001	2013B	24		34-24-11	ALL
	23	UNUSED						ALL
	24		W0001	0012	20		34-24-11	ALL
D00277		P1-1/ /		PLUG				001-099
D00277		P001-1/ /		PLUG				115-199
	1		W0001	0090	20		33-13-11	ALL
	2		W0001	0087	20		33-13-11	ALL
	3		W0001	0225	24		34-13-11	ALL
	4		W0001	0226	20		34-13-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0001	0227	20		34-13-11	ALL
	8		W0001	0401	24		34-13-11	ALL
	9	UNUSED						ALL
	10		W0001	0228	20		34-13-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 67

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00277		P1-1/ /		PLUG (continued)				001-099
D00277		P001-1/ /		PLUG (continued)				115-199
	24		W0001	5005R	24		22-14-11	ALL
	25		W0001	5005B	24		22-14-11	ALL
	26		W0001	5016R	24		34-13-11	ALL
	27		W0001	5016B	24		34-13-11	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W0001	5015R	24		34-13-11	ALL
	31		W0001	5015B	24		34-13-11	ALL
	DED		W0001	5005Z			22-14-11	ALL
	DED		W0001	5015Z			34-13-11	ALL
	DED		W0001	5016Z			34-13-11	ALL
D00279		P1-3/ /		PLUG				001-099
D00279		P001-3/ /		PLUG				115-199
	1		W0001	0104	20		33-13-11	ALL
	2		W0001	0105	20		33-13-11	ALL
	3		W0001	0229	24		34-13-11	ALL
	4		W0001	0230	20		34-13-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0001	0232	20		34-13-11	ALL
	8		W0001	0403	24		34-13-11	ALL
	9		W0001	0009	22		33-16-11	ALL
	10		W0001	0231	20		34-13-11	ALL
	11		W0001	0058	22		33-16-21	ALL
	12		W0001	0080	24		34-13-21	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0001	3001R	24		34-12-11	ALL
	20		W0001	3001B	24		34-12-11	ALL
	21		W0001	3001Y	24		34-12-11	ALL
	22		W0001	2001R	22		34-12-11	ALL
	23		W0001	2001B	22		34-12-11	ALL
	24		W0001	3003R	24		34-12-21	ALL
	25		W0001	3003B	24		34-12-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 68

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00279		P1-3/ /		PLUG (continued)				001-099
D00279		P001-3/ /		PLUG (continued)				115-199
	26		W0001	3003Y	24		34-12-21	ALL
	27		W0001	2003R	22		34-12-21	ALL
	28		W0001	2003B	22		34-12-21	ALL
	29	UNUSED						ALL
	30		W0001	5017R	24		34-13-11	ALL
	31		W0001	5017B	24		34-13-11	ALL
	32	UNUSED						ALL
	33		W0001	5018R	24		34-13-11	ALL
	34		W0001	5018B	24		34-13-11	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	DED		W0001	5017Z			34-13-11	ALL
	DED		W0001	5018Z			34-13-11	ALL
D00281		P1-3/ /		PLUG				001-099
D00281		P001-3/ /		PLUG				115-199
	1		W0001	0143	20		33-13-12	ALL
	2		W0001	0144	20		33-13-12	ALL
	3		W0001	0303	24		34-13-11	ALL
	4		W0001	0234	20		34-13-11	ALL
	5		W0001	0237	20		34-13-11	ALL
	6	UNUSED						115-199
	7	UNUSED						115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10		W0001	3002R	24		34-12-11	115-199
	11		W0001	3002B	24		34-12-11	115-199
	12		W0001	3002Y	24		34-12-11	115-199
	13		W0001	2002R	22		34-12-11	115-199
	14		W0001	2002B	22		34-12-11	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18		W0001	3004R	24		34-12-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 69

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00281		P1-3/ /		PLUG (continued)				001-099
D00281		P001-3/ /		PLUG (continued)				115-199
	19		W0001	3004B	24		34-12-21	115-199
	20		W0001	3004Y	24		34-12-21	115-199
	21		W0001	2004R	22		34-12-21	115-199
	22		W0001	2004B	22		34-12-21	115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
D00283		P1-3/ /		PLUG				001-099
D00283		P001-3/ /		PLUG				115-199
	1		W0001	0121	20		33-13-12	ALL
	2		W0001	0122	20		33-13-12	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0001	0239	20		34-13-11	ALL
D00285		P3-1/ /		PLUG				ALL
	1		W0003	0152	20		33-13-21	ALL
	2		W0003	0165	20		33-13-21	ALL
	3		W0003	0011	24		34-13-21	ALL
	4		W0003	0012	20		34-13-21	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0003	0013	20		34-13-21	ALL
	8		W0003	0010	24		34-13-21	ALL
	9	UNUSED						ALL
	10		W0003	0014	20		34-13-21	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 70

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00285		P3-1/ /		PLUG (continued)				ALL
	24		W0003	5016R	24		22-14-21	ALL
	25		W0003	5016B	24		22-14-21	ALL
	26		W0003	5004R	24		34-13-21	ALL
	27		W0003	5004B	24		34-13-21	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W0003	5002R	24		34-13-21	ALL
	31		W0003	5002B	24		34-13-21	ALL
	DED		W0003	5002Z			34-13-21	ALL
	DED		W0003	5004Z			34-13-21	ALL
	DED		W0003	5016Z			22-14-21	ALL
D00287		P3-3/ /		PLUG				ALL
	1		W0003	0262	20		33-13-21	ALL
	2		W0003	0263	20		33-13-21	ALL
	3		W0003	0015	24		34-13-21	ALL
	4		W0003	0016	20		34-13-21	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0003	0018	20		34-13-21	ALL
	8		W0003	0009	24		34-13-21	ALL
	9		W0003	0083	22		33-16-11	ALL
	10		W0003	0017	20		34-13-21	ALL
	11		W0003	0092	22		33-16-21	ALL
	12		W0003	0084	24		34-13-21	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0003	3002R	24		34-12-21	ALL
	20		W0003	3002B	24		34-12-21	ALL
	21		W0003	3002Y	24		34-12-21	ALL
	22		W0003	2002R	22		34-12-21	ALL
	23		W0003	2002B	22		34-12-21	ALL
	24		W0003	3001R	24		34-12-11	ALL
	25		W0003	3001B	24		34-12-11	ALL
	26		W0003	3001Y	24		34-12-11	ALL
	27		W0003	2001R	22		34-12-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 71

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00287		P3-3/ /		PLUG (continued)				ALL
	28		W0003	2001B	22		34-12-11	ALL
	29	UNUSED						ALL
	30		W0003	5003R	24		34-13-21	ALL
	31		W0003	5003B	24		34-13-21	ALL
	32	UNUSED						ALL
	33		W0003	5005R	24		34-13-21	ALL
	34		W0003	5005B	24		34-13-21	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W0003	0020	20		34-13-21	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	DED		W0003	5003Z			34-13-21	ALL
	DED		W0003	5005Z			34-13-21	ALL
D00289A		E002-01/ /		PLUG-				001-099
D00289A		E2-1/ /		PLUG-				115-199
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 72

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00289A		E002-01/ /		PLUG- (continued)				001-099
D00289A		E2-1/ /		PLUG- (continued)				115-199
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 73

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00289A		E002-01/ /		PLUG- (continued)				001-099
D00289A		E2-1/ /		PLUG- (continued)				115-199
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 74

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00289A		E002-01/ /		PLUG- (continued)				001-099
D00289A		E2-1/ /		PLUG- (continued)				115-199
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 75

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00289A		E002-01/ /		PLUG- (continued)				001-099
D00289A		E2-1/ /		PLUG- (continued)				115-199
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
D00289B		E002-01/ /		PLUG-				001-099
D00289B		E2-1/ /		PLUG-				115-199
	A01	UNUSED						ALL
	A02		W1171	5040R	24		34-12-12	ALL
	A03	UNUSED						ALL
	A04		W1171	5054R	24		34-13-11	ALL
	A05	UNUSED						ALL
	A06		W1171	2541R	24		73-21-12	ALL
	A07	UNUSED						ALL
	A08		W1171	5041R	24		34-12-12	ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						001-010, 115-199
	B01		W1171	0624	22		34-12-12	011-099
	B02		W1171	5040B	24		34-12-12	ALL
	B03	UNUSED						ALL
	B04		W1171	5054B	24		34-13-11	ALL
	B05	UNUSED						ALL
	B06		W1171	2541B	24		73-21-12	ALL
	B07	UNUSED						ALL
	B08		W1171	5041B	24		34-12-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 76

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00289B		E002-01/ /		PLUG- (continued)				001-099
D00289B		E2-1/ /		PLUG- (continued)				115-199
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						001-010, 115-199
	C01		W1171	0625	22		34-12-12	011-099
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15		W1171	0756	22		34-12-12	ALL
	D01	UNUSED						ALL
	D02		W1171	0062	22		34-12-12	001-099
	D02		W1171	0062	24		34-12-12	115-199
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06		W1171	0064	22		34-12-12	001-099
	D06		W1171	0363	22		34-12-12	115-199
	D07	UNUSED						001-010
	D07		W1171	0364	22		34-12-12	011-099, 115-199
	D08	UNUSED						001-010, 115-199
	D08		W1171	0678	22		34-12-12	011-099
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 77

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00289B		E002-01/ /		PLUG- (continued)				001-099
D00289B		E2-1/ /		PLUG- (continued)				115-199
	D13	UNUSED						ALL
	D14		W1171	0067	22		34-12-12	001-099
	D14		W1171	0067	24		34-12-12	115-199
	D15	UNUSED						001-010, 115-199
	D15		W1171	0680	22		34-12-12	011-099
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03		W1171	0065	24		34-12-12	ALL
	E04	UNUSED						ALL
	E05	UNUSED						001-010, 115-199
	E05		W1171	0679	22		34-12-12	011-099
	E06	UNUSED						001-010, 115-199
	E06		W1171	0618	24		34-12-12	011-099
	E07	UNUSED						001-008, 010
	E07		W1171	0198	22		34-12-12	009
	E07		W1171	0198	24		34-12-12	011-099, 115-199
	E08	UNUSED						001-010, 115-199
	E08		W1171	0683	22		34-12-12	011-099
	E09		W1171	0061	24		34-12-12	ALL
	E10		W1171	0058	24		34-12-12	ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14		W1171	0067	22		34-12-12	001-099
	E14		W1171	0067	24		34-12-12	115-199
	E15	UNUSED						001-010, 115-199
	E15		W1171	0681	22		34-12-12	011-099
	F01	UNUSED						ALL
	F02		W1171	0054	24		34-12-12	ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05		W1171	0056	22		34-12-12	ALL
	F06	UNUSED						001-010, 115-199
	F06		W1171	0619	24		34-12-12	011-099
	F07	UNUSED						001-010
	F07		W1171	0380	24		34-12-12	011-099, 115-199
	F08	UNUSED						001-010, 115-199
	F08		W1171	0682	22		34-12-12	011-099
	F09	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 78

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00289B		E002-01/ /		PLUG- (continued)				001-099
D00289B		E2-1/ /		PLUG- (continued)				115-199
	F10		W1171	0070	22		34-12-12	ALL
	F11		W1171	0094	24		34-12-22	ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15		W1171	0055	22		34-12-12	ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03		W1171	0063	22		34-12-12	001-099
	G03		W1171	0063	24		34-12-12	115-199
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02		W1171	3005R	24		34-12-11	ALL
	H03	UNUSED						ALL
	H04		W1171	3004R	24		34-12-11	ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08		W1171	2537R	22		34-12-11	ALL
	H09	UNUSED						ALL
	H10		W1171	3020R	24		34-12-11	001-099
	H10		W1171	3002R	24		34-12-11	115-199
	H11		W1171	3021R	24		34-12-11	001-099
	H11		W1171	3003R	24		34-12-11	115-199
	H12		W1171	3001R	24		34-12-11	ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15		W1171	0057	22		34-12-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 79

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00289B		E002-01/ /		PLUG- (continued)				001-099
D00289B		E2-1/ /		PLUG- (continued)				115-199
	J01	UNUSED						ALL
	J02		W1171	3005B	24		34-12-11	ALL
	J03	UNUSED						ALL
	J04		W1171	3004B	24		34-12-11	ALL
	J05	UNUSED						ALL
	J06		W1171	0301	22		34-12-12	ALL
	J07	UNUSED						ALL
	J08		W1171	2537B	22		34-12-11	ALL
	J09	UNUSED						ALL
	J10		W1171	3020B	24		34-12-11	001-099
	J10		W1171	3002B	24		34-12-11	115-199
	J11		W1171	3021B	24		34-12-11	001-099
	J11		W1171	3003B	24		34-12-11	115-199
	J12		W1171	3001B	24		34-12-11	ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						001-010, 115-199
	J15		W1171	0692	22		34-12-12	011-099
	K01	UNUSED						ALL
	K02		W1171	3005Y	24		34-12-11	ALL
	K03	UNUSED						ALL
	K04		W1171	3004Y	24		34-12-11	ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08		W1171	2537Z			34-12-11	ALL
	K09	UNUSED						ALL
	K10		W1171	3020Y	24		34-12-11	001-099
	K10		W1171	3002Y	24		34-12-11	115-199
	K11		W1171	3021Y	24		34-12-11	001-099
	K11		W1171	3003Y	24		34-12-11	115-199
	K12		W1171	3001Y	24		34-12-11	ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						001-010, 115-199
	K15		W1171	0685	22		34-12-12	011-099
	DED		W1171	2541Z			73-21-12	ALL
	DED		W1171	5040Z			34-12-12	ALL
	DED		W1171	5041Z			34-12-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 80

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00289B		E002-01/ /		PLUG- (continued)				001-099
D00289B		E2-1/ /		PLUG- (continued)				115-199
	DED		W1171	5054Z			34-13-11	ALL
D00289C		E002-01/ /		PLUG-				001-099
D00289C		E2-1/ /		PLUG-				115-199
	1		W1171	0392	22		34-12-11	001-099
	1		W1171	1003	22		34-12-11	115-199
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1171	0317	22		34-12-11	ALL
	5		W1171	0303	22		34-12-11	ALL
	6		W1171	0316	22		34-12-11	ALL
	7		W1171	0075	16		34-12-11	ALL
	8		W1171	0076	16		34-12-11	ALL
	9		W1171	0302	22		34-12-11	ALL
	10		W1171	0315	22		34-12-11	ALL
	11		W1171	0314	22		34-12-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
	DED		W1171	1003Z			34-12-11	115-199
D00291A		E002-02/ /		PLUG-				001-099
D00291A		E2-2/ /		PLUG-				115-199
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 81

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00291A		E002-02/ /		PLUG- (continued)				001-099
D00291A		E2-2/ /		PLUG- (continued)				115-199
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 82

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00291A		E002-02/ /		PLUG- (continued)				001-099
D00291A		E2-2/ /		PLUG- (continued)				115-199
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 83

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00291A		E002-02/ /		PLUG- (continued)				001-099
D00291A		E2-2/ /		PLUG- (continued)				115-199
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 84

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00291A		E002-02/ /		PLUG- (continued)				001-099
D00291A		E2-2/ /		PLUG- (continued)				115-199
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
D00291B		E002-02/ /		PLUG-				001-099
D00291B		E2-2/ /		PLUG-				115-199
	A01	UNUSED						ALL
	A02		W1173	5062R	24		34-12-22	ALL
	A03	UNUSED						ALL
	A04		W1173	5138R	24		34-12-22	ALL
	A05	UNUSED						ALL
	A06		W1173	2539R	24		73-21-12	ALL
	A07	UNUSED						ALL
	A08		W1173	5017R	24		34-12-22	ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						001-010, 115-199
	B01		W1173	0427	22		34-12-22	011-099
	B02		W1173	5062B	24		34-12-22	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 85

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00291B		E002-02/ /		PLUG- (continued)				001-099
D00291B		E2-2/ /		PLUG- (continued)				115-199
	B03	UNUSED						ALL
	B04		W1173	5138B	24		34-12-22	ALL
	B05	UNUSED						ALL
	B06		W1173	2539B	24		73-21-12	ALL
	B07	UNUSED						ALL
	B08		W1173	5017B	24		34-12-22	ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						001-010, 115-199
	C01		W1173	0428	22		34-12-22	011-099
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15		W1173	0458	22		34-12-22	ALL
	D01	UNUSED						ALL
	D02		W1173	0307	22		34-12-22	ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						001-010
	D06		W1173	0309	22		34-12-22	011-099, 115-199
	D07		W1173	0181	22		34-12-22	001-099
	D07		W1173	0310	22		34-12-22	115-199
	D08	UNUSED						001-010, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 86

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00291B		E002-02/ /		PLUG- (continued)				001-099
D00291B		E2-2/ /		PLUG- (continued)				115-199
	D08		W1173	0430	22		34-12-22	011-099
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14		W1173	0182	22		34-12-22	ALL
	D15	UNUSED						001-010, 115-199
	D15		W1173	0432	22		34-12-22	011-099
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03		W1173	0159	24		34-12-22	ALL
	E04	UNUSED						ALL
	E05	UNUSED						001-010, 115-199
	E05		W1173	0431	22		34-12-22	011-099
	E06	UNUSED						001-010, 115-199
	E06		W1173	0425	24		34-12-22	011-099
	E07	UNUSED						001-008, 010
	E07		W1173	0296	22		34-12-22	009, 115-199
	E07		W1173	0296	24		34-12-22	011-099
	E08	UNUSED						001-010, 115-199
	E08		W1173	0435	22		34-12-22	011-099
	E09	UNUSED						ALL
	E10		W1173	0184	22		34-12-22	001-099
	E10		W1173	0184	24		34-12-22	115-199
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14		W1173	0182	22		34-12-22	ALL
	E15	UNUSED						001-010, 115-199
	E15		W1173	0433	22		34-12-22	011-099
	F01	UNUSED						ALL
	F02		W1173	0176	24		34-12-22	ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05		W1173	0172	22		34-12-22	ALL
	F06	UNUSED						001-010, 115-199
	F06		W1173	0426	24		34-12-22	011-099
	F07	UNUSED						001-010, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 87

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00291B		E002-02/ /		PLUG- (continued)				001-099
D00291B		E2-2/ /		PLUG- (continued)				115-199
	F07		W1173	0345	24		34-12-22	011-099
	F08	UNUSED						001-010, 115-199
	F08		W1173	0434	22		34-12-22	011-099
	F09		W1173	0179	24		34-12-22	ALL
	F10		W1173	0177	24		34-12-22	ALL
	F11		W1173	0174	24		34-12-22	ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15		W1173	0171	22		34-12-22	ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03		W1173	0308	22		34-12-22	ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15		W1173	0173	22		34-12-22	ALL
	H01	UNUSED						ALL
	H02		W1173	3004R	24		34-12-21	ALL
	H03	UNUSED						ALL
	H04		W1173	3005R	24		34-12-21	ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08		W1173	5066R	22		34-12-21	ALL
	H09	UNUSED						ALL
	H10		W1173	3003R	24		34-12-21	ALL
	H11		W1173	3017R	24		34-12-21	001-099
	H11		W1173	3002R	24		34-12-21	115-199
	H12		W1173	3016R	24		34-12-21	001-099
	H12		W1173	3001R	24		34-12-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 88

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00291B		E002-02/ /		PLUG- (continued)				001-099
D00291B		E2-2/ /		PLUG- (continued)				115-199
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02		W1173	3004B	24		34-12-21	ALL
	J03	UNUSED						ALL
	J04		W1173	3005B	24		34-12-21	ALL
	J05	UNUSED						ALL
	J06		W1173	0183	22		34-12-22	ALL
	J07	UNUSED						ALL
	J08		W1173	5066B	22		34-12-21	ALL
	J09	UNUSED						ALL
	J10		W1173	3003B	24		34-12-21	ALL
	J11		W1173	3017B	24		34-12-21	001-099
	J11		W1173	3002B	24		34-12-21	115-199
	J12		W1173	3016B	24		34-12-21	001-099
	J12		W1173	3001B	24		34-12-21	115-199
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						001-010, 115-199
	J15		W1173	0437	22		34-12-22	011-099
	K01	UNUSED						ALL
	K02		W1173	3004Y	24		34-12-21	ALL
	K03	UNUSED						ALL
	K04		W1173	3005Y	24		34-12-21	ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08		W1173	5066Z			34-12-21	ALL
	K09	UNUSED						ALL
	K10		W1173	3003Y	24		34-12-21	ALL
	K11		W1173	3017Y	24		34-12-21	001-099
	K11		W1173	3002Y	24		34-12-21	115-199
	K12		W1173	3016Y	24		34-12-21	001-099
	K12		W1173	3001Y	24		34-12-21	115-199
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						001-010, 115-199
	K15		W1173	0438	22		34-12-22	011-099

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 89

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00291B		E002-02/ /		PLUG- (continued)				001-099
D00291B		E2-2/ /		PLUG- (continued)				115-199
	DED		W1173	2539Z			73-21-12	ALL
	DED		W1173	5017Z			34-12-22	ALL
	DED		W1173	5062Z			34-12-22	ALL
	DED		W1173	5138Z			34-12-22	ALL
D00291C		E002-02/ /		PLUG-				001-099
D00291C		E2-2/ /		PLUG-				115-199
	1		W1173	0277	22		34-12-21	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1173	0197	22		34-12-21	ALL
	5		W1173	0191	22		34-12-21	ALL
	6		W1173	0190	22		34-12-21	ALL
	7		W1173	0276	16		34-12-21	ALL
	8		W1173	0192	16		34-12-21	ALL
	9		W1173	0196	22		34-12-21	ALL
	10		W1173	0201	22		34-12-21	ALL
	11		W1173	0288	22		34-12-21	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
D00293		228/197/R047		PLUG				ALL
	1		W2277	2002R	22		34-12-21	ALL
	2		W2277	2002B	22		34-12-21	ALL
	3		W2277	3002R	24		34-12-21	ALL
	4		W2277	3002B	24		34-12-21	ALL
	5		W2277	3002Y	24		34-12-21	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W2277	0007	22		30-32-11	ALL
	9		W2277	0009	22		30-32-11	ALL
	10		W2277	0010	22		30-32-11	ALL
	11	UNUSED						ALL
	12		W2277	0012	20		30-32-11	ALL
D00295		228/197/L047		PLUG				ALL
	1		W2269	2001R	22		34-12-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 90

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00295		228/197/L047		PLUG (continued)				ALL
	2		W2269	2001B	22		34-12-11	ALL
	3		W2269	3001R	24		34-12-11	ALL
	4		W2269	3001B	24		34-12-11	ALL
	5		W2269	3001Y	24		34-12-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W2269	0007	22		30-32-11	ALL
	9		W2269	0009	22		30-32-11	ALL
	10		W2269	0010	22		30-32-11	ALL
	11	UNUSED						ALL
	12		W2269	0012	20		30-32-11	ALL
D00299A		E004-03/ /		PLUG				001-099
D00299A		E6-3/ /		PLUG-				115-199
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 91

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00299A		E004-03/ /		PLUG (continued)				001-099
D00299A		E6-3/ /		PLUG- (continued)				115-199
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 92

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00299A		E004-03/ /		PLUG (continued)				001-099
D00299A		E6-3/ /		PLUG- (continued)				115-199
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 93

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00299A		E004-03/ /		PLUG (continued)				001-099
D00299A		E6-3/ /		PLUG- (continued)				115-199
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 94

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00299A		E004-03/ /		PLUG (continued)				001-099
D00299A		E6-3/ /		PLUG- (continued)				115-199
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
D00299B		E004-03/ /		PLUG				001-099
D00299B		E6-3/ /		PLUG-				115-199
	71	5E	W1163	003CX			23-11-11	001-099
	71	5E	W1017	001CX			23-11-11	115-199
	A01		W1163	2029R	24		23-51-14	001-099
	A01		W1017	2502R	24		23-51-14	115-199
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	B01		W1163	2029B	24		23-51-14	001-099
	B01		W1017	2502B	24		23-51-14	115-199
	B02		W1163	0454	22		23-51-14	001-099
	B02		W1017	0007	22		23-51-14	115-199
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05		W1163	0566	22		23-11-11	001-099
	B05		W1017	0016	22		23-11-11	115-199
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	C01		W1163	0569	22		23-11-11	001-099
	C01		W1017	0019	22		23-11-11	115-199
	C02	UNUSED						ALL
	C03		W1163	2025R	24		23-21-11	001-099
	C03		W1017	2001R	24		23-21-11	115-199
	C04	UNUSED						ALL
	C05		W1163	0567	22		23-11-11	001-099
	C05		W1017	0017	22		23-11-11	115-199
	C06	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 95

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00299B		E004-03/ /		PLUG (continued)				001-099
D00299B		E6-3/ /		PLUG- (continued)				115-199
	C07	UNUSED						ALL
	D01		W1163	2028R	24		23-51-14	001-099
	D01		W1017	2503R	24		23-51-14	115-199
	D02		W1163	0561	22		23-11-11	001-099
	D02		W1017	0011	22		23-11-11	115-199
	D03		W1163	2025B	24		23-21-11	001-099
	D03		W1017	2001B	24		23-21-11	115-199
	D04	UNUSED						ALL
	D05		W1163	0558	22		23-11-11	001-099
	D05		W1017	0008	22		23-11-11	115-199
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	E01		W1163	2028B	24		23-51-14	001-099
	E01		W1017	2503B	24		23-51-14	115-199
	E02		W1163	0435	24		31-31-61	001-099
	E02	UNUSED						115-199
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05		W1163	0560	22		23-11-11	001-099
	E05		W1017	0010	22		23-11-11	115-199
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05		W1163	0559	22		23-11-11	001-099
	F05		W1017	0009	22		23-11-11	115-199
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03		W1163	2526R	24		23-11-11	001-099
	G03		W1017	2501R	24		23-11-11	115-199
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	H01	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 96

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00299B		E004-03/ /		PLUG (continued)				001-099
D00299B		E6-3/ /		PLUG- (continued)				115-199
	H02	UNUSED						ALL
	H03		W1163	2526B	24		23-11-11	001-099
	H03		W1017	2501B	24		23-11-11	115-199
	H04	UNUSED						ALL
	H05		W1163	0568	22		23-11-11	001-099
	H05		W1017	0018	22		23-11-11	115-199
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						001-099
	J05		W1017	0042	22		23-11-11	115-199
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	=C71		W1163	003CO			23-11-11	001-099
	=C71		W1017	001CO			23-11-11	115-199
	DED		W1163	2526Z			23-11-11	001-099
	DED		W1017	2502Z			23-51-14	115-199
	DED		W1017	2503Z			23-51-14	115-199
			W1017	0006	20		23-11-11	115-199
			W1017	2501Z			23-11-11	115-199
D00299C		E004-03/ /		PLUG				001-099
D00299C		E6-3/ /		PLUG-				115-199
	1		W1163	0564	20		23-11-11	001-099
	1		W1017	0014	20		23-11-11	115-199
	2		W1163	0551	20		23-11-11	001-099
	2		W1017	0001	20		23-11-11	115-199
	3		W1163	0552	20		23-11-11	001-099
	3		W1017	0002	20		23-11-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 97

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00299C		E004-03/ /		PLUG (continued)				001-099
D00299C		E6-3/ /		PLUG- (continued)				115-199
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1163	0553	20		23-11-11	001-099
	7		W1017	0003	20		23-11-11	115-199
	8		W1163	0554	20		23-11-11	001-099
	8		W1017	0004	20		23-11-11	115-199
	9		W1163	0565	20		23-11-11	001-099
	9		W1017	0015	20		23-11-11	115-199
	10		W1163	0555	20		23-11-11	001-099
	10		W1017	0005	20		23-11-11	115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	=C12	UNUSED						ALL
	=C13	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00200

Page 98 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00301A		E003-02/ /		PLUG-				001-099
D00301A		E6-3/ /		PLUG				115-199
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00301A		E003-02/ /		PLUG- (continued)				001-099
D00301A		E6-3/ /		PLUG (continued)				115-199
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00301A		E003-02/ /		PLUG- (continued)				001-099
D00301A		E6-3/ /		PLUG (continued)				115-199
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00301A		E003-02/ /		PLUG- (continued)				001-099
D00301A		E6-3/ /		PLUG (continued)				115-199
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
D00301B		E003-02/ /		PLUG-				001-099
D00301B		E6-3/ /		PLUG				115-199
	71		W1423	021CX			23-11-21	001-099
	71		W1017	002CX			23-11-21	115-199
	A01		W1423	2702R	24		23-51-14	001-099

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 4

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00301B		E003-02/ /		PLUG- (continued)				001-099
D00301B		E6-3/ /		PLUG (continued)				115-199
	A01		W1017	2505R	24		23-51-14	115-199
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	B01		W1423	2702B	24		23-51-14	001-099
	B01		W1017	2505B	24		23-51-14	115-199
	B02		W1423	0207	22		23-51-14	001-099
	B02		W1017	0044	22		23-51-14	115-199
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05		W1423	0216	22		23-11-21	001-099
	B05		W1017	0036	22		23-11-21	115-199
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	C01		W1423	0219	22		23-11-21	001-099
	C01		W1017	0039	22		23-11-21	115-199
	C02	UNUSED						ALL
	C03		W1423	2201R	24		23-21-11	001-099
	C03		W1017	2002R	24		23-21-11	115-199
	C04	UNUSED						ALL
	C05		W1423	0217	22		23-11-21	001-099
	C05		W1017	0037	22		23-11-21	115-199
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	D01		W1423	2703R	24		23-51-14	001-099
	D01		W1017	2506R	24		23-51-14	115-199
	D02		W1423	0211	22		23-11-21	001-099
	D02		W1017	0031	22		23-11-21	115-199
	D03		W1423	2201B	24		23-21-11	001-099
	D03		W1017	2002B	24		23-21-11	115-199
	D04	UNUSED						ALL
	D05		W1423	0208	22		23-11-21	001-099
	D05		W1017	0028	22		23-11-21	115-199
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	E01		W1423	2703B	24		23-51-14	001-099

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 5

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00301B		E003-02/ /		PLUG- (continued)				001-099
D00301B		E6-3/ /		PLUG (continued)				115-199
	E01		W1017	2506B	24		23-51-14	115-199
	E02		W1423	0030	24		31-31-61	001-099
	E02	UNUSED						115-199
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05		W1423	0210	22		23-11-21	001-099
	E05		W1017	0030	22		23-11-21	115-199
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05		W1423	0209	22		23-11-21	001-099
	F05		W1017	0029	22		23-11-21	115-199
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03		W1423	2701R	24		23-11-21	001-099
	G03		W1017	2504R	24		23-11-21	115-199
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03		W1423	2701B	24		23-11-21	001-099
	H03		W1017	2504B	24		23-11-21	115-199
	H04	UNUSED						ALL
	H05		W1423	0218	22		23-11-21	001-099
	H05		W1017	0038	22		23-11-21	115-199
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 6

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00301B		E003-02/ /		PLUG- (continued)				001-099
D00301B		E6-3/ /		PLUG (continued)				115-199
	J05		W1017	0041	22		23-11-21	115-199
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	= C71		W1423	021CO			23-11-21	001-099
	= C71		W1017	002CO			23-11-21	115-199
	DED		W1423	2701Z			23-11-21	001-099
	DED		W1423	2702Z			23-51-14	001-099
	DED		W1423	2703Z			23-51-14	001-099
	DED		W1017	2505Z			23-51-14	115-199
	DED		W1017	2506Z			23-51-14	115-199
			W1017	0027	20		23-11-21	115-199
			W1017	2504Z			23-11-21	115-199
D00301C		E003-02/ /		PLUG-				001-099
D00301C		E6-3/ /		PLUG				115-199
	1		W1423	0214	20		23-11-21	001-099
	1		W1017	0034	20		23-11-21	115-199
	2		W1423	0201	20		23-11-21	001-099
	2		W1017	0022	20		23-11-21	115-199
	3		W1423	0202	20		23-11-21	001-099
	3		W1017	0023	20		23-11-21	115-199
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1423	0203	20		23-11-21	001-099
	7		W1017	0024	20		23-11-21	115-199
	8		W1423	0204	20		23-11-21	001-099
	8		W1017	0025	20		23-11-21	115-199
	9		W1423	0215	20		23-11-21	001-099
	9		W1017	0035	20		23-11-21	115-199
	10		W1423	0205	20		23-11-21	001-099
	10		W1017	0026	20		23-11-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 7

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00301C		E003-02/ /		PLUG- (continued)				001-099
D00301C		E6-3/ /		PLUG (continued)				115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	=C12	UNUSED						ALL
	=C13	UNUSED						ALL
D00307		FSS225/ /		PLUG-				ALL
	A		W3133	0006	20		23-11-11	ALL
	B	UNUSED						ALL
	C	UNUSED						ALL
	D		W3133	0011	20		23-11-11	ALL
	E	UNUSED						ALL
	F		W3133	0001	20		23-11-11	ALL
	G		W3133	0012	20		23-11-11	ALL
	H		W3133	0002	20		23-11-11	ALL
	J		W3133	0008	20		23-11-11	ALL
	K		W3133	0005	20		23-11-11	ALL
	L		W3133	0003	20		23-11-11	ALL
	M	UNUSED						ALL
	N	UNUSED						ALL
	P	UNUSED						ALL
	R		W3133	0007	20		23-11-11	ALL
	S		W3133	0004	20		23-11-11	ALL
	T	UNUSED						ALL
	U	UNUSED						ALL
	V	UNUSED						ALL
	W	UNUSED						ALL
	X		W3133	0009	20		23-11-11	ALL
	Y		W3133	0010	20		23-11-11	ALL
	Z	UNUSED						ALL
	CAP	Y	W3133	0013	20		SPARE	001-099
	CAP	Y	W3133	0014	20		SPARE	001-099
	CAP	Y	W3133	0015	20		SPARE	001-099
	A-	UNUSED						ALL
	B-	UNUSED						ALL
	C-	UNUSED						ALL
D00309		FSS280/ /		PLUG-				ALL
	A		W3135	0006	20		23-11-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 8

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00309		FSS280/ /		PLUG- (continued)				ALL
	B	UNUSED						ALL
	C	UNUSED						ALL
	D		W3135	0011	20		23-11-21	ALL
	E	UNUSED						ALL
	F		W3135	0001	20		23-11-21	ALL
	G		W3135	0012	20		23-11-21	ALL
	H		W3135	0002	20		23-11-21	ALL
	J		W3135	0008	20		23-11-21	ALL
	K		W3135	0005	20		23-11-21	ALL
	L		W3135	0003	20		23-11-21	ALL
	M	UNUSED						ALL
	N	UNUSED						ALL
	P	UNUSED						ALL
	R		W3135	0007	20		23-11-21	ALL
	S		W3135	0004	20		23-11-21	ALL
	T	UNUSED						ALL
	U	UNUSED						ALL
	V	UNUSED						ALL
	W	UNUSED						ALL
	X		W3135	0009	20		23-11-21	001-099
	X		W3135	0009	20		23-11-11	115-199
	Y		W3135	0010	20		23-11-21	001-099
	Y		W3135	0010	20		23-11-11	115-199
	Z	UNUSED						ALL
	CAP	Y	W3135	0013	20		SPARE	ALL
	CAP	Y	W3135	0014	20		SPARE	ALL
	CAP	Y	W3135	0015	20		SPARE	ALL
	A-	UNUSED						ALL
	B-	UNUSED						ALL
	C-	UNUSED						ALL
D00311		P005-00/ /		PLUG-				001-099
D00311		P5/ /		PLUG-				115-199
	1		W2343	0001	20		33-13-31	ALL
	2		W2343	0002	20		33-13-31	ALL
	3		W2343	0009	20		23-11-11	ALL
	4		W2343	0010	20		23-11-11	ALL
	5		W2343	0005	22		23-11-11	ALL
	6	UNUSED						ALL
	7		W2343	0007	22		23-11-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 9

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00311		P005-00/ /		PLUG- (continued)				001-099
D00311		P5/ /		PLUG- (continued)				115-199
	8		W2343	0008	22		23-11-11	ALL
	9		W2343	2501R	24		23-11-11	ALL
	10		W2343	2501B	24		23-11-11	ALL
	11		W2343	0011	22		23-11-11	ALL
	12		W2343	0006	22		23-11-11	ALL
	13		W2343	0003	22		23-11-11	ALL
	14		W2343	0004	22		23-11-11	ALL
	15		W2343	0012	22		23-11-11	ALL
D00313		P005-00/ /		PLUG-				001-099
D00313		P5/ /		PLUG-				115-199
	1		W2345	0001	20		33-13-31	ALL
	2		W2345	0002	20		33-13-31	ALL
	3		W2345	0009	20		23-11-21	ALL
	4		W2345	0010	20		23-11-21	ALL
	5		W2345	0005	22		23-11-21	ALL
	6	UNUSED						ALL
	7		W2345	0007	22		23-11-21	ALL
	8		W2345	0008	22		23-11-21	ALL
	9		W2345	2501R	24		23-11-21	ALL
	10		W2345	2501B	24		23-11-21	ALL
	11		W2345	0011	22		23-11-21	ALL
	12		W2345	0006	22		23-11-21	ALL
	13		W2345	0003	22		23-11-21	ALL
	14		W2345	0004	22		23-11-21	ALL
	15		W2345	0012	22		23-11-21	ALL
D00315		FIN225/FS/		PLUG-				ALL
	= A1		W3107	001CX			23-11-11	ALL
	= C1		W3107	001CO			23-11-11	ALL
D00317		FSS280/ /		PLUG-				ALL
	= A1		W3117	001CX			23-11-21	ALL
	= C1		W3117	001CO			23-11-21	ALL
D00319A		E4-2/ /		PLUG-				ALL
	A01		W1275	2582T	24		31-41-21	ALL
	A02		W1275	2582W	24		31-41-21	ALL
	A03		W1275	5882	24		31-41-14	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 10

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00319A		E4-2/ /		PLUG- (continued)				ALL
	A04		W1275	2530W	24		31-41-11	ALL
	A05		W1275	2532W	24		31-41-11	ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11		W1275	2585W	24		31-41-21	ALL
	A12		W1275	2578W	24		31-41-21	ALL
	A13		W1275	2580W	24		31-41-21	ALL
	A14		W1275	2579W	24		31-41-21	ALL
	A15		W1275	2581W	24		31-41-21	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03		W1275	5878	24		31-41-14	ALL
	B04		W1275	2530T	24		31-41-11	ALL
	B05		W1275	2532T	24		31-41-11	ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11		W1275	2585T	24		31-41-21	ALL
	B12		W1275	2578T	24		31-41-21	ALL
	B13		W1275	2580T	24		31-41-21	ALL
	B14		W1275	2579T	24		31-41-21	ALL
	B15		W1275	2581T	24		31-41-21	ALL
	C01		W1275	2533T	24		31-41-11	ALL
	C02		W1275	2533W	24		31-41-11	ALL
	C03		W1275	5880	24		31-41-14	ALL
	C04		W1275	5884	24		31-41-14	ALL
	C05		W1275	5886	24		31-41-14	ALL
	C06		W1275	5888	24		31-41-14	ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10		W1275	2536T	24		31-41-11	ALL
	C11		W1275	2536W	24		31-41-11	ALL
	C12		W1275	2529T	24		31-41-11	ALL
	C13		W1275	2529W	24		31-41-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 11

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00319A		E4-2/ /		PLUG- (continued)				ALL
	C14		W1275	2531T	24		31-41-11	ALL
	C15		W1275	2531W	24		31-41-11	ALL
	D01		W1275	5736	24		30-31-11	ALL
	D02		W1275	0226	24		30-41-11	ALL
	D03		W1275	6242	24		32-42-11	ALL
	D04		W1275	5634	24		24-33-11	ALL
	D05		W1275	5753	24		21-51-25	ALL
	D06		W1275	0003	24		21-25-11	ALL
	D07		W1275	5796	24		22-21-21	ALL
	D08		W1275	5741	24		21-51-15	ALL
	D09		W1275	0631	24		21-58-13	ALL
	D10		W1275	6232	24		32-61-12	ALL
	D11		W1275	0286	24		27-41-11	ALL
	D12		W1275	2507B	24		77-12-31	ALL
	D13		W1275	0064	24		52-71-21	ALL
	D14		W1275	0061	24		52-71-21	ALL
	D15		W1275	2050R	24		21-52-11	001-099
	D15	UNUSED						115-199
	E01	UNUSED						ALL
	E02	UNUSED						001-099
	E02		W1275	0419	24		32-46-11	115-199
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05		W1275	5665	24		24-51-14	ALL
	E06		W1275	5744	24		21-51-15	ALL
	E07		W1275	0002	24		21-25-11	ALL
	E08		W1275	0081	24		77-12-11	ALL
	E09		W1275	0540	24		31-41-19	ALL
	E10		W1275	5875	24		31-41-14	ALL
	E11		W1275	0634	24		21-58-13	ALL
	E12		W1275	5038R	24		31-41-13	ALL
	E13	UNUSED						ALL
	E14		W1275	2052R	24		21-52-11	001-099
	E14	UNUSED						115-199
	E15		W1275	2050B	24		21-52-11	001-099
	E15	UNUSED						115-199
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03		W1275	0852	24		29-33-11	ALL
	F04		W1275	0846	24		29-33-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 12

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00319A		E4-2/ /		PLUG- (continued)				ALL
	F05		W1275	0861	24		29-33-11	ALL
	F06		W1275	2048B	24		21-52-11	ALL
	F07		W1275	2048R	24		21-52-11	ALL
	F08		W1275	5876	24		31-41-14	ALL
	F09		W1275	0301	24		35-11-13	ALL
	F10	UNUSED						001-099
	F10		W1275	0416	24		32-46-11	115-199
	F11		W1275	2507R	24		77-12-31	ALL
	F12		W1275	5038B	24		31-41-13	ALL
	F13		W1275	0369	24		21-33-12	ALL
	F14		W1275	2052B	24		21-52-11	001-099
	F14	UNUSED						115-199
	F15		W1275	0065	24		52-71-21	ALL
	G01		W1275	0381	24		34-21-11	ALL
	G02		W1275	0674	24		26-11-21	001-099
	G02		W1275	0677	24		26-11-21	115-199
	G03		W1275	0956	24		32-44-11	ALL
	G04		W1275	0667	24		26-11-12	ALL
	G05		W1275	0384	24		34-21-11	ALL
	G06		W1275	0344	24		32-42-12	ALL
	G07		W1275	0700	24		26-12-11	ALL
	G08		W1275	0378	24		34-21-11	ALL
	G09		W1275	0964	24		27-62-11	ALL
	G10		W1275	5750	24		21-51-25	ALL
	G11		W1275	6039	24		29-11-31	ALL
	G12		W1275	6234	24		32-61-12	ALL
	G13		W1275	0577	24		34-61-15	ALL
	G14		W1275	0628	24		21-58-21	ALL
	G15		W1275	0169	24		31-51-41	ALL
	H01	UNUSED						ALL
	H02		W1275	0873	24		29-35-11	ALL
	H03		W1275	0111	24		79-33-11	ALL
	H04		W1275	0116	24		79-35-11	ALL
	H05		W1275	6300	24		75-31-11	001-009
	H05	UNUSED						010-099
	H05		W1275	0476	24		75-31-11	115-199
	H06		W1275	6058	24		26-16-11	ALL
	H07		W1275	0090	24		26-13-11	ALL
	H08	UNUSED						ALL
	H09		W1275	6141	24		27-23-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 13

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00319A		E4-2/ /		PLUG- (continued)				ALL
	H10		W1275	2524B	24		79-34-11	ALL
	H11		W1275	2524R	24		79-34-11	ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14		W1275	6414	24		27-09-14	ALL
	H15		W1275	6122	24		31-51-41	ALL
	J01		W1275	5070R	24		77-11-11	ALL
	J02		W1275	5070B	24		77-11-11	ALL
	J03		W1275	5018B	24		77-11-11	ALL
	J04		W1275	5018R	24		77-11-11	ALL
	J05		W1275	2521B	24		77-12-21	ALL
	J06		W1275	2521R	24		77-12-21	ALL
	J07		W1275	3005Y	24		73-31-11	ALL
	J08		W1275	3005R	24		73-31-11	ALL
	J09		W1275	3005B	24		73-31-11	ALL
	J10	UNUSED						ALL
	J11		W1275	0076	24		73-33-11	ALL
	J12	UNUSED						ALL
	J13		W1275	5964	24		31-41-34	ALL
	J14		W1275	0087	24		31-31-01	001-099
	J14		W1275	0087	24		31-31-13	115-199
	J15		W1275	0009	24		21-44-11	ALL
	K01		W1275	6098	24		31-41-14	ALL
	K02		W1275	0785	24		29-11-12	ALL
	K03		W1275	5558	24		29-32-31	ALL
	K04		W1275	0839	24		29-32-21	ALL
	K05	UNUSED						001-008, 115-199
	K05		W1275	0893	24		28-22-31	009-099
	K06		W1275	6230	24		32-61-12	ALL
	K07		W1275	0074	24		73-33-11	ALL
	K08		W1275	0843	24		29-32-21	ALL
	K09		W1275	6099	24		31-41-14	ALL
	K10	UNUSED						ALL
	K11		W1275	0779	24		29-11-12	ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14		W1275	0626	24		21-58-21	ALL
	K15		W1275	5912	22		31-41-14	ALL
	DED		W1275	2507Z			77-12-31	ALL
	DED		W1275	2521Z			77-12-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 14

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00319A		E4-2/ /		PLUG- (continued)				ALL
	DED		W1275	2524Z			79-34-11	ALL
	DED		W1275	5018Z			77-11-11	ALL
	DED		W1275	5038Z			31-41-13	ALL
	DED		W1275	5070Z			77-11-11	ALL
	DED		W1275	5796Z			22-21-21	115-199
	REF	VM	W1275	0991	24		34-45-02	001-002
	REF	VP	W1275	0991	24		34-45-02	115-199
D00319B		E4-2/ /		PLUG-				ALL
	A01		W1275	2534T	24		31-41-11	ALL
	A02		W1275	2535T	24		31-41-11	ALL
	A03		W1275	2583T	24		31-41-21	ALL
	A04		W1275	2584W	24		31-41-21	ALL
	A05		W1275	0062	24		52-71-21	ALL
	A06		W1275	0023	24		52-71-11	ALL
	A07		W1275	0066	24		52-71-21	001-099
	A07	UNUSED						115-199
	A08	UNUSED						ALL
	A09		W1275	5001R	24		31-31-41	001-099
	A09		W1275	5001R	24		31-31-21	115-199
	A10		W1275	0033	24		52-71-11	ALL
	A11		W1275	0031	24		52-71-11	ALL
	A12	UNUSED						ALL
	A13		W1275	0342	24		49-61-11	ALL
	A14	UNUSED						ALL
	A15		W1275	4505G	22		77-21-11	ALL
	B01		W1275	2534W	24		31-41-11	ALL
	B02		W1275	2535W	24		31-41-11	ALL
	B03		W1275	2583W	24		31-41-21	ALL
	B04		W1275	2584T	24		31-41-21	ALL
	B05		W1275	0142	24		24-11-11	ALL
	B06		W1275	5900	24		31-41-14	ALL
	B07		W1275	0025	24		52-71-11	ALL
	B08	UNUSED						ALL
	B09		W1275	5001B	24		31-31-41	001-099
	B09		W1275	5001B	24		31-31-21	115-199
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12		W1275	0029	24		52-71-11	ALL
	B13		W1275	0118	24		36-11-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 15

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00319B		E4-2/ /		PLUG- (continued)				ALL
	B14	UNUSED						ALL
	B15		W1275	4505W	22		77-21-11	ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						001-099
	C05		W1275	0066	24		52-71-21	115-199
	C06		W1275	5897	24		31-41-14	ALL
	C07	UNUSED						001-099
	C07		W1275	5976	24		52-71-21	115-199
	C08		W1275	0178	24		31-51-11	ALL
	C09		W1275	5896	24		31-41-14	ALL
	C10		W1275	5049R	24		34-61-14	ALL
	C11		W1275	5049B	24		34-61-14	ALL
	C12		W1275	5059R	24		31-41-13	ALL
	C13		W1275	5059B	24		31-41-13	ALL
	C14		W1275	6444	24		31-51-43	ALL
	C15		W1275	0362	24		34-12-12	ALL
	D01		W1275	2516R	24		77-12-11	ALL
	D02		W1275	2516B	24		77-12-11	ALL
	D03		W1275	5898	24		31-41-14	ALL
	D04		W1275	0526	24		31-41-19	ALL
	D05		W1275	0063	24		52-71-21	ALL
	D06		W1275	2027R	24		24-34-11	ALL
	D07		W1275	2027B	24		24-34-11	ALL
	D08		W1275	6190	24		22-34-11	ALL
	D09		W1275	2032R	24		24-34-11	ALL
	D10		W1275	2032B	24		24-34-11	ALL
	D11		W1275	5899	24		31-41-14	ALL
	D12		W1275	2036R	24		24-34-11	ALL
	D13		W1275	2036B	24		24-34-11	ALL
	D14		W1275	0312	24		76-11-11	ALL
	D15		W1275	0320	24		76-11-12	ALL
	E01		W1275	5643	24		24-34-11	ALL
	E02	UNUSED						001-099
	E02		W1275	0425	24		32-46-11	115-199
	E03	UNUSED						001-099
	E03		W1275	0422	24		32-46-11	115-199
	E04		W1275	0659	24		26-11-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 16

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00319B		E4-2/ /		PLUG- (continued)				ALL
	E05		W1275	6023	24		26-11-12	ALL
	E06		W1275	0664	24		26-11-12	ALL
	E07		W1275	0486	24		28-42-11	ALL
	E08		W1275	6267	24		27-23-21	ALL
	E09		W1275	0677	24		26-11-21	001-099
	E09		W1275	0674	24		26-11-21	115-199
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12		W1275	0027	24		52-71-11	ALL
	E13		W1275	5901	24		31-41-14	ALL
	E14		W1275	0157	24		34-16-11	ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02		W1275	5893	24		31-41-14	ALL
	F03		W1275	0327	24		78-36-11	ALL
	F04		W1275	0736	24		26-18-11	ALL
	F05	UNUSED						ALL
	F06		W1275	5895	24		31-41-14	ALL
	F07		W1275	5892	24		31-41-14	ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10		W1275	5894	24		31-41-14	ALL
	F11		W1275	5891	24		31-41-14	ALL
	F12	UNUSED						ALL
	F13		W1275	0314	24		76-11-11	ALL
	F14		W1275	0614	24		32-61-12	ALL
	F15		W1275	0948	24		32-42-11	ALL
	G01		W1275	5867	24		79-32-11	ALL
	G02		W1275	0092	24		26-13-11	ALL
	G03		W1275	0326	24		78-36-11	ALL
	G04		W1275	0699	24		26-12-11	ALL
	G05		W1275	6055	24		26-16-11	ALL
	G06	UNUSED						ALL
	G07	UNUSED						001, 003-099, 115-199
	G07		W1275	6727	22		34-43-14	002
	G08		W1275	0011	24		21-58-12	ALL
	G09	UNUSED						ALL
	G10		W1275	0916	24		73-21-12	ALL
	G11		W1275	1172	22		34-12-62	ALL
	G12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 17

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00319B		E4-2/ /		PLUG- (continued)				ALL
	G13	UNUSED						001, 003-099, 115-199
	G13		W1275	8342	24		34-46-12	002
	G14		W1275	0160	24		31-51-42	ALL
	G15	UNUSED						ALL
	H01		W1275	5685	24		32-09-11	ALL
	H02		W1275	5869	24		79-32-11	ALL
	H03		W1275	0823	24		29-31-11	ALL
	H04		W1275	0811	24		29-31-11	ALL
	H05		W1275	5734	24		73-34-11	ALL
	H06		W1275	0455	24		73-21-12	ALL
	H07		W1275	0494	24		78-36-11	ALL
	H08		W1275	6323	24		73-21-11	001-099
	H08		W1275	0452	24		73-21-11	115-199
	H09		W1275	6144	24		27-23-11	ALL
	H10	UNUSED						ALL
	H11		W1275	0521	24		80-11-11	ALL
	H12		W1275	5978	24		30-21-11	ALL
	H13	UNUSED						ALL
	H14		W1275	6261	24		24-51-72	ALL
	H15		W1275	5837	24		74-31-11	ALL
	J01		W1275	0597	24		34-46-12	ALL
	J02		W1275	5973	24		22-14-31	ALL
	J03		W1275	0322	24		76-11-12	ALL
	J04		W1275	2075R	24		29-32-41	ALL
	J05		W1275	2075B	24		29-32-41	ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08		W1275	5861	24		79-31-11	ALL
	J09	UNUSED						ALL
	J10		W1275	0605	24		75-31-11	001-099
	J10		W1275	5846	24		75-31-11	115-199
	J11		W1275	6003	24		31-51-33	ALL
	J12		W1275	5511	24		27-23-11	ALL
	J13		W1275	5691	24		32-09-12	ALL
	J14		W1275	6259	24		24-51-72	ALL
	J15		W1275	5890	24		31-41-14	ALL
	K01		W1275	5526	24		34-61-25	ALL
	K02		W1275	5840	24		74-31-21	ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 18

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00319B		E4-2/ /		PLUG- (continued)				ALL
	K05	UNUSED						ALL
	K06		W1275	6101	24		31-41-14	ALL
	K07		W1275	0835	24		29-32-11	ALL
	K08		W1275	5556	24		29-32-31	ALL
	K09		W1275	6100	24		31-41-14	ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15		W1275	5913	22		31-41-14	ALL
	DED		W1275	2516Z			77-12-11	ALL
	DED		W1275	4505Z			77-21-11	ALL
	DED		W1275	5049Z			34-61-14	ALL
	DED		W1275	5059Z			31-41-13	ALL
D00319C		E4-2/ /		PLUG-				ALL
	1		W1275	0560	22		31-41-11	001-099
	1		W1275	1560	22		31-41-11	115-199
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1275	0561	22		31-41-11	ALL
	5		W1275	0562	22		31-41-11	ALL
	6		W1275	0563	22		31-41-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	=C12	UNUSED						ALL
	=C13	UNUSED						ALL
	DED		W1275	1560Z			31-41-11	115-199
D00319D		E4-2/ /		PLUG-				ALL
	A01		W1275	0149	24		24-11-21	ALL
	A02		W1275	5720	24		21-58-12	ALL
	A03		W1275	0015	24		21-58-11	ALL
	A04		W1275	0013	24		21-58-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 19

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00319D		E4-2/ /		PLUG- (continued)				ALL
	A05		W1275	0008	24		21-43-11	ALL
	A06		W1275	5698	24		22-21-11	ALL
	A07		W1275	2504R	24		77-12-31	ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10		W1275	0143	24		24-11-11	ALL
	A11	UNUSED						ALL
	A12		W1275	5621	24		24-27-21	ALL
	A13		W1275	6188	24		21-61-51	ALL
	A14		W1275	5774	24		21-61-11	ALL
	A15		W1275	0166	24		31-51-41	ALL
	B01		W1275	5613	24		24-27-11	ALL
	B02		W1275	5625	24		24-27-21	ALL
	B03		W1275	5609	24		24-27-11	ALL
	B04		W1275	5637	24		24-33-11	ALL
	B05		W1275	0220	24		30-32-11	ALL
	B06		W1275	0858	24		29-33-11	ALL
	B07		W1275	6236	24		32-61-12	001-099
	B07		W1275	6236	24		32-61-11	115-199
	B08		W1275	6251	24		21-61-51	ALL
	B09		W1275	0210	24		30-31-12	ALL
	B10		W1275	0731	24		26-17-11	ALL
	B11		W1275	6479	24		30-34-21	ALL
	B12		W1275	0951	24		32-42-11	ALL
	B13	UNUSED						ALL
	B14		W1275	5563	24		27-51-41	ALL
	B15		W1275	6243	24		27-51-51	ALL
	C01		W1275	5629	24		24-27-21	ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04		W1275	5728	24		27-31-11	ALL
	C05	UNUSED						ALL
	C06		W1275	5617	24		24-27-11	ALL
	C07		W1275	5631	24		24-27-41	ALL
	C08		W1275	5668	24		24-51-24	ALL
	C09		W1275	0769	24		26-22-21	001-099
	C09		W1275	0772	24		26-22-21	115-199
	C10		W1275	5994	24		26-17-11	ALL
	C11		W1275	0276	24		27-61-12	ALL
	C12		W1275	6238	24		32-61-12	001-099

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 20

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00319D		E4-2/ /		PLUG- (continued)				ALL
	C12		W1275	6238	24		32-61-11	115-199
	C13		W1275	0279	24		27-21-12	ALL
	C14		W1275	6166	24		27-58-31	ALL
	C15		W1275	6126	24		SPARE	001-099
	C15	UNUSED						115-199
	D01		W1275	6090	24		26-23-11	ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04		W1275	2074R	24		29-32-41	ALL
	D05		W1275	2074B	24		29-32-41	ALL
	D06	UNUSED						001-099
	D06		W1275	0434	24		32-46-11	115-199
	D07	UNUSED						001-099
	D07		W1275	0428	24		32-46-11	115-199
	D08		W1275	5907	24		31-41-14	ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11		W1275	2070B	24		21-65-12	ALL
	D12		W1275	2070R	24		21-65-12	ALL
	D13		W1275	2049B	24		21-52-11	001-099
	D13	UNUSED						115-199
	D14		W1275	2049R	24		21-52-11	001-099
	D14	UNUSED						115-199
	D15	UNUSED						001-099
	D15		W1275	0431	24		32-46-11	115-199
	E01	UNUSED						ALL
	E02		W1275	0259	24		34-21-21	ALL
	E03		W1275	5906	24		31-41-14	ALL
	E04		W1275	5903	24		31-41-14	ALL
	E05		W1275	0253	24		34-21-21	ALL
	E06		W1275	5904	24		31-41-14	ALL
	E07		W1275	0610	24		32-61-12	001-099
	E07		W1275	0610	24		32-61-11	115-199
	E08		W1275	2504B	24		77-12-31	ALL
	E09		W1275	0256	24		34-21-21	ALL
	E10		W1275	5902	24		31-41-14	ALL
	E11		W1275	5905	24		31-41-14	ALL
	E12	UNUSED						ALL
	E13		W1275	5545	24		73-21-22	ALL
	E14		W1275	0782	24		29-11-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 21

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00319D		E4-2/ /		PLUG- (continued)				ALL
	E15		W1275	0640	24		21-58-12	ALL
	F01		W1275	6064	24		26-16-11	ALL
	F02	UNUSED						ALL
	F03		W1275	6163	24		27-58-31	ALL
	F04		W1275	0722	24		26-15-11	ALL
	F05		W1275	0095	24		26-13-21	ALL
	F06		W1275	0409	24		32-61-21	ALL
	F07		W1275	6067	24		26-16-11	ALL
	F08		W1275	0405	24		32-61-21	ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11		W1275	5756	24		21-51-25	ALL
	F12		W1275	0331	24		78-36-21	ALL
	F13		W1275	5723	24		21-58-12	ALL
	F14		W1275	0330	24		78-36-21	ALL
	F15		W1275	5863	24		79-32-11	ALL
	G01		W1275	0710	24		26-12-21	ALL
	G02		W1275	0746	24		26-21-11	ALL
	G03		W1275	0684	24		26-11-21	ALL
	G04		W1275	0742	24		26-18-21	ALL
	G05		W1275	6051	24		26-11-22	ALL
	G06		W1275	6049	24		26-11-11	ALL
	G07		W1275	0374	24		22-14-31	ALL
	G08		W1275	0447	24		28-42-11	ALL
	G09		W1275	0689	24		26-11-22	ALL
	G10		W1275	0265	24		24-33-12	ALL
	G11		W1275	6169	24		26-16-21	ALL
	G12	UNUSED						ALL
	G13		W1275	0401	24		32-61-21	ALL
	G14	UNUSED						ALL
	G15		W1275	5571	24		27-51-41	ALL
	H01		W1275	3003Y	24		73-31-11	ALL
	H02		W1275	6139	24		27-23-11	ALL
	H03		W1275	0928	24		28-42-11	ALL
	H04		W1275	6331	24		73-21-21	001-099
	H04		W1275	0462	24		73-21-21	115-199
	H05		W1275	5517	24		27-23-11	ALL
	H06		W1275	0931	24		28-42-11	ALL
	H07		W1275	0511	24		78-36-21	ALL
	H08		W1275	0940	24		28-42-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 22

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00319D		E4-2/ /		PLUG- (continued)				ALL
	H09		W1275	2626R	24		79-34-11	ALL
	H10		W1275	2626B	24		79-34-11	ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13		W1275	6210	24		36-21-11	ALL
	H14		W1275	2071B	24		36-22-21	ALL
	H15		W1275	2071R	24		36-22-21	ALL
	J01		W1275	3003R	24		73-31-11	ALL
	J02		W1275	6302	24		75-31-11	001-009
	J02	UNUSED						010-099
	J02		W1275	0472	24		75-31-11	115-199
	J03		W1275	0961	24		75-31-11	001-099
	J03		W1275	5843	24		75-31-11	115-199
	J04		W1275	5012R	24		77-11-11	ALL
	J05		W1275	5012B	24		77-11-11	ALL
	J06		W1275	5069R	24		77-11-11	ALL
	J07		W1275	5069B	24		77-11-11	ALL
	J08		W1275	2519R	24		77-12-21	ALL
	J09		W1275	2519B	24		77-12-21	ALL
	J10		W1275	6031	24		29-11-31	ALL
	J11		W1275	6035	24		29-11-31	ALL
	J12		W1275	6103	24		31-41-14	ALL
	J13		W1275	5979	24		30-21-11	ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01		W1275	3003B	24		73-31-11	ALL
	K02		W1275	0532	24		80-11-21	ALL
	K03		W1275	0114	24		79-35-11	ALL
	K04		W1275	6148	24		27-23-11	ALL
	K05		W1275	6042	24		29-22-11	ALL
	K06		W1275	6007	24		31-51-33	ALL
	K07		W1275	0867	24		29-35-11	ALL
	K08	UNUSED						ALL
	K09		W1275	0465	24		73-21-22	ALL
	K10		W1275	0108	24		79-33-11	ALL
	K11	UNUSED						ALL
	K12		W1275	6102	24		31-41-14	ALL
	K13		W1275	0793	24		29-11-22	ALL
	K14		W1275	0801	24		29-31-11	ALL
	K15		W1275	5915	22		31-41-14	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 23

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00319D		E4-2/ /		PLUG- (continued)				ALL
	DED		W1275	2504Z			77-12-31	ALL
	DED		W1275	2519Z			77-12-21	ALL
	DED		W1275	2626Z			79-34-11	ALL
	DED		W1275	5012Z			77-11-11	ALL
	DED		W1275	5069Z			77-11-11	ALL
	DED		W1275	6210Z			36-21-11	115-199
D00319E		E4-2/ /		PLUG-				ALL
	A01		W1275	0172	24		31-51-41	ALL
	A02		W1275	0658	24		26-11-11	ALL
	A03		W1275	0855	24		29-33-11	ALL
	A04		W1275	0214	24		30-33-11	ALL
	A05		W1275	0183	24		30-21-11	ALL
	A06		W1275	0207	24		30-31-12	ALL
	A07		W1275	0217	24		30-32-11	ALL
	A08		W1275	6481	24		30-34-22	ALL
	A09		W1275	0373	24		22-14-31	ALL
	A10		W1275	0292	24		27-09-14	ALL
	A11		W1275	0608	24		33-51-11	ALL
	A12		W1275	5647	24		24-34-11	ALL
	A13		W1275	0154	24		34-53-11	ALL
	A14		W1275	2512R	24		77-12-11	ALL
	A15		W1275	4504G	22		77-21-11	ALL
	B01		W1275	5568	24		27-51-41	ALL
	B02		W1275	5047R	24		77-31-11	ALL
	B03		W1275	5047B	24		77-31-11	ALL
	B04		W1275	5005R	24		22-41-13	ALL
	B05		W1275	5005B	24		22-41-13	ALL
	B06		W1275	5007R	24		22-32-12	ALL
	B07		W1275	5007B	24		22-32-12	ALL
	B08		W1275	5037R	24		34-61-15	ALL
	B09		W1275	5037B	24		34-61-15	ALL
	B10		W1275	5034R	24		31-41-12	ALL
	B11		W1275	5034B	24		31-41-12	ALL
	B12		W1275	0283	24		27-41-11	ALL
	B13		W1275	6512	24		24-25-13	001-099
	B13	UNUSED						115-199
	B14		W1275	2512B	24		77-12-11	ALL
	B15		W1275	4504W	22		77-21-11	ALL
	C01		W1275	0877	24		28-22-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 24

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00319E		E4-2/ /		PLUG- (continued)				ALL
	C02		W1275	0893	24		28-22-31	001-008, 115-199
	C02		W1275	5991	24		28-22-31	009-099
	C03		W1275	5735	24		30-31-11	ALL
	C04		W1275	0232	24		30-41-12	ALL
	C05		W1275	0229	24		30-41-12	ALL
	C06		W1275	0223	24		30-41-11	ALL
	C07		W1275	0864	24		29-33-11	ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10		W1275	0196	24		31-31-01	001-099
	C10		W1275	0196	24		31-31-13	115-199
	C11		W1275	6171	24		26-16-21	ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14		W1275	0194	24		30-21-11	ALL
	C15		W1275	5658	24		24-34-11	ALL
	D01		W1275	5566	24		27-51-41	ALL
	D02		W1275	0163	24		31-51-41	ALL
	D03		W1275	6277	24		28-41-13	ALL
	D04		W1275	0883	24		28-41-11	ALL
	D05		W1275	0881	24		28-22-21	ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08		W1275	6266	24		27-23-21	ALL
	D09		W1275	5508	24		27-51-31	ALL
	D10	UNUSED						ALL
	D11		W1275	6240	24		32-61-12	001-099
	D11		W1275	6240	24		32-61-11	115-199
	D12	UNUSED						ALL
	D13		W1275	0887	24		28-41-13	ALL
	D14		W1275	5717	24		21-58-12	ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02		W1275	6201	24		21-52-31	ALL
	E03	UNUSED						ALL
	E04		W1275	5857	24		79-31-11	ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07		W1275	0136	24		24-11-11	ALL
	E08		W1275	0148	24		24-11-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 25

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00319E		E4-2/ /		PLUG- (continued)				ALL
	E09		W1275	5822	24		24-28-21	ALL
	E10		W1275	5825	24		24-28-21	ALL
	E11		W1275	5827	24		24-28-21	ALL
	E12		W1275	5819	24		24-28-21	ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01		W1275	5043R	24		28-41-11	ALL
	F02		W1275	5043B	24		28-41-11	ALL
	F03		W1275	5033R	24		31-41-12	ALL
	F04		W1275	5033B	24		31-41-12	ALL
	F05		W1275	5041R	24		31-41-12	ALL
	F06		W1275	5041B	24		31-41-12	ALL
	F07		W1275	5032R	24		31-41-19	ALL
	F08		W1275	5032B	24		31-41-19	ALL
	F09		W1275	5081R	24		77-31-11	ALL
	F10		W1275	5081B	24		77-31-11	ALL
	F11		W1275	5065R	24		34-25-11	001, 003-099, 115-199
	F11		W1275	5065R	24		34-25-13	002
	F12		W1275	5065B	24		34-25-11	001, 003-099, 115-199
	F12		W1275	5065B	24		34-25-13	002
	F13		W1275	0006	24		21-31-21	ALL
	F14		W1275	0005	24		21-31-11	ALL
	F15	UNUSED						ALL
	G01		W1275	5910	24		31-41-14	ALL
	G02		W1275	6061	24		26-16-11	ALL
	G03	UNUSED						001-002, 115-199
	G03		W1275	0991	24		34-45-02	003-099
	G04		W1275	0657	24		26-11-11	ALL
	G05		W1275	0101	24		26-13-21	ALL
	G06		W1275	0691	24		26-11-22	ALL
	G07		W1275	0708	24		26-12-21	ALL
	G08		W1275	5541	24		24-28-11	ALL
	G09		W1275	5536	24		24-28-11	ALL
	G10		W1275	5533	24		24-28-11	ALL
	G11		W1275	5530	24		24-28-11	ALL
	G12		W1275	5539	24		24-28-11	ALL
	G13		W1275	5859	24		79-31-11	ALL
	G14		W1275	5640	24		24-34-11	ALL
	G15		W1275	0288	24		27-31-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 26

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00319E		E4-2/ /		PLUG- (continued)				ALL
	H01	UNUSED						001-099
	H01		W1275	0413	24		32-46-11	115-199
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04		W1275	0974	24		27-18-11	ALL
	H05		W1275	0968	24		27-18-11	ALL
	H06		W1275	5504	24		27-38-11	ALL
	H07		W1275	0998	24		27-38-11	ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10		W1275	0980	24		27-28-11	ALL
	H11		W1275	5865	24		79-32-11	ALL
	H12		W1275	6177	24		32-41-11	ALL
	H13		W1275	6226	24		21-52-21	ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01		W1275	6107	24		31-41-14	ALL
	J02	UNUSED						ALL
	J03		W1275	5731	24		73-34-11	ALL
	J04		W1275	6106	24		31-41-14	ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07		W1275	0612	24		32-61-12	001-099
	J07		W1275	0612	24		32-61-11	115-199
	J08		W1275	6105	24		31-41-14	ALL
	J09	UNUSED						ALL
	J10		W1275	5780	24		21-61-31	ALL
	J11		W1275	6426	24		27-09-14	ALL
	J12		W1275	6406	24		21-52-21	ALL
	J13	UNUSED						ALL
	J14		W1275	5653	24		24-34-11	ALL
	J15	UNUSED						001-099
	J15		W1275	0915	24		32-46-11	115-199
	K01		W1275	6104	24		31-41-14	ALL
	K02		W1275	5599	24		36-22-11	ALL
	K03		W1275	5586	24		36-11-11	ALL
	K04		W1275	6295	24		49-94-11	001-099
	K04	UNUSED						115-199
	K05		W1275	0204	24		30-31-11	ALL
	K06		W1275	5583	24		36-11-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 27

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00319E		E4-2/ /		PLUG- (continued)				ALL
	K07		W1275	5590	24		36-11-12	ALL
	K08		W1275	0208	24		30-31-12	ALL
	K09		W1275	6430	24		27-09-14	ALL
	K10		W1275	5604	24		36-22-11	ALL
	K11		W1275	5593	24		36-11-22	ALL
	K12		W1275	6279	24		30-31-12	ALL
	K13		W1275	6422	24		27-09-14	ALL
	K14		W1275	0574	24		34-61-15	ALL
	K15		W1275	5914	22		31-41-14	ALL
I	CAP	Y	W1275	6512	24		24-25-13	115-199
	DED		W1275	5065Z			34-25-11	001, 003-099, 115-199
	DED		W1275	5037Z			34-61-15	001-099
	DED		W1275	2512Z			77-12-11	ALL
	DED		W1275	4504Z			77-21-11	ALL
	DED		W1275	5005Z			22-41-13	ALL
	DED		W1275	5007Z			22-32-12	ALL
	DED		W1275	5032Z			31-41-19	ALL
	DED		W1275	5033Z			31-41-12	ALL
	DED		W1275	5034Z			31-41-12	ALL
	DED		W1275	5041Z			31-41-12	ALL
	DED		W1275	5043Z			28-41-11	ALL
	DED		W1275	5047Z			77-31-11	ALL
	DED		W1275	5081Z			77-31-11	ALL
	DED		W1275	5065Z			34-25-13	002
D00319F		E4-2/ /		PLUG-				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03		W1275	5661	24		24-34-11	ALL
	A04		W1275	5650	24		24-34-11	ALL
	A05		W1275	6012	24		49-71-11	ALL
	A06		W1275	6014	24		49-73-11	ALL
	A07		W1275	2051B	24		21-52-11	001-099
	A07	UNUSED						115-199
	A08		W1275	2051R	24		21-52-11	001-099
	A08	UNUSED						115-199
I	A09		W1275	0585	24		34-22-37	001-099
I	A09	UNUSED						115-199
	A10		W1275	6017	24		49-61-11	ALL
	B01		W1275	2029B	24		24-34-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 28

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00319F		E4-2/ /		PLUG- (continued)				ALL
	B02		W1275	2029R	24		24-34-11	ALL
	B03		W1275	0350	24		24-33-12	ALL
	B04		W1275	5963	24		31-41-34	ALL
	B05		W1275	5872	24		80-11-21	ALL
	B06		W1275	0017	24		49-61-11	ALL
	B07		W1275	5908	24		31-41-14	ALL
	B08		W1275	0201	24		30-31-11	ALL
	B09		W1275	6222	24		21-64-11	ALL
	B10		W1275	5852	24		77-12-42	ALL
	C01		W1275	2076B	24		21-52-11	001-099
	C01	UNUSED						115-199
	C02		W1275	0616	24		32-61-12	ALL
	C03		W1275	0244	24		34-21-31	ALL
	C04		W1275	0250	24		34-21-31	ALL
	C05		W1275	0389	24		32-61-21	ALL
	C06	UNUSED						ALL
	C07		W1275	0397	24		32-61-21	ALL
	C08		W1275	6093	24		26-23-11	ALL
	C09		W1275	0790	24		29-11-22	ALL
	C10		W1275	0870	24		29-35-11	ALL
	D01		W1275	2076R	24		21-52-11	001-099
	D01	UNUSED						115-199
	D02		W1275	5747	24		21-51-15	ALL
	D03		W1275	0293	24		27-09-14	ALL
	D04		W1275	0721	24		26-15-11	ALL
	D05		W1275	0247	24		34-21-31	ALL
	D06		W1275	0393	24		32-61-21	ALL
	D07		W1275	6268	24		27-23-21	ALL
	D08		W1275	5909	24		31-41-14	ALL
	D09		W1275	0518	24		80-11-11	ALL
	D10		W1275	0895	24		28-42-21	ALL
	E01		W1275	6010	24		49-61-14	ALL
	E02		W1275	0269	22		24-33-12	001-099
	E02		W1275	0269	24		24-33-12	115-199
	E03		W1275	0750	24		26-21-11	ALL
	E04		W1275	0272	24		22-24-11	ALL
	E05		W1275	0361	24		34-12-12	ALL
	E06	UNUSED						ALL
	E07		W1275	6080	24		26-16-21	ALL
	E08		W1275	5765	24		21-58-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 29

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00319F		E4-2/ /		PLUG- (continued)				ALL
	E09		W1275	5688	24		32-09-11	ALL
	E10	UNUSED						ALL
	F01		W1275	0618	24		36-11-41	ALL
	F02		W1275	0718	24		26-15-11	ALL
	F03	UNUSED						001-008, 115-199
	F03		W1275	1005	24		28-22-32	009-099
	F04	UNUSED						ALL
	F05		W1275	0638	24		21-58-12	ALL
	F06		W1275	0305	24		35-21-11	ALL
	F07		W1275	6070	24		26-16-11	ALL
	F08		W1275	5694	24		32-09-12	ALL
	F09	UNUSED						ALL
	F10	UNUSED						001-099
	F10		W1275	5574	24		49-94-14	115-199
I	G01		W1275	6520	24		24-11-11	ALL
	G02	UNUSED						ALL
I	G03		W1275	6528	24		24-11-21	ALL
	G04		W1275	0831	24		29-32-11	ALL
	G05		W1275	0190	24		30-21-11	ALL
	G06		W1275	5722	24		29-35-11	ALL
	G07		W1275	5677	24		30-11-11	ALL
	G08		W1275	0187	24		30-21-11	ALL
	G09		W1275	6204	24		21-64-11	ALL
	G10		W1275	0444	24		79-31-11	ALL
	H01	UNUSED						ALL
	H02	UNUSED						001-099
I	H02		W1275	5134R	24		34-61-25	115-199
	H03	UNUSED						001-099
I	H03		W1275	5134B	24		34-61-25	115-199
	H04		W1275	5991	24		28-22-31	001-008, 115-199
	H04		W1275	1007	24		28-22-32	009-099
	H05		W1275	6109	24		31-41-14	ALL
	H06		W1275	6256	24		29-21-31	ALL
	H07		W1275	5759	24		21-58-11	ALL
	H08		W1275	0944	24		28-42-11	ALL
	H09		W1275	0924	24		28-42-11	ALL
	H10		W1275	0954	24		32-42-11	ALL
	J01	UNUSED						ALL
	J02		W1275	5678	24		30-11-11	ALL
	J03		W1275	5719	24		29-35-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 30

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00319F		E4-2/ /		PLUG- (continued)				ALL
	J04		W1275	6511	24		24-25-13	001-099
	J04	UNUSED						115-199
	J05		W1275	6108	24		31-41-14	ALL
	J06		W1275	6150	24		27-23-11	ALL
	J07	UNUSED						001-099
	J07		W1275	5768	24		21-58-24	115-199
	J08		W1275	5514	24		27-23-11	ALL
	J09		W1275	0935	24		28-42-11	ALL
	J10		W1275	5849	24		77-12-41	ALL
	K01	UNUSED						ALL
	K02		W1275	0787	24		29-11-22	ALL
	K03		W1275	5725	24		29-35-11	ALL
	K04	UNUSED						ALL
	K05		W1275	0583	24		21-58-12	ALL
	K06		W1275	6254	24		29-21-31	ALL
	K07	UNUSED						001-099
	K07		W1275	5772	24		21-58-24	115-199
	K08		W1275	6136	24		27-23-11	ALL
	K09		W1275	5777	24		21-61-21	ALL
	K10		W1275	5715	24		29-21-32	ALL
	CAP	Y	W1275	6511	24		24-25-13	115-199
D00321A		E4-2/ /		PLUG-				ALL
	A01		W1275	2558T	24		31-41-21	ALL
	A02		W1275	2558W	24		31-41-21	ALL
	A03		W1275	5920	24		31-41-24	ALL
	A04		W1275	2571W	24		31-41-11	ALL
	A05		W1275	2573W	24		31-41-11	ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11		W1275	2561W	24		31-41-21	ALL
	A12		W1275	2554W	24		31-41-21	ALL
	A13		W1275	2556W	24		31-41-21	ALL
	A14		W1275	2555W	24		31-41-21	ALL
	A15		W1275	2557W	24		31-41-21	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 31

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00321A		E4-2/ /		PLUG- (continued)				ALL
	B03		W1275	5918	24		31-41-24	ALL
	B04		W1275	2571T	24		31-41-11	ALL
	B05		W1275	2573T	24		31-41-11	ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11		W1275	2561T	24		31-41-21	ALL
	B12		W1275	2554T	24		31-41-21	ALL
	B13		W1275	2556T	24		31-41-21	ALL
	B14		W1275	2555T	24		31-41-21	ALL
	B15		W1275	2557T	24		31-41-21	ALL
	C01		W1275	2574T	24		31-41-11	ALL
	C02		W1275	2574W	24		31-41-11	ALL
	C03		W1275	5919	24		31-41-24	ALL
	C04		W1275	5921	24		31-41-24	ALL
	C05		W1275	5922	24		31-41-24	ALL
	C06		W1275	5923	24		31-41-24	ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10		W1275	2577T	24		31-41-11	ALL
	C11		W1275	2577W	24		31-41-11	ALL
	C12		W1275	2570T	24		31-41-11	ALL
	C13		W1275	2570W	24		31-41-11	ALL
	C14		W1275	2572T	24		31-41-11	ALL
	C15		W1275	2572W	24		31-41-11	ALL
	D01		W1275	0202	24		30-31-11	ALL
	D02		W1275	0225	24		30-41-11	ALL
	D03		W1275	6241	24		32-42-11	ALL
	D04		W1275	5635	24		24-33-11	ALL
	D05		W1275	5754	24		21-51-25	ALL
	D06		W1275	0036	24		21-25-11	ALL
	D07		W1275	5797	24		22-21-21	ALL
	D08		W1275	5742	24		21-51-15	ALL
	D09		W1275	0632	24		21-58-13	ALL
	D10		W1275	6231	24		32-61-12	ALL
	D11		W1275	0284	24		27-41-11	ALL
	D12		W1275	2508B	24		77-12-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 32

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00321A		E4-2/ /		PLUG- (continued)				ALL
	D13		W1275	0058	24		52-71-21	ALL
	D14		W1275	0055	24		52-71-21	ALL
	D15		W1275	2055R	24		21-52-11	001-099
	D15	UNUSED						115-199
	E01	UNUSED						ALL
	E02	UNUSED						001-099
	E02		W1275	0418	24		32-46-11	115-199
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05		W1275	5664	24		24-51-14	ALL
	E06		W1275	5745	24		21-51-15	ALL
	E07		W1275	0035	24		21-25-11	ALL
	E08		W1275	0080	24		77-12-11	ALL
	E09		W1275	0550	24		31-41-19	ALL
	E10		W1275	5916	24		31-41-24	ALL
	E11		W1275	0635	24		21-58-13	ALL
	E12		W1275	5040R	24		31-41-23	ALL
	E13	UNUSED						ALL
	E14		W1275	2057R	24		21-52-11	001-099
	E14	UNUSED						115-199
	E15		W1275	2055B	24		21-52-11	001-099
	E15	UNUSED						115-199
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03		W1275	0851	24		29-33-11	ALL
	F04		W1275	0845	24		29-33-11	ALL
	F05		W1275	0860	24		29-33-11	ALL
	F06		W1275	2053B	24		21-52-11	ALL
	F07		W1275	2053R	24		21-52-11	ALL
	F08		W1275	5917	24		31-41-24	ALL
	F09		W1275	0302	24		35-11-13	ALL
	F10	UNUSED						001-099
	F10		W1275	0415	24		32-46-11	115-199
	F11		W1275	2508R	24		77-12-31	ALL
	F12		W1275	5040B	24		31-41-23	ALL
	F13		W1275	0370	24		21-33-12	ALL
	F14		W1275	2057B	24		21-52-11	001-099
	F14	UNUSED						115-199
	F15		W1275	0059	24		52-71-21	ALL
	G01		W1275	0382	24		34-21-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 33

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00321A		E4-2/ /		PLUG- (continued)				ALL
	G02		W1275	0673	24		26-11-21	001-099
	G02		W1275	0676	24		26-11-21	115-199
	G03		W1275	0957	24		32-44-11	ALL
	G04		W1275	0669	24		26-11-12	ALL
	G05		W1275	0385	24		34-21-11	ALL
	G06		W1275	0345	24		32-42-12	ALL
	G07		W1275	0701	24		26-12-11	ALL
	G08		W1275	0379	24		34-21-11	ALL
	G09		W1275	0965	24		27-62-11	ALL
	G10		W1275	5751	24		21-51-25	ALL
	G11		W1275	6038	24		29-11-31	ALL
	G12		W1275	6233	24		32-61-12	ALL
	G13		W1275	0578	24		34-61-15	ALL
	G14		W1275	0629	24		21-58-21	ALL
	G15		W1275	0170	24		31-51-41	ALL
	H01	UNUSED						ALL
	H02		W1275	0872	24		29-35-11	ALL
	H03		W1275	0110	24		79-33-11	ALL
	H04		W1275	0117	24		79-35-11	ALL
	H05		W1275	6299	24		75-31-11	001-009
	H05	UNUSED						010-099
	H05		W1275	0475	24		75-31-11	115-199
	H06		W1275	6057	24		26-16-11	ALL
	H07		W1275	0086	24		26-13-11	ALL
	H08	UNUSED						ALL
	H09		W1275	6142	24		27-23-11	ALL
	H10		W1275	2625B	24		79-34-11	ALL
	H11		W1275	2625R	24		79-34-11	ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14		W1275	6412	24		27-09-14	ALL
	H15		W1275	6123	24		31-51-41	ALL
	J01		W1275	5068R	24		77-11-11	ALL
	J02		W1275	5068B	24		77-11-11	ALL
	J03		W1275	5016B	24		77-11-11	ALL
	J04		W1275	5016R	24		77-11-11	ALL
	J05		W1275	2522B	24		77-12-21	ALL
	J06		W1275	2522R	24		77-12-21	ALL
	J07		W1275	3006Y	24		73-31-11	ALL
	J08		W1275	3006R	24		73-31-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 34

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00321A		E4-2/ /		PLUG- (continued)				ALL
	J09		W1275	3006B	24		73-31-11	ALL
	J10	UNUSED						ALL
	J11		W1275	0077	24		73-33-11	ALL
	J12	UNUSED						ALL
	J13		W1275	5966	24		31-41-34	ALL
	J14		W1275	0089	24		31-31-01	001-099
	J14		W1275	0089	24		31-31-13	115-199
	J15		W1275	0041	24		21-44-11	ALL
	K01		W1275	6110	24		31-41-24	ALL
	K02		W1275	0784	24		29-11-12	ALL
	K03		W1275	5559	24		29-32-31	ALL
	K04		W1275	0838	24		29-32-21	ALL
	K05	UNUSED						001-008, 115-199
	K05		W1275	0892	24		28-22-31	009-099
	K06		W1275	6229	24		32-61-12	ALL
	K07		W1275	0073	24		73-33-11	ALL
	K08		W1275	0841	24		29-32-21	ALL
	K09		W1275	6111	24		31-41-24	ALL
	K10	UNUSED						ALL
	K11		W1275	0778	24		29-11-12	ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14		W1275	0625	24		21-58-21	ALL
	K15		W1275	5946	22		31-41-24	ALL
	DED		W1275	2508Z			77-12-31	ALL
	DED		W1275	2522Z			77-12-21	ALL
	DED		W1275	2625Z			79-34-11	ALL
	DED		W1275	5016Z			77-11-11	ALL
	DED		W1275	5040Z			31-41-23	ALL
	DED		W1275	5068Z			77-11-11	ALL
	DED		W1275	5797Z			22-21-21	115-199
	DED		W1275	5916Z			31-41-24	115-199
	DED		W1275	6123Z			31-51-41	115-199
	REF	VM	W1275	0992	24		34-45-02	001-002
	REF	VP	W1275	0992	24		34-45-02	115-199
D00321B		E4-2/ /		PLUG-				ALL
	A01		W1275	2575T	24		31-41-11	ALL
	A02		W1275	2576T	24		31-41-11	ALL
	A03		W1275	2559T	24		31-41-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 35

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00321B		E4-2/ /		PLUG- (continued)				ALL
	A04		W1275	2560W	24		31-41-21	ALL
	A05		W1275	0056	24		52-71-21	ALL
	A06		W1275	0049	24		52-71-11	ALL
	A07		W1275	0060	24		52-71-21	001-099
	A07	UNUSED						115-199
	A08	UNUSED						ALL
	A09		W1275	5002R	24		31-31-41	001-099
	A09		W1275	5002R	24		31-31-21	115-199
	A10		W1275	0054	24		52-71-11	ALL
	A11		W1275	0053	24		52-71-11	ALL
	A12	UNUSED						ALL
	A13		W1275	0341	24		49-61-11	ALL
	A14	UNUSED						ALL
	A15		W1275	4508G	22		77-21-11	ALL
	B01		W1275	2575W	24		31-41-11	ALL
	B02		W1275	2576W	24		31-41-11	ALL
	B03		W1275	2559W	24		31-41-21	ALL
	B04		W1275	2560T	24		31-41-21	ALL
	B05		W1275	0140	24		24-11-11	ALL
	B06		W1275	5934	24		31-41-24	ALL
	B07		W1275	0050	24		52-71-11	ALL
	B08	UNUSED						ALL
	B09		W1275	5002B	24		31-31-41	001-099
	B09		W1275	5002B	24		31-31-21	115-199
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12		W1275	0052	24		52-71-11	ALL
	B13		W1275	0119	24		36-11-31	ALL
	B14	UNUSED						ALL
	B15		W1275	4508W	22		77-21-11	ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						001-099
	C05		W1275	0060	24		52-71-21	115-199
	C06		W1275	5931	24		31-41-24	ALL
	C07	UNUSED						001-099
	C07		W1275	5977	24		52-71-21	115-199
	C08		W1275	0179	24		31-51-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 36

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00321B		E4-2/ /		PLUG- (continued)				ALL
	C09		W1275	5930	24		31-41-24	ALL
	C10		W1275	5050R	24		34-61-24	ALL
	C11		W1275	5050B	24		34-61-24	ALL
	C12		W1275	5064R	24		31-41-23	ALL
	C13		W1275	5064B	24		31-41-23	ALL
	C14		W1275	6445	24		31-51-43	ALL
	C15		W1275	0368	24		34-12-22	ALL
	D01		W1275	2515R	24		77-12-11	ALL
	D02		W1275	2515B	24		77-12-11	ALL
	D03		W1275	5932	24		31-41-24	ALL
	D04		W1275	0539	24		31-41-19	ALL
	D05		W1275	0057	24		52-71-21	ALL
	D06		W1275	2026R	24		24-34-11	ALL
	D07		W1275	2026B	24		24-34-11	ALL
	D08		W1275	6191	24		22-34-11	ALL
	D09		W1275	2033R	24		24-34-11	ALL
	D10		W1275	2033B	24		24-34-11	ALL
	D11		W1275	5933	24		31-41-24	ALL
	D12		W1275	2035R	24		24-34-11	ALL
	D13		W1275	2035B	24		24-34-11	ALL
	D14		W1275	0311	24		76-11-11	ALL
	D15		W1275	0319	24		76-11-12	ALL
	E01		W1275	5644	24		24-34-11	ALL
	E02	UNUSED						001-099
	E02		W1275	0424	24		32-46-11	115-199
	E03	UNUSED						001-099
	E03		W1275	0421	24		32-46-11	115-199
	E04		W1275	0648	24		26-11-11	ALL
	E05		W1275	6024	24		26-11-12	ALL
	E06		W1275	0666	24		26-11-12	ALL
	E07		W1275	0461	24		28-42-11	ALL
	E08		W1275	6264	24		27-23-21	ALL
	E09		W1275	0676	24		26-11-21	001-099
	E09		W1275	0673	24		26-11-21	115-199
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12		W1275	0051	24		52-71-11	ALL
	E13		W1275	5935	24		31-41-24	ALL
	E14		W1275	0158	24		34-16-11	ALL
	E15	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 37

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00321B		E4-2/ /		PLUG- (continued)				ALL
	F01	UNUSED						ALL
	F02		W1275	5927	24		31-41-24	ALL
	F03		W1275	0324	24		78-36-11	ALL
	F04		W1275	0733	24		26-18-11	ALL
	F05	UNUSED						ALL
	F06		W1275	5929	24		31-41-24	ALL
	F07		W1275	5926	24		31-41-24	ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10		W1275	5928	24		31-41-24	ALL
	F11		W1275	5925	24		31-41-24	ALL
	F12	UNUSED						ALL
	F13		W1275	0315	24		76-11-11	ALL
	F14		W1275	0615	24		32-61-12	ALL
	F15		W1275	0946	24		32-42-11	ALL
	G01		W1275	5866	24		79-32-11	ALL
	G02		W1275	0091	24		26-13-11	ALL
	G03		W1275	0325	24		78-36-11	ALL
	G04		W1275	0697	24		26-12-11	ALL
	G05		W1275	6054	24		26-16-11	ALL
	G06	UNUSED						ALL
	G07	UNUSED						001, 003-099, 115-199
	G07		W1275	6726	22		34-43-14	002
	G08		W1275	0042	24		21-58-12	ALL
	G09	UNUSED						ALL
	G10		W1275	0917	24		73-21-12	ALL
	G11		W1275	1173	22		34-12-62	ALL
	G12	UNUSED						ALL
	G13	UNUSED						001, 003-099, 115-199
	G13		W1275	8275	24		34-46-12	002
	G14		W1275	0161	24		31-51-42	ALL
	G15	UNUSED						ALL
	H01		W1275	5686	24		32-09-11	ALL
	H02		W1275	5868	24		79-32-11	ALL
	H03		W1275	0822	24		29-31-11	ALL
	H04		W1275	0812	24		29-31-11	ALL
	H05		W1275	5733	24		73-34-11	ALL
	H06		W1275	0456	24		73-21-12	ALL
	H07		W1275	0493	24		78-36-11	ALL
	H08		W1275	6324	24		73-21-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 38

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00321B		E4-2/ /		PLUG- (continued)				ALL
	H08		W1275	0451	24		73-21-11	115-199
	H09		W1275	6145	24		27-23-11	ALL
	H10	UNUSED						ALL
	H11		W1275	0520	24		80-11-11	ALL
	H12		W1275	5984	24		30-21-11	ALL
	H13	UNUSED						ALL
	H14		W1275	6262	24		24-51-72	ALL
	H15		W1275	5836	24		74-31-11	ALL
	J01		W1275	0596	24		34-46-12	ALL
	J02		W1275	5974	24		22-14-31	ALL
	J03		W1275	0323	24		76-11-12	ALL
	J04		W1275	2073R	24		29-32-41	ALL
	J05		W1275	2073B	24		29-32-41	ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08		W1275	5860	24		79-31-11	ALL
	J09	UNUSED						ALL
	J10		W1275	0623	24		75-31-11	001-099
	J10		W1275	5845	24		75-31-11	115-199
	J11		W1275	6002	24		31-51-33	ALL
	J12		W1275	5510	24		27-23-11	ALL
	J13		W1275	5692	24		32-09-12	ALL
	J14		W1275	6260	24		24-51-72	ALL
	J15		W1275	5924	24		31-41-24	ALL
	K01		W1275	5527	24		34-61-25	ALL
	K02		W1275	5839	24		74-31-21	ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06		W1275	6113	24		31-41-24	ALL
	K07		W1275	0833	24		29-32-11	ALL
	K08		W1275	5555	24		29-32-31	ALL
	K09		W1275	6112	24		31-41-24	ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15		W1275	5947	22		31-41-24	ALL
	DED		W1275	2515Z			77-12-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 39

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00321B		E4-2/ /		PLUG- (continued)				ALL
	DED		W1275	4508Z			77-21-11	ALL
	DED		W1275	5050Z			34-61-24	ALL
	DED		W1275	5064Z			31-41-23	ALL
D00321C		E4-2/ /		PLUG-				ALL
	1		W1275	0588	22		31-41-21	001-099
	1		W1275	1588	22		31-41-21	115-199
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1275	0589	22		31-41-21	ALL
	5		W1275	0590	22		31-41-21	ALL
	6		W1275	0591	22		31-41-21	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	=C12	UNUSED						ALL
	=C13	UNUSED						ALL
	DED		W1275	1588Z			31-41-21	115-199
D00321D		E4-2/ /		PLUG-				ALL
	A01		W1275	0151	24		24-11-21	ALL
	A02		W1275	5729	24		21-58-12	ALL
	A03		W1275	0044	24		21-58-11	ALL
	A04		W1275	0043	24		21-58-11	ALL
	A05		W1275	0046	24		21-43-11	ALL
	A06		W1275	5699	24		22-21-11	ALL
	A07		W1275	2503R	24		77-12-31	ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10		W1275	0141	24		24-11-11	ALL
	A11	UNUSED						ALL
	A12		W1275	5619	24		24-27-21	ALL
	A13		W1275	6189	24		21-61-51	ALL
	A14		W1275	5775	24		21-61-11	ALL
	A15		W1275	0167	24		31-51-41	ALL
	B01		W1275	5611	24		24-27-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 40

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00321D		E4-2/ /		PLUG- (continued)				ALL
	B02		W1275	5623	24		24-27-21	ALL
	B03		W1275	5607	24		24-27-11	ALL
	B04		W1275	5638	24		24-33-11	ALL
	B05		W1275	0219	24		30-32-11	ALL
	B06		W1275	0857	24		29-33-11	ALL
	B07		W1275	6235	24		32-61-12	001-099
	B07		W1275	6235	24		32-61-11	115-199
	B08		W1275	6252	24		21-61-51	ALL
	B09		W1275	0209	24		30-31-12	ALL
	B10		W1275	0732	24		26-17-11	ALL
	B11		W1275	6477	24		30-34-21	ALL
	B12		W1275	0952	24		32-42-11	ALL
	B13	UNUSED						ALL
	B14		W1275	5562	24		27-51-41	ALL
	B15		W1275	6244	24		27-51-51	ALL
	C01		W1275	5627	24		24-27-21	ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04		W1275	5727	24		27-31-11	ALL
	C05	UNUSED						ALL
	C06		W1275	5615	24		24-27-11	ALL
	C07		W1275	5632	24		24-27-41	ALL
	C08		W1275	5667	24		24-51-24	ALL
	C09		W1275	0770	24		26-22-21	ALL
	C10		W1275	5993	24		26-17-11	ALL
	C11		W1275	0277	24		27-61-12	ALL
	C12		W1275	6237	24		32-61-12	001-099
	C12		W1275	6237	24		32-61-11	115-199
	C13		W1275	0280	24		27-21-12	ALL
	C14		W1275	6167	24		27-58-31	ALL
	C15		W1275	6127	24		SPARE	001-099
	C15	UNUSED						115-199
	D01		W1275	6091	24		26-23-11	ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						001-099
	D06		W1275	0433	24		32-46-11	115-199
	D07	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 41

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00321D		E4-2/ /		PLUG- (continued)				ALL
	D07		W1275	0427	24		32-46-11	115-199
	D08		W1275	5941	24		31-41-24	ALL
	D09		W1275	2068B	24		21-65-12	ALL
	D10		W1275	2068R	24		21-65-12	ALL
	D11		W1275	2069B	24		21-65-12	ALL
	D12		W1275	2069R	24		21-65-12	ALL
	D13		W1275	2054B	24		21-52-11	001-099
	D13	UNUSED						115-199
	D14		W1275	2054R	24		21-52-11	001-099
	D14	UNUSED						115-199
	D15	UNUSED						001-099
	D15		W1275	0430	24		32-46-11	115-199
	E01	UNUSED						ALL
	E02		W1275	0260	24		34-21-21	ALL
	E03		W1275	5940	24		31-41-24	ALL
	E04		W1275	5937	24		31-41-24	ALL
	E05		W1275	0254	24		34-21-21	ALL
	E06		W1275	5938	24		31-41-24	ALL
	E07		W1275	0611	24		32-61-12	001-099
	E07		W1275	0611	24		32-61-11	115-199
	E08		W1275	2503B	24		77-12-31	ALL
	E09		W1275	0257	24		34-21-21	ALL
	E10		W1275	5936	24		31-41-24	ALL
	E11		W1275	5939	24		31-41-24	ALL
	E12	UNUSED						ALL
	E13		W1275	5546	24		73-21-22	ALL
	E14		W1275	0781	24		29-11-12	ALL
	E15		W1275	0642	24		21-58-12	ALL
	F01		W1275	6063	24		26-16-11	ALL
	F02	UNUSED						ALL
	F03		W1275	6164	24		27-58-31	ALL
	F04		W1275	0724	24		26-15-11	ALL
	F05		W1275	0094	24		26-13-21	ALL
	F06		W1275	0407	24		32-61-21	ALL
	F07		W1275	6066	24		26-16-11	ALL
	F08		W1275	0403	24		32-61-21	ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11		W1275	5757	24		21-51-25	ALL
	F12		W1275	0328	24		78-36-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 42

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00321D		E4-2/ /		PLUG- (continued)				ALL
	F13		W1275	5732	24		21-58-12	ALL
	F14		W1275	0329	24		78-36-21	ALL
	F15		W1275	5862	24		79-32-11	ALL
	G01		W1275	0709	24		26-12-21	ALL
	G02		W1275	0747	24		26-21-11	ALL
	G03		W1275	0683	24		26-11-21	ALL
	G04		W1275	0740	24		26-18-21	ALL
	G05		W1275	6052	24		26-11-22	ALL
	G06		W1275	6048	24		26-11-11	ALL
	G07		W1275	0376	24		22-14-31	ALL
	G08		W1275	0446	24		28-42-11	ALL
	G09		W1275	0690	24		26-11-22	ALL
	G10		W1275	0266	24		24-33-12	ALL
	G11		W1275	6168	24		26-16-21	ALL
	G12	UNUSED						ALL
	G13		W1275	0399	24		32-61-21	ALL
	G14	UNUSED						ALL
	G15		W1275	5572	24		27-51-41	ALL
	H01		W1275	3002Y	24		73-31-11	ALL
	H02		W1275	6138	24		27-23-11	ALL
	H03		W1275	0926	24		28-42-11	ALL
	H04		W1275	6332	24		73-21-21	001-099
	H04		W1275	0463	24		73-21-21	115-199
	H05		W1275	5516	24		27-23-11	ALL
	H06		W1275	0930	24		28-42-11	ALL
	H07		W1275	0510	24		78-36-21	ALL
	H08		W1275	0938	24		28-42-11	ALL
	H09		W1275	2523R	24		79-34-11	ALL
	H10		W1275	2523B	24		79-34-11	ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13		W1275	6211	24		36-21-11	ALL
	H14		W1275	2072B	24		36-22-21	ALL
	H15		W1275	2072R	24		36-22-21	ALL
	J01		W1275	3002R	24		73-31-11	ALL
	J02		W1275	6301	24		75-31-11	001-009
	J02	UNUSED						010-099
	J02		W1275	0471	24		75-31-11	115-199
	J03		W1275	6287	24		75-31-11	001-099
	J03		W1275	5842	24		75-31-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 43

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00321D		E4-2/ /		PLUG- (continued)				ALL
	J04		W1275	5014R	24		77-11-11	ALL
	J05		W1275	5014B	24		77-11-11	ALL
	J06		W1275	5067R	24		77-11-11	ALL
	J07		W1275	5067B	24		77-11-11	ALL
	J08		W1275	2518R	24		77-12-21	ALL
	J09		W1275	2518B	24		77-12-21	ALL
	J10		W1275	6030	24		29-11-31	ALL
	J11		W1275	6034	24		29-11-31	ALL
	J12		W1275	6115	24		31-41-24	ALL
	J13		W1275	5983	24		30-21-11	ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01		W1275	3002B	24		73-31-11	ALL
	K02		W1275	0531	24		80-11-21	ALL
	K03		W1275	0113	24		79-35-11	ALL
	K04		W1275	6147	24		27-23-11	ALL
	K05		W1275	6043	24		29-22-11	ALL
	K06		W1275	6006	24		31-51-33	ALL
	K07		W1275	0866	24		29-35-11	ALL
	K08	UNUSED						ALL
	K09		W1275	0466	24		73-21-22	ALL
	K10		W1275	0107	24		79-33-11	ALL
	K11	UNUSED						ALL
	K12		W1275	6114	24		31-41-24	ALL
	K13		W1275	0794	24		29-11-22	ALL
	K14		W1275	0800	24		29-31-11	ALL
	K15		W1275	5948	22		31-41-24	ALL
	DED		W1275	2503Z			77-12-31	ALL
	DED		W1275	2518Z			77-12-21	ALL
	DED		W1275	2523Z			79-34-11	ALL
	DED		W1275	5014Z			77-11-11	ALL
	DED		W1275	5067Z			77-11-11	ALL
	DED		W1275	6211Z			36-21-11	115-199
D00321E		E4-2/ /		PLUG-				ALL
	A01		W1275	0173	24		31-51-41	ALL
	A02		W1275	0647	24		26-11-11	ALL
	A03		W1275	0854	24		29-33-11	ALL
	A04		W1275	0213	24		30-33-11	ALL
	A05		W1275	0184	24		30-21-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 44

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00321E		E4-2/ /		PLUG- (continued)				ALL
	A06		W1275	0206	24		30-31-12	ALL
	A07		W1275	0216	24		30-32-11	ALL
	A08		W1275	6480	24		30-34-22	ALL
	A09		W1275	0375	24		22-14-31	ALL
	A10		W1275	0290	24		27-09-14	ALL
	A11		W1275	0609	24		33-51-11	ALL
	A12		W1275	5646	24		24-34-11	ALL
	A13		W1275	0155	24		34-53-11	ALL
	A14		W1275	2511R	24		77-12-11	ALL
	A15		W1275	4502G	22		77-21-11	ALL
	B01		W1275	5569	24		27-51-41	ALL
	B02		W1275	5045R	24		77-31-11	ALL
	B03		W1275	5045B	24		77-31-11	ALL
	B04		W1275	5006R	24		22-41-13	ALL
	B05		W1275	5006B	24		22-41-13	ALL
	B06		W1275	5008R	24		22-32-12	ALL
	B07		W1275	5008B	24		22-32-12	ALL
	B08		W1275	5051R	24		34-61-25	ALL
	B09		W1275	5051B	24		34-61-25	ALL
	B10		W1275	5036R	24		31-41-22	ALL
	B11		W1275	5036B	24		31-41-22	ALL
	B12		W1275	0285	24		27-41-11	ALL
	B13		W1275	6510	24		24-25-13	001-099
	B13	UNUSED						115-199
	B14		W1275	2511B	24		77-12-11	ALL
	B15		W1275	4502W	22		77-21-11	ALL
	C01		W1275	0878	24		28-22-21	ALL
	C02		W1275	0892	24		28-22-31	001-008, 115-199
	C02		W1275	5990	24		28-22-31	009-099
	C03		W1275	0199	24		30-31-11	ALL
	C04		W1275	0231	24		30-41-12	ALL
	C05		W1275	0228	24		30-41-12	ALL
	C06		W1275	0222	24		30-41-11	ALL
	C07		W1275	0863	24		29-33-11	ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10		W1275	0198	24		31-31-01	001-099
	C10		W1275	0198	24		31-31-13	115-199
	C11		W1275	6170	24		26-16-21	ALL
	C12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 45

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00321E		E4-2/ /		PLUG- (continued)				ALL
	C13	UNUSED						ALL
	C14		W1275	0195	24		30-21-11	ALL
	C15		W1275	5659	24		24-34-11	ALL
	D01		W1275	5565	24		27-51-41	ALL
	D02		W1275	0164	24		31-51-41	ALL
	D03		W1275	6276	24		28-41-13	ALL
	D04		W1275	0885	24		28-41-11	ALL
	D05		W1275	0880	24		28-22-21	ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08		W1275	6263	24		27-23-21	ALL
	D09		W1275	5507	24		27-51-31	ALL
	D10	UNUSED						ALL
	D11		W1275	6239	24		32-61-12	001-099
	D11		W1275	6239	24		32-61-11	115-199
	D12	UNUSED						ALL
	D13		W1275	0888	24		28-41-13	ALL
	D14		W1275	5726	24		21-58-12	ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02		W1275	6198	24		21-52-31	ALL
	E03	UNUSED						ALL
	E04		W1275	0443	24		79-31-11	ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07		W1275	0135	24		24-11-11	ALL
	E08		W1275	0150	24		24-11-21	ALL
	E09		W1275	5821	24		24-28-21	ALL
	E10		W1275	5824	24		24-28-21	ALL
	E11		W1275	5828	24		24-28-21	ALL
	E12		W1275	5818	24		24-28-21	ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01		W1275	5042R	24		28-41-11	ALL
	F02		W1275	5042B	24		28-41-11	ALL
	F03		W1275	5035R	24		31-41-22	ALL
	F04		W1275	5035B	24		31-41-22	ALL
	F05		W1275	5039R	24		31-41-22	ALL
	F06		W1275	5039B	24		31-41-22	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 46

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00321E		E4-2/ /		PLUG- (continued)				ALL
	F07		W1275	5031R	24		31-41-19	ALL
	F08		W1275	5031B	24		31-41-19	ALL
	F09		W1275	5080R	24		77-31-11	ALL
	F10		W1275	5080B	24		77-31-11	ALL
	F11		W1275	5066R	24		34-25-11	001, 003-099, 115-199
	F11		W1275	5066R	24		34-25-13	002
	F12		W1275	5066B	24		34-25-11	001, 003-099, 115-199
	F12		W1275	5066B	24		34-25-13	002
	F13		W1275	0039	24		21-31-21	ALL
	F14		W1275	0037	24		21-31-11	ALL
	F15	UNUSED						ALL
	G01		W1275	5944	24		31-41-24	ALL
	G02		W1275	6060	24		26-16-11	ALL
	G03	UNUSED						001-002, 115-199
	G03		W1275	0992	24		34-45-02	003-099
	G04		W1275	0649	24		26-11-11	ALL
	G05		W1275	0100	24		26-13-21	ALL
	G06		W1275	0693	24		26-11-22	ALL
	G07		W1275	0706	24		26-12-21	ALL
	G08		W1275	5542	24		24-25-13	001-099
	G08	UNUSED						115-199
	G09		W1275	5535	24		24-28-11	ALL
	G10		W1275	5532	24		24-28-11	ALL
	G11		W1275	5529	24		24-28-11	ALL
	G12		W1275	5538	24		24-28-11	ALL
	G13		W1275	5858	24		79-31-11	ALL
	G14		W1275	5641	24		24-34-11	ALL
	G15		W1275	0289	24		27-31-12	ALL
	H01	UNUSED						001-099
	H01		W1275	0412	24		32-46-11	115-199
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04		W1275	0973	24		27-18-11	ALL
	H05		W1275	0967	24		27-18-11	ALL
	H06		W1275	5505	24		27-38-11	ALL
	H07		W1275	0997	24		27-38-11	ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10		W1275	0981	24		27-28-11	ALL
	H11		W1275	5864	24		79-32-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 47

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00321E		E4-2/ /		PLUG- (continued)				ALL
	H12		W1275	6178	24		32-41-11	ALL
	H13		W1275	6225	24		21-52-21	ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01		W1275	6119	24		31-41-24	ALL
	J02	UNUSED						ALL
	J03		W1275	5730	24		73-34-11	ALL
	J04		W1275	6118	24		31-41-24	ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07		W1275	0613	24		32-61-12	001-099
	J07		W1275	0613	24		32-61-11	115-199
	J08		W1275	6117	24		31-41-24	ALL
	J09	UNUSED						ALL
	J10		W1275	5781	24		21-61-31	ALL
	J11		W1275	6424	24		27-09-14	ALL
	J12		W1275	6401	24		21-52-21	ALL
	J13	UNUSED						ALL
	J14		W1275	5652	24		24-34-11	ALL
	J15	UNUSED						001-099
	J15		W1275	0914	24		32-46-11	115-199
	K01		W1275	6116	24		31-41-24	ALL
	K02		W1275	5601	24		36-22-11	ALL
	K03		W1275	5587	24		36-11-11	ALL
	K04		W1275	6296	24		49-94-11	001-099
	K04	UNUSED						115-199
	K05		W1275	0203	24		30-31-11	ALL
	K06		W1275	5584	24		36-11-21	ALL
	K07		W1275	5589	24		36-11-12	ALL
	K08		W1275	0205	24		30-31-12	ALL
	K09		W1275	6428	24		27-09-14	ALL
	K10		W1275	5605	24		36-22-11	ALL
	K11		W1275	5592	24		36-11-22	ALL
	K12		W1275	6278	24		30-31-12	ALL
	K13		W1275	6420	24		27-09-14	ALL
	K14		W1275	0575	24		34-61-15	ALL
	K15		W1275	5949	22		31-41-24	ALL
I	CAP	Y	W1275	5542	24		24-25-13	115-199
I	CAP	Y	W1275	6510	24		24-25-13	115-199
	DED		W1275	5066Z			34-25-11	001, 003-099, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 48

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00321E		E4-2/ /		PLUG- (continued)				ALL
	DED		W1275	5051Z			34-61-25	001-099
	DED		W1275	2511Z			77-12-11	ALL
	DED		W1275	4502Z			77-21-11	ALL
	DED		W1275	5006Z			22-41-13	ALL
	DED		W1275	5008Z			22-32-12	ALL
	DED		W1275	5031Z			31-41-19	ALL
	DED		W1275	5035Z			31-41-22	ALL
	DED		W1275	5036Z			31-41-22	ALL
	DED		W1275	5039Z			31-41-22	ALL
	DED		W1275	5042Z			28-41-11	ALL
	DED		W1275	5045Z			77-31-11	ALL
	DED		W1275	5080Z			77-31-11	ALL
	DED		W1275	5066Z			34-25-13	002
D00321F		E4-2/ /		PLUG-				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03		W1275	5662	24		24-25-13	001-099
	A03	UNUSED						115-199
	A04		W1275	5649	24		24-34-11	ALL
	A05		W1275	6013	24		49-71-11	ALL
	A06		W1275	6015	24		49-73-11	ALL
	A07		W1275	2056B	24		21-52-11	001-099
	A07	UNUSED						115-199
	A08		W1275	2056R	24		21-52-11	001-099
	A08	UNUSED						115-199
	A09		W1275	0586	24		34-22-37	ALL
	A10		W1275	6016	24		49-61-11	ALL
	B01		W1275	2030B	24		24-34-11	ALL
	B02		W1275	2030R	24		24-34-11	ALL
	B03		W1275	0352	24		24-33-12	ALL
	B04		W1275	5965	24		31-41-34	ALL
	B05		W1275	5871	24		80-11-21	ALL
	B06		W1275	0129	24		49-61-11	ALL
	B07		W1275	5942	24		31-41-24	ALL
	B08		W1275	0200	24		30-31-11	ALL
	B09		W1275	6221	24		21-64-11	ALL
	B10		W1275	5851	24		77-12-42	ALL
	C01		W1275	2077B	24		21-52-11	001-099
	C01	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 49

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00321F		E4-2/ /		PLUG- (continued)				ALL
	C02		W1275	0617	24		32-61-12	ALL
	C03		W1275	0245	24		34-21-31	ALL
	C04		W1275	0251	24		34-21-31	ALL
	C05		W1275	0387	24		32-61-21	ALL
	C06	UNUSED						ALL
	C07		W1275	0395	24		32-61-21	ALL
	C08		W1275	6094	24		26-23-11	ALL
	C09		W1275	0791	24		29-11-22	ALL
	C10		W1275	0869	24		29-35-11	ALL
	D01		W1275	2077R	24		21-52-11	001-099
	D01	UNUSED						115-199
	D02		W1275	5748	24		21-51-15	ALL
	D03		W1275	0291	24		27-09-14	ALL
	D04		W1275	0719	24		26-15-11	ALL
	D05		W1275	0248	24		34-21-31	ALL
	D06		W1275	0391	24		32-61-21	ALL
	D07		W1275	6265	24		27-23-21	ALL
	D08		W1275	5943	24		31-41-24	ALL
	D09		W1275	0517	24		80-11-11	ALL
	D10		W1275	0896	24		28-42-21	ALL
	E01		W1275	6009	24		49-61-14	ALL
	E02		W1275	0270	22		24-33-12	001-099
	E02		W1275	0270	24		24-33-12	115-199
	E03		W1275	0751	24		26-21-11	ALL
	E04		W1275	0273	24		22-24-11	ALL
	E05		W1275	0363	24		34-12-22	ALL
	E06	UNUSED						ALL
	E07		W1275	6079	24		26-16-21	ALL
	E08		W1275	5766	24		21-58-12	ALL
	E09		W1275	5689	24		32-09-11	ALL
	E10	UNUSED						ALL
	F01		W1275	0621	24		36-11-41	ALL
	F02		W1275	0716	24		26-15-11	ALL
	F03	UNUSED						001-008, 115-199
	F03		W1275	1004	24		28-22-32	009-099
	F04	UNUSED						ALL
	F05		W1275	0639	24		21-58-12	ALL
	F06		W1275	0304	24		35-21-11	ALL
	F07		W1275	6069	24		26-16-11	ALL
	F08		W1275	5695	24		32-09-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 50

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00321F		E4-2/ /		PLUG- (continued)				ALL
	F09	UNUSED						ALL
	F10	UNUSED						001-099
I	F10		W1275	5577	24		49-94-14	115-199
	G01		W1275	6521	24		24-11-11	ALL
I	G02	UNUSED						ALL
	G03		W1275	6527	24		24-11-21	ALL
	G04		W1275	0830	24		29-32-11	ALL
	G05		W1275	0189	24		30-21-11	ALL
	G06		W1275	5721	24		29-35-11	ALL
	G07		W1275	5676	24		30-11-11	ALL
	G08		W1275	0185	24		30-21-11	ALL
	G09	UNUSED						ALL
	G10		W1275	5856	24		79-31-11	ALL
	H01	UNUSED						ALL
	H02	UNUSED						001-099
	H02		W1275	5131R	24		34-61-15	115-199
	H03	UNUSED						001-099
	H03		W1275	5131B	24		34-61-15	115-199
	H04		W1275	5990	24		28-22-31	001-008, 115-199
	H04		W1275	1006	24		28-22-32	009-099
	H05		W1275	6121	24		31-41-24	ALL
	H06		W1275	6255	24		29-21-31	ALL
	H07		W1275	5760	24		21-58-11	ALL
	H08		W1275	0942	24		28-42-11	ALL
	H09		W1275	0922	24		28-42-11	ALL
	H10		W1275	0955	24		32-42-11	ALL
	J01	UNUSED						ALL
	J02		W1275	5675	24		30-11-11	ALL
	J03		W1275	5718	24		29-35-11	ALL
I	J04		W1275	6509	24		24-25-13	001-099
I	J04	UNUSED						115-199
	J05		W1275	6120	24		31-41-24	ALL
	J06		W1275	6151	24		27-23-11	ALL
	J07	UNUSED						001-099
	J07		W1275	5769	24		21-58-24	115-199
	J08		W1275	5513	24		27-23-11	ALL
	J09		W1275	0934	24		28-42-11	ALL
	J10		W1275	5848	24		77-12-41	ALL
	K01	UNUSED						ALL
	K02		W1275	0788	24		29-11-22	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 51

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00321F		E4-2/ /		PLUG- (continued)				ALL
	K03		W1275	5724	24		29-35-11	ALL
	K04	UNUSED						ALL
	K05		W1275	0582	24		21-58-12	ALL
	K06		W1275	6253	24		29-21-31	ALL
	K07	UNUSED						001-099
	K07		W1275	5771	24		21-58-24	115-199
	K08		W1275	6135	24		27-23-11	ALL
	K09		W1275	5778	24		21-61-21	ALL
	K10		W1275	5714	24		29-21-32	ALL
	CAP	Y	W1275	5662	24		24-25-13	115-199
	CAP	Y	W1275	6509	24		24-25-13	115-199
D00325		P001-00/ /		PLUG-EICAS UPPER DISPLAY IND				001-099
D00325		P001-00/ /		RCPT-EICAS UPPER DISPLAY IND				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W2311	0001	22		31-41-11	ALL
	7		W2311	0002	22		31-41-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W2311	0009	24		31-41-19	ALL
	13		W2311	0010	24		31-41-19	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W2311	0003	22		31-41-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W2311	0011	24		31-41-14	ALL
	23		W2311	0012	24		31-41-14	ALL
	24		W2311	0013	24		31-41-14	ALL
	25	UNUSED						ALL
	26		W2311	0007	24		31-41-19	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 52

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00325		P001-00/ /		PLUG-EICAS UPPER DISPLAY IND (continued)				001-099
D00325		P001-00/ /		RCPT-EICAS UPPER DISPLAY IND (continued)				115-199
	27		W2311	0008	24		31-41-19	ALL
	28		W2311	2510R	24		31-41-19	ALL
	29		W2311	2510B	24		31-41-19	ALL
	30		W2311	0004	24		31-41-19	ALL
	31		W2311	0005	24		31-41-19	ALL
	32		W2311	0006	24		31-41-19	ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41		W2311	0014	22		31-41-11	ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49		W2311	2501T	24		31-41-11	ALL
	50		W2311	2501W	24		31-41-11	ALL
	51		W2311	2502T	24		31-41-11	ALL
	52		W2311	2502W	24		31-41-11	ALL
	53		W2311	2503T	24		31-41-11	ALL
	54		W2311	2503W	24		31-41-11	ALL
	55		W2311	2508T	24		31-41-11	ALL
	56		W2311	2508W	24		31-41-11	ALL
	57		W2311	2505T	24		31-41-11	ALL
	58		W2311	2505W	24		31-41-11	ALL
	59		W2311	2507T	24		31-41-11	ALL
	60		W2311	2507W	24		31-41-11	ALL
	61		W2311	2506W	24		31-41-11	ALL
	62		W2311	2506T	24		31-41-11	ALL
	63		W2311	2504T	24		31-41-11	ALL
	64		W2311	2504W	24		31-41-11	ALL
	65	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 53

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00325		P001-00/ /		PLUG-EICAS UPPER DISPLAY IND (continued)				001-099
D00325		P001-00/ /		RCPT-EICAS UPPER DISPLAY IND (continued)				115-199
	66	UNUSED						ALL
	67	UNUSED						ALL
	CAP	Y	W2311	2509T	24		SPARE	001-099
	CAP	Y	W2311	2509W	24		SPARE	001-099
	DED		W2311	2509Z			SPARE	001-099
	DED		W2311	2510Z			31-41-19	ALL
D00327		P001-00/ /		RCPT-EICAS LOWER DISPLAY IND				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W2313	0001	22		31-41-21	ALL
	7		W2313	0002	22		31-41-21	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W2313	0007	24		31-41-19	ALL
	13		W2313	0008	24		31-41-19	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W2313	0003	22		31-41-21	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W2313	0011	24		31-41-14	ALL
	23		W2313	0012	24		31-41-14	ALL
	24		W2313	0013	24		31-41-14	ALL
	25	UNUSED						ALL
	26		W2313	0009	24		31-41-19	ALL
	27		W2313	0010	24		31-41-19	ALL
	28		W2313	2510R	24		31-41-19	ALL
	29		W2313	2510B	24		31-41-19	ALL
	30		W2313	0004	24		31-41-19	ALL
	31		W2313	0005	24		31-41-19	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 54

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00327		P001-00/ /		RCPT-EICAS LOWER DISPLAY IND (continued)				ALL
	32		W2313	0006	24		31-41-19	ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41		W2313	0014	22		31-41-21	ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49		W2313	2501T	24		31-41-21	ALL
	50		W2313	2501W	24		31-41-21	ALL
	51		W2313	2502T	24		31-41-21	ALL
	52		W2313	2502W	24		31-41-21	ALL
	53		W2313	2503T	24		31-41-21	ALL
	54		W2313	2503W	24		31-41-21	ALL
	55		W2313	2508T	24		31-41-21	ALL
	56		W2313	2508W	24		31-41-21	ALL
	57		W2313	2505T	24		31-41-21	ALL
	58		W2313	2505W	24		31-41-21	ALL
	59		W2313	2507T	24		31-41-21	ALL
	60		W2313	2507W	24		31-41-21	ALL
	61		W2313	2506W	24		31-41-21	ALL
	62		W2313	2506T	24		31-41-21	ALL
	63		W2313	2504T	24		31-41-21	ALL
	64		W2313	2504W	24		31-41-21	ALL
	65	UNUSED						ALL
	66	UNUSED						ALL
	67	UNUSED						ALL
CAP	Y		W2313	2509T	24		SPARE	001-099
CAP	Y		W2313	2509W	24		SPARE	001-099
DED			W2313	2509Z			SPARE	001-099
DED			W2313	2510Z			31-41-19	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 55

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00331		P9/ /		PLUG-EICAS PILOTS DSPL SEL PNL				ALL
	1		W2315	0010	24		31-41-19	ALL
	2		W2315	0009	24		31-41-19	ALL
	3		W2315	0033	24		31-41-19	ALL
	4		W2315	0018	24		31-41-19	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W2315	0005	24		31-41-19	ALL
	9		W2315	0004	24		31-41-19	ALL
	10	UNUSED						ALL
	11		W2315	0011	24		31-41-19	ALL
	12		W2315	0012	24		31-41-19	ALL
	13		W2315	0013	24		31-41-19	ALL
	14		W2315	0006	24		31-41-19	ALL
	15		W2315	0007	24		31-41-19	ALL
	16		W2315	0008	24		31-41-19	ALL
	17		W2315	5002R	24		31-41-19	ALL
	18		W2315	5002B	24		31-41-19	ALL
	19		W2315	5001R	24		31-41-19	ALL
	20		W2315	5001B	24		31-41-19	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26		W2315	0029	24		31-41-19	ALL
	27		W2315	0022	24		31-41-19	ALL
	28		W2315	0019	24		31-41-19	ALL
	29		W2315	0030	24		31-41-19	ALL
	30	UNUSED						ALL
	31		W2315	0023	24		31-41-19	ALL
	32		W2315	0027	24		31-41-19	ALL
	33	UNUSED						ALL
	34		W2315	0031	24		31-41-19	ALL
	35		W2315	0032	24		31-41-19	ALL
	36		W2315	0024	24		31-41-19	ALL
	37		W2315	0025	24		31-41-19	ALL
	38		W2315	0001	22		31-41-19	ALL
	39		W2315	0002	24		31-41-19	ALL
	40		W2315	0015	20		33-13-52	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 56

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00331		P9/ /		PLUG-EICAS PILOTS DSPL SEL PNL (continued)				ALL
	41		W2315	0016	20		33-13-52	ALL
D00333		P005-00/ /		PLUG-				001-099
D00333		P5/ /		PLUG-				115-199
	1		W2351	0018	20		33-13-31	ALL
	2		W2351	0019	20		33-13-31	ALL
	3		W2351	0001	24		23-21-11	ALL
	4		W2351	0002	24		23-21-11	ALL
	5	UNUSED						ALL
	6		W2351	0004	24		23-21-11	ALL
	7		W2351	0005	24		23-21-11	ALL
	8		W2351	0006	24		23-21-11	ALL
	9		W2351	0007	24		23-21-11	ALL
	10	UNUSED						ALL
	11		W2351	0009	24		23-21-11	ALL
	12		W2351	0010	24		23-21-11	ALL
	13		W2351	0011	24		23-21-11	ALL
	14		W2351	0012	24		23-21-11	ALL
	15	UNUSED						ALL
	16		W2351	0014	24		23-21-11	ALL
	17		W2351	0015	24		23-21-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W2351	0032	22		23-42-11	ALL
	21		W2351	1001	22		23-42-11	ALL
	22	UNUSED						ALL
	23		W2351	0033	22		23-42-11	ALL
	24		W2351	1001Z			23-42-11	ALL
	25	UNUSED						ALL
	26		W2351	0034	22		23-42-11	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W2351	0035	22		23-42-11	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W2351	0053	24		31-51-33	ALL
	33		W2351	0046	22		23-43-11	ALL
	34	UNUSED						ALL
	35		W2351	0017	22		23-21-11	ALL
	36	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 57

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00333		P005-00/ /		PLUG- (continued)				001-099
D00333		P5/ /		PLUG- (continued)				115-199
	37		W2351	0047	20		23-43-11	ALL
	38		W2351	0050	22		23-43-11	ALL
	39		W2351	0049	22		23-43-11	ALL
	40		W2351	0020	22		33-16-52	ALL
	41		W2351	0021	22		33-16-52	ALL
	42		W2351	0052	20		21-58-11	ALL
	43	UNUSED						ALL
	44		W2351	0048	22		23-43-11	ALL
	45		W2351	0051	20		21-58-11	ALL
	46		W2351	0061	22		23-42-11	001-099
	46	UNUSED						115-199
	47		W2351	0016	24		23-21-11	ALL
	48		W2351	0008	24		23-21-11	ALL
	49		W2351	0013	24		23-21-11	ALL
	50		W2351	0045	24		23-22-11	001-099
	50		W2351	0045	24		SPARE	115-199
	51		W2351	0003	24		23-21-11	ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D00337		P008-00/ /		PLUG-				ALL
	1		W2335	4501AD	20		23-51-11	ALL
	2		W2335	4501B	24		23-51-11	ALL
	3		W2335	4501Y	24		23-51-11	ALL
	4		W2335	4501G	24		23-51-11	ALL
	5		W2335	4501K	24		23-51-11	ALL
	6		W2335	4501L	24		23-51-11	ALL
	7		W2335	4501O	24		23-51-13	ALL
	8		W2335	4501N	24		23-51-11	ALL
	9		W2335	4501P	24		23-51-11	ALL
	10		W2335	4501W	24		23-51-14	ALL
	11		W2335	4501WR	24		23-51-14	ALL
	12		W2335	4501WB	24		23-51-11	ALL
	13		W2335	4501WY	24		23-51-11	ALL
	14		W2335	4501WG	24		23-51-14	ALL
	15		W2335	4501WK	24		23-51-14	ALL
	16		W2335	4501WL	24		23-51-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 58

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00337		P008-00/ /		PLUG- (continued)				ALL
	17		W2335	4501WO	24		23-51-11	ALL
	18		W2335	4501WN	24		23-51-11	ALL
	19		W2335	4501AA	24		23-51-11	ALL
	20		W2335	4501	20		23-51-14	ALL
	21		W2335	4501RY	24		23-51-11	ALL
	22		W2335	4501RG	24		23-51-14	ALL
	23		W2335	4501RK	24		23-51-11	ALL
	24		W2335	4501RL	24		23-51-14	ALL
	25		W2335	4501RO	24		23-51-11	ALL
	26		W2335	4501RN	24		23-51-11	ALL
	27		W2335	4501AB	24		23-51-12	ALL
	28		W2335	4501BY	24		23-51-13	ALL
	29		W2335	4501BG	24		23-51-12	ALL
	30		W2335	4501BK	24		23-51-12	ALL
	31		W2335	4501BL	24		23-51-12	ALL
	32		W2335	4501BO	24		23-51-13	ALL
	33		W2335	4501BN	24		23-51-13	ALL
	34		W2335	4501AC	24		23-51-13	ALL
	35		W2335	4501YG	24		23-51-12	ALL
	36		W2335	4501YK	24		23-51-12	ALL
	37		W2335	4501YL	24		23-51-12	ALL
	38		W2335	4501YO	24		23-51-13	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D00339		P8/ /		PLUG-				ALL
	1	16	W2297	0001	16		33-13-52	ALL
	2	16	W2297	0002	16		33-13-52	ALL
	3		W2297	0003	22		23-51-11	ALL
	4		W2297	0007	20		23-51-11	ALL
	5		W2297	0004	24		23-51-11	ALL
	6		W2297	0005	24		23-51-11	ALL
	7		W2297	0006	24		23-51-11	ALL
	8		W2297	2502B	24		23-51-11	ALL
	9		W2297	2502R	24		23-51-11	ALL
	10		W2297	3501R	24		23-51-11	ALL
	11		W2297	3501Y	24		23-51-11	ALL
	12		W2297	3501B	24		23-51-11	ALL
	13		W2297	2002B	24		23-51-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 59

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00339		P8/ /		PLUG- (continued)				ALL
	14		W2297	2002R	24		23-51-11	ALL
	15		W2297	2501B	24		23-51-11	ALL
	16		W2297	2501R	24		23-51-11	ALL
	17		W2297	2001B	24		23-51-11	ALL
	18		W2297	2001R	24		23-51-11	ALL
	19		W2297	0009	24		23-51-11	ALL
	20		W2297	0010	24		23-51-11	ALL
	21		W2297	0011	24		23-51-11	ALL
	22		W2297	0022	24		23-51-11	001-099
	22		W2297	0008	24		23-51-11	115-199
	23		W2297	0012	24		23-51-11	ALL
	24		W2297	0012	24		23-51-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						001-099
	27		W2297	2003R	24		23-51-11	115-199
	28	UNUSED						001-099
	28		W2297	2003B	24		23-51-11	115-199
	29	UNUSED						001-008, 010-099
	29		W2297	2504B	24		23-51-11	009
	29		W2297	5001B	24		23-51-11	115-199
	30	UNUSED						001-008, 010-099
	30		W2297	2504R	24		23-51-11	009
	30		W2297	5001R	24		23-51-11	115-199
	31	UNUSED						ALL
DED			W2297	2504Z			23-51-11	009
DED			W2297	5001Z			23-51-11	115-199
			W2297	0013	20		23-51-11	ALL
			W2297	2501Z			23-51-11	ALL
			W2297	2502Z			23-51-11	ALL
			W2297	3501Z			23-51-11	ALL
D00340		404/288/L38		PLUG-				001-099
	1	UNUSED						001-099
	2	UNUSED						001-099
	3	UNUSED						001-099
	4	UNUSED						001-099
	5		W3514	0015	22		33-21-12	001-099
	6		W3514	0016	22		33-21-12	001-099
	7		W3514	0017	22		33-21-12	001-099

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 60

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00340		404/288/L38		PLUG- (continued)				001-099
	8		W3514	0018	22		33-21-12	001-099
	9		W3514	0019	22		33-21-12	001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
D00342		464/288/L38		PLUG-				001-099
D00342		463/288/L038		PLUG-				115-199
	1		W3514	0011	20		33-21-12	001-099
	1		W3514	0111	20		33-21-12	115-199
	2		W3514	0012	20		33-21-12	001-099
	2		W3514	0112	20		33-21-12	115-199
	3		W3514	0013	24		33-21-12	001-099
	3		W3514	0113	24		33-21-12	115-199
	4		W3514	0014	20		33-21-12	001-099
	4		W3514	0114	20		33-21-12	115-199
	5		W3514	0015	22		33-21-12	001-099
	5		W3514	0115	22		33-21-12	115-199
	6		W3514	0016	22		33-21-12	001-099
	6		W3514	0116	22		33-21-12	115-199
	7		W3514	0017	22		33-21-12	001-099
	7		W3514	0117	22		33-21-12	115-199
	8		W3514	0018	22		33-21-12	001-099
	8		W3514	0118	22		33-21-12	115-199
	9		W3514	0019	22		33-21-12	001-099
	9		W3514	0119	22		33-21-12	115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00344		524/288/L38		PLUG-				001-099
D00344		523/288/L037		PLUG-				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W3514	0025	22		33-21-12	001-099
	5		W3514	0115	22		33-21-12	115-199
	6		W3514	0026	22		33-21-12	001-099
	6		W3514	0116	22		33-21-12	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 61

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00344		524/288/L38		PLUG- (continued)				001-099
D00344		523/288/L037		PLUG- (continued)				115-199
	7		W3514	0027	22		33-21-12	001-099
	7		W3514	0117	22		33-21-12	115-199
	8		W3514	0028	22		33-21-12	001-099
	8		W3514	0118	22		33-21-12	115-199
	9		W3514	0029	22		33-21-12	001-099
	9		W3514	0119	22		33-21-12	115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00345		FIN135/RS/		PLUG-				ALL
	1		W3103	0003	18		22-21-11	ALL
	2		W3103	0002	18		22-21-11	ALL
	3		W3103	2003B	20		22-21-11	ALL
	4		W3103	2003R	20		22-21-11	ALL
	5		W3103	2004R	20		22-21-11	ALL
	6		W3103	2004B	20		22-21-11	ALL
	7		W3103	3002Y	20		22-21-11	ALL
	8		W3103	3002R	20		22-21-11	ALL
	9		W3103	3002B	20		22-21-11	ALL
	10		W3103	0004	18		22-21-11	ALL
	CAP	Y	W3103	2007B	20		22-21-11	ALL
	CAP	Y	W3103	2007R	20		22-21-11	ALL
D00346		584/288/L38		PLUG-				001-099
D00346		583/288/L038		PLUG-				115-199
	1		W3514	0021	20		33-21-12	001-099
	1		W3514	0121	20		33-21-12	115-199
	2		W3514	0022	20		33-21-12	001-099
	2		W3514	0122	20		33-21-12	115-199
	3		W3514	0023	24		33-21-12	001-099
	3		W3514	0123	24		33-21-12	115-199
	4		W3514	0024	20		33-21-12	001-099
	4		W3514	0124	20		33-21-12	115-199
	5		W3514	0025	22		33-21-12	001-099
	5		W3514	0125	22		33-21-12	115-199
	6		W3514	0026	22		33-21-12	001-099
	6		W3514	0126	22		33-21-12	115-199
	7		W3514	0027	22		33-21-12	001-099

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 62

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00346		584/288/L38		PLUG- (continued)				001-099
D00346		583/288/L038		PLUG- (continued)				115-199
	7		W3514	0127	22		33-21-12	115-199
	8		W3514	0028	22		33-21-12	001-099
	8		W3514	0128	22		33-21-12	115-199
	9		W3514	0029	22		33-21-12	001-099
	9		W3514	0129	22		33-21-12	115-199
	10		W3514	0020	20		33-21-51	001-099
	10		W3514	0120	20		33-21-51	115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
D00347		FIN135/RS/		PLUG-				ALL
	1		W3113	0002	18		22-21-21	ALL
	2		W3113	0001	18		22-21-21	ALL
	3		W3113	2003B	20		22-21-21	ALL
	4		W3113	2003R	20		22-21-21	ALL
	5		W3113	2004R	20		22-21-21	ALL
	6		W3113	2004B	20		22-21-21	ALL
	7		W3113	3002Y	20		22-21-21	ALL
	8		W3113	3002R	20		22-21-21	ALL
	9		W3113	3002B	20		22-21-21	ALL
	10		W3113	0003	18		22-21-21	ALL
	CAP	Y	W3113	2007B	20		22-21-21	ALL
	CAP	Y	W3113	2007R	20		22-21-21	ALL
D00348		643/288/L037		PLUG-				115-199
	1	UNUSED						115-199
	2	UNUSED						115-199
	3	UNUSED						115-199
	4	UNUSED						115-199
	5		W3514	0125	22		33-21-12	115-199
	6		W3514	0126	22		33-21-12	115-199
	7		W3514	0127	22		33-21-12	115-199
	8		W3514	0128	22		33-21-12	115-199
	9		W3514	0129	22		33-21-12	115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 63

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00349A		E003-01/ /		PLUG-				ALL
	A01		W1265	0097	22		22-21-11	ALL
	A02		W1265	0103	22		22-21-11	ALL
	A03	UNUSED						ALL
	A04		W1265	0089	22		22-21-11	ALL
	A05		W1265	0101	22		22-21-11	ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14		W1265	5104R	24		22-21-11	ALL
	A15		W1265	5104B	24		22-21-11	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05		W1265	0100	22		22-21-11	ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01		W1265	0096	22		22-21-11	ALL
	C02		W1265	0102	22		22-21-11	ALL
	C03	UNUSED						ALL
	C04		W1265	0088	22		22-21-11	ALL
	C05		W1265	0093	22		22-21-11	ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 64

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00349A		E003-01/ /		PLUG- (continued)				ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14		W1265	3104B	22		22-21-11	ALL
	C15		W1265	3104Y	22		22-21-11	ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04		W1265	0087	22		22-21-11	ALL
	D05		W1265	0094	22		22-21-11	ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14		W1265	3104R	22		22-21-11	ALL
	D15		W1265	2129B	22		22-21-11	ALL
	E01		W1265	3009B	22		22-21-11	ALL
	E02		W1265	3009Y	22		22-21-11	ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14		W1265	2129R	22		22-21-11	ALL
	E15		W1265	2130B	22		22-21-11	ALL
	F01		W1265	3008Y	22		22-21-11	ALL
	F02		W1265	3009R	22		22-21-11	ALL
	F03	UNUSED						ALL
	F04		W1265	0086	22		22-21-11	ALL
	F05	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 65

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00349A		E003-01/ /		PLUG- (continued)				ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14		W1265	2130R	22		22-21-11	ALL
	F15		W1265	0299	22		22-21-11	ALL
	G01		W1265	3008R	22		22-21-11	ALL
	G02		W1265	3008B	22		22-21-11	ALL
	G03	UNUSED						ALL
	G04		W1265	0099	22		22-21-11	ALL
	G05		W1265	0098	22		22-21-11	ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01		W1265	3007B	22		22-21-11	ALL
	H02		W1265	3007Y	22		22-21-11	ALL
	H03	UNUSED						ALL
	H04		W1265	0004	22		27-09-12	ALL
	H05		W1265	0090	22		22-21-11	ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12		W1265	2028B	22		22-21-11	ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15		W1265	0310	22		22-21-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 66

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00349A		E003-01/ /		PLUG- (continued)				ALL
	J01		W1265	3006Y	22		22-21-11	ALL
	J02		W1265	3007R	22		22-21-11	ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01		W1265	3006R	22		22-21-11	ALL
	K02		W1265	3006B	22		22-21-11	ALL
	K03	UNUSED						ALL
	K04		W1265	5007R	24		22-21-11	ALL
	K05		W1265	5007B	24		22-21-11	ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12		W1265	2028R	22		22-21-11	ALL
	K13	UNUSED						ALL
	K14		W1265	5010R	24		22-21-11	ALL
	K15		W1265	5010B	24		22-21-11	ALL
	DED		W1265	5007Z			22-21-11	ALL
	DED		W1265	5010Z			22-21-11	ALL
	DED		W1265	5104Z			22-21-11	ALL
D00349B		E003-01/ /		PLUG-				ALL
	A01		W1265	0304	22		22-21-11	ALL
	A02		W1265	0309	22		22-21-11	ALL
	A03	UNUSED						ALL
	A04		W1265	0323	22		22-21-11	ALL
	A05	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 67

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00349B		E003-01/ /		PLUG- (continued)				ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12		W1265	0228	22		27-09-13	ALL
	A13	UNUSED						ALL
	A14		W1265	5201R	24		22-21-11	ALL
	A15		W1265	5201B	24		22-21-11	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12		W1265	0229	22		27-09-13	ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01		W1265	0305	22		22-21-11	ALL
	C02		W1265	0308	22		22-21-11	ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14		W1265	0415	22		27-09-12	ALL
	C15		W1265	0483	22		22-21-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 68

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00349B		E003-01/ /		PLUG- (continued)				ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01		W1265	3112B	22		22-21-11	ALL
	E02		W1265	3112Y	22		22-21-11	ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01		W1265	3111Y	22		22-21-11	ALL
	F02		W1265	3112R	22		22-21-11	ALL
	F03	UNUSED						ALL
	F04		W1265	0238	22		27-09-14	ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07		W1265	0687	22		22-21-11	ALL
	F08		W1265	0691	22		22-21-11	ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 69

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00349B		E003-01/ /		PLUG- (continued)				ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01		W1265	3111R	22		22-21-11	ALL
	G02		W1265	3111B	22		22-21-11	ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07		W1265	0686	22		22-21-11	ALL
	G08		W1265	0685	22		22-21-11	ALL
	G09	UNUSED						ALL
	G10		W1265	0621	22		27-09-14	ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01		W1265	3110B	22		22-21-11	ALL
	H02		W1265	3110Y	22		22-21-11	ALL
	H03	UNUSED						ALL
	H04		W1265	0220	22		27-09-12	ALL
	H05		W1265	0322	22		22-21-11	ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10		W1265	0180	24		31-31-62	001-099
	H10		W1265	0180	24		31-31-32	115-199
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01		W1265	3109Y	22		22-21-11	ALL
	J02		W1265	3110R	22		22-21-11	ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 70

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00349B		E003-01/ /		PLUG- (continued)				ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01		W1265	3109R	22		22-21-11	ALL
	K02		W1265	3109B	22		22-21-11	ALL
	K03	UNUSED						ALL
	K04		W1265	5103R	24		22-21-11	ALL
	K05		W1265	5103B	24		22-21-11	ALL
	K06	UNUSED						ALL
	K07		W1265	0326	22		22-21-11	ALL
	K08		W1265	0325	22		22-21-11	ALL
	K09	UNUSED						ALL
	K10		W1265	0693	22		22-21-11	ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14		W1265	2501R	22		22-21-11	ALL
	K15		W1265	2501B	22		22-21-11	ALL
	DED		W1265	5201Z			22-21-11	ALL
D00349C		E003-01/ /		PLUG-				ALL
	1		W1265	0580	20		22-21-11	ALL
	2		W1265	0582	16		22-21-11	ALL
	3		W1265	0583	16		22-21-11	ALL
	4		W1265	0581	20		22-21-11	ALL
	5	UNUSED						ALL
	6		W1265	0584	20		22-21-11	ALL
	7	UNUSED						ALL
	8		W1265	0585	16		22-21-11	ALL
	9		W1265	0586	16		22-21-11	ALL
	10		W1265	0587	16		22-21-11	ALL
	11	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 71

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00349C		E003-01/ /		PLUG- (continued)				ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	=C12	UNUSED						ALL
	=C13	UNUSED						ALL
D00350		704/288/L38		PLUG-				001-099
D00350		704/288/L038		PLUG-				115-199
	1		W3514	0031	20		33-21-12	ALL
	2		W3514	0032	20		33-21-12	ALL
	3		W3514	0033	24		33-21-12	ALL
	4		W3514	0034	20		33-21-12	ALL
	5		W3514	0035	22		33-21-12	ALL
	6		W3514	0036	22		33-21-12	ALL
	7		W3514	0037	22		33-21-12	ALL
	8		W3514	0038	22		33-21-12	ALL
	9		W3514	0039	22		33-21-12	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00351A		E004-01/ /		PLUG-				001-099
D00351A		E4-1/ /		PLUG-				115-199
	A01		W1165	0075	22		22-21-21	ALL
	A02		W1165	0082	22		22-21-21	ALL
	A03	UNUSED						ALL
	A04		W1165	0146	22		22-21-21	ALL
	A05		W1165	0142	22		22-21-21	ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14		W1165	5001R	24		22-21-21	ALL
	A15		W1165	5001B	24		22-21-21	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 72

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00351A		E004-01/ /		PLUG- (continued)				001-099
D00351A		E4-1/ /		PLUG- (continued)				115-199
	B04	UNUSED						ALL
	B05		W1165	0141	22		22-21-21	ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01		W1165	0074	22		22-21-21	ALL
	C02		W1165	0081	22		22-21-21	ALL
	C03	UNUSED						ALL
	C04		W1165	0145	22		22-21-21	ALL
	C05		W1165	0043	22		22-21-21	ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14		W1165	3001B	22		22-21-21	ALL
	C15		W1165	3001Y	22		22-21-21	ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04		W1165	0144	22		22-21-21	ALL
	D05		W1165	0044	22		22-21-21	ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 73

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00351A		E004-01/ /		PLUG- (continued)				001-099
D00351A		E4-1/ /		PLUG- (continued)				115-199
	D13	UNUSED						ALL
	D14		W1165	3001R	22		22-21-21	ALL
	D15		W1165	2025B	22		22-21-21	ALL
	E01		W1165	3008B	22		22-21-21	ALL
	E02		W1165	3008Y	22		22-21-21	ALL
	E03	UNUSED						ALL
	E04		W1165	0143	22		22-21-21	ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14		W1165	2025R	22		22-21-21	ALL
	E15		W1165	2026B	22		22-21-21	ALL
	F01		W1165	3007Y	22		22-21-21	ALL
	F02		W1165	3008R	22		22-21-21	ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14		W1165	2026R	22		22-21-21	ALL
	F15		W1165	0067	22		22-21-21	ALL
	G01		W1165	3007R	22		22-21-21	ALL
	G02		W1165	3007B	22		22-21-21	ALL
	G03	UNUSED						ALL
	G04		W1165	0076	22		22-21-21	ALL
	G05		W1165	0077	22		22-21-21	ALL
	G06	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 74

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00351A		E004-01/ /		PLUG- (continued)				001-099
D00351A		E4-1/ /		PLUG- (continued)				115-199
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01		W1165	3006B	22		22-21-21	ALL
	H02		W1165	3006Y	22		22-21-21	ALL
	H03	UNUSED						ALL
	H04		W1165	0033	22		27-09-12	ALL
	H05		W1165	0104	22		22-21-21	ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12		W1165	2222B	22		22-21-21	ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15		W1165	0355	22		22-21-21	ALL
	J01		W1165	3005Y	22		22-21-21	ALL
	J02		W1165	3006R	22		22-21-21	ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 75

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00351A		E004-01/ /		PLUG- (continued)				001-099
D00351A		E4-1/ /		PLUG- (continued)				115-199
	K01		W1165	3005R	22		22-21-21	ALL
	K02		W1165	3005B	22		22-21-21	ALL
	K03	UNUSED						ALL
	K04		W1165	5002R	24		22-21-21	ALL
	K05		W1165	5002B	24		22-21-21	ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12		W1165	2222R	22		22-21-21	ALL
	K13	UNUSED						ALL
	K14		W1165	5101R	24		22-21-21	ALL
	K15		W1165	5101B	24		22-21-21	ALL
	DED		W1165	5001Z			22-21-21	ALL
	DED		W1165	5101Z			22-21-21	ALL
D00351B		E004-01/ /		PLUG-				001-099
D00351B		E4-1/ /		PLUG-				115-199
	A01		W1165	0285	22		22-21-21	ALL
	A02		W1165	0289	22		22-21-21	ALL
	A03	UNUSED						ALL
	A04		W1165	0309	22		22-21-21	ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12		W1165	0583	22		27-09-13	ALL
	A13	UNUSED						ALL
	A14		W1165	5201R	24		22-21-21	ALL
	A15		W1165	5201B	24		22-21-21	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 76

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00351B		E004-01/ /		PLUG- (continued)				001-099
D00351B		E4-1/ /		PLUG- (continued)				115-199
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12		W1165	0584	22		27-09-13	ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01		W1165	0292	22		22-21-21	ALL
	C02		W1165	0288	22		22-21-21	ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14		W1165	0459	22		27-09-12	ALL
	C15		W1165	0469	22		22-21-21	ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 77

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00351B		E004-01/ /		PLUG- (continued)				001-099
D00351B		E4-1/ /		PLUG- (continued)				115-199
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01		W1165	3105B	22		22-21-21	ALL
	E02		W1165	3105Y	22		22-21-21	ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01		W1165	3104Y	22		22-21-21	ALL
	F02		W1165	3105R	22		22-21-21	ALL
	F03	UNUSED						ALL
	F04		W1165	0243	22		27-09-14	ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07		W1165	0302	22		22-21-21	ALL
	F08		W1165	0304	22		22-21-21	ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01		W1165	3104R	22		22-21-21	ALL
	G02		W1165	3104B	22		22-21-21	ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07		W1165	0300	22		22-21-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 78

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00351B		E004-01/ /		PLUG- (continued)				001-099
D00351B		E4-1/ /		PLUG- (continued)				115-199
	G08		W1165	0299	22		22-21-21	ALL
	G09	UNUSED						ALL
	G10		W1165	0625	22		27-09-14	ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01		W1165	3103B	22		22-21-21	ALL
	H02		W1165	3103Y	22		22-21-21	ALL
	H03	UNUSED						ALL
	H04		W1165	0235	22		27-09-12	ALL
	H05		W1165	0306	22		22-21-21	ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10		W1165	0375	24		31-31-62	001-099
	H10		W1165	0375	24		31-31-32	115-199
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01		W1165	3102Y	22		22-21-21	ALL
	J02		W1165	3103R	22		22-21-21	ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 79

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00351B		E004-01/ /		PLUG- (continued)				001-099
D00351B		E4-1/ /		PLUG- (continued)				115-199
	K01		W1165	3102R	22		22-21-21	ALL
	K02		W1165	3102B	22		22-21-21	ALL
	K03	UNUSED						ALL
	K04		W1165	5103R	24		22-21-21	ALL
	K05		W1165	5103B	24		22-21-21	ALL
	K06	UNUSED						ALL
	K07		W1165	0648	22		22-21-21	ALL
	K08		W1165	0647	22		22-21-21	ALL
	K09	UNUSED						ALL
	K10		W1165	0110	22		22-21-21	ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14		W1165	2501R	22		22-21-21	ALL
	K15		W1165	2501B	22		22-21-21	ALL
	DED		W1165	5103Z			22-21-21	ALL
D00351C		E004-01/ /		PLUG-				001-099
D00351C		E4-1/ /		PLUG-				115-199
	1		W1165	0506	20		22-21-21	ALL
	2		W1165	0510	16		22-21-21	ALL
	3		W1165	0511	16		22-21-21	ALL
	4		W1165	0507	20		22-21-21	ALL
	5	UNUSED						ALL
	6		W1165	0508	20		22-21-21	ALL
	7	UNUSED						ALL
	8		W1165	0509	16		22-21-21	ALL
	9		W1165	0512	16		22-21-21	ALL
	10		W1165	0513	16		22-21-21	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
D00354		764/288/L38		PLUG-				001-099
D00354		764/288/L038		PLUG-				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 80

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00354		764/288/L38		PLUG- (continued)				001-099
D00354		764/288/L038		PLUG- (continued)				115-199
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W3514	0035	22		33-21-12	ALL
	6		W3514	0036	22		33-21-12	ALL
	7		W3514	0037	22		33-21-12	ALL
	8		W3514	0038	22		33-21-12	ALL
	9		W3514	0039	22		33-21-12	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00356		824/288/L38		PLUG-				001-099
D00356		824/288/L038		PLUG-				115-199
	1		W3514	0041	20		33-21-12	001-099
	1		W3514	0141	20		33-21-12	115-199
	2		W3514	0042	20		33-21-12	001-099
	2		W3514	0142	20		33-21-12	115-199
	3		W3514	0043	24		33-21-12	001-099
	3		W3514	0143	24		33-21-12	115-199
	4		W3514	0044	20		33-21-12	001-099
	4		W3514	0144	20		33-21-12	115-199
	5		W3514	0045	22		33-21-12	001-099
	5		W3514	0145	22		33-21-12	115-199
	6		W3514	0046	22		33-21-12	001-099
	6		W3514	0146	22		33-21-12	115-199
	7		W3514	0047	22		33-21-12	001-099
	7		W3514	0147	22		33-21-12	115-199
	8		W3514	0048	22		33-21-12	001-099
	8		W3514	0148	22		33-21-12	115-199
	9		W3514	0049	22		33-21-12	001-099
	9		W3514	0149	22		33-21-12	115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00358		884/288/L037		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 81

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00358		884/288/L037		PLUG- (continued)				ALL
	4	UNUSED						ALL
	5		W3514	0045	22		33-21-12	001-099
	5		W3514	0145	22		33-21-12	115-199
	6		W3514	0046	22		33-21-12	001-099
	6		W3514	0146	22		33-21-12	115-199
	7		W3514	0047	22		33-21-12	001-099
	7		W3514	0147	22		33-21-12	115-199
	8		W3514	0048	22		33-21-12	001-099
	8		W3514	0148	22		33-21-12	115-199
	9		W3514	0049	22		33-21-12	001-099
	9		W3514	0149	22		33-21-12	115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00360		944/288/L38		PLUG-				ALL
	1		W3516	0051	20		33-21-13	ALL
	2		W3516	0052	20		33-21-13	ALL
	3		W3516	0053	24		33-21-13	ALL
	4		W3516	0054	20		33-21-13	ALL
	5		W3516	0055	22		33-21-13	ALL
	6		W3516	0056	22		33-21-13	ALL
	7		W3516	0057	22		33-21-13	ALL
	8		W3516	0058	22		33-21-13	ALL
	9		W3516	0059	22		33-21-13	ALL
	10		W3516	0050	20		33-21-51	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00362		1004/288/L38		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W3516	0055	22		33-21-13	ALL
	6		W3516	0056	22		33-21-13	ALL
	7		W3516	0057	22		33-21-13	ALL
	8		W3516	0058	22		33-21-13	ALL
	9		W3516	0059	22		33-21-13	ALL
	10	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 82

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00362		1004/288/L38		PLUG- (continued)				ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00364		1064/288/L38		PLUG-				ALL
	1		W3516	0061	20		33-21-13	ALL
	2		W3516	0062	20		33-21-13	ALL
	3		W3516	0063	24		33-21-13	ALL
	4		W3516	0064	20		33-21-13	ALL
	5		W3516	0065	22		33-21-13	ALL
	6		W3516	0066	22		33-21-13	ALL
	7		W3516	0067	22		33-21-13	ALL
	8		W3516	0068	22		33-21-13	ALL
	9		W3516	0069	22		33-21-13	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00366		1124/288/L38		PLUG-				001-099
D00366		1124/288/L37		PLUG-				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W3516	0065	22		33-21-13	ALL
	6		W3516	0066	22		33-21-13	ALL
	7		W3516	0067	22		33-21-13	ALL
	8		W3516	0068	22		33-21-13	ALL
	9		W3516	0069	22		33-21-13	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00368		1184/288/L38		PLUG-				ALL
	1		W3516	0071	20		33-21-13	ALL
	2		W3516	0072	20		33-21-13	ALL
	3		W3516	0073	24		33-21-13	ALL
	4		W3516	0074	20		33-21-13	ALL
	5		W3516	0075	22		33-21-13	ALL
	6		W3516	0076	22		33-21-13	ALL
	7		W3516	0077	22		33-21-13	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 83

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00368		1184/288/L38		PLUG- (continued)				ALL
	8		W3516	0078	22		33-21-13	ALL
	9		W3516	0079	22		33-21-13	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00374		1344/288/L38		PLUG-				ALL
	1		W3518	0011	20		33-21-14	001-099
	1		W3518	0101	20		33-21-14	115-199
	2		W3518	0012	20		33-21-14	001-099
	2		W3518	0102	20		33-21-14	115-199
	3		W3518	0013	24		33-21-14	001-099
	3		W3518	0103	24		33-21-14	115-199
	4		W3518	0014	20		33-21-14	001-099
	4		W3518	0104	20		33-21-14	115-199
	5		W3518	0015	22		33-21-14	001-099
	5		W3518	0105	22		33-21-14	115-199
	6		W3518	0016	22		33-21-14	001-099
	6		W3518	0106	22		33-21-14	115-199
	7		W3518	0017	22		33-21-14	001-099
	7		W3518	0107	22		33-21-14	115-199
	8		W3518	0018	22		33-21-14	001-099
	8		W3518	0108	22		33-21-14	115-199
	9		W3518	0019	22		33-21-14	001-099
	9		W3518	0109	22		33-21-14	115-199
	10		W3518	0010	20		33-21-51	001-099
	10		W3518	0110	20		33-21-51	115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
D00376		1404/288/L38		PLUG-				001-099
D00376		1404/288/L37		PLUG-				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W3518	0015	22		33-21-14	001-099
	5		W3518	0105	22		33-21-14	115-199
	6		W3518	0016	22		33-21-14	001-099
	6		W3518	0106	22		33-21-14	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 84

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00376		1404/288/L38		PLUG- (continued)				001-099
D00376		1404/288/L37		PLUG- (continued)				115-199
	7		W3518	0017	22		33-21-14	001-099
	7		W3518	0107	22		33-21-14	115-199
	8		W3518	0018	22		33-21-14	001-099
	8		W3518	0108	22		33-21-14	115-199
	9		W3518	0019	22		33-21-14	001-099
	9		W3518	0109	22		33-21-14	115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00378		1464/288/L38		PLUG-				001-099
D00378		1464/288/L37		PLUG-				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W3518	0025	22		33-21-14	001-099
	5		W3518	0115	22		33-21-14	115-199
	6		W3518	0026	22		33-21-14	001-099
	6		W3518	0116	22		33-21-14	115-199
	7		W3518	0027	22		33-21-14	001-099
	7		W3518	0117	22		33-21-14	115-199
	8		W3518	0028	22		33-21-14	001-099
	8		W3518	0118	22		33-21-14	115-199
	9		W3518	0029	22		33-21-14	001-099
	9		W3518	0119	22		33-21-14	115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00380		1524/288/L38		PLUG-				ALL
	1		W3518	0021	20		33-21-14	001-099
	1		W3518	0111	20		33-21-14	115-199
	2		W3518	0022	20		33-21-14	001-099
	2		W3518	0112	20		33-21-14	115-199
	3		W3518	0023	24		33-21-14	001-099
	3		W3518	0113	24		33-21-14	115-199
	4		W3518	0024	20		33-21-14	001-099
	4		W3518	0114	20		33-21-14	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 85

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00380		1524/288/L38		PLUG- (continued)				ALL
	5		W3518	0025	22		33-21-14	001-099
	5		W3518	0115	22		33-21-14	115-199
	6		W3518	0026	22		33-21-14	001-099
	6		W3518	0116	22		33-21-14	115-199
	7		W3518	0027	22		33-21-14	001-099
	7		W3518	0117	22		33-21-14	115-199
	8		W3518	0028	22		33-21-14	001-099
	8		W3518	0118	22		33-21-14	115-199
	9		W3518	0029	22		33-21-14	001-099
	9		W3518	0119	22		33-21-14	115-199
	10		W3518	0020	20		33-21-51	001-099
	10		W3518	0120	20		33-21-51	115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
D00381		FIN117/RS/		PLUG-				ALL
	1	UNUSED						ALL
	2		W3103	0001	20		27-21-12	ALL
	3		W3103	0006	20		27-21-12	ALL
	4	UNUSED						ALL
	5		W3103	2002R	20		27-21-12	ALL
	6		W3103	2002B	20		27-21-12	ALL
	7		W3103	0007	20		27-21-12	ALL
	CAP	Y	W3103	2006B	20		27-21-12	ALL
	CAP	Y	W3103	2006R	20		27-21-12	ALL
D00382		1584/288/L38		PLUG-				ALL
	1		W3518	0031	20		33-21-14	001-099
	1		W3518	0121	20		33-21-14	115-199
	2		W3518	0032	20		33-21-14	001-099
	2		W3518	0122	20		33-21-14	115-199
	3		W3518	0033	24		33-21-14	001-099
	3		W3518	0123	24		33-21-14	115-199
	4		W3518	0034	20		33-21-14	001-099
	4		W3518	0124	20		33-21-14	115-199
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 86

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00382		1584/288/L38		PLUG- (continued)				ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00383A D00383A		E002-03/ / E2-3/ /		PLUG- PLUG-				001-099 115-199
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06		W1175	5038B	24		22-32-11	ALL
	A07		W1175	5038R	24		22-32-11	ALL
	A08		W1175	5039R	24		22-32-11	ALL
	A09		W1175	5039B	24		22-32-11	ALL
	A10		W1175	3002Y	22		22-32-13	ALL
	A11		W1175	3002B	22		22-32-13	ALL
	A12		W1175	3002R	22		22-32-13	ALL
	A13		W1175	2015B	22		22-31-12	ALL
	A14		W1175	2015R	22		22-31-12	ALL
	A15		W1175	2014B	24		22-31-12	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05		W1175	5095R	24		22-33-11	ALL
	B06		W1175	5095B	24		22-33-11	ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11		W1175	0096	22		22-32-14	ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15		W1175	2014R	24		22-31-12	ALL
	C01	UNUSED						ALL
	C02		W1175	5037R	24		22-32-11	ALL
	C03		W1175	5037B	24		22-32-11	ALL
	C04	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 87

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00383A		E002-03/ /		PLUG- (continued)				001-099
D00383A		E2-3/ /		PLUG- (continued)				115-199
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09		W1175	0302	24		22-32-13	ALL
	C10	UNUSED						ALL
	C11		W1175	0095	22		22-32-14	ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01		W1175	0327	24		22-32-15	ALL
	D02	UNUSED						ALL
	D03		W1175	2537R	24		22-32-12	ALL
	D04		W1175	2537B	24		22-32-12	ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10		W1175	0092	22		22-32-14	ALL
	D11		W1175	0094	22		22-32-14	001-099
	D11		W1175	0405	22		22-32-14	115-199
	D12		W1175	0091	22		22-32-14	ALL
	D13		W1175	0105	22		22-32-14	ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03		W1175	0119	24		22-32-13	ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 88

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00383A		E002-03/ /		PLUG- (continued)				001-099
D00383A		E2-3/ /		PLUG- (continued)				115-199
	E13	UNUSED						ALL
	E14		W1175	0097	22		22-32-14	ALL
	E15		W1175	0106	22		22-32-14	ALL
	F01		W1175	5028B	24		22-41-12	ALL
	F02		W1175	5028R	24		22-41-12	ALL
	F03		W1175	0099	22		22-32-14	ALL
	F04		W1175	0116	24		22-32-13	ALL
	F05		W1175	0115	24		22-32-13	ALL
	F06	UNUSED						ALL
	F07		W1175	0104	22		22-32-14	ALL
	F08	UNUSED						ALL
	F09		W1175	0102	22		22-32-14	ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04		W1175	0120	24		22-32-13	ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08		W1175	0093	22		22-32-14	ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11		W1175	0118	24		22-32-13	ALL
	G12	UNUSED						ALL
	G13		W1175	2007B	24		22-33-11	ALL
	G14		W1175	2007R	24		22-33-11	ALL
	G15		W1175	0081	24		22-32-15	ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06		W1175	0100	22		22-32-14	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 89

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00383A		E002-03/ /		PLUG- (continued)				001-099
D00383A		E2-3/ /		PLUG- (continued)				115-199
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15		W1175	0138	22		22-32-14	ALL
	J01		W1175	5041B	24		22-32-11	ALL
	J02		W1175	5041R	24		22-32-11	ALL
	J03		W1175	0121	24		22-32-13	ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09		W1175	2013R	24		22-32-13	ALL
	J10		W1175	0264	22		22-32-14	ALL
	J11	UNUSED						ALL
	J12		W1175	0101	22		22-32-14	ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02		W1175	0117	24		22-32-13	ALL
	K03		W1175	0141	22		22-31-12	ALL
	K04	UNUSED						ALL
	K05		W1175	0098	22		22-32-14	ALL
	K06		W1175	0086	24		22-32-15	ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09		W1175	2013B	24		22-32-13	ALL
	K10		W1175	0123	24		22-32-13	ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 90

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00383A		E002-03/ /		PLUG- (continued)				001-099
D00383A		E2-3/ /		PLUG- (continued)				115-199
	DED		W1175	2537Z			22-32-12	ALL
	DED		W1175	5028Z			22-41-12	ALL
	DED		W1175	5037Z			22-32-11	ALL
	DED		W1175	5038Z			22-32-11	ALL
	DED		W1175	5039Z			22-32-11	ALL
	DED		W1175	5041Z			22-32-11	ALL
	DED		W1175	5095Z			22-33-11	ALL
D00383B		E002-03/ /		PLUG-				001-099
D00383B		E2-3/ /		PLUG-				115-199
	A01	UNUSED						ALL
	A02		W1175	2016R	24		22-31-12	ALL
	A03		W1175	2016B	24		22-31-12	ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11		W1175	5098R	24		22-33-11	ALL
	A12		W1175	5098B	24		22-33-11	ALL
	A13		W1175	5045R	24		22-32-11	ALL
	A14		W1175	5044R	24		22-32-11	ALL
	A15		W1175	5042B	24		22-32-11	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03		W1175	0074	22		22-34-11	ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09		W1175	5094R	24		22-33-11	ALL
	B10		W1175	5094B	24		22-33-11	ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13		W1175	5045B	24		22-32-11	ALL
	B14		W1175	5044B	24		22-32-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 91

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00383B		E002-03/ /		PLUG- (continued)				001-099
D00383B		E2-3/ /		PLUG- (continued)				115-199
	B15		W1175	5042R	24		22-32-11	ALL
	C01		W1175	0110	22		22-32-14	ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07		W1175	0090	24		22-32-15	ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15		W1175	0396	22		22-41-11	001-099
	C15		W1175	1025	22		22-41-11	115-199
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04		W1175	0127	24		22-32-13	ALL
	D05		W1175	0124	24		22-32-13	ALL
	D06		W1175	0125	24		22-32-13	ALL
	D07	UNUSED						ALL
	D08		W1175	0077	22		22-34-11	ALL
	D09		W1175	0076	22		22-34-11	ALL
	D10		W1175	0111	22		22-32-14	ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13		W1175	0073	22		22-34-11	ALL
	D14	UNUSED						ALL
	D15		W1175	3501B	24		22-32-12	ALL
	E01	UNUSED						ALL
	E02		W1175	0130	22		22-32-13	ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 92

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00383B		E002-03/ /		PLUG- (continued)				001-099
D00383B		E2-3/ /		PLUG- (continued)				115-199
	E08		W1175	0288	22		22-32-13	ALL
	E09		W1175	3501R	24		22-32-12	ALL
	E10		W1175	0128	22		22-32-13	ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13		W1175	0083	24		22-32-15	ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01		W1175	0084	24		22-32-15	ALL
	F02		W1175	0107	22		22-32-14	ALL
	F03	UNUSED						ALL
	F04	UNUSED						001-099
	F04		W1175	0319	22		22-32-14	115-199
	F05		W1175	0079	24		22-32-15	ALL
	F06		W1175	0108	22		22-32-14	ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13		W1175	0306	24		22-32-13	ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02		W1175	0126	24		22-32-13	ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06		W1175	5031B	24		22-32-12	ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11		W1175	0109	22		22-32-14	ALL
	G12		W1175	3501Y	24		22-32-12	ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 93

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00383B		E002-03/ /		PLUG- (continued)				001-099
D00383B		E2-3/ /		PLUG- (continued)				115-199
	H01	UNUSED						ALL
	H02		W1175	0114	24		22-32-13	ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06		W1175	5031R	24		22-32-12	ALL
	H07		W1175	0336	24		22-32-13	ALL
	H08		W1175	0122	24		22-32-13	ALL
	H09		W1175	0113	24		22-32-13	ALL
	H10		W1175	0103	22		22-32-14	ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01		W1175	0129	22		22-32-13	ALL
	J02		W1175	2010B	24		22-33-11	ALL
	J03		W1175	2010R	24		22-33-11	ALL
	J04		W1175	2011B	24		22-32-13	ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08		W1175	5036B	24		22-32-11	ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11		W1175	5091R	24		22-33-11	ALL
	J12		W1175	5033R	24		22-32-12	ALL
	J13		W1175	5033B	24		22-32-12	ALL
	J14		W1175	5032B	24		22-32-12	ALL
	J15		W1175	5032R	24		22-32-12	ALL
	K01		W1175	2017B	22		22-31-11	ALL
	K02		W1175	2017R	22		22-31-11	ALL
	K03	UNUSED						ALL
	K04		W1175	2011R	24		22-32-13	ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08		W1175	5036R	24		22-32-11	ALL
	K09	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 94

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00383B		E002-03/ /		PLUG- (continued)				001-099
D00383B		E2-3/ /		PLUG- (continued)				115-199
	K10	UNUSED						ALL
	K11		W1175	5091B	24		22-33-11	ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
	DED		W1175	3501Z			22-32-12	ALL
	DED		W1175	5031Z			22-32-12	ALL
	DED		W1175	5032Z			22-32-12	ALL
	DED		W1175	5033Z			22-32-12	ALL
	DED		W1175	5036Z			22-32-11	ALL
	DED		W1175	5042Z			22-32-11	ALL
	DED		W1175	5044Z			22-32-11	ALL
	DED		W1175	5045Z			22-32-11	ALL
	DED		W1175	5091Z			22-33-11	ALL
	DED		W1175	5094Z			22-33-11	ALL
	DED		W1175	5098Z			22-33-11	ALL
	DED		W1175	1025Z			22-41-11	115-199
D00383C		E002-03/ /		PLUG-				001-099
D00383C		E2-3/ /		PLUG-				115-199
	1		W1175	0088	24		22-32-15	ALL
	2		W1175	0136	20		22-31-12	ALL
	3		W1175	0150	20		22-31-11	ALL
	4	UNUSED						ALL
	5		W1175	0372	20		22-31-12	001-099
	5		W1175	1003	20		22-31-12	115-199
	6		W1175	0147	20		22-31-11	ALL
	7		W1175	0140	20		22-31-12	ALL
	8		W1175	0149	20		22-31-11	ALL
	9		W1175	0137	20		22-31-12	ALL
	10		W1175	0142	20		22-31-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	=C12	UNUSED						ALL
	=C13	UNUSED						ALL
	DED		W1175	1003Z			22-31-12	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 95

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00397		P3-1/ /		PLUG				ALL
	1		W0003	0203	20		33-13-21	ALL
	2		W0003	0204	20		33-13-21	ALL
	3		W0003	2005R	22		22-31-12	ALL
	4		W0003	2005B	22		22-31-12	ALL
	5		W0003	2004R	24		22-31-12	ALL
	6		W0003	2004B	24		22-31-12	ALL
	7		W0003	2003B	24		22-31-12	ALL
	8		W0003	2003R	24		22-31-12	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26		W0003	5031R	24		22-32-11	ALL
	27		W0003	5031B	24		22-32-11	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W0003	0201	20		22-31-12	ALL
	DED		W0003	5031Z			22-32-11	ALL
D00399		218/198/R08		PLUG-				ALL
	A		W2355	3005Y	20		22-32-13	ALL
	B		W2355	0024	22		22-32-13	ALL
	C		W2355	0023	22		22-32-13	ALL
	D		W2355	3005R	20		22-32-13	ALL
	E	UNUSED						ALL
	F	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 96

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00399		218/198/R08		PLUG- (continued)				ALL
	G	UNUSED						ALL
	H	UNUSED						ALL
	J	UNUSED						ALL
	K	UNUSED						ALL
	L	UNUSED						ALL
	M		W2355	2005B	24		22-32-13	ALL
	N		W2355	2005R	24		22-32-13	ALL
	P	UNUSED						ALL
	R	UNUSED						ALL
	S	UNUSED						ALL
	T	UNUSED						ALL
	U	UNUSED						ALL
	V	UNUSED						ALL
	W	UNUSED						ALL
	X		W2355	0016	24		22-31-11	ALL
	Y		W2355	0017	20		22-31-11	ALL
	Z		W2355	0018	20		22-31-11	ALL
	A-		W2355	0019	20		22-31-11	ALL
	B-		W2355	0020	20		22-31-11	ALL
	C-	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00300

Page 97 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00401		P001-01/ /		PLUG				001-099
D00401		P001-3/ /		PLUG				115-199
	1		W0001	0332	22		22-14-11	ALL
	2		W0001	0460	22		22-14-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0001	0031	22		22-14-11	ALL
	6	UNUSED						ALL
	7		W0001	0023	22		22-14-11	ALL
	8		W0001	0459	22		22-14-11	ALL
	9		W0001	0458	22		22-14-11	ALL
	10	UNUSED						ALL
	11		W0001	0037	20		22-14-11	ALL
	12	UNUSED						ALL
D00403		P3-1/ /		PLUG				ALL
	1		W0003	0324	22		22-14-21	ALL
	2		W0003	0460	22		22-14-21	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0003	0154	22		22-14-21	ALL
	6	UNUSED						ALL
	7		W0003	0153	22		22-14-21	ALL
	8		W0003	0459	22		22-14-21	ALL
	9		W0003	0458	22		22-14-21	ALL
	10	UNUSED						ALL
	11		W0003	0162	20		22-14-21	ALL
	12	UNUSED						ALL
D00413		1885/210/L005		JACK-				ALL
	BLK		W2822	A-E			23-41-12	ALL
	BLU		W2822	A-C			23-41-12	ALL
	RED		W2822	A-D			23-41-12	ALL
D00415		E006-01/ /		JACK-				001-099
D00415		E6/ /		JACK				115-199
	BLK		W1026	A-YE			23-41-12	ALL
	BLU		W1026	A-BL			23-41-12	ALL
	RED		W1026	A-RD			23-41-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00400

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00417		0SS503/ /		JACK-				ALL
	BLK		W3426	A-AC			23-41-12	ALL
	BLU		W3426	A-AB			23-41-12	ALL
	RED		W3426	A-AA			23-41-12	ALL
D00423		470/160/R027		JACK-				001-099
D00423		470/160/R27		JACK-				115-199
	BLK		W4473	A-AC			23-41-12	ALL
	BLU		W4473	A-AB			23-41-12	ALL
	RED		W4473	A-AA			23-41-12	ALL
D00425		P62/ /		JACK -				ALL
	BLK		W3054	A-H			23-41-12	ALL
	BLU		W3054	A-G			23-41-12	ALL
	RED		W3054	A-F			23-41-12	ALL
D00427		P72/ /		JACK-SERVICE INTERPHONE				ALL
	BLK		W2512	A-AC			23-41-12	ALL
	BLU		W2512	A-AB			23-41-12	ALL
	RED		W2512	A-AA			23-41-12	ALL
D00429		1760/182/L018		JACK				001-099
D00429		1760/182/L018		JACK,INTERPHONE				115-199
	BLK		W2654	A-CA			23-41-12	ALL
	BLU		W2654	A-CB			23-41-12	ALL
	RED		W2654	A-CC			23-41-12	ALL
D00433A		E002-03/ /		PLUG-				001-099
D00433A		E2-3/ /		PLUG-				115-199
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						001, 003-099, 115-199
	A03		W1175	5156W	24		34-46-14	002
	A04	UNUSED						ALL
	A05	UNUSED						001, 003-099, 115-199
	A05		W1175	5150R	22		34-46-12	002
	A06	UNUSED						001, 003-099, 115-199
	A06		W1175	5150B	22		34-46-12	002
	A07	UNUSED						ALL
	A08	UNUSED						001, 003-099, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D00400

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00433A		E002-03/ /		PLUG- (continued)				001-099
D00433A		E2-3/ /		PLUG- (continued)				115-199
	A08		W1175	5134R	22		34-46-12	002
	A09	UNUSED						ALL
	A10	UNUSED						001, 003-099, 115-199
	A10		W1175	8003	22		34-46-13	002
	A11		W1175	0605	22		34-46-12	001, 003-008, 115-199
	A11	UNUSED						002
	A11		W1175	0605	22		34-46-13	009-099
	A12		W1175	0606	22		34-46-11	ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						001, 003-099, 115-199
	B03		W1175	5156B	24		34-46-14	002
	B04	UNUSED						ALL
	B05	UNUSED						001, 003-008, 115-199
	B05		W1175	8006	22		34-46-13	002
	B05		W1175	0448	22		34-46-13	009-099
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						001, 003-099, 115-199
	B08		W1175	5134B	22		34-46-12	002
	B09	UNUSED						ALL
	B10		W1175	0603	22		34-46-12	001, 003-008, 115-199
	B10	UNUSED						002
	B10		W1175	0603	22		34-46-13	009-099
	B11	UNUSED						001-008, 115-199
	B11		W1175	0446	22		34-46-13	009-099
	B12	UNUSED						001, 003-099, 115-199
	B12		W1175	8564	22		34-46-14	002
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						001, 003-099, 115-199
	C01		W1175	5153R	22		34-46-12	002
	C02	UNUSED						001, 003-099, 115-199
	C02	VM	W1175	8007	22		34-46-13	002
	C03	UNUSED						001, 003-099, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D00400

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00433A		E002-03/ /		PLUG- (continued)				001-099
D00433A		E2-3/ /		PLUG- (continued)				115-199
	C03		W1175	5157W	24		34-46-14	002
	C04	UNUSED						ALL
	C05	UNUSED						001, 003-099, 115-199
	C05		W1175	5165R	22		34-46-14	002
	C06	UNUSED						ALL
	C07	UNUSED						001, 003-099, 115-199
	C07		W1175	0598	22		34-46-14	002
	C08	UNUSED						001, 003-099, 115-199
	C08		W1175	5158R	22		34-46-14	002
	C09		W1175	5104R	24		34-46-12	ALL
	C10		W1175	0604	22		34-46-12	001, 003-008, 115-199
	C10		W1175	8002	22		34-46-13	002
	C10		W1175	0604	22		34-46-13	009-099
	C11	UNUSED						001, 003-008, 115-199
	C11	VM	W1175	5201R	22		34-58-21	002
	C11		W1175	0447	22		34-46-13	009-099
	C12	UNUSED						001, 003-099, 115-199
	C12		W1175	8005	22		34-46-13	002
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						001, 003-099, 115-199
	D01		W1175	5153B	22		34-46-12	002
	D02	UNUSED						ALL
	D03	UNUSED						001, 003-099, 115-199
	D03		W1175	5157B	24		34-46-14	002
	D04	UNUSED						001, 003-099, 115-199
	D04		W1175	8004	22		34-46-13	002
	D05	UNUSED						001, 003-099, 115-199
	D05		W1175	5165B	22		34-46-14	002
	D06	UNUSED						001, 003-099, 115-199
	D06	VM	W1175	8008	22		34-46-13	002
	D07	UNUSED						001, 003-099, 115-199
	D07		W1175	0624	22		34-46-14	002
	D08	UNUSED						001, 003-099, 115-199
	D08		W1175	5158B	22		34-46-14	002
	D09		W1175	5104B	24		34-46-12	ALL
	D10		W1175	0602	22		34-46-11	001, 003-008, 115-199
	D10		W1175	0597	22		34-46-14	002

HOOKUP LIST

D280N032

91-21-51

Section D00400

Page 4

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00433A		E002-03/ /		PLUG- (continued)				001-099
D00433A		E2-3/ /		PLUG- (continued)				115-199
	D10		W1175	0602	22		34-46-13	009-099
	D11	UNUSED						001, 003-008, 115-199
	D11	VM	W1175	5201B	22		34-58-21	002
	D11		W1175	0736	22		34-46-13	009-099
	D12		W1175	0615	22		34-46-12	001, 003-099, 115-199
	D12		W1175	0801	22		34-46-12	002
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	DED		W1175	5104Z			34-46-12	ALL
	DED		W1175	5134Z			34-46-12	002
	DED		W1175	5150Z			34-46-12	002
	DED		W1175	5153Z			34-46-12	002
	DED		W1175	5156Z			34-46-14	002
	DED		W1175	5157Z			34-46-14	002
	DED		W1175	5158Z			34-46-14	002
	DED		W1175	5165Z			34-46-14	002
	DED		W1175	5201Z			34-58-21	002
D00433B		E002-03/ /		PLUG-				001-099
D00433B		E2-3/ /		PLUG-				115-199
	A01		W1175	0249	24		34-46-12	ALL
	A02	UNUSED						001, 003-008, 115-199
	A02		W1175	8021	22		34-46-13	002
	A02		W1175	0709	22		34-46-13	009-099
	A03		W1175	0601	22		34-46-11	001, 003-008, 115-199
	A03		W1175	8010	22		34-46-13	002
	A03	UNUSED						009-099
	A04	UNUSED						001-008, 115-199
	A04		W1175	0708	22		34-46-13	009-099
	A05	UNUSED						001, 003-008, 115-199
	A05		W1175	8022	22		34-46-13	002
	A05		W1175	0452	22		34-46-13	009-099
	A06		W1175	5068R	24		34-46-12	ALL
	A07	UNUSED						001-008, 115-199
	A07		W1175	0450	22		34-46-13	009-099
	A08	UNUSED						001, 003-008
	A08		W1175	8023	22		34-46-13	002
	A08		W1175	0294	22		34-46-13	009-099

HOOKUP LIST

D280N032

91-21-51

Section D00400

Page 5

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00433B		E002-03/ /		PLUG- (continued)				001-099
D00433B		E2-3/ /		PLUG- (continued)				115-199
	A08		W1175	0294	24		34-46-12	115-199
	A09		W1175	0248	24		34-46-11	ALL
	A10	UNUSED						001, 003-099, 115-199
	A10		W1175	5164R	22		34-46-14	002
	A11		W1175	5069R	24		34-46-12	ALL
	A12	UNUSED						001, 003-099, 115-199
	A12		W1175	5135R	22		34-46-12	002
	A13		W1175	5067R	24		34-46-12	ALL
	A14	UNUSED						001-008, 115-199
	A14		W1175	0657	22		34-46-13	009-099
	A15	UNUSED						001-008, 115-199
	A15		W1175	0455	22		34-46-13	009-099
	B01	UNUSED						ALL
	B02	UNUSED						001-008, 115-199
	B02		W1175	0449	22		34-46-13	009-099
	B03	UNUSED						ALL
	B04	UNUSED						001, 003-099, 115-199
	B04		W1175	8020	22		34-46-13	002
	B05	UNUSED						001-008, 115-199
	B05		W1175	0453	22		34-46-13	009-099
	B06		W1175	5068B	24		34-46-12	ALL
	B07		W1175	0247	22		34-46-11	001, 003-099, 115-199
	B07		W1175	8018	22		34-46-13	002
	B08	UNUSED						001-008, 115-199
	B08		W1175	0454	22		34-46-13	009-099
	B09		W1175	0243	24		34-46-11	ALL
	B10	UNUSED						001, 003-099, 115-199
	B10		W1175	5164B	22		34-46-14	002
	B11		W1175	5069B	24		34-46-12	ALL
	B12	UNUSED						001, 003-099, 115-199
	B12		W1175	5135B	22		34-46-12	002
	B13		W1175	5067B	24		34-46-12	ALL
	B14	UNUSED						001, 003-008, 115-199
	B14		W1175	0683	22		34-46-11	002
	B14		W1175	0658	22		34-46-13	009-099
	B15	UNUSED						001-008, 115-199
	B15		W1175	0456	22		34-46-13	009-099
	C01		W1175	5084R	24		31-31-42	001, 003-099
	C01		W1175	5155R	22		34-46-12	002

HOOKUP LIST

D280N032

91-21-51

Section D00400

Page 6

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00433B		E002-03/ /		PLUG- (continued)				001-099
D00433B		E2-3/ /		PLUG- (continued)				115-199
	C01		W1175	5072R	24		SPARE	115-199
	C02	UNUSED						001, 003-008, 115-199
	C02		W1175	8016	22		34-46-13	002
	C02		W1175	0614	22		34-46-13	009-099
	C03	UNUSED						ALL
	C04	UNUSED						001, 003-008, 115-199
	C04		W1175	8014	22		34-46-13	002
	C04		W1175	0734	22		34-46-13	009-099
	C05	UNUSED						ALL
	C06	UNUSED						001, 003-008, 115-199
	C06		W1175	5197R	22		34-46-12	002
	C06		W1175	0625	22		34-46-13	009-099
	C07		W1175	0259	22		34-46-12	ALL
	C08		W1175	0621	22		34-46-11	001, 003-008, 115-199
	C08		W1175	8011	22		34-46-13	002
	C08		W1175	0621	22		34-46-13	009-099
	C09		W1175	0241	24		34-46-11	ALL
	C10		W1175	5099R	24		34-46-12	ALL
	C11		W1175	5065R	24		34-46-12	001-099
	C11	UNUSED						115-199
	C12		W1175	5102R	24		34-46-12	ALL
	C13		W1175	5066R	24		34-46-12	001-008, 010-099
	C13		W1175	5087R	24		34-46-12	009, 115-199
	C14	UNUSED						001, 003-008, 115-199
	C14		W1175	0599	22		34-46-14	002
	C14		W1175	0735	22		34-46-13	009-099
	C15	UNUSED						001, 003-008
	C15	VM	W1175	8019	22		34-46-13	002
	C15		W1175	0408	22		34-46-13	009-099
	C15		W1175	0408	22		34-46-12	115-199
	D01		W1175	5084B	24		31-31-42	001, 003-099
	D01		W1175	5155B	22		34-46-12	002
	D01		W1175	5072B	24		SPARE	115-199
	D02	UNUSED						ALL
	D03		W1175	0423	22		34-46-11	001, 003-099
	D03	WI	W1175	0423	22		34-46-11	002
	D03		W1175	0331	22		34-46-11	115-199
	D04	UNUSED						001, 003-099, 115-199
	D04		W1175	8009	22		34-46-13	002

HOOKUP LIST

D280N032

91-21-51

Section D00400

Page 7

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00433B		E002-03/ /		PLUG- (continued)				001-099
D00433B		E2-3/ /		PLUG- (continued)				115-199
	D05	UNUSED						001-008, 115-199
	D05		W1175	0451	22		34-46-13	009-099
	D06	UNUSED						001, 003-008, 115-199
	D06		W1175	5197B	22		34-46-12	002
	D06		W1175	0310	22		34-46-13	009-099
	D07	UNUSED						001-099
	D07		W1175	0293	24		34-46-12	115-199
	D08	UNUSED						ALL
	D09		W1175	0244	24		34-46-11	ALL
	D10		W1175	5099B	24		34-46-12	ALL
	D11		W1175	5065B	24		34-46-12	001-099
	D11	UNUSED						115-199
	D12		W1175	5102B	24		34-46-12	ALL
	D13		W1175	5066B	24		34-46-12	001-008, 010-099
	D13		W1175	5087B	24		34-46-12	009, 115-199
	D14		W1175	0406	22		34-46-12	001, 003-008, 115-199
	D14		W1175	8012	22		34-46-13	002
	D14		W1175	0406	22		34-46-13	009-099
	D15	UNUSED						001, 003-099, 115-199
	D15		W1175	8015	22		34-46-13	002
	CAP	Y	W1175	0254	24		34-46-12	001, 003-099, 115-199
	CAP	Y	W1175	5065B	24		34-46-12	115-199
	CAP	Y	W1175	5065R	24		34-46-12	115-199
	DED		W1175	5084Z			31-31-42	001, 003-099
	DED		W1175	5066Z			34-46-12	001-008, 010-099
	DED		W1175	5065Z			34-46-12	ALL
	DED		W1175	5067Z			34-46-12	ALL
	DED		W1175	5068Z			34-46-12	ALL
	DED		W1175	5069Z			34-46-12	ALL
	DED		W1175	5099Z			34-46-12	ALL
	DED		W1175	5102Z			34-46-12	ALL
	DED		W1175	5135Z			34-46-12	002
	DED		W1175	5155Z			34-46-12	002
	DED		W1175	5162Z			34-58-11	002
	DED		W1175	5164Z			34-46-14	002
	DED		W1175	5197Z			34-46-12	002
	DED		W1175	5087Z			34-46-12	009, 115-199
	DED		W1175	5072Z			SPARE	115-199
	REF	VM	W1175	5162B	22		34-58-11	002

HOOKUP LIST

D280N032

91-21-51

Section D00400

Page 8

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00433B		E002-03/ /		PLUG- (continued)				001-099
D00433B		E2-3/ /		PLUG- (continued)				115-199
	REF	VM	W1175	5162R	22		34-58-11	002
D00433C		E002-03/ /		PLUG-				001-099
D00433C		E2-3/ /		PLUG-				115-199
	1	UNUSED						ALL
	2		W1175	0237	24		34-46-11	001-099
	2		W1175	0237	22		34-46-11	115-199
	3		W1175	0238	20		34-46-11	ALL
	4		W1175	0239	20		34-46-11	ALL
	5	UNUSED						ALL
	= C1	UNUSED						ALL
	= C5	UNUSED						ALL
D00435		P62/ /		JACK -				ALL
	BLK		W3054	A-C			23-51-13	ALL
	BLU		W3054	A-B			23-51-13	ALL
	RED		W3054	A-A			23-51-13	ALL
D00441		P8/ /		PLUG-				001-009
	1		W2229	0005	20		33-13-52	001-009
	2		W2229	0006	20		33-13-52	001-009
	3	UNUSED						001-009
	4	UNUSED						001-009
	5	UNUSED						001-009
	6	UNUSED						001-009
	7		W2229	0001	20		34-57-21	001-009
	8		W2229	1004	20		34-57-21	001-009
	9		W2229	1003	22		34-57-21	001-009
	10		W2229	1002	22		34-57-21	001-009
	11	UNUSED						001-009
	12		W2229	5001R	24		34-57-21	001-009
	13		W2229	5001B	24		34-57-21	001-009
	14		W2229	5001Z			34-57-21	001-009
	15	UNUSED						001-009
	16	UNUSED						001-009
	17	UNUSED						001-009
	18	UNUSED						001-009
	19	UNUSED						001-009
	20	UNUSED						001-009

HOOKUP LIST

D280N032

91-21-51

Section D00400

Page 9

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00441		P8/ /		PLUG- (continued)				001-009
	21	UNUSED						001-009
	22	UNUSED						001-009
	23	UNUSED						001-009
	24	UNUSED						001-009
	DED		W2229	1002Z			34-57-21	001-009
	DED		W2229	1003Z			34-57-21	001-009
	DED		W2229	1004Z			34-57-21	001-009
D00443A		E006-01/ /		PLUG				001-099
D00443A		E6-1/ /		PLUG-				115-199
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00400

Page 10

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00443A		E006-01/ /		PLUG (continued)				001-099
D00443A		E6-1/ /		PLUG- (continued)				115-199
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
D00443B		E006-01/ /		PLUG				001-099
D00443B		E6-1/ /		PLUG-				115-199
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00400

Page 11

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00443B		E006-01/ /		PLUG (continued)				001-099
D00443B		E6-1/ /		PLUG- (continued)				115-199
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01		W1003	2513R	24		23-51-13	001-099
	B01		W1013	2504R	24		23-51-13	115-199
	B02		W1003	2513B	24		23-51-13	001-099
	B02		W1013	2504B	24		23-51-13	115-199
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07		W1003	5017R	24		34-57-21	001-099
	B07		W1013	5005R	24		34-57-21	115-199
	B08		W1003	5017B	24		34-57-21	001-099
	B08		W1013	5005B	24		34-57-21	115-199
	B09	UNUSED						ALL
	B10		W1003	5001R	24		34-22-91	001-099
	B10		W1013	5006R	24		34-22-93	115-199
	B11		W1003	5001B	24		34-22-91	001-099
	B11		W1013	5006B	24		34-22-93	115-199
	B12	UNUSED						ALL
	B13	UNUSED						001-099
	B13		W1013	5008R	24		34-22-28	115-199
	B14	UNUSED						001-099
	B14		W1013	5008B	24		34-22-28	115-199
	B15		W1003	0165	24		34-57-21	001-099
	B15		W1013	0040	22		34-57-21	115-199
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05		W1003	0174	24		34-57-21	001-099
	C05		W1013	0003	24		34-57-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00400

Page 12

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00443B		E006-01/ /		PLUG (continued)				001-099
D00443B		E6-1/ /		PLUG- (continued)				115-199
	C06	UNUSED						ALL
	C07	UNUSED						001, 009
	C07		W1003	0173	24		34-57-21	002-008, 010-099
	C07		W1013	0002	24		34-57-21	115-199
	C08		W1003	0173	24		34-57-21	001, 009
	C08	UNUSED						002-008, 010-099, 115-199
	C09		W1003	0172	24		34-57-21	001-099
	C09		W1013	0001	24		34-57-21	115-199
	C10		W1003	2028R	22		34-57-21	001-099
	C10		W1013	2005R	22		34-57-21	115-199
	C11		W1003	2028B	22		34-57-21	001-099
	C11		W1013	2005B	22		34-57-21	115-199
	C12		W1003	0164	22		34-57-21	001-099
	C12		W1013	0051	22		34-57-21	115-199
	C13		W1003	0166	22		34-57-21	001-099
	C13		W1013	0050	22		34-57-21	115-199
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01		W1003	2510B	24		34-57-21	001-099
	D01		W1013	2505B	24		34-57-21	115-199
	D02		W1003	2510N	24		34-57-21	001-099
	D02		W1013	2505N	24		34-57-21	115-199
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07		W1003	2511B	24		34-57-21	001-099
	D07		W1013	2506B	24		34-57-21	115-199
	D08		W1003	2511N	24		34-57-21	001-099
	D08		W1013	2506N	24		34-57-21	115-199
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14		W1003	2512B	24		34-57-21	001-099
	D14		W1013	2507B	24		34-57-21	115-199
	D15		W1003	2512N	24		34-57-21	001-099
	D15		W1013	2507N	24		34-57-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00400

Page 13

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00443B		E006-01/ /		PLUG (continued)				001-099
D00443B		E6-1/ /		PLUG- (continued)				115-199
	DED		W1003	2510Z			34-57-21	001-099
	DED		W1003	2511Z			34-57-21	001-099
	DED		W1003	2512Z			34-57-21	001-099
	DED		W1003	2513Z			23-51-13	001-099
	DED		W1003	5001Z			34-22-91	001-099
	DED		W1003	5017Z			34-57-21	001-099
	DED		W1013	2504Z			23-51-13	115-199
	DED		W1013	2505Z			34-57-21	115-199
	DED		W1013	2506Z			34-57-21	115-199
	DED		W1013	2507Z			34-57-21	115-199
	DED		W1013	5005Z			34-57-21	115-199
	DED		W1013	5006Z			34-22-93	115-199
	DED		W1013	5008Z			34-22-28	115-199
D00443C		E006-01/ /		PLUG				001-099
D00443C		E6-1/ /		PLUG-				115-199
	1	UNUSED						ALL
	2		W1003	1001	22		34-57-21	001-099
	2		W1013	1001	20		34-57-21	115-199
	3		W1003	0163	20		34-57-21	001-099
	3		W1013	0043	20		34-57-21	115-199
	4		W1003	0162	20		34-57-21	001-099
	4		W1013	0042	20		34-57-21	115-199
	5	UNUSED						ALL
	= C1	UNUSED						ALL
	= C5	UNUSED						ALL
	DED		W1003	1001Z			34-57-21	001-099
	DED		W1013	1001Z			34-57-21	115-199
D00445		1150/300/L5		PLUG				ALL
	1		W2729	8991R	24		34-57-21	ALL
	2		W2729	8991B	24		34-57-21	ALL
	3	UNUSED						ALL
	4		W2729	8991Y	24		34-57-21	ALL
	5		W2729	8991G	24		34-57-21	ALL
	6	UNUSED						ALL
	7		W2729	8991V	24		34-57-21	ALL
	8		W2729	8991K	24		34-57-21	ALL
	9	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00400

Page 14

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00445		1150/300/L5		PLUG (continued)				ALL
	10		W2729	8991O	22		34-57-21	ALL
	11		W2729	8991N	22		34-57-21	ALL
	12		W2729	8991W	20		34-57-21	ALL
	13	UNUSED						ALL
	14		W2729	0003	20		34-57-21	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
			W2729	0001	20		34-57-21	ALL
			W2729	8991ZA			34-57-21	ALL
			W2729	8991ZB			34-57-21	ALL
			W2729	8991ZC			34-57-21	ALL
			W2729	8991Z			34-57-21	115-199
			W2729	FRAA			34-57-21	115-199
D00447A		E002-03/ /		PLUG-				001-099
D00447A		E2-3/ /		PLUG-				115-199
	A01		W1175	5074R	24		34-24-11	ALL
	A02		W1175	0316	24		34-24-11	ALL
	A03		W1175	2004R	24		34-24-11	ALL
	A04	UNUSED						ALL
	A05		W1175	2001R	24		34-24-11	ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01		W1175	5074B	24		34-24-11	ALL
	B02		W1175	0318	24		34-24-11	ALL
	B03		W1175	2004B	24		34-24-11	ALL
	B04	UNUSED						ALL
	B05		W1175	2001B	24		34-24-11	ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00400

Page 15

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00447A		E002-03/ /		PLUG- (continued)				001-099
D00447A		E2-3/ /		PLUG- (continued)				115-199
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02		W1175	0317	24		34-24-11	ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02		W1175	0315	24		34-24-11	ALL
	D03		W1175	2005R	24		34-24-11	ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01		W1175	2002R	24		34-24-11	ALL
	E02	UNUSED						ALL
	E03		W1175	2005B	24		34-24-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00400

Page 16

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00447A		E002-03/ /		PLUG- (continued)				001-099
D00447A		E2-3/ /		PLUG- (continued)				115-199
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01		W1175	2002B	24		34-24-11	ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00400

Page 17

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00447A		E002-03/ /		PLUG- (continued)				001-099
D00447A		E2-3/ /		PLUG- (continued)				115-199
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01		W1175	2003R	24		34-24-11	ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01		W1175	2003B	24		34-24-11	ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00400

Page 18

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00447A		E002-03/ /		PLUG- (continued)				001-099
D00447A		E2-3/ /		PLUG- (continued)				115-199
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
	DED		W1175	5074Z			34-24-11	ALL
D00447B		E002-03/ /		PLUG-				001-099
D00447B		E2-3/ /		PLUG-				115-199
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00400

Page 19

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00447B		E002-03/ /		PLUG- (continued)				001-099
D00447B		E2-3/ /		PLUG- (continued)				115-199
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00400

Page 20

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00447B		E002-03/ /		PLUG- (continued)				001-099
D00447B		E2-3/ /		PLUG- (continued)				115-199
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00400

Page 21

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00447B		E002-03/ /		PLUG- (continued)				001-099
D00447B		E2-3/ /		PLUG- (continued)				115-199
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00400

Page 22

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00447B		E002-03/ /		PLUG- (continued)				001-099
D00447B		E2-3/ /		PLUG- (continued)				115-199
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
D00447C		E002-03/ /		PLUG-				001-099
D00447C		E2-3/ /		PLUG-				115-199
	1		W1175	0033	24		34-24-11	ALL
	2		W1175	0037	20		34-24-11	ALL
	3	UNUSED						ALL
	4		W1175	0035	20		34-24-11	ALL
	5		W1175	0034	20		34-24-11	ALL
	6		W1175	0036	20		34-24-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W1175	3011R	24		34-24-11	ALL
	10		W1175	3011B	24		34-24-11	ALL
	11		W1175	3011Y	24		34-24-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	=C12	UNUSED						ALL
	=C13	UNUSED						ALL
D00449		P008-00/ /		PLUG-				ALL
	1		W2337	4501AD	20		23-51-21	ALL
	2		W2337	4501B	24		23-51-21	ALL
	3		W2337	4501Y	24		23-51-21	ALL
	4		W2337	4501G	24		23-51-21	ALL
	5		W2337	4501K	24		23-51-21	ALL
	6		W2337	4501L	24		23-51-21	ALL
	7		W2337	4501O	24		23-51-21	ALL
	8		W2337	4501N	24		23-51-21	ALL
	9		W2337	4501P	24		23-51-21	ALL
	10		W2337	4501W	24		23-51-21	ALL
	11		W2337	4501WR	24		23-51-21	ALL
	12		W2337	4501WB	24		23-51-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00400

Page 23

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00449		P008-00/ /		PLUG- (continued)				ALL
	13		W2337	4501WY	24		23-51-21	ALL
	14		W2337	4501WG	24		23-51-21	ALL
	15		W2337	4501WK	24		23-51-21	ALL
	16		W2337	4501WL	24		23-51-21	ALL
	17		W2337	4501WO	24		23-51-21	ALL
	18		W2337	4501WN	24		23-51-21	ALL
	19		W2337	4501AA	24		23-51-21	ALL
	20		W2337	4501	20		23-51-21	ALL
	21		W2337	4501RY	24		23-51-21	ALL
	22		W2337	4501RG	24		23-51-21	ALL
	23		W2337	4501RK	24		23-51-21	ALL
	24		W2337	4501RL	24		23-51-21	ALL
	25		W2337	4501RO	24		23-51-21	ALL
	26		W2337	4501RN	24		23-51-21	ALL
	27		W2337	4501AB	24		23-51-21	ALL
	28		W2337	4501BY	24		23-51-21	ALL
	29		W2337	4501BG	24		23-51-21	ALL
	30		W2337	4501BK	24		23-51-21	ALL
	31		W2337	4501BL	24		23-51-21	ALL
	32		W2337	4501BO	24		23-51-21	ALL
	33		W2337	4501BN	24		23-51-21	ALL
	34		W2337	4501AC	24		23-51-21	ALL
	35		W2337	4501YG	24		23-51-21	ALL
	36		W2337	4501YK	24		23-51-21	ALL
	37		W2337	4501YL	24		23-51-21	ALL
	38		W2337	4501YO	24		23-51-21	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D00451		P8/ /		PLUG-				ALL
	1	16	W2295	0001	16		33-13-51	ALL
	2	16	W2295	0002	16		33-13-51	ALL
	3		W2295	0003	22		23-51-21	ALL
	4		W2295	0007	20		23-51-21	ALL
	5		W2295	0004	24		23-51-21	ALL
	6		W2295	0005	24		23-51-21	ALL
	7		W2295	0006	24		23-51-21	ALL
	8		W2295	2502B	24		23-51-21	ALL
	9		W2295	2502R	24		23-51-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00400

Page 24

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00451		P8/ /		PLUG- (continued)				ALL
	10		W2295	3501R	24		23-51-21	ALL
	11		W2295	3501Y	24		23-51-21	ALL
	12		W2295	3501B	24		23-51-21	ALL
	13		W2295	2002B	24		23-51-21	ALL
	14		W2295	2002R	24		23-51-21	ALL
	15		W2295	2501B	24		23-51-21	ALL
	16		W2295	2501R	24		23-51-21	ALL
	17		W2295	2001B	24		23-51-21	ALL
	18		W2295	2001R	24		23-51-21	ALL
	19		W2295	0009	24		23-51-21	ALL
	20		W2295	0010	24		23-51-21	ALL
	21		W2295	0011	24		23-51-21	ALL
	22		W2295	0008	24		23-51-21	ALL
	23		W2295	0012	24		23-51-21	ALL
	24		W2295	0012	24		23-51-21	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						001-099
	27		W2295	2003R	24		23-51-21	115-199
	28	UNUSED						001-099
	28		W2295	2003B	24		23-51-21	115-199
	29	UNUSED						001-008, 010-099
	29		W2295	2504B	24		23-51-21	009
	29		W2295	5001B	24		23-51-21	115-199
	30	UNUSED						001-008, 010-099
	30		W2295	2504R	24		23-51-21	009
	30		W2295	5001R	24		23-51-21	115-199
	31	UNUSED						ALL
	DED		W2295	2504Z			23-51-21	009
			W2295	0013	20		23-51-21	ALL
			W2295	2501Z			23-51-21	ALL
			W2295	2502Z			23-51-21	ALL
			W2295	3501Z			23-51-21	ALL
			W2295	5001Z			23-51-21	115-199
D00453		P061/ /		PLUG-				115-199
	1		W2339	4501AD	20		23-51-51	115-199
	2		W2339	4501B	24		23-51-51	115-199
	3		W2339	4501Y	24		23-51-51	115-199
	4		W2339	4501G	24		23-51-51	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00400

Page 25

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00453		P061/ /		PLUG- (continued)				115-199
	5		W2339	4501K	24		23-51-51	115-199
	6		W2339	4501L	24		23-51-51	115-199
	7		W2339	4501O	24		23-51-51	115-199
	8		W2339	4501N	24		23-51-51	115-199
	9		W2339	4501P	24		23-51-51	115-199
	10		W2339	4501W	24		23-51-51	115-199
	11		W2339	4501WR	24		23-51-51	115-199
	12		W2339	4501WB	24		23-51-51	115-199
	13		W2339	4501WY	24		23-51-51	115-199
	14		W2339	4501WG	24		23-51-51	115-199
	15		W2339	4501WK	24		23-51-51	115-199
	16		W2339	4501WL	24		23-51-51	115-199
	17		W2339	4501WO	24		23-51-51	115-199
	18		W2339	4501WN	24		23-51-51	115-199
	19		W2339	4501AA	24		23-51-51	115-199
	20		W2339	4501	20		23-51-51	115-199
	21		W2339	4501RY	24		23-51-51	115-199
	22		W2339	4501RG	24		23-51-51	115-199
	23		W2339	4501RK	24		23-51-51	115-199
	24		W2339	4501RL	24		23-51-51	115-199
	25		W2339	4501RO	24		23-51-51	115-199
	26		W2339	4501RN	24		23-51-51	115-199
	27		W2339	4501AB	24		23-51-51	115-199
	28		W2339	4501BY	24		23-51-51	115-199
	29		W2339	4501BG	24		23-51-51	115-199
	30		W2339	4501BK	24		23-51-51	115-199
	31		W2339	4501BL	24		23-51-51	115-199
	32		W2339	4501BO	24		23-51-51	115-199
	33		W2339	4501BN	24		23-51-51	115-199
	34		W2339	4501AC	24		23-51-51	115-199
	35		W2339	4501YG	24		23-51-51	115-199
	36		W2339	4501YK	24		23-51-51	115-199
	37		W2339	4501YL	24		23-51-51	115-199
	38		W2339	4501YO	24		23-51-51	115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
D00455		P61/ /		PLUG-				115-199
	1		W0041	0005	20		33-13-71	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00400

Page 26

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00455		P61/ /		PLUG- (continued)				115-199
	2		W0041	0006	20		33-13-71	115-199
	3		W0041	0001	22		23-51-51	115-199
	4		W0041	0003	22		23-51-51	115-199
	5		W2295	0018	24		23-51-51	115-199
	6		W2295	0019	24		23-51-51	115-199
	7		W2295	0020	24		23-51-51	115-199
	8		W0041	2502B	24		23-51-51	115-199
	9		W0041	2502R	24		23-51-51	115-199
	10		W0041	3501R	24		23-51-51	115-199
	11		W0041	3501Y	24		23-51-51	115-199
	12		W0041	3501B	24		23-51-51	115-199
	13		W0041	2001B	24		23-51-51	115-199
	14		W0041	2001R	24		23-51-51	115-199
	15		W0041	2501B	24		23-51-51	115-199
	16		W0041	2501R	24		23-51-51	115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23		W0041	0002	24		23-51-51	115-199
	24		W0041	0002	24		23-51-51	115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31		W2295	0021	22		23-51-51	115-199
			W0041	0013	20		23-51-51	115-199
			W0041	2501Z			23-51-51	115-199
			W0041	2502Z			23-51-51	115-199
			W0041	3501Z			23-51-51	115-199
D00457		P17/ /		PLUG-				ALL
	1		W2341	4501AD	20		23-51-41	ALL
	2		W2341	4501B	24		23-51-41	ALL
	3		W2341	4501Y	24		23-51-41	ALL
	4		W2341	4501G	24		23-51-41	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00400

Page 27

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00457		P17/ /		PLUG- (continued)				ALL
	5		W2341	4501K	24		23-51-41	ALL
	6		W2341	4501L	24		23-51-41	ALL
	7		W2341	4501O	24		23-51-41	ALL
	8		W2341	4501N	24		23-51-41	ALL
	9		W2341	4501P	24		23-51-41	ALL
	10		W2341	4501W	24		23-51-41	ALL
	11		W2341	4501WR	24		23-51-41	ALL
	12		W2341	4501WB	24		23-51-41	ALL
	13		W2341	4501WY	24		23-51-41	ALL
	14		W2341	4501WG	24		23-51-41	ALL
	15		W2341	4501WK	24		23-51-41	ALL
	16		W2341	4501WL	24		23-51-41	ALL
	17		W2341	4501WO	24		23-51-41	ALL
	18		W2341	4501WN	24		23-51-41	ALL
	19		W2341	4501AA	24		23-51-41	ALL
	20		W2341	4501	20		23-51-41	ALL
	21		W2341	4501RY	24		23-51-41	ALL
	22		W2341	4501RG	24		23-51-41	ALL
	23		W2341	4501RK	24		23-51-41	ALL
	24		W2341	4501RL	24		23-51-41	ALL
	25		W2341	4501RO	24		23-51-41	ALL
	26		W2341	4501RN	24		23-51-41	ALL
	27		W2341	4501AB	24		23-51-41	ALL
	28		W2341	4501BY	24		23-51-41	ALL
	29		W2341	4501BG	24		23-51-41	ALL
	30		W2341	4501BK	24		23-51-41	ALL
	31		W2341	4501BL	24		23-51-41	ALL
	32		W2341	4501BO	24		23-51-41	ALL
	33		W2341	4501BN	24		23-51-41	ALL
	34		W2341	4501AC	24		23-51-41	ALL
	35		W2341	4501YG	24		23-51-41	ALL
	36		W2341	4501YK	24		23-51-41	ALL
	37		W2341	4501YL	24		23-51-41	ALL
	38		W2341	4501YO	24		23-51-41	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D00459		P17/ /		PLUG-				ALL
	1		W2293	0001	20		33-13-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00400

Page 28

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00459		P17/ /		PLUG- (continued)				ALL
	2		W2293	0002	20		33-13-11	ALL
	3		W2293	0003	22		23-51-41	001-099
	3		W2293	0007	22		23-51-41	115-199
	4		W2293	0004	20		23-51-41	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W2293	2502B	24		23-51-41	ALL
	9		W2293	2502R	24		23-51-41	ALL
	10		W2293	3501R	24		23-51-41	ALL
	11		W2293	3501Y	24		23-51-41	ALL
	12		W2293	3501B	24		23-51-41	ALL
	13		W2293	2001B	24		23-51-41	ALL
	14		W2293	2001R	24		23-51-41	ALL
	15		W2293	2501B	24		23-51-41	ALL
	16		W2293	2501R	24		23-51-41	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W2293	0005	24		23-51-41	ALL
	24		W2293	0005	24		23-51-41	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
			W2293	0006	20		23-51-41	ALL
			W2293	2501Z			23-51-41	ALL
			W2293	2502Z			23-51-41	ALL
			W2293	3501Z			23-51-41	ALL
D00461		FIN117/RS/		PLUG-				ALL
	1		W3113	2002R	20		27-21-22	ALL
	2		W3113	2002B	20		27-21-22	ALL
	3	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00400

Page 29

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00461		FIN117/RS/		PLUG- (continued)				ALL
	CAP	Y	W3113	2006B	20		27-21-22	ALL
	CAP	Y	W3113	2006R	20		27-21-22	ALL
D00463		AP0001/ /		PLUG				001-099
D00463		P001-1/ /		PLUG				115-199
	1		W0001	0108	20		33-13-11	ALL
	2		W0001	0109	20		33-13-11	ALL
	3		W0001	0172	22		31-25-11	ALL
	4		W0001	0424	20		31-25-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0001	0421	20		31-25-11	ALL
	8		W0001	0306	22		31-25-11	ALL
	9		W0001	0318	20		31-25-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0001	3013R	24		31-25-11	ALL
	14		W0001	3013B	24		31-25-11	ALL
	15		W0001	3013Y	24		31-25-11	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0001	5030B	24		31-25-11	ALL
	24		W0001	5030R	24		31-25-11	ALL
	DED		W0001	5030Z			31-25-11	ALL
D00465		P3-3/ /		PLUG				001-099
D00465		P3-1/ /		PLUG				115-199
	1		W0003	0260	20		33-13-21	ALL
	2		W0003	0261	20		33-13-21	ALL
	3		W0003	0172	20		31-25-11	ALL
	4		W0003	0424	20		31-25-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0003	0421	20		31-25-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00400

Page 30

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00465		P3-3/ /		PLUG (continued)				001-099
D00465		P3-1/ /		PLUG (continued)				115-199
	8		W0003	0306	20		31-25-11	ALL
	9		W0003	0308	20		31-25-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0003	3013R	24		31-25-11	ALL
	14		W0003	3013B	24		31-25-11	ALL
	15		W0003	3013Y	24		31-25-11	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0003	5030B	24		31-25-11	ALL
	24		W0003	5030R	24		31-25-11	ALL
	DED		W0003	5030Z			31-25-11	ALL
D00467		228/197/R047		PLUG				ALL
	1		W2277	2001R	22		34-12-21	ALL
	2		W2277	2001B	22		34-12-21	ALL
	3		W2277	3001R	24		34-12-21	ALL
	4		W2277	3001B	24		34-12-21	ALL
	5		W2277	3001Y	24		34-12-21	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W2277	0001	20		34-12-21	ALL
D00469		228/197/L047		PLUG				ALL
	1		W2269	2002R	22		34-12-11	ALL
	2		W2269	2002B	22		34-12-11	ALL
	3		W2269	3002R	24		34-12-11	ALL
	4		W2269	3002B	24		34-12-11	ALL
	5		W2269	3002Y	24		34-12-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00400

Page 31

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00469		228/197/L047		PLUG (continued)				ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W2269	0001	20		34-12-11	ALL
D00471		P061-00/ /		PLUG-				001-099
D00471		P61/ /		PLUG-				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W2351	2501R	24		23-41-11	ALL
	8		W2351	2501B	24		23-41-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W2351	0055	24		SPARE	001-099
	12	UNUSED						115-199
	DED		W2351	2501Z			23-41-11	ALL
D00473		199/193/L9		FEED THROUGH DISCONNECT				ALL
	1		W2021	0001	22		34-43-12	ALL
	2		W2021	3501R	22		34-43-12	ALL
	3		W2021	2501Z			34-43-12	ALL
	4		W2021	2501B	22		34-43-12	ALL
	5		W2021	2501R	22		34-43-12	ALL
	6		W2021	0003	20		34-43-12	ALL
	7		W2021	0002	22		34-43-12	ALL
	8		W2021	3501B	22		34-43-12	ALL
	9		W2021	2503B	22		34-43-12	ALL
	10		W2021	2503R	22		34-43-12	ALL
	11		W2021	3502Z			34-43-12	ALL
	12		W2021	3502Y	22		34-43-12	ALL
	13		W2021	3502B	22		34-43-12	ALL
	14		W2021	3502R	22		34-43-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00400

Page 32

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00473		199/193/L9		FEED THROUGH DISCONNECT (continued)				ALL
	15		W2021	2502Z			34-43-12	ALL
	16		W2021	2502B	22		34-43-12	ALL
	17		W2021	2502R	22		34-43-12	ALL
	18		W2021	3501Z			34-43-12	ALL
	19		W2021	3501Y	22		34-43-12	ALL
	20		W2021	3503R	22		34-43-12	ALL
	21		W2021	2503Z			34-43-12	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W2021	0004	22		34-43-12	ALL
	29		W2021	2505Z			34-43-12	ALL
	30		W2021	2505B	22		34-43-12	ALL
	31		W2021	2505R	22		34-43-12	ALL
	32		W2021	2504Z			34-43-12	ALL
	33		W2021	2504B	22		34-43-12	ALL
	34		W2021	2504R	22		34-43-12	ALL
	35		W2021	3503Z			34-43-12	ALL
	36		W2021	3503Y	22		34-43-12	ALL
	37		W2021	3503B	22		34-43-12	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00400

Page 33

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00473		199/193/L9		FEED THROUGH DISCONNECT (continued)				ALL
	55	UNUSED						ALL
	CAP	Y	W2021	2506B	22		SPARE	ALL
	CAP	Y	W2021	2506R	22		SPARE	ALL
	DED		W2021	2506Z			SPARE	ALL
	PER		W2021	YAAA			34-43-12	ALL
D00477		199/180/L012		RECP-				ALL
	1		W2309	0014	22		34-43-12	ALL
	2		W2309	3501R	22		34-43-12	ALL
	3		W2309	0041	22		34-43-12	ALL
	4		W2309	2501B	22		34-43-12	ALL
	5		W2309	2501R	22		34-43-12	ALL
	6		W2309	0013	20		34-43-12	ALL
	7		W2309	0015	22		34-43-12	ALL
	8		W2309	3501B	22		34-43-12	ALL
	9		W2309	2503B	22		34-43-12	ALL
	10		W2309	2503R	22		34-43-12	ALL
	11		W2309	0044	22		34-43-12	ALL
	12		W2309	3502Y	22		34-43-12	ALL
	13		W2309	3502B	22		34-43-12	ALL
	14		W2309	3502R	22		34-43-12	ALL
	15		W2309	0043	22		34-43-12	ALL
	16		W2309	2502B	22		34-43-12	ALL
	17		W2309	2502R	22		34-43-12	ALL
	18		W2309	0042	22		34-43-12	ALL
	19		W2309	3501Y	22		34-43-12	ALL
	20		W2309	3503R	22		34-43-12	ALL
	21		W2309	0045	22		34-43-12	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W2309	0012	22		34-43-12	ALL
	29		W2309	0048	22		34-43-12	ALL
	30		W2309	2505B	22		34-43-12	ALL
	31		W2309	2505R	22		34-43-12	ALL
	32		W2309	0047	22		34-43-12	ALL
	33		W2309	2504B	22		34-43-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00400

Page 34

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00477		199/180/L012		RECP- (continued)				ALL
	34		W2309	2504R	22		34-43-12	ALL
	35		W2309	0046	22		34-43-12	ALL
	36		W2309	3503Y	22		34-43-12	ALL
	37		W2309	3503B	22		34-43-12	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D00479		P62/ I		RECPT				115-199
	BLK		W3060	C-03			23-71-11	115-199
	BLU		W3060	C-01			23-71-11	115-199
	CAP	Y	W3060	2501B	20		23-71-11	115-199
	CAP	Y	W3060	2501R	20		23-71-11	115-199
	DED		W3060	2501Z			23-71-11	115-199
	RED		W3060	C-02			23-71-11	115-199
D00481		426/215/R068		RCPT-				001-003, 005, 007-099
D00481		455/215/R068		RCPT-				004, 006
D00481		401/215/R068		RCPT-				115-199
	A		W4057	5001W	24		23-34-12	ALL
	B		W4057	5001B	24		23-34-12	ALL
	C		W4057	5001Z			23-34-12	ALL
	D		W4057	0003	20		23-34-12	001-099
	D		W4057	2001R	20		23-34-12	115-199
	E		W4057	0004	20		23-34-12	001-099

HOOKUP LIST

D280N032

91-21-51

Section D00400

Page 35

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00481		426/215/R068		RCPT- (continued)				001-003, 005, 007-099
D00481		455/215/R068		RCPT- (continued)				004, 006
D00481		401/215/R068		RCPT- (continued)				115-199
	E		W4057	2001B	20		23-34-12	115-199
	F		W4057	0001	22		23-34-12	ALL
D00483		426/216/L063		RCPT-				001-099
D00483		446/216/L063		RCPT-				115-199
	A		W4059	5001W	24		23-34-12	ALL
	B		W4059	5001B	24		23-34-12	ALL
	C		W4059	5001Z			23-34-12	ALL
	D		W4059	0003	20		23-34-12	001-099
	D		W4059	2001R	20		23-34-12	115-199
	E		W4059	0004	20		23-34-12	001-099
	E		W4059	2001B	20		23-34-12	115-199
	F		W4059	0001	22		23-34-12	ALL
D00485		P001-01/ /		PLUG				001-099
D00485		P001-3/ /		PLUG				115-199
	1		W0001	0036	22		22-14-11	ALL
	2	UNUSED						ALL
	3		W0001	0102	20		33-13-11	ALL
	4		W0001	0457	22		22-14-11	ALL
	5		W0001	0034	22		22-14-11	ALL
	6	UNUSED						ALL
	7		W0001	0033	22		22-14-11	ALL
	8	UNUSED						ALL
	9		W0001	0035	22		22-14-11	ALL
	10	UNUSED						ALL
	11		W0001	0039	20		22-14-11	ALL
	12		W0001	0040	20		22-14-11	ALL
	13		W0001	0103	20		33-13-11	ALL
	14	UNUSED						ALL
	15		W0001	0457	22		22-14-11	ALL
D00487		P3-1/ /		PLUG				ALL
	1		W0003	0157	22		22-14-21	ALL
	2	UNUSED						ALL
	3		W0003	0184	20		33-13-21	ALL
	4		W0003	0457	22		22-14-21	ALL
	5		W0003	0158	22		22-14-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00400

Page 36

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00487		P3-1/ /		PLUG (continued)				ALL
	6	UNUSED						ALL
	7		W0003	0155	22		22-14-21	ALL
	8	UNUSED						ALL
	9		W0003	0156	22		22-14-21	ALL
	10	UNUSED						ALL
	11		W0003	0159	20		22-14-21	ALL
	12		W0003	0160	20		22-14-21	ALL
	13		W0003	0196	20		33-13-21	ALL
	14	UNUSED						ALL
	15		W0003	0457	22		22-14-21	ALL
D00489		235/198/R20		RCPT-				ALL
	A		W2055	0001	22		27-32-21	ALL
	B		W2055	0002	22		27-32-21	ALL
D00491		P8/ /		RCPT-				115-199
	1		W2013	2001R	22		23-51-15	115-199
	2		W2013	2001B	22		23-51-15	115-199
	3		W2013	2501R	22		23-51-15	115-199
	4		W2013	2501B	22		23-51-15	115-199
	DED		W2013	2501Z			23-51-15	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00400

Page 37 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00517		P61/ /		PLUG				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W2315	0040	24		31-41-19	ALL
	8	UNUSED						ALL
	9		W2315	0041	24		31-41-19	ALL
	10		W2315	0022	24		31-41-19	ALL
	11		W2315	0042	24		31-41-19	ALL
	12		W2315	0023	24		31-41-19	ALL
	13		W2315	0043	24		31-41-19	ALL
	14		W2315	0027	24		31-41-19	ALL
	15		W2315	0044	24		31-41-19	ALL
	16		W2315	0019	24		31-41-19	ALL
	17		W2315	0045	24		31-41-19	ALL
	18		W2315	0018	24		31-41-19	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W2315	0036	24		31-41-19	ALL
	24		W2315	0029	24		31-41-19	ALL
	25		W2315	0048	24		31-41-19	ALL
	26		W2315	0030	24		31-41-19	ALL
	27		W2315	0047	24		31-41-19	ALL
	28		W2315	0031	24		31-41-19	ALL
	29		W2315	0559	24		31-41-19	ALL
	30		W2315	0032	24		31-41-19	ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34		W2315	0053	24		31-41-19	ALL
	35		W2315	0049	24		31-41-19	ALL
	36		W2315	0033	24		31-41-19	ALL
	37		W2315	0054	24		31-41-19	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00500

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00517		P61/ /		PLUG (continued)				ALL
	41	UNUSED						ALL
D00519		235/198/L20		RCPT-				ALL
	A		W2045	0001	22		27-32-11	ALL
	B		W2045	0002	22		27-32-11	ALL
D00521		/P17/ /		JACK- OBS HAND MIC				001-099
D00521		P17/ /		JACK-				115-199
	1		W2293	2001R	24		23-51-41	115-199
	2		W2293	2001B	24		23-51-41	115-199
	3		W2293	2501R	24		23-51-41	115-199
	4		W2293	2501B	24		23-51-41	115-199
	DED		W2293	2501Z			23-51-41	115-199
D00523		P17/ /		JACK-				ALL
	BLK		W2293	A-AF			23-51-41	ALL
	BLU		W2293	A-AE			23-51-41	ALL
D00525		P17/ /		JACK-				ALL
	BLK		W2293	A-AI			23-51-41	ALL
	BLU		W2293	A-AH			23-51-41	ALL
	RED		W2293	A-AG			23-51-41	ALL
D00527		P17/ /		PLUG-				ALL
	1		W2293	2502R	24		23-51-41	ALL
	2		W2293	2502B	24		23-51-41	ALL
	3		W2293	2502Z			23-51-41	ALL
D00528		1052/188/L050		PLUG				ALL
	1	18	W2418	2511R	18		29-35-11	ALL
	2	18	W2418	0015	18		29-35-11	ALL
	3	UNUSED						ALL
	4	18	W2418	2511B	18		29-35-11	ALL
	5	UNUSED						ALL
D00529		/P14/		JACK- F/O HAND MIC				001-099
D00529		231/205/R30		JACK-				115-199
	1		W2295	2002R	24		23-51-21	115-199
	2		W2295	2002B	24		23-51-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00500

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00529		/P14/		JACK- F/O HAND MIC (continued)				001-099
D00529		231/205/R30		JACK- (continued)				115-199
	3		W2295	2501R	24		23-51-21	115-199
	4		W2295	2501B	24		23-51-21	115-199
	DED		W2295	2501Z			23-51-21	115-199
D00530		1183/151/L060		PLUG				ALL
	1	18	W2412	2526R	18		29-35-11	ALL
	2	18	W2412	0063	18		29-35-11	ALL
	3	UNUSED						ALL
	4	18	W2412	2526B	18		29-35-11	ALL
	5	UNUSED						ALL
D00531		240/210/R46		JACK-				001-099
D00531		P14/ /		JACK-				115-199
	BLK		W2295	A-AF			23-51-21	ALL
	BLU		W2295	A-AE			23-51-21	ALL
D00532		1052/180/R40		PLUG				ALL
	1	18	W2510	2503B	18		29-35-11	ALL
	2	18	W2510	0005	18		29-35-11	ALL
	3	UNUSED						ALL
	4	18	W2510	2503R	18		29-35-11	ALL
	5	UNUSED						ALL
D00533		240/210/R46		JACK-				001-099
D00533		P14/ /		JACK-				115-199
	BLK		W2295	A-AI			23-51-21	ALL
	BLU		W2295	A-AH			23-51-21	ALL
	RED		W2295	A-AG			23-51-21	ALL
D00534		P3-1/ /		PLUG				ALL
	1		W0003	0148	20		33-13-21	ALL
	2		W0003	0149	20		33-13-21	ALL
	3		W0003	0343	24		32-41-11	ALL
	4		W0003	0344	24		32-41-11	ALL
	5		W0003	0270	20		32-41-11	ALL
	6		W0003	0342	24		32-41-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00500

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00534		P3-1/ /		PLUG (continued)				ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00535		P14/ /		PLUG-				ALL
	1		W2295	2502R	24		23-51-21	ALL
	2		W2295	2502B	24		23-51-21	ALL
	3		W2295	2502Z			23-51-21	ALL
D00536		1061/151/R11		PLUG				ALL
	1		W2516	3502B	20		32-41-11	ALL
	2		W2516	3502R	20		32-41-11	ALL
	3		W2516	3502Y	20		32-41-11	ALL
D00537		P14/216/R32		PLUG-				001-099
D00537		P14/ /		PLUG-				115-199
	1		W2295	2001R	24		23-51-21	ALL
	2		W2295	2001B	24		23-51-21	ALL
	3	UNUSED						ALL
	4		W2295	0010	24		23-51-21	ALL
	5	UNUSED						ALL
	6		W2295	0009	24		23-51-21	ALL
	7		W2295	0011	24		23-51-21	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00539		/P13/		JACK- CAPT HAND MIC				001-099
D00539		P13/ /		JACK-				115-199
	1		W2297	2002R	24		23-51-11	115-199
	2		W2297	2002B	24		23-51-11	115-199
	3		W2297	2501R	24		23-51-11	115-199
	4		W2297	2501B	24		23-51-11	115-199
	DED		W2297	2501Z			23-51-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00500

Page 4

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00541		240/210/L46		JACK-				001-099
D00541		P13/ /		JACK-				115-199
	BLK		W2297	A-AI			23-51-11	ALL
	BLU		W2297	A-AH			23-51-11	ALL
D00542		P006-00/ /		RELAY SOCKET-				ALL
	A1	UNUSED						ALL
	A2		W0074	0037	20		24-33-12	001-099
	A2	UNUSED						115-199
	A3		W0074	0038	24		24-33-12	001-099
	A3	UNUSED						115-199
	B1		W0074	0503	24		24-51-31	001-099
	B1		W0074	0503	22		24-51-31	115-199
	B2		W0074	0504	24		24-51-31	001-099
	B2		W0074	0504	22		24-51-31	115-199
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2		W0074	0046	22		24-34-11	ALL
	C3		W0074	0407	22		24-34-11	ALL
	D1	UNUSED						ALL
	D2		W0074	0035	24		24-33-12	001-099
	D2	UNUSED						115-199
	D3		W0074	0036	24		24-33-12	001-099
	D3	UNUSED						115-199
	X1		W0074	0502	24		24-51-31	001-099
	X1		W0074	0502	22		24-51-31	115-199
	X2		W0074	0701	22		22-11-32	ALL
D00543		240/210/L46		JACK-				001-099
D00543		P13/ /		JACK-				115-199
	BLK		W2297	A-AF			23-51-11	ALL
	BLU		W2297	A-AE			23-51-11	ALL
	RED		W2297	A-AD			23-51-11	ALL
D00544		P006-00/ /		RELAY SOCKET				ALL
	A1		W0066	0001	18		24-51-31	001-099
	A1		W0066	0001	16		24-51-31	115-199
	A2		W0074	0603	18		24-51-31	ALL
	A3		W0072	0010	18		24-51-31	ALL
	B1		W0068	0004	22		24-51-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00500

Page 5

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00544		P006-00/ /		RELAY SOCKET (continued)				ALL
	B2		W0074	0600	22		24-51-31	ALL
	B3		W0062	0027	22		24-51-31	ALL
	C1		W0074	0605	22		24-51-31	ALL
	C2		W0074	0600	22		24-51-31	ALL
	C3		W0074	0604	22		24-51-31	ALL
	D1		W0074	0525	22		24-51-72	ALL
	D2		W0074	0714	22		24-51-72	ALL
	D3		W0074	0501	22		24-51-72	ALL
	X1		W0074	0028	22		24-51-31	ALL
	X2		W0074	0029	20		24-51-31	ALL
D00545		P13/ /		PLUG-				ALL
	1		W2297	2502R	24		23-51-11	ALL
	2		W2297	2502B	24		23-51-11	ALL
	3		W2297	2502Z			23-51-11	ALL
D00546		P006-00/ /		PLUG-				ALL
	1		W0072	0012	22		24-33-11	ALL
	2		W0074	0008	20		24-33-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0074	0018	22		24-33-11	ALL
	6		W0072	0011	22		24-33-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00547		P13/ /		PLUG-				ALL
	1		W2297	2001R	24		23-51-11	ALL
	2		W2297	2001B	24		23-51-11	ALL
	3	UNUSED						ALL
	4		W2297	0010	24		23-51-11	ALL
	5	UNUSED						ALL
	6		W2297	0009	24		23-51-11	ALL
	7		W2297	0011	24		23-51-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00500

Page 6

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00547		P13/ /		PLUG- (continued)				ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00548		P006-00/ /		RELAY SOCKET				ALL
	A1	UNUSED						ALL
	A2		W0074	0012	18		24-33-11	ALL
	A3		W0074	0302	18		24-33-11	ALL
	B1	UNUSED						ALL
	B2		W0074	0006	22		24-33-11	ALL
	B3		W0074	0308	22		24-33-11	ALL
	C1		W0074	0027	22		24-51-31	ALL
	C2		W0074	0026	22		24-51-31	ALL
	C3		W0074	0013	20		34-21-11	001-099
	C3		W0074	0013	20		34-21-21	115-199
	D1		W0074	0719	22		24-51-72	ALL
	D2		W0074	0009	22		24-51-72	ALL
	D3		W0074	0011	22		24-51-72	ALL
	X1		W0074	0704	24		24-51-31	001-099
	X1		W0074	0704	22		24-51-31	115-199
	X2		W0074	0025	20		24-51-31	ALL
D00549		P61/ /		JACK-				115-199
	1		W0041	2001R	24		23-51-51	115-199
	2		W0041	2001B	24		23-51-51	115-199
	3		W0041	2501R	24		23-51-51	115-199
	4		W0041	2501B	24		23-51-51	115-199
	DED		W0041	2501Z			23-51-51	115-199
D00550A		E005-03/ /		PLUG-				001-099
D00550A		E5-3/ /		PLUG-				115-199
	A01		W1286	4011R	24		24-41-11	ALL
	A02		W1286	4001R	24		24-23-12	ALL
	A03		W1286	0017	22		24-22-12	ALL
	A04		W1286	0060	24		24-41-11	ALL
	A05		W1286	4003R	24		24-23-12	ALL
	A06		W1286	4006R	24		24-23-12	ALL
	A07		W1286	4005R	24		24-23-12	ALL
	A08	UNUSED						ALL
	A09		W1286	0275	24		24-51-14	001-099

HOOKUP LIST

D280N032

91-21-51

Section D00500

Page 7

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00550A		E005-03/ /		PLUG- (continued)				001-099
D00550A		E5-3/ /		PLUG- (continued)				115-199
	A09	UNUSED						115-199
	A10		W1286	0086	24		24-51-24	ALL
	A11	UNUSED						ALL
	A12		W1286	5004R	24		24-22-12	ALL
	A13		W1286	5011R	24		24-41-11	ALL
	A14		W1286	FRAA			24-41-11	ALL
	A15	UNUSED						ALL
	B01		W1286	4011Y	24		24-41-11	ALL
	B02		W1286	4001Y	24		24-23-12	ALL
	B03		W1286	0134	24		24-22-22	ALL
	B04		W1286	0018	24		24-22-12	ALL
	B05		W1286	4003Y	24		24-23-12	ALL
	B06		W1286	4006Y	24		24-23-12	ALL
	B07		W1286	4005Y	24		24-23-12	ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10		W1286	0049	22		24-41-11	ALL
	B11	UNUSED						ALL
	B12		W1286	5004B	24		24-22-12	ALL
	B13		W1286	5011B	24		24-41-11	ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01		W1286	4011B	24		24-41-11	ALL
	C02		W1286	4001B	24		24-23-12	ALL
	C03		W1286	0133	24		24-22-22	ALL
	C04		W1286	0135	24		24-22-22	ALL
	C05		W1286	4003B	24		24-23-12	ALL
	C06		W1286	4006B	24		24-23-12	ALL
	C07		W1286	4005B	24		24-23-12	ALL
	C08	UNUSED						ALL
	C09		W1286	0084	24		24-51-14	ALL
	C10		W1286	0073	24		24-51-51	ALL
	C11	UNUSED						ALL
	C12		W1286	5005R	24		24-22-22	ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01		W1286	4011G	24		24-41-11	ALL
	D02		W1286	4001G	24		24-23-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00500

Page 8

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00550A		E005-03/ /		PLUG- (continued)				001-099
D00550A		E5-3/ /		PLUG- (continued)				115-199
	D03		W1286	0058	24		24-41-11	ALL
	D04		W1286	0032	24		24-28-21	ALL
	D05		W1286	4003G	24		24-23-12	ALL
	D06		W1286	4006G	24		24-23-12	ALL
	D07		W1286	4005G	24		24-23-12	ALL
	D08	UNUSED						ALL
	D09		W1286	0085	24		24-51-24	ALL
	D10		W1286	0067	24		24-51-31	ALL
	D11	UNUSED						ALL
	D12		W1286	5005B	24		24-22-22	ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
			W1286	5004Z			24-22-12	ALL
			W1286	5005Z			24-22-22	ALL
			W1286	5011Z			24-41-11	ALL
			W1286	FRAA			24-41-11	ALL
D00550B		E005-03/ /		PLUG-				001-099
D00550B		E5-3/ /		PLUG-				115-199
	A01		W1286	0069	24		24-51-51	ALL
	A02		W1286	0055	24		24-41-11	ALL
	A03		W1286	0061	22		24-41-12	ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07		W1286	0052	24		24-41-11	ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10		W1286	0270	24		24-51-71	ALL
	A11		W1286	0074	22		24-51-61	ALL
	A12		W1286	0059	22		24-41-11	ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01		W1286	0051	22		24-41-11	ALL
	B02		W1286	0056	24		24-41-11	ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00500

Page 9

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00550B		E005-03/ /		PLUG- (continued)				001-099
D00550B		E5-3/ /		PLUG- (continued)				115-199
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07		W1286	0053	24		24-41-11	ALL
	B08		W1286	0046	22		24-41-11	ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11		W1286	0075	22		24-51-61	ALL
	B12		W1286	0077	22		25-31-33	ALL
	B13	UNUSED						ALL
	B14		W1286	0062	22		24-51-14	ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07		W1286	0054	24		24-41-11	ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11		W1286	0072	22		24-51-51	ALL
	C12		W1286	0305	22		25-31-11	001-099
	C12		W1286	0078	22		25-31-21	115-199
	C13	UNUSED						ALL
	C14		W1286	0063	22		24-51-24	ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03		W1286	0027	22		33-16-51	ALL
	D04		W1286	0033	24		24-28-21	ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08		W1286	0047	22		24-41-11	ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11		W1286	0071	22		24-51-51	ALL
	D12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00500

Page 10

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00550B		E005-03/ /		PLUG- (continued)				001-099
D00550B		E5-3/ /		PLUG- (continued)				115-199
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
D00550C		E005-03/ /		PLUG-				001-099
D00550C		E5-3/ /		PLUG-				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1286	0048	22		24-41-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	= C1	UNUSED						ALL
	= C5	UNUSED						ALL
D00551		P61/ /		JACK				001-099
D00551		P61/ /		JACK-				115-199
	BLK		W2156	A-BK			23-51-41	001-099
	BLK		W0041	B-BK			23-51-51	115-199
	BLU		W2156	A-BL			23-51-41	001-099
	BLU		W0041	B-BL			23-51-51	115-199
D00553		P61/ /		JACK-				115-199
	BLK		W0041	C-BK			23-51-51	115-199
	BLU		W0041	C-BL			23-51-51	115-199
	RED		W0041	C-RD			23-51-51	115-199
D00554		PPS183/ /		RECPT				ALL
	1		W3430	0009	18		36-11-21	ALL
	2		W3430	0008	18		36-11-21	ALL
	3		W3430	0010	18		36-11-21	ALL
	4	UNUSED						ALL
	5		W3430	0007	18		36-11-21	ALL
	6	UNUSED						ALL
	7		W3430	0006	18		36-11-21	ALL
D00555		P61/ /		PLUG-				115-199
	1		W0041	2502R	24		23-51-51	115-199
	2		W0041	2502B	24		23-51-51	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00500

Page 11

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00555		P61/ /		PLUG- (continued)				115-199
	3		W0041	2502Z			23-51-51	115-199
D00560		P008-00/ /		PLUG				001-099
D00560		P8/ /		PLUG				115-199
	1		W2134	0025	22		33-16-61	ALL
	2		W2134	0003	22		26-15-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W2134	0005	22		26-15-12	ALL
	6		W2134	0020	22		49-61-11	ALL
	7		W2134	0022	22		49-61-11	ALL
	8		W2134	0006	20		26-22-21	ALL
	9		W2134	0008	20		26-22-21	ALL
	10		W2134	0002	22		26-15-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W2134	0015	24		36-11-41	ALL
	15		W2134	0004	22		26-15-12	ALL
	16		W2134	0019	22		28-25-21	ALL
	17		W2134	0023	20		31-51-33	ALL
	18	UNUSED						ALL
	19		W2134	0021	22		49-61-11	ALL
	20	UNUSED						ALL
	21		W2134	0013	24		24-22-41	ALL
	22		W2134	0007	20		26-22-21	ALL
	23		W2134	0009	20		26-22-21	ALL
	24		W2134	0031	22		26-15-11	ALL
	25		W2134	0001	22		26-15-11	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W2134	0016	24		36-11-41	ALL
	32		W2134	0017	22		28-25-21	ALL
	33		W2134	0018	22		28-25-21	ALL
	34		W2134	0024	22		31-51-33	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00500

Page 12

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00560		P008-00/ /		PLUG (continued)				001-099
D00560		P8/ /		PLUG (continued)				115-199
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W2134	0014	24		24-22-41	ALL
	41	UNUSED						ALL
D00568		OSS320/ /		PLUG				ALL
	1		W3300	0098	20		30-11-11	ALL
	2		W3300	0099	20		30-11-11	ALL
	3		W3300	0100	20		30-11-11	ALL
	4		W3300	0096	20		30-11-11	ALL
	5		W3300	0097	20		30-11-11	ALL
	6		W3300	0101	18		30-11-11	ALL
	7	UNUSED						ALL
D00570		OSS320/ /		PLUG				ALL
	1		W3400	0094	20		30-11-11	ALL
	2		W3400	0095	20		30-11-11	ALL
	3		W3400	0096	20		30-11-11	ALL
	4		W3400	0092	20		30-11-11	ALL
	5		W3400	0093	20		30-11-11	ALL
	6		W3400	0097	18		30-11-11	ALL
	7	UNUSED						ALL
D00572		P036-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D00572		P36/ /		RELAY SOCKET (PLATE 'A')				115-199
	A1	UNUSED						ALL
	A2		W1260	5555	24		21-25-11	ALL
	A3		W1260	6102	24		21-25-11	ALL
	B1	UNUSED						ALL
	B2		W1260	5554	24		21-25-11	ALL
	B3		W1260	6013	24		21-25-11	ALL
	C1		W1260	0916	24		21-58-12	ALL
	C2		W1260	0914	16		21-58-12	ALL
	C3		W1260	5602	16		21-25-11	ALL
	D1	UNUSED						ALL
	D2		W1260	0956	16		21-58-13	ALL
	D3		W1260	0955	16		21-58-13	ALL
	X1		W1260	5975	24		21-58-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00500

Page 13

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00572		P036-00/ /		RELAY SOCKET (PLATE 'A') (continued)				001-099
D00572		P36/ /		RELAY SOCKET (PLATE 'A') (continued)				115-199
	X2		W1260	5557	24		21-58-12	ALL
D00574		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D00574		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	1		W1270	0652	24		21-58-12	ALL
	2		W1270	0661	24		21-58-12	ALL
	3		W1270	5519	24		21-58-12	ALL
	4		W1270	5510	24		21-58-12	ALL
	5	UNUSED						ALL
	6		W1270	5828	24		21-58-12	ALL
	7		W1270	0654	24		21-58-12	ALL
	8	UNUSED						ALL
D00578		555/175/L045		PLUG-				ALL
	1		W4004	1002	22		21-58-12	ALL
	2	UNUSED						ALL
	3		W4004	0039	20		21-58-12	ALL
	4		W4004	1003	22		21-58-12	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W4004	1001	24		21-58-12	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	DED		W4004	1001Z			21-58-12	ALL
	DED		W4004	1002Z			21-58-12	ALL
	DED		W4004	1003Z			21-58-12	ALL
D00580		560/182/L062		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W4004	1004	24		21-58-12	ALL
	5		W4004	0036	20		21-58-12	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00500

Page 14

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00580		560/182/L062		PLUG- (continued)				ALL
	9		W4004	0032	24		21-58-12	ALL
	10		W4004	0037	20		21-58-12	ALL
	11		W4004	0038	20		21-58-12	ALL
	12		W4004	0040	24		21-58-12	ALL
	DED		W4004	1004Z			21-58-12	ALL
D00582		P036-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D00582		P36/ /		RELAY SOCKET (PLATE 'A')				115-199
	1		W1260	0891	24		21-25-11	ALL
	2	UNUSED						ALL
	3	UNUSED						001-099
	3		W1260	5644	24		SPARE	115-199
	4	UNUSED						ALL
	5	UNUSED						001-099
	5		W1260	5645	24		SPARE	115-199
	6		W1260	5743	22		32-09-11	ALL
	7		W1260	5532	20		21-58-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W1260	5748	22		32-09-11	ALL
	13		W1260	5500	24		21-25-11	ALL
	14		W1260	5531	20		21-58-11	ALL
D00584		P36/ /		RELAY SOCKET (PLATE 'A')				ALL
	1	UNUSED						001-099
	1		W1260	2007B	24		SPARE	115-199
	2	UNUSED						ALL
	3		W1260	2008B	24		21-51-12	ALL
	4	UNUSED						ALL
	5		W1260	2008R	24		21-51-12	ALL
	6		W1260	5746	22		32-09-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1260	5710	24		31-41-19	ALL
	11		W1260	5711	24		31-41-19	ALL
	12		W1260	5753	22		32-09-11	ALL
	13	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D00500

Page 15

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00584		P36/ /		RELAY SOCKET (PLATE 'A') (continued)				ALL
	13		W1260	2007R	24		SPARE	115-199
	14	UNUSED						ALL
D00585		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D00585		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	1		W1270	5005B	24		31-31-41	001-099
	1		W1270	5005B	24		31-31-21	115-199
	2		W1270	5006R	24		31-31-41	001-099
	2		W1270	5006R	24		31-31-21	115-199
	3		W1270	5827	22		31-31-41	001-099
	3		W1270	5827	22		31-31-21	115-199
	4		W1270	5004R	24		31-31-41	001-099
	4		W1270	5004R	24		31-31-21	115-199
	5		W1270	5005R	24		31-31-41	001-099
	5		W1270	5005R	24		31-31-21	115-199
	6		W1270	5006B	24		31-31-41	001-099
	6		W1270	5006B	24		31-31-21	115-199
	7	UNUSED						ALL
	8		W1270	5004B	24		31-31-41	001-099
	8		W1270	5004B	24		31-31-21	115-199
D00586		P36/ /		RELAY SOCKET (PLATE 'A')				ALL
	1		W1260	2002B	24		21-61-51	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1260	5745	22		32-09-11	ALL
	7		W1260	5929	22		33-16-11	ALL
	8		W1260	5930	22		33-16-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W1260	5752	22		32-09-11	ALL
	13		W1260	2002R	24		21-61-51	ALL
	14	UNUSED						ALL
D00588		P36/ /		RELAY SOCKET (PLATE 'A')				ALL
	1		W1260	5631	22		22-14-31	ALL
	2		W1260	5636	22		22-14-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00500

Page 16

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00588		P36/ /		RELAY SOCKET (PLATE 'A') (continued)				ALL
	3	UNUSED						ALL
	4		W1260	5637	22		22-14-31	ALL
	5		W1260	5632	22		22-14-31	ALL
	6		W1260	5742	22		32-09-11	ALL
	7		W1260	5628	22		22-14-31	ALL
	8		W1260	5634	22		22-14-31	ALL
	9	UNUSED						ALL
	10		W1260	5635	22		22-14-31	ALL
	11		W1260	5629	22		22-14-31	ALL
	12		W1260	5733	22		32-09-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D00589		P051-00/ /		RCPT-				ALL
	1		W1451	0105	24		31-51-12	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1451	0156	24		27-32-21	ALL
	5	UNUSED						ALL
	6		W1451	0462	22		27-32-22	001-008, 010-099
	6	UNUSED						009, 115-199
	7	UNUSED						ALL
	8		W1451	0466	24		27-32-21	001-099
	8	UNUSED						115-199
	9	UNUSED						ALL
	10		W1451	0461	22		27-32-22	001-008, 010-099
	10	UNUSED						009, 115-199
	11		W1451	0427	24		27-32-12	ALL
	12		W1451	5024R	24		27-32-21	ALL
	13		W1451	5024B	24		27-32-21	ALL
	14		W1451	0151	22		31-51-11	ALL
	15		W1451	0290	22		31-51-12	ALL
	16		W1451	5011R	24		27-32-21	ALL
	17		W1451	1007	24		31-51-11	ALL
	18		W1451	5011B	24		27-32-21	ALL
	19		W1451	5030R	24		27-32-21	001-099
	19	UNUSED						115-199
	20		W1451	5030B	24		27-32-21	001-099
	20	UNUSED						115-199
	21		W1451	0444	24		27-32-22	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00500

Page 17

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00589		P051-00/ /		RCPT- (continued)				ALL
	22	UNUSED						ALL
	23		W1451	5026R	24		34-46-12	ALL
	24		W1451	1037	24		31-51-12	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W1451	1006	24		31-51-11	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W1451	1036	24		31-51-12	ALL
	31		W1451	0160	24		27-32-21	ALL
	32		W1451	1008	24		31-51-11	ALL
	33		W1451	1038	24		31-51-12	ALL
	34		W1451	0165	22		27-32-21	ALL
	35		W1451	0005	24		31-51-11	ALL
	36	UNUSED						ALL
	37		W1451	0157	24		27-32-21	ALL
	38		W1451	0155	24		27-32-21	ALL
	39		W1451	0164	24		27-32-21	ALL
	40		W1451	0162	24		27-32-21	ALL
	41	UNUSED						ALL
	42		W1451	0442	22		27-32-22	ALL
	43	UNUSED						ALL
	44		W1451	0441	22		27-32-22	ALL
	45	UNUSED						ALL
	46		W1451	0449	24		27-32-22	ALL
	47		W1451	0448	24		27-32-22	ALL
	48		W1451	0152	22		31-51-11	ALL
	49		W1451	0447	24		27-32-22	ALL
	50		W1451	0446	24		27-32-22	ALL
	51		W1451	0445	24		27-32-22	ALL
	52		W1451	PQ01			27-32-21	ALL
	53		W1451	0450	24		27-32-22	ALL
	54		W1451	5026B	24		34-46-12	ALL
	55		W1451	0443	24		27-32-22	ALL
	56		W1451	0428	24		27-32-12	ALL
	57	UNUSED						ALL
	58		W1451	0452	24		27-32-22	ALL
	59	UNUSED						ALL
	60	UNUSED						ALL
	61	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00500

Page 18

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00589		P051-00/ /		RCPT- (continued)				ALL
	62		W1451	0451	24		27-32-22	ALL
	63		W1451	0154	24		27-32-21	ALL
	64	UNUSED						ALL
	65		W1451	PQ01			27-32-21	ALL
	66	UNUSED						ALL
	DED		W1451	5030Z			27-32-21	001-099
	DED		W1451	1006Z			31-51-11	ALL
	DED		W1451	1007Z			31-51-11	ALL
	DED		W1451	1008Z			31-51-11	ALL
	DED		W1451	1036Z			31-51-12	ALL
	DED		W1451	1037Z			31-51-12	ALL
	DED		W1451	1038Z			31-51-12	ALL
	DED		W1451	5011Z			27-32-21	ALL
	DED		W1451	5024Z			27-32-21	ALL
	DED		W1451	5026Z			34-46-12	ALL
D00590		P36/ /		RELAY SOCKET (PLATE 'A')				ALL
	1		W1260	5643	24		22-32-15	ALL
	2		W1260	5642	24		22-32-15	ALL
	3		W1260	5708	24		30-33-11	ALL
	4		W1260	5709	24		30-33-11	ALL
	5		W1260	5707	24		30-33-11	ALL
	6		W1260	5741	22		32-09-11	ALL
	7		W1260	5794	24		34-31-31	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1260	5798	24		34-53-11	ALL
	11		W1260	5797	24		34-53-11	ALL
	12		W1260	5734	22		32-09-11	ALL
	13	UNUSED						ALL
	14		W1260	5793	24		34-31-31	ALL
D00592		P036-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D00592		P33/ /		RELAY SOCKET				115-199
	A1	UNUSED						ALL
	A2	UNUSED						ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00500

Page 19

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00592		P036-00/ /		RELAY SOCKET (PLATE 'A') (continued)				001-099
D00592		P33/ /		RELAY SOCKET (continued)				115-199
	C1	UNUSED						ALL
	C2		W1260	5926	22		30-32-11	001-099
	C2		W1232	0102	22		30-32-11	115-199
	C3		W1260	0088	22		30-32-11	001-099
	C3		W1260	0351	22		30-32-11	001-099
	C3		W1232	0099	22		30-32-11	115-199
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1260	5901	22		32-09-11	001-099
	X1		W1260	5924	22		32-09-11	001-099
	X1		W1232	0104	22		32-09-11	115-199
	X2		W1260	5925	22		32-09-11	001-002
	X2		W1260	6226	22		32-09-11	001-099
	X2		W1260	6407	22		32-09-11	003-099
	X2		W1232	0105	22		32-09-11	115-199
D00594		P36/ /		RELAY SOCKET (PLATE 'A')				ALL
	A1	UNUSED						ALL
	A2	UNUSED						ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2		W1260	5820	24		26-15-11	001-099
	B2		W1260	5820	22		26-15-11	115-199
	B3		W1260	5819	24		26-15-11	ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1		W1260	5504	20		21-45-11	001-099
	D1		W1260	5503	20		21-45-11	ALL
	D2		W1260	5502	20		21-45-11	ALL
	D3	UNUSED						001-002, 010-099, 115-199
	D3		W1260	6402	20		21-45-11	003-009
	X1		W1260	5764	22		32-09-11	001-099
	X1		W1260	5744	22		32-09-11	ALL
	X2		W1260	5748	22		32-09-11	001-099
	X2		W1260	5749	22		32-09-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00500

Page 20

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00595		P051-00/ /		RCPT-				ALL
	1	UNUSED						ALL
	2		W1451	5017R	24		31-51-42	ALL
	3		W1451	0223	24		31-51-42	ALL
	4		W1451	0405	24		31-51-42	ALL
	5		W1451	0169	24		31-51-42	ALL
	6		W1451	0406	24		31-51-42	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W1451	0199	24		31-51-42	ALL
	10		W1451	0416	24		31-51-43	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W1451	0417	24		31-51-43	ALL
	14		W1451	0264	22		31-51-11	ALL
	15		W1451	0294	22		31-51-12	ALL
	16	UNUSED						ALL
	17		W1451	1017	24		31-51-11	ALL
	18		W1451	0120	24		31-51-12	ALL
	19		W1451	0232	24		31-51-21	ALL
	20		W1451	0220	24		31-51-42	ALL
	21	UNUSED						ALL
	22		W1451	0222	24		31-51-42	ALL
	23	UNUSED						ALL
	24		W1451	1047	24		31-51-12	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W1451	1016	24		31-51-11	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W1451	1046	24		31-51-12	ALL
	31	UNUSED						ALL
	32		W1451	1018	24		31-51-11	ALL
	33		W1451	1048	24		31-51-12	ALL
	34		W1451	0216	24		31-51-42	ALL
	35	UNUSED						ALL
	36		W1451	5017B	24		31-51-42	ALL
	37		W1451	0219	24		31-51-42	ALL
	38		W1451	0069	24		31-51-42	ALL
	39		W1451	0218	24		31-51-42	ALL
	40		W1451	0221	24		31-51-42	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00500

Page 21

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00595		P051-00/ /		RCPT- (continued)				ALL
	41		W1451	0418	22		31-51-43	ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44		W1451	PG01			31-51-42	ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48		W1451	0199	24		31-51-42	ALL
	49	UNUSED						ALL
	50		W1451	0222	24		31-51-42	ALL
	51		W1451	0020	24		31-51-11	ALL
	52		W1451	0214	24		31-51-42	ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	56	UNUSED						ALL
	57	UNUSED						ALL
	58	UNUSED						ALL
	59	UNUSED						ALL
	60	UNUSED						ALL
	61		W1451	PG01			31-51-42	ALL
	62	UNUSED						ALL
	63	UNUSED						ALL
	64	UNUSED						ALL
	65	UNUSED						ALL
	66	UNUSED						ALL
	DED		W1451	1016Z			31-51-11	ALL
	DED		W1451	1017Z			31-51-11	ALL
	DED		W1451	1018Z			31-51-11	ALL
	DED		W1451	1046Z			31-51-12	ALL
	DED		W1451	1047Z			31-51-12	ALL
	DED		W1451	1048Z			31-51-12	ALL
	DED		W1451	5017Z			31-51-42	ALL
D00596		P36/ /		RELAY SOCKET (PLATE 'A')				ALL
	A1	UNUSED						ALL
	A2		W1260	6010	18		30-34-21	ALL
	A3		W1260	6008	18		30-34-21	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00500

Page 22

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00596		P36/ /		RELAY SOCKET (PLATE 'A') (continued)				ALL
	B3	UNUSED						ALL
	C1		W1260	5780	24		30-31-12	001-099
	C1		W1260	5779	24		30-31-12	ALL
	C2		W1260	5700	24		30-31-12	ALL
	C3	UNUSED						ALL
	D1		W1260	5667	22		27-23-11	ALL
	D2		W1260	5668	22		27-23-11	ALL
	D3		W1260	5664	22		27-23-11	001-099
	D3		W1260	5666	22		27-23-11	ALL
	X1		W1260	5763	22		32-09-11	001-099
	X1		W1260	5761	22		32-09-11	115-199
	X2		W1260	5757	22		32-09-11	ALL
	X2		W1260	5760	22		32-09-11	115-199
D00597		FIN400F/385/000		RECP				ALL
	= A1		W2825	001CX			34-51-11	ALL
	= C1		W2825	001CO			34-51-11	ALL
D00598		P36/ /		RELAY SOCKET (PLATE 'A')				ALL
	A1		W1260	5806	22		78-34-11	ALL
	A2		W1260	0417	22		78-34-11	001-099
	A2		W1260	5805	22		78-34-11	ALL
	A3	UNUSED						ALL
	B1		W1260	5803	20		76-11-21	ALL
	B2		W1260	5804	20		76-11-21	ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1		W1260	5663	22		27-23-11	ALL
	D2		W1260	5661	22		27-23-11	ALL
	D3		W1260	0046	22		27-23-11	001-099
	D3		W1260	5662	22		27-23-11	ALL
	X1		W1260	5761	22		32-09-11	001-099
	X1		W1260	5720	22		32-09-11	003-099, 115-199
	X1		W1260	5763	22		32-09-11	115-199
	X2		W1260	5759	22		32-09-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00500

Page 23 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00600		P036-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D00600		P36/ /		RELAY SOCKET (PLATE 'A')				115-199
	1		W1260	0899	24		21-58-12	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1260	5740	22		32-09-11	ALL
	7		W1260	5717	24		31-51-41	ALL
	8		W1260	0817	24		31-51-41	ALL
	9	UNUSED						ALL
	10		W1260	5785	24		34-12-12	ALL
	11		W1260	5786	22		34-12-12	ALL
	12		W1260	5735	22		32-09-11	ALL
	13		W1260	0898	24		21-58-12	ALL
	14	UNUSED						ALL
D00602		P036-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D00602		P36/ /		RELAY SOCKET (PLATE 'A')				115-199
	1		W1260	5506	24		28-25-11	001-099
	1		W1260	5506	22		28-25-11	115-199
	2		W1260	5507	24		28-25-11	001-099
	2		W1260	5507	22		28-25-11	115-199
	3	UNUSED						ALL
	4		W1260	5897	24		24-51-71	ALL
	5		W1260	5896	24		24-51-71	ALL
	6		W1260	5737	22		32-09-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W1260	0814	24		27-32-11	ALL
	10	UNUSED						ALL
	11		W1260	0815	24		27-32-11	ALL
	12		W1260	5730	22		32-09-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D00604		P36/ /		RELAY SOCKET (PLATE 'A')				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00604		P36/ /		RELAY SOCKET (PLATE 'A') (continued)				ALL
	5	UNUSED						ALL
	6		W1260	5747	22		32-09-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1260	5932	22		33-16-11	ALL
	11		W1260	5931	22		33-16-11	ALL
	12		W1260	5756	22		32-09-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D00606		P36/ /		RELAY SOCKET (PLATE 'A')				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1260	5739	22		32-09-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1260	5934	22		33-16-11	ALL
	11		W1260	5933	22		33-16-11	ALL
	12		W1260	5736	22		32-09-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D00608		P36/ /		RELAY SOCKET (PLATE 'A')				ALL
	A1		W1260	6003	22		30-34-22	ALL
	A2		W1260	6002	22		30-34-22	ALL
	A3		W1260	6004	22		30-34-22	ALL
	B1		W1260	5780	24		30-31-12	ALL
	B2		W1260	5972	24		30-31-12	ALL
	B3	UNUSED						ALL
	C1		W1260	5705	24		30-31-12	ALL
	C2		W1260	5704	24		30-31-12	ALL
	C3	UNUSED						ALL
	D1		W1260	5706	24		30-31-12	ALL
	D2		W1260	5703	24		30-31-12	ALL
	D3	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00608		P36/ /		RELAY SOCKET (PLATE 'A') (continued)				ALL
	X1		W1260	5763	22		32-09-11	001-099
	X1		W1260	5764	22		32-09-11	ALL
	X2		W1260	0977	22		32-09-11	001-099
	X2		W1260	5757	22		32-09-11	001-099
	X2		W1260	5760	22		32-09-11	115-199
D00610		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D00610		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	1		W1270	5522	24		23-12-31	001-099
	1	UNUSED						115-199
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1270	8001	22		34-22-19	001-099
	4	UNUSED						115-199
	5		W1270	8000	24		34-22-19	001-099
	5	UNUSED						115-199
	6		W1270	5845	22		32-09-12	ALL
	7		W1270	5929	24		34-61-24	ALL
	8		W1270	5930	24		34-61-24	ALL
	9	UNUSED						001-099
	9		W1270	2004B	24		SPARE	115-199
	10	UNUSED						ALL
	11	UNUSED						001-099
	11		W1270	2004R	24		SPARE	115-199
	12		W1270	5844	22		32-09-12	ALL
	13		W1270	5521	24		23-12-31	001-099
	13	UNUSED						115-199
	14	UNUSED						ALL
D00612		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D00612		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	1		W1270	0161	24		23-12-21	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1270	5861	22		32-09-12	ALL
	7		W1270	5925	24		34-53-21	ALL
	8		W1270	5926	24		34-53-21	ALL
	9		W1270	0659	24		21-58-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00612		P037-00/ /		RELAY SOCKET (PLATE 'A') (continued)				001-099
D00612		P37/ /		RELAY SOCKET (PLATE 'A') (continued)				115-199
	10	UNUSED						ALL
	11		W1270	0660	24		21-58-12	ALL
	12		W1270	5860	22		32-09-12	ALL
	13		W1270	0162	24		23-12-21	ALL
	14	UNUSED						ALL
D00614		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D00614		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	1		W1270	5679	22		22-14-31	ALL
	2		W1270	5675	22		22-14-31	ALL
	3	UNUSED						ALL
	4		W1270	5676	22		22-14-31	ALL
	5		W1270	5680	22		22-14-31	ALL
	6		W1270	5873	22		32-09-12	ALL
	7		W1270	5682	22		22-14-31	ALL
	8		W1270	5677	22		22-14-31	ALL
	9	UNUSED						ALL
	10		W1270	5678	22		22-14-31	ALL
	11		W1270	5683	22		22-14-31	ALL
	12		W1270	5872	22		32-09-12	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D00616		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D00616		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	A1		W1270	0691	22		78-34-21	001-002, 115-199
	A1		W1270	5937	22		78-34-21	003-099
	A2		W1270	5936	22		78-34-21	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2		W1270	5776	20		30-33-11	ALL
	B3		W1270	5778	20		30-33-11	ALL
	C1		W1270	5705	22		27-23-11	ALL
	C2		W1270	5703	22		27-23-11	ALL
	C3		W1270	8504	22		27-23-11	001-099
	C3		W1270	8505	22		27-23-11	001-099
	C3		W1270	5704	22		27-23-11	115-199
	D1	UNUSED						ALL
	D2	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 4

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00616		P037-00/ /		RELAY SOCKET (PLATE 'A') (continued)				001-099
D00616		P37/ /		RELAY SOCKET (PLATE 'A') (continued)				115-199
	D3	UNUSED						ALL
	X1		W1270	5846	22		32-09-12	001-099
	X1		W1270	5837	22		32-09-12	ALL
	X2		W1270	5836	22		32-09-12	ALL
	X2		W1270	5854	22		32-09-12	ALL
D00618		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D00618		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	A1		W1270	0381	22		30-11-11	001-099
	A1		W1270	5715	22		30-11-11	115-199
	A2		W1270	5716	22		30-11-11	ALL
	A3		W1270	5714	22		30-11-11	ALL
	B1		W1270	6091	24		30-31-11	ALL
	B2		W1270	6090	24		30-31-11	ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1270	5837	22		32-09-12	001-099
	X1		W1270	5832	22		32-09-12	ALL
	X2		W1270	5836	22		32-09-12	001-099
	X2		W1270	5831	22		32-09-12	ALL
D00620		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D00620		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	A1	UNUSED						ALL
	A2	UNUSED						ALL
	A3	UNUSED						ALL
	B1		W1270	0325	20		21-45-11	ALL
	B2		W1270	0324	20		21-45-11	ALL
	B3	UNUSED						001-002, 010-099, 115-199
	B3		W1270	6483	20		21-45-11	003-009
	C1		W1270	5787	20		30-71-11	ALL
	C2		W1270	5791	20		30-71-11	ALL
	C3		W1270	5790	20		30-71-11	ALL
	D1	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 5

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00620		P037-00/ /		RELAY SOCKET (PLATE 'A') (continued)				001-099
D00620		P37/ /		RELAY SOCKET (PLATE 'A') (continued)				115-199
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1270	5862	22		32-09-12	ALL
	X2		W1270	5863	22		32-09-12	ALL
D00621		FIN400/FS/		RECP				ALL
	= A1		W2827	001CX			34-51-21	ALL
	= C1		W2827	001CO			34-51-21	ALL
D00622		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D00622		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	1		W1270	6300	20		24-51-61	ALL
	2		W1270	6301	20		24-51-61	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1270	5871	22		32-09-12	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W1270	5821	22		31-31-01	001-099
	9		W1270	5821	22		31-31-13	115-199
	10	UNUSED						ALL
	11		W1270	5822	22		31-31-01	001-099
	11		W1270	5822	22		31-31-13	115-199
	12		W1270	5870	22		32-09-12	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D00623		247/199/L006		RCPT-				ALL
	1		W2441	2010B	22		27-61-17	ALL
	2		W2441	2010R	22		27-61-17	ALL
	3		W2441	2009R	22		27-61-17	ALL
	4	UNUSED						ALL
	5		W2441	2009B	22		27-61-17	ALL
	6		W2441	0001	20		27-61-17	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 6

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00623		247/199/L006		RCPT- (continued)				ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00624		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D00624		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	1		W1270	5914	24		34-12-22	ALL
	2		W1270	5915	24		34-12-22	ALL
	3		W1270	0276	24		27-32-21	ALL
	4	UNUSED						ALL
	5		W1270	0278	24		27-32-21	ALL
	6		W1270	5840	22		32-09-12	ALL
	7		W1270	0236	22		32-09-12	ALL
	8		W1270	0234	22		32-09-12	ALL
	9	UNUSED						ALL
	10		W1270	2003R	24		21-31-21	ALL
	11		W1270	2003B	24		21-31-21	ALL
	12		W1270	5841	22		32-09-12	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D00625		247/199/L008		RCPT				ALL
	1		W2451	2010B	22		27-61-13	ALL
	2		W2451	2010R	22		27-61-13	ALL
	3		W2451	2009R	22		27-61-13	ALL
	4	UNUSED						ALL
	5		W2451	2009B	22		27-61-13	ALL
	6		W2451	0001	20		27-61-13	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00626		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D00626		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	A1		W1270	5888	22		32-31-11	ALL
	A2		W1270	5889	22		32-31-11	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 7

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00626		P037-00/ /		RELAY SOCKET (PLATE 'A') (continued)				001-099
D00626		P37/ /		RELAY SOCKET (PLATE 'A') (continued)				115-199
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1270	5834	22		32-09-12	001-099
	X1		W1270	5862	22		32-09-12	001-099
	X1		W1270	5846	22		32-09-12	115-199
	X2		W1270	5847	22		32-09-12	ALL
D00627		247/199/L010		RCPT-				ALL
	1		W2449	2010B	22		27-61-18	ALL
	2		W2449	2010R	22		27-61-18	ALL
	3		W2449	2009R	22		27-61-18	ALL
	4	UNUSED						ALL
	5		W2449	2009B	22		27-61-18	ALL
	6		W2449	0001	20		27-61-18	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00628		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D00628		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1270	5842	22		32-09-12	ALL
	7		W1270	5501	24		21-51-21	ALL
	8		W1270	5500	24		21-51-21	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 8

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00628		P037-00/ /		RELAY SOCKET (PLATE 'A') (continued)				001-099
D00628		P37/ /		RELAY SOCKET (PLATE 'A') (continued)				115-199
	11	UNUSED						ALL
	12		W1270	5843	22		32-09-12	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D00629		247/199/R034		RCPT-				001-099
D00629		276/199/R34		RCPT-				115-199
	1		W2443	2010B	22		27-61-15	ALL
	2		W2443	2010R	22		27-61-15	ALL
	3		W2443	2009R	22		27-61-15	ALL
	4	UNUSED						ALL
	5		W2443	2009B	22		27-61-15	ALL
	6		W2443	0001	20		27-61-15	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00630		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D00630		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	1		W1270	5794	24		21-51-11	ALL
	2		W1270	5788	24		21-51-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1270	5838	22		32-09-12	ALL
	7		W1270	5711	20		27-62-11	ALL
	8		W1270	5710	20		27-62-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W1270	5839	22		32-09-12	ALL
	13	UNUSED						ALL
	14		W1270	6760	20		27-62-11	ALL
D00631		247/199/R36		RCPT				ALL
	1		W2447	2010B	22		27-61-14	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 9

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00631		247/199/R36		RCPT (continued)				ALL
	2		W2447	2010R	22		27-61-14	ALL
	3		W2447	2009R	22		27-61-14	ALL
	4	UNUSED						ALL
	5		W2447	2009B	22		27-61-14	ALL
	6		W2447	0001	20		27-61-14	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W2447	2013B	22		SPARE	001-099
	11	UNUSED						115-199
	12		W2447	2013R	22		SPARE	001-099
	12	UNUSED						115-199
D00632		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D00632		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	1		W1270	5695	24		24-51-71	ALL
	2		W1270	0356	24		24-51-71	001-099
	2		W1270	5696	24		24-51-71	115-199
	3		W1270	5692	24		24-22-22	ALL
	4	UNUSED						ALL
	5		W1270	5691	24		24-22-22	ALL
	6		W1270	5864	22		32-09-12	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W1270	3010B	24		28-41-14	ALL
	10		W1270	3010Y	24		28-41-14	ALL
	11		W1270	3010R	24		28-41-14	ALL
	12		W1270	5865	22		32-09-12	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D00633		247/199/R038		RCPT-				001-099
D00633		247/199/R38		RCPT-				115-199
	1		W2445	2010B	22		27-61-16	ALL
	2		W2445	2010R	22		27-61-16	ALL
	3		W2445	2009R	22		27-61-16	ALL
	4	UNUSED						ALL
	5		W2445	2009B	22		27-61-16	ALL
	6		W2445	0001	20		27-61-16	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 10

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00633		247/199/R038		RCPT- (continued)				001-099
D00633		247/199/R38		RCPT- (continued)				115-199
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00634		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D00634		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	A1	UNUSED						ALL
	A2		W1270	6092	20		30-34-22	001-099
	A2		W1270	6092	18		30-34-22	115-199
	A3		W1270	6095	20		30-34-22	001-099
	A3		W1270	6095	18		30-34-22	115-199
	B1		W1270	5934	22		76-11-21	ALL
	B2		W1270	5935	22		76-11-21	ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2		W1270	5955	22		30-32-11	ALL
	C3		W1270	0483	22		30-32-11	001-099
	C3		W1270	5953	22		30-32-11	ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1270	5846	22		32-09-12	001-099
	X1		W1270	5834	22		32-09-12	115-199
	X1		W1270	5837	22		32-09-12	115-199
	X2		W1270	5831	22		32-09-12	001-099
	X2		W1270	5833	22		32-09-12	ALL
D00635A		E003-01/ /		PLUG-				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04		W1265	0130	22		27-61-13	ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08		W1265	0132	22		27-61-13	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 11

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00635A		E003-01/ /		PLUG- (continued)				ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12		W1265	0234	22		27-09-13	ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15		W1265	0257	22		27-61-13	ALL
	B01	UNUSED						ALL
	B02		W1265	0133	22		27-61-13	ALL
	B03		W1265	0133	22		27-61-13	ALL
	B04	UNUSED						ALL
	B05		W1265	0130	22		27-61-13	ALL
	B06	UNUSED						ALL
	B07		W1265	0670	22		27-61-12	ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13		W1265	0314	22		27-61-12	ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03		W1265	0131	22		27-61-13	ALL
	C04	UNUSED						ALL
	C05		W1265	0135	22		27-61-13	ALL
	C06		W1265	0135	22		27-61-13	ALL
	C07	UNUSED						ALL
	C08		W1265	0132	22		27-61-13	ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13		W1265	0241	22		27-09-14	ALL
	C14		W1265	0676	22		27-61-12	ALL
	C15		W1265	0678	22		27-61-12	ALL
	D01		W1265	0008	22		27-09-12	ALL
	D02		W1265	0131	22		27-61-13	ALL
	D03	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 12

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00635A		E003-01/ /		PLUG- (continued)				ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13		W1265	0647	22		27-61-12	ALL
	D14		W1265	0651	22		27-61-12	ALL
	D15		W1265	0657	22		27-61-12	ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11		W1265	0036	22		27-61-13	ALL
	E12		W1265	0043	22		27-61-13	ALL
	E13		W1265	0648	22		27-61-12	ALL
	E14		W1265	0652	22		27-61-12	ALL
	E15		W1265	0655	22		27-61-12	ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03		W1265	0042	22		27-61-13	ALL
	F04	UNUSED						ALL
	F05		W1265	0041	22		27-61-13	ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13		W1265	0646	22		27-61-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 13

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00635A		E003-01/ /		PLUG- (continued)				ALL
	F14		W1265	0650	22		27-61-12	ALL
	F15		W1265	0654	22		27-61-12	ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03		W1265	0037	22		27-61-13	ALL
	G04	UNUSED						ALL
	G05		W1265	0038	22		27-61-13	ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08		W1265	2004B	22		27-61-13	ALL
	G09		W1265	2004R	22		27-61-13	ALL
	G10		W1265	2010R	22		27-61-13	ALL
	G11		W1265	2010B	22		27-61-13	ALL
	G12	UNUSED						ALL
	G13		W1265	0649	22		27-61-12	ALL
	G14		W1265	0653	22		27-61-12	ALL
	G15		W1265	0658	22		27-61-12	ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13		W1265	0181	24		31-31-62	001-099
	H13		W1265	0181	24		31-31-32	115-199
	H14		W1265	0625	22		27-09-14	ALL
	H15		W1265	0684	22		27-61-12	ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03		W1265	2011R	22		27-61-13	ALL
	J04		W1265	2011B	22		27-61-13	ALL
	J05	UNUSED						ALL
	J06		W1265	2013B	22		27-61-13	ALL
	J07	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 14

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00635A		E003-01/ /		PLUG- (continued)				ALL
	J08		W1265	2009R	22		27-61-13	ALL
	J09		W1265	2009B	22		27-61-13	ALL
	J10	UNUSED						ALL
	J11		W1265	2006B	22		27-61-13	ALL
	J12	UNUSED						ALL
	J13		W1265	0423	22		27-09-13	ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03		W1265	2012R	22		27-61-13	ALL
	K04		W1265	2012B	22		27-61-13	ALL
	K05	UNUSED						ALL
	K06		W1265	2013R	22		27-61-13	ALL
	K07	UNUSED						ALL
	K08		W1265	2005R	22		27-61-13	ALL
	K09		W1265	2005B	22		27-61-13	ALL
	K10	UNUSED						ALL
	K11		W1265	2006R	22		27-61-13	ALL
	K12	UNUSED						ALL
	K13		W1265	0422	22		27-09-13	ALL
	K14	UNUSED						ALL
	K15		W1265	0645	22		27-61-13	ALL
D00635B		E003-01/ /		PLUG-				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05		W1265	0346	22		27-61-13	ALL
	A06	UNUSED						ALL
	A07	UNUSED						001-002, 115-199
	A07		W1265	0085	22		27-61-12	003-099
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13		W1265	0504	22		27-61-13	ALL
	A14	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 15

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00635B		E003-01/ /		PLUG- (continued)				ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03		W1265	0349	22		27-61-13	ALL
	B04		W1265	0349	22		27-61-13	ALL
	B05	UNUSED						ALL
	B06		W1265	0346	22		27-61-13	ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11		W1265	0508	22		27-61-13	ALL
	B12		W1265	0508	22		27-61-13	ALL
	B13	UNUSED						ALL
	B14		W1265	0504	22		27-61-13	ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04		W1265	0347	22		27-61-13	ALL
	C05	UNUSED						ALL
	C06		W1265	0345	22		27-61-13	ALL
	C07		W1265	0345	22		27-61-13	ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12		W1265	0512	22		27-61-13	ALL
	C13	UNUSED						ALL
	C14		W1265	0510	22		27-61-13	ALL
	C15		W1265	0510	22		27-61-13	ALL
	D01	UNUSED						ALL
	D02		W1265	0224	22		27-09-12	ALL
	D03		W1265	0347	22		27-61-13	ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 16

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00635B		E003-01/ /		PLUG- (continued)				ALL
	D10		W1265	0421	22		27-09-12	ALL
	D11		W1265	0512	22		27-61-13	ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04		W1265	0251	22		27-61-13	ALL
	F05	UNUSED						ALL
	F06		W1265	0252	22		27-61-13	ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12		W1265	0442	22		27-61-13	ALL
	F13	UNUSED						ALL
	F14		W1265	0441	22		27-61-13	ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04		W1265	0256	22		27-61-13	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 17

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00635B		E003-01/ /		PLUG- (continued)				ALL
	G05	UNUSED						ALL
	G06		W1265	0255	22		27-61-13	ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12		W1265	0439	22		27-61-13	ALL
	G13	UNUSED						ALL
	G14		W1265	0438	22		27-61-13	ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12		W1265	0520	22		27-61-13	ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04		W1265	2125R	22		27-61-13	ALL
	J05		W1265	2125B	22		27-61-13	ALL
	J06	UNUSED						ALL
	J07		W1265	2128B	22		27-61-13	ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12		W1265	2201R	22		27-61-13	ALL
	J13		W1265	2201B	22		27-61-13	ALL
	J14	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 18

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00635B		E003-01/ /		PLUG- (continued)				ALL
	J15		W1265	2203B	22		27-61-13	ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04		W1265	2126R	22		27-61-13	ALL
	K05		W1265	2126B	22		27-61-13	ALL
	K06	UNUSED						ALL
	K07		W1265	2128R	22		27-61-13	ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12		W1265	2202R	22		27-61-13	ALL
	K13		W1265	2202B	22		27-61-13	ALL
	K14	UNUSED						ALL
	K15		W1265	2203R	22		27-61-13	ALL
D00635C		E003-01/ /		PLUG-				ALL
	1	UNUSED						ALL
	2		W1265	0446	16		27-61-13	ALL
	3		W1265	0445	16		27-61-13	ALL
	4		W1265	0670	22		27-61-12	ALL
	5		W1265	0449	20		27-61-13	ALL
	6		W1265	0448	20		27-61-13	ALL
	7		W1265	0447	16		27-61-13	ALL
	8		W1265	0444	16		27-61-13	ALL
	9		W1265	0514	16		27-61-13	ALL
	10		W1265	0513	16		27-61-13	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	=C12	UNUSED						ALL
	=C13	UNUSED						ALL
D00636		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D00636		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	1		W1270	5931	22		49-61-11	ALL
	2	UNUSED						ALL
	3		W1270	5928	24		34-55-21	ALL
	4	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 19

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00636		P037-00/ /		RELAY SOCKET (PLATE 'A') (continued)				001-099
D00636		P37/ /		RELAY SOCKET (PLATE 'A') (continued)				115-199
	5		W1270	5927	24		34-55-21	ALL
	6		W1270	5857	22		32-09-12	ALL
	7		W1270	5961	22		49-61-11	001-099
	7		W1270	5962	22		49-61-11	115-199
	8		W1270	5962	22		49-61-11	001-099
	8		W1270	5961	22		49-61-11	115-199
	9		W1270	2009B	24		21-51-22	ALL
	10	UNUSED						ALL
	11		W1270	2009R	24		21-51-22	ALL
	12		W1270	5856	22		32-09-12	ALL
	13		W1270	5932	22		49-61-11	ALL
	14	UNUSED						ALL
D00637A		E003-01/ /		PLUG-				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04		W1265	0515	22		27-61-17	ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07		W1265	0524	22		27-61-17	ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12		W1265	0230	22		27-09-13	ALL
	A13		W1265	0231	22		27-09-13	ALL
	A14	UNUSED						ALL
	A15		W1265	0207	22		27-61-17	ALL
	B01	UNUSED						ALL
	B02		W1265	0562	22		27-61-17	ALL
	B03		W1265	0562	22		27-61-17	ALL
	B04	UNUSED						ALL
	B05		W1265	0515	22		27-61-17	ALL
	B06	UNUSED						ALL
	B07		W1265	0523	22		27-61-17	ALL
	B08		W1265	0522	22		27-61-17	ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 20

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00637A		E003-01/ /		PLUG- (continued)				ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13		W1265	0313	22		27-61-12	ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05		W1265	0560	22		27-61-17	ALL
	C06		W1265	0560	22		27-61-17	ALL
	C07	UNUSED						ALL
	C08		W1265	0522	22		27-61-17	ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13		W1265	0240	22		27-09-14	ALL
	C14		W1265	0677	22		27-61-12	ALL
	C15		W1265	0676	22		27-61-12	ALL
	D01		W1265	0418	22		27-09-12	ALL
	D02		W1265	0561	22		27-61-17	ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13		W1265	0659	22		27-61-12	ALL
	D14		W1265	0661	22		27-61-12	ALL
	D15		W1265	0654	22		27-61-12	ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03		W1265	0561	22		27-61-17	ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 21

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00637A		E003-01/ /		PLUG- (continued)				ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11		W1265	0454	22		27-61-17	ALL
	E12		W1265	0455	22		27-61-17	ALL
	E13		W1265	0646	22		27-61-12	ALL
	E14		W1265	0650	22		27-61-12	ALL
	E15		W1265	0663	22		27-61-12	ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03		W1265	0458	22		27-61-17	ALL
	F04	UNUSED						ALL
	F05		W1265	0457	22		27-61-17	ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13		W1265	0660	22		27-61-12	ALL
	F14		W1265	0662	22		27-61-12	ALL
	F15		W1265	0664	22		27-61-12	ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03		W1265	0451	22		27-61-17	ALL
	G04	UNUSED						ALL
	G05		W1265	0452	22		27-61-17	ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08		W1265	2204B	22		27-61-17	ALL
	G09		W1265	2204R	22		27-61-17	ALL
	G10		W1265	2210R	22		27-61-17	ALL
	G11		W1265	2210B	22		27-61-17	ALL
	G12	UNUSED						ALL
	G13		W1265	0647	22		27-61-12	ALL
	G14		W1265	0651	22		27-61-12	ALL
	G15		W1265	0655	22		27-61-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 22

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00637A		E003-01/ /		PLUG- (continued)				ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13		W1265	0182	24		31-31-62	001-099
	H13		W1265	0182	24		31-31-32	115-199
	H14		W1265	0624	22		27-09-14	ALL
	H15		W1265	0680	22		27-61-12	ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03		W1265	2211R	22		27-61-17	ALL
	J04		W1265	2211B	22		27-61-17	ALL
	J05	UNUSED						ALL
	J06		W1265	2213B	22		27-61-17	ALL
	J07	UNUSED						ALL
	J08		W1265	2209R	22		27-61-17	ALL
	J09		W1265	2209B	22		27-61-17	ALL
	J10	UNUSED						ALL
	J11		W1265	2206B	22		27-61-17	ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03		W1265	2212R	22		27-61-17	ALL
	K04		W1265	2212B	22		27-61-17	ALL
	K05	UNUSED						ALL
	K06		W1265	2213R	22		27-61-17	ALL
	K07	UNUSED						ALL
	K08		W1265	2205R	22		27-61-17	ALL
	K09		W1265	2205B	22		27-61-17	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 23

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00637A		E003-01/ /		PLUG- (continued)				ALL
	K10	UNUSED						ALL
	K11		W1265	2206R	22		27-61-17	ALL
	K12	UNUSED						ALL
	K13		W1265	0104	22		27-09-13	ALL
	K14	UNUSED						ALL
	K15		W1265	0675	22		27-61-17	ALL
D00637B		E003-01/ /		PLUG-				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05		W1265	0142	22		27-61-17	ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13		W1265	0350	22		27-61-17	ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03		W1265	0145	22		27-61-17	ALL
	B04		W1265	0145	22		27-61-17	ALL
	B05	UNUSED						ALL
	B06		W1265	0142	22		27-61-17	ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11		W1265	0357	22		27-61-17	ALL
	B12		W1265	0357	22		27-61-17	ALL
	B13	UNUSED						ALL
	B14		W1265	0350	22		27-61-17	ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 24

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00637B		E003-01/ /		PLUG- (continued)				ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06		W1265	0141	22		27-61-17	ALL
	C07		W1265	0141	22		27-61-17	ALL
	C08	UNUSED						001-002, 115-199
	C08		W1265	0084	22		27-61-12	003-099
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14		W1265	0355	22		27-61-17	ALL
	C15		W1265	0355	22		27-61-17	ALL
	D01	UNUSED						ALL
	D02		W1265	0590	22		27-09-12	ALL
	D03		W1265	0144	22		27-61-17	ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10		W1265	0223	22		27-09-12	ALL
	D11		W1265	0356	22		27-61-17	ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04		W1265	0144	22		27-61-17	ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 25

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00637B		E003-01/ /		PLUG- (continued)				ALL
	E12		W1265	0356	22		27-61-17	ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04		W1265	0047	22		27-61-17	ALL
	F05	UNUSED						ALL
	F06		W1265	0048	22		27-61-17	ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12		W1265	0205	22		27-61-17	ALL
	F13	UNUSED						ALL
	F14		W1265	0204	22		27-61-17	ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04		W1265	0044	22		27-61-17	ALL
	G05	UNUSED						ALL
	G06		W1265	0045	22		27-61-17	ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12		W1265	0202	22		27-61-17	ALL
	G13	UNUSED						ALL
	G14		W1265	0201	22		27-61-17	ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 26

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00637B		E003-01/ /		PLUG- (continued)				ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12		W1265	0900	22		31-51-43	ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04		W1265	2014R	22		27-61-17	ALL
	J05		W1265	2014B	22		27-61-17	ALL
	J06	UNUSED						ALL
	J07		W1265	2020B	22		27-61-17	ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12		W1265	2101R	22		27-61-17	ALL
	J13		W1265	2101B	22		27-61-17	ALL
	J14	UNUSED						ALL
	J15		W1265	2103B	22		27-61-17	ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04		W1265	2018R	22		27-61-17	ALL
	K05		W1265	2018B	22		27-61-17	ALL
	K06	UNUSED						ALL
	K07		W1265	2020R	22		27-61-17	ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12		W1265	2102R	22		27-61-17	ALL
	K13		W1265	2102B	22		27-61-17	ALL
	K14	UNUSED						ALL
	K15		W1265	2103R	22		27-61-17	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 27

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00637C		E003-01/ /		PLUG-				ALL
	1	UNUSED						ALL
	2		W1265	0461	16		27-61-17	ALL
	3		W1265	0460	16		27-61-17	ALL
	4		W1265	0669	22		27-61-12	ALL
	5		W1265	0566	20		27-61-17	ALL
	6		W1265	0565	20		27-61-17	ALL
	7		W1265	0462	16		27-61-17	ALL
	8		W1265	0459	16		27-61-17	ALL
	9		W1265	0564	16		27-61-17	ALL
	10		W1265	0563	16		27-61-17	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	=C12	UNUSED						ALL
	=C13	UNUSED						ALL
D00639A		E003-01/ /		PLUG-				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04		W1265	0358	22		27-61-18	ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12		W1265	0235	22		27-09-13	ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15		W1265	0316	22		27-61-18	ALL
	B01	UNUSED						ALL
	B02		W1265	0365	22		27-61-18	ALL
	B03		W1265	0365	22		27-61-18	ALL
	B04	UNUSED						ALL
	B05		W1265	0358	22		27-61-18	ALL
	B06	UNUSED						ALL
	B07		W1265	0668	22		27-61-12	ALL
	B08		W1265	0371	22		27-61-18	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 28

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00639A		E003-01/ /		PLUG- (continued)				ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13		W1265	0312	22		27-61-12	ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04		W1265	0363	22		27-61-18	ALL
	C05	UNUSED						ALL
	C06		W1265	0363	22		27-61-18	ALL
	C07	UNUSED						ALL
	C08		W1265	0371	22		27-61-18	ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13		W1265	0239	22		27-09-14	ALL
	C14		W1265	0678	22		27-61-12	ALL
	C15		W1265	0677	22		27-61-12	ALL
	D01		W1265	0588	22		27-09-12	ALL
	D02		W1265	0364	22		27-61-18	ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05		W1265	0359	22		27-61-18	ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13		W1265	0649	22		27-61-12	ALL
	D14		W1265	0653	22		27-61-12	ALL
	D15		W1265	0664	22		27-61-12	ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03		W1265	0364	22		27-61-18	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 29

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00639A		E003-01/ /		PLUG- (continued)				ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06		W1265	0359	22		27-61-18	ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11		W1265	0208	22		27-61-18	ALL
	E12		W1265	0215	22		27-61-18	ALL
	E13		W1265	0660	22		27-61-12	ALL
	E14		W1265	0662	22		27-61-12	ALL
	E15		W1265	0658	22		27-61-12	ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03		W1265	0214	22		27-61-18	ALL
	F04	UNUSED						ALL
	F05		W1265	0213	22		27-61-18	ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13		W1265	0648	22		27-61-12	ALL
	F14		W1265	0652	22		27-61-12	ALL
	F15		W1265	0657	22		27-61-12	ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03		W1265	0209	22		27-61-18	ALL
	G04	UNUSED						ALL
	G05		W1265	0210	22		27-61-18	ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08		W1265	2104B	22		27-61-18	ALL
	G09		W1265	2104R	22		27-61-18	ALL
	G10		W1265	2110R	22		27-61-18	ALL
	G11		W1265	2110B	22		27-61-18	ALL
	G12	UNUSED						ALL
	G13		W1265	0659	22		27-61-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 30

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00639A		E003-01/ /		PLUG- (continued)				ALL
	G14		W1265	0661	22		27-61-12	ALL
	G15		W1265	0663	22		27-61-12	ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13		W1265	0183	24		31-31-62	001-099
	H13		W1265	0183	24		31-31-32	115-199
	H14		W1265	0623	22		27-09-14	ALL
	H15		W1265	0679	22		27-61-12	ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03		W1265	2111R	22		27-61-18	ALL
	J04		W1265	2111B	22		27-61-18	ALL
	J05	UNUSED						ALL
	J06		W1265	2113B	22		27-61-18	ALL
	J07	UNUSED						ALL
	J08		W1265	2109R	22		27-61-18	ALL
	J09		W1265	2109B	22		27-61-18	ALL
	J10	UNUSED						ALL
	J11		W1265	2106B	22		27-61-18	ALL
	J12	UNUSED						ALL
	J13		W1265	0016	22		27-09-13	ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03		W1265	2112R	22		27-61-18	ALL
	K04		W1265	2112B	22		27-61-18	ALL
	K05	UNUSED						ALL
	K06		W1265	2113R	22		27-61-18	ALL
	K07	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 31

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00639A		E003-01/ /		PLUG- (continued)				ALL
	K08		W1265	2105R	22		27-61-18	ALL
	K09		W1265	2105B	22		27-61-18	ALL
	K10	UNUSED						ALL
	K11		W1265	2106R	22		27-61-18	ALL
	K12	UNUSED						ALL
	K13		W1265	0015	22		27-09-13	ALL
	K14	UNUSED						ALL
	K15		W1265	0674	22		27-61-18	ALL
D00639B		E003-01/ /		PLUG-				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05		W1265	0571	22		27-61-18	ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13		W1265	0146	22		27-61-18	ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03		W1265	0574	22		27-61-18	ALL
	B04		W1265	0574	22		27-61-18	ALL
	B05	UNUSED						ALL
	B06		W1265	0571	22		27-61-18	ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11		W1265	0153	22		27-61-18	ALL
	B12		W1265	0153	22		27-61-18	ALL
	B13	UNUSED						ALL
	B14		W1265	0146	22		27-61-18	ALL
	B15	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 32

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00639B		E003-01/ /		PLUG- (continued)				ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05		W1265	0570	22		27-61-18	ALL
	C06	UNUSED						ALL
	C07		W1265	0570	22		27-61-18	ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13		W1265	0151	22		27-61-18	ALL
	C14	UNUSED						ALL
	C15		W1265	0151	22		27-61-18	ALL
	D01	UNUSED						ALL
	D02		W1265	0417	22		27-09-12	ALL
	D03		W1265	0573	22		27-61-18	ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06		W1265	0572	22		27-61-18	ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10		W1265	0006	22		27-09-12	ALL
	D11		W1265	0152	22		27-61-18	ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14		W1265	0147	22		27-61-18	ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04		W1265	0573	22		27-61-18	ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07		W1265	0572	22		27-61-18	ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 33

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00639B		E003-01/ /		PLUG- (continued)				ALL
	E11	UNUSED						ALL
	E12		W1265	0152	22		27-61-18	ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15		W1265	0147	22		27-61-18	ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04		W1265	0469	22		27-61-18	ALL
	F05	UNUSED						ALL
	F06		W1265	0470	22		27-61-18	ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12		W1265	0057	22		27-61-18	ALL
	F13	UNUSED						ALL
	F14		W1265	0056	22		27-61-18	ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04		W1265	0468	22		27-61-18	ALL
	G05	UNUSED						ALL
	G06		W1265	0467	22		27-61-18	ALL
	G07	UNUSED						ALL
	G08	UNUSED						001-002, 115-199
	G08		W1265	0083	22		27-61-12	003-099
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12		W1265	0054	22		27-61-18	ALL
	G13	UNUSED						ALL
	G14		W1265	0053	22		27-61-18	ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 34

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00639B		E003-01/ /		PLUG- (continued)				ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12		W1265	0055	22		27-61-18	ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04		W1265	2215R	22		27-61-18	ALL
	J05		W1265	2215B	22		27-61-18	ALL
	J06	UNUSED						ALL
	J07		W1265	2220B	22		27-61-18	ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12		W1265	2022R	22		27-61-18	ALL
	J13		W1265	2022B	22		27-61-18	ALL
	J14	UNUSED						ALL
	J15		W1265	2024B	22		27-61-18	ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04		W1265	2221R	22		27-61-18	ALL
	K05		W1265	2221B	22		27-61-18	ALL
	K06	UNUSED						ALL
	K07		W1265	2220R	22		27-61-18	ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12		W1265	2023R	22		27-61-18	ALL
	K13		W1265	2023B	22		27-61-18	ALL
	K14	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 35

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00639B		E003-01/ /		PLUG- (continued)				ALL
	K15		W1265	2024R	22		27-61-18	ALL
D00639C		E003-01/ /		PLUG-				ALL
	1	UNUSED						ALL
	2		W1265	0474	16		27-61-18	ALL
	3		W1265	0473	16		27-61-18	ALL
	4		W1265	0668	22		27-61-12	ALL
	5		W1265	0578	20		27-61-18	ALL
	6		W1265	0577	20		27-61-18	ALL
	7		W1265	0475	16		27-61-18	ALL
	8		W1265	0472	16		27-61-18	ALL
	9		W1265	0576	16		27-61-18	ALL
	10		W1265	0575	16		27-61-18	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	=C12	UNUSED						ALL
	=C13	UNUSED						ALL
D00640		409/288/R38		PLUG-				115-199
	1		W3614	0051	20		33-21-21	115-199
	2		W3614	0052	20		33-21-21	115-199
	3		W3614	0053	24		33-21-21	115-199
	4		W3614	0054	20		33-21-21	115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
D00641		WS617/ /		PLUG-				ALL
	1		W3301	4501WB	20		27-61-13	ALL
	2	UNUSED						ALL
	3		W3301	4501WR	20		27-61-13	ALL
	4	UNUSED						ALL
	5		W3301	4501WO	20		27-61-13	ALL
	6		W3301	4501WN	20		27-61-13	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 36

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00641		WS617/ /		PLUG- (continued)				ALL
	7		W3301	4501RB	20		27-61-13	ALL
	8		W3301	4501WK	20		27-61-13	ALL
	9		W3301	4501WV	20		27-61-13	ALL
	10		W3301	0001	20		27-61-13	ALL
D00642		475/288/R38		PLUG-				ALL
	1		W3614	0011	20		33-21-21	ALL
	2		W3614	0012	20		33-21-21	ALL
	3		W3614	0013	24		33-21-21	ALL
	4		W3614	0014	20		33-21-21	ALL
	5		W3614	0015	22		33-21-21	ALL
	6		W3614	0016	22		33-21-21	ALL
	7		W3614	0017	22		33-21-21	ALL
	8		W3614	0018	22		33-21-21	ALL
	9		W3614	0019	22		33-21-21	ALL
	10		W3614	0010	20		33-21-51	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00643		WS553/ /		PLUG				ALL
	1		W3311	4501WB	20		27-61-14	ALL
	2	UNUSED						ALL
	3		W3311	4501WR	20		27-61-14	ALL
	4	UNUSED						ALL
	5		W3311	4501WO	20		27-61-14	ALL
	6		W3311	4501WN	20		27-61-14	ALL
	7		W3311	4501RB	20		27-61-14	ALL
	8		W3311	4501WK	20		27-61-14	ALL
	9		W3311	4501WV	20		27-61-14	ALL
	10		W3311	0001	20		27-61-14	ALL
D00644		536/288/R38		PLUG-				001-099
D00644		535/288/R38		PLUG-				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W3614	0015	22		33-21-21	ALL
	6		W3614	0016	22		33-21-21	ALL
	7		W3614	0017	22		33-21-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 37

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00644		536/288/R38		PLUG- (continued)				001-099
D00644		535/288/R38		PLUG- (continued)				115-199
	8		W3614	0018	22		33-21-21	ALL
	9		W3614	0019	22		33-21-21	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00645		WS489/ /		PLUG				ALL
	1		W3315	4501WB	20		27-61-15	ALL
	2	UNUSED						ALL
	3		W3315	4501WR	20		27-61-15	ALL
	4	UNUSED						ALL
	5		W3315	4501WO	20		27-61-15	ALL
	6		W3315	4501WN	20		27-61-15	ALL
	7		W3315	4501RB	20		27-61-15	ALL
	8		W3315	4501WK	20		27-61-15	ALL
	9		W3315	4501WV	20		27-61-15	ALL
	10		W3315	0001	20		27-61-15	ALL
D00646		596/288/R38		PLUG-				001-099
D00646		595/288/R38		PLUG-				115-199
	1		W3614	0021	20		33-21-21	001-099
	1		W3614	0121	20		33-21-21	115-199
	2		W3614	0022	20		33-21-21	001-099
	2		W3614	0122	20		33-21-21	115-199
	3		W3614	0023	24		33-21-21	001-099
	3		W3614	0123	24		33-21-21	115-199
	4		W3614	0024	20		33-21-21	001-099
	4		W3614	0124	20		33-21-21	115-199
	5		W3614	0025	22		33-21-21	001-099
	5		W3614	0125	22		33-21-21	115-199
	6		W3614	0026	22		33-21-21	001-099
	6		W3614	0126	22		33-21-21	115-199
	7		W3614	0027	22		33-21-21	001-099
	7		W3614	0127	22		33-21-21	115-199
	8		W3614	0028	22		33-21-21	001-099
	8		W3614	0128	22		33-21-21	115-199
	9		W3614	0029	22		33-21-21	001-099
	9		W3614	0129	22		33-21-21	115-199
	10	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 38

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00646		596/288/R38		PLUG- (continued)				001-099
D00646		595/288/R38		PLUG- (continued)				115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
D00647		WS425/ /		PLUG				ALL
	1		W3319	4501WB	20		27-61-16	ALL
	2	UNUSED						ALL
	3		W3319	4501WR	20		27-61-16	ALL
	4	UNUSED						ALL
	5		W3319	4501WO	20		27-61-16	ALL
	6		W3319	4501WN	20		27-61-16	ALL
	7		W3319	4501RB	20		27-61-16	ALL
	8		W3319	4501WK	20		27-61-16	ALL
	9		W3319	4501WV	20		27-61-16	ALL
	10		W3319	0001	20		27-61-16	ALL
D00648		636/288/R38		PLUG-				115-199
	1		W3614	0031	20		33-21-21	115-199
	2		W3614	0032	20		33-21-21	115-199
	3		W3614	0033	24		33-21-21	115-199
	4		W3614	0034	20		33-21-21	115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
D00649		IRSS358/ /		PLUG				ALL
	1		W3305	4501WB	20		27-61-17	ALL
	2	UNUSED						ALL
	3		W3305	4501WR	20		27-61-17	ALL
	4	UNUSED						ALL
	5		W3305	4501WO	20		27-61-17	ALL
	6		W3305	4501WN	20		27-61-17	ALL
	7		W3305	4501RB	20		27-61-17	ALL
	8		W3305	4501WK	20		27-61-17	ALL
	9		W3305	4501WV	20		27-61-17	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 39

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00649		IRSS358/ /		PLUG (continued)				ALL
	10		W3305	0001	20		27-61-17	ALL
D00650		716/ /		PLUG-				001-099
D00650		715/288/R38		PLUG-				115-199
	1		W3614	0041	20		33-21-21	001-099
	1		W3614	0021	20		33-21-21	115-199
	2		W3614	0042	20		33-21-21	001-099
	2		W3614	0022	20		33-21-21	115-199
	3		W3614	0043	24		33-21-21	001-099
	3		W3614	0023	24		33-21-21	115-199
	4		W3614	0044	20		33-21-21	001-099
	4		W3614	0024	20		33-21-21	115-199
	5		W3614	0045	22		33-21-21	001-099
	5		W3614	0025	22		33-21-21	115-199
	6		W3614	0046	22		33-21-21	001-099
	6		W3614	0026	22		33-21-21	115-199
	7		W3614	0047	22		33-21-21	001-099
	7		W3614	0027	22		33-21-21	115-199
	8		W3614	0048	22		33-21-21	001-099
	8		W3614	0028	22		33-21-21	115-199
	9		W3614	0049	22		33-21-21	001-099
	9		W3614	0029	22		33-21-21	115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00651		IRSS290/ /		PLUG				ALL
	1		W3309	4501WB	20		27-61-18	ALL
	2	UNUSED						ALL
	3		W3309	4501WR	20		27-61-18	ALL
	4	UNUSED						ALL
	5		W3309	4501WO	20		27-61-18	ALL
	6		W3309	4501WN	20		27-61-18	ALL
	7		W3309	4501RB	20		27-61-18	ALL
	8		W3309	4501WK	20		27-61-18	ALL
	9		W3309	4501WV	20		27-61-18	ALL
	10		W3309	0001	20		27-61-18	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 40

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00652		776/ /		PLUG-				001-099
D00652		775/288/R38		PLUG-				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W3614	0045	22		33-21-21	001-099
	5		W3614	0025	22		33-21-21	115-199
	6		W3614	0046	22		33-21-21	001-099
	6		W3614	0026	22		33-21-21	115-199
	7		W3614	0047	22		33-21-21	001-099
	7		W3614	0027	22		33-21-21	115-199
	8		W3614	0048	22		33-21-21	001-099
	8		W3614	0028	22		33-21-21	115-199
	9		W3614	0049	22		33-21-21	001-099
	9		W3614	0029	22		33-21-21	115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00653		IRSS290/ /		PLUG				001-004, 115-199
D00653		IRSS275/ /		PLUG				005-099
	1		W3409	4501WB	20		27-61-18	ALL
	2	UNUSED						ALL
	3		W3409	4501WR	20		27-61-18	ALL
	4	UNUSED						ALL
	5		W3409	4501WO	20		27-61-18	ALL
	6		W3409	4501WN	20		27-61-18	ALL
	7		W3409	4501RB	20		27-61-18	ALL
	8		W3409	4501WK	20		27-61-18	ALL
	9		W3409	4501WV	20		27-61-18	ALL
	10		W3409	0001	20		27-61-18	ALL
D00655		IRSS347/ /		PLUG				ALL
	1		W3405	4501WB	20		27-61-17	ALL
	2	UNUSED						ALL
	3		W3405	4501WR	20		27-61-17	ALL
	4	UNUSED						ALL
	5		W3405	4501WO	20		27-61-17	ALL
	6		W3405	4501WN	20		27-61-17	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 41

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00655		IRSS347/ /		PLUG (continued)				ALL
	7		W3405	4501RB	20		27-61-17	ALL
	8		W3405	4501WK	20		27-61-17	ALL
	9		W3405	4501WV	20		27-61-17	ALL
	10		W3405	0001	20		27-61-17	ALL
D00656		836/288/R38		PLUG-				001-099
D00656		835/288/R38		PLUG-				115-199
	1		W3614	0051	20		33-21-21	001-099
	1		W3614	0071	20		33-21-22	115-199
	2		W3614	0052	20		33-21-21	001-099
	2		W3614	0072	20		33-21-22	115-199
	3		W3614	0053	24		33-21-21	001-099
	3		W3614	0073	24		33-21-22	115-199
	4		W3614	0054	20		33-21-21	001-099
	4		W3614	0074	20		33-21-22	115-199
	5		W3614	0055	22		33-21-21	001-099
	5		W3614	0075	22		33-21-22	115-199
	6		W3614	0056	22		33-21-21	001-099
	6		W3614	0076	22		33-21-22	115-199
	7		W3614	0057	22		33-21-21	001-099
	7		W3614	0077	22		33-21-22	115-199
	8		W3614	0058	22		33-21-21	001-099
	8		W3614	0078	22		33-21-22	115-199
	9		W3614	0059	22		33-21-21	001-099
	9		W3614	0079	22		33-21-22	115-199
	10		W3614	0040	20		33-21-51	001-099
	10		W3614	0070	20		33-21-51	115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
D00657		WS413/ /		PLUG				ALL
	1		W3419	4501WB	20		27-61-16	ALL
	2	UNUSED						ALL
	3		W3419	4501WR	20		27-61-16	ALL
	4	UNUSED						ALL
	5		W3419	4501WO	20		27-61-16	ALL
	6		W3419	4501WN	20		27-61-16	ALL
	7		W3419	4501RB	20		27-61-16	ALL
	8		W3419	4501WK	20		27-61-16	ALL
	9		W3419	4501WV	20		27-61-16	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 42

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00657		WS413/ /		PLUG (continued)				ALL
	10		W3419	0001	20		27-61-16	ALL
D00658		896/288/R38		PLUG-				001-099
D00658		895/288/R38		PLUG-				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W3614	0055	22		33-21-21	001-099
	5		W3614	0075	22		33-21-22	115-199
	6		W3614	0056	22		33-21-21	001-099
	6		W3614	0076	22		33-21-22	115-199
	7		W3614	0057	22		33-21-21	001-099
	7		W3614	0077	22		33-21-22	115-199
	8		W3614	0058	22		33-21-21	001-099
	8		W3614	0078	22		33-21-22	115-199
	9		W3614	0059	22		33-21-21	001-099
	9		W3614	0079	22		33-21-22	115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00659		WS477/ /		PLUG				ALL
	1		W3415	4501WB	20		27-61-15	ALL
	2	UNUSED						ALL
	3		W3415	4501WR	20		27-61-15	ALL
	4	UNUSED						ALL
	5		W3415	4501WO	20		27-61-15	ALL
	6		W3415	4501WN	20		27-61-15	ALL
	7		W3415	4501RB	20		27-61-15	ALL
	8		W3415	4501WK	20		27-61-15	ALL
	9		W3415	4501WV	20		27-61-15	ALL
	10		W3415	0001	20		27-61-15	ALL
D00660		956/288/R38		PLUG-				001-099
D00660		955/288/R38		PLUG-				115-199
	1		W3616	0001	20		33-21-22	001-099
	1		W3616	0081	20		33-21-22	115-199
	2		W3616	0002	20		33-21-22	001-099
	2		W3616	0082	20		33-21-22	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 43

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00660		956/288/R38		PLUG- (continued)				001-099
D00660		955/288/R38		PLUG- (continued)				115-199
	3		W3616	0003	24		33-21-22	001-099
	3		W3616	0083	24		33-21-22	115-199
	4		W3616	0004	20		33-21-22	001-099
	4		W3616	0084	20		33-21-22	115-199
	5		W3616	0005	22		33-21-22	001-099
	5		W3616	0085	22		33-21-22	115-199
	6		W3616	0006	22		33-21-22	001-099
	6		W3616	0086	22		33-21-22	115-199
	7		W3616	0007	22		33-21-22	001-099
	7		W3616	0087	22		33-21-22	115-199
	8		W3616	0008	22		33-21-22	001-099
	8		W3616	0088	22		33-21-22	115-199
	9		W3616	0009	22		33-21-22	001-099
	9		W3616	0089	22		33-21-22	115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00661		WS545/ /		PLUG				ALL
	1		W3411	4501WB	20		27-61-14	ALL
	2	UNUSED						ALL
	3		W3411	4501WR	20		27-61-14	ALL
	4	UNUSED						ALL
	5		W3411	4501WO	20		27-61-14	ALL
	6		W3411	4501WN	20		27-61-14	ALL
	7		W3411	4501RB	20		27-61-14	ALL
	8		W3411	4501WK	20		27-61-14	ALL
	9		W3411	4501WV	20		27-61-14	ALL
	10		W3411	0001	20		27-61-14	ALL
D00662		1016/288/R38		PLUG-				001-099
D00662		1015/288/R38		PLUG-				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W3616	0005	22		33-21-22	001-099
	5		W3616	0085	22		33-21-22	115-199
	6		W3616	0006	22		33-21-22	001-099

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 44

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00662		1016/288/R38		PLUG- (continued)				001-099
D00662		1015/288/R38		PLUG- (continued)				115-199
	6		W3616	0086	22		33-21-22	115-199
	7		W3616	0007	22		33-21-22	001-099
	7		W3616	0087	22		33-21-22	115-199
	8		W3616	0008	22		33-21-22	001-099
	8		W3616	0088	22		33-21-22	115-199
	9		W3616	0009	22		33-21-22	001-099
	9		W3616	0089	22		33-21-22	115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00663		WS605/ /		PLUG				ALL
	1		W3401	4501WB	20		27-61-13	ALL
	2	UNUSED						ALL
	3		W3401	4501WR	20		27-61-13	ALL
	4	UNUSED						ALL
	5		W3401	4501WO	20		27-61-13	ALL
	6		W3401	4501WN	20		27-61-13	ALL
	7		W3401	4501RB	20		27-61-13	ALL
	8		W3401	4501WK	20		27-61-13	ALL
	9		W3401	4501WV	20		27-61-13	ALL
	10		W3401	0001	20		27-61-13	ALL
D00664		1076/288/R38		PLUG-				001-099
D00664		1075/288/R38		PLUG-				115-199
	1		W3616	0011	20		33-21-22	001-099
	1		W3616	0091	20		33-21-22	115-199
	2		W3616	0012	20		33-21-22	001-099
	2		W3616	0092	20		33-21-22	115-199
	3		W3616	0013	24		33-21-22	001-099
	3		W3616	0093	24		33-21-22	115-199
	4		W3616	0014	20		33-21-22	001-099
	4		W3616	0094	20		33-21-22	115-199
	5		W3616	0015	22		33-21-22	001-099
	5		W3616	0095	22		33-21-22	115-199
	6		W3616	0016	22		33-21-22	001-099
	6		W3616	0096	22		33-21-22	115-199
	7		W3616	0017	22		33-21-22	001-099
	7		W3616	0097	22		33-21-22	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 45

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00664		1076/288/R38		PLUG- (continued)				001-099
D00664		1075/288/R38		PLUG- (continued)				115-199
	8		W3616	0018	22		33-21-22	001-099
	8		W3616	0098	22		33-21-22	115-199
	9		W3616	0019	22		33-21-22	001-099
	9		W3616	0099	22		33-21-22	115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00665A		E004-01/ /		PLUG-				001-099
D00665A		E4-1/ /		PLUG-				115-199
	A01	UNUSED						ALL
	A02		W1165	0123	22		27-61-14	ALL
	A03		W1165	0123	22		27-61-14	ALL
	A04		W1165	0119	22		27-61-14	ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08		W1165	0127	22		27-61-14	ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12		W1165	0255	22		27-09-13	ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15		W1165	0215	22		27-61-14	ALL
	B01	UNUSED						ALL
	B02		W1165	0126	22		27-61-14	ALL
	B03		W1165	0126	22		27-61-14	ALL
	B04	UNUSED						ALL
	B05		W1165	0119	22		27-61-14	ALL
	B06	UNUSED						ALL
	B07		W1165	0642	22		27-61-12	ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13		W1165	0254	22		27-61-12	ALL
	B14	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 46

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00665A		E004-01/ /		PLUG- (continued)				001-099
D00665A		E4-1/ /		PLUG- (continued)				115-199
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03		W1165	0120	22		27-61-14	ALL
	C04	UNUSED						ALL
	C05		W1165	0124	22		27-61-14	ALL
	C06		W1165	0124	22		27-61-14	ALL
	C07	UNUSED						ALL
	C08		W1165	0127	22		27-61-14	ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13		W1165	0247	22		27-09-14	ALL
	C14		W1165	0645	22		27-61-12	ALL
	C15		W1165	0634	22		27-61-12	ALL
	D01		W1165	0037	22		27-09-12	ALL
	D02		W1165	0120	22		27-61-14	ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13		W1165	0616	22		27-61-12	ALL
	D14		W1165	0618	22		27-61-12	ALL
	D15		W1165	0605	22		27-61-12	ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 47

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00665A		E004-01/ /		PLUG- (continued)				001-099
D00665A		E4-1/ /		PLUG- (continued)				115-199
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11		W1165	0001	22		27-61-14	ALL
	E12		W1165	0008	22		27-61-14	ALL
	E13		W1165	0613	22		27-61-12	ALL
	E14		W1165	0609	22		27-61-12	ALL
	E15		W1165	0620	22		27-61-12	ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03		W1165	0007	22		27-61-14	ALL
	F04	UNUSED						ALL
	F05		W1165	0006	22		27-61-14	ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13		W1165	0617	22		27-61-12	ALL
	F14		W1165	0619	22		27-61-12	ALL
	F15		W1165	0621	22		27-61-12	ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03		W1165	0002	22		27-61-14	ALL
	G04	UNUSED						ALL
	G05		W1165	0003	22		27-61-14	ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08		W1165	2004B	22		27-61-14	ALL
	G09		W1165	2004R	22		27-61-14	ALL
	G10		W1165	2010R	22		27-61-14	ALL
	G11		W1165	2010B	22		27-61-14	ALL
	G12	UNUSED						ALL
	G13		W1165	0612	22		27-61-12	ALL
	G14		W1165	0608	22		27-61-12	ALL
	G15		W1165	0604	22		27-61-12	ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 48

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00665A		E004-01/ /		PLUG- (continued)				001-099
D00665A		E4-1/ /		PLUG- (continued)				115-199
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13		W1165	0376	24		31-31-62	001-099
	H13		W1165	0376	24		31-31-32	115-199
	H14		W1165	0629	22		27-09-14	ALL
	H15		W1165	0643	22		27-61-12	ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03		W1165	2011R	22		27-61-14	ALL
	J04		W1165	2011B	22		27-61-14	ALL
	J05	UNUSED						ALL
	J06		W1165	2013B	22		27-61-14	ALL
	J07	UNUSED						ALL
	J08		W1165	2009R	22		27-61-14	ALL
	J09		W1165	2009B	22		27-61-14	ALL
	J10	UNUSED						ALL
	J11		W1165	2006B	22		27-61-14	ALL
	J12	UNUSED						ALL
	J13		W1165	0040	22		27-09-13	ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03		W1165	2012R	22		27-61-14	ALL
	K04		W1165	2012B	22		27-61-14	ALL
	K05	UNUSED						ALL
	K06		W1165	2013R	22		27-61-14	ALL
	K07	UNUSED						ALL
	K08		W1165	2005R	22		27-61-14	ALL
	K09		W1165	2005B	22		27-61-14	ALL
	K10	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 49

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00665A		E004-01/ /		PLUG- (continued)				001-099
D00665A		E4-1/ /		PLUG- (continued)				115-199
	K11		W1165	2006R	22		27-61-14	ALL
	K12	UNUSED						ALL
	K13		W1165	0039	22		27-09-13	ALL
	K14	UNUSED						ALL
	K15		W1165	0009	22		27-61-14	ALL
D00665B		E004-01/ /		PLUG-				001-099
D00665B		E4-1/ /		PLUG-				115-199
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03		W1165	0328	22		27-61-14	ALL
	A04		W1165	0328	22		27-61-14	ALL
	A05		W1165	0330	22		27-61-14	ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						001-002, 115-199
	A09		W1165	0163	22		27-61-12	003-099
	A10	UNUSED						ALL
	A11		W1165	0478	22		27-61-14	ALL
	A12		W1165	0478	22		27-61-14	ALL
	A13		W1165	0474	22		27-61-14	ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03		W1165	0333	22		27-61-14	ALL
	B04		W1165	0333	22		27-61-14	ALL
	B05	UNUSED						ALL
	B06		W1165	0330	22		27-61-14	ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11		W1165	0481	22		27-61-14	ALL
	B12		W1165	0481	22		27-61-14	ALL
	B13	UNUSED						ALL
	B14		W1165	0474	22		27-61-14	ALL
	B15	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 50

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00665B		E004-01/ /		PLUG- (continued)				001-099
D00665B		E4-1/ /		PLUG- (continued)				115-199
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04		W1165	0331	22		27-61-14	ALL
	C05	UNUSED						ALL
	C06		W1165	0329	22		27-61-14	ALL
	C07		W1165	0329	22		27-61-14	ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12		W1165	0475	22		27-61-14	ALL
	C13	UNUSED						ALL
	C14		W1165	0479	22		27-61-14	ALL
	C15		W1165	0479	22		27-61-14	ALL
	D01	UNUSED						ALL
	D02		W1165	0239	22		27-09-12	ALL
	D03		W1165	0331	22		27-61-14	ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10		W1165	0463	22		27-09-12	ALL
	D11		W1165	0475	22		27-61-14	ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 51

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00665B		E004-01/ /		PLUG- (continued)				001-099
D00665B		E4-1/ /		PLUG- (continued)				115-199
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04		W1165	0212	22		27-61-14	ALL
	F05	UNUSED						ALL
	F06		W1165	0213	22		27-61-14	ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12		W1165	0402	22		27-61-14	ALL
	F13	UNUSED						ALL
	F14		W1165	0401	22		27-61-14	ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04		W1165	0209	22		27-61-14	ALL
	G05	UNUSED						ALL
	G06		W1165	0208	22		27-61-14	ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12		W1165	0410	22		27-61-14	ALL
	G13	UNUSED						ALL
	G14		W1165	0411	22		27-61-14	ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 52

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00665B		E004-01/ /		PLUG- (continued)				001-099
D00665B		E4-1/ /		PLUG- (continued)				115-199
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04		W1165	2102R	22		27-61-14	ALL
	J05		W1165	2102B	22		27-61-14	ALL
	J06	UNUSED						ALL
	J07		W1165	2108B	22		27-61-14	ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12		W1165	2201R	22		27-61-14	ALL
	J13		W1165	2201B	22		27-61-14	ALL
	J14	UNUSED						ALL
	J15		W1165	2203B	22		27-61-14	ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04		W1165	2106R	22		27-61-14	ALL
	K05		W1165	2106B	22		27-61-14	ALL
	K06	UNUSED						ALL
	K07		W1165	2108R	22		27-61-14	ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12		W1165	2202R	22		27-61-14	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 53

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00665B		E004-01/ /		PLUG- (continued)				001-099
D00665B		E4-1/ /		PLUG- (continued)				115-199
	K13	UNUSED	W1165	2202B	22		27-61-14	ALL
	K14							ALL
	K15		W1165	2203R	22		27-61-14	ALL
D00665C		E004-01/ /		PLUG-				001-099
D00665C		E4-1/ /		PLUG-				115-199
	1	UNUSED						ALL
	2		W1165	0406	16		27-61-14	ALL
	3		W1165	0405	16		27-61-14	ALL
	4		W1165	0642	22		27-61-12	ALL
	5		W1165	0483	20		27-61-14	ALL
	6		W1165	0482	20		27-61-14	ALL
	7		W1165	0407	16		27-61-14	ALL
	8		W1165	0404	16		27-61-14	ALL
	9		W1165	0409	16		27-61-14	ALL
	10		W1165	0408	16		27-61-14	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
D00666		1136/288/R38		PLUG-				001-099
D00666		1135/288/R38		PLUG-				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W3616	0015	22		33-21-22	001-099
	5		W3616	0095	22		33-21-22	115-199
	6		W3616	0016	22		33-21-22	001-099
	6		W3616	0096	22		33-21-22	115-199
	7		W3616	0017	22		33-21-22	001-099
	7		W3616	0097	22		33-21-22	115-199
	8		W3616	0018	22		33-21-22	001-099
	8		W3616	0098	22		33-21-22	115-199
	9		W3616	0019	22		33-21-22	001-099
	9		W3616	0099	22		33-21-22	115-199
	10	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 54

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00666		1136/288/R38		PLUG- (continued)				001-099
D00666		1135/288/R38		PLUG- (continued)				115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
D00667A		E004-01/ /		PLUG-				001-099
D00667A		E4-1/ /		PLUG-				115-199
	A01	UNUSED						ALL
	A02		W1165	0054	22		27-61-15	ALL
	A03		W1165	0054	22		27-61-15	ALL
	A04		W1165	0484	22		27-61-15	ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08		W1165	0496	22		27-61-15	ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12		W1165	0263	22		27-09-13	ALL
	A13		W1165	0264	22		27-09-13	ALL
	A14	UNUSED						ALL
	A15		W1165	0222	22		27-61-15	ALL
	B01	UNUSED						ALL
	B02		W1165	0491	22		27-61-15	ALL
	B03		W1165	0491	22		27-61-15	ALL
	B04	UNUSED						ALL
	B05		W1165	0484	22		27-61-15	ALL
	B06	UNUSED						ALL
	B07		W1165	0641	22		27-61-12	ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13		W1165	0253	22		27-61-12	ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03		W1165	0490	22		27-61-15	ALL
	C04	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 55

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00667A		E004-01/ /		PLUG- (continued)				001-099
D00667A		E4-1/ /		PLUG- (continued)				115-199
	C05		W1165	0489	22		27-61-15	ALL
	C06		W1165	0489	22		27-61-15	ALL
	C07	UNUSED						ALL
	C08		W1165	0496	22		27-61-15	ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13		W1165	0246	22		27-09-14	ALL
	C14		W1165	0640	22		27-61-12	ALL
	C15		W1165	0645	22		27-61-12	ALL
	D01		W1165	0462	22		27-09-12	ALL
	D02		W1165	0490	22		27-61-15	ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13		W1165	0615	22		27-61-12	ALL
	D14		W1165	0611	22		27-61-12	ALL
	D15		W1165	0621	22		27-61-12	ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11		W1165	0416	22		27-61-15	ALL
	E12		W1165	0417	22		27-61-15	ALL
	E13		W1165	0617	22		27-61-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 56

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00667A		E004-01/ /		PLUG- (continued)				001-099
D00667A		E4-1/ /		PLUG- (continued)				115-199
	E14		W1165	0619	22		27-61-12	ALL
	E15		W1165	0607	22		27-61-12	ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03		W1165	0420	22		27-61-15	ALL
	F04	UNUSED						ALL
	F05		W1165	0419	22		27-61-15	ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13		W1165	0614	22		27-61-12	ALL
	F14		W1165	0610	22		27-61-12	ALL
	F15		W1165	0606	22		27-61-12	ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03		W1165	0413	22		27-61-15	ALL
	G04	UNUSED						ALL
	G05		W1165	0414	22		27-61-15	ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08		W1165	2204B	22		27-61-15	ALL
	G09		W1165	2204R	22		27-61-15	ALL
	G10		W1165	2208R	22		27-61-15	ALL
	G11		W1165	2208B	22		27-61-15	ALL
	G12	UNUSED						ALL
	G13		W1165	0616	22		27-61-12	ALL
	G14		W1165	0618	22		27-61-12	ALL
	G15		W1165	0620	22		27-61-12	ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 57

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00667A		E004-01/ /		PLUG- (continued)				001-099
D00667A		E4-1/ /		PLUG- (continued)				115-199
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13		W1165	0377	24		31-31-62	001-099
	H13		W1165	0377	24		31-31-32	115-199
	H14		W1165	0628	22		27-09-14	ALL
	H15		W1165	0637	22		27-61-12	ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03		W1165	2209R	22		27-61-15	ALL
	J04		W1165	2209B	22		27-61-15	ALL
	J05	UNUSED						ALL
	J06		W1165	2213B	22		27-61-15	ALL
	J07	UNUSED						ALL
	J08		W1165	2207R	22		27-61-15	ALL
	J09		W1165	2207B	22		27-61-15	ALL
	J10	UNUSED						ALL
	J11		W1165	2206B	22		27-61-15	ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03		W1165	2210R	22		27-61-15	ALL
	K04		W1165	2210B	22		27-61-15	ALL
	K05	UNUSED						ALL
	K06		W1165	2213R	22		27-61-15	ALL
	K07	UNUSED						ALL
	K08		W1165	2205R	22		27-61-15	ALL
	K09		W1165	2205B	22		27-61-15	ALL
	K10	UNUSED						ALL
	K11		W1165	2206R	22		27-61-15	ALL
	K12	UNUSED						ALL
	K13		W1165	0049	22		27-09-13	ALL
	K14	UNUSED						ALL
	K15		W1165	0018	22		27-61-15	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 58

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00667B		E004-01/ /		PLUG-				001-099
D00667B		E4-1/ /		PLUG-				115-199
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03		W1165	0055	22		27-61-15	ALL
	A04		W1165	0055	22		27-61-15	ALL
	A05		W1165	0131	22		27-61-15	ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11		W1165	0056	22		27-61-15	ALL
	A12		W1165	0056	22		27-61-15	ALL
	A13		W1165	0334	22		27-61-15	ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03		W1165	0134	22		27-61-15	ALL
	B04		W1165	0134	22		27-61-15	ALL
	B05	UNUSED						ALL
	B06		W1165	0131	22		27-61-15	ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11		W1165	0341	22		27-61-15	ALL
	B12		W1165	0341	22		27-61-15	ALL
	B13	UNUSED						ALL
	B14		W1165	0334	22		27-61-15	ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04		W1165	0133	22		27-61-15	ALL
	C05	UNUSED						ALL
	C06		W1165	0130	22		27-61-15	ALL
	C07		W1165	0130	22		27-61-15	ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 59

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00667B		E004-01/ /		PLUG- (continued)				001-099
D00667B		E4-1/ /		PLUG- (continued)				115-199
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12		W1165	0340	22		27-61-15	ALL
	C13	UNUSED						ALL
	C14		W1165	0339	22		27-61-15	ALL
	C15		W1165	0339	22		27-61-15	ALL
	D01	UNUSED						ALL
	D02		W1165	0036	22		27-09-12	ALL
	D03		W1165	0133	22		27-61-15	ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10		W1165	0238	22		27-09-12	ALL
	D11		W1165	0340	22		27-61-15	ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						001-002, 115-199
	E09		W1165	0162	22		27-61-12	003-099
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 60

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00667B		E004-01/ /		PLUG- (continued)				001-099
D00667B		E4-1/ /		PLUG- (continued)				115-199
	F03	UNUSED						ALL
	F04		W1165	0015	22		27-61-15	ALL
	F05	UNUSED						ALL
	F06		W1165	0016	22		27-61-15	ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12		W1165	0220	22		27-61-15	ALL
	F13	UNUSED						ALL
	F14		W1165	0219	22		27-61-15	ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04		W1165	0012	22		27-61-15	ALL
	G05	UNUSED						ALL
	G06		W1165	0011	22		27-61-15	ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12		W1165	0217	22		27-61-15	ALL
	G13	UNUSED						ALL
	G14		W1165	0216	22		27-61-15	ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 61

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00667B		E004-01/ /		PLUG- (continued)				001-099
D00667B		E4-1/ /		PLUG- (continued)				115-199
	H12		W1165	0226	22		27-61-15	ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04		W1165	2018R	22		27-61-15	ALL
	J05		W1165	2018B	22		27-61-15	ALL
	J06	UNUSED						ALL
	J07		W1165	2021B	22		27-61-15	ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12		W1165	2109R	22		27-61-15	ALL
	J13		W1165	2109B	22		27-61-15	ALL
	J14	UNUSED						ALL
	J15		W1165	2111B	22		27-61-15	ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04		W1165	2019R	22		27-61-15	ALL
	K05		W1165	2019B	22		27-61-15	ALL
	K06	UNUSED						ALL
	K07		W1165	2021R	22		27-61-15	ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12		W1165	2110R	22		27-61-15	ALL
	K13		W1165	2110B	22		27-61-15	ALL
	K14	UNUSED						ALL
	K15		W1165	2111R	22		27-61-15	ALL
D00667C		E004-01/ /		PLUG-				001-099
D00667C		E4-1/ /		PLUG-				115-199
	1	UNUSED						ALL
	2		W1165	0423	16		27-61-15	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 62

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00667C		E004-01/ /		PLUG- (continued)				001-099
D00667C		E4-1/ /		PLUG- (continued)				115-199
	3		W1165	0422	16		27-61-15	ALL
	4		W1165	0641	22		27-61-12	ALL
	5		W1165	0495	20		27-61-15	ALL
	6		W1165	0494	20		27-61-15	ALL
	7		W1165	0424	16		27-61-15	ALL
	8		W1165	0421	16		27-61-15	ALL
	9		W1165	0493	16		27-61-15	ALL
	10		W1165	0492	16		27-61-15	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	=C12	UNUSED						ALL
	=C13	UNUSED						ALL
D00668		1196/288/R38		PLUG-				001-099
D00668		1195/288/R38		PLUG-				115-199
	1		W3616	0021	20		33-21-22	001-099
	1		W3616	0101	20		33-21-22	115-199
	2		W3616	0022	20		33-21-22	001-099
	2		W3616	0102	20		33-21-22	115-199
	3		W3616	0023	24		33-21-22	001-099
	3		W3616	0103	24		33-21-22	115-199
	4		W3616	0024	20		33-21-22	001-099
	4		W3616	0104	20		33-21-22	115-199
	5		W3616	0025	22		33-21-22	001-099
	5		W3616	0105	22		33-21-22	115-199
	6		W3616	0026	22		33-21-22	001-099
	6		W3616	0106	22		33-21-22	115-199
	7		W3616	0027	22		33-21-22	001-099
	7		W3616	0107	22		33-21-22	115-199
	8		W3616	0028	22		33-21-22	001-099
	8		W3616	0108	22		33-21-22	115-199
	9		W3616	0029	22		33-21-22	001-099
	9		W3616	0109	22		33-21-22	115-199
	10		W3616	0020	20		33-21-51	001-099
	10		W3616	0110	20		33-21-51	115-199
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 63

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00669A D00669A		E004-01/ / E4-1/ /		PLUG- PLUG-				001-099 115-199
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08		W1165	0326	22		27-61-16	ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12		W1165	0256	22		27-09-13	ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15		W1165	0231	22		27-61-16	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05		W1165	0356	22		27-61-16	ALL
	B06	UNUSED						ALL
	B07		W1165	0635	22		27-61-12	ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13		W1165	0252	22		27-61-12	ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02		W1165	0342	22		27-61-16	ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06		W1165	0346	22		27-61-16	ALL
	C07	UNUSED						ALL
	C08		W1165	0326	22		27-61-16	ALL
	C09	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 64

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00669A		E004-01/ /		PLUG- (continued)				001-099
D00669A		E4-1/ /		PLUG- (continued)				115-199
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13		W1165	0245	22		27-09-14	ALL
	C14		W1165	0634	22		27-61-12	ALL
	C15		W1165	0640	22		27-61-12	ALL
	D01		W1165	0237	22		27-09-12	ALL
	D02		W1165	0342	22		27-61-16	ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05		W1165	0346	22		27-61-16	ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13		W1165	0612	22		27-61-12	ALL
	D14		W1165	0608	22		27-61-12	ALL
	D15		W1165	0606	22		27-61-12	ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11		W1165	0223	22		27-61-16	ALL
	E12		W1165	0230	22		27-61-16	ALL
	E13		W1165	0614	22		27-61-12	ALL
	E14		W1165	0610	22		27-61-12	ALL
	E15		W1165	0604	22		27-61-12	ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03		W1165	0229	22		27-61-16	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 65

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00669A		E004-01/ /		PLUG- (continued)				001-099
D00669A		E4-1/ /		PLUG- (continued)				115-199
	F04	UNUSED						ALL
	F05		W1165	0228	22		27-61-16	ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13		W1165	0613	22		27-61-12	ALL
	F14		W1165	0609	22		27-61-12	ALL
	F15		W1165	0605	22		27-61-12	ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03		W1165	0224	22		27-61-16	ALL
	G04	UNUSED						ALL
	G05		W1165	0225	22		27-61-16	ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08		W1165	2112B	22		27-61-16	ALL
	G09		W1165	2112R	22		27-61-16	ALL
	G10		W1165	2116R	22		27-61-16	ALL
	G11		W1165	2116B	22		27-61-16	ALL
	G12	UNUSED						ALL
	G13		W1165	0615	22		27-61-12	ALL
	G14		W1165	0611	22		27-61-12	ALL
	G15		W1165	0607	22		27-61-12	ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 66

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00669A		E004-01/ /		PLUG- (continued)				001-099
D00669A		E4-1/ /		PLUG- (continued)				115-199
	H13		W1165	0378	24		31-31-62	001-099
	H13		W1165	0378	24		31-31-32	115-199
	H14		W1165	0627	22		27-09-14	ALL
	H15		W1165	0633	22		27-61-12	ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03		W1165	2117R	22		27-61-16	ALL
	J04		W1165	2117B	22		27-61-16	ALL
	J05	UNUSED						ALL
	J06		W1165	2121B	22		27-61-16	ALL
	J07	UNUSED						ALL
	J08		W1165	2115R	22		27-61-16	ALL
	J09		W1165	2115B	22		27-61-16	ALL
	J10	UNUSED						ALL
	J11		W1165	2114B	22		27-61-16	ALL
	J12	UNUSED						ALL
	J13		W1165	0048	22		27-09-13	ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03		W1165	2118R	22		27-61-16	ALL
	K04		W1165	2118B	22		27-61-16	ALL
	K05	UNUSED						ALL
	K06		W1165	2121R	22		27-61-16	ALL
	K07	UNUSED						ALL
	K08		W1165	2113R	22		27-61-16	ALL
	K09		W1165	2113B	22		27-61-16	ALL
	K10	UNUSED						ALL
	K11		W1165	2114R	22		27-61-16	ALL
	K12	UNUSED						ALL
	K13		W1165	0047	22		27-09-13	ALL
	K14	UNUSED						ALL
	K15		W1165	0025	22		27-61-16	ALL
D00669B		E004-01/ /		PLUG-				001-099
D00669B		E4-1/ /		PLUG-				115-199
	A01	UNUSED						ALL
	A02	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 67

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00669B		E004-01/ /		PLUG- (continued)				001-099
D00669B		E4-1/ /		PLUG- (continued)				115-199
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06		W1165	0501	22		27-61-16	ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14		W1165	0135	22		27-61-16	ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03		W1165	0500	22		27-61-16	ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07		W1165	0499	22		27-61-16	ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11		W1165	0137	22		27-61-16	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 68

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00669B		E004-01/ /		PLUG- (continued)				001-099
D00669B		E4-1/ /		PLUG- (continued)				115-199
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15		W1165	0140	22		27-61-16	ALL
	D01	UNUSED						ALL
	D02		W1165	0461	22		27-09-12	ALL
	D03		W1165	0500	22		27-61-16	ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06		W1165	0499	22		27-61-16	ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10		W1165	0035	22		27-09-12	ALL
	D11		W1165	0137	22		27-61-16	ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14		W1165	0140	22		27-61-16	ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04		W1165	0433	22		27-61-16	ALL
	F05	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 69

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00669B		E004-01/ /		PLUG- (continued)				001-099
D00669B		E4-1/ /		PLUG- (continued)				115-199
	F06		W1165	0434	22		27-61-16	ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12		W1165	0023	22		27-61-16	ALL
	F13	UNUSED						ALL
	F14		W1165	0022	22		27-61-16	ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04		W1165	0430	22		27-61-16	ALL
	G05	UNUSED						ALL
	G06		W1165	0429	22		27-61-16	ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12		W1165	0020	22		27-61-16	ALL
	G13	UNUSED						ALL
	G14		W1165	0019	22		27-61-16	ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 70

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00669B		E004-01/ /		PLUG- (continued)				001-099
D00669B		E4-1/ /		PLUG- (continued)				115-199
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04		W1165	2218R	22		27-61-16	ALL
	J05		W1165	2218B	22		27-61-16	ALL
	J06	UNUSED						ALL
	J07		W1165	2221B	22		27-61-16	ALL
	J08	UNUSED						ALL
	J09	UNUSED						001-002, 115-199
	J09		W1165	0161	22		27-61-12	003-099
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12		W1165	2022R	22		27-61-16	ALL
	J13		W1165	2022B	22		27-61-16	ALL
	J14	UNUSED						ALL
	J15		W1165	2024B	22		27-61-16	ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04		W1165	2219R	22		27-61-16	ALL
	K05		W1165	2219B	22		27-61-16	ALL
	K06	UNUSED						ALL
	K07		W1165	2221R	22		27-61-16	ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12		W1165	2023R	22		27-61-16	ALL
	K13		W1165	2023B	22		27-61-16	ALL
	K14	UNUSED						ALL
	K15		W1165	2024R	22		27-61-16	ALL
D00669C		E004-01/ /		PLUG-				001-099
D00669C		E4-1/ /		PLUG-				115-199
	1	UNUSED						ALL
	2		W1165	0438	16		27-61-16	ALL
	3		W1165	0437	16		27-61-16	ALL
	4		W1165	0635	22		27-61-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 71

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00669C		E004-01/ /		PLUG- (continued)				001-099
D00669C		E4-1/ /		PLUG- (continued)				115-199
	5		W1165	0505	20		27-61-16	ALL
	6		W1165	0504	20		27-61-16	ALL
	7		W1165	0439	16		27-61-16	ALL
	8		W1165	0436	16		27-61-16	ALL
	9		W1165	0503	16		27-61-16	ALL
	10		W1165	0502	16		27-61-16	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	=C12	UNUSED						ALL
	=C13	UNUSED						ALL
D00670		1256/288/R38		PLUG-				001-099
D00670		1255/288/R38		PLUG-				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W3616	0025	22		33-21-22	001-099
	5		W3616	0105	22		33-21-22	115-199
	6		W3616	0026	22		33-21-22	001-099
	6		W3616	0106	22		33-21-22	115-199
	7		W3616	0027	22		33-21-22	001-099
	7		W3616	0107	22		33-21-22	115-199
	8		W3616	0028	22		33-21-22	001-099
	8		W3616	0108	22		33-21-22	115-199
	9		W3616	0029	22		33-21-22	001-099
	9		W3616	0109	22		33-21-22	115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00671A		E004-01/ /		PLUG-				001-099
D00671A		E4-1/ /		PLUG-				115-199
	A01		W1165	2020R	22		27-61-15	ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05		W1165	0001	22		27-61-14	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 72

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00671A		E004-01/ /		PLUG- (continued)				001-099
D00671A		E4-1/ /		PLUG- (continued)				115-199
	A06	UNUSED						ALL
	A07		W1165	0112	22		27-41-21	ALL
	A08		W1165	0089	22		27-21-22	ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12		W1165	2028R	22		27-21-22	ALL
	A13	UNUSED						ALL
	A14		W1165	0323	22		27-41-21	ALL
	A15		W1165	0293	22		27-21-22	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05		W1165	0113	22		27-41-21	ALL
	B06	UNUSED						ALL
	B07		W1165	0019	22		27-61-16	ALL
	B08		W1165	0075	22		22-21-21	ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14		W1165	0225	22		27-61-16	ALL
	B15		W1165	0285	22		22-21-21	ALL
	C01		W1165	2020B	22		27-61-15	ALL
	C02	UNUSED						ALL
	C03		W1165	0013	22		27-61-15	ALL
	C04	UNUSED						ALL
	C05		W1165	0077	22		22-21-21	ALL
	C06	UNUSED						ALL
	C07		W1165	0003	22		27-61-14	ALL
	C08		W1165	0011	22		27-61-15	ALL
	C09	UNUSED						ALL
	C10		W1165	0096	22		27-21-22	ALL
	C11	UNUSED						ALL
	C12		W1165	2028B	22		27-21-22	ALL
	C13	UNUSED						ALL
	C14		W1165	0208	22		27-61-14	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 73

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00671A		E004-01/ /		PLUG- (continued)				001-099
D00671A		E4-1/ /		PLUG- (continued)				115-199
	C15		W1165	0216	22		27-61-15	ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02		W1165	0114	22		27-41-21	ALL
	E03		W1165	0076	22		22-21-21	ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 74

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00671A		E004-01/ /		PLUG- (continued)				001-099
D00671A		E4-1/ /		PLUG- (continued)				115-199
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13		W1165	0223	22		27-61-16	ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01		W1165	0074	22		22-21-21	ALL
	G02		W1165	0111	22		27-41-21	ALL
	G03		W1165	0090	22		27-21-22	ALL
	G04	UNUSED						ALL
	G05		W1165	3009Y	22		27-41-21	ALL
	G06		W1165	3010B	22		27-41-21	ALL
	G07		W1165	3010Y	22		27-41-21	ALL
	G08		W1165	3106Y	22		27-41-21	ALL
	G09		W1165	3107B	22		27-41-21	ALL
	G10		W1165	3107Y	22		27-41-21	ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01		W1165	0002	22		27-61-14	ALL
	H02		W1165	0012	22		27-61-15	ALL
	H03		W1165	0020	22		27-61-16	ALL
	H04	UNUSED						ALL
	H05		W1165	3009R	22		27-41-21	ALL
	H06		W1165	3009B	22		27-41-21	ALL
	H07		W1165	3010R	22		27-41-21	ALL
	H08		W1165	3106R	22		27-41-21	ALL
	H09		W1165	3106B	22		27-41-21	ALL
	H10		W1165	3107R	22		27-41-21	ALL
	H11	UNUSED						ALL
	H12		W1165	0322	22		27-41-21	ALL
	H13		W1165	0294	22		27-21-22	ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 75

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00671A		E004-01/ /		PLUG- (continued)				001-099
D00671A		E4-1/ /		PLUG- (continued)				115-199
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05		W1165	3005Y	22		22-21-21	ALL
	J06		W1165	3006B	22		22-21-21	ALL
	J07		W1165	3006Y	22		22-21-21	ALL
	J08		W1165	3102Y	22		22-21-21	ALL
	J09		W1165	3103B	22		22-21-21	ALL
	J10		W1165	3103Y	22		22-21-21	ALL
	J11	UNUSED						ALL
	J12		W1165	0224	22		27-61-16	ALL
	J13		W1165	0292	22		22-21-21	ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05		W1165	3005R	22		22-21-21	ALL
	K06		W1165	3005B	22		22-21-21	ALL
	K07		W1165	3006R	22		22-21-21	ALL
	K08		W1165	3102R	22		22-21-21	ALL
	K09		W1165	3102B	22		22-21-21	ALL
	K10		W1165	3103R	22		22-21-21	ALL
	K11	UNUSED						ALL
	K12		W1165	0209	22		27-61-14	ALL
	K13		W1165	0217	22		27-61-15	ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
D00671B		E004-01/ /		PLUG-				001-099
D00671B		E4-1/ /		PLUG-				115-199
	A01		W1165	2107R	22		27-61-14	ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05		W1165	2220R	22		27-61-16	ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 76

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00671B		E004-01/ /		PLUG- (continued)				001-099
D00671B		E4-1/ /		PLUG- (continued)				115-199
	A09	UNUSED						ALL
	A10		W1165	2036R	22		27-09-11	ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13		W1165	0241	22		27-09-14	ALL
	A14	UNUSED						ALL
	A15		W1165	0265	22		27-09-11	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01		W1165	2107B	22		27-61-14	ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05		W1165	2220B	22		27-61-16	ALL
	C06	UNUSED						ALL
	C07		W1165	0431	22		27-61-16	ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10		W1165	2036B	22		27-09-11	ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 77

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00671B		E004-01/ /		PLUG- (continued)				001-099
D00671B		E4-1/ /		PLUG- (continued)				115-199
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15		W1165	0050	22		27-09-11	ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03		W1165	0410	22		27-61-14	ALL
	F04		W1165	0413	22		27-61-15	ALL
	F05		W1165	0430	22		27-61-16	ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 78

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00671B		E004-01/ /		PLUG- (continued)				001-099
D00671B		E4-1/ /		PLUG- (continued)				115-199
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01		W1165	0210	22		27-61-14	ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03		W1165	0411	22		27-61-14	ALL
	H04		W1165	0414	22		27-61-15	ALL
	H05		W1165	0429	22		27-61-16	ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 79

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00671B		E004-01/ /		PLUG- (continued)				001-099
D00671B		E4-1/ /		PLUG- (continued)				115-199
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01		W1165	0416	22		27-61-15	ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13		W1165	0623	22		27-09-14	ALL
	K14	UNUSED						ALL
	K15		W1165	0051	22		27-09-11	ALL
D00671C		E004-01/ /		PLUG-				001-099
D00671C		E4-1/ /		PLUG-				115-199
	1	UNUSED						ALL
	2		W1165	0446	16		27-09-11	ALL
	3		W1165	0448	16		27-09-11	ALL
	4	UNUSED						ALL
	5		W1165	0443	22		27-09-11	ALL
	6	UNUSED						ALL
	7		W1165	0447	16		27-09-11	ALL
	8		W1165	0450	16		27-09-11	ALL
	9		W1165	0445	16		27-09-11	ALL
	10		W1165	0444	16		27-09-11	ALL
	11		W1165	0449	16		27-09-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 80

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00671C		E004-01/ /		PLUG- (continued)				001-099
D00671C		E4-1/ /		PLUG- (continued)				115-199
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL
D00673A		E004-01/ /		PLUG-				001-099
D00673A		E4-1/ /		PLUG-				115-199
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03		W1165	0013	22		27-61-15	ALL
	A04	UNUSED						ALL
	A05		W1165	0008	22		27-61-14	ALL
	A06	UNUSED						ALL
	A07		W1165	0116	22		27-41-21	ALL
	A08		W1165	0091	22		27-21-22	ALL
	A09	UNUSED						ALL
	A10		W1165	0096	22		27-21-22	ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14		W1165	0325	22		27-41-21	ALL
	A15		W1165	0295	22		27-21-22	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05		W1165	0117	22		27-41-21	ALL
	B06	UNUSED						ALL
	B07		W1165	0022	22		27-61-16	ALL
	B08		W1165	0082	22		22-21-21	ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14		W1165	0228	22		27-61-16	ALL
	B15		W1165	0289	22		22-21-21	ALL
	C01		W1165	0014	22		27-61-15	ALL
	C02	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 81

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00673A		E004-01/ /		PLUG- (continued)				001-099
D00673A		E4-1/ /		PLUG- (continued)				115-199
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05		W1165	0141	22		22-21-21	ALL
	C06	UNUSED						ALL
	C07		W1165	0006	22		27-61-14	ALL
	C08		W1165	0016	22		27-61-15	ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12		W1165	0097	22		27-21-22	ALL
	C13	UNUSED						ALL
	C14		W1165	0213	22		27-61-14	ALL
	C15		W1165	0219	22		27-61-15	ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02		W1165	0118	22		27-41-21	ALL
	E03		W1165	0142	22		22-21-21	ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 82

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00673A		E004-01/ /		PLUG- (continued)				001-099
D00673A		E4-1/ /		PLUG- (continued)				115-199
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13		W1165	0230	22		27-61-16	ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01		W1165	0081	22		22-21-21	ALL
	G02		W1165	0115	22		27-41-21	ALL
	G03		W1165	0092	22		27-21-22	ALL
	G04	UNUSED						ALL
	G05		W1165	3011Y	22		27-41-21	ALL
	G06		W1165	3012B	22		27-41-21	ALL
	G07		W1165	3012Y	22		27-41-21	ALL
	G08		W1165	3108Y	22		27-41-21	ALL
	G09		W1165	3109B	22		27-41-21	ALL
	G10		W1165	3109Y	22		27-41-21	ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01		W1165	0007	22		27-61-14	ALL
	H02		W1165	0015	22		27-61-15	ALL
	H03		W1165	0023	22		27-61-16	ALL
	H04	UNUSED						ALL
	H05		W1165	3011R	22		27-41-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 83

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00673A		E004-01/ /		PLUG- (continued)				001-099
D00673A		E4-1/ /		PLUG- (continued)				115-199
	H06		W1165	3011B	22		27-41-21	ALL
	H07		W1165	3012R	22		27-41-21	ALL
	H08		W1165	3108R	22		27-41-21	ALL
	H09		W1165	3108B	22		27-41-21	ALL
	H10		W1165	3109R	22		27-41-21	ALL
	H11	UNUSED						ALL
	H12		W1165	0324	22		27-41-21	ALL
	H13		W1165	0296	22		27-21-22	ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05		W1165	3007Y	22		22-21-21	ALL
	J06		W1165	3008B	22		22-21-21	ALL
	J07		W1165	3008Y	22		22-21-21	ALL
	J08		W1165	3104Y	22		22-21-21	ALL
	J09		W1165	3105B	22		22-21-21	ALL
	J10		W1165	3105Y	22		22-21-21	ALL
	J11	UNUSED						ALL
	J12		W1165	0229	22		27-61-16	ALL
	J13		W1165	0288	22		22-21-21	ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05		W1165	3007R	22		22-21-21	ALL
	K06		W1165	3007B	22		22-21-21	ALL
	K07		W1165	3008R	22		22-21-21	ALL
	K08		W1165	3104R	22		22-21-21	ALL
	K09		W1165	3104B	22		22-21-21	ALL
	K10		W1165	3105R	22		22-21-21	ALL
	K11	UNUSED						ALL
	K12		W1165	0212	22		27-61-14	ALL
	K13		W1165	0220	22		27-61-15	ALL
	K14	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 84

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00673A		E004-01/ /		PLUG- (continued)				001-099
D00673A		E4-1/ /		PLUG- (continued)				115-199
	K15	UNUSED						ALL
D00673B		E004-01/ /		PLUG-				001-099
D00673B		E4-1/ /		PLUG-				115-199
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07		W1165	0431	22		27-61-16	ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10		W1165	2036B	22		27-09-11	ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13		W1165	0248	22		27-09-14	ALL
	A14	UNUSED						ALL
	A15		W1165	0268	22		27-09-11	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01		W1165	0211	22		27-61-14	ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05		W1165	0432	22		27-61-16	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 85

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00673B		E004-01/ /		PLUG- (continued)				001-099
D00673B		E4-1/ /		PLUG- (continued)				115-199
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10		W1165	2036R	22		27-09-11	ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01		W1165	0210	22		27-61-14	ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 86

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00673B		E004-01/ /		PLUG- (continued)				001-099
D00673B		E4-1/ /		PLUG- (continued)				115-199
	E15		W1165	0266	22		27-09-11	ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03		W1165	0402	22		27-61-14	ALL
	F04		W1165	0420	22		27-61-15	ALL
	F05		W1165	0433	22		27-61-16	ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03		W1165	0401	22		27-61-14	ALL
	H04		W1165	0419	22		27-61-15	ALL
	H05		W1165	0434	22		27-61-16	ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 87

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00673B		E004-01/ /		PLUG- (continued)				001-099
D00673B		E4-1/ /		PLUG- (continued)				115-199
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01		W1165	0417	22		27-61-15	ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13		W1165	0630	22		27-09-14	ALL
	K14	UNUSED						ALL
	K15		W1165	0053	22		27-09-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 88

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00673C D00673C		E004-01/ / E4-1/ /		PLUG- PLUG-				001-099 115-199
	1	UNUSED						ALL
	2		W1165	0453	16		27-09-11	ALL
	3		W1165	0455	16		27-09-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1165	0454	16		27-09-11	ALL
	8		W1165	0457	16		27-09-11	ALL
	9		W1165	0452	16		27-09-11	ALL
	10		W1165	0451	16		27-09-11	ALL
	11		W1165	0456	16		27-09-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	=C12	UNUSED						ALL
	=C13	UNUSED						ALL
D00674 D00674		1356/288/R38 1355/288/R38		PLUG- PLUG-				001-099 115-199
	1		W3618	0011	20		33-21-23	001-099
	1		W3618	0121	20		33-21-23	115-199
	2		W3618	0012	20		33-21-23	001-099
	2		W3618	0122	20		33-21-23	115-199
	3		W3618	0013	24		33-21-23	001-099
	3		W3618	0123	24		33-21-23	115-199
	4		W3618	0014	20		33-21-23	001-099
	4		W3618	0124	20		33-21-23	115-199
	5		W3618	0015	22		33-21-23	001-099
	5		W3618	0125	22		33-21-23	115-199
	6		W3618	0016	22		33-21-23	001-099
	6		W3618	0126	22		33-21-23	115-199
	7		W3618	0017	22		33-21-23	001-099
	7		W3618	0127	22		33-21-23	115-199
	8		W3618	0018	22		33-21-23	001-099
	8		W3618	0128	22		33-21-23	115-199
	9		W3618	0019	22		33-21-23	001-099
	9		W3618	0129	22		33-21-23	115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 89

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00675A		E004-01/ /		PLUG-				001-099
D00675A		E4-1/ /		PLUG-				115-199
	A01	UNUSED						ALL
	A02		W1165	0601	22		27-31-22	ALL
	A03		W1165	0602	22		27-31-22	ALL
	A04		W1165	0114	22		27-41-21	ALL
	A05		W1165	0118	22		27-41-21	ALL
	A06		W1165	0107	22		22-24-21	ALL
	A07		W1165	0102	22		27-31-22	ALL
	A08		W1165	0103	22		27-31-22	ALL
	A09		W1165	0106	22		22-24-21	ALL
	A10	UNUSED						ALL
	A11		W1165	5004R	24		22-24-21	ALL
	A12		W1165	5004B	24		22-24-21	ALL
	A13		W1165	0351Y	22		27-41-21	ALL
	A14		W1165	0352Y	22		27-41-21	ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04		W1165	0113	22		27-41-21	ALL
	B05		W1165	0117	22		27-41-21	ALL
	B06		W1165	0108	22		27-41-31	ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13		W1165	0380	22		27-41-21	ALL
	B14		W1165	0381	22		27-41-21	ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04		W1165	0111	22		27-41-21	ALL
	C05		W1165	0112	22		27-41-21	ALL
	C06	UNUSED						ALL
	C07		W1165	0278Y	22		27-41-21	ALL
	C08		W1165	0277Y	22		27-41-21	ALL
	C09		W1165	0151	22		27-41-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 90

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00675A		E004-01/ /		PLUG- (continued)				001-099
D00675A		E4-1/ /		PLUG- (continued)				115-199
	C10	UNUSED						ALL
	C11		W1165	0105	22		22-24-21	ALL
	C12		W1165	0152	22		27-41-21	ALL
	C13	UNUSED						ALL
	C14		W1165	0310	22		22-24-21	ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04		W1165	0148Y	22		27-41-21	ALL
	D05		W1165	0149Y	22		27-41-21	ALL
	D06		W1165	0034	22		27-09-12	ALL
	D07		W1165	5108R	24		22-22-21	ALL
	D08		W1165	5108B	24		22-22-21	ALL
	D09		W1165	0316	22		22-22-21	ALL
	D10		W1165	0315	22		22-22-21	ALL
	D11		W1165	5106R	24		22-24-21	ALL
	D12		W1165	5106B	24		22-24-21	ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04		W1165	0115	22		27-41-21	ALL
	E05		W1165	0116	22		27-41-21	ALL
	E06	UNUSED						ALL
	E07		W1165	0297	22		27-31-22	ALL
	E08		W1165	0298	22		27-31-22	ALL
	E09		W1165	2123R	22		22-24-21	ALL
	E10		W1165	2123B	22		22-24-21	ALL
	E11		W1165	0313	22		22-24-21	ALL
	E12		W1165	0347Y	22		27-41-21	ALL
	E13	UNUSED						ALL
	E14		W1165	0236	22		27-09-12	ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 91

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00675A		E004-01/ /		PLUG- (continued)				001-099
D00675A		E4-1/ /		PLUG- (continued)				115-199
	F04		W1165	3011R	22		27-41-21	ALL
	F05		W1165	3011B	22		27-41-21	ALL
	F06		W1165	3011Y	22		27-41-21	ALL
	F07		W1165	0349Y	22		27-41-21	ALL
	F08		W1165	0350Y	22		27-41-21	ALL
	F09		W1165	0272Y	22		27-41-21	ALL
	F10		W1165	0276Y	22		27-41-21	ALL
	F11		W1165	0312	22		22-24-21	ALL
	F12		W1165	0353	22		27-41-21	ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04		W1165	3012R	22		27-41-21	ALL
	G05		W1165	3012B	22		27-41-21	ALL
	G06		W1165	3012Y	22		27-41-21	ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12		W1165	0473	22		22-22-21	ALL
	G13		W1165	0322	22		27-41-21	ALL
	G14		W1165	0323	22		27-41-21	ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04		W1165	3009R	22		27-41-21	ALL
	H05		W1165	3009B	22		27-41-21	ALL
	H06		W1165	3009Y	22		27-41-21	ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 92

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00675A		E004-01/ /		PLUG- (continued)				001-099
D00675A		E4-1/ /		PLUG- (continued)				115-199
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04		W1165	3010R	22		27-41-21	ALL
	J05		W1165	3010B	22		27-41-21	ALL
	J06		W1165	3010Y	22		27-41-21	ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12		W1165	0109	22		22-22-21	ALL
	J13		W1165	0324	22		27-41-21	ALL
	J14		W1165	0325	22		27-41-21	ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04		W1165	2035R	22		27-21-22	ALL
	K05		W1165	2035B	22		27-21-22	ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13		W1165	2122R	22		27-21-22	ALL
	K14		W1165	2122B	22		27-21-22	ALL
	K15		W1165	0093	22		27-21-22	ALL
	DED		W1165	5004Z			22-24-21	ALL
	DED		W1165	5106Z			22-24-21	ALL
D00675B		E004-01/ /		PLUG-				001-099
D00675B		E4-1/ /		PLUG-				115-199
	A01		W1165	0026	22		27-31-22	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 93

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00675B		E004-01/ /		PLUG- (continued)				001-099
D00675B		E4-1/ /		PLUG- (continued)				115-199
	A02	UNUSED						ALL
	A03		W1165	0031	22		27-31-22	ALL
	A04		W1165	0030	22		27-31-22	ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11		W1165	0603	22		27-31-22	ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15		W1165	0626	22		27-09-14	ALL
	B01		W1165	0027	22		27-31-22	ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05		W1165	0314	22		22-22-21	ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 94

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00675B		E004-01/ /		PLUG- (continued)				001-099
D00675B		E4-1/ /		PLUG- (continued)				115-199
	C11		W1165	0654	22		27-41-21	ALL
	C12		W1165	0650	22		22-24-21	ALL
	C13		W1165	0655	22		27-41-21	ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05		W1165	0651	22		22-22-21	ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04		W1165	0244	22		27-09-14	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 95

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00675B		E004-01/ /		PLUG- (continued)				001-099
D00675B		E4-1/ /		PLUG- (continued)				115-199
	F05		W1165	0580	22		27-09-13	ALL
	F06		W1165	0579	22		27-09-13	ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02		W1165	3109R	22		27-41-21	ALL
	G03		W1165	3109B	22		27-41-21	ALL
	G04		W1165	3109Y	22		27-41-21	ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08		W1165	0700	22		27-41-21	ALL
	G09		W1165	0701	22		27-41-21	ALL
	G10		W1165	0702	22		27-41-21	ALL
	G11		W1165	0703	22		27-41-21	ALL
	G12		W1165	0704	22		27-41-21	ALL
	G13		W1165	0705	22		27-41-21	ALL
	G14		W1165	0706	22		27-41-21	ALL
	G15		W1165	0707	22		27-41-21	ALL
	H01	UNUSED						ALL
	H02		W1165	3108R	22		27-41-21	ALL
	H03		W1165	3108B	22		27-41-21	ALL
	H04		W1165	3108Y	22		27-41-21	ALL
	H05		W1165	0046	22		27-09-13	ALL
	H06		W1165	0045	22		27-09-13	ALL
	H07	UNUSED						ALL
	H08		W1165	0587	22		27-41-21	ALL
	H09		W1165	0588	22		27-41-21	ALL
	H10	UNUSED						ALL
	H11		W1165	0585	22		27-41-21	ALL
	H12	UNUSED						ALL
	H13		W1165	0586	22		27-41-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 96

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00675B		E004-01/ /		PLUG- (continued)				001-099
D00675B		E4-1/ /		PLUG- (continued)				115-199
	H14	UNUSED						ALL
	H15		W1165	0470	22		22-24-21	ALL
	J01	UNUSED						ALL
	J02		W1165	3107R	22		27-41-21	ALL
	J03		W1165	3107B	22		27-41-21	ALL
	J04		W1165	3107Y	22		27-41-21	ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14		W1165	0472	22		22-22-21	ALL
	J15		W1165	0471	22		22-22-21	ALL
	K01	UNUSED						ALL
	K02		W1165	3106R	22		27-41-21	ALL
	K03		W1165	3106B	22		27-41-21	ALL
	K04		W1165	3106Y	22		27-41-21	ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12		W1165	0460	22		27-09-12	ALL
	K13	UNUSED						ALL
	K14		W1165	5202R	24		22-22-21	ALL
	K15		W1165	5202B	24		22-22-21	ALL
D00675C		E004-01/ /		PLUG-				001-099
D00675C		E4-1/ /		PLUG-				115-199
	1	UNUSED						ALL
	2		W1165	0590	22		27-41-21	ALL
	3		W1165	0589	22		27-41-21	ALL
	4	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 97

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00675C		E004-01/ /		PLUG- (continued)				001-099
D00675C		E4-1/ /		PLUG- (continued)				115-199
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1165	0592	22		27-41-21	ALL
	8		W1165	0591	22		27-41-21	ALL
	9	UNUSED						ALL
	10		W1165	0593	22		27-41-21	ALL
	11		W1165	0594	22		27-41-21	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	=C12	UNUSED						ALL
	=C13	UNUSED						ALL
D00676		1416/288/R38		PLUG-				001-099
D00676		1415/288/R38		PLUG-				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W3618	0015	22		33-21-23	001-099
	5		W3618	0125	22		33-21-23	115-199
	6		W3618	0016	22		33-21-23	001-099
	6		W3618	0126	22		33-21-23	115-199
	7		W3618	0017	22		33-21-23	001-099
	7		W3618	0127	22		33-21-23	115-199
	8		W3618	0018	22		33-21-23	001-099
	8		W3618	0128	22		33-21-23	115-199
	9		W3618	0019	22		33-21-23	001-099
	9		W3618	0129	22		33-21-23	115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00678		1476/288/R38		PLUG-				001-099
D00678		1475/288/R38		PLUG-				115-199
	1		W3618	0021	20		33-21-23	001-099
	1		W3618	0131	20		33-21-23	115-199
	2		W3618	0022	20		33-21-23	001-099
	2		W3618	0132	20		33-21-23	115-199
	3		W3618	0023	24		33-21-23	001-099

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 98

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00678		1476/288/R38		PLUG- (continued)				001-099
D00678		1475/288/R38		PLUG- (continued)				115-199
	3		W3618	0133	24		33-21-23	115-199
	4		W3618	0024	20		33-21-23	001-099
	4		W3618	0134	20		33-21-23	115-199
	5		W3618	0025	22		33-21-23	001-099
	5		W3618	0135	22		33-21-23	115-199
	6		W3618	0026	22		33-21-23	001-099
	6		W3618	0136	22		33-21-23	115-199
	7		W3618	0027	22		33-21-23	001-099
	7		W3618	0137	22		33-21-23	115-199
	8		W3618	0028	22		33-21-23	001-099
	8		W3618	0138	22		33-21-23	115-199
	9		W3618	0029	22		33-21-23	001-099
	9		W3618	0139	22		33-21-23	115-199
	10		W3618	0020	20		33-21-51	001-099
	10		W3618	0130	20		33-21-51	115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
D00680		1536/288/R38		PLUG-				001-099
D00680		1535/288/R38		PLUG-				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W3618	0025	22		33-21-23	001-099
	5		W3618	0135	22		33-21-23	115-199
	6		W3618	0026	22		33-21-23	001-099
	6		W3618	0136	22		33-21-23	115-199
	7		W3618	0027	22		33-21-23	001-099
	7		W3618	0137	22		33-21-23	115-199
	8		W3618	0028	22		33-21-23	001-099
	8		W3618	0138	22		33-21-23	115-199
	9		W3618	0029	22		33-21-23	001-099
	9		W3618	0139	22		33-21-23	115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 99

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00682		1596/288/R38		PLUG-				001-099
D00682		1595/288/R38		PLUG-				115-199
	1		W3618	0031	20		33-21-23	001-099
	1		W3618	0141	20		33-21-23	115-199
	2		W3618	0032	20		33-21-23	001-099
	2		W3618	0142	20		33-21-23	115-199
	3		W3618	0033	24		33-21-23	001-099
	3		W3618	0143	24		33-21-23	115-199
	4		W3618	0034	20		33-21-23	001-099
	4		W3618	0144	20		33-21-23	115-199
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00687		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D00687		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	1		W1270	5002B	24		31-31-41	001-099
	1		W1270	5002B	24		31-31-21	115-199
	2		W1270	5001R	24		31-31-41	001-099
	2		W1270	5001R	24		31-31-21	115-199
	3		W1270	5826	22		31-31-41	001-099
	3		W1270	5826	22		31-31-21	115-199
	4		W1270	5003R	24		31-31-41	001-099
	4		W1270	5003R	24		31-31-21	115-199
	5		W1270	5002R	24		31-31-41	001-099
	5		W1270	5002R	24		31-31-21	115-199
	6		W1270	5001B	24		31-31-41	001-099
	6		W1270	5001B	24		31-31-21	115-199
	7		W1270	5815	22		31-31-41	001-099
	7		W1270	5815	22		31-31-21	115-199
	8		W1270	5003B	24		31-31-41	001-099
	8		W1270	5003B	24		31-31-21	115-199
D00689		1862/235/L18		PLUG-				ALL
	1		W2801	0010	20		27-31-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 100

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00689		1862/235/L18		PLUG- (continued)				ALL
	2		W2801	0006	20		27-31-12	ALL
	3		W2801	0007	20		27-31-12	ALL
	4		W2801	0008	20		27-31-12	ALL
	5		W2801	0020	20		27-31-12	ALL
	6		W2801	0011	20		27-31-12	ALL
	7		W2801	0009	20		27-31-12	ALL
D00691		683/295/L030		RCPT				001-099
	1		W3525	4251R	24		23-42-11	001-099
	2		W3525	4251Z			23-42-11	001-099
	3		W3525	4251B	24		23-42-11	001-099
	4		W3525	4251Y	24		23-42-11	001-099
	5		W3525	4251G	24		23-42-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D00600

Page 101 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00701A		E003-01/ /		PLUG-				ALL
	A01		W1265	2021R	22		27-61-17	ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05		W1265	0036	22		27-61-13	ALL
	A06	UNUSED						ALL
	A07		W1265	0111	22		27-41-11	ALL
	A08		W1265	0017	22		27-21-12	ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12		W1265	2114R	22		27-21-12	ALL
	A13	UNUSED						ALL
	A14		W1265	0332	22		27-41-11	ALL
	A15		W1265	0258	22		27-21-12	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05		W1265	0112	22		27-41-11	ALL
	B06	UNUSED						ALL
	B07		W1265	0053	22		27-61-18	ALL
	B08		W1265	0097	22		22-21-11	ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14		W1265	0210	22		27-61-18	ALL
	B15		W1265	0304	22		22-21-11	ALL
	C01		W1265	2021B	22		27-61-17	ALL
	C02	UNUSED						ALL
	C03		W1265	0050	22		27-61-17	ALL
	C04	UNUSED						ALL
	C05		W1265	0098	22		22-21-11	ALL
	C06	UNUSED						ALL
	C07		W1265	0038	22		27-61-13	ALL
	C08		W1265	0045	22		27-61-17	ALL
	C09	UNUSED						ALL
	C10		W1265	0263	22		27-21-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00701A		E003-01/ /		PLUG- (continued)				ALL
	C11	UNUSED						ALL
	C12		W1265	2114B	22		27-21-12	ALL
	C13	UNUSED						ALL
	C14		W1265	0255	22		27-61-13	ALL
	C15		W1265	0201	22		27-61-17	ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02		W1265	0113	22		27-41-11	ALL
	E03		W1265	0099	22		22-21-11	ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00701A		E003-01/ /		PLUG- (continued)				ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13		W1265	0208	22		27-61-18	ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01		W1265	0096	22		22-21-11	ALL
	G02		W1265	0110	22		27-41-11	ALL
	G03		W1265	0018	22		27-21-12	ALL
	G04	UNUSED						ALL
	G05		W1265	3002Y	22		27-41-11	ALL
	G06		W1265	3003B	22		27-41-11	ALL
	G07		W1265	3003Y	22		27-41-11	ALL
	G08		W1265	3105Y	22		27-41-11	ALL
	G09		W1265	3106B	22		27-41-11	ALL
	G10		W1265	3106Y	22		27-41-11	ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01		W1265	0037	22		27-61-13	ALL
	H02		W1265	0044	22		27-61-17	ALL
	H03		W1265	0054	22		27-61-18	ALL
	H04	UNUSED						ALL
	H05		W1265	3002R	22		27-41-11	ALL
	H06		W1265	3002B	22		27-41-11	ALL
	H07		W1265	3003R	22		27-41-11	ALL
	H08		W1265	3105R	22		27-41-11	ALL
	H09		W1265	3105B	22		27-41-11	ALL
	H10		W1265	3106R	22		27-41-11	ALL
	H11	UNUSED						ALL
	H12		W1265	0331	22		27-41-11	ALL
	H13		W1265	0259	22		27-21-12	ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00701A		E003-01/ /		PLUG- (continued)				ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05		W1265	3006Y	22		22-21-11	ALL
	J06		W1265	3007B	22		22-21-11	ALL
	J07		W1265	3007Y	22		22-21-11	ALL
	J08		W1265	3109Y	22		22-21-11	ALL
	J09		W1265	3110B	22		22-21-11	ALL
	J10		W1265	3110Y	22		22-21-11	ALL
	J11	UNUSED						ALL
	J12		W1265	0209	22		27-61-18	ALL
	J13		W1265	0305	22		22-21-11	ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05		W1265	3006R	22		22-21-11	ALL
	K06		W1265	3006B	22		22-21-11	ALL
	K07		W1265	3007R	22		22-21-11	ALL
	K08		W1265	3109R	22		22-21-11	ALL
	K09		W1265	3109B	22		22-21-11	ALL
	K10		W1265	3110R	22		22-21-11	ALL
	K11	UNUSED						ALL
	K12		W1265	0256	22		27-61-13	ALL
	K13		W1265	0202	22		27-61-17	ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
D00701B		E003-01/ /		PLUG-				ALL
	A01		W1265	2127R	22		27-61-13	ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05		W1265	2219R	22		27-61-18	ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 4

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00701B		E003-01/ /		PLUG- (continued)				ALL
	A09	UNUSED						ALL
	A10		W1265	2036R	22		27-09-11	ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13		W1265	0236	22		27-09-14	ALL
	A14	UNUSED						ALL
	A15		W1265	0216	22		27-09-11	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01		W1265	2127B	22		27-61-13	ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05		W1265	2219B	22		27-61-18	ALL
	C06	UNUSED						ALL
	C07		W1265	0480	22		27-61-18	ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10		W1265	2036B	22		27-09-11	ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 5

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00701B		E003-01/ /		PLUG- (continued)				ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15		W1265	0613	22		27-09-11	ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03		W1265	0439	22		27-61-13	ALL
	F04		W1265	0451	22		27-61-17	ALL
	F05		W1265	0468	22		27-61-18	ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 6

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00701B		E003-01/ /		PLUG- (continued)				ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01		W1265	0249	22		27-61-13	ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03		W1265	0438	22		27-61-13	ALL
	H04		W1265	0452	22		27-61-17	ALL
	H05		W1265	0467	22		27-61-18	ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 7

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00701B		E003-01/ /		PLUG- (continued)				ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01		W1265	0454	22		27-61-17	ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13		W1265	0617	22		27-09-14	ALL
	K14	UNUSED						ALL
	K15		W1265	0615	22		27-09-11	ALL
D00701C		E003-01/ /		PLUG-				ALL
	1	UNUSED						ALL
	2		W1265	0403	16		27-09-11	ALL
	3		W1265	0405	16		27-09-11	ALL
	4	UNUSED						ALL
	5		W1265	0400	22		27-09-11	ALL
	6	UNUSED						ALL
	7		W1265	0404	16		27-09-11	ALL
	8		W1265	0407	16		27-09-11	ALL
	9		W1265	0402	16		27-09-11	ALL
	10		W1265	0401	16		27-09-11	ALL
	11		W1265	0406	16		27-09-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 8

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00703A		E003-01/ /		PLUG-				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03		W1265	0050	22		27-61-17	ALL
	A04	UNUSED						ALL
	A05		W1265	0043	22		27-61-13	ALL
	A06	UNUSED						ALL
	A07		W1265	0115	22		27-41-11	ALL
	A08		W1265	0019	22		27-21-12	ALL
	A09	UNUSED						ALL
	A10		W1265	0263	22		27-21-12	ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14		W1265	0334	22		27-41-11	ALL
	A15		W1265	0260	22		27-21-12	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05		W1265	0116	22		27-41-11	ALL
	B06	UNUSED						ALL
	B07		W1265	0056	22		27-61-18	ALL
	B08		W1265	0103	22		22-21-11	ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14		W1265	0213	22		27-61-18	ALL
	B15		W1265	0309	22		22-21-11	ALL
	C01		W1265	0051	22		27-61-17	ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05		W1265	0100	22		22-21-11	ALL
	C06	UNUSED						ALL
	C07		W1265	0041	22		27-61-13	ALL
	C08		W1265	0048	22		27-61-17	ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 9

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00703A		E003-01/ /		PLUG- (continued)				ALL
	C11	UNUSED						ALL
	C12		W1265	0264	22		27-21-12	ALL
	C13	UNUSED						ALL
	C14		W1265	0252	22		27-61-13	ALL
	C15		W1265	0204	22		27-61-17	ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02		W1265	0117	22		27-41-11	ALL
	E03		W1265	0101	22		22-21-11	ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 10

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00703A		E003-01/ /		PLUG- (continued)				ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13		W1265	0215	22		27-61-18	ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01		W1265	0102	22		22-21-11	ALL
	G02		W1265	0114	22		27-41-11	ALL
	G03		W1265	0020	22		27-21-12	ALL
	G04	UNUSED						ALL
	G05		W1265	3004Y	22		27-41-11	ALL
	G06		W1265	3005B	22		27-41-11	ALL
	G07		W1265	3005Y	22		27-41-11	ALL
	G08		W1265	3107Y	22		27-41-11	ALL
	G09		W1265	3108B	22		27-41-11	ALL
	G10		W1265	3108Y	22		27-41-11	ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01		W1265	0042	22		27-61-13	ALL
	H02		W1265	0047	22		27-61-17	ALL
	H03		W1265	0057	22		27-61-18	ALL
	H04	UNUSED						ALL
	H05		W1265	3004R	22		27-41-11	ALL
	H06		W1265	3004B	22		27-41-11	ALL
	H07		W1265	3005R	22		27-41-11	ALL
	H08		W1265	3107R	22		27-41-11	ALL
	H09		W1265	3107B	22		27-41-11	ALL
	H10		W1265	3108R	22		27-41-11	ALL
	H11	UNUSED						ALL
	H12		W1265	0333	22		27-41-11	ALL
	H13		W1265	0261	22		27-21-12	ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 11

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00703A		E003-01/ /		PLUG- (continued)				ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05		W1265	3008Y	22		22-21-11	ALL
	J06		W1265	3009B	22		22-21-11	ALL
	J07		W1265	3009Y	22		22-21-11	ALL
	J08		W1265	3111Y	22		22-21-11	ALL
	J09		W1265	3112B	22		22-21-11	ALL
	J10		W1265	3112Y	22		22-21-11	ALL
	J11	UNUSED						ALL
	J12		W1265	0214	22		27-61-18	ALL
	J13		W1265	0308	22		22-21-11	ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05		W1265	3008R	22		22-21-11	ALL
	K06		W1265	3008B	22		22-21-11	ALL
	K07		W1265	3009R	22		22-21-11	ALL
	K08		W1265	3111R	22		22-21-11	ALL
	K09		W1265	3111B	22		22-21-11	ALL
	K10		W1265	3112R	22		22-21-11	ALL
	K11	UNUSED						ALL
	K12		W1265	0251	22		27-61-13	ALL
	K13		W1265	0205	22		27-61-17	ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
D00703B		E003-01/ /		PLUG-				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07		W1265	0480	22		27-61-18	ALL
	A08	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 12

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00703B		E003-01/ /		PLUG- (continued)				ALL
	A09	UNUSED						ALL
	A10		W1265	2036B	22		27-09-11	ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13		W1265	0242	22		27-09-14	ALL
	A14	UNUSED						ALL
	A15		W1265	0217	22		27-09-11	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01		W1265	0250	22		27-61-13	ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05		W1265	0481	22		27-61-18	ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10		W1265	2036R	22		27-09-11	ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 13

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00703B		E003-01/ /		PLUG- (continued)				ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01		W1265	0249	22		27-61-13	ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15		W1265	0311	22		27-09-11	ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03		W1265	0442	22		27-61-13	ALL
	F04		W1265	0458	22		27-61-17	ALL
	F05		W1265	0469	22		27-61-18	ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 14

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00703B		E003-01/ /		PLUG- (continued)				ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03		W1265	0441	22		27-61-13	ALL
	H04		W1265	0457	22		27-61-17	ALL
	H05		W1265	0470	22		27-61-18	ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 15

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00703B		E003-01/ /		PLUG- (continued)				ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01		W1265	0455	22		27-61-17	ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13		W1265	0626	22		27-09-14	ALL
	K14	UNUSED						ALL
	K15		W1265	0616	22		27-09-11	ALL
D00703C		E003-01/ /		PLUG-				ALL
	1	UNUSED						ALL
	2		W1265	0410	16		27-09-11	ALL
	3		W1265	0412	16		27-09-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1265	0411	16		27-09-11	ALL
	8		W1265	0414	16		27-09-11	ALL
	9		W1265	0409	16		27-09-11	ALL
	10		W1265	0408	16		27-09-11	ALL
	11		W1265	0413	16		27-09-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 16

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00705A		E003-01/ /		PLUG-				ALL
	A01	UNUSED						ALL
	A02		W1265	0634	22		27-31-12	ALL
	A03		W1265	0635	22		27-31-12	ALL
	A04		W1265	0113	22		27-41-11	ALL
	A05		W1265	0117	22		27-41-11	ALL
	A06		W1265	0070	22		22-24-11	ALL
	A07		W1265	0270	22		27-31-12	ALL
	A08		W1265	0271	22		27-31-12	ALL
	A09		W1265	0329	22		22-24-11	ALL
	A10	UNUSED						ALL
	A11		W1265	5102R	24		22-24-11	ALL
	A12		W1265	5102B	24		22-24-11	ALL
	A13		W1265	0335Y	22		27-41-11	ALL
	A14		W1265	0338Y	22		27-41-11	ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04		W1265	0112	22		27-41-11	ALL
	B05		W1265	0116	22		27-41-11	ALL
	B06		W1265	0067	22		27-41-31	ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13		W1265	0380	22		27-41-11	ALL
	B14		W1265	0381	22		27-41-11	ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04		W1265	0110	22		27-41-11	ALL
	C05		W1265	0111	22		27-41-11	ALL
	C06	UNUSED						ALL
	C07		W1265	0366Y	22		27-41-11	ALL
	C08		W1265	0367Y	22		27-41-11	ALL
	C09		W1265	0368Y	22		27-41-11	ALL
	C10	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 17

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00705A		E003-01/ /		PLUG- (continued)				ALL
	C11		W1265	0328	22		22-24-11	ALL
	C12		W1265	0341	22		27-41-11	ALL
	C13	UNUSED						ALL
	C14		W1265	0330	22		22-24-11	ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04		W1265	0122Y	22		27-41-11	ALL
	D05		W1265	0123Y	22		27-41-11	ALL
	D06		W1265	0005	22		27-09-12	ALL
	D07		W1265	5001R	24		22-22-11	ALL
	D08		W1265	5001B	24		22-22-11	ALL
	D09		W1265	0059	22		22-22-11	ALL
	D10		W1265	0060	22		22-22-11	ALL
	D11		W1265	5005R	24		22-24-11	ALL
	D12		W1265	5005B	24		22-24-11	ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04		W1265	0114	22		27-41-11	ALL
	E05		W1265	0115	22		27-41-11	ALL
	E06	UNUSED						ALL
	E07		W1265	0034	22		27-31-12	ALL
	E08		W1265	0035	22		27-31-12	ALL
	E09		W1265	2025R	22		22-24-11	ALL
	E10		W1265	2025B	22		22-24-11	ALL
	E11		W1265	0064	22		22-24-11	ALL
	E12		W1265	0129	22		27-41-11	ALL
	E13	UNUSED						ALL
	E14		W1265	0221	22		27-09-12	ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04		W1265	3004R	22		27-41-11	ALL
	F05		W1265	3004B	22		27-41-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 18

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00705A		E003-01/ /		PLUG- (continued)				ALL
	F06		W1265	3004Y	22		27-41-11	ALL
	F07		W1265	0118Y	22		27-41-11	ALL
	F08		W1265	0119Y	22		27-41-11	ALL
	F09		W1265	0165Y	22		27-41-11	ALL
	F10		W1265	0166Y	22		27-41-11	ALL
	F11		W1265	0063	22		22-24-11	ALL
	F12		W1265	0128	22		27-41-11	ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04		W1265	3005R	22		27-41-11	ALL
	G05		W1265	3005B	22		27-41-11	ALL
	G06		W1265	3005Y	22		27-41-11	ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12		W1265	0061	22		22-22-11	ALL
	G13		W1265	0331	22		27-41-11	ALL
	G14		W1265	0332	22		27-41-11	ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04		W1265	3002R	22		27-41-11	ALL
	H05		W1265	3002B	22		27-41-11	ALL
	H06		W1265	3002Y	22		27-41-11	ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 19

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00705A		E003-01/ /		PLUG- (continued)				ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04		W1265	3003R	22		27-41-11	ALL
	J05		W1265	3003B	22		27-41-11	ALL
	J06		W1265	3003Y	22		27-41-11	ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12		W1265	0490	22		22-22-11	ALL
	J13		W1265	0333	22		27-41-11	ALL
	J14		W1265	0334	22		27-41-11	ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04		W1265	2001R	22		27-21-12	ALL
	K05		W1265	2001B	22		27-21-12	ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13		W1265	2120R	22		27-21-12	ALL
	K14		W1265	2120B	22		27-21-12	ALL
	K15		W1265	0262	22		27-21-12	ALL
	DED		W1265	5005Z			22-24-11	ALL
	DED		W1265	5102Z			22-24-11	ALL
D00705B		E003-01/ /		PLUG-				ALL
	A01		W1265	0025	22		27-31-12	ALL
	A02	UNUSED						ALL
	A03		W1265	0028	22		27-31-12	ALL
	A04		W1265	0027	22		27-31-12	ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 20

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00705B		E003-01/ /		PLUG- (continued)				ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11		W1265	0640	22		27-31-12	ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15		W1265	0622	22		27-09-14	ALL
	B01		W1265	0026	22		27-31-12	ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05		W1265	0694	22		22-22-11	ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11		W1265	0699	22		27-41-11	ALL
	C12		W1265	0698	22		22-24-11	ALL
	C13		W1265	0700	22		27-41-11	ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 21

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00705B		E003-01/ /		PLUG- (continued)				ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05		W1265	0327	22		22-22-11	ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04		W1265	0317	22		27-09-14	ALL
	F05		W1265	0014	22		27-09-13	ALL
	F06		W1265	0013	22		27-09-13	ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 22

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00705B		E003-01/ /		PLUG- (continued)				ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02		W1265	3108R	22		27-41-11	ALL
	G03		W1265	3108B	22		27-41-11	ALL
	G04		W1265	3108Y	22		27-41-11	ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08		W1265	0800	22		27-41-11	ALL
	G09		W1265	0801	22		27-41-11	ALL
	G10		W1265	0802	22		27-41-11	ALL
	G11		W1265	0803	22		27-41-11	ALL
	G12		W1265	0804	22		27-41-11	ALL
	G13		W1265	0805	22		27-41-11	ALL
	G14		W1265	0806	22		27-41-11	ALL
	G15		W1265	0807	22		27-41-11	ALL
	H01	UNUSED						ALL
	H02		W1265	3107R	22		27-41-11	ALL
	H03		W1265	3107B	22		27-41-11	ALL
	H04		W1265	3107Y	22		27-41-11	ALL
	H05		W1265	0425	22		27-09-13	ALL
	H06		W1265	0424	22		27-09-13	ALL
	H07	UNUSED						ALL
	H08		W1265	0501	22		27-41-11	ALL
	H09		W1265	0502	22		27-41-11	ALL
	H10	UNUSED						ALL
	H11		W1265	0500	22		27-41-11	ALL
	H12		W1265	0503	22		27-41-11	ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15		W1265	0493	22		22-24-11	ALL
	J01	UNUSED						ALL
	J02		W1265	3106R	22		27-41-11	ALL
	J03		W1265	3106B	22		27-41-11	ALL
	J04		W1265	3106Y	22		27-41-11	ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 23

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00705B		E003-01/ /		PLUG- (continued)				ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14		W1265	0485	22		22-22-11	ALL
	J15		W1265	0487	22		22-22-11	ALL
	K01	UNUSED						ALL
	K02		W1265	3105R	22		27-41-11	ALL
	K03		W1265	3105B	22		27-41-11	ALL
	K04		W1265	3105Y	22		27-41-11	ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12		W1265	0416	22		27-09-12	ALL
	K13	UNUSED						ALL
	K14		W1265	5205R	24		22-22-11	ALL
	K15		W1265	5205B	24		22-22-11	ALL
	DED		W1265	5205Z			22-22-11	ALL
D00705C		E003-01/ /		PLUG-				ALL
	1	UNUSED						ALL
	2		W1265	0495	22		27-41-11	ALL
	3		W1265	0494	22		27-41-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1265	0497	22		27-41-11	ALL
	8		W1265	0496	22		27-41-11	ALL
	9	UNUSED						ALL
	10		W1265	0499	22		27-41-11	ALL
	11		W1265	0498	22		27-41-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 24

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00705C		E003-01/ /		PLUG- (continued)				ALL
	=C12	UNUSED						ALL
	=C13	UNUSED						ALL
D00709A		E003-01/ /		PLUG PLATE ASSY-				ALL
	A01		W1265	0017	22		27-21-12	ALL
	A02		W1265	0019	22		27-21-12	ALL
	A03	UNUSED						ALL
	A04		W1265	2003B	22		27-21-22	ALL
	A05		W1265	2003R	22		27-21-22	ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09		W1265	2002R	22		27-21-12	ALL
	A10		W1265	2002B	22		27-21-12	ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15		W1265	0268	22		27-21-12	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08		W1265	3001R	22		27-21-12	ALL
	B09		W1265	3001B	22		27-21-12	ALL
	B10		W1265	3001Y	22		27-21-12	ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15		W1265	0269	22		27-21-12	ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06		W1265	0109	22		27-21-22	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 25

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00709A		E003-01/ /		PLUG PLATE ASSY- (continued)				ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15		W1265	0619	22		27-09-14	ALL
	D01		W1265	0018	22		27-21-12	ALL
	D02		W1265	0020	22		27-21-12	ALL
	D03	UNUSED						ALL
	D04		W1265	2001B	22		27-21-12	ALL
	D05		W1265	2001R	22		27-21-12	ALL
	D06	UNUSED						ALL
	D07		W1265	0001	22		27-09-12	ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12		W1265	0630	22		27-21-12	ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15		W1265	0267	22		27-21-12	ALL
D00709B		E003-01/ /		PLUG PLATE ASSY-				ALL
	A01		W1265	0106	22		27-21-22	ALL
	A02	UNUSED						ALL
	A03		W1265	0226	22		27-09-13	ALL
	A04		W1265	2118R	22		27-21-12	ALL
	A05		W1265	2118B	22		27-21-12	ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09		W1265	2119R	22		27-21-12	ALL
	A10		W1265	2119B	22		27-21-12	ALL
	A11	UNUSED						ALL
	A12		W1265	0258	22		27-21-12	ALL
	A13		W1265	0260	22		27-21-12	ALL
	A14		W1265	0631	22		27-21-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 26

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00709B		E003-01/ /		PLUG PLATE ASSY- (continued)				ALL
	A15	UNUSED						ALL
	B01		W1265	0108	22		27-21-22	ALL
	B02	UNUSED						ALL
	B03		W1265	0227	22		27-09-13	ALL
	B04		W1265	3101Y	22		27-21-12	ALL
	B05		W1265	3101B	22		27-21-12	ALL
	B06		W1265	3101R	22		27-21-12	ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15		W1265	0433	22		27-21-12	ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08		W1265	0266	22		27-21-12	ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15		W1265	0432	22		27-21-12	ALL
	D01		W1265	0107	22		27-21-22	ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04		W1265	0265	22		27-21-12	ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07		W1265	0219	22		27-09-12	ALL
	D08		W1265	0262	22		27-21-12	ALL
	D09		W1265	2120R	22		27-21-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 27

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00709B		E003-01/ /		PLUG PLATE ASSY- (continued)				ALL
	D10		W1265	2120B	22		27-21-12	ALL
	D11	UNUSED						ALL
	D12		W1265	0259	22		27-21-12	ALL
	D13		W1265	0261	22		27-21-12	ALL
	D14		W1265	0237	22		27-09-14	ALL
	D15		W1265	0431	22		27-21-12	ALL
D00709C		E003-01/ /		PLUG PLATE ASSY-				ALL
	1	UNUSED						ALL
	2		W1265	0436	16		27-21-12	ALL
	3		W1265	0434	16		27-21-12	ALL
	4		W1265	0435	16		27-21-12	ALL
	5	UNUSED						ALL
	= C1	UNUSED						ALL
	= C5	UNUSED						ALL
D00711A		E004-01/ /		PLUG-				001-099
D00711A		E4-1/ /		PLUG-				115-199
	A01		W1165	0089	22		27-21-22	ALL
	A02		W1165	0091	22		27-21-22	ALL
	A03	UNUSED						ALL
	A04		W1165	2124B	22		27-21-12	ALL
	A05		W1165	2124R	22		27-21-12	ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09		W1165	2030R	22		27-21-22	ALL
	A10		W1165	2030B	22		27-21-22	ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15		W1165	0099	22		27-21-22	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 28

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00711A		E004-01/ /		PLUG- (continued)				001-099
D00711A		E4-1/ /		PLUG- (continued)				115-199
	B08		W1165	3002R	22		27-21-22	ALL
	B09		W1165	3002B	22		27-21-22	ALL
	B10		W1165	3002Y	22		27-21-22	ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15		W1165	0100	22		27-21-22	ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06		W1165	0101	22		27-21-22	ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15		W1165	0624	22		27-09-14	ALL
	D01		W1165	0090	22		27-21-22	ALL
	D02		W1165	0092	22		27-21-22	ALL
	D03	UNUSED						ALL
	D04		W1165	2035B	22		27-21-22	ALL
	D05		W1165	2035R	22		27-21-22	ALL
	D06	UNUSED						ALL
	D07		W1165	0032	22		27-09-12	ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12		W1165	0652	22		27-21-12	ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15		W1165	0098	22		27-21-22	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 29

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00711B D00711B		E004-01/ / E4-1/ /		PLUG- PLUG-				001-099 115-199
	A01		W1165	0319	22		27-21-12	ALL
	A02	UNUSED						ALL
	A03		W1165	0261	22		27-09-13	ALL
	A04		W1165	2125R	22		27-21-22	ALL
	A05		W1165	2125B	22		27-21-22	ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09		W1165	2031R	22		27-21-22	ALL
	A10		W1165	2031B	22		27-21-22	ALL
	A11	UNUSED						ALL
	A12		W1165	0293	22		27-21-22	ALL
	A13		W1165	0295	22		27-21-22	ALL
	A14		W1165	0653	22		27-21-12	ALL
	A15	UNUSED						ALL
	B01		W1165	0321	22		27-21-12	ALL
	B02	UNUSED						ALL
	B03		W1165	0262	22		27-09-13	ALL
	B04		W1165	3101Y	22		27-21-22	ALL
	B05		W1165	3101B	22		27-21-22	ALL
	B06		W1165	3101R	22		27-21-22	ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15		W1165	0465	22		27-21-22	ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08		W1165	0318	22		27-21-12	ALL
	C09	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 30

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00711B		E004-01/ /		PLUG- (continued)				001-099
D00711B		E4-1/ /		PLUG- (continued)				115-199
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15		W1165	0464	22		27-21-22	ALL
	D01		W1165	0320	22		27-21-12	ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04		W1165	0317	22		27-21-12	ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07		W1165	0234	22		27-09-12	ALL
	D08		W1165	0093	22		27-21-22	ALL
	D09		W1165	2122R	22		27-21-22	ALL
	D10		W1165	2122B	22		27-21-22	ALL
	D11	UNUSED						ALL
	D12		W1165	0294	22		27-21-22	ALL
	D13		W1165	0296	22		27-21-22	ALL
	D14		W1165	0242	22		27-09-14	ALL
	D15		W1165	0514	22		27-21-22	ALL
D00711C		E004-01/ /		PLUG-				001-099
D00711C		E4-1/ /		PLUG-				115-199
	1	UNUSED						ALL
	2		W1165	0468	16		27-21-22	ALL
	3		W1165	0466	16		27-21-22	ALL
	4		W1165	0467	16		27-21-22	ALL
	5	UNUSED						ALL
	= C1	UNUSED						ALL
	= C5	UNUSED						ALL
D00715		FIN115/RS/L4.5		RCPT-				ALL
	1		W3103	0005	20		27-21-12	ALL
	2		W3103	3001R	20		27-21-12	ALL
	3		W3103	3001B	20		27-21-12	ALL
	4		W3103	3001Y	20		27-21-12	ALL
	5	UNUSED						ALL
	6		W3103	2001R	20		27-21-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 31

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00715		FIN115/RS/L4.5		RCPT- (continued)				ALL
	7		W3103	2001B	20		27-21-12	ALL
	CAP	Y	W3103	2005B	20		27-21-12	ALL
	CAP	Y	W3103	2005R	20		27-21-12	ALL
D00717		FIN115/RS/L3		RCPT-				ALL
	1		W3113	0004	20		27-21-22	ALL
	2		W3113	3001R	20		27-21-22	ALL
	3		W3113	3001B	20		27-21-22	ALL
	4		W3113	3001Y	20		27-21-22	ALL
	5	UNUSED						ALL
	6		W3113	2001R	20		27-21-22	ALL
	7		W3113	2001B	20		27-21-22	ALL
	CAP	Y	W3113	2005B	20		27-21-22	ALL
	CAP	Y	W3113	2005R	20		27-21-22	ALL
D00739		E4-4/ /		PLUG-				ALL
	1		W1161	0003	22		23-34-15	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1161	0060	22		23-34-15	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						001-099
	14		W1161	3001R	24		23-34-16	115-199
	15	UNUSED						001-099
	15		W1161	3001B	24		23-34-16	115-199
	16		W1161	0002	20		23-34-15	001-099
	16		W1161	0002	20		23-34-16	115-199
	17	UNUSED						001-099
	17		W1161	0005	20		23-34-16	115-199
	18	UNUSED						001-099
	18		W1161	3001Y	24		23-34-16	115-199
	19	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 32

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00739		E4-4/ /		PLUG- (continued)				ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W1161	2512R	22		23-34-15	ALL
	23		W1161	2512B	22		23-34-15	ALL
	24		W1161	2511R	22		23-34-15	ALL
	25		W1161	2511B	22		23-34-15	ALL
	26		W1161	2501R	22		23-34-15	ALL
	27		W1161	2501B	22		23-34-15	ALL
	28		W1161	2502R	22		23-34-15	ALL
	29		W1161	2502B	22		23-34-15	ALL
	30	UNUSED						ALL
	31	UNUSED						001-099
	31		W1161	0071	22		23-34-16	115-199
	32	UNUSED						001-099
	32		W1161	0073	22		23-34-16	115-199
	33	UNUSED						001-099
	33		W1161	0072	22		23-34-16	115-199
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						001-099
	41		W1161	2044R	22		23-34-16	115-199
	42	UNUSED						001-099
	42		W1161	2044B	22		23-34-16	115-199
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47		W1161	2503R	22		23-34-15	ALL
	48		W1161	2503B	22		23-34-15	ALL
	49		W1161	2505R	22		23-34-15	ALL
	50		W1161	2505B	22		23-34-15	ALL
	51		W1161	2504R	22		23-34-15	ALL
	52		W1161	2504B	22		23-34-15	ALL
	53		W1161	2506R	22		23-34-15	ALL
	54		W1161	2506B	22		23-34-15	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 33

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00739		E4-4/ /		PLUG- (continued)				ALL
	55	UNUSED						ALL
	56		W1161	0052	24		23-34-15	ALL
	57	UNUSED						ALL
	58	UNUSED						ALL
	59	UNUSED						ALL
	60		W1161	2507R	22		23-34-15	ALL
	61		W1161	2507B	22		23-34-15	ALL
	62		W1161	2509R	22		23-34-15	ALL
	63		W1161	2509B	22		23-34-15	ALL
	64		W1161	2508R	22		23-34-15	ALL
	65		W1161	2508B	22		23-34-15	ALL
	66		W1161	2510R	22		23-34-15	ALL
	67		W1161	2510B	22		23-34-15	ALL
	DED		W1161	2501Z			23-34-15	ALL
	DED		W1161	2502Z			23-34-15	ALL
	DED		W1161	2503Z			23-34-15	ALL
	DED		W1161	2504Z			23-34-15	ALL
	DED		W1161	2505Z			23-34-15	ALL
	DED		W1161	2506Z			23-34-15	ALL
	DED		W1161	2507Z			23-34-15	ALL
	DED		W1161	2508Z			23-34-15	ALL
	DED		W1161	2509Z			23-34-15	ALL
	DED		W1161	2510Z			23-34-15	ALL
	DED		W1161	2511Z			23-34-15	ALL
	DED		W1161	2512Z			23-34-15	ALL
D00749		E3-3/ /		PLUG				001-099
D00749		E3-3/ /		PLUG-				115-199
	1		W1433	0101	24		31-31-65	001-099
	1		W1433	0101	24		31-31-21	115-199
	2		W1433	0102	24		31-31-65	001-099
	2		W1433	0102	24		31-31-21	115-199
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	VP	W1433	0107	24		31-31-65	001-099
	7		W1433	0107	24		31-31-21	115-199
	8		W1433	0108	24		31-31-65	001-002
	8	VP	W1433	0108	24		31-31-65	003-099

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 34

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00749		E3-3/ /		PLUG (continued)				001-099
D00749		E3-3/ /		PLUG- (continued)				115-199
	8	UNUSED						115-199
	9		W1433	0109	24		31-31-65	001-002
	9	VP	W1433	0109	24		31-31-65	003-099
	9	UNUSED						115-199
	10		W1433	0110	24		31-31-65	001-002
	10	VP	W1433	0110	24		31-31-65	003-099
	10	UNUSED						115-199
	11		W1433	0111	24		31-31-65	001-003, 005, 007, 009, 011-099
	11	VP	W1433	0111	24		31-31-65	004, 006, 008, 010
	11	VP	W1433	0111	24		31-31-21	115-199
	12		W1433	0112	24		31-31-65	001-003, 006-007, 010-099
	12	VP	W1433	0112	24		31-31-65	004-005, 008-009
	12		W1433	0112	24		31-31-21	115-199
	13		W1433	0113	24		31-31-65	001-002, 004-007
	13	VP	W1433	0113	24		31-31-65	003, 008-099
	13	VP	W1433	0113	24		31-31-21	115-199
	14	VP	W1433	0114	24		31-31-65	001-007
	14		W1433	0114	24		31-31-65	008-099
	14	VP	W1433	0114	24		31-31-21	115-199
	15	VP	W1433	0115	24		31-31-65	001-099
	15		W1433	0115	24		31-31-21	115-199
	16	VP	W1433	0116	24		31-31-65	001-099
	16	VP	W1433	0116	24		31-31-21	115-199
	17	VP	W1433	0117	24		31-31-65	001-099
	17	VP	W1433	0117	24		31-31-21	115-199
	18	VP	W1433	0118	24		31-31-65	001-099
	18		W1433	0118	24		31-31-21	115-199
	19		W1433	0119	24		31-31-65	001-099
	19		W1433	0119	24		31-31-21	115-199
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 35

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00749		E3-3/ /		PLUG (continued)				001-099
D00749		E3-3/ /		PLUG- (continued)				115-199
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D00751		E3-3/ /		PLUG-				ALL
	1	VP	W1433	0001	24		34-53-12	001-099
	1		W1433	0001	24		34-53-12	115-199
	2		W1433	0002	24		34-53-12	001, 004-099
	2	VP	W1433	0002	24		34-53-12	002-003, 115-199
	3	VP	W1433	0003	24		34-53-12	001-004, 006, 009-099
	3		W1433	0003	24		34-53-12	005, 007-008, 115-199
	4	VP	W1433	0004	24		34-53-12	001-004, 006, 009-099, 115-199
	4		W1433	0004	24		34-53-12	005, 007-008
	5	VP	W1433	0005	24		34-53-12	001, 009
	5		W1433	0005	24		34-53-12	002-008, 010-099, 115-199
	6	VP	W1433	0006	24		34-53-12	001, 005, 007-009, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 36

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00751		E3-3/ /		PLUG- (continued)				ALL
	6		W1433	0006	24		34-53-12	002-004, 006, 010-099
	7	VP	W1433	0007	24		34-53-12	001-099
	7		W1433	0007	24		34-53-12	115-199
	8	VP	W1433	0008	24		34-53-12	001, 004-099, 115-199
	8		W1433	0008	24		34-53-12	002-003
	9	VP	W1433	0009	24		34-53-12	001-003, 005, 007-009, 115-199
	9		W1433	0009	24		34-53-12	004, 006, 010-099
	10	VP	W1433	0010	24		34-53-12	ALL
	11	VP	W1433	0011	24		34-53-12	001-003, 005, 007-009
	11		W1433	0011	24		34-53-12	004, 006, 010-099, 115-199
	12	VP	W1433	0012	24		34-53-12	001-099
	12		W1433	0012	24		34-53-12	115-199
	13	VP	W1433	0013	24		34-53-12	ALL
	14		W1433	0014	24		34-53-12	001, 009, 115-199
	14	VP	W1433	0014	24		34-53-12	002-008, 010-099
	15	VP	W1433	0015	24		34-53-12	ALL
	16	VP	W1433	0016	24		34-53-12	001-008, 010-099, 115-199
	16		W1433	0016	24		34-53-12	009
	17		W1433	0017	24		34-53-12	001
	17	VP	W1433	0017	24		34-53-12	002-099, 115-199
	18		W1433	0018	24		34-53-12	001, 004, 006, 010-099, 115-199
	18	VP	W1433	0018	24		34-53-12	002-003, 005, 007-009
	19		W1433	0019	24		34-53-12	001-003, 005, 007-099, 115-199
	19	VP	W1433	0019	24		34-53-12	004, 006
	20		W1433	0020	24		34-53-12	001, 003, 005, 009
	20	VP	W1433	0020	24		34-53-12	002, 004, 006-008, 010-099, 115-199
	21	VP	W1433	0021	24		34-53-12	001-002, 004-005, 009
	21		W1433	0021	24		34-53-12	003, 006-008, 010-099, 115-199
	22	VP	W1433	0022	24		34-53-12	001-002, 005-006, 009-099
	22		W1433	0022	24		34-53-12	003-004, 007-008, 115-199
	23	VP	W1433	0023	24		34-53-12	001, 003, 006-007, 010-099
	23		W1433	0023	24		34-53-12	002, 004-005, 008-009, 115-199
	24	VP	W1433	0024	24		34-53-12	001-002, 005-006, 008, 010, 115-199
	24		W1433	0024	24		34-53-12	003-004, 007, 009, 011-099
	25		W1433	0025	24		34-53-12	ALL
	26	UNUSED						ALL
	27	UNUSED						001-099
	27		W1433	0054	24		34-53-12	115-199
	28	UNUSED						001-099
	28		W1433	0055	24		34-53-12	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 37

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00751		E3-3/ /		PLUG- (continued)				ALL
	29	UNUSED						001-099
	29		W1433	0034	22		34-53-11	115-199
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D00753		E003-02/ /		PLUG-				001-099
D00753		E3-2/ /		PLUG-				115-199
	1	VP	W1423	0001	24		34-53-22	001-099
	1		W1423	0001	24		34-53-22	115-199
	2		W1423	0002	24		34-53-22	001, 004-099
	2	VP	W1423	0002	24		34-53-22	002-003, 115-199
	3	VP	W1423	0003	24		34-53-22	001-004, 006, 009-099
	3		W1423	0003	24		34-53-22	005, 007-008, 115-199
	4	VP	W1423	0004	24		34-53-22	001-004, 006, 009-099, 115-199
	4		W1423	0004	24		34-53-22	005, 007-008
	5	VP	W1423	0005	24		34-53-22	001, 009

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 38

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00753		E003-02/ /		PLUG- (continued)				001-099
D00753		E3-2/ /		PLUG- (continued)				115-199
	5		W1423	0005	24		34-53-22	002-008, 010-099, 115-199
	6	VP	W1423	0006	24		34-53-22	001, 005, 007-009, 115-199
	6		W1423	0006	24		34-53-22	002-004, 006, 010-099
	7	VP	W1423	0007	24		34-53-22	001-099
	7		W1423	0007	24		34-53-22	115-199
	8	VP	W1423	0008	24		34-53-22	001, 004-099, 115-199
	8		W1423	0008	24		34-53-22	002-003
	9	VP	W1423	0009	24		34-53-22	001-003, 005, 007-009, 115-199
	9		W1423	0009	24		34-53-22	004, 006, 010-099
	10	VP	W1423	0010	24		34-53-22	ALL
	11	VP	W1423	0011	24		34-53-22	001-003, 005, 007-009
	11		W1423	0011	24		34-53-22	004, 006, 010-099, 115-199
	12	VP	W1423	0012	24		34-53-22	001-099
	12		W1423	0012	24		34-53-22	115-199
	13	VP	W1423	0013	24		34-53-22	ALL
	14		W1423	0014	24		34-53-22	001, 009, 115-199
	14	VP	W1423	0014	24		34-53-22	002-008, 010-099
	15	VP	W1423	0015	24		34-53-22	ALL
	16	VP	W1423	0016	24		34-53-22	001-008, 010-099, 115-199
	16		W1423	0016	24		34-53-22	009
	17		W1423	0017	24		34-53-22	001
	17	VP	W1423	0017	24		34-53-22	002-099, 115-199
	18		W1423	0018	24		34-53-22	001, 004, 006, 010-099, 115-199
	18	VP	W1423	0018	24		34-53-22	002-003, 005, 007-009
	19		W1423	0019	24		34-53-22	001-003, 005, 007-099, 115-199
	19	VP	W1423	0019	24		34-53-22	004, 006
	20		W1423	0020	24		34-53-22	001, 003, 005, 009
	20	VP	W1423	0020	24		34-53-22	002, 004, 006-008, 010-099, 115-199
	21	VP	W1423	0021	24		34-53-22	001-002, 004-005, 009
	21		W1423	0021	24		34-53-22	003, 006-008, 010-099, 115-199
	22	VP	W1423	0022	24		34-53-22	001-002, 005-006, 009-099
	22		W1423	0022	24		34-53-22	003-004, 007-008, 115-199
	23	VP	W1423	0023	24		34-53-22	001, 003, 006-007, 010-099
	23		W1423	0023	24		34-53-22	002, 004-005, 008-009, 115-199
	24	VP	W1423	0024	24		34-53-22	001-002, 005-006, 008, 010, 115-199
	24		W1423	0024	24		34-53-22	003-004, 007, 009, 011-099
	25		W1423	0025	24		34-53-22	ALL
	26	UNUSED						ALL
	27	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 39

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00753		E003-02/ /		PLUG- (continued)				001-099
D00753		E3-2/ /		PLUG- (continued)				115-199
	27		W1423	0054	24		34-53-22	115-199
	28	UNUSED						001-099
	28		W1423	0055	24		34-53-22	115-199
	29	UNUSED						001-099
	29		W1423	0027	24		34-53-22	115-199
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D00755		E4-2/ /		EICAS L SHORTING RCPT-				001-099
D00755		E4-2/ /		EICAS R SHORTING RCPT-				115-199
	1	VJ	W1275	5902	24		31-41-14	001-099
	1		W1275	5902	24		31-41-14	115-199
	2	VP	W1275	5903	24		31-41-14	ALL
	3	VJ	W1275	5904	24		31-41-14	001-099
	3		W1275	5904	24		31-41-14	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 40

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00755		E4-2/ /		EICAS L SHORTING RCPT- (continued)				001-099
D00755		E4-2/ /		EICAS R SHORTING RCPT- (continued)				115-199
	4	VP	W1275	5905	24		31-41-14	ALL
	5	VJ	W1275	5906	24		31-41-14	001-099
	5		W1275	5906	24		31-41-14	115-199
	6	VJ	W1275	5891	24		31-41-14	001-099
	6		W1275	5891	24		31-41-14	115-199
	7	VP	W1275	5892	24		31-41-14	ALL
	8	VJ	W1275	5893	24		31-41-14	001-099
	8		W1275	5893	24		31-41-14	115-199
	9	VP	W1275	5894	24		31-41-14	ALL
	10	VP	W1275	5895	24		31-41-14	ALL
	11	VP	W1275	5908	24		31-41-14	ALL
	12	VP	W1275	5909	24		31-41-14	ALL
	13	VP	W1275	5896	24		31-41-14	ALL
	14	VP	W1275	5897	24		31-41-14	ALL
	15	VP	W1275	5898	24		31-41-14	ALL
	16	VP	W1275	5899	24		31-41-14	ALL
	17	VP	W1275	5900	24		31-41-14	ALL
	18	VP	W1275	5901	24		31-41-14	ALL
	19	VP	W1275	5910	24		31-41-14	ALL
	20	VP	W1275	5907	24		31-41-14	ALL
	21	VP	W1275	6098	24		31-41-14	ALL
	22	VP	W1275	6099	24		31-41-14	ALL
	23	VP	W1275	6100	24		31-41-14	ALL
	24	VP	W1275	6101	24		31-41-14	ALL
	25	VP	W1275	6102	24		31-41-14	ALL
	26	VP	W1275	6103	24		31-41-14	ALL
	27	VP	W1275	6104	24		31-41-14	ALL
	28	VP	W1275	6105	24		31-41-14	ALL
	29	VP	W1275	6108	24		31-41-14	ALL
	30	VJ	W1275	6109	24		31-41-14	001-099
	30		W1275	6109	24		31-41-14	115-199
	31	VP	W1275	6106	24		31-41-14	ALL
	32	VJ	W1275	6107	24		31-41-14	001-099
	32		W1275	6107	24		31-41-14	115-199
	33	VJ	W1275	5911	22		31-41-14	001-099
	33		W1275	5911	22		31-41-14	115-199
	34	VP	W1275	5963	24		31-41-34	ALL
	35	VP	W1275	5964	24		31-41-34	ALL
	36	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 41

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00755		E4-2/ /		EICAS L SHORTING RCPT- (continued)				001-099
D00755		E4-2/ /		EICAS R SHORTING RCPT- (continued)				115-199
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D00757		E4-2/ /		EICAS R SHORTING RCPT-				001-099
D00757		E4-2/ /		EICAS L SHORTING RCPT-				115-199
	1	VJ	W1275	5936	24		31-41-24	ALL
	2	VP	W1275	5937	24		31-41-24	ALL
	3	VJ	W1275	5938	24		31-41-24	ALL
	4	VP	W1275	5939	24		31-41-24	ALL
	5	VP	W1275	5940	24		31-41-24	ALL
	6	VJ	W1275	5925	24		31-41-24	ALL
	7	VP	W1275	5926	24		31-41-24	ALL
	8	VJ	W1275	5927	24		31-41-24	ALL
	9	VP	W1275	5928	24		31-41-24	ALL
	10	VP	W1275	5929	24		31-41-24	ALL
	11	VP	W1275	5942	24		31-41-24	ALL
	12	VP	W1275	5943	24		31-41-24	ALL
	13	VP	W1275	5930	24		31-41-24	ALL
	14	VP	W1275	5931	24		31-41-24	ALL
	15	VP	W1275	5932	24		31-41-24	ALL
	16	VP	W1275	5933	24		31-41-24	ALL
	17	VP	W1275	5934	24		31-41-24	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 42

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00757		E4-2/ /		EICAS R SHORTING RCPT- (continued)				001-099
D00757		E4-2/ /		EICAS L SHORTING RCPT- (continued)				115-199
	18	VP	W1275	5935	24		31-41-24	ALL
	19	VP	W1275	5944	24		31-41-24	ALL
	20	VP	W1275	5941	24		31-41-24	ALL
	21	VP	W1275	6110	24		31-41-24	ALL
	22	VP	W1275	6111	24		31-41-24	ALL
	23	VP	W1275	6112	24		31-41-24	ALL
	24	VP	W1275	6113	24		31-41-24	ALL
	25	VP	W1275	6114	24		31-41-24	ALL
	26	VP	W1275	6115	24		31-41-24	ALL
	27	VP	W1275	6116	24		31-41-24	ALL
	28	VP	W1275	6117	24		31-41-24	ALL
	29	VP	W1275	6120	24		31-41-24	ALL
	30	VJ	W1275	6121	24		31-41-24	ALL
	31	VP	W1275	6118	24		31-41-24	ALL
	32	VP	W1275	6119	24		31-41-24	ALL
	33	VJ	W1275	5945	22		31-41-24	ALL
	34	VP	W1275	5965	24		31-41-34	ALL
	35	VP	W1275	5966	24		31-41-34	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 43

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00759		MULTI/ /		RELAY SOCKET-				ALL
	1	UNUSED						ALL
	2		W0514	2001B	22		23-31-42	ALL
	3		W0514	0012WB	20		23-31-42	001-099
	3		W0514	0015BK	20		23-31-42	115-199
	4		W0514	2002B	22		23-31-42	ALL
	5	UNUSED						ALL
	6		W0514	2001R	22		23-31-42	ALL
	7		W0514	0030Y	20		23-31-42	001-099
	7		W0514	0030K	20		23-31-42	115-199
	8		W0514	2002R	22		23-31-42	ALL
D00761		P061-00/ /		RCPT-				ALL
	1		W0069	0025	22		31-31-01	001-099
	1		W0069	0025	22		31-31-12	115-199
	2		W0069	0024	22		31-31-01	001-099
	2		W0069	0024	22		31-31-12	115-199
	3		W0069	FRAA			31-31-01	001-099
	3		W0069	FRAD			31-31-12	115-199
	4		W0069	5002R	24		31-31-01	001-099
	4		W0069	5005R	24		31-31-12	115-199
	5		W0069	5002B	24		31-31-01	001-099
	5		W0069	5005B	24		31-31-12	115-199
	6		W0069	5003R	24		SPARE	001-099
	6		W0069	5006R	24		31-31-12	115-199
	7		W0069	5003B	24		SPARE	001-099
	7		W0069	5006B	24		31-31-12	115-199
	8		W0069	5004R	24		31-31-01	001-099
	8		W0069	5013R	24		31-31-12	115-199
	9		W0069	5004B	24		31-31-01	001-099
	9		W0069	5013B	24		31-31-12	115-199
	10		W0069	0026	20		31-31-01	001-099
	10		W0069	0026	20		31-31-12	115-199
	11		W0069	0011	22		31-31-01	001-099
	11		W0069	0011	22		31-31-12	115-199
	12		W0069	5001R	24		SPARE	001-099
	12		W0069	5004R	24		31-31-12	115-199
	13		W0069	5001B	24		SPARE	001-099
	13		W0069	5004B	24		31-31-12	115-199
	14		W0069	0012	24		31-31-01	001-099
	14		W0069	0014	24		31-31-12	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 44

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00761		P061-00/ /		RCPT- (continued)				ALL
	15		W0069	0013	24		31-31-01	001-099
	15		W0069	0015	24		31-31-12	115-199
			W0069	0027	20		31-31-01	001-099
			W0069	5001Z			SPARE	001-099
			W0069	5002Z			31-31-01	001-099
			W0069	5003Z			SPARE	001-099
			W0069	5004Z			31-31-01	001-099
			W0069	FRAA			31-31-01	001-099
			W0069	5004Z			31-31-12	115-199
			W0069	5005Z			31-31-12	115-199
			W0069	5006Z			31-31-12	115-199
			W0069	FRAD			31-31-12	115-199
D00763		P8/ /		PLUG				115-199
	1		W2295	0016	20		33-13-52	115-199
	2		W2295	0017	20		33-13-52	115-199
	3		W2295	0020	24		23-51-51	115-199
	4		W2295	0019	24		23-51-51	115-199
	5		W2295	0018	24		23-51-51	115-199
D00765		352/290/L35		RCPT-				115-199
	1		W3525	4254R	24		23-42-11	115-199
	2		W3525	4254Z			23-42-11	115-199
	3		W3525	4254B	24		23-42-11	115-199
	4		W3525	4254Y	24		23-42-11	115-199
	5		W3525	4254G	24		23-42-11	115-199
D00767		1638/ /		JACK-				ALL
	1		W0507	4252R	22		23-42-11	ALL
	2		W0507	4252Z			23-42-11	ALL
	3		W0507	4252B	22		23-42-11	ALL
	4		W0507	4252Y	22		23-42-11	ALL
	5		W0507	4252G	22		23-42-11	ALL
D00771		P001-3/ /		PLUG				115-199
	1		W0001	0142	20		33-13-12	115-199
	2		W0001	0088	20		33-13-12	115-199
	3		W0001	0407	20		34-22-83	115-199
	4	UNUSED						115-199
	5	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 45

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00771		P001-3/ /		PLUG (continued)				115-199
	6		W0001	0408	20		34-22-83	115-199
	7	UNUSED						115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10		W0001	0504	24		34-22-83	115-199
	11	UNUSED						115-199
	12		W0001	0503	24		34-22-83	115-199
	13	UNUSED						115-199
	14		W0001	0502	24		34-22-83	115-199
	15	UNUSED						115-199
	16		W0001	0405	24		34-22-83	115-199
	17		W0001	0492	22		34-22-36	115-199
	18		W0001	5038R	24		34-22-83	115-199
	19		W0001	5038B	24		34-22-83	115-199
	20	UNUSED						115-199
	21		W0001	0501	24		34-22-83	115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31		W0001	5044R	24		34-22-83	115-199
	32		W0001	5044B	24		34-22-83	115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38		W0001	5036R	24		34-22-83	115-199
	39		W0001	5036B	24		34-22-83	115-199
	40	UNUSED						115-199
	41		W0001	5032R	24		34-22-83	115-199
	42		W0001	5032B	24		34-22-83	115-199
	43	UNUSED						115-199
	44		W0001	5039R	24		34-22-83	115-199
	45		W0001	5039B	24		34-22-83	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 46

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00771		P001-3/ /		PLUG (continued)				115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48		W0001	5034R	24		34-22-83	115-199
	49		W0001	5034B	24		34-22-83	115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54		W0001	0304	24		34-22-83	115-199
	55		W0001	0345	20		34-22-83	115-199
	DED		W0001	5032Z			34-22-83	115-199
	DED		W0001	5034Z			34-22-83	115-199
	DED		W0001	5036Z			34-22-83	115-199
	DED		W0001	5038Z			34-22-83	115-199
	DED		W0001	5039Z			34-22-83	115-199
	DED		W0001	5044Z			34-22-83	115-199
D00773		P001-3/ /		PLUG				115-199
	1		W0001	0309	24		34-22-83	115-199
	2		W0001	0312	20		34-22-83	115-199
	3	UNUSED						115-199
	4		W0001	0504	24		34-22-83	115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7		W0001	0503	24		34-22-83	115-199
	8		W0001	0506	24		34-22-83	115-199
	9	UNUSED						115-199
	10		W0001	0505	20		34-22-83	115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
D00775		P001-3/ /		PLUG				115-199
	1		W0001	0559	20		33-13-11	115-199
	2		W0001	0660	20		33-13-11	115-199
	3	UNUSED						115-199
	4		W0001	0502	24		34-22-83	115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7		W0001	0501	24		34-22-83	115-199
	8		W0001	0509	24		34-22-83	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 47

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00775		P001-3/ /		PLUG (continued)				115-199
	9	UNUSED						115-199
	10		W0001	0510	20		34-22-83	115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
D00777A		E3-3/ /		PLUG-				115-199
	A01		W1433	5032R	24		31-31-13	115-199
	A02		W1433	5032B	24		31-31-13	115-199
	A03	UNUSED						115-199
	A04	UNUSED						115-199
	A05		W1433	0152	22		31-31-13	115-199
	A06	UNUSED						115-199
	A07	UNUSED						115-199
	A08	UNUSED						115-199
	A09	UNUSED						115-199
	A10	UNUSED						115-199
	A11	UNUSED						115-199
	A12	UNUSED						115-199
	A13	UNUSED						115-199
	A14	UNUSED						115-199
	A15	UNUSED						115-199
	B01	UNUSED						115-199
	B02	UNUSED						115-199
	B03	UNUSED						115-199
	B04	UNUSED						115-199
	B05	UNUSED						115-199
	B06	UNUSED						115-199
	B07	UNUSED						115-199
	B08	UNUSED						115-199
	B09	UNUSED						115-199
	B10	UNUSED						115-199
	B11	UNUSED						115-199
	B12	UNUSED						115-199
	B13	UNUSED						115-199
	B14	UNUSED						115-199
	B15	UNUSED						115-199
	C01	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 48

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00777A		E3-3/ /		PLUG- (continued)				115-199
	C02	UNUSED						115-199
	C03	UNUSED						115-199
	C04	UNUSED						115-199
	C05	UNUSED						115-199
	C06	UNUSED						115-199
	C07	UNUSED						115-199
	C08	UNUSED						115-199
	C09	UNUSED						115-199
	C10	UNUSED						115-199
	C11	UNUSED						115-199
	C12	UNUSED						115-199
	C13	UNUSED						115-199
	C14	UNUSED						115-199
	C15	UNUSED						115-199
	D01		W1433	5033R	24		31-31-13	115-199
	D02		W1433	5033B	24		31-31-13	115-199
	D03	UNUSED						115-199
	D04	UNUSED						115-199
	D05	UNUSED						115-199
	D06	UNUSED						115-199
	D07	UNUSED						115-199
	D08	UNUSED						115-199
	D09	UNUSED						115-199
	D10	UNUSED						115-199
	D11	UNUSED						115-199
	D12	UNUSED						115-199
	D13	UNUSED						115-199
	D14	UNUSED						115-199
	D15	UNUSED						115-199
	E01	UNUSED						115-199
	E02	UNUSED						115-199
	E03	UNUSED						115-199
	E04	UNUSED						115-199
	E05	UNUSED						115-199
	E06	UNUSED						115-199
	E07	UNUSED						115-199
	E08	UNUSED						115-199
	E09	UNUSED						115-199
	E10	UNUSED						115-199
	E11	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 49

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00777A		E3-3/ /		PLUG- (continued)				115-199
	E12	UNUSED						115-199
	E13	UNUSED						115-199
	E14	UNUSED						115-199
	E15	UNUSED						115-199
	F01	UNUSED						115-199
	F02	UNUSED						115-199
	F03	UNUSED						115-199
	F04	UNUSED						115-199
	F05	UNUSED						115-199
	F06	UNUSED						115-199
	F07	UNUSED						115-199
	F08	UNUSED						115-199
	F09	UNUSED						115-199
	F10	UNUSED						115-199
	F11	UNUSED						115-199
	F12	UNUSED						115-199
	F13	UNUSED						115-199
	F14	UNUSED						115-199
	F15	UNUSED						115-199
	G01		W1433	5034R	24		31-31-13	115-199
	G02		W1433	5034B	24		31-31-13	115-199
	G03	UNUSED						115-199
	G04	UNUSED						115-199
	G05	UNUSED						115-199
	G06	UNUSED						115-199
	G07	UNUSED						115-199
	G08	UNUSED						115-199
	G09	UNUSED						115-199
	G10	UNUSED						115-199
	G11	UNUSED						115-199
	G12	UNUSED						115-199
	G13	UNUSED						115-199
	G14	UNUSED						115-199
	G15	UNUSED						115-199
	H01	UNUSED						115-199
	H02	UNUSED						115-199
	H03	UNUSED						115-199
	H04	UNUSED						115-199
	H05	UNUSED						115-199
	H06	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 50

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00777A		E3-3/ /		PLUG- (continued)				115-199
	H07	UNUSED						115-199
	H08	UNUSED						115-199
	H09	UNUSED						115-199
	H10	UNUSED						115-199
	H11	UNUSED						115-199
	H12	UNUSED						115-199
	H13	UNUSED						115-199
	H14	UNUSED						115-199
	H15	UNUSED						115-199
	J01	UNUSED						115-199
	J02	UNUSED						115-199
	J03	UNUSED						115-199
	J04	UNUSED						115-199
	J05	UNUSED						115-199
	J06	UNUSED						115-199
	J07	UNUSED						115-199
	J08	UNUSED						115-199
	J09	UNUSED						115-199
	J10	UNUSED						115-199
	J11	UNUSED						115-199
	J12	UNUSED						115-199
	J13	UNUSED						115-199
	J14	UNUSED						115-199
	J15	UNUSED						115-199
	K01		W1433	5035R	24		31-31-13	115-199
	K02		W1433	5035B	24		31-31-13	115-199
	K03	UNUSED						115-199
	K04	UNUSED						115-199
	K05		W1433	0153	22		31-31-13	115-199
	K06	UNUSED						115-199
	K07	UNUSED						115-199
	K08	UNUSED						115-199
	K09	UNUSED						115-199
	K10	UNUSED						115-199
	K11	UNUSED						115-199
	K12	UNUSED						115-199
	K13	UNUSED						115-199
	K14	UNUSED						115-199
	K15	UNUSED						115-199
	DED		W1433	5032Z			31-31-13	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 51

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00777A		E3-3/ /		PLUG- (continued)				115-199
	DED		W1433	5033Z			31-31-13	115-199
	DED		W1433	5034Z			31-31-13	115-199
	DED		W1433	5035Z			31-31-13	115-199
D00777B		E3-3/ /		PLUG-				115-199
	A01	UNUSED						115-199
	A02	UNUSED						115-199
	A03	UNUSED						115-199
	A04	UNUSED						115-199
	A05	UNUSED						115-199
	A06	UNUSED						115-199
	A07	UNUSED						115-199
	A08	UNUSED						115-199
	A09	UNUSED						115-199
	A10	UNUSED						115-199
	A11	UNUSED						115-199
	A12	UNUSED						115-199
	A13	UNUSED						115-199
	A14	UNUSED						115-199
	A15	UNUSED						115-199
	B01	UNUSED						115-199
	B02	UNUSED						115-199
	B03	UNUSED						115-199
	B04	UNUSED						115-199
	B05	UNUSED						115-199
	B06	UNUSED						115-199
	B07	UNUSED						115-199
	B08	UNUSED						115-199
	B09	UNUSED						115-199
	B10	UNUSED						115-199
	B11	UNUSED						115-199
	B12	UNUSED						115-199
	B13	UNUSED						115-199
	B14	UNUSED						115-199
	B15	UNUSED						115-199
	C01	UNUSED						115-199
	C02	UNUSED						115-199
	C03	UNUSED						115-199
	C04	UNUSED						115-199
	C05	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 52

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00777B		E3-3/ /		PLUG- (continued)				115-199
	C06	UNUSED						115-199
	C07	UNUSED						115-199
	C08	UNUSED						115-199
	C09	UNUSED						115-199
	C10	UNUSED						115-199
	C11	UNUSED						115-199
	C12	UNUSED						115-199
	C13	UNUSED						115-199
	C14	UNUSED						115-199
	C15	UNUSED						115-199
	D01	UNUSED						115-199
	D02	UNUSED						115-199
	D03	UNUSED						115-199
	D04	UNUSED						115-199
	D05	UNUSED						115-199
	D06	UNUSED						115-199
	D07	UNUSED						115-199
	D08	UNUSED						115-199
	D09	UNUSED						115-199
	D10	UNUSED						115-199
	D11	UNUSED						115-199
	D12	UNUSED						115-199
	D13	UNUSED						115-199
	D14	UNUSED						115-199
	D15	UNUSED						115-199
	E01	UNUSED						115-199
	E02	UNUSED						115-199
	E03	UNUSED						115-199
	E04	UNUSED						115-199
	E05	UNUSED						115-199
	E06	UNUSED						115-199
	E07	UNUSED						115-199
	E08	UNUSED						115-199
	E09	UNUSED						115-199
	E10	UNUSED						115-199
	E11	UNUSED						115-199
	E12	UNUSED						115-199
	E13	UNUSED						115-199
	E14	UNUSED						115-199
	E15	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 53

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00777B		E3-3/ /		PLUG- (continued)				115-199
	F01	UNUSED						115-199
	F02	UNUSED						115-199
	F03	UNUSED						115-199
	F04	UNUSED						115-199
	F05	UNUSED						115-199
	F06	UNUSED						115-199
	F07	UNUSED						115-199
	F08	UNUSED						115-199
	F09	UNUSED						115-199
	F10	UNUSED						115-199
	F11	UNUSED						115-199
	F12	UNUSED						115-199
	F13	UNUSED						115-199
	F14	UNUSED						115-199
	F15	UNUSED						115-199
	G01	UNUSED						115-199
	G02	UNUSED						115-199
	G03	UNUSED						115-199
	G04	UNUSED						115-199
	G05	UNUSED						115-199
	G06	UNUSED						115-199
	G07	UNUSED						115-199
	G08	UNUSED						115-199
	G09	UNUSED						115-199
	G10	UNUSED						115-199
	G11	UNUSED						115-199
	G12	UNUSED						115-199
	G13	UNUSED						115-199
	G14	UNUSED						115-199
	G15	UNUSED						115-199
	H01	UNUSED						115-199
	H02	UNUSED						115-199
	H03	UNUSED						115-199
	H04	UNUSED						115-199
	H05	UNUSED						115-199
	H06	UNUSED						115-199
	H07	UNUSED						115-199
	H08	UNUSED						115-199
	H09	UNUSED						115-199
	H10	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 54

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00777B		E3-3/ /		PLUG- (continued)				115-199
	H11	UNUSED						115-199
	H12	UNUSED						115-199
	H13	UNUSED						115-199
	H14	UNUSED						115-199
	H15	UNUSED						115-199
	J01	UNUSED						115-199
	J02	UNUSED						115-199
	J03	UNUSED						115-199
	J04	UNUSED						115-199
	J05	UNUSED						115-199
	J06	UNUSED						115-199
	J07	UNUSED						115-199
	J08	UNUSED						115-199
	J09	UNUSED						115-199
	J10	UNUSED						115-199
	J11	UNUSED						115-199
	J12	UNUSED						115-199
	J13	UNUSED						115-199
	J14	UNUSED						115-199
	J15	UNUSED						115-199
	K01	UNUSED						115-199
	K02	UNUSED						115-199
	K03	UNUSED						115-199
	K04	UNUSED						115-199
	K05	UNUSED						115-199
	K06	UNUSED						115-199
	K07	UNUSED						115-199
	K08	UNUSED						115-199
	K09	UNUSED						115-199
	K10	UNUSED						115-199
	K11	UNUSED						115-199
	K12	UNUSED						115-199
	K13	UNUSED						115-199
	K14	UNUSED						115-199
	K15	UNUSED						115-199
D00777C		E3-3/ /		PLUG-				115-199
	1		W1433	0155	22		31-31-13	115-199
	2	UNUSED						115-199
	3	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 55

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00777C		E3-3/ /		PLUG- (continued)				115-199
	4		W1433	0154	22		31-31-13	115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	= C12	UNUSED						115-199
	= C13	UNUSED						115-199
D00779		P014-00/ /		PLUG-				115-199
	A		W2079	0014	22		31-31-13	115-199
	B		W2079	0009	22		31-31-13	115-199
	C		W2079	0010	20		31-31-13	115-199
	D		W2079	1002	22		31-31-13	115-199
	E		W2079	0011	20		31-31-13	115-199
	F		W2079	0013	20		31-31-13	115-199
	G		W2079	1003	22		31-31-13	115-199
	H		W2079	0006	22		31-31-13	115-199
	J		W2079	0003	22		31-31-13	115-199
	K		W2079	5001R	24		31-31-13	115-199
	L		W2079	0004	22		31-31-13	115-199
	M		W2079	5001B	24		31-31-13	115-199
	N		W2079	0008	22		31-31-13	115-199
	P		W2079	0012	20		31-31-13	115-199
	R		W2079	1001	22		31-31-13	115-199
	S		W2079	0005	22		31-31-13	115-199
	T		W2079	0001	22		31-31-13	115-199
	U		W2079	0002	22		31-31-13	115-199
	V		W2079	0007	22		31-31-13	115-199
			W2079	1001Z			31-31-13	115-199
			W2079	1002Z			31-31-13	115-199
			W2079	1003Z			31-31-13	115-199
			W2079	FRAB			31-31-13	115-199
D00781		P008-00/ /		PLUG-				ALL
	1		W2227	0005	20		33-13-52	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 56

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00781		P008-00/ /		PLUG- (continued)				ALL
	2		W2227	0006	20		33-13-52	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						001-099
	5		W2227	5002R	24		34-57-11	115-199
	6	UNUSED						001-099
	6		W2227	5002B	24		34-57-11	115-199
	7		W2227	0001	20		34-57-11	ALL
	8		W2227	0004	20		34-57-11	001-099
	8		W2227	1004	20		34-57-11	115-199
	9		W2227	0003	22		34-57-11	001-099
	9		W2227	1003	20		34-57-11	115-199
	10		W2227	0002	20		34-57-11	001-099
	10		W2227	1002	20		34-57-11	115-199
	11	UNUSED						ALL
	12		W2227	5001R	24		34-57-11	ALL
	13		W2227	5001B	24		34-57-11	ALL
	14		W2227	5001Z			34-57-11	001-099
	14		W2227	FRAA			34-57-11	115-199
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						001-099
	19		W2227	0007	24		34-22-83	115-199
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	DED		W2227	1002Z			34-57-11	115-199
	DED		W2227	1003Z			34-57-11	115-199
	DED		W2227	1004Z			34-57-11	115-199
			W2227	5001Z			34-57-11	115-199
			W2227	5002Z			34-57-11	115-199
			W2227	FRAA			34-57-11	115-199
D00783		P008-00/ /		PLUG-				010-099
D00783		P8/ /		PLUG-				115-199
	1	UNUSED						010-099, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 57

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00783		P008-00/ /		PLUG- (continued)				010-099
D00783		P8/ /		PLUG- (continued)				115-199
	2	UNUSED						010-099, 115-199
	3	UNUSED						010-099, 115-199
	4	UNUSED						010-099, 115-199
	5	UNUSED						010-099, 115-199
	6	UNUSED						010-099, 115-199
	7		W2229	0001	20		34-57-21	010-099, 115-199
	8		W2229	1004	20		34-57-21	010-099, 115-199
	9		W2229	1003	20		34-57-21	010-099, 115-199
	10		W2229	1002	20		34-57-21	010-099, 115-199
	11	UNUSED						010-099, 115-199
	12		W2229	5001R	24		34-57-21	010-099, 115-199
	13		W2229	5001B	24		34-57-21	010-099, 115-199
	14		W2229	5001Z			34-57-21	010-099, 115-199
	15	UNUSED						010-099, 115-199
	16	UNUSED						010-099, 115-199
	17	UNUSED						010-099, 115-199
	18	UNUSED						010-099, 115-199
	19	UNUSED						010-099
	19		W2229	0007	24		34-22-93	115-199
	20	UNUSED						010-099, 115-199
	21	UNUSED						010-099, 115-199
	22	UNUSED						010-099, 115-199
	23	UNUSED						010-099, 115-199
	24	UNUSED						010-099, 115-199
	DED		W2229	1002Z			34-57-21	010-099, 115-199
	DED		W2229	1003Z			34-57-21	010-099, 115-199
	DED		W2229	1004Z			34-57-21	010-099, 115-199
D00787		E003-01/ /		RELAY SOCKET				ALL
	A1		W1265	0157Y	22		27-41-11	ALL
	A2		W1265	0169Y	22		27-41-11	ALL
	A3		W1265	0156Y	22		27-41-11	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1265	0170Y	22		27-41-11	ALL
	X2		W1265	0171	22		27-41-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 58

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00789		E4-2/ /		PLUG-				ALL
	1		W1275	2529T	24		31-41-11	ALL
	2		W1275	2529W	24		31-41-11	ALL
	3		W1275	2537T	24		31-41-11	ALL
	4		W1275	2537W	24		31-41-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1275	2530T	24		31-41-11	ALL
	8		W1275	2530W	24		31-41-11	ALL
	9		W1275	2538T	24		31-41-11	ALL
	10		W1275	2538W	24		31-41-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W1275	2531T	24		31-41-11	ALL
	14		W1275	2531W	24		31-41-11	ALL
	15		W1275	2539T	24		31-41-11	ALL
	16		W1275	2539W	24		31-41-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W1275	2532T	24		31-41-11	ALL
	20		W1275	2532W	24		31-41-11	ALL
	21		W1275	2540T	24		31-41-11	ALL
	22		W1275	2540W	24		31-41-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W1275	2533T	24		31-41-11	ALL
	26		W1275	2533W	24		31-41-11	ALL
	27		W1275	2541T	24		31-41-11	ALL
	28		W1275	2541W	24		31-41-11	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W1275	2534T	24		31-41-11	ALL
	32		W1275	2534W	24		31-41-11	ALL
	33		W1275	2542T	24		31-41-11	ALL
	34		W1275	2542W	24		31-41-11	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37		W1275	2535T	24		31-41-11	ALL
	38		W1275	2535W	24		31-41-11	ALL
	39		W1275	2543T	24		31-41-11	ALL
	40		W1275	2543W	24		31-41-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 59

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00789		E4-2/ /		PLUG- (continued)				ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43		W1275	2536T	24		31-41-11	ALL
	44		W1275	2536W	24		31-41-11	ALL
	45		W1275	2544T	24		31-41-11	ALL
	46		W1275	2544W	24		31-41-11	ALL
	47		W1275	0551	24		31-41-11	ALL
	48		W1275	0552	24		31-41-11	ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	56	UNUSED						ALL
	57		W1275	6257	22		31-41-11	ALL
	58	UNUSED						ALL
	59		W1275	2570T	24		31-41-11	ALL
	60		W1275	2570W	24		31-41-11	ALL
	61	UNUSED						ALL
	62	UNUSED						ALL
	63	UNUSED						ALL
	64	UNUSED						ALL
	65		W1275	2571T	24		31-41-11	ALL
	66		W1275	2571W	24		31-41-11	ALL
	67	UNUSED						ALL
	68	UNUSED						ALL
	69	UNUSED						ALL
	70	UNUSED						ALL
	71		W1275	2572T	24		31-41-11	ALL
	72		W1275	2572W	24		31-41-11	ALL
	73	UNUSED						ALL
	74	UNUSED						ALL
	75	UNUSED						ALL
	76	UNUSED						ALL
	77		W1275	2573T	24		31-41-11	ALL
	78		W1275	2573W	24		31-41-11	ALL
	79	UNUSED						ALL
	80	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 60

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00789		E4-2/ /		PLUG- (continued)				ALL
	81	UNUSED						ALL
	82	UNUSED						ALL
	83		W1275	2574T	24		31-41-11	ALL
	84		W1275	2574W	24		31-41-11	ALL
	85	UNUSED						ALL
	86	UNUSED						ALL
	87	UNUSED						ALL
	88	UNUSED						ALL
	89		W1275	2575T	24		31-41-11	ALL
	90		W1275	2575W	24		31-41-11	ALL
	91	UNUSED						ALL
	92	UNUSED						ALL
	93	UNUSED						ALL
	94	UNUSED						ALL
	95		W1275	2576T	24		31-41-11	ALL
	96		W1275	2576W	24		31-41-11	ALL
	97	UNUSED						ALL
	98	UNUSED						ALL
	99	UNUSED						ALL
	100	UNUSED						ALL
	101		W1275	2577T	24		31-41-11	ALL
	102		W1275	2577W	24		31-41-11	ALL
	103	UNUSED						ALL
	104	UNUSED						ALL
	105	UNUSED						ALL
	106	UNUSED						ALL
	107	UNUSED						ALL
	108	UNUSED						ALL
	109	UNUSED						ALL
	110	UNUSED						ALL
	111	UNUSED						ALL
	112	UNUSED						ALL
	113	UNUSED						ALL
	114	UNUSED						ALL
	A	UNUSED						ALL
	B	UNUSED						ALL
	C	UNUSED						ALL
	D	UNUSED						ALL
	E	UNUSED						ALL
	F	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 61

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00789		E4-2/ /		PLUG- (continued)				ALL
	H	UNUSED						ALL
			W1275	2529Z			31-41-11	ALL
			W1275	2530Z			31-41-11	ALL
			W1275	2531Z			31-41-11	ALL
			W1275	2532Z			31-41-11	ALL
			W1275	2533Z			31-41-11	ALL
			W1275	2534Z			31-41-11	ALL
			W1275	2535Z			31-41-11	ALL
			W1275	2536Z			31-41-11	ALL
			W1275	2537Z			31-41-11	ALL
			W1275	2538Z			31-41-11	ALL
			W1275	2539Z			31-41-11	ALL
			W1275	2540Z			31-41-11	ALL
			W1275	2541Z			31-41-11	ALL
			W1275	2542Z			31-41-11	ALL
			W1275	2543Z			31-41-11	ALL
			W1275	2544Z			31-41-11	ALL
			W1275	2570Z			31-41-11	ALL
			W1275	2571Z			31-41-11	ALL
			W1275	2572Z			31-41-11	ALL
			W1275	2573Z			31-41-11	ALL
			W1275	2574Z			31-41-11	ALL
			W1275	2575Z			31-41-11	ALL
			W1275	2576Z			31-41-11	ALL
			W1275	2577Z			31-41-11	ALL
D00791		E4-2/ /		PLUG-				ALL
	1		W1275	2578T	24		31-41-21	ALL
	2		W1275	2578W	24		31-41-21	ALL
	3		W1275	2562T	24		31-41-21	ALL
	4		W1275	2562W	24		31-41-21	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1275	2579T	24		31-41-21	ALL
	8		W1275	2579W	24		31-41-21	ALL
	9		W1275	2563T	24		31-41-21	ALL
	10		W1275	2563W	24		31-41-21	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W1275	2580T	24		31-41-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 62

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00791		E4-2/ /		PLUG- (continued)				ALL
	14		W1275	2580W	24		31-41-21	ALL
	15		W1275	2564T	24		31-41-21	ALL
	16		W1275	2564W	24		31-41-21	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W1275	2581T	24		31-41-21	ALL
	20		W1275	2581W	24		31-41-21	ALL
	21		W1275	2565T	24		31-41-21	ALL
	22		W1275	2565W	24		31-41-21	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W1275	2582T	24		31-41-21	ALL
	26		W1275	2582W	24		31-41-21	ALL
	27		W1275	2566T	24		31-41-21	ALL
	28		W1275	2566W	24		31-41-21	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W1275	2583T	24		31-41-21	ALL
	32		W1275	2583W	24		31-41-21	ALL
	33		W1275	2567T	24		31-41-21	ALL
	34		W1275	2567W	24		31-41-21	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37		W1275	2584T	24		31-41-21	ALL
	38		W1275	2584W	24		31-41-21	ALL
	39		W1275	2568T	24		31-41-21	ALL
	40		W1275	2568W	24		31-41-21	ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43		W1275	2585T	24		31-41-21	ALL
	44		W1275	2585W	24		31-41-21	ALL
	45		W1275	2569T	24		31-41-21	ALL
	46		W1275	2569W	24		31-41-21	ALL
	47		W1275	0555	24		31-41-21	ALL
	48		W1275	0554	24		31-41-21	ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52		W1275	5001R	24		31-31-41	001-099
	52		W1275	5001R	24		31-31-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 63

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00791		E4-2/ /		PLUG- (continued)				ALL
	53		W1275	5001B	24		31-31-41	001-099
	53		W1275	5001B	24		31-31-21	115-199
	54		W1275	5053R	24		31-31-41	001-099
	54		W1275	5053R	24		31-31-21	115-199
	55		W1275	5053B	24		31-31-41	001-099
	55		W1275	5053B	24		31-31-21	115-199
	56	UNUSED						ALL
	57		W1275	6258	22		31-41-21	ALL
	58	UNUSED						ALL
	59		W1275	2554T	24		31-41-21	ALL
	60		W1275	2554W	24		31-41-21	ALL
	61	UNUSED						ALL
	62	UNUSED						ALL
	63	UNUSED						ALL
	64	UNUSED						ALL
	65		W1275	2555T	24		31-41-21	ALL
	66		W1275	2555W	24		31-41-21	ALL
	67	UNUSED						ALL
	68	UNUSED						ALL
	69	UNUSED						ALL
	70	UNUSED						ALL
	71		W1275	2556T	24		31-41-21	ALL
	72		W1275	2556W	24		31-41-21	ALL
	73	UNUSED						ALL
	74	UNUSED						ALL
	75	UNUSED						ALL
	76	UNUSED						ALL
	77		W1275	2557T	24		31-41-21	ALL
	78		W1275	2557W	24		31-41-21	ALL
	79	UNUSED						ALL
	80	UNUSED						ALL
	81	UNUSED						ALL
	82	UNUSED						ALL
	83		W1275	2558T	24		31-41-21	ALL
	84		W1275	2558W	24		31-41-21	ALL
	85	UNUSED						ALL
	86	UNUSED						ALL
	87	UNUSED						ALL
	88	UNUSED						ALL
	89		W1275	2559T	24		31-41-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 64

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00791		E4-2/ /		PLUG- (continued)				ALL
	90		W1275	2559W	24		31-41-21	ALL
	91	UNUSED						ALL
	92	UNUSED						ALL
	93	UNUSED						ALL
	94	UNUSED						ALL
	95		W1275	2560T	24		31-41-21	ALL
	96		W1275	2560W	24		31-41-21	ALL
	97	UNUSED						ALL
	98	UNUSED						ALL
	99	UNUSED						ALL
	100	UNUSED						ALL
	101		W1275	2561T	24		31-41-21	ALL
	102		W1275	2561W	24		31-41-21	ALL
	103	UNUSED						ALL
	104	UNUSED						ALL
	105	UNUSED						ALL
	106	UNUSED						ALL
	107		W1275	5002R	24		31-31-41	001-099
	107		W1275	5002R	24		31-31-21	115-199
	108		W1275	5002B	24		31-31-41	001-099
	108		W1275	5002B	24		31-31-21	115-199
	109	UNUSED						ALL
	110	UNUSED						ALL
	111	UNUSED						ALL
	112	UNUSED						ALL
	113	UNUSED						ALL
	114	UNUSED						ALL
	A	UNUSED						ALL
	B	UNUSED						ALL
	C	UNUSED						ALL
	D	UNUSED						ALL
	E	UNUSED						ALL
	F	UNUSED						ALL
	H	UNUSED						ALL
	DED		W1275	5001Z			31-31-41	001-099
	DED		W1275	5002Z			31-31-41	001-099
	DED		W1275	5053Z			31-31-41	001-099
	DED		W1275	5001Z			31-31-21	115-199
	DED		W1275	5002Z			31-31-21	115-199
	DED		W1275	5053Z			31-31-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 65

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00791		E4-2/ /		PLUG- (continued)				ALL
			W1275	2554Z			31-41-21	ALL
			W1275	2555Z			31-41-21	ALL
			W1275	2556Z			31-41-21	ALL
			W1275	2557Z			31-41-21	ALL
			W1275	2558Z			31-41-21	ALL
			W1275	2559Z			31-41-21	ALL
			W1275	2560Z			31-41-21	ALL
			W1275	2561Z			31-41-21	ALL
			W1275	2562Z			31-41-21	ALL
			W1275	2563Z			31-41-21	ALL
			W1275	2564Z			31-41-21	ALL
			W1275	2565Z			31-41-21	ALL
			W1275	2566Z			31-41-21	ALL
			W1275	2567Z			31-41-21	ALL
			W1275	2568Z			31-41-21	ALL
			W1275	2569Z			31-41-21	ALL
			W1275	2578Z			31-41-21	ALL
			W1275	2579Z			31-41-21	ALL
			W1275	2580Z			31-41-21	ALL
			W1275	2581Z			31-41-21	ALL
			W1275	2582Z			31-41-21	ALL
			W1275	2583Z			31-41-21	ALL
			W1275	2584Z			31-41-21	ALL
			W1275	2585Z			31-41-21	ALL
D00795		P001-1/ /		PLUG				115-199
	1		W0001	0551	22		34-55-11	115-199
	2		W0001	0552	20		34-55-11	115-199
	3	UNUSED						115-199
	4		W0001	5046R	24		34-55-11	115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7		W0001	5046B	24		34-55-11	115-199
	8	UNUSED						115-199
	9		W0001	0550	24		34-55-11	115-199
	10		W0001	0553	20		34-55-11	115-199
	11		W0001	0556	24		34-55-11	115-199
	12	UNUSED						115-199
	DED		W0001	5046Z			34-55-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 66

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00797		P001-1/ /		PLUG				115-199
	1		W0001	0561	20		33-13-11	115-199
	2		W0001	0562	20		33-13-11	115-199
	3		W0001	0563	20		34-55-11	115-199
	4		W0001	5048R	24		34-55-21	115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7		W0001	5048B	24		34-55-21	115-199
	8	UNUSED						115-199
	9		W0001	0557	24		34-55-21	115-199
	10	UNUSED						115-199
	11		W0001	0558	24		34-55-21	115-199
	12	UNUSED						115-199
	DED		W0001	5048Z			34-55-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00700

Page 67 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00801		P3-3/ /		PLUG				115-199
	1		W0003	0166	20		33-13-21	115-199
	2		W0003	0183	20		33-13-21	115-199
	3		W0003	0025	20		34-22-93	115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
	6		W0003	0026	20		34-22-93	115-199
	7	UNUSED						115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10		W0003	0504	24		34-22-93	115-199
	11	UNUSED						115-199
	12		W0003	0503	24		34-22-93	115-199
	13	UNUSED						115-199
	14		W0003	0502	24		34-22-93	115-199
	15	UNUSED						115-199
	16		W0003	0027	24		34-22-93	115-199
	17		W0003	0492	22		34-22-36	115-199
	18		W0003	5008R	24		34-22-93	115-199
	19		W0003	5008B	24		34-22-93	115-199
	20	UNUSED						115-199
	21		W0003	0501	24		34-22-93	115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31		W0003	5044R	24		34-22-93	115-199
	32		W0003	5044B	24		34-22-93	115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38		W0003	5007R	24		34-22-93	115-199
	39		W0003	5007B	24		34-22-93	115-199
	40	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D00800

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00801		P3-3/ /		PLUG (continued)				115-199
	41		W0003	5027R	24		34-22-93	115-199
	42		W0003	5027B	24		34-22-93	115-199
	43	UNUSED						115-199
	44		W0003	5009R	24		34-22-93	115-199
	45		W0003	5009B	24		34-22-93	115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48		W0003	5013R	24		34-22-93	115-199
	49		W0003	5013B	24		34-22-93	115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54		W0003	0513	24		34-22-93	115-199
	55		W0003	0514	20		34-22-93	115-199
	DED		W0003	5007Z			34-22-93	115-199
	DED		W0003	5008Z			34-22-93	115-199
	DED		W0003	5009Z			34-22-93	115-199
	DED		W0003	5013Z			34-22-93	115-199
	DED		W0003	5027Z			34-22-93	115-199
	DED		W0003	5044Z			34-22-93	115-199
D00803		P3-3/ /		PLUG				115-199
	1		W0003	0508	24		34-22-93	115-199
	2		W0003	0507	20		34-22-93	115-199
	3	UNUSED						115-199
	4		W0003	0504	24		34-22-93	115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7		W0003	0503	24		34-22-93	115-199
	8		W0003	0506	24		34-22-93	115-199
	9	UNUSED						115-199
	10		W0003	0505	20		34-22-93	115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
D00805		P3-3/ /		PLUG				115-199
	1		W0003	0559	20		33-13-21	115-199
	2		W0003	0560	20		33-13-21	115-199
	3	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D00800

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00805		P3-3/ /		PLUG (continued)				115-199
	4		W0003	0502	24		34-22-93	115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7		W0003	0501	24		34-22-93	115-199
	8		W0003	0509	24		34-22-93	115-199
	9	UNUSED						115-199
	10		W0003	0510	20		34-22-93	115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
D00809		E004-01/ /		RELAY SOCKET				001-099
D00809		E4-1/ /		RELAY SOCKET				115-199
	A1		W1165	0157Y	22		27-41-21	ALL
	A2		W1165	0158Y	22		27-41-21	ALL
	A3		W1165	0156Y	22		27-41-21	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1165	0154	22		27-41-21	ALL
	X2		W1165	0155	22		27-41-21	ALL
D00811		P3-1/ /		PLUG				115-199
	1		W0003	0551	22		34-55-21	115-199
	2		W0003	0552	20		34-55-21	115-199
	3	UNUSED						115-199
	4		W0003	5048R	24		34-55-11	115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7		W0003	5048B	24		34-55-11	115-199
	8	UNUSED						115-199
	9		W0003	0557	24		34-55-11	115-199
	10	UNUSED						115-199
	11		W0003	0558	24		34-55-11	115-199
	12	UNUSED						115-199
	DED		W0003	5048Z			34-55-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00800

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00813		P3-1/ /		PLUG				115-199
	1		W0003	0561	20		33-13-21	115-199
	2		W0003	0562	20		33-13-21	115-199
	3		W0003	0563	20		34-55-21	115-199
	4		W0003	5046R	24		34-55-21	115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7		W0003	5046B	24		34-55-21	115-199
	8	UNUSED						115-199
	9		W0003	0550	24		34-55-21	115-199
	10		W0003	0553	20		34-55-21	115-199
	11		W0003	0556	24		34-55-21	115-199
	12	UNUSED						115-199
	DED		W0003	5046Z			34-55-21	115-199
D00815		P051-00/ /		RCPT-				009, 115-199
	1		W1451	1068	24		31-51-36	009
	1	UNUSED						115-199
	2	UNUSED						009, 115-199
	3		W1451	1067	24		31-51-36	009
	3	UNUSED						115-199
	4	UNUSED						009, 115-199
	5	UNUSED						009, 115-199
	6	UNUSED						009, 115-199
	7		W1451	PM01			31-51-36	009, 115-199
	8	UNUSED						009, 115-199
	9		W1451	0385	24		31-51-12	009, 115-199
	10		W1451	0365	24		31-51-11	009, 115-199
	11	UNUSED						009, 115-199
	12		W1451	1074	24		31-51-36	009, 115-199
	13	UNUSED						009, 115-199
	14		W1451	0269	22		31-51-11	009, 115-199
	15		W1451	0299	22		31-51-12	009, 115-199
	16	UNUSED						009, 115-199
	17	UNUSED						009, 115-199
	18	UNUSED						009, 115-199
	19	UNUSED						009, 115-199
	20	UNUSED						009, 115-199
	21	UNUSED						009, 115-199
	22	UNUSED						009, 115-199
	23	UNUSED						009, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D00800

Page 4

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00815		P051-00/ /		RCPT- (continued)				009, 115-199
	24		W1451	0345	24		31-51-36	009, 115-199
	25	UNUSED						009, 115-199
	26	UNUSED						009, 115-199
	27		W1451	0362	24		31-51-11	009, 115-199
	28	UNUSED						009, 115-199
	29	UNUSED						009, 115-199
	30		W1451	0382	24		31-51-12	009, 115-199
	31	UNUSED						009, 115-199
	32		W1451	0363	24		31-51-11	009, 115-199
	33		W1451	0383	24		31-51-12	009, 115-199
	34	UNUSED						009, 115-199
	35	UNUSED						009, 115-199
	36	UNUSED						009, 115-199
	37	UNUSED						009, 115-199
	38	UNUSED						009, 115-199
	39	UNUSED						009, 115-199
	40	UNUSED						009, 115-199
	41	UNUSED						009, 115-199
	42	UNUSED						009, 115-199
	43	UNUSED						009, 115-199
	44	UNUSED						009, 115-199
	45	UNUSED						009, 115-199
	46	UNUSED						009, 115-199
	47	UNUSED						009, 115-199
	48	UNUSED						009, 115-199
	49	UNUSED						009, 115-199
	50	UNUSED						009, 115-199
	51	UNUSED						009, 115-199
	52	UNUSED						009, 115-199
	53	UNUSED						009, 115-199
	54	UNUSED						009, 115-199
	55	UNUSED						009, 115-199
	56	UNUSED						009, 115-199
	57	UNUSED						009, 115-199
	58	UNUSED						009, 115-199
	59	UNUSED						009, 115-199
	60	UNUSED						009, 115-199
	61	UNUSED						009, 115-199
	62		W1451	PM01			31-51-36	009, 115-199
	63	UNUSED						009, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D00800

Page 5

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00815		P051-00/ /		RCPT- (continued)				009, 115-199
	64	UNUSED						009, 115-199
	65	UNUSED						009, 115-199
	66	UNUSED						009, 115-199
	DED		W1451	1067Z			31-51-36	009
	DED		W1451	1068Z			31-51-36	009
	DED		W1451	1074Z			31-51-36	009, 115-199
D00817		P051-00/ /		RELAY SOCKET				ALL
	A1		W1451	0440	24		27-32-12	ALL
	A2		W1451	0043	24		31-51-11	ALL
	A3		W1451	0044	24		31-51-11	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1451	0041	24		31-51-11	ALL
	X2		W1451	0042	24		31-51-11	ALL
D00819		P051-00/ /		RELAY SOCKET				ALL
	A1		W1451	0452	24		27-32-22	ALL
	A2		W1451	0143	24		31-51-12	ALL
	A3		W1451	0144	24		31-51-12	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1451	0141	24		31-51-12	ALL
	X2		W1451	0142	24		31-51-12	ALL
D00821		P50/ /		RCPT				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1140	0523	22		27-48-21	ALL
	8		W1140	0055	22		27-48-21	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00800

Page 6

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00821		P50/ /		RCPT (continued)				ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W1140	2011R	24		27-48-21	ALL
	32		W1140	3005R	24		27-48-21	ALL
	33		W1140	3005B	24		27-48-21	ALL
	34		W1140	3005Y	24		27-48-21	ALL
	35		W1140	2011B	24		27-48-21	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W1140	0411	22		22-12-31	ALL
	39		W1140	0412	22		22-12-31	ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43		W1140	0056	22		27-48-21	ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47		W1140	PA01			27-48-21	ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00800

Page 7

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00821		P50/ /		RCPT (continued)				ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	56	UNUSED						ALL
	57	UNUSED						ALL
	58	UNUSED						ALL
	59	UNUSED						ALL
	60	UNUSED						ALL
	61	UNUSED						ALL
	62	UNUSED						ALL
	63	UNUSED						ALL
	64	UNUSED						ALL
	65	UNUSED						ALL
	66		W1140	PA01			27-48-21	ALL
D00823		P50/ /		RCPT				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1140	0050	22		27-48-21	ALL
	8		W1140	0051	22		27-48-21	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00800

Page 8

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00823		P50/ /		RCPT (continued)				ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W1140	2010R	24		27-48-21	ALL
	32		W1140	3004R	24		27-48-21	ALL
	33		W1140	3004B	24		27-48-21	ALL
	34		W1140	3004Y	24		27-48-21	ALL
	35		W1140	2010B	24		27-48-21	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W1140	0407	22		22-12-21	ALL
	39		W1140	0408	22		22-12-21	ALL
	40		W1140	2008R	22		22-24-21	ALL
	41		W1140	2008B	22		22-24-21	ALL
	42	UNUSED						ALL
	43		W1140	0052	22		27-48-21	ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47		W1140	PB01			27-48-21	ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	56	UNUSED						ALL
	57	UNUSED						ALL
	58	UNUSED						ALL
	59	UNUSED						ALL
	60	UNUSED						ALL
	61	UNUSED						ALL
	62	UNUSED						ALL
	63	UNUSED						ALL
	64	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00800

Page 9

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00823		P50/ /		RCPT (continued)				ALL
	65	UNUSED						ALL
	66		W1140	PB01			27-48-21	ALL
D00825		P36/ /		XFMR PLUG (PLATE 'B')				ALL
	1		W1260	0027	22		27-48-21	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1260	0025	22		27-48-21	ALL
	5		W1260	0026	22		27-48-21	ALL
	6		W1260	0028	22		27-48-21	ALL
	7	UNUSED						ALL
D00831		1860/235/0		RCPT-				ALL
	1		W2811	2013R	20		22-11-21	ALL
	2		W2811	2013B	20		22-11-21	ALL
	3		W2811	3009B	20		22-12-21	ALL
	4		W2811	3009Y	20		22-12-21	ALL
	5		W2811	3009R	20		22-12-21	ALL
	6		W2811	0019	18		22-11-21	ALL
	7	UNUSED						ALL
D00833		1860/245/R10		RCPT-				ALL
	1		W2821	2013R	20		22-11-31	ALL
	2		W2821	2013B	20		22-11-31	ALL
	3		W2821	3009B	20		22-12-31	ALL
	4		W2821	3009Y	20		22-12-31	ALL
	5		W2821	3009R	20		22-12-31	ALL
	6		W2821	0019	18		22-11-31	ALL
	7	UNUSED						ALL
D00835		1785/231/R042		PLUG-				ALL
	1		W2811	0029	20		27-31-11	ALL
	2		W2811	0030	20		27-31-11	ALL
	3		W2811	0031	20		27-31-11	ALL
	4		W2811	0032	20		27-31-11	ALL
	5	UNUSED						ALL
D00837		1315/295/R035		RCPT-				001-099
D00837		1293/295/R35		RCPT-				115-199
	1		W3525	4253R	24		23-42-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00800

Page 10

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00837		1315/295/R035		RCPT- (continued)				001-099
D00837		1293/295/R35		RCPT- (continued)				115-199
	2		W3525	4253Z			23-42-11	ALL
	3		W3525	4253B	24		23-42-11	ALL
	4		W3525	4253Y	24		23-42-11	ALL
	5		W3525	4253G	24		23-42-11	ALL
D00839		656/280/R55		PLUG-				115-199
	1		W3525	4255R	24		23-42-11	115-199
	2		W3525	4255Z			23-42-11	115-199
	3		W3525	4255B	24		23-42-11	115-199
	4		W3525	4255Y	24		23-42-11	115-199
	5		W3525	4255G	24		23-42-11	115-199
D00843		E005-00/ /		JACK-				001-099
D00843		560/192/R62		JACK-				115-199
	BLK		W4473	B-AC			23-41-12	ALL
	BLU		W4473	B-AB			23-41-12	ALL
	RED		W4473	B-AA			23-41-12	ALL
D00847A		E4-4/ /		PLUG-VHF C				001-099
	A01	UNUSED						001-099
	A02	UNUSED						001-099
	A03	UNUSED						001-099
	A04	UNUSED						001-099
	A05	UNUSED						001-099
	A06	UNUSED						001-099
	A07	UNUSED						001-099
	A08	UNUSED						001-099
	A09	UNUSED						001-099
	A10	UNUSED						001-099
	A11	UNUSED						001-099
	A12	UNUSED						001-099
	A13	UNUSED						001-099
	A14	UNUSED						001-099
	A15	UNUSED						001-099
	B01	UNUSED						001-099
	B02	UNUSED						001-099
	B03	UNUSED						001-099
	B04	UNUSED						001-099
	B05	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D00800

Page 11

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00847A		E4-4/ /		PLUG-VHF C (continued)				001-099
	B06	UNUSED						001-099
	B07	UNUSED						001-099
	B08	UNUSED						001-099
	B09	UNUSED						001-099
	B10	UNUSED						001-099
	B11	UNUSED						001-099
	B12	UNUSED						001-099
	B13	UNUSED						001-099
	B14	UNUSED						001-099
	B15	UNUSED						001-099
	C01	UNUSED						001-099
	C02	UNUSED						001-099
	C03	UNUSED						001-099
	C04	UNUSED						001-099
	C05	UNUSED						001-099
	C06	UNUSED						001-099
	C07	UNUSED						001-099
	C08	UNUSED						001-099
	C09	UNUSED						001-099
	C10	UNUSED						001-099
	C11	UNUSED						001-099
	C12	UNUSED						001-099
	C13	UNUSED						001-099
	C14	UNUSED						001-099
	C15	UNUSED						001-099
	D01	UNUSED						001-099
	D02	UNUSED						001-099
	D03	UNUSED						001-099
	D04	UNUSED						001-099
	D05	UNUSED						001-099
	D06	UNUSED						001-099
	D07	UNUSED						001-099
	D08	UNUSED						001-099
	D09	UNUSED						001-099
	D10	UNUSED						001-099
	D11	UNUSED						001-099
	D12	UNUSED						001-099
	D13	UNUSED						001-099
	D14	UNUSED						001-099
	D15	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D00800

Page 12

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00847B		E4-4/ /		PLUG-VHF C				001-099
	A01		W1161	2041R	24		23-51-11	001-099
	A02	UNUSED						001-099
	A03		W1161	0039	24		23-12-31	001-099
	A04	UNUSED						001-099
	A05	UNUSED						001-099
	A06	UNUSED						001-099
	A07		W1161	5005R	24		23-12-31	001-099
	A08	UNUSED						001-099
	A09	UNUSED						001-099
	A10	UNUSED						001-099
	A11	UNUSED						001-099
	A12	UNUSED						001-099
	A13		W1161	2043R	24		23-21-11	001-099
	A14	UNUSED						001-099
	A15		W1161	2042R	24		23-51-11	001-099
	B01		W1161	2041B	24		23-51-11	001-099
	B02	UNUSED						001-099
	B03		W1161	0040	24		23-12-31	001-099
	B04	UNUSED						001-099
	B05	UNUSED						001-099
	B06	UNUSED						001-099
	B07		W1161	5005B	24		23-12-31	001-099
	B08	UNUSED						001-099
	B09	UNUSED						001-099
	B10	UNUSED						001-099
	B11	UNUSED						001-099
	B12	UNUSED						001-099
	B13		W1161	2043B	24		23-21-11	001-099
	B14		W1161	0031	24		23-12-31	001-099
	B15		W1161	2042B	24		23-51-11	001-099
	C01		W1161	0042	24		23-51-11	001-099
	C02	UNUSED						001-099
	C03		W1161	0041	24		23-12-31	001-099
	C04	UNUSED						001-099
	C05	UNUSED						001-099
	C06	UNUSED						001-099
	C07	UNUSED						001-099
	C08	UNUSED						001-099
	C09	UNUSED						001-099
	C10	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D00800

Page 13

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00847B		E4-4/ /		PLUG-VHF C (continued)				001-099
	C11	UNUSED						001-099
	C12	UNUSED						001-099
	C13		W1161	0029	24		23-12-31	001-099
	C14	UNUSED						001-099
	C15	UNUSED						001-099
	D01		W1161	0033	24		31-31-61	001-099
	D02	UNUSED						001-099
	D03		W1161	0038	22		23-12-31	001-099
	D04	UNUSED						001-099
	D05	UNUSED						001-099
	D06	UNUSED						001-099
	D07	UNUSED						001-099
	D08	UNUSED						001-099
	D09	UNUSED						001-099
	D10	UNUSED						001-099
	D11	UNUSED						001-099
	D12	UNUSED						001-099
	D13		W1161	0030	24		23-12-31	001-099
	D14	UNUSED						001-099
	D15	UNUSED						001-099
			W1161	0032	20		23-12-31	001-099
			W1161	5005Z			23-12-31	001-099
D00847C		E4-4/ /		PLUG-VHF C				001-099
	1	JD	W1161	001CX			23-12-31	001-099
	2		W1161	0035	16		23-12-31	001-099
	3	UNUSED						001-099
	4		W1161	0036	16		23-12-31	001-099
	5	UNUSED						001-099
	= C1		W1161	001CO			23-12-31	001-099
	= C5	UNUSED						001-099
D00849		E004-03/ /		PLUG-				001-099
D00849		E4-3/ /		PLUG-				115-199
	1		W1163	0023	24		23-21-12	ALL
	2		W1163	0024	24		23-21-12	001-003, 005, 115-199
	2	VP	W1163	0024	24		23-21-12	004, 006-099
	3	VP	W1163	0025	24		23-21-12	001-004, 006-009, 115-199
	3		W1163	0025	24		23-21-12	005, 010-099
	4		W1163	0026	24		23-21-12	001-004, 006-099

HOOKUP LIST

D280N032

91-21-51

Section D00800

Page 14

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00849		E004-03/ /		PLUG- (continued)				001-099
D00849		E4-3/ /		PLUG- (continued)				115-199
	4	VP	W1163	0026	24		23-21-12	005, 115-199
	5		W1163	0027	24		23-21-12	001-006, 009-099, 115-199
	5	VP	W1163	0027	24		23-21-12	007-008
	6	VP	W1163	0028	24		23-21-12	001, 004, 006, 009
	6		W1163	0028	24		23-21-12	002-003, 005, 007-008, 010-099, 115-199
	7	VP	W1163	0029	24		23-21-12	001, 004, 006, 009-099
	7		W1163	0029	24		23-21-12	002-003, 005, 007-008, 115-199
	8		W1163	0030	24		23-21-12	001, 005
	8	VP	W1163	0030	24		23-21-12	002-004, 006-099, 115-199
	9	VP	W1163	0031	24		23-21-12	ALL
	10		W1163	0032	24		23-21-12	001, 003-007, 009-099
	10	VP	W1163	0032	24		23-21-12	002, 008, 115-199
	11		W1163	0033	24		23-21-12	001-002, 004, 006-008, 115-199
	11	VP	W1163	0033	24		23-21-12	003, 005, 009-099
	12	VP	W1163	0034	24		23-21-12	001-003, 010-099, 115-199
	12		W1163	0034	24		23-21-12	004-009
	13		W1163	0035	24		23-21-12	001-003, 010-099
	13	VP	W1163	0035	24		23-21-12	004-009, 115-199
	14		W1163	0036	24		23-21-12	001-002, 005-010, 115-199
	14	VP	W1163	0036	24		23-21-12	003-004, 011-099
	15		W1163	0037	24		23-21-12	001-002, 004-005, 010-099
	15	VP	W1163	0037	24		23-21-12	003, 006-009, 115-199
	16		W1163	0038	24		23-21-12	001-002, 005, 007-008
	16	VP	W1163	0038	24		23-21-12	003-004, 006, 009-099, 115-199
	17		W1163	0039	24		23-21-12	001-002, 005
	17	VP	W1163	0039	24		23-21-12	003-004, 006-099, 115-199
	18		W1163	0040	24		23-21-12	ALL
	19		W1163	0041	24		23-21-12	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00800

Page 15

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00849		E004-03/ /		PLUG- (continued)				001-099
D00849		E4-3/ /		PLUG- (continued)				115-199
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D00871		210/ /		RCPT				ALL
	1		W2441	2011R	22		27-61-17	ALL
	2		W2441	2011B	22		27-61-17	ALL
	3		W2441	2012R	22		27-61-17	ALL
	4	UNUSED						ALL
	5		W2441	2012B	22		27-61-17	ALL
	6		W2441	0002	20		27-61-17	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00800

Page 16

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00873		AC0220/ /		RCPT				ALL
	1		W2449	2011R	22		27-61-18	ALL
	2		W2449	2011B	22		27-61-18	ALL
	3		W2449	2012R	22		27-61-18	ALL
	4	UNUSED						ALL
	5		W2449	2012B	22		27-61-18	ALL
	6		W2449	0002	20		27-61-18	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00875		AC0210/ /		RCPT				ALL
	1		W2443	2011R	22		27-61-15	ALL
	2		W2443	2011B	22		27-61-15	ALL
	3		W2443	2012R	22		27-61-15	ALL
	4	UNUSED						ALL
	5		W2443	2012B	22		27-61-15	ALL
	6		W2443	0002	20		27-61-15	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D00877		AC215/195/L011		RCPT				ALL
	1		W2451	2011R	22		27-61-13	ALL
	2		W2451	2011B	22		27-61-13	ALL
	3		W2451	2012R	22		27-61-13	ALL
	4	UNUSED						ALL
	5		W2451	2012B	22		27-61-13	ALL
	6		W2451	0002	20		27-61-13	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00800

Page 17

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00877		AC215/195/L011		RCPT (continued)				ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D00878		479/164/R023		RCPT-400CPS,5AMP,115V AC				ALL
	= G	D	W2356	0356	18		25-29-11	001-099
	= G	D	W4086	0018	18		25-29-11	115-199
	= N	D	W2356	0357	18		25-29-11	001-099
	= N	D	W4086	0019	18		25-29-11	115-199
	= P	D	W2356	0355	18		25-29-11	001-099
	= P	D	W4086	0017	18		25-29-11	115-199
D00879		AC0220/ /		RCPT				ALL
	1		W2445	2011R	22		27-61-16	ALL
	2		W2445	2011B	22		27-61-16	ALL
	3		W2445	2012R	22		27-61-16	ALL
	4	UNUSED						ALL
	5		W2445	2012B	22		27-61-16	ALL
	6		W2445	0002	20		27-61-16	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D00880		P006-04/ /		RECP-SERVICE OUTLET,115V AC,400HZ				001-099
D00880		P006-02/ /		RECP-SERVICE OUTLET,115V AC,400HZ				115-199
	= G	D	W0064	0044	18		25-29-11	ALL
	= N	D	W0064	0045	18		25-29-11	ALL
	= P	D	W0064	0043	18		25-29-11	ALL
D00881		AC0215/ /		RCPT				ALL
	1		W2447	2011R	22		27-61-14	ALL
	2		W2447	2011B	22		27-61-14	ALL
	3		W2447	2012R	22		27-61-14	ALL
	4	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00800

Page 18

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00881		AC0215/ /		RCPT (continued)				ALL
	5		W2447	2012B	22		27-61-14	ALL
	6		W2447	0002	20		27-61-14	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W2447	2014B	22		SPARE	001-099
	11	UNUSED						115-199
	12		W2447	2014R	22		SPARE	001-099
	12	UNUSED						115-199
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D00882		0338/212/L060		RCPT-OUTLET				ALL
	=G	D	W2700	0012	18		25-29-11	ALL
	=N	D	W2700	0011	18		25-29-11	ALL
	=P	D	W2700	0010	18		25-29-11	ALL
D00884		1320/235/L060		RECP-OUTLET				ALL
	=G	D	W2700	0015	18		25-29-11	ALL
	=N	D	W2700	0014	18		25-29-11	ALL
	=P	D	W2700	0013	18		25-29-11	ALL
D00888		P007-00/ /		PLUG				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0012	2003B	24		33-11-11	ALL
	5		W0012	2003R	24		33-11-11	ALL
	6		W0012	0009	20		33-11-11	ALL
	7		W0012	2002B	24		33-11-11	ALL
	8		W0012	2002R	24		33-11-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0012	2004B	24		33-11-11	ALL
	12		W0012	2004R	24		33-11-11	ALL
D00889		682/215/R30		PLUG-				115-199
	1		W4001	4251R	24		23-42-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00800

Page 19

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00889		682/215/R30		PLUG- (continued)				115-199
	2		W4001	4251Z			23-42-11	115-199
	3		W4001	4251B	24		23-42-11	115-199
	4		W4001	4251Y	24		23-42-11	115-199
	5		W4001	4251G	24		23-42-11	115-199
D00890		P7/ /		PLUG				001-099
D00890		290/220/L15		PLUG				115-199
	1		W0001	2011B	24		33-11-11	ALL
	2		W0001	2011R	24		33-11-11	ALL
	3		W0001	2012B	24		33-11-11	ALL
	4		W0001	2012R	24		33-11-11	ALL
	5		W0001	0253	20		33-11-11	ALL
D00891		P008-00/ /		PLUG-				001-099
	1		W2069	0001	20		33-13-52	001-099
	2		W2069	0002	20		33-13-52	001-099
	3	UNUSED						001-099
	4	UNUSED						001-099
	5		W2069	0005	24		23-12-31	001-099
	6		W2069	0006	24		23-12-31	001-099
	7		W2069	0007	24		23-12-31	001-099
	8		W2069	0008	24		23-12-31	001-099
	9		W2069	0009	24		23-12-31	001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
	13	18	W2069	0003	18		23-12-31	001-099
	14		W2069	0010	20		23-12-31	001-099
	15	UNUSED						001-099
	16	UNUSED						001-099
	17		W2069	5001R	24		23-12-31	001-099
	18		W2069	5001B	24		23-12-31	001-099
	19		W2069	5001Z			23-12-31	001-099
	20	UNUSED						001-099
	21	UNUSED						001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D00800

Page 20

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00892		210/210/R10		PLUG				001-099
D00892		P3-3/ /		PLUG				115-199
	1		W0003	2516R	24		33-11-11	ALL
	2	UNUSED						ALL
	3		W0003	2515R	24		33-11-11	ALL
	4		W0003	2009B	24		33-11-11	ALL
	5		W0003	2009R	24		33-11-11	ALL
	6		W0003	2010B	24		33-11-11	ALL
	7		W0003	2010R	24		33-11-11	ALL
	8		W0003	3502Y	24		33-11-11	ALL
	9		W0003	2515B	24		33-11-11	ALL
	10		W0003	2516B	24		33-11-11	ALL
	11		W0003	3502R	24		33-11-11	ALL
	12		W0003	2008B	24		33-11-11	ALL
	13		W0003	2008R	24		33-11-11	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W0003	0248	24		33-11-11	ALL
	17		W0003	0250	20		33-11-11	ALL
	18		W0003	3502B	24		33-11-11	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0003	0251	20		33-11-11	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
			W0003	2515Z			33-11-11	ALL
			W0003	2516Z			33-11-11	ALL
			W0003	3502Z			33-11-11	ALL
D00896		P007-00/ /		PLUG				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0010	2003B	24		33-11-11	ALL
	5		W0010	2003R	24		33-11-11	ALL
	6		W0010	0009	20		33-11-11	ALL
	7		W0010	2002B	24		33-11-11	ALL
	8		W0010	2002R	24		33-11-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00800

Page 21

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00896		P007-00/ /		PLUG (continued)				ALL
	11		W0010	2004B	24		33-11-11	ALL
	12		W0010	2004R	24		33-11-11	ALL
D00898		156/220/		PLUG				001-099
D00898		P3-1/ /		PLUG				115-199
	1		W0001	2516R	24		33-11-11	ALL
	2	UNUSED						ALL
	3		W0001	2515R	24		33-11-11	ALL
	4		W0001	2009B	24		33-11-11	ALL
	5		W0001	2009R	24		33-11-11	ALL
	6		W0001	2010B	24		33-11-11	ALL
	7		W0001	2010R	24		33-11-11	ALL
	8		W0001	3502Y	24		33-11-11	ALL
	9		W0001	2515B	24		33-11-11	ALL
	10		W0001	2516B	24		33-11-11	ALL
	11		W0001	3502R	24		33-11-11	ALL
	12		W0001	2008B	24		33-11-11	ALL
	13		W0001	2008R	24		33-11-11	ALL
	14		W0001	2012B	24		33-11-11	ALL
	15		W0001	2012R	24		33-11-11	ALL
	16		W0001	0248	24		33-11-11	ALL
	17		W0001	0250	20		33-11-11	ALL
	18		W0001	3502B	24		33-11-11	ALL
	19		W0001	2011B	24		33-11-11	ALL
	20		W0001	2011R	24		33-11-11	ALL
	21		W0001	0251	20		33-11-11	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
			W0001	2515Z			33-11-11	ALL
			W0001	2516Z			33-11-11	ALL
			W0001	3502Z			33-11-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00800

Page 22 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00901		P051-00/ /		RCPT-				ALL
	1		W1451	0075	24		31-51-31	001-008, 010-099, 115-199
	1	UNUSED						009
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W1451	PH01			31-51-31	ALL
	9		W1451	0392	24		31-51-31	ALL
	10		W1451	0091	24		31-51-31	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W1451	0088	24		31-51-31	ALL
	14		W1451	0266	22		31-51-11	ALL
	15		W1451	0296	22		31-51-12	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W1451	0248	24		31-51-31	ALL
	20	UNUSED						001-008, 010-099, 115-199
	20		W1451	0325	24		31-51-31	009
	21	UNUSED						ALL
	22		W1451	0092	24		31-51-31	ALL
	23		W1451	2001R	24		31-51-31	ALL
	24		W1451	2001B	24		31-51-31	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W1451	1021	24		31-51-11	ALL
	28		W1451	2004R	24		31-51-31	ALL
	29	UNUSED						ALL
	30		W1451	1051	24		31-51-12	ALL
	31	UNUSED						ALL
	32		W1451	1022	24		31-51-11	ALL
	33		W1451	1052	24		31-51-12	ALL
	34		W1451	0094	24		31-51-31	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00900

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00901		P051-00/ /		RCPT- (continued)				ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45		W1451	0034	24		31-51-11	ALL
	46		W1451	0244	24		31-51-31	ALL
	47		W1451	0090	24		31-51-31	ALL
	48	UNUSED						ALL
	49		W1451	0243	24		31-51-31	001-008, 010-099
	49	UNUSED						009, 115-199
	50		W1451	0078	24		31-51-31	001-008, 010-099, 115-199
	50	UNUSED						009
	51		W1451	0089	24		31-51-31	ALL
	52		W1451	0401	24		31-51-31	ALL
	53	UNUSED						001-008, 010-099
	53		W1451	0338	24		31-51-35	009, 115-199
	54	UNUSED						ALL
	55		W1451	0093	24		31-51-31	ALL
	56		W1451	0134	24		31-51-12	ALL
	57		W1451	PH01			31-51-31	ALL
	58	UNUSED						ALL
	59	UNUSED						ALL
	60		W1451	2004B	24		31-51-31	ALL
	61	UNUSED						ALL
	62		W1451	2006R	24		31-51-31	001-099
	62		W1451	0097	24		31-51-31	115-199
	63		W1451	2006B	24		31-51-31	001-099
	63		W1451	0196	24		31-51-31	115-199
	64	UNUSED						ALL
	65	UNUSED						ALL
	66		W1451	0095	24		31-51-31	ALL
	DED		W1451	1021Z			31-51-11	ALL
	DED		W1451	1022Z			31-51-11	ALL
	DED		W1451	1051Z			31-51-12	ALL
	DED		W1451	1052Z			31-51-12	ALL
D00903		P051-00/ /		RCPT-				ALL
	1		W1451	0321	24		31-51-33	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00900

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00903		P051-00/ /		RCPT- (continued)				ALL
	2		W1451	0409	24		31-51-33	ALL
	3		W1451	0318	24		31-51-33	ALL
	4		W1451	0172	24		31-51-33	ALL
	5	UNUSED						ALL
	6		W1451	0250	24		31-51-33	ALL
	7		W1451	0323	24		31-51-33	ALL
	8		W1451	0170	24		31-51-33	ALL
	9		W1451	5015R	24		31-51-33	ALL
	10	UNUSED						ALL
	11		W1451	5005R	24		31-51-33	ALL
	12		W1451	5020R	24		31-51-33	ALL
	13		W1451	0193	24		31-51-32	ALL
	14		W1451	0267	22		31-51-11	ALL
	15		W1451	0297	22		31-51-12	ALL
	16		W1451	0035	24		31-51-11	ALL
	17		W1451	1025	24		31-51-11	ALL
	18		W1451	0255	24		31-51-33	ALL
	19	UNUSED						ALL
	20		W1451	0253	24		23-21-11	ALL
	21		W1451	0245	24		31-51-33	ALL
	22		W1451	0255	24		31-51-33	ALL
	23		W1451	0092	24		31-51-31	ALL
	24		W1451	1055	24		31-51-12	ALL
	25		W1451	0194	24		31-51-32	ALL
	26	UNUSED						ALL
	27		W1451	1023	24		31-51-11	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W1451	1053	24		31-51-12	ALL
	31		W1451	0254	24		31-51-33	ALL
	32		W1451	1024	24		31-51-11	ALL
	33		W1451	1054	24		31-51-12	ALL
	34	UNUSED						ALL
	35		W1451	0247	24		31-51-33	ALL
	36		W1451	0410	24		31-51-33	ALL
	37		W1451	0081	24		31-51-33	ALL
	38		W1451	0072	24		31-51-33	ALL
	39	UNUSED						ALL
	40		W1451	0324	24		31-51-33	ALL
	41		W1451	0083	24		31-51-33	ALL

HOOKUP LIST

D280N032

91-21-51

Section D00900

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00903		P051-00/ /		RCPT- (continued)				ALL
	42		W1451	0070	24		31-51-33	ALL
	43		W1451	5015B	24		31-51-33	ALL
	44	UNUSED						ALL
	45		W1451	5005B	24		31-51-33	ALL
	46		W1451	5020B	24		31-51-33	ALL
	47		W1451	0093	24		31-51-31	ALL
	48		W1451	0254	24		31-51-33	ALL
	49	UNUSED						ALL
	50		W1451	0135	24		31-51-12	ALL
	51		W1451	0094	24		31-51-31	ALL
	52	UNUSED						ALL
	53		W1451	0249	24		31-51-33	ALL
	54		W1451	0192	24		31-51-32	ALL
	55	UNUSED						ALL
	56		W1451	PJ01			31-51-33	ALL
	57		W1451	0095	24		31-51-31	ALL
	58		W1451	0195	24		31-51-32	ALL
	59	UNUSED						ALL
	60	UNUSED						ALL
	61	UNUSED						ALL
	62	UNUSED						ALL
	63	UNUSED						ALL
	64	UNUSED						ALL
	65		W1451	PJ01			31-51-33	ALL
	66	UNUSED						ALL
	DED		W1451	1023Z			31-51-11	ALL
	DED		W1451	1024Z			31-51-11	ALL
	DED		W1451	1025Z			31-51-11	ALL
	DED		W1451	1053Z			31-51-12	ALL
	DED		W1451	1054Z			31-51-12	ALL
	DED		W1451	1055Z			31-51-12	ALL
	DED		W1451	5005Z			31-51-33	ALL
	DED		W1451	5015Z			31-51-33	ALL
	DED		W1451	5020Z			31-51-33	ALL
D00905		P051-00/ /		RCPT-				009, 115-199
	1		W1451	1066	24		31-51-35	009
	1	UNUSED						115-199
	2	UNUSED						009, 115-199
	3		W1451	1065	24		31-51-35	009

HOOKUP LIST

D280N032

91-21-51

Section D00900

Page 4

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00905		P051-00/ /		RCPT- (continued)				009, 115-199
	3	UNUSED						115-199
	4	UNUSED						009, 115-199
	5	UNUSED						009, 115-199
	6	UNUSED						009, 115-199
	7		W1451	PL01			31-51-35	009, 115-199
	8	UNUSED						009, 115-199
	9		W1451	0377	24		31-51-12	009, 115-199
	10		W1451	0357	24		31-51-11	009, 115-199
	11		W1451	1071	24		31-51-35	009, 115-199
	12	UNUSED						009, 115-199
	13	UNUSED						009, 115-199
	14		W1451	0268	22		31-51-11	009, 115-199
	15		W1451	0298	22		31-51-12	009, 115-199
	16	UNUSED						009, 115-199
	17	UNUSED						009, 115-199
	18	UNUSED						009, 115-199
	19	UNUSED						009, 115-199
	20	UNUSED						009, 115-199
	21	UNUSED						009, 115-199
	22	UNUSED						009, 115-199
	23	UNUSED						009, 115-199
	24		W1451	0338	24		31-51-35	009, 115-199
	25	UNUSED						009, 115-199
	26	UNUSED						009, 115-199
	27		W1451	0354	24		31-51-11	009, 115-199
	28	UNUSED						009, 115-199
	29	UNUSED						009, 115-199
	30		W1451	0374	24		31-51-12	009, 115-199
	31	UNUSED						009, 115-199
	32		W1451	0356	24		31-51-11	009, 115-199
	33		W1451	0376	24		31-51-12	009, 115-199
	34	UNUSED						009, 115-199
	35	UNUSED						009, 115-199
	36	UNUSED						009, 115-199
	37	UNUSED						009, 115-199
	38	UNUSED						009, 115-199
	39	UNUSED						009, 115-199
	40	UNUSED						009, 115-199
	41	UNUSED						009, 115-199
	42	UNUSED						009, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D00900

Page 5

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00905		P051-00/ /		RCPT- (continued)				009, 115-199
	43	UNUSED						009, 115-199
	44	UNUSED						009, 115-199
	45	UNUSED						009, 115-199
	46	UNUSED						009, 115-199
	47	UNUSED						009, 115-199
	48	UNUSED						009, 115-199
	49	UNUSED						009, 115-199
	50	UNUSED						009, 115-199
	51	UNUSED						009, 115-199
	52	UNUSED						009, 115-199
	53	UNUSED						009, 115-199
	54	UNUSED						009, 115-199
	55	UNUSED						009, 115-199
	56	UNUSED						009, 115-199
	57	UNUSED						009, 115-199
	58	UNUSED						009, 115-199
	59	UNUSED						009, 115-199
	60	UNUSED						009, 115-199
	61	UNUSED						009, 115-199
	62		W1451	PL01			31-51-35	009, 115-199
	63	UNUSED						009, 115-199
	64	UNUSED						009, 115-199
	65	UNUSED						009, 115-199
	66	UNUSED						009, 115-199
	DED		W1451	1065Z			31-51-35	009
	DED		W1451	1066Z			31-51-35	009
	DED		W1451	1071Z			31-51-35	009, 115-199
D00907		P051-00/ /		RCPT-				009, 115-199
	1		W1451	0369	24		31-51-11	009, 115-199
	2	UNUSED						009, 115-199
	3		W1451	0327	24		31-51-34	009, 115-199
	4	UNUSED						009, 115-199
	5		W1451	0391	24		31-51-34	009, 115-199
	6		W1451	0390	24		31-51-34	009, 115-199
	7	UNUSED						009, 115-199
	8	UNUSED						009, 115-199
	9	UNUSED						009, 115-199
	10	UNUSED						009, 115-199
	11	UNUSED						009, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D00900

Page 6

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00907		P051-00/ /		RCPT- (continued)				009, 115-199
	12	UNUSED						009, 115-199
	13		W1451	0337	24		31-51-34	009, 115-199
	14		W1451	0270	22		31-51-11	009, 115-199
	15		W1451	0300	22		31-51-12	009, 115-199
	16	UNUSED						009, 115-199
	17		W1451	1028	24		31-51-11	009, 115-199
	18	UNUSED						009, 115-199
	19		W1451	5021B	24		31-51-34	009, 115-199
	20		W1451	5021R	24		31-51-34	009, 115-199
	21	UNUSED						009, 115-199
	22		W1451	0391	24		31-51-34	009, 115-199
	23	UNUSED						009, 115-199
	24		W1451	1058	24		31-51-12	009, 115-199
	25	UNUSED						009, 115-199
	26	UNUSED						009, 115-199
	27		W1451	0366	24		31-51-11	009, 115-199
	28	UNUSED						009, 115-199
	29		W1451	PK01			31-51-34	009, 115-199
	30		W1451	0386	24		31-51-12	009, 115-199
	31	UNUSED						009, 115-199
	32		W1451	0367	24		31-51-11	009, 115-199
	33		W1451	0387	24		31-51-12	009, 115-199
	34		W1451	5022R	24		31-51-34	009, 115-199
	35	UNUSED						009, 115-199
	36	UNUSED						009, 115-199
	37	UNUSED						009, 115-199
	38	UNUSED						009, 115-199
	39	UNUSED						009, 115-199
	40	UNUSED						009, 115-199
	41	UNUSED						009, 115-199
	42		W1451	PK01			31-51-34	009, 115-199
	43	UNUSED						009, 115-199
	44	UNUSED						009, 115-199
	45	UNUSED						009, 115-199
	46	UNUSED						009, 115-199
	47		W1451	0389	24		31-51-12	009, 115-199
	48		W1451	0390	24		31-51-34	009, 115-199
	49		W1451	0328	24		31-51-34	009, 115-199
	50		W1451	0346	24		31-51-34	009, 115-199
	51	UNUSED						009, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D00900

Page 7

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00907		P051-00/ /		RCPT- (continued)				009, 115-199
	52	UNUSED						009, 115-199
	53	UNUSED						009, 115-199
	54	UNUSED						009, 115-199
	55	UNUSED						009, 115-199
	56	UNUSED						009, 115-199
	57	UNUSED						009, 115-199
	58	UNUSED						009, 115-199
	59	UNUSED						009, 115-199
	60	UNUSED						009, 115-199
	61	UNUSED						009, 115-199
	62	UNUSED						009, 115-199
	63	UNUSED						009, 115-199
	64	UNUSED						009, 115-199
	65	UNUSED						009, 115-199
	66		W1451	5022B	24		31-51-34	009, 115-199
	CAP	Y	W1451	0346	24		31-51-34	115-199
	DED		W1451	1028Z			31-51-11	009, 115-199
	DED		W1451	1058Z			31-51-12	009, 115-199
	DED		W1451	5021Z			31-51-34	009, 115-199
	DED		W1451	5022Z			31-51-34	009, 115-199
D00909		P50/ /		RCPT				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1140	0058	22		27-48-21	ALL
	8		W1140	0059	22		27-48-21	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00900

Page 8

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00909		P50/ /		RCPT (continued)				ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W1140	2012R	24		27-48-21	ALL
	32		W1140	3006R	24		27-48-21	ALL
	33		W1140	3006B	24		27-48-21	ALL
	34		W1140	3006Y	24		27-48-21	ALL
	35		W1140	2012B	24		27-48-21	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W1140	0403	22		22-12-11	ALL
	39		W1140	0404	22		22-12-11	ALL
	40		W1140	2005R	22		22-24-11	ALL
	41		W1140	2005B	22		22-24-11	ALL
	42	UNUSED						ALL
	43		W1140	0060	22		27-48-21	ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47		W1140	PC01			27-48-21	ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	56	UNUSED						ALL
	57	UNUSED						ALL
	58	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00900

Page 9

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00909		P50/ /		RCPT (continued)				ALL
	59	UNUSED						ALL
	60	UNUSED						ALL
	61	UNUSED						ALL
	62	UNUSED						ALL
	63	UNUSED						ALL
	64	UNUSED						ALL
	65	UNUSED						ALL
	66		W1140	PC01			27-48-21	ALL
D00913		1860/245/R10		RCPT-				ALL
	1		W2801	2013R	20		22-11-11	ALL
	2		W2801	2013B	20		22-11-11	ALL
	3		W2801	3009B	20		22-12-11	ALL
	4		W2801	3009Y	20		22-12-11	ALL
	5		W2801	3009R	20		22-12-11	ALL
	6		W2801	0019	18		22-11-11	ALL
	7	UNUSED						ALL
D00915		385/275/L060		RCPT-				001-099
D00915		367/290/L35		RCPT-				115-199
	1		W3525	4254R	24		23-42-11	001-099
	1		W3533	4251R	24		23-42-11	115-199
	2		W3525	4254Z			23-42-11	001-099
	2		W3533	4251Z			23-42-11	115-199
	3		W3525	4254B	24		23-42-11	001-099
	3		W3533	4251B	24		23-42-11	115-199
	4		W3525	4254Y	24		23-42-11	001-099
	4		W3533	4251Y	24		23-42-11	115-199
	5		W3525	4254G	24		23-42-11	001-099
	5		W3533	4251G	24		23-42-11	115-199
D00917		P017-00/ /		RCPT-DATA BASE LOAD, LH				ALL
	1		W2329	5080B	24		34-61-14	ALL
	2		W2329	5080R	24		34-61-14	ALL
	3		W2329	5081R	24		34-61-15	ALL
	4		W2329	5081B	24		34-61-15	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00900

Page 10

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00917		P017-00/ /		RCPT-DATA BASE LOAD, LH (continued)				ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W2329	0162	24		34-61-14	ALL
	12		W2329	0354	20		34-61-14	ALL
	13		W2329	0167	22		34-61-15	ALL
	14		W2329	0168	20		34-61-15	ALL
	15		W2329	0169	20		34-61-15	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	DED		W2329	5080Z			34-61-14	ALL
	DED		W2329	5081Z			34-61-15	ALL
D00919A		E2-3/ /		PLUG-				001, 003-099, 115-199
	A01		W1175	0280	24		34-25-11	001, 003-099, 115-199
	A02	UNUSED						001, 003-099, 115-199
	A03	UNUSED						001, 003-099, 115-199
	A04	UNUSED						001, 003-099, 115-199
	A05	UNUSED						001, 003-099, 115-199
	A06	UNUSED						001, 003-099, 115-199
	A07	UNUSED						001, 003-099, 115-199
	A08	UNUSED						001, 003-099, 115-199
	A09	UNUSED						001, 003-099, 115-199
	A10	UNUSED						001, 003-099
	A10		W1175	0350	22		34-25-11	115-199
	A11	UNUSED						001, 003-099, 115-199
	A12	UNUSED						001, 003-099, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D00900

Page 11

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00919A		E2-3/ /		PLUG- (continued)				001, 003-099, 115-199
	A13	UNUSED						001, 003-099, 115-199
	A14		W1175	0282	24		34-25-11	001, 003-099, 115-199
	A15	UNUSED						001, 003-099, 115-199
	B01	UNUSED						001, 003-099, 115-199
	B02	UNUSED						001, 003-099, 115-199
	B03	UNUSED						001, 003-099, 115-199
	B04	UNUSED						001, 003-099, 115-199
	B05	UNUSED						001, 003-099, 115-199
	B06	UNUSED						001, 003-099, 115-199
	B07	UNUSED						001, 003-099, 115-199
	B08	UNUSED						001, 003-099, 115-199
	B09	UNUSED						001, 003-099, 115-199
	B10	UNUSED						001, 003-099, 115-199
	B11	UNUSED						001, 003-099, 115-199
	B12	UNUSED						001, 003-099, 115-199
	B13	UNUSED						001, 003-099
	B13		W1175	0349	22		34-25-11	115-199
	B14	UNUSED						001, 003-099, 115-199
	B15	UNUSED						001, 003-099, 115-199
	C01		W1175	5080R	24		34-25-11	001, 003-099, 115-199
	C02	UNUSED						001, 003-099, 115-199
	C03	UNUSED						001, 003-099, 115-199
	C04	UNUSED						001, 003-099, 115-199
	C05	UNUSED						001, 003-099, 115-199
	C06	UNUSED						001, 003-099
	C06		W1175	0361	22		34-25-11	115-199
	C07	UNUSED						001, 003-099, 115-199
	C08		W1175	5078R	24		34-25-11	001, 003-099, 115-199
	C09	UNUSED						001, 003-099, 115-199
	C10		W1175	0707	22		34-25-11	001, 003-099
	C10		W1175	0348	22		34-25-11	115-199
	C11	UNUSED						001, 003-099, 115-199
	C12	UNUSED						001, 003-099, 115-199
	C13	UNUSED						001, 003-099, 115-199
	C14	UNUSED						001, 003-099, 115-199
	C15		W1175	5081R	24		34-25-11	001, 003-099, 115-199
	D01		W1175	5080B	24		34-25-11	001, 003-099, 115-199
	D02	UNUSED						001, 003-099, 115-199
	D03	UNUSED						001, 003-099, 115-199
	D04	UNUSED						001, 003-099, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D00900

Page 12

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00919A		E2-3/ /		PLUG- (continued)				001, 003-099, 115-199
	D05	UNUSED						001, 003-099, 115-199
	D06	UNUSED						001, 003-099, 115-199
	D07	UNUSED						001, 003-099, 115-199
	D08		W1175	5078B	24		34-25-11	001, 003-099, 115-199
	D09	UNUSED						001, 003-099, 115-199
	D10	UNUSED						001, 003-099, 115-199
	D11	UNUSED						001, 003-099, 115-199
	D12	UNUSED						001, 003-099, 115-199
	D13	UNUSED						001, 003-099, 115-199
	D14	UNUSED						001, 003-099, 115-199
	D15		W1175	5081B	24		34-25-11	001, 003-099, 115-199
	DED		W1175	5078Z			34-25-11	001, 003-099, 115-199
	DED		W1175	5080Z			34-25-11	001, 003-099, 115-199
	DED		W1175	5081Z			34-25-11	001, 003-099, 115-199
D00919B		E2-3/ /		PLUG-				001, 003-099, 115-199
	A01	UNUSED						001, 003-099, 115-199
	A02	UNUSED						001, 003-099, 115-199
	A03	UNUSED						001, 003-099, 115-199
	A04	UNUSED						001, 003-099, 115-199
	A05	UNUSED						001, 003-099, 115-199
	A06	UNUSED						001, 003-099, 115-199
	A07	UNUSED						001, 003-099, 115-199
	A08		W1175	5082R	24		34-25-11	001, 003-099, 115-199
	A09	UNUSED						001, 003-099, 115-199
	A10	UNUSED						001, 003-099, 115-199
	A11	UNUSED						001, 003-099, 115-199
	A12	UNUSED						001, 003-099, 115-199
	A13	UNUSED						001, 003-099, 115-199
	A14	UNUSED						001, 003-099, 115-199
	A15	UNUSED						001, 003-099
	A15		W1175	5083R	24		34-25-11	115-199
	B01	UNUSED						001, 003-099, 115-199
	B02	UNUSED						001, 003-099, 115-199
	B03	UNUSED						001, 003-099, 115-199
	B04	UNUSED						001, 003-099, 115-199
	B05	UNUSED						001, 003-099, 115-199
	B06	UNUSED						001, 003-099, 115-199
	B07	UNUSED						001, 003-099, 115-199
	B08		W1175	5082B	24		34-25-11	001, 003-099, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D00900

Page 13

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00919B		E2-3/ /		PLUG- (continued)				001, 003-099, 115-199
	B09	UNUSED						001, 003-099, 115-199
	B10	UNUSED						001, 003-099, 115-199
	B11	UNUSED						001, 003-099, 115-199
	B12	UNUSED						001, 003-099, 115-199
	B13	UNUSED						001, 003-099, 115-199
	B14	UNUSED						001, 003-099, 115-199
	B15	UNUSED						001, 003-099
	B15		W1175	5083B	24		34-25-11	115-199
	C01	UNUSED						001, 003-099, 115-199
	C02	UNUSED						001, 003-099, 115-199
	C03	UNUSED						001, 003-099, 115-199
	C04	UNUSED						001, 003-099, 115-199
	C05	UNUSED						001, 003-099, 115-199
	C06	UNUSED						001, 003-099, 115-199
	C07	UNUSED						001, 003-099, 115-199
	C08	UNUSED						001, 003-099, 115-199
	C09	UNUSED						001, 003-099, 115-199
	C10	UNUSED						001, 003-099, 115-199
	C11	UNUSED						001, 003-099, 115-199
	C12	UNUSED						001, 003-099, 115-199
	C13	UNUSED						001, 003-099, 115-199
	C14	UNUSED						001, 003-099, 115-199
	C15	UNUSED						001, 003-099, 115-199
	D01	UNUSED						001, 003-099, 115-199
	D02	UNUSED						001, 003-099, 115-199
	D03	UNUSED						001, 003-099, 115-199
	D04	UNUSED						001, 003-099, 115-199
	D05	UNUSED						001, 003-099, 115-199
	D06	UNUSED						001, 003-099, 115-199
	D07	UNUSED						001, 003-099, 115-199
	D08	UNUSED						001, 003-099, 115-199
	D09	UNUSED						001, 003-099, 115-199
	D10	UNUSED						001, 003-099, 115-199
	D11	UNUSED						001, 003-099, 115-199
	D12	UNUSED						001, 003-099, 115-199
	D13	UNUSED						001, 003-099, 115-199
	D14	UNUSED						001, 003-099, 115-199
	D15	UNUSED						001, 003-099, 115-199
	DED		W1175	5082Z			34-25-11	001, 003-099, 115-199
	DED		W1175	5083Z			34-25-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D00900

Page 14

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00919C		E2-3/ /		PLUG-				001, 003-099, 115-199
	1	UNUSED						001, 003-099, 115-199
	2		W1175	0278	24		34-25-11	001, 003-099, 115-199
	3	UNUSED						001, 003-099, 115-199
	4		W1175	0279	22		34-25-11	001, 003-099, 115-199
	5	UNUSED						001, 003-099, 115-199
	= C1	UNUSED						001, 003-099, 115-199
	= C5	UNUSED						001, 003-099, 115-199
D00939		370/244/L037		JACK-				001-099
	1		W0509	4251R	22		23-42-11	001-099
	2		W0509	4251Z			23-42-11	001-099
	3		W0509	4251B	22		23-42-11	001-099
	4		W0509	4251Y	22		23-42-11	001-099
	5		W0509	4251G	22		23-42-11	001-099
D00945		383/275/L056		PLUG-				001-099
	1		W0509	4251R	22		23-42-11	001-099
	2		W0509	4251Z			23-42-11	001-099
	3		W0509	4251B	22		23-42-11	001-099
	4		W0509	4251Y	22		23-42-11	001-099
	5		W0509	4251G	22		23-42-11	001-099
D00947		453/297/L015		PLUG				001-099
	A	UNUSED						001-099
	B	UNUSED						001-099
	C	UNUSED						001-099
	D	UNUSED						001-099
	E		W2865	0007	22		23-32-01	001-099
	F		W2865	0008	22		23-32-01	001-099
	G	UNUSED						001-099
	H		W2865	0006	22		23-32-01	001-099
	J		W2865	0005	22		23-32-01	001-099
	K		W2865	0001	22		23-32-01	001-099
	L		W2865	0004	22		23-32-01	001-099
	M		W2865	0002	22		23-32-01	001-099
D00951		453/295/R015		PLUG				001-099
	A	UNUSED						001-099
	B	UNUSED						001-099
	C	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D00900

Page 15

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00951		453/295/R015		PLUG (continued)				001-099
	D	UNUSED						001-099
	E		W2867	0007	22		23-32-01	001-099
	F		W2867	0008	22		23-32-01	001-099
	G	UNUSED						001-099
	H		W2867	0006	22		23-32-01	001-099
	J		W2867	0005	22		23-32-01	001-099
	K		W2867	0001	22		23-32-01	001-099
	L		W2867	0004	22		23-32-01	001-099
	M		W2867	0002	22		23-32-01	001-099
D00953		453/297/R020		CABLE PLUG				001-099
	= A1		W2869	001CX			23-32-01	001-099
	= C1		W2869	001CO			23-32-01	001-099
D00955		954/295/R005		CABLE PLUG				001-099
	= A1		W2869	001CX			23-32-01	001-099
	= C1		W2869	001CO			23-32-01	001-099
D00970		347/289/R019		PLUG-				001-099
D00970		345/295/R20		PLUG-				115-199
	1		W3644	0001	22		33-27-11	001-099
	1		W3644	0030	20		33-27-11	115-199
	2		W3644	0002	20		33-27-11	001-099
	2		W3644	0032	22		33-27-11	115-199
	3		W3644	0003	22		33-27-11	001-099
	3		W3644	0037	22		33-27-11	115-199
	4		W3644	0004	20		33-27-11	001-099
	4		W3644	0031	22		33-27-11	115-199
	5		W3644	0005	22		33-27-11	001-099
	5		W3644	0036	22		33-27-11	115-199
	6		W3644	0006	22		33-27-11	001-099
	6		W3644	0029	22		33-27-11	115-199
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00900

Page 16

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D00994		1668/294/R5		PLUG-				001-099
D00994		1668/294/L3		PLUG-				115-199
	1		W3536	0002	22		33-27-31	ALL
	2		W3536	0013	20		33-27-31	ALL
	3		W3536	0011	22		33-27-31	ALL
	4		W3536	0015	20		33-27-31	ALL
	5		W3536	0003	22		33-27-31	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D00900

Page 17 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01076		1484/ /		PLUG				001-099
D01076		1630/172/R43		PLUG-				115-199
	A		W1026	0087	20		24-32-41	ALL
	B		W1026	0086	20		24-32-41	ALL
	C		W1026	0085	20		24-32-41	ALL
	D		W1026	0117	10		24-32-41	ALL
	E		W1026	0118	10		24-32-41	ALL
	F		W1026	0119	10		24-32-41	ALL
	G		W1026	0084	20		24-32-41	ALL
	H		W1026	0120	20		24-32-41	ALL
	I		W1026	0094	20		24-32-41	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01000

Page 1 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01100J		AS1080/ /		RCPT				ALL
	1		W5108	4251Y	20		73-34-11	ALL
	2		W5108	0001	18		71-51-11	ALL
	3	UNUSED						ALL
	4		W5108	0012	20		SPARE	ALL
	5		W5108	4251R	20		73-33-11	ALL
	6		W5108	4251B	20		79-35-11	ALL
	7		W5108	3501R	20		80-11-11	ALL
	8		W5108	0028	18		80-11-11	ALL
	9		W5108	3501Y	20		80-11-11	ALL
	10		W5108	2504B	20		SPARE	ALL
	11		W5108	2504R	20		SPARE	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W5108	4251G	20		79-33-11	ALL
	17		W5108	2503R	20		74-31-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W5108	FRAD			77-12-21	ALL
	22		W5108	1004	20		74-31-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W5108	0029	18		71-51-11	ALL
	26		W5108	FRAC			77-12-11	ALL
	27		W5108	FRAF			30-34-21	ALL
	28		W5108	2506B	18		30-34-21	ALL
	29		W5108	2506R	18		30-34-21	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W5108	3501B	20		80-11-11	ALL
	33		W5108	0005	18		74-31-11	ALL
	34		W5108	2503B	20		74-31-11	ALL
	35	UNUSED						ALL
	36		W5108	2501R	20		77-12-11	ALL
	37		W5108	2501B	20		77-12-11	ALL
	38		W5108	2502R	20		77-12-21	ALL
	39		W5108	2502B	20		77-12-21	ALL
	40	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D01100

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01100J		AS1080/ /		RCPT (continued)				ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	S/R		W5108	0031	20		77-12-11	ALL
	S/R		W5108	0032	20		77-12-21	ALL
	S/R		W5108	0037	18		30-34-21	ALL
	S/R		W5108	1004Z			74-31-11	ALL
	S/R		W5108	2503Z			74-31-11	ALL
	S/R		W5108	2504Z			SPARE	ALL
	S/R		W5108	3501Z			80-11-11	ALL
	S/R		W5108	4251Z			79-35-11	ALL
			W5108	0031	20		77-12-11	ALL
			W5108	0032	20		77-12-21	ALL
			W5108	0037	18		30-34-21	ALL
			W5108	2501Z			77-12-11	ALL
			W5108	2502Z			77-12-21	ALL
			W5108	2506Z			30-34-21	ALL
			W5108	FRAC			77-12-11	ALL
			W5108	FRAD			77-12-21	ALL
			W5108	FRAF			30-34-21	ALL
D01102J		AS1080/ /		RCPT				ALL
	1		W5102	3506B	20		SPARE	ALL
	2		W5102	0027	18		71-51-11	ALL
	3		W5102	1001	20		76-11-21	ALL
	4		W5102	3506R	20		SPARE	ALL
	5		W5102	3506Y	20		SPARE	ALL
	6		W5102	3502R	20		30-21-11	ALL
	7		W5102	3502Y	20		30-21-11	ALL
	8		W5102	0021	20		76-11-11	ALL
	9		W5102	2501R	20		79-34-11	ALL
	10		W5102	0020	20		76-11-11	ALL
	11		W5102	3502B	20		30-21-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W5102	3505Y	20		79-32-11	ALL
	15		W5102	3505B	20		79-32-11	ALL
	16		W5102	2503R	20		74-31-11	ALL
	17		W5102	FRAF			79-34-11	ALL
	18		W5102	3503R	20		73-31-11	ALL
	19		W5102	3503B	20		73-31-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01100

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01102J		AS1080/ /		RCPT (continued)				ALL
	20		W5102	3504B	20		79-31-11	ALL
	21	UNUSED						ALL
	22		W5102	0030	18		79-34-11	ALL
	23		W5102	FRAE			79-34-11	ALL
	24		W5102	2504Z			SPARE	001-099
	24		W5102	2505Z			SPARE	115-199
	25		W5102	0032	18		71-51-11	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W5102	3505R	20		79-32-11	ALL
	31		W5102	2503B	20		74-31-11	ALL
	32		W5102	0013	18		74-31-11	ALL
	33		W5102	2502R	20		79-34-11	ALL
	34		W5102	0034	18		79-34-11	ALL
	35		W5102	3503Y	20		73-31-11	ALL
	36		W5102	3504R	20		79-31-11	ALL
	37		W5102	3504Y	20		79-31-11	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W5102	2504R	20		SPARE	001-099
	40		W5102	2505B	20		SPARE	115-199
	41	UNUSED						001-099
	41		W5102	2505R	20		SPARE	115-199
	42		W5102	2504B	20		SPARE	001-099
	42		W5102	0035	20		SPARE	115-199
	S/R		W5102	0008	20		79-34-11	ALL
	S/R		W5102	0009	20		79-34-11	ALL
	S/R		W5102	1001Z			76-11-21	ALL
	S/R		W5102	2503Z			74-31-11	ALL
	S/R		W5102	3502Z			30-21-11	ALL
	S/R		W5102	3503Z			73-31-11	ALL
	S/R		W5102	3504Z			79-31-11	ALL
	S/R		W5102	3505Z			79-32-11	ALL
	S/R		W5102	3506Z			SPARE	ALL
			W5102	0008	20		79-34-11	ALL
			W5102	0009	20		79-34-11	ALL
			W5102	2501Z			79-34-11	ALL
			W5102	2502Z			79-34-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01100

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01102J		AS1080/ /		RCPT (continued)				ALL
			W5102	FRAE			79-34-11	ALL
			W5102	FRAF			79-34-11	ALL
D01104J		78/5.0/		RCPT				001-099
D01104J		AS1080/ /		RCPT				115-199
	1		W5100	0074	18		71-51-11	ALL
	2		W5100	1003	20		SPARE	001-099
	2	UNUSED						115-199
	3		W5100	FRAC			73-21-11	ALL
	4		W5100	2503R	20		73-21-11	ALL
	5	UNUSED						ALL
	6		W5100	3504B	20		SPARE	001-099
	6		W5100	2505B	20		SPARE	115-199
	7	UNUSED						ALL
	8		W5100	3504Y	20		SPARE	001-099
	8		W5100	2506B	20		SPARE	115-199
	9		W5100	2502R	20		73-21-11	ALL
	10		W5100	0066	20		SPARE	001-099
	10	UNUSED						115-199
	11	UNUSED						ALL
	12		W5100	2503B	20		73-21-11	ALL
	13		W5100	2501R	20		73-21-11	ALL
	14		W5100	2501B	20		73-21-11	ALL
	15		W5100	2510B	20		SPARE	001-099
	15	UNUSED						115-199
	16		W5100	2510R	20		SPARE	001-099
	16	UNUSED						115-199
	17		W5100	2510Z			SPARE	001-099
	17	UNUSED						115-199
	18		W5100	2511B	20		SPARE	001-099
	18	UNUSED						115-199
	19		W5100	2511R	20		SPARE	001-099
	19	UNUSED						115-199
	20		W5100	2511Z			SPARE	001-099
	20		W5100	2506R	20		SPARE	115-199
	21		W5100	2502B	20		73-21-11	ALL
	22	UNUSED						ALL
	23		W5100	0096	20		SPARE	001-099
	23	UNUSED						115-199
	24		W5100	0097	20		SPARE	001-099

HOOKUP LIST

D280N032

91-21-51

Section D01100

Page 4

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01104J		78/5.0/		RCPT (continued)				001-099
D01104J		AS1080/ /		RCPT (continued)				115-199
	24	UNUSED						115-199
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	4D	W5100	4502W	20		77-21-11	ALL
	28	4B	W5100	4502G	20		77-21-11	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W5100	3504R	20		SPARE	001-099
	31		W5100	2505R	20		SPARE	115-199
	32		W5100	FRAB			77-21-11	ALL
	33	UNUSED						ALL
	34		W5100	1001	18		73-21-11	ALL
	35		W5100	2504B	18		75-31-11	ALL
	36		W5100	2504R	18		75-31-11	ALL
	37	4D	W5100	4501W	20		75-31-11	ALL
	38	4B	W5100	4501G	20		75-31-11	ALL
	39		W5100	FRAA			75-31-11	ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	S/R		W5100	1003Z			SPARE	001-099
	S/R		W5100	3504Z			SPARE	001-099
	S/R		W5100	0092	20		73-21-11	ALL
	S/R		W5100	0093	20		75-31-11	ALL
	S/R		W5100	0094	20		77-21-11	ALL
	S/R		W5100	1001Z			73-21-11	ALL
	S/R		W5100	2504Z			75-31-11	ALL
	S/R		W5100	2505Z			SPARE	115-199
	S/R		W5100	2506Z			SPARE	115-199
			W5100	0092	20		73-21-11	ALL
			W5100	0093	20		75-31-11	ALL
			W5100	0094	20		77-21-11	ALL
			W5100	2501Z			73-21-11	ALL
			W5100	2502Z			73-21-11	ALL
			W5100	2503Z			73-21-11	ALL
			W5100	4501Z			75-31-11	ALL
			W5100	4502Z			77-21-11	ALL
			W5100	FRAA			75-31-11	ALL
			W5100	FRAB			77-21-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01100

Page 5

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01104J		78/5.0/		RCPT (continued)				001-099
D01104J		AS1080/ /		RCPT (continued)				115-199
			W5100	FRAC			73-21-11	ALL
D01106J		PPS78/ /R05		RCPT				001-099
D01106J		AS1080/ /		RCPT				115-199
	1		W5104	5002R	20		77-11-11	ALL
	2		W5104	5002B	20		77-11-11	ALL
	3		W5104	FRAH			77-12-31	ALL
	4		W5104	2504R	20		75-31-11	ALL
	5		W5104	FRAF			77-11-11	ALL
	6		W5104	2504B	20		75-31-11	ALL
	7		W5104	0001	18		71-51-11	ALL
	8		W5104	2505B	18		75-31-11	ALL
	9		W5104	0009	18		80-11-11	ALL
	10		W5104	2505R	18		75-31-11	ALL
	11		W5104	2501R	20		77-12-31	ALL
	12		W5104	2501B	20		77-12-31	ALL
	13		W5104	2506R	20		SPARE	001-099
	13		W5104	2502B	20		SPARE	115-199
	14		W5104	5001R	20		77-11-11	ALL
	15		W5104	5001B	20		77-11-11	ALL
	16		W5104	2507R	18		73-21-11	001-099
	16		W5104	2506R	18		73-21-11	115-199
	17		W5104	2507B	18		73-21-11	001-099
	17		W5104	2506B	18		73-21-11	115-199
	18		W5104	0007	18		71-51-11	ALL
	19		W5104	0006	18		71-51-11	ALL
	20		W5104	2502B	20		SPARE	001-099
	20		W5104	2502R	20		SPARE	115-199
	21		W5104	FRAA			77-11-11	001-099
	21		W5104	FRAG			77-11-11	115-199
	22		W5104	2502R	20		SPARE	001-099
	22	UNUSED						115-199
	23		W5104	2002R	18		22-33-11	ALL
	24		W5104	2002B	18		22-33-11	ALL
	25		W5104	2001R	18		22-33-11	ALL
	26		W5104	2001B	18		22-33-11	ALL
	27		W5104	2503R	18		73-21-12	ALL
	28		W5104	2503B	18		73-21-12	ALL
	29		W5104	1004	20		77-11-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01100

Page 6

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01106J		PPS78/ /R05		RCPT (continued)				001-099
D01106J		AS1080/ /		RCPT (continued)				115-199
	30		W5104	1003	18		77-11-11	ALL
	31		W5104	0028	20		SPARE	001-099
	31		W5104	2507B	20		SPARE	115-199
	32		W5104	2506B	20		SPARE	001-099
	32		W5104	0010	20		SPARE	115-199
	33		W5104	0029	20		SPARE	001-099
	33		W5104	2507R	20		SPARE	115-199
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	S/R		W5104	2506Z			SPARE	001-099
	S/R		W5104	2507Z			73-21-11	001-099
	S/R		W5104	0025	20		77-12-31	ALL
	S/R		W5104	0026	20		77-11-11	ALL
	S/R		W5104	0027	20		77-11-11	ALL
	S/R		W5104	1003Z			77-11-11	ALL
	S/R		W5104	1004Z			77-11-11	ALL
	S/R		W5104	2502Z			SPARE	ALL
	S/R		W5104	2503Z			73-21-12	ALL
	S/R		W5104	2504Z			75-31-11	ALL
	S/R		W5104	2505Z			75-31-11	ALL
	S/R		W5104	2506Z			73-21-11	115-199
	S/R		W5104	2507Z			SPARE	115-199
			W5104	FRAA			77-11-11	001-099
			W5104	0025	20		77-12-31	ALL
			W5104	0026	20		77-11-11	ALL
			W5104	0027	20		77-11-11	ALL
			W5104	2501Z			77-12-31	ALL
			W5104	5001Z			77-11-11	ALL
			W5104	5002Z			77-11-11	ALL
			W5104	FRAF			77-11-11	ALL
			W5104	FRAH			77-12-31	ALL
			W5104	FRAG			77-11-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D01100

Page 7

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01108J		78/5.0/		RCPT				001-099
D01108J		AS1080/ /		RCPT				115-199
	1		W5100	0011R	20		26-11-11	ALL
	2	UNUSED						ALL
	3		W5100	0002	18		26-13-11	ALL
	4		W5100	3503R	20		76-11-11	ALL
	5		W5100	0012R	20		26-11-11	ALL
	6		W5100	0003	18		26-13-11	ALL
	7		W5100	0005	20		29-11-11	ALL
	8		W5100	1002	20		76-11-11	ALL
	9		W5100	0017	18		76-11-11	ALL
	10		W5100	3503Y	20		76-11-11	ALL
	11		W5100	3503B	20		76-11-11	ALL
	12		W5100	0075	18		71-51-11	ALL
	13		W5100	0013R	20		26-11-11	ALL
	14	UNUSED						ALL
	15		W5100	0079R	18		26-11-11	ALL
	16		W5100	0057	20		SPARE	ALL
	17		W5100	0058	20		SPARE	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	S/R		W5100	1002Z			76-11-11	ALL
	S/R		W5100	3503Z			76-11-11	ALL
D01110J		AS1080/ /		RCPT				ALL
	1		W5108	FRAE			77-21-11	ALL
	2		W5108	0018R	20		26-11-11	ALL
	3	UNUSED						ALL
	4		W5108	0021	18		26-13-11	ALL
	5		W5108	0022	18		26-13-11	ALL
	6	4B	W5108	4501G	20		77-21-11	ALL
	7	4D	W5108	4501W	20		77-21-11	ALL
	8		W5108	0019R	20		26-11-11	ALL
	9		W5108	2505B	20		SPARE	ALL
	10		W5108	2505R	20		SPARE	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W5108	0030R	18		26-11-11	ALL
	14		W5108	0020R	20		26-11-11	ALL
	S/R		W5108	0033	20		77-21-11	ALL
	S/R		W5108	2505Z			SPARE	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01100

Page 8

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01110J		AS1080/ /		RCPT (continued)				ALL
			W5108	0033	20		77-21-11	ALL
			W5108	4501Z			77-21-11	ALL
			W5108	FRAE			77-21-11	ALL
D01112J		PPS78/ /R01		RCPT				001-099
D01112J		AS1080/ /		RCPT				115-199
	1	UNUSED						ALL
	2		W5104	4501W	20		77-31-11	ALL
	3		W5104	4501R	20		77-31-11	ALL
	4		W5104	4501Z			77-31-11	ALL
	5		W5104	4502W	20		77-31-11	ALL
	6		W5104	4502R	20		77-31-11	ALL
	7		W5104	4502Z			77-31-11	ALL
D01114J		AS1080/ /		RCPT				ALL
	1		W5114	2502R	20		24-11-11	ALL
	2		W5114	2502B	20		24-11-11	ALL
	3		W5114	4001G	20		24-21-11	ALL
	4		W5114	0002	16		24-11-11	ALL
	5		W5114	2502Z			24-11-11	ALL
	6		W5114	2002R	20		24-11-11	ALL
	7		W5114	2002B	20		24-11-11	ALL
	8		W5114	0001	20		24-11-11	ALL
	9		W5114	2501R	20		24-21-11	ALL
	10		W5114	2501B	20		24-21-11	ALL
	11		W5114	2501Z			24-21-11	ALL
	12		W5114	4001R	20		24-21-11	ALL
	13		W5114	4001B	20		24-21-11	ALL
	14		W5114	4001Y	20		24-21-11	ALL
	15		W5114	3001R	18		24-21-11	ALL
	16		W5114	3001B	18		24-21-11	ALL
	17		W5114	3001Y	18		24-21-11	ALL
	18		W5114	2001R	20		24-11-11	ALL
	19		W5114	2001B	20		24-11-11	ALL
	20		W5114	0004	18		24-11-11	ALL
	21		W5114	0003	16		24-11-11	ALL
	22		W5114	2003B	20		SPARE	ALL
	23		W5114	2003R	20		SPARE	ALL
	24	UNUSED						ALL
	25		W5114	0006	20		SPARE	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01100

Page 9

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01114J		AS1080/ /		RCPT (continued)				ALL
	26		W5114	0007	20		SPARE	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
D01116P		PPS 90/136/R015		PLUG				ALL
	A		W3312	0004	*1		24-21-11	ALL
	B		W3312	0005	*1		24-21-11	ALL
	C		W3312	0006	*1		24-21-11	ALL
	D		W3312	0007	04		24-21-11	ALL
D01118J		AS1140/ /		RCPT				ALL
	1		W3318	2001R	20		78-36-11	ALL
	2		W3318	2001B	20		78-36-11	ALL
	3		W3318	2003R	20		78-36-11	ALL
	4		W3318	2003B	20		78-36-11	ALL
	5		W3318	2002R	20		78-36-11	ALL
	6		W3318	2002B	20		78-36-11	ALL
	7		W3318	2004R	20		78-36-11	ALL
	8		W3318	2004B	20		78-36-11	ALL
	9		W3318	2501R	16		78-34-51	ALL
	10		W3318	2501B	16		78-34-51	ALL
	S/R		W3318	2501Z			78-34-51	ALL
D01120J		AS1140/ /		RCPT				ALL
	1		W3316	2001R	20		78-34-11	ALL
	2	UNUSED						ALL
	3		W3316	2001B	20		78-34-11	ALL
	4		W3316	2002R	20		78-34-11	ALL
	5		W3316	2003B	20		SPARE	ALL
	6		W3316	2002B	20		78-34-11	ALL
	7		W3316	2003R	20		SPARE	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01100

Page 10 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01200J		AS2080/ /		RCPT				ALL
	1		W5208	4251Y	20		73-34-11	ALL
	2		W5208	0001	18		71-51-11	ALL
	3	UNUSED						ALL
	4		W5208	0012	20		SPARE	ALL
	5		W5208	4251R	20		73-33-11	ALL
	6		W5208	4251B	20		79-35-11	ALL
	7		W5208	3501R	20		80-11-21	ALL
	8		W5208	0028	18		80-11-21	ALL
	9		W5208	3501Y	20		80-11-21	ALL
	10		W5208	2504B	20		SPARE	ALL
	11		W5208	2504R	20		SPARE	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W5208	4251G	20		79-33-11	ALL
	17		W5208	2503R	20		74-31-21	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W5208	FRAD			77-12-21	ALL
	22		W5208	1004	20		74-31-21	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W5208	0029	18		71-51-11	ALL
	26		W5208	FRAC			77-12-11	ALL
	27		W5208	FRAF			30-34-22	001-099
	27		W5208	FRAG			30-34-22	115-199
	28		W5208	2506B	18		30-34-22	ALL
	29		W5208	2506R	18		30-34-22	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W5208	3501B	20		80-11-21	ALL
	33		W5208	0005	18		74-31-21	ALL
	34		W5208	2503B	20		74-31-21	ALL
	35	UNUSED						ALL
	36		W5208	2501R	20		77-12-11	ALL
	37		W5208	2501B	20		77-12-11	ALL
	38		W5208	2502R	20		77-12-21	ALL
	39		W5208	2502B	20		77-12-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01200

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01200J		AS2080/ /		RCPT (continued)				ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	S/R		W5208	0031	20		77-12-11	ALL
	S/R		W5208	0032	20		77-12-21	ALL
	S/R		W5208	0037	18		30-34-22	ALL
	S/R		W5208	1004Z			74-31-21	ALL
	S/R		W5208	2503Z			74-31-21	ALL
	S/R		W5208	2504Z			SPARE	ALL
	S/R		W5208	3501Z			80-11-21	ALL
	S/R		W5208	4251Z			79-35-11	ALL
			W5208	FRAF			30-34-22	001-099
			W5208	0031	20		77-12-11	ALL
			W5208	0032	20		77-12-21	ALL
			W5208	0037	18		30-34-22	ALL
			W5208	2501Z			77-12-11	ALL
			W5208	2502Z			77-12-21	ALL
			W5208	2506Z			30-34-22	ALL
			W5208	FRAC			77-12-11	ALL
			W5208	FRAD			77-12-21	ALL
			W5208	FRAG			30-34-22	115-199
D01202J		AS2080/ /RFS		RCPT				ALL
	1		W5202	3506B	20		SPARE	ALL
	2		W5202	0027	18		71-51-11	ALL
	3		W5202	1001	20		76-11-21	ALL
	4		W5202	3506R	20		SPARE	ALL
	5		W5202	3506Y	20		SPARE	ALL
	6		W5202	3502R	20		30-21-11	ALL
	7		W5202	3502Y	20		30-21-11	ALL
	8		W5202	0021	20		76-11-12	ALL
	9		W5202	2501R	20		79-34-11	ALL
	10		W5202	0020	20		76-11-12	ALL
	11		W5202	3502B	20		30-21-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W5202	3505Y	20		79-32-11	ALL
	15		W5202	3505B	20		79-32-11	ALL
	16		W5202	2503R	20		74-31-21	ALL
	17		W5202	FRAF			79-34-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01200

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01202J		AS2080/ /RFS		RCPT (continued)				ALL
	18		W5202	3503R	20		73-31-11	ALL
	19		W5202	3503B	20		73-31-11	ALL
	20		W5202	3504B	20		79-31-11	ALL
	21	UNUSED						ALL
	22		W5202	0031	18		79-34-11	ALL
	23		W5202	FRAE			79-34-11	ALL
	24		W5202	2504Z			SPARE	001-099
	24		W5202	2505Z			SPARE	115-199
	25		W5202	0032	18		71-51-11	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W5202	3505R	20		79-32-11	ALL
	31		W5202	2503B	20		74-31-21	ALL
	32		W5202	0013	18		74-31-21	ALL
	33		W5202	2502R	20		79-34-11	ALL
	34		W5202	0034	18		79-34-11	ALL
	35		W5202	3503Y	20		73-31-11	ALL
	36		W5202	3504R	20		79-31-11	ALL
	37		W5202	3504Y	20		79-31-11	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W5202	2504R	20		SPARE	001-099
	40		W5202	2505B	20		SPARE	115-199
	41	UNUSED						001-099
	41		W5202	2505R	20		SPARE	115-199
	42		W5202	2504B	20		SPARE	001-099
	42		W5202	0035	20		SPARE	115-199
	S/R		W5202	0008	20		79-34-11	ALL
	S/R		W5202	0009	20		79-34-11	ALL
	S/R		W5202	1001Z			76-11-21	ALL
	S/R		W5202	2503Z			74-31-21	ALL
	S/R		W5202	3502Z			30-21-11	ALL
	S/R		W5202	3503Z			73-31-11	ALL
	S/R		W5202	3504Z			79-31-11	ALL
	S/R		W5202	3505Z			79-32-11	ALL
	S/R		W5202	3506Z			SPARE	ALL
			W5202	0008	20		79-34-11	ALL
			W5202	0009	20		79-34-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01200

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01202J		AS2080/ /RFS		RCPT (continued)				ALL
			W5202	2501Z			79-34-11	ALL
			W5202	2502Z			79-34-11	ALL
			W5202	FRAE			79-34-11	ALL
			W5202	FRAF			79-34-11	ALL
D01204J		AS2080/ /		RCPT				ALL
	1		W5200	0078	18		71-51-11	ALL
	2	UNUSED						ALL
	3		W5200	FRAE			73-21-21	ALL
	4		W5200	2503R	20		73-21-21	ALL
	5	UNUSED						ALL
	6		W5200	2505B	20		SPARE	ALL
	7	UNUSED						ALL
	8		W5200	2506B	20		SPARE	ALL
	9		W5200	2502R	20		73-21-21	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W5200	2503B	20		73-21-21	ALL
	13		W5200	2501R	20		73-21-21	ALL
	14		W5200	2501B	20		73-21-21	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W5200	2506R	20		SPARE	ALL
	21		W5200	2502B	20		73-21-21	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	4D	W5200	4502W	20		77-21-11	ALL
	28	4B	W5200	4502G	20		77-21-11	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W5200	2505R	20		SPARE	ALL
	32		W5200	FRAG			77-21-11	ALL
	33	UNUSED						ALL
	34		W5200	1003	18		73-21-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01200

Page 4

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01204J		AS2080/ /		RCPT (continued)				ALL
	35		W5200	2504B	18		75-31-11	ALL
	36		W5200	2504R	18		75-31-11	ALL
	37	4D	W5200	4501W	20		75-31-11	ALL
	38	4B	W5200	4501G	20		75-31-11	ALL
	39		W5200	FRAF			75-31-11	ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	S/R		W5200	0092	20		73-21-21	ALL
	S/R		W5200	0093	20		75-31-11	ALL
	S/R		W5200	0094	20		77-21-11	ALL
	S/R		W5200	1003Z			73-21-21	ALL
	S/R		W5200	2504Z			75-31-11	ALL
	S/R		W5200	2505Z			SPARE	ALL
	S/R		W5200	2506Z			SPARE	ALL
			W5200	0092	20		73-21-21	ALL
			W5200	0093	20		75-31-11	ALL
			W5200	0094	20		77-21-11	ALL
			W5200	2501Z			73-21-21	ALL
			W5200	2502Z			73-21-21	ALL
			W5200	2503Z			73-21-21	ALL
			W5200	4501Z			75-31-11	ALL
			W5200	4502Z			77-21-11	ALL
			W5200	FRAE			73-21-21	ALL
			W5200	FRAF			75-31-11	ALL
			W5200	FRAE			77-21-11	ALL
D01206J		W319/ /R5.0		RCPT				001-099
D01206J		WS2080/ /		RCPT				115-199
	1		W5204	5002R	20		77-11-11	ALL
	2		W5204	5002B	20		77-11-11	ALL
	3		W5204	FRAH			77-12-31	ALL
	4		W5204	2504R	20		75-31-11	ALL
	5		W5204	FRAF			77-11-11	ALL
	6		W5204	2504B	20		75-31-11	ALL
	7		W5204	0005	18		71-51-11	ALL
	8		W5204	2505B	18		75-31-11	ALL
	9		W5204	0009	18		80-11-21	ALL
	10		W5204	2505R	18		75-31-11	ALL
	11		W5204	2501R	20		77-12-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01200

Page 5

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01206J		W319/ /R5.0		RCPT (continued)				001-099
D01206J		WS2080/ /		RCPT (continued)				115-199
	12		W5204	2501B	20		77-12-31	ALL
	13	UNUSED						001-099
	13		W5204	2502B	20		SPARE	115-199
	14		W5204	5001R	20		77-11-11	ALL
	15		W5204	5001B	20		77-11-11	ALL
	16		W5204	2507R	18		73-21-21	001-099
	16		W5204	2506R	18		73-21-21	115-199
	17		W5204	2507B	18		73-21-21	001-099
	17		W5204	2506B	18		73-21-21	115-199
	18		W5204	0007	18		71-51-11	ALL
	19		W5204	0006	18		71-51-11	ALL
	20	UNUSED						001-099
	20		W5204	2502R	20		SPARE	115-199
	21		W5204	FRAA			77-11-11	001-099
	21		W5204	FRAG			77-11-11	115-199
	22	UNUSED						ALL
	23		W5204	2002R	18		22-33-11	ALL
	24		W5204	2002B	18		22-33-11	ALL
	25		W5204	2001R	18		22-33-11	ALL
	26		W5204	2001B	18		22-33-11	ALL
	27		W5204	2503R	18		73-21-22	ALL
	28		W5204	2503B	18		73-21-22	ALL
	29		W5204	1004	20		77-11-11	ALL
	30		W5204	1003	18		77-11-11	ALL
	31		W5204	2508B	20		SPARE	001-099
	31		W5204	2507B	20		SPARE	115-199
	32		W5204	2508R	20		SPARE	001-099
	32		W5204	0010	20		SPARE	115-199
	33		W5204	2509B	20		SPARE	001-099
	33		W5204	2507R	20		SPARE	115-199
	34		W5204	2509R	20		SPARE	001-099
	34	UNUSED						115-199
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D01200

Page 6

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01206J		W319/ /R5.0		RCPT (continued)				001-099
D01206J		WS2080/ /		RCPT (continued)				115-199
	42	UNUSED						ALL
	S/R		W5204	2507Z			73-21-21	001-099
	S/R		W5204	2508Z			SPARE	001-099
	S/R		W5204	2509Z			SPARE	001-099
	S/R		W5204	0025	20		77-12-31	ALL
	S/R		W5204	0026	20		77-11-11	ALL
	S/R		W5204	0027	20		77-11-11	ALL
	S/R		W5204	1003Z			77-11-11	ALL
	S/R		W5204	1004Z			77-11-11	ALL
	S/R		W5204	2503Z			73-21-22	ALL
	S/R		W5204	2504Z			75-31-11	ALL
	S/R		W5204	2505Z			75-31-11	ALL
	S/R		W5204	2502Z			SPARE	115-199
	S/R		W5204	2506Z			73-21-21	115-199
	S/R		W5204	2507Z			SPARE	115-199
			W5204	FRAA			77-11-11	001-099
			W5204	0025	20		77-12-31	ALL
			W5204	0026	20		77-11-11	ALL
			W5204	0027	20		77-11-11	ALL
			W5204	2501Z			77-12-31	ALL
			W5204	5001Z			77-11-11	ALL
			W5204	5002Z			77-11-11	ALL
			W5204	FRAF			77-11-11	ALL
			W5204	FRAH			77-12-31	ALL
			W5204	FRAG			77-11-11	115-199
D01208J		AS2080/ /		RCPT				ALL
	1		W5200	0040R	20		26-11-21	ALL
	2	UNUSED						ALL
	3		W5200	0052	18		26-13-21	ALL
	4		W5200	4252Y	20		76-11-12	ALL
	5		W5200	0041R	20		26-11-21	ALL
	6		W5200	0053	18		26-13-21	ALL
	7		W5200	0047	20		29-11-21	ALL
	8		W5200	4252G	20		76-11-12	ALL
	9		W5200	0028	18		76-11-12	ALL
	10		W5200	4252B	20		76-11-12	ALL
	11		W5200	4252R	20		76-11-12	ALL
	12		W5200	0077	18		71-51-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01200

Page 7

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01208J		AS2080/ /		RCPT (continued)				ALL
	13		W5200	0042R	20		26-11-21	ALL
	14	UNUSED						ALL
	15		W5200	0082R	18		26-11-21	ALL
	16		W5200	0062	20		SPARE	ALL
	17		W5200	0064	20		SPARE	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	S/R		W5200	4252Z			76-11-12	ALL
D01210J		AS2080/ /		RCPT				ALL
	1		W5208	FRAE			77-21-11	ALL
	2		W5208	0018R	20		26-11-21	ALL
	3	UNUSED						ALL
	4		W5208	0021	18		26-13-21	ALL
	5		W5208	0022	18		26-13-21	ALL
	6	4B	W5208	4501G	20		77-21-11	ALL
	7	4D	W5208	4501W	20		77-21-11	ALL
	8		W5208	0019R	20		26-11-21	ALL
	9		W5208	2505B	20		SPARE	ALL
	10		W5208	2505R	20		SPARE	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W5208	0030R	18		26-11-21	ALL
	14		W5208	0020R	20		26-11-21	ALL
	S/R		W5208	0033	20		77-21-11	ALL
	S/R		W5208	2505Z			SPARE	ALL
			W5208	0033	20		77-21-11	ALL
			W5208	4501Z			77-21-11	ALL
			W5208	FRAE			77-21-11	ALL
D01212J		W319/ /R1.5		RCPT				001-099
D01212J		AS2080/ /		RCPT				115-199
	1	UNUSED						ALL
	2		W5204	4501W	20		77-31-11	ALL
	3		W5204	4501R	20		77-31-11	ALL
	4		W5204	4501Z			77-31-11	ALL
	5		W5204	4502W	20		77-31-11	ALL
	6		W5204	4502R	20		77-31-11	ALL
	7		W5204	4502Z			77-31-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01200

Page 8

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01214J		AS2080/ /		RCPT				ALL
	1		W5214	2502B	20		24-11-21	ALL
	2		W5214	2502R	20		24-11-21	ALL
	3		W5214	4001G	20		24-21-21	ALL
	4		W5214	0002	16		24-11-21	ALL
	5		W5214	2502Z			24-11-21	ALL
	6		W5214	2002B	20		24-11-21	ALL
	7		W5214	2002R	20		24-11-21	ALL
	8		W5214	0001	20		24-11-21	ALL
	9		W5214	2501R	20		24-21-21	ALL
	10		W5214	2501B	20		24-21-21	ALL
	11		W5214	2501Z			24-21-21	ALL
	12		W5214	4001R	20		24-21-21	ALL
	13		W5214	4001B	20		24-21-21	ALL
	14		W5214	4001Y	20		24-21-21	ALL
	15		W5214	3001R	18		24-21-21	ALL
	16		W5214	3001B	18		24-21-21	ALL
	17		W5214	3001Y	18		24-21-21	ALL
	18		W5214	2001B	20		24-11-21	ALL
	19		W5214	2001R	20		24-11-21	ALL
	20		W5214	0004	18		24-11-21	ALL
	21		W5214	0003	16		24-11-21	ALL
	22		W5214	2003B	20		SPARE	ALL
	23		W5214	2003R	20		SPARE	ALL
	24	UNUSED						ALL
	25		W5214	0006	20		SPARE	ALL
	26		W5214	0007	20		SPARE	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
D01216P		PPS 90/136/L015		PLUG				ALL
	A		W3412	0004	*1		24-21-21	ALL
	B		W3412	0005	*1		24-21-21	ALL
	C		W3412	0006	*1		24-21-21	ALL
	D		W3412	0007	04		24-21-21	ALL
D01218J		AS2140/ /		RCPT				ALL
	1		W3418	2001R	20		78-36-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01200

Page 9

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01218J		AS2140/ /		RCPT (continued)				ALL
	2		W3418	2001B	20		78-36-21	ALL
	3		W3418	2003R	20		78-36-21	ALL
	4		W3418	2003B	20		78-36-21	ALL
	5		W3418	2002R	20		78-36-21	ALL
	6		W3418	2002B	20		78-36-21	ALL
	7		W3418	2004R	20		78-36-21	ALL
	8		W3418	2004B	20		78-36-21	ALL
	9		W3418	2501R	16		78-34-61	ALL
	10		W3418	2501B	16		78-34-61	ALL
	S/R		W3418	2501Z			78-34-61	ALL
D01220J		AS2140/ /		RCPT				ALL
	1		W3416	2001R	20		78-34-21	ALL
	2	UNUSED						ALL
	3		W3416	2001B	20		78-34-21	ALL
	4		W3416	2002R	20		78-34-21	ALL
	5		W3416	2003B	20		SPARE	ALL
	6		W3416	2002B	20		78-34-21	ALL
	7		W3416	2003R	20		SPARE	ALL
D01221		1650/289/R003		RELAY SOCKET-				ALL
	1	UNUSED						ALL
	2		W3501	2001B	22		23-31-22	ALL
	3		W3501	0001	22		23-31-22	ALL
	4		W3501	2002B	22		23-31-22	ALL
	5	UNUSED						ALL
	6		W3501	2001R	22		23-31-22	ALL
	7		W3501	0002	22		23-31-22	ALL
	8		W3501	2002R	22		23-31-22	ALL
D01223		1610/278/L057		PLUG-				001-099
D01223		1635/300/L010		PLUG-				115-199
	1		W3501	2001B	22		23-31-22	ALL
	2		W3501	2001R	22		23-31-22	ALL
	3		W3501	0001	22		23-31-22	ALL
	4		W3501	0002	22		23-31-22	ALL
	5	UNUSED						ALL
D01227		367/295/L010		RELAY SOCKET-				ALL
	1	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D01200

Page 10

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01227		367/295/L010		RELAY SOCKET- (continued)				ALL
	2		W3541	2001B	22		23-31-21	ALL
	3		W3541	0001	22		23-31-21	ALL
	4		W3541	2004B	22		23-31-21	ALL
	5	UNUSED						ALL
	6		W3541	2001R	22		23-31-21	ALL
	7		W3541	0002	22		23-31-21	ALL
	8		W3541	2004R	22		23-31-21	ALL
D01229		AA0409/ /		PLUG-				ALL
	1		W3541	2001B	22		23-31-21	ALL
	2		W3541	2001R	22		23-31-21	ALL
	3		W3541	0001	22		23-31-21	ALL
	4		W3541	0002	22		23-31-21	ALL
	5	UNUSED						ALL
D01231		409/ /		RCPT-				ALL
	1		W3702	2471B	22		23-31-21	ALL
	2		W3702	2471R	22		23-31-21	ALL
	3		W3702	0825	22		23-31-41	ALL
	4		W3702	0974	20		23-31-21	ALL
	5	UNUSED						ALL
D01235		MULTI/ /		RELAY SOCKET-				ALL
	1	UNUSED						ALL
	2		W0513	2001B	22		23-31-21	ALL
	3		W0513	0001	22		23-31-21	ALL
	4		W0513	2002B	22		23-31-21	ALL
	5	UNUSED						ALL
	6		W0513	2001R	22		23-31-21	ALL
	7		W0513	0002	22		23-31-21	ALL
	8		W0513	2002R	22		23-31-21	ALL
D01239		710/290/		PLUG-				ALL
	1		W0513	2001B	22		23-31-21	ALL
	2		W0513	2001R	22		23-31-21	ALL
	3		W0513	0001	22		23-31-21	ALL
	4		W0513	0002	22		23-31-21	ALL
	5	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D01200

Page 11

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01241		712/291/R44		RCPT-				001-099
D01241		712/291/R044		RCPT-				115-199
	1		W3802	2291B	22		23-31-31	ALL
	2		W3802	2291R	22		23-31-31	ALL
	3		W3802	0845	22		SPARE	ALL
	4		W3802	0974	20		23-31-31	ALL
	5	UNUSED						ALL
D01243		1630/300/L009		RCPT-				ALL
	1		W3706	2471B	22		23-31-22	ALL
	2		W3706	2471R	22		23-31-22	ALL
	3		W3706	0816	22		23-31-41	ALL
	4		W3706	0974	20		23-31-22	ALL
	5	UNUSED						ALL
D01245		1646/272/R60		RCPT-				001-099
D01245		1620/287/R40		RCPT-				115-199
	1		W3806	2211B	22		23-31-32	ALL
	2		W3806	2211R	22		23-31-32	ALL
	3		W3806	0816	22		SPARE	ALL
	4		W3806	0974	20		23-31-32	ALL
	5	UNUSED						ALL
D01247		708/260/L060		RCPT-				001-099
D01247		705/260/L060		RCPT-				115-199
	1		W3702	2291B	22		23-31-21	ALL
	2		W3702	2291R	22		23-31-21	ALL
	3		W3702	0845	22		23-31-41	ALL
	4		W3702	0984	20		23-31-21	ALL
	5	UNUSED						ALL
D01251		560/192/R062		RCPT-				001-099
D01251		560/192/R62		RCPT-				115-199
	1		W4473	5078R	24		27-58-31	ALL
	2		W4473	5078B	24		27-58-31	ALL
	3		W4473	5078Z			27-58-31	ALL
	4		W4473	0268	22		27-81-31	ALL
	5		W4473	0269	22		27-51-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01200

Page 12

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01273		1550/274/R043		PLUG				001-099
D01273		1550/280/R052		PLUG				115-199
	A		W2843	0001	20		23-32-01	ALL
	B		W2843	0039	20		23-32-02	ALL
	C		W2843	0024	22		23-32-01	ALL
	D	UNUSED						ALL
	E		W2843	0040	20		23-32-02	ALL
	F		W2843	0002	20		23-32-01	ALL
	G		W2843	0036	22		23-32-02	ALL
	H		W2843	2002B	22		23-32-02	ALL
	J		W2843	2002R	22		23-32-02	ALL
	K		W2843	0003	22		23-32-01	ALL
	L		W2843	0004	22		23-32-01	ALL
	M		W2843	0029	22		23-32-01	ALL
	N		W2843	0030	22		23-32-01	ALL
	P		W2843	2004B	22		23-32-02	ALL
	R		W2843	2004R	22		23-32-02	ALL
	S		W2843	0011	22		23-32-01	ALL
	T		W2843	0056	20		23-32-02	001-099
	T	UNUSED						115-199
	U	UNUSED						ALL
	V	UNUSED						ALL
	W		W2843	2003B	22		23-32-02	ALL
	X		W2843	2003R	22		23-32-02	ALL
	Y	UNUSED						ALL
	Z	UNUSED						ALL
	AA	UNUSED						ALL
	BB	UNUSED						ALL
	CC		W2843	0005	22		23-32-01	ALL
	DD	UNUSED						ALL
	EE	UNUSED						ALL
	FF	UNUSED						ALL
	GG	UNUSED						ALL
	HH	UNUSED						ALL
	JJ	UNUSED						ALL
	KK		W2843	0037	22		23-32-02	ALL
	LL	UNUSED						ALL
	MM	UNUSED						ALL
	NN	UNUSED						ALL
	PP	UNUSED						ALL
	A-		W2843	0035	22		23-32-02	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01200

Page 13

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01273		1550/274/R043		PLUG (continued)				001-099
D01273		1550/280/R052		PLUG (continued)				115-199
	B-		W2843	2001R	22		23-31-19	001-099
	B-		W2843	2001R	22		23-32-02	115-199
	C-		W2843	2001B	22		23-31-19	001-099
	C-		W2843	2001B	22		23-32-02	115-199
	D-		W2843	0038	22		23-32-02	ALL
	E-	UNUSED						ALL
	F-		W2843	0012	22		23-32-01	ALL
	G-	UNUSED						ALL
	H-	UNUSED						ALL
	I-	UNUSED						ALL
	J-	UNUSED						ALL
	K-	UNUSED						ALL
	M-	UNUSED						ALL
	N-	UNUSED						ALL
	P-		W2843	0026	22		23-32-01	ALL
	Q-	UNUSED						ALL
	R-	UNUSED						ALL
	S-	UNUSED						ALL
	T-	UNUSED						ALL
	U-		W2843	0025	22		23-32-01	ALL
	V-	UNUSED						ALL
	W-	UNUSED						ALL
	X-		W2843	0013	22		23-32-01	ALL
	Y-		W2843	0031	22		23-32-01	ALL
	Z-	UNUSED						ALL
D01275		1520/268/R40		CABLE PLUG ZONE A				001-099
D01275		1550/280/R52		CABLE PLUG ZONE A				115-199
	= A1		W2823	001CX			23-32-01	ALL
	= C1		W2823	001CO			23-32-01	ALL
D01277		1550/268/R40		CABLE PLUG				001-099
D01277		1550/280/R52		CABLE PLUG ZONE B				115-199
	= A1		W2817	001CX			23-32-01	ALL
	= C1		W2817	001CO			23-32-01	ALL
D01279		1550/280/L12		CABLE PLUG				001-099
D01279		1550/280/L12		CABLE PLUG ZONE C				115-199
	= A1		W2819	001CX			23-32-01	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01200

Page 14

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01279		1550/280/L12		CABLE PLUG (continued)				001-099
D01279		1550/280/L12		CABLE PLUG ZONE C (continued)				115-199
	= C1		W2819	001CO			23-32-01	ALL
D01281		1590/290/R022		CABLE PLUG ZONE D				001-099
D01281		1550/280/R52		CABLE PLUG ZONE D				115-199
	= A1		W2807	001CX			23-32-01	ALL
	= C1		W2807	001CO			23-32-01	ALL
D01283		657/290/L055		CABLE PLUG				001-099
D01283		775/280/L015		CABLE PLUG				115-199
	= A1		W2831	001CX			23-32-01	ALL
	= C1		W2831	001CO			23-32-01	ALL
D01287		453/297/L020		CABLE PLUG				001-099
D01287		770/280/L015		CABLE PLUG				115-199
	= A1		W2831	001CX			23-32-01	ALL
	= C1		W2831	001CO			23-32-01	ALL
D01291		432/297/L020		PLUG				001-099
D01291		770/280/L015		PLUG				115-199
	1		W2843	0027	20		23-32-01	ALL
	2		W2843	0028	20		23-32-01	ALL
	3		W2843	0034	20		23-32-01	ALL
	4		W2843	0032	20		23-32-01	ALL
	5		W2843	0033	20		23-32-01	ALL
	6		W2843	0029	22		23-32-01	ALL
	7		W2843	0031	22		23-32-01	ALL
	8		W2843	0030	22		23-32-01	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D01293		432/297/L20		CABLE PLUG				001-099
D01293		770/280/L15		CABLE PLUG				115-199
	= A1		W2823	001CX			23-32-01	ALL
	= C1		W2823	001CO			23-32-01	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01200

Page 15

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01295		453/970/L020		CABLE PLUG				001-099
D01295		770/280/L014		CABLE PLUG				115-199
	= A1		W2833	001CX			23-32-01	ALL
	= C1		W2833	001CO			23-32-01	ALL
D01297		770/280/L015		PLUG				115-199
	A	UNUSED						115-199
	B	UNUSED						115-199
	C	UNUSED						115-199
	D	UNUSED						115-199
	E		W2849	0007	22		23-32-01	115-199
	F		W2849	0008	22		23-32-01	115-199
	G	UNUSED						115-199
	H		W2849	0006	22		23-32-01	115-199
	J		W2849	0005	22		23-32-01	115-199
	K		W2849	0001	22		23-32-01	115-199
	L		W2849	0004	22		23-32-01	115-199
	M		W2849	0002	22		23-32-01	115-199
D01299		973/300/L015		PLUG				115-199
	1		W2849	0001	22		23-32-01	115-199
	2		W2849	0002	22		23-32-01	115-199
	3		W2849	0003	22		23-32-01	115-199
	4		W2849	0004	22		23-32-01	115-199
	5		W2849	0005	22		23-32-01	115-199
	6		W2849	0006	22		23-32-01	115-199
	7		W2849	0007	22		23-32-01	115-199
	8		W2849	0008	22		23-32-01	115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D01200

Page 16 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01301		799/280/L002		CABLE PLUG				001-099
D01301		973/300/L009		CABLE PLUG				115-199
	= A1		W2833	001CX			23-32-01	ALL
	= C1		W2833	001CO			23-32-01	ALL
D01303		408/300/L012		RECP				115-199
	1		W2843	0006	20		23-32-01	115-199
	2		W2843	0007	20		23-32-01	115-199
	3		W2843	0008	20		23-32-01	115-199
	4		W2843	0010	20		23-32-01	115-199
	5		W2843	0009	20		23-32-01	115-199
	6		W2843	0003	22		23-32-01	115-199
	7		W2843	0005	22		23-32-01	115-199
	8		W2843	0004	22		23-32-01	115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
D01305		395/303/0		CABLE PLUG				001-099
D01305		408/290/L10		CABLE PLUG				115-199
	= A1		W2817	001CX			23-32-01	ALL
	= C1		W2817	001CO			23-32-01	ALL
D01307		510/300/R010		PLUG				001-099
D01307		610/300/L014		PLUG				115-199
	1		W2843	0014	20		23-32-01	ALL
	2		W2843	0015	20		23-32-01	ALL
	3		W2843	0016	20		23-32-01	ALL
	4		W2843	0018	20		23-32-01	ALL
	5		W2843	0017	20		23-32-01	ALL
	6		W2843	0011	22		23-32-01	ALL
	7		W2843	0013	22		23-32-01	ALL
	8		W2843	0012	22		23-32-01	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D01300

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01309		533/290/L5		CABLE PLUG				001-099
D01309		610/290/L14		CABLE PLUG				115-199
	= A1		W2819	001CX			23-32-01	ALL
	= C1		W2819	001CO			23-32-01	ALL
D01311		1292/300/L014		PLUG				001-099
D01311		1330/300/L014		PLUG				115-199
	1		W2843	0019	20		23-32-01	ALL
	2		W2843	0020	20		23-32-01	ALL
	3		W2843	0021	20		23-32-01	ALL
	4		W2843	0022	20		23-32-01	ALL
	5		W2843	0023	20		23-32-01	ALL
	6		W2843	0024	22		23-32-01	ALL
	7		W2843	0025	22		23-32-01	ALL
	8		W2843	0026	22		23-32-01	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D01313		1290/299/L15		CABLE PLUG				001-099
D01313		1330/300/L10		CABLE PLUG				115-199
	= A1		W2807	001CX			23-32-01	ALL
	= C1		W2807	001CO			23-32-01	ALL
D01315		1285/295/R010		PLUG				001-099
D01315		1330/301/L012		PLUG				115-199
	A	UNUSED						ALL
	B	UNUSED						ALL
	C	UNUSED						ALL
	D	UNUSED						ALL
	E		W2853	0007	22		23-32-01	ALL
	F		W2853	0008	22		23-32-01	ALL
	G	UNUSED						ALL
	H		W2853	0006	22		23-32-01	ALL
	J		W2853	0005	22		23-32-01	ALL
	K		W2853	0001	22		23-32-01	ALL
	L		W2853	0004	22		23-32-01	ALL
	M		W2853	0002	22		23-32-01	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01300

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01317		1292/299/L015		CABLE PLUG				001-099
D01317		1330/300/L014		CABLE PLUG				115-199
	= A1		W2835	001CX			23-32-01	ALL
	= C1		W2835	001CO			23-32-01	ALL
D01321		1292/299/L015		CABLE PLUG				001-099
D01321		1330/300/L014		CABLE PLUG				115-199
	= A1		W2837	001CX			23-32-01	ALL
	= C1		W2837	001CO			23-32-01	ALL
D01323		1292/296/R015		PLUG				001-099
D01323		1330/300/L012		PLUG				115-199
	A	UNUSED						ALL
	B	UNUSED						ALL
	C	UNUSED						ALL
	D	UNUSED						ALL
	E		W2857	0007	22		23-32-01	ALL
	F		W2857	0008	22		23-32-01	ALL
	G	UNUSED						ALL
	H		W2857	0006	22		23-32-01	ALL
	J		W2857	0005	22		23-32-01	ALL
	K		W2857	0001	22		23-32-01	ALL
	L		W2857	0004	22		23-32-01	ALL
	M		W2857	0002	22		23-32-01	ALL
D01325		1292/299/L005		CABLE PLUG				001-099
D01325		1330/300/L014		CABLE PLUG				115-199
	= A1		W2839	001CX			23-32-01	ALL
	= C1		W2839	001CO			23-32-01	ALL
D01327		1120/300/L015		PLUG				115-199
	1		W2853	0001	22		23-32-01	115-199
	2		W2853	0002	22		23-32-01	115-199
	3		W2853	0003	22		23-32-01	115-199
	4		W2853	0004	22		23-32-01	115-199
	5		W2853	0005	22		23-32-01	115-199
	6		W2853	0006	22		23-32-01	115-199
	7		W2853	0007	22		23-32-01	115-199
	8		W2853	0008	22		23-32-01	115-199
	9	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D01300

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01327		1120/300/L015		PLUG (continued)				115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
D01329		1110/299/L015		CABLE PLUG				001-099
D01329		1130/300/L014		CABLE PLUG				115-199
	= A1		W2835	001CX			23-32-01	ALL
	= C1		W2835	001CO			23-32-01	ALL
D01333		1310/290/L005		CABLE PLUG				001-099
D01333		1330/300/L014		CABLE PLUG				115-199
	= A1		W2837	001CX			23-32-01	ALL
	= C1		W2837	001CO			23-32-01	ALL
D01335		1440/300/L015		PLUG				115-199
	1		W2857	0001	22		23-32-01	115-199
	2		W2857	0002	22		23-32-01	115-199
	3		W2857	0003	22		23-32-01	115-199
	4		W2857	0004	22		23-32-01	115-199
	5		W2857	0005	22		23-32-01	115-199
	6		W2857	0006	22		23-32-01	115-199
	7		W2857	0007	22		23-32-01	115-199
	8		W2857	0008	22		23-32-01	115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
D01337		1440/299/L015		CABLE PLUG				001-099
D01337		1430/300/L014		CABLE-PLUG				115-199
	= A1		W2839	001CX			23-32-01	ALL
	= C1		W2839	001CO			23-32-01	ALL
D01349		P036-00/ /		RELAY SOCKET (PLATE 'D')				ALL
	A1		W1260	6208	22		23-34-15	ALL
	A2		W1260	6210	22		23-34-15	ALL
	A3	UNUSED						ALL
	B1		W1260	6207	22		23-34-15	ALL
	B2		W1260	6209	22		23-34-15	ALL
	B3	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D01300

Page 4

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01349		P036-00/ /		RELAY SOCKET (PLATE 'D') (continued)				ALL
	X1		W1260	6205	22		23-34-15	ALL
	X2		W1260	6206	22		23-34-15	ALL
D01351		P36/ /		RELAY SOCKET (PLATE 'D')				115-199
	A1		W1260	6224	22		23-34-15	115-199
	A2		W1260	6213	22		23-34-15	115-199
	A3	UNUSED						115-199
	B1	UNUSED						115-199
	B2	UNUSED						115-199
	B3	UNUSED						115-199
	X1		W1260	6212	22		23-34-15	115-199
	X2		W1260	6211	22		23-34-15	115-199
D01353		E4-4/ /		PLUG MAIN MULTIPLEXER				ALL
	1		W1161	0044	22		23-34-15	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1161	5001Z			23-34-12	ALL
	7		W1161	5003Z			23-34-12	ALL
	8		W1161	0020	20		23-34-12	001-099
	8		W1161	2003R	20		23-34-12	115-199
	9		W1161	0021	20		23-34-12	001-099
	9		W1161	2003B	20		23-34-12	115-199
	10	UNUSED						ALL
	11		W1161	0057	22		23-34-15	ALL
	12		W1161	0043	20		23-34-15	ALL
	13		W1161	2040R	24		23-34-15	ALL
	14		W1161	5001W	24		23-34-12	ALL
	15		W1161	5003W	24		23-34-12	ALL
	16		W1161	0016	20		23-34-12	001-099
	16		W1161	2001R	20		23-34-12	115-199
	17		W1161	0017	20		23-34-12	001-099
	17		W1161	2001B	20		23-34-12	115-199
	18		W1161	0018	20		23-34-12	001-099
	18		W1161	2002R	20		23-34-12	115-199
	19		W1161	0019	20		23-34-12	001-099
	19		W1161	2002B	20		23-34-12	115-199
	20		W1161	0053	22		23-34-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01300

Page 5

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01353		E4-4/ /		PLUG MAIN MULTIPLEXER (continued)				ALL
	21		W1161	0055	22		23-34-12	ALL
	22		W1161	5002B	24		23-34-12	ALL
	23		W1161	5002W	24		23-34-12	ALL
	24		W1161	2040B	24		23-34-15	ALL
	25		W1161	0058	24		23-34-15	ALL
	26	UNUSED						ALL
	27		W1161	5001B	24		23-34-12	ALL
	28		W1161	5003B	24		23-34-12	ALL
	29	UNUSED						ALL
	30		W1161	0022	20		23-34-12	001-099
	30		W1161	2004R	20		23-34-12	115-199
	31		W1161	0054	22		23-34-12	ALL
	32		W1161	0023	20		23-34-12	001-099
	32		W1161	2004B	20		23-34-12	115-199
	33		W1161	0059	20		23-34-15	ALL
	34		W1161	0056	22		23-34-12	ALL
	35		W1161	5002Z			23-34-12	ALL
	36		W1161	5004B	24		23-34-12	ALL
	37		W1161	5004Z			23-34-12	ALL
	38		W1161	5004W	24		23-34-12	ALL
	39		W1161	2045B	22		23-34-15	ALL
	40		W1161	2045R	22		23-34-15	ALL
	41		W1161	2046B	22		23-34-15	ALL
	42		W1161	2046R	22		23-34-15	ALL
	43		W1161	2512B	22		23-34-15	ALL
	44		W1161	2512R	22		23-34-15	ALL
	45		W1161	2501B	22		23-34-15	ALL
	46		W1161	2501R	22		23-34-15	ALL
	47		W1161	2511B	22		23-34-15	ALL
	48		W1161	2511R	22		23-34-15	ALL
	49		W1161	2502B	22		23-34-15	ALL
	50		W1161	2502R	22		23-34-15	ALL
	51		W1161	2503B	22		23-34-15	ALL
	52		W1161	2503R	22		23-34-15	ALL
	53		W1161	2504B	22		23-34-15	ALL
	54		W1161	2504R	22		23-34-15	ALL
	55		W1161	0015	22		23-34-15	ALL
	56		W1161	2505B	22		23-34-15	ALL
	57		W1161	2505R	22		23-34-15	ALL
	58		W1161	2506B	22		23-34-15	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01300

Page 6

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01353		E4-4/ /		PLUG MAIN MULTIPLEXER (continued)				ALL
	59		W1161	2506R	22		23-34-15	ALL
	60		W1161	2507B	22		23-34-15	ALL
	61		W1161	2507R	22		23-34-15	ALL
	62		W1161	2508B	22		23-34-15	ALL
	63		W1161	2508R	22		23-34-15	ALL
	64		W1161	2509B	22		23-34-15	ALL
	65		W1161	2509R	22		23-34-15	ALL
	66		W1161	2510B	22		23-34-15	ALL
	67		W1161	2510R	22		23-34-15	ALL
	DED		W1161	2501Z			23-34-15	ALL
	DED		W1161	2502Z			23-34-15	ALL
	DED		W1161	2503Z			23-34-15	ALL
	DED		W1161	2504Z			23-34-15	ALL
	DED		W1161	2505Z			23-34-15	ALL
	DED		W1161	2506Z			23-34-15	ALL
	DED		W1161	2507Z			23-34-15	ALL
	DED		W1161	2508Z			23-34-15	ALL
	DED		W1161	2509Z			23-34-15	ALL
	DED		W1161	2510Z			23-34-15	ALL
	DED		W1161	2511Z			23-34-15	ALL
	DED		W1161	2512Z			23-34-15	ALL
D01357		1680/205/L25		PLUG-				ALL
	1		W2647	2001B	22		22-21-11	ALL
	2		W2647	2001R	22		22-21-11	ALL
	3		W2647	0003	22		22-21-11	ALL
	4		W2647	2501R	22		22-21-11	ALL
	5		W2647	2501B	22		22-21-11	ALL
	6		W2647	0006	22		22-21-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	DED		W2647	2501Z			22-21-11	ALL
D01359		1680/205/R50		PLUG-				ALL
	1		W2649	2001B	22		22-21-21	ALL
	2		W2649	2001R	22		22-21-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01300

Page 7

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01359		1680/205/R50		PLUG- (continued)				ALL
	3		W2649	0003	22		22-21-21	ALL
	4		W2649	2501R	22		22-21-21	ALL
	5		W2649	2501B	22		22-21-21	ALL
	6		W2649	0006	22		22-21-21	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	DED		W2649	2501Z			22-21-21	ALL
D01369		1615/220/R065		RCPT				001-099
D01369		1362/ /		RCPT				115-199
	A		W4059	5002W	24		23-34-12	ALL
	B		W4059	5002B	24		23-34-12	ALL
	C		W4059	5002Z			23-34-12	ALL
	D		W4059	0005	20		23-34-12	001-099
	D		W4059	2002R	20		23-34-12	115-199
	E		W4059	0006	20		23-34-12	001-099
	E		W4059	2002B	20		23-34-12	115-199
	F		W4059	0002	22		23-34-12	ALL
D01371		1615/ /		RCPT				001-099
D01371		1362/ /		RCPT				115-199
	A		W4057	5002W	24		23-34-12	ALL
	B		W4057	5002B	24		23-34-12	ALL
	C		W4057	5002Z			23-34-12	ALL
	D		W4057	0005	20		23-34-12	001-099
	D		W4057	2002R	20		23-34-12	115-199
	E		W4057	0006	20		23-34-12	001-099
	E		W4057	2002B	20		23-34-12	115-199
	F		W4057	0002	22		23-34-12	ALL
D01373		354/294/L026		RCPT-				001-099
	1		W3576	0141	22		23-31-19	001-099
	2	UNUSED						001-099
	3		W3576	0143	22		23-31-19	001-099
	4	UNUSED						001-099
	5		W3576	0146	20		23-31-19	001-099

HOOKUP LIST

D280N032

91-21-51

Section D01300

Page 8

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01373		354/294/L026		RCPT- (continued)				001-099
	6		W3576	3002R	22		23-31-19	001-099
	7	UNUSED						001-099
	8	UNUSED						001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12		W3576	0138	22		23-31-19	001-099
	13	UNUSED						001-099
	14		W3576	0140	22		23-31-19	001-099
	15	UNUSED						001-099
	16	UNUSED						001-099
	17		W3576	3002B	22		23-31-19	001-099
	18		W3576	3002Y	22		23-31-19	001-099
	19	UNUSED						001-099
	20		W3576	0144	22		23-31-19	001-099
	21		W3576	0145	20		23-31-19	001-099
	22	UNUSED						001-099
	23		W3576	0147	20		23-31-19	001-099
	24		W3576	0139	22		23-31-19	001-099

HOOKUP LIST

D280N032

91-21-51

Section D01300

Page 9 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01413		625/215/L063		RCPT				001-099
	A		W2689	2501W	24		23-34-13	001-099
	B		W2689	2501B	24		23-34-13	001-099
	C		W2689	2501Z			23-34-13	001-099
	D		W2689	0001	20		23-34-13	001-099
	E		W2689	0002	20		23-34-13	001-099
	F		W2689	0005	22		23-34-13	001-099
D01415		753/215/L063		RCPT				001-099
	A		W2689	2501W	24		23-34-13	001-099
	B		W2689	2501B	24		23-34-13	001-099
	C		W2689	2501Z			23-34-13	001-099
	D		W2689	0003	20		23-34-13	001-099
	E		W2689	0004	20		23-34-13	001-099
	F		W2689	0005	22		23-34-13	001-099
D01427		E003-03/ /		PLUG				001-099
D01427		E3-3/ /		PLUG				115-199
	A		W2077	0029	22		34-53-11	ALL
	B		W2077	0030	20		34-53-11	ALL
	C		W2077	0031	24		34-53-11	ALL
	D	UNUSED						ALL
	E	UNUSED						ALL
	F	UNUSED						ALL
D01429		0500/185/L040		PLUG-				ALL
	= A1		W4451	001CX			34-53-11	ALL
	= C1		W4451	001CO			34-53-11	ALL
D01431		E3-3/ /		PLUG-				ALL
	= A1		W4449	001CX			34-53-11	ALL
	= C1		W4449	001CO			34-53-11	ALL
D01433		500/184/L040		PLUG-				ALL
	= A1		W4455	001CX			34-53-21	ALL
	= C1		W4455	001CO			34-53-21	ALL
D01435		E003-02/ /		PLUG				001-099
D01435		E3-2/ /		PLUG				115-199
	A		W2077	0032	22		34-53-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01400

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01435		E003-02/ /		PLUG (continued)				001-099
D01435		E3-2/ /		PLUG (continued)				115-199
	B		W2077	0033	20		34-53-11	ALL
	C		W2077	0034	24		34-53-11	ALL
	D	UNUSED						ALL
	E	UNUSED						ALL
	F	UNUSED						ALL
D01437		E003-03/ /		PLUG-				ALL
	= A1		W4453	001CX			34-53-11	ALL
	= C1		W4453	001CO			34-53-11	ALL
D01439		500/174/L040		PLUG-				ALL
	= A1		W4465	001CX			34-53-11	ALL
	= C1		W4465	001CO			34-53-11	ALL
D01441		500/174/L040		PLUG-				ALL
	= A1		W4457	001CX			34-53-21	ALL
	= C1		W4457	001CO			34-53-21	ALL
D01443		535/ /		PLUG-				ALL
	= A1		W4449	001CX			34-53-11	ALL
	= C1		W4449	001CO			34-53-11	ALL
D01457		P36/ /		RELAY SOCKET (PLATE 'D')				001-099
	1		W1260	2020B	22		23-31-19	001-099
	2		W1260	2019B	22		23-31-19	001-099
	3		W1260	2021R	22		23-31-19	001-099
	4		W1260	2019R	22		23-31-19	001-099
	5		W1260	2020R	22		23-31-19	001-099
	6		W1260	6291	22		23-31-19	001-099
	7	UNUSED						001-099
	8	UNUSED						001-099
	9		W1260	6297	22		23-31-19	001-099
	10		W1260	6299	22		23-31-19	001-099
	11		W1260	6298	22		23-31-19	001-099
	12		W1260	6292	22		23-31-19	001-099
	13		W1260	2021B	22		23-31-19	001-099
	14	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D01400

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01487		P009-00/ /		PLUG				115-199
	1	UNUSED						115-199
	2		W2331	5005R	22		34-61-11	115-199
	3		W2331	5005B	22		34-61-11	115-199
	4	UNUSED						115-199
	5		W2331	5006R	22		34-61-11	115-199
	6		W2331	5006B	22		34-61-11	115-199
	7	UNUSED						115-199
	8		W2331	5007R	22		34-61-16	115-199
	9		W2331	5007B	22		34-61-16	115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18		W2331	0015	22		34-61-16	115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23		W2331	0012	22		34-61-16	115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D01400

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01487		P009-00/ /		PLUG (continued)				115-199
	41	UNUSED						115-199
D01489		P009-00/ /		PLUG (34-0414)				115-199
	1	UNUSED						115-199
	2		W2333	5005R	22		34-61-21	115-199
	3		W2333	5005B	22		34-61-21	115-199
	4	UNUSED						115-199
	5		W2333	5006R	22		34-61-21	115-199
	6		W2333	5006B	22		34-61-21	115-199
	7	UNUSED						115-199
	8		W2333	5007R	22		34-61-26	115-199
	9		W2333	5007B	22		34-61-26	115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18		W2333	0015	22		34-61-26	115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23		W2333	0012	22		34-61-26	115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D01400

Page 4

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01489		P009-00/ /		PLUG (34-0414) (continued)				115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
D01491		238/185/L16		PLUG-				001-099
	1		W0447	0008	20		31-31-51	001-099
	2		W0447	0003	24		31-31-51	001-099
	3		W0447	0009	20		31-31-51	001-099
	4		W0447	2003R	24		31-31-51	001-099
	5		W0447	2003B	24		31-31-51	001-099
D01493		234/196/L17		PLUG-				001-099
	1		W0447	0004	20		31-31-51	001-099
	2		W0447	0001	24		31-31-51	001-099
	3		W0447	0005	20		31-31-51	001-099
	4		W0447	2001R	24		31-31-51	001-099
	5		W0447	2001B	24		31-31-51	001-099
D01495		260/190/R14		PLUG-				001-099
	1		W0447	0006	20		31-31-51	001-099
	2		W0447	0002	24		31-31-51	001-099
	3		W0447	0007	20		31-31-51	001-099
	4		W0447	2002R	24		31-31-51	001-099
	5		W0447	2002B	24		31-31-51	001-099

HOOKUP LIST

D280N032

91-21-51

Section D01400

Page 5 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01501		1042/173/32		PLUG				001-099
	1		W2733	0002	20		31-31-52	001-099
	2		W2733	2002R	20		31-31-52	001-099
	3		W2733	2002B	20		31-31-52	001-099
D01503		1042/182/R053		PLUG				001-099
	1		W2735	0002	20		31-31-52	001-099
	2		W2735	2002R	20		31-31-52	001-099
	3		W2735	2002B	20		31-31-52	001-099
D01504		P36/ /		RELAY SOCKET (PLATE 'A')				ALL
	A1		W1260	5686	22		30-21-11	ALL
	A2		W1260	5682	22		30-21-11	ALL
	A3		W1260	5687	22		30-21-11	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1260	5683	22		30-21-11	ALL
	X1		W1260	6201	22		30-21-11	ALL
	X2		W1260	5690	22		30-21-11	ALL
D01505		1074/172/1.37		PLUG				001-099
	1		W2733	0001	20		31-31-52	001-099
	2		W2733	2001R	20		31-31-52	001-099
	3		W2733	2001B	20		31-31-52	001-099
D01506		P36/ /		RELAY SOCKET (PLATE 'A')				ALL
	A1	UNUSED						ALL
	A2	UNUSED						ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2		W1260	6050	22		76-11-21	ALL
	B3		W1260	6051	22		76-11-21	ALL
	X1		W1260	5679	22		30-21-11	ALL
	X2		W1260	5685	22		30-21-11	ALL
D01507		1079/164/R002		PLUG				001-099
	1		W2735	0001	20		31-31-52	001-099
	2		W2735	2001R	20		31-31-52	001-099
	3		W2735	2001B	20		31-31-52	001-099

HOOKUP LIST

D280N032

91-21-51

Section D01500

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01508		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D01508		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	A1		W1270	5712	22		30-21-11	ALL
	A2		W1270	5720	22		30-21-11	ALL
	A3		W1270	5713	22		30-21-11	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1270	5721	22		30-21-11	ALL
	X1		W1270	6310	22		30-21-11	ALL
	X2		W1270	5722	22		30-21-11	ALL
D01510		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D01510		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	A1	UNUSED						ALL
	A2	UNUSED						ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2		W1270	6201	22		76-11-21	ALL
	B3		W1270	6202	22		76-11-21	ALL
	X1		W1270	5726	22		30-21-11	ALL
	X2		W1270	5725	22		30-21-11	ALL
I D01515		P036-00/ /		RELAY SOCKET (PLATE 'D')				115-199
I	A1		W1260	2514R	22		34-22-38	115-199
I	A2		W1260	2512R	22		34-22-38	115-199
I	A3		W1260	2515R	22		34-22-38	115-199
I	B1		W1260	2514B	22		34-22-38	115-199
I	B2		W1260	2512B	22		34-22-38	115-199
I	B3		W1260	2515B	22		34-22-38	115-199
I	C1		W1260	2517R	22		34-22-38	115-199
I	C2		W1260	2513R	22		34-22-38	115-199
I	C3		W1260	2518R	22		34-22-38	115-199
I	D1		W1260	2517B	22		34-22-38	115-199
I	D2		W1260	2513B	22		34-22-38	115-199
I	D3		W1260	2518B	22		34-22-38	115-199
I	X1		W1260	6255	22		34-22-38	115-199
I	X2		W1260	6252	22		34-22-38	115-199

HOOKUP LIST

D280N032

91-21-51

Section D01500

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01522		IRSS210/ /		PLUG				ALL
	1	UNUSED						ALL
	2		W3306	3503Y	20		28-26-11	ALL
	3		W3306	3503R	20		28-26-11	ALL
	4		W3306	0001	18		28-26-11	ALL
	5		W3306	3503B	20		28-26-11	ALL
	6	UNUSED						ALL
	7		W3306	0015	18		28-26-11	ALL
D01524		IRSS206/ /		PLUG				ALL
	1	UNUSED						ALL
	2		W3406	3503Y	20		28-26-11	ALL
	3		W3406	3503R	20		28-26-11	ALL
	4		W3406	0002	18		28-26-11	ALL
	5		W3406	3503B	20		28-26-11	ALL
	6	UNUSED						ALL
	7		W3406	0015	18		28-26-11	ALL
D01560		907/151/R056		PLUG				ALL
	1		W2506	1044	20		36-22-11	ALL
	2		W2506	1045	20		36-22-11	ALL
D01570		P36/ /		RELAY SOCKET (PLATE 'A')				ALL
	1		W1260	5533	24		21-58-11	ALL
	2		W1260	5532	20		21-58-11	ALL
	3		W1260	5534	20		21-58-11	ALL
	4		W1260	5535	20		21-58-11	ALL
	5		W1260	5512	20		21-58-11	ALL
	6		W1260	0298	24		21-58-11	ALL
	7		W1260	5513	20		21-58-11	ALL
	8		W1260	5536	24		21-58-11	ALL
D01572		P36/ /		RELAY SOCKET (PLATE 'A')				ALL
	1		W1260	5529	20		21-58-11	ALL
	2		W1260	0837	24		21-58-12	ALL
	3		W1260	0298	24		21-58-11	ALL
	4	UNUSED						ALL
	5		W1260	0835	24		21-58-12	ALL
	6		W1260	5514	20		21-58-11	ALL
	7		W1260	5530	20		21-58-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01500

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01572		P36/ /		RELAY SOCKET (PLATE 'A') (continued)				ALL
	8	UNUSED						ALL
D01574		271/171/R35		PLUG				ALL
	1		W2156	0033	20		21-58-11	ALL
	2		W2156	0034	24		21-58-11	ALL
	3		W2156	0035	20		21-58-11	ALL
	4		W2156	0036	20		21-58-11	ALL
	5		W2156	0030	24		21-58-11	ALL
D01576		207/170/R010		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D01580		230/200/L28		RECP				001-099
D01580		225/200/L28		RECP				115-199
	1		W2064	0072	20		21-45-11	ALL
	2		W2064	0073	20		21-45-11	ALL
	3		W2064	0074	20		21-45-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D01582		263/193/L47		PLUG				001-099
D01582		263/200/L37		PLUG				115-199
	1		W2064	0069	20		21-45-11	ALL
	2		W2064	0070	20		21-45-11	ALL
	3		W2064	0071	20		21-45-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D01583A		E002-01/ /		PLUG-				001-099
D01583A		E2-1/ /		PLUG-				115-199
	1		W1171	007CX			34-45-02	ALL
	2		W1171	008CX			34-45-02	ALL
	3		W1171	009CX			34-45-02	ALL
	4		W1171	010CX			34-45-02	ALL
	= C1		W1171	007CO			34-45-02	ALL
	= C2		W1171	008CO			34-45-02	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01500

Page 4

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01583A		E002-01/ /		PLUG- (continued)				001-099
D01583A		E2-1/ /		PLUG- (continued)				115-199
	= C3		W1171	009CO			34-45-02	ALL
	= C4		W1171	010CO			34-45-02	ALL
D01583B		E002-01/ /		PLUG-				001-099
D01583B		E2-1/ /		PLUG-				115-199
	1		W1171	012CX			34-45-02	ALL
	2		W1171	013CX			34-45-02	ALL
	3		W1171	014CX			34-45-02	ALL
	4		W1171	015CX			34-45-02	ALL
	= C1		W1171	012CO			34-45-02	ALL
	= C2		W1171	013CO			34-45-02	ALL
	= C3		W1171	014CO			34-45-02	ALL
	= C4		W1171	015CO			34-45-02	ALL
D01583C		E002-01/ /		PLUG-				001-099
D01583C		E2-1/ /		PLUG-				115-199
	1		W1171	0439	20		34-45-01	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1171	0440	22		34-45-01	ALL
	8		W1171	0441	22		34-45-01	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W1171	0442	22		34-45-01	ALL
	12		W1171	006CX			34-45-02	ALL
	13	UNUSED						ALL
	= C12		W1171	006CO			34-45-02	ALL
	= C13	UNUSED						ALL
D01583D		E002-01/ /		PLUG-				001-099
D01583D		E2-1/ /		PLUG-				115-199
	= X1	UNUSED						ALL
D01583E		E002-01/ /		PLUG-				001-099
D01583E		E2-1/ /		PLUG-				115-199
	A01	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D01500

Page 5

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01583E		E002-01/ /		PLUG- (continued)				001-099
D01583E		E2-1/ /		PLUG- (continued)				115-199
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07		W1171	5164R	24		34-45-02	ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13		W1171	5189R	24		34-45-01	001-002, 115-199
	A13	UNUSED						003-099
	A14		W1171	5162R	24		34-45-02	ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07		W1171	5164B	24		34-45-02	ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13		W1171	5189B	24		34-45-01	001-002, 115-199
	B13	UNUSED						003-099
	B14		W1171	5162B	24		34-45-02	ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07		W1171	5194R	24		34-45-01	ALL
	C08	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D01500

Page 6

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01583E		E002-01/ /		PLUG- (continued)				001-099
D01583E		E2-1/ /		PLUG- (continued)				115-199
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13		W1171	5187R	24		34-45-01	001-002, 115-199
	C13	UNUSED						003-099
	C14		W1171	0455	24		34-45-01	ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						001-099
	D03		W1171	5168R	24		34-45-02	115-199
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07		W1171	5194B	24		34-45-01	ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13		W1171	5187B	24		34-45-01	001-002, 115-199
	D13	UNUSED						003-099
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						001-099
	E01		W1171	0478	22		34-45-01	115-199
	E02	UNUSED						ALL
	E03	UNUSED						001-099
	E03		W1171	5168B	24		34-45-02	115-199
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07		W1171	0459	24		34-45-01	001-002, 115-199
	E07		W1171	0459	22		34-45-01	003-099
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D01500

Page 7

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01583E		E002-01/ /		PLUG- (continued)				001-099
D01583E		E2-1/ /		PLUG- (continued)				115-199
	E12	UNUSED						ALL
	E13		W1171	0444	24		34-45-01	ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03		W1171	5167R	24		34-45-02	ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13		W1171	0461	22		34-45-01	ALL
	F14		W1171	5161R	24		34-45-02	ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03		W1171	5167B	24		34-45-02	ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07		W1171	5195R	24		34-45-01	ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14		W1171	5161B	24		34-45-02	ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D01500

Page 8

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01583E		E002-01/ /		PLUG- (continued)				001-099
D01583E		E2-1/ /		PLUG- (continued)				115-199
	H06		W1171	0482	24		34-45-02	ALL
	H07		W1171	5195B	24		34-45-01	ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13		W1171	5165R	24		34-45-02	ALL
	H14		W1171	5163R	24		34-45-02	ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06		W1171	0483	24		34-45-02	ALL
	J07		W1171	0464	24		34-45-01	001-002, 115-199
	J07		W1171	0464	22		34-45-01	003-099
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13		W1171	5165B	24		34-45-02	ALL
	J14		W1171	5163B	24		34-45-02	ALL
	J15		W1171	5160R	24		34-45-02	ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05		W1171	0443	22		34-45-01	ALL
	K06		W1171	0484	24		34-45-02	ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13		W1171	0465	24		34-45-01	001-002, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D01500

Page 9

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01583E		E002-01/ /		PLUG- (continued)				001-099
D01583E		E2-1/ /		PLUG- (continued)				115-199
	K13	UNUSED	W1171	0466	24		34-45-02	003-099
	K14							ALL
	K15		W1171	5160B	24		34-45-02	ALL
	DED		W1171	5187Z			34-45-01	001-002, 115-199
	DED		W1171	5189Z			34-45-01	001-002, 115-199
	DED		W1171	5160Z			34-45-02	ALL
	DED		W1171	5161Z			34-45-02	ALL
	DED		W1171	5162Z			34-45-02	ALL
	DED		W1171	5163Z			34-45-02	ALL
	DED		W1171	5164Z			34-45-02	ALL
	DED		W1171	5165Z			34-45-02	ALL
	DED		W1171	5194Z			34-45-01	ALL
	DED		W1171	5195Z			34-45-01	ALL
	DED		W1171	5168Z			34-45-02	115-199
D01583F		E002-01/ /		PLUG-				001-099
D01583F		E2-1/ /		PLUG-				115-199
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05		W1171	0471	24		34-45-02	001, 003-099, 115-199
	A05	UNUSED						002
	A06	UNUSED						ALL
	A07	UNUSED						001-008, 115-199
	A07		W1171	0555	24		34-45-02	009-099
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05		W1171	0468	24		34-45-02	001, 003-099, 115-199
	B05		W1171	0468	22		34-43-14	002
	B06	UNUSED						ALL
	B07		W1171	0485	24		34-45-02	ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D01500

Page 10

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01583F		E002-01/ /		PLUG- (continued)				001-099
D01583F		E2-1/ /		PLUG- (continued)				115-199
	B10	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05		W1171	0469	24		34-45-02	001, 003-099, 115-199
	C05	UNUSED						002
	C06	UNUSED						ALL
	C07	UNUSED						001-008, 115-199
	C07		W1171	0556	24		34-45-02	009-099
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03		W1171	5168R	24		34-45-02	001-099
	D03	UNUSED						115-199
	D04	UNUSED						ALL
	D05		W1171	0470	24		34-45-02	001, 003-099, 115-199
	D05		W1171	0832	22		34-46-14	002
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03		W1171	5168B	24		34-45-02	001-099
	E03	UNUSED						115-199
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08		W1171	0531	24		34-45-02	001-099
	E08	UNUSED						115-199
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D01500

Page 11

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01583F		E002-01/ /		PLUG- (continued)				001-099
D01583F		E2-1/ /		PLUG- (continued)				115-199
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	K01	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D01500

Page 12

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01583F		E002-01/ /		PLUG- (continued)				001-099
D01583F		E2-1/ /		PLUG- (continued)				115-199
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07		W1171	0532	24		34-45-02	001-099
	K07		W1171	0485	24		34-45-02	115-199
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	DED		W1171	5168Z			34-45-02	001-099
D01584		230/200/R047		RCPT				001-099
D01584		225/200/R28		RCPT				115-199
	1		W2070	0370	20		21-45-11	ALL
	2		W2070	0371	20		21-45-11	ALL
	3		W2070	0374	20		21-45-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D01585		420/290/010		PLUG				ALL
	= A1		W2363	001CX			34-45-02	ALL
	= C1		W2363	001CO			34-45-02	ALL
D01586		260/193/R047		PLUG				001-099
D01586		263/202/R58		PLUG				115-199
	1		W2070	0367	20		21-45-11	ALL
	2		W2070	0368	20		21-45-11	ALL
	3		W2070	0369	20		21-45-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D01587		420/290/010		PLUG				ALL
	= A1		W2363	002CX			34-45-02	ALL
	= C1		W2363	002CO			34-45-02	ALL
D01588		P008-00/ /		PLUG				ALL
	1		W4236	0082	22		33-16-61	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01500

Page 13

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01588		P008-00/ /		PLUG (continued)				ALL
	2		W4236	0017	22		26-11-21	ALL
	3	UNUSED						ALL
	4		W4236	0025	22		31-51-33	ALL
	5	UNUSED						ALL
	6		W4236	0252	22		76-11-12	ALL
	7		W4236	0009	22		76-11-12	ALL
	8		W4236	0060	20		26-21-11	ALL
	9		W4236	0058	20		26-21-11	ALL
	10		W4236	0019	22		26-11-21	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W4236	0183	20		36-11-21	ALL
	15		W4236	0024	20		31-51-33	ALL
	16		W4236	0035	20		28-22-21	ALL
	17		W4236	0128	22		29-11-21	ALL
	18		W4236	0127	22		29-11-21	ALL
	19		W4236	0010	22		76-11-12	ALL
	20		W4236	0056	22		78-34-21	ALL
	21		W4236	0069	22		24-22-21	ALL
	22		W4236	0059	20		26-21-11	ALL
	23		W4236	0061	20		26-21-11	ALL
	24		W4236	0132	22		26-11-21	001-099
	24		W4236	0132	20		26-11-21	115-199
	25		W4236	0018	22		26-11-21	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W4236	0184	20		36-11-21	ALL
	32		W4236	0036	20		28-22-21	ALL
	33		W4236	0037	20		28-22-21	ALL
	34		W4236	0094	22		29-11-21	ALL
	35		W4236	0093	22		29-11-21	ALL
	36		W4236	0091	22		29-11-21	001-099
	36		W4236	0091	20		29-11-21	115-199
	37		W4236	0090	22		29-11-21	001-099
	37		W4236	0090	20		29-11-21	115-199
	38	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D01500

Page 14

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01588		P008-00/ /		PLUG (continued)				ALL
	39		W4236	0057	22		78-34-21	ALL
	40		W4236	0070	22		24-22-21	ALL
	41	UNUSED						ALL
D01589		420/290/010		PLUG				ALL
	= A1		W2363	003CX			34-45-02	ALL
	= C1		W2363	003CO			34-45-02	ALL
D01590		P54/ /		PLUG				ALL
	1		W1120	0097	24		26-11-21	001-099
	1		W1120	0485	24		26-11-21	115-199
	2		W1120	PA01			26-11-21	ALL
	3		W1120	0101	22		26-11-21	001-099
	3		W1120	0084	22		26-11-21	115-199
	4	UNUSED						ALL
	5		W1120	PA01			26-11-21	ALL
	6		W1120	0127	24		26-11-21	001-099
	6		W1120	0071	24		26-11-21	115-199
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1120	0128	24		26-11-21	001-099
	10		W1120	0070	24		26-11-21	115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1120	0126	24		26-11-21	001-099
	14		W1120	0072	24		26-11-21	115-199
	15	UNUSED						ALL
	16		W1120	0125	24		26-11-21	001-099
	16		W1120	0073	24		26-11-21	115-199
	17	UNUSED						ALL
	18		W1120	0102	22		26-11-21	001-099
	18		W1120	0085	22		26-11-21	115-199
	19		W1120	0099	24		26-11-21	001-099
	19		W1120	0490	24		26-11-21	115-199
	20		W1120	0098	24		26-11-21	001-099
	20		W1120	0489	24		26-11-21	115-199
	21		W1120	0100	24		26-11-21	001-099
	21		W1120	0491	24		26-11-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section D01500

Page 15

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01590		P54/ /		PLUG (continued)				ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D01591		420/290/010		PLUG				ALL
	= A1		W2363	004CX			34-45-02	ALL
	= C1		W2363	004CO			34-45-02	ALL
D01592		P54/ /		PLUG				ALL
	1		W1120	0091	24		26-11-21	001-099
	1		W1120	0484	24		26-11-21	115-199
	2		W1120	PB01			26-11-21	ALL
	3		W1120	0092	22		26-11-21	001-099
	3		W1120	0065	22		26-11-21	115-199
	4	UNUSED						ALL
	5		W1120	PB01			26-11-21	ALL
	6		W1120	0107	24		26-11-21	001-099
	6		W1120	0067	24		26-11-21	115-199
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1120	0106	24		26-11-21	001-099
	10		W1120	0066	24		26-11-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section D01500

Page 16

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01592		P54/ /		PLUG (continued)				ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1120	0108	24		26-11-21	001-099
	14		W1120	0068	24		26-11-21	115-199
	15	UNUSED						ALL
	16		W1120	0109	24		26-11-21	001-099
	16		W1120	0069	24		26-11-21	115-199
	17	UNUSED						ALL
	18		W1120	0093	22		26-11-21	001-099
	18		W1120	0064	22		26-11-21	115-199
	19		W1120	0095	24		26-11-21	001-099
	19		W1120	0487	24		26-11-21	115-199
	20		W1120	0094	24		26-11-21	001-099
	20		W1120	0486	24		26-11-21	115-199
	21		W1120	0096	24		26-11-21	001-099
	21		W1120	0488	24		26-11-21	115-199
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D01593		460/140/000		PLUG				ALL
	= A1		W2367	001CX			34-45-02	ALL

HOOKUP LIST
D280N032

91-21-51
Section D01500
Page 17
Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01593		460/140/000		PLUG (continued)				ALL
	= C1		W2367	001CO			34-45-02	ALL
D01594		P008-00/ /		PLUG				ALL
	1		W4228	0079	22		33-16-51	ALL
	2		W4228	0021	22		26-11-11	ALL
	3		W4228	0180	24		36-11-41	ALL
	4		W4228	0087	22		31-51-33	ALL
	5	UNUSED						ALL
	6		W4228	0228	22		76-11-11	ALL
	7		W4228	0009	22		76-11-11	ALL
	8		W4228	0065	20		26-21-11	ALL
	9		W4228	0062	20		26-21-11	ALL
	10		W4228	0028	22		26-11-11	ALL
	11	UNUSED						ALL
	12		W4228	0181	24		36-11-41	ALL
	13	UNUSED						ALL
	14		W4228	0073	20		36-11-11	ALL
	15		W4228	0086	20		31-51-33	ALL
	16		W4228	0034	20		28-22-21	ALL
	17		W4228	0143	22		29-11-11	ALL
	18		W4228	0142	22		29-11-11	ALL
	19		W4228	0010	22		76-11-11	ALL
	20		W4228	0049	22		78-34-11	ALL
	21		W4228	0185	22		24-22-11	ALL
	22		W4228	0063	20		26-21-11	ALL
	23		W4228	0064	20		26-21-11	ALL
	24		W4228	0050	22		26-11-11	001-099
	24		W4228	0050	20		26-11-11	115-199
	25		W4228	0022	22		26-11-11	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W4228	0074	20		36-11-11	ALL
	32		W4228	0035	20		28-22-21	ALL
	33		W4228	0036	20		28-22-21	ALL
	34		W4228	0103	22		29-11-11	ALL
	35		W4228	0102	22		29-11-11	ALL
	36		W4228	0101	22		29-11-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D01500

Page 18

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01594		P008-00/ /		PLUG (continued)				ALL
	36		W4228	0101	20		29-11-11	115-199
	37		W4228	0100	22		29-11-11	001-099
	37		W4228	0100	20		29-11-11	115-199
	38	UNUSED						ALL
	39		W4228	0048	22		78-34-11	ALL
	40		W4228	0186	22		24-22-11	ALL
	41	UNUSED						ALL
D01595		460/140/000		PLUG				ALL
	= A1		W2367	002CX			34-45-02	ALL
	= C1		W2367	002CO			34-45-02	ALL
D01596		P54/ /		PLUG				ALL
	1		W1120	0009	24		26-11-11	001-099
	1		W1120	0476	24		26-11-11	115-199
	2		W1120	PC01			26-11-11	ALL
	3		W1120	0013	22		26-11-11	001-099
	3		W1120	0023	22		26-11-11	115-199
	4	UNUSED						ALL
	5		W1120	PC01			26-11-11	ALL
	6		W1120	0040	24		26-11-11	001-099
	6		W1120	0020	24		26-11-11	115-199
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1120	0041	24		26-11-11	001-099
	10		W1120	0019	24		26-11-11	115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1120	0039	24		26-11-11	001-099
	14		W1120	0021	24		26-11-11	115-199
	15	UNUSED						ALL
	16		W1120	0038	24		26-11-11	001-099
	16		W1120	0022	24		26-11-11	115-199
	17	UNUSED						ALL
	18		W1120	0014	22		26-11-11	001-099
	18		W1120	0024	22		26-11-11	115-199
	19		W1120	0011	24		26-11-11	001-099
	19		W1120	0481	24		26-11-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D01500

Page 19

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01596		P54/ /		PLUG (continued)				ALL
	20		W1120	0010	24		26-11-11	001-099
	20		W1120	0480	24		26-11-11	115-199
	21		W1120	0012	24		26-11-11	001-099
	21		W1120	0482	24		26-11-11	115-199
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D01597		460/140/000		PLUG				ALL
	= A1		W2367	003CX			34-45-02	ALL
	= C1		W2367	003CO			34-45-02	ALL
D01598		P54/ /		PLUG				ALL
	1		W1120	0003	24		26-11-11	001-099
	1		W1120	0475	24		26-11-11	115-199
	2		W1120	PD01			26-11-11	ALL
	3		W1120	0005	22		26-11-11	001-099
	3		W1120	0002	22		26-11-11	115-199
	4	UNUSED						ALL
	5		W1120	PD01			26-11-11	ALL
	6		W1120	0019	24		26-11-11	001-099
	6		W1120	0004	24		26-11-11	115-199
	7	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D01500

Page 20

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01598		P54/ /		PLUG (continued)				ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1120	0018	24		26-11-11	001-099
	10		W1120	0003	24		26-11-11	115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1120	0020	24		26-11-11	001-099
	14		W1120	0005	24		26-11-11	115-199
	15	UNUSED						ALL
	16		W1120	0021	24		26-11-11	001-099
	16		W1120	0006	24		26-11-11	115-199
	17	UNUSED						ALL
	18		W1120	0004	22		26-11-11	001-099
	18		W1120	0001	22		26-11-11	115-199
	19		W1120	0007	24		26-11-11	001-099
	19		W1120	0477	24		26-11-11	115-199
	20		W1120	0006	24		26-11-11	001-099
	20		W1120	0478	24		26-11-11	115-199
	21		W1120	0008	24		26-11-11	001-099
	21		W1120	0479	24		26-11-11	115-199
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D01500

Page 21

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01598		P54/ /		PLUG (continued)				ALL
	41	UNUSED						ALL
D01599		460/140/000		PLUG				ALL
	= A1		W2367	004CX			34-45-02	ALL
	= C1		W2367	004CO			34-45-02	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01500

Page 22 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01600		P037-00/ /		RELAY SOCKET (PLATE 'B')				001-099
D01600		P37/ /		RELAY SOCKET (PLATE 'B')				115-199
	1	UNUSED						ALL
	2		W1270	0439	24		36-11-31	ALL
	3		W1270	0441	24		36-11-31	ALL
	4		W1270	0440	24		36-11-31	ALL
	5	UNUSED						ALL
	6		W1270	0511	24		36-11-41	001-009, 115-199
	6		W1270	6558	24		36-11-41	010-099
	7		W1270	0438	24		36-11-31	ALL
	8		W1270	0577	24		36-11-41	ALL
D01602		P037-00/ /		RELAY SOCKET (PLATE 'B')				001-099
D01602		P37/ /		RELAY SOCKET (PLATE 'B')				115-199
	1		W1270	0444	24		36-11-31	ALL
	2		W1270	0442	24		36-11-31	ALL
	3		W1270	0446	24		36-11-31	ALL
	4		W1270	0443	24		36-11-31	ALL
	5	UNUSED						ALL
	6		W1270	0445	24		36-11-31	ALL
	7		W1270	0437	24		36-11-31	ALL
	8	UNUSED						ALL
D01603		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D01603		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	A1		W1270	6304	20		23-32-02	ALL
	A2		W1270	6306	20		23-32-02	ALL
	A3		W1270	6356	20		23-32-02	ALL
	B1		W1270	6357	20		23-32-02	ALL
	B2		W1270	6385	20		23-32-02	ALL
	B3		W1270	6387	20		23-32-02	ALL
	C1		W1270	6389	20		23-32-02	ALL
	C2		W1270	6390	20		23-32-02	ALL
	C3		W1270	6391	20		23-32-02	ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1270	6395	20		23-32-02	ALL
	X2		W1270	6396	20		23-32-02	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01600

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01604		908/155/R44		PLUG				001-008, 115-199
	1		W2502	4501R	20		36-11-31	001-008, 115-199
	2		W2502	4501G	20		36-11-31	001-008, 115-199
	3		W2502	1032	20		36-11-31	001-008, 115-199
	4		W2502	4501B	20		36-11-31	001-008, 115-199
	5		W2502	2505R	20		36-11-31	001-008, 115-199
	6		W2502	2505B	20		36-11-31	001-008, 115-199
	7		W2502	4501Y	20		36-11-31	001-008, 115-199
D01606		916/164/L036		PLUG				115-199
	1		W2406	2514R	20		36-21-11	115-199
	2		W2406	2514B	20		36-21-11	115-199
	3		W2406	1030	20		36-21-11	115-199
	4		W2406	1014	20		36-21-11	115-199
	5		W2406	0012	20		36-21-11	115-199
D01608		925/150/R043		PLUG				115-199
	1		W2506	2505R	20		36-21-11	115-199
	2		W2506	2505B	20		36-21-11	115-199
	3		W2506	0001	20		36-21-11	115-199
	4		W2506	1012	20		36-21-11	115-199
	5		W2506	0003	20		36-21-11	115-199
D01610		P37/ /		RELAY SOCKET (PLATE 'B')				ALL
	A1		W1270	0455	20		36-11-41	ALL
	A2		W1270	0449	20		36-11-41	ALL
	A3		W1270	0454	20		36-11-41	ALL
	B1		W1270	0457	24		36-11-41	ALL
	B2		W1270	0452	24		36-11-41	ALL
	B3		W1270	0456	24		36-11-41	ALL
	C1		W1270	0352	24		24-51-71	ALL
	C2		W1270	0351	24		24-51-71	ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1270	0459	24		36-11-41	001-099
	X1		W1270	0462	24		36-11-41	115-199
	X2		W1270	0453	24		36-11-41	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01600

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01612		P37/ I		RELAY SOCKET (PLATE 'B')				ALL
	1	UNUSED						ALL
	2		W1270	0456	24		36-11-41	ALL
	3		W1270	0471	24		36-11-41	001-099
	3		W1270	0471	20		36-11-41	115-199
	4		W1270	0470	24		36-11-41	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1270	0464	24		36-11-41	ALL
	8	UNUSED						ALL
D01614		P37/ I		RELAY SOCKET (PLATE 'B')				ALL
	1		W1270	2006B	24		21-51-12	ALL
	2		W1270	2006R	24		21-51-12	ALL
	3		W1270	0460	24		36-11-41	ALL
	4	UNUSED						ALL
	5		W1270	0457	24		36-11-41	ALL
	6		W1270	0463	24		36-11-41	ALL
	7		W1270	0461	24		36-11-41	ALL
	8		W1270	0469	24		36-11-41	ALL
	9	UNUSED						ALL
	10		W1270	2005R	24		21-51-22	ALL
	11		W1270	2005B	24		21-51-22	ALL
	12		W1270	0468	24		36-11-41	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D01616		1876/220/L030		PLUG				001-099
D01616		1876/220/L30		PLUG				115-199
	1		W2654	0020	18		36-11-41	001-099
	1		W2654	0020	20		36-11-41	115-199
	2		W2654	0021	18		36-11-41	001-099
	2		W2654	0021	20		36-11-41	115-199
	3		W2654	0017	18		36-11-41	001-099
	3		W2654	0017	20		36-11-41	115-199
	4		W2654	0019	18		36-11-41	001-099
	4		W2654	0019	20		36-11-41	115-199
	5		W2654	0018	18		36-11-41	001-099
	5		W2654	0018	20		36-11-41	115-199
	6		W2654	0023	18		36-11-41	001-099

HOOKUP LIST

D280N032

91-21-51

Section D01600

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01616		1876/220/L030		PLUG (continued)				001-099
D01616		1876/220/L30		PLUG (continued)				115-199
	6		W2654	0023	20		36-11-41	115-199
	7		W2654	0022	18		36-11-41	001-099
	7		W2654	0022	20		36-11-41	115-199
D01626		520/175/L057		PLUG-				ALL
	1		W4004	0021	16		21-58-13	ALL
	2		W4004	0022	16		21-58-13	ALL
	3		W4004	0023	16		21-58-13	ALL
	4	UNUSED						ALL
	5		W4004	0024	16		21-58-13	ALL
	6		W4004	0025	16		21-58-13	ALL
	7		W4004	0026	16		21-58-13	ALL
	8	UNUSED						ALL
D01628		520/192/L052		PLUG				001-099
D01628		520/175/L040		PLUG				115-199
	1		W4104	0008	16		21-58-13	ALL
	2		W4104	0009	16		21-58-13	ALL
	3		W4104	0010	16		21-58-13	ALL
	4	UNUSED						ALL
	5		W4104	0011	16		21-58-13	ALL
	6		W4104	0012	16		21-58-13	ALL
	7		W4104	0013	16		21-58-13	ALL
	8	UNUSED						ALL
D01638		1200/174/R038		PLUG				ALL
	1		W2602	0029	20		21-44-11	ALL
	2		W2602	0030	20		21-44-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D01640		1195/175/L015		PLUG				ALL
	1		W2634	0015	22		21-44-11	ALL
	2		W2634	0014	22		21-44-11	ALL
	3	UNUSED						ALL
	4	14	W2634	0011	14		21-44-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D01600

Page 4

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01640		1195/175/L015		PLUG (continued)				ALL
	7	14	W2634	0012	14		21-44-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	14	W2634	0013	14		21-44-11	ALL
	11	18	W2634	0017	18		21-44-11	ALL
	12		W2634	0016	22		21-44-11	ALL
D01642		1190/180/R020		PLUG				ALL
	1		W2602	0033	18		21-44-11	ALL
	2		W2602	0034	18		21-44-11	ALL
	3		W2602	0035	18		21-44-11	ALL
	4	UNUSED						ALL
	5		W2602	0032	24		21-44-11	ALL
	6		W2602	0031	24		21-44-11	ALL
	7		W2602	0058	16		21-44-11	ALL
D01644		PPS183/ /		RECPT				ALL
	1		W3330	0010	18		36-11-11	ALL
	2		W3330	0008	18		36-11-11	ALL
	3		W3330	0009	18		36-11-11	ALL
	4	UNUSED						ALL
	5		W3330	0007	18		36-11-11	ALL
	6	UNUSED						ALL
	7		W3330	0006	18		36-11-11	ALL
D01650		AB0317/ /		RCPT-				ALL
	A		W3650	0001	08		25-31-11	001-099
	A		W3650	0001	10		25-31-11	115-199
	B		W3650	0002	08		25-31-11	001-099
	B		W3650	0002	10		25-31-11	115-199
	C		W3650	0003	08		25-31-11	001-099
	C		W3650	0003	10		25-31-11	115-199
	D		W3650	0004	08		25-31-11	001-099
	D		W3650	0004	10		25-31-11	115-199
D01652		314/295/R007		RCPT-				001-099
	1	UNUSED						001-099
	2	UNUSED						001-099
	3		W3644	0005	22		33-27-11	001-099
	4		W3644	0047	22		25-31-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D01600

Page 5

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01652		314/295/R007		RCPT- (continued)				001-099
	5		W3644	0048	22		25-31-11	001-099
	6		W3644	0049	22		25-31-11	001-099
	7		W3644	0050	22		25-31-11	001-099
	8		W3644	0008	22		33-27-11	001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11		W3644	0003	22		33-27-11	001-099
	12		W3644	0007	22		33-27-11	001-099
D01654		385/295/R27		RCPT-				001-099
	A		W3670	0008	10		25-31-13	001-099
	B		W3670	0009	10		25-31-13	001-099
	C		W3670	0010	10		25-31-13	001-099
	D		W3670	0011	10		25-31-13	001-099
D01658		690/295/R35		RCPT-				001-099
D01658		690/295/R035		RCPT-				115-199
	A		W3660	0001	10		25-31-21	001-099
	A		W3658	0001	08		25-31-21	115-199
	B		W3660	0002	10		25-31-21	001-099
	B		W3658	0002	08		25-31-21	115-199
	C		W3660	0003	10		25-31-21	001-099
	C		W3658	0003	08		25-31-21	115-199
	D		W3660	0004	10		25-31-21	001-099
	D		W3658	0004	08		25-31-21	115-199
D01660		690/295/R035		RCPT-				001-099
D01660		690/295/R35		RCPT-				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W3644	0018	22		33-27-21	ALL
	4	UNUSED						001-099
	4		W3644	0002	22		25-31-21	115-199
	5	UNUSED						001-099
	5		W3644	0003	22		25-31-21	115-199
	6	UNUSED						001-099
	6		W3644	0004	22		25-31-21	115-199
	7	UNUSED						001-099
	7		W3644	0005	22		25-31-21	115-199
	8		W3644	0039	22		33-27-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01600

Page 6

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01660		690/295/R035		RCPT- (continued)				001-099
D01660		690/295/R35		RCPT- (continued)				115-199
	9		W3644	0059	22		SPARE	001-099
	9	UNUSED						115-199
	10		W3644	0060	22		SPARE	001-099
	10	UNUSED						115-199
	11		W3644	0019	22		33-27-21	ALL
	12		W3644	0038	22		33-27-21	ALL
D01662		750/298/R25		RCPT-				115-199
	A		W3662	0001	12		25-31-23	115-199
	B		W3662	0002	12		25-31-23	115-199
	C		W3662	0003	12		25-31-23	115-199
	D		W3662	0004	12		25-31-23	115-199
D01666		1624/ /		RCPT-				001-099
	A		W3668	0001	10		25-31-31	001-099
	B		W3668	0002	10		25-31-31	001-099
	C		W3668	0003	10		25-31-31	001-099
	D		W3668	0004	10		25-31-31	001-099
D01672		231/150/20		PLUG				001-099
D01672		239/170/L20		PLUG				115-199
	1		W2008	0005	14		24-33-11	ALL
	2		W2008	0006	14		24-33-11	ALL
	3		W2008	0007	14		24-33-11	ALL
	4	UNUSED						ALL
D01678		P006-00/ /		RELAY SOCKET				ALL
	A1	UNUSED						ALL
	A2		W0074	0020	22		24-33-11	ALL
	A3		W0074	0023	20		24-33-11	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D01600

Page 7

Dec 18/2007

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01678		P006-00/ /		RELAY SOCKET (continued)				ALL
	X1		W0060	0004	22		24-33-11	ALL
	X2		W0074	0024	20		24-33-11	ALL
D01679		E003-02/ /		PLUG- COAX				001-099
D01679		E3-2/ /		PLUG-COAX				115-199
	= A1		W1423	002CX			34-53-21	ALL
	= C1		W1423	002CO			34-53-21	ALL
D01680		P6/ /		RELAY SOCKET				ALL
	1	18	W0062	0026	18		24-33-11	ALL
	2	18	W0074	0012	18		24-33-11	ALL
	3	UNUSED						ALL
	4		W0062	0025	18		24-33-11	ALL
	5		W0074	0058	22		24-33-11	ALL
	6		W0074	0056	22		24-33-11	ALL
	7		W0074	0001	18		24-33-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0068	0006	18		24-33-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D01681		E003-02/ /		PLUG- COAX				001-099
D01681		E3-2/ /		PLUG-COAX				115-199
	= A1		W1423	004CX			34-55-21	ALL
	= C1		W1423	004CO			34-55-21	ALL
D01682		P6/ /		RELAY SOCKET-				ALL
	A1	UNUSED						ALL
	A2		W0074	0019	22		24-33-11	ALL
	A3		W0074	0021	20		24-33-11	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0068	0007	22		24-33-11	ALL
	X2		W0074	0022	20		24-33-11	ALL
D01683		E003-02/ /		PLUG- COAX				001-099
D01683		E3-2/ /		PLUG-COAX				115-199
	= A1		W1423	005CX			34-45-02	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01600

Page 8

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01683		E003-02/ /		PLUG- COAX (continued)				001-099
D01683		E3-2/ /		PLUG-COAX (continued)				115-199
	= C1		W1423	005CO			34-45-02	ALL
D01685		E003-02/ /		PLUG-				ALL
	= A1		W4467	001CX			34-53-11	ALL
	= C1		W4467	001CO			34-53-11	ALL
D01688		1065/184/R075		PLUG				ALL
	1		W2512	1009	18		32-42-11	ALL
	2		W2512	1022	18		32-42-11	ALL
	3		W2512	0050	18		32-42-11	ALL
D01690		1065/184/R075		PLUG				ALL
	1		W2512	1007	18		32-42-11	ALL
	2		W2512	1021	18		32-42-11	ALL
	3		W2512	0053	18		32-42-11	ALL
D01692		1065/184/R075		PLUG				ALL
	1		W2512	1005	18		32-42-11	ALL
	2		W2512	1020	18		32-42-11	ALL
	3		W2512	0051	18		32-42-11	ALL
D01694		1065/184/R075		PLUG				ALL
	1		W2512	1003	18		32-42-11	ALL
	2		W2512	1019	18		32-42-11	ALL
	3		W2512	0054	18		32-42-11	ALL
D01696		1078/184/R004		PLUG				ALL
	1		W2512	1001	18		32-42-11	ALL
	2		W2512	0018	18		32-42-11	ALL
	3		W2512	0052	18		32-42-11	ALL
D01698		1078/184/R004		PLUG				ALL
	1		W2512	1011	18		32-42-11	ALL
	2		W2512	0023	18		32-42-11	ALL
	3		W2512	0055	18		32-42-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01600

Page 9 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01702		IRSS585/ /		PLUG				ALL
	1		W3306	3501B	20		27-58-11	ALL
	2		W3306	3501R	20		27-58-11	ALL
	3		W3306	3501Y	20		27-58-11	ALL
	4		W3306	0004	18		27-58-11	ALL
	5		W3306	0005	18		27-51-41	ALL
	6		W3306	2511R	20		27-51-41	ALL
	7		W3306	2511B	20		27-51-41	ALL
	8		W3306	4251R	20		27-51-41	ALL
	9		W3306	4251B	20		27-51-41	ALL
	10		W3306	4251Y	20		27-51-41	ALL
	11		W3306	4251G	20		27-51-41	ALL
	12		W3306	2510R	20		27-51-61	ALL
	13		W3306	2510B	20		27-51-61	ALL
	14		W3306	4252R	20		27-51-61	ALL
	15		W3306	4252B	20		27-51-61	ALL
	16		W3306	4252Y	20		27-51-61	ALL
	17		W3306	4252G	20		27-51-61	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
D01708		FSS122/ /		PLUG				ALL
	1		W3342	0001	14		27-81-11	ALL
	2		W3342	0002	14		27-81-11	ALL
	3		W3342	0003	14		27-81-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W3342	0006	20		27-51-21	ALL
	7		W3342	0005	20		27-51-21	ALL
	8		W3342	0004	16		27-81-11	ALL
D01710		0880/165/L038		PLUG				ALL
	1		W4208	0040	18		27-51-21	ALL
	2		W4208	0020	22		27-51-21	001-099
	2		W4208	0020	20		27-51-21	115-199
	3		W4208	0025	22		27-51-21	001-099
	3		W4208	0025	20		27-51-21	115-199
	4	UNUSED						ALL
	5		W4208	0039	22		27-51-21	001-099
	5		W4208	0039	20		27-51-21	115-199
	6	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D01700

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01710		0880/165/L038		PLUG (continued)				ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
D01712		FSS115/WRP/		PLUG				ALL
	1		W3342	2001R	20		27-81-11	ALL
	2		W3342	2001B	20		27-81-11	ALL
	3		W3342	4001R	20		27-81-11	ALL
	4		W3342	4001B	20		27-81-11	ALL
	5		W3342	4001Y	20		27-81-11	ALL
	6		W3342	4001G	20		27-81-11	ALL
	7		W3342	0019	18		27-81-11	ALL
D01714		1063/184/L009		PLUG				ALL
	1		W2410	1001	14		27-51-11	ALL
	2		W2410	1003	14		27-51-11	ALL
	3		W2410	1002	14		27-51-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W2410	0041	20		27-51-21	ALL
	7		W2410	1005	20		27-51-21	ALL
	8		W2410	0020	18		27-51-11	ALL
D01716		1060/190/L020		PLUG				ALL
	1		W2410	0008	18		27-51-21	ALL
	2		W2410	2502B	20		27-51-21	ALL
	3		W2410	2502R	20		27-51-21	ALL
	4	UNUSED						ALL
	5		W2410	0023	20		27-51-21	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
D01718		P030-00/ /		RCPT- EXT PWR				ALL
	A	H	W2036	0001	*1		24-41-11	ALL
	B	H	W2036	0002	*1		24-41-11	ALL
	C	H	W2036	0003	*1		24-41-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01700

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01718		P030-00/ /		RCPT- EXT PWR (continued)				ALL
	E	E	W2038	0001	24		24-41-11	001-099
	E	E	W2038	0001	20		24-41-11	115-199
	F	E	W2038	0002	24		24-41-11	001-099
	F	E	W2038	0002	20		24-41-11	115-199
	N	R	W2036	0004	*1		24-41-11	ALL
D01726		P36/ /		RELAY SOCKET (PLATE 'A')				ALL
	A1		W1260	5967	22		76-11-21	ALL
	A2		W1260	5969	20		76-11-21	ALL
	A3		W1260	6053	22		76-11-21	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1260	5968	20		76-11-21	ALL
	X2		W1260	5970	22		76-11-21	ALL
D01728		P031-00/ /		PLUG				ALL
	1		W1136	0119	24		24-27-11	ALL
	2		W1136	0319	24		24-27-11	ALL
	3		W1136	0111	24		24-22-11	ALL
	4		W1136	0205	20		24-22-11	ALL
	5		W1136	0322	24		24-27-21	ALL
	6		W1136	0120	24		24-27-21	ALL
	7		W1136	0112	24		24-22-12	ALL
	8		W1136	0203	20		24-22-12	ALL
	9		W1136	0118	24		24-27-11	ALL
	10		W1136	0208	20		24-27-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W1136	0301	20		24-22-12	ALL
	14		W1136	0300	20		24-22-12	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W1136	0357	24		24-22-22	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01700

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01728		P031-00/ /		PLUG (continued)				ALL
	18		W1136	0356	20		24-22-22	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W1136	0108	20		24-22-11	ALL
	22		W1136	0113	24		24-22-12	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W1136	0124	24		24-51-71	ALL
	26		W1136	0126	24		24-51-71	ALL
	27		W1136	0305	24		24-22-12	ALL
	28		W1136	0306	24		24-22-12	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37		W1136	0313	20		24-22-11	ALL
	38	UNUSED						ALL
	39		W1136	0109	20		24-22-11	ALL
	40		W1136	0206	20		24-22-11	ALL
	41		W1136	0110	20		24-22-11	ALL
D01730		P031-00/ /		PLUG				ALL
	1		W1136	0320	24		24-27-11	ALL
	2		W1136	0207	20		24-27-11	ALL
	3		W1136	0115	24		24-22-12	ALL
	4		W1136	0200	20		24-22-12	ALL
	5		W1136	0125	24		24-51-71	ALL
	6		W1136	0127	24		24-51-71	ALL
	7		W1136	0114	24		24-22-12	ALL
	8		W1136	0201	20		24-22-12	ALL
	9		W1136	0144	24		24-27-11	ALL
	10		W1136	0202	20		24-27-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D01700

Page 4

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01730		P031-00/ /		PLUG (continued)				ALL
	15		W1136	0321	24		24-27-11	ALL
	16		W1136	0117	24		24-27-11	ALL
	17		W1136	0343	22		29-11-31	ALL
	18		W1136	0344	22		29-11-31	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W1136	0323	24		24-27-21	ALL
	22		W1136	0324	24		24-27-21	ALL
	23		W1136	0120	24		24-27-21	ALL
	24		W1136	0325	24		24-27-21	ALL
	25		W1136	0311	24		24-22-12	001-099
	25		W1136	0311	20		24-22-12	115-199
	26		W1136	0019	24		24-51-31	ALL
	27		W1136	0354	24		24-22-22	ALL
	28		W1136	0355	24		24-22-22	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37		W1136	0316	20		24-22-12	ALL
	38	UNUSED						ALL
	39		W1136	0309	20		24-22-12	ALL
	40		W1136	0204	20		24-22-12	ALL
	41		W1136	0116	20		24-22-12	ALL
D01732		P034-00/ /		PLUG				ALL
	1		W1128	0116	24		24-27-11	ALL
	2		W1128	0014	24		24-27-11	ALL
	3		W1128	0111	24		24-22-41	ALL
	4		W1128	0011	20		24-22-41	ALL
	5		W1128	0117	24		24-27-21	ALL
	6		W1128	0016	24		24-27-21	ALL
	7		W1128	0129	24		24-41-11	ALL
	8		W1128	0026	20		24-41-11	ALL
	9		W1128	0118	24		24-27-41	ALL
	10		W1128	0018	24		24-27-41	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01700

Page 5

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01732		P034-00/ /		PLUG (continued)				ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W1128	0106	20		24-22-12	ALL
	14		W1128	0009	20		24-22-12	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W1128	0109	24		24-22-22	ALL
	18		W1128	0010	20		24-22-22	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W1128	0008	24		24-22-12	ALL
	22		W1128	0023	24		24-41-11	ALL
	23		W1128	0165	24		24-51-71	ALL
	24		W1128	0166	24		24-51-71	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37		W1128	0013	20		24-22-41	ALL
	38	UNUSED						ALL
	39		W1128	0112	20		24-22-41	ALL
	40		W1128	0012	20		24-22-41	ALL
	41		W1128	0113	20		24-22-41	ALL
D01734		P034-00/ /		PLUG				ALL
	1		W1128	0027	24		24-41-12	001-099
	1		W1128	0027	20		24-41-12	115-199
	2		W1128	0130	24		24-41-12	ALL
	3		W1128	0131	24		24-41-12	ALL
	4		W1128	0028	24		24-41-12	001-099
	4		W1128	0028	20		24-41-12	115-199
	5		W1128	0014	24		24-27-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01700

Page 6

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01734		P034-00/ /		PLUG (continued)				ALL
	6		W1128	0015	20		24-27-11	ALL
	7		W1128	0127	24		24-41-11	ALL
	8		W1128	0025	20		24-41-11	ALL
	9		W1128	0016	24		24-27-21	ALL
	10		W1128	0017	20		24-27-21	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W1128	0009	20		24-22-12	ALL
	14		W1128	0107	20		24-22-12	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W1128	0010	20		24-22-22	ALL
	18		W1128	0108	24		24-22-22	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W1128	0023	24		24-41-11	ALL
	22		W1128	0020	24		24-41-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W1128	0119	24		24-27-41	ALL
	26		W1128	0019	24		24-27-41	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W1128	0128	20		24-41-11	ALL
	41		W1128	0024	20		24-41-11	ALL
D01738		1046/186/L022		PLUG				001-099
D01738		1046/186/L22		PLUG				115-199
	1		W2443	0004	20		27-51-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01700

Page 7

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01738		1046/186/L022		PLUG (continued)				001-099
D01738		1046/186/L22		PLUG (continued)				115-199
	2		W2443	0007	18		27-51-31	ALL
	3	UNUSED						ALL
D01742		FS150/RS/L002		PLUG				ALL
	1		W3100	0003	20		27-28-11	ALL
	2		W3100	0001	20		27-28-11	ALL
	3		W3100	1001	20		27-28-11	ALL
	4		W3100	2001B	20		27-28-11	ALL
	5		W3100	2001R	20		27-28-11	ALL
	DED		W3100	1001Z			27-28-11	ALL
D01744		P008-00/ /		PLUG				001-099
D01744		P8/ /		RCPT				115-199
	1		W2066	0183	20		33-13-52	ALL
	2		W2066	0182	20		33-13-52	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W2066	0167	22		27-11-11	ALL
	6		W2066	0263	20		27-21-11	001-099
	6		W2066	1012	20		27-21-11	115-199
	7	UNUSED						ALL
	8		W2066	0175	20		27-11-11	ALL
	9		W2066	0166	22		27-11-11	ALL
	10	UNUSED						ALL
	11		W2066	0262	20		27-21-11	001-099
	11		W2066	1011	20		27-21-11	115-199
	12		W2066	0165	22		27-11-11	ALL
	13	UNUSED						ALL
	14		W2066	0267	20		27-21-11	001-099
	14		W2066	1013	20		27-21-11	115-199
	DED		W2066	1011Z			27-21-11	115-199
	DED		W2066	1012Z			27-21-11	115-199
	DED		W2066	1013Z			27-21-11	115-199
D01746		FIN106/RS/L002		PLUG				ALL
	1		W3100	0006	18		27-21-11	ALL
	2		W3100	2501B	18		27-21-11	ALL
	3		W3100	2501R	18		27-21-11	ALL
	4		W3100	2002R	20		27-28-13	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01700

Page 8

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01746		FIN106/RS/L002		PLUG (continued)				ALL
	5		W3100	2002B	20		27-28-13	ALL
	6		W3100	0008	20		27-28-13	ALL
	7		W3100	0009	20		27-28-13	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W3100	0007	18		27-21-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	DED		W3100	2501Z			27-21-11	ALL
D01748		P001-03/ /		RCPT.				001-099
D01748		P1-3/ /		RCPT.				115-199
	1		W0001	0025	22		30-43-11	ALL
	2		W0001	0046	20		30-43-11	ALL
	3		W0001	0027	20		30-43-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D01750		P1-3/ /		PLUG				ALL
	1		W0001	0067	16		30-42-11	ALL
	2		W0001	0068	18		30-42-11	ALL
	3		W0001	0066	18		30-42-11	ALL
	4	UNUSED						ALL
	5		W0001	0071	18		30-42-11	ALL
	6		W0001	0070	16		30-42-11	ALL
	7	UNUSED						ALL
D01756		FSS175-/ /		PLUG				ALL
	1		W3300	0082	20		28-25-11	ALL
	2	18	W3300	0008	18		28-42-11	ALL
	3		W3300	0007	20		28-42-11	ALL
	4	18	W3300	0009	18		28-42-11	ALL
	5	UNUSED						ALL
D01758		IRSS180/ /		PLUG				ALL
	1	UNUSED						ALL
	2	18	W3306	1002	18		28-42-11	ALL
	3	18	W3306	1019	18		28-42-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01700

Page 9

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01758		IRSS180/ /		PLUG (continued)				ALL
	4	18	W3306	0021	18		28-42-11	ALL
	5	UNUSED						ALL
D01760		1040/183/L010		PLUG				ALL
	1	UNUSED						ALL
	2	18	W2414	0010	18		28-42-11	ALL
	3	18	W2414	1004	18		28-42-11	ALL
	4	18	W2414	0025	18		28-42-11	ALL
	5	UNUSED						ALL
D01762		FSS173/ /		PLUG-				ALL
	1		W3342	3001R	18		28-22-11	ALL
	2		W3342	3001Y	18		28-22-11	ALL
	3		W3342	3001B	18		28-22-11	ALL
	4		W3342	0026	18		28-22-11	ALL
D01764		IRSS185/ /		PLUG				ALL
	1		W3306	3001R	18		28-22-11	ALL
	2		W3306	3001Y	18		28-22-11	ALL
	3		W3306	3001B	18		28-22-11	ALL
	4		W3306	0011	18		28-22-11	ALL
D01766		1040/175/L012		PLUG				ALL
	1		W2414	3503R	16		28-22-11	ALL
	2		W2414	3503Y	16		28-22-11	ALL
	3		W2414	3503B	16		28-22-11	ALL
	4		W2414	0027	16		28-22-11	ALL
D01774		N252/147/L6		PLUG				ALL
	A		W5100	0062	20		29-11-11	ALL
	B		W5100	0061	20		29-11-11	ALL
	C	UNUSED						ALL
	D	UNUSED						ALL
	E		W5100	0063	18		29-11-11	ALL
D01776		E1-2/ /		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W2240	2002R	22		24-34-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01700

Page 10

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01776		E1-2/ /		PLUG- (continued)				ALL
	4		W2240	2002B	22		24-34-11	ALL
	5		W2240	0009	16		24-32-11	ALL
	6		W2240	0005	14		24-32-11	ALL
	7		W2240	0004	14		24-32-11	ALL
	8		W2240	0003	14		24-32-11	ALL
D01780		P36/ /		RELAY SOCKET (PLATE 'A')				ALL
	1		W1260	0817	24		31-51-41	ALL
	2		W1260	5716	24		31-51-41	ALL
	3	UNUSED						ALL
	4		W1260	5651	22		23-71-11	ALL
	5		W1260	5650	22		23-71-11	ALL
	6		W1260	5722	22		32-09-11	ALL
	7		W1260	5670	24		27-32-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1260	5876	22		27-09-12	ALL
	11		W1260	5875	22		27-09-12	ALL
	12		W1260	5728	22		32-09-11	ALL
	13	UNUSED						ALL
	14		W1260	5669	24		27-32-11	ALL
D01782		P36/ /		RELAY SOCKET (PLATE 'A')				ALL
	1		W1260	5878	24		21-51-13	ALL
	2		W1260	5877	24		21-51-13	ALL
	3	UNUSED						ALL
	4		W1260	0285	20		27-62-11	001-099
	4		W1260	5674	20		27-62-11	115-199
	5		W1260	5673	20		27-62-11	ALL
	6		W1260	5720	22		32-09-11	ALL
	7		W1260	5800	24		34-55-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1260	6455	20		78-34-51	ALL
	11		W1260	1122	20		78-34-51	ALL
	12		W1260	5726	22		32-09-11	ALL
	13	UNUSED						ALL
	14		W1260	5799	24		34-55-11	ALL
	DED		W1260	1122Z			78-34-51	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01700

Page 11

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01784		P36/ /		RELAY SOCKET (PLATE 'A')				ALL
	1		W1260	5712	24		31-51-21	ALL
	2		W1260	5713	24		31-51-21	ALL
	3		W1260	6527	24		78-36-11	ALL
	4		W1260	6528	24		78-36-11	ALL
	5		W1260	6530	24		78-36-11	ALL
	6		W1260	5718	22		32-09-11	ALL
	7		W1260	5714	24		31-51-33	ALL
	8		W1260	5715	24		31-51-33	ALL
	9		W1260	5656	24		24-22-22	ALL
	10	UNUSED						ALL
	11		W1260	5655	24		24-22-22	ALL
	12		W1260	5719	22		32-09-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D01786		P006-00/ /		RELAY SOCKET				ALL
	A1	UNUSED						ALL
	A2		W0074	0401	20		24-31-11	ALL
	A3		W0074	0122	20		24-31-11	ALL
	B1	UNUSED						ALL
	B2		W0074	0402	20		24-31-11	ALL
	B3		W0074	0123	20		24-31-11	ALL
	C1	UNUSED						ALL
	C2		W0074	0403	20		24-31-11	ALL
	C3		W0074	0124	20		24-31-11	ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0060	0014	22		24-31-11	ALL
	X2		W0074	0010	22		24-31-11	ALL
	X2		W0074	0085	24		24-25-11	003-099
D01792		247/160/R035		PLUG				ALL
	+	Q	W2000	0001	*1		24-31-11	ALL
	-	Q	W2000	0002	*1		24-31-11	ALL
D01794		247/150/R35		PLUG				001-099
D01794		247/155/R35		PLUG				115-199
	1		W2034	0008	24		24-31-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01700

Page 12

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01794		247/150/R35		PLUG (continued)				001-099
D01794		247/155/R35		PLUG (continued)				115-199
	2	UNUSED						ALL
	3		W2034	0009	24		24-31-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W2034	0006	24		24-31-11	ALL
	9		W2034	0013	20		24-31-11	ALL
	10	UNUSED						ALL
	11		W2034	0011	24		24-31-11	001-009, 115-199
	11		W2034	2501B	24		24-31-11	010-099
	12		W2034	0010	24		24-31-11	001-009, 115-199
	12		W2034	2501R	24		24-31-11	010-099
			W2034	0020	22		24-31-11	010-099
			W2034	2501Z			24-31-11	010-099
D01796A		E6-2/ /		PLUG				001-099
D01796A		E6-4/ /		PLUG				115-199
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D01700

Page 13

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01796A		E6-2/ /		PLUG (continued)				001-099
D01796A		E6-4/ /		PLUG (continued)				115-199
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D01700

Page 14

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01796A		E6-2/ /		PLUG (continued)				001-099
D01796A		E6-4/ /		PLUG (continued)				115-199
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D01700

Page 15

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01796A		E6-2/ /		PLUG (continued)				001-099
D01796A		E6-4/ /		PLUG (continued)				115-199
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D01700

Page 16

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01796A		E6-2/ /		PLUG (continued)				001-099
D01796A		E6-4/ /		PLUG (continued)				115-199
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
D01796B		E6-2/ /		PLUG				001-099
D01796B		E6-4/ /		PLUG				115-199
	A01		W1020	4251B	22		49-14-11	001-099
	A01		W1032	4251B	22		49-14-11	115-199
	A02		W1020	4251G	22		49-14-11	001-099
	A02		W1032	4251G	22		49-14-11	115-199
	A03		W1020	4251R	22		49-14-11	001-099
	A03		W1032	4251R	22		49-14-11	115-199
	A04		W1020	4251Y	22		49-14-11	001-099
	A04		W1032	4251Y	22		49-14-11	115-199
	A05		W1020	0320	22		49-61-11	001-099
	A05		W1032	0320	22		49-61-11	115-199
	A06		W1020	4601G	22		49-14-11	001-099
	A06		W1032	4601G	22		49-14-11	115-199
	A07		W1020	4601W	22		49-14-11	001-099
	A07		W1032	4601W	22		49-14-11	115-199
	A08		W1020	4602G	22		49-14-11	001-099
	A08		W1032	4602G	22		49-14-11	115-199
	A09		W1020	4602W	22		49-14-11	001-099
	A09		W1032	4602W	22		49-14-11	115-199
	A10		W1020	2512B	22		49-14-11	001-099
	A10		W1032	2512B	22		49-14-11	115-199
	A11		W1020	2512R	22		49-14-11	001-099
	A11		W1032	2512R	22		49-14-11	115-199
	A12	UNUSED						ALL
	A13	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D01700

Page 17

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01796B		E6-2/ /		PLUG (continued)				001-099
D01796B		E6-4/ /		PLUG (continued)				115-199
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03		W1020	2502B	22		49-14-11	001-099
	B03		W1032	2502B	22		49-14-11	115-199
	B04		W1020	2502R	22		49-14-11	001-099
	B04		W1032	2502R	22		49-14-11	115-199
	B05		W1020	2513B	22		49-14-11	001-099
	B05		W1032	2513B	22		49-14-11	115-199
	B06		W1020	2513R	22		49-14-11	001-099
	B06		W1032	2513R	22		49-14-11	115-199
	B07		W1020	0343	22		49-61-14	001-099
	B07		W1032	0343	22		49-61-14	115-199
	B08		W1020	0319	22		49-61-11	001-099
	B08		W1032	0319	22		49-61-11	115-199
	B09	UNUSED						ALL
	B10		W1020	0335	22		49-14-11	001-099
	B10		W1032	0335	22		49-14-11	115-199
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05		W1020	0331	22		49-14-11	001-099
	C05		W1032	0331	22		49-14-11	115-199
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08		W1020	2503B	22		49-14-11	001-099
	C08		W1032	2503B	22		49-14-11	115-199
	C09		W1020	2503R	22		49-14-11	001-099
	C09		W1032	2503R	22		49-14-11	115-199
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D01700

Page 18

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01796B		E6-2/ /		PLUG (continued)				001-099
D01796B		E6-4/ /		PLUG (continued)				115-199
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03		W1020	0450	24		36-11-41	001-099
	D03		W1032	0450	24		36-11-41	115-199
	D04	UNUSED						ALL
	D05		W1020	0500	24		21-51-11	001-099
	D05		W1032	0500	24		21-51-11	115-199
	D06		W1020	0323	22		49-61-11	001-099
	D06		W1032	0323	22		49-61-11	115-199
	D07		W1020	0510	22		49-61-11	001-099
	D07		W1032	0510	22		49-61-11	115-199
	D08		W1020	2111B	24		21-61-51	001-099
	D08		W1032	2001B	24		21-61-51	115-199
	D09		W1020	2111R	24		21-61-51	001-099
	D09		W1032	2001R	24		21-61-51	115-199
	D10		W1020	0020	24		49-61-11	001-099
	D10		W1032	0020	24		49-61-11	115-199
	D11		W1020	0332	22		49-14-11	001-099
	D11		W1032	0332	22		49-14-11	115-199
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04		W1020	2501B	22		49-14-11	001-099
	E04		W1032	2501B	22		49-14-11	115-199
	E05		W1020	2501R	22		49-14-11	001-099
	E05		W1032	2501R	22		49-14-11	115-199
	E06		W1020	4603G	22		49-14-11	001-099
	E06		W1032	4603G	22		49-14-11	115-199
	E07		W1020	4603W	22		49-14-11	001-099
	E07		W1032	4603W	22		49-14-11	115-199
	E08	UNUSED						ALL
	E09	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D01700

Page 19

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01796B		E6-2/ /		PLUG (continued)				001-099
D01796B		E6-4/ /		PLUG (continued)				115-199
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06		W1020	0333	22		49-14-11	001-099
	F06		W1032	0333	22		49-14-11	115-199
	F07		W1020	0334	22		49-14-11	001-099
	F07		W1032	0334	22		49-14-11	115-199
	F08		W1020	2505R	22		49-14-11	001-099
	F08		W1032	2505R	22		49-14-11	115-199
	F09		W1020	2506B	22		49-14-11	001-099
	F09		W1032	2506B	22		49-14-11	115-199
	F10		W1020	2506R	22		49-14-11	001-099
	F10		W1032	2506R	22		49-14-11	115-199
	F11		W1020	2505B	22		49-14-11	001-099
	F11		W1032	2505B	22		49-14-11	115-199
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05		W1020	0324	22		49-72-11	001-099
	G05		W1032	0324	22		49-72-11	115-199
	G06		W1020	2508B	22		49-14-11	001-099
	G06		W1032	2508B	22		49-14-11	115-199
	G07		W1020	2508R	22		49-14-11	001-099
	G07		W1032	2508R	22		49-14-11	115-199
	G08		W1020	2504B	22		49-14-11	001-099
	G08		W1032	2504B	22		49-14-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D01700

Page 20

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01796B		E6-2/ /		PLUG (continued)				001-099
D01796B		E6-4/ /		PLUG (continued)				115-199
	G09		W1020	2504R	22		49-14-11	001-099
	G09		W1032	2504R	22		49-14-11	115-199
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07		W1020	0322	22		49-61-11	001-099
	H07		W1032	0322	22		49-61-11	115-199
	H08		W1020	0321	22		49-61-11	001-099
	H08		W1032	0321	22		49-61-11	115-199
	H09	UNUSED						ALL
	H10		W1020	2507B	22		49-14-11	001-099
	H10		W1032	2507B	22		49-14-11	115-199
	H11		W1020	2507R	22		49-14-11	001-099
	H11		W1032	2507R	22		49-14-11	115-199
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04		W1020	0337	22		49-14-11	001-099
	J04		W1032	0337	22		49-14-11	115-199
	J05		W1020	0338	22		49-14-11	001-099
	J05		W1032	0338	22		49-14-11	115-199
	J06		W1020	0327	22		24-22-41	001-099
	J06		W1032	0370	22		24-22-41	115-199
	J07		W1020	0329	22		49-14-11	001-099
	J07		W1032	0329	22		49-14-11	115-199
	J08		W1020	0330	22		49-14-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D01700

Page 21

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01796B		E6-2/ /		PLUG (continued)				001-099
D01796B		E6-4/ /		PLUG (continued)				115-199
	J08		W1032	0330	22		49-14-11	115-199
	J09		W1020	FRAJ			49-14-11	001-099
	J09		W1032	FRAJ			49-14-11	115-199
	J10		W1020	0328	22		49-14-11	001-099
	J10		W1032	0328	22		49-14-11	115-199
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04		W1020	0042	24		49-71-11	001-099
	K04		W1032	2101B	24		49-71-11	115-199
	K05	UNUSED						001-099
	K05		W1032	2101R	24		49-71-11	115-199
	K06		W1020	0318	22		49-61-11	001-099
	K06		W1032	0318	22		49-61-11	115-199
	K07		W1020	0041	24		49-73-11	001-099
	K07		W1032	2102B	24		49-73-11	115-199
	K08	UNUSED						001-099
	K08		W1032	2102R	24		49-73-11	115-199
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
	CAP	Y	W1032	0336	22		SPARE	115-199
			W1020	2501Z			49-14-11	001-099
			W1020	2502Z			49-14-11	001-099
			W1020	2503Z			49-14-11	001-099
			W1020	2504Z			49-14-11	001-099
			W1020	2505Z			49-14-11	001-099
			W1020	2506Z			49-14-11	001-099
			W1020	2507Z			49-14-11	001-099
			W1020	2508Z			49-14-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D01700

Page 22

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01796B		E6-2/ /		PLUG (continued)				001-099
D01796B		E6-4/ /		PLUG (continued)				115-199
			W1020	2512Z			49-14-11	001-099
			W1020	2513Z			49-14-11	001-099
			W1020	4251Z			49-14-11	001-099
			W1020	4601Z			49-14-11	001-099
			W1020	4602Z			49-14-11	001-099
			W1020	4603Z			49-14-11	001-099
			W1020	FRAJ			49-14-11	001-099
			W1032	2501Z			49-14-11	115-199
			W1032	2502Z			49-14-11	115-199
			W1032	2503Z			49-14-11	115-199
			W1032	2504Z			49-14-11	115-199
			W1032	2505Z			49-14-11	115-199
			W1032	2506Z			49-14-11	115-199
			W1032	2507Z			49-14-11	115-199
			W1032	2508Z			49-14-11	115-199
			W1032	2512Z			49-14-11	115-199
			W1032	2513Z			49-14-11	115-199
			W1032	4251Z			49-14-11	115-199
			W1032	4601Z			49-14-11	115-199
			W1032	4602Z			49-14-11	115-199
			W1032	4603Z			49-14-11	115-199
			W1032	FRAJ			49-14-11	115-199
D01796C		E6-2/ /		PLUG				001-099
D01796C		E6-4/ /		PLUG				115-199
	1		W1020	0344	22		49-41-11	001-099
	1		W1032	0344	22		49-41-11	115-199
	2		W1020	0317	16		49-61-11	001-099
	2		W1032	0317	16		49-61-11	115-199
	3	UNUSED						ALL
	4		W1020	0339	22		49-14-11	001-099
	4		W1032	0339	22		49-14-11	115-199
	5	UNUSED						ALL
	6		W1020	0340	22		49-14-11	001-099
	6		W1032	0340	22		49-14-11	115-199
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W1020	0315	16		49-61-11	001-099
	9		W1032	0315	16		49-61-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D01700

Page 23

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01796C		E6-2/ /		PLUG (continued)				001-099
D01796C		E6-4/ /		PLUG (continued)				115-199
	10	UNUSED						ALL
	11		W1020	0316	16		49-61-11	001-099
	11		W1032	0316	16		49-61-11	115-199
	12	UNUSED						ALL
	13	UNUSED						ALL
	=C12	UNUSED						ALL
	=C13	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D01700
Page 24 End
Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01802		WS585/ /		PLUG				ALL
	1		W3406	3501B	20		27-58-11	ALL
	2		W3406	3501Y	20		27-58-11	ALL
	3		W3406	3501R	20		27-58-11	ALL
	4		W3406	0003	18		27-58-11	ALL
	5		W3406	0005	18		27-51-41	ALL
	6		W3406	2519R	20		27-51-41	ALL
	7		W3406	2519B	20		27-51-41	ALL
	8		W3406	4252R	20		27-51-41	ALL
	9		W3406	4252B	20		27-51-41	ALL
	10		W3406	4252Y	20		27-51-41	ALL
	11		W3406	4252G	20		27-51-41	ALL
	12		W3406	2511R	20		27-51-61	ALL
	13		W3406	2511B	20		27-51-61	ALL
	14		W3406	4251R	20		27-51-61	ALL
	15		W3406	4251B	20		27-51-61	ALL
	16		W3406	4251Y	20		27-51-61	ALL
	17		W3406	4251G	20		27-51-61	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
D01805		OSS818/ /		PLUG-				ALL
	1		W3426	2510R	20		27-51-41	ALL
	2		W3426	2510B	20		27-51-41	ALL
	3		W3426	4251R	20		27-51-41	ALL
	4		W3426	4251B	20		27-51-41	ALL
	5		W3426	4251Y	20		27-51-41	ALL
	6		W3426	4251G	20		27-51-41	ALL
	7		W3426	2511R	20		27-51-61	ALL
	8		W3426	2511B	20		27-51-61	ALL
	9		W3426	4252B	20		27-51-61	ALL
	10		W3426	4252R	20		27-51-61	ALL
	11		W3426	4252Y	20		27-51-61	ALL
	12		W3426	4252G	20		27-51-61	ALL
	13		W3426	0008	18		27-51-41	ALL
	14	UNUSED						ALL
D01806		1060/183/L020		PLUG				ALL
	1		W2410	2501R	20		27-51-11	ALL
	2		W2410	2501B	20		27-51-11	ALL
	3		W2410	4251R	20		27-51-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01800

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01806		1060/183/L020		PLUG (continued)				ALL
	4		W2410	4251B	20		27-51-11	ALL
	5		W2410	4251Y	20		27-51-11	ALL
	6		W2410	4251G	20		27-51-11	ALL
	7		W2410	0037	18		27-51-11	ALL
D01809		P37/ /		RELAY SOCKET (PLATE 'B')				001-099
	1		W1270	2510B	24		31-31-42	001-099
	2		W1270	2508R	24		31-31-42	001-099
	3		W1270	6421	22		31-31-42	001-099
	4		W1270	2509R	24		31-31-42	001-099
	5		W1270	2510R	24		31-31-42	001-099
	6		W1270	2508B	24		31-31-42	001-099
	7		W1270	6422	22		31-31-42	001-099
	8		W1270	2509B	24		31-31-42	001-099
			W1270	2508Z			31-31-42	001-099
			W1270	2509Z			31-31-42	001-099
			W1270	2510Z			31-31-42	001-099
			W1270	FRAA			31-31-42	001-099
D01810		P010-00/ /		RCPT				ALL
	1		W1115	2001R	22		27-51-41	ALL
	2		W1115	2001B	22		27-51-41	ALL
	3		W1115	4001R	22		27-51-41	ALL
	4		W1115	4001B	22		27-51-41	ALL
	5		W1115	4001Y	22		27-51-41	ALL
	6		W1115	4001G	22		27-51-41	ALL
	7		W1115	0430	20		27-51-41	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D01814		P37/ /		RELAY SOCKET (PLATE 'C')				ALL
	A1		W1270	0744	22		76-11-21	ALL
	A2		W1270	0743	22		76-11-21	ALL
	A3		W1270	0856	22		76-11-21	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D01800

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01814		P37/ /		RELAY SOCKET (PLATE 'C') (continued)				ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1270	0745	22		76-11-21	ALL
	X2		W1270	0746	20		76-11-21	ALL
D01816		P032-00/ /		PLUG				ALL
	1		W1138	0031	24		24-27-21	ALL
	2		W1138	0033	24		24-27-21	ALL
	3		W1138	0041	24		24-22-21	ALL
	4		W1138	0047	20		24-22-21	ALL
	5		W1138	0060	24		24-27-11	ALL
	6		W1138	0058	24		24-27-11	ALL
	7		W1138	0003	24		24-22-22	ALL
	8		W1138	0025	20		24-22-22	ALL
	9		W1138	0032	24		24-27-21	ALL
	10		W1138	0030	20		24-27-21	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W1138	0139	20		24-22-12	ALL
	14		W1138	0138	20		24-22-12	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W1138	0004	24		24-22-22	ALL
	18		W1138	0002	20		24-22-22	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W1138	0140	24		24-22-12	ALL
	22		W1138	0137	24		24-22-12	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W1138	0123	24		24-51-71	ALL
	26		W1138	0125	24		24-51-71	ALL
	27		W1138	0006	24		24-22-22	ALL
	28		W1138	0026	24		24-22-22	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D01800

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01816		P032-00/ /		PLUG (continued)				ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37		W1138	0046	20		24-22-21	ALL
	38	UNUSED						ALL
	39		W1138	0042	20		24-22-21	ALL
	40		W1138	0043	20		24-22-21	ALL
	41		W1138	0044	20		24-22-21	ALL
D01818		P032-00/ /		PLUG				ALL
	1		W1138	0034	24		24-27-21	ALL
	2		W1138	0036	20		24-27-21	ALL
	3		W1138	0022	24		24-22-22	ALL
	4		W1138	0029	20		24-22-22	ALL
	5		W1138	0145	24		24-51-71	ALL
	6		W1138	0126	24		24-51-71	ALL
	7		W1138	0021	24		24-22-22	ALL
	8		W1138	0028	20		24-22-22	ALL
	9		W1138	0129	24		24-27-21	ALL
	10		W1138	0130	20		24-27-21	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W1138	0035	24		24-27-21	ALL
	16		W1138	0037	24		24-27-21	ALL
	17		W1138	0065	22		29-11-31	ALL
	18		W1138	0066	22		29-11-31	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W1138	0057	24		24-27-11	ALL
	22		W1138	0061	24		24-27-11	ALL
	23		W1138	0058	24		24-27-11	ALL
	24		W1138	0062	24		24-27-11	ALL
	25		W1138	0027	24		24-22-22	ALL
	26		W1138	0136	24		24-51-31	ALL
	27		W1138	0142	24		24-22-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01800

Page 4

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01818		P032-00/ /		PLUG (continued)				ALL
	28		W1138	0141	24		24-22-12	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37		W1138	0015	20		24-22-22	ALL
	38	UNUSED						ALL
	39		W1138	0019	20		24-22-22	ALL
	40		W1138	0016	20		24-22-22	ALL
	41		W1138	0018	20		24-22-22	ALL
D01822		P54/ /		PLUG				ALL
	1		W1120	0023	24		26-11-11	001-099
	1		W1120	0007	24		26-11-11	115-199
	2		W1120	0026	24		26-11-11	001-099
	2		W1120	0012	24		26-11-11	115-199
	3		W1120	0021	24		26-11-11	001-099
	3		W1120	0006	24		26-11-11	115-199
	4		W1120	0475	22		26-11-11	001-099
	4		W1120	0013	24		26-11-11	115-199
	5		W1120	0035	24		26-11-11	ALL
	6	UNUSED						ALL
	7		W1120	0036	24		26-11-11	001-099
	7		W1120	0029	24		26-11-11	115-199
	8		W1120	0022	24		26-11-11	001-099
	8		W1120	0037	24		26-11-11	115-199
	9		W1120	0020	24		26-11-11	001-099
	9		W1120	0005	24		26-11-11	115-199
	10		W1120	0037	24		26-11-11	001-099
	10		W1120	0031	24		26-11-11	115-199
	11		W1120	0025	24		26-11-11	001-099
	11		W1120	0026	24		26-11-11	115-199
	12	UNUSED						ALL
	13		W1120	0024	24		26-11-11	001-099
	13		W1120	0017	24		26-11-11	115-199
	14		W1120	0033	22		26-11-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D01800

Page 5

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01822		P54/ /		PLUG (continued)				ALL
	14		W1120	0015	22		26-11-11	115-199
	15		W1120	0041	24		26-11-11	001-099
	15		W1120	0019	24		26-11-11	115-199
	16		W1120	0030	22		26-11-11	001-099
	16		W1120	0009	24		26-11-11	115-199
	17		W1120	0027	22		26-11-11	001-099
	17		W1120	0018	22		26-11-11	115-199
	18		W1120	0069	22		26-11-12	001-099
	18		W1120	0050	22		26-11-12	115-199
	19		W1120	0077	24		26-11-12	001-099
	19		W1120	0041	24		26-11-12	115-199
	20		W1120	0065	22		26-11-12	001-099
	20		W1120	0305	22		26-11-12	115-199
	21		W1120	0066	22		26-11-12	001-099
	21		W1120	0306	22		26-11-12	115-199
	22		W1120	0073	24		26-11-12	001-099
	22		W1120	0059	24		26-11-12	115-199
	23		W1120	0072	24		26-11-12	001-099
	23		W1120	0049	24		26-11-12	115-199
	24	UNUSED						ALL
	25		W1120	0067	22		26-11-12	001-099
	25		W1120	0218	22		26-11-12	115-199
	26	UNUSED						ALL
	27		W1120	0061	24		26-11-12	001-099
	27		W1120	0051	24		26-11-12	115-199
	28		W1120	0075	24		26-11-12	001-099
	28		W1120	0044	24		26-11-12	115-199
	29		W1120	0058	24		26-11-12	001-099
	29		W1120	0054	24		26-11-12	115-199
	30		W1120	0059	24		26-11-12	001-099
	30		W1120	0053	24		26-11-12	115-199
	31	UNUSED						ALL
	32		W1120	0070	22		26-11-12	001-099
	32		W1120	0057	22		26-11-12	115-199
	33		W1120	0074	24		26-11-12	001-099
	33		W1120	0046	24		26-11-12	115-199
	34		W1120	0062	24		26-11-12	001-099
	34		W1120	0048	24		26-11-12	115-199
	35		W1120	PE01			26-11-11	ALL
	36		W1120	0031	24		26-11-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D01800

Page 6

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01822		P54/ /		PLUG (continued)				ALL
	36		W1120	0033	24		26-11-11	115-199
	37	UNUSED						ALL
	38	UNUSED						ALL
	39		W1120	0039	24		26-11-11	001-099
	39		W1120	0021	24		26-11-11	115-199
	40	UNUSED						ALL
	41	UNUSED						ALL
	42		W1120	0024	24		26-11-11	001-099
	42		W1120	0017	24		26-11-11	115-199
	43	UNUSED						ALL
	44		W1120	0019	24		26-11-11	001-099
	44		W1120	0004	24		26-11-11	115-199
	45		W1120	0038	24		26-11-11	001-099
	45		W1120	0022	24		26-11-11	115-199
	46		W1120	0032	22		26-11-11	001-099
	46		W1120	0014	22		26-11-11	115-199
	47		W1120	0476	24		26-11-11	001-099
	47		W1120	0039	24		26-11-11	115-199
	48		W1120	0018	24		26-11-11	001-099
	48		W1120	0003	24		26-11-11	115-199
	49		W1120	0029	22		26-11-11	001-099
	49		W1120	0008	24		26-11-11	115-199
	50		W1120	0028	22		26-11-11	001-099
	50		W1120	0010	22		26-11-11	115-199
	51		W1120	0068	22		26-11-12	001-099
	51		W1120	0055	22		26-11-12	115-199
	52		W1120	0060	24		26-11-12	001-099
	52		W1120	0052	24		26-11-12	115-199
	53		W1120	0064	24		26-11-12	001-099
	53		W1120	0217	24		26-11-12	115-199
	54		W1120	0076	24		26-11-12	001-099
	54		W1120	0042	24		26-11-12	115-199
	55		W1120	0040	24		26-11-11	001-099
	55		W1120	0020	24		26-11-11	115-199
	56	UNUSED						ALL
	57	UNUSED						ALL
	58	UNUSED						ALL
	59	UNUSED						ALL
	60		W1120	0064	24		26-11-12	001-099
	60		W1120	0217	24		26-11-12	115-199

HOOKUP LIST

D280N032

91-21-51

Section D01800

Page 7

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01822		P54/ /		PLUG (continued)				ALL
	61	UNUSED						ALL
	62		W1120	0063	24		26-11-12	001-099
	62		W1120	0303	24		26-11-12	115-199
	63		W1120	0071	24		26-11-12	001-099
	63		W1120	0045	24		26-11-12	115-199
	64	UNUSED						ALL
	65		W1120	0078	24		26-11-12	001-099
	65		W1120	0043	24		26-11-12	115-199
	66		W1120	PE01			26-11-11	ALL
D01823		P008-1/ /		PLUG				001-099
	A		W2067	0001	22		31-31-02	001-099
	B		W2067	0002	20		31-31-02	001-099
	C	UNUSED						001-099
	D	UNUSED						001-099
	E	UNUSED						001-099
	F	UNUSED						001-099
	G	UNUSED						001-099
	H	UNUSED						001-099
	J	UNUSED						001-099
	K	UNUSED						001-099
	L	UNUSED						001-099
	M	UNUSED						001-099
	N	UNUSED						001-099
	P	UNUSED						001-099
	R	UNUSED						001-099
	S	UNUSED						001-099
	T	UNUSED						001-099
	U	UNUSED						001-099
	V	UNUSED						001-099
	W	UNUSED						001-099
	X	UNUSED						001-099
	Y	UNUSED						001-099
	Z	UNUSED						001-099
			W2067	0003	20		31-31-02	001-099
			W2067	0004	20		31-31-02	001-099
			W2067	2501Z			31-31-02	001-099
			W2067	2502Z			31-31-02	001-099
	A-		W2067	2501R	24		31-31-02	001-099
	B-		W2067	2501B	24		31-31-02	001-099

HOOKUP LIST

D280N032

91-21-51

Section D01800

Page 8

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01823		P008-1/ /		PLUG (continued)				001-099
	C-		W2067	2502R	24		31-31-02	001-099
	D-		W2067	2502B	24		31-31-02	001-099
	E-	UNUSED						001-099
	F-	UNUSED						001-099
	G-	UNUSED						001-099
	H-	UNUSED						001-099
	I-	UNUSED						001-099
	J-	UNUSED						001-099
	K-	UNUSED						001-099
	M-	UNUSED						001-099
	N-	UNUSED						001-099
	P-	UNUSED						001-099
	Q-	UNUSED						001-099
	R-	UNUSED						001-099
	S-	UNUSED						001-099
	T-	UNUSED						001-099
D01824		297/220/R5		RCPT				001-099
D01824		P1-3/ /		RCPT				115-199
	1		W0003	0211	22		30-43-11	ALL
	2		W0003	0213	20		30-43-11	ALL
	3		W0003	0212	20		30-43-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D01825		215/190/L19		RCPT-ALT STAB TRIM				ALL
	1		W2613	2503R	20		SPARE	ALL
	2		W2613	2503B	20		SPARE	ALL
	3		W2613	0001Y	20		27-41-31	ALL
	4		W2613	2502B	20		27-41-31	ALL
	5	UNUSED						ALL
	6		W2613	2501B	20		27-41-31	ALL
	7		W2613	2501R	20		27-41-31	ALL
	8	UNUSED						ALL
	9		W2613	0003Y	20		27-41-31	ALL
	10	UNUSED						ALL
	11		W2613	0002Y	20		27-41-31	ALL
	12		W2613	2502R	20		27-41-31	ALL
	DED		W2613	2501Z			27-41-31	ALL
	DED		W2613	2502Z			27-41-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01800

Page 9

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01825		215/190/L19		RCPT-ALT STAB TRIM (continued)				ALL
	DED		W2613	2503Z			SPARE	ALL
D01826		205.37/221/R3.2		PLUG				ALL
	1		W0003	0077	16		30-42-11	ALL
	2		W0003	0078	18		30-42-11	ALL
	3		W0003	0076	18		30-42-11	ALL
	4	UNUSED						ALL
	5		W0003	0191	18		30-42-11	ALL
	6		W0003	0194	16		30-42-11	ALL
	7	UNUSED						ALL
D01827		P10/190/L19		RCPT-ALT STAB TRIM				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W2615	2503R	20		SPARE	ALL
	4		W2615	2502B	20		27-41-31	ALL
	5		W2615	2503B	20		SPARE	ALL
	6		W2615	2501B	20		27-41-31	ALL
	7		W2615	2501R	20		27-41-31	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W2615	0004Y	20		27-41-31	ALL
	11	UNUSED						ALL
	12		W2615	2502R	20		27-41-31	ALL
	DED		W2615	2501Z			27-41-31	ALL
	DED		W2615	2502Z			27-41-31	ALL
	DED		W2615	2503Z			SPARE	ALL
D01828		1040/183/R011		PLUG				ALL
	1	UNUSED						ALL
	2	18	W2510	0048	18		28-42-11	ALL
	3	18	W2510	1001	18		28-42-11	ALL
	4	18	W2510	0014	18		28-42-11	ALL
	5	UNUSED						ALL
D01829		1725/185/L17		PLUG-				ALL
	1		W2803	0005Y	20		27-41-11	ALL
	2		W2803	0004Y	20		27-41-11	ALL
	3		W2803	0024Y	18		27-41-31	ALL
	4		W2803	0026Y	20		27-41-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01800

Page 10

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01829		1725/185/L17		PLUG- (continued)				ALL
	5		W2803	0006Y	20		27-41-11	ALL
	6		W2803	0007Y	20		27-41-11	ALL
	7		W2803	0025Y	18		27-41-31	ALL
	8		W2803	0027Y	20		27-41-31	ALL
	9	UNUSED						ALL
	10		W2803	0023	20		27-41-11	ALL
D01830		ISS175/ /		PLUG				ALL
	1	UNUSED						ALL
	2	18	W3400	0036	18		28-42-11	ALL
	3		W3400	0035	20		28-42-11	ALL
	4	18	W3400	0037	18		28-42-11	ALL
	5	UNUSED						ALL
D01831		1729/187/L22		PLUG-				ALL
	1		W2805	0001Y	20		27-41-11	ALL
	2		W2805	0004Y	20		27-41-11	ALL
	3		W2805	0010Y	18		27-41-31	ALL
	4		W2805	2501B	20		27-41-31	ALL
	5		W2805	0002Y	20		27-41-11	ALL
	6		W2805	0003Y	20		27-41-11	ALL
	7		W2805	0011Y	18		27-41-31	ALL
	8		W2805	2501R	20		27-41-31	ALL
	9	UNUSED						ALL
	10		W2805	0009	20		27-41-11	ALL
	CAP	Y	W2805	0007Y	20		27-41-11	ALL
	CAP	Y	W2805	0008	20		27-41-11	ALL
	DED		W2805	2501Z			27-41-31	ALL
D01832		IRSS182/ /		PLUG				ALL
	1	UNUSED						ALL
	2	18	W3406	0006	18		28-42-11	ALL
	3	18	W3406	1019	18		28-42-11	ALL
	4	18	W3406	0021	18		28-42-11	ALL
	5	UNUSED						ALL
D01833		1729/188/R19		PLUG-				ALL
	1		W2813	0005Y	20		27-41-21	ALL
	2		W2813	0004Y	20		27-41-21	ALL
	3		W2813	0024Y	18		27-41-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01800

Page 11

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01833		1729/188/R19		PLUG- (continued)				ALL
	4		W2813	0027Y	20		27-41-31	ALL
	5		W2813	0006Y	20		27-41-21	ALL
	6		W2813	0007Y	20		27-41-21	ALL
	7		W2813	0025Y	18		27-41-31	ALL
	8		W2813	0026Y	20		27-41-31	ALL
	9	UNUSED						ALL
	10		W2813	0023	20		27-41-21	ALL
D01834		ISS173/ /		RCPT-				ALL
	1		W3446	3001R	18		28-22-11	ALL
	2		W3446	3001Y	18		28-22-11	ALL
	3		W3446	3001B	18		28-22-11	ALL
	4		W3446	0002	18		28-22-11	ALL
D01835		1729/188/R14		PLUG-				ALL
	1		W2815	0001Y	20		27-41-21	ALL
	2		W2815	0004Y	20		27-41-21	ALL
	3		W2815	0010Y	18		27-41-31	ALL
	4		W2815	2501B	20		27-41-31	ALL
	5		W2815	0002Y	20		27-41-21	ALL
	6		W2815	0003Y	20		27-41-21	ALL
	7		W2815	0011Y	18		27-41-31	ALL
	8		W2815	2501R	20		27-41-31	ALL
	9	UNUSED						ALL
	10		W2815	0009	20		27-41-21	ALL
	CAP	Y	W2815	0007Y	20		27-41-21	ALL
	CAP	Y	W2815	0008	20		27-41-21	ALL
	DED		W2815	2501Z			27-41-31	ALL
D01836		IRSS182/ /		PLUG				ALL
	1		W3406	3001R	18		28-22-11	ALL
	2		W3406	3001Y	18		28-22-11	ALL
	3		W3406	3001B	18		28-22-11	ALL
	4		W3406	0009	18		28-22-11	ALL
D01837		1776/190/L20		PLUG-				ALL
	1		W2803	0016	20		27-48-11	ALL
	2		W2803	3001R	20		27-48-21	ALL
	3		W2803	3001B	20		27-48-21	ALL
	4		W2803	3001Y	20		27-48-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01800

Page 12

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01837		1776/190/L20		PLUG- (continued)				ALL
	5		W2803	0015	20		27-48-11	ALL
	6		W2803	2001B	20		27-48-21	ALL
	7		W2803	2001R	20		27-48-21	ALL
	8		W2803	0018	20		27-48-11	ALL
	9		W2803	0017	20		27-48-11	ALL
	10		W2803	0014	20		27-48-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W2803	0008Y	20		27-41-11	ALL
	19		W2803	0011Y	20		27-41-11	ALL
	20		W2803	0010Y	20		27-41-11	ALL
	21		W2803	0004Y	20		27-41-11	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W2803	0007Y	20		27-41-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W2803	0013	20		27-48-21	ALL
D01838		1040/175/R012		PLUG				ALL
	1		W2510	3501R	16		28-22-11	ALL
	2		W2510	3501Y	16		28-22-11	ALL
	3		W2510	3501B	16		28-22-11	ALL
	4		W2510	0011	16		28-22-11	ALL
D01841		1776/200/R011		PLUG-				ALL
	1	UNUSED						ALL
	2		W2821	3004R	20		27-48-21	ALL
	3		W2821	3004B	20		27-48-21	ALL
	4		W2821	3004Y	20		27-48-21	ALL
	5	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D01800

Page 13

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01841		1776/200/R011		PLUG- (continued)				ALL
	6		W2821	2007B	20		27-48-21	ALL
	7		W2821	2007R	20		27-48-21	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W2821	0029	20		31-51-41	ALL
	23		W2821	0030	20		31-51-41	ALL
	24	UNUSED						ALL
	25		W2821	0007Y	20		27-41-31	ALL
	26		W2821	2501R	20		27-41-31	ALL
	27		W2821	0008Y	20		27-41-31	ALL
	28		W2821	2501B	20		27-41-31	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W2821	0006	20		27-48-21	ALL
	DED		W2821	2501Z			27-41-31	ALL
D01843		1780/198/R16		PLUG-				ALL
	1		W2813	0016	20		27-48-11	ALL
	2		W2813	3001R	20		27-48-21	ALL
	3		W2813	3001B	20		27-48-21	ALL
	4		W2813	3001Y	20		27-48-21	ALL
	5		W2813	0015	20		27-48-11	ALL
	6		W2813	2001B	20		27-48-21	ALL
	7		W2813	2001R	20		27-48-21	ALL
	8		W2813	0018	20		27-48-11	ALL
	9		W2813	0017	20		27-48-11	ALL
	10		W2813	0014	20		27-48-11	ALL
	11	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D01800

Page 14

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01843		1780/198/R16		PLUG- (continued)				ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W2813	0010Y	20		27-41-21	ALL
	19		W2813	0011Y	20		27-41-21	ALL
	20		W2813	0008Y	20		27-41-21	ALL
	21		W2813	0004Y	20		27-41-21	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W2813	0007Y	20		27-41-21	ALL
	25		W2813	0026Y	20		27-41-31	ALL
	26		W2813	2501R	20		27-41-31	ALL
	27		W2813	0027Y	20		27-41-31	ALL
	28		W2813	2501B	20		27-41-31	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W2813	0013	20		27-48-21	ALL
	DED		W2813	2501Z			27-41-31	ALL
D01845		1726/184/R24		PLUG-				ALL
	1		W2815	0005	20		27-41-21	ALL
	2		W2815	0006	20		27-41-21	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D01846		PPS241/147/L6		PLUG				ALL
	A		W5200	0043	20		29-11-21	ALL
	B		W5200	0044	20		29-11-21	ALL
	C	UNUSED						ALL
	D	UNUSED						ALL
	E		W5200	0046	18		29-11-21	ALL
D01847		1723/185/R28		PLUG-				ALL
	1		W2813	0001Y	20		27-41-21	ALL
	2		W2813	0003Y	20		27-41-21	ALL
	3		W2813	0002Y	20		27-41-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01800

Page 15

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01847		1723/185/R28		PLUG- (continued)				ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W2813	0022	20		27-41-21	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D01849		1726/184/L12		PLUG-				ALL
	1		W2805	0005	20		27-41-11	ALL
	2		W2805	0006	20		27-41-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D01850A		E5-1/ /		PLUG				001-099
D01850A		E5-3/ /		PLUG				115-199
	A01		W1282	0045	22		24-22-22	001-099
	A01		W1286	0144	22		24-22-22	115-199
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05		W1282	0260	24		24-22-41	001-003
	A05	UNUSED						004-099
	A05		W1286	0141	24		24-22-41	115-199
	A06		W1282	0263	22		24-22-41	001-099
	A06		W1286	0143	22		24-22-41	115-199
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10		W1282	0051	24		24-28-21	001-099
	A10		W1286	0043	24		24-28-21	115-199
	A11		W1282	0270	22		24-22-41	001-099
	A11		W1286	0402	22		24-22-41	115-199
	A12		W1282	5012R	24		24-41-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D01800

Page 16

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01850A		E5-1/ /		PLUG (continued)				001-099
D01850A		E5-3/ /		PLUG (continued)				115-199
	A12		W1286	5011R	24		24-41-11	115-199
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01		W1282	0266	22		24-22-41	001-099
	B01		W1286	0147	22		24-22-41	115-199
	B02		W1282	0050	24		24-28-21	001-099
	B02		W1286	0042	24		24-28-21	115-199
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05		W1282	0259	24		24-22-41	001-099
	B05		W1286	0140	24		24-22-41	115-199
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11		W1282	5012Z			24-41-11	001-099
	B11		W1286	5011Z			24-41-11	115-199
	B12		W1282	5012B	24		24-41-11	001-099
	B12		W1286	5011B	24		24-41-11	115-199
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01		W1282	0267	22		24-22-41	001-099
	C01		W1286	0148	22		24-22-41	115-199
	C02		W1282	0264	24		24-22-41	001-099
	C02		W1286	0145	24		24-22-41	115-199
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05		W1282	0265	22		24-22-41	001-099
	C05		W1286	0146	22		24-22-41	115-199
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D01800

Page 17

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01850A		E5-1/ /		PLUG (continued)				001-099
D01850A		E5-3/ /		PLUG (continued)				115-199
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15		W1282	0269	22		24-22-41	001-099
	C15		W1286	0150	22		24-22-41	115-199
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04		W1282	0261	24		24-22-41	001-003
	D04	UNUSED						004-099
	D04		W1286	0142	24		24-22-41	115-199
	D05	UNUSED						ALL
	D06		W1282	0268	24		24-22-41	001-099
	D06		W1286	0149	24		24-22-41	115-199
	D07		W1282	0053	24		24-41-11	001-099
	D07		W1286	0155	24		24-41-11	115-199
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
D01850B		E5-1/ /		PLUG				001-099
D01850B		E5-3/ /		PLUG				115-199
	A01		W1282	2506R	22		24-21-41	001-099
	A01		W1286	2506R	22		24-21-41	115-199
	A02	UNUSED						ALL
	A03		W1282	0257	22		24-22-41	001-099
	A03		W1286	0138	22		24-22-41	115-199
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08		W1282	0271	22		24-22-41	001-099
	A08		W1286	0211	22		24-22-41	115-199
	A09	UNUSED						ALL
	A10	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D01800

Page 18

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01850B		E5-1/ /		PLUG (continued)				001-099
D01850B		E5-3/ /		PLUG (continued)				115-199
	A11	UNUSED						ALL
	A12		W1282	4004R	24		24-23-11	001-099
	A12		W1286	4004R	24		24-23-11	115-199
	A13		W1282	4002R	24		24-21-41	001-099
	A13		W1286	4002R	24		24-21-41	115-199
	A14	UNUSED						ALL
	A15		W1282	0046	22		24-21-41	001-099
	A15		W1286	0080	22		24-21-41	115-199
	B01		W1282	2506B	22		24-21-41	001-099
	B01		W1286	2506B	22		24-21-41	115-199
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12		W1282	4004Y	24		24-23-11	001-099
	B12		W1286	4004Y	24		24-23-11	115-199
	B13		W1282	4002B	24		24-21-41	001-099
	B13		W1286	4002B	24		24-21-41	115-199
	B14	UNUSED						ALL
	B15		W1282	0047	22		24-21-41	001-099
	B15		W1286	0081	22		24-21-41	115-199
	C01		W1282	2506Z			24-21-41	001-099
	C01		W1286	2506Z			24-21-41	115-199
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D01800

Page 19

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01850B		E5-1/ /		PLUG (continued)				001-099
D01850B		E5-3/ /		PLUG (continued)				115-199
	C12		W1282	4004B	24		24-23-11	001-099
	C12		W1286	4004B	24		24-23-11	115-199
	C13		W1282	4002Y	24		24-21-41	001-099
	C13		W1286	4002Y	24		24-21-41	115-199
	C14	UNUSED						ALL
	C15		W1282	0048	22		24-21-41	001-099
	C15		W1286	0082	22		24-21-41	115-199
	D01	UNUSED						ALL
	D02		W1282	0258	22		24-22-41	001-099
	D02		W1286	0139	22		24-22-41	115-199
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12		W1282	4004G	24		24-23-11	001-099
	D12		W1286	4004G	24		24-23-11	115-199
	D13		W1282	4002G	24		24-21-41	001-099
	D13		W1286	4002G	24		24-21-41	115-199
	D14	UNUSED						ALL
	D15		W1282	0272	22		24-22-41	001-099
	D15		W1286	0266	22		24-22-41	115-199
D01850C		E5-1/ /		PLUG				001-099
D01850C		E5-3/ /		PLUG				115-199
	1	UNUSED						ALL
	2		W1282	3003R	20		24-21-41	001-099
	2		W1286	3003R	20		24-21-41	115-199
	3		W1282	3003B	20		24-21-41	001-099
	3		W1286	3003B	20		24-21-41	115-199
	4		W1282	3003Y	20		24-21-41	001-099
	4		W1286	3003Y	20		24-21-41	115-199
	5	UNUSED						ALL
	= C1	UNUSED						ALL
	= C5	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D01800

Page 20

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01851		1725/175/L20		PLUG-				ALL
	1		W2803	0001Y	20		27-41-11	ALL
	2		W2803	0003Y	20		27-41-11	ALL
	3		W2803	0002Y	20		27-41-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W2803	0022	20		27-41-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D01852		P034-00/ /		PLUG				ALL
	1		W1128	4004B	24		24-41-11	ALL
	2		W1128	4004Y	24		24-41-11	ALL
	3		W1128	4004R	24		24-41-11	ALL
	4		W1128	4004G	24		24-41-11	ALL
	5	UNUSED						ALL
D01853		395/295/R005		PLUG				001-099
	1		W2843	0006	20		23-32-01	001-099
	2		W2843	0007	20		23-32-01	001-099
	3		W2843	0008	20		23-32-01	001-099
	4		W2843	0010	20		23-32-01	001-099
	5		W2843	0009	20		23-32-01	001-099
	6		W2843	0003	22		23-32-01	001-099
	7		W2843	0005	22		23-32-01	001-099
	8		W2843	0004	22		23-32-01	001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
D01854		255/150/R40		PLUG				ALL
	1	UNUSED						ALL
	2		W2034	0018	20		24-31-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01800

Page 21

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01854		255/150/R40		PLUG (continued)				ALL
	3	UNUSED						ALL
	4		W2034	0014	22		24-34-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W2034	0015	22		24-31-11	ALL
	8	UNUSED						ALL
	9		W2034	0017	22		24-34-11	ALL
	10	UNUSED						ALL
	11		W2034	0016	22		24-34-11	ALL
	12	UNUSED						ALL
D01856		P006-00/ /		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0072	0004	22		24-34-11	ALL
	5		W0074	0015	20		24-34-11	ALL
	6		W0070	0006	22		24-34-11	ALL
	7		W0074	0016	20		24-34-11	ALL
	8		W0074	0011	22		24-51-72	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0074	0031	22		24-34-11	ALL
	12	UNUSED						ALL
D01857		954/295/R0R5		PLUG				001-099
	1		W2867	0001	22		23-32-01	001-099
	2		W2867	0002	22		23-32-01	001-099
	3		W2867	0003	22		23-32-01	001-099
	4		W2867	0004	22		23-32-01	001-099
	5		W2867	0005	22		23-32-01	001-099
	6		W2867	0006	22		23-32-01	001-099
	7		W2867	0007	22		23-32-01	001-099
	8		W2867	0008	22		23-32-01	001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D01800

Page 22

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01859		1100/295/R005		PLUG				001-099
	1		W2853	0001	22		23-32-01	001-099
	2		W2853	0002	22		23-32-01	001-099
	3		W2853	0003	22		23-32-01	001-099
	4		W2853	0004	22		23-32-01	001-099
	5		W2853	0005	22		23-32-01	001-099
	6		W2853	0006	22		23-32-01	001-099
	7		W2853	0007	22		23-32-01	001-099
	8		W2853	0008	22		23-32-01	001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
D01860		E001-01/ /		PLUG				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W2244	2002R	24		24-34-11	001-099
	3		W2244	2002R	22		24-34-11	115-199
	4		W2244	2002B	24		24-34-11	001-099
	4		W2244	2002B	22		24-34-11	115-199
	5		W2244	0015	16		24-32-11	ALL
	6		W2244	0018	14		24-32-11	ALL
	7		W2244	0017	14		24-32-11	ALL
	8		W2244	0016	14		24-32-11	ALL
D01861		1310/ /		PLUG				001-099
	1		W2883	0001	22		23-32-01	001-099
	2		W2883	0002	22		23-32-01	001-099
	3		W2883	0003	22		23-32-01	001-099
	4		W2883	0004	22		23-32-01	001-099
	5		W2883	0005	22		23-32-01	001-099
	6		W2883	0006	22		23-32-01	001-099
	7		W2883	0007	22		23-32-01	001-099
	8		W2883	0008	22		23-32-01	001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D01800

Page 23

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01863		657/ /		PLUG				001-099
	1		W2865	0001	22		23-32-01	001-099
	2		W2865	0002	22		23-32-01	001-099
	3		W2865	0003	22		23-32-01	001-099
	4		W2865	0004	22		23-32-01	001-099
	5		W2865	0005	22		23-32-01	001-099
	6		W2865	0006	22		23-32-01	001-099
	7		W2865	0007	22		23-32-01	001-099
	8		W2865	0008	22		23-32-01	001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
D01864		P37/ /		RELAY SOCKET (PLATE 'A')				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1270	6132	24		36-11-41	ALL
	4	UNUSED						ALL
	5		W1270	6130	24		36-11-41	ALL
	6		W1270	5855	22		32-09-12	ALL
	7		W1270	6547	20		78-34-61	ALL
	8		W1270	1113	20		78-34-61	ALL
	9	UNUSED						001, 003-099, 115-199
	9		W1270	8003	22		34-43-14	002
	10	UNUSED						ALL
	11	UNUSED						001, 003-099, 115-199
	11		W1270	8004	22		34-43-14	002
	12		W1270	5854	22		32-09-12	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	DED		W1270	1113Z			78-34-61	ALL
D01865		799/ /		PLUG				001-099
	1		W2885	0001	22		23-32-01	001-099
	2		W2885	0002	22		23-32-01	001-099
	3		W2885	0003	22		23-32-01	001-099
	4		W2885	0004	22		23-32-01	001-099
	5		W2885	0005	22		23-32-01	001-099
	6		W2885	0006	22		23-32-01	001-099

HOOKUP LIST

D280N032

91-21-51

Section D01800

Page 24

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01865		799/ /		PLUG (continued)				001-099
	7		W2885	0007	22		23-32-01	001-099
	8		W2885	0008	22		23-32-01	001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
D01866		P37/ /		RELAY SOCKET (PLATE 'A')				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1270	5851	22		32-09-12	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W1270	5850	22		32-09-12	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D01868		P37/ /		RELAY SOCKET (PLATE 'A')				ALL
	1		W1270	5979	24		21-51-23	ALL
	2		W1270	5978	24		21-51-23	ALL
	3		W1270	5923	24		34-46-12	ALL
	4	UNUSED						ALL
	5		W1270	5924	24		34-46-12	ALL
	6		W1270	5866	22		32-09-12	ALL
	7		W1270	5820	22		31-31-61	001-099
	7		W1270	5820	22		31-31-13	115-199
	8		W1270	5814	22		31-31-61	001-099
	8		W1270	5814	22		31-31-13	115-199
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W1270	5867	22		32-09-12	ALL
	13	UNUSED						ALL
	14		W1270	5939	22		31-31-61	001-099

HOOKUP LIST

D280N032

91-21-51

Section D01800

Page 25

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01868		P37/ /		RELAY SOCKET (PLATE 'A') (continued)				ALL
	14		W1270	5939	22		31-31-13	115-199
D01869		1460/296/R015		PLUG				001-099
	1		W2857	0001	22		23-32-01	001-099
	2		W2857	0002	22		23-32-01	001-099
	3		W2857	0003	22		23-32-01	001-099
	4		W2857	0004	22		23-32-01	001-099
	5		W2857	0005	22		23-32-01	001-099
	6		W2857	0006	22		23-32-01	001-099
	7		W2857	0007	22		23-32-01	001-099
	8		W2857	0008	22		23-32-01	001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
D01870		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D01870		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1270	5994	24		26-15-12	ALL
	4	UNUSED						ALL
	5		W1270	5993	22		26-15-12	ALL
	6		W1270	5868	22		32-09-12	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W1270	6565	24		78-36-21	ALL
	10		W1270	6566	24		78-36-21	ALL
	11		W1270	6567	24		78-36-21	ALL
	12		W1270	5869	22		32-09-12	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D01872		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D01872		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	1		W1270	5707	24		27-32-21	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D01800

Page 26

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01872		P037-00/ /		RELAY SOCKET (PLATE 'A') (continued)				001-099
D01872		P37/ /		RELAY SOCKET (PLATE 'A') (continued)				115-199
	6		W1270	5848	22		32-09-12	ALL
	7		W1270	6338	24		31-31-62	001-099
	7	UNUSED						115-199
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1270	5702	22		27-09-12	ALL
	11		W1270	5701	22		27-09-12	ALL
	12		W1270	5849	22		32-09-12	ALL
	13		W1270	5706	24		27-32-21	ALL
	14		W1270	6339	24		31-31-62	001-099
	14	UNUSED						115-199
D01874		1050/176/L017		PLUG				ALL
	1		W2414	2507B	20		27-11-11	ALL
	2	UNUSED						ALL
	3		W2414	0042	20		27-11-11	ALL
	4	UNUSED						ALL
	5		W2414	2507R	20		27-11-11	ALL
D01876		P008-00/ /		RCPT				001-099
D01876		P8/ /		RCPT				115-199
	1		W2066	0180	20		33-13-52	ALL
	2		W2066	0181	20		33-13-52	ALL
	3		W2066	0087	22		27-28-13	ALL
	4		W2066	0172	22		27-28-13	ALL
	5	UNUSED						ALL
	6		W2066	0173	22		27-28-13	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W2066	2002B	24		27-28-13	001-099
	9		W2066	2002B	22		27-28-13	115-199
	10		W2066	2002R	24		27-28-13	001-099
	10		W2066	2002R	22		27-28-13	115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
D01878		P6/ /		RELAY SOCKET-				ALL
	A1	UNUSED						ALL
	A2		W0060	0002	12		24-33-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01800

Page 27

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01878		P6/ /		RELAY SOCKET- (continued)				ALL
	A3		W0060	0003	12		24-33-11	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2		W0074	0001	18		24-33-11	ALL
	C3		W0068	0005	16		24-33-11	ALL
	X1		W0060	0006	22		24-33-11	ALL
	X2		W0074	0303	22		24-33-11	ALL
D01886		E6 RLY/PNL/		RELAY SOCKET				ALL
	A1	UNUSED						ALL
	A2		W1024	0246	18		24-31-41	ALL
	A3		W1024	0253	18		24-31-41	ALL
	B1	UNUSED						ALL
	B2		W1024	0247	18		24-31-41	ALL
	B3		W1024	0252	18		24-31-41	ALL
	C1	UNUSED						ALL
	C2		W1024	0248	18		24-31-41	ALL
	C3		W1024	0251	18		24-31-41	ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1024	0250	24		24-31-41	ALL
	X2		W1024	0249	24		24-31-41	ALL
D01888		E006-02/ /		PLUG-				001-099
D01888		E6/ /		PLUG				115-199
	1		W1026	0110	24		24-31-41	ALL
	2		W1026	0114	20		24-31-41	ALL
	3		W1026	0111	24		24-31-41	ALL
	4		W1026	0108	18		24-31-41	ALL
	5		W1026	0109	24		24-31-41	ALL
	6		W1026	0109	24		24-31-41	ALL
	7		W1026	0107	18		24-31-41	ALL
	8		W1026	0032	22		24-33-12	001-099
	8		W1026	0121	20		24-31-41	115-199
	9		W1026	0031	22		24-33-12	001-099
	9	UNUSED						115-199
	10		W1026	0106	18		24-31-41	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01800

Page 28

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01888		E006-02/ /		PLUG- (continued)				001-099
D01888		E6/ /		PLUG (continued)				115-199
	11		W1026	0112	24		24-31-41	001-009, 115-199
	11		W1026	2502B	24		24-31-41	010-099
	12		W1026	0113	24		24-31-41	001-009, 115-199
	12		W1026	2502R	24		24-31-41	010-099
			W1026	0100	22		24-31-41	010-099
			W1026	2502Z			24-31-41	010-099
D01890		E006-00/ /		PLUG-				001-099
D01890		E6/ /		PLUG-				115-199
	1		W1026	0110	24		24-31-41	ALL
	2	UNUSED						ALL
	3		W1026	0111	24		24-31-41	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W1026	0115	24		24-31-41	ALL
	9		W1026	0116	20		24-31-41	ALL
	10	UNUSED						ALL
	11		W1026	0112	24		24-31-41	001-009, 115-199
	11		W1026	2502B	24		24-31-41	010-099
	12		W1026	0113	24		24-31-41	001-009, 115-199
	12		W1026	2502R	24		24-31-41	010-099
			W1026	0101	22		24-31-41	010-099
			W1026	2502Z			24-31-41	010-099
D01891		453/ /		PLUG				001-099
	A	UNUSED						001-099
	B	UNUSED						001-099
	C	UNUSED						001-099
	D	UNUSED						001-099
	E		W2885	0007	22		23-32-01	001-099
	F		W2885	0008	22		23-32-01	001-099
	G	UNUSED						001-099
	H		W2885	0006	22		23-32-01	001-099
	J		W2885	0005	22		23-32-01	001-099
	K		W2885	0001	22		23-32-01	001-099
	L		W2885	0004	22		23-32-01	001-099
	M		W2885	0002	22		23-32-01	001-099

HOOKUP LIST

D280N032

91-21-51

Section D01800

Page 29

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01893		1290/296/L015		PLUG				001-099
	A	UNUSED						001-099
	B	UNUSED						001-099
	C	UNUSED						001-099
	D	UNUSED						001-099
	E		W2883	0007	22		23-32-01	001-099
	F		W2883	0008	22		23-32-01	001-099
	G	UNUSED						001-099
	H		W2883	0006	22		23-32-01	001-099
	J		W2883	0005	22		23-32-01	001-099
	K		W2883	0001	22		23-32-01	001-099
	L		W2883	0004	22		23-32-01	001-099
	M		W2883	0002	22		23-32-01	001-099
D01896		E6/ /		PLUG				ALL
	+	Q	W1002	0001	*1		24-31-41	001-099
	+	R	W1002	0001	*1		24-31-41	115-199
	-	Q	W1002	0002	*1		24-33-12	001-099
	-	Q	W1002	0002	*1		24-31-41	115-199

HOOKUP LIST

D280N032

91-21-51

Section D01800

Page 30 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01900		1932/253/R018		PLUG				ALL
	=1		W2826	0001	16		26-15-11	001-009
	=1		W2826	0001R	16		26-15-11	010-099
	=1	16	W2826	0001	16		26-15-11	115-199
D01902		1932/253/L018		PLUG				ALL
	=1		W2826	0004	16		26-15-11	001-009, 115-199
	=1		W2826	0004R	16		26-15-11	010-099
D01904		1932/253/L018		PLUG				ALL
	=1		W2828	0001	16		26-15-11	001-009, 115-199
	=1		W2828	0001R	16		26-15-11	010-099
D01906		1932/253/R018		PLUG				ALL
	=1	16	W2828	0004	16		26-15-11	001-009
	=1	16	W2828	0004R	16		26-15-11	010-099
	=1		W2828	0004	16		26-15-11	115-199
D01908		1945/225/R001		PLUG				ALL
	=1		W2826	0004	16		26-15-11	001-009, 115-199
	=1		W2826	0004R	16		26-15-11	010-099
D01910		1891/225/R001		PLUG				ALL
	=1		W2826	0002	16		26-15-11	001-009, 115-199
	=1		W2826	0002R	16		26-15-11	010-099
D01912		1891/233/R001		PLUG				ALL
	=1	16	W2828	0004	16		26-15-11	001-009
	=1	16	W2828	0004R	16		26-15-11	010-099
	=1		W2828	0004	16		26-15-11	115-199
D01914		1945/233/R001		PLUG				ALL
	=1	16	W2828	0002	16		26-15-11	001-009, 115-199
	=1		W2828	0002R	16		26-15-11	010-099
D01916		P54/ /		PLUG				ALL
	1		W1120	0174	24		26-15-11	001-099
	1		W1120	0496	24		26-15-11	115-199
	2		W1120	PF01			26-15-11	ALL
	3		W1120	0175	22		26-15-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D01900

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01916		P54/ /		PLUG (continued)				ALL
	3		W1120	0143	22		26-15-11	115-199
	4	UNUSED						ALL
	5		W1120	PF01			26-15-11	ALL
	6		W1120	0178	24		26-15-11	001-099
	6		W1120	0169	24		26-15-11	115-199
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1120	0177	24		26-15-11	001-099
	10		W1120	0145	24		26-15-11	115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1120	0179	24		26-15-11	001-099
	14		W1120	0147	24		26-15-11	115-199
	15	UNUSED						ALL
	16		W1120	0180	24		26-15-11	001-099
	16		W1120	0148	24		26-15-11	115-199
	17	UNUSED						ALL
	18		W1120	0176	22		26-15-11	001-099
	18		W1120	0144	22		26-15-11	115-199
	19		W1120	0172	24		26-15-11	001-099
	19		W1120	0500	24		26-15-11	115-199
	20	UNUSED						ALL
	21		W1120	0173	24		26-15-11	001-099
	21		W1120	0498	24		26-15-11	115-199
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D01900

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01916		P54/ /		PLUG (continued)				ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D01918		P54/ /		PLUG				ALL
	1		W1120	0192	24		26-15-11	001-099
	1		W1120	0497	24		26-15-11	115-199
	2		W1120	PG01			26-15-11	ALL
	3		W1120	0193	22		26-15-11	001-099
	3		W1120	0153	22		26-15-11	115-199
	4	UNUSED						ALL
	5		W1120	PG01			26-15-11	ALL
	6		W1120	0189	24		26-15-11	001-099
	6		W1120	0168	24		26-15-11	115-199
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1120	0188	24		26-15-11	001-099
	10		W1120	0149	24		26-15-11	115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1120	0190	24		26-15-11	001-099
	14		W1120	0151	24		26-15-11	115-199
	15	UNUSED						ALL
	16		W1120	0191	24		26-15-11	001-099
	16		W1120	0152	24		26-15-11	115-199
	17	UNUSED						ALL
	18		W1120	0194	22		26-15-11	001-099
	18		W1120	0154	22		26-15-11	115-199
	19		W1120	0203	24		26-15-11	001-099
	19		W1120	0503	24		26-15-11	115-199
	20	UNUSED						ALL
	21		W1120	0204	24		26-15-11	001-099
	21		W1120	0501	24		26-15-11	115-199
	22	UNUSED						ALL
	23	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D01900

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01918		P54/ /		PLUG (continued)				ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D01923		P37/ /		RELAY SOCKET (PLATE 'A') (SB 34-0020)				002
	A1	UNUSED						002
	A2	UNUSED						002
	A3	UNUSED						002
	B1	UNUSED						002
	B2	UNUSED						002
	B3	UNUSED						002
	C1	UNUSED						002
	C2	UNUSED						002
	C3	UNUSED						002
	D1	UNUSED						002
	D2	UNUSED						002
	D3	UNUSED						002
	X1		W1270	6465	22		34-25-12	002
	X2		W1270	6466	22		34-25-12	002
	C01		W1270	2513R	22		34-25-12	002
	C02		W1270	2515R	22		34-25-13	002
	C03		W1270	2514R	22		34-25-12	002
	D01		W1270	2513B	22		34-25-12	002
	D02		W1270	2515B	22		34-25-13	002
	D03		W1270	2514B	22		34-25-12	002

HOOKUP LIST

D280N032

91-21-51

Section D01900

Page 4

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01925		P71/ /		RELAY SOCKET				003-099
	A1		W1254	0154	18		28-22-11	003-099
	A2		W1254	0153	18		28-22-11	003-099
	A3	UNUSED						003-099
	B1	UNUSED						003-099
	B2	UNUSED						003-099
	B3	UNUSED						003-099
	C1	UNUSED						003-099
	C2	UNUSED						003-099
	C3	UNUSED						003-099
	D1	UNUSED						003-099
	D2	UNUSED						003-099
	D3	UNUSED						003-099
	X1		W1254	0116	22		24-25-11	003-099
	X2		W1254	0114	20		24-25-11	003-099
D01926		950/156/L61		PLUG				ALL
	1		W2406	1011	20		21-51-11	ALL
	2		W2406	0001	20		21-51-11	ALL
	3		W2406	1010	20		21-51-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D01928		950/156/L061		PLUG				001-099
D01928		950/156/L61		PLUG				115-199
	1	18	W2406	2501R	18		21-51-11	ALL
	2		W2406	0007	20		21-51-11	ALL
	3		W2406	1012	20		21-51-11	ALL
	4	UNUSED						ALL
	5	18	W2406	2501B	18		21-51-11	ALL
D01930		950/156/L061		PLUG				001-099
D01930		950/156/L61		PLUG				115-199
	1		W2406	1005	20		21-51-11	ALL
	2	18	W2406	1004	18		21-51-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D01932		940/147/R061		PLUG				ALL
	1		W2506	1020	20		21-51-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01900

Page 5

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01932		940/147/R061		PLUG (continued)				ALL
	2		W2506	0020	20		21-51-21	ALL
	3		W2506	1021	20		21-51-21	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D01934		940/149/R061		PLUG				ALL
	1	18	W2506	2508R	18		21-51-21	ALL
	2		W2506	0024	20		21-51-21	ALL
	3	18	W2506	1027	18		21-51-21	ALL
	4	UNUSED						ALL
	5	18	W2506	2508B	18		21-51-21	ALL
D01936		950/152/R061		PLUG				ALL
	1		W2506	1019	20		21-51-21	ALL
	2		W2506	1018	20		21-51-21	001-099
	2	18	W2506	1018	20		21-51-21	115-199
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D01938		1700/298/L005		RCPT-				001-099
D01938		1693/299/		RCPT-				115-199
	A		W3538	0001	04		25-31-33	ALL
	B		W3538	0002	04		25-31-33	ALL
	C		W3538	0003	04		25-31-33	ALL
	D		W3538	0004	04		25-31-33	ALL
D01940		1700/299/R1		RCPT-				001-099
D01940		AA1698/ /		RCPT-				115-199
	1		W3536	0001	20		33-24-14	001-099
	1		W3536	0016	20		33-24-14	115-199
	2		W3536	0010	20		33-24-14	001-099
	2		W3536	0017	20		33-24-14	115-199
	3		W3536	0003	22		33-27-31	001-099
	3	UNUSED						115-199
	4		W3536	0004	22		25-31-33	ALL
	5		W3536	0005	22		25-31-33	ALL
	6		W3536	0006	22		25-31-33	ALL
	7		W3536	0007	20		25-31-33	ALL
	8		W3536	0008	22		33-27-31	001-099

HOOKUP LIST

D280N032

91-21-51

Section D01900

Page 6

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01940		1700/299/R1		RCPT- (continued)				001-099
D01940		AA1698/ /		RCPT- (continued)				115-199
	8	UNUSED						115-199
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W3536	0011	22		33-27-31	001-099
	11	UNUSED						115-199
	12		W3536	0012	20		33-27-31	001-099
	12	UNUSED						115-199
D01946		FSS300/ /		PLUG				ALL
	=1		W5102	0004	18		26-18-11	ALL
D01948		FSS90/169/L		PLUG				ALL
	=1		W3302	1001	18		26-18-11	ALL
D01950		FSS300/169/L		PLUG				ALL
	=1		W5100	0059	18		26-18-11	ALL
D01952		FSS90/169/L		PLUG				ALL
	=1		W3300	1009	18		26-18-11	ALL
D01954		920/155/R35		PLUG				ALL
	=1		W2400	1001	18		26-18-11	ALL
D01956		915/160/L25		PLUG				ALL
	=1		W2400	1002	18		26-18-11	ALL
D01958		920/155/R35		PLUG				ALL
	=1		W2400	1003	18		26-18-11	ALL
D01960		915/160/L25		PLUG				ALL
	=1		W2400	1004	18		26-18-11	ALL
D01962		1164/198/R007		PLUG				ALL
	=1		W2514	1004	18		26-18-11	ALL
D01964		1053/148/R002		PLUG				ALL
	=1		W2514	1005	18		26-18-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01900

Page 7

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01966		1164/198/R007		PLUG				ALL
	= 1		W2514	1006	18		26-18-11	ALL
D01968		1053/148/R002		PLUG				ALL
	= 1		W2514	1007	18		26-18-11	ALL
D01970		1700/199/L045		PLUG				001-099
D01970		1691/180/L45		PLUG				115-199
	= 1		W2028	0001	18		26-18-11	001-099
	= 1		W2626	0001	18		26-18-11	115-199
D01972		1187/200/R016		PLUG				ALL
	= 1		W2626	0002	18		26-18-11	ALL
D01974		1700/199/L045		PLUG				001-099
D01974		1691/180/L45		PLUG				115-199
	= 1		W2028	0003	18		26-18-11	001-099
	= 1		W2626	0003	18		26-18-11	115-199
D01976		1187/200/R016		PLUG				ALL
	= 1		W2626	0004	18		26-18-11	ALL
D01978		1720/182/L023		PLUG				001-099
D01978		1723/182/L43		PLUG				115-199
	= 1		W2028	0005	18		26-18-11	001-099
	= 1		W2626	0005	18		26-18-11	115-199
D01980		1862/214/L023		PLUG				001-099
D01980		1862/240/L25		PLUG				115-199
	= 1		W2028	0006	18		26-18-11	001-099
	= 1		W2626	0006	18		26-18-11	115-199
D01982		1728/182/L033		PLUG				001-099
D01982		1728/182/L33		PLUG				115-199
	= 1		W2028	0007	18		26-18-11	001-099
	= 1		W2626	0007	18		26-18-11	115-199
D01984		1862/214/L023		PLUG				001-099
D01984		1862/220/L25		PLUG				115-199
	= 1		W2028	0008	18		26-18-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D01900

Page 8

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D01984		1862/214/L023		PLUG (continued)				001-099
D01984		1862/220/L25		PLUG (continued)				115-199
	= 1		W2626	0008	18		26-18-11	115-199
D01986		FSS300/ /		PLUG				ALL
	= 1		W5202	0004	18		26-18-21	ALL
D01988		ISS90/169/R		PLUG				ALL
	= 1		W3402	1001	18		26-18-21	ALL
D01990		FSS300/169/R		PLUG				ALL
	= 1		W5200	0038	18		26-18-21	ALL
D01992		FSS90/ /		PLUG				ALL
	= 1		W3400	1009	18		26-18-21	ALL
D01994		1011/160/R062		PLUG				ALL
	= 1		W2502	1030	18		26-18-21	ALL
D01996		923/160/R047		PLUG				ALL
	= 1		W2502	1029	18		26-18-21	ALL
D01998		1011/160/R062		PLUG				ALL
	= 1		W2502	1028	18		26-18-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D01900

Page 9 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02003		690/300/L005		PLUG-RT ANGLE GPS ANT-L				115-199
	= A1		W4079	001CX			34-58-11	115-199
	= C1		W4079	001CO			34-58-11	115-199
D02009		690/300/R005		PLUG-RT ANGLE GPS ANT-R				115-199
	= A1		W4081	001CX			34-58-21	115-199
	= C1		W4081	001CO			34-58-21	115-199
D02020		P33/ /		RELAY SOCKET				ALL
	1		W1230	0681	22		28-22-21	001-099
	1		W1232	0062	22		28-22-21	115-199
	2	UNUSED						ALL
	3		W1230	0683	22		28-22-21	001-099
	3		W1232	0064	22		28-22-21	115-199
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1230	0682	22		28-22-21	001-099
	6		W1232	0063	22		28-22-21	115-199
	7		W1230	0680	22		28-22-21	001-099
	7		W1232	0061	22		28-22-21	115-199
	8	UNUSED						ALL
D02022		IRSS265/ /		PLUG				ALL
	1	UNUSED						ALL
	2		W3406	3504B	20		28-22-21	ALL
	3		W3406	3504Y	20		28-22-21	ALL
	4		W3406	0011	18		28-22-21	ALL
	5		W3406	3504R	20		28-22-21	ALL
	6		W5200	1007	18		28-22-21	ALL
	7		W3406	0012	18		28-22-21	ALL
D02026		923/155/R047		PLUG				ALL
	= 1		W2502	1031	18		26-18-21	ALL
D02028		1070/184/L004		PLUG				ALL
	1		W2412	1011	18		32-42-11	ALL
	2		W2412	0072	18		32-42-11	ALL
	3		W2412	0053	18		32-42-11	ALL
			W2412	0008	20		32-42-11	ALL
			W2412	1011Z			32-42-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02000

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02030		1078/184/L004		PLUG				ALL
	1		W2412	1009	18		32-42-11	ALL
	2		W2412	0071	18		32-42-11	ALL
	3		W2412	0050	18		32-42-11	ALL
			W2412	0007	20		32-42-11	ALL
			W2412	1009Z			32-42-11	ALL
D02032		1065/187/L062		PLUG				ALL
	1		W2412	1007	18		32-42-11	ALL
	2		W2412	1006	18		32-42-11	ALL
	3		W2412	0054	18		32-42-11	ALL
			W2412	0006	20		32-42-11	ALL
			W2412	1006Z			32-42-11	ALL
			W2412	1007Z			32-42-11	ALL
D02034		1065/187/L062		PLUG				ALL
	1		W2412	1005	18		32-42-11	ALL
	2		W2412	1012	18		32-42-11	ALL
	3		W2412	0051	18		32-42-11	ALL
			W2412	0005	20		32-42-11	ALL
			W2412	1005Z			32-42-11	ALL
			W2412	1012Z			32-42-11	ALL
D02036		1065/187/L062		PLUG				ALL
	1		W2412	1003	18		32-42-11	ALL
	2		W2412	1010	18		32-42-11	ALL
	3		W2412	0055	18		32-42-11	ALL
			W2412	0004	20		32-42-11	ALL
			W2412	1003Z			32-42-11	ALL
			W2412	1010Z			32-42-11	ALL
D02038		1065/187/L062		PLUG				ALL
	1		W2412	1001	18		32-42-11	ALL
	2		W2412	1008	18		32-42-11	ALL
	3		W2412	0052	18		32-42-11	ALL
			W2412	0003	20		32-42-11	ALL
			W2412	1001Z			32-42-11	ALL
			W2412	1008Z			32-42-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02000

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02040		INBD/FWD/R/H		PLUG				ALL
	1		W4904	2501R	20		32-42-11	ALL
	2	UNUSED						ALL
	3		W4904	2501B	20		32-42-11	ALL
	DED		W4904	2501Z			32-42-11	ALL
D02042		OUTBD/FWD/R/H		PLUG				ALL
	1		W4904	2502R	20		32-42-11	ALL
	2	UNUSED						ALL
	3		W4904	2502B	20		32-42-11	ALL
	DED		W4904	2502Z			32-42-11	ALL
D02044		INBD/AFT/R/H		PLUG				ALL
	1		W4924	2501R	20		32-42-11	ALL
	2	UNUSED						ALL
	3		W4924	2501B	20		32-42-11	ALL
	DED		W4924	2501Z			32-42-11	ALL
D02046		OUTBD/AFT/R/H		PLUG				ALL
	1		W4924	2502R	20		32-42-11	ALL
	2	UNUSED						ALL
	3		W4924	2502B	20		32-42-11	ALL
	DED		W4924	2502Z			32-42-11	ALL
D02048		OUTBD/FWB/L/H		PLUG				ALL
	1		W3004	2501R	20		32-42-11	ALL
	2	UNUSED						ALL
	3		W3004	2501B	20		32-42-11	ALL
	DED		W3004	2501Z			32-42-11	ALL
D02050		INBD/FWD/L/H		PLUG				ALL
	1		W3004	2502R	20		32-42-11	ALL
	2	UNUSED						ALL
	3		W3004	2502B	20		32-42-11	ALL
	DED		W3004	2502Z			32-42-11	ALL
D02052		OUTBD/AFT/L/H		PLUG				ALL
	1		W3024	2501R	20		32-42-11	ALL
	2	UNUSED						ALL
	3		W3024	2501B	20		32-42-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02000

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02052		OUTBD/AFT/L/H		PLUG (continued)				ALL
	DED		W3024	2501Z			32-42-11	ALL
D02054		INBD/AFT/L/H		PLUG				ALL
	1		W3024	2502R	20		32-42-11	ALL
	2	UNUSED						ALL
	3		W3024	2502B	20		32-42-11	ALL
	DED		W3024	2502Z			32-42-11	ALL
D02064		P33/ /		RELAY SOCKET				001-008, 115-199
	1	UNUSED						001-008, 115-199
	2		W1230	0691	24		28-22-31	001-008
	2		W1232	0074	24		28-22-31	115-199
	3		W1230	0735	20		28-22-31	001-008
	3		W1232	0052	20		28-22-31	115-199
	4	UNUSED						001-008, 115-199
	5		W1230	0692	24		28-22-31	001-008
	5		W1232	0075	24		28-22-31	115-199
	6		W1230	0671	24		28-22-31	001-008
	6		W1232	0050	24		28-22-31	115-199
	7		W1230	0673	20		28-22-31	001-008
	7		W1232	0053	20		28-22-31	115-199
	8		W1230	0672	24		28-22-31	001-008
	8		W1232	0051	24		28-22-31	115-199
D02066		WS652/ /		PLUG				ALL
	1		W3406	0001	20		27-18-11	ALL
	2		W3406	1006	20		27-18-11	ALL
	3		W3406	1025	20		27-18-11	ALL
	4		W3406	2502B	20		27-18-11	ALL
	5		W3406	2502R	20		27-18-11	ALL
D02068		ELEV77/RS/		PLUG-				ALL
	1		W3200	2501B	20		27-38-11	ALL
	2		W3200	2501R	20		27-38-11	ALL
	3		W3200	1001	20		27-38-11	ALL
	4		W3200	2502B	20		27-38-11	ALL
	5		W3200	2502R	20		27-38-11	ALL
D02070A		E5-2/ /		PLUG-				ALL
	A01		W1284	0074	24		24-22-22	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02000

Page 4

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02070A		E5-2/ /		PLUG- (continued)				ALL
	A02		W1284	0201	24		24-11-11	ALL
	A03		W1284	0207	22		24-22-21	ALL
	A04		W1284	2513R	24		24-11-21	ALL
	A05		W1284	0072	24		24-22-21	001-003, 115-199
	A05	UNUSED						004-099
	A06		W1284	0020	24		24-22-11	ALL
	A07		W1284	0067	22		24-22-21	ALL
	A08		W1284	0090	22		24-22-22	ALL
	A09		W1284	2004R	24		24-11-21	ALL
	A10		W1284	0076	24		24-28-21	ALL
	A11		W1284	0068	22		24-22-21	ALL
	A12		W1284	5023R	24		24-22-22	ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01		W1284	0065	22		24-22-21	ALL
	B02		W1284	0077	24		24-28-21	ALL
	B03	UNUSED						ALL
	B04		W1284	2513B	24		24-11-21	ALL
	B05		W1284	0069	24		24-22-21	ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09		W1284	2004B	24		24-11-21	ALL
	B10	UNUSED						ALL
	B11		W1284	5023Z			24-22-22	ALL
	B12		W1284	5023B	24		24-22-22	ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01		W1284	0064	22		24-22-21	ALL
	C02		W1284	0071	22		24-22-21	ALL
	C03	UNUSED						ALL
	C04		W1284	0030	24		24-11-21	001-099
	C04		W1284	0030	22		24-11-21	115-199
	C05		W1284	0066	22		24-22-21	ALL
	C06		W1284	0035	24		24-11-21	ALL
	C07		W1284	0091	22		24-22-22	ALL
	C08		W1284	0094	22		24-22-22	ALL
	C09	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02000

Page 5

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02070A		E5-2/ /		PLUG- (continued)				ALL
	C10	UNUSED						ALL
	C11		W1284	2513Z			24-11-21	ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15		W1284	0225	22		24-22-21	ALL
	D01		W1284	2005B	24		24-11-21	ALL
	D02		W1284	0028	22		24-11-21	ALL
	D03		W1284	2005R	24		24-11-21	ALL
	D04		W1284	0073	24		24-22-21	001-003, 115-199
	D04	UNUSED						004-099
	D05		W1284	0093	24		24-22-22	ALL
	D06		W1284	0063	24		24-22-21	ALL
	D07		W1284	0095	24		24-27-21	ALL
	D08		W1284	0089	24		24-22-22	ALL
	D09	UNUSED						ALL
	D10		W1284	0032	24		24-11-21	ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13		W1284	0041	24		24-11-21	ALL
	D14	UNUSED						ALL
	D15		W1284	0224	22		24-22-22	ALL
D02070B		E5-2/ /		PLUG-				ALL
	A01		W1284	2514R	22		24-21-21	ALL
	A02	UNUSED						ALL
	A03		W1284	0024	22		24-11-21	ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07		W1284	0209	22		24-22-21	ALL
	A08		W1284	0026	22		24-11-21	ALL
	A09	UNUSED						ALL
	A10		W1284	4006R	24		24-23-11	ALL
	A11		W1284	4004R	24		24-23-11	ALL
	A12		W1284	4005R	24		24-23-11	ALL
	A13		W1284	4003R	22		24-21-21	ALL
	A14	UNUSED						ALL
	A15		W1284	0017	22		24-21-21	ALL
	B01		W1284	2514B	22		24-21-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02000

Page 6

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02070B		E5-2/ /		PLUG- (continued)				ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10		W1284	4006Y	24		24-23-11	ALL
	B11		W1284	4004Y	24		24-23-11	ALL
	B12		W1284	4005Y	24		24-23-11	ALL
	B13		W1284	4003B	22		24-21-21	ALL
	B14	UNUSED						ALL
	B15		W1284	0018	22		24-21-21	ALL
	C01		W1284	2514Z			24-21-21	ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10		W1284	4006B	24		24-23-11	ALL
	C11		W1284	4004B	24		24-23-11	ALL
	C12		W1284	4005B	24		24-23-11	ALL
	C13		W1284	4003Y	22		24-21-21	ALL
	C14	UNUSED						ALL
	C15		W1284	0019	22		24-21-21	ALL
	D01	UNUSED						ALL
	D02		W1284	0070	22		24-22-21	ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08		W1284	0033	24		24-11-21	ALL
	D09	UNUSED						ALL
	D10		W1284	4006G	24		24-23-11	ALL
	D11		W1284	4004G	24		24-23-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02000

Page 7

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02070B		E5-2/ /		PLUG- (continued)				ALL
	D12		W1284	4005G	24		24-23-11	ALL
	D13		W1284	4003G	22		24-21-21	ALL
	D14	UNUSED						ALL
	D15		W1284	0025	22		24-11-21	ALL
D02070C		E5-2/ /		PLUG-				ALL
	1	UNUSED						ALL
	2		W1284	3001R	18		24-21-21	ALL
	3		W1284	3001B	18		24-21-21	ALL
	4		W1284	3001Y	18		24-21-21	ALL
	5	UNUSED						ALL
	= C1	UNUSED						ALL
	= C5	UNUSED						ALL
D02080		P54/ /		PLUG				ALL
	1		W1120	0164	24		26-11-22	001-099
	1		W1120	0509	24		26-11-22	115-199
	2		W1120	PH01			26-11-22	ALL
	3		W1120	0165	22		26-11-22	001-099
	3		W1120	0098	22		26-11-22	115-199
	4	UNUSED						ALL
	5		W1120	PH01			26-11-22	ALL
	6		W1120	0163	24		26-11-22	001-099
	6		W1120	0100	24		26-11-22	115-199
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1120	0162	24		26-11-22	001-099
	10		W1120	0099	24		26-11-22	115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1120	0161	24		26-11-22	001-099
	14		W1120	0101	24		26-11-22	115-199
	15	UNUSED						ALL
	16		W1120	0160	24		26-11-22	001-099
	16		W1120	0102	24		26-11-22	115-199
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W1120	0166	24		26-11-22	001-099

HOOKUP LIST

D280N032

91-21-51

Section D02000

Page 8

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02080		P54/ /		PLUG (continued)				ALL
	19		W1120	0494	24		26-11-22	115-199
	20		W1120	0167	24		26-11-22	001-099
	20		W1120	0495	24		26-11-22	115-199
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D02082		255/150/L20		PLUG				001-099
D02082		247/170/L20		PLUG				115-199
	1		W2034	0008	24		24-31-11	ALL
	2		W2034	0007	20		24-31-11	ALL
	3		W2034	0009	24		24-31-11	ALL
	4		W2034	0001	20		24-31-11	ALL
	5		W2034	0012	22		24-31-11	ALL
	6		W2034	0012	22		24-31-11	ALL
	7		W2034	0002	20		24-31-11	ALL
	8		W2034	0004	20		24-31-11	ALL
	9		W2034	0005	22		24-34-11	ALL
	10		W2034	0003	20		24-31-11	ALL
	11		W2034	0010	24		24-31-11	001-009, 115-199
	11		W2034	2501R	24		24-31-11	010-099
	12		W2034	0011	24		24-31-11	001-009, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D02000

Page 9

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02082		255/150/L20		PLUG (continued)				001-099
D02082		247/170/L20		PLUG (continued)				115-199
	12		W2034	2501B	24		24-31-11	010-099
			W2034	0019	22		24-31-11	010-099
			W2034	2501Z			24-31-11	010-099
D02084		P037-00/ /		RELAY SOCKET (PLATE 'B')				001-099
D02084		P37/ /		RELAY SOCKET (PLATE 'B')				115-199
	1	UNUSED						ALL
	2		W1270	0356	24		24-51-71	ALL
	3		W1270	0358	24		24-51-71	ALL
	4	UNUSED						ALL
	5		W1270	0355	24		24-51-71	ALL
	6		W1270	0521	24		24-51-71	ALL
	7		W1270	0357	24		24-51-71	ALL
	8		W1270	0520	24		24-51-71	ALL
D02086		P037-00/ /		RELAY SOCKET (PLATE 'B')				001-099
D02086		P37/ /		RELAY SOCKET (PLATE 'B')				115-199
	A1	UNUSED						ALL
	A2		W1270	5917	24		34-12-22	ALL
	A3		W1270	5746	24		30-31-12	ALL
	B1		W1270	0488	24		30-31-12	001-099
	B1		W1270	5741	24		30-31-12	115-199
	B2		W1270	5744	24		30-31-12	ALL
	B3	UNUSED						ALL
	C1		W1270	5735	24		30-31-12	001-099
	C1		W1270	5735	20		30-31-12	115-199
	C2	UNUSED						ALL
	C3		W1270	5745	24		30-31-12	ALL
	D1	UNUSED						ALL
	D2		W1270	5739	24		30-31-12	ALL
	D3		W1270	5743	24		30-31-12	ALL
	X1		W1270	5737	24		30-31-12	ALL
	X2		W1270	5742	24		30-31-12	ALL
D02090		P037-00/ /		RELAY SOCKET (PLATE 'B')				001-099
D02090		P37/ /		RELAY SOCKET (PLATE 'B')				115-199
	A1	UNUSED						ALL
	A2	UNUSED						ALL
	A3		W1270	5759	24		30-31-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02000

Page 10

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02090		P037-00/ /		RELAY SOCKET (PLATE 'B') (continued)				001-099
D02090		P37/ /		RELAY SOCKET (PLATE 'B') (continued)				115-199
	B1		W1270	5748	24		30-31-12	ALL
	B2		W1270	5765	24		30-31-12	ALL
	B3	UNUSED						ALL
	C1		W1270	5760	24		30-31-12	ALL
	C2	UNUSED						ALL
	C3		W1270	5764	24		30-31-12	ALL
	D1	UNUSED						ALL
	D2		W1270	5740	24		30-31-12	ALL
	D3		W1270	5761	24		30-31-12	ALL
	X1		W1270	5738	24		30-31-12	ALL
	X2		W1270	5763	24		30-31-12	ALL
D02094		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D02094		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	A1	UNUSED						ALL
	A2	UNUSED						ALL
	A3	UNUSED						ALL
	B1		W1270	5944	22		30-32-11	ALL
	B2		W1270	5943	24		30-32-11	ALL
	B3	UNUSED						ALL
	C1		W1270	5952	22		30-32-11	001-099
	C1		W1270	5949	22		30-32-11	115-199
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2		W1270	5947	24		30-32-11	ALL
	D3		W1270	5922	24		34-12-22	ALL
	X1		W1270	5945	24		30-32-11	ALL
	X2		W1270	5942	24		30-32-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02000

Page 11 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02104		WS652/ /		PLUG				ALL
	1		W3306	0006	20		27-18-11	ALL
	2		W3306	1006	20		27-18-11	ALL
	3		W3306	1020	20		27-18-11	ALL
	4		W3306	2502B	20		27-18-11	ALL
	5		W3306	2502R	20		27-18-11	ALL
D02106		ELEV77/RS/		PLUG-				ALL
	1		W3202	2501B	20		27-38-11	ALL
	2		W3202	2501R	20		27-38-11	ALL
	3		W3202	1001	20		27-38-11	ALL
	4		W3202	2502B	20		27-38-11	ALL
	5		W3202	2502R	20		27-38-11	ALL
D02108A		E5-1/ /		PLUG				ALL
	A01		W1282	0103	22		24-22-22	ALL
	A02		W1282	0130	24		24-11-11	ALL
	A03		W1282	0276	22		24-22-11	ALL
	A04		W1282	2508R	24		24-11-11	ALL
	A05		W1282	0101	22		24-22-11	001-003, 115-199
	A05	UNUSED						004-099
	A06		W1282	0084	22		24-22-12	ALL
	A07		W1282	0096	22		24-22-11	ALL
	A08		W1282	0086	22		24-22-12	ALL
	A09		W1282	2009R	24		24-11-11	ALL
	A10		W1282	0065	24		24-28-21	ALL
	A11		W1282	0097	22		24-22-11	ALL
	A12		W1282	5009R	24		24-22-12	ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01		W1282	0094	22		24-22-11	ALL
	B02		W1282	0064	24		24-28-21	ALL
	B03	UNUSED						ALL
	B04		W1282	2508B	24		24-11-11	ALL
	B05		W1282	0098	22		24-22-11	ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09		W1282	2009B	24		24-11-11	ALL
	B10	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02100

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02108A		E5-1/ /		PLUG (continued)				ALL
	B11		W1282	5009Z			24-22-12	ALL
	B12		W1282	5009B	24		24-22-12	ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01		W1282	0093	22		24-22-11	ALL
	C02		W1282	0100	22		24-22-11	ALL
	C03	UNUSED						ALL
	C04		W1282	0129	22		24-11-11	ALL
	C05		W1282	0095	22		24-22-11	ALL
	C06		W1282	0135	24		24-11-11	ALL
	C07		W1282	0087	22		24-22-12	ALL
	C08		W1282	0085	22		24-22-12	ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11		W1282	2508Z			24-11-11	ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15		W1282	0090	22		24-22-11	ALL
	D01		W1282	2010B	24		24-11-11	ALL
	D02		W1282	0128	22		24-11-11	ALL
	D03		W1282	2010R	24		24-11-11	ALL
	D04		W1282	0102	22		24-22-11	001-003, 115-199
	D04	UNUSED						004-099
	D05		W1282	0089	22		24-22-12	ALL
	D06		W1282	0091	22		24-22-11	ALL
	D07		W1282	0248	24		24-27-11	ALL
	D08		W1282	0083	22		24-22-12	ALL
	D09	UNUSED						ALL
	D10		W1282	0131	24		24-11-11	ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13		W1282	0139	24		24-11-11	ALL
	D14	UNUSED						ALL
	D15		W1282	0088	22		24-22-12	ALL
D02108B		E5-1/ /		PLUG				ALL
	A01		W1282	2505R	22		24-21-11	ALL
	A02	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02100

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02108B		E5-1/ /		PLUG (continued)				ALL
	A03		W1282	0124	22		24-11-11	ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07		W1282	0211	22		24-22-11	ALL
	A08		W1282	0126	22		24-11-11	ALL
	A09	UNUSED						ALL
	A10		W1282	4006R	24		24-23-11	ALL
	A11		W1282	4003R	24		24-23-11	ALL
	A12		W1282	4005R	24		24-23-11	ALL
	A13		W1282	4001R	24		24-21-11	ALL
	A14	UNUSED						ALL
	A15		W1282	0077	22		24-21-11	ALL
	B01		W1282	2505B	22		24-21-11	ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10		W1282	4006Y	24		24-23-11	ALL
	B11		W1282	4003Y	24		24-23-11	ALL
	B12		W1282	4005Y	24		24-23-11	ALL
	B13		W1282	4001B	24		24-21-11	ALL
	B14	UNUSED						ALL
	B15		W1282	0078	22		24-21-11	ALL
	C01		W1282	2505Z			24-21-11	ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10		W1282	4006B	24		24-23-11	ALL
	C11		W1282	4003B	24		24-23-11	ALL
	C12		W1282	4005B	24		24-23-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02100

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02108B		E5-1/ /		PLUG (continued)				ALL
	C13		W1282	4001Y	24		24-21-11	ALL
	C14	UNUSED						ALL
	C15		W1282	0079	22		24-21-11	ALL
	D01	UNUSED						ALL
	D02		W1282	0099	22		24-22-11	ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08		W1282	0133	24		24-11-11	ALL
	D09	UNUSED						ALL
	D10		W1282	4006G	24		24-23-11	ALL
	D11		W1282	4003G	24		24-23-11	ALL
	D12		W1282	4005G	24		24-23-11	ALL
	D13		W1282	4001G	24		24-21-11	ALL
	D14	UNUSED						ALL
	D15		W1282	0125	22		24-11-11	ALL
D02108C		E5-1/ /		PLUG				ALL
	1	UNUSED						ALL
	2		W1282	3002R	18		24-21-11	ALL
	3		W1282	3002B	18		24-21-11	ALL
	4		W1282	3002Y	18		24-21-11	ALL
	5	UNUSED						ALL
	= C1	UNUSED						ALL
	= C5	UNUSED						ALL
D02110		P54/ /		PLUG				ALL
	1		W1120	0079	24		26-11-12	001-099
	1		W1120	0483	24		26-11-12	115-199
	2		W1120	PI01			26-11-12	ALL
	3		W1120	0083	22		26-11-12	001-099
	3		W1120	0040	22		26-11-12	115-199
	4	UNUSED						ALL
	5		W1120	PI01			26-11-12	ALL
	6		W1120	0076	24		26-11-12	001-099
	6		W1120	0042	24		26-11-12	115-199
	7	UNUSED						ALL
	8	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02100

Page 4

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02110		P54/ /		PLUG (continued)				ALL
	9	UNUSED						ALL
	10		W1120	0077	24		26-11-12	001-099
	10		W1120	0041	24		26-11-12	115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1120	0078	24		26-11-12	001-099
	14		W1120	0043	24		26-11-12	115-199
	15	UNUSED						ALL
	16		W1120	0075	24		26-11-12	001-099
	16		W1120	0044	24		26-11-12	115-199
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W1120	0080	24		26-11-12	001-099
	19		W1120	0058	24		26-11-12	115-199
	20		W1120	0081	24		26-11-12	001-099
	20		W1120	0060	24		26-11-12	115-199
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02100

Page 5

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02114		P33/ /		RELAY SOCKET				ALL
	A1	UNUSED						ALL
	A2	UNUSED						ALL
	A3		W1230	0732	24		30-31-11	001-099
	A3		W1232	0130	24		30-31-11	115-199
	B1		W1230	0716	24		30-31-11	001-099
	B1		W1232	0114	24		30-31-11	115-199
	B2		W1230	0718	24		30-31-11	001-099
	B2		W1232	0116	24		30-31-11	115-199
	B3	UNUSED						ALL
	C1		W1230	0730	24		30-31-11	001-099
	C1		W1232	0128	24		30-31-11	115-199
	C2	UNUSED						ALL
	C3		W1230	0717	24		30-31-11	001-099
	C3		W1232	0115	24		30-31-11	115-199
	D1	UNUSED						ALL
	D2		W1230	0696	24		30-31-11	001-099
	D2		W1232	0085	24		30-31-11	115-199
	D3		W1230	0731	24		30-31-11	001-099
	D3		W1232	0129	24		30-31-11	115-199
	X1		W1230	0720	24		30-31-11	001-099
	X1		W1232	0118	24		30-31-11	115-199
	X2		W1230	0715	24		30-31-11	001-099
	X2		W1232	0113	24		30-31-11	115-199
D02116		P33/ /		RELAY SOCKET				ALL
	A1	UNUSED						ALL
	A2		W1230	0712	22		34-12-12	001-099
	A2		W1232	0106	24		34-12-12	115-199
	A3		W1230	0728	24		30-31-11	001-099
	A3		W1232	0126	24		30-31-11	115-199
	B1		W1230	0724	24		30-31-11	001-099
	B1		W1232	0122	24		30-31-11	115-199
	B2		W1230	0726	24		30-31-11	001-099
	B2		W1232	0124	24		30-31-11	115-199
	B3	UNUSED						ALL
	C1		W1230	0723	24		30-31-11	001-099
	C1		W1232	0121	24		30-31-11	115-199
	C2	UNUSED						ALL
	C3		W1230	0727	24		30-31-11	001-099
	C3		W1232	0125	24		30-31-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D02100

Page 6

Dec 18/2007

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02116		P33/ /		RELAY SOCKET (continued)				ALL
	D1	UNUSED						ALL
	D2		W1230	0729	24		30-31-11	001-099
	D2		W1232	0127	24		30-31-11	115-199
	D3		W1230	0725	24		30-31-11	001-099
	D3		W1232	0123	24		30-31-11	115-199
	X1		W1230	0719	24		30-31-11	001-099
	X1		W1232	0117	24		30-31-11	115-199
	X2		W1230	0699	24		30-31-11	001-099
	X2		W1232	0088	24		30-31-11	115-199
D02120		P33/ /		RELAY SOCKET				ALL
	A1	UNUSED						ALL
	A2	UNUSED						ALL
	A3	UNUSED						ALL
	B1		W1230	0701	22		30-32-11	001-099
	B1		W1232	0090	22		30-32-11	115-199
	B2		W1230	0700	24		30-32-11	001-099
	B2		W1232	0089	24		30-32-11	115-199
	B3	UNUSED						ALL
	C1		W1230	0708	22		30-32-11	001-099
	C1		W1232	0097	22		30-32-11	115-199
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2		W1230	0704	24		30-32-11	001-099
	D2		W1232	0093	24		30-32-11	115-199
	D3		W1230	0713	22		34-12-12	001-099
	D3		W1232	0107	24		34-12-12	115-199
	X1		W1230	0702	24		30-32-11	001-099
	X1		W1232	0091	24		30-32-11	115-199
	X2		W1230	0714	24		30-32-11	001-099
	X2		W1232	0109	24		30-32-11	115-199
D02122		PPS165/ /		PLUG				ALL
	A		W3366	0001	18		26-11-12	ALL
	B	UNUSED						ALL
	C	UNUSED						ALL
	D		W3366	0002	18		26-11-12	ALL
	E	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02100

Page 7

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02126		E003-03/ /		PLUG-				ALL
	= A1		W4467	001CX			34-53-11	ALL
	= C1		W4467	001CO			34-53-11	ALL
D02128		E3-3/ /		PLUG- COAX, RT ANGLE				ALL
	= A1		W1433	004CX			34-55-11	ALL
	= C1		W1433	004CO			34-55-11	ALL
D02138		E3-3/ /		PLUG- COAX, RT ANGLE				ALL
	= A1		W1433	002CX			34-53-11	ALL
	= C1		W1433	002CO			34-53-11	ALL
D02140		P33/ /		RELAY SOCKET				ALL
	1		W1230	0677	22		28-22-21	001-099
	1		W1232	0058	22		28-22-21	115-199
	2	UNUSED						ALL
	3		W1230	0679	20		28-22-21	001-099
	3		W1232	0060	22		28-22-21	115-199
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1230	0678	22		28-22-21	001-099
	6		W1232	0059	22		28-22-21	115-199
	7		W1230	0676	22		28-22-21	001-099
	7		W1232	0057	22		28-22-21	115-199
	8	UNUSED						ALL
D02142		IRSS265/ /		PLUG				ALL
	1	UNUSED						ALL
	2		W3306	3502B	20		28-22-21	ALL
	3		W3306	3502Y	20		28-22-21	ALL
	4		W3306	0009	18		28-22-21	ALL
	5		W3306	3502R	20		28-22-21	ALL
	6		W5100	1007	18		28-22-21	ALL
	7		W3306	0010	18		28-22-21	ALL
D02144		1040/184/L013		PLUG				001-008, 115-199
	1	UNUSED						001-008, 115-199
	2		W2416	4251R	18		28-22-31	001-008, 115-199
	3		W2416	4251Y	18		28-22-31	001-008, 115-199
	4		W2416	0003	18		28-22-31	001-008, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D02100

Page 8

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02144		1040/184/L013		PLUG (continued)				001-008, 115-199
	5		W2416	4251B	18		28-22-31	001-008, 115-199
	6		W2416	4251G	18		28-22-31	001-008, 115-199
	7		W2416	0015	18		28-22-31	001-008, 115-199
D02146		P010-00/ /		RCPT				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1115	0202	22		33-16-51	ALL
	4		W1115	0201	22		33-16-51	ALL
	5	UNUSED						ALL
	6		W1115	0204	22		26-11-11	ALL
	7		W1115	0205	22		76-11-11	ALL
	8		W1115	0206	22		28-22-21	ALL
	9		W1115	0395	22		28-22-21	ALL
	10		W1115	0208	22		28-22-21	ALL
	11		W1115	0209	22		76-11-11	ALL
	12		W1115	0210	22		76-11-11	ALL
	13		W1115	0434	22		76-11-11	ALL
	14		W1115	0212	22		28-22-21	ALL
	15		W1115	0213	20		28-22-21	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W1115	0224	22		76-11-11	ALL
	23		W1115	0219	22		28-22-21	ALL
	24		W1115	0200	22		76-11-11	ALL
	25		W1115	0217Y	22		27-41-11	ALL
	26		W1115	0216Y	22		27-41-11	ALL
	27		W1115	0218Y	22		27-41-11	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D02148		P010-00/ /		RCPT				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02100

Page 9

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02148		P010-00/ /		RCPT (continued)				ALL
	3		W1115	0251	22		33-16-61	ALL
	4		W1115	0252	22		33-16-51	ALL
	5	UNUSED						ALL
	6		W1115	0254	22		26-11-21	ALL
	7		W1115	0255	22		76-11-12	ALL
	8		W1115	0256	22		28-22-21	ALL
	9		W1115	0396	22		28-22-21	ALL
	10		W1115	0258	22		28-22-21	ALL
	11		W1115	0259	22		76-11-12	ALL
	12		W1115	0260	22		76-11-12	ALL
	13		W1115	0435	22		76-11-12	ALL
	14		W1115	0262	22		28-22-21	ALL
	15		W1115	0263	20		28-22-21	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W1115	0271	22		76-11-12	ALL
	23		W1115	0273Y	22		27-41-21	ALL
	24		W1115	0266Y	22		27-41-21	ALL
	25		W1115	0274Y	22		27-41-21	ALL
	26		W1115	0250	22		76-11-12	ALL
	27		W1115	0267	22		28-22-21	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D02150		1065/160/L063		PLUG				ALL
	A		W2604	0004	08		29-11-12	ALL
	B		W2604	0005	08		29-11-12	ALL
	C		W2604	0006	08		29-11-12	ALL
	D		W2604	0009	08		29-11-12	ALL
D02152		PPS226/ /		PLUG				ALL
	1		W5102	0007	18		29-32-11	ALL
	2		W5102	0006	18		29-32-11	ALL
	3		W5102	0028	18		29-32-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02100

Page 10

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02154		P36/ /		RELAY SOCKET (PLATE 'D')				ALL
	1		W1260	0646	22		76-11-11	001-099
	1		W1260	0390	22		76-11-11	115-199
	2		W1260	0385	20		76-11-11	ALL
	3		W1260	6487	22		76-11-11	ALL
	4		W1260	0384	20		76-11-11	ALL
	5		W1260	0653	24		76-11-11	001-099
	5		W1260	0386	24		76-11-11	115-199
	6		W1260	0387	24		76-11-11	ALL
	7		W1260	0391	22		76-11-11	ALL
	8		W1260	0395	22		76-11-11	001-099
	8		W1260	6488	22		76-11-11	115-199
D02158		P36/ /		RELAY SOCKET (PLATE 'D')				ALL
	1	UNUSED						ALL
	2	UNUSED						001-099
	2		W1260	0607	22		31-31-32	115-199
	3	UNUSED						001-099
	3		W1260	6489	22		76-11-11	115-199
	4	UNUSED						ALL
	5	UNUSED						001-099
	5		W1260	0606	22		31-31-32	115-199
	6	UNUSED						ALL
	7	UNUSED						001-099
	7		W1260	0397	22		SPARE	115-199
	8	UNUSED						ALL
D02162		P031-00/ /		PLUG				ALL
	1		W1136	4001R	24		24-23-11	ALL
	2		W1136	4001Y	24		24-23-11	ALL
	3		W1136	4001B	24		24-23-11	ALL
	4		W1136	4001G	24		24-23-11	ALL
	5	UNUSED						ALL
D02164		P006-00/ /		PLUG-				ALL
	1		W0072	4001R	24		24-23-11	ALL
	2		W0072	4001Y	24		24-23-11	ALL
	3		W0072	4001B	24		24-23-11	ALL
	4		W0072	4001G	24		24-23-11	ALL
	5	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02100

Page 11

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02166		P031-00/ /		PLUG				ALL
	1		W1136	4002R	24		24-23-11	ALL
	2		W1136	4002Y	24		24-23-11	ALL
	3		W1136	4002B	24		24-23-11	ALL
	4		W1136	4002G	24		24-23-11	ALL
	5	UNUSED						ALL
D02168		P031-00/ /		PLUG				ALL
	1		W1136	4003R	24		24-23-12	ALL
	2		W1136	4003Y	24		24-23-12	ALL
	3		W1136	4003B	24		24-23-12	ALL
	4		W1136	4003G	24		24-23-12	ALL
	5	UNUSED						ALL
D02172		P037-00/ /		RELAY SOCKET (PLATE 'B')				001-099
D02172		P37/ /		RELAY SOCKET (PLATE 'B')				115-199
	1		W1270	0393	22		35-21-11	ALL
	2		W1270	0412	22		35-21-11	ALL
	3	UNUSED						ALL
	4		W1270	0371	24		33-24-11	001-099
	4		W1270	0371	22		33-24-11	115-199
	5		W1270	0372	24		33-24-11	001-099
	5		W1270	0372	22		33-24-11	115-199
	6		W1270	0407	24		35-21-11	ALL
	7		W1270	0387	24		35-21-11	ALL
	8		W1270	0405	24		35-21-11	ALL
	9	UNUSED						ALL
	10		W1270	0350	24		23-31-13	ALL
	11		W1270	0349	24		23-31-13	ALL
	12		W1270	0411	22		35-21-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D02178		P037-00/ /		RELAY SOCKET (PLATE 'B')				001-099
D02178		P37/ /		RELAY SOCKET (PLATE 'B')				115-199
	A1		W1270	0401	16		35-21-11	ALL
	A2		W1270	0377	16		35-21-11	ALL
	A3	UNUSED						ALL
	B1		W1270	0397	16		35-21-11	ALL
	B2		W1270	0374	16		35-21-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02100

Page 12

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02178		P037-00/ /		RELAY SOCKET (PLATE 'B') (continued)				001-099
D02178		P37/ /		RELAY SOCKET (PLATE 'B') (continued)				115-199
	B3	UNUSED						ALL
	C1		W1270	0527	24		35-21-11	ALL
	C2		W1270	0523	22		35-21-11	ALL
	C3	UNUSED						ALL
	D1		W1270	0405	24		35-21-11	ALL
	D1		W1270	0406	24		35-21-11	ALL
	D2		W1270	0384	24		35-21-11	ALL
	D2		W1270	0385	24		35-21-11	ALL
	D3	UNUSED						ALL
	X1		W1270	0379	24		35-21-11	ALL
	X2		W1270	0526	24		35-21-11	ALL
	X2		W1270	0527	24		35-21-11	ALL
D02180		P037-00/ /		RELAY SOCKET (PLATE 'B')				001-099
D02180		P37/ /		RELAY SOCKET (PLATE 'B')				115-199
	A1		W1270	0402	16		35-21-11	ALL
	A2		W1270	0378	16		35-21-11	ALL
	A3	UNUSED						ALL
	B1		W1270	0398	16		35-21-11	ALL
	B2		W1270	0375	16		35-21-11	ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1		W1270	0406	24		35-21-11	ALL
	D1		W1270	0407	24		35-21-11	ALL
	D2		W1270	0385	24		35-21-11	ALL
	D2		W1270	0386	24		35-21-11	ALL
	D3	UNUSED						ALL
	X1		W1270	0386	24		35-21-11	ALL
	X1		W1270	0387	24		35-21-11	ALL
	X2		W1270	0131	24		35-21-11	ALL
D02182		P031-00/ /		RECP				ALL
	A1	UNUSED						ALL
	A2		W1136	0302	24		24-22-12	ALL
	A3		W1136	0103	20		24-22-12	ALL
	B1		W1136	0329	24		24-51-31	ALL
	B2		W1136	0303	24		24-22-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02100

Page 13

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02182		P031-00/ /		RECP (continued)				ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2		W1136	0044	22		29-11-31	ALL
	C3		W1136	0043	22		29-11-31	ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1136	0304	24		24-22-12	ALL
	X2		W1136	0007	18		24-22-12	ALL
D02184		P037-00/ /		PLUG (PLATE 'F')				001-099
D02184		P37/ /		PLUG (PLATE 'F')				115-199
	1		W1270	0131	24		35-21-11	ALL
	2		W1270	0132	22		35-21-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D02186		1191/193/R032		PLUG				ALL
	1		W2626	0059	20		26-21-11	ALL
	2	UNUSED						ALL
	3		W2626	0026	20		26-21-11	ALL
	4		W2626	0060	20		26-21-11	ALL
	5	UNUSED						ALL
D02188		1191/181/R034		PLUG				ALL
	1		W2088	0004R	20		26-21-11	ALL
	2		W2088	0005R	20		26-21-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W2088	0006R	20		26-21-11	ALL
D02190		1191/181/R040		PLUG				ALL
	1		W2088	0001R	20		26-21-11	ALL
	2		W2088	0002R	20		26-21-11	ALL
	3		W2088	0003R	20		26-21-11	ALL
D02192		P1-1/ /		PLUG				001-099
D02192		P001-1/ /		PLUG				115-199
	1		W0001	3006Y	24		33-13-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D02100

Page 14

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02192		P1-1/ /		PLUG (continued)				001-099
D02192		P001-1/ /		PLUG (continued)				115-199
	1		W0001	0295	24		33-13-11	115-199
	2		W0001	0095	20		33-13-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0001	3006B	24		33-13-11	001-099
	5		W0001	2018B	24		33-13-11	115-199
	6		W0001	3006R	24		33-13-11	001-099
	6		W0001	2018R	24		33-13-11	115-199
	7		W0001	0084	20		33-13-11	ALL
	8		W0001	0093	20		33-13-11	ALL
	9		W0001	0094	20		33-13-11	ALL
	10	UNUSED						ALL
	11		W0001	0083	20		33-13-11	ALL
	12		W0001	0170	24		33-13-11	ALL
D02198		P63/ /		PLUG-				001-099
	1	UNUSED						001-099
	2		W3052	0049	16		33-42-31	001-099
	3		W3052	0047	16		33-42-31	001-099
	4	UNUSED						001-099
	5	UNUSED						001-099
	6	UNUSED						001-099
	7		W3052	0046	20		33-42-31	001-099
	8		W3052	0048	16		33-42-31	001-099

HOOKUP LIST

D280N032

91-21-51

Section D02100

Page 15 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02200		230/154/4		PLUG				ALL
	1		W5202	0007	18		29-32-21	ALL
	2		W5202	0006	18		29-32-21	ALL
	3		W5202	0028	18		29-32-21	ALL
D02202		1065/160/R063		PLUG				ALL
	A		W2606	0004	08		29-11-22	ALL
	B		W2606	0005	08		29-11-22	ALL
	C		W2606	0006	08		29-11-22	ALL
	D		W2606	0009	08		29-11-22	ALL
D02204		1250/141/L052		PLUG-				ALL
	A		W2608	0004	08		29-11-31	ALL
	B		W2608	0005	08		29-11-31	ALL
	C		W2608	0006	08		29-11-31	ALL
	D		W2608	0009	08		29-11-31	ALL
D02206		1250/141/L052		PLUG-				ALL
	A		W2610	0004	08		29-11-31	ALL
	B		W2610	0005	08		29-11-31	ALL
	C		W2610	0006	08		29-11-31	ALL
	D		W2610	0009	08		29-11-31	ALL
D02208		P001-03/ /		PLUG				001-099
D02208		P001-3/ /		PLUG				115-199
	1		W0001	0145	20		33-13-12	ALL
	2		W0001	0146	20		33-13-12	ALL
	3		W0001	0301	24		77-12-11	ALL
	4		W0001	0305	20		77-12-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0001	2508R	24		77-12-11	ALL
	16		W0001	2508B	24		77-12-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02200

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02208		P001-03/ /		PLUG (continued)				001-099
D02208		P001-3/ /		PLUG (continued)				115-199
	17		W0001	5011Z			77-11-11	ALL
	18		W0001	5011R	24		77-11-11	ALL
	19		W0001	5011B	24		77-11-11	ALL
	20		W0001	0177	24		77-12-11	ALL
	21	TD	W0001	4501W	22		77-21-11	ALL
	22	TC	W0001	4501G	22		77-21-11	ALL
	23		W0001	2509R	24		77-12-31	ALL
	24		W0001	2509B	24		77-12-31	ALL
	DED		W0001	2508Z			77-12-11	ALL
	DED		W0001	2509Z			77-12-31	ALL
	DED		W0001	4501Z			77-21-11	ALL
D02210		P1-3/ /		PLUG				001-099
D02210		P001-3/ /		PLUG				115-199
	1	UNUSED						ALL
	2		W0001	0308	20		77-12-11	ALL
	3		W0001	0302	24		77-12-11	ALL
	4		W0001	0307	20		77-12-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0001	2502R	24		77-12-11	ALL
	16		W0001	2502B	24		77-12-11	ALL
	17		W0001	5003Z			77-11-11	ALL
	18		W0001	5003R	24		77-11-11	ALL
	19		W0001	5003B	24		77-11-11	ALL
	20		W0001	0178	24		77-12-11	ALL
	21	TD	W0001	4502W	22		77-21-11	001-099
	21	TC	W0001	4502W	22		77-21-11	115-199
	22	TC	W0001	4502G	22		77-21-11	001-099
	22	TD	W0001	4502G	22		77-21-11	115-199
	23		W0001	2504R	24		77-12-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02200

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02210		P1-3/ /		PLUG (continued)				001-099
D02210		P001-3/ /		PLUG (continued)				115-199
	24		W0001	2504B	24		77-12-31	ALL
	DED		W0001	2502Z			77-12-11	ALL
	DED		W0001	2504Z			77-12-31	ALL
	DED		W0001	4502Z			77-21-11	ALL
D02216		P037-00/ /		RELAY SOCKET (PLATE 'C')				001-099
D02216		P37/ /		RELAY SOCKET (PLATE 'C')				115-199
	1		W1270	0299	22		76-11-12	001-099
	1		W1270	0731	22		76-11-12	115-199
	2		W1270	0734	20		76-11-12	ALL
	3		W1270	6560	22		76-11-12	ALL
	4		W1270	0731	22		80-11-21	001-099
	4		W1270	0821	20		76-11-12	115-199
	5		W1270	0732	24		76-11-12	ALL
	6		W1270	0736	24		76-11-12	ALL
	7		W1270	0733	22		76-11-12	ALL
	8		W1270	0740	22		76-11-12	001-099
	8		W1270	6561	22		76-11-12	115-199
D02220		P037-00/ /		RELAY SOCKET (PLATE 'C')				001-099
D02220		P37/ /		RELAY SOCKET (PLATE 'C')				115-199
	1	UNUSED						ALL
	2	UNUSED						001-099
	2		W1270	0894	22		31-31-32	115-199
	3	UNUSED						001-099
	3		W1270	6562	22		76-11-12	115-199
	4	UNUSED						ALL
	5	UNUSED						001-099
	5		W1270	0895	22		31-31-32	115-199
	6	UNUSED						ALL
	7	UNUSED						001-099
	7		W1270	0741	22		76-11-12	115-199
	8	UNUSED						ALL
D02224		P032-00/ /		PLUG				ALL
	1		W1138	4002R	24		24-23-11	ALL
	2		W1138	4002Y	24		24-23-11	ALL
	3		W1138	4002B	24		24-23-11	ALL
	4		W1138	4002G	24		24-23-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02200

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02224		P032-00/ /		PLUG (continued)				ALL
	5	UNUSED						ALL
D02226		P006-00/ /		PLUG-				ALL
	1		W0074	4004R	24		24-23-11	ALL
	2		W0074	4004Y	24		24-23-11	ALL
	3		W0074	4004B	24		24-23-11	ALL
	4		W0074	4004G	24		24-23-11	ALL
	5	UNUSED						ALL
D02228		P034-00/ /		PLUG				001-099
D02228		P34/ /		PLUG				115-199
	1		W1128	4001R	24		24-23-11	ALL
	2		W1128	4001Y	24		24-23-11	ALL
	3		W1128	4001B	24		24-23-11	ALL
	4		W1128	4001G	24		24-23-11	ALL
	5	UNUSED						ALL
D02230		P032-00/ /		PLUG				ALL
	1		W1138	4003R	24		24-23-11	ALL
	2		W1138	4003Y	24		24-23-11	ALL
	3		W1138	4003B	24		24-23-11	ALL
	4		W1138	4003G	24		24-23-11	ALL
	5	UNUSED						ALL
D02232		P032-00/ /		PLUG				ALL
	1		W1138	4001R	24		24-23-12	ALL
	2		W1138	4001Y	24		24-23-12	ALL
	3		W1138	4001B	24		24-23-12	ALL
	4		W1138	4001G	24		24-23-12	ALL
	5	UNUSED						ALL
D02234		P034-00/ /		PLUG				001-099
D02234		P34/ /		PLUG				115-199
	1		W1128	4002R	24		24-23-12	ALL
	2		W1128	4002Y	24		24-23-12	ALL
	3		W1128	4002B	24		24-23-12	ALL
	4		W1128	4002G	24		24-23-12	ALL
	5	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02200

Page 4

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02236		P034-00/ /		PLUG				001-099
D02236		P34/ /		PLUG				115-199
	1		W1128	4003B	24		24-23-12	ALL
	2		W1128	4003Y	24		24-23-12	ALL
	3		W1128	4003R	24		24-23-12	ALL
	4		W1128	4003G	24		24-23-12	ALL
	5	UNUSED						ALL
D02238		APU/ /		PLUG				ALL
	1		W2808	3001R	18		24-21-41	ALL
	2	UNUSED						ALL
	3		W2808	4001G	20		24-21-41	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W2808	3001B	18		24-21-41	ALL
	7		W2808	3001Y	18		24-21-41	ALL
	8	UNUSED						ALL
	9		W2808	2501R	18		24-21-41	ALL
	10		W2808	2501B	18		24-21-41	ALL
	11	UNUSED						ALL
	12		W2808	4001R	20		24-21-41	ALL
	13		W2808	4001B	20		24-21-41	ALL
	14		W2808	4001Y	20		24-21-41	ALL
	DED		W2808	2501Z			24-21-41	ALL
D02242		P032-00/ /		PLUG				ALL
	A1	UNUSED						ALL
	A2		W1138	0012	24		24-22-22	ALL
	A3		W1138	0013	20		24-22-22	ALL
	B1		W1138	0131	24		24-51-31	ALL
	B2		W1138	0011	24		24-22-22	ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2		W1138	0155	22		29-11-31	ALL
	C3		W1138	0156	22		29-11-31	ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1138	0010	24		24-22-22	ALL
	X2		W1138	0009	20		24-22-22	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02200

Page 5

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02248		860/189/R058		PLUG				ALL
	1		W4004	0001	20		21-43-11	ALL
	2		W4004	0002	20		21-43-11	ALL
	3		W4004	0003	20		21-43-11	ALL
	4	UNUSED						ALL
	5		W4004	0004	24		21-43-11	ALL
	6		W4004	0005	24		21-43-11	ALL
	7		W4004	0006	16		21-43-11	ALL
D02252		847/170/L040		PLUG				ALL
	1		W4004	0007	20		21-43-11	ALL
	2		W4004	0008	24		21-43-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D02256		1178/185/R034		PLUG				ALL
	1		W2516	0053	16		33-31-11	ALL
	2	UNUSED						ALL
	3		W2516	1033	18		33-31-11	ALL
	4	UNUSED						ALL
	5		W2516	1017	16		33-31-11	ALL
	6		W2516	0014	16		33-31-11	ALL
	7	UNUSED						ALL
D02258		1744/275/L32		PLUG-				ALL
	1		W2818	0017	20		33-31-31	ALL
	2	UNUSED						ALL
	3	UNUSED						001-099
	3		W2818	0003	22		33-31-31	115-199
	4		W2818	0003	22		33-31-31	001-099
	4	UNUSED						115-199
	5		W2818	0016	20		33-31-31	ALL
	6		W2818	0018	20		33-31-31	ALL
	7	UNUSED						ALL
D02262		1878/217/R025		PLUG				001-099
D02262		1878.20/217/R 25		PLUG				115-199
	1	18	W2028	0009	18		26-22-21	001-099
	1		W2626	0020	20		26-22-21	115-199
	2	18	W2028	0013	18		26-22-21	001-099

HOOKUP LIST

D280N032

91-21-51

Section D02200

Page 6

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02262		1878/217/R025		PLUG (continued)				001-099
D02262		1878.20/217/R 25		PLUG (continued)				115-199
	2		W2626	0021	20		26-22-21	115-199
	3	18	W2028	0014	18		26-22-21	001-099
	3		W2626	0022	20		26-22-21	115-199
D02264		1878/217/R025		PLUG				001-099
D02264		1878/217/R 25		PLUG				115-199
	1	18	W2028	0010	18		26-22-21	001-099
	1		W2626	0023	20		26-22-21	115-199
	2	UNUSED						ALL
	3	18	W2028	0015	18		26-22-21	001-099
	3		W2626	0024	20		26-22-21	115-199
	4	18	W2028	0016	18		26-22-21	001-099
	4		W2626	0061	20		26-22-21	115-199
	5	UNUSED						ALL
D02266		1191/181/R052		PLUG				ALL
	1		W2090	0001R	20		26-21-11	ALL
	2		W2090	0002R	20		26-21-11	ALL
	3		W2090	0003R	20		26-21-11	ALL
D02268		1191/181/R046		PLUG				ALL
	1		W2090	0004R	20		26-21-11	ALL
	2		W2090	0005R	20		26-21-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W2090	0006R	20		26-21-11	ALL
D02270		1191/193/R044		PLUG				ALL
	1		W2628	0057	20		26-21-11	ALL
	2	UNUSED						ALL
	3		W2628	0013	20		26-21-11	ALL
	4		W2628	0045	20		26-21-11	ALL
	5	UNUSED						ALL
I D02275		P036-00/ /		RELAY SOCKET (PLATE 'A')				115-199
I	1		W1260	2503B	22		34-61-16	115-199
I	2		W1260	2504R	22		34-61-16	115-199
I	3		W1260	6247	22		34-61-16	115-199

HOOKUP LIST

D280N032

91-21-51

Section D02200

Page 7

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02275		P036-00/ /		RELAY SOCKET (PLATE 'A') (continued)				115-199
	4		W1260	2539R	22		34-61-16	115-199
	5		W1260	2503R	22		34-61-16	115-199
	6		W1260	2504B	22		34-61-16	115-199
	7		W1260	6246	22		34-61-16	115-199
	8		W1260	2539B	22		34-61-16	115-199
D02277		P037-00/ /		RELAY SOCKET (PLATE 'C')				115-199
	1		W1270	2500B	22		34-61-26	115-199
	2		W1270	2501R	22		34-61-26	115-199
	3		W1270	6347	24		34-61-26	115-199
	4		W1270	2502R	22		34-61-26	115-199
	5		W1270	2500R	22		34-61-26	115-199
	6		W1270	2501B	22		34-61-26	115-199
	7		W1270	6346	24		34-61-26	115-199
	8		W1270	2502B	22		34-61-26	115-199
D02279		P036-00/ /		RELAY SOCKET (PLATE 'A')				115-199
	1		W1260	2508B	22		34-61-16	115-199
	2		W1260	2510R	22		34-61-16	115-199
	3		W1260	6250	22		34-61-16	115-199
	4		W1260	2509R	22		34-61-16	115-199
	5		W1260	2508R	22		34-61-16	115-199
	6		W1260	2510B	22		34-61-16	115-199
	7		W1260	6249	22		34-61-16	115-199
	8		W1260	2509B	22		34-61-16	115-199
D02281		P037-00/ /		RELAY SOCKET (PLATE 'C')				115-199
	1		W1270	2503B	22		34-61-26	115-199
	2		W1270	2506R	22		34-61-26	115-199
	3		W1270	6350	24		34-61-26	115-199
	4		W1270	2504R	22		34-61-26	115-199
	5		W1270	2503R	22		34-61-26	115-199
	6		W1270	2506B	22		34-61-26	115-199
	7		W1270	6349	24		34-61-26	115-199
	8		W1270	2504B	22		34-61-26	115-199
D02283		P037-00/ /		RELAY SOCKET (PLATE 'C')				115-199
	1		W1270	2505B	22		34-61-26	115-199
	2		W1270	2507R	22		34-61-26	115-199
	3		W1270	6352	24		34-61-26	115-199

HOOKUP LIST

D280N032

91-21-51

Section D02200

Page 8

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02283		P037-00/ /		RELAY SOCKET (PLATE 'C') (continued)				115-199
	4		W1270	2506R	22		34-61-26	115-199
	5		W1270	2505R	22		34-61-26	115-199
	6		W1270	2507B	22		34-61-26	115-199
	7		W1270	6351	24		34-61-26	115-199
	8		W1270	2506B	22		34-61-26	115-199
	DED		W1270	2506Z			34-61-26	115-199
D02284		0629/190/R058		PLUG-				001-099
D02284		630/180/R58		PLUG-				115-199
	1		W4473	0048	20		35-11-13	001-099
	1		W4473	0209	22		35-11-13	115-199
	2		W4473	2004B	22		35-11-13	ALL
	3		W4473	2004R	22		35-11-13	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D02286		P65/ /		RELAY SOCKET-				ALL
	A1		W0808	0030	22		33-37-11	001-099
	A1		W0808	0030	20		33-37-11	115-199
	A2		W0808	0029	22		33-37-11	001-099
	A2		W0808	0029	20		33-37-11	115-199
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	C1	UNUSED						001-099
	C1		W0808	0028	22		25-51-11	115-199
	C2	UNUSED						001-099
	C2		W0808	0026	22		25-51-11	115-199
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0808	0027	20		33-37-11	ALL
	X2		W0808	0049	22		33-37-11	ALL
D02287		E6 RLY/PNL/		RELAY SOCKET				ALL
	A1		W1024	0293	18		33-37-21	ALL
	A2		W1024	0292	20		33-37-21	ALL
	A3	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02200

Page 9

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02287		E6 RLY/PNL/		RELAY SOCKET (continued)				ALL
	B1	UNUSED						001-099
	B1		W1024	0265	22		25-51-21	115-199
	B2	UNUSED						001-099
	B2		W1024	0264	22		25-51-21	115-199
	B3	UNUSED						ALL
	C1	UNUSED						001-099
	C1		W1024	0209	20		33-37-21	115-199
	C2	UNUSED						001-099
	C2		W1024	0257	18		33-37-21	115-199
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1024	0294	22		33-37-21	ALL
	X2		W1024	0295	22		33-37-21	ALL
D02290A		E001-01/ /		PLUG				ALL
	1		W1310	0011	20		30-41-12	ALL
	2		W1310	0010	20		30-41-12	ALL
	3		W1310	0012	20		30-41-12	ALL
	4		W1310	0013	20		30-41-12	ALL
	5		W1310	0014	20		30-41-12	ALL
	6		W1310	0005	22		30-41-12	ALL
	7		W1310	0006	22		30-41-12	ALL
	8		W1310	0007	22		30-41-12	ALL
	9		W1310	0008	22		30-41-12	ALL
	10		W1310	0009	22		30-41-12	ALL
	11		W1310	0001	20		30-41-12	ALL
	12		W1310	0002	22		30-41-11	ALL
	13		W1310	2502B	22		30-41-12	001-099
	13		W1310	2501B	22		30-41-12	115-199
	14		W1310	2502R	22		30-41-12	001-099
	14		W1310	2501R	22		30-41-12	115-199
	15	UNUSED						ALL
	16		W1310	0004	20		30-41-12	ALL
	17		W1310	2505B	22		30-41-12	001-099
	17		W1310	2504B	22		30-41-12	115-199
	18		W1310	2505R	22		30-41-12	001-099
	18		W1310	2504R	22		30-41-12	115-199
	19		W1310	2508B	22		30-41-12	001-099

HOOKUP LIST

D280N032

91-21-51

Section D02200

Page 10

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02290A		E001-01/ /		PLUG (continued)				ALL
	19		W1310	2507B	22		30-41-12	115-199
	20		W1310	2508R	22		30-41-12	001-099
	20		W1310	2507R	22		30-41-12	115-199
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	DED		W1310	2502Z			30-41-12	001-099
	DED		W1310	2505Z			30-41-12	001-099
	DED		W1310	2508Z			30-41-12	001-099
	DED		W1310	2501Z			30-41-12	115-199
	DED		W1310	2504Z			30-41-12	115-199
	DED		W1310	2507Z			30-41-12	115-199
D02290B		E001-01/ /		PLUG				ALL
	1		W1310	2002B	12		30-41-12	ALL
	2		W1310	2002R	12		30-41-12	ALL
	3		W1310	0015	12		30-41-12	ALL
	4		W1310	2001B	12		30-41-12	ALL
	5		W1310	2001R	12		30-41-12	ALL
	6		W1310	0016	12		30-41-12	ALL
	7	UNUSED						ALL
D02292		ISS94/ /		RCPT-				ALL
	1	UNUSED						ALL
	2		W3424	0019	12		33-42-12	ALL
	3		W3424	1002	12		33-42-12	ALL
	4	UNUSED						ALL
	5		W3424	2501B	20		33-42-12	ALL
	6	UNUSED						ALL
	7		W3424	2501R	20		33-42-12	ALL
	8		W3424	1001	12		33-42-12	ALL
D02294		P62/ /		PLUG-				ALL
	1	UNUSED						ALL
	2		W3052	0044	12		33-42-12	001-099
	2		W3054	0018	12		33-42-12	115-199
	3		W3052	0040	12		33-42-12	001-099

HOOKUP LIST

D280N032

91-21-51

Section D02200

Page 11

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02294		P62/ /		PLUG- (continued)				ALL
	3		W3054	0014	12		33-42-12	115-199
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W3052	0045	18		33-42-12	001-099
	7		W3054	0019	18		33-42-12	115-199
	8		W3052	0042	12		33-42-12	001-099
	8		W3054	0016	12		33-42-12	115-199

HOOKUP LIST

D280N032

91-21-51

Section D02200

Page 12 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02304A		E1-2/ /		PLUG				ALL
	1		W1320	0011	20		30-41-11	ALL
	2		W1320	0010	20		30-41-11	ALL
	3		W1320	0012	20		30-41-11	ALL
	4		W1320	0013	20		30-41-11	ALL
	5		W1320	0014	20		30-41-11	ALL
	6		W1320	0005	22		30-41-11	ALL
	7		W1320	0006	22		30-41-11	ALL
	8		W1320	0007	22		30-41-11	ALL
	9		W1320	0008	22		30-41-11	ALL
	10		W1320	0009	22		30-41-11	ALL
	11		W1320	0001	20		30-41-11	ALL
	12		W1320	0002	22		30-41-11	ALL
	13		W1320	2502B	22		30-41-11	001-099
	13		W1320	2501B	22		30-41-11	115-199
	14		W1320	2502R	22		30-41-11	001-099
	14		W1320	2501R	22		30-41-11	115-199
	15	UNUSED						ALL
	16		W1320	0004	20		30-41-11	ALL
	17		W1320	2505B	22		30-41-11	001-099
	17		W1320	2504B	22		30-41-11	115-199
	18		W1320	2505R	22		30-41-11	001-099
	18		W1320	2504R	22		30-41-11	115-199
	19		W1320	2508B	22		30-41-11	001-099
	19		W1320	2507B	22		30-41-11	115-199
	20		W1320	2508R	22		30-41-11	001-099
	20		W1320	2507R	22		30-41-11	115-199
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
DED			W1320	2502Z			30-41-11	001-099
DED			W1320	2505Z			30-41-11	001-099
DED			W1320	2508Z			30-41-11	001-099
DED			W1320	2501Z			30-41-11	115-199
DED			W1320	2504Z			30-41-11	115-199
DED			W1320	2507Z			30-41-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D02300

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02304B		E1-2/ /		PLUG				ALL
	1		W1320	2002R	12		30-41-11	ALL
	2		W1320	2002B	12		30-41-11	ALL
	3		W1320	0015	12		30-41-11	ALL
	4		W1320	2001B	12		30-41-11	ALL
	5		W1320	2001R	12		30-41-11	ALL
	6		W1320	0016	12		30-41-11	ALL
	7	UNUSED						ALL
D02306		FSS94.5/184/L088		PLUG-				ALL
	1	UNUSED						ALL
	2		W3346	0012	12		33-42-11	ALL
	3		W3346	1001	12		33-42-11	ALL
	4	UNUSED						ALL
	5		W3346	2501B	20		33-42-11	ALL
	6	UNUSED						ALL
	7		W3346	2501R	20		33-42-11	ALL
	8		W3346	1002	12		33-42-11	ALL
D02308		P063-00/ /		PLUG-				ALL
	1	UNUSED						ALL
	2		W3052	0006	12		33-42-11	ALL
	3		W3052	0003	12		33-42-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W3052	0007	20		33-42-11	ALL
	8		W3052	0008	12		33-42-11	ALL
D02318		590/204/R065		PLUG-				001-099
D02318		590/204/R65		PLUG-				115-199
	1		W4162	0030	20		52-34-11	ALL
	2		W4162	0031	20		52-34-11	ALL
	3		W4162	0032	20		52-34-11	ALL
	4	UNUSED						ALL
	5		W4162	0035	20		52-34-11	ALL
D02322		1420/195/R65		PLUG-				ALL
	1	16	W2662	0032	16		52-35-11	001-099
	1		W2662	0046	20		52-35-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D02300

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02322		1420/195/R65		PLUG- (continued)				ALL
	2	16	W2662	0033	16		52-35-11	001-099
	2		W2662	0047	20		52-35-11	115-199
	3	16	W2662	0034	16		52-35-11	001-099
	3		W2662	0048	20		52-35-11	115-199
	4	UNUSED						ALL
	5		W2662	0035	20		52-35-11	ALL
D02330		P54/ /		PLUG				ALL
	1		W1120	0124	24		26-11-21	001-099
	1		W1120	0063	24		26-11-21	115-199
	2		W1120	0111	24		26-11-21	001-099
	2		W1120	0223	24		26-11-21	115-199
	3		W1120	0109	24		26-11-21	001-099
	3		W1120	0069	24		26-11-21	115-199
	4		W1120	0478	22		26-11-21	001-099
	4		W1120	0075	24		26-11-21	115-199
	5		W1120	0134	24		26-11-21	001-099
	5		W1120	0086	24		26-11-21	115-199
	6	UNUSED						ALL
	7		W1120	0120	24		26-11-21	001-099
	7		W1120	0088	24		26-11-21	115-199
	8		W1120	0123	24		26-11-21	001-099
	8		W1120	0089	24		26-11-21	115-199
	9		W1120	0108	24		26-11-21	001-099
	9		W1120	0068	24		26-11-21	115-199
	10		W1120	0122	24		26-11-21	001-099
	10		W1120	0090	24		26-11-21	115-199
	11		W1120	0119	24		26-11-21	001-099
	11		W1120	0091	24		26-11-21	115-199
	12	UNUSED						ALL
	13		W1120	0118	24		26-11-21	001-099
	13		W1120	0220	24		26-11-21	115-199
	14		W1120	0117	22		26-11-21	001-099
	14		W1120	0219	22		26-11-21	115-199
	15		W1120	0128	24		26-11-21	001-099
	15		W1120	0070	24		26-11-21	115-199
	16		W1120	0113	22		26-11-21	001-099
	16		W1120	0077	24		26-11-21	115-199
	17		W1120	0115	22		26-11-21	001-099
	17		W1120	0079	22		26-11-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section D02300

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02330		P54/ /		PLUG (continued)				ALL
	18		W1120	0153	22		26-11-22	001-099
	18		W1120	0095	22		26-11-22	115-199
	19		W1120	0162	24		26-11-22	001-099
	19		W1120	0099	24		26-11-22	115-199
	20		W1120	0156	22		26-11-22	001-099
	20		W1120	0224	22		26-11-22	115-199
	21		W1120	0157	22		26-11-22	001-099
	21		W1120	0226	22		26-11-22	115-199
	22		W1120	0158	24		26-11-22	001-099
	22		W1120	0094	24		26-11-22	115-199
	23		W1120	0149	24		26-11-22	001-099
	23		W1120	0114	24		26-11-22	115-199
	24	UNUSED						ALL
	25		W1120	0151	22		26-11-22	001-099
	25		W1120	0107	22		26-11-22	115-199
	26	UNUSED						ALL
	27		W1120	0143	24		26-11-22	001-099
	27		W1120	0112	24		26-11-22	115-199
	28		W1120	0160	24		26-11-22	001-099
	28		W1120	0102	24		26-11-22	115-199
	29		W1120	0146	24		26-11-22	001-099
	29		W1120	0111	24		26-11-22	115-199
	30		W1120	0144	24		26-11-22	001-099
	30		W1120	0110	24		26-11-22	115-199
	31	UNUSED						ALL
	32		W1120	0154	22		26-11-22	001-099
	32		W1120	0096	22		26-11-22	115-199
	33		W1120	0159	24		26-11-22	001-099
	33		W1120	0106	24		26-11-22	115-199
	34		W1120	0147	24		26-11-22	001-099
	34		W1120	0116	24		26-11-22	115-199
	35		W1120	PJ01			26-11-21	ALL
	36		W1120	0132	24		26-11-21	001-099
	36		W1120	0092	24		26-11-21	115-199
	37	UNUSED						ALL
	38	UNUSED						ALL
	39		W1120	0126	24		26-11-21	001-099
	39		W1120	0072	24		26-11-21	115-199
	40	UNUSED						ALL
	41	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02300

Page 4

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02330		P54/ I		PLUG (continued)				ALL
	42		W1120	0118	24		26-11-21	001-099
	42		W1120	0220	24		26-11-21	115-199
	43	UNUSED						ALL
	44		W1120	0107	24		26-11-21	001-099
	44		W1120	0067	24		26-11-21	115-199
	45		W1120	0125	24		26-11-21	001-099
	45		W1120	0073	24		26-11-21	115-199
	46		W1120	0116	22		26-11-21	001-099
	46		W1120	0227	22		26-11-21	115-199
	47		W1120	0110	24		26-11-21	001-099
	47		W1120	0093	24		26-11-21	115-199
	48		W1120	0106	24		26-11-21	001-099
	48		W1120	0066	24		26-11-21	115-199
	49		W1120	0112	22		26-11-21	001-099
	49		W1120	0076	24		26-11-21	115-199
	50		W1120	0114	22		26-11-21	001-099
	50		W1120	0078	22		26-11-21	115-199
	51		W1120	0152	22		26-11-22	001-099
	51		W1120	0109	22		26-11-22	115-199
	52		W1120	0145	24		26-11-22	001-099
	52		W1120	0113	24		26-11-22	115-199
	53		W1120	0155	24		26-11-22	001-099
	53		W1120	0225	24		26-11-22	115-199
	54		W1120	0163	24		26-11-22	001-099
	54		W1120	0100	24		26-11-22	115-199
	55		W1120	0127	24		26-11-21	001-099
	55		W1120	0071	24		26-11-21	115-199
	56	UNUSED						ALL
	57	UNUSED						ALL
	58	UNUSED						ALL
	59	UNUSED						ALL
	60		W1120	0155	24		26-11-22	001-099
	60		W1120	0225	24		26-11-22	115-199
	61	UNUSED						ALL
	62		W1120	0148	24		26-11-22	001-099
	62		W1120	0105	24		26-11-22	115-199
	63		W1120	0150	24		26-11-22	001-099
	63		W1120	0103	24		26-11-22	115-199
	64	UNUSED						ALL
	65		W1120	0161	24		26-11-22	001-099

HOOKUP LIST

D280N032

91-21-51

Section D02300

Page 5

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02330		P54/ /		PLUG (continued)				ALL
	65		W1120	0101	24		26-11-22	115-199
	66		W1120	PJ01			26-11-21	ALL
D02332		1650/175/L051		PLUG				ALL
	1		W2634	2002R	20		21-31-11	ALL
	2		W2634	0007	20		21-31-11	ALL
	3		W2634	0096	20		21-31-11	ALL
	4	UNUSED						ALL
	5		W2634	2002B	20		21-31-11	ALL
	6		W2634	0008	20		21-31-11	ALL
	7		W2634	0009	20		21-31-11	ALL
	8	UNUSED						ALL
	9		W2634	2501R	24		21-31-11	ALL
	10		W2634	2501B	24		21-31-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D02334		1650/178/L045		PLUG				ALL
	1		W2634	3002Y	22		21-31-31	ALL
	2		W2634	3002B	22		21-31-31	ALL
	3		W2634	3002R	22		21-31-31	ALL
	4	UNUSED						ALL
	5		W2634	2001B	24		21-31-11	ALL
	6		W2634	2001R	24		21-31-11	ALL
	7	UNUSED						ALL
	8		W2634	2009B	24		21-31-21	ALL
	9		W2634	2009R	24		21-31-21	ALL
	10	UNUSED						ALL
	11		W2634	0010	24		21-31-11	ALL
	12	UNUSED						ALL
D02336		1650/178/L045		PLUG				001-099
D02336		1650/175/L051		PLUG				115-199
	1		W2632	2008R	20		21-31-21	ALL
	2		W2632	0053	20		21-31-21	ALL
	3		W2632	0096	20		21-31-21	ALL
	4	UNUSED						ALL
	5		W2632	2008B	20		21-31-21	ALL
	6		W2632	0054	20		21-31-21	ALL
	7		W2632	0065	20		21-31-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02300

Page 6

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02336		1650/178/L045		PLUG (continued)				001-099
D02336		1650/175/L051		PLUG (continued)				115-199
	8	UNUSED						ALL
	9		W2632	2501R	24		21-31-21	ALL
	10		W2632	2501B	24		21-31-21	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D02338		1650/182/L045		PLUG				001-099
D02338		1650/178/L45		PLUG				115-199
	1		W2626	0018	20		21-31-31	ALL
	2		W2626	0017	20		21-31-31	ALL
	3		W2626	0019	20		21-31-31	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D02340A		E5-1/ /		PLUG				ALL
	A01		W1282	4251R	22		21-31-11	ALL
	A02		W1282	0025	24		21-31-11	ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05		W1282	5005B	24		21-31-11	ALL
	A06	UNUSED						ALL
	A07		W1282	2039B	24		21-31-11	ALL
	A08		W1282	2039R	24		21-31-11	ALL
	A09	UNUSED						ALL
	A10		W1282	2003B	24		21-31-11	ALL
	A11		W1282	2003R	24		21-31-11	ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15		W1282	0031	22		21-31-11	ALL
	B01		W1282	4251B	22		21-31-11	ALL
	B02		W1282	0023	24		21-31-11	ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06		W1282	5005R	24		21-31-11	ALL
	B07	UNUSED						ALL
	B08		W1282	0026	24		21-31-11	ALL
	B09	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02300

Page 7

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02340A		E5-1/ /		PLUG (continued)				ALL
	B10	UNUSED						ALL
	B11		W1282	2504R	24		21-31-11	ALL
	B12		W1282	0295	22		21-31-11	ALL
	B13		W1282	2002R	22		21-31-11	ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01		W1282	4251Y	22		21-31-11	ALL
	C02	UNUSED						ALL
	C03		W1282	2005B	24		21-31-21	ALL
	C04		W1282	2005R	24		21-31-21	ALL
	C05		W1282	5006B	24		21-31-11	ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11		W1282	2504B	24		21-31-11	ALL
	C12		W1282	0020	22		21-31-11	ALL
	C13		W1282	2002B	22		21-31-11	ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01		W1282	4251G	22		21-31-11	ALL
	D02		W1282	0030	24		21-31-11	ALL
	D03		W1282	2004R	24		21-31-21	ALL
	D04		W1282	2004B	24		21-31-21	ALL
	D05	UNUSED						ALL
	D06		W1282	5006R	24		21-31-11	ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10		W1282	0029	24		21-31-11	001-003, 005, 007-008, 115-199
	D10	UNUSED						004, 006
	D10		W1282	0283	24		21-31-11	009-099
	D11		W1282	0029	24		21-31-11	ALL
	D12	UNUSED						001-003, 005, 007-008, 115-199
	D12		W1282	0029	24		21-31-11	004, 006
	D12		W1282	0240	24		21-31-11	009-099
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15		W1282	0032	22		21-31-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02300

Page 8

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02340A		E5-1/ /		PLUG (continued)				ALL
			W1282	0019	20		21-31-11	ALL
			W1282	4251Z			21-31-11	ALL
			W1282	5005Z			21-31-11	ALL
			W1282	5006Z			21-31-11	ALL
D02340B		E5-1/ /		PLUG				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02300

Page 9

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02340B		E5-1/ /		PLUG (continued)				ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
D02340C		E5-1/ /		PLUG				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	= C1	UNUSED						ALL
	= C5	UNUSED						ALL
D02342A		E5-2/ /		PLUG-				ALL
	A01		W1284	4251R	22		21-31-21	ALL
	A02		W1284	0137	24		21-31-21	ALL
	A03	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02300

Page 10

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02342A		E5-2/ /		PLUG- (continued)				ALL
	A04	UNUSED						ALL
	A05		W1284	5024B	24		21-31-21	ALL
	A06	UNUSED						ALL
	A07		W1284	2020R	24		21-31-21	ALL
	A08		W1284	2020B	24		21-31-21	ALL
	A09	UNUSED						ALL
	A10		W1284	2022B	24		21-31-21	ALL
	A11		W1284	2022R	24		21-31-21	ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15		W1284	0135	22		21-31-21	ALL
	B01		W1284	4251B	22		21-31-21	ALL
	B02		W1284	0141	24		21-31-21	ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06		W1284	5024R	24		21-31-21	ALL
	B07	UNUSED						ALL
	B08		W1284	0142	24		21-31-21	ALL
	B09		W1284	0215	24		21-31-21	ALL
	B10		W1284	0215	24		21-31-21	ALL
	B11		W1284	2503R	24		21-31-21	ALL
	B12		W1284	0198	22		21-31-21	ALL
	B13		W1284	2021R	22		21-31-21	ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01		W1284	4251Y	22		21-31-21	ALL
	C02	UNUSED						ALL
	C03		W1284	2018R	24		21-31-21	ALL
	C04		W1284	2018B	24		21-31-21	ALL
	C05		W1284	5025B	24		21-31-21	ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11		W1284	2503B	24		21-31-21	ALL
	C12		W1284	0139	22		21-31-21	ALL
	C13		W1284	2021B	22		21-31-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02300

Page 11

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02342A		E5-2/ /		PLUG- (continued)				ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01		W1284	4251G	22		21-31-21	ALL
	D02		W1284	0138	24		21-31-21	ALL
	D03		W1284	2019B	24		21-31-21	ALL
	D04		W1284	2019R	24		21-31-21	ALL
	D05	UNUSED						ALL
	D06		W1284	5025R	24		21-31-21	ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10		W1284	0214	24		21-31-21	001-003, 005, 007-099, 115-199
	D10	UNUSED						004, 006
	D11		W1284	0214	24		21-31-21	001-008, 115-199
	D11		W1284	0283	24		21-31-21	009-099
	D12	UNUSED						001-003, 005, 007-008, 115-199
	D12		W1284	0214	24		21-31-21	004, 006
	D12		W1284	0278	24		21-31-21	009-099
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15		W1284	0136	22		21-31-21	ALL
			W1284	0140	22		21-31-21	ALL
			W1284	0143	20		21-31-21	ALL
			W1284	0197	20		21-31-21	ALL
			W1284	2503Z			21-31-21	ALL
			W1284	4251Z			21-31-21	ALL
			W1284	5024Z			21-31-21	ALL
			W1284	5025Z			21-31-21	ALL
D02342B		E5-2/ /		PLUG-				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02300

Page 12

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02342B		E5-2/ /		PLUG- (continued)				ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02300

Page 13

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02342B		E5-2/ /		PLUG- (continued)				ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
D02342C		E5-2/ /		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	= C1	UNUSED						ALL
	= C5	UNUSED						ALL
D02344		P005-00/ /		PLUG				001-099
D02344		P5/ /		PLUG				115-199
	1		W2066	0391	20		33-13-32	ALL
	2		W2066	0392	20		33-13-32	ALL
	3		W2066	0332	22		33-16-62	ALL
	4		W2066	0333	22		33-16-52	ALL
	5		W2066	0148	22		21-31-11	ALL
	6	UNUSED						ALL
	7		W2066	0004	24		21-31-11	ALL
	8		W2066	4251G	22		21-31-11	ALL
	9		W2066	4251B	22		21-31-11	ALL
	10		W2066	4252G	22		21-31-21	ALL
	11		W2066	4252B	22		21-31-21	ALL
	12		W2066	1005	24		21-31-21	ALL
	13	UNUSED						ALL
	14		W2066	FRAC			21-31-11	ALL
	15		W2066	1003	20		21-31-21	ALL
	16		W2066	0007	20		21-31-11	ALL
	17		W2066	0146	20		21-31-11	ALL
	18	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02300

Page 14

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02344		P005-00/ /		PLUG (continued)				001-099
D02344		P5/ /		PLUG (continued)				115-199
	19		W2066	0006	24		21-31-11	ALL
	20		W2066	4251Y	22		21-31-11	ALL
	21		W2066	4251R	22		21-31-11	ALL
	22		W2066	4252Y	22		21-31-21	ALL
	23		W2066	4252R	22		21-31-21	ALL
	24		W2066	1004	24		21-31-21	ALL
	25		W2066	1002	24		21-31-21	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W2066	1001	24		21-31-21	ALL
	29		W2066	0147	20		21-31-11	ALL
	30		W2066	0005	24		21-31-11	ALL
	31		W2066	0071	24		21-31-11	ALL
	CAP	Y	W2066	0508	20		SPARE	115-199
	CAP	Y	W2066	0509	20		SPARE	115-199
	CAP	Y	W2066	0539	20		SPARE	115-199
	DED		W2066	1001Z			21-31-21	ALL
	DED		W2066	1002Z			21-31-21	ALL
	DED		W2066	1003Z			21-31-21	ALL
	DED		W2066	1004Z			21-31-21	ALL
	DED		W2066	1005Z			21-31-21	ALL
			W2066	0410	22		21-31-21	ALL
			W2066	0558	22		21-31-11	ALL
			W2066	4251Z			21-31-11	ALL
			W2066	4252Z			21-31-21	ALL
			W2066	FRAC			21-31-11	ALL
D02346		P005-00/ /		PLUG				001-099
D02346		P5/ /		PLUG				115-199
	1		W2078	0210	22		21-31-11	ALL
	2		W2078	0004	20		21-31-31	ALL
	3		W2078	0005	20		21-31-31	ALL
	4		W2078	3003R	22		21-31-31	ALL
	5		W2078	3003B	22		21-31-31	ALL
	6		W2078	3003Y	22		21-31-31	ALL
	7	UNUSED						ALL
	8		W2078	0167	20		21-31-31	ALL
	9		W2078	0168	20		21-31-31	001-003, 005, 007-099, 115-199
	9	UNUSED						004, 006

HOOKUP LIST

D280N032

91-21-51

Section D02300

Page 15

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02346		P005-00/ /		PLUG (continued)				001-099
D02346		P5/ /		PLUG (continued)				115-199
	10		W2078	0168	20		21-31-31	ALL
	11	UNUSED						001-003, 005, 007-099, 115-199
	11		W2078	0168	20		21-31-31	004, 006
	12	UNUSED						ALL
	CAP	Y	W2078	0410	20		SPARE	115-199
	CAP	Y	W2078	0411	20		SPARE	115-199
	CAP	Y	W2078	0412	20		SPARE	115-199
D02348		P032-00/ /		PLUG				115-199
	1		W1138	0107	22		25-31-21	115-199
	2		W1138	0108	22		25-31-21	115-199
	3		W1138	0109	22		25-31-21	115-199
	4		W1138	0110	22		25-31-21	115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
	8		W1138	0113	20		25-31-21	115-199
	9		W1138	0122	20		25-31-21	115-199
	10		W1138	0114	20		25-31-21	115-199
	11		W1138	0111	22		25-31-21	115-199
	12		W1138	0144	22		25-31-21	115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16		W1138	0106	22		25-31-21	115-199
	17		W1138	0106	22		25-31-21	115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
D02352		P031-00/ /		PLUG				ALL
	1		W1136	0137	22		25-31-33	ALL
	2		W1136	0138	22		25-31-33	ALL
	3		W1136	0139	22		25-31-33	ALL
	4		W1136	0140	22		25-31-33	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02300

Page 16

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02352		P031-00/ /		PLUG (continued)				ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	18	W1136	0040	18		25-31-33	001-099
	8	18	W1136	0353	18		25-31-33	115-199
	9		W1136	0141	20		25-31-33	ALL
	10		W1136	0014	20		25-31-33	ALL
	11		W1136	0135	22		25-31-33	ALL
	12	UNUSED						ALL
	13		W1136	0133	22		25-31-33	001-099
	13		W1136	0135	22		25-31-33	115-199
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W1136	0136	22		25-31-33	ALL
	17		W1136	0136	22		25-31-33	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D02358		1666/165/L006		PLUG				ALL
	1		W2632	0061	18		21-58-21	ALL
	2		W2632	0060	18		21-58-21	ALL
	3		W2632	0059	18		21-58-21	ALL
	4	UNUSED						ALL
	5		W2632	0057	20		21-58-21	ALL
	6		W2632	0058	20		21-58-21	ALL
	7		W2632	0062	16		21-58-21	ALL
D02360		1679/172/L019		PLUG				ALL
	1		W2634	0005	18		21-58-21	ALL
	2		W2634	0004	18		21-58-21	ALL
	3		W2634	0003	18		21-58-21	ALL
	4	UNUSED						ALL
	5		W2634	0001	20		21-58-21	ALL
	6		W2634	0002	20		21-58-21	ALL
	7		W2634	0006	16		21-58-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02300

Page 17

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02362		P54/ /		PLUG				ALL
	1		W1120	0057	24		26-11-12	001-099
	1		W1120	0504	24		26-11-12	115-199
	2		W1120	PK01			26-11-12	ALL
	3		W1120	0053	22		26-11-12	001-099
	3		W1120	0056	22		26-11-12	115-199
	4	UNUSED						ALL
	5		W1120	PK01			26-11-12	ALL
	6		W1120	0059	24		26-11-12	001-099
	6		W1120	0053	24		26-11-12	115-199
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1120	0060	24		26-11-12	001-099
	10		W1120	0052	24		26-11-12	115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1120	0058	24		26-11-12	001-099
	14		W1120	0054	24		26-11-12	115-199
	15	UNUSED						ALL
	16		W1120	0061	24		26-11-12	001-099
	16		W1120	0051	24		26-11-12	115-199
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W1120	0054	24		26-11-12	001-099
	19		W1120	0061	24		26-11-12	115-199
	20		W1120	0055	24		26-11-12	001-099
	20		W1120	0062	24		26-11-12	115-199
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02300

Page 18

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02362		P54/ /		PLUG (continued)				ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D02372		P3-1/ /		PLUG				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0003	0054	22		32-31-11	ALL
	4		W0003	0055	22		32-31-11	ALL
	5		W0003	0057	24		33-42-12	001-099
	5		W0003	0057	20		33-42-12	115-199
	6		W0003	0047	24		32-61-12	001-099
	6		W0003	0047	22		32-61-12	115-199
	7		W0003	0206	20		32-61-12	ALL
	8		W0003	0258	24		32-61-12	ALL
	9		W0003	0048	24		32-61-12	001-099
	9		W0003	0048	22		32-61-12	115-199
	10	UNUSED						ALL
	11		W0003	0254	20		32-61-12	ALL
	12	UNUSED						ALL
	13		W0003	0255	22		32-61-12	ALL
	14		W0003	0256	22		32-61-12	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02300

Page 19

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02374		P1-3/ /		PLUG				001-099
D02374		P001-3/ /		PLUG				115-199
	1		W0001	0101	22		32-42-12	001-099
	1		W0001	0101	20		32-42-12	115-199
	2	UNUSED						ALL
	3	UNUSED						001-099
	3		W0001	0447	22		31-31-63	115-199
	4	UNUSED						001-099
	4		W0001	0444	22		31-31-63	115-199
	5	UNUSED						001-099
	5		W0001	0445	22		31-31-63	115-199
	6	UNUSED						001-099
	6		W0001	0446	22		31-31-63	115-199
	7	UNUSED						001-099
	7		W0001	0437	22		31-31-63	115-199
	8	UNUSED						001-099
	8		W0001	0438	22		31-31-63	115-199
	9		W0001	0436	22		32-42-12	001-099
	9		W0001	0440	22		32-42-12	115-199
	10	UNUSED						ALL
	11		W0001	0111	22		32-42-12	ALL
	12		W0001	0112	22		32-42-12	ALL
	13	UNUSED						ALL
	14		W0001	0114	22		32-42-12	ALL
	15		W0001	0115	22		32-42-12	ALL
	16		W0001	0116	22		32-42-12	ALL
	17		W0001	0117	22		32-42-12	ALL
	18		W0001	0118	22		32-42-12	ALL
	19		W0001	0129	22		32-42-12	ALL
	20	UNUSED						ALL
	21	UNUSED						001-099
	21		W0001	0436	22		31-31-31	115-199
	22	UNUSED						ALL
	23		W0001	0123	22		32-42-12	ALL
	24		W0001	0124	22		32-42-12	ALL
	25	UNUSED						ALL
	26		W0001	0126	22		32-42-12	ALL
	27		W0001	0127	22		32-42-12	ALL
	28		W0001	0128	22		32-42-12	ALL
	29	UNUSED						ALL
	30		W0001	0130	22		32-42-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02300

Page 20

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02374		P1-3/ /		PLUG (continued)				001-099
D02374		P001-3/ /		PLUG (continued)				115-199
	31		W0001	0131	22		32-42-12	ALL
	32		W0001	0132	22		32-42-12	ALL
	33		W0001	0133	22		32-42-12	ALL
	34		W0001	0134	22		32-42-12	ALL
	35		W0001	0135	22		32-42-12	ALL
	36		W0001	0475	22		32-42-12	001-099
	36		W0001	0435	22		32-42-12	115-199
	37		W0001	0137	22		32-42-12	ALL
	38		W0001	0138	22		32-42-12	ALL
	39		W0001	0139	22		32-42-12	ALL
	40		W0001	0140	22		32-42-12	ALL
	41		W0001	0141	22		32-42-12	ALL
D02376		1040/177/L48		PLUG-				ALL
	1		W2416	1003	20		28-42-21	ALL
	2	18	W2416	0043	18		28-42-21	ALL
	3	UNUSED						ALL
	4	18	W2416	0044	18		28-42-21	ALL
	5	UNUSED						ALL
D02378		E6 RLY/PNL/		RELAY SOCKET				ALL
	A1		W1024	0021	22		49-61-11	ALL
	A2		W1024	0020	22		49-61-11	ALL
	A3		W1024	0039	22		49-61-11	ALL
	B1		W1024	0057	24		28-25-21	ALL
	B2		W1024	1004	24		28-25-21	ALL
	B3		W1024	0055	24		28-25-21	ALL
	C1		W1024	0018	20		28-25-11	ALL
	C2		W1024	0017	24		28-25-11	ALL
	C3	UNUSED						ALL
	D1		W1024	0097	20		28-25-11	ALL
	D2		W1024	0072	20		28-25-11	ALL
	D3	UNUSED						ALL
	X1		W1024	0037	22		49-61-11	ALL
	X2		W1024	0022	22		49-61-11	ALL
	DED		W1024	1004Z			28-25-21	ALL
D02380		E6 RLY/PNL/		RELAY SOCKET				ALL
	A1		W1024	0326	24		49-61-14	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02300

Page 21

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02380		E6 RLY/PNL/		RELAY SOCKET (continued)				ALL
	A2		W1024	0120	24		49-61-14	ALL
	A3		W1024	0325	24		49-61-14	ALL
	B1		W1024	0080	18		49-61-14	ALL
	B2		W1024	0081	18		49-61-14	ALL
	B3		W1024	0079	18		49-61-14	ALL
	X1		W1024	0025	22		49-61-11	ALL
	X2		W1024	0026	22		49-61-11	ALL
D02382		1040/180/L020		PLUG-				001-099
D02382		1040/180/L27		PLUG-				115-199
	1	UNUSED						ALL
	2		W2658	0004	20		28-25-21	ALL
	3		W2658	0001	20		28-25-21	ALL
	4		W2658	0006	18		28-25-21	ALL
	5		W2658	0003	20		28-25-21	ALL
	6		W2416	1002	20		28-25-21	ALL
	7		W2658	0005	18		28-25-21	ALL
D02386		1040/180/L51		PLUG-DC FUEL PUMP				ALL
	1		W2416	1001	12		28-25-11	ALL
	2		W2416	0041	12		28-25-11	ALL
	3		W2416	0040	14		28-25-11	ALL
	4	UNUSED						ALL
D02388		IRSS181/ /		PLUG-				ALL
	1	UNUSED						ALL
	2	18	W3306	0007	18		28-25-11	ALL
	3	18	W3306	1001	18		28-25-11	ALL
	4	18	W3306	0008	18		28-25-11	ALL
	5	UNUSED						ALL
D02390		P33/ /		RELAY SOCKET				ALL
	A1		W1230	0018	18		28-21-11	001-099
	A1		W1230	0018	20		28-21-11	115-199
	A2		W1230	0022	18		28-21-11	001-099
	A2		W1230	0022	22		28-21-11	115-199
	A3		W1230	0014	22		28-21-11	ALL
	B1		W1230	0019	18		28-21-11	001-099
	B1		W1230	0019	20		28-21-11	115-199
	B2		W1230	0038	18		28-21-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D02300

Page 22

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02390		P33/ /		RELAY SOCKET (continued)				ALL
	B2		W1230	0038	20		28-21-11	115-199
	B3		W1230	0015	22		28-21-11	ALL
	C1		W1230	0163	20		28-41-11	ALL
	C2		W1230	0162	20		28-41-11	ALL
	C3	UNUSED						ALL
	D1		W1230	0171	18		28-22-11	ALL
	D2		W1230	0170	18		28-22-11	ALL
	D3	UNUSED						ALL
	X1		W1230	0036	18		28-21-11	001-099
	X1		W1230	0036	20		28-21-11	115-199
	X2		W1230	0037	18		28-21-11	001-099
	X2		W1230	0037	20		28-21-11	115-199
D02392		P33/ /		RELAY SOCKET				ALL
	A1		W1230	0148	18		28-21-11	001-099
	A1		W1230	0148	20		28-21-11	115-199
	A2		W1230	0147	18		28-21-11	001-099
	A2		W1230	0147	20		28-21-11	115-199
	A3		W1230	0020	18		28-21-11	ALL
	B1		W1230	0149	18		28-21-11	ALL
	B2		W1230	0146	18		28-21-22	001-099
	B2		W1230	0146	20		28-21-22	115-199
	B3		W1230	0145	18		28-21-11	ALL
	C1		W1230	0167	18		28-21-11	001-099
	C1		W1230	0167	20		28-21-11	115-199
	C2		W1230	0166	18		28-21-11	001-099
	C2		W1230	0166	20		28-21-11	115-199
	C3		W1230	0021	18		28-21-11	ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1230	0168	18		28-21-11	001-099
	X1		W1230	0168	20		28-21-11	115-199
	X2		W1230	0152	20		28-21-11	ALL
D02394		P33/ /		RELAY SOCKET				ALL
	A1		W1230	0029	18		28-21-11	001-099
	A1		W1230	0029	20		28-21-11	115-199
	A2		W1230	0028	18		28-21-11	001-099
	A2		W1230	0028	20		28-21-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D02300

Page 23

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02394		P33/ /		RELAY SOCKET (continued)				ALL
	A3	UNUSED						ALL
	B1		W1230	0161	20		28-41-14	ALL
	B2		W1230	0160	20		28-41-14	ALL
	B3	UNUSED						ALL
	C1		W1230	0030	20		28-41-11	001-099
	C1		W1230	0030	22		28-41-11	115-199
	C2		W1230	0027	20		28-41-11	ALL
	C3	UNUSED						ALL
	D1		W1230	0154	18		28-22-11	ALL
	D2		W1230	0157	18		28-22-11	ALL
	D3	UNUSED						ALL
	X1		W1230	0032	18		28-21-11	001-099
	X1		W1230	0032	22		28-21-11	115-199
	X2		W1230	0031	18		28-21-11	001-099
	X2		W1230	0031	22		28-21-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D02300

Page 24 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02400		P54/ /		PLUG				ALL
	1		W1120	0142	24		26-11-22	001-099
	1		W1120	0510	24		26-11-22	115-199
	2		W1120	PL01			26-11-22	ALL
	3		W1120	0141	22		26-11-22	001-099
	3		W1120	0115	22		26-11-22	115-199
	4	UNUSED						ALL
	5		W1120	PL01			26-11-22	ALL
	6		W1120	0144	24		26-11-22	001-099
	6		W1120	0110	24		26-11-22	115-199
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1120	0145	24		26-11-22	001-099
	10		W1120	0113	24		26-11-22	115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1120	0146	24		26-11-22	001-099
	14		W1120	0111	24		26-11-22	115-199
	15	UNUSED						ALL
	16		W1120	0143	24		26-11-22	001-099
	16		W1120	0112	24		26-11-22	115-199
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W1120	0138	24		26-11-22	001-099
	19		W1120	0492	24		26-11-22	115-199
	20		W1120	0139	24		26-11-22	001-099
	20		W1120	0493	24		26-11-22	115-199
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02400

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02400		P54/ /		PLUG (continued)				ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D02402		PPS165/ /		PLUG				ALL
	A		W3368	0001	18		26-11-12	ALL
	B	UNUSED						ALL
	C	UNUSED						ALL
	D		W3368	0002	18		26-11-12	ALL
	E	UNUSED						ALL
D02408		P070-00/ /		RELAY SOCKET				ALL
	A1		W1250	0062	24		28-25-11	ALL
	A2		W1250	0061	24		28-25-11	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1250	0060	20		28-25-11	ALL
	X2		W1250	0064	20		28-25-11	ALL
D02410		E6 RLY/PNL/		RELAY SOCKET				ALL
	1	UNUSED						ALL
	2		W1024	0425	22		49-61-11	ALL
	3		W1024	0064	24		28-25-21	ALL
	4		W1024	0424	22		49-61-11	ALL
	5		W1024	0426	22		49-61-11	ALL
	6		W1024	0423	22		49-61-11	ALL
	7		W1024	0063	24		28-25-21	ALL
	8		W1024	0422	22		49-61-11	ALL
D02414		E6 RLY/PNL/		RELAY SOCKET				ALL
	1	UNUSED						ALL
	2		W1024	0058	24		28-25-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02400

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02414		E6 RLY/PNL/		RELAY SOCKET (continued)				ALL
	3		W1024	0062	22		28-25-21	001-099
	3		W1024	0062	24		28-25-21	115-199
	4	UNUSED						ALL
	5		W1024	0063	24		28-25-21	ALL
	6	UNUSED						ALL
	7		W1024	0002	22		28-25-21	001-099
	7		W1024	0002	20		28-25-21	115-199
	8	UNUSED						ALL
D02416		E6 RLY/PNL/		RELAY SOCKET				ALL
	A1		W1024	0100	22		49-41-11	ALL
	A2		W1024	0076	22		49-41-11	ALL
	A3		W1024	0075	22		49-41-11	ALL
	B1	UNUSED						ALL
	B2		W1024	0090	24		24-31-41	ALL
	B3		W1024	0450	24		24-31-41	ALL
	X1		W1024	0087	22		49-41-11	ALL
	X2		W1024	0078	22		49-41-11	ALL
D02422		P33/ /		PLUG				ALL
	A		W1230	0403	24		26-15-12	001-099
	A		W1234	0003	24		26-15-12	115-199
	B		W1230	0402	24		26-15-12	001-099
	B		W1234	0002	24		26-15-12	115-199
	C		W1230	0401	24		26-15-12	001-099
	C		W1234	0001	24		26-15-12	115-199
	D	UNUSED						ALL
	E	UNUSED						ALL
	F		W1230	0404	24		26-15-12	001-099
	F		W1234	0004	24		26-15-12	115-199
D02424		P33/ /		RELAY SOCKET				ALL
	A1		W1230	0249	20		26-22-21	001-099
	A1		W1232	0073	20		26-22-21	115-199
	A2		W1230	0655	20		26-15-12	001-099
	A2		W1232	0010	20		26-15-12	115-199
	A3	UNUSED						ALL
	B1		W1230	0654	24		26-15-12	001-099
	B1		W1232	0009	24		26-15-12	115-199
	B2		W1230	0653	24		26-15-12	001-099

HOOKUP LIST

D280N032

91-21-51

Section D02400

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02424		P33/ /		RELAY SOCKET (continued)				ALL
	B2		W1232	0008	24		26-15-12	115-199
	B3	UNUSED						ALL
	C1		W1230	0652	24		26-15-12	001-099
	C1		W1232	0007	24		26-15-12	115-199
	C2		W1230	0651	24		26-15-12	001-099
	C2		W1232	0006	24		26-15-12	115-199
	C3		W1230	0658	24		26-15-12	001-099
	C3		W1232	0013	24		26-15-12	115-199
	D1	UNUSED						ALL
	D2		W1230	0271	24		26-15-11	001-099
	D2		W1232	0071	24		26-15-11	115-199
	D3		W1230	0270	24		26-15-11	001-099
	D3		W1232	0070	24		26-15-11	115-199
	X1		W1230	0656	24		26-15-12	001-099
	X1		W1232	0011	24		26-15-12	115-199
	X2		W1230	0657	24		26-15-12	001-099
	X2		W1232	0012	24		26-15-12	115-199
D02434		E6 RLY/PNL/		RELAY SOCKET				ALL
	A1	UNUSED						ALL
	A2		W1024	0048	22		49-61-11	ALL
	A3		W1024	0037	22		49-61-11	ALL
	B1		W1024	0041	22		49-61-11	ALL
	B2		W1024	0040	22		49-61-11	ALL
	B3		W1024	0039	22		49-61-11	ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1024	0046	22		49-61-11	ALL
	X2		W1024	0242	22		49-61-11	001-099
	X2		W1024	0045	22		49-61-11	115-199
D02436		E6/ /		RELAY SOCKET				115-199
	A1		W1024	0033	22		49-61-11	115-199
	A2		W1024	0032	22		49-61-11	115-199
	A3	UNUSED						115-199
	B1		W1024	0259	24		36-11-41	115-199

HOOKUP LIST

D280N032

91-21-51

Section D02400

Page 4

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02436		E6/ /		RELAY SOCKET (continued)				115-199
	B2		W1024	0117	22		49-61-11	115-199
	B3	UNUSED						115-199
	X1		W1024	0035	22		49-61-11	115-199
	X2		W1024	0034	22		49-61-11	115-199
D02440A		E003-04/ /		PLUG				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04		W1280	0183	22		28-21-22	ALL
	A05		W1280	2057R	24		28-41-21	ALL
	A06		W1280	1008Z			28-41-21	ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						001-003, 005, 009-099
	A09		W1280	0096	22		28-41-11	004, 006-008
	A09		W1280	0096	24		28-41-11	115-199
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14		W1280	2099R	24		28-41-13	001-099
	A14		W1280	2099R	22		28-41-13	115-199
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05		W1280	2057B	24		28-41-21	ALL
	B06		W1280	1008	22		28-41-21	ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09		W1280	0228	22		28-41-11	ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01		W1280	0270	24		28-41-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02400

Page 5

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02440A		E003-04/ /		PLUG (continued)				ALL
	C02		W1280	0274	24		28-41-21	ALL
	C03		W1280	0278	24		28-41-21	ALL
	C04	UNUSED						ALL
	C05		W1280	0518	24		28-41-21	ALL
	C06		W1280	3001Y	24		28-21-22	ALL
	C07		W1280	3001R	24		28-21-22	ALL
	C08	UNUSED						ALL
	C09		W1280	0096	22		28-41-11	001-099
	C09		W1280	0096	24		28-41-11	115-199
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14		W1280	0168	24		28-41-11	ALL
	C15	UNUSED						ALL
	D01		W1280	0271	24		28-41-21	ALL
	D02		W1280	0275	24		28-41-21	ALL
	D03		W1280	0279	24		28-41-21	ALL
	D04	UNUSED						ALL
	D05		W1280	0519	24		28-41-21	ALL
	D06		W1280	0521	24		28-41-21	ALL
	D07	UNUSED						ALL
	D08		W1280	0351	24		28-21-22	ALL
	D09	UNUSED						ALL
	D10		W1280	0297	24		28-41-41	ALL
	D11		W1280	0299	24		28-41-41	ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01		W1280	0272	24		28-41-21	ALL
	E02		W1280	0276	24		28-41-21	ALL
	E03		W1280	0317	24		28-41-21	ALL
	E04		W1280	0269	24		28-41-21	ALL
	E05		W1280	0520	24		28-41-21	ALL
	E06		W1280	2108B	24		28-21-22	001-099
	E06		W1280	2088B	24		28-21-22	115-199
	E07		W1280	3011Y	24		28-21-22	001-099
	E07		W1280	4006Y	24		28-21-22	115-199
	E08	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02400

Page 6

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02440A		E003-04/ /		PLUG (continued)				ALL
	E09		W1280	0096	22		28-41-11	001-003, 005, 009-099
	E09	UNUSED						004, 006-008, 115-199
	E10		W1280	0298	24		28-41-41	ALL
	E11		W1280	0300	24		28-41-41	ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01		W1280	0273	24		28-41-21	ALL
	F02		W1280	0277	24		28-41-21	ALL
	F03		W1280	0318	24		28-41-21	ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06		W1280	3011R	24		28-21-22	001-099
	F06		W1280	4006R	24		28-21-22	115-199
	F07		W1280	3011B	24		28-21-22	001-099
	F07		W1280	4006B	24		28-21-22	115-199
	F08		W1280	2108R	24		28-21-22	001-099
	F08		W1280	2088R	24		28-21-22	115-199
	F09		W1280	3013R	24		28-21-22	001-099
	F09		W1280	4001R	24		28-21-22	115-199
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13		W1280	0547	24		28-41-14	ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03		W1280	2569R	22		28-41-11	001-099
	G03		W1280	2569R	24		28-41-11	115-199
	G04	UNUSED						ALL
	G05		W1280	2508R	22		28-41-11	001-099
	G05		W1280	2508R	24		28-41-11	115-199
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09		W1280	0580	24		28-41-41	ALL
	G10		W1280	0581	24		28-41-41	ALL
	G11		W1280	0582	24		28-41-41	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02400

Page 7

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02440A		E003-04/ /		PLUG (continued)				ALL
	G12		W1280	0583	24		28-41-41	ALL
	G13		W1280	0548	24		28-41-14	ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03		W1280	2569B	22		28-41-11	001-099
	H03		W1280	2569B	24		28-41-11	115-199
	H04		W1280	0221	22		28-21-22	ALL
	H05		W1280	2508B	22		28-41-11	001-099
	H05		W1280	2508B	24		28-41-11	115-199
	H06	UNUSED						ALL
	H07		W1280	0595	24		28-21-22	001-099
	H07		W1280	4001G	24		28-21-22	115-199
	H08		W1280	0506	24		28-41-14	ALL
	H09		W1280	0182	22		28-21-22	ALL
	H10		W1280	2059R	24		28-41-41	ALL
	H11		W1280	0512	22		28-41-41	ALL
	H12	UNUSED						ALL
	H13		W1280	0549	24		28-41-14	ALL
	H14		W1280	0169	24		28-41-13	ALL
	H15	UNUSED						ALL
	J01		W1280	0554	24		28-41-14	ALL
	J02		W1280	0555	24		28-41-14	ALL
	J03		W1280	0556	24		28-41-14	ALL
	J04		W1280	0557	24		28-41-14	ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08		W1280	0359	22		28-41-13	ALL
	J09		W1280	1004	22		28-41-41	ALL
	J10		W1280	2059B	24		28-41-41	ALL
	J11		W1280	5002R	24		34-61-14	ALL
	J12		W1280	0552	24		28-41-14	ALL
	J13		W1280	0550	24		28-41-14	ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01		W1280	0558	24		28-41-14	ALL
	K02		W1280	0558	24		28-41-14	001-099
	K02		W1280	0594	24		28-41-14	115-199

HOOKUP LIST

D280N032

91-21-51

Section D02400

Page 8

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02440A		E003-04/ /		PLUG (continued)				ALL
	K03		W1280	0559	24		28-41-14	ALL
	K04		W1280	0400	22		28-41-21	001-099
	K04		W1280	0400	24		28-41-21	115-199
	K05	UNUSED						ALL
	K06		W1280	3012Y	24		28-41-14	ALL
	K07		W1280	3012R	24		28-41-14	ALL
	K08		W1280	3012B	24		28-41-14	ALL
	K09		W1280	0103	24		28-41-14	ALL
	K10		W1280	1004Z			28-41-41	ALL
	K11		W1280	5002B	24		34-61-14	ALL
	K12		W1280	0553	24		28-41-14	ALL
	K13		W1280	0551	24		28-41-14	ALL
	K14		W1280	2099B	24		28-41-13	001-099
	K14		W1280	2099B	22		28-41-13	115-199
	K15	UNUSED						ALL
	CAP	Y	W1280	4006G	24		28-21-22	115-199
	DED		W1280	2508Z			28-41-11	ALL
	DED		W1280	2569Z			28-41-11	ALL
	DED		W1280	5002Z			34-61-14	ALL
D02440B		E003-04/ /		PLUG				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04		W1280	0180	22		28-21-22	ALL
	A05		W1280	0536	24		28-41-31	ALL
	A06		W1280	5001R	24		34-61-24	ALL
	A07	UNUSED						ALL
	A08		W1280	5006R	24		28-41-11	ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02400

Page 9

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02440B		E003-04/ /		PLUG (continued)				ALL
	B05		W1280	0537	24		28-41-31	ALL
	B06		W1280	5001B	24		34-61-24	ALL
	B07	UNUSED						ALL
	B08		W1280	5006B	24		28-41-11	ALL
	B09		W1280	0592	22		28-41-11	ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01		W1280	0281	24		28-41-31	ALL
	C02		W1280	0285	24		28-41-31	ALL
	C03		W1280	0289	24		28-41-31	ALL
	C04	UNUSED						ALL
	C05		W1280	0538	24		28-41-31	ALL
	C06	UNUSED						ALL
	C07		W1280	2080R	24		28-41-14	ALL
	C08		W1280	0540	24		28-41-14	ALL
	C09		W1280	0541	24		28-41-14	ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01		W1280	0282	24		28-41-31	ALL
	D02		W1280	0286	24		28-41-31	ALL
	D03		W1280	0290	24		28-41-31	ALL
	D04	UNUSED						ALL
	D05		W1280	0539	24		28-41-31	ALL
	D06		W1280	2063R	24		28-41-31	ALL
	D07		W1280	1011	22		28-41-31	ALL
	D08		W1280	0545	24		28-41-14	ALL
	D09		W1280	0542	24		28-41-14	ALL
	D10		W1280	0301	24		28-41-41	ALL
	D11		W1280	0292	24		28-41-41	ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02400

Page 10

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02440B		E003-04/ /		PLUG (continued)				ALL
	D15	UNUSED						ALL
	E01		W1280	0283	24		28-41-31	ALL
	E02		W1280	0287	24		28-41-31	ALL
	E03		W1280	0315	24		28-41-31	ALL
	E04		W1280	0280	24		28-41-31	ALL
	E05		W1280	2063B	24		28-41-31	ALL
	E06		W1280	1011Z			28-41-31	ALL
	E07		W1280	2080B	24		28-41-14	ALL
	E08		W1280	0546	24		28-41-14	ALL
	E09		W1280	0543	24		28-41-14	ALL
	E10		W1280	0291	24		28-41-41	ALL
	E11		W1280	0293	24		28-41-41	ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01		W1280	0284	24		28-41-31	ALL
	F02		W1280	0288	24		28-41-31	ALL
	F03		W1280	0316	24		28-41-31	ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09		W1280	0544	24		28-41-14	ALL
	F10		W1280	0296	24		28-41-41	ALL
	F11		W1280	0294	24		28-41-41	ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03		W1280	2572R	22		28-41-11	ALL
	G04	UNUSED						ALL
	G05		W1280	2509R	22		28-41-11	ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02400

Page 11

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02440B		E003-04/ /		PLUG (continued)				ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03		W1280	2572B	22		28-41-11	ALL
	H04		W1280	0220	22		28-21-22	ALL
	H05		W1280	2509B	22		28-41-11	ALL
	H06	UNUSED						ALL
	H07		W1280	3013B	24		28-21-22	001-099
	H07		W1280	4001B	24		28-21-22	115-199
	H08	UNUSED						ALL
	H09		W1280	0181	22		28-21-22	ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02400

Page 12

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02440B		E003-04/ /		PLUG (continued)				ALL
	K04		W1280	0579	22		28-41-31	ALL
	K05	UNUSED						ALL
	K06		W1280	3010Y	24		28-41-14	ALL
	K07		W1280	3010R	24		28-41-14	ALL
	K08		W1280	3010B	24		28-41-14	ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
	DED		W1280	2509Z			28-41-11	ALL
	DED		W1280	2572Z			28-41-11	ALL
	DED		W1280	5001Z			34-61-24	ALL
	DED		W1280	5006Z			28-41-11	ALL
D02440C		E003-04/ /		PLUG				ALL
	A01		W1280	FRZA			28-41-21	001-099
	A01		W1280	FRAZ			28-41-21	115-199
	A02		W1280	0528	24		28-41-21	ALL
	A03		W1280	0527	24		28-41-21	ALL
	A04	UNUSED						ALL
	A05		W1280	FRWB			28-41-41	ALL
	A06		W1280	0607	24		28-41-41	ALL
	A07		W1280	0609	24		28-41-41	ALL
	A08	UNUSED						ALL
	A09		W1280	0599	22		28-21-11	ALL
	A10		W1280	0515	22		28-21-11	ALL
	B01		W1280	0526	24		28-41-21	ALL
	B02		W1280	1001	22		28-41-21	ALL
	B03		W1280	0525	24		28-41-21	ALL
	B04	UNUSED						ALL
	B05		W1280	0605	24		28-41-41	ALL
	B06		W1280	1009	22		28-41-41	ALL
	B07		W1280	0610	24		28-41-41	ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	C01		W1280	0524	24		28-41-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02400

Page 13

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02440C		E003-04/ /		PLUG (continued)				ALL
	C02		W1280	0523	24		28-41-21	ALL
	C03		W1280	FRZB			28-41-21	ALL
	C04	UNUSED						ALL
	C05		W1280	0606	24		28-41-41	ALL
	C06		W1280	0608	24		28-41-41	ALL
	C07		W1280	FRWA			28-41-41	ALL
	C08	UNUSED						ALL
	C09		W1280	0174	22		28-21-11	ALL
	C10		W1280	0600	22		28-21-11	ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05		W1280	FRXB			28-41-41	ALL
	D06		W1280	0587	24		28-41-41	ALL
	D07		W1280	0585	24		28-41-41	ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	E01	UNUSED						ALL
	E02		W1280	0578	22		28-21-22	ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05		W1280	0589	24		28-41-41	ALL
	E06		W1280	1003	22		28-41-41	ALL
	E07		W1280	0584	24		28-41-41	ALL
	E08	UNUSED						ALL
	E09		W1280	0577	22		28-21-22	ALL
	E10	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05		W1280	0588	24		28-41-41	ALL
	F06		W1280	0586	24		28-41-41	ALL
	F07		W1280	FRXA			28-41-41	ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	G01	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02400

Page 14

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02440C		E003-04/ /		PLUG (continued)				ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	H01		W1280	FRYA			28-41-31	ALL
	H02		W1280	0533	24		28-41-31	ALL
	H03		W1280	0531	24		28-41-31	ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09		W1280	0176	22		28-21-11	ALL
	H10		W1280	0601	22		28-21-11	ALL
	J01		W1280	0535	24		28-41-31	ALL
	J02		W1280	1002	22		28-41-31	ALL
	J03		W1280	0530	24		28-41-31	ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	K01		W1280	0534	24		28-41-31	ALL
	K02		W1280	0532	24		28-41-31	ALL
	K03		W1280	FRYB			28-41-31	ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09		W1280	0598	22		28-21-11	ALL
	K10		W1280	0513	22		28-21-11	ALL
	CAP	Y	W1280	0523	24		28-41-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02400

Page 15

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02440C		E003-04/ /		PLUG (continued)				ALL
	CAP	Y	W1280	0524	24		28-41-21	ALL
	CAP	Y	W1280	0525	24		28-41-21	ALL
	CAP	Y	W1280	0526	24		28-41-21	ALL
	CAP	Y	W1280	0527	24		28-41-21	ALL
	CAP	Y	W1280	0528	24		28-41-21	ALL
	CAP	Y	W1280	0530	24		28-41-31	ALL
	CAP	Y	W1280	0531	24		28-41-31	ALL
	CAP	Y	W1280	0532	24		28-41-31	ALL
	CAP	Y	W1280	0533	24		28-41-31	ALL
	CAP	Y	W1280	0534	24		28-41-31	ALL
	CAP	Y	W1280	0535	24		28-41-31	ALL
	CAP	Y	W1280	0584	24		28-41-41	ALL
	CAP	Y	W1280	0585	24		28-41-41	ALL
	CAP	Y	W1280	0586	24		28-41-41	ALL
	CAP	Y	W1280	0587	24		28-41-41	ALL
	CAP	Y	W1280	0588	24		28-41-41	ALL
	CAP	Y	W1280	0589	24		28-41-41	ALL
	CAP	Y	W1280	0605	24		28-41-41	ALL
	CAP	Y	W1280	0606	24		28-41-41	ALL
	CAP	Y	W1280	0607	24		28-41-41	ALL
	CAP	Y	W1280	0608	24		28-41-41	ALL
	CAP	Y	W1280	0609	24		28-41-41	ALL
	CAP	Y	W1280	0610	24		28-41-41	ALL
			W1280	FRZA			28-41-21	001-099
			W1280	1001Z			28-41-21	ALL
			W1280	1002Z			28-41-31	ALL
			W1280	1003Z			28-41-41	ALL
			W1280	1009Z			28-41-41	ALL
			W1280	FRWA			28-41-41	ALL
			W1280	FRWB			28-41-41	ALL
			W1280	FRXA			28-41-41	ALL
			W1280	FRXB			28-41-41	ALL
			W1280	FRYA			28-41-31	ALL
			W1280	FRYB			28-41-31	ALL
			W1280	FRZB			28-41-21	ALL
			W1280	FRAZ			28-41-21	115-199
D02444		IRSS255/ /		PLUG				ALL
	1		W3406	1003	20		28-21-23	ALL
	2		W3406	2509B	20		28-21-23	001-009, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D02400

Page 16

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02444		IRSS255/ /		PLUG (continued)				ALL
	2	16	W3406	2509B	20		28-21-23	010-099
	2	16	W3406	T-R			28-21-23	010-099
	3	18	W3406	0013	18		28-21-23	ALL
	4		W3406	1004	20		28-21-23	ALL
	5		W3406	2509R	20		28-21-23	ALL
D02446		1051/172/R43		PLUG				ALL
	1		W2516	0006	20		28-21-23	ALL
	2		W2516	2504R	20		28-21-23	001-009, 115-199
	2	16	W2516	2504R	20		28-21-23	010-099
	2	16	W2516	T-R			28-21-23	010-099
	3	18	W2516	0043	18		28-21-23	ALL
	4		W2516	0007	20		28-21-23	ALL
	5		W2516	2504B	20		28-21-23	ALL
D02448		P33/ /		RELAY SOCKET				ALL
	A1		W1230	0057	20		28-21-23	ALL
	A2		W1230	0047	20		28-21-22	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1230	0044	20		28-21-22	ALL
	X2		W1230	0045	20		28-21-22	ALL
D02450		P33/ /		RELAY SOCKET				ALL
	A1		W1230	0058	20		28-21-23	ALL
	A2		W1230	0050	20		28-21-22	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1230	0048	20		28-21-22	ALL
	X2		W1230	0049	20		28-21-22	ALL
D02452		1126/172/R001		PLUG				ALL
	1		W2512	1016	18		32-12-12	ALL
	2		W2512	0017	18		32-12-12	ALL
	3		W2512	0024	18		32-12-12	ALL
	4	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02400

Page 17

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02452		1126/172/R001		PLUG (continued)				ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
			W2512	0001	18		32-12-12	ALL
			W2512	1016Z			32-12-12	ALL
D02454		273/175/L21		PLUG-				ALL
	1		W2152	0008	18		32-12-12	ALL
	2		W2152	0010	18		32-12-12	ALL
	3		W2152	0009	18		32-12-12	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D02456		WS684/ /		PLUG				ALL
	A		W3406	2501R	20		28-21-21	ALL
	B		W3406	2501B	20		28-21-21	ALL
	C		W3406	2501ZI			28-21-21	ALL
D02458		P021/ /		RCPT-ATT PNL				001-099
D02458		P21/ /		RCPT-ATT PNL				115-199
	1		W0504	0001	20		33-22-11	ALL
	2		W0504	0002	22		33-22-11	ALL
	3		W0504	0003	22		33-22-11	ALL
	4		W0504	0004	20		33-22-11	ALL
	5		W0504	0005	22		33-22-11	ALL
	6		W0504	0006	22		33-22-11	ALL
	7		W0504	0007	22		33-22-11	ALL
	8		W0504	0008	22		33-22-11	ALL
	9		W0504	0009	22		24-51-51	ALL
	10		W0504	0010	22		24-51-51	ALL
	11		W0504	0011	22		24-51-51	001-099
	11		W0504	0011	20		24-51-51	115-199
	12		W0504	0012	22		24-51-51	001-099
	12		W0504	0037	22		23-34-16	115-199
	13		W0504	0013	24		33-21-11	ALL
	14		W0504	0014	24		33-21-11	ALL
	15		W0504	0015	24		33-21-11	ALL
	16		W0504	0016	22		33-21-51	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02400

Page 18

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02458		P021/ /		RCPT-ATT PNL (continued)				001-099
D02458		P21/ /		RCPT-ATT PNL (continued)				115-199
	17		W0504	0017	22		33-21-51	001-099
	17		W0504	0017	22		33-21-11	115-199
	18		W0504	0018	24		33-21-31	ALL
	19		W0504	0019	24		33-21-31	ALL
	20		W0504	0020	24		33-21-31	ALL
	21	UNUSED						001-099
	21		W0504	0036	22		23-34-16	115-199
	22	UNUSED						001-099
	22		W0504	0042	22		23-34-16	115-199
	23		W0504	0105	22		23-34-15	ALL
	24		W0504	0059	24		33-21-31	ALL
	25		W0504	0108	22		23-34-15	ALL
	26	UNUSED						001-099
	26		W0504	3026R	22		23-34-16	115-199
	27	UNUSED						001-099
	27		W0504	3026Y	22		23-34-16	115-199
	28	UNUSED						001-099
	28		W0504	3026B	22		23-34-16	115-199
	29	UNUSED						001-099
	29		W0504	0029	22		23-34-16	115-199
	30	UNUSED						001-099
	30		W0504	0030	22		23-34-16	115-199
	31	UNUSED						001-099
	31		W0504	0056	20		23-34-16	115-199
	32		W0504	0103	22		23-34-15	ALL
	33		W0504	0104	22		23-34-15	ALL
	34		W0504	0034	20		33-21-11	ALL
	35	UNUSED						001-099
	35		W0504	0021	22		33-27-11	115-199
	36	UNUSED						001-099
	36		W0504	0024	22		33-27-11	115-199
	37	UNUSED						001-099
	37		W0504	0025	22		33-27-11	115-199
	38		W0504	0038	22		33-51-11	ALL
	39		W0504	0039	22		33-51-11	ALL
	40		W0504	0040	22		33-51-11	ALL
	41		W0504	0041	20		33-51-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02400

Page 19

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02466		858/155/000		PLUG-				115-199
	1		W4162	0001	18		25-51-11	115-199
	2		W4162	0002	18		25-51-11	115-199
	3		W4162	0003	18		25-51-11	115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
	6		W4162	0004	22		25-51-11	115-199
	7		W4162	0040	22		25-51-11	115-199
	8		W4162	0005	18		25-51-11	115-199
D02468		1195/150/0		PLUG-				115-199
	1		W2662	0001	18		25-51-21	115-199
	2		W2662	0002	18		25-51-21	115-199
	3		W2662	0003	18		25-51-21	115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
	6		W2662	0004	20		25-51-21	115-199
	7		W2662	0049	20		25-51-21	115-199
	8		W2662	0005	16		25-51-21	115-199
D02470		P37/ /		RELAY SOCKET (PLATE 'C')				115-199
	A1		W1270	0723	20		74-31-21	115-199
	A2		W1270	0720	20		74-31-21	115-199
	A3		W1270	0288	20		74-31-21	115-199
	B1	UNUSED						115-199
	B2	UNUSED						115-199
	B3	UNUSED						115-199
	X1		W1270	0718	20		74-31-21	115-199
	X2		W1270	0719	20		74-31-21	115-199
D02472		P37/ /		RELAY SOCKET (PLATE 'C')				115-199
	A1		W1270	0714	22		74-31-21	115-199
	A2		W1270	0713	22		74-31-21	115-199
	A3		W1270	0289	20		74-31-21	115-199
	B1	UNUSED						115-199
	B2	UNUSED						115-199
	B3	UNUSED						115-199
	X1		W1270	0717	20		74-31-21	115-199
	X2		W1270	0716	20		74-31-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section D02400

Page 20

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02478		P33/ /		RELAY SOCKET				ALL
	A1		W1230	0007	22		27-51-21	ALL
	A2		W1230	0004	22		27-51-21	ALL
	A3		W1230	0137	22		27-51-21	ALL
	B1		W1230	0140	22		27-51-21	ALL
	B2		W1230	0001	22		27-51-21	ALL
	B3		W1230	0006	22		27-51-21	ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1230	0002	22		27-51-21	ALL
	X2		W1230	0005	22		27-51-21	ALL
D02482		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D02482		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	A1	UNUSED						ALL
	A2		W1270	6043	20		36-11-21	ALL
	A3		W1270	6066	20		36-11-21	ALL
	B1	UNUSED						ALL
	B2		W1270	6042	20		36-11-21	ALL
	B3		W1270	6074	20		36-11-22	ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1270	6065	20		36-11-21	ALL
	X2		W1270	6067	20		36-11-21	ALL
D02484		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D02484		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	A1	UNUSED						ALL
	A2		W1270	6038	20		36-11-21	ALL
	A3		W1270	6072	20		36-11-21	ALL
	B1	UNUSED						ALL
	B2		W1270	6070	20		36-11-21	001-099

HOOKUP LIST

D280N032

91-21-51

Section D02400

Page 21

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02484		P037-00/ /		RELAY SOCKET (PLATE 'A') (continued)				001-099
D02484		P37/ /		RELAY SOCKET (PLATE 'A') (continued)				115-199
	B2		W1270	6076	20		36-11-21	ALL
	B3		W1270	6075	20		36-11-22	ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1270	6038	20		36-11-21	001-099
	X1		W1270	6070	20		36-11-21	ALL
	X2		W1270	6071	20		36-11-21	ALL
D02486		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D02486		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	A1		W1270	6087	20		36-11-21	ALL
	A2		W1270	6041	20		36-11-21	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2		W1270	6039	20		36-11-21	ALL
	B3		W1270	6078	20		36-11-21	ALL
	X1		W1270	6073	20		36-11-21	ALL
	X2		W1270	6068	20		36-11-21	ALL
D02488		1180/172/R001		PLUG				ALL
	1		W2512	3501Y	20		29-31-11	ALL
	2		W2512	3501B	20		29-31-11	ALL
	3		W2512	3501R	20		29-31-11	ALL
D02490		1051/172/R43		PLUG				ALL
	1		W2516	0071	20		29-33-11	ALL
	2		W2516	0032	18		29-33-11	ALL
	3		W2516	3503Y	20		29-33-11	ALL
	4		W2516	3503R	20		29-33-11	ALL
	5		W2516	3503B	20		29-33-11	ALL
	6		W2516	0072	20		29-33-11	ALL
	7		W2516	001TX	20		29-33-11	ALL
			W2516	001TI			29-33-11	ALL
			W2516	0071	20		29-33-11	ALL
			W2516	0072	20		29-33-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02400

Page 22

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02492		1188/142/L28		PLUG				ALL
	1		W2516	1027	20		29-33-11	ALL
	2		W2516	1026	20		29-33-11	ALL
	3		W2516	0035	18		29-33-11	ALL
D02494		1194/142/L28		PLUG				ALL
	1	UNUSED						ALL
	2		W2516	3504B	20		29-33-11	ALL
	3		W2516	1027	20		29-33-11	ALL
	4		W2516	0029	18		29-33-11	ALL
	5		W2516	3504R	20		29-33-11	ALL
	6		W2516	3504Y	20		29-33-11	ALL
	7	UNUSED						ALL
D02496		AP10/ /		RCPT-				001-099
D02496		P010-00/ /		RCPT-				115-199
	1		W2357	0032	20		33-13-52	ALL
	2		W2357	0033	20		33-13-52	ALL
	3		W2357	0034	22		27-48-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W2357	0017	22		27-48-11	ALL
	7		W2357	0018	22		27-48-11	ALL
	8		W2357	0016	22		27-48-11	ALL
	9		W2357	0035	22		27-48-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02400

Page 23 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02500		IRSS258/ /		PLUG				ALL
	1		W3306	0002	20		28-21-23	ALL
	2		W3306	2509B	20		28-21-23	001-009, 115-199
	2	16	W3306	2509B	20		28-21-23	010-099
	2	16	W3306	T-R			28-21-23	010-099
	3	18	W3306	0013	18		28-21-23	ALL
	4		W3306	0003	20		28-21-23	ALL
	5		W3306	2509R	20		28-21-23	ALL
D02502		1040/180/L050		PLUG				ALL
	1		W2418	0011	20		28-21-23	ALL
	2		W2418	2503B	20		28-21-23	001-009, 115-199
	2	16	W2418	2503B	20		28-21-23	010-099
	2	16	W2418	T-R			28-21-23	010-099
	3	18	W2418	0005	18		28-21-23	ALL
	4		W2418	0012	20		28-21-23	ALL
	5		W2418	2503R	20		28-21-23	ALL
D02504		P33/ /		RELAY SOCKET				ALL
	A1		W1230	0060	20		28-21-23	ALL
	A2		W1230	0056	20		28-21-22	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1230	0054	20		28-21-22	ALL
	X2		W1230	0055	20		28-21-22	ALL
D02506		P33/ /		RELAY SOCKET				ALL
	A1		W1230	0059	20		28-21-23	ALL
	A2		W1230	0053	20		28-21-22	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1230	0051	20		28-21-22	ALL
	X2		W1230	0052	20		28-21-22	ALL
D02508		1122/172/L005		PLUG				ALL
	1		W2414	1001	18		32-12-12	ALL
	2		W2414	0002	18		32-12-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02500

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02508		1122/172/L005		PLUG (continued)				ALL
	3		W2414	0032	18		32-12-12	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D02510		IRSS684/.5/		PLUG				ALL
	A		W3306	2501R	20		28-21-21	ALL
	B		W3306	2501B	20		28-21-21	ALL
	C		W3306	2501ZI			28-21-21	ALL
D02512		P33/ /		RELAY SOCKET				ALL
	A1		W1230	0039	22		28-21-21	001-099
	A1		W1230	0039	20		28-21-21	115-199
	A2		W1230	0041	22		28-21-21	ALL
	A3	UNUSED						ALL
	B1		W1230	0153	20		28-21-22	ALL
	B2		W1230	0040	20		28-21-21	ALL
	B3	UNUSED						ALL
	X1		W1230	0164	22		28-21-21	ALL
	X2		W1230	0042	22		28-21-21	ALL
D02514		P50/ /		RCPT				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1140	0125	22		28-21-21	ALL
	4	UNUSED						ALL
	5		W1140	2501B	24		28-21-21	ALL
	6		W1140	0123	22		28-21-21	ALL
	7		W1140	PD01			28-21-21	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W1140	2501R	24		28-21-21	ALL
	16		W1140	2502R	24		28-21-21	ALL
	17		W1140	2502B	24		28-21-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02500

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02514		P50/ /		RCPT (continued)				ALL
	18		W1140	0126	22		28-21-21	ALL
	19		W1140	0124	22		28-21-21	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37		W1140	PD01			28-21-21	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D02520		P36/ /		RELAY SOCKET (PLATE 'D')				115-199
	A1		W1260	0361	20		74-31-11	115-199
	A2		W1260	0358	20		74-31-11	115-199
	A3		W1260	0825	20		74-31-11	115-199
	B1	UNUSED						115-199
	B2	UNUSED						115-199
	B3	UNUSED						115-199
	X1		W1260	0362	20		74-31-11	115-199
	X2		W1260	0364	20		74-31-11	115-199
D02522		P36/ /		RELAY SOCKET (PLATE 'D')				115-199
	A1		W1260	0471	20		74-31-11	115-199
	A2		W1260	0366	20		74-31-11	115-199
	A3		W1260	0826	20		74-31-11	115-199
	B1	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D02500

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02522		P36/ /		RELAY SOCKET (PLATE 'D') (continued)				115-199
	B2	UNUSED						115-199
	B3	UNUSED						115-199
	X1		W1260	0363	20		74-31-11	115-199
	X2		W1260	0378	20		74-31-11	115-199
D02524		P36/ /		RELAY SOCKET (PLATE 'F')				ALL
	A1		W1260	5008R	24		34-61-15	ALL
	A2		W1260	5007R	24		34-61-15	ALL
	A3		W1260	5009R	24		34-61-15	ALL
	B1		W1260	5008B	24		34-61-15	ALL
	B2		W1260	5007B	24		34-61-15	ALL
	B3		W1260	5009B	24		34-61-15	ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1260	8002	22		34-61-15	ALL
	X2		W1260	8003	22		34-61-15	ALL
D02526		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D02526		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	A1		W1270	5020R	24		34-61-25	ALL
	A2		W1270	5019R	24		34-61-25	ALL
	A3		W1270	5021R	24		34-61-25	ALL
	B1		W1270	5020B	24		34-61-25	ALL
	B2		W1270	5019B	24		34-61-25	ALL
	B3		W1270	5021B	24		34-61-25	ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1270	5933	22		34-61-25	ALL
	X2		W1270	5938	22		34-61-25	ALL
D02528		P36/ /		RELAY SOCKET (PLATE 'D')				ALL
	A1	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02500

Page 4

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02528		P36/ /		RELAY SOCKET (PLATE 'D') (continued)				ALL
	A2		W1260	0331	20		36-11-11	001-099
	A2		W1260	0330	20		36-11-11	ALL
	A3		W1260	0332	20		36-11-11	ALL
	B1	UNUSED						ALL
	B2		W1260	0336	20		36-11-11	001-099
	B2		W1260	0331	20		36-11-11	ALL
	B3		W1260	0341	20		36-11-12	ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1260	0302	20		36-11-11	001-099
	X1		W1260	0336	20		36-11-11	ALL
	X2		W1260	0337	20		36-11-11	ALL
D02530		P36/ /		RELAY SOCKET (PLATE 'D')				ALL
	A1	UNUSED						ALL
	A2		W1260	0312	20		36-11-11	001-099
	A2		W1260	0328	20		36-11-11	ALL
	A3		W1260	0334	20		36-11-11	ALL
	B1	UNUSED						ALL
	B2		W1260	0328	20		36-11-11	001-099
	B2		W1260	0333	20		36-11-11	ALL
	B3		W1260	0342	20		36-11-12	ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1260	0333	20		36-11-11	001-099
	X1		W1260	0338	20		36-11-11	115-199
	X2		W1260	0340	20		36-11-11	ALL
D02532		P36/ /		RELAY SOCKET (PLATE 'D')				ALL
	A1		W1260	0303	20		36-11-11	ALL
	A2		W1260	0329	20		36-11-11	ALL
	A3	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02500

Page 5

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02532		P36/ /		RELAY SOCKET (PLATE 'D') (continued)				ALL
	B1	UNUSED						ALL
	B2		W1260	0327	20		36-11-11	ALL
	B3		W1260	0302	20		36-11-11	ALL
	X1		W1260	0339	20		36-11-11	ALL
	X2		W1260	0335	20		36-11-11	ALL
D02534		1070/170/L005		PLUG				ALL
	1		W2412	3501Y	20		29-31-11	ALL
	2		W2412	3501B	20		29-31-11	ALL
	3		W2412	3501R	20		29-31-11	ALL
D02536		1090/149/L003		PLUG				ALL
	1		W2414	3501Y	20		29-31-11	ALL
	2		W2414	3501B	20		29-31-11	ALL
	3		W2414	3501R	20		29-31-11	ALL
D02538		1051/180/L045		PLUG				ALL
	1		W2418	0045	20		29-33-11	ALL
	2		W2418	0019	18		29-33-11	ALL
	3		W2418	3513Y	20		29-33-11	ALL
	4		W2418	3513B	20		29-33-11	ALL
	5		W2418	3513R	20		29-33-11	ALL
	6		W2418	0046	20		29-33-11	ALL
	7		W2418	001TX	20		29-33-11	ALL
			W2418	001TI			29-33-11	ALL
			W2418	0045	20		29-33-11	ALL
			W2418	0046	20		29-33-11	ALL
D02540		1197/140/L60		PLUG				ALL
	1		W2416	0031	20		29-33-11	ALL
	2		W2416	0008	18		29-33-11	ALL
	3		W2416	3501Y	20		29-33-11	ALL
	4		W2416	3501R	20		29-33-11	ALL
	5		W2416	3501B	20		29-33-11	ALL
	6		W2416	0032	20		29-33-11	ALL
	7		W2416	001TX	20		29-33-11	ALL
			W2416	001TI			29-33-11	ALL
			W2416	0031	20		29-33-11	ALL
			W2416	0032	20		29-33-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02500

Page 6

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02542		P10/ /		RCPT-				ALL
	1		W2355	0087	20		33-13-52	ALL
	2		W2355	0088	20		33-13-52	ALL
	3		W2355	0089	22		27-48-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W2355	0028	22		27-48-11	ALL
	7		W2355	0029	22		27-48-11	ALL
	8		W2355	0027	22		27-48-11	ALL
	9		W2355	0090	22		27-48-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D02546		885/155/L005		PLUG				ALL
	1		W4106	0180	24		21-61-11	ALL
	2		W4106	0190	24		21-61-11	ALL
	3		W4106	0181	20		21-61-11	ALL
	4		W4106	3018R	24		21-61-11	ALL
	5		W4106	3018B	24		21-61-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W4106	0179	24		21-61-11	ALL
	11		W4106	0183	24		21-61-11	ALL
	12		W4106	3018Y	24		21-61-11	ALL
	13		W4106	0182	20		21-61-11	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D02548		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D02548		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	A1		W1270	5582	24		21-61-11	ALL
	A2		W1270	5590	24		21-61-11	ALL
	A3	UNUSED						ALL
	B1		W1270	5591	24		21-61-11	ALL
	B2		W1270	0995	24		21-61-11	ALL
	B3		W1270	5588	24		21-61-11	ALL
	C1	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02500

Page 7

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02548		P037-00/ /		RELAY SOCKET (PLATE 'A') (continued)				001-099
D02548		P37/ /		RELAY SOCKET (PLATE 'A') (continued)				115-199
	C2		W1270	5592	24		21-61-11	ALL
	C3		W1270	5587	24		21-61-11	ALL
	D1	UNUSED						ALL
	D2		W1270	5593	24		21-61-11	ALL
	D3		W1270	5586	24		21-61-11	ALL
	X1		W1270	5581	24		21-61-11	ALL
	X2		W1270	5578	24		21-61-11	ALL
D02550		350/197/L052		PLUG				001-099
D02550		350/197/L52		PLUG				115-199
	1		W4106	0035	24		21-61-11	ALL
	2		W4106	0036	20		21-61-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D02552		350/197/L052		PLUG				ALL
	1		W2602	2006R	24		21-61-11	ALL
	2		W2602	2006B	24		21-61-11	ALL
D02554		275/280/L015		PLUG				001-099
D02554		260/270/L020		PLUG				115-199
	1		W2072	2001R	24		21-61-11	ALL
	2		W2072	2001B	24		21-61-11	ALL
	3		W2072	2003R	24		21-61-11	ALL
	4		W2072	2003B	24		21-61-11	ALL
	5	UNUSED						ALL
D02558A		E3-3/ /		PLUG				001-099
D02558A		E6-2/ /		PLUG				115-199
	A01		W1330	3007R	24		21-61-11	001-099
	A01		W1030	3007R	24		21-61-11	115-199
	A02		W1330	3007B	24		21-61-11	001-099
	A02		W1030	3007B	24		21-61-11	115-199
	A03		W1330	3007Y	24		21-61-11	001-099
	A03		W1030	3007Y	24		21-61-11	115-199
	A04		W1330	2008R	24		21-61-11	001-099
	A04		W1030	2008R	24		21-61-11	115-199
	A05		W1330	2008B	24		21-61-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D02500

Page 8

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02558A		E3-3/ /		PLUG (continued)				001-099
D02558A		E6-2/ /		PLUG (continued)				115-199
	A05		W1030	2008B	24		21-61-11	115-199
	A06		W1330	2007R	24		21-61-11	001-099
	A06		W1030	2007R	24		21-61-11	115-199
	A07		W1330	2007B	24		21-61-11	001-099
	A07		W1030	2007B	24		21-61-11	115-199
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10		W1330	3018R	24		21-61-11	001-099
	A10		W1030	3018R	24		21-61-11	115-199
	A11		W1330	3018B	24		21-61-11	001-099
	A11		W1030	3018B	24		21-61-11	115-199
	A12		W1330	3018Y	24		21-61-11	001-099
	A12		W1030	3018Y	24		21-61-11	115-199
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01		W1330	3008R	24		21-61-21	001-099
	B01		W1030	3008R	24		21-61-21	115-199
	B02		W1330	3008B	24		21-61-21	001-099
	B02		W1030	3008B	24		21-61-21	115-199
	B03		W1330	3008Y	24		21-61-21	001-099
	B03		W1030	3008Y	24		21-61-21	115-199
	B04		W1330	2010R	24		21-61-21	001-099
	B04		W1030	2010R	24		21-61-21	115-199
	B05		W1330	2010B	24		21-61-21	001-099
	B05		W1030	2010B	24		21-61-21	115-199
	B06		W1330	2009R	24		21-61-21	001-099
	B06		W1030	2009R	24		21-61-21	115-199
	B07		W1330	2009B	24		21-61-21	001-099
	B07		W1030	2009B	24		21-61-21	115-199
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10		W1330	3020R	24		21-61-21	001-099
	B10		W1030	3020R	24		21-61-21	115-199
	B11		W1330	3020B	24		21-61-21	001-099
	B11		W1030	3020B	24		21-61-21	115-199
	B12		W1330	3020Y	24		21-61-21	001-099
	B12		W1030	3020Y	24		21-61-21	115-199
	B13	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02500

Page 9

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02558A		E3-3/ /		PLUG (continued)				001-099
D02558A		E6-2/ /		PLUG (continued)				115-199
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01		W1330	3009R	24		21-61-31	001-099
	C01		W1030	3009R	24		21-61-31	115-199
	C02		W1330	3009B	24		21-61-31	001-099
	C02		W1030	3009B	24		21-61-31	115-199
	C03		W1330	3009Y	24		21-61-31	001-099
	C03		W1030	3009Y	24		21-61-31	115-199
	C04		W1330	2012R	24		21-61-31	001-099
	C04		W1030	2012R	24		21-61-31	115-199
	C05		W1330	2012B	24		21-61-31	001-099
	C05		W1030	2012B	24		21-61-31	115-199
	C06		W1330	2011R	24		21-61-31	001-099
	C06		W1030	2011R	24		21-61-31	115-199
	C07		W1330	2011B	24		21-61-31	001-099
	C07		W1030	2011B	24		21-61-31	115-199
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10		W1330	3017R	24		21-61-31	001-099
	C10		W1030	3017R	24		21-61-31	115-199
	C11		W1330	3017B	24		21-61-31	001-099
	C11		W1030	3017B	24		21-61-31	115-199
	C12		W1330	3017Y	24		21-61-31	001-099
	C12		W1030	3017Y	24		21-61-31	115-199
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15		W1330	0058	22		21-61-51	001-099
	C15		W1030	0058	24		21-61-51	115-199
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02500

Page 10

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02558A		E3-3/ /		PLUG (continued)				001-099
D02558A		E6-2/ /		PLUG (continued)				115-199
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
D02558B		E3-3/ /		PLUG				001-099
D02558B		E6-2/ /		PLUG				115-199
	A01		W1330	2024R	24		21-61-51	001-099
	A01		W1030	2024R	24		21-61-51	115-199
	A02		W1330	2024B	24		21-61-51	001-099
	A02		W1030	2024B	24		21-61-51	115-199
	A03		W1330	2023R	24		21-61-51	001-099
	A03		W1030	2023R	24		21-61-51	115-199
	A04		W1330	2023B	24		21-61-51	001-099
	A04		W1030	2023B	24		21-61-51	115-199
	A05		W1330	2020R	24		21-61-51	001-099
	A05		W1030	2020R	24		21-61-51	115-199
	A06		W1330	2020B	24		21-61-51	001-099
	A06		W1030	2020B	24		21-61-51	115-199
	A07		W1330	2021R	24		21-61-51	001-099
	A07		W1030	2021R	24		21-61-51	115-199
	A08		W1330	2021B	24		21-61-51	001-099
	A08		W1030	2021B	24		21-61-51	115-199
	A09		W1330	0030	24		21-61-11	001-099
	A09		W1030	0030	24		21-61-11	115-199
	A10	UNUSED						ALL
	A11		W1330	0034	24		21-61-11	001-099
	A11		W1030	0034	24		21-61-11	115-199
	A12		W1330	0033	24		21-61-11	001-099
	A12		W1030	0033	24		21-61-11	115-199
	A13		W1330	0032	24		21-61-11	001-099
	A13		W1030	0032	24		21-61-11	115-199
	A14	UNUSED						ALL
	A15		W1330	0031	24		21-61-11	001-099
	A15		W1030	0031	24		21-61-11	115-199
	B01		W1330	2016R	24		21-61-51	001-099
	B01		W1030	2016R	24		21-61-51	115-199
	B02		W1330	2016B	24		21-61-51	001-099
	B02		W1030	2016B	24		21-61-51	115-199

HOOKUP LIST

D280N032

91-21-51

Section D02500

Page 11

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02558B		E3-3/ /		PLUG (continued)				001-099
D02558B		E6-2/ /		PLUG (continued)				115-199
	B03		W1330	2015R	24		21-61-51	001-099
	B03		W1030	2015R	24		21-61-51	115-199
	B04		W1330	2015B	24		21-61-51	001-099
	B04		W1030	2015B	24		21-61-51	115-199
	B05		W1330	2014B	24		21-61-51	001-099
	B05		W1030	2014B	24		21-61-51	115-199
	B06		W1330	2014R	24		21-61-51	001-099
	B06		W1030	2014R	24		21-61-51	115-199
	B07		W1330	2017R	24		21-61-51	001-099
	B07		W1030	2017R	24		21-61-51	115-199
	B08		W1330	2017B	24		21-61-51	001-099
	B08		W1030	2017B	24		21-61-51	115-199
	B09		W1330	0038	24		21-61-21	001-099
	B09		W1030	0038	24		21-61-21	115-199
	B10	UNUSED						ALL
	B11		W1330	0042	24		21-61-21	001-099
	B11		W1030	0042	24		21-61-21	115-199
	B12		W1330	0041	24		21-61-21	001-099
	B12		W1030	0041	24		21-61-21	115-199
	B13		W1330	0040	24		21-61-21	001-099
	B13		W1030	0040	24		21-61-21	115-199
	B14	UNUSED						ALL
	B15		W1330	0039	24		21-61-21	001-099
	B15		W1030	0039	24		21-61-21	115-199
	C01		W1330	2019B	24		21-61-51	001-099
	C01		W1030	2019B	24		21-61-51	115-199
	C02		W1330	2019R	24		21-61-51	001-099
	C02		W1030	2019R	24		21-61-51	115-199
	C03		W1330	0057	24		21-61-51	001-099
	C03		W1030	0057	24		21-61-51	115-199
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07		W1330	2022R	24		21-61-51	001-099
	C07		W1030	2022R	24		21-61-51	115-199
	C08		W1330	2022B	24		21-61-51	001-099
	C08		W1030	2022B	24		21-61-51	115-199
	C09		W1330	0051	24		21-61-31	001-099
	C09		W1030	0051	24		21-61-31	115-199

HOOKUP LIST

D280N032

91-21-51

Section D02500

Page 12

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02558B		E3-3/ /		PLUG (continued)				001-099
D02558B		E6-2/ /		PLUG (continued)				115-199
	C10	UNUSED						ALL
	C11		W1330	0050	24		21-61-31	001-099
	C11		W1030	0050	24		21-61-31	115-199
	C12		W1330	0052	24		21-61-31	001-099
	C12		W1030	0052	24		21-61-31	115-199
	C13		W1330	0053	24		21-61-31	001-099
	C13		W1030	0053	24		21-61-31	115-199
	C14	UNUSED						ALL
	C15		W1330	0054	24		21-61-31	001-099
	C15		W1030	0054	24		21-61-31	115-199
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03		W1330	2013B	24		21-61-51	001-099
	D03		W1030	2013B	24		21-61-51	115-199
	D04		W1330	2013R	24		21-61-51	001-099
	D04		W1030	2013R	24		21-61-51	115-199
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07		W1330	2018R	24		21-61-51	001-099
	D07		W1030	2018R	24		21-61-51	115-199
	D08		W1330	2018B	24		21-61-51	001-099
	D08		W1030	2018B	24		21-61-51	115-199
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
D02558C		E3-3/ /		PLUG				001-099
D02558C		E6-2/ /		PLUG				115-199
	1	UNUSED						ALL
	2		W1330	0056	24		21-61-51	001-099
	2		W1030	0056	24		21-61-51	115-199
	3		W1330	0062	22		21-61-51	001-099
	3		W1030	0062	24		21-61-51	115-199
	4		W1330	0055	22		21-61-51	001-099
	4		W1030	0055	24		21-61-51	115-199

HOOKUP LIST

D280N032

91-21-51

Section D02500

Page 13

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02558C		E3-3/ /		PLUG (continued)				001-099
D02558C		E6-2/ /		PLUG (continued)				115-199
	5	UNUSED						ALL
	= C1	UNUSED						ALL
	= C5	UNUSED						ALL
D02560		893/155/L003		PLUG				001-099
D02560		893/155/L3		PLUG				115-199
	1		W4106	0187	24		21-61-21	ALL
	2		W4106	0184	24		21-61-21	ALL
	3		W4106	0188	20		21-61-21	ALL
	4		W4106	3010R	24		21-61-21	ALL
	5		W4106	3010B	24		21-61-21	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W4106	0186	24		21-61-21	ALL
	11		W4106	0191	24		21-61-21	ALL
	12		W4106	3010Y	24		21-61-21	ALL
	13		W4106	0189	20		21-61-21	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D02562		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D02562		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	A1		W1270	5616	24		21-61-21	ALL
	A2		W1270	5630	24		21-61-21	ALL
	A3	UNUSED						ALL
	B1		W1270	5609	24		21-61-21	ALL
	B2		W1270	0996	24		21-61-21	ALL
	B3		W1270	5614	24		21-61-21	ALL
	C1	UNUSED						ALL
	C2		W1270	5610	24		21-61-21	ALL
	C3		W1270	5613	24		21-61-21	ALL
	D1	UNUSED						ALL
	D2		W1270	5611	24		21-61-21	ALL
	D3		W1270	5612	24		21-61-21	ALL
	X1		W1270	5615	24		21-61-21	ALL
	X2		W1270	5606	24		21-61-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02500

Page 14

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02564		860/300/L013		PLUG				001-099
D02564		860/300/L13		PLUG				115-199
	1		W2728	0039	24		21-61-21	001-099
	1		W2716	0039	24		21-61-21	115-199
	2		W2728	0040	20		21-61-21	001-099
	2		W2716	0040	20		21-61-21	115-199
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D02566		860/299/L11		PLUG				ALL
	1		W2728	2001R	24		21-61-21	001-099
	1		W2716	2001R	24		21-61-21	115-199
	2		W2728	2001B	24		21-61-21	001-099
	2		W2716	2001B	24		21-61-21	115-199
D02568		517/275/R029		PLUG				ALL
	1		W4006	2052R	24		21-61-21	001-099
	1		W2706	2052R	24		21-61-21	115-199
	2		W4006	2052B	24		21-61-21	001-099
	2		W2706	2052B	24		21-61-21	115-199
	3		W4006	2053R	24		21-61-21	001-099
	3		W2706	2053R	24		21-61-21	115-199
	4		W4006	2053B	24		21-61-21	001-099
	4		W2706	2053B	24		21-61-21	115-199
	5	UNUSED						ALL
D02570		510/274/R35		PLUG-				ALL
	1		W3632	0162	24		21-61-21	ALL
	2		W3632	0163	20		21-61-21	ALL
	3		W3632	0164	20		21-61-21	ALL
D02574		893/163/L003		PLUG				001-099
D02574		893/163/L3		PLUG				115-199
	1		W4106	0212	24		21-61-31	ALL
	2		W4106	0185	24		21-61-31	ALL
	3		W4106	0213	20		21-61-31	ALL
	4		W4106	3017R	24		21-61-31	ALL
	5		W4106	3017B	24		21-61-31	ALL
	6	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02500

Page 15

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02574		893/163/L003		PLUG (continued)				001-099
D02574		893/163/L3		PLUG (continued)				115-199
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W4106	0211	24		21-61-31	ALL
	11		W4106	0192	24		21-61-31	ALL
	12		W4106	3017Y	24		21-61-31	ALL
	13		W4106	0214	20		21-61-31	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D02576		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D02576		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	A1		W1270	5633	24		21-61-31	ALL
	A2		W1270	5644	24		21-61-31	ALL
	A3	UNUSED						ALL
	B1		W1270	5976	24		21-61-31	ALL
	B2		W1270	0997	24		21-61-31	ALL
	B3		W1270	5636	24		21-61-31	ALL
	C1	UNUSED						ALL
	C2		W1270	5645	24		21-61-31	ALL
	C3		W1270	5637	24		21-61-31	ALL
	D1	UNUSED						ALL
	D2		W1270	5646	24		21-61-31	ALL
	D3		W1270	5638	24		21-61-31	ALL
	X1		W1270	5631	24		21-61-31	ALL
	X2		W1270	5639	24		21-61-31	ALL
D02578		880/300/L13		PLUG				ALL
	1		W2728	0037	24		21-61-31	001-099
	1		W2716	0037	24		21-61-31	115-199
	2		W2728	0038	20		21-61-31	001-099
	2		W2716	0038	20		21-61-31	115-199
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D02580		880/299/L11		PLUG				ALL
	1		W2728	2033R	24		21-61-31	001-099
	1		W2716	2033R	24		21-61-31	115-199

HOOKUP LIST

D280N032

91-21-51

Section D02500

Page 16

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02580		880/299/L11		PLUG (continued)				ALL
	2		W2728	2033B	24		21-61-31	001-099
	2		W2716	2033B	24		21-61-31	115-199
D02582		1174/280/R040		PLUG				001-099
D02582		1177/275/R29		PLUG				115-199
	1		W2728	2034R	24		21-61-31	001-099
	1		W2716	2034R	24		21-61-31	115-199
	2		W2728	2034B	24		21-61-31	001-099
	2		W2716	2034B	24		21-61-31	115-199
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D02584		1177/275/R45		PLUG-				ALL
	1		W3634	0162	24		21-61-31	ALL
	2		W3634	0163	20		21-61-31	ALL
	3		W3634	0164	20		21-61-31	ALL
D02590		869/179/R049		PLUG				ALL
	1	UNUSED						ALL
	2		W4104	0030	14		21-25-11	ALL
	3		W4104	0031	14		21-25-11	ALL
	4		W4104	0032	14		21-25-11	ALL
	5		W4104	0035	24		21-25-11	ALL
	6		W4104	0034	24		21-25-11	ALL
	7		W4104	0033	14		21-25-11	ALL
	8	UNUSED						ALL
D02592		522/178/L048		PLUG-				ALL
	1	UNUSED						ALL
	2		W4004	0015	14		21-25-11	ALL
	3		W4004	0016	14		21-25-11	ALL
	4		W4004	0017	14		21-25-11	ALL
	5		W4004	0020	24		21-25-11	ALL
	6		W4004	0019	24		21-25-11	ALL
	7		W4004	0018	14		21-25-11	ALL
	8	UNUSED						ALL
D02596		P36/ /		RELAY SOCKET (PLATE 'D')				ALL
	A1		W1260	6098	22		21-58-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02500

Page 17

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02596		P36/ /		RELAY SOCKET (PLATE 'D') (continued)				ALL
	A2		W1260	0900	22		21-58-12	ALL
	A3		W1260	0905	22		21-58-12	ALL
	B1		W1260	0213	22		33-16-11	ALL
	B2		W1260	0808	22		33-16-11	ALL
	B3	UNUSED						ALL
	X1		W1260	5608	16		21-25-11	ALL
	X2		W1260	5602	16		21-25-11	ALL
D02598A D02598A		E003-04/ / E6-4/ /		PLUG PLUG				001-099 115-199
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04		W1280	0457	24		29-33-11	001-099
	A04		W1032	0135	24		29-33-11	115-199
	A05		W1280	0478	24		29-33-11	001-099
	A05		W1032	0107	24		29-33-11	115-199
	A06		W1280	0480	24		29-33-11	001-099
	A06		W1032	0117	24		29-33-11	115-199
	A07	UNUSED						ALL
	A08		W1280	0474	22		29-33-11	001-099
	A08		W1032	0102	22		29-33-11	115-199
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13		W1280	0461	24		29-33-11	001-099
	A13		W1032	0129	24		29-33-11	115-199
	A14		W1280	0477	24		29-33-11	001-099
	A14		W1032	0105	24		29-33-11	115-199
	A15		W1280	0482	24		29-33-11	001-099
	A15		W1032	0116	24		29-33-11	115-199
	B01	UNUSED						ALL
	B02		W1280	1005	24		29-33-11	001-099
	B02		W1032	1003	24		29-33-11	115-199
	B03	UNUSED						ALL
	B04		W1280	0455	24		29-33-11	001-099
	B04		W1032	0134	24		29-33-11	115-199
	B05	UNUSED						ALL
	B06	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02500

Page 18

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02598A		E003-04/ /		PLUG (continued)				001-099
D02598A		E6-4/ /		PLUG (continued)				115-199
	B07	UNUSED						ALL
	B08		W1280	0458	22		29-33-11	001-099
	B08		W1032	0521	22		29-33-11	115-199
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11		W1280	1006	24		29-33-11	001-099
	B11		W1032	1002	24		29-33-11	115-199
	B12	UNUSED						ALL
	B13		W1280	0459	24		29-33-11	001-099
	B13		W1032	0128	24		29-33-11	115-199
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02		W1280	1005Z			29-33-11	001-099
	C02		W1032	1003Z			29-33-11	115-199
	C03	UNUSED						ALL
	C04		W1280	0456	24		29-33-11	001-099
	C04		W1032	0130	24		29-33-11	115-199
	C05		W1280	0473	24		29-33-11	001-099
	C05		W1032	0137	24		29-33-11	115-199
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10		W1280	1006Z			29-33-11	001-099
	C10		W1032	1002Z			29-33-11	115-199
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13		W1280	0460	22		29-33-11	001-099
	C13		W1032	0124	24		29-33-11	115-199
	C14		W1280	0472	24		29-33-11	001-099
	C14		W1032	0138	24		29-33-11	115-199
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02500

Page 19

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02598A		E003-04/ /		PLUG (continued)				001-099
D02598A		E6-4/ /		PLUG (continued)				115-199
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
D02598B		E003-04/ /		PLUG				001-099
D02598B		E6-4/ /		PLUG				115-199
	A01		W1280	0475	22		29-33-11	001-099
	A01		W1032	0104	22		29-33-11	115-199
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07		W1280	0464	24		29-33-11	001-099
	A07		W1032	0123	24		29-33-11	115-199
	A08		W1280	0479	24		29-33-11	001-099
	A08		W1032	0110	24		29-33-11	115-199
	A09		W1280	0481	24		29-33-11	001-099
	A09		W1032	0115	24		29-33-11	115-199
	A10	UNUSED						ALL
	A11		W1280	0476	22		29-33-11	001-099
	A11		W1032	0103	22		29-33-11	115-199
	A12		W1280	0467	22		29-33-11	001-099
	A12		W1032	0526	22		29-33-11	115-199
	A13		W1280	0468	22		29-33-11	001-099
	A13		W1032	0525	22		29-33-11	115-199
	A14		W1280	0465	24		29-33-11	001-099
	A14		W1032	0136	24		29-33-11	115-199
	A15		W1280	0466	24		29-33-11	001-099
	A15		W1032	0524	22		29-33-11	115-199
	B01		W1280	0469	22		29-33-11	001-099
	B01		W1032	0523	22		29-33-11	115-199
	B02	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02500

Page 20

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02598B		E003-04/ /		PLUG (continued)				001-099
D02598B		E6-4/ /		PLUG (continued)				115-199
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05		W1280	1007	24		29-33-11	001-099
	B05		W1032	1001	24		29-33-11	115-199
	B06	UNUSED						ALL
	B07		W1280	0462	24		29-33-11	001-099
	B07		W1032	0122	24		29-33-11	115-199
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11		W1280	0470	22		29-33-11	001-099
	B11		W1032	0522	22		29-33-11	115-199
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04		W1280	1007Z			29-33-11	001-099
	C04		W1032	1001Z			29-33-11	115-199
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07		W1280	0463	24		29-33-11	001-099
	C07		W1032	0118	24		29-33-11	115-199
	C08		W1280	0471	24		29-33-11	001-099
	C08		W1032	0139	24		29-33-11	115-199
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02500

Page 21

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02598B		E003-04/ /		PLUG (continued)				001-099
D02598B		E6-4/ /		PLUG (continued)				115-199
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
D02598C		E003-04/ /		PLUG				001-099
D02598C		E6-4/ /		PLUG				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	= C1	UNUSED						ALL
	= C5	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02500
Page 22 End
Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02602		P37/ /		RELAY SOCKET (PLATE 'B')				115-199
	A1		W1270	0318	24		21-44-11	115-199
	A2		W1270	0313	24		21-44-11	115-199
	A3	UNUSED						115-199
	B1		W1270	0323	24		21-44-11	115-199
	B2		W1270	0319	22		21-44-11	115-199
	B3	UNUSED						115-199
	X1		W1270	0317	24		21-44-11	115-199
	X2		W1270	6018	24		21-44-11	115-199
D02604		P037-00/ /		RELAY SOCKET (PLATE 'B')				001-099
D02604		P37/ /		RELAY SOCKET (PLATE 'B')				115-199
	A1		W1270	0311	24		21-44-11	ALL
	A2		W1270	0310	24		21-44-11	ALL
	A3	UNUSED						ALL
	B1		W1270	0323	24		21-44-11	001-099
	B1	UNUSED						115-199
	B2		W1270	0319	24		21-44-11	001-099
	B2	UNUSED						115-199
	B3	UNUSED						ALL
	C1		W1270	0313	24		21-44-11	ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1270	0312	24		21-44-11	ALL
	X2		W1270	0314	24		21-44-11	ALL
D02610		P65/ /		RELAY SOCKET-				115-199
	A1	UNUSED						115-199
	A2		W0808	0016	22		25-51-11	115-199
	A3		W0808	0008	22		25-51-11	115-199
	B1		W0808	0013	22		25-51-11	115-199
	B2		W0808	0011	22		25-51-11	115-199
	B3		W0808	0074	20		25-51-11	115-199
	X1		W0808	0018	22		25-51-11	115-199
	X2		W0808	0014	22		25-51-11	115-199
D02612		E6/ /		RELAY SOCKET				115-199
	A1	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D02600

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02612		E6/ /		RELAY SOCKET (continued)				115-199
	A2		W1024	0279	22		25-51-21	115-199
	A3		W1024	0275	22		25-51-21	115-199
	B1		W1024	0278	22		25-51-21	115-199
	B2		W1024	0277	22		25-51-21	115-199
	B3		W1024	0452	20		25-51-21	115-199
	X1		W1024	0281	22		25-51-21	115-199
	X2		W1024	0282	22		25-51-21	115-199
D02614		P65/ /		RELAY SOCKET-				115-199
	A1		W0808	0019	22		25-51-11	115-199
	A2		W0808	0023	22		25-51-11	115-199
	A3	UNUSED						115-199
	B1		W0808	0020	22		25-51-11	115-199
	B2		W0808	0012	22		25-51-11	115-199
	B3	UNUSED						115-199
	X1		W0808	0024	22		25-51-11	115-199
	X2		W0808	0021	22		25-51-11	115-199
D02616		E6/ /		RELAY SOCKET				115-199
	A1		W1024	0286	22		25-51-21	115-199
	A2		W1024	0287	22		25-51-21	115-199
	A3	UNUSED						115-199
	B1		W1024	0285	22		25-51-21	115-199
	B2		W1024	0284	22		25-51-21	115-199
	B3	UNUSED						115-199
	X1		W1024	0289	22		25-51-21	115-199
	X2		W1024	0290	22		25-51-21	115-199
D02618		1792/268/R18		PLUG				001-099
D02618		1792/280/		PLUG				115-199
	1		W2654	0031	18		49-61-14	ALL
	2	UNUSED						ALL
	3		W2654	0024	16		49-61-14	ALL
	4		W2654	0046	24		49-61-14	ALL
	5		W2654	0026	18		49-61-14	ALL
	6		W2654	0027	18		49-61-14	ALL
	7		W2654	0025	18		49-61-14	ALL
	8		W2654	0045	24		49-61-14	ALL
	9	UNUSED						ALL
	10		W2654	0029	18		49-61-14	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02600

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02618		1792/268/R18		PLUG (continued)				001-099
D02618		1792/280/		PLUG (continued)				115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D02624		P28/ /		LOAD SELECT CONTROL				ALL
	1		W1500	2013B	20		28-21-22	ALL
	2		W1500	2013R	20		28-21-22	ALL
	3		W1500	0035	20		28-21-22	ALL
	4		W1500	3001B	20		28-21-22	ALL
	5		W1500	3001Y	20		28-21-22	ALL
	6		W1500	3001R	20		28-21-22	ALL
	7	UNUSED						ALL
D02626		P33/ /		RELAY SOCKET				ALL
	A1		W1230	0064	22		28-26-11	001-099
	A1		W1230	0064	20		28-26-11	115-199
	A2		W1230	0061	22		28-26-11	001-099
	A2		W1230	0061	20		28-26-11	115-199
	A3		W1230	0065	22		28-26-11	001-099
	A3		W1230	0065	20		28-26-11	115-199
	B1		W1230	0066	20		28-26-11	ALL
	B2		W1230	0062	20		28-26-11	ALL
	B3		W1230	0067	20		28-26-11	ALL
	X1		W1230	0063	20		28-26-11	ALL
	X2		W1230	0143	20		28-26-11	ALL
D02628		P33/ /		RELAY SOCKET				ALL
	1	UNUSED						ALL
	2		W1230	0068	20		28-26-11	ALL
	3		W1230	0069	22		28-26-11	001-099
	3		W1230	0069	20		28-26-11	115-199
	4		W1230	0067	20		28-26-11	ALL
	5		W1230	0066	20		28-26-11	ALL
	6	UNUSED						ALL
	7		W1230	0070	22		28-26-11	001-099
	7		W1230	0070	20		28-26-11	115-199
	8	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02600

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02630		P037-00/ /		RELAY SOCKET (PLATE 'C')				001-099
D02630		P37/ /		RELAY SOCKET (PLATE 'C')				115-199
	A1		W1270	0725	18		75-31-11	ALL
	A2		W1270	0724	18		75-31-11	ALL
	A3		W1270	0886	16		75-31-11	ALL
	B1		W1270	0729	22		76-11-12	ALL
	B2		W1270	0728	22		76-11-12	ALL
	B3	UNUSED						ALL
	C1		W1270	0730	22		76-11-12	ALL
	C2		W1270	0782	20		80-11-21	ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1270	0804	20		80-11-21	ALL
	X2		W1270	0802	20		80-11-21	ALL
D02632		P037-00/ /		RELAY SOCKET (PLATE 'C')				001-099
D02632		P37/ /		RELAY SOCKET (PLATE 'C')				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1270	0794	24		80-11-21	ALL
	5		W1270	0803	20		80-11-21	ALL
	6		W1270	0776	20		80-11-21	ALL
	7		W1270	0807	24		80-11-21	001-099
	7		W1270	0807	20		80-11-21	115-199
	8		W1270	0799	24		80-11-21	001-099
	8		W1270	0799	20		80-11-21	115-199
	9	UNUSED						ALL
	10	UNUSED						001-099
	10		W1270	0892	22		31-31-32	115-199
	11	UNUSED						001-099
	11		W1270	0891	22		31-31-32	115-199
	12		W1270	0806	20		80-11-21	ALL
	13	UNUSED						ALL
	14		W1270	0800	24		80-11-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02600

Page 4

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02638		P037-00/ /		RELAY SOCKET (PLATE 'C')				001-099
D02638		P37/ /		RELAY SOCKET (PLATE 'C')				115-199
	A1		W1270	0708	22		31-31-01	001-099
	A1		W1270	0708	22		31-31-13	115-199
	A2		W1270	0709	22		31-31-01	001-099
	A2		W1270	0709	22		31-31-13	115-199
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2		W1270	0701	24		23-31-13	ALL
	B3		W1270	0700	24		23-31-13	ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1270	0776	20		80-11-21	001-099
	X1		W1270	0775	20		80-11-21	ALL
	X2		W1270	0731	22		80-11-21	001-099
	X2		W1270	0797	20		80-11-21	ALL
D02640		P037-00/ /		RELAY SOCKET (PLATE 'C')				001-099
D02640		P37/ /		RELAY SOCKET (PLATE 'C')				115-199
	A1	UNUSED						ALL
	A2		W1270	0749	22		78-34-21	ALL
	A2		W1270	5936	22		78-34-21	ALL
	A3		W1270	0747	22		78-34-21	ALL
	B1	UNUSED						ALL
	B2		W1270	6564	24		78-36-21	ALL
	B2		W1270	6565	24		78-36-21	ALL
	B3		W1270	6566	24		78-36-21	ALL
	X1		W1270	0749	22		78-34-21	ALL
	X1		W1270	0750	22		78-34-21	ALL
	X2		W1270	0751	22		78-34-21	ALL
D02646		1040/170/R31		PLUG				ALL
	1		W2516	0002	18		32-44-11	ALL
	2		W2516	3501B	20		32-44-11	ALL
	3		W2516	3501Y	20		32-44-11	ALL
	4		W2516	3501R	20		32-44-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02600

Page 5

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02646		1040/170/R31		PLUG (continued)				ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W2516	2505B	20		32-44-11	ALL
	9		W2516	0001	18		32-44-11	ALL
	10		W2516	2505R	20		32-44-11	ALL
D02648		OUTBD/FWD/L/H		PLUG				115-199
	1	4L	W3000	4501W	18		32-46-11	115-199
	2	UNUSED						115-199
	3	4H	W3000	4501G	18		32-46-11	115-199
D02650		INBD/FWD/L/H		PLUG				115-199
	1	4L	W3030	4501W	18		32-46-11	115-199
	2	UNUSED						115-199
	3	4H	W3030	4501G	18		32-46-11	115-199
D02652		OUTBD/AFT/L/H		PLUG				115-199
	1	4L	W3002	4501W	18		32-46-11	115-199
	2	UNUSED						115-199
	3	4H	W3002	4501G	18		32-46-11	115-199
D02654		INBD/AFT/L/H		PLUG				115-199
	1	4L	W3032	4501W	18		32-46-11	115-199
	2	UNUSED						115-199
	3	4H	W3032	4501G	18		32-46-11	115-199
D02656		INBD/FWD/R/H		PLUG				115-199
	1	4L	W4900	4501W	18		32-46-11	115-199
	2	UNUSED						115-199
	3	4H	W4900	4501G	18		32-46-11	115-199
D02658		OUTBD/FWD/R/H		PLUG				115-199
	1	4L	W4930	4501W	18		32-46-11	115-199
	2	UNUSED						115-199
	3	4H	W4930	4501G	18		32-46-11	115-199
D02660		INBD/AFT/R/H		PLUG				115-199
	1	4L	W4902	4501W	18		32-46-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D02600

Page 6

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02660		INBD/AFT/R/H		PLUG (continued)				115-199
	2	UNUSED						115-199
	3	4H	W4902	4501G	18		32-46-11	115-199
D02662		OUTBD/AFT/R/H		PLUG				115-199
	1	4L	W4932	4501W	18		32-46-11	115-199
	2	UNUSED						115-199
	3	4H	W4932	4501G	18		32-46-11	115-199
D02666		1040/170/R045		PLUG				ALL
	1	UNUSED						ALL
	2		W2512	2521R	18		32-42-12	ALL
	3		W2512	2521B	18		32-42-12	ALL
D02668		1040/173/L051		PLUG				ALL
	1		W2412	2501B	20		32-42-12	ALL
	2		W2412	2501R	20		32-42-12	ALL
	3	UNUSED						ALL
	DED		W2412	2501ZI			32-42-12	ALL
D02670		1040/175/L056		PLUG				ALL
	1	UNUSED						ALL
	2		W2412	2517R	18		32-42-12	ALL
	3		W2412	2517B	18		32-42-12	ALL
			W2412	0002	18		32-42-12	ALL
			W2412	2517Z			32-42-12	ALL
D02672		1040/173/L056		PLUG				ALL
	1		W2412	1013	18		32-42-12	ALL
	2		W2412	0070	18		32-42-12	ALL
	3	UNUSED						ALL
			W2412	0001	18		32-42-12	ALL
			W2412	1013Z			32-42-12	ALL
D02674		1040/172/L050		PLUG				ALL
	1		W2412	1019	18		32-42-12	ALL
	2		W2412	1027	18		32-42-12	ALL
	3	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02600

Page 7

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02676		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D02676		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1270	5874	22		32-09-12	ALL
	7		W1270	6392	22		34-45-01	ALL
	8		W1270	6393	22		34-45-01	ALL
	9	UNUSED						ALL
	10		W1270	6395	20		23-32-02	ALL
	11		W1270	6402	22		23-32-02	ALL
	12		W1270	5875	22		32-09-12	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D02678		P36/ /		RELAY SOCKET (PLATE 'A')				ALL
	A1	UNUSED						ALL
	A2	UNUSED						ALL
	A3	UNUSED						ALL
	B1		W1260	5795	24		34-46-12	ALL
	B2		W1260	5796	24		34-46-12	ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2	UNUSED						001-099
	C2		W1260	5916	22		31-31-32	115-199
	C3	UNUSED						001-099
	C3		W1260	5917	22		31-31-32	115-199
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1260	5936	22		32-61-11	001-099
	X1		W1260	5937	22		32-61-11	001-099
	X1		W1260	5783	22		32-61-11	ALL
	X2		W1260	5782	22		32-61-11	ALL
D02690		PPS177/ /		PLUG				ALL
	1		W3466	0004	20		36-11-22	ALL
	2	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02600

Page 8

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02690		PPS177/ /		PLUG (continued)				ALL
	3		W3466	0006	20		36-11-22	ALL
	4	UNUSED						ALL
	5		W3466	0007	18		36-11-22	ALL
	6		W3466	0003	20		36-11-22	ALL
	7	UNUSED						ALL
	8		W3466	0005	20		36-11-22	ALL
	9		W3466	0009	18		36-11-22	ALL
	10		W3466	0008	18		36-11-22	ALL
D02692		901/150/R039		PLUG				ALL
	1	UNUSED						ALL
	2		W2506	2502R	20		36-11-22	ALL
	3		W2506	2502B	20		36-11-22	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W2506	0086	20		36-11-22	ALL
	7	UNUSED						ALL
D02694		231/100/L045		PLUG				001-099
D02694		231/174/L036		PLUG				115-199
	1		W2156	2001R	24		21-33-11	ALL
	2		W2156	2001B	24		21-33-11	ALL
	3		W2156	2002R	24		21-33-11	ALL
	4		W2156	2002B	24		21-33-11	ALL
	5		W2156	0028	20		21-33-11	ALL
D02696		P005-00/ /		PLUG				001-099
D02696		P5/ /		PLUG				115-199
	1		W2078	0041	20		33-13-31	ALL
	2		W2078	0042	20		33-13-31	ALL
	3		W2078	0165	24		21-33-11	ALL
	4		W2078	0166	24		21-33-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02600

Page 9

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02696		P005-00/ /		PLUG (continued)				001-099
D02696		P5/ /		PLUG (continued)				115-199
	CAP	Y	W2078	0365	20		SPARE	115-199
	CAP	Y	W2078	0366	20		SPARE	115-199
	CAP	Y	W2078	0367	20		SPARE	115-199
	CAP	Y	W2078	0368	20		SPARE	115-199
	CAP	Y	W2078	0369	20		SPARE	115-199
	CAP	Y	W2078	0389	20		SPARE	115-199
	CAP	Y	W2078	0390	20		SPARE	115-199
	CAP	Y	W2078	0391	20		SPARE	115-199
D02698		P005-00/ /		PLUG				001-099
D02698		P5/ /		PLUG				115-199
	1	UNUSED						ALL
	2		W2156	0023	24		21-33-11	ALL
	3		W2156	0020	24		21-33-11	ALL
	4		W2156	0022	24		21-33-11	ALL
	5	UNUSED						ALL
	6		W2156	2001R	24		21-33-11	ALL
	7		W2156	2001B	24		21-33-11	ALL
	8		W2156	2002R	24		21-33-11	ALL
	9		W2156	2002B	24		21-33-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02600

Page 10 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02700		P36/ /		RELAY SOCKET (PLATE 'D')				ALL
	A1		W1260	0382	18		75-31-11	ALL
	A2		W1260	0381	16		75-31-11	ALL
	A3		W1260	0603	16		75-31-11	ALL
	B1		W1260	0394	22		76-11-11	ALL
	B2		W1260	0383	22		76-11-11	ALL
	B3	UNUSED						ALL
	C1		W1260	0393	22		76-11-11	ALL
	C2		W1260	0459	20		80-11-11	ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1260	0465	20		80-11-11	ALL
	X2		W1260	0464	20		80-11-11	ALL
D02702		P36/ /		RELAY SOCKET (PLATE 'D')				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1260	0456	24		80-11-11	ALL
	5		W1260	0458	24		80-11-11	ALL
	6		W1260	0443	20		80-11-11	ALL
	7		W1260	0467	24		80-11-11	001-099
	7		W1260	0467	20		80-11-11	115-199
	8		W1260	0454	24		80-11-11	001-099
	8		W1260	0454	20		80-11-11	115-199
	9	UNUSED						ALL
	10	UNUSED						001-099
	10		W1260	0611	22		31-31-32	115-199
	11	UNUSED						001-099
	11		W1260	0610	22		31-31-32	115-199
	12		W1260	0466	20		80-11-11	ALL
	13	UNUSED						ALL
	14		W1260	0457	24		80-11-11	ALL
D02708		P36/ /		RELAY SOCKET (PLATE 'D')				ALL
	A1		W1260	0321	22		31-31-01	001-099
	A1		W1260	0321	22		31-31-13	115-199
	A2		W1260	0322	22		31-31-01	001-099
	A2		W1260	0322	22		31-31-13	115-199

HOOKUP LIST

D280N032

91-21-51

Section D02700

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02708		P36/ /		RELAY SOCKET (PLATE 'D') (continued)				ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2		W1260	5649	24		23-31-13	ALL
	B3		W1260	5648	24		23-31-13	ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1260	0442	20		80-11-11	ALL
	X2		W1260	0384	20		76-11-11	001-099
	X2		W1260	0446	20		80-11-11	ALL
D02712		P34/ /		RELAY SOCKET				ALL
	A1		W1240	0045	22		33-24-11	ALL
	A2		W1240	0050	22		33-24-11	ALL
	A3	UNUSED						ALL
	B1		W1240	0042	22		33-24-11	ALL
	B2		W1240	0051	22		33-24-11	ALL
	B3	UNUSED						ALL
	C1		W1240	0100	20		23-31-13	ALL
	C2		W1240	0101	20		23-31-13	ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1240	0049	24		33-24-11	001-099
	X1		W1240	0049	22		33-24-11	115-199
	X2		W1240	0048	24		33-24-11	001-099
	X2		W1240	0048	22		33-24-11	115-199
D02714		P34/ /		RELAY SOCKET				115-199
	A1		W1240	0056	22		33-24-11	115-199
	A2		W1240	0055	22		33-24-11	115-199
	A3	UNUSED						115-199
	B1	UNUSED						115-199
	B2	UNUSED						115-199
	B3	UNUSED						115-199
	X1		W1240	0054	22		33-24-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D02700

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02714		P34/ /		RELAY SOCKET (continued)				115-199
	X2		W1240	0053	22		33-24-11	115-199
D02716		P33/ /		RELAY SOCKET				ALL
	A1		W1230	0075	22		28-26-11	001-099
	A1		W1230	0075	20		28-26-11	115-199
	A2		W1230	0077	22		28-26-11	001-099
	A2		W1230	0077	20		28-26-11	115-199
	A3		W1230	0076	22		28-26-11	001-099
	A3		W1230	0076	20		28-26-11	115-199
	B1		W1230	0080	20		28-26-11	ALL
	B2		W1230	0073	20		28-26-11	ALL
	B3		W1230	0079	20		28-26-11	ALL
	X1		W1230	0074	20		28-26-11	ALL
	X2		W1230	0078	20		28-26-11	ALL
D02718		P33/ /		RELAY SOCKET				ALL
	1	UNUSED						ALL
	2		W1230	0081	20		28-26-11	ALL
	3		W1230	0082	22		28-26-11	001-099
	3		W1230	0082	20		28-26-11	115-199
	4		W1230	0079	20		28-26-11	ALL
	5		W1230	0080	20		28-26-11	ALL
	6	UNUSED						ALL
	7		W1230	0083	22		28-26-11	001-099
	7		W1230	0083	20		28-26-11	115-199
	8	UNUSED						ALL
D02720		230/200/L13		RCPT				001-099
D02720		225/208/L13		RCPT				115-199
	1		W2064	0062	20		21-45-11	ALL
	2		W2064	0063	20		21-45-11	ALL
	3		W2064	0068	20		21-45-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D02722		232/199/R013		RCPT				001-099
D02722		225/200/R13		RCPT				115-199
	1		W2070	0372	20		21-45-11	ALL
	2		W2070	0365	20		21-45-11	ALL
	3		W2070	0366	20		21-45-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02700

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02722		232/199/R013		RCPT (continued)				001-099
D02722		225/200/R13		RCPT (continued)				115-199
	4	UNUSED						ALL
	5	UNUSED						ALL
D02734		P36/ /		RELAY SOCKET (PLATE 'A')				ALL
	1	UNUSED						ALL
	2		W1260	5826	22		32-42-11	ALL
	3		W1260	5822	22		32-42-11	ALL
	4		W1260	5844	22		32-42-11	ALL
	5	UNUSED						ALL
	6		W1260	5827	22		32-42-11	ALL
	7		W1260	5825	22		32-42-11	ALL
	8		W1260	5824	22		32-42-11	ALL
D02736		P36/ /		RELAY SOCKET (PLATE 'A')				ALL
	1	UNUSED						ALL
	2		W1260	5828	22		32-42-11	ALL
	3		W1260	5836	22		32-42-11	ALL
	4		W1260	5841	22		32-42-11	ALL
	5	UNUSED						ALL
	6		W1260	5829	22		32-42-11	ALL
	7		W1260	5839	22		32-42-11	ALL
	8		W1260	5840	22		32-42-11	ALL
D02738		P36/ /		RELAY SOCKET (PLATE 'A')				ALL
	1	UNUSED						ALL
	2		W1260	5835	22		32-42-11	ALL
	3		W1260	5847	22		32-42-11	ALL
	4		W1260	5856	22		32-42-11	001-099
	4		W1260	5856	20		32-42-11	115-199
	5	UNUSED						ALL
	6		W1260	5832	22		32-42-11	ALL
	7		W1260	5846	22		32-42-11	ALL
	8		W1260	5845	22		32-42-11	ALL
D02740		P36/ /		RELAY SOCKET (PLATE 'A')				ALL
	1	UNUSED						ALL
	2		W1260	5831	22		32-42-11	ALL
	3		W1260	5851	22		32-42-11	ALL
	4		W1260	5855	22		32-42-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02700

Page 4

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02740		P36/ /		RELAY SOCKET (PLATE 'A') (continued)				ALL
	5	UNUSED						ALL
	6		W1260	5834	22		32-42-11	ALL
	7		W1260	5854	22		32-42-11	ALL
	8		W1260	5850	22		32-42-11	ALL
D02742		P36/ /		RELAY SOCKET (PLATE 'A')				ALL
	1	UNUSED						ALL
	2		W1260	5862	22		32-42-11	ALL
	3		W1260	5858	22		32-42-11	ALL
	4		W1260	5860	22		32-42-11	ALL
	5	UNUSED						ALL
	6		W1260	5861	22		32-42-11	ALL
	7		W1260	5859	22		32-42-11	ALL
	8		W1260	5857	22		32-42-11	ALL
D02744A		E5-2/ /		PLUG				001-099
D02744A		E6-4/ /		PLUG				115-199
	A01		W1284	0325	22		32-42-11	001-099
	A01		W1032	0394	22		32-42-11	115-199
	A02	UNUSED						ALL
	A03		W1284	0326	22		32-42-11	001-099
	A03		W1032	0395	22		32-42-11	115-199
	A04	UNUSED						ALL
	A05		W1284	2516R	22		32-42-11	001-099
	A05		W1032	2516R	22		32-42-11	115-199
	A06		W1284	2516B	22		32-42-11	001-099
	A06		W1032	2516B	22		32-42-11	115-199
	A07		W1284	0193	22		32-42-12	001-099
	A07		W1032	0429	22		32-42-12	115-199
	A08		W1284	0168	22		32-42-12	001-099
	A08		W1032	0421	22		32-42-12	115-199
	A09	UNUSED						ALL
	A10		W1284	0123	22		32-42-12	001-099
	A10		W1032	0431	22		32-42-12	115-199
	A11	UNUSED						ALL
	A12		W1284	2517R	22		32-42-11	001-099
	A12		W1032	2517R	22		32-42-11	115-199
	A13		W1284	2517B	22		32-42-11	001-099
	A13		W1032	2517B	22		32-42-11	115-199
	A14	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02700

Page 5

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02744A		E5-2/ /		PLUG (continued)				001-099
D02744A		E6-4/ /		PLUG (continued)				115-199
	A15		W1284	0334	22		32-42-11	001-099
	A15		W1032	0403	22		32-42-11	115-199
	B01		W1284	0335	22		32-42-11	001-099
	B01		W1032	0404	22		32-42-11	115-199
	B02	UNUSED						ALL
	B03		W1284	0336	22		32-42-11	001-099
	B03		W1032	0405	22		32-42-11	115-199
	B04	UNUSED						ALL
	B05		W1284	2520R	22		32-42-11	001-099
	B05		W1032	2520R	22		32-42-11	115-199
	B06		W1284	2520B	22		32-42-11	001-099
	B06		W1032	2520B	22		32-42-11	115-199
	B07	UNUSED						ALL
	B08		W1284	0129	22		32-42-12	001-099
	B08		W1032	0435	22		32-42-12	115-199
	B09	UNUSED						ALL
	B10		W1284	0124	22		32-42-12	001-099
	B10		W1032	0432	22		32-42-12	115-199
	B11	UNUSED						ALL
	B12		W1284	2521R	22		32-42-11	001-099
	B12		W1032	2521R	22		32-42-11	115-199
	B13		W1284	2521B	22		32-42-11	001-099
	B13		W1032	2521B	22		32-42-11	115-199
	B14	UNUSED						ALL
	B15		W1284	0327	22		32-42-11	001-099
	B15		W1032	0396	22		32-42-11	115-199
	C01		W1284	0313	22		32-42-11	001-099
	C01		W1032	0386	22		32-42-11	115-199
	C02		W1284	0322	22		32-42-11	001-099
	C02		W1032	0391	22		32-42-11	115-199
	C03		W1284	0315	22		32-42-11	001-099
	C03		W1032	0388	22		32-42-11	115-199
	C04		W1284	0321	22		32-42-11	001-099
	C04		W1032	0392	22		32-42-11	115-199
	C05		W1284	0311	22		32-42-11	001-099
	C05		W1032	0384	22		32-42-11	115-199
	C06		W1284	0319	22		32-42-11	001-099
	C06		W1032	0461	22		32-42-11	115-199
	C07		W1284	0127	22		32-42-12	001-099

HOOKUP LIST

D280N032

91-21-51

Section D02700

Page 6

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02744A		E5-2/ /		PLUG (continued)				001-099
D02744A		E6-4/ /		PLUG (continued)				115-199
	C07		W1032	0433	22		32-42-12	115-199
	C08		W1284	0169	22		32-42-12	001-099
	C08		W1032	0422	22		32-42-12	115-199
	C09		W1284	2501B	22		32-42-12	001-099
	C09		W1032	2522B	22		32-42-12	115-199
	C10	UNUSED						ALL
	C11		W1284	0317	22		32-42-11	001-099
	C11		W1032	0389	22		32-42-11	115-199
	C12	UNUSED						ALL
	C13		W1284	0323	22		32-42-11	001-099
	C13		W1032	0393	22		32-42-11	115-199
	C14	UNUSED						ALL
	C15		W1284	0318	22		32-42-11	001-099
	C15		W1032	0390	22		32-42-11	115-199
	D01		W1284	0301	22		32-42-11	001-099
	D01		W1032	0373	22		32-42-11	115-199
	D02	UNUSED						ALL
	D03		W1284	0320	22		32-42-11	001-099
	D03		W1032	0037	22		32-42-11	115-199
	D04	UNUSED						ALL
	D05		W1284	0312	22		32-42-11	001-099
	D05		W1032	0385	22		32-42-11	115-199
	D06		W1284	0314	22		32-42-11	001-099
	D06		W1032	0387	22		32-42-11	115-199
	D07		W1284	0184	22		32-42-12	001-099
	D07		W1032	0420	22		32-42-12	115-199
	D08	UNUSED						ALL
	D09		W1284	2501R	22		32-42-12	001-099
	D09		W1032	2522R	22		32-42-12	115-199
	D10	UNUSED						ALL
	D11		W1284	5006R	22		32-42-11	001-099
	D11		W1032	5001R	22		32-42-11	115-199
	D12		W1284	5006B	22		32-42-11	001-099
	D12		W1032	5001B	22		32-42-11	115-199
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15		W1284	0454	22		32-44-11	001-099
	D15		W1032	0454	22		32-44-11	115-199
	DED		W1284	2501Z			32-42-12	001-099

HOOKUP LIST

D280N032

91-21-51

Section D02700

Page 7

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02744A		E5-2/ /		PLUG (continued)				001-099
D02744A		E6-4/ /		PLUG (continued)				115-199
	DED		W1284	2516Z			32-42-11	001-099
	DED		W1284	2517Z			32-42-11	001-099
	DED		W1284	2520Z			32-42-11	001-099
	DED		W1284	2521Z			32-42-11	001-099
	DED		W1284	5006Z			32-42-11	001-099
	DED		W1032	2516Z			32-42-11	115-199
	DED		W1032	2517Z			32-42-11	115-199
	DED		W1032	2520Z			32-42-11	115-199
	DED		W1032	2521Z			32-42-11	115-199
	DED		W1032	2522Z			32-42-12	115-199
D02744B		E5-2/ /		PLUG				001-099
D02744B		E6-4/ /		PLUG				115-199
	A01		W1284	0332	22		32-42-11	001-099
	A01		W1032	0401	22		32-42-11	115-199
	A02		W1284	0185	22		32-42-12	001-099
	A02		W1032	0427	22		32-42-12	115-199
	A03		W1284	0333	22		32-42-11	001-099
	A03		W1032	0402	22		32-42-11	115-199
	A04		W1284	0191	22		32-42-12	001-099
	A04		W1032	0424	22		32-42-12	115-199
	A05		W1284	2518R	22		32-42-11	001-099
	A05		W1032	2518R	22		32-42-11	115-199
	A06		W1284	2518B	22		32-42-11	001-099
	A06		W1032	2518B	22		32-42-11	115-199
	A07		W1284	0188	22		32-42-12	001-099
	A07		W1032	0425	22		32-42-12	115-199
	A08		W1284	0166	22		32-42-12	001-099
	A08		W1032	0410	22		32-42-12	115-199
	A09		W1284	0133	22		32-42-12	001-099
	A09		W1032	0438	22		32-42-12	115-199
	A10		W1284	0128	22		32-42-12	001-099
	A10		W1032	0434	22		32-42-12	115-199
	A11		W1284	0308	22		32-42-11	001-099
	A11		W1032	0460	22		32-42-11	115-199
	A12		W1284	2519R	22		32-42-11	001-099
	A12		W1032	2519R	22		32-42-11	115-199
	A13		W1284	2519B	22		32-42-11	001-099
	A13		W1032	2519B	22		32-42-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D02700

Page 8

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02744B		E5-2/ /		PLUG (continued)				001-099
D02744B		E6-4/ /		PLUG (continued)				115-199
	A14	UNUSED						ALL
	A15		W1284	0330	22		32-42-11	001-099
	A15		W1032	0399	22		32-42-11	115-199
	B01		W1284	0328	22		32-42-11	001-099
	B01		W1032	0397	22		32-42-11	115-199
	B02	UNUSED						ALL
	B03		W1284	0329	22		32-42-11	001-099
	B03		W1032	0398	22		32-42-11	115-199
	B04	UNUSED						ALL
	B05		W1284	2512R	22		32-42-11	001-099
	B05		W1032	2514R	22		32-42-11	115-199
	B06		W1284	2512B	22		32-42-11	001-099
	B06		W1032	2514B	22		32-42-11	115-199
	B07	UNUSED						ALL
	B08		W1284	0132	22		32-42-12	001-099
	B08		W1032	0437	22		32-42-12	115-199
	B09		W1284	0189	22		32-42-12	001-099
	B09		W1032	0423	22		32-42-12	115-199
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12		W1284	2515R	22		32-42-11	001-099
	B12		W1032	2515R	22		32-42-11	115-199
	B13		W1284	2515B	22		32-42-11	001-099
	B13		W1032	2515B	22		32-42-11	115-199
	B14	UNUSED						ALL
	B15		W1284	0331	22		32-42-11	001-099
	B15		W1032	0400	22		32-42-11	115-199
	C01		W1284	0307	22		32-42-11	001-099
	C01		W1032	0379	22		32-42-11	115-199
	C02		W1284	0303	22		32-42-11	001-099
	C02		W1032	0376	22		32-42-11	115-199
	C03		W1284	0179	22		32-42-12	001-099
	C03		W1032	0455	22		32-42-12	115-199
	C04	UNUSED						ALL
	C05		W1284	0306	22		32-42-11	001-099
	C05		W1032	0378	22		32-42-11	115-199
	C06	UNUSED						ALL
	C07		W1284	0183	22		32-42-12	001-099
	C07		W1032	0457	22		32-42-12	115-199

HOOKUP LIST

D280N032

91-21-51

Section D02700

Page 9

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02744B		E5-2/ /		PLUG (continued)				001-099
D02744B		E6-4/ /		PLUG (continued)				115-199
	C08		W1284	0167	22		32-42-12	001-099
	C08		W1032	0411	22		32-42-12	115-199
	C09		W1284	0181	22		32-42-12	001-099
	C09		W1032	0458	22		32-42-12	115-199
	C10		W1284	0182	22		32-42-12	001-099
	C10		W1032	0459	22		32-42-12	115-199
	C11		W1284	0192	22		32-42-12	001-099
	C11		W1032	0428	22		32-42-12	115-199
	C12		W1284	0180	22		32-42-12	001-099
	C12		W1032	0456	22		32-42-12	115-199
	C13		W1284	0305	22		32-42-11	001-099
	C13		W1032	0377	22		32-42-11	115-199
	C14		W1284	0170	22		32-42-12	001-099
	C14		W1032	0412	22		32-42-12	115-199
	C15		W1284	0304	22		32-42-11	001-099
	C15		W1032	0375	22		32-42-11	115-199
	D01		W1284	0302	22		32-42-11	001-099
	D01		W1032	0374	22		32-42-11	115-199
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04		W1284	0130	22		32-42-12	001-099
	D04		W1032	0436	22		32-42-12	115-199
	D05		W1284	0309	22		32-42-11	001-099
	D05		W1032	0380	22		32-42-11	115-199
	D06		W1284	0187	22		32-42-12	001-099
	D06		W1032	0426	22		32-42-12	115-199
	D07		W1284	0172	22		32-42-12	001-099
	D07		W1032	0413	22		32-42-12	115-199
	D08		W1284	0173	22		32-42-12	001-099
	D08		W1032	0414	22		32-42-12	115-199
	D09		W1284	0174	22		32-42-12	001-099
	D09		W1032	0415	22		32-42-12	115-199
	D10		W1284	0175	22		32-42-12	001-099
	D10		W1032	0416	22		32-42-12	115-199
	D11		W1284	0176	22		32-42-12	001-099
	D11		W1032	0417	22		32-42-12	115-199
	D12		W1284	0171	22		32-42-12	001-099
	D12		W1032	0439	22		32-42-12	115-199
	D13		W1284	5003R	22		32-42-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D02700

Page 10

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02744B		E5-2/ /		PLUG (continued)				001-099
D02744B		E6-4/ /		PLUG (continued)				115-199
	D13		W1032	5002R	22		32-42-11	115-199
	D14		W1284	5003B	22		32-42-11	001-099
	D14		W1032	5002B	22		32-42-11	115-199
	D15		W1284	0039	24		32-41-11	001-099
	D15		W1032	0036	24		32-41-11	115-199
	DED		W1284	2512Z			32-42-11	001-099
	DED		W1284	2515Z			32-42-11	001-099
	DED		W1284	2518Z			32-42-11	001-099
	DED		W1284	2519Z			32-42-11	001-099
	DED		W1284	5003Z			32-42-11	001-099
	DED		W1032	2514Z			32-42-11	115-199
	DED		W1032	2515Z			32-42-11	115-199
	DED		W1032	2518Z			32-42-11	115-199
	DED		W1032	2519Z			32-42-11	115-199
	DED		W1032	5002Z			32-42-11	115-199
D02744C		E5-2/ /		PLUG				001-099
D02744C		E6-4/ /		PLUG				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	= C1	UNUSED						ALL
	= C5	UNUSED						ALL
D02746		P36/ /		RELAY SOCKET (PLATE 'D')				ALL
	A1	UNUSED						ALL
	A2		W1260	0633	22		78-34-11	001-099
	A2		W1260	0416	22		78-34-11	115-199
	A3		W1260	0413	22		78-34-11	ALL
	B1	UNUSED						ALL
	B2		W1260	6526	24		78-36-11	ALL
	B2		W1260	6527	24		78-36-11	ALL
	B3		W1260	6528	24		78-36-11	ALL
	X1		W1260	0633	22		78-34-11	001-099
	X1		W1260	0417	22		78-34-11	ALL
	X2		W1260	0418	22		78-34-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02700

Page 11

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02752		1040/170/L038		PLUG				ALL
	1	UNUSED						ALL
	2		W2412	2521R	18		32-42-12	ALL
	3		W2412	2521B	18		32-42-12	ALL
D02754		P36/ /		RELAY SOCKET (PLATE 'A')				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1260	2001B	24		21-31-11	ALL
	5		W1260	2001R	24		21-31-11	ALL
	6		W1260	5723	22		32-09-11	ALL
	7		W1260	5801	24		34-61-14	ALL
	8		W1260	5802	24		34-61-14	ALL
	9	UNUSED						ALL
	10		W1260	0788	22		32-09-11	ALL
	11		W1260	0789	22		32-09-11	ALL
	12		W1260	5729	22		32-09-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D02756		205/220/L045		PLUG				ALL
	= A		W2042	0001	20		30-31-11	ALL
	= B		W2042	0002	20		30-31-11	ALL
D02758		210/208/		PLUG-				001-099
D02758		210/214/L045		PLUG				115-199
	= A		W2042	0003	20		30-31-11	001-099
	= A		W2054	0001	20		30-31-11	115-199
	= B		W2042	0004	20		30-31-11	001-099
	= B		W2054	0002	20		30-31-11	115-199
D02760		1040/175/R030		PLUG				ALL
	1		W2514	3501R	18		32-42-11	ALL
	2		W2514	3501Y	18		32-42-11	ALL
	3		W2514	3501B	18		32-42-11	ALL
	4		W2514	2502R	22		31-31-63	001-099
	5		W2514	2502B	22		31-31-63	001-099
	6		W2514	0026	22		31-31-63	001-099
	7	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D02700

Page 12

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02762		210/220/R045		PLUG				001-099
D02762		210/214/R045		PLUG				115-199
	= A		W2070	0045	20		30-31-12	001-099
	= A		W2142	0001	20		30-31-12	115-199
	= B		W2070	0046	20		30-31-12	001-099
	= B		W2142	0002	20		30-31-12	115-199
D02764		210/208/R045		PLUG				001-099
D02764		210/220/R45		PLUG				115-199
	= A		W2070	0047	20		30-31-12	001-099
	= A		W2154	0001	20		30-31-12	115-199
	= B		W2070	0048	20		30-31-12	001-099
	= B		W2154	0002	20		30-31-12	115-199
D02768		P36/ /		RELAY SOCKET (PLATE 'A')				ALL
	1	UNUSED						001-099
	1		W1260	5646	24		SPARE	115-199
	2	UNUSED						001-099
	2		W1260	5647	24		SPARE	115-199
	3		W1260	5776	22		32-44-11	ALL
	4		W1260	5771	22		32-44-11	ALL
	5		W1260	5772	22		32-44-11	ALL
	6		W1260	5770	22		32-44-11	ALL
	7		W1260	5652	22		23-71-11	ALL
	8		W1260	5651	22		23-71-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W1260	5769	22		32-44-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D02774		435/202/R070		PLUG				ALL
	1		W2271	0001	20		30-33-11	ALL
	2		W2271	2502R	20		34-12-21	ALL
	3		W2271	2501R	20		34-12-11	ALL
	4		W2271	2501B	20		34-12-11	ALL
	5		W2271	2502B	20		34-12-21	ALL
	6		W2271	0006	20		30-33-11	ALL
	7		W2271	0007	20		34-12-21	ALL
	DED		W2271	2501Z			34-12-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02700

Page 13

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02774		435/202/R070		PLUG (continued)				ALL
	DED		W2271	2502Z			34-12-21	ALL
D02776		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D02776		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	A1	UNUSED						ALL
	A2		W1270	5769	24		30-33-11	ALL
	A3		W1270	5767	24		30-33-11	ALL
	B1		W1270	5774	20		30-33-11	ALL
	B2		W1270	5921	24		34-12-22	ALL
	B3	UNUSED						ALL
	C1		W1270	5775	20		30-33-11	ALL
	C2	UNUSED						ALL
	C3		W1270	5771	24		30-33-11	ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3		W1270	5920	24		34-12-22	ALL
	X1		W1270	5768	24		30-33-11	ALL
	X2		W1270	5773	24		30-33-11	ALL
D02780		PPS175/ /		PLUG				ALL
	1		W3366	0007	20		36-11-12	ALL
	2	UNUSED						ALL
	3		W3366	0005	20		36-11-12	ALL
	4	UNUSED						ALL
	5		W3366	0004	18		36-11-12	ALL
	6		W3366	0003	20		36-11-12	ALL
	7	UNUSED						ALL
	8		W3366	0008	20		36-11-12	ALL
	9		W3366	0009	18		36-11-12	ALL
	10		W3366	0006	18		36-11-12	ALL
D02782		901/150/R036		PLUG				ALL
	1	UNUSED						ALL
	2		W2406	2521R	20		36-11-12	ALL
	3		W2406	2521B	20		36-11-12	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W2406	0083	20		36-11-12	ALL
	7	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02700

Page 14

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02784		FSS100/ /		PLUG				115-199
	1		W4206	4502B	20		28-41-41	115-199
	2		W4206	4502R	20		28-41-41	115-199
	3		W4206	4502G	20		28-41-41	115-199
	4		W4206	4502Y	20		28-41-41	115-199
	5		W4206	4502K	20		28-41-41	115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
			W4206	FRZA			28-41-41	115-199
			W4206	YAAA			28-41-41	115-199
D02786		FSS101/ /		PLUG-				115-199
	1	VN	W4206	002TX	18		28-41-41	115-199
	2	UNUSED						115-199
	3	UNUSED						115-199
	= C1		W4206	002TI			28-41-41	115-199
			W4206	FRZD			28-41-41	115-199
			W4206	YAAD			28-41-41	115-199
D02788		OSS336/ /		PLUG-				115-199
	1		W3326	4501RY	20		28-41-21	115-199
	2		W3326	4501RK	20		28-41-21	115-199
	3		W3326	4501RG	20		28-41-21	115-199
	4		W3326	4501RB	20		28-41-21	115-199
	5		W3326	4501WK	20		28-41-21	115-199
	6		W3326	4501RV	20		28-41-21	115-199
	7		W3326	4501WN	20		28-41-21	115-199
	8		W3326	4501WR	20		28-41-21	115-199
	9		W3326	4501WY	20		28-41-21	115-199
	10		W3326	4501WO	20		28-41-21	115-199
	11		W3326	4501WG	20		28-41-21	115-199
	12		W3326	4501WB	20		28-41-21	115-199
	13		W3326	4501AA	20		SPARE	115-199
	14		W3326	4501WV	20		SPARE	115-199
	15	UNUSED						115-199
	16		W3326	4501W	20		28-41-21	115-199
D02790		IRSS258/ /		PLUG (CAP AND STOW PER MR69018-002)				115-199
D02790		IRSS258/ /		PLUG				115-199
	1	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D02700

Page 15

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02790		IRSS258/ /		PLUG (CAP AND STOW PER MR69018-002) (continued)				115-199
D02790		IRSS258/ /		PLUG (continued)				115-199
	2	UNUSED						115-199
	3		W3306	2504B	20		28-41-21	115-199
	4		W3306	2504R	20		28-41-21	115-199
	5		W3306	0016	20		28-41-21	115-199
	6		W3306	2505B	20		28-41-21	115-199
	7		W3306	2505R	20		28-41-21	115-199
	8		W3306	1004	18		28-41-21	115-199
	9	UNUSED						115-199
	10		W3306	0018	18		28-41-21	115-199
D02792		OSS361/ /		PLUG-				115-199
	1	VN	W4206	001TX	18		28-41-21	115-199
	2	UNUSED						115-199
	3	UNUSED						115-199
	= C1		W4206	001TI			28-41-21	115-199
D02794A		E6-4/ /		PLUG				115-199
	A01	63	W1032	4501W	22		32-46-11	115-199
	A02	62	W1032	4501G	22		32-46-11	115-199
	A03	UNUSED						115-199
	A04	63	W1032	4502W	22		32-46-11	115-199
	A05	62	W1032	4502G	22		32-46-11	115-199
	A06	UNUSED						115-199
	A07	63	W1032	4505W	22		32-46-11	115-199
	A08	62	W1032	4505G	22		32-46-11	115-199
	A09	UNUSED						115-199
	A10	63	W1032	4506W	22		32-46-11	115-199
	A11	62	W1032	4506G	22		32-46-11	115-199
	A12	UNUSED						115-199
	A13	63	W1032	4503W	22		32-46-11	115-199
	A14	62	W1032	4503G	22		32-46-11	115-199
	A15	UNUSED						115-199
	B01	UNUSED						115-199
	B02	UNUSED						115-199
	B03	UNUSED						115-199
	B04	UNUSED						115-199
	B05	UNUSED						115-199
	B06	UNUSED						115-199
	B07	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D02700

Page 16

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02794A		E6-4/ /		PLUG (continued)				115-199
	B08	UNUSED						115-199
	B09	UNUSED						115-199
	B10	UNUSED						115-199
	B11	UNUSED						115-199
	B12	UNUSED						115-199
	B13	UNUSED						115-199
	B14	UNUSED						115-199
	B15	UNUSED						115-199
	C01	63	W1032	4504W	22		32-46-11	115-199
	C02	62	W1032	4504G	22		32-46-11	115-199
	C03	UNUSED						115-199
	C04	63	W1032	4507W	22		32-46-11	115-199
	C05	62	W1032	4507G	22		32-46-11	115-199
	C06	UNUSED						115-199
	C07	63	W1032	4508W	22		32-46-11	115-199
	C08	62	W1032	4508G	22		32-46-11	115-199
	C09	UNUSED						115-199
	C10	UNUSED						115-199
	C11	UNUSED						115-199
	C12	UNUSED						115-199
	C13	UNUSED						115-199
	C14	UNUSED						115-199
	C15	UNUSED						115-199
	D01	UNUSED						115-199
	D02	UNUSED						115-199
	D03	UNUSED						115-199
	D04	UNUSED						115-199
	D05	UNUSED						115-199
	D06	UNUSED						115-199
	D07	UNUSED						115-199
	D08	UNUSED						115-199
	D09	UNUSED						115-199
	D10	UNUSED						115-199
	D11	UNUSED						115-199
	D12	UNUSED						115-199
	D13	UNUSED						115-199
	D14	UNUSED						115-199
	D15	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D02700

Page 17

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02794B		E6-4/ /		PLUG				115-199
	A01	UNUSED						115-199
	A02	UNUSED						115-199
	A03	UNUSED						115-199
	A04	UNUSED						115-199
	A05	UNUSED						115-199
	A06	UNUSED						115-199
	A07	UNUSED						115-199
	A08	UNUSED						115-199
	A09	UNUSED						115-199
	A10	UNUSED						115-199
	A11	UNUSED						115-199
	A12	UNUSED						115-199
	A13	UNUSED						115-199
	A14	UNUSED						115-199
	A15	UNUSED						115-199
	B01	UNUSED						115-199
	B02	UNUSED						115-199
	B03	UNUSED						115-199
	B04	UNUSED						115-199
	B05	UNUSED						115-199
	B06	UNUSED						115-199
	B07	UNUSED						115-199
	B08	UNUSED						115-199
	B09	UNUSED						115-199
	B10	UNUSED						115-199
	B11	UNUSED						115-199
	B12	UNUSED						115-199
	B13	UNUSED						115-199
	B14	UNUSED						115-199
	B15	UNUSED						115-199
	C01	UNUSED						115-199
	C02	UNUSED						115-199
	C03	UNUSED						115-199
	C04	UNUSED						115-199
	C05	UNUSED						115-199
	C06	UNUSED						115-199
	C07		W1032	0039	24		32-46-11	115-199
	C08	UNUSED						115-199
	C09	UNUSED						115-199
	C10		W1032	0077	24		32-46-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D02700

Page 18

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02794B		E6-4/ /		PLUG (continued)				115-199
	C11		W1032	0078	24		32-46-11	115-199
	C12		W1032	0079	24		32-46-11	115-199
	C13		W1032	0080	24		32-46-11	115-199
	C14	UNUSED						115-199
	C15		W1032	0075	22		32-46-11	115-199
	D01	UNUSED						115-199
	D02	UNUSED						115-199
	D03	UNUSED						115-199
	D04	UNUSED						115-199
	D05		W1032	0073	24		32-46-11	115-199
	D06	UNUSED						115-199
	D07	UNUSED						115-199
	D08	UNUSED						115-199
	D09		W1032	0083	24		32-46-11	115-199
	D10		W1032	0081	24		32-46-11	115-199
	D11		W1032	0082	24		32-46-11	115-199
	D12		W1032	0076	24		32-46-11	115-199
	D13	UNUSED						115-199
	D14		W1032	0074	22		32-46-11	115-199
	D15		W1032	0038	22		32-46-11	115-199
D02794C		E6-4/ /		PLUG				115-199
	1	UNUSED						115-199
	2	UNUSED						115-199
	3	UNUSED						115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
	= C1	UNUSED						115-199
	= C5	UNUSED						115-199
D02796		1140/191/L016		PLUG-OVERHEAT DETECTION ELEM				ALL
	= 1		W2416	1010	18		26-17-11	ALL
D02798		1135/196/L16		PLUG				ALL
	= 1		W2416	1009	18		26-17-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02700

Page 19 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02800		PPS153/ /		PLUG				ALL
	A		W3466	0001	18		26-11-22	ALL
	B	UNUSED						ALL
	C	UNUSED						ALL
	D		W3466	0002	18		26-11-22	ALL
	E	UNUSED						ALL
D02804		PPS153/ /		PLUG				ALL
	A		W3468	0001	18		26-11-22	ALL
	B	UNUSED						ALL
	C	UNUSED						ALL
	D		W3468	0002	18		26-11-22	ALL
	E	UNUSED						ALL
D02808		ISS101/ /		PLUG				115-199
	1		W4218	4502B	20		28-41-41	115-199
	2		W4218	4502R	20		28-41-41	115-199
	3		W4218	4502G	20		28-41-41	115-199
	4		W4218	4502Y	20		28-41-41	115-199
	5		W4218	4502K	20		28-41-41	115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
			W4218	FRZB			28-41-41	115-199
			W4218	YAAB			28-41-41	115-199
D02810		IRSS160/ /		PLUG				115-199
D02810		IRSS160/ /		PLUG (CAP AND STOW PER MR69018-002)				115-199
	1	UNUSED						115-199
	2	UNUSED						115-199
	3		W3406	2506B	20		28-41-41	115-199
	4		W3406	2506R	20		28-41-41	115-199
	5		W3406	1024	20		28-41-41	115-199
	6		W3406	2507B	20		28-41-41	115-199
	7		W3406	2507R	20		28-41-41	115-199
	8		W3406	0007	18		28-41-41	115-199
	9	UNUSED						115-199
	10		W3406	0022	18		28-41-41	115-199
D02812		ISS101/ /		PLUG				115-199
	1	VN	W4218	002TX	18		28-41-41	115-199
	2	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D02800

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02812		ISS101/ /		PLUG (continued)				115-199
	3 = C1	UNUSED						115-199
			W4218	002TI			28-41-41	115-199
			W4218	FRZA			28-41-41	115-199
			W4218	YAAA			28-41-41	115-199
D02814		OSS335/ /		PLUG-				115-199
	1		W3462	4501RY	20		28-41-31	115-199
	2		W3462	4501RK	20		28-41-31	115-199
	3		W3462	4501RG	20		28-41-31	115-199
	4		W3462	4501RB	20		28-41-31	115-199
	5		W3462	4501WK	20		28-41-31	115-199
	6		W3462	4501RV	20		28-41-31	115-199
	7		W3462	4501WN	20		28-41-31	115-199
	8		W3462	4501WR	20		28-41-31	115-199
	9		W3462	4501WY	20		28-41-31	115-199
	10		W3462	4501WO	20		28-41-31	115-199
	11		W3462	4501WG	20		28-41-31	115-199
	12		W3462	4501WB	20		28-41-31	115-199
	13		W3462	4501AA	20		SPARE	115-199
	14		W3462	4501WV	20		SPARE	115-199
	15	UNUSED						115-199
	16		W3462	4501W	20		28-41-31	115-199
D02816		IRSS255/ /		PLUG (CAP AND STOW PER MR69018-002)				115-199
D02816		IRSS255/ /		PLUG				115-199
	1	UNUSED						115-199
	2	UNUSED						115-199
	3		W3406	2504B	20		28-41-31	115-199
	4		W3406	2504R	20		28-41-31	115-199
	5		W3406	1016	20		28-41-31	115-199
	6		W3406	2505B	20		28-41-31	115-199
	7		W3406	2505R	20		28-41-31	115-199
	8		W3406	0004	18		28-41-31	115-199
	9	UNUSED						115-199
	10		W3406	0018	18		28-41-31	115-199
D02818		OSS360/ /		PLUG-				115-199
	1	VN	W4218	001TX	18		28-41-31	115-199
	2	UNUSED						115-199
	3	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D02800

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02818		OSS360/ /		PLUG- (continued)				115-199
	= C1		W4218	001TI			28-41-31	115-199
D02820		1135/197/R017		PLUG				ALL
	= 1		W2514	1003	18		26-17-11	ALL
D02822		1135/195/R017		PLUG				ALL
	= 1		W2514	1002	18		26-17-11	ALL
D02824		P50/ /		RCPT				ALL
	1		W1140	0432	24		26-17-11	ALL
	2		W1140	0281	24		26-18-11	ALL
	3		W1140	0283	24		26-18-11	ALL
	4		W1140	0476	22		26-18-11	ALL
	5		W1140	0255	24		26-17-11	ALL
	6		W1140	0477	24		26-18-11	ALL
	7		W1140	0305	24		26-18-21	ALL
	8		W1140	0297	24		26-18-11	ALL
	9		W1140	0260	24		26-17-11	ALL
	10		W1140	0295	24		26-18-11	ALL
	11		W1140	0309	24		26-18-21	ALL
	12		W1140	0308	24		26-18-21	ALL
	13		W1140	0291	24		26-18-11	ALL
	14		W1140	0472	24		26-18-11	ALL
	15		W1140	0307	24		26-18-21	ALL
	16		W1140	0312	24		26-18-21	ALL
	17		W1140	0289	24		26-18-11	ALL
	18		W1140	0287	24		26-18-11	ALL
	19		W1140	0313	24		26-18-21	ALL
	20		W1140	0284	24		26-18-11	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W1140	0292	24		26-18-11	ALL
	25		W1140	0300	24		26-18-11	ALL
	26		W1140	0298	24		26-18-11	ALL
	27		W1140	0254	24		26-17-11	ALL
	28		W1140	0303	24		26-18-11	ALL
	29		W1140	PN01			26-18-21	ALL
	30		W1140	0261	24		26-17-11	ALL
	31		W1140	0474	24		26-18-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02800

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02824		P50/ /		RCPT (continued)				ALL
	32	UNUSED						ALL
	33		W1140	0473	24		26-18-11	ALL
	34	UNUSED						ALL
	35		W1140	0256	22		26-17-11	ALL
	36		W1140	0280	22		26-18-11	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39		W1140	0252	24		26-17-11	ALL
	40		W1140	0262	24		26-17-11	ALL
	41		W1140	PN01			26-18-21	ALL
	42		W1140	0296	24		26-18-11	ALL
	43		W1140	0282	24		26-18-11	ALL
	44		W1140	0431	24		26-18-11	ALL
	45		W1140	0290	24		26-18-11	ALL
	46		W1140	0294	24		26-18-11	ALL
	47	UNUSED						ALL
	48		W1140	0310	24		26-18-21	ALL
	49		W1140	0288	24		26-18-11	ALL
	50		W1140	0311	24		26-18-21	ALL
	51		W1140	0285	24		26-18-11	ALL
	52		W1140	0314	24		26-18-21	ALL
	53		W1140	0286	24		26-18-11	ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	56	UNUSED						ALL
	57		W1140	0293	24		26-18-11	ALL
	58		W1140	0301	24		26-18-11	ALL
	59		W1140	0299	24		26-18-11	ALL
	60		W1140	0302	24		26-18-11	ALL
	61	UNUSED						ALL
	62	UNUSED						ALL
	63	UNUSED						ALL
	64	UNUSED						ALL
	65	UNUSED						ALL
	66	UNUSED						ALL
D02828		P034-00/ /		RELAY SOCKET				001-099
D02828		P34/ /		RELAY SOCKET				115-199
	A1		W1240	0004	16		33-21-11	ALL
	A2		W1240	0002	16		33-21-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02800

Page 4

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02828		P034-00/ /		RELAY SOCKET (continued)				001-099
D02828		P34/ /		RELAY SOCKET (continued)				115-199
	A3	UNUSED						ALL
	B1		W1240	0003	16		33-21-11	ALL
	B2		W1240	0001	16		33-21-11	ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	X1		W1240	0006	24		33-21-11	ALL
	X2		W1240	0005	24		33-21-11	ALL
D02830		PPS242/ /		PLUG				ALL
	1		W5202	0017	20		78-36-21	ALL
	2		W5202	0018	20		78-36-21	001-002, 115-199
	2		W5202	0036	20		78-36-21	003-099
	3	UNUSED						001-002, 115-199
	3		W5202	0018	20		78-36-21	003-099
D02832		PPS240/ /R		PLUG				ALL
	1		W5208	1002	18		78-34-21	ALL
	2	UNUSED						ALL
	3		W5208	1001	20		78-34-21	ALL
D02838		P50/ /		RCPT				ALL
	1		W1140	2503R	24		77-12-31	ALL
	2		W1140	2503B	24		77-12-31	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W1140	0315	22		77-12-42	ALL
	14		W1140	0320	22		77-12-42	ALL
	15		W1140	0047	24		21-51-11	ALL
	16		W1140	0510	22		34-61-13	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02800

Page 5

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02838		P50/ /		RCPT (continued)				ALL
	17	UNUSED						ALL
	18		W1140	0316	22		77-12-42	ALL
	19	UNUSED						ALL
	20		W1140	0218	24		80-11-21	001-099
	20		W1140	0218	22		80-11-21	115-199
	21		W1140	0219	24		80-11-21	ALL
	22		W1140	0258	24		77-12-42	ALL
	23		W1140	0319	24		77-12-42	001-099
	23		W1140	0319	22		77-12-42	115-199
	24		W1140	0339	22		77-12-42	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W1140	0351	22		30-34-22	ALL
	30		W1140	0388	24		26-15-11	001-099
	30		W1140	0413	24		26-15-11	115-199
	31	UNUSED						ALL
	32		W1140	PE01			77-12-42	001-099
	32		W1140	PE01			78-34-21	115-199
	33		W1140	0513	22		29-21-31	001-099
	33		W1140	0514	22		29-21-31	115-199
	34		W1140	0515	22		29-21-31	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45		W1140	PE01			77-12-42	001-099
	45		W1140	PE01			78-34-21	115-199
	46	UNUSED						ALL
	47	UNUSED						ALL
	48		W1140	0048	24		21-51-11	ALL
	49		W1140	0318	22		77-12-42	ALL
	50		W1140	0415	24		34-61-13	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02800

Page 6

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02838		P50/ /		RCPT (continued)				ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54		W1140	0257	24		77-12-42	ALL
	55	UNUSED						ALL
	56	UNUSED						ALL
	57		W1140	0340	22		77-12-42	ALL
	58		W1140	0258	24		77-12-42	ALL
	59	UNUSED						ALL
	60	UNUSED						ALL
	61		W1140	0350	22		30-34-22	ALL
	62		W1140	0349	22		30-34-22	ALL
	63		W1140	0387	24		26-15-11	001-099
	63		W1140	0524	24		26-15-11	115-199
	64		W1140	0250	24		77-12-42	001-099
	64		W1140	0250	22		77-12-42	115-199
	65	UNUSED						ALL
	66		W1140	0257	24		77-12-42	ALL
	DED		W1140	2503Z			77-12-31	ALL
D02852		697/290/R029		PLUG-				001-099
D02852		697/290/R29		PLUG-				115-199
	1		W3644	0040	22		33-27-21	ALL
	2		W3644	0021	20		33-27-21	001-099
	2		W3644	0021	22		33-27-21	115-199
	3		W3644	0019	22		33-27-21	ALL
	4		W3644	0020	20		33-27-21	001-099
	4		W3644	0020	22		33-27-21	115-199
	5		W3644	0018	22		33-27-21	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D02878		P005-00/ /		PLUG				001-099
D02878		P5/ /		PLUG				115-199
	= A1		W2078	1001	20		33-13-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02800

Page 7

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02878		P005-00/ /		PLUG (continued)				001-099
D02878		P5/ /		PLUG (continued)				115-199
	= C1		W2078	1001Z			33-13-12	ALL
D02880		P061-00/ /		PLUG-				115-199
	A	UNUSED						115-199
	B	UNUSED						115-199
	C		W0069	5012R	24		31-31-12	115-199
	D		W0069	5012B	24		31-31-12	115-199
	E		W0069	5010R	24		31-31-12	115-199
	F		W0069	5010B	24		31-31-12	115-199
	G		W0069	5011R	24		31-31-12	115-199
	H		W0069	5011B	24		31-31-12	115-199
	J	UNUSED						115-199
	K		W0069	0005	24		31-31-12	115-199
	L		W0069	0065	22		33-16-13	115-199
	M		W0069	0066	22		33-16-13	115-199
	N	UNUSED						115-199
	P	UNUSED						115-199
	R		W0069	0002	22		31-31-12	115-199
	S		W0069	0060	20		31-31-12	115-199
	T	UNUSED						115-199
	U	UNUSED						115-199
	V	UNUSED						115-199
	W	UNUSED						115-199
	X		W0069	0007	22		31-31-12	115-199
	Y		W0069	0044	22		31-31-12	115-199
	Z		W0069	0004	22		31-31-12	115-199
	DED		W0069	5010Z			31-31-12	115-199
	DED		W0069	5011Z			31-31-12	115-199
	DED		W0069	5012Z			31-31-12	115-199
	A-		W0069	0003	24		31-31-12	115-199
	B-		W0069	0006	24		31-31-12	115-199
	C-		W0069	0046	24		31-31-12	115-199
	D-		W0069	0047	24		31-31-12	115-199
	E-	UNUSED						115-199
	F-		W0069	0063	20		33-13-71	115-199
	G-		W0069	0064	20		33-13-71	115-199
	H-	UNUSED						115-199
	I-	UNUSED						115-199
	J-		W0069	0021	24		31-31-12	115-199

HOOKUP LIST

D280N032

91-21-51

Section D02800

Page 8

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02880		P061-00/ /		PLUG- (continued)				115-199
	K-	UNUSED						115-199
	M-	UNUSED						115-199
	N-	UNUSED						115-199
	P-	UNUSED						115-199
	Q-	UNUSED						115-199
	R-	UNUSED						115-199
	S-		W0069	0061	20		31-31-12	115-199
	T-		W0069	0062	20		31-31-12	115-199
D02884		P003-01/ /		PLUG				ALL
	A1	UNUSED						ALL
	A2	UNUSED						ALL
	A3	UNUSED						ALL
	B1		W0001	0154	20		33-13-12	ALL
	B2		W0001	0155	20		33-13-12	ALL
	B3	UNUSED						ALL
	C1		W0001	0092	20		33-13-11	ALL
	C2		W0001	0089	20		33-13-11	001-099
	C2		W0001	0089	20		33-13-12	115-199
	C3		W0001	0167	20		33-13-12	ALL
	D1		W0001	0168	24		33-13-12	ALL
	D2		W0001	0152	24		33-13-12	ALL
	D3		W0001	0316	24		33-13-12	ALL
	G1		W0001	PB01			33-13-12	ALL
	G2	UNUSED						ALL
	G3		W0001	PB01			33-13-12	ALL
	X1		W0001	0165	24		33-13-12	ALL
	X2		W0001	0164	20		33-13-12	ALL
D02886		1180/185/R042		PLUG				ALL
	1		W2510	0049	18		27-23-11	ALL
	2		W2510	3502B	20		27-23-11	ALL
	3		W2510	3502Y	20		27-23-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W2510	0050	18		27-23-11	ALL
	10		W2510	3502R	20		27-23-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02800

Page 9

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02888		P3-1/ /		PLUG				001-099
D02888		P3-3/ /		PLUG				115-199
	1		W0003	3007Y	24		33-13-21	ALL
	2		W0003	0112	20		33-13-21	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0003	3007B	24		33-13-21	ALL
	6		W0003	3007R	24		33-13-21	ALL
	7		W0003	0119	20		33-13-21	ALL
	8		W0003	0118	20		33-13-21	ALL
	9		W0003	0113	20		33-13-21	ALL
	10	UNUSED						ALL
	11		W0003	0111	20		33-13-21	ALL
	12		W0003	0110	24		33-13-21	ALL
D02890		P008-00/ /		PLUG				ALL
	1		W2066	3004Y	24		33-13-52	ALL
	2		W2066	0068	20		33-13-52	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W2066	3004B	24		33-13-52	ALL
	6		W2066	3004R	24		33-13-52	ALL
	7		W2066	0031	20		33-13-52	ALL
	8	16	W2066	0067	16		33-13-52	ALL
	9		W2066	0365	20		33-13-52	ALL
	10	UNUSED						ALL
	11	16	W2066	0042	16		33-13-52	ALL
	12		W2066	0025	24		33-13-52	ALL
D02892		P008-00/ /		PLUG				ALL
	1		W2066	3003Y	24		33-13-51	ALL
	2		W2066	0069	20		33-13-51	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W2066	3003B	24		33-13-51	ALL
	6		W2066	3003R	24		33-13-51	ALL
	7		W2066	0015	20		33-13-51	ALL
	8	16	W2066	0024	16		33-13-51	ALL
	9		W2066	0019	20		33-13-51	ALL
	10	UNUSED						ALL
	11	16	W2066	0014	16		33-13-51	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02800

Page 10

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02892		P008-00/ /		PLUG (continued)				ALL
	12		W2066	0010	24		33-13-51	ALL
D02894		P008-00/ /		PLUG				001-099
D02894		P8/ /		PLUG				115-199
	1		W2066	3001Y	24		33-13-52	ALL
	2		W2066	0066	20		33-13-52	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W2066	3001B	24		33-13-52	ALL
	6		W2066	3001R	24		33-13-52	ALL
	7		W2066	0064	20		33-13-52	ALL
	8		W2066	0353	20		33-13-52	ALL
	9		W2066	0264	20		33-13-52	ALL
	10	UNUSED						ALL
	11		W2066	0065	20		33-13-52	ALL
	12		W2066	0063	24		33-13-52	ALL
D02896		P61/ /		PLUG				115-199
	1		W2070	3011Y	24		33-13-71	115-199
	2		W2070	0296	20		33-13-71	115-199
	3	UNUSED						115-199
	4	UNUSED						115-199
	5		W2070	3011B	24		33-13-71	115-199
	6		W2070	3011R	24		33-13-71	115-199
	7		W2070	0485	20		33-13-71	115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11		W2070	0311	20		33-13-71	115-199
	12		W2070	0224	24		33-13-71	115-199
D02898		P34/ /		RELAY SOCKET				ALL
	A1		W1240	0009	16		33-21-31	ALL
	A2		W1240	0013	16		33-21-31	ALL
	A3		W1240	0007	16		33-21-31	ALL
	B1		W1240	0011	16		33-21-31	ALL
	B2		W1240	0014	16		33-21-31	ALL
	B3		W1240	0008	16		33-21-31	ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02800

Page 11

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02898		P34/ /		RELAY SOCKET (continued)				ALL
	C3	UNUSED						ALL
	X1		W1240	0010	16		33-21-31	ALL
	X2		W1240	0012	18		33-21-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02800

Page 12 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02900		242.8/150/L5		PLUG				ALL
	1		W5102	0017	20		78-36-11	ALL
	2		W5102	0018	20		78-36-11	001-002, 115-199
	2		W5102	0036	20		78-36-11	003-099
	3	UNUSED						001-002, 115-199
	3		W5102	0018	20		78-36-11	003-099
D02902		N252/147/L6		PLUG				ALL
	1		W5108	1002	18		78-34-11	ALL
	2	UNUSED						ALL
	3		W5108	1001	20		78-34-11	ALL
D02914		P003-01/ /		PLUG				ALL
	1		W0001	3008Y	24		33-13-12	ALL
	2		W0001	0160	20		33-13-12	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0001	3008B	24		33-13-12	ALL
	6		W0001	3008R	24		33-13-12	ALL
	7		W0001	0169	20		33-13-12	ALL
	8		W0001	0484	20		33-13-41	ALL
	9		W0001	0155	20		33-13-12	ALL
	10	UNUSED						ALL
	11	16	W0001	0171	16		33-13-12	ALL
	12		W0001	0152	24		33-13-12	ALL
D02916		1180/180/L017		PLUG				ALL
	1		W4204	0056	20		27-23-11	ALL
	2		W4204	0141	20		27-23-11	ALL
	3		W4204	0140	20		27-23-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W4204	0057	20		27-23-11	ALL
	10		W4204	0143	20		27-23-11	ALL
D02918		1180/195/L035		PLUG				ALL
	1		W2414	0015	18		27-23-11	ALL
	2		W2414	3502R	20		27-23-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02900

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02918		1180/195/L035		PLUG (continued)				ALL
	3		W2414	3502Y	20		27-23-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W2414	0016	18		27-23-11	ALL
	10		W2414	3502B	20		27-23-11	ALL
D02920		1048/190/L021		PLUG				001-099
D02920		1048/190/L21		PLUG				115-199
	1		W2443	0008	18		27-51-31	ALL
	2		W2443	0009	18		27-51-31	ALL
	3		W2443	0003	20		27-51-31	ALL
	4	UNUSED						ALL
	5		W2443	0005	20		27-51-31	ALL
	6	UNUSED						ALL
	7		W2443	0006	20		27-51-31	ALL
D02922		P3-3/ /		PLUG				001-099
D02922		P3-1/ /		PLUG				115-199
	1		W0003	3003Y	24		33-13-41	ALL
	2		W0003	0138	20		33-13-41	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0003	3003B	24		33-13-41	ALL
	6		W0003	3003R	24		33-13-41	ALL
	7		W0003	0142	20		33-13-41	ALL
	8		W0003	0139	20		33-13-41	ALL
	9		W0003	0137	20		33-13-41	ALL
	10	UNUSED						ALL
	11		W0003	0141	20		33-13-41	ALL
	12		W0003	0140	24		33-13-41	ALL
D02924		1215/147/L047		PLUG-				001-099
D02924		1215/165/L50		PLUG-				115-199
	1		W2612	0007	20		29-11-31	ALL
	2		W2612	0001	18		29-11-31	ALL
	3		W2612	0002	20		29-11-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02900

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02926		1210/165/L052		PLUG-				001-099
D02926		1220/165/L50		PLUG-				115-199
	1	UNUSED						ALL
	2		W2612	0005	18		29-11-31	ALL
	3		W2612	0006	20		29-11-31	ALL
D02928		1210/146/L043		PLUG-				001-099
D02928		1215/165/L50		PLUG-				115-199
	1	UNUSED						ALL
	2		W2612	0003	18		29-11-31	ALL
	3		W2612	0004	20		29-11-31	ALL
D02930		P032-00/ /		PLUG				ALL
	1		W1138	0078	22		29-11-31	ALL
	2		W1138	0079	22		29-11-31	ALL
	3		W1138	0080	22		29-11-31	ALL
	4		W1138	0081	22		29-11-31	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	16	W1138	0074	16		29-11-31	ALL
	9		W1138	0073	20		29-11-31	ALL
	10		W1138	0075	20		29-11-31	ALL
	11		W1138	0077	22		29-11-31	ALL
	12		W1138	0077	22		29-11-31	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W1138	0076	20		29-11-31	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	16	W1138	0154	16		29-11-31	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D02934		P031-00/ /		PLUG				ALL
	1		W1136	0336	22		29-11-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02900

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02934		P031-00/ /		PLUG (continued)				ALL
	2		W1136	0337	22		29-11-31	ALL
	3		W1136	0338	22		29-11-31	ALL
	4		W1136	0339	22		29-11-31	ALL
	5		W1136	0020	22		29-11-31	ALL
	6		W1136	0021	22		29-11-31	ALL
	7	UNUSED						ALL
	8	16	W1136	0134	16		29-11-31	ALL
	9		W1136	0335	20		29-11-31	ALL
	10		W1136	0011	20		29-11-31	ALL
	11		W1136	0013	22		29-11-31	ALL
	12		W1136	0013	22		29-11-31	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W1136	0012	20		29-11-31	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	16	W1136	0018	16		29-11-31	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D02939A		E002-03/ /		RECPT				115-199
	1	UNUSED						115-199
	2		W1175	007CX			34-58-11	115-199
	3	UNUSED						115-199
	4	UNUSED						115-199
	= C1	UNUSED						115-199
	= C2		W1175	007CO			34-58-11	115-199
	= C3	UNUSED						115-199
	= C4	UNUSED						115-199
D02939B		E002-03/ /		RECPT				115-199
	A01		W1175	5110R	24		22-13-11	115-199
	A02	UNUSED						115-199
	A03	UNUSED						115-199
	A04		W1175	0421	22		34-31-11	115-199
	A05	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D02900

Page 4

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02939B		E002-03/ /		RECPT (continued)				115-199
	A06	UNUSED						115-199
	A07	UNUSED						115-199
	A08		W1175	5138R	22		34-58-11	115-199
	A09	UNUSED						115-199
	A10	UNUSED						115-199
	A11	UNUSED						115-199
	B01		W1175	5110B	24		22-13-11	115-199
	B02	UNUSED						115-199
	B03	UNUSED						115-199
	B04	UNUSED						115-199
	B05		W1175	0549	24		34-31-11	115-199
	B06	UNUSED						115-199
	B07	UNUSED						115-199
	B08		W1175	5138B	22		34-58-11	115-199
	B09	UNUSED						115-199
	B10	UNUSED						115-199
	B11	UNUSED						115-199
	C01	UNUSED						115-199
	C02		W1175	5136R	22		34-58-11	115-199
	C03	UNUSED						115-199
	C04	UNUSED						115-199
	C05	UNUSED						115-199
	C06	UNUSED						115-199
	C07	UNUSED						115-199
	C08	UNUSED						115-199
	C09	UNUSED						115-199
	C10	UNUSED						115-199
	C11	UNUSED						115-199
	D01	UNUSED						115-199
	D02		W1175	5136B	22		34-58-11	115-199
	D03	UNUSED						115-199
	D04	UNUSED						115-199
	D05	UNUSED						115-199
	D06	UNUSED						115-199
	D07	UNUSED						115-199
	D08	UNUSED						115-199
	D09	UNUSED						115-199
	D10	UNUSED						115-199
	D11	UNUSED						115-199
	E01	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D02900

Page 5

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02939B		E002-03/ /		RECPT (continued)				115-199
	E02	UNUSED						115-199
	E03	UNUSED						115-199
	E04	UNUSED						115-199
	E05	UNUSED						115-199
	E06	UNUSED						115-199
	E07	UNUSED						115-199
	E08	UNUSED						115-199
	E09	UNUSED						115-199
	E10	UNUSED						115-199
	E11	UNUSED						115-199
	E12	UNUSED						115-199
	E13	UNUSED						115-199
	E14	UNUSED						115-199
	E15	UNUSED						115-199
	F01	UNUSED						115-199
	F02	UNUSED						115-199
	F03	UNUSED						115-199
	F04	UNUSED						115-199
	F05	UNUSED						115-199
	F06	UNUSED						115-199
	F07	UNUSED						115-199
	F08	UNUSED						115-199
	F09	UNUSED						115-199
	F10	UNUSED						115-199
	F11	UNUSED						115-199
	F12	UNUSED						115-199
	F13	UNUSED						115-199
	F14	UNUSED						115-199
	F15		W1175	0428	22		22-13-11	115-199
	G01		W1175	5114R	24		34-31-11	115-199
	G02	UNUSED						115-199
	G03	UNUSED						115-199
	G04	UNUSED						115-199
	G05	UNUSED						115-199
	G06	UNUSED						115-199
	G07	UNUSED						115-199
	G08		W1175	5139R	22		34-58-11	115-199
	G09	UNUSED						115-199
	G10	UNUSED						115-199
	G11	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D02900

Page 6

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02939B		E002-03/ /		RECPT (continued)				115-199
	H01		W1175	5114B	24		34-31-11	115-199
	H02	UNUSED						115-199
	H03	UNUSED						115-199
	H04	UNUSED						115-199
	H05	UNUSED						115-199
	H06	UNUSED						115-199
	H07	UNUSED						115-199
	H08		W1175	5139B	22		34-58-11	115-199
	H09	UNUSED						115-199
	H10	UNUSED						115-199
	H11	UNUSED						115-199
	J01		W1175	5112R	24		34-31-11	115-199
	J02		W1175	5137R	22		34-58-11	115-199
	J03	UNUSED						115-199
	J04	UNUSED						115-199
	J05	UNUSED						115-199
	J06	UNUSED						115-199
	J07	UNUSED						115-199
	J08	UNUSED						115-199
	J09	UNUSED						115-199
	J10		W1175	2539R	24		23-51-13	115-199
	J11	UNUSED						115-199
	K01		W1175	5112B	24		34-31-11	115-199
	K02		W1175	5137B	22		34-58-11	115-199
	K03	UNUSED						115-199
	K04		W1175	0549	24		34-31-11	115-199
	K05	UNUSED						115-199
	K06	UNUSED						115-199
	K07	UNUSED						115-199
	K08	UNUSED						115-199
	K09	UNUSED						115-199
	K10		W1175	2539B	24		23-51-13	115-199
	K11	UNUSED						115-199
	1T	UNUSED						115-199
	2T	UNUSED						115-199
	1TC	UNUSED						115-199
	2TC	UNUSED						115-199
	1TR	UNUSED						115-199
	2TR	UNUSED						115-199
	DED		W1175	2539Z			23-51-13	115-199

HOOKUP LIST

D280N032

91-21-51

Section D02900

Page 7

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02939B		E002-03/ /		RECPT (continued)				115-199
	DED		W1175	5110Z			22-13-11	115-199
	DED		W1175	5112Z			34-31-11	115-199
	DED		W1175	5114Z			34-31-11	115-199
	DED		W1175	5136Z			34-58-11	115-199
	DED		W1175	5137Z			34-58-11	115-199
	DED		W1175	5138Z			34-58-11	115-199
	DED		W1175	5139Z			34-58-11	115-199
D02939C		E002-03/ /		RECPT				115-199
	1	UNUSED						115-199
	2	UNUSED						115-199
	3	UNUSED						115-199
	4		W1175	2018R	22		34-31-11	115-199
	5	UNUSED						115-199
	6		W1175	2018B	22		34-31-11	115-199
	7		W1175	0417	22		34-31-11	115-199
	8		W1175	0418	22		34-31-11	115-199
	9		W1175	0416	22		34-31-11	115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12		W1175	006CX			34-31-11	115-199
	13		W1175	005CX			34-31-11	115-199
	=C12		W1175	006CO			34-31-11	115-199
	=C13		W1175	005CO			34-31-11	115-199
D02940		P34/ /		RELAY SOCKET				ALL
	A1		W1240	0013	16		33-21-31	ALL
	A2		W1240	0015	16		33-21-31	ALL
	A3	UNUSED						ALL
	B1		W1240	0014	16		33-21-31	ALL
	B2		W1240	0016	16		33-21-31	ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	X1		W1240	0017	24		33-21-31	ALL
	X2		W1240	0018	24		33-21-31	ALL
D02941A		E002-02/ /		RECPT				115-199
	1	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D02900

Page 8

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02941A		E002-02/ /		RECPT (continued)				115-199
	2		W1173	006CX			34-58-21	115-199
	3	UNUSED						115-199
	4	UNUSED						115-199
	= C1	UNUSED						115-199
	= C2		W1173	006CO			34-58-21	115-199
	= C3	UNUSED						115-199
	= C4	UNUSED						115-199
D02941B		E002-02/ /		RECPT				115-199
	A01		W1173	5076R	24		22-13-21	115-199
	A02	UNUSED						115-199
	A03	UNUSED						115-199
	A04		W1173	0164	22		34-31-21	115-199
	A05	UNUSED						115-199
	A06	UNUSED						115-199
	A07	UNUSED						115-199
	A08		W1173	5196R	22		34-58-21	115-199
	A09	UNUSED						115-199
	A10	UNUSED						115-199
	A11	UNUSED						115-199
	B01		W1173	5076B	24		22-13-21	115-199
	B02	UNUSED						115-199
	B03	UNUSED						115-199
	B04	UNUSED						115-199
	B05		W1173	0483	24		34-31-21	115-199
	B06	UNUSED						115-199
	B07	UNUSED						115-199
	B08		W1173	5196B	22		34-58-21	115-199
	B09	UNUSED						115-199
	B10	UNUSED						115-199
	B11	UNUSED						115-199
	C01	UNUSED						115-199
	C02		W1173	5194R	22		34-58-21	115-199
	C03	UNUSED						115-199
	C04	UNUSED						115-199
	C05	UNUSED						115-199
	C06	UNUSED						115-199
	C07	UNUSED						115-199
	C08	UNUSED						115-199
	C09	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D02900

Page 9

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02941B		E002-02/ /		RECPT (continued)				115-199
	C10	UNUSED						115-199
	C11	UNUSED						115-199
	D01	UNUSED						115-199
	D02		W1173	5194B	22		34-58-21	115-199
	D03	UNUSED						115-199
	D04	UNUSED						115-199
	D05	UNUSED						115-199
	D06	UNUSED						115-199
	D07	UNUSED						115-199
	D08	UNUSED						115-199
	D09	UNUSED						115-199
	D10	UNUSED						115-199
	D11	UNUSED						115-199
	E01	UNUSED						115-199
	E02	UNUSED						115-199
	E03	UNUSED						115-199
	E04	UNUSED						115-199
	E05	UNUSED						115-199
	E06	UNUSED						115-199
	E07	UNUSED						115-199
	E08	UNUSED						115-199
	E09	UNUSED						115-199
	E10	UNUSED						115-199
	E11	UNUSED						115-199
	E12	UNUSED						115-199
	E13	UNUSED						115-199
	E14	UNUSED						115-199
	E15	UNUSED						115-199
	F01	UNUSED						115-199
	F02	UNUSED						115-199
	F03	UNUSED						115-199
	F04	UNUSED						115-199
	F05	UNUSED						115-199
	F06	UNUSED						115-199
	F07	UNUSED						115-199
	F08	UNUSED						115-199
	F09	UNUSED						115-199
	F10	UNUSED						115-199
	F11	UNUSED						115-199
	F12	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D02900

Page 10

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02941B		E002-02/ /		RECPT (continued)				115-199
	F13	UNUSED						115-199
	F14	UNUSED						115-199
	F15		W1173	0069	22		22-13-21	115-199
	G01		W1173	5010R	24		34-31-21	115-199
	G02	UNUSED						115-199
	G03	UNUSED						115-199
	G04	UNUSED						115-199
	G05	UNUSED						115-199
	G06	UNUSED						115-199
	G07	UNUSED						115-199
	G08		W1173	5197R	22		34-58-21	115-199
	G09	UNUSED						115-199
	G10	UNUSED						115-199
	G11	UNUSED						115-199
	H01		W1173	5010B	24		34-31-21	115-199
	H02	UNUSED						115-199
	H03	UNUSED						115-199
	H04	UNUSED						115-199
	H05	UNUSED						115-199
	H06	UNUSED						115-199
	H07	UNUSED						115-199
	H08		W1173	5197B	22		34-58-21	115-199
	H09	UNUSED						115-199
	H10	UNUSED						115-199
	H11	UNUSED						115-199
	J01		W1173	5069R	24		34-31-21	115-199
	J02		W1173	5195R	22		34-58-21	115-199
	J03	UNUSED						115-199
	J04	UNUSED						115-199
	J05	UNUSED						115-199
	J06	UNUSED						115-199
	J07	UNUSED						115-199
	J08	UNUSED						115-199
	J09	UNUSED						115-199
	J10		W1173	2540R	24		23-51-13	115-199
	J11	UNUSED						115-199
	K01		W1173	5069B	24		34-31-21	115-199
	K02		W1173	5195B	22		34-58-21	115-199
	K03	UNUSED						115-199
	K04		W1173	0483	24		34-31-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section D02900

Page 11

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02941B		E002-02/ /		RECPT (continued)				115-199
	K05	UNUSED						115-199
	K06	UNUSED						115-199
	K07	UNUSED						115-199
	K08	UNUSED						115-199
	K09	UNUSED						115-199
	K10		W1173	2540B	24		23-51-13	115-199
	K11	UNUSED						115-199
	1T	UNUSED						115-199
	2T	UNUSED						115-199
	1TC	UNUSED						115-199
	2TC	UNUSED						115-199
	1TR	UNUSED						115-199
	2TR	UNUSED						115-199
	DED		W1173	2540Z			23-51-13	115-199
	DED		W1173	5010Z			34-31-21	115-199
	DED		W1173	5069Z			34-31-21	115-199
	DED		W1173	5076Z			22-13-21	115-199
	DED		W1173	5194Z			34-58-21	115-199
	DED		W1173	5195Z			34-58-21	115-199
	DED		W1173	5196Z			34-58-21	115-199
	DED		W1173	5197Z			34-58-21	115-199
D02941C		E002-02/ /		RECPT				115-199
	1	UNUSED						115-199
	2	UNUSED						115-199
	3	UNUSED						115-199
	4		W1173	2021R	22		34-31-21	115-199
	5	UNUSED						115-199
	6		W1173	2021B	22		34-31-21	115-199
	7		W1173	0162	20		34-31-21	115-199
	8		W1173	0163	20		34-31-21	115-199
	9		W1173	0161	22		34-31-21	115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12		W1173	004CX			34-31-21	115-199
	13		W1173	005CX			34-31-21	115-199
	=C12		W1173	004CO			34-31-21	115-199
	=C13		W1173	005CO			34-31-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section D02900

Page 12

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02942		1049/140/L034		PLUG				ALL
	1		W2406	1015	20		21-51-13	ALL
	2		W2406	2506R	20		21-51-13	ALL
	3		W2406	2506B	20		21-51-13	ALL
	4		W2406	3502R	20		21-51-12	ALL
	5		W2406	3502B	20		21-51-12	ALL
	6		W2406	3502Y	20		21-51-12	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W2406	3501B	20		21-51-12	ALL
	11		W2406	3501R	20		21-51-12	ALL
	12		W2406	3501Y	20		21-51-12	ALL
	13		W2406	2507B	20		21-51-13	ALL
	14	UNUSED						ALL
	15		W2406	1035	20		21-51-13	ALL
	16		W2406	2507R	20		21-51-13	ALL
	17	UNUSED						ALL
	18		W2406	1036	20		21-51-13	ALL
	19		W2406	0046	20		21-51-13	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D02943A		E002-03/ /		RECPT				115-199
	1	UNUSED						115-199
	2	UNUSED						115-199
	3	UNUSED						115-199
	4	UNUSED						115-199
	= C1	UNUSED						115-199
	= C2	UNUSED						115-199
	= C3	UNUSED						115-199
	= C4	UNUSED						115-199
D02943B		E002-03/ /		RECPT				115-199
	A01		W1175	5058R	24		22-13-31	115-199
	A02	UNUSED						115-199
	A03	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D02900

Page 13

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02943B		E002-03/ /		RECPT (continued)				115-199
	A04		W1175	0042	24		34-31-31	115-199
	A05	UNUSED						115-199
	A06	UNUSED						115-199
	A07	UNUSED						115-199
	A08	UNUSED						115-199
	A09	UNUSED						115-199
	A10	UNUSED						115-199
	A11	UNUSED						115-199
	B01		W1175	5058B	24		22-13-31	115-199
	B02	UNUSED						115-199
	B03	UNUSED						115-199
	B04	UNUSED						115-199
	B05		W1175	0554	24		34-31-31	115-199
	B06	UNUSED						115-199
	B07	UNUSED						115-199
	B08	UNUSED						115-199
	B09	UNUSED						115-199
	B10	UNUSED						115-199
	B11	UNUSED						115-199
	C01	UNUSED						115-199
	C02	UNUSED						115-199
	C03	UNUSED						115-199
	C04	UNUSED						115-199
	C05	UNUSED						115-199
	C06	UNUSED						115-199
	C07	UNUSED						115-199
	C08	UNUSED						115-199
	C09	UNUSED						115-199
	C10	UNUSED						115-199
	C11	UNUSED						115-199
	D01	UNUSED						115-199
	D02	UNUSED						115-199
	D03	UNUSED						115-199
	D04	UNUSED						115-199
	D05	UNUSED						115-199
	D06	UNUSED						115-199
	D07	UNUSED						115-199
	D08	UNUSED						115-199
	D09	UNUSED						115-199
	D10	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D02900

Page 14

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02943B		E002-03/ /		RECPT (continued)				115-199
	D11	UNUSED						115-199
	E01	UNUSED						115-199
	E02	UNUSED						115-199
	E03	UNUSED						115-199
	E04	UNUSED						115-199
	E05	UNUSED						115-199
	E06	UNUSED						115-199
	E07	UNUSED						115-199
	E08	UNUSED						115-199
	E09	UNUSED						115-199
	E10	UNUSED						115-199
	E11	UNUSED						115-199
	E12	UNUSED						115-199
	E13	UNUSED						115-199
	E14	UNUSED						115-199
	E15	UNUSED						115-199
	F01	UNUSED						115-199
	F02	UNUSED						115-199
	F03	UNUSED						115-199
	F04	UNUSED						115-199
	F05	UNUSED						115-199
	F06	UNUSED						115-199
	F07	UNUSED						115-199
	F08	UNUSED						115-199
	F09	UNUSED						115-199
	F10	UNUSED						115-199
	F11	UNUSED						115-199
	F12	UNUSED						115-199
	F13	UNUSED						115-199
	F14	UNUSED						115-199
	F15		W1175	0207	22		22-13-31	115-199
	G01		W1175	5075R	24		34-31-31	115-199
	G02	UNUSED						115-199
	G03	UNUSED						115-199
	G04	UNUSED						115-199
	G05	UNUSED						115-199
	G06	UNUSED						115-199
	G07	UNUSED						115-199
	G08	UNUSED						115-199
	G09	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D02900

Page 15

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02943B		E002-03/ /		RECPT (continued)				115-199
	G10	UNUSED						115-199
	G11	UNUSED						115-199
	H01		W1175	5075B	24		34-31-31	115-199
	H02	UNUSED						115-199
	H03	UNUSED						115-199
	H04	UNUSED						115-199
	H05	UNUSED						115-199
	H06	UNUSED						115-199
	H07	UNUSED						115-199
	H08	UNUSED						115-199
	H09	UNUSED						115-199
	H10	UNUSED						115-199
	H11	UNUSED						115-199
	J01		W1175	5024R	24		34-31-31	115-199
	J02	UNUSED						115-199
	J03	UNUSED						115-199
	J04	UNUSED						115-199
	J05	UNUSED						115-199
	J06	UNUSED						115-199
	J07	UNUSED						115-199
	J08	UNUSED						115-199
	J09	UNUSED						115-199
	J10		W1175	2538R	24		23-51-13	115-199
	J11	UNUSED						115-199
	K01		W1175	5024B	24		34-31-31	115-199
	K02	UNUSED						115-199
	K03	UNUSED						115-199
	K04		W1175	0554	24		34-31-31	115-199
	K05	UNUSED						115-199
	K06	UNUSED						115-199
	K07	UNUSED						115-199
	K08	UNUSED						115-199
	K09	UNUSED						115-199
	K10		W1175	2538B	24		23-51-13	115-199
	K11	UNUSED						115-199
	1T	UNUSED						115-199
	2T	UNUSED						115-199
	1TC	UNUSED						115-199
	2TC	UNUSED						115-199
	1TR	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D02900

Page 16

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02943B		E002-03/ /		RECPT (continued)				115-199
	2TR	UNUSED						115-199
	DED		W1175	2538Z			23-51-13	115-199
	DED		W1175	5024Z			34-31-31	115-199
	DED		W1175	5058Z			22-13-31	115-199
	DED		W1175	5075Z			34-31-31	115-199
D02943C		E002-03/ /		RECPT				115-199
	1	UNUSED						115-199
	2	UNUSED						115-199
	3	UNUSED						115-199
	4		W1175	2006R	22		34-31-31	115-199
	5	UNUSED						115-199
	6		W1175	2006B	22		34-31-31	115-199
	7		W1175	0039	20		34-31-31	115-199
	8		W1175	0040	20		34-31-31	115-199
	9		W1175	0038	22		34-31-31	115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12		W1175	004CX			34-31-31	115-199
	13		W1175	003CX			34-31-31	115-199
	= C12		W1175	004CO			34-31-31	115-199
	= C13		W1175	003CO			34-31-31	115-199
D02944		900/142/L60		PLUG				ALL
	1		W2406	1013	20		21-51-13	ALL
	2		W2406	2502R	20		21-51-13	ALL
	3		W2406	2502B	20		21-51-13	ALL
	4		W2406	3504R	20		21-51-12	ALL
	5		W2406	3504B	20		21-51-12	ALL
	6		W2406	3504Y	20		21-51-12	ALL
	7		W2406	3507R	20		21-52-21	ALL
	8		W2406	3507B	20		21-52-21	ALL
	9		W2406	3507Y	20		21-52-21	ALL
	10		W2406	3503B	20		21-51-12	ALL
	11		W2406	3503R	20		21-51-12	ALL
	12		W2406	3503Y	20		21-51-12	ALL
	13		W2406	2509B	20		21-51-13	ALL
	14	UNUSED						ALL
	15		W2406	1037	20		21-51-13	ALL
	16		W2406	2509R	20		21-51-13	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02900

Page 17

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02944		900/142/L60		PLUG (continued)				ALL
	17	UNUSED						ALL
	18		W2406	1038	20		21-51-13	ALL
	19		W2406	0054	20		21-51-13	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D02946		970/141/L32		PLUG				ALL
	1		W2406	3510R	20		21-52-21	ALL
	2		W2406	3506R	20		21-51-12	ALL
	3		W2406	3510B	20		21-52-21	ALL
	4		W2406	3506B	20		21-51-12	ALL
	5		W2406	3510Y	20		21-52-21	ALL
	6		W2406	3506Y	20		21-51-12	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D02948		P36/ /		RELAY SOCKET (PLATE 'F')				001-099
D02948		E6/ /		RELAY SOCKET				115-199
	A1		W1260	0990	24		21-51-12	001-099
	A1		W1024	0128	24		21-51-12	115-199
	A2		W1260	6073	22		21-51-13	001-099
	A2		W1024	0171	22		21-51-13	115-199
	A3		W1260	6087	22		21-51-13	001-099
	A3		W1024	0159	22		21-51-13	115-199
	B1		W1260	0991	24		21-51-12	001-099
	B1		W1024	0127	24		21-51-12	115-199
	B2		W1260	6074	22		21-51-13	001-099
	B2		W1024	0170	22		21-51-13	115-199
	B3		W1260	6083	22		21-51-13	001-099
	B3		W1024	0156	22		21-51-13	115-199
	C1		W1260	0992	24		21-51-12	001-099
	C1		W1024	0126	24		21-51-12	115-199
	C2		W1260	6045	22		21-51-13	001-099

HOOKUP LIST

D280N032

91-21-51

Section D02900

Page 18

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02948		P36/ /		RELAY SOCKET (PLATE 'F') (continued)				001-099
D02948		E6/ /		RELAY SOCKET (continued)				115-199
	C2	UNUSED	W1024	0169	22		21-51-13	115-199
	C3		W1260	6081	22		21-51-13	001-099
	C3		W1024	0150	22		21-51-13	115-199
	D1							ALL
	D2		W1260	6089	24		21-51-13	001-099
	D2		W1024	0174	24		21-51-13	115-199
	D3		W1260	6088	24		21-51-13	001-099
	D3		W1024	0149	24		21-51-13	115-199
	X1		W1260	0112	24		21-51-12	001-099
	X1		W1260	0989	24		21-51-12	001-099
	X1		W1024	0133	24		21-51-12	115-199
	X2		W1260	0994	24		21-51-12	001-099
	X2		W1260	6072	24		21-51-13	001-099
	X2		W1024	0164	24		21-51-13	115-199
D02950		P36/ /		RELAY SOCKET (PLATE 'F')				001-099
D02950		E6/ /		RELAY SOCKET				115-199
	A1	UNUSED	W1260	0995	24		21-51-12	001-099
	A1		W1024	0124	24		21-51-12	115-199
	A2		W1260	6046	22		21-51-13	001-099
	A2		W1024	0167	22		21-51-13	115-199
	A3		W1260	6068	22		21-51-13	001-099
	A3		W1024	0144	22		21-51-13	115-199
	B1		W1260	0996	24		21-51-12	001-099
	B1		W1024	0123	24		21-51-12	115-199
	B2		W1260	6047	22		21-51-13	001-099
	B2		W1024	0166	22		21-51-13	115-199
	B3		W1260	6057	22		21-51-13	001-099
	B3		W1024	0143	22		21-51-13	115-199
	C1		W1260	0997	24		21-51-12	001-099
	C1		W1024	0122	24		21-51-12	115-199
	C2		W1260	6048	22		21-51-13	001-099
	C2		W1024	0165	22		21-51-13	115-199
	C3		W1260	6065	22		21-51-13	001-099
	C3		W1024	0136	22		21-51-13	115-199
	D1							ALL
	D2		W1260	6069	24		21-51-13	001-099
	D2		W1024	0134	24		21-51-13	115-199
	D3		W1260	6044	24		21-51-13	001-099

HOOKUP LIST

D280N032

91-21-51

Section D02900

Page 19

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02950		P36/ /		RELAY SOCKET (PLATE 'F') (continued)				001-099
D02950		E6/ /		RELAY SOCKET (continued)				115-199
	D3		W1024	0135	24		21-51-13	115-199
	X1		W1260	0989	24		21-51-12	001-099
	X1		W1260	0993	24		21-51-12	001-099
	X1		W1024	0131	24		21-51-12	115-199
	X2		W1260	0994	24		21-51-12	001-099
	X2		W1260	0998	24		21-51-12	001-099
	X2		W1024	0168	24		21-51-13	115-199
D02952		943/149/L032		PLUG				ALL
	1		W2406	2504B	20		21-51-12	ALL
	2		W2406	2504R	20		21-51-12	ALL
D02954		863/189/L009		PLUG				001-099
D02954		863/189/R9		PLUG				115-199
	1		W4006	2054B	24		21-51-12	ALL
	2		W4006	2054R	24		21-51-12	ALL
D02956		900/134/L038		PLUG				ALL
	1		W2506	3507R	20		21-51-22	ALL
	2		W2506	3507Y	20		21-51-22	ALL
	3		W2506	3507B	20		21-51-22	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D02958		P36/ /		RELAY SOCKET (PLATE 'D')				ALL
	1		W1260	0242	24		27-58-11	001-099
	1		W1260	0242	22		27-58-11	115-199
	2		W1260	0229	24		27-58-11	001-099
	2		W1260	0229	22		27-58-11	115-199
	3		W1260	0231	24		27-58-11	001-099
	3		W1260	0231	22		27-58-11	115-199
	4		W1260	0226	24		27-58-11	001-099
	4		W1260	0226	22		27-58-11	115-199
	5		W1260	0241	24		27-58-11	001-099
	5		W1260	0241	22		27-58-11	115-199
	6		W1260	0243	24		27-58-11	ALL
	7		W1260	0240	24		27-58-11	001-099
	7		W1260	0240	22		27-58-11	115-199
	8		W1260	0228	24		27-58-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D02900

Page 20

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02958		P36/ /		RELAY SOCKET (PLATE 'D') (continued)				ALL
	8		W1260	0228	22		27-58-11	115-199
	9		W1260	0236	24		27-58-11	001-099
	9		W1260	0236	22		27-58-11	115-199
	10		W1260	0227	24		27-58-11	001-099
	10		W1260	0227	22		27-58-11	115-199
	11		W1260	0239	24		27-58-11	001-099
	11		W1260	0239	22		27-58-11	115-199
	12		W1260	0244	24		27-58-11	ALL
	13		W1260	0233	24		27-58-11	001-099
	13		W1260	0233	22		27-58-11	115-199
	14		W1260	0238	24		27-58-11	001-099
	14		W1260	0238	22		27-58-11	115-199
D02960		P3-1/ /		PLUG				ALL
	1		W0003	0150	20		33-13-21	ALL
	2		W0003	0151	20		33-13-21	ALL
	3		W0003	0059	24		27-58-11	001-099
	3		W0003	0059	22		27-58-11	115-199
	4		W0003	0208	22		27-58-11	ALL
	5		W0003	0209	22		27-58-11	ALL
	6		W0003	0056	24		27-58-11	001-099
	6		W0003	0056	22		27-58-11	115-199
	7		W0003	0039	24		27-58-11	001-099
	7		W0003	0039	22		27-58-11	115-199
	8		W0003	0040	24		27-58-11	001-099
	8		W0003	0040	22		27-58-11	115-199
	9		W0003	0022	24		27-58-11	001-099
	9		W0003	0022	22		27-58-11	115-199
	10		W0003	0038	24		27-58-11	001-099
	10		W0003	0038	22		27-58-11	115-199
	11	UNUSED						ALL
	12		W0003	0210	22		27-58-11	ALL
D02962		970/141/L30		PLUG				ALL
	1		W2406	2513B	20		21-51-13	ALL
	2		W2406	2513R	20		21-51-13	ALL
	3		W2406	1016	20		21-51-13	ALL
	4		W2406	3505R	20		21-51-12	ALL
	5		W2406	3505B	20		21-51-12	ALL
	6		W2406	2511B	20		21-51-13	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02900

Page 21

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02962		970/141/L30		PLUG (continued)				ALL
	7	UNUSED						ALL
	8		W2406	1039	20		21-51-13	ALL
	9		W2406	2511R	20		21-51-13	ALL
	10	UNUSED						ALL
	11		W2406	1040	20		21-51-13	ALL
	12		W2406	3505Y	20		21-51-12	ALL
	13		W2406	0062	20		21-51-13	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D02964A		E3-3/ /		PLUG				001-099
D02964A		E6-2/ /		PLUG				115-199
	A01		W1330	3006R	24		21-51-12	001-099
	A01		W1030	3006R	24		21-51-12	115-199
	A02		W1330	3006B	24		21-51-12	001-099
	A02		W1030	3006B	24		21-51-12	115-199
	A03		W1330	3006Y	24		21-51-12	001-099
	A03		W1030	3006Y	24		21-51-12	115-199
	A04		W1330	2029B	24		21-51-12	001-099
	A04		W1030	2029B	24		21-51-12	115-199
	A05		W1330	2029R	24		21-51-12	001-099
	A05		W1030	2029R	24		21-51-12	115-199
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10		W1330	3005R	24		21-51-12	001-099
	A10		W1030	3005R	24		21-51-12	115-199
	A11		W1330	3005B	24		21-51-12	001-099
	A11		W1030	3005B	24		21-51-12	115-199
	A12		W1330	3005Y	24		21-51-12	001-099
	A12		W1030	3005Y	24		21-51-12	115-199
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01		W1330	3004Y	24		21-51-12	001-099
	B01		W1030	3004Y	24		21-51-12	115-199
	B02		W1330	3004B	24		21-51-12	001-099
	B02		W1030	3004B	24		21-51-12	115-199
	B03		W1330	3004R	24		21-51-12	001-099

HOOKUP LIST

D280N032

91-21-51

Section D02900

Page 22

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02964A		E3-3/ /		PLUG (continued)				001-099
D02964A		E6-2/ /		PLUG (continued)				115-199
	B03		W1030	3004R	24		21-51-12	115-199
	B04		W1330	2033B	24		21-51-12	001-099
	B04		W1030	2033B	24		21-51-12	115-199
	B05		W1330	2033R	24		21-51-12	001-099
	B05		W1030	2033R	24		21-51-12	115-199
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10		W1330	3003R	24		21-51-12	001-099
	B10		W1030	3003R	24		21-51-12	115-199
	B11		W1330	3003B	24		21-51-12	001-099
	B11		W1030	3003B	24		21-51-12	115-199
	B12		W1330	3003Y	24		21-51-12	001-099
	B12		W1030	3003Y	24		21-51-12	115-199
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01		W1330	3002Y	24		21-51-12	001-099
	C01		W1030	3002Y	24		21-51-12	115-199
	C02		W1330	3002B	24		21-51-12	001-099
	C02		W1030	3002B	24		21-51-12	115-199
	C03		W1330	3002R	24		21-51-12	001-099
	C03		W1030	3002R	24		21-51-12	115-199
	C04		W1330	2030R	24		21-61-11	001-099
	C04		W1030	2030R	24		21-61-11	115-199
	C05		W1330	2030B	24		21-61-11	001-099
	C05		W1030	2030B	24		21-61-11	115-199
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10		W1330	3001R	24		21-51-12	001-099
	C10		W1030	3001R	24		21-51-12	115-199
	C11		W1330	3001B	24		21-51-12	001-099
	C11		W1030	3001B	24		21-51-12	115-199
	C12		W1330	3001Y	24		21-51-12	001-099
	C12		W1030	3001Y	24		21-51-12	115-199
	C13	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02900

Page 23

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02964A		E3-3/ /		PLUG (continued)				001-099
D02964A		E6-2/ /		PLUG (continued)				115-199
	C14	UNUSED						ALL
	C15		W1330	0024	24		21-51-12	001-099
	C15		W1030	0024	24		21-51-12	115-199
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04		W1330	2003B	24		21-51-15	001-099
	D04		W1030	2003B	24		21-51-15	115-199
	D05		W1330	2003R	24		21-51-15	001-099
	D05		W1030	2003R	24		21-51-15	115-199
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
D02964B		E3-3/ /		PLUG				001-099
D02964B		E6-2/ /		PLUG				115-199
	A01		W1330	2024R	24		21-61-51	001-099
	A01		W1030	2024R	24		21-61-51	115-199
	A02		W1330	2024B	24		21-61-51	001-099
	A02		W1030	2024B	24		21-61-51	115-199
	A03		W1330	2023R	24		21-61-51	001-099
	A03		W1030	2023R	24		21-61-51	115-199
	A04		W1330	2023B	24		21-61-51	001-099
	A04		W1030	2023B	24		21-61-51	115-199
	A05		W1330	2020R	24		21-61-51	001-099
	A05		W1030	2020R	24		21-61-51	115-199
	A06		W1330	2020B	24		21-61-51	001-099
	A06		W1030	2020B	24		21-61-51	115-199
	A07		W1330	2021R	24		21-61-51	001-099
	A07		W1030	2021R	24		21-61-51	115-199
	A08		W1330	2021B	24		21-61-51	001-099
	A08		W1030	2021B	24		21-61-51	115-199

HOOKUP LIST

D280N032

91-21-51

Section D02900

Page 24

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02964B		E3-3/ /		PLUG (continued)				001-099
D02964B		E6-2/ /		PLUG (continued)				115-199
	A09		W1330	3019B	24		21-51-12	001-099
	A09		W1030	3019B	24		21-51-12	115-199
	A10		W1330	3019R	24		21-51-12	001-099
	A10		W1030	3019R	24		21-51-12	115-199
	A11		W1330	3019Y	24		21-51-12	001-099
	A11		W1030	3019Y	24		21-51-12	115-199
	A12	UNUSED						ALL
	A13		W1330	0011	24		21-51-12	001-099
	A13		W1030	0011	24		21-51-12	115-199
	A14	UNUSED						ALL
	A15		W1330	0012	24		21-51-12	001-099
	A15		W1030	0012	24		21-51-12	115-199
	B01		W1330	2001R	24		21-51-12	001-099
	B01		W1030	2001R	24		21-51-12	115-199
	B02		W1330	2001B	24		21-51-12	001-099
	B02		W1030	2001B	24		21-51-12	115-199
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07		W1330	2022R	24		21-61-51	001-099
	B07		W1030	2022R	24		21-61-51	115-199
	B08		W1330	2022B	24		21-61-51	001-099
	B08		W1030	2022B	24		21-61-51	115-199
	B09		W1330	0026	24		21-51-15	001-099
	B09		W1030	0026	24		21-51-15	115-199
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13		W1330	0009	24		21-51-12	001-099
	B13		W1030	0009	24		21-51-12	115-199
	B14	UNUSED						ALL
	B15		W1330	0010	24		21-51-12	001-099
	B15		W1030	0010	24		21-51-12	115-199
	C01		W1330	2002B	24		21-51-14	001-099
	C01		W1030	2002B	24		21-51-14	115-199
	C02		W1330	2002R	24		21-51-14	001-099
	C02		W1030	2002R	24		21-51-14	115-199
	C03	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02900

Page 25

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02964B		E3-3/ /		PLUG (continued)				001-099
D02964B		E6-2/ /		PLUG (continued)				115-199
	C04	UNUSED						ALL
	C05		W1330	0020	24		21-51-15	001-099
	C05		W1030	0020	24		21-51-15	115-199
	C06	UNUSED						ALL
	C07		W1330	0025	24		21-51-15	001-099
	C07		W1030	0025	24		21-51-15	115-199
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13		W1330	0007	24		21-51-12	001-099
	C13		W1030	0007	24		21-51-12	115-199
	C14	UNUSED						ALL
	C15		W1330	0008	24		21-51-12	001-099
	C15		W1030	0008	24		21-51-12	115-199
	D01		W1330	2031B	24		21-51-12	001-099
	D01		W1030	2031B	24		21-51-12	115-199
	D02		W1330	2031R	24		21-51-12	001-099
	D02		W1030	2031R	24		21-51-12	115-199
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05		W1330	2032B	24		21-51-12	001-099
	D05		W1030	2032B	24		21-51-12	115-199
	D06		W1330	2032R	24		21-51-12	001-099
	D06		W1030	2032R	24		21-51-12	115-199
	D07		W1330	0013	24		21-51-12	001-099
	D07		W1030	0013	24		21-51-12	115-199
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02900

Page 26

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02964C		E3-3/ /		PLUG				001-099
D02964C		E6-2/ /		PLUG				115-199
	1	UNUSED						ALL
	2		W1330	0001	22		21-51-12	001-099
	2		W1030	0001	20		21-51-12	115-199
	3		W1330	0003	24		21-51-12	001-099
	3		W1030	0003	24		21-51-12	115-199
	4		W1330	0002	20		21-51-12	001-099
	4		W1030	0002	20		21-51-12	115-199
	5	UNUSED						ALL
	= C1	UNUSED						ALL
	= C5	UNUSED						ALL
D02966		985/155/L47		PLUG				ALL
	1		W2406	2505B	20		21-51-15	ALL
	2		W2406	2505R	20		21-51-15	ALL
D02968		942/156/L024		PLUG				ALL
	1		W2406	1017	20		21-51-15	ALL
	2		W2406	1018	20		21-51-15	ALL
D02970		P36/ /		RELAY SOCKET (PLATE 'F')				001-099
D02970		E6/ /		RELAY SOCKET				115-199
	A1		W1260	6066	24		21-51-13	001-099
	A1		W1024	0137	24		21-51-13	115-199
	A2		W1260	6065	22		21-51-13	001-099
	A2		W1024	0136	22		21-51-13	115-199
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1260	6064	24		21-51-13	001-099
	X1		W1024	0139	24		21-51-13	115-199
	X2		W1260	6063	24		21-51-13	001-099
	X2		W1024	0138	24		21-51-13	115-199
D02972		P36/ /		RELAY SOCKET (PLATE 'F')				001-099
D02972		E6/ /		RELAY SOCKET				115-199
	A1		W1260	6059	24		21-51-13	001-099
	A1		W1024	0140	24		21-51-13	115-199

HOOKUP LIST

D280N032

91-21-51

Section D02900

Page 27

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02972		P36/ /		RELAY SOCKET (PLATE 'F') (continued)				001-099
D02972		E6/ /		RELAY SOCKET (continued)				115-199
	A2		W1260	6057	22		21-51-13	001-099
	A2		W1024	0143	22		21-51-13	115-199
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1260	6049	24		21-51-13	001-099
	X1		W1024	0141	24		21-51-13	115-199
	X2		W1260	6056	24		21-51-13	001-099
	X2		W1024	0142	24		21-51-13	115-199
D02974		P36/ /		RELAY SOCKET (PLATE 'F')				001-099
D02974		E6/ /		RELAY SOCKET				115-199
	A1		W1260	6067	24		21-51-13	001-099
	A1		W1024	0145	24		21-51-13	115-199
	A2		W1260	6068	22		21-51-13	001-099
	A2		W1024	0144	22		21-51-13	115-199
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1260	6060	24		21-51-13	001-099
	X1		W1024	0147	24		21-51-13	115-199
	X2		W1260	6061	24		21-51-13	001-099
	X2		W1024	0146	24		21-51-13	115-199
D02976		P36/ /		RELAY SOCKET (PLATE 'F')				001-099
D02976		E6/ /		RELAY SOCKET				115-199
	A1		W1260	6082	24		21-51-13	001-099
	A1		W1024	0152	24		21-51-13	115-199
	A2		W1260	6081	22		21-51-13	001-099
	A2		W1024	0150	22		21-51-13	115-199
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1260	6076	24		21-51-13	001-099
	X1		W1024	0153	24		21-51-13	115-199
	X2		W1260	6075	24		21-51-13	001-099

HOOKUP LIST

D280N032

91-21-51

Section D02900

Page 28

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02976		P36/ /		RELAY SOCKET (PLATE 'F') (continued)				001-099
D02976		E6/ /		RELAY SOCKET (continued)				115-199
	X2		W1024	0154	24		21-51-13	115-199
D02978		P36/ /		RELAY SOCKET (PLATE 'A')				001-099
D02978		E6/ /		RELAY SOCKET				115-199
	A1		W1260	6084	24		21-51-13	001-099
	A1		W1024	0155	24		21-51-13	115-199
	A2		W1260	6083	22		21-51-13	001-099
	A2		W1024	0156	22		21-51-13	115-199
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1260	6078	24		21-51-13	001-099
	X1		W1024	0157	24		21-51-13	115-199
	X2		W1260	6077	24		21-51-13	001-099
	X2		W1024	0158	24		21-51-13	115-199
D02980		P36/ /		RELAY SOCKET (PLATE 'A')				001-099
D02980		E6/ /		RELAY SOCKET				115-199
	A1		W1260	6086	24		21-51-13	001-099
	A1		W1024	0160	24		21-51-13	115-199
	A2		W1260	6087	22		21-51-13	001-099
	A2		W1024	0159	22		21-51-13	115-199
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1260	6079	24		21-51-13	001-099
	X1		W1024	0161	24		21-51-13	115-199
	X2		W1260	6080	24		21-51-13	001-099
	X2		W1024	0162	24		21-51-13	115-199
D02982		P50/ /		RCPT				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1140	0212	24		21-51-13	ALL
	4		W1140	0106	24		21-51-13	ALL
	5		W1140	0105	24		21-51-13	ALL
	6		W1140	0112	24		21-51-13	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02900

Page 29

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02982		P50/ /		RCPT (continued)				ALL
	7		W1140	0108	24		21-51-13	ALL
	8		W1140	0117	24		21-51-13	ALL
	9		W1140	0111	24		21-51-13	ALL
	10		W1140	0107	24		21-51-13	ALL
	11		W1140	0109	24		21-51-13	ALL
	12		W1140	0110	24		21-51-13	ALL
	13		W1140	0101	24		21-51-13	ALL
	14		W1140	0104	24		21-51-13	ALL
	15		W1140	0102	24		21-51-13	ALL
	16		W1140	0103	24		21-51-13	ALL
	17		W1140	0099	24		21-51-13	ALL
	18		W1140	0100	24		21-51-13	ALL
	19		W1140	0127	24		21-51-13	ALL
	20	UNUSED						ALL
	21		W1140	0116	24		21-51-13	ALL
	22		W1140	PF01			21-51-13	ALL
	23	UNUSED						ALL
	24		W1140	0440	24		21-51-14	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W1140	PF02			21-51-13	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W1140	0115	24		21-51-13	ALL
	36		W1140	0114	24		21-51-13	ALL
	37		W1140	0113	24		21-51-13	ALL
	38		W1140	PF01			21-51-13	ALL
	39		W1140	0098	24		21-51-13	ALL
	40		W1140	PF02			21-51-13	ALL
	41		W1140	0447	24		21-51-13	ALL
D02984		OSS818/ /		PLUG-				ALL
	1		W3326	2510R	20		27-51-41	ALL
	2		W3326	2510B	20		27-51-41	ALL
	3		W3326	4251R	20		27-51-41	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02900

Page 30

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02984		OSS818/ /		PLUG- (continued)				ALL
	4		W3326	4251B	20		27-51-41	ALL
	5		W3326	4251Y	20		27-51-41	ALL
	6		W3326	4251G	20		27-51-41	ALL
	7		W3326	2511R	20		27-51-61	ALL
	8		W3326	2511B	20		27-51-61	ALL
	9		W3326	4252R	20		27-51-61	ALL
	10		W3326	4252B	20		27-51-61	ALL
	11		W3326	4252Y	20		27-51-61	ALL
	12		W3326	4252G	20		27-51-61	ALL
	13		W3326	0008	18		27-51-41	ALL
	14	UNUSED						ALL
D02986		P33/ /		RELAY SOCKET				ALL
	A1		W1230	0013	22		27-51-31	ALL
	A2		W1230	0010	22		27-51-31	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1230	0011	22		27-51-31	ALL
	X2		W1230	0012	22		27-51-31	ALL
D02988		P50/ /		RCPT				ALL
	1		W1140	0118	24		21-51-15	ALL
	2		W1140	0038	24		21-51-11	ALL
	3	UNUSED						ALL
	4		W1140	0048	24		21-51-11	ALL
	5		W1140	0047	24		21-51-11	ALL
	6	UNUSED						ALL
	7		W1140	0043	22		21-51-11	ALL
	8		W1140	0044	22		21-51-11	ALL
	9		W1140	0446	24		21-51-13	ALL
	10		W1140	0120	24		21-51-15	ALL
	11	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02900

Page 31

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02988		P50/ /		RCPT (continued)				ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1140	0045	22		21-51-11	ALL
	15		W1140	0528	24		21-51-21	ALL
	16		W1140	0177	24		36-11-21	ALL
	17		W1140	0147	24		21-51-15	ALL
	18		W1140	0049	24		21-51-11	ALL
	19		W1140	0029	22		21-51-11	ALL
	20	UNUSED						ALL
	21		W1140	0027	22		21-51-11	ALL
	22		W1140	0046	24		21-51-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W1140	PG01			21-51-11	ALL
	26		W1140	0117	24		21-51-13	ALL
	27		W1140	0035	24		21-51-11	ALL
	28		W1140	0119	24		21-51-15	ALL
	29	UNUSED						ALL
	30		W1140	0212	24		21-51-13	ALL
	31		W1140	0028	24		21-51-11	ALL
	32		W1140	0034	24		21-51-11	ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W1140	PG01			21-51-11	ALL
	36		W1140	0033	24		21-51-11	ALL
	37		W1140	0185	24		36-11-11	ALL
	38		W1140	0121	24		21-51-15	ALL
	39		W1140	0030	24		21-51-11	ALL
	40	UNUSED						ALL
	41		W1140	0026	22		21-51-11	ALL
D02990		P36/ /		RELAY SOCKET (PLATE 'D')				115-199
	A1		W1260	0468	20		80-11-11	115-199
	A2		W1260	0445	20		80-11-11	115-199
	A3		W1260	0469	20		80-11-11	115-199
	B1	UNUSED						115-199
	B2	UNUSED						115-199
	B3	UNUSED						115-199
	X1		W1260	0444	20		80-11-11	115-199
	X2		W1260	0462	20		80-11-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D02900

Page 32

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02992		P36/ /		RELAY SOCKET (PLATE 'D')				ALL
	A1		W1260	0600	24		24-51-71	ALL
	A2		W1260	0599	24		24-51-71	ALL
	A3	UNUSED						ALL
	B1		W1260	0491	22		49-61-11	ALL
	B2		W1260	0492	22		49-61-11	ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2		W1260	0481	22		30-21-11	ALL
	C3		W1260	0482	22		30-21-11	ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1260	0448	20		80-11-11	ALL
	X2		W1260	0452	20		80-11-11	ALL
D02994		P36/ /		RELAY SOCKET (PLATE 'D')				ALL
	1	UNUSED						001-099
	1		W1260	0604	22		31-31-32	115-199
	2	UNUSED						001-099
	2		W1260	0605	22		31-31-32	115-199
	3		W1260	0477	20		36-11-11	ALL
	4		W1260	0476	20		36-11-11	ALL
	5		W1260	0475	20		36-11-11	ALL
	6		W1260	0449	20		80-11-11	ALL
	7		W1260	0455	24		80-11-11	001-099
	7		W1260	0455	20		80-11-11	115-199
	8		W1260	0457	24		80-11-11	ALL
	9	UNUSED						ALL
	10		W1260	0446	20		80-11-11	001-099
	10		W1260	0447	20		80-11-11	115-199
	11		W1260	0453	20		80-11-11	ALL
	12		W1260	0463	20		80-11-11	ALL
	13	UNUSED						ALL
	14		W1260	0454	24		80-11-11	001-099
	14		W1260	0454	20		80-11-11	115-199
D02996		P50/ /		RCPT				ALL
	1		W1140	2504R	24		77-12-31	ALL
	2		W1140	2504B	24		77-12-31	ALL
	3	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02900

Page 33

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02996		P50/ /		RCPT (continued)				ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W1140	0321	22		77-12-41	ALL
	14		W1140	0326	22		77-12-41	ALL
	15		W1140	0145	24		21-51-21	ALL
	16		W1140	0511	22		34-61-13	ALL
	17	UNUSED						ALL
	18		W1140	0214	24		80-11-11	001-099
	18		W1140	0214	22		80-11-11	115-199
	19	UNUSED						ALL
	20		W1140	0249	24		77-12-41	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W1140	0325	24		77-12-41	001-099
	23		W1140	0325	22		77-12-41	115-199
	24		W1140	0337	22		77-12-41	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W1140	0348	22		30-34-21	ALL
	30		W1140	0387	24		26-15-11	001-099
	30		W1140	0524	24		26-15-11	115-199
	31	UNUSED						ALL
	32		W1140	PH01			77-12-41	001-099
	32		W1140	PH01			78-34-21	115-199
	33		W1140	0512	22		29-21-31	ALL
	34		W1140	0513	22		29-21-31	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02900

Page 34

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02996		P50/ /		RCPT (continued)				ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45		W1140	PH01			77-12-41	001-099
	45		W1140	PH01			78-34-21	115-199
	46	UNUSED						ALL
	47	UNUSED						ALL
	48		W1140	0144	24		21-51-21	ALL
	49		W1140	0215	24		80-11-11	ALL
	50		W1140	0414	24		34-61-13	ALL
	51	UNUSED						ALL
	52		W1140	0324	22		77-12-41	ALL
	53		W1140	0248	24		77-12-41	ALL
	54		W1140	0322	22		77-12-41	ALL
	55	UNUSED						ALL
	56	UNUSED						ALL
	57		W1140	0338	22		77-12-41	ALL
	58		W1140	0248	24		77-12-41	ALL
	59	UNUSED						ALL
	60	UNUSED						ALL
	61		W1140	0347	22		30-34-21	ALL
	62		W1140	0346	22		30-34-21	ALL
	63		W1140	0386	24		26-15-11	001-099
	63		W1140	0525	24		26-15-11	115-199
	64		W1140	0246	24		77-12-41	001-099
	64		W1140	0246	22		77-12-41	115-199
	65	UNUSED						ALL
	66		W1140	0249	24		77-12-41	ALL
	DED		W1140	2504Z			77-12-31	ALL
D02998		P50/ /		RCPT				ALL
	1	UNUSED						ALL
	2		W1140	0021	24		22-32-13	ALL
	3	UNUSED						ALL
	4		W1140	0024	24		22-32-13	ALL
	5	UNUSED						ALL
	6		W1140	0545	24		73-21-12	ALL
	7	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02900

Page 35

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02998		P50/ /		RCPT (continued)				ALL
	8	UNUSED						ALL
	9		W1140	PP01			73-21-12	ALL
	10		W1140	0022	24		22-32-13	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W1140	0076	24		34-61-13	ALL
	17		W1140	0548	24		73-21-12	ALL
	18		W1140	0023	24		22-32-13	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W1140	0547	24		73-21-12	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W1140	0566	22		30-11-11	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W1140	0182	22		36-11-11	ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W1140	0505	24		21-51-11	ALL
	36		W1140	0049	24		21-51-11	ALL
	37	UNUSED						ALL
	38		W1140	0019	24		22-32-13	ALL
	39		W1140	0183	24		36-11-11	ALL
	40		W1140	0075	24		34-61-13	ALL
	41		W1140	0328	22		30-21-11	ALL
	42		W1140	0074	24		34-61-13	ALL
	43		W1140	0073	24		34-61-13	ALL
	44		W1140	0543	24		73-21-12	ALL
	45	UNUSED						ALL
	46		W1140	0327	22		30-21-11	ALL
	47	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D02900

Page 36

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D02998		P50/ /		RCPT (continued)				ALL
	48		W1140	0020	24		22-32-13	ALL
	49		W1140	0544	24		73-21-12	ALL
	50	UNUSED						ALL
	51		W1140	0546	24		73-21-12	ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55		W1140	0184	24		36-11-11	ALL
	56	UNUSED						ALL
	57		W1140	0565	22		30-11-11	ALL
	58	UNUSED						ALL
	59	UNUSED						ALL
	60	UNUSED						ALL
	61		W1140	0188	24		36-11-31	ALL
	62	UNUSED						ALL
	63	UNUSED						ALL
	64		W1140	0181	22		36-11-11	ALL
	65		W1140	PP01			73-21-12	ALL
	66		W1140	0549	22		73-21-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D02900

Page 37 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03000		1049/140/R041		PLUG				ALL
	1		W2506	1024	20		21-51-23	ALL
	2		W2506	2501R	20		21-51-23	ALL
	3		W2506	2501B	20		21-51-23	ALL
	4		W2506	3502R	20		21-51-22	ALL
	5		W2506	3502B	20		21-51-22	ALL
	6		W2506	3502Y	20		21-51-22	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W2506	3501B	20		21-51-22	ALL
	11		W2506	3501R	20		21-51-22	ALL
	12		W2506	3501Y	20		21-51-22	ALL
	13		W2506	2509B	20		21-51-23	ALL
	14	UNUSED						ALL
	15		W2506	2510B	20		21-51-23	ALL
	16		W2506	2509R	20		21-51-23	ALL
	17	UNUSED						ALL
	18		W2506	2510R	20		21-51-23	ALL
	19		W2506	0037	20		21-51-23	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D03002		885/145/R029		PLUG				ALL
	1		W2506	1025	20		21-51-23	ALL
	2		W2506	2504R	20		21-51-23	ALL
	3		W2506	2504B	20		21-51-23	ALL
	4		W2506	3504R	20		21-51-22	ALL
	5		W2506	3504B	20		21-51-22	ALL
	6		W2506	3504Y	20		21-51-22	ALL
	7		W2506	3508R	20		21-52-21	ALL
	8		W2506	3508B	20		21-52-21	ALL
	9		W2506	3508Y	20		21-52-21	ALL
	10		W2506	3503B	20		21-51-22	ALL
	11		W2506	3503R	20		21-51-22	ALL
	12		W2506	3503Y	20		21-51-22	ALL
	13		W2506	2522B	20		21-51-23	ALL
	14	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03000

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03002		885/145/R029		PLUG (continued)				ALL
	15		W2506	2529B	20		21-51-23	ALL
	16		W2506	2522R	20		21-51-23	ALL
	17	UNUSED						ALL
	18		W2506	2529R	20		21-51-23	ALL
	19		W2506	0045	20		21-51-23	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D03003		P065-00/ /		RELAY SOCKET-				002
	A1	UNUSED						002
	A2	UNUSED						002
	A3	UNUSED						002
	B1	UNUSED						002
	B2	UNUSED						002
	B3	UNUSED						002
	C1		W0814	2504R	22		34-22-18	002
	C2		W0814	2506R	22		34-22-18	002
	C3		W0814	2503R	22		34-22-18	002
	D1		W0814	2504B	22		34-22-18	002
	D2		W0814	2506B	22		34-22-18	002
	D3		W0814	2503B	22		34-22-18	002
	X1		W0814	0013	22		34-22-18	002
	X2		W0814	0012	22		34-22-18	002
	DED		W0814	2506Z			34-22-18	002
D03004		958/141/R031		PLUG				ALL
	1		W2506	3510R	20		21-52-21	ALL
	2		W2506	3506R	20		21-51-22	ALL
	3		W2506	3510B	20		21-52-21	ALL
	4		W2506	3506B	20		21-51-22	ALL
	5		W2506	3510Y	20		21-52-21	ALL
	6		W2506	3506Y	20		21-51-22	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03000

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03004		958/141/R031		PLUG (continued)				ALL
	12	UNUSED						ALL
D03005		P065-00/ /		RELAY SOCKET-				002
	A1	UNUSED						002
	A2	UNUSED						002
	A3	UNUSED						002
	B1	UNUSED						002
	B2	UNUSED						002
	B3	UNUSED						002
	C1		W0814	2502R	22		34-22-28	002
	C2		W0814	2505R	22		34-22-28	002
	C3		W0814	2501R	22		34-22-28	002
	D1		W0814	2502B	22		34-22-28	002
	D2		W0814	2505B	22		34-22-28	002
	D3		W0814	2501B	22		34-22-28	002
	X1		W0814	0030	22		34-22-28	002
	X2		W0814	0029	22		34-22-28	002
	DED		W0814	2505Z			34-22-28	002
D03006		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D03006		E6/ /		RELAY SOCKET				115-199
	A1		W1270	0940	24		21-51-22	001-099
	A1		W1024	0189	24		21-51-22	115-199
	A2		W1270	0968	22		21-51-23	001-099
	A2		W1024	0233	22		21-51-23	115-199
	A3		W1270	0986	22		21-51-23	001-099
	A3		W1024	0224	22		21-51-23	115-199
	B1		W1270	0939	24		21-51-22	001-099
	B1		W1024	0188	24		21-51-22	115-199
	B2		W1270	0969	22		21-51-23	001-099
	B2		W1024	0232	22		21-51-23	115-199
	B3		W1270	0983	22		21-51-23	001-099
	B3		W1024	0217	22		21-51-23	115-199
	C1		W1270	0938	24		21-51-22	001-099
	C1		W1024	0187	24		21-51-22	115-199
	C2		W1270	0948	22		21-51-23	001-099
	C2		W1024	0231	22		21-51-23	115-199
	C3		W1270	0980	22		21-51-23	001-099
	C3		W1024	0212	22		21-51-23	115-199
	D1	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03000

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03006		P037-00/ /		RELAY SOCKET (PLATE 'A') (continued)				001-099
D03006		E6/ /		RELAY SOCKET (continued)				115-199
	D2		W1270	0987	24		21-51-23	001-099
	D2		W1024	0211	24		21-51-23	115-199
	D3		W1270	0966	20		21-51-23	001-099
	D3		W1024	0210	24		21-51-23	115-199
	X1		W1270	0135	24		21-51-22	001-099
	X1		W1270	0943	24		21-51-22	001-099
	X1		W1024	0186	24		21-51-22	115-199
	X2		W1270	0942	24		21-51-22	001-099
	X2		W1270	0967	24		21-51-23	001-099
	X2		W1024	0226	24		21-51-23	115-199
D03008		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D03008		E6/ /		RELAY SOCKET				115-199
	A1		W1270	0937	24		21-51-22	001-099
	A1		W1024	0185	24		21-51-22	115-199
	A2		W1270	0949	22		21-51-23	001-099
	A2		W1024	0230	22		21-51-23	115-199
	A3		W1270	0964	22		21-51-23	001-099
	A3		W1024	0208	22		21-51-23	115-199
	B1		W1270	0936	24		21-51-22	001-099
	B1		W1024	0184	24		21-51-22	115-199
	B2		W1270	0950	22		21-51-23	001-099
	B2		W1024	0229	22		21-51-23	115-199
	B3		W1270	0957	22		21-51-23	001-099
	B3		W1024	0204	22		21-51-23	115-199
	C1		W1270	0924	24		21-51-22	001-099
	C1		W1024	0183	24		21-51-22	115-199
	C2		W1270	0952	22		21-51-23	001-099
	C2		W1024	0228	22		21-51-23	115-199
	C3		W1270	0961	22		21-51-23	001-099
	C3		W1024	0196	22		21-51-23	115-199
	D1	UNUSED						ALL
	D2		W1270	0965	24		21-51-23	001-099
	D2		W1024	0195	24		21-51-23	115-199
	D3		W1270	0947	20		21-51-23	001-099
	D3		W1024	0200	24		21-51-23	115-199
	X1		W1270	0943	24		21-51-22	001-099
	X1		W1270	0944	24		21-51-22	001-099
	X1		W1024	0182	24		21-51-22	115-199

HOOKUP LIST

D280N032

91-21-51

Section D03000

Page 4

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03008		P037-00/ /		RELAY SOCKET (PLATE 'A') (continued)				001-099
D03008		E6/ /		RELAY SOCKET (continued)				115-199
	X2		W1270	0942	24		21-51-22	001-099
	X2		W1270	0945	24		21-51-22	001-099
	X2		W1024	0227	24		21-51-23	115-199
D03010		943/149/R032		PLUG				ALL
	1		W2506	2503R	20		21-51-22	ALL
	2		W2506	2503B	20		21-51-22	ALL
D03012		863/189/R009		PLUG				001-099
D03012		863/189/R9		PLUG				115-199
	1		W4106	2054B	24		21-51-22	ALL
	2		W4106	2054R	24		21-51-22	ALL
D03014		960/141/R031		PLUG				ALL
	1		W2506	2506B	20		21-51-23	ALL
	2		W2506	2506R	20		21-51-23	ALL
	3		W2506	1026	20		21-51-23	ALL
	4		W2506	3505R	20		21-51-22	ALL
	5		W2506	3505B	20		21-51-22	ALL
	6		W2506	2531B	20		21-51-23	ALL
	7	UNUSED						ALL
	8		W2506	2532B	20		21-51-23	ALL
	9		W2506	2531R	20		21-51-23	ALL
	10	UNUSED						ALL
	11		W2506	2532R	20		21-51-23	ALL
	12		W2506	3505Y	20		21-51-22	ALL
	13		W2506	0053	20		21-51-23	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D03016		283/272/L034		PLUG-				001-099
D03016		283/272/L034		PLUG				115-199
	1		W0128	3001Y	24		33-13-61	ALL
	1		W0128	3003Y	20		33-13-61	ALL
	2	18	W0128	0089	18		33-13-61	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0128	3001B	24		33-13-61	ALL
	5		W0128	3003B	20		33-13-61	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03000

Page 5

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03016		283/272/L034		PLUG- (continued)				001-099
D03016		283/272/L034		PLUG (continued)				115-199
	6		W0128	3001R	24		33-13-61	ALL
	6		W0128	3003R	20		33-13-61	ALL
	7		W0128	0086	20		33-13-61	ALL
	8	16	W0128	0088	18		33-13-61	001-099
	8	18	W0128	0088	18		33-13-61	115-199
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	16	W0128	0087	16		33-13-61	ALL
	12		W0128	0090	24		33-13-61	ALL
	12		W0128	0119	24		33-13-61	ALL
D03018		283/272/L034		PLUG-				ALL
	1		W0128	3000Y	24		33-13-61	ALL
	1		W0128	3001Y	24		33-13-61	ALL
	2	18	W0128	0050	18		33-13-61	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0128	3000B	24		33-13-61	ALL
	5		W0128	3001B	24		33-13-61	ALL
	6		W0128	3000R	24		33-13-61	ALL
	6		W0128	3001R	24		33-13-61	ALL
	7		W0128	0048	20		33-13-61	ALL
	8	18	W0128	0051	18		33-13-61	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	16	W0128	0053	16		33-13-61	ALL
	12		W0128	0049	24		33-13-61	ALL
	12		W0128	0090	24		33-13-61	ALL
D03020		283/272/L034		PLUG-				001-099
D03020		283/272/L034		PLUG				115-199
	1		W0128	3000Y	24		33-13-61	ALL
	1		W0128	3002Y	24		33-13-61	ALL
	2	18	W0128	0094	18		33-13-61	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0128	3000B	24		33-13-61	ALL
	5		W0128	3002B	24		33-13-61	ALL
	6		W0128	3000R	24		33-13-61	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03000

Page 6

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03020		283/272/L034		PLUG- (continued)				001-099
D03020		283/272/L034		PLUG (continued)				115-199
	6		W0128	3002R	24		33-13-61	ALL
	7		W0128	0091	20		33-13-61	ALL
	8	18	W0128	0095	18		33-13-61	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	16	W0128	0096	16		33-13-61	ALL
	12		W0128	0049	24		33-13-61	ALL
	12		W0128	0092	24		33-13-61	ALL
D03022		P36/ /		RELAY SOCKET (PLATE 'D')				ALL
	A1		W1260	0224	22		27-51-51	001-099
	A1		W1260	0224	20		27-51-51	115-199
	A2		W1260	0222	22		27-51-51	001-099
	A2		W1260	0221	22		27-51-51	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1260	0222	22		27-51-51	ALL
	X2		W1260	0223	22		27-51-51	ALL
D03024		1060/190/L020		PLUG				ALL
	1		W2414	0006	18		27-51-51	ALL
	2		W2414	0022	18		27-51-51	ALL
	3		W2414	0001	18		27-51-51	ALL
	4		W2414	0023	18		27-51-51	ALL
	5		W2414	0021	18		27-51-51	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D03026A		E3-2/ /		PLUG				001-099
D03026A		E6-2/ /		PLUG				115-199
	A01		W1332	3015R	24		21-51-22	001-099

HOOKUP LIST

D280N032

91-21-51

Section D03000

Page 7

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03026A		E3-2/ /		PLUG (continued)				001-099
D03026A		E6-2/ /		PLUG (continued)				115-199
	A01		W1030	3015R	24		21-51-22	115-199
	A02		W1332	3015B	24		21-51-22	001-099
	A02		W1030	3015B	24		21-51-22	115-199
	A03		W1332	3015Y	24		21-51-22	001-099
	A03		W1030	3015Y	24		21-51-22	115-199
	A04		W1332	2003R	24		21-51-22	001-099
	A04		W1030	2110R	24		21-51-22	115-199
	A05		W1332	2003B	24		21-51-22	001-099
	A05		W1030	2110B	24		21-51-22	115-199
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10		W1332	3014R	24		21-51-22	001-099
	A10		W1030	3014R	24		21-51-22	115-199
	A11		W1332	3014B	24		21-51-22	001-099
	A11		W1030	3014B	24		21-51-22	115-199
	A12		W1332	3014Y	24		21-51-22	001-099
	A12		W1030	3014Y	24		21-51-22	115-199
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01		W1332	3013Y	24		21-51-22	001-099
	B01		W1030	3113Y	24		21-51-22	115-199
	B02		W1332	3013B	24		21-51-22	001-099
	B02		W1030	3113B	24		21-51-22	115-199
	B03		W1332	3013R	24		21-51-22	001-099
	B03		W1030	3113R	24		21-51-22	115-199
	B04		W1332	2001B	24		21-51-22	001-099
	B04		W1030	2108B	24		21-51-22	115-199
	B05		W1332	2001R	24		21-51-22	001-099
	B05		W1030	2108R	24		21-51-22	115-199
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10		W1332	3012R	24		21-51-22	001-099
	B10		W1030	3112R	24		21-51-22	115-199
	B11		W1332	3012B	24		21-51-22	001-099

HOOKUP LIST

D280N032

91-21-51

Section D03000

Page 8

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03026A		E3-2/ /		PLUG (continued)				001-099
D03026A		E6-2/ /		PLUG (continued)				115-199
	B11		W1030	3112B	24		21-51-22	115-199
	B12		W1332	3012Y	24		21-51-22	001-099
	B12		W1030	3112Y	24		21-51-22	115-199
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01		W1332	3011Y	24		21-51-22	001-099
	C01		W1030	3111Y	24		21-51-22	115-199
	C02		W1332	3011B	24		21-51-22	001-099
	C02		W1030	3111B	24		21-51-22	115-199
	C03		W1332	3011R	24		21-51-22	001-099
	C03		W1030	3111R	24		21-51-22	115-199
	C04		W1332	2112R	24		21-61-21	001-099
	C04		W1030	2112R	24		21-61-21	115-199
	C05		W1332	2112B	24		21-61-21	001-099
	C05		W1030	2112B	24		21-61-21	115-199
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10		W1332	3010R	24		21-51-22	001-099
	C10		W1030	3110R	24		21-51-22	115-199
	C11		W1332	3010B	24		21-51-22	001-099
	C11		W1030	3110B	24		21-51-22	115-199
	C12		W1332	3010Y	24		21-51-22	001-099
	C12		W1030	3110Y	24		21-51-22	115-199
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15		W1332	0367	24		21-51-22	001-099
	C15		W1030	0367	24		21-51-22	115-199
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04		W1332	2105B	24		21-51-25	001-099
	D04		W1030	2105B	24		21-51-25	115-199
	D05		W1332	2105R	24		21-51-25	001-099
	D05		W1030	2105R	24		21-51-25	115-199
	D06	UNUSED						ALL
	D07	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03000

Page 9

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03026A		E3-2/ /		PLUG (continued)				001-099
D03026A		E6-2/ /		PLUG (continued)				115-199
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
D03026B		E3-2/ /		PLUG				001-099
D03026B		E6-2/ /		PLUG				115-199
	A01		W1332	2108R	24		21-61-51	001-099
	A01		W1030	2016R	24		21-61-51	115-199
	A02		W1332	2108B	24		21-61-51	001-099
	A02		W1030	2016B	24		21-61-51	115-199
	A03		W1332	2107R	24		21-61-51	001-099
	A03		W1030	2015R	24		21-61-51	115-199
	A04		W1332	2107B	24		21-61-51	001-099
	A04		W1030	2015B	24		21-61-51	115-199
	A05		W1332	2116B	24		21-61-51	001-099
	A05		W1030	2014B	24		21-61-51	115-199
	A06		W1332	2116R	24		21-61-51	001-099
	A06		W1030	2014R	24		21-61-51	115-199
	A07		W1332	2109R	24		21-61-51	001-099
	A07		W1030	2017R	24		21-61-51	115-199
	A08		W1332	2109B	24		21-61-51	001-099
	A08		W1030	2017B	24		21-61-51	115-199
	A09		W1332	3017Y	24		21-51-22	001-099
	A09		W1030	3117Y	22		21-51-22	115-199
	A10		W1332	3017R	24		21-51-22	001-099
	A10		W1030	3117R	22		21-51-22	115-199
	A11		W1332	3017B	24		21-51-22	001-099
	A11		W1030	3117B	22		21-51-22	115-199
	A12	UNUSED						ALL
	A13		W1332	0354	24		21-51-22	001-099
	A13		W1030	0354	24		21-51-22	115-199
	A14	UNUSED						ALL
	A15		W1332	0355	24		21-51-22	001-099
	A15		W1030	0355	24		21-51-22	115-199

HOOKUP LIST

D280N032

91-21-51

Section D03000

Page 10

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03026B		E3-2/ /		PLUG (continued)				001-099
D03026B		E6-2/ /		PLUG (continued)				115-199
	B01		W1332	2103R	24		21-51-22	001-099
	B01		W1030	2103R	24		21-51-22	115-199
	B02		W1332	2103B	24		21-51-22	001-099
	B02		W1030	2103B	24		21-51-22	115-199
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07		W1332	2110R	24		21-61-51	001-099
	B07		W1030	2018R	24		21-61-51	115-199
	B08		W1332	2110B	24		21-61-51	001-099
	B08		W1030	2018B	24		21-61-51	115-199
	B09		W1332	0369	24		21-51-25	001-099
	B09		W1030	0369	24		21-51-25	115-199
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13		W1332	0352	24		21-51-22	001-099
	B13		W1030	0352	24		21-51-22	115-199
	B14	UNUSED						ALL
	B15		W1332	0353	24		21-51-22	001-099
	B15		W1030	0353	24		21-51-22	115-199
	C01		W1332	2104B	24		21-51-24	001-099
	C01		W1030	2104B	24		21-51-24	115-199
	C02		W1332	2104R	24		21-51-24	001-099
	C02		W1030	2104R	24		21-51-24	115-199
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05		W1332	0370	24		21-51-25	001-099
	C05		W1030	0360	24		21-51-25	115-199
	C06	UNUSED						ALL
	C07		W1332	0368	24		21-51-25	001-099
	C07		W1030	0368	24		21-51-25	115-199
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13		W1332	0350	24		21-51-22	001-099

HOOKUP LIST

D280N032

91-21-51

Section D03000

Page 11

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03026B		E3-2/ /		PLUG (continued)				001-099
D03026B		E6-2/ /		PLUG (continued)				115-199
	C13		W1030	0350	24		21-51-22	115-199
	C14	UNUSED						ALL
	C15		W1332	0351	24		21-51-22	001-099
	C15		W1030	0351	24		21-51-22	115-199
	D01		W1332	2106B	24		21-51-22	001-099
	D01		W1030	2113B	24		21-51-22	115-199
	D02		W1332	2106R	24		21-51-22	001-099
	D02		W1030	2113R	24		21-51-22	115-199
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05		W1332	2002B	24		21-51-22	001-099
	D05		W1030	2109B	24		21-51-22	115-199
	D06		W1332	2002R	24		21-51-22	001-099
	D06		W1030	2109R	24		21-51-22	115-199
	D07		W1332	0356	24		21-51-22	001-099
	D07		W1030	0356	24		21-51-22	115-199
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
D03026C		E3-2/ /		PLUG				001-099
D03026C		E6-2/ /		PLUG				115-199
	1	UNUSED						ALL
	2		W1332	0346	22		21-51-22	001-099
	2		W1030	0346	22		21-51-22	115-199
	3		W1332	0348	24		21-51-22	001-099
	3		W1030	0348	24		21-51-22	115-199
	4		W1332	0347	20		21-51-22	001-099
	4		W1030	0347	20		21-51-22	115-199
	5	UNUSED						ALL
	= C1	UNUSED						ALL
	= C5	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03000

Page 12

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03028		975/145/R027		PLUG				ALL
	1		W2506	2514B	20		21-51-25	ALL
	2		W2506	2514R	20		21-51-25	ALL
D03030		942/156/R060		PLUG				ALL
	1		W2506	1014	20		21-51-25	ALL
	2		W2506	1015	20		21-51-25	ALL
D03032 D03032		P037-00/ / E6/ /		RELAY SOCKET (PLATE 'A') RELAY SOCKET				001-099 115-199
	A1		W1270	0962	24		21-51-23	001-099
	A1		W1024	0197	24		21-51-23	115-199
	A2		W1270	0961	22		21-51-23	001-099
	A2		W1024	0196	22		21-51-23	115-199
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1270	0956	24		21-51-23	001-099
	X1		W1024	0198	24		21-51-23	115-199
	X2		W1270	0955	24		21-51-23	001-099
	X2		W1024	0199	24		21-51-23	115-199
D03034 D03034		P037-00/ / E6/ /		RELAY SOCKET (PLATE 'A') RELAY SOCKET				001-099 115-199
	A1		W1270	0958	24		21-51-23	001-099
	A1		W1024	0201	24		21-51-23	115-199
	A2		W1270	0957	22		21-51-23	001-099
	A2		W1024	0204	22		21-51-23	115-199
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1270	0953	24		21-51-23	001-099
	X1		W1024	0202	24		21-51-23	115-199
	X2		W1270	0954	24		21-51-23	001-099
	X2		W1024	0203	24		21-51-23	115-199

HOOKUP LIST

D280N032

91-21-51

Section D03000

Page 13

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03036		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D03036		E6/ /		RELAY SOCKET				115-199
	A1		W1270	0963	24		21-51-23	001-099
	A1		W1024	0205	24		21-51-23	115-199
	A2		W1270	0964	22		21-51-23	001-099
	A2		W1024	0208	22		21-51-23	115-199
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1270	0959	24		21-51-23	001-099
	X1		W1024	0206	24		21-51-23	115-199
	X2		W1270	0960	24		21-51-23	001-099
	X2		W1024	0207	24		21-51-23	115-199
D03038		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D03038		E6/ /		RELAY SOCKET				115-199
	A1		W1270	0982	24		21-51-23	001-099
	A1		W1024	0214	24		21-51-23	115-199
	A2		W1270	0980	22		21-51-23	001-099
	A2		W1024	0212	22		21-51-23	115-199
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1270	0972	24		21-51-23	001-099
	X1		W1024	0215	24		21-51-23	115-199
	X2		W1270	0970	24		21-51-23	001-099
	X2		W1024	0216	24		21-51-23	115-199
D03040		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D03040		E6/ /		RELAY SOCKET				115-199
	A1		W1270	0984	24		21-51-23	001-099
	A1		W1024	0218	24		21-51-23	115-199
	A2		W1270	0983	22		21-51-23	001-099
	A2		W1024	0217	22		21-51-23	115-199
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03000

Page 14

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03040		P037-00/ /		RELAY SOCKET (PLATE 'A') (continued)				001-099
D03040		E6/ /		RELAY SOCKET (continued)				115-199
	X1		W1270	0975	24		21-51-23	001-099
	X1		W1024	0219	24		21-51-23	115-199
	X2		W1270	0974	24		21-51-23	001-099
	X2		W1024	0220	24		21-51-23	115-199
D03042		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D03042		E6/ /		RELAY SOCKET				115-199
	A1		W1270	0985	24		21-51-23	001-099
	A1		W1024	0221	24		21-51-23	115-199
	A2		W1270	0986	22		21-51-23	001-099
	A2		W1024	0224	22		21-51-23	115-199
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1270	0976	24		21-51-23	001-099
	X1		W1024	0222	24		21-51-23	115-199
	X2		W1270	0977	24		21-51-23	001-099
	X2		W1024	0223	24		21-51-23	115-199
D03044		P50/ /		RCPT				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1140	0213	24		21-51-23	ALL
	4		W1140	0078	24		21-51-23	ALL
	5		W1140	0443	24		21-51-23	ALL
	6		W1140	0091	24		21-51-23	ALL
	7		W1140	0084	24		21-51-23	ALL
	8		W1140	0096	24		21-51-23	ALL
	9		W1140	0085	24		21-51-23	ALL
	10		W1140	0086	24		21-51-23	ALL
	11		W1140	0087	24		21-51-23	ALL
	12		W1140	0088	24		21-51-23	ALL
	13		W1140	0089	24		21-51-23	ALL
	14		W1140	0090	24		21-51-23	ALL
	15		W1140	0083	24		21-51-23	ALL
	16		W1140	0082	24		21-51-23	ALL
	17		W1140	0081	24		21-51-23	ALL
	18		W1140	0080	24		21-51-23	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03000

Page 15

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03044		P50/ /		RCPT (continued)				ALL
	19		W1140	0079	22		21-51-23	ALL
	20	UNUSED						ALL
	21		W1140	0526	24		21-51-23	ALL
	22		W1140	PK01			21-51-23	ALL
	23	UNUSED						ALL
	24		W1140	0149	24		21-51-24	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W1140	PK02			21-51-23	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W1140	0094	24		21-51-23	ALL
	36		W1140	0093	24		21-51-23	ALL
	37		W1140	0092	24		21-51-23	ALL
	38		W1140	PK01			21-51-23	ALL
	39		W1140	0441	22		21-51-23	ALL
	40		W1140	PK02			21-51-23	ALL
	41		W1140	0527	24		21-51-23	ALL
D03046		P50/ /		RCPT				ALL
	1		W1140	0150	24		21-51-25	ALL
	2		W1140	0142	24		21-51-21	ALL
	3	UNUSED						ALL
	4		W1140	0144	24		21-51-21	ALL
	5		W1140	0145	24		21-51-21	ALL
	6	UNUSED						ALL
	7		W1140	0134	24		21-51-21	ALL
	8		W1140	0135	24		21-51-21	ALL
	9		W1140	0077	24		21-51-23	ALL
	10		W1140	0229	24		21-51-25	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1140	0140	24		21-51-21	ALL
	15		W1140	0032	24		21-51-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03000

Page 16

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03046		P50/ /		RCPT (continued)				ALL
	16		W1140	0186	24		36-11-11	ALL
	17		W1140	0151	24		21-51-25	ALL
	18		W1140	0148	24		21-51-21	ALL
	19		W1140	0138	24		21-51-21	ALL
	20	UNUSED						ALL
	21		W1140	0131	22		21-51-21	ALL
	22		W1140	0132	24		21-51-21	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W1140	PL01			21-51-21	ALL
	26		W1140	0096	24		21-51-23	ALL
	27		W1140	0139	22		21-51-21	ALL
	28		W1140	0152	24		21-51-25	ALL
	29	UNUSED						ALL
	30		W1140	0213	24		21-51-23	ALL
	31		W1140	0136	24		21-51-21	ALL
	32		W1140	0521	24		21-51-21	ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W1140	PL01			21-51-21	ALL
	36		W1140	0031	24		21-51-21	ALL
	37		W1140	0178	24		36-11-21	ALL
	38		W1140	0230	24		21-51-25	ALL
	39		W1140	0133	24		21-51-21	ALL
	40	UNUSED						ALL
	41		W1140	0130	22		21-51-21	ALL
D03050		FSS119/WRP/		PLUG				ALL
	1		W3342	0022	20		27-81-21	ALL
	2		W3342	0021	20		27-81-21	ALL
	3		W3342	0024	20		27-81-21	ALL
	4		W3342	0023	20		27-81-21	ALL
	5		W3342	0020	18		27-81-21	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D03052		P37/ /		RELAY SOCKET (PLATE 'C')				115-199
	A1		W1270	0780	20		80-11-21	115-199
	A2		W1270	0778	20		80-11-21	115-199
	A3		W1270	0779	20		80-11-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section D03000

Page 17

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03052		P37/ /		RELAY SOCKET (PLATE 'C') (continued)				115-199
	B1	UNUSED						115-199
	B2	UNUSED						115-199
	B3	UNUSED						115-199
	X1		W1270	0777	20		80-11-21	115-199
	X2		W1270	0805	20		80-11-21	115-199
D03054		P037-00/ /		RELAY SOCKET (PLATE 'C')				001-099
D03054		P37/ /		RELAY SOCKET (PLATE 'C')				115-199
	A1		W1270	0883	24		24-51-71	ALL
	A2		W1270	0879	24		24-51-71	ALL
	A3	UNUSED						ALL
	B1		W1270	0859	22		49-61-11	ALL
	B2		W1270	0858	22		49-61-11	ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2		W1270	0851	22		30-21-11	ALL
	C3		W1270	0852	22		30-21-11	ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1270	0785	20		80-11-21	ALL
	X2		W1270	0795	20		80-11-21	ALL
D03056		P037-00/ /		RELAY SOCKET (PLATE 'C')				001-099
D03056		P37/ /		RELAY SOCKET (PLATE 'C')				115-199
	1	UNUSED						001-099
	1		W1270	0896	22		31-31-32	115-199
	2	UNUSED						001-099
	2		W1270	0897	22		31-31-32	115-199
	3		W1270	0848	20		36-11-21	ALL
	4		W1270	0492	20		36-11-21	001-099
	4		W1270	0850	20		36-11-21	115-199
	5		W1270	0849	20		36-11-21	ALL
	6		W1270	0786	20		80-11-21	ALL
	7		W1270	0790	24		80-11-21	ALL
	8		W1270	0800	24		80-11-21	ALL
	9	UNUSED						ALL
	10		W1270	0797	20		80-11-21	001-099
	10		W1270	0798	20		80-11-21	115-199
	11		W1270	0796	20		80-11-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03000

Page 18

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03056		P037-00/ /		RELAY SOCKET (PLATE 'C') (continued)				001-099
D03056		P37/ /		RELAY SOCKET (PLATE 'C') (continued)				115-199
	12		W1270	0801	20		80-11-21	ALL
	13	UNUSED						ALL
	14		W1270	0799	24		80-11-21	001-099
	14		W1270	0799	20		80-11-21	115-199
D03058		P50/ /		RCPT				ALL
	1	UNUSED						ALL
	2		W1140	0015	24		22-32-13	ALL
	3	UNUSED						ALL
	4		W1140	0018	24		22-32-13	ALL
	5	UNUSED						ALL
	6		W1140	0554	24		73-21-22	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W1140	PM01			21-51-21	ALL
	10		W1140	0016	24		22-32-13	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W1140	0072	24		34-61-13	ALL
	17		W1140	0557	24		73-21-22	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W1140	0556	24		73-21-22	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W1140	0564	22		30-11-11	ALL
	26	UNUSED						ALL
	27		W1140	0069	24		34-61-13	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W1140	0208	22		36-11-21	ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03000

Page 19

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03058		P50/ /		RCPT (continued)				ALL
	34	UNUSED						ALL
	35		W1140	0137	24		21-51-21	ALL
	36		W1140	0148	24		21-51-21	ALL
	37	UNUSED						ALL
	38		W1140	0017	24		22-32-13	ALL
	39		W1140	0205	24		36-11-21	ALL
	40		W1140	0070	24		34-61-13	ALL
	41		W1140	0330	22		30-21-11	ALL
	42		W1140	0068	24		34-61-13	ALL
	43		W1140	0067	24		34-61-13	ALL
	44		W1140	0552	24		73-21-22	ALL
	45	UNUSED						ALL
	46		W1140	0329	22		30-21-11	ALL
	47		W1140	0071	24		34-61-13	ALL
	48	UNUSED						ALL
	49		W1140	0553	24		73-21-22	ALL
	50	UNUSED						ALL
	51		W1140	0555	24		73-21-22	ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55		W1140	0209	24		36-11-21	ALL
	56	UNUSED						ALL
	57		W1140	0563	22		30-11-11	ALL
	58	UNUSED						ALL
	59	UNUSED						ALL
	60	UNUSED						ALL
	61		W1140	0189	24		36-11-31	ALL
	62	UNUSED						ALL
	63	UNUSED						ALL
	64		W1140	0207	22		36-11-21	ALL
	65		W1140	PM01			21-51-21	ALL
	66		W1140	0204	22		73-21-22	ALL
D03062		P031-00/ /		PLUG				ALL
	1		W1136	0330	22		29-11-22	ALL
	2		W1136	0331	22		29-11-22	ALL
	3		W1136	0332	22		29-11-22	ALL
	4		W1136	0333	22		29-11-22	ALL
	5	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03000

Page 20

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03062		P031-00/ /		PLUG (continued)				ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	16	W1136	0015	16		29-11-22	ALL
	9		W1136	0334	20		29-11-22	ALL
	10		W1136	0009	20		29-11-22	ALL
	11		W1136	0010	22		29-11-22	ALL
	12		W1136	0010	22		29-11-22	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W1136	0008	20		29-11-22	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	16	W1136	0016	16		29-11-22	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D03064		PPS229/148/L2		PLUG				ALL
	1		W5200	0083	20		29-11-22	ALL
	2		W5200	0074	18		29-11-22	ALL
	3		W5200	0073	20		29-11-22	ALL
D03066		1065/176/R61		PLUG				ALL
	1	UNUSED						ALL
	2		W2512	0025	18		29-11-22	ALL
	3		W2512	1041	18		29-11-22	ALL
D03072		P36/ /		RELAY SOCKET (PLATE 'D')				ALL
	A1		W1260	0500	16		29-11-31	ALL
	A2		W1260	0499	16		29-11-31	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1260	0502	22		29-11-31	ALL
	X2		W1260	0501	20		29-11-31	001-099
	X2		W1260	0501	22		29-11-31	115-199

HOOKUP LIST

D280N032

91-21-51

Section D03000

Page 21

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03076		P36/ /		RELAY SOCKET (PLATE 'D')				ALL
	A1		W1260	0496	16		29-11-22	ALL
	A2		W1260	0211	16		29-11-22	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1260	0116	22		29-11-22	001-099
	X1		W1260	0497	22		29-11-22	ALL
	X2		W1260	0498	20		29-11-22	ALL
D03080		P34/ /		RELAY SOCKET				ALL
	A1	UNUSED						ALL
	A2		W1240	0027	24		33-22-11	001-099
	A2		W1240	0027	22		33-22-11	115-199
	A3		W1240	0026	24		33-22-11	001-099
	A3		W1240	0026	22		33-22-11	115-199
	B1	UNUSED						ALL
	B2		W1240	0032	22		52-51-11	ALL
	B3		W1240	0031	22		52-51-11	ALL
	C1	UNUSED						ALL
	C2		W1240	0080	22		33-14-41	ALL
	C3		W1240	0079	22		33-14-41	ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1240	0030	24		33-22-11	001-099
	X1		W1240	0030	22		33-22-11	115-199
	X2		W1240	0029	24		33-22-11	001-099
	X2		W1240	0029	22		33-22-11	115-199
D03082		P34/ /		RELAY SOCKET				ALL
	A1		W1240	0136	22		33-22-11	ALL
	A2		W1240	0139	22		33-22-11	ALL
	A3	UNUSED						ALL
	B1		W1240	0064	22		33-27-11	ALL
	B2		W1240	0023	22		33-22-11	ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2		W1240	0077	22		33-22-11	ALL
	C3		W1240	0062	22		33-26-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03000

Page 22

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03082		P34/ /		RELAY SOCKET (continued)				ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1240	0026	24		33-22-11	001-099
	X1		W1240	0026	22		33-22-11	115-199
	X2		W1240	0137	24		33-22-11	ALL
D03084		E6 RLY/PNL/		RELAY SOCKET				001-099
D03084		E6/ /		RELAY SOCKET				115-199
	A1		W1024	0074	22		49-41-11	ALL
	A2		W1024	0075	22		49-41-11	ALL
	A3	UNUSED						ALL
	B1		W1024	0102	24		24-33-12	001-099
	B1		W1024	0399	24		24-32-41	ALL
	B1		W1024	0450	24		24-31-41	ALL
	B2		W1024	0089	22		24-31-41	ALL
	B3	UNUSED						ALL
	C1		W1024	0091	24		24-32-41	001-099
	C1		W1024	0038	24		24-32-41	115-199
	C2		W1024	0100	22		49-41-11	ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2		W1024	0084	24		24-33-12	001-099
	D2	UNUSED						115-199
	D3		W1024	0088	24		24-33-12	001-099
	D3	UNUSED						115-199
	X1		W1024	0085	22		49-41-11	ALL
	X2		W1024	0003	22		49-41-11	ALL
D03086		983/155/R035		PLUG				001-099
	A		W2506	2516B	20		21-52-11	001-099
	B		W2506	2516R	20		21-52-11	001-099
D03088		983/147/R036		PLUG				001-099
	A		W2506	2517B	20		21-52-11	001-099
	B		W2506	2517R	20		21-52-11	001-099
D03090		982/151/R036		PLUG				001-099
	A		W2506	2518B	20		21-52-11	001-099
	B		W2506	2518R	20		21-52-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D03000

Page 23

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03092		971/150/R038		PLUG				001-099
	A		W2506	2519B	20		21-52-11	001-099
	B		W2506	2519R	20		21-52-11	001-099
D03094		P14/ /		PLUG				ALL
	1		W2070	0200	20		33-13-21	ALL
	2		W2070	0201	20		33-13-21	ALL
	3		W2070	0099	20		21-45-11	ALL
	4		W2070	0367	20		21-45-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W2070	0148	20		21-45-11	ALL
	8		W2070	0149	20		21-45-11	ALL
	9	UNUSED						ALL
	10		W2070	0373	20		21-45-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03000

Page 24 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03100		N252/ /		PLUG				ALL
	1		W5100	0080	20		29-11-12	ALL
	2		W5100	0073	18		29-11-12	ALL
	3		W5100	0072	20		29-11-12	ALL
D03102		1067.6/174/L059		PLUG				ALL
	1	UNUSED						ALL
	2		W2412	0042	18		29-11-12	ALL
	3		W2412	1041	20		29-11-12	ALL
D03106		P032-00/ /		PLUG				ALL
	1		W1138	0091	22		29-11-12	ALL
	2		W1138	0090	22		29-11-12	ALL
	3		W1138	0089	22		29-11-12	ALL
	4		W1138	0088	22		29-11-12	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	16	W1138	0151	16		29-11-12	ALL
	9		W1138	0084	20		29-11-12	ALL
	10		W1138	0083	20		29-11-12	ALL
	11		W1138	0087	22		29-11-12	ALL
	12		W1138	0087	22		29-11-12	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W1138	0085	20		29-11-12	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	16	W1138	0152	16		29-11-12	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D03114		P33/ /		RELAY SOCKET				ALL
	A1		W1230	0172	16		29-11-12	ALL
	A2		W1230	0173	16		29-11-12	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03100

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03114		P33/ /		RELAY SOCKET (continued)				ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1230	0174	22		29-11-12	ALL
	X2		W1230	0175	22		29-11-12	ALL
D03118		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D03118		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1270	5995	22		32-09-12	ALL
	7		W1270	5997	22		32-42-12	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W1270	5996	22		32-09-12	ALL
	13	UNUSED						ALL
	14		W1270	5998	22		32-42-12	ALL
D03120		983/155/L39		PLUG				001-099
	A		W2406	2543B	20		21-52-11	001-099
	B		W2406	2543R	20		21-52-11	001-099
D03122		983/147/L39		PLUG				001-099
	A		W2406	2544B	20		21-52-11	001-099
	B		W2406	2544R	20		21-52-11	001-099
D03124		982/151/L39		PLUG				001-099
	A		W2406	2545B	20		21-52-11	001-099
	B		W2406	2545R	20		21-52-11	001-099
D03126		971/150/L37		PLUG				001-099
	A		W2406	2546B	20		21-52-11	001-099
	B		W2406	2546R	20		21-52-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D03100

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03130		P33/ /		RELAY SOCKET				ALL
	A1		W1230	0188	22		29-22-11	ALL
	A2		W1230	0186	22		29-22-11	ALL
	A3		W1230	0187	22		29-22-11	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1230	0189	22		29-22-11	ALL
	X2		W1230	0190	22		29-22-11	ALL
D03136		1065/173/L005		PLUG				ALL
	1		W2416	3502Y	20		29-22-11	ALL
	2		W2416	3502R	20		29-22-11	ALL
	3		W2416	3502B	20		29-22-11	ALL
D03140		1065/173/L005		PLUG				ALL
	1	UNUSED						ALL
	2		W2416	0005	18		29-22-11	ALL
	3		W2416	1005	18		29-22-11	ALL
D03142		1054.5/174/R005		PLUG				ALL
	1		W2514	0003	18		29-22-11	ALL
	2		W2514	2501B	18		29-22-11	ALL
	3		W2514	2501R	18		29-22-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
D03152		P13/ /		PLUG				ALL
	1		W2064	0091	20		33-13-11	ALL
	2		W2064	0092	20		33-13-11	ALL
	3		W2064	0060	20		21-45-11	ALL
	4		W2064	0069	20		21-45-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W2064	0055	20		21-45-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03100

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03152		P13/ /		PLUG (continued)				ALL
	8		W2064	0059	20		21-45-11	ALL
	9	UNUSED						ALL
	10		W2064	0061	20		21-45-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D03154		P005-00/ /		PLUG				001-099
D03154		P5/270/L20		PLUG				115-199
	A		W2066	2011B	24		21-65-11	ALL
	B		W2066	0176	24		21-65-11	ALL
D03156		512/274/R35		PLUG-				001-099
D03156		540/274/R35		PLUG-				115-199
	A		W3632	2001B	24		21-65-11	ALL
	B		W3632	0161	24		21-65-11	ALL
D03158		1177/275/R45		PLUG-				ALL
	A		W3634	2001B	24		21-65-11	ALL
	B		W3634	0161	24		21-65-11	ALL
D03192		IRSS230/ /		PLUG				ALL
	1		W2414	2503B	20		27-62-11	ALL
	2		W2414	1013	18		27-62-11	ALL
	3	UNUSED						ALL
	4		W2414	2503R	20		27-62-11	ALL
	5		W2414	1006	20		27-62-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	DED		W2414	2503Z			27-62-11	ALL
			W2414	1006Z			27-62-11	ALL
			W2414	1013Z			27-62-11	ALL
D03194		P36/ /		RELAY SOCKET (PLATE 'D')				ALL
	A1		W1260	5673	20		27-62-11	001-099
	A1		W1260	0284	20		27-62-11	ALL
	A2		W1260	0289	20		27-62-11	ALL
	A3	UNUSED						ALL
	B1		W1260	0268	20		27-62-11	ALL
	B1		W1260	6426	22		27-62-11	010-099
	B2		W1260	0288	20		27-62-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03100

Page 4

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03194		P36/ /		RELAY SOCKET (PLATE 'D') (continued)				ALL
	B3		W1260	0267	20		27-62-11	ALL
	C1		W1260	0287	20		27-62-11	ALL
	C2		W1260	0286	20		27-62-11	ALL
	C3		W1260	0267	20		27-62-11	ALL
	D1	UNUSED						ALL
	D2		W1260	0260	20		27-62-11	ALL
	D3		W1260	0271	20		27-62-11	001-099
	D3		W1260	0270	20		27-62-11	ALL
	X1		W1260	0275	20		27-62-11	001-099
	X1		W1260	0274	20		27-62-11	ALL
	X2		W1260	0285	20		27-62-11	ALL
D03196		P36/ /		RELAY SOCKET (PLATE 'D')				ALL
	A1		W1260	0282	20		27-62-11	ALL
	A2		W1260	0279	20		27-62-11	ALL
	A3	UNUSED						ALL
	B1		W1260	0276	20		27-62-11	001-099
	B1		W1260	0275	20		27-62-11	ALL
	B2		W1260	0288	20		27-62-11	ALL
	B3		W1260	0277	20		27-62-11	ALL
	C1		W1260	0287	20		27-62-11	ALL
	C2		W1260	0278	20		27-62-11	ALL
	C3		W1260	0277	20		27-62-11	ALL
	D1	UNUSED						ALL
	D2		W1260	0259	20		27-62-11	ALL
	D3		W1260	0269	20		27-62-11	001-099
	D3		W1260	0271	20		27-62-11	ALL
	X1		W1260	0276	20		27-62-11	ALL
	X2		W1260	0280	20		27-62-11	ALL
D03198		P36/ /		RELAY SOCKET (PLATE 'D')				ALL
	A1		W1260	0257	20		27-62-11	ALL
	A2		W1260	0281	20		27-62-11	ALL
	A3		W1260	0265	20		27-62-11	ALL
	B1		W1260	0262	20		27-62-11	ALL
	B2		W1260	0292	20		27-62-11	ALL
	B3		W1260	0263	20		27-62-11	ALL
	X1		W1260	0268	20		27-62-11	ALL
	X2		W1260	0266	20		27-62-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03100

Page 5 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03200		P36/ /		RELAY SOCKET (PLATE 'D')				ALL
	A1		W1260	0255	20		27-62-11	ALL
	A2		W1260	0253	20		27-62-11	ALL
	A3		W1260	0254	20		27-62-11	ALL
	B1		W1260	0263	20		27-62-11	ALL
	B2		W1260	0256	20		27-62-11	ALL
	B3		W1260	0262	20		27-62-11	ALL
	X1		W1260	0269	20		27-62-11	ALL
	X2		W1260	0264	20		27-62-11	ALL
D03202		P36/ /		RELAY SOCKET (PLATE 'D')				ALL
	1	UNUSED						ALL
	2		W1260	0291	20		27-62-11	ALL
	3		W1260	0286	20		27-62-11	ALL
	4		W1260	0290	22		27-62-11	001-099
	4		W1260	0290	20		27-62-11	115-199
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1260	0292	20		27-62-11	ALL
	8	UNUSED						ALL
D03204		P010-00/ /		RCPT				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1115	0355	22		27-62-11	ALL
	4		W1115	0354	20		27-62-11	ALL
	5	UNUSED						ALL
	6		W1115	0352	22		27-62-11	ALL
	7	UNUSED						ALL
	8		W1115	0353	22		27-62-11	ALL
	9	UNUSED						ALL
	10		W1115	0351	20		27-62-11	ALL
	11	UNUSED						ALL
	12		W1115	0350	20		27-62-11	ALL
D03206		P037-00/ /		RELAY SOCKET (PLATE 'B')				001-099
D03206		P37/ /		RELAY SOCKET (PLATE 'B')				115-199
	1	UNUSED						ALL
	2		W1270	0367	22		27-62-11	ALL
	3		W1270	0363	20		27-62-11	ALL
	4		W1270	0361	20		27-62-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03200

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03206		P037-00/ /		RELAY SOCKET (PLATE 'B') (continued)				001-099
D03206		P37/ /		RELAY SOCKET (PLATE 'B') (continued)				115-199
	5		W1270	0362	20		27-62-11	ALL
	6	UNUSED						ALL
	7		W1270	0366	20		27-62-11	ALL
	8	UNUSED						ALL
D03208		IRSS230/ /		PLUG				ALL
	1		W2510	2504B	20		27-62-11	ALL
	2		W2510	1005	18		27-62-11	ALL
	3		W2510	2504R	20		27-62-11	ALL
	4		W2510	1003	20		27-62-11	ALL
	5		W2510	1004	20		27-62-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
			W2510	1003Z			27-62-11	ALL
			W2510	1004Z			27-62-11	ALL
			W2510	1005Z			27-62-11	ALL
			W2510	2504Z			27-62-11	ALL
D03210A		E003-04/ /		PLUG				ALL
	A01		W1280	2091R	22		32-09-11	ALL
	A02		W1280	2092R	22		32-09-11	ALL
	A03		W1280	2076R	24		32-61-13	ALL
	A04	UNUSED						ALL
	A05		W1280	0095	22		32-61-21	ALL
	A06		W1280	0206	22		32-09-11	ALL
	A07		W1280	0082	24		32-61-12	001-099
	A07		W1280	0082	24		32-61-11	115-199
	A08		W1280	0204	22		32-09-11	ALL
	A09		W1280	2025R	24		78-36-21	ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12		W1280	0052	24		78-36-21	ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01		W1280	2091B	22		32-09-11	ALL
	B02		W1280	2092B	22		32-09-11	ALL
	B03		W1280	2076B	24		32-61-13	ALL
	B04	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03200

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03210A		E003-04/ /		PLUG (continued)				ALL
	B05		W1280	0094	22		32-61-21	ALL
	B06		W1280	0207	22		32-09-11	ALL
	B07		W1280	0381	22		76-11-21	ALL
	B08		W1280	0202	22		32-09-11	ALL
	B09		W1280	2025B	24		78-36-21	ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						001-009, 115-199
	B12		W1280	0694	22		31-31-61	010-099
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01		W1280	2047R	24		32-61-22	ALL
	C02		W1280	2093R	22		32-09-11	ALL
	C03		W1280	2087R	24		32-61-13	ALL
	C04		W1280	0306	22		32-09-11	ALL
	C05		W1280	0093	22		32-61-21	ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08		W1280	0201	22		32-09-11	ALL
	C09		W1280	2027R	24		78-36-21	001-099
	C09		W1280	2026R	24		78-36-21	115-199
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						001-009, 115-199
	C12		W1280	0693	22		31-31-61	010-099
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01		W1280	2047B	24		32-61-22	ALL
	D02		W1280	2093B	22		32-09-11	ALL
	D03		W1280	2087B	24		32-61-13	ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06		W1280	0239	22		32-61-12	001-099
	D06		W1280	0239	22		32-61-11	115-199
	D07		W1280	0003	22		32-61-11	001-002, 115-199
	D07		W1280	0612	22		32-61-11	003-099
	D08		W1280	0203	22		32-09-11	ALL
	D09		W1280	2027B	24		78-36-21	001-099

HOOKUP LIST

D280N032

91-21-51

Section D03200

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03210A		E003-04/ /		PLUG (continued)				ALL
	D09		W1280	2026B	24		78-36-21	115-199
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01		W1280	2050R	22		32-61-22	ALL
	E02		W1280	2074R	24		32-61-13	ALL
	E03		W1280	2081R	24		32-61-13	ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06		W1280	0238	24		33-24-11	001-099
	E06		W1280	0238	22		33-24-11	115-199
	E07	UNUSED						ALL
	E08		W1280	0205	22		32-09-11	ALL
	E09		W1280	2026R	24		78-36-21	001-099
	E09		W1280	2027R	24		78-36-21	115-199
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12		W1280	0053	24		78-36-21	ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01		W1280	2050B	22		32-61-22	ALL
	F02		W1280	2074B	24		32-61-13	ALL
	F03		W1280	2081B	24		32-61-13	ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06		W1280	0267	22		32-42-11	ALL
	F07	UNUSED						ALL
	F08		W1280	0039	22		32-61-12	ALL
	F09		W1280	2026B	24		78-36-21	001-099
	F09		W1280	2027B	24		78-36-21	115-199
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03200

Page 4

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03210A		E003-04/ /		PLUG (continued)				ALL
	G01		W1280	2049R	22		32-61-22	ALL
	G02		W1280	0087	24		32-61-12	001-099
	G02		W1280	0087	22		32-61-12	115-199
	G03		W1280	2075R	24		32-61-13	ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09		W1280	2028R	24		78-36-21	ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01		W1280	2049B	22		32-61-22	ALL
	H02		W1280	0086	24		32-61-12	ALL
	H03		W1280	2075B	24		32-61-13	ALL
	H04	UNUSED						ALL
	H05		W1280	0346	22		32-09-11	ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09		W1280	2028B	24		78-36-21	ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01		W1280	2048R	24		32-61-22	ALL
	J02		W1280	2084R	24		32-61-13	ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07		W1280	0208	22		32-61-11	ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03200

Page 5

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03210A		E003-04/ /		PLUG (continued)				ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14		W1280	0054	24		78-36-21	ALL
	J15	UNUSED						ALL
	K01		W1280	2048B	24		32-61-22	ALL
	K02		W1280	2084B	24		32-61-13	ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06		W1280	0073	24		32-61-12	001-099
	K06		W1280	0073	24		32-61-11	115-199
	K07		W1280	0200	22		32-61-11	ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14		W1280	0055	24		78-36-21	001-099
	K14		W1280	0055	22		78-36-21	115-199
	K15	UNUSED						ALL
D03210B		E003-04/ /		PLUG				ALL
	A01		W1280	2019R	24		52-71-21	ALL
	A02		W1280	2016R	24		52-71-21	ALL
	A03		W1280	2100R	24		52-71-11	001-099
	A03		W1280	2013R	24		52-71-11	115-199
	A04	UNUSED						ALL
	A05		W1280	0046	24		52-71-21	ALL
	A06		W1280	0025	24		52-71-11	ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10		W1280	2052R	22		78-34-11	ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14		W1280	0150	22		78-34-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03200

Page 6

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03210B		E003-04/ /		PLUG (continued)				ALL
	A15	UNUSED						ALL
	B01		W1280	2019B	24		52-71-21	ALL
	B02		W1280	2016B	24		52-71-21	ALL
	B03		W1280	2100B	24		52-71-11	001-099
	B03		W1280	2013B	24		52-71-11	115-199
	B04	UNUSED						ALL
	B05		W1280	0027	24		52-71-11	ALL
	B06		W1280	0026	24		52-71-11	ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10		W1280	2052B	22		78-34-11	ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14		W1280	0149	22		78-34-11	ALL
	B15	UNUSED						ALL
	C01		W1280	2009R	24		52-71-11	ALL
	C02		W1280	2104R	24		52-71-21	001-099
	C02		W1280	2017R	24		52-71-21	115-199
	C03		W1280	2014R	24		52-71-11	ALL
	C04	UNUSED						ALL
	C05		W1280	0028	24		52-71-11	ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10		W1280	2051R	22		78-34-11	ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01		W1280	2009B	24		52-71-11	ALL
	D02		W1280	2104B	24		52-71-21	001-099
	D02		W1280	2017B	24		52-71-21	115-199
	D03		W1280	2014B	24		52-71-11	ALL
	D04		W1280	0199	22		52-71-21	001-099
	D04	UNUSED						115-199
	D05		W1280	0047	24		52-71-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03200

Page 7

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03210B		E003-04/ /		PLUG (continued)				ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10		W1280	2051B	22		78-34-11	ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01		W1280	2011R	24		52-71-11	ALL
	E02		W1280	2018R	24		52-71-21	ALL
	E03	UNUSED						001-099
	E03		W1280	2002R	24		52-71-21	115-199
	E04	UNUSED						001-099
	E04		W1280	0199	22		52-71-21	115-199
	E05		W1280	0042	24		52-71-21	ALL
	E06	UNUSED						001-099
	E06		W1280	0354	24		52-71-21	115-199
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01		W1280	2011B	24		52-71-11	ALL
	F02		W1280	2018B	24		52-71-21	ALL
	F03	UNUSED						001-099
	F03		W1280	2002B	24		52-71-21	115-199
	F04	UNUSED						ALL
	F05		W1280	0043	24		52-71-21	ALL
	F06		W1280	0011	24		52-71-11	ALL
	F07	UNUSED						001-099
	F07		W1280	0199	22		52-71-21	115-199
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03200

Page 8

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03210B		E003-04/ /		PLUG (continued)				ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01		W1280	2020R	24		52-71-21	ALL
	G02		W1280	2010R	24		52-71-11	ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05		W1280	0044	24		52-71-21	ALL
	G06		W1280	0012	24		52-71-11	ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01		W1280	2020B	24		52-71-21	ALL
	H02		W1280	2010B	24		52-71-11	ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05		W1280	0045	24		52-71-21	ALL
	H06		W1280	0013	24		52-71-11	ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12		W1280	0147	22		78-34-11	ALL
	H13	UNUSED						001-009, 115-199
	H13		W1280	0695	22		31-31-61	010-099
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01		W1280	2015R	24		52-71-21	ALL
	J02		W1280	2012R	24		52-71-11	ALL
	J03	UNUSED						ALL
	J04		W1280	0199	22		52-71-21	001-099

HOOKUP LIST

D280N032

91-21-51

Section D03200

Page 9

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03210B		E003-04/ /		PLUG (continued)				ALL
	J04	UNUSED						115-199
	J05		W1280	0023	24		52-71-11	ALL
	J06		W1280	0014	24		52-71-11	ALL
	J07	UNUSED						ALL
	J08		W1280	0029	22		52-71-11	ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						001-009, 115-199
	J13		W1280	0696	22		31-31-61	010-099
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01		W1280	2015B	24		52-71-21	ALL
	K02		W1280	2012B	24		52-71-11	ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05		W1280	0024	24		52-71-11	ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08		W1280	0015	22		52-71-11	ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
D03210C		E003-04/ /		PLUG				001-099
	1	UNUSED						001-099
	2	UNUSED						001-099
	3	UNUSED						001-099
	4	UNUSED						001-099
	5	UNUSED						001-099
	6	UNUSED						001-099
	7	UNUSED						001-099
	8	UNUSED						001-099
	9	UNUSED						001-099
	10	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D03200

Page 10

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03210C		E003-04/ /		PLUG (continued)				001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
	13	UNUSED						001-099
	= C12	UNUSED						001-099
	= C13	UNUSED						001-099
D03210D		E003-04/ /		PLUG				ALL
	A01		W1280	2001B	22		52-34-11	ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05		W1280	2005R	24		52-35-11	ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10		W1280	2054R	22		78-34-21	ALL
	A11	UNUSED						ALL
	A12		W1280	0198	22		32-09-11	001-099
	A12		W1280	0198	22		32-01-11	115-199
	A13	UNUSED						ALL
	A14		W1280	0155	22		78-34-21	ALL
	A15	UNUSED						ALL
	B01		W1280	2001R	22		52-34-11	ALL
	B02	UNUSED						ALL
	B03		W1280	0005	22		52-34-11	ALL
	B04	UNUSED						ALL
	B05		W1280	2005B	24		52-35-11	ALL
	B06	UNUSED						ALL
	B07		W1280	0009	22		52-35-11	ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10		W1280	2054B	22		78-34-21	ALL
	B11	UNUSED						ALL
	B12		W1280	0196	22		32-09-11	001-099
	B12		W1280	0196	22		32-01-11	115-199
	B13	UNUSED						ALL
	B14		W1280	0154	22		78-34-21	ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03200

Page 11

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03210D		E003-04/ /		PLUG (continued)				ALL
	C02	UNUSED						ALL
	C03		W1280	0004	22		52-34-11	ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07		W1280	0010	22		52-35-11	ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10		W1280	2053R	22		78-34-21	ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10		W1280	2053B	22		78-34-21	ALL
	D11	UNUSED						ALL
	D12		W1280	0197	22		32-09-11	001-099
	D12		W1280	0197	22		32-01-11	115-199
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01		W1280	2003R	22		52-34-11	ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05		W1280	2007R	24		52-35-11	ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03200

Page 12

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03210D		E003-04/ /		PLUG (continued)				ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01		W1280	2003B	22		52-34-11	ALL
	F02	UNUSED						ALL
	F03	UNUSED						ALL
	F04	UNUSED						ALL
	F05		W1280	2007B	24		52-35-11	ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03200

Page 13

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03210D		E003-04/ /		PLUG (continued)				ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13		W1280	0152	22		78-34-21	ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03		W1280	0006	22		52-34-11	ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						001-009, 115-199
	J12		W1280	0692	22		31-31-61	010-099
	J13	UNUSED						ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03		W1280	0319	22		52-34-11	ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						001-009, 115-199
	K12		W1280	0691	22		31-31-61	010-099
	K13	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03200

Page 14

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03210D		E003-04/ /		PLUG (continued)				ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
D03210E		E003-04/ /		PLUG				ALL
	A01		W1280	2037R	24		32-61-13	ALL
	A02		W1280	2044R	24		32-61-22	ALL
	A03		W1280	2046R	22		32-61-22	ALL
	A04		W1280	0347	22		32-09-12	001-002
	A04	UNUSED						003-099, 115-199
	A05		W1280	0092	22		32-61-21	ALL
	A06	UNUSED						001-002
	A06		W1280	0347	22		32-09-12	003-099, 115-199
	A07		W1280	0050	24		32-61-12	ALL
	A08	UNUSED						ALL
	A09		W1280	2021R	24		78-36-11	ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12		W1280	0048	24		78-36-11	ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01		W1280	2037B	24		32-61-13	ALL
	B02		W1280	2044B	24		32-61-22	ALL
	B03		W1280	2046B	22		32-61-22	ALL
	B04	UNUSED						ALL
	B05		W1280	0091	22		32-61-21	ALL
	B06	UNUSED						ALL
	B07		W1280	0382	22		76-11-21	001-099
	B07		W1280	0380	22		76-11-21	115-199
	B08	UNUSED						ALL
	B09		W1280	2021B	24		78-36-11	ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						001-009, 115-199
	B12		W1280	0697	22		31-31-61	010-099
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01		W1280	2043R	24		32-61-22	ALL
	C02		W1280	2096R	22		32-09-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03200

Page 15

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03210E		E003-04/ /		PLUG (continued)				ALL
	C03		W1280	2094R	22		32-09-12	ALL
	C04	UNUSED						ALL
	C05		W1280	0090	22		32-61-21	ALL
	C06		W1280	0041	22		32-61-12	ALL
	C07	UNUSED						ALL
	C08		W1280	0211	22		32-09-12	ALL
	C09		W1280	2023R	24		78-36-11	001-099
	C09		W1280	2022R	24		78-36-11	115-199
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						001-009, 115-199
	C12		W1280	0698	22		31-31-61	010-099
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01		W1280	2043B	24		32-61-22	ALL
	D02		W1280	2096B	22		32-09-12	ALL
	D03		W1280	2094B	22		32-09-12	ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08		W1280	0212	22		32-09-12	ALL
	D09		W1280	2023B	24		78-36-11	001-099
	D09		W1280	2022B	24		78-36-11	115-199
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01		W1280	2095R	22		32-09-12	ALL
	E02		W1280	2041R	24		32-61-13	ALL
	E03		W1280	2039R	24		32-61-13	ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06		W1280	0349	22		32-09-12	ALL
	E07	UNUSED						ALL
	E08		W1280	0215	22		32-09-12	ALL
	E09		W1280	2022R	24		78-36-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D03200

Page 16

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03210E		E003-04/ /		PLUG (continued)				ALL
	E09		W1280	2023R	24		78-36-11	115-199
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12		W1280	0049	24		78-36-11	ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01		W1280	2095B	22		32-09-12	ALL
	F02		W1280	2041B	24		32-61-13	ALL
	F03		W1280	2039B	24		32-61-13	ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06		W1280	0340	24		32-61-12	ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09		W1280	2022B	24		78-36-11	001-099
	F09		W1280	2023B	24		78-36-11	115-199
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01		W1280	2038R	24		32-61-13	ALL
	G02		W1280	2040R	24		32-61-13	ALL
	G03		W1280	0085	22		32-61-12	ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06		W1280	0214	22		32-09-12	ALL
	G07	UNUSED						ALL
	G08		W1280	0213	22		32-09-12	ALL
	G09		W1280	2024R	24		78-36-11	ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01		W1280	2038B	24		32-61-13	ALL
	H02		W1280	2040B	24		32-61-13	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03200

Page 17

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03210E		E003-04/ /		PLUG (continued)				ALL
	H03		W1280	0311	22		32-09-12	ALL
	H04	UNUSED						ALL
	H05	UNUSED						001-099
	H05		W1280	0324	24		31-31-31	115-199
	H06		W1280	0217	22		32-09-12	ALL
	H07	UNUSED						ALL
	H08		W1280	0210	22		32-09-12	ALL
	H09		W1280	2024B	24		78-36-11	ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01		W1280	2042R	24		32-61-13	ALL
	J02		W1280	2045R	22		32-61-22	ALL
	J03		W1280	0088	24		32-61-12	ALL
	J04	UNUSED						ALL
	J05		W1280	0084	22		32-61-12	ALL
	J06	UNUSED						ALL
	J07		W1280	0148	22		32-61-11	ALL
	J08	UNUSED						001-099
	J08		W1280	0325	24		31-31-31	115-199
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13	UNUSED						ALL
	J14		W1280	0056	24		78-36-11	ALL
	J15	UNUSED						ALL
	K01		W1280	2042B	24		32-61-13	ALL
	K02		W1280	2045B	22		32-61-22	ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05		W1280	0348	22		32-09-12	ALL
	K06		W1280	0266	22		32-42-11	ALL
	K07		W1280	0209	22		32-61-11	ALL
	K08		W1280	0001	24		33-42-11	001-099
	K08		W1280	0001	22		33-42-11	115-199
	K09	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03200

Page 18

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03210E		E003-04/ /		PLUG (continued)				ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13	UNUSED						ALL
	K14		W1280	0057	24		78-36-11	001-099
	K14		W1280	0057	22		78-36-11	115-199
	K15	UNUSED						ALL
D03210F		E003-04/ /		PLUG				001-099
	1	UNUSED						001-099
	2	UNUSED						001-099
	3	UNUSED						001-099
	4	UNUSED						001-099
	5	UNUSED						001-099
	6	UNUSED						001-099
	7	UNUSED						001-099
	8	UNUSED						001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
	13	UNUSED						001-099
	= C12	UNUSED						001-099
	= C13	UNUSED						001-099
D03212		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D03212		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	A1		W1270	0098	22		30-32-11	001-099
	A1		W1270	5953	22		30-32-11	001-099
	A1		W1270	5952	22		30-32-11	115-199
	A2		W1270	0484	22		30-32-11	001-099
	A2		W1270	5955	22		30-32-11	001-099
	A2		W1270	5954	22		30-32-11	ALL
	A3	UNUSED						ALL
	B1		W1270	0840	24		30-33-11	001-099
	B1		W1270	5767	24		30-33-11	001-099
	B1		W1270	5818	24		30-33-11	ALL
	B2		W1270	0842	24		30-33-11	001-099
	B2		W1270	5817	24		30-33-11	ALL
	B3		W1270	5769	24		30-33-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03200

Page 19

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03212		P037-00/ /		RELAY SOCKET (PLATE 'A') (continued)				001-099
D03212		P37/ /		RELAY SOCKET (PLATE 'A') (continued)				115-199
	C1		W1270	5753	24		30-31-12	ALL
	C2		W1270	0847	24		30-31-12	001-099
	C2		W1270	5752	24		30-31-12	ALL
	C3	UNUSED						ALL
	D1		W1270	5778	20		30-33-11	001-099
	D1		W1270	5779	20		30-33-11	ALL
	D2		W1270	5775	20		30-33-11	001-099
	D2		W1270	5776	20		30-33-11	001-099
	D2		W1270	5777	20		30-33-11	115-199
	D3	UNUSED						ALL
	X1		W1270	5950	24		30-32-11	ALL
	X2		W1270	5951	24		30-32-11	ALL
D03220		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D03220		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	1	UNUSED						ALL
	2		W1270	5893	22		32-61-12	ALL
	3		W1270	5894	22		32-61-12	ALL
	4	UNUSED						ALL
	5		W1270	5895	22		32-61-12	ALL
	6	UNUSED						ALL
	7		W1270	5892	22		32-61-12	ALL
	8	UNUSED						ALL
D03222		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D03222		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	1	UNUSED						ALL
	2		W1270	5905	22		32-61-12	ALL
	3		W1270	5901	22		32-61-12	ALL
	4	UNUSED						ALL
	5		W1270	5900	22		32-61-12	ALL
	6	UNUSED						ALL
	7		W1270	5904	22		32-61-12	ALL
	8	UNUSED						ALL
D03230		P36/ /		PLUG (PLATE 'E')				ALL
	1		W1260	0132	24		21-33-12	ALL
	2		W1260	0131	24		21-33-12	ALL
	3	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03200

Page 20

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03230		P36/ /		PLUG (PLATE 'E') (continued)				ALL
	4		W1260	0123	24		21-33-12	ALL
	5	UNUSED						ALL
D03232		P008-00/ /		PLUG				ALL
	1		W4228	0058	22		26-11-12	001-099
	1		W4228	0058	22		26-12-11	115-199
	2		W4228	0061	22		26-21-11	ALL
	3		W4228	0092	22		33-16-61	ALL
	4		W4228	0080	22		33-16-51	ALL
	5	UNUSED						ALL
D03234		P008-00/ /		PLUG				ALL
	1		W4236	0045	22		26-11-22	ALL
	2		W4236	0062	22		26-21-11	ALL
	3		W4236	0074	22		33-16-51	ALL
	4		W4236	0073	22		33-16-51	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D03242		P36/ /		RELAY SOCKET (PLATE 'D')				ALL
	A1		W1260	0589	16		29-21-31	ALL
	A2		W1260	0588	16		29-21-31	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1260	0590	22		29-21-31	001-099
	X1		W1260	0590	18		29-21-31	115-199
	X2		W1260	0591	20		29-21-31	001-099
	X2		W1260	0591	18		29-21-31	115-199
D03244		P33/ /		RELAY SOCKET				ALL
	A1		W1230	0212	16		29-21-31	ALL
	A2		W1230	0211	16		29-21-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03200

Page 21

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03244		P33/ /		RELAY SOCKET (continued)				ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1230	0213	22		29-21-31	001-099
	X1		W1230	0213	18		29-21-31	115-199
	X2		W1230	0214	22		29-21-31	001-099
	X2		W1230	0214	18		29-21-31	115-199
D03248		1180/185/R050		PLUG-				ALL
	1		W2516	1001	18		29-21-31	ALL
	2	UNUSED						ALL
	3		W2516	0069	18		29-21-31	ALL
	4		W2516	0064	18		29-21-31	ALL
	5		W2516	1002	18		29-21-31	ALL
	6		W2516	0065	18		29-21-31	ALL
	7	UNUSED						ALL
D03252		1180/150/R50		PLUG-				ALL
	1		W2516	0070	18		29-21-31	ALL
	2		W2516	2506B	20		29-21-31	ALL
	3		W2516	1011	20		29-21-31	ALL
	4		W2516	2506R	20		29-21-31	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W2516	0068	18		29-21-31	ALL
	10		W2516	1012	20		29-21-31	ALL
D03254		1235/147/R35		PLUG-				ALL
	1		W2516	2501B	20		29-21-31	ALL
	2		W2516	2501R	20		29-21-31	ALL
	3		W2516	2501Z			29-21-31	ALL
	4		W2516	0087	18		29-21-31	ALL
	5		W2516	0086	20		29-21-31	ALL
	6		W2516	0085	20		29-21-31	ALL
	7		W2516	1005	20		29-21-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03200

Page 22

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03258A		E005-03/ /		PLUG-				001-099
D03258A		E5-3/ /		PLUG-				115-199
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06		W1286	4009R	24		27-51-61	ALL
	A07		W1286	4009B	24		27-51-61	ALL
	A08		W1286	0035	24		27-58-31	001-099
	A08		W1286	0035	22		27-58-31	115-199
	A09		W1286	0187	24		27-51-61	ALL
	A10		W1286	0202	24		27-51-61	ALL
	A11		W1286	0035	24		27-58-31	001-099
	A11		W1286	0035	22		27-58-31	115-199
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06		W1286	4009Y	24		27-51-61	ALL
	B07		W1286	4009G	24		27-51-61	ALL
	B08		W1286	0036	24		27-58-31	001-099
	B08		W1286	0036	22		27-58-31	115-199
	B09		W1286	0188	24		27-51-61	ALL
	B10		W1286	0195	24		27-51-61	ALL
	B11		W1286	0036	24		27-58-31	001-099
	B11		W1286	0036	22		27-58-31	115-199
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03200

Page 23

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03258A		E005-03/ /		PLUG- (continued)				001-099
D03258A		E5-3/ /		PLUG- (continued)				115-199
	C06		W1286	4010R	24		27-51-61	ALL
	C07		W1286	4010B	24		27-51-61	ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10		W1286	0196	24		27-51-61	ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03		W1286	0191	24		27-51-61	ALL
	D04		W1286	0189	22		27-51-61	ALL
	D05	UNUSED						ALL
	D06		W1286	4010Y	24		27-51-61	ALL
	D07		W1286	4010G	24		27-51-61	ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10		W1286	0197	24		27-51-61	ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06		W1286	4008R	24		27-51-61	ALL
	E07		W1286	4008B	24		27-51-61	ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10		W1286	0198	24		27-51-61	ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03200

Page 24

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03258A		E005-03/ /		PLUG- (continued)				001-099
D03258A		E5-3/ /		PLUG- (continued)				115-199
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03		W1286	0192	24		27-51-61	ALL
	F04		W1286	0194	22		27-51-61	ALL
	F05	UNUSED						ALL
	F06		W1286	4008Y	24		27-51-61	ALL
	F07		W1286	4008G	24		27-51-61	ALL
	F08	UNUSED						ALL
	F09		W1286	0110	24		27-32-11	ALL
	F10		W1286	0199	24		27-51-61	ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06		W1286	4007B	24		27-51-61	ALL
	G07		W1286	4007R	24		27-51-61	ALL
	G08	UNUSED						ALL
	G09		W1286	0259	22		27-81-31	ALL
	G10		W1286	0200	24		27-51-61	ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03		W1286	0190	24		27-51-61	ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06		W1286	4007Y	24		27-51-61	ALL
	H07		W1286	4007G	24		27-51-61	ALL
	H08	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03200

Page 25

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03258A		E005-03/ /		PLUG- (continued)				001-099
D03258A		E5-3/ /		PLUG- (continued)				115-199
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08		W1286	0034	24		27-58-31	001-099
	J08		W1286	0034	22		27-58-31	115-199
	J09	UNUSED						ALL
	J10		W1286	0034	24		27-58-31	001-099
	J10		W1286	0034	22		27-58-31	115-199
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13		W1286	5001R	24		27-58-31	ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09		W1286	0201	24		27-51-61	ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13		W1286	5001B	24		27-58-31	ALL
	K14	UNUSED						ALL
	K15		W1286	0037	22		27-58-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03200

Page 26

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03258B		E005-03/ /		PLUG-				001-099
D03258B		E5-3/ /		PLUG-				115-199
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03		W1286	2022R	24		27-51-61	ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06		W1286	0245	24		27-51-61	ALL
	A07	UNUSED						ALL
	A08		W1286	0013	22		22-24-11	ALL
	A09	UNUSED						ALL
	A10		W1286	0107	24		27-32-11	ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03		W1286	2022B	24		27-51-61	ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06		W1286	0246	24		27-51-61	ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03		W1286	2025R	24		27-51-61	ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06		W1286	0250	24		27-51-61	ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03200

Page 27

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03258B		E005-03/ /		PLUG- (continued)				001-099
D03258B		E5-3/ /		PLUG- (continued)				115-199
	C10		W1286	0019	22		74-31-21	ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13		W1286	2006R	24		27-32-11	ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03		W1286	2025B	24		27-51-61	ALL
	D04	UNUSED						ALL
	D05		W1286	0029	22		27-81-21	ALL
	D06		W1286	0249	24		27-51-61	ALL
	D07	UNUSED						ALL
	D08		W1286	0010	24		33-24-11	001-099
	D08		W1286	0010	22		33-24-11	115-199
	D09	UNUSED						ALL
	D10		W1286	0260	22		74-31-11	ALL
	D11		W1286	0262	24		27-58-31	ALL
	D12	UNUSED						ALL
	D13		W1286	2006B	24		27-32-11	ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03		W1286	2023R	24		27-51-61	ALL
	E04	UNUSED						ALL
	E05		W1286	0030	22		27-81-21	ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08		W1286	0267	24		31-51-41	ALL
	E09	UNUSED						ALL
	E10		W1286	0106	24		27-32-11	ALL
	E11		W1286	0252	24		27-58-31	ALL
	E12	UNUSED						ALL
	E13		W1286	0011	22		22-12-31	ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03200

Page 28

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03258B		E005-03/ /		PLUG- (continued)				001-099
D03258B		E5-3/ /		PLUG- (continued)				115-199
	F03		W1286	2023B	24		27-51-61	ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13		W1286	0012	22		22-12-31	ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03		W1286	2024R	24		27-51-61	ALL
	G04	UNUSED						ALL
	G05		W1286	0025	24		27-81-21	ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10		W1286	0268	24		31-51-41	ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03		W1286	2024B	24		27-51-61	ALL
	H04	UNUSED						ALL
	H05		W1286	0205	24		27-58-11	ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08		W1286	0001	22		76-11-21	ALL
	H09	UNUSED						ALL
	H10		W1286	0115	24		27-32-11	ALL
	H11	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03200

Page 29

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03258B		E005-03/ /		PLUG- (continued)				001-099
D03258B		E5-3/ /		PLUG- (continued)				115-199
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05		W1286	0247	24		27-51-61	ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13		W1286	5002R	24		27-58-31	ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05		W1286	0248	24		27-51-61	ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13		W1286	5002B	24		27-58-31	ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
D03258C		E005-03/ /		PLUG-				001-099
D03258C		E5-3/ /		PLUG-				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03200

Page 30

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03258C		E005-03/ /		PLUG- (continued)				001-099
D03258C		E5-3/ /		PLUG- (continued)				115-199
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W1286	0193	12		27-51-61	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	=C12	UNUSED						ALL
	=C13	UNUSED						ALL
D03260A		E5-2/ /		PLUG-				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06		W1284	4001R	24		27-51-11	ALL
	A07		W1284	4001B	24		27-51-11	ALL
	A08	UNUSED						ALL
	A09		W1284	0101	24		27-51-11	ALL
	A10		W1284	0110	24		27-51-11	ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06		W1284	4001Y	24		27-51-11	ALL
	B07		W1284	4001G	24		27-51-11	ALL
	B08		W1284	0163	24		27-58-31	001-099
	B08		W1284	0163	22		27-58-31	115-199

HOOKUP LIST

D280N032

91-21-51

Section D03200

Page 31

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03260A		E5-2/ /		PLUG- (continued)				ALL
	B09		W1284	0102	24		27-51-11	ALL
	B10		W1284	0103	24		27-51-11	ALL
	B11		W1284	0163	24		27-58-31	001-099
	B11		W1284	0163	22		27-58-31	115-199
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10		W1284	0104	24		27-51-11	ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03		W1284	0118	24		27-81-11	ALL
	D04		W1284	0196	22		27-81-11	ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10		W1284	0105	24		27-51-11	ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03200

Page 32

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03260A		E5-2/ /		PLUG- (continued)				ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06		W1284	4002R	24		27-81-11	ALL
	E07		W1284	4002B	24		27-81-11	ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10		W1284	0106	24		27-51-11	ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03		W1284	0120	24		27-81-11	ALL
	F04		W1284	0194	22		27-81-11	ALL
	F05	UNUSED						ALL
	F06		W1284	4002Y	24		27-81-11	ALL
	F07		W1284	4002G	24		27-81-11	ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10		W1284	0107	24		27-51-11	ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10		W1284	0108	24		27-51-11	ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03200

Page 33

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03260A		E5-2/ /		PLUG- (continued)				ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03		W1284	0119	24		27-81-11	ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08	UNUSED						ALL
	H09	UNUSED						ALL
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13		W1284	5022R	24		27-58-31	ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03200

Page 34

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03260A		E5-2/ /		PLUG- (continued)				ALL
	K08		W1284	0164	24		27-58-31	001-099
	K08		W1284	0164	22		27-58-31	115-199
	K09	UNUSED						001-099
	K09		W1284	0109	24		27-51-11	115-199
	K10		W1284	0164	24		27-58-31	001-099
	K10		W1284	0164	22		27-58-31	115-199
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13		W1284	5022B	24		27-58-31	ALL
	K14	UNUSED						ALL
	K15		W1284	0165	22		27-58-31	ALL
D03260B		E5-2/ /		PLUG-				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03		W1284	2001R	24		27-51-11	ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08		W1284	0012	22		22-24-21	ALL
	A09	UNUSED						ALL
	A10		W1284	0210	24		21-25-11	ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03		W1284	2001B	24		27-51-11	ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03200

Page 35

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03260B		E5-2/ /		PLUG- (continued)				ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08		W1284	0023	22		27-41-21	ALL
	C09	UNUSED						ALL
	C10		W1284	0253	22		74-31-21	001-099
	C10		W1284	0013	22		74-31-21	115-199
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						001-099
	C13		W1284	2003R	24		27-32-21	115-199
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11		W1284	0158	24		27-58-31	ALL
	D12	UNUSED						ALL
	D13	UNUSED						001-099
	D13		W1284	2003B	24		27-32-21	115-199
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03		W1284	2002R	24		27-81-11	ALL
	E04	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03200

Page 36

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03260B		E5-2/ /		PLUG- (continued)				ALL
	E05	UNUSED						ALL
	E06	UNUSED						ALL
	E07	UNUSED						ALL
	E08	UNUSED						ALL
	E09	UNUSED						ALL
	E10	UNUSED						001-099
	E10		W1284	0113	24		27-32-21	115-199
	E11		W1284	0159	24		27-58-31	ALL
	E12	UNUSED						ALL
	E13		W1284	0021	22		22-12-21	ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03		W1284	2002B	24		27-81-11	ALL
	F04	UNUSED						ALL
	F05	UNUSED						ALL
	F06		W1284	0100	24		27-51-11	ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13		W1284	0022	22		22-12-21	ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06		W1284	0099	24		27-51-11	ALL
	G07	UNUSED						ALL
	G08	UNUSED						ALL
	G09	UNUSED						ALL
	G10	UNUSED						ALL
	G11		W1284	0156	24		27-58-31	ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03200

Page 37

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03260B		E5-2/ /		PLUG- (continued)				ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03	UNUSED						ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06		W1284	0122	24		27-81-11	ALL
	H07	UNUSED						ALL
	H08		W1284	0255	22		76-11-21	001-099
	H08		W1284	0014	22		76-11-21	115-199
	H09	UNUSED						ALL
	H10	UNUSED						001-099
	H10		W1284	0117	24		27-32-21	115-199
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06		W1284	0121	24		27-81-11	ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13		W1284	5021R	24		27-58-31	ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03200

Page 38

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03260B		E5-2/ /		PLUG- (continued)				ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13		W1284	5021B	24		27-58-31	ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
D03260C		E5-2/ /		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W1284	0195	12		27-81-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	=C12	UNUSED						ALL
	=C13	UNUSED						ALL
D03262		P034-00/ /		PLUG				001-099
D03262		P34/ /		PLUG				115-199
	1		W1240	0426	24		33-24-11	001-099
	1		W1242	0026	22		33-24-11	115-199
	2		W1240	0425	24		33-24-11	001-099
	2		W1242	0025	22		33-24-11	115-199
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D03270		231/260/R040		PLUG				ALL
	=1		W2314	A-AA			30-41-12	ALL

HOOKUP LIST
D280N032

91-21-51
Section D03200
Page 39
Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03272		231/270/R040		PLUG				ALL
	=1		W2314	A-AB			30-41-12	ALL
D03274		231/260/R040		PLUG				ALL
	=1		W2314	A-AC			30-41-12	ALL
D03276		231/270/R040		PLUG				ALL
	A		W2314	A-BA			30-41-12	ALL
	B		W2314	A-BB			30-41-12	ALL
D03278		231/270/R040		PLUG				ALL
	A		W2314	A-CA			30-41-12	ALL
	B		W2314	A-CB			30-41-12	ALL
D03280		231/250/R040		PLUG				ALL
	C		W2316	A-CA			30-41-11	ALL
	D		W2316	A-CB			30-41-11	ALL
D03282		231/250/R040		PLUG				ALL
	A		W2316	A-BA			30-41-11	ALL
	B		W2316	A-BB			30-41-11	ALL
D03284		231/250/R040		PLUG				ALL
	A		W2316	A-AA			30-41-11	ALL
	B		W2316	A-AB			30-41-11	ALL
D03286		231/250/R040		PLUG				ALL
	=1		W2318	A-DA			30-41-11	ALL
D03288		231/250/R040		PLUG				ALL
	A		W2318	A-EA			30-41-11	ALL
	B		W2318	A-EB			30-41-11	ALL
D03290		231/250/R040		PLUG				ALL
	A		W2318	A-FA			30-41-11	ALL
	B		W2318	A-FB			30-41-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03200

Page 40 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03300		P33/ /		RELAY SOCKET				ALL
	A1		W1230	0709	22		30-32-11	001-099
	A1		W1232	0098	22		30-32-11	115-199
	A2		W1230	0711	22		30-32-11	001-099
	A2		W1232	0101	22		30-32-11	115-199
	A3	UNUSED						ALL
	B1		W1230	0698	24		30-31-11	001-099
	B1		W1232	0087	24		30-31-11	115-199
	B2		W1230	0697	24		30-31-11	001-099
	B2		W1232	0086	24		30-31-11	115-199
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1230	0706	24		30-32-11	001-099
	X1		W1232	0095	24		30-32-11	115-199
	X2		W1230	0707	24		30-32-11	001-099
	X2		W1232	0096	24		30-32-11	115-199
D03312A		E5-1/ /		PLUG-				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06		W1282	4011R	24		27-51-41	ALL
	A07		W1282	4011B	24		27-51-41	ALL
	A08		W1282	0036	24		27-58-31	001-099
	A08		W1282	0036	22		27-58-31	115-199
	A09		W1282	0175	22		27-51-21	ALL
	A10	UNUSED						ALL
	A11		W1282	0036	24		27-58-31	001-099
	A11		W1282	0036	22		27-58-31	115-199
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03300

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03312A		E5-1/ /		PLUG- (continued)				ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06		W1282	4011Y	24		27-51-41	ALL
	B07		W1282	4011G	24		27-51-41	ALL
	B08	UNUSED						ALL
	B09		W1282	0176	22		27-51-21	ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06		W1282	4008R	24		27-51-41	ALL
	C07		W1282	4008B	24		27-51-41	ALL
	C08	UNUSED						ALL
	C09		W1282	0040	24		27-58-31	ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03		W1282	0181	24		27-51-41	ALL
	D04		W1282	0183	22		27-51-41	ALL
	D05	UNUSED						ALL
	D06		W1282	4008Y	24		27-51-41	ALL
	D07		W1282	4008G	24		27-51-41	ALL
	D08	UNUSED						ALL
	D09		W1282	0236	22		27-51-51	ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03300

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03312A		E5-1/ /		PLUG- (continued)				ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03	UNUSED						ALL
	E04	UNUSED						ALL
	E05	UNUSED						ALL
	E06		W1282	4010R	24		27-51-41	ALL
	E07		W1282	4010B	24		27-51-41	ALL
	E08	UNUSED						ALL
	E09		W1282	0180	24		27-51-31	ALL
	E10	UNUSED						ALL
	E11	UNUSED						ALL
	E12	UNUSED						ALL
	E13	UNUSED						ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03		W1282	0182	24		27-51-41	ALL
	F04		W1282	0184	22		27-51-41	ALL
	F05	UNUSED						ALL
	F06		W1282	4010Y	24		27-51-41	ALL
	F07		W1282	4010G	24		27-51-41	ALL
	F08	UNUSED						ALL
	F09		W1282	0117	24		27-32-21	ALL
	F10	UNUSED						ALL
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13	UNUSED						ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03	UNUSED						ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06		W1282	4009R	24		27-51-41	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03300

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03312A		E5-1/ /		PLUG- (continued)				ALL
	G07		W1282	4009B	24		27-51-41	ALL
	G08	UNUSED						ALL
	G09		W1282	0293	22		27-81-31	ALL
	G10	UNUSED						ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03		W1282	0163	24		27-51-41	ALL
	H04	UNUSED						ALL
	H05	UNUSED						ALL
	H06		W1282	4009Y	24		27-51-41	ALL
	H07		W1282	4009G	24		27-51-41	ALL
	H08		W1282	0035	24		27-58-31	001-099
	H08		W1282	0035	22		27-58-31	115-199
	H09		W1282	0221	24		27-81-21	ALL
	H10		W1282	0035	24		27-58-31	001-099
	H10		W1282	0035	22		27-58-31	115-199
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03	UNUSED						ALL
	J04	UNUSED						ALL
	J05	UNUSED						ALL
	J06		W1282	4007B	24		27-51-41	ALL
	J07		W1282	4007R	24		27-51-41	ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10	UNUSED						ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13		W1282	5004R	24		27-51-51	ALL
	J14	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03300

Page 4

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03312A		E5-1/ /		PLUG- (continued)				ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03	UNUSED						ALL
	K04	UNUSED						ALL
	K05	UNUSED						ALL
	K06		W1282	4007Y	24		27-51-41	ALL
	K07		W1282	4007G	24		27-51-41	ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13		W1282	5004B	24		27-51-51	ALL
	K14	UNUSED						ALL
	K15		W1282	0037	24		27-58-31	001-099
	K15		W1282	0037	22		27-58-31	115-199
	DED		W1282	5004Z			27-51-51	ALL
D03312B		E5-1/ /		PLUG-				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03		W1282	2021R	24		27-51-41	ALL
	A04	UNUSED						ALL
	A05		W1282	0178	22		27-51-31	ALL
	A06		W1282	0251	24		27-51-41	ALL
	A07	UNUSED						ALL
	A08		W1282	0012	22		22-24-11	ALL
	A09	UNUSED						ALL
	A10		W1282	0362	24		27-32-21	ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13		W1282	2001R	24		31-31-51	001-099
	A13		W1282	2001R	24		31-31-31	115-199
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03		W1282	2021B	24		27-51-41	ALL
	B04	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03300

Page 5

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03312B		E5-1/ /		PLUG- (continued)				ALL
	B05		W1282	0177	24		27-51-31	ALL
	B06		W1282	0252	24		27-51-41	ALL
	B07	UNUSED						ALL
	B08		W1282	0134	24		31-51-42	ALL
	B09	UNUSED						ALL
	B10		W1282	0119	24		31-31-61	001-099
	B10		W1282	0119	24		31-31-31	115-199
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13		W1282	2001B	24		31-31-51	001-099
	B13		W1282	2001B	24		31-31-31	115-199
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03		W1282	2017R	24		27-51-41	ALL
	C04	UNUSED						ALL
	C05		W1282	0244	22		27-51-51	ALL
	C06		W1282	0256	24		27-51-41	ALL
	C07	UNUSED						ALL
	C08		W1282	0027	22		27-41-11	ALL
	C09	UNUSED						ALL
	C10		W1282	0351	22		74-31-11	001-099
	C10		W1282	0294	22		74-31-11	115-199
	C11		W1282	0120	24		31-31-61	001-099
	C11		W1282	0120	24		31-31-31	115-199
	C12	UNUSED						ALL
	C13		W1282	2012R	24		22-32-13	ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03		W1282	2017B	24		27-51-41	ALL
	D04	UNUSED						ALL
	D05		W1282	0226	22		27-81-21	ALL
	D06		W1282	0255	24		27-51-41	ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03300

Page 6

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03312B		E5-1/ /		PLUG- (continued)				ALL
	D11		W1282	0042	24		27-58-31	ALL
	D12	UNUSED						ALL
	D13		W1282	2012B	24		22-32-13	ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	E01	UNUSED						ALL
	E02	UNUSED						ALL
	E03		W1282	2019R	24		27-51-41	ALL
	E04	UNUSED						ALL
	E05		W1282	0227	22		27-81-21	ALL
	E06		W1282	0172	22		27-51-21	ALL
	E07	UNUSED						ALL
	E08		W1282	0113	24		31-51-41	ALL
	E09	UNUSED						ALL
	E10		W1282	0368	24		27-32-21	001-099
	E10	UNUSED						115-199
	E11		W1282	0044	24		27-58-31	ALL
	E12	UNUSED						ALL
	E13		W1282	0061	22		22-12-11	ALL
	E14	UNUSED						ALL
	E15	UNUSED						ALL
	F01	UNUSED						ALL
	F02	UNUSED						ALL
	F03		W1282	2019B	24		27-51-41	ALL
	F04	UNUSED						ALL
	F05		W1282	0206	22		27-51-51	ALL
	F06	UNUSED						ALL
	F07	UNUSED						ALL
	F08	UNUSED						ALL
	F09	UNUSED						ALL
	F10		W1282	0121	24		31-31-61	001-099
	F10		W1282	0121	24		31-31-31	115-199
	F11	UNUSED						ALL
	F12	UNUSED						ALL
	F13		W1282	0062	22		22-12-11	ALL
	F14	UNUSED						ALL
	F15	UNUSED						ALL
	G01	UNUSED						ALL
	G02	UNUSED						ALL
	G03		W1282	2018R	24		27-51-41	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03300

Page 7

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03312B		E5-1/ /		PLUG- (continued)				ALL
	G04	UNUSED						ALL
	G05	UNUSED						ALL
	G06	UNUSED						ALL
	G07	UNUSED						ALL
	G08		W1282	0114	24		31-51-42	ALL
	G09	UNUSED						ALL
	G10		W1282	0280	24		31-51-41	ALL
	G11	UNUSED						ALL
	G12	UNUSED						ALL
	G13		W1282	2040R	24		27-32-21	001-099 115-199
	G13	UNUSED						ALL
	G14	UNUSED						ALL
	G15	UNUSED						ALL
	H01	UNUSED						ALL
	H02	UNUSED						ALL
	H03		W1282	2018B	24		27-51-41	ALL
	H04	UNUSED						ALL
	H05		W1282	0204	24		27-58-11	ALL
	H06	UNUSED						ALL
	H07	UNUSED						ALL
	H08		W1282	0153	22		34-46-12	ALL
	H09	UNUSED						ALL
	H10		W1282	0365	24		27-32-21	001-099 115-199
	H10	UNUSED						ALL
	H11	UNUSED						ALL
	H12	UNUSED						ALL
	H13		W1282	2040B	24		27-32-21	001-099 115-199
	H13	UNUSED						ALL
	H14	UNUSED						ALL
	H15	UNUSED						ALL
	J01	UNUSED						ALL
	J02	UNUSED						ALL
	J03		W1282	2020R	24		27-51-41	ALL
	J04	UNUSED						ALL
	J05		W1282	0253	24		27-51-41	ALL
	J06	UNUSED						ALL
	J07	UNUSED						ALL
	J08	UNUSED						ALL
	J09	UNUSED						ALL
	J10		W1282	0118	24		31-31-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03300

Page 8

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03312B		E5-1/ /		PLUG- (continued)				ALL
	J11	UNUSED						ALL
	J12	UNUSED						ALL
	J13		W1282	5011R	24		27-58-31	ALL
	J14	UNUSED						ALL
	J15	UNUSED						ALL
	K01	UNUSED						ALL
	K02	UNUSED						ALL
	K03		W1282	2020B	24		27-51-41	ALL
	K04	UNUSED						ALL
	K05		W1282	0254	24		27-51-41	ALL
	K06	UNUSED						ALL
	K07	UNUSED						ALL
	K08	UNUSED						ALL
	K09	UNUSED						ALL
	K10	UNUSED						ALL
	K11	UNUSED						ALL
	K12	UNUSED						ALL
	K13		W1282	5011B	24		27-58-31	ALL
	K14	UNUSED						ALL
	K15	UNUSED						ALL
	CAP	Y	W1282	0389	22		34-45-01	001-002, 115-199
D03312C		E5-1/ /		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W1282	0162	12		27-51-41	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	= C12	UNUSED						ALL
	= C13	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03300

Page 9

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03314		903/164/L17		PLUG				ALL
	1		W2406	1024	20		21-61-51	ALL
	2		W2406	0078	20		21-61-51	ALL
	3		W2406	1023	20		21-61-51	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D03322		231/230/L050		PLUG				ALL
	= 1		W2304	A-AA			30-41-11	ALL
D03324		231/230/L050		PLUG				ALL
	= 1		W2304	A-AB			30-41-11	ALL
D03326		231/230/L050		PLUG				ALL
	= 1		W2304	A-AC			30-41-11	ALL
D03328		231/230/L050		PLUG				ALL
	A		W2304	A-BA			30-41-11	ALL
	B		W2304	A-BB			30-41-11	ALL
D03330		231/230/L050		PLUG				ALL
	A		W2304	A-CA			30-41-11	ALL
	B		W2304	A-CB			30-41-11	ALL
D03332		231/250/L040		PLUG				ALL
	C		W2306	A-CA			30-41-12	ALL
	D		W2306	A-CB			30-41-12	ALL
D03334		231/235/L040		PLUG				ALL
	A		W2306	A-BA			30-41-12	ALL
	B		W2306	A-BB			30-41-12	ALL
D03336		231/235/L040		PLUG				ALL
	A		W2306	A-AA			30-41-12	ALL
	B		W2306	A-AB			30-41-12	ALL
D03338		255/230/L40		PLUG				ALL
	= 1		W2308	A-DA			30-41-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03300

Page 10

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03340		255/230/L40		PLUG				ALL
	A		W2308	A-EA			30-41-12	ALL
	B		W2308	A-EB			30-41-12	ALL
D03342		255/230/L40		PLUG				ALL
	A		W2308	A-FA			30-41-12	ALL
	B		W2308	A-FB			30-41-12	ALL
D03352		1073/147/R006		PLUG				ALL
	A		W2520	0001	08		32-35-11	ALL
	B		W2520	0002	08		32-35-11	ALL
	C		W2520	0003	08		32-35-11	ALL
D03396		942/156/L024		PLUG				ALL
	A		W2406	2542B	20		21-52-11	ALL
	B		W2406	2542R	20		21-52-11	ALL
D03398		1065/160/L063		PLUG				ALL
	1	UNUSED	W2604	0008	18		29-32-11	ALL
	2							001-099
	2		W2604	0007	20		29-11-12	115-199
	3		W2604	0010	18		29-32-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03300

Page 11 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03400		1065/160/R063		PLUG				ALL
	1		W2606	0008	18		29-32-21	ALL
	2	UNUSED						001-099
	2		W2606	0007	20		29-11-22	115-199
	3		W2606	0010	18		29-32-21	ALL
D03402		1245/141/L052		PLUG-				ALL
	1		W2608	0008	18		29-32-31	ALL
	2	UNUSED						001-099
	2		W2608	0007	20		29-11-31	115-199
	3		W2608	0010	18		29-32-31	ALL
D03404		1250/148/L052		PLUG				ALL
	1		W2610	0008	18		29-32-31	ALL
	2	UNUSED						001-099
	2		W2610	0007	20		29-11-31	115-199
	3		W2610	0010	18		29-32-31	ALL
D03406		217.6/213/R7		PLUG				001-099
D03406		P3-1/ /		PLUG				115-199
	1		W0003	3004Y	24		33-11-21	ALL
	2		W0003	0300	20		33-11-21	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0003	3004R	24		33-11-21	ALL
	6		W0003	3004B	24		33-11-21	ALL
	7		W0003	0307	20		33-11-21	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0003	0311	20		33-11-21	ALL
	12		W0003	0312	24		33-11-21	ALL
D03408		270/265/R25		PLUG				001-099
D03408		P5/ /		PLUG				115-199
	1		W2070	3009Y	24		33-13-32	ALL
	2		W2070	0126	20		33-13-32	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W2070	3009B	24		33-13-32	ALL
	6		W2070	3009R	24		33-13-32	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03400

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03408		270/265/R25		PLUG (continued)				001-099
D03408		P5/ /		PLUG (continued)				115-199
	7		W2070	0130	20		33-13-32	ALL
	8		W2070	0501	20		33-13-32	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W2070	0129	20		33-13-32	ALL
	12		W2070	0100	24		33-13-32	ALL
D03410		P005-00/ /		PLUG				001-099
D03410		P5/ /		PLUG				115-199
	1		W2066	3007Y	24		33-13-31	ALL
	2		W2066	0079	20		33-13-31	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W2066	3007B	24		33-13-31	ALL
	6		W2066	3007R	24		33-13-31	ALL
	7		W2066	0080	20		33-13-31	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W2066	0078	20		33-13-31	ALL
	12		W2066	0347	24		33-13-31	ALL
D03412		P005-00/ /		PLUG				001-099
D03412		P5/ /		PLUG				115-199
	1		W2066	3006Y	24		33-13-31	ALL
	2		W2066	0569	20		33-13-31	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W2066	3006B	24		33-13-31	ALL
	6		W2066	3006R	24		33-13-31	ALL
	7		W2066	0075	20		33-13-31	ALL
	8		W2066	0076	20		33-13-31	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W2066	0077	20		33-13-31	ALL
	12		W2066	0343	24		33-13-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03400

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03414		270/270/R25		PLUG				001-099
D03414		P5/ /		PLUG				115-199
	1		W2070	3008Y	24		33-13-32	ALL
	2		W2070	0122	20		33-13-32	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W2070	3008B	24		33-13-32	ALL
	6		W2070	3008R	24		33-13-32	ALL
	7		W2070	0089	20		33-13-32	ALL
	8		W2070	0500	20		33-13-32	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W2070	0116	20		33-13-32	ALL
	12		W2070	0127	24		33-13-32	ALL
D03428		942/156/R060		PLUG				ALL
	A		W2506	2530B	20		21-52-11	ALL
	B		W2506	2530R	20		21-52-11	ALL
D03430		1862.7/265/R023		PLUG				ALL
	1		W2814	0005	20		27-23-11	ALL
	2		W2814	0006	20		27-23-11	ALL
	3	UNUSED						ALL
D03432		1862.7/275/L010		PLUG-				ALL
	1		W2821	0026	20		27-23-11	ALL
	2		W2821	0025	18		27-23-11	ALL
	3	UNUSED						ALL
D03434		1862.7/265/R023		PLUG				ALL
	1	UNUSED						ALL
	2		W2814	0004	20		27-23-11	ALL
	3		W2814	0003	20		27-23-11	ALL
D03436		1862.7/275/L010		PLUG-				ALL
	1	UNUSED						ALL
	2		W2821	0028	18		27-23-11	ALL
	3		W2821	0027	20		27-23-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03400

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03438		355/295/L10		PLUG-				001-099
D03438		355/295/L010		PLUG-				115-199
	1		W3576	0129	22		33-22-11	001-099
	1		W3576	0011	22		33-22-11	115-199
	2		W3576	0014	20		33-22-11	ALL
	3		W3576	0007	22		33-22-11	ALL
	4		W3576	0016	20		33-22-11	ALL
	5		W3576	0013	22		33-22-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						001-099
	11		W3576	0052	22		SPARE	115-199
	12	UNUSED						ALL
D03440		MULTI/ /		PLUG-				001-099
D03440		MULTI/ /		PLUG-PASSENGER SERVICE UNIT U/B				115-199
	1		W0512	0001WY	18		33-24-31	001-099
	1		W0512	0001Y	20		33-24-31	115-199
	2		W0512	0002WV	22		33-25-31	001-099
	2		W0512	0002RY	22		33-25-31	115-199
	3		W0512	0003WG	22		33-25-31	001-099
	3		W0512	0003RL	22		33-25-31	115-199
	4		W0512	0004WO	22		33-25-31	001-099
	4		W0512	0004RN	22		33-25-31	115-199
	5		W0512	0005V	22		33-25-31	001-099
	5		W0512	0005RB	22		33-25-31	115-199
	6		W0512	0006N	16		33-23-31	001-099
	6		W0512	0006P	16		33-23-31	115-199
	7		W0512	0007W	20		33-24-31	001-099
	7		W0512	0007L	20		33-24-31	115-199
	8		W0512	0008O	16		33-23-31	001-099
	8		W0512	0008N	16		33-23-31	115-199
	9	UNUSED						001-099
	9		W0512	0009A	22		33-25-31	115-199
	10		W0512	0010K	18		35-21-31	ALL
	11		W0512	0011G	20		35-21-31	001-099
	11		W0512	0011RG	20		35-21-31	115-199
	12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03400

Page 4

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03440		MULTI/ /		PLUG- (continued)				001-099
D03440		MULTI/ /		PLUG-PASSENGER SERVICE UNIT U/B (continued)				115-199
	13		W0512	2001R	22		23-31-42	001-099
	13		W0512	2001B	22		23-31-42	115-199
	14		W0512	2001B	22		23-31-42	001-099
	14		W0512	2001R	22		23-31-42	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D03442		MULTI/ /		PLUG-				001-099
D03442		MULTI/ /		PLUG-PASSENGER SERVICE UNIT U/B				115-199
	1		W0514	0001WY	18		33-24-31	001-099
	1		W0514	0001Y	20		33-24-31	115-199
	2		W0514	0002WV	22		33-25-31	001-099
	2		W0514	0002RY	22		33-25-31	115-199
	3		W0514	0003WG	22		33-25-31	001-099
	3		W0514	0003RL	22		33-25-31	115-199
	4		W0514	0004WO	22		33-25-31	001-099
	4		W0514	0004RN	22		33-25-31	115-199
	5		W0514	0005V	22		33-25-31	001-099
	5		W0514	0005RB	22		33-25-31	115-199
	6		W0514	0006N	16		33-23-31	001-099
	6		W0514	0006P	16		33-23-31	115-199
	7		W0514	0007W	20		33-24-31	001-099
	7		W0514	0007L	20		33-24-31	115-199
	8		W0514	0008O	16		33-23-31	001-099
	8		W0514	0008N	16		33-23-31	115-199
	9	UNUSED						001-099
	9		W0514	0009A	22		33-25-31	115-199
	10		W0514	0010K	18		35-21-31	ALL
	11		W0514	0011G	20		35-21-31	001-099
	11		W0514	0011RG	20		35-21-31	115-199
	12		W0514	0012WB	20		23-31-42	001-099
	12	UNUSED						115-199
	13		W0514	2001R	22		23-31-42	001-099
	13		W0514	2001B	22		23-31-42	115-199
	14		W0514	2001B	22		23-31-42	001-099
	14		W0514	2001R	22		23-31-42	115-199
	15		W0514	0015BK	20		23-31-42	115-199
	16	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D03400

Page 5

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03446		MULTI/ /		PLUG-				ALL
	1		W0518	0001WY	18		33-24-31	001-099
	1		W0518	0001	20		33-24-31	115-199
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0518	0007W	20		33-24-31	001-099
	7		W0518	0007	20		33-24-31	115-199
	8		W0518	0008O	18		33-24-31	001-099
	8		W0518	0008	16		33-24-31	115-199
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						115-199
	16	UNUSED						115-199
D03448		MULTI/ /		PLUG-ATTENDANT SERVICE UNIT (U/B)				115-199
	1	UNUSED						115-199
	2	UNUSED						115-199
	3	UNUSED						115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
	6		W0520	0006P	16		33-23-31	115-199
	7	UNUSED						115-199
	8		W0520	0008N	16		33-23-31	115-199
	9	UNUSED						115-199
	10		W0520	0010K	18		35-21-31	115-199
	11		W0520	0011RG	20		35-21-31	115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D03400

Page 6

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03450		MULTI/ /		PLUG-PASSENGER SERVICE UNIT O/D				ALL
	1	UNUSED						ALL
	2		W0522	0002WV	22		33-25-31	001-099
	2		W0522	0002RY	22		33-25-31	115-199
	3		W0522	0003WG	22		33-25-31	001-099
	3		W0522	0003RL	22		33-25-31	115-199
	4		W0522	0004WO	22		33-25-31	001-099
	4		W0522	0004RN	22		33-25-31	115-199
	5		W0522	0005V	22		33-25-31	001-099
	5		W0522	0005RB	22		33-25-31	115-199
	6		W0522	0006N	16		33-23-31	001-099
	6		W0522	0006P	16		33-23-31	115-199
	7	UNUSED						ALL
	8		W0522	0008O	16		33-23-31	001-099
	8		W0522	0008N	16		33-23-31	115-199
	9	UNUSED						001-099
	9		W0522	0009A	22		33-25-31	115-199
	10		W0522	0010K	18		35-21-31	ALL
	11		W0522	0011G	20		35-21-31	001-099
	11		W0522	0011RG	20		35-21-31	115-199
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						115-199
	16	UNUSED						115-199
D03452		MULTI/ /		PLUG-PASSENGER SERVICE UNIT O/D				001-099
	1	UNUSED						001-099
	2	UNUSED						001-099
	3	UNUSED						001-099
	4	UNUSED						001-099
	5	UNUSED						001-099
	6	UNUSED						001-099
	7	UNUSED						001-099
	8	UNUSED						001-099
	9	UNUSED						001-099
	10		W0524	0010	18		35-21-31	001-099
	11		W0524	0011	20		35-21-31	001-099
	12	UNUSED						001-099
	13	UNUSED						001-099
	14	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D03400

Page 7

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03456		355/285/L40		RCPT-				115-199
	1		W3576	0001	20		33-22-11	115-199
	2		W3576	0077	22		33-22-11	115-199
	3		W3576	0003	22		33-22-11	115-199
	4		W3576	0004	20		33-22-11	115-199
	5		W3576	0005	22		33-22-11	115-199
	6		W3576	0006	22		33-22-11	115-199
	7		W3576	0007	22		33-22-11	115-199
	8		W3576	0008	22		33-22-11	115-199
	9		W3576	0046	22		24-51-51	115-199
	10		W3576	0047	22		24-51-51	115-199
	11		W3576	0045	22		24-51-51	115-199
	12		W3576	0134	22		23-34-16	115-199
	13		W3576	0036	24		33-21-11	115-199
	14		W3576	0037	24		33-21-11	115-199
	15		W3576	0038	24		33-21-11	115-199
	16		W3576	0032	22		33-21-51	115-199
	17		W3576	0039	22		33-21-11	115-199
	18		W3576	0033	24		33-21-31	115-199
	19		W3576	0034	24		33-21-31	115-199
	20		W3576	0035	24		33-21-31	115-199
	21		W3576	0132	22		23-34-16	115-199
	22		W3576	0133	22		23-34-16	115-199
	23		W3576	0135	22		23-34-15	115-199
	24		W3576	0137	20		33-21-31	115-199
	25		W3576	0131	20		23-34-15	115-199
	26		W3576	3001R	22		23-34-16	115-199
	27		W3576	3001Y	22		23-34-16	115-199
	28		W3576	3001B	22		23-34-16	115-199
	29		W3576	0029	22		23-34-16	115-199
	30		W3576	0031	22		23-34-16	115-199
	31		W3576	0030	20		23-34-16	115-199
	32		W3576	0027	22		23-34-15	115-199
	33		W3576	0028	20		23-34-15	115-199
	34		W3576	0044	20		33-21-11	115-199
	35		W3576	0059	22		33-27-11	115-199
	36		W3576	0061	22		33-27-11	115-199
	37		W3576	0060	22		33-27-11	115-199
	38		W3576	0040	22		33-51-11	115-199
	39		W3576	0041	22		33-51-11	115-199
	40		W3576	0042	22		33-51-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D03400

Page 8

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03456		355/285/L40		RCPT- (continued)				115-199
	41		W3576	0043	20		33-51-11	115-199
	CAP	Y	W3576	0052	22		SPARE	115-199
D03460		1258/290/L40		PLUG-				001-099
	1	UNUSED						001-099
	2		W3572	0118	22		33-25-14	001-099
	3	UNUSED						001-099
	4	UNUSED						001-099
	5		W3572	0119	22		33-25-14	001-099
	6	UNUSED						001-099
	7	UNUSED						001-099
	8	UNUSED						001-099
	9	UNUSED						001-099
	10		W3572	0120	18		35-21-13	001-099
	11		W3572	0088	20		35-21-13	001-099
	12	UNUSED						001-099
	13		W3572	2002R	22		23-31-22	001-099
	14		W3572	2002B	22		23-31-22	001-099
D03462		1287/265/L60		PLUG-				001-099
D03462		1295/290/L45		PLUG				115-199
	1	UNUSED						ALL
	2		W3672	0047	22		33-25-14	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W3672	0046	22		33-25-14	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W3672	0048	18		35-21-13	ALL
	11		W3672	0109	20		35-21-13	ALL
	12	UNUSED						ALL
	13		W3672	2001R	22		23-31-22	001-099
	13		W3672	2001B	22		23-31-22	115-199
	14		W3672	2001B	22		23-31-22	001-099
	14		W3672	2001R	22		23-31-22	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D03400

Page 9

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03468		1285/265/R60		PLUG-				001-099
D03468		1295/298/R30		PLUG-				115-199
	1	UNUSED						ALL
	2		W3672	0059	22		33-25-24	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W3672	0060	22		33-25-24	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W3672	0062	18		35-21-22	ALL
	11		W3672	0110	20		35-21-22	ALL
	12	UNUSED						ALL
	13		W3672	2002R	22		23-31-32	001-099
	13		W3672	2002B	22		23-31-32	115-199
	14		W3672	2002B	22		23-31-32	001-099
	14		W3672	2002R	22		23-31-32	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D03472		MULTI/ /		RCPT-				001-099
D03472		355/288/L14		RCPT-				115-199
	1		W0614	0001	20		33-22-11	ALL
	2		W0614	0002	20		33-22-11	ALL
	3		W0614	0003	22		33-22-11	ALL
	4		W0614	0004	20		33-22-11	ALL
	5		W0614	0005	22		33-22-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D03474		347/289/R019		RCPT-				ALL
	1		W0608	0001	20		33-27-11	ALL
	2		W0608	0002	20		33-27-11	ALL
	3		W0608	0003	22		33-27-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03400

Page 10

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03474		347/289/R019		RCPT- (continued)				ALL
	4		W0608	0004	20		33-27-11	ALL
	5		W0608	0005	22		33-27-11	ALL
	6		W0608	0006	22		33-27-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D03478		1669/290/L3		RCPT-				ALL
	1		W0612	0001	20		33-27-31	ALL
	2		W0612	0002	20		33-27-31	ALL
	3		W0612	0003	22		33-27-31	ALL
	4		W0612	0004	20		33-27-31	ALL
	5		W0612	0005	22		33-27-31	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D03486		MULTI/ /		PLUG-				004-099
	1	UNUSED						004-099
	2	UNUSED						004-099
	3	UNUSED						004-099
	4	UNUSED						004-099
	5	UNUSED						004-099
	6	UNUSED						004-099
	7	UNUSED						004-099
	8	UNUSED						004-099
	9	UNUSED						004-099
	10		W0536	0010K	18		35-21-31	004-099
	11		W0536	0011G	20		35-21-31	004-099
	12	UNUSED						004-099
	13		W0536	2001R	22		23-31-42	004-099
	14		W0536	2001B	22		23-31-42	004-099

HOOKUP LIST

D280N032

91-21-51

Section D03400

Page 11

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03490		P008-00/ /		PLUG				ALL
	1		W4228	0059	22		26-12-11	ALL
	2		W4228	0060	22		26-12-11	001-099
	2		W4228	0060	20		26-12-11	115-199
	3		W4228	0018	22		26-11-11	ALL
	4		W4228	0023	22		26-11-11	001-099
	4		W4228	0023	20		26-11-11	115-199
	5	UNUSED						ALL
D03492		P008-00/ /		PLUG				ALL
	1		W4236	0075	20		33-13-52	ALL
	2		W4236	0076	20		33-13-52	ALL
	3		W4236	0081	22		33-16-51	ALL
	4		W4236	0080	22		33-16-51	ALL
	5		W4236	0063	22		26-11-11	ALL
	6		W4236	0065	22		26-11-11	001-099
	6		W4236	0065	20		26-11-11	115-199
	7		W4236	0064	22		26-11-11	ALL
	8		W4236	0022	22		26-11-21	ALL
	9		W4236	0023	22		26-11-21	001-099
	9		W4236	0023	20		26-11-21	115-199
	10		W4236	0050	22		26-12-21	ALL
	11		W4236	0051	20		26-12-21	ALL
	12		W4236	0223	22		26-17-11	001-099
	12		W4236	0223	20		26-17-11	115-199
	13		W4236	0222	22		26-17-11	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D03494		P008-00/ /		PLUG				001-099
D03494		P8/ /		PLUG				115-199
	1		W2134	0028	22		26-15-11	ALL
	2		W2134	0029	22		26-15-11	ALL
	3		W2134	0026	22		26-16-11	ALL
	4		W2134	0027	22		26-16-11	001-099
	4		W2134	0027	20		26-16-11	115-199
	5	UNUSED						ALL
D03496		P008-00/ /		PLUG				ALL
	1		W4228	0137	20		33-13-52	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03400

Page 12

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03496		P008-00/ /		PLUG (continued)				ALL
	2		W4228	0138	20		33-13-52	ALL
	3		W4228	0139	22		33-16-51	ALL
	4		W4228	0140	22		33-16-51	ALL
	5		W4228	0166	20		26-23-11	ALL
	6		W4228	0177	24		21-43-11	ALL
	7	UNUSED						ALL
	8		W4228	0176	24		21-43-11	ALL
	9	UNUSED						ALL
	10		W4228	0135	20		21-25-11	ALL
	11		W4228	0011	24		21-25-11	ALL
	12		W4228	0153	22		26-16-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W4228	0163	20		26-23-11	ALL
	16		W4228	0167	20		26-23-11	ALL
	17		W4228	0169	20		26-23-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W4228	0168	20		26-23-11	ALL
	21		W4228	0136	24		31-51-33	ALL
	22		W4228	0165	20		26-23-11	ALL
	23		W4228	0164	20		26-23-11	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D03498		P008-00/ /		PLUG				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W4236	0126	22		33-16-61	ALL
	4		W4236	0125	22		33-16-51	ALL
	5		W4236	0142	20		26-23-11	ALL
	6		W4236	0164	24		21-44-11	ALL
	7	UNUSED						ALL
	8		W4236	0163	24		21-44-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03400

Page 13

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03498		P008-00/ /		PLUG (continued)				ALL
	9	UNUSED						ALL
	10		W4236	0124	20		21-25-11	ALL
	11		W4236	0079	24		21-25-11	ALL
	12		W4236	0133	22		26-16-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W4236	0141	20		26-23-11	ALL
	16		W4236	0140	20		26-23-11	ALL
	17		W4236	0138	20		26-23-11	ALL
	18	UNUSED						ALL
	19		W4236	0148	22		26-22-21	001-099
	19		W4236	0137	22		26-22-21	115-199
	20		W4236	0139	20		26-23-11	ALL
	21		W4236	0123	24		31-51-33	ALL
	22		W4236	0143	20		26-23-11	ALL
	23		W4236	0144	20		26-23-11	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03400

Page 14 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03500		P005-00/ /		PLUG				001-099
D03500		P5/ /		PLUG				115-199
	1		W2066	0385	20		33-13-32	ALL
	2		W2066	0386	20		33-13-32	ALL
	3		W2066	0334	22		33-16-52	ALL
	4		W2066	0335	22		33-16-52	ALL
	5		W2066	0116	20		24-51-14	ALL
	6		W2066	0122	24		24-51-71	ALL
	7		W2066	0157	20		25-31-33	001-099
	7	18	W2066	1006	18		25-31-33	115-199
	8		W2066	0115	20		24-51-14	ALL
	9		W2066	0127	22		24-51-14	ALL
	10		W2066	0114	20		24-51-14	ALL
	11		W2066	0312	22		33-16-12	ALL
	12		W2066	0124	22		24-51-24	ALL
	13		W2066	0021	22		24-11-11	ALL
	14		W2066	0112	22		24-34-11	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W2066	0022	22		24-22-11	ALL
	19		W2066	0030	22		24-22-11	ALL
	20		W2066	0026	22		24-22-11	ALL
	21		W2066	0029	22		24-22-11	ALL
	22		W2066	0108	20		24-22-11	ALL
	23		W2066	0153	20		24-51-14	ALL
	24		W2066	0123	24		24-51-71	ALL
	25		W2066	0034	24		24-27-11	ALL
	26		W2066	0033	24		24-27-11	ALL
	27		W2066	0311	22		33-16-12	ALL
	28		W2066	0111	24		24-27-11	ALL
	29		W2066	0035	24		24-27-11	ALL
	30		W2066	0109	20		24-22-12	ALL
	31		W2066	0110	22		24-22-12	ALL
	32		W2066	0113	22		24-34-11	ALL
	33	UNUSED						ALL
	34	18	W2066	0297	18		25-31-33	ALL
	35		W2066	0125	24		24-51-71	001-099
	35		W2066	0125	22		24-51-71	115-199
	36	UNUSED						ALL
	37		W2066	0126	22		24-51-24	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03500

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03500		P005-00/ /		PLUG (continued)				001-099
D03500		P5/ /		PLUG (continued)				115-199
	38	UNUSED						ALL
	39		W2066	0543	22		24-51-72	ALL
	40		W2066	0542	22		24-51-72	ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	CAP	Y	W2066	0534	20		SPARE	115-199
	CAP	Y	W2066	0535	20		SPARE	115-199
	DED		W2066	1006Z			25-31-33	115-199
D03501		P005-00/ /		PLUG				001-099
D03501		P5/ /		PLUG				115-199
	1		W2078	0118	20		33-13-31	ALL
	2		W2078	0117	20		33-13-31	ALL
	3		W2078	0194	24		33-11-21	ALL
	4		W2078	0191	24		33-11-21	ALL
	5		W2078	0204	24		33-11-41	ALL
	6		W2078	0205	24		33-11-41	ALL
	7		W2078	3001B	24		33-11-21	ALL
	8		W2078	3001Y	24		33-11-21	ALL
	9		W2078	3001R	24		33-11-21	ALL
	10		W2078	0143	20		33-42-31	001-099
	10	UNUSED						115-199
	11		W2078	0144	20		33-42-31	001-099
	11	UNUSED						115-199
	12		W2078	0110	20		33-42-21	ALL
	13		W2078	0114	20		33-42-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03500

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03501		P005-00/ /		PLUG (continued)				001-099
D03501		P5/ /		PLUG (continued)				115-199
	14	UNUSED						ALL
	15	UNUSED						ALL
	CAP	Y	W2078	0352	20		SPARE	115-199
	CAP	Y	W2078	0358	20		SPARE	115-199
	CAP	Y	W2078	0359	20		SPARE	115-199
D03502		P005-00/ /		PLUG				001-099
D03502		P5/ /		PLUG				115-199
	1		W2070	0303	22		33-16-32	ALL
	2		W2070	0304	22		33-16-42	ALL
	3		W2070	0234	22		33-16-52	ALL
	4		W2070	0315	22		33-16-52	ALL
	5		W2070	0142	22		24-51-24	ALL
	6		W2070	0018	20		25-31-11	001-099
	6		W2070	0018	20		25-31-21	115-199
	7	UNUSED						ALL
	8		W2070	0141	20		24-51-24	ALL
	9		W2070	0109	22		24-22-21	ALL
	10		W2070	0105	22		24-22-21	ALL
	11		W2070	0106	22		24-22-21	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W2070	0139	24		24-27-21	ALL
	16		W2070	0143	22		24-51-24	ALL
	17		W2070	0177	20		25-31-11	001-099
	17		W2070	0177	20		25-31-21	115-199
	18	UNUSED						001-099
	18		W2070	0019	20		SPARE	115-199
	19		W2070	0140	20		24-51-24	ALL
	20		W2070	0091	24		24-41-12	ALL
	21		W2070	0235	22		33-16-52	ALL
	22	UNUSED						ALL
	23		W2070	0128	22		24-22-21	001-003, 115-199
	23	UNUSED						004-099
	24		W2070	0054	22		24-22-21	ALL
	25	UNUSED						ALL
	26		W2070	0107	20		24-41-11	ALL
	27		W2070	0108	20		24-41-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03500

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03502		P005-00/ /		PLUG (continued)				001-099
D03502		P5/ /		PLUG (continued)				115-199
	28		W2070	0225	24		24-11-21	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W2070	0316	22		33-16-62	ALL
	32		W2070	0217	24		24-22-22	ALL
	33		W2070	0218	20		24-22-22	ALL
	34		W2070	0132	24		24-27-21	ALL
	35		W2070	0138	24		24-27-21	ALL
	36		W2070	0120	24		24-27-21	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42		W2070	0807	22		24-51-72	ALL
	43		W2070	0808	22		24-51-72	ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	CAP	Y	W2070	0416	20		SPARE	ALL
	CAP	Y	W2070	0463	20		SPARE	ALL
	CAP	Y	W2070	0464	20		SPARE	ALL
	CAP	Y	W2070	0415	20		SPARE	115-199
	CAP	Y	W2070	0424	20		SPARE	115-199
	CAP	Y	W2070	0425	20		SPARE	115-199
	CAP	Y	W2070	0443	20		SPARE	115-199
	CAP	Y	W2070	0444	20		SPARE	115-199
	CAP	Y	W2070	0445	20		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D03500

Page 4

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03503		P005-00/ /		PLUG				001-099
D03503		P5/ /		PLUG				115-199
	1		W2066	0413	20		33-42-21	ALL
	2		W2066	0412	20		33-42-21	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W2066	3013B	24		33-13-41	ALL
	8		W2066	3013R	24		33-13-41	ALL
	9		W2066	3002R	24		33-13-51	ALL
	10		W2066	3013Y	24		33-13-41	ALL
	11		W2066	3002Y	24		33-13-51	ALL
	12		W2066	3002B	24		33-13-51	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	CAP	Y	W2066	0534	20		SPARE	001-099
	CAP	Y	W2066	0535	20		SPARE	001-099
	CAP	Y	W2066	0528	20		SPARE	ALL
D03504		P005-00/ /		PLUG				001-099
D03504		P5/ /		PLUG				115-199
	1		W2078	0147	16		24-11-11	ALL
	2	UNUSED						ALL
	3		W2078	0148	16		24-11-21	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W2078	0006	16		24-11-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W2078	0007	16		24-11-21	ALL
	CAP	Y	W2078	0404	20		SPARE	115-199
	CAP	Y	W2078	0405	20		SPARE	115-199
	CAP	Y	W2078	0406	20		SPARE	115-199
D03505		P5/ /		PLUG				ALL
	1		W2064	0302	20		33-13-31	ALL
	2		W2064	0303	20		33-13-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03500

Page 5

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03505		P5/ /		PLUG (continued)				ALL
	3	UNUSED						001-099
	3		W2064	0033	20		33-42-11	115-199
	4	UNUSED						001-099
	4		W2064	0298	20		33-42-11	115-199
	5		W2064	0242	20		33-44-21	ALL
	6		W2064	0243	20		33-44-21	ALL
	7	UNUSED						001-099
	7		W2064	0079	20		33-43-12	115-199
	8	UNUSED						001-099
	8		W2064	0078	20		33-43-12	115-199
	9	UNUSED						ALL
	10		W2064	0032	20		33-42-11	001-099
	10	UNUSED						115-199
	11		W2064	0297	20		33-42-11	ALL
	12		W2064	0298	20		33-42-11	001-099
	12		W2064	0032	20		33-42-11	115-199
	13		W2064	0034	20		33-42-12	001-099
	13	UNUSED						115-199
	14		W2064	0035	20		33-42-12	001-099
	14	UNUSED						115-199
	15		W2064	0033	20		33-42-11	001-099
	15	UNUSED						115-199
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W2064	0079	20		33-43-12	001-099
	18	UNUSED						115-199
	19		W2064	0078	20		33-43-12	001-099
	19	UNUSED						115-199
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						115-199
	CAP	Y	W2064	0177	20		SPARE	ALL
	CAP	Y	W2064	0178	20		SPARE	ALL
	CAP	Y	W2064	0179	20		SPARE	ALL
	CAP	Y	W2064	0188	20		SPARE	ALL
	CAP	Y	W2064	0189	20		SPARE	ALL
	CAP	Y	W2064	0176	20		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D03500

Page 6

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03506		P005-00/ /		PLUG				001-099
D03506		P5/ /		PLUG				115-199
	1		W2080	0016	24		24-27-41	ALL
	2		W2080	0021	22		24-27-41	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W2080	0001	20		24-22-41	ALL
	7	UNUSED						ALL
	8		W2080	0008	24		24-22-41	ALL
	9	UNUSED						ALL
	10		W2080	0020	22		24-27-41	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W2080	0006	24		24-22-41	001-003, 115-199
	13	UNUSED						004-099
	14		W2080	0005	24		24-22-41	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W2080	0002	24		24-22-41	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	CAP	Y	W2080	0032	20		SPARE	115-199
	CAP	Y	W2080	0033	20		SPARE	115-199
D03507		P005-00/ /		PLUG				001-099
D03507		P5/ /		PLUG				115-199
	1	UNUSED						001-099
	1		W2072	0076	20		33-43-11	115-199
	2	UNUSED						001-099
	2		W2072	0075	20		33-43-11	115-199
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W2072	0014	20		33-44-11	ALL
	6		W2072	0015	20		33-44-11	ALL
	7		W2072	0069	20		33-41-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03500

Page 7

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03507		P005-00/ /		PLUG (continued)				001-099
D03507		P5/ /		PLUG (continued)				115-199
	8		W2072	0024	20		33-41-11	ALL
	9		W2072	0068	20		33-41-11	ALL
	10		W2072	0072	20		33-42-12	ALL
	11		W2072	0071	20		33-42-12	ALL
	12	UNUSED						ALL
	13	UNUSED						001-099
	13		W2072	0070	20		33-42-12	115-199
	14	UNUSED						001-099
	14		W2072	0073	20		33-42-12	115-199
	15	UNUSED						001-099
	16	UNUSED						001-099
	17	UNUSED						001-099
	18		W2072	0076	20		33-43-11	001-099
	19		W2072	0075	20		33-43-11	001-099
	20	UNUSED						001-099
	21	UNUSED						001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
	CAP	Y	W2072	0130	20		SPARE	001-099
D03508		P005-00/ /		PLUG				001-099
D03508		P5/ /		PLUG				115-199
	1		W2078	0043	20		33-13-32	ALL
	2		W2078	0044	20		33-13-32	ALL
	3		W2078	0255	22		33-16-52	ALL
	4		W2078	0256	22		33-16-52	ALL
	5		W2078	0158	24		24-33-11	001-099
	5		W2078	0158	22		24-33-11	115-199
	6		W2078	0519	24		24-33-11	001-099
	6		W2078	0519	22		24-33-11	115-199
	7		W2078	0156	24		24-33-11	001-099
	7		W2078	0156	22		24-33-11	115-199
	8		W2078	0018	22		49-61-11	ALL
	9	UNUSED						ALL
	10		W2078	0155	24		24-33-11	001-099
	10		W2078	0155	22		24-33-11	115-199
	11		W2078	0164	24		24-33-11	001-099
	11		W2078	0164	20		24-33-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D03500

Page 8

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03508		P005-00/ /		PLUG (continued)				001-099
D03508		P5/ /		PLUG (continued)				115-199
	12		W2078	0162	24		24-33-11	001-099
	12		W2078	0162	20		24-33-11	115-199
	13		W2078	0153	24		24-33-11	001-099
	13		W2078	0153	22		24-33-11	115-199
	14		W2078	0421	24		24-41-11	001-099
	14		W2078	0421	20		24-41-11	115-199
	15		W2078	0019	22		49-61-11	ALL
	16	UNUSED						ALL
	17		W2078	0150	22		24-31-11	ALL
	18	UNUSED						ALL
	19		W2078	0161	20		24-33-11	ALL
	20	18	W2078	0154	18		24-33-11	ALL
	21		W2078	0152	24		24-33-11	001-099
	21		W2078	0152	22		24-33-11	115-199
	22	18	W2078	0163	18		24-33-11	ALL
	23		W2078	0151	24		24-33-11	001-099
	23		W2078	0151	22		24-33-11	115-199
	24	UNUSED						ALL
	25		W2078	0160	24		24-33-11	001-099
	25		W2078	0160	22		24-33-11	115-199
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W2078	0072	24		24-33-11	001-099
	29		W2078	0072	22		24-33-11	115-199
	30	UNUSED						ALL
	31		W2078	0064	24		24-33-11	ALL
	32		W2078	0517	24		24-33-11	001-099
	32		W2078	0517	20		24-33-11	115-199
	33		W2078	0520	24		24-33-11	001-099
	33		W2078	0520	22		24-33-11	115-199
	34		W2078	0515	22		24-33-12	001-099
	34	UNUSED						115-199
	35		W2078	0518	20		24-33-12	001-099
	35	UNUSED						115-199
	36		W2078	0516	22		24-33-12	001-099
	36	UNUSED						115-199
	37		W2078	0418	20		24-33-12	001-099
	37	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D03500

Page 9

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03508		P005-00/ /		PLUG (continued)				001-099
D03508		P5/ /		PLUG (continued)				115-199
I	38		W2078	0419	20		24-33-12	001-099
	38	UNUSED						115-199
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D03510		P5/ /		PLUG				115-199
	1	UNUSED						115-199
	2	UNUSED						115-199
	3	UNUSED						115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10		W2066	2007B	24		SPARE	115-199
	11		W2066	2005R	24		SPARE	115-199
	12		W2066	2005B	24		SPARE	115-199
	13		W2066	2006R	24		SPARE	115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16		W2066	2001R	24		SPARE	115-199
	17	UNUSED						115-199
	18		W2066	2009R	24		SPARE	115-199
	19		W2066	2009B	24		SPARE	115-199
	20		W2066	2008B	24		SPARE	115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24		W2066	2007R	24		SPARE	115-199
	25		W2066	0277	24		SPARE	115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29		W2066	2006B	24		SPARE	115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
	32		W2066	2001B	24		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D03500

Page 10

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03510		P5/ /		PLUG (continued)				115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38		W2066	0270	24		SPARE	115-199
	39		W2066	2008R	24		SPARE	115-199
	CAP	Y	W2066	0529	20		SPARE	115-199
D03511		P005-00/ /		PLUG				001-099
D03511		P5/ /		PLUG				115-199
	1		W2078	0311	20		33-13-31	ALL
	2		W2078	0312	20		33-13-31	ALL
	3		W2078	0314	22		33-16-52	ALL
	4		W2078	0313	22		33-16-52	ALL
	5		W2078	0101	22		22-21-11	ALL
	6		W2078	0071	22		22-21-11	ALL
	7		W2078	0102	22		22-21-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						001-099
	11		W2078	0346	22		SPARE	115-199
	12		W2078	0103	20		22-21-11	ALL
D03512		P005-00/ /		PLUG				001-099
D03512		P5/ /		PLUG				115-199
	1		W2066	0387	20		33-13-32	ALL
	2		W2066	0388	20		33-13-32	ALL
	3		W2066	0310	22		33-16-12	ALL
	4		W2066	0309	22		33-16-12	ALL
	5		W2066	0091	22		28-42-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W2066	0088	22		28-42-11	ALL
	9	UNUSED						ALL
	10		W2066	0090	22		28-42-11	ALL
	11		W2066	0089	22		28-42-11	ALL
	12		W2066	0552	20		28-22-11	ALL
	13		W2066	0295	20		28-22-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03500

Page 11

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03512		P005-00/ /		PLUG (continued)				001-099
D03512		P5/ /		PLUG (continued)				115-199
	14	UNUSED						ALL
	15		W2066	0266	20		28-22-11	ALL
	16	UNUSED						ALL
	17		W2066	0315	20		28-22-11	ALL
	18		W2066	0316	20		28-22-11	ALL
	19		W2066	0317	18		28-22-11	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W2066	0577	18		28-22-11	ALL
	24		W2066	2014R	24		28-41-13	001-099
	24		W2066	2014R	22		28-41-13	115-199
	25	UNUSED						ALL
	26		W2066	2014B	24		28-41-13	001-099
	26		W2066	2014B	22		28-41-13	115-199
	27		W2066	0294	20		28-22-11	ALL
	28		W2066	0559	22		28-41-13	ALL
	CAP	Y	W2066	0553	22		SPARE	115-199
D03513		P005-00/ /		PLUG				001-099
D03513		P5/ /		PLUG				115-199
	1	UNUSED						001-099
	1		W2072	0135	22		SPARE	115-199
	2	UNUSED						001-099
	2		W2072	0134	22		SPARE	115-199
	3		W2072	0238	22		33-16-32	ALL
	4		W2072	0010	22		33-16-42	ALL
	5		W2072	0042	22		22-21-21	ALL
	6		W2072	0045	22		22-21-21	ALL
	7		W2072	0043	22		22-21-21	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W2072	0046	22		22-21-21	ALL
	13	UNUSED						001-099
	13		W2072	0133	22		SPARE	115-199
	14	UNUSED						001-099
	14		W2072	0132	22		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D03500

Page 12

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03513		P005-00/ /		PLUG (continued)				001-099
D03513		P5/ /		PLUG (continued)				115-199
	15	UNUSED						001-099
	15		W2072	0136	22		SPARE	115-199
	CAP	Y	W2072	0121	20		SPARE	ALL
	CAP	Y	W2072	0122	20		SPARE	ALL
	CAP	Y	W2072	0123	20		SPARE	115-199
	CAP	Y	W2072	0124	20		SPARE	115-199
D03514		P005-00/ /		PLUG				001-099
D03514		P5/ /		PLUG				115-199
	1	UNUSED						001-008, 115-199
	1		W2070	0624	20		28-22-32	009-099
	2	UNUSED						001-008, 115-199
	2		W2070	0625	20		28-22-32	009-099
	3		W2070	0299	22		33-16-32	ALL
	4		W2070	0300	22		33-16-42	ALL
	5		W2070	0274	22		28-42-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						001-008, 115-199
	9		W2070	0627	20		28-22-32	009-099
	10	UNUSED						001-008, 115-199
	10		W2070	0628	20		28-22-32	009-099
	11		W2070	0271	22		28-42-11	ALL
	12		W2070	0508	20		28-22-11	ALL
	13		W2070	0506	20		28-22-11	ALL
	14	UNUSED						001-099
	14		W2070	0439	20		SPARE	115-199
	15		W2070	0022	18		28-22-11	ALL
	16	UNUSED						ALL
	17		W2070	0335	20		28-22-11	ALL
	18		W2070	0336	20		28-22-11	ALL
	19	UNUSED						001-008, 115-199
	19		W2070	0623	20		28-22-32	009-099
	20	UNUSED						ALL
	21		W2070	0273	22		28-42-11	ALL
	22	UNUSED						001-008, 115-199
	22		W2070	0626	20		28-22-32	009-099
	23	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03500

Page 13

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03514		P005-00/ /		PLUG (continued)				001-099
D03514		P5/ /		PLUG (continued)				115-199
	24		W2070	0503	20		28-22-11	ALL
	25		W2070	0272	22		28-42-11	ALL
	26		W2070	0507	20		28-22-11	ALL
	27		W2070	0337	18		28-22-11	ALL
	28		W2070	0505	20		28-22-11	ALL
	CAP	Y	W2070	0439	20		SPARE	001-099
D03516		P005-00/ /		PLUG				001-099
D03516		P5/ /		PLUG				115-199
	1		W2078	0086	24		28-22-31	ALL
	2		W2078	0074	20		28-22-31	ALL
	3		W2078	0253	22		33-16-52	ALL
	4		W2078	0254	22		33-16-52	ALL
	5		W2078	0084	20		28-22-31	ALL
	6		W2078	0075	20		28-22-31	ALL
	7	UNUSED						001-008, 115-199
	7		W2078	0553	20		28-22-31	009-099
	8		W2078	0514	24		28-25-11	001-099
	8		W2078	0514	22		28-25-11	115-199
	9		W2078	0513	24		28-25-11	001-099
	9		W2078	0513	22		28-25-11	115-199
	10	UNUSED						ALL
	11	UNUSED						001-008, 115-199
	11		W2078	0601	24		28-22-31	009-099
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	CAP	Y	W2078	0407	20		SPARE	115-199
	CAP	Y	W2078	0408	20		SPARE	115-199
	CAP	Y	W2078	0409	20		SPARE	115-199
D03517		P005-00/ /		PLUG				001-099
D03517		P5/ /		PLUG				115-199
	1		W2072	0098	20		33-13-31	ALL
	2		W2072	0099	20		33-13-31	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W2072	0038	24		33-24-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D03500

Page 14

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03517		P005-00/ /		PLUG (continued)				001-099
D03517		P5/ /		PLUG (continued)				115-199
	5		W2072	0038	20		33-24-11	115-199
	6		W2072	0036	24		33-24-11	001-099
	6		W2072	0036	22		33-24-11	115-199
	7		W2072	0035	24		33-24-11	001-099
	7		W2072	0035	22		33-24-11	115-199
	8		W2072	0037	24		33-24-11	001-099
	8		W2072	0037	20		33-24-11	115-199
	9	UNUSED						ALL
	10		W2072	0032	24		33-24-11	001-099
	10		W2072	0032	22		33-24-11	115-199
	11		W2072	0026	24		33-24-11	001-099
	11		W2072	0026	22		33-24-11	115-199
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D03518		P005-00/ /		PLUG				001-099
D03518		P5/ /		PLUG				115-199
	1		W2156	0111	20		33-13-31	ALL
	2		W2156	0112	20		33-13-31	ALL
	3		W2156	0006	22		33-16-42	ALL
	4		W2156	0007	22		33-16-42	ALL
	5		W2156	0149	24		21-58-12	ALL
	6	UNUSED						ALL
	7		W2156	0010	22		33-16-52	ALL
	8		W2156	0013	22		33-16-62	ALL
	9		W2156	0173	22		21-58-15	ALL
	10		W2156	0177	22		21-58-12	ALL
	11		W2156	0150	22		21-58-12	ALL
	12		W2156	0147	22		21-58-12	ALL
	13		W2156	0178	22		21-58-12	ALL
	14		W2156	0180	20		21-58-13	ALL
	15		W2156	0179	20		21-58-13	ALL
	16		W2156	0038	24		21-58-12	ALL
	17		W2156	0160	24		21-58-13	ALL
	18		W2156	0079	24		21-58-12	ALL
	19		W2156	0044	24		21-58-12	ALL
	20		W2156	0148	24		21-58-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03500

Page 15

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03518		P005-00/ /		PLUG (continued)				001-099
D03518		P5/ /		PLUG (continued)				115-199
	21		W2156	0800	24		21-33-12	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D03520		P005-00/ /		PLUG				001-099
D03520		P5/ /		PLUG				115-199
	1		W2070	0158	20		33-13-31	ALL
	2		W2070	0159	20		33-13-31	ALL
	3	UNUSED						ALL
	4		W2070	0012	18		30-42-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W2070	0101	18		30-42-11	ALL
	8		W2070	0237	22		30-43-11	ALL
	9		W2070	0238	22		30-43-11	ALL
	10		W2070	0011	18		30-42-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	CAP	Y	W2070	0533	22		SPARE	001-099
	CAP	Y	W2070	0449	20		SPARE	ALL
	CAP	Y	W2070	0450	20		SPARE	ALL
	CAP	Y	W2070	0451	20		SPARE	115-199
	CAP	Y	W2070	0465	20		SPARE	115-199
	CAP	Y	W2070	0466	20		SPARE	115-199
D03521		P065-00/ /		SOCKET-TERR WXR				002
	1		W0814	2511W	24		34-43-15	002
	2		W0814	2507W	24		34-46-14	002
	3		W0814	2509B	24		34-43-15	002
	4		W0814	2507B	24		34-46-14	002
	5		W0814	2511B	24		34-43-15	002
	6		W0814	0106	22		34-46-14	002
	7	UNUSED						002
	8	UNUSED						002
	9	UNUSED						002
	10		W0814	0110	22		34-46-14	002
	11		W0814	0111	22		34-46-14	002
	12		W0814	0112	22		34-46-14	002

HOOKUP LIST

D280N032

91-21-51

Section D03500

Page 16

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03521		P065-00/ /		SOCKET-TERR WXR (continued)				002
	13		W0814	2509W	24		34-43-15	002
	14	UNUSED						002
	DED		W0814	2507Z			34-46-14	002
	DED		W0814	2509Z			34-43-15	002
	DED		W0814	2511Z			34-43-15	002
D03522		P5/ /		PLUG				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W2064	0328	18		30-42-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W2064	0320	18		30-42-11	ALL
	8		W2064	0323	22		30-43-11	ALL
	9		W2064	0324	22		30-43-11	ALL
	10		W2064	0326	18		30-42-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D03525		P065-00/ /		SOCKET-TERR WXR				002
	1		W0814	2512W	24		34-43-15	002
	2		W0814	2508W	24		34-46-14	002
	3		W0814	2510B	24		34-43-15	002
	4		W0814	2508B	24		34-46-14	002
	5		W0814	2512B	24		34-43-15	002
	6		W0814	0206	22		34-46-14	002
	7	UNUSED						002
	8	UNUSED						002
	9	UNUSED						002
	10		W0814	0210	22		34-46-14	002
	11		W0814	0211	22		34-46-14	002
	12		W0814	0212	22		34-46-14	002
	13		W0814	2510W	24		34-43-15	002
	14	UNUSED						002
	DED		W0814	2508Z			34-46-14	002
	DED		W0814	2510Z			34-43-15	002
	DED		W0814	2512Z			34-43-15	002

HOOKUP LIST

D280N032

91-21-51

Section D03500

Page 17

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03528		P005-00/ /		PLUG				001-099
D03528		P5/ /		PLUG				115-199
	1		W2078	0271	22		30-21-11	ALL
	2		W2078	0349	20		30-21-11	ALL
	3		W2078	0277	22		33-16-62	ALL
	4		W2078	0278	22		33-16-52	ALL
	5		W2078	0020	20		74-31-21	ALL
	6		W2078	0017	20		74-31-21	ALL
	7		W2078	0268	22		30-21-11	ALL
	8		W2078	0270	22		30-21-11	ALL
	9		W2078	0272	20		74-31-11	ALL
	10		W2078	0273	20		74-31-11	ALL
	11		W2078	0021	22		30-21-11	ALL
	12		W2078	0022	20		30-21-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	CAP	Y	W2078	0387	20		SPARE	ALL
	CAP	Y	W2078	0388	20		SPARE	ALL
	CAP	Y	W2078	0353	20		SPARE	115-199
	CAP	Y	W2078	0354	20		SPARE	115-199
	CAP	Y	W2078	0360	20		SPARE	115-199
	CAP	Y	W2078	0361	20		SPARE	115-199
	CAP	Y	W2078	0362	20		SPARE	115-199
	CAP	Y	W2078	0363	20		SPARE	115-199
	CAP	Y	W2078	0364	20		SPARE	115-199
D03530		P005-00/ /		PLUG				001-099
D03530		P5/ /		PLUG				115-199
	1		W2156	0096	20		33-13-31	ALL
	2		W2156	0097	20		33-13-31	ALL
	3		W2156	0089	22		33-16-62	ALL
	4		W2156	0085	22		33-16-52	ALL
	5		W2156	0042	20		74-31-21	ALL
	6		W2156	0043	20		74-31-21	ALL
	7		W2156	0091	22		30-21-11	ALL
	8		W2156	0090	22		30-21-11	ALL
	9		W2156	0048	20		74-31-11	ALL
	10		W2156	0049	20		74-31-11	ALL
	11		W2156	0092	22		30-21-11	ALL
	12		W2156	0145	20		30-21-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03500

Page 18

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03530		P005-00/ /		PLUG (continued)				001-099
D03530		P5/ /		PLUG (continued)				115-199
	13		W2156	0057	22		30-21-11	ALL
	14		W2156	0045	20		30-21-11	ALL
	15	UNUSED						ALL
	CAP	Y	W2156	0144	20		SPARE	ALL
	CAP	Y	W2156	0132	16		SPARE	115-199
	CAP	Y	W2156	0141	20		SPARE	115-199
	CAP	Y	W2156	0143	20		SPARE	115-199
	CAP	Y	W2156	0146	20		SPARE	115-199
D03532		P005-00/ /		PLUG				001-099
D03532		P5/ /		PLUG				115-199
	1		W2070	3014R	24		33-13-31	ALL
	2		W2070	3014Y	24		33-13-31	ALL
	3		W2070	0280	22		33-16-22	ALL
	4		W2070	0277	22		33-16-12	ALL
	5		W2070	0321	20		33-11-31	ALL
	6		W2070	3001B	24		33-13-61	ALL
	7		W2070	0068	20		52-51-11	ALL
	8		W2070	0065	20		52-51-11	ALL
	9		W2070	0066	20		52-51-11	ALL
	10		W2070	3001R	24		33-13-61	ALL
	11		W2070	3001Y	24		33-13-61	ALL
	12		W2070	0067	22		52-51-11	ALL
	13		W2070	0317	22		33-11-31	001-099
	13		W2070	0434	22		33-11-31	115-199
	14	UNUSED						ALL
	15		W2070	0318	22		33-11-31	001-099
	15		W2070	0435	22		33-11-31	115-199
	16		W2070	3014B	24		33-13-31	ALL
	17	UNUSED						ALL
	18		W2070	0276	24		33-16-12	ALL
	19		W2070	0278	20		33-16-12	ALL
	20	UNUSED						ALL
	21	UNUSED						001-099
	21	18	W2070	0803	18		SPARE	115-199
	22	UNUSED						001-099
	22		W2070	0800	20		SPARE	115-199
	23		W2070	0802	22		33-45-11	ALL
	24		W2070	0801	20		33-45-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03500

Page 19

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03532		P005-00/ /		PLUG (continued)				001-099
D03532		P5/ /		PLUG (continued)				115-199
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	CAP	Y	W2070	0417	20		SPARE	115-199
	CAP	Y	W2070	0418	20		SPARE	115-199
	CAP	Y	W2070	0446	20		SPARE	115-199
	CAP	Y	W2070	0447	20		SPARE	115-199
	CAP	Y	W2070	0448	20		SPARE	115-199
	CAP	Y	W2070	0467	20		SPARE	115-199
	CAP	Y	W2070	0468	20		SPARE	115-199
D03534		P005-00/ /		PLUG				001-099
D03534		P5/ /		PLUG				115-199
	1		W2156	0014	20		33-13-31	ALL
	2		W2156	0015	20		33-13-31	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W2156	0011	22		33-16-52	ALL
	6		W2156	0012	24		33-16-52	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W2156	0159	24		33-11-61	ALL
	12		W2156	0156	24		33-11-61	ALL
	13		W2156	0155	20		33-11-61	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03500

Page 20

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03534		P005-00/ /		PLUG (continued)				001-099
D03534		P5/ /		PLUG (continued)				115-199
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D03536		P5/ /		PLUG				115-199
	1	UNUSED						115-199
	2	UNUSED						115-199
	3	UNUSED						115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10		W2070	2008B	24		SPARE	115-199
	11		W2070	2009R	24		28-41-11	115-199
	12		W2070	2009B	24		28-41-11	115-199
	13		W2070	2010R	24		28-41-11	115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16		W2070	2003R	24		SPARE	115-199
	17	UNUSED						115-199
	18		W2070	2002R	24		SPARE	115-199
	19		W2070	2002B	24		SPARE	115-199
	20		W2070	2001B	24		SPARE	115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24		W2070	2008R	24		SPARE	115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D03500

Page 21

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03536		P5/ /		PLUG (continued)				115-199
	29		W2070	2010B	24		28-41-11	115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
	32		W2070	2003B	24		SPARE	115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38		W2070	0086	24		SPARE	115-199
	39		W2070	2001R	24		SPARE	115-199
D03538		P005-00/ /		PLUG				001-099
D03538		P5/ /		PLUG				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W2066	0305	22		33-16-12	ALL
	4		W2066	0306	22		33-16-12	ALL
	5		W2066	0081	24		36-11-12	ALL
	6	UNUSED						ALL
	7		W2066	0158	24		36-11-31	ALL
	8		W2066	0136	24		36-11-31	ALL
	9		W2066	0137	24		36-11-31	ALL
	10		W2066	0038	24		36-11-11	ALL
	11		W2066	0036	20		36-11-11	ALL
	12		W2066	0037	20		36-11-11	ALL
	13		W2066	0039	22		26-18-11	ALL
	14		W2066	0241	24		SPARE	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W2066	2003R	24		36-21-11	ALL
	18		W2066	2003B	24		36-21-11	ALL
	19		W2066	0139	24		36-21-11	ALL
	20		W2066	0140	22		36-21-11	ALL
	21		W2066	0143	20		36-21-11	ALL
	22		W2066	0013	24		36-22-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	CAP	Y	W2066	0508	20		SPARE	001-099
	CAP	Y	W2066	0509	20		SPARE	001-099

HOOKUP LIST

D280N032

91-21-51

Section D03500

Page 22

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03538		P005-00/ /		PLUG (continued)				001-099
D03538		P5/ /		PLUG (continued)				115-199
	CAP	Y	W2066	0539	20		SPARE	001-099
	CAP	Y	W2066	0511	20		SPARE	ALL
	CAP	Y	W2066	0537	20		SPARE	ALL
	CAP	Y	W2066	0530	20		SPARE	115-199
D03540		P005-00/ /		PLUG				001-099
D03540		P5/ /		PLUG				115-199
	1		W2070	0063	20		33-13-32	ALL
	2		W2070	0064	20		33-13-32	ALL
	3		W2070	0061	22		33-16-32	ALL
	4		W2070	0062	22		33-16-42	ALL
	5		W2070	0050	22		26-18-21	001-099
	5		W2070	0050	24		26-18-21	115-199
	6		W2070	0072	24		36-11-22	ALL
	7		W2070	2006R	24		36-21-11	ALL
	8		W2070	2006B	24		36-21-11	ALL
	9		W2070	0133	24		36-11-21	ALL
	10		W2070	0134	20		36-11-21	ALL
	11		W2070	0070	20		36-11-21	ALL
	12		W2070	0144	24		36-22-11	ALL
	CAP	Y	W2070	0419	20		SPARE	ALL
	CAP	Y	W2070	0454	20		SPARE	ALL
	CAP	Y	W2070	0426	20		SPARE	115-199
	CAP	Y	W2070	0453	20		SPARE	115-199
	CAP	Y	W2070	0469	20		SPARE	115-199
	CAP	Y	W2070	0470	20		SPARE	115-199
D03542		P005-00/ /		PLUG				001-099
D03542		P5/ /		PLUG				115-199
	1	UNUSED						ALL
	2		W2078	0069	24		36-11-41	ALL
	3		W2078	0001	24		36-11-41	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W2078	0175	24		36-11-41	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03500

Page 23

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03542		P005-00/ /		PLUG (continued)				001-099
D03542		P5/ /		PLUG (continued)				115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
D03544		P005-00/ /		PLUG				001-099
D03544		P5/ /		PLUG				115-199
	1		W2066	0383	20		33-13-32	ALL
	2		W2066	0384	20		33-13-32	ALL
	3		W2066	0313	22		33-16-12	ALL
	4		W2066	0314	22		33-16-12	ALL
	5		W2066	0141	22		29-11-22	ALL
	6		W2066	0174	22		29-11-22	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W2066	0346	22		29-11-22	ALL
	10		W2066	0397	22		29-11-11	ALL
	11		W2066	0396	22		29-11-11	ALL
	12		W2066	0395	22		29-11-11	ALL
	13		W2066	0096	22		29-32-21	ALL
	14	UNUSED						ALL
	15		W2066	0097	22		29-32-21	ALL
	16		W2066	0408	24		29-33-11	ALL
	17	16	W2066	0406	16		29-11-31	ALL
	18		W2066	0405	22		29-11-31	ALL
	19	16	W2066	0409	16		29-11-31	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W2066	0401	22		29-11-22	ALL
	25		W2066	0402	22		29-11-22	ALL
	26	UNUSED						ALL
	27		W2066	0120	24		24-51-71	001-099
	27		W2066	0120	22		24-51-71	115-199
	28		W2066	0117	24		24-51-71	001-099
	28		W2066	0117	22		24-51-71	115-199
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03500

Page 24

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03544		P005-00/ /		PLUG (continued)				001-099
D03544		P5/ /		PLUG (continued)				115-199
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	CAP	Y	W2066	0532	20		SPARE	ALL
	CAP	Y	W2066	0533	20		SPARE	ALL
D03546		P005-00/ /		PLUG				001-099
D03546		P5/ /		PLUG				115-199
	1		W2070	0209	22		29-11-31	ALL
	2		W2070	0179	22		29-11-31	ALL
	3		W2070	0301	22		33-16-32	ALL
	4		W2070	0302	22		33-16-42	ALL
	5		W2070	0112	22		29-11-12	ALL
	6		W2070	0113	22		29-11-12	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W2070	0358	22		29-11-12	ALL
	10		W2070	0173	22		29-11-21	ALL
	11		W2070	0174	22		29-11-21	ALL
	12		W2070	0172	22		29-11-21	ALL
	13		W2070	0059	22		29-32-11	ALL
	14		W2070	0058	22		29-32-11	ALL
	15		W2070	0060	24		29-33-11	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W2070	0169	22		29-11-12	ALL
	25		W2070	0170	22		29-11-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03500

Page 25

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03546		P005-00/ /		PLUG (continued)				001-099
D03546		P5/ /		PLUG (continued)				115-199
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	CAP	Y	W2070	0114	22		SPARE	ALL
	CAP	Y	W2070	0414	20		SPARE	ALL
	CAP	Y	W2070	0442	20		SPARE	ALL
	CAP	Y	W2070	0421	20		SPARE	115-199
	CAP	Y	W2070	0422	20		SPARE	115-199
	CAP	Y	W2070	0429	20		SPARE	115-199
	CAP	Y	W2070	0441	20		SPARE	115-199
	CAP	Y	W2070	0461	20		SPARE	115-199
	CAP	Y	W2070	0462	20		SPARE	115-199
D03548		P005-00/ /		PLUG				001-099
D03548		P5/ /		PLUG				115-199
	1		W2078	0025	22		29-11-31	ALL
	2		W2078	0024	22		29-11-31	ALL
	3		W2078	0251	22		33-16-52	ALL
	4		W2078	0252	22		33-16-52	ALL
	5		W2078	0058	22		29-32-31	ALL
	6		W2078	0059	22		29-32-31	ALL
	7		W2078	0085	24		29-33-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03500

Page 26

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03548		P005-00/ /		PLUG (continued)				001-099
D03548		P5/ /		PLUG (continued)				115-199
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	CAP	Y	W2078	0402	20		SPARE	ALL
	CAP	Y	W2078	0403	20		SPARE	ALL
D03550		P005-00/ /		PLUG				001-099
D03550		P5/ /		PLUG				115-199
	1		W2078	0455	22		30-11-11	ALL
	2		W2078	0454	22		30-11-11	ALL
	3		W2078	0461	22		30-11-11	ALL
	4	UNUSED						ALL
	5		W2078	0459	22		30-11-11	ALL
	6		W2078	0460	22		30-11-11	ALL
	7		W2078	0462	22		30-11-11	ALL
	8		W2078	0458	22		30-11-11	ALL
	9		W2078	0457	22		30-11-11	ALL
	10	UNUSED						ALL
	11		W2078	0456	22		30-11-11	ALL
	12		W2078	0463	22		30-11-11	ALL
D03552		P5/ /		PLUG				ALL
	1		W2064	0306	20		33-13-31	ALL
	2		W2064	0307	20		33-13-31	ALL
	3		W2064	0246	22		33-16-22	ALL
	4		W2064	0223	22		33-16-12	ALL
	5		W2064	0042	20		30-41-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03500

Page 27

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03552		P5/ /		PLUG (continued)				ALL
	6		W2064	0043	20		30-41-11	ALL
	7		W2064	0044	22		30-41-11	ALL
	8		W2064	0058	22		30-41-11	ALL
	9		W2064	0106	22		30-41-11	ALL
	10		W2064	0108	22		30-41-11	ALL
	11		W2064	0105	22		30-41-11	ALL
	12		W2064	0107	22		30-41-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D03554		P005-00/ /		PLUG				001-099
D03554		P5/ /		PLUG				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W2072	0091	22		33-16-42	ALL
	4		W2072	0090	22		33-16-42	ALL
	5		W2072	0080	22		30-41-12	001-099
	5		W2072	0080	20		30-41-12	115-199
	6		W2072	0079	22		30-41-12	001-099
	6		W2072	0079	20		30-41-12	115-199
	7	UNUSED						ALL
	8		W2072	0052	22		30-41-12	ALL
	9		W2072	0051	22		30-41-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03500

Page 28

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03554		P005-00/ /		PLUG (continued)				001-099
D03554		P5/ /		PLUG (continued)				115-199
	10		W2072	0008	22		30-41-12	ALL
	11		W2072	0006	22		30-41-12	ALL
	12		W2072	0007	22		30-41-12	ALL
	13		W2072	0009	22		30-41-12	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D03556		P005-00/ /		PLUG				001-099
D03556		P5/ /		PLUG				115-199
	1		W2066	0222	24		21-51-12	ALL
	2		W2066	0220	24		21-51-11	ALL
	3		W2066	0307	22		33-16-12	ALL
	4		W2066	0308	22		33-16-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03500

Page 29

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03556		P005-00/ /		PLUG (continued)				001-099
D03556		P5/ /		PLUG (continued)				115-199
	5		W2066	0221	24		21-51-12	ALL
	6		W2066	0105	20		21-51-11	ALL
	7		W2066	0233	24		21-51-23	ALL
	8		W2066	0232	24		21-51-23	ALL
	9		W2066	0231	24		21-51-23	ALL
	10		W2066	0510	24		21-25-11	ALL
	11		W2066	0230	24		21-51-23	ALL
	12		W2066	0229	20		21-51-23	ALL
	13		W2066	0195	24		21-25-11	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W2066	0150	24		21-25-11	ALL
	17	UNUSED						ALL
	18		W2066	0223	24		21-51-15	ALL
	19		W2066	0224	24		21-51-15	ALL
	20		W2066	0225	24		21-51-15	ALL
	21		W2066	0226	24		21-51-15	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W2066	0103	20		21-61-51	ALL
	25		W2066	0247	24		21-61-51	ALL
	26	UNUSED						ALL
	27		W2066	0248	24		21-61-51	ALL
	28		W2066	0244	24		21-61-51	ALL
	29	UNUSED						ALL
	30		W2066	0040	24		21-61-51	ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						001-099
	34		W2066	0246	24		SPARE	115-199
	35		W2066	0245	20		21-61-51	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03500

Page 30

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03556		P005-00/ /		PLUG (continued)				001-099
D03556		P5/ /		PLUG (continued)				115-199
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D03558		P005-00/ /		PLUG				001-099
D03558		P5/ /		PLUG				115-199
	1		W2070	0222	20		33-13-32	ALL
	2		W2070	0223	20		33-13-32	ALL
	3		W2070	0306	22		33-16-42	ALL
	4		W2070	0305	22		33-16-42	ALL
	5		W2070	0307	22		33-16-32	ALL
	6		W2070	0188	24		21-51-22	ALL
	7		W2070	0187	24		21-51-22	ALL
	8		W2070	0185	24		21-51-21	ALL
	9		W2070	0186	22		21-51-21	ALL
	10		W2070	0183	24		21-51-13	ALL
	11		W2070	0182	24		21-51-13	ALL
	12		W2070	0181	24		21-51-13	ALL
	13		W2070	0180	24		21-51-13	ALL
	14		W2070	0184	22		21-51-13	ALL
	15		W2070	0265	24		21-61-31	ALL
	16		W2070	0263	24		21-61-31	ALL
	17		W2070	0264	24		21-61-31	ALL
	18		W2070	3002R	24		21-61-31	ALL
	19		W2070	3002B	24		21-61-31	ALL
	20		W2070	3002Y	24		21-61-31	ALL
	21		W2070	0262	24		21-61-31	ALL
	22	UNUSED						ALL
	23		W2070	0427	24		21-25-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03500

Page 31

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03558		P005-00/ /		PLUG (continued)				001-099
D03558		P5/ /		PLUG (continued)				115-199
	24		W2070	0154	24		21-25-11	ALL
	25		W2070	0151	24		21-25-11	ALL
	26	UNUSED						ALL
	27		W2070	0189	24		21-51-25	ALL
	28		W2070	0190	24		21-51-25	ALL
	29		W2070	0191	24		21-51-25	ALL
	30		W2070	0192	24		21-51-25	ALL
	31	UNUSED						ALL
	32		W2070	0196	24		21-61-11	ALL
	33		W2070	0195	24		21-61-11	ALL
	34		W2070	0205	24		21-61-11	ALL
	35		W2070	3012R	24		21-61-11	ALL
	36		W2070	3012B	24		21-61-11	ALL
	37		W2070	3012Y	24		21-61-11	ALL
	38		W2070	0204	24		21-61-11	ALL
	39		W2070	0212	24		21-61-21	ALL
	40		W2070	0207	24		21-61-21	ALL
	41		W2070	0208	24		21-61-21	ALL
	42		W2070	3003R	24		21-61-21	ALL
	43		W2070	3003B	24		21-61-21	ALL
	44		W2070	3003Y	24		21-61-21	ALL
	45		W2070	0206	24		21-61-21	ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D03562		P005-00/ /		PLUG				001-099
D03562		P5/ /		PLUG				115-199
	1		W2156	0009	22		27-41-11	ALL
	2		W2156	0046	20		27-61-12	ALL
	3		W2156	0002	22		22-24-11	ALL
	4	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03500

Page 32

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03562		P005-00/ /		PLUG (continued)				001-099
D03562		P5/ /		PLUG (continued)				115-199
	5		W2156	0003	22		33-16-52	ALL
	6		W2156	0004	22		33-16-62	ALL
	7	UNUSED						ALL
	8		W2156	0001	22		27-21-12	ALL
	9		W2156	0008	22		27-41-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D03564		P5/ /		PLUG				ALL
	1		W2064	0001	24		30-31-11	ALL
	2		W2064	0325	24		30-31-11	ALL
	3		W2064	0040	24		30-33-11	ALL
	4	UNUSED						ALL
	5		W2064	0218	22		33-16-12	ALL
	6		W2064	0247	22		33-16-22	ALL
	7	UNUSED						ALL
	8		W2064	0018	24		30-32-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D03566		P005-00/ /		PLUG				001-099
D03566		P5/ /		PLUG				115-199
	1	UNUSED						ALL
	2	UNUSED						001-099
	2		W2072	0016	24		SPARE	115-199
	3		W2072	0086	22		33-16-32	ALL
	4		W2072	0088	22		33-16-42	ALL
	5		W2072	0004	22		27-62-11	001-099
	5		W2072	0004	20		27-62-11	115-199
	6		W2072	0040	24		30-31-12	ALL
	7		W2072	0039	24		30-31-12	ALL
	8		W2072	0066	24		52-71-11	ALL
	9		W2072	0063	24		52-71-11	ALL
	10		W2072	0064	24		52-71-11	ALL
	11		W2072	0065	24		52-71-11	ALL
	12		W2072	0034	22		32-42-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03500

Page 33

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03566		P005-00/ /		PLUG (continued)				001-099
D03566		P5/ /		PLUG (continued)				115-199
	13		W2072	0089	22		33-16-42	ALL
	14	UNUSED						ALL
	15		W2072	0017	22		33-16-42	ALL
	16		W2072	0020	22		33-16-42	ALL
	17		W2072	0044	22		27-61-12	ALL
	18		W2072	0002	24		30-32-11	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D03572		P005-00/ /		PLUG				001-099
D03572		P5/ /		PLUG				115-199
	1		W4210	0028	20		33-13-31	ALL
	2		W4210	0029	20		33-13-31	ALL
	3		W4210	0077	22		33-16-62	ALL
	4		W4210	0076	22		33-16-52	ALL
	5		W4210	0063	20		74-31-11	001-099
	5		W4210	0059	20		74-31-11	115-199
	6		W4210	0062	20		74-31-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03500

Page 34

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03572		P005-00/ /		PLUG (continued)				001-099
D03572		P5/ /		PLUG (continued)				115-199
	7	18	W4210	0131	18		29-21-31	ALL
	8		W4210	0130	22		29-21-31	001-099
	8	18	W4210	0130	18		29-21-31	115-199
	9	UNUSED						ALL
	10	18	W4210	0091	18		73-21-11	ALL
	11		W4210	0066	20		80-11-11	ALL
	12		W4210	0162	20		74-31-11	ALL
	13		W4210	0061	20		74-31-11	ALL
	14		W4210	0064	20		74-31-11	001-099
	14		W4210	0058	20		74-31-11	115-199
	15		W4210	0067	20		80-11-11	ALL
	16		W4210	0065	20		80-11-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W4210	0069	24		80-11-11	ALL
	20		W4210	0132	22		29-21-31	ALL
	21	UNUSED						ALL
	22		W4210	0148	24		73-21-11	ALL
	23		W4210	0092	20		73-21-11	ALL
	24		W4210	0093	24		73-21-11	ALL
	25		W4210	0149	24		73-21-11	ALL
	26	18	W4210	0090	18		73-21-11	ALL
	27	UNUSED						ALL
	28		W4210	0145	20		80-11-11	ALL
	29		W4210	0154	20		74-31-11	001-099
	29	UNUSED						115-199
	30		W4210	0068	20		80-11-11	ALL
	31		W4210	0153	20		74-31-11	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W4210	0133	22		29-21-31	ALL
	41	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03500

Page 35

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03574 D03574		P005-00/ / P-5/ /		PLUG PLUG				001-099 115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W4220	0121	22		33-16-62	ALL
	4		W4220	0069	22		33-16-52	ALL
	5		W4220	0097	20		74-31-21	001-099
	5		W4220	0051	20		74-31-21	115-199
	6		W4220	0054	20		74-31-21	ALL
	7		W4220	0058	20		80-11-21	ALL
	8	UNUSED						ALL
	9		W4220	0060	20		80-11-21	ALL
	10		W4220	0170	20		74-31-21	ALL
	11		W4220	0053	20		74-31-21	ALL
	12		W4220	0059	20		80-11-21	ALL
	13		W4220	0057	20		80-11-21	ALL
	14		W4220	0056	20		74-31-21	001-099
	14		W4220	0050	20		74-31-21	115-199
	15	UNUSED						ALL
	16		W4220	0061	24		80-11-21	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	18	W4220	0079	18		73-21-21	ALL
	21	UNUSED						ALL
	22		W4220	0144	24		73-21-21	001-099
	22		W4220	0136	24		73-21-21	115-199
	23	UNUSED						ALL
	24		W4220	0148	24		73-21-21	001-099
	24		W4220	0137	24		73-21-21	115-199
	25		W4220	0082	24		73-21-21	ALL
	26		W4220	0081	20		73-21-21	ALL
	27	UNUSED						ALL
	28		W4220	0125	20		80-11-21	ALL
	29		W4220	0146	20		74-31-21	001-099
	29	UNUSED						115-199
	30	UNUSED						ALL
	31		W4220	0145	20		74-31-21	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03500

Page 36

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03574		P005-00/ /		PLUG (continued)				001-099
D03574		P-5/ /		PLUG (continued)				115-199
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	18	W4220	0080	18		73-21-21	ALL
	39	UNUSED						ALL
D03576		P005-00/ /		PLUG				001-099
D03576		P5/ /		PLUG				115-199
	1		W2080	0022	20		33-13-32	ALL
	2		W2080	0023	20		33-13-32	ALL
	3		W2080	0024	22		33-16-62	ALL
	4		W2080	0025	22		33-16-52	ALL
	5		W2080	0031	22		49-61-11	ALL
	6	UNUSED						001-099
	6		W2080	0026	22		26-15-12	115-199
	7	UNUSED						001-099
	7		W2080	0010	22		49-61-11	115-199
	8	UNUSED						001-099
	8		W2080	0009	22		49-61-11	115-199
	9	UNUSED						001-099
	9		W2080	0011	22		49-61-11	115-199
	10	UNUSED						001-099
	10		W2080	0013	22		49-61-11	115-199
	11		W2080	0013	22		49-61-11	001-099
	11		W2080	0012	22		49-61-11	115-199
	12	UNUSED						ALL
	13	UNUSED						001-099
	14	UNUSED						001-099
	15		W2080	0009	22		49-61-11	001-099
	16		W2080	0010	22		49-61-11	001-099
	17	UNUSED						001-099
	18	UNUSED						001-099
	19		W2080	0011	22		49-61-11	001-099
	20	UNUSED						001-099
	21	UNUSED						001-099
	22		W2080	0019	24		36-11-41	001-099
	23		W2080	0012	22		49-61-11	001-099
	24	UNUSED						001-099
	25	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D03500

Page 37

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03576		P005-00/ /		PLUG (continued)				001-099
D03576		P5/ /		PLUG (continued)				115-199
	26	UNUSED						001-099
	27		W2080	0026	22		26-15-12	001-099
	28	UNUSED						001-099
	29	UNUSED						001-099
	30	UNUSED						001-099
	31	UNUSED						001-099
	CAP	Y	W2080	0032	20		SPARE	001-099
	CAP	Y	W2080	0033	20		SPARE	001-099
	CAP	Y	W2080	0035	20		SPARE	ALL
	CAP	Y	W2080	0034	20		SPARE	115-199
D03578		P005-00/ /		PLUG				001-099
D03578		P5/ /		PLUG				115-199
	1		W2066	0415	20		33-13-32	ALL
	2		W2066	0416	20		33-13-32	ALL
	3		W2066	0092	24		21-65-11	ALL
	4		W2066	0252	24		21-65-11	ALL
	5		W2066	2011B	24		21-65-11	ALL
	6		W2066	2011R	24		21-65-11	ALL
	7		W2066	2012B	24		21-65-11	ALL
	8		W2066	2012R	24		21-65-11	ALL
	9		W2066	2013B	24		21-65-11	ALL
	10		W2066	2013R	24		21-65-11	ALL
	11		W2066	0251	24		21-65-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D03580		P005-00/ /		PLUG				ALL
	1		W4230	0032	20		74-31-11	ALL
	2		W4230	0030	20		74-31-11	ALL
	3		W4230	0031	20		74-31-11	ALL
	4		W4230	0042	20		74-31-11	001-099
	4	UNUSED						115-199
	5		W4230	0041	20		74-31-11	ALL
	6	UNUSED						001-099
	7	UNUSED						001-099
	8	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D03500

Page 38

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03580		P005-00/ /		PLUG (continued)				ALL
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
D03582		P005-00/ /		PLUG				ALL
	1		W4234	0029	20		74-31-21	ALL
	2		W4234	0027	20		74-31-21	ALL
	3		W4234	0028	20		74-31-21	ALL
	4		W4234	0042	20		74-31-21	001-099
	4	UNUSED						115-199
	5		W4234	0041	20		74-31-21	ALL
	6	UNUSED						001-099
	7	UNUSED						001-099
	8	UNUSED						001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
D03584		P5/ /		PLUG				115-199
	1	UNUSED						115-199
	2	UNUSED						115-199
	3	UNUSED						115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
	8	UNUSED						115-199
	9	18	W2066	0288	18		28-43-11	115-199
	10	UNUSED						115-199
	11		W2066	0289	22		28-43-11	115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	CAP	Y	W2066	0540	20		SPARE	115-199
	CAP	Y	W2066	0541	20		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D03500

Page 39

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03586 D03586		P005-00/ / P5/ /		PLUG PLUG				001-099 115-199
	1		W2078	0508	24		36-11-31	ALL
	2		W2078	0509	24		36-11-31	ALL
	3		W2078	0424	24		36-11-31	ALL
	4		W2078	0501	22		33-16-52	ALL
	5	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03500

Page 40 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03702		P061-00/ /		PLUG				ALL
	1	UNUSED						ALL
	2		W2066	0336	24		34-46-11	ALL
	3		W2066	0337	22		34-46-11	ALL
	4		W2066	0018	22		34-12-12	ALL
	5		W2066	0043	22		34-12-12	ALL
	6		W2066	0058	22		30-41-11	ALL
	7		W2066	0057	22		30-41-11	ALL
	8		W2066	0237	24		27-32-21	ALL
	9		W2066	0339	22		27-32-21	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W2066	2004B	24		28-41-14	ALL
	14	UNUSED						ALL
	15		W2066	2004R	24		28-41-14	ALL
	16		W2066	0349	22		24-25-11	ALL
	17		W2066	0348	22		24-25-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W2066	0545	22		26-18-11	ALL
	32		W2066	0544	22		26-18-11	ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						001-099
	35		W2066	0289	22		28-43-11	115-199
	36	UNUSED						001-099
	36		W2066	0290	22		28-43-11	115-199
	37	UNUSED						ALL
	38	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03700

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03702		P061-00/ /		PLUG (continued)				ALL
	39	UNUSED						ALL
	40		W2066	0338	24		22-21-21	ALL
	41		W2066	0056	22		22-21-21	ALL
	CAP	Y	W2066	0060	24		34-33-11	ALL
	CAP	Y	W2066	0094	22		SPARE	ALL
	CAP	Y	W2066	0505	20		SPARE	ALL
	CAP	Y	W2066	0531	20		SPARE	ALL
	CAP	Y	W2066	0538	20		SPARE	ALL
D03704		P061-00/ /		PLUG				ALL
	1		W2070	0037	20		22-21-11	ALL
	2		W2070	0033	22		22-21-11	ALL
	3	UNUSED						ALL
	4		W2070	0528	22		34-12-22	ALL
	5		W2070	0527	24		34-12-22	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W2070	0420	24		30-32-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W2070	0242	22		27-32-11	ALL
	17		W2070	0243	20		27-32-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W2070	0035	20		22-21-11	ALL
	24		W2070	0087	24		30-32-11	ALL
	25	UNUSED						ALL
	26		W2070	0512	22		24-25-11	ALL
	27		W2070	0511	22		24-25-11	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03700

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03704		P061-00/ /		PLUG (continued)				ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36		W2070	0034	22		30-41-12	001-099
	36		W2070	0034	20		30-41-12	115-199
	37		W2070	0009	22		30-41-12	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	CAP	Y	W2070	0451	20		SPARE	001-099
	CAP	Y	W2070	0036	20		34-33-21	ALL
	CAP	Y	W2070	0456	20		SPARE	ALL
	CAP	Y	W2070	0472	20		SPARE	ALL
	CAP	Y	W2070	0423	20		SPARE	115-199
	CAP	Y	W2070	0457	20		SPARE	115-199
	CAP	Y	W2070	0471	20		SPARE	115-199
	CAP	Y	W2070	0473	20		SPARE	115-199
D03706		P061-00/ /		PLUG				001-099
D03706		P61/ /		PLUG				115-199
	1	UNUSED						001-002, 115-199
	1		W2078	0430	22		24-25-11	003-099
	2		W2078	0430	22		24-25-11	001-002, 115-199
	2	UNUSED						003-099
	3		W2078	0431	20		24-25-11	001-002
	3		W2078	0431	22		24-25-11	003-099, 115-199
	4	UNUSED						ALL
	5		W2078	0436	24		24-31-11	001-002, 115-199
	5		W2078	0436	24		24-25-11	003-099
	6		W2078	0437	22		24-31-11	001-002, 115-199
	6		W2078	0437	22		24-25-11	003-099
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W2078	0066	24		31-51-42	ALL
	11		W2078	0177	22		31-51-42	ALL
	12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03700

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03706		P061-00/ /		PLUG (continued)				001-099
D03706		P61/ /		PLUG (continued)				115-199
	13	UNUSED						ALL
	14		W2078	0065	24		31-51-41	ALL
	15		W2078	0176	22		31-51-41	ALL
	16		W2078	0466	24		30-32-11	ALL
	17		W2078	0465	24		30-32-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W2078	0355	24		21-58-12	ALL
	22		W2078	0182	20		21-58-12	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W2078	0453	22		30-11-11	ALL
	29		W2078	0467	22		30-11-11	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W2078	0181	24		21-58-12	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41		W2078	0180	24		21-58-12	ALL
	CAP	Y	W2078	0015	24		34-33-31	ALL
D03708		P061-00/ /		PLUG				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W2066	0041	22		33-16-53	001-003, 115-199
	3	UNUSED						004-099
	4		W2066	0302	22		33-16-13	ALL
	5		W2066	0020	24		24-11-11	ALL
	6		W2066	0107	24		24-11-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03700

Page 4

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03708		P061-00/ /		PLUG (continued)				ALL
	7		W2066	0027	22		24-22-11	001-003, 115-199
	7	UNUSED						004-099
	8		W2066	0026	22		24-22-11	ALL
	9		W2066	0028	22		24-22-11	001-003, 115-199
	9	UNUSED						004-099
	10		W2066	0255	22		27-23-11	ALL
	11		W2066	0254	22		27-23-11	ALL
	12		W2066	0253	22		27-23-11	ALL
	13		W2066	0011	22		27-23-11	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						001-099
	20		W2066	2019B	22		29-11-12	115-199
	21	UNUSED						001-099
	21		W2066	2019R	22		29-11-12	115-199
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D03710		P061-00/ /		PLUG				ALL
	1		W2070	0286	22		33-16-33	ALL
	2		W2070	0298	22		33-16-43	ALL
	3		W2070	0312	22		33-16-63	001-003, 115-199
	3	UNUSED						004-099
	4		W2070	0275	22		33-16-13	001-003, 115-199
	4	UNUSED						004-099
	5	UNUSED						001-099
	5		W2070	0104	24		SPARE	115-199
	6	UNUSED						001-099
	6		W2070	0092	20		SPARE	115-199
	7		W2070	0005	22		27-23-11	ALL
	8		W2070	0003	22		27-23-11	ALL
	9		W2070	0006	22		27-23-11	ALL
	10		W2070	0004	22		27-23-11	ALL
	11		W2070	0128	22		24-22-21	001-003, 115-199
	11	UNUSED						004-099

HOOKUP LIST

D280N032

91-21-51

Section D03700

Page 5

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03710		P061-00/ /		PLUG (continued)				ALL
	12		W2070	0002	22		24-22-21	001-003, 115-199
	12	UNUSED						004-099
	13		W2070	0001	22		24-22-21	001-003, 115-199
	13	UNUSED						004-099
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						001-099
	20		W2070	2034B	22		29-11-22	115-199
	21	UNUSED						001-099
	21		W2070	2034R	22		29-11-22	115-199
	22		W2070	0040	20		24-22-21	001-003, 115-199
	22	UNUSED						004-099
	23	UNUSED						ALL
	24	UNUSED						ALL
	CAP	Y	W2070	0104	24		SPARE	001-099
D03712		P61/ /		PLUG				ALL
	1	UNUSED						001-099
	1		W2064	2010B	22		29-11-31	115-199
	2	UNUSED						001-099
	2		W2064	2010R	22		29-11-31	115-199
	3		W2064	0130	22		33-16-22	ALL
	4		W2064	0131	22		33-16-13	ALL
	5		W2064	0129	22		27-23-11	ALL
	6		W2064	0128	22		27-23-11	ALL
	7		W2064	0333	22		27-23-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W2064	0127	22		27-23-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03700

Page 6

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03714		P061-00/ /		PLUG				001-099
D03714		P61/ /		PLUG				115-199
	1		W2080	0018	22		29-22-11	ALL
	2		W2080	0044	22		29-22-11	ALL
	3		W2080	0045	22		29-22-11	ALL
	4		W2080	0017	22		29-22-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W2080	0006	24		24-22-41	001-003, 115-199
	7	UNUSED						004-099
	8		W2080	0004	24		24-22-41	001-003, 115-199
	8	UNUSED						004-099
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W2080	0042	22		29-22-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W2080	0039	22		29-22-11	ALL
	15		W2080	0038	22		29-22-11	ALL
	16		W2080	0040	22		29-22-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W2080	0003	24		24-22-41	001-003, 115-199
	20	UNUSED						004-099
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W2080	0043	22		29-22-11	ALL
	24		W2080	0041	22		29-22-11	ALL
	CAP	Y	W2080	0036	20		SPARE	ALL
	CAP	Y	W2080	0037	20		SPARE	115-199
D03734		P061-00/ /		PLUG				001-099
D03734		P61/ /		PLUG				115-199
	1	UNUSED						ALL
	2		W2078	0290	20		26-21-11	ALL
	3		W2078	0285	20		26-21-11	ALL
	4		W2078	0286	20		26-21-11	ALL
	5		W2078	0289	20		26-21-11	ALL
	6		W2078	0292	20		26-23-11	ALL
	7	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03700

Page 7

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03734		P061-00/ /		PLUG (continued)				001-099
D03734		P61/ /		PLUG (continued)				115-199
	8		W2078	0288	20		26-21-11	ALL
	9		W2078	0287	20		26-21-11	ALL
	10		W2078	0293	20		26-23-11	ALL
	11		W2078	0294	20		26-23-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	CAP	Y	W2078	0356	20		SPARE	ALL
	CAP	Y	W2078	0371	20		SPARE	ALL
	CAP	Y	W2078	0372	20		SPARE	ALL
	CAP	Y	W2078	0392	20		SPARE	ALL
	CAP	Y	W2078	0393	20		SPARE	ALL
	CAP	Y	W2078	0370	20		SPARE	115-199
	CAP	Y	W2078	0394	20		SPARE	115-199
D03736		P061-00/ /		PLUG				001-099
D03736		P61/ /		PLUG				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W2156	0115	20		26-21-11	ALL
	4		W2156	0114	20		26-21-11	ALL
	5		W2156	0113	20		26-21-11	ALL
	6		W2156	0121	20		26-23-11	ALL
	7		W2156	0119	20		26-22-21	ALL
	8		W2156	0116	20		26-21-11	ALL
	9		W2156	0117	20		26-21-11	ALL
	10		W2156	0123	22		26-23-11	001-099
	10		W2156	0123	20		26-23-11	115-199
	11		W2156	0122	22		26-23-11	001-099
	11		W2156	0122	20		26-23-11	115-199
	12		W2156	0118	20		26-22-21	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03700

Page 8 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03804		440/263/R360		PLUG-				ALL
	1		W3824	0005	22		33-21-41	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W3824	0001	18		33-21-41	ALL
	5		W3824	0002	20		33-21-41	ALL
	6		W3824	0006	20		33-21-41	ALL
D03806		440/263/R60		RCPT-				ALL
	1		W3824	0015	22		33-21-41	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W3824	0011	18		33-21-41	ALL
	5		W3824	0012	20		33-21-41	ALL
	6		W3824	0016	20		33-21-41	ALL
D03808		640/268/R60		PLUG-				ALL
	1		W3824	0025	22		33-21-41	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W3824	0021	18		33-21-41	ALL
	5		W3824	0022	20		33-21-41	ALL
	6		W3824	0026	20		33-21-41	ALL
D03810		640/268/R60		RCPT-				ALL
	1		W3824	0035	22		33-21-41	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W3824	0031	18		33-21-41	ALL
	5		W3824	0032	20		33-21-41	ALL
	6		W3824	0036	20		33-21-41	ALL
D03812		440/268/L60		RCPT-				ALL
	1		W3724	0005	22		33-21-32	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W3724	0001	18		33-21-32	ALL
	5		W3724	0002	20		33-21-32	ALL
	6		W3724	0006	20		33-21-32	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03800

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03814		440/268/L60		PLUG-				ALL
	1		W3724	0015	22		33-21-32	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W3724	0011	18		33-21-32	ALL
	5		W3724	0012	20		33-21-32	ALL
	6		W3724	0016	20		33-21-32	ALL
D03816		640/268/L60		RCPT-				ALL
	1		W3724	0025	22		33-21-32	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W3724	0021	18		33-21-32	ALL
	5		W3724	0022	20		33-21-32	ALL
	6		W3724	0026	20		33-21-32	ALL
D03818		640/268/L60		PLUG-				ALL
	1		W3724	0035	22		33-21-32	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W3724	0031	18		33-21-32	ALL
	5		W3724	0032	20		33-21-32	ALL
	6		W3724	0036	20		33-21-32	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03800

Page 2 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03925		E002-04/ /		PLUG-				ALL
	1		W4471	0554	22		34-12-61	ALL
	2		W4471	0553	22		34-12-61	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W4471	0555	22		34-12-61	ALL
	6		W4471	0556	22		34-12-61	ALL
	7		W4471	2512R	24		34-12-61	ALL
	8		W4471	2511R	24		34-12-61	ALL
	9		W4471	2513R	24		34-12-61	ALL
	10		W4471	2512B	24		34-12-61	ALL
	11		W4471	2511B	24		34-12-61	ALL
	12		W4471	2513B	24		34-12-61	ALL
	13		W4471	0558	22		34-12-61	ALL
	14		W4471	0557	22		34-12-61	ALL
	15		W4471	0559	22		34-12-61	ALL
	16		W4471	0562	22		34-12-61	ALL
	17		W4471	0561	22		34-12-61	ALL
	18		W4471	0560	22		34-12-61	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03900

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03925		E002-04/ /		PLUG- (continued)				ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	DED		W4471	2511Z			34-12-61	ALL
	DED		W4471	2512Z			34-12-61	ALL
	DED		W4471	2513Z			34-12-61	ALL
D03927		E002-04/ /		PLUG-				ALL
	1		W4473	0544	22		34-12-62	ALL
	2		W4473	0543	22		34-12-62	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W4473	0535	22		34-12-62	ALL
	6		W4473	0536	22		34-12-62	ALL
	7		W4473	2509R	24		34-12-62	ALL
	8		W4473	2510R	24		34-12-62	ALL
	9		W4473	2511R	24		34-12-62	ALL
	10		W4473	2509B	24		34-12-62	ALL
	11		W4473	2510B	24		34-12-62	ALL
	12		W4473	2511B	24		34-12-62	ALL
	13		W4473	0538	22		34-12-62	ALL
	14		W4473	0539	22		34-12-62	ALL
	15		W4473	0537	22		34-12-62	ALL
	16		W4473	0542	22		34-12-62	ALL
	17		W4473	0540	22		34-12-62	ALL
	18		W4473	0541	22		34-12-62	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D03900

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D03927		E002-04/ /		PLUG- (continued)				ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	DED		W4473	2509Z			34-12-62	ALL
	DED		W4473	2510Z			34-12-62	ALL
	DED		W4473	2511Z			34-12-62	ALL

HOOKUP LIST

D280N032

91-21-51

Section D03900

Page 3 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04006		P037-00/ /		RELAY SOCKET (PLATE 'B')				001-099
D04006		P37/ /		RELAY SOCKET (PLATE 'B')				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1270	0450	24		36-11-41	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1270	0458	24		36-11-41	ALL
	7		W1270	0466	24		36-11-41	ALL
	8		W1270	0459	24		36-11-41	ALL
D04008		P037-00/ /		RELAY SOCKET (PLATE 'B')				001-099
D04008		P37/ /		RELAY SOCKET (PLATE 'B')				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1270	0433	20		36-11-21	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1270	0451	24		36-11-41	ALL
	7		W1270	0296	20		36-11-21	001-099
	7		W1270	0492	20		36-11-21	115-199
	8		W1270	0549	24		36-11-41	ALL
D04010P		P006-04/ /		PLUG-				ALL
	1		W0074	0718	24		24-51-72	ALL
	2		W0074	0710	22		24-51-72	ALL
	3		W0074	0713	22		24-51-72	ALL
	4		W0064	0601	22		24-51-72	ALL
	5		W0074	0717	24		24-51-72	ALL
	6		W0064	0606	16		24-51-72	ALL
	7		W0064	0607	22		24-51-72	ALL
	8		W0074	0711	22		24-51-72	ALL
	9		W0074	0712	22		24-51-72	ALL
	10		W0074	0715	22		24-51-72	ALL
	11	UNUSED						ALL
	12		W0064	0602	22		24-51-72	ALL
	13		W0064	0603	22		24-51-72	ALL
	14		W0074	0714	22		24-51-72	ALL
	15		W0074	0716	22		24-51-72	ALL
	16		W0064	0605	16		24-51-72	ALL
	17		W0064	0604	16		24-51-72	ALL

HOOKUP LIST

D280N032

91-21-51

Section D04000

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04010P		P006-04/ /		PLUG- (continued)				ALL
	18		W0064	0609	20		24-51-72	ALL
	19		W0064	0608	22		24-51-72	ALL
D04012		623/188/R54		CREW OXYGEN PRESSURE IND.				115-199
	1		W4473	2005R	22		35-11-13	115-199
	2		W4473	2005B	22		35-11-13	115-199
	3	UNUSED						115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
D04014		MULTI/ /		PLUG-				001-099
D04014		355/288/L14		PLUG-				115-199
	A1	UNUSED						ALL
	A2		W0614	0001	20		33-22-11	ALL
	A3		W0614	0031	20		33-22-11	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0614	0005	22		33-22-11	ALL
	X2		W0614	0032	20		33-22-11	ALL
D04015		P037-00/ /		RELAY SOCKET (PLATE B)				010-099
	1		W1270	5030B	22		31-31-41	010-099
	2		W1270	5031R	22		31-31-41	010-099
	3		W1270	6540	22		31-31-41	010-099
	4		W1270	5032R	22		31-31-41	010-099
	5		W1270	5030R	22		31-31-41	010-099
	6		W1270	5031B	22		31-31-41	010-099
	7		W1270	6571	22		31-31-41	010-099
	8		W1270	5032B	22		31-31-41	010-099
D04016		MULTI/ /		PLUG-				001-099
D04016		355/288/L14		PLUG-				115-199
	1		W0614	0011	20		33-22-11	ALL
	2		W0614	0012	20		33-22-11	ALL
	3		W0614	0013	22		33-22-11	ALL
	4		W0614	0014	20		33-22-11	ALL
	5		W0614	B-A			33-22-11	ALL
	6		W0614	B-B			33-22-11	ALL
	7		W0614	B-C			33-22-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D04000

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04016		MULTI/ /		PLUG- (continued)				001-099
D04016		355/288/L14		PLUG- (continued)				115-199
	8		W0614	B-D			33-22-11	ALL
	9		W0614	A-A			33-22-11	ALL
	10		W0614	A-B			33-22-11	ALL
	11		W0614	A-C			33-22-11	ALL
	12		W0614	A-D			33-22-11	ALL
D04018		MULTI/ /		PLUG-				001-099
D04018		355/288/L14		PLUG-				115-199
	1		W0614	0021	20		33-22-11	ALL
	2		W0614	0022	20		33-22-11	ALL
	3		W0614	0023	22		33-22-11	ALL
	4		W0614	0024	20		33-22-11	ALL
	5		W0614	D-A			33-22-11	ALL
	6		W0614	D-B			33-22-11	ALL
	7		W0614	D-C			33-22-11	ALL
	8		W0614	D-D			33-22-11	ALL
	9		W0614	C-A			33-22-11	ALL
	10		W0614	C-B			33-22-11	ALL
	11		W0614	C-C			33-22-11	ALL
	12		W0614	C-D			33-22-11	ALL
D04020		P006-00/ /		RCPT-SERVICE OUTLET,28V DC				ALL
	X	C	W0070	0010	18		25-29-11	ALL
	Y	C	W0070	0009	18		25-29-11	ALL
D04028		347/289/R019		PLUG-				ALL
	1		W0608	0011	20		33-27-11	ALL
	2		W0608	0012	20		33-27-11	ALL
	3		W0608	0013	22		33-27-11	ALL
	4		W0608	0014	20		33-27-11	ALL
	5		W0608	B-A			33-27-11	ALL
	6		W0608	B-B			33-27-11	ALL
	7		W0608	B-C			33-27-11	ALL
	8		W0608	B-D			33-27-11	ALL
	9		W0608	A-A			33-27-11	ALL
	10		W0608	A-B			33-27-11	ALL
	11		W0608	A-C			33-27-11	ALL
	12		W0608	A-D			33-27-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D04000

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04030		347/289/R019		PLUG-				ALL
	1		W0608	0021	20		33-27-11	ALL
	2		W0608	0022	20		33-27-11	ALL
	3		W0608	0023	22		33-27-11	ALL
	4		W0608	0024	20		33-27-11	ALL
	5		W0608	D-A			33-27-11	ALL
	6		W0608	D-B			33-27-11	ALL
	7		W0608	D-C			33-27-11	ALL
	8		W0608	D-D			33-27-11	ALL
	9		W0608	C-A			33-27-11	ALL
	10		W0608	C-B			33-27-11	ALL
	11		W0608	C-C			33-27-11	ALL
	12		W0608	C-D			33-27-11	ALL
D04036		1665/290/0		PLUG-				ALL
	1		W0612	0011	20		33-27-31	ALL
	2		W0612	0012	20		33-27-31	ALL
	3		W0612	0003	22		33-27-31	ALL
	4		W0612	0014	20		33-27-31	ALL
	5		W0612	B-A			33-27-31	ALL
	6		W0612	B-B			33-27-31	ALL
	7		W0612	B-C			33-27-31	ALL
	8		W0612	B-D			33-27-31	ALL
	9		W0612	A-A			33-27-31	ALL
	10		W0612	A-B			33-27-31	ALL
	11		W0612	A-C			33-27-31	ALL
	12		W0612	A-D			33-27-31	ALL
D04038		347/289/R019		RCPT-				ALL
	A1	UNUSED						ALL
	A2		W0608	0001	20		33-27-11	ALL
	A3		W0608	0041	20		33-27-11	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0608	0005	22		33-27-11	ALL
	X2		W0608	0042	20		33-27-11	ALL
D04040		347/289/R019		SOCKET-				ALL
	A1	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D04000

Page 4

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04040		347/289/R019		SOCKET- (continued)				ALL
	A2		W0608	0013	22		33-27-11	ALL
	A3		W0608	0033	22		33-27-11	ALL
	B1	UNUSED						ALL
	B2		W0608	0031	20		33-27-11	ALL
	B3		W0608	0021	20		33-27-11	ALL
	X1		W0608	0006	22		33-27-11	ALL
	X2		W0608	0032	20		33-27-11	ALL
D04044		1669/290/L4		RCPT-				ALL
	A1	UNUSED						ALL
	A2		W0612	0001	20		33-27-31	ALL
	A3		W0612	0011	20		33-27-31	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0612	0005	22		33-27-31	ALL
	X2		W0612	0022	20		33-27-31	ALL
D04046		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D04046		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	1		W1270	6025	24		31-31-62	001-099
	1		W1270	6025	22		31-31-32	115-199
	2		W1270	6026	24		31-31-62	001-099
	2		W1270	6026	22		31-31-32	115-199
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1270	6031	22		32-09-12	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W1270	6032	22		32-09-12	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D04052		P36/ /		RELAY SOCKET (PLATE 'D')				001-099
D04052		E6/ /		RELAY SOCKET				115-199
	1		W1260	6042	24		21-51-12	001-099

HOOKUP LIST

D280N032

91-21-51

Section D04000

Page 5

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04052		P36/ /		RELAY SOCKET (PLATE 'D') (continued)				001-099
D04052		E6/ /		RELAY SOCKET (continued)				115-199
	1		W1024	0129	24		21-51-12	115-199
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1260	2011R	24		21-51-12	001-099
	4		W1024	2006R	24		21-51-12	115-199
	5		W1260	2012R	24		21-51-12	001-099
	5		W1024	2005R	24		21-51-12	115-199
	6		W1260	0993	24		21-51-12	001-099
	6		W1024	0125	24		21-51-12	115-199
	7		W1260	6095	24		21-51-15	001-099
	7		W1024	0175	24		21-51-15	115-199
	8		W1260	6096	24		21-51-15	001-099
	8		W1024	0176	24		21-51-15	115-199
	9	UNUSED						ALL
	10		W1260	6097	24		21-51-15	001-099
	10		W1024	0178	24		21-51-15	115-199
	11		W1260	6094	24		21-51-15	001-099
	11		W1024	0177	24		21-51-15	115-199
	12		W1260	0998	24		21-51-12	001-099
	12		W1024	0130	24		21-51-12	115-199
	13		W1260	6043	24		21-51-12	001-099
	13		W1024	0132	24		21-51-12	115-199
	14	UNUSED						ALL
D04054		960/148/R031		PLUG				ALL
	1		W2506	2512R	20		21-51-24	ALL
	2		W2506	2512B	20		21-51-24	ALL
D04056		982/151/R045		PLUG				ALL
	1		W2506	2511R	20		21-51-24	ALL
	2		W2506	2511B	20		21-51-24	ALL
D04058		966/143/R035		PLUG				ALL
	1		W2506	2513B	20		21-51-24	ALL
	2		W2506	0075	20		21-51-24	ALL
	3		W2506	2513R	20		21-51-24	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D04000

Page 6

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04060		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D04060		E6/ /		RELAY SOCKET				115-199
	1		W1270	2015R	24		21-51-24	001-099
	1		W1024	2013R	24		21-51-24	115-199
	2		W1270	2017B	24		21-51-24	001-099
	2		W1024	2014B	24		21-51-24	115-199
	3		W1270	0989	24		21-51-24	001-099
	3		W1024	0236	24		21-51-24	115-199
	4		W1270	2016R	24		21-51-24	001-099
	4		W1024	2012R	24		21-51-24	115-199
	5		W1270	2015B	24		21-51-24	001-099
	5		W1024	2013B	24		21-51-24	115-199
	6		W1270	2017R	24		21-51-24	001-099
	6		W1024	2014R	24		21-51-24	115-199
	7		W1270	0990	24		21-51-24	001-099
	7		W1024	0235	24		21-51-24	115-199
	8		W1270	2016B	24		21-51-24	001-099
	8		W1024	2012B	24		21-51-24	115-199
D04062		480/157/L036		PLUG				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W4236	FRAD			73-21-22	001-099
	3		W4236	FRAC			73-21-22	115-199
	4		W4236	2505R	24		73-21-22	ALL
	5		W4236	0228	24		73-21-22	ALL
	6	UNUSED						ALL
	7		W4236	0108	18		73-21-22	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W4236	3501R	22		73-21-22	ALL
	11		W4236	3501B	22		73-21-22	ALL
	12		W4236	2505B	24		73-21-22	ALL
	13		W4236	5002R	24		77-11-11	ALL
	14		W4236	5002B	24		77-11-11	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W4236	0115	24		73-21-22	ALL
	18		W4236	0117	24		73-21-22	ALL
	19		W4236	0118	24		73-21-22	ALL
	20	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D04000

Page 7

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04062		480/157/L036		PLUG (continued)				ALL
	21	UNUSED						ALL
	22		W4236	3501Z			73-21-22	ALL
	23	UNUSED						ALL
	24		W4236	3501Y	22		73-21-22	ALL
	25		W4236	2506R	24		73-21-22	ALL
	26		W4236	2506B	24		73-21-22	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W4236	5003R	20		31-31-44	001-099
	29		W4236	5003R	24		31-31-23	115-199
	30		W4236	5003B	20		31-31-44	001-099
	30		W4236	5003B	24		31-31-23	115-199
	31	UNUSED						ALL
	32	UNUSED						ALL
	33		W4236	0114	24		73-21-22	ALL
	34		W4236	0067	24		73-21-22	001-099
	34		W4236	0116	24		73-21-22	115-199
	35		W4236	0119	24		73-21-22	ALL
	36		W4236	0113	24		73-21-22	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W4236	2507B	22		73-21-22	ALL
	41		W4236	2507R	22		73-21-22	ALL
	42		W4236	2507Z			73-21-22	ALL
	DED		W4236	5003Z			31-31-23	115-199
			W4236	5003Z			31-31-44	001-099
			W4236	FRAD			73-21-22	001-099
			W4236	2505Z			73-21-22	ALL
			W4236	2506Z			73-21-22	ALL
			W4236	5002Z			77-11-11	ALL
			W4236	FRAC			73-21-22	115-199
D04064		480/157/L036		PLUG				ALL
	1		W4236	0006	24		73-21-21	ALL
	2		W4236	0005	18		73-21-21	ALL
	3		W4236	5001R	24		77-11-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D04000

Page 8

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04064		480/157/L036		PLUG (continued)				ALL
	7	UNUSED						ALL
	8		W4236	5001Z			77-11-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W4236	5001B	24		77-11-11	ALL
	12		W4236	2502R	22		73-21-21	ALL
	13		W4236	2502B	22		73-21-21	ALL
	14	UNUSED						ALL
	15		W4236	0237	16		75-31-11	001-099
	15		W4236	0225	16		75-31-11	115-199
	16		W4236	0191	16		75-31-11	ALL
	17		W4236	0235	18		73-21-22	ALL
	18		W4236	0105	20		73-21-21	ALL
	19		W4236	0120	20		73-21-22	ALL
	20		W4236	FRAC			73-21-21	001-099
	20		W4236	FRAB			73-21-21	115-199
	21		W4236	2501R	22		73-21-21	ALL
	22		W4236	2501B	22		73-21-21	ALL
	23		W4236	0106	20		73-21-21	ALL
	24		W4236	1007	18		73-21-21	ALL
	25	UNUSED						ALL
	26		W4236	2508R	24		77-12-11	ALL
	27		W4236	2508B	24		77-12-11	ALL
	28		W4236	2503R	22		73-21-21	ALL
	29		W4236	2503B	22		73-21-21	ALL
	30	UNUSED						ALL
	DED		W4236	2508Z			77-12-11	ALL
			W4236	FRAC			73-21-21	001-099
			W4236	1007Z			73-21-21	ALL
			W4236	2501Z			73-21-21	ALL
			W4236	2502Z			73-21-21	ALL
			W4236	2503Z			73-21-21	ALL
			W4236	FRAB			73-21-21	115-199
D04066		480/157/L036		PLUG				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W4236	0257	20		77-21-11	ALL
	4		W4236	0257	20		77-21-11	ALL
	5	4L	W4236	4501W	20		75-31-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D04000

Page 9

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04066		480/157/L036		PLUG (continued)				ALL
	6	4H	W4236	4501G	20		75-31-11	ALL
	7		W4236	4501Z			75-31-11	ALL
	CAP	Y	W4236	4502G	20		77-21-11	ALL
	CAP	Y	W4236	4502W	20		77-21-11	ALL
	DED		W4236	4502Z			77-21-11	ALL
D04078		P54/ I		PLUG				ALL
	1		W1120	0181	24		26-15-11	001-099
	1		W1120	0298	24		26-15-11	115-199
	2		W1120	0187	24		26-15-11	001-099
	2		W1120	0297	24		26-15-11	115-199
	3		W1120	0191	24		26-15-11	001-099
	3		W1120	0152	24		26-15-11	115-199
	4		W1120	0299	22		26-15-11	001-099
	4		W1120	0299	24		26-15-11	115-199
	5		W1120	0202	24		26-15-11	001-099
	5		W1120	0308	24		26-15-11	115-199
	6	UNUSED						ALL
	7		W1120	0212	24		26-15-11	001-099
	7		W1120	0296	24		26-15-11	115-199
	8		W1120	0210	24		26-15-11	001-099
	8		W1120	0166	24		26-15-11	115-199
	9		W1120	0190	24		26-15-11	001-099
	9		W1120	0151	24		26-15-11	115-199
	10		W1120	0211	24		26-15-11	001-099
	10		W1120	0167	24		26-15-11	115-199
	11		W1120	0186	24		26-15-11	001-099
	11		W1120	0156	24		26-15-11	115-199
	12	UNUSED						ALL
	13		W1120	0209	24		26-15-11	001-099
	13		W1120	0310	24		26-15-11	115-199
	14		W1120	0208	22		26-15-11	001-099
	14		W1120	0311	22		26-15-11	115-199
	15		W1120	0177	24		26-15-11	001-099
	15		W1120	0145	24		26-15-11	115-199
	16		W1120	0183	22		26-15-11	001-099
	16		W1120	0301	24		26-15-11	115-199
	17		W1120	0206	22		26-15-11	001-099
	17		W1120	0313	22		26-15-11	115-199
	18	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D04000

Page 10

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04078		P54/ /		PLUG (continued)				ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W1120	PM01			26-15-11	ALL
	36		W1120	0200	24		26-15-11	001-099
	36		W1120	0161	24		26-15-11	115-199
	37	UNUSED						ALL
	38	UNUSED						ALL
	39		W1120	0179	24		26-15-11	001-099
	39		W1120	0147	24		26-15-11	115-199
	40	UNUSED						ALL
	41	UNUSED						ALL
	42		W1120	0209	24		26-15-11	001-099
	42		W1120	0310	24		26-15-11	115-199
	43	UNUSED						ALL
	44		W1120	0189	24		26-15-11	001-099
	44		W1120	0150	24		26-15-11	115-199
	45		W1120	0180	24		26-15-11	001-099
	45		W1120	0148	24		26-15-11	115-199
	46		W1120	0207	22		26-15-11	001-099
	46		W1120	0309	22		26-15-11	115-199
	47		W1120	0185	24		26-15-11	001-099
	47		W1120	0160	24		26-15-11	115-199
	48		W1120	0188	24		26-15-11	001-099
	48		W1120	0149	24		26-15-11	115-199
	49		W1120	0182	22		26-15-11	001-099
	49		W1120	0300	24		26-15-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D04000

Page 11

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04078		P54/ /		PLUG (continued)				ALL
	50		W1120	0184	22		26-15-11	001-099
	50		W1120	0302	22		26-15-11	115-199
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55		W1120	0178	24		26-15-11	001-099
	55		W1120	0146	24		26-15-11	115-199
	56	UNUSED						ALL
	57	UNUSED						ALL
	58	UNUSED						ALL
	59	UNUSED						ALL
	60	UNUSED						ALL
	61	UNUSED						ALL
	62	UNUSED						ALL
	63	UNUSED						ALL
	64	UNUSED						ALL
	65	UNUSED						ALL
	66		W1120	PM01			26-15-11	ALL
D04080		1180/138/R18		PLUG				ALL
	1		W2516	2501B	20		29-21-31	ALL
	2		W2516	2501R	20		29-21-31	ALL
	3	UNUSED						ALL
D04082		1177/156/R16		PLUG-				ALL
	1		W2516	1003	20		29-21-31	ALL
	2		W2516	0083	18		29-21-31	ALL
	3	UNUSED						ALL
D04084		1180/138/R18		PLUG-				ALL
	1		W2516	2506B	20		29-21-31	ALL
	2		W2516	1006	20		29-21-31	ALL
	3		W2516	1005	20		29-21-31	ALL
	4		W2516	0077	18		29-21-31	ALL
	5		W2516	2506R	20		29-21-31	ALL
	6		W2516	1008	18		29-21-31	ALL
	7		W2516	1007	20		29-21-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D04000

Page 12

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04086		1214/154/R050		PLUG				ALL
	1		W4236	0224	16		29-21-31	001-099
	1		W4236	0236	16		29-21-31	115-199
	2		W4236	0225	16		29-21-31	001-099
	2		W4236	0237	16		29-21-31	115-199
	3		W4236	0226	18		29-21-31	001-099
	3		W4236	0238	18		29-21-31	115-199
D04088		1214/154/R50		PLUG-				ALL
	1		W2516	0080	16		29-21-31	ALL
	2		W2516	1043	16		29-21-31	ALL
	3		W2516	0082	18		29-21-31	ALL
D04090		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D04090		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	A1		W1270	5732	24		30-31-11	ALL
	A2		W1270	5730	24		30-31-11	ALL
	A3	UNUSED						ALL
	B1		W1270	5731	24		30-31-11	ALL
	B2		W1270	5729	24		30-31-11	ALL
	B3	UNUSED						ALL
	C1		W1270	6044	22		30-34-21	ALL
	C2		W1270	6057	22		30-34-21	ALL
	C3		W1270	6069	22		30-34-21	ALL
	D1		W1270	6091	24		30-31-11	001-099
	D1		W1270	6093	24		30-31-11	ALL
	D2		W1270	6094	24		30-31-11	ALL
	D3	UNUSED						ALL
	X1		W1270	5858	22		32-09-12	001-099
	X1		W1270	5852	22		32-09-12	ALL
	X2		W1270	5853	22		32-09-12	ALL
D04094		P070-00/ /		PLUG				ALL
	1		W1250	0033	20		27-51-61	ALL
	2	UNUSED						ALL
	3		W1250	0031	24		27-51-61	001-099
	3		W1250	0031	22		27-51-61	115-199
	4	UNUSED						ALL
	5		W1250	0032	24		27-51-61	001-099
	5		W1250	0032	22		27-51-61	115-199

HOOKUP LIST

D280N032

91-21-51

Section D04000

Page 13

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04094		P070-00/ /		PLUG (continued)				ALL
	6		W1250	0034	20		27-51-61	ALL
	7	UNUSED						ALL
D04096 D04096		P037-00/ / E6/ /		RELAY SOCKET (PLATE 'A') RELAY SOCKET				001-099 115-199
	1		W1270	0941	24		21-51-22	001-099
	1		W1024	0191	24		21-51-22	115-199
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1270	2014R	24		21-51-22	001-099
	4		W1024	2011R	24		21-51-22	115-199
	5		W1270	2013R	24		21-51-22	001-099
	5		W1024	2010R	24		21-51-22	115-199
	6		W1270	0944	24		21-51-22	001-099
	6		W1024	0190	24		21-51-22	115-199
	7		W1270	0991	24		21-51-25	001-099
	7		W1024	0237	24		21-51-25	115-199
	8		W1270	0992	24		21-51-25	001-099
	8		W1024	0238	24		21-51-25	115-199
	9	UNUSED						ALL
	10		W1270	0994	24		21-51-25	001-099
	10		W1024	0240	24		21-51-25	115-199
	11		W1270	0993	24		21-51-25	001-099
	11		W1024	0239	24		21-51-25	115-199
	12		W1270	0945	24		21-51-22	001-099
	12		W1024	0193	24		21-51-22	115-199
	13		W1270	0946	24		21-51-22	001-099
	13		W1024	0192	24		21-51-22	115-199
	14	UNUSED						ALL
D04098		970/151/R036		PLUG				ALL
	1		W2506	1016	20		21-51-25	ALL
	2		W2506	1017	20		21-51-25	ALL
	3	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D04000

Page 14 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04104		1862.7/265/L010		PLUG				ALL
	1		W2812	0005	20		27-23-11	ALL
	2		W2812	0006	20		27-23-11	ALL
	3	UNUSED						ALL
D04106		1862.7/265/L010		PLUG				ALL
	1	UNUSED						ALL
	2		W2812	0004	20		27-23-11	ALL
	3		W2812	0003	20		27-23-11	ALL
D04112		P37/ /		RELAY SOCKET (PLATE 'B')				115-199
	A1		W1270	0541	22		35-11-13	115-199
	A2		W1270	0539	22		35-11-13	115-199
	A3		W1270	0540	22		35-11-13	115-199
	B1	UNUSED						115-199
	B2	UNUSED						115-199
	B3	UNUSED						115-199
	X1		W1270	0543	22		35-11-13	115-199
	X2		W1270	0544	20		35-11-13	115-199
D04114		895/155/L038		PLUG				ALL
	1		W2406	3509R	20		21-51-12	ALL
	2		W2406	3509B	20		21-51-12	ALL
	3		W2406	3509Y	20		21-51-12	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D04116		P36/ /		RELAY SOCKET (PLATE 'D')				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1260	0478	20		36-11-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1260	0343	24		36-11-41	ALL
	7		W1260	0838	20		36-11-11	001-099
	7		W1260	0839	20		36-11-11	115-199
	8		W1260	0344	24		36-11-41	ALL
D04118P		P006-03/ /		PLUG-				001-099
D04118P		P006-03/ /		PLUG				115-199
	1		W0074	0720	22		24-51-72	ALL

HOOKUP LIST

D280N032

91-21-51

Section D04100

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04118P		P006-03/ /		PLUG- (continued)				001-099
D04118P		P006-03/ /		PLUG (continued)				115-199
	2		W0064	0057	22		24-51-72	ALL
	3		W0074	0034	22		24-51-72	ALL
	4		W0062	0047	16		24-51-72	ALL
	5		W0074	0702	22		22-11-32	ALL
	6		W0062	0045	16		24-51-72	ALL
	7		W0062	0046	20		24-51-72	ALL
	8		W0064	0056	22		24-51-72	ALL
	9		W0064	0055	22		24-51-72	ALL
	10		W0074	0033	22		24-51-72	ALL
	11	UNUSED						ALL
	12		W0062	0048	16		24-51-72	ALL
	13		W0062	0049	16		24-51-72	ALL
	14		W0074	0717	24		24-51-72	ALL
	15		W0062	0050	20		24-51-72	ALL
	16		W0062	0044	16		24-51-72	ALL
	17		W0062	0043	16		24-51-72	ALL
	18		W0062	0051	20		24-51-72	ALL
	19		W0062	0052	20		24-51-72	ALL
D04122		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D04122		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	1		W1270	6023	24		31-31-62	001-099
	1		W1270	6023	22		31-31-32	115-199
	2		W1270	6024	24		31-31-62	001-099
	2		W1270	6024	22		31-31-32	115-199
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1270	6031	22		32-09-12	001-002
	6		W1270	6029	22		32-09-12	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W1270	6030	22		32-09-12	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D04100

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04128		950/156/L61		PLUG				ALL
	1		W2406	2503B	20		21-51-12	ALL
	2		W2406	0016	20		21-51-12	ALL
	3		W2406	2503R	20		21-51-12	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D04130A		E3-3/ /		PLUG				001-099
D04130A		E6-2/ /		PLUG				115-199
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09		W1330	2025R	24		21-51-14	001-099
	A09		W1030	2025R	24		21-51-14	115-199
	A10		W1330	2026R	24		21-51-14	001-099
	A10		W1030	2026R	24		21-51-14	115-199
	A11	UNUSED						ALL
	A12		W1330	2027R	24		21-51-14	001-099
	A12		W1030	2027R	24		21-51-14	115-199
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15		W1330	0171	24		21-51-14	001-099
	A15		W1030	0171	24		21-51-14	115-199
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09		W1330	2025B	24		21-51-14	001-099
	B09		W1030	2025B	24		21-51-14	115-199
	B10		W1330	2026B	24		21-51-14	001-099
	B10		W1030	2026B	24		21-51-14	115-199
	B11	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D04100

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04130A		E3-3/ /		PLUG (continued)				001-099
D04130A		E6-2/ /		PLUG (continued)				115-199
	B12		W1330	2027B	24		21-51-14	001-099
	B12		W1030	2027B	24		21-51-14	115-199
	B13	UNUSED						ALL
	B14		W1330	0060	24		21-51-14	001-099
	B14		W1030	0060	24		21-51-14	115-199
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15		W1330	0059	24		21-51-14	001-099
	C15		W1030	0059	24		21-51-14	115-199
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D04100

Page 4

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04130B		E3-3/ /		PLUG				001-099
D04130B		E6-2/ /		PLUG				115-199
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09		W1330	2005R	24		21-51-24	001-099
	A09		W1030	2005R	24		21-51-24	115-199
	A10		W1330	2006R	24		21-51-24	001-099
	A10		W1030	2006R	24		21-51-24	115-199
	A11	UNUSED						ALL
	A12		W1330	2004R	24		21-51-24	001-099
	A12		W1030	2004R	24		21-51-24	115-199
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15		W1330	0027	24		21-51-24	001-099
	A15		W1030	0027	24		21-51-24	115-199
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09		W1330	2005B	24		21-51-24	001-099
	B09		W1030	2005B	24		21-51-24	115-199
	B10		W1330	2006B	24		21-51-24	001-099
	B10		W1030	2006B	24		21-51-24	115-199
	B11	UNUSED						ALL
	B12		W1330	2004B	24		21-51-24	001-099
	B12		W1030	2004B	24		21-51-24	115-199
	B13	UNUSED						ALL
	B14		W1330	0029	24		21-51-24	001-099
	B14		W1030	0029	24		21-51-24	115-199
	B15	UNUSED						ALL
	C01	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D04100

Page 5

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04130B		E3-3/ /		PLUG (continued)				001-099
D04130B		E6-2/ /		PLUG (continued)				115-199
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15		W1330	0028	24		21-51-24	001-099
	C15		W1030	0028	24		21-51-24	115-199
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
D04130C		E3-3/ /		PLUG				001-099
D04130C		E6-2/ /		PLUG				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1330	0061	24		21-51-14	001-099
	3		W1030	0061	24		21-51-14	115-199
	4	UNUSED						ALL
	5	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D04100

Page 6

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04130C		E3-3/ /		PLUG (continued)				001-099
D04130C		E6-2/ /		PLUG (continued)				115-199
	= C1	UNUSED						ALL
	= C5	UNUSED						ALL
D04132		946/148/L035		PLUG				ALL
	1		W2406	2517R	20		21-51-14	ALL
	2		W2406	2517B	20		21-51-14	ALL
D04134		987/151/L47		PLUG				ALL
	1		W2406	2518R	20		21-51-14	ALL
	2		W2406	2518B	20		21-51-14	ALL
D04136		966/143/L25		PLUG				ALL
	1		W2406	2519B	20		21-51-14	ALL
	2		W2406	0066	20		21-51-14	ALL
	3		W2406	2519R	20		21-51-14	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D04138		P36/ /		RELAY SOCKET (PLATE 'D')				001-099
D04138		E6/ /		RELAY SOCKET				115-199
	1		W1260	2014R	24		21-51-14	001-099
	1		W1024	2008R	24		21-51-14	115-199
	2		W1260	2015B	24		21-51-14	001-099
	2		W1024	2009B	24		21-51-14	115-199
	3		W1260	6093	24		21-51-14	001-099
	3		W1024	0172	24		21-51-14	115-199
	4		W1260	2013R	24		21-51-14	001-099
	4		W1024	2007R	24		21-51-14	115-199
	5		W1260	2014B	24		21-51-14	001-099
	5		W1024	2008B	24		21-51-14	115-199
	6		W1260	2015R	24		21-51-14	001-099
	6		W1024	2009R	24		21-51-14	115-199
	7		W1260	6092	24		21-51-14	001-099
	7		W1024	0173	24		21-51-14	115-199
	8		W1260	2013B	24		21-51-14	001-099
	8		W1024	2007B	24		21-51-14	115-199

HOOKUP LIST

D280N032

91-21-51

Section D04100

Page 7

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04160		456/165/L025		PLUG				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W4228	FRAA			73-21-12	ALL
	4		W4228	2506R	22		73-21-12	001-099
	4		W4228	2506R	24		73-21-12	115-199
	5		W4228	0124	24		73-21-12	ALL
	6	UNUSED						ALL
	7		W4228	0120	18		73-21-12	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W4228	3501R	22		73-21-12	ALL
	11		W4228	3501B	22		73-21-12	ALL
	12		W4228	2506B	22		73-21-12	001-099
	12		W4228	2506B	24		73-21-12	115-199
	13		W4228	5001R	24		77-11-11	ALL
	14		W4228	5001B	24		77-11-11	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W4228	0127	24		73-21-12	ALL
	18		W4228	0129	24		73-21-12	ALL
	19		W4228	0130	24		73-21-12	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W4228	3501Z			73-21-12	ALL
	23	UNUSED						ALL
	24		W4228	3501Y	22		73-21-12	ALL
	25		W4228	2505R	22		73-21-12	001-099
	25		W4228	2505R	24		73-21-12	115-199
	26		W4228	2505B	22		73-21-12	001-099
	26		W4228	2505B	24		73-21-12	115-199
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W4228	5003R	20		31-31-44	001-099
	29		W4228	5003R	24		31-31-23	115-199
	30		W4228	5003B	20		31-31-44	001-099
	30		W4228	5003B	24		31-31-23	115-199
	31	UNUSED						ALL
	32	UNUSED						ALL
	33		W4228	0126	24		73-21-12	ALL
	34		W4228	0128	24		73-21-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D04100

Page 8

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04160		456/165/L025		PLUG (continued)				ALL
	35		W4228	0131	24		73-21-12	ALL
	36		W4228	0125	24		73-21-12	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W4228	2507B	22		73-21-12	001-099
	40		W4228	2504B	22		73-21-12	115-199
	41		W4228	2507R	22		73-21-12	001-099
	41		W4228	2504R	22		73-21-12	115-199
	42		W4228	2507Z			73-21-12	001-099
	42		W4228	2504Z			73-21-12	115-199
			W4228	5003Z			31-31-44	001-099
			W4228	2505Z			73-21-12	ALL
			W4228	2506Z			73-21-12	ALL
			W4228	5001Z			77-11-11	ALL
			W4228	FRAA			73-21-12	ALL
			W4228	5003Z			31-31-23	115-199
D04162		456/165/L025		PLUG				ALL
	1		W4228	0118	24		73-21-11	ALL
	2		W4228	0119	18		73-21-11	ALL
	3		W4228	5002R	24		77-11-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W4228	5002Z			77-11-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W4228	5002B	24		77-11-11	ALL
	12		W4228	2502R	22		73-21-11	ALL
	13		W4228	2502B	22		73-21-11	ALL
	14	UNUSED						ALL
	15		W4228	0212	16		75-31-11	ALL
	16		W4228	0191	16		75-31-11	ALL
	17		W4228	0254	18		73-21-12	ALL
	18		W4228	0116	20		73-21-11	ALL
	19		W4228	0132	20		73-21-12	ALL
	20		W4228	FRAD			73-21-11	ALL
	21		W4228	2501R	22		73-21-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D04100

Page 9

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04162		456/165/L025		PLUG (continued)				ALL
	22		W4228	2501B	22		73-21-11	ALL
	23		W4228	0117	20		73-21-11	ALL
	24		W4228	1005	18		73-21-11	ALL
	25	UNUSED						ALL
	26		W4228	2508R	24		77-12-11	001-099
	26		W4228	2507R	24		77-12-11	115-199
	27		W4228	2508B	24		77-12-11	001-099
	27		W4228	2507B	24		77-12-11	115-199
	28		W4228	2503R	22		73-21-11	ALL
	29		W4228	2503B	22		73-21-11	ALL
	30	UNUSED						ALL
	DED		W4228	2508Z			77-12-11	001-099
	DED		W4228	2507Z			77-12-11	115-199
			W4228	1005Z			73-21-11	ALL
			W4228	2501Z			73-21-11	ALL
			W4228	2502Z			73-21-11	ALL
			W4228	2503Z			73-21-11	ALL
			W4228	FRAD			73-21-11	ALL
D04164		456/165/L025		PLUG				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W4228	0257	20		77-21-11	ALL
	4		W4228	0257	20		77-21-11	ALL
	5	4L	W4228	4501W	20		75-31-11	ALL
	6	4H	W4228	4501G	20		75-31-11	ALL
	7		W4228	4501Z			75-31-11	ALL
	CAP	Y	W4228	4502G	20		77-21-11	ALL
	CAP	Y	W4228	4502W	20		77-21-11	ALL
	DED		W4228	4502Z			77-21-11	ALL
D04172		E6/ /		RELAY SOCKET				115-199
	A1		W1024	0008	20		33-37-21	115-199
	A2		W1024	0108	20		33-37-21	115-199
	A3	UNUSED						115-199
	B1		W1024	0004	20		33-37-21	115-199
	B2		W1024	0005	20		33-37-21	115-199
	B3	UNUSED						115-199
	X1		W1024	0007	22		33-37-21	115-199
	X2		W1024	0006	22		33-37-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section D04100

Page 10

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04182		P36/ /		RELAY SOCKET (PLATE 'A')				ALL
	A1		W1260	0875	22		24-25-11	001-002, 115-199
	A1	UNUSED						003-099
	A2		W1260	0876	22		24-25-11	ALL
	A2		W1260	0877	22		24-25-11	ALL
	A3	UNUSED						001-002, 115-199
	A3		W1260	0878	22		24-25-11	003-099
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1260	0877	22		24-25-11	001-002, 115-199
	X1		W1260	0878	22		24-25-11	001-002, 115-199
	X1		W1260	6196	22		24-25-11	003-099
	X2		W1260	0879	22		24-25-11	001-002, 115-199
	X2		W1260	5731	22		32-09-11	ALL
D04184		P36/ /		RELAY SOCKET (PLATE 'A')				ALL
	A1		W1260	5692	24		30-31-11	ALL
	A2		W1260	5698	24		30-31-11	ALL
	A3		W1260	5544	24		30-31-11	ALL
	B1		W1260	5658	24		30-31-11	ALL
	B2		W1260	5688	24		30-31-11	ALL
	B3		W1260	5693	24		30-31-11	ALL
	C1	UNUSED						ALL
	C2		W1260	5697	24		30-31-11	ALL
	C3		W1260	5694	24		30-31-11	ALL
	D1	UNUSED						ALL
	D2		W1260	5696	24		30-31-11	ALL
	D3		W1260	5695	24		30-31-11	ALL
	X1		W1260	5924	22		32-09-11	001-099
	X1		W1260	6243	22		32-09-11	001-099
	X1		W1260	5755	22		32-09-11	115-199
	X2		W1260	5727	22		32-09-11	001-099
	X2		W1260	5754	22		32-09-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D04100

Page 11

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04194		985/146/L45		PLUG				ALL
	1		W2406	1019	20		21-51-15	ALL
	2		W2406	1020	20		21-51-15	ALL
	3	UNUSED						ALL
D04196 D04196		P037-00/ / P37/ /		RELAY SOCKET (PLATE 'A') RELAY SOCKET (PLATE 'A')				001-099 115-199
	1		W1270	5596	24		21-61-11	ALL
	2		W1270	5579	24		21-61-11	ALL
	3		W1270	5594	24		21-61-11	ALL
	4		W1270	5595	24		21-61-11	ALL
	5	UNUSED						ALL
	6		W1270	5599	24		21-61-11	ALL
	7		W1270	5597	24		21-61-11	ALL
	8	UNUSED						ALL
D04198 D04198		P037-00/ / P37/ /		RELAY SOCKET (PLATE 'A') RELAY SOCKET (PLATE 'A')				001-099 115-199
	1		W1270	5625	24		21-61-21	ALL
	2		W1270	5607	24		21-61-21	ALL
	3		W1270	5623	24		21-61-21	ALL
	4		W1270	5624	24		21-61-21	ALL
	5	UNUSED						ALL
	6		W1270	5622	24		21-61-21	ALL
	7		W1270	5620	24		21-61-21	ALL
	8	UNUSED						ALL
D04199		P037-00/ /		RELAY SOCKET (PLATE 'A')				ALL
	A1		W1270	6786	20		27-62-11	ALL
	A2		W1270	6785	20		27-62-11	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	C1		W1270	6830	20		32-09-12	ALL
	C2		W1270	6833	20		32-09-12	ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D04100

Page 12

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04199		P037-00/ /		RELAY SOCKET (PLATE 'A') (continued)				ALL
	X1		W1270	6787	20		27-62-11	ALL
	X2		W1270	6839	20		27-62-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D04100
Page 13 End
Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04200		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D04200		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	1		W1270	5652	24		21-61-31	ALL
	2		W1270	5642	24		21-61-31	ALL
	3		W1270	5650	24		21-61-31	ALL
	4		W1270	5651	24		21-61-31	ALL
	5	UNUSED						ALL
	6		W1270	5649	24		21-61-31	ALL
	7		W1270	5647	24		21-61-31	ALL
	8	UNUSED						ALL
D04201		1283/74/140		PLUG				ALL
	A		W4906	3001R	20		27-62-11	ALL
	B		W4906	3001Y	20		27-62-11	ALL
	C		W4906	3001B	20		27-62-11	ALL
D04208		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D04208		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	1	UNUSED						ALL
	2		W1270	0668	20		21-58-21	ALL
	3		W1270	0672	24		21-58-21	ALL
	4	UNUSED						ALL
	5		W1270	0667	20		21-58-21	ALL
	6	UNUSED						ALL
	7		W1270	5575	24		21-58-21	ALL
	8	UNUSED						ALL
D04210		P36/ /		RELAY SOCKET (PLATE 'A')				115-199
	A1		W1260	5620	22		21-58-24	115-199
	A2		W1260	5623	22		21-58-24	115-199
	B1		W1260	5619	22		21-58-24	115-199
	B2		W1260	5622	22		21-58-24	115-199
	C1		W1260	5618	22		21-58-24	115-199
	C1		W1260	5624	22		21-58-24	115-199
	C2		W1260	5621	22		21-58-24	115-199
	X1		W1260	5624	22		21-58-24	115-199
	X2		W1260	5626	22		21-58-24	115-199
	11	UNUSED						115-199
	12		W1260	0967	24		21-58-24	115-199
	13		W1260	0966	24		21-58-24	115-199

HOOKUP LIST

D280N032

91-21-51

Section D04200

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04212		P37/ I		RELAY SOCKET (PLATE 'A')				115-199
	A1		W1270	5550	22		21-58-24	115-199
	A2		W1270	5553	22		21-58-24	115-199
	B1		W1270	5551	22		21-58-24	115-199
	B2		W1270	5554	22		21-58-24	115-199
	C1		W1270	0681	22		21-58-24	115-199
	C1		W1270	5552	22		21-58-24	115-199
	C2		W1270	5555	22		21-58-24	115-199
	X1		W1270	0681	22		21-58-24	115-199
	X2		W1270	5557	22		21-58-24	115-199
	11	UNUSED						115-199
	12		W1270	0677	22		21-58-24	115-199
	13		W1270	0678	22		21-58-24	115-199
D04214		1635/197/R42		PLUG				115-199
	1		W2706	0252	22		21-58-24	115-199
	2		W2706	0251	22		21-58-24	115-199
	3		W2706	0250	22		21-58-24	115-199
	4	UNUSED						115-199
	5		W2706	0253	22		21-58-24	115-199
	6		W2706	0254	22		21-58-24	115-199
	7		W2706	0255	20		21-58-24	115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D04200

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04214		1635/197/R42		PLUG (continued)				115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
D04216		1635/197/R048		PLUG				115-199
	1		W2632	0252	22		21-58-24	115-199
	2		W2632	0251	22		21-58-24	115-199
	3		W2632	0250	22		21-58-24	115-199
	4	UNUSED						115-199
	5		W2632	0253	22		21-58-24	115-199
	6		W2632	0254	22		21-58-24	115-199
	7		W2632	0255	20		21-58-24	115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D04200

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04222		1614/197/R41		PLUG				115-199
	1		W2706	0246	20		21-58-11	115-199
	2		W2706	0242	24		21-58-11	115-199
	3		W2706	0243	20		21-58-11	115-199
	4		W2706	0244	20		21-58-11	115-199
	5		W2706	0245	24		21-58-11	115-199
D04228		P037-00/ /		RELAY SOCKET (PLATE 'C')				001-099
D04228		P37/ /		RELAY SOCKET (PLATE 'C')				115-199
	A1	UNUSED						ALL
	A2		W1270	0811	24		74-31-21	ALL
	A3		W1270	0810	24		74-31-21	ALL
	B1		W1270	0814	20		74-31-21	ALL
	B2		W1270	0813	20		74-31-21	ALL
	B3		W1270	0812	20		74-31-21	ALL
	X1		W1270	0814	20		74-31-21	001-099
	X1		W1270	0815	20		74-31-21	ALL
	X2		W1270	0817	20		74-31-21	ALL
D04232		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D04232		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	A1		W1270	5525	18		21-58-21	ALL
	A2		W1270	5528	18		21-58-21	ALL
	B1		W1270	5526	18		21-58-21	ALL
	B2		W1270	5529	18		21-58-21	ALL
	C1		W1270	0676	20		21-58-21	ALL
	C1		W1270	5527	18		21-58-21	ALL
	C2		W1270	5530	18		21-58-21	ALL
	X1		W1270	0676	20		21-58-21	ALL
	X2		W1270	0673	20		21-58-21	ALL
	11	UNUSED						ALL
	12		W1270	0671	24		21-58-21	ALL
	13		W1270	0670	24		21-58-21	ALL
D04234		P36/ /		RELAY SOCKET (PLATE 'A')				ALL
	A1		W1260	5588	18		21-58-21	ALL
	A2		W1260	5591	18		21-58-21	ALL
	B1		W1260	5589	18		21-58-21	ALL
	B2		W1260	5592	18		21-58-21	ALL
	C1		W1260	0963	20		21-58-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D04200

Page 4

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04234		P36/ /		RELAY SOCKET (PLATE 'A') (continued)				ALL
	C1		W1260	5590	18		21-58-21	ALL
	C2		W1260	5593	18		21-58-21	ALL
	X1		W1260	0963	20		21-58-21	ALL
	X2		W1260	0960	20		21-58-21	ALL
	11	UNUSED						ALL
	12		W1260	6230	24		21-58-21	001-099
	12		W1260	0962	24		21-58-21	115-199
	13		W1260	0961	24		21-58-21	ALL
D04236		945/140/R061		PLUG				ALL
	1		W2506	2507B	20		21-51-22	ALL
	2		W2506	0107	20		21-51-22	ALL
	3		W2506	2507R	20		21-51-22	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D04240A		E4-2/ /		PLUG-				ALL
	A01		W1275	4523W	22		77-31-11	001-099
	A01		W1275	2623B	22		77-31-11	115-199
	A02		W1275	0233	22		77-31-11	ALL
	A03	UNUSED						ALL
	A04		W1275	4524W	22		77-31-11	001-099
	A04		W1275	2624B	22		77-31-11	115-199
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08		W1275	2615B	24		77-12-11	ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11		W1275	0235	22		77-31-11	ALL
	A12		W1275	2619B	24		77-12-31	ALL
	A13		W1275	0234	22		77-31-11	ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01		W1275	4523B	22		77-31-11	001-099
	B01		W1275	2623W	22		77-31-11	115-199
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04		W1275	4524B	22		77-31-11	001-099
	B04		W1275	2624W	22		77-31-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D04200

Page 5

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04240A		E4-2/ /		PLUG- (continued)				ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08		W1275	2615R	24		77-12-11	ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06		W1275	5046R	24		77-31-11	ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09		W1275	0235	22		77-31-11	ALL
	C10		W1275	2618B	24		77-12-21	ALL
	C11	UNUSED						ALL
	C12		W1275	2619R	24		77-12-31	ALL
	C13		W1275	0234	22		77-31-11	ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06		W1275	5046B	24		77-31-11	ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10		W1275	2618R	24		77-12-21	ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13		W1275	0233	22		77-31-11	ALL
	D14	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D04200

Page 6

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04240A		E4-2/ /		PLUG- (continued)				ALL
	D15	UNUSED						ALL
	DED		W1275	4523Z			77-31-11	001-099
	DED		W1275	4524Z			77-31-11	001-099
	DED		W1275	2615Z			77-12-11	ALL
	DED		W1275	2618Z			77-12-21	ALL
	DED		W1275	2619Z			77-12-31	ALL
	DED		W1275	5046Z			77-31-11	ALL
	DED		W1275	2623Z			77-31-11	115-199
	DED		W1275	2624Z			77-31-11	115-199
D04240B		E4-2/ /		PLUG-				ALL
	A01	UNUSED						ALL
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15		W1275	6286	22		77-31-11	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D04200

Page 7

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04240B		E4-2/ /		PLUG- (continued)				ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07		W1275	6505	24		77-31-11	001-008
	C07	UNUSED						009-099, 115-199
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	CAP	Y	W1275	6505	24		77-31-11	009-099
D04240C		E4-2/ /		PLUG-				ALL
	1	UNUSED						ALL
	2		W1275	0601	22		77-31-11	ALL
	3		W1275	0599	22		77-31-11	001-099
	3		W1275	0599	20		77-31-11	115-199
	4		W1275	0600	20		77-31-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D04200

Page 8

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04240C		E4-2/ /		PLUG- (continued)				ALL
	5	UNUSED						ALL
	= C1	UNUSED						ALL
	= C5	UNUSED						ALL
D04242		P36/ /		RELAY SOCKET (PLATE 'D')				ALL
	A1		W1260	0345	24		30-31-11	ALL
	A2		W1260	0346	24		30-31-11	ALL
	A3	UNUSED						ALL
	B1		W1260	0349	22		30-32-11	001-099
	B1		W1260	0350	22		30-32-11	ALL
	B2		W1260	0352	22		30-32-11	ALL
	B3	UNUSED						ALL
	X1		W1260	0411	22		77-12-42	ALL
	X2		W1260	0412	22		77-12-42	ALL
D04244		P037-00/ /		RELAY SOCKET (PLATE 'C')				001-099
D04244		P37/ /		RELAY SOCKET (PLATE 'C')				115-199
	A1		W1270	0873	24		30-31-12	ALL
	A2		W1270	0845	24		30-31-12	ALL
	A3	UNUSED						ALL
	B1		W1270	0481	22		30-32-11	ALL
	B2		W1270	0482	22		30-32-11	ALL
	B3	UNUSED						ALL
	C1		W1270	0908	20		30-34-22	001-099
	C1		W1270	6095	20		30-34-22	001-099
	C1		W1270	0908	18		30-34-22	115-199
	C2		W1270	0907	20		30-34-22	001-099
	C2		W1270	6092	20		30-34-22	001-099
	C2		W1270	0907	18		30-34-22	115-199
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1270	0827	22		77-12-42	ALL
	X2		W1270	0831	22		77-12-42	ALL
D04246		P037-00/ /		RELAY SOCKET (PLATE 'C')				001-099
D04246		P37/ /		RELAY SOCKET (PLATE 'C')				115-199
	1	UNUSED						ALL
	2		W1270	0025	24		30-33-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D04200

Page 9

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04246		P037-00/ /		RELAY SOCKET (PLATE 'C') (continued)				001-099
D04246		P37/ /		RELAY SOCKET (PLATE 'C') (continued)				115-199
	3		W1270	0830	22		77-12-42	ALL
	4		W1270	0841	24		30-33-11	ALL
	5		W1270	0842	24		30-33-11	ALL
	6		W1270	0259	24		21-58-12	ALL
	7		W1270	0832	22		77-12-42	ALL
	8		W1270	0254	24		21-58-12	ALL
D04248		P037-00/ /		RELAY SOCKET (PLATE 'C')				001-099
D04248		P37/ /		RELAY SOCKET (PLATE 'C')				115-199
	1		W1270	0853	22		76-11-21	ALL
	2	UNUSED						ALL
	3		W1270	0855	22		76-11-21	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1270	0932	22		76-11-21	ALL
	7		W1270	0854	22		76-11-21	ALL
	8	UNUSED						ALL
D04252		P54/ /		PLUG				ALL
	1		W1120	0402	24		26-13-21	ALL
	2		W1120	0403	24		26-13-21	ALL
	3		W1120	0379	24		26-13-21	ALL
	4		W1120	0396	24		26-13-21	ALL
	5		W1120	0390	24		26-13-21	ALL
	6		W1120	0378	24		26-13-21	ALL
	7		W1120	0397	24		26-13-21	ALL
	8		W1120	0400	24		26-13-21	ALL
	9	UNUSED						ALL
	10		W1120	0398	24		26-13-21	ALL
	11		W1120	0399	24		26-13-21	ALL
	12		W1120	PN01			26-12-21	ALL
	13		W1120	0387	24		26-13-21	ALL
	14		W1120	0386	24		26-13-21	ALL
	15		W1120	0394	24		26-13-21	ALL
	16		W1120	0392	22		26-13-21	ALL
	17		W1120	0389	22		26-13-21	ALL
	18		W1120	0518	22		26-12-21	001-099
	18		W1120	0290	22		26-12-21	115-199
	19		W1120	0521	24		26-12-21	001-099

HOOKUP LIST

D280N032

91-21-51

Section D04200

Page 10

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04252		P54/ /		PLUG (continued)				ALL
	19		W1120	0248	24		26-12-21	115-199
	20		W1120	0514	24		26-12-21	001-099
	20		W1120	0252	24		26-12-21	115-199
	21		W1120	0515	22		26-12-21	001-099
	21		W1120	0247	22		26-12-21	115-199
	22		W1120	0504	24		26-12-21	001-099
	22		W1120	0133	24		26-12-21	115-199
	23		W1120	0505	24		26-12-21	001-099
	23		W1120	0139	24		26-12-21	115-199
	24	UNUSED						ALL
	25		W1120	0516	22		26-12-21	001-099
	25		W1120	0288	22		26-12-21	115-199
	26	UNUSED						ALL
	27		W1120	0507	24		26-12-21	001-099
	27		W1120	0142	24		26-12-21	115-199
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W1120	0506	24		26-12-21	001-099
	30		W1120	0291	24		26-12-21	115-199
	31		W1120	0511	24		26-12-21	001-099
	31		W1120	0136	24		26-12-21	115-199
	32		W1120	0519	24		26-12-21	001-099
	32		W1120	0245	24		26-12-21	115-199
	33		W1120	0523	24		26-12-21	001-099
	33		W1120	0137	24		26-12-21	115-199
	34		W1120	0524	24		26-12-21	001-099
	34		W1120	0140	24		26-12-21	115-199
	35	UNUSED						ALL
	36		W1120	0404	24		26-13-21	ALL
	37		W1120	0385	24		26-13-21	ALL
	38	UNUSED						ALL
	39		W1120	0383	24		26-13-21	ALL
	40		W1120	0382	24		26-13-21	ALL
	41	UNUSED						ALL
	42		W1120	0388	24		26-13-21	ALL
	43		W1120	0381	24		26-13-21	ALL
	44		W1120	0380	24		26-13-21	ALL
	45	UNUSED						ALL
	46		W1120	0409	22		26-13-21	ALL
	47		W1120	0401	24		26-13-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D04200

Page 11

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04252		P54/ /		PLUG (continued)				ALL
	48		W1120	0395	24		26-13-21	ALL
	49		W1120	0391	22		26-13-21	ALL
	50		W1120	0393	24		26-13-21	ALL
	51		W1120	0517	22		26-12-21	001-099
	51		W1120	0289	22		26-12-21	115-199
	52		W1120	0522	24		26-12-21	001-099
	52		W1120	0138	24		26-12-21	115-199
	53		W1120	0471	24		26-12-21	ALL
	54		W1120	0510	24		26-12-21	001-099
	54		W1120	0131	24		26-12-21	115-199
	55		W1120	0384	24		26-13-21	ALL
	56		W1120	PN01			26-12-21	ALL
	57	UNUSED						ALL
	58		W1120	0520	24		26-12-21	001-099
	58		W1120	0246	24		26-12-21	115-199
	59	UNUSED						ALL
	60		W1120	0513	24		26-12-21	001-099
	60		W1120	0307	24		26-12-21	115-199
	61	UNUSED						ALL
	62		W1120	0509	24		26-12-21	001-099
	62		W1120	0135	24		26-12-21	115-199
	63		W1120	0525	24		26-12-21	001-099
	63		W1120	0141	24		26-12-21	115-199
	64		W1120	0508	24		26-12-21	001-099
	64		W1120	0292	24		26-12-21	115-199
	65		W1120	0512	24		26-12-21	001-099
	65		W1120	0295	24		26-12-21	115-199
	66	UNUSED						ALL
D04254		P54/ /		PLUG				ALL
	1		W1120	0230	24		26-16-11	001-099
	1		W1120	0175	24		26-16-11	115-199
	2		W1120	0249	24		26-16-11	001-099
	2		W1120	0343	24		26-16-11	115-199
	3		W1120	0280	24		26-16-11	001-099
	3		W1120	0332	24		26-16-11	115-199
	4		W1120	0257	24		26-16-11	001-099
	4		W1120	0350	24		26-16-11	115-199
	5		W1120	0289	24		26-16-11	001-099
	5		W1120	0341	24		26-16-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D04200

Page 12

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04254		P54/ /		PLUG (continued)				ALL
	6	UNUSED						ALL
	7		W1120	0265	24		26-16-11	001-099
	7		W1120	0356	24		26-16-11	115-199
	8		W1120	0266	24		26-16-11	001-099
	8		W1120	0357	24		26-16-11	115-199
	9	UNUSED						ALL
	10		W1120	0268	24		26-16-11	001-099
	10		W1120	0359	24		26-16-11	115-199
	11		W1120	0232	24		26-16-11	001-099
	11		W1120	0185	24		26-16-11	115-199
	12	UNUSED						ALL
	13		W1120	0271	24		26-16-11	001-099
	13		W1120	0362	24		26-16-11	115-199
	14		W1120	0270	24		26-16-11	001-099
	14		W1120	0361	24		26-16-11	115-199
	15		W1120	0258	24		26-16-11	001-099
	15		W1120	0354	24		26-16-11	115-199
	16		W1120	0255	22		26-16-11	001-099
	16		W1120	0348	22		26-16-11	115-199
	17		W1120	0251	22		26-16-11	001-099
	17		W1120	0345	22		26-16-11	115-199
	18		W1120	0292	22		26-16-11	001-099
	18		W1120	0364	22		26-16-11	115-199
	19		W1120	0295	24		26-16-11	001-099
	19		W1120	0367	24		26-16-11	115-199
	20		W1120	0260	24		26-16-11	001-099
	20		W1120	0352	24		26-16-11	115-199
	21		W1120	0259	22		26-16-11	001-099
	21		W1120	0351	22		26-16-11	115-199
	22		W1120	0235	24		26-16-11	001-099
	22		W1120	0190	24		26-16-11	115-199
	23		W1120	0233	24		26-16-11	001-099
	23		W1120	0186	24		26-16-11	115-199
	24		W1120	0267	24		26-16-11	001-099
	24		W1120	0358	24		26-16-11	115-199
	25		W1120	0252	22		26-16-11	001-099
	25		W1120	0346	22		26-16-11	115-199
	26	UNUSED						ALL
	27		W1120	0283	24		26-16-11	001-099
	27		W1120	0335	24		26-16-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D04200

Page 13

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04254		P54/ /		PLUG (continued)				ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W1120	0284	24		26-16-11	001-099
	30		W1120	0336	24		26-16-11	115-199
	31	UNUSED						ALL
	32		W1120	0293	24		26-16-11	001-099
	32		W1120	0365	24		26-16-11	115-199
	33		W1120	0231	24		26-16-11	001-099
	33		W1120	0176	24		26-16-11	115-199
	34		W1120	0250	24		26-16-11	001-099
	34		W1120	0344	24		26-16-11	115-199
	35		W1120	PO01			26-16-11	ALL
	36		W1120	0290	24		26-16-11	001-099
	36		W1120	0342	24		26-16-11	115-199
	37	UNUSED						ALL
	38		W1120	0262	24		26-16-11	001-099
	38		W1120	0472	24		26-16-11	115-199
	39		W1120	0238	24		26-16-11	001-099
	39		W1120	0179	24		26-16-11	115-199
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44		W1120	0281	24		26-16-11	001-099
	44		W1120	0333	24		26-16-11	115-199
	45	UNUSED						ALL
	46		W1120	0269	22		26-16-11	001-099
	46		W1120	0360	22		26-16-11	115-199
	47		W1120	0234	24		26-16-11	001-099
	47		W1120	0189	24		26-16-11	115-199
	48		W1120	0263	24		26-16-11	001-099
	48		W1120	0355	24		26-16-11	115-199
	49		W1120	0253	22		26-16-11	001-099
	49		W1120	0347	22		26-16-11	115-199
	50		W1120	0256	24		26-16-11	001-099
	50		W1120	0349	24		26-16-11	115-199
	51		W1120	0291	22		26-16-11	001-099
	51		W1120	0363	22		26-16-11	115-199
	52		W1120	0296	24		26-16-11	001-099
	52		W1120	0368	24		26-16-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D04200

Page 14

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04254		P54/ /		PLUG (continued)				ALL
	53		W1120	0261	24		26-16-11	001-099
	53		W1120	0353	24		26-16-11	115-199
	54		W1120	0242	24		26-16-11	001-099
	54		W1120	0183	24		26-16-11	115-199
	55		W1120	0239	24		26-16-11	001-099
	55		W1120	0180	24		26-16-11	115-199
	56	UNUSED						ALL
	57		W1120	0264	24		26-16-11	001-099
	57		W1120	0473	24		26-16-11	115-199
	58		W1120	0294	24		26-16-11	001-099
	58		W1120	0366	24		26-16-11	115-199
	59	UNUSED						ALL
	60	UNUSED						ALL
	61	UNUSED						ALL
	62		W1120	0288	24		26-16-11	001-099
	62		W1120	0340	24		26-16-11	115-199
	63		W1120	0287	24		26-16-11	001-099
	63		W1120	0339	24		26-16-11	115-199
	64	UNUSED						ALL
	65		W1120	0241	24		26-16-11	001-099
	65		W1120	0182	24		26-16-11	115-199
	66		W1120	PO01			26-16-11	ALL
D04258		P50/ /		RCPT				ALL
	1	UNUSED						ALL
	2		W1140	0477	24		26-18-11	ALL
	3	UNUSED						ALL
	4		W1140	PQ01			26-18-11	ALL
	5		W1140	0472	24		26-18-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W1140	0466	24		26-18-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W1140	0304	22		26-18-11	ALL
	16	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D04200

Page 15

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04258		P50/ /		RCPT (continued)				ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W1140	0473	24		26-18-11	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W1140	0474	24		26-18-11	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	56	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D04200

Page 16

Dec 18/2007

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04258		P50/ /		RCPT (continued)				ALL
	57	UNUSED						ALL
	58	UNUSED						ALL
	59	UNUSED						ALL
	60		W1140	PQ01			26-18-11	ALL
	61	UNUSED						ALL
	62	UNUSED						ALL
	63	UNUSED						ALL
	64	UNUSED						ALL
	65	UNUSED						ALL
	66	UNUSED						ALL
D04262		560/191/R057		RCPT,115V AC,400CPS,5AMP				ALL
	= G	D	W4502	0303	18		25-29-11	ALL
	= N	D	W4502	0302	18		25-29-11	ALL
	= P	D	W4502	0301	18		25-29-11	ALL
D04266		P36/ /		RELAY SOCKET (PLATE 'F')				ALL
	A1		W1260	0920	24		21-58-12	ALL
	A2		W1260	0957	24		21-58-13	ALL
	A3		W1260	0950	24		21-58-13	ALL
	B1	UNUSED						ALL
	B2		W1260	0918	24		21-58-12	ALL
	B3		W1260	0917	24		21-58-12	ALL
	C1	UNUSED						ALL
	C2		W1260	0956	16		21-58-13	ALL
	C3		W1260	5574	16		21-58-13	ALL
	D1		W1260	0945	24		21-58-12	ALL
	D2		W1260	0958	16		21-58-13	ALL
	D3	UNUSED						ALL
	X1		W1260	0921	24		21-58-12	ALL
	X2		W1260	0920	24		21-58-12	ALL
	X2		W1260	0922	24		21-58-12	ALL
D04268		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D04268		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	1		W1270	5015B	22		32-42-11	ALL
	2		W1270	5013R	22		32-42-11	ALL
	3		W1270	0183	22		32-42-11	ALL
	4		W1270	5014R	22		32-42-11	ALL
	5		W1270	5015R	22		32-42-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D04200

Page 17

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04268		P037-00/ /		RELAY SOCKET (PLATE 'A') (continued)				001-099
D04268		P37/ /		RELAY SOCKET (PLATE 'A') (continued)				115-199
	6		W1270	5013B	22		32-42-11	ALL
	7		W1270	0190	22		32-42-11	ALL
	8		W1270	5014B	22		32-42-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D04200

Page 18 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04300		717/289/L025		PLUG-				115-199
	1		W3544	0012	22		33-27-22	115-199
	2		W3544	0008	22		33-27-22	115-199
	3		W3544	0007	22		33-27-22	115-199
	4		W3544	0013	22		33-27-22	115-199
	5		W3544	0009	22		33-27-22	115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
D04306		P36/ /		RELAY SOCKET (PLATE 'D')				ALL
	A1	UNUSED						ALL
	A2		W1260	0470	24		74-31-11	ALL
	A3		W1260	0372	24		74-31-11	ALL
	B1		W1260	0376	20		74-31-11	001-099
	B1		W1260	0375	20		74-31-11	ALL
	B2		W1260	0374	20		74-31-11	ALL
	B3		W1260	0373	20		74-31-11	ALL
	X1		W1260	0376	20		74-31-11	ALL
	X2		W1260	0377	20		74-31-11	ALL
D04312		P36/ /		RELAY SOCKET (PLATE 'A')				ALL
	A1		W1260	0348	24		30-31-11	ALL
	A2		W1260	0347	24		30-31-11	ALL
	A3	UNUSED						ALL
	B1		W1260	0350	22		30-32-11	001-099
	B1		W1260	0351	22		30-32-11	ALL
	B2		W1260	0353	22		30-32-11	ALL
	B3	UNUSED						ALL
	C1		W1260	0632	18		30-34-21	ALL
	C2		W1260	0619	18		30-34-21	ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1260	0407	22		77-12-41	001-099
	X1		W1260	0473	22		77-12-41	ALL

HOOKUP LIST

D280N032

91-21-51

Section D04300

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04312		P36/ /		RELAY SOCKET (PLATE 'A') (continued)				ALL
	X2		W1260	0474	22		77-12-41	ALL
D04314		P037-00/ /		RELAY SOCKET (PLATE 'C')				001-099
D04314		P37/ /		RELAY SOCKET (PLATE 'C')				115-199
	A1		W1270	0846	24		30-31-12	ALL
	A2		W1270	0845	24		30-31-12	001-099
	A2		W1270	0847	24		30-31-12	ALL
	A3	UNUSED						ALL
	B1		W1270	0481	22		30-32-11	001-099
	B1		W1270	0483	22		30-32-11	ALL
	B2		W1270	0482	22		30-32-11	001-099
	B2		W1270	0484	22		30-32-11	ALL
	B3	UNUSED						ALL
	C1		W1270	0865	22		29-22-11	ALL
	C2		W1270	0868	22		29-22-11	ALL
	C3		W1270	0906	22		29-22-11	001-099
	C3		W1270	0871	22		29-22-11	ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1270	0824	22		77-12-41	001-099
	X1		W1270	0823	22		77-12-41	ALL
	X2		W1270	0825	22		77-12-41	ALL
D04316		P037-00/ /		RELAY SOCKET (PLATE 'C')				001-099
D04316		P37/ /		RELAY SOCKET (PLATE 'C')				115-199
	1	UNUSED						ALL
	2		W1270	0841	24		30-33-11	ALL
	3		W1270	0824	22		77-12-41	ALL
	4		W1270	0840	24		30-33-11	ALL
	5		W1270	5817	24		30-33-11	001-099
	5		W1270	0839	24		30-33-11	115-199
	6		W1270	0649	24		21-58-12	ALL
	7		W1270	0826	22		77-12-41	ALL
	8		W1270	0259	24		21-58-12	ALL
D04322		P36/ /		RELAY SOCKET (PLATE 'D')				ALL
	1		W1260	0403	22		76-11-21	ALL
	2	UNUSED						ALL
	3		W1260	0405	22		76-11-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D04300

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04322		P36/ /		RELAY SOCKET (PLATE 'D') (continued)				ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1260	0400	22		76-11-21	ALL
	7		W1260	0404	22		76-11-21	ALL
	8	UNUSED						ALL
D04330		750/295/L035		RCPT-				115-199
	A		W3562	0001	12		25-31-27	115-199
	B		W3562	0002	12		25-31-27	115-199
	C		W3562	0003	12		25-31-27	115-199
	D		W3562	0004	12		25-31-27	115-199
D04332		750/295/L035		RCPT-				115-199
	1		W3544	0014	20		33-24-12	115-199
	2		W3544	0015	20		33-24-12	115-199
	3		W3544	0009	22		33-27-22	115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
	8		W3544	0011	22		33-27-22	115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11		W3544	0007	22		33-27-22	115-199
	12		W3544	0010	22		33-27-22	115-199
D04334		P54/ /		PLUG				ALL
	1		W1120	0374	24		26-13-11	ALL
	2		W1120	0375	24		26-13-11	ALL
	3		W1120	0530	24		26-13-11	001-099
	3		W1120	0256	24		26-13-11	115-199
	4		W1120	0548	24		26-13-11	001-099
	4		W1120	0283	24		26-13-11	115-199
	5		W1120	0542	24		26-13-11	001-099
	5		W1120	0267	24		26-13-11	115-199
	6		W1120	0529	24		26-13-11	001-099
	6		W1120	0255	24		26-13-11	115-199
	7		W1120	0371	24		26-13-11	ALL
	8		W1120	0369	24		26-13-11	ALL
	9	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D04300

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04334		P54/ /		PLUG (continued)				ALL
	10		W1120	0372	24		26-13-11	ALL
	11		W1120	0370	24		26-13-11	ALL
	12		W1120	PP01			26-12-11	ALL
	13		W1120	0539	24		26-13-11	001-099
	13		W1120	0264	24		26-13-11	115-199
	14		W1120	0538	24		26-13-11	001-099
	14		W1120	0263	24		26-13-11	115-199
	15		W1120	0546	24		26-13-11	001-099
	15		W1120	0271	24		26-13-11	115-199
	16		W1120	0544	22		26-13-11	001-099
	16		W1120	0269	22		26-13-11	115-199
	17		W1120	0541	22		26-13-11	001-099
	17		W1120	0266	22		26-13-11	115-199
	18		W1120	0493	22		26-12-11	001-099
	18		W1120	0235	22		26-12-11	115-199
	19		W1120	0496	24		26-12-11	001-099
	19		W1120	0239	24		26-12-11	115-199
	20		W1120	0489	24		26-12-11	001-099
	20		W1120	0231	24		26-12-11	115-199
	21		W1120	0490	22		26-12-11	001-099
	21		W1120	0232	22		26-12-11	115-199
	22		W1120	0479	24		26-12-11	001-099
	22		W1120	0125	24		26-12-11	115-199
	23		W1120	0480	24		26-12-11	001-099
	23		W1120	0285	24		26-12-11	115-199
	24	UNUSED						ALL
	25		W1120	0491	22		26-12-11	001-099
	25		W1120	0230	22		26-12-11	115-199
	26	UNUSED						ALL
	27		W1120	0482	24		26-12-11	001-099
	27		W1120	0130	24		26-12-11	115-199
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W1120	0481	24		26-12-11	001-099
	30		W1120	0118	24		26-12-11	115-199
	31		W1120	0487	24		26-12-11	001-099
	31		W1120	0124	24		26-12-11	115-199
	32		W1120	0494	24		26-12-11	001-099
	32		W1120	0236	24		26-12-11	115-199
	33		W1120	0498	24		26-12-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D04300

Page 4

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04334		P54/ /		PLUG (continued)				ALL
	33		W1120	0127	24		26-12-11	115-199
	34		W1120	0499	24		26-12-11	001-099
	34		W1120	0128	24		26-12-11	115-199
	35	UNUSED						ALL
	36		W1120	0376	24		26-13-11	ALL
	37		W1120	0536	24		26-13-11	001-099
	37		W1120	0262	24		26-13-11	115-199
	38	UNUSED						ALL
	39		W1120	0534	24		26-13-11	001-099
	39		W1120	0260	24		26-13-11	115-199
	40		W1120	0533	24		26-13-11	001-099
	40		W1120	0259	24		26-13-11	115-199
	41	UNUSED						ALL
	42		W1120	0537	24		26-13-11	001-099
	42		W1120	0265	24		26-13-11	115-199
	43		W1120	0532	24		26-13-11	001-099
	43		W1120	0258	24		26-13-11	115-199
	44		W1120	0531	24		26-13-11	001-099
	44		W1120	0257	24		26-13-11	115-199
	45	UNUSED						ALL
	46		W1120	0540	22		26-13-11	001-099
	46		W1120	0214	22		26-13-11	115-199
	47		W1120	0373	24		26-13-11	ALL
	48		W1120	0547	24		26-13-11	001-099
	48		W1120	0282	24		26-13-11	115-199
	49		W1120	0543	22		26-13-11	001-099
	49		W1120	0268	22		26-13-11	115-199
	50		W1120	0545	24		26-13-11	001-099
	50		W1120	0270	24		26-13-11	115-199
	51		W1120	0492	22		26-12-11	001-099
	51		W1120	0234	22		26-12-11	115-199
	52		W1120	0497	24		26-12-11	001-099
	52		W1120	0126	24		26-12-11	115-199
	53		W1120	0470	24		26-12-11	ALL
	54		W1120	0485	24		26-12-11	001-099
	54		W1120	0119	24		26-12-11	115-199
	55		W1120	0535	24		26-13-11	001-099
	55		W1120	0261	24		26-13-11	115-199
	56		W1120	PP01			26-12-11	ALL
	57	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D04300

Page 5

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04334		P54/ /		PLUG (continued)				ALL
	58		W1120	0495	24		26-12-11	001-099
	58		W1120	0237	24		26-12-11	115-199
	59	UNUSED						ALL
	60		W1120	0488	24		26-12-11	001-099
	60		W1120	0229	24		26-12-11	115-199
	61	UNUSED						ALL
	62		W1120	0484	24		26-12-11	001-099
	62		W1120	0123	24		26-12-11	115-199
	63		W1120	0500	24		26-12-11	001-099
	63		W1120	0129	24		26-12-11	115-199
	64		W1120	0483	24		26-12-11	001-099
	64		W1120	0117	24		26-12-11	115-199
	65		W1120	0486	24		26-12-11	001-099
	65		W1120	0121	24		26-12-11	115-199
	66	UNUSED						ALL
D04338		358/297/L025		RCPT-				ALL
	1	VY	W3702	0881	20		35-21-12	ALL
D04340		358/297/L025		PLUG-				ALL
	1	VG	W3702	0891	18		35-21-12	ALL
	=1	UNUSED						ALL
D04342		P36/ /		RELAY SOCKET (PLATE 'A')				ALL
	1		W1260	5004B	22		32-42-11	ALL
	2		W1260	5006R	22		32-42-11	ALL
	3		W1260	5883	22		32-42-11	ALL
	4		W1260	5005R	22		32-42-11	ALL
	5		W1260	5004R	22		32-42-11	ALL
	6		W1260	5006B	22		32-42-11	ALL
	7		W1260	5882	22		32-42-11	ALL
	8		W1260	5005B	22		32-42-11	ALL
D04344		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D04344		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	1		W1270	5580	24		21-61-11	ALL
	2		W1270	5601	24		21-61-11	ALL
	3		W1270	5602	24		21-61-11	ALL
	4	UNUSED						ALL
	5		W1270	5599	24		21-61-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D04300

Page 6

Dec 18/2007

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04344		P037-00/ /		RELAY SOCKET (PLATE 'A') (continued)				001-099
D04344		P37/ /		RELAY SOCKET (PLATE 'A') (continued)				115-199
	6		W1270	5600	24		21-61-11	ALL
	7		W1270	5598	24		21-61-11	ALL
	8	UNUSED						ALL
D04346		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D04346		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	1		W1270	5608	24		21-61-21	ALL
	2		W1270	5627	24		21-61-21	ALL
	3		W1270	5628	24		21-61-21	ALL
	4	UNUSED						ALL
	5		W1270	5622	24		21-61-21	ALL
	6		W1270	5626	24		21-61-21	ALL
	7		W1270	5621	24		21-61-21	ALL
	8	UNUSED						ALL
D04348		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D04348		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	1		W1270	5643	24		21-61-31	ALL
	2		W1270	5653	24		21-61-31	ALL
	3		W1270	5654	24		21-61-31	ALL
	4	UNUSED						ALL
	5		W1270	5649	24		21-61-31	ALL
	6		W1270	5977	24		21-61-31	ALL
	7		W1270	5648	24		21-61-31	ALL
	8	UNUSED						ALL
D04350		275/280/L015		PLUG				001-099
D04350		260/270/L020		PLUG				115-199
	1		W2072	0247	24		21-61-11	ALL
	2		W2072	0246	24		21-61-11	ALL
	3		W2072	0245	20		21-61-11	ALL
D04354		P36/ /		RELAY SOCKET (PLATE 'D')				ALL
	1		W1260	0622	24		24-34-11	ALL
	2	UNUSED						ALL
	3		W1260	0797	22		32-61-21	ALL
	4	UNUSED						ALL
	5		W1260	0504	22		32-61-21	ALL
	6		W1260	0485	20		32-35-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D04300

Page 7

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04354		P36/ /		RELAY SOCKET (PLATE 'D') (continued)				ALL
	7	UNUSED						001-099
	7		W1260	0847	20		32-35-11	115-199
	8	UNUSED						001-099
	8		W1260	0845	20		32-35-11	115-199
	9	UNUSED						ALL
	10		W1260	0484	20		32-35-11	ALL
	11		W1260	0483	20		32-35-11	ALL
	12		W1260	0487	20		32-35-11	ALL
	13		W1260	0621	24		24-34-11	ALL
	14	UNUSED						ALL
D04360		384/187/L004		PLUG				001-099
D04360		384/187/L 04		PLUG				115-199
	1	UNUSED						ALL
	2		W2150	0013	20		32-35-11	ALL
	3		W2150	0012	20		32-35-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D04394		P36/ /		RELAY SOCKET (PLATE 'D')				ALL
	A1		W1260	0515	24		26-15-11	ALL
	A2		W1260	0518	24		26-15-11	001-099
	A2		W1260	0518	22		26-15-11	115-199
	A3	UNUSED						ALL
	B1		W1260	0488	22		49-61-11	ALL
	B2		W1260	0489	22		49-61-11	ALL
	B3		W1260	0490	22		49-61-11	ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1260	0507	24		26-15-11	ALL
	X2		W1260	0516	24		26-15-11	ALL
D04396		P36/ /		RELAY SOCKET (PLATE 'D')				ALL
	A1		W1260	0594	24		26-15-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D04300

Page 8

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04396		P36/ /		RELAY SOCKET (PLATE 'D') (continued)				ALL
	A2		W1260	0593	24		26-15-12	ALL
	A3	UNUSED						ALL
	B1		W1260	0595	24		26-15-12	ALL
	B2		W1260	0592	24		26-15-12	ALL
	B3	UNUSED						ALL
	X1		W1260	0522	24		26-15-11	ALL
	X2		W1260	0512	24		26-15-11	ALL
D04398		P36/ /		RELAY SOCKET (PLATE 'D')				ALL
	1	UNUSED						ALL
	2		W1260	0513	24		26-15-11	ALL
	3		W1260	0519	24		26-15-11	ALL
	4		W1260	0517	24		26-15-11	ALL
	5	UNUSED						ALL
	6	UNUSED						001-099
	6		W1260	0608	24		26-15-11	115-199
	7		W1260	0509	24		26-15-11	ALL
	8	UNUSED						001-099
	8		W1260	0525	24		26-15-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D04300

Page 9 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04400		P36/ /		RELAY SOCKET (PLATE 'D')				ALL
	1	UNUSED						001-099
	1		W1260	0525	24		26-15-11	115-199
	2		W1260	0520	24		26-15-11	ALL
	3		W1260	0521	24		26-15-11	ALL
	4	UNUSED						ALL
	5		W1260	0578	20		26-22-21	ALL
	6	UNUSED						001-099
	6		W1260	0609	24		26-15-11	115-199
	7		W1260	0510	24		26-15-11	ALL
	8	UNUSED						ALL
D04402		635/293/R17		PLUG				001-099
D04402		635/202/R17		PLUG				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W4310	0001	20		26-16-11	001-099
	4		W2628	0015	22		26-16-11	115-199
	5		W4310	0004	20		26-16-11	001-099
	5		W2628	0018	22		26-16-11	115-199
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W4310	0005	20		26-16-11	001-099
	9		W2628	0019	22		26-16-11	115-199
	10	UNUSED						ALL
	11		W4310	0003	20		26-16-11	001-099
	11		W2628	0017	22		26-16-11	115-199
	12		W4310	0002	20		26-16-11	001-099
	12		W2628	0016	22		26-16-11	115-199
D04404		638/201/R011		PLUG				001-099
D04404		620/201/R11		PLUG				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W2628	0020	22		26-16-11	ALL
	5		W2628	0023	22		26-16-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D04400

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04404		638/201/R011		PLUG (continued)				001-099
D04404		620/201/R11		PLUG (continued)				115-199
	8	UNUSED						ALL
	9		W2628	0024	22		26-16-11	ALL
	10	UNUSED						ALL
	11		W2628	0022	22		26-16-11	ALL
	12		W2628	0021	22		26-16-11	ALL
D04406		1352/195/R053		PLUG				001-099
D04406		1358/195/R53		PLUG				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W2710	0001	20		26-16-11	001-099
	4		W2626	0033	22		26-16-11	115-199
	5		W2710	0004	20		26-16-11	001-099
	5		W2626	0036	22		26-16-11	115-199
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W2710	0005	20		26-16-11	001-099
	9		W2626	0037	22		26-16-11	115-199
	10	UNUSED						ALL
	11		W2710	0003	20		26-16-11	001-099
	11		W2626	0035	22		26-16-11	115-199
	12		W2710	0002	20		26-16-11	001-099
	12		W2626	0034	22		26-16-11	115-199
D04408		1356/195/R048		PLUG				001-099
D04408		1356/195/R53		PLUG				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W2626	0038	22		26-16-11	ALL
	5		W2626	0041	22		26-16-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W2626	0042	22		26-16-11	ALL
	10	UNUSED						ALL
	11		W2626	0040	22		26-16-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D04400

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04408		1356/195/R048		PLUG (continued)				001-099
D04408		1356/195/R53		PLUG (continued)				115-199
	12		W2626	0039	22		26-16-11	ALL
D04410		1196/172/L012		PLUG				001-099
D04410		1196/172/R012		PLUG				115-199
	1		W2626	0043	20		26-23-11	ALL
	2		W2626	0068	20		26-23-11	ALL
	3		W2626	0045	20		26-23-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D04412		1190/159/L013		PLUG				ALL
	1		W2024	0001R	20		26-23-11	ALL
	2		W2024	0002R	20		26-23-11	ALL
	3		W2024	0003R	20		26-23-11	ALL
D04414		1190/159/L008		PLUG				ALL
	1		W2024	0004R	20		26-23-11	ALL
	2		W2024	0005R	20		26-23-11	ALL
	3		W2024	0006R	20		26-23-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D04416		1196/172/R009		PLUG				ALL
	1		W2628	0033	20		26-23-11	ALL
	2		W2628	0066	20		26-23-11	ALL
	3		W2628	0035	20		26-23-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D04418		1191/159/R008		PLUG				ALL
	1		W2026	0001R	20		26-23-11	ALL
	2		W2026	0002R	20		26-23-11	ALL
	3		W2026	0003R	20		26-23-11	ALL
D04420		1191/159/R013		PLUG				ALL
	1		W2026	0004R	20		26-23-11	ALL
	2		W2026	0005R	20		26-23-11	ALL
	3		W2026	0006R	20		26-23-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D04400

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04420		1191/159/R013		PLUG (continued)				ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D04422		P36/ /		RELAY SOCKET (PLATE 'D')				ALL
	A1		W1260	0583	20		26-22-21	001-099
	A1		W1260	0586	20		26-22-21	115-199
	A2		W1260	0582	20		26-22-21	001-099
	A2		W1260	0586	20		26-22-21	001-099
	A2		W1260	0583	20		26-22-21	115-199
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1260	0582	20		26-22-21	ALL
	X2		W1260	0578	20		26-22-21	ALL
D04424		610/203/R17		PLUG				001-099
D04424		615/203/R017		PLUG				115-199
	1		W4312	0425	22		26-16-21	001-099
	1		W2358	0425	22		26-16-21	115-199
	2		W4312	0423	20		26-16-21	001-099
	2		W2358	0423	20		26-16-21	115-199
	3		W4312	0424	20		26-16-21	001-099
	3		W2358	0424	20		26-16-21	115-199
D04426		607/203/R010		PLUG				ALL
	1		W2358	0416	22		26-16-21	ALL
	2		W2358	0435	20		26-16-21	ALL
	3		W2358	0426	20		26-16-21	ALL
D04428		1353/174/R52		PLUG				001-099
D04428		1353/176/R60		PLUG				115-199
	1		W2712	0417	22		26-16-21	001-099
	1		W2358	0417	22		26-16-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section D04400

Page 4

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04428		1353/174/R52		PLUG (continued)				001-099
D04428		1353/176/R60		PLUG (continued)				115-199
	2		W2712	0429	20		26-16-21	001-099
	2		W2358	0429	20		26-16-21	115-199
	3		W2712	0430	20		26-16-21	001-099
	3		W2358	0430	20		26-16-21	115-199
D04430		1356/176/R60		PLUG				001-099
D04430		1356/176/R55		PLUG				115-199
	1		W2358	0418	22		26-16-21	ALL
	2		W2358	0431	20		26-16-21	ALL
	3		W2358	0432	20		26-16-21	ALL
D04432		1356/176/R80		PLUG				001-099
D04432		1356/176/R55		PLUG				115-199
	1	UNUSED						ALL
	2		W2358	0434	22		26-16-21	ALL
	3		W2358	0433	20		26-16-21	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D04434		625/203/R10		PLUG				ALL
	1	UNUSED						ALL
	2		W2358	0427	22		26-16-21	ALL
	3		W2358	0428	20		26-16-21	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D04438		P036-00/ /		RELAY SOCKET (PLATE 'F')				001-099
D04438		P36/ /		RELAY SOCKET (PLATE 'F')				115-199
	A1		W1260	8015	24		26-16-21	ALL
	A2		W1260	8007	24		26-16-21	ALL
	A3		W1260	8014	24		26-16-21	ALL
	B1		W1260	8012	24		26-16-21	001-099
	B1		W1260	8011	24		26-16-21	ALL
	B2		W1260	8010	22		26-16-21	ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D04400

Page 5

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04438		P036-00/ /		RELAY SOCKET (PLATE 'F') (continued)				001-099
D04438		P36/ /		RELAY SOCKET (PLATE 'F') (continued)				115-199
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1260	8009	24		26-16-21	ALL
	X2		W1260	8011	24		26-16-21	001-099
	X2		W1260	8013	24		26-16-21	ALL
D04440		P036-00/ /		RELAY SOCKET (PLATE 'F')				001-099
D04440		P36/ /		RELAY SOCKET (PLATE 'F')				115-199
	A1		W1260	8029	24		26-16-21	ALL
	A2		W1260	8007	24		26-16-21	001-099
	A2		W1260	8005	24		26-16-21	ALL
	A3		W1260	8028	24		26-16-21	ALL
	B1		W1260	8018	24		26-16-21	001-099
	B1		W1260	8023	24		26-16-21	ALL
	B2		W1260	8022	22		26-16-21	ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1260	8009	24		26-16-21	001-099
	X1		W1260	8008	24		26-16-21	ALL
	X2		W1260	8023	24		26-16-21	001-099
	X2		W1260	8024	24		26-16-21	ALL
D04452		204/173/L02		RCPT-M00966 MICROSWITCH PACK ASSY				ALL
	1		W2355	0049	20		27-62-11	001-099
	1		W2355	0049	22		27-62-11	115-199
	2		W2355	0050	22		27-62-11	ALL
	3		W2355	0048	22		27-62-11	ALL
	4		W2355	0104	24		24-22-22	ALL
	5		W2355	0105	24		24-22-22	ALL
	6		W2355	0030	24		31-51-42	ALL
	7		W2355	0031	20		31-51-42	ALL
	8		W2355	0012	24		22-32-15	ALL
	9		W2355	0013	24		22-32-15	ALL
	10		W2355	0015	24		22-32-15	ALL

HOOKUP LIST

D280N032

91-21-51

Section D04400

Page 6

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04452		204/173/L02		RCPT-M00966 MICROSWITCH PACK ASSY (continued)				ALL
	11		W2355	0091	22		32-42-12	001-099
	11		W2355	0091	24		32-42-12	115-199
	12		W2355	0092	22		32-42-12	001-099
	12		W2355	0092	24		32-42-12	115-199
	13	UNUSED						ALL
	14		W2355	0093	22		32-42-12	001-099
	14		W2355	0093	24		32-42-12	115-199
	15		W2355	0094	22		32-42-12	001-099
	15		W2355	0094	24		32-42-12	115-199
	16	UNUSED						ALL
	17		W2355	0042	24		21-31-11	ALL
	18	UNUSED						ALL
	19		W2355	0045	24		73-21-12	ALL
	20		W2355	0044	24		73-21-12	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04454		204/172/L002		RCPT-M00966 MICROSWITCH PACK ASSY				001-099
D04454		204/172/L2		RCPT-M00966 MICROSWITCH PACK ASSY				115-199
	1		W2357	0038	22		32-42-12	001-099
	1		W2357	0038	24		32-42-12	115-199
	2		W2357	0023	22		32-42-12	001-099
	2		W2357	0023	24		32-42-12	115-199
	3	UNUSED						ALL
	4		W2357	0030	22		32-42-12	001-099
	4		W2357	0030	24		32-42-12	115-199
	5		W2357	0024	22		32-42-12	001-099
	5		W2357	0024	24		32-42-12	115-199
	6	UNUSED						ALL
	7		W2357	0107	24		24-22-22	ALL
	8		W2357	0108	24		24-22-22	ALL
	9		W2357	0039	24		31-51-42	ALL
	10		W2357	0042	20		31-51-42	ALL
	11		W2357	0109	24		21-31-21	ALL
	12	UNUSED						ALL
	13		W2357	0014	24		73-21-22	ALL
	14		W2357	0015	24		73-21-22	ALL
	15	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D04400

Page 7

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04454		204/172/L002		RCPT-M00966 MICROSWITCH PACK ASSY (continued)				001-099
D04454		204/172/L2		RCPT-M00966 MICROSWITCH PACK ASSY (continued)				115-199
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04462		426/ /		PLUG-				001-003, 005, 007-099
D04462		426/288/R38		PLUG-				004, 006, 115-199
	1		W3614	0081	20		33-21-21	001-099
	1		W3614	0061	20		33-21-21	115-199
	2		W3614	0082	20		33-21-21	001-099
	2		W3614	0062	20		33-21-21	115-199
	3		W3614	0083	24		33-21-21	001-099
	3		W3614	0063	24		33-21-21	115-199
	4		W3614	0084	20		33-21-21	001-099
	4		W3614	0064	20		33-21-21	115-199
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04464		656/288/R38		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W3614	0025	22		33-21-21	001-099
	5		W3614	0125	22		33-21-21	115-199
	6		W3614	0026	22		33-21-21	001-099
	6		W3614	0126	22		33-21-21	115-199
	7		W3614	0027	22		33-21-21	001-099

HOOKUP LIST

D280N032

91-21-51

Section D04400

Page 8

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04464		656/288/R38		PLUG- (continued)				ALL
	7		W3614	0127	22		33-21-21	115-199
	8		W3614	0028	22		33-21-21	001-099
	8		W3614	0128	22		33-21-21	115-199
	9		W3614	0029	22		33-21-21	001-099
	9		W3614	0129	22		33-21-21	115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04470		385/235/L070		PLUG-				001-099
D04470		385/235/L70		PLUG-				115-199
	1	VG	W3532	0059	20		33-51-12	ALL
	=1	UNUSED						ALL
D04472		385/235/L070		RCPT-				001-099
D04472		385/235/L70		RCPT-				115-199
	1	VY	W3532	0009	16		33-51-12	001-099
	1	VY	W3532	0009	18		33-51-12	115-199
D04474		372/245/R73		PLUG				ALL
	1	VG	W3632	0059	20		33-51-12	ALL
	=1	UNUSED						ALL
D04476		372/245/R73		RCPT-				ALL
	1	VY	W3632	0009	18		33-51-12	ALL
D04478		735/240/L060		PLUG-				001-099
D04478		735/240/L60		PLUG-				115-199
	1	VG	W3532	0159	20		33-51-13	ALL
	=1	UNUSED						ALL
D04480		735/240/L060		RCPT-				001-099
D04480		735/240/L60		RCPT-				115-199
	1	VY	W3532	0109	18		33-51-13	ALL
D04482		737/240/R70		PLUG-				ALL
	1	VG	W3632	0159	20		33-51-13	ALL
	=1	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D04400

Page 9

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04484		737/240/R70		RCPT-				ALL
	1	VY	W3632	0109	18		33-51-13	ALL
D04486		1360/245/L072		PLUG-				ALL
	1	VG	W3534	0059	20		33-51-14	ALL
	=1	UNUSED						ALL
D04488		1360/245/L072		RCPT-				001-099
D04488		1360/245/L72		RCPT-				115-199
	1	VY	W3534	0009	18		33-51-14	ALL
D04490		1355/242/R73		PLUG-				ALL
	1	VG	W3634	0059	20		33-51-14	ALL
	=1	UNUSED						ALL
D04492		1355/242/R73		RCPT-				ALL
	1	VY	W3634	0009	18		33-51-14	ALL
D04494		P031-00/ /		RELAY SOCKET				001-099
D04494		P37/ /		RELAY SOCKET (PLATE 'B')				115-199
	A1	UNUSED						ALL
	A2	UNUSED						ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2		W1136	0039	18		25-31-33	001-099
	B2		W1270	0499	20		25-31-33	115-199
	B3		W1136	0040	18		25-31-33	001-099
	B3		W1270	0500	20		25-31-33	115-199
	C1	UNUSED						ALL
	C2		W1136	0052	20		25-31-11	001-099
	C2		W1270	0497	20		25-31-21	115-199
	C3		W1136	0053	20		25-31-11	001-099
	C3		W1270	0498	20		25-31-21	115-199
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1136	0041	24		24-51-71	001-099
	X1		W1270	0516	24		24-51-71	115-199
	X2		W1136	0042	24		24-51-71	001-099
	X2		W1270	0514	24		24-51-71	115-199

HOOKUP LIST

D280N032

91-21-51

Section D04400

Page 10

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04496		P037-00/ /		RELAY SOCKET (PLATE 'B')				001-099
D04496		P37/ /		RELAY SOCKET (PLATE 'B')				115-199
	1		W1270	0513	24		24-51-71	ALL
	2		W1270	0516	24		24-51-71	ALL
	3		W1270	0512	24		24-51-71	ALL
	4	UNUSED						ALL
	5		W1270	0518	24		24-51-71	ALL
	6		W1270	0517	24		24-51-71	ALL
	7		W1270	0521	24		24-51-71	ALL
	8	UNUSED						ALL
D04498		P037-00/ /		RELAY SOCKET (PLATE 'C')				001-099
D04498		P37/ /		RELAY SOCKET (PLATE 'C')				115-199
	A1		W1270	0711	20		74-31-21	001-099
	A1		W1270	0711	22		74-31-21	115-199
	A2		W1270	0712	20		74-31-21	001-099
	A2		W1270	0712	22		74-31-21	115-199
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1		W1270	0722	20		74-31-21	ALL
	D2		W1270	0809	20		74-31-21	ALL
	D3	UNUSED						ALL
	X1		W1270	0775	20		80-11-21	001-099
	X1		W1270	0838	20		80-11-21	ALL
	X2		W1270	0818	20		74-31-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D04400

Page 11 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04502		1689/240/L065		PLUG-				001-099
D04502		1689/240/L65		PLUG-				115-199
	1	VG	W3534	0159	20		33-51-15	ALL
	=1	UNUSED						ALL
D04504		1689/240/L065		RCPT-				001-099
D04504		1689/240/L65		RCPT-				115-199
	1	VY	W3534	0109	18		33-51-15	ALL
D04506		1689/255/R65		PLUG-				ALL
	1	VG	W3634	0159	18		33-51-15	ALL
	=1	UNUSED						ALL
D04508		1689/255/R65		RCPT-				ALL
	1	VY	W3634	0109	18		33-51-15	ALL
D04510		P36/ /		RELAY SOCKET (PLATE 'A')				ALL
	1		W1260	5886	22		32-42-12	ALL
	2	UNUSED						ALL
	3		W1260	5899	22		27-23-21	ALL
	4	UNUSED						ALL
	5		W1260	5898	22		27-23-21	ALL
	6		W1260	5888	22		32-09-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1260	0171	24		23-12-11	ALL
	11		W1260	0170	24		23-12-11	ALL
	12		W1260	5889	22		32-09-11	ALL
	13		W1260	5887	22		32-42-12	ALL
	14	UNUSED						ALL
D04512		418/294/L038		PLUG-				115-199
	1		W3514	0061	20		33-21-12	115-199
	2		W3514	0062	20		33-21-12	115-199
	3		W3514	0063	24		33-21-12	115-199
	4		W3514	0064	20		33-21-12	115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
	8	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D04500

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04512		418/294/L038		PLUG- (continued)				115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
D04514		E001-00/ /		PLUG				001-099
D04514		435/194/L30		PLUG				115-199
	1		W4220	0103	20		29-21-31	001-099
	1	18	W4220	0103	18		29-21-31	115-199
	2		W4220	0107	20		29-21-31	001-099
	2	18	W4220	0107	18		29-21-31	115-199
	3		W4220	0100	20		29-21-31	001-099
	3	18	W4220	0100	18		29-21-31	115-199
	4		W4220	0105	20		29-21-31	001-099
	4	18	W4220	0105	18		29-21-31	115-199
	5		W4220	0113	20		29-21-31	001-099
	5	18	W4220	0113	18		29-21-31	115-199
D04518		0710/298/L10		RCPT-				001-099
D04518		710/305/L10		RCPT-				115-199
	1		W3672	0021	22		23-42-11	001-099
	1		W3672	0023	22		33-25-11	115-199
	2		W3672	0034	22		33-25-11	001-099
	2		W3672	0021	22		23-42-11	115-199
	3		W3672	0033	22		33-25-11	001-099
	3		W3672	0022	22		33-25-11	115-199
	4		W3672	0123	20		33-51-13	001-099
	4		W3672	0100	20		33-25-11	115-199
	5		W3672	0124	20		33-51-13	001-099
	5	UNUSED						115-199
	6		W3672	0022	22		33-25-11	001-099
	6		W3672	0123	22		33-51-13	115-199
	7		W3672	0024	22		33-25-11	001-099
	7	UNUSED						115-199
	8		W3672	0023	22		33-25-11	001-099
	8		W3672	0124	20		33-51-13	115-199
	9		W3672	0100	20		33-25-11	001-099
	9	UNUSED						115-199
	10	UNUSED						ALL
	11	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D04500

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04518		0710/298/L10		RCPT- (continued)				001-099
D04518		710/305/L10		RCPT- (continued)				115-199
	12	UNUSED						ALL
D04520		1350/298/L10		RCPT-				001-099
	1		W3672	0245	22		23-42-11	001-099
	2		W3672	0091	22		33-25-14	001-099
	3		W3672	0092	22		33-25-14	001-099
	4		W3672	0093	20		33-25-14	001-099
	5	UNUSED						001-099
	6		W3672	0125	20		33-51-14	001-099
	7	UNUSED						001-099
	8		W3672	0172	20		33-51-14	001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
D04522		1640/288/R005		RCPT-				001-099
D04522		1662/288/R5		RCPT-				115-199
	1		W3672	0006	22		23-42-11	ALL
	2		W3672	0096	22		33-25-14	001-099
	2		W3672	0139	22		33-25-14	115-199
	3		W3672	0095	22		33-25-14	001-099
	3		W3672	0096	22		33-25-14	115-199
	4		W3672	0097	20		33-25-14	ALL
	5	UNUSED						ALL
	6		W3672	0127	20		33-51-15	ALL
	7	UNUSED						ALL
	8		W3672	0173	20		33-51-15	ALL
	9	UNUSED						ALL
	10	UNUSED						001-099
	10		W3672	0095	22		33-25-14	115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
D04524		340/288/L6		RCPT				ALL
	1	VY	W3632	0013	22		33-51-12	001-099
	1	VY	W3632	0011	20		33-51-12	115-199

HOOKUP LIST

D280N032

91-21-51

Section D04500

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04526		340/288/L6		PLUG				ALL
	1	VG	W3632	0053	20		33-51-12	001-099
	1	VG	W3632	0051	20		33-51-12	115-199
	=1	UNUSED						ALL
D04528		347/283/R50		RCPT				ALL
	1	VY	W3632	0011	20		33-51-12	001-099
	1	VY	W3632	0013	22		33-51-12	115-199
D04530		347/283/R50		PLUG				ALL
	1	VG	W3632	0051	20		33-51-12	001-099
	1	VG	W3632	0053	20		33-51-12	115-199
	=1	UNUSED						ALL
D04532		0358/285/L045		RCPT				001-099
D04532		0358/285/L45		RCPT				115-199
	1	VY	W3532	0011	20		33-51-12	001-099
	1	VY	W3532	0011	22		33-51-12	115-199
D04534		0358/285/L045		PLUG				001-099
D04534		0358/285/L45		PLUG				115-199
	1	VG	W3532	0051	20		33-51-12	ALL
	=1	UNUSED						ALL
D04540		710/275/R55		RCPT				ALL
	1	VY	W3632	0111	20		33-51-13	001-099
	1	VY	W3632	0111	22		33-51-13	115-199
D04542		710/275/R55		PLUG				ALL
	1	VG	W3632	0151	20		33-51-13	ALL
	=1	UNUSED						ALL
D04548		0710/283/L050		RCPT				001-099
D04548		0710/283/L50		RCPT				115-199
	1	VY	W3532	0111	20		33-51-13	ALL
D04550		0710/283/L050		PLUG				001-099
D04550		0710/283/L50		PLUG				115-199
	1	VG	W3532	0151	20		33-51-13	ALL
	=1	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D04500

Page 4

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04560		1330/268/L059		RCPT				001-099
D04560		1330/268/L59		RCPT				115-199
	1	VY	W3534	0011	20		33-51-14	001-099
	1	VY	W3534	0011	22		33-51-14	115-199
D04562		1330/268/L059		PLUG				001-099
D04562		1330/268/L59		PLUG				115-199
	1	VG	W3534	0051	20		33-51-14	ALL
	=1	UNUSED						ALL
D04564		1660/290/R35		RCPT				ALL
	1	VY	W3634	0111	20		33-51-15	001-099
	1	VY	W3634	0111	22		33-51-15	115-199
D04566		1660/290/R35		PLUG				ALL
	1	VG	W3634	0151	20		33-51-15	ALL
	=1	UNUSED						ALL
D04568		1664/285/L040		RCPT				001-099
D04568		1664/285/L40		RCPT				115-199
	1	VY	W3534	0111	20		33-51-15	001-099
	1	VY	W3534	0111	22		33-51-15	115-199
D04570		1664/285/L040		PLUG				001-099
D04570		1664/285/L40		PLUG				115-199
	1	VG	W3534	0151	20		33-51-15	ALL
	=1	UNUSED						ALL
D04584		P36/ I		RELAY SOCKET (PLATE 'D')				ALL
	A1		W1260	0367	20		74-31-11	ALL
	A2		W1260	0479	20		74-31-11	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1		W1260	0359	20		74-31-11	ALL
	D2		W1260	0480	22		74-31-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D04500

Page 5

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04584		P36/ /		RELAY SOCKET (PLATE 'D') (continued)				ALL
	D3	UNUSED						ALL
	X1		W1260	0441	20		74-31-11	001-099
	X1		W1260	0441	20		80-11-11	115-199
	X2		W1260	0369	20		74-31-11	ALL
D04586		P33/ /		RELAY SOCKET				ALL
	A1	UNUSED						ALL
	A2		W1230	0207	22		28-21-21	ALL
	A3		W1230	0204	22		28-21-21	ALL
	B1		W1230	0040	20		28-21-21	ALL
	B2		W1230	0208	20		28-21-21	ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1230	0205	22		28-21-21	ALL
	X2		W1230	0206	22		28-21-21	ALL
D04590		789/288/R38		PLUG-				115-199
	1		W3614	0091	20		33-21-21	115-199
	2		W3614	0092	20		33-21-21	115-199
	3		W3614	0093	24		33-21-21	115-199
	4		W3614	0094	20		33-21-21	115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
D04594		750/295/L035		PLUG-				115-199
	1		W3514	0091	20		33-21-12	115-199
	2		W3514	0092	20		33-21-12	115-199
	3		W3514	0093	24		33-21-12	115-199
	4		W3514	0094	20		33-21-12	115-199

HOOKUP LIST

D280N032

91-21-51

Section D04500

Page 6

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04594		750/295/L035		PLUG- (continued)				115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
D04596		1243/288/L38		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W3516	0075	22		33-21-13	ALL
	6		W3516	0076	22		33-21-13	ALL
	7		W3516	0077	22		33-21-13	ALL
	8		W3516	0078	22		33-21-13	ALL
	9		W3516	0079	22		33-21-13	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D04500

Page 7 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04600		1330/270/R62		RCPT				ALL
	1	VY	W3634	0011	20		33-51-14	001-099
	1	VY	W3634	0515	22		33-51-14	115-199
D04602		1330/270/R62		PLUG				ALL
	1	VG	W3634	0051	20		33-51-14	001-099
	1	VG	W3634	0555	20		33-51-14	115-199
	=1	UNUSED						ALL
D04604		1225/305/L10		RCPT				001-099
	1	VY	W3634	0513	18		33-51-14	001-099
D04606		1225/305/L10		PLUG				001-099
	1	VG	W3634	0050	20		33-51-14	001-099
	=1	UNUSED						001-099
D04610		P037-00/ /		RELAY SOCKET (PLATE 'B')				001-099
D04610		P37/ /		RELAY SOCKET (PLATE 'B')				115-199
	A1	UNUSED						ALL
	A2		W1270	0381	22		30-11-11	ALL
	A3		W1270	0359	22		30-11-11	001-099
	A3		W1270	0326	22		30-11-11	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1270	0360	22		30-11-11	ALL
	X2		W1270	0380	22		30-11-11	ALL
D04616		1638/ /		RCPT-				001-099
D04616		P22/ /		RCPT-				115-199
	1		W0510	0001	22		33-22-14	001-099
	1		W0510	0019	22		33-22-14	115-199
	2		W0510	0002	22		33-22-14	001-099
	2		W0510	0011	22		33-22-14	115-199
	3		W0510	0003	20		33-22-14	001-099
	3		W0510	0012	20		33-22-14	115-199
	4		W0510	0004	22		33-22-14	001-099
	4		W0510	0013	22		33-22-14	115-199
	5	UNUSED						001-099
	5		W0510	0017	22		33-27-31	115-199
	6		W0510	0007	22		33-27-31	115-199

HOOKUP LIST

D280N032

91-21-51

Section D04600

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04616		1638/ /		RCPT- (continued)				001-099
D04616		P22/ /		RCPT- (continued)				115-199
	7		W0510	0014	22		33-27-31	115-199
	8		W0510	0010	22		33-27-31	115-199
	9		W0510	0021	20		33-22-14	115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
D04626		393/276/L56		PLUG,PSU DISC				115-199
	1		W3572	0175	20		33-24-12	115-199
	2	UNUSED						115-199
	3	UNUSED						115-199
	4	UNUSED						115-199
	5		W3572	0170	22		33-25-11	115-199
	6	UNUSED						115-199
	7		W3572	0174	20		33-24-12	115-199
	8	UNUSED						115-199
	9		W3572	0169	22		33-25-11	115-199
	10		W3572	0171	18		35-21-12	115-199
	11		W3572	0173	20		35-21-12	115-199
	12	UNUSED						115-199
	13		W3572	2004B	22		23-31-21	115-199
	14		W3572	2004R	22		23-31-21	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D04628		1628/233/L025		PLUG-				001-099
D04628		1628/233/L057		PLUG-				115-199
	1		W0530	0001	22		33-22-14	ALL
	2		W0530	0002	22		33-22-14	ALL
	3		W0530	0003	20		33-22-14	ALL
	4		W0530	0004	22		33-22-14	ALL
	5		W0530	0005	22		SPARE	001-099
	5		W0530	0005	22		33-27-31	115-199
	6		W0530	0006	22		33-27-31	115-199
	7		W0530	0007	22		33-27-31	115-199
	8		W0530	0008	22		33-27-31	115-199
	9		W0530	0009	20		33-22-14	115-199
	10		W0530	0010	22		SPARE	115-199
	11	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D04600

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04628		1628/233/L025		PLUG- (continued)				001-099
D04628		1628/233/L057		PLUG- (continued)				115-199
	12	UNUSED						115-199
D04634		P023-00/ /		RCPT-				001-099
	1		W0506	0001	22		33-22-12	001-099
	2		W0506	0002	22		33-22-12	001-099
	3		W0506	0003	22		33-22-12	001-099
	4	UNUSED						001-099
	5	UNUSED						001-099
D04642		934/156/L54		PLUG				001-008
D04642		925.7/158/L45		PLUG				009-099
D04642		934/156/L054		PLUG				115-199
	1		W2406	2522R	20		21-52-31	ALL
	2		W2406	2522B	20		21-52-31	ALL
	3		W2406	4255B	20		21-52-31	ALL
	4		W2406	4255R	20		21-52-31	ALL
	5		W2406	4255G	20		21-52-31	ALL
	6		W2406	4255Y	20		21-52-31	ALL
	7	UNUSED						ALL
	8		W2406	2523R	20		21-52-31	ALL
	9		W2406	2523B	20		21-52-31	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W2406	0089	20		21-52-31	ALL
D04644		938/152/R059		PLUG				001-008, 115-199
D04644		938.4/154/R059		PLUG				009-099
	1		W2506	2520R	20		21-52-31	ALL
	2		W2506	2520B	20		21-52-31	ALL
	3		W2506	4255B	20		21-52-31	ALL
	4		W2506	4255R	20		21-52-31	ALL
	5		W2506	4255G	20		21-52-31	ALL
	6		W2506	4255Y	20		21-52-31	ALL
	7	UNUSED						ALL
	8		W2506	2521R	20		21-52-31	ALL
	9		W2506	2521B	20		21-52-31	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W2506	0089	20		21-52-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D04600

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04646A		E4-2/ /		PLUG-				ALL
	A01		W1275	6198	24		21-52-31	ALL
	A02		W1275	6199	24		21-52-31	ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05		W1275	4002G	24		21-52-31	ALL
	A06		W1275	4002Y	24		21-52-31	ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05		W1275	2063R	24		21-52-31	ALL
	B06		W1275	2063B	24		21-52-31	ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05		W1275	2062R	24		21-52-31	ALL
	C06		W1275	2062B	24		21-52-31	ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D04600

Page 4

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04646A		E4-2/ /		PLUG- (continued)				ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05		W1275	4002B	24		21-52-31	ALL
	D06		W1275	4002R	24		21-52-31	ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15		W1275	6200	24		21-52-31	ALL
D04646B		E4-2/ /		PLUG-				ALL
	A01		W1275	6201	24		21-52-31	ALL
	A02		W1275	6202	24		21-52-31	ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05		W1275	4001G	24		21-52-31	ALL
	A06		W1275	4001Y	24		21-52-31	ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12	UNUSED						ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15		W1275	6197	24		21-52-31	ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D04600

Page 5

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04646B		E4-2/ /		PLUG- (continued)				ALL
	B04	UNUSED						ALL
	B05		W1275	2065R	24		21-52-31	ALL
	B06		W1275	2065B	24		21-52-31	ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14		W1275	6196	24		21-52-31	ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05		W1275	2064R	24		21-52-31	ALL
	C06		W1275	2064B	24		21-52-31	ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10	UNUSED						ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05		W1275	4001B	24		21-52-31	ALL
	D06		W1275	4001R	24		21-52-31	ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D04600

Page 6

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04646B		E4-2/ /		PLUG- (continued)				ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
D04646C		E4-2/ /		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	= C1	UNUSED						ALL
	= C5	UNUSED						ALL
D04648		355/198/L054		PLUG				001-099
D04648		355/198/L54		PLUG				115-199
	A		W4106	2036B	24		21-65-12	ALL
	B		W4106	0121	24		21-65-12	ALL
D04650		860/299/L11		PLUG				ALL
	A		W2728	2019B	24		21-65-12	001-099
	A		W2716	2019B	24		21-65-12	115-199
	B		W2728	0119	24		21-65-12	001-099
	B		W2716	0119	24		21-65-12	115-199
D04652		880/299/L11		PLUG				ALL
	A		W2728	2011B	24		21-65-12	001-099
	A		W2716	2011B	24		21-65-12	115-199
	B		W2728	0120	24		21-65-12	001-099
	B		W2716	0120	24		21-65-12	115-199
D04654		886/155/L005		PLUG				001-099
D04654		886/155/L05		PLUG				115-199
	1		W4106	3022R	24		21-64-11	ALL
	2		W4106	3022Y	24		21-64-11	ALL
	3		W4106	3022B	24		21-64-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D04600

Page 7

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04654		886/155/L005		PLUG (continued)				001-099
D04654		886/155/L05		PLUG (continued)				115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04656		892/155/R002		PLUG				001-099
D04656		900/148/L5		PLUG				115-199
	1		W4106	3023R	24		21-64-11	ALL
	2		W4106	3023Y	24		21-64-11	ALL
	3		W4106	3023B	24		21-64-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04658		892/163/L003		PLUG				001-099
D04658		892/163/L3		PLUG				115-199
	1		W4106	3024R	24		21-64-11	ALL
	2		W4106	3024Y	24		21-64-11	ALL
	3		W4106	3024B	24		21-64-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04660		900/145/R038		PLUG				ALL
	1		W2506	2505R	20		36-21-11	001-099
	1		W2506	2523R	20		36-21-11	115-199
	2		W2506	2505B	20		36-21-11	001-099
	2		W2506	2523B	20		36-21-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D04600

Page 8

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04660		900/145/R038		PLUG (continued)				ALL
	3		W2506	1010	20		36-21-11	001-099
	3		W2506	1001	20		36-21-11	115-199
	4		W2506	1012	20		36-21-11	001-099
	4	UNUSED						115-199
	5		W2506	0003	20		36-21-11	001-099
	5		W2506	0090	20		36-21-11	115-199
D04662		FSS295/ /		PLUG				ALL
	A		W3428	2001B	20		36-22-21	ALL
	B		W3428	0020	20		36-22-21	ALL
D04664		P037-00/ /		RELAY SOCKET (PLATE 'C')				001-099
D04664		P37/ /		RELAY SOCKET (PLATE 'C')				115-199
	A1		W1270	0866	22		29-22-11	ALL
	A2		W1270	0906	22		29-22-11	ALL
	A3		W1270	0869	22		29-22-11	ALL
	B1	UNUSED						ALL
	B2		W1270	0876	18		28-22-11	ALL
	B3		W1270	0875	18		28-22-11	ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1270	0877	22		77-12-42	ALL
	X2		W1270	0878	22		77-12-42	ALL
D04670		1655/297/L020		RCPT-				001-099
D04670		1680/298/L25		RCPT-				115-199
	1	VY	W3706	0877	20		35-21-13	ALL
D04672		1665/300/L020		PLUG-				001-099
D04672		1690/298/L25		PLUG-				115-199
	1	VG	W3706	0878	18		35-21-13	ALL
	=1	UNUSED						ALL
D04674		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D04674		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	1		W1270	5988	22		27-09-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D04600

Page 9

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04674		P037-00/ /		RELAY SOCKET (PLATE 'A') (continued)				001-099
D04674		P37/ /		RELAY SOCKET (PLATE 'A') (continued)				115-199
	2		W1270	5985	22		27-09-12	ALL
	3	UNUSED						ALL
	4		W1270	5986	22		27-09-12	ALL
	5		W1270	5989	22		27-09-12	ALL
	6		W1270	6003	22		32-09-12	ALL
	7		W1270	5990	22		27-09-12	ALL
	8		W1270	5987	22		27-09-12	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W1270	6001	22		32-09-12	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D04676		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D04676		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	1		W1270	5983	22		27-09-12	ALL
	2		W1270	5984	22		27-09-12	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1270	6004	22		32-09-12	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W1270	6002	22		32-09-12	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D04680		250/228/R048		PLUG				ALL
	=1		W2318	A-DB			30-41-11	ALL
D04682		250/228/L48		PLUG				ALL
	=1		W2308	A-DB			30-41-12	ALL
D04684		P070-00/ /		RELAY SOCKET				ALL
	A1		W1250	0068	20		28-25-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D04600

Page 10

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04684		P070-00/ /		RELAY SOCKET (continued)				ALL
	A2		W1250	0067	22		28-25-11	ALL
	A3	UNUSED						ALL
	B1		W1250	0076	20		28-22-11	ALL
	B2		W1250	0075	20		28-22-11	ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2		W1250	0066	22		28-25-11	ALL
	C3		W1250	0063	22		28-25-11	ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1250	0070	24		28-25-11	ALL
	X2		W1250	0069	22		28-25-11	ALL
D04686		P070-00/ /		RELAY SOCKET				ALL
	1	UNUSED						001-099
	2	UNUSED						001-099
	3		W1250	0072	24		28-25-11	001-099
	4	UNUSED						001-099
	5	UNUSED						001-099
	6		W1250	0074	24		28-25-11	001-099
	7		W1250	0073	24		28-25-11	001-099
	8		W1250	0071	22		28-25-11	001-099
	A1	UNUSED						115-199
	A2		W1250	0074	24		28-25-11	115-199
	A3		W1250	0071	22		28-25-11	115-199
	B1	UNUSED						115-199
	B2	UNUSED						115-199
	B3	UNUSED						115-199
	C1	UNUSED						115-199
	C2	UNUSED						115-199
	C3	UNUSED						115-199
	D1	UNUSED						115-199
	D2	UNUSED						115-199
	D3	UNUSED						115-199
	X1		W1250	0073	24		28-25-11	115-199
	X2		W1250	0072	24		28-25-11	115-199
D04688		P50/ /		RCPT				ALL
	1	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D04600

Page 11

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04688		P50/ /		RCPT (continued)				ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1140	PU01			27-23-31	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W1140	0529	22		27-23-21	ALL
	10		W1140	0530	22		27-23-21	ALL
	11	UNUSED						ALL
	12		W1140	0535	22		27-23-21	ALL
	13		W1140	0536	22		27-23-21	ALL
	14		W1140	0537	22		27-23-21	ALL
	15		W1140	0538	22		27-23-21	ALL
	16		W1140	0539	22		27-23-21	ALL
	17		W1140	0540	22		27-23-21	ALL
	18		W1140	0561	22		27-23-21	ALL
	19		W1140	0562	22		27-23-21	ALL
	20		W1140	0531	22		27-23-21	ALL
	21		W1140	0532	22		27-23-21	ALL
	22		W1140	0533	22		27-23-21	ALL
	23		W1140	0534	22		27-23-21	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33		W1140	PU01			27-23-31	ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D04600

Page 12

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04690		ELEV170/RS/		PLUG-				ALL
	1		W3202	0003	20		27-23-21	ALL
	2		W3202	0004	20		27-23-21	ALL
	3		W3202	0005	18		27-23-21	ALL
D04692		ELEV120/RS/		PLUG-				ALL
	1		W3202	0004	20		27-23-21	ALL
	2		W3202	0006	20		27-23-21	ALL
	3		W3202	0007	18		27-23-21	ALL
D04694		ELEV145/RS/		PLUG-				ALL
	1		W3202	0006	20		27-23-21	ALL
	2		W3202	0008	20		27-23-21	ALL
	3		W3202	0009	18		27-23-21	ALL
D04696		1051/188/R50		PLUG-				ALL
	A		W2516	2502R	18		29-32-41	ALL
	B		W2516	0095	18		29-32-41	ALL

HOOKUP LIST

D280N032

91-21-51

Section D04600

Page 13 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04700		900/145/L15		PLUG				ALL
	1		W2406	2514R	20		36-21-11	001-099
	1		W2406	2524R	20		36-21-11	115-199
	2		W2406	2514B	20		36-21-11	001-099
	2		W2406	2524B	20		36-21-11	115-199
	3		W2406	1003	20		36-21-11	001-099
	3		W2406	1001	20		36-21-11	115-199
	4		W2406	1014	20		36-21-11	001-099
	4	UNUSED						115-199
	5		W2406	0012	20		36-21-11	001-099
	5		W2406	0090	20		36-21-11	115-199
D04701J		1648/285/L010		RECP				ALL
	1	VY	W0519	2002B	22		23-31-32	ALL
D04701P		1648/300/L010		PLUG				ALL
	1	VG	W3501	2002B	22		23-31-22	ALL
	1	VG	W3501	2003B	22		23-31-22	ALL
	=1	UNUSED						ALL
D04702		FSS295/150/RFS		PLUG				ALL
	A		W3328	2001B	20		36-22-21	ALL
	B		W3328	0020	20		36-22-21	ALL
D04703J		1648/300/L010		RECP				ALL
	1	VY	W3501	2002R	22		23-31-22	ALL
	1	VY	W3501	2003R	22		23-31-22	ALL
D04703P		1648/285/L010		PLUG				ALL
	1	VG	W0519	2002R	22		23-31-32	ALL
	=1	UNUSED						ALL
D04704		P36/ /		RELAY SOCKET (PLATE 'A')				ALL
	A1		W1260	5999	24		73-21-22	ALL
	A2		W1260	5998	24		73-21-22	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2		W1260	5865	18		28-22-11	ALL
	B3		W1260	5864	18		28-22-11	ALL
	C1		W1260	0784	22		29-22-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D04700

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04704		P36/ /		RELAY SOCKET (PLATE 'A') (continued)				ALL
	C2		W1260	0785	22		29-22-11	ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2		W1260	0786	22		29-22-11	ALL
	D3		W1260	0787	22		29-22-11	ALL
	X1		W1260	5880	22		77-12-41	ALL
	X1		W1260	0841	22		77-12-41	115-199
	X2		W1260	5879	22		77-12-41	ALL
D04705J		710/290/L45		RECP				ALL
	1	VY	W0513	2002R	22		23-31-21	ALL
	1	VY	W0513	2003R	22		23-31-21	ALL
D04705P		710/290/L045		PLUG				ALL
	1	VG	W0515	2001R	22		23-31-31	ALL
	=1	UNUSED						ALL
D04706		P36/ /		RELAY SOCKET (PLATE 'A')				ALL
	1		W1260	5867	22		27-09-12	ALL
	2		W1260	5868	22		27-09-12	ALL
	3		W1260	6198	20		29-21-31	ALL
	4		W1260	6200	20		29-21-31	ALL
	5		W1260	6199	20		29-21-31	ALL
	6		W1260	5891	22		32-09-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W1260	5893	22		32-09-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D04707J		710/290/L045		RECP				ALL
	1	VY	W0515	2001B	22		23-31-31	ALL
D04707P		710/290/L45		PLUG				ALL
	1	VG	W0513	2002B	22		23-31-21	ALL
	1	VG	W0513	2003B	22		23-31-21	ALL
	=1	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D04700

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04708		P36/ /		RELAY SOCKET (PLATE 'A')				ALL
	1		W1260	5871	22		27-09-12	ALL
	2		W1260	5872	22		27-09-12	ALL
	3	UNUSED						ALL
	4		W1260	5870	22		27-09-12	ALL
	5		W1260	5869	22		27-09-12	ALL
	6		W1260	5892	22		32-09-11	ALL
	7		W1260	5873	22		27-09-12	ALL
	8		W1260	5874	22		27-09-12	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W1260	5894	22		32-09-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D04710		FIN210/RS/L002		PLUG-				ALL
	1		W3100	0015	20		27-23-21	ALL
	2		W3100	0011	20		27-23-21	ALL
	3		W3100	0012	18		27-23-21	ALL
D04712		FIN170/RS/L002		PLUG-				ALL
	1		W3100	0011	20		27-23-21	ALL
	2		W3100	0013	20		27-23-21	ALL
	3		W3100	0014	18		27-23-21	ALL
D04714		FIN188/RS/L002		PLUG-				ALL
	1		W3100	0013	20		27-23-21	ALL
	2		W3100	0010	20		27-23-21	ALL
	3		W3100	0016	18		27-23-21	ALL
D04716		ELEV160/RS/		PLUG-				ALL
	1		W3200	0003	20		27-23-21	ALL
	2		W3200	0004	20		27-23-21	ALL
	3		W3200	0005	18		27-23-21	ALL
D04718		ELEV112/RS/		PLUG-				ALL
	1		W3200	0004	20		27-23-21	ALL
	2		W3200	0006	20		27-23-21	ALL
	3		W3200	0007	18		27-23-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D04700

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04720		ELEV130/RS/		PLUG-				ALL
	1		W3200	0006	20		27-23-21	ALL
	2		W3200	0008	20		27-23-21	ALL
	3		W3200	0009	18		27-23-21	ALL
D04722		1051/188/L050		PLUG-				ALL
	A		W2418	2502R	18		29-32-41	ALL
	B		W2418	0050	18		29-32-41	ALL
D04724		1197/155/L055		PLUG-				ALL
	A		W2412	2503R	18		29-32-41	ALL
	B		W2412	0061	18		29-32-41	ALL
D04726		P36/ /		RELAY SOCKET (PLATE 'D')				ALL
	A1		W1260	5911	16		29-11-31	ALL
	A2		W1260	5908	16		29-11-31	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1260	5909	22		29-11-31	ALL
	X2		W1260	0742	22		29-11-31	001-099
	X2		W1260	5912	22		29-11-31	ALL
D04734		210/199/L012		RCPT				ALL
	1		W4228	2507B	22		73-21-12	001-099
	1		W4228	2504B	22		73-21-12	115-199
	2		W4228	2507R	22		73-21-12	001-099
	2		W4228	2504R	22		73-21-12	115-199
	3		W4228	3501Y	22		73-21-12	ALL
	4		W4228	3501B	22		73-21-12	ALL
	5		W4228	3501R	22		73-21-12	ALL
			W4228	2507Z			73-21-12	001-099
			W4228	0190	20		73-21-12	ALL
			W4228	3501Z			73-21-12	ALL
			W4228	2504Z			73-21-12	115-199
D04736		210/199/R012		RCPT				ALL
	1		W4236	2507B	22		73-21-22	ALL
	2		W4236	2507R	22		73-21-22	ALL

HOOKUP LIST

D280N032

91-21-51

Section D04700

Page 4

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04736		210/199/R012		RCPT (continued)				ALL
	3		W4236	3501B	22		73-21-22	ALL
	4		W4236	3501Y	22		73-21-22	ALL
	5		W4236	3501R	22		73-21-22	ALL
			W4236	0190	20		73-21-22	ALL
			W4236	2507Z			73-21-22	ALL
			W4236	3501Z			73-21-22	ALL
D04746		850/155/000		PLUG-				115-199
	1		W4162	0041	22		25-51-11	115-199
	2		W4162	0008	22		25-51-11	115-199
	3	UNUSED						115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
D04748		1195/145/0		PLUG-				115-199
	1		W2662	0050	20		25-51-21	115-199
	2		W2662	0008	20		25-51-21	115-199
	3	UNUSED						115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
D04754		P070-00/ /		RELAY SOCKET				ALL
	A1		W1250	0043	20		33-45-11	ALL
	A2		W1250	0048	20		33-45-11	ALL
	A3	UNUSED						ALL
	B1		W1250	0044	20		33-45-11	ALL
	B2		W1250	0047	20		33-45-11	ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1250	0046	20		33-45-11	ALL
	X2		W1250	0045	22		33-45-11	ALL
D04756		ELEV112/AS/		PLUG-				ALL
	1		W3204	0002	12		33-45-11	ALL
	2	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D04700

Page 5

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04756		ELEV112/AS/		PLUG- (continued)				ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W3204	0003	12		33-45-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W3204	0004	18		33-45-11	ALL
D04758		ELEV125/AS/		PLUG-				ALL
	1		W3204	0001	12		33-45-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W3204	0003	12		33-45-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
D04766		E006-00/ /		PLUG-				001-099
D04766		E6/ /		PLUG-				115-199
	1	UNUSED						ALL
I	2		W1026	0023	20		24-33-12	001-099
I	2	UNUSED						115-199
	3	UNUSED						ALL
I	4		W1026	0024	22		24-33-12	001-099
I	4	UNUSED						115-199
	5	UNUSED						ALL
	6	UNUSED						ALL
I	7		W1026	0025	22		24-33-12	001-099
I	7	UNUSED						115-199
	8	UNUSED						ALL
I	9		W1026	0022	20		24-33-12	001-099
I	9	UNUSED						115-199
	10	UNUSED						ALL
I	11		W1026	0021	22		24-33-12	001-099
I	11	UNUSED						115-199
	12	UNUSED						ALL
D04770		P006-00/ /		RELAY SOCKET				001-099
D04770		P006-00/ /		RELAY SOCKET-				115-199
I	1		W0074	0042	24		24-33-12	001-099

HOOKUP LIST

D280N032

91-21-51

Section D04700

Page 6

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04770		P006-00/ /		RELAY SOCKET (continued)				001-099
D04770		P006-00/ /		RELAY SOCKET- (continued)				115-199
	1	UNUSED						115-199
	2		W0074	0038	24		24-33-12	001-099
	2	UNUSED						115-199
	3		W0074	0044	24		24-33-12	001-099
	3	UNUSED						115-199
	4		W0074	0067	24		24-33-12	001-099
	4	UNUSED						115-199
	5		W0074	0039	24		24-33-12	001-099
	5	UNUSED						115-199
	6		W0074	0036	24		24-33-12	001-099
	6	UNUSED						115-199
	7		W0074	0043	24		24-33-12	001-099
	7	UNUSED						115-199
	8		W0074	0041	24		24-33-12	001-099
	8	UNUSED						115-199
D04774		E6 RLY/PNL/		SOCKET				001-099
D04774		E6/ /		SOCKET				115-199
	A1		W1024	0056	24		24-33-12	001-099
	A1	UNUSED						115-199
	A2		W1024	0054	24		24-33-12	001-099
	A2	UNUSED						115-199
	A3		W1024	0059	24		24-33-12	001-099
	A3	UNUSED						115-199
	B1		W1024	0060	24		24-33-12	001-099
	B1	UNUSED						115-199
	B2		W1024	0180	24		24-33-12	001-099
	B2	UNUSED						115-199
	B3		W1024	0451	24		24-33-12	001-099
	B3	UNUSED						115-199
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1024	0061	24		24-33-12	001-099
	X1	UNUSED						115-199
	X2		W1024	0054	24		24-33-12	001-099

HOOKUP LIST

D280N032

91-21-51

Section D04700

Page 7

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04774		E6 RLY/PNL/		SOCKET (continued)				001-099
D04774		E6/ /		SOCKET (continued)				115-199
	X2	UNUSED						115-199
D04786		682/277/R047		PLUG-				115-199
	1		W0540	0001	22		33-22-12	115-199
	2		W0540	0003	22		33-22-12	115-199
	3		W0540	0002	22		33-22-12	115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
D04788		682/238/R017		RCPT-				115-199
	1		W3570	0001	22		33-22-12	115-199
	2		W3570	0002	22		33-22-12	115-199
	3		W3570	0003	20		33-22-12	115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
D04790		P36/ /		RELAY SOCKET (PLATE 'D')				001-099
D04790		E6/ /		RELAY SOCKET				115-199
	1	UNUSED						ALL
	2		W1260	0983	24		21-51-11	001-099
	2		W1024	0114	24		21-51-11	115-199
	3		W1260	0984	24		21-51-11	001-099
	3		W1024	0015	24		21-51-11	115-199
	4	UNUSED						ALL
	5		W1260	0985	24		21-51-11	001-099
	5		W1024	0115	24		21-51-11	115-199
	6	UNUSED						ALL
	7		W1260	0986	24		21-51-11	001-099
	7		W1024	0113	24		21-51-11	115-199
	8	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D04700

Page 8 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04800		P005-00/ /		PLUG				001-099
D04800		P5/ /		PLUG				115-199
	1	UNUSED						ALL
	2		W2070	0118	22		33-51-11	ALL
	3		W2070	0561	22		33-51-11	ALL
	4	UNUSED						ALL
	5		W2070	0362	22		33-51-11	ALL
	6		W2070	0256	22		33-51-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W2070	0360	22		33-51-11	ALL
	10		W2070	0363	22		33-51-11	ALL
	11	UNUSED						ALL
	12		W2070	0364	22		33-51-11	ALL
	13		W2070	0351	20		33-51-11	ALL
	14		W2070	0361	22		33-51-11	ALL
	15		W2070	0257	22		33-51-11	ALL
	16		W2070	0502	22		33-51-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D04802		P5/ /		PLUG				ALL
	1		W2156	0053	20		33-13-31	ALL
	2		W2156	0054	20		33-13-31	ALL
	3		W2156	0056	22		33-16-52	ALL
	4		W2156	0055	22		33-16-52	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W2156	0050	22		35-21-11	001-099
	8		W2156	0050	20		35-21-11	115-199
	9		W2156	0051	24		35-21-11	001-099
	9		W2156	0051	22		35-21-11	115-199
	10		W2156	0052	22		35-21-11	001-099
	10		W2156	0052	24		35-21-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D04800

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04802		P5/ /		PLUG (continued)				ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D04806		P65/ /		RELAY SOCKET-				001-099
	A1		W0808	0056	20		52-34-11	001-099
	A2		W0808	0044	20		52-34-11	001-099
	A3	UNUSED						001-099
	B1		W0808	0053	20		52-34-11	001-099
	B2		W0808	0042	20		52-34-11	001-099
	B3	UNUSED						001-099
	C1		W0808	0054	20		52-34-11	001-099
	C2		W0808	0052	20		52-34-11	001-099
	C3	UNUSED						001-099
	X1		W0808	0035	22		52-34-11	001-099
	X2		W0808	0039	22		52-34-11	001-099
D04808		P65/ /		RELAY SOCKET-				001-099
	A1		W0808	0051	20		52-34-11	001-099
	A2		W0808	0036	20		52-34-11	001-099
	A3		W0808	0042	20		52-34-11	001-099
	B1		W0808	0045	20		52-34-11	001-099
	B2		W0808	0037	20		52-34-11	001-099
	B3		W0808	0044	20		52-34-11	001-099
	C1		W0808	0055	20		52-34-11	001-099
	C2		W0808	0038	20		52-34-11	001-099
	C3		W0808	0052	20		52-34-11	001-099
	X1		W0808	0047	22		52-34-11	001-099
	X2		W0808	0048	22		52-34-11	001-099
D04810		E6 RLY/PNL/		RELAY SOCKET				001-099
	A1		W1024	0271	16		52-35-11	001-099
	A2		W1024	0266	16		52-35-11	001-099
	A3	UNUSED						001-099
	B1		W1024	0270	16		52-35-11	001-099
	B2		W1024	0267	16		52-35-11	001-099
	B3	UNUSED						001-099
	C1		W1024	0269	16		52-35-11	001-099
	C2		W1024	0265	16		52-35-11	001-099
	C3	UNUSED						001-099
	X1		W1024	0303	22		52-35-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D04800

Page 2

Dec 18/2007

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04810		E6 RLY/PNL/		RELAY SOCKET (continued)				001-099
	X2		W1024	0301	22		52-35-11	001-099
D04812		E6 RLY/PNL/		RELAY SOCKET				001-099
	A1		W1024	0273	16		52-35-11	001-099
	A2		W1024	0298	16		52-35-11	001-099
	A3		W1024	0267	16		52-35-11	001-099
	B1		W1024	0272	16		52-35-11	001-099
	B2		W1024	0299	16		52-35-11	001-099
	B3		W1024	0266	16		52-35-11	001-099
	C1		W1024	0268	16		52-35-11	001-099
	C2		W1024	0300	16		52-35-11	001-099
	C3		W1024	0265	16		52-35-11	001-099
	X1		W1024	0310	22		52-35-11	001-099
	X2		W1024	0264	22		52-35-11	001-099
D04814		EVEL112/AS/		PLUG-				ALL
	1		W3206	0002	12		33-45-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W3206	0003	12		33-45-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W3206	0004	18		33-45-11	ALL
D04816		ELEV125/AS/		PLUG-				ALL
	1		W3206	0001	12		33-45-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W3206	0003	12		33-45-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
D04818		655ULTI/ /		PLUG-PASSENGER SERVICE UNIT U/B				115-199
	1	UNUSED						115-199
	2		W0534	0002RY	22		33-25-31	115-199
	3		W0534	0003RL	22		33-25-31	115-199
	4		W0534	0004RN	22		33-25-31	115-199

HOOKUP LIST

D280N032

91-21-51

Section D04800

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04818		655ULTI/ /		PLUG-PASSENGER SERVICE UNIT U/B (continued)				115-199
	5		W0534	0005RB	22		33-25-31	115-199
	6		W0534	0006P	16		33-23-31	115-199
	7	UNUSED						115-199
	8		W0534	0008N	16		33-23-31	115-199
	9		W0534	0009A	22		33-25-31	115-199
	10		W0534	0010K	18		35-21-31	115-199
	11		W0534	0011RG	20		35-21-31	115-199
	12	UNUSED						115-199
	13		W0534	2001B	22		23-31-16	115-199
	14		W0534	2001R	22		23-31-16	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D04832		E6 RLY/PNL/ E6/ /		RELAY SOCKET RCPT				001-099
D04832								115-199
	1		W1024	0397	24		24-32-41	ALL
	2		W1024	0087	22		49-41-11	ALL
	3		W1024	0398	24		24-32-41	ALL
	4		W1024	0103	22		24-32-41	001-099
	4		W1024	0053	22		24-32-41	115-199
	5	UNUSED						ALL
	6		W1024	0396	24		24-32-41	ALL
	7		W1024	0194	24		24-32-41	001-099
	7		W1024	0093	24		24-32-41	115-199
	8	UNUSED						ALL
D04834		E6 RLY/PNL/ E6/ /		RELAY SOCKET RCPT				001-099
D04834								115-199
	A1		W1024	0114	20		24-32-41	001-099
	A1		W1024	0042	20		24-32-41	115-199
	A2		W1024	0112	20		24-32-41	001-099
	A2		W1024	0010	20		24-32-41	115-199
	A3	UNUSED						ALL
	B1		W1024	0115	20		24-32-41	001-099
	B1		W1024	0044	20		24-32-41	115-199
	B2		W1024	0111	20		24-32-41	001-099
	B2		W1024	0016	20		24-32-41	115-199
	B3	UNUSED						ALL
	C1		W1024	0116	20		24-32-41	001-099
	C1		W1024	0043	20		24-32-41	115-199

HOOKUP LIST

D280N032

91-21-51

Section D04800

Page 4

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04834		E6 RLY/PNL/		RELAY SOCKET (continued)				001-099
D04834		E6/ /		RCPT (continued)				115-199
	C2		W1024	0096	20		24-32-41	001-099
	C2		W1024	0009	20		24-32-41	115-199
	C3	UNUSED						ALL
	D1		W1024	0148	20		24-32-41	001-099
	D1		W1024	0103	20		24-32-41	115-199
	D2		W1024	0093	20		24-32-41	001-099
	D2		W1024	0111	20		24-32-41	115-199
	D3	UNUSED						ALL
	G1	UNUSED						ALL
	G2		W1024	PB01			24-32-41	001-099
	G2		W1024	PA01			24-32-41	115-199
	G3		W1024	PB01			24-32-41	001-099
	G3		W1024	PA01			24-32-41	115-199
	X1		W1024	0194	24		24-32-41	001-099
	X1		W1024	0209	24		24-32-41	001-099
	X1		W1024	0092	24		24-32-41	115-199
	X1		W1024	0093	24		24-32-41	115-199
	X2		W1024	0092	20		24-32-41	001-099
	X2		W1024	0112	20		24-32-41	115-199
D04836		P005-00/ /		PLUG				001-099
D04836		P5/ /		PLUG				115-199
	A1		W2066	0573	20		33-13-32	ALL
	A2		W2066	0391	20		33-13-32	ALL
	A3		W2066	0570	20		33-13-31	ALL
	B1		W2066	0574	20		33-13-32	ALL
	B2		W2066	0389	20		33-13-32	ALL
	B3		W2066	0568	20		33-13-31	ALL
	C1		W2066	0567	20		33-13-31	ALL
	C2		W2066	0564	20		33-13-31	ALL
	C3	UNUSED						ALL
	D1		W2066	0566	24		33-13-31	ALL
	D2		W2066	0343	24		33-13-31	ALL
	D3		W2066	0565	24		33-13-31	ALL
	G1		W2066	PA01			33-13-31	ALL
	G2	UNUSED						ALL
	G3		W2066	PA01			33-13-31	ALL
	X1		W2066	0571	24		33-13-31	ALL
	X2		W2066	0572	20		33-13-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D04800

Page 5

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D04838		P34/ /		RELAY SOCKET				115-199
	A1		W1240	0227	20		33-22-11	115-199
	A2		W1240	0226	20		33-22-11	115-199
	A3	UNUSED						115-199
	B1	UNUSED						115-199
	B2	UNUSED						115-199
	B3	UNUSED						115-199
	X1		W1240	0225	22		33-22-11	115-199
	X2		W1240	0228	22		33-22-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D04800

Page 6 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05025		E6 RLY/PNL/ E6/ /		SOCKET SOCKET				001-099 115-199
	A1	UNUSED						ALL
	A2		W1024	0095	24		24-33-12	001-099
	A2	UNUSED						115-199
	A3		W1024	0066	24		24-33-12	001-099
	A3	UNUSED						115-199
	B1		W1024	0314	20		24-33-12	001-099
	B1	UNUSED						115-199
	B2		W1024	0313	24		24-33-12	001-099
	B2	UNUSED						115-199
	B3	UNUSED						ALL
	X1		W1024	0067	24		24-33-12	001-099
	X1	UNUSED						115-199
	X2		W1024	0102	24		24-33-12	001-099
	X2	UNUSED						115-199
D05028		675/278/L060		PLUG				115-199
	1		W3596	0001	20		33-24-12	115-199
	2	UNUSED						115-199
	3	UNUSED						115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7		W3596	0007	20		33-24-12	115-199
	8		W3596	0008	16		33-24-12	115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D05030		742/278/R058		PLUG				115-199
	1		W3696	0001	20		33-24-21	115-199
	2	UNUSED						115-199
	3	UNUSED						115-199
	4	UNUSED						115-199
	5	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D05000

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05030		742/278/R058		PLUG (continued)				115-199
	6	UNUSED						115-199
	7		W3696	0007	20		33-24-21	115-199
	8		W3696	0008	16		33-24-21	115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D05032		P003-01/ /		PLUG				001-099
D05032		P003-03/ /		PLUG				115-199
	A1		W0003	0485	20		33-13-41	ALL
	A2		W0003	0488	20		33-13-41	ALL
	A3		W0003	0484	20		33-13-41	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W0003	0486	24		33-13-41	ALL
	X2		W0003	0487	20		33-13-41	ALL
D05088		P006-00/ /		RELAY SOCKET-				ALL
I	1		W0074	0050	22		24-34-11	001-099
I	1	UNUSED						115-199
	2		W0074	0048	22		24-34-11	ALL
	3		W0074	0066	20		24-34-11	ALL
	4		W0074	0051	22		24-34-11	ALL
	5		W0074	0049	22		24-34-11	ALL
I	6		W0074	0045	24		24-33-12	001-099
I	6	UNUSED						115-199
	7		W0074	0064	22		24-34-11	ALL
I	8		W0074	0052	22		24-34-11	001-099
I	8	UNUSED						115-199
D05090		P006-00/ /		RELAY SOCKET-				ALL
	A1		W0074	0061	22		24-33-11	ALL
	A2		W0074	0055	22		24-31-11	ALL
	A3		W0074	0408	22		24-31-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D05000

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05090		P006-00/ /		RELAY SOCKET- (continued)				ALL
	B1		W0074	0405	22		24-34-11	ALL
	B2		W0074	0226	22		24-34-11	ALL
	B3		W0074	0062	22		24-33-11	ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W0074	0047	22		24-34-11	ALL
	X2		W0074	0055	22		24-31-11	ALL
D05091		700/ /L040		PLUG				115-199
	1		W0511	0001	22		33-25-12	115-199
	2		W0511	0002	22		33-25-12	115-199
	3		W0511	0003	22		23-42-12	115-199
	4		W0511	0004	20		23-42-12	115-199
	5		W0511	0005	24		23-42-12	115-199
D05092		P034-00/ /		RELAY SOCKET				001-099
	A1		W1240	0438	20		33-42-12	001-099
	A2		W1240	0428	20		33-42-12	001-099
	A3		W1240	0439	20		33-42-12	001-099
	B1	UNUSED						001-099
	B2	UNUSED						001-099
	B3	UNUSED						001-099
	C1	UNUSED						001-099
	C2	UNUSED						001-099
	C3	UNUSED						001-099
	X1		W1240	0436	24		33-42-12	001-099
	X2		W1240	0437	24		33-42-12	001-099
D05094		P034-00/ /		RELAY SOCKET				001-099
	A1	UNUSED						001-099
	A2	UNUSED						001-099
	A3	UNUSED						001-099
	B1		W1240	0440	20		33-42-21	001-099
	B2		W1240	0441	20		33-42-21	001-099
	B3	UNUSED						001-099
	C1	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D05000

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05094		P034-00/ /		RELAY SOCKET (continued)				001-099
	C2	UNUSED						001-099
	C3	UNUSED						001-099
	X1		W1240	0435	24		33-42-12	001-099
	X2		W1240	0433	24		33-42-12	001-099
D05098		686/290/L030		PLUG-				115-199
	1		W3672	0151	22		33-25-12	115-199
	2		W3672	0152	22		33-25-12	115-199
	3		W3672	0156	22		23-42-12	115-199
	4		W3672	0157	20		23-42-12	115-199
	5		W3672	0158	24		23-42-12	115-199
	6		W3672	0177	20		33-22-12	115-199
	7		W3672	0178	22		33-22-12	115-199
	8	18	W3672	0175	18		35-21-12	115-199
	9		W3672	0176	20		35-21-12	115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D05000

Page 4 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05100		P33/ /		RELAY SOCKET				ALL
	A1		W1230	0447	20		33-42-11	001-099
	A1		W1234	0048	20		33-42-11	115-199
	A2		W1230	0446	20		33-42-11	001-099
	A2		W1234	0047	20		33-42-11	115-199
	A3		W1230	0448	20		33-42-11	001-099
	A3		W1234	0049	20		33-42-11	115-199
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	X1		W1230	0440	24		33-42-11	001-099
	X1		W1234	0041	20		33-42-11	115-199
	X2		W1230	0439	24		33-42-11	001-099
	X2		W1234	0040	20		33-42-11	115-199
D05102		P33/ /		RELAY SOCKET				ALL
	A1		W1230	0445	20		33-42-11	001-099
	A1		W1234	0046	20		33-42-11	115-199
	A2		W1230	0444	20		33-42-11	001-099
	A2		W1234	0045	20		33-42-11	115-199
	A3	UNUSED						ALL
	B1		W1230	0449	20		33-42-21	001-099
	B1		W1234	0050	18		33-42-21	115-199
	B2		W1230	0450	20		33-42-21	001-099
	B2		W1234	0051	20		33-42-21	115-199
	B3	UNUSED						ALL
	C1		W1230	0737	20		33-42-12	001-099
	C1	UNUSED						115-199
	C2		W1230	0736	20		33-42-12	001-099
	C2	UNUSED						115-199
	C3	UNUSED						ALL
	X1		W1230	0442	24		33-42-11	001-099
	X1		W1234	0043	20		33-42-11	115-199
	X2		W1230	0443	24		33-42-11	001-099
	X2		W1234	0044	20		33-42-11	115-199
D05106		705/290/L010		PLUG-				115-199
	1		W3672	0135	20		33-25-12	115-199

HOOKUP LIST

D280N032

91-21-51

Section D05100

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05106		705/290/L010		PLUG- (continued)				115-199
	2		W3672	0137	22		33-25-12	115-199
	3		W3672	0138	22		33-25-12	115-199
	4		W3672	0133	22		33-25-12	115-199
	5	UNUSED						115-199
D05116		379/262/L036		PLUG-				001-099
	1		W0558	0001	20		33-22-11	001-099
	2		W0558	0002	22		33-22-11	001-099
	3		W0558	0003	22		33-22-11	001-099
	4		W0558	0004	20		33-22-11	001-099
	5		W0558	0005	22		33-22-11	001-099
	6		W0558	0006	22		33-22-11	001-099
	7		W0558	0007	22		33-22-11	001-099
	8		W0558	0008	22		33-22-11	001-099
	9		W0558	0009	22		24-51-51	001-099
	10		W0558	0010	22		24-51-51	001-099
	11		W0558	0011	20		24-51-51	001-099
	12		W0558	0012	20		24-51-51	001-099
	13		W0558	0013	24		33-21-11	001-099
	14		W0558	0014	24		33-21-11	001-099
	15		W0558	0015	24		33-21-11	001-099
	16		W0558	0016	22		33-21-51	001-099
	17		W0558	0017	20		33-21-51	001-099
	18		W0558	0018	24		33-21-31	001-099
	19		W0558	0019	24		33-21-31	001-099
	20		W0558	0020	24		33-21-31	001-099
	21		W0558	0021	20		SPARE	001-099
	22		W0558	0022	22		SPARE	001-099
	23		W0558	0023	20		23-34-15	001-099
	24		W0558	0024	24		33-21-31	001-099
	25		W0558	0025	20		23-34-15	001-099
	26		W0558	3001R	22		SPARE	001-099
	27		W0558	3001Y	22		SPARE	001-099
	28		W0558	3001B	22		SPARE	001-099
	29		W0558	0029	22		SPARE	001-099
	30		W0558	0030	22		SPARE	001-099
	31		W0558	0031	20		SPARE	001-099
	32		W0558	0032	22		23-34-15	001-099
	33		W0558	0033	22		23-34-15	001-099
	34		W0558	0034	20		33-21-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D05100

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05116		379/262/L036		PLUG- (continued)				001-099
	35		W0558	0035	22		SPARE	001-099
	36		W0558	0036	22		SPARE	001-099
	37		W0558	0037	22		SPARE	001-099
	38		W0558	0038	22		33-51-11	001-099
	39		W0558	0039	22		33-51-11	001-099
	40		W0558	0040	22		33-51-11	001-099
	41		W0558	0041	20		33-51-11	001-099
D05118		1049/166/R55		PLUG-				ALL
	1		W2510	0058	18		29-21-32	ALL
	2		W2510	4501Y	20		29-21-32	ALL
	3		W2510	4501G	20		29-21-32	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W2510	4501R	20		29-21-32	ALL
	9		W2510	0061	18		29-21-32	ALL
	10		W2510	4501B	20		29-21-32	ALL
D05120		1073/196/R59		PLUG-				ALL
	1		W2510	0059	18		29-21-32	ALL
	2		W2510	4502G	20		29-21-32	ALL
	3		W2510	4502Y	20		29-21-32	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W2510	4502B	20		29-21-32	ALL
	9		W2510	0060	18		29-21-32	ALL
	10		W2510	4502R	20		29-21-32	ALL
D05122		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D05122		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	A1		W1270	6048	20		29-21-32	ALL
	A2		W1270	6045	20		29-21-32	ALL
	A3		W1270	6047	20		29-21-32	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D05100

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05122		P037-00/ /		RELAY SOCKET (PLATE 'A') (continued)				001-099
D05122		P37/ /		RELAY SOCKET (PLATE 'A') (continued)				115-199
	C1	UNUSED	W1270	6050	22		29-11-22	ALL
	C2		W1270	6049	22		29-11-22	ALL
	C3							ALL
	D1		W1270	6051	22		32-42-11	ALL
	D2		W1270	6052	22		32-42-11	ALL
	D3		W1270	6053	22		32-42-11	ALL
	X1		W1270	6046	20		29-21-32	ALL
	X2		W1270	6054	20		29-21-32	ALL
D05142		P36/ /		RELAY SOCKET (PLATE 'D')				ALL
	A1	UNUSED						ALL
	A2		W1260	0303	20		36-11-11	ALL
	A3		W1260	0312	20		36-11-11	ALL
	B1		W1260	0330	20		36-11-11	001-099
	B1		W1260	0304	20		36-11-11	115-199
	B2		W1260	0339	20		36-11-11	001-099
	B2		W1260	0308	20		36-11-11	ALL
	B3							ALL
	C1	UNUSED	W1260	0305	20		36-11-11	ALL
	C2		W1260	0309	20		36-11-11	ALL
	C3							ALL
	D1							ALL
	D2							ALL
	D3							ALL
	X1		W1260	0308	20		36-11-11	001-099
	X1		W1260	0306	20		36-11-11	ALL
	X2		W1260	0307	20		36-11-11	ALL
D05166		P034-00/ /		RELAY SOCKET				001-099
D05166		P34/ /		RELAY SOCKET				115-199
	1	UNUSED	W1240	0076	22		33-24-11	115-199
	2		W1240	0075	20		33-24-11	115-199
	3		W1240	0058	22		33-24-11	115-199
	4		W1240	0044	20		33-24-11	115-199
	5							115-199
	6		W1240	0074	22		33-24-11	115-199
	7		W1240	0073	22		33-24-11	115-199
	8							115-199
	A1	UNUSED	W1240	0076	24		33-24-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D05100

Page 4

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05166		P034-00/ /		RELAY SOCKET (continued)				001-099
D05166		P34/ /		RELAY SOCKET (continued)				115-199
	A2		W1240	0074	24		33-24-11	001-099
	A3	UNUSED						001-099
	B1	UNUSED						001-099
	B2		W1240	0075	20		33-24-11	001-099
	B3		W1240	0044	20		33-24-11	001-099
	C1	UNUSED						001-099
	C2	UNUSED						001-099
	C3	UNUSED						001-099
	D1	UNUSED						001-099
	D2	UNUSED						001-099
	D3	UNUSED						001-099
	X1		W1240	0073	24		33-24-11	001-099
	X2		W1240	0058	24		33-24-11	001-099
D05188		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D05188		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	1	UNUSED						ALL
	2		W1270	0005	24		21-25-11	ALL
	3		W1270	5666	24		21-25-11	ALL
	4		W1270	5668	24		21-25-11	ALL
	5	UNUSED						ALL
	6		W1270	0641	24		21-25-11	ALL
	7		W1270	5513	24		21-25-11	ALL
	8		W1270	0644	24		21-25-11	ALL
D05190		P36/ /		RELAY SOCKET (PLATE 'D')				ALL
	A1		W1260	0318	22		21-58-12	ALL
	A1		W1260	0905	22		21-58-12	ALL
	A2		W1260	0313	22		21-58-12	ALL
	A3		W1260	0529	22		21-58-12	ALL
	A3		W1260	6098	22		21-58-12	ALL
	B1		W1260	0899	24		21-58-12	ALL
	B2		W1260	0316	24		21-58-12	ALL
	B2		W1260	6027	24		21-58-12	ALL
	B3	UNUSED						ALL
	X1		W1260	0315	24		21-58-12	ALL
	X2		W1260	0314	24		21-58-12	ALL
	X2		W1260	6027	24		21-58-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D05100

Page 5

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05192		P36/ /		RELAY SOCKET (PLATE 'D')				ALL
	1	UNUSED						ALL
	2		W1260	0072	24		21-25-11	ALL
	3		W1260	0887	24		21-25-11	ALL
	4		W1260	0888	24		21-25-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1260	0889	24		21-25-11	ALL
	8	UNUSED						ALL
D05194		P037-00/ /		RELAY SOCKET (PLATE 'B')				001-099
D05194		P37/ /		RELAY SOCKET (PLATE 'B')				115-199
	1		W1270	0574	22		29-22-11	ALL
	2		W1270	0231	22		29-22-11	ALL
	3	UNUSED						ALL
	4		W1270	0585	24		73-21-12	ALL
	5		W1270	0583	24		73-21-12	ALL
	6		W1270	0551	22		77-12-42	ALL
	7		W1270	6405	20		24-11-21	ALL
	8	UNUSED						ALL
	9		W1270	0297	20		36-11-21	ALL
	10	UNUSED						ALL
	11		W1270	0848	20		36-11-21	ALL
	12		W1270	0550	22		77-12-42	ALL
	13		W1270	0573	22		29-22-11	ALL
	14		W1270	6406	20		24-11-21	ALL
D05198		P36/ /		RELAY SOCKET (PLATE 'A')				ALL
	1		W1260	5977	24		73-21-11	ALL
	2	UNUSED						ALL
	3		W1260	5982	24		73-21-12	ALL
	4	UNUSED						ALL
	5		W1260	5983	24		73-21-12	ALL
	6		W1260	5985	22		77-12-41	ALL
	7		W1260	5981	24		73-21-12	ALL
	8	UNUSED						ALL
	9		W1260	5978	24		73-21-12	ALL
	10	UNUSED						ALL
	11		W1260	5979	24		73-21-12	ALL
	12		W1260	5984	22		77-12-41	001-099

HOOKUP LIST

D280N032

91-21-51

Section D05100

Page 6

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05198		P36/ /		RELAY SOCKET (PLATE 'A') (continued)				ALL
	12		W1260	5984	20		77-12-41	115-199
	13		W1260	5976	24		73-21-11	ALL
	14		W1260	5980	24		73-21-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D05100

Page 7 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05206		705/290/R010		PLUG-				115-199
	1		W3672	0143	20		33-25-21	115-199
	2		W3672	0144	22		33-25-21	115-199
	3		W3672	0147	22		33-25-21	115-199
	4		W3672	0141	22		33-25-21	115-199
	5	UNUSED						115-199
D05208		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D05208		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	A1	UNUSED						ALL
	A2		W1270	6087	20		36-11-21	ALL
	A3		W1270	6076	20		36-11-21	001-099
	A3		W1270	6077	20		36-11-21	115-199
	B1		W1270	6085	20		36-11-21	ALL
	B2		W1270	6079	20		36-11-21	001-099
	B2		W1270	6081	20		36-11-21	ALL
	B3	UNUSED						ALL
	C1		W1270	6086	20		36-11-21	ALL
	C2		W1270	6082	20		36-11-21	ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1270	6073	20		36-11-21	001-099
	X1		W1270	6079	20		36-11-21	ALL
	X2		W1270	6080	20		36-11-21	ALL
D05236		P032-00/ /		PLUG				001-099
	1		W1138	0168	22		25-31-11	001-099
	2		W1138	0169	22		25-31-11	001-099
	3		W1138	0170	22		25-31-11	001-099
	4		W1138	0171	22		25-31-11	001-099
	5	UNUSED						001-099
	6	UNUSED						001-099
	7	UNUSED						001-099
	8		W1138	0174	20		25-31-11	001-099
	9		W1138	0166	20		25-31-11	001-099
	10		W1138	0165	20		25-31-11	001-099
	11		W1138	0172	22		25-31-11	001-099
	12		W1138	0173	22		25-31-11	001-099
	13	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D05200

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05236		P032-00/ /		PLUG (continued)				001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
	16		W1138	0167	22		25-31-11	001-099
	17		W1138	0167	22		25-31-11	001-099
	18	UNUSED						001-099
	19	UNUSED						001-099
	20	UNUSED						001-099
	21	UNUSED						001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
D05238		1655/290/R20		RCPT-				001-099
D05238		1665/290/R020		RCPT-				115-199
	1	VY	W3806	0951	20		35-21-22	ALL
D05240		1655/290/R20		PLUG-				001-099
D05240		1665/290/R020		PLUG-				115-199
	1	VG	W3806	0952	18		35-21-22	ALL
	=1	UNUSED						ALL
D05242		154/210/R15		PLUG				001-099
D05242		154/ /		PLUG				115-199
	A1		W0003	0382	24		33-11-11	ALL
	A2		W0003	0378	24		33-11-11	ALL
	A3		W0003	0376	24		33-11-11	ALL
	B1		W0003	3502Y	24		33-11-11	ALL
	B2		W0003	3502R	24		33-11-11	ALL
	B3		W0003	3502B	24		33-11-11	ALL
	X1		W0003	0379	24		33-11-11	ALL
	X2		W0003	0380	20		33-11-11	ALL
	DED		W0003	3502Z			33-11-11	ALL
D05246		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D05246		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	1		W1270	6107	24		73-21-21	ALL
	2	UNUSED						ALL
	3		W1270	6112	24		73-21-22	ALL
	4	UNUSED						ALL
	5		W1270	6113	24		73-21-22	ALL

HOOKUP LIST

D280N032

91-21-51

Section D05200

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05246		P037-00/ /		RELAY SOCKET (PLATE 'A') (continued)				001-099
D05246		P37/ /		RELAY SOCKET (PLATE 'A') (continued)				115-199
	6		W1270	6115	22		77-12-42	ALL
	7		W1270	6111	24		73-21-22	ALL
	8	UNUSED						ALL
	9		W1270	6108	24		73-21-22	ALL
	10	UNUSED						ALL
	11		W1270	6109	24		73-21-22	ALL
	12		W1270	6114	22		77-12-42	001-099
	12		W1270	6114	20		77-12-42	115-199
	13		W1270	6106	24		73-21-21	ALL
	14		W1270	6110	24		73-21-22	ALL
D05254		P1/ /		PLUG				115-199
	A1		W0001	2018B	24		33-13-11	115-199
	A2		W0001	2019B	24		33-13-11	115-199
	A3	UNUSED						115-199
	B1		W0001	2018R	24		33-13-11	115-199
	B2		W0001	2019R	24		33-13-11	115-199
	B3	UNUSED						115-199
	X1		W0001	0293	24		33-13-11	115-199
	X2		W0001	0294	20		33-13-11	115-199
D05258		P36/ /		RELAY SOCKET (PLATE 'F')				ALL
	A1		W1260	0130	24		36-11-11	ALL
	A2		W1260	0129	24		36-11-11	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2		W1260	0128	24		36-11-41	ALL
	B3		W1260	0343	24		36-11-41	001-009
	B3		W1260	0086	24		36-11-41	001-009, 115-199
	B3		W1260	6491	24		36-11-41	010-099
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1260	0127	20		36-11-11	ALL
	X2		W1260	0081	20		36-11-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D05200

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05260		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D05260		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	A1		W1270	6104	24		36-11-21	ALL
	A2		W1270	6103	24		36-11-21	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2		W1270	6102	24		36-11-41	ALL
	B3		W1270	0511	24		36-11-41	001-099
	B3		W1270	6101	24		36-11-41	115-199
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1270	6100	20		36-11-21	ALL
	X2		W1270	6105	20		36-11-21	ALL
D05262		288/275/L028		PLUG				001-099
D05262		292/278/L27		PLUG				115-199
	1	VG	W0200	0007	22		33-51-12	001-099
	1	VG	W2070	A-WT			33-51-12	115-199
	=1	UNUSED						ALL
D05264		288/275/L028		RCPT				001-099
D05264		292/278/L27		RCPT				115-199
	1	VY	W0200	0008	22		33-51-12	001-099
	1	VY	W2070	0313	22		33-51-12	115-199
D05272		PP144/152/8.0		PLUG				ALL
	1		W3316	0001	18		36-11-11	ALL
	2		W3316	0002	18		36-11-11	ALL
	3	UNUSED						ALL
D05274		PP144/157/8.0		PLUG				ALL
	1		W3416	0001	18		36-11-21	ALL
	2		W3416	0002	18		36-11-21	ALL
	3	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D05200

Page 4

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05292		675/269/R37		PLUG				115-199
	1		W3692	0001	20		33-24-21	115-199
	2	UNUSED						115-199
	3	UNUSED						115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7		W3692	0007	20		33-24-21	115-199
	8		W3692	0008	16		33-24-21	115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D05298		700/ /		RCPT-				115-199
	1		W3672	0181	22		33-25-12	115-199
	2		W3672	0182	22		33-25-12	115-199
	3		W3672	0183	22		23-42-12	115-199
	4		W3672	0184	20		23-42-12	115-199
	5		W3672	0185	24		23-42-12	115-199

HOOKUP LIST

D280N032

91-21-51

Section D05200

Page 5 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05330		968/149/L41		PLUG				001-099
	A		W2406	2541B	20		21-52-11	001-099
	B		W2406	2541R	20		21-52-11	001-099
D05332		968/149/R033		PLUG				001-099
	A		W2506	2540B	20		21-52-11	001-099
	B		W2506	2540R	20		21-52-11	001-099
D05348		633/288/L38		PLUG-				001-099
	1		W3514	0001	20		33-21-12	001-099
	2		W3514	0002	20		33-21-12	001-099
	3		W3514	0003	24		33-21-12	001-099
	4		W3514	0004	20		33-21-12	001-099
	5	UNUSED						001-099
	6	UNUSED						001-099
	7	UNUSED						001-099
	8	UNUSED						001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D05300

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05422		P037-00/ /		RELAY SOCKET (PLATE 'C')				001-099
D05422		P37/ /		RELAY SOCKET (PLATE 'C')				115-199
	A1	UNUSED						ALL
	A2	UNUSED						ALL
	A3		W1270	0912	22		30-34-22	ALL
	B1		W1270	0917	18		30-34-22	ALL
	B2		W1270	0910	22		30-34-22	ALL
	B3	UNUSED						ALL
	C1		W1270	0916	18		30-34-22	ALL
	C2	UNUSED						ALL
	C3		W1270	0913	22		30-34-22	ALL
	D1	UNUSED						ALL
	D2		W1270	0909	22		30-34-22	ALL
	D3		W1270	0911	22		30-34-22	ALL
	X1		W1270	0914	22		30-34-22	ALL
	X2		W1270	0915	22		30-34-22	ALL

HOOKUP LIST

D280N032

91-21-51

Section D05400

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05501		P36/ /		RELAY SOCKET (PLATE 'A')				ALL
	1	UNUSED						ALL
	2		W1260	6015	24		21-25-11	ALL
	3		W1260	8552	24		21-25-11	ALL
	4		W1260	6016	24		21-25-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1260	0886	24		21-25-11	ALL
	8	UNUSED						ALL
D05522		P36/ /		RELAY SOCKET (PLATE 'F')				ALL
	A1	UNUSED						ALL
	A2	UNUSED						ALL
	A3		W1260	8030	22		30-34-21	ALL
	B1		W1260	8038	18		30-34-21	ALL
	B2		W1260	8033	22		30-34-21	ALL
	B3	UNUSED						ALL
	C1		W1260	8037	18		30-34-21	ALL
	C2	UNUSED						ALL
	C3		W1260	8031	22		30-34-21	ALL
	D1	UNUSED						ALL
	D2		W1260	8032	22		30-34-21	ALL
	D3		W1260	8034	22		30-34-21	ALL
	X1		W1260	8035	22		30-34-21	ALL
	X2		W1260	8036	22		30-34-21	ALL
D05576		P33/ /		RELAY SOCKET				001-099
	A1		W1230	0741	20		33-42-31	001-099
	A2		W1230	0738	20		33-42-31	001-099
	A3	UNUSED						001-099
	B1	UNUSED						001-099
	B2	UNUSED						001-099
	B3	UNUSED						001-099
	C1	UNUSED						001-099
	C2	UNUSED						001-099
	C3	UNUSED						001-099
	X1		W1230	0742	24		33-42-31	001-099
	X2		W1230	0743	24		33-42-31	001-099
D05594		P36/ /		RELAY SOCKET (PLATE 'A')				ALL
	1	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D05500

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05594		P36/ /		RELAY SOCKET (PLATE 'A') (continued)				ALL
	2	UNUSED						ALL
	3		W1260	6055	22		76-11-21	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1260	6052	22		76-11-21	ALL
	7		W1260	6054	22		76-11-21	ALL
	8		W1260	6053	22		76-11-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D05500

Page 2 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05602A		E4-2/ /		PLUG-				ALL
	A01	UNUSED						ALL
	A02		W1275	0236	22		77-31-11	ALL
	A03	UNUSED						ALL
	A04	UNUSED						ALL
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08	UNUSED						ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11		W1275	0238	22		77-31-11	ALL
	A12	UNUSED						ALL
	A13		W1275	0237	22		77-31-11	ALL
	A14	UNUSED						ALL
	A15	UNUSED						ALL
	B01	UNUSED						ALL
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04	UNUSED						ALL
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08	UNUSED						ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06		W1275	5082R	24		77-31-11	ALL
	C07	UNUSED						ALL
	C08	UNUSED						ALL
	C09		W1275	0238	22		77-31-11	ALL
	C10	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D05600

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05602A		E4-2/ /		PLUG- (continued)				ALL
	C11	UNUSED						ALL
	C12	UNUSED						ALL
	C13		W1275	0237	22		77-31-11	ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06		W1275	5082B	24		77-31-11	ALL
	D07	UNUSED						ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10	UNUSED						ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13		W1275	0236	22		77-31-11	ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	DED		W1275	5082Z			77-31-11	ALL
D05602B		E4-2/ /		PLUG-				ALL
	A01		W1275	4521W	22		77-31-11	001-099
	A01		W1275	2621B	22		77-31-11	115-199
	A02	UNUSED						ALL
	A03	UNUSED						ALL
	A04		W1275	4522W	22		77-31-11	001-099
	A04		W1275	2622B	22		77-31-11	115-199
	A05	UNUSED						ALL
	A06	UNUSED						ALL
	A07	UNUSED						ALL
	A08		W1275	2616B	24		77-12-11	ALL
	A09	UNUSED						ALL
	A10	UNUSED						ALL
	A11	UNUSED						ALL
	A12		W1275	2620B	24		77-12-31	ALL
	A13	UNUSED						ALL
	A14	UNUSED						ALL
	A15		W1275	0622	22		77-31-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D05600

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05602B		E4-2/ /		PLUG- (continued)				ALL
	B01		W1275	4521B	22		77-31-11	001-099
	B01		W1275	2621W	22		77-31-11	115-199
	B02	UNUSED						ALL
	B03	UNUSED						ALL
	B04		W1275	4522B	22		77-31-11	001-099
	B04		W1275	2622W	22		77-31-11	115-199
	B05	UNUSED						ALL
	B06	UNUSED						ALL
	B07	UNUSED						ALL
	B08		W1275	2616R	24		77-12-11	ALL
	B09	UNUSED						ALL
	B10	UNUSED						ALL
	B11	UNUSED						ALL
	B12	UNUSED						ALL
	B13	UNUSED						ALL
	B14	UNUSED						ALL
	B15	UNUSED						ALL
	C01	UNUSED						ALL
	C02	UNUSED						ALL
	C03	UNUSED						ALL
	C04	UNUSED						ALL
	C05	UNUSED						ALL
	C06	UNUSED						ALL
	C07		W1275	6506	24		77-31-11	001-008
	C07	UNUSED						009-099, 115-199
	C08	UNUSED						ALL
	C09	UNUSED						ALL
	C10		W1275	2617B	24		77-12-21	ALL
	C11	UNUSED						ALL
	C12		W1275	2620R	24		77-12-31	ALL
	C13	UNUSED						ALL
	C14	UNUSED						ALL
	C15	UNUSED						ALL
	D01	UNUSED						ALL
	D02	UNUSED						ALL
	D03	UNUSED						ALL
	D04	UNUSED						ALL
	D05	UNUSED						ALL
	D06	UNUSED						ALL
	D07	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D05600

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05602B		E4-2/ /		PLUG- (continued)				ALL
	D08	UNUSED						ALL
	D09	UNUSED						ALL
	D10		W1275	2617R	24		77-12-21	ALL
	D11	UNUSED						ALL
	D12	UNUSED						ALL
	D13	UNUSED						ALL
	D14	UNUSED						ALL
	D15	UNUSED						ALL
	CAP	Y	W1275	6506	24		77-31-11	009-099
	DED		W1275	4521Z			77-31-11	001-099
	DED		W1275	4522Z			77-31-11	001-099
	DED		W1275	2616Z			77-12-11	ALL
	DED		W1275	2617Z			77-12-21	ALL
	DED		W1275	2620Z			77-12-31	ALL
	DED		W1275	2621Z			77-31-11	115-199
	DED		W1275	2622Z			77-31-11	115-199
D05602C		E4-2/ /		PLUG-				ALL
	1	UNUSED						ALL
	2		W1275	0624	22		77-31-11	001-099
	2		W1275	0624	24		77-31-11	115-199
	3		W1275	0765	22		77-31-11	001-099
	3		W1275	0765	20		77-31-11	115-199
	4		W1275	0774	20		77-31-11	ALL
	5	UNUSED						ALL
	= C1	UNUSED						ALL
	= C5	UNUSED						ALL
D05606		318.8/291/R27		RCPT-				115-199
	A		W3648	0001	10		25-31-11	115-199
	B		W3648	0002	10		25-31-11	115-199
	C		W3648	0003	10		25-31-11	115-199
	D		W3648	0004	08		25-31-11	115-199
D05608		P33/ /		RELAY SOCKET				ALL
	A1	UNUSED						ALL
	A2		W1230	0231	22		27-51-21	ALL
	A3		W1230	0232	22		27-51-21	ALL
	B1		W1230	0233	22		27-51-21	ALL
	B2		W1230	0234	22		27-51-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D05600

Page 4

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05608		P33/ /		RELAY SOCKET (continued)				ALL
	B3		W1230	0235	22		27-51-21	ALL
	X1		W1230	0237	22		27-51-21	ALL
	X2		W1230	0236	22		27-51-21	ALL
D05616		P36/ /		RELAY SOCKET (PLATE 'F')				ALL
	A1	UNUSED						001-099
	A1		W1260	5612	22		21-58-24	115-199
	A2	UNUSED						001-099
	A2		W1260	0683	22		21-58-24	115-199
	A3	UNUSED						001-099
	A3		W1260	0964	24		21-58-24	115-199
	B1	UNUSED						ALL
	B2	UNUSED						001-099
	B2		W1260	0681	22		21-58-24	115-199
	B3	UNUSED						001-099
	B3		W1260	0686	22		21-58-24	115-199
	C1		W1260	0944	20		21-58-13	ALL
	C1		W1260	0954	20		21-58-13	ALL
	C2		W1260	0682	16		21-58-13	ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2		W1260	0679	24		21-58-13	ALL
	D3		W1260	0952	24		21-58-13	ALL
	X1		W1260	0688	24		21-58-12	ALL
	X2		W1260	0698	24		21-58-12	ALL
D05618		P36/ /		RELAY SOCKET (PLATE 'A')				ALL
	1	UNUSED						ALL
	2		W1260	0941	24		21-58-12	ALL
	3		W1260	6035	24		21-58-12	ALL
	4		W1260	0664	24		21-58-12	ALL
	5	UNUSED						ALL
	6		W1260	0947	24		21-58-12	ALL
	7		W1260	6040	24		21-58-12	ALL
	8		W1260	0945	24		21-58-12	ALL
D05622		P36/ /		RELAY SOCKET (PLATE 'D')				ALL
	1		W1260	0670	24		21-58-12	ALL
	2		W1260	5554	24		21-25-11	ALL
	3		W1260	0667	24		21-58-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D05600

Page 5

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05622		P36/ /		RELAY SOCKET (PLATE 'D') (continued)				ALL
	4		W1260	0893	24		21-25-11	ALL
	5	UNUSED						ALL
	6		W1260	0668	24		21-58-12	ALL
	7		W1260	0703	24		21-58-12	ALL
	8	UNUSED						ALL
D05626		P36/ /		RELAY SOCKET (PLATE 'F')				ALL
	A1		W1260	8083	24		21-58-12	ALL
	A2		W1260	8077	24		21-58-12	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2		W1260	0896	24		21-25-11	ALL
	B3		W1260	0897	24		21-25-11	ALL
	C1		W1260	0927	24		21-58-12	ALL
	C2		W1260	0526	24		21-58-12	ALL
	C2		W1260	0903	24		21-58-12	ALL
	C3		W1260	0926	24		21-58-12	ALL
	D1	UNUSED						ALL
	D2		W1260	0924	24		21-58-12	ALL
	D3		W1260	0923	24		21-58-12	ALL
	X1		W1260	8090	24		21-58-12	ALL
	X2		W1260	8075	24		21-58-12	ALL
D05632		512/190/L040		PLUG				001-099
D05632		560/182/L062		PLUG				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W4228	0230	24		21-58-12	ALL
	5		W4228	0231	20		21-58-12	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W4228	0235	24		21-58-12	ALL
	10		W4228	0233	20		21-58-12	ALL
	11		W4228	0234	20		21-58-12	ALL
	12		W4228	0232	24		21-58-12	ALL
D05634		512/190/L040		PLUG				ALL
	1	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D05600

Page 6

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05634		512/190/L040		PLUG (continued)				ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W4228	0236	24		21-58-12	ALL
	5		W4228	0237	20		21-58-12	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W4228	0241	24		21-58-12	ALL
	10		W4228	0239	20		21-58-12	ALL
	11		W4228	0240	20		21-58-12	ALL
	12		W4228	0238	24		21-58-12	ALL
D05654		P36/ /		RELAY SOCKET (PLATE 'D')				ALL
	A1		W1260	0744	22		29-11-31	ALL
	A2		W1260	0501	20		29-11-31	001-099
	A2		W1260	0501	22		29-11-31	115-199
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1260	0746	22		29-11-31	ALL
	X2		W1260	0747	20		29-11-31	ALL
D05660		560/192/R062		RCPT-				001-099
D05660		560/192/R62		RCPT-				115-199
	1		W4473	5072R	24		28-41-11	ALL
	2		W4473	5072B	24		28-41-11	ALL
	3		W4473	0242	20		28-41-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D05662		P36/ /		RELAY SOCKET (PLATE 'D')				ALL
	A1		W1260	0736	20		29-11-22	ALL
	A2		W1260	0498	20		29-11-22	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1260	0737	20		29-11-22	ALL
	X2		W1260	0738	20		29-11-22	ALL

HOOKUP LIST

D280N032

91-21-51

Section D05600

Page 7

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05664		P36/ /		RELAY SOCKET (PLATE 'D')				ALL
	A1		W1260	0741	22		29-11-31	ALL
	A2		W1260	0742	22		29-11-31	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1260	0739	22		29-11-31	ALL
	X2		W1260	0740	20		29-11-31	ALL
D05690		656/290/L027		PLUG-				001-099
	1		W3572	0148	16		33-26-11	001-099
	2		W3572	0171	22		33-25-11	001-099
	3	16	W3572	0163	16		33-26-21	001-099
	4	UNUSED						001-099
	5		W3572	0172	22		33-25-11	001-099
	6		W3572	0146	22		33-26-11	001-099
	7		W3572	0196	20		33-24-11	001-099
	8		W3572	0195	20		33-24-11	001-099
	9		W3572	0175	20		SPARE	001-099
	10		W3572	0176	20		SPARE	001-099
	11		W3572	0174	20		35-21-12	001-099
	12		W3572	0089	20		SPARE	001-099
	13		W3572	2005B	22		23-31-21	001-099
	14		W3572	2005R	22		23-31-21	001-099
	15		W3572	0173	18		35-21-12	001-099
	16		W3572	0145	22		33-26-11	001-099
	17		W3572	0170	22		33-25-11	001-099
	18	16	W3572	0147	16		33-26-11	001-099
	19		W3572	0133	22		38-32-21	001-099
	20		W3572	0134	24		38-32-21	001-099
	21	UNUSED						001-099
	22		W3572	0135	20		38-32-21	001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
	25		W3572	0092	20		SPARE	001-099
	26	UNUSED						001-099
	27	UNUSED						001-099
	28	UNUSED						001-099
	29	UNUSED						001-099
	30		W3572	0143	16		38-32-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D05600

Page 8

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05690		656/290/L027		PLUG- (continued)				001-099
	31	UNUSED						001-099
	32	UNUSED						001-099
	33	UNUSED						001-099
	34		W3572	0129	24		38-32-11	001-099
	35		W3572	0130	24		38-32-11	001-099
	36		W3572	0131	24		38-32-11	001-099
	37		W3572	0132	18		38-32-11	001-099
	38		W3572	0128	22		38-13-11	001-099
	39		W3572	0149	18		33-26-11	001-099
	40		W3572	0150	18		33-26-11	001-099
	41	UNUSED						001-099
	42	UNUSED						001-099
	43	UNUSED						001-099
D05694		P37/ I		RELAY SOCKET (PLATE 'B')				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1270	0590	22		76-11-21	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1270	0587	22		76-11-21	ALL
	7		W1270	0589	22		76-11-21	ALL
	8		W1270	0588	22		76-11-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D05600

Page 9 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05772		907/ /		RCPT-				001-099
D05772		907/265/L060		RCPT-				115-199
	1		W3702	0251G	16		33-24-12	ALL
	2		W3702	0252WV	22		33-25-12	ALL
	3		W3702	0253WG	22		33-25-12	ALL
	4		W3702	0254WO	22		33-25-12	ALL
	5		W3702	0255V	22		33-25-12	ALL
	6		W3702	0256WN	16		33-23-12	ALL
	7		W3702	0257W	20		33-24-12	ALL
	8		W3702	0258WP	16		33-23-12	ALL
	9	UNUSED						001-099
	9		W3702	6259AD	22		33-25-12	115-199
	10		W3702	0260K	18		35-21-12	ALL
	11		W3702	0259AJ	20		35-21-12	ALL
	12	UNUSED						ALL
	13		W3702	2251R	22		23-31-22	001-099
	13		W3702	2251B	22		23-31-22	115-199
	14		W3702	2251B	22		23-31-22	001-099
	14		W3702	2251R	22		23-31-22	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D05700

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05824		P5/ /		PLUG				115-199
	1		W2070	0437	20		33-13-31	115-199
	2		W2070	0438	20		33-13-31	115-199
	3		W2070	0396	22		33-11-31	115-199
	4		W2070	0397	22		33-11-31	115-199
	5		W2070	0398	22		33-11-31	115-199
	6		W2070	0399	20		33-11-31	115-199
	7	UNUSED						115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
D05872		879/265/R060		RCPT-				ALL
	1		W3802	0241G	16		33-24-21	ALL
	2		W3802	0242WV	22		33-25-22	ALL
	3		W3802	0243WG	22		33-25-22	ALL
	4		W3802	0244WO	22		33-25-22	ALL
	5		W3802	0245V	22		33-25-22	ALL
	6		W3802	0246WN	16		33-23-22	ALL
	7		W3802	0247W	20		33-24-21	ALL
	8		W3802	0248WP	16		33-23-22	ALL
	9	UNUSED						001-099
	9		W3802	6249AD	22		33-25-22	115-199
	10		W3802	0250K	18		35-21-21	ALL
	11		W3802	0249AJ	20		35-21-21	ALL
	12	UNUSED						ALL
	13		W3802	2241R	22		23-31-32	001-099
	13		W3802	2241B	22		23-31-32	115-199
	14		W3802	2241B	22		23-31-32	001-099
	14		W3802	2241R	22		23-31-32	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D05874		907/265/R060		RCPT-				ALL
	1		W3802	0251G	16		33-24-21	ALL
	2		W3802	0252WV	22		33-25-22	ALL

HOOKUP LIST

D280N032

91-21-51

Section D05800

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05874		907/265/R060		RCPT- (continued)				ALL
	3		W3802	0253WG	22		33-25-22	ALL
	4		W3802	0254WO	22		33-25-22	ALL
	5		W3802	0255V	22		33-25-22	ALL
	6		W3802	0256WN	16		33-23-22	ALL
	7		W3802	0257W	20		33-24-21	ALL
	8		W3802	0258WP	16		33-23-22	ALL
	9	UNUSED						001-099
	9		W3802	6259AD	22		33-25-22	115-199
	10		W3802	0260K	18		35-21-21	ALL
	11		W3802	0259AJ	20		35-21-21	ALL
	12	UNUSED						ALL
	13		W3802	2251R	22		23-31-32	001-099
	13		W3802	2251B	22		23-31-32	115-199
	14		W3802	2251B	22		23-31-32	001-099
	14		W3802	2251R	22		23-31-32	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D05896		670/290/L026		PLUG-				001-008
	1		W3572	0176	20		SPARE	001-008
	2		W3572	0171	22		33-25-11	001-008
	3	UNUSED						001-008
	4	UNUSED						001-008
	5		W3572	0172	22		33-25-11	001-008
	6	UNUSED						001-008
	7		W3572	0175	20		SPARE	001-008
	8	UNUSED						001-008
	9	UNUSED						001-008
	10		W3572	0173	18		35-21-12	001-008
	11		W3572	0174	20		35-21-12	001-008
	12	UNUSED						001-008
	13		W3572	2005R	22		23-31-21	001-008
	14		W3572	2005B	22		23-31-21	001-008

HOOKUP LIST

D280N032

91-21-51

Section D05800

Page 2 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05902		385/265/L060		RCPT-				ALL
	1		W3702	0011G	16		33-24-12	ALL
	2		W3702	0012WV	22		33-25-11	ALL
	3		W3702	0013WG	22		33-25-11	ALL
	4		W3702	0014WO	22		33-25-11	ALL
	5		W3702	0015V	22		33-25-11	ALL
	6		W3702	0016WN	16		33-23-11	ALL
	7		W3702	0017W	20		33-24-12	ALL
	8		W3702	0018WP	16		33-23-11	ALL
	9	UNUSED						001-099
	9		W3702	6019AD	22		33-25-11	115-199
	10		W3702	0020K	18		35-21-12	ALL
	11		W3702	0019AJ	20		35-21-12	ALL
	12	UNUSED						ALL
	13		W3702	2011R	22		23-31-21	001-099
	13		W3702	2011B	22		23-31-21	115-199
	14		W3702	2011B	22		23-31-21	001-099
	14		W3702	2011R	22		23-31-21	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D05904		407/265/L060		RCPT-				ALL
	1		W3702	0021G	16		33-24-12	ALL
	2		W3702	0022WV	22		33-25-11	ALL
	3		W3702	0023WG	22		33-25-11	ALL
	4		W3702	0024WO	22		33-25-11	ALL
	5		W3702	0025V	22		33-25-11	ALL
	6		W3702	0026WN	16		33-23-11	ALL
	7		W3702	0027W	20		33-24-12	ALL
	8		W3702	0028WP	16		33-23-11	ALL
	9	UNUSED						001-099
	9		W3702	6029AD	22		33-25-11	115-199
	10		W3702	0030K	18		35-21-12	ALL
	11		W3702	0029AJ	20		35-21-12	ALL
	12	UNUSED						ALL
	13		W3702	2021R	22		23-31-21	001-099
	13		W3702	2021B	22		23-31-21	115-199
	14		W3702	2021B	22		23-31-21	001-099
	14		W3702	2021R	22		23-31-21	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D05900

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05906		429/265/L060		RCPT-				ALL
	1		W3702	0031G	16		33-24-12	ALL
	2		W3702	0032WV	22		33-25-11	ALL
	3		W3702	0033WG	22		33-25-11	ALL
	4		W3702	0034WO	22		33-25-11	ALL
	5		W3702	0035V	22		33-25-11	ALL
	6		W3702	0036WN	16		33-23-11	ALL
	7		W3702	0037W	20		33-24-12	ALL
	8		W3702	0038WP	16		33-23-11	ALL
	9	UNUSED						001-099
	9		W3702	6039AD	22		33-25-11	115-199
	10		W3702	0040K	18		35-21-12	ALL
	11		W3702	0039AJ	20		35-21-12	ALL
	12	UNUSED						ALL
	13		W3702	2031R	22		23-31-21	001-099
	13		W3702	2031B	22		23-31-21	115-199
	14		W3702	2031B	22		23-31-21	001-099
	14		W3702	2031R	22		23-31-21	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D05908		444/265/L060		RCPT-				ALL
	1		W3702	0051G	16		33-24-12	ALL
	2		W3702	0052WV	22		33-25-11	ALL
	3		W3702	0053WG	22		33-25-11	ALL
	4		W3702	0054WO	22		33-25-11	ALL
	5		W3702	0055V	22		33-25-11	ALL
	6		W3702	0056WN	16		33-23-11	ALL
	7		W3702	0057W	20		33-24-12	ALL
	8		W3702	0058WP	16		33-23-11	ALL
	9	UNUSED						001-099
	9		W3702	6059AD	22		33-25-11	115-199
	10		W3702	0060K	18		35-21-12	ALL
	11		W3702	0059AJ	20		35-21-12	ALL
	12	UNUSED						ALL
	13		W3702	2051R	22		23-31-21	001-099
	13		W3702	2051B	22		23-31-21	115-199
	14		W3702	2051B	22		23-31-21	001-099
	14		W3702	2051R	22		23-31-21	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D05900

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05910		475/265/L060		RCPT-				ALL
	1		W3702	0061G	16		33-24-12	ALL
	2		W3702	0062WV	22		33-25-11	ALL
	3		W3702	0063WG	22		33-25-11	ALL
	4		W3702	0064WO	22		33-25-11	ALL
	5		W3702	0065V	22		33-25-11	ALL
	6		W3702	0066WN	16		33-23-11	ALL
	7		W3702	0067W	20		33-24-12	ALL
	8		W3702	0068WP	16		33-23-11	ALL
	9	UNUSED						001-099
	9		W3702	6069AD	22		33-25-11	115-199
	10		W3702	0070K	18		35-21-12	ALL
	11		W3702	0069AJ	20		35-21-12	ALL
	12	UNUSED						ALL
	13		W3702	2061R	22		23-31-21	001-099
	13		W3702	2061B	22		23-31-21	115-199
	14		W3702	2061B	22		23-31-21	001-099
	14		W3702	2061R	22		23-31-21	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D05912		489/265/L060		RCPT-				ALL
	1		W3702	0071G	16		33-24-12	ALL
	2		W3702	0072WV	22		33-25-11	ALL
	3		W3702	0073WG	22		33-25-11	ALL
	4		W3702	0074WO	22		33-25-11	ALL
	5		W3702	0075V	22		33-25-11	ALL
	6		W3702	0076WN	16		33-23-11	ALL
	7		W3702	0077W	20		33-24-12	ALL
	8		W3702	0078WP	16		33-23-11	ALL
	9	UNUSED						001-099
	9		W3702	6079AD	22		33-25-11	115-199
	10		W3702	0080K	18		35-21-12	ALL
	11		W3702	0079AJ	20		35-21-12	ALL
	12	UNUSED						ALL
	13		W3702	2071R	22		23-31-21	001-099
	13		W3702	2071B	22		23-31-21	115-199
	14		W3702	2071B	22		23-31-21	001-099
	14		W3702	2071R	22		23-31-21	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D05900

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05914		517/265/L060		RCPT-				ALL
	1		W3702	0081G	16		33-24-12	ALL
	2		W3702	0082WV	22		33-25-11	ALL
	3		W3702	0083WG	22		33-25-11	ALL
	4		W3702	0084WO	22		33-25-11	ALL
	5		W3702	0085V	22		33-25-11	ALL
	6		W3702	0086WN	16		33-23-11	ALL
	7		W3702	0087W	20		33-24-12	ALL
	8		W3702	0088WP	16		33-23-11	ALL
	9	UNUSED						001-099
	9		W3702	6089AD	22		33-25-11	115-199
	10		W3702	0090K	18		35-21-12	ALL
	11		W3702	0089AJ	20		35-21-12	ALL
	12	UNUSED						ALL
	13		W3702	2081R	22		23-31-21	001-099
	13		W3702	2081B	22		23-31-21	115-199
	14		W3702	2081B	22		23-31-21	001-099
	14		W3702	2081R	22		23-31-21	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D05916		530/265/L060		RCPT-				ALL
	1		W3702	0091G	16		33-24-12	ALL
	2		W3702	0092WV	22		33-25-11	ALL
	3		W3702	0093WG	22		33-25-11	ALL
	4		W3702	0094WO	22		33-25-11	ALL
	5		W3702	0095V	22		33-25-11	ALL
	6		W3702	0096WN	16		33-23-11	ALL
	7		W3702	0097W	20		33-24-12	ALL
	8		W3702	0098WP	16		33-23-11	ALL
	9	UNUSED						001-099
	9		W3702	6099AD	22		33-25-11	115-199
	10		W3702	0100K	18		35-21-12	ALL
	11		W3702	0099AJ	20		35-21-12	ALL
	12	UNUSED						ALL
	13		W3702	2091R	22		23-31-21	001-099
	13		W3702	2091B	22		23-31-21	115-199
	14		W3702	2091B	22		23-31-21	001-099
	14		W3702	2091R	22		23-31-21	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D05900

Page 4

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05918		546/265/L060		RCPT-				ALL
	1		W3702	0101G	16		33-24-12	ALL
	2		W3702	0102WV	22		33-25-11	ALL
	3		W3702	0103WG	22		33-25-11	ALL
	4		W3702	0104WO	22		33-25-11	ALL
	5		W3702	0105V	22		33-25-11	ALL
	6		W3702	0106WN	16		33-23-11	ALL
	7		W3702	0107W	20		33-24-12	ALL
	8		W3702	0108WP	16		33-23-11	ALL
	9	UNUSED						001-099
	9		W3702	6109AD	22		33-25-11	115-199
	10		W3702	0110K	18		35-21-12	ALL
	11		W3702	0109AJ	20		35-21-12	ALL
	12	UNUSED						ALL
	13		W3702	2101R	22		23-31-21	001-099
	13		W3702	2101B	22		23-31-21	115-199
	14		W3702	2101B	22		23-31-21	001-099
	14		W3702	2101R	22		23-31-21	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D05920		575/265/L060		RCPT-				ALL
	1		W3702	0111G	16		33-24-12	ALL
	2		W3702	0112WV	22		33-25-11	ALL
	3		W3702	0113WG	22		33-25-11	ALL
	4		W3702	0114WO	22		33-25-11	ALL
	5		W3702	0115V	22		33-25-11	ALL
	6		W3702	0116WN	16		33-23-11	ALL
	7		W3702	0117W	20		33-24-12	ALL
	8		W3702	0118WP	16		33-23-11	ALL
	9	UNUSED						001-099
	9		W3702	6119AD	22		33-25-11	115-199
	10		W3702	0120K	18		35-21-12	ALL
	11		W3702	0119AJ	20		35-21-12	ALL
	12	UNUSED						ALL
	13		W3702	2111R	22		23-31-21	001-099
	13		W3702	2111B	22		23-31-21	115-199
	14		W3702	2111B	22		23-31-21	001-099
	14		W3702	2111R	22		23-31-21	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D05900

Page 5

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05922		596/265/L060		RCPT-				ALL
	1		W3702	0121G	16		33-24-12	ALL
	2		W3702	0122WV	22		33-25-11	ALL
	3		W3702	0123WG	22		33-25-11	ALL
	4		W3702	0124WO	22		33-25-11	ALL
	5		W3702	0125V	22		33-25-11	ALL
	6		W3702	0126WN	16		33-23-11	ALL
	7		W3702	0127W	20		33-24-12	ALL
	8		W3702	0128WP	16		33-23-11	ALL
	9	UNUSED						001-099
	9		W3702	6129AD	22		33-25-11	115-199
	10		W3702	0130K	18		35-21-12	ALL
	11		W3702	0129AJ	20		35-21-12	ALL
	12	UNUSED						ALL
	13		W3702	2121R	22		23-31-21	001-099
	13		W3702	2121B	22		23-31-21	115-199
	14		W3702	2121B	22		23-31-21	001-099
	14		W3702	2121R	22		23-31-21	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D05924		610/265/L060		RCPT-				ALL
	1		W3702	0131G	16		33-24-12	ALL
	2		W3702	0132WV	22		33-25-11	ALL
	3		W3702	0133WG	22		33-25-11	ALL
	4		W3702	0134WO	22		33-25-11	ALL
	5		W3702	0135V	22		33-25-11	ALL
	6		W3702	0136WN	16		33-23-11	ALL
	7		W3702	0137W	20		33-24-12	ALL
	8		W3702	0138WP	16		33-23-11	ALL
	9	UNUSED						001-099
	9		W3702	6139AD	22		33-25-11	115-199
	10		W3702	0140K	18		35-21-12	ALL
	11		W3702	0139AJ	20		35-21-12	ALL
	12	UNUSED						ALL
	13		W3702	2131R	22		23-31-21	001-099
	13		W3702	2131B	22		23-31-21	115-199
	14		W3702	2131B	22		23-31-21	001-099
	14		W3702	2131R	22		23-31-21	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D05900

Page 6

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05926		638/265/L060		RCPT-				ALL
	1		W3702	0141G	16		33-24-12	ALL
	2		W3702	0142WV	22		33-25-11	ALL
	3		W3702	0143WG	22		33-25-11	ALL
	4		W3702	0144WO	22		33-25-11	ALL
	5		W3702	0145V	22		33-25-11	ALL
	6		W3702	0146WN	16		33-23-11	ALL
	7		W3702	0147W	20		33-24-12	ALL
	8		W3702	0148WP	16		33-23-11	ALL
	9	UNUSED						001-099
	9		W3702	6149AD	22		33-25-11	115-199
	10		W3702	0150K	18		35-21-12	ALL
	11		W3702	0149AJ	20		35-21-12	ALL
	12	UNUSED						ALL
	13		W3702	2141R	22		23-31-21	001-099
	13		W3702	2141B	22		23-31-21	115-199
	14		W3702	2141B	22		23-31-21	001-099
	14		W3702	2141R	22		23-31-21	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D05928		670/296/L30		RCPT-				001-008
D05928		670/273/L030		RCPT-				009-099
D05928		670/265/L040		RCPT-				115-199
	1		W3702	0151G	16		33-24-12	ALL
	2		W3702	0152WV	22		33-25-11	ALL
	3		W3702	0153WG	22		33-25-11	ALL
	4		W3702	0154WO	22		33-25-11	ALL
	5		W3702	0155V	22		33-25-11	ALL
	6		W3702	0156WN	16		33-23-11	ALL
	7		W3702	0157W	20		33-24-12	ALL
	8		W3702	0158WP	16		33-23-11	ALL
	9	UNUSED						001-099
	9		W3702	6159AD	22		33-25-11	115-199
	10		W3702	0160K	18		35-21-12	ALL
	11		W3702	0159AJ	20		35-21-12	ALL
	12	UNUSED						ALL
	13		W3702	2151R	22		23-31-21	001-099
	13		W3702	2151B	22		23-31-21	115-199
	14		W3702	2151B	22		23-31-21	001-099
	14		W3702	2151R	22		23-31-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section D05900

Page 7

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05928		670/296/L30		RCPT- (continued)				001-008
D05928		670/273/L030		RCPT- (continued)				009-099
D05928		670/265/L040		RCPT- (continued)				115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D05930		712/ /		RCPT-				001-099
D05930		712/265/L060		RCPT-				115-199
	1		W3702	0161G	16		33-24-12	ALL
	2		W3702	0162WV	22		33-25-11	ALL
	3		W3702	0163WG	22		33-25-11	ALL
	4		W3702	0164WO	22		33-25-11	ALL
	5		W3702	0165V	22		33-25-11	ALL
	6		W3702	0166WN	16		33-23-12	ALL
	7		W3702	0167W	20		33-24-12	ALL
	8		W3702	0168WP	16		33-23-12	ALL
	9	UNUSED						001-099
	9		W3702	6169AD	22		33-25-11	115-199
	10		W3702	0170K	18		35-21-12	ALL
	11		W3702	0169AJ	20		35-21-12	ALL
	12	UNUSED						ALL
	13		W3702	2161R	22		23-31-21	001-099
	13		W3702	2161B	22		23-31-21	115-199
	14		W3702	2161B	22		23-31-21	001-099
	14		W3702	2161R	22		23-31-21	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D05932		712/ /		RCPT-				001-099
D05932		712/265/L060		RCPT-				115-199
	1		W3702	0171G	16		33-24-12	ALL
	2		W3702	0172WV	22		33-25-11	ALL
	3		W3702	0173WG	22		33-25-11	ALL
	4		W3702	0174WO	22		33-25-11	ALL
	5		W3702	0175V	22		33-25-11	ALL
	6		W3702	0176WN	16		33-23-12	ALL
	7		W3702	0177W	20		33-24-12	ALL
	8		W3702	0178WP	16		33-23-12	ALL
	9	UNUSED						001-099
	9		W3702	6179AD	22		33-25-11	115-199
	10		W3702	0180K	18		35-21-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D05900

Page 8

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05932		712/ /		RCPT- (continued)				001-099
D05932		712/265/L060		RCPT- (continued)				115-199
	11		W3702	0179AJ	20		35-21-12	ALL
	12	UNUSED						ALL
	13		W3702	2171R	22		23-31-21	001-099
	13		W3702	2171B	22		23-31-21	115-199
	14		W3702	2171B	22		23-31-21	001-099
	14		W3702	2171R	22		23-31-21	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D05934		745/265/L060		RCPT-				ALL
	1		W3702	0181G	16		33-24-12	ALL
	2		W3702	0182WV	22		33-25-12	ALL
	3		W3702	0183WG	22		33-25-12	ALL
	4		W3702	0184WO	22		33-25-12	ALL
	5		W3702	0185V	22		33-25-12	ALL
	6		W3702	0186WN	16		33-23-12	ALL
	7		W3702	0187W	20		33-24-12	ALL
	8		W3702	0188WP	16		33-23-12	ALL
	9	UNUSED						001-099
	9		W3702	6189AD	22		33-25-12	115-199
	10		W3702	0190K	18		35-21-12	ALL
	11		W3702	0189AJ	20		35-21-12	ALL
	12	UNUSED						ALL
	13		W3702	2181R	22		23-31-22	001-099
	13		W3702	2181B	22		23-31-22	115-199
	14		W3702	2181B	22		23-31-22	001-099
	14		W3702	2181R	22		23-31-22	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D05936		758/265/L060		RCPT-				ALL
	1		W3702	0191G	16		33-24-12	ALL
	2		W3702	0192WV	22		33-25-12	ALL
	3		W3702	0193WG	22		33-25-12	ALL
	4		W3702	0194WO	22		33-25-12	ALL
	5		W3702	0195V	22		33-25-12	ALL
	6		W3702	0196WN	16		33-23-12	ALL
	7		W3702	0197W	20		33-24-12	ALL
	8		W3702	0198WP	16		33-23-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D05900

Page 9

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05936		758/265/L060		RCPT- (continued)				ALL
	9	UNUSED						001-099
	9		W3702	6199AD	22		33-25-12	115-199
	10		W3702	0200K	18		35-21-12	ALL
	11		W3702	0199AJ	20		35-21-12	ALL
	12	UNUSED						ALL
	13		W3702	2191R	22		23-31-22	001-099
	13		W3702	2191B	22		23-31-22	115-199
	14		W3702	2191B	22		23-31-22	001-099
	14		W3702	2191R	22		23-31-22	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D05938		785/265/L060		RCPT-				ALL
	1		W3702	0201G	16		33-24-12	ALL
	2		W3702	0202WV	22		33-25-12	ALL
	3		W3702	0203WG	22		33-25-12	ALL
	4		W3702	0204WO	22		33-25-12	ALL
	5		W3702	0205V	22		33-25-12	ALL
	6		W3702	0206WN	16		33-23-12	ALL
	7		W3702	0207W	20		33-24-12	ALL
	8		W3702	0208WP	16		33-23-12	ALL
	9	UNUSED						001-099
	9		W3702	6209AD	22		33-25-12	115-199
	10		W3702	0210K	18		35-21-12	ALL
	11		W3702	0209AJ	20		35-21-12	ALL
	12	UNUSED						ALL
	13		W3702	2201R	22		23-31-22	001-099
	13		W3702	2201B	22		23-31-22	115-199
	14		W3702	2201B	22		23-31-22	001-099
	14		W3702	2201R	22		23-31-22	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D05940		813/265/L060		RCPT-				ALL
	1		W3702	0211G	16		33-24-12	ALL
	2		W3702	0212WV	22		33-25-12	ALL
	3		W3702	0213WG	22		33-25-12	ALL
	4		W3702	0214WO	22		33-25-12	ALL
	5		W3702	0215V	22		33-25-12	ALL
	6		W3702	0216WN	16		33-23-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D05900

Page 10

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05940		813/265/L060		RCPT- (continued)				ALL
	7		W3702	0217W	20		33-24-12	ALL
	8		W3702	0218WP	16		33-23-12	ALL
	9	UNUSED						001-099
	9		W3702	6219AD	22		33-25-12	115-199
	10		W3702	0220K	18		35-21-12	ALL
	11		W3702	0219AJ	20		35-21-12	ALL
	12	UNUSED						ALL
	13		W3702	2211R	22		23-31-22	001-099
	13		W3702	2211B	22		23-31-22	115-199
	14		W3702	2211B	22		23-31-22	001-099
	14		W3702	2211R	22		23-31-22	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D05942		850/265/L060		RCPT-				ALL
	1		W3702	0221G	16		33-24-12	ALL
	2		W3702	0222WV	22		33-25-12	ALL
	3		W3702	0223WG	22		33-25-12	ALL
	4		W3702	0224WO	22		33-25-12	ALL
	5		W3702	0225V	22		33-25-12	ALL
	6		W3702	0226WN	16		33-23-12	ALL
	7		W3702	0227W	20		33-24-12	ALL
	8		W3702	0228WP	16		33-23-12	ALL
	9	UNUSED						001-099
	9		W3702	6229AD	22		33-25-12	115-199
	10		W3702	0230K	18		35-21-12	ALL
	11		W3702	0229AJ	20		35-21-12	ALL
	12	UNUSED						ALL
	13		W3702	2221R	22		23-31-22	001-099
	13		W3702	2221B	22		23-31-22	115-199
	14		W3702	2221B	22		23-31-22	001-099
	14		W3702	2221R	22		23-31-22	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D05944		879/265/L060		RCPT-				ALL
	1		W3702	0231G	16		33-24-12	ALL
	2		W3702	0232WV	22		33-25-12	ALL
	3		W3702	0233WG	22		33-25-12	ALL
	4		W3702	0234WO	22		33-25-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D05900

Page 11

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05944		879/265/L060		RCPT- (continued)				ALL
	5		W3702	0235V	22		33-25-12	ALL
	6		W3702	0236WN	16		33-23-12	ALL
	7		W3702	0237W	20		33-24-12	ALL
	8		W3702	0238WP	16		33-23-12	ALL
	9	UNUSED						001-099
	9		W3702	6239AD	22		33-25-12	115-199
	10		W3702	0240K	18		35-21-12	ALL
	11		W3702	0239AJ	20		35-21-12	ALL
	12	UNUSED						ALL
	13		W3702	2231R	22		23-31-22	001-099
	13		W3702	2231B	22		23-31-22	115-199
	14		W3702	2231B	22		23-31-22	001-099
	14		W3702	2231R	22		23-31-22	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D05946		930/265/L060		RCPT-				ALL
	1		W3704	0011G	16		33-24-13	ALL
	2		W3704	0012WV	22		33-25-12	ALL
	3		W3704	0013WG	22		33-25-12	ALL
	4		W3704	0014WO	22		33-25-12	ALL
	5		W3704	0015V	22		33-25-12	ALL
	6		W3704	0016WN	16		33-23-12	ALL
	7		W3704	0017W	20		33-24-13	ALL
	8		W3704	0018WP	16		33-23-12	ALL
	9	UNUSED						001-099
	9		W3704	6019AD	22		33-25-12	115-199
	10		W3704	0020K	18		35-21-12	ALL
	11		W3704	0019AJ	20		35-21-12	ALL
	12	UNUSED						ALL
	13		W3704	2011R	22		23-31-22	001-099
	13		W3704	2011B	22		23-31-22	115-199
	14		W3704	2011B	22		23-31-22	001-099
	14		W3704	2011R	22		23-31-22	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D05948		941/265/L060		RCPT-				ALL
	1		W3704	0021G	16		33-24-13	ALL
	2		W3704	0022WV	22		33-25-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D05900

Page 12

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05948		941/265/L060		RCPT- (continued)				ALL
	3		W3704	0023WG	22		33-25-12	ALL
	4		W3704	0024WO	22		33-25-12	ALL
	5		W3704	0025V	22		33-25-12	ALL
	6		W3704	0026WN	16		33-23-12	ALL
	7		W3704	0027W	20		33-24-13	ALL
	8		W3704	0028WP	16		33-23-12	ALL
	9	UNUSED						001-099
	9		W3704	6029AD	22		33-25-12	115-199
	10		W3704	0030K	18		35-21-12	ALL
	11		W3704	0029AJ	20		35-21-12	ALL
	12	UNUSED						ALL
	13		W3704	2021R	22		23-31-22	001-099
	13		W3704	2021B	22		23-31-22	115-199
	14		W3704	2021B	22		23-31-22	001-099
	14		W3704	2021R	22		23-31-22	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D05950		977/265/L060		RCPT-				ALL
	1		W3704	0031G	16		33-24-13	ALL
	2		W3704	0032WV	22		33-25-12	ALL
	3		W3704	0033WG	22		33-25-12	ALL
	4		W3704	0034WO	22		33-25-12	ALL
	5		W3704	0035V	22		33-25-12	ALL
	6		W3704	0036WN	16		33-23-12	ALL
	7		W3704	0037W	20		33-24-13	ALL
	8		W3704	0038WP	16		33-23-12	ALL
	9	UNUSED						001-099
	9		W3704	6039AD	22		33-25-12	115-199
	10		W3704	0040K	18		35-21-12	ALL
	11		W3704	0039AJ	20		35-21-12	ALL
	12	UNUSED						ALL
	13		W3704	2031R	22		23-31-22	001-099
	13		W3704	2031B	22		23-31-22	115-199
	14		W3704	2031B	22		23-31-22	001-099
	14		W3704	2031R	22		23-31-22	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D05900

Page 13

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05952		1008/265/L060		RCPT-				ALL
	1		W3704	0041G	16		33-24-13	ALL
	2		W3704	0042WV	22		33-25-12	ALL
	3		W3704	0043WG	22		33-25-12	ALL
	4		W3704	0044WO	22		33-25-12	ALL
	5		W3704	0045V	22		33-25-12	ALL
	6		W3704	0046WN	16		33-23-12	ALL
	7		W3704	0047W	20		33-24-13	ALL
	8		W3704	0048WP	16		33-23-12	ALL
	9	UNUSED						001-099
	9		W3704	6049AD	22		33-25-12	115-199
	10		W3704	0050K	18		35-21-12	ALL
	11		W3704	0049AJ	20		35-21-12	ALL
	12	UNUSED						ALL
	13		W3704	2041R	22		23-31-22	001-099
	13		W3704	2041B	22		23-31-22	115-199
	14		W3704	2041B	22		23-31-22	001-099
	14		W3704	2041R	22		23-31-22	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D05954		1038/265/L060		RCPT-				ALL
	1		W3704	0051G	16		33-24-13	ALL
	2		W3704	0052WV	22		33-25-13	ALL
	3		W3704	0053WG	22		33-25-13	ALL
	4	UNUSED						ALL
	5		W3704	0055V	22		33-25-13	ALL
	6		W3704	0056WN	16		33-23-13	ALL
	7		W3704	0057W	20		33-24-13	ALL
	8		W3704	0058WP	16		33-23-13	ALL
	9	UNUSED						ALL
	10		W3704	0060K	18		35-21-13	ALL
	11		W3704	0059AJ	20		35-21-13	ALL
	12	UNUSED						ALL
	13		W3704	2051R	22		23-31-22	001-099
	13		W3704	2051B	22		23-31-22	115-199
	14		W3704	2051B	22		23-31-22	001-099
	14		W3704	2051R	22		23-31-22	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D05900

Page 14

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05956		1050/265/L060		RCPT-				ALL
	1		W3704	0061G	16		33-24-13	ALL
	2		W3704	0062WV	22		33-25-13	ALL
	3		W3704	0063WG	22		33-25-13	ALL
	4	UNUSED						ALL
	5		W3704	0065V	22		33-25-13	ALL
	6		W3704	0066WN	16		33-23-13	ALL
	7		W3704	0067W	20		33-24-13	ALL
	8		W3704	0068WP	16		33-23-13	ALL
	9	UNUSED						ALL
	10		W3704	0070K	18		35-21-13	ALL
	11		W3704	0069AJ	20		35-21-13	ALL
	12	UNUSED						ALL
	13		W3704	2061R	22		23-31-22	001-099
	13		W3704	2061B	22		23-31-22	115-199
	14		W3704	2061B	22		23-31-22	001-099
	14		W3704	2061R	22		23-31-22	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D05958		1075/265/L060		RCPT-				ALL
	1		W3704	0071G	16		33-24-13	ALL
	2		W3704	0072WV	22		33-25-13	ALL
	3		W3704	0073WG	22		33-25-13	ALL
	4	UNUSED						ALL
	5		W3704	0075V	22		33-25-13	ALL
	6		W3704	0076WN	16		33-23-13	ALL
	7		W3704	0077W	20		33-24-13	ALL
	8		W3704	0078WP	16		33-23-13	ALL
	9	UNUSED						ALL
	10		W3704	0080K	18		35-21-13	ALL
	11		W3704	0079AJ	20		35-21-13	ALL
	12	UNUSED						ALL
	13		W3704	2071R	22		23-31-22	001-099
	13		W3704	2071B	22		23-31-22	115-199
	14		W3704	2071B	22		23-31-22	001-099
	14		W3704	2071R	22		23-31-22	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D05900

Page 15

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05960		1104/265/L060		RCPT-				ALL
	1		W3704	0081G	16		33-24-13	ALL
	2		W3704	0082WV	22		33-25-13	ALL
	3		W3704	0083WG	22		33-25-13	ALL
	4	UNUSED						ALL
	5		W3704	0085V	22		33-25-13	ALL
	6		W3704	0086WN	16		33-23-13	ALL
	7		W3704	0087W	20		33-24-13	ALL
	8		W3704	0088WP	16		33-23-13	ALL
	9	UNUSED						ALL
	10		W3704	0090K	18		35-21-13	ALL
	11		W3704	0089AJ	20		35-21-13	ALL
	12	UNUSED						ALL
	13		W3704	2081R	22		23-31-22	001-099
	13		W3704	2081B	22		23-31-22	115-199
	14		W3704	2081B	22		23-31-22	001-099
	14		W3704	2081R	22		23-31-22	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D05962		1138/265/L060		RCPT-				ALL
	1		W3704	0091G	16		33-24-13	ALL
	2		W3704	0092WV	22		33-25-13	ALL
	3		W3704	0093WG	22		33-25-13	ALL
	4	UNUSED						ALL
	5		W3704	0095V	22		33-25-13	ALL
	6		W3704	0096WN	16		33-23-13	ALL
	7		W3704	0097W	20		33-24-13	ALL
	8		W3704	0098WP	16		33-23-13	ALL
	9	UNUSED						ALL
	10		W3704	0100K	18		35-21-13	ALL
	11		W3704	0099AJ	20		35-21-13	ALL
	12	UNUSED						ALL
	13		W3704	2091R	22		23-31-22	001-099
	13		W3704	2091B	22		23-31-22	115-199
	14		W3704	2091B	22		23-31-22	001-099
	14		W3704	2091R	22		23-31-22	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D05900

Page 16

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05964		1173/265/L060		RCPT-				ALL
	1		W3704	0101G	16		33-24-13	ALL
	2		W3704	0102WV	22		33-25-13	ALL
	3		W3704	0103WG	22		33-25-13	ALL
	4	UNUSED						ALL
	5		W3704	0105V	22		33-25-13	ALL
	6		W3704	0106WN	16		33-23-13	ALL
	7		W3704	0107W	20		33-24-13	ALL
	8		W3704	0108WP	16		33-23-13	ALL
	9	UNUSED						ALL
	10		W3704	0110K	18		35-21-13	ALL
	11		W3704	0109AJ	20		35-21-13	ALL
	12	UNUSED						ALL
	13		W3704	2101R	22		23-31-22	001-099
	13		W3704	2101B	22		23-31-22	115-199
	14		W3704	2101B	22		23-31-22	001-099
	14		W3704	2101R	22		23-31-22	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D05966		1206/265/L060		RCPT-				ALL
	1		W3704	0111G	16		33-24-13	ALL
	2		W3704	0112WV	22		33-25-13	ALL
	3		W3704	0113WG	22		33-25-13	ALL
	4	UNUSED						ALL
	5		W3704	0115V	22		33-25-13	ALL
	6		W3704	0116WN	16		33-23-13	ALL
	7		W3704	0117W	20		33-24-13	ALL
	8		W3704	0118WP	16		33-23-13	ALL
	9	UNUSED						ALL
	10		W3704	0120K	18		35-21-13	ALL
	11		W3704	0119AJ	20		35-21-13	ALL
	12	UNUSED						ALL
	13		W3704	2111R	22		23-31-22	001-099
	13		W3704	2111B	22		23-31-22	115-199
	14		W3704	2111B	22		23-31-22	001-099
	14		W3704	2111R	22		23-31-22	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D05900

Page 17

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05968		1231/265/L060		RCPT-				001-099
D05968		1240/270/L38		RCPT-				115-199
	1		W3706	0011G	16		33-24-14	ALL
	2		W3706	0012WV	22		33-25-14	ALL
	3		W3706	0013WG	22		33-25-14	ALL
	4	UNUSED						ALL
	5		W3706	0015V	22		33-25-14	ALL
	6		W3706	0016WN	16		33-23-13	ALL
	7		W3706	0017W	20		33-24-14	ALL
	8		W3706	0018WP	16		33-23-13	ALL
	9	UNUSED						ALL
	10		W3706	0020K	18		35-21-13	ALL
	11		W3706	0019AJ	20		35-21-13	ALL
	12	UNUSED						ALL
	13		W3706	2011R	22		23-31-22	001-099
	13		W3706	2011B	22		23-31-22	115-199
	14		W3706	2011B	22		23-31-22	001-099
	14		W3706	2011R	22		23-31-22	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D05970		1250/265/L060		RCPT-				001-099
D05970		1234/272/L55		RCPT-				115-199
	1		W3706	0021G	16		33-24-14	ALL
	2		W3706	0022WV	22		33-25-14	ALL
	3		W3706	0023WG	22		33-25-14	ALL
	4	UNUSED						ALL
	5		W3706	0025V	22		33-25-14	ALL
	6		W3706	0026WN	16		33-23-13	ALL
	7		W3706	0027W	20		33-24-14	ALL
	8		W3706	0028WP	16		33-23-13	ALL
	9	UNUSED						ALL
	10		W3706	0030K	18		35-21-13	ALL
	11		W3706	0029AJ	20		35-21-13	ALL
	12	UNUSED						ALL
	13		W3706	2021R	22		23-31-22	001-099
	13		W3706	2021B	22		23-31-22	115-199
	14		W3706	2021B	22		23-31-22	001-099
	14		W3706	2021R	22		23-31-22	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D05900

Page 18

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05972		1267/265/L060		RCPT-				001-099
D05972		1266/272/L55		RCPT-				115-199
	1		W3706	0031G	16		33-24-14	ALL
	2		W3706	0032WV	22		33-25-14	ALL
	3		W3706	0033WG	22		33-25-14	ALL
	4	UNUSED						ALL
	5		W3706	0035V	22		33-25-14	ALL
	6		W3706	0036WN	16		33-23-13	ALL
	7		W3706	0037W	20		33-24-14	ALL
	8		W3706	0038WP	16		33-23-13	ALL
	9	UNUSED						ALL
	10		W3706	0040K	18		35-21-13	ALL
	11		W3706	0039AJ	20		35-21-13	ALL
	12	UNUSED						ALL
	13		W3706	2031R	22		23-31-22	001-099
	13		W3706	2031B	22		23-31-22	115-199
	14		W3706	2031B	22		23-31-22	001-099
	14		W3706	2031R	22		23-31-22	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D05974		1295/265/L060		RCPT-				ALL
	1		W3706	0041G	16		33-24-14	ALL
	2		W3706	0042WV	22		33-25-14	ALL
	3		W3706	0043WG	22		33-25-14	ALL
	4	UNUSED						ALL
	5		W3706	0045V	22		33-25-14	ALL
	6		W3706	0046WN	16		33-23-13	ALL
	7		W3706	0047W	20		33-24-14	ALL
	8		W3706	0048WP	16		33-23-13	ALL
	9	UNUSED						ALL
	10		W3706	0050K	18		35-21-13	ALL
	11		W3706	0049AJ	20		35-21-13	ALL
	12	UNUSED						ALL
	13		W3706	2041R	22		23-31-22	001-099
	13		W3706	2041B	22		23-31-22	115-199
	14		W3706	2041B	22		23-31-22	001-099
	14		W3706	2041R	22		23-31-22	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D05900

Page 19

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05976		1331/265/L060		RCPT-				001-099
D05976		1330/272/L55		RCPT-				115-199
	1		W3706	0051G	16		33-24-14	ALL
	2		W3706	0052WV	22		33-25-14	ALL
	3		W3706	0053WG	22		33-25-14	ALL
	4	UNUSED						ALL
	5		W3706	0055V	22		33-25-14	ALL
	6		W3706	0056WN	16		33-23-14	ALL
	7		W3706	0057W	20		33-24-14	ALL
	8		W3706	0058WP	16		33-23-14	ALL
	9	UNUSED						ALL
	10		W3706	0060K	18		35-21-13	ALL
	11		W3706	0059AJ	20		35-21-13	ALL
	12	UNUSED						ALL
	13		W3706	2051R	22		23-31-22	001-099
	13		W3706	2051B	22		23-31-22	115-199
	14		W3706	2051B	22		23-31-22	001-099
	14		W3706	2051R	22		23-31-22	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D05978		1365/265/L060		RCPT-				001-099
D05978		1363/272/L55		RCPT-				115-199
	1		W3706	0061G	16		33-24-14	ALL
	2		W3706	0062WV	22		33-25-14	ALL
	3		W3706	0063WG	22		33-25-14	ALL
	4	UNUSED						ALL
	5		W3706	0065V	22		33-25-14	ALL
	6		W3706	0066WN	16		33-23-14	ALL
	7		W3706	0067W	20		33-24-14	ALL
	8		W3706	0068WP	16		33-23-14	ALL
	9	UNUSED						ALL
	10		W3706	0070K	18		35-21-13	ALL
	11		W3706	0069AJ	20		35-21-13	ALL
	12		W3706	0811	22		23-31-41	001-099
	12	UNUSED						115-199
	13		W3706	2061R	22		23-31-22	001-099
	13		W3706	2061B	22		23-31-22	115-199
	14		W3706	2061B	22		23-31-22	001-099
	14		W3706	2061R	22		23-31-22	115-199
	15		W3706	0811	22		23-31-41	115-199

HOOKUP LIST

D280N032

91-21-51

Section D05900

Page 20

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05978		1365/265/L060		RCPT- (continued)				001-099
D05978		1363/272/L55		RCPT- (continued)				115-199
	16	UNUSED						115-199
D05980		1393/265/L060		RCPT-				001-099
D05980		1393/272/L55		RCPT-				115-199
	1		W3706	0071G	16		33-24-14	ALL
	2		W3706	0072WV	22		33-25-14	ALL
	3		W3706	0073WG	22		33-25-14	ALL
	4	UNUSED						ALL
	5		W3706	0075V	22		33-25-14	ALL
	6		W3706	0076WN	16		33-23-14	ALL
	7		W3706	0077W	20		33-24-14	ALL
	8		W3706	0078WP	16		33-23-14	ALL
	9	UNUSED						ALL
	10		W3706	0080K	18		35-21-13	ALL
	11		W3706	0079AJ	20		35-21-13	ALL
	12	UNUSED						ALL
	13		W3706	2071R	22		23-31-22	001-099
	13		W3706	2071B	22		23-31-22	115-199
	14		W3706	2071B	22		23-31-22	001-099
	14		W3706	2071R	22		23-31-22	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D05982		1429/265/L060		RCPT-				001-099
D05982		1424/272/L55		RCPT-				115-199
	1		W3706	0081G	16		33-24-14	ALL
	2		W3706	0082WV	22		33-25-14	ALL
	3		W3706	0083WG	22		33-25-14	ALL
	4	UNUSED						ALL
	5		W3706	0085V	22		33-25-14	ALL
	6		W3706	0086WN	16		33-23-14	ALL
	7		W3706	0087W	20		33-24-14	ALL
	8		W3706	0088WP	16		33-23-14	ALL
	9	UNUSED						ALL
	10		W3706	0090K	18		35-21-13	ALL
	11		W3706	0089AJ	20		35-21-13	ALL
	12	UNUSED						ALL
	13		W3706	2081R	22		23-31-22	001-099
	13		W3706	2081B	22		23-31-22	115-199

HOOKUP LIST

D280N032

91-21-51

Section D05900

Page 21

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05982		1429/265/L060		RCPT- (continued)				001-099
D05982		1424/272/L55		RCPT- (continued)				115-199
	14		W3706	2081B	22		23-31-22	001-099
	14		W3706	2081R	22		23-31-22	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D05984		1457/265/L060		RCPT-				001-099
D05984		1455/272/L55		RCPT-				115-199
	1		W3706	0091G	16		33-24-14	ALL
	2		W3706	0092WV	22		33-25-14	ALL
	3		W3706	0093WG	22		33-25-14	ALL
	4	UNUSED						ALL
	5		W3706	0095V	22		33-25-14	ALL
	6		W3706	0096WN	16		33-23-14	ALL
	7		W3706	0097W	20		33-24-14	ALL
	8		W3706	0098WP	16		33-23-14	ALL
	9	UNUSED						ALL
	10		W3706	0100K	18		35-21-13	ALL
	11		W3706	0099AJ	20		35-21-13	ALL
	12	UNUSED						ALL
	13		W3706	2091R	22		23-31-22	001-099
	13		W3706	2091B	22		23-31-22	115-199
	14		W3706	2091B	22		23-31-22	001-099
	14		W3706	2091R	22		23-31-22	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D05986		1470/265/L060		RCPT-				001-099
D05986		1480/270/L38		RCPT-				115-199
	1		W3706	0101G	16		33-24-14	ALL
	2		W3706	0102WV	22		33-25-14	ALL
	3		W3706	0103WG	22		33-25-14	ALL
	4	UNUSED						ALL
	5		W3706	0105V	22		33-25-14	ALL
	6		W3706	0106WN	16		33-23-14	ALL
	7		W3706	0107W	20		33-24-14	ALL
	8		W3706	0108WP	16		33-23-14	ALL
	9	UNUSED						ALL
	10		W3706	0110K	18		35-21-13	ALL
	11		W3706	0109AJ	20		35-21-13	ALL

HOOKUP LIST

D280N032

91-21-51

Section D05900

Page 22

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05986		1470/265/L060		RCPT- (continued)				001-099
D05986		1480/270/L38		RCPT- (continued)				115-199
	12	UNUSED						ALL
	13		W3706	2101R	22		23-31-22	001-099
	13		W3706	2101B	22		23-31-22	115-199
	14		W3706	2101B	22		23-31-22	001-099
	14		W3706	2101R	22		23-31-22	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D05988		1492/265/L060		RCPT-				001-099
D05988		1486/272/L55		RCPT-				115-199
	1		W3706	0111G	16		33-24-14	ALL
	2		W3706	0112WV	22		33-25-14	ALL
	3		W3706	0113WG	22		33-25-14	ALL
	4	UNUSED						ALL
	5		W3706	0115V	22		33-25-14	ALL
	6		W3706	0116WN	16		33-23-14	ALL
	7		W3706	0117W	20		33-24-14	ALL
	8		W3706	0118WP	16		33-23-14	ALL
	9	UNUSED						ALL
	10		W3706	0120K	18		35-21-13	ALL
	11		W3706	0119AJ	20		35-21-13	ALL
	12	UNUSED						ALL
	13		W3706	2111R	22		23-31-22	001-099
	13		W3706	2111B	22		23-31-22	115-199
	14		W3706	2111B	22		23-31-22	001-099
	14		W3706	2111R	22		23-31-22	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D05990		1520/265/L060		RCPT-				001-099
D05990		1517/272/L55		RCPT-				115-199
	1		W3706	0121G	16		33-24-14	ALL
	2		W3706	0122WV	22		33-25-14	ALL
	3		W3706	0123WG	22		33-25-14	ALL
	4	UNUSED						ALL
	5		W3706	0125V	22		33-25-14	ALL
	6		W3706	0126WN	16		33-23-14	ALL
	7		W3706	0127W	20		33-24-14	ALL
	8		W3706	0128WP	16		33-23-14	ALL

HOOKUP LIST

D280N032

91-21-51

Section D05900

Page 23

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05990		1520/265/L060		RCPT- (continued)				001-099
D05990		1517/272/L55		RCPT- (continued)				115-199
	9	UNUSED						ALL
	10		W3706	0130K	18		35-21-13	ALL
	11		W3706	0129AJ	20		35-21-13	ALL
	12	UNUSED						ALL
	13		W3706	2121R	22		23-31-22	001-099
	13		W3706	2121B	22		23-31-22	115-199
	14		W3706	2121B	22		23-31-22	001-099
	14		W3706	2121R	22		23-31-22	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D05992		1548/265/L060		RCPT-				001-099
D05992		1550/272/L55		RCPT-				115-199
	1		W3706	0131G	16		33-24-14	ALL
	2		W3706	0132WV	22		33-25-14	ALL
	3		W3706	0133WG	22		33-25-14	ALL
	4	UNUSED						ALL
	5		W3706	0135V	22		33-25-14	ALL
	6		W3706	0136WN	16		33-23-14	ALL
	7		W3706	0137W	20		33-24-14	ALL
	8		W3706	0138WP	16		33-23-14	ALL
	9	UNUSED						ALL
	10		W3706	0140K	18		35-21-13	ALL
	11		W3706	0139AJ	20		35-21-13	ALL
	12	UNUSED						ALL
	13		W3706	2131R	22		23-31-22	001-099
	13		W3706	2131B	22		23-31-22	115-199
	14		W3706	2131B	22		23-31-22	001-099
	14		W3706	2131R	22		23-31-22	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D05994		1583/265/L060		RCPT-				001-099
D05994		1585/272/L55		RCPT-				115-199
	1		W3706	0141G	16		33-24-14	ALL
	2		W3706	0142WV	22		33-25-14	ALL
	3		W3706	0143WG	22		33-25-14	ALL
	4	UNUSED						ALL
	5		W3706	0145V	22		33-25-14	ALL

HOOKUP LIST

D280N032

91-21-51

Section D05900

Page 24

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05994		1583/265/L060		RCPT- (continued)				001-099
D05994		1585/272/L55		RCPT- (continued)				115-199
	6		W3706	0146WN	16		33-23-14	ALL
	7		W3706	0147W	20		33-24-14	ALL
	8		W3706	0148WP	16		33-23-14	ALL
	9	UNUSED						ALL
	10		W3706	0150K	18		35-21-13	ALL
	11		W3706	0149AJ	20		35-21-13	ALL
	12	UNUSED						ALL
	13		W3706	2141R	22		23-31-22	001-099
	13		W3706	2141B	22		23-31-22	115-199
	14		W3706	2141B	22		23-31-22	001-099
	14		W3706	2141R	22		23-31-22	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D05996		1604/265/L060		RCPT-				001-099
D05996		1600/272/L55		RCPT-				115-199
	1		W3706	0151G	16		33-24-14	ALL
	2		W3706	0152WV	22		33-25-14	ALL
	3		W3706	0153WG	22		33-25-14	ALL
	4	UNUSED						ALL
	5		W3706	0155V	22		33-25-14	ALL
	6		W3706	0156WN	16		33-23-14	ALL
	7		W3706	0157W	20		33-24-14	ALL
	8		W3706	0158WP	16		33-23-14	ALL
	9	UNUSED						ALL
	10		W3706	0160K	18		35-21-13	ALL
	11		W3706	0159AJ	20		35-21-13	ALL
	12	UNUSED						ALL
	13		W3706	2151R	22		23-31-22	001-099
	13		W3706	2151B	22		23-31-22	115-199
	14		W3706	2151B	22		23-31-22	001-099
	14		W3706	2151R	22		23-31-22	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D05998		1623/265/L060		RCPT-				001-099
D05998		1620/272/L55		RCPT-				115-199
	1		W3706	0161G	16		33-24-14	ALL
	2		W3706	0162WV	22		33-25-14	ALL

HOOKUP LIST

D280N032

91-21-51

Section D05900

Page 25

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D05998		1623/265/L060		RCPT- (continued)				001-099
D05998		1620/272/L55		RCPT- (continued)				115-199
	3		W3706	0163WG	22		33-25-14	ALL
	4	UNUSED						ALL
	5		W3706	0165V	22		33-25-14	ALL
	6		W3706	0166WN	16		33-23-14	ALL
	7		W3706	0167W	20		33-24-14	ALL
	8		W3706	0168WP	16		33-23-14	ALL
	9	UNUSED						ALL
	10		W3706	0170K	18		35-21-13	ALL
	11		W3706	0169AJ	20		35-21-13	ALL
	12	UNUSED						ALL
	13		W3706	2161R	22		23-31-22	001-099
	13		W3706	2161B	22		23-31-22	115-199
	14		W3706	2161B	22		23-31-22	001-099
	14		W3706	2161R	22		23-31-22	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D05900

Page 26 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06000		383/265/R060		RCPT-				ALL
	1		W3802	0011G	16		33-24-21	ALL
	2		W3802	0012WV	22		33-25-21	ALL
	3		W3802	0013WG	22		33-25-21	ALL
	4		W3802	0014WO	22		33-25-21	ALL
	5		W3802	0015V	22		33-25-21	ALL
	6		W3802	0016WN	16		33-23-21	ALL
	7		W3802	0017W	20		33-24-21	ALL
	8		W3802	0018WP	16		33-23-21	ALL
	9	UNUSED						001-099
	9		W3802	6019AD	22		33-25-21	115-199
	10		W3802	0020K	18		35-21-21	ALL
	11		W3802	0019AJ	20		35-21-21	ALL
	12	UNUSED						ALL
	13		W3802	2011R	22		23-31-31	001-099
	13		W3802	2011B	22		23-31-31	115-199
	14		W3802	2011B	22		23-31-31	001-099
	14		W3802	2011R	22		23-31-31	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D06002		412/265/R060		RCPT-				ALL
	1		W3802	0021G	16		33-24-21	ALL
	2		W3802	0022WV	22		33-25-21	ALL
	3		W3802	0023WG	22		33-25-21	ALL
	4		W3802	0024WO	22		33-25-21	ALL
	5		W3802	0025V	22		33-25-21	ALL
	6		W3802	0026WN	16		33-23-21	ALL
	7		W3802	0027W	20		33-24-21	ALL
	8		W3802	0028WP	16		33-23-21	ALL
	9	UNUSED						001-099
	9		W3802	6029AD	22		33-25-21	115-199
	10		W3802	0030K	18		35-21-21	ALL
	11		W3802	0029AJ	20		35-21-21	ALL
	12	UNUSED						ALL
	13		W3802	2021R	22		23-31-31	001-099
	13		W3802	2021B	22		23-31-31	115-199
	14		W3802	2021B	22		23-31-31	001-099
	14		W3802	2021R	22		23-31-31	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D06000

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06004		429/265/R060		RCPT-				ALL
	1		W3802	0031G	16		33-24-21	ALL
	2		W3802	0032WV	22		33-25-21	ALL
	3		W3802	0033WG	22		33-25-21	ALL
	4		W3802	0034WO	22		33-25-21	ALL
	5		W3802	0035V	22		33-25-21	ALL
	6		W3802	0036WN	16		33-23-21	ALL
	7		W3802	0037W	20		33-24-21	ALL
	8		W3802	0038WP	16		33-23-21	ALL
	9	UNUSED						001-099
	9		W3802	6039AD	22		33-25-21	115-199
	10		W3802	0040K	18		35-21-21	ALL
	11		W3802	0039AJ	20		35-21-21	ALL
	12	UNUSED						ALL
	13		W3802	2031R	22		23-31-31	001-099
	13		W3802	2031B	22		23-31-31	115-199
	14		W3802	2031B	22		23-31-31	001-099
	14		W3802	2031R	22		23-31-31	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D06006		448/265/R060		RCPT-				ALL
	1		W3802	0041G	16		33-24-21	ALL
	2		W3802	0042WV	22		33-25-21	ALL
	3		W3802	0043WG	22		33-25-21	ALL
	4		W3802	0044WO	22		33-25-21	ALL
	5		W3802	0045V	22		33-25-21	ALL
	6		W3802	0046WN	16		33-23-21	ALL
	7		W3802	0047W	20		33-24-21	ALL
	8		W3802	0048WP	16		33-23-21	ALL
	9	UNUSED						001-099
	9		W3802	6049AD	22		33-25-21	115-199
	10		W3802	0050K	18		35-21-21	ALL
	11		W3802	0049AJ	20		35-21-21	ALL
	12	UNUSED						ALL
	13		W3802	2041R	22		23-31-31	001-099
	13		W3802	2041B	22		23-31-31	115-199
	14		W3802	2041B	22		23-31-31	001-099
	14		W3802	2041R	22		23-31-31	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D06000

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06008		470/265/R060		RCPT-				ALL
	1		W3802	0051G	16		33-24-21	ALL
	2		W3802	0052WV	22		33-25-21	ALL
	3		W3802	0053WG	22		33-25-21	ALL
	4		W3802	0054WO	22		33-25-21	ALL
	5		W3802	0055V	22		33-25-21	ALL
	6		W3802	0056WN	16		33-23-21	ALL
	7		W3802	0057W	20		33-24-21	ALL
	8		W3802	0058WP	16		33-23-21	ALL
	9	UNUSED						001-099
	9		W3802	6059AD	22		33-25-21	115-199
	10		W3802	0060K	18		35-21-21	ALL
	11		W3802	0059AJ	20		35-21-21	ALL
	12	UNUSED						ALL
	13		W3802	2051R	22		23-31-31	001-099
	13		W3802	2051B	22		23-31-31	115-199
	14		W3802	2051B	22		23-31-31	001-099
	14		W3802	2051R	22		23-31-31	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D06010		483/265/R060		RCPT-				ALL
	1		W3802	0061G	16		33-24-21	ALL
	2		W3802	0062WV	22		33-25-21	ALL
	3		W3802	0063WG	22		33-25-21	ALL
	4		W3802	0064WO	22		33-25-21	ALL
	5		W3802	0065V	22		33-25-21	ALL
	6		W3802	0066WN	16		33-23-21	ALL
	7		W3802	0067W	20		33-24-21	ALL
	8		W3802	0068WP	16		33-23-21	ALL
	9	UNUSED						001-099
	9		W3802	6069AD	22		33-25-21	115-199
	10		W3802	0070K	18		35-21-21	ALL
	11		W3802	0069AJ	20		35-21-21	ALL
	12	UNUSED						ALL
	13		W3802	2061R	22		23-31-31	001-099
	13		W3802	2061B	22		23-31-31	115-199
	14		W3802	2061B	22		23-31-31	001-099
	14		W3802	2061R	22		23-31-31	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D06000

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06012		510/265/R060		RCPT-				ALL
	1		W3802	0071G	16		33-24-21	ALL
	2		W3802	0072WV	22		33-25-21	ALL
	3		W3802	0073WG	22		33-25-21	ALL
	4		W3802	0074WO	22		33-25-21	ALL
	5		W3802	0075V	22		33-25-21	ALL
	6		W3802	0076WN	16		33-23-21	ALL
	7		W3802	0077W	20		33-24-21	ALL
	8		W3802	0078WP	16		33-23-21	ALL
	9	UNUSED						001-099
	9		W3802	6079AD	22		33-25-21	115-199
	10		W3802	0080K	18		35-21-21	ALL
	11		W3802	0079AJ	20		35-21-21	ALL
	12	UNUSED						ALL
	13		W3802	2071R	22		23-31-31	001-099
	13		W3802	2071B	22		23-31-31	115-199
	14		W3802	2071B	22		23-31-31	001-099
	14		W3802	2071R	22		23-31-31	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D06014		525/265/R060		RCPT-				ALL
	1		W3802	0081G	16		33-24-21	ALL
	2		W3802	0082WV	22		33-25-21	ALL
	3		W3802	0083WG	22		33-25-21	ALL
	4		W3802	0084WO	22		33-25-21	ALL
	5		W3802	0085V	22		33-25-21	ALL
	6		W3802	0086WN	16		33-23-21	ALL
	7		W3802	0087W	20		33-24-21	ALL
	8		W3802	0088WP	16		33-23-21	ALL
	9	UNUSED						001-099
	9		W3802	6089AD	22		33-25-21	115-199
	10		W3802	0090K	18		35-21-21	ALL
	11		W3802	0089AJ	20		35-21-21	ALL
	12	UNUSED						ALL
	13		W3802	2081R	22		23-31-31	001-099
	13		W3802	2081B	22		23-31-31	115-199
	14		W3802	2081B	22		23-31-31	001-099
	14		W3802	2081R	22		23-31-31	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D06000

Page 4

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06016		553/265/R060		RCPT-				ALL
	1		W3802	0091G	16		33-24-21	ALL
	2		W3802	0092WV	22		33-25-21	ALL
	3		W3802	0093WG	22		33-25-21	ALL
	4		W3802	0094WO	22		33-25-21	ALL
	5		W3802	0095V	22		33-25-21	ALL
	6		W3802	0096WN	16		33-23-21	ALL
	7		W3802	0097W	20		33-24-21	ALL
	8		W3802	0098WP	16		33-23-21	ALL
	9	UNUSED						001-099
	9		W3802	6099AD	22		33-25-21	115-199
	10		W3802	0100K	18		35-21-21	ALL
	11		W3802	0099AJ	20		35-21-21	ALL
	12	UNUSED						ALL
	13		W3802	2091R	22		23-31-31	001-099
	13		W3802	2091B	22		23-31-31	115-199
	14		W3802	2091B	22		23-31-31	001-099
	14		W3802	2091R	22		23-31-31	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D06018		576/265/R060		RCPT-				ALL
	1		W3802	0101G	16		33-24-21	ALL
	2		W3802	0102WV	22		33-25-21	ALL
	3		W3802	0103WG	22		33-25-21	ALL
	4		W3802	0104WO	22		33-25-21	ALL
	5		W3802	0105V	22		33-25-21	ALL
	6		W3802	0106WN	16		33-23-21	ALL
	7		W3802	0107W	20		33-24-21	ALL
	8		W3802	0108WP	16		33-23-21	ALL
	9	UNUSED						001-099
	9		W3802	6109AD	22		33-25-21	115-199
	10		W3802	0110K	18		35-21-21	ALL
	11		W3802	0109AJ	20		35-21-21	ALL
	12	UNUSED						ALL
	13		W3802	2101R	22		23-31-31	001-099
	13		W3802	2101B	22		23-31-31	115-199
	14		W3802	2101B	22		23-31-31	001-099
	14		W3802	2101R	22		23-31-31	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D06000

Page 5

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06020		590/265/R060		RCPT-				ALL
	1		W3802	0111G	16		33-24-21	ALL
	2		W3802	0112WV	22		33-25-21	ALL
	3		W3802	0113WG	22		33-25-21	ALL
	4		W3802	0114WO	22		33-25-21	ALL
	5		W3802	0115V	22		33-25-21	ALL
	6		W3802	0116WN	16		33-23-21	ALL
	7		W3802	0117W	20		33-24-21	ALL
	8		W3802	0118WP	16		33-23-21	ALL
	9	UNUSED						001-099
	9		W3802	6119AD	22		33-25-21	115-199
	10		W3802	0120K	18		35-21-21	ALL
	11		W3802	0119AJ	20		35-21-21	ALL
	12	UNUSED						ALL
	13		W3802	2111R	22		23-31-31	001-099
	13		W3802	2111B	22		23-31-31	115-199
	14		W3802	2111B	22		23-31-31	001-099
	14		W3802	2111R	22		23-31-31	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D06022		609/265/R060		RCPT-				ALL
	1		W3802	0121G	16		33-24-21	ALL
	2		W3802	0122WV	22		33-25-21	ALL
	3		W3802	0123WG	22		33-25-21	ALL
	4		W3802	0124WO	22		33-25-21	ALL
	5		W3802	0125V	22		33-25-21	ALL
	6		W3802	0126WN	16		33-23-21	ALL
	7		W3802	0127W	20		33-24-21	ALL
	8		W3802	0128WP	16		33-23-21	ALL
	9	UNUSED						001-099
	9		W3802	6129AD	22		33-25-21	115-199
	10		W3802	0130K	18		35-21-21	ALL
	11		W3802	0129AJ	20		35-21-21	ALL
	12	UNUSED						ALL
	13		W3802	2121R	22		23-31-31	001-099
	13		W3802	2121B	22		23-31-31	115-199
	14		W3802	2121B	22		23-31-31	001-099
	14		W3802	2121R	22		23-31-31	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D06000

Page 6

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06024		630/265/R060		RCPT-				ALL
	1		W3802	0131G	16		33-24-21	ALL
	2		W3802	0132WV	22		33-25-21	ALL
	3		W3802	0133WG	22		33-25-21	ALL
	4		W3802	0134WO	22		33-25-21	ALL
	5		W3802	0135V	22		33-25-21	ALL
	6		W3802	0136WN	16		33-23-21	ALL
	7		W3802	0137W	20		33-24-21	ALL
	8		W3802	0138WP	16		33-23-21	ALL
	9	UNUSED						001-099
	9		W3802	6139AD	22		33-25-21	115-199
	10		W3802	0140K	18		35-21-21	ALL
	11		W3802	0139AJ	20		35-21-21	ALL
	12	UNUSED						ALL
	13		W3802	2131R	22		23-31-31	001-099
	13		W3802	2131B	22		23-31-31	115-199
	14		W3802	2131B	22		23-31-31	001-099
	14		W3802	2131R	22		23-31-31	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D06026		650/265/R060		RCPT-				ALL
	1		W3802	0141G	16		33-24-21	ALL
	2		W3802	0142WV	22		33-25-21	ALL
	3		W3802	0143WG	22		33-25-21	ALL
	4		W3802	0144WO	22		33-25-21	ALL
	5		W3802	0145V	22		33-25-21	ALL
	6		W3802	0146WN	16		33-23-21	ALL
	7		W3802	0147W	20		33-24-21	ALL
	8		W3802	0148WP	16		33-23-21	ALL
	9	UNUSED						001-099
	9		W3802	6149AD	22		33-25-21	115-199
	10		W3802	0150K	18		35-21-21	ALL
	11		W3802	0149AJ	20		35-21-21	ALL
	12	UNUSED						ALL
	13		W3802	2141R	22		23-31-31	001-099
	13		W3802	2141B	22		23-31-31	115-199
	14		W3802	2141B	22		23-31-31	001-099
	14		W3802	2141R	22		23-31-31	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D06000

Page 7

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06028		656/278/R058		RCPT-				ALL
	1		W3802	0151G	16		33-24-21	ALL
	2		W3802	0152WV	22		33-25-21	ALL
	3		W3802	0153WG	22		33-25-21	ALL
	4		W3802	0154WO	22		33-25-21	ALL
	5		W3802	0155V	22		33-25-21	ALL
	6		W3802	0156WN	16		33-23-21	ALL
	7		W3802	0157W	20		33-24-21	ALL
	8		W3802	0158WP	16		33-23-21	ALL
	9	UNUSED						001-099
	9		W3802	6159AD	22		33-25-21	115-199
	10		W3802	0160K	18		35-21-21	ALL
	11		W3802	0159AJ	20		35-21-21	ALL
	12	UNUSED						ALL
	13		W3802	2151R	22		23-31-31	001-099
	13		W3802	2151B	22		23-31-31	115-199
	14		W3802	2151B	22		23-31-31	001-099
	14		W3802	2151R	22		23-31-31	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D06030		670/298/R035		RCPT-				001-099
D06030		666/290/R44		RCPT-				115-199
	1		W3802	0161G	16		33-24-21	ALL
	2		W3802	0162WV	22		33-25-21	ALL
	3		W3802	0163WG	22		33-25-21	ALL
	4		W3802	0164WO	22		33-25-21	ALL
	5		W3802	0165V	22		33-25-21	ALL
	6		W3802	0166WN	16		33-23-21	ALL
	7		W3802	0167W	20		33-24-21	ALL
	8		W3802	0168WP	16		33-23-21	ALL
	9	UNUSED						001-099
	9		W3802	6169AD	22		33-25-21	115-199
	10		W3802	0170K	18		35-21-21	ALL
	11		W3802	0169AJ	20		35-21-21	ALL
	12	UNUSED						ALL
	13		W3802	2161R	22		23-31-31	001-099
	13		W3802	2161B	22		23-31-31	115-199
	14		W3802	2161B	22		23-31-31	001-099
	14		W3802	2161R	22		23-31-31	115-199
	15	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D06000

Page 8

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06030		670/298/R035		RCPT- (continued)				001-099
D06030		666/290/R44		RCPT- (continued)				115-199
	16	UNUSED						115-199
D06032		713/296/R036		RCPT-				ALL
	1		W3802	0171G	16		33-24-21	ALL
	2		W3802	0172WV	22		33-25-21	ALL
	3		W3802	0173WG	22		33-25-21	ALL
	4		W3802	0174WO	22		33-25-21	ALL
	5		W3802	0175V	22		33-25-21	ALL
	6		W3802	0176WN	16		33-23-22	ALL
	7		W3802	0177W	20		33-24-21	ALL
	8		W3802	0178WP	16		33-23-22	ALL
	9	UNUSED						001-099
	9		W3802	6179AD	22		33-25-21	115-199
	10		W3802	0180K	18		35-21-21	ALL
	11		W3802	0179AJ	20		35-21-21	ALL
	12	UNUSED						ALL
	13		W3802	2171R	22		23-31-31	001-099
	13		W3802	2171B	22		23-31-31	115-199
	14		W3802	2171B	22		23-31-31	001-099
	14		W3802	2171R	22		23-31-31	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D06034		713/296/R036		RCPT-				ALL
	1		W3802	0181G	16		33-24-21	ALL
	2		W3802	0182WV	22		33-25-21	ALL
	3		W3802	0183WG	22		33-25-21	ALL
	4		W3802	0184WO	22		33-25-21	ALL
	5		W3802	0185V	22		33-25-21	ALL
	6		W3802	0186WN	16		33-23-22	ALL
	7		W3802	0187W	20		33-24-21	ALL
	8		W3802	0188WP	16		33-23-22	ALL
	9	UNUSED						001-099
	9		W3802	6189AD	22		33-25-21	115-199
	10		W3802	0190K	18		35-21-21	ALL
	11		W3802	0189AJ	20		35-21-21	ALL
	12	UNUSED						ALL
	13		W3802	2181R	22		23-31-31	001-099
	13		W3802	2181B	22		23-31-31	115-199

HOOKUP LIST

D280N032

91-21-51

Section D06000

Page 9

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06034		713/296/R036		RCPT- (continued)				ALL
	14		W3802	2181B	22		23-31-31	001-099
	14		W3802	2181R	22		23-31-31	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D06036		742/278/R058		RCPT-				001-099
D06036		742/265/R060		RCPT-				115-199
	1		W3802	0191G	16		33-24-21	ALL
	2		W3802	0192WV	22		33-25-22	ALL
	3		W3802	0193WG	22		33-25-22	ALL
	4		W3802	0194WO	22		33-25-22	ALL
	5		W3802	0195V	22		33-25-22	ALL
	6		W3802	0196WN	16		33-23-22	ALL
	7		W3802	0197W	20		33-24-21	ALL
	8		W3802	0198WP	16		33-23-22	ALL
	9	UNUSED						001-099
	9		W3802	6199AD	22		33-25-22	115-199
	10		W3802	0200K	18		35-21-21	ALL
	11		W3802	0199AJ	20		35-21-21	ALL
	12	UNUSED						ALL
	13		W3802	2191R	22		23-31-31	001-099
	13		W3802	2191B	22		23-31-31	115-199
	14		W3802	2191B	22		23-31-31	001-099
	14		W3802	2191R	22		23-31-31	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D06038		757/265/R060		RCPT-				ALL
	1		W3802	0201G	16		33-24-21	ALL
	2		W3802	0202WV	22		33-25-22	ALL
	3		W3802	0203WG	22		33-25-22	ALL
	4		W3802	0204WO	22		33-25-22	ALL
	5		W3802	0205V	22		33-25-22	ALL
	6		W3802	0206WN	16		33-23-22	ALL
	7		W3802	0207W	20		33-24-21	ALL
	8		W3802	0208WP	16		33-23-22	ALL
	9	UNUSED						001-099
	9		W3802	6209AD	22		33-25-22	115-199
	10		W3802	0210K	18		35-21-21	ALL
	11		W3802	0209AJ	20		35-21-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D06000

Page 10

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06038		757/265/R060		RCPT- (continued)				ALL
	12	UNUSED						ALL
	13		W3802	2201R	22		23-31-32	001-099
	13		W3802	2201B	22		23-31-32	115-199
	14		W3802	2201B	22		23-31-32	001-099
	14		W3802	2201R	22		23-31-32	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D06040		785/265/R060		RCPT-				ALL
	1		W3802	0211G	16		33-24-21	ALL
	2		W3802	0212WV	22		33-25-22	ALL
	3		W3802	0213WG	22		33-25-22	ALL
	4		W3802	0214WO	22		33-25-22	ALL
	5		W3802	0215V	22		33-25-22	ALL
	6		W3802	0216WN	16		33-23-22	ALL
	7		W3802	0217W	20		33-24-21	ALL
	8		W3802	0218WP	16		33-23-22	ALL
	9	UNUSED						001-099
	9		W3802	6219AD	22		33-25-22	115-199
	10		W3802	0220K	18		35-21-21	ALL
	11		W3802	0219AJ	20		35-21-21	ALL
	12	UNUSED						ALL
	13		W3802	2211R	22		23-31-32	001-099
	13		W3802	2211B	22		23-31-32	115-199
	14		W3802	2211B	22		23-31-32	001-099
	14		W3802	2211R	22		23-31-32	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D06042		813/265/R060		RCPT-				ALL
	1		W3802	0221G	16		33-24-21	ALL
	2		W3802	0222WV	22		33-25-22	ALL
	3		W3802	0223WG	22		33-25-22	ALL
	4		W3802	0224WO	22		33-25-22	ALL
	5		W3802	0225V	22		33-25-22	ALL
	6		W3802	0226WN	16		33-23-22	ALL
	7		W3802	0227W	20		33-24-21	ALL
	8		W3802	0228WP	16		33-23-22	ALL
	9	UNUSED						001-099
	9		W3802	6229AD	22		33-25-22	115-199

HOOKUP LIST

D280N032

91-21-51

Section D06000

Page 11

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06042		813/265/R060		RCPT- (continued)				ALL
	10		W3802	0230K	18		35-21-21	ALL
	11		W3802	0229AJ	20		35-21-21	ALL
	12	UNUSED						ALL
	13		W3802	2221R	22		23-31-32	001-099
	13		W3802	2221B	22		23-31-32	115-199
	14		W3802	2221B	22		23-31-32	001-099
	14		W3802	2221R	22		23-31-32	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D06044		849/265/R060		RCPT-				ALL
	1		W3802	0231G	16		33-24-21	ALL
	2		W3802	0232WV	22		33-25-22	ALL
	3		W3802	0233WG	22		33-25-22	ALL
	4		W3802	0234WO	22		33-25-22	ALL
	5		W3802	0235V	22		33-25-22	ALL
	6		W3802	0236WN	16		33-23-22	ALL
	7		W3802	0237W	20		33-24-21	ALL
	8		W3802	0238WP	16		33-23-22	ALL
	9	UNUSED						001-099
	9		W3802	6239AD	22		33-25-22	115-199
	10		W3802	0240K	18		35-21-21	ALL
	11		W3802	0239AJ	20		35-21-21	ALL
	12	UNUSED						ALL
	13		W3802	2231R	22		23-31-32	001-099
	13		W3802	2231B	22		23-31-32	115-199
	14		W3802	2231B	22		23-31-32	001-099
	14		W3802	2231R	22		23-31-32	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D06046		930/265/R060		RCPT-				ALL
	1		W3804	0011G	16		33-24-22	ALL
	2		W3804	0012WV	22		33-25-22	ALL
	3		W3804	0013WG	22		33-25-22	ALL
	4		W3804	0014WO	22		33-25-22	ALL
	5		W3804	0015V	22		33-25-22	ALL
	6		W3804	0016WN	16		33-23-22	ALL
	7		W3804	0017W	20		33-24-22	ALL
	8		W3804	0018WP	16		33-23-22	ALL

HOOKUP LIST

D280N032

91-21-51

Section D06000

Page 12

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06046		930/265/R060		RCPT- (continued)				ALL
	9	UNUSED						001-099
	9		W3804	6019AD	22		33-25-22	115-199
	10		W3804	0020K	18		35-21-21	ALL
	11		W3804	0019AJ	20		35-21-21	ALL
	12	UNUSED						ALL
	13		W3804	2011R	22		23-31-32	001-099
	13		W3804	2011B	22		23-31-32	115-199
	14		W3804	2011B	22		23-31-32	001-099
	14		W3804	2011R	22		23-31-32	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D06048		941/265/R060		RCPT-				ALL
	1		W3804	0021G	16		33-24-22	ALL
	2		W3804	0022WV	22		33-25-22	ALL
	3		W3804	0023WG	22		33-25-22	ALL
	4		W3804	0024WO	22		33-25-22	ALL
	5		W3804	0025V	22		33-25-22	ALL
	6		W3804	0026WN	16		33-23-22	ALL
	7		W3804	0027W	20		33-24-22	ALL
	8		W3804	0028WP	16		33-23-22	ALL
	9	UNUSED						001-099
	9		W3804	6029AD	22		33-25-22	115-199
	10		W3804	0030K	18		35-21-21	ALL
	11		W3804	0029AJ	20		35-21-21	ALL
	12	UNUSED						ALL
	13		W3804	2021R	22		23-31-32	001-099
	13		W3804	2021B	22		23-31-32	115-199
	14		W3804	2021B	22		23-31-32	001-099
	14		W3804	2021R	22		23-31-32	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D06050		977/265/R060		RCPT-				ALL
	1		W3804	0031G	16		33-24-22	ALL
	2		W3804	0032WV	22		33-25-22	ALL
	3		W3804	0033WG	22		33-25-22	ALL
	4		W3804	0034WO	22		33-25-22	ALL
	5		W3804	0035V	22		33-25-22	ALL
	6		W3804	0036WN	16		33-23-22	ALL

HOOKUP LIST

D280N032

91-21-51

Section D06000

Page 13

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06050		977/265/R060		RCPT- (continued)				ALL
	7		W3804	0037W	20		33-24-22	ALL
	8		W3804	0038WP	16		33-23-22	ALL
	9	UNUSED						001-099
	9		W3804	6039AD	22		33-25-22	115-199
	10		W3804	0040K	18		35-21-21	ALL
	11		W3804	0039AJ	20		35-21-21	ALL
	12	UNUSED						ALL
	13		W3804	2031R	22		23-31-32	001-099
	13		W3804	2031B	22		23-31-32	115-199
	14		W3804	2031B	22		23-31-32	001-099
	14		W3804	2031R	22		23-31-32	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D06052		1008/265/R060		RCPT-				ALL
	1		W3804	0041G	16		33-24-22	ALL
	2		W3804	0042WV	22		33-25-22	ALL
	3		W3804	0043WG	22		33-25-22	ALL
	4		W3804	0044WO	22		33-25-22	ALL
	5		W3804	0045V	22		33-25-22	ALL
	6		W3804	0046WN	16		33-23-22	ALL
	7		W3804	0047W	20		33-24-22	ALL
	8		W3804	0048WP	16		33-23-22	ALL
	9	UNUSED						001-099
	9		W3804	6049AD	22		33-25-22	115-199
	10		W3804	0050K	18		35-21-21	ALL
	11		W3804	0049AJ	20		35-21-21	ALL
	12	UNUSED						ALL
	13		W3804	2041R	22		23-31-32	001-099
	13		W3804	2041B	22		23-31-32	115-199
	14		W3804	2041B	22		23-31-32	001-099
	14		W3804	2041R	22		23-31-32	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D06054		1040/265/R060		RCPT-				ALL
	1		W3804	0051G	16		33-24-22	ALL
	2		W3804	0052WV	22		33-25-23	ALL
	3		W3804	0053WG	22		33-25-23	ALL
	4	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D06000

Page 14

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06054		1040/265/R060		RCPT- (continued)				ALL
	5		W3804	0055V	22		33-25-23	ALL
	6		W3804	0056WN	16		33-23-23	ALL
	7		W3804	0057W	20		33-24-22	ALL
	8		W3804	0058WP	16		33-23-23	ALL
	9	UNUSED						ALL
	10		W3804	0060K	18		35-21-22	ALL
	11		W3804	0059AJ	20		35-21-22	ALL
	12	UNUSED						ALL
	13		W3804	2051R	22		23-31-32	001-099
	13		W3804	2051B	22		23-31-32	115-199
	14		W3804	2051B	22		23-31-32	001-099
	14		W3804	2051R	22		23-31-32	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D06056		1050/265/R060		RCPT-				ALL
	1		W3804	0061G	16		33-24-22	ALL
	2		W3804	0062WV	22		33-25-23	ALL
	3		W3804	0063WG	22		33-25-23	ALL
	4	UNUSED						ALL
	5		W3804	0065V	22		33-25-23	ALL
	6		W3804	0066WN	16		33-23-23	ALL
	7		W3804	0067W	20		33-24-22	ALL
	8		W3804	0068WP	16		33-23-23	ALL
	9	UNUSED						ALL
	10		W3804	0070K	18		35-21-22	ALL
	11		W3804	0069AJ	20		35-21-22	ALL
	12	UNUSED						ALL
	13		W3804	2061R	22		23-31-32	001-099
	13		W3804	2061B	22		23-31-32	115-199
	14		W3804	2061B	22		23-31-32	001-099
	14		W3804	2061R	22		23-31-32	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D06058		1074/265/R060		RCPT-				ALL
	1		W3804	0071G	16		33-24-22	ALL
	2		W3804	0072WV	22		33-25-23	ALL
	3		W3804	0073WG	22		33-25-23	ALL
	4	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D06000

Page 15

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06058		1074/265/R060		RCPT- (continued)				ALL
	5		W3804	0075V	22		33-25-23	ALL
	6		W3804	0076WN	16		33-23-23	ALL
	7		W3804	0077W	20		33-24-22	ALL
	8		W3804	0078WP	16		33-23-23	ALL
	9	UNUSED						ALL
	10		W3804	0080K	18		35-21-22	ALL
	11		W3804	0079AJ	20		35-21-22	ALL
	12	UNUSED						ALL
	13		W3804	2071R	22		23-31-32	001-099
	13		W3804	2071B	22		23-31-32	115-199
	14		W3804	2071B	22		23-31-32	001-099
	14		W3804	2071R	22		23-31-32	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D06060		1103/265/R060		RCPT-				ALL
	1		W3804	0081G	16		33-24-22	ALL
	2		W3804	0082WV	22		33-25-23	ALL
	3		W3804	0083WG	22		33-25-23	ALL
	4	UNUSED						ALL
	5		W3804	0085V	22		33-25-23	ALL
	6		W3804	0086WN	16		33-23-23	ALL
	7		W3804	0087W	20		33-24-22	ALL
	8		W3804	0088WP	16		33-23-23	ALL
	9	UNUSED						ALL
	10		W3804	0090K	18		35-21-22	ALL
	11		W3804	0089AJ	20		35-21-22	ALL
	12	UNUSED						ALL
	13		W3804	2081R	22		23-31-32	001-099
	13		W3804	2081B	22		23-31-32	115-199
	14		W3804	2081B	22		23-31-32	001-099
	14		W3804	2081R	22		23-31-32	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D06062		1138/265/R060		RCPT-				ALL
	1		W3804	0091G	16		33-24-22	ALL
	2		W3804	0092WV	22		33-25-23	ALL
	3		W3804	0093WG	22		33-25-23	ALL
	4	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D06000

Page 16

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06062		1138/265/R060		RCPT- (continued)				ALL
	5		W3804	0095V	22		33-25-23	ALL
	6		W3804	0096WN	16		33-23-23	ALL
	7		W3804	0097W	20		33-24-22	ALL
	8		W3804	0098WP	16		33-23-23	ALL
	9	UNUSED						ALL
	10		W3804	0100K	18		35-21-22	ALL
	11		W3804	0099AJ	20		35-21-22	ALL
	12	UNUSED						ALL
	13		W3804	2091R	22		23-31-32	001-099
	13		W3804	2091B	22		23-31-32	115-199
	14		W3804	2091B	22		23-31-32	001-099
	14		W3804	2091R	22		23-31-32	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D06064		1173/265/R060		RCPT-				ALL
	1		W3804	0101G	16		33-24-22	ALL
	2		W3804	0102WV	22		33-25-23	ALL
	3		W3804	0103WG	22		33-25-23	ALL
	4	UNUSED						ALL
	5		W3804	0105V	22		33-25-23	ALL
	6		W3804	0106WN	16		33-23-23	ALL
	7		W3804	0107W	20		33-24-22	ALL
	8		W3804	0108WP	16		33-23-23	ALL
	9	UNUSED						ALL
	10		W3804	0110K	18		35-21-22	ALL
	11		W3804	0109AJ	20		35-21-22	ALL
	12	UNUSED						ALL
	13		W3804	2101R	22		23-31-32	001-099
	13		W3804	2101B	22		23-31-32	115-199
	14		W3804	2101B	22		23-31-32	001-099
	14		W3804	2101R	22		23-31-32	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D06066		1206/265/R060		RCPT-				ALL
	1		W3804	0111G	16		33-24-22	ALL
	2		W3804	0112WV	22		33-25-23	ALL
	3		W3804	0113WG	22		33-25-23	ALL
	4	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D06000

Page 17

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06066		1206/265/R060		RCPT- (continued)				ALL
	5		W3804	0115V	22		33-25-23	ALL
	6		W3804	0116WN	16		33-23-23	ALL
	7		W3804	0117W	20		33-24-22	ALL
	8		W3804	0118WP	16		33-23-23	ALL
	9	UNUSED						ALL
	10		W3804	0120K	18		35-21-22	ALL
	11		W3804	0119AJ	20		35-21-22	ALL
	12	UNUSED						ALL
	13		W3804	2111R	22		23-31-32	001-099
	13		W3804	2111B	22		23-31-32	115-199
	14		W3804	2111B	22		23-31-32	001-099
	14		W3804	2111R	22		23-31-32	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D06068		1233/265/R060		RCPT-				ALL
	1		W3806	0011G	16		33-24-23	ALL
	2		W3806	0012WV	22		33-25-24	ALL
	3		W3806	0013WG	22		33-25-24	ALL
	4	UNUSED						ALL
	5		W3806	0015V	22		33-25-24	ALL
	6		W3806	0016WN	16		33-23-23	ALL
	7		W3806	0017W	20		33-24-23	ALL
	8		W3806	0018WP	16		33-23-23	ALL
	9	UNUSED						ALL
	10		W3806	0020K	18		35-21-22	ALL
	11		W3806	0019AJ	20		35-21-22	ALL
	12	UNUSED						ALL
	13		W3806	2011R	22		23-31-32	001-099
	13		W3806	2011B	22		23-31-32	115-199
	14		W3806	2011B	22		23-31-32	001-099
	14		W3806	2011R	22		23-31-32	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D06070		1250/265/R060		RCPT-				ALL
	1		W3806	0021G	16		33-24-23	ALL
	2		W3806	0022WV	22		33-25-24	ALL
	3		W3806	0023WG	22		33-25-24	ALL
	4	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D06000

Page 18

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06070		1250/265/R060		RCPT- (continued)				ALL
	5		W3806	0025V	22		33-25-24	ALL
	6		W3806	0026WN	16		33-23-23	ALL
	7		W3806	0027W	20		33-24-23	ALL
	8		W3806	0028WP	16		33-23-23	ALL
	9	UNUSED						ALL
	10		W3806	0030K	18		35-21-22	ALL
	11		W3806	0029AJ	20		35-21-22	ALL
	12	UNUSED						ALL
	13		W3806	2021R	22		23-31-32	001-099
	13		W3806	2021B	22		23-31-32	115-199
	14		W3806	2021B	22		23-31-32	001-099
	14		W3806	2021R	22		23-31-32	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D06072		1267/265/R060		RCPT-				ALL
	1		W3806	0031G	16		33-24-23	ALL
	2		W3806	0032WV	22		33-25-24	ALL
	3		W3806	0033WG	22		33-25-24	ALL
	4	UNUSED						ALL
	5		W3806	0035V	22		33-25-24	ALL
	6		W3806	0036WN	16		33-23-23	ALL
	7		W3806	0037W	20		33-24-23	ALL
	8		W3806	0038WP	16		33-23-23	ALL
	9	UNUSED						ALL
	10		W3806	0040K	18		35-21-22	ALL
	11		W3806	0039AJ	20		35-21-22	ALL
	12	UNUSED						ALL
	13		W3806	2031R	22		23-31-32	001-099
	13		W3806	2031B	22		23-31-32	115-199
	14		W3806	2031B	22		23-31-32	001-099
	14		W3806	2031R	22		23-31-32	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D06074		1295/265/R060		RCPT-				ALL
	1		W3806	0041G	16		33-24-23	ALL
	2		W3806	0042WV	22		33-25-24	ALL
	3		W3806	0043WG	22		33-25-24	ALL
	4	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D06000

Page 19

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06074		1295/265/R060		RCPT- (continued)				ALL
	5		W3806	0045V	22		33-25-24	ALL
	6		W3806	0046WN	16		33-23-23	ALL
	7		W3806	0047W	20		33-24-23	ALL
	8		W3806	0048WP	16		33-23-23	ALL
	9	UNUSED						ALL
	10		W3806	0050K	18		35-21-22	ALL
	11		W3806	0049AJ	20		35-21-22	ALL
	12	UNUSED						ALL
	13		W3806	2041R	22		23-31-32	001-099
	13		W3806	2041B	22		23-31-32	115-199
	14		W3806	2041B	22		23-31-32	001-099
	14		W3806	2041R	22		23-31-32	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D06076		1330/265/R060		RCPT-				ALL
	1		W3806	0051G	16		33-24-23	ALL
	2		W3806	0052WV	22		33-25-24	ALL
	3		W3806	0053WG	22		33-25-24	ALL
	4	UNUSED						ALL
	5		W3806	0055V	22		33-25-24	ALL
	6		W3806	0056WN	16		33-23-24	ALL
	7		W3806	0057W	20		33-24-23	ALL
	8		W3806	0058WP	16		33-23-24	ALL
	9	UNUSED						ALL
	10		W3806	0060K	18		35-21-22	ALL
	11		W3806	0059AJ	20		35-21-22	ALL
	12	UNUSED						ALL
	13		W3806	2051R	22		23-31-32	001-099
	13		W3806	2051B	22		23-31-32	115-199
	14		W3806	2051B	22		23-31-32	001-099
	14		W3806	2051R	22		23-31-32	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D06078		1365/265/R060		RCPT-				ALL
	1		W3806	0061G	16		33-24-23	ALL
	2		W3806	0062WV	22		33-25-24	ALL
	3		W3806	0063WG	22		33-25-24	ALL
	4	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D06000

Page 20

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06078		1365/265/R060		RCPT- (continued)				ALL
	5		W3806	0065V	22		33-25-24	ALL
	6		W3806	0066WN	16		33-23-24	ALL
	7		W3806	0067W	20		33-24-23	ALL
	8		W3806	0068WP	16		33-23-24	ALL
	9	UNUSED						ALL
	10		W3806	0070K	18		35-21-22	ALL
	11		W3806	0069AJ	20		35-21-22	ALL
	12		W3806	0800	22		23-31-41	001-099
	12	UNUSED						115-199
	13		W3806	2061R	22		23-31-32	001-099
	13		W3806	2061B	22		23-31-32	115-199
	14		W3806	2061B	22		23-31-32	001-099
	14		W3806	2061R	22		23-31-32	115-199
	15		W3806	0800	22		23-31-41	115-199
	16	UNUSED						115-199
D06080		1393/265/R060		RCPT-				ALL
	1		W3806	0071G	16		33-24-23	ALL
	2		W3806	0072WV	22		33-25-24	ALL
	3		W3806	0073WG	22		33-25-24	ALL
	4	UNUSED						ALL
	5		W3806	0075V	22		33-25-24	ALL
	6		W3806	0076WN	16		33-23-24	ALL
	7		W3806	0077W	20		33-24-23	ALL
	8		W3806	0078WP	16		33-23-24	ALL
	9	UNUSED						ALL
	10		W3806	0080K	18		35-21-22	ALL
	11		W3806	0079AJ	20		35-21-22	ALL
	12	UNUSED						ALL
	13		W3806	2071R	22		23-31-32	001-099
	13		W3806	2071B	22		23-31-32	115-199
	14		W3806	2071B	22		23-31-32	001-099
	14		W3806	2071R	22		23-31-32	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D06082		1429/265/R060		RCPT-				ALL
	1		W3806	0081G	16		33-24-23	ALL
	2		W3806	0082WV	22		33-25-24	ALL
	3		W3806	0083WG	22		33-25-24	ALL

HOOKUP LIST

D280N032

91-21-51

Section D06000

Page 21

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06082		1429/265/R060		RCPT- (continued)				ALL
	4	UNUSED						ALL
	5		W3806	0085V	22		33-25-24	ALL
	6		W3806	0086WN	16		33-23-24	ALL
	7		W3806	0087W	20		33-24-23	ALL
	8		W3806	0088WP	16		33-23-24	ALL
	9	UNUSED						ALL
	10		W3806	0090K	18		35-21-22	ALL
	11		W3806	0089AJ	20		35-21-22	ALL
	12	UNUSED						ALL
	13		W3806	2081R	22		23-31-32	001-099
	13		W3806	2081B	22		23-31-32	115-199
	14		W3806	2081B	22		23-31-32	001-099
	14		W3806	2081R	22		23-31-32	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D06084		1456/265/R060		RCPT-				ALL
	1		W3806	0091G	16		33-24-23	ALL
	2		W3806	0092WV	22		33-25-24	ALL
	3		W3806	0093WG	22		33-25-24	ALL
	4	UNUSED						ALL
	5		W3806	0095V	22		33-25-24	ALL
	6		W3806	0096WN	16		33-23-24	ALL
	7		W3806	0097W	20		33-24-23	ALL
	8		W3806	0098WP	16		33-23-24	ALL
	9	UNUSED						ALL
	10		W3806	0100K	18		35-21-22	ALL
	11		W3806	0099AJ	20		35-21-22	ALL
	12	UNUSED						ALL
	13		W3806	2091R	22		23-31-32	001-099
	13		W3806	2091B	22		23-31-32	115-199
	14		W3806	2091B	22		23-31-32	001-099
	14		W3806	2091R	22		23-31-32	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D06086		1470/265/R060		RCPT-				ALL
	1		W3806	0101G	16		33-24-23	ALL
	2		W3806	0102WV	22		33-25-24	ALL
	3		W3806	0103WG	22		33-25-24	ALL

HOOKUP LIST

D280N032

91-21-51

Section D06000

Page 22

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06086		1470/265/R060		RCPT- (continued)				ALL
	4	UNUSED						ALL
	5		W3806	0105V	22		33-25-24	ALL
	6		W3806	0106WN	16		33-23-24	ALL
	7		W3806	0107W	20		33-24-23	ALL
	8		W3806	0108WP	16		33-23-24	ALL
	9	UNUSED						ALL
	10		W3806	0110K	18		35-21-22	ALL
	11		W3806	0109AJ	20		35-21-22	ALL
	12	UNUSED						ALL
	13		W3806	2101R	22		23-31-32	001-099
	13		W3806	2101B	22		23-31-32	115-199
	14		W3806	2101B	22		23-31-32	001-099
	14		W3806	2101R	22		23-31-32	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D06088		1491/265/R060		RCPT-				ALL
	1		W3806	0111G	16		33-24-23	ALL
	2		W3806	0112WV	22		33-25-24	ALL
	3		W3806	0113WG	22		33-25-24	ALL
	4	UNUSED						ALL
	5		W3806	0115V	22		33-25-24	ALL
	6		W3806	0116WN	16		33-23-24	ALL
	7		W3806	0117W	20		33-24-23	ALL
	8		W3806	0118WP	16		33-23-24	ALL
	9	UNUSED						ALL
	10		W3806	0120K	18		35-21-22	ALL
	11		W3806	0119AJ	20		35-21-22	ALL
	12	UNUSED						ALL
	13		W3806	2111R	22		23-31-32	001-099
	13		W3806	2111B	22		23-31-32	115-199
	14		W3806	2111B	22		23-31-32	001-099
	14		W3806	2111R	22		23-31-32	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D06090		1520/265/R060		RCPT-				001-099
D06090		1520/272/R055		RCPT-				115-199
	1		W3806	0121G	16		33-24-23	ALL
	2		W3806	0122WV	22		33-25-24	ALL

HOOKUP LIST

D280N032

91-21-51

Section D06000

Page 23

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06090		1520/265/R060		RCPT- (continued)				001-099
D06090		1520/272/R055		RCPT- (continued)				115-199
	3		W3806	0123WG	22		33-25-24	ALL
	4	UNUSED						ALL
	5		W3806	0125V	22		33-25-24	ALL
	6		W3806	0126WN	16		33-23-24	ALL
	7		W3806	0127W	20		33-24-23	ALL
	8		W3806	0128WP	16		33-23-24	ALL
	9	UNUSED						ALL
	10		W3806	0130K	18		35-21-22	ALL
	11		W3806	0129AJ	20		35-21-22	ALL
	12	UNUSED						ALL
	13		W3806	2121R	22		23-31-32	001-099
	13		W3806	2121B	22		23-31-32	115-199
	14		W3806	2121B	22		23-31-32	001-099
	14		W3806	2121R	22		23-31-32	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D06092		1548/265/R060		RCPT-				001-099
D06092		1553/272/R55		RCPT-				115-199
	1		W3806	0131G	16		33-24-23	ALL
	2		W3806	0132WV	22		33-25-24	ALL
	3		W3806	0133WG	22		33-25-24	ALL
	4	UNUSED						ALL
	5		W3806	0135V	22		33-25-24	ALL
	6		W3806	0136WN	16		33-23-24	ALL
	7		W3806	0137W	20		33-24-23	ALL
	8		W3806	0138WP	16		33-23-24	ALL
	9	UNUSED						ALL
	10		W3806	0140K	18		35-21-22	ALL
	11		W3806	0139AJ	20		35-21-22	ALL
	12	UNUSED						ALL
	13		W3806	2131R	22		23-31-32	001-099
	13		W3806	2131B	22		23-31-32	115-199
	14		W3806	2131B	22		23-31-32	001-099
	14		W3806	2131R	22		23-31-32	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D06000

Page 24

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06094		1583/265/R060		RCPT-				001-099
D06094		1583/272/R55		RCPT-				115-199
	1		W3806	0141G	16		33-24-23	ALL
	2		W3806	0142WV	22		33-25-24	ALL
	3		W3806	0143WG	22		33-25-24	ALL
	4	UNUSED						ALL
	5		W3806	0145V	22		33-25-24	ALL
	6		W3806	0146WN	16		33-23-24	ALL
	7		W3806	0147W	20		33-24-23	ALL
	8		W3806	0148WP	16		33-23-24	ALL
	9	UNUSED						ALL
	10		W3806	0150K	18		35-21-22	ALL
	11		W3806	0149AJ	20		35-21-22	ALL
	12	UNUSED						ALL
	13		W3806	2141R	22		23-31-32	001-099
	13		W3806	2141B	22		23-31-32	115-199
	14		W3806	2141B	22		23-31-32	001-099
	14		W3806	2141R	22		23-31-32	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D06096		1610/265/R060		RCPT-				001-099
D06096		1595/272/R55		RCPT-				115-199
	1		W3806	0151G	16		33-24-23	ALL
	2		W3806	0152WV	22		33-25-24	ALL
	3		W3806	0153WG	22		33-25-24	ALL
	4	UNUSED						ALL
	5		W3806	0155V	22		33-25-24	ALL
	6		W3806	0156WN	16		33-23-24	ALL
	7		W3806	0157W	20		33-24-23	ALL
	8		W3806	0158WP	16		33-23-24	ALL
	9	UNUSED						ALL
	10		W3806	0160K	18		35-21-22	ALL
	11		W3806	0159AJ	20		35-21-22	ALL
	12	UNUSED						ALL
	13		W3806	2151R	22		23-31-32	001-099
	13		W3806	2151B	22		23-31-32	115-199
	14		W3806	2151B	22		23-31-32	001-099
	14		W3806	2151R	22		23-31-32	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D06000

Page 25

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06098		1623/265/R060		RCPT-				001-099
D06098		1615/272/R055		RCPT-				115-199
	1		W3806	0161G	16		33-24-23	ALL
	2		W3806	0162WV	22		33-25-24	ALL
	3		W3806	0163WG	22		33-25-24	ALL
	4	UNUSED						ALL
	5		W3806	0165V	22		33-25-24	ALL
	6		W3806	0166WN	16		33-23-24	ALL
	7		W3806	0167W	20		33-24-23	ALL
	8		W3806	0168WP	16		33-23-24	ALL
	9	UNUSED						ALL
	10		W3806	0170K	18		35-21-22	ALL
	11		W3806	0169AJ	20		35-21-22	ALL
	12	UNUSED						ALL
	13		W3806	2161R	22		23-31-32	001-099
	13		W3806	2161B	22		23-31-32	115-199
	14		W3806	2161B	22		23-31-32	001-099
	14		W3806	2161R	22		23-31-32	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D06000

Page 26 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06240		N252/147/L6		PLUG				ALL
	1		W5100	0095	20		29-22-11	ALL
	2		W5100	0069	18		29-11-12	ALL
	3		W5100	0067	20		29-11-12	ALL
	4		W5100	0037	20		29-22-11	ALL
	5		W5100	0036	20		29-22-11	ALL
	6		W5100	0038	20		29-22-11	ALL
	7	UNUSED						ALL
D06242		PPS217/148/L2		PLUG				ALL
	1	UNUSED						ALL
	2		W5200	0070	18		29-11-22	ALL
	3		W5200	0068	20		29-11-22	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D06200

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06302		800/268/R60		PLUG-				ALL
	1		W3824	0045	22		33-21-41	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W3824	0041	18		33-21-41	ALL
	5		W3824	0042	20		33-21-41	ALL
	6		W3824	0046	20		33-21-41	ALL
D06304		800/268/R60		RCPT-				ALL
	1		W3824	0055	22		33-21-41	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W3824	0051	18		33-21-41	ALL
	5		W3824	0052	20		33-21-41	ALL
	6		W3824	0056	20		33-21-41	ALL
D06306		800/268/L60		RCPT-				ALL
	1		W3724	0045	22		33-21-32	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W3724	0041	18		33-21-32	ALL
	5		W3724	0042	20		33-21-32	ALL
	6		W3724	0046	20		33-21-32	ALL
D06308		800/268/L60		PLUG-				ALL
	1		W3724	0055	22		33-21-32	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W3724	0051	18		33-21-32	ALL
	5		W3724	0052	20		33-21-32	ALL
	6		W3724	0056	20		33-21-32	ALL
D06316		680/290/L25		RCPT-				115-199
	1		W3702	0903	16		33-24-12	115-199
	2	UNUSED						115-199
	3	UNUSED						115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7		W3702	0904	20		33-24-12	115-199
	8		W3702	0905	16		33-24-12	115-199

HOOKUP LIST

D280N032

91-21-51

Section D06300

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06316		680/290/L25		RCPT- (continued)				115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D06318		670/290/R44		RCPT-				115-199
	1		W3802	0904	16		33-24-21	115-199
	2	UNUSED						115-199
	3	UNUSED						115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7		W3802	0905	20		33-24-21	115-199
	8		W3802	0906	16		33-24-21	115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D06324 D06324		P037-00/ / P37/ /		RELAY SOCKET (PLATE 'C') RELAY SOCKET (PLATE 'C')				001-099 115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1270	6310	22		30-21-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1270	6311	22		30-21-11	ALL
	7		W1270	5720	22		30-21-11	ALL
	8		W1270	6303	22		30-21-11	ALL
D06326		P36/ /		RELAY SOCKET (PLATE 'A')				ALL
	1	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D06300

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06326		P36/ /		RELAY SOCKET (PLATE 'A') (continued)				ALL
	2	UNUSED						ALL
	3		W1260	6201	22		30-21-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1260	6202	22		30-21-11	ALL
	7		W1260	5682	22		30-21-11	ALL
	8		W1260	6150	22		30-21-11	ALL
D06330		730/265/R060		RCPT-				115-199
	1		W3802	0909	16		33-24-21	115-199
	2	UNUSED						115-199
	3	UNUSED						115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7		W3802	0912	20		33-24-21	115-199
	8		W3802	0913	16		33-24-21	115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D06390		520/205/L9		RCPT-				001-099
D06390		520/205/L9		RCPT				115-199
	1		W3532	0501	20		33-51-21	ALL
	2		W3532	0110	20		33-51-21	001-099
	2		W3532	0502	20		33-51-21	115-199
	3		W3532	0503	20		33-51-21	ALL
	4		W3532	0504	20		33-51-21	ALL
	5		W3532	0505	20		33-51-21	ALL
	6		W3532	0506	20		33-51-21	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D06300

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06390		520/205/L9		RCPT- (continued)				001-099
D06390		520/205/L9		RCPT (continued)				115-199
	12	UNUSED						ALL
D06392		820/205/L9		RCPT-				001-099
D06392		820/205/L9		RCPT				115-199
	1		W3532	0510	20		33-51-21	001-099
	1		W3532	0513	20		33-51-21	115-199
	2		W3532	0514	20		33-51-22	ALL
	3	UNUSED						ALL
	4		W3532	0515	20		33-51-21	ALL
	5		W3532	0516	20		33-51-22	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D06394		1240/205/L009		RCPT-				001-099
D06394		1240/205/L9		RCPT-				115-199
	1		W3534	0505	20		33-51-22	ALL
	2		W3534	0010	20		33-51-22	001-099
	2		W3534	0506	20		33-51-22	115-199
	3	UNUSED						ALL
	4		W3534	0507	20		33-51-22	ALL
	5		W3534	0508	20		33-51-22	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D06396		1520/205/L009		RCPT-				001-099
D06396		1520/205/L9		RCPT-				115-199
	1		W3534	0511	20		33-51-22	001-099
	1		W3534	0509	20		33-51-22	115-199
	2		W3534	0510	20		33-51-22	ALL

HOOKUP LIST

D280N032

91-21-51

Section D06300

Page 4

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06396		1520/205/L009		RCPT- (continued)				001-099
D06396		1520/205/L9		RCPT- (continued)				115-199
	3		W3534	0509	20		33-51-22	001-099
	3		W3534	0511	20		33-51-22	115-199
	4		W3534	0512	20		33-51-22	ALL
	5		W3534	0513	20		33-51-22	ALL
	6		W3534	0514	20		33-51-22	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D06300

Page 5 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06400		P005-00/ /		PLUG				ALL
	1		W4228	0272	22		33-13-32	ALL
	2		W4228	0273	22		33-13-32	ALL
	3		W4228	0275	22		33-16-52	ALL
	4		W4228	0276	22		33-16-52	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W4228	0279	22		73-21-12	ALL
	16		W4228	0266	24		73-21-12	ALL
	17	18	W4228	0122	18		73-21-12	ALL
	18	18	W4228	0120	18		73-21-12	ALL
	19		W4228	0217	24		73-21-12	ALL
	20	UNUSED						ALL
	21		W4228	0123	24		73-21-12	ALL
	22		W4228	0218	24		73-21-12	ALL
	23		W4228	0274	24		73-21-12	ALL
	24	UNUSED						ALL
D06402		P005-00/ /		PLUG				ALL
	1		W4236	0211	22		33-13-32	ALL
	2		W4236	0213	22		33-13-32	ALL
	3		W4236	0214	22		33-16-62	ALL
	4		W4236	0215	22		33-16-52	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D06400

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06402		P005-00/ /		PLUG (continued)				ALL
	15		W4236	0212	22		73-21-22	ALL
	16		W4236	0205	24		73-21-22	ALL
	17	18	W4236	0110	18		73-21-22	ALL
	18	18	W4236	0108	18		73-21-22	ALL
	19		W4236	0229	24		73-21-22	ALL
	20	UNUSED						ALL
	21		W4236	0112	24		73-21-22	ALL
	22		W4236	0230	24		73-21-22	ALL
	23		W4236	0204	24		73-21-22	ALL
	24	UNUSED						ALL
D06450		1190/160/0		PLUG				115-199
	1	UNUSED						115-199
	2		W2628	0052	20		26-23-11	115-199
	3		W2628	0053	20		26-23-11	115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
D06486		286/267/L039		PLUG-				ALL
	1		W0128	3003Y	20		33-13-61	ALL
	2	18	W0128	0111	18		33-13-61	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0128	3003B	20		33-13-61	ALL
	6		W0128	3003R	20		33-13-61	ALL
	7		W0128	0100	20		33-13-61	ALL
	8	18	W0128	0113	18		33-13-61	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	16	W0128	0110	16		33-13-61	ALL
	12		W0128	0119	24		33-13-61	ALL
D06488		P008-00/ /		PLUG				001-099
D06488		P8/ /		PLUG				115-199
	1		W2066	3009Y	24		33-13-52	ALL
	2		W2066	0009	20		33-13-52	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W2066	3009B	24		33-13-52	ALL
	6		W2066	3009R	24		33-13-52	ALL

HOOKUP LIST

D280N032

91-21-51

Section D06400

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06488		P008-00/ /		PLUG (continued)				001-099
D06488		P8/ /		PLUG (continued)				115-199
	7		W2066	0375	20		33-13-52	ALL
	8		W2066	0359	20		33-13-52	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W2066	0374	20		33-13-52	ALL
	12		W2066	0366	24		33-13-52	ALL

HOOKUP LIST

D280N032

91-21-51

Section D06400

Page 3 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06790		AB0317/ /		RCPT-				115-199
	A		W3648	0008	10		25-31-13	115-199
	B		W3648	0009	10		25-31-13	115-199
	C		W3648	0010	10		25-31-13	115-199
	D		W3648	0011	08		25-31-13	115-199

HOOKUP LIST

D280N032

91-21-51

Section D06700

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06854		1000/290/L14		RCPT-				001-099
	1	VY	W3632	0713	16		SPARE	001-099
D06856		1000/290/L14		PLUG-				001-099
	1	VG	W3632	0753	20		SPARE	001-099
	=1	UNUSED						001-099
D06870		P005-00/ /		PLUG				001-099
D06870		P5/ /		PLUG				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W2070	2509B	22		28-41-11	ALL
	5		W2070	2509R	22		28-41-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	18	W2070	2070B	18		28-43-11	ALL
	9	18	W2070	2070R	18		28-43-11	ALL
	10		W2070	0591	20		28-43-11	001-099
	10	18	W2070	0591	18		28-43-11	115-199
	11		W2070	0603	20		28-41-11	ALL
	12		W2070	0166	20		28-41-11	ALL
D06872		P005-00/ /		PLUG				001-099
D06872		P5/ /		PLUG (MR69018-002)				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W2066	2509B	22		28-41-11	ALL
	6		W2066	2509R	22		28-41-11	ALL
	7	UNUSED						ALL
	8		W2066	0458	20		28-41-11	ALL
	9		W2066	0216	20		28-41-11	ALL
	10		W2066	0289	20		28-43-11	001-099
	10	18	W2066	0293	18		28-43-11	115-199
	11		W2066	0390	20		33-13-32	ALL
	12		W2066	0475	20		33-13-32	ALL
	CAP	Y	W2066	0529	20		SPARE	001-099
	CAP	Y	W2066	0540	20		SPARE	001-099
	CAP	Y	W2066	0541	20		SPARE	001-099

HOOKUP LIST

D280N032

91-21-51

Section D06800

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06874		P28/ /		PLUG				ALL
	1		W1500	0090	20		28-41-11	ALL
	2		W1500	0095	20		28-41-11	ALL
	3		W1500	0091	20		28-41-11	ALL
	4		W1500	0093	20		28-41-11	ALL
	5		W1500	0094	20		28-41-11	ALL
	6		W1500	0070	20		28-41-11	ALL
	7		W1500	0092	20		28-41-11	ALL
	8		W1500	2508R	20		28-41-11	ALL
	9		W1500	2508B	20		28-41-11	ALL
	10		W1500	0104	20		28-41-11	ALL
	11		W1500	0072	20		28-41-11	ALL
	12		W1500	0044	20		28-41-11	ALL
	13		W1500	2512B	20		28-41-11	ALL
	14		W1500	2512R	20		28-41-11	ALL
	15	UNUSED						ALL
	16		W1500	0078	20		28-41-11	ALL
			W1500	0108	20		28-41-11	ALL
			W1500	2508Z			28-41-11	ALL
			W1500	2512Z			28-41-11	ALL
D06876		P28/ /		CENTER LOAD SEL IND				ALL
	1		W1500	0087	20		28-41-11	ALL
	2		W1500	0084	20		28-41-11	ALL
	3		W1500	0085	20		28-41-11	ALL
	4		W1500	0088	20		28-41-11	ALL
	5		W1500	0086	20		28-41-11	ALL
	6		W1500	0068	20		28-41-11	ALL
	7		W1500	0089	20		28-41-11	ALL
	8		W1500	2511R	20		28-41-11	ALL
	9		W1500	2511B	20		28-41-11	ALL
	10		W1500	0103	20		28-41-11	ALL
	11		W1500	0071	20		28-41-11	ALL
	12		W1500	0041	20		28-41-11	ALL
	13		W1500	2506B	20		28-41-11	ALL
	14		W1500	2506R	20		28-41-11	ALL
	15	UNUSED						ALL
	16		W1500	0077	20		28-41-11	ALL
			W1500	0107	20		28-41-11	ALL
			W1500	2506Z			28-41-11	ALL
			W1500	2511Z			28-41-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D06800

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06878		P28/ /		LEFT MAIN LOAD SEL IND				ALL
	1		W1500	0096	20		28-41-11	ALL
	2		W1500	0097	20		28-41-11	ALL
	3		W1500	0100	20		28-41-11	ALL
	4		W1500	0098	20		28-41-11	ALL
	5		W1500	0099	20		28-41-11	ALL
	6		W1500	0076	20		28-41-11	ALL
	7		W1500	0096	20		28-41-11	ALL
	8		W1500	2502R	20		28-41-11	ALL
	9		W1500	2502B	20		28-41-11	ALL
	10		W1500	0105	20		28-41-11	ALL
	11		W1500	0073	20		28-41-11	ALL
	12		W1500	0038	20		28-41-11	ALL
	13		W1500	2503B	20		28-41-11	ALL
	14		W1500	2503R	20		28-41-11	ALL
	15	UNUSED						ALL
	16		W1500	0079	20		28-41-11	ALL
			W1500	0106	20		28-41-11	ALL
			W1500	2502Z			28-41-11	ALL
			W1500	2503Z			28-41-11	ALL
D06880		OSS336/ /		PLUG-				001-099
	1		W4024	001TX	18		28-41-21	001-099
	2	UNUSED						001-099
	3		W4024	4501RY	20		28-41-21	001-099
	4		W4024	4501RK	20		28-41-21	001-099
	5		W4024	4501RG	20		28-41-21	001-099
	6		W4024	4501RB	20		28-41-21	001-099
	7		W4024	4501WK	20		28-41-21	001-099
	8		W4024	4501RV	20		28-41-21	001-099
	9		W4024	4501WN	20		28-41-21	001-099
	10		W4024	4501WR	20		28-41-21	001-099
	11		W4024	4501WY	20		28-41-21	001-099
	12		W4024	4501WO	20		28-41-21	001-099
	13		W4024	4501WG	20		28-41-21	001-099
	14		W4024	4501WB	20		28-41-21	001-099
	15		W4024	4501AA	20		28-41-21	001-099
	16		W4024	4501WV	20		28-41-21	001-099
	17		W4024	4501W	20		28-41-21	001-099
	= C1		W4024	001TI			28-41-21	001-099

HOOKUP LIST

D280N032

91-21-51

Section D06800

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06882		IRSS258/ /		PLUG				ALL
	1		W4020	1001	20		28-41-21	ALL
	2		W4020	2001R	20		28-41-21	ALL
	3		W4020	2001B	20		28-41-21	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W4020	0001	20		28-41-21	ALL
	7		W4020	0002	20		28-41-21	ALL
	8		W4020	0003	20		28-41-21	ALL
	9		W4020	0004	20		28-41-21	ALL
	= C1		W4020	1001Z			28-41-21	ALL
D06884		OSS335/ /		PLUG-				001-002
D06884		OSS360/ /		PLUG-				003-099
	1		W4026	001TX	18		28-41-31	001-099
	2	UNUSED						001-099
	3		W4026	4501RY	20		28-41-31	001-099
	4		W4026	4501RK	20		28-41-31	001-099
	5		W4026	4501RG	20		28-41-31	001-099
	6		W4026	4501RB	20		28-41-31	001-099
	7		W4026	4501WK	20		28-41-31	001-099
	8		W4026	4501RV	20		28-41-31	001-099
	9		W4026	4501WN	20		28-41-31	001-099
	10		W4026	4501WR	20		28-41-31	001-099
	11		W4026	4501WY	20		28-41-31	001-099
	12		W4026	4501WO	20		28-41-31	001-099
	13		W4026	4501WG	20		28-41-31	001-099
	14		W4026	4501WB	20		28-41-31	001-099
	15		W4026	4501AA	20		28-41-31	001-099
	16		W4026	4501WV	20		28-41-31	001-099
	17		W4026	4501W	20		28-41-31	001-099
	= C1		W4026	001TI			28-41-31	001-099
D06886		IRSS255/ /		PLUG				ALL
	1		W4022	1001	20		28-41-31	ALL
	2		W4022	2001R	20		28-41-31	ALL
	3		W4022	2001B	20		28-41-31	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W4022	0001	20		28-41-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D06800

Page 4

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06886		IRSS255/ /		PLUG (continued)				ALL
	7		W4022	0002	20		28-41-31	ALL
	8		W4022	0003	20		28-41-31	ALL
	9		W4022	0004	20		28-41-31	ALL
	= C1		W4022	1001Z			28-41-31	ALL
D06888		ISS101/ /		PLUG				001-099
	1		W4026	002TX	18		28-41-41	001-099
	2	UNUSED						001-099
	3		W4026	4502Y	20		28-41-41	001-099
	4		W4026	4502G	20		28-41-41	001-099
	5		W4026	4502R	20		28-41-41	001-099
	6		W4026	4502B	20		28-41-41	001-099
	7	UNUSED						001-099
	8	UNUSED						001-099
	9		W4026	4502K	20		28-41-41	001-099
	= C1		W4026	002TI			28-41-41	001-099
D06890		IRSS160/ /		PLUG				ALL
I	1		W4030	8991H	22		28-41-41	ALL
I	2		W4030	8991R	22		28-41-41	ALL
I	3		W4030	8991B	22		28-41-41	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
I	6		W4030	8991RB	22		28-41-41	ALL
I	7		W4030	8991RG	22		28-41-41	ALL
I	8		W4030	8991RV	22		28-41-41	ALL
I	9		W4030	8991RY	22		28-41-41	ALL
I	= C1		W4030	8991ZA			28-41-41	ALL
D06892		FSS100/ /		PLUG-				001-099
	1		W4024	002TX	18		28-41-41	001-099
	2	UNUSED						001-099
	3		W4024	4502Y	20		28-41-41	001-099
	4		W4024	4502R	20		28-41-41	001-099
	5		W4024	4502G	20		28-41-41	001-099
	6		W4024	4502B	20		28-41-41	001-099
	7		W4024	4502K	20		28-41-41	001-099
	8	UNUSED						001-099
	9	UNUSED						001-099
	= C1		W4024	002TI			28-41-41	001-099

HOOKUP LIST

D280N032

91-21-51

Section D06800

Page 5

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06894		P010-00/ /		PLUG-ALT STAB TRIM LIGHT				ALL
	= 1	UNUSED						ALL
	= A1		W1115	0278	20		33-13-51	ALL
D06896		P010-00/ /		RCPT-ALT STAB TRIM LIGHT				ALL
	= A1		W1115	0279	20		33-13-51	ALL

HOOKUP LIST

D280N032

91-21-51

Section D06800

Page 6 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06910		840/272/R049		PLUG-				001-006
	1	16	W3632	0701	16		33-51-14	001-006
	2		W3632	0702	22		33-51-14	001-006
	3		W3632	0703	22		33-51-14	001-006
	4		W3632	0704	22		33-51-14	001-006
	5	16	W3632	0705	16		33-51-14	001-006
	6	16	W3632	0705	16		33-51-14	001-006
	7		W3632	0707	20		33-51-14	001-006
	8		W3632	0708	24		33-51-14	001-006
	9	UNUSED						001-006
	10		W3632	0710	20		33-51-22	001-006
	11	16	W3632	0711	16		SPARE	001-006
	12	16	W3632	0712	16		SPARE	001-006
	13	16	W3632	0713	16		SPARE	001-006
	14	UNUSED						001-006
	15	UNUSED						001-006
	16		W3632	0716	22		33-51-14	001-006
	17	UNUSED						001-006
	18	UNUSED						001-006
	19	UNUSED						001-006
	20		W3632	0720	20		33-51-14	001-006
	21	UNUSED						001-006
	22	UNUSED						001-006
	23	UNUSED						001-006
	24		W3632	0720	20		33-51-14	001-006
D06912		P070-00/ /		RELAY SOCKET (PLATE 'F')				001-099
	A1	UNUSED						001-099
	A2		W1250	0082	24		21-43-11	001-099
	A3		W1250	0042	24		21-43-11	001-099
	B1	UNUSED						001-099
	B2	UNUSED						001-099
	B3	UNUSED						001-099
	X1		W1250	0084	20		21-43-11	001-099
	X2		W1250	0083	20		21-43-11	001-099
D06914		P36/ /		RELAY SOCKET (PLATE 'A')				001-099
D06914		P036-00/ /		RELAY SOCKET (PLATE A)(MR69018-002)				115-199
	1		W1260	3003R	24		28-41-14	ALL
	2		W1260	3003Y	24		28-41-14	ALL
	3	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D06900

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D06914		P36/ /		RELAY SOCKET (PLATE 'A') (continued)				001-099
D06914		P036-00/ /		RELAY SOCKET (PLATE A)(MR69018-002) (continued)				115-199
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1260	6350	22		32-09-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W1260	6351	22		32-09-11	ALL
	13		W1260	3003B	24		28-41-14	ALL
	14	UNUSED						ALL
D06916		685/290/L25		RCPT-				001-099
	1	VY	W3632	0711	16		SPARE	001-099
D06918		685/290/L25		PLUG-				001-099
	1	VG	W3632	0751	20		SPARE	001-099
	=1	UNUSED						001-099
D06920		685/290/L25		RCPT-				001-099
	1	VY	W3632	0712	16		SPARE	001-099
D06922		685/290/L25		PLUG-				001-099
	1	VG	W3632	0752	20		SPARE	001-099
	=1	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D06900

Page 2 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07002		P36/ /		RELAY SOCKET (PLATE 'D')				ALL
	A1		W1260	0800	20		73-21-12	ALL
	A1		W1260	0804	20		73-21-12	ALL
	A2		W1260	0801	20		73-21-12	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1260	0798	24		73-21-12	ALL
	X1		W1260	5981	24		73-21-12	ALL
	X2		W1260	0799	24		73-21-12	ALL
D07004		P36/ /		RELAY SOCKET (PLATE 'F')				ALL
	A1	UNUSED						ALL
	A2		W1260	0804	20		73-21-12	ALL
	A3		W1260	0805	20		73-21-12	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	C1		W1260	0798	24		73-21-12	ALL
	C1		W1260	0806	24		73-21-12	ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1260	0802	24		73-21-12	ALL
	X2		W1260	0803	24		73-21-12	ALL
D07006		P037-00/ /		RELAY SOCKET (PLATE 'B')				001-099
D07006		P37/ /		RELAY SOCKET (PLATE 'B')				115-199
	A1		W1270	0271	20		73-21-22	ALL
	A2		W1270	0272	20		73-21-22	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1270	0269	24		73-21-22	ALL
	X1		W1270	0273	24		73-21-22	ALL
	X2		W1270	0270	24		73-21-22	ALL

HOOKUP LIST

D280N032

91-21-51

Section D07000

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07008		P037-00/ /		RELAY SOCKET (PLATE 'B')				001-099
D07008		P37/ /		RELAY SOCKET (PLATE 'B')				115-199
	A1	UNUSED						ALL
	A2		W1270	0267	20		73-21-22	ALL
	A2		W1270	0271	20		73-21-22	ALL
	A3		W1270	0268	20		73-21-22	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	C1		W1270	0269	24		73-21-22	ALL
	C1		W1270	6111	24		73-21-22	ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1270	0264	24		73-21-22	ALL
	X2		W1270	0266	24		73-21-22	ALL
D07010		1320/265/L060		RCPT-				001-099
D07010		1320/272/L55		RCPT-				115-199
	1		W3706	0391G	16		33-24-14	ALL
	2		W3706	0392WV	22		33-25-14	ALL
	3		W3706	0393WG	22		33-25-14	ALL
	4	UNUSED						ALL
	5		W3706	0395V	22		33-25-14	ALL
	6		W3706	0396WN	16		33-23-13	ALL
	7		W3706	0397W	20		33-24-14	ALL
	8		W3706	0398WP	16		33-23-13	ALL
	9	UNUSED						ALL
	10		W3706	0400K	18		35-21-13	ALL
	11		W3706	0399AJ	20		35-21-13	ALL
	12	UNUSED						ALL
	13		W3706	2181R	22		23-31-22	001-099
	13		W3706	2181B	22		23-31-22	115-199
	14		W3706	2181B	22		23-31-22	001-099
	14		W3706	2181R	22		23-31-22	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D07000

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07012		1320/265/R060		RCPT-				ALL
	1		W3806	0391G	16		33-24-23	ALL
	2		W3806	0392WV	22		33-25-24	ALL
	3		W3806	0393WG	22		33-25-24	ALL
	4	UNUSED						ALL
	5		W3806	0395V	22		33-25-24	ALL
	6		W3806	0396WN	16		33-23-23	ALL
	7		W3806	0397W	20		33-24-23	ALL
	8		W3806	0398WP	16		33-23-23	ALL
	9	UNUSED						ALL
	10		W3806	0400K	18		35-21-22	ALL
	11		W3806	0399AJ	20		35-21-22	ALL
	12	UNUSED						ALL
	13		W3806	2181R	22		23-31-32	001-099
	13		W3806	2181B	22		23-31-32	115-199
	14		W3806	2181B	22		23-31-32	001-099
	14		W3806	2181R	22		23-31-32	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D07020		P008-00/ /		RELAY SOCKET				001-099
D07020		P8/ /		RELAY SOCKET				115-199
	A1	UNUSED						ALL
	A2		W2066	0353	20		33-13-52	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2		W2066	0358	20		33-13-52	ALL
	B3	UNUSED						ALL
	C1		W2066	0357	20		33-13-52	ALL
	C2		W2066	0356	20		33-13-52	ALL
	C3	UNUSED						ALL
	D1		W2066	0354	24		33-13-52	ALL
	D2		W2066	0063	24		33-13-52	ALL
	D3		W2066	0352	24		33-13-52	ALL
	X1		W2066	0355	24		33-13-52	ALL
	X2		W2066	0360	20		33-13-52	ALL
D07026		P037-00/ /		RELAY SOCKET (PLATE 'C')				001-099
D07026		P37/ /		RELAY SOCKET (PLATE 'C')				115-199
	A1		W1270	0283	20		74-31-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D07000

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07026		P037-00/ /		RELAY SOCKET (PLATE 'C') (continued)				001-099
D07026		P37/ /		RELAY SOCKET (PLATE 'C') (continued)				115-199
	A2		W1270	0284	20		74-31-21	ALL
	A3	UNUSED						ALL
	B1		W1270	0286	20		74-31-21	ALL
	B2		W1270	0287	20		74-31-21	ALL
	B3	UNUSED						ALL
	X1		W1270	0282	20		74-31-21	ALL
	X2		W1270	0279	20		74-31-21	ALL
D07028		P36/ /		RELAY SOCKET (PLATE 'D')				ALL
	A1		W1260	0821	20		74-31-11	ALL
	A2		W1260	0822	20		74-31-11	ALL
	A3	UNUSED						ALL
	B1		W1260	0823	20		74-31-11	ALL
	B2		W1260	0824	20		74-31-11	ALL
	B3	UNUSED						ALL
	X1		W1260	0820	20		74-31-11	ALL
	X2		W1260	0818	20		74-31-11	ALL
D07036		P36/ /		RELAY SOCKET (PLATE 'F')				ALL
	A1	UNUSED						ALL
	A2	UNUSED						001-009, 115-199
	A2		W1260	0086	24		36-11-41	010-099
	A2		W1260	0343	24		36-11-41	010-099
	A3	UNUSED						001-009, 115-199
	A3		W1260	6491	24		36-11-41	010-099
	B1	UNUSED						ALL
	B2		W1260	0840	20		36-11-11	ALL
	B3		W1260	0708	20		36-11-11	ALL
	C1		W1260	0476	20		36-11-11	001-099
	C1		W1260	0838	20		36-11-11	ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1260	0630	20		36-11-11	ALL
	X2		W1260	0700	20		36-11-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D07000

Page 4

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07038		P037-00/ /		RELAY SOCKET (PLATE 'B')				001-099
D07038		P37/ /		RELAY SOCKET (PLATE 'B')				115-199
	A1	UNUSED						ALL
	A2	UNUSED						001-009, 115-199
	A2		W1270	6558	24		36-11-41	010-099
	A3	UNUSED						001-009, 115-199
	A3		W1270	0511	24		36-11-41	010-099
	B1	UNUSED						ALL
	B2		W1270	0297	20		36-11-21	ALL
	B3		W1270	0293	20		36-11-21	ALL
	C1		W1270	0492	20		36-11-21	001-099
	C1		W1270	0296	20		36-11-21	ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1270	0295	20		36-11-21	ALL
	X2		W1270	0294	20		36-11-21	ALL
D07046		P36/ /		RELAY SOCKET (PLATE 'A')				ALL
	1		W1260	6311	20		24-11-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1260	0841	22		77-12-41	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W1260	0840	20		36-11-11	ALL
	10	UNUSED						ALL
	11		W1260	0477	20		36-11-11	ALL
	12		W1260	0842	22		77-12-41	ALL
	13		W1260	6312	20		24-11-11	ALL
	14	UNUSED						ALL
D07058		P71/ /		RELAY SOCKET-P71 LEFT AC BUS OFF RELAY				001-002, 115-199
	A1	UNUSED						001-002, 115-199
	A2		W1254	0012	22		24-25-11	001-002, 115-199
	A3		W1254	0029	22		24-25-11	001-002, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D07000

Page 5

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07058		P71/ /		RELAY SOCKET-P71 LEFT AC BUS OFF RELAY (continued)				001-002, 115-199
	B1		W1254	0028	22		24-25-11	001-002, 115-199
	B2		W1254	0011	22		24-25-11	001-002, 115-199
	B3	UNUSED						001-002, 115-199
	X1		W1254	0006	22		24-25-11	001-002, 115-199
	X2		W1254	0013	20		24-25-11	001-002, 115-199
D07060		P71/ /		RELAY SOCKET-P71RIGHT AC BUS OFF RELAY				001-002, 115-199
	A1	UNUSED						001-002, 115-199
	A2		W1254	0012	22		24-25-11	001-002, 115-199
	A3		W1254	0003	22		24-25-11	001-002, 115-199
	B1		W1254	0002	22		24-25-11	001-002, 115-199
	B2		W1254	0011	22		24-25-11	001-002, 115-199
	B3	UNUSED						001-002, 115-199
	X1		W1254	0004	20		24-25-11	001-002, 115-199
	X2		W1254	0005	20		24-25-11	001-002, 115-199
D07062		P71/ /		RELAY SOCKET-P71 HYD GEN CONT RELAY				001-002, 115-199
	A1		W1254	0032	22		24-25-11	001-002, 115-199
	A2		W1254	0008	22		24-25-11	001-002, 115-199
	A3	UNUSED						001-002, 115-199
	B1		W1254	0071	22		24-25-11	001-002, 115-199
	B2		W1254	0024	22		24-25-11	001-002, 115-199
	B3		W1254	0025	22		24-25-11	001-002, 115-199
	X1		W1254	0030	22		24-25-11	001-002, 115-199
	X2		W1254	0031	22		24-25-11	001-002, 115-199
	Y1		W1254	0027	22		24-25-11	001-002, 115-199
	Y2		W1254	0023	22		24-25-11	001-002, 115-199
D07064		P71/ /		RELAY SOCKET-P71 GEN RESET RELAY				001-002, 115-199
	1	UNUSED						001-002, 115-199
	2		W1254	0014	22		24-25-11	001-002, 115-199
	3		W1254	0016	22		24-25-11	001-002, 115-199
	4		W1254	0033	22		24-25-11	001-002, 115-199
	5	UNUSED						001-002, 115-199
	6	UNUSED						001-002, 115-199
	7		W1254	0015	22		24-25-11	001-002, 115-199
	8	UNUSED						001-002, 115-199
D07066		1170/175/L003		RCPT-HYDRAULIC MOTOR GENERATOR(P1)				ALL
	1		W2396	3002R	20		24-25-12	001-002, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D07000

Page 6

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07066		1170/175/L003		RCPT-HYDRAULIC MOTOR GENERATOR(P1) (continued)				ALL
	1		W2396	3501R	20		24-25-12	003-099
	2		W2396	3002Y	20		24-25-12	001-002, 115-199
	2		W2396	3501B	20		24-25-12	003-099
	3		W2396	3002B	20		24-25-12	001-002, 115-199
	3		W2396	3501Y	20		24-25-12	003-099
	4		W2396	2501B	20		24-25-12	001-002, 115-199
	4		W2396	2503R	20		24-25-12	003-099
	5		W2396	2501R	20		24-25-12	001-002, 115-199
	5	UNUSED						003-099
	6		W2396	0001	20		24-25-12	001-002, 115-199
	6	UNUSED						003-099
	7		W2396	2501Z			24-25-12	001-002, 115-199
	7		W2396	FRAA			24-25-12	003-099
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W2396	0003	12		24-25-12	001-002, 115-199
	16	UNUSED						003-099
	17	UNUSED						ALL
	18		W2396	0002	12		24-25-12	001-002, 115-199
	18	UNUSED						003-099
	19	UNUSED						ALL
	20		W2396	0004	12		24-25-12	001-002, 115-199
	20		W2396	0020	12		24-25-12	003-099
	21	UNUSED						ALL
	22		W2396	0005	12		24-25-12	001-002, 115-199
	22	UNUSED						003-099
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						001-002, 115-199
	25		W2396	2503B	20		24-25-12	003-099
			W2396	2503Z			24-25-12	003-099
			W2396	3501Z			24-25-12	003-099
			W2396	FRAA			24-25-12	003-099

HOOKUP LIST

D280N032

91-21-51

Section D07000

Page 7

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07068		1165/168/L003		RCPT-HYDRAULIC MOTOR GENERATOR(P2)				ALL
	1		W2394	0001	12		24-25-12	ALL
	2		W2394	0002	12		24-25-12	ALL
	3		W2394	0003	12		24-25-12	ALL
	4		W2394	0004	12		24-25-12	ALL
D07070		P71/ /		PLUG-P71 HYD GEN CONT UNIT				ALL
	1		W1254	3002R	20		24-25-12	001-002, 115-199
	1		W1254	3501R	20		24-25-12	003-099
	2		W1254	3002Y	20		24-25-12	001-002, 115-199
	2		W1254	3501B	20		24-25-12	003-099
	3		W1254	3002B	20		24-25-12	001-002, 115-199
	3		W1254	3501Y	20		24-25-12	003-099
	4		W1254	2501B	20		24-25-12	001-002, 115-199
	4		W1254	2503R	20		24-25-12	003-099
	5		W1254	2501R	20		24-25-12	001-002, 115-199
	5		W1254	0110	22		24-25-11	003-099
	6		W1254	0036	20		24-25-12	001-002, 115-199
	6		W1254	0121	20		24-25-12	003-099
	7		W1254	0037	20		24-25-12	001-002, 115-199
	7		W1254	0122	20		24-25-12	003-099
	8		W1254	0038	20		24-25-12	001-002, 115-199
	8		W1254	0123	20		24-25-12	003-099
	9		W1254	0014	22		24-25-11	001-002, 115-199
	9		W1254	0103	22		24-25-11	003-099
	10		W1254	0033	22		24-25-11	001-002, 115-199
	10		W1254	0102	22		24-25-11	003-099
	11		W1254	3001Y	20		24-25-12	001-002, 115-199
	11	UNUSED						003-099
	12		W1254	FRAC			24-25-12	001-002, 115-199
	12		W1254	0120	20		24-25-12	003-099
	13		W1254	0043	20		24-25-12	001-002, 115-199
	13		W1254	0107	22		24-25-11	003-099
	14		W1254	0032	22		24-25-11	001-002, 115-199
	14		W1254	0155	22		24-25-11	003-099
	15		W1254	3001R	20		24-25-12	001-002, 115-199
	15		W1254	2502R	20		24-25-12	003-099
	16		W1254	3001B	20		24-25-12	001-002, 115-199
	16		W1254	2502B	20		24-25-12	003-099
	17		W1254	0042	20		24-25-12	001-002, 115-199
	17		W1254	0119	20		24-25-12	003-099

HOOKUP LIST

D280N032

91-21-51

Section D07000

Page 8

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07070		P71/ /		PLUG-P71 HYD GEN CONT UNIT (continued)				ALL
	18	UNUSED						001-002, 115-199
	18		W1254	0160	20		24-25-12	003-099
	19	UNUSED						ALL
	20		W1254	0034	20		24-25-11	001-002, 115-199
	20		W1254	0111	22		24-25-11	003-099
	21	UNUSED						001-002, 115-199
	21		W1254	0105	22		24-25-11	003-099
	22	UNUSED						ALL
	23	UNUSED						001-002, 115-199
	23		W1254	0118	20		24-25-12	003-099
	24	UNUSED						001-002, 115-199
	24		W1254	2503B	20		24-25-12	003-099
			W1254	0035	20		24-25-12	001-002, 115-199
			W1254	2501Z			24-25-12	001-002, 115-199
			W1254	FRAC			24-25-12	001-002, 115-199
			W1254	2502Z			24-25-12	003-099
			W1254	2503Z			24-25-12	003-099
			W1254	3501Z			24-25-12	003-099
			W1254	FRAC			24-25-12	003-099
D07072		1170/173/L003		PLUG-HYDRAULIC MOTOR GENERATOR (J3)				ALL
	1		W2396	3001R	20		24-25-12	001-002, 115-199
	1		W2396	2502R	20		24-25-12	003-099
	2		W2396	3001B	20		24-25-12	001-002, 115-199
	2		W2396	2502B	20		24-25-12	003-099
	3		W2396	3001Y	20		24-25-12	001-002, 115-199
	3	UNUSED						003-099
	4		W2396	0008	20		24-25-12	001-002, 115-199
	4		W2396	0018	20		24-25-12	003-099
	5	UNUSED						001-002, 115-199
	5		W2396	0019	20		24-25-12	003-099
	DED		W2396	2502Z			24-25-12	003-099
D07074		1162/182/L004		PLUG-HYD MTR GEN S/O VALVE				ALL
	1		W2396	0009	20		24-25-11	ALL
	2		W2396	0010	20		24-25-11	ALL
	3		W2396	0011	20		24-25-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D07000

Page 9

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07074		1162/182/L004		PLUG-HYD MTR GEN S/O VALVE (continued)				ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W2396	0006	20		24-25-13	ALL
	10		W2396	0007	20		24-25-13	ALL
D07076		425/190/L060		PLUG-EQUIP COOLING AUX FAN				ALL
	1		W4004	0033	22		21-58-15	ALL
	2		W4004	0034	22		21-58-15	ALL
	3		W4004	0042	22		21-58-15	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W4004	0043	22		21-58-15	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D07078		P36/ /		RELAY SOCKET (PLATE 'F')				ALL
	A1	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D07000

Page 10

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07078		P36/ /		RELAY SOCKET (PLATE 'F') (continued)				ALL
	A2		W1260	0859	22		21-58-15	ALL
	A3		W1260	0862	22		21-58-15	ALL
	B1	UNUSED						ALL
	B2		W1260	0860	22		21-58-15	ALL
	B3		W1260	0863	22		21-58-15	ALL
	C1	UNUSED						ALL
	C2		W1260	0861	22		21-58-15	ALL
	C3		W1260	0865	22		21-58-15	ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1260	0866	22		21-58-15	ALL
	X2		W1260	0867	22		21-58-15	ALL
D07080		P037-00/ /		RELAY SOCKET (PLATE 'A')				001-099
D07080		P37/ /		RELAY SOCKET (PLATE 'A')				115-199
	A1		W1270	0618	22		33-51-11	ALL
	A2		W1270	0064	22		33-51-11	ALL
	A2		W1270	0619	22		33-51-11	ALL
	A3		W1270	0621	22		33-51-11	ALL
	B1		W1270	0622	22		33-51-11	ALL
	B2		W1270	0065	22		33-51-11	ALL
	B3		W1270	0623	22		33-51-11	ALL
	C1		W1270	0624	22		33-21-51	ALL
	C2		W1270	0625	22		33-21-51	ALL
	C3		W1270	1054	22		33-21-51	ALL
	D1		W1270	0627	16		33-26-11	001-099
	D1		W1270	0627	22		33-26-11	115-199
	D2		W1270	0628	16		33-26-11	001-099
	D2		W1270	0628	22		33-26-11	115-199
	D3		W1270	0041	16		33-26-11	001-099
	D3		W1270	0041	22		33-26-11	115-199
	X1		W1270	0624	22		33-21-51	ALL
	X1		W1270	0629	22		33-21-51	ALL
	X2		W1270	0630	24		33-51-11	ALL
D07084		OSS839/ /L		PLUG-				ALL
	1		W3348	2005R	12		33-43-11	ALL
	2	UNUSED						ALL
	3		W3348	2006R	12		33-43-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D07000

Page 11

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07084		OSS839/ /L		PLUG- (continued)				ALL
	4		W3348	2005B	12		33-43-11	ALL
	5		W3348	0001	12		33-43-11	ALL
	6	UNUSED						ALL
	7		W3348	0005	12		33-43-11	ALL
	8		W3348	2006B	12		33-43-11	ALL
D07086		OSS839/ /R		PLUG-				ALL
	1		W3448	2005R	12		33-43-12	ALL
	2	UNUSED						ALL
	3		W3448	2006R	12		33-43-12	ALL
	4		W3448	2005B	12		33-43-12	ALL
	5		W3448	0001	12		33-43-12	ALL
	6	UNUSED						ALL
	7		W3448	0005	12		33-43-12	ALL
	8		W3448	2006B	12		33-43-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D07000

Page 12 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07156		1311/288/L15		RCPT-				001-099
D07156		1310/288/L17		RCPT-				115-199
	1		W3672	0246	22		SPARE	001-099
	1	UNUSED						115-199
	2		W3672	0247	22		SPARE	001-099
	2		W3672	0090	22		23-42-11	115-199
	3		W3672	0248	22		SPARE	001-099
	3	UNUSED						115-199
	4		W3672	0249	20		SPARE	001-099
	4		W3672	0093	20		23-42-11	115-199
	5	UNUSED						ALL
	6		W3672	0250	20		SPARE	001-099
	6		W3672	0125	20		33-51-14	115-199
	7	UNUSED						ALL
	8		W3672	0251	20		SPARE	001-099
	8		W3672	0172	20		33-51-14	115-199
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D07160		0308/250/R.35		PLUG-FLT DECK DOOR LOCK				ALL
	1	VG	W0502	0004	20		52-51-11	ALL
	=1	UNUSED						ALL
D07162		0308/250/R.35		RCPT-FLT DECK DOOR LOCK				ALL
	1	VY	W0502	0003	20		52-51-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D07100

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07210		P034-00/ /		PLUG				001-099
D07210		P34/ /		PLUG				115-199
	A1		W1240	0184	22		33-22-11	ALL
	A2		W1240	0274	22		33-22-11	ALL
	A3		W1240	0233	22		33-22-11	ALL
	B1		W1240	0159	22		33-22-11	ALL
	B2		W1240	0281	22		33-22-14	ALL
	B3		W1240	0282	22		33-22-14	ALL
	C1	UNUSED						001-099
	C1		W1240	0279	22		33-22-11	115-199
	C2	UNUSED						001-099
	C2		W1240	0278	22		33-22-12	115-199
	C3	UNUSED						001-099
	C3		W1240	0277	22		33-22-12	115-199
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1240	0276	22		33-22-11	ALL
	X2		W1240	0275	22		33-22-11	ALL
D07266		325/216/R065		RCPT-				001-099
D07266		325/216/R65		RCPT-				115-199
	1	VY	W3532	0502	22		33-51-21	001-099
	1	VY	W3632	0502	22		33-51-21	115-199
D07268		330/221/L70		RCPT-				ALL
	1	VY	W3632	0502	22		33-51-21	001-099
	1	VY	W3532	0517	22		33-51-21	115-199
D07270		732/216/R65		RCPT				001-099
D07270		732/216/R65		RCPT-				115-199
	1	VY	W3532	0512	22		33-51-21	001-099
	1	VY	W3632	0505	22		33-51-21	115-199
D07272		678/216/L70		RCPT-				001-099
D07272		678/216/L70		RCPT				115-199
	1	VY	W3632	0512	22		33-51-21	001-099
	1	VY	W3532	0519	22		33-51-21	115-199
D07274		MULTI/ /		RECP-EMERGENCY AISLE LIGHT				ALL
	1	VY	W0634	0001	20		33-51-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D07200

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07276		MULTI/ /		PLUG-EMERGENCY AISLE LIGHT				ALL
	1 =1	VG UNUSED	W0634	0002	20		33-51-12	ALL ALL
D07282		1684/216/R070		RCPT-				001-099
D07282		1684/216/R70		RCPT				115-199
	1	VY	W3534	0517	22		33-51-22	001-099
	1	VY	W3634	0527	22		33-51-22	115-199
D07284		1684/216/L70		RCPT				001-099
D07284		1684/216/L70		RCPT-				115-199
	1	VY	W3634	0112	22		33-51-22	001-099
	1	VY	W3534	0517	22		33-51-22	115-199
D07286		1350/239/R70		RCPT-				001-099
D07286		1350/239/R70		RCPT				115-199
	1	VY	W3534	0012	22		33-51-22	001-099
	1	VY	W3634	0522	22		33-51-22	115-199
D07288		1320/239/L70		RCPT				001-099
D07288		1320/239/L70		RCPT-				115-199
	1	VY	W3634	0522	22		33-51-22	001-099
	1	VY	W3534	0519	22		33-51-22	115-199
D07290		1240/270/R49		PLUG-				ALL
	1	16	W3634	0501	16		33-51-14	ALL
	2		W3634	0502	22		33-51-14	ALL
	3		W3634	0503	22		33-51-14	ALL
	4		W3634	0504	22		33-51-14	ALL
	5	16	W3634	0505	16		33-51-14	001-099
	5		W3634	0505	22		33-51-14	115-199
	6	16	W3634	0505	16		33-51-14	001-099
	6		W3634	0505	22		33-51-14	115-199
	7		W3634	0507	20		33-51-14	ALL
	8		W3634	0508	24		33-51-14	ALL
	9	UNUSED						001-099
	9		W3634	0509	22		33-51-14	115-199
	10		W3634	0510	20		33-51-22	001-099
	10		W3634	0510	20		33-51-14	115-199
	11	UNUSED						001-099
	11		W3634	0511	20		33-51-14	115-199

HOOKUP LIST

D280N032

91-21-51

Section D07200

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07290		1240/270/R49		PLUG- (continued)				ALL
	12	UNUSED						001-099
	12		W3634	0512	20		33-51-22	115-199
	13	18	W3634	0513	18		33-51-14	001-099
	13		W3634	0513	20		33-51-22	115-199
	14	UNUSED						ALL
	15	UNUSED						001-099
	15		W3634	0515	22		33-51-14	115-199
	16		W3634	0516	20		33-51-14	001-099
	16	UNUSED						115-199
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W3634	0520	22		33-51-14	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W3634	0520	22		33-51-14	ALL
D07294		325/216/R065		PLUG-				001-099
D07294		325/216/R65		PLUG-				115-199
	1	VG	W3532	0053	20		33-51-21	001-099
	1	VG	W3632	0503	20		33-51-21	115-199
	=1	UNUSED						ALL
D07296		330/216/L70		PLUG-				001-099
D07296		330/216/L70		PLUG				115-199
	1	VG	W3632	0503	20		33-51-21	001-099
	1	VG	W3532	0518	20		33-51-21	115-199
	=1	UNUSED						ALL
D07298		732/216/R65		PLUG				001-099
D07298		732/216/R65		PLUG-				115-199
	1	VG	W3532	0520	20		33-51-21	001-099
	1	VG	W3632	0506	20		33-51-21	115-199
	=1	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D07200

Page 3 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07300		678/216/L70		PLUG-				001-099
D07300		678/216/L70		PLUG				115-199
	1	VG	W3632	0506	20		33-51-21	001-099
	1	VG	W3532	0520	20		33-51-21	115-199
	=1	UNUSED						ALL
D07310		1684/216/R070		PLUG-				001-099
D07310		1684/216/R70		PLUG-				115-199
	1	VG	W3534	0518	20		33-51-22	001-099
	1	VG	W3634	0529	20		33-51-22	115-199
	=1	UNUSED						ALL
D07312		1684/216/L70		PLUG-				ALL
	1	VG	W3634	0529	20		33-51-22	001-099
	1	VG	W3534	0518	20		33-51-22	115-199
	=1	UNUSED						ALL
D07314		1350/239/R70		PLUG-				ALL
	1	VG	W3534	0520	20		33-51-22	001-099
	1	VG	W3634	0525	20		33-51-22	115-199
	=1	UNUSED						ALL
D07316		1320/239/L70		PLUG-				ALL
	1	VG	W3634	0525	20		33-51-22	001-099
	1	VG	W3534	0520	20		33-51-22	115-199
	=1	UNUSED						ALL
D07346		1350/265/R60		RCPT-				ALL
	1		W3806	0291G	16		33-24-23	ALL
	2		W3806	0292WV	22		33-25-24	ALL
	3		W3806	0293WG	22		33-25-24	ALL
	4	UNUSED						ALL
	5		W3806	0295V	22		33-25-24	ALL
	6		W3806	0296WN	16		33-23-24	ALL
	7		W3806	0297W	20		33-24-23	ALL
	8		W3806	0298WP	16		33-23-24	ALL
	9	UNUSED						ALL
	10		W3806	0300K	18		35-21-22	ALL
	11		W3806	0299AJ	20		35-21-22	ALL
	12		W3806	0804	22		23-31-41	001-099
	12	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D07300

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07346		1350/265/R60		RCPT- (continued)				ALL
	13		W3806	2191R	22		23-31-32	001-099
	13		W3806	2191B	22		23-31-32	115-199
	14		W3806	2191B	22		23-31-32	001-099
	14		W3806	2191R	22		23-31-32	115-199
	15		W3806	0804	22		23-31-41	115-199
	16	UNUSED						115-199
D07348		1350/*/*		RCPT-				001-099
D07348		1350/272/L55		RCPT-				115-199
	1		W3706	0291G	16		33-24-14	ALL
	2		W3706	0292WV	22		33-25-14	ALL
	3		W3706	0293WG	22		33-25-14	ALL
	4	UNUSED						ALL
	5		W3706	0295V	22		33-25-14	ALL
	6		W3706	0296WN	16		33-23-14	ALL
	7		W3706	0297W	20		33-24-14	ALL
	8		W3706	0298WP	16		33-23-14	ALL
	9	UNUSED						ALL
	10		W3706	0300K	18		35-21-13	ALL
	11		W3706	0299AJ	20		35-21-13	ALL
	12		W3706	0804	22		23-31-41	001-099
	12	UNUSED						115-199
	13		W3706	2191R	22		23-31-22	001-099
	13		W3706	2191B	22		23-31-22	115-199
	14		W3706	2191B	22		23-31-22	001-099
	14		W3706	2191R	22		23-31-22	115-199
	15		W3706	0804	22		23-31-41	115-199
	16	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D07300

Page 2 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07418		902/160/L65		PLUG				ALL
	1		W2406	1021	20		36-22-11	ALL
	2		W2406	1022	20		36-22-11	ALL
D07454		1040/268/L60		RCPT-				ALL
	1		W3724	0065	22		33-21-32	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W3724	0061	18		33-21-32	ALL
	5		W3724	0062	20		33-21-32	ALL
	6		W3724	0066	20		33-21-32	ALL
D07456		1040/268/L60		PLUG-				ALL
	1		W3724	0075	22		33-21-32	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W3724	0071	18		33-21-32	ALL
	5		W3724	0072	20		33-21-32	ALL
	6		W3724	0076	20		33-21-32	ALL
D07458		1200/268/L60		RCPT-				ALL
	1		W3724	0085	22		33-21-32	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W3724	0081	18		33-21-32	ALL
	5		W3724	0082	20		33-21-32	ALL
	6		W3724	0086	20		33-21-32	ALL
D07460		1200/268/L60		PLUG-				ALL
	1		W3724	0095	22		33-21-32	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W3724	0091	18		33-21-32	ALL
	5		W3724	0092	20		33-21-32	ALL
	6		W3724	0096	20		33-21-32	ALL
D07462		1360/268/L60		RCPT-				ALL
	1		W3724	0105	22		33-21-32	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W3724	0101	18		33-21-32	ALL

HOOKUP LIST

D280N032

91-21-51

Section D07400

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07462		1360/268/L60		RCPT- (continued)				ALL
	5		W3724	0102	20		33-21-32	ALL
	6		W3724	0106	20		33-21-32	ALL
D07464		1360/268/L60		PLUG-				ALL
	1		W3724	0115	22		33-21-32	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W3724	0111	18		33-21-32	ALL
	5		W3724	0112	20		33-21-32	ALL
	6		W3724	0116	20		33-21-32	ALL
D07466		1520/268/L60		RCPT-				ALL
	1		W3724	0125	22		33-21-32	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W3724	0121	18		33-21-32	ALL
	5		W3724	0122	20		33-21-32	ALL
	6		W3724	0126	20		33-21-32	ALL
D07472		1040/268/R60		PLUG-				ALL
	1		W3824	0065	22		33-21-41	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W3824	0061	18		33-21-41	ALL
	5		W3824	0062	20		33-21-41	ALL
	6		W3824	0066	20		33-21-41	ALL
D07474		1040/268/R60		RCPT-				ALL
	1		W3824	0075	22		33-21-41	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W3824	0071	18		33-21-41	ALL
	5		W3824	0072	20		33-21-41	ALL
	6		W3824	0076	20		33-21-41	ALL
D07476		1200/268/R60		PLUG-				ALL
	1		W3824	0085	22		33-21-41	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W3824	0081	18		33-21-41	ALL

HOOKUP LIST

D280N032

91-21-51

Section D07400

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07476		1200/268/R60		PLUG- (continued)				ALL
	5		W3824	0082	20		33-21-41	ALL
	6		W3824	0086	20		33-21-41	ALL
D07478		1200/268/R60		RCPT-				ALL
	1		W3824	0095	22		33-21-41	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W3824	0091	18		33-21-41	ALL
	5		W3824	0092	20		33-21-41	ALL
	6		W3824	0096	20		33-21-41	ALL
D07480		1360/268/R60		PLUG-				ALL
	1		W3824	0105	22		33-21-41	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W3824	0101	18		33-21-41	ALL
	5		W3824	0102	20		33-21-41	ALL
	6		W3824	0106	20		33-21-41	ALL
D07482		1360/268/R60		RCPT-				ALL
	1		W3824	0115	22		33-21-41	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W3824	0111	18		33-21-41	ALL
	5		W3824	0112	20		33-21-41	ALL
	6		W3824	0116	20		33-21-41	ALL
D07484		1520/268/R60		PLUG-				ALL
	1		W3824	0125	22		33-21-41	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W3824	0121	18		33-21-41	ALL
	5		W3824	0122	20		33-21-41	ALL
	6		W3824	0126	20		33-21-41	ALL
D07486		1520/268/R60		RCPT-				ALL
	1		W3824	0135	22		33-21-41	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W3824	0131	18		33-21-41	ALL

HOOKUP LIST

D280N032

91-21-51

Section D07400

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07486		1520/268/R60		RCPT- (continued)				ALL
	5		W3824	0132	20		33-21-41	ALL
	6		W3824	0136	20		33-21-41	ALL
D07488		1520/268/L60		PLUG-				ALL
	1		W3724	0135	22		33-21-32	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W3724	0131	18		33-21-32	ALL
	5		W3724	0132	20		33-21-32	ALL
	6		W3724	0136	20		33-21-32	ALL
D07496		470/273/R30		PLUG-EMERGENCY AISLE LIGHTS				ALL
	1	VG	W3632	0015	20		33-51-12	001-099
	1	VG	W3632	0014	22		33-51-12	115-199
	=1	UNUSED						ALL
D07498		470/273/R30		RECP-EMERGENCY AISLE LIGHTS				ALL
	1	VY	W3632	0055	20		33-51-12	001-099
	1	VY	W3632	0054	20		33-51-12	115-199

HOOKUP LIST

D280N032

91-21-51

Section D07400

Page 4 End

Dec 18/2007

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07500		770/272/R30		PLUG-EMERGENCY AISLE LIGHTS				001-099
D07500		770/273/R30		PLUG-EMERGENCY AISLE LIGHTS				115-199
	1	VG	W3632	0116	22		33-51-13	001-099
	1	VG	W3532	0112	22		33-51-13	115-199
	=1	UNUSED						ALL
D07502		770/272/R30		PLUG-EMERGENCY AISLE LIGHTS				001-099
D07502		770/273/R30		RECP-EMERGENCY AISLE LIGHTS				115-199
	1	VY	W3632	0156	20		33-51-13	001-099
	1	VY	W3532	0152	20		33-51-13	115-199
D07504		590/273/R30		PLUG-EMERGENCY AISLE LIGHTS				ALL
	1	VG	W3632	0166	20		33-51-12	001-099
	1	VG	W3532	0114	22		33-51-13	115-199
	=1	UNUSED						ALL
D07506		590/273/R30		RECP-EMERGENCY AISLE LIGHTS				ALL
	1	VY	W3632	0006	20		33-51-12	001-099
	1	VY	W3532	0154	20		33-51-13	115-199
D07508		420/273/L030		PLUG-EMERGENCY AISLE LIGHTS				001-099
D07508		420/273/L30		PLUG-EMERGENCY AISLE LIGHTS				115-199
	1	VG	W3532	0015	22		33-51-12	001-099
	1	VG	W3632	0166	22		33-51-12	115-199
	=1	UNUSED						ALL
D07510		420/273/L030		RECP-EMERGENCY AISLE LIGHTS				001-099
D07510		420/273/L30		RECP-EMERGENCY AISLE LIGHTS				115-199
	1	VY	W3532	0055	20		33-51-12	001-099
	1	VY	W3632	0006	20		33-51-12	115-199
D07512		520/273/L030		PLUG-EMERGENCY AISLE LIGHTS				001-099
D07512		520/273/R30		PLUG-EMERGENCY AISLE LIGHTS				115-199
	1	VG	W3532	0016	20		33-51-12	001-099
	1	VG	W3532	0014	20		33-51-12	115-199
	=1	UNUSED						ALL
D07514		520/273/L030		RECP-EMERGENCY AISLE LIGHTS				001-099
D07514		520/273/L30		RECP-EMERGENCY AISLE LIGHTS				115-199
	1	VY	W3532	0056	20		33-51-12	001-099

HOOKUP LIST

D280N032

91-21-51

Section D07500

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07514		520/273/L030		RECP-EMERGENCY AISLE LIGHTS (continued)				001-099
D07514		520/273/L30		RECP-EMERGENCY AISLE LIGHTS (continued)				115-199
	1	VY	W3532	0054	20		33-51-12	115-199
D07516		640/273/L030		PLUG-EMERGENCY AISLE LIGHTS				001-099
D07516		640/273/L30		PLUG-EMERGENCY AISLE LIGHTS				115-199
	1	VG	W3532	0113	22		33-51-13	001-099
	1	VG	W3532	0010	20		33-51-12	115-199
	=1	UNUSED						ALL
D07518		640/273/L030		RECP-EMERGENCY AISLE LIGHTS				001-099
D07518		640/273/L30		RECP-EMERGENCY AISLE LIGHTS				115-199
	1	VY	W3532	0153	20		33-51-13	001-099
	1	VY	W3532	0055	20		33-51-12	115-199
D07520		880/273/R30		PLUG-EMERGENCY AISLE LIGHTS				ALL
	1	VG	W3632	0716	22		33-51-14	001-099
	1	VG	W3532	0116	22		33-51-13	115-199
	=1	UNUSED						ALL
D07522		880/273/R30		RECP-EMERGENCY AISLE LIGHTS				ALL
	1	VY	W3632	0756	20		33-51-14	001-099
	1	VY	W3532	0156	20		33-51-13	115-199
D07524		820/273/L030		PLUG-EMERGENCY AISLE LIGHTS				001-099
D07524		820/273/R30		PLUG-EMERGENCY AISLE LIGHTS				115-199
	1	VG	W3532	0114	22		33-51-13	001-099
	1	VG	W3532	0113	22		33-51-13	115-199
	=1	UNUSED						ALL
D07526		820/273/L030		RECP-EMERGENCY AISLE LIGHTS				001-099
D07526		820/273/R30		RECP-EMERGENCY AISLE LIGHTS				115-199
	1	VY	W3532	0154	20		33-51-13	001-099
	1	VY	W3532	0153	20		33-51-13	115-199
D07528		1070/273/L30		PLUG-EMERGENCY AISLE LIGHTS				001-099
D07528		TBD/ /		PLUG-EMERGENCY AISLE LIGHTS				115-199
	1	VG	W3532	0116	20		33-51-13	001-099
	1	VG	W3634	0511	20		33-51-14	115-199
	=1	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D07500

Page 2

Dec 18/2007

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07530		1070/273/L30		RCPT-EMERGENCY AISLE LIGHTS				001-099
D07530		TBD/ /		RECP-EMERGENCY AISLE LIGHTS				115-199
	1	VY	W3532	0156	20		33-51-13	001-099
	1	VY	W3634	0551	20		33-51-14	115-199
D07532		950/273/L30		PLUG-EMERGENCY AISLE LIGHTS				001-099
D07532		TBD/ /		PLUG-EMERGENCY AISLE LIGHTS				115-199
	1	VG	W3532	0115	20		33-51-13	001-099
	1	VG	W3634	0510	20		33-51-14	115-199
	=1	UNUSED						ALL
D07534		950/273/L30		RCPT-EMERGENCY AISLE LIGHTS				001-099
D07534		TBD/ /		RECP-EMERGENCY AISLE LIGHTS				115-199
	1	VY	W3532	0155	20		33-51-13	001-099
	1	VY	W3634	0550	20		33-51-14	115-199
D07536		1190/286/L040		PLUG-EMERGENCY AISLE LIGHTS				ALL
	1	VG	W3534	0016	20		33-51-14	001-099
	1	VG	W3534	0015	22		33-51-14	115-199
	=1	UNUSED						ALL
D07538		1190/286/L040		RECP-EMERGENCY AISLE LIGHTS				ALL
	1	VY	W3534	0056	20		33-51-14	001-099
	1	VY	W3534	0055	20		33-51-14	115-199
D07540		1250/273/R30		PLUG-EMERGENCY AISLE LIGHTS				001-099
D07540		1250/273/R030		PLUG-EMERGENCY AISLE LIGHTS				115-199
	1	VG	W3634	0015	22		33-51-14	001-099
	1	VG	W3534	0014	20		33-51-14	115-199
	=1	UNUSED						ALL
D07542		1250/273/R30		RECP-EMERGENCY AISLE LIGHTS				001-099
D07542		1250/273/R030		RECP-EMERGENCY AISLE LIGHTS				115-199
	1	VY	W3634	0055	20		33-51-14	001-099
	1	VY	W3534	0054	20		33-51-14	115-199
D07544		1100/ /R		PLUG-EMERGENCY AISLE LIGHTS				001-099
D07544		TBD/ /		PLUG-EMERGENCY AISLE LIGHTS				115-199
	1	VG	W3634	0014	20		33-51-14	001-099
	1	VG	W3634	0015	22		33-51-14	115-199

HOOKUP LIST

D280N032

91-21-51

Section D07500

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07544		1100/ /R		PLUG-EMERGENCY AISLE LIGHTS (continued)				001-099
D07544		TBD/ /		PLUG-EMERGENCY AISLE LIGHTS (continued)				115-199
	= 1	UNUSED						ALL
D07546		1100/ /R		RECP-EMERGENCY AISLE LIGHTS				001-099
D07546		TBD/ /		RECP-EMERGENCY AISLE LIGHTS				115-199
	1	VY	W3634	0054	20		33-51-14	001-099
	1	VY	W3634	0055	20		33-51-14	115-199
D07556		1400/ /R		PLUG-EMERGENCY AISLE LIGHTS				001-099
D07556		TBD/ /		PLUG-EMERGENCY AISLE LIGHTS				115-199
	1	VG	W3634	0016	22		33-51-14	001-099
	1	VG	W3634	0113	20		33-51-15	115-199
	= 1	UNUSED						ALL
D07558		1400/ /R		RECP-EMERGENCY AISLE LIGHTS				001-099
D07558		TBD/ /		RECP-EMERGENCY AISLE LIGHTS				115-199
	1	VY	W3634	0056	20		33-51-14	001-099
	1	VY	W3634	0153	20		33-51-15	115-199
D07560		1480/ /R		PLUG-EMERGENCY AISLE LIGHTS				001-099
D07560		1530/270/R35		PLUG-EMERGENCY AISLE LIGHTS				115-199
	1	VG	W3634	0116	22		33-51-15	001-099
	1	VG	W3634	0114	22		33-51-15	115-199
	= 1	UNUSED						ALL
D07562		1480/ /R		RECP-EMERGENCY AISLE LIGHTS				001-099
D07562		1530/270/R35		RECP-EMERGENCY AISLE LIGHTS				115-199
	1	VY	W3634	0156	20		33-51-15	001-099
	1	VY	W3634	0154	20		33-51-15	115-199
D07564		1585/273/L030		PLUG-EMERGENCY AISLE LIGHTS				ALL
	1	VG	W3534	0116	22		33-51-15	001-099
	1	VG	W3534	0114	22		33-51-15	115-199
	= 1	UNUSED						ALL
D07566		1585/273/L030		RECP-EMERGENCY AISLE LIGHTS				ALL
	1	VY	W3534	0156	20		33-51-15	001-099
	1	VY	W3534	0154	20		33-51-15	115-199

HOOKUP LIST

D280N032

91-21-51

Section D07500

Page 4

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07568		1460/273/L030		PLUG-EMERGENCY AISLE LIGHTS				ALL
	1	VG	W3534	0115	20		33-51-15	001-099
	1	VG	W3534	0113	22		33-51-14	115-199
	=1	UNUSED						ALL
D07570		1460/273/L030		RECP-EMERGENCY AISLE LIGHTS				ALL
	1	VY	W3534	0155	20		33-51-15	001-099
	1	VY	W3534	0153	20		33-51-14	115-199

HOOKUP LIST

D280N032

91-21-51

Section D07500

Page 5 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07602		980/ /R		PLUG-EMERGENCY AISLE LIGHTS				001-099
D07602		TBD/ /		PLUG-EMERGENCY AISLE LIGHTS				115-199
	1	VG	W3634	0516	20		33-51-14	001-099
	1	VG	W3634	0509	22		33-51-14	115-199
	=1	UNUSED						ALL
D07604		980/ /R		RECP-EMERGENCY AISLE LIGHTS				001-099
D07604		TBD/ /		RECP-EMERGENCY AISLE LIGHTS				115-199
	1	VY	W3634	0556	20		33-51-14	001-099
	1	VY	W3634	0559	20		33-51-14	115-199
D07608		P037-00/ /		RELAY SOCKET (PLATE 'B')				001-099
	A1		W1270	0313	24		21-44-11	001-099
	A2		W1270	6015	24		21-44-11	001-099
	A3		W1270	6019	24		21-44-11	001-099
	B1	UNUSED						001-099
	B2	UNUSED						001-099
	B3	UNUSED						001-099
	X1		W1270	6454	20		21-44-11	001-099
	X2		W1270	6455	20		21-44-11	001-099
D07612		670/295/L25		RCPT				001-099
	1		W3576	0017	22		33-22-12	001-099
	2		W3576	0024	22		33-22-12	001-099
	3		W3576	0051	20		33-22-12	001-099
	4	UNUSED						001-099
	5	UNUSED						001-099
D07656		1246/290/L022		RCPT-LAV B PROVISIONS				001-099
	1	UNUSED						001-099
	2	UNUSED						001-099
	3	16	W3574	0005	16		33-26-21	001-099
	4	16	W3574	0005	16		33-26-21	001-099
	5	UNUSED						001-099
	6	UNUSED						001-099
	7	UNUSED						001-099
	8	UNUSED						001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D07600

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07656		1246/290/L022		RCPT-LAV B PROVISIONS (continued)				001-099
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
	16	UNUSED						001-099
	17	UNUSED						001-099
	18	UNUSED						001-099
	19	UNUSED						001-099
	20	UNUSED						001-099
	21	UNUSED						001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
	25	UNUSED						001-099
	26	UNUSED						001-099
	27	UNUSED						001-099
	28		W3574	0001	16		SPARE	001-099
	29		W3574	0001	16		SPARE	001-099
	30	UNUSED						001-099
	31		W3574	0002	16		SPARE	001-099
	32		W3574	0002	16		SPARE	001-099
	33		W3574	0003	16		SPARE	001-099
	34	UNUSED						001-099
	35	UNUSED						001-099
	36	UNUSED						001-099
	37	UNUSED						001-099
	38	UNUSED						001-099
	39	UNUSED						001-099
	40	UNUSED						001-099
	41		W3574	0003	16		SPARE	001-099
	42		W3574	0004	16		SPARE	001-099
	43		W3574	0004	16		SPARE	001-099
D07658		P008-54/ /		PLUG PRINTER				001-099
	A		W2067	0011	22		31-31-02	001-099
	B	UNUSED						001-099
	C		W2067	0012	20		31-31-02	001-099
	D		W2067	3501B	24		31-31-02	001-099
	E		W2067	0009	20		31-31-02	001-099
	F		W2067	0010	20		31-31-02	001-099
	G		W2067	3501Y	24		31-31-02	001-099

HOOKUP LIST

D280N032

91-21-51

Section D07600

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07658		P008-54/ /		PLUG PRINTER (continued)				001-099
	H		W2067	0005	24		31-31-02	001-099
	J	UNUSED						001-099
	K		W2067	2503R	24		31-31-02	001-099
	L	UNUSED						001-099
	M		W2067	2503B	24		31-31-02	001-099
	N	UNUSED						001-099
	P		W2067	0008	20		31-31-02	001-099
	R		W2067	3501R	24		31-31-02	001-099
	S	UNUSED						001-099
	T	UNUSED						001-099
	U	UNUSED						001-099
	V	UNUSED						001-099
			W2067	0006	20		31-31-02	001-099
			W2067	0007	20		31-31-02	001-099
			W2067	2503Z			31-31-02	001-099
			W2067	3501Z			31-31-02	001-099
D07660		P71/ /		RELAY SOCKET				003-099
	A1		W1254	0151	24		24-25-13	003-099
	A2		W1254	0152	20		24-31-11	003-099
	A3	UNUSED						003-099
	B1	UNUSED						003-099
	B2	UNUSED						003-099
	B3	UNUSED						003-099
	X1		W1254	0116	22		24-25-11	003-099
	X1		W1254	0117	22		24-25-11	003-099
	X2		W1254	0115	20		24-25-11	003-099
D07666		286 P5/267/L39		PLUG				001-099
D07666		P5/ /		PLUG				115-199
	1	UNUSED						ALL
	2		W2070	0620	20		33-13-32	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W2070	0617	20		33-13-32	ALL
	6		W2070	0617	20		33-13-32	ALL
	7		W2070	0619	20		33-13-32	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D07600

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07666		286 P5/267/L39		PLUG (continued)				001-099
D07666		P5/ /		PLUG (continued)				115-199
	11		W2070	0618	20		33-13-32	ALL
	12		W2070	0614	20		33-13-32	ALL
D07668		P005-00/267/L039		PLUG				001-099
D07668		P5/ /		PLUG				115-199
	A1		W2070	0622	20		33-13-32	ALL
	A2		W2070	0621	20		33-13-32	ALL
	A3		W2070	0620	20		33-13-32	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W2070	0615	20		33-13-32	ALL
	X2		W2070	0616	20		33-13-32	ALL
D07672		E001-01/ /		RCPT				003-099
	A		W1310	0026	20		24-25-12	003-099
	B		W1310	0025	20		24-25-12	003-099
	C		W1310	0024	20		24-25-12	003-099
	D		W1310	0029	08		24-31-11	003-099
	E		W1310	0027	16		24-25-12	003-099
	F	UNUSED						003-099
	G	UNUSED						003-099
	H		W1310	0028	08		24-25-12	003-099
D07678		E6 RLY/PNL/		RELAY SOCKET				002-008, 010-099
	A1	UNUSED						002-008, 010-099
	A2		W1024	0403	24		24-33-12	002-008, 010-099
	A3		W1024	0404	24		24-33-12	002-008, 010-099
	B1	UNUSED						002-008, 010-099
	B2	UNUSED						002-008, 010-099
	B3	UNUSED						002-008, 010-099
	X1		W1024	0405	24		24-33-12	002-008, 010-099
	X2		W1024	0082	24		24-33-12	002-008, 010-099
D07688		200/180/L001		RCPT-				ALL
	1		W4028	1002Z			78-34-11	ALL
	2		W4028	0007	20		78-36-11	ALL
	3		W4028	1005	22		78-36-11	ALL
	4		W4028	FRAV			78-36-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D07600

Page 4

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07688		200/180/L001		RCPT- (continued)				ALL
	5		W4028	1002	20		78-34-11	001-002, 115-199
	5	18	W4028	1002	18		78-34-11	003-099
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W4028	1004	20		78-34-11	001-002, 115-199
	8	18	W4028	1004	18		78-34-11	003-099
	9		W4028	1004Z			78-34-11	ALL
	10	UNUSED						ALL
	11		W4028	0005	20		78-36-11	ALL
	12		W4028	0004	20		78-36-11	ALL
	CAP	Y	W4028	0012	22		SPARE	ALL
			W4028	0006	20		78-36-11	ALL
			W4028	1005Z			78-36-11	ALL
			W4028	FRAV			78-36-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D07600

Page 5 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07710		200/185/L001		RCPT				ALL
	1		W4108	1002Z			78-34-21	ALL
	2		W4108	0007	20		78-36-21	ALL
	3		W4108	1005	22		78-36-21	ALL
	4		W4108	FRAV			78-36-21	ALL
	5	18	W4108	1002	18		78-34-21	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	18	W4108	1004	18		78-34-21	ALL
	9		W4108	1004Z			78-34-21	ALL
	10	UNUSED						ALL
	11		W4108	0005	20		78-36-21	ALL
	12		W4108	0004	20		78-36-21	ALL
CAP	Y		W4108	0012	22		SPARE	001-002, 115-199
CAP	Y		W4108	0012	22		78-36-21	003-099
			W4108	0006	20		78-36-21	ALL
			W4108	1005Z			78-36-21	ALL
			W4108	FRAV			78-36-21	ALL
D07718		P36/ /		SOCKET-INFLIGHT INHIBIT RELAY,L(PLATE A)				001-099
D07718		P036-00/ /		SOCKET-INFLIGHT INHIBIT RELAY,L(PLATE A)				115-199
	1	UNUSED						ALL
	2		W1260	6458	24		78-36-11	ALL
	3		W1260	6405	24		78-36-11	ALL
	4	UNUSED						ALL
	5		W1260	6413	24		78-36-11	ALL
	6	UNUSED						ALL
	7		W1260	6406	24		78-36-11	ALL
	8	UNUSED						ALL
D07720		P037-00/ /		RELAY SOCKET - (PLATE A) (SB78-32)				001-002
D07720		P037-00/ /		RELAY SOCKET - (PLATE 'A')				003-099
D07720		P037-00/ /		RELAY SOCKET (PLATE A)				115-199
	1	UNUSED						ALL
	2		W1270	6550	24		78-36-21	ALL
	3		W1270	6511	24		78-36-21	ALL
	4	UNUSED						ALL
	5		W1270	6523	24		78-36-21	ALL
	6	UNUSED						ALL
	7		W1270	6512	24		78-36-21	ALL
	8	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D07700

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07734		1039/187/R4		PLUG				009-099
	1	UNUSED						009-099
	2		W2516	3507R	18		28-22-32	009-099
	3		W2516	3507Y	18		28-22-32	009-099
	4		W2516	0004	18		28-22-32	009-099
	5		W2516	3507B	18		28-22-32	009-099
	6	UNUSED						009-099
	7		W2516	0008	18		28-22-32	009-099
D07736		P33/ /		RELAY SOCKET				009-099
	1		W1230	0672	20		28-22-31	009-099
	2	UNUSED						009-099
	3		W1230	0735	20		28-22-31	009-099
	4	UNUSED						009-099
	5		W1230	0756	24		28-22-31	009-099
	6		W1230	0673	20		28-22-31	009-099
	7		W1230	0759	24		28-22-31	009-099
	8	UNUSED						009-099
	9	UNUSED						009-099
	10	UNUSED						009-099
	11	UNUSED						009-099
	12		W1230	0757	20		28-22-31	009-099
	13		W1230	0671	24		28-22-31	009-099
	14		W1230	0758	20		28-22-31	009-099
D07738		P33/ /		RELAY SOCKET				009-099
	1		W1230	0763	20		28-22-32	009-099
	2	UNUSED						009-099
	3		W1230	0764	20		28-22-32	009-099
	4	UNUSED						009-099
	5		W1230	0765	24		28-22-32	009-099
	6		W1230	0767	20		28-22-32	009-099
	7		W1230	0769	24		28-22-32	009-099
	8	UNUSED						009-099
	9	UNUSED						009-099
	10	UNUSED						009-099
	11	UNUSED						009-099
	12		W1230	0766	20		28-22-32	009-099
	13		W1230	0760	24		28-22-32	009-099
	14		W1230	0768	24		28-22-32	009-099

HOOKUP LIST

D280N032

91-21-51

Section D07700

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07744		1040/184/L013		PLUG				009-099
	1	UNUSED						009-099
	2		W2416	4251R	18		28-22-31	009-099
	3		W2416	4251Y	18		28-22-31	009-099
	4		W2416	0003	18		28-22-31	009-099
	5		W2416	4251B	18		28-22-31	009-099
	6		W2416	4251G	18		28-22-31	009-099
	7		W2416	0015	18		28-22-31	009-099
D07750		P037-00/ /		RELAY SOCKET - (PLATE A) (SB78-32)				001-002
D07750		P037-00/ /		RELAY SOCKET - (PLATE 'A')				003-099
D07750		P037-00/ /		RELAY SOCKET (PLATE A)				115-199
	A1		W1270	6504	22		32-61-11	ALL
	A2		W1270	6505	22		32-61-11	ALL
	A3		W1270	6506	22		32-61-11	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1270	6509	22		32-61-11	ALL
	X2		W1270	6510	22		32-61-11	ALL
D07766		P037-00/ /		RELAY SOCKET (PLATE A) (SB78-32)				001-002
D07766		P037-00/ /		RELAY SOCKET (PLATE 'A')				003-099, 115-199
	A1		W1270	6542	18		78-34-61	ALL
	A2		W1270	6545	18		78-34-61	ALL
	A3		W1270	6541	18		78-34-61	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1270	6543	18		78-34-61	ALL
	X2		W1270	6544	18		78-34-61	ALL
D07768		P037-00/ /		RELAY SOCKET (PLATE A)(SB78-32)				001-002
D07768		P37/ /		RELAY SOCKET (PLATE 'A')				003-099
D07768		P037-00/ /		RELAY SOCKET (PLATE 'A')				115-199
	A1		W1270	6537	22		78-34-21	ALL
	A2		W1270	6536	22		78-34-21	ALL
	A3		W1270	6535	22		78-34-21	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D07700

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07768		P037-00/ /		RELAY SOCKET (PLATE A)(SB78-32) (continued)				001-002
D07768		P37/ /		RELAY SOCKET (PLATE 'A') (continued)				003-099
D07768		P037-00/ /		RELAY SOCKET (PLATE 'A') (continued)				115-199
	B3	UNUSED						ALL
	X1		W1270	6537	22		78-34-21	ALL
	X1		W1270	6538	22		78-34-21	ALL
	X2		W1270	6539	22		78-34-21	ALL
D07776		P36/ /		SOCKET - SYNC LOCK RELAY (PLATE A)				001-002
D07776		P36/ /		SOCKET-SYNC LOCK RELAY (PLATE 'A')				003-099
D07776		P036-00/ /		SOCKET-SYNC LOCK RELAY (PLATE 'A')				115-199
	A1		W1260	1122	20		78-34-51	ALL
	A2		W1260	1125	18		78-34-51	ALL
	A3		W1260	1123	20		78-34-51	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1260	1124	20		78-34-51	ALL
	X2		W1260	6457	20		78-34-51	ALL
	DED		W1260	1125Z			78-34-51	ALL
			W1260	1122Z			78-34-51	ALL
			W1260	1123Z			78-34-51	ALL
			W1260	1124Z			78-34-51	ALL
D07778		P037-00/ /		RELAY SOCKET (PLATE A) (SB78-32)				001-002
D07778		P37/ /		RELAY SOCKET (PLATE 'A')				003-099
D07778		P037-00/ /		RELAY SOCKET (PLATE 'A')				115-199
	A1		W1270	1113	20		78-34-61	ALL
	A2		W1270	1112	18		78-34-61	ALL
	A3		W1270	1114	20		78-34-61	ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1270	1115	20		78-34-61	ALL
	X2		W1270	6548	20		78-34-61	ALL
	DED		W1270	1112Z			78-34-61	ALL
			W1270	1113Z			78-34-61	ALL
			W1270	1114Z			78-34-61	ALL
			W1270	1115Z			78-34-61	ALL

HOOKUP LIST

D280N032

91-21-51

Section D07700

Page 4 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07814		907.4/147/R033		PLUG				009-099
	1		W2502	4501R	20		36-11-31	009-099
	2		W2502	4501G	20		36-11-31	009-099
	3		W2502	1032	20		36-11-31	009-099
	4		W2502	4501B	20		36-11-31	009-099
	5		W2502	2505R	20		36-11-31	009-099
	6		W2502	2505B	20		36-11-31	009-099
	7		W2502	4501Y	20		36-11-31	009-099

HOOKUP LIST

D280N032

91-21-51

Section D07800

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D07994		850/272/R049		PLUG-				007-099
	1	16	W3632	0701	16		33-51-14	007-099
	2		W3632	0702	22		33-51-14	007-099
	3		W3632	0703	22		33-51-14	007-099
	4		W3632	0704	22		33-51-14	007-099
	5	16	W3632	0705	16		33-51-14	007-099
	6	16	W3632	0705	16		33-51-14	007-099
	7		W3632	0707	20		33-51-14	007-099
	8		W3632	0708	24		33-51-14	007-099
	9	UNUSED						007-099
	10		W3632	0710	20		33-51-22	007-099
	11	16	W3632	0711	16		SPARE	007-099
	12	16	W3632	0712	16		SPARE	007-099
	13	16	W3632	0713	16		SPARE	007-099
	14	UNUSED						007-099
	15	UNUSED						007-099
	16		W3632	0716	22		33-51-14	007-099
	17	UNUSED						007-099
	18	UNUSED						007-099
	19	UNUSED						007-099
	20		W3632	0720	20		33-51-14	007-099
	21	UNUSED						007-099
	22	UNUSED						007-099
	23	UNUSED						007-099
	24		W3632	0720	20		33-51-14	007-099

HOOKUP LIST

D280N032

91-21-51

Section D07900

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10656		1183/190/R003		PLUG				001-099
D10656		1183/190/R03		PLUG				115-199
	1	UNUSED						ALL
	2		W2626	0056	20		26-23-11	ALL
	3		W2626	0057	20		26-23-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D10600

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D10750		P037-00/ /		RELAY SOCKET (PLATE 'A')				ALL
	A1		W1270	5751	24		30-31-12	ALL
	A2		W1270	0488	24		30-31-12	ALL
	A3		W1270	5766	24		30-31-12	ALL
	B1		W1270	5750	24		30-31-12	ALL
	B2		W1270	5748	24		30-31-12	001-099
	B2		W1270	5749	24		30-31-12	115-199
	B3		W1270	5762	24		30-31-12	ALL
	C1	UNUSED						ALL
	C2		W1270	5747	24		30-31-12	ALL
	C3		W1270	5755	24		30-31-12	ALL
	D1	UNUSED						ALL
	D2		W1270	5757	24		30-31-12	ALL
	D3		W1270	5756	24		30-31-12	ALL
	X1		W1270	5858	22		32-09-12	ALL
	X1		W1270	6031	22		32-09-12	003-099
	X2		W1270	6833	20		32-09-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D10700

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11710		P037-00/ /		RELAY SOCKET (PLATE B)				ALL
	A1		W1270	8131	20		28-22-11	ALL
	A2		W1270	8117	20		28-22-11	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1270	8132	20		28-22-11	ALL
	X2		W1270	8133	20		28-22-11	ALL
D11712		P037-00/ /		RELAY-SOCKET (PLATE B)				ALL
	A1	UNUSED						ALL
	A2		W1270	8119	20		28-22-11	ALL
	A3		W1270	8135	20		28-22-11	ALL
	B1	UNUSED						ALL
	B2		W1270	8136	20		28-22-11	ALL
	B3		W1270	8137	20		28-22-11	ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1270	8131	20		28-22-11	ALL
	X2		W1270	8127	20		28-22-11	ALL
D11714		P033-00/ /		RELAY SOCKET (PLATE D)				ALL
	A1	UNUSED						ALL
	A2		W1230	0836	20		28-22-11	ALL
	A3		W1230	0685	20		28-22-11	ALL
	B1	UNUSED						ALL
	B2		W1230	0133	20		28-22-11	ALL
	B3		W1230	0134	20		28-22-11	ALL
	C1	UNUSED						ALL
	C2	UNUSED						ALL
	C3	UNUSED						ALL
	D1	UNUSED						ALL
	D2	UNUSED						ALL
	D3	UNUSED						ALL
	X1		W1230	0831	20		28-22-11	ALL
	X2		W1230	0834	20		28-22-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D11700

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11716		P033-00/ /		RELAY SOCKET (PLATE D)				ALL
	A1		W1230	0831	20		28-22-11	ALL
	A2		W1230	0829	20		28-22-11	ALL
	A3	UNUSED						ALL
	B1	UNUSED						ALL
	B2	UNUSED						ALL
	B3	UNUSED						ALL
	X1		W1230	0837	20		28-22-11	ALL
	X2		W1230	0832	20		28-22-11	ALL
D11718		IRSS160/ /		PLUG				ALL
	1		W4030	8991H	22		28-41-41	ALL
	2		W4030	6009	22		28-41-41	ALL
	3		W4030	FREE			28-41-41	ALL
	4		W4030	6010	22		28-41-41	ALL
	5		W4030	8991RY	22		28-41-41	ALL
	6		W4030	6011	22		28-41-41	ALL
	7		W4030	6012	22		28-41-41	ALL
	8		W4030	FRED			28-41-41	ALL
	9		W4030	6013	22		28-41-41	ALL
	10		W4030	6014	22		28-41-41	ALL
	11		W4030	8991B	22		28-41-41	ALL
	12		W4030	8991RB	22		28-41-41	ALL
	13		W4030	8991RG	22		28-41-41	ALL
	14		W4030	8991RV	22		28-41-41	ALL
	15		W4030	8991R	22		28-41-41	ALL
	CAP	Y	W4030	6009	22		28-41-41	ALL
	CAP	Y	W4030	6010	22		28-41-41	ALL
	CAP	Y	W4030	6011	22		28-41-41	ALL
	CAP	Y	W4030	6012	22		28-41-41	ALL
	CAP	Y	W4030	6013	22		28-41-41	ALL
	CAP	Y	W4030	6014	22		28-41-41	ALL
			W4030	8991ZA			28-41-41	ALL
			W4030	FRED			28-41-41	ALL
			W4030	FREE			28-41-41	ALL
	PERB		W4030	8991Z			28-41-41	ALL
	PERB		W4030	YAAA			28-41-41	ALL
D11720		IRSS160/ /		PLUG				ALL
	1		W4022	1002	20		28-41-41	ALL
	2	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D11700

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D11720		IRSS160/ /		PLUG (continued)				ALL
	3		W4022	FRAA			28-41-41	ALL
	4	UNUSED						ALL
	5		W4022	0008	20		28-41-41	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W4022	FRAB			28-41-41	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W4022	2002B	20		28-41-41	ALL
	12		W4022	0005	20		28-41-41	ALL
	13		W4022	0006	20		28-41-41	ALL
	14		W4022	0007	20		28-41-41	ALL
	15		W4022	2002R	20		28-41-41	ALL
			W4022	1002Z			28-41-41	ALL
			W4022	FRAA			28-41-41	ALL
			W4022	FRAB			28-41-41	ALL

HOOKUP LIST

D280N032

91-21-51

Section D11700

Page 3 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D21001J		E002-01/ /		RCPT-				002
	1		W1171	5025W	24		34-43-15	002
	2		W1171	5025B	24		34-43-15	002
	3		W1171	5025Z			34-43-15	002
	4	UNUSED						002
	5	UNUSED						002
	6	UNUSED						002
	7		W1171	5026W	24		34-43-15	002
	8		W1171	5026B	24		34-43-15	002
	9		W1171	5026Z			34-43-15	002
	10	UNUSED						002
	11	UNUSED						002
	12	UNUSED						002
	13	UNUSED						002
	14	UNUSED						002
	15	UNUSED						002
	16		W1171	5297R	22		34-43-11	002
	17		W1171	5297B	22		34-43-11	002
	18		W1171	5297Z			34-43-11	002
	19	UNUSED						002
	20	UNUSED						002
	21	UNUSED						002
	22	UNUSED						002
	23	UNUSED						002
	24	UNUSED						002
	25	UNUSED						002
	26	UNUSED						002
	27		W1171	5280R	22		34-22-18	002
	28		W1171	5280B	22		34-22-18	002
	29		W1171	FRON			34-22-18	002
	30	UNUSED						002
	31	UNUSED						002
	32	UNUSED						002
	33	UNUSED						002
	34	UNUSED						002
	35	UNUSED						002
	36	UNUSED						002
	37	UNUSED						002
	38	UNUSED						002
	39	UNUSED						002
	40	UNUSED						002

HOOKUP LIST

D280N032

91-21-51

Section D21000

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D21001J		E002-01/ /		RCPT- (continued)				002
	41	UNUSED						002
	42	UNUSED						002
	43	UNUSED						002
	44	UNUSED						002
	45	UNUSED						002
	46	UNUSED						002
	47	UNUSED						002
	48	UNUSED						002
	49	UNUSED						002
	50	UNUSED						002
	51	UNUSED						002
	52	UNUSED						002
	53	UNUSED						002
	54	UNUSED						002
	55	UNUSED						002
			W1171	0815	20		34-22-18	002
			W1171	5280Z			34-22-18	002
			W1171	FRON			34-22-18	002
D21001P		E002-01/ /		PLUG- CONDUCTIVE (S/B: 757-34-0200)				002
	1		W2379	2003W	24		34-43-15	002
	2		W2379	2003B	24		34-43-15	002
	3		W2379	2003Z			34-43-15	002
	4	UNUSED						002
	5	UNUSED						002
	6	UNUSED						002
	7		W2379	2005W	24		34-43-15	002
	8		W2379	2005B	24		34-43-15	002
	9		W2379	2005Z			34-43-15	002
	10	UNUSED						002
	11	UNUSED						002
	12	UNUSED						002
	13	UNUSED						002
	14	UNUSED						002
	15	UNUSED						002
	16		W2379	2009R	22		34-43-11	002
	17		W2379	2009B	22		34-43-11	002
	18		W2379	2009Z			34-43-11	002
	19	UNUSED						002
	20	UNUSED						002

HOOKUP LIST

D280N032

91-21-51

Section D21000

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D21001P		E002-01/ /		PLUG- CONDUCTIVE (S/B: 757-34-0200) (continued)				002
	21	UNUSED						002
	22	UNUSED						002
	23	UNUSED						002
	24	UNUSED						002
	25	UNUSED						002
	26	UNUSED						002
	27		W2379	2501R	22		34-22-18	002
	28		W2379	2501B	22		34-22-18	002
	29		W2379	2501Z			34-22-18	002
	30	UNUSED						002
	31	UNUSED						002
	32	UNUSED						002
	33	UNUSED						002
	34	UNUSED						002
	35	UNUSED						002
	36	UNUSED						002
	37	UNUSED						002
	38	UNUSED						002
	39	UNUSED						002
	40	UNUSED						002
	41	UNUSED						002
	42	UNUSED						002
	43	UNUSED						002
	44	UNUSED						002
	45	UNUSED						002
	46	UNUSED						002
	47	UNUSED						002
	48	UNUSED						002
	49	UNUSED						002
	50	UNUSED						002
	51	UNUSED						002
	52	UNUSED						002
	53	UNUSED						002
	54	UNUSED						002
	55	UNUSED						002

HOOKUP LIST

D280N032

91-21-51

Section D21000

Page 3 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D22001J		N002-02/ /		RCPT- (S/B: 757-34-0200)				002
	1		W1173	5310W	24		34-43-15	002
	2		W1173	5310B	24		34-43-15	002
	3		W1173	5310Z			34-43-15	002
	4		W1173	5285W	24		34-43-15	002
	5		W1173	5285B	24		34-43-15	002
	6		W1173	5285Z			34-43-15	002
	7	UNUSED						002
	8	UNUSED						002
	9	UNUSED						002
	10	UNUSED						002
	11	UNUSED						002
	12	UNUSED						002
	13		W1173	5297R	22		34-43-11	002
	14		W1173	5297B	22		34-43-11	002
	15		W1173	5297Z			34-43-11	002
	16	UNUSED						002
	17	UNUSED						002
	18	UNUSED						002
	19	UNUSED						002
	20	UNUSED						002
	21	UNUSED						002
	22		W1173	5239R	22		34-22-28	002
	23		W1173	5239B	22		34-22-28	002
	24		W1173	FRBG			34-22-28	002
	25	UNUSED						002
	26	UNUSED						002
	27	UNUSED						002
	28	UNUSED						002
	29	UNUSED						002
	30	UNUSED						002
	31	UNUSED						002
	32	UNUSED						002
	33	UNUSED						002
	34	UNUSED						002
	35	UNUSED						002
	36	UNUSED						002
	37	UNUSED						002
	38	UNUSED						002
	39	UNUSED						002
	40	UNUSED						002

HOOKUP LIST

D280N032

91-21-51

Section D22000

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D22001J		N002-02/ /		RCPT- (S/B: 757-34-0200) (continued)				002
	41	UNUSED						002
			W1173	0570	20		34-22-28	002
			W1173	5239Z			34-22-28	002
			W1173	FRBG			34-22-28	002
D22001P		E002-02/ /		PLUG- CONDUCTIVE (S/B: 757-34-0200)				002
	1		W2381	2002W	24		34-43-15	002
	2		W2381	2002B	24		34-43-15	002
	3		W2381	2002Z			34-43-15	002
	4		W2381	2012W	24		34-43-15	002
	5		W2381	2012B	24		34-43-15	002
	6		W2381	2012Z			34-43-15	002
	7	UNUSED						002
	8	UNUSED						002
	9	UNUSED						002
	10	UNUSED						002
	11	UNUSED						002
	12	UNUSED						002
	13		W2381	2009R	22		34-43-11	002
	14		W2381	2009B	22		34-43-11	002
	15		W2381	2009Z			34-43-11	002
	16	UNUSED						002
	17	UNUSED						002
	18	UNUSED						002
	19	UNUSED						002
	20	UNUSED						002
	21	UNUSED						002
	22		W2381	2503R	22		34-22-28	002
	23		W2381	2503B	22		34-22-28	002
	24		W2381	2503Z			34-22-28	002
	25	UNUSED						002
	26	UNUSED						002
	27	UNUSED						002
	28	UNUSED						002
	29	UNUSED						002
	30	UNUSED						002
	31	UNUSED						002
	32	UNUSED						002
	33	UNUSED						002
	34	UNUSED						002

HOOKUP LIST

D280N032

91-21-51

Section D22000

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D22001P		E002-02/ /		PLUG- CONDUCTIVE (S/B: 757-34-0200) (continued)				002
	35	UNUSED						002
	36	UNUSED						002
	37	UNUSED						002
	38	UNUSED						002
	39	UNUSED						002
	40	UNUSED						002
	41	UNUSED						002

HOOKUP LIST

D280N032

91-21-51

Section D22000

Page 3 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D23003J		E002-03/ /		RECPT- (S/B 757-34-0200)				002
	1	UNUSED						002
	2	UNUSED						002
	3	UNUSED						002
	4		W1175	5021Z			34-43-15	002
	5		W1175	5021W	24		34-43-15	002
	6		W1175	5021B	24		34-43-15	002
	7		W1175	0599	22		34-46-14	002
	8		W1175	0624	22		34-46-14	002
	9		W1175	5157W	24		34-46-14	002
	10		W1175	5157B	24		34-46-14	002
	11		W1175	FRGZ			34-46-14	002
	12		W1175	5165R	22		34-46-14	002
	13		W1175	5165B	22		34-46-14	002
	14		W1175	FRDR			34-46-14	002
	15	UNUSED						002
	16	UNUSED						002
	17	UNUSED						002
	18	UNUSED						002
	19		W1175	5148R	22		34-22-28	002
	20		W1175	5148B	22		34-22-28	002
	21		W1175	5148Z			34-22-28	002
	22		W1175	0585	22		34-22-28	002
	23		W1175	0586	22		34-22-28	002
	24	UNUSED						002
	25	UNUSED						002
	26	UNUSED						002
	27	UNUSED						002
	28	UNUSED						002
	29	UNUSED						002
	30	UNUSED						002
	31	UNUSED						002
	32	UNUSED						002
	33	UNUSED						002
	34	UNUSED						002
	35	UNUSED						002
	36	UNUSED						002
	37	UNUSED						002
	38	UNUSED						002
	39	UNUSED						002
	40	UNUSED						002

HOOKUP LIST

D280N032

91-21-51

Section D23000

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D23003J		E002-03/ /		RECPT- (S/B 757-34-0200) (continued)				002
	41	UNUSED						002
	42	UNUSED						002
	43	UNUSED						002
	44	UNUSED						002
	45	UNUSED						002
	46	UNUSED						002
	47	UNUSED						002
	48	UNUSED						002
	49	UNUSED						002
	50	UNUSED						002
	51	UNUSED						002
	52	UNUSED						002
	53	UNUSED						002
	54	UNUSED						002
	55	UNUSED						002
			W1175	0680	20		34-46-14	002
			W1175	0698	20		34-46-14	002
			W1175	5157Z			34-46-14	002
			W1175	5165Z			34-46-14	002
			W1175	FRDR			34-46-14	002
			W1175	FRGZ			34-46-14	002
D23003P		AE0203/ /		PLUG- CONDUCTIVE (S/B: 757-34-0200)				002
	1	UNUSED						002
	2	UNUSED						002
	3	UNUSED						002
	4		W2381	2001Z			34-43-15	002
	5		W2381	2001W	24		34-43-15	002
	6		W2381	2001B	24		34-43-15	002
	7		W2381	0001	22		34-46-14	002
	8		W2381	0002	22		34-46-14	002
	9		W2381	2005W	24		34-46-14	002
	10		W2381	2005B	24		34-46-14	002
	11		W2381	2005Z			34-46-14	002
	12		W2381	2008R	22		34-46-14	002
	13		W2381	2008B	22		34-46-14	002
	14		W2381	2008Z			34-46-14	002
	15	UNUSED						002
	16	UNUSED						002
	17	UNUSED						002

HOOKUP LIST

D280N032

91-21-51

Section D23000

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D23003P		AE0203/ /		PLUG- CONDUCTIVE (S/B: 757-34-0200) (continued)				002
	18	UNUSED						002
	19		W2381	2504R	22		34-22-28	002
	20		W2381	2504B	22		34-22-28	002
	21		W2381	2504Z			34-22-28	002
	22		W2381	0023	22		34-22-28	002
	23		W2381	0024	22		34-22-28	002
	24	UNUSED						002
	25	UNUSED						002
	26	UNUSED						002
	27	UNUSED						002
	28	UNUSED						002
	29	UNUSED						002
	30	UNUSED						002
	31	UNUSED						002
	32	UNUSED						002
	33	UNUSED						002
	34	UNUSED						002
	35	UNUSED						002
	36	UNUSED						002
	37	UNUSED						002
	38	UNUSED						002
	39	UNUSED						002
	40	UNUSED						002
	41	UNUSED						002
	42	UNUSED						002
	43	UNUSED						002
	44	UNUSED						002
	45	UNUSED						002
	46	UNUSED						002
	47	UNUSED						002
	48	UNUSED						002
	49	UNUSED						002
	50	UNUSED						002
	51	UNUSED						002
	52	UNUSED						002
	53	UNUSED						002
	54	UNUSED						002
	55	UNUSED						002

HOOKUP LIST

D280N032

91-21-51

Section D23000

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D23005J		E002-03/ /		RECPT- (S/B 757-34-0200)				002
	1		W1175	0597	22		34-46-14	002
	2		W1175	5156W	24		34-46-14	002
	3		W1175	5156B	24		34-46-14	002
	4		W1175	FRGX			34-46-14	002
	5		W1175	0598	22		34-46-14	002
	6		W1175	5018W	24		34-43-15	002
	7		W1175	5018B	24		34-43-15	002
	8		W1175	5018Z			34-43-15	002
	9	UNUSED						002
	10	UNUSED						002
	11	UNUSED						002
	12	UNUSED						002
	13		W1175	5164R	22		34-46-14	002
	14		W1175	5164B	22		34-46-14	002
	15		W1175	FRDJ			34-46-14	002
	16	UNUSED						002
	17	UNUSED						002
	18	UNUSED						002
	19		W1175	5146R	22		34-22-18	002
	20		W1175	5146B	22		34-22-18	002
	21		W1175	5146Z			34-22-18	002
	22		W1175	0571	22		34-22-18	002
	23		W1175	0578	22		34-22-18	002
	24	UNUSED						002
	25	UNUSED						002
	26	UNUSED						002
	27	UNUSED						002
	28	UNUSED						002
	29	UNUSED						002
	30	UNUSED						002
	31	UNUSED						002
			W1175	0656	20		34-46-14	002
			W1175	0697	20		34-46-14	002
			W1175	5156Z			34-46-14	002
			W1175	5164Z			34-46-14	002
			W1175	FRDJ			34-46-14	002
			W1175	FRGX			34-46-14	002
D23005P		E002-03/ /		PLUG- CONDUCTIVE (S/B: 757-34-0200)				002
	1		W2379	0001	22		34-46-14	002

HOOKUP LIST

D280N032

91-21-51

Section D23000

Page 4

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D23005P		E002-03/ /		PLUG- CONDUCTIVE (S/B: 757-34-0200) (continued)				002
	2		W2379	2001W	24		34-46-14	002
	3		W2379	2001B	24		34-46-14	002
	4		W2379	2001Z			34-46-14	002
	5		W2379	0003	22		34-46-14	002
	6		W2379	2006W	24		34-43-15	002
	7		W2379	2006B	24		34-43-15	002
	8		W2379	2006Z			34-43-15	002
	9	UNUSED						002
	10	UNUSED						002
	11	UNUSED						002
	12	UNUSED						002
	13		W2379	2008R	22		34-46-14	002
	14		W2379	2008B	22		34-46-14	002
	15		W2379	2008Z			34-46-14	002
	16	UNUSED						002
	17	UNUSED						002
	18	UNUSED						002
	19		W2379	2502R	22		34-22-18	002
	20		W2379	2502B	22		34-22-18	002
	21		W2379	2502Z			34-22-18	002
	22		W2379	0021	22		34-22-18	002
	23		W2379	0022	22		34-22-18	002
	24	UNUSED						002
	25	UNUSED						002
	26	UNUSED						002
	27	UNUSED						002
	28	UNUSED						002
	29	UNUSED						002
	30	UNUSED						002
	31	UNUSED						002

HOOKUP LIST

D280N032

91-21-51

Section D23000

Page 5 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40002J		AC0880/ /		RCPT				ALL
	1		W4228	0012	22		28-42-11	ALL
	2	UNUSED						ALL
	3	TC	W4228	4502G	20		77-21-11	ALL
	4	TD	W4228	4502W	20		77-21-11	ALL
	5		W4228	2501B	22		73-21-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W4228	0093	22		29-11-12	001-099
	8		W4228	0093	20		29-11-12	115-199
	9	UNUSED						001-099
	9		W4228	0105	20		SPARE	115-199
	10	UNUSED						001-099
	10		W4228	0094	20		SPARE	115-199
	11		W4228	0002	22		76-11-11	ALL
	12		W4228	0179	22		29-11-12	001-099
	12		W4228	0179	20		29-11-12	115-199
	13		W4228	0201	22		SPARE	001-099
	13		W4228	0201	20		28-41-21	115-199
	14		W4228	0202	20		28-25-11	ALL
	15		W4228	2501R	22		73-21-11	ALL
	16		W4228	2502B	22		73-21-11	ALL
	17		W4228	2502R	22		73-21-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W4228	0214	22		76-11-11	ALL
	21		W4228	0108	22		SPARE	001-099
	21	UNUSED						115-199
	22	UNUSED						001-099
	22		W4228	0108	22		SPARE	115-199
	23		W4228	2509B	20		SPARE	001-099
	23	UNUSED						115-199
	24		W4228	2509R	20		SPARE	001-099
	24	UNUSED						115-199
	25		W4228	2509Z			SPARE	001-099
	25	UNUSED						115-199
	26		W4228	2510B	20		SPARE	001-099
	26	UNUSED						115-199
	27		W4228	2510R	20		SPARE	001-099
	27	UNUSED						115-199
	28		W4228	2510Z			SPARE	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40002J		AC0880/ /		RCPT (continued)				ALL
	28	UNUSED						115-199
	29	UNUSED						ALL
	30		W4228	0258	20		SPARE	001-099
	30	UNUSED						115-199
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	TC	W4228	4501G	20		75-31-11	ALL
	34	TD	W4228	4501W	20		75-31-11	ALL
	35		W4228	0210	22		29-22-11	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41		W4228	0109	20		SPARE	001-099
	41		W4228	0109	22		SPARE	115-199
	42		W4228	0106	22		29-11-12	001-099
	42		W4228	0104	20		29-11-12	115-199
	43		W4228	2503R	22		73-21-11	ALL
	44		W4228	2503B	22		73-21-11	ALL
	45		W4228	FRAC			73-21-11	ALL
	46		W4228	0259	22		30-11-11	ALL
	47		W4228	0260	22		30-11-11	ALL
	48		W4228	0261	22		30-11-11	ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53		W4228	0196	22		29-22-11	ALL
	54		W4228	0197	22		29-22-11	ALL
	55		W4228	0198	22		29-22-11	ALL
	S/R		W4228	YAAB			29-11-12	001-099
	S/R		W4228	4501Z			75-31-11	ALL
	S/R		W4228	4502Z			77-21-11	ALL
	S/R		W4228	YAAA			29-11-12	115-199
			W4228	2501Z			73-21-11	ALL
			W4228	2502Z			73-21-11	ALL
			W4228	2503Z			73-21-11	ALL
			W4228	FRAC			73-21-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40002P D40002P		AC0880/177/68 880/177/68		PLUG- PLUG				001-099 115-199
	1		W3300	0007	20		28-42-11	ALL
	2	UNUSED						ALL
	3	TC	W3300	4502G	20		77-21-11	ALL
	4	TD	W3300	4502W	20		77-21-11	ALL
	5		W3300	2510B	20		73-21-11	001-099
	5		W3300	2501B	20		73-21-11	115-199
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W3300	0067	20		29-11-12	ALL
	9		W3300	3504B	20		SPARE	001-099
	9		W3300	2510B	20		SPARE	115-199
	10		W3300	3504R	20		SPARE	001-099
	10		W3300	2510R	20		SPARE	115-199
	11		W3300	1002	20		76-11-11	ALL
	12		W3300	0080	20		29-11-12	ALL
	13		W3300	1008	20		SPARE	001-099
	13		W3300	1008	20		28-41-21	115-199
	14		W3300	0082	20		28-25-11	ALL
	15		W3300	2510R	20		73-21-11	001-099
	15		W3300	2501R	20		73-21-11	115-199
	16		W3300	2502B	20		73-21-11	ALL
	17		W3300	2502R	20		73-21-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W3300	1005	20		76-11-11	ALL
	21		W3300	1006	20		SPARE	001-099
	21	UNUSED						115-199
	22		W3300	3504Y	20		SPARE	001-099
	22		W3300	2506B	20		SPARE	115-199
	23		W3300	2511B	20		SPARE	001-099
	23	UNUSED						115-199
	24		W3300	2511R	20		SPARE	001-099
	24	UNUSED						115-199
	25		W3300	2511Z			SPARE	001-099
	25	UNUSED						115-199
	26		W3300	2512B	20		SPARE	001-099
	26	UNUSED						115-199
	27		W3300	2512R	20		SPARE	001-099
	27	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40002P		AC0880/177/68		PLUG- (continued)				001-099
D40002P		880/177/68		PLUG (continued)				115-199
	28		W3300	2512Z			SPARE	001-099
	28	UNUSED						115-199
	29		W3300	0095	20		SPARE	001-099
	29	UNUSED						115-199
	30		W3300	0094	20		SPARE	001-099
	30	UNUSED						115-199
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	TC	W3300	4501G	20		75-31-11	ALL
	34	TD	W3300	4501W	20		75-31-11	ALL
	35		W3300	0085	20		29-22-11	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41		W3300	0066	20		SPARE	001-099
	41		W3300	2506R	20		SPARE	115-199
	42		W3300	0072	20		29-11-12	ALL
	43		W3300	2503R	20		73-21-11	ALL
	44		W3300	2503B	20		73-21-11	ALL
	45		W3300	FRAE			73-21-11	ALL
	46		W3300	0096	20		30-11-11	ALL
	47		W3300	0097	20		30-11-11	ALL
	48		W3300	0098	20		30-11-11	ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53		W3300	0014	20		29-22-11	ALL
	54		W3300	0015	20		29-22-11	ALL
	55		W3300	0016	20		29-22-11	ALL
	S/R		W3300	1006Z			SPARE	001-099
	S/R		W3300	1008Z			SPARE	001-099
	S/R		W3300	3504Z			SPARE	001-099
	S/R		W3300	1002Z			76-11-11	ALL
	S/R		W3300	1005Z			76-11-11	ALL
	S/R		W3300	4501Z			75-31-11	ALL
	S/R		W3300	4502Z			77-21-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 4

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40002P		AC0880/177/68		PLUG- (continued)				001-099
D40002P		880/177/68		PLUG (continued)				115-199
	S/R		W3300	YAAA			76-11-11	ALL
	S/R		W3300	1008Z			28-41-21	115-199
	S/R		W3300	2506Z			SPARE	115-199
	S/R		W3300	2510Z			SPARE	115-199
			W3300	2510Z			73-21-11	001-099
			W3300	2502Z			73-21-11	ALL
			W3300	2503Z			73-21-11	ALL
			W3300	FRAE			73-21-11	ALL
			W3300	2501Z			73-21-11	115-199
D40003J		P061-00/ /		RCPT-				ALL
	1		W0069	0001	22		31-31-01	001-099
	1		W0069	0001	22		31-31-12	115-199
	2		W0069	0002	22		31-31-01	001-099
	2		W0069	0002	22		31-31-12	115-199
	3	UNUSED						ALL
	4	UNUSED						001-099
	4		W0069	0004	22		31-31-12	115-199
	5		W0069	0005	24		31-31-01	001-099
	5		W0069	0005	24		31-31-12	115-199
	6		W0069	0006	24		31-31-01	001-099
	6		W0069	0006	24		31-31-12	115-199
	7		W0069	5001Z			SPARE	001-099
	7		W0069	5001Z			31-31-12	115-199
	8		W0069	5004R	24		31-31-01	001-099
	8		W0069	5013R	24		31-31-12	115-199
	9		W0069	5004B	24		31-31-01	001-099
	9		W0069	5013B	24		31-31-12	115-199
	10		W0069	5001R	24		SPARE	001-099
	10		W0069	5001R	24		31-31-12	115-199
	11		W0069	5001B	24		SPARE	001-099
	11		W0069	5001B	24		31-31-12	115-199
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0069	5002R	24		31-31-01	001-099
	14		W0069	5002R	24		31-31-12	115-199
	15		W0069	5002B	24		31-31-01	001-099
	15		W0069	5002B	24		31-31-12	115-199
	16		W0069	5003R	24		SPARE	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 5

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40003J		P061-00/ /		RCPT- (continued)				ALL
	16		W0069	5003R	24		31-31-12	115-199
	17		W0069	5003B	24		SPARE	001-099
	17		W0069	5003B	24		31-31-12	115-199
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						001-099
	21		W0069	0021	24		31-31-12	115-199
	22		W0069	0011	22		31-31-01	001-099
	22		W0069	0011	22		31-31-12	115-199
	23		W0069	0012	24		31-31-01	001-099
	23		W0069	0012	24		31-31-12	115-199
	24		W0069	0013	24		31-31-01	001-099
	24		W0069	0013	24		31-31-12	115-199
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W0069	0003	24		31-31-01	001-099
	31		W0069	0003	24		31-31-12	115-199
	32		W0069	5002Z			31-31-01	001-099
	32		W0069	5002Z			31-31-12	115-199
	33		W0069	5003Z			SPARE	001-099
	33		W0069	5003Z			31-31-12	115-199
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41		W0069	5004Z			31-31-01	001-099
	41		W0069	5013Z			31-31-12	115-199
D40003P		P061-00/ /		PLUG-				ALL
	1		W2299	0001	22		31-31-01	001-099
	1		W2299	0001	22		31-31-11	115-199
	2		W2299	0002	22		31-31-01	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 6

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40003P		P061-00/ /		PLUG- (continued)				ALL
	2		W2299	0002	22		31-31-11	115-199
	3		W2299	0003	22		SPARE	ALL
	4		W2299	0004	22		SPARE	001-099
	4		W2299	0004	22		31-31-11	115-199
	5		W2299	0005	24		31-31-01	001-099
	5		W2299	0005	24		31-31-11	115-199
	6		W2299	0006	24		31-31-01	001-099
	6		W2299	0006	24		31-31-11	115-199
	7		W2299	5001Z			31-31-11	ALL
	8		W2299	5004R	24		31-31-01	001-099
	8		W2299	5004R	24		31-31-11	115-199
	9		W2299	5004B	24		31-31-01	001-099
	9		W2299	5004B	24		31-31-11	115-199
	10		W2299	5001R	24		SPARE	001-099
	10		W2299	5001R	24		31-31-11	115-199
	11		W2299	5001B	24		SPARE	001-099
	11		W2299	5001B	24		31-31-11	115-199
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W2299	5002R	24		31-31-01	001-099
	14		W2299	5002R	24		31-31-11	115-199
	15		W2299	5002B	24		31-31-01	001-099
	15		W2299	5002B	24		31-31-11	115-199
	16		W2299	5003R	24		SPARE	001-099
	16		W2299	5003R	24		31-31-11	115-199
	17		W2299	5003B	24		SPARE	001-099
	17		W2299	5003B	24		31-31-11	115-199
	18		W2299	5005R	24		SPARE	001-099
	18		W2299	0008	22		SPARE	115-199
	19		W2299	5005B	24		SPARE	001-099
	19		W2299	0009	22		SPARE	115-199
	20		W2299	0010	22		SPARE	001-099
	20		W2299	0010	22		31-31-11	115-199
	21		W2299	0007	24		31-31-01	001-099
	21		W2299	0007	24		31-31-11	115-199
	22		W2299	0011	22		31-31-01	001-099
	22		W2299	0011	22		31-31-11	115-199
	23		W2299	0012	24		31-31-01	001-099
	23		W2299	0012	24		31-31-11	115-199
	24		W2299	0013	24		31-31-01	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 7

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40003P		P061-00/ /		PLUG- (continued)				ALL
	24		W2299	0013	24		31-31-11	115-199
	25		W2299	0015	22		SPARE	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W2299	0014	24		31-31-01	001-099
	31		W2299	0014	24		31-31-11	115-199
	32		W2299	5002Z			31-31-01	001-099
	32		W2299	5002Z			31-31-11	115-199
	33		W2299	5003Z			SPARE	001-099
	33		W2299	5003Z			31-31-11	115-199
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37		W2299	5005Z			SPARE	001-099
	37	UNUSED						115-199
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41		W2299	5004Z			31-31-01	001-099
	41		W2299	5004Z			31-31-11	115-199
D40004J		AD0880/ /		RCPT				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W4236	0165	20		29-11-22	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W4236	2509B	20		SPARE	001-099
	12	UNUSED						115-199
	13		W4236	2509R	20		SPARE	001-099
	13	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 8

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40004J		AD0880/ /		RCPT (continued)				ALL
	14		W4236	0096	20		29-11-22	ALL
	15	TD	W4236	4502W	20		77-21-11	ALL
	16	TC	W4236	4502G	20		77-21-11	ALL
	17	UNUSED						ALL
	18		W4236	0220	22		SPARE	001-099
	18	UNUSED						115-199
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						001-099
	25		W4236	0084	20		SPARE	115-199
	26		W4236	0003	22		76-11-12	ALL
	27		W4236	0248	22		76-11-12	ALL
	28		W4236	0001	22		76-11-12	ALL
	29		W4236	0002	22		76-11-12	ALL
	30		W4236	0012	22		28-42-11	ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	TD	W4236	4501W	20		75-31-11	ALL
	34	TC	W4236	4501G	20		75-31-11	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W4236	2510B	20		SPARE	001-099
	38	UNUSED						115-199
	39		W4236	2510R	20		SPARE	001-099
	39	UNUSED						115-199
	40	UNUSED						ALL
	41		W4236	0221	20		SPARE	001-099
	41		W4236	0083	20		SPARE	115-199
	42		W4236	0095	20		29-11-22	ALL
	43	UNUSED						001-099
	43		W4236	0152	20		SPARE	115-199
	44	UNUSED						ALL
	45		W4236	2501R	22		73-21-21	ALL
	46		W4236	2501B	22		73-21-21	ALL
	47		W4236	2502R	22		73-21-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 9

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40004J		AD0880/ /		RCPT (continued)				ALL
	48		W4236	2502B	22		73-21-21	ALL
	49		W4236	2503R	22		73-21-21	ALL
	50		W4236	2503B	22		73-21-21	ALL
	51		W4236	FRAA			73-21-21	ALL
	52		W4236	0258	22		30-11-11	ALL
	53		W4236	0259	22		30-11-11	ALL
	54		W4236	0260	22		30-11-11	ALL
	55	UNUSED						ALL
	S/R		W4236	2509Z			SPARE	001-099
	S/R		W4236	2510Z			SPARE	001-099
	S/R		W4236	YAAB			75-31-11	001-099
	S/R		W4236	4501Z			75-31-11	ALL
	S/R		W4236	4502Z			77-21-11	ALL
	S/R		W4236	YAAA			29-11-22	115-199
			W4236	2501Z			73-21-21	ALL
			W4236	2502Z			73-21-21	ALL
			W4236	2503Z			73-21-21	ALL
			W4236	FRAA			73-21-21	ALL
D40004P		AD0880/ /		PLUG				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W3400	0083	20		29-11-22	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W3400	2510B	20		SPARE	001-099
	12	UNUSED						115-199
	13		W3400	2510R	20		SPARE	001-099
	13	UNUSED						115-199
	14		W3400	0073	20		29-11-22	ALL
	15	TD	W3400	4502W	20		77-21-11	ALL
	16	TC	W3400	4502G	20		77-21-11	ALL
	17	UNUSED						ALL
	18		W3400	1005	20		SPARE	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 10

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40004P		AD0880/ /		PLUG (continued)				ALL
	18	UNUSED						115-199
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W3400	0062	20		SPARE	ALL
	26		W3400	3503B	20		76-11-12	ALL
	27		W3400	1004	20		76-11-12	001-099
	27		W3400	1003	20		76-11-12	115-199
	28		W3400	3503R	20		76-11-12	ALL
	29		W3400	3503Y	20		76-11-12	ALL
	30		W3400	0035	20		28-42-11	ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	TD	W3400	4501W	20		75-31-11	ALL
	34	TC	W3400	4501G	20		75-31-11	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W3400	2509B	20		SPARE	001-099
	38	UNUSED						115-199
	39		W3400	2509R	20		SPARE	001-099
	39	UNUSED						115-199
	40	UNUSED						ALL
	41		W3400	0064	20		SPARE	ALL
	42		W3400	0068	20		29-11-22	ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45		W3400	2501R	20		73-21-21	ALL
	46		W3400	2501B	20		73-21-21	ALL
	47		W3400	2502R	20		73-21-21	ALL
	48		W3400	2502B	20		73-21-21	ALL
	49		W3400	2503R	20		73-21-21	ALL
	50		W3400	2503B	20		73-21-21	ALL
	51		W3400	FRAB			73-21-21	ALL
	52		W3400	0092	20		30-11-11	ALL
	53		W3400	0093	20		30-11-11	ALL
	54		W3400	0094	20		30-11-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 11

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40004P		AD0880/ /		PLUG (continued)				ALL
	55	UNUSED						ALL
	S/R		W3400	1004Z			76-11-12	001-099
	S/R		W3400	1005Z			SPARE	001-099
	S/R		W3400	2509Z			SPARE	001-099
	S/R		W3400	2510Z			SPARE	001-099
	S/R		W3400	3503Z			76-11-12	ALL
	S/R		W3400	4501Z			75-31-11	ALL
	S/R		W3400	4502Z			77-21-11	ALL
	S/R		W3400	YAAA			76-11-12	ALL
	S/R		W3400	1003Z			76-11-12	115-199
			W3400	2501Z			73-21-21	ALL
			W3400	2502Z			73-21-21	ALL
			W3400	2503Z			73-21-21	ALL
			W3400	FRAB			73-21-21	ALL
D40006J		AC0880/ /		RCPT				ALL
	1		W4210	2507B	22		SPARE	001-099
	1		W4210	0158	20		SPARE	115-199
	2		W4210	2507R	22		SPARE	001-099
	2		W4210	2508B	20		SPARE	115-199
	3	UNUSED						001-099
	3		W4210	2508R	20		SPARE	115-199
	4		W4210	2507Z			SPARE	001-099
	4		W4210	2508Z			SPARE	115-199
	5		W4210	2506B	22		79-34-11	ALL
	6		W4210	2506R	22		79-34-11	ALL
	7	UNUSED						ALL
	8		W4210	0014	22		26-18-11	001-099
	8		W4210	0014	20		26-18-11	115-199
	9		W4210	0015	22		26-18-11	001-099
	9		W4210	0015	20		26-18-11	115-199
	10		W4210	0056	22		29-32-11	ALL
	11		W4210	0005	22		30-21-11	001-099
	11		W4210	0004	22		30-21-11	115-199
	12		W4210	0004	22		30-21-11	001-099
	12		W4210	0005	22		30-21-11	115-199
	13		W4210	0006	22		30-21-11	ALL
	14		W4210	3004R	22		73-31-11	001-099
	14		W4210	3001R	22		73-31-11	115-199
	15		W4210	3004B	22		73-31-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 12

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40006J		AC0880/ /		RCPT (continued)				ALL
	15		W4210	3001B	22		73-31-11	115-199
	16		W4210	3004Y	22		73-31-11	001-099
	16		W4210	3001Y	22		73-31-11	115-199
	17		W4210	0009	20		74-31-11	ALL
	18		W4210	0010	20		74-31-11	ALL
	19		W4210	1005	20		76-11-21	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W4210	3002Y	22		79-31-11	ALL
	26		W4210	3002B	22		79-31-11	ALL
	27		W4210	3002R	22		79-31-11	ALL
	28		W4210	3003B	22		79-32-11	ALL
	29		W4210	3003R	22		79-32-11	ALL
	30		W4210	3003Y	22		79-32-11	ALL
	31		W4210	2501B	22		79-34-11	ALL
	32		W4210	2501R	22		79-34-11	ALL
	33	UNUSED						001-002, 115-199
	33		W4210	0178	20		78-36-11	003-099
	34		W4210	0012	22		78-36-11	ALL
	35		W4210	0013	22		78-36-11	ALL
	36		W4210	0008	22		76-11-11	ALL
	37		W4210	0007	22		76-11-11	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W4210	0103	22		SPARE	001-099
	40		W4210	0001	22		SPARE	115-199
	41		W4210	0105	22		SPARE	001-099
	41		W4210	0002	22		SPARE	115-199
	42		W4210	0107	22		SPARE	001-099
	42	UNUSED						115-199
	S/R		W4210	YAAB			29-32-11	001-099
	S/R		W4210	1005Z			76-11-21	ALL
	S/R		W4210	2501Z			79-34-11	ALL
	S/R		W4210	2506Z			79-34-11	ALL
	S/R		W4210	YAAA			73-31-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 13

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40006P		AC0880/ /		PLUG				ALL
	1		W3302	2504B	20		SPARE	001-099
	1		W3302	0035	20		SPARE	115-199
	2		W3302	2504R	20		SPARE	001-099
	2		W3302	2505B	20		SPARE	115-199
	3	UNUSED						001-099
	3		W3302	2505R	20		SPARE	115-199
	4		W3302	2504Z			SPARE	001-099
	4		W3302	2505Z			SPARE	115-199
	5		W3302	2502B	20		79-34-11	ALL
	6		W3302	2502R	20		79-34-11	ALL
	7	UNUSED						ALL
	8		W3302	0004	18		26-18-11	ALL
	9		W3302	1001	18		26-18-11	ALL
	10		W3302	0006	18		29-32-11	ALL
	11		W3302	3502B	20		30-21-11	ALL
	12		W3302	3502R	20		30-21-11	ALL
	13		W3302	3502Y	20		30-21-11	ALL
	14		W3302	3503R	20		73-31-11	ALL
	15		W3302	3503B	20		73-31-11	ALL
	16		W3302	3503Y	20		73-31-11	ALL
	17		W3302	2503B	20		74-31-11	ALL
	18		W3302	2503R	20		74-31-11	ALL
	19		W3302	1002	20		76-11-21	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W3302	3504Y	20		79-31-11	ALL
	26		W3302	3504B	20		79-31-11	ALL
	27		W3302	3504R	20		79-31-11	ALL
	28		W3302	3505B	20		79-32-11	ALL
	29		W3302	3505R	20		79-32-11	ALL
	30		W3302	3505Y	20		79-32-11	ALL
	31		W3302	2501B	20		79-34-11	ALL
	32		W3302	2501R	20		79-34-11	ALL
	33	UNUSED						001-002, 115-199
	33		W3302	0037	20		78-36-11	003-099
	34		W3302	0017	20		78-36-11	ALL
	35		W3302	0018	20		78-36-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 14

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40006P		AC0880/ /		PLUG (continued)				ALL
	36		W3302	0020	20		76-11-11	ALL
	37		W3302	0021	20		76-11-11	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W3302	3506B	20		SPARE	ALL
	41		W3302	3506R	20		SPARE	ALL
	42		W3302	3506Y	20		SPARE	ALL
	S/R		W3302	YAAA			29-32-11	001-099
	S/R		W3302	1001Z			26-18-11	ALL
	S/R		W3302	1002Z			76-11-21	ALL
	S/R		W3302	2501Z			79-34-11	ALL
	S/R		W3302	2502Z			79-34-11	ALL
	S/R		W3302	2503Z			74-31-11	ALL
	S/R		W3302	3502Z			30-21-11	ALL
	S/R		W3302	3503Z			73-31-11	ALL
	S/R		W3302	3504Z			79-31-11	ALL
	S/R		W3302	3505Z			79-32-11	ALL
	S/R		W3302	3506Z			SPARE	ALL
	S/R		W3302	YAAA			73-31-11	115-199
D40007J		E5-2/ /		RCPT				ALL
	1		W1284	0111	20		27-21-11	001-099
	1		W1284	1001	20		27-21-11	115-199
	2		W1284	0112	20		27-21-11	001-099
	2		W1284	1002	20		27-21-11	115-199
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	DED		W1284	1001Z			27-21-11	115-199
	DED		W1284	1002Z			27-21-11	115-199
D40007P		E005-02/ /		PLUG-				001-099
D40007P		E5-2/ /		PLUG-				115-199
	1		W4204	1001	20		27-21-11	ALL
	2		W4204	1002	20		27-21-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	DED		W4204	1001Z			27-21-11	ALL
	DED		W4204	1002Z			27-21-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 15

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40009P		665/210/R65		PLUG				115-199
	1		W4001	4251R	24		23-42-11	115-199
	2		W4001	4251Z			23-42-11	115-199
	3		W4001	4251B	24		23-42-11	115-199
	4		W4001	4251Y	24		23-42-11	115-199
	5		W4001	4251G	24		23-42-11	115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
D40012J		AS1123/ /		RCPT				ALL
	1		W3316	2001R	20		78-34-11	ALL
	2		W3316	2001B	20		78-34-11	ALL
	3		W3316	2002R	20		78-34-11	ALL
	4		W3316	2002B	20		78-34-11	ALL
	5		W3316	2003R	20		SPARE	ALL
	6		W3316	2003B	20		SPARE	ALL
	7		W3316	0001	18		36-11-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 16

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40012P		AS11233/ /		PLUG				ALL
	1		W3320	2001R	20		78-34-11	ALL
	2		W3320	2001B	20		78-34-11	ALL
	3		W3320	2002R	20		78-34-11	ALL
	4		W3320	2002B	20		78-34-11	ALL
	5		W3320	2003R	20		SPARE	ALL
	6		W3320	2003B	20		SPARE	ALL
	7		W3320	0001	20		36-11-11	ALL
D40014J		AC0880/ /		RCPT				ALL
	1		W4228	0099	22		29-11-11	001-099
	1		W4228	0099	20		29-11-11	115-199
	2		W4228	0029	20		26-13-11	001-099
	2		W4228	0029	22		26-13-11	115-199
	3		W4228	0133	16		75-31-11	ALL
	4		W4228	0025R	20		26-11-11	ALL
	5		W4228	0030	20		26-13-11	001-099
	5		W4228	0030	22		26-13-11	115-199
	6		W4228	0026R	20		26-11-11	ALL
	7		W4228	0224	22		76-11-11	ALL
	8		W4228	0024R	20		26-11-11	ALL
	9		W4228	0100	22		29-11-11	001-099
	9		W4228	0100	20		29-11-11	115-199
	10		W4228	0101	22		29-11-11	001-099
	10		W4228	0101	20		29-11-11	115-199
	11	UNUSED						ALL
	12		W4228	0096	22		SPARE	001-099
	12		W4228	0096	20		SPARE	115-199
	13		W4228	0032	22		26-18-11	001-099
	13		W4228	0032	20		26-18-11	115-199
	14		W4228	0033	22		26-18-11	001-099
	14		W4228	0033	20		26-18-11	115-199
	15		W4228	0051	20		28-22-21	ALL
	16		W4228	1005	18		73-21-11	ALL
	17		W4228	0134	16		75-31-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 17

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40014J		AC0880/ /		RCPT (continued)				ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W4228	0004	22		76-11-11	ALL
	28		W4228	0005	22		76-11-11	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	S/R		W4228	YAAA			76-11-11	001-099
	S/R		W4228	1005Z			73-21-11	ALL
	S/R		W4228	YAAB			29-11-11	115-199
D40014P		AC0880/181/65		PLUG-				001-099
D40014P		880/181/65		PLUG				115-199
	1		W3300	0005	20		29-11-11	ALL
	2		W3300	0002	18		26-13-11	ALL
	3		W3300	2501B	16		75-31-11	001-099
	3		W3300	2504B	16		75-31-11	115-199
	4		W3300	0011R	20		26-11-11	ALL
	5		W3300	0003	18		26-13-11	ALL
	6		W3300	0013R	20		26-11-11	ALL
	7		W3300	1004	20		76-11-11	ALL
	8		W3300	0012R	20		26-11-11	ALL
	9		W3300	0062	20		29-11-11	ALL
	10		W3300	0061	20		29-11-11	ALL
	11		W3300	0057	20		SPARE	ALL
	12		W3300	0058	20		SPARE	ALL
	13		W3300	0059	18		26-18-11	ALL
	14		W3300	1009	18		26-18-11	ALL
	15		W3300	1007	18		28-22-21	ALL
	16		W3300	1001	18		73-21-11	ALL
	17		W3300	2501R	16		75-31-11	001-099
	17		W3300	2504R	16		75-31-11	115-199
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 18

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40014P		AC0880/181/65		PLUG- (continued)				001-099
D40014P		880/181/65		PLUG (continued)				115-199
	26	UNUSED						ALL
	27		W3300	2504B	20		76-11-11	001-099
	27		W3300	2505B	20		76-11-11	115-199
	28		W3300	2504R	20		76-11-11	001-099
	28		W3300	2505R	20		76-11-11	115-199
	29	UNUSED						ALL
	30	UNUSED						ALL
	S/R		W3300	2501Z			75-31-11	001-099
	S/R		W3300	2504Z			76-11-11	001-099
	S/R		W3300	1001Z			73-21-11	ALL
	S/R		W3300	1004Z			76-11-11	ALL
	S/R		W3300	1007Z			28-22-21	ALL
	S/R		W3300	1009Z			26-18-11	ALL
	S/R		W3300	YAAB			26-13-11	ALL
	S/R		W3300	2504Z			75-31-11	115-199
	S/R		W3300	2505Z			76-11-11	115-199
D40015J		E004-01/ /		RCPT				001-099
D40015J		E4-1/ /		RCPT				115-199
	1		W1165	5003R	24		22-24-21	ALL
	2		W1165	5003B	24		22-24-21	ALL
	3		W1165	5003Z			22-24-21	ALL
	4		W1165	5002R	24		22-21-21	ALL
	5		W1165	5002B	24		22-21-21	ALL
	6		W1165	5002Z			22-21-21	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 19

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40015J		E004-01/ /		RCPT (continued)				001-099
D40015J		E4-1/ /		RCPT (continued)				115-199
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D40015P		E004-01/ /		PLUG				ALL
	1		W4471	5066R	24		22-24-21	ALL
	2		W4471	5066B	24		22-24-21	ALL
	3		W4471	5066Z			22-24-21	ALL
	4		W4471	5065R	24		22-21-21	ALL
	5		W4471	5065B	24		22-21-21	ALL
	6		W4471	5065Z			22-21-21	ALL
	7		W4471	5074R	24		SPARE	001-099
	7	UNUSED						115-199
	8		W4471	5074B	24		SPARE	001-099
	8	UNUSED						115-199
	9		W4471	5074Z			SPARE	001-099
	9	UNUSED						115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 20

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40015P		E004-01/ /		PLUG (continued)				ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D40016J		AD0880/ /		RCPT				ALL
	1		W4236	0249	22		76-11-12	ALL
	2		W4236	0029	22		26-18-21	001-099
	2		W4236	0029	20		26-18-21	115-199
	3		W4236	0030	22		26-18-21	001-099
	3		W4236	0030	20		26-18-21	115-199
	4		W4236	0013R	20		26-11-21	ALL
	5		W4236	1007	18		73-21-21	ALL
	6		W4236	0015R	20		26-11-21	ALL
	7		W4236	0092	22		29-11-21	ALL
	8		W4236	0026	20		26-13-21	ALL
	9		W4236	0121	16		75-31-11	ALL
	10		W4236	0090	22		29-11-21	001-099
	10		W4236	0090	20		29-11-21	115-199
	11		W4236	0091	22		29-11-21	001-099
	11		W4236	0091	20		29-11-21	115-199
	12		W4236	0027	20		26-13-21	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W4236	0185	20		28-22-21	ALL
	16	UNUSED						ALL
	17		W4236	0122	16		75-31-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W4236	0014R	20		26-11-21	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 21

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40016J		AD0880/ /		RCPT (continued)				ALL
	27		W4236	0236	20		SPARE	001-099
	27	UNUSED						115-199
	28	UNUSED						001-099
	28		W4236	0085	20		SPARE	115-199
	29	UNUSED						001-099
	29		W4236	0086	20		SPARE	115-199
	30	UNUSED						ALL
	S/R		W4236	YAAC			26-11-21	001-099
	S/R		W4236	1007Z			73-21-21	ALL
	S/R		W4236	YAAB			29-11-21	115-199
D40016P		AD0880/ /		PLUG				ALL
	1		W3400	1002	20		76-11-12	ALL
	2		W3400	0038	18		26-18-21	ALL
	3		W3400	1009	18		26-18-21	ALL
	4		W3400	0040R	20		26-11-21	ALL
	5		W3400	1001	18		73-21-21	001-099
	5		W3400	1006	18		73-21-21	115-199
	6		W3400	0042R	20		26-11-21	ALL
	7		W3400	0047	20		29-11-21	ALL
	8		W3400	0052	18		26-13-21	ALL
	9		W3400	2504B	16		75-31-11	ALL
	10		W3400	0043	20		29-11-21	ALL
	11		W3400	0044	20		29-11-21	ALL
	12		W3400	0053	18		26-13-21	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W3400	1007	18		28-22-21	ALL
	16	UNUSED						ALL
	17		W3400	2504R	16		75-31-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W3400	0041R	20		26-11-21	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W3400	0067	20		SPARE	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 22

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40016P		AD0880/ /		PLUG (continued)				ALL
	27		W3400	2506R	20		SPARE	115-199
	28		W3400	3504B	20		SPARE	001-099
	28		W3400	2505B	20		SPARE	115-199
	29		W3400	3504R	20		SPARE	001-099
	29		W3400	2505R	20		SPARE	115-199
	30		W3400	3504Y	20		SPARE	001-099
	30		W3400	2506B	20		SPARE	115-199
	S/R		W3400	1001Z			73-21-21	001-099
	S/R		W3400	3504Z			SPARE	001-099
	S/R		W3400	1002Z			76-11-12	ALL
	S/R		W3400	1007Z			28-22-21	ALL
	S/R		W3400	1009Z			26-18-21	ALL
	S/R		W3400	2504Z			75-31-11	ALL
	S/R		W3400	YAAB			26-18-21	ALL
	S/R		W3400	1006Z			73-21-21	115-199
	S/R		W3400	2505Z			SPARE	115-199
	S/R		W3400	2506Z			SPARE	115-199
D40018J		AC0880/ /		RCPT-				001-099
D40018J		AC0880/ /		RCPT				115-199
	1		W4232	0006	22		75-31-11	ALL
	2		W4232	0001	18		73-21-11	ALL
	3		W4232	1002	20		77-11-11	ALL
	4		W4232	5001B	22		77-11-11	ALL
	5		W4232	5001R	22		77-11-11	ALL
	6		W4232	2002R	20		22-33-11	ALL
	7		W4232	0019	18		73-21-12	ALL
	8		W4232	0018	18		73-21-12	ALL
	9		W4232	0025	22		77-31-11	ALL
	10		W4232	0025	22		77-31-11	ALL
	11		W4232	0024	22		77-31-11	ALL
	12	UNUSED						ALL
	13		W4232	0007	22		75-31-11	ALL
	14		W4232	2001B	20		22-33-11	ALL
	15		W4232	0015	20		SPARE	001-099
	15	UNUSED						115-199
	16		W4232	2001R	20		22-33-11	ALL
	17		W4232	2503B	20		SPARE	001-099
	17	UNUSED						115-199
	18		W4232	0016	20		SPARE	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 23

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40018J		AC0880/ /		RCPT- (continued)				001-099
D40018J		AC0880/ /		RCPT (continued)				115-199
	18	UNUSED						115-199
	19		W4232	2503R	20		SPARE	001-099
	19	UNUSED						115-199
	20		W4232	2504B	20		SPARE	001-099
	20	UNUSED						115-199
	21		W4232	2504R	20		SPARE	001-099
	21	UNUSED						115-199
	22		W4232	0023	22		77-31-11	ALL
	23		W4232	4501Z			77-31-11	ALL
	24		W4232	4502Z			77-31-11	ALL
	25		W4232	4501W	20		77-31-11	ALL
	26		W4232	0024	22		77-31-11	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W4232	2501R	22		77-12-31	ALL
	30		W4232	2501B	22		77-12-31	ALL
	31		W4232	0008	16		75-31-11	ALL
	32	UNUSED						ALL
	33		W4232	0009	18		75-31-11	ALL
	34		W4232	0004	18		73-21-11	ALL
	35		W4232	2002B	20		22-33-11	ALL
	36		W4232	5002B	22		77-11-11	ALL
	37		W4232	5002R	22		77-11-11	ALL
	38	UNUSED						ALL
	39		W4232	0023	22		77-31-11	ALL
	40		W4232	4501R	20		77-31-11	ALL
	41		W4232	4502W	20		77-31-11	ALL
	42		W4232	4502R	20		77-31-11	ALL
	S/R		W4232	2503Z			SPARE	001-099
	S/R		W4232	2504Z			SPARE	001-099
	S/R		W4232	1002Z			77-11-11	ALL
	S/R		W4232	2501Z			77-12-31	ALL
	S/R		W4232	5001Z			77-11-11	ALL
	S/R		W4232	5002Z			77-11-11	ALL
	S/R		W4232	YAAA			77-11-11	ALL
D40018P		AC0880/ /		PLUG				ALL
	1		W3304	2504B	20		75-31-11	ALL
	2		W3304	2507B	18		73-21-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 24

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40018P		AC0880/ /		PLUG (continued)				ALL
	2		W3304	2506B	18		73-21-11	115-199
	3		W3304	1003	20		77-11-11	ALL
	4		W3304	5001B	20		77-11-11	ALL
	5		W3304	5001R	20		77-11-11	ALL
	6		W3304	2002R	18		22-33-11	ALL
	7		W3304	2503R	18		73-21-12	ALL
	8		W3304	2503B	18		73-21-12	ALL
	9		W3304	0007	20		77-31-11	ALL
	10		W3304	0007	20		77-31-11	ALL
	11		W3304	0006	20		77-31-11	ALL
	12	UNUSED						ALL
	13		W3304	2504R	20		75-31-11	ALL
	14		W3304	2001B	18		22-33-11	ALL
	15		W3304	0008	20		SPARE	001-099
	15		W3304	0010	20		SPARE	115-199
	16		W3304	2001R	18		22-33-11	ALL
	17		W3304	2508B	20		SPARE	001-099
	17	UNUSED						115-199
	18		W3304	0009	20		SPARE	001-099
	18		W3304	2502B	20		SPARE	115-199
	19		W3304	2508R	20		SPARE	001-099
	19		W3304	2507R	20		SPARE	115-199
	20		W3304	2509B	20		SPARE	001-099
	20	UNUSED						115-199
	21		W3304	2509R	20		SPARE	001-099
	21	UNUSED						115-199
	22		W3304	0004	20		77-31-11	ALL
	23		W3304	4501Z			77-31-11	ALL
	24		W3304	4502Z			77-31-11	ALL
	25		W3304	4501W	20		77-31-11	ALL
	26		W3304	0006	20		77-31-11	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W3304	2501R	20		77-12-31	ALL
	30		W3304	2501B	20		77-12-31	ALL
	31		W3304	2505B	16		75-31-11	ALL
	32	UNUSED						001-099
	32		W3304	2502R	20		SPARE	115-199
	33		W3304	2505R	16		75-31-11	ALL
	34		W3304	2507R	18		73-21-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 25

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40018P		AC0880/ /		PLUG (continued)				ALL
	34	18	W3304	2506R	18		73-21-11	115-199
	35		W3304	2002B	18		22-33-11	ALL
	36		W3304	5002B	20		77-11-11	ALL
	37		W3304	5002R	20		77-11-11	ALL
	38	UNUSED						001-099
	38		W3304	2507B	20		SPARE	115-199
	39		W3304	0004	20		77-31-11	ALL
	40		W3304	4501R	20		77-31-11	ALL
	41		W3304	4502W	20		77-31-11	ALL
	42		W3304	4502R	20		77-31-11	ALL
	S/R		W3304	2507Z			73-21-11	001-099
	S/R		W3304	2508Z			SPARE	001-099
	S/R		W3304	2509Z			SPARE	001-099
	S/R		W3304	1003Z			77-11-11	ALL
	S/R		W3304	2501Z			77-12-31	ALL
	S/R		W3304	2503Z			73-21-12	ALL
	S/R		W3304	2504Z			75-31-11	ALL
	S/R		W3304	2505Z			75-31-11	ALL
	S/R		W3304	5001Z			77-11-11	ALL
	S/R		W3304	5002Z			77-11-11	ALL
	S/R		W3304	YAAA			77-11-11	ALL
	S/R		W3304	2502Z			SPARE	115-199
	S/R		W3304	2506Z			73-21-11	115-199
	S/R		W3304	2507Z			SPARE	115-199
D40020J		AD0880/ /		RCPT				ALL
	1		W4238	0009	20		75-31-11	ALL
	2		W4238	0002	18		73-21-21	ALL
	3		W4238	1002	20		77-11-11	ALL
	4		W4238	5001B	22		77-11-11	ALL
	5		W4238	5001R	22		77-11-11	ALL
	6		W4238	2002R	20		22-33-11	ALL
	7		W4238	0014	18		73-21-22	001-099
	7		W4238	0003	18		73-21-22	115-199
	8		W4238	0013	18		73-21-22	001-099
	8		W4238	0004	18		73-21-22	115-199
	9		W4238	0026	22		77-31-11	ALL
	10		W4238	0026	22		77-31-11	ALL
	11		W4238	0025	22		77-31-11	ALL
	12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 26

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40020J		AD0880/ /		RCPT (continued)				ALL
	13		W4238	0008	22		75-31-11	ALL
	14		W4238	2001B	20		22-33-11	ALL
	15		W4238	2503B	20		SPARE	001-099
	15	UNUSED						115-199
	16		W4238	2001R	20		22-33-11	ALL
	17	UNUSED						ALL
	18		W4238	2503R	20		SPARE	001-099
	18	UNUSED						115-199
	19		W4238	2503Z			SPARE	001-099
	19	UNUSED						115-199
	20	UNUSED						ALL
	21		W4238	2502B	22		SPARE	001-099
	21	UNUSED						115-199
	22		W4238	0027	22		77-31-11	ALL
	23		W4238	4501Z			77-31-11	ALL
	24		W4238	4502Z			77-31-11	ALL
	25		W4238	4501W	20		77-31-11	ALL
	26		W4238	0025	22		77-31-11	ALL
	27		W4238	2502R	22		SPARE	001-099
	27	UNUSED						115-199
	28		W4238	2502Z			SPARE	001-099
	28	UNUSED						115-199
	29		W4238	2501R	22		77-12-31	ALL
	30		W4238	2501B	22		77-12-31	ALL
	31		W4238	0007	16		75-31-11	ALL
	32	UNUSED						ALL
	33		W4238	0006	18		75-31-11	ALL
	34		W4238	0001	18		73-21-21	ALL
	35		W4238	2002B	20		22-33-11	ALL
	36		W4238	5002R	22		77-11-11	ALL
	37		W4238	5002B	22		77-11-11	ALL
	38	UNUSED						ALL
	39		W4238	0027	22		77-31-11	ALL
	40		W4238	4501R	20		77-31-11	ALL
	41		W4238	4502W	20		77-31-11	ALL
	42		W4238	4502R	20		77-31-11	ALL
	S/R		W4238	1002Z			77-11-11	ALL
	S/R		W4238	2501Z			77-12-31	ALL
	S/R		W4238	5001Z			77-11-11	ALL
	S/R		W4238	5002Z			77-11-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 27

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40020J		AD0880/ /		RCPT (continued)				ALL
	S/R		W4238	YAAA			77-11-11	ALL
D40020P		AD0880/178/R062		PLUG-				001-099
D40020P		880/178/R062		PLUG				115-199
	1		W3404	2504B	20		75-31-11	ALL
	2		W3404	2507B	18		73-21-21	001-099
	2		W3404	2506B	18		73-21-21	115-199
	3		W3404	1003	20		77-11-11	ALL
	4		W3404	5001B	20		77-11-11	ALL
	5		W3404	5001R	20		77-11-11	ALL
	6		W3404	2002R	18		22-33-11	ALL
	7		W3404	2503R	18		73-21-22	ALL
	8		W3404	2503B	18		73-21-22	ALL
	9		W3404	0002	20		77-31-11	ALL
	10		W3404	0002	20		77-31-11	ALL
	11		W3404	0001	20		77-31-11	ALL
	12	UNUSED						001-099
	12		W3404	2502B	20		SPARE	115-199
	13		W3404	2504R	20		75-31-11	ALL
	14		W3404	2001B	18		22-33-11	ALL
	15		W3404	2506B	20		SPARE	001-099
	15		W3404	0010	20		SPARE	115-199
	16		W3404	2001R	18		22-33-11	ALL
	17	UNUSED						ALL
	18		W3404	2506R	20		SPARE	001-099
	18		W3404	2502R	20		SPARE	115-199
	19	UNUSED						001-099
	19		W3404	2507B	20		SPARE	115-199
	20	UNUSED						001-099
	20		W3404	2507R	20		SPARE	115-199
	21		W3404	2502B	20		SPARE	001-099
	21	UNUSED						115-199
	22		W3404	0004	20		77-31-11	ALL
	23		W3404	4501Z			77-31-11	ALL
	24		W3404	4502Z			77-31-11	ALL
	25		W3404	4501W	20		77-31-11	ALL
	26		W3404	0001	20		77-31-11	ALL
	27		W3404	2502R	20		SPARE	001-099
	27	UNUSED						115-199
	28		W3404	2502Z			SPARE	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 28

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40020P		AD0880/178/R062		PLUG- (continued)				001-099
D40020P		880/178/R062		PLUG (continued)				115-199
	28	UNUSED						115-199
	29		W3404	2501R	20		77-12-31	ALL
	30		W3404	2501B	20		77-12-31	ALL
	31		W3404	2505B	16		75-31-11	ALL
	32	UNUSED						ALL
	33		W3404	2505R	16		75-31-11	ALL
	34		W3404	2507R	18		73-21-21	001-099
	34		W3404	2506R	18		73-21-21	115-199
	35		W3404	2002B	18		22-33-11	ALL
	36		W3404	5002R	20		77-11-11	ALL
	37		W3404	5002B	20		77-11-11	ALL
	38	UNUSED						ALL
	39		W3404	0004	20		77-31-11	ALL
	40		W3404	4501R	20		77-31-11	ALL
	41		W3404	4502W	20		77-31-11	ALL
	42		W3404	4502R	20		77-31-11	ALL
	S/R		W3404	2506Z			SPARE	001-099
	S/R		W3404	2507Z			73-21-21	001-099
	S/R		W3404	1003Z			77-11-11	ALL
	S/R		W3404	2501Z			77-12-31	ALL
	S/R		W3404	2503Z			73-21-22	ALL
	S/R		W3404	2504Z			75-31-11	ALL
	S/R		W3404	2505Z			75-31-11	ALL
	S/R		W3404	5001Z			77-11-11	ALL
	S/R		W3404	5002Z			77-11-11	ALL
	S/R		W3404	YAAA			77-11-11	ALL
	S/R		W3404	2502Z			SPARE	115-199
	S/R		W3404	2506Z			73-21-21	115-199
	S/R		W3404	2507Z			SPARE	115-199
D40022J		P070-00/ /		RCPT				ALL
	1		W1250	0068	20		28-25-11	ALL
	2		W1250	0059	20		28-25-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W1250	0065	24		28-25-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 29

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40022J		P070-00/ /		RCPT (continued)				ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W1250	0058	16		28-25-11	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
D40022P		P070-00/ /		PLUG				001-099
D40022P		P70/ /		PLUG				115-199
	1		W4210	0136	20		28-25-11	ALL
	2		W4210	0137	20		28-25-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W4210	0141	24		28-25-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W4210	0147	22		SPARE	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W4210	0138	12		28-25-11	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 30

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40022P		P070-00/ /		PLUG (continued)				001-099
D40022P		P70/ /		PLUG (continued)				115-199
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
D40024J		AW1285/ /		RCPT				ALL
	1		W3314	2502R	20		24-11-11	ALL
	2		W3314	2502B	20		24-11-11	ALL
	3		W3314	4001G	20		24-21-11	ALL
	4		W3314	0002	16		24-11-11	ALL
	5		W3314	2502Z			24-11-11	ALL
	6		W3314	2002R	20		24-11-11	ALL
	7		W3314	2002B	20		24-11-11	ALL
	8		W3314	0001	20		24-11-11	ALL
	9		W3314	2501R	20		24-21-11	ALL
	10		W3314	2501B	20		24-21-11	ALL
	11		W3314	2501Z			24-21-11	ALL
	12		W3314	4001R	20		24-21-11	ALL
	13		W3314	4001B	20		24-21-11	ALL
	14		W3314	4001Y	20		24-21-11	ALL
	15		W3314	3001R	18		24-21-11	ALL
	16		W3314	3001B	18		24-21-11	ALL
	17		W3314	3001Y	18		24-21-11	ALL
	18		W3314	2001R	20		24-11-11	ALL
	19		W3314	2001B	20		24-11-11	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W3314	2003B	20		SPARE	ALL
	23		W3314	2003R	20		SPARE	ALL
	24	UNUSED						ALL
	25		W3314	0006	20		SPARE	ALL
	26		W3314	0007	20		SPARE	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 31

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40024J		AW1285/ /		RCPT (continued)				ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
D40024P		AW1285/ /		PLUG				ALL
	1		W5114	2502R	20		24-11-11	ALL
	2		W5114	2502B	20		24-11-11	ALL
	3		W5114	4001G	20		24-21-11	ALL
	4		W5114	0002	16		24-11-11	ALL
	5		W5114	2502Z			24-11-11	ALL
	6		W5114	2002R	20		24-11-11	ALL
	7		W5114	2002B	20		24-11-11	ALL
	8		W5114	0001	20		24-11-11	ALL
	9		W5114	2501R	20		24-21-11	ALL
	10		W5114	2501B	20		24-21-11	ALL
	11		W5114	2501Z			24-21-11	ALL
	12		W5114	4001R	20		24-21-11	ALL
	13		W5114	4001B	20		24-21-11	ALL
	14		W5114	4001Y	20		24-21-11	ALL
	15		W5114	3001R	18		24-21-11	ALL
	16		W5114	3001B	18		24-21-11	ALL
	17		W5114	3001Y	18		24-21-11	ALL
	18		W5114	2001R	20		24-11-11	ALL
	19		W5114	2001B	20		24-11-11	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W5114	2003B	20		SPARE	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 32

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40024P		AW1285/ /		PLUG (continued)				ALL
	23		W5114	2003R	20		SPARE	ALL
	24	UNUSED						ALL
	25		W5114	0006	20		SPARE	ALL
	26		W5114	0007	20		SPARE	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
D40026J		AC0880/ /		RCPT				ALL
	1		W4228	2001R	22		78-34-11	ALL
	2		W4228	2001B	22		78-34-11	ALL
	3		W4228	2002R	22		78-34-11	ALL
	4		W4228	2002B	22		78-34-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W4228	0220	20		36-11-11	ALL
	8		W4228	0043	22		26-11-12	001-099
	8		W4228	0043	20		26-11-12	115-199
	9		W4228	0097	20		SPARE	001-002, 115-199
	9	UNUSED						003-099
	10		W4228	0055	20		26-12-11	ALL
	11		W4228	0056	20		26-12-11	ALL
	12		W4228	0044	22		26-11-12	001-099
	12		W4228	0044	20		26-11-12	115-199
	13	UNUSED						ALL
	14	UNUSED						ALL
	S/R		W4228	YAAC			26-11-12	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 33

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40026J		AC0880/ /		RCPT (continued)				ALL
	S/R		W4228	YAAC			78-34-11	115-199
D40026P		AC0880/ /		PLUG-				ALL
	1		W3320	2001R	20		78-34-11	ALL
	2		W3320	2001B	20		78-34-11	ALL
	3		W3320	2002R	20		78-34-11	ALL
	4		W3320	2002B	20		78-34-11	ALL
	5		W3320	2003R	20		SPARE	ALL
	6		W3320	2003B	20		SPARE	ALL
	7		W3320	0001	20		36-11-11	ALL
	8		W3320	0002	20		26-11-12	ALL
	9	UNUSED						ALL
	10		W3320	0005	18		26-12-11	ALL
	11		W3320	0009	18		26-12-11	ALL
	12		W3320	0003	20		26-11-12	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	S/R		W3320	YAAA			78-34-11	ALL
D40028J		AW2285/ /		RCPT				ALL
	1		W3414	2502B	20		24-11-21	ALL
	2		W3414	2502R	20		24-11-21	ALL
	3		W3414	4001G	20		24-21-21	ALL
	4		W3414	0002	16		24-11-21	ALL
	5		W3414	2502Z			24-11-21	ALL
	6		W3414	2002B	20		24-11-21	ALL
	7		W3414	2002R	20		24-11-21	ALL
	8		W3414	0001	20		24-11-21	ALL
	9		W3414	2501R	20		24-21-21	ALL
	10		W3414	2501B	20		24-21-21	ALL
	11		W3414	2501Z			24-21-21	ALL
	12		W3414	4001R	20		24-21-21	ALL
	13		W3414	4001B	20		24-21-21	ALL
	14		W3414	4001Y	20		24-21-21	ALL
	15		W3414	3001R	18		24-21-21	ALL
	16		W3414	3001B	18		24-21-21	ALL
	17		W3414	3001Y	18		24-21-21	ALL
	18		W3414	2001B	20		24-11-21	ALL
	19		W3414	2001R	20		24-11-21	ALL
	20	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 34

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40028J		AW2285/ /		RCPT (continued)				ALL
	21	UNUSED						ALL
	22		W3414	2003B	20		SPARE	ALL
	23		W3414	2003R	20		SPARE	ALL
	24	UNUSED						ALL
	25		W3414	0006	20		SPARE	ALL
	26		W3414	0007	20		SPARE	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
D40028P		AW2285/ /		PLUG				ALL
	1		W5214	2502B	20		24-11-21	ALL
	2		W5214	2502R	20		24-11-21	ALL
	3		W5214	4001G	20		24-21-21	ALL
	4		W5214	0002	16		24-11-21	ALL
	5		W5214	2502Z			24-11-21	ALL
	6		W5214	2002B	20		24-11-21	ALL
	7		W5214	2002R	20		24-11-21	ALL
	8		W5214	0001	20		24-11-21	ALL
	9		W5214	2501R	20		24-21-21	ALL
	10		W5214	2501B	20		24-21-21	ALL
	11		W5214	2501Z			24-21-21	ALL
	12		W5214	4001R	20		24-21-21	ALL
	13		W5214	4001B	20		24-21-21	ALL
	14		W5214	4001Y	20		24-21-21	ALL
	15		W5214	3001R	18		24-21-21	ALL
	16		W5214	3001B	18		24-21-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 35

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40028P		AW2285/ /		PLUG (continued)				ALL
	17		W5214	3001Y	18		24-21-21	ALL
	18		W5214	2001B	20		24-11-21	ALL
	19		W5214	2001R	20		24-11-21	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W5214	2003B	20		SPARE	ALL
	23		W5214	2003R	20		SPARE	ALL
	24	UNUSED						ALL
	25		W5214	0006	20		SPARE	ALL
	26		W5214	0007	20		SPARE	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
D40029J		E5-1/ /		RCPT				ALL
	1		W1282	0297	24		27-51-31	001-099
	1		W1282	0297	22		27-51-31	115-199
	2		W1282	0298	22		27-51-31	ALL
	3		W1282	0299	24		27-51-31	001-099
	3		W1282	0299	22		27-51-31	115-199
	4		W1282	0180	24		27-51-31	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 36

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40029J		E5-1/ /		RCPT (continued)				ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D40029P		E005-01/ /		PLUG				001-099
D40029P		AE0501/ /		PLUG				115-199
	1		W2443	0005	20		27-51-31	ALL
	2		W2443	0006	20		27-51-31	ALL
	3		W2443	0003	20		27-51-31	ALL
	4		W2443	0004	20		27-51-31	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D40031J		AP0001/ /		RCPT				ALL
	1		W2241	0009	22		22-41-13	ALL
	2		W2241	0002	24		34-21-11	ALL
	3	UNUSED						001-099
	3		W2241	0035	22		31-31-31	115-199
	4	UNUSED						001-099
	4		W2241	0089	22		31-31-31	115-199
	5	UNUSED						001-099
	5		W2241	0101	22		31-31-31	115-199
	6		W2241	0006	22		22-14-11	ALL
	7		W2241	5022B	24		22-14-11	ALL
	8		W2241	5022R	24		22-14-11	ALL
	9		W2241	5022Z			22-14-11	ALL
	10		W2241	0023	22		34-22-16	001-099
	10		W2241	0023	24		34-22-16	115-199
	11		W2241	0011	22		22-41-13	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 37

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40031J		AP0001/ /		RCPT (continued)				ALL
	12		W2241	0051	22		34-12-61	ALL
	13		W2241	0014	24		34-22-17	ALL
	14		W2241	0025	24		31-51-42	ALL
	15		W2241	0015	24		34-22-17	ALL
	16		W2241	0016	24		34-22-17	ALL
	17		W2241	0057	24		34-22-17	ALL
	18		W2241	0007	24		34-13-21	ALL
	19		W2241	0019	24		34-22-17	ALL
	20		W2241	0020	22		34-22-17	ALL
	21		W2241	0021	22		34-12-61	ALL
	22		W2241	5001R	24		34-22-81	001-099
	22		W2241	5001R	24		SPARE	115-199
	23		W2241	5001B	24		34-22-81	001-099
	23		W2241	5001B	24		SPARE	115-199
	24		W2241	5001Z			34-22-81	001-099
	24		W2241	5001Z			SPARE	115-199
	25		W2241	5007R	24		34-13-11	ALL
	26		W2241	5007B	24		34-13-11	ALL
	27		W2241	5007Z			34-13-11	ALL
	28		W2241	5025R	24		31-31-42	001-099
	28		W2241	5025R	24		31-31-22	115-199
	29		W2241	5025B	24		31-31-42	001-099
	29		W2241	5025B	24		31-31-22	115-199
	30		W2241	5025Z			31-31-42	001-099
	30		W2241	5025Z			31-31-22	115-199
	31	UNUSED						001-099
	31		W2241	0102	22		31-31-31	115-199
	32		W2241	5003R	24		34-22-81	001-099
	32		W2241	5003R	24		34-22-83	115-199
	33		W2241	5003B	24		34-22-81	001-099
	33		W2241	5003B	24		34-22-83	115-199
	34		W2241	5003Z			34-22-81	001-099
	34		W2241	5003Z			34-22-83	115-199
	35		W2241	5005R	24		34-22-82	ALL
	36		W2241	5005B	24		34-22-82	ALL
	37		W2241	5005Z			34-22-82	ALL
	38		W2241	5014R	24		SPARE	001-099
	38		W2241	0084	22		31-31-31	115-199
	39		W2241	5014B	24		SPARE	001-099
	39		W2241	0085	22		31-31-31	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 38

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40031J		AP0001/ /		RCPT (continued)				ALL
	40		W2241	5014Z			SPARE	001-099
	40		W2241	0086	22		31-31-31	115-199
	41		W2241	5002R	24		34-22-81	001-099
	41		W2241	5002R	24		34-22-83	115-199
	42		W2241	5002B	24		34-22-81	001-099
	42		W2241	5002B	24		34-22-83	115-199
	43		W2241	5002Z			34-22-81	001-099
	43		W2241	5002Z			34-22-83	115-199
	44		W2241	5009R	24		31-25-11	ALL
	45		W2241	5009B	24		31-25-11	ALL
	46		W2241	5009Z			31-25-11	ALL
	47		W2241	0047	22		34-32-11	ALL
	48		W2241	0048	22		34-32-11	ALL
	49		W2241	0049	22		34-32-11	ALL
	50	UNUSED						001-099
	50		W2241	5010R	24		34-22-28	115-199
	51	UNUSED						001-099
	51		W2241	5010B	24		34-22-28	115-199
	52	UNUSED						001-099
	52		W2241	5010Z			34-22-28	115-199
	53		W2241	5012R	24		SPARE	001-099
	53	UNUSED						115-199
	54		W2241	5012B	24		SPARE	001-099
	54	UNUSED						115-199
	55		W2241	5012Z			SPARE	001-099
	55	UNUSED						115-199
D40031P		AP0001/ /		PLUG				001-099
D40031P		217.6/198/L034		PLUG				115-199
	1		W0001	0186	22		22-41-13	ALL
	2		W0001	0002	24		34-21-11	ALL
	3	UNUSED						001-099
	3		W0001	0436	22		31-31-31	115-199
	4	UNUSED						001-099
	4		W0001	0444	22		31-31-63	115-199
	5	UNUSED						001-099
	5		W0001	0437	22		31-31-63	115-199
	6		W0001	0036	22		22-14-11	ALL
	7		W0001	5007B	24		22-14-11	ALL
	8		W0001	5007R	24		22-14-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 39

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40031P		AP0001/ /		PLUG (continued)				001-099
D40031P		217.6/198/L034		PLUG (continued)				115-199
	9		W0001	5007Z			22-14-11	ALL
	10		W0001	0192	22		34-22-16	ALL
	11		W0001	0187	22		22-41-13	ALL
	12		W0001	0021	22		34-12-61	ALL
	13		W0001	0199	24		34-22-17	ALL
	14		W0001	0215	22		31-51-42	ALL
	15		W0001	0196	24		34-22-17	ALL
	16		W0001	0197	24		34-22-17	ALL
	17		W0001	0194	24		34-22-17	ALL
	18		W0001	0082	24		34-13-21	ALL
	19		W0001	0195	24		34-22-17	ALL
	20		W0001	0198	22		34-22-17	ALL
	21		W0001	0241	22		34-12-61	ALL
	22		W0001	5041R	24		34-22-81	001-099
	22	UNUSED						115-199
	23		W0001	5041B	24		34-22-81	001-099
	23	UNUSED						115-199
	24		W0001	5041Z			34-22-81	001-099
	24	UNUSED						115-199
	25		W0001	5021R	24		34-13-11	ALL
	26		W0001	5021B	24		34-13-11	ALL
	27		W0001	5021Z			34-13-11	ALL
	28		W0001	5004R	24		31-31-42	001-099
	28		W0001	5004R	24		31-31-22	115-199
	29		W0001	5004B	24		31-31-42	001-099
	29		W0001	5004B	24		31-31-22	115-199
	30		W0001	5004Z			31-31-42	001-099
	30		W0001	5004Z			31-31-22	115-199
	31	UNUSED						001-099
	31		W0001	0447	22		31-31-63	115-199
	32		W0001	5037R	24		34-22-81	001-099
	32		W0001	5037R	24		34-22-83	115-199
	33		W0001	5037B	24		34-22-81	001-099
	33		W0001	5037B	24		34-22-83	115-199
	34		W0001	5037Z			34-22-81	001-099
	34		W0001	5037Z			34-22-83	115-199
	35		W0001	5029R	24		34-22-82	ALL
	36		W0001	5029B	24		34-22-82	ALL
	37		W0001	FRAJ			34-22-82	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 40

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40031P		AP0001/ /		PLUG (continued)				001-099
D40031P		217.6/198/L034		PLUG (continued)				115-199
	38	UNUSED						001-099
	38		W0001	0446	22		31-31-63	115-199
	39	UNUSED						001-099
	39		W0001	0438	22		31-31-63	115-199
	40	UNUSED						001-099
	40		W0001	0445	22		31-31-63	115-199
	41		W0001	5042R	24		34-22-81	001-099
	41		W0001	5042R	24		34-22-83	115-199
	42		W0001	5042B	24		34-22-81	001-099
	42		W0001	5042B	24		34-22-83	115-199
	43		W0001	5042Z			34-22-81	001-099
	43		W0001	5042Z			34-22-83	115-199
	44		W0001	5030R	24		31-25-11	ALL
	45		W0001	5030B	24		31-25-11	ALL
	46		W0001	FRAB			31-25-11	ALL
	47		W0001	0047	22		34-32-11	ALL
	48		W0001	0048	22		34-32-11	ALL
	49		W0001	0049	22		34-32-11	ALL
	50	UNUSED						001-099
	50		W0001	5055R	24		34-22-28	115-199
	51	UNUSED						001-099
	51		W0001	5055B	24		34-22-28	115-199
	52	UNUSED						001-099
	52		W0001	5055Z			34-22-28	115-199
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
			W0001	0060	20		31-25-11	ALL
			W0001	0081	20		34-22-82	ALL
			W0001	5029Z			34-22-82	ALL
			W0001	5030Z			31-25-11	ALL
			W0001	FRAB			31-25-11	ALL
			W0001	FRAJ			34-22-82	ALL
D40032J		AD0880/ /		RCPT				ALL
	1		W4220	2504B	22		SPARE	001-099
	1		W4220	0158	20		SPARE	115-199
	2		W4220	2504R	22		SPARE	001-099
	2		W4220	2508B	20		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 41

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40032J		AD0880/ /		RCPT (continued)				ALL
	3	UNUSED						001-099
	3		W4220	2508R	20		SPARE	115-199
	4		W4220	2504Z			SPARE	001-099
	4		W4220	2508Z			SPARE	115-199
	5		W4220	2503R	22		79-34-11	ALL
	6		W4220	2503B	22		79-34-11	ALL
	7	UNUSED						ALL
	8		W4220	0004	22		26-18-21	001-099
	8		W4220	0004	20		26-18-21	115-199
	9		W4220	0005	22		26-18-21	001-099
	9		W4220	0005	20		26-18-21	115-199
	10		W4220	0046	22		29-32-21	001-099
	10		W4220	0046	20		29-32-21	115-199
	11		W4220	0001	22		30-21-11	ALL
	12		W4220	0002	22		30-21-11	ALL
	13		W4220	0055	22		30-21-11	001-099
	13		W4220	0003	22		30-21-11	115-199
	14		W4220	3001R	22		73-31-11	ALL
	15		W4220	3001B	22		73-31-11	ALL
	16		W4220	3001Y	22		73-31-11	ALL
	17		W4220	0008	20		74-31-21	ALL
	18		W4220	0007	20		74-31-21	ALL
	19		W4220	1003	20		76-11-21	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W4220	3002Y	22		79-31-11	ALL
	26		W4220	3002B	22		79-31-11	ALL
	27		W4220	3002R	22		79-31-11	ALL
	28		W4220	3003B	22		79-32-11	ALL
	29		W4220	3003R	22		79-32-11	ALL
	30		W4220	3003Y	22		79-32-11	ALL
	31		W4220	2501B	22		79-34-11	ALL
	32		W4220	2501R	22		79-34-11	ALL
	33	UNUSED						001-002, 115-199
	33		W4220	0178	20		78-36-21	003-099
	34		W4220	0015	22		78-36-21	ALL
	35		W4220	0014	22		78-36-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 42

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40032J		AD0880/ /		RCPT (continued)				ALL
	36		W4220	0009	22		76-11-12	ALL
	37		W4220	0010	22		76-11-12	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W4220	0149	22		SPARE	001-099
	40	UNUSED						115-199
	41		W4220	0150	22		SPARE	001-099
	41		W4220	0044	20		SPARE	115-199
	42		W4220	0151	22		SPARE	001-099
	42		W4220	0045	20		SPARE	115-199
	S/R		W4220	YAAC			29-32-21	001-099
	S/R		W4220	1003Z			76-11-21	ALL
	S/R		W4220	2501Z			79-34-11	ALL
	S/R		W4220	2503Z			79-34-11	ALL
	S/R		W4220	YAAA			29-32-21	115-199
D40032P		AD0880/ /		PLUG				ALL
	1		W3402	2504B	20		SPARE	001-099
	1		W3402	0035	20		SPARE	115-199
	2		W3402	2504R	20		SPARE	001-099
	2		W3402	2505B	20		SPARE	115-199
	3	UNUSED						001-099
	3		W3402	2505R	20		SPARE	115-199
	4		W3402	2504Z			SPARE	001-099
	4		W3402	2505Z			SPARE	115-199
	5		W3402	2502R	20		79-34-11	ALL
	6		W3402	2502B	20		79-34-11	ALL
	7	UNUSED						ALL
	8		W3402	0004	18		26-18-21	ALL
	9		W3402	1001	18		26-18-21	ALL
	10		W3402	0006	18		29-32-21	ALL
	11		W3402	3502B	20		30-21-11	ALL
	12		W3402	3502R	20		30-21-11	ALL
	13		W3402	3502Y	20		30-21-11	ALL
	14		W3402	3503R	20		73-31-11	ALL
	15		W3402	3503B	20		73-31-11	ALL
	16		W3402	3503Y	20		73-31-11	ALL
	17		W3402	2503B	20		74-31-21	ALL
	18		W3402	2503R	20		74-31-21	ALL
	19		W3402	1002	20		76-11-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 43

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40032P		AD0880/ /		PLUG (continued)				ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W3402	3504Y	20		79-31-11	ALL
	26		W3402	3504B	20		79-31-11	ALL
	27		W3402	3504R	20		79-31-11	ALL
	28		W3402	3505B	20		79-32-11	ALL
	29		W3402	3505R	20		79-32-11	ALL
	30		W3402	3505Y	20		79-32-11	ALL
	31		W3402	2501B	20		79-34-11	ALL
	32		W3402	2501R	20		79-34-11	ALL
	33	UNUSED						001-002, 115-199
	33		W3402	0036	20		78-36-21	003-099
	34		W3402	0017	20		78-36-21	ALL
	35		W3402	0018	20		78-36-21	ALL
	36		W3402	0020	20		76-11-12	ALL
	37		W3402	0021	20		76-11-12	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W3402	3506B	20		SPARE	ALL
	41		W3402	3506R	20		SPARE	ALL
	42		W3402	3506Y	20		SPARE	ALL
	S/R		W3402	1001Z			26-18-21	ALL
	S/R		W3402	1002Z			76-11-21	ALL
	S/R		W3402	2501Z			79-34-11	ALL
	S/R		W3402	2502Z			79-34-11	ALL
	S/R		W3402	2503Z			74-31-21	ALL
	S/R		W3402	3502Z			30-21-11	ALL
	S/R		W3402	3503Z			73-31-11	ALL
	S/R		W3402	3504Z			79-31-11	ALL
	S/R		W3402	3505Z			79-32-11	ALL
	S/R		W3402	3506Z			SPARE	ALL
	S/R		W3402	YAAA			29-32-21	ALL
D40035J		AP0003/ /		RCPT				ALL
	1		W2251	5001R	24		34-22-91	001-099
	1		W2251	5001R	24		34-22-93	115-199
	2		W2251	5001B	24		34-22-91	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 44

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40035J		AP0003/ /		RCPT (continued)				ALL
	2		W2251	5001B	24		34-22-93	115-199
	3		W2251	5001Z			34-22-91	001-099
	3		W2251	5001Z			34-22-93	115-199
	4		W2251	5002R	24		34-13-21	ALL
	5		W2251	5002B	24		34-13-21	ALL
	6		W2251	5002Z			34-13-21	ALL
	7	UNUSED						001-099
	7		W2251	0022	24		SPARE	115-199
	8	UNUSED						001-099
	8		W2251	0023	22		SPARE	115-199
	9		W2251	0024	22		SPARE	ALL
	10	UNUSED						001-099
	10		W2251	5008R	24		SPARE	115-199
	11	UNUSED						001-099
	11		W2251	5008B	24		SPARE	115-199
	12	UNUSED						001-099
	12		W2251	5008Z			SPARE	115-199
	13	UNUSED						001-099
	13		W2251	0006	22		SPARE	115-199
	14		W2251	2005R	22		SPARE	001-099
	14		W2251	0029	22		SPARE	115-199
	15		W2251	2005B	22		SPARE	001-099
	15		W2251	0030	22		SPARE	115-199
	16	UNUSED						001-099
	16		W2251	5005R	24		SPARE	115-199
	17	UNUSED						001-099
	17		W2251	5005B	24		SPARE	115-199
	18	UNUSED						001-099
	18		W2251	5005Z			SPARE	115-199
	19		W2251	0008	22		22-41-13	ALL
	20		W2251	0016	24		27-51-41	001-099
	20		W2251	0016	22		27-51-41	115-199
	21		W2251	0017	24		27-51-41	001-099
	21		W2251	0017	22		27-51-41	115-199
	22		W2251	0025	24		77-12-11	001-099
	22		W2251	0021	22		SPARE	115-199
	23	UNUSED						001-099
	23		W2251	0027	22		32-46-11	115-199
	24		W2251	3001R	24		34-12-11	ALL
	25		W2251	3001B	24		34-12-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 45

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40035J		AP0003/ /		RCPT (continued)				ALL
	26		W2251	3001Y	24		34-12-11	ALL
	27		W2251	2001R	22		34-12-11	ALL
	28		W2251	2001B	22		34-12-11	ALL
	29	UNUSED						001-099
	29		W2251	0009	24		SPARE	115-199
	30	UNUSED						ALL
	31		W2251	0028	22		31-41-14	ALL
	32		W2251	0003	22		31-41-14	ALL
	33		W2251	0004	22		SPARE	ALL
	34		W2251	0010	22		32-61-12	001-099
	34		W2251	0005	22		SPARE	115-199
	35		W2251	0011	24		32-61-12	ALL
	36		W2251	5010R	24		SPARE	001-099
	36		W2251	0010	22		32-61-12	115-199
	37		W2251	5010B	24		SPARE	001-099
	37		W2251	2005R	22		SPARE	115-199
	38		W2251	5010Z			SPARE	001-099
	38		W2251	2005B	22		SPARE	115-199
	39		W2251	0033	22		32-61-12	ALL
	40		W2251	0034	24		32-61-12	ALL
	41	UNUSED						001-099
	41		W2251	0035	22		SPARE	115-199
	42		W2251	5003R	24		22-32-11	ALL
	43		W2251	5003B	24		22-32-11	ALL
	44		W2251	5003Z			22-32-11	ALL
	45		W2251	2501R	24		77-12-11	001-099
	45		W2251	2501R	24		SPARE	115-199
	46		W2251	2501B	24		77-12-11	001-099
	46		W2251	2501B	24		SPARE	115-199
	47		W2251	2501Z			77-12-11	001-099
	47		W2251	2501Z			SPARE	115-199
	48	UNUSED						001-099
	48		W2251	0026	22		SPARE	115-199
	49		W2251	0018	22		32-61-21	ALL
	50		W2251	0019	22		32-61-21	ALL
	51		W2251	0020	22		32-61-21	ALL
	52		W2251	0012	24		27-58-11	001-099
	52		W2251	0012	22		27-58-11	115-199
	53		W2251	0013	24		27-58-11	001-099
	53		W2251	0013	22		27-58-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 46

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40035J		AP0003/ /		RCPT (continued)				ALL
	54		W2251	0014	24		27-58-11	001-099
	54		W2251	0014	22		27-58-11	115-199
	55		W2251	0015	24		27-58-11	001-099
	55		W2251	0015	22		27-58-11	115-199
D40035P		AP0003/ /		PLUG				001-099
D40035P		217.6/198/34		PLUG				115-199
	1		W0003	5027R	24		34-22-91	001-099
	1		W0003	5027R	24		34-22-93	115-199
	2		W0003	5027B	24		34-22-91	001-099
	2		W0003	5027B	24		34-22-93	115-199
	3		W0003	FRAA			34-22-91	001-099
	3		W0003	FRAA			34-22-93	115-199
	4		W0003	5006R	24		34-13-21	ALL
	5		W0003	5006B	24		34-13-21	ALL
	6		W0003	5006Z			34-13-21	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W0003	0186	22		22-41-13	ALL
	20		W0003	0097	24		27-51-41	ALL
	21		W0003	0120	24		27-51-41	ALL
	22		W0003	0565	24		77-12-11	001-099
	22	UNUSED						115-199
	23	UNUSED						001-099
	23		W0003	0482	22		32-46-11	115-199
	24		W0003	3001R	24		34-12-11	ALL
	25		W0003	3001B	24		34-12-11	ALL
	26		W0003	3001Y	24		34-12-11	ALL
	27		W0003	2001R	22		34-12-11	ALL
	28		W0003	2001B	22		34-12-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 47

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40035P		AP0003/ /		PLUG (continued)				001-099
D40035P		217.6/198/34		PLUG (continued)				115-199
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W0003	0445	22		31-41-14	ALL
	32		W0003	0443	22		31-41-14	ALL
	33	UNUSED						ALL
	34		W0003	0255	22		32-61-12	001-099
	34	UNUSED						115-199
	35		W0003	0047	24		32-61-12	001-099
	35		W0003	0047	22		32-61-12	115-199
	36	UNUSED						001-099
	36		W0003	0255	22		32-61-12	115-199
	37	UNUSED						ALL
	38	UNUSED						ALL
	39		W0003	0256	22		32-61-12	ALL
	40		W0003	0276	24		32-61-12	001-099
	40		W0003	0276	22		32-61-12	115-199
	41	UNUSED						ALL
	42		W0003	5031R	24		22-32-11	ALL
	43		W0003	5031B	24		22-32-11	ALL
	44		W0003	FRAD			22-32-11	ALL
	45		W0003	2509R	24		77-12-11	001-099
	45	UNUSED						115-199
	46		W0003	2509B	24		77-12-11	001-099
	46	UNUSED						115-199
	47		W0003	2509Z			77-12-11	001-099
	47	UNUSED						115-199
	48	UNUSED						ALL
	49		W0003	0177	22		32-61-21	ALL
	50		W0003	0179	22		32-61-21	ALL
	51		W0003	0173	22		32-61-21	ALL
	52		W0003	0040	24		27-58-11	001-099
	52		W0003	0040	22		27-58-11	115-199
	53		W0003	0039	24		27-58-11	001-099
	53		W0003	0039	22		27-58-11	115-199
	54		W0003	0038	24		27-58-11	001-099
	54		W0003	0038	22		27-58-11	115-199
	55		W0003	0022	24		27-58-11	001-099
	55		W0003	0022	22		27-58-11	115-199
			W0003	0147	20		34-22-91	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 48

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40035P		AP0003/ /		PLUG (continued)				001-099
D40035P		217.6/198/34		PLUG (continued)				115-199
			W0003	5027Z			34-22-91	001-099
			W0003	FRAA			34-22-91	001-099
			W0003	0441	20		22-32-11	ALL
			W0003	5031Z			22-32-11	ALL
			W0003	FRAD			22-32-11	ALL
			W0003	0147	20		34-22-93	115-199
			W0003	5027Z			34-22-93	115-199
			W0003	FRAA			34-22-93	115-199
D40039J		P001-00/ /		RECPT				001-099
D40039J		AP0001/ /		RECPT				115-199
	1	UNUSED						001-099
	1		W2241	0096	24		31-31-31	115-199
	2	UNUSED						001-099
	2		W2241	0097	24		31-31-31	115-199
	3		W2241	0103	22		22-14-11	ALL
	4		W2241	0104	22		22-14-11	ALL
	5		W2241	0105	22		22-14-11	ALL
	6		W2241	0010	22		SPARE	ALL
	7	UNUSED						001-099
	7		W2241	0045	22		SPARE	115-199
	8	UNUSED						001-099
	8		W2241	0114	24		34-61-16	115-199
	9	UNUSED						001-099
	9		W2241	0052	22		SPARE	115-199
	10		W2241	3002R	24		SPARE	001-099
	10		W2241	3002R	24		34-12-11	115-199
	11		W2241	3002B	24		SPARE	001-099
	11		W2241	3002B	24		34-12-11	115-199
	12		W2241	3002Y	24		SPARE	001-099
	12		W2241	3002Y	24		34-12-11	115-199
	13		W2241	2002R	22		SPARE	001-099
	13		W2241	2002R	22		34-12-11	115-199
	14		W2241	2002B	22		SPARE	001-099
	14		W2241	2002B	22		34-12-11	115-199
	15	UNUSED						001-099
	15		W2241	0098	24		31-31-31	115-199
	16	UNUSED						ALL
	17		W2241	0108	24		31-31-61	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 49

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40039J		P001-00/ /		RECPT (continued)				001-099
D40039J		AP0001/ /		RECPT (continued)				115-199
	17	UNUSED						115-199
	18		W2241	0109	24		31-31-61	001-099
	18	UNUSED						115-199
	19		W2241	3001R	24		34-12-11	ALL
	20		W2241	3001B	24		34-12-11	ALL
	21		W2241	3001Y	24		34-12-11	ALL
	22		W2241	2001R	22		34-12-11	ALL
	23		W2241	2001B	22		34-12-11	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						001-099
	26		W2241	0134	24		34-61-18	115-199
	27	UNUSED						001-099
	27		W2241	0053	22		SPARE	115-199
	28		W2241	5008R	24		SPARE	ALL
	29		W2241	5008B	24		SPARE	ALL
	30		W2241	5008Z			SPARE	ALL
	31		W2241	0054	22		31-51-21	ALL
	32		W2241	0055	22		31-51-21	ALL
	33		W2241	0106	24		34-22-37	ALL
	34		W2241	0024	22		32-42-11	ALL
	35	UNUSED						001-099
	35		W2241	0032	22		SPARE	115-199
	36		W2241	0033	22		34-61-15	ALL
	37	UNUSED						001-099
	37		W2241	2512R	24		SPARE	115-199
	38	UNUSED						001-099
	38		W2241	2512B	24		SPARE	115-199
	39		W2241	5031B	24		34-45-01	001-002
	39	UNUSED						003-099
	39		W2241	2512Z			SPARE	115-199
	40	UNUSED						ALL
	41		W2241	0120	24		34-45-01	001-002, 115-199
	41	UNUSED						003-099
	42		W2241	5030R	24		34-45-01	001-002, 115-199
	42	UNUSED						003-099
	43		W2241	5030B	24		34-45-01	001-002, 115-199
	43	UNUSED						003-099
	44		W2241	FRAA			34-45-01	001-002, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 50

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40039J		P001-00/ /		RECPT (continued)				001-099
D40039J		AP0001/ /		RECPT (continued)				115-199
	44	UNUSED						003-099
	45		W2241	0121	24		34-45-01	001-002, 115-199
	45	UNUSED						003-099
	46		W2241	0122	24		34-45-01	ALL
	47		W2241	0123	24		34-45-01	ALL
	48		W2241	5031R	24		34-45-01	ALL
	49	UNUSED						001-002
	49		W2241	5031B	24		34-45-01	003-099, 115-199
	50		W2241	FRAB			34-45-01	001-099
	50		W2241	0093	22		34-55-11	115-199
	51	UNUSED						001-099
	51		W2241	5028R	24		34-55-11	115-199
	52	UNUSED						001-099
	52		W2241	5028B	24		34-55-11	115-199
	53	UNUSED						001-099
	53		W2241	5028Z			34-55-11	115-199
	54	UNUSED						001-099
	54		W2241	0094	24		34-55-11	115-199
	55	UNUSED						001-099
	55		W2241	FRAB			34-45-01	115-199
			W2241	1024	22		34-45-01	001-002, 115-199
			W2241	5030Z			34-45-01	001-002, 115-199
			W2241	FRAA			34-45-01	001-002, 115-199
			W2241	1025	22		34-45-01	ALL
			W2241	5031Z			34-45-01	ALL
			W2241	FRAB			34-45-01	ALL
D40039P		AP0001/ /		PLUG				001-099
D40039P		217.6/198/L34		PLUG				115-199
	1	UNUSED						001-099
	1		W0001	0074	24		31-31-31	115-199
	2	UNUSED						001-099
	2		W0001	0075	24		31-31-31	115-199
	3		W0001	0033	22		22-14-11	ALL
	4		W0001	0034	22		22-14-11	ALL
	5		W0001	0035	22		22-14-11	ALL
	6	UNUSED						001-099
	6		W0001	0665	24		SPARE	115-199
	7	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 51

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40039P		AP0001 /		PLUG (continued)				001-099
D40039P		217.6/198/L34		PLUG (continued)				115-199
	7		W0001	0666	24		SPARE	115-199
I	8	UNUSED						001-099
I	8		W0001	0703	22		34-61-16	115-199
	9	UNUSED						ALL
	10	UNUSED						001-099
	10		W0001	3002R	24		34-12-11	115-199
	11	UNUSED						001-099
	11		W0001	3002B	24		34-12-11	115-199
	12	UNUSED						001-099
	12		W0001	3002Y	24		34-12-11	115-199
	13	UNUSED						001-099
	13		W0001	2002R	22		34-12-11	115-199
	14	UNUSED						001-099
	14		W0001	2002B	22		34-12-11	115-199
	15	UNUSED						001-099
	15		W0001	0076	24		31-31-31	115-199
	16	UNUSED						ALL
	17		W0001	0600	24		31-31-61	001-099
	17	UNUSED						115-199
	18		W0001	0601	24		31-31-61	001-099
	18	UNUSED						115-199
	19		W0001	3001R	24		34-12-11	ALL
	20		W0001	3001B	24		34-12-11	ALL
	21		W0001	3001Y	24		34-12-11	ALL
	22		W0001	2001R	22		34-12-11	ALL
	23		W0001	2001B	22		34-12-11	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
I	26	UNUSED						001-099
I	26		W0001	0470	22		34-61-18	115-199
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W0001	0202	22		31-51-21	ALL
	32		W0001	0204	22		31-51-21	ALL
	33		W0001	0564	24		34-22-37	ALL
	34		W0001	0273	22		32-42-11	ALL
	35	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 52

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40039P		AP0001/ /		PLUG (continued)				001-099
D40039P		217.6/198/L34		PLUG (continued)				115-199
	36		W0001	0176	22		34-61-15	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						001-099
	50		W0001	0555	22		34-55-11	115-199
	51	UNUSED						001-099
	51		W0001	5047R	24		34-55-11	115-199
	52	UNUSED						001-099
	52		W0001	5047B	24		34-55-11	115-199
	53	UNUSED						001-099
	53		W0001	5047Z			34-55-11	115-199
	54	UNUSED						001-099
	54		W0001	0556	24		34-55-11	115-199
	55	UNUSED						ALL
D40042J		AC0880/ /		RCPT				ALL
	1	UNUSED						ALL
	2		W4210	0019	22		26-11-12	001-099
	2		W4210	0019	20		26-11-12	115-199
	3		W4210	0020	20		26-12-11	ALL
	4		W4210	0021	20		26-12-11	ALL
	5		W4210	0084	20		SPARE	001-099
	5		W4210	0109	22		SPARE	115-199
	6		W4210	0018	22		26-11-12	001-099
	6		W4210	0018	20		26-11-12	115-199
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 53

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40042J		AC0880/ /		RCPT (continued)				ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	S/R		W4210	YAAA			26-11-12	001-099
	S/R		W4210	YAAF			26-12-11	115-199
D40042P		AC0880/ /		PLUG				ALL
	1	UNUSED						ALL
	2		W3328	0008	20		26-11-12	ALL
	3		W3328	0001	18		26-12-11	ALL
	4		W3328	0006	18		26-12-11	ALL
	5		W3328	0018	20		SPARE	ALL
	6		W3328	0007	20		26-11-12	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	S/R		W3328	YAAA			26-12-11	ALL
D40044J		AS1123/ /		RECPT				ALL
	1		W3330	0001	18		26-12-11	ALL
	2		W3330	0002	18		26-12-11	ALL
	3		W3330	0011	20		36-11-12	ALL
	4		W3330	0005	20		26-11-12	ALL
	5		W3330	0006	18		36-11-11	ALL
	6		W3330	0007	18		36-11-11	ALL
	7		W3330	0008	18		36-11-11	ALL
	8		W3330	0004	20		26-11-12	ALL
	9		W3330	0012	20		36-11-12	ALL
	10		W3330	0013	20		36-11-12	ALL
	11		W3330	0014	20		36-11-12	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W3330	0015	20		SPARE	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 54

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40044P		AS1123/ /		PLUG				ALL
	1		W3328	0005	18		26-12-11	ALL
	2		W3328	0006	18		26-12-11	ALL
	3		W3328	0012	20		36-11-12	ALL
	4		W3328	0008	20		26-11-12	ALL
	5		W3328	0009	20		36-11-11	ALL
	6		W3328	0010	20		36-11-11	ALL
	7		W3328	0011	20		36-11-11	ALL
	8		W3328	0007	20		26-11-12	ALL
	9		W3328	0013	20		36-11-12	ALL
	10		W3328	0014	20		36-11-12	ALL
	11		W3328	0015	20		36-11-12	ALL
	12		W3328	0016	18		SPARE	ALL
	13		W3328	0017	18		SPARE	ALL
	14		W3328	0018	20		SPARE	ALL
D40046J		AD0880/ /		RCPT				ALL
	1	UNUSED						ALL
	2		W4220	0018	22		26-11-22	001-099
	2		W4220	0018	20		26-11-22	115-199
	3		W4220	0021	22		26-12-21	ALL
	4		W4220	0022	22		26-12-21	ALL
	5		W4220	0017	22		26-11-22	001-099
	5		W4220	0017	20		26-11-22	115-199
	6		W4220	0020	20		SPARE	001-099
	6	UNUSED						115-199
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	S/R		W4220	YAAA			26-12-21	001-099
	S/R		W4220	YAAB			26-11-22	115-199
D40046P		AD0880/ /		PLUG				ALL
	1		W3428	0009	20		SPARE	ALL
	2		W3428	0002	20		26-11-22	ALL
	3		W3428	0003	18		26-12-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 55

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40046P		AD0880/ /		PLUG (continued)				ALL
	4		W3428	0008	18		26-12-21	ALL
	5		W3428	0001	20		26-11-22	ALL
	6		W3428	0010	20		SPARE	ALL
	7		W3428	0011	20		SPARE	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	S/R		W3428	YAAA			26-12-21	ALL
D40048J		AS2123/ /		RECPT				ALL
	1	UNUSED						ALL
	2		W3430	0005	20		26-11-22	ALL
	3		W3430	0001	18		26-12-21	ALL
	4		W3430	0002	18		26-12-21	ALL
	5		W3430	0004	20		26-11-22	ALL
	6	UNUSED						ALL
	7		W3430	0015	20		SPARE	ALL
	8		W3430	0006	18		36-11-21	ALL
	9		W3430	0007	18		36-11-21	ALL
	10		W3430	0008	18		36-11-21	ALL
	11		W3430	0011	20		36-11-22	ALL
	12		W3430	0012	20		36-11-22	ALL
	13		W3430	0013	20		36-11-22	ALL
	14		W3430	0014	20		36-11-22	ALL
D40048P		AS2123/ /		PLUG				ALL
	1		W3428	0009	20		SPARE	ALL
	2		W3428	0002	20		26-11-22	ALL
	3		W3428	0006	18		26-12-21	ALL
	4		W3428	0008	18		26-12-21	ALL
	5		W3428	0001	20		26-11-22	ALL
	6		W3428	0010	20		SPARE	ALL
	7		W3428	0011	20		SPARE	ALL
	8		W3428	0012	20		36-11-21	ALL
	9		W3428	0013	20		36-11-21	ALL
	10		W3428	0014	20		36-11-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 56

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40048P		AS2123/ /		PLUG (continued)				ALL
	11		W3428	0015	20		36-11-22	ALL
	12		W3428	0016	20		36-11-22	ALL
	13		W3428	0017	20		36-11-22	ALL
	14		W3428	0018	20		36-11-22	ALL
D40050J		P37/ /		RCPT				ALL
	1		W1270	0555	14		21-25-11	ALL
	2		W1270	0556	14		21-25-11	ALL
	3		W1270	0651	20		21-58-13	ALL
	3		W1270	0665	20		21-58-13	ALL
	4		W1270	0383	16		21-58-13	ALL
	5	UNUSED						ALL
	6		W1272	0220	20		30-71-21	001-099
	6	UNUSED						115-199
	7	UNUSED						ALL
	8		W1270	0334	16		21-58-13	ALL
	9		W1270	0335	16		21-58-13	ALL
	10		W1270	0336	16		21-58-13	ALL
	11		W1270	0557	14		21-25-11	ALL
	12		W1270	0646	24		21-25-11	ALL
D40050P		P037-00/ /		PLUG				ALL
	1		W4104	0030	14		21-25-11	ALL
	2		W4104	0031	14		21-25-11	ALL
	3		W4104	0011	16		21-58-13	ALL
	4		W4104	0012	16		21-58-13	ALL
	5	UNUSED						ALL
	6		W4104	0077	20		30-71-21	001-099
	6	UNUSED						115-199
	7	UNUSED						ALL
	8		W4104	0008	16		21-58-13	ALL
	9		W4104	0009	16		21-58-13	ALL
	10		W4104	0010	16		21-58-13	ALL
	11		W4104	0032	14		21-25-11	ALL
	12		W4104	0035	24		21-25-11	ALL
D40056J		P36/ /		RCPT				ALL
	1		W1260	5574	16		21-58-13	ALL
	2		W1260	5578	16		21-58-13	ALL
	3	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 57

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40056J		P36/ /		RCPT (continued)				ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1260	5572	16		21-58-13	ALL
	7	UNUSED						ALL
	8		W1260	5571	16		21-58-13	ALL
	9	UNUSED						ALL
	10		W1260	5573	16		21-58-13	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W1260	0890	24		21-25-11	ALL
	23		W1260	0666	24		21-58-12	ALL
	24		W1260	0013	24		21-58-12	ALL
	25		W1260	0318	22		21-58-12	ALL
	26		W1260	0529	22		21-58-12	ALL
	27		W1260	0010	24		21-58-12	ALL
	28		W1260	0014	24		21-58-12	ALL
	29		W1260	0862	22		21-58-15	ALL
	30		W1260	0863	22		21-58-15	ALL
	31		W1260	0865	22		21-58-15	ALL
	32	UNUSED						ALL
	CAP	Y	W1260	0006	20		SPARE	001-002
	CAP	Y	W1260	0207	24		21-58-11	001-099
	CAP	Y	W1260	0006	20		21-58-11	003-099, 115-199
D40056P		P036-00/ /		PLUG				ALL
	1		W4004	0024	16		21-58-13	ALL
	2		W4004	0025	16		21-58-13	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W4004	0022	16		21-58-13	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 58

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40056P		P036-00/ /		PLUG (continued)				ALL
	7	UNUSED						ALL
	8		W4004	0021	16		21-58-13	ALL
	9	UNUSED						ALL
	10		W4004	0023	16		21-58-13	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W4004	0020	24		21-25-11	ALL
	23		W4004	0032	24		21-58-12	ALL
	24		W4004	1004	24		21-58-12	ALL
	25		W4004	1002	22		21-58-12	ALL
	26		W4004	1003	22		21-58-12	ALL
	27		W4004	1001	24		21-58-12	ALL
	28		W4004	0040	24		21-58-12	ALL
	29		W4004	0033	22		21-58-15	ALL
	30		W4004	0034	22		21-58-15	ALL
	31		W4004	0042	22		21-58-15	ALL
	32	UNUSED						ALL
	DED		W4004	1001Z			21-58-12	ALL
	DED		W4004	1002Z			21-58-12	ALL
	DED		W4004	1003Z			21-58-12	ALL
	DED		W4004	1004Z			21-58-12	ALL
D40060J		P36/ /		RCPT				ALL
	1		W1260	0083	24		36-11-12	ALL
	2		W1260	2013B	24		21-51-14	001-099
	2	UNUSED						115-199
	3		W1260	2013R	24		21-51-14	001-099
	3	UNUSED						115-199
	4		W1260	2014R	24		21-51-14	001-099
	4	UNUSED						115-199
	5		W1260	0023	20		21-61-51	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 59

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40060J		P36/ /		RCPT (continued)				ALL
	6		W1260	6063	24		21-51-13	001-099
	6	UNUSED						115-199
	7		W1260	0087	24		36-21-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W1260	0332	20		36-11-11	ALL
	12		W1260	0334	20		36-11-11	ALL
	13		W1260	0081	20		36-11-11	ALL
	14		W1260	0341	20		36-11-12	ALL
	15		W1260	0342	20		36-11-12	ALL
	16		W1260	6056	24		21-51-13	001-099
	16	UNUSED						115-199
	17		W1260	6061	24		21-51-13	001-099
	17	UNUSED						115-199
	18		W1260	2014B	24		21-51-14	001-099
	18	UNUSED						115-199
	19		W1260	6094	24		21-51-15	001-099
	19	UNUSED						115-199
	20		W1260	6095	24		21-51-15	001-099
	20	UNUSED						115-199
	21		W1260	6096	24		21-51-15	001-099
	21	UNUSED						115-199
	22		W1260	6097	24		21-51-15	001-099
	22	UNUSED						115-199
	23		W1260	0325	20		36-11-11	ALL
	24		W1260	6045	22		21-51-13	001-099
	24	UNUSED						115-199
	25		W1260	0113	20		21-51-12	ALL
	26		W1260	6046	22		21-51-13	001-099
	26	UNUSED						115-199
	27		W1260	6047	22		21-51-13	001-099
	27	UNUSED						115-199
	28		W1260	6048	22		21-51-13	001-099
	28	UNUSED						115-199
	29		W1260	6071	24		21-51-13	001-099
	29	UNUSED						115-199
	30		W1260	6075	24		21-51-13	001-099
	30	UNUSED						115-199
	31		W1260	0124	24		36-11-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 60

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40060J		P36/ /		RCPT (continued)				ALL
	32		W1260	2008B	24		21-51-12	ALL
	33		W1260	2008R	24		21-51-12	ALL
	34	UNUSED						ALL
	35		W1260	6077	24		21-51-13	001-099
	35	UNUSED						115-199
	36	UNUSED						ALL
	37		W1260	6080	24		21-51-13	001-099
	37	UNUSED						115-199
	38		W1260	6072	24		21-51-13	001-099
	38	UNUSED						115-199
	39	UNUSED						ALL
	40		W1260	6073	22		21-51-13	001-099
	40	UNUSED						115-199
	41	UNUSED						ALL
	42		W1260	2009B	24		36-21-11	001-099
	42	UNUSED						115-199
	43		W1260	2009R	24		36-21-11	001-099
	43	UNUSED						115-199
	44	UNUSED						ALL
	45		W1260	0130	24		36-11-11	001-099
	45		W1260	0082	24		36-11-11	115-199
	46		W1260	2010R	24		36-21-11	001-099
	46		W1260	2006R	24		36-21-11	115-199
	47		W1260	2010B	24		36-21-11	001-099
	47		W1260	2006B	24		36-21-11	115-199
	48		W1260	6074	22		21-51-13	001-099
	48	UNUSED						115-199
	49	UNUSED						001-099
	49		W1260	0112	24		21-51-12	115-199
	50	UNUSED						ALL
	51		W1260	6090	24		21-51-14	001-099
	51	UNUSED						115-199
	52	UNUSED						ALL
	53		W1260	6093	24		21-51-14	001-099
	53	UNUSED						115-199
	54		W1260	2015B	24		21-51-14	001-099
	54	UNUSED						115-199
	55		W1260	2015R	24		21-51-14	001-099
	55	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 61

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40060P		P036-00/ /		PLUG				001-099
D40060P		P36/ /		PLUG				115-199
	1		W4006	0001	24		36-11-12	ALL
	2		W4006	2014B	24		21-51-14	001-099
	2	UNUSED						115-199
	3		W4006	2014R	24		21-51-14	001-099
	3	UNUSED						115-199
	4		W4006	2013R	24		21-51-14	001-099
	4	UNUSED						115-199
	5		W4006	0105	20		21-61-51	ALL
	6		W4006	0091	24		21-51-13	001-099
	6	UNUSED						115-199
	7		W4006	0032	24		36-21-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W4006	0042	20		36-11-11	ALL
	12		W4006	0043	20		36-11-11	ALL
	13		W4006	0044	20		36-11-11	ALL
	14		W4006	0045	20		36-11-12	ALL
	15		W4006	0046	20		36-11-12	ALL
	16		W4006	0092	24		21-51-13	001-099
	16	UNUSED						115-199
	17		W4006	0093	24		21-51-13	001-099
	17	UNUSED						115-199
	18		W4006	2013B	24		21-51-14	001-099
	18	UNUSED						115-199
	19		W4006	0162	24		21-51-15	001-099
	19	UNUSED						115-199
	20		W4006	0160	24		21-51-15	001-099
	20	UNUSED						115-199
	21		W4006	0161	24		21-51-15	001-099
	21	UNUSED						115-199
	22		W4006	0164	24		21-51-15	001-099
	22	UNUSED						115-199
	23		W4006	0118	20		36-11-11	ALL
	24		W4006	0031	22		21-51-13	001-099
	24	UNUSED						115-199
	25		W4006	0257	20		21-51-12	ALL
	26		W4006	0030	22		21-51-13	001-099
	26	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 62

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40060P		P036-00/ /		PLUG (continued)				001-099
D40060P		P36/ /		PLUG (continued)				115-199
	27		W4006	0004	22		21-51-13	001-099
	27	UNUSED						115-199
	28		W4006	0003	22		21-51-13	001-099
	28	UNUSED						115-199
	29		W4006	0099	24		21-51-13	001-099
	29	UNUSED						115-199
	30		W4006	0094	24		21-51-13	001-099
	30	UNUSED						115-199
	31		W4006	0064	24		36-11-12	ALL
	32		W4006	2049B	24		21-51-12	ALL
	33		W4006	2049R	24		21-51-12	ALL
	34	UNUSED						001-099
	34		W4006	0303	22		SPARE	115-199
	35		W4006	0095	24		21-51-13	001-099
	35	UNUSED						115-199
	36	UNUSED						ALL
	37		W4006	0096	24		21-51-13	001-099
	37	UNUSED						115-199
	38		W4006	0085	24		21-51-13	001-099
	38	UNUSED						115-199
	39	UNUSED						ALL
	40		W4006	0006	22		21-51-13	001-099
	40	UNUSED						115-199
	41	UNUSED						001-099
	41		W4006	0273	22		SPARE	115-199
	42		W4006	2036B	24		36-21-11	001-099
	42	UNUSED						115-199
	43		W4006	2036R	24		36-21-11	001-099
	43	UNUSED						115-199
	44	UNUSED						001-099
	44		W4006	0301	22		SPARE	115-199
	45		W4006	0098	24		36-11-11	ALL
	46		W4006	2001R	24		36-21-11	ALL
	47		W4006	2001B	24		36-21-11	ALL
	48		W4006	0005	22		21-51-13	001-099
	48	UNUSED						115-199
	49		W4006	0135	24		SPARE	001-099
	49		W4006	0135	24		21-51-12	115-199
	50	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 63

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40060P		P036-00/ /		PLUG (continued)				001-099
D40060P		P36/ /		PLUG (continued)				115-199
	51		W4006	0266	24		21-51-14	001-099
	51	UNUSED						115-199
	52	UNUSED						ALL
	53		W4006	0050	24		21-51-14	001-099
	53	UNUSED						115-199
	54		W4006	2015B	24		21-51-14	001-099
	54	UNUSED						115-199
	55		W4006	2015R	24		21-51-14	001-099
	55	UNUSED						115-199
D40063J		670/210/R70		RCPT				115-199
	1		W3503	4251R	24		23-42-11	115-199
	2		W3503	4251Z			23-42-11	115-199
	3		W3503	4251B	24		23-42-11	115-199
	4		W3503	4251Y	24		23-42-11	115-199
	5		W3503	4251G	24		23-42-11	115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 64

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40063J		670/210/R70		RCPT (continued)				115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
D40064J		P37/ /		RCPT				ALL
	1		W1270	2006B	24		21-51-12	ALL
	2		W1270	2006R	24		21-51-12	ALL
	3		W1270	0166	20		21-51-22	001-099
	3		W1270	0166	24		21-51-22	115-199
	4		W1270	2009B	24		21-51-22	ALL
	5		W1270	2009R	24		21-51-22	ALL
	6		W1270	0055	20		33-44-11	ALL
	7		W1270	0146	24		36-11-22	ALL
	8		W1270	0940	24		21-51-22	001-099
	8		W1270	5022R	22		32-42-11	115-199
	9		W1270	0941	24		21-51-22	001-099
	9		W1270	5022B	22		32-42-11	115-199
	10		W1270	2013B	24		21-51-22	001-099
	10		W1270	5022Z			32-42-11	115-199
	11		W1270	5577	24		21-61-11	ALL
	12		W1270	6074	20		36-11-22	ALL
	13		W1270	5641	24		21-61-31	ALL
	14		W1270	5605	24		21-61-21	ALL
	15		W1270	2011R	24		36-21-11	001-099
	15	UNUSED						115-199
	16		W1270	2011B	24		36-21-11	001-099
	16	UNUSED						115-199
	17		W1270	0970	24		21-51-23	001-099
	17	UNUSED						115-199
	18		W1270	0991	24		21-51-25	001-099
	18	UNUSED						115-199
	19		W1270	0992	24		21-51-25	001-099
	19	UNUSED						115-199
	20		W1270	0993	24		21-51-25	001-099
	20	UNUSED						115-199
	21		W1270	0994	24		21-51-25	001-099
	21	UNUSED						115-199
	22		W1270	0924	24		21-51-22	001-099
	22	UNUSED						115-199
	23		W1270	0936	24		21-51-22	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 65

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40064J		P37/ I		RCPT (continued)				ALL
	23	UNUSED						115-199
	24		W1270	2014B	24		21-51-22	001-099
	24	UNUSED						115-199
	25		W1270	0974	24		21-51-23	001-099
	25	UNUSED						115-199
	26		W1270	0977	24		21-51-23	001-099
	26	UNUSED						115-199
	27		W1270	0967	24		21-51-23	001-099
	27	UNUSED						115-199
	28		W1270	0968	22		21-51-23	001-099
	28	UNUSED						115-199
	29		W1270	0969	22		21-51-23	001-099
	29	UNUSED						115-199
	30		W1270	0072	24		36-21-11	ALL
	31		W1270	2012R	24		36-21-11	001-099
	31		W1270	2002R	24		36-21-11	115-199
	32		W1270	2012B	24		36-21-11	001-099
	32		W1270	2002B	24		36-21-11	115-199
	33		W1270	6066	20		36-11-21	ALL
	34		W1270	6072	20		36-11-21	ALL
	35		W1270	6105	20		36-11-21	ALL
	36		W1270	0988	24		21-51-24	001-099
	36	UNUSED						115-199
	37		W1270	2015B	24		21-51-24	001-099
	37	UNUSED						115-199
	38		W1270	5793	20		30-71-11	ALL
	39		W1270	0937	24		21-51-22	001-099
	39	UNUSED						115-199
	40		W1270	6088	24		36-22-11	ALL
	41		W1270	2015R	24		21-51-24	001-099
	41	UNUSED						115-199
	42		W1270	2016B	24		21-51-24	001-099
	42	UNUSED						115-199
	43		W1270	2016R	24		21-51-24	001-099
	43	UNUSED						115-199
	44	UNUSED						001-099
	44		W1272	0220	24		30-71-21	115-199
	45		W1270	0989	24		21-51-24	001-099
	45	UNUSED						115-199
	46		W1270	6075	20		36-11-22	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 66

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40064J		P37/ /		RCPT (continued)				ALL
	47		W1270	2014R	24		21-51-22	001-099
	47	UNUSED						115-199
	48		W1270	0070	24		36-11-22	ALL
	49		W1270	2017R	24		21-51-24	001-099
	49	UNUSED						115-199
	50		W1270	2017B	24		21-51-24	001-099
	50	UNUSED						115-199
	51		W1270	0938	24		21-51-22	001-099
	51	UNUSED						115-199
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	56		W1270	0939	24		21-51-22	001-099
	56	UNUSED						115-199
	57	UNUSED						001-099
	57		W1270	0135	24		21-51-22	115-199
	58	UNUSED						001-099
	58		W1270	5788	24		21-51-11	115-199
	59		W1270	2013R	24		21-51-22	001-099
	59	UNUSED						115-199
	60		W1270	6022	24		21-51-21	ALL
	61		W1270	5500	24		21-51-21	ALL
D40064P		P037-00/ /		PLUG				001-099
D40064P		P37/ /		PLUG				115-199
	1		W4106	2031B	24		21-51-12	ALL
	2		W4106	2031R	24		21-51-12	ALL
	3		W4106	0241	20		21-51-22	ALL
	4		W4106	2049B	24		21-51-22	ALL
	5		W4106	2049R	24		21-51-22	ALL
	6		W4106	0090	20		33-44-11	ALL
	7		W4106	0034	24		36-11-22	ALL
	8		W4106	0001	24		21-51-22	001-099
	8		W4106	5001R	22		32-42-11	115-199
	9		W4106	0007	24		21-51-22	001-099
	9		W4106	5001B	22		32-42-11	115-199
	10		W4106	2035B	24		21-51-22	001-099
	10		W4106	5001Z			32-42-11	115-199
	11		W4106	0035	24		21-61-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 67

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40064P		P037-00/ /		PLUG (continued)				001-099
D40064P		P37/ /		PLUG (continued)				115-199
	12		W4106	0031	20		36-11-22	ALL
	13		W4106	0037	24		21-61-31	ALL
	14		W4106	0039	24		21-61-21	ALL
	15		W4106	2037R	24		36-21-11	001-099
	15	UNUSED						115-199
	16		W4106	2037B	24		36-21-11	001-099
	16	UNUSED						115-199
	17		W4106	0050	24		21-51-23	001-099
	17	UNUSED						115-199
	18		W4106	0167	24		21-51-25	001-099
	18	UNUSED						115-199
	19		W4106	0168	24		21-51-25	001-099
	19	UNUSED						115-199
	20		W4106	0169	24		21-51-25	001-099
	20	UNUSED						115-199
	21		W4106	0171	24		21-51-25	001-099
	21	UNUSED						115-199
	22		W4106	0006	24		21-51-22	001-099
	22	UNUSED						115-199
	23		W4106	0005	24		21-51-22	001-099
	23	UNUSED						115-199
	24		W4106	2020B	24		21-51-22	001-099
	24		W4106	0162	24		SPARE	115-199
	25		W4106	0051	24		21-51-23	001-099
	25	UNUSED						115-199
	26		W4106	0052	24		21-51-23	001-099
	26	UNUSED						115-199
	27		W4106	0166	24		21-51-23	001-099
	27	UNUSED						115-199
	28		W4106	0065	20		21-51-23	001-099
	28	UNUSED						115-199
	29		W4106	0064	20		21-51-23	001-099
	29	UNUSED						115-199
	30		W4106	0083	24		36-21-11	ALL
	31		W4106	2002R	24		36-21-11	ALL
	32		W4106	2002B	24		36-21-11	ALL
	33		W4106	0084	20		36-11-21	ALL
	34		W4106	0085	20		36-11-21	ALL
	35		W4106	0086	20		36-11-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 68

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40064P		P037-00/ /		PLUG (continued)				001-099
D40064P		P37/ /		PLUG (continued)				115-199
	36		W4106	0066	24		21-51-24	001-099
	36	UNUSED						115-199
	37		W4106	2021B	24		21-51-24	001-099
	37	UNUSED						115-199
	38		W4106	0089	20		30-71-11	ALL
	39		W4106	0004	24		21-51-22	001-099
	39	UNUSED						115-199
	40		W4106	0094	24		36-22-11	ALL
	41		W4106	2021R	24		21-51-24	001-099
	41	UNUSED						115-199
	42		W4106	2022B	24		21-51-24	001-099
	42	UNUSED						115-199
	43		W4106	2022R	24		21-51-24	001-099
	43	UNUSED						115-199
	44	UNUSED						001-099
	44		W4106	0077	24		30-71-21	115-199
	45		W4106	0067	24		21-51-24	001-099
	45	UNUSED						115-199
	46		W4106	0032	20		36-11-22	ALL
	47		W4106	2020R	24		21-51-22	001-099
	47		W4106	0109	24		SPARE	115-199
	48		W4106	0110	24		36-11-22	ALL
	49		W4106	2025R	24		21-51-24	001-099
	49	UNUSED						115-199
	50		W4106	2025B	24		21-51-24	001-099
	50	UNUSED						115-199
	51		W4106	0003	24		21-51-22	001-099
	51	UNUSED						115-199
	52		W4106	0244	22		SPARE	ALL
	53		W4106	0245	22		SPARE	ALL
	54		W4106	0243	24		SPARE	ALL
	55		W4106	0242	24		SPARE	ALL
	56		W4106	0002	24		21-51-22	001-099
	56	UNUSED						115-199
	57	UNUSED						001-099
	57		W4106	0104	24		21-51-22	115-199
	58		W4106	0105	24		SPARE	001-099
	58		W4106	0105	24		21-51-11	115-199
	59		W4106	2035R	24		21-51-22	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 69

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40064P		P037-00/ /		PLUG (continued)				001-099
D40064P		P37/ /		PLUG (continued)				115-199
	59	UNUSED						115-199
	60		W4106	0107	24		21-51-21	ALL
	61		W4106	0108	24		21-51-21	ALL
D40065P		675/300/L30		PLUG-				115-199
	1		W3503	4251R	24		23-42-11	115-199
	2		W3503	4251Z			23-42-11	115-199
	3		W3503	4251B	24		23-42-11	115-199
	4		W3503	4251Y	24		23-42-11	115-199
	5		W3503	4251G	24		23-42-11	115-199
D40068J		AD0880/ /		RCPT-				001-099
D40068J		880/ /		RCPT				115-199
	1		W4106	0041	20		21-51-21	ALL
	2		W4106	2051B	24		21-51-22	ALL
	3		W4106	2051R	24		21-51-22	ALL
	4		W4106	0110	24		36-11-22	ALL
	5		W4106	2039B	24		21-52-11	001-099
	5		W4106	0111	24		36-22-11	115-199
	6		W4106	3011R	24		21-51-22	ALL
	7		W4106	3011B	24		21-51-22	ALL
	8		W4106	3011Y	24		21-51-22	ALL
	9		W4106	0122	22		36-11-22	ALL
	10		W4106	0260	24		21-52-11	001-099
	10	UNUSED						115-199
	11		W4106	2015B	24		21-52-11	001-099
	11	UNUSED						115-199
	12		W4106	0254	24		21-52-11	001-099
	12	UNUSED						115-199
	13		W4106	2016B	24		21-52-11	001-099
	13	UNUSED						115-199
	14		W4106	0255	24		21-52-11	001-099
	14	UNUSED						115-199
	15		W4106	2017B	24		21-52-11	001-099
	15	UNUSED						115-199
	16		W4106	0257	24		21-52-11	001-099
	16	UNUSED						115-199
	17		W4106	2018B	24		21-52-11	001-099
	17	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 70

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40068J		AD0880/ /		RCPT- (continued)				001-099
D40068J		880/ /		RCPT (continued)				115-199
	18		W4106	0258	24		21-52-11	001-099
	18	UNUSED						115-199
	19		W4106	0042	20		21-51-21	ALL
	20		W4106	0043	20		21-51-21	ALL
	21		W4106	0044	20		21-51-21	ALL
	22	UNUSED						001-099
	22		W4106	0150	24		SPARE	115-199
	23		W4106	3003B	24		21-51-22	ALL
	24		W4106	3003R	24		21-51-22	ALL
	25		W4106	3003Y	24		21-51-22	ALL
	26		W4106	3002R	24		21-51-22	ALL
	27		W4106	3002B	24		21-51-22	ALL
	28		W4106	3002Y	24		21-51-22	ALL
	29		W4106	3004R	24		21-51-22	ALL
	30		W4106	3004B	24		21-51-22	ALL
	31		W4106	3004Y	24		21-51-22	ALL
	32	UNUSED						001-099
	32		W4106	0151	24		SPARE	115-199
	33		W4106	3001B	24		21-51-22	ALL
	34		W4106	3001R	24		21-51-22	ALL
	35		W4106	3001Y	24		21-51-22	ALL
	36		W4106	3006R	24		21-51-22	ALL
	37		W4106	3006B	24		21-51-22	ALL
	38		W4106	3006Y	24		21-51-22	ALL
	39		W4106	3005B	24		21-51-22	ALL
	40		W4106	3005R	24		21-51-22	ALL
	41		W4106	3005Y	24		21-51-22	ALL
	42		W4106	2023R	24		21-51-24	ALL
	43		W4106	2023B	24		21-51-24	ALL
	44		W4106	2024R	24		21-51-24	ALL
	45		W4106	0083	24		36-21-11	ALL
	46		W4106	2002R	24		36-21-11	ALL
	47		W4106	2002B	24		36-21-11	ALL
	48		W4106	2024B	24		21-51-24	ALL
	49		W4106	2025R	24		21-51-24	ALL
	50		W4106	2025B	24		21-51-24	ALL
	51		W4106	0111	24		36-22-11	001-099
	51	UNUSED						115-199
	52	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 71

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40068J		AD0880/ /		RCPT- (continued)				001-099
D40068J		880/ /		RCPT (continued)				115-199
	53	UNUSED						ALL
	54		W4106	2014B	24		21-52-11	ALL
	55		W4106	0252	24		21-52-11	ALL
	S/R		W4106	YAAB			21-51-21	ALL
D40068P		AD0880/ /		PLUG				ALL
	1		W2506	1020	20		21-51-21	ALL
	2		W2506	2503B	20		21-51-22	ALL
	3		W2506	2503R	20		21-51-22	ALL
	4		W2506	2502B	20		36-11-22	ALL
	5		W2506	2540B	20		21-52-11	001-099
	5		W2506	1044	20		36-22-11	115-199
	6		W2506	3507R	20		21-51-22	ALL
	7		W2506	3507B	20		21-51-22	ALL
	8		W2506	3507Y	20		21-51-22	ALL
	9		W2506	2502R	20		36-11-22	ALL
	10		W2506	2540R	20		21-52-11	001-099
	10	UNUSED						115-199
	11		W2506	2516B	20		21-52-11	001-099
	11	UNUSED						115-199
	12		W2506	2516R	20		21-52-11	001-099
	12	UNUSED						115-199
	13		W2506	2517B	20		21-52-11	001-099
	13	UNUSED						115-199
	14		W2506	2517R	20		21-52-11	001-099
	14	UNUSED						115-199
	15		W2506	2518B	20		21-52-11	001-099
	15	UNUSED						115-199
	16		W2506	2518R	20		21-52-11	001-099
	16	UNUSED						115-199
	17		W2506	2519B	20		21-52-11	001-099
	17	UNUSED						115-199
	18		W2506	2519R	20		21-52-11	001-099
	18	UNUSED						115-199
	19	18	W2506	2508B	18		21-51-21	ALL
	20	18	W2506	2508R	18		21-51-21	ALL
	21		W2506	1018	20		21-51-21	001-099
	21	18	W2506	1018	20		21-51-21	115-199
	22	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 72

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40068P		AD0880/ /		PLUG (continued)				ALL
	23		W2506	3503B	20		21-51-22	ALL
	24		W2506	3503R	20		21-51-22	ALL
	25		W2506	3503Y	20		21-51-22	ALL
	26		W2506	3502R	20		21-51-22	ALL
	27		W2506	3502B	20		21-51-22	ALL
	28		W2506	3502Y	20		21-51-22	ALL
	29		W2506	3504R	20		21-51-22	ALL
	30		W2506	3504B	20		21-51-22	ALL
	31		W2506	3504Y	20		21-51-22	ALL
	32	UNUSED						ALL
	33		W2506	3501B	20		21-51-22	ALL
	34		W2506	3501R	20		21-51-22	ALL
	35		W2506	3501Y	20		21-51-22	ALL
	36		W2506	3506R	20		21-51-22	ALL
	37		W2506	3506B	20		21-51-22	ALL
	38		W2506	3506Y	20		21-51-22	ALL
	39		W2506	3505B	20		21-51-22	ALL
	40		W2506	3505R	20		21-51-22	ALL
	41		W2506	3505Y	20		21-51-22	ALL
	42		W2506	2512R	20		21-51-24	ALL
	43		W2506	2512B	20		21-51-24	ALL
	44		W2506	2511R	20		21-51-24	ALL
	45		W2506	1010	20		36-21-11	ALL
	46		W2506	2505R	20		36-21-11	ALL
	47		W2506	2505B	20		36-21-11	ALL
	48		W2506	2511B	20		21-51-24	ALL
	49		W2506	2513R	20		21-51-24	ALL
	50		W2506	2513B	20		21-51-24	ALL
	51		W2506	1044	20		36-22-11	001-099
	51	UNUSED						115-199
	52	UNUSED						ALL
	53	UNUSED						ALL
	54		W2506	2530B	20		21-52-11	ALL
	55		W2506	2530R	20		21-52-11	ALL
	S/R		W2506	2516Z			21-52-11	001-099
	S/R		W2506	2517Z			21-52-11	001-099
	S/R		W2506	2518Z			21-52-11	001-099
	S/R		W2506	2519Z			21-52-11	001-099
	S/R		W2506	2540Z			21-52-11	001-099
	S/R		W2506	1010Z			36-21-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 73

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40068P		AD0880/ /		PLUG (continued)				ALL
	S/R		W2506	1018Z			21-51-21	ALL
	S/R		W2506	1020Z			21-51-21	ALL
	S/R		W2506	1044Z			36-22-11	ALL
	S/R		W2506	2502Z			36-11-22	ALL
	S/R		W2506	2503Z			21-51-22	ALL
	S/R		W2506	2505Z			36-21-11	ALL
	S/R		W2506	2508Z			21-51-21	ALL
	S/R		W2506	2511Z			21-51-24	ALL
	S/R		W2506	2512Z			21-51-24	ALL
	S/R		W2506	2513Z			21-51-24	ALL
	S/R		W2506	2530Z			21-52-11	ALL
	S/R		W2506	3501Z			21-51-22	ALL
	S/R		W2506	3502Z			21-51-22	ALL
	S/R		W2506	3503Z			21-51-22	ALL
	S/R		W2506	3504Z			21-51-22	ALL
	S/R		W2506	3505Z			21-51-22	ALL
	S/R		W2506	3506Z			21-51-22	ALL
	S/R		W2506	3507Z			21-51-22	ALL
D40070J		AD0880/ /		RCPT-				001-099
D40070J		880/ /		RCPT				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W4106	2020R	24		21-51-22	ALL
	4		W4106	2020B	24		21-51-22	ALL
	5		W4106	2003B	24		21-52-31	ALL
	6		W4106	2003R	24		21-52-31	ALL
	7		W4106	2009B	24		21-52-31	ALL
	8		W4106	2009R	24		21-52-31	ALL
	9	UNUSED						001-099
	9		W4106	2037B	24		36-21-11	115-199
	10	UNUSED						001-099
	10		W4106	2037R	24		36-21-11	115-199
	11		W4106	3020R	24		21-52-21	ALL
	12		W4106	3020B	24		21-52-21	ALL
	13		W4106	3020Y	24		21-52-21	ALL
	14		W4106	4000G	24		21-52-31	ALL
	15		W4106	4000R	24		21-52-31	ALL
	16		W4106	4000B	24		21-52-31	ALL
	17		W4106	4000Y	24		21-52-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 74

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40070J		AD0880/ /		RCPT- (continued)				001-099
D40070J		880/ /		RCPT (continued)				115-199
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W4106	0089	20		30-71-11	ALL
	23	UNUSED						ALL
	24	UNUSED						001-099
	24		W4106	2000R	24		SPARE	115-199
	25	UNUSED						001-099
	25		W4106	2000B	24		SPARE	115-199
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W4106	3021R	24		21-52-21	ALL
	36		W4106	3021B	24		21-52-21	ALL
	37		W4106	3021Y	24		21-52-21	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	S/R		W4106	YAAC			21-52-31	ALL
D40070P		AD0880/ /		PLUG				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W2506	2507R	20		21-51-22	ALL
	4		W2506	2507B	20		21-51-22	ALL
	5		W2506	2520B	20		21-52-31	ALL
	6		W2506	2520R	20		21-52-31	ALL
	7		W2506	2521B	20		21-52-31	ALL
	8		W2506	2521R	20		21-52-31	ALL
	9	UNUSED						001-099
	9		W2506	2523B	20		36-21-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 75

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40070P		AD0880/ /		PLUG (continued)				ALL
	10	UNUSED						001-099
	10		W2506	2523R	20		36-21-11	115-199
	11		W2506	3510R	20		21-52-21	ALL
	12		W2506	3510B	20		21-52-21	ALL
	13		W2506	3510Y	20		21-52-21	ALL
	14		W2506	4255G	20		21-52-31	ALL
	15		W2506	4255R	20		21-52-31	ALL
	16		W2506	4255B	20		21-52-31	ALL
	17		W2506	4255Y	20		21-52-31	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W2506	1003	20		30-71-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W2506	3508R	20		21-52-21	ALL
	36		W2506	3508B	20		21-52-21	ALL
	37		W2506	3508Y	20		21-52-21	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	S/R		W2506	1003Z			30-71-11	ALL
	S/R		W2506	2507Z			21-51-22	ALL
	S/R		W2506	2520Z			21-52-31	ALL
	S/R		W2506	2521Z			21-52-31	ALL
	S/R		W2506	3508Z			21-52-21	ALL
	S/R		W2506	3510Z			21-52-21	ALL
	S/R		W2506	4255Z			21-52-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 76

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40070P		AD0880/ /		PLUG (continued)				ALL
	S/R		W2506	2523Z			36-21-11	115-199
D40072J		AC0880/ /		RCPT-				001-099
D40072J		AC0880/ /		RCPT				115-199
	1		W4006	3002R	24		21-51-12	ALL
	2		W4006	3002B	24		21-51-12	ALL
	3		W4006	3002Y	24		21-51-12	ALL
	4		W4006	3001B	24		21-51-12	ALL
	5		W4006	3001R	24		21-51-12	ALL
	6		W4006	3001Y	24		21-51-12	ALL
	7		W4006	3006R	24		21-51-12	ALL
	8		W4006	3004R	24		21-51-12	ALL
	9		W4006	3004B	24		21-51-12	ALL
	10		W4006	3004Y	24		21-51-12	ALL
	11		W4006	3003R	24		21-51-12	ALL
	12		W4006	3003B	24		21-51-12	ALL
	13		W4006	3003Y	24		21-51-12	ALL
	14		W4006	0053	22		SPARE	ALL
	15		W4006	0030	22		21-51-13	ALL
	16		W4006	3006B	24		21-51-12	ALL
	17		W4006	3006Y	24		21-51-12	ALL
	18		W4006	3005B	24		21-51-12	ALL
	19		W4006	3005R	24		21-51-12	ALL
	20		W4006	3005Y	24		21-51-12	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						001-099
	23		W4006	2002B	24		SPARE	115-199
	24	UNUSED						001-099
	24		W4006	2002R	24		SPARE	115-199
	25		W4006	0005	22		21-51-13	ALL
	26		W4006	0006	22		21-51-13	ALL
	27		W4006	0031	22		21-51-13	ALL
	28		W4006	0003	22		21-51-13	ALL
	29		W4006	0004	22		21-51-13	ALL
	30	UNUSED						ALL
	31		W4006	2051R	24		21-51-12	ALL
	32		W4006	2051B	24		21-51-12	ALL
	33	UNUSED						ALL
	34		W4006	3009R	24		21-51-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 77

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40072J		AC0880/ /		RCPT- (continued)				001-099
D40072J		AC0880/ /		RCPT (continued)				115-199
	35		W4006	0209	24		36-22-11	ALL
	36		W4006	3009Y	24		21-51-12	ALL
	37		W4006	3009B	24		21-51-12	ALL
	38		W4006	2029R	24		21-51-14	ALL
	39		W4006	2029B	24		21-51-14	ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45		W4006	2041R	24		21-51-12	ALL
	46		W4006	2041B	24		21-51-12	ALL
	47		W4006	2012R	24		21-51-14	ALL
	48	UNUSED						ALL
	49		W4006	2012B	24		21-51-14	ALL
	50		W4006	2015R	24		21-51-14	ALL
	51		W4006	2015B	24		21-51-14	ALL
	52		W4006	2042B	24		21-51-15	ALL
	53		W4006	2042R	24		21-51-15	ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	S/R		W4006	YAAB			21-51-14	ALL
D40072P		AC0880/ /		PLUG				ALL
	1		W2406	3502R	20		21-51-12	ALL
	2		W2406	3502B	20		21-51-12	ALL
	3		W2406	3502Y	20		21-51-12	ALL
	4		W2406	3501B	20		21-51-12	ALL
	5		W2406	3501R	20		21-51-12	ALL
	6		W2406	3501Y	20		21-51-12	ALL
	7		W2406	3506R	20		21-51-12	ALL
	8		W2406	3504R	20		21-51-12	ALL
	9		W2406	3504B	20		21-51-12	ALL
	10		W2406	3504Y	20		21-51-12	ALL
	11		W2406	3503R	20		21-51-12	ALL
	12		W2406	3503B	20		21-51-12	ALL
	13		W2406	3503Y	20		21-51-12	ALL
	14	UNUSED						ALL
	15		W2406	2502B	20		21-51-13	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 78

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40072P		AC0880/ /		PLUG (continued)				ALL
	16		W2406	3506B	20		21-51-12	ALL
	17		W2406	3506Y	20		21-51-12	ALL
	18		W2406	3505B	20		21-51-12	ALL
	19		W2406	3505R	20		21-51-12	ALL
	20		W2406	3505Y	20		21-51-12	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W2406	2513B	20		21-51-13	ALL
	26		W2406	2513R	20		21-51-13	ALL
	27		W2406	2502R	20		21-51-13	ALL
	28		W2406	2506B	20		21-51-13	ALL
	29		W2406	2506R	20		21-51-13	ALL
	30	UNUSED						ALL
	31		W2406	2504R	20		21-51-12	ALL
	32		W2406	2504B	20		21-51-12	ALL
	33	UNUSED						ALL
	34		W2406	3509R	20		21-51-12	ALL
	35		W2406	1021	20		36-22-11	ALL
	36		W2406	3509Y	20		21-51-12	ALL
	37		W2406	3509B	20		21-51-12	ALL
	38		W2406	2517R	20		21-51-14	ALL
	39		W2406	2517B	20		21-51-14	ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45		W2406	2503R	20		21-51-12	ALL
	46		W2406	2503B	20		21-51-12	ALL
	47		W2406	2518R	20		21-51-14	ALL
	48	UNUSED						ALL
	49		W2406	2518B	20		21-51-14	ALL
	50		W2406	2519R	20		21-51-14	ALL
	51		W2406	2519B	20		21-51-14	ALL
	52		W2406	2505B	20		21-51-15	ALL
	53		W2406	2505R	20		21-51-15	ALL
	54	UNUSED						ALL
	55	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 79

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40072P		AC0880/ /		PLUG (continued)				ALL
	S/R		W2406	1021Z			36-22-11	ALL
	S/R		W2406	2502Z			21-51-13	ALL
	S/R		W2406	2503Z			21-51-12	ALL
	S/R		W2406	2504Z			21-51-12	ALL
	S/R		W2406	2505Z			21-51-15	ALL
	S/R		W2406	2506Z			21-51-13	ALL
	S/R		W2406	2513Z			21-51-13	ALL
	S/R		W2406	2517Z			21-51-14	ALL
	S/R		W2406	2518Z			21-51-14	ALL
	S/R		W2406	2519Z			21-51-14	ALL
	S/R		W2406	3501Z			21-51-12	ALL
	S/R		W2406	3502Z			21-51-12	ALL
	S/R		W2406	3503Z			21-51-12	ALL
	S/R		W2406	3504Z			21-51-12	ALL
	S/R		W2406	3505Z			21-51-12	ALL
	S/R		W2406	3506Z			21-51-12	ALL
	S/R		W2406	3509Z			21-51-12	ALL
D40073J		P003-00/ /		RCPT				001-099
D40073J		AP0003/ /		RCPT				115-199
	1		W2253	5001Z			34-13-21	ALL
	2		W2253	5001R	24		34-13-21	ALL
	3		W2253	5001B	24		34-13-21	ALL
	4		W2253	5002R	24		34-22-91	001-099
	4	UNUSED						115-199
	5		W2253	5002B	24		34-22-91	001-099
	5	UNUSED						115-199
	6		W2253	5002Z			34-22-91	001-099
	6	UNUSED						115-199
	7		W2253	0018	22		34-22-26	001-099
	7		W2253	0018	24		34-22-26	115-199
	8		W2253	5003R	24		34-22-91	001-099
	8		W2253	5003R	24		SPARE	115-199
	9		W2253	5003B	24		34-22-91	001-099
	9		W2253	5003B	24		SPARE	115-199
	10		W2253	5003Z			34-22-91	001-099
	10		W2253	5003Z			SPARE	115-199
	11		W2253	5004R	24		34-22-92	ALL
	12		W2253	5004B	24		34-22-92	ALL
	13		W2253	5004Z			34-22-92	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 80

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40073J		P003-00/ /		RCPT (continued)				001-099
D40073J		AP0003/ /		RCPT (continued)				115-199
	14		W2253	0001	24		34-12-62	ALL
	15		W2253	5006R	24		SPARE	001-099
	15	UNUSED						115-199
	16		W2253	5006B	24		SPARE	001-099
	16	UNUSED						115-199
	17		W2253	5006Z			SPARE	001-099
	17	UNUSED						115-199
	18		W2253	0019	22		34-12-62	ALL
	19		W2253	3001R	24		34-12-21	ALL
	20		W2253	3001B	24		34-12-21	ALL
	21		W2253	3001Y	24		34-12-21	ALL
	22		W2253	2001R	22		34-12-21	ALL
	23		W2253	2001B	22		34-12-21	ALL
	24	UNUSED						001-099
	24		W2253	0084	22		SPARE	115-199
	25		W2253	0066	22		34-22-26	ALL
	26	UNUSED						ALL
	27		W2253	0020	22		SPARE	ALL
	28		W2253	5016B	24		SPARE	ALL
	29		W2253	5016R	24		SPARE	ALL
	30		W2253	5016Z			SPARE	ALL
	31		W2253	0023	24		34-22-27	ALL
	32		W2253	0024	22		32-42-11	ALL
	33		W2253	0029	24		34-22-27	ALL
	34	UNUSED						001, 003-099
	34		W2253	0030	22		34-46-11	002
	34		W2253	0030	22		SPARE	115-199
	35	UNUSED						001-099
	35		W2253	0107	22		34-61-26	115-199
	36	UNUSED						001-099
	36		W2253	0108	22		34-61-25	115-199
	37	UNUSED						001-099
	37		W2253	0002	24		SPARE	115-199
	38		W2253	0009	24		34-22-27	ALL
	39		W2253	0010	24		34-22-27	ALL
	40		W2253	0011	24		34-22-27	ALL
	41		W2253	0012	24		34-22-27	ALL
	42		W2253	0013	24		34-46-11	ALL
	43		W2253	0014	24		34-46-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 81

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40073J		P003-00/ /		RCPT (continued)				001-099
D40073J		AP0003/ /		RCPT (continued)				115-199
	44		W2253	2501R	24		SPARE	001-099
	44	UNUSED						115-199
	45		W2253	2501B	24		SPARE	001-099
	45	UNUSED						115-199
	46		W2253	2501Z			SPARE	001-099
	46	UNUSED						115-199
	47	UNUSED						001-099
	47		W2253	0017	22		SPARE	115-199
	48	UNUSED						001-099
	48		W2253	2502R	24		SPARE	115-199
	49	UNUSED						001-099
	49		W2253	2502B	24		SPARE	115-199
	50	UNUSED						001-099
	50		W2253	2502Z			SPARE	115-199
	51	UNUSED						001, 003-099, 115-199
	51		W2253	0125	22		34-22-28	002
	52	UNUSED						ALL
	53	UNUSED						001-099
	53		W2253	2503R	24		SPARE	115-199
	54	UNUSED						001-099
	54		W2253	2503B	24		SPARE	115-199
	55	UNUSED						001-099
	55		W2253	2503Z			SPARE	115-199
D40073P		AP0003/ /		PLUG				001-099
D40073P		217.6/198/34		PLUG				115-199
	1		W0003	5001Z			34-13-21	ALL
	2		W0003	5001R	24		34-13-21	ALL
	3		W0003	5001B	24		34-13-21	ALL
	4		W0003	5012R	24		34-22-91	001-099
	4	UNUSED						115-199
	5		W0003	5012B	24		34-22-91	001-099
	5	UNUSED						115-199
	6		W0003	5012Z			34-22-91	001-099
	6	UNUSED						115-199
	7		W0003	0050	22		34-22-26	001-099
	7		W0003	0050	24		34-22-26	115-199
	8		W0003	5014R	24		34-22-91	001-099
	8	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 82

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40073P		AP0003/ /		PLUG (continued)				001-099
D40073P		217.6/198/34		PLUG (continued)				115-199
	9		W0003	5014B	24		34-22-91	001-099
	9	UNUSED						115-199
	10		W0003	5014Z			34-22-91	001-099
	10	UNUSED						115-199
	11		W0003	5028R	24		34-22-92	ALL
	12		W0003	5028B	24		34-22-92	ALL
	13		W0003	FRAB			34-22-92	ALL
	14		W0003	0004	24		34-12-62	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0003	0002	24		34-12-62	ALL
	19		W0003	3002R	24		34-12-21	ALL
	20		W0003	3002B	24		34-12-21	ALL
	21		W0003	3002Y	24		34-12-21	ALL
	22		W0003	2002R	22		34-12-21	ALL
	23		W0003	2002B	22		34-12-21	ALL
	24	UNUSED						ALL
	25		W0003	0494	22		34-22-26	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W0003	0019	24		34-22-27	ALL
	32		W0003	0273	22		32-42-11	ALL
	33		W0003	0053	24		34-22-27	ALL
	34	UNUSED						001, 003-099, 115-199
	34		W0003	0396	22		34-46-11	002
	35	UNUSED						001-099
	35		W0003	0704	22		34-61-26	115-199
	36	UNUSED						001-099
	36		W0003	0700	22		34-61-25	115-199
	37	UNUSED						ALL
	38		W0003	0169	24		34-22-27	ALL
	39		W0003	0168	24		34-22-27	ALL
	40		W0003	0171	24		34-22-27	ALL
	41		W0003	0051	24		34-22-27	ALL
	42		W0003	0073	24		34-46-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 83

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40073P		AP0003/ /		PLUG (continued)				001-099
D40073P		217.6/198/34		PLUG (continued)				115-199
	43		W0003	0074	24		34-46-11	ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						001, 003-099, 115-199
	51		W0003	0395	22		34-22-28	002
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
			W0003	0085	20		34-22-92	ALL
			W0003	5028Z			34-22-92	ALL
			W0003	FRAB			34-22-92	ALL
D40074J		880/ /		RCPT				001-099
D40074J		AC0880/ /		RCPT				115-199
	1		W4006	2007B	24		21-52-11	ALL
	2		W4006	0146	24		21-52-11	ALL
	3		W4006	2008B	24		21-52-11	001-099
	3	UNUSED						115-199
	4		W4006	0147	24		21-52-11	001-099
	4	UNUSED						115-199
	5		W4006	2009B	24		21-52-11	001-099
	5	UNUSED						115-199
	6		W4006	0149	24		21-52-11	001-099
	6	UNUSED						115-199
	7		W4006	2010B	24		21-52-11	001-099
	7	UNUSED						115-199
	8	UNUSED						ALL
	9		W4006	0150	24		21-52-11	001-099
	9	UNUSED						115-199
	10		W4006	2011B	24		21-52-11	001-099
	10	UNUSED						115-199
	11		W4006	0152	24		21-52-11	001-099
	11	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 84

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40074J		880/ /		RCPT (continued)				001-099
D40074J		AC0880/ /		RCPT (continued)				115-199
	12		W4006	0032	24		36-21-11	ALL
	13		W4006	0001	24		36-11-12	ALL
	14		W4006	0047	20		36-11-12	ALL
	15	UNUSED						ALL
	16		W4006	2004B	24		21-52-11	001-099
	16	UNUSED						115-199
	17		W4006	0144	24		21-52-11	001-099
	17	UNUSED						115-199
	18		W4006	2033B	24		21-52-31	ALL
	19		W4006	2033R	24		21-52-31	ALL
	20		W4006	2035B	24		21-52-31	ALL
	21		W4006	2035R	24		21-52-31	ALL
	22	UNUSED						ALL
	23		W4006	2001R	24		36-21-11	ALL
	24		W4006	2001B	24		36-21-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W4006	3021R	24		21-52-21	ALL
	28		W4006	3021B	24		21-52-21	ALL
	29		W4006	3021Y	24		21-52-21	ALL
	30		W4006	4000G	24		21-52-31	ALL
	31		W4006	4000R	24		21-52-31	ALL
	32		W4006	4000B	24		21-52-31	ALL
	33		W4006	4000Y	24		21-52-31	ALL
	34	UNUSED						001-099
	34		W4006	2036B	24		36-21-11	115-199
	35	UNUSED						001-099
	35		W4006	2036R	24		36-21-11	115-199
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W4006	3020R	24		21-52-21	ALL
	39		W4006	3020B	24		21-52-21	ALL
	40		W4006	3020Y	24		21-52-21	ALL
	41	UNUSED						ALL
	S/R		W4006	YAAA			21-52-11	ALL
D40074P		AC0880/ /		PLUG				ALL
	1		W2406	2542B	20		21-52-11	ALL
	2		W2406	2542R	20		21-52-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 85

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40074P		AC0880/ /		PLUG (continued)				ALL
	3		W2406	2543B	20		21-52-11	001-099
	3	UNUSED						115-199
	4		W2406	2543R	20		21-52-11	001-099
	4	UNUSED						115-199
	5		W2406	2544B	20		21-52-11	001-099
	5	UNUSED						115-199
	6		W2406	2544R	20		21-52-11	001-099
	6	UNUSED						115-199
	7		W2406	2545B	20		21-52-11	001-099
	7	UNUSED						115-199
	8	UNUSED						ALL
	9		W2406	2545R	20		21-52-11	001-099
	9	UNUSED						115-199
	10		W2406	2546B	20		21-52-11	001-099
	10	UNUSED						115-199
	11		W2406	2546R	20		21-52-11	001-099
	11	UNUSED						115-199
	12		W2406	1003	20		36-21-11	ALL
	13		W2406	2521B	20		36-11-12	ALL
	14		W2406	2521R	20		36-11-12	ALL
	15	UNUSED						ALL
	16		W2406	2541B	20		21-52-11	001-099
	16	UNUSED						115-199
	17		W2406	2541R	20		21-52-11	001-099
	17	UNUSED						115-199
	18		W2406	2522B	20		21-52-31	ALL
	19		W2406	2522R	20		21-52-31	ALL
	20		W2406	2523B	20		21-52-31	ALL
	21		W2406	2523R	20		21-52-31	ALL
	22	UNUSED						ALL
	23		W2406	2514R	20		36-21-11	ALL
	24		W2406	2514B	20		36-21-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W2406	3507R	20		21-52-21	ALL
	28		W2406	3507B	20		21-52-21	ALL
	29		W2406	3507Y	20		21-52-21	ALL
	30		W2406	4255G	20		21-52-31	ALL
	31		W2406	4255R	20		21-52-31	ALL
	32		W2406	4255B	20		21-52-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 86

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40074P		AC0880/ /		PLUG (continued)				ALL
	33		W2406	4255Y	20		21-52-31	ALL
	34	UNUSED						001-099
	34		W2406	2524B	20		36-21-11	115-199
	35	UNUSED						001-099
	35		W2406	2524R	20		36-21-11	115-199
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W2406	3510R	20		21-52-21	ALL
	39		W2406	3510B	20		21-52-21	ALL
	40		W2406	3510Y	20		21-52-21	ALL
	41	UNUSED						ALL
	S/R		W2406	2541Z			21-52-11	001-099
	S/R		W2406	2543Z			21-52-11	001-099
	S/R		W2406	2544Z			21-52-11	001-099
	S/R		W2406	2545Z			21-52-11	001-099
	S/R		W2406	2546Z			21-52-11	001-099
	S/R		W2406	1003Z			36-21-11	ALL
	S/R		W2406	2514Z			36-21-11	ALL
	S/R		W2406	2521Z			36-11-12	ALL
	S/R		W2406	2522Z			21-52-31	ALL
	S/R		W2406	2523Z			21-52-31	ALL
	S/R		W2406	2542Z			21-52-11	ALL
	S/R		W2406	3507Z			21-52-21	ALL
	S/R		W2406	3510Z			21-52-21	ALL
	S/R		W2406	4255Z			21-52-31	ALL
	S/R		W2406	2524Z			36-21-11	115-199
D40076J		0880/ /		RCPT				001-099
D40076J		AC0880/ /		RCPT				115-199
	1		W4208	0029	22		27-51-21	001-099
	1		W4208	0029	20		27-51-21	115-199
	2		W4208	2001R	22		27-81-11	ALL
	3		W4208	2001B	22		27-81-11	ALL
	4		W4208	4001R	22		27-81-11	ALL
	5		W4208	4001B	22		27-81-11	ALL
	6		W4208	4001Y	22		27-81-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W4208	0043	20		SPARE	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 87

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40076J		0880/ /		RCPT (continued)				001-099
D40076J		AC0880/ /		RCPT (continued)				115-199
	10	UNUSED						115-199
	11		W4208	0030	20		SPARE	ALL
	12		W4208	4001G	22		27-81-11	ALL
	13		W4208	0015	22		27-51-21	ALL
	14	UNUSED						ALL
	15		W4208	0006	14		27-81-11	ALL
	16		W4208	0031	20		SPARE	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W4208	0005	14		27-81-11	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W4208	0003	14		27-81-11	ALL
	24		W4208	0007	22		27-81-21	ALL
	25		W4208	0008	22		27-81-21	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	S/R		W4208	YAAA			27-51-21	001-099
	S/R		W4208	YAAB			27-81-11	115-199
D40076P		AC0880/ /		PLUG				ALL
	1		W3342	0006	20		27-51-21	ALL
	2		W3342	2001R	20		27-81-11	ALL
	3		W3342	2001B	20		27-81-11	ALL
	4		W3342	4001R	20		27-81-11	ALL
	5		W3342	4001B	20		27-81-11	ALL
	6		W3342	4001Y	20		27-81-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W3342	0028	20		SPARE	ALL
	12		W3342	4001G	20		27-81-11	ALL
	13		W3342	0005	20		27-51-21	ALL
	14	UNUSED						ALL
	15		W3342	0001	14		27-81-11	ALL
	16		W3342	0027	20		SPARE	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 88

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40076P		AC0880/ /		PLUG (continued)				ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W3342	0002	14		27-81-11	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W3342	0003	14		27-81-11	ALL
	24		W3342	0021	20		27-81-21	ALL
	25		W3342	0022	20		27-81-21	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	S/R		W3342	YAAA			27-81-11	ALL
D40077J		AP0001/ /		RCPT				ALL
	1		W2243	5001Z			34-13-11	ALL
	2		W2243	5001R	24		34-13-11	ALL
	3		W2243	5001B	24		34-13-11	ALL
	4		W2243	5003R	24		77-11-11	ALL
	5		W2243	5003B	24		77-11-11	ALL
	6		W2243	5003Z			77-11-11	ALL
	7		W2243	2502B	24		77-12-31	001-099
	7		W2243	2502R	24		SPARE	115-199
	8		W2243	2502R	24		77-12-31	001-099
	8		W2243	2502B	24		SPARE	115-199
	9		W2243	2502Z			77-12-31	001-099
	9		W2243	2502Z			SPARE	115-199
	10		W2243	0001	24		SPARE	001-099
	10		W2243	0001	22		SPARE	115-199
	11	UNUSED						001-099
	11		W2243	0026	24		34-61-18	115-199
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W2243	0002	22		29-21-32	ALL
	15		W2243	5002R	24		34-22-81	001-099
	15		W2243	5002R	24		34-22-83	115-199
	16		W2243	5002B	24		34-22-81	001-099
	16		W2243	5002B	24		34-22-83	115-199
	17		W2243	5002Z			34-22-81	001-099
	17		W2243	5002Z			34-22-83	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 89

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40077J		AP0001/ /		RCPT (continued)				ALL
	18		W2243	3002R	24		SPARE	001-099
	18		W2243	3002R	24		34-12-21	115-199
	19		W2243	3002B	24		SPARE	001-099
	19		W2243	3002B	24		34-12-21	115-199
	20		W2243	3002Y	24		SPARE	001-099
	20		W2243	3002Y	24		34-12-21	115-199
	21		W2243	2002R	22		SPARE	001-099
	21		W2243	2002R	22		34-12-21	115-199
	22		W2243	2002B	22		SPARE	001-099
	22		W2243	2002B	22		34-12-21	115-199
	23		W2243	0003	22		22-41-13	ALL
	24		W2243	3001R	24		34-12-21	ALL
	25		W2243	3001B	24		34-12-21	ALL
	26		W2243	3001Y	24		34-12-21	ALL
	27		W2243	2001R	22		34-12-21	ALL
	28		W2243	2001B	22		34-12-21	ALL
	29		W2243	2504R	24		SPARE	001-099
	29		W2243	2504R	24		77-12-31	115-199
	30		W2243	2504B	24		SPARE	001-099
	30		W2243	2504B	24		77-12-31	115-199
	31		W2243	2504Z			SPARE	001-099
	31		W2243	2504Z			77-12-31	115-199
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						001-099
	35		W2243	5006R	24		SPARE	115-199
	36	UNUSED						001-099
	36		W2243	5006B	24		SPARE	115-199
	37	UNUSED						001-099
	37		W2243	5006Z			SPARE	115-199
	38		W2243	0018	22		79-33-11	ALL
	39		W2243	0014	22		32-42-12	ALL
	40		W2243	0096	24		34-12-22	ALL
	41	UNUSED						001-099
	41		W2243	0097	22		SPARE	115-199
	42	UNUSED						001-099
	42		W2243	0098	22		SPARE	115-199
	43	UNUSED						ALL
	44	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 90

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40077J		AP0001/ /		RCPT (continued)				ALL
	45	UNUSED						ALL
	46	UNUSED						001-099
	46		W2243	2508R	24		SPARE	115-199
	47	UNUSED						001-099
	47		W2243	2508B	24		SPARE	115-199
	48	UNUSED						001-099
	48		W2243	2508Z			SPARE	115-199
	49		W2243	0007	22		22-14-11	ALL
	50		W2243	0008	22		22-14-11	ALL
	51	UNUSED						001-099
	51		W2243	0009	22		SPARE	115-199
	52		W2243	0004	22		34-61-25	001-099
	52	UNUSED						115-199
	53	UNUSED						001-099
	53		W2243	0020	22		SPARE	115-199
	54	UNUSED						001-099
	54		W2243	0021	22		SPARE	115-199
	55	UNUSED						001-099
	55		W2243	0095	24		34-55-21	115-199
D40077P		217.6-1/98-/L34		PLUG				001-099
D40077P		AP0001/ /		PLUG				115-199
	1		W0001	5022Z			34-13-11	ALL
	2		W0001	5022R	24		34-13-11	ALL
	3		W0001	5022B	24		34-13-11	ALL
	4		W0001	5003R	24		77-11-11	ALL
	5		W0001	5003B	24		77-11-11	ALL
	6		W0001	5003Z			77-11-11	ALL
	7		W0001	2504B	24		77-12-31	001-099
	7	UNUSED						115-199
	8		W0001	2504R	24		77-12-31	001-099
	8	UNUSED						115-199
	9		W0001	FRAD			77-12-31	001-099
	9	UNUSED						115-199
	10	UNUSED						ALL
	11	UNUSED						001-099
	11		W0001	0473	22		34-61-18	115-199
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0001	0515	22		29-21-32	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 91

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40077P		217.6-1/98-/L34		PLUG (continued)				001-099
D40077P		AP0001/ /		PLUG (continued)				115-199
	15		W0001	5032R	24		34-22-81	001-099
	15		W0001	5032R	24		34-22-83	115-199
	16		W0001	5032B	24		34-22-81	001-099
	16		W0001	5032B	24		34-22-83	115-199
	17		W0001	FRAA			34-22-81	001-099
	17		W0001	FRAA			34-22-83	115-199
	18	UNUSED						001-099
	18		W0001	3004R	24		34-12-21	115-199
	19	UNUSED						001-099
	19		W0001	3004B	24		34-12-21	115-199
	20	UNUSED						001-099
	20		W0001	3004Y	24		34-12-21	115-199
	21	UNUSED						001-099
	21		W0001	2004R	22		34-12-21	115-199
	22	UNUSED						001-099
	22		W0001	2004B	22		34-12-21	115-199
	23		W0001	0185	22		22-41-13	ALL
	24		W0001	3003R	24		34-12-21	ALL
	25		W0001	3003B	24		34-12-21	ALL
	26		W0001	3003Y	24		34-12-21	ALL
	27		W0001	2003R	22		34-12-21	ALL
	28		W0001	2003B	22		34-12-21	ALL
	29	UNUSED						001-099
	29		W0001	2504R	24		77-12-31	115-199
	30	UNUSED						001-099
	30		W0001	2504B	24		77-12-31	115-199
	31	UNUSED						001-099
	31		W0001	FRAG			77-12-31	115-199
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W0001	0136	22		79-33-11	ALL
	39		W0001	0053	22		32-42-12	ALL
	40		W0001	0661	24		34-12-22	ALL
	41	UNUSED						ALL
	42	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 92

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40077P		217.6-1/98-/L34		PLUG (continued)				001-099
D40077P		AP0001/ /		PLUG (continued)				115-199
	42		W0001	0663	24		SPARE	115-199
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49		W0001	0028	22		22-14-11	ALL
	50		W0001	0029	22		22-14-11	ALL
	51	UNUSED						ALL
	52		W0001	0162	22		34-61-25	001-099
	52	UNUSED						115-199
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						001-099
	55		W0001	0558	24		34-55-21	115-199
			W0001	0020	20		34-22-81	001-099
			W0001	5032Z			34-22-81	001-099
			W0001	FRAA			34-22-81	001-099
			W0001	FRAD			77-12-31	001-099
			W0001	0065	20		77-12-31	ALL
			W0001	2504Z			77-12-31	ALL
			W0001	0020	20		34-22-83	115-199
			W0001	5032Z			34-22-83	115-199
			W0001	FRAA			34-22-83	115-199
			W0001	FRAG			77-12-31	115-199
D40080J		P034-00/ /		RCPT-				001-099
D40080J		P34/ /		RCPT-				115-199
	1		W1190	0101	20		52-34-11	ALL
	2		W1190	0102	20		52-34-11	ALL
	3		W1190	0103	20		52-34-11	ALL
	4		W1190	0105	22		52-34-11	ALL
	5		W1190	0104	22		33-37-11	001-099
	5		W1190	0104	20		33-37-11	115-199
	6	UNUSED						001-099
	6		W1190	0106	22		25-51-11	115-199
	7	UNUSED						001-099
	7		W1190	0107	18		25-51-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 93

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40080J		P034-00/ /		RCPT- (continued)				001-099
D40080J		P34/ /		RCPT- (continued)				115-199
	8	UNUSED						001-099
	8		W1190	0108	18		25-51-11	115-199
	9	UNUSED						001-099
	9		W1190	0109	18		25-51-11	115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D40080P		P034-00/ /		PLUG				ALL
	1		W4104	0036	20		52-34-11	ALL
	2		W4104	0037	20		52-34-11	ALL
	3		W4104	0038	20		52-34-11	ALL
	4		W4104	0079	22		52-34-11	ALL
	5		W4104	0051	22		33-37-11	001-099
	5		W4104	0051	18		33-37-11	115-199
	6		W4104	0068	22		SPARE	001-099
	6		W4104	0068	22		25-51-11	115-199
	7		W4104	0069	18		SPARE	001-099
	7		W4104	0069	16		25-51-11	115-199
	8		W4104	0070	18		SPARE	001-099
	8		W4104	0070	16		25-51-11	115-199
	9		W4104	0071	18		SPARE	001-099
	9		W4104	0071	16		25-51-11	115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D40082J		AW1240/ /		RCPT-				ALL
	1	UNUSED						001-099
	1		W2642	4502G	20		32-46-11	115-199
	2	UNUSED						001-099
	2		W2642	4502W	20		32-46-11	115-199
	3		W2642	2502B	20		32-42-11	ALL
	4		W2642	2502R	20		32-42-11	ALL
	5		W2642	2502Z			32-42-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 94

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40082J		AW1240/ /		RCPT- (continued)				ALL
	6	UNUSED						ALL
	7		W2642	2501Z			32-42-11	ALL
	8	UNUSED						ALL
	9		W2642	2501B	20		32-42-11	ALL
	10		W2642	2501R	20		32-42-11	ALL
	11		W2642	2503R	20		32-09-11	ALL
	12		W2642	2503B	20		32-09-11	ALL
	13	UNUSED						001-099
	13		W2642	4501G	20		32-46-11	115-199
	14	UNUSED						001-099
	14		W2642	4501W	20		32-46-11	115-199
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W2642	0001	20		SPARE	ALL
	18	UNUSED						001-099
	18		W2642	0002	20		SPARE	115-199
	19	UNUSED						001-099
	19		W2642	0003	20		SPARE	115-199
	S/R		W2642	YAAB			32-09-11	ALL
	DED		W2642	2503Z			32-09-11	ALL
D40082P		AW1240/ /		PLUG				ALL
	1	UNUSED						001-099
	1	4G	W3010	4502G	18		32-46-11	115-199
	2	UNUSED						001-099
	2	4K	W3010	4502W	18		32-46-11	115-199
	3		W3010	2502B	20		32-42-11	ALL
	4		W3010	2502R	20		32-42-11	ALL
	5		W3010	2502Z			32-42-11	ALL
	6	UNUSED						ALL
	7		W3010	2501Z			32-42-11	ALL
	8	UNUSED						ALL
	9		W3010	2501B	20		32-42-11	ALL
	10		W3010	2501R	20		32-42-11	ALL
	11		W3010	2001R	18		32-09-11	ALL
	12		W3010	2001B	18		32-09-11	ALL
	13	UNUSED						001-099
	13	4G	W3010	4501G	18		32-46-11	115-199
	14	UNUSED						001-099
	14	4K	W3010	4501W	18		32-46-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 95

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40082P		AW1240/ /		PLUG (continued)				ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
D40084J		AW1240/ /		RCPT-				ALL
	1	UNUSED						001-099
	1		W2646	4501W	20		32-46-11	115-199
	2	UNUSED						001-099
	2		W2646	4501G	20		32-46-11	115-199
	3		W2646	2502B	20		32-42-11	ALL
	4		W2646	2502R	20		32-42-11	ALL
	5	UNUSED						ALL
	6		W2646	2502Z			32-42-11	ALL
	7		W2646	2501Z			32-42-11	ALL
	8	UNUSED						ALL
	9		W2646	2501B	20		32-42-11	ALL
	10		W2646	2501R	20		32-42-11	ALL
	11		W2646	2504R	20		32-09-12	ALL
	12		W2646	2504B	20		32-09-12	ALL
	13	UNUSED						001-099
	13		W2646	4502W	20		32-46-11	115-199
	14	UNUSED						001-099
	14		W2646	4502G	20		32-46-11	115-199
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						001-099
	17		W2646	0014	20		SPARE	115-199
	18		W2646	0013	20		SPARE	ALL
	19	UNUSED						ALL
	S/R		W2646	YAAA			32-09-12	001-099
	S/R		W2646	YAAA			32-42-11	115-199
	DED		W2646	2504Z			32-09-12	ALL
D40084P		AW1240/ /		PLUG				ALL
	1	UNUSED						001-099
	1	4K	W3012	4501W	18		32-46-11	115-199
	2	UNUSED						001-099
	2	4G	W3012	4501G	18		32-46-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 96

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40084P		AW1240/ /		PLUG (continued)				ALL
	3		W3012	2502B	20		32-42-11	ALL
	4		W3012	2502R	20		32-42-11	ALL
	5	UNUSED						ALL
	6		W3012	2502Z			32-42-11	ALL
	7		W3012	2501Z			32-42-11	ALL
	8	UNUSED						ALL
	9		W3012	2501B	20		32-42-11	ALL
	10		W3012	2501R	20		32-42-11	ALL
	11		W3012	2001R	18		32-09-12	ALL
	12		W3012	2001B	18		32-09-12	ALL
	13	UNUSED						001-099
	13	4K	W3012	4502W	18		32-46-11	115-199
	14	UNUSED						001-099
	14	4G	W3012	4502G	18		32-46-11	115-199
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
D40099J		P003-00/ /		RCPT-				001-099
D40099J		AP0003/ /		RCPT-				115-199
	1	UNUSED						001-099
	1		W2253	0021	22		SPARE	115-199
	2	UNUSED						001-099
	2		W2253	0022	22		SPARE	115-199
	3		W2253	0003	22		SPARE	ALL
	4	UNUSED						001-099
	4		W2253	0004	22		SPARE	115-199
	5		W2253	0005	22		22-14-21	ALL
	6		W2253	0006	22		22-14-21	ALL
	7		W2253	0007	22		22-14-21	ALL
	8		W2253	0008	22		22-14-21	ALL
	9		W2253	5005R	24		22-14-21	ALL
	10		W2253	5005B	24		22-14-21	ALL
	11		W2253	5005Z			22-14-21	ALL
	12		W2253	5015R	24		SPARE	ALL
	13		W2253	5015B	24		SPARE	ALL
	14		W2253	5015Z			SPARE	ALL
	15		W2253	0104	22		27-51-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 97

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40099J		P003-00/ /		RCPT- (continued)				001-099
D40099J		AP0003/ /		RCPT- (continued)				115-199
	16		W2253	0105	22		27-51-21	ALL
	17		W2253	0106	22		27-51-21	ALL
	18	UNUSED						001-099
	18		W2253	0079	22		SPARE	115-199
	19		W2253	0080	24		SPARE	001-099
	19		W2253	0080	22		SPARE	115-199
	20		W2253	0015	22		22-41-13	ALL
	21	UNUSED						001-099
	21		W2253	0016	22		SPARE	115-199
	22		W2253	5028R	24		SPARE	001-099
	22		W2253	2505R	24		SPARE	115-199
	23		W2253	5028B	24		SPARE	001-099
	23		W2253	2505B	24		SPARE	115-199
	24		W2253	5028Z			SPARE	001-099
	24		W2253	2505Z			SPARE	115-199
	25		W2253	0025	24		77-12-11	001-099
	25		W2253	2506R	24		SPARE	115-199
	26	UNUSED						001-099
	26		W2253	2506B	24		SPARE	115-199
	27	UNUSED						001-099
	27		W2253	2506Z			SPARE	115-199
	28	UNUSED						001-099
	28		W2253	0025	22		SPARE	115-199
	29		W2253	5027R	24		SPARE	001-099
	29		W2253	0026	22		SPARE	115-199
	30		W2253	5027B	24		SPARE	001-099
	30		W2253	0027	22		SPARE	115-199
	31		W2253	5027Z			SPARE	001-099
	31		W2253	0028	22		SPARE	115-199
	32		W2253	5014R	24		31-25-11	ALL
	33		W2253	5014B	24		31-25-11	ALL
	34		W2253	5014Z			31-25-11	ALL
	35	UNUSED						001-099
	35		W2253	0081	22		SPARE	115-199
	36	UNUSED						001-099
	36		W2253	0082	22		SPARE	115-199
	37	UNUSED						001-099
	37		W2253	0093	22		SPARE	115-199
	38	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 98

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40099J		P003-00/ /		RCPT- (continued)				001-099
D40099J		AP0003/ /		RCPT- (continued)				115-199
	38		W2253	0094	22		SPARE	115-199
	39		W2253	5024R	24		SPARE	001-099
	39	UNUSED						115-199
	40		W2253	5024B	24		SPARE	001-099
	40	UNUSED						115-199
	41		W2253	5024Z			SPARE	001-099
	41	UNUSED						115-199
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						001-099
	47		W2253	0031	24		34-61-18	115-199
	48		W2253	0083	22		32-61-12	ALL
	49		W2253	0074	22		32-61-12	ALL
	50		W2253	0075	24		32-61-12	001-099
	50		W2253	0075	22		32-61-12	115-199
	51		W2253	0076	24		32-61-12	ALL
	52		W2253	2512R	24		77-12-11	001-099
	52	UNUSED						115-199
	53		W2253	2512B	24		77-12-11	001-099
	53	UNUSED						115-199
	54		W2253	2512Z			77-12-11	001-099
	54	UNUSED						115-199
	55	UNUSED						ALL
D40099P		217.6/200/R40		PLUG				001-099
D40099P		AP0003/ /		PLUG				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0003	0155	22		22-14-21	ALL
	6		W0003	0156	22		22-14-21	ALL
	7		W0003	0157	22		22-14-21	ALL
	8		W0003	0158	22		22-14-21	ALL
	9		W0003	5017R	24		22-14-21	ALL
	10		W0003	5017B	24		22-14-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 99

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40099P		217.6/200/R40		PLUG (continued)				001-099
D40099P		AP0003/ /		PLUG (continued)				115-199
	11		W0003	5017Z			22-14-21	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0003	0126	22		27-51-21	001-099
	15		W0003	0126	22		SPARE	115-199
	16		W0003	0123	22		27-51-21	ALL
	17		W0003	0125	22		27-51-21	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0003	0181	22		22-41-13	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0003	0567	24		77-12-11	001-099
	25	UNUSED						115-199
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W0003	5030R	24		31-25-11	ALL
	33		W0003	5030B	24		31-25-11	ALL
	34		W0003	FRAC			31-25-11	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 100

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40099P		217.6/200/R40		PLUG (continued)				001-099
D40099P		AP0003/ /		PLUG (continued)				115-199
	47		W0003	0405	22		34-61-18	115-199
	48		W0003	0045	22		32-61-12	ALL
	49		W0003	0046	22		32-61-12	ALL
	50		W0003	0048	24		32-61-12	001-099
	50		W0003	0048	22		32-61-12	115-199
	51		W0003	0258	24		32-61-12	ALL
	52		W0003	2504R	24		77-12-11	001-099
	52	UNUSED						115-199
	53		W0003	2504B	24		77-12-11	001-099
	53	UNUSED						115-199
	54		W0003	2504Z			77-12-11	001-099
	54	UNUSED						115-199
	55	UNUSED						ALL
			W0003	0440	20		31-25-11	ALL
			W0003	5030Z			31-25-11	ALL
			W0003	FRAC			31-25-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40000

Page 101 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40101		P13/ /		RECP-				001-099
	1	VY	W2297	2002B	24		23-51-11	001-099
D40104J		1883/246/R21		RCPT				001-099
D40104J		AT1883/ /		RCPT				115-199
	1		W2654	2513Z			23-41-12	001-099
	1		W2654	3502Z			23-41-12	115-199
	2		W2654	0030	20		33-31-31	ALL
	3		W2654	2513B	20		23-41-12	001-099
	3		W2654	3502B	20		23-41-12	115-199
	4		W2654	2513R	20		23-41-12	001-099
	4		W2654	3502R	20		23-41-12	115-199
	5	UNUSED						001-099
	5		W2654	3502Y	20		23-41-12	115-199
	6	UNUSED						ALL
	7		W2654	0036	18		33-31-31	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
D40104P		AT1883/ /		PLUG				ALL
	1		W2822	2501Z			23-41-12	001-099
	1		W2822	3501Z			23-41-12	115-199
	2		W2822	0001	20		33-31-31	ALL
	3		W2822	2501B	20		23-41-12	001-099
	3		W2822	3501B	20		23-41-12	115-199
	4		W2822	2501R	20		23-41-12	001-099
	4		W2822	3501R	20		23-41-12	115-199
	5	UNUSED						001-099
	5		W2822	3501Y	20		23-41-12	115-199
	6	UNUSED						001-099
	6		W2822	0002	20		SPARE	115-199
	7		W2822	0004	20		33-31-31	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
D40105J		505/191/L032		RCPT-				ALL
	1	VY	W4475	0075	22		27-09-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40100

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40105P		505/191/L032		PLUG-				ALL
	1	VG	W4475	0046	22		27-09-12	ALL
	=1	UNUSED						ALL
D40107		P13/ /		PLUG-				001-099
	1	VR	W2297	2002R	24		23-51-11	001-099
D40111		P13/ /		RECP-				001-099
	1	VS	W2297	2501R	24		23-51-11	001-099
	DED		W2297	2501Z			23-51-11	001-099
D40115		P13/ /		PLUG-				001-099
	1	VG	W2297	2501B	24		23-51-11	001-099
	=1	UNUSED						001-099
D40120J		AA1715/ /L004		RCPT				ALL
	1		W2812	0002	20		27-38-11	ALL
	2		W2812	2001R	20		27-38-11	ALL
	3		W2812	2001B	20		27-38-11	ALL
	4		W2812	0003	20		27-23-11	ALL
	5		W2812	0005	20		27-23-11	ALL
	6		W2812	0017	20		27-23-21	ALL
	7		W2812	0018	20		27-23-21	ALL
	8		W2812	0015	20		33-45-11	ALL
	9		W2812	0016	20		SPARE	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W2812	1001	20		27-38-11	ALL
	13		W2812	1001Z			27-38-11	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40100

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40120P		1715/298/L000		PLUG				001-099
D40120P		1715/ /		PLUG				115-199
	1		W4204	0001	22		27-38-11	ALL
	2		W4204	2001R	22		27-38-11	ALL
	3		W4204	2001B	22		27-38-11	ALL
	4		W4204	0023	22		27-23-11	ALL
	5		W4204	0024	22		27-23-11	ALL
	6		W4204	0042	22		27-23-21	ALL
	7		W4204	0043	22		27-23-21	ALL
	8		W4204	0002	20		33-45-11	ALL
	9		W4204	0044	22		SPARE	ALL
	10		W4204	0045	22		SPARE	ALL
	11	UNUSED						ALL
	12		W4204	1025	22		27-38-11	ALL
	13		W4204	1025Z			27-38-11	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D40121		P14/ /		RECP-				001-099
	1	VY	W2295	2002B	24		23-51-21	001-099
D40123		P14/ /		PLUG-				001-099
	1	VR	W2295	2002R	24		23-51-21	001-099
D40125		P14/ /		RECP-				001-099
	1	VS	W2295	2501R	24		23-51-21	001-099
	DED		W2295	2501Z			23-51-21	001-099
D40127		P14/ /		PLUG-				001-099
	1	VG	W2295	2501B	24		23-51-21	001-099
	=1	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D40100

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40142J		1705/298/L000		RCPT				001-099
D40142J		1705/ /		RCPT				115-199
	1		W4204	0028	24		27-28-11	001-099
	1		W4204	0028	22		27-28-11	115-199
	2		W4204	2003B	24		27-28-11	001-099
	2		W4204	2003B	22		27-28-11	115-199
	3		W4204	2003R	24		27-28-11	001-099
	3		W4204	2003R	22		27-28-11	115-199
	4		W4204	1002	20		27-21-11	ALL
	5	UNUSED						ALL
	6		W4204	0031	22		27-28-13	ALL
	7		W4204	2002B	24		27-28-13	001-099
	7		W4204	2002B	22		27-28-13	115-199
	8		W4204	2002R	24		27-28-13	001-099
	8		W4204	2002R	22		27-28-13	115-199
	9		W4204	0032	22		27-28-13	ALL
	10		W4204	0040	22		27-23-21	ALL
	11		W4204	0041	22		27-23-21	ALL
	12		W4204	0046	22		SPARE	ALL
	13		W4204	0047	22		SPARE	ALL
	14	UNUSED						ALL
	15		W4204	1001	20		27-21-11	ALL
	16		W4204	1004	22		27-28-11	ALL
	17		W4204	1004Z			27-28-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
DED			W4204	1001Z			27-21-11	ALL
DED			W4204	1002Z			27-21-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40100

Page 4

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40142P		AA1705/ /		PLUG				ALL
	1		W3100	0001	20		27-28-11	ALL
	2		W3100	2001B	20		27-28-11	ALL
	3		W3100	2001R	20		27-28-11	ALL
	4	18	W3100	2501B	18		27-21-11	ALL
	5	UNUSED						ALL
	6		W3100	0008	20		27-28-13	ALL
	7		W3100	2002B	20		27-28-13	ALL
	8		W3100	2002R	20		27-28-13	ALL
	9		W3100	0009	20		27-28-13	ALL
	10		W3100	0015	20		27-23-21	ALL
	11		W3100	0010	20		27-23-21	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	18	W3100	2501R	18		27-21-11	ALL
	16		W3100	1001	20		27-28-11	ALL
	17		W3100	1001Z			27-28-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	DED		W3100	2501Z			27-21-11	ALL
D40162J		393/161/L012		RCPT				001-099
D40162J		AC0393/ /		RCPT				115-199
	1		W2150	0001	20		26-15-12	ALL
	2		W2150	2501R	20		32-12-12	001-099
	2		W2150	0025	20		32-12-12	115-199
	3		W2150	0003	20		26-15-12	ALL
	4		W2150	0004	20		26-15-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40100

Page 5

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40162J		393/161/L012		RCPT (continued)				001-099
D40162J		AC0393/ /		RCPT (continued)				115-199
	5		W2150	0005	20		26-15-12	ALL
	6		W2150	0006	20		26-15-12	ALL
	7		W2150	2501B	20		32-12-12	001-099
	7		W2150	0026	20		32-12-12	115-199
	8		W2150	0002	20		SPARE	001-099
	8	UNUSED						115-199
	9		W2150	0008	20		26-22-21	001-099
	9		W2150	0008	20		26-15-12	115-199
	10	UNUSED						001-099
	10		W2150	0010	20		32-44-11	115-199
	11	UNUSED						001-099
	11		W2150	2501B	20		23-71-11	115-199
	12		W2150	0009	20		SPARE	001-099
	12		W2150	2501R	20		23-71-11	115-199
	13	UNUSED						001-099
	13		W2150	2501Z			23-71-11	115-199
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						001-099
	16		W2150	0009	20		32-44-11	115-199
	17	UNUSED						001-099
	17		W2150	2502B	20		23-71-11	115-199
	18	UNUSED						001-099
	18		W2150	2502R	20		23-71-11	115-199
	19	UNUSED						001-099
	19		W2150	2502Z			23-71-11	115-199
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W2150	0007	20		SPARE	001-099
	22		W2150	0011	20		32-44-11	115-199
	23	UNUSED						ALL
	24		W2150	0020	20		26-15-12	001-099
	24	UNUSED						115-199
	DED		W2150	2501Z			32-12-12	001-099
D40162P		AC0393/ /		PLUG				ALL
	1		W3050	0001	20		26-15-12	ALL
	2		W3050	2503R	20		32-12-12	001-099
	2		W3050	0008	20		32-12-12	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40100

Page 6

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40162P		AC0393/ /		PLUG (continued)				ALL
	3		W3050	0005	20		26-15-12	ALL
	4		W3050	0006	20		26-15-12	ALL
	5		W3050	0003	20		26-15-12	ALL
	6		W3050	0004	20		26-15-12	ALL
	7		W3050	2503B	20		32-12-12	001-099
	7		W3050	0007	20		32-12-12	115-199
	8		W3050	0008	20		SPARE	001-099
	8	UNUSED						115-199
	9		W3050	0009	20		26-22-21	001-099
	9		W3050	0009	20		26-15-12	115-199
	10	UNUSED						001-099
	10		W3050	0010	20		32-44-11	115-199
	11	UNUSED						001-099
	11		W3050	2501B	20		23-71-11	115-199
	12	UNUSED						001-099
	12		W3050	2501R	20		23-71-11	115-199
	13	UNUSED						001-099
	13		W3050	2501Z			23-71-11	115-199
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						001-099
	16		W3050	0011	20		32-44-11	115-199
	17	UNUSED						001-099
	17		W3050	2502B	20		23-71-11	115-199
	18	UNUSED						001-099
	18		W3050	2502R	20		23-71-11	115-199
	19	UNUSED						001-099
	19		W3050	2502Z			23-71-11	115-199
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W3050	0007	20		SPARE	001-099
	22		W3050	0012	20		32-44-11	115-199
	23	UNUSED						ALL
	24		W3050	0002	20		26-15-12	001-099
	24	UNUSED						115-199
	DED		W3050	2503Z			32-12-12	001-099
D40164J		AA1715/ /		RCPT				ALL
	1		W2814	0002	20		27-38-11	ALL
	2		W2814	2001R	20		27-38-11	ALL

HOOKUP LIST
D280N032

91-21-51
Section D40100
Page 7
Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40164J		AA1715/ /		RCPT (continued)				ALL
	3		W2814	2001B	20		27-38-11	ALL
	4		W2814	0003	20		27-23-11	ALL
	5		W2814	0005	20		27-23-11	ALL
	6		W2814	0017	20		27-23-21	ALL
	7		W2814	0018	20		27-23-21	ALL
	8		W2814	0015	20		33-45-11	ALL
	9		W2814	0016	20		SPARE	ALL
	10		W2814	1001	20		27-38-11	ALL
	11		W2814	1001Z			27-38-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D40164P		AA1715/ /		PLUG-				ALL
	1		W4224	0001	22		27-38-11	ALL
	2		W4224	2001R	22		27-38-11	ALL
	3		W4224	2001B	22		27-38-11	ALL
	4		W4224	0007	22		27-23-11	ALL
	5		W4224	0008	22		27-23-11	ALL
	6		W4224	0042	22		27-23-21	ALL
	7		W4224	0041	22		27-23-21	ALL
	8		W4224	0006	20		33-45-11	ALL
	9		W4224	0045	20		SPARE	ALL
	10		W4224	1025	22		27-38-11	ALL
	11		W4224	1025Z			27-38-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40100

Page 8

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40164P		AA1715/ /		PLUG- (continued)				ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D40168J		P006-00/ /		RCPT-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0064	0404	18		25-29-11	ALL
	5		W0064	0405	18		25-29-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D40168P D40168P		P006-00/ / P6/ /		PLUG PLUG				001-099 115-199
	1		W2700	0007	22		SPARE	ALL
	2		W2700	0601	20		SPARE	ALL
	3		W2700	0009	20		SPARE	ALL
	4		W2700	0010	18		25-29-11	ALL
	5		W2700	0013	18		25-29-11	ALL
	6		W2700	0602	20		SPARE	ALL
	7	UNUSED						ALL
	8		W2700	0604	20		SPARE	ALL
	9		W2700	0605	20		SPARE	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40100

Page 9

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40168P		P006-00/ /		PLUG (continued)				001-099
D40168P		P6/ /		PLUG (continued)				115-199
	14	UNUSED						ALL
D40170J		E6 RLY/PNL/		RCPT				001-099
D40170J		E6/ /		RCPT				115-199
	1	UNUSED						ALL
	2		W1024	0209	24		24-32-41	001-099
	2		W1024	0092	24		24-32-41	115-199
	3	UNUSED						ALL
	4		W1024	0246	18		24-31-41	ALL
	5		W1024	0247	18		24-31-41	ALL
	6		W1024	0248	18		24-31-41	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1024	0011	16		49-61-11	ALL
D40170P		E006-00/ /		PLUG				001-099
D40170P		E6/ /		PLUG				115-199
	1		W2700	0007	22		SPARE	ALL
	2		W2700	0008	20		24-32-41	ALL
	3		W2700	0009	20		SPARE	ALL
	4		W2700	0004	18		24-31-41	ALL
	5		W2700	0005	18		24-31-41	ALL
	6		W2700	0006	18		24-31-41	ALL
	7		W2700	0601	20		SPARE	ALL
	8		W2700	0602	20		SPARE	ALL
	9		W2700	0603	20		SPARE	ALL
	10		W2700	0604	20		SPARE	ALL
	11		W2700	0605	20		SPARE	ALL
	12		W2700	0022	24		SPARE	001-099
	12	UNUSED						115-199
	13		W2700	0023	24		SPARE	001-099
	13	UNUSED						115-199
	14		W2650	0036	16		49-61-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40100

Page 10

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40171		P17/ /		RECP-				001-099
	1	VY	W2293	2001B	24		23-51-41	001-099
D40173		P17/ /		PLUG-				001-099
	1	VR	W2293	2001R	24		23-51-41	001-099
D40175		P17/ /		RECP-				001-099
	1	VS	W2293	2501R	24		23-51-41	001-099
	DED		W2293	2501Z			23-51-41	001-099
D40176J		1210/ /		RCPT.				ALL
	1		W2602	0022	22		38-14-11	ALL
	2		W2602	0023	22		38-14-11	ALL
	3		W2602	0024	22		38-14-11	ALL
	4		W2602	0044	20		SPARE	001-099
	4		W2602	0044	20		38-14-11	115-199
	5		W2602	0045	20		SPARE	001-099
	5		W2602	0045	20		38-14-11	115-199
	6		W2602	2501R	24		21-31-21	ALL
	7		W2602	2501B	24		21-31-21	ALL
	8		W2602	2501Z			21-31-21	ALL
	9		W2602	2112R	20		21-31-21	ALL
	10		W2602	2112B	20		21-31-21	ALL
	11		W2602	0003	20		30-71-21	ALL
	12		W2602	0060	20		SPARE	001-099
	12	UNUSED						115-199
	13		W2602	0002	20		30-71-21	ALL
	14		W2602	0019	22		SPARE	001-099
	14		W2602	0019	22		25-51-21	115-199
	15		W2602	0005	20		30-71-11	ALL
	16	UNUSED						ALL
	17		W2602	2001R	24		52-35-11	ALL
	18		W2602	2001B	24		52-35-11	ALL
	19		W2602	0063	22		52-35-11	001-099
	19		W2602	2002R	24		52-71-21	115-199
	20	UNUSED						001-099
	20		W2602	2002B	24		52-71-21	115-199
	21		W2602	2003R	24		52-35-11	ALL
	22		W2602	2003B	24		52-35-11	ALL
	23	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40100

Page 11

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40176J		1210/ /		RCPT. (continued)				ALL
	24	UNUSED						ALL
	25		W2602	0015	20		21-58-21	ALL
	26		W2602	0016	24		SPARE	ALL
	27		W2602	0017	20		21-31-21	ALL
	28		W2602	2013R	24		21-31-21	ALL
	29		W2602	2013B	24		21-31-21	ALL
	30		W2602	2005R	24		52-71-21	ALL
	31		W2602	2005B	24		52-71-21	ALL
	32		W2602	0046	24		SPARE	ALL
	33		W2602	0059	20		SPARE	001-099
	33	UNUSED						115-199
	34		W2602	0048	22		SPARE	001-099
	34	UNUSED						115-199
	35		W2602	0049	22		SPARE	001-099
	35	UNUSED						115-199
	36		W2602	0050	20		SPARE	001-099
	36	UNUSED						115-199
	37		W2602	0051	20		SPARE	001-099
	37	UNUSED						115-199
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44		W2602	0080	22		SPARE	001-099
	44		W2602	0080	22		21-58-24	115-199
	45		W2602	0081	22		SPARE	001-099
	45		W2602	0081	22		21-58-24	115-199
	46		W2602	0082	24		SPARE	001-099
	46		W2602	0082	22		21-58-24	115-199
	47		W2602	0083	24		SPARE	001-099
	47		W2602	0083	24		21-58-24	115-199
	48		W2602	0084	24		SPARE	001-099
	48		W2602	0084	24		21-58-24	115-199
	49	UNUSED						ALL
	50		W2602	0010	22		52-35-11	001-099
	50	UNUSED						115-199
	51		W2602	0011	22		52-35-11	001-099
	51	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D40100

Page 12

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40176J		1210/ /		RCPT. (continued)				ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D40176P		1210/ /		PLUG				ALL
	1		W2632	0022	22		38-14-11	ALL
	2		W2632	0110	22		38-14-11	001-099
	2		W2632	0023	22		38-14-11	115-199
	3		W2632	0111	22		38-14-11	001-099
	3		W2632	0024	22		38-14-11	115-199
	4	UNUSED						001-099
	4		W2632	0044	20		38-14-11	115-199
	5	UNUSED						001-099
	5		W2632	0045	20		38-14-11	115-199
	6		W2632	2501R	24		21-31-21	ALL
	7		W2632	2501B	24		21-31-21	ALL
	8		W2632	2501Z			21-31-21	ALL
	9		W2632	2008R	20		21-31-21	ALL
	10		W2632	2008B	20		21-31-21	ALL
	11		W2632	0063	20		30-71-21	ALL
	12		W2632	0073	20		SPARE	001-099
	12	UNUSED						115-199
	13		W2632	0101	20		30-71-21	ALL
	14	UNUSED						001-099
	14		W2632	0072	20		25-51-21	115-199
	15		W2632	0050	20		30-71-11	ALL
	16	UNUSED						ALL
	17		W2632	2001R	24		52-35-11	ALL
	18		W2632	2001B	24		52-35-11	ALL
	19		W2632	0227	22		52-35-11	001-099
	19		W2632	2002R	24		52-71-21	115-199
	20	UNUSED						001-099
	20		W2632	2002B	24		52-71-21	115-199
	21		W2632	2003R	24		52-35-11	ALL
	22		W2632	2003B	24		52-35-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W2632	0058	20		21-58-21	ALL
	26	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40100

Page 13

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40176P		1210/ /		PLUG (continued)				ALL
	27		W2632	0054	20		21-31-21	ALL
	28		W2632	2009R	24		21-31-21	ALL
	29		W2632	2009B	24		21-31-21	ALL
	30		W2632	2005R	24		52-71-21	ALL
	31		W2632	2005B	24		52-71-21	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						001-099
	44		W2632	0252	22		21-58-24	115-199
	45	UNUSED						001-099
	45		W2632	0251	22		21-58-24	115-199
	46	UNUSED						001-099
	46		W2632	0250	22		21-58-24	115-199
	47	UNUSED						001-099
	47		W2632	0254	22		21-58-24	115-199
	48	UNUSED						001-099
	48		W2632	0253	22		21-58-24	115-199
	49	UNUSED						ALL
	50		W2632	0010	22		52-35-11	001-099
	50	UNUSED						115-199
	51		W2632	0011	22		52-35-11	001-099
	51	UNUSED						115-199
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D40177		P17/ /		PLUG-				001-099
	1	VG	W2293	2501B	24		23-51-41	001-099
	=1	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D40100

Page 14

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40178J		1210/ /		RCPT.				ALL
	1		W2602	0001	18		SPARE	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W2602	0021	18		SPARE	001-099
	4		W2602	0021	18		25-51-21	115-199
	5	UNUSED						ALL
	6		W2602	0006	16		52-35-11	ALL
	7		W2602	0007	16		52-35-11	ALL
	8		W2602	0008	16		52-35-11	ALL
	9		W2602	0043	18		38-15-11	ALL
	10		W2602	0064	18		38-15-11	ALL
	11		W2602	0065	18		38-15-11	ALL
	12		W2602	0066	18		38-15-11	ALL
	13		W2602	0012	18		21-58-21	ALL
	14		W2602	0013	18		21-58-21	ALL
	15		W2602	0014	18		21-58-21	ALL
	16		W2602	0037	18		33-37-21	ALL
	17	UNUSED						ALL
	18		W2602	0020	18		SPARE	001-099
	18		W2602	0020	18		25-51-21	115-199
	19		W2602	0036	18		SPARE	001-099
	19		W2602	0036	18		25-51-21	115-199
D40178P		1210/ /		PLUG				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						001-099
	4		W2632	0073	18		25-51-21	115-199
	5	UNUSED						ALL
	6		W2632	0031	16		52-35-11	ALL
	7		W2632	0032	16		52-35-11	ALL
	8		W2632	0030	16		52-35-11	ALL
	9		W2632	0025	18		38-15-11	ALL
	10		W2632	0026	18		38-15-11	ALL
	11		W2632	0027	18		38-15-11	ALL
	12		W2632	0051	18		38-15-11	ALL
	13		W2632	0061	18		21-58-21	ALL
	14		W2632	0060	18		21-58-21	ALL
	15		W2632	0059	18		21-58-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40100

Page 15

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40178P		1210/ /		PLUG (continued)				ALL
	16		W2632	0066	18		33-37-21	ALL
	17	UNUSED						ALL
	18	UNUSED						001-099
	18		W2632	0074	18		25-51-21	115-199
	19	UNUSED						001-099
	19		W2632	0075	18		25-51-21	115-199
D40182J		E5-2/ /		RCPT				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1284	2503R	24		21-31-21	ALL
	7		W1284	2503B	24		21-31-21	ALL
	8		W1284	2503Z			21-31-21	ALL
	9		W1284	2021R	22		21-31-21	ALL
	10		W1284	2021B	22		21-31-21	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W1284	0144	20		21-31-21	ALL
	28		W1284	2022R	24		21-31-21	ALL
	29		W1284	2022B	24		21-31-21	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40100

Page 16

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40182J		E5-2/ /		RCPT (continued)				ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
D40182P		E005-02/ /		PLUG				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W2602	2501R	24		21-31-21	ALL
	7		W2602	2501B	24		21-31-21	ALL
	8		W2602	2501Z			21-31-21	ALL
	9		W2602	2112R	20		21-31-21	ALL
	10		W2602	2112B	20		21-31-21	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W2602	0017	20		21-31-21	ALL
	28		W2602	2013R	24		21-31-21	ALL
	29		W2602	2013B	24		21-31-21	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40100

Page 17

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40182P		E005-02/ /		PLUG (continued)				ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
D40184J		P37/ /		RCPT				ALL
	1	UNUSED						ALL
	2		W1272	0254	20		30-71-21	001-099
	2		W1272	0254	24		30-71-21	115-199
	3		W1272	0221	20		30-71-21	001-099
	3		W1272	0221	24		30-71-21	115-199
	4	UNUSED						ALL
	5		W1270	5792	20		30-71-11	ALL
	6		W1270	0509	18		38-15-11	ALL
	7		W1270	0508	18		38-15-11	ALL
	8		W1270	0507	18		38-15-11	ALL
	9		W1270	0506	18		38-15-11	ALL
	10		W1270	6007	18		21-44-11	ALL
	11		W1270	0306	18		21-44-11	ALL
	12		W1270	0305	18		21-44-11	ALL
	13		W1270	5528	18		21-58-21	ALL
	14		W1270	5529	18		21-58-21	ALL
	15		W1270	5530	18		21-58-21	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
D40184P		P037-00/ /		PLUG				ALL
	1		W2602	0001	18		SPARE	ALL
	2		W2602	0002	20		30-71-21	ALL
	3		W2602	0003	20		30-71-21	ALL
	4	UNUSED						ALL
	5		W2602	0005	20		30-71-11	ALL
	6		W2602	0043	18		38-15-11	ALL
	7		W2602	0064	18		38-15-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40100

Page 18

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40184P		P037-00/ /		PLUG (continued)				ALL
	8		W2602	0065	18		38-15-11	ALL
	9		W2602	0066	18		38-15-11	ALL
	10		W2602	0033	18		21-44-11	ALL
	11		W2602	0034	18		21-44-11	ALL
	12		W2602	0035	18		21-44-11	ALL
	13		W2602	0012	18		21-58-21	ALL
	14		W2602	0013	18		21-58-21	ALL
	15		W2602	0014	18		21-58-21	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
D40186J		P37/ /		RCPT				ALL
	1		W1270	0075	22		38-14-11	ALL
	2		W1270	0076	22		38-14-11	ALL
	3		W1270	0079	22		38-14-11	ALL
	4	UNUSED						001-099
	4		W1270	0080	20		38-14-11	115-199
	5	UNUSED						001-099
	5		W1270	0078	20		38-14-11	115-199
	6	UNUSED						ALL
	7		W1270	0673	20		21-58-21	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W1270	0308	24		21-44-11	ALL
	17		W1270	0315	24		21-44-11	001-099
	17		W1270	0315	20		21-44-11	115-199
	18		W1270	0321	24		21-44-11	ALL
	19	UNUSED						ALL
	20	UNUSED						001-099
	20		W1270	0159	22		52-35-11	115-199
	21	UNUSED						001-099
	21		W1270	0158	22		52-35-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40100

Page 19

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40186J		P37/ /		RCPT (continued)				ALL
	22	UNUSED						001-099
	22		W1270	0160	22		52-35-11	115-199
	23		W1270	2007R	24		21-61-11	ALL
	24		W1270	2007B	24		21-61-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						001-099
	27		W1270	5553	22		21-58-24	115-199
	28	UNUSED						001-099
	28		W1270	5554	22		21-58-24	115-199
	29	UNUSED						001-099
	29		W1270	5555	22		21-58-24	115-199
	30	UNUSED						001-099
	30		W1270	5564	22		21-58-24	115-199
	31	UNUSED						001-099
	31		W1270	5557	22		21-58-24	115-199
D40186P		P037-00/ /		PLUG				ALL
	1		W2602	0022	22		38-14-11	ALL
	2		W2602	0023	22		38-14-11	ALL
	3		W2602	0024	22		38-14-11	ALL
	4		W2602	0044	20		SPARE	001-099
	4		W2602	0044	20		38-14-11	115-199
	5		W2602	0045	20		SPARE	001-099
	5		W2602	0045	20		38-14-11	115-199
	6	UNUSED						ALL
	7		W2602	0015	20		21-58-21	ALL
	8		W2602	0016	24		SPARE	ALL
	9		W2602	0046	24		SPARE	ALL
	10	UNUSED						ALL
	11		W2602	0048	22		SPARE	001-099
	11	UNUSED						115-199
	12		W2602	0049	22		SPARE	001-099
	12	UNUSED						115-199
	13		W2602	0050	20		SPARE	001-099
	13	UNUSED						115-199
	14		W2602	0051	20		SPARE	001-099
	14	UNUSED						115-199
	15	UNUSED						ALL
	16		W2602	0032	24		21-44-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40100

Page 20

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40186P		P037-00/ /		PLUG (continued)				ALL
	17		W2602	0031	24		21-44-11	ALL
	18		W2602	0030	20		21-44-11	ALL
	19	UNUSED						ALL
	20	UNUSED						001-099
	20		W2602	0010	22		52-35-11	115-199
	21	UNUSED						001-099
	21		W2602	0011	22		52-35-11	115-199
	22	UNUSED						001-099
	22		W2602	0063	22		52-35-11	115-199
	23		W2602	2006R	24		21-61-11	ALL
	24		W2602	2006B	24		21-61-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W2602	0080	22		SPARE	001-099
	27		W2602	0080	22		21-58-24	115-199
	28		W2602	0081	22		SPARE	001-099
	28		W2602	0081	22		21-58-24	115-199
	29		W2602	0082	24		SPARE	001-099
	29		W2602	0082	22		21-58-24	115-199
	30		W2602	0084	24		SPARE	001-099
	30		W2602	0084	24		21-58-24	115-199
	31		W2602	0083	24		SPARE	001-099
	31		W2602	0083	24		21-58-24	115-199
D40188J		P034-00/ /		RCPT-				001-099
D40188J		P34/ /		RCPT-				115-199
	1		W1190	0204	20		33-37-21	ALL
	2	UNUSED						ALL
	3	UNUSED						001-099
	3		W1190	0207	18		25-51-21	115-199
	4		W1190	0201	20		52-35-11	ALL
	5	UNUSED						001-099
	5		W1190	0205	22		25-51-21	115-199
	6	UNUSED						001-099
	6		W1190	0206	18		25-51-21	115-199
	7		W1190	0202	20		52-35-11	ALL
	8	UNUSED						001-099
	8		W1190	0208	18		25-51-21	115-199
	9	UNUSED						ALL
	10		W1190	0203	20		52-35-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40100

Page 21

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40188J		P034-00/ /		RCPT- (continued)				001-099
D40188J		P34/ /		RCPT- (continued)				115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1190	0303	18		33-31-21	ALL
D40188P		P034-00/ /		PLUG				ALL
	1		W2602	0037	18		33-37-21	ALL
	2		W2602	0019	22		SPARE	001-099
	2	UNUSED						115-199
	3		W2602	0020	18		SPARE	001-099
	3		W2602	0020	18		25-51-21	115-199
	4		W2602	0008	16		52-35-11	ALL
	5		W2602	0059	20		SPARE	001-099
	5		W2602	0019	22		25-51-21	115-199
	6		W2602	0021	18		SPARE	001-099
	6		W2602	0021	18		25-51-21	115-199
	7		W2602	0006	16		52-35-11	ALL
	8		W2602	0060	20		SPARE	001-099
	8		W2602	0036	18		25-51-21	115-199
	9		W2602	0036	18		SPARE	001-099
	9	UNUSED						115-199
	10		W2602	0007	16		52-35-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W2602	0018	18		33-31-21	ALL
D40190J		E5-2/ /		RCPT				001-099
	1		W1284	0166	22		32-42-12	001-099
	2		W1284	0167	22		32-42-12	001-099
	3		W1284	5043R	22		32-42-11	001-099
	4		W1284	5043B	22		32-42-11	001-099
	5		W1284	5043Z			32-42-11	001-099
	6		W1284	0306	22		32-42-11	001-099
	7		W1284	0307	22		32-42-11	001-099
	8		W1284	0308	22		32-42-11	001-099
	9		W1284	0309	22		32-42-11	001-099
	10		W1284	0311	22		32-42-11	001-099
	11	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D40100

Page 22

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40190J		E5-2/ /		RCPT (continued)				001-099
	12	UNUSED						001-099
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D40190P		E005-02/ /		PLUG				001-099
	1		W4006	0237	22		32-42-12	001-099
	2		W4006	0238	22		32-42-12	001-099
	3		W4006	5001R	22		32-42-11	001-099
	4		W4006	5001B	22		32-42-11	001-099
	5		W4006	5001Z			32-42-11	001-099
	6		W4006	0212	22		32-42-11	001-099
	7		W4006	0213	22		32-42-11	001-099
	8		W4006	0269	22		32-42-11	001-099
	9		W4006	0214	22		32-42-11	001-099
	10		W4006	0232	24		32-42-11	001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D40193J		AA1671/ /		RCPT-				ALL
	= A1		W3107	001CX			23-11-11	ALL
	= C1		W3107	001CO			23-11-11	ALL
D40193P		1650/295/		PLUG-				001-099
D40193P		AA1671/ /		PLUG-				115-199
	= A1		W2667	001CX			23-11-11	ALL
	= C1		W2667	001CO			23-11-11	ALL
D40197J		1650/300/R10		RCPT-				ALL
	= A1		W3117	001CX			23-11-21	ALL
	= C1		W3117	001CO			23-11-21	ALL
D40197P		AB1671/ /		PLUG-				ALL
	= A1		W2669	001CX			23-11-21	ALL
	= C1		W2669	001CO			23-11-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40100

Page 23

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40198J		1883/243/R25		RCPT				001-099
D40198J		AT1883/ /		RCPT				115-199
	1		W2654	0004	20		49-14-11	ALL
	2		W2654	0005	20		49-14-11	ALL
	3		W2654	0006	20		49-14-11	ALL
	4		W2654	0001	20		49-14-11	ALL
	5		W2654	0012	20		49-14-11	ALL
	6		W2654	0013	20		49-14-11	ALL
	7		W2654	0008	20		49-14-11	ALL
	8		W2654	0009	20		49-14-11	ALL
	9		W2654	0010	20		49-14-11	ALL
	10		W2654	0011	20		49-14-11	ALL
	11		W2654	2503B	20		49-14-11	ALL
	12		W2654	2503R	20		49-14-11	ALL
	13		W2654	0003	20		49-14-11	ALL
	14		W2654	0037	20		49-94-11	001-099
	14		W2654	0037	20		SPARE	115-199
	15		W2654	0049	20		49-94-11	001-099
	15		W2654	0049	20		SPARE	115-199
	16		W2654	0007	20		49-14-11	ALL
	17		W2654	0002	20		49-14-11	ALL
	18		W2654	0041	20		SPARE	ALL
	19		W2654	0014	20		49-14-11	ALL
	20		W2654	0015	20		49-14-11	ALL
	21	UNUSED						001-099
	21		W2654	0032	20		49-94-14	115-199
	22	UNUSED						001-099
	22		W2654	0033	20		49-94-14	115-199
	23	UNUSED						001-099
	23		W2654	0034	20		49-94-14	115-199
	24		W2654	0047	20		SPARE	ALL
	25		W2654	0048	20		SPARE	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	DED		W2654	2503Z			49-14-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40100

Page 24 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40200J		1883/235/R25		RCPT				001-099
D40200J		AT1883/ /		RCPT				115-199
	1		W2654	2507B	20		49-14-11	ALL
	2		W2654	2507R	20		49-14-11	ALL
	3		W2654	2504B	20		49-14-11	ALL
	4		W2654	2504R	20		49-14-11	ALL
	5		W2654	2505B	20		49-14-11	ALL
	6		W2654	2505R	20		49-14-11	ALL
	7		W2654	2508B	20		49-14-11	ALL
	8		W2654	2508R	20		49-14-11	ALL
	9	4B	W2654	4503G	20		49-14-11	ALL
	10	4B	W2654	4501G	20		49-14-11	ALL
	11	4B	W2654	4502G	20		49-14-11	ALL
	12		W2654	2509B	20		49-14-11	ALL
	13		W2654	2510B	20		49-14-11	ALL
	14		W2654	2506B	20		49-14-11	ALL
	15		W2654	2506R	20		49-14-11	ALL
	16		W2654	2501B	20		49-14-11	ALL
	17		W2654	2501R	20		49-14-11	ALL
	18		W2654	4251R	20		49-14-11	ALL
	19		W2654	2511B	20		SPARE	ALL
	20		W2654	2511R	20		SPARE	ALL
	21		W2654	2511Z			SPARE	ALL
	22		W2654	0042	20		SPARE	ALL
	23	4D	W2654	4503W	20		49-14-11	ALL
	24	4D	W2654	4501W	20		49-14-11	ALL
	25	4D	W2654	4502W	20		49-14-11	ALL
	26		W2654	2509R	20		49-14-11	ALL
	27		W2654	2510R	20		49-14-11	ALL
	28		W2654	0043	20		SPARE	ALL
	29		W2654	0044	20		SPARE	ALL
	30		W2654	2502Z			49-14-11	ALL
	31		W2654	2501Z			49-14-11	ALL
	32		W2654	4251G	20		49-14-11	ALL
	33		W2654	4251Z			49-14-11	ALL
	34		W2654	4251B	20		49-14-11	ALL
	35		W2654	4251Y	20		49-14-11	ALL
	36	UNUSED						ALL
	37		W2654	2502B	20		49-14-11	ALL
	38		W2654	2502R	20		49-14-11	ALL
	39	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40200

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40200J		1883/235/R25		RCPT (continued)				001-099
D40200J		AT1883/ /		RCPT (continued)				115-199
	40		W2654	4503Z			49-14-11	ALL
	41		W2654	4501Z			49-14-11	ALL
	42		W2654	4502Z			49-14-11	ALL
	DED		W2654	2504Z			49-14-11	ALL
	DED		W2654	2505Z			49-14-11	ALL
	DED		W2654	2506Z			49-14-11	ALL
	DED		W2654	2507Z			49-14-11	ALL
	DED		W2654	2508Z			49-14-11	ALL
	DED		W2654	2509Z			49-14-11	ALL
	DED		W2654	2510Z			49-14-11	ALL
D40206J		P36/ /		RCPT				ALL
	1	UNUSED						ALL
	2		W1260	5594	20		21-58-21	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W1260	3001R	22		21-31-31	ALL
	6		W1260	3001Y	22		21-31-31	ALL
	7		W1260	3001B	22		21-31-31	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1260	5593	18		21-58-21	ALL
	15	UNUSED						ALL
	16		W1260	5592	18		21-58-21	ALL
	17	UNUSED						ALL
	18		W1260	5591	18		21-58-21	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40200

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40206P		P036-00/ /		PLUG				ALL
	1	UNUSED						ALL
	2		W2634	0002	20		21-58-21	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W2634	3002R	22		21-31-31	ALL
	6		W2634	3002Y	22		21-31-31	ALL
	7		W2634	3002B	22		21-31-31	ALL
	8	UNUSED						001-099
	8		W2634	0021	20		SPARE	115-199
	9	UNUSED						001-099
	9		W2634	0022	20		SPARE	115-199
	10	UNUSED						001-099
	10		W2634	0023	20		SPARE	115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W2634	0003	18		21-58-21	ALL
	15	UNUSED						ALL
	16		W2634	0004	18		21-58-21	ALL
	17	UNUSED						ALL
	18		W2634	0005	18		21-58-21	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
D40209J		P1-3/ /		RCPT.				ALL
	1		W0101	0093	22		31-51-42	ALL
	2		W0101	0094	22		31-51-42	ALL
	3		W0101	0004	22		26-11-11	ALL
	4		W0101	0121	24		21-33-12	ALL
	5		W0101	0002	24		34-12-12	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0101	0057	22		33-16-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40200

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40209J		P1-3/ /		RCPT. (continued)				ALL
	11		W0101	0011	22		34-46-11	ALL
	12		W0101	0058	22		33-16-11	ALL
	13		W0101	0013	22		34-32-11	ALL
	14		W0101	0014	22		34-32-11	ALL
	15		W0101	0015	22		34-32-11	ALL
	16		W0101	0059	22		33-16-11	ALL
	17		W0101	0061	22		33-16-11	ALL
	18	UNUSED						ALL
	19		W0101	0115	22		79-33-11	ALL
	20		W0101	0064	22		33-16-21	ALL
	21	UNUSED						ALL
	22		W0101	0075	22		31-41-19	ALL
	23		W0101	0076	22		31-41-19	ALL
	24		W0101	0077	24		31-41-19	ALL
	25		W0101	0078	24		31-41-19	ALL
	26		W0101	1003	22		22-14-11	ALL
	27		W0101	0139	22		29-21-32	ALL
	28		W0101	0140	22		29-21-32	ALL
	29		W0101	0091	20		33-13-12	ALL
	30		W0101	0092	20		33-13-12	ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34		W0101	0153	24		31-51-43	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	DED		W0101	1003Z			22-14-11	ALL
D40209P		P001-03/ /		PLUG				001-099
D40209P		P1-3/MO-/D		PLUG				115-199
	1		W0001	0217	22		31-51-42	ALL
	2		W0001	0216	22		31-51-42	ALL
	3		W0001	0042	24		26-11-11	ALL
	4		W0001	0113	24		21-33-12	ALL
	5		W0001	0007	24		34-12-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40200

Page 4

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40209P		P001-03/ /		PLUG (continued)				001-099
D40209P		P1-3/MO-/D		PLUG (continued)				115-199
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0001	0004	20		33-16-11	ALL
	11		W0001	0011	22		34-46-11	ALL
	12		W0001	0005	22		33-16-11	ALL
	13		W0001	0043	22		34-32-11	ALL
	14		W0001	0044	22		34-32-11	ALL
	15		W0001	0045	22		34-32-11	ALL
	16		W0001	0003	22		33-16-11	ALL
	17		W0001	0010	22		33-16-11	ALL
	18	UNUSED						ALL
	19		W0001	0125	22		79-33-11	ALL
	20		W0001	0052	22		33-16-21	ALL
	21	UNUSED						ALL
	22		W0001	0096	20		31-41-19	ALL
	23		W0001	0097	20		31-41-19	ALL
	24		W0001	0244	24		31-41-19	ALL
	25		W0001	0245	24		31-41-19	ALL
	26		W0001	0030	22		22-14-11	ALL
	27		W0001	0513	22		29-21-32	ALL
	28		W0001	0514	22		29-21-32	ALL
	29		W0001	0149	20		33-13-12	ALL
	30		W0001	0148	20		33-13-12	ALL
	31	UNUSED						001-099
	31		W0001	0665	24		SPARE	115-199
	32	UNUSED						001-099
	32		W0001	0666	24		SPARE	115-199
	33	UNUSED						ALL
	34		W0001	0153	24		31-51-43	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40200

Page 5

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40214J		E4-2/ /		RCPT-				ALL
	1		W1275	6028	22		29-11-31	ALL
	2		W1275	6032	22		29-11-31	ALL
	3		W1275	6036	22		29-11-31	ALL
	4		W1275	6172	22		29-11-31	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
D40214P		E004-02/ /		PLUG				001-099
D40214P		E4-2/ /		PLUG				115-199
	1		W2612	0002	20		29-11-31	ALL
	2		W2612	0004	20		29-11-31	ALL
	3		W2612	0006	20		29-11-31	ALL
	4		W2612	0007	20		29-11-31	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
D40218J		P54/ /		RCPT				ALL
	1		W1120	0300	24		26-18-11	001-099
	1		W1120	0196	24		26-18-11	115-199
	2		W1120	0454	20		28-22-21	ALL
	3	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40200

Page 6

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40218J		P54/ /		RCPT (continued)				ALL
	4	UNUSED						ALL
	5		W1120	0455	20		28-22-21	ALL
	6		W1120	0474	20		28-25-11	ALL
	7	UNUSED						ALL
	8		W1120	0301	24		26-18-11	001-099
	8		W1120	0197	24		26-18-11	115-199
	9		W1120	0173	24		26-15-11	001-099
	9		W1120	0498	24		26-15-11	115-199
	10	UNUSED						ALL
	11		W1120	0172	24		26-15-11	001-099
	11		W1120	0500	24		26-15-11	115-199
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W1120	0254	22		28-25-21	ALL
	16	UNUSED						ALL
	17		W1120	0334	20		26-22-21	001-099
	17		W1120	0249	20		26-22-21	115-199
	18		W1120	0335	22		26-22-21	001-099
	18		W1120	0278	22		26-22-21	115-199
	19		W1120	0316	22		26-21-11	001-099
	19		W1120	0280	22		26-21-11	115-199
	20		W1120	0315	20		26-21-11	001-099
	20		W1120	0241	20		26-21-11	115-199
	21		W1120	0314	20		26-21-11	001-099
	21		W1120	0216	20		26-21-11	115-199
	22		W1120	0302	24		26-18-11	001-099
	22		W1120	0198	24		26-18-11	115-199
	23	UNUSED						ALL
	24		W1120	0303	24		26-18-11	001-099
	24		W1120	0199	24		26-18-11	115-199
	25		W1120	0456	20		28-22-21	ALL
	26		W1120	0304	24		26-18-11	001-099
	26		W1120	0200	24		26-18-11	115-199
	27	UNUSED						ALL
	28		W1120	0305	24		26-18-11	001-099
	28		W1120	0201	24		26-18-11	115-199
	29	UNUSED						ALL
	30		W1120	0306	24		26-18-11	001-099
	30		W1120	0202	24		26-18-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40200

Page 7

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40218J		P54/ /		RCPT (continued)				ALL
	31	UNUSED						ALL
	32		W1120	0307	24		26-18-11	001-099
	32		W1120	0203	24		26-18-11	115-199
	33		W1120	0240	24		26-16-11	001-099
	33		W1120	0181	24		26-16-11	115-199
	34		W1120	0241	24		26-16-11	001-099
	34		W1120	0182	24		26-16-11	115-199
	35		W1120	0242	24		26-16-11	001-099
	35		W1120	0183	24		26-16-11	115-199
	36		W1120	0282	24		26-16-11	001-099
	36		W1120	0334	24		26-16-11	115-199
	37		W1120	0283	24		26-16-11	001-099
	37		W1120	0335	24		26-16-11	115-199
	38		W1120	0284	24		26-16-11	001-099
	38		W1120	0336	24		26-16-11	115-199
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43		W1120	0342	20		26-23-11	001-099
	43		W1120	0193	20		26-23-11	115-199
	44		W1120	0341	20		26-23-11	001-099
	44		W1120	0192	20		26-23-11	115-199
	45		W1120	0343	20		26-23-11	001-099
	45		W1120	0208	20		26-23-11	115-199
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D40218P		P54/ /		PLUG				ALL
	1	18	W2626	0001	18		26-18-11	ALL
	2		W2626	0052	20		28-22-21	ALL
	3	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40200

Page 8

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40218P		P54/ /		PLUG (continued)				ALL
	4	UNUSED						ALL
	5		W2626	0053	20		28-22-21	ALL
	6		W2626	0055	20		28-25-11	ALL
	7	UNUSED						ALL
	8	18	W2626	0002	18		26-18-11	ALL
	9		W2626	0009R	22		26-15-11	001-099
	9		W2626	0009R	20		26-15-11	115-199
	10		W2626	0010R	22		26-15-11	001-099
	10	UNUSED						115-199
	11		W2626	0011R	22		26-15-11	001-099
	11		W2626	0011R	20		26-15-11	115-199
	12		W2626	0012	20		SPARE	ALL
	13	UNUSED						ALL
	14		W2626	0014R	22		SPARE	001-099
	14	UNUSED						115-199
	15		W2626	0015	20		28-25-21	ALL
	16		W2626	0016	20		SPARE	ALL
	17		W2626	0020	20		26-22-21	ALL
	18		W2626	0023	20		26-22-21	ALL
	19		W2626	0025	20		26-21-11	ALL
	20		W2626	0027	20		26-21-11	ALL
	21		W2626	0030	20		26-21-11	ALL
	22	18	W2626	0003	18		26-18-11	ALL
	23	UNUSED						ALL
	24	18	W2626	0004	18		26-18-11	ALL
	25		W2626	0054	20		28-22-21	ALL
	26	18	W2626	0005	18		26-18-11	ALL
	27	UNUSED						ALL
	28	18	W2626	0006	18		26-18-11	ALL
	29	UNUSED						ALL
	30	18	W2626	0007	18		26-18-11	ALL
	31	UNUSED						ALL
	32	18	W2626	0008	18		26-18-11	ALL
	33		W2626	0033	22		26-16-11	ALL
	34		W2626	0034	22		26-16-11	ALL
	35		W2626	0035	22		26-16-11	ALL
	36		W2626	0038	22		26-16-11	ALL
	37		W2626	0039	22		26-16-11	ALL
	38		W2626	0040	22		26-16-11	ALL
	39	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40200

Page 9

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40218P		P54/ /		PLUG (continued)				ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43		W2626	1001	20		26-23-11	ALL
	44		W2626	0044	20		26-23-11	ALL
	45		W2626	0049	20		26-23-11	ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	DED		W2626	1001Z			26-23-11	ALL
D40219J		E5-2/ /		RCPT				001-099
	1		W1284	0170	22		32-42-12	001-099
	2		W1284	0172	22		32-42-12	001-099
	3		W1284	0173	22		32-42-12	001-099
	4		W1284	0174	22		32-42-12	001-099
	5		W1284	0175	22		32-42-12	001-099
	6		W1284	0176	22		32-42-12	001-099
	7		W1284	0177	22		32-42-12	001-099
	8		W1284	0178	22		32-42-12	001-099
	9		W1284	0184	22		32-42-12	001-099
	10		W1284	0171	22		32-42-12	001-099
	11		W1284	0181	22		32-42-12	001-099
	12		W1284	0183	22		32-42-12	001-099
	13		W1284	0182	22		32-42-12	001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
	16	UNUSED						001-099
	17	UNUSED						001-099
	18	UNUSED						001-099
	19	UNUSED						001-099
	20	UNUSED						001-099
	21	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D40200

Page 10

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40219J		E5-2/ /		RCPT (continued)				001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
D40219P		E005-02/ /		PLUG-				001-099
	1		W2241	0075	22		32-42-12	001-099
	2		W2241	0076	22		32-42-12	001-099
	3		W2241	0077	22		32-42-12	001-099
	4		W2241	0078	22		32-42-12	001-099
	5		W2241	0079	22		32-42-12	001-099
	6		W2241	0080	22		32-42-12	001-099
	7		W2241	0081	22		32-42-12	001-099
	8		W2241	0082	22		32-42-12	001-099
	9		W2241	0083	22		32-42-12	001-099
	10		W2241	0087	22		32-42-12	001-099
	11		W2241	0112	22		32-42-12	001-099
	12		W2241	0113	22		32-42-12	001-099
	13		W2241	0088	22		32-42-12	001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
	16	UNUSED						001-099
	17	UNUSED						001-099
	18	UNUSED						001-099
	19	UNUSED						001-099
	20	UNUSED						001-099
	21	UNUSED						001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
D40220J		P54/ /		RCPT				ALL
	1		W1120	0204	24		26-15-11	001-099
	1		W1120	0501	24		26-15-11	115-199
	2	UNUSED						ALL
	3		W1120	0203	24		26-15-11	001-099
	3	UNUSED						115-199
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1120	0317	20		26-21-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40200

Page 11

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40220J		P54/ /		RCPT (continued)				ALL
	7		W1120	0215	20		26-21-11	115-199
	8		W1120	0318	20		26-21-11	001-099
	8		W1120	0240	20		26-21-11	115-199
	9		W1120	0319	22		26-21-11	001-099
	9		W1120	0242	22		26-21-11	115-199
	10		W1120	0237	24		26-16-11	001-099
	10		W1120	0178	24		26-16-11	115-199
	11		W1120	0238	24		26-16-11	001-099
	11		W1120	0179	24		26-16-11	115-199
	12		W1120	0239	24		26-16-11	001-099
	12		W1120	0180	24		26-16-11	115-199
	13		W1120	0279	24		26-16-11	001-099
	13		W1120	0331	24		26-16-11	115-199
	14		W1120	0280	24		26-16-11	001-099
	14		W1120	0332	24		26-16-11	115-199
	15		W1120	0281	24		26-16-11	001-099
	15		W1120	0333	24		26-16-11	115-199
	16		W1120	0459	20		28-22-21	ALL
	17	UNUSED						ALL
	18		W1120	0458	20		28-22-21	ALL
	19		W1120	0351	20		26-23-11	001-099
	19		W1120	0206	20		26-23-11	115-199
	20		W1120	0353	20		26-23-11	001-099
	20		W1120	0194	20		26-23-11	115-199
	21		W1120	0352	20		26-23-11	001-099
	21		W1120	0207	20		26-23-11	115-199
	22	UNUSED						001-099
	22		W1120	0503	24		26-15-11	115-199
	23		W1120	0457	20		28-22-21	ALL
	24	UNUSED						ALL
D40220P		P054-00/ /		PLUG				001-099
D40220P		P54/ /		PLUG				115-199
	1		W2628	0001R	22		26-15-11	001-099
	1		W2628	0001R	20		26-15-11	115-199
	2		W2628	0002R	22		26-15-11	001-099
	2	UNUSED						115-199
	3		W2628	0003R	22		26-15-11	001-099
	3	UNUSED						115-199
	4	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40200

Page 12

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40220P		P054-00/ /		PLUG (continued)				001-099
D40220P		P54/ /		PLUG (continued)				115-199
	5		W2628	0058R	20		SPARE	001-099
	5	UNUSED						115-199
	6	UNUSED						ALL
	7		W2628	0007	20		26-21-11	ALL
	8		W2628	0010	20		26-21-11	ALL
	9		W2628	0014	20		26-21-11	ALL
	10		W2628	0015	22		26-16-11	ALL
	11		W2628	0016	22		26-16-11	ALL
	12		W2628	0017	22		26-16-11	ALL
	13		W2628	0020	22		26-16-11	ALL
	14		W2628	0021	22		26-16-11	ALL
	15		W2628	0022	22		26-16-11	ALL
	16		W2628	0042	20		28-22-21	ALL
	17	UNUSED						ALL
	18		W2628	0043	20		28-22-21	ALL
	19		W2628	0034	20		26-23-11	001-099
	19		W2628	0054	20		26-23-11	115-199
	20		W2628	1001	20		26-23-11	ALL
	21		W2628	0039	20		26-23-11	ALL
	22	UNUSED						001-099
	22		W2628	0003R	20		26-15-11	115-199
	23		W2628	0044	20		28-22-21	ALL
	24	UNUSED						ALL
	DED		W2628	1001Z			26-23-11	ALL
D40222J		1883/239/R21		RCPT				001-099
D40222J		AT1883/ /		RCPT				115-199
	A		W2802	0001	*1		49-41-11	ALL
	B		W2802	0002	*1		49-41-11	ALL
	C		W2802	0005	*1		49-41-11	ALL
	D		W2802	0006	*1		49-41-11	ALL
D40222P		AT1883/ /		PLUG				ALL
	A		W2810	0001	*1		49-41-11	ALL
	B		W2810	0002	*1		49-41-11	ALL
	C		W2810	0003	*1		49-41-11	ALL
	D		W2810	0004	*1		49-41-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40200

Page 13

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40228J		AT1883/ /		RCPT				ALL
	A		W2800	0001	*1		24-21-41	ALL
	B		W2800	0002	*1		24-21-41	ALL
	C		W2800	0003	*1		24-21-41	ALL
	D		W2800	0007	04		24-21-41	ALL
D40228P		AT1883/ /		PLUG				ALL
	A		W2806	0001	*1		24-21-41	ALL
	B		W2806	0002	*1		24-21-41	ALL
	C		W2806	0003	*1		24-21-41	ALL
	D		W2806	0004	04		24-21-41	ALL
D40230J		AT1883/ /		RCPT-				ALL
	1	UNUSED						ALL
	2		W2818	0013	20		SPARE	ALL
	3	UNUSED						ALL
	4		W2818	2501Z			24-21-41	ALL
	5		W2818	3001R	18		24-21-41	ALL
	6		W2818	3001B	18		24-21-41	ALL
	7		W2818	3001Y	18		24-21-41	ALL
	8		W2818	2501R	20		24-21-41	ALL
	9		W2818	2501B	20		24-21-41	ALL
	10		W2818	4001B	20		24-21-41	ALL
	11		W2818	4001G	20		24-21-41	ALL
	12		W2818	4001R	20		24-21-41	ALL
	13		W2818	4001Y	20		24-21-41	ALL
	14		W2818	0014	20		SPARE	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40200

Page 14

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40230J		AT1883/ /		RCPT- (continued)				ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
D40230P		AT1883/ /		PLUG				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W2808	2501Z			24-21-41	ALL
	5		W2808	3001R	18		24-21-41	ALL
	6		W2808	3001B	18		24-21-41	ALL
	7		W2808	3001Y	18		24-21-41	ALL
	8		W2808	2501R	18		24-21-41	ALL
	9		W2808	2501B	18		24-21-41	ALL
	10		W2808	4001B	20		24-21-41	ALL
	11		W2808	4001G	20		24-21-41	ALL
	12		W2808	4001R	20		24-21-41	ALL
	13		W2808	4001Y	20		24-21-41	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
D40240J		P6/ /		RCPT-				ALL
	1		W0062	0201	16		24-51-12	ALL
	2		W0062	0202	16		24-51-12	ALL
	3		W0062	0203	16		24-51-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40200

Page 15

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40240J		P6/ /		RCPT- (continued)				ALL
	4		W0062	0101	14		24-53-11	ALL
	5		W0062	0205	16		24-51-11	ALL
	6		W0062	0206	16		24-51-11	ALL
	7		W0062	0207	16		24-51-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D40240P		P006-00/ /		PLUG-				ALL
	1		W2012	0001	16		24-51-12	ALL
	2		W2012	0002	16		24-51-12	ALL
	3		W2012	0003	16		24-51-12	ALL
	4		W2012	0004	14		24-53-11	ALL
	5		W2012	0005	16		24-51-11	ALL
	6		W2012	0006	16		24-51-11	ALL
	7		W2012	0007	16		24-51-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D40242J		P6/ /		RCPT-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0062	0303	14		24-32-11	ALL
	4		W0062	0304	14		24-32-11	ALL
	5		W0062	0305	14		24-32-11	ALL
	6		W0062	0306	16		21-58-13	ALL
	7		W0062	0307	16		21-58-13	ALL
	8		W0062	0308	16		21-58-13	ALL
D40242P		P006-00/ /		PLUG-				001-099
D40242P		P6/ /		PLUG-				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W2240	0003	14		24-32-11	ALL
	4		W2240	0004	14		24-32-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40200

Page 16

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40242P		P006-00/ /		PLUG- (continued)				001-099
D40242P		P6/ /		PLUG- (continued)				115-199
	5		W2240	0005	14		24-32-11	ALL
	6		W2240	0610	16		21-58-13	ALL
	7		W2240	0611	16		21-58-13	ALL
	8		W2240	0612	16		21-58-13	ALL
D40244J		P6/ /		RCPT-				ALL
	1		W0060	0401	12		24-54-73	ALL
	2		W0068	0002	16		24-54-73	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
D40244P		P006-00/ /		PLUG				ALL
	1		W2016	0001	12		24-54-73	ALL
	2		W2016	0002	16		24-54-73	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
D40246J		P6/ /		RCPT-				ALL
	1		W0060	0016	16		34-21-11	ALL
	2	UNUSED						ALL
	3		W0068	0003	24		24-28-11	ALL
	4	UNUSED						ALL
	5		W0060	0201	20		24-11-11	ALL
	6	UNUSED						ALL
	7		W0060	0203	20		24-22-41	ALL
	8	UNUSED						ALL
	9		W0060	0202	20		24-11-21	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40200

Page 17

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40246J		P6/ /		RCPT- (continued)				ALL
	14		W0060	0204	20		24-41-11	ALL
	15		W0074	0045	24		24-33-12	001-099
	15	UNUSED						115-199
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0060	0208	22		24-34-11	ALL
	21		W0074	0221	22		24-34-11	ALL
	22	18	W0060	0206	18		32-35-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26		W0074	0226	22		24-34-11	ALL
	27		W0074	2001R	22		24-34-11	ALL
	28		W0074	2001B	22		24-34-11	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W0074	0713	22		24-51-72	ALL
	32		W0074	0034	22		24-51-72	ALL
D40246P		P006-00/ /		PLUG-				ALL
	1		W2250	0051	14		34-21-11	ALL
	2	UNUSED						ALL
	3		W2250	0001	24		24-28-11	ALL
	4	UNUSED						ALL
	5		W2250	0002	20		24-11-11	ALL
	6	UNUSED						ALL
	7		W2250	0003	20		24-22-41	ALL
	8		W2250	0031	18		SPARE	ALL
	9		W2250	0006	20		24-11-21	ALL
	10		W2250	0017	18		SPARE	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						001-099
	13		W2250	0055	20		SPARE	115-199
	14		W2250	0007	20		24-41-11	ALL
	15		W2250	0015	22		24-33-12	001-099
	15		W2250	0015	22		SPARE	115-199
	16	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40200

Page 18

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40246P		P006-00/ /		PLUG- (continued)				ALL
	17	UNUSED						ALL
	18		W2250	0603	20		SPARE	ALL
	19		W2250	0604	20		SPARE	ALL
	20		W2250	0010	24		24-34-11	001-099
	20		W2250	0010	22		24-34-11	115-199
	21		W2250	0011	24		24-34-11	001-099
	21		W2250	0011	22		24-34-11	115-199
	22	18	W2250	0032	18		32-35-11	001-099
	22		W2250	0032	20		32-35-11	115-199
	23	UNUSED						ALL
	24	UNUSED						001-099
	24		W2250	0013	22		SPARE	115-199
	25		W2250	0012	22		SPARE	ALL
	26		W2250	0014	24		24-34-11	001-099
	26		W2250	0014	22		24-34-11	115-199
	27		W2250	2007R	24		24-34-11	001-099
	27		W2250	2007R	22		24-34-11	115-199
	28		W2250	2007B	24		24-34-11	001-099
	28		W2250	2007B	22		24-34-11	115-199
	29	UNUSED						001-099
	29		W2250	0029	20		SPARE	115-199
	30	UNUSED						001-099
	30		W2250	0028	20		SPARE	115-199
	31		W2250	0601	22		24-51-72	001-099
	31		W2250	0601	20		24-51-72	115-199
	32		W2250	0040	22		24-51-72	ALL
D40248J		P006-00/ /		RCPT-				ALL
	1		W0064	0501	16		24-51-22	ALL
	2		W0064	0502	16		24-51-22	ALL
	3		W0064	0503	16		24-51-22	ALL
	4		W0064	0504	16		24-51-21	ALL
	5		W0064	0505	16		24-51-21	ALL
	6		W0064	0506	16		24-51-21	ALL
	7		W0064	0507	12		24-51-52	ALL
	8		W0064	0508	12		24-51-52	ALL
	9		W0064	0509	12		24-51-52	ALL
	10		W0064	0510	14		24-53-21	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40200

Page 19

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40248P		P006-00/ /		PLUG				ALL
	1		W2014	0001	16		24-51-22	ALL
	2		W2014	0002	16		24-51-22	ALL
	3		W2014	0003	16		24-51-22	ALL
	4		W2014	0004	16		24-51-21	ALL
	5		W2014	0005	16		24-51-21	ALL
	6		W2014	0006	16		24-51-21	ALL
	7		W2014	0007	12		24-51-52	ALL
	8		W2014	0008	12		24-51-52	ALL
	9		W2014	0009	12		24-51-52	ALL
	10		W2014	0010	14		24-53-21	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D40249J		P3-3/ /		RCPT				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0033	0031	20		34-12-62	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0033	0041	20		33-13-21	ALL
	9		W0033	0042	20		33-13-21	ALL
	10		W0033	0044	20		34-13-21	ALL
	11		W0033	0046	20		34-12-62	ALL
	12		W0033	0045	20		34-12-62	ALL
	13		W0033	0047	20		34-12-62	ALL
	14		W0033	0048	22		34-12-62	ALL
	15		W0033	0049	22		34-12-62	ALL
	16		W0033	0050	22		22-41-13	ALL
	17		W0033	0051	22		22-41-13	ALL
	18		W0033	0052	22		22-41-13	ALL
	19		W0033	0053	20		22-41-13	ALL
	20		W0033	0068	22		32-42-11	ALL
	21		W0033	0067	22		32-42-11	ALL
	22		W0033	0069	22		34-12-62	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40200

Page 20

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40249P		P3-3/ /		PLUG				001-099
D40249P		P3-1/ /		PLUG				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0003	0006	20		34-12-62	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0003	0115	20		33-13-21	ALL
	9		W0003	0114	20		33-13-21	ALL
	10		W0003	0005	24		34-13-21	ALL
	11		W0003	0003	20		34-12-62	ALL
	12		W0003	0418	22		34-12-62	ALL
	13		W0003	0007	20		34-12-62	ALL
	14		W0003	0416	22		34-12-62	ALL
	15		W0003	0417	22		34-12-62	ALL
	16		W0003	0186	22		22-41-13	ALL
	17		W0003	0185	22		22-41-13	ALL
	18		W0003	0181	22		22-41-13	ALL
	19		W0003	0187	20		22-41-13	ALL
	20		W0003	0274	22		32-42-11	ALL
	21		W0003	0273	22		32-42-11	ALL
	22		W0003	0001	24		34-12-62	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D40250J		P006-00/ /		RCPT-				ALL
	1		W0064	0201	20		30-33-11	ALL
	2		W0064	0202	20		24-53-21	ALL
	3		W0064	0203	14		27-81-11	ALL
	4		W0064	0204	14		27-81-11	ALL
	5		W0064	0510	14		24-53-21	ALL
	6		W0064	0206	14		24-32-11	ALL
	7		W0064	0207	14		24-32-11	ALL
	8		W0064	0208	14		24-32-11	ALL
	9		W0064	0209	14		27-51-11	ALL
	10		W0064	0210	14		27-51-11	ALL
	11		W0064	0211	14		27-51-11	ALL
	12		W0064	0212	14		27-81-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40200

Page 21

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40250P		P006-00/ /		PLUG				ALL
	1		W2244	0043	20		30-33-11	ALL
	2		W2244	0032	20		24-53-21	ALL
	3		W2244	0023	14		27-81-11	ALL
	4		W2244	0024	14		27-81-11	ALL
	5		W2244	0025	14		24-53-21	ALL
	6		W2244	0016	14		24-32-11	ALL
	7		W2244	0017	14		24-32-11	ALL
	8		W2244	0018	14		24-32-11	ALL
	9		W2244	0019	14		27-51-11	ALL
	10		W2244	0020	14		27-51-11	ALL
	11		W2244	0021	14		27-51-11	ALL
	12		W2244	0022	14		27-81-11	ALL
D40255J		E3-3/ /		RCPT				001-099
	1		W1433	5147B	24		31-31-02	001-099
	2		W1433	5147R	24		31-31-02	001-099
	3		W1433	5147Z			31-31-02	001-099
	4		W1433	5146B	24		31-31-02	001-099
	5		W1433	5146R	24		31-31-02	001-099
	6		W1433	5146Z			31-31-02	001-099
	7		W1433	0458	22		31-31-02	001-099
	8		W1433	0455	24		31-31-02	001-099
	9		W1433	3501B	24		31-31-02	001-099
	10		W1433	3501R	24		31-31-02	001-099
	11		W1433	3501Y	24		31-31-02	001-099
	12		W1433	3501Z			31-31-02	001-099
	13		W1433	5148B	24		31-31-02	001-099
	14		W1433	5148R	24		31-31-02	001-099
	15		W1433	5148Z			31-31-02	001-099
	16		W1433	0457	22		31-31-02	001-099
	17	UNUSED						001-099
	18	UNUSED						001-099
	19	UNUSED						001-099
	20	UNUSED						001-099
	21	UNUSED						001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D40200

Page 22

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40255P		E3-3/ /		PLUG				001-099
	1		W2067	2502B	24		31-31-02	001-099
	2		W2067	2502R	24		31-31-02	001-099
	3		W2067	2502Z			31-31-02	001-099
	4		W2067	2501B	24		31-31-02	001-099
	5		W2067	2501R	24		31-31-02	001-099
	6		W2067	2501Z			31-31-02	001-099
	7		W2067	0001	22		31-31-02	001-099
	8		W2067	0005	24		31-31-02	001-099
	9		W2067	3501B	24		31-31-02	001-099
	10		W2067	3501R	24		31-31-02	001-099
	11		W2067	3501Y	24		31-31-02	001-099
	12		W2067	3501Z			31-31-02	001-099
	13		W2067	2503B	24		31-31-02	001-099
	14		W2067	2503R	24		31-31-02	001-099
	15		W2067	2503Z			31-31-02	001-099
	16		W2067	0011	22		31-31-02	001-099
	17	UNUSED						001-099
	18	UNUSED						001-099
	19	UNUSED						001-099
	20	UNUSED						001-099
	21	UNUSED						001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
D40258J		AA1705/ /		286N2818				001-099
D40258J		AA1705/ /		RECP-				115-199
	1	UNUSED						ALL
	2		W2818	0013	20		SPARE	001-099
	2		W4018	0013	20		SPARE	115-199
	3		W2818	0003	22		33-31-31	001-099
	3		W4018	0003	22		33-31-31	115-199
	4		W2818	2501Z			24-21-41	001-099
	4		W4018	2501Z			24-21-41	115-199
	5		W2818	3001R	18		24-21-41	001-099
	5		W4018	3001R	18		24-21-41	115-199
	6		W2818	3001B	18		24-21-41	001-099
	6		W4018	3001B	18		24-21-41	115-199
	7		W2818	3001Y	18		24-21-41	001-099
	7		W4018	3001Y	18		24-21-41	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40200

Page 23

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40258J		AA1705/ /		286N2818 (continued)				001-099
D40258J		AA1705/ /		RECP- (continued)				115-199
	8		W2818	2501R	20		24-21-41	001-099
	8		W4018	2501R	20		24-21-41	115-199
	9		W2818	2501B	20		24-21-41	001-099
	9		W4018	2501B	20		24-21-41	115-199
	10		W2818	4001B	20		24-21-41	001-099
	10		W4018	4001B	20		24-21-41	115-199
	11		W2818	4001G	20		24-21-41	001-099
	11		W4018	4001G	20		24-21-41	115-199
	12		W2818	4001R	20		24-21-41	001-099
	12		W4018	4001R	20		24-21-41	115-199
	13		W2818	4001Y	20		24-21-41	001-099
	13		W4018	4001Y	20		24-21-41	115-199
	14		W2818	0014	20		SPARE	001-099
	14		W4018	0014	20		SPARE	115-199
D40258P		AA1705/ /		286N4018				001-099
D40258P		AA1705/ /		PLUG-				115-199
	1	UNUSED						ALL
	2		W4018	0013	20		SPARE	001-099
	2		W2818	0013	20		SPARE	115-199
	3		W4018	0003	22		33-31-31	001-099
	3		W2818	0003	22		33-31-31	115-199
	4		W4018	2501Z			24-21-41	001-099
	4		W2818	2501Z			24-21-41	115-199
	5		W4018	3001R	18		24-21-41	001-099
	5		W2818	3001R	18		24-21-41	115-199
	6		W4018	3001B	18		24-21-41	001-099
	6		W2818	3001B	18		24-21-41	115-199
	7		W4018	3001Y	18		24-21-41	001-099
	7		W2818	3001Y	18		24-21-41	115-199
	8		W4018	2501R	20		24-21-41	001-099
	8		W2818	2501R	20		24-21-41	115-199
	9		W4018	2501B	20		24-21-41	001-099
	9		W2818	2501B	20		24-21-41	115-199
	10		W4018	4001B	20		24-21-41	001-099
	10		W2818	4001B	20		24-21-41	115-199
	11		W4018	4001G	20		24-21-41	001-099
	11		W2818	4001G	20		24-21-41	115-199
	12		W4018	4001R	20		24-21-41	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40200

Page 24

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40258P		AA1705/ /		286N4018 (continued)				001-099
D40258P		AA1705/ /		PLUG- (continued)				115-199
	12		W2818	4001R	20		24-21-41	115-199
	13		W4018	4001Y	20		24-21-41	001-099
	13		W2818	4001Y	20		24-21-41	115-199
	14		W4018	0014	20		SPARE	001-099
	14		W2818	0014	20		SPARE	115-199
D40266J		AS1123/ /		RCPT				ALL
	1		W3318	2001R	20		78-36-11	ALL
	2		W3318	2001B	20		78-36-11	ALL
	3		W3318	2002R	20		78-36-11	ALL
	4		W3318	2002B	20		78-36-11	ALL
	5		W3318	2003R	20		78-36-11	ALL
	6		W3318	2003B	20		78-36-11	ALL
	7		W3318	2004R	20		78-36-11	ALL
	8		W3318	2004B	20		78-36-11	ALL
	9		W3318	2501R	16		78-34-51	ALL
	10		W3318	2501B	16		78-34-51	ALL
	S/R		W3318	2501Z			78-34-51	ALL
D40266P		AS1123/ /		PLUG				ALL
	1		W3322	2001R	20		78-36-11	ALL
	2		W3322	2001B	20		78-36-11	ALL
	3		W3322	2002R	20		78-36-11	ALL
	4		W3322	2002B	20		78-36-11	ALL
	5		W3322	2003R	20		78-36-11	ALL
	6		W3322	2003B	20		78-36-11	ALL
	7		W3322	2004R	20		78-36-11	ALL
	8		W3322	2004B	20		78-36-11	ALL
	9		W3322	2501R	16		78-34-51	ALL
	10		W3322	2501B	16		78-34-51	ALL
	S/R		W3322	2501Z			78-34-51	ALL
D40268J		AC0880/ /		RCPT				001-099
D40268J		AC0880/190/		RCPT				115-199
	1		W4210	2001R	22		78-36-11	ALL
	2		W4210	2001B	22		78-36-11	ALL
	3		W4210	2002R	22		78-36-11	ALL
	4		W4210	2002B	22		78-36-11	ALL
	5		W4210	2003R	22		78-36-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40200

Page 25

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40268J		AC0880/ /		RCPT (continued)				001-099
D40268J		AC0880/190/		RCPT (continued)				115-199
	6		W4210	2003B	22		78-36-11	ALL
	7		W4210	2004R	22		78-36-11	ALL
	8		W4210	2004B	22		78-36-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	S/R		W4210	YAAC			78-36-11	001-099
	S/R		W4210	YAAE			78-36-11	115-199
D40268P		AC0880/ /		PLUG				ALL
	1		W3322	2001R	20		78-36-11	ALL
	2		W3322	2001B	20		78-36-11	ALL
	3		W3322	2002R	20		78-36-11	ALL
	4		W3322	2002B	20		78-36-11	ALL
	5		W3322	2003R	20		78-36-11	ALL
	6		W3322	2003B	20		78-36-11	ALL
	7		W3322	2004R	20		78-36-11	ALL
	8		W3322	2004B	20		78-36-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	S/R		W3322	YAAA			78-36-11	ALL
D40270J		P71/ /		RCPT				ALL
	1		W1254	0003	22		24-25-11	001-002, 115-199
	1		W1254	0104	22		24-25-11	003-099
	2		W1254	0001	22		24-25-11	001-002, 115-199
	2		W1254	0107	22		24-25-11	003-099
	3		W1254	0056	22		24-25-13	001-002, 115-199
	3		W1254	0113	22		24-25-11	003-099
	4		W1254	0057	22		24-25-13	001-002, 115-199
	4		W1254	0057	24		24-25-13	003-099
	5		W1254	0055	22		24-25-13	001-002, 115-199
	5		W1254	0055	24		24-25-13	003-099
	6		W1254	0058	22		24-25-13	ALL
	7		W1254	0079	22		21-58-15	001-002, 115-199
	7		W1254	0108	22		24-25-11	003-099

HOOKUP LIST

D280N032

91-21-51

Section D40200

Page 26

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40270J		P71/ /		RCPT (continued)				ALL
	8		W1254	0085	22		24-25-11	001-002, 115-199
	8	UNUSED						003-099
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						001-002, 115-199
	15		W1254	0151	24		24-25-13	003-099
	16		W1254	0152	20		24-31-11	003-099
	17	UNUSED						003-099
	18	UNUSED						003-099
	19	UNUSED						003-099
	20	UNUSED						003-099
	21	UNUSED						003-099
	22	UNUSED						003-099
	23	UNUSED						003-099
	24	UNUSED						003-099
D40270P		P071-00/ /		PLUG				ALL
	1		W2348	0001	22		24-25-11	ALL
	2		W2348	0002	22		24-25-11	ALL
	3		W2348	0003	24		24-25-13	001-002, 115-199
	3		W2348	0013	22		24-25-11	003-099
	4		W2348	0004	24		24-25-13	ALL
	5		W2348	0005	24		24-25-13	ALL
	6		W2348	0006	24		24-25-13	ALL
	7		W2348	0007	22		21-58-15	001-002, 115-199
	7		W2348	0026	22		24-25-11	003-099
	8		W2348	0020	22		24-25-11	001-002, 115-199
	8		W2348	0029	20		SPARE	003-099
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						001-002, 115-199
	15		W2348	0038	24		24-25-13	003-099

HOOKUP LIST

D280N032

91-21-51

Section D40200

Page 27

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40270P		P071-00/ /		PLUG (continued)				ALL
	16		W2348	0039	20		24-31-11	003-099
	17	UNUSED						003-099
	18	UNUSED						003-099
	19	UNUSED						003-099
	20	UNUSED						003-099
	21	UNUSED						003-099
	22	UNUSED						003-099
	23	UNUSED						003-099
	24	UNUSED						003-099
D40272J		AS2123/ /		RCPT				ALL
	1		W3416	2001R	20		78-34-21	ALL
	2		W3416	2001B	20		78-34-21	ALL
	3		W3416	2002R	20		78-34-21	ALL
	4		W3416	2002B	20		78-34-21	ALL
	5		W3416	2003R	20		SPARE	ALL
	6		W3416	2003B	20		SPARE	ALL
	7		W3416	0001	18		36-11-21	ALL
D40272P		AS2123/ /		PLUG				ALL
	1		W3420	2001R	20		78-34-21	ALL
	2		W3420	2001B	20		78-34-21	ALL
	3		W3420	2002R	20		78-34-21	ALL
	4		W3420	2002B	20		78-34-21	ALL
	5		W3420	2003R	20		SPARE	ALL
	6		W3420	2003B	20		SPARE	ALL
	7		W3420	0001	20		36-11-21	ALL
D40274J		AD0880/ /		RCPT				ALL
	1		W4236	2001R	22		78-34-21	ALL
	2		W4236	2001B	22		78-34-21	ALL
	3		W4236	2002R	22		78-34-21	ALL
	4		W4236	2002B	22		78-34-21	ALL
	5	UNUSED						001-099
	5		W4236	2003R	20		SPARE	115-199
	6	UNUSED						001-099
	6		W4236	2003B	20		SPARE	115-199
	7		W4236	0231	20		36-11-21	ALL
	8		W4236	0046	22		26-11-22	001-099
	8		W4236	0046	20		26-11-22	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40200

Page 28

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40274J		AD0880/ /		RCPT (continued)				ALL
	9		W4236	0089	20		SPARE	ALL
	10		W4236	0048	22		26-12-21	ALL
	11		W4236	0049	22		26-12-21	ALL
	12		W4236	0047	22		26-11-22	001-099
	12		W4236	0047	20		26-11-22	115-199
	13	UNUSED						ALL
	14	UNUSED						ALL
	S/R		W4236	YAAA			78-34-21	001-099
	S/R		W4236	YAAC			78-34-21	115-199
D40274P		AD0880/ /		PLUG				ALL
	1		W3420	2001R	20		78-34-21	ALL
	2		W3420	2001B	20		78-34-21	ALL
	3		W3420	2002R	20		78-34-21	ALL
	4		W3420	2002B	20		78-34-21	ALL
	5		W3420	2003R	20		SPARE	ALL
	6		W3420	2003B	20		SPARE	ALL
	7		W3420	0001	20		36-11-21	ALL
	8		W3420	0002	20		26-11-22	ALL
	9	UNUSED						ALL
	10		W3420	0005	18		26-12-21	ALL
	11		W3420	0009	18		26-12-21	ALL
	12		W3420	0003	20		26-11-22	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	S/R		W3420	YAAA			78-34-21	ALL
D40278J		AS2123/ /		RCPT				ALL
	1		W3418	2001R	20		78-36-21	ALL
	2		W3418	2001B	20		78-36-21	ALL
	3		W3418	2002R	20		78-36-21	ALL
	4		W3418	2002B	20		78-36-21	ALL
	5		W3418	2003R	20		78-36-21	ALL
	6		W3418	2003B	20		78-36-21	ALL
	7		W3418	2004R	20		78-36-21	ALL
	8		W3418	2004B	20		78-36-21	ALL
	9		W3418	2501R	16		78-34-61	ALL
	10		W3418	2501B	16		78-34-61	ALL
	S/R		W3418	2501Z			78-34-61	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40200

Page 29

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40278P		AS2123/ /		PLUG				ALL
	1		W3422	2001R	20		78-36-21	ALL
	2		W3422	2001B	20		78-36-21	ALL
	3		W3422	2002R	20		78-36-21	ALL
	4		W3422	2002B	20		78-36-21	ALL
	5		W3422	2003R	20		78-36-21	ALL
	6		W3422	2003B	20		78-36-21	ALL
	7		W3422	2004R	20		78-36-21	ALL
	8		W3422	2004B	20		78-36-21	ALL
	9		W3422	2501R	16		78-34-61	ALL
	10		W3422	2501B	16		78-34-61	ALL
	S/R		W3422	2501Z			78-34-61	ALL
D40280J		AD0880/ /		RCPT				ALL
	1		W4220	2001R	22		78-36-21	ALL
	2		W4220	2001B	22		78-36-21	ALL
	3		W4220	2002R	22		78-36-21	ALL
	4		W4220	2002B	22		78-36-21	ALL
	5		W4220	2003R	22		78-36-21	ALL
	6		W4220	2003B	22		78-36-21	ALL
	7		W4220	2004R	22		78-36-21	ALL
	8		W4220	2004B	22		78-36-21	ALL
	9	UNUSED						001-099
	9		W4220	2005R	20		SPARE	115-199
	10	UNUSED						001-099
	10		W4220	2005B	20		SPARE	115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	S/R		W4220	YAAD			78-36-21	001-099
	S/R		W4220	YAAC			78-36-21	115-199
D40280P		AD0880/ /		PLUG				ALL
	1		W3422	2001R	20		78-36-21	ALL
	2		W3422	2001B	20		78-36-21	ALL
	3		W3422	2002R	20		78-36-21	ALL
	4		W3422	2002B	20		78-36-21	ALL
	5		W3422	2003R	20		78-36-21	ALL
	6		W3422	2003B	20		78-36-21	ALL
	7		W3422	2004R	20		78-36-21	ALL
	8		W3422	2004B	20		78-36-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40200

Page 30

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40280P		AD0880/ /		PLUG (continued)				ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	S/R		W3422	YAAA			78-36-21	ALL
D40281J		P1-1/ /		RCPT-				ALL
	1		W0017	0016	24		34-22-91	001-099
	1		W0017	0016	24		34-22-93	115-199
	2	UNUSED						ALL
	3		W0017	0062	24		34-61-25	001-099
	3	UNUSED						115-199
	4		W0017	0063	24		34-61-25	001-099
	4	UNUSED						115-199
	5		W0017	0014	24		34-22-37	ALL
	6		W0017	0015	20		34-22-37	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0017	0012	24		34-22-38	001-099
	12		W0017	0012	24		34-22-37	115-199
	13		W0017	0013	24		34-22-38	001-099
	13		W0017	0013	24		34-22-37	115-199
	14		W0017	0017	20		34-22-91	001-099
	14		W0017	0017	20		34-22-93	115-199
	15		W0017	0039	22		22-41-13	ALL
	16		W0017	0040	22		22-41-13	ALL
	17		W0017	0041	22		22-41-13	ALL
	18		W0017	0042	22		22-41-13	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W0017	0064	24		34-22-38	001-099
	24		W0017	0064	24		34-22-37	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40200

Page 31

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40281P		P1-1-MO/D/		PLUG				001-099
D40281P		P1-1/MO-/D		PLUG				115-199
	1		W0001	0419	24		34-22-91	001-099
	1		W0001	0419	24		34-22-93	115-199
	2	UNUSED						ALL
	3		W0001	0161	22		34-61-25	001-099
	3	UNUSED						115-199
	4		W0001	0162	22		34-61-25	001-099
	4	UNUSED						115-199
	5		W0001	0214	24		34-22-37	ALL
	6		W0001	0219	20		34-22-37	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0001	0212	24		34-22-37	ALL
	13		W0001	0213	24		34-22-37	ALL
	14		W0001	0418	20		34-22-91	001-099
	14		W0001	0418	20		34-22-93	115-199
	15		W0001	0187	22		22-41-13	ALL
	16		W0001	0186	22		22-41-13	ALL
	17		W0001	0185	22		22-41-13	ALL
	18		W0001	0181	20		22-41-13	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W0001	0564	24		34-22-37	ALL
D40282J		P006-00/ /		RCPT-				ALL
	1		W0074	0401	20		24-31-11	ALL
	2		W0074	0402	20		24-31-11	ALL
	3		W0074	0403	20		24-31-11	ALL
	4		W0074	0404	22		24-31-11	ALL
	5		W0074	0405	22		24-34-11	ALL
	6		W0074	0406	22		24-31-11	ALL
	7		W0074	0407	22		24-34-11	ALL
	8		W0074	0408	22		24-31-11	ALL
	9		W0074	0409	22		24-34-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40200

Page 32

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40282J		P006-00/ /		RCPT- (continued)				ALL
	10		W0074	2001R	22		24-34-11	ALL
	11		W0074	2001B	22		24-34-11	ALL
	12	UNUSED						ALL
D40282P D40282P		P006-00/ / P6/ /		PLUG PLUG				001-099 115-199
	1		W2034	0001	20		24-31-11	ALL
	2		W2034	0002	20		24-31-11	ALL
	3		W2034	0003	20		24-31-11	ALL
	4		W2034	0004	20		24-31-11	ALL
	5		W2034	0005	22		24-34-11	ALL
	6		W2034	0006	24		24-31-11	ALL
	7		W2034	0014	22		24-34-11	ALL
	8		W2034	0015	22		24-31-11	ALL
	9		W2034	0016	22		24-34-11	ALL
	10		W2034	2001R	22		24-34-11	ALL
	11		W2034	2001B	22		24-34-11	ALL
	12	UNUSED						ALL
D40284J		P006-00/ /		RCPT-				ALL
	1		W0072	4001R	24		24-23-11	ALL
	2		W0072	4001Y	24		24-23-11	ALL
	3		W0072	4001B	24		24-23-11	ALL
	4		W0072	4001G	24		24-23-11	ALL
	5	16	W0072	0018	16		78-34-51	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D40284P D40284P		P006-00/ / P6/ /		PLUG- PLUG-				001-099 115-199
	1		W2240	4001R	24		24-23-11	ALL
	2		W2240	4001Y	24		24-23-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40200

Page 33

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40284P		P006-00/ /		PLUG- (continued)				001-099
D40284P		P6/ /		PLUG- (continued)				115-199
	3		W2240	4001B	24		24-23-11	ALL
	4		W2240	4001G	24		24-23-11	ALL
	5	16	W2240	0001	16		78-34-51	ALL
	6	UNUSED						001-099
	6		W2240	0602	22		SPARE	115-199
	7	UNUSED						001-099
	7		W2240	0603	22		SPARE	115-199
	8	UNUSED						001-099
	8		W2240	0604	22		SPARE	115-199
	9	UNUSED						001-099
	9		W2240	0605	22		SPARE	115-199
	10		W2240	0606	20		SPARE	ALL
	11	UNUSED						001-099
	11		W2240	0607	20		SPARE	115-199
	12	UNUSED						001-099
	12		W2240	0608	20		SPARE	115-199
	13	UNUSED						001-099
	13		W2240	0609	20		SPARE	115-199
	14	UNUSED						ALL
	15	UNUSED						ALL
	CAP	Y	W2240	0601	22		SPARE	001-002, 115-199
D40286J		P006-00/ /		RCPT-				ALL
	1		W0074	4004R	24		24-23-11	ALL
	2		W0074	4004Y	24		24-23-11	ALL
	3		W0074	4004B	24		24-23-11	ALL
	4		W0074	4004G	24		24-23-11	ALL
	5	16	W0072	0021	16		78-34-61	ALL
	6	UNUSED						ALL
	7		W0072	0007	22		24-34-11	ALL
	8		W0070	0008	22		24-34-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0070	0011	22		24-32-41	ALL
	12		W0074	0065	22		24-34-11	ALL
D40286P		P006-00/ /		PLUG-				ALL
	1		W2244	4004R	24		24-23-11	ALL
	2		W2244	4004Y	24		24-23-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40200

Page 34

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40286P		P006-00/ /		PLUG- (continued)				ALL
	3		W2244	4004B	24		24-23-11	ALL
	4		W2244	4004G	24		24-23-11	ALL
	5	16	W2244	0003	16		78-34-61	ALL
	6		W2244	0002	22		SPARE	ALL
	7		W2244	0007	24		24-34-11	001-099
	7		W2244	0007	22		24-34-11	115-199
	8		W2244	0008	24		24-34-11	001-099
	8		W2244	0008	22		24-34-11	115-199
	9		W2244	0009	22		SPARE	ALL
	10		W2244	0010	22		SPARE	ALL
	11		W2244	0257	22		24-32-41	ALL
	12		W2244	0014	24		24-34-11	001-099
	12		W2244	0014	22		24-34-11	115-199
	CAP	Y	W2244	0001	22		SPARE	001-002, 115-199
D40288J		AC0880/ /		RCPT-				001-099
D40288J		ACO 880/ /		RCPT				115-199
	1		W4300	2502R	20		24-11-11	ALL
	2		W4300	2502B	20		24-11-11	ALL
	3		W4300	4001G	24		24-21-11	ALL
	4	16	W4300	0002	16		24-11-11	ALL
	5		W4300	2502Z			24-11-11	ALL
	6		W4300	2002R	20		24-11-11	ALL
	7		W4300	2002B	20		24-11-11	ALL
	8		W4300	0001	20		24-11-11	ALL
	9		W4300	2501R	20		24-21-11	ALL
	10		W4300	2501B	20		24-21-11	ALL
	11		W4300	2501Z			24-21-11	ALL
	12		W4300	4001R	24		24-21-11	ALL
	13		W4300	4001B	24		24-21-11	ALL
	14		W4300	4001Y	24		24-21-11	ALL
	15	18	W4300	3001R	18		24-21-11	ALL
	16	18	W4300	3001B	18		24-21-11	ALL
	17	18	W4300	3001Y	18		24-21-11	ALL
	18		W4300	2001R	20		24-11-11	ALL
	19		W4300	2001B	20		24-11-11	ALL
	20	UNUSED						ALL
	21		W4300	2003B	20		SPARE	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40200

Page 35

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40288J		AC0880/ /		RCPT- (continued)				001-099
D40288J		ACO 880/ /		RCPT (continued)				115-199
	24	UNUSED						ALL
	25	UNUSED						ALL
	26		W4300	2003R	20		SPARE	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W4300	0602	20		SPARE	ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W4300	0603	20		SPARE	ALL
	39	UNUSED						ALL
	S/R		W4300	YAAA			24-11-11	ALL
D40288P		AC0880/ /		PLUG-				ALL
	1		W3314	2502R	20		24-11-11	ALL
	2		W3314	2502B	20		24-11-11	ALL
	3		W3314	4001G	20		24-21-11	ALL
	4	16	W3314	0002	16		24-11-11	ALL
	5		W3314	2502Z			24-11-11	ALL
	6		W3314	2002R	20		24-11-11	ALL
	7		W3314	2002B	20		24-11-11	ALL
	8		W3314	0001	20		24-11-11	ALL
	9		W3314	2501R	20		24-21-11	ALL
	10		W3314	2501B	20		24-21-11	ALL
	11		W3314	2501Z			24-21-11	ALL
	12		W3314	4001R	20		24-21-11	ALL
	13		W3314	4001B	20		24-21-11	ALL
	14		W3314	4001Y	20		24-21-11	ALL
	15	18	W3314	3001R	18		24-21-11	ALL
	16	18	W3314	3001B	18		24-21-11	ALL
	17	18	W3314	3001Y	18		24-21-11	ALL
	18		W3314	2001R	20		24-11-11	ALL
	19		W3314	2001B	20		24-11-11	ALL
	20	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40200

Page 36

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40288P		AC0880/ /		PLUG- (continued)				ALL
	21	UNUSED						ALL
	22		W3314	2003B	20		SPARE	ALL
	23		W3314	2003R	20		SPARE	ALL
	24	UNUSED						ALL
	25		W3314	0006	20		SPARE	ALL
	26		W3314	0007	20		SPARE	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	S/R		W3314	YAAA			24-11-11	ALL
D40290J		AD0880/ /		RCPT-				ALL
	1		W4302	2502B	20		24-11-21	ALL
	2		W4302	2502R	20		24-11-21	ALL
	3		W4302	4001G	24		24-21-21	ALL
	4		W4302	0002	16		24-11-21	ALL
	5		W4302	2502Z			24-11-21	ALL
	6		W4302	2002B	20		24-11-21	ALL
	7		W4302	2002R	20		24-11-21	ALL
	8		W4302	0001	20		24-11-21	ALL
	9		W4302	2501R	20		24-21-21	ALL
	10		W4302	2501B	20		24-21-21	ALL
	11		W4302	2501Z			24-21-21	ALL
	12		W4302	4001R	24		24-21-21	ALL
	13		W4302	4001B	24		24-21-21	ALL
	14		W4302	4001Y	24		24-21-21	ALL
	15		W4302	3001R	18		24-21-21	ALL
	16		W4302	3001B	18		24-21-21	ALL
	17		W4302	3001Y	18		24-21-21	ALL
	18		W4302	2001B	20		24-11-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40200

Page 37

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40290J		AD0880/ /		RCPT- (continued)				ALL
	19		W4302	2001R	20		24-11-21	ALL
	20	UNUSED						ALL
	21		W4302	2003B	20		SPARE	ALL
	22	UNUSED						ALL
	23		W4302	2003R	20		SPARE	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W4302	0004	20		SPARE	ALL
	30		W4302	0005	20		SPARE	ALL
	S/R		W4302	YAAA			24-11-21	ALL
D40290P		AD0880/ /		PLUG				ALL
	1		W3414	2502B	20		24-11-21	ALL
	2		W3414	2502R	20		24-11-21	ALL
	3		W3414	4001G	20		24-21-21	ALL
	4		W3414	0002	16		24-11-21	ALL
	5		W3414	2502Z			24-11-21	ALL
	6		W3414	2002B	20		24-11-21	ALL
	7		W3414	2002R	20		24-11-21	ALL
	8		W3414	0001	20		24-11-21	ALL
	9		W3414	2501R	20		24-21-21	ALL
	10		W3414	2501B	20		24-21-21	ALL
	11		W3414	2501Z			24-21-21	ALL
	12		W3414	4001R	20		24-21-21	ALL
	13		W3414	4001B	20		24-21-21	ALL
	14		W3414	4001Y	20		24-21-21	ALL
	15		W3414	3001R	18		24-21-21	ALL
	16		W3414	3001B	18		24-21-21	ALL
	17		W3414	3001Y	18		24-21-21	ALL
	18		W3414	2001B	20		24-11-21	ALL
	19		W3414	2001R	20		24-11-21	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W3414	2003B	20		SPARE	ALL
	23		W3414	2003R	20		SPARE	ALL
	24	UNUSED						ALL
	25		W3414	0006	20		SPARE	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40200

Page 38

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40290P		AD0880/ /		PLUG (continued)				ALL
	26		W3414	0007	20		SPARE	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	S/R		W3414	YAAA			24-11-21	ALL
D40292J		P036-00/ /		RCPT				001-099
D40292J		P36/ /		RCPT				115-199
	1		W1260	0875	22		24-25-11	001-002, 115-199
	1		W1260	0877	22		24-25-11	003-099
	2		W1260	0878	22		24-25-11	ALL
	3		W1260	0871	24		24-25-13	001-002, 115-199
	3	UNUSED						003-099
	4		W1260	0872	24		24-25-13	ALL
	5		W1260	0873	24		24-25-13	ALL
	6		W1260	0874	24		24-25-13	ALL
	7		W1260	0866	22		21-58-15	001-002, 115-199
	7	UNUSED						003-099
	8		W1260	0980	22		24-25-11	001-002, 115-199
	8	UNUSED						003-099
	9	UNUSED						ALL
	10	UNUSED						001-002, 115-199
	10		W1260	6379	24		24-25-13	003-099
	11	UNUSED						001-002, 115-199
	11		W1260	8095	20		24-31-11	003-099
	12	UNUSED						001-002, 115-199
	12		W1260	6381	22		24-25-11	003-099
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W1260	6195	22		24-25-11	003-099
	17	UNUSED						003-099
	18	UNUSED						003-099
	19	UNUSED						003-099
	20	UNUSED						003-099
	21	UNUSED						003-099
	22	UNUSED						003-099
	23	UNUSED						003-099
	24	UNUSED						003-099

HOOKUP LIST

D280N032

91-21-51

Section D40200

Page 39

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40292P		P036-00/ /		PLUG				ALL
	1		W2348	0001	22		24-25-11	ALL
	2		W2348	0002	22		24-25-11	ALL
	3		W2348	0003	24		24-25-13	001-002, 115-199
	3	UNUSED						003-099
	4		W2348	0004	24		24-25-13	ALL
	5		W2348	0005	24		24-25-13	ALL
	6		W2348	0006	24		24-25-13	ALL
	7		W2348	0007	22		21-58-15	001-002, 115-199
	7	UNUSED						003-099
	8		W2348	0020	22		24-25-11	001-002, 115-199
	8	UNUSED						003-099
	9	UNUSED						ALL
	10	UNUSED						001-002, 115-199
	10		W2348	0038	24		24-25-13	003-099
	11	UNUSED						001-002, 115-199
	11		W2348	0039	20		24-31-11	003-099
	12	UNUSED						001-002, 115-199
	12		W2348	0013	22		24-25-11	003-099
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W2348	0026	22		24-25-11	003-099
	17		W2348	0029	20		SPARE	003-099
	18	UNUSED						003-099
	19	UNUSED						003-099
	20	UNUSED						003-099
	21	UNUSED						003-099
	22	UNUSED						003-099
	23	UNUSED						003-099
	24	UNUSED						003-099
D40294J		P006-00/ /		RCPT-				115-199
	1		W0064	0301	16		21-58-13	115-199
	2		W0064	0302	16		21-58-13	115-199
	3		W0064	0303	16		21-58-13	115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
	8	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D40200

Page 40

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40294P		P006-00/ /		PLUG				115-199
	1		W2244	0066	16		21-58-13	115-199
	2		W2244	0067	16		21-58-13	115-199
	3		W2244	0068	16		21-58-13	115-199
	4		W2244	0601	14		SPARE	115-199
	5		W2244	0602	14		SPARE	115-199
	6		W2244	0603	14		SPARE	115-199
	7	UNUSED						115-199
	8	UNUSED						115-199
D40296J		P006-00/ /		RCPT-				ALL
	1		W0060	0306	22		24-33-11	ALL
	2		W0074	0301	22		24-33-11	ALL
	3		W0074	0308	22		24-33-11	ALL
	4		W0074	0303	22		24-33-11	ALL
	5		W0074	0305	22		24-33-11	ALL
	6		W0074	0304	22		24-33-11	ALL
	7		W0074	0306	22		24-31-11	ALL
	8		W0074	0307	22		24-34-11	ALL
	9		W0060	0211	20		26-21-11	ALL
	10		W0060	0105	20		26-21-11	ALL
	11		W0074	0715	22		24-51-72	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0060	0403	20		26-21-11	ALL
	15		W0060	0404	20		26-21-11	ALL
	16		W0060	0121	20		26-23-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0060	0301	16		24-11-11	ALL
	22		W0060	0305	22		31-25-11	ALL
	23		W0060	0303	16		24-11-21	ALL
	24		W0060	0304	22		31-25-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	18	W0074	0302	18		24-33-11	ALL
	29		W0074	0033	22		24-51-72	ALL
	30		W0060	0007	22		24-34-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40200

Page 41

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40296J		P006-00/ /		RCPT- (continued)				ALL
	31	UNUSED						ALL
	32		W0074	0062	22		24-33-11	ALL
	33		W0074	0061	22		24-33-11	ALL
	34		W0074	0059	22		24-33-11	ALL
	35		W0074	0225	22		24-34-11	ALL
	36		W0060	0103	22		28-25-21	ALL
	37		W0060	0213	20		26-22-21	001-099
	37	UNUSED						115-199
	38		W0074	0068	22		24-31-11	001-002, 115-199
	38		W0074	0085	24		24-25-11	003-099
	39		W0060	0027	24		21-58-12	ALL
D40296P		P006-00/ /		PLUG				ALL
	1		W2078	0151	24		24-33-11	001-099
	1		W2078	0151	22		24-33-11	115-199
	2		W2078	0152	24		24-33-11	001-099
	2		W2078	0152	22		24-33-11	115-199
	3		W2078	0153	24		24-33-11	001-099
	3		W2078	0153	22		24-33-11	115-199
	4		W2078	0155	24		24-33-11	001-099
	4		W2078	0155	22		24-33-11	115-199
	5		W2078	0157	24		24-33-11	001-099
	5		W2078	0157	22		24-33-11	115-199
	6		W2078	0156	24		24-33-11	001-099
	6		W2078	0156	22		24-33-11	115-199
	7		W2078	0150	22		24-31-11	ALL
	8		W2078	0275	22		24-34-11	ALL
	9		W2078	0096	20		26-21-11	ALL
	10		W2078	0097	20		26-21-11	ALL
	11		W2078	0800	22		24-51-72	ALL
	12	18	W2078	0172	18		SPARE	ALL
	13		W2078	0373	20		SPARE	ALL
	14		W2078	0285	20		26-21-11	ALL
	15		W2078	0286	20		26-21-11	ALL
	16		W2078	0291	20		26-23-11	ALL
	17		W2078	0374	20		SPARE	ALL
	18	UNUSED						001-099
	18		W2078	0375	20		SPARE	115-199
	19	UNUSED						001-099
	19		W2078	0376	20		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40200

Page 42

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40296P		P006-00/ /		PLUG (continued)				ALL
	20		W2078	0395	20		SPARE	ALL
	21		W2078	0147	16		24-11-11	ALL
	22		W2078	0112	22		31-25-11	ALL
	23		W2078	0148	16		24-11-21	ALL
	24		W2078	0073	22		31-25-11	ALL
	25		W2078	0397	20		SPARE	ALL
	26	UNUSED						001-099
	26		W2078	0416	20		SPARE	115-199
	27	UNUSED						001-099
	27		W2078	0417	20		SPARE	115-199
	28	18	W2078	0154	18		24-33-11	ALL
	29		W2078	0316	22		24-51-72	ALL
	30		W2078	0422	22		24-34-11	ALL
	31	UNUSED						001-099
	31		W2078	0357	20		SPARE	115-199
	32		W2078	0519	24		24-33-11	001-099
	32		W2078	0519	22		24-33-11	115-199
	33		W2078	0520	24		24-33-11	001-099
	33		W2078	0520	22		24-33-11	115-199
	34		W2078	0064	24		24-33-11	ALL
	35		W2078	0348	24		24-34-11	ALL
	36		W2078	0188	22		28-25-21	ALL
	37		W2078	0283	20		26-22-21	001-099
	37	UNUSED						115-199
	38		W2078	0436	24		24-31-11	001-002, 115-199
	38		W2078	0436	24		24-25-11	003-099
	39		W2078	0181	24		21-58-12	ALL
D40298J		P006-00/ /		RCPT-				ALL
	1		W0074	0601	24		24-51-31	001-099
	1		W0074	0601	22		24-51-31	115-199
	2		W0074	0602	22		24-51-31	ALL
	3		W0074	0603	18		24-51-31	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D40298P		P006-00/ /		PLUG-				ALL
	1		W2010	0001	24		24-51-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40200

Page 43

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40298P		P006-00/ /		PLUG- (continued)				ALL
	2		W2010	0002	22		24-51-31	ALL
	3		W2010	0003	18		24-51-31	ALL
	4		W2010	0004	18		SPARE	ALL
	5		W2010	0005	16		SPARE	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40200

Page 44 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40300J		P006-00/ /		RCPT-				ALL
	1		W0074	0701	22		22-11-32	ALL
	2		W0074	0702	22		22-11-32	ALL
	3		W0074	0703	24		24-51-31	001-099
	3		W0074	0703	22		24-51-31	115-199
	4		W0074	0704	24		24-51-31	001-099
	4		W0074	0704	22		24-51-31	115-199
	5		W0074	0705	24		24-51-31	001-099
	5		W0074	0705	22		24-51-31	115-199
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D40300P		P006-00/ /		PLUG-				ALL
	1		W2370	0001	22		22-11-32	ALL
	2		W2370	0002	22		22-11-32	ALL
	3		W2370	0006	24		24-51-31	ALL
	4		W2370	0004	24		24-51-31	ALL
	5		W2370	0005	24		24-51-31	ALL
	6	UNUSED						ALL
	7		W2370	0101	22		SPARE	ALL
	8		W2370	0102	22		SPARE	ALL
	9	UNUSED						001-099
	9		W2370	0103	22		SPARE	115-199
	10	UNUSED						001-099
	10		W2370	0104	22		SPARE	115-199
	11	UNUSED						001-099
	11		W2370	0105	22		SPARE	115-199
	12	UNUSED						ALL
D40302J		880/ /		RCPT				001-099
D40302J		AC0880/ /		RCPT				115-199
	1	UNUSED						ALL
	2		W4204	0037	20		33-43-11	ALL
	3		W4204	0034	20		33-42-11	ALL
	4		W4204	0035	20		33-42-11	ALL
	5		W4204	0038	20		33-44-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40302J		880/ /		RCPT (continued)				001-099
D40302J		AC0880/ /		RCPT (continued)				115-199
	6	UNUSED						001-099
	6		W4204	0050	22		SPARE	115-199
	7	UNUSED						001-099
	7		W4204	0051	22		SPARE	115-199
	8		W4204	0192	22		SPARE	001-099
	8	UNUSED						115-199
	9		W4204	0193	22		SPARE	001-099
	9	UNUSED						115-199
	10		W4204	0011	22		SPARE	001-099
	10	UNUSED						115-199
	11	UNUSED						ALL
	12		W4204	0039	22		27-81-31	ALL
	13		W4204	2005B	22		27-51-41	ALL
	14		W4204	2005R	22		27-51-41	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W4204	4001B	22		27-51-41	ALL
	19		W4204	4001G	22		27-51-41	ALL
	20		W4204	4001R	22		27-51-41	ALL
	21		W4204	4001Y	22		27-51-41	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40302J		880/ /		RCPT (continued)				001-099
D40302J		AC0880/ /		RCPT (continued)				115-199
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	S/R		W4204	YAAA			27-51-41	001-099
	S/R		W4204	YAAA			33-42-11	115-199
D40302P		AC0880/ /		PLUG-				ALL
	1	UNUSED						ALL
	2		W3346	0001	20		33-43-11	ALL
	3		W3346	2501B	20		33-42-11	ALL
	4		W3346	2501R	20		33-42-11	ALL
	5		W3346	0005	20		33-44-21	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W3346	1004	20		27-81-31	ALL
	13		W3346	2001B	20		27-51-41	ALL
	14		W3346	2001R	20		27-51-41	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W3346	4001B	20		27-51-41	ALL
	19		W3346	4001G	20		27-51-41	ALL
	20		W3346	4001R	20		27-51-41	ALL
	21		W3346	4001Y	20		27-51-41	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40302P		AC0880/ /		PLUG- (continued)				ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	S/R		W3346	1004Z			27-81-31	ALL
	S/R		W3346	2501Z			33-42-11	ALL
	S/R		W3346	YAAA			33-43-11	ALL
D40304J		AW1333/ /		RCPT-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W3326	2511R	20		27-51-61	ALL
	4		W3326	2511B	20		27-51-61	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	S/R		W3326	2511Z			27-51-61	ALL
D40304P		AW1333/ /		PLUG-				ALL
	1		W3342	0027	20		SPARE	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 4

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40304P		AW1333/ /		PLUG- (continued)				ALL
	2		W3342	0028	20		SPARE	ALL
	3		W3342	2002R	20		27-51-61	ALL
	4		W3342	2002B	20		27-51-61	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W3342	0035	20		SPARE	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
D40310J		P36/ /		RCPT				ALL
	1		W1260	0062	16		33-24-11	ALL
	2		W1260	0063	22		33-25-11	001-099
	2	UNUSED						115-199
	3		W1260	6147	22		23-31-41	ALL
	4	UNUSED						ALL
	5		W1260	0065	22		33-25-11	ALL
	6	UNUSED						ALL
	7		W1260	0061	22		33-24-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W1260	2003B	22		23-31-21	ALL
	14		W1260	2003R	22		23-31-21	ALL
	15		W1260	0018	22		23-31-41	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 5

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40310J		P36/ /		RCPT (continued)				ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W1260	0016	22		23-31-41	ALL
	26		W1260	0017	22		23-31-41	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W1260	0078	16		35-21-13	ALL
	30	UNUSED						ALL
	31		W1260	0057	20		33-23-11	ALL
	32		W1260	0058	20		33-23-12	ALL
	33		W1260	0059	20		33-23-13	ALL
	34		W1260	0060	20		33-23-14	ALL
	35		W1260	0066	22		33-25-13	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39		W1260	0077	16		35-21-12	ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
D40310P		P36/ /		PLUG-				001-099
D40310P		P036/ /		PLUG-				115-199
	1		W3702	0801	16		33-24-12	ALL
	2		W3702	0802	22		33-25-11	001-099
	2	UNUSED						115-199
	3		W3702	0800	22		23-31-41	ALL
	4	UNUSED						ALL
	5		W3702	0805	22		33-25-11	ALL
	6	UNUSED						ALL
	7		W3702	0807	20		33-24-12	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W3702	0911	20		SPARE	ALL
	12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 6

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40310P		P36/ /		PLUG- (continued)				001-099
D40310P		P036/ /		PLUG- (continued)				115-199
	13		W3702	2413B	22		23-31-21	ALL
	14		W3702	2413R	22		23-31-21	ALL
	15		W3702	0845	22		23-31-41	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W3702	0822	16		SPARE	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W3702	0825	22		23-31-41	ALL
	26		W3702	0826	22		23-31-41	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W3702	0829	16		35-21-13	ALL
	30	UNUSED						ALL
	31		W3702	0851	20		33-23-11	ALL
	32		W3702	0862	20		33-23-12	ALL
	33		W3702	0833	20		33-23-13	ALL
	34		W3702	0834	20		33-23-14	ALL
	35		W3702	0835	22		33-25-13	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39		W3702	0809	16		35-21-12	ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
D40312J		923/277/L056		RCPT-				ALL
	1		W3702	0811	16		33-24-12	ALL
	2		W3702	0812	22		33-25-12	ALL
	3		W3702	0813	22		33-25-12	ALL
	4		W3702	0814	22		33-25-12	ALL
	5		W3702	0815	22		33-25-12	ALL
	6	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 7

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40312J		923/277/L056		RCPT- (continued)				ALL
	7		W3702	0817	20		33-24-12	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						001-099
	10		W3702	0911	20		SPARE	115-199
	11		W3702	0911	20		SPARE	001-099
	11		W3702	0919	22		33-25-12	115-199
	12		W3702	0800	22		23-31-41	ALL
	13		W3702	2423R	22		23-31-22	001-099
	13		W3702	2423B	22		23-31-22	115-199
	14		W3702	2423B	22		23-31-22	001-099
	14		W3702	2423R	22		23-31-22	115-199
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						001-099
	19		W3702	0966	22		33-25-12	115-199
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W3702	0822	16		SPARE	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26		W3702	0826	22		23-31-41	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W3702	0829	16		35-21-13	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33		W3702	0833	20		33-23-13	ALL
	34		W3702	0834	20		33-23-14	ALL
	35		W3702	0835	22		33-25-13	ALL
	36		W3702	0836	16		33-23-12	ALL
	37	UNUSED						ALL
	38		W3702	0838	16		33-23-12	ALL
	39		W3702	0839	16		35-21-12	ALL
	40		W3702	0840	18		35-21-12	ALL
	41	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 8

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40312J		923/277/L056		RCPT- (continued)				ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
D40312P		925/272/L056		PLUG-				ALL
	1		W3704	0811	16		33-24-13	ALL
	2		W3704	0812	22		33-25-12	ALL
	3		W3704	0813	22		33-25-12	ALL
	4		W3704	0814	22		33-25-12	ALL
	5		W3704	0815	22		33-25-12	ALL
	6	UNUSED						ALL
	7		W3704	0817	20		33-24-13	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						001-099
	10		W3704	0911	20		SPARE	115-199
	11		W3704	0911	20		SPARE	001-099
	11		W3704	0919	22		33-25-12	115-199
	12		W3704	0800	22		23-31-41	ALL
	13		W3704	2423R	22		23-31-22	001-099
	13		W3704	2423B	22		23-31-22	115-199
	14		W3704	2423B	22		23-31-22	001-099
	14		W3704	2423R	22		23-31-22	115-199
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						001-099
	19		W3704	0965	22		33-25-12	115-199
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W3704	0822	16		SPARE	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26		W3704	0826	22		23-31-41	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W3704	0829	16		35-21-13	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 9

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40312P		925/272/L056		PLUG- (continued)				ALL
	32	UNUSED						ALL
	33		W3704	0833	20		33-23-13	ALL
	34		W3704	0834	20		33-23-14	ALL
	35		W3704	0835	22		33-25-13	ALL
	36		W3704	0836	16		33-23-12	ALL
	37	UNUSED						ALL
	38		W3704	0838	16		33-23-12	ALL
	39		W3704	0839	16		35-21-12	ALL
	40		W3704	0840	18		35-21-12	ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
D40314J		1217/276/L055		RCPT-				ALL
	1		W3704	0801	16		33-24-13	ALL
	2		W3704	0802	22		33-25-13	ALL
	3		W3704	0803	22		33-25-13	ALL
	4		W3704	0834	20		33-23-14	ALL
	5		W3704	0805	22		33-25-13	ALL
	6		W3704	0806	16		33-23-13	ALL
	7		W3704	0807	20		33-24-13	ALL
	8		W3704	0808	16		33-23-13	ALL
	9		W3704	0809	16		35-21-13	ALL
	10		W3704	0810	18		35-21-13	ALL
	11		W3704	0911	20		SPARE	ALL
	12		W3704	0800	22		23-31-41	ALL
	13		W3704	2413R	22		23-31-22	001-099
	13		W3704	2413B	22		23-31-22	115-199
	14		W3704	2413B	22		23-31-22	001-099
	14		W3704	2413R	22		23-31-22	115-199
	15	UNUSED						ALL
	16		W3704	0826	22		23-31-41	ALL
	17	UNUSED						ALL
	18	UNUSED						001-099
	18		W3704	0822	16		SPARE	115-199
	19		W3704	0822	16		SPARE	001-099
	19		W3704	0965	22		33-25-12	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 10

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40314P		1217/*/*		PLUG-				001-099
D40314P		1210/292/L55		PLUG-				115-199
	1		W3706	0801	16		33-24-14	ALL
	2		W3706	0802	22		33-25-14	ALL
	3		W3706	0803	22		33-25-14	ALL
	4		W3706	0824	20		33-23-14	ALL
	5		W3706	0805	22		33-25-14	ALL
	6		W3706	0806	16		33-23-13	ALL
	7		W3706	0807	20		33-24-14	ALL
	8		W3706	0808	16		33-23-13	ALL
	9		W3706	0809	16		35-21-13	ALL
	10		W3706	0810	18		35-21-13	ALL
	11	UNUSED						ALL
	12		W3706	0800	22		23-31-41	ALL
	13		W3706	2413R	22		23-31-22	001-099
	13		W3706	2413B	22		23-31-22	115-199
	14		W3706	2413B	22		23-31-22	001-099
	14		W3706	2413R	22		23-31-22	115-199
	15	UNUSED						ALL
	16		W3706	0816	22		23-31-41	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						001-099
	19		W3706	0965	22		33-25-14	115-199
D40316J		1885/248/R025		RCPT				001-099
D40316J		AT1883/ /		RCPT				115-199
	1		W2028	0018R	20		SPARE	001-099
	1	UNUSED						115-199
	2		W2028	0017R	20		SPARE	001-002
	2		W2028	0017R	20		26-15-11	003-099
	2		W2626	0010R	20		26-15-11	115-199
	3	UNUSED						ALL
	4		W2028	0012R	22		26-15-11	001-099
	4		W2626	0009R	20		26-15-11	115-199
	5	UNUSED						ALL
	6		W2028	0011R	22		26-15-11	001-099
	6		W2626	0011R	20		26-15-11	115-199
	7	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 11

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40316P		AT1883/248/R025		PLUG				ALL
	1	UNUSED						ALL
	2		W2826	0003	16		26-15-11	001-009, 115-199
	2		W2826	0003R	16		26-15-11	010-099
	3	UNUSED						ALL
	4		W2826	0001	16		26-15-11	001-009, 115-199
	4		W2826	0001R	16		26-15-11	010-099
	5	UNUSED						ALL
	6		W2826	0002	16		26-15-11	001-009, 115-199
	6		W2826	0002R	16		26-15-11	010-099
	7	UNUSED						ALL
D40318J		1885/220/R021		RCPT				001-099
D40318J		AT1883/ /		RCPT				115-199
	1	UNUSED						ALL
	2		W2048	0003R	20		SPARE	001-002
	2		W2048	0003R	20		26-15-11	003-099
	2		W2628	0002R	20		26-15-11	115-199
	3	UNUSED						ALL
	4		W2048	0001R	22		26-15-11	001-099
	4		W2628	0001R	20		26-15-11	115-199
	5		W2048	0004R	20		SPARE	001-099
	5	UNUSED						115-199
	6		W2048	0002R	22		26-15-11	001-099
	6		W2628	0003R	20		26-15-11	115-199
	7	UNUSED						ALL
D40318P		AT1883/248/R021		PLUG				ALL
	1	UNUSED						ALL
	2		W2828	0003	16		26-15-11	001-009, 115-199
	2		W2828	0003R	16		26-15-11	010-099
	3	UNUSED						ALL
	4		W2828	0001	16		26-15-11	001-009, 115-199
	4		W2828	0001R	16		26-15-11	010-099
	5	UNUSED						ALL
	6		W2828	0002	16		26-15-11	001-009, 115-199
	6		W2828	0002R	16		26-15-11	010-099
	7	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 12

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40324J		FSS 509/ /		RCPT				ALL
	1	UNUSED						ALL
	2		W3426	2513B	20		28-26-11	ALL
	3		W3426	2513R	20		28-26-11	ALL
	4		W3426	2505B	20		28-26-11	ALL
	5		W3426	2505R	20		28-26-11	ALL
	6		W3426	1005	20		28-26-11	ALL
	7		W3426	4255B	20		28-21-22	ALL
	8		W3426	4255G	20		28-21-22	ALL
	9		W3426	4255R	20		28-21-22	ALL
	10		W3426	4256G	20		28-21-22	ALL
	11		W3426	4256R	20		28-21-22	ALL
	12		W3426	3501B	20		28-21-22	ALL
	13		W3426	3501R	20		28-21-22	ALL
	14		W3426	3501Y	20		28-21-22	ALL
	15		W3426	2514B	20		28-21-21	ALL
	16		W3426	2514R	20		28-21-21	ALL
	17		W3426	1013	20		28-21-11	ALL
	18		W3426	2512B	20		SPARE	ALL
	19		W3426	2512R	20		SPARE	ALL
	20		W3426	4255Y	20		28-21-22	ALL
	21	UNUSED						ALL
	22		W3426	4256Y	20		28-21-22	ALL
	23		W3426	4256B	20		28-21-22	ALL
	24	18	W3426	0018	18		28-21-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D40324P		AW2493/ /		FUELING PANEL DISC				ALL
	1	UNUSED						ALL
	2		W1500	0033	20		28-26-11	ALL
	3		W1500	0026	20		28-26-11	ALL
	4		W1500	0031	20		28-26-11	ALL
	5		W1500	0023	20		28-26-11	ALL
	6		W1500	0029	20		28-26-11	ALL
	7		W1500	0046	20		28-21-22	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 13

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40324P		AW2493/ /		FUELING PANEL DISC (continued)				ALL
	8		W1500	0049	20		28-21-22	ALL
	9		W1500	0053	20		28-21-22	ALL
	10		W1500	0058	20		28-21-22	ALL
	11		W1500	0060	20		28-21-22	ALL
	12		W1500	0064	20		28-21-22	ALL
	13		W1500	0009	20		28-21-22	ALL
	14		W1500	0007	20		28-21-22	ALL
	15		W1500	0003	20		28-21-21	ALL
	16		W1500	0006	20		28-21-21	ALL
	17		W1500	0001	20		28-21-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W1500	0051	20		28-21-22	ALL
	21	UNUSED						ALL
	22		W1500	0052	20		28-21-22	ALL
	23		W1500	0063	20		28-21-22	ALL
	24		W1500	0055	20		28-21-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D40326J		509/ /		RCPT				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W3426	1012	20		28-21-11	ALL
	6	UNUSED						001-099
	6		W3426	1008	20		28-21-11	115-199
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						001-099
	9		W3426	1009	20		28-41-11	115-199
	10		W3426	2515R	20		28-41-11	ALL
	11		W3426	2515B	20		28-41-11	ALL
	12		W3426	FRAA			28-41-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 14

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40326J		509/ /		RCPT (continued)				ALL
	13	UNUSED						001-099
	13		W3426	2507B	20		SPARE	115-199
	14		W3426	1014	20		28-41-11	ALL
	15	UNUSED						001-099
	15		W3426	1015	20		SPARE	115-199
	16	UNUSED						001-099
	16		W3426	2516R	20		SPARE	115-199
	17		W3426	FRAE			28-41-11	ALL
	18		W3426	2517R	20		28-41-11	ALL
	19		W3426	2517B	20		28-41-11	ALL
	20		W3426	1010	20		28-41-11	ALL
	21	UNUSED						001-099
	21		W3426	1011	20		SPARE	115-199
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						001-099
	24		W3426	2519R	20		SPARE	115-199
	25	UNUSED						001-099
	25		W3426	2519B	20		SPARE	115-199
	26		W3426	0003	20		28-41-11	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W3426	0015	20		28-21-22	ALL
	32	UNUSED						ALL
	33		W3426	0005	20		28-41-11	ALL
	34		W3426	0006	20		28-41-11	ALL
	35		W3426	0016	20		28-41-11	ALL
	36		W3426	0017	20		28-41-11	ALL
	37		W3426	0009	20		28-21-23	ALL
	38		W3426	2522B	20		28-21-22	001-099
	38		W3426	2518B	20		28-21-22	115-199
	39		W3426	3504R	20		28-21-22	001-099
	39		W3426	4253B	20		28-21-22	115-199
	40		W3426	3504Y	20		28-21-22	001-099
	40		W3426	4253Y	20		28-21-22	115-199
	41		W3426	3504B	20		28-21-22	001-099
	41		W3426	4253G	20		28-21-22	115-199
	42		W3426	2522R	20		28-21-22	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 15

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40326J		509/ /		RCPT (continued)				ALL
	42		W3426	2518R	20		28-21-22	115-199
	43	UNUSED						001-099
	43		W3426	1007	20		28-21-11	115-199
	44		W3426	4254B	20		28-21-23	ALL
	45		W3426	4254G	20		28-21-23	ALL
	46		W3426	4254R	20		28-21-23	ALL
	47		W3426	4254Y	20		28-21-23	ALL
	48		W3426	2501B	20		SPARE	ALL
	49		W3426	2501R	20		SPARE	ALL
	50		W3426	2502B	20		SPARE	ALL
	51		W3426	2502R	20		SPARE	ALL
	52		W3426	2503B	20		SPARE	ALL
	53		W3426	2503R	20		SPARE	ALL
	54		W3426	2504B	20		SPARE	ALL
	55		W3426	2504R	20		SPARE	ALL
	CAP	Y	W3426	2507R	20		SPARE	115-199
	CAP	Y	W3426	2516B	20		SPARE	115-199
	CAP	Y	W3426	4253R	20		SPARE	115-199
			W3426	2522Z			28-21-22	001-099
			W3426	3504Z			28-21-22	001-099
			W3426	FRAD			28-21-22	001-099
			W3426	2515Z			28-41-11	ALL
			W3426	2517Z			28-41-11	ALL
			W3426	FRAA			28-41-11	ALL
			W3426	FRAB			28-41-11	ALL
			W3426	FRAE			28-41-11	ALL
			W3426	FRAF			28-41-11	ALL
D40326P		AW2493/ /		FUELING PANEL DISC				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W1500	0056	20		28-21-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1500	2505R	20		28-41-11	ALL
	11		W1500	2505B	20		28-41-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 16

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40326P		AW2493/ /		FUELING PANEL DISC (continued)				ALL
	12		W1500	0101	20		28-41-11	ALL
	13	UNUSED						ALL
	14		W1500	0074	20		28-41-11	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W1500	0102	20		28-41-11	ALL
	18		W1500	2509R	20		28-41-11	ALL
	19		W1500	2509B	20		28-41-11	ALL
	20		W1500	0080	20		28-41-11	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26		W1500	0083	20		28-41-11	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W1500	0035	20		28-21-22	ALL
	32	UNUSED						ALL
	33		W1500	0065	20		28-41-11	ALL
	34		W1500	0040	20		28-41-11	ALL
	35		W1500	0043	20		28-41-11	ALL
	36		W1500	0037	20		28-41-11	ALL
	37		W1500	0067	20		28-21-23	ALL
	38		W1500	2013B	20		28-21-22	ALL
	39		W1500	3001R	20		28-21-22	ALL
	40		W1500	3001Y	20		28-21-22	ALL
	41		W1500	3001B	20		28-21-22	ALL
	42		W1500	2013R	20		28-21-22	ALL
	43		W1500	0057	20		28-21-11	ALL
	44		W1500	0011	20		28-21-23	ALL
	45		W1500	0017	20		28-21-23	ALL
	46		W1500	0014	20		28-21-23	ALL
	47		W1500	0020	20		28-21-23	ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 17

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40326P		AW2493/ /		FUELING PANEL DISC (continued)				ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	DED		W1500	2505Z			28-41-11	ALL
	DED		W1500	2509Z			28-41-11	ALL
D40328J		AW2333/ /		RCPT				ALL
	1	UNUSED						ALL
	2		W3426	2513B	20		28-26-11	ALL
	3		W3426	2513R	20		28-26-11	ALL
	4		W3426	2505B	20		28-26-11	ALL
	5		W3426	2505R	20		28-26-11	ALL
	6		W3426	1005	20		28-26-11	ALL
	7		W3426	4255B	20		28-21-22	ALL
	8		W3426	4255G	20		28-21-22	ALL
	9		W3426	4255R	20		28-21-22	ALL
	10		W3426	4256G	20		28-21-22	ALL
	11		W3426	4256R	20		28-21-22	ALL
	12		W3426	3501B	20		28-21-22	ALL
	13		W3426	3501R	20		28-21-22	ALL
	14		W3426	3501Y	20		28-21-22	ALL
	15		W3426	2514B	20		28-21-21	ALL
	16		W3426	2514R	20		28-21-21	ALL
	17		W3426	1013	20		28-21-11	ALL
	18		W3426	2512B	20		SPARE	ALL
	19		W3426	2512R	20		SPARE	ALL
	20		W3426	4255Y	20		28-21-22	ALL
	21	UNUSED						ALL
	22		W3426	4256Y	20		28-21-22	ALL
	23		W3426	4256B	20		28-21-22	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	S/R		W3426	1005Z			28-26-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 18

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40328J		AW2333/ /		RCPT (continued)				ALL
	S/R		W3426	1013Z			28-21-11	ALL
	S/R		W3426	2505Z			28-26-11	ALL
	S/R		W3426	2512Z			SPARE	ALL
	S/R		W3426	2513Z			28-26-11	ALL
	S/R		W3426	2514Z			28-21-21	ALL
	S/R		W3426	3501Z			28-21-22	ALL
	S/R		W3426	4255Z			28-21-22	ALL
	S/R		W3426	4256Z			28-21-22	ALL
D40328P		AW2333/ /		PLUG				ALL
	1	UNUSED						ALL
	2		W3458	0002	20		28-26-11	ALL
	3		W3458	0003	20		28-26-11	ALL
	4		W3458	0004	20		28-26-11	ALL
	5		W3458	0005	20		28-26-11	ALL
	6		W3458	0006	20		28-26-11	ALL
	7		W3458	0007	20		28-21-22	ALL
	8		W3458	0008	20		28-21-22	ALL
	9		W3458	0009	20		28-21-22	ALL
	10		W3458	4001G	20		28-21-22	ALL
	11		W3458	4001R	20		28-21-22	ALL
	12		W3458	3001B	20		28-21-22	ALL
	13		W3458	3001R	20		28-21-22	ALL
	14		W3458	3001Y	20		28-21-22	ALL
	15		W3458	0015	20		28-21-21	ALL
	16		W3458	0016	20		28-21-21	ALL
	17		W3458	0017	20		28-21-11	ALL
	18		W3458	2001B	20		SPARE	ALL
	19		W3458	2001R	20		SPARE	ALL
	20		W3458	0020	20		28-21-22	ALL
	21	UNUSED						ALL
	22		W3458	4001Y	20		28-21-22	ALL
	23		W3458	4001B	20		28-21-22	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 19

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40328P		AW2333/ /		PLUG (continued)				ALL
	31	UNUSED						ALL
D40330J		AW2333/ /		RCPT				ALL
	1		W3426	2520R	20		23-41-12	ALL
	2		W3426	2520B	20		23-41-12	ALL
	3	UNUSED						ALL
	4		W3426	2520Z			23-41-12	ALL
	5		W3426	1007	20		28-21-11	001-099
	5		W3426	1012	20		28-21-11	115-199
	6		W3426	1012	20		28-21-11	001-099
	6		W3426	1008	20		28-21-11	115-199
	7		W3426	1006	20		28-21-11	ALL
	8	UNUSED						ALL
	9	UNUSED						001-099
	9		W3426	1009	20		28-41-11	115-199
	10		W3426	2515R	20		28-41-11	ALL
	11		W3426	2515B	20		28-41-11	ALL
	12	UNUSED						001-099
	12		W3426	2507R	20		SPARE	115-199
	13	UNUSED						001-099
	13		W3426	2507B	20		SPARE	115-199
	14		W3426	1014	20		28-41-11	ALL
	15	UNUSED						001-099
	15		W3426	1015	20		SPARE	115-199
	16	UNUSED						001-099
	16		W3426	2516R	20		SPARE	115-199
	17	UNUSED						001-099
	17		W3426	2516B	20		SPARE	115-199
	18		W3426	2517R	20		28-41-11	ALL
	19		W3426	2517B	20		28-41-11	ALL
	20		W3426	1010	20		28-41-11	ALL
	21	UNUSED						001-099
	21		W3426	1011	20		SPARE	115-199
	22	UNUSED						001-099
	22		W3426	2518R	20		28-21-22	115-199
	23	UNUSED						001-099
	23		W3426	2518B	20		28-21-22	115-199
	24	UNUSED						001-099
	24		W3426	2519R	20		SPARE	115-199
	25	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 20

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40330J		AW2333/ /		RCPT (continued)				ALL
	25		W3426	2519B	20		SPARE	115-199
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W3426	2522B	20		28-21-22	001-099
	38		W3426	4253R	20		SPARE	115-199
	39		W3426	3504R	20		28-21-22	001-099
	39		W3426	4253B	20		28-21-22	115-199
	40		W3426	3504Y	20		28-21-22	001-099
	40		W3426	4253Y	20		28-21-22	115-199
	41		W3426	3504B	20		28-21-22	001-099
	41		W3426	4253G	20		28-21-22	115-199
	42		W3426	2522R	20		28-21-22	001-099
	42	UNUSED						115-199
	43	UNUSED						ALL
	44		W3426	4254B	20		28-21-23	ALL
	45		W3426	4254G	20		28-21-23	ALL
	46		W3426	4254R	20		28-21-23	ALL
	47		W3426	4254Y	20		28-21-23	ALL
	48		W3426	2501B	20		SPARE	ALL
	49		W3426	2501R	20		SPARE	ALL
	50		W3426	2502B	20		SPARE	ALL
	51		W3426	2502R	20		SPARE	ALL
	52		W3426	2503B	20		SPARE	ALL
	53		W3426	2503R	20		SPARE	ALL
	54		W3426	2504B	20		SPARE	ALL
	55		W3426	2504R	20		SPARE	ALL
	S/R		W3426	1007Z			28-21-11	001-099
	S/R		W3426	2522Z			28-21-22	001-099
	S/R		W3426	3504Z			28-21-22	001-099
	S/R		W3426	1006Z			28-21-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 21

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40330J		AW2333/ /		RCPT (continued)				ALL
	S/R		W3426	1010Z			28-41-11	ALL
	S/R		W3426	1012Z			28-21-11	ALL
	S/R		W3426	1014Z			28-41-11	ALL
	S/R		W3426	2501Z			SPARE	ALL
	S/R		W3426	2502Z			SPARE	ALL
	S/R		W3426	2503Z			SPARE	ALL
	S/R		W3426	2504Z			SPARE	ALL
	S/R		W3426	2515Z			28-41-11	ALL
	S/R		W3426	2517Z			28-41-11	ALL
	S/R		W3426	2520ZO			23-41-12	ALL
	S/R		W3426	4254Z			28-21-23	ALL
	S/R		W3426	1008Z			28-21-11	115-199
	S/R		W3426	1009Z			28-41-11	115-199
	S/R		W3426	1011Z			SPARE	115-199
	S/R		W3426	1015Z			SPARE	115-199
	S/R		W3426	2507Z			SPARE	115-199
	S/R		W3426	2516Z			SPARE	115-199
	S/R		W3426	2518Z			28-21-22	115-199
	S/R		W3426	2519Z			SPARE	115-199
	S/R		W3426	4253Z			28-21-22	115-199
D40330P		AW2333/ /		PLUG				ALL
	1		W3460	2501R	20		23-41-12	001-099
	1		W3460	3501R	20		23-41-12	115-199
	2		W3460	2501B	20		23-41-12	001-099
	2		W3460	3501B	20		23-41-12	115-199
	3	UNUSED						001-099
	3		W3460	3501Y	20		23-41-12	115-199
	4		W3460	2501Z			23-41-12	001-099
	4		W3460	3501Z			23-41-12	115-199
	5		W3460	0005	20		28-21-11	ALL
	6		W3460	0006	20		28-21-11	ALL
	7		W3460	0007	20		28-21-11	ALL
	8	UNUSED						ALL
	9	UNUSED						001-099
	9		W3460	0009	20		28-41-11	115-199
	10		W3460	2506R	20		28-41-11	ALL
	11		W3460	2506B	20		28-41-11	ALL
	12	UNUSED						001-099
	12		W3460	2007R	20		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 22

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40330P		AW2333/ /		PLUG (continued)				ALL
	13	UNUSED						001-099
	13		W3460	2007B	20		SPARE	115-199
	14		W3460	0014	20		28-41-11	ALL
	15	UNUSED						001-099
	15		W3460	0015	20		SPARE	115-199
	16	UNUSED						001-099
	16		W3460	2009R	20		SPARE	115-199
	17	UNUSED						001-099
	17		W3460	2009B	20		SPARE	115-199
	18		W3460	2510R	20		28-41-11	ALL
	19		W3460	2510B	20		28-41-11	ALL
	20		W3460	0020	20		28-41-11	ALL
	21	UNUSED						001-099
	21		W3460	0021	20		SPARE	115-199
	22	UNUSED						001-099
	22		W3460	2012R	20		28-21-22	115-199
	23	UNUSED						001-099
	23		W3460	2012B	20		28-21-22	115-199
	24	UNUSED						001-099
	24		W3460	2013R	20		SPARE	115-199
	25	UNUSED						001-099
	25		W3460	2013B	20		SPARE	115-199
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W3460	2014B	20		28-21-22	001-099
	38		W3460	4001R	20		SPARE	115-199
	39		W3460	3001R	20		28-21-22	001-099
	39		W3460	4001B	20		28-21-22	115-199
	40		W3460	3001Y	20		28-21-22	001-099
	40		W3460	4001Y	20		28-21-22	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 23

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40330P		AW2333/ /		PLUG (continued)				ALL
	41		W3460	3001B	20		28-21-22	001-099
	41		W3460	4001G	20		28-21-22	115-199
	42		W3460	2014R	20		28-21-22	001-099
	42	UNUSED						115-199
	43	UNUSED						ALL
	44		W3460	0004	20		28-21-23	ALL
	45		W3460	0003	20		28-21-23	ALL
	46		W3460	0002	20		28-21-23	ALL
	47		W3460	0001	20		28-21-23	ALL
	48		W3460	2001B	20		SPARE	ALL
	49		W3460	2001R	20		SPARE	ALL
	50		W3460	2002B	20		SPARE	ALL
	51		W3460	2002R	20		SPARE	ALL
	52		W3460	2003B	20		SPARE	ALL
	53		W3460	2003R	20		SPARE	ALL
	54		W3460	2004B	20		SPARE	ALL
	55		W3460	2004R	20		SPARE	ALL
	S/R		W3460	2506Z			28-41-11	ALL
	S/R		W3460	2510Z			28-41-11	ALL
	CAP	Y	W3460	2006B	20		SPARE	115-199
	CAP	Y	W3460	2006R	20		SPARE	115-199
	CAP	Y	W3460	2010B	20		SPARE	115-199
	CAP	Y	W3460	2010R	20		SPARE	115-199
D40332J		AD0880/ /		RCPT-				001-099
D40332J		AD0880/ /		RCPT				115-199
	1	UNUSED						ALL
	2		W4216	0067	20		28-26-11	ALL
	3		W4216	0068	20		28-26-11	ALL
	4		W4216	0069	20		28-26-11	ALL
	5		W4216	0070	20		28-26-11	ALL
	6		W4216	0071	20		28-26-11	ALL
	7		W4216	0025	20		28-21-22	ALL
	8		W4216	0024	20		28-21-22	ALL
	9		W4216	0023	20		28-21-22	ALL
	10		W4216	4003G	22		28-21-22	001-099
	10		W4216	4003G	20		28-21-22	115-199
	11		W4216	4003R	22		28-21-22	001-099
	11		W4216	4003R	20		28-21-22	115-199
	12		W4216	3003B	22		28-21-22	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 24

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40332J		AD0880/ /		RCPT- (continued)				001-099
D40332J		AD0880/ /		RCPT (continued)				115-199
	12		W4216	3003B	20		28-21-22	115-199
	13		W4216	3003R	22		28-21-22	001-099
	13		W4216	3003R	20		28-21-22	115-199
	14		W4216	3003Y	22		28-21-22	001-099
	14		W4216	3003Y	20		28-21-22	115-199
	15		W4216	0022	22		28-21-21	001-099
	15		W4216	0022	20		28-21-21	115-199
	16		W4216	0051	22		28-21-21	001-099
	16		W4216	0051	20		28-21-21	115-199
	17		W4216	0021	20		28-21-11	ALL
	18		W4216	0111	20		SPARE	ALL
	19		W4216	0112	20		SPARE	ALL
	20		W4216	0085	20		28-21-22	ALL
	21	UNUSED						001-099
	21		W4216	4003Y	20		28-21-22	115-199
	22		W4216	4003Y	22		28-21-22	001-099
	22	UNUSED						115-199
	23		W4216	4003B	22		28-21-22	001-099
	23		W4216	4003B	20		28-21-22	115-199
	24	UNUSED						ALL
	S/R		W4216	YAAB			28-21-22	001-099
	S/R		W4216	YAAA			28-21-22	115-199
D40332P		AD0880/ /		PLUG				ALL
	1	UNUSED						ALL
	2		W3458	0002	20		28-26-11	ALL
	3		W3458	0003	20		28-26-11	ALL
	4		W3458	0004	20		28-26-11	ALL
	5		W3458	0005	20		28-26-11	ALL
	6		W3458	0006	20		28-26-11	ALL
	7		W3458	0007	20		28-21-22	ALL
	8		W3458	0008	20		28-21-22	ALL
	9		W3458	0009	20		28-21-22	ALL
	10		W3458	4001G	20		28-21-22	ALL
	11		W3458	4001R	20		28-21-22	ALL
	12		W3458	3001B	20		28-21-22	ALL
	13		W3458	3001R	20		28-21-22	ALL
	14		W3458	3001Y	20		28-21-22	ALL
	15		W3458	0015	20		28-21-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 25

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40332P		AD0880/ /		PLUG (continued)				ALL
	16		W3458	0016	20		28-21-21	ALL
	17		W3458	0017	20		28-21-11	ALL
	18		W3458	2001B	20		SPARE	ALL
	19		W3458	2001R	20		SPARE	ALL
	20		W3458	0020	20		28-21-22	ALL
	21	UNUSED						001-099
	21		W3458	4001Y	20		28-21-22	115-199
	22		W3458	4001Y	20		28-21-22	001-099
	22	UNUSED						115-199
	23		W3458	4001B	20		28-21-22	ALL
	24	UNUSED						ALL
	S/R		W3458	YAAA			28-21-11	ALL
D40334J		AD0880/ /		RCPT-				001-099
D40334J		AD0880/ /		RCPT				115-199
	1		W4216	2501R	20		23-41-12	001-099
	1		W4216	3501R	20		23-41-12	115-199
	2		W4216	2501B	20		23-41-12	001-099
	2		W4216	3501B	20		23-41-12	115-199
	3		W4216	0103	22		SPARE	001-099
	3		W4216	3501Y	20		23-41-12	115-199
	4		W4216	2501Z			23-41-12	001-099
	4		W4216	3501Z			23-41-12	115-199
	5		W4216	0072	20		28-21-11	ALL
	6		W4216	0123	20		28-21-11	001-099
	6		W4216	0073	22		28-21-11	115-199
	7		W4216	0074	22		28-21-11	ALL
	8		W4216	0101	20		SPARE	001-099
	8	UNUSED						115-199
	9	UNUSED						001-099
	9		W4216	0041	20		28-41-11	115-199
	10		W4216	2506R	20		28-41-11	ALL
	11		W4216	2506B	20		28-41-11	ALL
	12		W4216	2506Z			28-41-11	ALL
	13	UNUSED						001-099
	13		W4216	2007B	20		SPARE	115-199
	14		W4216	0042	20		28-41-11	ALL
	15	UNUSED						001-099
	15		W4216	0043	20		SPARE	115-199
	16	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 26

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40334J		AD0880/ /		RCPT- (continued)				001-099
D40334J		AD0880/ /		RCPT (continued)				115-199
	16		W4216	2009R	20		SPARE	115-199
	17		W4216	2508Z			28-41-11	ALL
	18		W4216	2508R	20		28-41-11	ALL
	19		W4216	2508B	20		28-41-11	ALL
	20		W4216	0044	20		28-41-11	ALL
	21	UNUSED						001-099
	21		W4216	0045	20		SPARE	115-199
	22	UNUSED						001-099
	22		W4216	2004R	20		28-21-22	115-199
	23	UNUSED						001-099
	23		W4216	2004B	20		28-21-22	115-199
	24	UNUSED						001-099
	24		W4216	2005R	20		SPARE	115-199
	25	UNUSED						001-099
	25		W4216	2005B	20		SPARE	115-199
	26		W4216	0073	22		SPARE	001-099
	26	UNUSED						115-199
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W4216	2019B	20		28-21-22	001-099
	38		W4216	4002R	22		SPARE	115-199
	39		W4216	3004R	20		28-21-22	001-099
	39		W4216	4002B	22		28-21-22	115-199
	40		W4216	3004Y	20		28-21-22	001-099
	40		W4216	4002Y	22		28-21-22	115-199
	41		W4216	3004B	20		28-21-22	001-099
	41		W4216	4002G	22		28-21-22	115-199
	42		W4216	2019R	20		28-21-22	001-099
	42	UNUSED						115-199
	43	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 27

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40334J		AD0880/ /		RCPT- (continued)				001-099
D40334J		AD0880/ /		RCPT (continued)				115-199
	44		W4216	0050	22		28-21-23	001-099
	44		W4216	0050	20		28-21-23	115-199
	45		W4216	0049	22		28-21-23	001-099
	45		W4216	0049	20		28-21-23	115-199
	46		W4216	0048	22		28-21-23	001-099
	46		W4216	0048	20		28-21-23	115-199
	47		W4216	0047	22		28-21-23	001-099
	47		W4216	0047	20		28-21-23	115-199
	48	UNUSED						001-099
	48		W4216	0108	20		SPARE	115-199
	49		W4216	0109	20		SPARE	ALL
	50		W4216	0110	20		SPARE	ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	S/R		W4216	YAAA			28-41-11	001-099
	S/R		W4216	YAAB			28-41-11	115-199
	CAP	Y	W4216	2006B	20		SPARE	115-199
	CAP	Y	W4216	2006R	20		SPARE	115-199
	CAP	Y	W4216	2007R	20		SPARE	115-199
	CAP	Y	W4216	2008B	20		SPARE	115-199
	CAP	Y	W4216	2008R	20		SPARE	115-199
	CAP	Y	W4216	2009B	20		SPARE	115-199
D40334P		AD0880/ /		RCPT				ALL
	1		W3460	2501R	20		23-41-12	001-099
	1		W3460	3501R	20		23-41-12	115-199
	2		W3460	2501B	20		23-41-12	001-099
	2		W3460	3501B	20		23-41-12	115-199
	3	UNUSED						001-099
	3		W3460	3501Y	20		23-41-12	115-199
	4		W3460	2501Z			23-41-12	001-099
	4		W3460	3501Z			23-41-12	115-199
	5		W3460	0005	20		28-21-11	ALL
	6		W3460	0006	20		28-21-11	ALL
	7		W3460	0007	20		28-21-11	ALL
	8	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 28

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40334P		AD0880/ /		RCPT (continued)				ALL
	9	UNUSED						001-099
	9		W3460	0009	20		28-41-11	115-199
	10		W3460	2506R	20		28-41-11	ALL
	11		W3460	2506B	20		28-41-11	ALL
	12		W3460	2506Z			28-41-11	ALL
	13	UNUSED						001-099
	13		W3460	2007B	20		SPARE	115-199
	14		W3460	0014	20		28-41-11	ALL
	15	UNUSED						001-099
	15		W3460	0015	20		SPARE	115-199
	16	UNUSED						001-099
	16		W3460	2009R	20		SPARE	115-199
	17		W3460	2510Z			28-41-11	ALL
	18		W3460	2510R	20		28-41-11	ALL
	19		W3460	2510B	20		28-41-11	ALL
	20		W3460	0020	20		28-41-11	ALL
	21	UNUSED						001-099
	21		W3460	0021	20		SPARE	115-199
	22	UNUSED						001-099
	22		W3460	2012R	20		28-21-22	115-199
	23	UNUSED						001-099
	23		W3460	2012B	20		28-21-22	115-199
	24	UNUSED						001-099
	24		W3460	2013R	20		SPARE	115-199
	25	UNUSED						001-099
	25		W3460	2013B	20		SPARE	115-199
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W3460	2014B	20		28-21-22	001-099
	38		W3460	4001R	20		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 29

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40334P		AD0880/ /		RCPT (continued)				ALL
	39		W3460	3001R	20		28-21-22	001-099
	39		W3460	4001B	20		28-21-22	115-199
	40		W3460	3001Y	20		28-21-22	001-099
	40		W3460	4001Y	20		28-21-22	115-199
	41		W3460	3001B	20		28-21-22	001-099
	41		W3460	4001G	20		28-21-22	115-199
	42		W3460	2014R	20		28-21-22	001-099
	42	UNUSED						115-199
	43	UNUSED						ALL
	44		W3460	0004	20		28-21-23	ALL
	45		W3460	0003	20		28-21-23	ALL
	46		W3460	0002	20		28-21-23	ALL
	47		W3460	0001	20		28-21-23	ALL
	48		W3460	2001B	20		SPARE	ALL
	49		W3460	2001R	20		SPARE	ALL
	50		W3460	2002B	20		SPARE	ALL
	51		W3460	2002R	20		SPARE	ALL
	52		W3460	2003B	20		SPARE	ALL
	53		W3460	2003R	20		SPARE	ALL
	54		W3460	2004B	20		SPARE	ALL
	55		W3460	2004R	20		SPARE	ALL
	S/R		W3460	YAAA			28-21-11	ALL
	CAP	Y	W3460	2006B	20		SPARE	115-199
	CAP	Y	W3460	2006R	20		SPARE	115-199
	CAP	Y	W3460	2007R	20		SPARE	115-199
	CAP	Y	W3460	2009B	20		SPARE	115-199
	CAP	Y	W3460	2010B	20		SPARE	115-199
	CAP	Y	W3460	2010R	20		SPARE	115-199
D40342J		1090/ /		RCPT				001-099
D40342J		AC1090/ /		RCPT				115-199
	1		W4208	4002R	22		27-51-11	ALL
	2		W4208	4002B	22		27-51-11	ALL
	3		W4208	4002Y	22		27-51-11	ALL
	4		W4208	2003B	20		22-11-21	ALL
	5		W4208	4002G	22		27-51-11	ALL
	6		W4208	0037	22		SPARE	ALL
	7		W4208	2004R	20		22-13-21	ALL
	8		W4208	2004B	20		22-13-21	ALL
	9		W4208	0018	22		27-51-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 30

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40342J		1090/ /		RCPT (continued)				001-099
D40342J		AC1090/ /		RCPT (continued)				115-199
	10		W4208	0014	22		27-51-21	ALL
	11		W4208	3002R	20		22-13-21	ALL
	12		W4208	3002B	20		22-13-21	ALL
	13		W4208	3002Y	20		22-13-21	ALL
	14		W4208	0023	20		22-11-22	ALL
	15		W4208	0011	14		27-51-11	ALL
	16		W4208	3001Y	20		22-13-21	ALL
	17		W4208	3001B	20		22-13-21	ALL
	18		W4208	0024	20		22-11-22	ALL
	19		W4208	0012	14		27-51-11	ALL
	20		W4208	0038	22		SPARE	ALL
	21		W4208	3001R	20		22-13-21	ALL
	22	UNUSED						001-099
	22		W4208	0043	20		SPARE	115-199
	23		W4208	0013	14		27-51-11	ALL
	24		W4208	2003R	20		22-11-21	ALL
	25		W4208	0019	22		27-51-21	ALL
	26		W4208	0017	22		27-51-21	ALL
	27		W4208	2002R	22		27-51-11	ALL
	28		W4208	2002B	22		27-51-11	ALL
D40342P		AC1090/ /		PLUG				ALL
	1		W2410	4251R	20		27-51-11	ALL
	2		W2410	4251B	20		27-51-11	ALL
	3		W2410	4251Y	20		27-51-11	ALL
	4		W2410	2505B	20		22-11-21	ALL
	5		W2410	4251G	20		27-51-11	ALL
	6	UNUSED						ALL
	7		W2410	2506R	20		22-13-21	ALL
	8		W2410	2506B	20		22-13-21	ALL
	9		W2410	1006	20		27-51-21	ALL
	10		W2410	1005	20		27-51-21	ALL
	11		W2410	3502R	20		22-13-21	ALL
	12		W2410	3502B	20		22-13-21	ALL
	13		W2410	3502Y	20		22-13-21	ALL
	14	18	W2410	1020	18		22-11-22	ALL
	15		W2410	1001	14		27-51-11	ALL
	16		W2410	3503Y	20		22-13-21	ALL
	17		W2410	3503B	20		22-13-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 31

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40342P		AC1090/ /		PLUG (continued)				ALL
	18	18	W2410	1021	18		22-11-22	ALL
	19		W2410	1002	14		27-51-11	ALL
	20	UNUSED						ALL
	21		W2410	3503R	20		22-13-21	ALL
	22	UNUSED						ALL
	23		W2410	1003	14		27-51-11	ALL
	24		W2410	2505R	20		22-11-21	ALL
	25		W2410	2502B	20		27-51-21	ALL
	26		W2410	2502R	20		27-51-21	ALL
	27		W2410	2501R	20		27-51-11	ALL
	28		W2410	2501B	20		27-51-11	ALL
	S/R		W2410	1001Z			27-51-11	ALL
	S/R		W2410	1002Z			27-51-11	ALL
	S/R		W2410	1003Z			27-51-11	ALL
	S/R		W2410	1005Z			27-51-21	ALL
	S/R		W2410	1006Z			27-51-21	ALL
	S/R		W2410	1020Z			22-11-22	ALL
	S/R		W2410	1021Z			22-11-22	ALL
	S/R		W2410	2501Z			27-51-11	ALL
	S/R		W2410	2502Z			27-51-21	ALL
	S/R		W2410	2505Z			22-11-21	ALL
	S/R		W2410	2506Z			22-13-21	ALL
	S/R		W2410	3502Z			22-13-21	ALL
	S/R		W2410	3503Z			22-13-21	ALL
	S/R		W2410	4251Z			27-51-11	ALL
D40346J		AC1090/ /		RCPT				ALL
	1		W4202	0044	22		27-23-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W4202	0007	20		27-62-11	ALL
	5	UNUSED						ALL
	6		W4202	0045	22		27-23-11	ALL
	7	UNUSED						ALL
	8		W4202	3004R	20		22-13-11	ALL
	9		W4202	3004B	20		22-13-11	ALL
	10		W4202	3004Y	20		22-13-11	ALL
	11		W4202	3003R	20		22-13-11	ALL
	12		W4202	3003B	20		22-13-11	ALL
	13		W4202	3003Y	20		22-13-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 32

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40346J		AC1090/ /		RCPT (continued)				ALL
	14		W4202	2007B	20		22-11-11	ALL
	15		W4202	2007R	20		22-11-11	ALL
	16		W4202	0046	22		27-23-11	ALL
	17		W4202	2008R	20		22-13-11	ALL
	18		W4202	0021	20		29-31-11	ALL
	19	UNUSED						ALL
	20		W4202	2008B	20		22-13-11	ALL
	21	UNUSED						ALL
	22		W4202	0043	20		22-11-12	ALL
	23		W4202	2013R	20		29-31-11	ALL
	24		W4202	0042	20		22-11-12	ALL
	25		W4202	2013B	20		29-31-11	ALL
	26		W4202	0018	20		32-09-11	ALL
	27		W4202	0023	22		27-11-11	ALL
	28		W4202	0024	22		27-11-11	ALL
	29		W4202	0001	20		SPARE	ALL
	30		W4202	0066	20		SPARE	ALL
	31	UNUSED						ALL
	32		W4202	0090	20		SPARE	ALL
	33		W4202	0091	20		SPARE	ALL
	34		W4202	0092	20		SPARE	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
D40346P		AC1090/ /		PLUG				ALL
	1		W2414	3502Y	20		27-23-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W2414	2503B	20		27-62-11	ALL
	5	UNUSED						ALL
	6		W2414	3502R	20		27-23-11	ALL
	7	UNUSED						ALL
	8		W2414	3504R	20		22-13-11	ALL
	9		W2414	3504B	20		22-13-11	ALL
	10		W2414	3504Y	20		22-13-11	ALL
	11		W2414	3505R	20		22-13-11	ALL
	12		W2414	3505B	20		22-13-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 33

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40346P		AC1090/ /		PLUG (continued)				ALL
	13		W2414	3505Y	20		22-13-11	ALL
	14		W2414	2512B	20		22-11-11	ALL
	15		W2414	2512R	20		22-11-11	ALL
	16		W2414	3502B	20		27-23-11	ALL
	17		W2414	2511R	20		22-13-11	ALL
	18		W2414	3501Y	20		29-31-11	ALL
	19	UNUSED						ALL
	20		W2414	2511B	20		22-13-11	ALL
	21	UNUSED						ALL
	22		W2414	1021	20		22-11-12	ALL
	23		W2414	3501R	20		29-31-11	ALL
	24		W2414	1022	20		22-11-12	ALL
	25		W2414	3501B	20		29-31-11	ALL
	26		W2414	2503R	20		27-62-11	ALL
	27		W2414	2507B	20		27-11-11	ALL
	28		W2414	2507R	20		27-11-11	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	S/R		W2414	1021Z			22-11-12	ALL
	S/R		W2414	1022Z			22-11-12	ALL
	S/R		W2414	2503Z			27-62-11	ALL
	S/R		W2414	2507Z			27-11-11	ALL
	S/R		W2414	2511Z			22-13-11	ALL
	S/R		W2414	2512Z			22-11-11	ALL
	S/R		W2414	3501Z			29-31-11	ALL
	S/R		W2414	3502Z			27-23-11	ALL
	S/R		W2414	3504Z			22-13-11	ALL
	S/R		W2414	3505Z			22-13-11	ALL
D40348J		AC1090/ /		RCPT				ALL
	1		W4202	2002R	22		32-61-13	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 34

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40348J		AC1090/ /		RCPT (continued)				ALL
	2		W4202	2002B	22		32-61-13	ALL
	3		W4202	3001B	16		28-22-11	ALL
	4		W4202	0048	22		28-42-11	001-099
	4		W4202	0048	20		28-42-11	115-199
	5		W4202	3001R	16		28-22-11	ALL
	6		W4202	3001Y	16		28-22-11	ALL
	7		W4202	0077	22		27-51-51	001-099
	7		W4202	0077	20		27-51-51	115-199
	8		W4202	0093	20		SPARE	ALL
	9		W4202	2003R	22		32-61-13	ALL
	10		W4202	2003B	22		32-61-13	ALL
D40348P		AC1090/ /		PLUG				ALL
	1		W2414	2508R	20		32-61-13	ALL
	2		W2414	2508B	20		32-61-13	ALL
	3		W2414	3503B	16		28-22-11	ALL
	4		W2414	1004	18		28-42-11	ALL
	5		W2414	3503R	16		28-22-11	ALL
	6		W2414	3503Y	16		28-22-11	ALL
	7		W2414	1002	18		27-51-51	ALL
	8	UNUSED						ALL
	9		W2414	2513R	20		32-61-13	ALL
	10		W2414	2513B	20		32-61-13	ALL
	S/R		W2414	1002Z			27-51-51	ALL
	S/R		W2414	1004Z			28-42-11	ALL
	S/R		W2414	2508ZO			32-61-13	ALL
	S/R		W2414	2513ZO			32-61-13	ALL
	S/R		W2414	3503Z			28-22-11	ALL
	DED		W2414	2508ZI			32-61-13	ALL
	DED		W2414	2513ZI			32-61-13	ALL
D40350J		AC1090/ /		RCPT				ALL
	1		W4210	2006R	20		31-31-51	001-099
	1		W4210	2006R	20		31-31-31	115-199
	2		W4210	2006B	20		31-31-51	001-099
	2		W4210	2006B	20		31-31-31	115-199
	3		W4210	2502R	20		31-31-51	001-099
	3		W4210	2502R	20		31-31-31	115-199
	4		W4210	2502B	20		31-31-51	001-099
	4		W4210	2502B	20		31-31-31	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 35

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40350J		AC1090/ /		RCPT (continued)				ALL
	5		W4210	0139	22		28-42-21	ALL
	6	UNUSED						ALL
	7		W4210	2503R	20		31-31-51	001-099
	7		W4210	2503R	20		31-31-31	115-199
	8		W4210	2503B	20		31-31-51	001-099
	8		W4210	2503B	20		31-31-31	115-199
	9		W4210	2504R	20		31-31-51	001-099
	9		W4210	2504R	20		31-31-31	115-199
	10		W4210	2504B	20		31-31-51	001-099
	10		W4210	2504B	20		31-31-31	115-199
	11	UNUSED						ALL
	12		W4210	0146	22		29-22-11	ALL
	13		W4210	0097	22		29-22-11	ALL
	14		W4210	0096	22		29-22-11	ALL
	15	UNUSED						ALL
	16		W4210	0098	22		29-22-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W4210	0027	20		29-33-11	ALL
	21	UNUSED						ALL
	22		W4210	0023	20		28-25-21	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W4210	0031	20		29-33-11	ALL
	26		W4210	0032	20		29-33-11	ALL
	27		W4210	0138	12		28-25-11	ALL
	28	UNUSED						ALL
	S/R		W4210	2502Z			31-31-51	001-099
	S/R		W4210	2503Z			31-31-51	001-099
	S/R		W4210	2504Z			31-31-51	001-099
	S/R		W4210	2502Z			31-31-31	115-199
	S/R		W4210	2503Z			31-31-31	115-199
	S/R		W4210	2504Z			31-31-31	115-199
D40350P		AC1090/ /		PLUG				ALL
	1		W2416	2504R	20		31-31-31	001-008, 115-199
	1		W2416	2504R	20		31-31-51	009-099
	2		W2416	2504B	20		31-31-31	001-008, 115-199
	2		W2416	2504B	20		31-31-51	009-099

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 36

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40350P		AC1090/ /		PLUG (continued)				ALL
	3		W2416	2501R	20		31-31-31	001-008
	3		W2416	2501R	20		31-31-51	009-099, 115-199
	4		W2416	2501B	20		31-31-51	001-099
	4		W2416	2501B	20		31-31-31	115-199
	5		W2416	1003	20		28-42-21	ALL
	6	UNUSED						ALL
	7		W2416	2502R	20		31-31-31	001-008, 115-199
	7		W2416	2502R	20		31-31-51	009-099
	8		W2416	2502B	20		31-31-31	001-008, 115-199
	8		W2416	2502B	20		31-31-51	009-099
	9		W2416	2503R	20		31-31-31	001-008, 115-199
	9		W2416	2503R	20		31-31-51	009-099
	10		W2416	2503B	20		31-31-31	001-008, 115-199
	10		W2416	2503B	20		31-31-51	009-099
	11	UNUSED						ALL
	12		W2416	3502R	20		29-22-11	ALL
	13		W2416	3502B	20		29-22-11	ALL
	14		W2416	3502Y	20		29-22-11	ALL
	15	UNUSED						ALL
	16	18	W2416	1005	18		29-22-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W2416	3501B	20		29-33-11	ALL
	21	UNUSED						ALL
	22		W2416	1002	20		28-25-21	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W2416	3501R	20		29-33-11	ALL
	26		W2416	3501Y	20		29-33-11	ALL
	27		W2416	1001	12		28-25-11	ALL
	28	UNUSED						ALL
	S/R		W2416	2502Z			31-31-31	001-008, 115-199
	S/R		W2416	2503Z			31-31-31	001-008, 115-199
	S/R		W2416	2504Z			31-31-31	001-008, 115-199
	S/R		W2416	2501Z			31-31-51	001-099
	S/R		W2416	1001Z			28-25-11	ALL
	S/R		W2416	1002Z			28-25-21	ALL
	S/R		W2416	1003Z			28-42-21	ALL
	S/R		W2416	1005Z			29-22-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 37

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40350P		AC1090/ /		PLUG (continued)				ALL
	S/R		W2416	3501Z			29-33-11	ALL
	S/R		W2416	3502Z			29-22-11	ALL
	S/R		W2416	2502Z			31-31-51	009-099
	S/R		W2416	2503Z			31-31-51	009-099
	S/R		W2416	2504Z			31-31-51	009-099
	S/R		W2416	2501Z			31-31-31	115-199
D40352J		AC1090/ /		RCPT				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W4226	2002R	22		22-13-31	ALL
	12		W4226	2002B	22		22-13-31	ALL
	13		W4226	3001R	22		22-13-31	ALL
	14		W4226	3001B	22		22-13-31	ALL
	15		W4226	3001Y	22		22-13-31	ALL
	16		W4226	3002R	22		22-13-31	ALL
	17		W4226	3002B	22		22-13-31	ALL
	18		W4226	3002Y	22		22-13-31	ALL
	19		W4226	2001B	20		22-11-31	ALL
	20		W4226	2001R	20		22-11-31	ALL
	21	UNUSED						ALL
	22		W4226	0002	20		22-11-32	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26		W4226	0007	22		28-21-23	001-099
	26		W4226	0007	20		28-21-23	115-199
	27		W4226	0008	20		28-21-23	ALL
	28	UNUSED						ALL
	29		W4226	2003R	20		29-32-41	ALL
	30	UNUSED						ALL
	31		W4226	2003B	20		29-32-41	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 38

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40352J		AC1090/ /		RCPT (continued)				ALL
	32		W4226	0009	20		29-35-11	ALL
	33		W4226	0010	20		29-35-11	ALL
	34		W4226	0011	20		SPARE	ALL
	35		W4226	0012	20		SPARE	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39		W4226	0001	20		22-11-32	ALL
D40352P		AC1090/ /		PLUG				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W2418	2501R	20		22-13-31	ALL
	12		W2418	2501B	20		22-13-31	ALL
	13		W2418	3501R	20		22-13-31	ALL
	14		W2418	3501B	20		22-13-31	ALL
	15		W2418	3501Y	20		22-13-31	ALL
	16		W2418	3502R	20		22-13-31	ALL
	17		W2418	3502B	20		22-13-31	ALL
	18		W2418	3502Y	20		22-13-31	ALL
	19		W2418	2504B	20		22-11-31	ALL
	20		W2418	2504R	20		22-11-31	ALL
	21	UNUSED						ALL
	22	18	W2418	1009	18		22-11-32	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26		W2418	2503R	20		28-21-23	ALL
	27		W2418	2503B	20		28-21-23	ALL
	28	UNUSED						ALL
	29	18	W2418	2502R	18		29-32-41	ALL
	30	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 39

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40352P		AC1090/ /		PLUG (continued)				ALL
	31	18	W2418	2502B	18		29-32-41	ALL
	32	18	W2418	2511R	18		29-35-11	ALL
	33	18	W2418	2511B	18		29-35-11	ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	18	W2418	1010	18		22-11-32	ALL
	S/R		W2418	1009Z			22-11-32	ALL
	S/R		W2418	1010Z			22-11-32	ALL
	S/R		W2418	2501Z			22-13-31	ALL
	S/R		W2418	2502Z			29-32-41	ALL
	S/R		W2418	2503Z			28-21-23	ALL
	S/R		W2418	2504Z			22-11-31	ALL
	S/R		W2418	2511Z			29-35-11	ALL
	S/R		W2418	3501Z			22-13-31	ALL
	S/R		W2418	3502Z			22-13-31	ALL
D40354J		400/301/R008		RCPT-				001-099
D40354J		400/301/R8		RCPT-				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W3532	0033	22		33-51-12	ALL
	4		W3532	0034	22		33-51-12	ALL
	5		W3532	0040	20		SPARE	ALL
	6		W3532	0041	20		SPARE	ALL
	7		W3532	0160	22		33-51-12	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D40354P		409/300/R008		PLUG				001-099
D40354P		AA0409/ /		PLUG				115-199
	1	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 40

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40354P		409/300/R008		PLUG (continued)				001-099
D40354P		AA0409/ /		PLUG (continued)				115-199
	2	UNUSED						ALL
	3		W2070	0257	22		33-51-11	ALL
	4		W2070	0258	22		33-51-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W2070	0313	22		33-51-12	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D40356J		AA0409/ /		RCPT-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W3534	0033	22		33-51-14	ALL
	4		W3534	0034	22		33-51-14	ALL
	5		W3534	0040	20		SPARE	ALL
	6		W3534	0041	20		SPARE	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D40356P		409/300/0		PLUG				001-099
D40356P		AA0409/ /		PLUG				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W2070	0256	22		33-51-11	ALL
	4		W2070	0255	22		33-51-11	ALL
	5	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 41

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40356P		409/300/0		PLUG (continued)				001-099
D40356P		AA0409/ /		PLUG (continued)				115-199
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D40358J		AD1090/ /		RCPT				ALL
	1		W4216	3001Y	16		28-22-11	ALL
	2		W4216	3001R	16		28-22-11	ALL
	3		W4216	3001B	16		28-22-11	ALL
	4		W4216	2002B	22		32-61-13	ALL
	5		W4216	0107	20		SPARE	ALL
	6		W4216	0100	20		29-21-32	ALL
	7		W4216	0030	22		28-42-11	001-099
	7		W4216	0030	20		28-42-11	115-199
	8	UNUSED						ALL
	9		W4216	2002R	22		32-61-13	ALL
	10		W4216	2001B	22		32-61-13	ALL
	11		W4216	2001R	22		32-61-13	ALL
	12		W4216	0099	20		29-21-32	ALL
	13		W4216	0098	22		29-21-32	ALL
	14		W4216	0097	22		29-21-32	ALL
D40358P		AD1090/ /		PLUG				ALL
	1		W2510	3501Y	16		28-22-11	ALL
	2		W2510	3501R	16		28-22-11	ALL
	3		W2510	3501B	16		28-22-11	ALL
	4		W2510	2502B	20		32-61-13	ALL
	5	UNUSED						ALL
	6		W2510	4001Y	20		29-21-32	ALL
	7		W2510	1001	18		28-42-11	ALL
	8	UNUSED						ALL
	9		W2510	2502R	20		32-61-13	ALL
	10		W2510	2501B	20		32-61-13	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 42

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40358P		AD1090/ /		PLUG (continued)				ALL
	11		W2510	2501R	20		32-61-13	ALL
	12		W2510	4001G	20		29-21-32	ALL
	13		W2510	4001R	20		29-21-32	ALL
	14		W2510	4001B	20		29-21-32	ALL
	S/R		W2510	1001Z			28-42-11	ALL
	S/R		W2510	2501ZO			32-61-13	ALL
	S/R		W2510	2502ZO			32-61-13	ALL
	S/R		W2510	3501Z			28-22-11	ALL
	DED		W2510	2501ZI			32-61-13	ALL
	DED		W2510	2502ZI			32-61-13	ALL
D40360J		AD1090/ /		RCPT				ALL
	1		W4216	0059	22		27-23-11	ALL
	2		W4216	0061	22		27-23-11	ALL
	3		W4216	0117	22		27-23-11	001-099
	3		W4216	0060	22		27-23-11	115-199
	4		W4216	0019	20		27-62-11	ALL
	5		W4216	0020	20		27-62-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W4216	0029	20		32-09-12	ALL
	19	UNUSED						001-099
	19		W4216	0106	22		SPARE	115-199
	20		W4216	0121	20		29-35-11	001-099
	20		W4216	0114	20		29-35-11	115-199
	21		W4216	0115	20		29-35-11	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 43

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40360P		AD1090/ /		PLUG				ALL
	1		W2510	3502Y	20		27-23-11	ALL
	2		W2510	3502B	20		27-23-11	ALL
	3		W2510	3502R	20		27-23-11	ALL
	4		W2510	2504B	20		27-62-11	ALL
	5		W2510	2504R	20		27-62-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W2510	1003	20		27-62-11	ALL
	19	UNUSED						ALL
	20	18	W2510	2503B	18		29-35-11	ALL
	21	18	W2510	2503R	18		29-35-11	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	S/R		W2510	1003Z			27-62-11	ALL
	S/R		W2510	2503Z			29-35-11	ALL
	S/R		W2510	2504Z			27-62-11	ALL
	S/R		W2510	3502Z			27-23-11	ALL
D40362J		AD1090/ /		RCPT				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W4212	0008	20		29-31-11	ALL
	10		W4212	2007B	20		29-31-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 44

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40362J		AD1090/ /		RCPT (continued)				ALL
	11		W4212	2007R	20		29-31-11	ALL
	12		W4212	2503R	20		23-41-12	001-099
	12		W4212	3501R	20		23-41-12	115-199
	13		W4212	2503B	20		23-41-12	001-099
	13		W4212	3501B	20		23-41-12	115-199
	14	UNUSED						001-099
	14		W4212	3501Y	20		23-41-12	115-199
	15		W4212	0001	20		32-12-12	ALL
	16		W4212	2503Z			23-41-12	001-099
	16		W4212	3501Z			23-41-12	115-199
	17		W4212	2003R	22		32-61-13	ALL
	18		W4212	0020	22		29-11-22	001-099
	18		W4212	0020	20		29-11-22	115-199
	19		W4212	0002	20		32-12-12	ALL
	20	UNUSED						ALL
	21		W4212	2003B	22		32-61-13	ALL
	22		W4212	0019	20		SPARE	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W4212	2004R	22		32-61-13	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W4212	2004B	22		32-61-13	ALL
D40362P		AD1090/ /		PLUG				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W2512	3501Y	20		29-31-11	ALL
	10		W2512	3501B	20		29-31-11	ALL
	11		W2512	3501R	20		29-31-11	ALL
	12		W2512	2503R	20		23-41-12	001-099
	12		W2512	3502R	20		23-41-12	115-199
	13		W2512	2503B	20		23-41-12	001-099
	13		W2512	3502B	20		23-41-12	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 45

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40362P		AD1090/ /		PLUG (continued)				ALL
	14	UNUSED						001-099
	14		W2512	3502Y	20		23-41-12	115-199
	15		W2512	1013	18		32-12-12	ALL
	16	18	W2512	2503Z			23-41-12	001-099
	16	18	W2512	3502Z			23-41-12	115-199
	17		W2512	2501R	20		32-61-13	ALL
	18	18	W2512	1041	18		29-11-22	ALL
	19		W2512	1014	18		32-12-12	ALL
	20	UNUSED						ALL
	21		W2512	2501B	20		32-61-13	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W2512	2502R	20		32-61-13	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W2512	2502B	20		32-61-13	ALL
	S/R		W2512	1013Z			32-12-12	ALL
	S/R		W2512	1014Z			32-12-12	ALL
	S/R		W2512	1041Z			29-11-22	ALL
	S/R		W2512	2501ZO			32-61-13	ALL
	S/R		W2512	2502ZO			32-61-13	ALL
	S/R		W2512	3501Z			29-31-11	ALL
	DED		W2512	2501ZI			32-61-13	ALL
	DED		W2512	2502ZI			32-61-13	ALL
D40364J		AD1090/ /		RCPT				ALL
	1		W4236	0097	22		26-17-11	001-099
	1		W4236	0097	20		26-17-11	115-199
	2		W4236	0031	22		26-18-11	001-099
	2		W4236	0031	20		26-18-11	115-199
	3		W4236	0032	22		26-18-11	001-099
	3		W4236	0032	20		26-18-11	115-199
	4		W4236	0033	22		26-18-11	001-099
	4		W4236	0033	20		26-18-11	115-199
	5		W4236	0034	22		26-18-11	001-099
	5		W4236	0034	20		26-18-11	115-199
	6		W4236	0151	22		32-41-11	ALL
	7		W4236	0149	22		29-22-11	ALL
	8		W4236	0150	22		29-22-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 46

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40364J		AD1090/ /		RCPT (continued)				ALL
	9		W4236	2511Z			31-31-63	001-099
	9	UNUSED						115-199
	10		W4236	0154	20		32-42-11	ALL
	11		W4236	0189	20		32-42-11	ALL
	12		W4236	2511R	22		31-31-63	001-099
	12	UNUSED						115-199
	13		W4236	2511B	22		31-31-63	001-099
	13	UNUSED						115-199
	14	UNUSED						ALL
D40364P		AD1090/ /		PLUG				ALL
	1		W2514	1003	18		26-17-11	ALL
	2		W2514	1004	18		26-18-11	ALL
	3		W2514	1005	18		26-18-11	ALL
	4		W2514	1006	18		26-18-11	ALL
	5		W2514	1007	18		26-18-11	ALL
	6		W2514	3501B	18		32-42-11	ALL
	7		W2514	2501R	18		29-22-11	ALL
	8		W2514	2501B	18		29-22-11	ALL
	9		W2514	2502Z			31-31-63	001-099
	9	UNUSED						115-199
	10		W2514	3501R	18		32-42-11	ALL
	11		W2514	3501Y	18		32-42-11	ALL
	12		W2514	2502R	22		31-31-63	001-099
	12	UNUSED						115-199
	13		W2514	2502B	22		31-31-63	001-099
	13	UNUSED						115-199
	14	UNUSED						ALL
	S/R		W2514	1003Z			26-17-11	ALL
	S/R		W2514	1004Z			26-18-11	ALL
	S/R		W2514	1005Z			26-18-11	ALL
	S/R		W2514	1006Z			26-18-11	ALL
	S/R		W2514	1007Z			26-18-11	ALL
	S/R		W2514	2501Z			29-22-11	ALL
	S/R		W2514	3501Z			32-42-11	ALL
D40366J		AC1090/ /		RCPT				ALL
	1	VN	W4210	1001	22		29-33-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 47

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40366J		AC1090/ /		RCPT (continued)				ALL
	4		W4210	0120	22		29-33-11	ALL
	5		W4210	0121	22		29-33-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W4210	0122	22		29-33-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	= C1		W4210	1001Z			29-33-11	ALL
D40366P		AC1090/ /		PLUG				ALL
	1		W2418	001TX	20		29-33-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W2418	3513R	20		29-33-11	ALL
	5		W2418	3513B	20		29-33-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W2418	3513Y	20		29-33-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	= C1		W2418	001TI			29-33-11	ALL
	S/R		W2418	001TO			29-33-11	ALL
	S/R		W2418	3513Z			29-33-11	ALL
D40368J		AD1090/ /		RCPT				ALL
	1	VN	W4220	1001	22		29-33-11	ALL
	2	UNUSED						001-008, 115-199
	2		W4220	0175	20		28-22-32	009-099
	3	UNUSED						001-008, 115-199
	3		W4220	0176	20		28-22-32	009-099
	4	UNUSED						001-008, 115-199
	4		W4220	0177	20		28-22-32	009-099
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 48

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40368J		AD1090/ /		RCPT (continued)				ALL
	11 = C1	UNUSED	W4220	1001Z			29-33-11	ALL ALL
D40368P		AD1090/ /		PLUG				ALL
	1		W2516	001TX	20		29-33-11	ALL
	2	UNUSED	W2516	3507B	18		28-22-32	001-008, 115-199 009-099
	2		W2516	3507R	18		28-22-32	001-008, 115-199 009-099
	3	UNUSED	W2516	3507Y	18		28-22-32	001-008, 115-199 009-099
	3		W2516					
	4	UNUSED	W2516					
	4		W2516					
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	= C1		W2516	001TI			29-33-11	ALL
	S/R		W2516	001TO			29-33-11	ALL
	S/R		W2516	3507Z			28-22-32	009-099
D40370J		AD1090/ /		RCPT				ALL
	1		W4220	0048	22		28-21-23	ALL
	2		W4220	0094	22		32-44-11	ALL
	3		W4220	0092	22		32-44-11	ALL
	4		W4220	0091	22		32-44-11	ALL
	5		W4220	0095	22		32-44-11	ALL
	6		W4220	0084	22		32-41-11	ALL
	7		W4220	0085	22		32-41-11	ALL
	8		W4220	0086	22		32-41-11	ALL
	9		W4220	0026	22		29-33-11	ALL
	10	UNUSED						001-099
	10		W4220	0090	20		SPARE	115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W4220	0030	22		29-33-11	ALL
	14		W4220	0031	22		29-33-11	ALL
	15		W4220	0032	22		29-33-11	ALL
	16		W4220	0033	22		29-33-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 49

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40370J		AD1090/ /		RCPT (continued)				ALL
	17		W4220	0034	22		29-33-11	ALL
	18		W4220	0035	22		29-33-11	ALL
	19	UNUSED						ALL
	20		W4220	0049	20		28-21-23	ALL
	21	18	W4220	0083	18		32-12-12	ALL
	22		W4220	0093	22		32-44-11	ALL
	23	UNUSED						001-099
	23		W4220	0089	20		SPARE	115-199
	24		W4220	0044	20		33-31-11	001-099
	24		W4220	0144	20		33-31-11	115-199
	25	18	W4220	0143	18		32-12-12	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W4220	0071	20		32-12-12	ALL
	29		W4220	0072	20		32-35-11	ALL
	30		W4220	0114	22		29-21-31	ALL
	31		W4220	2006R	20		29-32-41	ALL
	32		W4220	0110	20		29-21-31	ALL
	33		W4220	2006B	20		29-32-41	ALL
	34		W4220	0108	22		29-21-31	ALL
	35		W4220	0113	20		29-21-31	001-099
	35	18	W4220	0113	18		29-21-31	115-199
	36	18	W4220	0112	18		29-21-31	ALL
	37		W4220	0115	22		29-21-31	ALL
	38		W4220	0111	20		29-21-31	001-099
	38	18	W4220	0111	18		29-21-31	115-199
	39		W4220	0109	22		29-21-31	ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 50

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40370J		AD1090/ /		RCPT (continued)				ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D40370P		AD1090/ /		PLUG				ALL
	1		W2516	2504B	20		28-21-23	ALL
	2		W2516	3501B	20		32-44-11	ALL
	3		W2516	2505B	20		32-44-11	001-099
	3		W2516	2505R	20		32-44-11	115-199
	4		W2516	3501R	20		32-44-11	ALL
	5		W2516	3501Y	20		32-44-11	ALL
	6		W2516	3502B	20		32-41-11	ALL
	7		W2516	3502R	20		32-41-11	ALL
	8		W2516	3502Y	20		32-41-11	ALL
	9		W2516	3503B	20		29-33-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W2516	3503R	20		29-33-11	ALL
	14		W2516	3503Y	20		29-33-11	ALL
	15		W2516	1026	20		29-33-11	ALL
	16		W2516	3504B	20		29-33-11	ALL
	17		W2516	3504R	20		29-33-11	ALL
	18		W2516	3504Y	20		29-33-11	ALL
	19	UNUSED						ALL
	20		W2516	2504R	20		28-21-23	ALL
	21	18	W2516	2520B	18		32-12-12	ALL
	22		W2516	2505R	20		32-44-11	001-099
	22		W2516	2505B	20		32-44-11	115-199
	23	UNUSED						ALL
	24		W2516	1019	20		33-31-11	ALL
	25	18	W2516	2520R	18		32-12-12	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	18	W2516	1024	18		32-12-12	ALL
	29		W2516	1025	20		32-35-11	ALL
	30		W2516	1012	20		29-21-31	ALL
	31	18	W2516	2502R	18		29-32-41	ALL
	32		W2516	1006	20		29-21-31	ALL
	33	18	W2516	2502B	18		29-32-41	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 51

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40370P		AD1090/ /		PLUG (continued)				ALL
	34		W2516	1003	20		29-21-31	ALL
	35	18	W2516	0090	18		29-21-31	ALL
	36	18	W2516	0091	18		29-21-31	ALL
	37		W2516	3505Y	20		29-21-31	ALL
	38		W2516	3505B	20		29-21-31	ALL
	39		W2516	3505R	20		29-21-31	ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	S/R		W2516	1003Z			29-21-31	ALL
	S/R		W2516	1006Z			29-21-31	ALL
	S/R		W2516	1012Z			29-21-31	ALL
	S/R		W2516	1019Z			33-31-11	ALL
	S/R		W2516	1024Z			32-12-12	ALL
	S/R		W2516	1025Z			32-35-11	ALL
	S/R		W2516	1026Z			29-33-11	ALL
	S/R		W2516	2502Z			29-32-41	ALL
	S/R		W2516	2504Z			28-21-23	ALL
	S/R		W2516	2505Z			32-44-11	ALL
	S/R		W2516	2520Z			32-12-12	ALL
	S/R		W2516	3501Z			32-44-11	ALL
	S/R		W2516	3502Z			32-41-11	ALL
	S/R		W2516	3503Z			29-33-11	ALL
	S/R		W2516	3504Z			29-33-11	ALL
	S/R		W2516	3505Z			29-21-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 52

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40374J D40374J		P034-00/ / P34/ /		RCPT RCPT				001-099 115-199
	1	16	W1240	0016	16		33-21-31	ALL
	2	UNUSED						ALL
	3		W1240	0221	24		33-21-31	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D40374P		P34/ /		PLUG-				ALL
	1	16	W3724	0301	16		33-21-32	ALL
	2	UNUSED						ALL
	3		W3724	0305	24		33-21-32	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D40376J D40376J		P034-00/ / P34/ /		RCPT RCPT				001-099 115-199
	1		W1240	0165	20		33-21-11	001-099
	1		W1242	0005	20		33-21-11	115-199
	2	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 53

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40376J		P034-00/ /		RCPT (continued)				001-099
D40376J		P34/ /		RCPT (continued)				115-199
	3		W1240	0188	24		33-21-11	001-099
	3		W1242	0008	24		33-21-11	115-199
	4	UNUSED						001-099
	4		W1242	0020	22		33-21-51	115-199
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1240	0239	22		33-21-51	001-099
	10	UNUSED						115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D40376P		P34/ /		PLUG-				001-099
D40376P		AP0034/ /		PLUG-				115-199
	1		W3514	0301	20		33-21-12	001-099
	1		W3514	0361	20		33-21-12	115-199
	2	UNUSED						ALL
	3		W3514	0303	24		33-21-12	001-099
	3		W3514	0363	24		33-21-12	115-199
	4	UNUSED						001-099
	4		W3514	0310	20		33-21-51	115-199
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W3514	0308	20		SPARE	001-099
	8	UNUSED						115-199
	9		W3514	0309	20		SPARE	001-099
	9	UNUSED						115-199
	10		W3514	0310	20		33-21-51	001-099
	10	UNUSED						115-199
	11	UNUSED						ALL
	12		W3514	0312	20		SPARE	001-099
	12	UNUSED						115-199
	13	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 54

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40376P		P34/ /		PLUG- (continued)				001-099
D40376P		AP0034/ /		PLUG- (continued)				115-199
	14	UNUSED						ALL
	15	UNUSED						ALL
D40378J		P034-00/ /		RCPT				ALL
	1		W1128	0126	22		24-41-11	ALL
	2		W1128	0125	22		24-41-11	ALL
	3		W1128	0132	24		24-41-12	001-099
	3		W1128	0132	22		24-41-12	115-199
	4		W1128	0133	24		24-41-12	001-099
	4		W1128	0133	22		24-41-12	115-199
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D40378P		P034-00/ /		PLUG				ALL
	1		W2038	0001	24		24-41-11	001-099
	1		W2038	0001	20		24-41-11	115-199
	2		W2038	0002	24		24-41-11	001-099
	2		W2038	0002	20		24-41-11	115-199
	3		W2038	0004	24		24-41-12	ALL
	4		W2038	0005	24		24-41-12	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						001-099
	14	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 55

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40378P		P034-00/ /		PLUG (continued)				ALL
	15	UNUSED						001-099
D40380J		AW1179/ /		RCPT				ALL
	1		W4202	2502R	20		32-61-22	ALL
	2		W4202	2502B	20		32-61-22	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	S/R		W4202	YAAB			32-61-22	001-099
	S/R		W4202	YAAB			32-61-12	115-199
	DED		W4202	2502Z			32-61-22	ALL
D40380P		AW1179/ /		PLUG				ALL
	1		W3020	A-AA			32-61-22	ALL
	2		W3020	A-AB			32-61-22	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D40382J		AW1179/ /		RCPT-				ALL
	1		W4206	2504R	20		32-61-22	001-099
	1		W4206	2502R	20		32-61-22	115-199
	2		W4206	2504B	20		32-61-22	001-099
	2		W4206	2502B	20		32-61-22	115-199
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	S/R		W4206	YAAJ			32-61-22	001-099
	S/R		W4206	YAAF			32-61-12	115-199
	DED		W4206	2504Z			32-61-22	001-099
	DED		W4206	2502Z			32-61-22	115-199
D40382P		AW1179/ /		PLUG				ALL
	1		W3022	A-AA			32-61-22	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 56

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40382P		AW1179/ /		PLUG (continued)				ALL
	2		W3022	A-AB			32-61-22	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D40388J		393/161/L12		RCPT-				001-099
D40388J		393/161/L012		RCPT-				115-199
	A		W2152	0001	16		33-42-21	ALL
	B		W2152	0005	18		33-42-21	ALL
	C		W2152	0006	18		33-31-11	ALL
	D		W2152	0007	18		33-31-11	ALL
	E		W2152	0008	18		32-12-12	ALL
	F		W2152	0021	20		32-12-12	001-099
	F		W2152	0021	18		32-12-12	115-199
	G		W2152	0011	20		32-12-12	001-099
	G		W2152	0011	18		32-12-12	115-199
	H		W2152	0012	18		33-42-11	ALL
	I		W2152	2003B	20		32-09-11	001-099
	I		W2152	2003B	18		32-09-11	115-199
	J		W2152	2003R	20		32-09-11	001-099
	J		W2152	2003R	18		32-09-11	115-199
	K		W2152	0017	16		33-42-21	ALL
	L		W2152	0033	20		SPARE	001-099
	L		W2152	0020	18		SPARE	115-199
	M		W2152	0034	20		33-42-31	001-099
	M	UNUSED						115-199
	N	UNUSED						001-099
	N		W2152	0022	18		SPARE	115-199
	O	UNUSED						001-099
	O		W2152	0023	18		SPARE	115-199
	P		W2152	0013	12		33-42-11	ALL
	R		W2152	0016	12		33-42-11	ALL
	S		W2152	0031	12		33-42-12	001-099
	S	UNUSED						115-199
	T		W2152	0032	12		33-42-12	001-099
	T	UNUSED						115-199
	U	UNUSED						ALL
	V	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 57

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40388J		393/161/L12		RCPT- (continued)				001-099
D40388J		393/161/L012		RCPT- (continued)				115-199
	W		W2152	0030	18		33-42-12	001-099
	W	UNUSED						115-199
	X	UNUSED						ALL
	Y	UNUSED						ALL
	Z	UNUSED						ALL
	A-	UNUSED						ALL
	B-	UNUSED						ALL
	C-	UNUSED						ALL
	D-	UNUSED						ALL
	E-	UNUSED						ALL
	F-	UNUSED						ALL
	G-	UNUSED						ALL
	H-	UNUSED						ALL
	J-	UNUSED						ALL
	K-	UNUSED						ALL
D40388P		AC0393/ /		PLUG-				ALL
	A		W3052	0017	18		33-42-21	ALL
	B		W3052	0012	20		33-42-21	ALL
	C		W3052	0002	18		33-31-11	ALL
	D		W3052	0001	18		33-31-11	ALL
	E		W3052	0027	18		32-12-12	ALL
	F		W3052	0026	18		32-12-12	ALL
	G		W3052	0025	18		32-12-12	ALL
	H		W3052	0007	20		33-42-11	ALL
	I		W3052	2001B	18		32-09-11	ALL
	J		W3052	2001R	18		32-09-11	ALL
	K		W3052	0015	16		33-42-21	ALL
	L	UNUSED						ALL
	M		W3052	0046	20		33-42-31	001-099
	M	UNUSED						115-199
	N	UNUSED						001-099
	N		W3052	0031	18		SPARE	115-199
	O	UNUSED						001-099
	O		W3052	0030	18		SPARE	115-199
	P		W3052	0006	12		33-42-11	ALL
	R		W3052	0005	12		33-42-11	ALL
	S		W3052	0043	12		33-42-12	001-099
	S	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 58

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40388P		AC0393/ /		PLUG- (continued)				ALL
	T		W3052	0044	12		33-42-12	001-099
	T	UNUSED						115-199
	U	UNUSED						ALL
	V	UNUSED						ALL
	W		W3052	0045	18		33-42-12	001-099
	W	UNUSED						115-199
	X	UNUSED						ALL
	Y	UNUSED						ALL
	Z	UNUSED						ALL
	A-	UNUSED						ALL
	B-	UNUSED						ALL
	C-	UNUSED						ALL
	D-	UNUSED						ALL
	E-	UNUSED						ALL
	F-	UNUSED						ALL
	G-	UNUSED						ALL
	H-	UNUSED						ALL
	J-	UNUSED						ALL
	K-	UNUSED						ALL
D40390J		P36/ /		RCPT				ALL
	1		W1260	0071	18		33-42-21	ALL
	2		W1260	0067	20		33-31-11	ALL
	3		W1260	0070	20		33-42-11	ALL
	4		W1260	8519	20		33-42-12	001-099
	4	UNUSED						115-199
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1260	8522	20		33-42-31	001-099
	7	UNUSED						115-199
D40390P		P036-00/ /		PLUG				ALL
	1		W2152	0005	18		33-42-21	ALL
	2		W2152	0007	18		33-31-11	ALL
	3		W2152	0012	18		33-42-11	ALL
	4		W2152	0030	18		33-42-12	001-099
	4	UNUSED						115-199
	5	UNUSED						001-099
	5		W2152	0020	18		SPARE	115-199
	6		W2152	0033	20		SPARE	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 59

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40390P		P036-00/ /		PLUG (continued)				ALL
	6	UNUSED						115-199
	7		W2152	0034	20		33-42-31	001-099
	7	UNUSED						115-199
D40392J		P031-00/ /		RCPT-				ALL
	1		W1136	0107	18		24-22-11	ALL
	2		W1136	0111	24		24-22-11	ALL
	3		W1136	4001G	24		24-23-11	ALL
	4		W1136	4001B	24		24-23-11	ALL
	5		W1136	4001Y	24		24-23-11	ALL
	6		W1136	4001R	24		24-23-11	ALL
	7		W1136	4002G	24		24-23-11	ALL
	8		W1136	4002B	24		24-23-11	ALL
	9		W1136	4002Y	24		24-23-11	ALL
	10		W1136	4002R	24		24-23-11	ALL
	11		W1136	0121	24		24-28-11	ALL
	12		W1136	0118	24		24-27-11	ALL
	13		W1136	0062	24		24-27-11	ALL
	14		W1136	0115	24		24-22-12	ALL
	15		W1136	0104	18		24-22-12	ALL
	16		W1136	4003B	24		24-23-12	ALL
	17		W1136	4003G	24		24-23-12	ALL
	18		W1136	4003R	24		24-23-12	ALL
	19		W1136	4003Y	24		24-23-12	ALL
	20		W1136	0112	24		24-22-12	ALL
	21		W1136	0114	24		24-22-12	ALL
	22		W1136	0141	20		25-31-33	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W1136	0044	22		29-11-31	ALL
	26	UNUSED						ALL
	27		W1136	0100	18		24-21-11	ALL
	28		W1136	0101	18		24-21-11	ALL
	29		W1136	0102	18		24-21-11	ALL
	30	UNUSED						ALL
	31		W1136	0109	20		24-22-11	ALL
	32		W1136	0110	20		24-22-11	ALL
	33		W1136	0314	20		24-22-11	ALL
	34		W1136	0103	20		24-22-12	ALL
	35		W1136	0317	20		24-22-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 60

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40392J		P031-00/ /		RCPT- (continued)				ALL
	36		W1136	0116	20		24-22-12	ALL
	37	UNUSED						ALL
	38		W1136	0143	24		24-22-12	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42		W1136	0142	16		29-11-22	ALL
	43	UNUSED						ALL
D40392P		P031-00/ /		PLUG				ALL
	1		W4500	0001	18		24-22-11	ALL
	2		W4500	0002	24		24-22-11	ALL
	3		W4500	4001G	24		24-23-11	ALL
	4		W4500	4001B	24		24-23-11	ALL
	5		W4500	4001Y	24		24-23-11	ALL
	6		W4500	4001R	24		24-23-11	ALL
	7		W4500	4002G	24		24-23-11	ALL
	8		W4500	4002B	24		24-23-11	ALL
	9		W4500	4002Y	24		24-23-11	ALL
	10		W4500	4002R	24		24-23-11	ALL
	11		W4500	0003	24		24-28-11	ALL
	12		W4500	0004	24		24-27-11	ALL
	13		W4500	0005	24		24-27-11	ALL
	14		W4500	0006	24		24-22-12	ALL
	15		W4500	0007	18		24-22-12	ALL
	16		W4500	4003B	24		24-23-12	ALL
	17		W4500	4003G	24		24-23-12	ALL
	18		W4500	4003R	24		24-23-12	ALL
	19		W4500	4003Y	24		24-23-12	ALL
	20		W4500	0019	24		24-22-12	ALL
	21		W4500	0020	24		24-22-12	ALL
	22		W4500	0018	20		25-31-33	ALL
	23	UNUSED						001-099
	23		W4500	0609	20		SPARE	115-199
	24	UNUSED						001-099
	24		W4500	0610	20		SPARE	115-199
	25		W4500	0032	22		29-11-31	ALL
	26		W4500	0616	20		SPARE	ALL
	27		W4500	0008	18		24-21-11	ALL
	28		W4500	0009	18		24-21-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 61

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40392P		P031-00/ /		PLUG (continued)				ALL
	29		W4500	0010	18		24-21-11	ALL
	30		W4500	0617	20		SPARE	ALL
	31		W4500	0012	20		24-22-11	ALL
	32		W4500	0013	20		24-22-11	ALL
	33		W4500	0014	20		24-22-11	ALL
	34		W4500	0015	20		24-22-12	ALL
	35		W4500	0016	20		24-22-12	ALL
	36		W4500	0017	20		24-22-12	ALL
	37		W4500	0021	22		SPARE	ALL
	38		W4500	0034	24		24-22-12	001-099
	38		W4500	0034	18		24-22-12	115-199
	39		W4500	0613	20		SPARE	ALL
	40		W4500	0614	20		SPARE	ALL
	41	UNUSED						ALL
	42		W4500	0030	16		29-11-22	ALL
	43	UNUSED						ALL
D40394J		P032-00/ /		RCPT				ALL
	1	UNUSED						ALL
	2		W1138	0145	24		24-51-71	ALL
	3		W1138	0188	24		24-27-21	ALL
	4		W1138	0032	24		24-27-21	ALL
	5		W1138	0024	24		24-28-11	ALL
	6		W1138	4001B	24		24-23-12	ALL
	7		W1138	4001G	24		24-23-12	ALL
	8		W1138	4001R	24		24-23-12	ALL
	9		W1138	4001Y	24		24-23-12	ALL
	10		W1138	4002G	24		24-23-11	ALL
	11		W1138	4002B	24		24-23-11	ALL
	12		W1138	4002Y	24		24-23-11	ALL
	13		W1138	4002R	24		24-23-11	ALL
	14		W1138	4003G	24		24-23-11	ALL
	15		W1138	0018	20		24-22-22	ALL
	16		W1138	4003B	24		24-23-11	ALL
	17		W1138	4003Y	24		24-23-11	ALL
	18		W1138	4003R	24		24-23-11	ALL
	19		W1138	0003	24		24-22-22	ALL
	20		W1138	0021	24		24-22-22	ALL
	21		W1138	0022	24		24-22-22	ALL
	22		W1138	0013	20		24-22-22	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 62

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40394J		P032-00/ /		RCPT (continued)				ALL
	23		W1138	0041	24		24-22-21	ALL
	24		W1138	0042	20		24-22-21	ALL
	25		W1138	0044	20		24-22-21	ALL
	26	UNUSED						ALL
	27		W1138	0017	20		24-22-22	ALL
	28		W1138	0134	24		24-51-31	ALL
	29		W1138	0135	24		24-51-31	ALL
	30		W1138	0125	24		24-51-71	ALL
	31		W1138	0126	24		24-51-71	ALL
	32	UNUSED						ALL
	33	UNUSED						001-099
	33		W1138	0112	20		25-31-21	115-199
	34		W1138	0189	24		24-27-21	ALL
	35	UNUSED						ALL
	36		W1138	0166	20		25-31-11	001-099
	36	UNUSED						115-199
	37		W1138	0005	24		24-22-22	ALL
	38		W1138	0056	24		24-27-11	ALL
	39		W1138	0008	24		24-22-22	ALL
	40		W1138	0007	24		24-22-22	ALL
	41		W1138	0059	24		24-27-11	ALL
	42		W1138	0001	20		24-22-22	ALL
	43		W1138	0155	22		29-11-31	ALL
	44	UNUSED						ALL
	45		W1138	0174	20		25-31-11	001-099
	45	UNUSED						115-199
	46	UNUSED						ALL
	47	UNUSED						001-099
	47		W1138	0122	20		25-31-21	115-199
	48	UNUSED						001-099
	48		W1138	0117	20		33-27-21	115-199
	49	UNUSED						001-099
	49		W1138	0116	22		33-27-21	115-199
	50	UNUSED						001-099
	50		W1138	0115	22		33-27-21	115-199
	51		W1138	0121	22		33-27-11	ALL
	52	UNUSED						001-099
	52		W1138	0120	22		33-27-11	115-199
	53	UNUSED						001-099
	53		W1138	0119	22		33-27-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 63

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40394J		P032-00/ /		RCPT (continued)				ALL
	54	UNUSED						001-099
	54		W1138	0118	22		33-27-11	115-199
	55	UNUSED						ALL
D40394P		P032-00/ /		PLUG-				ALL
	1	UNUSED						ALL
	2		W4502	0093	24		24-51-71	ALL
	3		W4502	0003	24		24-27-21	ALL
	4		W4502	0004	24		24-27-21	ALL
	5		W4502	0005	24		24-28-11	ALL
	6		W4502	4001B	24		24-23-12	ALL
	7		W4502	4001G	24		24-23-12	ALL
	8		W4502	4001R	24		24-23-12	ALL
	9		W4502	4001Y	24		24-23-12	ALL
	10		W4502	4002G	24		24-23-11	ALL
	11		W4502	4002B	24		24-23-11	ALL
	12		W4502	4002Y	24		24-23-11	ALL
	13		W4502	4002R	24		24-23-11	ALL
	14		W4502	4003G	24		24-23-11	ALL
	15		W4502	0006	20		24-22-22	ALL
	16		W4502	4003B	24		24-23-11	ALL
	17		W4502	4003Y	24		24-23-11	ALL
	18		W4502	4003R	24		24-23-11	ALL
	19		W4502	0008	24		24-22-22	ALL
	20		W4502	0009	24		24-22-22	001-099
	20		W4502	0009	20		24-22-22	115-199
	21		W4502	0010	24		24-22-22	ALL
	22		W4502	0007	20		24-22-22	ALL
	23		W4502	0011	24		24-22-21	ALL
	24		W4502	0012	20		24-22-21	ALL
	25		W4502	0013	20		24-22-21	ALL
	26		W4502	0601	22		SPARE	ALL
	27		W4502	0015	22		24-22-22	ALL
	28		W4502	0016	24		24-51-31	001-099
	28		W4502	0016	20		24-51-31	115-199
	29		W4502	0017	24		24-51-31	001-099
	29		W4502	0017	20		24-51-31	115-199
	30		W4502	0018	24		24-51-71	ALL
	31		W4502	0019	24		24-51-71	ALL
	32		W4502	0142	20		SPARE	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 64

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40394P		P032-00/ /		PLUG- (continued)				ALL
	33	UNUSED						001-099
	33		W4502	0144	20		25-31-21	115-199
	34		W4502	0067	24		24-27-21	ALL
	35	UNUSED						ALL
	36		W4502	0065	20		25-31-11	001-099
	36	UNUSED						115-199
	37		W4502	0025	24		24-22-22	ALL
	38		W4502	0026	24		24-27-11	ALL
	39		W4502	0027	24		24-22-22	ALL
	40		W4502	0028	24		24-22-22	ALL
	41		W4502	0023	24		24-27-11	ALL
	42		W4502	0030	20		24-22-22	ALL
	43		W4502	0020	22		29-11-31	ALL
	44	UNUSED						ALL
	45		W4502	0039	20		25-31-11	001-099
	45		W4502	0039	22		SPARE	115-199
	46		W4502	0042	20		SPARE	ALL
	47		W4502	0043	20		SPARE	001-099
	47		W4502	0043	20		25-31-21	115-199
	48	UNUSED						001-099
	48		W4502	0048	22		33-27-21	115-199
	49	UNUSED						001-099
	49		W4502	0049	22		33-27-21	115-199
	50	UNUSED						001-099
	50		W4502	0050	22		33-27-21	115-199
	51		W4502	0044	22		33-27-11	ALL
	52		W4502	0045	22		SPARE	001-099
	52		W4502	0045	22		33-27-11	115-199
	53		W4502	0046	22		SPARE	001-099
	53		W4502	0046	22		33-27-11	115-199
	54		W4502	0047	22		SPARE	001-099
	54		W4502	0047	22		33-27-11	115-199
	55	UNUSED						ALL
D40398J		E5-2/ /		RCPT				ALL
	1		W1284	4003B	22		24-21-21	ALL
	2		W1284	2513R	24		24-11-21	ALL
	3		W1284	4003G	22		24-21-21	ALL
	4		W1284	4003R	22		24-21-21	ALL
	5		W1284	4003Y	22		24-21-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 65

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40398J		E5-2/ /		RCPT (continued)				ALL
	6		W1284	2514B	22		24-21-21	ALL
	7	UNUSED						ALL
	8		W1284	0035	24		24-11-21	ALL
	9		W1284	2513B	24		24-11-21	ALL
	10		W1284	2004B	24		24-11-21	ALL
	11		W1284	2005R	24		24-11-21	ALL
	12		W1284	2514R	22		24-21-21	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W1284	0029	20		24-11-21	ALL
	17		W1284	2513Z			24-11-21	ALL
	18		W1284	3001B	18		24-21-21	ALL
	19		W1284	2004R	24		24-11-21	ALL
	20		W1284	3001R	18		24-21-21	ALL
	21		W1284	2005B	24		24-11-21	ALL
	22		W1284	3001Y	18		24-21-21	ALL
	23		W1284	2514Z			24-21-21	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
D40398P		E005-02/ /		PLUG-				ALL
	1		W4302	4001B	24		24-21-21	ALL
	2		W4302	2502R	20		24-11-21	ALL
	3		W4302	4001G	24		24-21-21	ALL
	4		W4302	4001R	24		24-21-21	ALL
	5		W4302	4001Y	24		24-21-21	ALL
	6		W4302	2501B	20		24-21-21	ALL
	7		W4302	2003B	20		SPARE	ALL
	8		W4302	0001	20		24-11-21	ALL
	9		W4302	2502B	20		24-11-21	ALL
	10		W4302	2001B	20		24-11-21	ALL
	11		W4302	2002R	20		24-11-21	ALL
	12		W4302	2501R	20		24-21-21	ALL
	13		W4302	2003R	20		SPARE	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W4302	0002	16		24-11-21	ALL
	17		W4302	2502Z			24-11-21	ALL
	18		W4302	3001B	18		24-21-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 66

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40398P		E005-02/ /		PLUG- (continued)				ALL
	19		W4302	2001R	20		24-11-21	ALL
	20		W4302	3001R	18		24-21-21	ALL
	21		W4302	2002B	20		24-11-21	ALL
	22		W4302	3001Y	18		24-21-21	ALL
	23		W4302	2501Z			24-21-21	ALL
	24		W4302	0004	20		SPARE	ALL
	25		W4302	0005	20		SPARE	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40300

Page 67 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40400J		P034-00/ /		RCPT				ALL
	1	UNUSED						ALL
	2		W1128	0002	20		24-51-51	001-099
	2	UNUSED						115-199
	3		W1128	0143	24		24-51-51	ALL
	4		W1128	0142	24		24-51-51	ALL
	5		W1128	0113	20		24-22-41	ALL
	6		W1128	0112	20		24-22-41	ALL
	7		W1128	0111	24		24-22-41	ALL
	8		W1128	0137	24		24-28-11	ALL
	9		W1128	0138	24		24-28-11	ALL
	10	UNUSED						001-099
	10		W1128	0144	20		24-51-51	115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W1128	0120	24		24-27-41	ALL
	14		W1190	0302	22		33-31-31	ALL
	15		W1128	4001B	24		24-23-11	ALL
	16		W1128	4001G	24		24-23-11	ALL
	17		W1128	4001R	24		24-23-11	ALL
	18		W1128	4001Y	24		24-23-11	ALL
	19		W1128	4002B	24		24-23-12	ALL
	20		W1128	4002G	24		24-23-12	ALL
	21		W1128	4002R	24		24-23-12	ALL
	22		W1128	4002Y	24		24-23-12	ALL
	23		W1128	4003B	24		24-23-12	ALL
	24		W1128	4003G	24		24-23-12	ALL
	25		W1128	4003R	24		24-23-12	ALL
	26		W1128	4003Y	24		24-23-12	ALL
	27		W1128	4004B	24		24-41-11	ALL
	28		W1128	4004G	24		24-41-11	ALL
	29		W1128	4004R	24		24-41-11	ALL
	30		W1128	4004Y	24		24-41-11	ALL
	31		W1128	0129	24		24-41-11	ALL
	32		W1128	0139	24		24-41-11	ALL
	33		W1128	0140	24		24-41-11	ALL
	34		W1128	0141	24		24-41-11	ALL
	35		W1128	0123	22		24-41-11	ALL
	36		W1128	0124	22		24-41-11	ALL
	37		W1128	0127	24		24-41-11	ALL
	38		W1128	0121	24		24-41-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40400J		P034-00/ /		RCPT (continued)				ALL
	38		W1128	0121	20		24-41-11	115-199
	39		W1128	0128	20		24-41-11	ALL
	40		W1128	0134	20		24-51-51	ALL
	41		W1128	0135	20		24-51-61	ALL
	42		W1128	0136	20		24-51-61	ALL
	43	UNUSED						ALL
	44		W1128	0031	20		24-51-61	ALL
	45	UNUSED						ALL
	46		W1128	0132	24		24-41-12	001-099
	46		W1128	0132	22		24-41-12	115-199
	47		W1128	0119	24		24-27-41	ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						001-099
	50		W1128	0133	22		24-41-12	115-199
	51	UNUSED						001-099
	51		W1128	0130	24		24-41-12	115-199
	52		W1128	0115	24		24-22-41	ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D40400P		P034-00/ /		PLUG-				ALL
	1		W4504	0606	20		SPARE	ALL
	2		W4504	0059	20		24-51-51	001-099
	2	UNUSED						115-199
	3		W4504	0057	24		24-51-51	ALL
	4		W4504	0058	24		24-51-51	001-099
	4		W4504	0058	20		24-51-51	115-199
	5		W4504	0005	20		24-22-41	ALL
	6		W4504	0006	20		24-22-41	ALL
	7		W4504	0007	24		24-22-41	ALL
	8		W4504	0008	24		24-28-11	ALL
	9		W4504	0009	24		24-28-11	ALL
	10	UNUSED						001-099
	10		W4504	0067	20		24-51-51	115-199
	11	UNUSED						001-099
	11	18	W4504	0062	18		SPARE	115-199
	12		W4504	0607	20		SPARE	ALL
	13		W4504	0013	24		24-27-41	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40400P		P034-00/ /		PLUG- (continued)				ALL
	14		W4504	0014	22		33-31-31	001-099
	14		W4504	0014	20		33-31-31	115-199
	15		W4504	4001B	24		24-23-11	ALL
	16		W4504	4001G	24		24-23-11	ALL
	17		W4504	4001R	24		24-23-11	ALL
	18		W4504	4001Y	24		24-23-11	ALL
	19		W4504	4002B	24		24-23-12	ALL
	20		W4504	4002G	24		24-23-12	ALL
	21		W4504	4002R	24		24-23-12	ALL
	22		W4504	4002Y	24		24-23-12	ALL
	23		W4504	4003B	24		24-23-12	ALL
	24		W4504	4003G	24		24-23-12	ALL
	25		W4504	4003R	24		24-23-12	ALL
	26		W4504	4003Y	24		24-23-12	ALL
	27		W4504	4004B	24		24-41-11	ALL
	28		W4504	4004G	24		24-41-11	ALL
	29		W4504	4004R	24		24-41-11	ALL
	30		W4504	4004Y	24		24-41-11	ALL
	31		W4504	0031	24		24-41-11	ALL
	32		W4504	0032	24		24-41-11	ALL
	33		W4504	0033	24		24-41-11	ALL
	34		W4504	0034	24		24-41-11	ALL
	35		W4504	0035	24		24-41-11	ALL
	36		W4504	0036	24		24-41-11	ALL
	37		W4504	0037	24		24-41-11	ALL
	38		W4504	0038	24		24-41-11	001-099
	38		W4504	0038	20		24-41-11	115-199
	39		W4504	0039	20		24-41-11	ALL
	40		W4504	0040	20		24-51-51	ALL
	41		W4504	0041	20		24-51-61	ALL
	42		W4504	0042	20		24-51-61	ALL
	43		W4504	0609	20		SPARE	ALL
	44		W4504	0610	20		24-51-61	ALL
	45	UNUSED						ALL
	46		W4504	0046	24		24-41-12	ALL
	47		W4504	0047	24		24-27-41	ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						001-099
	50		W4504	0050	24		24-41-12	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40400P		P034-00/ /		PLUG- (continued)				ALL
	51	UNUSED						001-099
	51		W4504	0051	24		24-41-12	115-199
	52		W4504	0015	24		24-22-41	ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D40402J		880/ /		RCPT-				001-099
D40402J		880/ /		RCPT				115-199
	1	UNUSED						ALL
	2		W4218	0033	20		SPARE	ALL
	3		W4218	0003	20		33-42-12	ALL
	4		W4218	0004	20		33-42-12	ALL
	5		W4218	0034	20		33-44-21	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W4218	0011	22		SPARE	001-099
	11	UNUSED						115-199
	12	UNUSED						ALL
	13		W4218	0010	22		SPARE	001-099
	13	UNUSED						115-199
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W4218	0032	20		33-43-12	ALL
	19	UNUSED						001-099
	19		W4218	0043	20		SPARE	115-199
	20	UNUSED						001-099
	20		W4218	0044	20		SPARE	115-199
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 4

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40402J		880/ /		RCPT- (continued)				001-099
D40402J		880/ /		RCPT (continued)				115-199
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	S/R		W4218	YAAC			33-42-12	ALL
D40402P		AD0880/ /		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W3424	2501R	20		33-42-12	ALL
	4		W3424	2501B	20		33-42-12	ALL
	5		W3424	0005	20		33-44-21	ALL
	6	UNUSED						001-099
	6		W3424	0003	20		SPARE	115-199
	7	UNUSED						001-099
	7		W3424	0004	20		SPARE	115-199
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						001-099
	11		W3424	0011	20		SPARE	115-199
	12	UNUSED						ALL
	13	UNUSED						001-099
	13		W3424	0010	20		SPARE	115-199
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 5

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40402P		AD0880/ /		PLUG- (continued)				ALL
	17	UNUSED						ALL
	18		W3424	0001	20		33-43-12	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	S/R		W3424	2501Z			33-42-12	ALL
	S/R		W3424	YAAF			33-43-12	ALL
D40404J		AW2333/ /		RCPT				ALL
	1	UNUSED						ALL
	2		W3426	2510R	20		27-51-41	ALL
	3		W3426	2510B	20		27-51-41	ALL
	4		W3426	4251R	20		27-51-41	ALL
	5		W3426	4251B	20		27-51-41	ALL
	6		W3426	4251Y	20		27-51-41	ALL
	7		W3426	4251G	20		27-51-41	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 6

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40404J		AW2333/ /		RCPT (continued)				ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	S/R		W3426	2510Z			27-51-41	ALL
	S/R		W3426	4251Z			27-51-41	ALL
D40404P		AW2333/ /		PLUG-				ALL
	1		W3446	0001	20		SPARE	ALL
	2		W3446	2001R	20		27-51-41	ALL
	3		W3446	2001B	20		27-51-41	ALL
	4		W3446	4001R	20		27-51-41	ALL
	5		W3446	4001B	20		27-51-41	ALL
	6		W3446	4001Y	20		27-51-41	ALL
	7		W3446	4001G	20		27-51-41	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W3446	0011	20		SPARE	ALL
	12		W3446	0012	20		SPARE	ALL
	13		W3446	0013	20		SPARE	ALL
	14		W3446	0014	20		SPARE	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
D40410J		P037-00/ /		RCPT				001-099
D40410J		P37/ /		RCPT				115-199
	1	16	W1270	0032	16		33-24-11	ALL
	2		W1270	0035	22		33-25-21	001-099
	2	UNUSED						115-199
	3	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 7

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40410J		P037-00/ /		RCPT (continued)				001-099
D40410J		P37/ /		RCPT (continued)				115-199
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1270	0031	22		33-24-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W1270	2001B	22		23-31-21	ALL
	14		W1270	2001R	22		23-31-21	ALL
	15		W1270	0009	24		23-31-41	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W1272	0243	20		33-23-21	ALL
	26		W1272	0244	20		33-23-22	ALL
	27		W1272	0245	20		33-23-23	ALL
	28		W1272	0246	20		33-23-24	ALL
	29	16	W1270	0404	16		35-21-11	ALL
	30	UNUSED						ALL
	31	16	W1270	0403	16		35-21-11	ALL
D40410P		P37/ /		PLUG-				ALL
	1	16	W3802	0801	16		33-24-21	ALL
	2		W3802	0802	22		33-25-21	001-099
	2	UNUSED						115-199
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W3802	0845	22		SPARE	ALL
	6	UNUSED						ALL
	7		W3802	0807	20		33-24-21	ALL
	8	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 8

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40410P		P37/ /		PLUG- (continued)				ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W3802	0911	20		SPARE	ALL
	12	UNUSED						ALL
	13		W3802	2413B	22		23-31-31	ALL
	14		W3802	2413R	22		23-31-31	ALL
	15		W3802	0835	22		23-31-41	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	16	W3802	0822	16		SPARE	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W3802	0855	20		33-23-21	ALL
	26		W3802	0865	20		33-23-22	ALL
	27		W3802	0827	20		33-23-23	ALL
	28		W3802	0828	20		33-23-24	ALL
	29	16	W3802	0829	16		35-21-22	ALL
	30	UNUSED						ALL
	31	16	W3802	0809	16		35-21-21	ALL
D40412J		923/276/R060		RCPT-				ALL
	1		W3802	0811	16		33-24-21	ALL
	2		W3802	0812	22		33-25-22	ALL
	3		W3802	0813	22		33-25-22	ALL
	4		W3802	0814	22		33-25-22	ALL
	5		W3802	0815	22		33-25-22	ALL
	6	UNUSED						ALL
	7		W3802	0817	20		33-24-21	ALL
	8	UNUSED						ALL
	9	UNUSED						001-099
	9		W3802	0963	22		33-25-22	115-199
	10	UNUSED						ALL
	11		W3802	0911	20		SPARE	ALL
	12	UNUSED						ALL
	13		W3802	2423R	22		23-31-32	001-099
	13		W3802	2423B	22		23-31-32	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 9

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40412J		923/276/R060		RCPT- (continued)				ALL
	14		W3802	2423B	22		23-31-32	001-099
	14		W3802	2423R	22		23-31-32	115-199
	15		W3802	0835	22		23-31-41	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W3802	0822	16		SPARE	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W3802	0825	22		33-25-23	ALL
	26	UNUSED						ALL
	27		W3802	0827	20		33-23-23	ALL
	28		W3802	0828	20		33-23-24	ALL
	29		W3802	0829	16		35-21-22	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36		W3802	0836	16		33-23-22	ALL
	37	UNUSED						ALL
	38		W3802	0838	16		33-23-22	ALL
	39		W3802	0839	16		35-21-21	ALL
	40		W3802	0840	18		35-21-21	ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
D40412P		923/276/R036		PLUG-				001-099
D40412P		930/295/R025		PLUG-				115-199
	1		W3804	0801	16		33-24-22	ALL
	2		W3804	0802	22		33-25-22	ALL
	3		W3804	0803	22		33-25-22	ALL
	4		W3804	0804	22		33-25-22	ALL
	5		W3804	0805	22		33-25-22	ALL
	6	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 10

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40412P		923/276/R036		PLUG- (continued)				001-099
D40412P		930/295/R025		PLUG- (continued)				115-199
	7		W3804	0807	20		33-24-22	ALL
	8	UNUSED						ALL
	9	UNUSED						001-099
	9		W3804	0919	22		33-25-22	115-199
	10	UNUSED						ALL
	11		W3804	0911	20		SPARE	ALL
	12	UNUSED						ALL
	13		W3804	2413R	22		23-31-32	001-099
	13		W3804	2413B	22		23-31-32	115-199
	14		W3804	2413B	22		23-31-32	001-099
	14		W3804	2413R	22		23-31-32	115-199
	15		W3804	0835	22		23-31-41	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W3804	0822	16		SPARE	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W3804	0825	22		33-25-23	ALL
	26	UNUSED						ALL
	27		W3804	0827	20		33-23-23	ALL
	28		W3804	0828	20		33-23-24	ALL
	29		W3804	0829	16		35-21-22	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36		W3804	0836	16		33-23-22	ALL
	37	UNUSED						ALL
	38		W3804	0838	16		33-23-22	ALL
	39		W3804	0839	16		35-21-21	ALL
	40		W3804	0840	18		35-21-21	ALL
	41	UNUSED						ALL
	42	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 11

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40412P		923/276/R036		PLUG- (continued)				001-099
D40412P		930/295/R025		PLUG- (continued)				115-199
	43	UNUSED						ALL
D40414J		1215/276/R056		RCPT-				001-099
D40414J		1210/295/R025		RCPT-				115-199
	1		W3804	0811	16		33-24-22	ALL
	2		W3804	0812	22		33-25-23	ALL
	3		W3804	0813	22		33-25-23	ALL
	4	UNUSED						ALL
	5		W3804	0815	22		33-25-23	ALL
	6		W3804	0816	16		33-23-23	ALL
	7		W3804	0817	20		33-24-22	ALL
	8		W3804	0818	16		33-23-23	ALL
	9		W3804	0819	16		35-21-22	ALL
	10		W3804	0820	18		35-21-22	ALL
	11		W3804	0911	20		SPARE	ALL
	12	UNUSED						ALL
	13		W3804	2423R	22		23-31-32	001-099
	13		W3804	2423B	22		23-31-32	115-199
	14		W3804	2423B	22		23-31-32	001-099
	14		W3804	2423R	22		23-31-32	115-199
	15		W3804	0835	22		23-31-41	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W3804	0828	20		33-23-24	ALL
	19		W3804	0822	16		SPARE	ALL
D40414P		1215/275/R65		PLUG-				001-099
D40414P		1215/275/R065		PLUG-				115-199
	1		W3806	0801	16		33-24-23	ALL
	2		W3806	0802	22		33-25-24	ALL
	3		W3806	0803	22		33-25-24	ALL
	4	UNUSED						ALL
	5		W3806	0805	22		33-25-24	ALL
	6		W3806	0806	16		33-23-23	ALL
	7		W3806	0807	20		33-24-23	ALL
	8		W3806	0808	16		33-23-23	ALL
	9		W3806	0809	16		35-21-22	ALL
	10		W3806	0810	18		35-21-22	ALL
	11	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 12

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40414P		1215/275/R65		PLUG- (continued)				001-099
D40414P		1215/275/R065		PLUG- (continued)				115-199
	12	UNUSED						ALL
	13		W3806	2413R	22		23-31-32	001-099
	13		W3806	2413B	22		23-31-32	115-199
	14		W3806	2413B	22		23-31-32	001-099
	14		W3806	2413R	22		23-31-32	115-199
	15		W3806	0835	22		23-31-41	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W3806	0828	20		33-23-24	ALL
	19		W3806	0816	22		SPARE	ALL
D40416J		P71/ /		PLUG				ALL
	1		W1254	0006	22		24-25-11	001-002, 115-199
	1		W1254	0111	22		24-25-11	003-099
	2	UNUSED						ALL
	3		W1254	0078	16		24-51-72	ALL
	4		W1254	0077	16		24-51-72	ALL
	5		W1254	0076	16		24-51-72	ALL
	6		W1254	0082	22		34-22-81	001-099
	6		W1254	0082	22		34-22-83	115-199
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
D40416P		P071-00/ /		PLUG				ALL
	1		W2344	0017	22		24-25-11	ALL
	2	UNUSED						ALL
	3		W2344	0013	16		24-51-72	ALL
	4		W2344	0012	16		24-51-72	ALL
	5		W2344	0011	16		24-51-72	ALL
	6		W2344	0018	22		34-22-81	001-099
	6		W2344	0018	22		34-22-83	115-199
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 13

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40418J		P71/ /		RCPT				ALL
	1		W1254	0039	12		24-25-12	001-002, 115-199
	1		W1254	0129	12		24-25-12	003-099
	2		W1254	0040	12		24-25-12	001-002, 115-199
	2		W1254	0128	12		24-25-12	003-099
	3		W1254	0041	12		24-25-12	001-002, 115-199
	3		W1254	0127	12		24-25-12	003-099
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
D40418P		P071-00/ /		PLUG				ALL
	1		W2394	0001	12		24-25-12	ALL
	2		W2394	0002	12		24-25-12	ALL
	3		W2394	0003	12		24-25-12	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
D40427J		P1-3/ /		RCPT.				ALL
	1		W0101	0113	22		33-16-41	ALL
	2		W0101	0114	22		33-16-41	ALL
	3		W0101	0111	24		34-61-15	ALL
	4		W0101	0112	24		34-16-11	ALL
	5		W0101	0005	24		34-12-22	ALL
	6		W0101	0103	22		22-34-11	ALL
	7		W0101	0089	20		33-13-12	ALL
	8		W0101	0090	20		33-13-12	ALL
	9		W0101	0009	22		32-42-12	ALL
	10		W0101	0116	22		79-33-11	ALL
	11		W0101	0097	22		32-42-12	ALL
	12		W0101	0102	22		22-14-11	ALL
	13		W0101	0101	22		22-14-11	ALL
	14		W0101	0156	22		32-42-12	ALL
	15	UNUSED						ALL
	16		W0101	0006	22		34-46-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 14

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40427J		P1-3/ /		RCPT. (continued)				ALL
	17		W0101	1002	20		29-21-32	ALL
	18		W0101	0138	22		29-21-32	ALL
	19		W0101	0019	24		34-46-11	ALL
	20		W0101	0108	24		34-46-11	ALL
	21	UNUSED						ALL
	22		W0101	0022	22		34-46-11	ALL
	23		W0101	0131	22		29-21-32	ALL
	24		W0101	0095	20		33-13-12	ALL
	DED		W0101	1002Z			29-21-32	ALL
D40427P		P1-3/MO-/D		PLUG				ALL
	1		W0001	0062	22		33-16-41	ALL
	2		W0001	0061	22		33-16-41	ALL
	3		W0001	0013	22		34-61-15	ALL
	4		W0001	0026	22		34-16-11	ALL
	5		W0001	0661	24		34-12-22	ALL
	6		W0001	0015	22		22-34-11	ALL
	7		W0001	0151	20		33-13-12	ALL
	8		W0001	0150	20		33-13-12	ALL
	9		W0001	0053	22		32-42-12	ALL
	10		W0001	0136	22		79-33-11	ALL
	11		W0001	0133	22		32-42-12	ALL
	12		W0001	0028	22		22-14-11	ALL
	13		W0001	0029	22		22-14-11	ALL
	14		W0001	0667	22		32-42-12	ALL
	15	UNUSED						001-099
	15		W0001	0663	24		SPARE	115-199
	16		W0001	0001	22		34-46-11	ALL
	17		W0001	1002	20		29-21-32	ALL
	18		W0001	0512	20		29-21-32	ALL
	19		W0001	0019	24		34-46-11	ALL
	20		W0001	0184	20		34-46-11	ALL
	21	UNUSED						ALL
	22		W0001	0022	22		34-46-11	ALL
	23		W0001	0515	22		29-21-32	ALL
	24		W0001	0024	20		33-13-12	ALL
	DED		W0001	1002Z			29-21-32	ALL
D40432J		AW2179/ /		RCPT				ALL
	1		W4212	2504R	20		32-61-22	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 15

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40432J		AW2179/ /		RCPT (continued)				ALL
	2		W4212	2504B	20		32-61-22	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	S/R		W4212	YAAD			32-61-22	001-099
	S/R		W4212	YAAD			32-61-12	115-199
	DED		W4212	2504Z			32-61-22	ALL
D40432P		AW2179/ /		PLUG				ALL
	1		W4920	A-AA			32-61-22	ALL
	2		W4920	A-AB			32-61-22	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D40434J		AW2240/ /		RCPT-				ALL
	1	UNUSED						001-099
	1		W2648	4501W	20		32-46-11	115-199
	2	UNUSED						001-099
	2		W2648	4501G	20		32-46-11	115-199
	3		W2648	2502B	20		32-42-11	ALL
	4		W2648	2502Z			32-42-11	ALL
	5		W2648	2502R	20		32-42-11	ALL
	6	UNUSED						ALL
	7		W2648	2501Z			32-42-11	ALL
	8	UNUSED						ALL
	9		W2648	2501B	20		32-42-11	ALL
	10		W2648	2501R	20		32-42-11	ALL
	11		W2648	2503R	20		32-09-12	ALL
	12		W2648	2503B	20		32-09-12	ALL
	13	UNUSED						001-099
	13		W2648	4502W	20		32-46-11	115-199
	14	UNUSED						001-099
	14		W2648	4502G	20		32-46-11	115-199
	15		W2648	0001	20		SPARE	ALL
	16	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 16

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40434J		AW2240/ /		RCPT- (continued)				ALL
	16		W2648	0002	20		SPARE	115-199
	17	UNUSED						001-099
	17		W2648	0003	20		SPARE	115-199
	18	UNUSED						ALL
	19	UNUSED						ALL
	S/R		W2648	YAAA			32-09-12	001-099
	S/R		W2648	YAAA			32-42-11	115-199
	DED		W2648	2503Z			32-09-12	ALL
D40434P		AW2240/ /		PLUG				ALL
	1	UNUSED						001-099
	1	4K	W4912	4501W	18		32-46-11	115-199
	2	UNUSED						001-099
	2	4G	W4912	4501G	18		32-46-11	115-199
	3		W4912	2502B	20		32-42-11	ALL
	4		W4912	2502Z			32-42-11	ALL
	5		W4912	2502R	20		32-42-11	ALL
	6	UNUSED						ALL
	7		W4912	2501Z			32-42-11	ALL
	8	UNUSED						ALL
	9		W4912	2501B	20		32-42-11	ALL
	10		W4912	2501R	20		32-42-11	ALL
	11		W4912	2001R	18		32-09-12	ALL
	12		W4912	2001B	18		32-09-12	ALL
	13	UNUSED						001-099
	13	4K	W4912	4502W	18		32-46-11	115-199
	14	UNUSED						001-099
	14	4G	W4912	4502G	18		32-46-11	115-199
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
D40440J		AW2179/ /		RCPT-				ALL
	1		W4216	2512R	20		32-61-22	ALL
	2		W4216	2512B	20		32-61-22	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 17

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40440J		AW2179/ /		RCPT- (continued)				ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	S/R		W4216	YAAH			32-61-22	001-099
	S/R		W4216	YAAH			32-61-12	115-199
	DED		W4216	2512Z			32-61-22	ALL
D40440P		AW2179/ /		PLUG				ALL
	1		W4922	A-AA			32-61-22	ALL
	2		W4922	A-AB			32-61-22	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D40442J		AW2240/ /		RCPT-				ALL
	1	UNUSED						001-099
	1		W2644	4502G	20		32-46-11	115-199
	2	UNUSED						001-099
	2		W2644	4502W	20		32-46-11	115-199
	3		W2644	2502B	20		32-42-11	ALL
	4		W2644	2502R	20		32-42-11	ALL
	5		W2644	2502Z			32-42-11	ALL
	6	UNUSED						ALL
	7		W2644	2501Z			32-42-11	ALL
	8	UNUSED						ALL
	9		W2644	2501B	20		32-42-11	ALL
	10		W2644	2501R	20		32-42-11	ALL
	11		W2644	2503R	20		32-09-11	ALL
	12		W2644	2503B	20		32-09-11	ALL
	13	UNUSED						001-099
	13		W2644	4501G	20		32-46-11	115-199
	14	UNUSED						001-099
	14		W2644	4501W	20		32-46-11	115-199
	15		W4212	3502B	18		27-62-11	ALL
	16		W4212	3502R	18		27-62-11	ALL
	17		W2644	0009	20		SPARE	ALL
	18	UNUSED						001-099
	18		W2644	0010	20		SPARE	115-199
	19		W4212	3502Y	18		27-62-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 18

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40442J		AW2240/ /		RCPT- (continued)				ALL
	S/R		W2644	YAAD			32-09-11	ALL
	S/R		W4212	3502Z			27-62-11	ALL
	S/R		W4212	YAAE			27-62-11	ALL
	CAP	Y	W2644	0011	20		SPARE	115-199
	DED		W2644	2503Z			32-09-11	ALL
D40442P		AW2240/ /		PLUG				ALL
	1	UNUSED						001-099
	1	4G	W4910	4502G	18		32-46-11	115-199
	2	UNUSED						001-099
	2	4K	W4910	4502W	18		32-46-11	115-199
	3		W4910	2502B	20		32-42-11	ALL
	4		W4910	2502R	20		32-42-11	ALL
	5		W4910	2502Z			32-42-11	ALL
	6	UNUSED						ALL
	7		W4910	2501Z			32-42-11	ALL
	8	UNUSED						ALL
	9		W4910	2501B	20		32-42-11	ALL
	10		W4910	2501R	20		32-42-11	ALL
	11		W4910	2001R	18		32-09-11	ALL
	12		W4910	2001B	18		32-09-11	ALL
	13	UNUSED						001-099
	13	4G	W4910	4501G	18		32-46-11	115-199
	14	UNUSED						001-099
	14	4K	W4910	4501W	18		32-46-11	115-199
	15		W4910	3001B	20		27-62-11	ALL
	16		W4910	3001R	20		27-62-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W4910	3001Y	20		27-62-11	ALL
D40450J		P71/ /		PLUG				ALL
	1		W1254	0026	22		24-25-11	001-002, 115-199
	1		W1254	0103	22		24-25-11	003-099
	2		W1254	0072	22		24-25-11	001-002, 115-199
	2		W1254	0102	22		24-25-11	003-099
	3	UNUSED						ALL
	4		W1254	3001R	20		24-25-12	001-002, 115-199
	4		W1254	3501R	20		24-25-12	003-099
	5		W1254	3001B	20		24-25-12	001-002, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 19

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40450J		P71/ /		PLUG (continued)				ALL
	5		W1254	3501B	20		24-25-12	003-099
	6		W1254	3001Y	20		24-25-12	001-002, 115-199
	6		W1254	3501Y	20		24-25-12	003-099
	7		W1254	3002B	20		24-25-12	001-002, 115-199
	7		W1254	3501Z			24-25-12	003-099
	8		W1254	3002R	20		24-25-12	001-002, 115-199
	8		W1254	2502R	20		24-25-12	003-099
	9		W1254	3002Y	20		24-25-12	001-002, 115-199
	9		W1254	2502B	20		24-25-12	003-099
	10		W1254	2501B	20		24-25-12	001-002, 115-199
	10		W1254	2502Z			24-25-12	003-099
	11		W1254	2501R	20		24-25-12	001-002, 115-199
	11		W1254	0118	20		24-25-12	003-099
	12		W1254	0058	22		24-25-13	ALL
	13		W1254	2501Z			24-25-12	001-002, 115-199
	13		W1254	2503R	20		24-25-12	003-099
	14	UNUSED						001-002, 115-199
	14		W1254	2503B	20		24-25-12	003-099
	15	UNUSED						001-002, 115-199
	15		W1254	2503Z			24-25-12	003-099
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D40450P		P071-00/ /		PLUG				ALL
	1		W2396	0011	20		24-25-11	ALL
	2		W2396	0010	20		24-25-11	ALL
	3	UNUSED						ALL
	4		W2396	3001R	20		24-25-12	001-002, 115-199
	4		W2396	3501R	20		24-25-12	003-099
	5		W2396	3001B	20		24-25-12	001-002, 115-199
	5		W2396	3501B	20		24-25-12	003-099
	6		W2396	3001Y	20		24-25-12	001-002, 115-199
	6		W2396	3501Y	20		24-25-12	003-099

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 20

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40450P		P071-00/ /		PLUG (continued)				ALL
	7		W2396	3002B	20		24-25-12	001-002, 115-199
	7		W2396	3501Z			24-25-12	003-099
	8		W2396	3002R	20		24-25-12	001-002, 115-199
	8		W2396	2502R	20		24-25-12	003-099
	9		W2396	3002Y	20		24-25-12	001-002, 115-199
	9		W2396	2502B	20		24-25-12	003-099
	10		W2396	2501B	20		24-25-12	001-002, 115-199
	10		W2396	2502Z			24-25-12	003-099
	11		W2396	2501R	20		24-25-12	001-002, 115-199
	11		W2396	0018	20		24-25-12	003-099
	12		W2396	0006	20		24-25-13	ALL
	13		W2396	2501Z			24-25-12	001-002, 115-199
	13		W2396	2503R	20		24-25-12	003-099
	14	UNUSED						001-002, 115-199
	14		W2396	2503B	20		24-25-12	003-099
	15	UNUSED						001-002, 115-199
	15		W2396	2503Z			24-25-12	003-099
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D40452J		P71/ /		PLUG				ALL
	1		W1254	0065	12		24-51-15	ALL
	2		W1254	0066	12		24-51-15	ALL
	3		W1254	0067	12		24-51-15	ALL
	4		W1254	0068	14		24-51-15	ALL
	5		W1254	0069	14		24-51-15	ALL
	6		W1254	0070	14		24-51-15	ALL
	7	UNUSED						ALL
	8		W1254	0075	12		24-51-72	ALL
	9		W1254	0074	12		24-51-72	ALL
	10		W1254	0073	12		24-51-72	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 21

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40452P		P071-00/ /		PLUG				ALL
	1		W2344	0001	12		24-51-15	ALL
	2		W2344	0002	12		24-51-15	ALL
	3		W2344	0003	12		24-51-15	ALL
	4		W2344	0004	14		24-51-15	ALL
	5		W2344	0005	14		24-51-15	ALL
	6		W2344	0006	14		24-51-15	ALL
	7	UNUSED						ALL
	8		W2344	0016	12		24-51-72	ALL
	9		W2344	0015	12		24-51-72	ALL
	10		W2344	0014	12		24-51-72	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D40454J		409/301/L4		RCPT-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W3632	0033	22		33-51-12	ALL
	4		W3632	0034	22		33-51-12	ALL
	5		W3632	0040	20		SPARE	ALL
	6		W3632	0041	20		SPARE	ALL
	7		W3632	2001B	24		21-65-11	ALL
	8		W3632	2001R	24		21-65-11	ALL
	9	UNUSED						ALL
	10		W3632	0162	24		21-61-21	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D40454P		406/296/L005		PLUG				001-099
D40454P		405/296/L5		PLUG				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W2066	0257	22		33-51-11	ALL
	4		W2066	0258	22		33-51-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W2066	2012B	24		21-65-11	ALL
	8		W2066	2012R	24		21-65-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 22

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40454P		406/296/L005		PLUG (continued)				001-099
D40454P		405/296/L5		PLUG (continued)				115-199
	9	UNUSED						ALL
	10		W2066	0429	24		21-61-21	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D40456J		AA0409/ /		RCPT-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W3634	0033	22		33-51-14	ALL
	4		W3634	0034	22		33-51-14	ALL
	5		W3634	0040	20		SPARE	ALL
	6		W3634	0041	20		SPARE	ALL
	7		W3634	2001B	24		21-65-11	ALL
	8		W3634	2001R	24		21-65-11	ALL
	9	UNUSED						ALL
	10		W3634	0162	24		21-61-31	ALL
	11		W3634	0031	22		33-51-14	001-099
	11		W3634	0503	22		33-51-14	115-199
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D40456P		406/296/L005		PLUG				001-099
D40456P		405/296/0		PLUG				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W2066	0191	22		33-51-11	ALL
	4		W2066	0256	22		33-51-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W2066	2013B	24		21-65-11	ALL
	8		W2066	2013R	24		21-65-11	ALL
	9	UNUSED						ALL
	10		W2066	0431	24		21-61-31	ALL
	11		W2066	0362	22		33-51-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 23

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40456P		406/296/L005		PLUG (continued)				001-099
D40456P		405/296/0		PLUG (continued)				115-199
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D40460J		P71/ /		PLUG				ALL
	1		W1254	0059	18		24-51-25	001-002, 115-199
	1		W1254	0059	12		24-51-25	003-099
	2		W1254	0060	18		24-51-25	001-002, 115-199
	2		W1254	0060	12		24-51-25	003-099
	3		W1254	0061	18		24-51-25	001-002, 115-199
	3		W1254	0061	12		24-51-25	003-099
	4		W1254	0062	12		24-51-25	ALL
	5		W1254	0063	12		24-51-25	ALL
	6		W1254	0064	12		24-51-25	ALL
	7	UNUSED						ALL
	8		W1254	0080	22		33-51-11	ALL
	9		W1254	0004	20		24-25-11	001-002, 115-199
	9		W1254	0110	22		24-25-11	003-099
	10	UNUSED						001-002, 115-199
	10		W1254	0153	18		28-22-11	003-099
	11	UNUSED						001-002, 115-199
	11		W1254	0154	18		28-22-11	003-099
	12	UNUSED						ALL
D40460P		P71/ /		PLUG				001-002, 115-199
D40460P		P071-00/ /		PLUG				003-099
	1		W2346	0001	18		24-51-25	001-002, 115-199
	1		W2346	0001	12		24-51-25	003-099
	2		W2346	0002	18		24-51-25	001-002, 115-199
	2		W2346	0002	12		24-51-25	003-099
	3		W2346	0003	18		24-51-25	001-002, 115-199
	3		W2346	0003	12		24-51-25	003-099
	4		W2346	0004	12		24-51-25	ALL
	5		W2346	0005	12		24-51-25	ALL
	6		W2346	0006	12		24-51-25	ALL
	7	UNUSED						ALL
	8		W2346	0010	24		33-51-11	ALL
	9		W2346	0009	20		24-25-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 24

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40460P		P71/ /		PLUG (continued)				001-002, 115-199
D40460P		P071-00/ /		PLUG (continued)				003-099
	10	UNUSED						001-002, 115-199
	10		W2346	0018	18		28-22-11	003-099
	11	UNUSED						001-002, 115-199
	11		W2346	0019	18		28-22-11	003-099
	12	UNUSED						ALL
D40464J		E6-4/ /		RCPT				115-199
	1		W1032	1003	24		29-33-11	115-199
	2	UNUSED						115-199
	3	UNUSED						115-199
	= C1		W1032	1003Z			29-33-11	115-199
D40464P		E6-4/ /		PLUG				115-199
	1		W4210	1001	22		29-33-11	115-199
	2	UNUSED						115-199
	3	UNUSED						115-199
	= C1		W4210	1001Z			29-33-11	115-199
D40471J		AA1705/ /		RCPT-				001-099
D40471J		1705/ /		RCPT-				115-199
	1		W2605	2002R	22		22-11-11	ALL
	2		W2605	2002B	22		22-11-11	ALL
	3		W2605	0004	22		22-11-12	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W2605	2004B	22		22-13-11	ALL
	7		W2605	3003R	22		22-13-11	ALL
	8		W2605	3003B	22		22-13-11	ALL
	9		W2605	3003Y	22		22-13-11	ALL
	10	UNUSED						ALL
	11		W2605	3004R	22		22-13-11	ALL
	12		W2605	3004B	22		22-13-11	ALL
	13		W2605	3004Y	22		22-13-11	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W2605	2004R	22		22-13-11	ALL
	17		W2605	3005R	22		22-13-11	ALL
	18		W2605	3005B	22		22-13-11	ALL
	19		W2605	3005Y	22		22-13-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 25

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40471J		AA1705/ /		RCPT- (continued)				001-099
D40471J		1705/ /		RCPT- (continued)				115-199
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W2605	0003	22		22-11-12	ALL
D40471P		AA1705/ /		PLUG-				ALL
	1		W3101	2001R	20		22-11-11	ALL
	2		W3101	2001B	20		22-11-11	ALL
	3		W3101	0001	20		22-11-12	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W3101	2004B	20		22-13-11	ALL
	7		W3101	3001R	20		22-13-11	ALL
	8		W3101	3001B	20		22-13-11	ALL
	9		W3101	3001Y	20		22-13-11	ALL
	10	UNUSED						ALL
	11		W3101	3002R	20		22-13-11	ALL
	12		W3101	3002B	20		22-13-11	ALL
	13		W3101	3002Y	20		22-13-11	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W3101	2004R	20		22-13-11	ALL
	17		W3101	3003R	20		22-13-11	ALL
	18		W3101	3003B	20		22-13-11	ALL
	19		W3101	3003Y	20		22-13-11	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W3101	0002	20		22-11-12	ALL
D40473J		AA1705/ /		RCPT-				001-099
D40473J		1705/ /		RCPT-				115-199
	1		W2621	2002R	22		22-11-31	ALL
	2		W2621	2002B	22		22-11-31	ALL
	3		W2621	0004	22		22-11-32	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 26

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40473J		AA1705/ /		RCPT- (continued)				001-099
D40473J		1705/ /		RCPT- (continued)				115-199
	6		W2621	2004B	22		22-13-31	ALL
	7		W2621	3003R	22		22-13-31	ALL
	8		W2621	3003B	22		22-13-31	ALL
	9		W2621	3003Y	22		22-13-31	ALL
	10	UNUSED						ALL
	11		W2621	3004R	22		22-13-31	ALL
	12		W2621	3004B	22		22-13-31	ALL
	13		W2621	3004Y	22		22-13-31	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W2621	2004R	22		22-13-31	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W2621	0003	22		22-11-32	ALL
D40473P		AA1705/ /		PLUG-				ALL
	1		W3121	2001R	20		22-11-31	ALL
	2		W3121	2001B	20		22-11-31	ALL
	3		W3121	0001	20		22-11-32	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W3121	2004B	20		22-13-31	ALL
	7		W3121	3001R	20		22-13-31	ALL
	8		W3121	3001B	20		22-13-31	ALL
	9		W3121	3001Y	20		22-13-31	ALL
	10		W3121	3003R	20		22-13-31	ALL
	11		W3121	3002R	20		22-13-31	ALL
	12		W3121	3002B	20		22-13-31	ALL
	13		W3121	3002Y	20		22-13-31	ALL
	14		W3121	3003B	20		22-13-31	ALL
	15		W3121	3003Y	20		22-13-31	ALL
	16		W3121	2004R	20		22-13-31	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 27

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40473P		AA1705/ /		PLUG- (continued)				ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W3121	0002	20		22-11-32	ALL
D40474J		P034-00/ /		RCPT				001-099
D40474J		P34/ /		RCPT				115-199
	1	16	W1240	0015	16		33-21-31	ALL
	2	UNUSED						ALL
	3		W1240	0220	24		33-21-31	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D40474P		P34/ /		PLUG-				ALL
	1	16	W3824	0301	16		33-21-41	ALL
	2	UNUSED						ALL
	3		W3824	0305	24		33-21-41	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 28

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40474P		P34/ /		PLUG- (continued)				ALL
	15	UNUSED						ALL
D40475J		AA1705/ /		RCPT-				001-099
D40475J		1705/ /		RCPT-				115-199
	1		W2631	2001R	22		27-21-12	ALL
	2		W2631	2001B	22		27-21-12	ALL
	3		W2631	3001R	22		27-21-12	ALL
	4		W2631	3001B	22		27-21-12	ALL
	5		W2631	3001Y	22		27-21-12	ALL
	6		W2631	2002R	22		27-21-12	ALL
	7		W2631	2002B	22		27-21-12	ALL
	8		W2631	0001	22		27-21-12	ALL
	9	UNUSED						ALL
	10		W2631	2003R	22		22-21-11	ALL
	11		W2631	2003B	22		22-21-11	ALL
	12		W2631	3002R	22		22-21-11	ALL
	13		W2631	3002B	22		22-21-11	ALL
	14		W2631	3002Y	22		22-21-11	ALL
	15		W2631	2004R	22		22-21-11	ALL
	16		W2631	2004B	22		22-21-11	ALL
	17		W2631	2005R	22		27-21-12	ALL
	18		W2631	2005B	22		27-21-12	ALL
	19		W2631	2006R	22		27-21-12	ALL
	20		W2631	2006B	22		27-21-12	ALL
	21		W2631	0002	18		22-21-11	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W2631	2007R	22		22-21-11	ALL
	25		W2631	2007B	22		22-21-11	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 29

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40475J		AA1705/ /		RCPT- (continued)				001-099
D40475J		1705/ /		RCPT- (continued)				115-199
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
D40475P		AA1705/ /		PLUG-				ALL
	1		W3103	2001R	20		27-21-12	ALL
	2		W3103	2001B	20		27-21-12	ALL
	3		W3103	3001R	20		27-21-12	ALL
	4		W3103	3001B	20		27-21-12	ALL
	5		W3103	3001Y	20		27-21-12	ALL
	6		W3103	2002R	20		27-21-12	ALL
	7		W3103	2002B	20		27-21-12	ALL
	8		W3103	0001	20		27-21-12	ALL
	9	UNUSED						ALL
	10		W3103	2003R	20		22-21-11	ALL
	11		W3103	2003B	20		22-21-11	ALL
	12		W3103	3002R	20		22-21-11	ALL
	13		W3103	3002B	20		22-21-11	ALL
	14		W3103	3002Y	20		22-21-11	ALL
	15		W3103	2004R	20		22-21-11	ALL
	16		W3103	2004B	20		22-21-11	ALL
	17		W3103	2005R	20		27-21-12	ALL
	18		W3103	2005B	20		27-21-12	ALL
	19		W3103	2006R	20		27-21-12	ALL
	20		W3103	2006B	20		27-21-12	ALL
	21		W3103	0002	18		22-21-11	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W3103	2007R	20		22-21-11	ALL
	25		W3103	2007B	20		22-21-11	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 30

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40475P		AA1705/ /		PLUG- (continued)				ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
D40476J		P034-00/ /		RCPT				001-099
D40476J		P34/ /		RCPT				115-199
	1		W1240	0164	20		33-21-11	001-099
	1		W1242	0002	20		33-21-11	115-199
	2	UNUSED						ALL
	3		W1240	0185	24		33-21-11	001-099
	3		W1242	0007	24		33-21-11	115-199
	4	UNUSED						001-099
	4		W1242	0019	22		33-21-51	115-199
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1240	0238	22		33-21-51	001-099
	10	UNUSED						115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D40476P		P34/ /		PLUG-				001-099
D40476P		P34/ /		PLUG-CEILING, RIGHT				115-199
	1		W3614	0301	20		33-21-21	ALL
	2	UNUSED						ALL
	3		W3614	0303	24		33-21-21	ALL
	4	UNUSED						001-099
	4		W3614	0310	20		33-21-51	115-199
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W3614	0308	20		SPARE	001-099
	8	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 31

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40476P		P34/ /		PLUG- (continued)				001-099
D40476P		P34/ /		PLUG-CEILING, RIGHT (continued)				115-199
	9		W3614	0309	20		SPARE	001-099
	9	UNUSED						115-199
	10		W3614	0310	20		33-21-51	001-099
	10	UNUSED						115-199
	11	UNUSED						ALL
	12		W3614	0312	20		SPARE	001-099
	12	UNUSED						115-199
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D40478J		AC0880/ /		RCPT				ALL
	1		W4210	0044	22		26-18-11	001-099
	1		W4210	0044	20		26-18-11	115-199
	2		W4210	0045	22		26-18-11	001-099
	2		W4210	0045	20		26-18-11	115-199
	3		W4210	0046	22		26-18-11	001-099
	3		W4210	0046	20		26-18-11	115-199
	4		W4210	0047	22		26-18-11	001-099
	4		W4210	0047	20		26-18-11	115-199
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	S/R		W4210	YAAD			26-18-11	ALL
D40478P		AC0880/ /		PLUG				ALL
	1		W2400	1001	18		26-18-11	ALL
	2		W2400	1002	18		26-18-11	ALL
	3		W2400	1003	18		26-18-11	ALL
	4		W2400	1004	18		26-18-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	S/R		W2400	1001Z			26-18-11	ALL
	S/R		W2400	1002Z			26-18-11	ALL
	S/R		W2400	1003Z			26-18-11	ALL
	S/R		W2400	1004Z			26-18-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 32

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40480J		E6-4/ /		RCPT				115-199
	1		W1032	1002	24		29-33-11	115-199
	2	UNUSED						115-199
	3	UNUSED						115-199
	=C1		W1032	1002Z			29-33-11	115-199
D40480P		E6-4/ /		PLUG				115-199
	1		W4210	1002	22		29-33-11	115-199
	2	UNUSED						115-199
	3	UNUSED						115-199
	=C1		W4210	1002Z			29-33-11	115-199
D40481J		AA1715/ /		RCPT-				ALL
	1		W2811	0001	20		22-11-22	ALL
	2		W2811	2013B	20		22-11-21	ALL
	3		W2811	2006B	20		22-11-21	ALL
	4		W2811	2006R	20		22-11-21	ALL
	5		W2811	3001R	20		22-12-21	ALL
	6		W2811	3001B	20		22-12-21	ALL
	7		W2811	3001Y	20		22-12-21	ALL
	8		W2811	3002R	20		22-12-21	ALL
	9		W2811	3002B	20		22-12-21	ALL
	10		W2811	3002Y	20		22-12-21	ALL
	11		W2811	2003R	20		22-12-21	ALL
	12		W2811	2003B	20		22-12-21	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 33

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40481J		AA1715/ /		RCPT- (continued)				ALL
	28	UNUSED						ALL
	29		W2811	3005R	20		22-12-21	ALL
	30		W2811	3005B	20		22-12-21	ALL
	31		W2811	3005Y	20		22-12-21	ALL
	32	UNUSED						ALL
	33		W2811	0033	20		27-31-11	ALL
	34		W2811	2013R	20		22-11-21	ALL
	35		W2811	0002	20		22-11-22	ALL
	36		W2811	3009R	20		22-12-21	ALL
	37		W2811	3009B	20		22-12-21	ALL
	38		W2811	3009Y	20		22-12-21	ALL
	39	UNUSED						ALL
D40481P		AA1715/ /		PLUG-				ALL
	1		W2611	0001	22		22-11-22	ALL
	2		W2611	2010B	22		22-11-21	ALL
	3		W2611	2001B	22		22-11-21	ALL
	4		W2611	2001R	22		22-11-21	ALL
	5		W2611	3001R	22		22-12-21	ALL
	6		W2611	3001B	22		22-12-21	ALL
	7		W2611	3001Y	22		22-12-21	ALL
	8		W2611	3002R	22		22-12-21	ALL
	9		W2611	3002B	22		22-12-21	ALL
	10		W2611	3002Y	22		22-12-21	ALL
	11		W2611	2003R	22		22-12-21	ALL
	12		W2611	2003B	22		22-12-21	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 34

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40481P		AA1715/ /		PLUG- (continued)				ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W2611	3010R	22		22-12-21	ALL
	30		W2611	3010B	22		22-12-21	ALL
	31		W2611	3010Y	22		22-12-21	ALL
	32	UNUSED						ALL
	33		W2611	0033	22		27-31-11	ALL
	34		W2611	2010R	22		22-11-21	ALL
	35		W2611	0002	22		22-11-22	ALL
	36		W2611	3009R	22		22-12-21	ALL
	37		W2611	3009B	22		22-12-21	ALL
	38		W2611	3009Y	22		22-12-21	ALL
	39	UNUSED						ALL
D40487J		AA1705/ /		RCPT-				ALL
	1		W2611	2002R	22		22-11-21	ALL
	2		W2611	2002B	22		22-11-21	ALL
	3		W2611	0004	22		22-11-22	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W2611	2004B	22		22-13-21	ALL
	7		W2611	3003R	22		22-13-21	ALL
	8		W2611	3003B	22		22-13-21	ALL
	9		W2611	3003Y	22		22-13-21	ALL
	10	UNUSED						ALL
	11		W2611	3004R	22		22-13-21	ALL
	12		W2611	3004B	22		22-13-21	ALL
	13		W2611	3004Y	22		22-13-21	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W2611	2004R	22		22-13-21	ALL
	17		W2611	3005R	22		22-13-21	ALL
	18		W2611	3005B	22		22-13-21	ALL
	19		W2611	3005Y	22		22-13-21	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W2611	0003	22		22-11-22	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 35

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40487P		AA1705/ /		PLUG-				ALL
	1		W3111	2001R	20		22-11-21	ALL
	2		W3111	2001B	20		22-11-21	ALL
	3		W3111	0001	20		22-11-22	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W3111	2004B	20		22-13-21	ALL
	7		W3111	3001R	20		22-13-21	ALL
	8		W3111	3001B	20		22-13-21	ALL
	9		W3111	3001Y	20		22-13-21	ALL
	10	UNUSED						ALL
	11		W3111	3002R	20		22-13-21	ALL
	12		W3111	3002B	20		22-13-21	ALL
	13		W3111	3002Y	20		22-13-21	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W3111	2004R	20		22-13-21	ALL
	17		W3111	3003R	20		22-13-21	ALL
	18		W3111	3003B	20		22-13-21	ALL
	19		W3111	3003Y	20		22-13-21	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W3111	0002	20		22-11-22	ALL
D40488J		AC0393/ /		RCPT-				ALL
	A		W2052	0001	18		33-42-21	ALL
	B		W2052	0002	16		33-42-21	ALL
	C		W2052	0003	20		33-51-11	001-099
	C		W2052	0003	18		33-51-11	115-199
	D		W2052	0004	20		33-51-11	001-099
	D		W2052	0004	18		33-51-11	115-199
	E		W2052	0005	20		33-51-11	001-099
	E		W2052	0005	18		33-51-11	115-199
	F		W2052	0006	20		33-51-11	001-099
	F		W2052	0006	18		33-51-11	115-199
	G	UNUSED						001-099
	G		W2052	0007	18		33-42-12	115-199
	H		W2052	0009	20		23-43-11	ALL
	I		W2052	0010	20		23-43-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 36

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40488J		AC0393/ /		RCPT- (continued)				ALL
	J		W2052	2005R	20		32-09-12	001-099
	J		W2052	2005R	18		32-09-12	115-199
	K		W2052	2005B	20		32-09-12	001-099
	K		W2052	2005B	18		32-09-12	115-199
	L		W2052	0011	16		33-42-21	ALL
	M		W2052	2501B	20		23-41-12	001-099
	M		W2052	3501B	20		23-41-12	115-199
	N		W2052	2501R	20		23-41-12	001-099
	N		W2052	3501R	20		23-41-12	115-199
	O	UNUSED						ALL
	P	UNUSED						001-099
	P		W2052	0008	12		33-42-12	115-199
	R	UNUSED						001-099
	R		W2052	0012	12		33-42-12	115-199
	S	UNUSED						ALL
	T	UNUSED						ALL
	U	UNUSED						ALL
	V	UNUSED						ALL
	W	UNUSED						001-099
	W		W2052	3501Y	20		23-41-12	115-199
	X		W2052	2501Z			23-41-12	001-099
	X		W2052	3501Z			23-41-12	115-199
	Y		W2052	3502R	20		23-51-13	ALL
	Z		W2052	3502B	20		23-51-13	ALL
	A-		W2052	3502Y	20		23-51-13	ALL
	B-		W2052	3502Z			23-51-13	ALL
	C-		W2052	0013	20		33-51-11	001-099
	C-		W2052	0013	18		33-51-11	115-199
	D-	UNUSED						ALL
	E-	UNUSED						ALL
	F-	UNUSED						ALL
	G-	UNUSED						ALL
	H-	UNUSED						ALL
	J-	UNUSED						ALL
	K-	UNUSED						ALL
D40488P		AC0393/ /		PLUG-				ALL
	A		W3054	0020	20		33-42-21	ALL
	B		W3054	0021	16		33-42-21	ALL
	C		W3054	0003	20		33-51-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 37

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40488P		AC0393/ /		PLUG- (continued)				ALL
	D		W3054	0004	20		33-51-11	ALL
	E		W3054	0005	20		33-51-11	ALL
	F		W3054	0006	20		33-51-11	ALL
	G	UNUSED						001-099
	G		W3054	0019	18		33-42-12	115-199
	H		W3054	0001	18		23-43-11	ALL
	I		W3054	0002	18		23-43-11	ALL
	J		W3054	2001R	18		32-09-12	ALL
	K		W3054	2001B	18		32-09-12	ALL
	L		W3054	0024	16		33-42-21	ALL
	M		W3054	2501B	20		23-41-12	001-099
	M		W3054	3502B	20		23-41-12	115-199
	N		W3054	2501R	20		23-41-12	001-099
	N		W3054	3502R	20		23-41-12	115-199
	O	UNUSED						ALL
	P	UNUSED						001-099
	P		W3054	0018	12		33-42-12	115-199
	R	UNUSED						001-099
	R		W3054	0017	12		33-42-12	115-199
	S	UNUSED						ALL
	T	UNUSED						ALL
	U	UNUSED						ALL
	V	UNUSED						ALL
	W	UNUSED						001-099
	W		W3054	3502Y	20		23-41-12	115-199
	X		W3054	2501Z			23-41-12	001-099
	X		W3054	3502Z			23-41-12	115-199
	Y		W3054	3501R	20		23-51-13	ALL
	Z		W3054	3501B	20		23-51-13	ALL
	A-		W3054	3501Y	20		23-51-13	ALL
	B-		W3054	3501Z			23-51-13	ALL
	C-		W3054	0013	20		33-51-11	ALL
	D-	UNUSED						ALL
	E-	UNUSED						ALL
	F-	UNUSED						ALL
	G-	UNUSED						ALL
	H-	UNUSED						ALL
	J-	UNUSED						ALL
	K-	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 38

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40489J		AA1705/ /		RCPT-				ALL
	1		W2617	2001R	22		27-21-22	ALL
	2		W2617	2001B	22		27-21-22	ALL
	3		W2617	3001R	22		27-21-22	ALL
	4		W2617	3001B	22		27-21-22	ALL
	5		W2617	3001Y	22		27-21-22	ALL
	6		W2617	2002R	22		27-21-22	ALL
	7		W2617	2002B	22		27-21-22	ALL
	8		W2617	2003R	22		22-21-21	ALL
	9		W2617	2003B	22		22-21-21	ALL
	10		W2617	3002R	22		22-21-21	ALL
	11		W2617	3002B	22		22-21-21	ALL
	12		W2617	3002Y	22		22-21-21	ALL
	13		W2617	2004R	22		22-21-21	ALL
	14		W2617	2004B	22		22-21-21	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W2617	2005R	22		27-21-22	ALL
	18		W2617	2005B	22		27-21-22	ALL
	19		W2617	2006R	22		27-21-22	ALL
	20		W2617	2006B	22		27-21-22	ALL
	21		W2617	0001	18		22-21-21	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W2617	2007R	22		22-21-21	ALL
	25		W2617	2007B	22		22-21-21	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 39

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40489P		AA1705/ /		PLUG-				ALL
	1		W3113	2001R	20		27-21-22	ALL
	2		W3113	2001B	20		27-21-22	ALL
	3		W3113	3001R	20		27-21-22	ALL
	4		W3113	3001B	20		27-21-22	ALL
	5		W3113	3001Y	20		27-21-22	ALL
	6		W3113	2002R	20		27-21-22	ALL
	7		W3113	2002B	20		27-21-22	ALL
	8		W3113	2003R	20		22-21-21	ALL
	9		W3113	2003B	20		22-21-21	ALL
	10		W3113	3002R	20		22-21-21	ALL
	11		W3113	3002B	20		22-21-21	ALL
	12		W3113	3002Y	20		22-21-21	ALL
	13		W3113	2004R	20		22-21-21	ALL
	14		W3113	2004B	20		22-21-21	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W3113	2005R	20		27-21-22	ALL
	18		W3113	2005B	20		27-21-22	ALL
	19		W3113	2006R	20		27-21-22	ALL
	20		W3113	2006B	20		27-21-22	ALL
	21		W3113	0001	18		22-21-21	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W3113	2007R	20		22-21-21	ALL
	25		W3113	2007B	20		22-21-21	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 40

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40490J		P37/ /		RCPT				ALL
	1		W1270	0115	20		33-42-21	ALL
	2		W1270	0060	24		33-51-11	001-099
	2		W1270	0060	18		33-51-11	115-199
	3		W1270	0061	24		33-51-11	001-099
	3		W1270	0061	18		33-51-11	115-199
	4		W1270	0062	24		33-51-11	001-099
	4		W1270	0062	18		33-51-11	115-199
	5		W1270	0063	24		33-51-11	001-099
	5		W1270	0063	18		33-51-11	115-199
	6	UNUSED						001-099
	6		W1270	0114	20		33-42-12	115-199
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
D40490P		P037-00/ /		PLUG				ALL
	1		W2052	0001	18		33-42-21	ALL
	2		W2052	0003	20		33-51-11	001-099
	2		W2052	0003	18		33-51-11	115-199
	3		W2052	0004	20		33-51-11	001-099
	3		W2052	0004	18		33-51-11	115-199
	4		W2052	0005	20		33-51-11	001-099
	4		W2052	0005	18		33-51-11	115-199
	5		W2052	0006	20		33-51-11	001-099
	5		W2052	0006	18		33-51-11	115-199
	6	UNUSED						001-099
	6		W2052	0007	18		33-42-12	115-199
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
D40491J		AA1715/ /		RCPT-				ALL
	1		W2801	0001	20		22-11-12	ALL
	2		W2801	2013B	20		22-11-11	ALL
	3		W2801	2006B	20		22-11-11	ALL
	4		W2801	2006R	20		22-11-11	ALL
	5		W2801	3001R	20		22-12-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 41

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40491J		AA1715/ /		RCPT- (continued)				ALL
	6		W2801	3001B	20		22-12-11	ALL
	7		W2801	3001Y	20		22-12-11	ALL
	8		W2801	3002R	20		22-12-11	ALL
	9		W2801	3002B	20		22-12-11	ALL
	10		W2801	3002Y	20		22-12-11	ALL
	11		W2801	2003R	20		22-12-11	ALL
	12		W2801	2003B	20		22-12-11	ALL
	13		W2801	0006	20		27-31-12	ALL
	14		W2801	0007	20		27-31-12	ALL
	15		W2801	0008	20		27-31-12	ALL
	16		W2801	0009	20		27-31-12	ALL
	17		W2801	3003R	20		22-12-11	ALL
	18		W2801	3003B	20		22-12-11	ALL
	19		W2801	3003Y	20		22-12-11	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34		W2801	2013R	20		22-11-11	ALL
	35		W2801	0002	20		22-11-12	ALL
	36		W2801	3009R	20		22-12-11	ALL
	37		W2801	3009B	20		22-12-11	ALL
	38		W2801	3009Y	20		22-12-11	ALL
	39	UNUSED						ALL
D40491P		AA1715/ /		PLUG-				ALL
	1		W2605	0001	22		22-11-12	ALL
	2		W2605	2010B	22		22-11-11	ALL
	3		W2605	2001B	22		22-11-11	ALL
	4		W2605	2001R	22		22-11-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 42

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40491P		AA1715/ /		PLUG- (continued)				ALL
	5		W2605	3001R	22		22-12-11	ALL
	6		W2605	3001B	22		22-12-11	ALL
	7		W2605	3001Y	22		22-12-11	ALL
	8		W2605	3002R	22		22-12-11	ALL
	9		W2605	3002B	22		22-12-11	ALL
	10		W2605	3002Y	22		22-12-11	ALL
	11		W2605	2003R	22		22-12-11	ALL
	12		W2605	2003B	22		22-12-11	ALL
	13		W2605	0006	20		27-31-12	ALL
	14		W2605	0007	20		27-31-12	ALL
	15		W2605	0008	20		27-31-12	ALL
	16		W2605	0009	20		27-31-12	ALL
	17		W2605	3010R	22		22-12-11	ALL
	18		W2605	3010B	22		22-12-11	ALL
	19		W2605	3010Y	22		22-12-11	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34		W2605	2010R	22		22-11-11	ALL
	35		W2605	0002	22		22-11-12	ALL
	36		W2605	3009R	22		22-12-11	ALL
	37		W2605	3009B	22		22-12-11	ALL
	38		W2605	3009Y	22		22-12-11	ALL
	39	UNUSED						ALL
D40492J		E5-2/ /		RCPT				ALL
	1		W1284	0017	22		24-21-21	ALL
	2		W1284	0018	22		24-21-21	ALL
	3		W1284	0020	24		24-22-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 43

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40492J		E5-2/ /		RCPT (continued)				ALL
	4		W1284	0019	22		24-21-21	ALL
	5	UNUSED						ALL
	6		W1284	0092	18		24-22-22	ALL
	7		W1284	0168	22		32-42-12	001-099
	7	UNUSED						115-199
	8		W1284	0062	18		24-22-21	ALL
	9		W1284	5023Z			24-22-22	ALL
	10		W1284	4005G	24		24-23-11	ALL
	11		W1284	4005B	24		24-23-11	ALL
	12		W1284	4005Y	24		24-23-11	ALL
	13		W1284	4005R	24		24-23-11	ALL
	14		W1284	4006G	24		24-23-11	ALL
	15		W1284	0091	22		24-22-22	ALL
	16		W1284	4006B	24		24-23-11	ALL
	17		W1284	4006Y	24		24-23-11	ALL
	18		W1284	4006R	24		24-23-11	ALL
	19		W1284	5023B	24		24-22-22	ALL
	20		W1284	5023R	24		24-22-22	ALL
	21		W1284	0093	24		24-22-22	ALL
	22		W1284	0094	22		24-22-22	ALL
	23		W1284	0063	24		24-22-21	ALL
	24		W1284	0064	22		24-22-21	ALL
	25		W1284	0065	22		24-22-21	ALL
	26		W1284	0169	22		32-42-12	001-099
	26	UNUSED						115-199
	27		W1284	0090	22		24-22-22	ALL
	28	UNUSED						ALL
	29		W1284	5045R	22		32-42-11	001-099
	29	UNUSED						115-199
	30		W1284	5045B	22		32-42-11	001-099
	30	UNUSED						115-199
	31	UNUSED						ALL
	32		W1284	5045Z			32-42-11	001-099
	32	UNUSED						115-199
D40492P		E005-02/ /		PLUG-				ALL
	1		W4502	0034	18		24-21-21	ALL
	2		W4502	0035	18		24-21-21	ALL
	3		W4502	0111	20		24-22-11	ALL
	4		W4502	0036	18		24-21-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 44

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40492P		E005-02/ /		PLUG- (continued)				ALL
	5		W4502	0607	22		SPARE	ALL
	6		W4502	0037	18		24-22-22	ALL
	7		W4502	0014	22		32-42-12	001-099
	7	UNUSED						115-199
	8		W4502	0038	18		24-22-21	ALL
	9		W4502	2504Z			24-22-22	ALL
	10		W4502	4002G	24		24-23-11	ALL
	11		W4502	4002B	24		24-23-11	ALL
	12		W4502	4002Y	24		24-23-11	ALL
	13		W4502	4002R	24		24-23-11	ALL
	14		W4502	4003G	24		24-23-11	ALL
	15		W4502	0006	20		24-22-22	ALL
	16		W4502	4003B	24		24-23-11	ALL
	17		W4502	4003Y	24		24-23-11	ALL
	18		W4502	4003R	24		24-23-11	ALL
	19		W4502	2504B	24		24-22-22	ALL
	20		W4502	2504R	24		24-22-22	ALL
	21		W4502	0010	24		24-22-22	ALL
	22		W4502	0007	20		24-22-22	ALL
	23		W4502	0011	24		24-22-21	ALL
	24		W4502	0012	20		24-22-21	ALL
	25		W4502	0013	20		24-22-21	ALL
	26		W4502	0024	22		32-42-12	001-099
	26	UNUSED						115-199
	27		W4502	0015	22		24-22-22	ALL
	28	UNUSED						001-099
	28		W4502	0602	22		SPARE	115-199
	29		W4502	5001R	22		32-42-11	001-099
	29		W4502	0603	22		SPARE	115-199
	30		W4502	5001B	22		32-42-11	001-099
	30	UNUSED						115-199
	31		W4502	0611	22		SPARE	ALL
	32		W4502	5001Z			32-42-11	001-099
	32	UNUSED						115-199
D40494J		AA409/ /		RCPT-				ALL
	1		W3672	0013	24		38-32-11	001-099
	1		W3672	0013	18		38-32-11	115-199
	2		W3672	0014	24		38-32-11	001-099
	2		W3672	0014	18		38-32-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 45

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40494J		AA409/ /		RCPT- (continued)				ALL
	3		W3672	0015	24		38-32-11	001-099
	3		W3672	0015	18		38-32-11	115-199
	4		W3672	0016	24		38-32-11	001-099
	4		W3672	0016	18		38-32-11	115-199
	5		W3672	0017	24		38-32-11	001-099
	5		W3672	0017	18		38-32-11	115-199
	6		W3672	0018	24		38-32-11	001-099
	6		W3672	0018	18		38-32-11	115-199
	7	UNUSED						ALL
	8		W3672	0175	20		SPARE	001-099
	8	UNUSED						115-199
	9	UNUSED						ALL
	10	UNUSED						ALL
D40494P		AA0409/ /		PLUG-				ALL
	1		W0130	0305	24		38-32-11	001-099
	1		W0130	0305	18		38-32-11	115-199
	2		W0130	0306	24		38-32-11	001-099
	2		W0130	0306	18		38-32-11	115-199
	3		W0130	0307	24		38-32-11	001-099
	3		W0130	0307	18		38-32-11	115-199
	4		W0130	0302	24		38-32-11	001-099
	4		W0130	0302	18		38-32-11	115-199
	5		W0130	0303	24		38-32-11	001-099
	5		W0130	0303	18		38-32-11	115-199
	6		W0130	0304	24		38-32-11	001-099
	6		W0130	0304	18		38-32-11	115-199
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
D40495J		P010-00/ /		RCPT				ALL
	1		W1115	0356	22		27-62-11	ALL
	2		W1115	0357	22		27-62-11	ALL
	3		W1115	0302	22		22-12-21	ALL
	4		W1115	0301	22		22-12-21	ALL
	5	UNUSED						ALL
	6		W1115	0406	22		32-42-12	ALL
	7	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 46

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40495J		P010-00/ /		RCPT (continued)				ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W1115	0401	22		32-42-12	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W1115	0409	22		32-42-12	ALL
	18		W1115	0402	22		32-42-12	ALL
	19	UNUSED						ALL
	20		W1115	0412	22		31-51-41	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D40495P		AP0010/ /		PLUG				001-099
D40495P		P10/ /		PLUG				115-199
	1		W2357	0004	20		27-62-11	ALL
	2		W2357	0005	20		27-62-11	ALL
	3		W2357	0006	22		22-12-21	ALL
	4		W2357	0007	22		22-12-21	ALL
	5	UNUSED						ALL
	6		W2357	0038	22		32-42-12	001-099
	6		W2357	0038	24		32-42-12	115-199
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W2355	0091	22		32-42-12	001-099
	12		W2355	0091	24		32-42-12	115-199
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W2357	0025	22		32-42-12	ALL
	18		W2357	0028	22		32-42-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 47

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40495P		AP0010/ /		PLUG (continued)				001-099
D40495P		P10/ /		PLUG (continued)				115-199
	19	UNUSED						ALL
	20		W2357	0047	24		31-51-41	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D40496J		P37/ /		RCPT				ALL
	1		W1270	0516	24		24-51-71	001-099
	1	UNUSED						115-199
	2		W1270	0091	24		38-32-21	001-099
	2		W1270	0091	20		38-32-21	115-199
	3	16	W1270	0040	16		33-26-11	001-099
	3		W1270	0040	22		33-26-11	115-199
	4		W1270	0038	22		33-26-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1272	0229	22		33-26-11	001-099
	7		W1272	0229	20		33-26-11	115-199
	8		W1272	0307	22		38-32-21	001-099
	8	UNUSED						115-199
	9	UNUSED						001-099
	9		W1270	0051	22		33-27-31	115-199
	10	UNUSED						001-099
	10		W1270	0053	22		33-27-31	115-199
	11	UNUSED						001-099
	11		W1270	0052	22		33-27-31	115-199
	12	16	W1270	0044	16		33-26-21	001-099
	12		W1270	0044	22		33-26-21	115-199
	13	UNUSED						ALL
	14		W1270	0073	22		38-13-11	001-099
	14	UNUSED						115-199
	15	UNUSED						ALL
	16		W1270	0074	22		38-13-11	001-099
	16	UNUSED						115-199
	17		W1270	0030	20		33-24-11	001-099
	17	UNUSED						115-199
	18	UNUSED						ALL
	19		W1270	0047	22		33-26-31	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 48

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40496J		P37/ /		RCPT (continued)				ALL
	19	UNUSED						115-199
	20		W1270	0514	24		24-51-71	001-099
	20	UNUSED						115-199
	21		W1270	6464	20		38-13-11	001-099
	21	18	W1270	0073	18		38-13-11	115-199
	22	UNUSED						001-099
	22		W1270	0047	22		33-26-31	115-199
	23		W1270	0046	22		33-26-31	001-099
	23	18	W1270	0074	18		38-13-11	115-199
	24		W1272	0218	14		24-53-51	001-099
	24	UNUSED						115-199
	25	UNUSED						ALL
	26		W1270	0046	22		33-26-31	115-199
	27		W1272	0307	20		38-32-21	115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	18	W1270	0370	18		33-24-11	115-199
	31		W1270	0030	20		33-24-11	115-199
D40496P		P37/ /		PLUG-				ALL
	1		W3572	0164	24		24-51-71	001-099
	1	UNUSED						115-199
	2		W3572	0084	24		38-32-21	001-099
	2		W3572	0166	20		38-32-21	115-199
	3	16	W3572	0033	16		33-26-11	001-099
	3		W3572	0033	22		33-26-11	115-199
	4		W3572	0036	22		33-26-11	ALL
	5		W3572	0090	20		SPARE	ALL
	6		W3572	0091	20		SPARE	ALL
	7		W3572	0037	22		33-26-11	ALL
	8		W3572	0078	22		38-32-21	001-099
	8	UNUSED						115-199
	9	UNUSED						001-099
	9		W3572	0063	22		33-27-31	115-199
	10	UNUSED						001-099
	10		W3572	0064	22		33-27-31	115-199
	11	UNUSED						001-099
	11		W3572	0065	22		33-27-31	115-199
	12	16	W3572	0048	16		33-26-21	001-099
	12		W3572	0048	22		33-26-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 49

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40496P		P37/ /		PLUG- (continued)				ALL
	13		W3572	0092	20		SPARE	ALL
	14		W3572	0128	22		38-13-11	001-099
	14		W3572	0093	20		SPARE	115-199
	15		W3572	0155	20		SPARE	001-099
	15	UNUSED						115-199
	16		W3572	0067	22		38-13-11	001-099
	16	UNUSED						115-199
	17		W3572	0111	20		33-24-11	001-099
	17	UNUSED						115-199
	18		W3572	0177	24		SPARE	001-099
	18	UNUSED						115-199
	19		W3572	0126	22		33-26-31	001-099
	19	UNUSED						115-199
	20		W3572	0165	24		24-51-71	001-099
	20	UNUSED						115-199
	21		W3572	0093	20		38-13-11	001-099
	21	18	W3572	0158	18		38-13-11	115-199
	22	UNUSED						001-099
	22		W3572	0060	22		33-26-31	115-199
	23		W3572	0059	22		33-26-31	001-099
	23	18	W3572	0067	18		38-13-11	115-199
	24		W4510	0014	14		24-53-51	001-099
	24	UNUSED						115-199
	25	UNUSED						ALL
	26		W3572	0059	22		33-26-31	115-199
	27		W3572	0078	20		38-32-21	115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	18	W3572	0112	18		33-24-11	115-199
	31	18	W3572	0111	18		33-24-11	115-199
D40497J		AA1715/ /		RCPT-				ALL
	1		W2821	0001	20		22-11-32	ALL
	2		W2821	3004B	20		27-48-21	ALL
	3		W2821	2006B	20		22-11-31	ALL
	4		W2821	2006R	20		22-11-31	ALL
	5		W2821	3001R	20		22-12-31	ALL
	6		W2821	3001B	20		22-12-31	ALL
	7		W2821	3001Y	20		22-12-31	ALL
	8		W2821	3002R	20		22-12-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 50

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40497J		AA1715/ /		RCPT- (continued)				ALL
	9		W2821	3002B	20		22-12-31	ALL
	10		W2821	3002Y	20		22-12-31	ALL
	11		W2821	2003R	20		22-12-31	ALL
	12		W2821	2003B	20		22-12-31	ALL
	13		W2821	3004R	20		27-48-21	ALL
	14		W2821	0002	20		22-11-32	ALL
	15		W2821	3004Y	20		27-48-21	ALL
	16		W2821	2007R	20		27-48-21	ALL
	17		W2821	2007B	20		27-48-21	ALL
	18		W2821	3005B	20		22-12-31	ALL
	19		W2821	3005R	20		22-12-31	ALL
	20		W2821	3005Y	20		22-12-31	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W2821	0029	20		31-51-41	ALL
	26		W2821	0026	20		27-23-11	ALL
	27		W2821	0027	20		27-23-11	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34		W2821	2013R	20		22-11-31	ALL
	35		W2821	2013B	20		22-11-31	ALL
	36		W2821	3009R	20		22-12-31	ALL
	37		W2821	3009B	20		22-12-31	ALL
	38		W2821	3009Y	20		22-12-31	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D40497P		AA1715/ /		PLUG-				ALL
	1		W2621	0001	22		22-11-32	ALL
	2		W2621	3007B	24		27-48-21	ALL
	3		W2621	2001B	22		22-11-31	ALL
	4		W2621	2001R	22		22-11-31	ALL
	5		W2621	3001R	22		22-12-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 51

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40497P		AA1715/ /		PLUG- (continued)				ALL
	6		W2621	3001B	22		22-12-31	ALL
	7		W2621	3001Y	22		22-12-31	ALL
	8		W2621	3002R	22		22-12-31	ALL
	9		W2621	3002B	22		22-12-31	ALL
	10		W2621	3002Y	22		22-12-31	ALL
	11		W2621	2003R	22		22-12-31	ALL
	12		W2621	2003B	22		22-12-31	ALL
	13		W2621	3007R	24		27-48-21	ALL
	14		W2621	0002	22		22-11-32	ALL
	15		W2621	3007Y	24		27-48-21	ALL
	16		W2621	2007R	24		27-48-21	ALL
	17		W2621	2007B	24		27-48-21	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W2621	0025	22		31-51-41	ALL
	26		W2621	0026	22		27-23-11	ALL
	27		W2621	0027	22		27-23-11	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34		W2621	2010R	22		22-11-31	ALL
	35		W2621	2010B	22		22-11-31	ALL
	36		W2621	3009R	22		22-12-31	ALL
	37		W2621	3009B	22		22-12-31	ALL
	38		W2621	3009Y	22		22-12-31	ALL
	39		W2621	3010R	22		SPARE	ALL
	40		W2621	3010B	22		SPARE	ALL
	41		W2621	3010Y	22		SPARE	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40400

Page 52 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40501J		P010-00/ /		RCPT				ALL
	1		W1115	0310	22		22-12-11	ALL
	2		W1115	0300	22		22-12-11	ALL
	3		W1115	0325	22		22-32-15	ALL
	4		W1115	0323	22		22-32-15	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W1115	0328	22		22-32-15	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1115	0360	22		27-62-11	ALL
	15		W1115	0359	22		27-62-11	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W1115	0352	22		27-62-11	ALL
	22	UNUSED						ALL
	23		W1115	0353	22		27-62-11	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W1115	0397	22		27-62-11	ALL
	28		W1115	0361	22		27-62-11	ALL
	29		W1115	0358	22		27-62-11	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34		W1115	0397	22		27-62-11	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40500

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40501J		P010-00/ /		RCPT (continued)				ALL
	41	UNUSED						ALL
D40501P		P10/ /		PLUG				ALL
	1		W2355	0008	22		22-12-11	ALL
	2		W2355	0009	22		22-12-11	ALL
	3		W2355	0010	24		22-32-15	ALL
	4		W2355	0011	24		22-32-15	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W2355	0014	24		22-32-15	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W2355	0038	20		27-62-11	ALL
	15		W2355	0039	20		27-62-11	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W2355	0040	20		27-62-11	ALL
	22	UNUSED						ALL
	23		W2355	0041	20		27-62-11	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W2355	0048	22		27-62-11	ALL
	28		W2355	0049	20		27-62-11	001-099
	28		W2355	0049	22		27-62-11	115-199
	29		W2355	0050	22		27-62-11	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34		W2355	0055	22		27-62-11	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40500

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40501P		P10/ /		PLUG (continued)				ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D40503J		P010-00/ /		RCPT				ALL
	1		W1115	0331	22		22-12-31	ALL
	2		W1115	0312	22		22-12-31	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1115	0439	22		SPARE	001-099
	10	UNUSED						115-199
	11		W1115	0438	22		SPARE	001-099
	11	UNUSED						115-199
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W1115	2002R	22		SPARE	001-099
	19		W1115	2002R	22		31-31-31	115-199
	20		W1115	2002B	22		SPARE	001-099
	20		W1115	2002B	22		31-31-31	115-199
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W1115	0440	22		SPARE	001-099
	24		W1115	0440	22		31-31-31	115-199
D40503P		P010-00/ /		PLUG-				ALL
	1		W2359	0006	22		22-12-31	ALL
	2		W2359	0005	22		22-12-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40500

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40503P		P010-00/ /		PLUG- (continued)				ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						001-099
	10		W2359	0010	22		SPARE	115-199
	11	UNUSED						001-099
	11		W2359	0009	22		SPARE	115-199
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						001-099
	19		W2359	2005R	22		31-31-31	115-199
	20	UNUSED						001-099
	20		W2359	2005B	22		31-31-31	115-199
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						001-099
	24		W2359	0008	22		31-31-31	115-199
D40505J		AW1156/ /		RCPT-				ALL
	1		W3311	4501WR	20		27-61-14	001-099
	1		W2443	2001R	20		27-61-14	115-199
	2	UNUSED						ALL
	3		W3311	4501WB	20		27-61-14	001-099
	3		W2443	2001B	20		27-61-14	115-199
	4	UNUSED						ALL
	5		W3311	4501WO	20		27-61-14	001-099
	5		W2443	2002B	20		27-61-14	115-199
	6		W3311	4501WN	20		27-61-14	001-099
	6	UNUSED						115-199
	7		W3311	4501RB	20		27-61-14	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40500

Page 4

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40505J		AW1156/ /		RCPT- (continued)				ALL
	7		W2443	2002R	20		27-61-14	115-199
	8		W3311	4501WK	20		27-61-14	001-099
	8		W2443	2003B	20		27-61-14	115-199
	9		W3311	4501WV	20		27-61-14	001-099
	9		W2443	2003R	20		27-61-14	115-199
	10	UNUSED						ALL
	S/R		W3311	4501Z			27-61-14	001-099
	S/R		W2443	YAAB			27-61-14	115-199
D40505P		AW1156/ /		PLUG				ALL
	1		W2443	2001R	20		27-61-14	001-099
	1		W3311	4501WR	20		27-61-14	115-199
	2	UNUSED						ALL
	3		W2443	2001B	20		27-61-14	001-099
	3		W3311	4501WB	20		27-61-14	115-199
	4	UNUSED						ALL
	5		W2443	2002B	20		27-61-14	001-099
	5		W3311	4501WO	20		27-61-14	115-199
	6	UNUSED						001-099
	6		W3311	4501WN	20		27-61-14	115-199
	7		W2443	2002R	20		27-61-14	001-099
	7		W3311	4501RB	20		27-61-14	115-199
	8		W2443	2003B	20		27-61-14	001-099
	8		W3311	4501WK	20		27-61-14	115-199
	9		W2443	2003R	20		27-61-14	001-099
	9		W3311	4501WV	20		27-61-14	115-199
	10	UNUSED						ALL
	S/R		W2443	YAAB			27-61-14	001-099
	S/R		W3311	4501Z			27-61-14	115-199
D40518J		E6-4/ /		RCPT				115-199
	1		W1032	1001	24		29-33-11	115-199
	2	UNUSED						115-199
	3	UNUSED						115-199
	= C1		W1032	1001Z			29-33-11	115-199
D40518P		E6-4/ /		PLUG				115-199
	1		W4220	1001	22		29-33-11	115-199
	2	UNUSED						115-199
	3	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D40500

Page 5

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40518P		E6-4/ /		PLUG (continued)				115-199
	= C1		W4220	1001Z			29-33-11	115-199
D40519J		AW2164/ /		RCPT-				ALL
	1		W3411	4501WR	20		27-61-14	001-099
	1		W2443	2004R	20		27-61-14	115-199
	2	UNUSED						ALL
	3		W3411	4501WB	20		27-61-14	001-099
	3		W2443	2004B	20		27-61-14	115-199
	4	UNUSED						ALL
	5		W3411	4501WO	20		27-61-14	001-099
	5		W2443	2005B	20		27-61-14	115-199
	6		W3411	4501WN	20		27-61-14	001-099
	6	UNUSED						115-199
	7		W3411	4501RB	20		27-61-14	001-099
	7		W2443	2005R	20		27-61-14	115-199
	8		W3411	4501WK	20		27-61-14	001-099
	8		W2443	2006B	20		27-61-14	115-199
	9		W3411	4501WV	20		27-61-14	001-099
	9		W2443	2006R	20		27-61-14	115-199
	10	UNUSED						ALL
	S/R		W3411	4501Z			27-61-14	001-099
	S/R		W2443	YAAC			27-61-14	115-199
D40519P		AW2164/ /		PLUG				ALL
	1		W2443	2004R	20		27-61-14	001-099
	1		W3411	4501WR	20		27-61-14	115-199
	2	UNUSED						ALL
	3		W2443	2004B	20		27-61-14	001-099
	3		W3411	4501WB	20		27-61-14	115-199
	4	UNUSED						ALL
	5		W2443	2005B	20		27-61-14	001-099
	5		W3411	4501WO	20		27-61-14	115-199
	6	UNUSED						001-099
	6		W3411	4501WN	20		27-61-14	115-199
	7		W2443	2005R	20		27-61-14	001-099
	7		W3411	4501RB	20		27-61-14	115-199
	8		W2443	2006B	20		27-61-14	001-099
	8		W3411	4501WK	20		27-61-14	115-199
	9		W2443	2006R	20		27-61-14	001-099
	9		W3411	4501WV	20		27-61-14	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40500

Page 6

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40519P		AW2164/ /		PLUG (continued)				ALL
	10	UNUSED						ALL
	S/R		W2443	YAAC			27-61-14	001-099
	S/R		W3411	4501Z			27-61-14	115-199
D40523J		AP0001/ /		RCPT				ALL
	1		W2241	2508B	24		77-12-31	001-099
	1		W2241	2508B	24		SPARE	115-199
	2		W2241	2508R	24		77-12-31	001-099
	2		W2241	2508R	24		SPARE	115-199
	3		W2241	2508Z			77-12-31	001-099
	3		W2241	2508Z			SPARE	115-199
	4		W2241	2509B	24		SPARE	001-099
	4		W2241	2509B	24		77-12-31	115-199
	5		W2241	2509R	24		SPARE	001-099
	5		W2241	2509R	24		77-12-31	115-199
	6		W2241	2509Z			SPARE	001-099
	6		W2241	2509Z			77-12-31	115-199
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W2241	0050	22		34-16-11	ALL
	11		W2241	0046	22		34-22-16	ALL
	12		W2241	0012	24		34-46-11	ALL
	13		W2241	0013	22		34-61-15	ALL
	14		W2241	0044	22		31-51-43	ALL
	15		W2241	0008	22		22-34-11	ALL
	16		W2241	0038	24		SPARE	001-099
	16		W2241	0038	22		SPARE	115-199
	17		W2241	0017	22		34-46-11	ALL
	18		W2241	0018	22		34-46-11	ALL
	19		W2241	0039	22		34-46-11	ALL
	20		W2241	5011R	24		77-11-11	ALL
	21		W2241	5011B	24		77-11-11	ALL
	22		W2241	5011Z			77-11-11	ALL
	23	UNUSED						001-099
	23		W2241	0040	22		SPARE	115-199
	24		W2241	0001	24		34-12-12	ALL
	25	UNUSED						001-099
	25		W2241	0041	22		SPARE	115-199
	26		W2241	0026	22		34-16-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40500

Page 7

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40523J		AP0001/ /		RCPT (continued)				ALL
	27	UNUSED						ALL
	28	UNUSED						001-099
	28		W2241	0028	22		SPARE	115-199
	29		W2241	0029	22		34-12-61	ALL
	30	UNUSED						001-099
	30		W2241	0030	22		34-12-61	115-199
	31		W2241	0031	24		SPARE	ALL
	32		W2241	0087	22		32-42-12	ALL
	33		W2241	0081	22		32-42-12	ALL
	34		W2241	0082	22		32-42-12	ALL
	35		W2241	0080	22		32-42-12	ALL
	36	UNUSED						001-099
	36		W2241	0090	22		SPARE	115-199
	37		W2241	0088	22		32-42-12	ALL
	38	UNUSED						001-099
	38		W2241	2518R	24		SPARE	115-199
	39	UNUSED						001-099
	39		W2241	2518B	24		SPARE	115-199
	40	UNUSED						001-099
	40		W2241	2518Z			SPARE	115-199
	41		W2241	0030	22		34-12-61	001-099
	41	UNUSED						115-199
	42		W2241	0112	22		32-42-12	ALL
	43		W2241	0113	22		32-42-12	ALL
	44		W2241	2520R	24		SPARE	ALL
	45		W2241	2520B	24		SPARE	ALL
	46		W2241	2520Z			SPARE	ALL
	47		W2241	0075	22		32-42-12	ALL
	48	UNUSED						001-099
	48		W2241	0043	22		SPARE	115-199
	49		W2241	0077	22		32-42-12	ALL
	50		W2241	0078	22		32-42-12	ALL
	51		W2241	0079	22		32-42-12	ALL
	52		W2241	0076	22		32-42-12	ALL
	53		W2241	0070	22		26-11-11	ALL
	54		W2241	0074	22		79-33-11	ALL
	55		W2241	0083	22		32-42-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40500

Page 8

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40523P		217.6/198/L34		PLUG				001-099
D40523P		AP0001/ /		PLUG				115-199
	1		W0001	2509B	24		77-12-31	001-099
	1	UNUSED						115-199
	2		W0001	2509R	24		77-12-31	001-099
	2	UNUSED						115-199
	3		W0001	FRAC			77-12-31	001-099
	3	UNUSED						115-199
	4	UNUSED						001-099
	4		W0001	2509B	24		77-12-31	115-199
	5	UNUSED						001-099
	5		W0001	2509R	24		77-12-31	115-199
	6	UNUSED						001-099
	6		W0001	FRAF			77-12-31	115-199
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0001	0110	22		34-16-11	ALL
	11		W0001	0491	22		34-22-16	ALL
	12		W0001	0019	24		34-46-11	ALL
	13		W0001	0013	22		34-61-15	ALL
	14		W0001	0153	24		31-51-43	ALL
	15		W0001	0015	22		22-34-11	ALL
	16	UNUSED						ALL
	17		W0001	0022	22		34-46-11	ALL
	18		W0001	0011	22		34-46-11	ALL
	19		W0001	0001	22		34-46-11	ALL
	20		W0001	5011R	24		77-11-11	ALL
	21		W0001	5011B	24		77-11-11	ALL
	22		W0001	5011Z			77-11-11	ALL
	23	UNUSED						ALL
	24		W0001	0007	24		34-12-12	ALL
	25	UNUSED						ALL
	26		W0001	0026	22		34-16-11	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W0001	0275	22		34-12-61	ALL
	30	UNUSED						001-099
	30		W0001	0276	22		34-12-61	115-199
	31	UNUSED						ALL
	32		W0001	0475	22		32-42-12	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40500

Page 9

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40523P		217.6/198/L34		PLUG (continued)				001-099
D40523P		AP0001/ /		PLUG (continued)				115-199
	32		W0001	0435	22		32-42-12	115-199
	33		W0001	0668	22		32-42-12	ALL
	34		W0001	0116	22		32-42-12	ALL
	35		W0001	0141	22		32-42-12	ALL
	36	UNUSED						ALL
	37		W0001	0129	22		32-42-12	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41		W0001	0276	22		34-12-61	001-099
	41	UNUSED						115-199
	42		W0001	0436	22		32-42-12	001-099
	42		W0001	0440	22		32-42-12	115-199
	43		W0001	0667	22		32-42-12	ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47		W0001	0054	22		32-42-12	ALL
	48	UNUSED						ALL
	49		W0001	0138	22		32-42-12	ALL
	50		W0001	0139	22		32-42-12	ALL
	51		W0001	0140	22		32-42-12	ALL
	52		W0001	0137	22		32-42-12	ALL
	53		W0001	0042	24		26-11-11	ALL
	54		W0001	0125	22		79-33-11	ALL
	55		W0001	0055	22		32-42-12	ALL
			W0001	FRAC			77-12-31	001-099
			W0001	0064	20		77-12-31	ALL
			W0001	2509Z			77-12-31	ALL
			W0001	FRAF			77-12-31	115-199
D40525J		P3-3/ /		RCPT				ALL
	1		W0033	0017	24		34-22-81	001-099
	1		W0033	0017	24		34-22-83	115-199
	2		W0033	0016	20		34-22-81	001-099
	2		W0033	0016	20		34-22-83	115-199
	3		W0033	0186	24		34-22-27	001-099
	3		W0033	0186	24		34-61-26	115-199
	4	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D40500

Page 10

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40525J		P3-3/ /		RCPT (continued)				ALL
	4		W0033	0070	22		34-61-26	115-199
	5		W0033	0029	22		33-16-51	ALL
	6		W0033	0030	22		33-16-61	ALL
	7		W0033	0005	24		34-22-27	ALL
	8		W0033	0006	24		34-22-27	ALL
	9		W0033	0007	20		34-22-27	ALL
	10		W0033	0003	24		34-22-27	ALL
	11		W0033	0004	20		34-22-27	ALL
	12	UNUSED						001-099
	12		W0033	0071	22		34-61-26	115-199
	13		W0033	0013	22		34-32-11	ALL
	14		W0033	0014	22		34-32-11	ALL
	15		W0033	0015	22		34-32-11	ALL
	16		W0033	0009	24		34-22-27	ALL
	17		W0033	0008	20		34-22-27	ALL
	18		W0033	0018	24		34-22-37	ALL
	19		W0033	0019	24		34-22-37	ALL
	20	UNUSED						001-099
	20		W0033	0072	22		34-61-26	115-199
	21		W0033	0001	24		34-22-92	ALL
	22		W0033	0002	20		34-22-92	ALL
	23		W0033	0032	22		34-12-62	ALL
	24		W0033	0022	24		34-22-37	ALL
	25		W0033	0021	20		34-22-37	ALL
	26	UNUSED						001-099
	26		W0033	0082	22		34-61-25	115-199
	27		W0033	0012	24		34-21-31	ALL
	28		W0033	0010	20		34-22-27	ALL
	29		W0033	0011	22		34-22-27	ALL
	30	UNUSED						001-099
	30		W0033	0080	22		34-61-25	115-199
	31		W0033	0033	24		34-22-27	ALL
	32	UNUSED						001-099
	32		W0033	0081	22		34-61-25	115-199
	33		W0033	0043	22		34-12-62	ALL
	34		W0033	0054	22		34-22-26	ALL
	35		W0033	0055	20		34-22-26	ALL
	36	UNUSED						001-099
	36		W0033	0100	22		34-61-18	115-199
	37	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D40500

Page 11

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40525J		P3-3/ /		RCPT (continued)				ALL
	37		W0033	0101	22		34-61-18	115-199
	38	UNUSED						001-099
	38		W0033	0102	22		34-61-18	115-199
	39	UNUSED						001-099
	39		W0033	0103	22		34-61-18	115-199
	40	UNUSED						001-099
	40		W0033	0104	22		34-61-18	115-199
	41	UNUSED						001-099
	41		W0033	0105	22		34-61-18	115-199
D40525P		P3-3/ /		PLUG				ALL
	1		W0003	0068	24		34-22-81	001-099
	1		W0003	0068	24		34-22-83	115-199
	2		W0003	0067	20		34-22-81	001-099
	2		W0003	0067	20		34-22-83	115-199
	3		W0003	0500	24		34-22-27	001-099
	3		W0003	0500	24		34-61-26	115-199
	4	UNUSED						001-099
	4		W0003	0600	22		34-61-26	115-199
	5		W0003	0082	22		33-16-11	001-099
	5		W0003	0082	22		33-16-51	115-199
	6		W0003	0093	22		33-16-61	ALL
	7		W0003	0169	24		34-22-27	ALL
	8		W0003	0168	24		34-22-27	ALL
	9		W0003	0170	20		34-22-27	ALL
	10		W0003	0171	24		34-22-27	ALL
	11		W0003	0180	20		34-22-27	ALL
	12	UNUSED						001-099
	12		W0003	0601	22		34-61-26	115-199
	13		W0003	0035	22		34-32-11	ALL
	14		W0003	0036	22		34-32-11	ALL
	15		W0003	0037	22		34-32-11	ALL
	16		W0003	0051	24		34-22-27	ALL
	17		W0003	0188	20		34-22-27	ALL
	18		W0003	0164	24		34-22-37	ALL
	19		W0003	0189	24		34-22-37	ALL
	20	UNUSED						001-099
	20		W0003	0602	22		34-61-26	115-199
	21		W0003	0033	24		34-22-92	ALL
	22		W0003	0034	20		34-22-92	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40500

Page 12

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40525P		P3-3/ /		PLUG (continued)				ALL
	23	UNUSED						ALL
	24		W0003	0564	24		34-22-37	ALL
	25		W0003	0023	20		34-22-37	ALL
I	26	UNUSED						001-099
I	26		W0003	0703	22		34-61-25	115-199
	27		W0003	0041	24		34-21-31	ALL
	28		W0003	0163	20		34-22-27	ALL
	29		W0003	0058	24		34-22-27	ALL
I	30	UNUSED						001-099
I	30		W0003	0701	22		34-61-25	115-199
	31		W0003	0019	24		34-22-27	ALL
I	32	UNUSED						001-099
I	32		W0003	0702	22		34-61-25	115-199
	33	UNUSED						ALL
	34		W0003	0050	22		34-22-26	001-099
	34		W0003	0050	24		34-22-26	115-199
	35		W0003	0049	20		34-22-26	ALL
I	36	UNUSED						001-099
I	36		W0003	0400	22		34-61-18	115-199
I	37	UNUSED						001-099
I	37		W0003	0401	22		34-61-18	115-199
I	38	UNUSED						001-099
I	38		W0003	0402	22		34-61-18	115-199
I	39	UNUSED						001-099
I	39		W0003	0403	22		34-61-18	115-199
I	40	UNUSED						001-099
I	40		W0003	0404	22		34-61-18	115-199
I	41	UNUSED						001-099
I	41		W0003	0405	22		34-61-18	115-199
D40529J		AW1180/ /		RCPT-				ALL
	1		W3315	4501WR	20		27-61-15	001-099
	1		W2445	2001R	20		27-61-15	115-199
	2	UNUSED						ALL
	3		W3315	4501WB	20		27-61-15	001-099
	3		W2445	2001B	20		27-61-15	115-199
	4	UNUSED						ALL
	5		W3315	4501WO	20		27-61-15	001-099
	5		W2445	2002B	20		27-61-15	115-199
	6		W3315	4501WN	20		27-61-15	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40500

Page 13

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40529J		AW1180/ /		RCPT- (continued)				ALL
	6	UNUSED						115-199
	7		W3315	4501RB	20		27-61-15	001-099
	7		W2445	2002R	20		27-61-15	115-199
	8		W3315	4501WK	20		27-61-15	001-099
	8		W2445	2003B	20		27-61-15	115-199
	9		W3315	4501WV	20		27-61-15	001-099
	9		W2445	2003R	20		27-61-15	115-199
	10	UNUSED						ALL
	S/R		W3315	4501Z			27-61-15	001-099
	S/R		W2445	YAAB			27-61-15	115-199
D40529P		AW1180/ /		PLUG				001-099
D40529P		AW1180/ /		PLUG-				115-199
	1		W2445	2001R	20		27-61-15	001-099
	1		W3315	4501WR	20		27-61-15	115-199
	2	UNUSED						ALL
	3		W2445	2001B	20		27-61-15	001-099
	3		W3315	4501WB	20		27-61-15	115-199
	4	UNUSED						ALL
	5		W2445	2002B	20		27-61-15	001-099
	5		W3315	4501WO	20		27-61-15	115-199
	6	UNUSED						001-099
	6		W3315	4501WN	20		27-61-15	115-199
	7		W2445	2002R	20		27-61-15	001-099
	7		W3315	4501RB	20		27-61-15	115-199
	8		W2445	2003B	20		27-61-15	001-099
	8		W3315	4501WK	20		27-61-15	115-199
	9		W2445	2003R	20		27-61-15	001-099
	9		W3315	4501WV	20		27-61-15	115-199
	10	UNUSED						ALL
	S/R		W2445	YAAB			27-61-15	001-099
	S/R		W3315	4501Z			27-61-15	115-199
D40541J		AW2180/ /		RCPT-				ALL
	1		W3415	4501WR	20		27-61-15	001-099
	1		W2445	2004R	20		27-61-15	115-199
	2	UNUSED						ALL
	3		W3415	4501WB	20		27-61-15	001-099
	3		W2445	2004B	20		27-61-15	115-199
	4	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40500

Page 14

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40541J		AW2180/ /		RCPT- (continued)				ALL
	5		W3415	4501WO	20		27-61-15	001-099
	5		W2445	2005B	20		27-61-15	115-199
	6		W3415	4501WN	20		27-61-15	001-099
	6	UNUSED						115-199
	7		W3415	4501RB	20		27-61-15	001-099
	7		W2445	2005R	20		27-61-15	115-199
	8		W3415	4501WK	20		27-61-15	001-099
	8		W2445	2006B	20		27-61-15	115-199
	9		W3415	4501WV	20		27-61-15	001-099
	9		W2445	2006R	20		27-61-15	115-199
	10	UNUSED						ALL
	S/R		W3415	4501Z			27-61-15	001-099
	S/R		W2445	YAAA			27-61-15	115-199
D40541P		AW2180/ /		PLUG				001-099
D40541P		AW2180/ /		PLUG-				115-199
	1		W2445	2004R	20		27-61-15	001-099
	1		W3415	4501WR	20		27-61-15	115-199
	2	UNUSED						ALL
	3		W2445	2004B	20		27-61-15	001-099
	3		W3415	4501WB	20		27-61-15	115-199
	4	UNUSED						ALL
	5		W2445	2005B	20		27-61-15	001-099
	5		W3415	4501WO	20		27-61-15	115-199
	6	UNUSED						001-099
	6		W3415	4501WN	20		27-61-15	115-199
	7		W2445	2005R	20		27-61-15	001-099
	7		W3415	4501RB	20		27-61-15	115-199
	8		W2445	2006B	20		27-61-15	001-099
	8		W3415	4501WK	20		27-61-15	115-199
	9		W2445	2006R	20		27-61-15	001-099
	9		W3415	4501WV	20		27-61-15	115-199
	10	UNUSED						ALL
	S/R		W2445	YAAA			27-61-15	001-099
	S/R		W3415	4501Z			27-61-15	115-199
D40542J		P36/ /		RCPT				ALL
	1	UNUSED						ALL
	2	16	W1260	0496	16		29-11-22	ALL
	3	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40500

Page 15

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40542J		P36/ /		RCPT (continued)				ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1260	5912	22		29-11-31	001-099
	6		W1260	8525	22		29-11-31	115-199
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1260	5655	24		24-22-22	ALL
	11		W1260	0039	24		24-28-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D40542P		P036-00/ /		PLUG				ALL
	1		W4500	0021	22		SPARE	ALL
	2	16	W4500	0030	16		29-11-22	ALL
	3	UNUSED						001-099
	3		W4500	0609	20		SPARE	115-199
	4	UNUSED						001-099
	4		W4500	0610	20		SPARE	115-199
	5	UNUSED						001-099
	5		W4500	0601	20		SPARE	115-199
	6		W4500	0032	22		29-11-31	ALL
	7	UNUSED						001-099
	7		W4500	0037	20		SPARE	115-199
	8	UNUSED						001-099
	8		W4500	0602	20		SPARE	115-199
	9	UNUSED						001-099
	9		W4500	0603	20		SPARE	115-199
	10		W4500	0606	24		24-22-22	001-099
	10		W4500	0606	20		24-22-22	115-199
	11		W4500	0003	24		24-28-11	ALL
	12	UNUSED						001-099
	12		W4500	0607	20		SPARE	115-199
	13	UNUSED						001-099
	13		W4500	0608	20		SPARE	115-199
	14		W4500	0011	24		SPARE	001-099
	14	UNUSED						115-199
	15	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40500

Page 16

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40543J		AW1164/ /		RCPT-				ALL
	1		W3319	4501WR	20		27-61-16	001-099
	1		W2447	2001R	20		27-61-16	115-199
	2	UNUSED						ALL
	3		W3319	4501WB	20		27-61-16	001-099
	3		W2447	2001B	20		27-61-16	115-199
	4	UNUSED						ALL
	5		W3319	4501WO	20		27-61-16	001-099
	5		W2447	2002B	20		27-61-16	115-199
	6		W3319	4501WN	20		27-61-16	001-099
	6	UNUSED						115-199
	7		W3319	4501RB	20		27-61-16	001-099
	7		W2447	2002R	20		27-61-16	115-199
	8		W3319	4501WK	20		27-61-16	001-099
	8		W2447	2003B	20		27-61-16	115-199
	9		W3319	4501WV	20		27-61-16	001-099
	9		W2447	2003R	20		27-61-16	115-199
	10	UNUSED						ALL
	S/R		W3319	4501Z			27-61-16	001-099
	S/R		W2447	YAAA			27-61-16	115-199
D40543P		AW1164/ /		PLUG				ALL
	1		W2447	2001R	20		27-61-16	001-099
	1		W3319	4501WR	20		27-61-16	115-199
	2	UNUSED						ALL
	3		W2447	2001B	20		27-61-16	001-099
	3		W3319	4501WB	20		27-61-16	115-199
	4	UNUSED						ALL
	5		W2447	2002B	20		27-61-16	001-099
	5		W3319	4501WO	20		27-61-16	115-199
	6	UNUSED						001-099
	6		W3319	4501WN	20		27-61-16	115-199
	7		W2447	2002R	20		27-61-16	001-099
	7		W3319	4501RB	20		27-61-16	115-199
	8		W2447	2003B	20		27-61-16	001-099
	8		W3319	4501WK	20		27-61-16	115-199
	9		W2447	2003R	20		27-61-16	001-099
	9		W3319	4501WV	20		27-61-16	115-199
	10	UNUSED						ALL
	S/R		W2447	YAAA			27-61-16	001-099
	S/R		W3319	4501Z			27-61-16	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40500

Page 17

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40570J		P37/ /		RCPT				ALL
	1		W1270	0458	24		36-11-41	ALL
	2	UNUSED						001-099
	2		W1270	0231	22		29-22-11	115-199
	3		W1270	0867	22		29-22-11	ALL
	4		W1270	0870	22		29-22-11	ALL
	5		W1270	0069	24		34-33-31	ALL
	6	UNUSED						ALL
	7		W1270	0168	24		29-35-11	ALL
	8	UNUSED						ALL
	9	UNUSED						001-099
	9		W1270	0453	24		36-11-41	115-199
	10	UNUSED						001-099
	10		W1270	0089	22		29-22-11	115-199
	11	UNUSED						001-099
	11		W1270	0467	24		36-11-41	115-199
	12	UNUSED						001-099
	12		W1270	0459	24		36-11-41	115-199
	13		W1270	0452	24		36-11-41	ALL
	14		W1270	0101	24		31-51-42	ALL
	15		W1270	0864	22		29-22-11	ALL
	16		W1270	0027	24		31-51-41	ALL
	17		W1270	0868	22		29-22-11	ALL
	18		W1270	0871	22		29-22-11	001-099
	18		W1270	0905	22		29-22-11	115-199
	19		W1270	0087	22		29-22-11	ALL
	20		W1270	0865	22		29-22-11	ALL
	21		W1270	5994	24		26-15-12	ALL
	22		W1270	0823	22		77-12-41	001-099
	22		W1270	0822	22		77-12-41	115-199
	23		W1270	0453	24		36-11-41	001-099
	23	UNUSED						115-199
	24	UNUSED						001-099
	24		W1270	0230	22		29-22-11	115-199
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W1270	0652	24		21-58-12	ALL
	28		W1270	5542	24		21-58-21	ALL
	29		W1270	0643	24		21-25-11	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40500

Page 18

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40570J		P37/ /		RCPT (continued)				ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39		W1270	0326	22		30-11-11	001-099
	39		W1270	0322	22		30-11-11	115-199
	40	UNUSED						ALL
	41		W1270	6405	20		24-11-21	ALL
	42		W1270	6406	20		24-11-21	ALL
	43		W1270	5714	22		30-11-11	ALL
	44		W1270	0447	24		36-11-31	ALL
	45		W1270	0448	24		36-11-31	ALL
	46		W1270	0023	24		26-11-21	ALL
	47		W1270	0901	20		74-31-21	ALL
	48		W1270	0889	20		74-31-21	ALL
	49		W1270	0649	24		21-58-12	ALL
	50		W1270	0105	22		30-11-11	ALL
	51		W1270	0103	22		30-11-11	ALL
	52		W1270	0104	22		30-11-11	ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55		W1270	0462	24		36-11-41	001-099
	55	UNUSED						115-199
D40570P		P037-00/ /		PLUG				001-099
D40570P		P37/ /		PLUG				115-199
	1		W2078	0013	24		36-11-41	ALL
	2		W2078	0026	22		SPARE	001-099
	2		W2078	0026	22		29-22-11	115-199
	3		W2078	0034	22		29-22-11	ALL
	4		W2078	0028	22		29-22-11	ALL
	5		W2078	0015	24		34-33-31	ALL
	6		W2078	0036	22		SPARE	ALL
	7		W2078	0193	24		29-33-11	ALL
	8	UNUSED						001-099
	8		W2078	0126	24		SPARE	115-199
	9		W2078	0530	22		SPARE	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40500

Page 19

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40570P		P037-00/ /		PLUG (continued)				001-099
D40570P		P37/ /		PLUG (continued)				115-199
	9	UNUSED	W2078	0002	24		36-11-41	115-199
	10							001-099
	10		W2078	0047	22		29-22-11	115-199
	11		W2078	0531	22		SPARE	001-099
	11		W2078	0069	24		36-11-41	115-199
	12		W2078	0532	24		SPARE	001-099
	12		W2078	0001	24		36-11-41	115-199
	13		W2078	0127	24		36-11-41	ALL
	14		W2078	0066	24		31-51-42	ALL
	15		W2078	0048	22		29-22-11	ALL
	16		W2078	0065	24		31-51-41	ALL
	17		W2078	0051	22		29-22-11	ALL
	18		W2078	0320	20		29-22-11	ALL
	19		W2078	0321	20		29-22-11	ALL
	20		W2078	0322	20		29-22-11	ALL
	21		W2078	0323	22		26-15-12	ALL
	22		W2078	0324	22		77-12-41	ALL
	23		W2078	0002	24		36-11-41	001-099
	23	UNUSED						115-199
	24	UNUSED						001-099
	24		W2078	0212	22		29-22-11	115-199
	25	UNUSED						001-099
	25		W2078	0327	20		SPARE	115-199
	26	UNUSED						ALL
	27		W2078	0130	24		21-58-12	ALL
	28		W2078	0131	24		21-58-21	ALL
	29		W2078	0310	24		21-25-11	ALL
	30		W2078	0387	20		SPARE	ALL
	31		W2078	0388	20		SPARE	ALL
	32	UNUSED						001-099
	32		W2078	0389	20		SPARE	115-199
	33	UNUSED						001-099
	33		W2078	0390	20		SPARE	115-199
	34	UNUSED						001-099
	34		W2078	0391	20		SPARE	115-199
	35		W2078	0392	20		SPARE	ALL
	36		W2078	0393	20		SPARE	ALL
	37	UNUSED						001-099
	37		W2078	0394	20		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40500

Page 20

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40570P		P037-00/ /		PLUG (continued)				001-099
D40570P		P37/ /		PLUG (continued)				115-199
	38		W2078	0395	20		SPARE	ALL
	39		W2078	0467	22		30-11-11	ALL
	40		W2078	0397	20		SPARE	ALL
	41	16	W2078	0007	16		24-11-21	ALL
	42		W2078	0197	20		24-11-21	ALL
	43		W2078	0455	22		30-11-11	ALL
	44		W2078	0508	24		36-11-31	ALL
	45		W2078	0509	24		36-11-31	ALL
	46		W2078	0061	22		26-11-21	ALL
	47		W2078	0017	20		74-31-21	ALL
	48		W2078	0020	20		74-31-21	ALL
	49		W2078	0180	24		21-58-12	ALL
	50		W2078	0464	22		30-11-11	ALL
	51		W2078	0460	22		30-11-11	ALL
	52		W2078	0461	22		30-11-11	ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55		W2078	0001	24		36-11-41	001-099
	55	UNUSED						115-199
D40571J		AW2156/ /		RCPT-				ALL
	1		W3419	4501WR	20		27-61-16	001-099
	1		W2447	2004R	20		27-61-16	115-199
	2	UNUSED						ALL
	3		W3419	4501WB	20		27-61-16	001-099
	3		W2447	2004B	20		27-61-16	115-199
	4	UNUSED						ALL
	5		W3419	4501WO	20		27-61-16	001-099
	5		W2447	2005B	20		27-61-16	115-199
	6		W3419	4501WN	20		27-61-16	001-099
	6	UNUSED						115-199
	7		W3419	4501RB	20		27-61-16	001-099
	7		W2447	2005R	20		27-61-16	115-199
	8		W3419	4501WK	20		27-61-16	001-099
	8		W2447	2006B	20		27-61-16	115-199
	9		W3419	4501WV	20		27-61-16	001-099
	9		W2447	2006R	20		27-61-16	115-199
	10	UNUSED						ALL
	S/R		W3419	4501Z			27-61-16	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40500

Page 21

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40571J		AW2156/ /		RCPT- (continued)				ALL
	S/R		W2447	YAAB			27-61-16	115-199
D40571P		AW2156/ /		PLUG				001-099
D40571P		AW2156/ /		PLUG-				115-199
	1		W2447	2004R	20		27-61-16	001-099
	1		W3419	4501WR	20		27-61-16	115-199
	2	UNUSED						ALL
	3		W2447	2004B	20		27-61-16	001-099
	3		W3419	4501WB	20		27-61-16	115-199
	4	UNUSED						ALL
	5		W2447	2005B	20		27-61-16	001-099
	5		W3419	4501WO	20		27-61-16	115-199
	6	UNUSED						001-099
	6		W3419	4501WN	20		27-61-16	115-199
	7		W2447	2005R	20		27-61-16	001-099
	7		W3419	4501RB	20		27-61-16	115-199
	8		W2447	2006B	20		27-61-16	001-099
	8		W3419	4501WK	20		27-61-16	115-199
	9		W2447	2006R	20		27-61-16	001-099
	9		W3419	4501WV	20		27-61-16	115-199
	10	UNUSED						ALL
	S/R		W2447	YAAB			27-61-16	001-099
	S/R		W3419	4501Z			27-61-16	115-199
D40573J		AC1148/190/L70		RCPT-				ALL
	1		W3301	4501WR	20		27-61-13	ALL
	2	UNUSED						ALL
	3		W3301	4501WB	20		27-61-13	ALL
	4	UNUSED						ALL
	5		W3301	4501WO	20		27-61-13	ALL
	6		W3301	4501WN	20		27-61-13	ALL
	7		W3301	4501RB	20		27-61-13	ALL
	8		W3301	4501WK	20		27-61-13	ALL
	9		W3301	4501WV	20		27-61-13	ALL
	10	UNUSED						ALL
	S/R		W3301	4501Z			27-61-13	ALL
D40573P		AC1148/ /		PLUG-				ALL
	1		W2441	2001R	20		27-61-13	ALL
	2		W2441	2007R	20		SPARE	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40500

Page 22

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40573P		AC1148/ /		PLUG- (continued)				ALL
	3		W2441	2001B	20		27-61-13	ALL
	4		W2441	2007B	20		SPARE	ALL
	5		W2441	2002B	20		27-61-13	ALL
	6	UNUSED						ALL
	7		W2441	2002R	20		27-61-13	ALL
	8		W2441	2003B	20		27-61-13	ALL
	9		W2441	2003R	20		27-61-13	ALL
	10	UNUSED						ALL
D40574J		P36/ /		RCPT				001-099
	1	UNUSED						001-099
	2	UNUSED						001-099
	3	UNUSED						001-099
	4		W1260	0045	22		27-23-11	001-099
	5		W1260	5663	22		27-23-11	001-099
	6		W1260	5662	22		27-23-11	001-099
	7	UNUSED						001-099
	8	UNUSED						001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
D40574P		P036-00/ /		PLUG-				001-099
	1	UNUSED						001-099
	2	UNUSED						001-099
	3		W4204	0192	22		SPARE	001-099
	4		W4204	0142	22		27-23-11	001-099
	5		W4204	0141	20		27-23-11	001-099
	6		W4204	0140	20		27-23-11	001-099
	7		W4204	0193	22		SPARE	001-099
	8	UNUSED						001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
D40575J		AD1148/ /		RCPT-				ALL
	1		W3401	4501WR	20		27-61-13	ALL
	2	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40500

Page 23

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40575J		AD1148/ /		RCPT- (continued)				ALL
	3		W3401	4501WB	20		27-61-13	ALL
	4	UNUSED						ALL
	5		W3401	4501WO	20		27-61-13	ALL
	6		W3401	4501WN	20		27-61-13	ALL
	7		W3401	4501RB	20		27-61-13	ALL
	8		W3401	4501WK	20		27-61-13	ALL
	9		W3401	4501WV	20		27-61-13	ALL
	10	UNUSED						ALL
	S/R		W3401	4501Z			27-61-13	ALL
D40575P		1148/ /		PLUG-				ALL
	1		W2441	2004R	20		27-61-13	ALL
	2	UNUSED						ALL
	3		W2441	2004B	20		27-61-13	ALL
	4	UNUSED						ALL
	5		W2441	2005B	20		27-61-13	ALL
	6	UNUSED						ALL
	7		W2441	2005R	20		27-61-13	ALL
	8		W2441	2006B	20		27-61-13	ALL
	9		W2441	2006R	20		27-61-13	ALL
	10	UNUSED						ALL
D40577J		AC1148/ /		RCPT-				ALL
	1		W3305	4501WR	20		27-61-17	ALL
	2	UNUSED						ALL
	3		W3305	4501WB	20		27-61-17	ALL
	4	UNUSED						ALL
	5		W3305	4501WO	20		27-61-17	ALL
	6		W3305	4501WN	20		27-61-17	ALL
	7		W3305	4501RB	20		27-61-17	ALL
	8		W3305	4501WK	20		27-61-17	ALL
	9		W3305	4501WV	20		27-61-17	ALL
	10	UNUSED						ALL
	S/R		W3305	4501Z			27-61-17	ALL
D40577P		AC1148/ /		PLUG-				ALL
	1		W2449	2001R	20		27-61-17	ALL
	2	UNUSED						ALL
	3		W2449	2001B	20		27-61-17	ALL
	4	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40500

Page 24

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40577P		AC1148/ /		PLUG- (continued)				ALL
	5		W2449	2002B	20		27-61-17	ALL
	6	UNUSED						ALL
	7		W2449	2002R	20		27-61-17	ALL
	8		W2449	2003B	20		27-61-17	ALL
	9		W2449	2003R	20		27-61-17	ALL
	10	UNUSED						ALL
D40579J		AD1148/ /		RCPT-				ALL
	1		W3405	4501WR	20		27-61-17	ALL
	2	UNUSED						ALL
	3		W3405	4501WB	20		27-61-17	ALL
	4	UNUSED						ALL
	5		W3405	4501WO	20		27-61-17	ALL
	6		W3405	4501WN	20		27-61-17	ALL
	7		W3405	4501RB	20		27-61-17	ALL
	8		W3405	4501WK	20		27-61-17	ALL
	9		W3405	4501WV	20		27-61-17	ALL
	10	UNUSED						ALL
	S/R		W3405	4501Z			27-61-17	ALL
D40579P		AD1148/ /		PLUG-				ALL
	1		W2449	2004R	20		27-61-17	ALL
	2	UNUSED						ALL
	3		W2449	2004B	20		27-61-17	ALL
	4	UNUSED						ALL
	5		W2449	2005B	20		27-61-17	ALL
	6	UNUSED						ALL
	7		W2449	2005R	20		27-61-17	ALL
	8		W2449	2006B	20		27-61-17	ALL
	9		W2449	2006R	20		27-61-17	ALL
	10	UNUSED						ALL
D40580J		P031-00/ /		RCPT				ALL
	1	UNUSED						ALL
	2	16	W1136	0017	16		29-11-31	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						001-099
	5		W1136	2001R	22		29-11-22	115-199
	6	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D40500

Page 25

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40580J		P031-00/ /		RCPT (continued)				ALL
	6		W1136	2001B	22		29-11-22	115-199
	7	UNUSED						001-099
	7		W1136	2002B	22		29-11-31	115-199
	8	UNUSED						001-099
	8		W1136	2002R	22		29-11-31	115-199
	9		W1136	0318	20		24-22-12	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W1136	0124	24		24-51-71	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						001-099
	18	18	W1136	0353	18		25-31-33	115-199
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W1136	0315	20		24-22-11	ALL
	25	UNUSED						ALL
	26		W1136	0144	24		24-27-11	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D40580P		P031-00/ /		PLUG				001-099
D40580P		P31/ /		PLUG				115-199
	1	UNUSED						ALL
	2	16	W2066	0407	16		29-11-31	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						001-099
	5		W2066	2018R	22		29-11-22	115-199
	6	UNUSED						001-099
	6		W2066	2018B	22		29-11-22	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40500

Page 26

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40580P		P031-00/ /		PLUG (continued)				001-099
D40580P		P31/ /		PLUG (continued)				115-199
	7	UNUSED						001-099
	7		W2066	2017B	22		29-11-31	115-199
	8	UNUSED						001-099
	8		W2066	2017R	22		29-11-31	115-199
	9		W2066	0109	20		24-22-12	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W2066	0122	24		24-51-71	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						001-099
	18	18	W2066	1007	18		25-31-33	115-199
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W2066	0108	20		24-22-11	ALL
	25	UNUSED						ALL
	26		W2066	0111	24		24-27-11	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	DED		W2066	1007Z			25-31-33	115-199
D40581J		AC1148/ /		RCPT-				ALL
	1		W3309	4501WR	20		27-61-18	ALL
	2	UNUSED						ALL
	3		W3309	4501WB	20		27-61-18	ALL
	4	UNUSED						ALL
	5		W3309	4501WO	20		27-61-18	ALL
	6		W3309	4501WN	20		27-61-18	ALL
	7		W3309	4501RB	20		27-61-18	ALL
	8		W3309	4501WK	20		27-61-18	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40500

Page 27

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40581J		AC1148/ /		RCPT- (continued)				ALL
	9		W3309	4501WV	20		27-61-18	ALL
	10	UNUSED						ALL
	S/R		W3309	4501Z			27-61-18	ALL
D40581P		AC1148/ /		PLUG-				ALL
	1		W2451	2001R	20		27-61-18	ALL
	2	UNUSED						ALL
	3		W2451	2001B	20		27-61-18	ALL
	4	UNUSED						ALL
	5		W2451	2002B	20		27-61-18	ALL
	6	UNUSED						ALL
	7		W2451	2002R	20		27-61-18	ALL
	8		W2451	2003B	20		27-61-18	ALL
	9		W2451	2003R	20		27-61-18	ALL
	10	UNUSED						ALL
D40582J		P36/ /		RCPT				ALL
	1		W1260	0004	20		21-45-11	ALL
	2		W1260	5502	20		21-45-11	ALL
	3		W1260	5503	20		21-45-11	001-099
	3		W1260	5505	20		21-45-11	115-199
	4		W1260	8554	22		29-11-22	ALL
	5	UNUSED						001-099
	5		W1260	0965	24		21-58-24	115-199
	6	UNUSED						001-099
	6		W1260	5625	24		21-58-24	115-199
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W1260	5788	24		34-12-12	ALL
	10		W1260	0110	24		34-12-12	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40500

Page 28

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40582J		P36/ /		RCPT (continued)				ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W1260	0243	24		27-58-11	ALL
	25		W1260	0783	22		30-32-11	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	18	W1260	5864	18		28-22-11	ALL
	29		W1260	8030	22		30-34-21	001-099
	29	18	W1260	5865	18		28-22-11	115-199
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W1260	0070	20		33-42-11	ALL
	33		W1260	5661	22		27-23-11	ALL
	34		W1260	0046	22		27-23-11	ALL
	35		W1260	0045	22		27-23-11	ALL
	36	UNUSED						001-099
	36		W1260	8030	22		30-34-21	115-199
	37	UNUSED						ALL
	38		W1260	8536	22		30-34-21	ALL
	39	UNUSED						ALL
	40		W1260	8519	20		33-42-12	001-099
	40	UNUSED						115-199
	41	UNUSED						ALL
	42	18	W1260	5865	18		28-22-11	001-099
	42	UNUSED						115-199
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48		W1260	0115	22		32-42-11	001-099
	48	UNUSED						115-199
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40500

Page 29

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40582P		P36/ /		PLUG				ALL
	1		W2064	0054	20		21-45-11	ALL
	2		W2064	0055	20		21-45-11	ALL
	3		W2064	0059	20		21-45-11	ALL
	4		W2064	0149	20		29-11-22	ALL
	5		W2064	0150	24		SPARE	001-099
	5		W2064	0150	24		21-58-24	115-199
	6		W2064	0087	24		SPARE	001-099
	6		W2064	0087	24		21-58-24	115-199
	7	UNUSED						001-099
	7		W2064	0151	20		SPARE	115-199
	8		W2064	0152	20		SPARE	ALL
	9		W2064	0319	24		34-12-12	ALL
	10		W2064	0299	24		34-12-12	ALL
	11		W2064	0153	20		SPARE	ALL
	12		W2064	0261	20		SPARE	ALL
	13	UNUSED						001-099
	13		W2064	0154	20		SPARE	115-199
	14	UNUSED						001-099
	14		W2064	0155	20		SPARE	115-199
	15		W2064	0260	20		SPARE	ALL
	16		W2064	0173	20		SPARE	001-099
	16		W2064	0156	20		SPARE	115-199
	17	UNUSED						001-099
	17		W2064	0157	20		SPARE	115-199
	18	UNUSED						001-099
	18		W2064	0158	20		SPARE	115-199
	19	UNUSED						001-099
	19		W2064	0159	20		SPARE	115-199
	20	UNUSED						001-099
	20		W2064	0160	20		SPARE	115-199
	21	UNUSED						001-099
	21		W2064	0161	20		SPARE	115-199
	22	UNUSED						001-099
	22		W2064	0162	20		SPARE	115-199
	23	UNUSED						001-099
	23		W2064	0163	20		SPARE	115-199
	24		W2064	0164	24		27-51-31	001-099
	24		W2064	0164	20		27-51-31	115-199
	25		W2064	0165	20		30-32-11	ALL
	26		W2064	0166	20		SPARE	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40500

Page 30

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40582P		P36/ /		PLUG (continued)				ALL
	27		W2064	0167	20		SPARE	ALL
	28	18	W2064	0168	18		28-22-11	ALL
	29		W2064	0187	22		30-34-21	001-099
	29	18	W2064	0169	18		28-22-11	115-199
	30		W2064	0178	20		SPARE	ALL
	31		W2064	0179	20		SPARE	ALL
	32		W2064	0005	20		33-42-11	ALL
	33		W2064	0127	22		27-23-11	ALL
	34		W2064	0128	22		27-23-11	ALL
	35		W2064	0129	22		27-23-11	ALL
	36		W2064	0036	22		SPARE	001-099
	36		W2064	0187	22		30-34-21	115-199
	37		W2064	0037	22		SPARE	001-099
	37	UNUSED						115-199
	38		W2064	0185	22		30-34-21	ALL
	39		W2064	0192	22		SPARE	001-099
	39	UNUSED						115-199
	40		W2064	0038	20		33-42-12	001-099
	40	UNUSED						115-199
	41	UNUSED						ALL
	42	18	W2064	0169	18		28-22-11	001-099
	42	UNUSED						115-199
	43		W2064	0112	24		SPARE	001-099
	43	UNUSED						115-199
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48		W2064	0181	22		32-42-11	001-099
	48	UNUSED						115-199
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D40584J		E4-2/ /		RCPT-				ALL
	1		W1275	0836	22		29-32-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40500

Page 31

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40584J		E4-2/ /		RCPT- (continued)				ALL
	2		W1275	0840	22		29-32-21	ALL
	3		W1275	0006	24		21-31-21	ALL
	3		W1275	0039	24		21-31-21	ALL
	4		W1275	6154	22		27-28-13	001-099
	4		W1275	6154	24		27-28-13	115-199
	5		W1275	0005	24		21-31-11	ALL
	5		W1275	0037	24		21-31-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W1275	0625	24		21-58-21	ALL
	8		W1275	0626	24		21-58-21	ALL
	9		W1275	5741	24		21-51-15	ALL
	9		W1275	5742	24		21-51-15	ALL
	10		W1275	5744	24		21-51-15	ALL
	10		W1275	5745	24		21-51-15	ALL
	11		W1275	6188	24		21-61-51	ALL
	11		W1275	6189	24		21-61-51	ALL
	12	UNUSED						ALL
	13		W1275	5509	22		27-23-11	ALL
	14		W1275	6156	22		27-28-13	001-099
	14		W1275	6156	24		27-28-13	115-199
	15		W1275	0786	22		29-11-22	ALL
	16		W1275	0789	22		29-11-22	ALL
	17		W1275	0792	22		29-11-22	ALL
	18		W1275	6037	22		29-11-31	ALL
	19		W1275	0932	22		28-42-11	ALL
	20		W1275	0937	22		28-42-11	ALL
	21		W1275	0734	24		26-18-11	ALL
	22		W1275	0002	24		21-25-11	ALL
	22		W1275	0035	24		21-25-11	ALL
	23		W1275	6522	24		24-11-11	ALL
	24		W1275	0133	24		24-11-11	ALL
	25		W1275	0141	24		24-11-11	ALL
	25		W1275	0143	24		24-11-11	ALL
	26		W1275	0140	24		24-11-11	ALL
	26		W1275	0142	24		24-11-11	ALL
	27		W1275	5586	24		36-11-11	001-099
	27		W1275	5587	24		36-11-11	001-099
	27	UNUSED						115-199
	28		W1275	5553	24		29-33-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40500

Page 32

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40584J		E4-2/ /		RCPT- (continued)				ALL
	29		W1275	0930	24		28-42-11	ALL
	29		W1275	0931	24		28-42-11	ALL
	30		W1275	2043B	24		27-28-13	ALL
	31		W1275	2043R	24		27-28-13	ALL
	32		W1275	0008	24		21-43-11	ALL
	32		W1275	0046	24		21-43-11	ALL
	33		W1275	5606	24		24-27-11	ALL
	34		W1275	5610	22		24-27-11	ALL
	35		W1275	5759	24		21-58-11	ALL
	35		W1275	5760	24		21-58-11	ALL
	36		W1275	5588	24		36-11-12	ALL
	37		W1275	6276	24		28-41-13	ALL
	37		W1275	6277	24		28-41-13	ALL
	38	UNUSED						ALL
	39		W1275	5603	24		36-22-11	ALL
	40		W1275	0925	22		28-42-11	ALL
	41		W1275	0118	24		36-11-31	ALL
	41		W1275	0119	24		36-11-31	ALL
	42		W1275	5594	24		36-11-12	ALL
	43		W1275	5664	24		24-51-14	ALL
	43		W1275	5665	24		24-51-14	ALL
	44		W1275	0634	24		21-58-13	ALL
	44		W1275	0635	24		21-58-13	ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48		W1275	0011	24		21-58-12	ALL
	48		W1275	0042	24		21-58-12	ALL
	49		W1275	0013	24		21-58-11	ALL
	49		W1275	0043	24		21-58-11	ALL
	50		W1275	0015	24		21-58-11	ALL
	50		W1275	0044	24		21-58-11	ALL
	51		W1275	5614	22		24-27-11	ALL
	52		W1275	0582	24		21-58-12	ALL
	52		W1275	0583	24		21-58-12	ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40500

Page 33

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40584P D40584P		E004-02/ / E4-2/ /		PLUG PLUG				001-099 115-199
	1		W2066	0096	22		29-32-21	ALL
	2		W2066	0097	22		29-32-21	ALL
	3		W2066	1002	24		21-31-21	ALL
	4		W2066	0087	22		27-28-13	ALL
	5		W2066	0071	24		21-31-11	ALL
	6		W2066	0532	20		SPARE	ALL
	7		W2066	0533	20		SPARE	ALL
	8		W2066	0215	24		21-58-21	ALL
	9		W2066	0227	24		21-51-15	ALL
	10		W2066	0228	24		21-51-15	ALL
	11		W2066	0248	24		21-61-51	ALL
	12		W2066	0240	24		SPARE	ALL
	13		W2066	0011	22		27-23-11	ALL
	14		W2066	0012	22		27-28-13	ALL
	15		W2066	0400	22		29-11-22	ALL
	16		W2066	0401	22		29-11-22	ALL
	17		W2066	0402	22		29-11-22	ALL
	18		W2066	0405	22		29-11-31	ALL
	19		W2066	0291	22		28-42-11	ALL
	20		W2066	0091	22		28-42-11	ALL
	21		W2066	0039	22		26-18-11	ALL
	22		W2066	0017	24		21-25-11	ALL
	23		W2066	0086	24		24-11-11	ALL
	24		W2066	0085	24		24-11-11	ALL
	25		W2066	0084	24		24-11-11	ALL
	26		W2066	0083	24		24-11-11	ALL
	27		W2066	0271	24		36-11-11	001-099
	27	UNUSED						115-199
	28		W2066	0440	24		29-33-11	ALL
	29		W2066	0089	22		28-42-11	ALL
	30		W2066	2002B	24		27-28-13	001-099
	30		W2066	2002B	22		27-28-13	115-199
	31		W2066	2002R	24		27-28-13	001-099
	31		W2066	2002R	22		27-28-13	115-199
	32		W2066	0032	24		21-43-11	ALL
	33		W2066	0033	24		24-27-11	ALL
	34		W2066	0034	24		24-27-11	ALL
	35		W2066	0239	24		21-58-11	ALL
	36		W2066	0081	24		36-11-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40500

Page 34

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40584P		E004-02/ /		PLUG (continued)				001-099
D40584P		E4-2/ /		PLUG (continued)				115-199
	37		W2066	0560	22		28-41-13	ALL
	38		W2066	0131	24		SPARE	001-099
	38	UNUSED						115-199
	39		W2066	0013	24		36-22-11	ALL
	40		W2066	0088	22		28-42-11	ALL
	41		W2066	0158	24		36-11-31	ALL
	42		W2066	0061	24		36-11-12	ALL
	43		W2066	0153	20		24-51-14	ALL
	44		W2066	0059	24		21-58-13	ALL
	45		W2066	0430	22		SPARE	ALL
	46		W2066	0534	20		SPARE	ALL
	47		W2066	0535	20		SPARE	ALL
	48		W2066	0234	24		21-58-12	ALL
	49		W2066	0235	24		21-58-11	ALL
	50		W2066	0236	24		21-58-11	ALL
	51		W2066	0035	24		24-27-11	ALL
	52		W2066	0274	24		21-58-12	ALL
	53		W2066	0537	20		SPARE	ALL
	54		W2066	0538	20		SPARE	ALL
	55		W2066	0539	20		SPARE	ALL
	CAP	Y	W2066	0130	24		SPARE	ALL
	DED		W2066	1002Z			21-31-21	ALL
D40585J		P051-00/ /		RCPT-				ALL
	1		W1451	2002R	24		31-51-32	ALL
	2		W1451	2002B	24		31-51-32	ALL
	3		W1451	0184	22		31-51-32	ALL
	4		W1451	0360	22		31-51-32	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D40500

Page 35

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40585P		P51/ /		PLUG-				001-099
D40585P		P051-00/ /		PLUG-				115-199
	1		W2195	3501R	24		31-51-32	ALL
	2		W2195	3501B	24		31-51-32	ALL
	3		W2195	3501Y	24		31-51-32	ALL
	4		W2195	3501Z			31-51-32	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D40587J		P051-00/ /		RCPT-				ALL
	1		W1451	2001R	24		31-51-31	ALL
	2		W1451	2001B	24		31-51-31	ALL
	3		W1451	0084	22		31-51-31	ALL
	4		W1451	0431	24		27-32-12	ALL
	5		W1451	0432	24		27-32-12	ALL
	6		W1451	0433	24		27-32-12	ALL
	7		W1451	0434	24		27-32-12	ALL
	8		W1451	0435	24		27-32-12	ALL
	9		W1451	0436	24		27-32-12	ALL
	10		W1451	0437	24		27-32-12	ALL
	11		W1451	0438	24		27-32-12	ALL
	12		W1451	0439	24		27-32-12	ALL
	13		W1451	0443	24		27-32-22	ALL
	14		W1451	0444	24		27-32-22	ALL
	15		W1451	0445	24		27-32-22	ALL
	16		W1451	0446	24		27-32-22	ALL
	17		W1451	0447	24		27-32-22	ALL
	18		W1451	0448	24		27-32-22	ALL
	19		W1451	0449	24		27-32-22	ALL
	20		W1451	0450	24		27-32-22	ALL
	21		W1451	0451	24		27-32-22	ALL
	22		W1451	0039	22		31-51-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40500

Page 36

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40587J		P051-00/ /		RCPT- (continued)				ALL
	23		W1451	0037	22		31-51-11	ALL
	24		W1451	0036	22		31-51-11	ALL
	25		W1451	0139	22		31-51-12	ALL
	26		W1451	0137	22		31-51-12	ALL
	27		W1451	0136	22		31-51-12	ALL
	28		W1451	0454	22		31-51-12	ALL
	29		W1451	0453	22		31-51-11	ALL
	30	UNUSED						ALL
	31		W1451	0359	22		31-51-31	ALL
D40587P		P51/ /		PLUG-				001-099
D40587P		P051-00/ /		PLUG-				115-199
	1		W2193	3501R	24		31-51-31	ALL
	2		W2193	3501B	24		31-51-31	ALL
	3		W2193	3501Y	24		31-51-31	ALL
	4		W2193	0004	24		27-32-12	ALL
	5		W2193	0005	24		27-32-12	ALL
	6		W2193	0006	24		27-32-12	ALL
	7		W2193	0007	24		27-32-12	ALL
	8		W2193	0008	24		27-32-12	ALL
	9		W2193	0009	24		27-32-12	ALL
	10		W2193	0010	24		27-32-12	ALL
	11		W2193	0011	24		27-32-12	ALL
	12		W2193	0012	24		27-32-12	ALL
	13		W2193	0013	24		27-32-22	ALL
	14		W2193	0014	24		27-32-22	ALL
	15		W2193	0015	24		27-32-22	ALL
	16		W2193	0016	24		27-32-22	ALL
	17		W2193	0017	24		27-32-22	ALL
	18		W2193	0018	24		27-32-22	ALL
	19		W2193	0019	24		27-32-22	ALL
	20		W2193	0020	24		27-32-22	ALL
	21		W2193	0021	24		27-32-22	ALL
	22		W2193	0022	22		31-51-11	ALL
	23		W2193	0023	22		31-51-11	ALL
	24		W2193	0024	22		31-51-11	ALL
	25		W2193	0025	22		31-51-12	ALL
	26		W2193	0026	22		31-51-12	ALL
	27		W2193	0027	22		31-51-12	ALL
	28		W2193	0028	22		31-51-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40500

Page 37

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40587P		P51/ /		PLUG- (continued)				001-099
D40587P		P051-00/ /		PLUG- (continued)				115-199
	29		W2193	0029	22		31-51-11	ALL
	30	UNUSED						ALL
	31		W2193	3501Z			31-51-31	ALL
D40590J		E005-03/ /		RCPT				001-099
D40590J		E5-3/ /		RCPT				115-199
	1		W1286	0010	24		33-24-11	001-099
	1		W1286	0010	22		33-24-11	115-199
	2		W1286	0087	24		24-51-24	ALL
	3		W1286	0276	24		24-51-14	001-099
	3		W1286	0084	24		24-51-14	115-199
	4	UNUSED						ALL
	5		W1286	0116	24		27-32-11	ALL
	6		W1286	0270	24		24-51-71	ALL
	7		W1286	0057	24		24-41-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40500

Page 38

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40590J		E005-03/ /		RCPT (continued)				001-099
D40590J		E5-3/ /		RCPT (continued)				115-199
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W1286	0049	22		24-41-11	ALL
	36		W1286	0068	24		24-51-51	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D40590P		E005-03/ /		PLUG				001-099
D40590P		E5-3/ /		PLUG				115-199
	1		W2070	0103	24		33-24-11	001-099
	1		W2070	0103	22		33-24-11	115-199
	2		W2070	0375	22		24-51-24	ALL
	3		W2070	0376	22		24-51-14	ALL
	4		W2070	0015	20		SPARE	ALL
	5		W2070	0242	22		27-32-11	ALL
	6		W2070	0479	24		24-51-71	001-099
	6		W2070	0479	22		24-51-71	115-199
	7		W2070	0486	24		24-41-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						001-099
	16		W2070	0041	22		SPARE	115-199
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40500

Page 39

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40590P		E005-03/ /		PLUG (continued)				001-099
D40590P		E5-3/ /		PLUG (continued)				115-199
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W2070	0261	22		SPARE	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W2070	0107	20		24-41-11	ALL
	36		W2070	0108	20		24-41-11	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D40591J		AD1148/ /		RCPT-				ALL
	1		W3409	4501WR	20		27-61-18	ALL
	2	UNUSED						ALL
	3		W3409	4501WB	20		27-61-18	ALL
	4	UNUSED						ALL
	5		W3409	4501WO	20		27-61-18	ALL
	6		W3409	4501WN	20		27-61-18	ALL
	7		W3409	4501RB	20		27-61-18	ALL
	8		W3409	4501WK	20		27-61-18	ALL
	9		W3409	4501WV	20		27-61-18	ALL
	10	UNUSED						ALL
	S/R		W3409	4501Z			27-61-18	ALL
D40591P		AD1148/ /		PLUG-				ALL
	1		W2451	2004R	20		27-61-18	ALL
	2	UNUSED						ALL
	3		W2451	2004B	20		27-61-18	ALL
	4	UNUSED						ALL
	5		W2451	2005B	20		27-61-18	ALL
	6	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40500

Page 40

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40591P		AD1148/ /		PLUG- (continued)				ALL
	7		W2451	2005R	20		27-61-18	ALL
	8		W2451	2006B	20		27-61-18	ALL
	9		W2451	2006R	20		27-61-18	ALL
	10	UNUSED						ALL
D40592J		P032-00/ /		RCPT				ALL
	1		W1138	0070	22		29-11-31	ALL
	2		W1138	0045	20		24-22-21	ALL
	3		W1138	0054	20		24-22-21	ALL
	4		W1138	0014	20		24-22-22	ALL
	5		W1138	0123	24		24-51-71	ALL
	6	UNUSED						ALL
	7	UNUSED						001-099
	7		W1138	2001B	22		29-11-12	115-199
	8	UNUSED						001-099
	8		W1138	2001R	22		29-11-12	115-199
	9	16	W1138	0086	16		29-11-12	ALL
	10		W1138	0156	22		29-11-31	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	16	W1138	0153	16		29-11-31	ALL
	16		W1138	0148	22		29-11-31	ALL
	17		W1138	0129	24		24-27-21	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40500

Page 41

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40592P		P032-00/ /		PLUG				ALL
	1		W2070	0209	22		29-11-31	ALL
	2		W2070	0053	22		24-22-21	ALL
	3		W2070	0054	22		24-22-21	ALL
	4		W2070	0218	20		24-22-22	ALL
	5		W2070	0480	24		24-51-71	ALL
	6		W2070	0178	22		SPARE	ALL
	7	UNUSED						001-099
	7		W2070	2035B	22		29-11-12	115-199
	8	UNUSED						001-099
	8		W2070	2035R	22		29-11-12	115-199
	9	16	W2070	0097	16		29-11-12	ALL
	10		W2070	0408	22		29-11-31	001-099
	10		W2070	0408	20		29-11-31	115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W2070	0096	20		SPARE	ALL
	15	16	W2070	0202	16		29-11-31	ALL
	16		W2070	0203	22		29-11-31	ALL
	17		W2070	0120	24		24-27-21	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						001-099
	20		W2070	0522	22		SPARE	115-199
	21	UNUSED						001-099
	21		W2070	0523	22		SPARE	115-199
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D40594J		P37/ /		RCPT				ALL
	1		W1270	0056	20		33-44-11	ALL
	2		W1270	0125	22		27-62-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40500

Page 42

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40594J		P37/ I		RCPT (continued)				ALL
	2		W1270	0125	20		27-62-11	115-199
	3		W1270	0189	20		33-41-11	ALL
	4		W1270	0102	20		33-41-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1270	0191	22		32-42-11	001-099
	10		W1270	0893	22		32-42-11	115-199
	11		W1270	5739	24		30-31-12	ALL
	12		W1270	5740	24		30-31-12	ALL
	13		W1270	6055	20		36-11-21	ALL
	14	UNUSED						ALL
	15		W1270	0034	22		29-11-21	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W1270	2010B	24		21-61-11	ALL
	22		W1270	2010R	24		21-61-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26		W1270	5946	24		30-32-11	ALL
	27	UNUSED						ALL
	28		W1270	2008B	24		21-61-11	ALL
	29		W1270	2008R	24		21-61-11	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40500

Page 43

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40594J		P37/ /		RCPT (continued)				ALL
	41	UNUSED						ALL
	42		W1270	5945	24		30-32-11	ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46		W1270	8117	20		28-22-11	ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52		W1270	0188	20		33-43-11	ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55		W1270	8136	20		28-22-11	ALL
D40594P		P037-00/ /		PLUG				001-099
D40594P		P37/ /		PLUG				115-199
	1		W2072	0015	20		33-44-11	ALL
	2		W2072	0004	22		27-62-11	001-099
	2		W2072	0004	20		27-62-11	115-199
	3		W2072	0068	20		33-41-11	ALL
	4		W2072	0024	20		33-41-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W2072	0034	22		32-42-11	ALL
	11		W2072	0039	24		30-31-12	ALL
	12		W2072	0040	24		30-31-12	ALL
	13		W2072	0104	20		36-11-21	ALL
	14	UNUSED						001-099
	14		W2072	0111	20		SPARE	115-199
	15		W2072	0243	22		29-11-21	ALL
	16	UNUSED						001-099
	16		W2072	0113	20		SPARE	115-199
	17	UNUSED						001-099
	17		W2072	0114	20		SPARE	115-199
	18	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40500

Page 44

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40594P		P037-00/ /		PLUG (continued)				001-099
D40594P		P37/ /		PLUG (continued)				115-199
	19		W2072	0130	20		SPARE	001-099
	19	UNUSED						115-199
	20		W2072	0153	24		SPARE	001-099
	20	UNUSED						115-199
	21		W2072	2003B	24		21-61-11	ALL
	22		W2072	2003R	24		21-61-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26		W2072	0002	24		30-32-11	ALL
	27	UNUSED						ALL
	28		W2072	2001B	24		21-61-11	ALL
	29		W2072	2001R	24		21-61-11	ALL
	30		W2072	0121	20		SPARE	ALL
	31		W2072	0122	20		SPARE	ALL
	32	UNUSED						001-099
	32		W2072	0123	20		SPARE	115-199
	33	UNUSED						001-099
	33		W2072	0124	20		SPARE	115-199
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37		W2072	0131	20		SPARE	001-099
	37		W2072	0131	22		SPARE	115-199
	38	UNUSED						ALL
	39	UNUSED						001-099
	39		W2072	0133	22		SPARE	115-199
	40	UNUSED						001-099
	40		W2072	0134	22		SPARE	115-199
	41	UNUSED						001-099
	41		W2072	0135	22		SPARE	115-199
	42		W2072	0005	24		30-32-11	ALL
	43	UNUSED						001-099
	43		W2072	0136	22		SPARE	115-199
	44	UNUSED						001-099
	44		W2072	0016	24		SPARE	115-199
	45	UNUSED						001-099
	45		W2072	0132	22		SPARE	115-199
	46		W2072	0251	22		28-22-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40500

Page 45

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40594P		P037-00/ /		PLUG (continued)				001-099
D40594P		P37/ /		PLUG (continued)				115-199
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51		W2072	0074	24		SPARE	ALL
	52		W2072	0076	20		33-43-11	ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
I	55		W2070	0335	20		28-22-11	ALL
D40598J		E5-2/ /		RCPT				ALL
	1	UNUSED						ALL
	2		W1284	0033	24		24-11-21	ALL
	3	UNUSED						001-099
	3		W1284	0142	24		21-31-21	115-199
	4		W1284	2020B	24		21-31-21	ALL
	5		W1284	2020R	24		21-31-21	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W1284	0208	22		24-22-21	ALL
	10		W1284	0069	24		24-22-21	ALL
	11		W1284	0073	24		24-22-21	001-003, 115-199
	11	UNUSED						004-099
	12		W1284	0072	24		24-22-21	001-003, 115-199
	12	UNUSED						004-099
	13		W1284	0071	22		24-22-21	ALL
I	14		W1284	0041	24		24-11-21	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W1284	0089	24		24-22-22	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W1284	0036	22		22-21-11	ALL
	24		W1284	0007	24		34-33-21	ALL
	25	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40500

Page 46

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40598J		E5-2/ /		RCPT (continued)				ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33		W1284	0032	24		24-11-21	ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W1284	0066	22		24-22-21	ALL
	39		W1284	0030	24		24-11-21	001-099
	39		W1284	0030	22		24-11-21	115-199
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D40598P		E005-02/ /		PLUG				001-099
D40598P		E5-2/ /		PLUG				115-199
	1	UNUSED						001-099
	1		W2070	0030	24		SPARE	115-199
	2		W2070	0031	24		24-11-21	ALL
	3	UNUSED						001-099
	3		W2070	0093	24		21-31-21	115-199
	4		W2070	2032B	24		21-31-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40500

Page 47

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40598P		E005-02/ /		PLUG (continued)				001-099
D40598P		E5-2/ /		PLUG (continued)				115-199
	5		W2070	2032R	24		21-31-21	ALL
	6		W2070	0484	24		SPARE	001-099
	6	UNUSED						115-199
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W2070	0105	22		24-22-21	ALL
	10		W2070	0106	22		24-22-21	ALL
	11		W2070	0001	22		24-22-21	001-003, 115-199
	11	UNUSED						004-099
	12		W2070	0002	22		24-22-21	001-003, 115-199
	12	UNUSED						004-099
	13		W2070	0110	22		24-22-21	ALL
	14		W2070	0635	24		24-11-21	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W2070	0217	24		24-22-22	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W2070	0033	22		22-21-11	ALL
	24		W2070	0036	20		34-33-21	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W2070	0331	24		SPARE	001-099
	27	UNUSED						115-199
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W2070	0104	24		SPARE	ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33		W2070	0014	24		24-11-21	ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W2070	0053	22		24-22-21	ALL
	39		W2070	0225	24		24-11-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40500

Page 48

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40598P		E005-02/ /		PLUG (continued)				001-099
D40598P		E5-2/ /		PLUG (continued)				115-199
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						001-099
	45		W2070	0145	24		SPARE	115-199
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40500

Page 49 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40600J		E5-2/ /		RCPT				ALL
	1	UNUSED						ALL
	2		W1284	0210	24		21-25-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1284	0200	22		33-16-51	ALL
	7		W1284	0312	22		32-42-11	001-099
	7	UNUSED						115-199
	8		W1284	0313	22		32-42-11	001-099
	8	UNUSED						115-199
	9		W1284	0314	22		32-42-11	001-099
	9	UNUSED						115-199
	10		W1284	0315	22		32-42-11	001-099
	10	UNUSED						115-199
	11		W1284	0317	22		32-42-11	001-099
	11	UNUSED						115-199
	12	UNUSED						ALL
	13		W1284	0454	22		32-44-11	001-099
	13	UNUSED						115-199
	14	UNUSED						ALL
	15		W1284	0037	22		22-21-11	ALL
	16		W1284	0038	22		22-21-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W1284	0027	20		24-11-21	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W1284	0111	20		27-21-11	001-009
	27		W1284	0298	20		27-21-11	010-099
	27		W1284	1001	20		27-21-11	115-199
	28		W1284	0112	20		27-21-11	001-009
	28		W1284	0299	20		27-21-11	010-099
	28		W1284	1002	20		27-21-11	115-199
	29	UNUSED						ALL
	30	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40600J		E5-2/ /		RCPT (continued)				ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	DED		W1284	1001Z			27-21-11	115-199
	DED		W1284	1002Z			27-21-11	115-199
D40600P		E005-02/ /		PLUG				001-099
D40600P		E5-2/ /		PLUG				115-199
	1		W2078	0531	22		SPARE	001-099
	1	UNUSED						115-199
	2		W2078	0343	20		21-25-11	ALL
	3	UNUSED						001-099
	3		W2078	0344	20		SPARE	115-199
	4	UNUSED						001-099
	4		W2078	0345	20		SPARE	115-199
	5		W2078	0532	24		SPARE	001-099
	5	UNUSED						115-199
	6		W2078	0029	22		33-16-51	ALL
	7		W2078	0339	22		32-42-11	001-099
	7	UNUSED						115-199
	8		W2078	0340	22		32-42-11	001-099
	8	UNUSED						115-199
	9		W2078	0341	22		32-42-11	001-099
	9	UNUSED						115-199
	10		W2078	0342	22		32-42-11	001-099
	10	UNUSED						115-199
	11		W2078	0344	22		32-42-11	001-099
	11	UNUSED						115-199
	12		W2078	0345	22		SPARE	001-099
	12	UNUSED						115-199
	13		W2078	0352	22		32-44-11	001-099
	13	UNUSED						115-199
	14	UNUSED						ALL
	15		W2078	0101	22		22-21-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40600P		E005-02/ /		PLUG (continued)				001-099
D40600P		E5-2/ /		PLUG (continued)				115-199
	16		W2078	0102	22		22-21-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W2078	0197	20		24-11-21	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W2078	0511	20		27-21-11	ALL
	28		W2078	0512	20		27-21-11	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
D40602J		E004-02/ /		RCPT-				001-099
D40602J		E4-2/ /		RCPT-				115-199
	1		W1275	0123	22		49-61-11	ALL
	2		W1275	0124	22		49-61-11	ALL
	3		W1275	0125	22		49-61-11	ALL
	4		W1275	0126	22		49-61-11	ALL
	5		W1275	0127	22		49-61-11	ALL
	6		W1275	5631	24		24-27-41	ALL
	6		W1275	5632	24		24-27-41	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40602J		E004-02/ /		RCPT- (continued)				001-099
D40602J		E4-2/ /		RCPT- (continued)				115-199
	12	UNUSED						ALL
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
D40602P		E004-02/ /		PLUG				001-099
D40602P		E4-2/ /		PLUG				115-199
	1		W2080	0009	22		49-61-11	ALL
	2		W2080	0010	22		49-61-11	ALL
	3		W2080	0011	22		49-61-11	ALL
	4		W2080	0012	22		49-61-11	ALL
	5		W2080	0013	22		49-61-11	ALL
	6		W2080	0014	24		24-27-41	ALL
	7		W2080	0032	20		SPARE	ALL
	8		W2080	0035	20		SPARE	ALL
	9	UNUSED						001-099
	9		W2080	0029	22		SPARE	115-199
	10	UNUSED						001-099
	10		W2080	0030	22		SPARE	115-199
	11		W2080	0036	20		SPARE	ALL
	12	UNUSED						ALL
	13	UNUSED						115-199
	14		W2080	0027	22		SPARE	115-199
	15		W2080	0028	22		SPARE	115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 4

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40602P		E004-02/ /		PLUG (continued)				001-099
D40602P		E4-2/ /		PLUG (continued)				115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
D40608J		P36/ /		RCPT				ALL
	1	UNUSED						ALL
	2		W1260	0198	24		29-33-11	ALL
	3		W1260	0153	24		29-33-11	ALL
	4	UNUSED						001-099
	4	16	W1260	0499	16		29-11-31	115-199
	5	UNUSED						001-099
	5	16	W1260	0500	16		29-11-31	115-199
	6		W1260	0502	22		29-11-31	ALL
	7		W1260	5830	22		32-42-11	ALL
	8		W1260	5004B	22		32-42-11	ALL
	9		W1260	5004R	22		32-42-11	ALL
	10		W1260	5004Z			32-42-11	ALL
	11		W1260	0041	24		24-51-71	ALL
	12		W1260	0602	24		24-51-71	ALL
	13	UNUSED						001-099
	13		W1260	5837	22		32-42-11	115-199
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W1260	8543	22		29-11-31	ALL
	20		W1260	3003B	24		28-41-14	ALL
	21		W1260	0499	16		29-11-31	001-099
	21	UNUSED						115-199
	22		W1260	3003Y	24		28-41-14	ALL
	23		W1260	0500	16		29-11-31	001-099
	23	UNUSED						115-199
	24	UNUSED						ALL
	25	UNUSED						ALL
	26		W1260	3003R	24		28-41-14	ALL
	27	UNUSED						ALL
	28		W1260	0897	24		21-25-11	ALL
	29	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 5

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40608J		P36/ /		RCPT (continued)				ALL
	30		W1260	8516	24		29-33-11	001-099
	30	UNUSED						115-199
	31		W1260	6002	22		30-34-22	ALL
	32		W1260	6003	22		30-34-22	ALL
	33		W1260	6004	22		30-34-22	ALL
	34	UNUSED						ALL
	35		W1260	0069	20		33-41-11	ALL
	36		W1260	0601	24		24-51-71	ALL
	37		W1260	5837	22		32-42-11	001-099
	37		W1260	5821	22		32-42-11	115-199
	38		W1260	5821	22		32-42-11	001-099
	38	UNUSED						115-199
	39	UNUSED						ALL
D40608P		P036-00/ /		PLUG				001-099
D40608P		P36/ /		PLUG				115-199
	1		W2070	0125	24		SPARE	ALL
	2		W2070	0088	24		29-33-11	ALL
	3		W2070	0060	24		29-33-11	ALL
	4	UNUSED						001-099
	4	16	W2070	0211	16		29-11-31	115-199
	5	UNUSED						001-099
	5	16	W2070	0202	16		29-11-31	115-199
	6		W2070	0203	22		29-11-31	ALL
	7		W2070	0388	22		32-42-11	ALL
	8		W2070	5003B	22		32-42-11	ALL
	9		W2070	5003R	22		32-42-11	ALL
	10		W2070	5003Z			32-42-11	ALL
	11		W2070	0400	24		24-51-71	001-099
	11		W2070	0400	20		24-51-71	115-199
	12		W2070	0401	24		24-51-71	001-099
	12		W2070	0401	20		24-51-71	115-199
	13		W2070	0402	20		SPARE	001-099
	13		W2070	0402	20		32-42-11	115-199
	14		W2070	0403	22		SPARE	ALL
	15	UNUSED						001-099
	15		W2070	0404	20		SPARE	115-199
	16	UNUSED						001-099
	16		W2070	0405	20		SPARE	115-199
	17	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 6

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40608P		P036-00/ /		PLUG (continued)				001-099
D40608P		P36/ /		PLUG (continued)				115-199
	18	UNUSED						ALL
	19		W2070	0408	22		29-11-31	001-099
	19		W2070	0408	20		29-11-31	115-199
	20		W2070	3004B	24		28-41-14	ALL
	21		W2070	0211	16		29-11-31	001-099
	21		W2070	0421	20		SPARE	115-199
	22		W2070	3004Y	24		28-41-14	ALL
	23		W2070	0202	16		29-11-31	001-099
	23		W2070	0423	20		SPARE	115-199
	24	UNUSED						001-099
	24		W2070	0424	20		SPARE	115-199
	25	UNUSED						001-099
	25		W2070	0425	20		SPARE	115-199
	26		W2070	3004R	24		28-41-14	ALL
	27	UNUSED						ALL
	28		W2070	0428	24		21-25-11	ALL
	29	UNUSED						001-099
	29		W2070	0429	20		SPARE	115-199
	30		W2070	0146	24		29-33-11	001-099
	30		W2070	0146	24		SPARE	115-199
	31		W2070	0430	22		30-34-22	ALL
	32		W2070	0431	22		30-34-22	ALL
	33		W2070	0432	22		30-34-22	ALL
	34		W2070	0433	20		SPARE	ALL
	35		W2070	0131	20		33-41-11	ALL
	36		W2070	0478	24		24-51-71	ALL
	37		W2070	0386	22		32-42-11	ALL
	38		W2070	0387	22		32-42-11	001-099
	38		W2070	0387	22		SPARE	115-199
	39		W2070	0385	22		SPARE	ALL
	CAP	Y	W2070	0409	20		SPARE	115-199
	CAP	Y	W2070	0422	20		SPARE	115-199
	CAP	Y	W2070	0426	20		SPARE	115-199
D40610J		P011-00/ /		RCPT-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0124	0093	22		34-25-11	001, 003-099, 115-199
	3	UNUSED						002

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 7

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40610J		P011-00/ /		RCPT- (continued)				ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0124	0101	22		27-09-11	ALL
	8		W0124	0018	22		34-31-11	ALL
	9	UNUSED						ALL
	10		W0124	0102	22		27-09-11	ALL
	11	UNUSED						ALL
	12		W0124	0012Y	22		27-41-11	ALL
	13		W0124	0013	22		34-21-11	ALL
	14		W0124	0014	20		22-31-12	ALL
	15		W0124	0015	20		22-31-12	ALL
	16		W0124	0016	20		22-31-11	ALL
	17		W0124	0017	20		22-11-11	ALL
	18	UNUSED						ALL
	19		W0124	0019	22		34-22-16	ALL
	20		W0124	0020	20		22-11-12	ALL
	21		W0124	0021	20		22-11-12	ALL
	22		W0124	0022	20		34-61-11	ALL
	23	UNUSED						ALL
	24		W0124	0024	22		34-46-11	ALL
	25	UNUSED						ALL
	26		W0124	0026	22		23-21-11	ALL
	27		W0124	0027	22		34-33-11	ALL
	28	UNUSED						ALL
	29		W0124	0029	22		34-55-11	001-099
	29	UNUSED						115-199
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33		W0124	0033	20		34-43-11	ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36		W0124	0036	24		27-51-41	001-099
	36		W0124	0036	22		27-51-41	115-199
	37		W0124	0037	22		34-12-11	ALL
	38		W0124	0038	22		34-12-11	ALL
	39		W0124	0039	22		34-22-36	ALL
	40	16	W0124	0110	16		23-12-31	001-099
	40	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 8

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40610J		P011-00/ /		RCPT- (continued)				ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43		W0124	0043	24		27-51-41	001-099
	43		W0124	0043	20		27-51-41	115-199
	44	UNUSED						001, 003-099, 115-199
	44		W0124	0177	22		34-43-14	002
	45	UNUSED						ALL
	46		W0124	0106	22		27-48-11	ALL
	47		W0124	0047	24		27-51-41	001-099
	47		W0124	0047	22		27-51-41	115-199
	48		W0124	0123	20		34-45-01	ALL
	49	UNUSED						ALL
	50		W0124	0080	20		34-12-11	ALL
	51		W0124	0050	20		23-11-11	ALL
	52		W0124	0051	20		23-11-11	ALL
	53		W0124	0052	20		23-11-11	ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D40610P		P011-00/ /		PLUG-				001-099
D40610P		P11/ /		PLUG-				115-199
	1	UNUSED						ALL
	2	UNUSED						001-099
	2		W2350	0002	22		SPARE	115-199
	3		W2350	0023	22		34-25-11	001, 003-099, 115-199
	3	UNUSED						002
	4	UNUSED						001-099
	4		W2350	0730	22		SPARE	115-199
	5	UNUSED						001-099
	5		W2350	0502	22		SPARE	115-199
	6	UNUSED						001-099
	6		W2350	0520	22		SPARE	115-199
	7		W2350	0201	22		27-09-11	ALL
	8		W2350	0061	22		34-31-11	ALL
	9	UNUSED						001-099
	9		W2350	0604	22		SPARE	115-199
	10		W2350	0202	22		27-09-11	ALL
	11	UNUSED						001-099
	11		W2350	0605	22		SPARE	115-199
	12		W2350	0012Y	22		27-41-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 9

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40610P		P011-00/ /		PLUG- (continued)				001-099
D40610P		P11/ /		PLUG- (continued)				115-199
	13		W2350	0013	20		34-21-11	ALL
	14		W2350	0014	20		22-31-12	ALL
	15		W2350	0015	20		22-31-12	ALL
	16		W2350	0016	20		22-31-11	ALL
	17		W2350	0017	20		22-11-11	ALL
	18		W2350	0018	22		SPARE	ALL
	19		W2350	0019	24		34-22-16	ALL
	20		W2350	0020	20		22-11-12	ALL
	21		W2350	0021	20		22-11-12	ALL
	22		W2350	0022	22		34-61-11	ALL
	23	UNUSED						001-099
	23	18	W2350	0205	18		SPARE	115-199
	24		W2350	0024	22		34-46-11	ALL
	25	UNUSED						001-099
	25		W2350	0716	22		SPARE	115-199
	26		W2350	0026	22		23-21-11	ALL
	27		W2350	0027	22		34-33-11	ALL
	28	UNUSED						001-099
	28		W2350	0717	22		SPARE	115-199
	29		W2350	0029	22		34-55-11	001-099
	29		W2350	0029	22		SPARE	115-199
	30	UNUSED						ALL
	31		W2350	0031	24		34-22-16	001, 003-008
	31		W2350	0031	24		SPARE	002, 009-099, 115-199
	32		W2350	0082	24		SPARE	001-099
	32		W2350	0732	22		SPARE	115-199
	33		W2350	0033	20		34-43-11	ALL
	34	UNUSED						001-099
	34		W2350	0034	24		SPARE	115-199
	35	UNUSED						ALL
	36		W2350	0036	24		27-51-41	001-099
	36		W2350	0036	22		27-51-41	115-199
	37		W2350	0037	24		34-12-11	ALL
	38		W2350	0038	24		34-12-11	ALL
	39		W2350	0039	24		34-22-36	ALL
	40	16	W2350	0040	16		23-12-31	001-099
	40	UNUSED						115-199
	41		W2350	0041	22		SPARE	ALL
	42	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 10

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40610P		P011-00/ /		PLUG- (continued)				001-099
D40610P		P11/ /		PLUG- (continued)				115-199
	43		W2350	0043	24		27-51-41	001-099
	43		W2350	0043	22		27-51-41	115-199
	44	UNUSED						001, 003-099, 115-199
	44		W2350	0103	22		34-43-14	002
	45	UNUSED						ALL
	46		W2350	0106	22		27-48-11	ALL
	47		W2350	0047	24		27-51-41	001-099
	47		W2350	0047	22		27-51-41	115-199
	48		W2350	0060	20		34-45-01	ALL
	49		W2350	0005	22		SPARE	ALL
	50		W2350	0080	20		34-12-11	ALL
	51		W2350	0051	20		23-11-11	ALL
	52		W2350	0052	20		23-11-11	ALL
	53		W2350	0053	20		23-11-11	ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D40612J		P11/ /		RCPT-				ALL
	1	UNUSED						ALL
	2		W0126	0063	22		31-31-01	001-099
	2		W0126	0063	22		31-31-11	115-199
	3		W0126	0025	22		77-11-11	ALL
	4		W0126	0516	22		77-31-11	ALL
	5	UNUSED						ALL
	6		W0126	0064	22		31-31-01	001-099
	6		W0126	0064	22		31-31-11	115-199
	7	UNUSED						ALL
	8		W0126	0108	24		27-28-11	001-099
	8		W0126	0108	22		27-28-11	115-199
	9		W0126	0109	22		27-28-13	ALL
	10		W0126	0003	22		27-18-11	ALL
	11		W0126	0111	22		27-38-11	ALL
	12		W0126	0022	22		28-22-11	ALL
	13	UNUSED						ALL
	14		W0126	0033	24		32-41-11	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0126	0500	20		22-41-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 11

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40612J		P11/ /		RCPT- (continued)				ALL
	19		W0126	0059	20		31-41-11	ALL
	20	UNUSED						ALL
	21		W0126	0081	20		32-12-12	ALL
	22	UNUSED						001-008, 115-199
	22		W0128	0155	22		34-61-15	009-099
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						001-099
	26		W0126	0046	22		32-46-11	115-199
	27		W0126	0518	24		79-32-11	001-099
	27		W0126	0518	22		79-32-11	115-199
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W0126	0048	22		31-31-01	001-099
	30	UNUSED						115-199
	31	UNUSED						ALL
	32	UNUSED						ALL
	33		W0126	0007	20		27-31-22	ALL
	34	UNUSED						ALL
	35		W0126	0023	22		29-31-11	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43		W0130	0092	22		31-31-02	001-099
	43	UNUSED						115-199
	44		W0126	0444	22		21-52-31	ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						001-099
	48		W0126	0527	20		21-51-23	115-199
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 12

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40612J		P11/ /		RCPT- (continued)				ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D40612P		P011-00/ /		PLUG-				001-099
D40612P		P11/ /		PLUG-				115-199
	1	UNUSED						ALL
	2		W2350	0003	22		31-31-01	001-099
	2		W2350	0003	22		31-31-11	115-199
	3		W2350	0025	22		77-11-11	ALL
	4		W2350	0501	22		77-31-11	ALL
	5	UNUSED						001-099
	5		W2350	0105	22		SPARE	115-199
	6		W2350	0004	22		31-31-01	001-099
	6		W2350	0004	22		31-31-11	115-199
	7	UNUSED						001-099
	7		W2350	0731	22		SPARE	115-199
	8		W2350	0008	24		27-28-11	ALL
	9		W2350	0009	22		27-28-13	ALL
	10		W2350	0010	22		27-18-11	ALL
	11		W2350	0011	22		27-38-11	ALL
	12		W2350	0042	22		28-22-11	ALL
	13	UNUSED						001-099
	13		W2350	0733	22		SPARE	115-199
	14		W2350	0028	24		32-41-11	ALL
	15	UNUSED						ALL
	16		W2350	0406	24		SPARE	ALL
	17	UNUSED						ALL
	18		W2350	0606	20		22-41-11	ALL
	19		W2350	0059	22		31-41-11	ALL
	20	UNUSED						ALL
	21		W2350	0081	20		32-12-12	ALL
	22	UNUSED						001-008, 115-199
	22		W2350	0065	22		34-61-15	009-099
	23	UNUSED						001-099
	23		W2350	0323	22		SPARE	115-199
	24	UNUSED						001-099
	24		W2350	0324	22		SPARE	115-199
	25	UNUSED						001-099
	25		W2350	0703	22		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 13

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40612P		P011-00/ /		PLUG- (continued)				001-099
D40612P		P11/ /		PLUG- (continued)				115-199
	26	UNUSED						001-099
	26		W2350	0046	24		32-46-11	115-199
	27		W2350	0007	24		79-32-11	ALL
	28		W2350	0729	22		SPARE	ALL
	29	UNUSED						001-099
	29		W2350	0728	22		SPARE	115-199
	30		W2350	0032	22		31-31-01	001-099
	30	UNUSED						115-199
	31	UNUSED						001-099
	31		W2350	0712	22		SPARE	115-199
	32	UNUSED						001-099
	32		W2350	0710	22		SPARE	115-199
	33		W2350	0203	20		27-31-22	ALL
	34	UNUSED						001-099
	34		W2350	0514	22		SPARE	115-199
	35		W2350	0610	22		29-31-11	ALL
	36	UNUSED						001-099
	36		W2350	0611	22		SPARE	115-199
	37		W2350	0612	22		SPARE	ALL
	38		W2350	0613	22		SPARE	ALL
	39	UNUSED						001-099
	39		W2350	0705	22		SPARE	115-199
	40	UNUSED						001-099
	40		W2350	0706	22		SPARE	115-199
	41	UNUSED						001-099
	41		W2350	0707	22		SPARE	115-199
	42	UNUSED						001-099
	42		W2350	0708	22		SPARE	115-199
	43		W2350	0063	22		31-31-02	001-099
	43		W2350	0709	22		SPARE	115-199
	44		W2350	0444	24		21-52-31	ALL
	45		W2350	0045	22		SPARE	ALL
	46	UNUSED						001-008, 115-199
	46		W2350	0066	22		SPARE	009-099
	47	UNUSED						001-008, 115-199
	47		W2350	0067	22		SPARE	009-099
	48	UNUSED						001-099
	48		W2350	0048	20		21-51-23	115-199
	49	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 14

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40612P		P011-00/ /		PLUG- (continued)				001-099
D40612P		P11/ /		PLUG- (continued)				115-199
	49		W2350	0049	20		SPARE	115-199
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D40614J		P11/ /		RCPT-				ALL
	1	UNUSED						ALL
	2		W0126	0002	22		36-11-12	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0126	0006	22		32-09-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0126	0009	22		76-11-21	ALL
	10	UNUSED						ALL
	11		W0126	0011	22		21-58-11	ALL
	12		W0126	0012	22		36-21-11	ALL
	13		W0126	0613	22		27-23-21	ALL
	14		W0126	0014	22		21-44-11	ALL
	15		W0126	0015	22		32-42-11	ALL
	16		W0126	0504	20		21-51-12	ALL
	17	UNUSED						ALL
	18		W0126	0018	22		33-25-11	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W0126	0017	22		27-23-21	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W0126	0532	24		26-18-11	ALL
	29	UNUSED						001-099
	29		W0126	0029	20		21-51-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 15

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40614J		P111 /		RCPT- (continued)				ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	18	W0126	0134	18		30-34-21	001-099
	34	UNUSED						115-199
	35	UNUSED						ALL
	36	UNUSED						ALL
	37		W0126	0503	24		21-61-51	ALL
	38		W0126	0535	22		27-51-51	ALL
	39	UNUSED						001-099
	39		W0126	0049	22		32-42-11	115-199
	40	UNUSED						ALL
	41		W0126	0141	22		30-34-21	001-099
	41	UNUSED						115-199
	42	UNUSED						ALL
	43		W0126	0028	20		36-11-11	ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46		W0126	0206	20		74-31-11	ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						001-099
	54		W0126	0141	22		30-34-21	115-199
	55	UNUSED						001-099
	55	18	W0126	0134	18		30-34-21	115-199
D40614P		P011-00/ /		PLUG-				001-099
D40614P		P111 /		PLUG-				115-199
	1	UNUSED						001-099
	1		W2352	0201	20		SPARE	115-199
	2		W2352	0044	24		36-11-12	ALL
	3		W2352	0501	24		SPARE	ALL
	4		W2352	0004	24		SPARE	ALL
	5	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 16

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40614P		P011-00/ /		PLUG- (continued)				001-099
D40614P		P11/ /		PLUG- (continued)				115-199
	6		W2352	0006	22		32-09-11	ALL
	7	UNUSED						ALL
	8		W2352	0008	24		SPARE	ALL
	9		W2352	0009	22		76-11-21	ALL
	10	UNUSED						001-099
	10		W2352	0010	24		SPARE	115-199
	11		W2352	0011	20		21-58-11	ALL
	12		W2352	0012	24		36-21-11	ALL
	13		W2352	0602	22		27-23-21	ALL
	14		W2352	0014	22		21-44-11	ALL
	15		W2352	0015	22		32-42-11	ALL
	16		W2352	0016	20		21-51-12	ALL
	17		W2352	0603	24		SPARE	ALL
	18		W2352	0018	22		33-25-11	ALL
	19		W2352	0019	24		SPARE	ALL
	20		W2352	0604	24		SPARE	ALL
	21		W2352	0605	24		SPARE	ALL
	22	UNUSED						001-099
	22		W2352	0606	24		SPARE	115-199
	23	UNUSED						001-099
	23		W2352	0607	24		SPARE	115-199
	24		W2352	0608	22		27-23-21	001-099
	24		W2352	0608	20		27-23-21	115-199
	25		W2352	0609	20		SPARE	ALL
	26	UNUSED						001-099
	26		W2352	0614	22		SPARE	115-199
	27	UNUSED						001-099
	27		W2352	0615	22		SPARE	115-199
	28		W2352	0507	22		26-18-11	ALL
	29	UNUSED						001-099
	29		W2352	0029	20		21-51-11	115-199
	30	UNUSED						001-099
	30		W2352	0616	22		SPARE	115-199
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						001-099
	33		W2352	0619	24		SPARE	115-199
	34	18	W2352	0034	18		30-34-21	001-099
	34		W2352	0034	22		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 17

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40614P		P011-00/ /		PLUG- (continued)				001-099
D40614P		P11/ /		PLUG- (continued)				115-199
	35	UNUSED						001-099
	35		W2352	0620	24		SPARE	115-199
	36	UNUSED						001-099
	36		W2352	0621	24		SPARE	115-199
	37		W2352	0622	24		21-61-51	ALL
	38		W2352	0047	22		27-51-51	ALL
	39	UNUSED						001-099
	39		W2352	0623	22		32-42-11	115-199
	40	UNUSED						ALL
	41		W2352	0625	22		30-34-21	001-099
	41	UNUSED						115-199
	42	UNUSED						ALL
	43		W2352	0128	20		36-11-11	ALL
	44	UNUSED						001-099
	44		W2352	0647	20		SPARE	115-199
	45	UNUSED						001-099
	45		W2352	0648	20		SPARE	115-199
	46		W2352	0206	20		74-31-11	ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49		W2352	0002	24		SPARE	001-099
	49	UNUSED						115-199
	50		W2352	0003	24		SPARE	001-099
	50	UNUSED						115-199
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						001-099
	54		W2352	0070	22		30-34-21	115-199
	55	UNUSED						001-099
	55	18	W2352	0071	18		30-34-21	115-199
D40616J		P011-00/ /		RCPT-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0124	0141	20		27-62-11	ALL
	5		W0124	0065	22		27-48-21	ALL
	6		W0124	0040	20		21-51-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 18

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40616J		P011-00/ /		RCPT- (continued)				ALL
	6	UNUSED						115-199
	7	UNUSED						ALL
	8		W0124	0628	20		21-51-23	001-099
	8	UNUSED						115-199
	9		W0124	0009	24		27-58-11	001-099
	9		W0124	0009	22		27-58-11	115-199
	10		W0124	0010	24		27-58-11	001-099
	10		W0124	0010	22		27-58-11	115-199
	11	UNUSED						ALL
	12	UNUSED						001, 003-099, 115-199
	12		W0124	0164	22		34-46-14	002
D40616P		P011-00/ /		PLUG-				001-099
D40616P		P11/ /		PLUG-				115-199
	1	UNUSED						001-099
	1		W2352	0626	22		SPARE	115-199
	2	UNUSED						001-099
	2		W2352	0627	20		SPARE	115-199
	3	UNUSED						001-099
	3		W2352	0628	20		SPARE	115-199
	4		W2352	0035	20		27-62-11	ALL
	5		W2352	0105	22		27-48-21	ALL
	6		W2352	0029	20		21-51-11	001-099
	6		W2352	0629	20		SPARE	115-199
	7	UNUSED						001-099
	7		W2352	0630	20		SPARE	115-199
	8		W2352	0201	20		21-51-23	001-099
	8		W2352	0631	20		SPARE	115-199
	9		W2352	0039	24		27-58-11	001-099
	9		W2352	0039	22		27-58-11	115-199
	10		W2352	0040	24		27-58-11	001-099
	10		W2352	0040	22		27-58-11	115-199
	11	UNUSED						001-099
	11		W2352	0632	20		SPARE	115-199
	12		W2352	0633	20		SPARE	001, 003-099, 115-199
	12		W2352	0028	22		34-46-14	002
	REF	JB	W2352	0633	20		SPARE	002
D40618J		P011-00/ /		RCPT-				ALL
	1		W0128	0001	22		34-33-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 19

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40618J		P011-00/ /		RCPT- (continued)				ALL
	2	UNUSED						ALL
	3		W0128	0003	20		22-11-21	ALL
	4		W0128	0004	22		34-31-21	ALL
	5		W0128	0005	22		34-61-21	ALL
	6		W0128	0023	22		34-22-26	001, 003-099, 115-199
	6	UNUSED						002
	7		W0128	0007	20		22-11-22	ALL
	8		W0128	0008	20		34-21-21	ALL
	9		W0128	0109Y	22		27-41-21	ALL
	10		W0128	0106	20		23-11-21	ALL
	11		W0128	0107	20		23-11-21	ALL
	12	UNUSED						ALL
	13		W0128	0108	20		23-11-21	ALL
	14	UNUSED						ALL
	15		W0128	0015	20		22-11-22	ALL
	16		W0128	0016	22		34-55-21	001-099
	16	UNUSED						115-199
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0128	0006	22		34-22-26	ALL
	24	UNUSED						ALL
	25		W0128	0025	22		34-12-21	ALL
	26		W0128	0026	22		34-12-21	ALL
	27		W0128	0027	22		34-12-21	ALL
	28		W0128	0028	20		23-71-11	ALL
	29		W0128	0029	24		27-81-11	001-099
	29		W0128	0029	22		27-81-11	115-199
	30		W0128	0030	24		27-81-11	001-099
	30		W0128	0030	22		27-81-11	115-199
	31		W0128	0031	24		27-81-11	001-099
	31		W0128	0031	22		27-81-11	115-199
	32	UNUSED						ALL
	33		W0128	0033	20		34-12-21	ALL
	34	16	W0128	0101	16		23-12-21	ALL
	35		W0128	0115	22		27-48-11	ALL
	36	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 20

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40618J		P011-00/ /		RCPT- (continued)				ALL
	37		W0128	0017	22		34-51-21	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51		W0128	0151	22		27-09-11	ALL
	52		W0128	0152	22		27-09-11	ALL
	53	UNUSED						001-099
	53		W0128	0175	22		34-61-25	115-199
	54		W0128	0149	24		34-53-21	ALL
	55	UNUSED						ALL
D40618P		P11/ /		PLUG-				ALL
	1		W2354	0043	22		34-33-21	ALL
	2		W2354	0058	22		23-31-17	001-099
	2		W2354	0058	22		SPARE	115-199
	3		W2354	0001	20		22-11-21	ALL
	4		W2354	0002	22		34-31-21	ALL
	5		W2354	0003	22		34-61-21	ALL
	6		W2354	0004	24		34-22-26	001, 003-099, 115-199
	6		W2354	0004	24		SPARE	002
	7		W2354	0005	20		22-11-22	ALL
	8		W2354	0028	20		34-21-21	ALL
	9		W2354	0049Y	22		27-41-21	ALL
	10		W2354	0050	20		23-11-21	ALL
	11		W2354	0051	20		23-11-21	ALL
	12	UNUSED						001-099
	12		W2354	0040	22		SPARE	115-199
	13		W2354	0052	20		23-11-21	ALL
	14	UNUSED						ALL
	15		W2354	0006	20		22-11-22	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 21

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40618P		P111 /		PLUG- (continued)				ALL
	16		W2354	0086	22		34-55-21	001-099
	16	UNUSED						115-199
	17	UNUSED						001-099
	17	18	W2354	0019	18		SPARE	115-199
	18	UNUSED						001-099
	18		W2354	0597	22		SPARE	115-199
	19	UNUSED						ALL
	20	UNUSED						001-099
	20		W2354	0598	22		SPARE	115-199
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W2354	0007	24		34-22-26	ALL
	24	UNUSED						ALL
	25		W2354	0008	24		34-12-21	ALL
	26		W2354	0009	24		34-12-21	ALL
	27		W2354	0010	24		34-12-21	ALL
	28		W2354	0026	20		23-71-11	ALL
	29		W2354	0029	24		27-81-11	001-099
	29		W2354	0029	22		27-81-11	115-199
	30		W2354	0030	24		27-81-11	001-099
	30		W2354	0030	22		27-81-11	115-199
	31		W2354	0031	24		27-81-11	001-099
	31		W2354	0031	22		27-81-11	115-199
	32	UNUSED						ALL
	33		W2354	0012	24		34-12-21	ALL
	34	16	W2354	0054	16		23-12-21	ALL
	35		W2354	0115	22		27-48-11	ALL
	36	UNUSED						001-099
	36		W2354	0602	22		SPARE	115-199
	37		W2354	0137	22		34-51-21	ALL
	38	UNUSED						001-099
	38		W2354	0603	22		SPARE	115-199
	39	UNUSED						ALL
	40	UNUSED						001-099
	40		W2354	0604	22		SPARE	115-199
	41	UNUSED						001-099
	41		W2354	0605	22		SPARE	115-199
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 22

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40618P		P11/ /		PLUG- (continued)				ALL
	44		W2354	0642	22		SPARE	115-199
	45	UNUSED						001-099
	45		W2354	0644	22		SPARE	115-199
	46	UNUSED						ALL
	47	UNUSED						001-099
	47		W2354	0608	22		SPARE	115-199
	48	UNUSED						ALL
	49	UNUSED						001-099
	49		W2354	0610	22		SPARE	115-199
	50	UNUSED						ALL
	51		W2354	0151	22		27-09-11	ALL
	52		W2354	0152	22		27-09-11	ALL
	53	UNUSED						001-099
	53		W2354	0641	22		34-61-25	115-199
	54		W2354	0020	22		34-53-21	ALL
	55	UNUSED						ALL
D40620J D40620J		P011-00/ / P11/ /		RCPT- RCPT-				001-099 115-199
	1		W0130	0001	22		31-51-11	ALL
	2		W0130	0002	24		33-42-12	001-099
	2		W0130	0002	20		33-42-12	115-199
	3		W0130	0003	22		38-14-11	ALL
	4	UNUSED						ALL
	5		W0130	0017	24		21-61-21	ALL
	6		W0130	0006	24		21-61-31	ALL
	7	UNUSED						001-099
	7		W0130	0324	22		35-11-13	115-199
	8		W0130	0008	22		33-51-11	ALL
	9		W0130	0009	22		33-51-11	ALL
	10		W0130	0087	20		25-31-11	001-099
	10	UNUSED						115-199
	11		W0130	0011	22		32-09-12	ALL
	12		W0130	0063	20		29-21-32	ALL
	13	UNUSED						ALL
	14		W0128	0150	22		32-61-11	001-002
	14	UNUSED						003-099
	14		W0134	0063	22		32-61-11	115-199
	15		W0130	0315	24		26-16-21	ALL
	16		W0130	0016	24		21-61-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 23

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40620J		P011-00/ /		RCPT- (continued)				001-099
D40620J		P11/ /		RCPT- (continued)				115-199
	17		W0130	0005	24		21-61-21	ALL
	18	18	W0130	0218	18		30-34-22	ALL
	19	UNUSED						ALL
	20		W0130	0320	24		26-18-11	ALL
	21		W0130	0021	22		36-21-11	ALL
	22		W0130	0044	22		29-31-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0130	0025	22		76-11-21	ALL
	26		W0130	0010	24		36-11-41	ALL
	27	UNUSED						ALL
	28		W0130	0028	22		28-21-11	ALL
	29	UNUSED						ALL
	30		W0130	0037	22		77-11-11	ALL
	31		W0130	0231	22		30-34-22	ALL
	32	16	W0130	0096	16		78-34-61	ALL
	33		W0130	0033	24		21-61-31	ALL
	34		W0130	0226	24		21-25-11	ALL
	35		W0130	0038	20		36-11-41	001-099
	35	UNUSED						115-199
	36		W0130	0060	20		21-51-22	ALL
	37	UNUSED						ALL
	38	UNUSED						001-099
	38		W0130	0038	20		36-11-41	115-199
	39		W0130	0061	20		29-21-32	ALL
	40		W0130	0040	24		21-61-11	ALL
	41		W0130	0300	24		26-16-21	ALL
	42		W0130	0014	22		21-51-13	001-099
	42	UNUSED						115-199
	43	UNUSED						ALL
	44		W0130	0248	24		26-18-11	ALL
	45		W0130	0045	22		30-33-11	ALL
	46		W0130	0020	20		74-31-21	001-099
	46		W0130	0020	22		74-31-21	115-199
	47	UNUSED						ALL
	48	UNUSED						ALL
	49		W0130	0049	24		36-11-22	ALL
	50	UNUSED						ALL
	51	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 24

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40620J		P011-00/ /		RCPT- (continued)				001-099
D40620J		P11/ /		RCPT- (continued)				115-199
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D40620P		P011-00/ /		PLUG-				001-099
D40620P		P11/ /		PLUG-				115-199
	1		W2356	0001	22		31-51-11	ALL
	2		W2356	0002	24		33-42-12	001-099
	2		W2356	0002	20		33-42-12	115-199
	3		W2356	0003	22		38-14-11	ALL
	4		W2356	0004	24		SPARE	ALL
	5		W2356	0005	24		21-61-21	ALL
	6		W2356	0006	24		21-61-31	ALL
	7	UNUSED						001-099
	7		W2356	0007	22		35-11-13	115-199
	8		W2356	0008	22		33-51-11	ALL
	9		W2356	0009	22		33-51-11	ALL
	10		W2356	0073	20		25-31-11	001-099
	10	UNUSED						115-199
	11		W2356	0011	22		32-09-12	ALL
	12		W2356	0012	20		29-21-32	ALL
	13		W2356	0013	24		SPARE	ALL
	14		W2356	0014	22		33-26-11	001-002, 115-199
	14		W2356	0014	22		SPARE	003-099
	15		W2356	0015	22		26-16-21	ALL
	16		W2356	0016	24		21-61-11	ALL
	17		W2356	0017	24		21-61-21	ALL
	18	18	W2356	0018	18		30-34-22	001-099
	18	18	W2356	0065	18		30-34-22	115-199
	19	UNUSED						ALL
	20		W2356	0602	22		26-18-11	ALL
	21		W2356	0021	24		36-21-11	ALL
	22		W2356	0344	22		29-31-11	ALL
	23		W2356	0023	22		SPARE	ALL
	24		W2356	0024	24		SPARE	ALL
	25		W2356	0025	22		76-11-21	ALL
	26		W2356	0010	24		36-11-41	ALL
	27	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 25

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40620P		P011-00/ /		PLUG- (continued)				001-099
D40620P		P11/ /		PLUG- (continued)				115-199
	27		W2356	0027	22		SPARE	115-199
	28		W2356	0028	22		28-21-11	ALL
	29	UNUSED						001-099
	29		W2356	0029	24		SPARE	115-199
	30		W2356	0030	22		77-11-11	ALL
	31		W2356	0031	22		30-34-22	001-099
	31		W2356	0064	22		30-34-22	115-199
	32	16	W2356	0113	16		78-34-61	ALL
	33		W2356	0033	24		21-61-31	ALL
	34		W2356	0034	24		21-25-11	ALL
	35		W2356	0201	20		36-11-41	001-099
	35		W2356	0613	22		SPARE	115-199
	36		W2356	0060	20		21-51-22	ALL
	37		W2356	0614	22		SPARE	ALL
	38		W2356	0213	20		SPARE	001-099
	38		W2356	0213	20		36-11-41	115-199
	39		W2356	0214	20		29-21-32	ALL
	40		W2356	0215	24		21-61-11	ALL
	41		W2356	0216	22		26-16-21	ALL
	42		W2356	0217	20		21-51-13	001-099
	42		W2356	0217	20		SPARE	115-199
	43		W2356	0218	20		SPARE	ALL
	44		W2356	0603	22		26-18-11	ALL
	45		W2356	0208	24		30-33-11	ALL
	46		W2356	0209	20		74-31-21	ALL
	47	UNUSED						ALL
	48		W2356	0211	24		SPARE	ALL
	49		W2356	0212	24		36-11-22	ALL
	50		W2356	0050	24		SPARE	ALL
	51	UNUSED						ALL
	52	UNUSED						001-099
	52		W2356	0203	20		SPARE	115-199
	53	UNUSED						001-099
	53		W2356	0204	20		SPARE	115-199
	54		W2356	0205	24		SPARE	001-099
	54		W2356	0205	20		SPARE	115-199
	55		W2356	0206	24		SPARE	001-099
	55		W2356	0206	20		SPARE	115-199
	CAP	Y	W2356	0605	20		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 26

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40622J		P011-00/ /		RCPT-				001-099
D40622J		P11/ /		RCPT-				115-199
	1	UNUSED						ALL
	2		W0124	0702	22		27-09-11	001-099
	2		W0132	0002	22		27-09-11	115-199
	3	UNUSED						ALL
	4		W0124	0704	22		27-09-11	001-099
	4		W0132	0004	22		27-09-11	115-199
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0124	0707	22		34-31-31	001-099
	7		W0132	0007	22		34-31-31	115-199
	8		W0124	0708	20		34-24-11	001-099
	8		W0132	0008	20		34-24-11	115-199
	9		W0124	0709	22		34-24-11	001-099
	9		W0132	0009	22		34-24-11	115-199
	10		W0124	0710	20		22-31-12	001-099
	10		W0132	0010	20		22-31-12	115-199
	11		W0124	0711	20		22-11-32	001-099
	11		W0132	0011	20		22-11-32	115-199
	12		W0124	0001	24		30-31-11	001-099
	12		W0132	0055	22		34-22-16	115-199
	13		W0124	0031	22		34-22-16	001-099
	13	UNUSED						115-199
	14		W0124	0714	20		34-51-11	001-099
	14		W0132	0014	20		34-51-11	115-199
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						001-099
	18		W0132	0048	22		30-31-11	115-199
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0124	0752	16		23-12-11	001-099
	21		W0132	0102	16		23-12-11	115-199
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						001-004, 115-199
	24		W0124	0032	22		27-21-12	005-099
	25		W0124	0725	22		34-12-11	001-099
	25		W0132	0025	22		34-12-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 27

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40622J		P011-00/ /		RCPT- (continued)				001-099
D40622J		P11/ /		RCPT- (continued)				115-199
	26	UNUSED						ALL
	27		W0124	0041	22		27-51-31	001-099
	27	UNUSED						115-199
	28	UNUSED						ALL
	29		W0124	0032	22		27-21-12	001-004, 115-199
	29	UNUSED						005-099
	30	UNUSED						ALL
	31		W0124	0791	24		27-51-61	001-099
	31		W0132	0141	22		27-51-61	115-199
	32		W0124	0792	24		27-51-61	001-099
	32		W0132	0142	22		27-51-61	115-199
	33		W0124	0793	24		27-51-61	001-099
	33		W0132	0143	22		27-51-61	115-199
	34		W0124	0794	24		27-51-61	001-099
	34		W0132	0144	22		27-51-61	115-199
	35		W0124	0795	24		27-51-61	001-099
	35		W0132	0145	22		27-51-61	115-199
	36	UNUSED						001-099
	36		W0124	0302	22		34-61-15	115-199
	37		W0124	0807	20		74-31-11	001-099
	37		W0132	0207	20		74-31-11	115-199
	38	UNUSED						ALL
	39	UNUSED						ALL
D40622P		P11/ /		PLUG-				ALL
	1	UNUSED						ALL
	2		W2358	0112	22		27-09-11	ALL
	3	UNUSED						001-099
	3		W2358	0003	22		SPARE	115-199
	4		W2358	0114	22		27-09-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W2358	0007	22		34-31-31	ALL
	8		W2358	0008	20		34-24-11	ALL
	9		W2358	0009	24		34-24-11	ALL
	10		W2358	0010	20		22-31-12	ALL
	11		W2358	0011	20		22-11-32	ALL
	12		W2358	0406	24		30-31-11	001-099
	12		W2358	0212	22		34-22-16	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 28

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40622P		P11/ /		PLUG- (continued)				ALL
	13		W2358	0212	22		34-22-16	001-099
	13		W2358	0013	22		SPARE	115-199
	14		W2358	0014	22		34-51-11	ALL
	15	UNUSED						ALL
	16		W2358	0046	20		SPARE	ALL
	17	UNUSED						001-099
	17		W2358	0501	22		SPARE	115-199
	18	UNUSED						001-099
	18	18	W2358	0018	18		30-31-11	115-199
	19	UNUSED						ALL
	20	UNUSED						001-099
	20		W2358	0617	20		SPARE	115-199
	21		W2358	0102	16		23-12-11	ALL
	22	UNUSED						001-099
	22		W2358	0022	22		SPARE	115-199
	23	UNUSED						001-099
	23		W2358	0610	22		SPARE	115-199
	24	UNUSED						001-004
	24		W2358	0066	22		27-21-12	005-099
	24		W2358	0004	22		SPARE	115-199
	25		W2358	0025	24		34-12-11	ALL
	26	UNUSED						001-099
	26		W2358	0115	20		SPARE	115-199
	27		W2358	0052	22		27-51-31	001-099
	27	UNUSED						115-199
	28	UNUSED						001-099
	28		W2358	0608	22		SPARE	115-199
	29		W2358	0068	22		27-21-12	001-004
	29	UNUSED						005-099
	29		W2358	0609	22		27-21-12	115-199
	30	UNUSED						001-099
	30		W2358	0606	22		SPARE	115-199
	31		W2358	0241	24		27-51-61	001-099
	31		W2358	0241	22		27-51-61	115-199
	32		W2358	0242	24		27-51-61	001-099
	32		W2358	0242	22		27-51-61	115-199
	33		W2358	0243	24		27-51-61	001-099
	33		W2358	0243	22		27-51-61	115-199
	34		W2358	0244	24		27-51-61	001-099
	34		W2358	0244	22		27-51-61	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 29

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40622P		P11/ /		PLUG- (continued)				ALL
	35		W2358	0245	24		27-51-61	001-099
	35		W2358	0245	22		27-51-61	115-199
	36	UNUSED						001-099
	36		W2358	0054	22		34-61-15	115-199
	37		W2358	0349	20		74-31-11	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
D40624J		P011-00/ /		RCPT-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0124	0763	22		31-51-12	001-099
	13		W0132	0113	22		31-51-12	115-199
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W0124	0746	24		36-11-31	001-099
	17		W0132	0046	24		36-11-31	115-199
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W0124	0951	22		27-32-11	001-099
	20		W0132	0351	22		27-32-11	115-199
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 30

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40624J		P011-00/ /		RCPT- (continued)				ALL
	29		W0124	0953	22		27-09-11	001-099
	29		W0132	0353	22		27-09-11	115-199
	30		W0124	0954	22		27-09-11	001-099
	30		W0132	0354	22		27-09-11	115-199
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W0124	0808	20		74-31-21	001-099
	38		W0132	0208	22		74-31-21	115-199
	39	UNUSED						ALL
D40624P		P011-00/ /		PLUG-				001-099
D40624P		P11/ /		PLUG-				115-199
	1		W2360	0001	22		SPARE	ALL
	2	UNUSED						ALL
	3		W2360	0603	22		SPARE	ALL
	4		W2360	0604	22		SPARE	ALL
	5		W2360	0605	22		SPARE	ALL
	6	UNUSED						001-099
	6		W2360	0616	22		SPARE	115-199
	7	UNUSED						001-099
	7		W2360	0617	22		SPARE	115-199
	8	UNUSED						001-099
	8		W2360	0618	22		SPARE	115-199
	9	UNUSED						001-099
	9		W2360	0619	22		SPARE	115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W2360	0013	22		31-51-12	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						001-099
	16		W2360	0606	22		SPARE	115-199
	17		W2360	0607	24		36-11-31	ALL
	18	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 31

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40624P		P011-00/ /		PLUG- (continued)				001-099
D40624P		P11/ /		PLUG- (continued)				115-199
	18		W2360	0608	22		SPARE	115-199
	19	UNUSED						001-099
	19		W2360	0609	20		SPARE	115-199
	20		W2360	0120	22		27-32-11	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W2360	0029	22		27-09-11	ALL
	30		W2360	0030	22		27-09-11	ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W2360	0208	20		74-31-21	ALL
	39	UNUSED						ALL
D40626J		P011-00/ /		RCPT-				001-099
D40626J		P011-00/ /		RCPT				115-199
	1		W0128	0951	20		22-11-31	001-099
	1		W0136	0001	20		22-11-31	115-199
	2	UNUSED						ALL
	3		W0128	0953	20		22-11-32	001-099
	3		W0136	0003	20		22-11-32	115-199
	4		W0128	0960	22		34-33-31	001-099
	4		W0136	0010	22		34-33-31	115-199
	5		W0128	0961	22		34-21-31	001-099
	5		W0136	0011	22		34-21-31	115-199
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0128	0959	22		27-48-21	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 32

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40626J		P011-00/ /		RCPT- (continued)				001-099
D40626J		P011-00/ /		RCPT (continued)				115-199
	9		W0136	0009	22		27-48-21	115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D40626P		P011-00/ /		PLUG-				001-099
D40626P		P11/ /		PLUG-				115-199
	1		W2362	0001	20		22-11-31	ALL
	2		W2362	0002	20		SPARE	ALL
	3		W2362	0003	20		22-11-32	ALL
	4		W2362	0004	22		34-33-31	ALL
	5		W2362	0005	20		34-21-31	ALL
	6		W2362	0106	22		SPARE	ALL
	7	UNUSED						001-099
	7		W2362	0107	22		SPARE	115-199
	8		W2362	0108	22		SPARE	ALL
	9		W2362	0109	22		27-48-21	ALL
	10	UNUSED						ALL
	11	UNUSED						001-099
	11		W2362	0101	20		SPARE	115-199
	12	UNUSED						001-099
	12		W2362	0102	20		SPARE	115-199
	13	UNUSED						001-099
	13		W2362	0103	20		SPARE	115-199
	14	UNUSED						001-099
	14		W2362	0104	20		SPARE	115-199
	15	UNUSED						ALL
D40628J		AC0820/ /		RCPT				115-199
	1		W4006	0003	22		21-51-13	115-199
	2		W4006	0004	22		21-51-13	115-199
	3		W4006	0005	22		21-51-13	115-199
	4		W4006	0006	22		21-51-13	115-199
	5		W4006	0030	22		21-51-13	115-199
	6		W4006	0031	22		21-51-13	115-199
	7		W4006	2012B	24		21-51-14	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 33

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40628J		AC0820/ /		RCPT (continued)				115-199
	8		W4006	2012R	24		21-51-14	115-199
	9		W4006	2015B	24		21-51-14	115-199
	10		W4006	2015R	24		21-51-14	115-199
	11		W4006	2029B	24		21-51-14	115-199
	12		W4006	2029R	24		21-51-14	115-199
	13		W4006	2041B	24		21-51-12	115-199
	14		W4006	2041R	24		21-51-12	115-199
	15		W4006	2042B	24		21-51-15	115-199
	16		W4006	2042R	24		21-51-15	115-199
	17		W4006	2051B	24		21-51-12	115-199
	18		W4006	2051R	24		21-51-12	115-199
	19		W4006	3001B	24		21-51-12	115-199
	20		W4006	3001R	24		21-51-12	115-199
	21		W4006	3001Y	24		21-51-12	115-199
	22		W4006	3002B	24		21-51-12	115-199
	23		W4006	3002R	24		21-51-12	115-199
	24		W4006	3002Y	24		21-51-12	115-199
	25		W4006	3003B	24		21-51-12	115-199
	26		W4006	3003R	24		21-51-12	115-199
	27		W4006	3003Y	24		21-51-12	115-199
	28		W4006	3004B	24		21-51-12	115-199
	29		W4006	3004R	24		21-51-12	115-199
	30		W4006	3004Y	24		21-51-12	115-199
	31		W4006	3005B	24		21-51-12	115-199
	32		W4006	3005R	24		21-51-12	115-199
	33		W4006	3005Y	24		21-51-12	115-199
	34		W4006	3006B	24		21-51-12	115-199
	35		W4006	3006R	24		21-51-12	115-199
	36		W4006	3006Y	24		21-51-12	115-199
	37		W4006	3009B	24		21-51-12	115-199
	38		W4006	3009R	24		21-51-12	115-199
	39		W4006	3009Y	24		21-51-12	115-199
	40		W4006	0051	22		SPARE	115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46		W4006	2002B	24		SPARE	115-199
	47		W4006	2002R	24		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 34

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40628J		AC0820/ /		RCPT (continued)				115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51		W4006	0053	22		SPARE	115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D40628P		820/ /		PLUG				115-199
	1		W2706	0003	22		21-51-13	115-199
	2		W2706	0004	22		21-51-13	115-199
	3		W2706	0005	22		21-51-13	115-199
	4		W2706	0006	22		21-51-13	115-199
	5		W2706	0030	22		21-51-13	115-199
	6		W2706	0031	22		21-51-13	115-199
	7		W2706	2012B	24		21-51-14	115-199
	8		W2706	2012R	24		21-51-14	115-199
	9		W2706	2015B	24		21-51-14	115-199
	10		W2706	2015R	24		21-51-14	115-199
	11		W2706	2029B	24		21-51-14	115-199
	12		W2706	2029R	24		21-51-14	115-199
	13		W2706	2041B	24		21-51-12	115-199
	14		W2706	2041R	24		21-51-12	115-199
	15		W2706	2042B	24		21-51-15	115-199
	16		W2706	2042R	24		21-51-15	115-199
	17		W2706	2051B	24		21-51-12	115-199
	18		W2706	2051R	24		21-51-12	115-199
	19		W2706	3001B	24		21-51-12	115-199
	20		W2706	3001R	24		21-51-12	115-199
	21		W2706	3001Y	24		21-51-12	115-199
	22		W2706	3002B	24		21-51-12	115-199
	23		W2706	3002R	24		21-51-12	115-199
	24		W2706	3002Y	24		21-51-12	115-199
	25		W2706	3003B	24		21-51-12	115-199
	26		W2706	3003R	24		21-51-12	115-199
	27		W2706	3003Y	24		21-51-12	115-199
	28		W2706	3004B	24		21-51-12	115-199
	29		W2706	3004R	24		21-51-12	115-199
	30		W2706	3004Y	24		21-51-12	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 35

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40628P		820/ /		PLUG (continued)				115-199
	31		W2706	3005B	24		21-51-12	115-199
	32		W2706	3005R	24		21-51-12	115-199
	33		W2706	3005Y	24		21-51-12	115-199
	34		W2706	3006B	24		21-51-12	115-199
	35		W2706	3006R	24		21-51-12	115-199
	36		W2706	3006Y	24		21-51-12	115-199
	37		W2706	3009B	24		21-51-12	115-199
	38		W2706	3009R	24		21-51-12	115-199
	39		W2706	3009Y	24		21-51-12	115-199
	40		W2706	0007	24		SPARE	115-199
	41		W2706	0008	24		SPARE	115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45		W2706	0009	24		SPARE	115-199
	46		W2706	2000B	24		SPARE	115-199
	47		W2706	2000R	24		SPARE	115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D40629J		AP0001/ /		RCPT-				ALL
	1		W2241	0058	22		22-11-12	ALL
	2		W2241	0059	22		SPARE	001-099
	2		W2241	0059	22		22-11-12	115-199
	3		W2241	0060	22		22-11-12	ALL
	4		W2241	0061	22		22-11-12	ALL
	5		W2241	5015R	24		22-12-11	ALL
	6		W2241	5015B	24		22-12-11	ALL
	7		W2241	5015Z			22-12-11	ALL
	8		W2241	5016R	24		22-13-11	ALL
	9		W2241	5016B	24		22-13-11	ALL
	10		W2241	5016Z			22-13-11	ALL
	11		W2241	5017R	24		34-55-11	ALL
	12		W2241	5017B	24		34-55-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 36

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40629J		AP0001/ /		RCPT- (continued)				ALL
	13		W2241	5017Z			34-55-11	ALL
	14		W2241	0062	22		34-55-11	ALL
	15		W2241	5018R	24		34-51-11	ALL
	16		W2241	5018B	24		34-51-11	ALL
	17		W2241	5018Z			34-51-11	ALL
	18		W2241	5019R	24		34-51-11	ALL
	19		W2241	5019B	24		34-51-11	ALL
	20		W2241	5019Z			34-51-11	ALL
	21		W2241	2004R	22		34-51-11	ALL
	22		W2241	2004B	22		34-51-11	ALL
	23		W2241	0063	22		34-51-11	ALL
	24		W2241	5020R	24		34-31-11	ALL
	25		W2241	5020B	24		34-31-11	ALL
	26		W2241	5020Z			34-31-11	ALL
	27	UNUSED						001-099
	27		W2241	0064	22		SPARE	115-199
	28	UNUSED						001-099
	28		W2241	0065	22		SPARE	115-199
	29	UNUSED						001-099
	29		W2241	2525R	24		SPARE	115-199
	30	UNUSED						001-099
	30		W2241	2525B	24		SPARE	115-199
	31	UNUSED						001-099
	31		W2241	2525Z			SPARE	115-199
	32	UNUSED						001-099
	32		W2241	2526R	24		SPARE	115-199
	33	UNUSED						001-099
	33		W2241	2526B	24		SPARE	115-199
	34	UNUSED						001-099
	34		W2241	2526Z			SPARE	115-199
	35		W2241	0066	22		SPARE	ALL
	36	UNUSED						001-099
	36		W2241	0099	22		SPARE	115-199
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W2241	3502R	24		23-51-12	ALL
	41		W2241	3502B	24		23-51-12	ALL
	42		W2241	3502Y	24		23-51-12	ALL
	43		W2241	3502Z			23-51-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 37

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40629J		AP0001/ /		RCPT- (continued)				ALL
	44		W2241	5021R	24		SPARE	ALL
	45		W2241	5021B	24		SPARE	ALL
	46		W2241	5021Z			SPARE	ALL
	47		W2241	0068	24		22-32-15	ALL
	48		W2241	0069	24		22-32-15	ALL
	49		W2241	5024R	24		22-14-11	ALL
	50		W2241	5024B	24		22-14-11	ALL
	51		W2241	5024Z			22-14-11	ALL
	52	UNUSED						001-099
	52		W2241	0091	22		34-12-12	115-199
	53	UNUSED						001-099
	53		W2241	0092	22		34-12-12	115-199
	54	UNUSED						ALL
	55	UNUSED						ALL
D40629P		AP0001/ /		PLUG-				ALL
	1		W2041	0003	22		22-11-12	ALL
	2	UNUSED						001-099
	2		W2041	0004	22		22-11-12	115-199
	3		W2041	0005	22		22-11-12	ALL
	4		W2041	0006	22		22-11-12	ALL
	5		W2041	5001R	24		22-12-11	ALL
	6		W2041	5001B	24		22-12-11	ALL
	7		W2041	5001Z			22-12-11	ALL
	8		W2041	5002R	24		22-13-11	ALL
	9		W2041	5002B	24		22-13-11	ALL
	10		W2041	5002Z			22-13-11	ALL
	11		W2041	5003R	24		34-55-11	ALL
	12		W2041	5003B	24		34-55-11	ALL
	13		W2041	5003Z			34-55-11	ALL
	14		W2041	0013	22		34-55-11	ALL
	15		W2041	5004R	24		34-51-11	ALL
	16		W2041	5004B	24		34-51-11	ALL
	17		W2041	5004Z			34-51-11	ALL
	18		W2041	5005R	24		34-51-11	ALL
	19		W2041	5005B	24		34-51-11	ALL
	20		W2041	5005Z			34-51-11	ALL
	21		W2041	2001R	22		34-51-11	ALL
	22		W2041	2001B	22		34-51-11	ALL
	23		W2041	0014	22		34-51-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 38

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40629P		AP0001/ /		PLUG- (continued)				ALL
	24		W2041	5006R	24		34-31-11	ALL
	25		W2041	5006B	24		34-31-11	ALL
	26		W2041	5006Z			34-31-11	ALL
	27	UNUSED						001-099
	27		W2041	0027	22		SPARE	115-199
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						001-099
	35		W2041	0029	22		SPARE	115-199
	36	UNUSED						001-099
	36		W2041	0030	22		SPARE	115-199
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W2041	3501R	24		23-51-12	ALL
	41		W2041	3501B	24		23-51-12	ALL
	42		W2041	3501Y	24		23-51-12	ALL
	43		W2041	3501Z			23-51-12	ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47		W2041	0017	24		22-32-15	ALL
	48		W2041	0018	24		22-32-15	ALL
	49		W2041	5007R	24		22-14-11	ALL
	50		W2041	5007B	24		22-14-11	ALL
	51		W2041	5007Z			22-14-11	ALL
	52	UNUSED						001-099
	52		W2041	0034	22		34-12-12	115-199
	53	UNUSED						001-099
	53		W2041	0033	22		34-12-12	115-199
	54	UNUSED						ALL
	55	UNUSED						ALL
D40630J		AC0820/ /		RCPT				115-199
	1		W4006	0050	24		21-51-14	115-199

HOOKUP LIST
D280N032

91-21-51
Section D40600
Page 39
Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40630J		AC0820/ /		RCPT (continued)				115-199
	2		W4006	0085	24		21-51-13	115-199
	3		W4006	0091	24		21-51-13	115-199
	4		W4006	0092	24		21-51-13	115-199
	5		W4006	0093	24		21-51-13	115-199
	6		W4006	0094	24		21-51-13	115-199
	7		W4006	0095	24		21-51-13	115-199
	8		W4006	0096	24		21-51-13	115-199
	9		W4006	0099	24		21-51-13	115-199
	10		W4006	0126	24		21-51-11	115-199
	11		W4006	0135	24		21-51-12	115-199
	12		W4006	0160	24		21-51-15	115-199
	13		W4006	0162	24		21-51-15	115-199
	14		W4006	0212	22		32-42-11	115-199
	15		W4006	0213	22		32-42-11	115-199
	16		W4006	0214	22		32-42-11	115-199
	17		W4006	0232	24		32-42-11	115-199
	18		W4006	0235	24		SPARE	115-199
	19		W4006	0237	22		32-42-12	115-199
	20		W4006	0238	22		32-42-12	115-199
	21		W4006	0242	24		21-58-11	115-199
	22		W4006	0245	24		21-58-11	115-199
	23		W4006	0246	20		21-58-11	115-199
	24	UNUSED						115-199
	25		W4006	0250	22		21-58-24	115-199
	26		W4006	0251	22		21-58-24	115-199
	27		W4006	0252	22		21-58-24	115-199
	28		W4006	0253	22		21-58-24	115-199
	29		W4006	0254	22		21-58-24	115-199
	30		W4006	0257	20		21-51-12	115-199
	31		W4006	0259	24		21-61-51	115-199
	32		W4006	0261	24		SPARE	115-199
	33		W4006	2049B	24		21-51-12	115-199
	34		W4006	2049R	24		21-51-12	115-199
	35		W4006	2050B	24		21-61-51	115-199
	36		W4006	2050R	24		21-61-51	115-199
	37		W4006	5001B	22		32-42-11	115-199
	38		W4006	5001R	22		32-42-11	115-199
	39		W4006	5001Z			32-42-11	115-199
	40		W4006	1001	22		SPARE	115-199
	41		W4006	0269	22		32-42-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 40

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40630J		AC0820/ /		RCPT (continued)				115-199
	42	UNUSED						115-199
	43		W4006	0273	22		SPARE	115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48		W4006	0136	24		SPARE	115-199
	49	UNUSED						115-199
	50		W4006	0309	22		SPARE	115-199
	51	UNUSED						115-199
	52		W4006	0311	22		SPARE	115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
	DED		W4006	1001Z			SPARE	115-199
D40630P		820/ /		PLUG				115-199
	1		W2706	0050	24		21-51-14	115-199
	2		W2706	0085	24		21-51-13	115-199
	3		W2706	0091	24		21-51-13	115-199
	4		W2706	0092	24		21-51-13	115-199
	5		W2706	0093	24		21-51-13	115-199
	6		W2706	0094	24		21-51-13	115-199
	7		W2706	0095	24		21-51-13	115-199
	8		W2706	0096	24		21-51-13	115-199
	9		W2706	0099	24		21-51-13	115-199
	10		W2706	0126	24		21-51-11	115-199
	11		W2706	0135	24		21-51-12	115-199
	12		W2706	0160	24		21-51-15	115-199
	13		W2706	0162	24		21-51-15	115-199
	14		W2706	0212	22		32-42-11	115-199
	15		W2706	0213	22		32-42-11	115-199
	16		W2706	0214	22		32-42-11	115-199
	17		W2706	0232	22		32-42-11	115-199
	18	UNUSED						115-199
	19		W2706	0237	22		32-42-12	115-199
	20		W2706	0238	22		32-42-12	115-199
	21		W2706	0242	24		21-58-11	115-199
	22		W2706	0245	24		21-58-11	115-199
	23		W2706	0246	20		21-58-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 41

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40630P		820/ /		PLUG (continued)				115-199
	24	UNUSED						115-199
	25		W2706	0250	22		21-58-24	115-199
	26		W2706	0251	22		21-58-24	115-199
	27		W2706	0252	22		21-58-24	115-199
	28		W2706	0253	22		21-58-24	115-199
	29		W2706	0254	22		21-58-24	115-199
	30		W2706	0257	20		21-51-12	115-199
	31		W2706	0259	24		21-61-51	115-199
	32	UNUSED						115-199
	33		W2706	2049B	24		21-51-12	115-199
	34		W2706	2049R	24		21-51-12	115-199
	35		W2706	2050B	24		21-61-51	115-199
	36		W2706	2050R	24		21-61-51	115-199
	37		W2706	5001B	22		32-42-11	115-199
	38		W2706	5001R	22		32-42-11	115-199
	39		W2706	5001Z			32-42-11	115-199
	40	UNUSED						115-199
	41		W2706	0269	22		32-42-11	115-199
	42		W2706	0010	24		SPARE	115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48		W2706	0011	24		SPARE	115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D40631J		P003-00/ /		RCPT				001-099
D40631J		AP0003/ /		RCPT				115-199
	1		W2253	5007R	24		22-12-21	ALL
	2		W2253	5007B	24		22-12-21	ALL
	3		W2253	5007Z			22-12-21	ALL
	4		W2253	5008R	24		22-13-21	ALL
	5		W2253	5008B	24		22-13-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 42

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40631J		P003-00/ /		RCPT (continued)				001-099
D40631J		AP0003/ /		RCPT (continued)				115-199
	6		W2253	5008Z			22-13-21	ALL
	7		W2253	5009R	24		22-14-21	ALL
	8		W2253	5009B	24		22-14-21	ALL
	9		W2253	5009Z			22-14-21	ALL
	10		W2253	0032	22		22-11-22	ALL
	11		W2253	0033	22		22-11-22	ALL
	12		W2253	0034	22		SPARE	001-099
	12		W2253	0034	22		22-11-22	115-199
	13		W2253	0035	22		22-11-22	ALL
	14	UNUSED						001-099
	14		W2253	0036	22		SPARE	115-199
	15	UNUSED						001-099
	15		W2253	0037	22		SPARE	115-199
	16		W2253	0038	24		34-55-21	ALL
	17		W2253	5010R	24		34-55-21	ALL
	18		W2253	5010B	24		34-55-21	ALL
	19		W2253	5010Z			34-55-21	ALL
	20		W2253	5011R	24		34-51-21	ALL
	21		W2253	5011B	24		34-51-21	ALL
	22		W2253	5011Z			34-51-21	ALL
	23		W2253	5012R	24		34-51-21	ALL
	24		W2253	5012B	24		34-51-21	ALL
	25		W2253	5012Z			34-51-21	ALL
	26		W2253	2006R	22		34-51-21	ALL
	27		W2253	2006B	22		34-51-21	ALL
	28		W2253	0039	22		34-51-21	ALL
	29		W2253	5013R	24		34-51-21	ALL
	30		W2253	5013B	24		34-51-21	ALL
	31		W2253	5013Z			34-51-21	ALL
	32		W2253	3501R	24		23-51-12	ALL
	33		W2253	3501B	24		23-51-12	ALL
	34		W2253	3501Y	24		23-51-12	ALL
	35		W2253	3501Z			23-51-12	ALL
	36	UNUSED						001-099
	36		W2253	2511R	24		SPARE	115-199
	37	UNUSED						001-099
	37		W2253	2511B	24		SPARE	115-199
	38	UNUSED						001-099
	38		W2253	2511Z			SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 43

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40631J		P003-00/ /		RCPT (continued)				001-099
D40631J		AP0003/ /		RCPT (continued)				115-199
	39	UNUSED						001-099
	39		W2253	2510R	24		SPARE	115-199
	40	UNUSED						001-099
	40		W2253	2510B	24		SPARE	115-199
	41	UNUSED						001-099
	41		W2253	2510Z			SPARE	115-199
	42	UNUSED						001-099
	42		W2253	0077	22		SPARE	115-199
	43	UNUSED						001-099
	43		W2253	0078	22		SPARE	115-199
	44	UNUSED						001-099
	44		W2253	0085	22		34-12-22	115-199
	45	UNUSED						001-099
	45		W2253	0086	22		34-12-22	115-199
	46	UNUSED						001-099
	46		W2253	0095	22		SPARE	115-199
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D40631P		AP0003/ /		PLUG				ALL
	1		W2051	5001R	24		22-12-21	ALL
	2		W2051	5001B	24		22-12-21	ALL
	3		W2051	5001Z			22-12-21	ALL
	4		W2051	5002R	24		22-13-21	ALL
	5		W2051	5002B	24		22-13-21	ALL
	6		W2051	5002Z			22-13-21	ALL
	7		W2051	5003R	24		22-14-21	ALL
	8		W2051	5003B	24		22-14-21	ALL
	9		W2051	5003Z			22-14-21	ALL
	10		W2051	0005	22		22-11-22	ALL
	11		W2051	0006	22		22-11-22	ALL
	12	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 44

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40631P		AP0003/ /		PLUG (continued)				ALL
	12		W2051	0007	22		22-11-22	115-199
	13		W2051	0008	22		22-11-22	ALL
	14	UNUSED						001-099
	14		W2051	0023	22		SPARE	115-199
	15	UNUSED						001-099
	15		W2051	0024	22		SPARE	115-199
	16		W2051	0014	24		34-55-21	ALL
	17		W2051	5008R	24		34-55-21	ALL
	18		W2051	5008B	24		34-55-21	ALL
	19		W2051	5008Z			34-55-21	ALL
	20		W2051	5005R	24		34-51-21	ALL
	21		W2051	5005B	24		34-51-21	ALL
	22		W2051	5005Z			34-51-21	ALL
	23		W2051	5006R	24		34-51-21	ALL
	24		W2051	5006B	24		34-51-21	ALL
	25		W2051	5006Z			34-51-21	ALL
	26		W2051	2001R	22		34-51-21	ALL
	27		W2051	2001B	22		34-51-21	ALL
	28		W2051	0013	22		34-51-21	ALL
	29		W2051	5007R	24		34-51-21	ALL
	30		W2051	5007B	24		34-51-21	ALL
	31		W2051	5007Z			34-51-21	ALL
	32		W2051	3501R	24		23-51-12	ALL
	33		W2051	3501B	24		23-51-12	ALL
	34		W2051	3501Y	24		23-51-12	ALL
	35		W2051	3501Z			23-51-12	ALL
	36	UNUSED						ALL
	37	UNUSED						001-099
	37		W2051	0026	22		SPARE	115-199
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						001-099
	44		W2051	0028	22		34-12-22	115-199
	45	UNUSED						001-099
	45		W2051	0027	22		34-12-22	115-199
	46	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 45

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40631P		AP0003/ /		PLUG (continued)				ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D40632J		AC0820/ /		RCPT				115-199
	1		W4006	0163	24		21-51-15	115-199
	2		W4006	0185	22		32-42-11	115-199
	3		W4006	0211	24		32-46-11	115-199
	4		W4006	0215	24		32-46-11	115-199
	5		W4006	0216	24		32-46-11	115-199
	6		W4006	0217	24		32-46-11	115-199
	7		W4006	0218	24		32-46-11	115-199
	8		W4006	0219	24		32-46-11	115-199
	9		W4006	0220	24		32-46-11	115-199
	10		W4006	0221	24		32-46-11	115-199
	11		W4006	0222	24		32-46-11	115-199
	12		W4006	0223	24		32-41-11	115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20		W4006	0239	24		21-61-51	115-199
	21		W4006	2054B	24		21-51-12	115-199
	22		W4006	2054R	24		21-51-12	115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 46

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40632J		AC0820/ /		RCPT (continued)				115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
	32		W4006	0302	22		SPARE	115-199
	33		W4006	0303	22		SPARE	115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43		W4006	0138	22		SPARE	115-199
	44		W4006	0301	22		SPARE	115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D40632P		820/ /		PLUG				115-199
	1		W2706	0163	24		21-51-15	115-199
	2		W2706	0185	22		32-42-11	115-199
	3		W2706	0211	24		32-46-11	115-199
	4		W2706	0215	24		32-46-11	115-199
	5		W2706	0216	24		32-46-11	115-199
	6		W2706	0217	24		32-46-11	115-199
	7		W2706	0218	24		32-46-11	115-199
	8		W2706	0219	24		32-46-11	115-199
	9		W2706	0220	24		32-46-11	115-199
	10		W2706	0221	24		32-46-11	115-199
	11		W2706	0222	24		32-46-11	115-199
	12		W2706	0223	24		32-41-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 47

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40632P		820/ /		PLUG (continued)				115-199
	13		W2706	0224	24		SPARE	115-199
	14		W2706	0225	24		SPARE	115-199
	15		W2706	0226	24		SPARE	115-199
	16		W2706	0227	24		SPARE	115-199
	17		W2706	0228	24		SPARE	115-199
	18		W2706	0229	24		SPARE	115-199
	19		W2706	0230	24		SPARE	115-199
	20		W2706	0239	24		21-61-51	115-199
	21		W2706	2054B	24		21-51-12	115-199
	22		W2706	2054R	24		21-51-12	115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43		W2706	0012	24		SPARE	115-199
	44		W2706	0013	24		SPARE	115-199
	45		W2706	2002B	24		SPARE	115-199
	46		W2706	2002R	24		SPARE	115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 48

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40632P		820/ /		PLUG (continued)				115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D40633J		AP0001/ /		RCPT				ALL
	1		W2245	5003R	24		22-12-31	ALL
	2		W2245	5003B	24		22-12-31	ALL
	3		W2245	5003Z			22-12-31	ALL
	4		W2245	0004	22		22-11-32	ALL
	5		W2245	0005	22		22-11-32	ALL
	6		W2245	0006	22		SPARE	001-099
	6		W2245	0006	22		22-11-32	115-199
	7		W2245	5004R	24		SPARE	ALL
	8		W2245	5004B	24		SPARE	ALL
	9		W2245	5004Z			SPARE	ALL
	10	UNUSED						001-099
	10		W2245	0010	22		SPARE	115-199
	11	UNUSED						001-099
	11		W2245	0011	22		SPARE	115-199
	12	UNUSED						ALL
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D40633P		AP0001/ /		PLUG-				ALL
	1		W2061	5001R	24		22-12-31	ALL
	2		W2061	5001B	24		22-12-31	ALL
	3		W2061	5001Z			22-12-31	ALL
	4		W2061	0001	22		22-11-32	ALL
	5		W2061	0002	22		22-11-32	ALL
	6	UNUSED						001-099
	6		W2061	0003	22		22-11-32	115-199
	7	UNUSED						001-099
	7		W2061	0009	22		SPARE	115-199
	8	UNUSED						001-099
	8		W2061	0010	22		SPARE	115-199
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 49

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40633P		AP0001/ /		PLUG- (continued)				ALL
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D40639J		P051-00/ /		RCPT-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1451	0236	24		31-51-21	ALL
	5		W1451	0355	24		31-51-21	001-099
	5		W1451	0237	24		31-51-21	115-199
	6		W1451	0229	24		34-16-11	ALL
	7		W1451	5006B	24		22-14-11	ALL
	8		W1451	5006R	24		22-14-11	ALL
	9		W1451	FRAD			22-14-11	ALL
	10		W1451	0224	24		34-16-11	ALL
	11		W1451	0225	24		34-13-21	ALL
	12	UNUSED						ALL
	13		W1451	0416	24		31-51-43	ALL
	14		W1451	0217	24		31-51-42	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
			W1451	0185	20		22-14-11	ALL
			W1451	5006Z			22-14-11	ALL
			W1451	FRAD			22-14-11	ALL
D40639P		P051-00/ /		PLUG				001-099
D40639P		P51/ /		PLUG				115-199
	1	UNUSED						ALL
	2	UNUSED						001-099
	2		W2241	0052	22		SPARE	115-199
	3	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 50

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40639P		P051-00/ /		PLUG (continued)				001-099
D40639P		P51/ /		PLUG (continued)				115-199
	3		W2241	0053	22		SPARE	115-199
	4		W2241	0054	22		31-51-21	ALL
	5		W2241	0055	22		31-51-21	ALL
	6		W2241	0050	22		34-16-11	ALL
	7		W2241	5022B	24		22-14-11	ALL
	8		W2241	5022R	24		22-14-11	ALL
	9		W2241	5022Z			22-14-11	ALL
	10		W2241	0026	22		34-16-11	ALL
	11		W2241	0007	24		34-13-21	ALL
	12	UNUSED						001-099
	12		W2241	0043	22		SPARE	115-199
	13		W2241	0044	22		31-51-43	ALL
	14		W2241	0025	24		31-51-42	ALL
	15		W2241	2520R	24		SPARE	ALL
	16		W2241	2520B	24		SPARE	ALL
	17		W2241	2520Z			SPARE	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D40656J		E3-3/ /		PLUG				001-099
	1		W1330	0001	22		21-51-12	001-099
	2	UNUSED						001-099
	3		W1330	0007	24		21-51-12	001-099
	4		W1330	0008	24		21-51-12	001-099
	5		W1330	0009	24		21-51-12	001-099
	6		W1330	0010	24		21-51-12	001-099
	7		W1330	0011	24		21-51-12	001-099
	8		W1330	0012	24		21-51-12	001-099
	9		W1330	0013	24		21-51-12	001-099
	10		W1330	2001R	24		21-51-12	001-099
	11		W1330	2001B	24		21-51-12	001-099
	12		W1330	0171	24		21-51-14	001-099
	13		W1330	2033R	24		21-51-12	001-099
	14		W1330	2033B	24		21-51-12	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 51

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40656J		E3-3/ /		PLUG (continued)				001-099
	15		W1330	2032B	24		21-51-12	001-099
	16		W1330	2032R	24		21-51-12	001-099
	17		W1330	3019R	24		21-51-12	001-099
	18		W1330	3019Y	24		21-51-12	001-099
	19		W1330	3019B	24		21-51-12	001-099
	20		W1330	2029R	24		21-51-12	001-099
	21		W1330	2029B	24		21-51-12	001-099
	22		W1330	3001R	24		21-51-12	001-099
	23		W1330	3001B	24		21-51-12	001-099
	24		W1330	3001Y	24		21-51-12	001-099
	25		W1330	3002R	24		21-51-12	001-099
	26		W1330	3002B	24		21-51-12	001-099
	27		W1330	3002Y	24		21-51-12	001-099
	28		W1330	3003R	24		21-51-12	001-099
	29		W1330	3003B	24		21-51-12	001-099
	30		W1330	3003Y	24		21-51-12	001-099
	31		W1330	3004R	24		21-51-12	001-099
	32		W1330	3004B	24		21-51-12	001-099
	33		W1330	3004Y	24		21-51-12	001-099
	34		W1330	3005R	24		21-51-12	001-099
	35		W1330	3005B	24		21-51-12	001-099
	36		W1330	3005Y	24		21-51-12	001-099
	37		W1330	3006R	24		21-51-12	001-099
	38		W1330	3006B	24		21-51-12	001-099
	39		W1330	3006Y	24		21-51-12	001-099
	40		W1330	2002B	24		21-51-14	001-099
	41		W1330	2002R	24		21-51-14	001-099
	42		W1330	0025	24		21-51-15	001-099
	43		W1330	0026	24		21-51-15	001-099
	44		W1330	2003B	24		21-51-15	001-099
	45		W1330	2003R	24		21-51-15	001-099
	46		W1330	2025R	24		21-51-14	001-099
	47		W1330	2025B	24		21-51-14	001-099
	48		W1330	2026R	24		21-51-14	001-099
	49		W1330	2026B	24		21-51-14	001-099
	50		W1330	2027R	24		21-51-14	001-099
	51		W1330	2027B	24		21-51-14	001-099
	52	UNUSED						001-099
	53		W1330	0020	24		21-51-15	001-099
	54	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 52

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40656J		E3-3/ /		PLUG (continued)				001-099
	55	UNUSED						001-099
D40656P		E003-03/ /		PLUG				001-099
	1		W4006	0257	20		21-51-12	001-099
	2	UNUSED						001-099
	3		W4006	0071	24		21-51-12	001-099
	4		W4006	0070	24		21-51-12	001-099
	5		W4006	0069	24		21-51-12	001-099
	6		W4006	0068	24		21-51-12	001-099
	7		W4006	0067	24		21-51-12	001-099
	8		W4006	0066	24		21-51-12	001-099
	9		W4006	0134	24		21-51-12	001-099
	10		W4006	2040R	24		21-51-12	001-099
	11		W4006	2040B	24		21-51-12	001-099
	12		W4006	0266	24		21-51-14	001-099
	13		W4006	2054R	24		21-51-12	001-099
	14		W4006	2054B	24		21-51-12	001-099
	15		W4006	2049B	24		21-51-12	001-099
	16		W4006	2049R	24		21-51-12	001-099
	17		W4006	3009R	24		21-51-12	001-099
	18		W4006	3009Y	24		21-51-12	001-099
	19		W4006	3009B	24		21-51-12	001-099
	20		W4006	2051R	24		21-51-12	001-099
	21		W4006	2051B	24		21-51-12	001-099
	22		W4006	3001R	24		21-51-12	001-099
	23		W4006	3001B	24		21-51-12	001-099
	24		W4006	3001Y	24		21-51-12	001-099
	25		W4006	3002R	24		21-51-12	001-099
	26		W4006	3002B	24		21-51-12	001-099
	27		W4006	3002Y	24		21-51-12	001-099
	28		W4006	3003R	24		21-51-12	001-099
	29		W4006	3003B	24		21-51-12	001-099
	30		W4006	3003Y	24		21-51-12	001-099
	31		W4006	3004R	24		21-51-12	001-099
	32		W4006	3004B	24		21-51-12	001-099
	33		W4006	3004Y	24		21-51-12	001-099
	34		W4006	3005R	24		21-51-12	001-099
	35		W4006	3005B	24		21-51-12	001-099
	36		W4006	3005Y	24		21-51-12	001-099
	37		W4006	3006R	24		21-51-12	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 53

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40656P		E003-03/ /		PLUG (continued)				001-099
	38		W4006	3006B	24		21-51-12	001-099
	39		W4006	3006Y	24		21-51-12	001-099
	40		W4006	2014B	24		21-51-14	001-099
	41		W4006	2014R	24		21-51-14	001-099
	42		W4006	0161	24		21-51-15	001-099
	43		W4006	0163	24		21-51-15	001-099
	44		W4006	2042B	24		21-51-15	001-099
	45		W4006	2042R	24		21-51-15	001-099
	46		W4006	2029R	24		21-51-14	001-099
	47		W4006	2029B	24		21-51-14	001-099
	48		W4006	2012R	24		21-51-14	001-099
	49		W4006	2012B	24		21-51-14	001-099
	50		W4006	2013R	24		21-51-14	001-099
	51		W4006	2013B	24		21-51-14	001-099
	52	UNUSED						001-099
	53		W4006	0164	24		21-51-15	001-099
	54	UNUSED						001-099
	55	UNUSED						001-099
D40661J		1671/300/L10		PANEL JACK				001-099
D40661J		AA1671/ /		PANEL JACK				115-199
	= A1		W2723	001CX			34-51-11	ALL
	= C1		W2723	001CO			34-51-11	ALL
D40661P		1671/300/L10		PLUG				ALL
	= A1		W2825	001CX			34-51-11	ALL
	= C1		W2825	001CO			34-51-11	ALL
D40662J		P031-00/ /		RCPT				ALL
	1	UNUSED						ALL
	2		W1136	0137	22		25-31-33	ALL
	3		W1136	0138	22		25-31-33	ALL
	4	UNUSED						ALL
	5		W1136	0140	22		25-31-33	ALL
	6		W1136	0139	22		25-31-33	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 54

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40662J		P031-00/ /		RCPT (continued)				ALL
	12	UNUSED						ALL
D40662P		P031-00/ /		PLUG-				ALL
	1	UNUSED						ALL
	2		W3536	0004	22		25-31-33	ALL
	3		W3536	0005	22		25-31-33	ALL
	4	UNUSED						ALL
	5		W3536	0007	20		25-31-33	ALL
	6		W3536	0006	22		25-31-33	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D40663J		1671/300/R10		PANEL JACK				001-099
D40663J		AB1671/ /		PANEL JACK				115-199
	= A1		W2725	001CX			34-51-21	ALL
	= C1		W2725	001CO			34-51-21	ALL
D40663P		1671/ /		PLUG				001-099
D40663P		AB1671/ /		PLUG				115-199
	= A1		W2827	001CX			34-51-21	ALL
	= C1		W2827	001CO			34-51-21	ALL
D40664J		P032-00/ /		RCPT				ALL
	1		W1138	0168	22		25-31-11	001-099
	1		W1138	0107	22		25-31-21	115-199
	2		W1138	0169	22		25-31-11	001-099
	2		W1138	0108	22		25-31-21	115-199
	3		W1138	0170	22		25-31-11	001-099
	3		W1138	0109	22		25-31-21	115-199
	4		W1138	0121	22		33-27-11	001-099
	4		W1138	0110	22		25-31-21	115-199
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1138	0171	22		25-31-11	001-099
	7	UNUSED						115-199
	8	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 55

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40664J		P032-00/ /		RCPT (continued)				ALL
	9	UNUSED						001-099
	9		W1138	0115	22		33-27-21	115-199
	10	UNUSED						001-099
	10		W1138	0116	22		33-27-21	115-199
	11	UNUSED						001-099
	11		W1138	0120	22		33-27-11	115-199
	12	UNUSED						001-099
	12		W1138	0119	22		33-27-11	115-199
	13	UNUSED						001-099
	13		W1138	0121	22		33-27-11	115-199
	14	UNUSED						ALL
	15	UNUSED						001-099
	15		W1138	0118	22		33-27-11	115-199
	16	UNUSED						115-199
	17		W1138	0117	20		33-27-21	115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
D40664P		P032-00/ /		PLUG-				001-099
D40664P		P32/ /		PLUG-				115-199
	1		W3644	0047	22		25-31-11	001-099
	1		W3644	0002	22		25-31-21	115-199
	2		W3644	0048	22		25-31-11	001-099
	2		W3644	0003	22		25-31-21	115-199
	3		W3644	0049	22		25-31-11	001-099
	3		W3644	0004	22		25-31-21	115-199
	4		W3644	0006	22		33-27-11	001-099
	4		W3644	0005	22		25-31-21	115-199
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W3644	0050	22		25-31-11	001-099
	7	UNUSED						115-199
	8	UNUSED						ALL
	9	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 56

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40664P		P032-00/ /		PLUG- (continued)				001-099
D40664P		P32/ /		PLUG- (continued)				115-199
	9		W3644	0016	22		33-27-21	115-199
	10	UNUSED						001-099
	10		W3644	0017	22		33-27-21	115-199
	11	UNUSED						001-099
	11		W3644	0034	22		33-27-11	115-199
	12	UNUSED						ALL
	13		W3644	0059	22		SPARE	001-099
	13		W3644	0029	22		33-27-11	115-199
	14		W3644	0060	22		SPARE	001-099
	14	UNUSED						115-199
	15	UNUSED						001-099
	15		W3644	0030	20		33-27-11	115-199
	16	UNUSED						115-199
	17		W3644	0015	22		33-27-21	115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
D40666J		E3-2/ /		PLUG				001-099
	1		W1332	0355	24		21-51-22	001-099
	2		W1332	0354	24		21-51-22	001-099
	3		W1332	0353	24		21-51-22	001-099
	4		W1332	0352	24		21-51-22	001-099
	5		W1332	0351	24		21-51-22	001-099
	6		W1332	0350	24		21-51-22	001-099
	7		W1332	0356	24		21-51-22	001-099
	8		W1332	0368	24		21-51-25	001-099
	9		W1332	2001R	24		21-51-22	001-099
	10		W1332	2001B	24		21-51-22	001-099
	11		W1332	2104B	24		21-51-24	001-099
	12		W1332	2104R	24		21-51-24	001-099
	13		W1332	3010R	24		21-51-22	001-099
	14		W1332	3010B	24		21-51-22	001-099
	15		W1332	3010Y	24		21-51-22	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 57

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40666J		E3-2/ /		PLUG (continued)				001-099
	16		W1332	3011R	24		21-51-22	001-099
	17		W1332	3011B	24		21-51-22	001-099
	18		W1332	3011Y	24		21-51-22	001-099
	19		W1332	3012B	24		21-51-22	001-099
	20		W1332	3012R	24		21-51-22	001-099
	21		W1332	3012Y	24		21-51-22	001-099
	22		W1332	3013R	24		21-51-22	001-099
	23		W1332	3013B	24		21-51-22	001-099
	24		W1332	3013Y	24		21-51-22	001-099
	25		W1332	3015R	24		21-51-22	001-099
	26		W1332	3015B	24		21-51-22	001-099
	27		W1332	3015Y	24		21-51-22	001-099
	28		W1332	3014R	24		21-51-22	001-099
	29		W1332	3014B	24		21-51-22	001-099
	30		W1332	3014Y	24		21-51-22	001-099
	31		W1332	2002B	24		21-51-22	001-099
	32		W1332	2002R	24		21-51-22	001-099
	33		W1332	2003B	24		21-51-22	001-099
	34		W1332	2003R	24		21-51-22	001-099
	35		W1332	0369	24		21-51-25	001-099
	36		W1332	0370	24		21-51-25	001-099
	37		W1332	2105B	24		21-51-25	001-099
	38		W1332	2105R	24		21-51-25	001-099
	39	UNUSED						001-099
	40	UNUSED						001-099
	41	UNUSED						001-099
	42	UNUSED						001-099
	43		W1332	2106B	24		21-51-22	001-099
	44		W1332	2106R	24		21-51-22	001-099
	45		W1332	3017R	24		21-51-22	001-099
	46		W1332	3017B	24		21-51-22	001-099
	47		W1332	3017Y	24		21-51-22	001-099
	48		W1332	0346	22		21-51-22	001-099
	49	UNUSED						001-099
	50	UNUSED						001-099
	51	UNUSED						001-099
	52	UNUSED						001-099
	53	UNUSED						001-099
	54		W1332	2103B	24		21-51-22	001-099
	55		W1332	2103R	24		21-51-22	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 58

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40666P		E003-02/ /		PLUG				001-099
	1		W4106	0001	24		21-51-22	001-099
	2		W4106	0002	24		21-51-22	001-099
	3		W4106	0003	24		21-51-22	001-099
	4		W4106	0004	24		21-51-22	001-099
	5		W4106	0005	24		21-51-22	001-099
	6		W4106	0006	24		21-51-22	001-099
	7		W4106	0007	24		21-51-22	001-099
	8		W4106	0168	24		21-51-25	001-099
	9		W4106	2054R	24		21-51-22	001-099
	10		W4106	2054B	24		21-51-22	001-099
	11		W4106	2022B	24		21-51-24	001-099
	12		W4106	2022R	24		21-51-24	001-099
	13		W4106	3001R	24		21-51-22	001-099
	14		W4106	3001B	24		21-51-22	001-099
	15		W4106	3001Y	24		21-51-22	001-099
	16		W4106	3002R	24		21-51-22	001-099
	17		W4106	3002B	24		21-51-22	001-099
	18		W4106	3002Y	24		21-51-22	001-099
	19		W4106	3003B	24		21-51-22	001-099
	20		W4106	3003R	24		21-51-22	001-099
	21		W4106	3003Y	24		21-51-22	001-099
	22		W4106	3004R	24		21-51-22	001-099
	23		W4106	3004B	24		21-51-22	001-099
	24		W4106	3004Y	24		21-51-22	001-099
	25		W4106	3006R	24		21-51-22	001-099
	26		W4106	3006B	24		21-51-22	001-099
	27		W4106	3006Y	24		21-51-22	001-099
	28		W4106	3005R	24		21-51-22	001-099
	29		W4106	3005B	24		21-51-22	001-099
	30		W4106	3005Y	24		21-51-22	001-099
	31		W4106	2049B	24		21-51-22	001-099
	32		W4106	2049R	24		21-51-22	001-099
	33		W4106	2051B	24		21-51-22	001-099
	34		W4106	2051R	24		21-51-22	001-099
	35		W4106	0170	24		21-51-25	001-099
	36		W4106	0171	24		21-51-25	001-099
	37		W4106	2026B	24		21-51-25	001-099
	38		W4106	2026R	24		21-51-25	001-099
	39		W4106	0242	24		SPARE	001-099
	40		W4106	0243	24		SPARE	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 59

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40666P		E003-02/ /		PLUG (continued)				001-099
	41		W4106	0244	22		SPARE	001-099
	42		W4106	0245	22		SPARE	001-099
	43		W4106	2030B	24		21-51-22	001-099
	44		W4106	2030R	24		21-51-22	001-099
	45		W4106	3011R	24		21-51-22	001-099
	46		W4106	3011B	24		21-51-22	001-099
	47		W4106	3011Y	24		21-51-22	001-099
	48		W4106	0241	20		21-51-22	001-099
	49		W4106	0248	24		SPARE	001-099
	50		W4106	0249	24		SPARE	001-099
	51	UNUSED						001-099
	52	UNUSED						001-099
	53	UNUSED						001-099
	54		W4106	2035B	24		21-51-22	001-099
	55		W4106	2035R	24		21-51-22	001-099
D40670J		E3-3/ /		PLUG				001-099
	1		W1330	0027	24		21-51-24	001-099
	2		W1330	2004R	24		21-51-24	001-099
	3		W1330	2004B	24		21-51-24	001-099
	4		W1330	2005R	24		21-51-24	001-099
	5		W1330	2005B	24		21-51-24	001-099
	6		W1330	2006R	24		21-51-24	001-099
	7		W1330	2006B	24		21-51-24	001-099
	8		W1330	3007R	24		21-61-11	001-099
	9		W1330	3007B	24		21-61-11	001-099
	10		W1330	3007Y	24		21-61-11	001-099
	11		W1330	0030	24		21-61-11	001-099
	12		W1330	0031	24		21-61-11	001-099
	13		W1330	0032	24		21-61-11	001-099
	14		W1330	0033	24		21-61-11	001-099
	15		W1330	0034	24		21-61-11	001-099
	16		W1330	3018R	24		21-61-11	001-099
	17		W1330	3018B	24		21-61-11	001-099
	18		W1330	3018Y	24		21-61-11	001-099
	19		W1330	2007R	24		21-61-11	001-099
	20		W1330	2007B	24		21-61-11	001-099
	21		W1330	2008R	24		21-61-11	001-099
	22		W1330	2008B	24		21-61-11	001-099
	23		W1330	3008R	24		21-61-21	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 60

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40670J		E3-3/ /		PLUG (continued)				001-099
	24		W1330	3008B	24		21-61-21	001-099
	25		W1330	3008Y	24		21-61-21	001-099
	26		W1330	0038	24		21-61-21	001-099
	27		W1330	0039	24		21-61-21	001-099
	28		W1330	0040	24		21-61-21	001-099
	29		W1330	0041	24		21-61-21	001-099
	30		W1330	0042	24		21-61-21	001-099
	31		W1330	3020R	24		21-61-21	001-099
	32		W1330	3020B	24		21-61-21	001-099
	33		W1330	3020Y	24		21-61-21	001-099
	34		W1330	2009R	24		21-61-21	001-099
	35		W1330	2009B	24		21-61-21	001-099
	36		W1330	2030R	24		21-61-11	001-099
	37		W1330	2030B	24		21-61-11	001-099
	38	UNUSED						001-099
	39	UNUSED						001-099
	40	UNUSED						001-099
	41	UNUSED						001-099
	42	UNUSED						001-099
	43	UNUSED						001-099
	44	UNUSED						001-099
	45	UNUSED						001-099
	46	UNUSED						001-099
	47	UNUSED						001-099
	48	UNUSED						001-099
	49	UNUSED						001-099
	50	UNUSED						001-099
	51	UNUSED						001-099
	52	UNUSED						001-099
	53	UNUSED						001-099
	54	UNUSED						001-099
	55	UNUSED						001-099
D40670P		E003-03/ /		PLUG				001-099
	1		W4106	0066	24		21-51-24	001-099
	2		W4106	2021R	24		21-51-24	001-099
	3		W4106	2021B	24		21-51-24	001-099
	4		W4106	2023R	24		21-51-24	001-099
	5		W4106	2023B	24		21-51-24	001-099
	6		W4106	2024R	24		21-51-24	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 61

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40670P		E003-03/ /		PLUG (continued)				001-099
	7		W4106	2024B	24		21-51-24	001-099
	8		W4106	3007R	24		21-61-11	001-099
	9		W4106	3007B	24		21-61-11	001-099
	10		W4106	3007Y	24		21-61-11	001-099
	11		W4106	0174	24		21-61-11	001-099
	12		W4106	0175	24		21-61-11	001-099
	13		W4106	0176	24		21-61-11	001-099
	14		W4106	0177	24		21-61-11	001-099
	15		W4106	0178	24		21-61-11	001-099
	16		W4106	3018R	24		21-61-11	001-099
	17		W4106	3018B	24		21-61-11	001-099
	18		W4106	3018Y	24		21-61-11	001-099
	19		W4106	2028R	24		21-61-11	001-099
	20		W4106	2028B	24		21-61-11	001-099
	21		W4106	2027R	24		21-61-11	001-099
	22		W4106	2027B	24		21-61-11	001-099
	23		W4106	3008R	24		21-61-21	001-099
	24		W4106	3008B	24		21-61-21	001-099
	25		W4106	3008Y	24		21-61-21	001-099
	26		W4106	0193	24		21-61-21	001-099
	27		W4106	0194	24		21-61-21	001-099
	28		W4106	0195	24		21-61-21	001-099
	29		W4106	0196	24		21-61-21	001-099
	30		W4106	0197	24		21-61-21	001-099
	31		W4106	3010R	24		21-61-21	001-099
	32		W4106	3010B	24		21-61-21	001-099
	33		W4106	3010Y	24		21-61-21	001-099
	34		W4106	2001R	24		21-61-21	001-099
	35		W4106	2001B	24		21-61-21	001-099
	36		W4106	2055R	24		21-61-11	001-099
	37		W4106	2055B	24		21-61-11	001-099
	38	UNUSED						001-099
	39	UNUSED						001-099
	40	UNUSED						001-099
	41	UNUSED						001-099
	42	UNUSED						001-099
	43	UNUSED						001-099
	44	UNUSED						001-099
	45	UNUSED						001-099
	46	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 62

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40670P		E003-03/ /		PLUG (continued)				001-099
	47	UNUSED						001-099
	48	UNUSED						001-099
	49	UNUSED						001-099
	50	UNUSED						001-099
	51	UNUSED						001-099
	52	UNUSED						001-099
	53	UNUSED						001-099
	54	UNUSED						001-099
	55	UNUSED						001-099
D40671J		P1-1/ /		RCPT-				ALL
I	1	UNUSED						001-099
I	1		W0017	0070	22		34-61-16	115-199
I	2	UNUSED						001-099
I	2		W0017	0071	22		34-61-16	115-199
I	3	UNUSED						001-099
I	3		W0017	0072	22		34-61-16	115-199
	4		W0017	0001	24		34-22-82	ALL
	5		W0017	0002	20		34-22-82	ALL
	6		W0017	0060	24		34-61-15	ALL
	7		W0017	0061	24		34-61-15	ALL
I	8	UNUSED						001-099
I	8		W0017	0073	22		34-61-16	115-199
	9		W0017	0011	24		34-22-17	ALL
	10		W0017	0010	20		34-22-17	ALL
	11		W0017	0003	24		34-22-17	ALL
	12		W0017	0004	20		34-22-17	ALL
	13		W0017	0005	24		34-22-17	ALL
	14		W0017	0006	24		34-22-17	ALL
	15		W0017	0007	20		34-22-17	ALL
	16		W0017	0008	22		34-22-17	ALL
	17		W0017	0059	24		34-22-17	ALL
I	18	UNUSED						001-099
I	18		W0017	0077	22		34-61-15	115-199
I	19	UNUSED						001-099
I	19		W0017	0104	22		34-61-18	115-199
I	20	UNUSED						001-099
I	20		W0017	0105	22		34-61-18	115-199
	21		W0017	0009	20		34-22-17	ALL
	22		W0017	0026	20		33-13-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 63

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40671J		P1-1/ /		RCPT- (continued)				ALL
	23		W0017	0027	20		33-13-11	ALL
	24		W0017	0030	20		34-12-61	ALL
	25		W0017	0031	22		34-12-61	ALL
	26		W0017	0032	20		34-12-61	ALL
	27		W0017	0033	20		34-12-61	ALL
I	28	UNUSED						001-099
I	28		W0017	0100	22		34-61-18	115-199
	29		W0017	0035	22		34-12-61	ALL
	30		W0017	0036	22		34-12-61	ALL
	31		W0017	0037	22		34-13-11	ALL
	32		W0017	0043	22		34-22-16	ALL
	33		W0017	0044	20		34-22-16	ALL
I	34	UNUSED						001-099
I	34		W0017	0101	22		34-61-18	115-199
	35		W0017	0024	22		34-12-61	ALL
	36		W0017	0025	22		34-12-61	ALL
	37		W0017	0057	22		32-42-11	ALL
	38		W0017	0058	22		32-42-11	ALL
I	39	UNUSED						001-099
I	39		W0017	0102	22		34-61-18	115-199
I	40	UNUSED						001-099
I	40		W0017	0103	22		34-61-18	115-199
	41	UNUSED						ALL
D40671P		P1-1 MO/D/		PLUG				ALL
I	1	UNUSED						001-099
I	1		W0001	0680	22		34-61-16	115-199
I	2	UNUSED						001-099
I	2		W0001	0681	22		34-61-16	115-199
I	3	UNUSED						001-099
I	3		W0001	0682	22		34-61-16	115-199
	4		W0001	0417	24		34-22-82	ALL
	5		W0001	0416	20		34-22-82	ALL
	6		W0001	0175	22		34-61-15	ALL
	7		W0001	0176	22		34-61-15	ALL
I	8	UNUSED						001-099
I	8		W0001	0683	22		34-61-16	115-199
	9		W0001	0193	24		34-22-17	ALL
	10		W0001	0429	20		34-22-17	ALL
	11		W0001	0195	24		34-22-17	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 64

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40671P		P1-1 MO/D/		PLUG (continued)				ALL
	12		W0001	0430	20		34-22-17	ALL
	13		W0001	0196	24		34-22-17	ALL
	14		W0001	0197	24		34-22-17	ALL
	15		W0001	0431	20		34-22-17	ALL
	16		W0001	0198	22		34-22-17	ALL
	17		W0001	0194	24		34-22-17	ALL
I	18	UNUSED						001-099
I	18		W0001	0684	20		34-61-15	115-199
I	19	UNUSED						001-099
I	19		W0001	0472	22		34-61-18	115-199
I	20	UNUSED						001-099
	20		W0001	0473	22		34-61-18	115-199
	21		W0001	0432	20		34-22-17	ALL
	22		W0001	0091	20		33-13-11	ALL
	23		W0001	0086	20		33-13-11	ALL
	24		W0001	0223	20		34-12-61	ALL
	25		W0001	0222	20		34-12-61	ALL
	26		W0001	0224	20		34-12-61	ALL
	27		W0001	0221	20		34-12-61	ALL
I	28	UNUSED						001-099
I	28		W0001	0468	22		34-61-18	115-199
	29		W0001	0241	22		34-12-61	ALL
	30		W0001	0242	22		34-12-61	ALL
	31		W0001	0402	24		34-13-11	ALL
	32		W0001	0192	22		34-22-16	ALL
	33		W0001	0191	20		34-22-16	ALL
I	34	UNUSED						001-099
I	34		W0001	0469	22		34-61-18	115-199
	35		W0001	0275	22		34-12-61	ALL
	36		W0001	0276	22		34-12-61	ALL
	37		W0001	0273	22		32-42-11	ALL
	38		W0001	0274	20		32-42-11	001-099
	38		W0001	0274	22		32-42-11	115-199
I	39	UNUSED						001-099
I	39		W0001	0470	22		34-61-18	115-199
I	40	UNUSED						001-099
I	40		W0001	0471	22		34-61-18	115-199
	41	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 65

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40672J D40672J		E004-03/ / E4-3/ /		RCPT- RCPT-				001-099 115-199
	1		W1163	0405	20		23-71-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1163	0465	16		23-12-21	001-099
	4		W1163	1009	16		23-12-21	115-199
	5	UNUSED						ALL
	6		W1163	0456	22		23-31-17	001-099
	6	UNUSED						115-199
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W1163	0192	22		23-51-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	DED		W1163	1009Z			23-12-21	115-199
D40672P		E4-3/ /		PLUG-				ALL
	1		W2354	0026	20		23-71-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W2354	0054	16		23-12-21	ALL
	5	UNUSED						ALL
	6		W2354	0058	22		23-31-17	001-099
	6		W2354	0058	22		SPARE	115-199
	7	UNUSED						001-099
	7		W2354	0040	22		SPARE	115-199
	8	UNUSED						ALL
	9		W2354	0301	22		23-51-11	ALL
	10	UNUSED						001-099
	10		W2354	0640	18		SPARE	115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
D40674J D40674J		E002-03/ / E2-3/ /		RCPT- RCPR-				001-099 115-199
	1		W1175	0338	22		77-11-11	ALL
	2	UNUSED						ALL
	3		W1175	0278	24		34-25-11	001, 003-099, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 66

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40674J		E002-03/ /		RCPT- (continued)				001-099
D40674J		E2-3/ /		RCPR- (continued)				115-199
	3	UNUSED						002
	4		W1175	0237	24		34-46-11	001-099
	4		W1175	0237	22		34-46-11	115-199
	5	UNUSED						ALL
	6		W1175	0143	20		22-31-11	ALL
	7	UNUSED						ALL
	8		W1175	0416	22		34-31-11	ALL
	9		W1175	0013	24		34-22-36	ALL
	10		W1175	0137	20		22-31-12	001-099
	10	UNUSED						115-199
	11		W1175	0136	20		22-31-12	001-099
	11	UNUSED						115-199
	12	UNUSED						ALL
	13	UNUSED						115-199
	14		W1175	0137	20		22-31-12	115-199
	15		W1175	0136	20		22-31-12	115-199
D40674P		E002-03/ /		PLUG-				001-099
D40674P		E2-3/ /		PLUG-				115-199
	1		W2350	0025	22		77-11-11	ALL
	2	UNUSED						ALL
	3		W2350	0023	22		34-25-11	001, 003-099, 115-199
	3	UNUSED						002
	4		W2350	0024	22		34-46-11	ALL
	5	UNUSED						ALL
	6		W2350	0016	20		22-31-11	ALL
	7	UNUSED						ALL
	8		W2350	0061	22		34-31-11	ALL
	9		W2350	0039	24		34-22-36	ALL
	10		W2350	0014	20		22-31-12	001-099
	10	UNUSED						115-199
	11		W2350	0015	20		22-31-12	001-099
	11	UNUSED						115-199
	12	UNUSED						ALL
	13	UNUSED						115-199
	14		W2350	0014	20		22-31-12	115-199
	15		W2350	0015	20		22-31-12	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 67

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40676J		E003-01/ /		RCPT				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1265	0162	22		27-48-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W1265	0120Y	22		27-41-11	ALL
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
D40676P D40676P		E003-01/ / E3-1/ /		PLUG- PLUG-				001-099 115-199
	1		W2350	0005	22		SPARE	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W2350	0106	22		27-48-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W2350	0012Y	22		27-41-11	ALL
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
D40677J		P1-3/ /		RCPT				ALL
	1		W0101	0044	22		33-16-51	ALL
	2		W0101	0045	22		33-16-51	ALL
	3		W0101	0046	22		33-16-51	ALL
	4		W0101	0047	22		33-16-51	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 68

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40677J		P1-3/ /		RCPT (continued)				ALL
	5		W0101	0048	22		33-16-51	ALL
	6	UNUSED						ALL
	7		W0101	0106	22		33-16-61	ALL
	8		W0101	0151	22		33-16-51	ALL
	9		W0101	0134	24		32-41-11	ALL
	10		W0101	0152	22		33-16-51	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D40677P		P1-3/MO-/D		PLUG				ALL
	1		W0001	0329	22		33-16-51	ALL
	2		W0001	0328	22		33-16-51	ALL
	3		W0001	0327	22		33-16-51	ALL
	4		W0001	0326	22		33-16-51	ALL
	5		W0001	0330	20		33-16-51	ALL
	6	UNUSED						ALL
	7		W0001	0334	22		33-16-61	ALL
	8		W0001	0372	22		33-16-51	ALL
	9		W0001	0371	24		32-41-11	ALL
	10		W0001	0370	22		33-16-51	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 69

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40677P		P1-3/MO-/D		PLUG (continued)				ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D40678J		E3-3/ /		RCPT-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1433	0062	22		31-31-01	001-099
	3		W1433	0062	22		31-31-11	115-199
	4		W1433	0061	22		31-31-01	001-099
	4		W1433	0061	22		31-31-11	115-199
	5		W1433	0060	20		22-41-11	ALL
	6		W1433	0083	22		31-31-01	001-099
	6	UNUSED						115-199
	7	UNUSED						ALL
	8		W1433	0456	22		31-31-02	001-099
	8	UNUSED						115-199
	9		W1433	0041	22		34-55-11	001-099
	9	UNUSED						115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1330	2019R	24		21-61-51	001-099
	14	UNUSED						115-199
	15		W1330	2019B	24		21-61-51	001-099
	15	UNUSED						115-199
D40678P		E003-03/ /		PLUG-				001-099
D40678P		E3-3/ /		PLUG-				115-199
	1	UNUSED						001-099
	1		W2350	0604	22		SPARE	115-199
	2	UNUSED						001-099
	2		W2350	0605	22		SPARE	115-199
	3		W2350	0003	22		31-31-01	001-099
	3		W2350	0003	22		31-31-11	115-199
	4		W2350	0004	22		31-31-01	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 70

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40678P		E003-03/ /		PLUG- (continued)				001-099
D40678P		E3-3/ /		PLUG- (continued)				115-199
	4		W2350	0004	22		31-31-11	115-199
	5		W2350	0606	20		22-41-11	ALL
	6		W2350	0032	22		31-31-01	001-099
	6	UNUSED						115-199
	7	UNUSED						ALL
	8		W2350	0063	22		31-31-02	001-099
	8	UNUSED						115-199
	9		W2350	0029	22		34-55-11	001-099
	9		W2350	0029	22		SPARE	115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W2350	2048R	24		21-61-51	001-099
	14	UNUSED						115-199
	15		W2350	2048B	24		21-61-51	001-099
	15	UNUSED						115-199
D40680J		E003-04/ /		RCPT				ALL
	1	UNUSED						ALL
	2	UNUSED						001-099
	2		W1280	0355	24		52-71-21	115-199
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1280	0068	20		32-12-12	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1280	0140	24		32-41-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
D40680P		E003-04/ /		PLUG-				001-099
D40680P		E3-4/ /		PLUG-				115-199
	1	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 71

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40680P		E003-04/ /		PLUG- (continued)				001-099
D40680P		E3-4/ /		PLUG- (continued)				115-199
	1		W2350	0141	22		SPARE	115-199
	2	UNUSED						001-099
	2		W2350	0142	22		33-37-21	115-199
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W2350	0045	22		SPARE	ALL
	6		W2350	0081	20		32-12-12	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W2350	0028	24		32-41-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						115-199
	14	UNUSED						115-199
	15		W2350	0105	22		SPARE	115-199
D40682J		E004-01/ /		RCPT				001-099
D40682J		E4-1/ /		RCPT				115-199
	1	UNUSED						ALL
	2		W1165	0050	22		27-09-11	ALL
	3		W1165	0052	22		27-09-11	ALL
	4		W1165	0028	20		27-31-22	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D40682P		E004-01/ /		PLUG-				001-099
D40682P		E4-1/ /		PLUG-				115-199
	1	UNUSED						ALL
	2		W2350	0202	22		27-09-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 72

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40682P		E004-01/ /		PLUG- (continued)				001-099
D40682P		E4-1/ /		PLUG- (continued)				115-199
	3		W2350	0201	22		27-09-11	ALL
	4		W2350	0203	20		27-31-22	ALL
	5	UNUSED						ALL
	6	UNUSED						001-099
	6		W2350	0728	22		SPARE	115-199
	7		W2350	0729	22		SPARE	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D40684J		E4-2/ /		RCPT-				ALL
	1		W1275	6153	22		27-28-13	001-099
	1		W1275	6153	24		27-28-13	115-199
	2		W1275	0978	24		27-28-11	001-099
	2		W1275	0978	22		27-28-11	115-199
	3		W1275	0105	24		79-32-11	ALL
	4		W1275	0601	22		77-31-11	ALL
	5		W1275	0560	22		31-41-11	001-099
	5		W1275	1560	22		31-41-11	115-199
	6	UNUSED						ALL
	7		W1275	5544	22		29-32-31	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1275	6095	22		27-18-11	001-099
	10		W1275	6095	24		27-18-11	115-199
	11		W1275	0989	22		27-38-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1275	6196	24		21-52-31	ALL
	15	UNUSED						ALL
	DED		W1275	1560Z			31-41-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 73

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40684P D40684P		E004-02/ / E4-2/ /		PLUG- PLUG-				001-099 115-199
	1		W2350	0009	22		27-28-13	ALL
	2		W2350	0008	24		27-28-11	ALL
	3		W2350	0007	24		79-32-11	ALL
	4		W2350	0501	22		77-31-11	ALL
	5		W2350	0059	22		31-41-11	ALL
	6	UNUSED						001-099
	6		W2350	0034	24		SPARE	115-199
	7		W2350	0057	22		29-32-31	ALL
	8	UNUSED						001-099
	8		W2350	0323	22		SPARE	115-199
	9	UNUSED						001-099
	9		W2350	0324	22		SPARE	115-199
	10		W2350	0010	22		27-18-11	ALL
	11		W2350	0011	22		27-38-11	ALL
	12	UNUSED						001-099
	12		W2350	0502	22		SPARE	115-199
	13	UNUSED						ALL
	14		W2350	0444	24		21-52-31	ALL
	15	UNUSED						ALL
D40686J D40686J		E004-03/ / E4-3/ /		RCPT- RCPT-				001-099 115-199
	1		W1163	0001	22		23-21-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1163	0551	20		23-11-11	001-099
	4	UNUSED						115-199
	5		W1163	0552	20		23-11-11	001-099
	5	UNUSED						115-199
	6		W1163	0553	20		23-11-11	001-099
	6	UNUSED						115-199
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 74

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40686J		E004-03/ /		RCPT- (continued)				001-099
D40686J		E4-3/ /		RCPT- (continued)				115-199
	15	UNUSED						ALL
D40686P		E004-03/ /		PLUG-				001-099
D40686P		E4-3/ /		PLUG-				115-199
	1		W2350	0026	22		23-21-11	ALL
	2	UNUSED						001-099
	2		W2350	0002	22		SPARE	115-199
	3	UNUSED						001-099
	3		W2350	0717	22		SPARE	115-199
	4		W2350	0051	20		23-11-11	001-099
	4	UNUSED						115-199
	5		W2350	0052	20		23-11-11	001-099
	5	UNUSED						115-199
	6		W2350	0053	20		23-11-11	001-099
	6	UNUSED						115-199
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D40688J		E004-04/ /		RCPT-				001-099
	1	UNUSED						001-099
	2	UNUSED						001-099
	3	UNUSED						001-099
	4	UNUSED						001-099
	5	UNUSED						001-099
	6	UNUSED						001-099
	7	UNUSED						001-099
	8	UNUSED						001-099
	9	UNUSED						001-099
	10		W2350	0040	16		23-12-31	001-099
	11	UNUSED						001-099
	12	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 75

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40688P		E4-4/ /		PLUG				001-099
	1	UNUSED						001-099
	2	UNUSED						001-099
	3	UNUSED						001-099
	4	UNUSED						001-099
	5	UNUSED						001-099
	6	UNUSED						001-099
	7	UNUSED						001-099
	8	UNUSED						001-099
	9	UNUSED						001-099
	10		W1161	0034	16		23-12-31	001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
D40696J		P36/ /		RCPT				ALL
	1		W1260	0083	24		36-11-12	ALL
	2	UNUSED						ALL
	3	18	W1260	5588	18		21-58-21	ALL
	4	UNUSED						ALL
	5		W1260	5504	20		21-45-11	ALL
	6		W1260	0004	20		21-45-11	ALL
	7		W1260	5901	22		32-09-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1260	0406	22		76-11-21	ALL
	11	18	W1260	5590	18		21-58-21	ALL
	12		W1260	0005	20		21-58-11	ALL
	13		W1260	0087	24		36-21-11	ALL
	14	UNUSED						001-099
	14		W1260	5620	22		21-58-24	115-199
	15	UNUSED						001-099
	15		W1260	5619	22		21-58-24	115-199
	16		W1260	0113	20		21-51-12	ALL
	17		W1260	5884	22		32-42-11	ALL
	18	UNUSED						ALL
	19	UNUSED						001-099
	19		W1260	5618	22		21-58-24	115-199
	20		W1260	0064	22		33-25-11	ALL
	21	UNUSED						ALL
	22	18	W1260	5589	18		21-58-21	ALL
	23	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 76

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40696J		P36/ /		RCPT (continued)				ALL
	24	UNUSED						ALL
	25		W1260	0156	24		21-61-51	ALL
	26	UNUSED						001-099
	26		W1260	0115	22		32-42-11	115-199
	27	18	W1260	8531	18		30-34-21	001-099
	27	UNUSED						115-199
	28		W1260	0258	20		27-62-11	ALL
	29	UNUSED						ALL
	30		W1260	8035	22		30-34-21	ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34		W1260	0221	22		27-51-51	001-099
	34		W1260	0220	22		27-51-51	115-199
	35		W1260	0220	24		27-58-11	001-099
	35		W1260	0225	22		27-58-11	115-199
	36		W1260	0029	24		27-58-11	001-099
	36		W1260	0029	22		27-58-11	115-199
	37	UNUSED						ALL
	38		W1260	0324	20		36-11-11	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41		W1260	0057	20		33-23-11	ALL
	42		W1260	0058	20		33-23-12	ALL
	43		W1260	0059	20		33-23-13	ALL
	44		W1260	0060	20		33-23-14	ALL
	45	UNUSED						ALL
	46		W1260	0375	20		74-31-11	001-099
	46		W1260	0356	20		74-31-11	115-199
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						001-099
	50	18	W1260	8531	18		30-34-21	115-199
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 77

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40696P D40696P		P036-00/ / P36/ /		PLUG- PLUG-				001-099 115-199
	1		W2352	0044	24		36-11-12	ALL
	2		W2352	0501	24		SPARE	ALL
	3	18	W2352	0113	18		21-58-21	ALL
	4	UNUSED						001-099
	4		W2352	0619	24		SPARE	115-199
	5		W2352	0502	20		21-45-11	ALL
	6		W2352	0503	20		21-45-11	ALL
	7		W2352	0006	22		32-09-11	ALL
	8		W2352	0004	24		SPARE	ALL
	9		W2352	0008	24		SPARE	ALL
	10		W2352	0009	22		76-11-21	ALL
	11	18	W2352	0115	18		21-58-21	ALL
	12		W2352	0011	20		21-58-11	ALL
	13		W2352	0012	24		36-21-11	ALL
	14	UNUSED						001-099
	14		W2352	0110	22		21-58-24	115-199
	15	UNUSED						001-099
	15		W2352	0111	22		21-58-24	115-199
	16		W2352	0016	20		21-51-12	ALL
	17		W2352	0015	22		32-42-11	ALL
	18	UNUSED						ALL
	19	UNUSED						001-099
	19		W2352	0112	22		21-58-24	115-199
	20		W2352	0018	22		33-25-11	ALL
	21		W2352	0019	24		SPARE	ALL
	22	18	W2352	0114	18		21-58-21	ALL
	23	UNUSED						001-099
	23		W2352	0620	24		SPARE	115-199
	24	UNUSED						001-099
	24		W2352	0621	24		SPARE	115-199
	25		W2352	0622	24		21-61-51	ALL
	26	UNUSED						001-099
	26		W2352	0623	22		32-42-11	115-199
	27	18	W2352	0034	18		30-34-21	001-099
	27		W2352	0034	22		SPARE	115-199
	28		W2352	0035	20		27-62-11	ALL
	29	UNUSED						ALL
	30		W2352	0625	22		30-34-21	001-099
	30		W2352	0070	22		30-34-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 78

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40696P		P036-00/ /		PLUG- (continued)				001-099
D40696P		P36/ /		PLUG- (continued)				115-199
	31	UNUSED						001-099
	31		W2352	0626	22		SPARE	115-199
	32		W2352	0002	24		SPARE	001-099
	32		W2352	0627	20		SPARE	115-199
	33		W2352	0003	24		SPARE	001-099
	33		W2352	0628	20		SPARE	115-199
	34		W2352	0047	22		27-51-51	ALL
	35		W2352	0039	24		27-58-11	001-099
	35		W2352	0039	22		27-58-11	115-199
	36		W2352	0040	24		27-58-11	001-099
	36		W2352	0040	22		27-58-11	115-199
	37	UNUSED						001-099
	37		W2352	0629	20		SPARE	115-199
	38		W2352	0128	20		36-11-11	ALL
	39	UNUSED						001-099
	39		W2352	0630	20		SPARE	115-199
	40	UNUSED						001-099
	40		W2352	0631	20		SPARE	115-199
	41		W2352	0101	20		33-23-11	ALL
	42		W2352	0102	20		33-23-12	ALL
	43		W2352	0103	20		33-23-13	ALL
	44		W2352	0104	20		33-23-14	ALL
	45	UNUSED						001-099
	45		W2352	0632	20		SPARE	115-199
	46		W2352	0206	20		74-31-11	ALL
	47		W2352	0633	20		SPARE	ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						001-099
	50	18	W2352	0071	18		30-34-21	115-199
	51	UNUSED						ALL
	52	UNUSED						001-099
	52		W2352	0649	20		SPARE	115-199
	53	UNUSED						001-099
	53		W2352	0650	20		SPARE	115-199
	54	UNUSED						ALL
	55	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 79

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40697J		AA1715/ /		RCPT-				ALL
	1		W2803	0002Y	20		27-41-11	ALL
	2		W2803	0003Y	20		27-41-11	ALL
	3		W2803	0008Y	20		27-41-11	ALL
	4		W2803	0011Y	20		27-41-11	ALL
	5		W2803	0010Y	20		27-41-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W2803	3001R	20		27-48-21	ALL
	9		W2803	3001B	20		27-48-21	ALL
	10		W2803	3001Y	20		27-48-21	ALL
	11		W2803	2001R	20		27-48-21	ALL
	12		W2803	2001B	20		27-48-21	ALL
	13		W2803	0016	20		27-48-11	ALL
	14		W2803	0017	20		27-48-11	ALL
	15		W2803	0018	20		27-48-11	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D40697P		AA1715/ /		PLUG-				ALL
	1		W2605	0019Y	20		27-41-11	ALL
	2		W2605	0020Y	20		27-41-11	ALL
	3		W2605	0021Y	22		27-41-11	ALL
	4		W2605	0022Y	22		27-41-11	ALL
	5		W2605	0023Y	22		27-41-11	ALL
	6		W2605	0024Y	22		SPARE	ALL
	7	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 80

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40697P		AA1715/ /		PLUG- (continued)				ALL
	8		W2605	3007R	24		27-48-21	ALL
	9		W2605	3007B	24		27-48-21	ALL
	10		W2605	3007Y	24		27-48-21	ALL
	11		W2605	2007R	24		27-48-21	ALL
	12		W2605	2007B	24		27-48-21	ALL
	13		W2605	0016	22		27-48-11	ALL
	14		W2605	0017	22		27-48-11	ALL
	15		W2605	0018	22		27-48-11	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D40699J		AA1715/ /		RCPT-				ALL
	1		W2813	0002Y	20		27-41-21	ALL
	2		W2813	0003Y	20		27-41-21	ALL
	3		W2813	0010Y	20		27-41-21	ALL
	4		W2813	0011Y	20		27-41-21	ALL
	5		W2813	0008Y	20		27-41-21	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W2813	3001R	20		27-48-21	ALL
	9		W2813	3001B	20		27-48-21	ALL
	10		W2813	3001Y	20		27-48-21	ALL
	11		W2813	2001R	20		27-48-21	ALL
	12		W2813	2001B	20		27-48-21	ALL
	13		W2813	0016	20		27-48-11	ALL
	14		W2813	0017	20		27-48-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 81

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40699J		AA1715/ /		RCPT- (continued)				ALL
	15		W2813	0018	20		27-48-11	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D40699P		AA1715/ /		PLUG-				ALL
	1		W2611	0005Y	20		27-41-21	ALL
	2		W2611	0006Y	20		27-41-21	ALL
	3		W2611	0007Y	22		27-41-21	ALL
	4		W2611	0008Y	22		27-41-21	ALL
	5		W2611	0009Y	22		27-41-21	ALL
	6		W2611	0010	22		SPARE	ALL
	7	UNUSED						ALL
	8		W2611	3007R	24		27-48-21	ALL
	9		W2611	3007B	24		27-48-21	ALL
	10		W2611	3007Y	24		27-48-21	ALL
	11		W2611	2007R	24		27-48-21	ALL
	12		W2611	2007B	24		27-48-21	ALL
	13		W2611	0016	22		27-48-11	ALL
	14		W2611	0017	22		27-48-11	ALL
	15		W2611	0018	22		27-48-11	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 82

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40699P		AA1715/ /		PLUG- (continued)				ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40600

Page 83 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40700J		E003-02/ /		RCPT-				001-099
	1	UNUSED						001-099
	2	UNUSED						001-099
	3	UNUSED						001-099
	4		W1423	0041	22		34-55-21	001-099
	5		W1423	0201	20		23-11-21	001-099
	6		W1423	0202	20		23-11-21	001-099
	7		W1423	0203	20		23-11-21	001-099
	8	UNUSED						001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
D40700P		E3-2/ /		PLUG-				001-099
	1	UNUSED						001-099
	2	UNUSED						001-099
	3	UNUSED						001-099
	4		W2354	0086	22		34-55-21	001-099
	5		W2354	0050	20		23-11-21	001-099
	6		W2354	0051	20		23-11-21	001-099
	7		W2354	0052	20		23-11-21	001-099
	8	UNUSED						001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
D40702J		E003-04/ /		RCPT				ALL
	1		W1280	0148	22		32-61-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1280	0156	22		25-66-11	ALL
	8		W1280	0198	22		32-09-11	001-099
	8		W1280	0198	22		32-01-11	115-199
	9	UNUSED						ALL
	10		W1280	0474	22		29-33-11	001-099
	10	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D40700

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40702J		E003-04/ /		RCPT (continued)				ALL
	11		W1280	0475	22		29-33-11	001-099
	11	UNUSED						115-199
	12		W1280	0476	22		29-33-11	001-099
	12	UNUSED						115-199
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W1280	0029	22		52-71-11	ALL
D40702P		E3-4/ /		PLUG-				ALL
	1		W2354	0042	22		32-61-11	ALL
	2	UNUSED						001-099
	2		W2354	0597	22		SPARE	115-199
	3	UNUSED						001-099
	3		W2354	0598	22		SPARE	115-199
	4	UNUSED						ALL
	5	UNUSED						001-099
	5		W2354	0608	22		SPARE	115-199
	6	UNUSED						001-099
	6		W2354	0610	22		SPARE	115-199
	7		W2354	0017	22		25-66-11	ALL
	8		W2354	0011	22		32-09-11	001-099
	8		W2354	0011	22		32-01-11	115-199
	9	UNUSED						ALL
	10		W2354	0016	22		29-33-11	001-099
	10	UNUSED						115-199
	11		W2354	0362	22		29-33-11	001-099
	11	UNUSED						115-199
	12		W2354	0361	22		29-33-11	001-099
	12	UNUSED						115-199
	13	UNUSED						ALL
	14		W2354	0015	22		SPARE	ALL
	15		W2354	0065	22		52-71-11	ALL
D40704J		E4-2/ /		RCPT-				ALL
	1		W1275	0985	22		27-38-11	ALL
	2		W1275	0104	24		79-32-11	001-099
	2		W1275	0104	22		79-32-11	115-199
	3		W1275	0588	22		31-41-21	001-099
	3		W1275	1588	22		31-41-21	115-199
	4		W1275	5952	22		31-41-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40700

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40704J		E4-2/ /		RCPT- (continued)				ALL
	5		W1275	0298	22		35-11-13	001-099
	5	UNUSED						115-199
	6		W1275	5560	22		29-32-31	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W1275	0624	22		77-31-11	001-099
	9		W1275	0624	24		77-31-11	115-199
	10		W1275	6097	22		27-18-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	DED		W1275	1588Z			31-41-21	115-199
	DED		W1275	5952Z			31-41-21	115-199
D40704P		E4-2/ /		PLUG-				ALL
	1		W2354	0021	22		27-38-11	ALL
	2		W2354	0022	24		79-32-11	ALL
	3		W2354	0023	22		31-41-21	ALL
	4		W2354	0024	22		31-41-21	ALL
	5		W2354	0025	22		35-11-13	001-099
	5		W2354	0025	22		SPARE	115-199
	6		W2354	0066	22		29-32-31	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W2354	0013	22		77-31-11	ALL
	10		W2354	0034	22		27-18-11	ALL
	11	UNUSED						001-099
	11		W2354	0601	22		SPARE	115-199
	12	UNUSED						001-099
	12		W2354	0602	22		SPARE	115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
D40710J		E5-2/ /		RCPT				ALL
	1		W1284	0001	22		34-33-21	ALL
	2		W1284	0015	22		24-41-11	ALL
	3		W1284	0120	24		27-81-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40700

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40710J		E5-2/ /		RCPT (continued)				ALL
	4		W1284	0118	24		27-81-11	ALL
	5		W1284	0119	24		27-81-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
D40710P		E5-2/ /		PLUG-				ALL
	1		W2354	0043	22		34-33-21	ALL
	2		W2354	0045	22		24-41-11	ALL
	3		W2354	0029	24		27-81-11	001-099
	3		W2354	0029	22		27-81-11	115-199
	4		W2354	0031	24		27-81-11	001-099
	4		W2354	0031	22		27-81-11	115-199
	5		W2354	0030	24		27-81-11	001-099
	5		W2354	0030	22		27-81-11	115-199
	6	UNUSED						ALL
	7	UNUSED						001-099
	7		W2354	0624	18		SPARE	115-199
	8	UNUSED						ALL
	9	UNUSED						001-099
	9		W2354	0019	18		SPARE	115-199
	10	UNUSED						ALL
D40714J		P051-00/ /		RCPT-				ALL
	1		W1451	1001	22		31-51-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1451	1002	22		31-51-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						001-099
	14	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D40700

Page 4

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40714J		P051-00/ /		RCPT- (continued)				ALL
	15	UNUSED						001-099
	DED		W1451	1001Z			31-51-11	ALL
	DED		W1451	1002Z			31-51-11	ALL
D40714P		P051-00/ /		PLUG-				001-099
D40714P		P51/ /		PLUG-				115-199
	1		W2356	0001	22		31-51-11	ALL
	2	UNUSED						001-099
	2		W2356	0029	24		SPARE	115-199
	3	UNUSED						001-099
	3		W2356	0027	22		SPARE	115-199
	4		W2356	0074	20		31-51-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						001-099
	9		W2356	0203	20		SPARE	115-199
	10	UNUSED						001-099
	10		W2356	0204	20		SPARE	115-199
	11	UNUSED						001-099
	11		W2356	0205	20		SPARE	115-199
	12	UNUSED						001-099
	12		W2356	0206	20		SPARE	115-199
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D40715J		199/165/L008		BKHD JACK				ALL
	= A1		W2265	001CX			34-31-11	ALL
	= C1		W2265	001CO			34-31-11	ALL
D40715P		199/165/L008		PLUG				ALL
	= A1		W2301	001CX			34-31-11	ALL
	= C1		W2301	001CO			34-31-11	ALL
D40716J		P36/ /		RCPT				ALL
	1		W1260	0892	24		21-25-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40700

Page 5

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40716J		P36/ /		RCPT (continued)				ALL
	4		W1260	6392	22		32-61-11	001-002, 115-199
	4	UNUSED						003-099
	5		W1260	8005	24		26-16-21	001-099
	5		W1260	8004	24		26-16-21	115-199
	6	UNUSED						ALL
	7	16	W1260	0062	16		33-24-11	ALL
	8	UNUSED						ALL
	9		W1260	0061	22		33-24-11	ALL
	10	UNUSED						ALL
	11		W1260	6044	24		21-51-13	001-099
	11	UNUSED						115-199
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W1260	0067	20		33-31-11	ALL
	16		W1260	8008	24		26-16-21	001-099
	16		W1260	8006	24		26-16-21	115-199
	17	UNUSED						ALL
	18		W1260	6070	24		21-51-13	001-099
	18	UNUSED						115-199
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D40716P		P036-00/ /		PLUG-				001-099
D40716P		P36/ /		PLUG-				115-199
	1		W2356	0034	24		21-25-11	ALL
	2	UNUSED						001-099
	2		W2356	0054	22		SPARE	115-199
	3	UNUSED						001-099
	3		W2356	0055	22		SPARE	115-199
	4		W2356	0014	22		33-26-11	001-002, 115-199
	4		W2356	0014	22		SPARE	003-099
	5		W2356	0015	22		26-16-21	ALL
	6	UNUSED						ALL
	7	16	W2356	0268	16		33-24-11	ALL
	8	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D40700

Page 6

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40716P		P036-00/ /		PLUG- (continued)				001-099
D40716P		P36/ /		PLUG- (continued)				115-199
	8		W2356	0330	22		SPARE	115-199
	9		W2356	0269	22		33-24-11	ALL
	10	UNUSED						001-099
	10	18	W2356	0270	18		SPARE	115-199
	11		W2356	0217	20		21-51-13	001-099
	11		W2356	0217	20		SPARE	115-199
	12		W2356	0218	20		SPARE	ALL
	13	UNUSED						ALL
	14	UNUSED						001-099
	14		W2356	0331	22		SPARE	115-199
	15		W2356	0255	20		33-31-11	ALL
	16		W2356	0216	22		26-16-21	ALL
	17	UNUSED						ALL
	18		W2356	0049	20		21-51-13	001-099
	18	UNUSED						115-199
	19	UNUSED						ALL
	20	UNUSED						001-099
	20		W2356	0605	20		SPARE	115-199
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D40717J		199/ /		BKHD JACK				ALL
	= A1		W2267	001CX			34-31-21	ALL
	= C1		W2267	001CO			34-31-21	ALL
D40717P		199/162/R2		PLUG				ALL
	= A1		W2303	001CX			34-31-21	ALL
	= C1		W2303	001CO			34-31-21	ALL
D40718J		P37/ /		RCPT				ALL
	1	UNUSED						ALL
	2		W1270	0465	24		36-11-41	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W1270	5615	24		21-61-21	ALL
	6		W1270	5631	24		21-61-31	ALL
	7	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D40700

Page 7

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40718J		P37/ /		RCPT (continued)				ALL
	7		W1270	0540	22		35-11-13	115-199
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1270	0631	24		33-51-11	ALL
	11		W1270	5883	22		32-09-12	ALL
	12		W1270	6046	20		29-21-32	ALL
	13		W1270	0621	22		33-51-11	ALL
	14		W1270	0623	22		33-51-11	ALL
	15		W1270	0619	22		33-51-11	ALL
	16		W1270	5581	24		21-61-11	ALL
	17		W1270	5619	24		21-61-21	ALL
	18		W1270	5768	24		30-33-11	ALL
	19		W1270	0815	20		74-31-21	001-099
	19		W1270	0816	20		74-31-21	115-199
	20		W1270	0072	24		36-21-11	ALL
	21		W1270	5584	24		21-61-11	ALL
	22	16	W1270	0627	16		33-26-11	001-099
	22		W1270	0627	22		33-26-11	115-199
	23		W1270	0907	20		30-34-22	001-099
	23	UNUSED						115-199
	24	UNUSED						ALL
	25		W1270	0088	22		76-11-21	ALL
	26		W1270	0166	20		21-51-22	001-099
	26		W1270	0166	24		21-51-22	115-199
	27		W1270	0616	22		33-22-11	001-099
	27	UNUSED						115-199
	28		W1270	0070	24		36-11-22	ALL
	29	UNUSED						ALL
	30		W1270	0174	22		77-11-11	ALL
	31		W1270	0914	22		30-34-22	ALL
	32	UNUSED						ALL
	33		W1270	5632	24		21-61-31	ALL
	34	UNUSED						ALL
	35		W1270	0449	20		36-11-41	001-099
	35	18	W1270	8512	18		30-34-22	115-199
	36	UNUSED						ALL
	37	UNUSED						001-099
	37		W1270	0497	20		25-31-21	115-199
	38	UNUSED						001-099
	38		W1270	0449	20		36-11-41	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40700

Page 8

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40718J		P37/ /		RCPT (continued)				ALL
	39		W1270	6045	20		29-21-32	ALL
	40	UNUSED						ALL
	41		W1270	0699	22		38-14-11	001-099
	41		W1270	0075	22		38-14-11	115-199
	42	UNUSED						001-099
	42		W1272	0100	20		33-22-11	115-199
	43	UNUSED						ALL
	44		W1272	0222	24		33-21-11	ALL
	45	UNUSED						ALL
	46		W1270	0048	22		33-26-31	ALL
	47	UNUSED						001-099
	47		W1270	0097	20		33-31-41	115-199
	48	UNUSED						ALL
	49	UNUSED						001-099
	49		W1270	0542	22		35-11-13	115-199
	50	16	W1270	0041	16		33-26-11	001-099
	50		W1270	0041	22		33-26-11	115-199
	51	UNUSED						ALL
	52		W1272	0230	22		33-22-11	001-099
	52		W1270	0167	22		33-22-11	115-199
	53		W1270	0046	22		33-26-31	ALL
	54		W1272	0225	24		33-21-31	ALL
	55	18	W1272	0241	18		25-29-11	001-099
	55	UNUSED						115-199
D40718P		P037-00/ /		PLUG-				001-099
D40718P		P37/ /		PLUG-				115-199
	1		W2356	0205	24		SPARE	001-099
	1	UNUSED						115-199
	2		W2356	0010	24		36-11-41	ALL
	3	UNUSED						ALL
	4		W2356	0004	24		SPARE	ALL
	5		W2356	0005	24		21-61-21	ALL
	6		W2356	0006	24		21-61-31	ALL
	7	UNUSED						001-099
	7		W2356	0007	22		35-11-13	115-199
	8	UNUSED						001-099
	8		W2356	0308	20		SPARE	115-199
	9	UNUSED						001-099
	9		W2356	0309	20		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40700

Page 9

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40718P		P037-00/ /		PLUG- (continued)				001-099
D40718P		P37/ /		PLUG- (continued)				115-199
	10		W2356	0089	24		33-51-11	ALL
	11		W2356	0011	22		32-09-12	ALL
	12		W2356	0012	20		29-21-32	ALL
	13		W2356	0008	22		33-51-11	ALL
	14		W2356	0009	22		33-51-11	ALL
	15		W2356	0282	22		33-51-11	ALL
	16		W2356	0016	24		21-61-11	ALL
	17		W2356	0017	24		21-61-21	ALL
	18		W2356	0208	24		30-33-11	ALL
	19		W2356	0209	20		74-31-21	ALL
	20		W2356	0021	24		36-21-11	ALL
	21		W2356	0215	24		21-61-11	ALL
	22	16	W2356	0037	16		33-26-11	001-099
	22		W2356	0258	22		33-26-11	115-199
	23	18	W2356	0018	18		30-34-22	001-099
	23	UNUSED						115-199
	24		W2356	0024	24		SPARE	ALL
	25		W2356	0025	22		76-11-21	ALL
	26		W2356	0060	20		21-51-22	ALL
	27		W2356	0293	22		33-22-11	001-099
	27	UNUSED						115-199
	28		W2356	0212	24		36-11-22	ALL
	29		W2356	0234	22		SPARE	ALL
	30		W2356	0030	22		77-11-11	ALL
	31		W2356	0031	22		30-34-22	001-099
	31		W2356	0064	22		30-34-22	115-199
	32		W2356	0244	22		SPARE	ALL
	33		W2356	0033	24		21-61-31	ALL
	34		W2356	0050	24		SPARE	ALL
	35		W2356	0201	20		36-11-41	001-099
	35	18	W2356	0065	18		30-34-22	115-199
	36	UNUSED						001-099
	36		W2356	0036	20		SPARE	115-199
	37	UNUSED						001-099
	37		W2356	0037	20		25-31-21	115-199
	38	UNUSED						001-099
	38		W2356	0213	20		36-11-41	115-199
	39		W2356	0214	20		29-21-32	ALL
	40	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D40700

Page 10

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40718P		P037-00/ /		PLUG- (continued)				001-099
D40718P		P37/ /		PLUG- (continued)				115-199
	40		W2356	0245	20		SPARE	115-199
	41		W2356	0247	22		38-14-11	ALL
	42	UNUSED						001-099
	42		W2356	0252	20		33-22-11	115-199
	43	UNUSED						001-099
	43		W2356	0343	20		SPARE	115-199
	44		W2356	0254	24		33-21-11	ALL
	45		W2356	0206	24		SPARE	001-099
	45		W2356	0345	20		SPARE	115-199
	46		W2356	0256	22		33-26-31	ALL
	47	UNUSED						001-099
	47		W2356	0257	20		33-31-41	115-199
	48	UNUSED						ALL
	49	UNUSED						001-099
	49		W2356	0259	22		35-11-13	115-199
	50	16	W2356	0260	16		33-26-11	001-099
	50		W2356	0260	22		33-26-11	115-199
	51	UNUSED						001-099
	51		W2356	0293	22		SPARE	115-199
	52		W2356	0294	22		33-22-11	ALL
	53		W2356	0277	22		33-26-31	ALL
	54		W2356	0298	24		33-21-31	ALL
	55	18	W2356	0355	18		25-29-11	001-099
	55		W2356	0355	20		SPARE	115-199
D40719J		199/170/L008		BKHD JACK				ALL
	= A1		W2275	001CX			34-31-31	ALL
	= C1		W2275	001CO			34-31-31	ALL
D40719P		199/170/L008		PLUG				ALL
	= A1		W2305	001CX			34-31-31	ALL
	= C1		W2305	001CO			34-31-31	ALL
D40728J		P36/ /		RCPT				ALL
	1		W1260	6349	20		38-13-11	001-099
	1	UNUSED						115-199
	2		W1260	0012	24		21-58-12	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40700

Page 11

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40728J		P36/ /		RCPT (continued)				ALL
	5		W1260	0155	22		38-13-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W1260	0985	24		21-51-11	001-099
	9	UNUSED						115-199
	10		W1260	8028	24		26-16-21	ALL
	11		W1260	0154	22		38-13-11	ALL
	12		W1260	0968	22		34-22-16	001-099
	12		W1260	0968	20		34-22-16	115-199
	13	UNUSED						ALL
	14	UNUSED						001-002, 115-199
	14		W1260	6392	22		32-61-11	003-099
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W1260	0440	20		80-11-11	ALL
	19		W1260	8014	24		26-16-21	ALL
	20		W1260	8015	24		26-16-21	ALL
	21		W1260	0379	16		75-31-11	ALL
	22		W1260	8029	24		26-16-21	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W1260	0102	24		34-12-11	ALL
	26		W1260	5936	22		32-61-11	ALL
	27		W1260	5683	22		30-21-11	ALL
	28		W1260	0426	24		78-36-11	ALL
	29		W1260	0373	20		74-31-11	ALL
	30		W1260	8016	24		26-16-21	ALL
	31		W1260	8021	24		26-16-21	ALL
	32	UNUSED						001-099
	32		W1260	5846	22		32-42-11	115-199
	33	UNUSED						001-099
	33		W1260	5849	22		32-42-11	115-199
	34	UNUSED						001-099
	34		W1260	5854	22		32-42-11	115-199
	35	UNUSED						001-099
	35		W1260	5853	22		32-42-11	115-199
	36	UNUSED						001-099
	36		W1260	5859	22		32-42-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40700

Page 12

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40728J		P36/ /		RCPT (continued)				ALL
	37	UNUSED						001-099
	37		W1260	8518	24		29-33-11	115-199
	38	UNUSED						ALL
	39	UNUSED						ALL
D40728P		P36/ /		PLUG-				ALL
	1		W2358	0026	20		38-13-11	001-099
	1	UNUSED						115-199
	2		W2358	0027	24		21-58-12	ALL
	3	UNUSED						001-099
	3		W2358	0507	22		SPARE	115-199
	4	UNUSED						001-099
	4		W2358	0510	24		SPARE	115-199
	5		W2358	0511	22		38-13-11	001-099
	5		W2358	0511	20		38-13-11	115-199
	6	UNUSED						001-099
	6		W2358	0206	20		SPARE	115-199
	7	UNUSED						ALL
	8	UNUSED						001-099
	8		W2358	0020	22		SPARE	115-199
	9		W2358	0029	24		21-51-11	001-099
	9	UNUSED						115-199
	10		W2358	0421	22		26-16-21	ALL
	11		W2358	0512	22		38-13-11	001-099
	11		W2358	0512	20		38-13-11	115-199
	12		W2358	0212	22		34-22-16	ALL
	13		W2358	0028	24		SPARE	001-099
	13		W2358	0513	20		SPARE	115-199
	14	UNUSED						001-002
	14		W2358	0067	22		32-61-11	003-099
	14		W2358	0123	22		SPARE	115-199
	15	UNUSED						001-099
	15		W2358	0124	22		SPARE	115-199
	16	UNUSED						001-099
	16		W2358	0125	22		SPARE	115-199
	17	UNUSED						001-099
	17		W2358	0501	22		SPARE	115-199
	18		W2358	0531	20		80-11-11	ALL
	19		W2358	0419	22		26-16-21	ALL
	20		W2358	0420	22		26-16-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40700

Page 13

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40728P		P36/ /		PLUG- (continued)				ALL
	21		W2358	0033	16		75-31-11	ALL
	22		W2358	0422	22		26-16-21	ALL
	23	UNUSED						001-099
	23		W2358	0013	22		SPARE	115-199
	24	UNUSED						001-099
	24		W2358	0522	22		SPARE	115-199
	25		W2358	0025	24		34-12-11	ALL
	26		W2358	0601	22		32-61-11	ALL
	27		W2358	0134	22		30-21-11	ALL
	28		W2358	0035	24		78-36-11	ALL
	29		W2358	0349	20		74-31-11	ALL
	30		W2358	0427	22		26-16-21	ALL
	31		W2358	0434	22		26-16-21	ALL
	32	UNUSED						001-099
	32		W2358	0332	22		32-42-11	115-199
	33	UNUSED						001-099
	33		W2358	0333	22		32-42-11	115-199
	34	UNUSED						001-099
	34		W2358	0334	22		32-42-11	115-199
	35	UNUSED						001-099
	35		W2358	0335	22		32-42-11	115-199
	36	UNUSED						001-099
	36		W2358	0336	22		32-42-11	115-199
	37	UNUSED						001-099
	37		W2358	0437	24		29-33-11	115-199
	38	UNUSED						001-099
	38		W2358	0438	22		SPARE	115-199
	39	UNUSED						001-099
	39		W2358	0439	22		SPARE	115-199
D40734J		E004-03/ /		RCPT-				001-099
D40734J		E4-3/ /		RCPT-				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1163	0461	16		23-12-11	001-099
	4		W1163	1005	16		23-12-11	115-199
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40700

Page 14

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40734J		E004-03/ /		RCPT- (continued)				001-099
D40734J		E4-3/ /		RCPT- (continued)				115-199
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1163	0138	20		23-31-11	ALL
	11	UNUSED						ALL
	12		W1163	0178	22		23-42-11	ALL
	DED		W1163	1005Z			23-12-11	115-199
D40734P		E004-03/ /		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W2358	0102	16		23-12-11	ALL
	5	UNUSED						001-099
	5		W2358	0003	22		SPARE	115-199
	6	UNUSED						001-099
	6		W2358	0004	22		SPARE	115-199
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W2358	0001	18		23-31-11	ALL
	11	UNUSED						ALL
	12		W2358	0012	22		23-42-11	ALL
D40736J		P051-00/ /		RCPT-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1451	1031	22		31-51-12	ALL
	4		W1451	1032	22		31-51-12	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D40700

Page 15

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40736J		P051-00/ /		RCPT- (continued)				ALL
	DED		W1451	1031Z			31-51-12	ALL
	DED		W1451	1032Z			31-51-12	ALL
D40736P		P051-00/ /		PLUG-				001-099
D40736P		P51/ /		PLUG-				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W2360	0013	22		31-51-12	ALL
	4		W2360	0014	20		31-51-12	ALL
	5	UNUSED						ALL
	6	UNUSED						001-099
	6		W2360	0616	22		SPARE	115-199
	7	UNUSED						001-099
	7		W2360	0617	22		SPARE	115-199
	8	UNUSED						001-099
	8		W2360	0618	22		SPARE	115-199
	9	UNUSED						001-099
	9		W2360	0619	22		SPARE	115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D40738J		P37/ /		RCPT				ALL
	1	UNUSED						ALL
	2		W1270	0379	24		35-21-11	ALL
	3		W1270	0384	24		35-21-11	ALL
	4		W1270	0434	24		36-11-31	ALL
	5		W1270	0141	22		77-12-42	ALL
	6		W1270	5736	24		30-31-12	001-099
	6		W1270	0089	22		29-22-11	115-199
	7	UNUSED						ALL
	8		W1270	0812	20		74-31-21	ALL
	9		W1270	0758	24		78-36-21	001-002, 115-199
	9	UNUSED						003-099
	10	UNUSED						ALL
	11		W1270	0773	20		80-11-21	ALL
	12	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D40700

Page 16

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40738J		P37/ /		RCPT (continued)				ALL
	12		W1270	5736	24		30-31-12	115-199
	13	UNUSED						ALL
	14		W1270	5721	22		30-21-11	ALL
	15	UNUSED						001-002, 115-199
	15		W1270	0758	24		78-36-21	003-099
	16		W1270	0376	16		35-21-11	ALL
	17	UNUSED						ALL
	18		W1270	0373	16		35-21-11	ALL
	19	UNUSED						ALL
	20		W1270	0726	16		75-31-11	ALL
	21		W1270	6299	20		29-21-31	ALL
	22	UNUSED						ALL
	23		W1270	6402	22		23-32-02	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
D40738P D40738P		P037-00/ / P37/ /		PLUG- PLUG-				001-099 115-199
	1		W2360	0001	22		SPARE	ALL
	2		W2360	0004	24		35-21-11	001-099
	2		W2360	0004	22		35-21-11	115-199
	3		W2360	0003	24		35-21-11	001-099
	3		W2360	0003	22		35-21-11	115-199
	4		W2360	0607	24		36-11-31	ALL
	5		W2360	0615	22		77-12-42	ALL
	6		W2360	0050	24		30-31-12	001-099
	6		W2360	0035	20		29-22-11	115-199
	7	UNUSED						001-099
	7		W2360	0608	22		SPARE	115-199
	8		W2360	0208	20		74-31-21	ALL
	9		W2360	0024	24		78-36-21	001-002
	9		W2360	0024	24		SPARE	003-099
	9		W2360	0009	24		78-36-21	115-199
	10	UNUSED						001-099
	10		W2360	0606	22		SPARE	115-199
	11		W2360	0505	20		80-11-21	ALL
	12	UNUSED						001-099
	12		W2360	0006	24		30-31-12	115-199
	13	UNUSED						ALL
	14		W2360	0026	22		30-21-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40700

Page 17

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40738P		P037-00/ /		PLUG- (continued)				001-099
D40738P		P37/ /		PLUG- (continued)				115-199
	15	UNUSED						001-002
	15		W2360	0016	24		78-36-21	003-099
	15		W2360	0515	24		SPARE	115-199
	16		W2360	0002	16		35-21-11	ALL
	17	UNUSED						ALL
	18		W2360	0007	16		35-21-11	ALL
	19	UNUSED						001-099
	19		W2360	0609	20		SPARE	115-199
	20		W2360	0005	16		75-31-11	ALL
	21		W2360	0311	20		29-21-31	ALL
	22	UNUSED						001-099
	22		W2360	0611	22		SPARE	115-199
	23		W2360	0612	22		23-32-02	ALL
	24	UNUSED						001-099
	24		W2360	0613	22		SPARE	115-199
	25	UNUSED						001-099
	25		W2360	0614	22		SPARE	115-199
D40748J		P011-00/ /		RCPT-				ALL
	1	UNUSED						ALL
	2		W0126	0202	22		33-14-21	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0124	0008	24		25-58-11	001-099
	8		W0124	0008	22		27-58-11	115-199
	9		W0126	0209	22		31-41-11	ALL
	10		W0126	0210	22		33-13-11	ALL
	11	UNUSED						ALL
	12		W0124	0202	24		34-13-11	ALL
	13		W0124	0203	22		34-13-11	ALL
	14		W0124	0214	22		34-22-82	ALL
	15		W0124	0350	22		34-22-16	ALL
	16	UNUSED						ALL
	17		W0130	0255	22		33-14-31	ALL
	18		W0124	0011	24		27-58-11	001-099
	18		W0124	0011	22		27-58-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40700

Page 18

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40748J		P011-00/ /		RCPT- (continued)				ALL
	19		W0124	0351	22		34-22-16	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W0124	0302	22		34-61-15	001-099
	22	UNUSED						115-199
	23		W0126	0020	16		30-42-11	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
D40748P		P011-00/ /		PLUG-				ALL
	1		W2364	0002	24		SPARE	ALL
	2		W2364	0001	22		33-14-21	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W2364	0011	22		SPARE	ALL
	8		W2364	0010	24		27-58-11	001-099
	8		W2364	0010	22		27-58-11	115-199
	9		W2364	0009	22		31-41-11	ALL
	10		W2364	0014	24		33-13-11	ALL
	11		W2364	0003	22		SPARE	001-009, 115-199
	11		W2364	0003	22		34-13-11	010-099
	12		W2364	0007	24		34-13-11	ALL
	13		W2364	0008	24		34-13-11	ALL
	14		W2364	0006	22		34-22-82	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40700

Page 19

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40748P		P011-00/ /		PLUG- (continued)				ALL
	15		W2364	0004	24		34-22-16	ALL
	16	UNUSED						ALL
	17		W2364	0017	22		33-14-31	ALL
	18		W2364	0018	24		27-58-11	001-099
	18		W2364	0018	22		27-58-11	115-199
	19		W2364	0031	24		34-22-16	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W2364	0602	22		34-61-15	001-099
	22	UNUSED						115-199
	23		W2364	0016	16		30-42-11	ALL
	24		W2364	0603	22		SPARE	ALL
	25	UNUSED						001-099
	25		W2364	0605	22		SPARE	115-199
	26	UNUSED						001-099
	26		W2364	0606	22		SPARE	115-199
	27	UNUSED						001-099
	27		W2364	0607	22		SPARE	115-199
	28	UNUSED						001-099
	28		W2364	0608	22		SPARE	115-199
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
D40750J		P6/ /		RCPT-				001-099
D40750J		P11/ /		RCPT-				115-199
	1		W0130	0101	22		33-13-41	ALL
	2		W0128	0102	22		34-22-91	001-099
	2	UNUSED						115-199
	3		W0128	0311	22		34-22-26	ALL
	4		W0128	0310	22		34-22-26	ALL
	5		W0128	0205	22		34-22-92	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40700

Page 20

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40750J		P6/ /		RCPT- (continued)				001-099
D40750J		P11/ /		RCPT- (continued)				115-199
	6		W0130	0106	22		31-25-11	ALL
	7	UNUSED						001-099
	7		W0130	0064	20		32-42-12	115-199
	8		W0130	0108	22		31-41-21	ALL
	9		W0128	0059	22		34-61-25	001-099
	9	UNUSED						115-199
	10	UNUSED						ALL
	11		W0130	0111	22		33-13-21	ALL
	12	UNUSED						ALL
	13		W0130	0113	22		32-31-11	ALL
	14		W0130	0114	24		33-14-11	ALL
	15		W0130	0115	22		33-14-31	ALL
	16		W0128	0116	22		34-13-21	ALL
	17		W0128	0117	22		34-13-21	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W0130	0062	20		29-21-32	ALL
	23		W0130	0228	16		30-42-11	ALL
	24	UNUSED						ALL
	25		W0130	0063	20		29-21-32	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
D40750P		P011-00/ /		PLUG-				ALL
	1		W2366	0001	24		33-13-41	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40700

Page 21

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40750P		P011-00/ /		PLUG- (continued)				ALL
	2		W2366	0002	24		34-22-91	001-099
	2		W2366	0002	24		SPARE	115-199
	3		W2366	0003	24		34-22-26	ALL
	4		W2366	0004	24		34-22-26	ALL
	5		W2366	0005	22		34-22-92	ALL
	6		W2366	0007	22		31-25-11	ALL
	7	UNUSED						001-099
	7		W2366	0008	20		32-42-12	115-199
	8		W2366	0016	22		31-41-21	ALL
	9		W2366	0009	22		34-61-25	001-099
	9	UNUSED						115-199
	10	UNUSED						ALL
	11		W2366	0010	24		33-13-21	ALL
	12	UNUSED						ALL
	13		W2366	0013	22		32-31-11	ALL
	14		W2366	0006	22		33-14-11	ALL
	15		W2366	0015	22		33-14-31	ALL
	16		W2366	0012	24		34-13-21	ALL
	17		W2366	0011	24		34-13-21	ALL
	18	UNUSED						ALL
	19		W2366	0019	20		SPARE	ALL
	20		W2366	0020	22		SPARE	001-099
	20		W2366	0020	20		SPARE	115-199
	21	UNUSED						001-099
	21		W2366	0021	20		SPARE	115-199
	22		W2366	0022	20		29-21-32	ALL
	23		W2366	0032	16		30-42-11	ALL
	24	UNUSED						001-099
	24		W2366	0024	20		SPARE	115-199
	25		W2366	0023	20		29-21-32	ALL
	26	UNUSED						ALL
	27		W2366	0127	22		SPARE	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40700

Page 22

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40750P		P011-00/ /		PLUG- (continued)				ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
D40752J		P011-00/ /		RCPT-				ALL
	1		W0124	0761	22		34-22-81	001-099
	1		W0132	0030	22		34-22-83	115-199
	2		W0124	0754	22		34-13-11	001-099
	2		W0132	0104	22		34-13-11	115-199
	3		W0124	0753	24		33-13-12	001-099
	3		W0132	0103	24		33-13-12	115-199
	4	UNUSED						001-099
	4		W0134	0104	24		77-12-11	115-199
	5		W0124	0119	20		34-12-61	001-099
	5		W0132	0006	20		34-12-61	115-199
	6		W0124	0124	20		34-12-62	001-099
	6		W0132	0015	20		34-12-62	115-199
	7		W0124	0103	22		31-25-11	001-099
	7	UNUSED						115-199
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						001-099
	10		W0132	0058	22		31-25-11	115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D40752P		P011-00/ /		PLUG-				ALL
	1		W2368	0001	24		34-22-81	001-099
	1		W2368	0001	24		34-22-83	115-199
	2		W2368	0002	24		34-13-11	ALL
	3		W2368	0003	24		33-13-12	ALL
	4		W2368	0004	24		77-12-11	ALL
	5		W2368	0005	22		34-12-61	ALL
	6		W2368	0006	22		34-12-62	ALL
	7		W2368	0008	22		31-25-11	001-099
	7		W2368	0607	22		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40700

Page 23

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40752P		P011-00/ /		PLUG- (continued)				ALL
	8	UNUSED						001-099
	8		W2368	0608	22		SPARE	115-199
	9	UNUSED						ALL
	10	UNUSED						001-099
	10		W2368	0610	22		31-25-11	115-199
	11	UNUSED						001-099
	11		W2368	0611	22		SPARE	115-199
	12	UNUSED						ALL
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D40754J		AP0001/ /		RCPT-				ALL
	1		W2364	0001	22		33-14-21	ALL
	2		W2364	0002	24		SPARE	ALL
	3		W2364	0003	22		SPARE	001-009, 115-199
	3		W2364	0003	22		34-13-11	010-099
	4		W2364	0004	24		34-22-16	ALL
	5	UNUSED						ALL
	6		W2364	0006	22		34-22-82	ALL
	7		W2364	0007	24		34-13-11	ALL
	8		W2364	0008	24		34-13-11	ALL
	9		W2364	0009	22		31-41-11	ALL
	10		W2364	0010	24		27-58-11	001-099
	10		W2364	0010	22		27-58-11	115-199
	11		W2364	0011	22		SPARE	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W2364	0014	24		33-13-11	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W2364	0018	24		27-58-11	001-099
	18		W2364	0018	22		27-58-11	115-199
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						001-099
	21		W2364	0027	22		33-14-11	115-199
	22		W2364	0602	22		34-61-15	001-099
	22	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D40700

Page 24

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40754J		AP0001/ /		RCPT- (continued)				ALL
	23		W2364	0016	16		30-42-11	ALL
	24		W2364	0603	22		SPARE	ALL
	25	UNUSED						001-099
	25		W2364	0605	22		SPARE	115-199
	26	UNUSED						001-099
	26		W2364	0606	22		SPARE	115-199
	27	UNUSED						001-099
	27		W2364	0607	22		SPARE	115-199
	28	UNUSED						001-099
	28		W2364	0608	22		SPARE	115-199
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W2364	0031	24		34-22-16	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
D40754P D40754P		AP0001/ / 217.6/198/L34		PLUG PLUG				001-099 115-199
	1		W0001	0173	22		33-14-21	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W0001	0017	24		34-22-16	ALL
	5	UNUSED						ALL
	6		W0001	0412	22		34-22-82	001-099
	6		W0001	0412	24		34-22-82	115-199
	7		W0001	0225	24		34-13-11	ALL
	8		W0001	0229	24		34-13-11	ALL
	9		W0001	0032	22		31-41-11	ALL
	10		W0001	0433	24		27-58-11	001-099
	10		W0001	0433	22		27-58-11	115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W0001	0098	24		33-13-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40700

Page 25

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40754P		AP0001/ /		PLUG (continued)				001-099
D40754P		217.6/198/L34		PLUG (continued)				115-199
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0001	0434	24		27-58-11	001-099
	18		W0001	0434	22		27-58-11	115-199
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						001-099
	21		W0001	0426	22		33-14-11	115-199
	22		W0001	0175	22		34-61-15	001-099
	22	UNUSED						115-199
	23		W0001	0067	16		30-42-11	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W0001	0016	24		34-22-16	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
D40756J		AP0003/ /		RCPT-				ALL
	1		W2366	0001	24		33-13-41	ALL
	2		W2366	0002	24		34-22-91	001-099
	2		W2366	0002	24		SPARE	115-199
	3		W2366	0003	24		34-22-26	ALL
	4		W2366	0004	24		34-22-26	ALL
	5		W2366	0005	22		34-22-92	ALL
	6		W2366	0006	22		33-14-11	ALL
	7		W2366	0007	22		31-25-11	ALL
	8	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D40700

Page 26

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40756J		AP0003/ /		RCPT- (continued)				ALL
I	8		W2366	0008	20		32-42-12	115-199
I	9		W2366	0009	22		34-61-25	001-099
	9	UNUSED						115-199
	10		W2366	0010	24		33-13-21	ALL
	11		W2366	0011	24		34-13-21	ALL
	12		W2366	0012	24		34-13-21	ALL
	13		W2366	0013	22		32-31-11	ALL
	14	UNUSED						001-099
	14		W2366	0014	22		33-14-11	115-199
	15		W2366	0019	20		SPARE	ALL
	16		W2366	0020	22		SPARE	001-099
	16		W2366	0020	20		SPARE	115-199
	17	UNUSED						ALL
	18		W2366	0022	20		29-21-32	ALL
	19		W2366	0023	20		29-21-32	ALL
	20	UNUSED						001-099
	20		W2366	0024	20		SPARE	115-199
	21	UNUSED						001-099
	21		W2366	0021	20		SPARE	115-199
	22	UNUSED						ALL
	23		W2366	0032	16		30-42-11	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W2366	0127	22		SPARE	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40700

Page 27

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40756P D40756P		AP0003/ / 217.6/200/R40		PLUG PLUG				001-099 115-199
	1		W0003	0175	24		33-13-41	ALL
	2		W0003	0304	24		34-22-91	001-099
	2	UNUSED						115-199
	3		W0003	0266	24		34-22-26	ALL
	4		W0003	0267	24		34-22-26	ALL
	5		W0003	0029	22		34-22-92	ALL
	6		W0003	0107	24		33-14-11	ALL
	7		W0003	0172	20		31-25-11	ALL
	8	UNUSED						001-099
	8		W0003	0483	22		32-42-12	115-199
	9		W0003	0277	22		34-61-25	001-099
	9	UNUSED						115-199
	10		W0003	0110	24		33-13-21	ALL
	11		W0003	0011	24		34-13-21	ALL
	12		W0003	0015	24		34-13-21	ALL
	13		W0003	0569	22		32-31-11	ALL
	14	UNUSED						001-099
	14		W0003	0109	22		33-14-11	115-199
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W0003	1002	20		29-21-32	ALL
	19		W0003	0512	20		29-21-32	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0003	0077	16		30-42-11	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40700

Page 28

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40756P		AP0003/ /		PLUG (continued)				001-099
D40756P		217.6/200/R40		PLUG (continued)				115-199
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	DED		W0003	1002Z			29-21-32	ALL
D40758J		P001-00/ /		RCPT-				001-099
D40758J		AP0001/ /		RCPT-				115-199
	1		W2368	0001	24		34-22-81	001-099
	1		W2368	0001	24		34-22-83	115-199
	2		W2368	0002	24		34-13-11	ALL
	3		W2368	0003	24		33-13-12	ALL
	4		W2368	0004	24		77-12-11	ALL
	5		W2368	0005	22		34-12-61	ALL
	6		W2368	0006	22		34-12-62	ALL
	7	UNUSED						001-099
	7		W2368	0607	22		SPARE	115-199
	8	UNUSED						001-099
	8		W2368	0608	22		SPARE	115-199
	9		W2368	0007	20		33-13-11	ALL
	10		W2368	0008	22		31-25-11	001-099
	10		W2368	0610	22		31-25-11	115-199
	11	UNUSED						001-099
	11		W2368	0611	22		SPARE	115-199
	12	UNUSED						ALL
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D40758P		AP0001/ /		PLUG				001-099
D40758P		217.6/198/L34		PLUG				115-199
	1		W0001	0304	24		34-22-81	001-099
	1		W0001	0304	24		34-22-83	115-199
	2		W0001	0303	24		34-13-11	ALL
	3		W0001	0316	24		33-13-12	ALL
	4		W0001	0302	24		77-12-11	ALL
	5		W0001	0222	20		34-12-61	ALL
	6		W0001	0163	22		34-12-62	ALL
	7	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40700

Page 29

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40758P		AP0001/ /		PLUG (continued)				001-099
D40758P		217.6/198/L34		PLUG (continued)				115-199
	8	UNUSED						ALL
	9		W0001	0159	20		33-13-11	ALL
	10		W0001	0172	22		31-25-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D40760J		P37/ /		RCPT				115-199
	1		W1270	0097	20		33-31-41	115-199
	2		W1270	0096	18		33-31-41	115-199
	3		W1272	0241	18		25-29-11	115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
D40760P		P037-00/ /		PLUG-				115-199
	1		W4086	0001	20		33-31-41	115-199
	2		W4086	0002	18		33-31-41	115-199
	3		W4086	0017	18		25-29-11	115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
D40774J		E3-2/ /		PLUG				001-099
	1		W1332	2112R	24		21-61-21	001-099
	2		W1332	2112B	24		21-61-21	001-099
	3		W1332	2116R	24		21-61-51	001-099
	4		W1332	2116B	24		21-61-51	001-099
	5		W1332	2107R	24		21-61-51	001-099
	6		W1332	2107B	24		21-61-51	001-099
	7		W1332	2108R	24		21-61-51	001-099
	8		W1332	2108B	24		21-61-51	001-099
	9		W1332	2109R	24		21-61-51	001-099
	10		W1332	2109B	24		21-61-51	001-099
	11		W1332	2110R	24		21-61-51	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40700

Page 30

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40774J		E3-2/ /		PLUG (continued)				001-099
	12		W1332	2110B	24		21-61-51	001-099
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
	16	UNUSED						001-099
	17	UNUSED						001-099
	18	UNUSED						001-099
	19	UNUSED						001-099
	20	UNUSED						001-099
	21	UNUSED						001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
D40774P		E003-02/ /		PLUG				001-099
	1		W4006	2053R	24		21-61-21	001-099
	2		W4006	2053B	24		21-61-21	001-099
	3		W4006	2043R	24		21-61-51	001-099
	4		W4006	2043B	24		21-61-51	001-099
	5		W4006	2044R	24		21-61-51	001-099
	6		W4006	2044B	24		21-61-51	001-099
	7		W4006	2045R	24		21-61-51	001-099
	8		W4006	2045B	24		21-61-51	001-099
	9		W4006	2046R	24		21-61-51	001-099
	10		W4006	2046B	24		21-61-51	001-099
	11		W4006	2047R	24		21-61-51	001-099
	12		W4006	2047B	24		21-61-51	001-099
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
	16	UNUSED						001-099
	17	UNUSED						001-099
	18	UNUSED						001-099
	19	UNUSED						001-099
	20	UNUSED						001-099
	21	UNUSED						001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D40700

Page 31

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40782J		P010-00/ /		RCPT				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W1115	2001R	22		27-51-41	ALL
	6		W1115	4001R	22		27-51-41	ALL
	7		W1115	4001B	22		27-51-41	ALL
	8		W1115	0273Y	22		27-41-21	ALL
	9		W1115	0274Y	22		27-41-21	ALL
	10		W1115	4001Y	22		27-51-41	ALL
	11		W1115	4001G	22		27-51-41	ALL
	12		W1115	2001B	22		27-51-41	ALL
D40782P		P010-00/ /		PLUG				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W4220	2007R	24		27-51-41	001-099
	5		W4232	2003R	22		27-51-41	115-199
	6		W4220	4001R	24		27-51-41	001-099
	6		W4232	4001R	22		27-51-41	115-199
	7		W4220	4001B	24		27-51-41	001-099
	7		W4232	4001B	22		27-51-41	115-199
	8		W4220	0075Y	20		27-41-21	001-099
	8		W4232	0010Y	20		27-41-21	115-199
	9		W4220	0077Y	20		27-41-21	001-099
	9		W4232	0011Y	20		27-41-21	115-199
	10		W4220	4001Y	24		27-51-41	001-099
	10		W4232	4001Y	22		27-51-41	115-199
	11		W4220	4001G	24		27-51-41	001-099
	11		W4232	4001G	22		27-51-41	115-199
	12		W4220	2007B	24		27-51-41	001-099
	12		W4232	2003B	22		27-51-41	115-199
D40784J		P010-00/ /		RCPT				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1115	0423	22		32-44-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40700

Page 32

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40784J		P010-00/ /		RCPT (continued)				ALL
	4		W1115	0391	20		33-13-51	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D40784P		P010-00/ /		PLUG				001-099
D40784P		AP0010/ /		PLUGP10				115-199
	1	UNUSED						ALL
	2		W4220	0106	24		SPARE	001-099
	2		W4238	0015	24		SPARE	115-199
	3		W4220	0073	22		32-44-11	001-099
	3		W4238	0016	22		32-44-11	115-199
	4		W4220	0074	20		33-13-51	001-099
	4		W4238	0010	20		33-13-51	115-199
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D40798J		P005-00/ /		RCPT				ALL
	1		W2064	0333	22		27-23-11	ALL
	2	UNUSED						ALL
	3		W2064	0190	22		34-57-11	001-099
	3		W2064	0190	20		34-57-11	115-199
	4	UNUSED						ALL
	5		W2064	0075	24		21-25-11	ALL
	6		W2064	0242	20		33-44-21	ALL
	7		W2064	0034	20		33-42-12	001-099
	7		W2064	0144	20		23-11-11	115-199
	8		W2064	0192	22		SPARE	001-099
	8	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D40700

Page 33

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40798J		P005-00/ /		RCPT (continued)				ALL
	9		W2064	0144	20		23-11-11	001-099
	9	UNUSED						115-199
	10		W2064	0112	24		SPARE	001-099
	10	UNUSED						115-199
	11	UNUSED						ALL
	12		W2064	0145	22		34-53-11	ALL
	13		W2064	0322	22		33-14-41	ALL
	14		W2064	0180	22		32-42-11	001-099
	14	UNUSED						115-199
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W2064	0297	20		33-42-11	ALL
	18		W2064	0298	20		33-42-11	ALL
	19		W2064	0089	22		SPARE	001-099
	19		W2064	0089	22		32-09-11	115-199
	20	UNUSED						001-099
	20		W2064	0801	22		34-55-11	115-199
	21		W2064	0323	22		30-43-11	ALL
	22	UNUSED						ALL
	23		W2064	0320	18		30-42-11	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W2064	0148	22		30-41-11	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W2064	0114	22		29-11-11	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
D40798P		P011-00/ /		PLUG				001-099
D40798P		P05/ /		PLUG				115-199
	1		W0124	0315	22		27-23-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40700

Page 34

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40798P		P011-00/ /		PLUG (continued)				001-099
D40798P		P05/ /		PLUG (continued)				115-199
	2	UNUSED						ALL
	3		W0124	0072	22		34-57-11	ALL
	4	UNUSED						ALL
	5		W0126	0502	24		21-25-11	ALL
	6		W0126	0306	20		33-44-21	ALL
	7		W0126	0308	20		33-42-12	001-099
	7		W0124	0353	20		23-11-11	115-199
	8	UNUSED						ALL
	9		W0124	0353	20		23-11-11	001-099
	9	UNUSED						115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W0124	0044	22		34-53-11	ALL
	13		W0126	0407	22		33-14-41	ALL
	14		W0126	0539	22		32-42-11	001-099
	14	UNUSED						115-199
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W0126	0512	20		33-42-11	ALL
	18		W0126	0511	20		33-42-11	ALL
	19	UNUSED						001-099
	19		W0126	0039	22		32-09-11	115-199
	20	UNUSED						001-099
	20		W0124	0029	22		34-55-11	115-199
	21		W0126	0510	22		30-43-11	ALL
	22	UNUSED						ALL
	23		W0126	0305	18		30-42-11	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W0126	0509	22		30-41-11	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W0126	0135	22		29-11-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40700

Page 35

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40798P		P011-00/ /		PLUG (continued)				001-099
D40798P		P05/ /		PLUG (continued)				115-199
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40700

Page 36 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40800J		P005-00/ /		RCPT				ALL
	1		W2066	0513	22		29-31-11	ALL
	2	UNUSED						ALL
	3		W2066	0197	22		33-16-11	ALL
	4		W2066	0198	22		33-16-11	ALL
	5		W2066	0801	22		24-51-72	ALL
	6		W2066	0342	24		33-13-31	ALL
	7		W2066	0218	20		33-42-21	ALL
	8		W2066	0561	24		33-24-11	ALL
	9		W2066	0139	24		36-21-11	ALL
	10		W2066	0114	20		24-51-14	ALL
	11		W2066	0165	22		27-11-11	ALL
	12		W2066	0001	24		33-13-51	ALL
	13		W2066	0157	20		25-31-33	001-099
	13	UNUSED						115-199
	14	UNUSED						001-099
	14		W2066	0002	24		33-13-71	115-199
	15	UNUSED						ALL
	16		W2066	0563	24		33-11-21	ALL
	17		W2066	0322	22		33-16-21	ALL
	18	UNUSED						001-099
	18		W2066	0601	22		31-31-31	115-199
	19		W2066	0147	20		21-31-11	ALL
	20		W2066	0283	24		21-58-21	ALL
	21	18	W2066	0297	18		25-31-33	ALL
	22		W2066	0260	20		27-62-11	001-099
	22		W2066	0260	22		27-62-11	115-199
	23	UNUSED						001-099
	23	18	W2066	0288	18		28-43-11	115-199
	24		W2066	0348	22		24-25-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W2066	0341	24		34-61-11	ALL
	28		W2066	0253	22		27-23-11	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W2066	0003	22		33-11-11	ALL
	32		W2066	0092	24		21-65-11	ALL
	33		W2066	0102	24		21-61-11	ALL
	34		W2066	0103	20		21-61-51	ALL
	35		W2066	0104	24		SPARE	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40800J		P005-00/ /		RCPT (continued)				ALL
	36	16	W2066	0106	16		29-11-22	ALL
	37		W2066	0219	20		33-42-31	001-099
	37	UNUSED						115-199
	38		W2066	0118	24		24-51-71	001-099
	38		W2066	0118	22		24-51-71	115-199
	39		W2066	0287	20		21-51-23	001-099
	39	UNUSED						115-199
	40		W2066	0414	20		52-51-11	ALL
	41		W2066	0418	24		21-43-11	ALL
	42		W2066	0008	22		SPARE	ALL
	43		W2066	0530	20		21-51-23	001-099
	43	UNUSED						115-199
	44	18	W2066	0576	18		73-21-12	ALL
	45		W2066	0276	24		24-51-31	001-099
	45	UNUSED						115-199
	46	16	W2066	0406	16		29-11-31	ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	18	W2066	0575	18		73-21-11	ALL
	51		W2066	0217	24		34-22-16	ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55		W2066	0241	24		SPARE	ALL
D40800P		P5/ /		PLUG				ALL
	1		W0126	0024	22		29-31-11	ALL
	2	UNUSED						ALL
	3		W0126	0255	22		33-16-11	ALL
	4		W0126	0256	22		33-16-11	ALL
	5		W0126	0601	22		24-51-72	ALL
	6		W0126	0058	22		33-13-31	ALL
	7		W0126	0307	20		33-42-21	ALL
	8		W0126	0068	22		33-24-11	ALL
	9		W0126	0309	22		36-21-11	ALL
	10		W0126	0310	20		24-51-14	ALL
	11		W0126	0508	22		27-11-11	ALL
	12		W0126	0312	22		33-13-51	ALL
	13		W0126	0047	20		25-31-33	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40800P		P5/ /		PLUG (continued)				ALL
	13	UNUSED						115-199
	14	UNUSED						001-099
	14		W0126	0314	22		33-13-71	115-199
	15	UNUSED						ALL
	16		W0126	0005	22		33-11-21	ALL
	17		W0126	0317	22		33-16-21	ALL
	18	UNUSED						001-099
	18		W0126	0048	22		31-31-31	115-199
	19		W0126	0505	20		21-31-11	ALL
	20		W0126	0004	24		21-58-21	ALL
	21	18	W0126	0321	18		25-31-33	ALL
	22		W0124	0122	20		27-62-11	ALL
	23	UNUSED						001-099
	23		W0126	0248	22		28-43-11	115-199
	24		W0126	0067	22		24-25-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W0124	0023	20		34-61-11	ALL
	28		W0124	0316	22		27-23-11	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W0126	0426	22		33-11-11	ALL
	32		W0126	0525	24		21-65-11	ALL
	33		W0126	0328	24		21-61-11	ALL
	34		W0126	0599	20		21-61-51	ALL
	35	UNUSED						ALL
	36	16	W0126	0530	16		29-11-22	ALL
	37		W0126	0411	20		33-42-31	001-099
	37	UNUSED						115-199
	38		W0126	0061	24		24-51-71	001-099
	38		W0126	0061	22		24-51-71	115-199
	39		W0126	0527	20		21-51-23	001-099
	39	UNUSED						115-199
	40		W0126	0311	22		52-51-11	ALL
	41		W0126	0010	24		21-43-11	ALL
	42	UNUSED						ALL
	43		W0124	0528	20		21-51-23	001-099
	43	UNUSED						115-199
	44	18	W0126	0044	18		73-21-12	ALL
	45		W0126	0507	24		24-51-31	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40800P		P5/ /		PLUG (continued)				ALL
	45	UNUSED						115-199
	46	16	W0126	0529	16		29-11-31	ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	18	W0126	0031	18		73-21-11	ALL
	51		W0124	0204	22		34-22-16	ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D40802J		P005-00/ /		RCPT				001-099
D40802J		AP0005/ /		RCPT				115-199
	1	UNUSED						001-099
	1		W2070	0019	20		SPARE	115-199
	2		W2070	0332	22		SPARE	001-099
	2		W2070	0018	20		25-31-21	115-199
	3		W2070	0394	24		SPARE	001-099
	3	UNUSED						115-199
	4	UNUSED						ALL
	5		W2070	0044	24		34-22-26	ALL
	6		W2070	0537	22		32-42-12	001-099
	6	UNUSED						115-199
	7		W2070	0246	22		22-21-21	ALL
	8		W2070	0534	22		23-51-21	001-099
	8	UNUSED						115-199
	9		W2070	0535	22		23-51-21	001-099
	9		W2070	0102	22		23-51-21	115-199
	10		W2070	0006	22		27-23-11	ALL
	11		W2070	0511	22		24-25-11	ALL
	12	UNUSED						ALL
	13	UNUSED						001-099
	13		W2070	0804	24		34-22-93	115-199
	14	UNUSED						001-099
	14		W2070	0805	24		34-22-93	115-199
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W2070	0281	22		33-16-31	ALL
	18	16	W2070	0330	16		29-11-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 4

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40802J		P005-00/ /		RCPT (continued)				001-099
D40802J		AP0005/ /		RCPT (continued)				115-199
	19		W2070	0289	22		33-16-41	ALL
	20	16	W2070	0329	16		29-11-12	ALL
	21		W2070	0101	18		30-42-11	ALL
	22		W2070	0231	22		78-34-21	ALL
	23	UNUSED						ALL
	24		W2070	0017	22		23-43-11	ALL
	25		W2070	0018	20		25-31-11	001-099
	25	UNUSED						115-199
	26		W2070	0177	20		25-31-11	001-099
	26	UNUSED						115-199
	27		W2070	0167	24		34-61-21	ALL
	28		W2070	0240	20		23-11-21	ALL
	29		W2070	0241	22		34-53-21	ALL
	30		W2070	0244	22		31-51-12	ALL
	31	UNUSED						001-099
	31		W2070	0809	22		34-55-21	115-199
	32	UNUSED						001-099
	32		W2070	0810	22		23-51-21	115-199
	33		W2070	0386	22		32-42-11	ALL
	34	UNUSED						ALL
	35	UNUSED						001-008, 115-199
	35		W2070	0623	20		28-22-32	009-099
	36	UNUSED						ALL
	37		W2070	3001R	24		33-13-61	ALL
	38		W2070	3001B	24		33-13-61	ALL
	39		W2070	3001Y	24		33-13-61	ALL
D40802P		P005-00/ /		PLUG-				001-099
D40802P		P005-00/ /		PLUG				115-199
	1	UNUSED						ALL
	2	UNUSED						001-099
	2		W0128	0402	20		25-31-21	115-199
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0128	0309	22		34-22-26	ALL
	6		W0130	0107	22		32-42-12	001-099
	6	UNUSED						115-199
	7		W0128	0355	22		22-21-21	ALL
	8		W0128	0121	22		23-51-21	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 5

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40802P		P005-00/ /		PLUG- (continued)				001-099
D40802P		P005-00/ /		PLUG (continued)				115-199
	8	UNUSED						115-199
	9		W0128	0820	22		23-51-21	001-099
	9		W0128	0123	22		23-51-21	115-199
	10		W0128	0210	22		27-23-11	ALL
	11		W0130	0080	22		24-25-11	ALL
	12	UNUSED						ALL
	13	UNUSED						001-099
	13		W0128	0040	22		34-22-93	115-199
	14	UNUSED						001-099
	14		W0128	0041	22		34-22-93	115-199
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W0130	0203	22		33-16-31	ALL
	18	16	W0130	0280	16		29-11-31	ALL
	19		W0130	0219	22		33-16-41	ALL
	20	16	W0130	0246	16		29-11-12	ALL
	21		W0130	0227	18		30-42-11	ALL
	22		W0130	0095	22		78-34-21	ALL
	23	UNUSED						ALL
	24		W0128	0024	22		23-43-11	ALL
	25		W0130	0087	20		25-31-11	001-099
	25	UNUSED						115-199
	26		W0130	0301	22		25-31-11	001-099
	26	UNUSED						115-199
	27		W0128	0032	22		34-61-21	ALL
	28		W0128	0200	20		23-11-21	ALL
	29		W0128	0020	22		34-53-21	ALL
	30		W0128	0129	22		31-51-12	ALL
	31	UNUSED						001-099
	31		W0128	0016	22		34-55-21	115-199
	32	UNUSED						001-099
	32		W0128	0229	22		23-51-21	115-199
	33		W0130	0034	22		32-42-11	ALL
	34	UNUSED						ALL
	35	UNUSED						001-008, 115-199
	35		W0128	0153	20		28-22-32	009-099
	36	UNUSED						ALL
	37		W0128	3002R	24		33-13-61	ALL
	38		W0128	3002B	24		33-13-61	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 6

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40802P		P005-00/ /		PLUG- (continued)				001-099
D40802P		P005-00/ /		PLUG (continued)				115-199
	39		W0128	3002Y	24		33-13-61	ALL
D40804J		P005-00/ /		PLUG				001-099
D40804J		P005-00/ /		RCPT				115-199
	1		W2072	0014	20		33-44-11	ALL
	2		W2072	0069	20		33-41-11	ALL
	3		W2072	0001	24		30-32-11	ALL
	4	UNUSED						ALL
	5		W2072	0003	20		31-41-19	ALL
	6	UNUSED						001-099
	6		W2072	0800	20		33-14-51	115-199
	7		W2072	0152	20		33-43-12	ALL
	8	18	W2072	0252	18		73-21-21	ALL
	9	UNUSED						001-099
	9		W2072	0228	20		25-31-21	115-199
	10		W2072	0251	22		28-22-11	ALL
	11		W2072	0071	20		33-42-12	ALL
	12		W2072	0075	20		33-43-11	ALL
	13	UNUSED						001-099
	13		W2072	0070	20		33-42-12	115-199
	14		W2072	0050	22		30-43-11	ALL
	15	UNUSED						ALL
	16		W2072	0159	24		26-11-21	001-099
	16	UNUSED						115-199
	17		W2072	0161	24		26-15-11	001-099
	17	UNUSED						115-199
	18		W2072	0163	24		26-16-11	001-099
	18	UNUSED						115-199
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W2072	0239	24		21-61-31	ALL
	22		W2072	0230	24		33-11-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W2072	0240	20		21-31-21	ALL
	26	UNUSED						ALL
	27		W2072	0158	24		26-11-11	001-099
	27	UNUSED						115-199
	28		W2072	0233	24		21-44-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 7

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40804J		P005-00/ /		PLUG (continued)				001-099
D40804J		P005-00/ /		RCPT (continued)				115-199
	29		W2072	0022	20		33-42-21	ALL
	30		W2072	0248	22		24-51-72	ALL
	31	UNUSED						ALL
	32		W2072	0104	20		36-11-21	ALL
	33		W2072	0243	22		29-11-21	ALL
	34	UNUSED						ALL
	35		W2072	0244	20		24-51-24	ALL
	36		W2072	0131	20		SPARE	001-099
	36		W2072	0131	22		SPARE	115-199
	37		W2072	0247	24		21-61-11	ALL
	38		W2072	0151	24		21-61-21	ALL
	39	UNUSED						ALL
	40		W2072	0249	24		33-11-61	ALL
	41	18	W2072	0253	18		73-21-22	ALL
	42	UNUSED						ALL
	43		W2072	0561	24		33-11-21	ALL
	44	UNUSED						ALL
	45		W2072	0154	24		24-51-31	001-099
	45	UNUSED						115-199
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D40804P		P005-00/ /		PLUG				ALL
	1		W0130	0245	20		33-44-11	ALL
	2		W0130	0250	20		33-41-11	ALL
	3		W0130	0051	24		30-32-11	001-099
	3		W0130	0051	22		30-32-11	115-199
	4	UNUSED						ALL
	5		W0130	0222	22		31-41-19	ALL
	6	UNUSED						001-099
	6		W0130	0404	22		33-14-51	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 8

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40804P		P005-00/ /		PLUG (continued)				ALL
	7		W0130	0207	20		33-43-12	ALL
	8	18	W0130	0041	18		73-21-21	ALL
	9	UNUSED						001-099
	9		W0130	0215	20		25-31-21	115-199
	10		W0130	0030	22		28-22-11	ALL
	11		W0130	0211	20		33-42-12	ALL
	12		W0130	0260	20		33-43-11	ALL
	13	UNUSED						001-099
	13		W0130	0210	20		33-42-12	115-199
	14		W0130	0214	22		30-43-11	ALL
	15	UNUSED						ALL
	16		W0130	0310	24		26-11-21	001-099
	16	UNUSED						115-199
	17		W0130	0308	24		26-15-11	001-099
	17	UNUSED						115-199
	18		W0130	0402	24		26-16-11	001-099
	18	UNUSED						115-199
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0130	0285	24		21-61-31	ALL
	22		W0130	0216	22		33-11-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W0130	0202	20		21-31-21	ALL
	26	UNUSED						ALL
	27		W0130	0205	24		26-11-11	001-099
	27	UNUSED						115-199
	28		W0130	0012	24		21-44-11	ALL
	29		W0130	0229	20		33-42-21	ALL
	30		W0130	0330	22		24-51-72	ALL
	31	UNUSED						ALL
	32		W0130	0018	20		36-11-21	ALL
	33		W0130	0295	22		29-11-21	ALL
	34	UNUSED						ALL
	35		W0130	0220	20		24-51-24	ALL
	36	UNUSED						ALL
	37		W0130	0232	24		21-61-11	ALL
	38		W0130	0290	24		21-61-21	ALL
	39	UNUSED						ALL
	40		W0130	0213	24		33-11-61	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 9

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40804P		P005-00/ /		PLUG (continued)				ALL
	41	18	W0130	0043	18		73-21-22	ALL
	42	UNUSED						ALL
	43		W0130	0251	22		33-11-21	ALL
	44	UNUSED						ALL
	45		W0130	0053	24		24-51-31	001-099
	45	UNUSED						115-199
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D40806J		P005-00/ /		RCPT				ALL
	1		W2078	0315	22		77-12-41	ALL
	2		W2078	0012	24		33-11-11	ALL
	3		W2078	0167	20		21-31-31	ALL
	4	UNUSED						ALL
	5		W2078	0071	22		22-21-11	ALL
	6	UNUSED						001-099
	6		W2078	0196	20		21-51-23	115-199
	7		W2078	0530	22		SPARE	001-099
	7		W2078	0801	22		34-22-83	115-199
	8		W2078	0047	22		29-22-11	001-099
	8		W2078	0016	20		74-31-11	115-199
	9		W2078	0500	24		33-13-31	ALL
	10		W2078	0267	22		31-51-11	ALL
	11		W2078	0016	20		74-31-21	001-099
	11	UNUSED						115-199
	12		W2078	0214	22		33-16-51	ALL
	13		W2078	0215	22		33-16-51	ALL
	14		W2078	0428	24		26-11-21	001-099
	14		W2078	0061	22		26-11-21	115-199
	15		W2078	0429	24		26-15-11	001-099
	15		W2078	0092	22		26-15-11	115-199
	16		W2078	0510	20		27-21-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 10

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40806J		P005-00/ /		RCPT (continued)				ALL
	17		W2078	0062	22		26-15-12	ALL
	18		W2078	0070	24		77-12-11	ALL
	19		W2078	0165	24		21-33-11	ALL
	20		W2078	0423	20		21-31-11	ALL
	21		W2078	0014Y	20		27-41-21	ALL
	22		W2078	0243	22		33-16-61	ALL
	23		W2078	0241	22		33-16-61	ALL
	24		W2078	0242	22		33-16-61	ALL
	25		W2078	0424	24		36-11-31	ALL
	26		W2078	0090	22		26-16-11	ALL
	27		W2078	0081	22		26-17-11	ALL
	28		W2078	0426	24		26-11-11	001-099
	28		W2078	0091	22		26-11-11	115-199
	29		W2078	0325	22		32-42-11	ALL
	30		W2078	0268	22		30-21-11	ALL
	31		W2078	0326	22		32-42-11	ALL
I	32	UNUSED						ALL
I	33		W2078	0515	22		24-33-12	001-099
I	33	UNUSED						115-199
	34		W2078	0452	22		30-11-11	ALL
	35		W2078	0082	22		26-17-11	ALL
	36		W2078	0383	24		21-51-22	ALL
	37		W2078	0384	24		21-51-12	ALL
	38		W2078	0432	24		30-32-11	ALL
	39		W2078	0434	22		34-57-21	ALL
	40		W2078	0435	22		78-34-11	ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43		W2078	0516	22		24-33-12	001-099
	43	UNUSED						115-199
	44	UNUSED						ALL
	45		W2078	0425	24		24-51-31	001-099
	45	UNUSED						115-199
	46		W2078	0486	20		27-41-31	ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 11

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40806J		P005-00/ /		RCPT (continued)				ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D40806P		P005-00/ /		PLUG- PLUG				001-099
D40806P		P005-00/ /						115-199
	1		W0128	0746	22		77-12-41	001-099
	1		W0134	0046	22		77-12-41	115-199
	2		W0124	0812	22		33-11-11	ALL
	3		W0124	0803	20		21-31-31	001-099
	3		W0132	0203	20		21-31-31	115-199
	4	UNUSED						ALL
	5		W0124	0805	20		22-21-11	001-099
	5		W0132	0205	20		22-21-11	115-199
	6	UNUSED						001-099
	6		W0132	0052	20		21-51-23	115-199
	7	UNUSED						001-099
	7		W0132	0031	22		34-22-83	115-199
	8		W0128	0725	22		29-22-11	001-099
	8		W0132	0211	20		74-31-11	115-199
	9		W0124	0750	24		33-13-31	001-099
	9		W0132	0100	24		33-13-31	115-199
	10		W0124	0810	22		31-51-11	001-099
	10		W0132	0210	22		31-51-11	115-199
	11		W0124	0813	20		74-31-21	001-099
	11	UNUSED						115-199
	12		W0128	0862	22		33-16-51	001-099
	12		W0134	0312	22		33-16-51	115-199
	13		W0128	0863	22		33-16-51	001-099
	13		W0134	0313	22		33-16-51	115-199
	14		W0128	0856	24		26-11-21	001-099
	14		W0134	0300	24		26-11-21	115-199
	15		W0128	0854	24		26-15-11	001-099
	15		W0134	0301	24		26-15-11	115-199
	16		W0124	0729	20		27-21-11	001-099
	16		W0132	0029	20		27-21-11	115-199
	17		W0128	0853	24		26-15-12	001-099
	17		W0134	0303	24		26-15-12	115-199
	18		W0128	0916	24		77-12-11	001-099
	18		W0134	0416	24		77-12-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 12

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40806P		P005-00/ /		PLUG- (continued)				001-099
D40806P		P005-00/ /		PLUG (continued)				115-199
	19		W0124	0957	24		21-33-11	001-099
	19		W0132	0357	24		21-33-11	115-199
	20		W0124	0911	20		21-31-11	001-099
	20		W0132	0501	20		21-31-11	115-199
	21		W0124	0958Y	20		27-41-21	001-099
	21		W0132	0358Y	20		27-41-21	115-199
	22		W0128	0727	22		33-16-61	001-099
	22		W0134	0027	22		33-16-61	115-199
	23		W0128	0806	22		33-16-61	001-099
	23		W0134	0206	22		33-16-61	115-199
	24		W0128	0807	22		33-16-61	001-099
	24		W0134	0207	22		33-16-61	115-199
	25		W0124	0727	24		36-11-31	001-099
	25		W0132	0027	24		36-11-31	115-199
	26		W0128	0925	24		26-16-11	001-099
	26		W0134	0425	24		26-16-11	115-199
	27		W0124	0927	24		26-17-11	001-099
	27		W0132	0570	24		26-17-11	115-199
	28		W0128	0800	24		26-11-11	001-099
	28		W0134	0302	24		26-11-11	115-199
	29		W0128	0721	22		32-42-11	001-099
	29		W0134	0021	22		32-42-11	115-199
	30		W0128	0400	22		30-21-11	001-099
	30		W0134	0400	22		30-21-11	115-199
	31		W0128	0722	22		32-42-11	001-099
	31		W0134	0022	22		32-42-11	115-199
I	32	UNUSED						ALL
	33		W0128	0147	22		24-33-12	001-099
I	33	UNUSED						115-199
	34		W0128	0224	22		30-11-11	ALL
	35		W0128	0728	24		26-17-11	001-099
	35		W0134	0028	24		26-17-11	115-199
	36		W0128	0242	24		21-51-22	ALL
	37		W0124	0506	24		21-51-12	001-099
	37		W0132	0050	24		21-51-12	115-199
	38		W0124	0081	24		30-32-11	001-099
	38		W0132	0054	22		30-32-11	115-199
	39		W0124	0116	22		34-57-21	001-099
	39		W0132	0049	22		34-57-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 13

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40806P		P005-00/ /		PLUG- (continued)				001-099
D40806P		P005-00/ /		PLUG (continued)				115-199
	40		W0124	0411	22		78-34-11	001-099
	40		W0132	0056	22		78-34-11	115-199
	41	UNUSED						ALL
	42	UNUSED						ALL
	43		W0128	0148	22		24-33-12	001-099
	43	UNUSED						115-199
	44	UNUSED						ALL
	45		W0124	0950	24		24-51-31	001-099
	45	UNUSED						115-199
	46		W0128	0133	20		27-41-31	001-099
	46		W0134	0133	20		27-41-31	115-199
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D40808J		P005-00/ /		RCPT				ALL
	1		W2156	0191	24		28-25-11	001-099
	1		W2156	0191	22		28-25-11	115-199
	2		W2156	0192	24		28-25-11	001-099
	2		W2156	0192	22		28-25-11	115-199
	3		W2156	0059	24		24-33-12	001-099
	3	UNUSED						115-199
	4		W2156	0016	22		SPARE	001-099
	4		W2156	0016	20		74-31-21	115-199
	5		W2156	0090	22		30-21-11	ALL
	6	UNUSED						ALL
	7		W2156	0066	22		26-11-21	ALL
	8		W2156	0168	22		23-51-11	001-099
	8		W2156	0018	22		23-51-11	115-199
	9		W2156	0020	24		21-33-11	ALL
	10		W2156	0171	24		26-16-11	001-099
	10		W2156	0069	22		26-16-11	115-199
	11		W2156	0198	22		24-33-12	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 14

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40808J		P005-00/ /		RCPT (continued)				ALL
	11	UNUSED						115-199
	12		W2156	0075	22		26-15-11	ALL
	13	UNUSED						001-002
	13		W2156	0131	20		SPARE	003-099
	13		W2156	0151	22		SPARE	115-199
	14		W2156	0019	20		74-31-11	001-099
	14		W2156	0152	22		SPARE	115-199
	15		W2156	0195	22		24-33-12	001-099
	15	UNUSED						115-199
	16		W2156	0064	22		26-11-11	ALL
	17		W2156	0196	22		24-33-12	001-099
	17	UNUSED						115-199
	18		W2156	0197	22		24-33-12	001-099
	18	UNUSED						115-199
	19	UNUSED						ALL
	20		W2156	0005	24		33-11-31	ALL
	21		W2156	0194	20		24-33-12	001-099
	21	UNUSED						115-199
	22		W2156	0070Y	20		27-41-11	ALL
	23		W2156	0169	22		23-51-11	001-099
	23		W2156	0017	22		23-51-11	115-199
	24		W2156	0021	22		29-11-21	ALL
	25		W2156	0136	20		SPARE	001-002
	25	UNUSED						003-099, 115-199
	26		W2156	0174	22		33-51-11	ALL
	27		W2156	0175	22		33-51-11	ALL
	28		W2156	0153	20		28-22-31	ALL
	29		W2156	0130	20		SPARE	001-099
	29	UNUSED						115-199
	30		W2156	0176	22		78-34-21	001-002
	30	UNUSED						003-099
	30		W2156	0176	22		SPARE	115-199
	31	UNUSED						001-002, 115-199
	31		W2156	0250	22		78-34-21	003-099
	32		W2156	0135	20		SPARE	001-002
	32	UNUSED						003-099, 115-199
	33	UNUSED						ALL
	34		W2156	0252	22		78-34-21	001-002, 115-199
	34	UNUSED						003-008
	34		W2156	0251	20		28-22-31	009-099

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 15

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40808J		P005-00/ /		RCPT (continued)				ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	CAP	Y	W2156	0131	20		SPARE	001-002
D40808P		P005-00/ /		PLUG-				001-099
D40808P		P005-00/ /		PLUG				115-199
	1		W0128	0716	24		28-25-11	001-099
	1		W0134	0016	22		28-25-11	115-199
	2		W0128	0714	24		28-25-11	001-099
	2		W0134	0014	22		28-25-11	115-199
	3		W0128	0143	24		24-33-12	001-099
	3	UNUSED						115-199
	4	UNUSED						001-099
	4		W0132	0213	22		74-31-21	115-199
	5		W0128	0407	22		30-21-11	001-099
	5		W0134	0407	22		30-21-11	115-199
	6	UNUSED						ALL
	7		W0128	0715	24		26-11-21	001-099
	7		W0134	0015	24		26-11-21	115-199
	8		W0128	0120	22		23-51-11	001-099
	8		W0134	0121	22		23-51-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 16

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40808P		P005-00/ /		PLUG- (continued)				001-099
D40808P		P005-00/ /		PLUG (continued)				115-199
	9		W0124	0859	24		21-33-11	001-099
	9		W0132	0259	24		21-33-11	115-199
	10		W0128	0902	24		26-16-11	001-099
	10		W0134	0419	24		26-16-11	115-199
	11		W0128	0140	22		24-33-12	001-099
I	11	UNUSED						115-199
	12		W0128	0718	24		26-15-11	001-099
	12		W0134	0018	24		26-15-11	115-199
	13	UNUSED						ALL
	14		W0124	0811	20		74-31-11	001-099
	14	UNUSED						115-199
	15		W0128	0145	22		24-33-12	001-099
I	15	UNUSED						115-199
	16		W0128	0852	24		26-11-11	001-099
	16		W0134	0216	24		26-11-11	115-199
	17		W0128	0142	22		24-33-12	001-099
I	17	UNUSED						115-199
I	18		W0128	0144	22		24-33-12	001-099
I	18	UNUSED						115-199
	19	UNUSED						ALL
	20		W0128	0811	22		33-11-31	001-099
	20		W0134	0211	22		33-11-31	115-199
	21		W0128	0141	20		24-33-12	001-099
I	21	UNUSED						115-199
	22		W0124	0952Y	20		27-41-11	001-099
	22		W0132	0352Y	20		27-41-11	115-199
	23		W0128	0772	22		23-51-11	001-099
	23		W0134	0123	22		23-51-11	115-199
	24		W0128	0720	22		29-11-21	001-099
	24		W0134	0020	22		29-11-21	115-199
	25	UNUSED						ALL
	26		W0128	0011	22		33-51-11	001-099
	26		W0134	0053	22		33-51-11	115-199
	27		W0128	0012	22		33-51-11	001-099
	27		W0134	0054	22		33-51-11	115-199
	28		W0128	0805	20		28-22-31	001-099
	28		W0134	0205	20		28-22-31	115-199
	29	UNUSED						ALL
	30	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 17

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40808P		P005-00/ /		PLUG- (continued)				001-099
D40808P		P005-00/ /		PLUG (continued)				115-199
	31	UNUSED						001-002, 115-199
	31		W0128	0270	22		78-34-21	003-099
	32	UNUSED						ALL
	33	UNUSED						ALL
	34		W0128	0270	22		78-34-21	001-002
	34	UNUSED						003-008
	34		W0128	0154	20		28-22-31	009-099
	34		W0134	0055	22		78-34-21	115-199
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D40810J		P50/ /		RCPT				ALL
	1		W1140	0442	22		21-51-23	001-099
	1	UNUSED						115-199
	2		W1140	0529	22		27-23-21	ALL
	3	UNUSED						ALL
	4		W1140	0283	24		26-18-11	ALL
	5		W1140	0058	22		27-48-21	ALL
	6	UNUSED						ALL
	7		W1140	0025	22		21-51-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 18

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40810J		P50/ /		RCPT (continued)				ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W1140	0561	22		27-23-21	ALL
	12	UNUSED						ALL
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D40810P		P050-00/ /		PLUG-				001-099
D40810P		P50/ /		PLUG-				115-199
	1		W2352	0201	20		21-51-23	001-099
	1		W2352	0201	20		SPARE	115-199
	2		W2352	0602	22		27-23-21	ALL
	3		W2352	0603	24		SPARE	ALL
	4		W2352	0507	22		26-18-11	ALL
	5		W2352	0105	22		27-48-21	ALL
	6		W2352	0604	24		SPARE	ALL
	7		W2352	0029	20		21-51-11	ALL
	8		W2352	0605	24		SPARE	ALL
	9	UNUSED						001-099
	9		W2352	0606	24		SPARE	115-199
	10	UNUSED						001-099
	10		W2352	0607	24		SPARE	115-199
	11		W2352	0608	22		27-23-21	001-099
	11		W2352	0608	20		27-23-21	115-199
	12		W2352	0609	20		SPARE	ALL
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D40812J		P50/ /		RCPT				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1140	0050	22		27-48-21	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1140	0125	22		28-21-21	ALL
	8		W1140	0124	22		28-21-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 19

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40812J		P50/ /		RCPT (continued)				ALL
	9		W1140	0129	22		21-51-21	ALL
	10		W1140	0281	24		26-18-11	ALL
	11	UNUSED						ALL
	12		W1140	0466	24		26-18-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D40812P		P050-00/ /		PLUG				001-099
D40812P		P50/ /		PLUG				115-199
	1		W2356	0013	24		SPARE	ALL
	2		W2356	0211	24		SPARE	ALL
	3	UNUSED						ALL
	4		W2356	0022	22		27-48-21	ALL
	5		W2356	0023	22		SPARE	ALL
	6	UNUSED						001-099
	6		W2356	0283	22		SPARE	115-199
	7		W2356	0290	22		28-21-21	001-099
	7		W2356	0290	20		28-21-21	115-199
	8		W2356	0291	20		28-21-21	ALL
	9		W2356	0019	20		21-51-21	ALL
	10		W2356	0603	22		26-18-11	ALL
	11	UNUSED						ALL
	12		W2356	0602	22		26-18-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D40816J		AS1140/ /		RECPT				ALL
	1		W3330	0013	20		36-11-12	ALL
	2		W3330	0005	20		26-11-12	ALL
	3		W3330	0011	20		36-11-12	ALL
	4		W3330	0012	20		36-11-12	ALL
	5		W3330	0004	20		26-11-12	ALL
	6		W3330	0014	20		36-11-12	ALL
	7		W3330	0015	20		SPARE	ALL
D40816P		AS1140/ /		PLUG				ALL
	1		W3366	0007	20		36-11-12	ALL
	2		W3366	0002	18		26-11-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 20

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40816P		AS1140/ /		PLUG (continued)				ALL
	3		W3366	0003	20		36-11-12	ALL
	4		W3366	0005	20		36-11-12	ALL
	5		W3366	0001	18		26-11-12	ALL
	6		W3366	0008	20		36-11-12	ALL
	7	UNUSED						ALL
D40818J		AS2140/ /		RCPT				ALL
	1		W3430	0013	20		36-11-22	ALL
	2		W3430	0005	20		26-11-22	ALL
	3		W3430	0011	20		36-11-22	ALL
	4		W3430	0012	20		36-11-22	ALL
	5		W3430	0004	20		26-11-22	ALL
	6		W3430	0014	20		36-11-22	ALL
	7		W3430	0015	20		SPARE	ALL
D40818P		AS2140/ /		PLUG				ALL
	1		W3466	0005	20		36-11-22	ALL
	2		W3466	0002	18		26-11-22	ALL
	3		W3466	0003	20		36-11-22	ALL
	4		W3466	0004	20		36-11-22	ALL
	5		W3466	0001	18		26-11-22	ALL
	6		W3466	0006	20		36-11-22	ALL
	7	UNUSED						ALL
D40824J		P011-00/ /		RCPT-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						001-099
	4		W0130	0014	22		21-51-13	115-199
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W0130	0247	22		25-66-11	ALL
	8		W0130	0032	22		32-61-11	ALL
	9	UNUSED						ALL
	10		W0130	0007	22		27-18-11	ALL
	11		W0130	0121	22		27-38-11	ALL
	12		W0130	0122	22		31-41-21	ALL
	13		W0130	0123	22		31-41-21	ALL
	14	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 21

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40824J		P011-00/ /		RCPT- (continued)				ALL
	15		W0130	0042	22		32-09-11	001-099
	15		W0130	0042	22		32-01-11	115-199
	16	UNUSED						ALL
	17		W0130	0027	22		27-32-21	ALL
	18		W0130	0118	22		24-41-11	ALL
	19		W0130	0046	22		29-33-11	ALL
	20	UNUSED						ALL
	21		W0130	0059	22		77-31-11	ALL
	22		W0130	0275	24		79-32-11	001-099
	22		W0130	0275	22		79-32-11	115-199
	23	UNUSED						ALL
	24		W0130	0324	22		35-11-13	001-099
	24	UNUSED						115-199
	25		W0130	0055	22		52-71-11	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W0130	0047	22		29-33-11	ALL
	36		W0130	0048	22		29-33-11	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
D40824P		P11/ /		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						001-099
	2		W2354	0643	22		SPARE	115-199
	3	UNUSED						001-099
	3		W2354	0645	22		SPARE	115-199
	4	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 22

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40824P		P11/ /		PLUG- (continued)				ALL
	4		W2354	0061	20		21-51-13	115-199
	5	UNUSED						001-099
	5		W2354	0062	20		SPARE	115-199
	6	UNUSED						001-099
	6		W2354	0514	22		SPARE	115-199
	7		W2354	0017	22		25-66-11	ALL
	8		W2354	0014	22		32-61-11	ALL
	9	UNUSED						ALL
	10		W2354	0034	22		27-18-11	ALL
	11		W2354	0021	22		27-38-11	ALL
	12		W2354	0024	22		31-41-21	ALL
	13		W2354	0023	22		31-41-21	ALL
	14		W2354	0015	22		SPARE	ALL
	15		W2354	0011	22		32-09-11	001-099
	15		W2354	0011	22		32-01-11	115-199
	16	UNUSED						ALL
	17		W2354	0217	22		27-32-21	ALL
	18		W2354	0045	22		24-41-11	ALL
	19		W2354	0016	22		29-33-11	ALL
	20	UNUSED						001-099
	20		W2354	0601	22		SPARE	115-199
	21		W2354	0013	22		77-31-11	ALL
	22		W2354	0022	24		79-32-11	ALL
	23	UNUSED						ALL
	24		W2354	0025	22		35-11-13	001-099
	24		W2354	0025	22		SPARE	115-199
	25		W2354	0065	22		52-71-11	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						001-099
	34		W2354	0640	18		SPARE	115-199
	35		W2354	0361	22		29-33-11	ALL
	36		W2354	0362	22		29-33-11	ALL
	37	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 23

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40824P		P11/ /		PLUG- (continued)				ALL
	38	UNUSED						001-099
	38		W2354	0630	18		SPARE	115-199
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						001-099
	41		W2354	0624	18		SPARE	115-199
	42	UNUSED						ALL
	43	UNUSED						001-099
	43		W2354	0515	16		SPARE	115-199
D40834J		P003-01/ /		RCPT				ALL
	1		W0002	0007	24		27-51-11	ALL
	2		W0002	0008	24		27-51-11	ALL
	3		W0002	0009	24		27-51-11	ALL
	4		W0002	0010	24		27-51-11	ALL
	5		W0002	0011	24		27-51-11	ALL
	6		W0002	0012	24		27-51-11	ALL
	7	UNUSED						001-099
	7		W0002	0013	24		27-51-11	115-199
	8		W0002	0014	24		27-51-11	ALL
	9	UNUSED						ALL
	10		W0002	0067	22		33-16-31	ALL
	11		W0002	0072	22		33-16-61	ALL
	12		W0002	0073	22		33-16-41	ALL
	13		W0002	0083	24		27-51-61	ALL
	14		W0002	0084	24		27-51-61	ALL
	15		W0002	0085	24		27-51-61	ALL
	16		W0002	0086	24		27-51-61	ALL
	17		W0002	0087	24		27-51-61	ALL
	18		W0002	0088	24		27-51-61	ALL
	19		W0002	0089	24		27-51-61	ALL
	20		W0002	0090	24		27-51-61	ALL
	21		W0002	0091	24		27-51-61	ALL
	22		W0002	0125	24		27-51-11	ALL
	23		W0002	0118	22		32-31-11	ALL
	24		W0002	0119	22		32-31-11	ALL
	25		W0002	0127	22		32-31-11	ALL
	26		W0002	0129	22		32-31-11	ALL
	27		W0002	0052	20		33-13-21	ALL
	28		W0002	0053	20		33-13-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 24

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40834J		P003-01/ /		RCPT (continued)				ALL
	29		W0002	0042	20		33-13-21	ALL
	30		W0002	0109	22		32-61-21	ALL
	31		W0002	0110	22		32-61-21	ALL
	32		W0002	0111	22		32-61-21	ALL
	33		W0002	0015	24		27-51-11	ALL
	34		W0002	0021	24		27-51-11	ALL
	35		W0002	0092	24		27-51-61	ALL
	36		W0002	0093	24		27-51-61	ALL
	37		W0002	0032	22		34-22-36	ALL
	38		W0002	0037	22		34-22-36	ALL
	39		W0002	0035	22		34-22-36	ALL
	40	UNUSED						001, 003-099, 115-199
	40		W0002	0155	22		34-46-11	002
	41	UNUSED						001, 003-099, 115-199
	41		W0002	0171	22		34-46-11	002
	42	UNUSED						001, 003-099, 115-199
	42		W0002	0170	20		33-13-21	002
	43	UNUSED						001, 003-099, 115-199
	43		W0002	0169	20		33-13-21	002
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D40834P		P3-1/ /		PLUG				ALL
	1		W0003	0127	24		27-51-11	ALL
	2		W0003	0128	24		27-51-11	ALL
	3		W0003	0129	24		27-51-11	ALL
	4		W0003	0130	24		27-51-11	ALL
	5		W0003	0131	24		27-51-11	ALL
	6		W0003	0132	24		27-51-11	ALL
	7	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 25

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40834P		P3-1/ /		PLUG (continued)				ALL
	7		W0003	0133	24		27-51-11	115-199
	8		W0003	0134	24		27-51-11	ALL
	9	UNUSED						ALL
	10		W0003	0095	22		33-16-31	ALL
	11		W0003	0227	22		33-16-61	ALL
	12		W0003	0099	22		33-16-41	ALL
	13		W0003	0064	24		27-51-61	ALL
	14		W0003	0065	24		27-51-61	ALL
	15		W0003	0066	24		27-51-61	ALL
	16		W0003	0071	24		27-51-61	ALL
	17		W0003	0072	24		27-51-61	ALL
	18		W0003	0075	24		27-51-61	ALL
	19		W0003	0088	24		27-51-61	ALL
	20		W0003	0094	24		27-51-61	ALL
	21		W0003	0063	20		27-51-61	ALL
	22		W0003	0481	24		27-51-11	ALL
	23		W0003	0569	22		32-31-11	ALL
	24		W0003	0054	22		32-31-11	ALL
	25		W0003	0055	22		32-31-11	ALL
	26		W0003	0570	22		32-31-11	ALL
	27		W0003	0197	20		33-13-21	ALL
	28		W0003	0198	20		33-13-21	ALL
	29		W0003	0437	20		33-13-21	ALL
	30		W0003	0177	22		32-61-21	ALL
	31		W0003	0179	22		32-61-21	ALL
	32		W0003	0173	22		32-61-21	ALL
	33		W0003	0285	24		27-51-11	ALL
	34		W0003	0286	24		27-51-11	ALL
	35		W0003	0278	24		27-51-61	ALL
	36		W0003	0279	24		27-51-61	ALL
	37		W0003	0491	22		34-22-36	ALL
	38		W0003	0490	22		34-22-36	ALL
	39		W0003	0493	22		34-22-36	ALL
	40	UNUSED						001, 003-099, 115-199
	40		W0003	0396	22		34-46-11	002
	41	UNUSED						001, 003-099, 115-199
	41		W0003	0547	20		34-46-11	002
	42	UNUSED						001, 003-099, 115-199
	42		W0003	0605	20		33-13-21	002
	43	UNUSED						001, 003-099, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 26

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40834P		P3-1/ /		PLUG (continued)				ALL
	43		W0003	0604	20		33-13-21	002
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D40836J		P003-01/ /		RCPT				ALL
	1		W0002	0016	22		27-51-21	ALL
	2		W0002	0018	22		27-51-21	ALL
	3		W0002	0022	22		27-51-21	ALL
	4		W0002	0024	22		27-51-21	ALL
	5	UNUSED						ALL
	6		W0002	0122	24		31-51-31	ALL
	7		W0002	0120	22		26-17-11	ALL
	8		W0002	0054	22		33-16-51	ALL
	9		W0002	0066	22		33-16-51	ALL
	10		W0002	0031	22		27-51-21	ALL
	11	UNUSED						001-099
	11		W0002	0128	22		33-16-51	115-199
	12	UNUSED						001-099
	12		W0002	0126	22		33-16-51	115-199
	13		W0002	0055	22		33-16-51	ALL
	14	UNUSED						ALL
	15	UNUSED						001-099
	15		W0002	0130	22		32-46-11	115-199
	16	UNUSED						ALL
	17		W0002	0076	24		27-51-41	ALL
	18		W0002	0077	24		27-51-41	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0002	0133	22		32-61-12	ALL
	22		W0002	0134	22		32-61-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 27

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40836J		P003-01/ /		RCPT (continued)				ALL
	23	UNUSED						ALL
	24		W0002	0001	22		27-51-21	ALL
	25	UNUSED						ALL
	26		W0002	0116	24		34-46-11	ALL
	27		W0002	0117	24		34-46-11	ALL
	28	UNUSED						ALL
	29		W0002	0027	22		27-51-21	ALL
	30		W0002	0112	24		34-46-11	ALL
	31	UNUSED						ALL
	32		W0002	0114	24		34-46-11	ALL
	33	UNUSED						001-099
	33		W0002	0115	24		SPARE	115-199
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50		W0002	0135	22		32-61-21	ALL
	51		W0002	0136	22		32-61-21	ALL
	52		W0002	0137	22		32-61-21	ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55		W0002	0062	22		33-16-51	ALL
D40836P		P3-1/ /		PLUG				ALL
	1		W0003	0122	22		27-51-21	ALL
	2		W0003	0123	22		27-51-21	ALL
	3		W0003	0124	22		27-51-21	ALL
	4		W0003	0125	22		27-51-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 28

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40836P		P3-1/ /		PLUG (continued)				ALL
	5		W0003	0126	22		27-51-21	001-099
	5		W0003	0126	22		SPARE	115-199
	6		W0003	0182	22		31-51-31	ALL
	7		W0003	0303	24		26-17-11	ALL
	8		W0003	0383	22		33-16-51	ALL
	9		W0003	0384	22		33-16-51	ALL
	10		W0003	0287	22		27-51-21	001-099
	10		W0003	0287	22		SPARE	115-199
	11	UNUSED						001-099
	11		W0003	0347	22		33-16-51	115-199
	12	UNUSED						001-099
	12		W0003	0346	22		33-16-51	115-199
	13		W0003	0370	22		33-16-51	ALL
	14	UNUSED						ALL
	15	UNUSED						001-099
	15		W0003	0482	22		32-46-11	115-199
	16	UNUSED						ALL
	17		W0003	0097	24		27-51-41	ALL
	18		W0003	0120	24		27-51-41	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0003	0045	22		32-61-12	ALL
	22		W0003	0046	22		32-61-12	ALL
	23	UNUSED						ALL
	24		W0003	0205	20		27-51-21	ALL
	25	UNUSED						ALL
	26		W0003	0199	20		34-46-11	ALL
	27		W0003	0200	20		34-46-11	ALL
	28	UNUSED						ALL
	29		W0003	0121	22		27-51-21	ALL
	30		W0003	0073	24		34-46-11	ALL
	31	UNUSED						ALL
	32		W0003	0074	24		34-46-11	ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 29

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40836P		P3-1/ /		PLUG (continued)				ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50		W0003	0220	22		32-61-21	ALL
	51		W0003	0221	22		32-61-21	ALL
	52		W0003	0222	22		32-61-21	ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55		W0003	0226	22		33-16-51	ALL
D40838J		P011-00/ /		RCPT-				ALL
	1		W0128	0901	12		29-21-31	001-099
	1		W0134	0401	12		29-21-31	115-199
	2	UNUSED						001-002, 115-199
	2		W0128	0150	22		32-61-11	003-099
	3		W0128	0723	22		28-21-11	001-099
	3		W0134	0023	22		28-21-11	115-199
	4		W0128	0412	16		75-31-11	001-099
	4		W0134	0412	16		75-31-11	115-199
	5		W0128	0865	24		21-58-12	001-099
	5		W0134	0315	24		21-58-12	115-199
	6		W0128	0708	12		28-25-11	001-099
	6		W0134	0008	12		28-25-11	115-199
	7		W0128	0909	22		80-11-11	001-099
	7		W0134	0409	22		80-11-11	115-199
	8		W0128	0908	16		49-61-11	001-099
	8		W0134	0408	16		49-61-11	115-199
	9		W0128	0405	22		30-21-11	001-099
	9		W0134	0405	22		30-21-11	115-199
	10		W0128	0751	18		23-31-11	001-099
	10		W0134	0101	18		23-31-11	115-199
	11		W0128	0147	22		24-33-12	001-099
	11	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 30

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40838J		P011-00/ /		RCPT- (continued)				ALL
	12		W0128	0712	22		23-42-11	001-099
	12		W0134	0012	22		23-42-11	115-199
	13		W0124	0025	24		78-36-11	001-099
	13		W0132	0057	24		78-36-11	115-199
	14		W0128	0915	22		28-22-21	001-099
	14		W0134	0415	22		28-22-21	115-199
	15		W0128	0148	22		24-33-12	001-099
I	15	UNUSED						115-199
	16		W0128	0918	22		28-25-21	001-099
	16		W0134	0418	20		28-25-21	115-199
	17		W0128	0920	22		21-58-12	001-099
	17		W0134	0420	22		21-58-12	115-199
	18		W0128	0818	22		28-22-21	001-099
	18		W0134	0218	22		28-22-21	115-199
	19		W0128	0143	24		24-33-12	001-099
I	19	UNUSED						115-199
	20	UNUSED						001-099
	20		W0134	0050	22		21-51-13	115-199
	21	UNUSED						001-099
	21		W0132	0051	20		21-51-23	115-199
	22		W0128	0145	22		24-33-12	001-099
I	22	UNUSED						115-199
	23	UNUSED						ALL
	24		W0128	0142	22		24-33-12	001-099
I	24	UNUSED						115-199
	25	UNUSED						001-099
	25		W0134	0045	22		32-44-11	115-199
	26	UNUSED						001-099
	26		W0132	0053	22		27-51-31	115-199
	27		W0128	0146	22		24-33-12	001-099
I	27	UNUSED						115-199
	28		W0128	0910	22		29-11-11	001-099
	28		W0134	0410	22		29-11-11	115-199
	29		W0128	0144	22		24-33-12	001-099
I	29	UNUSED						115-199
	30		W0128	0716	24		28-25-11	001-099
	30		W0134	0016	22		28-25-11	115-199
	31		W0128	0726	22		32-61-11	001-099
	31		W0134	0026	22		32-61-11	115-199
	32		W0128	0710	24		28-25-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 31

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40838J		P011-00/ /		RCPT- (continued)				ALL
	32		W0134	0010	22		28-25-11	115-199
D40838P		P011-00/ /		PLUG-				ALL
	1		W2358	0401	12		29-21-31	ALL
	2	UNUSED						001-002
	2		W2358	0067	22		32-61-11	003-099
	2		W2358	0020	22		SPARE	115-199
	3		W2358	0002	22		28-21-11	ALL
	4		W2358	0033	16		75-31-11	ALL
	5		W2358	0027	24		21-58-12	ALL
	6		W2358	0005	12		28-25-11	ALL
	7		W2358	0531	20		80-11-11	ALL
	8		W2358	0207	16		49-61-11	ALL
	9		W2358	0134	22		30-21-11	ALL
	10		W2358	0001	18		23-31-11	ALL
	11		W2358	0701	24		24-33-12	001-099
I	11	UNUSED						115-199
	12		W2358	0012	22		23-42-11	ALL
	13		W2358	0035	24		78-36-11	ALL
	14		W2358	0508	22		28-22-21	ALL
I	15		W2358	0715	22		24-33-12	001-099
I	15	UNUSED						115-199
	16		W2358	0532	22		28-25-21	ALL
	17		W2358	0016	22		21-58-12	ALL
	18		W2358	0031	22		28-22-21	ALL
I	19		W2358	0700	22		24-33-12	001-099
I	19	UNUSED						115-199
	20	UNUSED						001-099
	20		W2358	0045	20		21-51-13	115-199
	21	UNUSED						001-099
	21		W2358	0048	20		21-51-23	115-199
I	22		W2358	0702	22		24-33-12	001-099
I	22	UNUSED						115-199
	23	UNUSED						001-099
	23		W2358	0206	20		SPARE	115-199
I	24		W2358	0703	22		24-33-12	001-099
I	24	UNUSED						115-199
	25	UNUSED						001-099
	25		W2358	0325	22		32-44-11	115-199
	26	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 32

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40838P		P011-00/ /		PLUG- (continued)				ALL
I	26		W2358	0047	22		27-51-31	115-199
I	27		W2358	0710	22		24-33-12	001-099
	27	UNUSED						115-199
	28		W2358	0528	22		29-11-11	ALL
I	29		W2358	0704	22		24-33-12	001-099
I	29	UNUSED						115-199
	30		W2358	0006	24		28-25-11	001-099
	30		W2358	0006	22		28-25-11	115-199
	31		W2358	0601	22		32-61-11	ALL
	32		W2358	0015	24		28-25-11	001-099
	32		W2358	0015	22		28-25-11	115-199
D40844J		E3-3/ /		PLUG				001-099
	1	UNUSED						001-099
	2		W1330	3017R	24		21-61-31	001-099
	3		W1330	3017B	24		21-61-31	001-099
	4		W1330	3017Y	24		21-61-31	001-099
	5		W1330	0050	24		21-61-31	001-099
	6		W1330	0052	24		21-61-31	001-099
	7		W1330	0053	24		21-61-31	001-099
	8		W1330	0054	24		21-61-31	001-099
	9		W1330	0051	24		21-61-31	001-099
	10		W1330	3009B	24		21-61-31	001-099
	11		W1330	3009R	24		21-61-31	001-099
	12		W1330	3009Y	24		21-61-31	001-099
	13		W1330	2011R	24		21-61-31	001-099
	14		W1330	2011B	24		21-61-31	001-099
	15		W1330	2012B	24		21-61-31	001-099
	16		W1330	2012R	24		21-61-31	001-099
	17		W1330	2031B	24		21-51-12	001-099
	18		W1330	2031R	24		21-51-12	001-099
	19	UNUSED						001-099
	20	UNUSED						001-099
	21	UNUSED						001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
D40844P		E003-03/ /		PLUG				001-099
	1	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 33

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40844P		E003-03/ /		PLUG (continued)				001-099
	2		W4106	3017R	24		21-61-31	001-099
	3		W4106	3017B	24		21-61-31	001-099
	4		W4106	3017Y	24		21-61-31	001-099
	5		W4106	0210	24		21-61-31	001-099
	6		W4106	0202	24		21-61-31	001-099
	7		W4106	0203	24		21-61-31	001-099
	8		W4106	0204	24		21-61-31	001-099
	9		W4106	0201	24		21-61-31	001-099
	10		W4106	3009B	24		21-61-31	001-099
	11		W4106	3009R	24		21-61-31	001-099
	12		W4106	3009Y	24		21-61-31	001-099
	13		W4106	2033R	24		21-61-31	001-099
	14		W4106	2033B	24		21-61-31	001-099
	15		W4106	2034B	24		21-61-31	001-099
	16		W4106	2034R	24		21-61-31	001-099
	17		W4106	2031B	24		21-51-12	001-099
	18		W4106	2031R	24		21-51-12	001-099
	19	UNUSED						001-099
	20	UNUSED						001-099
	21	UNUSED						001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
D40846J		E3-3/ /		PLUG				001-099
	1		W1330	2013R	24		21-61-51	001-099
	2		W1330	2013B	24		21-61-51	001-099
	3		W1330	0056	24		21-61-51	001-099
	4		W1330	2014R	24		21-61-51	001-099
	5		W1330	2014B	24		21-61-51	001-099
	6		W1330	2015R	24		21-61-51	001-099
	7		W1330	2015B	24		21-61-51	001-099
	8		W1330	2016R	24		21-61-51	001-099
	9		W1330	2016B	24		21-61-51	001-099
	10		W1330	2017R	24		21-61-51	001-099
	11		W1330	2017B	24		21-61-51	001-099
	12		W1330	2018R	24		21-61-51	001-099
	13		W1330	2018B	24		21-61-51	001-099
	14	UNUSED						001-099
	15	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 34

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40846J		E3-3/ /		PLUG (continued)				001-099
	16		W1330	0057	24		21-61-51	001-099
	17	UNUSED						001-099
	18	UNUSED						001-099
	19	UNUSED						001-099
	20	UNUSED						001-099
	21		W1330	2010R	24		21-61-21	001-099
	22		W1330	2010B	24		21-61-21	001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
D40846P		E003-03/ /		PLUG				001-099
	1		W4006	2050R	24		21-61-51	001-099
	2		W4006	2050B	24		21-61-51	001-099
	3		W4006	0259	24		21-61-51	001-099
	4		W4006	2043R	24		21-61-51	001-099
	5		W4006	2043B	24		21-61-51	001-099
	6		W4006	2044R	24		21-61-51	001-099
	7		W4006	2044B	24		21-61-51	001-099
	8		W4006	2045R	24		21-61-51	001-099
	9		W4006	2045B	24		21-61-51	001-099
	10		W4006	2046R	24		21-61-51	001-099
	11		W4006	2046B	24		21-61-51	001-099
	12		W4006	2047R	24		21-61-51	001-099
	13		W4006	2047B	24		21-61-51	001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
	16		W4006	0239	24		21-61-51	001-099
	17		W4006	0053	22		SPARE	001-099
	18		W4006	0135	24		SPARE	001-099
	19	UNUSED						001-099
	20		W4006	0138	22		SPARE	001-099
	21		W4006	2052R	24		21-61-21	001-099
	22		W4006	2052B	24		21-61-21	001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
D40850J		P007-00/ /		RECP				ALL
	1		W0010	0011	20		33-13-41	ALL
	2		W0010	0012	20		33-13-41	ALL
	3		W0010	2501R	22		33-11-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 35

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40850J		P007-00/ /		RECP (continued)				ALL
	4		W0010	2003B	24		33-11-11	ALL
	5		W0010	2003R	24		33-11-11	ALL
	6		W0010	2004B	24		33-11-11	ALL
	7		W0010	2004R	24		33-11-11	ALL
	8		W0010	2501Z			33-11-11	ALL
	9		W0010	2501B	22		33-11-11	ALL
	10		W0010	0009	20		33-11-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0010	3001R	22		33-13-11	ALL
	14		W0010	3001B	22		33-13-11	ALL
	15		W0010	3001Y	22		33-13-11	ALL
	16		W0010	B-WT			33-11-21	ALL
	17		W0010	B-BK			33-11-21	ALL
	18		W0010	0003	24		33-14-11	ALL
	19		W0010	0004	22		33-14-11	ALL
	20	UNUSED						ALL
	21		W0010	0001	22		33-14-21	ALL
	22		W0010	0022	22		33-16-51	ALL
	23		W0010	0023	22		33-16-21	ALL
	24		W0010	0024	22		33-16-51	ALL
	25		W0010	0025	22		33-16-11	ALL
	26		W0010	0026	22		31-51-21	ALL
	27		W0010	0027	22		31-51-21	ALL
	28		W0010	0028	22		31-51-21	ALL
	29		W0010	0029	22		31-41-14	ALL
	30	UNUSED						001-099
	30		W0010	2005B	24		23-51-11	115-199
	31	UNUSED						001-099
	31		W0010	2005R	24		23-51-11	115-199
	32	UNUSED						ALL
	33		W0010	A-RD			34-22-15	ALL
	34		W0010	A-BL			34-22-15	ALL
	35		W0010	A-OR			34-22-15	ALL
	36		W0010	A-YL			34-22-15	ALL
	37		W0010	A-BK			34-22-15	ALL
	38		W0010	3002B	22		31-25-11	ALL
	39		W0010	3002R	22		31-25-11	ALL
	40		W0010	3002Y	22		31-25-11	ALL
	41		W0010	0007	22		33-11-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 36

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40850J		P007-00/ /		RECP (continued)				ALL
	42		W0010	0008	22		33-11-11	ALL
	43		W0010	2002R	24		33-11-11	ALL
	44		W0010	2002B	24		33-11-11	ALL
	45		W0010	0030	22		SPARE	ALL
	46		W0010	0031	22		SPARE	ALL
	47	UNUSED						ALL
	48		W0010	0032	22		31-41-14	ALL
	49		W0010	0033	22		31-41-14	ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55		W0010	0002	22		33-14-21	ALL
D40850P		P7/ /L016		PLUG				ALL
	1		W0001	0205	20		33-13-41	ALL
	2		W0001	0206	20		33-13-41	ALL
	3		W0001	2515R	24		33-11-11	ALL
	4		W0001	2009B	24		33-11-11	ALL
	5		W0001	2009R	24		33-11-11	ALL
	6		W0001	2010B	24		33-11-11	ALL
	7		W0001	2010R	24		33-11-11	ALL
	8		W0001	2515Z			33-11-11	ALL
	9		W0001	2515B	24		33-11-11	ALL
	10		W0001	0252	20		33-11-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0001	3007R	24		33-13-11	ALL
	14		W0001	3007B	24		33-13-11	ALL
	15		W0001	3007Y	24		33-13-11	ALL
	16		W0001	0310	20		33-11-21	ALL
	17		W0001	0311	20		33-11-21	ALL
	18		W0001	0425	24		33-14-11	ALL
	19		W0001	0426	22		33-14-11	ALL
	20	UNUSED						ALL
	21		W0001	0174	22		33-14-21	ALL
	22		W0001	0322	22		33-16-51	ALL
	23		W0001	0462	22		33-16-21	ALL
	24		W0001	0324	22		33-16-51	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 37

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40850P		P7/ /L016		PLUG (continued)				ALL
	25		W0001	0461	22		33-16-11	ALL
	26		W0001	0203	22		31-51-21	ALL
	27		W0001	0204	22		31-51-21	ALL
	28		W0001	0201	20		31-51-21	ALL
	29		W0001	0442	22		31-41-14	ALL
	30	UNUSED						001-099
	30		W0001	2020B	24		23-51-11	115-199
	31	UNUSED						001-099
	31		W0001	2020R	24		23-51-11	115-199
	32	UNUSED						ALL
	33		W0001	2507R	24		34-22-15	ALL
	34		W0001	2507B	24		34-22-15	ALL
	35		W0001	0188	24		34-22-15	ALL
	36		W0001	0189	24		34-22-15	ALL
	37		W0001	0190	24		34-22-15	ALL
	38		W0001	3013B	24		31-25-11	ALL
	39		W0001	3013R	24		31-25-11	ALL
	40		W0001	3013Y	24		31-25-11	ALL
	41		W0001	0335	24		33-11-11	ALL
	42		W0001	0337	24		33-11-11	ALL
	43		W0001	2008R	24		33-11-11	ALL
	44		W0001	2008B	24		33-11-11	ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48		W0001	0448	22		31-41-14	ALL
	49		W0001	0449	20		31-41-14	ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55		W0001	0292	20		33-14-21	ALL
	DED		W0001	2507Z			34-22-15	ALL
D40854J		P007-00/ /		RCPT				ALL
	1		W0012	0011	20		33-13-41	ALL
	2		W0012	0012	20		33-13-41	ALL
	3		W0012	2501R	22		33-11-11	ALL
	4		W0012	2003B	24		33-11-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 38

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40854J		P007-00/ /		RCPT (continued)				ALL
	5		W0012	2003R	24		33-11-11	ALL
	6		W0012	2004B	24		33-11-11	ALL
	7		W0012	2004R	24		33-11-11	ALL
	8		W0012	2501Z			33-11-11	ALL
	9		W0012	2501B	22		33-11-11	ALL
	10		W0012	0009	20		33-11-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0012	3001R	22		33-13-21	ALL
	14		W0012	3001B	22		33-13-21	ALL
	15		W0012	3001Y	22		33-13-21	ALL
	16		W0012	B-WT			33-11-21	ALL
	17		W0012	B-BK			33-11-21	ALL
	18		W0012	0003	24		33-14-11	ALL
	19		W0012	0004	22		33-14-11	ALL
	20	UNUSED						ALL
	21		W0012	0001	22		33-14-21	ALL
	22		W0012	0022	22		33-16-61	ALL
	23		W0012	0023	22		33-16-31	ALL
	24		W0012	0024	22		33-16-51	ALL
	25		W0012	0025	22		33-16-41	ALL
	26		W0012	0026	22		31-51-21	ALL
	27		W0012	0027	22		31-51-21	ALL
	28		W0012	0028	22		31-51-21	ALL
	29		W0012	0029	22		31-41-14	ALL
	30	UNUSED						001-099
	30		W0012	2005B	24		23-51-21	115-199
	31	UNUSED						001-099
	31		W0012	2005R	24		23-51-21	115-199
	32	UNUSED						ALL
	33		W0012	A-RD			34-22-25	ALL
	34		W0012	A-BL			34-22-25	ALL
	35		W0012	A-OR			34-22-25	ALL
	36		W0012	A-YL			34-22-25	ALL
	37		W0012	A-BK			34-22-25	ALL
	38		W0012	3002B	22		31-25-11	ALL
	39		W0012	3002R	22		31-25-11	ALL
	40		W0012	3002Y	22		31-25-11	ALL
	41		W0012	0007	22		33-11-11	ALL
	42		W0012	0008	22		33-11-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 39

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40854J		P007-00/ /		RCPT (continued)				ALL
	43		W0012	2002R	24		33-11-11	ALL
	44		W0012	2002B	24		33-11-11	ALL
	45		W0012	0030	22		SPARE	ALL
	46		W0012	0031	22		SPARE	ALL
	47	UNUSED						ALL
	48		W0012	0032	22		31-41-14	ALL
	49		W0012	0033	22		31-41-14	ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55		W0012	0002	22		33-14-21	ALL
D40854P		P7/ /		PLUG				ALL
	1		W0003	0135	20		33-13-41	ALL
	2		W0003	0136	20		33-13-41	ALL
	3		W0003	2515R	24		33-11-11	ALL
	4		W0003	2009B	24		33-11-11	ALL
	5		W0003	2009R	24		33-11-11	ALL
	6		W0003	2010B	24		33-11-11	ALL
	7		W0003	2010R	24		33-11-11	ALL
	8		W0003	2515Z			33-11-11	ALL
	9		W0003	2515B	24		33-11-11	ALL
	10		W0003	0252	20		33-11-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W0003	3007R	24		33-13-21	001-099
	13		W0003	3006R	24		33-13-21	115-199
	14		W0003	3007B	24		33-13-21	001-099
	14		W0003	3006B	24		33-13-21	115-199
	15		W0003	3007Y	24		33-13-21	001-099
	15		W0003	3006Y	24		33-13-21	115-199
	16		W0003	0316	20		33-11-21	ALL
	17		W0003	0313	20		33-11-21	ALL
	18		W0003	0108	24		33-14-11	ALL
	19		W0003	0109	22		33-14-11	ALL
	20	UNUSED						ALL
	21		W0003	0257	22		33-14-21	ALL
	22		W0003	0318	22		33-16-61	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 40

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40854P		P7/ /		PLUG (continued)				ALL
	23		W0003	0462	22		33-16-31	ALL
	24		W0003	0326	22		33-16-51	ALL
	25		W0003	0461	22		33-16-41	ALL
	26		W0003	0215	22		31-51-21	ALL
	27		W0003	0214	22		31-51-21	ALL
	28		W0003	0216	20		31-51-21	ALL
	29		W0003	0442	22		31-41-14	ALL
	30	UNUSED						001-099
	30		W0003	2020B	24		23-51-21	115-199
	31	UNUSED						001-099
	31		W0003	2020R	24		23-51-21	115-199
	32	UNUSED						ALL
	33		W0003	2501R	24		34-22-25	ALL
	34		W0003	2501B	24		34-22-25	ALL
	35		W0003	0060	24		34-22-25	ALL
	36		W0003	0061	24		34-22-25	ALL
	37		W0003	0062	24		34-22-25	ALL
	38		W0003	3013B	24		31-25-11	ALL
	39		W0003	3013R	24		31-25-11	ALL
	40		W0003	3013Y	24		31-25-11	ALL
	41		W0003	0335	24		33-11-11	ALL
	42		W0003	0337	24		33-11-11	ALL
	43		W0003	2008R	24		33-11-11	ALL
	44		W0003	2008B	24		33-11-11	ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48		W0003	0448	22		31-41-14	ALL
	49		W0003	0449	20		31-41-14	ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55		W0003	0292	20		33-14-21	ALL
	DED		W0003	2501Z			34-22-25	ALL
D40860J		P36/ /		RCPT				115-199
	1		W1260	5691	24		30-31-11	115-199
	2		W1260	0053	24		30-31-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 41

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40860J		P36/ /		RCPT (continued)				115-199
	3	UNUSED						115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
D40860P		P036-00/ /		PLUG				115-199
	1		W2054	0001	20		30-31-11	115-199
	2		W2054	0002	20		30-31-11	115-199
	3	UNUSED						115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
D40862J		P37/ /		PLUG				115-199
	1		W1270	5733	24		30-31-12	115-199
	2		W1270	5735	20		30-31-12	115-199
	3	UNUSED						115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199

HOOKUP LIST
D280N032

91-21-51
Section D40800
Page 42
Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40862P		P37/ /		PLUG				115-199
	1		W2142	0001	20		30-31-12	115-199
	2		W2142	0002	20		30-31-12	115-199
	3	UNUSED						115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
D40864J		P37/ /		PLUG				115-199
	1		W1270	5734	24		30-31-12	115-199
	2		W1270	5760	24		30-31-12	115-199
	3	UNUSED						115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
D40864P		P37/ /		PLUG				115-199
	1		W2154	0001	20		30-31-12	115-199
	2		W2154	0002	20		30-31-12	115-199
	3	UNUSED						115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 43

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40864P		P37/ /		PLUG (continued)				115-199
	12	UNUSED						115-199
D40866J		P6/ /		RCPT-				ALL
	1		W0062	0101	14		24-53-11	ALL
	2		W0062	0102	16		28-22-11	ALL
	3		W0062	0103	20		24-53-11	ALL
	4		W0062	0104	16		28-22-11	ALL
	5		W0062	0105	24		30-31-11	001-099
	5		W0062	0105	20		30-31-11	115-199
	6		W0062	0106	16		28-22-11	ALL
	7		W0062	0107	24		30-31-11	001-099
	7		W0062	0107	20		30-31-11	115-199
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	18	W0062	0112	18		28-22-11	ALL
	13	18	W0062	0113	18		28-22-11	ALL
	14	18	W0062	0114	18		28-22-11	ALL
	15	18	W0062	0115	18		28-22-11	ALL
	16	18	W0062	0116	18		28-22-11	ALL
	17	18	W0062	0117	18		28-22-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						001-099
	20		W0062	0038	20		29-11-22	115-199
	21		W0062	0121	22		30-32-11	ALL
	22	UNUSED						ALL
	23		W0062	0037	20		29-11-31	ALL
	24		W0062	0309	22		21-58-15	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W0062	0310	22		21-58-15	ALL
	29	UNUSED						ALL
	30		W0062	0311	22		21-58-15	ALL
	31	UNUSED						ALL
	32		W0062	0038	20		29-11-22	001-099
	32	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 44

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40866P		P006-00/ /		PLUG-				ALL
	1		W2256	0001	14		24-53-11	ALL
	2		W2256	3002B	16		28-22-11	ALL
	3		W2256	0003	20		24-53-11	ALL
	4		W2256	3002R	16		28-22-11	ALL
	5		W2256	0005	24		30-31-11	001-099
	5		W2256	0005	20		30-31-11	115-199
	6		W2256	3002Y	16		28-22-11	ALL
	7		W2256	0007	24		30-31-11	001-099
	7		W2256	0007	20		30-31-11	115-199
	8	UNUSED						001-099
	8		W2256	0613	14		SPARE	115-199
	9	UNUSED						001-099
	9		W2256	0601	20		SPARE	115-199
	10	UNUSED						ALL
	11	UNUSED						001-099
	11		W2256	0603	20		SPARE	115-199
	12	18	W2256	3012B	18		28-22-11	ALL
	13	18	W2256	3012R	18		28-22-11	ALL
	14	18	W2256	3012Y	18		28-22-11	ALL
	15	18	W2256	3015B	18		28-22-11	ALL
	16	18	W2256	3015R	18		28-22-11	ALL
	17	18	W2256	3015Y	18		28-22-11	ALL
	18	UNUSED						001-099
	18		W2256	0006	20		SPARE	115-199
	19	UNUSED						001-099
	19		W2256	0008	20		SPARE	115-199
	20	UNUSED						001-099
	20		W2256	0009	20		29-11-22	115-199
	21		W2256	0021	22		30-32-11	ALL
	22	UNUSED						001-099
	22		W2256	0011	20		SPARE	115-199
	23		W2256	0012	20		29-11-31	ALL
	24		W2256	0040	22		21-58-15	ALL
	25	UNUSED						001-099
	25		W2256	0612	20		SPARE	115-199
	26	UNUSED						ALL
	27	UNUSED						001-099
	27		W2256	0026	20		SPARE	115-199
	28		W2256	0041	22		21-58-15	ALL
	29		W2256	0030	20		SPARE	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 45

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40866P		P006-00/ /		PLUG- (continued)				ALL
	30		W2256	0042	22		21-58-15	ALL
	31		W2256	0032	20		SPARE	ALL
	32		W2256	0009	20		29-11-22	001-099
	32	UNUSED						115-199
D40868J		P006-00/ /		RCPT-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0064	0105	24		30-31-12	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W0064	0111	24		30-31-12	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W0064	0121	22		30-32-11	ALL
	22		W0074	0122	20		24-31-11	ALL
	23		W0074	0123	20		24-31-11	ALL
	24		W0074	0124	20		24-31-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W0064	0303	16		21-58-13	001-099
	27	UNUSED						115-199
	28		W0064	0128	18		38-15-11	ALL
	29		W0064	0129	18		38-15-11	ALL
	30		W0064	0130	18		38-15-11	ALL
	31		W0064	0102	16		28-22-11	ALL
	32		W0064	0104	16		28-22-11	ALL
	33		W0064	0106	16		28-22-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 46

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40868J		P006-00/ /		RCPT- (continued)				ALL
	34		W0064	0116	18		28-22-11	ALL
	35		W0064	0117	18		28-22-11	ALL
	36		W0064	0115	18		28-22-11	ALL
	37		W0064	0113	18		28-22-11	ALL
	38		W0064	0114	18		28-22-11	ALL
	39		W0064	0112	18		28-22-11	ALL
	40		W0064	0302	16		21-58-13	001-099
	40	UNUSED						115-199
	41		W0064	0301	16		21-58-13	001-099
	41	UNUSED						115-199
	42	UNUSED						ALL
	43		W0064	0087	18		24-51-25	ALL
D40868P D40868P		P006-00/ / P6/ /		PLUG- PLUG-				001-099 115-199
	1		W2258	0001	16		SPARE	001-099
	1		W2258	0001	20		SPARE	115-199
	2		W2258	0601	20		SPARE	ALL
	3	UNUSED						001-099
	3		W2258	0003	20		SPARE	115-199
	4	UNUSED						001-099
	4		W2258	0616	20		SPARE	115-199
	5		W2258	0005	24		30-31-12	001-099
	5		W2258	0005	20		30-31-12	115-199
	6	UNUSED						001-099
	6		W2258	0617	20		SPARE	115-199
	7	UNUSED						001-099
	7		W2258	0007	20		SPARE	115-199
	8	UNUSED						001-099
	8		W2258	0618	20		SPARE	115-199
	9	UNUSED						001-099
	9		W2258	0009	20		SPARE	115-199
	10	UNUSED						001-099
	10		W2258	0619	20		SPARE	115-199
	11		W2258	0011	24		30-31-12	001-099
	11		W2258	0011	20		30-31-12	115-199
	12	UNUSED						ALL
	13	UNUSED						001-099
	13		W2258	0607	20		SPARE	115-199
	14	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 47

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40868P		P006-00/ /		PLUG- (continued)				001-099
D40868P		P6/ /		PLUG- (continued)				115-199
	15		W2258	0609	18		SPARE	ALL
	16	UNUSED						001-099
	16		W2258	0611	20		SPARE	115-199
	17	UNUSED						001-099
	17		W2258	0612	20		SPARE	115-199
	18	UNUSED						001-099
	18		W2258	0613	20		SPARE	115-199
	19	UNUSED						001-099
	19		W2258	0614	20		SPARE	115-199
	20	UNUSED						001-099
	20		W2258	0615	20		SPARE	115-199
	21		W2258	0021	22		30-32-11	ALL
	22		W2258	0022	20		24-31-11	ALL
	23		W2258	0023	20		24-31-11	ALL
	24		W2258	0024	20		24-31-11	ALL
	25	UNUSED						001-099
	25		W2258	0025	20		SPARE	115-199
	26	UNUSED						ALL
	27		W2258	0606	16		21-58-13	001-099
	27		W2258	0606	16		SPARE	115-199
	28		W2258	0028	18		38-15-11	ALL
	29		W2258	0029	18		38-15-11	ALL
	30		W2258	0030	18		38-15-11	ALL
	31		W2258	3002B	16		28-22-11	ALL
	32		W2258	3002R	16		28-22-11	ALL
	33		W2258	3002Y	16		28-22-11	ALL
	34		W2258	3015R	18		28-22-11	ALL
	35		W2258	3015Y	18		28-22-11	ALL
	36		W2258	3015B	18		28-22-11	ALL
	37		W2258	3012R	18		28-22-11	ALL
	38		W2258	3012Y	18		28-22-11	ALL
	39		W2258	3012B	18		28-22-11	ALL
	40		W2258	0605	16		21-58-13	001-099
	40		W2258	0605	16		SPARE	115-199
	41		W2258	0604	16		21-58-13	001-099
	41		W2258	0604	16		SPARE	115-199
	42	UNUSED						001-099
	42		W2258	0603	16		SPARE	115-199
	43		W2258	0602	18		24-51-25	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 48

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40870J		P6/ /		RCPT-				ALL
	1	UNUSED						001-002, 115-199
	1		W0066	0014	20		24-31-11	003-099
	2	UNUSED						001-002, 115-199
	2		W0060	0101	22		76-11-12	003-099
	3	UNUSED						001-002, 115-199
	3		W0060	0120	20		28-22-21	003-099
	4	18	W0060	0025	18		28-21-11	001-099
	4	UNUSED						115-199
	5	UNUSED						001-099
	5		W0060	0213	20		26-22-21	115-199
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						001-002, 115-199
	9		W0060	0031	20		29-11-31	003-099
	10	UNUSED						001-002, 115-199
	10		W0060	0302	22		32-44-11	003-099
	11	16	W0060	0109	16		28-21-11	ALL
	12	UNUSED						001-002, 115-199
	12	16	W0060	0116	16		28-21-11	003-099
	13	16	W0060	0111	16		28-21-11	ALL
	14	UNUSED						001-002, 115-199
	14		W0060	0026	22		24-25-11	003-099
	15		W0060	0115	22		21-58-11	ALL
	16	16	W0060	0116	16		28-21-11	001-002, 115-199
	17		W0060	0302	22		32-44-11	001-002, 115-199
	18	UNUSED						001-002, 115-199
	19		W0060	0031	20		29-11-31	001-002, 115-199
	20		W0060	0120	20		28-22-21	001-002, 115-199
	21		W0060	0101	22		76-11-12	001-002, 115-199
	22	UNUSED						001-002, 115-199
	23		W0060	0026	22		24-25-11	001-002, 115-199
	24	UNUSED						001-002, 115-199
D40870P		P006-00/ /		PLUG-				ALL
	1	UNUSED						001-002, 115-199
	1		W2260	0003	20		24-31-11	003-099
	2	UNUSED						001-002, 115-199
	2		W2260	0021	22		76-11-12	003-099
	3	UNUSED						001-002, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 49

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40870P		P006-00/ /		PLUG- (continued)				ALL
	3		W2260	0020	20		28-22-21	003-099
	4	18	W2260	0001	18		28-21-11	001-099
	4	UNUSED						115-199
	5		W2260	0055	20		SPARE	001-099
	5		W2260	0055	20		26-22-21	115-199
	6	UNUSED						001-099
	6		W2260	0614	20		SPARE	115-199
	7	UNUSED						001-099
	7		W2260	0615	20		SPARE	115-199
	8	UNUSED						001-099
	8		W2260	0603	22		SPARE	115-199
	9	UNUSED						001-002
	9		W2260	0610	20		29-11-31	003-099
	9		W2260	0604	22		SPARE	115-199
	10	UNUSED						001-002
	10		W2260	0608	22		32-44-11	003-099
	10		W2260	0605	22		SPARE	115-199
	11	16	W2260	0011	16		28-21-11	ALL
	12	UNUSED						001-002
	12	16	W2260	0016	16		28-21-11	003-099
	12		W2260	0606	22		SPARE	115-199
	13	16	W2260	0013	16		28-21-11	ALL
	14	UNUSED						001-002
	14		W2260	0002	22		24-25-11	003-099
	14		W2260	0607	22		SPARE	115-199
	15		W2260	0015	22		21-58-11	ALL
	16	16	W2260	0016	16		28-21-11	001-002, 115-199
	17		W2260	0608	22		32-44-11	001-002, 115-199
	18	UNUSED						001-002
	18		W2260	0609	22		SPARE	115-199
	19		W2260	0610	20		29-11-31	001-002, 115-199
	20		W2260	0020	20		28-22-21	001-002, 115-199
	21		W2260	0021	22		76-11-12	001-002, 115-199
	22	UNUSED						001-002
	22		W2260	0611	20		SPARE	115-199
	23		W2260	0002	22		24-25-11	001-002, 115-199
	24	UNUSED						001-002, 115-199
D40874J		P36/ /		RCPT				ALL
	1		W1260	2006B	24		36-21-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 50

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40874J		P36/ /		RCPT (continued)				ALL
	2		W1260	2006R	24		36-21-11	ALL
	3		W1260	3001Y	22		21-31-31	ALL
	4		W1260	3001B	22		21-31-31	ALL
	5		W1260	3001R	22		21-31-31	ALL
	6		W1260	5585	24		21-58-13	ALL
	7		W1260	0151	24		29-33-11	ALL
	8		W1260	0023	20		21-61-51	ALL
	9		W1260	0962	24		21-58-21	ALL
	10		W1260	5540	24		21-58-11	ALL
	11		W1260	0213	22		33-16-11	ALL
	12		W1260	0003	24		21-33-12	ALL
	13		W1260	5666	22		27-23-11	001-099
	13		W1260	5665	22		27-23-11	115-199
	14		W1260	5668	22		27-23-11	ALL
	15		W1260	0040	24		24-51-71	ALL
	16		W1260	5897	24		24-51-71	ALL
	17		W1260	0112	24		21-51-12	ALL
	18	UNUSED						ALL
	19		W1260	0349	22		30-32-11	ALL
	20		W1260	0354	22		30-32-11	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W1260	5786	22		34-12-12	ALL
	25	UNUSED						ALL
	26		W1260	0497	22		29-11-22	001-099
	26		W1260	5816	22		29-11-22	115-199
	27	16	W1260	0495	16		29-11-22	ALL
	28		W1260	0167	24		29-33-11	ALL
	29		W1260	0708	20		36-11-11	ALL
	30	UNUSED						001-099
	30		W1260	0079	24		36-11-11	115-199
	31		W1260	0306	20		36-11-11	001-099
	31		W1260	0301	20		36-11-11	115-199
	32	UNUSED						ALL
	33		W1260	0124	24		36-11-12	ALL
	34		W1260	0210	24		21-58-11	001-099
	34		W1260	0209	24		21-58-11	115-199
	35		W1260	0293	24		21-58-11	ALL
	36		W1260	0054	24		30-31-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 51

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40874J		P36/ /		RCPT (continued)				ALL
	37		W1260	5698	24		30-31-11	ALL
	38		W1260	5688	24		30-31-11	ALL
	39	UNUSED						001-099
	39		W1260	0053	24		30-31-11	115-199
	40		W1260	0912	24		21-58-12	ALL
	41	UNUSED						ALL
	42		W1260	0913	24		21-58-12	ALL
	43	16	W1260	0953	16		21-58-13	ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	16	W1260	5911	16		29-11-31	ALL
	50		W1260	6312	20		24-11-11	ALL
	51	16	W1260	5910	16		29-11-31	ALL
	52		W1260	5930	22		33-16-11	ALL
	53		W1260	5932	22		33-16-11	ALL
	54		W1260	5934	22		33-16-11	ALL
	55		W1260	5935	22		33-16-11	ALL
	CAP	Y	W1260	0210	24		21-58-11	115-199
D40874P		P036-00/ /		PLUG				001-099
D40874P		P36/ /		PLUG				115-199
	1		W2066	2003B	24		36-21-11	ALL
	2		W2066	2003R	24		36-21-11	ALL
	3		W2066	3005Y	22		21-31-31	ALL
	4		W2066	3005B	22		21-31-31	ALL
	5		W2066	3005R	22		21-31-31	ALL
	6		W2066	0059	24		21-58-13	ALL
	7		W2066	0408	24		29-33-11	ALL
	8		W2066	0245	20		21-61-51	ALL
	9		W2066	0215	24		21-58-21	ALL
	10		W2066	0239	24		21-58-11	ALL
	11		W2066	0214	22		33-16-11	ALL
	12		W2066	0800	24		21-33-12	ALL
	13		W2066	0254	22		27-23-11	ALL
	14		W2066	0255	22		27-23-11	ALL
	15		W2066	0118	24		24-51-71	001-099
	15		W2066	0118	22		24-51-71	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 52

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40874P		P036-00/ /		PLUG (continued)				001-099
D40874P		P36/ /		PLUG (continued)				115-199
	16		W2066	0120	24		24-51-71	001-099
	16		W2066	0120	22		24-51-71	115-199
	17		W2066	0222	24		21-51-12	ALL
	18		W2066	0240	24		SPARE	ALL
	19		W2066	0434	22		30-32-11	ALL
	20		W2066	0435	22		30-32-11	ALL
	21	UNUSED						ALL
	22		W2066	0154	24		SPARE	001-099
	22	UNUSED						115-199
	23	UNUSED						ALL
	24		W2066	0043	22		34-12-12	ALL
	25		W2066	0439	20		SPARE	ALL
	26		W2066	0141	22		29-11-22	ALL
	27	16	W2066	0171	16		29-11-22	ALL
	28		W2066	0440	24		29-33-11	ALL
	29		W2066	0099	20		36-11-11	ALL
	30	UNUSED						001-099
	30		W2066	0038	24		36-11-11	115-199
	31		W2066	0036	20		36-11-11	ALL
	32		W2066	0441	20		SPARE	ALL
	33		W2066	0061	24		36-11-12	ALL
	34		W2066	0235	24		21-58-11	ALL
	35		W2066	0236	24		21-58-11	ALL
	36		W2066	0442	24		30-31-11	ALL
	37		W2066	0443	24		30-31-11	ALL
	38		W2066	0444	24		30-31-11	ALL
	39		W2066	0445	24		SPARE	001-099
	39		W2066	0445	24		30-31-11	115-199
	40		W2066	0274	24		21-58-12	ALL
	41		W2066	0505	20		SPARE	ALL
	42		W2066	0234	24		21-58-12	ALL
	43		W2066	0507	20		21-58-13	ALL
	44		W2066	0508	20		SPARE	ALL
	45		W2066	0509	20		SPARE	ALL
	46	UNUSED						ALL
	47		W2066	0511	20		SPARE	ALL
	48		W2066	0512	20		SPARE	ALL
	49	16	W2066	0407	16		29-11-31	ALL
	50		W2066	0382	20		24-11-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 53

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40874P		P036-00/ /		PLUG (continued)				001-099
D40874P		P36/ /		PLUG (continued)				115-199
	51	16	W2066	0409	16		29-11-31	ALL
	52		W2066	0516	22		33-16-11	ALL
	53		W2066	0517	22		33-16-11	ALL
	54		W2066	0518	22		33-16-11	ALL
	55		W2066	0519	22		33-16-11	ALL
D40881J		E002-02/ /		RCPT-				001-099
D40881J		E2-2/ /		RCPT-				115-199
	1		W1173	2519T	24		34-22-34	ALL
	2		W1173	2519W	24		34-22-34	ALL
	3		W1173	2519Z			34-22-34	ALL
	4		W1173	2520T	24		34-22-34	ALL
	5		W1173	2520W	24		34-22-34	ALL
	6		W1173	2520Z			34-22-34	ALL
	7		W1173	2521T	24		34-22-34	ALL
	8		W1173	2521W	24		34-22-34	ALL
	9		W1173	2521Z			34-22-34	ALL
	10		W1173	2522T	24		34-22-34	ALL
	11		W1173	2522W	24		34-22-34	ALL
	12		W1173	2522Z			34-22-34	ALL
	13		W1173	2523T	24		34-22-34	ALL
	14		W1173	2523W	24		34-22-34	ALL
	15		W1173	2523Z			34-22-34	ALL
	16		W1173	2524T	24		34-22-34	ALL
	17		W1173	2524W	24		34-22-34	ALL
	18		W1173	2524Z			34-22-34	ALL
	19		W1173	2525T	24		34-22-34	ALL
	20		W1173	2525W	24		34-22-34	ALL
	21		W1173	2525Z			34-22-34	ALL
	22		W1173	2526T	24		34-22-34	ALL
	23		W1173	2526W	24		34-22-34	ALL
	24		W1173	2526Z			34-22-34	ALL
	25		W1173	2527T	24		34-22-34	ALL
	26		W1173	2527W	24		34-22-34	ALL
	27		W1173	2527Z			34-22-34	ALL
	28		W1173	2528T	24		34-22-34	ALL
	29		W1173	2528W	24		34-22-34	ALL
	30		W1173	2528Z			34-22-34	ALL
	31		W1173	2529T	24		34-22-34	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 54

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40881J		E002-02/ /		RCPT- (continued)				001-099
D40881J		E2-2/ /		RCPT- (continued)				115-199
	32		W1173	2529W	24		34-22-34	ALL
	33		W1173	2529Z			34-22-34	ALL
	34		W1173	2530T	24		34-22-34	ALL
	35		W1173	2530W	24		34-22-34	ALL
	36		W1173	2530Z			34-22-34	ALL
	37		W1173	2531T	24		34-22-34	ALL
	38		W1173	2531W	24		34-22-34	ALL
	39		W1173	2531Z			34-22-34	ALL
	40		W1173	2532T	24		34-22-34	ALL
	41		W1173	2532W	24		34-22-34	ALL
	42		W1173	2532Z			34-22-34	ALL
	43		W1173	2533T	24		34-22-34	ALL
	44		W1173	2533W	24		34-22-34	ALL
	45		W1173	2533Z			34-22-34	ALL
	46		W1173	2534T	24		34-22-34	ALL
	47		W1173	2534W	24		34-22-34	ALL
	48		W1173	2534Z			34-22-34	ALL
	49		W1173	2535T	24		34-22-34	ALL
	50		W1173	2535W	24		34-22-34	ALL
	51		W1173	2535Z			34-22-34	ALL
	52		W1173	2536T	24		34-22-34	ALL
	53		W1173	2536W	24		34-22-34	ALL
	54		W1173	2536Z			34-22-34	ALL
	55	UNUSED						ALL
D40881P		E002-02/ /		PLUG				ALL
	1		W4443	2501T	24		34-22-34	ALL
	2		W4443	2501W	24		34-22-34	ALL
	3		W4443	2501Z			34-22-34	ALL
	4		W4443	2502T	24		34-22-34	ALL
	5		W4443	2502W	24		34-22-34	ALL
	6		W4443	2502Z			34-22-34	ALL
	7		W4443	2503T	24		34-22-34	ALL
	8		W4443	2503W	24		34-22-34	ALL
	9		W4443	2503Z			34-22-34	ALL
	10		W4443	2504T	24		34-22-34	ALL
	11		W4443	2504W	24		34-22-34	ALL
	12		W4443	2504Z			34-22-34	ALL
	13		W4443	2505T	24		34-22-34	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 55

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40881P		E002-02/ /		PLUG (continued)				ALL
	14		W4443	2505W	24		34-22-34	ALL
	15		W4443	2505Z			34-22-34	ALL
	16		W4443	2506T	24		34-22-34	ALL
	17		W4443	2506W	24		34-22-34	ALL
	18		W4443	2506Z			34-22-34	ALL
	19		W4443	2507T	24		34-22-34	ALL
	20		W4443	2507W	24		34-22-34	ALL
	21		W4443	2507Z			34-22-34	ALL
	22		W4443	2508T	24		34-22-34	ALL
	23		W4443	2508W	24		34-22-34	ALL
	24		W4443	2508Z			34-22-34	ALL
	25		W4443	2509T	24		34-22-34	ALL
	26		W4443	2509W	24		34-22-34	ALL
	27		W4443	2509Z			34-22-34	ALL
	28		W4443	2510T	24		34-22-34	ALL
	29		W4443	2510W	24		34-22-34	ALL
	30		W4443	2510Z			34-22-34	ALL
	31		W4443	2511T	24		34-22-34	ALL
	32		W4443	2511W	24		34-22-34	ALL
	33		W4443	2511Z			34-22-34	ALL
	34		W4443	2512T	24		34-22-34	ALL
	35		W4443	2512W	24		34-22-34	ALL
	36		W4443	2512Z			34-22-34	ALL
	37		W4443	2513T	24		34-22-34	ALL
	38		W4443	2513W	24		34-22-34	ALL
	39		W4443	2513Z			34-22-34	ALL
	40		W4443	2514T	24		34-22-34	ALL
	41		W4443	2514W	24		34-22-34	ALL
	42		W4443	2514Z			34-22-34	ALL
	43		W4443	2515T	24		34-22-34	ALL
	44		W4443	2515W	24		34-22-34	ALL
	45		W4443	2515Z			34-22-34	ALL
	46		W4443	2516T	24		34-22-34	ALL
	47		W4443	2516W	24		34-22-34	ALL
	48		W4443	2516Z			34-22-34	ALL
	49		W4443	2517T	24		34-22-34	ALL
	50		W4443	2517W	24		34-22-34	ALL
	51		W4443	2517Z			34-22-34	ALL
	52		W4443	2518T	24		34-22-34	ALL
	53		W4443	2518W	24		34-22-34	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 56

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40881P		E002-02/ /		PLUG (continued)				ALL
	54		W4443	2518Z			34-22-34	ALL
	55	UNUSED						ALL
D40882J		379/285/L40		RCPT-				001-099
	1		W3576	0001	20		33-22-11	001-099
	2		W3576	0077	22		33-22-11	001-099
	3		W3576	0003	22		33-22-11	001-099
	4		W3576	0004	20		33-22-11	001-099
	5		W3576	0106	22		33-22-11	001-099
	6		W3576	0104	22		33-22-11	001-099
	7		W3576	0007	22		33-22-11	001-099
	8		W3576	0008	22		33-22-11	001-099
	9		W3576	0046	22		24-51-51	001-099
	10		W3576	0047	22		24-51-51	001-099
	11		W3576	0045	20		24-51-51	001-099
	12		W3576	0053	20		24-51-51	001-099
	13		W3576	0036	24		33-21-11	001-099
	14		W3576	0037	24		33-21-11	001-099
	15		W3576	0038	24		33-21-11	001-099
	16		W3576	0032	20		33-21-51	001-099
	17		W3576	0039	20		33-21-51	001-099
	18		W3576	0033	24		33-21-31	001-099
	19		W3576	0034	24		33-21-31	001-099
	20		W3576	0035	24		33-21-31	001-099
	21	UNUSED						001-099
	22	UNUSED						001-099
	23		W3576	0135	22		23-34-15	001-099
	24		W3576	0062	20		33-21-31	001-099
	25		W3576	0131	20		23-34-15	001-099
	26		W3576	3001R	22		SPARE	001-099
	27		W3576	3001Y	22		SPARE	001-099
	28		W3576	3001B	22		SPARE	001-099
	29		W3576	0029	22		SPARE	001-099
	30		W3576	0031	22		SPARE	001-099
	31		W3576	0030	20		SPARE	001-099
	32		W3576	0027	22		23-34-15	001-099
	33		W3576	0028	20		23-34-15	001-099
	34		W3576	0044	20		33-21-11	001-099
	35	UNUSED						001-099
	36	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 57

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40882J		379/285/L40		RCPT- (continued)				001-099
	37	UNUSED						001-099
	38		W3576	0040	22		33-51-11	001-099
	39		W3576	0041	22		33-51-11	001-099
	40		W3576	0042	22		33-51-11	001-099
	41		W3576	0043	20		33-51-11	001-099
D40882P		379/ /L036		PLUG-				001-099
	1		W0558	0001	20		33-22-11	001-099
	2		W0558	0002	22		33-22-11	001-099
	3		W0558	0003	22		33-22-11	001-099
	4		W0558	0004	20		33-22-11	001-099
	5		W0558	0005	22		33-22-11	001-099
	6		W0558	0006	22		33-22-11	001-099
	7		W0558	0007	22		33-22-11	001-099
	8		W0558	0008	22		33-22-11	001-099
	9		W0558	0009	22		24-51-51	001-099
	10		W0558	0010	22		24-51-51	001-099
	11		W0558	0011	20		24-51-51	001-099
	12		W0558	0012	20		24-51-51	001-099
	13		W0558	0013	24		33-21-11	001-099
	14		W0558	0014	24		33-21-11	001-099
	15		W0558	0015	24		33-21-11	001-099
	16		W0558	0016	22		33-21-51	001-099
	17		W0558	0017	20		33-21-51	001-099
	18		W0558	0018	24		33-21-31	001-099
	19		W0558	0019	24		33-21-31	001-099
	20		W0558	0020	24		33-21-31	001-099
	21		W0558	0021	20		SPARE	001-099
	22		W0558	0022	22		SPARE	001-099
	23		W0558	0023	20		23-34-15	001-099
	24		W0558	0024	24		33-21-31	001-099
	25		W0558	0025	20		23-34-15	001-099
	26		W0558	3001R	22		SPARE	001-099
	27		W0558	3001Y	22		SPARE	001-099
	28		W0558	3001B	22		SPARE	001-099
	29		W0558	0029	22		SPARE	001-099
	30		W0558	0030	22		SPARE	001-099
	31		W0558	0031	20		SPARE	001-099
	32		W0558	0032	22		23-34-15	001-099
	33		W0558	0033	22		23-34-15	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 58

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40882P		379/ /L036		PLUG- (continued)				001-099
	34		W0558	0034	20		33-21-11	001-099
	35		W0558	0035	22		SPARE	001-099
	36		W0558	0036	22		SPARE	001-099
	37		W0558	0037	22		SPARE	001-099
	38		W0558	0038	22		33-51-11	001-099
	39		W0558	0039	22		33-51-11	001-099
	40		W0558	0040	22		33-51-11	001-099
	41		W0558	0041	20		33-51-11	001-099
D40883J		E002-03/ /		RCPT-				001-099
D40883J		E2-3/ /		RCPT-				115-199
	1		W1175	2501T	24		34-22-34	ALL
	2		W1175	2501W	24		34-22-34	ALL
	3		W1175	2501Z			34-22-34	ALL
	4		W1175	2502T	24		34-22-34	ALL
	5		W1175	2502W	24		34-22-34	ALL
	6		W1175	2502Z			34-22-34	ALL
	7		W1175	2503T	24		34-22-34	ALL
	8		W1175	2503W	24		34-22-34	ALL
	9		W1175	2503Z			34-22-34	ALL
	10		W1175	2504T	24		34-22-34	ALL
	11		W1175	2504W	24		34-22-34	ALL
	12		W1175	2504Z			34-22-34	ALL
	13		W1175	2505T	24		34-22-34	ALL
	14		W1175	2505W	24		34-22-34	ALL
	15		W1175	2505Z			34-22-34	ALL
	16		W1175	2506T	24		34-22-34	ALL
	17		W1175	2506W	24		34-22-34	ALL
	18		W1175	2506Z			34-22-34	ALL
	19		W1175	2507T	24		34-22-34	ALL
	20		W1175	2507W	24		34-22-34	ALL
	21		W1175	2507Z			34-22-34	ALL
	22		W1175	2508T	24		34-22-34	ALL
	23		W1175	2508W	24		34-22-34	ALL
	24		W1175	2508Z			34-22-34	ALL
	25		W1175	2509T	24		34-22-34	ALL
	26		W1175	2509W	24		34-22-34	ALL
	27		W1175	2509Z			34-22-34	ALL
	28		W1175	2510T	24		34-22-34	ALL
	29		W1175	2510W	24		34-22-34	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 59

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40883J		E002-03/ /		RCPT- (continued)				001-099
D40883J		E2-3/ /		RCPT- (continued)				115-199
	30		W1175	2510Z			34-22-34	ALL
	31		W1175	2511T	24		34-22-34	ALL
	32		W1175	2511W	24		34-22-34	ALL
	33		W1175	2511Z			34-22-34	ALL
	34		W1175	2512T	24		34-22-34	ALL
	35		W1175	2512W	24		34-22-34	ALL
	36		W1175	2512Z			34-22-34	ALL
	37		W1175	2513T	24		34-22-34	ALL
	38		W1175	2513W	24		34-22-34	ALL
	39		W1175	2513Z			34-22-34	ALL
	40		W1175	2514T	24		34-22-34	ALL
	41		W1175	2514W	24		34-22-34	ALL
	42		W1175	2514Z			34-22-34	ALL
	43		W1175	2515T	24		34-22-34	ALL
	44		W1175	2515W	24		34-22-34	ALL
	45		W1175	2515Z			34-22-34	ALL
	46		W1175	2516T	24		34-22-34	ALL
	47		W1175	2516W	24		34-22-34	ALL
	48		W1175	2516Z			34-22-34	ALL
	49		W1175	2517T	24		34-22-34	ALL
	50		W1175	2517W	24		34-22-34	ALL
	51		W1175	2517Z			34-22-34	ALL
	52		W1175	2518T	24		34-22-34	ALL
	53		W1175	2518W	24		34-22-34	ALL
	54		W1175	2518Z			34-22-34	ALL
	55	UNUSED						ALL
D40883P		E002-03/ /		PLUG				ALL
	1		W4443	2501T	24		34-22-34	ALL
	2		W4443	2501W	24		34-22-34	ALL
	3		W4443	2501Z			34-22-34	ALL
	4		W4443	2502T	24		34-22-34	ALL
	5		W4443	2502W	24		34-22-34	ALL
	6		W4443	2502Z			34-22-34	ALL
	7		W4443	2503T	24		34-22-34	ALL
	8		W4443	2503W	24		34-22-34	ALL
	9		W4443	2503Z			34-22-34	ALL
	10		W4443	2504T	24		34-22-34	ALL
	11		W4443	2504W	24		34-22-34	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 60

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40883P		E002-03/ /		PLUG (continued)				ALL
	12		W4443	2504Z			34-22-34	ALL
	13		W4443	2505T	24		34-22-34	ALL
	14		W4443	2505W	24		34-22-34	ALL
	15		W4443	2505Z			34-22-34	ALL
	16		W4443	2506T	24		34-22-34	ALL
	17		W4443	2506W	24		34-22-34	ALL
	18		W4443	2506Z			34-22-34	ALL
	19		W4443	2507T	24		34-22-34	ALL
	20		W4443	2507W	24		34-22-34	ALL
	21		W4443	2507Z			34-22-34	ALL
	22		W4443	2508T	24		34-22-34	ALL
	23		W4443	2508W	24		34-22-34	ALL
	24		W4443	2508Z			34-22-34	ALL
	25		W4443	2509T	24		34-22-34	ALL
	26		W4443	2509W	24		34-22-34	ALL
	27		W4443	2509Z			34-22-34	ALL
	28		W4443	2510T	24		34-22-34	ALL
	29		W4443	2510W	24		34-22-34	ALL
	30		W4443	2510Z			34-22-34	ALL
	31		W4443	2511T	24		34-22-34	ALL
	32		W4443	2511W	24		34-22-34	ALL
	33		W4443	2511Z			34-22-34	ALL
	34		W4443	2512T	24		34-22-34	ALL
	35		W4443	2512W	24		34-22-34	ALL
	36		W4443	2512Z			34-22-34	ALL
	37		W4443	2513T	24		34-22-34	ALL
	38		W4443	2513W	24		34-22-34	ALL
	39		W4443	2513Z			34-22-34	ALL
	40		W4443	2514T	24		34-22-34	ALL
	41		W4443	2514W	24		34-22-34	ALL
	42		W4443	2514Z			34-22-34	ALL
	43		W4443	2515T	24		34-22-34	ALL
	44		W4443	2515W	24		34-22-34	ALL
	45		W4443	2515Z			34-22-34	ALL
	46		W4443	2516T	24		34-22-34	ALL
	47		W4443	2516W	24		34-22-34	ALL
	48		W4443	2516Z			34-22-34	ALL
	49		W4443	2517T	24		34-22-34	ALL
	50		W4443	2517W	24		34-22-34	ALL
	51		W4443	2517Z			34-22-34	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 61

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40883P		E002-03/ /		PLUG (continued)				ALL
	52		W4443	2518T	24		34-22-34	ALL
	53		W4443	2518W	24		34-22-34	ALL
	54		W4443	2518Z			34-22-34	ALL
	55	UNUSED						ALL
D40892J		E4-2/ /		RCPT-				ALL
	1		W1275	2031B	24		24-34-11	ALL
	2		W1275	2031R	24		24-34-11	ALL
	3	UNUSED						ALL
	4		W1275	5628	22		24-27-21	ALL
	5		W1275	5624	22		24-27-21	ALL
	6		W1275	5620	22		24-27-21	ALL
	7		W1275	5640	24		24-34-11	ALL
	7		W1275	5641	24		24-34-11	ALL
	8		W1275	5643	24		24-34-11	ALL
	8		W1275	5644	24		24-34-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W1275	2034B	24		24-34-11	ALL
	12		W1275	2034R	24		24-34-11	ALL
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
D40892P		E004-02/ /		PLUG				001-099
D40892P		E4-2/ /		PLUG				115-199
	1		W2244	2001B	24		24-34-11	001-099
	1		W2244	2001B	22		24-34-11	115-199
	2		W2244	2001R	24		24-34-11	001-099
	2		W2244	2001R	22		24-34-11	115-199
	3	UNUSED						ALL
	4		W2244	0254	24		24-27-21	ALL
	5		W2244	0255	24		24-27-21	ALL
	6		W2244	0256	24		24-27-21	ALL
	7		W2244	0007	24		24-34-11	001-099
	7		W2244	0007	22		24-34-11	115-199
	8		W2244	0008	24		24-34-11	001-099
	8		W2244	0008	22		24-34-11	115-199
	9		W2244	0009	22		SPARE	ALL
	10		W2244	0010	22		SPARE	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 62

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40892P		E004-02/ /		PLUG (continued)				001-099
D40892P		E4-2/ /		PLUG (continued)				115-199
	11		W2244	2002B	24		24-34-11	001-099
	11		W2244	2002B	22		24-34-11	115-199
	12		W2244	2002R	24		24-34-11	001-099
	12		W2244	2002R	22		24-34-11	115-199
	13		W2244	0609	20		SPARE	115-199
	14		W2244	0610	20		SPARE	115-199
	15	UNUSED						115-199
D40893J		P010-00/ /		RCPT				ALL
	1		W1115	0303	22		22-12-21	ALL
	2		W1115	0302	22		22-12-21	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W1115	0301	22		22-12-21	ALL
	6		W1115	0303	22		22-12-21	ALL
	7		W1115	0304	22		78-34-61	ALL
	8		W1115	0305	22		78-34-61	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D40894J		E5-2/ /		RCPT				ALL
	1		W1284	4004R	24		24-23-11	ALL
	2		W1284	4004Y	24		24-23-11	ALL
	3		W1284	4004B	24		24-23-11	ALL
	4		W1284	4004G	24		24-23-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1284	0095	24		24-27-21	ALL
	15	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 63

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40894P		E005-02/ /		PLUG				001-099
D40894P		E5-2/ /		PLUG				115-199
	1		W2244	4004R	24		24-23-11	ALL
	2		W2244	4004Y	24		24-23-11	ALL
	3		W2244	4004B	24		24-23-11	ALL
	4		W2244	4004G	24		24-23-11	ALL
	5		W2244	0001	22		SPARE	001-002, 115-199
	5	UNUSED						003-099
	6		W2244	0002	22		SPARE	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						001-099
	13		W2244	0610	20		SPARE	115-199
	14		W2244	0254	24		24-27-21	ALL
	15	UNUSED						ALL
D40895J		P010-00/ /		RCPT				ALL
	1		W1115	0311	22		22-12-31	ALL
	2		W1115	0331	22		22-12-31	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W1115	0312	22		22-12-31	ALL
	6		W1115	0311	22		22-12-31	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D40897J		P010-00/ /		RCPT				ALL
	1		W1115	0323	22		22-32-15	ALL
	2		W1115	0334	22		22-32-15	ALL
	3		W1115	0332	22		22-12-11	ALL
	4		W1115	0310	22		22-12-11	ALL
	5		W1115	0300	22		22-12-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 64

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40897J		P010-00/ /		RCPT (continued)				ALL
	6		W1115	0334	22		22-32-15	ALL
	7		W1115	0330	22		22-32-15	ALL
	8		W1115	0322	22		78-34-51	ALL
	9		W1115	0321	22		78-34-51	ALL
	10	UNUSED						ALL
	11		W1115	0324	22		22-32-15	ALL
	12		W1115	0327	22		22-32-15	ALL
	13		W1115	0326	22		22-32-15	ALL
	14		W1115	0329	22		22-32-15	ALL
	15		W1115	0332	22		22-12-11	ALL
D40898J		AW1180/ /		RCPT				ALL
	1	UNUSED						001-099
	1		W4202	2006R	22		28-41-21	115-199
	2	UNUSED						001-099
	2		W4202	2006B	22		28-41-21	115-199
	3	UNUSED						001-099
	3		W4202	2005R	22		28-41-21	115-199
	4	UNUSED						001-099
	4		W4202	2005B	22		28-41-21	115-199
	5		W3306	1006	20		27-18-11	001-099
	5		W4202	0056	22		27-18-11	115-199
	6		W3306	2502B	20		27-18-11	001-099
	6		W4202	2009B	22		27-18-11	115-199
	7		W3306	2502R	20		27-18-11	001-099
	7		W4202	2009R	22		27-18-11	115-199
	8		W3306	2501R	20		28-21-21	001-099
	8		W4202	2501R	22		28-21-21	115-199
	9		W3306	2501B	20		28-21-21	001-099
	9		W4202	2501B	22		28-21-21	115-199
	10		W3306	2501ZI			28-21-21	001-099
	10		W4202	2501Z			28-21-21	115-199
	11		W3306	2509R	20		28-21-23	001-099
	11		W4202	0026	20		28-21-23	115-199
	12		W3306	2509B	20		28-21-23	001-099
	12		W4202	0027	20		28-21-23	115-199
	13		W3306	3503B	20		28-26-11	001-099
	13		W4202	0005	20		28-26-11	115-199
	14		W3306	3503R	20		28-26-11	001-099
	14		W4202	0006	20		28-26-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 65

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40898J		AW1180/ /		RCPT (continued)				ALL
	15		W3306	2511R	20		27-51-41	001-099
	15		W4202	2011R	22		27-51-41	115-199
	16		W3306	2511B	20		27-51-41	001-099
	16		W4202	2011B	22		27-51-41	115-199
	17		W3306	3501R	20		27-58-11	001-099
	17		W4202	0078	22		27-58-11	115-199
	18		W3306	3501B	20		27-58-11	001-099
	18		W4202	0079	22		27-58-11	115-199
	19		W3306	3501Y	20		27-58-11	001-099
	19		W4202	0080	22		27-58-11	115-199
	20	18	W3306	1019	18		28-42-11	001-099
	20		W4202	0049	20		28-42-11	115-199
	21		W3306	3503Y	20		28-26-11	001-099
	21		W4202	0004	20		28-26-11	115-199
	22		W3306	4251R	20		27-51-41	001-099
	22		W4202	4001R	22		27-51-41	115-199
	23		W3306	4251B	20		27-51-41	001-099
	23		W4202	4001B	22		27-51-41	115-199
	24		W3306	4251Y	20		27-51-41	001-099
	24		W4202	4001Y	22		27-51-41	115-199
	25		W3306	4251G	20		27-51-41	001-099
	25		W4202	4001G	22		27-51-41	115-199
I	26	UNUSED						ALL
	27	UNUSED						ALL
I	28	UNUSED						ALL
	29	UNUSED						ALL
I	30	UNUSED						ALL
	31	UNUSED						001-099
	31		W4202	0094	20		SPARE	115-199
	32	UNUSED						001-099
	32		W4202	0003	20		SPARE	115-199
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						001-099
	35		W4202	0057	22		SPARE	115-199
	36		W3306	1020	20		27-18-11	001-099
	36		W4202	1020	22		27-18-11	115-199
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 66

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40898J		AW1180/ /		RCPT (continued)				ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	S/R		W3306	1006Z			27-18-11	001-099
	S/R		W3306	1019Z			28-42-11	001-099
	S/R		W3306	1020Z			27-18-11	001-099
	S/R		W3306	2501ZO			28-21-21	001-099
	S/R		W3306	2502Z			27-18-11	001-099
	S/R		W3306	2509Z			28-21-23	001-099
	S/R		W3306	2511Z			27-51-41	001-099
	S/R		W3306	3501Z			27-58-11	001-099
	S/R		W3306	3503Z			28-26-11	001-099
	S/R		W3306	4251Z			27-51-41	001-099
	S/R		W4202	1020Z			27-18-11	115-199
	S/R		W4202	YAAA			27-51-41	115-199
D40898P		AW1180/ /		PLUG				ALL
	1		W4202	2006R	22		SPARE	001-099
	1		W3306	2504R	20		28-41-21	115-199
	2		W4202	2006B	22		SPARE	001-099
	2		W3306	2504B	20		28-41-21	115-199
	3		W4202	2005R	22		SPARE	001-099
	3		W3306	2505R	20		28-41-21	115-199
	4		W4202	2005B	22		SPARE	001-099
	4		W3306	2505B	20		28-41-21	115-199
	5		W4202	0056	22		27-18-11	001-099
	5		W3306	1006	20		27-18-11	115-199
	6		W4202	2009B	22		27-18-11	001-099
	6		W3306	2502B	20		27-18-11	115-199
	7		W4202	2009R	22		27-18-11	001-099
	7		W3306	2502R	20		27-18-11	115-199
	8		W4202	2501R	22		28-21-21	001-099
	8		W3306	2501R	20		28-21-21	115-199
	9		W4202	2501B	22		28-21-21	001-099
	9		W3306	2501B	20		28-21-21	115-199
	10		W4202	2501Z			28-21-21	001-099
	10		W3306	2501ZI			28-21-21	115-199
	11		W4202	0026	22		28-21-23	001-099
	11		W3306	2509R	20		28-21-23	115-199
	12		W4202	0027	20		28-21-23	001-099
	12		W3306	2509B	20		28-21-23	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 67

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40898P		AW1180/ /		PLUG (continued)				ALL
	13		W4202	0005	22		28-26-11	001-099
	13		W3306	3503B	20		28-26-11	115-199
	14		W4202	0006	22		28-26-11	001-099
	14		W3306	3503R	20		28-26-11	115-199
	15		W4202	2011R	22		27-51-41	001-099
	15		W3306	2511R	20		27-51-41	115-199
	16		W4202	2011B	22		27-51-41	001-099
	16		W3306	2511B	20		27-51-41	115-199
	17		W4202	0078	22		27-58-11	001-099
	17		W3306	3501R	20		27-58-11	115-199
	18		W4202	0079	22		27-58-11	001-099
	18		W3306	3501B	20		27-58-11	115-199
	19		W4202	0080	22		27-58-11	001-099
	19		W3306	3501Y	20		27-58-11	115-199
	20		W4202	0049	22		28-42-11	001-099
	20	18	W3306	1019	18		28-42-11	115-199
	21		W4202	0004	22		28-26-11	001-099
	21		W3306	3503Y	20		28-26-11	115-199
	22		W4202	4001R	22		27-51-41	001-099
	22		W3306	4251R	20		27-51-41	115-199
	23		W4202	4001B	22		27-51-41	001-099
	23		W3306	4251B	20		27-51-41	115-199
	24		W4202	4001Y	22		27-51-41	001-099
	24		W3306	4251Y	20		27-51-41	115-199
	25		W4202	4001G	22		27-51-41	001-099
	25		W3306	4251G	20		27-51-41	115-199
I	26	UNUSED						ALL
	27		W4202	0094	20		SPARE	001-099
	27	UNUSED						115-199
I	28	UNUSED						ALL
	29		W4202	0003	20		SPARE	001-099
	29	UNUSED						115-199
I	30	UNUSED						ALL
	31		W4202	0057	22		SPARE	001-099
	31	UNUSED						115-199
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36		W4202	1020	22		27-18-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 68

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40898P		AW1180/ /		PLUG (continued)				ALL
	36		W3306	1020	20		27-18-11	115-199
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	S/R		W4202	1020Z			27-18-11	001-099
	S/R		W4202	YAAA			27-58-11	001-099
	S/R		W3306	1006Z			27-18-11	115-199
	S/R		W3306	1019Z			28-42-11	115-199
	S/R		W3306	1020Z			27-18-11	115-199
	S/R		W3306	2501ZO			28-21-21	115-199
	S/R		W3306	2502Z			27-18-11	115-199
	S/R		W3306	2504Z			28-41-21	115-199
	S/R		W3306	2505Z			28-41-21	115-199
	S/R		W3306	2509Z			28-21-23	115-199
	S/R		W3306	2511Z			27-51-41	115-199
	S/R		W3306	3501Z			27-58-11	115-199
	S/R		W3306	3503Z			28-26-11	115-199
	S/R		W3306	4251Z			27-51-41	115-199
D40899J		P010-00/ /		RCPT				ALL
	1		W1115	0254	22		26-11-21	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1115	0271	22		76-11-12	ALL
	5		W1115	0266Y	22		27-41-21	ALL
	6		W1115	0305	22		78-34-61	ALL
	7	UNUSED						ALL
	8		W1115	0425	22		33-16-61	ALL
	9		W1115	0424	22		33-16-51	ALL
	10		W1115	0202	22		33-16-51	ALL
	11		W1115	0256	22		28-22-21	ALL
	12		W1115	0258	22		28-22-21	ALL
	13		W1115	0260	22		76-11-12	ALL
	14		W1115	0259	22		76-11-12	ALL
	15		W1115	0261	22		76-11-12	ALL
	16	UNUSED						ALL
	17		W1115	0262	22		28-22-21	ALL
	18		W1115	0304	22		78-34-61	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 69

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40899J		P010-00/ /		RCPT (continued)				ALL
	19		W1115	0396	22		28-22-21	ALL
	20		W1115	0250	22		76-11-12	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W1115	0267	22		28-22-21	ALL
	24	UNUSED						ALL
D40899P		P010-00/ /		PLUG				ALL
	1		W4236	0188	22		26-11-21	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W4236	0102	22		76-11-12	ALL
	5		W4236	0038Y	20		27-41-21	ALL
	6		W4236	1008	22		78-34-61	ALL
	7	UNUSED						ALL
	8		W4236	0072	22		33-16-61	ALL
	9		W4236	0087	22		33-16-51	ALL
	10		W4236	0088	22		33-16-51	ALL
	11		W4236	0037	20		28-22-21	ALL
	12		W4236	0039	20		28-22-21	ALL
	13		W4236	0251	22		76-11-12	ALL
	14		W4236	0009	22		76-11-12	ALL
	15		W4236	0003	22		76-11-12	ALL
	16	UNUSED						ALL
	17		W4236	0041	22		28-22-21	ALL
	18		W4236	1009	22		78-34-61	ALL
	19		W4236	0186	20		28-22-21	ALL
	20		W4236	0103	22		76-11-12	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W4236	0071	22		28-22-21	ALL
	24	UNUSED						ALL
CAP	Y		W4236	0053	22		SPARE	001-002, 115-199
CAP	Y		W4236	0054	22		SPARE	001-002, 115-199
DED			W4236	1008Z			78-34-61	003-099
DED			W4236	1009Z			78-34-61	003-099
			W4236	1008Z			78-34-61	001-002, 115-199
			W4236	1009Z			78-34-61	001-002, 115-199
			W4236	FRAT			78-34-61	001-002, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D40800

Page 70 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40901J		P010-00/ /		RCPT				ALL
	1		W1115	0204	22		26-11-11	ALL
	2		W1115	0216Y	22		27-41-11	ALL
	3		W1115	0395	22		28-22-21	ALL
	4		W1115	0200	22		76-11-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W1115	0206	22		28-22-21	ALL
	12		W1115	0208	22		28-22-21	ALL
	13		W1115	0210	22		76-11-11	ALL
	14		W1115	0209	22		76-11-11	ALL
	15		W1115	0211	22		76-11-11	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W1115	0217Y	22		27-41-11	ALL
	19		W1115	0218Y	22		27-41-11	ALL
	20	UNUSED						ALL
	21		W1115	0224	22		76-11-11	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W1115	0219	22		28-22-21	ALL
	25	UNUSED						ALL
	26		W1115	0212	22		28-22-21	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W1115	0321	22		78-34-51	ALL
	31		W1115	0322	22		78-34-51	ALL
D40901P		P010-00/ /		PLUG				ALL
	1		W4228	0188	22		26-11-11	ALL
	2		W4228	0069Y	20		27-41-11	ALL
	3		W4228	0052	20		28-22-21	ALL
	4		W4228	0008	22		76-11-11	001-099
	4		W4228	0008	24		76-11-11	115-199
	5	UNUSED						ALL
	6	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D40900

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40901P		P010-00/ /		PLUG (continued)				ALL
	6		W4228	0108	22		SPARE	115-199
	7	UNUSED						ALL
	8	UNUSED						001-099
	8		W4228	0096	20		SPARE	115-199
	9	UNUSED						ALL
	10	UNUSED						001-099
	10		W4228	0109	22		SPARE	115-199
	11		W4228	0036	20		28-22-21	ALL
	12		W4228	0037	20		28-22-21	ALL
	13		W4228	0226	22		76-11-11	ALL
	14		W4228	0009	22		76-11-11	ALL
	15		W4228	0002	22		76-11-11	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W4228	0070Y	20		27-41-11	ALL
	19		W4228	0071Y	20		27-41-11	ALL
	20	UNUSED						ALL
	21		W4228	0251	22		76-11-11	001-099
	21		W4228	0007	22		76-11-11	115-199
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W4228	0040	22		28-22-21	ALL
	25	UNUSED						ALL
	26		W4228	0039	22		28-22-21	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W4228	1006	22		78-34-51	ALL
	31		W4228	1007	22		78-34-51	ALL
	CAP	Y	W4228	0046	22		SPARE	001-002, 115-199
	CAP	Y	W4228	0047	22		SPARE	001-002, 115-199
	DED		W4228	1006Z			78-34-51	ALL
	DED		W4228	1007Z			78-34-51	ALL
D40902J		AW1164/ /		RCPT				ALL
	1		W3306	3502Y	20		28-22-21	001-099
	1		W2626	0052	20		28-22-21	115-199
	2		W3306	3502B	20		28-22-21	001-099
	2		W2626	0054	20		28-22-21	115-199
	3		W3306	3502R	20		28-22-21	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40900

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40902J		AW1164/ /		RCPT (continued)				ALL
	3		W2626	0053	20		28-22-21	115-199
	4		W3306	1001	18		28-25-11	001-099
	4		W2626	0055	20		28-25-11	115-199
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	S/R		W3306	1001Z			28-25-11	001-099
	S/R		W3306	3502Z			28-22-21	001-099
	S/R		W2626	YAAA			28-22-21	115-199
D40902P		AW1164/ /		PLUG				001-099
D40902P		AW1164/ /		PLUG-				115-199
	1		W2626	0052	20		28-22-21	001-099
	1		W3306	3502Y	20		28-22-21	115-199
	2		W2626	0054	20		28-22-21	001-099
	2		W3306	3502B	20		28-22-21	115-199
	3		W2626	0053	20		28-22-21	001-099
	3		W3306	3502R	20		28-22-21	115-199
	4		W2626	0055	20		28-25-11	001-099
	4		W3306	1001	18		28-25-11	115-199
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	S/R		W2626	YAAA			28-22-21	001-099
	S/R		W3306	1001Z			28-25-11	115-199
	S/R		W3306	3502Z			28-22-21	115-199
D40904J		E4-2/ /		RCPT-				ALL
	1		W1275	5649	24		24-34-11	ALL
	1		W1275	5650	24		24-34-11	ALL
	2		W1275	5646	24		24-34-11	ALL
	2		W1275	5647	24		24-34-11	ALL
	3		W1275	5529	24		24-28-11	ALL
	3		W1275	5530	24		24-28-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40900

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40904J		E4-2/ /		RCPT- (continued)				ALL
	4	UNUSED						ALL
	5		W1275	5652	24		24-34-11	ALL
	5		W1275	5653	24		24-34-11	ALL
	6		W1275	0348	24		24-33-12	001-099
	6	UNUSED						115-199
	7		W1275	2025R	24		24-34-11	ALL
	8		W1275	2025B	24		24-34-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W1275	6501	24		24-51-72	ALL
	12		W1275	6259	24		24-51-72	ALL
	12		W1275	6260	24		24-51-72	ALL
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
D40904P		E004-02/ /		PLUG-				ALL
	1		W2250	0010	24		24-34-11	001-099
	1		W2250	0010	22		24-34-11	115-199
	2		W2250	0014	24		24-34-11	001-099
	2		W2250	0014	22		24-34-11	115-199
	3		W2250	0001	24		24-28-11	ALL
	4		W2250	0012	22		SPARE	ALL
	5		W2250	0011	24		24-34-11	001-099
	5		W2250	0011	22		24-34-11	115-199
	6		W2250	0015	22		24-33-12	001-099
	6		W2250	0013	22		SPARE	115-199
	7		W2250	2007R	24		24-34-11	001-099
	7		W2250	2007R	22		24-34-11	115-199
	8		W2250	2007B	24		24-34-11	001-099
	8		W2250	2007B	22		24-34-11	115-199
	9	UNUSED						001-099
	9		W2250	0029	20		SPARE	115-199
	10	UNUSED						001-099
	10		W2250	0028	20		SPARE	115-199
	11		W2250	0601	22		24-51-72	001-099
	11		W2250	0601	20		24-51-72	115-199
	12		W2250	0040	22		24-51-72	ALL
	13	UNUSED						115-199
	14		W2250	0055	20		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40900

Page 4

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40904P		E004-02/ /		PLUG- (continued)				ALL
	15		W2250	0015	22		SPARE	115-199
D40908J		E5-2/ /		RCPT				ALL
	1	UNUSED						ALL
	2		W1284	0201	24		24-11-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W1284	0024	22		24-11-21	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D40908P		E005-02/ /		PLUG-				ALL
	1	UNUSED						ALL
	2		W2250	0072	24		24-11-11	ALL
	3		W2250	0604	20		SPARE	ALL
	4	UNUSED						ALL
	5	UNUSED						001-099
	5		W2250	0607	20		SPARE	115-199
	6	UNUSED						001-099
	6		W2250	0608	20		SPARE	115-199
	7		W2250	0031	18		SPARE	ALL
	8	UNUSED						001-099
	8		W2250	0609	20		SPARE	115-199
	9		W2250	0006	20		24-11-21	ALL
	10		W2250	0008	16		SPARE	ALL
	11	UNUSED						001-099
	11		W2250	0610	20		SPARE	115-199
	12	UNUSED						001-099
	12		W2250	0611	20		SPARE	115-199
D40910J		P36/ /		RCPT				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1260	0894	24		21-25-11	ALL
	4		W1260	5608	16		21-25-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40900

Page 5

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40910J		P36/ /		RCPT (continued)				ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						001-099
	7		W1260	5691	24		30-31-11	115-199
	8		W1260	0071	18		33-42-21	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						001-099
	14		W1260	0737	20		29-11-22	115-199
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W1260	0739	22		29-11-31	ALL
	18	UNUSED						ALL
	19		W1260	8522	20		33-42-31	001-099
	19	UNUSED						115-199
	20	UNUSED						ALL
	21		W1260	0088	22		30-32-11	ALL
	22		W1260	0859	22		21-58-15	ALL
	23		W1260	0860	22		21-58-15	ALL
	24		W1260	0861	22		21-58-15	ALL
	25	UNUSED						ALL
	26		W1260	6506	24		21-25-11	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W1260	0737	20		29-11-22	001-099
	32	UNUSED						115-199
D40910P		P036-00/ /		PLUG-				ALL
	1	UNUSED						001-099
	1		W2256	0613	14		SPARE	115-199
	2	UNUSED						ALL
	3		W2256	0602	24		21-25-11	ALL
	4		W2256	0002	16		21-25-11	ALL
	5	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D40900

Page 6

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40910P		P036-00/ /		PLUG- (continued)				ALL
	5		W2256	0603	20		SPARE	115-199
	6	UNUSED						ALL
	7	UNUSED						001-099
	7		W2256	0007	20		30-31-11	115-199
	8		W2256	0022	18		33-42-21	ALL
	9	UNUSED						001-099
	9		W2256	0604	20		SPARE	115-199
	10	UNUSED						ALL
	11	UNUSED						001-099
	11		W2256	0606	20		SPARE	115-199
	12	UNUSED						001-099
	12		W2256	0006	20		SPARE	115-199
	13	UNUSED						001-099
	13		W2256	0008	20		SPARE	115-199
	14	UNUSED						001-099
	14		W2256	0009	20		29-11-22	115-199
	15	UNUSED						ALL
	16	UNUSED						001-099
	16		W2256	0011	20		SPARE	115-199
	17		W2256	0012	20		29-11-31	ALL
	18	UNUSED						001-099
	18		W2256	0027	20		SPARE	115-199
	19		W2256	0028	20		33-42-31	001-099
	19		W2256	0028	20		SPARE	115-199
	20	UNUSED						001-099
	20		W2256	0033	20		SPARE	115-199
	21		W2256	0021	22		30-32-11	ALL
	22		W2256	0040	22		21-58-15	ALL
	23		W2256	0041	22		21-58-15	ALL
	24		W2256	0042	22		21-58-15	ALL
	25	UNUSED						001-099
	25		W2256	0037	20		SPARE	115-199
	26		W2256	0038	20		21-25-11	ALL
	27	UNUSED						001-099
	27		W2256	0607	20		SPARE	115-199
	28	UNUSED						001-099
	28		W2256	0608	20		SPARE	115-199
	29	UNUSED						001-099
	29		W2256	0609	20		SPARE	115-199
	30	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D40900

Page 7

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40910P		P036-00/ /		PLUG- (continued)				ALL
	30		W2256	0610	20		SPARE	115-199
	31	UNUSED						ALL
	32		W2256	0009	20		29-11-22	001-099
	32	UNUSED						115-199
D40912J		P37/ /		RCPT				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W1270	5733	24		30-31-12	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W1270	5734	24		30-31-12	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W1270	0098	22		30-32-11	ALL
	22		W1272	0201	20		24-31-11	ALL
	23		W1272	0202	20		24-31-11	ALL
	24		W1272	0203	20		24-31-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W1270	0331	16		21-58-13	001-099
	27	UNUSED						115-199
	28		W1270	0505	18		38-15-11	ALL
	29		W1270	0504	18		38-15-11	ALL
	30		W1270	0502	18		38-15-11	001-099
	30		W1270	0501	18		38-15-11	115-199
	31		W1270	3001B	16		28-22-11	ALL
	32		W1270	3001R	16		28-22-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40900

Page 8

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40912J		P37/ /		RCPT (continued)				ALL
	33		W1270	3001Y	16		28-22-11	ALL
	34		W1270	3003R	18		28-22-11	ALL
	35		W1270	3003Y	18		28-22-11	ALL
	36		W1270	3003B	18		28-22-11	ALL
	37		W1270	3005R	18		28-22-11	ALL
	38		W1270	3005Y	18		28-22-11	ALL
	39		W1270	3005B	18		28-22-11	ALL
	40		W1270	0330	16		21-58-13	001-099
	40	UNUSED						115-199
	41		W1270	0329	16		21-58-13	001-099
	41	UNUSED						115-199
	42	UNUSED						ALL
	43		W1270	0615	18		24-51-25	ALL
D40912P		P037-00/ /		PLUG-				ALL
	1		W2258	0001	16		SPARE	001-099
	1		W2258	0001	20		SPARE	115-199
	2		W2258	0601	20		SPARE	ALL
	3	UNUSED						001-099
	3		W2258	0003	20		SPARE	115-199
	4	UNUSED						001-099
	4		W2258	0616	20		SPARE	115-199
	5		W2258	0005	24		30-31-12	001-099
	5		W2258	0005	20		30-31-12	115-199
	6	UNUSED						001-099
	6		W2258	0617	20		SPARE	115-199
	7	UNUSED						001-099
	7		W2258	0007	20		SPARE	115-199
	8	UNUSED						001-099
	8		W2258	0618	20		SPARE	115-199
	9	UNUSED						001-099
	9		W2258	0009	20		SPARE	115-199
	10	UNUSED						001-099
	10		W2258	0619	20		SPARE	115-199
	11		W2258	0011	24		30-31-12	001-099
	11		W2258	0011	20		30-31-12	115-199
	12	UNUSED						ALL
	13	UNUSED						001-099
	13		W2258	0607	20		SPARE	115-199
	14	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40900

Page 9

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40912P		P037-00/ /		PLUG- (continued)				ALL
	15		W2258	0609	18		SPARE	ALL
	16	UNUSED						001-099
	16		W2258	0611	20		SPARE	115-199
	17	UNUSED						001-099
	17		W2258	0612	20		SPARE	115-199
	18	UNUSED						001-099
	18		W2258	0613	20		SPARE	115-199
	19	UNUSED						001-099
	19		W2258	0614	20		SPARE	115-199
	20	UNUSED						001-099
	20		W2258	0615	20		SPARE	115-199
	21		W2258	0021	22		30-32-11	ALL
	22		W2258	0022	20		24-31-11	ALL
	23		W2258	0023	20		24-31-11	ALL
	24		W2258	0024	20		24-31-11	ALL
	25	UNUSED						001-099
	25		W2258	0025	20		SPARE	115-199
	26	UNUSED						ALL
	27		W2258	0606	16		21-58-13	001-099
	27		W2258	0606	16		SPARE	115-199
	28		W2258	0028	18		38-15-11	ALL
	29		W2258	0029	18		38-15-11	ALL
	30		W2258	0030	18		38-15-11	ALL
	31		W2258	3002B	16		28-22-11	ALL
	32		W2258	3002R	16		28-22-11	ALL
	33		W2258	3002Y	16		28-22-11	ALL
	34		W2258	3015R	18		28-22-11	ALL
	35		W2258	3015Y	18		28-22-11	ALL
	36		W2258	3015B	18		28-22-11	ALL
	37		W2258	3012R	18		28-22-11	ALL
	38		W2258	3012Y	18		28-22-11	ALL
	39		W2258	3012B	18		28-22-11	ALL
	40		W2258	0605	16		21-58-13	001-099
	40		W2258	0605	16		SPARE	115-199
	41		W2258	0604	16		21-58-13	001-099
	41		W2258	0604	16		SPARE	115-199
	42	UNUSED						001-099
	42		W2258	0603	16		SPARE	115-199
	43		W2258	0602	18		24-51-25	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40900

Page 10

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40914J		P36/ /		RCPT				ALL
	1		W1260	0050	22		32-44-11	ALL
	2	UNUSED						ALL
	3		W1260	0746	22		29-11-31	ALL
	4	UNUSED						ALL
	5	UNUSED						001-099
	5		W1260	0580	20		26-22-21	115-199
	6		W1260	0876	22		24-25-11	ALL
	7	UNUSED						ALL
	8	UNUSED						001-002, 115-199
	8		W1260	8095	20		24-31-11	003-099
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W1260	5535	20		21-58-11	ALL
D40914P		P036-00/ /		PLUG-				ALL
	1		W2260	0608	22		32-44-11	ALL
	2	UNUSED						001-099
	2		W2260	0609	22		SPARE	115-199
	3		W2260	0610	20		29-11-31	ALL
	4	UNUSED						001-099
	4		W2260	0611	20		SPARE	115-199
	5		W2260	0055	20		SPARE	001-099
	5		W2260	0055	20		26-22-21	115-199
	6		W2260	0002	22		24-25-11	ALL
	7	UNUSED						ALL
	8	UNUSED						001-002, 115-199
	8		W2260	0003	20		24-31-11	003-099
	9	UNUSED						001-099
	9		W2260	0614	20		SPARE	115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W2260	0015	22		21-58-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40900

Page 11

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40918J		P36/ /		RCPT				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1260	5568	16		21-58-13	ALL
	7		W1260	5569	16		21-58-13	ALL
	8		W1260	5570	16		21-58-13	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
D40918P		P036-00/ /		PLUG-				001-099
D40918P		P36/ /		PLUG-				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W2240	0610	16		21-58-13	ALL
	7		W2240	0611	16		21-58-13	ALL
	8		W2240	0612	16		21-58-13	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
D40920J		P37/ /		RCPT				115-199
	1		W1272	2001B	12		30-41-12	115-199
	2		W1272	2001R	12		30-41-12	115-199
	3	UNUSED						115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
	6		W1270	0329	16		21-58-13	115-199
	7		W1270	0330	16		21-58-13	115-199
	8		W1270	0331	16		21-58-13	115-199
D40920P		P037-00/ /		PLUG-				115-199
	1		W2244	2003B	12		30-41-12	115-199
	2		W2244	2003R	12		30-41-12	115-199
	3		W2244	0601	14		SPARE	115-199
	4		W2244	0602	14		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40900

Page 12

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40920P		P037-00/ /		PLUG- (continued)				115-199
	5		W2244	0603	14		SPARE	115-199
	6		W2244	0066	16		21-58-13	115-199
	7		W2244	0067	16		21-58-13	115-199
	8		W2244	0068	16		21-58-13	115-199
D40922J		AW1156/ /		RCPT				ALL
	1		W3306	2510R	20		27-51-61	001-099
	1		W4206	2006R	22		27-51-61	115-199
	2		W3306	2510B	20		27-51-61	001-099
	2		W4206	2006B	22		27-51-61	115-199
	3		W3306	4252R	20		27-51-61	001-099
	3		W4206	4002R	22		27-51-61	115-199
	4		W3306	4252B	20		27-51-61	001-099
	4		W4206	4002B	22		27-51-61	115-199
	5		W3306	4252Y	20		27-51-61	001-099
	5		W4206	4002Y	22		27-51-61	115-199
	6		W3306	4252G	20		27-51-61	001-099
	6		W4206	4002G	22		27-51-61	115-199
	7	UNUSED						001-099
	7		W4206	0040	22		SPARE	115-199
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						001-099
	10		W4206	0039	22		SPARE	115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	S/R		W3306	2510Z			27-51-61	001-099
	S/R		W3306	4252Z			27-51-61	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40900

Page 13

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40922J		AW1156/ /		RCPT (continued)				ALL
	S/R		W4206	YAAC			27-51-61	115-199
D40922P		AW1156/ /		PLUG-				001-099
D40922P		AW1156/ /		PLUG				115-199
	1		W4206	2006R	22		27-51-61	001-099
	1		W3306	2510R	20		27-51-61	115-199
	2		W4206	2006B	22		27-51-61	001-099
	2		W3306	2510B	20		27-51-61	115-199
	3		W4206	4002R	22		27-51-61	001-099
	3		W3306	4252R	20		27-51-61	115-199
	4		W4206	4002B	22		27-51-61	001-099
	4		W3306	4252B	20		27-51-61	115-199
	5		W4206	4002Y	22		27-51-61	001-099
	5		W3306	4252Y	20		27-51-61	115-199
	6		W4206	4002G	22		27-51-61	001-099
	6		W3306	4252G	20		27-51-61	115-199
	7		W4206	0040	22		SPARE	001-099
	7	UNUSED						115-199
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W4206	0039	22		SPARE	001-099
	10	UNUSED						115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	S/R		W4206	YAAI			27-51-61	001-099
	S/R		W3306	2510Z			27-51-61	115-199
	S/R		W3306	4252Z			27-51-61	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40900

Page 14

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40924J		E003-04/ /		RCPT				ALL
	1		W1280	0011	24		52-71-11	ALL
	2		W1280	0012	24		52-71-11	ALL
	3		W1280	0013	24		52-71-11	ALL
	4		W1280	0014	24		52-71-11	ALL
	5		W1280	0326	22		23-31-13	ALL
	6		W1280	0327	22		23-31-13	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
D40924P		E003-04/ /		PLUG				ALL
	1		W2072	0066	24		52-71-11	ALL
	2		W2072	0063	24		52-71-11	ALL
	3		W2072	0064	24		52-71-11	ALL
	4		W2072	0065	24		52-71-11	ALL
	5		W2072	0102	20		23-31-13	ALL
	6		W2072	0103	20		23-31-13	ALL
	7		W2072	0153	24		SPARE	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40900

Page 15

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40924P		E003-04/ /		PLUG (continued)				ALL
	7	UNUSED						115-199
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
D40927J		E3-3/ /		RCPT-				115-199
	1		W1433	2006R	22		31-31-31	115-199
	2		W1433	2006B	22		31-31-31	115-199
	3	UNUSED						115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D40900

Page 16

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40927P		E3-3/ /		PLUG-				115-199
	1		W2359	2005R	22		31-31-31	115-199
	2		W2359	2005B	22		31-31-31	115-199
	3		W2359	0009	22		SPARE	115-199
	4		W2359	0010	22		SPARE	115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
D40930J D40930J		AW2180/ / AW2180/ /		RCPT RCPT-				001-099 115-199
	1		W3406	2511R	20		27-51-61	001-099
	1		W4216	2010R	22		27-51-61	115-199
	2		W3406	2511B	20		27-51-61	001-099
	2		W4216	2010B	22		27-51-61	115-199
	3	UNUSED						001-099
	3		W4216	2014R	22		28-41-31	115-199
	4	UNUSED						001-099
	4		W4216	2014B	22		28-41-31	115-199
	5	UNUSED						001-099
	5		W4216	2015R	22		28-41-31	115-199
	6	UNUSED						001-099
	6		W4216	2015B	22		28-41-31	115-199
	7	UNUSED						001-099
	7		W4216	0077	20		28-41-31	115-199
	8		W3406	1006	20		27-18-11	001-099
	8		W4216	0087	22		27-18-11	115-199
	9		W3406	2502B	20		27-18-11	001-099
	9		W4216	2012B	22		27-18-11	115-199
	10		W3406	2502R	20		27-18-11	001-099
	10		W4216	2012R	22		27-18-11	115-199
	11	UNUSED						001-099
	11		W4216	0078	20		28-41-41	115-199
	12	UNUSED						001-099
	12		W4216	2016R	22		28-41-41	115-199
	13	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D40900

Page 17

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40930J		AW2180/ /		RCPT (continued)				001-099
D40930J		AW2180/ /		RCPT- (continued)				115-199
	13		W4216	2016B	22		28-41-41	115-199
	14	UNUSED						001-099
	14		W4216	2017R	22		28-41-41	115-199
	15	UNUSED						001-099
	15		W4216	2017B	22		28-41-41	115-199
	16		W3406	4251R	20		27-51-61	001-099
	16		W4216	4001R	22		27-51-61	115-199
	17		W3406	4251B	20		27-51-61	001-099
	17		W4216	4001B	22		27-51-61	115-199
	18		W3406	4251Y	20		27-51-61	001-099
	18		W4216	4001Y	22		27-51-61	115-199
	19		W3406	4251G	20		27-51-61	001-099
	19		W4216	4001G	22		27-51-61	115-199
	20		W3406	3503B	20		28-26-11	001-099
	20		W4216	0028	20		28-26-11	115-199
	21		W3406	3503Y	20		28-26-11	001-099
	21		W4216	0027	20		28-26-11	115-199
	22		W3406	3503R	20		28-26-11	001-099
	22		W4216	0026	20		28-26-11	115-199
	23	18	W3406	1019	18		28-42-11	001-099
	23		W4216	0058	20		28-42-11	115-199
	24	UNUSED						001-099
	24		W4216	0104	22		SPARE	115-199
	25	18	W3406	2510B	18		28-43-11	001-099
	25	18	W4216	2018B	18		28-43-11	115-199
	26	UNUSED						001-099
	26		W4216	0105	22		SPARE	115-199
	27	18	W3406	2510R	18		28-43-11	001-099
	27	18	W4216	2018R	18		28-43-11	115-199
	28	UNUSED						001-099
	28		W4216	0117	22		SPARE	115-199
I	29	UNUSED						ALL
	30		W3406	2509R	20		28-21-23	001-099
	30		W4216	0047	20		28-21-23	115-199
I	31	UNUSED						ALL
	32		W3406	2509B	20		28-21-23	001-099
	32		W4216	0062	20		28-21-23	115-199
I	33	UNUSED						ALL
	34	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40900

Page 18

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40930J		AW2180/ /		RCPT (continued)				001-099
D40930J		AW2180/ /		RCPT- (continued)				115-199
	35	UNUSED						ALL
	36		W3406	1025	20		27-18-11	001-099
	36		W4216	1025	22		27-18-11	115-199
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	S/R		W3406	1006Z			27-18-11	001-099
	S/R		W3406	1019Z			28-42-11	001-099
	S/R		W3406	1025Z			27-18-11	001-099
	S/R		W3406	2502Z			27-18-11	001-099
	S/R		W3406	2509Z			28-21-23	001-099
	S/R		W3406	2510Z			28-43-11	001-099
	S/R		W3406	2511Z			27-51-61	001-099
	S/R		W3406	3503Z			28-26-11	001-099
	S/R		W3406	4251Z			27-51-61	001-099
	S/R		W4216	1025Z			27-18-11	115-199
D40930P		AW2180/ /		PLUG-				001-099
D40930P		AW2180/ /		PLUG				115-199
	1		W4216	2010R	22		27-51-61	001-099
	1		W3406	2511R	20		27-51-61	115-199
	2		W4216	2010B	22		27-51-61	001-099
	2		W3406	2511B	20		27-51-61	115-199
	3	UNUSED						001-099
	3		W3406	2504R	20		28-41-31	115-199
	4	UNUSED						001-099
	4		W3406	2504B	20		28-41-31	115-199
	5	UNUSED						001-099
	5		W3406	2505R	20		28-41-31	115-199
	6	UNUSED						001-099
	6		W3406	2505B	20		28-41-31	115-199
	7	UNUSED						001-099
	7		W3406	1016	20		28-41-31	115-199
	8		W4216	0087	22		27-18-11	001-099
	8		W3406	1006	20		27-18-11	115-199
	9		W4216	2012B	22		27-18-11	001-099
	9		W3406	2502B	20		27-18-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40900

Page 19

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40930P		AW2180/ /		PLUG- (continued)				001-099
D40930P		AW2180/ /		PLUG (continued)				115-199
	10		W4216	2012R	22		27-18-11	001-099
	10		W3406	2502R	20		27-18-11	115-199
	11	UNUSED						001-099
	11		W3406	1024	20		28-41-41	115-199
	12	UNUSED						001-099
	12		W3406	2506R	20		28-41-41	115-199
	13	UNUSED						001-099
	13		W3406	2506B	20		28-41-41	115-199
	14	UNUSED						001-099
	14		W3406	2507R	20		28-41-41	115-199
	15	UNUSED						001-099
	15		W3406	2507B	20		28-41-41	115-199
	16		W4216	4001R	22		27-51-61	001-099
	16		W3406	4251R	20		27-51-61	115-199
	17		W4216	4001B	22		27-51-61	001-099
	17		W3406	4251B	20		27-51-61	115-199
	18		W4216	4001Y	22		27-51-61	001-099
	18		W3406	4251Y	20		27-51-61	115-199
	19		W4216	4001G	22		27-51-61	001-099
	19		W3406	4251G	20		27-51-61	115-199
	20		W4216	0028	22		28-26-11	001-099
	20		W3406	3503B	20		28-26-11	115-199
	21		W4216	0027	22		28-26-11	001-099
	21		W3406	3503Y	20		28-26-11	115-199
	22		W4216	0026	22		28-26-11	001-099
	22		W3406	3503R	20		28-26-11	115-199
	23		W4216	0058	22		28-42-11	001-099
	23	18	W3406	1019	18		28-42-11	115-199
	24		W4216	0105	22		SPARE	001-099
	24	UNUSED						115-199
	25	18	W4216	2018B	18		28-43-11	001-099
	25	18	W3406	2510B	18		28-43-11	115-199
	26		W4216	0104	22		SPARE	001-099
	26	UNUSED						115-199
	27	18	W4216	2018R	18		28-43-11	001-099
	27	18	W3406	2510R	18		28-43-11	115-199
	28		W4216	0119	20		SPARE	001-099
	28	UNUSED						115-199
	29	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40900

Page 20

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40930P		AW2180/ /		PLUG- (continued)				001-099
D40930P		AW2180/ /		PLUG (continued)				115-199
	30		W4216	0047	22		28-21-23	001-099
	30		W3406	2509R	20		28-21-23	115-199
I	31	UNUSED						ALL
	32		W4216	0062	20		28-21-23	001-099
	32		W3406	2509B	20		28-21-23	115-199
I	33	UNUSED						ALL
	34		W4216	0106	22		SPARE	001-099
	34	UNUSED						115-199
	35		W4216	0108	20		SPARE	001-099
	35	UNUSED						115-199
	36		W4216	1025	22		27-18-11	001-099
	36		W3406	1025	20		27-18-11	115-199
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	S/R		W4216	1025Z			27-18-11	001-099
	S/R		W4216	YAAG			27-51-61	001-099
	S/R		W3406	1006Z			27-18-11	115-199
	S/R		W3406	1016Z			28-41-31	115-199
	S/R		W3406	1019Z			28-42-11	115-199
	S/R		W3406	1024Z			28-41-41	115-199
	S/R		W3406	1025Z			27-18-11	115-199
	S/R		W3406	2502Z			27-18-11	115-199
	S/R		W3406	2504Z			28-41-31	115-199
	S/R		W3406	2505Z			28-41-31	115-199
	S/R		W3406	2506Z			28-41-41	115-199
	S/R		W3406	2507Z			28-41-41	115-199
	S/R		W3406	2509Z			28-21-23	115-199
	S/R		W3406	2510Z			28-43-11	115-199
	S/R		W3406	2511Z			27-51-61	115-199
I	S/R		W3406	3503Z			28-26-11	115-199
I	S/R		W3406	4251Z			27-51-61	115-199
D40942J		AW2164/ /		PLUG				001-099
D40942J		AW2164/ /		RCPT				115-199
	1		W3406	3504Y	20		28-22-21	001-099
	1		W2628	0044	20		28-22-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40900

Page 21

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40942J		AW2164/ /		PLUG (continued)				001-099
D40942J		AW2164/ /		RCPT (continued)				115-199
	2		W3406	3504B	20		28-22-21	001-099
	2		W2628	0042	20		28-22-21	115-199
	3		W3406	3504R	20		28-22-21	001-099
	3		W2628	0043	20		28-22-21	115-199
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	S/R		W3406	3504Z			28-22-21	001-099
	S/R		W2628	YAAA			28-22-21	115-199
D40942P		AW2164/ /		PLUG				ALL
	1		W2628	0044	20		28-22-21	001-099
	1		W3406	3504Y	20		28-22-21	115-199
	2		W2628	0042	20		28-22-21	001-099
	2		W3406	3504B	20		28-22-21	115-199
	3		W2628	0043	20		28-22-21	001-099
	3		W3406	3504R	20		28-22-21	115-199
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	S/R		W2628	YAAA			28-22-21	001-099
	S/R		W3406	3504Z			28-22-21	115-199
D40944J		AW2156/ /		RCPT				001-099
D40944J		AW2156/ /		RCPT-				115-199
	1		W3406	2501R	20		28-21-21	001-099
	1		W4212	2502R	22		28-21-21	115-199
	2		W3406	2501B	20		28-21-21	001-099
	2		W4212	2502B	22		28-21-21	115-199
	3		W3406	2501ZI			28-21-21	001-099
	3		W4212	2502Z			28-21-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40900

Page 22

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40944J		AW2156/ /		RCPT (continued)				001-099
D40944J		AW2156/ /		RCPT- (continued)				115-199
	4	UNUSED						001-099
	4		W4212	0017	22		SPARE	115-199
	5	UNUSED						001-099
	5		W4212	0018	22		SPARE	115-199
	6		W3406	3501Y	20		27-58-11	001-099
	6		W4212	0005	22		27-58-11	115-199
	7		W3406	3501B	20		27-58-11	001-099
	7		W4212	0004	22		27-58-11	115-199
	8		W3406	3501R	20		27-58-11	001-099
	8		W4212	0003	22		27-58-11	115-199
	9		W3406	2519R	20		27-51-41	001-099
	9		W4212	2006R	22		27-51-41	115-199
	10		W3406	2519B	20		27-51-41	001-099
	10		W4212	2006B	22		27-51-41	115-199
	11		W3406	4252R	20		27-51-41	001-099
	11		W4212	4002R	22		27-51-41	115-199
	12		W3406	4252B	20		27-51-41	001-099
	12		W4212	4002B	22		27-51-41	115-199
	13		W3406	4252Y	20		27-51-41	001-099
	13		W4212	4002Y	22		27-51-41	115-199
	14		W3406	4252G	20		27-51-41	001-099
	14		W4212	4002G	22		27-51-41	115-199
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	S/R		W3406	2501ZO			28-21-21	001-099
	S/R		W3406	2519Z			27-51-41	001-099
	S/R		W3406	3501Z			27-58-11	001-099
	S/R		W3406	4252Z			27-51-41	001-099
	S/R		W4212	YAAA			27-51-41	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40900

Page 23

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40944P		AW2156/ /		PLUG				ALL
	1		W4212	2502R	22		28-21-21	001-099
	1		W3406	2501R	20		28-21-21	115-199
	2		W4212	2502B	22		28-21-21	001-099
	2		W3406	2501B	20		28-21-21	115-199
	3		W4212	2502Z			28-21-21	001-099
	3		W3406	2501ZI			28-21-21	115-199
	4		W4212	0017	22		SPARE	001-099
	4	UNUSED						115-199
	5		W4212	0018	22		SPARE	001-099
	5	UNUSED						115-199
	6		W4212	0005	22		27-58-11	001-099
	6		W3406	3501Y	20		27-58-11	115-199
	7		W4212	0004	22		27-58-11	001-099
	7		W3406	3501B	20		27-58-11	115-199
	8		W4212	0003	22		27-58-11	001-099
	8		W3406	3501R	20		27-58-11	115-199
	9		W4212	2006R	22		27-51-41	001-099
	9		W3406	2519R	20		27-51-41	115-199
	10		W4212	2006B	22		27-51-41	001-099
	10		W3406	2519B	20		27-51-41	115-199
	11		W4212	4002R	22		27-51-41	001-099
	11		W3406	4252R	20		27-51-41	115-199
	12		W4212	4002B	22		27-51-41	001-099
	12		W3406	4252B	20		27-51-41	115-199
	13		W4212	4002Y	22		27-51-41	001-099
	13		W3406	4252Y	20		27-51-41	115-199
	14		W4212	4002G	22		27-51-41	001-099
	14		W3406	4252G	20		27-51-41	115-199
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	S/R		W4212	YAAB			27-51-41	001-099
	S/R		W3406	2501ZO			28-21-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40900

Page 24

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40944P		AW2156/ /		PLUG (continued)				ALL
	S/R		W3406	2519Z			27-51-41	115-199
	S/R		W3406	3501Z			27-58-11	115-199
	S/R		W3406	4252Z			27-51-41	115-199
D40946J		P54/ /		RCPT				ALL
	1		W1120	0197	24		26-15-11	001-099
	1		W1120	0157	24		26-15-11	115-199
	2		W1120	0198	24		26-15-11	001-099
	2		W1120	0155	24		26-15-11	115-199
	3		W1120	0221	24		26-15-12	001-099
	3		W1120	0173	24		26-15-12	115-199
	4		W1120	0220	24		26-15-12	001-099
	4		W1120	0174	24		26-15-12	115-199
	5	UNUSED						ALL
	6		W1120	0327	20		26-22-21	001-099
	6		W1120	0244	20		26-22-21	115-199
	7	UNUSED						001-099
	7		W1120	0243	20		26-22-21	115-199
	8		W1120	0199	24		26-15-11	001-099
	8		W1120	0163	24		26-15-11	115-199
	9		W1120	0245	24		26-16-11	001-099
	9		W1120	0188	24		26-16-11	115-199
	10	UNUSED						ALL
	11		W1120	0254	22		28-25-21	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W1120	0276	22		31-51-33	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40900

Page 25

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40946J		P54/ /		RCPT (continued)				ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D40946P		P054-00/ /		PLUG				001-099
D40946P		P54/ /		PLUG				115-199
	1		W2134	0002	22		26-15-11	ALL
	2		W2134	0030	22		26-15-11	ALL
	3		W2134	0004	22		26-15-12	ALL
	4		W2134	0005	22		26-15-12	ALL
	5	UNUSED						ALL
	6		W2134	0034	20		26-22-21	001-099
	6		W2134	0011	20		26-22-21	115-199
	7	UNUSED						001-099
	7		W2134	0012	20		26-22-21	115-199
	8		W2134	0028	22		26-15-11	ALL
	9		W2134	0026	22		26-16-11	ALL
	10	UNUSED						ALL
	11		W2134	0018	22		28-25-21	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W2134	0024	22		31-51-33	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40900

Page 26

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40956J		P034-00/ /		RCPT				ALL
	1		W1128	0109	24		24-22-22	ALL
	2		W1128	0116	24		24-27-11	ALL
	3		W1128	0166	24		24-51-71	ALL
	4		W1128	0117	24		24-27-21	ALL
	5		W1128	0106	20		24-22-12	ALL
	6		W1128	0105	24		24-22-12	ALL
	7		W1128	0104	24		24-22-12	ALL
	8		W1128	0107	20		24-22-12	ALL
	9		W1128	0152	22		33-27-11	ALL
	10	UNUSED						001-099
	10		W1128	0151	22		33-27-11	115-199
	11	UNUSED						001-099
	11		W1128	0150	22		33-27-11	115-199
	12	UNUSED						ALL
	13	UNUSED						001-099
	13		W1128	0154	22		33-27-21	115-199
	14	UNUSED						001-099
	14		W1128	0153	22		33-27-21	115-199
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W1128	0042	20		25-31-11	001-099
	21	UNUSED						115-199
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W1128	0108	24		24-22-22	ALL
	26		W1190	0100	24		24-34-11	001-099
	26		W1190	0100	22		24-34-11	115-199
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D40956P		P034-00/ /		PLUG-				ALL
	1		W4502	0025	24		24-22-22	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40900

Page 27

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40956P		P034-00/ /		PLUG- (continued)				ALL
	2		W4502	0026	24		24-27-11	ALL
	3		W4502	0033	24		24-51-71	ALL
	4		W4502	0052	24		24-27-21	ALL
	5		W4502	0054	20		24-22-12	ALL
	6		W4502	0055	24		24-22-12	ALL
	7		W4502	0059	24		24-22-12	ALL
	8		W4502	0060	20		24-22-12	ALL
	9		W4502	0044	22		33-27-11	ALL
	10		W4502	0045	22		SPARE	001-099
	10		W4502	0045	22		33-27-11	115-199
	11		W4502	0047	22		SPARE	001-099
	11		W4502	0047	22		33-27-11	115-199
	12	UNUSED						001-099
	12		W4502	0029	22		SPARE	115-199
	13	UNUSED						001-099
	13		W4502	0048	22		33-27-21	115-199
	14	UNUSED						001-099
	14		W4502	0049	22		33-27-21	115-199
	15		W4502	0140	20		SPARE	001-099
	15	UNUSED						115-199
	16	16	W4502	0062	16		SPARE	ALL
	17		W4502	0088	24		SPARE	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W4502	0063	20		25-31-11	001-099
	21	UNUSED						115-199
	22	UNUSED						001-099
	22		W4502	0608	22		SPARE	115-199
	23	UNUSED						001-099
	23		W4502	0609	22		SPARE	115-199
	24	UNUSED						001-099
	24		W4502	0610	22		SPARE	115-199
	25		W4502	0085	22		24-22-22	ALL
	26		W4502	0604	24		24-34-11	001-099
	26		W4502	0604	22		24-34-11	115-199
	27		W4502	0605	22		SPARE	ALL
	28		W4502	0606	22		SPARE	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40900

Page 28

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40956P		P034-00/ /		PLUG- (continued)				ALL
	31	UNUSED						ALL
D40957J		1715/300/L002		RCPT-				ALL
	1		W2805	0003Y	20		27-41-11	ALL
	2		W2805	0004Y	20		27-41-11	ALL
	3		W2805	0005	20		27-41-11	ALL
	4		W2805	0007Y	20		27-41-11	ALL
	5	UNUSED						ALL
	6		W2805	0008	20		27-41-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D40957P		AA1715/ /		PLUG-				ALL
	1		W2631	0003Y	22		27-41-11	ALL
	2		W2631	0004Y	22		27-41-11	ALL
	3		W2631	0005Y	22		27-41-11	ALL
	4		W2631	0006Y	22		27-41-11	ALL
	5	UNUSED						ALL
	6		W2631	0007	22		27-41-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D40959J		AA1715/ /		RCPT-				ALL
	1		W2815	0003Y	20		27-41-21	ALL
	2		W2815	0004Y	20		27-41-21	ALL
	3		W2815	0005	20		27-41-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40900

Page 29

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40959J		AA1715/ /		RCPT- (continued)				ALL
	4		W2815	0007Y	20		27-41-21	ALL
	5	UNUSED						ALL
	6		W2815	0008	20		27-41-21	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D40959P		AA1715/ /		PLUG-				ALL
	1		W2617	0002Y	22		27-41-21	ALL
	2		W2617	0003Y	22		27-41-21	ALL
	3		W2617	0004	22		27-41-21	ALL
	4		W2617	0005Y	22		27-41-21	ALL
	5	UNUSED						ALL
	6		W2617	0006	22		27-41-21	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D40964J		AC1090/ /		RCPT				ALL
	1		W4206	2003B	22		32-61-13	ALL
	2		W4206	2003R	22		32-61-13	ALL
	3		W4206	0043	20		29-35-11	ALL
	4		W4206	2004R	22		32-61-13	ALL
	5		W4206	2004B	22		32-61-13	ALL
	6		W4206	0007	20		29-35-11	ALL
	7		W4206	0035	20		29-31-11	ALL
	8		W4206	2008B	20		29-31-11	ALL
	9		W4206	2008R	20		29-31-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40900

Page 30

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40964J		AC1090/ /		RCPT (continued)				ALL
	10		W4206	2007R	20		29-32-41	ALL
	11		W4206	2007B	20		29-32-41	ALL
	12		W4206	0034	20		29-11-12	ALL
	13		W4206	0038	22		SPARE	ALL
	14	UNUSED						ALL
D40964P		AC1090/ /		PLUG				ALL
	1		W2412	2511B	20		32-61-13	ALL
	2		W2412	2511R	20		32-61-13	ALL
	3		W2412	2526R	18		29-35-11	ALL
	4		W2412	2502R	20		32-61-13	ALL
	5		W2412	2502B	20		32-61-13	ALL
	6		W2412	2526B	18		29-35-11	ALL
	7		W2412	3501Y	20		29-31-11	ALL
	8		W2412	3501B	20		29-31-11	ALL
	9		W2412	3501R	20		29-31-11	ALL
	10		W2412	2503R	18		29-32-41	ALL
	11		W2412	2503B	18		29-32-41	ALL
	12		W2412	1041	20		29-11-12	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	S/R		W2412	1041Z			29-11-12	ALL
	S/R		W2412	2502ZO			32-61-13	ALL
	S/R		W2412	2503Z			29-32-41	ALL
	S/R		W2412	2511ZO			32-61-13	ALL
	S/R		W2412	2526Z			29-35-11	ALL
	S/R		W2412	3501Z			29-31-11	ALL
	DED		W2412	2502ZI			32-61-13	ALL
	DED		W2412	2511ZI			32-61-13	ALL
D40970J		P50/ /		RCPT				ALL
	1		W1140	0112	24		21-51-13	ALL
	2		W1140	0113	24		21-51-13	ALL
	3		W1140	0114	24		21-51-13	ALL
	4		W1140	0115	24		21-51-13	ALL
	5		W1140	0190	24		36-11-31	ALL
	6		W1140	0242	24		26-18-21	ALL
	7		W1140	2501R	24		28-21-21	ALL
	8		W1140	2501B	24		28-21-21	ALL
	9		W1140	2501Z			28-21-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40900

Page 31

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40970J		P50/ /		RCPT (continued)				ALL
	10		W1140	0132	24		21-51-21	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W1140	0123	22		28-21-21	ALL
	14		W1140	0150	24		21-51-25	ALL
	15		W1140	0223	24		21-51-25	ALL
	16		W1140	0225	24		21-51-25	ALL
	17		W1140	0153	24		21-51-25	ALL
	18		W1140	0226	24		21-51-25	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W1140	0179	24		36-11-21	ALL
	22	UNUSED						ALL
	23		W1140	2502R	24		28-21-21	ALL
	24		W1140	2502B	24		28-21-21	ALL
	25		W1140	2502Z			28-21-21	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W1140	0344	24		36-11-21	001-099
	32	UNUSED						115-199
	33		W1140	0345	24		36-11-21	001-099
	33	UNUSED						115-199
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39		W1140	0208	22		36-11-21	ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40900

Page 32

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40970J		P50/ /		RCPT (continued)				ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D40970P		P050-00/ /		PLUG				001-099
D40970P		P50/ /		PLUG				115-199
	1		W2070	0180	24		21-51-13	ALL
	2		W2070	0181	24		21-51-13	ALL
	3		W2070	0182	24		21-51-13	ALL
	4		W2070	0183	24		21-51-13	ALL
	5		W2070	0119	24		36-11-31	ALL
	6		W2070	0050	22		26-18-21	001-099
	6		W2070	0050	24		26-18-21	115-199
	7		W2070	2501R	22		28-21-21	ALL
	8		W2070	2501B	22		28-21-21	ALL
	9		W2070	2501Z			28-21-21	ALL
	10		W2070	0185	24		21-51-21	ALL
	11	UNUSED						ALL
	12	UNUSED						001-099
	12		W2070	0146	24		SPARE	115-199
	13		W2070	0157	22		28-21-21	ALL
	14		W2070	0189	24		21-51-25	ALL
	15		W2070	0191	24		21-51-25	ALL
	16		W2070	0192	24		21-51-25	ALL
	17		W2070	0193	24		21-51-25	ALL
	18		W2070	0194	24		21-51-25	ALL
	19	UNUSED						ALL
	20		W2070	0412	22		SPARE	001-099
	20		W2070	0412	20		SPARE	115-199
	21		W2070	0136	24		36-11-21	ALL
	22	UNUSED						ALL
	23		W2070	2502R	22		28-21-21	ALL
	24		W2070	2502B	22		28-21-21	ALL
	25		W2070	2502Z			28-21-21	ALL
	26	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40900

Page 33

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40970P		P050-00/ /		PLUG (continued)				001-099
D40970P		P50/ /		PLUG (continued)				115-199
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W2070	0433	20		SPARE	ALL
	30	UNUSED						001-099
	30		W2070	0524	22		SPARE	115-199
	31	UNUSED						001-099
	31		W2070	0525	22		SPARE	115-199
	32		W2070	0133	24		36-11-21	001-099
	32	UNUSED						115-199
	33		W2070	0137	24		36-11-21	001-099
	33	UNUSED						115-199
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39		W2070	0135	20		36-11-21	ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D40972J		P50/ /		RCPT				ALL
	1		W1140	0091	24		21-51-23	ALL
	2	UNUSED						ALL
	3		W1140	0093	24		21-51-23	ALL
	4		W1140	0094	24		21-51-23	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40900

Page 34

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40972J		P50/ /		RCPT (continued)				ALL
	5		W1140	0046	24		21-51-11	ALL
	6		W1140	0118	24		21-51-15	ALL
	7		W1140	0234	24		21-51-15	ALL
	8		W1140	0236	24		21-51-15	ALL
	9		W1140	0237	24		21-51-15	ALL
	10		W1140	0232	24		21-51-15	ALL
	11		W1140	0028	24		21-51-11	ALL
	12	UNUSED						ALL
	13		W1140	0092	24		21-51-23	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W1140	0240	24		36-11-11	001-099
	18	UNUSED						115-199
	19		W1140	0247	24		36-11-11	001-099
	19	UNUSED						115-199
	20		W1140	0431	24		26-18-11	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W1140	0038	24		21-51-11	001-099
	29	UNUSED						115-199
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40900

Page 35

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40972J		P50/ /		RCPT (continued)				ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D40972P		P050-00/ /		PLUG				001-099
D40972P		P50/ /		PLUG				115-199
	1		W2066	0230	24		21-51-23	ALL
	2		W2066	0094	22		SPARE	ALL
	3		W2066	0232	24		21-51-23	ALL
	4		W2066	0233	24		21-51-23	ALL
	5		W2066	0220	24		21-51-11	ALL
	6		W2066	0223	24		21-51-15	ALL
	7		W2066	0225	24		21-51-15	ALL
	8		W2066	0226	24		21-51-15	ALL
	9		W2066	0227	24		21-51-15	ALL
	10		W2066	0228	24		21-51-15	ALL
	11		W2066	0421	24		21-51-11	ALL
	12		W2066	0129	24		SPARE	ALL
	13		W2066	0231	24		21-51-23	ALL
	14	18	W2066	0268	18		SPARE	ALL
	15		W2066	0269	20		SPARE	ALL
	16		W2066	0008	22		SPARE	ALL
	17		W2066	0428	24		SPARE	ALL
	18		W2066	0038	24		36-11-11	001-099
	18	UNUSED						115-199
	19		W2066	0271	24		36-11-11	001-099
	19	UNUSED						115-199
	20		W2066	0545	22		26-18-11	ALL
	21	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D40900

Page 36

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40972P		P050-00/ /		PLUG (continued)				001-099
D40972P		P50/ /		PLUG (continued)				115-199
	21		W2066	0521	20		SPARE	115-199
	22	UNUSED						001-099
	22		W2066	0522	20		SPARE	115-199
	23	UNUSED						ALL
	24		W2066	0557	20		SPARE	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W2066	0526	24		SPARE	ALL
	28		W2066	0273	24		SPARE	ALL
	29		W2066	0286	24		21-51-11	001-099
	29	UNUSED						115-199
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40900

Page 37

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40974J		P50/ /		RCPT				ALL
	1		W1140	0045	22		21-51-11	ALL
	2		W1140	0044	22		21-51-11	ALL
	3		W1140	0043	22		21-51-11	ALL
	4		W1140	0042	24		21-51-11	ALL
	5	UNUSED						ALL
	6		W1140	0108	24		21-51-13	ALL
	7		W1140	0109	24		21-51-13	ALL
	8		W1140	0106	24		21-51-13	ALL
	9		W1140	0107	24		21-51-13	ALL
	10		W1140	0110	24		21-51-13	ALL
	11		W1140	0111	24		21-51-13	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W1140	0102	24		21-51-13	ALL
	17		W1140	0103	24		21-51-13	ALL
	18		W1140	0104	24		21-51-13	ALL
	19		W1140	0099	24		21-51-13	ALL
	20		W1140	0187	24		36-11-11	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W1140	0122	24		21-51-15	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W1140	0182	22		36-11-11	ALL
	32		W1140	0147	24		21-51-15	ALL
	33		W1140	0522	24		21-51-11	ALL
	34	UNUSED						ALL
	35		W1140	0440	24		21-51-14	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W1140	0100	24		21-51-13	ALL
	39		W1140	0501	24		21-51-13	ALL
	40		W1140	0101	24		21-51-13	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40900

Page 38

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40974J		P50/ /		RCPT (continued)				ALL
	41		W1140	0105	24		21-51-13	ALL
	42		W1140	0446	24		21-51-13	ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51		W1140	0238	24		21-51-15	ALL
	52		W1140	0239	24		21-51-15	ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D40974P		P050-00/ /		PLUG				001-099
D40974P		P50/ /		PLUG				115-199
	1		W4006	0055	20		21-51-11	ALL
	2		W4006	0056	20		21-51-11	ALL
	3		W4006	0057	20		21-51-11	ALL
	4		W4006	0058	20		21-51-11	ALL
	5	UNUSED						ALL
	6		W4006	0060	24		21-51-13	ALL
	7		W4006	0061	24		21-51-13	ALL
	8		W4006	0078	24		21-51-13	ALL
	9		W4006	0079	24		21-51-13	ALL
	10		W4006	0080	24		21-51-13	ALL
	11		W4006	0081	24		21-51-13	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W4006	0094	24		21-51-13	ALL
	17		W4006	0095	24		21-51-13	ALL
	18		W4006	0096	24		21-51-13	ALL
	19		W4006	0091	24		21-51-13	ALL
	20		W4006	0098	24		36-11-11	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40900

Page 39

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40974P		P050-00/ /		PLUG (continued)				001-099
D40974P		P50/ /		PLUG (continued)				115-199
	23		W4006	0166	24		21-51-15	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W4006	0118	20		36-11-11	ALL
	32		W4006	0165	24		21-51-15	ALL
	33		W4006	0126	24		21-51-11	ALL
	34	UNUSED						ALL
	35		W4006	0050	24		21-51-14	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W4006	0092	24		21-51-13	ALL
	39		W4006	0099	24		21-51-13	ALL
	40		W4006	0093	24		21-51-13	ALL
	41		W4006	0097	24		21-51-13	ALL
	42		W4006	0085	24		21-51-13	ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						001-099
	50		W4006	0309	22		SPARE	115-199
	51		W4006	0162	24		21-51-15	ALL
	52		W4006	0160	24		21-51-15	ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D40976J		P50/ /		RCPT				ALL
	1		W1140	0140	24		21-51-21	ALL
	2		W1140	0135	24		21-51-21	ALL
	3		W1140	0134	24		21-51-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40900

Page 40

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40976J		P50/ /		RCPT (continued)				ALL
	4		W1140	0149	24		21-51-24	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1140	0228	24		21-51-25	ALL
	8		W1140	0089	24		21-51-23	ALL
	9		W1140	0081	24		21-51-23	ALL
	10		W1140	0083	24		21-51-23	ALL
	11		W1140	0082	24		21-51-23	ALL
	12		W1140	0090	24		21-51-23	ALL
	13		W1140	0077	24		21-51-23	ALL
	14		W1140	0078	24		21-51-23	ALL
	15		W1140	0086	24		21-51-23	ALL
	16		W1140	0084	24		21-51-23	ALL
	17		W1140	0087	24		21-51-23	ALL
	18		W1140	0088	24		21-51-23	ALL
	19		W1140	0085	24		21-51-23	ALL
	20		W1140	0080	24		21-51-23	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W1140	0445	24		21-51-21	ALL
	24	UNUSED						001-099
	24		W1140	0038	24		21-51-11	115-199
	25	UNUSED						ALL
	26		W1140	0136	24		21-51-21	ALL
	27		W1140	0142	24		21-51-21	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W1140	0151	24		21-51-25	ALL
	39		W1140	0231	24		21-51-25	ALL
	40		W1140	0443	24		21-51-23	ALL
	41		W1140	0227	24		21-51-25	ALL
	42	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D40900

Page 41

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40976J		P50/ /		RCPT (continued)				ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D40976P		P050-00/ /		PLUG				ALL
	1		W4106	0041	20		21-51-21	ALL
	2		W4106	0042	20		21-51-21	ALL
	3		W4106	0043	20		21-51-21	ALL
	4		W4106	0067	24		21-51-24	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W4106	0167	24		21-51-25	ALL
	8		W4106	0049	24		21-51-23	ALL
	9		W4106	0047	24		21-51-23	ALL
	10		W4106	0050	24		21-51-23	ALL
	11		W4106	0051	24		21-51-23	ALL
	12		W4106	0052	24		21-51-23	ALL
	13		W4106	0166	24		21-51-23	ALL
	14		W4106	0054	24		21-51-23	ALL
	15		W4106	0055	24		21-51-23	ALL
	16		W4106	0056	24		21-51-23	ALL
	17		W4106	0057	24		21-51-23	ALL
	18		W4106	0058	24		21-51-23	ALL
	19		W4106	0059	24		21-51-23	ALL
	20		W4106	0048	24		21-51-23	ALL
	21	UNUSED						001-099
	21		W4106	0109	24		SPARE	115-199
	22	UNUSED						ALL
	23		W4106	0044	20		21-51-21	ALL
	24		W4106	0105	24		SPARE	001-099

HOOKUP LIST

D280N032

91-21-51

Section D40900

Page 42

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40976P		P050-00/ /		PLUG (continued)				ALL
	24		W4106	0105	24		21-51-11	115-199
	25	UNUSED						ALL
	26		W4106	0107	24		21-51-21	ALL
	27		W4106	0108	24		21-51-21	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W4106	0172	24		21-51-25	ALL
	39		W4106	0173	24		21-51-25	ALL
	40		W4106	0240	24		21-51-23	ALL
	41		W4106	0169	24		21-51-25	ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						001-099
	49		W4106	2029B	24		SPARE	115-199
	50	UNUSED						001-099
	50		W4106	2029R	24		SPARE	115-199
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D40978J		P37/ /		RCPT				ALL
	1	UNUSED						001-099
	1		W1270	0121	24		24-41-12	115-199
	2	UNUSED						001-099
	2		W1270	0120	24		24-41-12	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40900

Page 43

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40978J		P37/ /		RCPT (continued)				ALL
	3		W1270	0090	24		38-32-21	001-099
	3		W1270	0090	20		38-32-21	115-199
	4		W1270	0119	22		33-31-11	ALL
	5	UNUSED						ALL
	6		W1270	0175	24		24-27-41	ALL
	7		W1270	0186	24		24-28-11	ALL
	8		W1270	0185	24		24-28-11	ALL
	9	UNUSED						001-099
	9		W1270	0015	20		24-51-51	115-199
	10	UNUSED						001-099
	10		W1270	0014	20		24-51-51	115-199
	11	UNUSED						ALL
	12		W1270	0037	22		33-26-11	001-099
	12		W1270	0037	20		33-26-11	115-199
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W1270	6300	20		24-51-61	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
D40978P		P037-00/ /		PLUG-				ALL
	1	UNUSED						001-099
	1		W4504	0051	24		24-41-12	115-199
	2	UNUSED						001-099
	2		W4504	0050	24		24-41-12	115-199
	3		W4504	0064	24		38-32-21	001-099
	3		W4504	0064	20		38-32-21	115-199
	4		W4504	0065	22		33-31-11	ALL
	5	UNUSED						001-099
	5		W4504	0061	18		SPARE	115-199
	6		W4504	0047	24		24-27-41	ALL
	7		W4504	0009	24		24-28-11	ALL
	8		W4504	0008	24		24-28-11	ALL
	9	UNUSED						001-099
	9		W4504	0059	24		24-51-51	115-199
	10	UNUSED						001-099
	10		W4504	0067	20		24-51-51	115-199
	11	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D40900

Page 44

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40978P		P037-00/ /		PLUG- (continued)				ALL
	11		W4504	0603	20		SPARE	115-199
	12		W4504	0066	22		33-26-11	ALL
	13	UNUSED						001-099
	13		W4504	0604	20		SPARE	115-199
	14	UNUSED						001-099
	14		W4504	0605	20		SPARE	115-199
	15	UNUSED						ALL
	16		W4504	0609	20		SPARE	ALL
	17		W4504	0610	20		24-51-61	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
D40996J		E003-04/ /		RCPT				ALL
	1		W1280	0328	22		27-11-11	001-009, 115-199
	1		W1280	0643	22		27-11-11	010-099
	2		W1280	0329	22		27-11-11	001-009, 115-199
	2		W1280	0644	22		27-11-11	010-099
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W1280	0507	20		28-41-11	ALL
	10		W1280	FRTB			28-41-11	ALL
	11		W1280	0330	24		34-46-11	ALL
	12	UNUSED						001-099
	12	18	W1280	2029R	18		28-43-11	115-199
	13	UNUSED						ALL
	14	UNUSED						001-099
	14	18	W1280	2029B	18		28-43-11	115-199
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W1280	2080B	24		28-41-14	ALL
	18		W1280	2080R	24		28-41-14	ALL
	19	UNUSED						001-099
	19		W1280	0357	20		33-45-11	115-199
	20		W1280	0358	20		33-45-11	ALL
	21	UNUSED						ALL
	22		W1280	2572R	22		28-41-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D40900

Page 45

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40996J		E003-04/ /		RCPT (continued)				ALL
	23		W1280	2572B	22		28-41-11	ALL
	24	UNUSED						ALL
	25		W1280	0341	22		28-41-13	001-099
	25		W1280	0341	20		28-41-13	115-199
	26		W1280	0342	22		28-41-13	001-099
	26		W1280	0342	20		28-41-13	115-199
	27		W1280	2099B	24		28-41-13	001-099
	27		W1280	2099B	22		28-41-13	115-199
	28		W1280	2099R	24		28-41-13	001-099
	28		W1280	2099R	22		28-41-13	115-199
	29		W1280	0357	20		33-45-11	001-099
	29	UNUSED						115-199
	30	UNUSED						ALL
	31	UNUSED						ALL
			W1280	FRTA			28-41-11	001-099
			W1280	2572Z			28-41-11	ALL
			W1280	FRTB			28-41-11	ALL
			W1280	0614	20		28-41-11	115-199
D40996P		E003-04/ /		PLUG				001-099
D40996P		E3-4/ /		PLUG				115-199
	1		W2066	0167	22		27-11-11	ALL
	2		W2066	0166	22		27-11-11	ALL
	3		W2066	0557	20		SPARE	ALL
	4	UNUSED						001-099
	4		W2066	2001B	24		SPARE	115-199
	5	UNUSED						001-099
	5		W2066	2005B	24		SPARE	115-199
	6	UNUSED						001-099
	6		W2066	2006R	24		SPARE	115-199
	7	UNUSED						001-099
	7		W2066	2005R	24		SPARE	115-199
	8	UNUSED						001-099
	8		W2066	0270	24		SPARE	115-199
	9		W2066	0458	20		28-41-11	ALL
	10		W2066	2509Z			28-41-11	ALL
	11		W2066	0336	24		34-46-11	ALL
	12	UNUSED						001-099
	12	18	W2066	2010R	18		28-43-11	115-199
	13	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D40900

Page 46

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D40996P		E003-04/ /		PLUG (continued)				001-099
D40996P		E3-4/ /		PLUG (continued)				115-199
	13		W2066	2007B	24		SPARE	115-199
	14	UNUSED						001-099
	14	18	W2066	2010B	18		28-43-11	115-199
	15	UNUSED						001-099
	15		W2066	0277	24		SPARE	115-199
	16	UNUSED						001-099
	16		W2066	2007R	24		SPARE	115-199
	17		W2066	2004B	24		28-41-14	ALL
	18		W2066	2004R	24		28-41-14	ALL
	19		W2066	0154	24		SPARE	001-099
	19		W2066	0806	20		33-45-11	115-199
	20		W2066	0807	20		33-45-11	ALL
	21	UNUSED						001-099
	21		W2066	2006B	24		SPARE	115-199
	22		W2066	2509R	22		28-41-11	ALL
	23		W2066	2509B	22		28-41-11	ALL
	24	UNUSED						001-099
	24		W2066	2001R	24		SPARE	115-199
	25		W2066	0559	22		28-41-13	ALL
	26		W2066	0560	22		28-41-13	ALL
	27		W2066	2014B	24		28-41-13	001-099
	27		W2066	2014B	22		28-41-13	115-199
	28		W2066	2014R	24		28-41-13	001-099
	28		W2066	2014R	22		28-41-13	115-199
	29		W2066	0806	20		33-45-11	001-099
	29	UNUSED						115-199
	30	UNUSED						ALL
	31	UNUSED						ALL
	CAP	Y	W2066	2008B	24		SPARE	115-199
	CAP	Y	W2066	2008R	24		SPARE	115-199
	CAP	Y	W2066	2009B	24		SPARE	115-199
	CAP	Y	W2066	2009R	24		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D40900

Page 47 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41000P		P026-00/ /		PLUG				001-099
D41000P		P26/ /		PLUG				115-199
	1		W2066	0204	22		33-16-11	ALL
	2		W2066	0206	22		33-16-11	ALL
	3		W2066	0214	22		33-16-11	ALL
	4		W2066	0301	24		33-16-12	ALL
	5		W2066	0210	20		33-16-11	ALL
	6		W2066	0209	20		33-16-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W2066	0197	22		33-16-11	ALL
	11		W2066	0016	22		33-16-12	ALL
	12		W2066	0213	22		33-16-13	001-099
	12		W2066	0423	22		33-16-11	115-199
	13		W2066	0299	22		33-16-12	ALL
	14		W2066	0211	20		33-16-11	ALL
	15		W2066	0208	20		33-16-11	ALL
	16		W2066	0212	22		33-16-13	001-099
	16		W2066	0284	22		33-16-11	115-199
	17		W2066	0207	20		33-16-11	ALL
	18		W2066	0070	22		33-16-12	ALL
	19		W2066	0300	22		33-16-12	ALL
	20		W2066	0203	22		33-16-11	ALL
	21		W2066	0199	22		33-16-11	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D41001J		E002-04/ /		RCPT				001-099
D41001J		E2-4/ /		RCPT				115-199
	1		W1177	5019R	24		34-21-21	ALL
	2		W1177	5019B	24		34-21-21	ALL
	3		W1177	FRAS			34-21-21	ALL
	4	UNUSED						001-099
	4		W1177	5082R	22		34-58-21	115-199
	5	UNUSED						001-099
	5		W1177	5082B	22		34-58-21	115-199
	6	UNUSED						001-099
	6		W1177	5082Z			34-58-21	115-199
	7	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41001J		E002-04/ /		RCPT (continued)				001-099
D41001J		E2-4/ /		RCPT (continued)				115-199
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1177	5057R	24		34-22-38	ALL
	11		W1177	5057B	24		34-22-38	ALL
	12		W1177	5057Z			34-22-38	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
			W1177	0098	20		34-21-21	ALL
			W1177	5019Z			34-21-21	ALL
			W1177	FRAS			34-21-21	ALL
D41001P		E002-04/ /		PLUG-				001-099
D41001P		E2-4/ /		PLUG-				115-199
	1		W4473	5064R	24		34-21-21	ALL
	2		W4473	5064B	24		34-21-21	ALL
	3		W4473	5064Z			34-21-21	ALL
	4	UNUSED						001-099
	4		W4473	5194R	22		34-58-21	115-199
	5	UNUSED						001-099
	5		W4473	5194B	22		34-58-21	115-199
	6	UNUSED						001-099
	6		W4473	5194Z			34-58-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41001P		E002-04/ /		PLUG- (continued)				001-099
D41001P		E2-4/ /		PLUG- (continued)				115-199
	7		W4473	5065R	24		SPARE	ALL
	8		W4473	5065B	24		SPARE	ALL
	9		W4473	5065Z			SPARE	ALL
	10		W4473	5066R	24		34-22-38	ALL
	11		W4473	5066B	24		34-22-38	ALL
	12		W4473	5066Z			34-22-38	ALL
	13		W4473	5075R	24		SPARE	001-099
	13	UNUSED						115-199
	14		W4473	5075B	24		SPARE	001-099
	14	UNUSED						115-199
	15		W4473	5075Z			SPARE	001-099
	15	UNUSED						115-199
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D41002P		P026-00/ /		PLUG				001-099
D41002P		P26/ /		PLUG				115-199
	1		W2066	0322	22		33-16-21	ALL
	2		W2066	0325	22		33-16-21	ALL
	3		W2066	0331	22		33-16-21	ALL
	4		W2066	0328	16		33-16-21	ALL
	5	UNUSED						ALL
	6		W2066	0327	22		33-16-21	ALL
	7	UNUSED						ALL
	8		W2066	0324	22		33-16-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41002P		P026-00/ /		PLUG (continued)				001-099
D41002P		P26/ /		PLUG (continued)				115-199
	9		W2066	0425	22		33-16-22	001-099
	9		W2066	0323	22		33-16-21	115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D41004P		P026-00/ /		PLUG				001-099
D41004P		P26/ /		PLUG				115-199
	1		W2070	0219	22		33-16-31	ALL
	2		W2070	0284	22		33-16-32	ALL
	3		W2070	0281	22		33-16-31	ALL
	4		W2070	0230	22		33-16-32	ALL
	5	UNUSED						ALL
	6		W2070	0282	22		33-16-31	ALL
	7		W2070	0270	22		33-16-31	ALL
	8		W2070	0229	22		33-16-32	ALL
	9		W2070	0283	20		33-16-31	ALL
	10		W2070	0317	22		33-11-31	ALL
	11		W2070	0318	22		33-11-31	ALL
	12		W2070	0220	24		33-11-31	ALL
	13		W2070	0319	22		33-11-31	ALL
	14		W2070	2503B	24		33-11-11	ALL
	15		W2070	2503R	24		33-11-11	ALL
	16	UNUSED						ALL
	17	UNUSED						001-099
	17		W2070	0396	22		33-11-31	115-199
	18	UNUSED						ALL
	19		W2070	0214	24		33-11-11	ALL
	20		W2070	0328	24		33-11-11	ALL
	21		W2070	0380	24		33-11-31	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D41006P		P026-00/ /		PLUG				001-099
D41006P		P26/ /		PLUG				115-199
	1		W2070	0290	20		33-16-41	ALL
	2		W2070	0123	22		33-16-41	ALL
	3		W2070	0293	22		33-16-41	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 4

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41006P		P026-00/ /		PLUG (continued)				001-099
D41006P		P26/ /		PLUG (continued)				115-199
	4		W2070	0295	22		33-16-41	ALL
	5		W2070	0289	22		33-16-41	ALL
	6		W2070	0292	20		33-16-41	ALL
	7		W2070	0297	22		33-16-41	ALL
	8		W2070	0294	22		33-16-41	ALL
	9		W2070	0291	20		33-16-41	ALL
	10		W2070	0039	22		33-16-41	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W2070	0322	24		33-11-41	ALL
	24		W2070	0323	20		33-11-41	ALL
D41008P		P026-00/ /		PLUG				001-099
D41008P		P26/ /		PLUG				115-199
	1		W2078	0227	22		33-16-51	ALL
	2		W2078	0230	22		33-16-51	ALL
	3		W2078	0215	22		33-16-51	ALL
	4		W2078	0224	22		33-16-51	ALL
	5	UNUSED						ALL
	6		W2078	0198	24		33-11-31	ALL
	7	UNUSED						001-099
	7		W2078	0201	22		33-11-31	115-199
	8	UNUSED						ALL
	9		W2078	0222	22		33-16-51	ALL
	10		W2078	0219	20		33-16-51	ALL
	11		W2078	0225	22		33-16-51	ALL
	12		W2078	0217	20		33-16-51	ALL
	13		W2078	0223	22		33-16-51	ALL
	14		W2078	0220	20		33-16-51	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 5

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41008P		P026-00/ /		PLUG (continued)				001-099
D41008P		P26/ /		PLUG (continued)				115-199
	15		W2078	0308	22		33-16-52	ALL
	16		W2078	0221	22		33-16-51	ALL
	17		W2078	0304	22		33-16-51	ALL
	18		W2078	0029	22		33-16-51	ALL
	19		W2078	0238	24		33-16-52	ALL
	20		W2078	0218	22		33-16-51	ALL
	21		W2078	0216	20		33-16-51	ALL
	22		W2078	0199	24		33-11-31	ALL
	23		W2078	0309	22		33-16-52	ALL
	24	UNUSED						ALL
D41010P		P026-00/ /		PLUG				001-099
D41010P		P26/ /		PLUG				115-199
	1		W2078	0250	22		33-16-62	ALL
	2		W2078	0242	22		33-16-61	ALL
	3		W2078	0246	22		33-16-61	ALL
	4		W2078	0245	22		33-16-61	ALL
	5		W2078	0249	22		33-16-62	ALL
	6		W2078	0244	20		33-16-61	ALL
	7		W2078	0505	22		33-16-61	ALL
	8		W2078	0503	22		33-16-61	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W2078	0243	22		33-16-61	ALL
	12		W2078	0247	22		33-16-61	ALL
	13		W2078	0190	24		33-11-11	ALL
	14		W2078	2501B	24		33-11-11	ALL
	15		W2078	2501R	24		33-11-11	ALL
	16		W2078	3502R	24		33-11-11	ALL
	17		W2078	3502B	24		33-11-11	ALL
	18		W2078	3502Y	24		33-11-11	ALL
	19		W2078	0186	24		33-11-11	ALL
	20		W2078	0187	24		33-11-11	ALL
	21	UNUSED						ALL
	22		W2078	0241	22		33-16-61	ALL
	23		W2078	0010	24		33-11-11	ALL
	24		W2078	0266	20		33-11-11	ALL
			W2078	2501Z			33-11-11	ALL
			W2078	3502Z			33-11-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 6

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41010P		P026-00/ /		PLUG (continued)				001-099
D41010P		P26/ /		PLUG (continued)				115-199
			W2078	FRBB			33-11-11	ALL
D41020J		P36/ /		RCPT				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1260	5657	24		30-31-11	ALL
	4		W1260	0042	24		30-31-11	ALL
	5		W1260	0111	20		27-62-11	ALL
	6	UNUSED						ALL
	7		W1260	0896	24		21-25-11	ALL
	8		W1260	6102	24		21-25-11	ALL
	9		W1260	5555	24		21-25-11	ALL
	10		W1260	5699	24		30-31-11	ALL
	11		W1260	5648	24		23-31-13	ALL
	12	UNUSED						ALL
	13	UNUSED						001-099
	13		W1260	0280	20		27-62-11	115-199
	14	UNUSED						001-099
	14		W1260	0282	20		27-62-11	115-199
	15		W1260	0261	20		27-62-11	ALL
	16		W1260	0284	20		27-62-11	001-099
	16		W1260	0283	20		27-62-11	115-199
	17		W1260	8299	20		27-62-11	ALL
	18	UNUSED						ALL
	19		W1260	5694	24		30-31-11	ALL
	20		W1260	5695	24		30-31-11	ALL
	21		W1260	0072	24		21-25-11	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W1260	0125	22		29-11-22	ALL
	32		W1260	0116	22		29-11-22	ALL
	33	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 7

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41020J		P36/ /		RCPT (continued)				ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41		W1260	0888	24		21-25-11	ALL
	42	UNUSED						ALL
	43		W1260	0886	24		21-25-11	ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						001-099
	47		W1260	0683	22		21-58-24	115-199
	48	UNUSED						001-099
	48		W1260	0966	24		21-58-24	115-199
	49	UNUSED						ALL
	50		W1260	0174	24		29-33-11	ALL
	51		W1260	0960	20		21-58-21	ALL
	52		W1260	5594	20		21-58-21	ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D41020P		P036-00/ /		PLUG				ALL
	1		W4420	0001	22		SPARE	ALL
	2	UNUSED						001-099
	2		W4420	0002	22		SPARE	115-199
	3		W4420	0003	24		30-31-11	ALL
	4		W4420	0004	24		30-31-11	ALL
	5		W4420	0005	20		27-62-11	ALL
	6		W4420	0006	24		SPARE	ALL
	7		W4420	0007	24		21-25-11	ALL
	8		W4420	0008	24		21-25-11	ALL
	9		W4420	0009	24		21-25-11	ALL
	10		W4420	0010	24		30-31-11	ALL
	11		W4420	0011	24		23-31-13	ALL
	12	UNUSED						001-099
	12		W4420	0012	22		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 8

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41020P		P036-00/ /		PLUG (continued)				ALL
	13	UNUSED						001-099
	13		W4420	0013	20		27-62-11	115-199
	14		W4420	0014	20		SPARE	001-099
	14		W4420	0014	20		27-62-11	115-199
	15		W4420	0015	20		27-62-11	ALL
	16		W4420	0016	20		27-62-11	ALL
	17		W4420	0017	20		27-62-11	ALL
	18	UNUSED						001-099
	18		W4420	0018	20		SPARE	115-199
	19		W4420	0019	24		30-31-11	ALL
	20		W4420	0020	24		30-31-11	ALL
	21		W4420	0021	24		21-25-11	ALL
	22	UNUSED						001-099
	22		W4420	0022	24		SPARE	115-199
	23	UNUSED						001-099
	23		W4420	0023	20		SPARE	115-199
	24	UNUSED						001-099
	24		W4420	0024	20		SPARE	115-199
	25	UNUSED						001-099
	25		W4420	0025	20		SPARE	115-199
	26	UNUSED						001-099
	26		W4420	0026	20		SPARE	115-199
	27		W4420	0027	22		SPARE	ALL
	28		W4420	0028	22		SPARE	ALL
	29	UNUSED						001-099
	29		W4420	0029	22		SPARE	115-199
	30		W4420	0030	24		SPARE	ALL
	31		W4420	0031	22		29-11-22	ALL
	32		W4420	0032	22		29-11-22	ALL
	33	UNUSED						001-099
	33		W4420	0033	22		SPARE	115-199
	34	UNUSED						001-099
	34		W4420	0034	22		SPARE	115-199
	35	UNUSED						001-099
	35		W4420	0035	24		SPARE	115-199
	36	UNUSED						001-099
	36		W4420	0036	22		SPARE	115-199
	37	UNUSED						001-099
	37		W4420	0037	22		SPARE	115-199
	38	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 9

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41020P		P036-00/ /		PLUG (continued)				ALL
	38		W4420	0038	22		SPARE	115-199
	39	UNUSED						001-099
	39		W4420	0039	22		SPARE	115-199
	40		W4420	0040	24		SPARE	ALL
	41		W4420	0041	24		21-25-11	ALL
	42	UNUSED						001-099
	42		W4420	0042	24		SPARE	115-199
	43		W4420	0043	24		21-25-11	ALL
	44	UNUSED						001-099
	44		W4420	0044	22		SPARE	115-199
	45	UNUSED						001-099
	45		W4420	0045	22		SPARE	115-199
	46		W4420	0046	22		SPARE	ALL
	47		W4420	0047	24		SPARE	001-099
	47		W4420	0047	22		21-58-24	115-199
	48		W4420	0048	24		SPARE	001-099
	48		W4420	0048	24		21-58-24	115-199
	49	UNUSED						001-099
	49		W4420	0049	24		SPARE	115-199
	50		W4420	0050	24		29-33-11	ALL
	51		W4420	0051	20		21-58-21	ALL
	52		W4420	0052	20		21-58-21	ALL
	53	UNUSED						001-099
	53		W4420	0053	20		SPARE	115-199
	54	UNUSED						001-099
	54		W4420	0054	20		SPARE	115-199
	55	UNUSED						001-099
	55		W4420	0055	20		SPARE	115-199
D41022J		P36/ /		RCPT				ALL
	1	UNUSED						ALL
	2	UNUSED						001-099
	2		W1260	0686	22		21-58-24	115-199
	3	UNUSED						ALL
	4		W1260	0961	24		21-58-21	ALL
	5		W1260	6349	20		38-13-11	001-099
	5	UNUSED						115-199
	6	UNUSED						ALL
	7		W1260	0030	22		27-62-11	001-099
	7		W1260	0030	20		27-62-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 10

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41022J		P36/ /		RCPT (continued)				ALL
	8		W1260	0032	20		27-62-11	ALL
	9		W1260	0885	22		36-11-11	ALL
	10		W1260	6392	22		32-61-11	001-002, 115-199
	10	UNUSED						003-099
	11		W1260	8090	24		21-58-12	ALL
	12		W1260	0928	24		21-58-12	ALL
	13		W1260	5703	24		30-31-12	ALL
	14		W1260	5704	24		30-31-12	ALL
	15		W1260	5705	24		30-31-12	ALL
	16		W1260	5706	24		30-31-12	ALL
	17		W1260	0954	20		21-58-13	ALL
	18	UNUSED						ALL
	19		W1260	0944	20		21-58-13	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W1260	5708	24		30-33-11	ALL
	24		W1260	5709	24		30-33-11	ALL
	25	UNUSED						ALL
	26		W1260	0155	22		38-13-11	ALL
	27		W1260	0154	22		38-13-11	ALL
	28	UNUSED						ALL
	29		W1260	5972	24		30-31-12	ALL
	30	UNUSED						ALL
	31		W1260	0344	24		36-11-41	ALL
	32		W1260	5779	24		30-31-12	001-099
	32		W1260	0024	24		30-31-12	115-199
	33		W1260	0086	24		36-11-41	001-099
	33		W1260	0085	24		36-11-41	115-199
	34		W1260	0043	24		24-22-22	ALL
	35		W1260	5700	24		30-31-12	ALL
	36	UNUSED						ALL
	37		W1260	8515	24		29-33-11	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W1260	0630	20		36-11-11	ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 11

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41022J		P36/ /		RCPT (continued)				ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51		W1260	0280	20		27-62-11	001-099
	51	UNUSED						115-199
	52		W1260	0282	20		27-62-11	001-099
	52	UNUSED						115-199
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D41022P		P036-00/ /		PLUG				ALL
	1	UNUSED						001-099
	1		W4422	0001	24		SPARE	115-199
	2		W4422	0002	24		SPARE	001-099
	2		W4422	0002	22		21-58-24	115-199
	3		W4422	0003	24		SPARE	ALL
	4		W4422	0004	24		21-58-21	ALL
	5		W4422	0005	20		38-13-11	001-099
	5		W4422	0005	24		SPARE	115-199
	6	UNUSED						001-099
	6		W4422	0006	24		SPARE	115-199
	7		W4422	0007	22		27-62-11	001-099
	7		W4422	0007	20		27-62-11	115-199
	8		W4422	0008	20		27-62-11	ALL
	9		W4422	0009	22		36-11-11	ALL
	10		W4422	0010	22		32-61-11	001-002, 115-199
	10		W4422	0010	22		34-61-21	003-099
	11		W4422	0011	24		21-58-12	ALL
	12		W4422	0012	24		21-58-12	ALL
	13		W4422	0013	24		30-31-12	ALL
	14		W4422	0014	24		30-31-12	ALL
	15		W4422	0015	24		30-31-12	ALL
	16		W4422	0016	24		30-31-12	ALL
	17		W4422	0017	20		21-58-13	ALL
	18	UNUSED						001-099
	18		W4422	0018	20		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 12

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41022P		P036-00/ /		PLUG (continued)				ALL
	19		W4422	0019	20		21-58-13	ALL
	20		W4422	0020	20		SPARE	ALL
	21	UNUSED						001-099
	21		W4422	0021	22		SPARE	115-199
	22	UNUSED						001-099
	22		W4422	0022	22		SPARE	115-199
	23		W4422	0023	24		30-33-11	ALL
	24		W4422	0024	24		30-33-11	ALL
	25	UNUSED						001-099
	25		W4422	0025	22		SPARE	115-199
	26		W4422	0026	22		38-13-11	001-099
	26	18	W4422	0026	18		38-13-11	115-199
	27		W4422	0027	22		38-13-11	001-099
	27	18	W4422	0027	18		38-13-11	115-199
	28	UNUSED						001-099
	28		W4422	0028	22		SPARE	115-199
	29		W4422	0029	24		30-31-12	ALL
	30	UNUSED						001-099
	30		W4422	0030	24		SPARE	115-199
	31		W4422	0031	24		36-11-41	ALL
	32		W4422	0032	24		30-31-12	ALL
	33		W4422	0033	24		36-11-41	ALL
	34		W4422	0034	24		24-22-22	ALL
	35		W4422	0035	24		30-31-12	ALL
	36	UNUSED						001-099
	36		W4422	0036	24		SPARE	115-199
	37		W4422	0037	24		29-33-11	ALL
	38	UNUSED						001-099
	38		W4422	0038	24		SPARE	115-199
	39	UNUSED						001-099
	39		W4422	0039	24		SPARE	115-199
	40		W4422	0040	22		36-11-11	ALL
	41		W4422	0041	22		SPARE	ALL
	42	UNUSED						001-099
	42		W4422	0042	22		SPARE	115-199
	43	UNUSED						001-099
	43		W4422	0043	22		SPARE	115-199
	44	UNUSED						001-099
	44		W4422	0044	22		SPARE	115-199
	45	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 13

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41022P		P036-00/ /		PLUG (continued)				ALL
	45		W4422	0045	22		SPARE	115-199
	46	UNUSED						001-099
	46		W4422	0046	22		SPARE	115-199
	47	UNUSED						001-099
	47		W4422	0047	22		SPARE	115-199
	48	UNUSED						001-099
	48		W4422	0048	22		SPARE	115-199
	49	UNUSED						001-099
	49		W4422	0049	22		SPARE	115-199
	50	UNUSED						001-099
	50		W4422	0050	24		SPARE	115-199
	51		W4422	0051	20		27-62-11	001-099
	51		W4422	0051	20		SPARE	115-199
	52		W4422	0052	20		27-62-11	001-099
	52		W4422	0052	20		SPARE	115-199
	53	UNUSED						001-099
	53		W4422	5001B	22		SPARE	115-199
	54	UNUSED						001-099
	54		W4422	5001R	22		SPARE	115-199
	55	UNUSED						001-099
	55		W4422	5001Z			SPARE	115-199
D41024J		P36/ /		RCPT				ALL
	1		W1260	0010	24		21-58-12	ALL
	2	UNUSED						ALL
	3		W1260	0904	24		21-58-12	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						001-099
	8		W1260	0870	22		21-58-15	115-199
	9		W1260	0980	22		24-25-11	001-002, 115-199
	9		W1260	6382	22		24-25-11	003-099
	10	UNUSED						ALL
	11		W1260	6198	20		29-21-31	ALL
	12		W1260	6199	20		29-21-31	ALL
	13		W1260	0784	22		29-22-11	001-099
	13	UNUSED						115-199
	14		W1260	0786	22		29-22-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 14

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41024J		P36/ /		RCPT (continued)				ALL
	14	UNUSED						115-199
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W1260	0870	22		21-58-15	001-099
	17	UNUSED						115-199
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W1260	0077	16		35-21-12	ALL
	22	UNUSED						ALL
	23		W1260	0078	16		35-21-13	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						001-002, 115-199
	31		W1260	6392	22		32-61-11	003-099
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
D41024P		P036-00/ /		PLUG				ALL
	1		W4424	0001	24		21-58-12	ALL
	2	UNUSED						001-099
	2		W4424	0002	24		SPARE	115-199
	3		W4424	0003	24		21-58-12	ALL
	4		W4424	0004	20		SPARE	ALL
	5	UNUSED						001-099
	5		W4424	0005	24		SPARE	115-199
	6	UNUSED						001-099
	6		W4424	0006	24		SPARE	115-199
	7	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 15

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41024P		P036-00/ /		PLUG (continued)				ALL
	7		W4424	0007	20		SPARE	115-199
	8	UNUSED						001-099
	8		W4424	0008	22		21-58-15	115-199
	9		W4424	0009	22		24-25-11	ALL
	10	UNUSED						001-099
	10		W4424	0010	24		SPARE	115-199
	11		W4424	0011	20		29-21-31	ALL
	12		W4424	0012	20		29-21-31	ALL
	13		W4424	0013	22		29-22-11	001-099
	13	UNUSED						115-199
	14		W4424	0014	22		29-22-11	001-099
	14	UNUSED						115-199
	15		W4424	0015	22		SPARE	001-099
	15	UNUSED						115-199
	16		W4424	0016	22		SPARE	001-099
	16	UNUSED						115-199
	17		W4424	0017	22		21-58-15	001-099
	17	UNUSED						115-199
	18		W4424	0018	24		SPARE	001-099
	18	UNUSED						115-199
	19		W4424	0019	22		SPARE	001-099
	19	UNUSED						115-199
	20		W4424	0020	22		SPARE	001-099
	20	UNUSED						115-199
	21		W4424	0021	16		35-21-12	ALL
	22		W4424	0022	22		SPARE	ALL
	23		W4424	0023	16		35-21-13	ALL
	24		W4424	0024	22		SPARE	ALL
	25		W4424	0025	22		SPARE	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W4424	0030	24		SPARE	001-099
	30	UNUSED						115-199
	31	UNUSED						001-002, 115-199
	31		W4424	0040	22		32-61-11	003-099
	32	UNUSED						001-002, 115-199
	32		W4424	0041	22		SPARE	003-099
	33	UNUSED						001-002, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 16

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41024P		P036-00/ /		PLUG (continued)				ALL
	33		W4424	0042	22		SPARE	003-099
	34	UNUSED						001-002, 115-199
	34		W4424	0043	20		SPARE	003-099
	35	UNUSED						001-002, 115-199
	35		W4424	0044	20		SPARE	003-099
	36	UNUSED						001-002, 115-199
	36		W4424	0045	20		SPARE	003-099
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
D41029J		1470/160/L50		RCPT-				001-099
	= A1		W2659	001CX			23-12-31	001-099
	= C1		W2659	001CO			23-12-31	001-099
D41029P		1470/160/L50		PLUG-COAX				001-099
	= A1		W2619	001CX			23-12-31	001-099
	= C1		W2619	001CO			23-12-31	001-099
D41030J		P37/ /		RCPT				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1270	6090	24		30-31-11	ALL
	4		W1270	6093	24		30-31-11	001-099
	4		W1270	0085	24		30-31-11	115-199
	5		W1270	0364	20		27-62-11	ALL
	6	UNUSED						ALL
	7		W1270	0639	24		21-25-11	ALL
	8		W1270	0646	24		21-25-11	ALL
	9		W1270	0253	24		21-25-11	ALL
	10		W1270	6094	24		30-31-11	ALL
	11		W1270	0701	24		23-31-13	ALL
	12	UNUSED						ALL
	13	UNUSED						001-099
	13		W1270	5710	20		27-62-11	115-199
	14	UNUSED						001-099
	14		W1270	0130	20		27-62-11	115-199
	15		W1270	0595	20		27-62-11	ALL
	16		W1270	0365	20		27-62-11	ALL
	17		W1270	6837	20		27-62-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 17

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41030J		P37/ /		RCPT (continued)				ALL
	18	UNUSED						ALL
	19		W1270	5729	24		30-31-11	ALL
	20		W1270	5730	24		30-31-11	ALL
	21		W1270	5668	24		21-25-11	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W1270	6049	22		29-11-22	ALL
	32		W1270	6050	22		29-11-22	ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						001-002, 115-199
	40		W1270	0118	24		SPARE	003-099
	41		W1270	0561	24		21-25-11	ALL
	42	UNUSED						ALL
	43		W1270	0642	24		21-25-11	ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						001-099
	47		W1270	0678	22		21-58-24	115-199
	48	UNUSED						001-099
	48		W1270	0663	24		21-58-13	115-199
	49	UNUSED						ALL
	50		W1270	0071	24		29-35-11	ALL
	51		W1270	0667	20		21-58-21	ALL
	52		W1270	0668	20		21-58-21	ALL
	53	UNUSED						ALL
	54		W1270	6508	22		32-61-11	001-002, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 18

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41030J		P37/ /		RCPT (continued)				ALL
	54	UNUSED						003-099
	55		W1270	6524	22		32-61-11	001-002, 115-199
	55	UNUSED						003-099
D41030P		P037-00/ /		PLUG				ALL
	1		W4420	0001	22		SPARE	ALL
	2	UNUSED						001-099
	2		W4420	0002	22		SPARE	115-199
	3		W4420	0003	24		30-31-11	ALL
	4		W4420	0004	24		30-31-11	ALL
	5		W4420	0005	20		27-62-11	ALL
	6		W4420	0006	24		SPARE	ALL
	7		W4420	0007	24		21-25-11	ALL
	8		W4420	0008	24		21-25-11	ALL
	9		W4420	0009	24		21-25-11	ALL
	10		W4420	0010	24		30-31-11	ALL
	11		W4420	0011	24		23-31-13	ALL
	12	UNUSED						001-099
	12		W4420	0012	22		SPARE	115-199
	13	UNUSED						001-099
	13		W4420	0013	20		27-62-11	115-199
	14		W4420	0014	20		SPARE	001-099
	14		W4420	0014	20		27-62-11	115-199
	15		W4420	0015	20		27-62-11	ALL
	16		W4420	0016	20		27-62-11	ALL
	17		W4420	0017	20		27-62-11	ALL
	18	UNUSED						001-099
	18		W4420	0018	20		SPARE	115-199
	19		W4420	0019	24		30-31-11	ALL
	20		W4420	0020	24		30-31-11	ALL
	21		W4420	0021	24		21-25-11	ALL
	22	UNUSED						001-099
	22		W4420	0022	24		SPARE	115-199
	23	UNUSED						001-099
	23		W4420	0023	20		SPARE	115-199
	24	UNUSED						001-099
	24		W4420	0024	20		SPARE	115-199
	25	UNUSED						001-099
	25		W4420	0025	20		SPARE	115-199
	26	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 19

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41030P		P037-00/ /		PLUG (continued)				ALL
	26		W4420	0026	20		SPARE	115-199
	27		W4420	0027	22		SPARE	ALL
	28		W4420	0028	22		SPARE	ALL
	29	UNUSED						001-099
	29		W4420	0029	22		SPARE	115-199
	30		W4420	0030	24		SPARE	ALL
	31		W4420	0031	22		29-11-22	ALL
	32		W4420	0032	22		29-11-22	ALL
	33	UNUSED						001-099
	33		W4420	0033	22		SPARE	115-199
	34	UNUSED						001-099
	34		W4420	0034	22		SPARE	115-199
	35	UNUSED						001-099
	35		W4420	0035	24		SPARE	115-199
	36	UNUSED						001-099
	36		W4420	0036	22		SPARE	115-199
	37	UNUSED						001-099
	37		W4420	0037	22		SPARE	115-199
	38	UNUSED						001-099
	38		W4420	0038	22		SPARE	115-199
	39	UNUSED						001-099
	39		W4420	0039	22		SPARE	115-199
	40		W4420	0040	24		SPARE	ALL
	41		W4420	0041	24		21-25-11	ALL
	42	UNUSED						001-099
	42		W4420	0042	24		SPARE	115-199
	43		W4420	0043	24		21-25-11	ALL
	44	UNUSED						001-099
	44		W4420	0044	22		SPARE	115-199
	45	UNUSED						001-099
	45		W4420	0045	22		SPARE	115-199
	46		W4420	0046	22		SPARE	ALL
	47		W4420	0047	24		SPARE	001-099
	47		W4420	0047	22		21-58-24	115-199
	48		W4420	0048	24		SPARE	001-099
	48		W4420	0048	24		21-58-24	115-199
	49	UNUSED						001-099
	49		W4420	0049	24		SPARE	115-199
	50		W4420	0050	24		29-33-11	ALL
	51		W4420	0051	20		21-58-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 20

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41030P		P037-00/ /		PLUG (continued)				ALL
	52		W4420	0052	20		21-58-21	ALL
	53	UNUSED						001-099
	53		W4420	0053	20		SPARE	115-199
	54		W4420	0061	22		32-61-11	001-002, 115-199
	54	UNUSED						003-099
	55		W4420	0062	22		32-61-11	001-002, 115-199
	55	UNUSED						003-099
	CAP	Y	W4420	0054	20		SPARE	115-199
	CAP	Y	W4420	0055	20		SPARE	115-199
D41032J		P37/ /		RCPT				ALL
	1	UNUSED						ALL
	2	UNUSED						001-099
	2		W1270	5564	22		21-58-24	115-199
	3	UNUSED						ALL
	4		W1270	6013	24		21-58-21	ALL
	5		W1270	6464	20		38-13-11	001-099
	5	UNUSED						115-199
	6	UNUSED						ALL
	7		W1270	0127	22		27-62-11	001-099
	7		W1270	0127	20		27-62-11	115-199
	8		W1270	0128	22		27-62-11	001-099
	8		W1270	0128	20		27-62-11	115-199
	9		W1270	0295	20		36-11-21	ALL
	10		W1270	6506	22		32-61-11	001-002, 115-199
	10	UNUSED						003-099
	11		W1270	0254	24		21-58-12	ALL
	12		W1270	0650	24		21-58-12	ALL
	13		W1270	5755	24		30-31-12	ALL
	14		W1270	5756	24		30-31-12	ALL
	15		W1270	5743	24		30-31-12	ALL
	16		W1270	5761	24		30-31-12	ALL
	17		W1270	0665	20		21-58-13	ALL
	18	UNUSED						ALL
	19		W1270	0651	20		21-58-13	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W1270	5818	24		30-33-11	001-099
	23		W1270	0024	24		30-33-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 21

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41032J		P37/ /		RCPT (continued)				ALL
	24		W1270	0025	24		30-33-11	ALL
	25	UNUSED						ALL
	26		W1270	0074	22		38-13-11	001-099
	26	18	W1270	0074	18		38-13-11	115-199
	27		W1270	0073	22		38-13-11	001-099
	27	18	W1270	0073	18		38-13-11	115-199
	28	UNUSED						ALL
	29		W1270	5723	24		30-31-12	ALL
	30	UNUSED						ALL
	31		W1270	0451	24		36-11-41	ALL
	32		W1270	5752	24		30-31-12	001-099
	32		W1270	0086	24		30-31-12	115-199
	33		W1270	0510	24		36-11-41	ALL
	34		W1270	5692	24		24-22-22	ALL
	35		W1270	5717	24		30-31-12	ALL
	36	UNUSED						ALL
	37		W1270	0169	24		29-35-11	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W1270	0637	22		36-11-21	ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51		W1270	5710	20		27-62-11	001-099
	51	UNUSED						115-199
	52		W1270	0130	20		27-62-11	001-099
	52	UNUSED						115-199
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D41032P		P037-00/ /		PLUG				ALL
	1	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 22

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41032P		P037-00/ /		PLUG (continued)				ALL
	1		W4422	0001	24		SPARE	115-199
	2		W4422	0002	24		SPARE	001-099
	2		W4422	0002	22		21-58-24	115-199
	3		W4422	0003	24		SPARE	ALL
	4		W4422	0004	24		21-58-21	ALL
	5		W4422	0005	20		38-13-11	001-099
	5		W4422	0005	24		SPARE	115-199
	6	UNUSED						001-099
	6		W4422	0006	24		SPARE	115-199
	7		W4422	0007	22		27-62-11	001-099
	7		W4422	0007	20		27-62-11	115-199
	8		W4422	0008	20		27-62-11	ALL
	9		W4422	0009	22		36-11-11	ALL
	10		W4422	0010	22		32-61-11	001-002, 115-199
	10		W4422	0010	22		34-61-21	003-099
	11		W4422	0011	24		21-58-12	ALL
	12		W4422	0012	24		21-58-12	ALL
	13		W4422	0013	24		30-31-12	ALL
	14		W4422	0014	24		30-31-12	ALL
	15		W4422	0015	24		30-31-12	ALL
	16		W4422	0016	24		30-31-12	ALL
	17		W4422	0017	20		21-58-13	ALL
	18	UNUSED						001-099
	18		W4422	0018	20		SPARE	115-199
	19		W4422	0019	20		21-58-13	ALL
	20		W4422	0020	20		SPARE	ALL
	21	UNUSED						001-099
	21		W4422	0021	22		SPARE	115-199
	22	UNUSED						001-099
	22		W4422	0022	22		SPARE	115-199
	23		W4422	0023	24		30-33-11	ALL
	24		W4422	0024	24		30-33-11	ALL
	25	UNUSED						001-099
	25		W4422	0025	22		SPARE	115-199
	26		W4422	0026	22		38-13-11	001-099
	26	18	W4422	0026	18		38-13-11	115-199
	27		W4422	0027	22		38-13-11	001-099
	27	18	W4422	0027	18		38-13-11	115-199
	28	UNUSED						001-099
	28		W4422	0028	22		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 23

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41032P		P037-00/ /		PLUG (continued)				ALL
	29		W4422	0029	24		30-31-12	ALL
	30	UNUSED						001-099
	30		W4422	0030	24		SPARE	115-199
	31		W4422	0031	24		36-11-41	ALL
	32		W4422	0032	24		30-31-12	ALL
	33		W4422	0033	24		36-11-41	ALL
	34		W4422	0034	24		24-22-22	ALL
	35		W4422	0035	24		30-31-12	ALL
	36	UNUSED						001-099
	36		W4422	0036	24		SPARE	115-199
	37		W4422	0037	24		29-33-11	ALL
	38	UNUSED						001-099
	38		W4422	0038	24		SPARE	115-199
	39	UNUSED						001-099
	39		W4422	0039	24		SPARE	115-199
	40		W4422	0040	22		36-11-11	ALL
	41		W4422	0041	22		SPARE	ALL
	42	UNUSED						001-099
	42		W4422	0042	22		SPARE	115-199
	43	UNUSED						001-099
	43		W4422	0043	22		SPARE	115-199
	44	UNUSED						001-099
	44		W4422	0044	22		SPARE	115-199
	45	UNUSED						001-099
	45		W4422	0045	22		SPARE	115-199
	46	UNUSED						001-099
	46		W4422	0046	22		SPARE	115-199
	47	UNUSED						001-099
	47		W4422	0047	22		SPARE	115-199
	48	UNUSED						001-099
	48		W4422	0048	22		SPARE	115-199
	49	UNUSED						001-099
	49		W4422	0049	22		SPARE	115-199
	50	UNUSED						001-099
	50		W4422	0050	24		SPARE	115-199
	51		W4422	0051	20		27-62-11	001-099
	51		W4422	0051	20		SPARE	115-199
	52		W4422	0052	20		27-62-11	001-099
	52		W4422	0052	20		SPARE	115-199
	53	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 24

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41032P		P037-00/ /		PLUG (continued)				ALL
	53		W4422	5001B	22		SPARE	115-199
	54	UNUSED						001-099
	54		W4422	5001R	22		SPARE	115-199
	55	UNUSED						001-099
	55		W4422	5001Z			SPARE	115-199
D41034J		P37/ /		RCPT				ALL
	1		W1270	5517	24		21-58-12	ALL
	2	UNUSED						ALL
	3		W1270	5511	24		21-58-12	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						001-099
	8		W1270	0614	22		21-58-15	115-199
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W1270	0176	20		29-21-31	ALL
	12		W1270	6299	20		29-21-31	ALL
	13		W1270	0230	22		29-22-11	001-099
	13	UNUSED						115-199
	14		W1270	0233	22		29-22-11	001-099
	14	UNUSED						115-199
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W1270	0614	22		21-58-15	001-099
	17	UNUSED						115-199
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W1270	0399	16		35-21-11	ALL
	22	UNUSED						ALL
	23		W1270	0400	16		35-21-11	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						001-002, 115-199
	26		W1270	6508	22		32-61-11	003-099
	27	UNUSED						001-002, 115-199
	27		W1270	6524	22		32-61-11	003-099

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 25

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41034J		P37/ /		RCPT (continued)				ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						001-002, 115-199
	31		W1270	6506	22		32-61-11	003-099
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
D41034P		P037-00/ /		PLUG				ALL
	1		W4424	0001	24		21-58-12	ALL
	2	UNUSED						001-099
	2		W4424	0002	24		SPARE	115-199
	3		W4424	0003	24		21-58-12	ALL
	4		W4424	0004	20		SPARE	ALL
	5	UNUSED						001-099
	5		W4424	0005	24		SPARE	115-199
	6	UNUSED						001-099
	6		W4424	0006	24		SPARE	115-199
	7	UNUSED						001-099
	7		W4424	0007	20		SPARE	115-199
	8	UNUSED						001-099
	8		W4424	0008	22		21-58-15	115-199
	9		W4424	0009	22		24-25-11	ALL
	10	UNUSED						001-099
	10		W4424	0010	24		SPARE	115-199
	11		W4424	0011	20		29-21-31	ALL
	12		W4424	0012	20		29-21-31	ALL
	13		W4424	0013	22		29-22-11	001-099
	13	UNUSED						115-199
	14		W4424	0014	22		29-22-11	001-099
	14	UNUSED						115-199
	15		W4424	0015	22		SPARE	001-099
	15	UNUSED						115-199
	16		W4424	0016	22		SPARE	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 26

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41034P		P037-00/ /		PLUG (continued)				ALL
	16	UNUSED						115-199
	17		W4424	0017	22		21-58-15	001-099
	17	UNUSED						115-199
	18		W4424	0018	24		SPARE	001-099
	18	UNUSED						115-199
	19		W4424	0019	22		SPARE	001-099
	19	UNUSED						115-199
	20		W4424	0020	22		SPARE	001-099
	20	UNUSED						115-199
	21		W4424	0021	16		35-21-12	ALL
	22		W4424	0022	22		SPARE	ALL
	23		W4424	0023	16		35-21-13	ALL
	24		W4424	0024	22		SPARE	ALL
	25		W4424	0025	22		SPARE	ALL
	26	UNUSED						001-002, 115-199
	26		W4424	0038	22		32-61-11	003-099
	27	UNUSED						001-002, 115-199
	27		W4424	0039	22		32-61-11	003-099
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W4424	0030	24		SPARE	001-099
	30	UNUSED						115-199
	31	UNUSED						001-002, 115-199
	31		W4424	0040	22		32-61-11	003-099
	32	UNUSED						001-002, 115-199
	32		W4424	0041	22		SPARE	003-099
	33	UNUSED						001-002, 115-199
	33		W4424	0042	22		SPARE	003-099
	34	UNUSED						001-002, 115-199
	34		W4424	0043	20		SPARE	003-099
	35	UNUSED						001-002, 115-199
	35		W4424	0044	20		SPARE	003-099
	36	UNUSED						001-002, 115-199
	36		W4424	0045	20		SPARE	003-099
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 27

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41041J D41041J		P003-00/ / AP0003/ /		RCPT RCPT				001-099 115-199
	1		W2253	0048	22		34-12-62	ALL
	2		W2253	0049	22		34-12-62	ALL
	3		W2253	0050	22		SPARE	ALL
	4		W2253	0051	22		SPARE	ALL
	5		W2253	0052	24		27-51-11	001-099
	5		W2253	0052	22		27-51-11	115-199
	6		W2253	0053	24		27-51-11	001-099
	6		W2253	0053	22		27-51-11	115-199
	7		W2253	0054	24		27-51-11	ALL
	8		W2253	0055	24		27-51-11	ALL
	9		W2253	0056	24		27-51-11	ALL
	10		W2253	0057	24		27-51-11	ALL
	11		W2253	0058	24		27-51-11	ALL
	12		W2253	0059	24		27-51-11	ALL
	13	UNUSED						001-099
	13		W2253	0060	24		27-51-11	115-199
	14		W2253	0061	24		27-51-11	ALL
	15	UNUSED						001-099
	15		W2253	0096	22		SPARE	115-199
	16	UNUSED						001-099
	16		W2253	0097	22		SPARE	115-199
	17		W2253	0064	22		32-31-11	ALL
	18	UNUSED						001-099
	18		W2253	0098	22		SPARE	115-199
	19		W2253	0065	24		27-51-31	001-099
	19		W2253	0065	22		27-51-31	115-199
	20		W2253	0067	22		32-61-21	ALL
	21	UNUSED						ALL
	22		W2253	0069	22		32-61-21	ALL
	23	UNUSED						001-099
	23		W2253	0070	24		77-12-11	115-199
	24	UNUSED						001-099
	24		W2253	0071	22		SPARE	115-199
	25	UNUSED						001-099
	25		W2253	0072	22		SPARE	115-199
	26		W2253	0092	24		34-25-11	001, 003-099, 115-199
	26	UNUSED						002
	27		W2253	5020B	24		SPARE	001-099
	27		W2253	5020R	24		34-22-18	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 28

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41041J		P003-00/ /		RCPT (continued)				001-099
D41041J		AP0003/ /		RCPT (continued)				115-199
	28		W2253	5020R	24		SPARE	001-099
	28		W2253	5020B	24		34-22-18	115-199
	29		W2253	5020Z			SPARE	001-099
	29		W2253	5020Z			34-22-18	115-199
	30	UNUSED						001-099
	30		W2253	5021R	24		SPARE	115-199
	31	UNUSED						001-099
	31		W2253	5021B	24		SPARE	115-199
	32	UNUSED						001-099
	32		W2253	5021Z			SPARE	115-199
	33		W2253	5025R	24		SPARE	001-099
	33		W2253	2509R	24		SPARE	115-199
	34		W2253	5025B	24		SPARE	001-099
	34		W2253	2509B	24		SPARE	115-199
	35		W2253	5025Z			SPARE	001-099
	35		W2253	2509Z			SPARE	115-199
	36		W2253	5017R	24		34-22-91	001-099
	36		W2253	5017R	24		34-22-93	115-199
	37		W2253	5017B	24		34-22-91	001-099
	37		W2253	5017B	24		34-22-93	115-199
	38		W2253	5017Z			34-22-91	001-099
	38		W2253	5017Z			34-22-93	115-199
	39	UNUSED						001-099
	39		W2253	5018R	24		34-22-93	115-199
	40	UNUSED						001-099
	40		W2253	5018B	24		34-22-93	115-199
	41	UNUSED						001-099
	41		W2253	5018Z			34-22-93	115-199
	42	UNUSED						001-099
	42		W2253	0087	22		34-55-21	115-199
	43	UNUSED						001-099
	43		W2253	5019R	24		34-55-21	115-199
	44	UNUSED						001-099
	44		W2253	5019B	24		34-55-21	115-199
	45	UNUSED						001-099
	45		W2253	5019Z			34-55-21	115-199
	46	UNUSED						001-099
	46		W2253	0088	24		34-55-21	115-199
	47		W2253	0089	24		31-51-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 29

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41041J		P003-00/ /		RCPT (continued)				001-099
D41041J		AP0003/ /		RCPT (continued)				115-199
	48		W2253	0091	24		31-51-21	ALL
	49	UNUSED						001-099
	49		W2253	0090	24		SPARE	115-199
	50		W2253	4501Z			77-21-11	ALL
	51		W2253	4501W	22		77-21-11	001-099
	51	TD	W2253	4501W	20		77-21-11	115-199
	52		W2253	4501G	22		77-21-11	001-099
	52	TC	W2253	4501G	20		77-21-11	115-199
	53		W2253	2504R	24		SPARE	001-099
	53		W2253	2504R	24		77-12-11	115-199
	54		W2253	2504B	24		SPARE	001-099
	54		W2253	2504B	24		77-12-11	115-199
	55		W2253	2504Z			SPARE	001-099
	55		W2253	2504Z			77-12-11	115-199
D41041P		AP0003/ /		PLUG				001-099
D41041P		217.6/198/34		PLUG				115-199
	1		W0003	0416	22		34-12-62	ALL
	2		W0003	0417	22		34-12-62	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0003	0285	24		27-51-11	ALL
	6		W0003	0286	24		27-51-11	ALL
	7		W0003	0127	24		27-51-11	ALL
	8		W0003	0128	24		27-51-11	ALL
	9		W0003	0129	24		27-51-11	ALL
	10		W0003	0130	24		27-51-11	ALL
	11		W0003	0131	24		27-51-11	ALL
	12		W0003	0132	24		27-51-11	ALL
	13	UNUSED						001-099
	13		W0003	0133	24		27-51-11	115-199
	14		W0003	0134	24		27-51-11	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W0003	0570	22		32-31-11	ALL
	18	UNUSED						ALL
	19		W0003	0481	24		27-51-11	ALL
	20		W0003	0220	22		32-61-21	ALL
	21	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 30

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41041P		AP0003/ /		PLUG (continued)				001-099
D41041P		217.6/198/34		PLUG (continued)				115-199
	22		W0003	0222	22		32-61-21	ALL
	23	UNUSED						001-099
	23		W0003	0567	24		77-12-11	115-199
	24	UNUSED						ALL
	25	UNUSED						ALL
	26		W0003	0024	24		34-25-11	001, 003-099, 115-199
	26	UNUSED						002
	27	UNUSED						001-099
	27		W0003	5055R	24		34-22-18	115-199
	28	UNUSED						001-099
	28		W0003	5055B	24		34-22-18	115-199
	29	UNUSED						001-099
	29		W0003	5055Z			34-22-18	115-199
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36		W0003	5051R	24		34-22-91	001-099
	36		W0003	5045R	24		34-22-93	115-199
	37		W0003	5051B	24		34-22-91	001-099
	37		W0003	5045B	24		34-22-93	115-199
	38		W0003	5051Z			34-22-91	001-099
	38		W0003	5045Z			34-22-93	115-199
	39	UNUSED						001-099
	39		W0003	5014R	24		34-22-93	115-199
	40	UNUSED						001-099
	40		W0003	5014B	24		34-22-93	115-199
	41	UNUSED						001-099
	41		W0003	5014Z			34-22-93	115-199
	42	UNUSED						001-099
	42		W0003	0555	22		34-55-21	115-199
	43	UNUSED						001-099
	43		W0003	5047R	24		34-55-21	115-199
	44	UNUSED						001-099
	44		W0003	5047B	24		34-55-21	115-199
	45	UNUSED						001-099
	45		W0003	5047Z			34-55-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 31

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41041P		AP0003/ /		PLUG (continued)				001-099
D41041P		217.6/198/34		PLUG (continued)				115-199
	46	UNUSED						001-099
	46		W0003	0556	24		34-55-21	115-199
	47		W0003	0182	22		31-51-31	ALL
	48		W0003	0214	22		31-51-21	ALL
	49	UNUSED						ALL
	50		W0003	4502Z			77-21-11	ALL
	51		W0003	4502W	22		77-21-11	001-099
	51	TC	W0003	4502W	22		77-21-11	115-199
	52		W0003	4502G	22		77-21-11	001-099
	52	TD	W0003	4502G	22		77-21-11	115-199
	53	UNUSED						001-099
	53		W0003	2518R	24		77-12-11	115-199
	54	UNUSED						001-099
	54		W0003	2518B	24		77-12-11	115-199
	55	UNUSED						001-099
	55		W0003	2518Z			77-12-11	115-199
D41058J		E4-2/ /		RCPT-				ALL
	1		W1275	5618	22		24-27-21	ALL
	2		W1275	5622	22		24-27-21	ALL
	3		W1275	5592	24		36-11-22	ALL
	3		W1275	5593	24		36-11-22	ALL
	4		W1275	5667	24		24-51-24	ALL
	4		W1275	5668	24		24-51-24	ALL
	5	UNUSED						001-099
	5		W1275	5598	24		36-22-11	115-199
	6	UNUSED						ALL
	7		W1275	0003	24		21-25-11	ALL
	7		W1275	0036	24		21-25-11	ALL
	8		W1275	0777	22		29-11-12	ALL
	9		W1275	5750	24		21-51-25	ALL
	9		W1275	5751	24		21-51-25	ALL
	10		W1275	5753	24		21-51-25	ALL
	10		W1275	5754	24		21-51-25	ALL
	11		W1275	5777	24		21-61-21	ALL
	11		W1275	5778	24		21-61-21	ALL
	12		W1275	0921	22		28-42-11	ALL
	13		W1275	0936	22		28-42-11	ALL
	14		W1275	0934	24		28-42-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 32

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41058J		E4-2/ /		RCPT- (continued)				ALL
	14		W1275	0935	24		28-42-11	ALL
	15		W1275	0941	22		28-42-11	ALL
	16		W1275	0608	24		33-51-11	ALL
	16		W1275	0609	24		33-51-11	ALL
	17		W1275	5583	24		36-11-21	ALL
	17		W1275	5584	24		36-11-21	ALL
	18		W1275	0149	24		24-11-21	ALL
	18		W1275	0151	24		24-11-21	ALL
	19	UNUSED						ALL
	20		W1275	0145	24		24-11-21	ALL
	21		W1275	5626	22		24-27-21	ALL
	22	UNUSED						ALL
	23		W1275	5780	24		21-61-31	ALL
	23		W1275	5781	24		21-61-31	ALL
	24		W1275	0828	22		29-32-11	ALL
	25		W1275	0832	22		29-32-11	ALL
	26		W1275	0783	22		29-11-12	ALL
	27		W1275	0780	22		29-11-12	ALL
	28		W1275	5552	24		29-33-11	ALL
	29		W1275	5995	20		23-31-11	ALL
	30		W1275	6480	24		30-34-22	ALL
	30		W1275	6481	24		30-34-22	ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W1275	0631	24		21-58-13	ALL
	35		W1275	0632	24		21-58-13	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41		W1275	6526	24		24-11-21	ALL
	42	UNUSED						009-099, 115-199
	43	UNUSED						009-099, 115-199
	44	UNUSED						009-099, 115-199
	45	UNUSED						009-099, 115-199
	46		W1275	1004	24		28-22-32	009-099
	46		W1275	1005	24		28-22-32	009-099

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 33

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41058J		E4-2/ /		RCPT- (continued)				ALL
	46	UNUSED						115-199
	47		W1275	1006	24		28-22-32	009-099
	47		W1275	1007	24		28-22-32	009-099
	47	UNUSED						115-199
	48	UNUSED						009-099, 115-199
	49	UNUSED						009-099, 115-199
	50	UNUSED						009-099, 115-199
	51	UNUSED						009-099, 115-199
	52	UNUSED						009-099, 115-199
	53	UNUSED						009-099, 115-199
	54	UNUSED						009-099, 115-199
	55	UNUSED						009-099, 115-199
	DED		W1275	5995Z			23-31-11	115-199
D41058P		E004-02/ /		PLUG				001-099
D41058P		E4-2/ /		PLUG				115-199
	1		W2070	0138	24		24-27-21	ALL
	2		W2070	0139	24		24-27-21	ALL
	3		W2070	0051	24		36-11-22	ALL
	4		W2070	0143	22		24-51-24	ALL
	5	UNUSED						001-099
	5		W2070	0144	24		36-22-11	115-199
	6	UNUSED						001-099
	6		W2070	0145	24		SPARE	115-199
	7		W2070	0156	24		21-25-11	ALL
	8		W2070	0168	22		29-11-12	ALL
	9		W2070	0194	24		21-51-25	ALL
	10		W2070	0193	24		21-51-25	ALL
	11		W2070	0216	24		21-61-21	ALL
	12		W2070	0271	22		28-42-11	ALL
	13		W2070	0288	22		28-42-11	ALL
	14		W2070	0273	22		28-42-11	ALL
	15		W2070	0274	22		28-42-11	ALL
	16		W2070	0364	22		33-51-11	ALL
	17		W2070	0137	24		36-11-21	ALL
	18		W2070	0014	24		24-11-21	ALL
	19		W2070	0472	20		SPARE	001-099
	19		W2070	0030	24		SPARE	115-199
	20		W2070	0031	24		24-11-21	ALL
	21		W2070	0132	24		24-27-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 34

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41058P		E004-02/ /		PLUG (continued)				001-099
D41058P		E4-2/ /		PLUG (continued)				115-199
	22		W2070	0464	20		SPARE	001-099
	22		W2070	0041	22		SPARE	115-199
	23		W2070	0266	24		21-61-31	ALL
	24		W2070	0059	22		29-32-11	ALL
	25		W2070	0058	22		29-32-11	ALL
	26		W2070	0170	22		29-11-12	ALL
	27		W2070	0169	22		29-11-12	ALL
	28		W2070	0088	24		29-33-11	ALL
	29		W2070	0245	20		23-31-11	ALL
	30		W2070	0430	22		30-34-22	ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						001-099
	34		W2070	0124	22		SPARE	115-199
	35		W2070	0310	24		21-58-13	ALL
	36		W2070	0458	20		SPARE	ALL
	37	UNUSED						ALL
	38	UNUSED						001-099
	38	18	W2070	0803	18		SPARE	115-199
	39		W2070	0484	24		SPARE	001-099
	39	UNUSED						115-199
	40	UNUSED						001-099
	40		W2070	0462	20		SPARE	115-199
	41		W2070	0635	24		24-11-21	ALL
	42	UNUSED						009-099
	42		W2070	0464	20		SPARE	115-199
	43	UNUSED						009-099
	43		W2070	0465	20		SPARE	115-199
	44	UNUSED						009-099
	44		W2070	0466	20		SPARE	115-199
	45	UNUSED						009-099
	45		W2070	0467	20		SPARE	115-199
	46		W2070	0630	20		28-22-32	009-099
	46	UNUSED						115-199
	47		W2070	0631	20		28-22-32	009-099
	47	UNUSED						115-199
	48	UNUSED						009-099, 115-199
	49	UNUSED						009-099, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 35

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41058P		E004-02/ /		PLUG (continued)				001-099
D41058P		E4-2/ /		PLUG (continued)				115-199
	50	UNUSED						009-099
	50		W2070	0468	20		SPARE	115-199
	51	UNUSED						009-099
	51		W2070	0469	20		SPARE	115-199
	52	UNUSED						009-099
	52		W2070	0470	20		SPARE	115-199
	53	UNUSED						009-099
	53		W2070	0471	20		SPARE	115-199
	54	UNUSED						009-099
	54		W2070	0472	20		SPARE	115-199
	55	UNUSED						009-099
	55		W2070	0473	20		SPARE	115-199
	CAP	Y	W2070	0463	20		SPARE	ALL
	CAP	Y	W2070	0461	20		SPARE	115-199
	CAP	Y	W2070	0800	20		SPARE	115-199
D41059J		P051-00/ /		RCPT-				ALL
	1		W1451	0060	24		27-32-11	ALL
	2		W1451	0061	22		27-32-11	ALL
	3		W1451	0056	24		27-32-11	ALL
	4		W1451	0057	24		27-32-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1451	0054	24		27-32-11	ALL
	8		W1451	0055	24		27-32-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W1451	0251	24		31-51-31	ALL
	13	UNUSED						ALL
	14		W1451	0249	24		31-51-33	ALL
	15		W1451	0247	24		31-51-33	ALL
	16	UNUSED						ALL
	17		W1451	0202	24		31-51-41	ALL
	18		W1451	0204	24		31-51-41	ALL
	19		W1451	0203	24		31-51-41	ALL
	20		W1451	0206	24		31-51-41	ALL
	21		W1451	0205	24		31-51-41	ALL
	22		W1451	0220	24		31-51-42	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 36

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41059J		P051-00/ /		RCPT- (continued)				ALL
	23		W1451	0215	24		31-51-42	ALL
	24	UNUSED						ALL
	25		W1451	0228	24		34-16-11	ALL
	26		W1451	0046	24		31-51-11	ALL
	27		W1451	0064	24		27-32-11	ALL
	28		W1451	0200	24		31-51-41	ALL
	29		W1451	0218	24		31-51-42	ALL
	30		W1451	0253	24		23-21-11	ALL
	31		W1451	0082	24		31-51-21	ALL
	32		W1451	0210	24		31-51-41	ALL
	33		W1451	0417	24		31-51-43	ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37		W1451	0256	24		31-41-14	ALL
	38		W1451	0245	24		31-51-33	ALL
	39		W1451	0083	24		31-51-33	ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						001-008, 010-099, 115-199
	42		W1451	0328	24		31-51-34	009
	43	UNUSED						ALL
	44		W1451	0174	24		31-51-41	ALL
	45		W1451	0175	24		31-51-41	ALL
	46		W1451	0085	24		22-14-11	001-099
	46		W1451	1061	24		22-14-11	115-199
	47	UNUSED						001-008, 010-099, 115-199
	47		W1451	5022R	24		31-51-34	009
	48	UNUSED						001-008, 010-099, 115-199
	48		W1451	5022B	24		31-51-34	009
	49	UNUSED						001-008, 010-099, 115-199
	49		W1451	FRAZ			31-51-34	009
	50	UNUSED						ALL
	51		W1451	0379	22		31-51-31	001-099
	51	UNUSED						115-199
	52		W1451	2007R	24		31-51-31	001-099
	52	UNUSED						115-199
	53		W1451	2007B	24		31-51-31	001-099
	53	UNUSED						115-199
	54		W1451	0380	22		31-51-31	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 37

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41059J		P051-00/ /		RCPT- (continued)				ALL
	54	UNUSED						115-199
	55	UNUSED						ALL
	DED		W1451	1061Z			22-14-11	115-199
			W1451	0336	20		31-51-34	009
			W1451	5022Z			31-51-34	009
			W1451	FRAZ			31-51-34	009
D41059P		P051-00/ /		PLUG-				001-099
D41059P		P51/ /		PLUG-				115-199
	1		W4477	2003R	24		27-32-11	ALL
	2		W4477	2003B	24		27-32-11	ALL
	3		W4477	0036	24		27-32-11	ALL
	4		W4477	0037	24		27-32-11	ALL
	5		W4477	0038	24		SPARE	ALL
	6		W4477	0039	24		SPARE	ALL
	7		W4477	0040	24		27-32-11	ALL
	8		W4477	0041	24		27-32-11	ALL
	9	UNUSED						001-099
	9		W4477	0113	24		SPARE	115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W4477	0043	24		31-51-31	ALL
	13	UNUSED						ALL
	14		W4477	0045	24		31-51-33	ALL
	15		W4477	0046	24		31-51-33	ALL
	16	UNUSED						ALL
	17		W4477	0048	24		31-51-41	ALL
	18		W4477	0049	24		31-51-41	ALL
	19		W4477	0050	24		31-51-41	ALL
	20		W4477	0051	24		31-51-41	ALL
	21		W4477	0052	24		31-51-41	ALL
	22		W4477	0053	24		31-51-42	ALL
	23		W4477	0054	24		31-51-42	ALL
	24		W4477	0055	24		SPARE	ALL
	25		W4477	0056	24		34-16-11	ALL
	26		W4477	0042	24		31-51-11	ALL
	27		W4477	0109	24		27-32-11	ALL
	28		W4477	0110	24		31-51-41	ALL
	29		W4477	0111	24		31-51-42	ALL
	30		W4477	0112	24		23-21-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 38

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41059P		P051-00/ /		PLUG- (continued)				001-099
D41059P		P51/ /		PLUG- (continued)				115-199
	31		W4477	0114	24		31-51-21	ALL
	32		W4477	0151	24		31-51-41	ALL
	33		W4477	0130	24		31-51-43	ALL
	34		W4477	0141	24		SPARE	ALL
	35	UNUSED						001-099
	35		W4477	0143	24		SPARE	115-199
	36	UNUSED						001-099
	36		W4477	0145	24		SPARE	115-199
	37		W4477	0162	24		31-41-14	ALL
	38		W4477	0160	24		31-51-33	ALL
	39		W4477	0161	24		31-51-33	ALL
	40		W4477	0159	24		SPARE	ALL
	41		W4477	0218	24		SPARE	001-099
	41		W4477	5028R	24		SPARE	115-199
	42		W4477	0224	22		SPARE	001-008, 010-099
	42		W4477	0274	24		31-51-34	009
	42		W4477	5028B	24		SPARE	115-199
	43	UNUSED						001-008, 010-099
	43		W4477	0224	22		SPARE	009
	43		W4477	5028Z			SPARE	115-199
	44		W4477	0232	24		31-51-41	ALL
	45		W4477	0233	24		31-51-41	ALL
	46		W4477	0416	22		22-14-11	ALL
	47	UNUSED						001-008, 010-099, 115-199
	47		W4477	5061R	24		31-51-34	009
	48	UNUSED						001-008, 010-099, 115-199
	48		W4477	5061B	24		31-51-34	009
	49	UNUSED						001-008, 010-099, 115-199
	49		W4477	5061Z			31-51-34	009
	50	UNUSED						ALL
	51		W4477	0259	22		31-51-31	001-008, 115-199
	51	UNUSED						009-099
	52		W4477	0259	22		31-51-31	001-008, 115-199
	52		W4477	5054R	24		34-45-02	009-099
	53		W4477	0260	22		31-51-31	001-008, 115-199
	53		W4477	5054B	24		34-45-02	009-099
	54		W4477	0260	22		31-51-31	001-008, 115-199
	54	UNUSED						009-099
	55	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 39

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41059P		P051-00/ /		PLUG- (continued)				001-099
D41059P		P51/ /		PLUG- (continued)				115-199
	CAP	Y	W4477	5054B	24		34-45-02	001-008, 115-199
	CAP	Y	W4477	5054R	24		34-45-02	001-008, 115-199
	DED		W4477	5054Z			34-45-02	ALL
D41060J		P36/ /		RCPT				ALL
	1		W1260	0218	24		21-58-11	ALL
	2		W1260	5536	24		21-58-11	ALL
	3		W1260	5514	20		21-58-11	ALL
	4		W1260	0007	20		21-58-11	ALL
	5		W1260	5518	24		21-58-11	ALL
	6		W1260	0526	24		21-58-12	ALL
	7		W1260	0898	24		21-58-12	ALL
	8	UNUSED						ALL
	9		W1260	0869	22		21-58-15	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						001-099
	12		W1260	0585	20		26-22-21	115-199
	13	UNUSED						001-099
	13		W1260	0579	20		26-22-21	115-199
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W1260	0910	24		21-58-12	ALL
	19	UNUSED						ALL
	20		W1260	5866	24		21-25-11	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W1260	0900	22		21-58-12	ALL
	32		W1260	0698	24		21-58-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 40

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41060J		P36/ /		RCPT (continued)				ALL
	33		W1260	0650	20		74-31-11	ALL
	34		W1260	0909	24		21-58-12	ALL
	35		W1260	0313	22		21-58-12	ALL
	36	UNUSED						ALL
	37		W1260	0019	24		26-11-11	ALL
	38		W1260	0020	24		26-15-11	ALL
	39		W1260	0649	20		74-31-11	ALL
D41060P		P036-00/ /		PLUG				001-099
D41060P		P36/ /		PLUG				115-199
	1		W2156	0030	24		21-58-11	ALL
	2		W2156	0031	24		21-58-11	ALL
	3		W2156	0032	20		21-58-11	ALL
	4		W2156	0033	20		21-58-11	ALL
	5		W2156	0034	24		21-58-11	ALL
	6		W2156	0078	24		21-58-12	ALL
	7		W2156	0038	24		21-58-12	ALL
	8		W2156	0016	22		SPARE	001-099
	8	UNUSED						115-199
	9		W2156	0173	22		21-58-15	ALL
	10		W2156	0125	22		SPARE	ALL
	11	UNUSED						ALL
	12	UNUSED						001-099
	12		W2156	0118	20		26-22-21	115-199
	13	UNUSED						001-099
	13		W2156	0119	20		26-22-21	115-199
	14		W2156	0127	22		SPARE	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W2156	0130	20		SPARE	001-099
	17	UNUSED						115-199
	18		W2156	0044	24		21-58-12	ALL
	19		W2156	0131	20		SPARE	ALL
	20		W2156	0124	24		21-25-11	ALL
	21	UNUSED						001-099
	21		W2156	0132	16		SPARE	115-199
	22	UNUSED						001-099
	22		W2156	0133	20		SPARE	115-199
	23	UNUSED						ALL
	24	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 41

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41060P		P036-00/ /		PLUG (continued)				001-099
D41060P		P36/ /		PLUG (continued)				115-199
	24		W2156	0135	20		SPARE	115-199
	25	UNUSED						001-099
	25		W2156	0136	20		SPARE	115-199
	26	UNUSED						001-099
	26		W2156	0137	20		SPARE	115-199
	27	UNUSED						001-099
	27		W2156	0138	20		SPARE	115-199
	28	UNUSED						001-099
	28		W2156	0139	20		SPARE	115-199
	29	UNUSED						001-099
	29		W2156	0140	20		SPARE	115-199
	30	UNUSED						001-099
	30		W2156	0146	20		SPARE	115-199
	31		W2156	0147	22		21-58-12	ALL
	32		W2156	0148	24		21-58-12	ALL
	33		W2156	0048	20		74-31-11	ALL
	34		W2156	0149	24		21-58-12	ALL
	35		W2156	0150	22		21-58-12	ALL
	36	UNUSED						001-099
	36		W2156	0134	20		SPARE	115-199
	37		W2156	0064	22		26-11-11	ALL
	38		W2156	0075	22		26-15-11	ALL
	39		W2156	0049	20		74-31-11	ALL
D41061J		E002-01/ /		RCPT-				001-099
D41061J		E2-1/ /		RCPT-				115-199
	1		W1171	0044	20		34-43-11	ALL
	2		W1171	0045	22		34-43-11	ALL
	3		W1171	5025W	24		34-43-11	001, 003-099, 115-199
	3		W1171	5025W	24		34-43-15	002
	4		W1171	5025B	24		34-43-11	001, 003-099, 115-199
	4		W1171	5025B	24		34-43-15	002
	5		W1171	5025Z			34-43-11	001, 003-099, 115-199
	5		W1171	5025Z			34-43-15	002
	6		W1171	0269	24		34-43-12	001, 003-099, 115-199
	6		W1171	0269	22		34-43-12	002
	7		W1171	5016Z			34-43-11	001, 003-099, 115-199
	7		W1171	5297Z			34-43-11	002
	8		W1171	5016R	24		34-43-11	001, 003-099, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 42

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41061J		E002-01/ /		RCPT- (continued)				001-099
D41061J		E2-1/ /		RCPT- (continued)				115-199
	8		W1171	5297R	22		34-43-11	002
	9		W1171	5016B	24		34-43-11	001, 003-099, 115-199
	9		W1171	5297B	22		34-43-11	002
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D41061P		E002-01/ /		PLUG-				ALL
	1		W2309	0016	20		34-43-11	ALL
	2		W2309	0017	22		34-43-11	ALL
	3		W2309	5101W	24		34-43-11	ALL
	4		W2309	5101B	24		34-43-11	ALL
	5		W2309	5101Z			34-43-11	ALL
	6		W2309	0011	24		34-43-12	ALL
	7		W2309	5001Z			34-43-11	ALL
	8		W2309	5001R	24		34-43-11	ALL
	9		W2309	5001B	24		34-43-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D41062J		E6 RLY/PNL/		RECEPTACLE				001-099
D41062J		E6 RLY/PNL/		RCPT				115-199
	1		W1024	1004	24		28-25-21	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	DED		W1024	1004Z			28-25-21	ALL
D41062P		1455/190/R050		PLUG				001-099
D41062P		E6/ /		PLUG				115-199
	1		W2626	0015	20		28-25-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 43

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41062P		1455/190/R050		PLUG (continued)				001-099
D41062P		E6/ /		PLUG (continued)				115-199
	2		W2626	0012	20		SPARE	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W2626	0016	20		SPARE	ALL
D41063J		E002-02/ /		RCPT-				001-099
D41063J		E2-2/ /		RCPT-				115-199
	1		W1173	5081W	24		34-43-11	001, 003-099, 115-199
	1		W1173	5285W	24		34-43-15	002
	2		W1173	5081B	24		34-43-11	001, 003-099, 115-199
	2		W1173	5285B	24		34-43-15	002
	3		W1173	5081Z			34-43-11	001, 003-099, 115-199
	3		W1173	5285Z			34-43-15	002
	4		W1173	5032R	24		34-43-11	ALL
	5		W1173	5032B	24		34-43-11	ALL
	6		W1173	5032Z			34-43-11	ALL
	7		W1173	5079R	24		34-43-11	ALL
	8		W1173	5079B	24		34-43-11	ALL
	9		W1173	5079Z			34-43-11	ALL
	10		W1173	0066	24		34-43-12	001, 003-099, 115-199
	10		W1173	0571	22		34-22-28	002
	11		W1173	5007R	24		34-43-11	001, 003-099, 115-199
	11		W1173	5297R	22		34-43-11	002
	12		W1173	5007B	24		34-43-11	001, 003-099, 115-199
	12		W1173	5297B	22		34-43-11	002
	13		W1173	5007Z			34-43-11	001, 003-099, 115-199
	13		W1173	5297Z			34-43-11	002
	14	UNUSED						001-008, 010-099
	14		W1173	5136R	24		34-46-12	009, 115-199
	15	UNUSED						001-008, 010-099
	15		W1173	5136B	24		34-46-12	009, 115-199
	16	UNUSED						001-008, 010-099
	16		W1173	5136Z			34-46-12	009, 115-199
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						001, 003-099, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 44

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41063J		E002-02/ /		RCPT- (continued)				001-099
D41063J		E2-2/ /		RCPT- (continued)				115-199
	22		W1173	5221R	22		34-43-14	002
	23	UNUSED						001, 003-099, 115-199
	23		W1173	5221B	22		34-43-14	002
	24	UNUSED						001, 003-099, 115-199
	24		W1173	5221Z			34-43-14	002
	REF	VP	W1173	0066	24		34-43-12	002
D41063P		E002-02/ /		PLUG-				ALL
	1		W2309	5103W	24		34-43-11	ALL
	2		W2309	5103B	24		34-43-11	ALL
	3		W2309	5103Z			34-43-11	ALL
	4		W2309	5105R	24		34-43-11	ALL
	5		W2309	5105B	24		34-43-11	ALL
	6		W2309	5105Z			34-43-11	ALL
	7		W2309	5106R	24		34-43-11	ALL
	8		W2309	5106B	24		34-43-11	ALL
	9		W2309	5106Z			34-43-11	ALL
	10		W2309	0010	24		34-43-12	ALL
	11		W2309	5002R	24		34-43-11	ALL
	12		W2309	5002B	24		34-43-11	ALL
	13		W2309	5002Z			34-43-11	ALL
	14	UNUSED						001-008, 010-099
	14		W2309	5003R	24		34-46-12	009, 115-199
	15	UNUSED						001-008, 010-099
	15		W2309	5003B	24		34-46-12	009, 115-199
	16	UNUSED						001-008, 010-099
	16		W2309	5003Z			34-46-12	009, 115-199
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						001, 003-099, 115-199
	22		W2309	5008R	22		34-43-14	002
	23	UNUSED						001, 003-099, 115-199
	23		W2309	5008B	22		34-43-14	002
	24	UNUSED						001, 003-099, 115-199
	24		W2309	5008Z			34-43-14	002

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 45

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41065J		E4-2/ /		RCPT-				ALL
	1	UNUSED						ALL
	2		W1275	0876	24		31-41-19	ALL
	3		W1275	0539	24		31-41-19	ALL
	3		W1275	0540	24		31-41-19	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1275	FRDR			31-41-19	ALL
	8		W1275	5032R	24		31-41-19	ALL
	9		W1275	5032B	24		31-41-19	ALL
	10		W1275	5031R	24		31-41-19	ALL
	11		W1275	5031B	24		31-41-19	ALL
	12		W1275	FRDQ			31-41-19	ALL
	13	UNUSED						ALL
	14		W1275	0884	24		31-41-19	ALL
	15	UNUSED						ALL
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
			W1275	5031Z			31-41-19	ALL
			W1275	5032Z			31-41-19	ALL
			W1275	5803	20		31-41-19	ALL
			W1275	5804	20		31-41-19	ALL
			W1275	FRDQ			31-41-19	ALL
			W1275	FRDR			31-41-19	ALL
D41065P		E4-2/ /		PLUG				ALL
	1	UNUSED						ALL
	2		W2315	0004	24		31-41-19	ALL
	3		W2315	0005	24		31-41-19	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W2315	5002Z			31-41-19	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 46

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41065P		E4-2/ /		PLUG (continued)				ALL
	8		W2315	5002R	24		31-41-19	ALL
	9		W2315	5002B	24		31-41-19	ALL
	10		W2315	5001R	24		31-41-19	ALL
	11		W2315	5001B	24		31-41-19	ALL
	12		W2315	5001Z			31-41-19	ALL
	13	UNUSED						ALL
	14		W2315	0014	24		31-41-19	ALL
	15	UNUSED						ALL
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
D41069J		E4-2/ /		RCPT-				ALL
	1		W1275	2537Z			31-41-11	ALL
	2		W1275	2537T	24		31-41-11	ALL
	3		W1275	2537W	24		31-41-11	ALL
	4		W1275	2538Z			31-41-11	ALL
	5		W1275	2538T	24		31-41-11	ALL
	6		W1275	2538W	24		31-41-11	ALL
	7		W1275	2539Z			31-41-11	ALL
	8		W1275	2539T	24		31-41-11	ALL
	9		W1275	2539W	24		31-41-11	ALL
	10		W1275	2540Z			31-41-11	ALL
	11		W1275	2540T	24		31-41-11	ALL
	12		W1275	2540W	24		31-41-11	ALL
	13		W1275	2541Z			31-41-11	ALL
	14		W1275	2541T	24		31-41-11	ALL
	15		W1275	2541W	24		31-41-11	ALL
	16		W1275	2542Z			31-41-11	ALL
	17		W1275	2542T	24		31-41-11	ALL
	18		W1275	2542W	24		31-41-11	ALL
	19		W1275	2543Z			31-41-11	ALL
	20		W1275	2543T	24		31-41-11	ALL
	21		W1275	2543W	24		31-41-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 47

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41069J		E4-2/ /		RCPT- (continued)				ALL
	22		W1275	2544Z			31-41-11	ALL
	23		W1275	2544T	24		31-41-11	ALL
	24		W1275	2544W	24		31-41-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W1275	5878	24		31-41-14	ALL
	28		W1275	5918	24		31-41-24	ALL
	29		W1275	5880	24		31-41-14	ALL
	29		W1275	5919	24		31-41-24	ALL
	30		W1275	5882	24		31-41-14	ALL
	30		W1275	5920	24		31-41-24	ALL
	31	UNUSED						ALL
D41069P		E004-02/ /		PLUG				ALL
	1		W2311	2501Z			31-41-11	ALL
	2		W2311	2501T	24		31-41-11	ALL
	3		W2311	2501W	24		31-41-11	ALL
	4		W2311	2502Z			31-41-11	ALL
	5		W2311	2502T	24		31-41-11	ALL
	6		W2311	2502W	24		31-41-11	ALL
	7		W2311	2503Z			31-41-11	ALL
	8		W2311	2503T	24		31-41-11	ALL
	9		W2311	2503W	24		31-41-11	ALL
	10		W2311	2504Z			31-41-11	ALL
	11		W2311	2504T	24		31-41-11	ALL
	12		W2311	2504W	24		31-41-11	ALL
	13		W2311	2505Z			31-41-11	ALL
	14		W2311	2505T	24		31-41-11	ALL
	15		W2311	2505W	24		31-41-11	ALL
	16		W2311	2506Z			31-41-11	ALL
	17		W2311	2506T	24		31-41-11	ALL
	18		W2311	2506W	24		31-41-11	ALL
	19		W2311	2507Z			31-41-11	ALL
	20		W2311	2507T	24		31-41-11	ALL
	21		W2311	2507W	24		31-41-11	ALL
	22		W2311	2508Z			31-41-11	ALL
	23		W2311	2508T	24		31-41-11	ALL
	24		W2311	2508W	24		31-41-11	ALL
	25		W2311	2509T	24		SPARE	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 48

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41069P		E004-02/ /		PLUG (continued)				ALL
	25	UNUSED						115-199
	26		W2311	2509W	24		SPARE	001-099
	26	UNUSED						115-199
	27		W2311	2509Z			SPARE	001-099
	27	UNUSED						115-199
	28		W2311	0011	24		31-41-14	ALL
	29		W2311	0012	24		31-41-14	ALL
	30		W2311	0013	24		31-41-14	ALL
	31	UNUSED						ALL
D41071J		E4-2/ /		RCPT-				ALL
	1		W1275	2562Z			31-41-21	ALL
	2		W1275	2562T	24		31-41-21	ALL
	3		W1275	2562W	24		31-41-21	ALL
	4		W1275	2563Z			31-41-21	ALL
	5		W1275	2563T	24		31-41-21	ALL
	6		W1275	2563W	24		31-41-21	ALL
	7		W1275	2564Z			31-41-21	ALL
	8		W1275	2564T	24		31-41-21	ALL
	9		W1275	2564W	24		31-41-21	ALL
	10		W1275	2565Z			31-41-21	ALL
	11		W1275	2565T	24		31-41-21	ALL
	12		W1275	2565W	24		31-41-21	ALL
	13		W1275	2566Z			31-41-21	ALL
	14		W1275	2566T	24		31-41-21	ALL
	15		W1275	2566W	24		31-41-21	ALL
	16		W1275	2567Z			31-41-21	ALL
	17		W1275	2567T	24		31-41-21	ALL
	18		W1275	2567W	24		31-41-21	ALL
	19		W1275	2568Z			31-41-21	ALL
	20		W1275	2568T	24		31-41-21	ALL
	21		W1275	2568W	24		31-41-21	ALL
	22		W1275	2569Z			31-41-21	ALL
	23		W1275	2569T	24		31-41-21	ALL
	24		W1275	2569W	24		31-41-21	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W1275	5884	24		31-41-14	ALL
	28		W1275	5921	24		31-41-24	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 49

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41071J		E4-2/ /		RCPT- (continued)				ALL
	29		W1275	5886	24		31-41-14	ALL
	29		W1275	5922	24		31-41-24	ALL
	30		W1275	5888	24		31-41-14	ALL
	30		W1275	5923	24		31-41-24	ALL
	31	UNUSED						ALL
D41071P		E004-02/ /		PLUG				ALL
	1		W2313	2501Z			31-41-21	ALL
	2		W2313	2501T	24		31-41-21	ALL
	3		W2313	2501W	24		31-41-21	ALL
	4		W2313	2502Z			31-41-21	ALL
	5		W2313	2502T	24		31-41-21	ALL
	6		W2313	2502W	24		31-41-21	ALL
	7		W2313	2503Z			31-41-21	ALL
	8		W2313	2503T	24		31-41-21	ALL
	9		W2313	2503W	24		31-41-21	ALL
	10		W2313	2504Z			31-41-21	ALL
	11		W2313	2504T	24		31-41-21	ALL
	12		W2313	2504W	24		31-41-21	ALL
	13		W2313	2505Z			31-41-21	ALL
	14		W2313	2505T	24		31-41-21	ALL
	15		W2313	2505W	24		31-41-21	ALL
	16		W2313	2506Z			31-41-21	ALL
	17		W2313	2506T	24		31-41-21	ALL
	18		W2313	2506W	24		31-41-21	ALL
	19		W2313	2507Z			31-41-21	ALL
	20		W2313	2507T	24		31-41-21	ALL
	21		W2313	2507W	24		31-41-21	ALL
	22		W2313	2508Z			31-41-21	ALL
	23		W2313	2508T	24		31-41-21	ALL
	24		W2313	2508W	24		31-41-21	ALL
	25		W2313	2509T	24		SPARE	001-099
	25	UNUSED						115-199
	26		W2313	2509W	24		SPARE	001-099
	26	UNUSED						115-199
	27		W2313	2509Z			SPARE	001-099
	27	UNUSED						115-199
	28		W2313	0011	24		31-41-14	ALL
	29		W2313	0012	24		31-41-14	ALL
	30		W2313	0013	24		31-41-14	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 50

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41071P		E004-02/ /		PLUG (continued)				ALL
	31	UNUSED						ALL
D41072J		AS1140/ /		RCPT				ALL
	1	UNUSED						ALL
	2		W3370	0002	20		26-11-12	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W3370	0001	20		26-11-12	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D41072P		AS1140/ /		PLUG				ALL
	1	UNUSED						ALL
	2		W3368	0002	18		26-11-12	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W3368	0001	18		26-11-12	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D41073J		E002-01/ /		RCPT-				001-099
D41073J		E2-1/ /		RCPT-				115-199
	1		W1171	2501T	24		34-22-14	ALL
	2		W1171	2501W	24		34-22-14	ALL
	3		W1171	2501Z			34-22-14	ALL
	4		W1171	2502T	24		34-22-14	ALL
	5		W1171	2502W	24		34-22-14	ALL
	6		W1171	2502Z			34-22-14	ALL
	7		W1171	2503T	24		34-22-14	ALL
	8		W1171	2503W	24		34-22-14	ALL
	9		W1171	2503Z			34-22-14	ALL
	10		W1171	2504T	24		34-22-14	ALL
	11		W1171	2504W	24		34-22-14	ALL
	12		W1171	2504Z			34-22-14	ALL
	13		W1171	2505T	24		34-22-14	ALL
	14		W1171	2505W	24		34-22-14	ALL
	15		W1171	2505Z			34-22-14	ALL
	16		W1171	2506T	24		34-22-14	ALL
	17		W1171	2506W	24		34-22-14	ALL
	18		W1171	2506Z			34-22-14	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 51

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41073J		E002-01/ /		RCPT- (continued)				001-099
D41073J		E2-1/ /		RCPT- (continued)				115-199
	19		W1171	2507T	24		34-22-14	ALL
	20		W1171	2507W	24		34-22-14	ALL
	21		W1171	2507Z			34-22-14	ALL
	22		W1171	2508T	24		34-22-14	ALL
	23		W1171	2508W	24		34-22-14	ALL
	24		W1171	2508Z			34-22-14	ALL
	25		W1171	2509T	24		34-22-14	ALL
	26		W1171	2509W	24		34-22-14	ALL
	27		W1171	2509Z			34-22-14	ALL
	28		W1171	0001	24		34-22-14	ALL
	29		W1171	0003	24		34-22-14	ALL
	30		W1171	0005	24		34-22-14	ALL
	31		W1171	5001B	24		34-22-14	ALL
	32		W1171	5001R	24		34-22-14	ALL
	33		W1171	5001Z			34-22-14	ALL
	34		W1171	0269	24		34-43-12	001, 003-099, 115-199
	34	UNUSED						002
	35		W1171	0321	24		34-22-16	ALL
	36		W1171	0323	24		34-22-16	ALL
	37		W1171	0322	24		34-22-16	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D41073P		E002-01/ /		PLUG				ALL
	1		W2321	2512T	24		34-22-14	ALL
	2		W2321	2512W	24		34-22-14	ALL
	3		W2321	2512Z			34-22-14	ALL
	4		W2321	2513T	24		34-22-14	ALL
	5		W2321	2513W	24		34-22-14	ALL
	6		W2321	2513Z			34-22-14	ALL
	7		W2321	2514T	24		34-22-14	ALL
	8		W2321	2514W	24		34-22-14	ALL
	9		W2321	2514Z			34-22-14	ALL
	10		W2321	2515T	24		34-22-14	ALL
	11		W2321	2515W	24		34-22-14	ALL
	12		W2321	2515Z			34-22-14	ALL
	13		W2321	2516T	24		34-22-14	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 52

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41073P		E002-01/ /		PLUG (continued)				ALL
	14		W2321	2516W	24		34-22-14	ALL
	15		W2321	2516Z			34-22-14	ALL
	16		W2321	2517T	24		34-22-14	ALL
	17		W2321	2517W	24		34-22-14	ALL
	18		W2321	2517Z			34-22-14	ALL
	19		W2321	2518T	24		34-22-14	ALL
	20		W2321	2518W	24		34-22-14	ALL
	21		W2321	2518Z			34-22-14	ALL
	22		W2321	2519T	24		34-22-14	ALL
	23		W2321	2519W	24		34-22-14	ALL
	24		W2321	2519Z			34-22-14	ALL
	25		W2321	2520T	24		34-22-14	ALL
	26		W2321	2520W	24		34-22-14	ALL
	27		W2321	2520Z			34-22-14	ALL
	28		W2321	0009	24		34-22-14	ALL
	29		W2321	0010	24		34-22-14	ALL
	30		W2321	0011	24		34-22-14	ALL
	31		W2321	5001B	24		34-22-14	ALL
	32		W2321	5001R	24		34-22-14	ALL
	33		W2321	5001Z			34-22-14	ALL
	34		W2321	0023	24		34-43-12	ALL
	35		W2321	0036	24		34-22-16	ALL
	36		W2321	0038	24		34-22-16	ALL
	37		W2321	0039	24		34-22-16	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D41074J		AS2140/ /		RCPT				ALL
	1	UNUSED						ALL
	2		W3470	0002	20		26-11-22	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W3470	0001	20		26-11-22	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D41074P		AS2140/ /		PLUG				ALL
	1	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 53

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41074P		AS2140/ /		PLUG (continued)				ALL
	2		W3468	0002	18		26-11-22	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W3468	0001	18		26-11-22	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D41075J		E002-01/ /		RCPT-				001-099
D41075J		E2-1/ /		RCPT-				115-199
	1		W1171	2510T	24		34-22-15	ALL
	2		W1171	2510W	24		34-22-15	ALL
	3		W1171	2510Z			34-22-15	ALL
	4		W1171	2511T	24		34-22-15	ALL
	5		W1171	2511W	24		34-22-15	ALL
	6		W1171	2511Z			34-22-15	ALL
	7		W1171	2512T	24		34-22-15	ALL
	8		W1171	2512W	24		34-22-15	ALL
	9		W1171	2512Z			34-22-15	ALL
	10		W1171	2513T	24		34-22-15	ALL
	11		W1171	2513W	24		34-22-15	ALL
	12		W1171	2513Z			34-22-15	ALL
	13		W1171	2514T	24		34-22-15	ALL
	14		W1171	2514W	24		34-22-15	ALL
	15		W1171	2514Z			34-22-15	ALL
	16		W1171	2515T	24		34-22-15	ALL
	17		W1171	2515W	24		34-22-15	ALL
	18		W1171	2515Z			34-22-15	ALL
	19		W1171	2516T	24		34-22-15	ALL
	20		W1171	2516W	24		34-22-15	ALL
	21		W1171	2516Z			34-22-15	ALL
	22		W1171	2517T	24		34-22-15	ALL
	23		W1171	2517W	24		34-22-15	ALL
	24		W1171	2517Z			34-22-15	ALL
	25		W1171	2518T	24		34-22-15	ALL
	26		W1171	2518W	24		34-22-15	ALL
	27		W1171	2518Z			34-22-15	ALL
	28		W1171	0022	24		34-22-15	ALL
	29		W1171	0023	24		34-22-15	ALL
	30		W1171	0024	24		34-22-15	ALL
	31	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 54

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41075J		E002-01/ /		RCPT- (continued)				001-099
D41075J		E2-1/ /		RCPT- (continued)				115-199
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D41075P		E002-01/ /		PLUG				ALL
	1		W2321	2501T	24		34-22-15	ALL
	2		W2321	2501W	24		34-22-15	ALL
	3		W2321	2501Z			34-22-15	ALL
	4		W2321	2502T	24		34-22-15	ALL
	5		W2321	2502W	24		34-22-15	ALL
	6		W2321	2502Z			34-22-15	ALL
	7		W2321	2503T	24		34-22-15	ALL
	8		W2321	2503W	24		34-22-15	ALL
	9		W2321	2503Z			34-22-15	ALL
	10		W2321	2504T	24		34-22-15	ALL
	11		W2321	2504W	24		34-22-15	ALL
	12		W2321	2504Z			34-22-15	ALL
	13		W2321	2505T	24		34-22-15	ALL
	14		W2321	2505W	24		34-22-15	ALL
	15		W2321	2505Z			34-22-15	ALL
	16		W2321	2506T	24		34-22-15	ALL
	17		W2321	2506W	24		34-22-15	ALL
	18		W2321	2506Z			34-22-15	ALL
	19		W2321	2507T	24		34-22-15	ALL
	20		W2321	2507W	24		34-22-15	ALL
	21		W2321	2507Z			34-22-15	ALL
	22		W2321	2508T	24		34-22-15	ALL
	23		W2321	2508W	24		34-22-15	ALL
	24		W2321	2508Z			34-22-15	ALL
	25		W2321	2509T	24		34-22-15	ALL
	26		W2321	2509W	24		34-22-15	ALL
	27		W2321	2509Z			34-22-15	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 55

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41075P		E002-01/ /		PLUG (continued)				ALL
	28		W2321	0002	24		34-22-15	ALL
	29		W2321	0003	24		34-22-15	ALL
	30		W2321	0004	24		34-22-15	ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D41077J		E2-2/ /		RCPT-				ALL
	1		W1173	2501T	24		34-22-24	ALL
	2		W1173	2501W	24		34-22-24	ALL
	3		W1173	2501Z			34-22-24	ALL
	4		W1173	2502T	24		34-22-24	ALL
	5		W1173	2502W	24		34-22-24	ALL
	6		W1173	2502Z			34-22-24	ALL
	7		W1173	2503T	24		34-22-24	ALL
	8		W1173	2503W	24		34-22-24	ALL
	9		W1173	2503Z			34-22-24	ALL
	10		W1173	2504T	24		34-22-24	ALL
	11		W1173	2504W	24		34-22-24	ALL
	12		W1173	2504Z			34-22-24	ALL
	13		W1173	2505T	24		34-22-24	ALL
	14		W1173	2505W	24		34-22-24	ALL
	15		W1173	2505Z			34-22-24	ALL
	16		W1173	2506T	24		34-22-24	ALL
	17		W1173	2506W	24		34-22-24	ALL
	18		W1173	2506Z			34-22-24	ALL
	19		W1173	2507T	24		34-22-24	ALL
	20		W1173	2507W	24		34-22-24	ALL
	21		W1173	2507Z			34-22-24	ALL
	22		W1173	2508T	24		34-22-24	ALL
	23		W1173	2508W	24		34-22-24	ALL
	24		W1173	2508Z			34-22-24	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 56

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41077J		E2-2/ /		RCPT- (continued)				ALL
	25		W1173	2509T	24		34-22-24	ALL
	26		W1173	2509W	24		34-22-24	ALL
	27		W1173	2509Z			34-22-24	ALL
	28		W1173	0013	24		34-22-24	ALL
	29		W1173	0014	24		34-22-24	ALL
	30		W1173	0015	24		34-22-24	ALL
	31		W1173	5005B	24		34-22-24	ALL
	32		W1173	5005R	24		34-22-24	ALL
	33		W1173	5005Z			34-22-24	ALL
	34		W1173	0066	24		34-43-12	001-099
	34	UNUSED						115-199
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42		W1173	0066	24		34-43-12	115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D41077P		E002-02/ /		PLUG				ALL
	1		W2323	2501T	24		34-22-24	ALL
	2		W2323	2501W	24		34-22-24	ALL
	3		W2323	2501Z			34-22-24	ALL
	4		W2323	2502T	24		34-22-24	ALL
	5		W2323	2502W	24		34-22-24	ALL
	6		W2323	2502Z			34-22-24	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 57

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41077P		E002-02/ /		PLUG (continued)				ALL
	7		W2323	2503T	24		34-22-24	ALL
	8		W2323	2503W	24		34-22-24	ALL
	9		W2323	2503Z			34-22-24	ALL
	10		W2323	2504T	24		34-22-24	ALL
	11		W2323	2504W	24		34-22-24	ALL
	12		W2323	2504Z			34-22-24	ALL
	13		W2323	2505T	24		34-22-24	ALL
	14		W2323	2505W	24		34-22-24	ALL
	15		W2323	2505Z			34-22-24	ALL
	16		W2323	2506T	24		34-22-24	ALL
	17		W2323	2506W	24		34-22-24	ALL
	18		W2323	2506Z			34-22-24	ALL
	19		W2323	2507T	24		34-22-24	ALL
	20		W2323	2507W	24		34-22-24	ALL
	21		W2323	2507Z			34-22-24	ALL
	22		W2323	2508T	24		34-22-24	ALL
	23		W2323	2508W	24		34-22-24	ALL
	24		W2323	2508Z			34-22-24	ALL
	25		W2323	2509T	24		34-22-24	ALL
	26		W2323	2509W	24		34-22-24	ALL
	27		W2323	2509Z			34-22-24	ALL
	28		W2323	0001	24		34-22-24	ALL
	29		W2323	0002	24		34-22-24	ALL
	30		W2323	0003	24		34-22-24	ALL
	31		W2323	5001B	24		34-22-24	ALL
	32		W2323	5001R	24		34-22-24	ALL
	33		W2323	5001Z			34-22-24	ALL
	34		W2323	0028	24		34-43-12	001, 003-099
	34		W2323	0028	24		SPARE	002
	34	UNUSED						115-199
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42		W2323	0028	24		34-43-12	115-199
	43	UNUSED						115-199
	44	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 58

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41077P		E002-02/ /		PLUG (continued)				ALL
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D41079J		E002-02/ /		RCPT-				001-099
D41079J		E2-2/ /		RCPT-				115-199
	1		W1173	2510T	24		34-22-25	ALL
	2		W1173	2510W	24		34-22-25	ALL
	3		W1173	2510Z			34-22-25	ALL
	4		W1173	2511T	24		34-22-25	ALL
	5		W1173	2511W	24		34-22-25	ALL
	6		W1173	2511Z			34-22-25	ALL
	7		W1173	2512T	24		34-22-25	ALL
	8		W1173	2512W	24		34-22-25	ALL
	9		W1173	2512Z			34-22-25	ALL
	10		W1173	2513T	24		34-22-25	ALL
	11		W1173	2513W	24		34-22-25	ALL
	12		W1173	2513Z			34-22-25	ALL
	13		W1173	2514T	24		34-22-25	ALL
	14		W1173	2514W	24		34-22-25	ALL
	15		W1173	2514Z			34-22-25	ALL
	16		W1173	2515T	24		34-22-25	ALL
	17		W1173	2515W	24		34-22-25	ALL
	18		W1173	2515Z			34-22-25	ALL
	19		W1173	2516T	24		34-22-25	ALL
	20		W1173	2516W	24		34-22-25	ALL
	21		W1173	2516Z			34-22-25	ALL
	22		W1173	2517T	24		34-22-25	ALL
	23		W1173	2517W	24		34-22-25	ALL
	24		W1173	2517Z			34-22-25	ALL
	25		W1173	2518T	24		34-22-25	ALL
	26		W1173	2518W	24		34-22-25	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 59

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41079J		E002-02/ /		RCPT- (continued)				001-099
D41079J		E2-2/ /		RCPT- (continued)				115-199
	27		W1173	2518Z			34-22-25	ALL
	28		W1173	0022	24		34-22-25	ALL
	29		W1173	0023	24		34-22-25	ALL
	30		W1173	0024	24		34-22-25	ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D41079P		E002-02/ /		PLUG				ALL
	1		W2323	2511T	24		34-22-25	ALL
	2		W2323	2511W	24		34-22-25	ALL
	3		W2323	2511Z			34-22-25	ALL
	4		W2323	2512T	24		34-22-25	ALL
	5		W2323	2512W	24		34-22-25	ALL
	6		W2323	2512Z			34-22-25	ALL
	7		W2323	2513T	24		34-22-25	ALL
	8		W2323	2513W	24		34-22-25	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 60

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41079P		E002-02/ /		PLUG (continued)				ALL
	9		W2323	2513Z			34-22-25	ALL
	10		W2323	2514T	24		34-22-25	ALL
	11		W2323	2514W	24		34-22-25	ALL
	12		W2323	2514Z			34-22-25	ALL
	13		W2323	2515T	24		34-22-25	ALL
	14		W2323	2515W	24		34-22-25	ALL
	15		W2323	2515Z			34-22-25	ALL
	16		W2323	2516T	24		34-22-25	ALL
	17		W2323	2516W	24		34-22-25	ALL
	18		W2323	2516Z			34-22-25	ALL
	19		W2323	2517T	24		34-22-25	ALL
	20		W2323	2517W	24		34-22-25	ALL
	21		W2323	2517Z			34-22-25	ALL
	22		W2323	2518T	24		34-22-25	ALL
	23		W2323	2518W	24		34-22-25	ALL
	24		W2323	2518Z			34-22-25	ALL
	25		W2323	2519T	24		34-22-25	ALL
	26		W2323	2519W	24		34-22-25	ALL
	27		W2323	2519Z			34-22-25	ALL
	28		W2323	0016	24		34-22-25	ALL
	29		W2323	0017	24		34-22-25	ALL
	30		W2323	0018	24		34-22-25	ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 61

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41079P		E002-02/ /		PLUG (continued)				ALL
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D41081J		E002-01/ /		RCPT-				001-099
D41081J		E002-001/ /		RCPT- (34-0414)				115-199
	1		W1171	5070B	24		34-61-11	ALL
	2		W1171	5070R	24		34-61-11	ALL
	3		W1171	5070Z			34-61-11	ALL
	4		W1171	5067B	24		34-61-11	ALL
	5		W1171	5067R	24		34-61-11	ALL
	6		W1171	5067Z			34-61-11	ALL
	7		W1171	5066B	24		34-61-11	ALL
	8		W1171	5066R	24		34-61-11	ALL
	9		W1171	FRAI			34-61-11	ALL
	10		W1171	0123	24		34-61-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						001-099
	15		W1171	FRQW			34-61-16	115-199
	16	UNUSED						001-099
	16		W1171	5209B	22		34-61-16	115-199
	17	UNUSED						001-099
	17		W1171	5209R	22		34-61-16	115-199
	18	UNUSED						001-099
	18		W1171	5206Z			34-61-11	115-199
	19		W1171	5207R	24		34-61-11	001-099
	19		W1171	5207R	22		34-61-11	115-199
	20		W1171	5207B	24		34-61-11	001-099
	20		W1171	5207B	22		34-61-11	115-199
	21		W1171	5207Z			34-61-11	ALL
	22	UNUSED						001-099
	22		W1171	5206B	22		34-61-11	115-199
	23	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 62

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41081J		E002-01/ /		RCPT- (continued)				001-099
D41081J		E002-001/ /		RCPT- (34-0414) (continued)				115-199
	23		W1171	5206R	22		34-61-11	115-199
	24	UNUSED						ALL
			W1171	0177	20		34-61-11	ALL
			W1171	5066Z			34-61-11	ALL
			W1171	FRAI			34-61-11	ALL
			W1171	0709	22		34-61-16	115-199
			W1171	5209Z			34-61-16	115-199
			W1171	FRQW			34-61-16	115-199
D41081P		E002-01/ /		PLUG-				001-099
D41081P		E2-1/ /		PLUG-				115-199
	1		W2331	5003B	24		34-61-11	ALL
	2		W2331	5003R	24		34-61-11	ALL
	3		W2331	5003Z			34-61-11	ALL
	4		W2331	5002B	24		34-61-11	ALL
	5		W2331	5002R	24		34-61-11	ALL
	6		W2331	5002Z			34-61-11	ALL
	7		W2331	5001B	24		34-61-11	ALL
	8		W2331	5001R	24		34-61-11	ALL
	9		W2331	5001Z			34-61-11	ALL
	10		W2331	0004	24		34-61-11	ALL
	11	UNUSED						ALL
	12	UNUSED						001-099
	12		W2331	5004R	24		SPARE	115-199
	13	UNUSED						001-099
	13		W2331	5004B	24		SPARE	115-199
	14	UNUSED						001-099
	14		W2331	5004Z			SPARE	115-199
	15	UNUSED						001-099
	15		W2331	5007Z			34-61-16	115-199
	16	UNUSED						001-099
	16		W2331	5007B	22		34-61-16	115-199
	17	UNUSED						001-099
	17		W2331	5007R	22		34-61-16	115-199
	18	UNUSED						001-099
	18		W2331	5005Z			34-61-11	115-199
	19		W2331	5006R	24		34-61-11	001-099
	19		W2331	5006R	22		34-61-11	115-199
	20		W2331	5006B	24		34-61-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 63

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41081P		E002-01/ /		PLUG- (continued)				001-099
D41081P		E2-1/ /		PLUG- (continued)				115-199
	20		W2331	5006B	22		34-61-11	115-199
	21		W2331	5006Z			34-61-11	ALL
	22	UNUSED						001-099
	22		W2331	5005B	22		34-61-11	115-199
	23	UNUSED						001-099
	23		W2331	5005R	22		34-61-11	115-199
	24	UNUSED						ALL
D41082J		P037-00/ /		RCPT-				ALL
	1	UNUSED						ALL
	2		W1272	0253	22		24-32-41	ALL
	3	UNUSED						ALL
	4		W1272	0204	18		24-31-41	ALL
	5		W1272	0205	18		24-31-41	ALL
	6		W1272	0206	18		24-31-41	ALL
	7	UNUSED						ALL
D41082P		P037-00/ /		PLUG				001-099
D41082P		P37/ /		PLUG				115-199
	1		W2700	0022	24		SPARE	001-099
	1	UNUSED						115-199
	2		W2700	0008	20		24-32-41	ALL
	3		W2700	0023	24		SPARE	001-099
	3	UNUSED						115-199
	4		W2700	0004	18		24-31-41	ALL
	5		W2700	0005	18		24-31-41	ALL
	6		W2700	0006	18		24-31-41	ALL
	7		W2700	0603	20		SPARE	ALL
D41083J		E002-02/ /		RCPT-				001-099
D41083J		E2-2/ /		RCPT-				115-199
	1	UNUSED						ALL
	2		W1173	5106R	24		34-61-21	ALL
	3		W1173	5106B	24		34-61-21	ALL
	4		W1173	FRAQ			34-61-21	ALL
	5		W1173	5107R	24		34-61-21	ALL
	6		W1173	5107B	24		34-61-21	ALL
	7		W1173	5107Z			34-61-21	ALL
	8		W1173	5109R	24		34-61-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 64

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41083J		E002-02/ /		RCPT- (continued)				001-099
D41083J		E2-2/ /		RCPT- (continued)				115-199
	9		W1173	5109B	24		34-61-21	ALL
	10		W1173	5109Z			34-61-21	ALL
	11		W1173	0204	24		34-61-21	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						001-099
	17	UNUSED						001-099
	18	UNUSED						001-099
	19		W1173	5207R	24		34-61-21	001-099
	20		W1173	5207B	24		34-61-21	001-099
	21		W1173	5207Z			34-61-21	001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
			W1173	0254	20		34-61-21	ALL
			W1173	5106Z			34-61-21	ALL
			W1173	FRAQ			34-61-21	ALL
I D41083P		E2-2/ /		PLUG				001-099
I D41083P		E2-2/ /		PLUG (34-0414)				115-199
	1	UNUSED						ALL
	2		W2333	5001R	24		34-61-21	ALL
	3		W2333	5001B	24		34-61-21	ALL
	4		W2333	5001Z			34-61-21	ALL
	5		W2333	5002R	24		34-61-21	ALL
	6		W2333	5002B	24		34-61-21	ALL
	7		W2333	5002Z			34-61-21	ALL
	8		W2333	5003R	24		34-61-21	ALL
	9		W2333	5003B	24		34-61-21	ALL
	10		W2333	5003Z			34-61-21	ALL
	11		W2333	0005	24		34-61-21	ALL
	12	UNUSED						001-099
	12		W2333	5004R	24		SPARE	115-199
	13	UNUSED						001-099
	13		W2333	5004B	24		SPARE	115-199
	14	UNUSED						001-099
	14		W2333	5004Z			SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 65

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41083P		E2-2/ /		PLUG (continued)				001-099
D41083P		E2-2/ /		PLUG (34-0414) (continued)				115-199
	15	UNUSED						ALL
	16	UNUSED						001-099
	16		W2333	5005R	22		34-61-21	115-199
	17	UNUSED						001-099
	17		W2333	5005B	22		34-61-21	115-199
	18	UNUSED						001-099
	18		W2333	5005Z			34-61-21	115-199
	19		W2333	5006R	24		34-61-21	001-099
	19		W2333	5006R	22		34-61-21	115-199
	20		W2333	5006B	24		34-61-21	001-099
	20		W2333	5006B	22		34-61-21	115-199
	21		W2333	5006Z			34-61-21	ALL
	22	UNUSED						001-099
	22		W2333	5007B	22		34-61-26	115-199
	23	UNUSED						001-099
	23		W2333	5007R	22		34-61-26	115-199
	24	UNUSED						001-099
	24		W2333	5007Z			34-61-26	115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
D41085J		E002-01/ /		RCPT-				001-099
D41085J		E2-1/ /		RCPT-				115-199
	1		W1171	2519T	24		34-22-35	ALL
	2		W1171	2519W	24		34-22-35	ALL
	3		W1171	2519Z			34-22-35	ALL
	4		W1171	2520T	24		34-22-35	ALL
	5		W1171	2520W	24		34-22-35	ALL
	6		W1171	2520Z			34-22-35	ALL
	7		W1171	2521T	24		34-22-35	ALL
	8		W1171	2521W	24		34-22-35	ALL
	9		W1171	2521Z			34-22-35	ALL
	10		W1171	2522T	24		34-22-35	ALL
	11		W1171	2522W	24		34-22-35	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 66

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41085J		E002-01/ /		RCPT- (continued)				001-099
D41085J		E2-1/ /		RCPT- (continued)				115-199
	12		W1171	2522Z			34-22-35	ALL
	13		W1171	2523T	24		34-22-35	ALL
	14		W1171	2523W	24		34-22-35	ALL
	15		W1171	2523Z			34-22-35	ALL
	16		W1171	2524T	24		34-22-35	ALL
	17		W1171	2524W	24		34-22-35	ALL
	18		W1171	2524Z			34-22-35	ALL
	19		W1171	2525T	24		34-22-35	ALL
	20		W1171	2525W	24		34-22-35	ALL
	21		W1171	2525Z			34-22-35	ALL
	22		W1171	2526T	24		34-22-35	ALL
	23		W1171	2526W	24		34-22-35	ALL
	24		W1171	2526Z			34-22-35	ALL
	25		W1171	2527T	24		34-22-35	ALL
	26		W1171	2527W	24		34-22-35	ALL
	27		W1171	2527Z			34-22-35	ALL
	28		W1171	2528T	24		34-22-35	ALL
	29		W1171	2528W	24		34-22-35	ALL
	30		W1171	2528Z			34-22-35	ALL
	31		W1171	2529T	24		34-22-35	ALL
	32		W1171	2529W	24		34-22-35	ALL
	33		W1171	2529Z			34-22-35	ALL
	34		W1171	2530T	24		34-22-35	ALL
	35		W1171	2530W	24		34-22-35	ALL
	36		W1171	2530Z			34-22-35	ALL
	37		W1171	2531T	24		34-22-35	ALL
	38		W1171	2531W	24		34-22-35	ALL
	39		W1171	2531Z			34-22-35	ALL
	40		W1171	2532T	24		34-22-35	ALL
	41		W1171	2532W	24		34-22-35	ALL
	42		W1171	2532Z			34-22-35	ALL
	43		W1171	2533T	24		34-22-35	ALL
	44		W1171	2533W	24		34-22-35	ALL
	45		W1171	2533Z			34-22-35	ALL
	46		W1171	2534T	24		34-22-35	ALL
	47		W1171	2534W	24		34-22-35	ALL
	48		W1171	2534Z			34-22-35	ALL
	49		W1171	2535T	24		34-22-35	ALL
	50		W1171	2535W	24		34-22-35	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 67

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41085J		E002-01/ /		RCPT- (continued)				001-099
D41085J		E2-1/ /		RCPT- (continued)				115-199
	51		W1171	2535Z			34-22-35	ALL
	52		W1171	2536T	24		34-22-35	ALL
	53		W1171	2536W	24		34-22-35	ALL
	54		W1171	2536Z			34-22-35	ALL
	55	UNUSED						ALL
D41085P		E002-01/ /		PLUG				ALL
	1		W4441	2501T	24		34-22-35	ALL
	2		W4441	2501W	24		34-22-35	ALL
	3		W4441	2501Z			34-22-35	ALL
	4		W4441	2502T	24		34-22-35	ALL
	5		W4441	2502W	24		34-22-35	ALL
	6		W4441	2502Z			34-22-35	ALL
	7		W4441	2503T	24		34-22-35	ALL
	8		W4441	2503W	24		34-22-35	ALL
	9		W4441	2503Z			34-22-35	ALL
	10		W4441	2504T	24		34-22-35	ALL
	11		W4441	2504W	24		34-22-35	ALL
	12		W4441	2504Z			34-22-35	ALL
	13		W4441	2505T	24		34-22-35	ALL
	14		W4441	2505W	24		34-22-35	ALL
	15		W4441	2505Z			34-22-35	ALL
	16		W4441	2506T	24		34-22-35	ALL
	17		W4441	2506W	24		34-22-35	ALL
	18		W4441	2506Z			34-22-35	ALL
	19		W4441	2507T	24		34-22-35	ALL
	20		W4441	2507W	24		34-22-35	ALL
	21		W4441	2507Z			34-22-35	ALL
	22		W4441	2508T	24		34-22-35	ALL
	23		W4441	2508W	24		34-22-35	ALL
	24		W4441	2508Z			34-22-35	ALL
	25		W4441	2509T	24		34-22-35	ALL
	26		W4441	2509W	24		34-22-35	ALL
	27		W4441	2509Z			34-22-35	ALL
	28		W4441	2510T	24		34-22-35	ALL
	29		W4441	2510W	24		34-22-35	ALL
	30		W4441	2510Z			34-22-35	ALL
	31		W4441	2511T	24		34-22-35	ALL
	32		W4441	2511W	24		34-22-35	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 68

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41085P		E002-01/ /		PLUG (continued)				ALL
	33		W4441	2511Z			34-22-35	ALL
	34		W4441	2512T	24		34-22-35	ALL
	35		W4441	2512W	24		34-22-35	ALL
	36		W4441	2512Z			34-22-35	ALL
	37		W4441	2513T	24		34-22-35	ALL
	38		W4441	2513W	24		34-22-35	ALL
	39		W4441	2513Z			34-22-35	ALL
	40		W4441	2514T	24		34-22-35	ALL
	41		W4441	2514W	24		34-22-35	ALL
	42		W4441	2514Z			34-22-35	ALL
	43		W4441	2515T	24		34-22-35	ALL
	44		W4441	2515W	24		34-22-35	ALL
	45		W4441	2515Z			34-22-35	ALL
	46		W4441	2516T	24		34-22-35	ALL
	47		W4441	2516W	24		34-22-35	ALL
	48		W4441	2516Z			34-22-35	ALL
	49		W4441	2517T	24		34-22-35	ALL
	50		W4441	2517W	24		34-22-35	ALL
	51		W4441	2517Z			34-22-35	ALL
	52		W4441	2518T	24		34-22-35	ALL
	53		W4441	2518W	24		34-22-35	ALL
	54		W4441	2518Z			34-22-35	ALL
	55	UNUSED						ALL
D41087J		E002-03/ /		RCPT-				001-099
D41087J		E2-3/ /		RCPT-				115-199
	1		W1175	2519T	24		34-22-35	ALL
	2		W1175	2519W	24		34-22-35	ALL
	3		W1175	2519Z			34-22-35	ALL
	4		W1175	2520T	24		34-22-35	ALL
	5		W1175	2520W	24		34-22-35	ALL
	6		W1175	2520Z			34-22-35	ALL
	7		W1175	2521T	24		34-22-35	ALL
	8		W1175	2521W	24		34-22-35	ALL
	9		W1175	2521Z			34-22-35	ALL
	10		W1175	2522T	24		34-22-35	ALL
	11		W1175	2522W	24		34-22-35	ALL
	12		W1175	2522Z			34-22-35	ALL
	13		W1175	2523T	24		34-22-35	ALL
	14		W1175	2523W	24		34-22-35	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 69

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41087J		E002-03/ /		RCPT- (continued)				001-099
D41087J		E2-3/ /		RCPT- (continued)				115-199
	15		W1175	2523Z			34-22-35	ALL
	16		W1175	2524T	24		34-22-35	ALL
	17		W1175	2524W	24		34-22-35	ALL
	18		W1175	2524Z			34-22-35	ALL
	19		W1175	2525T	24		34-22-35	ALL
	20		W1175	2525W	24		34-22-35	ALL
	21		W1175	2525Z			34-22-35	ALL
	22		W1175	2526T	24		34-22-35	ALL
	23		W1175	2526W	24		34-22-35	ALL
	24		W1175	2526Z			34-22-35	ALL
	25		W1175	2527T	24		34-22-35	ALL
	26		W1175	2527W	24		34-22-35	ALL
	27		W1175	2527Z			34-22-35	ALL
	28		W1175	2528T	24		34-22-35	ALL
	29		W1175	2528W	24		34-22-35	ALL
	30		W1175	2528Z			34-22-35	ALL
	31		W1175	2529T	24		34-22-35	ALL
	32		W1175	2529W	24		34-22-35	ALL
	33		W1175	2529Z			34-22-35	ALL
	34		W1175	2530T	24		34-22-35	ALL
	35		W1175	2530W	24		34-22-35	ALL
	36		W1175	2530Z			34-22-35	ALL
	37		W1175	2531T	24		34-22-35	ALL
	38		W1175	2531W	24		34-22-35	ALL
	39		W1175	2531Z			34-22-35	ALL
	40		W1175	2532T	24		34-22-35	ALL
	41		W1175	2532W	24		34-22-35	ALL
	42		W1175	2532Z			34-22-35	ALL
	43		W1175	2533T	24		34-22-35	ALL
	44		W1175	2533W	24		34-22-35	ALL
	45		W1175	2533Z			34-22-35	ALL
	46		W1175	2534T	24		34-22-35	ALL
	47		W1175	2534W	24		34-22-35	ALL
	48		W1175	2534Z			34-22-35	ALL
	49		W1175	2535T	24		34-22-35	ALL
	50		W1175	2535W	24		34-22-35	ALL
	51		W1175	2535Z			34-22-35	ALL
	52		W1175	2536T	24		34-22-35	ALL
	53		W1175	2536W	24		34-22-35	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 70

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41087J		E002-03/ /		RCPT- (continued)				001-099
D41087J		E2-3/ /		RCPT- (continued)				115-199
	54	UNUSED	W1175	2536Z			34-22-35	ALL
	55							ALL
D41087P		E002-03/ /		PLUG				ALL
	1		W4441	2501T	24		34-22-35	ALL
	2		W4441	2501W	24		34-22-35	ALL
	3		W4441	2501Z			34-22-35	ALL
	4		W4441	2502T	24		34-22-35	ALL
	5		W4441	2502W	24		34-22-35	ALL
	6		W4441	2502Z			34-22-35	ALL
	7		W4441	2503T	24		34-22-35	ALL
	8		W4441	2503W	24		34-22-35	ALL
	9		W4441	2503Z			34-22-35	ALL
	10		W4441	2504T	24		34-22-35	ALL
	11		W4441	2504W	24		34-22-35	ALL
	12		W4441	2504Z			34-22-35	ALL
	13		W4441	2505T	24		34-22-35	ALL
	14		W4441	2505W	24		34-22-35	ALL
	15		W4441	2505Z			34-22-35	ALL
	16		W4441	2506T	24		34-22-35	ALL
	17		W4441	2506W	24		34-22-35	ALL
	18		W4441	2506Z			34-22-35	ALL
	19		W4441	2507T	24		34-22-35	ALL
	20		W4441	2507W	24		34-22-35	ALL
	21		W4441	2507Z			34-22-35	ALL
	22		W4441	2508T	24		34-22-35	ALL
	23		W4441	2508W	24		34-22-35	ALL
	24		W4441	2508Z			34-22-35	ALL
	25		W4441	2509T	24		34-22-35	ALL
	26		W4441	2509W	24		34-22-35	ALL
	27		W4441	2509Z			34-22-35	ALL
	28		W4441	2510T	24		34-22-35	ALL
	29		W4441	2510W	24		34-22-35	ALL
	30		W4441	2510Z			34-22-35	ALL
	31		W4441	2511T	24		34-22-35	ALL
	32		W4441	2511W	24		34-22-35	ALL
	33		W4441	2511Z			34-22-35	ALL
	34		W4441	2512T	24		34-22-35	ALL
	35		W4441	2512W	24		34-22-35	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 71

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41087P		E002-03/ /		PLUG (continued)				ALL
	36		W4441	2512Z			34-22-35	ALL
	37		W4441	2513T	24		34-22-35	ALL
	38		W4441	2513W	24		34-22-35	ALL
	39		W4441	2513Z			34-22-35	ALL
	40		W4441	2514T	24		34-22-35	ALL
	41		W4441	2514W	24		34-22-35	ALL
	42		W4441	2514Z			34-22-35	ALL
	43		W4441	2515T	24		34-22-35	ALL
	44		W4441	2515W	24		34-22-35	ALL
	45		W4441	2515Z			34-22-35	ALL
	46		W4441	2516T	24		34-22-35	ALL
	47		W4441	2516W	24		34-22-35	ALL
	48		W4441	2516Z			34-22-35	ALL
	49		W4441	2517T	24		34-22-35	ALL
	50		W4441	2517W	24		34-22-35	ALL
	51		W4441	2517Z			34-22-35	ALL
	52		W4441	2518T	24		34-22-35	ALL
	53		W4441	2518W	24		34-22-35	ALL
	54		W4441	2518Z			34-22-35	ALL
	55	UNUSED						ALL
D41089J		E002-01/ /		RCPT-				001-099
D41089J		E2-1/ /		RCPT-				115-199
	1		W1171	5028R	24		31-41-12	ALL
	2		W1171	5028B	24		31-41-12	ALL
	3		W1171	5028Z			31-41-12	ALL
	4		W1171	5029R	24		31-41-12	ALL
	5		W1171	5029B	24		31-41-12	ALL
	6		W1171	5029Z			31-41-12	ALL
	7		W1171	5124R	24		34-61-12	ALL
	8		W1171	5124B	24		34-61-12	ALL
	9		W1171	5124Z			34-61-12	ALL
	10		W1171	5172R	24		34-61-14	ALL
	11		W1171	5172B	24		34-61-14	ALL
	12		W1171	5172Z			34-61-14	ALL
	13		W1171	5077R	24		34-61-14	ALL
	14		W1171	5077B	24		34-61-14	ALL
	15		W1171	FRAZ			34-61-14	ALL
	16		W1171	0159	24		34-61-14	ALL
	17		W1171	0134	24		34-61-23	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 72

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41089J		E002-01/ /		RCPT- (continued)				001-099
D41089J		E2-1/ /		RCPT- (continued)				115-199
	18		W1171	5085Z			34-61-15	ALL
	19		W1171	5085R	24		34-61-15	ALL
	20		W1171	5085B	24		34-61-15	ALL
	21		W1171	0170	24		34-61-15	ALL
	22		W1171	0171	22		34-61-15	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26		W1171	5006R	24		34-22-19	ALL
	27		W1171	5006B	24		34-22-19	ALL
	28		W1171	5006Z			34-22-19	ALL
	29		W1171	5012R	24		34-33-11	ALL
	30		W1171	5012B	24		34-33-11	ALL
	31		W1171	5012Z			34-33-11	ALL
	32		W1171	0136	24		34-61-13	ALL
	33		W1171	0138	24		34-61-13	ALL
	34		W1171	0140	24		34-61-13	ALL
	35		W1171	0142	24		34-61-13	ALL
	36		W1171	0144	24		34-61-13	ALL
	37		W1171	0146	24		34-61-13	ALL
	38		W1171	0148	24		34-61-13	ALL
	39		W1171	0150	24		34-61-13	ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42		W1171	5036R	24		34-53-11	ALL
	43		W1171	5036B	24		34-53-11	ALL
	44		W1171	5036Z			34-53-11	ALL
	45		W1171	5035R	24		34-53-21	ALL
	46		W1171	5035B	24		34-53-21	ALL
	47		W1171	5035Z			34-53-21	ALL
	48		W1171	0098	24		34-55-11	ALL
	49		W1171	0099	24		34-55-11	ALL
	50		W1171	0092	24		34-33-11	ALL
	51	UNUSED						001, 003-099, 115-199
	51		W1171	0818	22		34-22-18	002
	52		W1171	0180	24		34-12-12	ALL
	53		W1171	5004R	24		34-22-19	001-099
	53	UNUSED						115-199
	54		W1171	5004B	24		34-22-19	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 73

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41089J		E002-01/ /		RCPT- (continued)				001-099
D41089J		E2-1/ /		RCPT- (continued)				115-199
	54	UNUSED						115-199
	55		W1171	5004Z			34-22-19	001-099
	55	UNUSED						115-199
			W1171	0158	20		34-61-14	ALL
			W1171	5077Z			34-61-14	ALL
			W1171	FRAZ			34-61-14	ALL
D41089P		E002-01/ /		PLUG-				001-099
D41089P		E2-1/ /		PLUG-				115-199
	1		W4471	5001R	24		31-41-12	ALL
	2		W4471	5001B	24		31-41-12	ALL
	3		W4471	5001Z			31-41-12	ALL
	4		W4471	5002R	24		31-41-12	ALL
	5		W4471	5002B	24		31-41-12	ALL
	6		W4471	5002Z			31-41-12	ALL
	7		W4471	5003R	24		34-61-12	ALL
	8		W4471	5003B	24		34-61-12	ALL
	9		W4471	5003Z			34-61-12	ALL
	10		W4471	5004R	24		34-61-14	ALL
	11		W4471	5004B	24		34-61-14	ALL
	12		W4471	5004Z			34-61-14	ALL
	13		W4471	5005R	24		34-61-14	ALL
	14		W4471	5005B	24		34-61-14	ALL
	15		W4471	5005Z			34-61-14	ALL
	16		W4471	0001	24		34-61-14	ALL
	17		W4471	0002	24		34-61-23	ALL
	18		W4471	5006Z			34-61-15	ALL
	19		W4471	5006R	24		34-61-15	ALL
	20		W4471	5006B	24		34-61-15	ALL
	21		W4471	0003	24		34-61-15	ALL
	22		W4471	0004	24		34-61-15	ALL
	23	UNUSED						001-099
	23		W4471	5007R	24		SPARE	115-199
	24	UNUSED						001-099
	24		W4471	5007B	24		SPARE	115-199
	25	UNUSED						001-099
	25		W4471	5007Z			SPARE	115-199
	26		W4471	5008R	24		34-22-19	ALL
	27		W4471	5008B	24		34-22-19	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 74

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41089P		E002-01/ /		PLUG- (continued)				001-099
D41089P		E2-1/ /		PLUG- (continued)				115-199
	28		W4471	5008Z			34-22-19	ALL
	29		W4471	5009R	24		34-33-11	ALL
	30		W4471	5009B	24		34-33-11	ALL
	31		W4471	5009Z			34-33-11	ALL
	32		W4471	0005	24		34-61-13	ALL
	33		W4471	0006	24		34-61-13	ALL
	34		W4471	0007	24		34-61-13	ALL
	35		W4471	0008	24		34-61-13	ALL
	36		W4471	0009	24		34-61-13	ALL
	37		W4471	0010	24		34-61-13	ALL
	38		W4471	0011	24		34-61-13	ALL
	39		W4471	0012	24		34-61-13	ALL
	40		W4471	5042R	24		SPARE	001-099
	40	UNUSED						115-199
	41		W4471	5042B	24		SPARE	001-099
	41	UNUSED						115-199
	42		W4471	5010R	24		34-53-11	ALL
	43		W4471	5010B	24		34-53-11	ALL
	44		W4471	5010Z			34-53-11	ALL
	45		W4471	5011R	24		34-53-21	ALL
	46		W4471	5011B	24		34-53-21	ALL
	47		W4471	5011Z			34-53-21	ALL
	48		W4471	0095	24		34-55-11	ALL
	49		W4471	0094	24		34-55-11	ALL
	50		W4471	0096	24		34-33-11	ALL
	51	UNUSED						001, 003-099
	51		W4471	0476	22		34-22-18	002
	51		W4471	0100	24		SPARE	115-199
	52		W4471	0101	24		34-12-12	ALL
	53		W4471	5080R	24		34-22-19	001-099
	53	UNUSED						115-199
	54		W4471	5080B	24		34-22-19	001-099
	54	UNUSED						115-199
	55		W4471	5080Z			34-22-19	001-099
	55	UNUSED						115-199
DED			W4471	5042Z			SPARE	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 75

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41091J D41091J		E002-01/ / E2-1/ /		RCPT- RCPT-				001-099 115-199
	1		W1171	0048	24		31-51-21	ALL
	2	UNUSED						ALL
	3		W1171	5353R	24		27-32-11	ALL
	4		W1171	5353B	24		27-32-11	ALL
	5		W1171	5353Z			27-32-11	ALL
	6	UNUSED						001-008, 010-099
	6		W1171	0114	24		31-51-34	009, 115-199
	7		W1171	5030R	24		31-31-41	001-099
	7		W1171	5030R	24		31-31-21	115-199
	8		W1171	5030B	24		31-31-41	001-099
	8		W1171	5030B	24		31-31-21	115-199
	9		W1171	5030Z			31-31-41	001-099
	9		W1171	5030Z			31-31-21	115-199
	10		W1171	5031R	24		31-31-43	001-099
	10		W1171	5031R	24		31-31-21	115-199
	11		W1171	5031B	24		31-31-43	001-099
	11		W1171	5031B	24		31-31-21	115-199
	12		W1171	5031Z			31-31-43	001-099
	12		W1171	5031Z			31-31-21	115-199
	13		W1171	5032B	24		31-31-41	001-099
	13		W1171	5032B	24		31-31-21	115-199
	14		W1171	5032R	24		31-31-41	001-099
	14		W1171	5032R	24		31-31-21	115-199
	15		W1171	5032Z			31-31-41	001-099
	15		W1171	5032Z			31-31-21	115-199
	16		W1171	5033R	24		27-32-11	ALL
	17		W1171	5033B	24		27-32-11	ALL
	18		W1171	5033Z			27-32-11	ALL
	19		W1171	5102R	24		22-12-11	ALL
	20		W1171	5102B	24		22-12-11	ALL
	21		W1171	FRCC			22-12-11	ALL
	22		W1171	0251	22		22-12-11	ALL
	23		W1171	0246	22		22-12-11	ALL
	24		W1171	0247	22		22-12-11	ALL
	25		W1171	0248	22		22-12-11	ALL
	26		W1171	0249	22		22-12-11	ALL
	27		W1171	0107	22		22-14-11	ALL
	28	UNUSED						ALL
	29		W1171	5130R	24		22-15-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 76

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41091J		E002-01/ /		RCPT- (continued)				001-099
D41091J		E2-1/ /		RCPT- (continued)				115-199
	30		W1171	5130B	24		22-15-11	ALL
	31		W1171	FRGE			22-15-11	ALL
	32		W1171	5098R	24		22-22-11	ALL
	33		W1171	5098B	24		22-22-11	ALL
	34		W1171	5098Z			22-22-11	ALL
	35		W1171	0197	22		22-22-11	ALL
	36		W1171	0250	22		22-12-11	ALL
	37		W1171	5096R	24		22-24-11	ALL
	38		W1171	5096B	24		22-24-11	ALL
	39		W1171	5096Z			22-24-11	ALL
	40		W1171	5091R	24		22-41-11	ALL
	41		W1171	5091B	24		22-41-11	ALL
	42		W1171	FREX			22-41-11	ALL
	43		W1171	0194	22		22-41-11	ALL
	44	UNUSED						ALL
	45		W1171	5092Z			22-41-11	ALL
	46		W1171	5092R	24		22-41-11	ALL
	47		W1171	5092B	24		22-41-11	ALL
	48	UNUSED						ALL
	49		W1171	0054	24		34-12-12	ALL
	50		W1171	0058	24		34-12-12	ALL
	51		W1171	5042R	24		34-12-12	ALL
	52		W1171	5042B	24		34-12-12	ALL
	53		W1171	5042Z			34-12-12	ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
			W1171	0290	20		22-15-11	ALL
			W1171	0294	20		22-41-11	ALL
			W1171	0299	20		22-12-11	ALL
			W1171	5091Z			22-41-11	ALL
			W1171	5102Z			22-12-11	ALL
			W1171	5130Z			22-15-11	ALL
			W1171	FRCC			22-12-11	ALL
			W1171	FREX			22-41-11	ALL
			W1171	FRGE			22-15-11	ALL
D41091P		E002-01/ /		PLUG-				001-099
D41091P		E2-1/ /		PLUG-				115-199
	1		W4471	0035	24		31-51-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 77

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41091P		E002-01/ /		PLUG- (continued)				001-099
D41091P		E2-1/ /		PLUG- (continued)				115-199
	2		W4471	0143	22		SPARE	ALL
	3		W4471	5012R	24		27-32-11	ALL
	4		W4471	5012B	24		27-32-11	ALL
	5		W4471	5012Z			27-32-11	ALL
	6	UNUSED						001-008, 010-099
	6		W4471	0023	24		31-51-34	009, 115-199
	7		W4471	5013R	24		31-31-41	001-099
	7		W4471	5013R	24		31-31-21	115-199
	8		W4471	5013B	24		31-31-41	001-099
	8		W4471	5013B	24		31-31-21	115-199
	9		W4471	5013Z			31-31-41	001-099
	9		W4471	5013Z			31-31-21	115-199
	10		W4471	5014R	24		31-31-43	001-099
	10		W4471	5014R	24		31-31-21	115-199
	11		W4471	5014B	24		31-31-43	001-099
	11		W4471	5014B	24		31-31-21	115-199
	12		W4471	5014Z			31-31-43	001-099
	12		W4471	5014Z			31-31-21	115-199
	13		W4471	5015B	24		31-31-41	001-099
	13		W4471	5015B	24		31-31-21	115-199
	14		W4471	5015R	24		31-31-41	001-099
	14		W4471	5015R	24		31-31-21	115-199
	15		W4471	5015Z			31-31-41	001-099
	15		W4471	5015Z			31-31-21	115-199
	16		W4471	5016R	24		31-31-41	001-099
	16		W4471	5016R	24		31-31-21	115-199
	17		W4471	5016B	24		31-31-41	001-099
	17		W4471	5016B	24		31-31-21	115-199
	18		W4471	5016Z			31-31-41	001-099
	18		W4471	5016Z			31-31-21	115-199
	19		W4471	5017R	24		22-12-11	ALL
	20		W4471	5017B	24		22-12-11	ALL
	21		W4471	5017Z			22-12-11	ALL
	22		W4471	0037	22		22-12-11	ALL
	23		W4471	0038	22		22-12-11	ALL
	24		W4471	0039	22		22-12-11	ALL
	25		W4471	0040	22		22-12-11	ALL
	26		W4471	0041	22		22-12-11	ALL
	27		W4471	0042	22		22-14-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 78

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41091P		E002-01/ /		PLUG- (continued)				001-099
D41091P		E2-1/ /		PLUG- (continued)				115-199
	28		W4471	0043	22		SPARE	ALL
	29		W4471	5018R	24		22-15-11	ALL
	30		W4471	5018B	24		22-15-11	ALL
	31		W4471	5018Z			22-15-11	ALL
	32		W4471	5019R	24		22-22-11	ALL
	33		W4471	5019B	24		22-22-11	ALL
	34		W4471	5019Z			22-22-11	ALL
	35		W4471	0045	22		22-22-11	ALL
	36		W4471	0046	22		22-22-11	ALL
	37		W4471	5021R	24		22-24-11	ALL
	38		W4471	5021B	24		22-24-11	ALL
	39		W4471	5021Z			22-24-11	ALL
	40		W4471	5024R	24		22-41-11	ALL
	41		W4471	5024B	24		22-41-11	ALL
	42		W4471	5024Z			22-41-11	ALL
	43		W4471	0071	22		22-41-11	ALL
	44	UNUSED						ALL
	45		W4471	5025Z			22-41-11	ALL
	46		W4471	5025R	24		22-41-11	ALL
	47		W4471	5025B	24		22-41-11	ALL
	48		W4471	0073	22		SPARE	ALL
	49		W4471	0102	24		34-12-12	ALL
	50		W4471	0103	24		34-12-12	ALL
	51		W4471	5036R	24		34-12-12	ALL
	52		W4471	5036B	24		34-12-12	ALL
	53		W4471	5036Z			34-12-12	ALL
	54	UNUSED						ALL
	55		W4471	0145	22		SPARE	ALL
D41093J		E002-01/ /		RCPT-				001-099
D41093J		E2-1/ /		RCPT-				115-199
	1		W1171	5090R	24		22-41-12	ALL
	2		W1171	5090B	24		22-41-12	ALL
	3		W1171	FREW			22-41-12	ALL
	4		W1171	0271	24		34-61-13	ALL
	5		W1171	0273	24		34-61-13	ALL
	6		W1171	0275	24		34-61-13	ALL
	7		W1171	0277	24		34-61-13	ALL
	8		W1171	0328	22		22-15-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 79

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41093J		E002-01/ /		RCPT- (continued)				001-099
D41093J		E2-1/ /		RCPT- (continued)				115-199
	9		W1171	0348	22		30-32-11	ALL
	10		W1171	0349	22		30-32-11	ALL
	11		W1171	5142R	24		31-31-42	001-099
	11	UNUSED						115-199
	12		W1171	5142B	24		31-31-42	001-099
	12	UNUSED						115-199
	13		W1171	5142Z			31-31-42	001-099
	13	UNUSED						115-199
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W1171	0353	22		32-42-11	ALL
	18	UNUSED						ALL
	19		W1171	5049R	24		34-55-11	ALL
	20		W1171	5049B	24		34-55-11	ALL
	21		W1171	5049Z			34-55-11	ALL
	22	UNUSED						ALL
	23		W1171	0073	22		34-12-11	ALL
	24		W1171	0078	22		34-12-11	ALL
	25		W1171	0061	24		34-12-12	ALL
	26		W1171	0046	24		31-31-61	001-099
	26		W1171	0046	24		31-31-31	115-199
	27		W1171	0047	24		31-31-61	001-099
	27		W1171	0047	24		31-31-31	115-199
	28		W1171	5137Z			34-25-11	001, 003-099, 115-199
	28	UNUSED						002
	29		W1171	5137R	24		34-25-11	001, 003-099, 115-199
	29	UNUSED						002
	30		W1171	5137B	24		34-25-11	001, 003-099, 115-199
	30	UNUSED						002
	31	UNUSED						001-099
	31		W1171	5141R	24		31-31-22	115-199
	32	UNUSED						001-099
	32		W1171	5141B	24		31-31-22	115-199
	33	UNUSED						001-099
	33		W1171	5141Z			31-31-22	115-199
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 80

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41093J		E002-01/ /		RCPT- (continued)				001-099
D41093J		E2-1/ /		RCPT- (continued)				115-199
	37	UNUSED						ALL
	38	UNUSED						ALL
	39		W1171	5192R	24		34-45-01	001-099
	39		W1171	5178R	24		34-22-29	115-199
	40		W1171	5192B	24		34-45-01	001-099
	40		W1171	5178B	24		34-22-29	115-199
	41		W1171	5192Z			34-45-01	001-099
	41		W1171	5178Z			34-22-29	115-199
	42	UNUSED						ALL
	43		W1171	0330	22		22-15-12	ALL
	44		W1171	5093B	24		31-51-21	ALL
	45		W1171	5093R	24		31-51-21	ALL
	46		W1171	5059R	24		31-31-42	001-099
	46		W1171	5059R	24		31-31-22	115-199
	47		W1171	5059B	24		31-31-42	001-099
	47		W1171	5059B	24		31-31-22	115-199
	48		W1171	FRFH			31-31-42	001-099
	48		W1171	FRFF			31-31-22	115-199
	49	UNUSED						ALL
	50	UNUSED						ALL
	51		W1171	5093Z			31-51-21	ALL
	52	UNUSED						001-099
	52		W1171	5142Z			31-31-22	115-199
	53		W1171	5178R	24		34-22-29	001-099
	53		W1171	5142R	24		31-31-22	115-199
	54		W1171	5178B	24		34-22-29	001-099
	54		W1171	5142B	24		31-31-22	115-199
	55		W1171	5178Z			34-22-29	001-099
	55	UNUSED						115-199
			W1171	0284	20		31-31-42	001-099
			W1171	5059Z			31-31-42	001-099
			W1171	FRFH			31-31-42	001-099
			W1171	0296	20		22-41-12	ALL
			W1171	5090Z			22-41-12	ALL
			W1171	FREW			22-41-12	ALL
			W1171	0284	20		31-31-22	115-199
			W1171	5059Z			31-31-22	115-199
			W1171	FRFF			31-31-22	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 81

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41093P D41093P		E002-01/ / E2-1/ /		PLUG- PLUG-				001-099 115-199
	1		W4471	5029R	24		22-41-12	ALL
	2		W4471	5029B	24		22-41-12	ALL
	3		W4471	5029Z			22-41-12	ALL
	4		W4471	0088	24		34-61-13	ALL
	5		W4471	0089	24		34-61-13	ALL
	6		W4471	0090	24		34-61-13	ALL
	7		W4471	0091	24		34-61-13	ALL
	8		W4471	0208	22		22-15-12	ALL
	9		W4471	0078	22		30-32-11	ALL
	10		W4471	0079	22		30-32-11	ALL
	11		W4471	5130R	24		31-31-42	001-099
	11		W4471	5020R	24		SPARE	115-199
	12		W4471	5130B	24		31-31-42	001-099
	12		W4471	5020Z			SPARE	115-199
	13		W4471	5130Z			31-31-42	001-099
	13		W4471	5020B	24		SPARE	115-199
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W4471	0129	22		32-42-11	ALL
	18	UNUSED						001-099
	18		W4471	0124	24		SPARE	115-199
	19		W4471	5038R	24		34-55-11	ALL
	20		W4471	5038B	24		34-55-11	ALL
	21		W4471	5038Z			34-55-11	ALL
	22	UNUSED						001-099
	22		W4471	0125	24		SPARE	115-199
	23		W4471	0126	22		34-12-11	ALL
	24		W4471	0127	22		34-12-11	ALL
	25		W4471	0128	24		34-12-12	ALL
	26		W4471	0015	24		31-31-61	001-099
	26		W4471	0015	24		31-31-31	115-199
	27		W4471	0016	24		31-31-61	001-099
	27		W4471	0016	24		31-31-31	115-199
	28		W4471	5040Z			34-25-11	001, 003-099, 115-199
	28		W4471	5040Z			SPARE	002
	29		W4471	5040R	24		34-25-11	001, 003-099, 115-199
	29		W4471	5040R	24		SPARE	002
	30		W4471	5040B	24		34-25-11	001, 003-099, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 82

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41093P		E002-01/ /		PLUG- (continued)				001-099
D41093P		E2-1/ /		PLUG- (continued)				115-199
	30		W4471	5040B	24		SPARE	002
	31		W4471	5049R	24		SPARE	001-099
	31		W4471	5051R	24		31-31-22	115-199
	32		W4471	5049B	24		SPARE	001-099
	32		W4471	5051B	24		31-31-22	115-199
	33		W4471	5049Z			SPARE	001-099
	33		W4471	5051Z			31-31-22	115-199
	34		W4471	0146	24		SPARE	ALL
	35	UNUSED						001-099
	35		W4471	5044R	24		SPARE	115-199
	36	UNUSED						001-099
	36		W4471	5044B	24		SPARE	115-199
	37	UNUSED						001-099
	37		W4471	5044Z			SPARE	115-199
	38		W4471	0147	24		SPARE	ALL
	39		W4471	5126R	24		34-45-01	001-099
	39		W4471	5094R	24		34-22-29	115-199
	40		W4471	5126B	24		34-45-01	001-099
	40		W4471	5094B	24		34-22-29	115-199
	41		W4471	5126Z			34-45-01	001-099
	41		W4471	5094Z			34-22-29	115-199
	42	UNUSED						ALL
	43		W4471	0209	22		22-15-12	ALL
	44		W4471	5035B	24		31-51-21	ALL
	45		W4471	5035R	24		31-51-21	ALL
	46		W4471	5050R	24		31-31-42	001-099
	46		W4471	5050R	24		31-31-22	115-199
	47		W4471	5050B	24		31-31-42	001-099
	47		W4471	5050B	24		31-31-22	115-199
	48		W4471	5050Z			31-31-42	001-099
	48		W4471	5050Z			31-31-22	115-199
	49		W4471	0182	24		34-61-11	001-099
	49		W4471	0182	24		SPARE	115-199
	50		W4471	0183	24		SPARE	ALL
	51		W4471	5035Z			31-51-21	ALL
	52	UNUSED						001-099
	52		W4471	5052Z			31-31-22	115-199
	53		W4471	5094R	24		34-22-29	001-099
	53		W4471	5052R	24		31-31-22	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 83

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41093P		E002-01/ /		PLUG- (continued)				001-099
D41093P		E2-1/ /		PLUG- (continued)				115-199
	54		W4471	5094B	24		34-22-29	001-099
	54		W4471	5052B	24		31-31-22	115-199
	55		W4471	5094Z			34-22-29	001-099
	55	UNUSED						115-199
D41095J		E002-02/ /		RCPT-				001-099
D41095J		E2-2/ /		RCPT-				115-199
	1		W1173	0378	22		22-41-11	001-099
	1		W1173	1068	22		22-41-11	115-199
	2		W1173	5104B	24		22-41-12	ALL
	3		W1173	5104R	24		22-41-12	ALL
	4		W1173	FRAP			22-41-12	ALL
	5		W1173	0367	22		22-14-21	001-099
	5		W1173	1148	22		22-14-21	115-199
	6		W1173	0364	22		22-14-21	001-099
	6		W1173	1146	22		22-14-21	115-199
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1173	0358	22		22-14-31	001-099
	10		W1173	1130	22		22-14-31	115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W1173	0373	22		22-14-31	001-099
	16		W1173	1287	22		22-14-31	115-199
	17		W1173	5143R	24		34-61-15	ALL
	18		W1173	5143B	24		34-61-15	ALL
	19		W1173	5143Z			34-61-15	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W1173	5154B	24		34-22-29	001-099
	23	UNUSED						115-199
	24		W1173	5153R	24		34-22-29	001-099
	24	UNUSED						115-199
	25		W1173	5153B	24		34-22-29	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 84

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41095J		E002-02/ /		RCPT- (continued)				001-099
D41095J		E2-2/ /		RCPT- (continued)				115-199
	25	UNUSED						115-199
	26		W1173	FRLC			34-22-29	001-099
	26		W1173	5336B	24		34-12-62	115-199
	27		W1173	5336R	24		34-12-62	ALL
	28		W1173	5336Z			34-12-62	ALL
	29		W1173	5336B	24		34-12-62	001-099
	29	UNUSED						115-199
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34		W1173	0375	22		22-15-12	001-099
	34		W1173	1299	22		22-15-12	115-199
	35		W1173	0737	22		34-12-62	ALL
	36		W1173	0374	22		22-41-11	001-099
	36		W1173	1292	22		22-41-11	115-199
	37		W1173	5139R	24		34-21-11	ALL
	38		W1173	5139B	24		34-21-11	ALL
	39		W1173	5139Z			34-21-11	ALL
	40		W1173	FRLD			34-22-29	ALL
	41		W1173	5154R	24		34-22-29	ALL
	42		W1173	5154B	24		34-22-29	115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53		W1173	5153R	24		34-22-29	115-199
	54		W1173	5153B	24		34-22-29	115-199
	55		W1173	FRLC			34-22-29	115-199
DED			W1173	1068Z			22-41-11	115-199
DED			W1173	1130Z			22-14-31	115-199
DED			W1173	1146Z			22-14-21	115-199
DED			W1173	1148Z			22-14-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 85

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41095J		E002-02/ /		RCPT- (continued)				001-099
D41095J		E2-2/ /		RCPT- (continued)				115-199
	DED		W1173	1287Z			22-14-31	115-199
	DED		W1173	1292Z			22-41-11	115-199
	DED		W1173	1299Z			22-15-12	115-199
			W1173	0253	20		22-41-12	ALL
			W1173	0507	20		34-22-29	ALL
			W1173	0508	20		34-22-29	ALL
			W1173	5104Z			22-41-12	ALL
			W1173	5153Z			34-22-29	ALL
			W1173	5154Z			34-22-29	ALL
			W1173	FRAP			22-41-12	ALL
			W1173	FRLC			34-22-29	ALL
			W1173	FRLD			34-22-29	ALL
D41095P		E002-02/ /		PLUG-				001-099
D41095P		E2-2/ /		PLUG-				115-199
	1		W4471	0068	22		22-41-11	ALL
	2		W4471	5026B	24		22-41-12	ALL
	3		W4471	5026R	24		22-41-12	ALL
	4		W4471	5026Z			22-41-12	ALL
	5		W4471	0237	22		22-14-21	ALL
	6		W4471	0238	22		22-14-21	ALL
	7	UNUSED						001-099
	7		W4471	0100	24		SPARE	115-199
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W4471	0239	22		22-14-31	ALL
	11	UNUSED						ALL
	12		W4471	5045R	24		SPARE	ALL
	13		W4471	5045B	24		SPARE	ALL
	14		W4471	5045Z			SPARE	ALL
	15	UNUSED						ALL
	16		W4471	0202	22		22-14-31	ALL
	17		W4471	5071R	24		34-61-15	ALL
	18		W4471	5071B	24		34-61-15	ALL
	19		W4471	5071Z			34-61-15	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W4471	5093B	24		34-22-29	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 86

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41095P		E002-02/ /		PLUG- (continued)				001-099
D41095P		E2-2/ /		PLUG- (continued)				115-199
	23	UNUSED						115-199
	24		W4471	5094R	24		34-22-29	001-099
	24	UNUSED						115-199
	25		W4471	5094B	24		34-22-29	001-099
	25	UNUSED						115-199
	26		W4471	5094Z			34-22-29	001-099
	26		W4471	2514B	24		34-12-62	115-199
	27		W4471	2514R	24		34-12-62	ALL
	28		W4471	2514Z			34-12-62	ALL
	29		W4471	2514B	24		34-12-62	001-099
	29	UNUSED						115-199
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34		W4471	0209	22		22-15-12	ALL
	35		W4471	0564	22		34-12-61	ALL
	36		W4471	0211	22		22-41-11	ALL
	37		W4471	5067R	24		34-21-11	ALL
	38		W4471	5067B	24		34-21-11	ALL
	39		W4471	5067Z			34-21-11	ALL
	40		W4471	5093Z			34-22-29	ALL
	41		W4471	5093R	24		34-22-29	ALL
	42		W4471	5093B	24		34-22-29	115-199
	43		W4471	5104Z			34-61-16	115-199
	44	UNUSED						115-199
	45		W4471	5103R	22		34-61-16	115-199
	46		W4471	5103B	22		34-61-16	115-199
	47		W4471	5103Z			34-61-16	115-199
	48		W4471	5136R	22		34-61-16	115-199
	49		W4471	5136B	22		34-61-16	115-199
	50		W4471	5136Z			34-61-16	115-199
	51		W4471	5104R	22		34-61-16	115-199
	52		W4471	5104B	22		34-61-16	115-199
	53		W4471	5094R	24		34-22-29	115-199
	54		W4471	5094B	24		34-22-29	115-199
	55		W4471	5094Z			34-22-29	115-199
	CAP	Y	W4471	0210	22		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 87

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41096J		P33/ /		RCPT				ALL
	1		W1230	0659	24		26-15-12	001-099
	1		W1232	0014	24		26-15-12	115-199
	2	18	W1230	0268	18		32-12-12	ALL
	3		W1230	0655	20		26-15-12	001-099
	3		W1232	0010	20		26-15-12	115-199
	4		W1230	0663	24		26-15-12	001-099
	4		W1232	0019	24		26-15-12	115-199
	5	UNUSED						001-099
	5		W1230	0223	22		32-44-11	115-199
	6		W1230	0402	24		26-15-12	001-099
	6		W1234	0002	24		26-15-12	115-199
	7	18	W1230	0269	18		32-12-12	ALL
	8	UNUSED						001-099
	8		W1230	0224	22		32-44-11	115-199
	9		W1230	0684	20		26-22-21	001-099
	9		W1232	0065	20		26-15-12	115-199
	10		W1230	0733	20		32-35-11	001-099
	10		W1232	0145	20		32-35-11	115-199
	11		W1230	0734	20		32-35-11	001-099
	11		W1232	0146	20		32-35-11	115-199
	12	UNUSED						ALL
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
	16	UNUSED						001-099
	17	UNUSED						001-099
	18	UNUSED						001-099
	19	UNUSED						001-099
	20	UNUSED						001-099
	21	UNUSED						001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
D41096P		P033-00/ /		PLUG				001-099
D41096P		P33/ /		PLUG				115-199
	1		W2150	0001	20		26-15-12	ALL
	2	18	W2150	0023	18		32-12-12	ALL
	3		W2150	0003	20		26-15-12	ALL
	4		W2150	0004	20		26-15-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 88

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41096P		P033-00/ /		PLUG (continued)				001-099
D41096P		P33/ /		PLUG (continued)				115-199
	5	UNUSED						001-099
	5		W2150	0011	20		32-44-11	115-199
	6		W2150	0006	20		26-15-12	ALL
	7	18	W2150	0024	18		32-12-12	ALL
	8		W2150	0002	20		SPARE	001-099
	8		W2150	0009	20		32-44-11	115-199
	9		W2150	0008	20		26-22-21	001-099
	9		W2150	0008	20		26-15-12	115-199
	10		W2150	0013	20		32-35-11	ALL
	11		W2150	0012	20		32-35-11	ALL
	12		W2150	0009	20		SPARE	001-099
	12	UNUSED						115-199
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
	16	UNUSED						001-099
	17	UNUSED						001-099
	18	UNUSED						001-099
	19	UNUSED						001-099
	20	UNUSED						001-099
	21	UNUSED						001-099
	22		W2150	0007	20		SPARE	001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
D41097J		E002-03/ /		RCPT-				001-099
D41097J		E2-3/ /		RCPT-				115-199
	1		W1175	5063R	24		22-15-11	ALL
	2		W1175	5063B	24		22-15-11	ALL
	3		W1175	FREN			22-15-11	ALL
	4		W1175	5034R	24		22-32-12	ALL
	5		W1175	5034B	24		22-32-12	ALL
	6		W1175	5034Z			22-32-12	ALL
	7		W1175	0114	24		22-32-13	ALL
	8		W1175	0115	24		22-32-13	ALL
	9		W1175	0116	24		22-32-13	ALL
	10		W1175	0117	24		22-32-13	ALL
	11		W1175	0121	24		22-32-13	ALL
	12		W1175	0122	24		22-32-13	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 89

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41097J		E002-03/ /		RCPT- (continued)				001-099
D41097J		E2-3/ /		RCPT- (continued)				115-199
	13		W1175	0123	24		22-32-13	ALL
	14		W1175	0124	24		22-32-13	ALL
	15		W1175	0125	24		22-32-13	ALL
	16		W1175	0126	24		22-32-13	ALL
	17		W1175	2011R	24		22-32-13	ALL
	18		W1175	2011B	24		22-32-13	ALL
	19		W1175	0089	20		22-32-15	ALL
	20		W1175	0090	24		22-32-15	ALL
	21		W1175	0395	22		22-41-11	001-099
	21		W1175	1024	22		22-41-11	115-199
	22		W1175	0396	22		22-41-11	001-099
	22		W1175	1025	22		22-41-11	115-199
	23		W1175	5030R	24		22-41-11	ALL
	24		W1175	5030B	24		22-41-11	ALL
	25		W1175	5030Z			22-41-11	ALL
	26		W1175	5027R	24		22-41-12	ALL
	27		W1175	5027B	24		22-41-12	ALL
	28		W1175	FREP			22-41-12	ALL
	29		W1175	5028R	24		22-41-12	ALL
	30		W1175	5028B	24		22-41-12	ALL
	31		W1175	FREQ			22-41-12	ALL
	32		W1175	5106R	24		34-22-29	ALL
	33		W1175	5106B	24		34-22-29	ALL
	34		W1175	5106Z			34-22-29	ALL
	35		W1175	0297	22		22-15-12	ALL
	36		W1175	0078	22		22-34-11	ALL
	37		W1175	0056	24		31-51-21	001, 003-099, 115-199
	37		W1175	0056	22		31-51-21	002
	38		W1175	FRGY			34-25-11	001, 003-099
	38	UNUSED						002
	38		W1175	FRDJ			34-25-11	115-199
	39		W1175	5080R	24		34-25-11	001, 003-099, 115-199
	39	UNUSED						002
	40		W1175	5080B	24		34-25-11	001, 003-099, 115-199
	40	UNUSED						002
	41		W1175	FRGV			34-25-11	001, 003-099
	41	UNUSED						002
	41		W1175	FRFP			34-25-11	115-199
	42		W1175	5082R	24		34-25-11	001, 003-099, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 90

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41097J		E002-03/ /		RCPT- (continued)				001-099
D41097J		E2-3/ /		RCPT- (continued)				115-199
	42	UNUSED						002
	43		W1175	5082B	24		34-25-11	001, 003-099, 115-199
	43	UNUSED						002
	44		W1175	5101R	24		34-46-12	ALL
	45		W1175	5101B	24		34-46-12	ALL
	46		W1175	5101Z			34-46-12	ALL
	47	UNUSED						ALL
	48		W1175	0612	24		31-51-21	ALL
	49		W1175	0248	24		34-46-11	ALL
	50		W1175	0311	20		29-35-11	ALL
	51		W1175	0312	20		29-35-11	ALL
	52		W1175	0280	24		34-25-11	001, 003-099, 115-199
	52	UNUSED						002
	53		W1175	5090R	24		34-22-91	001-099
	53		W1175	5093R	24		34-22-93	115-199
	54		W1175	5090B	24		34-22-91	001-099
	54		W1175	5093B	24		34-22-93	115-199
	55		W1175	5090Z			34-22-91	001-099
	55		W1175	5093Z			34-22-93	115-199
	DED		W1175	1024Z			22-41-11	115-199
	DED		W1175	1025Z			22-41-11	115-199
			W1175	FRGV			34-25-11	001, 003-099
			W1175	FRGY			34-25-11	001, 003-099
			W1175	0283	20		34-25-11	001, 003-099, 115-199
			W1175	0285	20		34-25-11	001, 003-099, 115-199
			W1175	5080Z			34-25-11	001, 003-099, 115-199
			W1175	5082Z			34-25-11	001, 003-099, 115-199
			W1175	0230	20		22-15-11	ALL
			W1175	0262	20		22-41-12	ALL
			W1175	0263	20		22-41-12	ALL
			W1175	5027Z			22-41-12	ALL
			W1175	5028Z			22-41-12	ALL
			W1175	5063Z			22-15-11	ALL
			W1175	FREN			22-15-11	ALL
			W1175	FREP			22-41-12	ALL
			W1175	FREQ			22-41-12	ALL
			W1175	FRDJ			34-25-11	115-199
			W1175	FRFP			34-25-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 91

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41097P D41097P		E002-03/ / E2-3/ /		PLUG- PLUG-				001-099 115-199
	1		W4471	5018R	24		22-15-11	ALL
	2		W4471	5018B	24		22-15-11	ALL
	3		W4471	5018Z			22-15-11	ALL
	4		W4471	5022R	24		22-32-12	ALL
	5		W4471	5022B	24		22-32-12	ALL
	6		W4471	5022Z			22-32-12	ALL
	7		W4471	0054	24		22-32-13	ALL
	8		W4471	0055	24		22-32-13	ALL
	9		W4471	0056	24		22-32-13	ALL
	10		W4471	0057	24		22-32-13	ALL
	11		W4471	0058	24		22-32-13	ALL
	12		W4471	0059	24		22-32-13	ALL
	13		W4471	0060	24		22-32-13	ALL
	14		W4471	0061	24		22-32-13	ALL
	15		W4471	0062	24		22-32-13	ALL
	16		W4471	0063	24		22-32-13	ALL
	17		W4471	2011R	24		22-32-13	ALL
	18		W4471	2011B	24		22-32-13	ALL
	19		W4471	0066	24		22-32-15	ALL
	20		W4471	0067	24		22-32-15	ALL
	21		W4471	0069	22		22-41-11	ALL
	22		W4471	0070	22		22-41-11	ALL
	23		W4471	5023R	24		22-41-11	ALL
	24		W4471	5023B	24		22-41-11	ALL
	25		W4471	5023Z			22-41-11	ALL
	26		W4471	5027R	24		22-41-12	ALL
	27		W4471	5027B	24		22-41-12	ALL
	28		W4471	5027Z			22-41-12	ALL
	29		W4471	5028R	24		22-41-12	ALL
	30		W4471	5028B	24		22-41-12	ALL
	31		W4471	5028Z			22-41-12	ALL
	32		W4471	5093R	24		34-22-29	ALL
	33		W4471	5093B	24		34-22-29	ALL
	34		W4471	5093Z			34-22-29	ALL
	35		W4471	0208	22		22-15-12	ALL
	36		W4471	0130	22		22-34-11	ALL
	37		W4471	0034	24		31-51-21	ALL
	38		W4471	5040Z			34-25-11	001, 003-099, 115-199
	38		W4471	5040Z			SPARE	002

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 92

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41097P		E002-03/ /		PLUG- (continued)				001-099
D41097P		E2-3/ /		PLUG- (continued)				115-199
	39		W4471	5040R	24		34-25-11	001, 003-099, 115-199
	39		W4471	5040R	24		SPARE	002
	40		W4471	5040B	24		34-25-11	001, 003-099, 115-199
	40		W4471	5040B	24		SPARE	002
	41		W4471	5041Z			34-25-11	001, 003-099, 115-199
	41		W4471	5041Z			SPARE	002
	42		W4471	5041R	24		34-25-11	001, 003-099, 115-199
	42		W4471	5041R	24		SPARE	002
	43		W4471	5041B	24		34-25-11	001, 003-099, 115-199
	43		W4471	5041B	24		SPARE	002
	44		W4471	5091R	24		34-46-12	ALL
	45		W4471	5091B	24		34-46-12	ALL
	46		W4471	5091Z			34-46-12	ALL
	47		W4471	0149	24		SPARE	001-099
	47	UNUSED						115-199
	48		W4471	0048	24		31-51-21	ALL
	49		W4471	0213	24		34-46-11	ALL
	50		W4471	0171	20		29-35-11	ALL
	51		W4471	0175	20		29-35-11	ALL
	52		W4471	0179	22		34-25-11	001, 003-099, 115-199
	52		W4471	0179	22		SPARE	002
	53		W4471	5054R	24		34-22-91	001-099
	53		W4471	5054R	24		34-22-93	115-199
	54		W4471	5054B	24		34-22-91	001-099
	54		W4471	5054B	24		34-22-93	115-199
	55		W4471	5054Z			34-22-91	001-099
	55		W4471	5054Z			34-22-93	115-199
	CAP	Y	W4471	0168	22		SPARE	115-199
D41099J		E002-04/ /		RCPT				001-099
D41099J		E2-4/ /		RCPT				115-199
	1		W1177	5011Z			22-21-11	ALL
	2		W1177	5011R	24		22-21-11	ALL
	3		W1177	5011B	24		22-21-11	ALL
	4		W1177	0013	22		22-21-11	ALL
	5		W1177	5056B	24		22-21-21	ALL
	6		W1177	5056R	24		22-21-21	ALL
	7		W1177	5056Z			22-21-21	ALL
	8	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 93

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41099J		E002-04/ /		RCPT (continued)				001-099
D41099J		E2-4/ /		RCPT (continued)				115-199
	9		W1177	5010B	22		32-42-11	001-099
	9		W1177	5010B	24		32-42-11	115-199
	10		W1177	5010R	22		32-42-11	001-099
	10		W1177	5010R	24		32-42-11	115-199
	11		W1177	5010Z			32-42-11	ALL
	12		W1177	0016	22		34-21-11	ALL
	13		W1177	0017	22		34-21-11	ALL
	14		W1177	0018	22		34-21-11	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33		W1177	5012R	24		34-22-91	001-099
	33		W1177	5012R	24		34-22-93	115-199
	34		W1177	5012B	24		34-22-91	001-099
	34		W1177	5012B	24		34-22-93	115-199
	35		W1177	5012Z			34-22-91	001-099
	35		W1177	5012Z			34-22-93	115-199
	36	UNUSED						001-099
	36		W1177	5065R	22		34-58-11	115-199
	37		W1177	5058R	24		34-21-11	ALL
	38		W1177	5058B	24		34-21-11	ALL
	39		W1177	5058Z			34-21-11	ALL
	40	UNUSED						001-099
	40		W1177	5065B	22		34-58-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 94

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41099J		E002-04/ /		RCPT (continued)				001-099
D41099J		E2-4/ /		RCPT (continued)				115-199
	41	UNUSED						001-099
	41		W1177	5065Z			34-58-11	115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D41099P		E002-04/ /		PLUG-				001-099
D41099P		E2-4/ /		PLUG-				115-199
	1		W4471	5031Z			22-21-11	ALL
	2		W4471	5031R	24		22-21-11	ALL
	3		W4471	5031B	24		22-21-11	ALL
	4		W4471	0074	22		22-21-11	ALL
	5		W4471	5065B	24		22-21-21	ALL
	6		W4471	5065R	24		22-21-21	ALL
	7		W4471	5065Z			22-21-21	ALL
	8		W4471	0192	22		SPARE	001-099
	8	UNUSED						115-199
	9		W4471	5039B	22		32-42-11	001-099
	9		W4471	5039B	24		32-42-11	115-199
	10		W4471	5039R	22		32-42-11	001-099
	10		W4471	5039R	24		32-42-11	115-199
	11		W4471	5039Z			32-42-11	ALL
	12		W4471	0097	22		34-21-11	ALL
	13		W4471	0098	22		34-21-11	ALL
	14		W4471	0099	22		34-21-11	ALL
	15		W4471	0135	22		SPARE	ALL
	16		W4471	0136	22		SPARE	ALL
	17		W4471	0137	22		SPARE	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 95

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41099P		E002-04/ /		PLUG- (continued)				001-099
D41099P		E2-4/ /		PLUG- (continued)				115-199
	18		W4471	5074R	24		SPARE	001-099
	18		W4471	0138	22		SPARE	115-199
	19		W4471	5074B	24		SPARE	001-099
	19	UNUSED						115-199
	20		W4471	5074Z			SPARE	001-099
	20	UNUSED						115-199
	21	UNUSED						ALL
	22	UNUSED						001-099
	22		W4471	0142	22		SPARE	115-199
	23		W4471	5047R	24		SPARE	ALL
	24		W4471	5047B	24		SPARE	ALL
	25		W4471	5047Z			SPARE	ALL
	26		W4471	0151	22		SPARE	ALL
	27		W4471	5048R	24		SPARE	ALL
	28		W4471	5048B	24		SPARE	ALL
	29		W4471	5048Z			SPARE	ALL
	30	UNUSED						001-099
	30		W4471	0162	24		SPARE	115-199
	31	UNUSED						001-099
	31		W4471	0163	24		SPARE	115-199
	32	UNUSED						001-099
	32		W4471	0164	24		SPARE	115-199
	33		W4471	5054R	24		34-22-91	001-099
	33		W4471	5054R	24		34-22-93	115-199
	34		W4471	5054B	24		34-22-91	001-099
	34		W4471	5054B	24		34-22-93	115-199
	35		W4471	5054Z			34-22-91	001-099
	35		W4471	5054Z			34-22-93	115-199
	36	UNUSED						001-099
	36		W4471	5078R	22		34-58-11	115-199
	37		W4471	5067R	24		34-21-11	ALL
	38		W4471	5067B	24		34-21-11	ALL
	39		W4471	5067Z			34-21-11	ALL
	40	UNUSED						001-099
	40		W4471	5078B	22		34-58-11	115-199
	41	UNUSED						001-099
	41		W4471	5078Z			34-58-11	115-199
	42	UNUSED						115-199
	43	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 96

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41099P		E002-04/ /		PLUG- (continued)				001-099
D41099P		E2-4/ /		PLUG- (continued)				115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41000

Page 97 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41100J		880/ /		RCPT				ALL
	1		W4006	0060	24		21-51-13	ALL
	2		W4006	0061	24		21-51-13	ALL
	3		W4006	0078	24		21-51-13	ALL
	4		W4006	0079	24		21-51-13	ALL
	5		W4006	0080	24		21-51-13	ALL
	6		W4006	0081	24		21-51-13	ALL
	7		W4006	0105	20		21-61-51	ALL
	8		W4006	0165	24		21-51-15	ALL
	9		W4006	0166	24		21-51-15	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						001-099
	13		W4006	0051	22		SPARE	115-199
	14	UNUSED						ALL
	15		W4006	0035	18		33-31-21	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W4006	0055	20		21-51-11	ALL
	19		W4006	0056	20		21-51-11	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W4006	0057	20		21-51-11	ALL
	24		W4006	0058	20		21-51-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	S/R		W4006	YAAC			21-51-11	ALL
D41100P		AC0880/ /		PLUG				ALL
	1		W2406	2509B	20		21-51-13	ALL
	2		W2406	2509R	20		21-51-13	ALL
	3		W2406	2507B	20		21-51-13	ALL
	4		W2406	2507R	20		21-51-13	ALL
	5		W2406	2511B	20		21-51-13	ALL
	6		W2406	2511R	20		21-51-13	ALL
	7		W2406	1024	20		21-61-51	ALL
	8		W2406	1017	20		21-51-15	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41100

Page 1

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41100P		AC0880/ /		PLUG (continued)				ALL
	9		W2406	1019	20		21-51-15	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W2406	1009	18		33-31-21	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W2406	1011	20		21-51-11	ALL
	19		W2406	2501B	18		21-51-11	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W2406	2501R	18		21-51-11	ALL
	24	18	W2406	1004	18		21-51-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	S/R		W2406	1004Z			21-51-11	ALL
	S/R		W2406	1009Z			33-31-21	ALL
	S/R		W2406	1011Z			21-51-11	ALL
	S/R		W2406	1017Z			21-51-15	ALL
	S/R		W2406	1019Z			21-51-15	ALL
	S/R		W2406	1024Z			21-61-51	ALL
	S/R		W2406	2501Z			21-51-11	ALL
	S/R		W2406	2507Z			21-51-13	ALL
	S/R		W2406	2509Z			21-51-13	ALL
	S/R		W2406	2511Z			21-51-13	ALL
D41101J		P061-00/ /		RCPT-				ALL
	1		W2353	5001R	24		22-41-13	ALL
	2		W2353	5001B	24		22-41-13	ALL
	3		W2353	5001Z			22-41-13	ALL
	4		W2353	0001	22		22-41-13	ALL
	5		W2353	0002	22		22-41-13	ALL
	6		W2353	0003	22		22-41-13	ALL
	7		W2353	0004	22		22-41-13	ALL
	8		W2353	0005	22		22-41-13	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41100

Page 2

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41101J		P061-00/ /		RCPT- (continued)				ALL
	9		W2353	0006	22		22-41-13	ALL
	10		W2353	0007	22		22-41-13	ALL
	11		W2353	0008	22		SPARE	ALL
	12		W2353	0009	22		SPARE	ALL
	13		W2353	0010	22		SPARE	ALL
	14		W2353	0011	22		22-41-13	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D41102J		880/ /		RCPT				ALL
	1		W4106	0060	20		21-51-23	ALL
	2		W4106	0061	20		21-51-23	ALL
	3		W4106	0062	20		21-51-23	ALL
	4		W4106	0063	20		21-51-23	ALL
	5		W4106	0064	20		21-51-23	ALL
	6		W4106	0065	20		21-51-23	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W4106	0090	20		33-44-11	ALL
	10		W4106	0172	24		21-51-25	ALL
	11		W4106	0173	24		21-51-25	ALL
	12		W4106	2026B	24		21-51-25	ALL
	13		W4106	2026R	24		21-51-25	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W4106	0054	24		21-51-23	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41100

Page 3

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41102J		880/ /		RCPT (continued)				ALL
	23		W4106	0055	24		21-51-23	ALL
	24	UNUSED						ALL
	25		W4106	0056	24		21-51-23	ALL
	26		W4106	0058	24		21-51-23	ALL
	27		W4106	0059	24		21-51-23	ALL
	28		W4106	0057	24		21-51-23	ALL
	S/R		W4106	YAAD			21-51-23	ALL
D41102P		AD0880/ /		PLUG				ALL
	1		W2506	2501B	20		21-51-23	ALL
	2		W2506	2501R	20		21-51-23	ALL
	3		W2506	2504B	20		21-51-23	ALL
	4		W2506	2504R	20		21-51-23	ALL
	5		W2506	2506B	20		21-51-23	ALL
	6		W2506	2506R	20		21-51-23	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	18	W2506	1013	18		33-44-11	ALL
	10		W2506	1014	20		21-51-25	ALL
	11		W2506	1016	20		21-51-25	ALL
	12		W2506	2514B	20		21-51-25	ALL
	13		W2506	2514R	20		21-51-25	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W2506	2509B	20		21-51-23	ALL
	23		W2506	2509R	20		21-51-23	ALL
	24	UNUSED						ALL
	25		W2506	2522B	20		21-51-23	ALL
	26		W2506	2531B	20		21-51-23	ALL
	27		W2506	2531R	20		21-51-23	ALL
	28		W2506	2522R	20		21-51-23	ALL
	S/R		W2506	1013Z			33-44-11	ALL
	S/R		W2506	1014Z			21-51-25	ALL
	S/R		W2506	1016Z			21-51-25	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41100

Page 4

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41102P		AD0880/ /		PLUG (continued)				ALL
	S/R		W2506	2501Z			21-51-23	ALL
	S/R		W2506	2504Z			21-51-23	ALL
	S/R		W2506	2506Z			21-51-23	ALL
	S/R		W2506	2509Z			21-51-23	ALL
	S/R		W2506	2514Z			21-51-25	ALL
	S/R		W2506	2522Z			21-51-23	ALL
	S/R		W2506	2531Z			21-51-23	ALL
D41104J		P031-00/ /		RCPT				001-099
	1		W1136	0041	24		24-51-71	001-099
	2		W1136	0042	24		24-51-71	001-099
	3	UNUSED						001-099
	4		W1136	0039	18		25-31-33	001-099
	5	UNUSED						001-099
	6	UNUSED						001-099
	7	UNUSED						001-099
	8	UNUSED						001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
D41104P		P31/ /		PLUG-				001-099
	1		W3572	0164	24		24-51-71	001-099
	2		W3572	0165	24		24-51-71	001-099
	3		W3572	0166	20		SPARE	001-099
	4		W3572	0167	18		25-31-33	001-099
	5	UNUSED						001-099
	6	UNUSED						001-099
	7	UNUSED						001-099
	8	UNUSED						001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
D41106J		308/279/0		RCPT				001-099
D41106J		308/288/0		RCPT				115-199
	1		W2070	0068	20		52-51-11	ALL
	2		W2070	0069	20		52-51-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41100

Page 5

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41106J		308/279/0		RCPT (continued)				001-099
D41106J		308/288/0		RCPT (continued)				115-199
	3		W2070	0487	24		33-22-11	001-099
	3		W2070	0487	22		33-22-11	115-199
	4		W2070	0488	20		33-22-11	ALL
	5	UNUSED						ALL
D41106P		308/288/0		PLUG-				ALL
	1		W0502	0003	20		52-51-11	ALL
	2		W0502	0004	20		52-51-11	ALL
	3		W0502	0001	20		33-22-11	ALL
	4		W0502	0002	20		33-22-11	ALL
	5	UNUSED						ALL
D41112J		AA1862/252/L037		RCPT				ALL
	1		W2812	0001	20		27-38-11	ALL
	2		W2812	0002	20		27-38-11	ALL
	3	UNUSED						ALL
	4		W2812	2001B	20		27-38-11	ALL
	5		W2812	2001R	20		27-38-11	ALL
	6		W2812	0017	20		27-23-21	ALL
	7		W2812	0018	20		27-23-21	ALL
	8		W2812	1001	20		27-38-11	ALL
D41112P		AA1862/ /		PLUG				ALL
	1		W3200	2501B	20		27-38-11	ALL
	2		W3200	2501R	20		27-38-11	ALL
	3	UNUSED						ALL
	4		W3200	2502B	20		27-38-11	ALL
	5		W3200	2502R	20		27-38-11	ALL
	6		W3200	0003	20		27-23-21	ALL
	7		W3200	0008	20		27-23-21	ALL
	8		W3200	1001	20		27-38-11	ALL
D41113J		E3-3/ /		RCPT				001-099
	1		W1433	0258	24		31-31-52	001-099
	2		W1433	0259	24		31-31-52	001-099
	3		W1433	0257	24		31-31-52	001-099
	4		W1433	0256	22		31-31-52	001-099
	5		W1433	0260	24		31-31-52	001-099
	6		W1433	0261	22		31-31-52	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41100

Page 6

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41113J		E3-3/ /		RCPT (continued)				001-099
	7	UNUSED						001-099
	8	UNUSED						001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
D41113P		E003-03/ /		PLUG				001-099
	1		W2733	0001	20		31-31-52	001-099
	2		W2733	0002	20		31-31-52	001-099
	3		W2733	2001R	20		31-31-52	001-099
	4		W2733	2001B	20		31-31-52	001-099
	5		W2733	2002R	20		31-31-52	001-099
	6		W2733	2002B	20		31-31-52	001-099
	7	UNUSED						001-099
	8	UNUSED						001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
D41114J		AB1862/ /		RCPT				ALL
	1		W2814	0001	20		27-38-11	ALL
	2		W2814	0002	20		27-38-11	ALL
	3	UNUSED						ALL
	4		W2814	2001B	20		27-38-11	ALL
	5		W2814	2001R	20		27-38-11	ALL
	6		W2814	0017	20		27-23-21	ALL
	7		W2814	0018	20		27-23-21	ALL
	8		W2814	1001	20		27-38-11	ALL
D41114P		AB1862/ /		PLUG				ALL
	1		W3202	2501B	20		27-38-11	ALL
	2		W3202	2501R	20		27-38-11	ALL
	3	UNUSED						ALL
	4		W3202	2502B	20		27-38-11	ALL
	5		W3202	2502R	20		27-38-11	ALL
	6		W3202	0003	20		27-23-21	ALL
	7		W3202	0008	20		27-23-21	ALL
	8		W3202	1001	20		27-38-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41100

Page 7

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41115J		E3-3/ /		RCPT				001-099
	1		W1433	0268	24		31-31-52	001-099
	2		W1433	0269	24		31-31-52	001-099
	3		W1433	0267	24		31-31-52	001-099
	4		W1433	0266	22		31-31-52	001-099
	5		W1433	0270	24		31-31-52	001-099
	6		W1433	0271	22		31-31-52	001-099
	7	UNUSED						001-099
	8	UNUSED						001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
D41115P		E003-03/ /		PLUG				001-099
	1		W2735	0001	20		31-31-52	001-099
	2		W2735	0002	20		31-31-52	001-099
	3		W2735	2001R	20		31-31-52	001-099
	4		W2735	2001B	20		31-31-52	001-099
	5		W2735	2002R	20		31-31-52	001-099
	6		W2735	2002B	20		31-31-52	001-099
	7	UNUSED						001-099
	8	UNUSED						001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
D41116J		AD0880/ /		RCPT				ALL
	1		W4220	0126	20		36-11-31	ALL
	2		W4220	0129	20		36-11-31	ALL
	3		W4220	0128	20		36-11-31	ALL
	4		W4220	0127	20		36-11-31	ALL
	5		W4220	0036	22		26-18-21	001-099
	5		W4220	0036	20		26-18-21	115-199
	6		W4220	0037	22		26-18-21	001-099
	6		W4220	0037	20		26-18-21	115-199
	7		W4220	0038	22		26-18-21	001-099
	7		W4220	0038	20		26-18-21	115-199
	8		W4220	0039	22		26-18-21	001-099
	8		W4220	0039	20		26-18-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41100

Page 8

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41116J		AD0880/ /		RCPT (continued)				ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	S/R		W4220	YAAB			26-18-21	001-099
	S/R		W4220	YAAF			26-18-21	115-199
D41116P		AD0880/ /		PLUG				ALL
	1		W2502	4501B	20		36-11-31	ALL
	2		W2502	4501R	20		36-11-31	ALL
	3		W2502	4501G	20		36-11-31	ALL
	4		W2502	4501Y	20		36-11-31	ALL
	5		W2502	1028	18		26-18-21	ALL
	6		W2502	1029	18		26-18-21	ALL
	7		W2502	1030	18		26-18-21	ALL
	8		W2502	1031	18		26-18-21	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	S/R		W2502	1028Z			26-18-21	ALL
	S/R		W2502	1029Z			26-18-21	ALL
	S/R		W2502	1030Z			26-18-21	ALL
	S/R		W2502	1031Z			26-18-21	ALL
	S/R		W2502	4501Z			36-11-31	ALL
D41120J		409/301/L08		RCPT-				001-099
D41120J		AA0409/ /		RCPT-				115-199
	1		W3572	0070	24		38-32-11	001-099
	1		W3572	0070	20		38-32-11	115-199
	2		W3572	0071	24		38-32-11	001-099
	2		W3572	0071	20		38-32-11	115-199
	3		W3572	0072	24		38-32-11	001-099
	3		W3572	0072	20		38-32-11	115-199
	4		W3572	0129	24		38-32-11	001-099
	4		W3572	0159	18		38-32-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41100

Page 9

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41120J		409/301/L08		RCPT- (continued)				001-099
D41120J		AA0409/ /		RCPT- (continued)				115-199
	5		W3572	0130	24		38-32-11	001-099
	5		W3572	0160	18		38-32-11	115-199
	6		W3572	0131	24		38-32-11	001-099
	6		W3572	0161	18		38-32-11	115-199
	7		W3572	0086	22		33-14-41	ALL
	8		W3572	0123	20		33-25-21	001-099
	8		W3572	0176	20		33-25-21	115-199
	9		W3572	0166	20		SPARE	001-099
	9	UNUSED						115-199
	10		W3572	0167	18		25-31-33	001-099
	10		W3572	0089	20		SPARE	115-199
	11		W3572	0073	24		38-32-11	001-099
	12		W3572	0074	24		38-32-11	001-099
	13		W3572	0075	24		38-32-11	001-099
	14	UNUSED						001-099
	CAP	Y	W3572	0089	20		SPARE	001-099
	CAP	Y	W3572	0151	20		SPARE	001-099
D41120P		P011-00/ /		PLUG				001-099
D41120P		AA0409/ /		PLUG-				115-199
	1		W0126	0519	24		38-32-11	001-099
	1		W0126	0519	20		38-32-11	115-199
	2		W0126	0520	24		38-32-11	001-099
	2		W0126	0520	20		38-32-11	115-199
	3		W0126	0521	24		38-32-11	001-099
	3		W0126	0521	20		38-32-11	115-199
	4		W0126	0522	24		38-32-11	001-099
	4		W0126	0522	18		38-32-11	115-199
	5		W0126	0523	24		38-32-11	001-099
	5		W0126	0523	18		38-32-11	115-199
	6		W0126	0524	24		38-32-11	001-099
	6		W0126	0524	18		38-32-11	115-199
	7		W0126	0407	22		33-14-41	ALL
	8		W0126	0531	20		33-25-21	ALL
	9	UNUSED						ALL
	10		W0126	0047	20		25-31-33	001-099
	10	UNUSED						115-199
	11		W0126	0352	24		38-32-11	001-099
	12		W0126	0353	24		38-32-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41100

Page 10

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41120P		P011-00/ /		PLUG (continued)				001-099
D41120P		AA0409/ /		PLUG- (continued)				115-199
	13		W0126	0354	24		38-32-11	001-099
	14	UNUSED						001-099
D41122J		P037-00/ /		RCPT-				ALL
	1		W1272	0213	20		30-41-12	001-099
	1		W1272	0213	18		30-41-12	115-199
	2		W1272	0214	20		30-41-12	001-099
	2		W1272	0214	18		30-41-12	115-199
	3		W1270	0109	20		30-33-11	ALL
	4		W1272	0253	22		24-32-41	ALL
	5		W1272	0251	24		24-27-21	ALL
	6		W1272	0252	24		24-27-21	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						001-099
	14		W1270	0100	22		24-34-11	115-199
	15		W1270	0100	24		24-34-11	001-099
	16		W1272	2001B	12		30-41-12	001-099
	17	UNUSED						001-099
	18		W1272	2001R	12		30-41-12	001-099
	19	UNUSED						001-099
	20	UNUSED						001-099
	21	UNUSED						001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
	25	UNUSED						001-099
D41122P		P037-00/ /		PLUG-				ALL
	1		W2244	0041	20		30-41-12	001-099
	1		W2244	0041	18		30-41-12	115-199
	2		W2244	0042	20		30-41-12	001-099
	2		W2244	0042	18		30-41-12	115-199
	3		W2244	0043	20		30-33-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41100

Page 11

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41122P		P037-00/ /		PLUG- (continued)				ALL
	4		W2244	0257	22		24-32-41	ALL
	5		W2244	0255	24		24-27-21	ALL
	6		W2244	0256	24		24-27-21	ALL
	7	UNUSED						001-099
	7		W2244	0057	16		SPARE	115-199
	8	UNUSED						001-099
	8		W2244	0058	16		SPARE	115-199
	9	UNUSED						001-099
	9		W2244	0604	20		SPARE	115-199
	10	UNUSED						001-099
	10		W2244	0605	20		SPARE	115-199
	11	UNUSED						001-099
	11		W2244	0606	20		SPARE	115-199
	12	UNUSED						001-099
	12		W2244	0607	20		SPARE	115-199
	13	UNUSED						001-099
	13		W2244	0609	20		SPARE	115-199
	14	UNUSED						001-099
	14		W2244	0014	22		24-34-11	115-199
	15		W2244	0014	24		24-34-11	001-099
	16		W2244	2003B	12		30-41-12	001-099
	17	UNUSED						001-099
	18		W2244	2003R	12		30-41-12	001-099
	19	UNUSED						001-099
	20	UNUSED						001-099
	21	UNUSED						001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
	25	UNUSED						001-099
D41136J		600/180/R55		RCPT-				ALL
	1		W0818	0001	16		33-37-11	ALL
	2		W0818	0002	16		33-37-11	ALL
	3		W0818	0003	16		33-37-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W0818	0009	22		52-34-11	ALL
	7		W0818	0011	22		52-34-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41100

Page 12

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41136P		/600/		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D41145J		E3-3/ /		RCPT-				001-099
	1		W1433	0333	24		31-31-51	001-099
	2		W1433	2009R	24		31-31-51	001-099
	3		W1433	2009B	24		31-31-51	001-099
	4		W1433	0334	24		31-31-51	001-099
	5		W1433	2010R	24		31-31-51	001-099
	6		W1433	2010B	24		31-31-51	001-099
	7		W1433	0335	24		31-31-51	001-099
	8		W1433	2011R	24		31-31-51	001-099
	9		W1433	2011B	24		31-31-51	001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
D41145P		E3-3/ /		PLUG-				001-099
	1		W0447	0001	24		31-31-51	001-099
	2		W0447	2001R	24		31-31-51	001-099
	3		W0447	2001B	24		31-31-51	001-099
	4		W0447	0002	24		31-31-51	001-099
	5		W0447	2002R	24		31-31-51	001-099
	6		W0447	2002B	24		31-31-51	001-099
	7		W0447	0003	24		31-31-51	001-099
	8		W0447	2003R	24		31-31-51	001-099
	9		W0447	2003B	24		31-31-51	001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
D41156J		1422/180/R55		RCPT-				ALL
	1		W1018	0001	16		33-37-21	ALL
	2		W1018	0002	16		33-37-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41100

Page 13

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41156J		1422/180/R55		RCPT- (continued)				ALL
	3		W1018	0003	16		33-37-21	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1018	0009	22		52-35-11	ALL
	7		W1018	0011	22		52-35-11	ALL
D41156P		1415/ /		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D41161J		430/290/020		RCPT-COAX				ALL
	= A1		W2361	001CX			34-45-02	ALL
	= C1		W2361	001CO			34-45-02	ALL
D41161P		415/300/020		PLUG-COAX				ALL
	= A1		W2363	001CX			34-45-02	ALL
	= C1		W2363	001CO			34-45-02	ALL
D41162J		AS1123/ /		RCPT				ALL
	1	UNUSED						ALL
	2		W3370	0002	20		26-11-12	ALL
	3		W3370	0003	18		26-12-11	ALL
	4		W3370	0004	18		26-12-11	ALL
	5		W3370	0001	20		26-11-12	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D41162P		AS1123/ /		PLUG				ALL
	1	UNUSED						ALL
	2		W3320	0003	20		26-11-12	ALL
	3		W3320	0008	18		26-12-11	ALL
	4		W3320	0009	18		26-12-11	ALL
	5		W3320	0002	20		26-11-12	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41100

Page 14

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41163J		430/290/020		RCPT-COAX				ALL
	= A1		W2361	002CX			34-45-02	ALL
	= C1		W2361	002CO			34-45-02	ALL
D41163P		415/300/020		PLUG-COAX				ALL
	= A1		W2363	002CX			34-45-02	ALL
	= C1		W2363	002CO			34-45-02	ALL
D41164J		AS2123/ /		RCPT				ALL
	1	UNUSED						ALL
	2		W3470	0002	20		26-11-22	ALL
	3		W3470	0003	18		26-12-21	ALL
	4		W3470	0004	18		26-12-21	ALL
	5		W3470	0001	20		26-11-22	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D41164P		AS2123/ /		PLUG				ALL
	1	UNUSED						ALL
	2		W3420	0003	20		26-11-22	ALL
	3		W3420	0008	18		26-12-21	ALL
	4		W3420	0009	18		26-12-21	ALL
	5		W3420	0002	20		26-11-22	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D41165J		430/300/015		RCPT-COAX				ALL
	= A1		W2361	003CX			34-45-02	ALL
	= C1		W2361	003CO			34-45-02	ALL
D41165P		415/300/015		PLUG-COAX				ALL
	= A1		W2363	003CX			34-45-02	ALL
	= C1		W2363	003CO			34-45-02	ALL
D41167J		430/300/010		RCPT-COAX				ALL
	= A1		W2361	004CX			34-45-02	ALL
	= C1		W2361	004CO			34-45-02	ALL
D41167P		415/300/010		PLUG-COAX				ALL
	= A1		W2363	004CX			34-45-02	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41100

Page 15

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41167P		415/300/010		PLUG-COAX (continued)				ALL
	= C1		W2363	004CO			34-45-02	ALL
D41168J		1420/198/R55		RCPT-				ALL
	1		W2662	0031	16		33-37-21	ALL
	2		W2662	0030	16		33-37-21	ALL
	3		W2662	0029	16		33-37-21	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W2662	0036	22		52-35-11	ALL
	7		W2662	0054	22		52-35-11	ALL
D41168P		1420/198/R055		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D41170J		AP0003/ /		RCPT				ALL
	1		W2066	3013R	24		33-13-41	ALL
	2		W2066	3013B	24		33-13-41	ALL
	3		W2066	0044	22		33-16-11	ALL
	4		W2066	0540	20		SPARE	ALL
	5		W2066	0003	22		33-11-11	ALL
	6	UNUSED						ALL
	7		W2066	3013Y	24		33-13-41	ALL
	8		W2066	0439	20		SPARE	001-099 115-199
	8	UNUSED						115-199
	9		W2066	0055	22		33-16-21	ALL
	10		W2066	0441	20		SPARE	001-099
	10	UNUSED						115-199
	11		W2066	0340	22		34-22-81	001-099
	11		W2066	0340	22		34-22-83	115-199
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41100

Page 16

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41170J		AP0003/ /		RCPT (continued)				ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W2066	0521	20		34-61-21	001-099
	21	UNUSED						115-199
	22		W2066	0522	20		34-61-21	001-099
	22	UNUSED						115-199
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						001-099
	30		W2066	2021B	24		23-51-21	115-199
	31	UNUSED						001-099
	31		W2066	2021R	24		23-51-21	115-199
D41170P		AP0003/ /		PLUG				ALL
	1		W0003	3003R	24		33-13-41	ALL
	2		W0003	3003B	24		33-13-41	ALL
	3		W0003	0080	22		33-16-11	ALL
	4	UNUSED						ALL
	5		W0003	0381	24		33-11-11	ALL
	6	UNUSED						ALL
	7		W0003	3003Y	24		33-13-41	ALL
	8	UNUSED						ALL
	9		W0003	0091	22		33-16-21	ALL
	10	UNUSED						ALL
	11		W0003	0225	24		34-22-81	001-099
	11		W0003	0225	24		34-22-83	115-199
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41100

Page 17

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41170P		AP0003/ /		PLUG (continued)				ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						001-099
	30		W0003	2020B	24		23-51-21	115-199
	31	UNUSED						001-099
	31		W0003	2020R	24		23-51-21	115-199
D41171J		AD0440/ /		RCPT-COAX				ALL
	= A1		W2365	001CX			34-45-02	ALL
	= C1		W2365	001CO			34-45-02	ALL
D41171P		460/140/R20		PLUG-COAX				ALL
	= A1		W2367	001CX			34-45-02	ALL
	= C1		W2367	001CO			34-45-02	ALL
D41172J		AP0003/ /		RCPT				ALL
	1		W2070	0200	20		33-13-21	ALL
	2		W2070	0328	24		33-11-11	ALL
	3		W2070	2503B	24		33-11-11	ALL
	4		W2070	2503R	24		33-11-11	ALL
	5		W2070	0379	22		32-61-21	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W2070	0020	22		33-16-31	ALL
	10		W2070	0039	22		33-16-41	ALL
	11		W2070	0024	22		33-16-41	ALL
	12		W2070	0025	22		33-16-41	ALL
	13		W2070	0026	22		33-16-41	ALL
	14		W2070	0079	24		33-42-12	001-099
	14		W2070	0079	20		33-42-12	115-199

HOOKUP LIST
D280N032

91-21-51
Section D41100
Page 18
Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41172J		AP0003/ /		RCPT (continued)				ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W2070	0239	22		30-43-11	ALL
	18		W2070	0111	22		27-51-21	ALL
	19		W2070	0123	22		33-16-41	ALL
	20		W2070	0121	22		27-51-21	ALL
	21		W2070	0011	18		30-42-11	ALL
	22		W2070	0458	20		SPARE	ALL
	23		W2070	0012	18		30-42-11	ALL
	24	UNUSED						001-099
	24		W2070	3011B	24		33-13-71	115-199
	25	UNUSED						001-099
	25		W2070	3011R	24		33-13-71	115-199
	26	UNUSED						001-099
	26		W2070	3011Y	24		33-13-71	115-199
	27		W2070	0270	22		33-16-31	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						001-099
	30		W2070	0806	24		34-22-93	115-199
	31	UNUSED						001-099
	31		W2070	0809	22		34-55-21	115-199
	32	UNUSED						001-099
	32		W2070	0805	24		34-22-93	115-199
	33		W2070	0404	20		SPARE	001-008
	33	UNUSED						009-099
	33		W2070	0804	24		34-22-93	115-199
	34		W2070	0455	22		27-51-21	ALL
	35		W2070	0452	22		27-51-21	ALL
	36		W2070	0405	20		SPARE	001-099
	36	UNUSED						115-199
	37		W2070	0406	20		SPARE	001-008
	37	UNUSED						009-099, 115-199
	38		W2070	0407	20		SPARE	001-008
	38	UNUSED						009-099, 115-199
	39		W2070	2503Z			33-11-11	ALL
D41172P		217.6/200/R40		PLUG				001-099
D41172P		AP0003/ /		PLUG				115-199
	1		W0003	0112	20		33-13-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41100

Page 19

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41172P		217.6/200/R40		PLUG (continued)				001-099
D41172P		AP0003/ /		PLUG (continued)				115-199
	2		W0003	0249	24		33-11-11	ALL
	3		W0003	2516B	24		33-11-11	ALL
	4		W0003	2516R	24		33-11-11	ALL
	5		W0003	0221	22		32-61-21	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0003	0095	22		33-16-31	ALL
	10		W0003	0167	22		33-16-41	ALL
	11		W0003	0146	22		33-16-41	ALL
	12		W0003	0145	22		33-16-41	ALL
	13		W0003	0144	22		33-16-41	ALL
	14		W0003	0275	24		33-42-12	001-099
	14		W0003	0275	22		33-42-12	115-199
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W0003	0211	22		30-43-11	ALL
	18		W0003	0121	22		27-51-21	ALL
	19		W0003	0272	22		33-16-41	ALL
	20		W0003	0287	22		27-51-21	001-099
	20		W0003	0287	22		SPARE	115-199
	21		W0003	0076	18		30-42-11	ALL
	22	UNUSED						ALL
	23		W0003	0078	18		30-42-11	ALL
	24	UNUSED						001-099
	24		W0003	3008B	24		33-13-71	115-199
	25	UNUSED						001-099
	25		W0003	3008R	24		33-13-71	115-199
	26	UNUSED						001-099
	26		W0003	3008Y	24		33-13-71	115-199
	27		W0003	0462	22		33-16-31	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						001-099
	30		W0003	0511	24		34-22-93	115-199
	31	UNUSED						001-099
	31		W0003	0554	22		34-55-21	115-199
	32	UNUSED						001-099
	32		W0003	0513	24		34-22-93	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41100

Page 20

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41172P		217.6/200/R40		PLUG (continued)				001-099
D41172P		AP0003/ /		PLUG (continued)				115-199
	33	UNUSED						001-099
	33		W0003	0508	24		34-22-93	115-199
	34		W0003	0122	22		27-51-21	ALL
	35		W0003	0124	22		27-51-21	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39		W0003	2516Z			33-11-11	ALL
D41173J		AD0440/ /		RCPT-COAX				ALL
	= A1		W2365	002CX			34-45-02	ALL
	= C1		W2365	002CO			34-45-02	ALL
D41173P		460/140/R20		PLUG-COAX				ALL
	= A1		W2367	002CX			34-45-02	ALL
	= C1		W2367	002CO			34-45-02	ALL
D41174J		AP0003/ /		RCPT				ALL
	1		W2078	0027	24		33-11-11	ALL
	2		W2078	0380	20		SPARE	ALL
	3		W2078	0381	20		SPARE	ALL
	4	UNUSED						001-099
	4		W2078	0801	22		34-22-83	115-199
	5		W2078	0525	24		33-11-11	ALL
	6		W2078	0011	22		33-16-51	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W2078	0035	22		33-16-61	ALL
	10	UNUSED						ALL
	11		W2078	0112	22		31-25-11	ALL
	12		W2078	0502	22		33-16-61	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W2078	0057	22		33-16-51	ALL
	18		W2078	3001R	24		33-11-21	ALL
	19		W2078	3001B	24		33-11-21	ALL
	20		W2078	3001Y	24		33-11-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41100

Page 21

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41174J		AP0003/ /		RCPT (continued)				ALL
	21	18	W2078	0172	18		SPARE	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W2078	0535	24		33-14-11	001-099
	30	UNUSED						115-199
	31	UNUSED						ALL
	32		W2078	0023	24		33-11-21	ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D41174P		217.6/198/34		PLUG				001-099
D41174P		AP0003/ /		PLUG				115-199
	1		W0003	0377	24		33-11-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41100

Page 22

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41174P		217.6/198/34		PLUG (continued)				001-099
D41174P		AP0003/ /		PLUG (continued)				115-199
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						001-099
	4		W0003	0309	20		34-22-83	115-199
	5		W0003	0376	24		33-11-11	ALL
	6		W0003	0331	22		33-16-51	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W0003	0338	22		33-16-61	ALL
	10	UNUSED						ALL
	11		W0003	0306	20		31-25-11	ALL
	12		W0003	0098	22		33-16-61	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W0003	0330	22		33-16-51	ALL
	18		W0003	3004R	24		33-11-21	ALL
	19		W0003	3004B	24		33-11-21	ALL
	20		W0003	3004Y	24		33-11-21	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W0003	0109	22		33-14-11	001-099
	30	UNUSED						115-199
	31	UNUSED						ALL
	32		W0003	0312	24		33-11-21	ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41100

Page 23

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41174P		217.6/198/34		PLUG (continued)				001-099
D41174P		AP0003/ /		PLUG (continued)				115-199
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D41177J		AD0440/ /		RCPT-COAX				ALL
	= A1		W2365	003CX			34-45-02	ALL
	= C1		W2365	003CO			34-45-02	ALL
D41177P		460/140/R20		PLUG-COAX				ALL
	= A1		W2367	003CX			34-45-02	ALL
	= C1		W2367	003CO			34-45-02	ALL
D41179J		AD0440/ /		RCPT-COAX				ALL
	= A1		W2365	004CX			34-45-02	ALL
	= C1		W2365	004CO			34-45-02	ALL
D41179P		460/140/R20		PLUG-COAX				ALL
	= A1		W2367	004CX			34-45-02	ALL
	= C1		W2367	004CO			34-45-02	ALL
D41180J		839/ /		RECPT-				ALL
	1		W4218	0001	22		27-38-11	ALL
	2		W4218	2001R	22		27-38-11	ALL
	3		W4218	2001B	22		27-38-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41100

Page 24

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41180J		839/ /		RECPT- (continued)				ALL
	4		W4218	0007	22		27-23-11	ALL
	5		W4218	0008	22		27-23-11	ALL
	6		W4218	0042	22		27-23-21	ALL
	7		W4218	0041	22		27-23-21	ALL
	8		W4218	0006	20		33-45-11	ALL
	9	UNUSED						001-099
	9		W4218	0045	22		SPARE	115-199
	10		W4218	1025	22		27-38-11	ALL
	11		W4218	1025Z			27-38-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D41180P		839/ /		PLUG				ALL
	1		W4224	0001	22		27-38-11	ALL
	2		W4224	2001R	22		27-38-11	ALL
	3		W4224	2001B	22		27-38-11	ALL
	4		W4224	0007	22		27-23-11	ALL
	5		W4224	0008	22		27-23-11	ALL
	6		W4224	0042	22		27-23-21	ALL
	7		W4224	0041	22		27-23-21	ALL
	8		W4224	0006	20		33-45-11	ALL
	9		W4224	0045	20		SPARE	ALL
	10		W4224	1025	22		27-38-11	ALL
	11		W4224	1025Z			27-38-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D41181J		E002-01/ /		RCPT-COAX				001-099
D41181J		E2-1/ /		RCPT-COAX				115-199
	= A1		W1171	007CX			34-45-02	ALL
	= C1		W1171	007CO			34-45-02	ALL
D41181P		E2-1/ /		PLUG-COAX				ALL
	= A1		W2361	001CX			34-45-02	ALL
	= C1		W2361	001CO			34-45-02	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41100

Page 25

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41185J		E002-01/ /		RCPT-COAX				001-099
D41185J		E2-1/ /		RCPT-COAX				115-199
	= A1		W1171	008CX			34-45-02	ALL
	= C1		W1171	008CO			34-45-02	ALL
D41185P		E2-1/ /		PLUG-COAX				ALL
	= A1		W2361	002CX			34-45-02	ALL
	= C1		W2361	002CO			34-45-02	ALL
D41187J		E002-01/ /		RCPT-COAX				001-099
D41187J		E2-1/ /		RCPT-COAX				115-199
	= A1		W1171	009CX			34-45-02	ALL
	= C1		W1171	009CO			34-45-02	ALL
D41187P		E2-1/ /		PLUG-COAX				ALL
	= A1		W2361	003CX			34-45-02	ALL
	= C1		W2361	003CO			34-45-02	ALL
D41188J		600/210/R52		RCPT-				001-099
D41188J		600/202/R52		RCPT-				115-199
	1		W4162	0026	16		33-37-11	ALL
	2		W4162	0027	16		33-37-11	ALL
	3		W4162	0039	16		33-37-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W4162	0034	22		52-34-11	ALL
	7		W4162	0045	22		52-34-11	ALL
D41188P		600/202/R052		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
D41189J		E002-01/ /		RCPT-COAX				001-099
D41189J		E2-1/ /		RCPT-COAX				115-199
	= A1		W1171	010CX			34-45-02	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41100

Page 26

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41189J		E002-01/ /		RCPT-COAX (continued)				001-099
D41189J		E2-1/ /		RCPT-COAX (continued)				115-199
	= C1		W1171	010CO			34-45-02	ALL
D41189P		E2-1/ /		PLUG-COAX				ALL
	= A1		W2361	004CX			34-45-02	ALL
	= C1		W2361	004CO			34-45-02	ALL
D41191J		E002-01/ /		RCPT-COAX				001-099
D41191J		E2-1/ /		RCPT-COAX				115-199
	= A1		W1171	012CX			34-45-02	ALL
	= C1		W1171	012CO			34-45-02	ALL
D41191P		E002-01/ /		PLUG-COAX				ALL
	= A1		W2365	001CX			34-45-02	ALL
	= C1		W2365	001CO			34-45-02	ALL
D41192J		AW1333/ /		RCPT-				ALL
	1	UNUSED						001-099
	1		W3326	4501W	20		28-41-21	115-199
	2	UNUSED						001-099
	2		W3326	4501RY	20		28-41-21	115-199
	3	UNUSED						001-099
	3		W3326	4501RK	20		28-41-21	115-199
	4	UNUSED						001-099
	4		W3326	4501RG	20		28-41-21	115-199
	5	UNUSED						001-099
	5		W3326	4501RB	20		28-41-21	115-199
	6	UNUSED						001-099
	6		W3326	4501WK	20		28-41-21	115-199
	7	UNUSED						001-099
	7		W3326	4501RV	20		28-41-21	115-199
	8	UNUSED						001-099
	8		W3326	4501WN	20		28-41-21	115-199
	9	UNUSED						001-099
	9		W3326	4501WR	20		28-41-21	115-199
	10	UNUSED						001-099
	10		W3326	4501WY	20		28-41-21	115-199
	11	UNUSED						001-099
	11		W3326	4501WO	20		28-41-21	115-199
	12	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41100

Page 27

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41192J		AW1333/ /		RCPT- (continued)				ALL
	12		W3326	4501WG	20		28-41-21	115-199
	13	UNUSED						001-099
	13		W3326	4501WB	20		28-41-21	115-199
	14	UNUSED						001-099
	14		W3326	4501AA	20		SPARE	115-199
	15	UNUSED						001-099
	15		W3326	4501WV	20		SPARE	115-199
	16		W3326	4252R	20		27-51-61	ALL
	17		W3326	4252B	20		27-51-61	ALL
	18		W3326	4252Y	20		27-51-61	ALL
	19		W3326	4252G	20		27-51-61	ALL
	S/R		W3326	4252Z			27-51-61	ALL
	S/R		W3326	4501Z			28-41-21	115-199
D41192P		AW1333/ /		PLUG-				ALL
	1	UNUSED						001-099
	1		W3342	4501W	20		28-41-21	115-199
	2	UNUSED						001-099
	2		W3342	4501RY	20		28-41-21	115-199
	3	UNUSED						001-099
	3		W3342	4501RK	20		28-41-21	115-199
	4	UNUSED						001-099
	4		W3342	4501RG	20		28-41-21	115-199
	5	UNUSED						001-099
	5		W3342	4501RB	20		28-41-21	115-199
	6	UNUSED						001-099
	6		W3342	4501WK	20		28-41-21	115-199
	7	UNUSED						001-099
	7		W3342	4501RV	20		28-41-21	115-199
	8	UNUSED						001-099
	8		W3342	4501WN	20		28-41-21	115-199
	9	UNUSED						001-099
	9		W3342	4501WR	20		28-41-21	115-199
	10	UNUSED						001-099
	10		W3342	4501WY	20		28-41-21	115-199
	11	UNUSED						001-099
	11		W3342	4501WO	20		28-41-21	115-199
	12	UNUSED						001-099
	12		W3342	4501WG	20		28-41-21	115-199
	13	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41100

Page 28

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41192P		AW1333/ /		PLUG- (continued)				ALL
	13		W3342	4501WB	20		28-41-21	115-199
	14	UNUSED						001-099
	14		W3342	4501AA	20		SPARE	115-199
	15	UNUSED						001-099
	15		W3342	4501WV	20		SPARE	115-199
	16		W3342	4002R	20		27-51-61	ALL
	17		W3342	4002B	20		27-51-61	ALL
	18		W3342	4002Y	20		27-51-61	ALL
	19		W3342	4002G	20		27-51-61	ALL
	S/R		W3342	4501Z			28-41-21	115-199
D41193J		E002-01/ /		RCPT-COAX				001-099
D41193J		E2-1/ /		RCPT-COAX				115-199
	= A1		W1171	013CX			34-45-02	ALL
	= C1		W1171	013CO			34-45-02	ALL
D41193P		E002-01/ /		PLUG-COAX				ALL
	= A1		W2365	002CX			34-45-02	ALL
	= C1		W2365	002CO			34-45-02	ALL
D41195J		E002-01/ /		RCPT-COAX				001-099
D41195J		E2-1/ /		RCPT-COAX				115-199
	= A1		W1171	014CX			34-45-02	ALL
	= C1		W1171	014CO			34-45-02	ALL
D41195P		E002-01/ /		PLUG-COAX				ALL
	= A1		W2365	003CX			34-45-02	ALL
	= C1		W2365	003CO			34-45-02	ALL
D41196J		AW2333/ /		RCPT				115-199
	1		W3462	4501W	20		28-41-31	115-199
	2		W3462	4501RY	20		28-41-31	115-199
	3		W3462	4501RK	20		28-41-31	115-199
	4		W3462	4501RG	20		28-41-31	115-199
	5		W3462	4501RB	20		28-41-31	115-199
	6		W3462	4501WK	20		28-41-31	115-199
	7		W3462	4501RV	20		28-41-31	115-199
	8		W3462	4501WN	20		28-41-31	115-199
	9		W3462	4501WR	20		28-41-31	115-199
	10		W3462	4501WY	20		28-41-31	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41100

Page 29

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41196J		AW2333/ /		RCPT (continued)				115-199
	11		W3462	4501WO	20		28-41-31	115-199
	12		W3462	4501WG	20		28-41-31	115-199
	13		W3462	4501WB	20		28-41-31	115-199
	14		W3462	4501AA	20		SPARE	115-199
	15		W3462	4501WV	20		SPARE	115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	S/R		W3462	4501Z			28-41-31	115-199
D41196P		AW2333/ /		PLUG-				115-199
	1		W3424	4501W	20		28-41-31	115-199
	2		W3424	4501RY	20		28-41-31	115-199
	3		W3424	4501RK	20		28-41-31	115-199
	4		W3424	4501RG	20		28-41-31	115-199
	5		W3424	4501RB	20		28-41-31	115-199
	6		W3424	4501WK	20		28-41-31	115-199
	7		W3424	4501RV	20		28-41-31	115-199
	8		W3424	4501WN	20		28-41-31	115-199
	9		W3424	4501WR	20		28-41-31	115-199
	10		W3424	4501WY	20		28-41-31	115-199
	11		W3424	4501WO	20		28-41-31	115-199
	12		W3424	4501WG	20		28-41-31	115-199
	13		W3424	4501WB	20		28-41-31	115-199
	14		W3424	4501AA	20		SPARE	115-199
	15		W3424	4501WV	20		SPARE	115-199
	16		W3424	0003	20		SPARE	115-199
	17		W3424	0004	20		SPARE	115-199
	18		W3424	0010	20		SPARE	115-199
	19		W3424	0011	20		SPARE	115-199
	S/R		W3424	4501Z			28-41-31	115-199
D41197J		E002-01/ /		RCPT-COAX				001-099
D41197J		E2-1/ /		RCPT-COAX				115-199
	= A1		W1171	015CX			34-45-02	ALL
	= C1		W1171	015CO			34-45-02	ALL
D41197P		E002-01/ /		PLUG-COAX				ALL
	= A1		W2365	004CX			34-45-02	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41100

Page 30

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41197P		E002-01/ /		PLUG-COAX (continued)				ALL
	= C1		W2365	004CO			34-45-02	ALL
D41198J		880/ /		RCPT-				001-099
D41198J		880/ /		RCPT				115-199
	1	UNUSED						001-099
	1		W4218	4501W	20		28-41-31	115-199
	2	UNUSED						001-099
	2		W4218	4501RY	20		28-41-31	115-199
	3	UNUSED						001-099
	3		W4218	4501RK	20		28-41-31	115-199
	4	UNUSED						001-099
	4		W4218	4501RG	20		28-41-31	115-199
	5	UNUSED						001-099
	5		W4218	4501RB	20		28-41-31	115-199
	6	UNUSED						001-099
	6		W4218	4501WK	20		28-41-31	115-199
	7	UNUSED						001-099
	7		W4218	4501RV	20		28-41-31	115-199
	8	UNUSED						001-099
	8		W4218	4501WN	20		28-41-31	115-199
	9	UNUSED						001-099
	9		W4218	4501WR	20		28-41-31	115-199
	10	UNUSED						001-099
	10		W4218	4501WY	20		28-41-31	115-199
	11	UNUSED						001-099
	11		W4218	4501WO	20		28-41-31	115-199
	12	UNUSED						001-099
	12		W4218	4501WG	20		28-41-31	115-199
	13	UNUSED						001-099
	13		W4218	4501WB	20		28-41-31	115-199
	14	UNUSED						001-099
	14		W4218	4501AA	20		SPARE	115-199
	15	UNUSED						001-099
	15		W4218	4501WV	20		SPARE	115-199
	16		W4218	2002R	22		27-51-61	ALL
	17		W4218	2002B	22		27-51-61	ALL
	18		W4218	4001B	22		27-51-61	ALL
	19		W4218	4001R	22		27-51-61	ALL
	20		W4218	4001Y	22		27-51-61	ALL
	21		W4218	4001G	22		27-51-61	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41100

Page 31

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41198J		880/ /		RCPT- (continued)				001-099
D41198J		880/ /		RCPT (continued)				115-199
	22		W4218	0002	22		27-81-31	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	S/R		W4218	YAAD			27-51-61	001-099
	S/R		W4218	4501Z			28-41-31	115-199
	S/R		W4218	YAAD			28-41-31	115-199
D41198P		AD0880/ /		PLUG-				ALL
	1	UNUSED						001-099
	1		W3424	4501W	20		28-41-31	115-199
	2	UNUSED						001-099
	2		W3424	4501RY	20		28-41-31	115-199
	3	UNUSED						001-099
	3		W3424	4501RK	20		28-41-31	115-199
	4	UNUSED						001-099
	4		W3424	4501RG	20		28-41-31	115-199
	5	UNUSED						001-099
	5		W3424	4501RB	20		28-41-31	115-199
	6	UNUSED						001-099
	6		W3424	4501WK	20		28-41-31	115-199
	7	UNUSED						001-099
	7		W3424	4501RV	20		28-41-31	115-199
	8	UNUSED						001-099
	8		W3424	4501WN	20		28-41-31	115-199
	9	UNUSED						001-099
	9		W3424	4501WR	20		28-41-31	115-199
	10	UNUSED						001-099
	10		W3424	4501WY	20		28-41-31	115-199
	11	UNUSED						001-099
	11		W3424	4501WO	20		28-41-31	115-199
	12	UNUSED						001-099
	12		W3424	4501WG	20		28-41-31	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41100

Page 32

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41198P		AD0880/ /		PLUG- (continued)				ALL
	13	UNUSED						001-099
	13		W3424	4501WB	20		28-41-31	115-199
	14	UNUSED						001-099
	14		W3424	4501AA	20		SPARE	115-199
	15	UNUSED						001-099
	15		W3424	4501WV	20		SPARE	115-199
	16		W3424	2001R	20		27-51-61	ALL
	17		W3424	2001B	20		27-51-61	ALL
	18		W3424	4001B	20		27-51-61	ALL
	19		W3424	4001R	20		27-51-61	ALL
	20		W3424	4001Y	20		27-51-61	ALL
	21		W3424	4001G	20		27-51-61	ALL
	22		W3424	1004	20		27-81-31	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	S/R		W3424	1004Z			27-81-31	ALL
	S/R		W3424	YAAD			27-51-61	ALL
	S/R		W3424	4501Z			28-41-31	115-199
D41199J		E002-01/ /		RCPT-COAX				001-099
D41199J		E2-1/ /		RCPT-COAX				115-199
	= A1		W1171	006CX			34-45-02	ALL
	= C1		W1171	006CO			34-45-02	ALL
D41199P		E002-01/ /		PLUG-COAX				ALL
	= A1		W4607	001CX			34-45-02	ALL
	= C1		W4607	001CO			34-45-02	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41100

Page 33 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41200J		E002-02/ /		CONNECTOR (S/B: 757-34-0200)				002
	1		W1173	5177R	22		34-25-12	002
	2		W1173	5177B	22		34-25-12	002
	3		W1173	5177Z			34-25-12	002
	4		W1173	5173R	22		34-25-12	002
	5		W1173	5173B	22		34-25-12	002
	6		W1173	FRMB			34-25-12	002
	7		W1173	5174R	22		34-25-12	002
	8		W1173	5174B	22		34-25-12	002
	9		W1173	FRMC			34-25-12	002
	10		W1173	5175B	22		34-25-12	002
	11		W1173	5175R	22		34-25-12	002
	12		W1173	5175Z			34-25-12	002
	13	UNUSED						002
	14	UNUSED						002
	15	UNUSED						002
	16	UNUSED						002
	17	UNUSED						002
	18	UNUSED						002
	19	UNUSED						002
	20	UNUSED						002
	21	UNUSED						002
	22	UNUSED						002
	23	UNUSED						002
	24	UNUSED						002
	25	UNUSED						002
	26	UNUSED						002
	27	UNUSED						002
	28	UNUSED						002
	29	UNUSED						002
	30	UNUSED						002
	31	UNUSED						002
	32	UNUSED						002
	33	UNUSED						002
	34	UNUSED						002
	35	UNUSED						002
	36	UNUSED						002
	37	UNUSED						002
	38	UNUSED						002
	39	UNUSED						002
	40	UNUSED						002

HOOKUP LIST

D280N032

91-21-51

Section D41200

Page 1

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41200J		E002-02/ /		CONNECTOR (S/B: 757-34-0200) (continued)				002
	41	UNUSED						002
	42	UNUSED						002
	43	UNUSED						002
	44	UNUSED						002
	45	UNUSED						002
	46	UNUSED						002
	47	UNUSED						002
	48	UNUSED						002
	49	UNUSED						002
	50	UNUSED						002
	51	UNUSED						002
	52	UNUSED						002
	53	UNUSED						002
	54	UNUSED						002
	55	UNUSED						002
			W1173	0409	20		34-25-12	002
			W1173	0410	20		34-25-12	002
			W1173	5173Z			34-25-12	002
			W1173	5174Z			34-25-12	002
			W1173	FRMB			34-25-12	002
			W1173	FRMC			34-25-12	002
D41200P		E002-03/ /		PLUG-CONDUCTIVE (B/S 757-34-0200)				002
	1		W4481	5035R	22		34-25-12	002
	2		W4481	5035B	22		34-25-12	002
	3		W4481	5035Z			34-25-12	002
	4		W4481	5032R	22		34-25-12	002
	5		W4481	5032B	22		34-25-12	002
	6		W4481	5032Z			34-25-12	002
	7		W4481	5033R	22		34-25-12	002
	8		W4481	5033B	22		34-25-12	002
	9		W4481	5033Z			34-25-12	002
	10		W4481	5034B	22		34-25-12	002
	11		W4481	5034R	22		34-25-12	002
	12		W4481	5034Z			34-25-12	002
	13	UNUSED						002
	14	UNUSED						002
	15	UNUSED						002
	16	UNUSED						002
	17	UNUSED						002

HOOKUP LIST

D280N032

91-21-51

Section D41200

Page 2

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41200P		E002-03/ /		PLUG-CONDUCTIVE (B/S 757-34-0200) (continued)				002
	18	UNUSED						002
	19	UNUSED						002
	20	UNUSED						002
	21	UNUSED						002
	22	UNUSED						002
	23	UNUSED						002
	24	UNUSED						002
	25	UNUSED						002
	26	UNUSED						002
	27	UNUSED						002
	28	UNUSED						002
	29	UNUSED						002
	30	UNUSED						002
	31	UNUSED						002
	32	UNUSED						002
	33	UNUSED						002
	34	UNUSED						002
	35	UNUSED						002
	36	UNUSED						002
	37	UNUSED						002
	38	UNUSED						002
	39	UNUSED						002
	40	UNUSED						002
	41	UNUSED						002
	42	UNUSED						002
	43	UNUSED						002
	44	UNUSED						002
	45	UNUSED						002
	46	UNUSED						002
	47	UNUSED						002
	48	UNUSED						002
	49	UNUSED						002
	50	UNUSED						002
	51	UNUSED						002
	52	UNUSED						002
	53	UNUSED						002
	54	UNUSED						002
	55	UNUSED						002

HOOKUP LIST

D280N032

91-21-51

Section D41200

Page 3

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41203J		E003-02/ /		JACK-COAX				001-099
D41203J		E3-2/ /		JACK-COAX				115-199
	= A1		W1423	005CX			34-45-02	ALL
	= C1		W1423	005CO			34-45-02	ALL
D41203P		E003-02/ /		PLUG-COAX				ALL
	= A1		W4607	001CX			34-45-02	ALL
	= C1		W4607	001CO			34-45-02	ALL
D41208J		AC0880/ /		RCPT				ALL
	1		W4006	0042	20		36-11-11	ALL
	2		W4006	0043	20		36-11-11	ALL
	3		W4006	0044	20		36-11-11	ALL
	4		W4006	0045	20		36-11-12	ALL
	5		W4006	0064	24		36-11-12	ALL
	6		W4006	0046	20		36-11-12	ALL
	7		W4006	0047	20		36-11-12	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W4006	2038B	24		36-22-21	ALL
	13		W4006	2038R	24		36-22-21	ALL
	14	UNUSED						ALL
	S/R		W4006	YAAD			36-11-11	ALL
D41208P		AC0880/ /		PLUG				ALL
	1		W3328	0009	20		36-11-11	ALL
	2		W3328	0010	20		36-11-11	ALL
	3		W3328	0011	20		36-11-11	ALL
	4		W3328	0012	20		36-11-12	ALL
	5		W3328	0013	20		36-11-12	ALL
	6		W3328	0014	20		36-11-12	ALL
	7		W3328	0015	20		36-11-12	ALL
	8		W3328	0016	18		SPARE	ALL
	9		W3328	0017	18		SPARE	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W3328	2001B	20		36-22-21	ALL
	13		W3328	2001R	20		36-22-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41200

Page 4

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41208P		AC0880/ /		PLUG (continued)				ALL
	14 S/R	UNUSED	W3328	YAAB			36-11-11	ALL ALL
D41210J		880/190/R055		RCPT				001-099
D41210J		880/190/R55		RCPT				115-199
	1		W4106	0084	20		36-11-21	ALL
	2		W4106	0085	20		36-11-21	ALL
	3		W4106	0086	20		36-11-21	ALL
	4		W4106	0031	20		36-11-22	ALL
	5		W4106	0032	20		36-11-22	ALL
	6		W4106	2038B	24		36-22-21	ALL
	7		W4106	0034	24		36-11-22	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W4106	0122	22		36-11-22	ALL
	14		W4106	2038R	24		36-22-21	ALL
	S/R		W4106	YAAA			36-11-22	ALL
D41210P		AD0880/ /		PLUG				ALL
	1		W3428	0012	20		36-11-21	ALL
	2		W3428	0013	20		36-11-21	ALL
	3		W3428	0014	20		36-11-21	ALL
	4		W3428	0015	20		36-11-22	ALL
	5		W3428	0016	20		36-11-22	ALL
	6		W3428	2001B	20		36-22-21	ALL
	7		W3428	0018	20		36-11-22	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W3428	0017	20		36-11-22	ALL
	14		W3428	2001R	20		36-22-21	ALL
	S/R		W3428	YAAB			36-11-21	ALL
D41220J		E4-3/ /		RCPT				115-199
	1		W1163	2016R	24		23-51-15	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41200

Page 5

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41220J		E4-3/ /		RCPT (continued)				115-199
	2		W1163	2016B	24		23-51-15	115-199
	3		W1163	2513R	24		23-51-15	115-199
	4		W1163	2513B	24		23-51-15	115-199
	5		W1163	FRAV			23-51-15	115-199
			W1163	0063	20		23-51-15	115-199
			W1163	2513Z			23-51-15	115-199
			W1163	FRAV			23-51-15	115-199
D41220P		E4-3/ /		PLUG				115-199
	1		W2013	2001R	22		23-51-15	115-199
	2		W2013	2001B	22		23-51-15	115-199
	3		W2013	2501R	22		23-51-15	115-199
	4		W2013	2501B	22		23-51-15	115-199
	5		W2013	2501Z			23-51-15	115-199
D41225J		1650/194/R54		RCPT-ALT STAB TRIM				ALL
	1		W2815	2501R	20		27-41-31	ALL
	2		W2815	2501B	20		27-41-31	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	DED		W2815	2501Z			27-41-31	ALL
D41225P		1650/104/R54		PLUG-ALT STAB TRIM				ALL
	1		W2615	2502R	20		27-41-31	ALL
	2		W2615	2502B	20		27-41-31	ALL
	3		W2615	2503R	20		SPARE	ALL
	4		W2615	2503B	20		SPARE	ALL
	5	UNUSED						ALL
	DED		W2615	2502Z			27-41-31	ALL
	DED		W2615	2503Z			SPARE	ALL
D41227J		1650/192/R54		RCPT-ALT STAB TRIM				ALL
	1		W2813	2501R	20		27-41-31	ALL
	2		W2813	2501B	20		27-41-31	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	DED		W2813	2501Z			27-41-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41200

Page 6

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41227P		1640/104/R 54		PLUG-ALT STAB TRIM				001-099
D41227P		1640/104/R54		PLUG-ALT STAB TRIM				115-199
	1		W2613	2502R	20		27-41-31	ALL
	2		W2613	2502B	20		27-41-31	ALL
	3		W2613	2503R	20		SPARE	ALL
	4		W2613	2503B	20		SPARE	ALL
	5	UNUSED						ALL
	DED		W2613	2502Z			27-41-31	ALL
	DED		W2613	2503Z			SPARE	ALL
D41238J		E002-01/ /		RCPT-				002
	1	UNUSED						002
	2	UNUSED						002
	3	UNUSED						002
	4	UNUSED						002
	5	UNUSED						002
	6	UNUSED						002
	7	UNUSED						002
	8	UNUSED						002
	9	UNUSED						002
	10	UNUSED						002
	11	UNUSED						002
	12	UNUSED						002
	13		W1171	5248R	22		34-43-14	002
	14		W1171	5248B	22		34-43-14	002
	15		W1171	5248Z			34-43-14	002
	16		W1171	5246R	22		34-43-14	002
	17		W1171	5246B	22		34-43-14	002
	18		W1171	5246Z			34-43-14	002
	19		W1171	5276Z			34-43-15	002
	20		W1171	5276R	22		34-43-15	002
	21		W1171	5276B	22		34-43-15	002
	22		W1171	0813	22		34-43-15	002
	23		W1171	5234R	22		34-25-12	002
	24		W1171	5234B	22		34-25-12	002
	25		W1171	5234Z			34-25-12	002
	26		W1171	5235B	22		34-25-12	002
	27		W1171	5235R	22		34-25-12	002
	28		W1171	FRMJ			34-25-12	002
	29	UNUSED						002
	30	UNUSED						002

HOOKUP LIST

D280N032

91-21-51

Section D41200

Page 7

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41238J		E002-01/ /		RCPT- (continued)				002
	31	UNUSED						002
	32	UNUSED						002
	33	UNUSED						002
	34	UNUSED						002
	35	UNUSED						002
	36	UNUSED						002
	37	UNUSED						002
	38	UNUSED						002
	39	UNUSED						002
	40	UNUSED						002
	41	UNUSED						002
	42	UNUSED						002
	43	UNUSED						002
	44	UNUSED						002
	45	UNUSED						002
	46	UNUSED						002
	47	UNUSED						002
	48	UNUSED						002
	49	UNUSED						002
	50	UNUSED						002
	51	UNUSED						002
	52	UNUSED						002
	53	UNUSED						002
	54	UNUSED						002
	55		W1171	0468	22		34-43-14	002
			W1171	0552	20		34-25-12	002
			W1171	5235Z			34-25-12	002
			W1171	FRMJ			34-25-12	002
D41238P		E002-01/ /		PLUG-				002
	1	UNUSED						002
	2	UNUSED						002
	3	UNUSED						002
	4	UNUSED						002
	5	UNUSED						002
	6	UNUSED						002
	7	UNUSED						002
	8	UNUSED						002
	9	UNUSED						002
	10	UNUSED						002

HOOKUP LIST

D280N032

91-21-51

Section D41200

Page 8

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41238P		E002-01/ /		PLUG- (continued)				002
	11	UNUSED						002
	12	UNUSED						002
	13		W2309	5007R	22		34-43-14	002
	14		W2309	5007B	22		34-43-14	002
	15		W2309	5007Z			34-43-14	002
	16		W2309	5006R	22		34-43-14	002
	17		W2309	5006B	22		34-43-14	002
	18		W2309	5006Z			34-43-14	002
	19		W2309	5107Z			34-43-15	002
	20		W2309	5107R	22		34-43-15	002
	21		W2309	5107B	22		34-43-15	002
	22		W2309	0091	22		34-43-15	002
	23		W4479	5041R	22		34-25-12	002
	24		W4479	5041B	22		34-25-12	002
	25		W4479	5041Z			34-25-12	002
	26		W4479	5042B	22		34-25-12	002
	27		W4479	5042R	22		34-25-12	002
	28		W4479	5042Z			34-25-12	002
	29	UNUSED						002
	30	UNUSED						002
	31	UNUSED						002
	32	UNUSED						002
	33	UNUSED						002
	34	UNUSED						002
	35	UNUSED						002
	36	UNUSED						002
	37	UNUSED						002
	38	UNUSED						002
	39	UNUSED						002
	40	UNUSED						002
	41	UNUSED						002
	42	UNUSED						002
	43	UNUSED						002
	44	UNUSED						002
	45	UNUSED						002
	46	UNUSED						002
	47	UNUSED						002
	48	UNUSED						002
	49	UNUSED						002
	50	UNUSED						002

HOOKUP LIST

D280N032

91-21-51

Section D41200

Page 9

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41238P		E002-01/ /		PLUG- (continued)				002
	51	UNUSED						002
	52	UNUSED						002
	53	UNUSED						002
	54	UNUSED						002
	55		W2309	0070	22		34-43-14	002
D41248J		P36/ /		RCPT-				ALL
	1		W1260	6329	22		76-11-11	ALL
	2		W1260	6330	22		76-11-11	ALL
	3		W1260	6331	22		76-11-11	ALL
	4		W1260	6490	22		76-11-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D41248P		P036-00/ /		PLUG				ALL
	1		W4228	0228	22		76-11-11	ALL
	2		W4228	0226	22		76-11-11	ALL
	3		W4228	0214	22		76-11-11	ALL
	4		W4228	0224	22		76-11-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D41250J		1610/183/L053		RCPT				001-099
	1		W2028	0001	18		26-18-11	001-099
	2	UNUSED						001-099
	3		W2028	0003	18		26-18-11	001-099
	4	UNUSED						001-099
	5		W2028	0005	18		26-18-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41200

Page 10

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41250J		1610/183/L053		RCPT (continued)				001-099
	6		W2028	0006	18		26-18-11	001-099
	7		W2028	0007	18		26-18-11	001-099
	8		W2028	0008	18		26-18-11	001-099
	9		W2028	0009	18		26-22-21	001-099
	10		W2028	0010	18		26-22-21	001-099
	11		W2028	0011R	22		26-15-11	001-099
	12		W2028	0012R	22		26-15-11	001-099
	13		W2028	0017R	20		SPARE	001-002
	13	UNUSED						003-099
	14		W2028	0018R	20		SPARE	001-099
D41250P		1610/183/L053		PLUG				001-099
	1		W2626	0001	18		26-18-11	001-099
	2	UNUSED						001-099
	3		W2626	0003	18		26-18-11	001-099
	4	UNUSED						001-099
	5		W2626	0005	18		26-18-11	001-099
	6		W2626	0006	18		26-18-11	001-099
	7		W2626	0007	18		26-18-11	001-099
	8		W2626	0008	18		26-18-11	001-099
	9		W2626	0020	20		26-22-21	001-099
	10		W2626	0023	20		26-22-21	001-099
	11		W2626	0011R	22		26-15-11	001-099
	12		W2626	0009R	22		26-15-11	001-099
	13		W2626	0010R	22		26-15-11	001-099
	14		W2626	0014R	22		SPARE	001-099
D41254J		1590/201/L065		RCPT				001-099
	1		W2048	0001R	22		26-15-11	001-099
	2		W2048	0002R	22		26-15-11	001-099
	3		W2048	0003R	20		SPARE	001-002
	3	UNUSED						003-099
	4		W2048	0004R	20		SPARE	001-099
	5	UNUSED						001-099
D41254P		1590/201/R065		PLUG				001-099
	1		W2628	0001R	22		26-15-11	001-099
	2		W2628	0003R	22		26-15-11	001-099
	3		W2628	0002R	22		26-15-11	001-099
	4		W2628	0058R	20		SPARE	001-099

HOOKUP LIST
D280N032

91-21-51
Section D41200
Page 11
May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41254P		1590/201/R065		PLUG (continued)				001-099
	5	UNUSED						001-099
D41256J		615/203/R14		RECP				001-099
	1		W2358	0425	22		26-16-21	001-099
	2		W2358	0423	20		26-16-21	001-099
	3		W2358	0424	20		26-16-21	001-099
	4	UNUSED						001-099
	5	UNUSED						001-099
	6	UNUSED						001-099
	7	UNUSED						001-099
	8	UNUSED						001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
D41256P		615/203/R14		RECP				001-099
	1		W4312	0425	22		26-16-21	001-099
	2		W4312	0423	20		26-16-21	001-099
	3		W4312	0424	20		26-16-21	001-099
	4	UNUSED						001-099
	5	UNUSED						001-099
	6	UNUSED						001-099
	7	UNUSED						001-099
	8	UNUSED						001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
D41258J		P37/ /		RCPT-				ALL
	1		W1270	6427	22		76-11-12	ALL
	2		W1270	6429	22		76-11-12	ALL
	3		W1270	6430	22		76-11-12	ALL
	4		W1270	6563	22		76-11-12	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41200

Page 12

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41258J		P37/ /		RCPT- (continued)				ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D41258P		P037-00/ /		PLUG				ALL
	1		W4236	0252	22		76-11-12	ALL
	2		W4236	0251	22		76-11-12	ALL
	3		W4236	0248	22		76-11-12	ALL
	4		W4236	0249	22		76-11-12	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D41262J		1353/174/R52		RECP				001-099
	1		W2358	0417	22		26-16-21	001-099
	2		W2358	0429	20		26-16-21	001-099
	3		W2358	0430	20		26-16-21	001-099
	4	UNUSED						001-099
	5	UNUSED						001-099
	6	UNUSED						001-099
	7	UNUSED						001-099
	8	UNUSED						001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
D41262P		1353/174/R52		PLUG				001-099
	1		W2712	0417	22		26-16-21	001-099
	2		W2712	0429	20		26-16-21	001-099
	3		W2712	0430	20		26-16-21	001-099
	4	UNUSED						001-099
	5	UNUSED						001-099
	6	UNUSED						001-099
	7	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41200

Page 13

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41262P		1353/174/R52		PLUG (continued)				001-099
	8	UNUSED						001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
D41264J		635/293/R017		RECP				001-099
	1	UNUSED						001-099
	2	UNUSED						001-099
	3	UNUSED						001-099
	4		W2628	0015	22		26-16-11	001-099
	5		W2628	0018	22		26-16-11	001-099
	6	UNUSED						001-099
	7	UNUSED						001-099
	8	UNUSED						001-099
	9		W2628	0019	22		26-16-11	001-099
	10	UNUSED						001-099
	11		W2628	0017	22		26-16-11	001-099
	12		W2628	0016	22		26-16-11	001-099
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D41264P		635/293/R17		PLUG				001-099
	1	UNUSED						001-099
	2	UNUSED						001-099
	3	UNUSED						001-099
	4		W4310	0001	20		26-16-11	001-099
	5		W4310	0004	20		26-16-11	001-099
	6	UNUSED						001-099
	7	UNUSED						001-099
	8	UNUSED						001-099
	9		W4310	0005	20		26-16-11	001-099
	10	UNUSED						001-099
	11		W4310	0003	20		26-16-11	001-099
	12		W4310	0002	20		26-16-11	001-099
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41200

Page 14

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41266J		1352/195/R053		RECP				001-099
	1	UNUSED						001-099
	2	UNUSED						001-099
	3	UNUSED						001-099
	4		W2626	0033	22		26-16-11	001-099
	5		W2626	0036	22		26-16-11	001-099
	6	UNUSED						001-099
	7	UNUSED						001-099
	8	UNUSED						001-099
	9		W2626	0037	22		26-16-11	001-099
	10	UNUSED						001-099
	11		W2626	0035	22		26-16-11	001-099
	12		W2626	0034	22		26-16-11	001-099
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D41266P		1352/195/R053		PLUG				001-099
	1	UNUSED						001-099
	2	UNUSED						001-099
	3	UNUSED						001-099
	4		W2710	0001	20		26-16-11	001-099
	5		W2710	0004	20		26-16-11	001-099
	6	UNUSED						001-099
	7	UNUSED						001-099
	8	UNUSED						001-099
	9		W2710	0005	20		26-16-11	001-099
	10	UNUSED						001-099
	11		W2710	0003	20		26-16-11	001-099
	12		W2710	0002	20		26-16-11	001-099
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D41268J		E003-04/ /		RCPT.				001-099
	1	UNUSED						001-099
	2	UNUSED						001-099
	3		W1280	0270	24		28-41-21	001-099
	4		W1280	0271	24		28-41-21	001-099
	5		W1280	0272	24		28-41-21	001-099

HOOKUP LIST
D280N032

91-21-51
Section D41200
Page 15
May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41268J		E003-04/ /		RCPT. (continued)				001-099
	6		W1280	0273	24		28-41-21	001-099
	7		W1280	0274	24		28-41-21	001-099
	8		W1280	0275	24		28-41-21	001-099
	9		W1280	0276	24		28-41-21	001-099
	10		W1280	0277	24		28-41-21	001-099
	11		W1280	0278	24		28-41-21	001-099
	12		W1280	0279	24		28-41-21	001-099
	13		W1280	0317	24		28-41-21	001-099
	14		W1280	0318	24		28-41-21	001-099
	15	UNUSED						001-099
	16	UNUSED						001-099
	17		W1280	0269	24		28-41-21	001-099
	18	UNUSED						001-099
	19	UNUSED						001-099
	20	UNUSED						001-099
	21	UNUSED						001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
	25	UNUSED						001-099
	26	UNUSED						001-099
	27	UNUSED						001-099
	28	UNUSED						001-099
	29	UNUSED						001-099
	30	UNUSED						001-099
	31	UNUSED						001-099
D41268P		E3-4/ /		PLUG				001-099
	1	UNUSED						001-099
	2	UNUSED						001-099
	3		W4024	4501RY	20		28-41-21	001-099
	4		W4024	4501RK	20		28-41-21	001-099
	5		W4024	4501RG	20		28-41-21	001-099
	6		W4024	4501RB	20		28-41-21	001-099
	7		W4024	4501WK	20		28-41-21	001-099
	8		W4024	4501RV	20		28-41-21	001-099
	9		W4024	4501WN	20		28-41-21	001-099
	10		W4024	4501WR	20		28-41-21	001-099
	11		W4024	4501WY	20		28-41-21	001-099
	12		W4024	4501WO	20		28-41-21	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41200

Page 16

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41268P		E3-4/ /		PLUG (continued)				001-099
	13		W4024	4501WG	20		28-41-21	001-099
	14		W4024	4501WB	20		28-41-21	001-099
	15		W4024	4501AA	20		28-41-21	001-099
	16		W4024	4501WV	20		28-41-21	001-099
	17		W4024	4501W	20		28-41-21	001-099
	18	UNUSED						001-099
	19	UNUSED						001-099
	20	UNUSED						001-099
	21	UNUSED						001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
	25	UNUSED						001-099
	26	UNUSED						001-099
	27	UNUSED						001-099
	28	UNUSED						001-099
	29	UNUSED						001-099
	30	UNUSED						001-099
	31	UNUSED						001-099
	S/R		W4024	4501Z			28-41-21	001-099
D41270J		E003-04/ /		RCPT.				001-099
	1	UNUSED						001-099
	2	UNUSED						001-099
	3		W1280	0281	24		28-41-31	001-099
	4		W1280	0282	24		28-41-31	001-099
	5		W1280	0283	24		28-41-31	001-099
	6		W1280	0284	24		28-41-31	001-099
	7		W1280	0285	24		28-41-31	001-099
	8		W1280	0286	24		28-41-31	001-099
	9		W1280	0287	24		28-41-31	001-099
	10		W1280	0288	24		28-41-31	001-099
	11		W1280	0289	24		28-41-31	001-099
	12		W1280	0290	24		28-41-31	001-099
	13		W1280	0315	24		28-41-31	001-099
	14		W1280	0316	24		28-41-31	001-099
	15	UNUSED						001-099
	16	UNUSED						001-099
	17		W1280	0280	24		28-41-31	001-099
	18	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41200

Page 17

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41270J		E003-04/ /		RCPT. (continued)				001-099
	19	UNUSED						001-099
	20	UNUSED						001-099
	21	UNUSED						001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
	25	UNUSED						001-099
	26	UNUSED						001-099
	27	UNUSED						001-099
	28	UNUSED						001-099
	29	UNUSED						001-099
	30	UNUSED						001-099
	31	UNUSED						001-099
	32	UNUSED						001-099
	33	UNUSED						001-099
	34	UNUSED						001-099
	35	UNUSED						001-099
	36	UNUSED						001-099
	37	UNUSED						001-099
	38	UNUSED						001-099
	39	UNUSED						001-099
D41270P		E3-4/ /		PLUG				001-002
D41270P		E003-04/ /		PLUG				003-099
	1	UNUSED						001-099
	2	UNUSED						001-099
	3		W4026	4501RY	20		28-41-31	001-099
	4		W4026	4501RK	20		28-41-31	001-099
	5		W4026	4501RG	20		28-41-31	001-099
	6		W4026	4501RB	20		28-41-31	001-099
	7		W4026	4501WK	20		28-41-31	001-099
	8		W4026	4501RV	20		28-41-31	001-099
	9		W4026	4501WN	20		28-41-31	001-099
	10		W4026	4501WR	20		28-41-31	001-099
	11		W4026	4501WY	20		28-41-31	001-099
	12		W4026	4501WO	20		28-41-31	001-099
	13		W4026	4501WG	20		28-41-31	001-099
	14		W4026	4501WB	20		28-41-31	001-099
	15		W4026	4501AA	20		28-41-31	001-099
	16		W4026	4501WV	20		28-41-31	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41200

Page 18

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41270P		E3-4/ /		PLUG (continued)				001-002
D41270P		E003-04/ /		PLUG (continued)				003-099
	17		W4026	4501W	20		28-41-31	001-099
	18	UNUSED						001-099
	19	UNUSED						001-099
	20	UNUSED						001-099
	21	UNUSED						001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
	25	UNUSED						001-099
	26	UNUSED						001-099
	27	UNUSED						001-099
	28	UNUSED						001-099
	29	UNUSED						001-099
	30	UNUSED						001-099
	31	UNUSED						001-099
	32	UNUSED						001-099
	33	UNUSED						001-099
	34	UNUSED						001-099
	35	UNUSED						001-099
	36	UNUSED						001-099
	37	UNUSED						001-099
	38	UNUSED						001-099
	39	UNUSED						001-099
	S/R		W4026	4501Z			28-41-31	001-099
D41272J		E003-04/ /		RCPT.				001-099
D41272J		E3-4/ /		RCPT (MR69018-002)				115-199
	1		W1280	1008	22		28-41-21	ALL
	2		W1280	2057R	24		28-41-21	ALL
	3		W1280	2057B	24		28-41-21	ALL
	4		W1280	1008Z			28-41-21	ALL
	5	UNUSED						ALL
	6		W1280	0518	24		28-41-21	ALL
	7		W1280	0519	24		28-41-21	ALL
	8		W1280	0520	24		28-41-21	ALL
	9		W1280	0521	24		28-41-21	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41200

Page 19

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41272J		E003-04/ /		RCPT. (continued)				001-099
D41272J		E3-4/ /		RCPT (MR69018-002) (continued)				115-199
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D41272P		E3-4/ /		PLUG				ALL
	1		W4020	1001	20		28-41-21	ALL
	2		W4020	2001R	20		28-41-21	ALL
	3		W4020	2001B	20		28-41-21	ALL
	4		W4020	1001Z			28-41-21	ALL
	5	UNUSED						ALL
	6		W4020	0001	20		28-41-21	ALL
	7		W4020	0002	20		28-41-21	ALL
	8		W4020	0003	20		28-41-21	ALL
	9		W4020	0004	20		28-41-21	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D41276J		E003-04/ /		RCPT.				001-099
D41276J		E3-4/ /		RCPT (MR69018-002)				115-199
	1		W1280	1011	22		28-41-31	ALL
	2		W1280	2063R	24		28-41-31	ALL
	3		W1280	2063B	24		28-41-31	ALL
	4		W1280	1011Z			28-41-31	ALL
	5	UNUSED						ALL
	6		W1280	0536	24		28-41-31	ALL
	7		W1280	0537	24		28-41-31	ALL
	8		W1280	0538	24		28-41-31	ALL
	9		W1280	0539	24		28-41-31	ALL
	10	UNUSED						ALL
	11		W1280	1004	22		28-41-41	ALL
	12		W1280	2059R	24		28-41-41	ALL
	13		W1280	2059B	24		28-41-41	ALL
	14		W1280	1004Z			28-41-41	ALL
	15	UNUSED						ALL
	16		W1280	0580	24		28-41-41	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41200

Page 20

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41276J		E003-04/ /		RCPT. (continued)				001-099
D41276J		E3-4/ /		RCPT (MR69018-002) (continued)				115-199
	17		W1280	0581	24		28-41-41	ALL
	18		W1280	0582	24		28-41-41	ALL
	19		W1280	0583	24		28-41-41	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D41276P		E003-04/ /		PLUG				ALL
	1		W4022	1001	20		28-41-31	ALL
	2		W4022	2001R	20		28-41-31	ALL
	3		W4022	2001B	20		28-41-31	ALL
	4		W4022	1001Z			28-41-31	ALL
	5	UNUSED						ALL
	6		W4022	0001	20		28-41-31	ALL
	7		W4022	0002	20		28-41-31	ALL
	8		W4022	0003	20		28-41-31	ALL
	9		W4022	0004	20		28-41-31	ALL
	10	UNUSED						ALL
	11		W4022	1002	20		28-41-41	ALL
	12		W4022	2002R	20		28-41-41	ALL
	13		W4022	2002B	20		28-41-41	ALL
	14		W4022	1002Z			28-41-41	ALL
	15	UNUSED						ALL
	16		W4022	0005	20		28-41-41	ALL
	17		W4022	0006	20		28-41-41	ALL
	18		W4022	0007	20		28-41-41	ALL
	19		W4022	0008	20		28-41-41	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D41280J		260/263/L023		RCPT				001-099
	1		W0200	0001	22		33-14-11	001-099
	2		W0200	0002	22		33-14-11	001-099
	3		W0200	C-B			33-11-21	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41200

Page 21

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41280J		260/263/L023		RCPT (continued)				001-099
	4		W0200	C-A			33-11-21	001-099
	5		W0200	0003	22		33-11-31	001-099
	6		W0200	0004	22		33-11-31	001-099
	7		W0200	0005	22		33-11-31	001-099
	8		W0200	0006	22		33-11-31	001-099
	9		W0200	0009	22		33-51-12	001-099
	10		W0200	0008	22		33-51-12	001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
D41280P		260/263/L023		PLUG				001-099
	1		W2078	0537	24		33-14-11	001-099
	2		W2078	0538	22		33-14-11	001-099
	3		W2078	0541	22		33-11-21	001-099
	4		W2078	0539	24		33-11-21	001-099
	5		W2078	0545	24		33-11-31	001-099
	6		W2078	0546	22		33-11-31	001-099
	7		W2078	0547	22		33-11-31	001-099
	8		W2078	0548	24		33-11-31	001-099
	9		W2078	0551	20		33-51-12	001-099
	10		W2078	0549	22		33-51-12	001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
D41282J		263/264/R020		RCPT				001-099
	1		W0202	0001	22		33-14-11	001-099
	2		W0202	0002	22		33-14-11	001-099
	3		W0202	B-A			33-11-21	001-099
	4		W0202	B-B			33-11-21	001-099
	5		W0202	0003	22		33-11-31	001-099
	6		W0202	0004	22		33-11-31	001-099
	7	UNUSED						001-099
	8	UNUSED						001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
D41282P		263/264/R020		PLUG				001-099
	1		W2078	0535	24		33-14-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41200

Page 22

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41282P		263/264/R020		PLUG (continued)				001-099
	2		W2078	0536	22		33-14-11	001-099
	3		W2078	0540	24		33-11-21	001-099
	4		W2078	0542	22		33-11-21	001-099
	5		W2078	0543	24		33-11-31	001-099
	6		W2078	0544	22		33-11-31	001-099
	7	UNUSED						001-099
	8	UNUSED						001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
D41284J		645/280/L60		RCPT-				001-099
	1	VS	W3702	0904	20		33-24-12	001-099
D41286P		645/280/L60		PLUG-				001-099
	1	VG	W3702	0905	16		33-24-12	001-099
	=1	UNUSED						001-099
D41288J		645/280/L60		RCPT-				001-099
	1	VY	W3702	0903	16		33-24-12	001-099
D41292J		745/270/L50		RCPT-				001-099
	1	VS	W3702	0907	20		33-24-12	001-099
D41292P		745/270/L050		PLUG-				001-099
	1	VR	W3592	0001	20		33-24-12	001-099
D41294J		745/270/L050		RCPT-				001-099
	1	VY	W3592	0002	16		33-24-12	001-099
D41294P		745/270/L50		PLUG-				001-099
	1	VG	W3702	0909	16		33-24-12	001-099
	=1	UNUSED						001-099
D41296J		745/270/L50		RCPT-				001-099
	1	VY	W3702	0906	16		33-24-12	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41200

Page 23

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41296P		745/270/L050		PLUG-				001-099
	1	VG	W3592	0003	20		33-24-12	001-099
	=1	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41200

Page 24 End

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41301J		E003-01/ /		RCPT				ALL
	1	UNUSED						ALL
	2		W1265	0177	22		27-32-11	001-099
	2		W1265	0177	24		27-32-11	115-199
	3	UNUSED						001-099
	3		W1265	0081	22		31-31-31	115-199
	4		W1265	0175	24		31-51-42	ALL
	5		W1265	5001R	24		22-22-11	ALL
	6		W1265	5001B	24		22-22-11	ALL
	7		W1265	5001Z			22-22-11	ALL
	8		W1265	0059	22		22-22-11	ALL
	9		W1265	0060	22		22-22-11	ALL
	10		W1265	0055	22		27-61-18	ALL
	11		W1265	0058	22		27-61-18	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W1265	5004R	24		22-24-11	ALL
	17		W1265	5004B	24		22-24-11	ALL
	18		W1265	5004Z			22-24-11	ALL
	19		W1265	5008R	24		22-21-11	ALL
	20		W1265	5008B	24		22-21-11	ALL
	21		W1265	5008Z			22-21-11	ALL
	22		W1265	0091	22		22-21-11	ALL
	23		W1265	0011	22		27-09-13	ALL
	24		W1265	0012	22		27-09-13	ALL
	25		W1265	0002	22		27-09-12	ALL
	26	UNUSED						001-009
	26		W1265	2026R	22		31-31-51	010-099
	26		W1265	2026R	24		31-31-32	115-199
	27	UNUSED						001-009
	27		W1265	2026B	22		31-31-51	010-099
	27		W1265	2026B	24		31-31-32	115-199
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 1

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41301J		E003-01/ /		RCPT (continued)				ALL
	35	UNUSED						ALL
	36		W1265	0069	22		22-24-11	ALL
	37		W1265	0180	24		31-31-62	001-099
	37		W1265	0180	24		31-31-32	115-199
	38		W1265	0181	24		31-31-62	001-099
	38		W1265	0181	24		31-31-32	115-199
	39		W1265	0182	24		31-31-62	001-099
	39		W1265	0182	24		31-31-32	115-199
	40		W1265	0183	24		31-31-62	001-099
	40		W1265	0183	24		31-31-32	115-199
	41		W1265	0176	22		27-32-11	001-099
	41		W1265	0176	24		27-32-11	115-199
	42		W1265	0171	22		27-41-11	ALL
	43		W1265	2025R	22		22-24-11	ALL
	44		W1265	2025B	22		22-24-11	ALL
	45		W1265	0900	22		31-51-43	ALL
	46		W1265	0901	22		31-51-43	ALL
	47		W1265	0078	22		31-31-62	001-099
	47	UNUSED						115-199
	48		W1265	0080	22		31-31-62	001-099
	48	UNUSED						115-199
	49		W1265	0079	22		31-31-62	001-099
	49	UNUSED						115-199
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D41301P		E003-01/ /		PLUG-				001-099
D41301P		E3-1/ /		PLUG-				115-199
	1		W4471	0018	24		SPARE	ALL
	2		W4471	0019	22		27-32-11	001-099
	2		W4471	0019	24		27-32-11	115-199
	3	UNUSED						001-099
	3		W4471	0347	22		31-31-31	115-199
	4		W4471	0027	24		31-51-42	ALL
	5		W4471	5019R	24		22-22-11	ALL
	6		W4471	5019B	24		22-22-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 2

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41301P		E003-01/ /		PLUG- (continued)				001-099
D41301P		E3-1/ /		PLUG- (continued)				115-199
	7		W4471	5019Z			22-22-11	ALL
	8		W4471	0045	22		22-22-11	ALL
	9		W4471	0046	22		22-22-11	ALL
	10		W4471	2006R	22		22-12-11	ALL
	11		W4471	2006B	22		22-12-11	ALL
	12		W4471	0285	22		SPARE	001-099
	12	UNUSED						115-199
	13	UNUSED						ALL
	14		W4471	2007R	22		SPARE	ALL
	15		W4471	2007B	22		SPARE	ALL
	16		W4471	5021R	24		22-24-11	ALL
	17		W4471	5021B	24		22-24-11	ALL
	18		W4471	5021Z			22-24-11	ALL
	19		W4471	5031R	24		22-21-11	ALL
	20		W4471	5031B	24		22-21-11	ALL
	21		W4471	5031Z			22-21-11	ALL
	22		W4471	0074	22		22-21-11	ALL
	23		W4471	0076	22		27-09-13	ALL
	24		W4471	0075	22		27-09-13	ALL
	25		W4471	0077	22		27-09-12	ALL
	26		W4471	2003R	24		SPARE	001-009
	26		W4471	2003R	24		31-31-51	010-099
	26		W4471	2003R	24		31-31-32	115-199
	27		W4471	2003B	24		SPARE	001-009
	27		W4471	2003B	24		31-31-51	010-099
	27		W4471	2003B	24		31-31-32	115-199
	28	UNUSED						ALL
	29		W4471	0143	22		SPARE	ALL
	30	UNUSED						ALL
	31		W4471	5047R	24		SPARE	ALL
	32		W4471	5047B	24		SPARE	ALL
	33		W4471	5047Z			SPARE	ALL
	34		W4471	0151	22		SPARE	ALL
	35	UNUSED						ALL
	36		W4471	0186	22		22-24-11	ALL
	37		W4471	0195	24		31-31-62	001-099
	37		W4471	0195	24		31-31-32	115-199
	38		W4471	0196	24		31-31-62	001-099
	38		W4471	0196	24		31-31-32	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 3

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41301P		E003-01/ /		PLUG- (continued)				001-099
D41301P		E3-1/ /		PLUG- (continued)				115-199
	39		W4471	0197	24		31-31-62	001-099
	39		W4471	0197	24		31-31-32	115-199
	40		W4471	0198	24		31-31-62	001-099
	40		W4471	0198	24		31-31-32	115-199
	41		W4471	0200	24		31-31-62	001-099
	41		W4471	0200	24		31-31-32	115-199
	42		W4471	0203	22		27-41-11	ALL
	43		W4471	2010R	22		22-24-11	ALL
	44		W4471	2010B	22		22-24-11	ALL
	45		W4471	2017R	22		31-51-43	ALL
	46		W4471	2017B	22		31-51-43	ALL
	47		W4471	0348	22		31-31-62	001-099
	47	UNUSED						115-199
	48		W4471	0349	22		31-31-62	001-099
	48	UNUSED						115-199
	49		W4471	0350	22		31-31-62	001-099
	49	UNUSED						115-199
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D41302J		P37/ /		RCPT				ALL
	1		W1270	0054	20		33-44-11	ALL
	2	UNUSED						ALL
	3		W1270	0039	22		33-26-11	ALL
	4		W1272	0228	22		33-26-11	001-099
	4		W1272	0228	20		33-26-11	115-199
	5	16	W1270	0042	16		33-26-11	001-099
	5		W1270	0042	22		33-26-11	115-199
	6		W1270	0045	22		33-26-31	ALL
	7	16	W1270	0043	16		33-26-21	001-099
	7		W1270	0043	22		33-26-21	115-199
	8		W1270	0063	24		33-51-11	001-099
	8	18	W1270	0063	18		33-51-11	115-199
	9		W1270	0062	24		33-51-11	001-099
	9	18	W1270	0062	18		33-51-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 4

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41302J		P37/ /		RCPT (continued)				ALL
	10		W1270	0064	22		33-51-11	ALL
	11		W1270	0061	24		33-51-11	001-099
	11	18	W1270	0061	18		33-51-11	115-199
	12		W1270	0065	22		33-51-11	ALL
	13		W1270	0060	24		33-51-11	001-099
	13	18	W1270	0060	18		33-51-11	115-199
	14		W1270	0028	20		33-24-11	ALL
	15	UNUSED						001-099
	15	18	W1270	0368	18		33-24-11	115-199
	16		W1272	0308	22		38-32-21	001-099
	16		W1272	0308	20		38-32-21	115-199
	17		W1270	0081	22		38-14-11	ALL
	18		W1270	0076	22		38-14-11	001-099
	18		W1270	0077	22		38-14-11	115-199
	19		W1270	0092	24		38-32-21	001-099
	19		W1270	0092	20		38-32-21	115-199
	20	UNUSED						ALL
	21		W1272	0248	20		38-13-11	001-099
	21		W1272	0248	18		38-13-11	115-199
	22	UNUSED						ALL
	23		W1272	0247	20		38-13-11	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
D41302P		P37/ /		PLUG-				ALL
	1	18	W3672	0001	18		33-44-11	ALL

HOOKUP LIST
D280N032

91-21-51
Section D41300
Page 5
Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41302P		P37/ /		PLUG- (continued)				ALL
	2	UNUSED						ALL
	3		W3672	0028	22		33-26-11	ALL
	4		W3672	0029	22		33-26-11	ALL
	5	16	W3672	0027	16		33-26-11	001-099
	5		W3672	0027	22		33-26-11	115-199
	6		W3672	0032	22		33-26-31	ALL
	7	16	W3672	0071	16		33-26-21	001-099
	7		W3672	0071	22		33-26-21	115-199
	8		W3672	0089	24		33-51-12	ALL
	9		W3672	0082	24		33-51-13	001-099
	9		W3672	0082	22		33-51-13	115-199
	10		W3672	0084	22		33-51-12	ALL
	11		W3672	0083	24		33-51-14	ALL
	12		W3672	0088	22		33-51-12	ALL
	13		W3672	0085	24		33-51-15	ALL
	14		W3672	0030	20		33-24-11	001-099
	14	18	W3672	0030	18		33-24-11	115-199
	15	UNUSED						001-099
	15	18	W3672	0031	18		33-24-11	115-199
	16		W3672	0025	22		38-32-21	001-099
	16		W3672	0025	20		38-32-21	115-199
	17		W3672	0004	22		38-14-11	ALL
	18		W3672	0005	22		38-14-11	ALL
	19		W3672	0026	24		38-32-21	001-099
	19		W3672	0026	20		38-32-21	115-199
	20	UNUSED						001-099
	20		W3672	0078	20		33-22-13	115-199
	21		W3672	0019	20		38-13-11	001-099
	21		W3672	0019	18		38-13-11	115-199
	22	UNUSED						ALL
	23		W3672	0020	20		38-13-11	001-099
	23		W3672	0020	18		38-13-11	115-199
	24		W3672	0117	20		SPARE	ALL
	25		W3672	0118	20		SPARE	ALL
	26		W3672	0119	20		SPARE	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W3672	0114	20		SPARE	ALL
	30		W3672	0115	20		SPARE	ALL
	31		W3672	0116	20		SPARE	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 6

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41302P		P37/ /		PLUG- (continued)				ALL
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
D41303J		E003-02/ /		RCPT-				001-099
D41303J		E3-2/ /		RCPT-				115-199
	1		W1423	5002R	24		34-53-21	ALL
	2		W1423	5002B	24		34-53-21	ALL
	3		W1423	FRAB			34-53-21	ALL
	4		W1423	0072	22		22-14-31	001-099
	4		W1423	1001	22		22-14-31	115-199
	5		W1423	0074	22		22-41-11	ALL
	6		W1423	0075	22		22-41-11	ALL
	7		W1423	0070	22		22-41-11	ALL
	8		W1423	5014R	24		22-41-11	ALL
	9		W1423	5014B	24		22-41-11	ALL
	10		W1423	FRAM			22-41-11	ALL
	11		W1423	5011R	24		22-41-11	ALL
	12		W1423	5011B	24		22-41-11	ALL
	13		W1423	FRAJ			22-41-11	ALL
	14		W1423	0071	22		22-41-11	ALL
	15	UNUSED						ALL
	16		W1423	FRAN			22-41-11	ALL
	17		W1423	5015R	24		22-41-11	ALL
	18		W1423	5015B	24		22-41-11	ALL
	19		W1423	5017R	24		22-41-12	ALL
	20		W1423	5017B	24		22-41-12	ALL
	21		W1423	FRAQ			22-41-12	ALL
	22		W1423	5018R	24		22-41-12	ALL
	23		W1423	5018B	24		22-41-12	ALL
	24		W1423	FRAR			22-41-12	ALL
	25		W1423	5022R	24		22-41-12	ALL
	26		W1423	5022B	24		22-41-12	ALL
	27		W1423	5022Z			22-41-12	ALL
	28		W1423	5023R	24		22-41-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 7

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41303J		E003-02/ /		RCPT- (continued)				001-099
D41303J		E3-2/ /		RCPT- (continued)				115-199
	29		W1423	5023B	24		22-41-12	ALL
	30		W1423	5023Z			22-41-12	ALL
	31		W1423	5019R	24		22-41-13	ALL
	32		W1423	5019B	24		22-41-13	ALL
	33		W1423	5019Z			22-41-13	ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47		W1423	0084	20		22-41-11	ALL
	48		W1423	2103R	24		23-51-12	001-099
	48	UNUSED						115-199
	49		W1423	2103B	24		23-51-12	001-099
	49	UNUSED						115-199
	50		W1423	0135	22		23-51-12	001-099
	50	UNUSED						115-199
	51		W1423	2104R	24		23-51-12	001-099
	51	UNUSED						115-199
	52		W1423	2104B	24		23-51-12	001-099
	52	UNUSED						115-199
	53		W1423	0136	22		23-51-12	001-099
	53	UNUSED						115-199
	54	UNUSED						ALL
	55	UNUSED						ALL
	DED		W1423	1001Z			22-14-31	115-199
			W1423	0032	20		34-53-21	ALL
			W1423	0061	20		22-41-11	ALL
			W1423	0064	20		22-41-11	ALL
			W1423	0065	20		22-41-11	ALL
			W1423	0067	20		22-41-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 8

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41303J		E003-02/ /		RCPT- (continued)				001-099
D41303J		E3-2/ /		RCPT- (continued)				115-199
			W1423	0068	20		22-41-12	ALL
			W1423	5002Z			34-53-21	ALL
			W1423	5011Z			22-41-11	ALL
			W1423	5014Z			22-41-11	ALL
			W1423	5015Z			22-41-11	ALL
			W1423	5017Z			22-41-12	ALL
			W1423	5018Z			22-41-12	ALL
			W1423	FRAB			34-53-21	ALL
			W1423	FRAJ			22-41-11	ALL
			W1423	FRAM			22-41-11	ALL
			W1423	FRAN			22-41-11	ALL
			W1423	FRAQ			22-41-12	ALL
			W1423	FRAR			22-41-12	ALL
D41303P		E003-02/ /		PLUG-				001-099
D41303P		E3-2/ /		PLUG-				115-199
	1		W4471	5011R	24		34-53-21	ALL
	2		W4471	5011B	24		34-53-21	ALL
	3		W4471	5011Z			34-53-21	ALL
	4		W4471	0044	22		22-14-31	ALL
	5		W4471	0068	22		22-41-11	ALL
	6		W4471	0069	22		22-41-11	ALL
	7		W4471	0070	22		22-41-11	ALL
	8		W4471	5023R	24		22-41-11	ALL
	9		W4471	5023B	24		22-41-11	ALL
	10		W4471	5023Z			22-41-11	ALL
	11		W4471	5024R	24		22-41-11	ALL
	12		W4471	5024B	24		22-41-11	ALL
	13		W4471	5024Z			22-41-11	ALL
	14		W4471	0071	22		22-41-11	ALL
	15	UNUSED						ALL
	16		W4471	5025Z			22-41-11	ALL
	17		W4471	5025R	24		22-41-11	ALL
	18		W4471	5025B	24		22-41-11	ALL
	19		W4471	5026R	24		22-41-12	ALL
	20		W4471	5026B	24		22-41-12	ALL
	21		W4471	5026Z			22-41-12	ALL
	22		W4471	5027R	24		22-41-12	ALL
	23		W4471	5027B	24		22-41-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 9

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41303P		E003-02/ /		PLUG- (continued)				001-099
D41303P		E3-2/ /		PLUG- (continued)				115-199
	24		W4471	5027Z			22-41-12	ALL
	25		W4471	5028R	24		22-41-12	ALL
	26		W4471	5028B	24		22-41-12	ALL
	27		W4471	5028Z			22-41-12	ALL
	28		W4471	5029R	24		22-41-12	ALL
	29		W4471	5029B	24		22-41-12	ALL
	30		W4471	5029Z			22-41-12	ALL
	31		W4471	5030R	24		22-41-13	ALL
	32		W4471	5030B	24		22-41-13	ALL
	33		W4471	5030Z			22-41-13	ALL
	34		W4471	0145	22		SPARE	ALL
	35		W4471	0279	20		SPARE	001-099
	35	UNUSED						115-199
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W4471	5045R	24		SPARE	ALL
	39		W4471	5045B	24		SPARE	ALL
	40		W4471	5045Z			SPARE	ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47		W4471	0181	20		22-41-11	ALL
	48		W4471	5087R	24		23-51-12	001-099
	48	UNUSED						115-199
	49		W4471	5087B	24		23-51-12	001-099
	49	UNUSED						115-199
	50		W4471	5087Z			23-51-12	001-099
	50	UNUSED						115-199
	51		W4471	5086R	24		23-51-12	001-099
	51	UNUSED						115-199
	52		W4471	5086B	24		23-51-12	001-099
	52	UNUSED						115-199
	53		W4471	5086Z			23-51-12	001-099
	53	UNUSED						115-199
	54	UNUSED						ALL
	55	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 10

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41307J		E3-3/ /		RCPT-				ALL
	1	UNUSED						001-009
	1		W1433	0539	22		31-31-61	010-099
	1		W1433	5041R	24		31-31-22	115-199
	2	UNUSED						001-009
	2		W1433	0538	22		31-31-61	010-099
	2		W1433	5041B	24		31-31-22	115-199
	3	UNUSED						001-099
	3		W1433	FRBE			31-31-22	115-199
	4	UNUSED						001-099
	4		W1433	FRBF			31-31-22	115-199
	5	UNUSED						001-099
	5		W1433	5042R	24		31-31-22	115-199
	6		W1433	5069R	24		31-31-43	001-099
	6		W1433	5042B	24		31-31-22	115-199
	7		W1433	5069B	24		31-31-43	001-099
	7		W1433	5050R	24		31-31-22	115-199
	8		W1433	0242	24		32-61-12	001-099
	8		W1433	5050B	24		31-31-22	115-199
	9		W1433	FRDO			31-31-43	001-099
	9		W1433	FRBN			31-31-22	115-199
	10		W1433	0237	24		32-61-12	001-099
	10		W1433	0205	22		31-31-32	115-199
	11		W1433	0243	22		32-61-12	ALL
	12		W1433	0239	22		32-61-12	001-099
	12		W1433	0201	22		31-31-32	115-199
	13	UNUSED						001-099
	13		W1433	0203	22		31-31-32	115-199
	14		W1433	0212	24		31-31-62	001-099
	14		W1433	0208	24		31-31-32	115-199
	15		W1433	0282	24		31-31-62	001-099
	15		W1433	0217	24		31-31-32	115-199
	16		W1433	0194	24		31-31-62	001-099
	16		W1433	0218	24		31-31-32	115-199
	17		W1433	0193	24		31-31-62	001-099
	17		W1433	0219	24		31-31-32	115-199
	18	UNUSED						001-099
	18		W1433	0209	22		31-31-32	115-199
	19		W1433	0211	24		31-31-62	001-099
	19		W1433	0185	24		31-31-32	115-199
	20	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 11

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41307J		E3-3/ /		RCPT- (continued)				ALL
	21		W1433	5057R	20		31-31-44	001-099
	21		W1433	5057R	24		31-31-23	115-199
	22		W1433	5057B	20		31-31-44	001-099
	22		W1433	5057B	24		31-31-23	115-199
	23		W1433	5057Z			31-31-44	001-099
	23		W1433	5057Z			31-31-23	115-199
	24	UNUSED						001-009, 115-199
	24		W1433	5127R	22		31-31-42	010-099
	25	UNUSED						001-009, 115-199
	25		W1433	5127B	22		31-31-42	010-099
	26	UNUSED						001-009, 115-199
	26		W1433	FRGR			31-31-42	010-099
	27	UNUSED						001-099
	27		W1433	0237	22		32-61-12	115-199
	28	UNUSED						001, 003-099, 115-199
	28		W1433	0568	22		34-22-18	002
	29	UNUSED						001-099
	29		W1433	0239	22		32-61-12	115-199
	30	UNUSED						001-099
	30		W1433	0242	24		32-61-12	115-199
	31		W1433	5071R	24		31-31-43	001-099
	31	UNUSED						115-199
	32		W1433	5071B	24		31-31-43	001-099
	32	UNUSED						115-199
	33		W1433	FRDL			31-31-43	001-099
	33	UNUSED						115-199
	34		W1433	0123	24		31-31-62	001-099
	34	UNUSED						115-199
	35		W1433	5047R	24		31-31-43	001-099
	35	UNUSED						115-199
	36		W1433	5047B	24		31-31-43	001-099
	36	UNUSED						115-199
	37		W1433	FRDK			31-31-43	001-099
	37	UNUSED						115-199
	38		W1433	5024R	24		31-31-43	001-099
	38	UNUSED						115-199
	39		W1433	5024B	24		31-31-43	001-099
	39	UNUSED						115-199
	40		W1433	FRDM			31-31-43	001-099
	40	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 12

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41307J		E3-3/ /		RCPT- (continued)				ALL
	41		W1433	5142R	24		34-45-01	ALL
	42		W1433	5142B	24		34-45-01	ALL
	43		W1433	FRCZ			34-45-01	ALL
	44	UNUSED						ALL
	45		W1433	5004R	24		34-45-02	ALL
	46		W1433	5004B	24		34-45-02	ALL
	47		W1433	FRBY			34-45-02	ALL
	48		W1433	0205	24		31-31-62	001-099
	48		W1433	0179	22		31-31-31	115-199
	49		W1433	5027R	24		31-31-43	001-099
	49	UNUSED						115-199
	50		W1433	5027B	24		31-31-43	001-099
	50	UNUSED						115-199
	51		W1433	FRDN			31-31-43	001-099
	51	UNUSED						115-199
	52		W1433	5005R	24		34-45-02	ALL
	53		W1433	5005B	24		34-45-02	ALL
	54		W1433	FRBZ			34-45-02	ALL
	55	UNUSED						ALL
			W1433	0414	20		31-31-43	001-099
			W1433	0415	20		31-31-43	001-099
			W1433	0416	20		31-31-43	001-099
			W1433	0417	20		31-31-43	001-099
			W1433	0418	20		31-31-43	001-099
			W1433	5024Z			31-31-43	001-099
			W1433	5027Z			31-31-43	001-099
			W1433	5047Z			31-31-43	001-099
			W1433	5069Z			31-31-43	001-099
			W1433	5071Z			31-31-43	001-099
			W1433	FRDK			31-31-43	001-099
			W1433	FRDL			31-31-43	001-099
			W1433	FRDM			31-31-43	001-099
			W1433	FRDN			31-31-43	001-099
			W1433	FRDO			31-31-43	001-099
			W1433	0339	22		34-45-02	ALL
			W1433	0340	22		34-45-02	ALL
			W1433	0341	22		34-45-01	ALL
			W1433	5004Z			34-45-02	ALL
			W1433	5005Z			34-45-02	ALL
			W1433	5142Z			34-45-01	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 13

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41307J		E3-3/ /		RCPT- (continued)				ALL
			W1433	FRBY			34-45-02	ALL
			W1433	FRBZ			34-45-02	ALL
			W1433	FRCZ			34-45-01	ALL
			W1433	0169	20		31-31-42	010-099
			W1433	5127Z			31-31-42	010-099
			W1433	FRGR			31-31-42	010-099
			W1433	0161	20		31-31-22	115-199
			W1433	0162	20		31-31-22	115-199
			W1433	0170	20		31-31-22	115-199
			W1433	5041Z			31-31-22	115-199
			W1433	5042Z			31-31-22	115-199
			W1433	5050Z			31-31-22	115-199
			W1433	FRBE			31-31-22	115-199
			W1433	FRBF			31-31-22	115-199
			W1433	FRBN			31-31-22	115-199
D41307P		E003-03/ /		PLUG-				001-099
D41307P		E3-3/ /		PLUG-				115-199
	1	UNUSED						001-009
	1		W4471	0418	22		31-31-61	010-099
	1		W4471	5051R	24		31-31-22	115-199
	2	UNUSED						001-009
	2		W4471	0417	22		31-31-61	010-099
	2		W4471	5051B	24		31-31-22	115-199
	3	UNUSED						001-099
	3		W4471	5051Z			31-31-22	115-199
	4	UNUSED						001-099
	4		W4471	5052Z			31-31-22	115-199
	5		W4471	0287	22		SPARE	001-099
	5		W4471	5052R	24		31-31-22	115-199
	6		W4471	5053R	24		31-31-43	001-099
	6		W4471	5052B	24		31-31-22	115-199
	7		W4471	5053B	24		31-31-43	001-099
	7		W4471	5053R	24		31-31-22	115-199
	8		W4471	0050	24		32-61-12	001-099
	8		W4471	5053B	24		31-31-22	115-199
	9		W4471	5053Z			31-31-43	001-099
	9		W4471	5053Z			31-31-22	115-199
	10		W4471	0217	24		32-61-12	001-099
	10		W4471	0191	22		31-31-32	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 14

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41307P		E003-03/ /		PLUG- (continued)				001-099
D41307P		E3-3/ /		PLUG- (continued)				115-199
	11		W4471	0251	22		32-61-12	001-099
	11		W4471	0251	24		32-61-12	115-199
	12		W4471	0219	22		32-61-12	001-099
	12		W4471	0193	22		31-31-32	115-199
	13	UNUSED						001-099
	13		W4471	0194	22		31-31-32	115-199
	14		W4471	0195	24		31-31-62	001-099
	14		W4471	0195	24		31-31-32	115-199
	15		W4471	0196	24		31-31-62	001-099
	15		W4471	0196	24		31-31-32	115-199
	16		W4471	0197	24		31-31-62	001-099
	16		W4471	0197	24		31-31-32	115-199
	17		W4471	0198	24		31-31-62	001-099
	17		W4471	0198	24		31-31-32	115-199
	18	UNUSED						001-099
	18		W4471	0199	22		31-31-32	115-199
	19		W4471	0200	24		31-31-62	001-099
	19		W4471	0200	24		31-31-32	115-199
	20	UNUSED						ALL
	21		W4471	5056R	20		31-31-44	001-099
	21		W4471	5056R	24		31-31-23	115-199
	22		W4471	5056B	20		31-31-44	001-099
	22		W4471	5056B	24		31-31-23	115-199
	23		W4471	5056Z			31-31-44	001-099
	23		W4471	5056Z			31-31-23	115-199
	24	UNUSED						001-009
	24		W4471	5144R	22		31-31-42	010-099
	24		W4471	2014R	24		SPARE	115-199
	25	UNUSED						001-009
	25		W4471	5144B	22		31-31-42	010-099
	25		W4471	2014B	24		SPARE	115-199
	26	UNUSED						001-009
	26		W4471	5144Z			31-31-42	010-099
	26		W4471	0216	22		SPARE	115-199
	27	UNUSED						001-099
	27		W4471	0217	22		32-61-12	115-199
	28	UNUSED						001, 003-099
	28		W4471	0473	22		34-22-18	002
	28		W4471	0218	22		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 15

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41307P		E003-03/ /		PLUG- (continued)				001-099
D41307P		E3-3/ /		PLUG- (continued)				115-199
	29	UNUSED						001-099
	29		W4471	0219	24		32-61-12	115-199
	30	UNUSED						001-099
	30		W4471	0050	24		32-61-12	115-199
	31		W4471	5305R	24		31-31-43	001-099
	31	UNUSED						115-199
	32		W4471	5305B	24		31-31-43	001-099
	32	UNUSED						115-199
	33		W4471	5305Z			31-31-43	001-099
	33	UNUSED						115-199
	34		W4471	0022	24		31-31-62	001-099
	34	UNUSED						115-199
	35		W4471	5044R	24		31-31-43	001-099
	35	UNUSED						115-199
	36		W4471	5044B	24		31-31-43	001-099
	36	UNUSED						115-199
	37		W4471	5044Z			31-31-43	001-099
	37	UNUSED						115-199
	38		W4471	5304R	24		31-31-43	001-099
	38	UNUSED						115-199
	39		W4471	5304B	24		31-31-43	001-099
	39	UNUSED						115-199
	40		W4471	5304Z			31-31-43	001-099
	40	UNUSED						115-199
	41		W4471	5126R	24		34-45-01	ALL
	42		W4471	5126B	24		34-45-01	ALL
	43		W4471	5126Z			34-45-01	ALL
	44	UNUSED						ALL
	45		W4471	5127R	24		34-45-02	ALL
	46		W4471	5127B	24		34-45-02	ALL
	47		W4471	5127Z			34-45-02	ALL
	48		W4471	0191	24		31-31-62	001-099
	48		W4471	0347	22		31-31-31	115-199
	49		W4471	5115R	24		31-31-43	001-099
	49	UNUSED						115-199
	50		W4471	5115B	24		31-31-43	001-099
	50	UNUSED						115-199
	51		W4471	5115Z			31-31-43	001-099
	51	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 16

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41307P		E003-03/ /		PLUG- (continued)				001-099
D41307P		E3-3/ /		PLUG- (continued)				115-199
	52		W4471	5128R	24		34-45-02	ALL
	53		W4471	5128B	24		34-45-02	ALL
	54		W4471	5128Z			34-45-02	ALL
	55	UNUSED						ALL
D41309J		E3-3/ /		RCPT-				ALL
	1		W1433	0383	24		31-31-62	001-099
	1	UNUSED						115-199
	2		W1433	0180	24		31-31-62	001-099
	2	UNUSED						115-199
	3		W1433	0221	24		31-31-62	001-099
	3	UNUSED						115-199
	4		W1433	5009R	24		34-22-19	ALL
	5		W1433	5009B	24		34-22-19	ALL
	6		W1433	FRAI			34-22-19	ALL
	7		W1433	5008R	24		34-61-12	ALL
	8		W1433	5008B	24		34-61-12	ALL
	9		W1433	FRAH			34-61-12	ALL
	10	UNUSED						001-099
	10		W1433	2003R	24		31-31-32	115-199
	11	UNUSED						001-099
	11		W1433	2003B	24		31-31-32	115-199
	12	UNUSED						001-099
	12		W1433	0138	24		31-31-32	115-199
	13	UNUSED						001-009
	13		W1433	2034R	22		31-31-51	010-099
	13		W1433	2004R	24		31-31-32	115-199
	14	UNUSED						001-009
	14		W1433	2034B	22		31-31-51	010-099
	14		W1433	2004B	24		31-31-32	115-199
	15	UNUSED						001-009
	15		W1433	2035R	22		31-31-51	010-099
	15		W1433	2005R	24		31-31-32	115-199
	16	UNUSED						001-009
	16		W1433	2035B	22		31-31-51	010-099
	16		W1433	2005B	24		31-31-32	115-199
	17		W1433	0046	24		34-61-23	ALL
	18		W1433	0143	24		31-31-61	001-099
	18		W1433	0143	24		31-31-32	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 17

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41309J		E3-3/ /		RCPT- (continued)				ALL
	19		W1433	0148	24		31-31-61	001-099
	19		W1433	0148	24		31-31-31	115-199
	20		W1433	0348	24		31-31-61	001-099
	20		W1433	0149	24		31-31-31	115-199
	21		W1433	0144	24		31-31-61	001-099
	21		W1433	0144	24		31-31-32	115-199
	22		W1433	5002R	24		34-53-11	ALL
	23		W1433	5002B	24		34-53-11	ALL
	24		W1433	FRAB			34-53-11	ALL
	25		W1433	5019R	24		31-31-41	001-099
	25		W1433	5019R	24		31-31-21	115-199
	26		W1433	5019B	24		31-31-41	001-099
	26		W1433	5019B	24		31-31-21	115-199
	27		W1433	FRAS			31-31-41	001-099
	27		W1433	FRAS			31-31-21	115-199
	28		W1433	5140R	24		31-31-43	001-099
	28		W1433	5018R	24		31-31-21	115-199
	29		W1433	5140B	24		31-31-43	001-099
	29		W1433	5018B	24		31-31-21	115-199
	30		W1433	FRDR			31-31-43	001-099
	30		W1433	FRAR			31-31-21	115-199
	31	UNUSED						001-099
	31		W1433	5022B	24		31-31-22	115-199
	32	UNUSED						001-099
	32		W1433	5022R	24		31-31-22	115-199
	33	UNUSED						001-099
	33		W1433	FRBU			31-31-22	115-199
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37		W1433	0047	24		23-51-12	ALL
	38		W1433	2001B	24		23-51-12	ALL
	39		W1433	2001R	24		23-51-12	ALL
	40		W1433	0049	22		23-51-12	ALL
	41		W1433	0051	24		34-55-11	ALL
	42		W1433	5007R	24		34-55-11	ALL
	43		W1433	5007B	24		34-55-11	ALL
	44		W1433	FRAG			34-55-11	ALL
	45		W1433	0159	22		34-25-11	001, 003-099, 115-199
	45	UNUSED						002

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 18

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41309J		E3-3/ /		RCPT- (continued)				ALL
	46		W1433	0060	20		22-41-11	ALL
	47	UNUSED						ALL
	48	UNUSED						001-099
	48		W1433	0030	24		34-53-11	115-199
	49		W1433	5017R	24		31-31-41	001-099
	49		W1433	5017R	24		31-31-21	115-199
	50		W1433	5017B	24		31-31-41	001-099
	50		W1433	5017B	24		31-31-21	115-199
	51		W1433	FRAQ			31-31-41	001-099
	51		W1433	FRAQ			31-31-21	115-199
	52	UNUSED						001-009, 115-199
	52		W1433	0577	22		31-31-61	010-099
	53		W1433	5053R	24		31-31-42	001-099
	53		W1433	5027R	24		31-31-22	115-199
	54		W1433	5053B	24		31-31-42	001-099
	54		W1433	5027B	24		31-31-22	115-199
	55		W1433	FRAU			31-31-42	001-099
	55		W1433	FRAU			31-31-22	115-199
			W1433	0097	20		31-31-41	001-099
			W1433	0099	20		31-31-41	001-099
			W1433	0177	20		31-31-42	001-099
			W1433	0434	20		31-31-43	001-099
			W1433	5017Z			31-31-41	001-099
			W1433	5019Z			31-31-41	001-099
			W1433	5053Z			31-31-42	001-099
			W1433	5140Z			31-31-43	001-099
			W1433	FRAQ			31-31-41	001-099
			W1433	FRAS			31-31-41	001-099
			W1433	FRAU			31-31-42	001-099
			W1433	FRDR			31-31-43	001-099
			W1433	0032	20		34-53-11	ALL
			W1433	0057	20		34-55-11	ALL
			W1433	0058	20		34-61-12	ALL
			W1433	0059	20		34-22-19	ALL
			W1433	5002Z			34-53-11	ALL
			W1433	5007Z			34-55-11	ALL
			W1433	5008Z			34-61-12	ALL
			W1433	5009Z			34-22-19	ALL
			W1433	FRAB			34-53-11	ALL
			W1433	FRAG			34-55-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 19

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41309J		E3-3/ /		RCPT- (continued)				ALL
			W1433	FRAH			34-61-12	ALL
			W1433	FRAI			34-22-19	ALL
			W1433	0097	20		31-31-21	115-199
			W1433	0098	20		31-31-21	115-199
			W1433	0099	20		31-31-21	115-199
			W1433	0127	20		31-31-22	115-199
			W1433	0196	20		31-31-22	115-199
			W1433	5017Z			31-31-21	115-199
			W1433	5018Z			31-31-21	115-199
			W1433	5019Z			31-31-21	115-199
			W1433	5022Z			31-31-22	115-199
			W1433	5027Z			31-31-22	115-199
			W1433	FRAQ			31-31-21	115-199
			W1433	FRAR			31-31-21	115-199
			W1433	FRAS			31-31-21	115-199
			W1433	FRAU			31-31-22	115-199
			W1433	FRBU			31-31-22	115-199
D41309P		E003-03/ /		PLUG-				001-099
D41309P		E3-3/ /		PLUG-				115-199
	1		W4471	0348	22		31-31-62	001-099
	1		W4471	5007R	24		SPARE	115-199
	2		W4471	0349	22		31-31-62	001-099
	2		W4471	5007B	24		SPARE	115-199
	3		W4471	0350	22		31-31-62	001-099
	3		W4471	5007Z			SPARE	115-199
	4		W4471	5008R	24		34-22-19	ALL
	5		W4471	5008B	24		34-22-19	ALL
	6		W4471	5008Z			34-22-19	ALL
	7		W4471	5003R	24		34-61-12	ALL
	8		W4471	5003B	24		34-61-12	ALL
	9		W4471	5003Z			34-61-12	ALL
	10		W4471	2001R	24		SPARE	001-099
	10		W4471	2001R	24		31-31-32	115-199
	11		W4471	2001B	24		SPARE	001-099
	11		W4471	2001B	24		31-31-32	115-199
	12		W4471	0013	24		SPARE	001-099
	12		W4471	0013	24		31-31-32	115-199
	13		W4471	2002R	24		SPARE	001-009
	13		W4471	2002R	24		31-31-51	010-099

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 20

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41309P		E003-03/ /		PLUG- (continued)				001-099
D41309P		E3-3/ /		PLUG- (continued)				115-199
	13		W4471	2002R	24		31-31-32	115-199
	14		W4471	2002B	24		SPARE	001-009
	14		W4471	2002B	24		31-31-51	010-099
	14		W4471	2002B	24		31-31-32	115-199
	15		W4471	2003R	24		SPARE	001-009
	15		W4471	2003R	24		31-31-51	010-099
	15		W4471	2003R	24		31-31-32	115-199
	16		W4471	2003B	24		SPARE	001-009
	16		W4471	2003B	24		31-31-51	010-099
	16		W4471	2003B	24		31-31-32	115-199
	17		W4471	0002	24		34-61-23	ALL
	18		W4471	0014	24		31-31-61	001-099
	18		W4471	0014	24		31-31-32	115-199
	19		W4471	0015	24		31-31-61	001-099
	19		W4471	0015	24		31-31-31	115-199
	20		W4471	0016	24		31-31-61	001-099
	20		W4471	0016	24		31-31-31	115-199
	21		W4471	0017	24		31-31-61	001-099
	21		W4471	0017	24		31-31-32	115-199
	22		W4471	5010R	24		34-53-11	ALL
	23		W4471	5010B	24		34-53-11	ALL
	24		W4471	5010Z			34-53-11	ALL
	25		W4471	5013R	24		31-31-41	001-099
	25		W4471	5013R	24		31-31-21	115-199
	26		W4471	5013B	24		31-31-41	001-099
	26		W4471	5013B	24		31-31-21	115-199
	27		W4471	5013Z			31-31-41	001-099
	27		W4471	5013Z			31-31-21	115-199
	28		W4471	5014R	24		31-31-43	001-099
	28		W4471	5014R	24		31-31-21	115-199
	29		W4471	5014B	24		31-31-43	001-099
	29		W4471	5014B	24		31-31-21	115-199
	30		W4471	5014Z			31-31-43	001-099
	30		W4471	5014Z			31-31-21	115-199
	31		W4471	5032B	24		SPARE	001-099
	31		W4471	5032B	24		31-31-22	115-199
	32		W4471	5032R	24		SPARE	001-099
	32		W4471	5032R	24		31-31-22	115-199
	33		W4471	5032Z			SPARE	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 21

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41309P		E003-03/ /		PLUG- (continued)				001-099
D41309P		E3-3/ /		PLUG- (continued)				115-199
	33		W4471	5032Z			31-31-22	115-199
	34		W4471	0279	20		SPARE	001-099
	34	UNUSED						115-199
	35	UNUSED						ALL
	36	UNUSED						ALL
	37		W4471	3501Y	24		23-51-12	ALL
	38		W4471	3501B	24		23-51-12	ALL
	39		W4471	3501R	24		23-51-12	ALL
	40		W4471	3501Z			23-51-12	ALL
	41		W4471	0095	24		34-55-11	ALL
	42		W4471	5038R	24		34-55-11	ALL
	43		W4471	5038B	24		34-55-11	ALL
	44		W4471	5038Z			34-55-11	ALL
	45		W4471	0179	22		34-25-11	001, 003-099, 115-199
	45		W4471	0179	22		SPARE	002
	46		W4471	0181	20		22-41-11	ALL
	47	UNUSED						001-099
	47		W4471	0178	24		SPARE	115-199
	48		W4471	0152	24		SPARE	001-099
	48		W4471	0030	24		34-53-11	115-199
	49		W4471	5016R	24		31-31-41	001-099
	49		W4471	5016R	24		31-31-21	115-199
	50		W4471	5016B	24		31-31-41	001-099
	50		W4471	5016B	24		31-31-21	115-199
	51		W4471	5016Z			31-31-41	001-099
	51		W4471	5016Z			31-31-21	115-199
	52		W4471	0166	24		SPARE	001-009, 115-199
	52		W4471	0166	24		31-31-61	010-099
	53		W4471	5050R	24		31-31-42	001-099
	53		W4471	5050R	24		31-31-22	115-199
	54		W4471	5050B	24		31-31-42	001-099
	54		W4471	5050B	24		31-31-22	115-199
	55		W4471	5050Z			31-31-42	001-099
	55		W4471	5050Z			31-31-22	115-199
CAP	Y		W4471	5049B	24		SPARE	001-099
CAP	Y		W4471	5049R	24		SPARE	001-099
DED			W4471	5049Z			SPARE	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 22

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41311J		E003-04/ /		RCPT				ALL
	1		W1280	0381	22		76-11-21	ALL
	2	UNUSED						ALL
	3		W1280	0086	24		32-61-12	001-099
	3	UNUSED						115-199
	4		W1280	0093	22		32-61-21	ALL
	5		W1280	0094	22		32-61-21	ALL
	6		W1280	0095	22		32-61-21	ALL
	7		W1280	0189	24		31-51-21	ALL
	8		W1280	0190	24		31-51-21	ALL
	9		W1280	0077	24		31-51-33	ALL
	10		W1280	0330	24		34-46-11	ALL
	11		W1280	0030	22		32-61-12	001-099
	11	UNUSED						115-199
	12		W1280	0499	22		34-45-01	ALL
	13		W1280	5002R	24		34-61-14	001-009, 115-199
	13		W1280	5011R	22		34-61-14	010-099
	14		W1280	5002B	24		34-61-14	001-009, 115-199
	14		W1280	5011B	22		34-61-14	010-099
	15		W1280	FRAB			34-61-14	001-009, 115-199
	15		W1280	5011Z			34-61-14	010-099
	16		W1280	0083	22		32-61-12	001-099
	16	UNUSED						115-199
	17		W1280	0082	24		32-61-12	001-099
	17		W1280	0082	24		32-61-11	115-199
	18		W1280	0379	22		32-61-12	001-099
	18	UNUSED						115-199
	19	UNUSED						ALL
	20	UNUSED						001-009, 115-199
	20		W1280	5014B	22		31-31-42	010-099
	21	UNUSED						001-009, 115-199
	21		W1280	5014R	22		31-31-42	010-099
	22	UNUSED						001-009, 115-199
	22		W1280	5014Z			31-31-42	010-099
	23	UNUSED						001-009, 115-199
	23		W1280	0646	22		31-31-61	010-099
	24	UNUSED						001-009, 115-199
	24		W1280	0647	22		31-31-61	010-099
	25	UNUSED						ALL
	26		W1280	0079	24		31-51-33	ALL
	27		W1280	5003R	20		31-31-44	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 23

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41311J		E003-04/ /		RCPT (continued)				ALL
	27		W1280	5003R	24		31-31-23	115-199
	28		W1280	5003B	20		31-31-44	001-099
	28		W1280	5003B	24		31-31-23	115-199
	29		W1280	5003Z			31-31-44	001-099
	29		W1280	5003Z			31-31-23	115-199
	30		W1280	0375	24		32-61-12	001-099
	30		W1280	0375	22		32-61-12	115-199
	31		W1280	0074	24		32-61-12	001-099
	31		W1280	0074	24		32-61-11	115-199
	32		W1280	0030	22		32-61-11	115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36		W1280	0083	22		32-61-12	115-199
	37		W1280	0086	24		32-61-12	115-199
	38		W1280	0379	22		32-61-12	115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
			W1280	0362	22		34-61-14	001-009, 115-199
			W1280	5002Z			34-61-14	001-009, 115-199
			W1280	FRAB			34-61-14	001-009, 115-199
D41311P		E003-04/ /		PLUG-				001-099
D41311P		E3-4/ /		PLUG-				115-199
	1		W4471	0087	22		76-11-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 24

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41311P		E003-04/ /		PLUG- (continued)				001-099
D41311P		E3-4/ /		PLUG- (continued)				115-199
	2		W4471	0049	22		SPARE	001-099
	2	UNUSED						115-199
	3		W4471	0050	24		32-61-12	001-099
	3	UNUSED						115-199
	4		W4471	0120	22		32-61-21	ALL
	5		W4471	0121	22		32-61-21	ALL
	6		W4471	0122	22		32-61-21	ALL
	7		W4471	0131	24		31-51-21	ALL
	8		W4471	0132	24		31-51-21	ALL
	9		W4471	0133	24		31-51-33	ALL
	10		W4471	0213	24		34-46-11	ALL
	11		W4471	0221	22		32-61-12	001-099
	11	UNUSED						115-199
	12		W4471	0328	22		34-45-01	ALL
	13		W4471	5005R	24		34-61-14	ALL
	14		W4471	5005B	24		34-61-14	ALL
	15		W4471	5005Z			34-61-14	ALL
	16		W4471	0219	22		32-61-12	001-099
	16	UNUSED						115-199
	17		W4471	0153	24		32-61-12	001-099
	17		W4471	0153	24		32-61-11	115-199
	18		W4471	0251	22		32-61-12	001-099
	18		W4471	0154	22		SPARE	115-199
	19		W4471	0155	24		SPARE	ALL
	20	UNUSED						001-009
	20		W4471	5144B	22		31-31-42	010-099
	20		W4471	0156	24		SPARE	115-199
	21	UNUSED						001-009
	21		W4471	5144R	22		31-31-42	010-099
	21		W4471	0157	24		SPARE	115-199
	22	UNUSED						001-009
	22		W4471	5144Z			31-31-42	010-099
	22		W4471	0158	24		SPARE	115-199
	23	UNUSED						001-009
	23		W4471	0417	22		31-31-61	010-099
	23		W4471	0172	22		SPARE	115-199
	24		W4471	0287	22		SPARE	001-009
	24		W4471	0418	22		31-31-61	010-099
	24		W4471	0173	22		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 25

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41311P		E003-04/ /		PLUG- (continued)				001-099
D41311P		E3-4/ /		PLUG- (continued)				115-199
	25		W4471	0174	22		SPARE	ALL
	26		W4471	0180	24		31-51-33	ALL
	27		W4471	5056R	20		31-31-44	001-099
	27		W4471	5056R	24		31-31-23	115-199
	28		W4471	5056B	20		31-31-44	001-099
	28		W4471	5056B	24		31-31-23	115-199
	29		W4471	5056Z			31-31-44	001-099
	29		W4471	5056Z			31-31-23	115-199
	30		W4471	0217	24		32-61-12	001-099
	30		W4471	0217	22		32-61-12	115-199
	31		W4471	0220	24		32-61-12	001-099
	31		W4471	0220	24		32-61-11	115-199
	32		W4471	0221	22		32-61-11	115-199
	33	UNUSED						115-199
	34		W4471	0216	22		SPARE	115-199
	35		W4471	0218	22		SPARE	115-199
	36		W4471	0219	24		32-61-12	115-199
	37		W4471	0050	24		32-61-12	115-199
	38		W4471	0251	24		32-61-12	115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
	CAP	Y	W4471	0287	22		SPARE	010-099

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 26

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41316J		P032-00/ /		RCPT				ALL
	1		W1138	0055	18		24-21-21	ALL
	2		W1138	0048	18		24-21-21	ALL
	3	UNUSED						ALL
	4		W1138	0020	18		24-22-22	ALL
	5	UNUSED						ALL
	6		W1138	0049	18		24-21-21	ALL
	7		W1138	0071	22		29-11-31	ALL
	8		W1138	0040	18		24-22-21	ALL
	9		W1138	0137	24		24-22-12	ALL
	10	UNUSED						ALL
	11		W1138	0142	24		24-22-12	ALL
	12		W1138	0139	20		24-22-12	ALL
	13		W1138	0140	24		24-22-12	ALL
	14		W1138	0072	22		29-11-31	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26		W1138	0037	24		24-27-21	ALL
	27	UNUSED						ALL
	28		W1138	0138	20		24-22-12	ALL
	29	UNUSED						ALL
	30		W1138	0141	24		24-22-12	ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
D41316P		P032-00/ /		PLUG-				ALL
	1		W4502	0034	18		24-21-21	ALL
	2		W4502	0035	18		24-21-21	ALL
	3	UNUSED						ALL
	4		W4502	0037	18		24-22-22	ALL
	5		W4502	0607	22		SPARE	ALL
	6		W4502	0036	18		24-21-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 27

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41316P		P032-00/ /		PLUG- (continued)				ALL
	7		W4502	0041	22		29-11-31	ALL
	8		W4502	0038	18		24-22-21	ALL
	9		W4502	0055	24		24-22-12	ALL
	10	UNUSED						ALL
	11		W4502	0057	24		24-22-12	ALL
	12		W4502	0058	20		24-22-12	ALL
	13		W4502	0061	24		24-22-12	ALL
	14		W4502	0040	22		29-11-31	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W4502	0092	22		SPARE	ALL
	21		W4502	0022	22		SPARE	ALL
	22	UNUSED						001-099
	22		W4502	0608	22		SPARE	115-199
	23	UNUSED						001-099
	23		W4502	0609	22		SPARE	115-199
	24	UNUSED						001-099
	24		W4502	0610	22		SPARE	115-199
	25	UNUSED						ALL
	26		W4502	0053	24		24-27-21	ALL
	27	UNUSED						ALL
	28		W4502	0054	20		24-22-12	ALL
	29	UNUSED						ALL
	30		W4502	0056	24		24-22-12	ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
D41317J		E4-2/ /		RCPT-				ALL
	1		W1275	5033R	24		31-41-12	ALL
	2		W1275	5033B	24		31-41-12	ALL
	3		W1275	FRDS			31-41-12	ALL
	4		W1275	5034R	24		31-41-12	ALL
	5		W1275	5034B	24		31-41-12	ALL
	6		W1275	FRDT			31-41-12	ALL
	7		W1275	6122	24		31-51-41	001, 003-099, 115-199
	7		W1275	6685	22		31-51-41	002
	8	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 28

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41317J		E4-2/ /		RCPT- (continued)				ALL
	9	UNUSED						ALL
	10		W1275	5049R	24		34-61-14	ALL
	11		W1275	5049B	24		34-61-14	ALL
	12		W1275	FRHS			34-61-14	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						001-099
	16		W1275	6603	24		34-53-11	115-199
	17		W1275	5535	24		24-28-11	ALL
	17		W1275	5536	24		24-28-11	ALL
	18		W1275	FREV			34-61-15	ALL
	19		W1275	5037R	24		34-61-15	001-099
	19		W1275	5133R	24		34-61-15	115-199
	20		W1275	5037B	24		34-61-15	001-099
	20		W1275	5133B	24		34-61-15	115-199
	21		W1275	0574	24		34-61-15	ALL
	21		W1275	0575	24		34-61-15	ALL
	22		W1275	0577	24		34-61-15	ALL
	22		W1275	0578	24		34-61-15	ALL
	23		W1275	6002	24		31-51-33	001-099
	23		W1275	6003	24		31-51-33	001-099
	23		W1275	6499	24		31-51-33	115-199
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W1275	5007R	24		22-32-12	ALL
	28		W1275	5007B	24		22-32-12	ALL
	29		W1275	FRCK			22-32-12	ALL
	30	UNUSED						ALL
	31		W1275	5004R	24		22-41-13	ALL
	32		W1275	5004B	24		22-41-13	ALL
	33		W1275	5004Z			22-41-13	ALL
	34		W1275	0212	24		30-33-11	ALL
	35	UNUSED						001-099
	35		W1275	5017B	24		31-31-22	115-199
	36	UNUSED						001-099
	36		W1275	5017R	24		31-31-22	115-199
	37	UNUSED						001-099
	37		W1275	5017Z			31-31-22	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 29

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41317J		E4-2/ /		RCPT- (continued)				ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44		W1275	6510	24		24-25-13	ALL
	44		W1275	6512	24		24-25-13	ALL
	45		W1275	6126	24		SPARE	001-099
	45		W1275	6127	24		SPARE	001-099
	45	UNUSED						115-199
	46		W1275	0378	24		34-21-11	ALL
	46		W1275	0379	24		34-21-11	ALL
	47		W1275	0381	24		34-21-11	ALL
	47		W1275	0382	24		34-21-11	ALL
	48		W1275	0384	24		34-21-11	ALL
	48		W1275	0385	24		34-21-11	ALL
	49		W1275	6157	24		27-58-11	001-099
	49		W1275	6157	22		27-58-11	115-199
	50		W1275	6158	24		27-58-11	001-099
	50		W1275	6158	22		27-58-11	115-199
	51		W1275	6159	24		27-58-11	001-099
	51		W1275	6159	22		27-58-11	115-199
	52		W1275	6160	24		27-58-11	001-099
	52		W1275	6160	22		27-58-11	115-199
	53		W1275	5662	24		24-25-13	ALL
	54		W1275	5542	24		24-25-13	ALL
	55		W1275	6509	24		24-25-13	ALL
	55		W1275	6511	24		24-25-13	ALL
			W1275	5037Z			34-61-15	001-099
			W1275	5007Z			22-32-12	ALL
			W1275	5033Z			31-41-12	ALL
			W1275	5034Z			31-41-12	ALL
			W1275	5049Z			34-61-14	ALL
			W1275	5801	20		31-41-12	ALL
			W1275	5802	20		31-41-12	ALL
			W1275	5810	20		22-32-12	ALL
			W1275	5813	20		34-61-15	ALL
			W1275	5814	20		34-61-14	ALL
			W1275	FRCK			22-32-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 30

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41317J		E4-2/ /		RCPT- (continued)				ALL
			W1275	FRDS			31-41-12	ALL
			W1275	FRDT			31-41-12	ALL
			W1275	FREV			34-61-15	ALL
			W1275	FRHS			34-61-14	ALL
			W1275	5133Z			34-61-15	115-199
D41317P		E004-02/ /		PLUG-				001-099
D41317P		E4-2/ /		PLUG-				115-199
	1		W4471	5001R	24		31-41-12	ALL
	2		W4471	5001B	24		31-41-12	ALL
	3		W4471	5001Z			31-41-12	ALL
	4		W4471	5002R	24		31-41-12	ALL
	5		W4471	5002B	24		31-41-12	ALL
	6		W4471	5002Z			31-41-12	ALL
	7		W4471	0024	24		31-51-41	ALL
	8		W4471	0136	22		SPARE	001-099
	8		W4471	0160	24		SPARE	115-199
	9	UNUSED						001-099
	9		W4471	0161	24		SPARE	115-199
	10		W4471	5004R	24		34-61-14	ALL
	11		W4471	5004B	24		34-61-14	ALL
	12		W4471	5004Z			34-61-14	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						001-099
	15		W4471	0029	24		SPARE	115-199
	16		W4471	0135	22		SPARE	001-099
	16		W4471	0030	24		34-53-11	115-199
	17		W4471	0031	24		24-28-11	ALL
	18		W4471	5006Z			34-61-15	ALL
	19		W4471	5006R	24		34-61-15	ALL
	20		W4471	5006B	24		34-61-15	ALL
	21		W4471	0003	24		34-61-15	ALL
	22		W4471	0004	24		34-61-15	ALL
	23		W4471	0032	24		31-51-33	ALL
	24		W4471	5042R	24		SPARE	001-099
	24		W4471	0036	24		SPARE	115-199
	25		W4471	5042B	24		SPARE	001-099
	25		W4471	0051	24		SPARE	115-199
	26		W4471	5042Z			SPARE	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 31

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41317P		E004-02/ /		PLUG- (continued)				001-099
D41317P		E4-2/ /		PLUG- (continued)				115-199
	26		W4471	0052	24		SPARE	115-199
	27		W4471	5022R	24		22-32-12	ALL
	28		W4471	5022B	24		22-32-12	ALL
	29		W4471	5022Z			22-32-12	ALL
	30		W4471	0073	22		SPARE	ALL
	31		W4471	5030R	24		22-41-13	ALL
	32		W4471	5030B	24		22-41-13	ALL
	33		W4471	5030Z			22-41-13	ALL
	34		W4471	0080	24		30-33-11	ALL
	35		W4471	5032B	24		SPARE	001-099
	35		W4471	5032B	24		31-31-22	115-199
	36		W4471	5032R	24		SPARE	001-099
	36		W4471	5032R	24		31-31-22	115-199
	37		W4471	5032Z			SPARE	001-099
	37		W4471	5032Z			31-31-22	115-199
	38		W4471	0083	24		SPARE	ALL
	39	UNUSED						ALL
	40	UNUSED						001-099
	40		W4471	0086	24		SPARE	115-199
	41	UNUSED						001-099
	41		W4471	5034R	24		SPARE	115-199
	42	UNUSED						001-099
	42		W4471	5034B	24		SPARE	115-199
	43	UNUSED						001-099
	43		W4471	5034Z			SPARE	115-199
	44		W4471	0144	24		24-25-13	ALL
	45		W4471	0093	24		SPARE	ALL
	46		W4471	0097	22		34-21-11	ALL
	47		W4471	0098	22		34-21-11	ALL
	48		W4471	0099	22		34-21-11	ALL
	49		W4471	0114	24		27-58-11	001-099
	49		W4471	0114	22		27-58-11	115-199
	50		W4471	0115	24		27-58-11	001-099
	50		W4471	0115	22		27-58-11	115-199
	51		W4471	0116	24		27-58-11	001-099
	51		W4471	0116	22		27-58-11	115-199
	52		W4471	0117	24		27-58-11	001-099
	52		W4471	0117	22		27-58-11	115-199
	53		W4471	0139	24		24-25-13	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 32

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41317P		E004-02/ /		PLUG- (continued)				001-099
D41317P		E4-2/ /		PLUG- (continued)				115-199
	54		W4471	0140	24		24-25-13	ALL
	55		W4471	0141	24		24-25-13	ALL
D41318J		P031-00/ /		RCPT				ALL
	1		W1136	0354	24		24-22-22	ALL
	2		W1136	0355	24		24-22-22	ALL
	3	UNUSED						ALL
	4		W1136	0356	20		24-22-22	ALL
	5		W1136	0126	24		24-51-71	ALL
	6		W1136	0127	24		24-51-71	ALL
	7		W1136	0053	20		25-31-11	001-099
	7	UNUSED						115-199
	8		W1136	0022	22		29-11-31	ALL
	9		W1136	0023	22		29-11-31	ALL
	10		W1136	0308	20		24-22-12	ALL
	11		W1136	0312	20		24-22-12	ALL
	12		W1136	0307	24		24-22-12	ALL
	13		W1136	0310	24		24-22-12	ALL
	14		W1136	0125	24		24-51-71	ALL
	15		W1136	0326	24		24-27-21	ALL
	16		W1136	0327	24		24-27-21	ALL
	17		W1136	0113	24		24-22-12	ALL
	18		W1136	0329	24		24-51-31	ALL
	19		W1136	0123	24		24-51-31	ALL
	20		W1136	0143	24		24-22-12	ALL
	21	UNUSED						ALL
	22		W1136	0061	24		24-27-11	ALL
	23		W1136	0117	24		24-27-11	ALL
	24	UNUSED						ALL
	25		W1136	0357	24		24-22-22	ALL
	26		W1136	0043	22		29-11-31	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W1136	0052	20		25-31-11	001-099
	29	UNUSED						115-199
	30		W1136	0108	20		24-22-11	ALL
	31	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 33

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41318P		P031-00/ /		PLUG-				ALL
	1		W4502	0027	24		24-22-22	ALL
	2		W4502	0028	24		24-22-22	ALL
	3		W4502	0211	22		SPARE	ALL
	4		W4502	0030	20		24-22-22	ALL
	5		W4502	0031	24		24-51-71	ALL
	6		W4502	0032	24		24-51-71	ALL
	7		W4502	0039	20		25-31-11	001-099
	7		W4502	0039	22		SPARE	115-199
	8		W4502	0040	22		29-11-31	ALL
	9		W4502	0041	22		29-11-31	ALL
	10		W4502	0060	20		24-22-12	ALL
	11		W4502	0058	20		24-22-12	ALL
	12		W4502	0057	24		24-22-12	ALL
	13		W4502	0056	24		24-22-12	ALL
	14		W4502	0089	24		24-51-71	ALL
	15		W4502	0052	24		24-27-21	ALL
	16		W4502	0053	24		24-27-21	ALL
	17		W4502	0059	24		24-22-12	ALL
	18		W4502	0016	24		24-51-31	001-099
	18		W4502	0016	20		24-51-31	115-199
	19		W4502	0017	24		24-51-31	001-099
	19		W4502	0017	20		24-51-31	115-199
	20		W4502	0061	24		24-22-12	ALL
	21	UNUSED						001-099
	21		W4502	0029	22		SPARE	115-199
	22		W4502	0091	24		24-27-11	ALL
	23		W4502	0023	24		24-27-11	ALL
	24		W4502	0092	22		SPARE	ALL
	25		W4502	0085	22		24-22-22	ALL
	26		W4502	0020	22		29-11-31	ALL
	27		W4502	0140	20		SPARE	001-099
	27	UNUSED						115-199
	28		W4502	0142	20		SPARE	001-099
	28	UNUSED						115-199
	29		W4502	0063	20		25-31-11	001-099
	29	UNUSED						115-199
	30		W4502	0111	20		24-22-11	ALL
	31		W4502	0611	22		SPARE	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 34

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41319J D41319J		E004-03/ / E4-3/ /		RCPT- RCPT-				001-099 115-199
	1		W1163	0420	24		31-31-61	001-099
	1		W1163	0420	24		31-31-32	115-199
	2		W1163	0005	24		23-12-11	ALL
	3	UNUSED						ALL
	4		W1163	0435	24		31-31-61	001-099
	4		W1163	0419	24		31-31-32	115-199
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1163	0265	24		23-51-13	001-099
	7		W1163	0264	20		23-51-13	115-199
	8		W1163	0266	24		23-51-13	001-099
	8		W1163	0265	24		23-51-13	115-199
	9		W1163	0264	20		23-51-13	001-099
	9		W1163	0266	24		23-51-13	115-199
	10		W1163	0253	24		23-51-12	ALL
	11		W1163	0254	24		23-51-12	ALL
	12		W1163	0255	24		23-51-12	ALL
	13		W1163	0252	20		23-51-12	ALL
	14		W1163	0414	22		23-71-11	ALL
	15		W1163	0413	22		23-71-11	ALL
	16	UNUSED						001-099
	16		W1163	5021B	24		SPARE	115-199
	17	UNUSED						001-099
	17		W1163	5021R	24		SPARE	115-199
	18	UNUSED						001-099
	18		W1163	5021Z			SPARE	115-199
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W1163	0268	24		23-51-13	001-099
	25	UNUSED						115-199
	26		W1163	0269	24		23-51-13	001-099
	26	UNUSED						115-199
	27		W1163	0267	20		23-51-13	001-099
	27	UNUSED						115-199
	28		W1163	0245	24		23-51-12	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 35

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41319J		E004-03/ /		RCPT- (continued)				001-099
D41319J		E4-3/ /		RCPT- (continued)				115-199
	28	UNUSED						115-199
	29		W1163	0247	24		23-51-12	001-099
	29	UNUSED						115-199
	30		W1163	0244	20		23-51-12	001-099
	30	UNUSED						115-199
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51		W1163	0249	24		23-51-12	001-099
	51	UNUSED						115-199
	52		W1163	0248	24		23-51-12	001-099
	52	UNUSED						115-199
	53		W1163	0251	20		23-51-12	001-099
	53	UNUSED						115-199
	54	UNUSED						ALL
	55	UNUSED						ALL
D41319P		E004-03/ /		PLUG-				001-099
D41319P		E4-3/ /		PLUG-				115-199
	1		W4471	0014	24		31-31-61	001-099
	1		W4471	0014	24		31-31-32	115-199
	2		W4471	0047	24		23-12-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 36

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41319P		E004-03/ /		PLUG- (continued)				001-099
D41319P		E4-3/ /		PLUG- (continued)				115-199
	3	UNUSED						ALL
	4		W4471	0017	24		31-31-61	001-099
	4		W4471	0017	24		31-31-32	115-199
	5	UNUSED						ALL
	6	UNUSED						001-099
	6		W4471	0036	24		SPARE	115-199
	7		W4471	2501R	24		23-51-13	001-099
	7		W4471	2501Z			23-51-13	115-199
	8		W4471	2501B	24		23-51-13	001-099
	8		W4471	2501R	24		23-51-13	115-199
	9		W4471	2501Z			23-51-13	001-099
	9		W4471	2501B	24		23-51-13	115-199
	10		W4471	3501Y	24		23-51-12	ALL
	11		W4471	3501B	24		23-51-12	ALL
	12		W4471	3501R	24		23-51-12	ALL
	13		W4471	3501Z			23-51-12	ALL
	14		W4471	0082	22		23-71-11	ALL
	15		W4471	0081	22		23-71-11	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						001-099
	18		W4471	0178	24		SPARE	115-199
	19		W4471	0152	24		SPARE	001-099
	19	UNUSED						115-199
	20		W4471	0162	24		SPARE	ALL
	21	UNUSED						001-099
	21		W4471	0163	24		SPARE	115-199
	22	UNUSED						001-099
	22		W4471	0164	24		SPARE	115-199
	23	UNUSED						001-099
	23		W4471	2009B	24		SPARE	115-199
	24	UNUSED						001-099
	24		W4471	2009R	24		SPARE	115-199
	25		W4471	5083R	24		23-51-13	001-099
	25	UNUSED						115-199
	26		W4471	5083B	24		23-51-13	001-099
	26	UNUSED						115-199
	27		W4471	5083Z			23-51-13	001-099
	27	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 37

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41319P		E004-03/ /		PLUG- (continued)				001-099
D41319P		E4-3/ /		PLUG- (continued)				115-199
	28		W4471	5087R	24		23-51-12	001-099
	28	UNUSED						115-199
	29		W4471	5087B	24		23-51-12	001-099
	29	UNUSED						115-199
	30		W4471	5087Z			23-51-12	001-099
	30	UNUSED						115-199
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51		W4471	5086R	24		23-51-12	001-099
	51	UNUSED						115-199
	52		W4471	5086B	24		23-51-12	001-099
	52	UNUSED						115-199
	53		W4471	5086Z			23-51-12	001-099
	53	UNUSED						115-199
	54	UNUSED						ALL
	55	UNUSED						ALL
D41320J		P032-00/ /		RCPT				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 38

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41320J		P032-00/ /		RCPT (continued)				ALL
	4		W1138	0132	24		24-51-31	ALL
	5		W1138	0133	24		24-51-31	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D41320P		P032-00/ /		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W2370	0004	24		24-51-31	ALL
	5		W2370	0005	24		24-51-31	ALL
	6		W2370	0101	22		SPARE	ALL
	7		W2370	0102	22		SPARE	ALL
	8	UNUSED						001-099
	8		W2370	0103	22		SPARE	115-199
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D41325J		E5-1/ /		RCPT				ALL
	1		W1282	FRAA			34-33-11	ALL
	2		W1282	5001R	24		34-33-11	ALL
	3		W1282	5001B	24		34-33-11	ALL
	4		W1282	0061	22		22-12-11	ALL
	5		W1282	0113	24		31-51-41	ALL
	6		W1282	0280	24		31-51-41	ALL
	7		W1282	0389	22		34-45-01	001-002, 115-199
	7	UNUSED						003-099

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 39

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41325J		E5-1/ /		RCPT (continued)				ALL
	8	UNUSED						ALL
	9		W1282	0114	24		31-51-42	ALL
	10		W1282	0134	24		31-51-42	ALL
	11		W1282	5002R	24		22-12-11	ALL
	12		W1282	5002B	24		22-12-11	ALL
	13		W1282	5002Z			22-12-11	ALL
	14		W1282	0010	22		22-12-11	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W1282	0169	24		27-51-41	ALL
	25		W1282	0170	24		27-51-41	ALL
	26		W1282	0171	24		27-51-41	ALL
	27		W1282	0228	24		27-51-41	ALL
	28		W1282	0229	24		27-51-41	ALL
	29		W1282	0205	24		27-58-11	ALL
	30		W1282	0044	24		27-58-31	ALL
	31		W1282	5011R	24		27-58-31	ALL
	32		W1282	5011B	24		27-58-31	ALL
	33		W1282	5011Z			27-58-31	ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36		W1282	0026	24		21-31-11	ALL
	37		W1282	2039R	24		21-31-11	ALL
	38		W1282	2039B	24		21-31-11	ALL
	39	UNUSED						ALL
	40		W1282	0008	24		34-33-11	ALL
	41	UNUSED						ALL
	42		W1282	5010R	24		21-31-11	ALL
	43		W1282	5010B	24		21-31-11	ALL
	44		W1282	5010Z			21-31-11	ALL
	45	UNUSED						ALL
	46		W1282	0062	22		22-12-11	ALL
	47	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 40

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41325J		E5-1/ /		RCPT (continued)				ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
			W1282	0154	20		34-33-11	ALL
			W1282	5001Z			34-33-11	ALL
			W1282	FRAA			34-33-11	ALL
D41325P		E005-01/ /		PLUG-				001-099
D41325P		E5-1/ /		PLUG-				115-199
	1		W4471	5009Z			34-33-11	ALL
	2		W4471	5009R	24		34-33-11	ALL
	3		W4471	5009B	24		34-33-11	ALL
	4		W4471	0038	22		22-12-11	ALL
	5		W4471	0025	24		31-51-41	ALL
	6		W4471	0026	24		31-51-41	ALL
	7		W4471	0327	22		34-45-01	001-002, 115-199
	7		W4471	0327	22		SPARE	003-099
	8	UNUSED						001-099
	8		W4471	0029	24		SPARE	115-199
	9		W4471	0028	24		31-51-42	ALL
	10		W4471	0065	24		31-51-42	ALL
	11		W4471	5017R	24		22-12-11	ALL
	12		W4471	5017B	24		22-12-11	ALL
	13		W4471	5017Z			22-12-11	ALL
	14		W4471	0037	22		22-12-11	ALL
	15	UNUSED						001-099
	15		W4471	5020B	24		SPARE	115-199
	16	UNUSED						001-099
	16		W4471	5020R	24		SPARE	115-199
	17	UNUSED						001-099
	17		W4471	5020Z			SPARE	115-199
	18	UNUSED						001-099
	18		W4471	2004R	24		SPARE	115-199
	19	UNUSED						001-099
	19		W4471	2004B	24		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 41

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41325P		E005-01/ /		PLUG- (continued)				001-099
D41325P		E5-1/ /		PLUG- (continued)				115-199
	20	UNUSED						001-099
	20		W4471	2005R	24		SPARE	115-199
	21	UNUSED						001-099
	21		W4471	2005B	24		SPARE	115-199
	22	UNUSED						ALL
	23	UNUSED						001-099
	23		W4471	0104	22		SPARE	115-199
	24		W4471	0105	24		27-51-41	001-099
	24		W4471	0105	22		27-51-41	115-199
	25		W4471	0106	24		27-51-41	001-099
	25		W4471	0106	22		27-51-41	115-199
	26		W4471	0107	24		27-51-41	001-099
	26		W4471	0107	22		27-51-41	115-199
	27		W4471	0108	24		27-51-41	001-099
	27		W4471	0108	22		27-51-41	115-199
	28		W4471	0109	24		27-51-41	001-099
	28		W4471	0109	22		27-51-41	115-199
	29		W4471	0110	24		27-58-11	ALL
	30		W4471	0111	24		27-58-31	ALL
	31		W4471	2502R	24		27-58-31	ALL
	32		W4471	2502B	24		27-58-31	ALL
	33		W4471	2502Z			27-58-31	ALL
	34	UNUSED						001-099
	34		W4471	0051	24		SPARE	115-199
	35	UNUSED						001-099
	35		W4471	0052	24		SPARE	115-199
	36		W4471	0084	24		21-31-11	ALL
	37		W4471	2008R	24		21-31-11	ALL
	38		W4471	2008B	24		21-31-11	ALL
	39	UNUSED						001-099
	39		W4471	0086	24		SPARE	115-199
	40		W4471	0096	24		34-33-11	ALL
	41	UNUSED						ALL
	42		W4471	5036R	24		34-12-12	ALL
	43		W4471	5036B	24		34-12-12	ALL
	44		W4471	5036Z			34-12-12	ALL
	45		W4471	0112	22		SPARE	ALL
	46		W4471	0039	22		22-12-11	ALL
	47	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 42

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41325P		E005-01/ /		PLUG- (continued)				001-099
D41325P		E5-1/ /		PLUG- (continued)				115-199
	47		W4471	0135	22		SPARE	115-199
	48	UNUSED						001-099
	48		W4471	0136	22		SPARE	115-199
	49	UNUSED						001-099
	49		W4471	0137	22		SPARE	115-199
	50	UNUSED						001-099
	50		W4471	0138	22		SPARE	115-199
	51	UNUSED						001-099
	51		W4471	5044R	24		SPARE	115-199
	52	UNUSED						001-099
	52		W4471	5044B	24		SPARE	115-199
	53	UNUSED						001-099
	53		W4471	5044Z			SPARE	115-199
	54	UNUSED						ALL
	55	UNUSED						ALL
	CAP	Y	W4471	0160	24		SPARE	115-199
D41326J		P034-00/ /		RCPT-				001-099
D41326J		P34/ /		RCPT-				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1190	0305	24		38-32-21	001-099
	3		W1190	0305	20		38-32-21	115-199
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	18	W1128	0102	18		24-21-41	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 43

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41326J		P034-00/ /		RCPT- (continued)				001-099
D41326J		P34/ /		RCPT- (continued)				115-199
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	18	W1128	0103	18		24-21-41	ALL
	23	18	W1128	0101	18		24-21-41	ALL
	24		W1190	0301	22		33-31-11	001-099
	24		W1190	0301	20		33-31-11	115-199
	25		W1190	0304	22		33-26-11	ALL
	26	UNUSED						ALL
	27	18	W1128	0110	18		24-22-41	ALL
	28	UNUSED						ALL
	29		W1128	0114	20		24-22-41	ALL
	30		W1128	0122	24		24-41-11	ALL
	31		W1128	0118	24		24-27-41	ALL
	32	UNUSED						ALL
D41326P		P034-00/ /		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W4504	0064	24		38-32-21	001-099
	3		W4504	0064	20		38-32-21	115-199
	4	UNUSED						ALL
	5		W4504	0601	20		SPARE	ALL
	6	UNUSED						001-099
	6		W4504	0602	20		SPARE	115-199
	7	UNUSED						001-099
	7		W4504	0603	20		SPARE	115-199
	8	UNUSED						001-099
	8		W4504	0604	20		SPARE	115-199
	9	UNUSED						001-099
	9		W4504	0605	20		SPARE	115-199
	10	UNUSED						ALL
	11	UNUSED						001-099
	11		W4504	0056	22		SPARE	115-199
	12		W4504	0060	22		SPARE	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	18	W4504	0002	18		24-21-41	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 44

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41326P		P034-00/ /		PLUG- (continued)				ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	18	W4504	0003	18		24-21-41	ALL
	23	18	W4504	0001	18		24-21-41	ALL
	24		W4504	0065	22		33-31-11	ALL
	25		W4504	0066	22		33-26-11	ALL
	26	UNUSED						ALL
	27	18	W4504	0004	18		24-22-41	ALL
	28	UNUSED						001-099
	28	18	W4504	0061	18		SPARE	115-199
	29	18	W4504	0010	20		24-22-41	001-099
	29	18	W4504	0010	18		24-22-41	115-199
	30	18	W4504	0011	24		24-41-11	001-099
	30	18	W4504	0011	18		24-41-11	115-199
	31		W4504	0012	24		24-27-41	ALL
	32	UNUSED						ALL
D41327J		E5-2/ /		RCPT				ALL
	1		W1284	5025R	24		21-31-21	ALL
	2		W1284	5025B	24		21-31-21	ALL
	3		W1284	5025Z			21-31-21	ALL
	4		W1284	0141	24		21-31-21	ALL
	5		W1284	2018R	24		21-31-21	ALL
	6		W1284	2018B	24		21-31-21	ALL
	7		W1284	2019R	24		21-31-21	ALL
	8		W1284	2019B	24		21-31-21	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W1284	5044R	24		27-32-11	001-099
	13	UNUSED						115-199
	14		W1284	5044B	24		27-32-11	001-099
	14	UNUSED						115-199
	15		W1284	5044Z			27-32-11	001-099
	15	UNUSED						115-199
	16	UNUSED						ALL
	17	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 45

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41327J		E5-2/ /		RCPT (continued)				ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D41327P		E005-02/ /		PLUG-				001-099
D41327P		E5-2/ /		PLUG-				115-199
	1		W4471	5055R	24		21-31-21	ALL
	2		W4471	5055B	24		21-31-21	ALL
	3		W4471	5055Z			21-31-21	ALL
	4		W4471	0201	24		21-31-21	ALL
	5		W4471	2012R	24		21-31-21	ALL
	6		W4471	2012B	24		21-31-21	ALL
	7		W4471	2013R	24		21-31-21	ALL
	8		W4471	2013B	24		21-31-21	ALL
	9	UNUSED						001-099
	9		W4471	0210	22		SPARE	115-199
	10	UNUSED						ALL
	11		W4471	2016R	24		SPARE	001-099
	11	UNUSED						115-199
	12		W4471	2016B	24		SPARE	001-099
	12	UNUSED						115-199
	13		W4471	5092R	24		27-32-11	001-099
	13	UNUSED						115-199
	14		W4471	5092B	24		27-32-11	001-099
	14	UNUSED						115-199
	15		W4471	5092Z			27-32-11	001-099
	15	UNUSED						115-199
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 46

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41328J		E002-02/ /		RCPT-				001-099
D41328J		E2-2/ /		RCPT-				115-199
	1		W1173	0186	24		34-12-21	ALL
	2		W1173	0161	22		34-31-21	ALL
	3		W1173	0076	20		22-11-21	ALL
	4	UNUSED						ALL
	5		W1173	0200	22		34-61-21	ALL
	6		W1173	0079	20		22-11-22	ALL
	7	UNUSED						ALL
	8		W1173	0193	24		34-12-21	ALL
	9		W1173	0189	24		34-12-21	ALL
	10	UNUSED						ALL
	11		W1173	0081	20		22-11-22	ALL
	12		W1173	0188	24		34-12-21	ALL
	13		W1173	0001	24		34-22-26	ALL
	14		W1173	0002	24		34-22-26	001, 003-099, 115-199
	14	UNUSED						002
	15	UNUSED						ALL
D41328P		E2-2/ /		PLUG-				ALL
	1		W2354	0010	24		34-12-21	ALL
	2		W2354	0002	22		34-31-21	ALL
	3		W2354	0001	20		22-11-21	ALL
	4	UNUSED						ALL
	5		W2354	0003	22		34-61-21	ALL
	6		W2354	0006	20		22-11-22	ALL
	7	UNUSED						001-099
	7		W2354	0641	22		34-61-25	115-199
	8		W2354	0008	24		34-12-21	ALL
	9		W2354	0009	24		34-12-21	ALL
	10	UNUSED						ALL
	11		W2354	0005	20		22-11-22	ALL
	12		W2354	0012	24		34-12-21	ALL
	13		W2354	0007	24		34-22-26	ALL
	14		W2354	0004	24		34-22-26	001, 003-099, 115-199
	14		W2354	0004	24		SPARE	002
	15	UNUSED						ALL
D41329J		E005-03/ /		RCPT				001-099
D41329J		E5-3/ /		RCPT				115-199
	1	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 47

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41329J		E005-03/ /		RCPT (continued)				001-099
D41329J		E5-3/ /		RCPT (continued)				115-199
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1286	0250	24		27-51-61	ALL
	7		W1286	0246	24		27-51-61	ALL
	8		W1286	0245	24		27-51-61	ALL
	9		W1286	0248	24		27-51-61	ALL
	10		W1286	0247	24		27-51-61	ALL
	11		W1286	0205	24		27-58-11	ALL
	12		W1286	5001Z			27-58-31	ALL
	13		W1286	5001B	24		27-58-31	ALL
	14		W1286	5001R	24		27-58-31	ALL
	15		W1286	0254	24		27-58-31	ALL
	16	UNUSED						ALL
	17		W1286	5004B	24		24-22-12	ALL
	18		W1286	5004R	24		24-22-12	ALL
	19		W1286	5004Z			24-22-12	ALL
	20	UNUSED						001-099
	20		W1286	0260	22		74-31-11	115-199
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 48

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41329J		E005-03/ /		RCPT (continued)				001-099
D41329J		E5-3/ /		RCPT (continued)				115-199
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D41329P		E005-03/ /		PLUG-				001-099
D41329P		E5-3/ /		PLUG-				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W4471	0281	24		SPARE	001-099
	3	UNUSED						115-199
	4	UNUSED						ALL
	5	UNUSED						001-099
	5		W4471	0104	22		SPARE	115-199
	6		W4471	0105	24		27-51-41	001-099
	6		W4471	0105	22		27-51-41	115-199
	7		W4471	0106	24		27-51-41	001-099
	7		W4471	0106	22		27-51-41	115-199
	8		W4471	0107	24		27-51-41	001-099
	8		W4471	0107	22		27-51-41	115-199
	9		W4471	0108	24		27-51-41	001-099
	9		W4471	0108	22		27-51-41	115-199
	10		W4471	0109	24		27-51-41	001-099
	10		W4471	0109	22		27-51-41	115-199
	11		W4471	0110	24		27-58-11	ALL
	12		W4471	2502Z			27-58-31	ALL
	13		W4471	2502B	24		27-58-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 49

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41329P		E005-03/ /		PLUG- (continued)				001-099
D41329P		E5-3/ /		PLUG- (continued)				115-199
	14		W4471	2502R	24		27-58-31	ALL
	15		W4471	0111	24		27-58-31	ALL
	16	UNUSED						001-099
	16		W4471	0165	22		SPARE	115-199
	17		W4471	5062B	24		24-22-12	ALL
	18		W4471	5062R	24		24-22-12	ALL
	19		W4471	5062Z			24-22-12	ALL
	20	UNUSED						001-099
	20		W4471	0252	22		74-31-11	115-199
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W4471	0271	22		SPARE	001-099
	23	UNUSED						115-199
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 50

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41329P		E005-03/ /		PLUG- (continued)				001-099
D41329P		E5-3/ /		PLUG- (continued)				115-199
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D41335J		1650/191/R54		RCPT-ALT STAB TRIM				ALL
	1		W2821	2501R	20		27-41-31	ALL
	2		W2821	2501B	20		27-41-31	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	DED		W2821	2501Z			27-41-31	ALL
D41335P		1640/104/R54		PLUG-ALT STAB TRIM				ALL
	1		W2613	2501R	20		27-41-31	ALL
	2		W2613	2501B	20		27-41-31	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	DED		W2613	2501Z			27-41-31	ALL
D41337J		1650/193/R54		RCPT-ALT STAB TRIM				ALL
	1		W2805	2501R	20		27-41-31	ALL
	2		W2805	2501B	20		27-41-31	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	DED		W2805	2501Z			27-41-31	ALL
D41337P		1650/104/R54		PLUG-ALT STAB TRIM				ALL
	1		W2615	2501R	20		27-41-31	ALL
	2		W2615	2501B	20		27-41-31	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	DED		W2615	2501Z			27-41-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 51

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41339J D41339J		E002-01/ / E2-1/ /		RCPT- RCPT-				001-099 115-199
	1		W1171	0164	22		34-61-15	001-008, 115-199
	1	UNUSED						009-099
	2		W1171	0398	22		22-11-22	001-099
	2		W1171	1009	22		22-11-22	115-199
	3		W1171	5127R	24		34-61-12	ALL
	4		W1171	5127B	24		34-61-12	ALL
	5		W1171	5127Z			34-61-12	ALL
	6	UNUSED						001-099
	6		W1171	5162R	24		34-45-02	115-199
	7	UNUSED						001-099
	7		W1171	5162B	24		34-45-02	115-199
	8	UNUSED						001-099
	8		W1171	FRND			34-45-02	115-199
	9	UNUSED						001-099
	9		W1171	5163R	24		34-45-02	115-199
	10	UNUSED						001-099
	10		W1171	5163B	24		34-45-02	115-199
	11	UNUSED						001-099
	11		W1171	FRNE			34-45-02	115-199
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1171	0416	22		22-15-12	001-099
	14		W1171	1029	22		22-15-12	115-199
	15	UNUSED						ALL
	16		W1171	0411	22		22-41-11	001-099
	16		W1171	1022	22		22-41-11	115-199
	17	UNUSED						001-099
	17		W1171	0713	22		34-61-25	115-199
	18	UNUSED						ALL
	19		W1171	0401	22		22-14-11	001-099
	19		W1171	1012	22		22-14-11	115-199
	20		W1171	0396	22		22-14-11	001-099
	20		W1171	1007	22		22-14-11	115-199
	21		W1171	5151R	24		34-21-21	ALL
	22		W1171	5151B	24		34-21-21	ALL
	23		W1171	5151Z			34-21-21	ALL
	24	UNUSED						001-099
	24		W1171	0380	24		34-12-12	115-199
	25	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 52

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41339J		E002-01/ /		RCPT- (continued)				001-099
D41339J		E2-1/ /		RCPT- (continued)				115-199
	26		W1171	0393	22		22-14-11	001-099
	26		W1171	1004	22		22-14-11	115-199
	27		W1171	0462	24		34-45-01	001-002, 115-199
	27	UNUSED						003-099
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W1171	5154R	24		34-61-25	ALL
	32		W1171	5154B	24		34-61-25	ALL
	33		W1171	5154Z			34-61-25	ALL
	34	UNUSED						001-099
	34		W1171	1033	24		73-21-22	115-199
	35	UNUSED						001-099
	35		W1171	1034	24		73-21-22	115-199
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39		W1171	5196R	24		34-45-01	ALL
	40		W1171	5196B	24		34-45-01	ALL
	41		W1171	5196Z			34-45-01	ALL
	42		W1171	5162R	24		34-45-02	001-099
	42	UNUSED						115-199
	43		W1171	5162B	24		34-45-02	001-099
	43	UNUSED						115-199
	44		W1171	FRND			34-45-02	001-099
	44	UNUSED						115-199
	45		W1171	5163R	24		34-45-02	001-099
	45	UNUSED						115-199
	46		W1171	5163B	24		34-45-02	001-099
	46	UNUSED						115-199
	47		W1171	FRNE			34-45-02	001-099
	47	UNUSED						115-199
	48		W1171	5164R	24		34-45-02	001-099
	48	UNUSED						115-199
	49		W1171	5164B	24		34-45-02	001-099
	49	UNUSED						115-199
	50		W1171	FRNF			34-45-02	001-099
	50	UNUSED						115-199
	51		W1171	5168R	24		34-45-02	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 53

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41339J		E002-01/ /		RCPT- (continued)				001-099
D41339J		E2-1/ /		RCPT- (continued)				115-199
	52	UNUSED	W1171	5168B	24		34-45-02	ALL
	53		W1171	FRNI			34-45-02	ALL
	54		W1171	0463	24		34-45-01	ALL
	55							ALL
	DED		W1171	1004Z			22-14-11	115-199
	DED		W1171	1007Z			22-14-11	115-199
	DED		W1171	1009Z			22-11-22	115-199
	DED		W1171	1012Z			22-14-11	115-199
	DED		W1171	1022Z			22-41-11	115-199
	DED		W1171	1029Z			22-15-12	115-199
	DED		W1171	1033Z			73-21-22	115-199
	DED		W1171	1034Z			73-21-22	115-199
			W1171	0473	22		34-45-02	001-099
			W1171	5164Z			34-45-02	001-099
			W1171	FRNF			34-45-02	001-099
			W1171	0450	22		34-45-02	ALL
			W1171	0472	22		34-45-02	ALL
			W1171	0475	22		34-45-02	ALL
			W1171	5162Z			34-45-02	ALL
			W1171	5163Z			34-45-02	ALL
			W1171	5168Z			34-45-02	ALL
			W1171	FRND			34-45-02	ALL
			W1171	FRNE			34-45-02	ALL
			W1171	FRNI			34-45-02	ALL
D41339P		E002-01/ /		PLUG-				001-099
D41339P		E2-1/ /		PLUG-				115-199
	1	UNUSED	W4473	0001	22		34-61-15	001-008, 115-199
	1		W4473	0001	22		SPARE	009-099
	2		W4473	0202	22		22-11-22	ALL
	3		W4473	5030R	24		34-61-12	ALL
	4		W4473	5030B	24		34-61-12	ALL
	5	UNUSED	W4473	5030Z			34-61-12	ALL
	6							001-099
	6	UNUSED	W4473	5116R	24		34-45-02	115-199
	7							001-099
	7	UNUSED	W4473	5116B	24		34-45-02	115-199
	8							001-099
	8	UNUSED	W4473	5116Z			34-45-02	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 54

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41339P		E002-01/ /		PLUG- (continued)				001-099
D41339P		E2-1/ /		PLUG- (continued)				115-199
	9	UNUSED						001-099
	9		W4473	5117R	24		34-45-02	115-199
	10	UNUSED						001-099
	10		W4473	5117B	24		34-45-02	115-199
	11	UNUSED						001-099
	11		W4473	5117Z			34-45-02	115-199
	12	UNUSED						001-099
	12		W4473	0332	22		SPARE	115-199
	13	UNUSED						001-099
	13		W4473	0333	24		SPARE	115-199
	14		W4473	0175	22		22-15-12	ALL
	15	UNUSED						001-099
	15		W4473	0177	22		SPARE	115-199
	16		W4473	0178	22		22-41-11	ALL
	17	UNUSED						001-099
	17		W4473	0295	22		34-61-25	115-199
	18		W4473	0216	22		SPARE	ALL
	19		W4473	0206	22		22-14-11	ALL
	20		W4473	0131	22		22-14-11	ALL
	21		W4473	5064R	24		34-21-21	ALL
	22		W4473	5064B	24		34-21-21	ALL
	23		W4473	5064Z			34-21-21	ALL
	24		W4473	0111	22		SPARE	001-099
	24		W4473	0247	22		34-12-12	115-199
	25		W4473	0329	24		34-45-01	001-002, 115-199
	25		W4473	0329	24		SPARE	003-099
	26		W4473	0204	22		22-14-11	ALL
	27		W4473	0330	24		34-45-01	001-002, 115-199
	27		W4473	0330	24		SPARE	003-099
	28		W4473	5065R	24		SPARE	ALL
	29		W4473	5065B	24		SPARE	ALL
	30		W4473	5065Z			SPARE	ALL
	31		W4473	5068R	24		34-61-25	ALL
	32		W4473	5068B	24		34-61-25	ALL
	33		W4473	5068Z			34-61-25	ALL
	34	UNUSED						001-099
	34		W4473	0227	24		73-21-22	115-199
	35	UNUSED						001-099
	35		W4473	0228	24		73-21-22	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 55

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41339P		E002-01/ /		PLUG- (continued)				001-099
D41339P		E2-1/ /		PLUG- (continued)				115-199
	36	UNUSED						001-099
	36		W4473	5093Z			SPARE	115-199
	37	UNUSED						001-099
	37		W4473	5093R	24		SPARE	115-199
	38	UNUSED						001-099
	38		W4473	5093B	24		SPARE	115-199
	39		W4473	5115R	24		34-45-01	ALL
	40		W4473	5115B	24		34-45-01	ALL
	41		W4473	5115Z			34-45-01	ALL
	42		W4473	5116R	24		34-45-02	001-099
	42		W4473	5120R	24		SPARE	115-199
	43		W4473	5116B	24		34-45-02	001-099
	43		W4473	5120B	24		SPARE	115-199
	44		W4473	5116Z			34-45-02	001-099
	44		W4473	5120Z			SPARE	115-199
	45		W4473	5117R	24		34-45-02	001-099
	45	UNUSED						115-199
	46		W4473	5117B	24		34-45-02	001-099
	46	UNUSED						115-199
	47		W4473	5117Z			34-45-02	001-099
	47	UNUSED						115-199
	48		W4473	5118R	24		34-45-02	001-099
	48	UNUSED						115-199
	49		W4473	5118B	24		34-45-02	001-099
	49	UNUSED						115-199
	50		W4473	5118Z			34-45-02	001-099
	50	UNUSED						115-199
	51		W4473	5119R	24		34-45-02	ALL
	52		W4473	5119B	24		34-45-02	ALL
	53		W4473	5119Z			34-45-02	ALL
	54		W4473	0331	24		34-45-01	ALL
	55	UNUSED						ALL
D41345J		E002-02/ /		RCPT-				001-099
D41345J		E2-2/ /		RCPT-				115-199
	1		W1173	5020Z			31-41-22	ALL
	2		W1173	5020R	24		31-41-22	ALL
	3		W1173	5020B	24		31-41-22	ALL
	4		W1173	5039R	24		34-61-13	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 56

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41345J		E002-02/ /		RCPT- (continued)				001-099
D41345J		E2-2/ /		RCPT- (continued)				115-199
	5		W1173	5039B	24		34-61-13	ALL
	6		W1173	5039Z			34-61-13	ALL
	7		W1173	5054R	24		34-61-24	ALL
	8		W1173	5054B	24		34-61-24	ALL
	9		W1173	5054Z			34-61-24	ALL
	10		W1173	0072	24		34-61-24	ALL
	11		W1173	5055R	24		34-61-24	ALL
	12		W1173	5055B	24		34-61-24	ALL
	13		W1173	FRAH			34-61-24	ALL
	14		W1173	5073R	24		34-61-25	ALL
	15		W1173	5073B	24		34-61-25	ALL
	16		W1173	5073Z			34-61-25	ALL
	17		W1173	0064	24		34-61-25	ALL
	18		W1173	5027R	24		34-22-29	ALL
	19		W1173	5027B	24		34-22-29	ALL
	20		W1173	5027Z			34-22-29	ALL
	21		W1173	5019R	24		34-53-11	ALL
	22		W1173	5019B	24		34-53-11	ALL
	23		W1173	5019Z			34-53-11	ALL
	24		W1173	5018R	24		34-53-21	ALL
	25		W1173	5018B	24		34-53-21	ALL
	26		W1173	5018Z			34-53-21	ALL
	27		W1173	5118R	24		34-12-62	ALL
	28		W1173	5118B	24		34-12-62	ALL
	29		W1173	5118Z			34-12-62	ALL
	30		W1173	0155	22		22-22-21	ALL
	31		W1173	5095R	24		22-22-21	ALL
	32		W1173	5095B	24		22-22-21	ALL
	33		W1173	5095Z			22-22-21	ALL
	34		W1173	0119	22		22-22-21	ALL
	35		W1173	5311R	24		31-31-42	001-099
	35	UNUSED						115-199
	36		W1173	5311B	24		31-31-42	001-099
	36	UNUSED						115-199
	37		W1173	5311Z			31-31-42	001-099
	37	UNUSED						115-199
	38		W1173	FRLV			31-31-42	001-099
	38	UNUSED						115-199
	39		W1173	5065R	24		22-24-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 57

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41345J		E002-02/ /		RCPT- (continued)				001-099
D41345J		E2-2/ /		RCPT- (continued)				115-199
	40		W1173	5065B	24		22-24-21	ALL
	41		W1173	5065Z			22-24-21	ALL
	42		W1173	5117R	24		22-41-11	ALL
	43		W1173	5117B	24		22-41-11	ALL
	44	UNUSED						001, 003-099, 115-199
	44		W1173	0411	22		34-25-12	002
	45		W1173	FRAW			22-41-11	ALL
	46		W1173	5012B	24		34-22-29	ALL
	47		W1173	FRAB			34-22-29	ALL
	48		W1173	5012R	24		34-22-29	ALL
	49		W1173	5312R	24		31-31-42	001-099
	49	UNUSED						115-199
	50		W1173	5312B	24		31-31-42	001-099
	50	UNUSED						115-199
	51		W1173	0262	24		34-55-21	ALL
	52		W1173	0263	24		34-55-21	ALL
	53		W1173	5158R	24		27-32-21	001-099
	53	UNUSED						115-199
	54		W1173	5158B	24		27-32-21	001-099
	54	UNUSED						115-199
	55		W1173	5158Z			27-32-21	001-099
	55	UNUSED						115-199
			W1173	0752	20		31-31-42	001-099
			W1173	5312Z			31-31-42	001-099
			W1173	FRLV			31-31-42	001-099
			W1173	0239	20		34-22-29	ALL
			W1173	0245	20		34-61-24	ALL
			W1173	0260	20		22-41-11	ALL
			W1173	5012Z			34-22-29	ALL
			W1173	5055Z			34-61-24	ALL
			W1173	5117Z			22-41-11	ALL
			W1173	FRAB			34-22-29	ALL
			W1173	FRAH			34-61-24	ALL
			W1173	FRAW			22-41-11	ALL
D41345P		E002-02/ /		PLUG-				001-099
D41345P		E2-2/ /		PLUG-				115-199
	1		W4473	5001Z			31-41-22	ALL
	2		W4473	5001R	24		31-41-22	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 58

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41345P		E002-02/ /		PLUG- (continued)				001-099
D41345P		E2-2/ /		PLUG- (continued)				115-199
	3		W4473	5001B	24		31-41-22	ALL
	4		W4473	5006R	24		34-61-13	ALL
	5		W4473	5006B	24		34-61-13	ALL
	6		W4473	5006Z			34-61-13	ALL
	7		W4473	5003R	24		34-61-24	ALL
	8		W4473	5003B	24		34-61-24	ALL
	9		W4473	5003Z			34-61-24	ALL
	10		W4473	0002	24		34-61-24	ALL
	11		W4473	5004R	24		34-61-24	ALL
	12		W4473	5004B	24		34-61-24	ALL
	13		W4473	5004Z			34-61-24	ALL
	14		W4473	5005R	24		34-61-25	ALL
	15		W4473	5005B	24		34-61-25	ALL
	16		W4473	5005Z			34-61-25	ALL
	17		W4473	0003	24		34-61-25	ALL
	18		W4473	5007R	24		34-22-29	ALL
	19		W4473	5007B	24		34-22-29	ALL
	20		W4473	5007Z			34-22-29	ALL
	21		W4473	5010R	24		34-53-11	ALL
	22		W4473	5010B	24		34-53-11	ALL
	23		W4473	5010Z			34-53-11	ALL
	24		W4473	5012R	24		34-53-21	ALL
	25		W4473	5012B	24		34-53-21	ALL
	26		W4473	5012Z			34-53-21	ALL
	27		W4473	5013R	24		27-32-21	ALL
	28		W4473	5013B	24		27-32-21	ALL
	29		W4473	5013Z			27-32-21	ALL
	30		W4473	0042	22		22-22-21	ALL
	31		W4473	5014R	24		22-22-21	ALL
	32		W4473	5014B	24		22-22-21	ALL
	33		W4473	5014Z			22-22-21	ALL
	34		W4473	0043	22		22-22-21	ALL
	35		W4473	5130R	24		31-31-42	001-099
	35		W4473	5015R	24		SPARE	115-199
	36		W4473	5130B	24		31-31-42	001-099
	36		W4473	5015B	24		SPARE	115-199
	37		W4473	5130Z			31-31-42	001-099
	37		W4473	5015Z			SPARE	115-199
	38		W4473	5131Z			31-31-42	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 59

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41345P		E002-02/ /		PLUG- (continued)				001-099
D41345P		E2-2/ /		PLUG- (continued)				115-199
	38		W4473	5038R	24		SPARE	115-199
	39		W4473	5016R	24		22-24-21	ALL
	40		W4473	5016B	24		22-24-21	ALL
	41		W4473	5016Z			22-24-21	ALL
	42		W4473	5018R	24		22-41-11	ALL
	43		W4473	5018B	24		22-41-11	ALL
	44		W4473	0341	24		SPARE	001, 003-099
	44		W4473	0347	22		34-25-12	002
	44	UNUSED						115-199
	45		W4473	5018Z			22-41-11	ALL
	46		W4473	5008B	24		34-22-29	ALL
	47		W4473	5008Z			34-22-29	ALL
	48		W4473	5008R	24		34-22-29	ALL
	49		W4473	5131R	24		31-31-42	001-099
	49		W4473	5038B	24		SPARE	115-199
	50		W4473	5131B	24		31-31-42	001-099
	50		W4473	5038Z			SPARE	115-199
	51		W4473	0066	24		34-55-21	ALL
	52		W4473	0067	24		34-55-21	ALL
	53		W4473	5079R	24		27-32-21	001-099
	53		W4473	5039R	24		SPARE	115-199
	54		W4473	5079B	24		27-32-21	001-099
	54		W4473	5039B	24		SPARE	115-199
	55		W4473	5079Z			27-32-21	001-099
	55		W4473	5039Z			SPARE	115-199
	REF	VP	W4473	0341	24		SPARE	002
D41347J		E002-02/ /		RCPT-				001-099
D41347J		E2-2/ /		RCPT-				115-199
	1		W1173	0113	22		22-12-21	ALL
	2		W1173	0114	22		22-12-21	ALL
	3		W1173	0115	22		22-12-21	ALL
	4		W1173	0116	22		22-12-21	ALL
	5		W1173	5093R	24		22-12-21	ALL
	6		W1173	5093B	24		22-12-21	ALL
	7		W1173	FRAO			22-12-21	ALL
	8		W1173	0110	22		22-12-21	ALL
	9		W1173	2540R	24		23-51-13	ALL
	10		W1173	2540B	24		23-51-13	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 60

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41347J		E002-02/ /		RCPT- (continued)				001-099
D41347J		E2-2/ /		RCPT- (continued)				115-199
	11		W1173	2540Z			23-51-13	ALL
	12		W1173	0048	22		30-32-11	ALL
	13		W1173	0170	22		30-32-11	ALL
	14		W1173	0176	24		34-12-22	ALL
	15		W1173	0177	24		34-12-22	ALL
	16		W1173	0175	24		34-12-22	ALL
	17		W1173	0179	24		34-12-22	ALL
	18		W1173	5103R	24		34-12-22	ALL
	19		W1173	5103B	24		34-12-22	ALL
	20		W1173	5103Z			34-12-22	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W1173	5100R	24		22-15-11	ALL
	24		W1173	5100B	24		22-15-11	ALL
	25		W1173	FRBA			22-15-11	ALL
	26		W1173	0401	24		34-45-01	ALL
	27	UNUSED						ALL
	28		W1173	0218	20		30-33-11	ALL
	29		W1173	0217	20		30-33-11	ALL
	30	UNUSED						ALL
	31	UNUSED						001, 003-099, 115-199
	31		W1173	0002	22		34-22-26	002
	32		W1173	0165	24		34-33-21	ALL
	33		W1173	5071R	24		34-55-21	ALL
	34		W1173	5071B	24		34-55-21	ALL
	35		W1173	5071Z			34-55-21	ALL
	36		W1173	0075	24		34-61-23	ALL
	37		W1173	0188	24		34-12-21	ALL
	38		W1173	0195	22		34-12-21	ALL
	39		W1173	0187	24		34-12-21	ALL
	40		W1173	5072R	24		34-61-25	ALL
	41		W1173	5072B	24		34-61-25	ALL
	42		W1173	5072Z			34-61-25	ALL
	43		W1173	5077R	24		22-41-11	ALL
	44		W1173	5077B	24		22-41-11	ALL
	45		W1173	5077Z			22-41-11	ALL
	46		W1173	5162R	24		34-45-01	ALL
	47		W1173	5162B	24		34-45-01	ALL
	48	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 61

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41347J		E002-02/ /		RCPT- (continued)				001-099
D41347J		E2-2/ /		RCPT- (continued)				115-199
	49	UNUSED	W1173	FRLE			34-45-01	001-099
	49		W1173	FRLL			34-45-01	115-199
	50		W1173	0156	22		32-31-11	ALL
	51							ALL
	52		W1173	0304	22		32-42-11	ALL
	53		W1173	0314	22		22-14-11	ALL
	54		W1173	0315	22		22-14-11	ALL
	55		W1173	0128	22		22-14-31	ALL
			W1173	FRLE			34-45-01	001-099
			W1173	0252	20		22-12-21	ALL
			W1173	0272	20		22-15-11	ALL
			W1173	0402	22		34-45-01	ALL
			W1173	5093Z			22-12-21	ALL
			W1173	5100Z			22-15-11	ALL
			W1173	5162Z			34-45-01	ALL
			W1173	FRAO			22-12-21	ALL
			W1173	FRBA			22-15-11	ALL
			W1173	FRLL			34-45-01	115-199
D41347P		E002-02/ /		PLUG-				001-099
D41347P		E2-2/ /		PLUG-				115-199
	1		W4473	0057	22		22-12-21	ALL
	2		W4473	0058	22		22-12-21	ALL
	3		W4473	0059	22		22-12-21	ALL
	4		W4473	0060	22		22-12-21	ALL
	5		W4473	5021R	24		22-12-21	ALL
	6		W4473	5021B	24		22-12-21	ALL
	7		W4473	5021Z			22-12-21	ALL
	8		W4473	0061	22		22-12-21	ALL
	9		W4473	2502R	24		23-51-13	ALL
	10		W4473	2502B	24		23-51-13	ALL
	11		W4473	2502Z			23-51-13	ALL
	12		W4473	0064	22		30-32-11	ALL
	13		W4473	0065	22		30-32-11	ALL
	14		W4473	0068	24		34-12-22	ALL
	15		W4473	0069	24		34-12-22	ALL
	16		W4473	0070	24		34-12-22	ALL
	17		W4473	0071	24		34-12-22	ALL
	18		W4473	5023R	24		34-12-22	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 62

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41347P		E002-02/ /		PLUG- (continued)				001-099
D41347P		E2-2/ /		PLUG- (continued)				115-199
	19		W4473	5023B	24		34-12-22	ALL
	20		W4473	5023Z			34-12-22	ALL
	21		W4473	0072	22		SPARE	001-099
	21		W4473	0072	24		SPARE	115-199
	22		W4473	0103	22		SPARE	001, 003-099
	22		W4473	0103	24		SPARE	002, 115-199
	23		W4473	5024R	24		22-15-11	ALL
	24		W4473	5024B	24		22-15-11	ALL
	25		W4473	5024Z			22-15-11	ALL
	26		W4473	0331	24		34-45-01	ALL
	27		W4473	0121	20		SPARE	001-099
	27		W4473	0249	22		34-12-22	115-199
	28		W4473	0153	20		30-33-11	ALL
	29		W4473	0152	20		30-33-11	ALL
	30		W4473	0055	22		34-61-21	001-099
	30		W4473	0132	24		SPARE	115-199
	31	UNUSED						001, 003-099
	31		W4473	0346	22		34-22-26	002
	31		W4473	0123	24		SPARE	115-199
	32		W4473	0085	24		34-33-21	ALL
	33		W4473	5026R	24		34-55-21	ALL
	34		W4473	5026B	24		34-55-21	ALL
	35		W4473	5026Z			34-55-21	ALL
	36		W4473	0086	24		34-61-23	ALL
	37		W4473	0074	22		34-12-21	ALL
	38		W4473	0075	22		34-12-21	ALL
	39		W4473	0076	24		34-12-21	ALL
	40		W4473	5027R	24		34-61-25	ALL
	41		W4473	5027B	24		34-61-25	ALL
	42		W4473	5027Z			34-61-25	ALL
	43		W4473	5035R	24		22-41-11	ALL
	44		W4473	5035B	24		22-41-11	ALL
	45		W4473	5035Z			22-41-11	ALL
	46		W4473	5115R	24		34-45-01	ALL
	47		W4473	5115B	24		34-45-01	ALL
	48		W4473	0134	22		SPARE	001-099
	48		W4473	0134	24		SPARE	115-199
	49		W4473	5115Z			34-45-01	ALL
	50		W4473	0100	22		32-31-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 63

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41347P		E002-02/ /		PLUG- (continued)				001-099
D41347P		E2-2/ /		PLUG- (continued)				115-199
	51	UNUSED						001-099
	51		W4473	0099	24		SPARE	115-199
	52		W4473	0090	22		32-42-11	ALL
	53		W4473	0205	22		22-14-11	ALL
	54		W4473	0206	22		22-14-11	ALL
	55		W4473	0207	22		22-14-31	001-099
	55		W4473	0083	22		22-14-31	115-199
	CAP	Y	W4473	0121	24		34-12-12	115-199
D41348J		675/270/R50		RCPT-				001-099
	1	VS	W3802	0905	20		33-24-21	001-099
D41349J		E002-03/ /		RCPT-				001-099
D41349J		E2-3/ /		RCPT-				115-199
	1		W1175	5035R	24		22-32-12	ALL
	2		W1175	5035B	24		22-32-12	ALL
	3		W1175	5035Z			22-32-12	ALL
	4	UNUSED						001, 003-099
	4		W1175	5134R	22		34-46-12	002
	4		W1175	5137R	22		34-58-11	115-199
	5	UNUSED						001, 003-099
	5		W1175	5134B	22		34-46-12	002
	5		W1175	5137B	22		34-58-11	115-199
	6	UNUSED						001, 003-099
	6		W1175	FRMA			34-46-12	002
	6		W1175	FRAI			34-58-11	115-199
	7		W1175	5062R	24		22-15-11	ALL
	8		W1175	5062B	24		22-15-11	ALL
	9		W1175	FREM			22-15-11	ALL
	10		W1175	5042R	24		22-32-11	ALL
	11		W1175	5042B	24		22-32-11	ALL
	12		W1175	FRAT			22-32-11	ALL
	13	UNUSED						001, 003-099, 115-199
	13		W1175	0586	22		34-22-28	002
	14	UNUSED						001, 003-099, 115-199
	14		W1175	5150R	22		34-46-12	002
	15	UNUSED						001, 003-099, 115-199
	15		W1175	5150B	22		34-46-12	002
	16	UNUSED						001, 003-099, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 64

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41349J		E002-03/ /		RCPT- (continued)				001-099
D41349J		E2-3/ /		RCPT- (continued)				115-199
	16		W1175	FRIS			34-46-12	002
	17		W1175	5066R	24		34-46-12	ALL
	18		W1175	5066B	24		34-46-12	ALL
	19		W1175	FRAD			34-46-12	001-008, 010-099
	19		W1175	5066Z			34-46-12	009, 115-199
	20		W1175	FRGW			34-25-11	001, 003-099
	20	UNUSED						002
	20		W1175	FRDR			34-25-11	115-199
	21		W1175	5081R	24		34-25-11	001, 003-099, 115-199
	21	UNUSED						002
	22		W1175	5081B	24		34-25-11	001, 003-099, 115-199
	22	UNUSED						002
	23	UNUSED						001-099
	23		W1175	FRFQ			34-25-11	115-199
	24	UNUSED						001-099
	24		W1175	5083R	24		34-25-11	115-199
	25	UNUSED						001-099
	25		W1175	5083B	24		34-25-11	115-199
	26	UNUSED						001, 003-099, 115-199
	26		W1175	5153R	22		34-46-12	002
	27	UNUSED						001, 003-099, 115-199
	27		W1175	5153B	22		34-46-12	002
	28	UNUSED						001, 003-099, 115-199
	28		W1175	FRIT			34-46-12	002
	29	UNUSED						001, 003-099, 115-199
	29		W1175	FRIU			34-46-12	002
	30	UNUSED						ALL
	31		W1175	0397	22		22-15-12	001-099
	31		W1175	1026	22		22-15-12	115-199
	32		W1175	0398	22		22-41-11	001-099
	32		W1175	1027	22		22-41-11	115-199
	33	UNUSED						001, 003-099, 115-199
	33		W1175	5197R	22		34-46-12	002
	34		W1175	5004R	24		34-22-38	ALL
	35		W1175	5004B	24		34-22-38	ALL
	36		W1175	FRCQ			34-22-38	ALL
	37	UNUSED						ALL
	38		W1175	0377	22		22-11-22	001-099
	38		W1175	1007	22		22-11-22	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 65

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41349J		E002-03/ /		RCPT- (continued)				001-099
D41349J		E2-3/ /		RCPT- (continued)				115-199
	39		W1175	0378	22		22-11-22	001-099
	39		W1175	1008	22		22-11-22	115-199
	40		W1175	0370	22		22-14-11	001-099
	40		W1175	1001	22		22-14-11	115-199
	41	UNUSED						ALL
	42		W1175	0384	22		22-14-31	001-099
	42		W1175	1014	22		22-14-31	115-199
	43		W1175	0409	24		73-21-22	001-099
	43		W1175	1028	24		73-21-22	115-199
	44		W1175	0381	22		22-14-11	001-099
	44		W1175	1011	22		22-14-11	115-199
	45		W1175	0410	24		73-21-22	001-099
	45		W1175	1029	24		73-21-22	115-199
	46	UNUSED						001, 003-099, 115-199
	46		W1175	5197B	22		34-46-12	002
	47		W1175	5094R	24		22-33-11	ALL
	48		W1175	5094B	24		22-33-11	ALL
	49		W1175	FRGO			22-33-11	ALL
	50		W1175	FRID			22-33-11	ALL
	51		W1175	5098R	24		22-33-11	ALL
	52		W1175	5098B	24		22-33-11	ALL
	53		W1175	5103R	24		34-46-12	ALL
	54		W1175	5103B	24		34-46-12	ALL
	55		W1175	5103Z			34-46-12	ALL
	DED		W1175	1001Z			22-14-11	115-199
	DED		W1175	1007Z			22-11-22	115-199
	DED		W1175	1008Z			22-11-22	115-199
	DED		W1175	1011Z			22-14-11	115-199
	DED		W1175	1014Z			22-14-31	115-199
	DED		W1175	1026Z			22-15-12	115-199
	DED		W1175	1027Z			22-41-11	115-199
	DED		W1175	1028Z			73-21-22	115-199
	DED		W1175	1029Z			73-21-22	115-199
			W1175	FRGW			34-25-11	001, 003-099
			W1175	0284	20		34-25-11	001, 003-099, 115-199
			W1175	5081Z			34-25-11	001, 003-099, 115-199
			W1175	0253	20		34-46-12	001-008, 010-099
			W1175	5066Z			34-46-12	001-008, 010-099
			W1175	FRAD			34-46-12	001-008, 010-099

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 66

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41349J		E002-03/ /		RCPT- (continued)				001-099
D41349J		E2-3/ /		RCPT- (continued)				115-199
			W1175	0359	20		22-33-11	001-099
			W1175	0364	20		22-33-11	001-099
			W1175	0229	20		22-15-11	ALL
			W1175	0346	20		22-32-11	ALL
			W1175	0362	20		34-22-38	ALL
			W1175	5004Z			34-22-38	ALL
			W1175	5042Z			22-32-11	ALL
			W1175	5062Z			22-15-11	ALL
			W1175	5094Z			22-33-11	ALL
			W1175	5098Z			22-33-11	ALL
			W1175	FRAT			22-32-11	ALL
			W1175	FRCQ			34-22-38	ALL
			W1175	FREM			22-15-11	ALL
			W1175	FRGO			22-33-11	ALL
			W1175	FRID			22-33-11	ALL
			W1175	0536	20		34-46-12	002
			W1175	0589	20		34-46-12	002
			W1175	0594	20		34-46-12	002
			W1175	0798	20		34-46-12	002
			W1175	5134Z			34-46-12	002
			W1175	5150Z			34-46-12	002
			W1175	5153Z			34-46-12	002
			W1175	5197Z			34-46-12	002
			W1175	FRIS			34-46-12	002
			W1175	FRIT			34-46-12	002
			W1175	FRIU			34-46-12	002
			W1175	FRMA			34-46-12	002
			W1175	0286	20		34-25-11	115-199
			W1175	0359	22		22-33-11	115-199
			W1175	0364	22		22-33-11	115-199
			W1175	0545	20		34-58-11	115-199
			W1175	5083Z			34-25-11	115-199
			W1175	5137Z			34-58-11	115-199
			W1175	FRAI			34-58-11	115-199
			W1175	FRDR			34-25-11	115-199
			W1175	FRFQ			34-25-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 67

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41349P D41349P		E002-03/ / E2-3/ /		PLUG- PLUG-				001-099 115-199
	1		W4473	5017R	24		22-32-12	ALL
	2		W4473	5017B	24		22-32-12	ALL
	3		W4473	5017Z			22-32-12	ALL
	4		W4473	5075R	24		SPARE	001, 003-099
	4		W4473	5189R	22		34-46-12	002
	4		W4473	5172R	22		34-58-11	115-199
	5		W4473	5075B	24		SPARE	001, 003-099
	5		W4473	5189B	22		34-46-12	002
	5		W4473	5172B	22		34-58-11	115-199
	6		W4473	5075Z			SPARE	001, 003-099
	6		W4473	5189Z			34-46-12	002
	6		W4473	5172Z			34-58-11	115-199
	7		W4473	5024R	24		22-15-11	ALL
	8		W4473	5024B	24		22-15-11	ALL
	9		W4473	5024Z			22-15-11	ALL
	10		W4473	5032R	24		22-32-11	ALL
	11		W4473	5032B	24		22-32-11	ALL
	12		W4473	5032Z			22-32-11	ALL
	13	UNUSED						001, 003-099
	13		W4473	0453	22		34-22-28	002
	13		W4473	0102	24		SPARE	115-199
	14		W4473	0103	22		SPARE	001, 003-099
	14		W4473	5240R	22		34-46-12	002
	14		W4473	0103	24		SPARE	115-199
	15		W4473	0106	22		SPARE	001, 003-099
	15		W4473	5240B	22		34-46-12	002
	15		W4473	0106	24		SPARE	115-199
	16	UNUSED						001, 003-099
	16		W4473	5240Z			34-46-12	002
	16		W4473	0109	24		SPARE	115-199
	17		W4473	5041R	24		34-46-12	ALL
	18		W4473	5041B	24		34-46-12	ALL
	19		W4473	5041Z			34-46-12	ALL
	20		W4473	5042Z			34-25-11	001, 003-099, 115-199
	20		W4473	5042Z			SPARE	002
	21		W4473	5042R	24		34-25-11	001, 003-099, 115-199
	21	VP	W4473	5042R	24		SPARE	002
	22		W4473	5042B	24		34-25-11	001, 003-099, 115-199
	22	VP	W4473	5042B	24		SPARE	002

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 68

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41349P		E002-03/ /		PLUG- (continued)				001-099
D41349P		E2-3/ /		PLUG- (continued)				115-199
	23	UNUSED						001-099
	23		W4473	5043Z			34-25-11	115-199
	24	UNUSED						001-099
	24		W4473	5043R	24		34-25-11	115-199
	25	UNUSED						001-099
	25		W4473	5043B	24		34-25-11	115-199
	26	UNUSED						001, 003-099
	26		W4473	5242R	22		34-46-12	002
	26		W4473	5011R	24		SPARE	115-199
	27	UNUSED						001, 003-099
	27		W4473	5242B	22		34-46-12	002
	27		W4473	5011B	24		SPARE	115-199
	28	UNUSED						001, 003-099
	28		W4473	5242Z			34-46-12	002
	28		W4473	5011Z			SPARE	115-199
	29	UNUSED						001, 003-099, 115-199
	29		W4473	8071Z			34-46-12	002
	30		W4473	0016	24		SPARE	001, 003-099
	30	UNUSED						002, 115-199
	31		W4473	0176	22		22-15-12	ALL
	32		W4473	0179	22		22-41-11	ALL
	33	UNUSED						001, 003-099
	33		W4473	8071R	22		34-46-12	002
	33		W4473	0195	22		SPARE	115-199
	34		W4473	5066R	24		34-22-38	ALL
	35		W4473	5066B	24		34-22-38	ALL
	36		W4473	5066Z			34-22-38	ALL
	37		W4473	0216	22		SPARE	001, 003-099, 115-199
	37	UNUSED						002
	38		W4473	0200	22		22-11-22	ALL
	39		W4473	0201	22		22-11-22	ALL
	40		W4473	0131	22		22-14-11	ALL
	41		W4473	0199	24		SPARE	001, 003-099
	41	UNUSED						002, 115-199
	42		W4473	0203	22		22-14-31	ALL
	43		W4473	0227	24		73-21-22	ALL
	44		W4473	0205	22		22-14-11	ALL
	45		W4473	0228	24		73-21-22	ALL
	46	UNUSED						001, 003-099, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 69

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41349P		E002-03/ /		PLUG- (continued)				001-099
D41349P		E2-3/ /		PLUG- (continued)				115-199
	46		W4473	8071B	22		34-46-12	002
	47		W4473	5067R	24		22-33-11	ALL
	48		W4473	5067B	24		22-33-11	ALL
	49		W4473	5067Z			22-33-11	ALL
	50		W4473	5071Z			22-33-11	ALL
	51		W4473	5071R	24		22-33-11	ALL
	52		W4473	5071B	24		22-33-11	ALL
	53		W4473	5091R	24		34-46-12	ALL
	54		W4473	5091B	24		34-46-12	ALL
	55		W4473	5091Z			34-46-12	ALL
	REF	VP	W4473	0016	22		SPARE	002
	REF	VP	W4473	0103	24		SPARE	002
	REF	VP	W4473	0106	22		SPARE	002
	REF	VP	W4473	0199	24		SPARE	002
	REF	VP	W4473	0216	22		SPARE	002
	REF	VP	W4473	5075B	24		SPARE	002
	REF	VP	W4473	5075R	24		SPARE	002
	REF	VP	W4473	5075Z			SPARE	002
D41350P		675/270/R50		PLUG-				001-099
	1	VG	W3802	0906	16		33-24-21	001-099
	=1	UNUSED						001-099
D41351J		E002-04/ /		RCPT				001-099
D41351J		E2-4/ /		RCPT				115-199
	1		W1177	5031R	24		22-21-21	ALL
	2		W1177	5031B	24		22-21-21	ALL
	3		W1177	5031Z			22-21-21	ALL
	4		W1177	0032	22		22-21-21	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W1177	5006R	24		34-61-25	ALL
	9		W1177	5006B	24		34-61-25	ALL
	10		W1177	5006Z			34-61-25	ALL
	11		W1177	5024R	24		34-21-21	ALL
	12		W1177	5024B	24		34-21-21	ALL
	13		W1177	FRBG			34-21-21	ALL
	14		W1177	5026R	24		34-21-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 70

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41351J		E002-04/ /		RCPT (continued)				001-099
D41351J		E2-4/ /		RCPT (continued)				115-199
	15		W1177	5026B	24		34-21-21	ALL
	16		W1177	FRAZ			34-21-21	ALL
	17		W1177	5049R	24		34-61-12	ALL
	18		W1177	5049B	24		34-61-12	ALL
	19		W1177	5049Z			34-61-12	ALL
	20		W1177	5033R	24		22-13-21	ALL
	21		W1177	5033B	24		22-13-21	ALL
	22		W1177	5033Z			22-13-21	ALL
	23		W1177	5030R	24		22-32-11	ALL
	24		W1177	5030B	24		22-32-11	ALL
	25		W1177	5030Z			22-32-11	ALL
	26		W1177	5029R	24		34-61-22	ALL
	27		W1177	5029B	24		34-61-22	ALL
	28		W1177	5029Z			34-61-22	ALL
	29		W1177	5027B	22		32-42-11	001-099
	29		W1177	5027B	24		32-42-11	115-199
	30		W1177	5027R	22		32-42-11	001-099
	30		W1177	5027R	24		32-42-11	115-199
	31		W1177	5027Z			32-42-11	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34		W1177	5034R	24		34-22-28	ALL
	35		W1177	5034B	24		34-22-28	ALL
	36		W1177	5034Z			34-22-28	ALL
	37	UNUSED						ALL
	38		W1177	0019	22		34-21-21	ALL
	39		W1177	0036	22		34-21-21	ALL
	40		W1177	0035	22		34-21-21	ALL
	41		W1177	5059R	24		22-21-11	ALL
	42		W1177	5059B	24		22-21-11	ALL
	43		W1177	5059Z			22-21-11	ALL
	44	UNUSED						001, 003-099, 115-199
	44		W1177	5096R	22		34-46-12	002
	45	UNUSED						001, 003-099, 115-199
	45		W1177	5096B	22		34-46-12	002
	46	UNUSED						001, 003-099, 115-199
	46		W1177	5096Z			34-46-12	002
	47	UNUSED						ALL
	48	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 71

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41351J		E002-04/ /		RCPT (continued)				001-099
D41351J		E2-4/ /		RCPT (continued)				115-199
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52		W1177	5032B	24		34-22-81	001-099
	52		W1177	5032B	24		34-22-83	115-199
	53		W1177	5032R	24		34-22-81	001-099
	53		W1177	5032R	24		34-22-83	115-199
	54		W1177	5032Z			34-22-81	001-099
	54		W1177	5032Z			34-22-83	115-199
	55	UNUSED						ALL
			W1177	0067	20		34-21-21	ALL
			W1177	0068	20		34-21-21	ALL
			W1177	5024Z			34-21-21	ALL
			W1177	5026Z			34-21-21	ALL
			W1177	FRAZ			34-21-21	ALL
			W1177	FRBG			34-21-21	ALL
D41351P		E002-04/ /		PLUG-				001-099
D41351P		E2-4/ /		PLUG-				115-199
	1		W4473	2501R	24		22-21-21	ALL
	2		W4473	2501B	24		22-21-21	ALL
	3		W4473	2501Z			22-21-21	ALL
	4		W4473	0041	22		22-21-21	ALL
	5	UNUSED						ALL
	6		W4473	0104	22		SPARE	001-099
	6		W4473	0104	24		SPARE	115-199
	7		W4473	0105	22		SPARE	001-099
	7		W4473	0105	24		SPARE	115-199
	8		W4473	5027R	24		34-61-25	ALL
	9		W4473	5027B	24		34-61-25	ALL
	10		W4473	5027Z			34-61-25	ALL
	11		W4473	5028R	24		34-21-21	ALL
	12		W4473	5028B	24		34-21-21	ALL
	13		W4473	5028Z			34-21-21	ALL
	14		W4473	5029R	24		34-21-21	ALL
	15		W4473	5029B	24		34-21-21	ALL
	16		W4473	5029Z			34-21-21	ALL
	17		W4473	5030R	24		34-61-12	ALL
	18		W4473	5030B	24		34-61-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 72

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41351P		E002-04/ /		PLUG- (continued)				001-099
D41351P		E2-4/ /		PLUG- (continued)				115-199
	19		W4473	5030Z			34-61-12	ALL
	20		W4473	5031R	24		22-13-21	ALL
	21		W4473	5031B	24		22-13-21	ALL
	22		W4473	5031Z			22-13-21	ALL
	23		W4473	5032R	24		22-32-11	ALL
	24		W4473	5032B	24		22-32-11	ALL
	25		W4473	5032Z			22-32-11	ALL
	26		W4473	5033R	24		34-61-22	ALL
	27		W4473	5033B	24		34-61-22	ALL
	28		W4473	5033Z			34-61-22	ALL
	29		W4473	5034B	22		32-42-11	001-099
	29		W4473	5034B	24		32-42-11	115-199
	30		W4473	5034R	22		32-42-11	001-099
	30		W4473	5034R	24		32-42-11	115-199
	31		W4473	5034Z			32-42-11	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34		W4473	5036R	24		34-22-28	ALL
	35		W4473	5036B	24		34-22-28	ALL
	36		W4473	5036Z			34-22-28	ALL
	37	UNUSED						001-099
	37		W4473	0106	24		SPARE	115-199
	38		W4473	0004	22		34-21-21	ALL
	39		W4473	0005	22		34-21-21	ALL
	40		W4473	0006	22		34-21-21	ALL
	41		W4473	5050R	24		22-21-11	ALL
	42		W4473	5050B	24		22-21-11	ALL
	43		W4473	5050Z			22-21-11	ALL
	44	UNUSED						001, 003-099
	44		W4473	5240R	22		34-46-12	002
	44		W4473	0138	22		SPARE	115-199
	45	UNUSED						001, 003-099
	45		W4473	5240B	22		34-46-12	002
	45		W4473	0139	22		SPARE	115-199
	46	UNUSED						001, 003-099
	46		W4473	5240Z			34-46-12	002
	46		W4473	0140	22		SPARE	115-199
	47	UNUSED						001-099
	47		W4473	0141	22		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 73

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41351P		E002-04/ /		PLUG- (continued)				001-099
D41351P		E2-4/ /		PLUG- (continued)				115-199
	48	UNUSED						001-099
	48		W4473	0142	22		SPARE	115-199
	49	UNUSED						001-099
	49		W4473	0143	22		SPARE	115-199
	50	UNUSED						001-099
	50		W4473	0144	22		SPARE	115-199
	51	UNUSED						001-099
	51		W4473	0145	22		SPARE	115-199
	52		W4473	5049B	24		34-22-81	001-099
	52		W4473	5049B	24		34-22-83	115-199
	53		W4473	5049R	24		34-22-81	001-099
	53		W4473	5049R	24		34-22-83	115-199
	54		W4473	5049Z			34-22-81	001-099
	54		W4473	5049Z			34-22-83	115-199
	55	UNUSED						ALL
D41352J		675/270/R50		RCPT-				001-099
	1	VY	W3802	0904	16		33-24-21	001-099
D41353J		E003-01/ /		RCPT				ALL
	1		W1265	5101R	24		22-24-11	ALL
	2		W1265	5101B	24		22-24-11	ALL
	3		W1265	5101Z			22-24-11	ALL
	4		W1265	5103B	24		22-21-11	ALL
	5		W1265	5103R	24		22-21-11	ALL
	6		W1265	5103Z			22-21-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 74

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41353J		E003-01/ /		RCPT (continued)				ALL
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
D41353P		E003-01/ /		PLUG				001-099
D41353P		E3-1/ /		PLUG				115-199
	1		W4473	5063R	24		22-24-11	ALL
	2		W4473	5063B	24		22-24-11	ALL
	3		W4473	5063Z			22-24-11	ALL
	4		W4473	5050B	24		22-21-11	ALL
	5		W4473	5050R	24		22-21-11	ALL
	6		W4473	5050Z			22-21-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 75

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41353P		E003-01/ /		PLUG (continued)				001-099
D41353P		E3-1/ /		PLUG (continued)				115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
D41354J		AC0880/190/		RCPT				ALL
	1		W4230	0001	22		73-33-11	ALL
	2		W4230	0014	20		74-31-11	ALL
	3		W4230	0013	20		74-31-11	ALL
	4		W4230	2501R	22		77-12-11	ALL
	5		W4230	2501B	22		77-12-11	ALL
	6	UNUSED						ALL
	7		W4230	2502R	22		77-12-21	ALL
	8		W4230	2502B	22		77-12-21	ALL
	9	UNUSED						ALL
	10		W4230	0003	22		79-33-11	ALL
	11		W4230	0005	22		79-35-11	ALL
	12		W4230	0016	20		80-11-11	ALL
	13		W4230	0017	20		80-11-11	ALL
	14		W4230	0018	20		80-11-11	ALL
	15		W4230	1002	20		74-31-11	ALL
	16		W4230	0028	22		SPARE	ALL
	17		W4230	0027	22		SPARE	ALL
	18		W4230	0029	22		SPARE	ALL
	19		W4230	0026	20		SPARE	ALL
	20		W4230	0004	22		SPARE	001-099
	20	UNUSED						115-199
	21		W4230	0002	22		73-34-11	ALL
	22	4H	W4230	4501G	20		77-21-11	ALL
	23	4L	W4230	4501W	20		77-21-11	ALL
	24	UNUSED						ALL
	25		W4230	0007R	20		26-11-11	ALL
	26	UNUSED						ALL
	27		W4230	0008R	20		26-11-11	ALL
	28		W4230	0011	20		26-13-11	001-099
	28		W4230	0011	22		26-13-11	115-199
	29	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 76

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41354J		AC0880/190/		RCPT (continued)				ALL
	30		W4230	0022	22		SPARE	ALL
	31		W4230	0023	20		SPARE	ALL
	32		W4230	0015	22		78-34-11	ALL
	33		W4230	0006R	20		26-11-11	ALL
	34		W4230	0012	20		26-13-11	001-099
	34		W4230	0012	22		26-13-11	115-199
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	18	W4230	2504B	18		30-34-21	ALL
	38	18	W4230	2504R	18		30-34-21	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	S/R		W4230	1002Z			74-31-11	ALL
	S/R		W4230	2501Z			77-12-11	ALL
	S/R		W4230	2502Z			77-12-21	ALL
	S/R		W4230	2504Z			30-34-21	ALL
	S/R		W4230	4501Z			77-21-11	ALL
	S/R		W4230	YAAA			80-11-11	ALL
D41354P		AC0880/ /		PLUG				ALL
	1		W3380	4251R	20		73-33-11	ALL
	2		W3380	2503B	20		74-31-11	ALL
	3		W3380	2503R	20		74-31-11	ALL
	4		W3380	2501R	20		77-12-11	ALL
	5		W3380	2501B	20		77-12-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 77

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41354P		AC0880/ /		PLUG (continued)				ALL
	6	UNUSED						ALL
	7		W3380	2502R	20		77-12-21	ALL
	8		W3380	2502B	20		77-12-21	ALL
	9	UNUSED						ALL
	10		W3380	4251G	20		79-33-11	ALL
	11		W3380	4251B	20		79-35-11	ALL
	12		W3380	3501B	20		80-11-11	ALL
	13		W3380	3501R	20		80-11-11	ALL
	14		W3380	3501Y	20		80-11-11	ALL
	15		W3380	1001	20		74-31-11	ALL
	16		W3380	0012	20		SPARE	ALL
	17		W3380	2504B	20		SPARE	ALL
	18		W3380	2504R	20		SPARE	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W3380	4251Y	20		73-34-11	ALL
	22	TC	W3380	4501G	20		77-21-11	ALL
	23	TD	W3380	4501W	20		77-21-11	ALL
	24	UNUSED						ALL
	25		W3380	0018R	20		26-11-11	ALL
	26	UNUSED						ALL
	27		W3380	0020R	20		26-11-11	ALL
	28	18	W3380	0021	18		26-13-11	ALL
	29	UNUSED						ALL
	30		W3380	2505B	20		SPARE	ALL
	31		W3380	2505R	20		SPARE	ALL
	32		W3380	0026	20		78-34-11	ALL
	33		W3380	0019R	20		26-11-11	ALL
	34	18	W3380	0022	18		26-13-11	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	18	W3380	2506B	18		30-34-21	ALL
	38	18	W3380	2506R	18		30-34-21	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 78

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41354P		AC0880/ /		PLUG (continued)				ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	S/R		W3380	1001Z			74-31-11	ALL
	S/R		W3380	2501Z			77-12-11	ALL
	S/R		W3380	2502Z			77-12-21	ALL
	S/R		W3380	2503Z			74-31-11	ALL
	S/R		W3380	2504Z			SPARE	ALL
	S/R		W3380	2505Z			SPARE	ALL
	S/R		W3380	2506Z			30-34-21	ALL
	S/R		W3380	3501Z			80-11-11	ALL
	S/R		W3380	4251Z			79-35-11	ALL
	S/R		W3380	4501Z			77-21-11	ALL
	S/R		W3380	YAAA			80-11-11	ALL
D41355J		E003-02/ /		RCPT-				001-099
D41355J		E3-2/ /		RCPT-				115-199
	1		W1423	0036	24		34-53-21	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1423	5008R	24		34-61-13	ALL
	5		W1423	5008B	24		34-61-13	ALL
	6		W1423	FRAH			34-61-13	ALL
	7		W1423	5009R	24		34-22-29	ALL
	8		W1423	5009B	24		34-22-29	ALL
	9		W1423	FRAI			34-22-29	ALL
	10		W1423	5003R	24		34-53-21	ALL
	11		W1423	5003B	24		34-53-21	ALL
	12		W1423	FRAC			34-53-21	ALL
	13		W1423	2001R	24		23-51-12	ALL
	14		W1423	2001B	24		23-51-12	ALL
	15		W1423	0047	24		23-51-12	ALL
	16		W1423	0049	22		23-51-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 79

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41355J		E003-02/ /		RCPT- (continued)				001-099
D41355J		E3-2/ /		RCPT- (continued)				115-199
	17		W1423	5012R	24		22-41-11	ALL
	18		W1423	5012B	24		22-41-11	ALL
	19		W1423	FRAK			22-41-11	ALL
	20		W1423	0051	24		34-55-21	ALL
	21	UNUSED						ALL
	22	UNUSED						001-099
	22		W1423	0113	24		34-53-21	115-199
	23		W1423	0096	24		32-61-12	001-099
	23		W1423	0096	22		32-61-12	115-199
	24		W1423	0221	24		23-51-14	001-099
	24	UNUSED						115-199
	25		W1423	2201R	24		23-21-11	001-099
	25	UNUSED						115-199
	26		W1423	2201B	24		23-21-11	001-099
	26	UNUSED						115-199
	27		W1423	5007R	24		34-55-21	ALL
	28		W1423	5007B	24		34-55-21	ALL
	29		W1423	FRAG			34-55-21	ALL
	30		W1423	0046	24		34-61-23	ALL
	31		W1423	5016R	24		22-41-11	ALL
	32		W1423	5016B	24		22-41-11	ALL
	33		W1423	FRAP			22-41-11	ALL
	34		W1423	0207	22		23-51-14	001-099
	34	UNUSED						115-199
	35	UNUSED						ALL
	36		W1423	0091	22		32-61-12	ALL
	37		W1423	0073	22		22-14-31	001-099
	37		W1423	1002	22		22-14-31	115-199
	38		W1423	0097	24		32-61-12	ALL
	39		W1423	0094	22		32-61-12	ALL
	40		W1423	2702R	24		23-51-14	001-099
	40	UNUSED						115-199
	41		W1423	2702B	24		23-51-14	001-099
	41	UNUSED						115-199
	42		W1423	2702Z			23-51-14	001-099
	42	UNUSED						115-199
	43		W1423	2703R	24		23-51-14	001-099
	43	UNUSED						115-199
	44		W1423	2703B	24		23-51-14	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 80

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41355J		E003-02/ /		RCPT- (continued)				001-099
D41355J		E3-2/ /		RCPT- (continued)				115-199
	44	UNUSED						115-199
	45		W1423	2703Z			23-51-14	001-099
	45	UNUSED						115-199
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49		W1423	0030	24		31-31-61	001-099
	49	UNUSED						115-199
	50		W1423	2203R	24		23-51-12	001-099
	50	UNUSED						115-199
	51		W1423	2203B	24		23-51-12	001-099
	51	UNUSED						115-199
	52		W1423	0235	22		23-51-12	001-099
	52	UNUSED						115-199
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	DED		W1423	1002Z			22-14-31	115-199
			W1423	0033	20		34-53-21	ALL
			W1423	0057	20		34-55-21	ALL
			W1423	0058	20		34-61-13	ALL
			W1423	0059	20		34-22-29	ALL
			W1423	0062	20		22-41-11	ALL
			W1423	0066	20		22-41-11	ALL
			W1423	5003Z			34-53-21	ALL
			W1423	5007Z			34-55-21	ALL
			W1423	5008Z			34-61-13	ALL
			W1423	5009Z			34-22-29	ALL
			W1423	5012Z			22-41-11	ALL
			W1423	5016Z			22-41-11	ALL
			W1423	FRAC			34-53-21	ALL
			W1423	FRAG			34-55-21	ALL
			W1423	FRAH			34-61-13	ALL
			W1423	FRAI			34-22-29	ALL
			W1423	FRAK			22-41-11	ALL
			W1423	FRAP			22-41-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 81

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41355P D41355P		E003-02/ / E3-2/ /		PLUG- PLUG-				001-099 115-199
	1		W4473	0149	24		34-53-21	ALL
	2	UNUSED						001-099
	2		W4473	5039R	24		SPARE	115-199
	3	UNUSED						001-099
	3		W4473	5039B	24		SPARE	115-199
	4		W4473	5006R	24		34-61-13	ALL
	5		W4473	5006B	24		34-61-13	ALL
	6		W4473	5006Z			34-61-13	ALL
	7		W4473	5007R	24		34-22-29	ALL
	8		W4473	5007B	24		34-22-29	ALL
	9		W4473	5007Z			34-22-29	ALL
	10		W4473	5012R	24		34-53-21	ALL
	11		W4473	5012B	24		34-53-21	ALL
	12		W4473	5012Z			34-53-21	ALL
	13		W4473	3501R	24		23-51-12	ALL
	14		W4473	3501B	24		23-51-12	ALL
	15		W4473	3501Y	24		23-51-12	ALL
	16		W4473	3501Z			23-51-12	ALL
	17		W4473	5018R	24		22-41-11	ALL
	18		W4473	5018B	24		22-41-11	ALL
	19		W4473	5018Z			22-41-11	ALL
	20		W4473	0066	24		34-55-21	ALL
	21	UNUSED						001-099
	21		W4473	5039Z			SPARE	115-199
	22	UNUSED						001-099
	22		W4473	0101	24		34-53-21	115-199
	23		W4473	0217	24		32-61-12	001-099
	23		W4473	0217	22		32-61-12	115-199
	24		W4473	0281	24		23-51-14	001-099
	24	UNUSED						115-199
	25		W4473	2009R	24		23-21-11	001-099
	25		W4473	0097	22		SPARE	115-199
	26		W4473	2009B	24		23-21-11	001-099
	26		W4473	0107	22		SPARE	115-199
	27		W4473	5026R	24		34-55-21	ALL
	28		W4473	5026B	24		34-55-21	ALL
	29		W4473	5026Z			34-55-21	ALL
	30		W4473	0086	24		34-61-23	ALL
	31		W4473	5035R	24		22-41-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 82

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41355P		E003-02/ /		PLUG- (continued)				001-099
D41355P		E3-2/ /		PLUG- (continued)				115-199
	32		W4473	5035B	24		22-41-11	ALL
	33		W4473	5035Z			22-41-11	ALL
	34		W4473	0282	20		23-51-14	001-099
	34	UNUSED						115-199
	35	UNUSED						001-099
	35		W4473	0120	24		SPARE	115-199
	36		W4473	0186	22		32-61-12	ALL
	37		W4473	0193	22		22-14-31	ALL
	38		W4473	0188	24		32-61-12	ALL
	39		W4473	0187	22		32-61-12	ALL
	40		W4473	5084R	24		23-51-14	001-099
	40	UNUSED						115-199
	41		W4473	5084B	24		23-51-14	001-099
	41	UNUSED						115-199
	42		W4473	5084Z			23-51-14	001-099
	42	UNUSED						115-199
	43		W4473	5085R	24		23-51-14	001-099
	43	UNUSED						115-199
	44		W4473	5085B	24		23-51-14	001-099
	44	UNUSED						115-199
	45		W4473	5085Z			23-51-14	001-099
	45	UNUSED						115-199
	46		W4473	0341	24		SPARE	001-099
	46		W4473	5093R	24		SPARE	115-199
	47	UNUSED						001-099
	47		W4473	5093B	24		SPARE	115-199
	48	UNUSED						001-099
	48		W4473	5093Z			SPARE	115-199
	49		W4473	0078	24		31-31-61	001-099
	49	UNUSED						115-199
	50		W4473	5086R	24		23-51-12	001-099
	50	UNUSED						115-199
	51		W4473	5086B	24		23-51-12	001-099
	51	UNUSED						115-199
	52		W4473	5086Z			23-51-12	001-099
	52	UNUSED						115-199
	53	UNUSED						001-099
	53		W4473	5094R	24		SPARE	115-199
	54	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 83

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41355P		E003-02/ /		PLUG- (continued)				001-099
D41355P		E3-2/ /		PLUG- (continued)				115-199
	54		W4473	5094B	24		SPARE	115-199
	55	UNUSED						001-099
	55		W4473	5094Z			SPARE	115-199
D41358J		AD0880/ /		RCPT				ALL
	1		W4234	0001	22		73-33-11	ALL
	2		W4234	0016	20		74-31-21	ALL
	3		W4234	0015	20		74-31-21	ALL
	4		W4234	2501R	22		77-12-11	ALL
	5		W4234	2501B	22		77-12-11	ALL
	6	UNUSED						ALL
	7		W4234	2502R	22		77-12-21	ALL
	8		W4234	2502B	22		77-12-21	ALL
	9	UNUSED						ALL
	10		W4234	0003	22		79-33-11	ALL
	11		W4234	0004	22		79-35-11	ALL
	12		W4234	0018	20		80-11-21	ALL
	13		W4234	0019	20		80-11-21	ALL
	14		W4234	0020	20		80-11-21	ALL
	15		W4234	1002	20		74-31-21	ALL
	16		W4234	2503R	22		SPARE	ALL
	17		W4234	2503B	22		SPARE	ALL
	18		W4234	2503Z			SPARE	ALL
	19		W4234	0011	22		SPARE	ALL
	20		W4234	0012	22		SPARE	ALL
	21		W4234	0002	22		73-34-11	ALL
	22		W4234	4501G	20		77-21-11	ALL
	23		W4234	4501W	20		77-21-11	ALL
	24	UNUSED						ALL
	25		W4234	0006R	20		26-11-21	ALL
	26	UNUSED						ALL
	27		W4234	0007R	20		26-11-21	ALL
	28		W4234	0008	20		26-13-21	ALL
	29	UNUSED						ALL
	30		W4234	0025	22		SPARE	ALL
	31		W4234	0026	22		SPARE	ALL
	32		W4234	0017	22		78-34-21	ALL
	33		W4234	0005R	20		26-11-21	ALL
	34		W4234	0009	20		26-13-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 84

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41358J		AD0880/ /		RCPT (continued)				ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	18	W4234	2504B	18		30-34-22	ALL
	38	18	W4234	2504R	18		30-34-22	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	S/R		W4234	1002Z			74-31-21	ALL
	S/R		W4234	2501Z			77-12-11	ALL
	S/R		W4234	2502Z			77-12-21	ALL
	S/R		W4234	2504Z			30-34-22	ALL
	S/R		W4234	4501Z			77-21-11	ALL
	S/R		W4234	YAAA			80-11-21	ALL
D41358P		AD0880/ /		PLUG				ALL
	1		W3480	4251R	20		73-33-11	ALL
	2		W3480	2503B	20		74-31-21	ALL
	3		W3480	2503R	20		74-31-21	ALL
	4		W3480	2501R	20		77-12-11	ALL
	5		W3480	2501B	20		77-12-11	ALL
	6	UNUSED						ALL
	7		W3480	2502R	20		77-12-21	ALL
	8		W3480	2502B	20		77-12-21	ALL
	9	UNUSED						ALL
	10		W3480	4251G	20		79-33-11	ALL
	11		W3480	4251B	20		79-35-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 85

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41358P		AD0880/ /		PLUG (continued)				ALL
	12		W3480	3501B	20		80-11-21	ALL
	13		W3480	3501R	20		80-11-21	ALL
	14		W3480	3501Y	20		80-11-21	ALL
	15		W3480	1001	20		74-31-21	ALL
	16		W3480	0012	20		SPARE	ALL
	17		W3480	2504B	20		SPARE	ALL
	18		W3480	2504R	20		SPARE	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W3480	4251Y	20		73-34-11	ALL
	22	TC	W3480	4501G	20		77-21-11	ALL
	23	TD	W3480	4501W	20		77-21-11	ALL
	24	UNUSED						ALL
	25		W3480	0018R	20		26-11-21	ALL
	26	UNUSED						ALL
	27		W3480	0020R	20		26-11-21	ALL
	28	18	W3480	0021	18		26-13-21	ALL
	29	UNUSED						ALL
	30		W3480	2505B	20		SPARE	ALL
	31		W3480	2505R	20		SPARE	ALL
	32		W3480	0027	20		78-34-21	ALL
	33		W3480	0019R	20		26-11-21	ALL
	34	18	W3480	0022	18		26-13-21	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	18	W3480	2506B	18		30-34-22	ALL
	38	18	W3480	2506R	18		30-34-22	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 86

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41358P		AD0880/ /		PLUG (continued)				ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	S/R		W3480	1001Z			74-31-21	ALL
	S/R		W3480	2501Z			77-12-11	ALL
	S/R		W3480	2502Z			77-12-21	ALL
	S/R		W3480	2503Z			74-31-21	ALL
	S/R		W3480	2504Z			SPARE	ALL
	S/R		W3480	2505Z			SPARE	ALL
	S/R		W3480	2506Z			30-34-22	ALL
	S/R		W3480	3501Z			80-11-21	ALL
	S/R		W3480	4251Z			79-35-11	ALL
	S/R		W3480	4501Z			77-21-11	ALL
	S/R		W3480	YAAA			80-11-21	ALL
D41361J		E3-3/ /		RCPT-				ALL
	1		W1433	5003R	24		34-53-11	ALL
	2		W1433	5003B	24		34-53-11	ALL
	3		W1433	FRAC			34-53-11	ALL
	4		W1433	0295	24		31-31-62	001-099
	4	UNUSED						115-199
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						001-099
	8		W1433	5025B	24		31-31-22	115-199
	9	UNUSED						001-099
	9		W1433	5025R	24		31-31-22	115-199
	10	UNUSED						001-099
	10		W1433	FRBV			31-31-22	115-199
	11	UNUSED						001, 003-099, 115-199
	11		W1433	8127	22		34-25-12	002
	12	UNUSED						001, 003-099, 115-199
	12		W1433	8128	22		34-25-12	002
	13	UNUSED						ALL
	14		W1433	0145	24		31-31-61	001-099
	14		W1433	0145	24		31-31-32	115-199
	15		W1433	0146	24		31-31-61	001-099
	15	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 87

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41361J		E3-3/ /		RCPT- (continued)				ALL
	16	UNUSED						001-099
	16		W1433	FRBD			SPARE	115-199
	17		W1433	5039R	24		31-31-43	001-009
	17	UNUSED						010-099
	17		W1433	5040R	24		SPARE	115-199
	18		W1433	5039B	24		31-31-43	001-009
	18	UNUSED						010-099
	18		W1433	5040B	24		SPARE	115-199
	19		W1433	FRDH			31-31-43	001-009
	19	UNUSED						010-099
	19		W1433	5043R	24		31-31-22	115-199
	20	UNUSED						001-099
	20		W1433	5043B	24		31-31-22	115-199
	21		W1433	5074R	24		31-31-43	001-099
	21		W1433	FRBG			31-31-22	115-199
	22		W1433	5074B	24		31-31-43	001-099
	22		W1433	FRBH			31-31-22	115-199
	23		W1433	FRDF			31-31-43	001-099
	23		W1433	5044R	24		31-31-22	115-199
	24	UNUSED						001-009
	24		W1433	0580	22		31-31-61	010-099
	24		W1433	5044B	24		31-31-22	115-199
	25		W1433	5075R	24		31-31-43	001-099
	25		W1433	FRBI			31-31-22	115-199
	26		W1433	5075B	24		31-31-43	001-099
	26		W1433	5045R	24		31-31-22	115-199
	27		W1433	FRDE			31-31-43	001-099
	27		W1433	5045B	24		31-31-22	115-199
	28		W1433	5072R	24		31-31-43	001-099
	28		W1433	5051R	24		31-31-22	115-199
	29		W1433	5072B	24		31-31-43	001-099
	29		W1433	5051B	24		31-31-22	115-199
	30		W1433	FRDJ			31-31-43	001-099
	30		W1433	FRBP			31-31-22	115-199
	31		W1433	0215	24		31-31-62	001-099
	31		W1433	0186	24		31-31-32	115-199
	32		W1433	0222	24		31-31-62	001-099
	32		W1433	0192	24		31-31-32	115-199
	33		W1433	0230	24		31-31-62	001-099
	33		W1433	0193	24		31-31-32	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 88

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41361J		E3-3/ /		RCPT- (continued)				ALL
	34		W1433	0350	24		31-31-62	001-099
	34		W1433	0194	24		31-31-32	115-199
	35		W1433	0296	24		31-31-62	001-099
	35		W1433	0195	24		31-31-32	115-199
	36		W1433	5021R	24		31-31-43	001-099
	36		W1433	0206	22		31-31-32	115-199
	37		W1433	5021B	24		31-31-43	001-099
	37		W1433	0202	22		31-31-32	115-199
	38		W1433	FRDG			31-31-43	001-099
	38		W1433	0204	22		31-31-32	115-199
	39		W1433	0216	24		31-31-62	001-099
	39		W1433	0207	24		31-31-32	115-199
	40		W1433	0126	24		31-31-62	001-099
	40		W1433	0227	24		31-31-32	115-199
	41		W1433	0187	24		31-31-62	001-099
	41		W1433	0228	24		31-31-32	115-199
	42		W1433	0191	24		31-31-62	001-099
	42		W1433	0229	24		31-31-32	115-199
	43		W1433	0206	24		31-31-62	001-099
	43		W1433	0210	22		31-31-32	115-199
	44		W1433	5058R	20		31-31-44	001-099
	44		W1433	5058R	24		31-31-23	115-199
	45		W1433	5058B	20		31-31-44	001-099
	45		W1433	5058B	24		31-31-23	115-199
	46		W1433	5058Z			31-31-44	001-099
	46		W1433	5058Z			31-31-23	115-199
	47	UNUSED						ALL
	48	UNUSED						ALL
	49		W1433	0297	22		31-31-63	001-099
	49	UNUSED						115-199
	50		W1433	0298	22		31-31-63	001-099
	50	UNUSED						115-199
	51		W1433	0299	22		31-31-63	001-099
	51	UNUSED						115-199
	52		W1433	5054R	24		31-31-42	001-099
	52	UNUSED						115-199
	53		W1433	5054B	24		31-31-42	001-099
	53	UNUSED						115-199
	54		W1433	FRDA			31-31-42	001-099
	54	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 89

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41361J		E3-3/ /		RCPT- (continued)				ALL
	55	UNUSED						ALL
			W1433	0411	20		31-31-43	001-009
			W1433	5039Z			31-31-43	001-009
			W1433	FRDH			31-31-43	001-009
			W1433	0405	20		31-31-42	001-099
			W1433	0408	20		31-31-43	001-099
			W1433	0409	20		31-31-43	001-099
			W1433	0410	20		31-31-43	001-099
			W1433	0413	20		31-31-43	001-099
			W1433	5021Z			31-31-43	001-099
			W1433	5054Z			31-31-42	001-099
			W1433	5072Z			31-31-43	001-099
			W1433	5074Z			31-31-43	001-099
			W1433	5075Z			31-31-43	001-099
			W1433	FRDA			31-31-42	001-099
			W1433	FRDE			31-31-43	001-099
			W1433	FRDF			31-31-43	001-099
			W1433	FRDG			31-31-43	001-099
			W1433	FRDJ			31-31-43	001-099
			W1433	0033	20		34-53-11	ALL
			W1433	5003Z			34-53-11	ALL
			W1433	FRAC			34-53-11	ALL
			W1433	0160	20		SPARE	115-199
			W1433	0163	20		31-31-22	115-199
			W1433	0164	20		31-31-22	115-199
			W1433	0165	20		31-31-22	115-199
			W1433	0171	20		31-31-22	115-199
			W1433	0197	20		31-31-22	115-199
			W1433	5025Z			31-31-22	115-199
			W1433	5040Z			SPARE	115-199
			W1433	5043Z			31-31-22	115-199
			W1433	5044Z			31-31-22	115-199
			W1433	5045Z			31-31-22	115-199
			W1433	5051Z			31-31-22	115-199
			W1433	FRBD			SPARE	115-199
			W1433	FRBG			31-31-22	115-199
			W1433	FRBH			31-31-22	115-199
			W1433	FRBI			31-31-22	115-199
			W1433	FRBP			31-31-22	115-199
			W1433	FRBV			31-31-22	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 90

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41361P		E003-03/ /		PLUG-				001-099
D41361P		E3-3/ /		PLUG-				115-199
	1		W4473	5010R	24		34-53-11	ALL
	2		W4473	5010B	24		34-53-11	ALL
	3		W4473	5010Z			34-53-11	ALL
	4		W4473	0102	24		31-31-62	001-099
	4		W4473	0102	24		SPARE	115-199
	5	UNUSED						ALL
	6	UNUSED						001-099
	6		W4473	0109	24		SPARE	115-199
	7	UNUSED						ALL
	8	UNUSED						001-099
	8		W4473	5019B	24		31-31-22	115-199
	9	UNUSED						001-099
	9		W4473	5019R	24		31-31-22	115-199
	10	UNUSED						001-099
	10		W4473	5019Z			31-31-22	115-199
	11	UNUSED						001, 003-099, 115-199
	11		W4473	0347	22		34-25-12	002
	12	UNUSED						001, 003-099, 115-199
	12		W4473	0348	22		34-25-12	002
	13	UNUSED						ALL
	14		W4473	0077	24		31-31-61	001-099
	14		W4473	0077	24		31-31-32	115-199
	15		W4473	0078	24		31-31-61	001-099
	15		W4473	0078	24		SPARE	115-199
	16	UNUSED						001-099
	16		W4473	5044Z			SPARE	115-199
	17		W4473	5132R	24		31-31-43	001-009
	17		W4473	5132R	24		SPARE	010-099
	17		W4473	5044R	24		SPARE	115-199
	18		W4473	5132B	24		31-31-43	001-009
	18		W4473	5132B	24		SPARE	010-099
	18		W4473	5044B	24		SPARE	115-199
	19		W4473	5132Z			31-31-43	001-009
	19		W4473	5132Z			SPARE	010-099
	19		W4473	5045R	24		31-31-22	115-199
	20	UNUSED						001-099
	20		W4473	5045B	24		31-31-22	115-199
	21		W4473	5134R	24		31-31-43	001-099
	21		W4473	5045Z			31-31-22	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 91

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41361P		E003-03/ /		PLUG- (continued)				001-099
D41361P		E3-3/ /		PLUG- (continued)				115-199
	22	UNUSED	W4473	5134B	24		31-31-43	001-099
	22		W4473	5046Z			31-31-22	115-199
	23		W4473	5134Z			31-31-43	001-099
	23		W4473	5046R	24		31-31-22	115-199
	24							001-009
	24		W4473	0265	22		31-31-61	010-099
	24		W4473	5046B	24		31-31-22	115-199
	25		W4473	5047R	24		31-31-43	001-099
	25		W4473	5047Z			31-31-22	115-199
	26		W4473	5047B	24		31-31-43	001-099
	26		W4473	5047R	24		31-31-22	115-199
	27		W4473	5047Z			31-31-43	001-099
	27		W4473	5047B	24		31-31-22	115-199
	28		W4473	5048R	24		31-31-43	001-099
	28		W4473	5048R	24		31-31-22	115-199
	29		W4473	5048B	24		31-31-43	001-099
	29		W4473	5048B	24		31-31-22	115-199
	30		W4473	5048Z			31-31-43	001-099
	30		W4473	5048Z			31-31-22	115-199
	31		W4473	0151	24		31-31-62	001-099
	31		W4473	0151	24		31-31-32	115-199
	32		W4473	0155	24		31-31-62	001-099
	32		W4473	0155	24		31-31-32	115-199
	33		W4473	0156	24		31-31-62	001-099
	33		W4473	0156	24		31-31-32	115-199
	34		W4473	0157	24		31-31-62	001-099
	34		W4473	0157	24		31-31-32	115-199
	35		W4473	0158	24		31-31-62	001-099
	35		W4473	0158	24		31-31-32	115-199
	36		W4473	5133R	24		31-31-43	001-099
	36		W4473	0159	22		31-31-32	115-199
	37		W4473	5133B	24		31-31-43	001-099
	37		W4473	0160	22		31-31-32	115-199
	38		W4473	5133Z			31-31-43	001-099
	38		W4473	0161	22		31-31-32	115-199
	39		W4473	0162	24		31-31-62	001-099
	39		W4473	0162	24		31-31-32	115-199
	40		W4473	0163	24		31-31-62	001-099
	40		W4473	0163	24		31-31-32	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 92

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41361P		E003-03/ /		PLUG- (continued)				001-099
D41361P		E3-3/ /		PLUG- (continued)				115-199
	41		W4473	0164	24		31-31-62	001-099
	41		W4473	0164	24		31-31-32	115-199
	42		W4473	0165	24		31-31-62	001-099
	42		W4473	0165	24		31-31-32	115-199
	43		W4473	0159	24		31-31-62	001-099
	43		W4473	0166	22		31-31-32	115-199
	44		W4473	5053R	20		31-31-44	001-099
	44		W4473	5053R	24		31-31-23	115-199
	45		W4473	5053B	20		31-31-44	001-099
	45		W4473	5053B	24		31-31-23	115-199
	46		W4473	5053Z			31-31-44	001-099
	46		W4473	5053Z			31-31-23	115-199
	47	UNUSED						001-099
	47		W4473	2008B	24		SPARE	115-199
	48	UNUSED						001-099
	48		W4473	2008R	24		SPARE	115-199
	49		W4473	5125R	22		31-31-63	001-099
	49	UNUSED						115-199
	50		W4473	5125B	22		31-31-63	001-099
	50	UNUSED						115-199
	51		W4473	5125Z			31-31-63	001-099
	51	UNUSED						115-199
	52		W4473	5131R	24		31-31-42	001-099
	52	UNUSED						115-199
	53		W4473	5131B	24		31-31-42	001-099
	53	UNUSED						115-199
	54		W4473	5131Z			31-31-42	001-099
	54	UNUSED						115-199
	55	UNUSED						ALL
D41363J		E003-04/ /		RCPT				ALL
	1		W1280	0192	24		31-51-21	ALL
	2		W1280	0193	24		31-51-21	ALL
	3		W1280	0076	24		31-51-33	ALL
	4		W1280	0081	24		31-51-41	ALL
	5		W1280	2503Z			31-31-63	001-099
	5	UNUSED						115-199
	6		W1280	0376	24		32-61-12	001-099
	6		W1280	0376	22		32-61-12	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 93

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41363J		E003-04/ /		RCPT (continued)				ALL
	7		W1280	0089	24		32-61-12	ALL
	8		W1280	0090	22		32-61-21	ALL
	9		W1280	0106	22		32-61-21	ALL
	10		W1280	0092	22		32-61-21	ALL
	11		W1280	5001R	24		34-61-24	ALL
	12		W1280	5001B	24		34-61-24	ALL
	13		W1280	FRAA			34-61-24	ALL
	14		W1280	2506B	24		23-41-11	001-099
	14		W1280	3503B	24		23-41-11	115-199
	15		W1280	2506R	24		23-41-11	001-099
	15		W1280	3503R	24		23-41-11	115-199
	16		W1280	0374	24		32-61-12	001-099
	16		W1280	3503Y	24		23-41-11	115-199
	17		W1280	2506Z			23-41-11	001-099
	17		W1280	3503Z			23-41-11	115-199
	18	UNUSED						ALL
	19		W1280	2503R	22		31-31-63	001-099
	19	UNUSED						115-199
	20		W1280	0080	24		31-51-33	ALL
	21		W1280	5004R	20		31-31-44	001-099
	21		W1280	5004R	24		31-31-23	115-199
	22		W1280	5004B	20		31-31-44	001-099
	22		W1280	5004B	24		31-31-23	115-199
	23		W1280	5004Z			31-31-44	001-099
	23		W1280	5004Z			31-31-23	115-199
	24		W1280	2503B	22		31-31-63	001-099
	24	UNUSED						115-199
	25		W1280	0051	22		32-61-12	ALL
	26		W1280	0032	24		32-61-12	ALL
	27		W1280	0050	24		32-61-12	ALL
	28	UNUSED						ALL
	29		W1280	0038	22		32-61-12	ALL
	30		W1280	0036	22		32-61-12	ALL
	31		W1280	0373	24		32-61-12	001-099
	31		W1280	0373	22		32-61-11	115-199
	32		W1280	0374	22		32-61-11	115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 94

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41363J		E003-04/ /		RCPT (continued)				ALL
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
			W1280	0361	22		34-61-24	ALL
			W1280	5001Z			34-61-24	ALL
			W1280	FRAA			34-61-24	ALL
D41363P		E003-04/ /		PLUG-				001-099
D41363P		E3-4/ /		PLUG-				115-199
	1		W4473	0092	24		31-51-21	ALL
	2		W4473	0093	24		31-51-21	ALL
	3		W4473	0094	24		31-51-33	ALL
	4		W4473	0095	24		31-51-41	ALL
	5		W4473	5125Z			31-31-63	001-099
	5		W4473	0110	24		SPARE	115-199
	6		W4473	0217	24		32-61-12	001-099
	6		W4473	0217	22		32-61-12	115-199
	7		W4473	0188	24		32-61-12	001-099
	7		W4473	0119	24		32-61-12	115-199
	8		W4473	0087	22		32-61-21	001-099
	8		W4473	0087	24		32-61-21	115-199
	9		W4473	0088	22		32-61-21	001-099
	9		W4473	0088	24		32-61-21	115-199
	10		W4473	0089	22		32-61-21	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 95

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41363P		E003-04/ /		PLUG- (continued)				001-099
D41363P		E3-4/ /		PLUG- (continued)				115-199
	10		W4473	0089	24		32-61-21	115-199
	11		W4473	5004R	24		34-61-24	ALL
	12		W4473	5004B	24		34-61-24	ALL
	13		W4473	5004Z			34-61-24	ALL
	14		W4473	2507B	24		23-41-11	001-099
	14		W4473	3505B	24		23-41-11	115-199
	15		W4473	2507R	24		23-41-11	001-099
	15		W4473	3505R	24		23-41-11	115-199
	16		W4473	0221	24		32-61-12	001-099
	16		W4473	3505Y	24		23-41-11	115-199
	17		W4473	2507Z			23-41-11	001-099
	17		W4473	3505Z			23-41-11	115-199
	18		W4473	0137	24		SPARE	001-099
	18	UNUSED						115-199
	19		W4473	5125R	22		31-31-63	001-099
	19		W4473	0137	24		SPARE	115-199
	20		W4473	0146	24		31-51-33	ALL
	21		W4473	5053R	20		31-31-44	001-099
	21		W4473	5053R	24		31-31-23	115-199
	22		W4473	5053B	20		31-31-44	001-099
	22		W4473	5053B	24		31-31-23	115-199
	23		W4473	5053Z			31-31-44	001-099
	23		W4473	5053Z			31-31-23	115-199
	24		W4473	5125B	22		31-31-63	001-099
	24	UNUSED						115-199
	25		W4473	0190	22		32-61-12	ALL
	26		W4473	0191	24		32-61-12	ALL
	27		W4473	0192	24		32-61-12	ALL
	28		W4473	0189	22		SPARE	ALL
	29		W4473	0223	22		32-61-12	001-099
	29		W4473	0224	22		32-61-12	115-199
	30		W4473	0224	22		32-61-12	001-099
	30		W4473	0223	22		32-61-12	115-199
	31		W4473	0222	24		32-61-12	001-099
	31		W4473	0222	22		32-61-11	115-199
	32		W4473	0221	22		32-61-11	115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 96

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41363P		E003-04/ /		PLUG- (continued)				001-099
D41363P		E3-4/ /		PLUG- (continued)				115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D41367J		E004-01/ /		RCPT				001-099
D41367J		E4-1/ /		RCPT				115-199
	1	UNUSED						ALL
	2		W1165	0385	22		27-32-21	001-099
	2		W1165	0385	24		27-32-21	115-199
	3	UNUSED						ALL
	4		W1165	0370	24		31-51-42	ALL
	5	UNUSED						ALL
	6		W1165	0259	22		27-09-13	ALL
	7		W1165	0260	22		27-09-13	ALL
	8		W1165	0232	22		27-09-12	ALL
	9		W1165	0354	22		22-21-21	ALL
	10		W1165	5104R	24		22-21-21	ALL
	11		W1165	5104B	24		22-21-21	ALL
	12		W1165	5104Z			22-21-21	ALL
	13		W1165	0305	22		22-21-21	ALL
	14		W1165	0316	22		22-22-21	ALL
	15		W1165	5108R	24		22-22-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 97

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41367J		E004-01/ /		RCPT (continued)				001-099
D41367J		E4-1/ /		RCPT (continued)				115-199
	16		W1165	5108B	24		22-22-21	ALL
	17		W1165	5108Z			22-22-21	ALL
	18		W1165	0315	22		22-22-21	ALL
	19		W1165	5105R	24		22-24-21	ALL
	20		W1165	5105B	24		22-24-21	ALL
	21		W1165	5105Z			22-24-21	ALL
	22		W1165	0311	22		22-24-21	ALL
	23		W1165	2123R	22		22-24-21	ALL
	24		W1165	2123B	22		22-24-21	ALL
	25		W1165	0384	22		27-32-21	001-099
	25		W1165	0384	24		27-32-21	115-199
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W1165	0371	24		31-51-41	ALL
	33		W1165	0380	22		27-41-21	ALL
	34		W1165	0381	22		27-41-21	ALL
	35		W1165	0383	22		27-41-21	ALL
	36		W1165	0382	22		27-41-21	ALL
	37		W1165	0375	24		31-31-62	001-099
	37		W1165	0375	24		31-31-32	115-199
	38		W1165	0376	24		31-31-62	001-099
	38		W1165	0376	24		31-31-32	115-199
	39		W1165	0377	24		31-31-62	001-099
	39		W1165	0377	24		31-31-32	115-199
	40		W1165	0378	24		31-31-62	001-099
	40		W1165	0378	24		31-31-32	115-199
	41		W1165	0226	22		27-61-15	ALL
	42		W1165	0227	22		27-61-15	ALL
	43		W1165	0240	22		27-09-14	ALL
	44		W1165	0206	22		27-09-14	ALL
	45	UNUSED						ALL
	46		W1165	0155	22		27-41-21	ALL
	47	UNUSED						ALL
	48		W1165	0218	22		27-09-14	ALL
	49		W1165	0207	22		27-09-14	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 98

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41367J		E004-01/ /		RCPT (continued)				001-099
D41367J		E4-1/ /		RCPT (continued)				115-199
	50		W1165	0214	22		27-09-14	ALL
	51		W1165	0369	22		27-09-14	ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D41367P		E004-01/ /		PLUG-				001-099
D41367P		E4-1/ /		PLUG-				115-199
	1		W4473	0013	24		SPARE	ALL
	2		W4473	0014	22		27-32-21	001-099
	2		W4473	0014	24		27-32-21	115-199
	3		W4473	0053	24		SPARE	001-099
	3	UNUSED						115-199
	4		W4473	0025	24		31-51-42	ALL
	5	UNUSED						ALL
	6		W4473	0036	22		27-09-13	ALL
	7		W4473	0182	22		27-09-13	ALL
	8		W4473	0127	22		27-09-12	001-099
	8		W4473	0039	22		27-09-12	115-199
	9		W4473	0040	22		22-21-21	ALL
	10		W4473	2501R	24		22-21-21	ALL
	11		W4473	2501B	24		22-21-21	ALL
	12		W4473	2501Z			22-21-21	ALL
	13		W4473	0041	22		22-21-21	ALL
	14		W4473	0042	22		22-22-21	ALL
	15		W4473	5014R	24		22-22-21	ALL
	16		W4473	5014B	24		22-22-21	ALL
	17		W4473	5014Z			22-22-21	ALL
	18		W4473	0043	22		22-22-21	ALL
	19		W4473	5016R	24		22-24-21	ALL
	20		W4473	5016B	24		22-24-21	ALL
	21		W4473	5016Z			22-24-21	ALL
	22		W4473	0150	22		22-24-21	ALL
	23		W4473	2003R	22		22-24-21	ALL
	24		W4473	2003B	22		22-24-21	ALL
	25		W4473	0151	24		31-31-62	001-099
	25		W4473	0151	24		31-31-32	115-199
	26		W4473	0104	22		SPARE	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 99

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41367P		E004-01/ /		PLUG- (continued)				001-099
D41367P		E4-1/ /		PLUG- (continued)				115-199
	26		W4473	0104	24		SPARE	115-199
	27	UNUSED						001-099
	27		W4473	0112	24		SPARE	115-199
	28	UNUSED						001-099
	28		W4473	0113	24		SPARE	115-199
	29	UNUSED						ALL
	30	UNUSED						001-099
	30		W4473	0135	24		SPARE	115-199
	31	UNUSED						ALL
	32		W4473	0148	24		31-51-41	ALL
	33		W4473	0155	24		31-31-62	001-099
	33		W4473	0155	24		31-31-32	115-199
	34		W4473	0156	24		31-31-62	001-099
	34		W4473	0156	24		31-31-32	115-199
	35		W4473	0157	24		31-31-62	001-099
	35		W4473	0157	24		31-31-32	115-199
	36		W4473	0158	24		31-31-62	001-099
	36		W4473	0158	24		31-31-32	115-199
	37		W4473	0162	24		31-31-62	001-099
	37		W4473	0162	24		31-31-32	115-199
	38		W4473	0163	24		31-31-62	001-099
	38		W4473	0163	24		31-31-32	115-199
	39		W4473	0164	24		31-31-62	001-099
	39		W4473	0164	24		31-31-32	115-199
	40		W4473	0165	24		31-31-62	001-099
	40		W4473	0165	24		31-31-32	115-199
	41		W4473	2006R	22		22-12-21	ALL
	42		W4473	2006B	22		22-12-21	ALL
	43		W4473	0253	22		27-09-14	ALL
	44		W4473	0254	22		27-09-14	ALL
	45	UNUSED						ALL
	46		W4473	0180	22		27-41-21	ALL
	47		W4473	0037	22		SPARE	ALL
	48		W4473	0255	22		27-09-14	ALL
	49		W4473	0256	22		27-09-14	ALL
	50		W4473	0257	22		27-09-14	ALL
	51		W4473	0258	22		27-09-14	ALL
	52	UNUSED						ALL
	53	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 100

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41367P		E004-01/ /		PLUG- (continued)				001-099
D41367P		E4-1/ /		PLUG- (continued)				115-199
	54	UNUSED						ALL
	55	UNUSED						ALL
D41369J		E4-2/ /		RCPT-				ALL
	1		W1275	FREL			31-41-22	ALL
	2		W1275	5036R	24		31-41-22	ALL
	3		W1275	5036B	24		31-41-22	ALL
	4		W1275	5035R	24		31-41-22	ALL
	5		W1275	5035B	24		31-41-22	ALL
	6		W1275	FREK			31-41-22	ALL
	7		W1275	5050R	24		34-61-24	ALL
	8		W1275	5050B	24		34-61-24	ALL
	9		W1275	FRJA			34-61-24	ALL
	10		W1275	0256	24		34-21-21	ALL
	10		W1275	0257	24		34-21-21	ALL
	11		W1275	0259	24		34-21-21	ALL
	11		W1275	0260	24		34-21-21	ALL
	12		W1275	0253	24		34-21-21	ALL
	12		W1275	0254	24		34-21-21	ALL
	13		W1275	5532	24		24-28-11	ALL
	13		W1275	5533	24		24-28-11	ALL
	14		W1275	5051R	24		34-61-25	001-099
I	14		W1275	5135R	24		34-61-25	115-199
	15		W1275	5051B	24		34-61-25	001-099
I	15		W1275	5135B	24		34-61-25	115-199
	16		W1275	FRJB			34-61-25	ALL
	17		W1275	5526	24		34-61-25	ALL
	17		W1275	5527	24		34-61-25	ALL
	18	UNUSED						ALL
	19	UNUSED						001-099
	19		W1275	0358	22		35-11-13	115-199
	20	UNUSED						001-099
	20		W1275	0359	22		35-11-13	115-199
	21	UNUSED						ALL
	22		W1275	6006	24		31-51-33	001-099
	22		W1275	6007	24		31-51-33	001-099
	22		W1275	6497	24		31-51-33	115-199
	23	UNUSED						ALL
	24	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 101

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41369J		E4-2/ /		RCPT- (continued)				ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						001-099
	30		W1275	6604	24		34-53-11	115-199
	31		W1275	5796	24		22-21-21	ALL
	31		W1275	5797	24		22-21-21	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34		W1275	5008R	24		22-32-12	ALL
	35		W1275	5008B	24		22-32-12	ALL
	36		W1275	FRCL			22-32-12	ALL
	37		W1275	0298	22		35-11-13	001-099
	37	UNUSED						115-199
	38		W1275	2040B	20		35-11-13	001-099
	38		W1275	2040B	22		35-11-13	115-199
	39		W1275	2040R	20		35-11-13	001-099
	39		W1275	2040R	22		35-11-13	115-199
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						115-199
	43	UNUSED						115-199
	44		W1275	5011B	24		31-31-22	115-199
	45		W1275	5011R	24		31-31-22	115-199
	46		W1275	5011Z			31-31-22	115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
DED			W1275	5796Z			22-21-21	115-199
DED			W1275	5797Z			22-21-21	115-199
			W1275	5051Z			34-61-25	001-099
			W1275	5008Z			22-32-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 102

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41369J		E4-2/ /		RCPT- (continued)				ALL
			W1275	5035Z			31-41-22	ALL
			W1275	5036Z			31-41-22	ALL
			W1275	5050Z			34-61-24	ALL
			W1275	5805	20		31-41-22	ALL
			W1275	5806	20		31-41-22	ALL
			W1275	5811	20		22-32-12	ALL
			W1275	5815	20		34-61-24	ALL
			W1275	5816	20		34-61-25	ALL
			W1275	FRCL			22-32-12	ALL
			W1275	FREK			31-41-22	ALL
			W1275	FREL			31-41-22	ALL
			W1275	FRJA			34-61-24	ALL
			W1275	FRJB			34-61-25	ALL
			W1275	5135Z			34-61-25	115-199
D41369P		E004-02/ /		PLUG-				001-099
D41369P		E4-2/ /		PLUG-				115-199
	1		W4473	5001Z			31-41-22	ALL
	2		W4473	5001R	24		31-41-22	ALL
	3		W4473	5001B	24		31-41-22	ALL
	4		W4473	5002R	24		31-41-22	ALL
	5		W4473	5002B	24		31-41-22	ALL
	6		W4473	5002Z			31-41-22	ALL
	7		W4473	5003R	24		34-61-24	ALL
	8		W4473	5003B	24		34-61-24	ALL
	9		W4473	5003Z			34-61-24	ALL
	10		W4473	0004	22		34-21-21	ALL
	11		W4473	0005	22		34-21-21	ALL
	12		W4473	0006	22		34-21-21	ALL
	13		W4473	0033	24		24-28-11	ALL
	14		W4473	5005R	24		34-61-25	ALL
	15		W4473	5005B	24		34-61-25	ALL
	16		W4473	5005Z			34-61-25	ALL
	17		W4473	0003	24		34-61-25	ALL
	18	UNUSED						ALL
	19	UNUSED						001-099
	19		W4473	2005R	22		35-11-13	115-199
	20	UNUSED						001-099
	20		W4473	2005B	22		35-11-13	115-199
	21	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 103

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41369P		E004-02/ /		PLUG- (continued)				001-099
D41369P		E4-2/ /		PLUG- (continued)				115-199
	22		W4473	0023	24		31-51-33	ALL
	23		W4473	0105	22		SPARE	001-099
	23		W4473	5011B	24		SPARE	115-199
	24	UNUSED						001-099
	24		W4473	5011R	24		SPARE	115-199
	25	UNUSED						001-099
	25		W4473	5011Z			SPARE	115-199
	26	UNUSED						001-099
	26		W4473	0038	24		SPARE	115-199
	27	UNUSED						001-099
	27		W4473	2002B	24		SPARE	115-199
	28	UNUSED						001-099
	28		W4473	2002R	24		SPARE	115-199
	29	UNUSED						ALL
	30	UNUSED						001-099
	30		W4473	0101	24		34-53-21	115-199
	31		W4473	0040	22		22-21-21	ALL
	32	UNUSED						001-099
	32		W4473	0044	24		SPARE	115-199
	33	UNUSED						001-099
	33		W4473	0045	24		SPARE	115-199
	34		W4473	5017R	24		22-32-12	ALL
	35		W4473	5017B	24		22-32-12	ALL
	36		W4473	5017Z			22-32-12	ALL
	37		W4473	0048	20		35-11-13	001-099
	37	UNUSED						115-199
	38		W4473	2004B	22		35-11-13	ALL
	39		W4473	2004R	22		35-11-13	ALL
	40		W4473	0052	24		SPARE	ALL
	41		W4473	0053	24		SPARE	ALL
	42		W4473	0055	24		SPARE	115-199
	43		W4473	0056	24		SPARE	115-199
	44		W4473	5019B	24		31-31-22	115-199
	45		W4473	5019R	24		31-31-22	115-199
	46		W4473	5019Z			31-31-22	115-199
	47		W4473	5022R	24		SPARE	115-199
	48		W4473	5022B	24		SPARE	115-199
	49		W4473	5022Z			SPARE	115-199
	50	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 104

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41369P		E004-02/ /		PLUG- (continued)				001-099
D41369P		E4-2/ /		PLUG- (continued)				115-199
	51		W4473	5038R	24		SPARE	115-199
	52		W4473	5038B	24		SPARE	115-199
	53		W4473	5038Z			SPARE	115-199
	54		W4473	0116	24		SPARE	115-199
	55		W4473	0117	24		SPARE	115-199
D41371J		E004-03/ /		RCPT-				001-099
D41371J		E4-3/ /		RCPT-				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W1163	0234	24		23-51-12	ALL
	6		W1163	0235	24		23-51-12	ALL
	7		W1163	0238	24		23-51-12	ALL
	8		W1163	0239	20		23-51-12	ALL
	9		W1163	0006	24		23-12-21	ALL
	10	UNUSED						ALL
	11		W1163	2002R	24		23-21-11	001-099
	11	UNUSED						115-199
	12		W1163	2002B	24		23-21-11	001-099
	12	UNUSED						115-199
	13		W1163	0259	24		23-51-13	ALL
	14		W1163	0260	24		23-51-13	ALL
	15		W1163	0258	20		23-51-13	ALL
	16		W1163	0421	24		31-31-61	001-099
	16		W1163	0421	24		31-31-32	115-199
	17	UNUSED						001-099
	17		W1163	0418	24		SPARE	115-199
	18		W1163	2503R	24		23-41-11	ALL
	19		W1163	2503B	24		23-41-11	ALL
	20	UNUSED						001-099
	20		W1163	0175	24		23-41-11	115-199
	21		W1163	2503Z			23-41-11	ALL
	22		W1163	2512R	24		23-41-11	ALL
	23		W1163	2512B	24		23-41-11	ALL
	24	UNUSED						001-099
	24		W1163	0447	24		23-41-11	115-199
	25		W1163	2512Z			23-41-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 105

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41371J		E004-03/ /		RCPT- (continued)				001-099
D41371J		E4-3/ /		RCPT- (continued)				115-199
	26		W1163	2511B	24		23-41-11	ALL
	27		W1163	2511R	24		23-41-11	ALL
	28		W1163	2511Z			23-41-11	ALL
	29	UNUSED						001-099
	29		W1163	0446	24		23-41-11	115-199
	30		W1163	2510B	24		23-41-11	ALL
	31		W1163	2510R	24		23-41-11	ALL
	32	UNUSED						001-099
	32		W1163	0445	24		23-41-11	115-199
	33		W1163	2510Z			23-41-11	ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42		W1163	0280	24		23-51-14	001-099
	42	UNUSED						115-199
	43		W1163	0453	20		23-51-14	001-099
	43	UNUSED						115-199
	44		W1163	0283	24		23-51-14	001-099
	44	UNUSED						115-199
	45		W1163	0282	24		23-51-14	001-099
	45	UNUSED						115-199
	46		W1163	0448	20		23-51-14	001-099
	46	UNUSED						115-199
	47		W1163	0285	24		23-51-14	001-099
	47	UNUSED						115-199
	48		W1163	0287	24		23-51-14	001-099
	48	UNUSED						115-199
	49		W1163	0449	20		23-51-14	001-099
	49	UNUSED						115-199
	50		W1163	0242	24		23-51-12	001-099
	50	UNUSED						115-199
	51		W1163	0241	24		23-51-12	001-099
	51	UNUSED						115-199
	52		W1163	0240	20		23-51-12	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 106

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41371J		E004-03/ /		RCPT- (continued)				001-099
D41371J		E4-3/ /		RCPT- (continued)				115-199
	52	UNUSED						115-199
	53		W1163	0277	24		23-51-13	001-099
	53	UNUSED						115-199
	54		W1163	0278	20		23-51-13	001-099
	54	UNUSED						115-199
	55		W1163	0276	20		23-51-13	001-099
	55	UNUSED						115-199
D41371P		E004-03/ /		PLUG-				001-099
D41371P		E4-3/ /		PLUG-				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W4473	3501R	24		23-51-12	ALL
	6		W4473	3501B	24		23-51-12	ALL
	7		W4473	3501Y	24		23-51-12	ALL
	8		W4473	3501Z			23-51-12	ALL
	9		W4473	0026	24		23-12-21	ALL
	10		W4473	0117	24		SPARE	ALL
	11		W4473	2009R	24		23-21-11	001-099
	11		W4473	0120	24		SPARE	115-199
	12		W4473	2009B	24		23-21-11	001-099
	12		W4473	0121	24		34-12-12	115-199
	13		W4473	2502R	24		23-51-13	ALL
	14		W4473	2502B	24		23-51-13	ALL
	15		W4473	2502Z			23-51-13	ALL
	16		W4473	0077	24		31-31-61	001-099
	16		W4473	0077	24		31-31-32	115-199
	17	UNUSED						001-099
	17		W4473	0078	24		SPARE	115-199
	18		W4473	2506R	24		23-41-12	001-099
	18		W4473	3502R	24		23-41-12	115-199
	19		W4473	2506B	24		23-41-12	001-099
	19		W4473	3502B	24		23-41-12	115-199
	20	UNUSED						001-099
	20		W4473	3502Y	24		23-41-12	115-199
	21		W4473	2506Z			23-41-12	001-099
	21		W4473	3502Z			23-41-12	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 107

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41371P		E004-03/ /		PLUG- (continued)				001-099
D41371P		E4-3/ /		PLUG- (continued)				115-199
	22		W4473	2505R	24		23-41-12	001-099
	22		W4473	3503R	24		23-41-12	115-199
	23		W4473	2505B	24		23-41-12	001-099
	23		W4473	3503B	24		23-41-12	115-199
	24	UNUSED						001-099
	24		W4473	3503Y	24		23-41-12	115-199
	25		W4473	2505Z			23-41-12	001-099
	25		W4473	3503Z			23-41-12	115-199
	26		W4473	2507B	24		23-41-11	001-099
	26		W4473	3505B	24		23-41-11	115-199
	27		W4473	2507R	24		23-41-11	001-099
	27		W4473	3505R	24		23-41-11	115-199
	28		W4473	2507Z			23-41-11	001-099
	28		W4473	3505Z			23-41-11	115-199
	29	UNUSED						001-099
	29		W4473	3505Y	24		23-41-11	115-199
	30		W4473	2504B	24		23-41-11	001-099
	30		W4473	3504B	24		23-41-11	115-199
	31		W4473	2504R	24		23-41-11	001-099
	31		W4473	3504R	24		23-41-11	115-199
	32	UNUSED						001-099
	32		W4473	3504Y	24		23-41-11	115-199
	33		W4473	2504Z			23-41-11	001-099
	33		W4473	3504Z			23-41-11	115-199
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42		W4473	0281	24		23-51-14	001-099
	42	UNUSED						115-199
	43		W4473	0282	20		23-51-14	001-099
	43	UNUSED						115-199
	44		W4473	5084R	24		23-51-14	001-099
	44	UNUSED						115-199
	45		W4473	5084B	24		23-51-14	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 108

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41371P		E004-03/ /		PLUG- (continued)				001-099
D41371P		E4-3/ /		PLUG- (continued)				115-199
	45	UNUSED						115-199
	46		W4473	5084Z			23-51-14	001-099
	46	UNUSED						115-199
	47		W4473	5085R	24		23-51-14	001-099
	47	UNUSED						115-199
	48		W4473	5085B	24		23-51-14	001-099
	48	UNUSED						115-199
	49		W4473	5085Z			23-51-14	001-099
	49	UNUSED						115-199
	50		W4473	5086R	24		23-51-12	001-099
	50	UNUSED						115-199
	51		W4473	5086B	24		23-51-12	001-099
	51	UNUSED						115-199
	52		W4473	5086Z			23-51-12	001-099
	52	UNUSED						115-199
	53		W4473	5083R	24		23-51-13	001-099
	53	UNUSED						115-199
	54		W4473	5083B	24		23-51-13	001-099
	54	UNUSED						115-199
	55		W4473	5083Z			23-51-13	001-099
	55	UNUSED						115-199
D41377J		E5-1/ /		RCPT				ALL
	1		W1282	0117	24		27-32-21	ALL
	2		W1282	5007R	24		21-31-11	ALL
	3		W1282	5007B	24		21-31-11	ALL
	4		W1282	5007Z			21-31-11	ALL
	5		W1282	0040	24		27-58-31	ALL
	6		W1282	0221	24		27-81-21	ALL
	7		W1282	0116	24		27-32-21	ALL
	8	UNUSED						ALL
	9		W1282	0236	22		27-51-51	ALL
	10		W1282	0103	22		24-22-22	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W1282	0299	24		27-51-31	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 109

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41377J		E5-1/ /		RCPT (continued)				ALL
	16		W1282	0299	22		27-51-31	115-199
	17		W1282	0399	22		27-51-21	001-099
	17		W1282	0176	22		27-51-21	115-199
	18		W1282	0398	22		27-51-21	001-099
	18		W1282	0175	22		27-51-21	115-199
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W1282	5013R	24		21-31-21	ALL
	25		W1282	5013B	24		21-31-21	ALL
	26		W1282	5013Z			21-31-21	ALL
	27	UNUSED						ALL
	28		W1282	0292	22		27-81-31	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39		W1282	2040R	24		27-32-21	001-099
	39	UNUSED						115-199
	40		W1282	2040B	24		27-32-21	001-099
	40	UNUSED						115-199
	41		W1282	0368	24		27-32-21	001-099
	41	UNUSED						115-199
	42		W1282	0362	24		27-32-21	ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45		W1282	0365	24		27-32-21	001-099
	45	UNUSED						115-199
	46		W1282	0386	22		27-81-31	ALL
	47		W1282	0387	22		27-51-21	ALL
	48		W1282	0045	22		24-22-22	001-099
	48	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 110

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41377J		E5-1/ /		RCPT (continued)				ALL
	49		W1282	5012R	24		24-41-11	001-099
	49	UNUSED						115-199
	50		W1282	5012B	24		24-41-11	001-099
	50	UNUSED						115-199
	51		W1282	5012Z			24-41-11	001-099
	51	UNUSED						115-199
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D41377P		E005-01/ /		PLUG-				001-099
D41377P		E5-1/ /		PLUG-				115-199
	1		W4473	0021	24		27-32-21	ALL
	2		W4473	5023R	24		34-12-22	ALL
	3		W4473	5023B	24		34-12-22	ALL
	4		W4473	5023Z			34-12-22	ALL
	5		W4473	0079	24		27-58-31	ALL
	6		W4473	0082	22		27-81-21	ALL
	7		W4473	0091	24		27-32-21	ALL
	8	UNUSED						001-099
	8		W4473	0170	24		SPARE	115-199
	9		W4473	0027	22		27-51-51	ALL
	10		W4473	0214	24		24-22-22	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						001-099
	14		W4473	0123	24		SPARE	115-199
	15		W4473	0136	24		SPARE	ALL
	16		W4473	0167	24		27-51-31	001-099
	16		W4473	0167	20		27-51-31	115-199
	17		W4473	0168	22		27-51-21	001-099
	17		W4473	0168	20		27-51-21	115-199
	18		W4473	0169	22		27-51-21	001-099
	18		W4473	0169	20		27-51-21	115-199
	19		W4473	0056	24		SPARE	001-099
	19		W4473	4001G	24		SPARE	115-199
	20		W4473	0262	22		SPARE	001-099
	20		W4473	4001Y	24		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 111

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41377P		E005-01/ /		PLUG- (continued)				001-099
D41377P		E5-1/ /		PLUG- (continued)				115-199
	21		W4473	0138	22		SPARE	001-099
	21		W4473	4001B	24		SPARE	115-199
	22		W4473	0139	22		SPARE	001-099
	22		W4473	4001R	24		SPARE	115-199
	23		W4473	0126	24		SPARE	001-099
	23		W4473	4001Z			SPARE	115-199
	24		W4473	5051R	24		21-31-21	ALL
	25		W4473	5051B	24		21-31-21	ALL
	26		W4473	5051Z			21-31-21	ALL
	27	UNUSED						001-099
	27		W4473	0177	22		SPARE	115-199
	28		W4473	0184	22		27-81-31	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39		W4473	2007R	24		27-32-21	001-099
	39	UNUSED						115-199
	40		W4473	2007B	24		27-32-21	001-099
	40	UNUSED						115-199
	41		W4473	0017	24		27-32-21	001-099
	41	UNUSED						115-199
	42		W4473	0018	24		27-32-21	ALL
	43		W4473	0019	24		SPARE	001-099
	43	UNUSED						115-199
	44		W4473	0020	24		SPARE	001-099
	44	UNUSED						115-199
	45		W4473	0022	24		27-32-21	001-099
	45	UNUSED						115-199
	46		W4473	0268	22		27-81-31	ALL
	47		W4473	0269	22		27-51-21	ALL
	48		W4473	0213	24		24-22-22	001-099
	48	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 112

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41377P		E005-01/ /		PLUG- (continued)				001-099
D41377P		E5-1/ /		PLUG- (continued)				115-199
	49		W4473	2508R	24		24-41-11	001-099
	49	UNUSED						115-199
	50		W4473	2508B	24		24-41-11	001-099
	50	UNUSED						115-199
	51		W4473	2508Z			24-41-11	001-099
	51	UNUSED						115-199
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D41379J		E5-2/ /		RCPT				ALL
	1		W1284	5005R	24		34-22-29	ALL
	2		W1284	5005B	24		34-22-29	ALL
	3		W1284	5005Z			34-22-29	ALL
	4		W1284	5004R	24		31-41-22	ALL
	5		W1284	5004B	24		31-41-22	ALL
	6		W1284	5004Z			31-41-22	ALL
	7	UNUSED						001-099
	7		W1284	2003B	24		27-32-21	115-199
	8	UNUSED						001-099
	8		W1284	0113	24		27-32-21	115-199
	9	UNUSED						001-009, 115-199
	9		W1284	0300	20		31-31-61	010-099
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						001-099
	12		W1284	0117	24		27-32-21	115-199
	13	UNUSED						001-099
	13		W1284	2003R	24		27-32-21	115-199
	14		W1284	0021	22		22-12-21	ALL
	15		W1284	0022	22		22-12-21	ALL
	16		W1284	0158	24		27-58-31	ALL
	17		W1284	5021B	24		27-58-31	ALL
	18		W1284	5021R	24		27-58-31	ALL
	19	UNUSED						ALL
	20		W1284	0012	22		22-24-21	ALL
	21		W1284	5021Z			27-58-31	ALL
	22	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 113

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41379J		E5-2/ /		RCPT (continued)				ALL
	23	UNUSED						ALL
	24	UNUSED						001, 003-099, 115-199
	24		W1284	2529R	22		34-43-14	002
	25	UNUSED						001, 003-099, 115-199
	25		W1284	2529B	22		34-43-14	002
	26	UNUSED						001, 003-099, 115-199
	26		W1284	2529Z			34-43-14	002
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						001-009, 115-199
	31		W1284	0345	20		31-31-61	010-099
	32	UNUSED						ALL
	33	UNUSED						ALL
	34		W1284	5002R	24		22-12-21	ALL
	35		W1284	5002B	24		22-12-21	ALL
	36		W1284	FRAD			22-12-21	001-099
	36		W1284	FRFO			22-12-21	115-199
	37		W1284	0011	22		22-12-21	ALL
	38	UNUSED						ALL
	39		W1284	0156	24		27-58-31	ALL
	40		W1284	0159	24		27-58-31	ALL
	41		W1284	5022B	24		27-58-31	ALL
	42		W1284	5022R	24		27-58-31	ALL
	43		W1284	5022Z			27-58-31	ALL
	44		W1284	0010	24		34-33-21	ALL
	45		W1284	5050R	24		34-45-02	001-099
	45	UNUSED						115-199
	46		W1284	5050B	24		34-45-02	001-099
	46	UNUSED						115-199
	47		W1284	5050Z			34-45-02	001-099
	47	UNUSED						115-199
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 114

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41379J		E5-2/ /		RCPT (continued)				ALL
	55	UNUSED						ALL
			W1284	FRAD			22-12-21	001-099
			W1284	0217	20		22-12-21	ALL
			W1284	5002Z			22-12-21	ALL
			W1284	FRFO			22-12-21	115-199
D41379P		E005-02/ /		PLUG-				001-099
D41379P		E5-2/ /		PLUG-				115-199
	1		W4473	5008R	24		34-22-29	ALL
	2		W4473	5008B	24		34-22-29	ALL
	3		W4473	5008Z			34-22-29	ALL
	4		W4473	5002R	24		31-41-22	ALL
	5		W4473	5002B	24		31-41-22	ALL
	6		W4473	5002Z			31-41-22	ALL
	7	UNUSED						001-099
	7		W4473	2007B	24		27-32-21	115-199
	8	UNUSED						001-099
	8		W4473	0017	24		27-32-21	115-199
	9	UNUSED						001-009, 115-199
	9		W4473	0392	22		31-31-61	010-099
	10	UNUSED						001-099
	10		W4473	0019	24		34-12-12	115-199
	11	UNUSED						ALL
	12	UNUSED						001-099
	12		W4473	0022	24		27-32-21	115-199
	13	UNUSED						001-099
	13		W4473	2007R	24		27-32-21	115-199
	14		W4473	0057	22		22-12-21	ALL
	15		W4473	0058	22		22-12-21	ALL
	16		W4473	0241	24		27-58-31	ALL
	17		W4473	5078B	24		27-58-31	ALL
	18		W4473	5078R	24		27-58-31	ALL
	19	UNUSED						001-099
	19		W4473	0099	24		SPARE	115-199
	20		W4473	0150	22		22-24-21	ALL
	21		W4473	5078Z			27-58-31	ALL
	22	UNUSED						001-099
	22		W4473	0044	24		SPARE	115-199
	23	UNUSED						001-099
	23		W4473	0045	24		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 115

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41379P		E005-02/ /		PLUG- (continued)				001-099
D41379P		E5-2/ /		PLUG- (continued)				115-199
	24	UNUSED						001, 003-099
	24		W2309	5009R	22		34-43-14	002
	24		W4473	5015R	24		SPARE	115-199
	25	UNUSED						001, 003-099
	25		W2309	5009B	22		34-43-14	002
	25		W4473	5015B	24		SPARE	115-199
	26	UNUSED						001, 003-099
	26		W2309	5009Z			34-43-14	002
	26		W4473	5015Z			SPARE	115-199
	27	UNUSED						001-099
	27		W4473	2001R	24		SPARE	115-199
	28	UNUSED						001-099
	28		W4473	2001B	24		SPARE	115-199
	29	UNUSED						001-099
	29		W4473	2002B	24		SPARE	115-199
	30	UNUSED						001-099
	30		W4473	2002R	24		SPARE	115-199
	31	UNUSED						001-009, 115-199
	31		W4473	0393	22		31-31-61	010-099
	32	UNUSED						001-099
	32		W4473	0053	24		SPARE	115-199
	33		W4473	0056	24		SPARE	ALL
	34		W4473	5021R	24		22-12-21	ALL
	35		W4473	5021B	24		22-12-21	ALL
	36		W4473	5021Z			22-12-21	ALL
	37		W4473	0061	22		22-12-21	ALL
	38		W4473	0072	22		SPARE	001-099
	38		W4473	0072	24		SPARE	115-199
	39		W4473	0079	24		27-58-31	ALL
	40		W4473	0080	24		27-58-31	ALL
	41		W4473	2503B	24		27-58-31	ALL
	42		W4473	2503R	24		27-58-31	ALL
	43		W4473	2503Z			27-58-31	ALL
	44		W4473	0085	24		34-33-21	ALL
	45		W4473	5118R	24		34-45-02	001-099
	45		W4473	5037R	24		SPARE	115-199
	46		W4473	5118B	24		34-45-02	001-099
	46		W4473	5037B	24		SPARE	115-199
	47		W4473	5118Z			34-45-02	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 116

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41379P		E005-02/ /		PLUG- (continued)				001-099
D41379P		E5-2/ /		PLUG- (continued)				115-199
	47		W4473	5037Z			SPARE	115-199
	48	UNUSED						001-099
	48		W4473	0116	24		SPARE	115-199
	49	UNUSED						ALL
	50	UNUSED						001-099
	50		W4473	0125	24		SPARE	115-199
	51	UNUSED						001-099
	51		W4473	0126	24		SPARE	115-199
	52	UNUSED						ALL
	53		W4473	0128	24		SPARE	ALL
	54	UNUSED						ALL
	55	UNUSED						001-099
	55		W4473	0129	24		SPARE	115-199
D41380J		P50/ /		RCPT				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1140	0336	22		77-12-41	001-099
	4		W1140	0551	22		77-12-41	115-199
	5		W1140	0386	24		26-15-11	001-099
	5		W1140	0413	24		26-15-11	115-199
	6		W1140	0388	24		26-15-11	001-099
	6		W1140	0525	24		26-15-11	115-199
	7		W1140	0222	24		26-15-11	ALL
	8		W1140	0241	24		26-16-11	ALL
	9		W1140	0327	22		30-21-11	ALL
	10	UNUSED						001-099
	10		W1140	0442	22		21-51-23	115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W1140	0432	24		26-17-11	ALL
	14		W1140	0260	24		26-17-11	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W1140	0389	22		30-11-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 117

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41380J		P50/ /		RCPT (continued)				ALL
	21		W1140	0567	22		30-11-11	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D41380P		P050-00/ /		PLUG				001-099
D41380P		P50/ /		PLUG				115-199
	1		W2078	0377	20		SPARE	ALL
	2		W2078	0378	20		SPARE	ALL
	3	UNUSED						001-099
	3		W2078	0379	20		SPARE	115-199
	4		W2078	0315	22		77-12-41	ALL
	5		W2078	0235	22		26-15-11	001-099
	5		W2078	0283	22		26-15-11	115-199
	6		W2078	0236	22		26-15-11	001-099
	6		W2078	0284	22		26-15-11	115-199
	7		W2078	0092	22		26-15-11	ALL
	8		W2078	0090	22		26-16-11	ALL
	9		W2078	0195	22		30-21-11	ALL
	10	UNUSED						001-099
	10		W2078	0196	20		21-51-23	115-199
	11	UNUSED						ALL
	12		W2078	0036	22		SPARE	ALL
	13		W2078	0081	22		26-17-11	ALL
	14		W2078	0082	22		26-17-11	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W2078	0464	22		30-11-11	ALL
	21		W2078	0462	22		30-11-11	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D41381J		E005-03/ /		RCPT				001-099
D41381J		E5-3/ /		RCPT				115-199
	1	UNUSED						ALL
	2		W1286	0153	22		27-23-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 118

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41381J		E005-03/ /		RCPT (continued)				001-099
D41381J		E5-3/ /		RCPT (continued)				115-199
	3		W1286	0154	22		27-23-21	ALL
	4	UNUSED						ALL
	5		W1286	0253	24		27-58-31	ALL
	6		W1286	5002B	24		27-58-31	ALL
	7		W1286	5002R	24		27-58-31	ALL
	8		W1286	5002Z			27-58-31	ALL
	9	UNUSED						ALL
	10		W1286	0025	24		27-81-21	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W1286	0263	24		27-58-31	ALL
	17	UNUSED						ALL
	18		W1286	0257	22		27-81-31	ALL
	19	UNUSED						001-099
	19		W1286	0144	22		24-22-22	115-199
	20		W1286	0063	22		24-51-24	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 119

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41381J		E005-03/ /		RCPT (continued)				001-099
D41381J		E5-3/ /		RCPT (continued)				115-199
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49		W1286	5011R	24		24-41-11	001-099
	49	UNUSED						115-199
	50		W1286	5011B	24		24-41-11	001-099
	50	UNUSED						115-199
	51		W1286	5011Z			24-41-11	001-099
	51	UNUSED						115-199
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D41381P		E005-03/ /		PLUG-				001-099
D41381P		E5-3/ /		PLUG-				115-199
	1		W4473	0128	24		SPARE	ALL
	2		W4473	0197	22		27-23-21	ALL
	3		W4473	0198	22		27-23-21	ALL
	4	UNUSED						001-099
	4		W4473	0029	24		SPARE	115-199
	5		W4473	0080	24		27-58-31	ALL
	6		W4473	2503B	24		27-58-31	ALL
	7		W4473	2503R	24		27-58-31	ALL
	8		W4473	2503Z			27-58-31	ALL
	9	UNUSED						001-099
	9		W4473	0081	22		SPARE	115-199
	10		W4473	0082	22		27-81-21	ALL
	11		W4473	0261	22		SPARE	001-099
	11		W4473	0129	24		SPARE	115-199
	12		W4473	0171	24		SPARE	ALL
	13		W4473	0262	22		SPARE	001-099
	13		W4473	5052R	24		SPARE	115-199
	14	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 120

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41381P		E005-03/ /		PLUG- (continued)				001-099
D41381P		E5-3/ /		PLUG- (continued)				115-199
	14		W4473	5052B	24		SPARE	115-199
	15	UNUSED						001-099
	15		W4473	5052Z			SPARE	115-199
	16		W4473	0241	24		27-58-31	ALL
	17	UNUSED						ALL
	18		W4473	0184	22		27-81-31	ALL
	19	UNUSED						001-099
	19		W4473	0213	24		24-22-22	115-199
	20		W4473	0194	22		24-51-24	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49		W4473	2508R	24		24-41-11	001-099
	49	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 121

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41381P		E005-03/ /		PLUG- (continued)				001-099
D41381P		E5-3/ /		PLUG- (continued)				115-199
	50		W4473	2508B	24		24-41-11	001-099
	50	UNUSED						115-199
	51		W4473	2508Z			24-41-11	001-099
	51	UNUSED						115-199
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D41390J		P71/ /		PLUG				003-099
	1		W1254	0145	20		24-25-12	003-099
	2		W1254	0146	20		24-25-12	003-099
	3		W1254	0147	20		24-25-12	003-099
	4	UNUSED						003-099
	5	UNUSED						003-099
	6	UNUSED						003-099
	7	UNUSED						003-099
	8	UNUSED						003-099
	9	UNUSED						003-099
	10	UNUSED						003-099
	11	UNUSED						003-099
	12	UNUSED						003-099
	13	UNUSED						003-099
	14	UNUSED						003-099
	15	UNUSED						003-099
D41390P		P71/ /		RCPT				003-099
	1		W2398	0001	20		24-25-12	003-099
	2		W2398	0002	20		24-25-12	003-099
	3		W2398	0003	20		24-25-12	003-099
	4	UNUSED						003-099
	5	UNUSED						003-099
	6	UNUSED						003-099
	7	UNUSED						003-099
	8	UNUSED						003-099
	9	UNUSED						003-099
	10	UNUSED						003-099
	11	UNUSED						003-099
	12	UNUSED						003-099

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 122

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41390P		P71/ /		RCPT (continued)				003-099
	13	UNUSED						003-099
	14	UNUSED						003-099
	15	UNUSED						003-099
D41391J		E002-01/ /		RCPT-				001-099
D41391J		E2-1/ /		RCPT-				115-199
	1	UNUSED						001-002, 115-199
	1		W1171	5199R	24		34-45-01	003-099
	2	UNUSED						001-002, 115-199
	2		W1171	5199B	24		34-45-01	003-099
	3	UNUSED						001-002, 115-199
	3		W1171	5199Z			34-45-01	003-099
	4		W1171	5018R	24		34-22-18	ALL
	5		W1171	5018B	24		34-22-18	ALL
	6		W1171	FRCX			34-22-18	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1171	5108R	24		22-12-31	ALL
	11		W1171	5108B	24		22-12-31	ALL
	12		W1171	FRFR			22-12-31	ALL
	13	UNUSED						ALL
	14		W1171	0399	22		22-14-31	001-099
	14		W1171	1010	22		22-14-31	115-199
	15	UNUSED						ALL
	16		W1171	0404	22		22-14-31	001-099
	16		W1171	1015	22		22-14-31	115-199
	17		W1171	0405	22		22-14-31	001-099
	17		W1171	1016	22		22-14-31	115-199
	18	UNUSED						ALL
	19		W1171	5131R	24		22-15-11	ALL
	20		W1171	5131B	24		22-15-11	ALL
	21		W1171	FRGF			22-15-11	ALL
	22		W1171	0406	22		22-15-12	001-099
	22		W1171	1017	22		22-15-12	115-199
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 123

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41391J		E002-01/ /		RCPT- (continued)				001-099
D41391J		E2-1/ /		RCPT- (continued)				115-199
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W1171	0417	22		22-11-32	001-099
	32		W1171	1239	22		22-11-32	115-199
	33		W1171	2539R	24		73-21-12	ALL
	34		W1171	2539B	24		73-21-12	ALL
	35		W1171	2539Z			73-21-12	ALL
	36		W1171	0415	22		22-15-12	001-099
	36		W1171	1028	22		22-15-12	115-199
	37		W1171	5143R	24		22-12-31	ALL
	38		W1171	5143Z			22-12-31	ALL
	39		W1171	5143B	24		22-12-31	ALL
	40		W1171	0403	22		22-14-11	001-099
	40		W1171	1014	22		22-14-11	115-199
	41		W1171	0409	22		22-14-21	001-099
	41		W1171	1020	22		22-14-21	115-199
	42		W1171	0410	22		22-14-21	001-099
	42		W1171	1021	22		22-14-21	115-199
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46		W1171	0391	22		22-14-31	001-099
	46		W1171	1002	22		22-14-31	115-199
	47		W1171	0412	22		22-14-11	001-099
	47		W1171	1025	22		22-14-11	115-199
	48		W1171	5191R	24		34-45-01	ALL
	49		W1171	5191B	24		34-45-01	ALL
	50		W1171	5191Z			34-45-01	ALL
	51		W1171	0457	24		34-45-01	ALL
	52		W1171	0458	24		34-45-01	ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
DED			W1171	1002Z			22-14-31	115-199
DED			W1171	1010Z			22-14-31	115-199
DED			W1171	1014Z			22-14-11	115-199
DED			W1171	1015Z			22-14-31	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 124

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41391J		E002-01/ /		RCPT- (continued)				001-099
D41391J		E2-1/ /		RCPT- (continued)				115-199
	DED		W1171	1016Z			22-14-31	115-199
	DED		W1171	1017Z			22-15-12	115-199
	DED		W1171	1020Z			22-14-21	115-199
	DED		W1171	1021Z			22-14-21	115-199
	DED		W1171	1025Z			22-14-11	115-199
	DED		W1171	1028Z			22-15-12	115-199
	DED		W1171	1239Z			22-11-32	115-199
			W1171	0053	20		34-22-18	ALL
			W1171	0291	20		22-15-11	ALL
			W1171	0297	20		22-12-31	ALL
			W1171	5018Z			34-22-18	ALL
			W1171	5108Z			22-12-31	ALL
			W1171	5131Z			22-15-11	ALL
			W1171	FRCX			34-22-18	ALL
			W1171	FRFR			22-12-31	ALL
			W1171	FRGF			22-15-11	ALL
D41391P		E002-01/ /		PLUG-				ALL
	1	UNUSED						001-002
	1		W4475	5042R	24		34-45-01	003-099
	1		W4475	5021R	24		SPARE	115-199
	2	UNUSED						001-002
	2		W4475	5042B	24		34-45-01	003-099
	2		W4475	5021B	24		SPARE	115-199
	3	UNUSED						001-002
	3		W4475	5042Z			34-45-01	003-099
	3		W4475	5021Z			SPARE	115-199
	4		W4475	5004R	24		34-22-18	ALL
	5		W4475	5004B	24		34-22-18	ALL
	6		W4475	5004Z			34-22-18	ALL
	7		W4475	5007R	24		SPARE	ALL
	8		W4475	5007B	24		SPARE	ALL
	9		W4475	5007Z			SPARE	ALL
	10		W4475	5009R	24		22-12-31	ALL
	11		W4475	5009B	24		22-12-31	ALL
	12		W4475	5009Z			22-12-31	ALL
	13	UNUSED						001-099
	13		W4475	0011	22		SPARE	115-199
	14		W4475	0017	22		22-14-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 125

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41391P		E002-01/ /		PLUG- (continued)				ALL
	15	UNUSED						001-099
	15		W4475	0018	22		SPARE	115-199
	16		W4475	0019	22		22-14-31	ALL
	17		W4475	0020	22		22-14-31	ALL
	18		W4475	0021	22		SPARE	ALL
	19		W4475	5012R	24		22-15-11	ALL
	20		W4475	5012B	24		22-15-11	ALL
	21		W4475	5012Z			22-15-11	ALL
	22		W4475	0022	22		22-15-12	ALL
	23	UNUSED						001-099
	23		W4475	0024	22		SPARE	115-199
	24	UNUSED						001-099
	24		W4475	0025	22		SPARE	115-199
	25		W4475	5020R	24		SPARE	ALL
	26		W4475	5020B	24		SPARE	ALL
	27		W4475	5020Z			SPARE	ALL
	28	UNUSED						001-099
	28		W4475	0050	22		SPARE	115-199
	29	UNUSED						001-099
	29		W4475	5023R	24		SPARE	115-199
	30	UNUSED						001-099
	30		W4475	5023B	24		SPARE	115-199
	31	UNUSED						001-099
	31		W4475	5023Z			SPARE	115-199
	32		W4475	0048	22		22-11-32	ALL
	33		W4475	5031R	24		73-21-12	ALL
	34		W4475	5031B	24		73-21-12	ALL
	35		W4475	5031Z			73-21-12	ALL
	36		W4475	0066	22		22-15-12	ALL
	37		W4475	5032R	24		22-12-31	ALL
	38		W4475	5032Z			22-12-31	ALL
	39		W4475	5032B	24		22-12-31	ALL
	40		W4475	0079	22		22-14-11	ALL
	41		W4475	0081	22		22-14-21	ALL
	42		W4475	0082	22		22-14-21	ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46		W4475	0042	22		22-14-31	ALL
	47		W4475	0084	22		22-14-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 126

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41391P		E002-01/ /		PLUG- (continued)				ALL
	48		W4475	5041R	24		34-45-01	ALL
	49		W4475	5041B	24		34-45-01	ALL
	50		W4475	5041Z			34-45-01	ALL
	51		W4475	0086	24		34-45-01	ALL
	52		W4475	0087	24		34-45-01	ALL
	53		W4475	0088	24		34-45-01	ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D41392J		AW1333/ /		RCPT-				ALL
	1	UNUSED						ALL
	2		W3326	2510R	20		27-51-41	ALL
	3		W3326	2510B	20		27-51-41	ALL
	4		W3326	4251R	20		27-51-41	ALL
	5		W3326	4251B	20		27-51-41	ALL
	6		W3326	4251Y	20		27-51-41	ALL
	7		W3326	4251G	20		27-51-41	ALL
	8		W3326	0002	16		33-43-11	ALL
	9	UNUSED						ALL
	10		W3326	2509B	18		33-44-21	ALL
	11		W3326	1001	20		27-81-31	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	S/R		W3326	1001Z			27-81-31	ALL
	S/R		W3326	2506Z			33-43-11	ALL
	S/R		W3326	2509Z			33-44-21	ALL
	S/R		W3326	2510Z			27-51-41	ALL
	S/R		W3326	4251Z			27-51-41	ALL
D41392P		AW1333/ /		PLUG-				ALL
	1	UNUSED						ALL
	2		W3346	2001R	20		27-51-41	ALL
	3		W3346	2001B	20		27-51-41	ALL
	4		W3346	4001R	20		27-51-41	ALL
	5		W3346	4001B	20		27-51-41	ALL
	6		W3346	4001Y	20		27-51-41	ALL
	7		W3346	4001G	20		27-51-41	ALL
	8		W3346	0001	20		33-43-11	ALL
	9	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 127

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41392P		AW1333/ /		PLUG- (continued)				ALL
	10		W3346	0005	20		33-44-21	ALL
	11		W3346	1005	20		27-81-31	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	S/R		W3346	1005Z			27-81-31	ALL
D41393J		E002-02/ /		RCPT-				001-099
D41393J		E2-2/ /		RCPT-				115-199
	1		W1173	5031R	24		34-22-28	ALL
	2		W1173	5031B	24		34-22-28	ALL
	3		W1173	5031Z			34-22-28	ALL
	4		W1173	5096R	24		22-12-31	ALL
	5		W1173	5096B	24		22-12-31	ALL
	6		W1173	5096Z			22-12-31	ALL
	7		W1173	5094R	24		22-12-31	ALL
	8		W1173	5094B	24		22-12-31	ALL
	9		W1173	5094Z			22-12-31	ALL
	10	UNUSED						001, 003-099, 115-199
	10		W1173	5249R	22		34-58-21	002
	11		W1173	0362	22		22-14-21	001-099
	11		W1173	1142	22		22-14-21	115-199
	12	UNUSED						ALL
	13		W1173	0357	22		22-14-31	001-099
	13		W1173	1124	22		22-14-31	115-199
	14	UNUSED						ALL
	15		W1173	0359	22		22-14-31	001-099
	15		W1173	1131	22		22-14-31	115-199
	16		W1173	0361	22		22-14-31	001-099
	16		W1173	1133	22		22-14-31	115-199
	17		W1173	0368	22		22-15-12	001-099
	17		W1173	1150	22		22-15-12	115-199
	18	UNUSED						001, 003-099
	18		W1173	5249B	22		34-58-21	002
	18		W1173	FRBM			34-58-21	115-199
	19		W1173	5099R	24		22-15-11	ALL
	20		W1173	5099B	24		22-15-11	ALL
	21		W1173	FRAZ			22-15-11	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 128

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41393J		E002-02/ /		RCPT- (continued)				001-099
D41393J		E2-2/ /		RCPT- (continued)				115-199
	24		W1173	0360	22		22-14-31	001-099
	24		W1173	1132	22		22-14-31	115-199
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						001, 003-099, 115-199
	28		W1173	FRPB			34-58-21	002
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33		W1173	2538R	24		73-21-12	ALL
	34		W1173	2538B	24		73-21-12	ALL
	35		W1173	2538Z			73-21-12	ALL
	36		W1173	0366	22		22-14-21	001-099
	36		W1173	1147	22		22-14-21	115-199
	37		W1173	0379	22		22-14-21	001-099
	37		W1173	1074	22		22-14-21	115-199
	38	UNUSED						001-099
	38		W1173	5197B	22		34-58-21	115-199
	39	UNUSED						001-099
	39		W1173	5197R	22		34-58-21	115-199
	40		W1173	0377	22		22-15-12	001-099
	40		W1173	1300	22		22-15-12	115-199
	41	UNUSED						ALL
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 129

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41393J		E002-02/ /		RCPT- (continued)				001-099
D41393J		E2-2/ /		RCPT- (continued)				115-199
	DED		W1173	1074Z			22-14-21	115-199
	DED		W1173	1124Z			22-14-31	115-199
	DED		W1173	1131Z			22-14-31	115-199
	DED		W1173	1132Z			22-14-31	115-199
	DED		W1173	1133Z			22-14-31	115-199
	DED		W1173	1142Z			22-14-21	115-199
	DED		W1173	1147Z			22-14-21	115-199
	DED		W1173	1150Z			22-15-12	115-199
	DED		W1173	1300Z			22-15-12	115-199
			W1173	0271	20		22-15-11	ALL
			W1173	5099Z			22-15-11	ALL
			W1173	FRAZ			22-15-11	ALL
			W1173	0601	20		34-58-21	002
			W1173	5249Z			34-58-21	002
			W1173	FRPB			34-58-21	002
			W1173	0471	20		34-58-21	115-199
			W1173	5197Z			34-58-21	115-199
			W1173	FRBM			34-58-21	115-199
D41393P		E002-02/ /		PLUG-				ALL
	1		W4475	5001R	24		34-22-28	ALL
	2		W4475	5001B	24		34-22-28	ALL
	3		W4475	5001Z			34-22-28	ALL
	4		W4475	5009R	24		22-12-31	ALL
	5		W4475	5009B	24		22-12-31	ALL
	6		W4475	5009Z			22-12-31	ALL
	7		W4475	5008R	24		22-12-31	ALL
	8		W4475	5008B	24		22-12-31	ALL
	9		W4475	5008Z			22-12-31	ALL
	10	UNUSED						001, 003-099, 115-199
	10		W4475	5052R	22		34-58-21	002
	11		W4475	0080	22		22-14-21	ALL
	12		W4475	0012	22		SPARE	ALL
	13		W4475	0013	22		22-14-31	ALL
	14		W4475	0014	22		SPARE	ALL
	15		W4475	0015	22		22-14-31	ALL
	16		W4475	0016	22		22-14-31	ALL
	17		W4475	0023	22		22-15-12	ALL
	18	UNUSED						001, 003-099

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 130

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41393P		E002-02/ /		PLUG- (continued)				ALL
	18		W4475	5052B	22		34-58-21	002
	18		W4475	5022Z			34-58-21	115-199
	19		W4475	5011R	24		22-15-11	ALL
	20		W4475	5011B	24		22-15-11	ALL
	21		W4475	5011Z			22-15-11	ALL
	22	UNUSED						001-099
	22		W4475	0026	22		SPARE	115-199
	23	UNUSED						001-099
	23		W4475	0027	22		SPARE	115-199
	24		W4475	0041	22		22-14-31	ALL
	25		W4475	5020R	24		SPARE	ALL
	26		W4475	5020B	24		SPARE	ALL
	27		W4475	5020Z			SPARE	ALL
	28	UNUSED						001, 003-099, 115-199
	28		W4475	5052Z			34-58-21	002
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						001-099
	32		W4475	0058	22		SPARE	115-199
	33		W4475	5031R	24		73-21-12	ALL
	34		W4475	5031B	24		73-21-12	ALL
	35		W4475	5031Z			73-21-12	ALL
	36		W4475	0081	22		22-14-21	ALL
	37		W4475	0082	22		22-14-21	ALL
	38	UNUSED						001-099
	38		W4475	5022B	22		34-58-21	115-199
	39	UNUSED						001-099
	39		W4475	5022R	22		34-58-21	115-199
	40		W4475	0067	22		22-15-12	ALL
	41	UNUSED						ALL
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 131

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41393P		E002-02/ /		PLUG- (continued)				ALL
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D41394J		AC0880/ /		RCPT-				ALL
	1	UNUSED						001-099
	1		W4206	4501W	20		28-41-21	115-199
	2	UNUSED						001-099
	2		W4206	4501RY	20		28-41-21	115-199
	3	UNUSED						001-099
	3		W4206	4501RK	20		28-41-21	115-199
	4	UNUSED						001-099
	4		W4206	4501RG	20		28-41-21	115-199
	5	UNUSED						001-099
	5		W4206	4501RB	20		28-41-21	115-199
	6	UNUSED						001-099
	6		W4206	4501WK	20		28-41-21	115-199
	7	UNUSED						001-099
	7		W4206	4501RV	20		28-41-21	115-199
	8	UNUSED						001-099
	8		W4206	4501WN	20		28-41-21	115-199
	9	UNUSED						001-099
	9		W4206	4501WR	20		28-41-21	115-199
	10	UNUSED						001-099
	10		W4206	4501WY	20		28-41-21	115-199
	11	UNUSED						001-099
	11		W4206	4501WO	20		28-41-21	115-199
	12	UNUSED						001-099
	12		W4206	4501WG	20		28-41-21	115-199
	13	UNUSED						001-099
	13		W4206	4501WB	20		28-41-21	115-199
	14	UNUSED						001-099
	14		W4206	4501AA	20		SPARE	115-199
	15	UNUSED						001-099
	15		W4206	4501WV	20		SPARE	115-199
	16		W4206	4001R	22		27-51-61	ALL
	17		W4206	4001B	22		27-51-61	ALL
	18		W4206	4001Y	22		27-51-61	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 132

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41394J		AC0880/ /		RCPT- (continued)				ALL
	19		W4206	4001G	22		27-51-61	ALL
	20		W4206	2005R	22		27-51-61	ALL
	21		W4206	2005B	22		27-51-61	ALL
	22		W4206	0041	22		SPARE	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W4206	0023	22		27-81-21	ALL
	26		W4206	0024	22		27-81-21	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	S/R		W4206	YAAC			SPARE	001-099
	S/R		W4206	4501Z			28-41-21	115-199
	S/R		W4206	YAAH			27-51-61	115-199
D41394P		AC0880/ /		PLUG-				ALL
	1	UNUSED						001-099
	1		W3342	4501W	20		28-41-21	115-199
	2	UNUSED						001-099
	2		W3342	4501RY	20		28-41-21	115-199
	3	UNUSED						001-099
	3		W3342	4501RK	20		28-41-21	115-199
	4	UNUSED						001-099
	4		W3342	4501RG	20		28-41-21	115-199
	5	UNUSED						001-099
	5		W3342	4501RB	20		28-41-21	115-199
	6	UNUSED						001-099
	6		W3342	4501WK	20		28-41-21	115-199
	7	UNUSED						001-099
	7		W3342	4501RV	20		28-41-21	115-199

HOOKUP LIST
D280N032

91-21-51
Section D41300
Page 133
Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41394P		AC0880/ /		PLUG- (continued)				ALL
	8	UNUSED						001-099
	8		W3342	4501WN	20		28-41-21	115-199
	9	UNUSED						001-099
	9		W3342	4501WR	20		28-41-21	115-199
	10	UNUSED						001-099
	10		W3342	4501WY	20		28-41-21	115-199
	11	UNUSED						001-099
	11		W3342	4501WO	20		28-41-21	115-199
	12	UNUSED						001-099
	12		W3342	4501WG	20		28-41-21	115-199
	13	UNUSED						001-099
	13		W3342	4501WB	20		28-41-21	115-199
	14	UNUSED						001-099
	14		W3342	4501AA	20		SPARE	115-199
	15	UNUSED						001-099
	15		W3342	4501WV	20		SPARE	115-199
	16		W3342	4002R	20		27-51-61	ALL
	17		W3342	4002B	20		27-51-61	ALL
	18		W3342	4002Y	20		27-51-61	ALL
	19		W3342	4002G	20		27-51-61	ALL
	20		W3342	2002R	20		27-51-61	ALL
	21		W3342	2002B	20		27-51-61	ALL
	22		W3342	0035	20		SPARE	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W3342	0023	20		27-81-21	ALL
	26		W3342	0024	20		27-81-21	ALL
I	27	UNUSED						ALL
	28	UNUSED						ALL
I	29	UNUSED						ALL
	30	UNUSED						ALL
I	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 134

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41394P		AC0880/ /		PLUG- (continued)				ALL
	S/R		W3342	4501Z			28-41-21	115-199
D41395J		E002-03/ /		RCPT-				001-099
D41395J		E2-3/ /		RCPT-				115-199
	1		W1175	5085R	24		34-22-38	ALL
	2		W1175	5085B	24		34-22-38	ALL
	3		W1175	5085Z			34-22-38	ALL
	4		W1175	5009R	24		34-22-39	ALL
	5		W1175	5009B	24		34-22-39	ALL
	6		W1175	FRCV			34-22-39	ALL
	7		W1175	5025Z			31-31-41	001-099
	7		W1175	5025Z			31-31-21	115-199
	8		W1175	5025B	24		31-31-41	001-099
	8		W1175	5025B	24		31-31-21	115-199
	9		W1175	5025R	24		31-31-41	001-099
	9		W1175	5025R	24		31-31-21	115-199
	10		W1175	0337	22		22-14-11	ALL
	11		W1175	0195	22		22-12-31	ALL
	12		W1175	5049R	24		22-12-31	ALL
	13		W1175	5049B	24		22-12-31	ALL
	14		W1175	FRDP			22-12-31	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W1175	0198	22		22-12-31	ALL
	19		W1175	0199	22		22-12-31	ALL
	20		W1175	0200	22		22-12-31	ALL
	21		W1175	0201	22		22-12-31	ALL
	22		W1175	5051R	24		22-12-31	ALL
	23		W1175	5051B	24		22-12-31	ALL
	24		W1175	5051Z			22-12-31	ALL
	25	UNUSED						001, 003-099, 115-199
	25		W1175	5119R	22		34-25-12	002
	26	UNUSED						001, 003-099, 115-199
	26		W1175	5119B	22		34-25-12	002
	27	UNUSED						001, 003-099, 115-199
	27		W1175	5119Z			34-25-12	002
	28	UNUSED						ALL
	29		W1175	0220	22		22-14-31	ALL
	30	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 135

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41395J		E002-03/ /		RCPT- (continued)				001-099
D41395J		E2-3/ /		RCPT- (continued)				115-199
	31		W1175	0216	22		22-14-31	ALL
	32		W1175	0218	22		22-14-31	ALL
	33		W1175	0387	22		22-14-31	001-099
	33		W1175	1016	22		22-14-31	115-199
	34	UNUSED						ALL
	35		W1175	0223	22		22-14-31	ALL
	36		W1175	0224	22		22-14-31	ALL
	37	UNUSED						ALL
	38		W1175	5061R	24		22-15-11	ALL
	39		W1175	5061B	24		22-15-11	ALL
	40		W1175	FREL			22-15-11	ALL
	41		W1175	5064R	24		22-15-11	ALL
	42		W1175	5064B	24		22-15-11	ALL
	43		W1175	FREO			22-15-11	ALL
	44		W1175	0233	22		22-15-12	ALL
	45		W1175	0234	22		22-15-12	ALL
	46	UNUSED						001, 003-099, 115-199
	46		W1175	5135R	22		34-46-12	002
	47	UNUSED						001, 003-099, 115-199
	47		W1175	5135B	22		34-46-12	002
	48	UNUSED						001, 003-099, 115-199
	48		W1175	FRNN			34-46-12	002
	49	UNUSED						ALL
	50		W1175	0041	24		34-31-31	ALL
	51		W1175	0048	24		34-33-31	ALL
	52		W1175	0217	22		22-14-31	ALL
	53	UNUSED						001, 003-099, 115-199
	53		W1175	5120R	22		34-25-12	002
	54	UNUSED						001, 003-099, 115-199
	54		W1175	5120B	22		34-25-12	002
	55	UNUSED						001, 003-099, 115-199
	55		W1175	5120Z			34-25-12	002
	DED		W1175	1016Z			22-14-31	115-199
			W1175	0064	20		34-22-39	ALL
			W1175	0194	20		22-12-31	ALL
			W1175	0228	20		22-15-11	ALL
			W1175	0231	20		22-15-11	ALL
			W1175	5009Z			34-22-39	ALL
			W1175	5049Z			22-12-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 136

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41395J		E002-03/ /		RCPT- (continued)				001-099
D41395J		E2-3/ /		RCPT- (continued)				115-199
			W1175	5061Z			22-15-11	ALL
			W1175	5064Z			22-15-11	ALL
			W1175	FRCV			34-22-39	ALL
			W1175	FRDP			22-12-31	ALL
			W1175	FREL			22-15-11	ALL
			W1175	FREO			22-15-11	ALL
			W1175	0537	20		34-46-12	002
			W1175	5135Z			34-46-12	002
			W1175	FRNN			34-46-12	002
D41395P		E002-03/ /		PLUG-				ALL
	1		W4475	5002R	24		34-22-38	ALL
	2		W4475	5002B	24		34-22-38	ALL
	3		W4475	5002Z			34-22-38	ALL
	4		W4475	5003R	24		34-22-39	ALL
	5		W4475	5003B	24		34-22-39	ALL
	6		W4475	5003Z			34-22-39	ALL
	7		W4475	5005Z			31-31-41	001-099
	7		W4475	5005Z			31-31-21	115-199
	8		W4475	5005B	24		31-31-41	001-099
	8		W4475	5005B	24		31-31-21	115-199
	9		W4475	5005R	24		31-31-41	001-099
	9		W4475	5005R	24		31-31-21	115-199
	10		W4475	0079	22		22-14-11	ALL
	11		W4475	0005	22		22-12-31	ALL
	12		W4475	5006R	24		22-12-31	ALL
	13		W4475	5006B	24		22-12-31	ALL
	14		W4475	5006Z			22-12-31	ALL
	15		W4475	5007R	24		SPARE	ALL
	16		W4475	5007B	24		SPARE	ALL
	17		W4475	5007Z			SPARE	ALL
	18		W4475	0006	22		22-12-31	ALL
	19		W4475	0007	22		22-12-31	ALL
	20		W4475	0008	22		22-12-31	ALL
	21		W4475	0009	22		22-12-31	ALL
	22		W4475	5008R	24		22-12-31	ALL
	23		W4475	5008B	24		22-12-31	ALL
	24		W4475	5008Z			22-12-31	ALL
	25		W4475	5010B	24		SPARE	001, 003-099, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 137

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41395P		E002-03/ /		PLUG- (continued)				ALL
	25		W4475	5043R	22		34-25-12	002
	26		W4475	5010R	24		SPARE	001, 003-099, 115-199
	26		W4475	5043B	22		34-25-12	002
	27		W4475	5010Z			SPARE	001, 003-099, 115-199
	27		W4475	5043Z			34-25-12	002
	28		W4475	0012	22		SPARE	001, 003-099, 115-199
	28	UNUSED						002
	29		W4475	0013	22		22-14-31	ALL
	30		W4475	0014	22		SPARE	ALL
	31		W4475	0015	22		22-14-31	ALL
	32		W4475	0016	22		22-14-31	ALL
	33		W4475	0017	22		22-14-31	ALL
	34	UNUSED						001-099
	34		W4475	0018	22		SPARE	115-199
	35		W4475	0019	22		22-14-31	ALL
	36		W4475	0020	22		22-14-31	ALL
	37		W4475	0021	22		SPARE	ALL
	38		W4475	5011R	24		22-15-11	ALL
	39		W4475	5011B	24		22-15-11	ALL
	40		W4475	5011Z			22-15-11	ALL
	41		W4475	5012R	24		22-15-11	ALL
	42		W4475	5012B	24		22-15-11	ALL
	43		W4475	5012Z			22-15-11	ALL
	44		W4475	0022	22		22-15-12	ALL
	45		W4475	0023	22		22-15-12	ALL
	46	UNUSED						001, 003-099
	46		W4475	5189R	22		34-46-12	002
	46		W4475	0024	22		SPARE	115-199
	47	UNUSED						001, 003-099
	47		W4475	5189B	22		34-46-12	002
	47		W4475	0025	22		SPARE	115-199
	48	UNUSED						001, 003-099
	48		W4475	5189Z			34-46-12	002
	48		W4475	0026	22		SPARE	115-199
	49	UNUSED						001-099
	49		W4475	0027	22		SPARE	115-199
	50		W4475	0037	24		34-31-31	ALL
	51		W4475	0038	24		34-33-31	ALL
	52		W4475	0041	22		22-14-31	ALL
	53	UNUSED						001, 003-099

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 138

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41395P		E002-03/ /		PLUG- (continued)				ALL
	53		W4475	5044R	22		34-25-12	002
	53		W4475	5021R	24		SPARE	115-199
	54	UNUSED						001, 003-099
	54		W4475	5044B	22		34-25-12	002
	54		W4475	5021B	24		SPARE	115-199
	55	UNUSED						001, 003-099
	55		W4475	5044Z			34-25-12	002
	55		W4475	5021Z			SPARE	115-199
	REF	JB	W4475	0012	22		SPARE	002
	REF	JB	W4475	5010B	24		SPARE	002
	REF	JB	W4475	5010R	24		SPARE	002
	REF	JB	W4475	5010Z			SPARE	002
D41396J		FSS333/ /		RCPT				ALL
	1	UNUSED						ALL
	2		W3426	2511R	20		27-51-61	ALL
	3		W3426	2511B	20		27-51-61	ALL
	4		W3426	4252B	20		27-51-61	ALL
	5		W3426	4252R	20		27-51-61	ALL
	6		W3426	4252Y	20		27-51-61	ALL
	7		W3426	4252G	20		27-51-61	ALL
	8		W3426	0002	20		33-43-12	ALL
	9	UNUSED						ALL
	10		W3426	2509B	18		33-44-21	ALL
	11		W3426	1001	20		27-81-31	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	S/R		W3426	1001Z			27-81-31	ALL
	S/R		W3426	2506Z			33-43-12	ALL
	S/R		W3426	2509Z			33-44-21	ALL
	S/R		W3426	2511Z			27-51-61	ALL
	S/R		W3426	4252Z			27-51-61	ALL
D41396P		AW2333/ /		PLUG-				ALL
	1	UNUSED						ALL
	2		W3424	2001R	20		27-51-61	ALL
	3		W3424	2001B	20		27-51-61	ALL
	4		W3424	4001B	20		27-51-61	ALL
	5		W3424	4001R	20		27-51-61	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 139

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41396P		AW2333/ /		PLUG- (continued)				ALL
	6		W3424	4001Y	20		27-51-61	ALL
	7		W3424	4001G	20		27-51-61	ALL
	8		W3424	0001	20		33-43-12	ALL
	9	UNUSED						ALL
	10		W3424	0005	20		33-44-21	ALL
	11		W3424	1005	20		27-81-31	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	S/R		W3424	1005Z			27-81-31	ALL
D41397J		E002-04/ /		RCPT				001-099
D41397J		E2-4/ /		RCPT				115-199
	1		W1177	5048R	24		34-22-28	ALL
	2		W1177	5048B	24		34-22-28	ALL
	3		W1177	5048Z			34-22-28	ALL
	4		W1177	5046R	24		34-22-18	ALL
	5		W1177	5046B	24		34-22-18	ALL
	6		W1177	5046Z			34-22-18	ALL
	7		W1177	0045	22		34-21-31	ALL
	8		W1177	0046	22		34-21-31	ALL
	9		W1177	0047	22		34-21-31	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W1177	5050R	24		22-21-11	ALL
	14		W1177	5050B	24		22-21-11	ALL
	15		W1177	5050Z			22-21-11	ALL
	16		W1177	0054	22		22-21-11	ALL
	17		W1177	5045R	24		34-22-38	ALL
	18		W1177	5045B	24		34-22-38	ALL
	19		W1177	5045Z			34-22-38	ALL
	20		W1177	0072	20		34-21-31	001-099
	20		W1177	0072	24		34-21-31	115-199
	21		W1177	5054B	22		32-42-11	001-099
	21		W1177	5054B	24		32-42-11	115-199
	22		W1177	5054R	22		32-42-11	001-099
	22		W1177	5054R	24		32-42-11	115-199
	23		W1177	5054Z			32-42-11	ALL
	24	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 140

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41397J		E002-04/ /		RCPT (continued)				001-099
D41397J		E2-4/ /		RCPT (continued)				115-199
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50		W1177	5074R	22		34-58-21	115-199
	51		W1177	5074B	22		34-58-21	115-199
	52		W1177	5074Z			34-58-21	115-199
	53		W1177	5072R	22		34-58-11	115-199
	54		W1177	5072B	22		34-58-11	115-199
	55		W1177	5072Z			34-58-11	115-199
D41397P		E002-04/ /		PLUG-				ALL
	1		W4475	5001R	24		34-22-28	ALL
	2		W4475	5001B	24		34-22-28	ALL
	3		W4475	5001Z			34-22-28	ALL
	4		W4475	5004R	24		34-22-18	ALL
	5		W4475	5004B	24		34-22-18	ALL
	6		W4475	5004Z			34-22-18	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 141

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41397P		E002-04/ /		PLUG- (continued)				ALL
	7		W4475	0001	22		34-21-31	ALL
	8		W4475	0002	22		34-21-31	ALL
	9		W4475	0003	22		34-21-31	ALL
	10	UNUSED						001-099
	10		W4475	5010B	24		SPARE	115-199
	11	UNUSED						001-099
	11		W4475	5010R	24		SPARE	115-199
	12	UNUSED						001-099
	12		W4475	5010Z			SPARE	115-199
	13		W4475	5015R	24		22-21-11	ALL
	14		W4475	5015B	24		22-21-11	ALL
	15		W4475	5015Z			22-21-11	ALL
	16		W4475	0032	22		22-21-11	ALL
	17		W4475	5002R	24		34-22-38	ALL
	18		W4475	5002B	24		34-22-38	ALL
	19		W4475	5002Z			34-22-38	ALL
	20		W4475	0043	20		34-21-31	ALL
	21		W4475	5019B	22		32-42-11	001-099
	21		W4475	5019B	24		32-42-11	115-199
	22		W4475	5019R	22		32-42-11	001-099
	22		W4475	5019R	24		32-42-11	115-199
	23		W4475	5019Z			32-42-11	ALL
	24		W4475	5025R	24		SPARE	001-099
	24	UNUSED						115-199
	25		W4475	5025B	24		SPARE	001-099
	25	UNUSED						115-199
	26		W4475	5025Z			SPARE	001-099
	26	UNUSED						115-199
	27	UNUSED						001-099
	27		W4475	5023R	24		SPARE	115-199
	28	UNUSED						001-099
	28		W4475	5023B	24		SPARE	115-199
	29	UNUSED						001-099
	29		W4475	5023Z			SPARE	115-199
	30	UNUSED						001-099
	30		W4475	0051	22		SPARE	115-199
	31	UNUSED						001-099
	31		W4475	5025R	24		SPARE	115-199
	32		W4475	5025B	24		SPARE	115-199
	33		W4475	5025Z			SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 142

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41397P		E002-04/ /		PLUG- (continued)				ALL
	34		W4475	0052	22		SPARE	115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50		W4475	5022R	22		34-58-21	115-199
	51		W4475	5022B	22		34-58-21	115-199
	52		W4475	5022Z			34-58-21	115-199
	53		W4475	5038R	22		34-58-11	115-199
	54		W4475	5038B	22		34-58-11	115-199
	55		W4475	5038Z			34-58-11	115-199
D41399J		E003-01/ /		RCPT				ALL
	1		W1265	0485	22		22-22-11	ALL
	2		W1265	0486	22		22-22-11	ALL
	3		W1265	5204R	24		22-22-11	ALL
	4		W1265	5204B	24		22-22-11	ALL
	5		W1265	5204Z			22-22-11	ALL
	6		W1265	0489	22		22-22-11	ALL
	7	UNUSED						ALL
	8		W1265	5202R	24		22-21-11	ALL
	9		W1265	5202B	24		22-21-11	ALL
	10		W1265	5202Z			22-21-11	ALL
	11		W1265	0482	22		22-21-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W1265	0729	24		31-31-62	001-099
	15	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 143

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41399J		E003-01/ /		RCPT (continued)				ALL
	16		W1265	0426	22		27-09-13	ALL
	17		W1265	0427	22		27-09-13	ALL
	18		W1265	0419	22		27-09-12	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W1265	0492	22		22-24-11	ALL
	26		W1265	0593	22		27-09-12	ALL
	27		W1265	0591	22		27-09-12	ALL
	28		W1265	0589	22		27-09-12	ALL
	29		W1265	0520	22		27-61-13	ALL
	30		W1265	0521	22		27-61-13	ALL
	31		W1265	0730	24		31-31-62	001-099
	31	UNUSED						115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 144

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41399J		E003-01/ /		RCPT (continued)				ALL
	55	UNUSED						115-199
D41399P		E003-01/ /		PLUG-				ALL
	1		W4475	0028	22		22-22-11	ALL
	2		W4475	0029	22		22-22-11	ALL
	3		W4475	5013R	24		22-22-11	ALL
	4		W4475	5013B	24		22-22-11	ALL
	5		W4475	5013Z			22-22-11	ALL
	6		W4475	0030	22		22-22-11	ALL
	7	UNUSED						001-099
	7		W4475	0031	22		SPARE	115-199
	8		W4475	5015R	24		22-21-11	ALL
	9		W4475	5015B	24		22-21-11	ALL
	10		W4475	5015Z			22-21-11	ALL
	11		W4475	0032	22		22-21-11	ALL
	12		W4475	5024R	24		SPARE	ALL
	13		W4475	5024B	24		SPARE	ALL
	14		W4475	5024Z			SPARE	ALL
	15		W4475	0065	24		31-31-62	001-099
	15	UNUSED						115-199
	16		W4475	0034	22		27-09-13	ALL
	17		W4475	0033	22		27-09-13	ALL
	18		W4475	0036	22		27-09-12	ALL
	19		W4475	5025R	24		SPARE	ALL
	20		W4475	5025B	24		SPARE	ALL
	21		W4475	5025Z			SPARE	ALL
	22	UNUSED						001-099
	22		W4475	0056	22		SPARE	115-199
	23	UNUSED						001-099
	23		W4475	0059	22		SPARE	115-199
	24		W4475	0047	22		SPARE	001-099
	24		W4475	0060	22		SPARE	115-199
	25		W4475	0063	22		22-24-11	ALL
	26		W4475	0074	22		27-09-12	ALL
	27		W4475	0046	22		27-09-12	ALL
	28		W4475	0076	22		27-09-12	ALL
	29		W4475	2001R	22		22-12-31	ALL
	30		W4475	2001B	22		22-12-31	ALL
	31		W4475	0089	24		31-31-62	001-099
	31	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 145

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41399P		E003-01/ /		PLUG- (continued)				ALL
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41300

Page 146 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41401J		E003-02/ /		RCPT-				001-099
D41401J		E3-2/ /		RCPT-				115-199
	1		W1423	5013B	24		22-41-11	ALL
	2		W1423	5013R	24		22-41-11	ALL
	3		W1423	FRAL			22-41-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
			W1423	0063	20		22-41-11	ALL
			W1423	5013Z			22-41-11	ALL
			W1423	FRAL			22-41-11	ALL
D41401P		E003-02/ /		PLUG-				ALL
	1		W4475	5014B	24		22-41-11	ALL
	2		W4475	5014R	24		22-41-11	ALL
	3		W4475	5014Z			22-41-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 1

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41401P		E003-02/ /		PLUG- (continued)				ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
D41403J		E3-3/ /		RCPT-				ALL
	1		W1433	5028R	24		31-31-42	001-099
	1		W1433	5028R	24		31-31-22	115-199
	2		W1433	5028B	24		31-31-42	001-099
	2		W1433	5028B	24		31-31-22	115-199
	3		W1433	FRAV			31-31-42	001-099
	3		W1433	FRAV			31-31-22	115-199
	4		W1433	5049R	24		31-31-42	001-099
	4		W1433	FRBJ			31-31-22	115-199
	5		W1433	5049B	24		31-31-42	001-099
	5		W1433	5046R	24		31-31-22	115-199
	6		W1433	FRDD			31-31-42	001-099
	6		W1433	5046B	24		31-31-22	115-199
	7		W1433	5065R	24		31-31-43	001-099
	7		W1433	FRBK			31-31-22	115-199
	8		W1433	5065B	24		31-31-43	001-099
	8		W1433	5047R	24		31-31-22	115-199
	9		W1433	FRDI			31-31-43	001-099
	9		W1433	5047B	24		31-31-22	115-199
	10		W1433	5067R	24		31-31-43	001-099
	10		W1433	5052R	24		31-31-22	115-199
	11		W1433	5067B	24		31-31-43	001-099
	11		W1433	5052B	24		31-31-22	115-199
	12		W1433	FRDP			31-31-43	001-099
	12		W1433	FRBQ			31-31-22	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 2

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41403J		E3-3/ /		RCPT- (continued)				ALL
	13		W1433	5061R	24		31-31-42	001-099
	13	UNUSED						115-199
	14		W1433	5061B	24		31-31-42	001-099
	14	UNUSED						115-199
	15		W1433	FRDB			31-31-42	001-099
	15	UNUSED						115-199
	16		W1433	0397	24		31-31-62	001-099
	16	UNUSED						115-199
	17		W1433	0398	24		31-31-62	001-099
	17	UNUSED						115-199
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
			W1433	0404	20		31-31-42	001-099
			W1433	0407	20		31-31-42	001-099
			W1433	0412	20		31-31-43	001-099
			W1433	0419	20		31-31-43	001-099
			W1433	0420	20		31-31-42	001-099
			W1433	5028Z			31-31-42	001-099
			W1433	5049Z			31-31-42	001-099
			W1433	5061Z			31-31-42	001-099
			W1433	5065Z			31-31-43	001-099
			W1433	5067Z			31-31-43	001-099
			W1433	FRAV			31-31-42	001-099
			W1433	FRDB			31-31-42	001-099
			W1433	FRDD			31-31-42	001-099
			W1433	FRDI			31-31-43	001-099
			W1433	FRDP			31-31-43	001-099
			W1433	0128	20		31-31-22	115-199
			W1433	0166	20		31-31-22	115-199
			W1433	0167	20		31-31-22	115-199
			W1433	0172	20		31-31-22	115-199
			W1433	5028Z			31-31-22	115-199
			W1433	5046Z			31-31-22	115-199
			W1433	5047Z			31-31-22	115-199
			W1433	5052Z			31-31-22	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 3

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41403J		E3-3/ /		RCPT- (continued)				ALL
			W1433	FRAV			31-31-22	115-199
			W1433	FRBJ			31-31-22	115-199
			W1433	FRBK			31-31-22	115-199
			W1433	FRBQ			31-31-22	115-199
D41403P		E003-03/ /		PLUG-				ALL
	1		W4475	5027R	24		31-31-42	001-099
	1		W4475	5027R	24		31-31-22	115-199
	2		W4475	5027B	24		31-31-42	001-099
	2		W4475	5027B	24		31-31-22	115-199
	3		W4475	5027Z			31-31-42	001-099
	3		W4475	5027Z			31-31-22	115-199
	4		W4475	5028R	24		31-31-42	001-099
	4		W4475	5028Z			31-31-22	115-199
	5		W4475	5028B	24		31-31-42	001-099
	5		W4475	5028R	24		31-31-22	115-199
	6		W4475	5028Z			31-31-42	001-099
	6		W4475	5028B	24		31-31-22	115-199
	7		W4475	5029R	24		31-31-43	001-099
	7		W4475	5029Z			31-31-22	115-199
	8		W4475	5029B	24		31-31-43	001-099
	8		W4475	5029R	24		31-31-22	115-199
	9		W4475	5029Z			31-31-43	001-099
	9		W4475	5029B	24		31-31-22	115-199
	10		W4475	5030R	24		31-31-43	001-099
	10		W4475	5030R	24		31-31-22	115-199
	11		W4475	5030B	24		31-31-43	001-099
	11		W4475	5030B	24		31-31-22	115-199
	12		W4475	5030Z			31-31-43	001-099
	12		W4475	5030Z			31-31-22	115-199
	13		W4475	5114R	24		31-31-42	001-099
	13	UNUSED						115-199
	14		W4475	5114B	24		31-31-42	001-099
	14	UNUSED						115-199
	15		W4475	5114Z			31-31-42	001-099
	15	UNUSED						115-199
	16		W4475	0065	24		31-31-62	001-099
	16	UNUSED						115-199
	17		W4475	0089	24		31-31-62	001-099
	17	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 4

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41403P		E003-03/ /		PLUG- (continued)				ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D41406J		AC1090/ /		RCPT				ALL
	1	VN	W4210	1002	22		29-33-11	ALL
	2		W4210	0042	20		28-22-31	ALL
	3		W4210	0041	20		28-22-31	ALL
	4		W4210	0040	20		28-22-31	ALL
	5		W4210	0075	20		28-22-31	001-008, 115-199
	5	UNUSED						009-099
	6		W4210	0033	22		26-17-11	001-099
	6		W4210	0033	20		26-17-11	115-199
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	= C1		W4210	1002Z			29-33-11	ALL
D41406P		AC1090/ /		PLUG				ALL
	1		W2416	001TX	20		29-33-11	ALL
	2		W2416	4251B	18		28-22-31	ALL
	3		W2416	4251R	18		28-22-31	ALL
	4		W2416	4251Y	18		28-22-31	ALL
	5		W2416	4251G	18		28-22-31	ALL
	6		W2416	1010	18		26-17-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	= C1		W2416	001TI			29-33-11	ALL
	S/R		W2416	001TO			29-33-11	ALL
	S/R		W2416	1010Z			26-17-11	ALL
	S/R		W2416	4251Z			28-22-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 5

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41408J		P37/ /		RCPT				ALL
	1		W1270	0032	16		33-24-11	001-099
	1	UNUSED						115-199
	2	UNUSED						001-099
	2	16	W1270	0032	16		33-24-11	115-199
	3		W1270	0031	22		33-24-11	ALL
	4	UNUSED						ALL
	5		W1270	0029	20		33-24-11	ALL
	6		W1270	0372	24		33-24-11	001-099
	6		W1270	0372	22		33-24-11	115-199
	7	UNUSED						001-099
	7		W1270	0616	22		33-22-11	115-199
	8	UNUSED						ALL
	9		W1270	0625	22		33-21-51	ALL
	10		W1270	0629	22		33-21-51	ALL
	11	UNUSED						001-099
	11		W1270	0053	22		33-27-31	115-199
	12	UNUSED						001-099
	12		W1270	0052	22		33-27-31	115-199
	13	UNUSED						ALL
	14		W1270	0112	20		33-42-12	ALL
	15	UNUSED						ALL
	16		W1270	0113	20		33-42-12	ALL
	17	UNUSED						001-099
	17		W1270	0114	20		33-42-12	115-199
	18	UNUSED						ALL
	19	18	W1270	6450	18		78-34-61	ALL
	20	UNUSED						ALL
	21		W1270	0115	20		33-42-21	001-099
	21	UNUSED						115-199
	22	UNUSED						ALL
	23	UNUSED						001, 003-099, 115-199
	23		W1270	6456	22		34-22-26	002
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W1270	0615	18		24-51-25	ALL
	31	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 6

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41408J		P37/ /		RCPT (continued)				ALL
	32		W1272	0224	16		33-21-11	ALL
	33		W1272	0223	16		33-21-11	ALL
	34	UNUSED						001-099
	34		W1270	0096	18		33-31-41	115-199
	35	UNUSED						001-099
	35		W1270	0115	20		33-42-21	115-199
	36		W1270	0165	18		28-22-11	ALL
	37		W1270	0885	18		28-22-11	ALL
	38		W1272	0227	16		33-21-31	ALL
	39		W1272	0226	16		33-21-31	ALL
	40	UNUSED						ALL
	41		W1270	1054	22		33-21-51	ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
D41408P		P037-00/ /		PLUG-				001-099
D41408P		P37/ /		PLUG-				115-199
	1		W2356	0263	16		33-24-11	001-099
	1		W2356	0262	22		SPARE	115-199
	2	UNUSED						001-099
	2	16	W2356	0263	16		33-24-11	115-199
	3		W2356	0264	22		33-24-11	ALL
	4	UNUSED						ALL
	5		W2356	0266	20		33-24-11	001-099
	5	16	W2356	0266	16		33-24-11	115-199
	6		W2356	0267	24		33-24-11	001-099
	6		W2356	0267	22		33-24-11	115-199
	7	UNUSED						001-099
	7		W2356	0271	22		33-22-11	115-199
	8	UNUSED						001-099
	8		W2356	0272	22		SPARE	115-199
	9		W2356	0273	22		33-21-51	ALL
	10		W2356	0274	22		33-21-51	ALL
	11		W2356	0275	22		SPARE	001-099
	11		W2356	0275	22		33-27-31	115-199
	12		W2356	0276	22		SPARE	001-099
	12		W2356	0276	22		33-27-31	115-199
	13	UNUSED						ALL
	14		W2356	0278	20		33-42-12	ALL
	15	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 7

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41408P		P037-00/ /		PLUG- (continued)				001-099
D41408P		P37/ /		PLUG- (continued)				115-199
	15		W2356	0284	18		SPARE	115-199
	16		W2356	0279	20		33-42-12	ALL
	17	UNUSED						001-099
	17		W2356	0280	20		33-42-12	115-199
	18	UNUSED						001-099
	18		W2356	0330	22		SPARE	115-199
	19	16	W2356	0113	16		78-34-61	ALL
	20	UNUSED						001-099
	20		W2356	0332	22		SPARE	115-199
	21		W2356	0292	20		33-42-21	001-099
	21	UNUSED						115-199
	22	UNUSED						001-099
	22		W2356	0285	18		SPARE	115-199
	23	UNUSED						001, 003-099
	23		W2356	0020	22		34-22-26	002
	23		W2356	0020	20		SPARE	115-199
	24	UNUSED						001-099
	24		W2356	0324	20		SPARE	115-199
	25	UNUSED						001-099
	25		W2356	0325	20		SPARE	115-199
	26	UNUSED						ALL
	27	UNUSED						001-099
	27		W2356	0286	18		SPARE	115-199
	28	UNUSED						001-099
	28		W2356	0248	18		SPARE	115-199
	29	UNUSED						001-099
	29		W2356	0249	18		SPARE	115-199
	30		W2356	0250	18		24-51-25	ALL
	31	UNUSED						001-099
	31		W2356	0251	18		SPARE	115-199
	32		W2356	0295	16		33-21-11	ALL
	33		W2356	0296	16		33-21-11	ALL
	34	UNUSED						001-099
	34		W2356	0297	18		33-31-41	115-199
	35	UNUSED						001-099
	35		W2356	0292	20		33-42-21	115-199
	36		W2356	0606	18		28-22-11	ALL
	37		W2356	0607	18		28-22-11	ALL
	38		W2356	0610	16		33-21-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 8

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41408P		P037-00/ /		PLUG- (continued)				001-099
D41408P		P37/ /		PLUG- (continued)				115-199
	39		W2356	0611	16		33-21-31	ALL
	40	UNUSED						001-099
	40		W2356	0612	18		SPARE	115-199
	41		W2356	0092	22		33-21-51	ALL
	42	UNUSED						ALL
	43	UNUSED						001-099
	43		W2356	0253	22		SPARE	115-199
	CAP	Y	W2356	0331	22		SPARE	115-199
D41409J		E4-2/ /		RCPT-				ALL
	1		W1275	0244	24		34-21-31	ALL
	1		W1275	0245	24		34-21-31	ALL
	2		W1275	0247	24		34-21-31	ALL
	2		W1275	0248	24		34-21-31	ALL
	3		W1275	0250	24		34-21-31	ALL
	3		W1275	0251	24		34-21-31	ALL
	4		W1275	6166	24		27-58-31	ALL
	4		W1275	6167	24		27-58-31	ALL
	5		W1275	6173	22		29-11-31	ALL
	6		W1275	6172	22		29-11-31	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1275	6162	24		27-58-31	ALL
	11	UNUSED						ALL
	12		W1275	0374	24		22-14-31	ALL
	12		W1275	0376	24		22-14-31	ALL
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 9

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41409J		E4-2/ /		RCPT- (continued)				ALL
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D41409P		E004-02/ /		PLUG-				ALL
	1		W4475	0001	22		34-21-31	ALL
	2		W4475	0002	22		34-21-31	ALL
	3		W4475	0003	22		34-21-31	ALL
	4		W4475	0040	24		27-58-31	ALL
	5		W4475	0033	22		27-09-13	ALL
	6		W4475	0034	22		27-09-13	ALL
	7		W4475	0047	22		SPARE	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 10

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41409P		E004-02/ /		PLUG- (continued)				ALL
	7	UNUSED						115-199
	8	UNUSED						001-099
	8		W4475	0051	22		SPARE	115-199
	9	UNUSED						ALL
	10		W4475	0053	24		27-58-31	ALL
	11	UNUSED						001-099
	11		W4475	0054	24		SPARE	115-199
	12		W4475	0042	22		22-14-31	ALL
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 11

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41409P		E004-02/ /		PLUG- (continued)				ALL
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52		W4475	0052	22		SPARE	115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D41410J		P33/ /		RCPT				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1230	0729	24		30-31-11	001-099
	3		W1232	0127	24		30-31-11	115-199
	4		W1230	0457	20		33-44-21	001-099
	4		W1234	0060	20		33-44-21	115-199
	5		W1230	0446	20		33-42-11	001-099
	5		W1234	0047	20		33-42-11	115-199
	6		W1230	0444	20		33-42-11	001-099
	6		W1234	0045	20		33-42-11	115-199
	7		W1230	0712	22		34-12-12	001-099
	7		W1232	0106	24		34-12-12	115-199
	8		W1230	0713	22		34-12-12	001-099
	8		W1232	0107	24		34-12-12	115-199
	9		W1230	0245	24		27-51-31	001-099
	9		W1230	0245	22		27-51-31	115-199
	10		W1230	0708	22		30-32-11	001-099
	10		W1232	0097	22		30-32-11	115-199
	11		W1230	0445	20		33-42-11	001-099
	11		W1234	0046	20		33-42-11	115-199
	12		W1230	0696	24		30-31-11	001-099
	12		W1232	0085	24		30-31-11	115-199
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						001-099
	15		W1232	0104	22		32-09-11	115-199
	16	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 12

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41410J		P33/ /		RCPT (continued)				ALL
	17	UNUSED						001-099
	17	18	W1232	0067	18		28-22-11	115-199
	18		W1230	0737	20		33-42-12	001-099
	18	18	W1232	0069	18		28-22-11	115-199
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W1230	0686	18		28-22-11	001-099
	21	UNUSED						115-199
	22	UNUSED						ALL
	23		W1230	0869	18		28-22-11	001-099
	23	UNUSED						115-199
	24	UNUSED						ALL
	25		W1230	0736	20		33-42-12	001-099
	25	UNUSED						115-199
	26	UNUSED						ALL
	27		W1230	0467	22		29-11-11	001-099
	27		W1234	0089	22		29-11-11	115-199
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W1230	0703	24		30-32-11	001-099
	31		W1232	0092	24		30-32-11	115-199
	32	UNUSED						001-099
	33	UNUSED						001-099
	34	UNUSED						001-099
	35	UNUSED						001-099
	36	UNUSED						001-099
	37	UNUSED						001-099
	38	UNUSED						001-099
	39	UNUSED						001-099
D41410P		AP0033/ /		PLUG				001-099
D41410P		P33/ /		PLUG				115-199
	1		W2064	0260	20		SPARE	ALL
	2		W2064	0261	20		SPARE	ALL
	3		W2064	0001	24		30-31-11	ALL
	4		W2064	0029	20		33-44-21	ALL
	5		W2064	0032	20		33-42-11	ALL
	6		W2064	0033	20		33-42-11	ALL
	7		W2064	0319	24		34-12-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 13

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41410P		AP0033/ /		PLUG (continued)				001-099
D41410P		P33/ /		PLUG (continued)				115-199
	8		W2064	0299	24		34-12-12	ALL
	9		W2064	0164	24		27-51-31	001-099
	9		W2064	0164	20		27-51-31	115-199
	10		W2064	0165	20		30-32-11	ALL
	11		W2064	0005	20		33-42-11	ALL
	12		W2064	0325	24		30-31-11	ALL
	13	UNUSED						001-099
	13		W2064	0166	20		SPARE	115-199
	14	UNUSED						ALL
	15		W2064	0089	22		SPARE	001-099
	15		W2064	0089	22		32-09-11	115-199
	16	UNUSED						001-099
	16		W2064	0167	20		SPARE	115-199
	17		W2064	0172	20		SPARE	001-099
	17	18	W2064	0168	18		28-22-11	115-199
	18		W2064	0038	20		33-42-12	001-099
	18	18	W2064	0169	18		28-22-11	115-199
	19		W2064	0170	20		SPARE	ALL
	20		W2064	0171	20		SPARE	ALL
	21		W2064	0168	18		28-22-11	001-099
	21		W2064	0172	20		SPARE	115-199
	22	UNUSED						001-099
	22		W2064	0173	20		SPARE	115-199
	23		W2064	0169	18		28-22-11	001-099
	23		W2064	0174	20		SPARE	115-199
	24	UNUSED						001-099
	24		W2064	0175	20		SPARE	115-199
	25		W2064	0035	20		33-42-12	001-099
	25		W2064	0176	20		SPARE	115-199
	26		W2064	0177	20		SPARE	ALL
	27		W2064	0114	22		29-11-11	ALL
	28		W2064	0036	22		SPARE	001-099
	28	UNUSED						115-199
	29	UNUSED						ALL
	30		W2064	0037	22		SPARE	001-099
	30	UNUSED						115-199
	31		W2064	0018	24		30-32-11	ALL
	32	UNUSED						001-099
	33	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 14

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41410P		AP0033/ /		PLUG (continued)				001-099
D41410P		P33/ /		PLUG (continued)				115-199
	34	UNUSED						001-099
	35	UNUSED						001-099
	36	UNUSED						001-099
	37	UNUSED						001-099
	38	UNUSED						001-099
	39	UNUSED						001-099
D41412J		P33/ /		RCPT				ALL
	1		W1230	0437	24		33-42-11	001-099
	1		W1234	0038	20		33-42-11	115-199
	2		W1230	0439	24		33-42-11	001-099
	2		W1234	0040	20		33-42-11	115-199
	3		W1230	0441	24		33-42-11	001-099
	3		W1234	0042	20		33-42-11	115-199
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	16	W1230	0173	16		29-11-12	ALL
	13		W1230	0174	22		29-11-12	ALL
	14	UNUSED						ALL
	15	16	W1230	0172	16		29-11-12	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W1230	0456	20		33-43-11	001-099
	18		W1234	0059	20		33-43-11	115-199
	19	UNUSED						ALL
	20		W1230	0128	22		27-51-21	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26		W1230	0462	24		27-81-11	001-099
	26		W1234	0084	22		27-81-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 15

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41412J		P33/ /		RCPT (continued)				ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W1230	0461	24		27-51-11	001-099
	29		W1234	0083	22		27-51-11	115-199
	30	UNUSED						ALL
	31		W1230	0451	24		33-22-11	001-099
	31		W1234	0054	22		33-22-11	115-199
	32	UNUSED						001-099
	33	UNUSED						001-099
	34	UNUSED						001-099
	35	UNUSED						001-099
	36	UNUSED						001-008
	36		W1230	0761	24		28-22-32	009-099
	37	UNUSED						001-008
	37		W1230	0762	24		28-22-32	009-099
	38	UNUSED						001-008
	38		W1230	0767	20		28-22-32	009-099
	39	UNUSED						001-008
	39		W1230	0768	24		28-22-32	009-099
	40	UNUSED						001-008
	40		W1230	0770	24		28-22-32	009-099
	41	UNUSED						001-008
	41		W1230	0771	24		28-22-32	009-099
	42	UNUSED						001-099
	43	UNUSED						001-099
	44	UNUSED						001-099
	45	UNUSED						001-099
	46	UNUSED						001-099
	47	UNUSED						001-099
	48	UNUSED						001-099
	49	UNUSED						001-099
	50	UNUSED						001-099
	51	UNUSED						001-099
	52	UNUSED						001-099
	53	UNUSED						001-099
	54	UNUSED						001-099
	55	UNUSED						001-099
D41412P		P033-00/ /		PLUG				ALL
	1		W2070	0082	24		33-42-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 16

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41412P		P033-00/ /		PLUG (continued)				ALL
	1		W2070	0082	20		33-42-11	115-199
	2		W2070	0081	24		33-42-11	001-099
	2		W2070	0081	20		33-42-11	115-199
	3		W2070	0080	24		33-42-11	001-099
	3		W2070	0080	20		33-42-11	115-199
	4		W2070	0125	24		SPARE	ALL
	5		W2070	0090	20		SPARE	ALL
	6		W2070	0121	22		27-51-21	ALL
	7		W2070	0439	20		SPARE	ALL
	8	UNUSED						ALL
	9	UNUSED						001-099
	9		W2070	0441	20		SPARE	115-199
	10		W2070	0442	20		SPARE	ALL
	11	UNUSED						001-099
	11		W2070	0443	20		SPARE	115-199
	12	16	W2070	0098	16		29-11-12	ALL
	13		W2070	0112	22		29-11-12	ALL
	14		W2070	0096	20		SPARE	ALL
	15	16	W2070	0097	16		29-11-12	ALL
	16	UNUSED						001-099
	16		W2070	0444	20		SPARE	115-199
	17	UNUSED						001-099
	17		W2070	0445	20		SPARE	115-199
	18		W2070	0210	20		33-43-11	ALL
	19	UNUSED						001-099
	19		W2070	0446	20		SPARE	115-199
	20		W2070	0111	22		27-51-21	ALL
	21	UNUSED						001-099
	21		W2070	0447	20		SPARE	115-199
	22	UNUSED						001-099
	22		W2070	0448	20		SPARE	115-199
	23		W2070	0449	20		SPARE	ALL
	24		W2070	0450	20		SPARE	ALL
	25		W2070	0451	20		SPARE	ALL
	26		W2070	0452	22		27-51-21	ALL
	27	UNUSED						001-099
	27		W2070	0453	20		SPARE	115-199
	28		W2070	0454	20		SPARE	ALL
	29		W2070	0455	22		27-51-21	ALL
	30		W2070	0456	20		SPARE	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 17

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41412P		P033-00/ /		PLUG (continued)				ALL
	31		W2070	0487	24		33-22-11	001-099
	31		W2070	0487	22		33-22-11	115-199
	32		W2070	0474	22		SPARE	001-099
	33		W2070	0475	22		SPARE	001-099
	34		W2070	0476	22		SPARE	001-099
	35		W2070	0477	22		SPARE	001-099
	36	UNUSED						001-008
	36		W2070	0626	20		28-22-32	009-099
	37	UNUSED						001-008
	37		W2070	0630	20		28-22-32	009-099
	38	UNUSED						001-008
	38		W2070	0629	20		28-22-32	009-099
	39	UNUSED						001-008
	39		W2070	0628	20		28-22-32	009-099
	40	UNUSED						001-008
	40		W2070	0627	20		28-22-32	009-099
	41	UNUSED						001-008
	41		W2070	0631	20		28-22-32	009-099
	42	UNUSED						001-099
	43	UNUSED						001-099
	44	UNUSED						001-099
	45	UNUSED						001-099
	46	UNUSED						001-099
	47	UNUSED						001-099
	48	UNUSED						001-099
	49	UNUSED						001-099
	50	UNUSED						001-099
	51	UNUSED						001-099
	52	UNUSED						001-099
	53	UNUSED						001-099
	54	UNUSED						001-099
	55	UNUSED						001-099
	CAP	Y	W2070	0457	20		SPARE	115-199
D41414J		P33/ /		RCPT				ALL
	1		W1230	0662	24		26-15-12	001-099
	1		W1232	0018	24		26-15-12	115-199
	2		W1230	0654	24		26-15-12	001-099
	2		W1232	0009	24		26-15-12	115-199
	3	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 18

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41414J		P33/ /		RCPT (continued)				ALL
	3		W1230	0254	22		29-22-11	115-199
	4		W1230	0450	20		33-42-21	001-099
	4		W1234	0051	20		33-42-21	115-199
	5		W1230	0184	22		29-22-11	ALL
	6		W1230	0675	24		28-22-31	001-099
	6		W1232	0055	24		28-22-31	115-199
	7		W1230	0674	24		28-22-31	001-099
	7		W1232	0054	24		28-22-31	115-199
	8		W1230	0692	24		28-22-31	001-099
	8		W1232	0075	24		28-22-31	115-199
	9		W1230	0185	22		29-22-11	001-099
	9		W1230	0185	20		29-22-11	115-199
	10		W1230	0738	20		33-42-31	001-099
	10	UNUSED						115-199
	11		W1230	0270	24		26-15-11	001-099
	11		W1232	0070	24		26-15-11	115-199
	12		W1230	0271	24		26-15-11	001-099
	12		W1232	0071	24		26-15-11	115-199
	13		W1230	0652	24		26-15-12	001-099
	13		W1232	0007	24		26-15-12	115-199
	14		W1230	0651	24		26-15-12	001-099
	14		W1232	0006	24		26-15-12	115-199
	15		W1230	0688	20		26-22-21	001-099
	15	UNUSED						115-199
	16		W1230	0196	20		26-21-11	ALL
	17		W1230	0658	24		26-15-12	001-099
	17		W1232	0013	24		26-15-12	115-199
	18		W1230	0659	24		26-15-12	001-099
	18		W1232	0014	24		26-15-12	115-199
	19		W1230	0403	24		26-15-12	001-099
	19		W1234	0003	24		26-15-12	115-199
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W1230	0664	24		26-15-12	001-099
	22		W1232	0020	24		26-15-12	115-199
	23	UNUSED						001-099
	23		W1230	0255	22		29-22-11	115-199
	24	UNUSED						001-099
	24		W1230	0256	22		29-22-11	115-199
	25	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 19

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41414J		P33/ /		RCPT (continued)				ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						001-008, 115-199
	49		W1230	0673	20		28-22-31	009-099
	50	UNUSED						ALL
	51		W1230	0247	20		26-22-21	001-099
	51	UNUSED						115-199
	52		W1230	0246	20		26-22-21	001-099
	52	UNUSED						115-199
	53		W1230	0702	24		30-32-11	001-099
	53		W1232	0091	24		30-32-11	115-199
	54		W1230	0706	24		30-32-11	001-099
	54		W1232	0095	24		30-32-11	115-199
	55	UNUSED						001-008, 115-199
	55		W1230	0758	20		28-22-31	009-099
D41414P		P033-00/ /		PLUG				001-099
D41414P		P33/ /		PLUG				115-199
	1		W2078	0062	22		26-15-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 20

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41414P		P033-00/ /		PLUG (continued)				001-099
D41414P		P33/ /		PLUG (continued)				115-199
	2		W2078	0063	22		26-15-12	ALL
	3		W2078	0026	22		SPARE	001-099
	3		W2078	0026	22		29-22-11	115-199
	4		W2078	0114	20		33-42-21	ALL
	5		W2078	0028	22		29-22-11	ALL
	6		W2078	0086	24		28-22-31	ALL
	7		W2078	0281	24		28-22-31	ALL
	8		W2078	0282	20		28-22-31	ALL
	9		W2078	0034	22		29-22-11	ALL
	10		W2078	0144	20		33-42-31	001-099
	10	UNUSED						115-199
	11		W2078	0295	22		26-15-11	ALL
	12		W2078	0296	22		26-15-11	ALL
	13		W2078	0328	22		26-15-12	ALL
	14		W2078	0323	22		26-15-12	ALL
	15		W2078	0145	20		26-22-21	001-099
	15	UNUSED						115-199
	16		W2078	0288	20		26-21-11	ALL
	17		W2078	0330	22		26-15-12	ALL
	18		W2078	0331	22		26-15-12	ALL
	19		W2078	0332	22		26-15-12	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W2078	0335	22		26-15-12	ALL
	23		W2078	0336	20		SPARE	001-099
	23		W2078	0336	20		29-22-11	115-199
	24		W2078	0337	20		SPARE	001-099
	24		W2078	0337	20		29-22-11	115-199
	25	UNUSED						001-099
	25		W2078	0358	20		SPARE	115-199
	26	UNUSED						001-099
	26		W2078	0359	20		SPARE	115-199
	27	UNUSED						001-099
	27		W2078	0360	20		SPARE	115-199
	28	UNUSED						001-099
	28		W2078	0361	20		SPARE	115-199
	29	UNUSED						001-099
	29		W2078	0362	20		SPARE	115-199
	30	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 21

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41414P		P033-00/ /		PLUG (continued)				001-099
D41414P		P33/ /		PLUG (continued)				115-199
	30		W2078	0363	20		SPARE	115-199
	31	UNUSED						001-099
	31		W2078	0364	20		SPARE	115-199
	32	UNUSED						001-099
	32		W2078	0365	20		SPARE	115-199
	33	UNUSED						001-099
	33		W2078	0366	20		SPARE	115-199
	34	UNUSED						001-099
	34		W2078	0367	20		SPARE	115-199
	35	UNUSED						001-099
	35		W2078	0368	20		SPARE	115-199
	36	UNUSED						001-099
	36		W2078	0369	20		SPARE	115-199
	37	UNUSED						001-099
	37		W2078	0370	20		SPARE	115-199
	38		W2078	0371	20		SPARE	ALL
	39		W2078	0372	20		SPARE	ALL
	40		W2078	0373	20		SPARE	ALL
	41		W2078	0374	20		SPARE	ALL
	42	UNUSED						001-099
	42		W2078	0375	20		SPARE	115-199
	43	UNUSED						001-099
	43		W2078	0376	20		SPARE	115-199
	44		W2078	0377	20		SPARE	ALL
	45		W2078	0378	20		SPARE	ALL
	46	UNUSED						001-099
	46		W2078	0379	20		SPARE	115-199
	47		W2078	0380	20		SPARE	ALL
	48		W2078	0381	20		SPARE	ALL
	49		W2078	0382	20		SPARE	001-008, 115-199
	49		W2078	0552	20		28-22-31	009-099
	50	UNUSED						ALL
	51		W2078	0284	20		26-22-21	001-099
	51	UNUSED						115-199
	52		W2078	0283	20		26-22-21	001-099
	52	UNUSED						115-199
	53		W2078	0433	24		30-32-11	ALL
	54		W2078	0466	24		30-32-11	ALL
	55	UNUSED						001-008, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 22

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41414P		P033-00/ /		PLUG (continued)				001-099
D41414P		P33/ /		PLUG (continued)				115-199
	55		W2078	0601	24		28-22-31	009-099
D41416J		P33/ /		RCPT				ALL
	1		W1230	3001R	18		28-22-11	001-099
	1		W1232	3001R	18		28-22-11	115-199
	2		W1230	3001Y	18		28-22-11	001-099
	2		W1232	3001Y	18		28-22-11	115-199
	3		W1230	3001B	18		28-22-11	001-099
	3		W1232	3001B	18		28-22-11	115-199
	4		W1230	0722	24		30-31-11	001-099
	4		W1232	0120	24		30-31-11	115-199
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1230	3003R	16		28-22-11	001-099
	7		W1232	3003R	16		28-22-11	115-199
	8		W1230	3003Y	16		28-22-11	001-099
	8		W1232	3003Y	16		28-22-11	115-199
	9		W1230	3003B	16		28-22-11	001-099
	9		W1232	3003B	16		28-22-11	115-199
	10		W1230	3005R	18		28-22-11	001-099
	10		W1232	3005R	18		28-22-11	115-199
	11		W1230	3005Y	18		28-22-11	001-099
	11		W1232	3005Y	18		28-22-11	115-199
	12		W1230	3005B	18		28-22-11	001-099
	12		W1232	3005B	18		28-22-11	115-199
	13		W1230	0449	20		33-42-21	001-099
	13		W1234	0050	18		33-42-21	115-199
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W1230	0741	20		33-42-31	001-099
	16	UNUSED						115-199
	17	UNUSED						ALL
	18		W1230	0746	24		30-31-11	001-099
	18	UNUSED						115-199
	19	UNUSED						ALL
D41416P		P033-00/ /		PLUG-				ALL
	1		W2256	3012R	18		28-22-11	ALL
	2		W2256	3012Y	18		28-22-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 23

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41416P		P033-00/ /		PLUG- (continued)				ALL
	3		W2256	3012B	18		28-22-11	ALL
	4		W2256	0005	24		30-31-11	001-099
	4		W2256	0005	20		30-31-11	115-199
	5	UNUSED						001-099
	5		W2256	0604	20		SPARE	115-199
	6	UNUSED						001-099
	6		W2256	0601	20		SPARE	115-199
	7		W2256	3002R	16		28-22-11	ALL
	8		W2256	3002Y	16		28-22-11	ALL
	9		W2256	3002B	16		28-22-11	ALL
	10		W2256	3015R	18		28-22-11	ALL
	11		W2256	3015Y	18		28-22-11	ALL
	12		W2256	3015B	18		28-22-11	ALL
	13		W2256	0022	18		33-42-21	ALL
	14	UNUSED						001-099
	14		W2256	0026	20		SPARE	115-199
	15	UNUSED						001-099
	15		W2256	0027	20		SPARE	115-199
	16		W2256	0028	20		33-42-31	001-099
	16		W2256	0028	20		SPARE	115-199
	17	UNUSED						ALL
	18		W2256	0007	24		30-31-11	001-099
	18	UNUSED						115-199
	19	UNUSED						ALL
D41418J		P33/ /		RCPT				ALL
	1		W1230	0421	14		27-81-11	001-099
	1		W1234	0022	14		27-81-11	115-199
	2		W1230	0422	14		27-81-11	001-099
	2		W1234	0023	14		27-81-11	115-199
	3		W1230	0423	14		27-81-11	001-099
	3		W1234	0024	14		27-81-11	115-199
	4		W1230	0405	14		27-51-11	001-099
	4		W1234	0006	14		27-51-11	115-199
	5		W1230	0406	14		27-51-11	001-099
	5		W1234	0007	14		27-51-11	115-199
	6		W1230	0407	14		27-51-11	001-099
	6		W1234	0008	14		27-51-11	115-199
	7	UNUSED						ALL
	8	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 24

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41418J		P33/ /		RCPT (continued)				ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W1230	0454	14		24-53-21	001-099
	11		W1234	0057	14		24-53-21	115-199
	12		W1230	0452	20		24-53-21	001-099
	12		W1234	0055	20		24-53-21	115-199
D41418P		P033-00/ /		PLUG-				ALL
	1		W2244	0023	14		27-81-11	ALL
	2		W2244	0024	14		27-81-11	ALL
	3		W2244	0022	14		27-81-11	ALL
	4		W2244	0019	14		27-51-11	ALL
	5		W2244	0020	14		27-51-11	ALL
	6		W2244	0021	14		27-51-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W2244	0025	14		24-53-21	ALL
	12		W2244	0032	20		24-53-21	ALL
D41419J		E005-03/ /		RCPT				001-099
D41419J		E5-3/ /		RCPT				115-199
	1		W1286	0011	22		22-12-31	ALL
	2		W1286	0012	22		22-12-31	ALL
	3		W1286	0013	22		22-24-11	ALL
	4		W1286	5006R	24		34-22-39	ALL
	5		W1286	5006B	24		34-22-39	ALL
	6		W1286	5006Z			34-22-39	ALL
	7		W1286	0023	22		22-12-31	ALL
	8		W1286	5009R	24		22-12-31	ALL
	9		W1286	5009B	24		22-12-31	ALL
	10		W1286	5009Z			22-12-31	ALL
	11		W1286	0016	24		34-33-31	ALL
	12		W1286	0009	24		34-33-31	ALL
	13		W1286	0255	24		27-58-31	ALL
	14		W1286	0251	24		27-58-31	ALL
	15	UNUSED						ALL
	16		W1286	5007R	24		31-31-43	001-099
	16		W1286	5007R	24		31-31-22	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 25

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41419J		E005-03/ /		RCPT (continued)				001-099
D41419J		E5-3/ /		RCPT (continued)				115-199
	17		W1286	5007B	24		31-31-43	001-099
	17		W1286	5007B	24		31-31-22	115-199
	18		W1286	5007Z			31-31-43	001-099
	18		W1286	5007Z			31-31-22	115-199
	19		W1286	0001	22		76-11-21	ALL
	20		W1286	0261	22		27-48-21	ALL
	21	UNUSED						001-099
	21		W1286	5012R	24		31-51-34	115-199
	22	UNUSED						001-099
	22		W1286	5012B	24		31-51-34	115-199
	23	UNUSED						001-099
	23		W1286	5012Z			31-51-34	115-199
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						001, 003-099, 115-199
	27		W1286	5051R	22		34-46-12	002
	28	UNUSED						001, 003-099, 115-199
	28		W1286	5051B	22		34-46-12	002
	29	UNUSED						001, 003-099, 115-199
	29		W1286	5051Z			34-46-12	002
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 26

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41419J		E005-03/ /		RCPT (continued)				001-099
D41419J		E5-3/ /		RCPT (continued)				115-199
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D41419P		E005-03/ /		PLUG-				ALL
	1		W4475	0006	22		22-12-31	ALL
	2		W4475	0007	22		22-12-31	ALL
	3		W4475	0063	22		22-24-11	ALL
	4		W4475	5003R	24		34-22-39	ALL
	5		W4475	5003B	24		34-22-39	ALL
	6		W4475	5003Z			34-22-39	ALL
	7		W4475	0005	22		22-12-31	ALL
	8		W4475	5006R	24		22-12-31	ALL
	9		W4475	5006B	24		22-12-31	ALL
	10		W4475	5006Z			22-12-31	ALL
	11		W4475	0038	24		34-33-31	ALL
	12		W4475	0039	24		34-33-31	ALL
	13		W4475	0040	24		27-58-31	ALL
	14		W4475	0053	24		27-58-31	ALL
	15	UNUSED						001-099
	15		W4475	0055	24		SPARE	115-199
	16		W4475	5030R	24		31-31-43	001-099
	16		W4475	5030R	24		31-31-22	115-199
	17		W4475	5030B	24		31-31-43	001-099
	17		W4475	5030B	24		31-31-22	115-199
	18		W4475	5030Z			31-31-43	001-099
	18		W4475	5030Z			31-31-22	115-199
	19		W4475	0064	22		76-11-21	ALL
	20		W4475	0077	22		27-48-21	ALL
	21		W4475	5010R	24		SPARE	001-099
	21		W4475	5017R	24		31-51-34	115-199
	22		W4475	5010B	24		SPARE	001-099
	22		W4475	5017B	24		31-51-34	115-199
	23		W4475	5010Z			SPARE	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 27

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41419P		E005-03/ /		PLUG- (continued)				ALL
	23		W4475	5017Z			31-51-34	115-199
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						001, 003-099, 115-199
	27		W4475	5189R	22		34-46-12	002
	28	UNUSED						001, 003-099, 115-199
	28		W4475	5189B	22		34-46-12	002
	29	UNUSED						001, 003-099, 115-199
	29		W4475	5189Z			34-46-12	002
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D41420J		P33/ /		RCPT				ALL
	1	18	W1230	0150	18		28-21-11	ALL
	2	18	W1230	0169	18		28-21-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 28

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41420J		P33/ /		RCPT (continued)				ALL
	2		W1230	0169	20		28-21-11	115-199
	3	18	W1230	0149	18		28-21-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	18	W1230	0019	18		28-21-11	001-099
	10	UNUSED						115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D41420P		P033-00/ /		PLUG-				ALL
	1	16	W2260	0013	16		28-21-11	ALL
	2	16	W2260	0011	16		28-21-11	ALL
	3	16	W2260	0016	16		28-21-11	ALL
	4	UNUSED						001-099
	4		W2260	0603	22		SPARE	115-199
	5	UNUSED						001-099
	5		W2260	0604	22		SPARE	115-199
	6	UNUSED						001-099
	6		W2260	0605	22		SPARE	115-199
	7	UNUSED						001-099
	7		W2260	0606	22		SPARE	115-199
	8	UNUSED						001-099
	8		W2260	0607	22		SPARE	115-199
	9	UNUSED						001-099
	9		W2260	0615	20		SPARE	115-199
	10	18	W2260	0001	18		28-21-11	001-099
	10	UNUSED						115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 29

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41422J		P33/ /		RCPT				ALL
	1	UNUSED						ALL
	2		W1230	0220	22		29-31-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W1230	0829	20		28-22-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D41422P		P033-00/ /		PLUG-				001-099
D41422P		P33/ /		PLUG-				115-199
	1	UNUSED						001-099
	1		W2350	0514	22		SPARE	115-199
	2		W2350	0610	22		29-31-11	ALL
	3	UNUSED						001-099
	3		W2350	0611	22		SPARE	115-199
	4		W2350	0612	22		SPARE	ALL
	5		W2350	0613	22		SPARE	ALL
	6	UNUSED						001-099
	6		W2350	0707	22		SPARE	115-199
	7	UNUSED						ALL
	8		W2350	0041	22		SPARE	ALL
	9	UNUSED						001-099
	9		W2350	0708	22		SPARE	115-199
	10	UNUSED						001-099
	10		W2350	0709	22		SPARE	115-199
	11	UNUSED						001-099
	11		W2350	0710	22		SPARE	115-199
	12		W2350	0042	22		28-22-11	ALL
	13		W2350	0406	24		SPARE	ALL
	14	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 30

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41424J		P33/ /		RCPT				ALL
	1		W1230	0154	18		28-22-11	ALL
	2		W1230	0157	18		28-22-11	ALL
	3		W1230	0015	22		28-21-11	ALL
	4		W1230	0021	18		28-21-11	001-099
	4	UNUSED						115-199
	5	UNUSED						001-099
	5	18	W1230	0021	18		28-21-11	115-199
	6		W1230	0145	18		28-21-11	ALL
	7		W1230	0039	22		28-21-21	001-099
	7	18	W1230	0020	18		28-21-11	115-199
	8		W1230	0020	18		28-21-11	001-099
	8		W1230	0039	20		28-21-21	115-199
	9		W1230	0165	20		28-21-21	ALL
	10	UNUSED						001-099
	10		W1234	0054	22		33-22-11	115-199
	11		W1230	0451	24		33-22-11	001-099
	11	UNUSED						115-199
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1230	0221	22		29-31-11	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W1230	0225	24		27-51-31	001-099
	18		W1230	0225	22		27-51-31	115-199
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W1230	0003	22		27-51-21	ALL
	31	UNUSED						ALL
	32	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 31

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41424P D41424P		P033-00/ / P33/ /		PLUG- PLUG-				001-099 115-199
	1		W2356	0606	18		28-22-11	ALL
	2		W2356	0607	18		28-22-11	ALL
	3		W2356	0028	22		28-21-11	ALL
	4		W2356	0287	16		28-21-11	001-099
	4		W2356	0283	22		SPARE	115-199
	5	UNUSED						001-099
	5	16	W2356	0287	16		28-21-11	115-199
	6		W2356	0288	16		28-21-11	ALL
	7		W2356	0290	22		28-21-21	001-099
	7	16	W2356	0289	16		28-21-11	115-199
	8		W2356	0289	16		28-21-11	001-099
	8		W2356	0290	20		28-21-21	115-199
	9		W2356	0291	20		28-21-21	ALL
	10	UNUSED						001-099
	10		W2356	0261	22		33-22-11	115-199
	11		W2356	0261	24		33-22-11	001-099
	11		W2356	0308	20		SPARE	115-199
	12	UNUSED						001-099
	12		W2356	0309	20		SPARE	115-199
	13	UNUSED						001-099
	13		W2356	0343	20		SPARE	115-199
	14		W2356	0344	22		29-31-11	ALL
	15	UNUSED						001-099
	15		W2356	0355	20		SPARE	115-199
	16	UNUSED						ALL
	17	UNUSED						001-099
	17		W2356	0613	22		SPARE	115-199
	18		W2356	0321	24		27-51-31	001-099
	18		W2356	0321	22		27-51-31	115-199
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						001-099
	24		W2356	0345	20		SPARE	115-199
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 32

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41424P		P033-00/ /		PLUG- (continued)				001-099
D41424P		P33/ /		PLUG- (continued)				115-199
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W2356	0281	22		27-51-21	ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
D41426J		P33/ /		RCPT				ALL
	1		W1230	0680	22		28-22-21	001-099
	1		W1232	0061	22		28-22-21	115-199
	2		W1230	0009	22		27-51-31	001-099
	2	UNUSED						115-199
	3		W1230	0676	22		28-22-21	001-099
	3		W1232	0057	22		28-22-21	115-199
	4		W1230	0466	22		29-11-11	001-099
	4		W1234	0088	22		29-11-11	115-199
	5		W1230	0721	24		30-31-11	001-099
	5		W1230	0223	22		32-44-11	115-199
	6		W1230	0014	22		28-21-11	ALL
	7		W1230	0211	16		29-21-31	001-099
	7		W1230	0009	22		27-51-31	115-199
	8	UNUSED						ALL
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18		W1232	0119	24		30-31-11	115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 33

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41426P		P33/ /		PLUG-				ALL
	1		W2358	0031	22		28-22-21	ALL
	2		W2358	0052	22		27-51-31	001-099
	2		W2358	0507	22		SPARE	115-199
	3		W2358	0508	22		28-22-21	ALL
	4		W2358	0528	22		29-11-11	ALL
	5		W2358	0406	24		30-31-11	001-099
	5		W2358	0325	22		32-44-11	115-199
	6		W2358	0002	22		28-21-11	ALL
	7		W2358	0401	12		29-21-31	001-099
	7		W2358	0047	22		27-51-31	115-199
	8	UNUSED						ALL
	9	UNUSED						115-199
	10	UNUSED						115-199
	11		W2358	0124	22		SPARE	115-199
	12		W2358	0125	22		SPARE	115-199
	13		W2358	0123	22		SPARE	115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17		W2358	0522	22		SPARE	115-199
	18	18	W2358	0018	18		30-31-11	115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
D41429J D41429J		E002-01/ / E2-1/ /		RCPT- RCPT-				001-099 115-199
	1		W1171	0007	24		34-22-16	ALL
	2		W1171	0392	22		34-12-11	001-099
	2	UNUSED						115-199
	3		W1171	0736	24		34-22-29	001-099
	3		W1171	0707	22		34-61-15	115-199
	4		W1171	5062R	24		34-46-12	ALL
	5		W1171	5062B	24		34-46-12	ALL
	6		W1171	5062Z			34-46-12	ALL
	7		W1171	0118	24		34-46-12	001, 003-099, 115-199
	7	UNUSED						002

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 34

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41429J		E002-01/ /		RCPT- (continued)				001-099
D41429J		E2-1/ /		RCPT- (continued)				115-199
	8		W1171	5063Z			34-46-12	ALL
	9		W1171	5063R	24		34-46-12	001, 003-099, 115-199
	9		W1171	5063R	22		34-46-12	002
	10		W1171	5063B	24		34-46-12	001, 003-099, 115-199
	10		W1171	5063B	22		34-46-12	002
	11		W1171	5064Z			34-46-12	ALL
	12		W1171	5064R	24		34-46-12	ALL
	13		W1171	5064B	24		34-46-12	ALL
	14		W1171	5065Z			34-46-12	ALL
	15		W1171	5065R	24		34-46-12	ALL
	16		W1171	5065B	24		34-46-12	ALL
	17		W1171	5173R	24		34-46-12	001-099
	17	UNUSED						115-199
	18		W1171	5173B	24		34-46-12	001-099
	18	UNUSED						115-199
	19		W1171	5173Z			34-46-12	001-099
	19	UNUSED						115-199
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W1171	0443	22		34-45-01	ALL
	24		W1171	0466	24		34-45-02	ALL
	25		W1171	0735	24		34-22-39	001-099
	25	UNUSED						115-199
	26		W1171	0397	22		22-11-12	001-099
	26		W1171	1008	22		22-11-12	115-199
	27	UNUSED						ALL
	28		W1171	0734	24		34-22-19	001-099
	28	UNUSED						115-199
	29		W1171	2542B	24		73-21-22	ALL
	30		W1171	2542R	24		73-21-22	ALL
	31		W1171	2542Z			73-21-22	ALL
	32	UNUSED						001-099
	32		W1171	1003	22		34-12-11	115-199
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37		W1171	0394	22		22-14-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 35

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41429J		E002-01/ /		RCPT- (continued)				001-099
D41429J		E2-1/ /		RCPT- (continued)				115-199
	37		W1171	1005	22		22-14-11	115-199
	38	UNUSED						001, 003-099, 115-199
	38		W1171	FRD1			34-46-12	002
	39	UNUSED						001, 003-099, 115-199
	39		W1171	5281R	22		34-46-12	002
	40	UNUSED						001, 003-099, 115-199
	40		W1171	5281B	22		34-46-12	002
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50		W1171	5167R	24		34-45-02	ALL
	51		W1171	5167B	24		34-45-02	ALL
	52		W1171	0474	22		34-45-02	ALL
	53	UNUSED						001-099
	53		W1171	5173R	24		34-46-12	115-199
	54	UNUSED						001-099
	54		W1171	5173B	24		34-46-12	115-199
	55	UNUSED						001-099
	55		W1171	5173Z			34-46-12	115-199
	DED		W1171	1003Z			34-12-11	115-199
	DED		W1171	1005Z			22-14-11	115-199
	DED		W1171	1008Z			22-11-12	115-199
			W1171	0819	20		34-46-12	002
			W1171	5281Z			34-46-12	002
			W1171	FRD1			34-46-12	002
D41429P		E002-01/ /		PLUG-				001-099
D41429P		E2-1/ /		PLUG-				115-199
	1		W4477	0115	24		34-22-16	ALL
	2		W4477	0194	24		34-12-11	001-099
	2		W4477	0116	24		SPARE	115-199
	3		W4477	0411	24		34-22-29	001-099
	3		W4477	0120	24		34-61-15	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 36

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41429P		E002-01/ /		PLUG- (continued)				001-099
D41429P		E2-1/ /		PLUG- (continued)				115-199
	4		W4477	5001R	24		34-46-12	ALL
	5		W4477	5001B	24		34-46-12	ALL
	6		W4477	5001Z			34-46-12	ALL
	7		W4477	0004	24		34-46-12	001, 003-099, 115-199
	7		W4477	0004	24		SPARE	002
	8		W4477	5002Z			34-46-12	ALL
	9		W4477	5002R	24		34-46-12	ALL
	10		W4477	5002B	24		34-46-12	ALL
	11		W4477	5003Z			34-46-12	ALL
	12		W4477	5003R	24		34-46-12	ALL
	13		W4477	5003B	24		34-46-12	ALL
	14		W4477	5004Z			34-46-12	ALL
	15		W4477	5004R	24		34-46-12	ALL
	16		W4477	5004B	24		34-46-12	ALL
	17		W4477	5029R	24		34-46-12	001-099
	17	UNUSED						115-199
	18		W4477	5029B	24		34-46-12	001-099
	18	UNUSED						115-199
	19		W4477	5029Z			34-46-12	001-099
	19	UNUSED						115-199
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W4477	0250	22		34-45-01	ALL
	24		W4477	0251	24		34-45-02	ALL
	25		W4477	0413	24		34-22-39	001-099
	25	UNUSED						115-199
	26		W4477	0087	22		22-11-12	ALL
	27	UNUSED						001-099
	27		W4477	0126	24		SPARE	115-199
	28		W4477	0414	24		34-22-19	001-099
	28		W4477	0134	24		SPARE	115-199
	29		W4477	5026B	24		73-21-22	ALL
	30		W4477	5026R	24		73-21-22	ALL
	31		W4477	5026Z			73-21-22	ALL
	32	UNUSED						001-099
	32		W4477	0194	24		34-12-11	115-199
	33	UNUSED						ALL
	34	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 37

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41429P		E002-01/ /		PLUG- (continued)				001-099
D41429P		E2-1/ /		PLUG- (continued)				115-199
	35	UNUSED						ALL
	36	UNUSED						ALL
	37		W4477	0416	22		22-14-11	ALL
	38	UNUSED						001, 003-099, 115-199
	38		W4477	5127Z			34-46-12	002
	39	UNUSED						001, 003-099, 115-199
	39		W4477	5127R	22		34-46-12	002
	40	UNUSED						001, 003-099, 115-199
	40		W4477	5127B	22		34-46-12	002
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50		W4477	5054R	24		34-45-02	ALL
	51		W4477	5054B	24		34-45-02	ALL
	52		W4477	5054Z			34-45-02	ALL
	53	UNUSED						001-099
	53		W4477	5029R	24		34-46-12	115-199
	54	UNUSED						001-099
	54		W4477	5029B	24		34-46-12	115-199
	55	UNUSED						001-099
	55		W4477	5029Z			34-46-12	115-199
D41431J		E002-02/ /		RCPT-				001-099
D41431J		E2-2/ /		RCPT-				115-199
	1		W1173	0380	22		22-11-22	001-099
	1	UNUSED						115-199
	2		W1173	0265	22		27-31-11	001-099
	2	UNUSED						115-199
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W1173	2537B	24		73-21-22	001-099
	5	UNUSED						115-199
	6		W1173	2537R	24		73-21-22	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 38

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41431J		E002-02/ /		RCPT- (continued)				001-099
D41431J		E2-2/ /		RCPT- (continued)				115-199
	6	UNUSED						115-199
	7		W1173	2537Z			73-21-22	001-099
	7	UNUSED						115-199
	8	UNUSED						001, 003-008, 010-099, 115-199
	8		W1173	5241R	22		34-46-12	002
	8		W1173	5136R	24		34-46-12	009
	9	UNUSED						001, 003-008, 010-099, 115-199
	9		W1173	5241B	22		34-46-12	002
	9		W1173	5136B	24		34-46-12	009
	10	UNUSED						001, 003-008, 010-099, 115-199
	10		W1173	FRED			34-46-12	002
	10		W1173	5136Z			34-46-12	009
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						001-099
	13		W1173	1098	22		22-11-22	115-199
	14		W1173	0743	22		34-12-62	001-099
	14	UNUSED						115-199
	15		W1173	0755	24		34-22-29	001-099
	15	UNUSED						115-199
	16	UNUSED						115-199
	17		W1173	0743	22		34-12-62	115-199
	18	UNUSED						115-199
	19		W1173	0265	22		27-31-11	115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23		W1173	2537B	24		73-21-22	115-199
	24		W1173	2537R	24		73-21-22	115-199
	25		W1173	2537Z			73-21-22	115-199
	26		W1173	5136R	24		34-46-12	115-199
	27		W1173	5136B	24		34-46-12	115-199
	28		W1173	5136Z			34-46-12	115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 39

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41431J		E002-02/ /		RCPT- (continued)				001-099
D41431J		E2-2/ /		RCPT- (continued)				115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
	DED		W1173	1098Z			22-11-22	115-199
			W1173	0578	20		34-46-12	002
			W1173	5241Z			34-46-12	002
			W1173	FRED			34-46-12	002
D41431P		E002-02/ /		PLUG-				001-099
D41431P		E2-2/ /		PLUG-				115-199
	1		W4477	0088	22		22-11-22	001-099
	1		W4477	0117	24		SPARE	115-199
	2		W4477	0104	22		27-31-11	001-099
	2	UNUSED						115-199
	3		W4477	0128	24		SPARE	ALL
	4	UNUSED						ALL
	5		W4477	5025B	24		73-21-22	001-099
	5	UNUSED						115-199
	6		W4477	5025R	24		73-21-22	001-099
	6	UNUSED						115-199
	7		W4477	5025Z			73-21-22	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 40

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41431P		E002-02/ /		PLUG- (continued)				001-099
D41431P		E2-2/ /		PLUG- (continued)				115-199
I	7	UNUSED						115-199
I	8	UNUSED						001, 003-008, 010-099
	8		W4477	5126R	22		34-46-12	002
	8		W4477	5027R	24		34-46-12	009
I	8		W4477	2509R	22		34-22-38	115-199
I	9	UNUSED						001, 003-008, 010-099
	9		W4477	5126B	22		34-46-12	002
	9		W4477	5027B	24		34-46-12	009
I	9		W4477	2509B	22		34-22-38	115-199
I	10	UNUSED						001, 003-008, 010-099
	10		W4477	5126Z			34-46-12	002
	10		W4477	5027Z			34-46-12	009
I	10		W4477	2509Z			34-22-38	115-199
	11	UNUSED						ALL
	12		W4477	0089	20		SPARE	001-099
	12	UNUSED						115-199
	13	UNUSED						001-099
	13		W4477	0088	22		22-11-22	115-199
	14		W4477	0097	22		34-12-62	001-099
	14		W4477	0089	20		SPARE	115-199
	15		W4477	0411	24		34-22-29	001-099
	15	UNUSED						115-199
	16	UNUSED						115-199
	17		W4477	0097	22		34-12-62	115-199
	18	UNUSED						115-199
	19		W4477	0104	22		27-31-11	115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22		W4477	0152	20		SPARE	115-199
	23		W4477	5025B	24		73-21-22	115-199
	24		W4477	5025R	24		73-21-22	115-199
	25		W4477	5025Z			73-21-22	115-199
	26		W4477	5027R	24		34-46-12	115-199
	27		W4477	5027B	24		34-46-12	115-199
	28		W4477	5027Z			34-46-12	115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
	32	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 41

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41431P		E002-02/ /		PLUG- (continued)				001-099
D41431P		E2-2/ /		PLUG- (continued)				115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D41433J		E002-03/ /		RCPT-				001-099
D41433J		E2-3/ /		RCPT-				115-199
	1	UNUSED						ALL
	2		W1175	0250	24		34-46-12	ALL
	3		W1175	0251	24		34-46-12	ALL
	4		W1175	5065R	24		34-46-12	ALL
	5		W1175	5065B	24		34-46-12	ALL
	6		W1175	FRAE			34-46-12	ALL
	7		W1175	0254	24		34-46-12	001, 003-099, 115-199
	7	UNUSED						002
	8		W1175	FRAE			34-46-12	ALL
	9		W1175	5067R	24		34-46-12	ALL
	10		W1175	5067B	24		34-46-12	ALL
	11		W1175	FRAF			34-46-12	ALL
	12		W1175	5068R	24		34-46-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 42

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41433J		E002-03/ /		RCPT- (continued)				001-099
D41433J		E2-3/ /		RCPT- (continued)				115-199
	13		W1175	5068B	24		34-46-12	ALL
	14		W1175	FRAG			34-46-12	ALL
	15		W1175	5069R	24		34-46-12	ALL
	16		W1175	5069B	24		34-46-12	ALL
	17		W1175	0616	22		34-46-12	ALL
	18	UNUSED						001-099
	18		W1175	5072B	24		SPARE	115-199
	19	UNUSED						001-099
	19		W1175	5072R	24		SPARE	115-199
	20	UNUSED						001-099
	20		W1175	FRAH			SPARE	115-199
	21		W1175	0313	24		26-17-11	ALL
	22		W1175	2538R	24		23-51-13	001-099
	22		W1175	2538B	24		23-51-13	115-199
	23		W1175	2538B	24		23-51-13	001-099
	23		W1175	2538R	24		23-51-13	115-199
	24		W1175	2538Z			23-51-13	ALL
	25	UNUSED						ALL
	26		W1175	0743	24		34-22-39	001-099
	26	UNUSED						115-199
	27		W1175	0399	22		22-11-12	001-099
	27		W1175	1151	22		22-11-12	115-199
	28		W1175	0375	22		22-11-22	001-099
	28		W1175	1006	22		22-11-22	115-199
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						001-099
	32		W1175	0332	22		34-46-11	115-199
	33	UNUSED						001, 003-099
	33		W1175	5152R	22		34-46-12	002
	33		W1175	0333	22		34-46-11	115-199
	34	UNUSED						001, 003-099, 115-199
	34		W1175	5152B	22		34-46-12	002
	35	UNUSED						001, 003-099
	35		W1175	5152Z			34-46-12	002
	35		W1175	0706	22		34-61-15	115-199
	36	UNUSED						ALL
	37		W1175	0266	22		27-23-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 43

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41433J		E002-03/ /		RCPT- (continued)				001-099
D41433J		E2-3/ /		RCPT- (continued)				115-199
	38		W1175	0265	22		27-23-11	ALL
	39	UNUSED						001-008, 010-099, 115-199
	39		W1175	0277	24		31-51-34	009
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43		W1175	0314	24		31-51-41	ALL
	44	UNUSED						001, 003-099, 115-199
	44		W1175	0801	22		34-46-12	002
	45		W1175	0249	24		34-46-12	ALL
	46	UNUSED						001, 003-099, 115-199
	46		W1175	5154R	22		34-46-12	002
	47	UNUSED						001, 003-099, 115-199
	47		W1175	5154B	22		34-46-12	002
	48	UNUSED						001, 003-008, 010-099
	48		W1175	5154Z			34-46-12	002
	48		W1175	5088R	24		34-46-12	009, 115-199
	49	UNUSED						001-008, 010-099
	49		W1175	5088B	24		34-46-12	009, 115-199
	50	UNUSED						001-008, 010-099
	50		W1175	5088Z			34-46-12	009, 115-199
	51	UNUSED						001-099
	51		W1175	0293	24		34-46-12	115-199
	52	UNUSED						ALL
	53		W1175	5099R	24		34-46-12	ALL
	54		W1175	5099B	24		34-46-12	ALL
	55		W1175	FRIE			34-46-12	ALL
DED			W1175	1006Z			22-11-22	115-199
DED			W1175	1151Z			22-11-12	115-199
			W1175	0252	20		34-46-12	ALL
			W1175	0255	20		34-46-12	ALL
			W1175	0256	20		34-46-12	ALL
			W1175	0257	20		34-46-12	ALL
			W1175	0407	20		34-46-12	ALL
			W1175	5065Z			34-46-12	ALL
			W1175	5067Z			34-46-12	ALL
			W1175	5068Z			34-46-12	ALL
			W1175	5069Z			34-46-12	ALL
			W1175	5099Z			34-46-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 44

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41433J		E002-03/ /		RCPT- (continued)				001-099
D41433J		E2-3/ /		RCPT- (continued)				115-199
			W1175	FRAC			34-46-12	ALL
			W1175	FRAE			34-46-12	ALL
			W1175	FRAF			34-46-12	ALL
			W1175	FRAG			34-46-12	ALL
			W1175	FRIE			34-46-12	ALL
			W1175	0260	20		SPARE	115-199
			W1175	5072Z			SPARE	115-199
			W1175	FRAH			SPARE	115-199
D41433P		E002-03/ /		PLUG-				001-099
D41433P		E2-3/ /		PLUG-				115-199
	1	UNUSED						ALL
	2		W4477	0002	24		34-46-12	ALL
	3		W4477	0199	20		34-46-12	ALL
	4		W4477	5001R	24		34-46-12	ALL
	5		W4477	5001B	24		34-46-12	ALL
	6		W4477	5001Z			34-46-12	ALL
	7		W4477	0004	24		34-46-12	001, 003-099, 115-199
	7		W4477	0004	24		SPARE	002
	8		W4477	5002Z			34-46-12	ALL
	9		W4477	5002R	24		34-46-12	ALL
	10		W4477	5002B	24		34-46-12	ALL
	11		W4477	5003Z			34-46-12	ALL
	12		W4477	5003R	24		34-46-12	ALL
	13		W4477	5003B	24		34-46-12	ALL
	14		W4477	5004Z			34-46-12	ALL
	15		W4477	5004R	24		34-46-12	ALL
	16		W4477	5004B	24		34-46-12	ALL
	17		W4477	0005	22		34-46-12	ALL
	18		W4477	5005B	24		SPARE	ALL
	19		W4477	5005R	24		SPARE	ALL
	20		W4477	5005Z			SPARE	ALL
	21		W4477	0191	22		26-17-11	ALL
	22		W4477	2502R	24		23-51-13	ALL
	23		W4477	2502B	24		23-51-13	ALL
	24		W4477	2502Z			23-51-13	ALL
	25	UNUSED						ALL
	26		W4477	0413	24		34-22-39	001-099
	26	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 45

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41433P		E002-03/ /		PLUG- (continued)				001-099
D41433P		E2-3/ /		PLUG- (continued)				115-199
	27		W4477	0087	22		22-11-12	ALL
	28		W4477	0088	22		22-11-22	ALL
	29		W4477	0094	22		SPARE	ALL
	30	UNUSED						001-099
	30		W4477	0095	22		SPARE	115-199
	31	UNUSED						001-099
	31		W4477	0096	22		SPARE	115-199
	32		W4477	0089	20		SPARE	001-099
	32		W4477	0197	24		31-31-32	115-199
	33	UNUSED						001, 003-099
	33		W4477	5126R	22		34-46-12	002
	33		W4477	0198	24		31-31-32	115-199
	34	UNUSED						001, 003-099, 115-199
	34		W4477	5126B	22		34-46-12	002
	35	UNUSED						001, 003-099
	35		W4477	5126Z			34-46-12	002
	35		W4477	0120	24		34-61-15	115-199
	36	UNUSED						ALL
	37		W4477	0105	22		27-23-11	ALL
	38		W4477	0106	22		27-23-11	ALL
	39	UNUSED						001-008, 010-099
	39		W4477	0274	24		31-51-34	009
	39		W4477	0113	24		SPARE	115-199
	40	UNUSED						ALL
	41	UNUSED						001-099
	41		W4477	0136	24		SPARE	115-199
	42	UNUSED						001-099
	42		W4477	0142	24		SPARE	115-199
	43		W4477	0151	24		31-51-41	ALL
	44	UNUSED						001, 003-099, 115-199
	44		W4477	0501	22		34-46-12	002
	45		W4477	0163	24		34-46-12	ALL
	46	UNUSED						001, 003-099
	46		W4477	5127R	22		34-46-12	002
	46		W4477	0181	22		SPARE	115-199
	47	UNUSED						001, 003-099
	47		W4477	5127B	22		34-46-12	002
	47		W4477	0182	22		SPARE	115-199
	48	UNUSED						001, 003-008, 010-099

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 46

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41433P		E002-03/ /		PLUG- (continued)				001-099
D41433P		E2-3/ /		PLUG- (continued)				115-199
	48		W4477	5127Z			34-46-12	002
	48		W4477	5027R	24		34-46-12	009, 115-199
	49	UNUSED						001-008, 010-099
	49		W4477	5027B	24		34-46-12	009, 115-199
	50	UNUSED						001-008, 010-099
	50		W4477	5027Z			34-46-12	009, 115-199
	51	UNUSED						001-099
	51		W4477	0188	24		34-46-12	115-199
	52		W4477	0196	20		SPARE	ALL
	53		W4477	5029R	24		34-46-12	ALL
	54		W4477	5029B	24		34-46-12	ALL
	55		W4477	5029Z			34-46-12	ALL
	CAP	Y	W4477	0121	24		SPARE	115-199
	CAP	Y	W4477	0122	24		SPARE	115-199
D41434J		745/270/R50		RCPT-				001-099
	1	VS	W3802	0912	20		33-24-21	001-099
D41436P		745/270/R50		PLUG-				001-099
	1	VG	W3802	0913	16		33-24-21	001-099
	=1	UNUSED						001-099
D41437J		E003-01/ /		RCPT				ALL
	1	UNUSED						ALL
	2		W1265	0688	22		22-21-11	ALL
	3		W1265	0695	22		22-24-11	ALL
	4		W1265	0628	22		27-21-12	ALL
	5		W1265	0642	22		27-31-12	ALL
	6		W1265	0681	22		27-61-12	ALL
	7		W1265	0686	22		22-21-11	ALL
	8		W1265	0685	22		22-21-11	ALL
	9		W1265	0689	22		22-21-11	ALL
	10	UNUSED						ALL
	11		W1265	0703	22		27-41-11	ALL
	12		W1265	0704	22		27-41-11	ALL
	13	UNUSED						001-099
	13		W1265	0711	24		34-46-12	115-199
	14		W1265	0612	22		27-09-14	ALL
	15		W1265	0656	22		27-09-14	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 47

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41437J		E003-01/ /		RCPT (continued)				ALL
	16		W1265	0673	22		27-09-14	ALL
	17		W1265	0672	22		27-09-14	ALL
	18		W1265	0627	22		27-09-14	ALL
	19		W1265	0618	22		27-09-14	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 48

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41437P		E003-01/ /		PLUG-				001-099
D41437P		E3-1/ /		PLUG-				115-199
	1	UNUSED						ALL
	2		W4477	0080	22		22-21-11	ALL
	3		W4477	0083	22		22-24-11	ALL
	4		W4477	0148	22		27-21-12	ALL
	5		W4477	0149	22		27-31-12	ALL
	6		W4477	0150	22		27-61-12	ALL
	7		W4477	0153	22		22-21-11	ALL
	8		W4477	0154	22		22-21-11	ALL
	9		W4477	0155	22		22-21-11	ALL
	10		W4477	0220	22		SPARE	001-099
	10	UNUSED						115-199
	11		W4477	0157	22		27-41-11	ALL
	12		W4477	0158	22		27-41-11	ALL
	13		W4477	0188	24		SPARE	001-099
	13		W4477	0188	24		34-46-12	115-199
	14		W4477	0212	22		27-09-14	ALL
	15		W4477	0213	22		27-09-14	ALL
	16		W4477	0214	22		27-09-14	ALL
	17		W4477	0215	22		27-09-14	ALL
	18		W4477	0216	22		27-09-14	ALL
	19		W4477	0217	22		27-09-14	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 49

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41437P		E003-01/ /		PLUG- (continued)				001-099
D41437P		E3-1/ /		PLUG- (continued)				115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D41438J		745/270/R50		RCPT-				001-099
	1	VY	W3802	0909	16		33-24-21	001-099
D41440J		E001-01/ /		RCPT				003-099
	1		W1310	0024	20		24-25-12	003-099
	2		W1310	0025	20		24-25-12	003-099
	3		W1310	0026	20		24-25-12	003-099
	4	UNUSED						003-099
	5	UNUSED						003-099
	6	UNUSED						003-099
	7	UNUSED						003-099
	8	UNUSED						003-099
	9	UNUSED						003-099
	10	UNUSED						003-099
	11	UNUSED						003-099
	12	UNUSED						003-099
	13	UNUSED						003-099
	14	UNUSED						003-099
	15	UNUSED						003-099

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 50

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41440P		E1-1/ /		PLUG				003-099
	1		W2398	0001	20		24-25-12	003-099
	2		W2398	0002	20		24-25-12	003-099
	3		W2398	0003	20		24-25-12	003-099
	4	UNUSED						003-099
	5	UNUSED						003-099
	6	UNUSED						003-099
	7	UNUSED						003-099
	8	UNUSED						003-099
	9	UNUSED						003-099
	10	UNUSED						003-099
	11	UNUSED						003-099
	12	UNUSED						003-099
	13	UNUSED						003-099
	14	UNUSED						003-099
	15	UNUSED						003-099
D41443J		E3-3/ /		RCPT-				ALL
	1		W1433	0070	22		31-31-01	001-099
	1		W1433	0070	22		31-31-11	115-199
	2		W1433	0075	22		31-31-61	001-099
	2		W1433	0075	22		31-31-11	115-199
	3	UNUSED						001-099
	3		W1433	0073	22		31-31-11	115-199
	4		W1433	0072	22		31-31-01	001-099
	4		W1433	0072	22		31-31-11	115-199
	5		W1433	0071	22		31-31-01	001-099
	5		W1433	0071	22		31-31-11	115-199
	6		W1433	0068	22		31-31-01	001-099
	6		W1433	0068	22		31-31-11	115-199
	7		W1433	0069	22		31-31-01	001-099
	7		W1433	0069	22		31-31-11	115-199
	8		W1433	0074	24		31-31-01	001-099
	8		W1433	0074	24		31-31-11	115-199
	9		W1433	0122	24		31-31-61	001-099
	9		W1433	0122	22		31-31-21	115-199
	10		W1433	5016B	24		31-31-41	001-099
	10		W1433	5016B	24		31-31-21	115-199
	11		W1433	5016R	24		31-31-41	001-099
	11		W1433	5016R	24		31-31-21	115-199
	12		W1433	FRAP			31-31-41	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 51

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41443J		E3-3/ /		RCPT- (continued)				ALL
	12		W1433	FRAP			31-31-21	115-199
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W1433	0120	22		31-31-61	001-099
	17		W1433	0120	22		31-31-21	115-199
	18		W1433	5020B	24		31-31-41	001-099
	18		W1433	5020B	24		31-31-21	115-199
	19		W1433	5020R	24		31-31-41	001-099
	19		W1433	5020R	24		31-31-21	115-199
	20		W1433	FRAT			31-31-41	001-099
	20		W1433	FRAT			31-31-21	115-199
	21		W1433	0139	24		31-31-61	001-099
	21		W1433	0139	24		31-31-31	115-199
	22		W1433	0140	24		31-31-61	001-099
	22		W1433	0140	24		31-31-31	115-199
	23		W1433	0141	24		31-31-61	001-099
	23		W1433	0141	24		31-31-31	115-199
	24		W1433	0142	24		31-31-61	001-099
	24		W1433	0142	24		31-31-31	115-199
	25		W1433	0036	24		34-53-11	ALL
	26		W1433	0030	24		34-53-11	001-099
	26	UNUSED						115-199
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W1433	2007R	24		31-31-51	001-099
	31	UNUSED						115-199
	32		W1433	2007B	24		31-31-51	001-099
	32	UNUSED						115-199
	33		W1433	0277	24		31-31-61	001-099
	33	UNUSED						115-199
	34	UNUSED						001-099
	34		W1433	0177	24		31-31-31	115-199
	35	UNUSED						001-099
	35		W1433	0181	24		31-31-31	115-199
	36	UNUSED						001-099
	36		W1433	0178	24		31-31-31	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 52

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41443J		E3-3/ /		RCPT- (continued)				ALL
	37		W1433	0281	24		31-31-61	001-099
	37	UNUSED						115-199
	38		W1433	0345	22		31-31-42	001-099
	38		W1433	0240	24		31-31-32	115-199
	39	UNUSED						ALL
	40		W1433	0283	24		31-31-63	001-099
	40	UNUSED						115-199
	41		W1433	0149	24		31-31-63	001-099
	41	UNUSED						115-199
	42	UNUSED						001-099
	42		W1433	0241	24		31-31-32	115-199
	43		W1433	0293	24		31-31-62	001-099
	43	UNUSED						115-199
	44	UNUSED						001-099
	44		W1433	0157	22		31-31-11	115-199
	45	UNUSED						001-099
	45		W1433	5048R	24		31-31-22	115-199
	46	UNUSED						001-099
	46		W1433	5048B	24		31-31-22	115-199
	47	UNUSED						001-099
	47		W1433	FRBL			31-31-22	115-199
	48		W1433	0294	24		31-31-62	001-099
	48		W1433	0187	24		31-31-31	115-199
	49	UNUSED						001-099
	49		W1433	0191	24		31-31-31	115-199
	50	UNUSED						001-099
	50		W1433	0190	24		31-31-31	115-199
	51		W1433	5018R	24		31-31-42	001-099
	51		W1433	2007R	24		31-31-31	115-199
	52		W1433	5018B	24		31-31-42	001-099
	52		W1433	2007B	24		31-31-31	115-199
	53		W1433	FRAR			31-31-42	001-099
	53		W1433	0200	22		31-31-32	115-199
	54		W1433	0174	24		31-31-01	001-099
	54		W1433	0174	24		31-31-11	115-199
	55		W1433	0346	22		31-31-42	001-099
	55	UNUSED						115-199
			W1433	0096	20		31-31-41	001-099
			W1433	0098	20		31-31-42	001-099
			W1433	0100	20		31-31-41	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 53

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41443J		E3-3/ /		RCPT- (continued)				ALL
			W1433	5016Z			31-31-41	001-099
			W1433	5018Z			31-31-42	001-099
			W1433	5020Z			31-31-41	001-099
			W1433	FRAP			31-31-41	001-099
			W1433	FRAR			31-31-42	001-099
			W1433	FRAT			31-31-41	001-099
			W1433	0096	20		31-31-21	115-199
			W1433	0100	20		31-31-21	115-199
			W1433	0168	20		31-31-22	115-199
			W1433	5016Z			31-31-21	115-199
			W1433	5020Z			31-31-21	115-199
			W1433	5048Z			31-31-22	115-199
			W1433	FRAP			31-31-21	115-199
			W1433	FRAT			31-31-21	115-199
			W1433	FRBL			31-31-22	115-199
D41443P		E003-03/ /		PLUG-				001-099
D41443P		E3-3/ /		PLUG-				115-199
	1		W4477	0016	22		31-31-01	001-099
	1		W4477	0016	22		31-31-13	115-199
	2		W4477	0017	22		31-31-61	001-099
	2		W4477	0017	22		31-31-13	115-199
	3		W4477	0018	22		SPARE	001-099
	3		W4477	0118	22		31-31-13	115-199
	4		W4477	0019	22		31-31-01	001-099
	4		W4477	0119	22		31-31-13	115-199
	5		W4477	0020	22		31-31-01	001-099
	5		W4477	0020	22		31-31-13	115-199
	6		W4477	0022	22		31-31-01	001-099
	6		W4477	0022	22		31-31-13	115-199
	7		W4477	0023	22		31-31-01	001-099
	7		W4477	0023	22		31-31-13	115-199
	8		W4477	0024	22		31-31-01	001-099
	8		W4477	0024	22		31-31-13	115-199
	9		W4477	0025	22		31-31-61	001-099
	9		W4477	0025	22		31-31-21	115-199
	10		W4477	5010B	24		31-31-41	001-099
	10		W4477	5010B	24		31-31-21	115-199
	11		W4477	5010R	24		31-31-41	001-099
	11		W4477	5010R	24		31-31-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 54

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41443P		E003-03/ /		PLUG- (continued)				001-099
D41443P		E3-3/ /		PLUG- (continued)				115-199
	12		W4477	5010Z			31-31-41	001-099
	12		W4477	5010Z			31-31-21	115-199
	13		W4477	5011Z			31-31-41	001-099
	13		W4477	5011Z			31-31-21	115-199
	14		W4477	5011R	24		31-31-41	001-099
	14		W4477	5011R	24		31-31-21	115-199
	15		W4477	5011B	24		31-31-41	001-099
	15		W4477	5011B	24		31-31-21	115-199
	16		W4477	0026	22		31-31-61	001-099
	16		W4477	0026	22		31-31-21	115-199
	17		W4477	0027	22		31-31-61	001-099
	17		W4477	0027	22		31-31-21	115-199
	18		W4477	5012B	24		31-31-41	001-099
	18		W4477	5012B	24		31-31-21	115-199
	19		W4477	5012R	24		31-31-41	001-099
	19		W4477	5012R	24		31-31-21	115-199
	20		W4477	5012Z			31-31-41	001-099
	20		W4477	5012Z			31-31-21	115-199
	21		W4477	0195	24		31-31-61	001-099
	21		W4477	0195	24		31-31-31	115-199
	22		W4477	0028	24		31-31-61	001-099
	22		W4477	0028	24		31-31-31	115-199
	23		W4477	0029	24		31-31-61	001-099
	23		W4477	0029	24		31-31-31	115-199
	24		W4477	0030	24		31-31-61	001-099
	24		W4477	0030	24		31-31-31	115-199
	25		W4477	0032	24		34-53-11	ALL
	26		W4477	0031	24		34-53-11	001-099
	26		W4477	0031	24		SPARE	115-199
	27		W4477	5014R	24		SPARE	001-099
	27	UNUSED						115-199
	28		W4477	5014B	24		SPARE	001-099
	28	UNUSED						115-199
	29		W4477	5014Z			SPARE	001-099
	29	UNUSED						115-199
	30	UNUSED						ALL
	31		W4477	2004R	24		31-31-51	001-099
	31	UNUSED						115-199
	32		W4477	2004B	24		31-31-51	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 55

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41443P		E003-03/ /		PLUG- (continued)				001-099
D41443P		E3-3/ /		PLUG- (continued)				115-199
	32	UNUSED						115-199
	33		W4477	0116	24		31-31-61	001-099
	33		W4477	0116	24		SPARE	115-199
	34		W4477	0222	24		SPARE	001-099
	34		W4477	0183	24		31-31-31	115-199
	35	UNUSED						001-099
	35		W4477	0184	24		31-31-31	115-199
	36	UNUSED						001-099
	36		W4477	0185	24		31-31-31	115-199
	37		W4477	0123	24		31-31-61	001-099
	37		W4477	0123	24		SPARE	115-199
	38		W4477	0402	22		31-31-42	001-099
	38		W4477	0197	24		31-31-32	115-199
	39		W4477	0098	24		SPARE	001-099
	39	UNUSED						115-199
	40		W4477	0118	24		31-31-63	001-099
	40	UNUSED						115-199
	41		W4477	0129	24		31-31-63	001-099
	41		W4477	0129	24		SPARE	115-199
	42	UNUSED						001-099
	42		W4477	0198	24		31-31-32	115-199
	43		W4477	0146	24		31-31-62	001-099
	43		W4477	0146	24		SPARE	115-199
	44		W4477	0166	22		SPARE	001-099
	44		W4477	0166	22		31-31-13	115-199
	45	UNUSED						001-099
	45		W4477	5021R	24		31-31-22	115-199
	46	UNUSED						001-099
	46		W4477	5021B	24		31-31-22	115-199
	47	UNUSED						001-099
	47		W4477	5021Z			31-31-22	115-199
	48		W4477	0167	24		31-31-62	001-099
	48		W4477	0167	24		31-31-31	115-199
	49	UNUSED						001-099
	49		W4477	0168	24		31-31-31	115-199
	50	UNUSED						001-099
	50		W4477	0169	24		31-31-31	115-199
	51		W4477	5017R	24		31-31-42	001-099
	51		W4477	2004R	24		31-31-31	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 56

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41443P		E003-03/ /		PLUG- (continued)				001-099
D41443P		E3-3/ /		PLUG- (continued)				115-199
	52		W4477	5017B	24		31-31-42	001-099
	52		W4477	2004B	24		31-31-31	115-199
	53		W4477	5017Z			31-31-42	001-099
	53		W4477	0170	22		31-31-32	115-199
	54		W4477	0124	24		31-31-01	001-099
	54		W4477	0124	24		31-31-13	115-199
	55		W4477	0403	22		31-31-42	001-099
	55	UNUSED						115-199
D41445J		E003-04/ /		RCPT				ALL
	1		W1280	0107	22		31-51-42	ALL
	2		W1280	0042	24		52-71-21	ALL
	3		W1280	0045	24		52-71-21	ALL
	4		W1280	0046	24		52-71-21	ALL
	5		W1280	0047	24		52-71-21	ALL
	6		W1280	0043	24		52-71-21	ALL
	7		W1280	0044	24		52-71-21	ALL
	8		W1280	5010Z			28-41-11	ALL
	9		W1280	5010R	24		28-41-11	ALL
	10		W1280	0266	22		32-42-11	001-099
	10	UNUSED						115-199
	11		W1280	0267	22		32-42-11	001-099
	11	UNUSED						115-199
	12		W1280	0191	24		31-51-21	ALL
	13		W1280	5010B	24		28-41-11	ALL
	14	UNUSED						ALL
	15		W1280	0078	24		31-51-33	ALL
	16		W1280	0494	24		31-31-62	001-099
	16		W1280	0323	24		31-31-31	115-199
	17	UNUSED						001-009
	17		W1280	0691	22		31-31-61	010-099
	17		W1280	0324	24		31-31-31	115-199
	18	UNUSED						001-009
	18		W1280	0692	22		31-31-61	010-099
	18		W1280	0325	24		31-31-31	115-199
	19	UNUSED						001-009
	19		W1280	0693	22		31-31-61	010-099
	19		W1280	0356	24		52-71-21	115-199
	20	UNUSED						001-009

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 57

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41445J		E003-04/ /		RCPT (continued)				ALL
	20		W1280	0694	22		31-31-61	010-099
	20		W1280	0320	24		31-31-31	115-199
	21	UNUSED						001-009
	21		W1280	0695	22		31-31-61	010-099
	21		W1280	0321	24		31-31-31	115-199
	22	UNUSED						001-009
	22		W1280	0696	22		31-31-61	010-099
	22		W1280	0322	24		31-31-31	115-199
	23	UNUSED						001-009, 115-199
	23		W1280	0697	22		31-31-61	010-099
	24		W1280	0327	22		23-31-13	ALL
	25		W1280	0326	22		23-31-13	ALL
	26		W1280	0372	22		32-42-11	ALL
	27		W1280	0153	22		32-61-11	ALL
	28		W1280	0003	22		32-61-11	ALL
	29		W1280	0216	22		32-61-11	ALL
	30	UNUSED						ALL
	31	UNUSED						001, 003-009, 115-199
	31		W1280	0688	22		34-43-14	002
	31		W1280	0698	22		31-31-61	010-099
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 58

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41445J		E003-04/ /		RCPT (continued)				ALL
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D41445P		E003-04/ /		PLUG-				001-099
D41445P		E3-4/ /		PLUG-				115-199
	1		W4477	0054	24		31-51-42	ALL
	2		W4477	0072	24		52-71-21	ALL
	3		W4477	0073	24		52-71-21	ALL
	4		W4477	0074	24		52-71-21	ALL
	5		W4477	0075	24		52-71-21	ALL
	6		W4477	0076	24		52-71-21	ALL
	7		W4477	0077	24		52-71-21	ALL
	8	UNUSED						001-099
	8		W4477	0090	22		SPARE	115-199
	9	UNUSED						001-099
	9		W4477	0091	22		SPARE	115-199
	10		W4477	0092	22		32-42-11	001-099
	10		W4477	0092	22		SPARE	115-199
	11		W4477	0093	22		32-42-11	001-099
	11		W4477	0093	22		SPARE	115-199
	12		W4477	0114	24		31-51-21	ALL
	13		W4477	0132	24		SPARE	ALL
	14	UNUSED						001-099
	14		W4477	0127	24		SPARE	115-199
	15		W4477	0161	24		31-51-33	ALL
	16		W4477	0167	24		31-31-62	001-099
	16		W4477	0167	24		31-31-31	115-199
	17	UNUSED						001-009
	17		W4477	0452	22		31-31-61	010-099
	17		W4477	0168	24		31-31-31	115-199
	18	UNUSED						001-009
	18		W4477	0453	22		31-31-61	010-099
	18		W4477	0169	24		31-31-31	115-199
	19	UNUSED						001-009
	19		W4477	0454	22		31-31-61	010-099
	19		W4477	0172	24		52-71-21	115-199
	20	UNUSED						001-009
	20		W4477	0455	22		31-31-61	010-099

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 59

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41445P		E003-04/ /		PLUG- (continued)				001-099
D41445P		E3-4/ /		PLUG- (continued)				115-199
	20		W4477	0183	24		31-31-31	115-199
	21	UNUSED						001-009
	21		W4477	0456	22		31-31-61	010-099
	21		W4477	0184	24		31-31-31	115-199
	22	UNUSED						001-009
	22		W4477	0457	22		31-31-61	010-099
	22		W4477	0185	24		31-31-31	115-199
	23		W4477	0202	24		SPARE	001-009
	23		W4477	0458	22		31-31-61	010-099
	23	UNUSED						115-199
	24		W4477	0079	22		23-31-13	ALL
	25		W4477	0078	22		23-31-13	ALL
	26		W4477	0021	22		32-42-11	ALL
	27		W4477	0035	22		32-61-11	ALL
	28		W4477	0044	24		32-61-11	ALL
	29		W4477	0047	22		32-61-11	ALL
	30		W4477	0203	24		SPARE	001-099
	30	UNUSED						115-199
	31	UNUSED						001, 003-009, 115-199
	31		W2309	0073	22		34-43-14	002
	31		W4477	0459	22		31-31-61	010-099
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 60

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41445P		E003-04/ /		PLUG- (continued)				001-099
D41445P		E3-4/ /		PLUG- (continued)				115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
	CAP	Y	W4477	0202	24		SPARE	010-099
D41448J		AC0880/ /		RCPT-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W4028	2501R	16		78-34-51	ALL
	4		W4028	2501B	16		78-34-51	ALL
	5		W4028	2501Z			78-34-51	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	S/R		W4028	YAAA			78-34-51	ALL
D41448P		AC0880/ /		PLUG(SB780032)				001-002, 115-199
D41448P		AC0880/ /		PLUG				003-099
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W3322	2501R	16		78-34-51	ALL
	4		W3322	2501B	16		78-34-51	ALL
	5		W3322	2501Z			78-34-51	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	S/R		W3322	YBBB			78-34-51	ALL
D41451J		E4-2/ /		RCPT-				ALL
	1	UNUSED						ALL
	2		W1275	6150	24		27-23-11	ALL
	2		W1275	6151	24		27-23-11	ALL
	3		W1275	6135	24		27-23-11	ALL
	3		W1275	6136	24		27-23-11	ALL
	4		W1275	0991	24		34-45-02	ALL
	4		W1275	0992	24		34-45-02	ALL
	5		W1275	0196	24		31-31-01	001-099
	5		W1275	0198	24		31-31-01	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 61

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41451J		E4-2/ /		RCPT- (continued)				ALL
	5		W1275	0196	24		31-31-13	115-199
	5		W1275	0198	24		31-31-13	115-199
	6		W1275	0553	24		31-31-61	001-099
	6		W1275	0553	24		31-31-21	115-199
	7		W1275	5053B	24		31-31-41	001-099
	7		W1275	5053B	24		31-31-21	115-199
	8		W1275	5053R	24		31-31-41	001-099
	8		W1275	5053R	24		31-31-21	115-199
	9		W1275	FRCA			31-31-22	001-099
	9		W1275	FRCA			31-31-21	115-199
	10		W1275	6607	24		34-53-11	001-099
	10	UNUSED						115-199
	11		W1275	0178	24		31-51-11	ALL
	11		W1275	0179	24		31-51-11	ALL
	12		W1275	0166	24		31-51-41	ALL
	12		W1275	0167	24		31-51-41	ALL
	13		W1275	0163	24		31-51-41	ALL
	13		W1275	0164	24		31-51-41	ALL
	14		W1275	0172	24		31-51-41	ALL
	14		W1275	0173	24		31-51-41	ALL
	15		W1275	0169	24		31-51-41	ALL
	15		W1275	0170	24		31-51-41	ALL
	16	UNUSED						ALL
	17		W1275	0596	24		34-46-12	ALL
	17		W1275	0597	24		34-46-12	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W1275	0160	24		31-51-42	ALL
	21		W1275	0161	24		31-51-42	ALL
	22		W1275	0157	24		34-16-11	ALL
	22		W1275	0158	24		34-16-11	ALL
	23		W1275	5616	22		24-27-11	ALL
	24		W1275	5612	22		24-27-11	ALL
	25		W1275	5608	24		24-27-11	ALL
	26		W1275	5538	24		24-28-11	ALL
	26		W1275	5539	24		24-28-11	ALL
	27		W1275	5541	24		24-28-11	ALL
	28		W1275	5821	24		24-28-21	ALL
	28		W1275	5822	24		24-28-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 62

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41451J		E4-2/ /		RCPT- (continued)				ALL
	29		W1275	5824	24		24-28-21	ALL
	29		W1275	5825	24		24-28-21	ALL
	30		W1275	5818	24		24-28-21	ALL
	30		W1275	5819	24		24-28-21	ALL
	31		W1275	5827	24		24-28-21	ALL
	31		W1275	5828	24		24-28-21	ALL
	32		W1275	0951	24		32-42-11	001-099
	32		W1275	0952	24		32-42-11	001-099
	32	UNUSED						115-199
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36		W1275	6444	24		31-51-43	ALL
	36		W1275	6445	24		31-51-43	ALL
	37		W1275	0730	24		26-17-11	ALL
	38	UNUSED						ALL
	39		W1275	0058	24		52-71-21	ALL
	39		W1275	0064	24		52-71-21	ALL
	40		W1275	5698	24		22-21-11	ALL
	40		W1275	5699	24		22-21-11	ALL
	41		W1275	0272	24		22-24-11	ALL
	41		W1275	0273	24		22-24-11	ALL
	42		W1275	0067	24		52-71-21	ALL
	43		W1275	0057	24		52-71-21	ALL
	43		W1275	0063	24		52-71-21	ALL
	44		W1275	0034	24		52-71-21	ALL
	45		W1275	0059	24		52-71-21	ALL
	45		W1275	0065	24		52-71-21	ALL
	46		W1275	0060	24		52-71-21	ALL
	46		W1275	0066	24		52-71-21	ALL
	47		W1275	0304	24		35-21-11	ALL
	47		W1275	0305	24		35-21-11	ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50		W1275	5727	24		27-31-11	ALL
	50		W1275	5728	24		27-31-11	ALL
	51	UNUSED						ALL
	52		W1275	0087	24		31-31-01	001-099
	52		W1275	0089	24		31-31-01	001-099
	52		W1275	0087	24		31-31-13	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 63

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41451J		E4-2/ /		RCPT- (continued)				ALL
	52		W1275	0089	24		31-31-13	115-199
	53	UNUSED						001, 003-099, 115-199
	53		W1275	8275	24		34-46-12	002
	53		W1275	8342	24		34-46-12	002
	54	UNUSED						ALL
	55		W1275	6180	24		32-41-11	001-099
	55		W1275	5976	24		52-71-21	115-199
	55		W1275	5977	24		52-71-21	115-199
			W1275	5053Z			31-31-41	001-099
			W1275	5989	22		31-31-41	001-099
			W1275	FRCA			31-31-22	001-099
			W1275	5053Z			31-31-21	115-199
			W1275	5989	22		31-31-21	115-199
			W1275	FRCA			31-31-21	115-199
D41451P		E004-02/ /		PLUG-				001-099
D41451P		E4-2/ /		PLUG-				115-199
	1		W4477	0001	24		SPARE	ALL
	2		W4477	0105	22		27-23-11	ALL
	3		W4477	0106	22		27-23-11	ALL
	4		W4477	0251	24		34-45-02	ALL
	5		W4477	0024	22		31-31-01	001-099
	5		W4477	0024	22		31-31-13	115-199
	6		W4477	0027	22		31-31-61	001-099
	6		W4477	0027	22		31-31-21	115-199
	7		W4477	5012B	24		31-31-41	001-099
	7		W4477	5012B	24		31-31-21	115-199
	8		W4477	5012R	24		31-31-41	001-099
	8		W4477	5012R	24		31-31-21	115-199
	9		W4477	5012Z			31-31-41	001-099
	9		W4477	5012Z			31-31-21	115-199
	10		W4477	0031	24		34-53-11	001-099
	10		W4477	0031	24		SPARE	115-199
	11		W4477	0042	24		31-51-11	ALL
	12		W4477	0049	24		31-51-41	ALL
	13		W4477	0050	24		31-51-41	ALL
	14		W4477	0051	24		31-51-41	ALL
	15		W4477	0052	24		31-51-41	ALL
	16		W4477	0128	24		SPARE	ALL
	17		W4477	0005	22		34-46-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 64

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41451P		E004-02/ /		PLUG- (continued)				001-099
D41451P		E4-2/ /		PLUG- (continued)				115-199
	18		W4477	5005B	24		SPARE	ALL
	19		W4477	5005R	24		SPARE	ALL
	20		W4477	5005Z			SPARE	ALL
	21		W4477	0053	24		31-51-42	ALL
	22		W4477	0056	24		34-16-11	ALL
	23		W4477	0061	24		24-27-11	ALL
	24		W4477	0062	24		24-27-11	ALL
	25		W4477	0063	24		24-27-11	ALL
	26		W4477	0064	24		24-28-11	ALL
	27		W4477	0065	24		24-28-11	ALL
	28		W4477	0066	24		24-28-21	ALL
	29		W4477	0068	24		24-28-21	ALL
	30		W4477	0069	24		24-28-21	ALL
	31		W4477	0067	24		24-28-21	ALL
	32		W4477	0243	22		32-42-11	001-099
	32	UNUSED						115-199
	33		W4477	0188	24		SPARE	001-099
	33	UNUSED						115-199
	34		W4477	0094	22		SPARE	ALL
	35	UNUSED						001-099
	35		W4477	0129	24		SPARE	115-199
	36		W4477	0130	24		31-51-43	ALL
	37		W4477	0191	22		26-17-11	ALL
	38		W4477	0132	24		SPARE	ALL
	39		W4477	0073	24		52-71-21	ALL
	40		W4477	0080	22		22-21-11	ALL
	41		W4477	0083	22		22-24-11	ALL
	42		W4477	0076	24		52-71-21	ALL
	43		W4477	0077	24		52-71-21	ALL
	44		W4477	0072	24		52-71-21	ALL
	45		W4477	0074	24		52-71-21	ALL
	46		W4477	0075	24		52-71-21	ALL
	47		W4477	0086	22		35-21-11	ALL
	48		W4477	0202	24		SPARE	001-099
	48		W4477	0090	22		SPARE	115-199
	49		W4477	0203	24		SPARE	001-099
	49		W4477	0091	22		SPARE	115-199
	50		W4477	0104	22		27-31-11	ALL
	51	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 65

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41451P		E004-02/ /		PLUG- (continued)				001-099
D41451P		E4-2/ /		PLUG- (continued)				115-199
	51		W4477	0121	24		SPARE	115-199
	52		W4477	0124	24		31-31-01	001-099
	52		W4477	0124	24		31-31-13	115-199
	53	UNUSED						001, 003-099
	53		W4477	0501	22		34-46-12	002
	53		W4477	0127	24		SPARE	115-199
	54		W4477	0138	24		SPARE	001-099
	54	UNUSED						115-199
	55		W4477	0245	24		32-41-11	001-099
	55		W4477	0172	24		52-71-21	115-199
D41453J		E004-03/ /		RCPT-				001-099
D41453J		E4-3/ /		RCPT-				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1163	2018R	24		23-21-11	001-099
	3	UNUSED						115-199
	4		W1163	2018B	24		23-21-11	001-099
	4	UNUSED						115-199
	5		W1163	0476	24		23-51-11	001-099
	5	UNUSED						115-199
	6		W1163	0505	24		23-51-11	001-099
	6	UNUSED						115-199
	7		W1163	0503	24		23-51-11	001-099
	7	UNUSED						115-199
	8		W1163	0474	24		23-51-11	001-099
	8	UNUSED						115-199
	9		W1163	0477	24		23-51-11	001-099
	9	UNUSED						115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W1163	0419	24		23-31-41	001-099
	12		W1163	0415	24		23-31-41	115-199
	13		W1163	0168	24		23-31-41	ALL
	14		W1163	0169	24		23-31-41	ALL
	15		W1163	0170	24		23-31-41	ALL
	16		W1163	0171	24		23-31-41	ALL
	17	UNUSED						001-099
	17		W1163	2011R	22		23-34-16	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 66

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41453J		E004-03/ /		RCPT- (continued)				001-099
D41453J		E4-3/ /		RCPT- (continued)				115-199
	18	UNUSED						001-099
	18		W1163	2011B	22		23-34-16	115-199
	19	UNUSED						001-099
	19		W1163	0150	24		23-34-16	115-199
	20		W1163	0577	24		23-31-13	001-099
	20		W1163	0459	24		23-31-13	115-199
	21		W1163	0155	24		23-31-13	ALL
	22		W1163	0456	22		23-31-17	001-099
	22	UNUSED						115-199
	23		W1163	0429	24		31-51-33	ALL
	24		W1163	0174	22		23-34-15	ALL
	25	UNUSED						ALL
	26		W1163	0164	24		23-34-15	ALL
	27		W1163	0515	22		23-34-15	ALL
	28	UNUSED						ALL
	29		W1163	2013R	22		23-31-21	ALL
	30		W1163	2013B	22		23-31-21	ALL
	31		W1163	2014R	22		23-31-21	ALL
	32		W1163	2014B	22		23-31-21	ALL
	33		W1163	0263	24		23-51-13	ALL
	34		W1163	0261	20		23-51-13	ALL
	35		W1163	0262	24		23-51-13	ALL
	36		W1163	0442	24		23-21-11	ALL
	37	UNUSED						ALL
	38		W1163	0416	22		33-25-11	001-099
	38	UNUSED						115-199
	39		W1163	0417	22		33-25-21	001-099
	39	UNUSED						115-199
	40	UNUSED						ALL
	41	UNUSED						ALL
	42		W1163	0452	24		31-51-33	ALL
	43		W1163	0141	20		23-31-11	ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50		W1163	0151	22		23-31-13	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 67

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41453J		E004-03/ /		RCPT- (continued)				001-099
D41453J		E4-3/ /		RCPT- (continued)				115-199
	51		W1163	0152	22		23-31-13	ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D41453P		E004-03/ /		PLUG-				001-099
D41453P		E4-3/ /		PLUG-				115-199
	1		W4477	0133	24		SPARE	ALL
	2	UNUSED						001-099
	2		W4477	0134	24		SPARE	115-199
	3		W4477	2012R	24		23-21-11	001-099
	3	UNUSED						115-199
	4		W4477	2012B	24		23-21-11	001-099
	4	UNUSED						115-199
	5		W4477	2006B	24		23-51-11	001-099
	5	UNUSED						115-199
	6		W4477	2006R	24		23-51-11	001-099
	6	UNUSED						115-199
	7		W4477	0200	24		23-51-11	001-099
	7	UNUSED						115-199
	8		W4477	2007R	24		23-51-11	001-099
	8	UNUSED						115-199
	9		W4477	2007B	24		23-51-11	001-099
	9	UNUSED						115-199
	10		W4477	0156	22		SPARE	001-099
	10	UNUSED						115-199
	11	UNUSED						ALL
	12		W4477	0107	22		23-31-41	ALL
	13		W4477	0100	22		23-31-41	ALL
	14		W4477	0101	22		23-31-41	ALL
	15		W4477	0102	22		23-31-41	ALL
	16		W4477	0103	22		23-31-41	ALL
	17		W4477	2011R	22		SPARE	001-099
	17		W4477	2011R	22		23-34-16	115-199
	18		W4477	2011B	22		SPARE	001-099
	18		W4477	2011B	22		23-34-16	115-199
	19		W4477	0013	24		SPARE	001-099
	19		W4477	0013	24		23-34-16	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 68

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41453P		E004-03/ /		PLUG- (continued)				001-099
D41453P		E4-3/ /		PLUG- (continued)				115-199
	20		W4477	0014	24		23-31-13	ALL
	21		W4477	0015	24		23-31-13	ALL
	22		W4477	0231	22		SPARE	001-099
	22	UNUSED						115-199
	23		W4477	0045	24		31-51-33	ALL
	24		W4477	0058	24		23-34-15	ALL
	25		W4477	0059	24		SPARE	001-099
	25	UNUSED						115-199
	26		W4477	0060	24		23-34-15	ALL
	27		W4477	0238	22		23-34-15	ALL
	28		W4477	0224	22		SPARE	001-099
	28	UNUSED						115-199
	29		W4477	2001R	22		23-31-21	ALL
	30		W4477	2001B	22		23-31-21	ALL
	31		W4477	2002R	22		23-31-21	ALL
	32		W4477	2002B	22		23-31-21	ALL
	33		W4477	2502B	24		23-51-13	ALL
	34		W4477	2502Z			23-51-13	ALL
	35		W4477	2502R	24		23-51-13	ALL
	36		W4477	0112	24		23-21-11	ALL
	37		W4477	0135	24		SPARE	ALL
	38		W4477	0084	22		33-25-11	001-099
	38		W4477	0084	22		SPARE	115-199
	39		W4477	0085	22		33-25-21	001-099
	39		W4477	0085	22		SPARE	115-199
	40	UNUSED						001-099
	40		W4477	0136	24		SPARE	115-199
	41		W4477	5014Z			SPARE	001-099
	41	UNUSED						115-199
	42		W4477	0160	24		31-51-33	ALL
	43		W4477	0099	20		23-31-11	ALL
	44		W4477	5014R	24		SPARE	001-099
	44	UNUSED						115-199
	45		W4477	5014B	24		SPARE	001-099
	45	UNUSED						115-199
	46	UNUSED						001-099
	46		W4477	0126	24		SPARE	115-199
	47	UNUSED						ALL
	48	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 69

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41453P		E004-03/ /		PLUG- (continued)				001-099
D41453P		E4-3/ /		PLUG- (continued)				115-199
	49	UNUSED						ALL
	50		W4477	0078	22		23-31-13	ALL
	51		W4477	0079	22		23-31-13	ALL
	52	UNUSED						001-099
	52		W4477	0117	24		SPARE	115-199
	53	UNUSED						001-099
	53		W4477	0122	24		SPARE	115-199
	54		W4477	0189	22		SPARE	001-099
	54	UNUSED						115-199
	55	UNUSED						ALL
D41455J		E004-04/ /		RCPT-				001-099
D41455J		E4-4/ /		RCPT-				115-199
	1		W4477	2011R	22		SPARE	001-099
	1		W4477	2011R	22		23-34-16	115-199
	2		W4477	2011B	22		SPARE	001-099
	2		W4477	2011B	22		23-34-16	115-199
	3		W4477	0013	24		SPARE	001-099
	3		W4477	0013	24		23-34-16	115-199
	4		W4477	0412	22		23-34-15	001-099
	4		W4477	0057	22		23-34-15	115-199
	5		W4477	2012R	24		23-21-11	001-099
	5	UNUSED						115-199
	6		W4477	2012B	24		23-21-11	001-099
	6	UNUSED						115-199
	7		W4477	0060	24		23-34-15	ALL
	8		W4477	0098	24		SPARE	001-099
	8	UNUSED						115-199
	9		W4477	0246	22		23-34-15	ALL
	10		W4477	0248	22		23-34-15	ALL
	11		W4477	0247	22		23-34-15	ALL
	12		W4477	0249	22		23-34-15	ALL
	13		W4477	0059	24		SPARE	001-099
	13		W4477	0252	22		23-34-15	115-199
	14		W4477	0058	24		23-34-15	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W4477	0116	24		31-31-61	001-099
	17	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 70

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41455J		E004-04/ /		RCPT- (continued)				001-099
D41455J		E4-4/ /		RCPT- (continued)				115-199
	18		W4477	2007R	24		23-51-11	001-099
	18	UNUSED						115-199
	19		W4477	2007B	24		23-51-11	001-099
	19	UNUSED						115-199
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W4477	0230	22		23-34-15	ALL
	24	UNUSED						ALL
	25		W4477	0231	22		SPARE	001-099
	25	UNUSED						115-199
	26		W4477	0189	22		SPARE	001-099
	26	UNUSED						115-199
	27		W4477	0238	22		23-34-15	ALL
	28		W4477	0201	24		23-12-31	001-099
	28	UNUSED						115-199
	29		W4477	0200	24		23-51-11	001-099
	29	UNUSED						115-199
	30		W4477	2006B	24		23-51-11	001-099
	30	UNUSED						115-199
	31		W4477	2006R	24		23-51-11	001-099
	31	UNUSED						115-199
D41455P		E4-4/ /		PLUG-				ALL
	1	UNUSED						001-099
	1		W1161	2044R	22		23-34-16	115-199
	2	UNUSED						001-099
	2		W1161	2044B	22		23-34-16	115-199
	3	UNUSED						001-099
	3		W1161	0008	24		23-34-16	115-199
	4		W1161	0003	22		23-34-15	ALL
	5		W1161	2043R	24		23-21-11	001-099
	5	UNUSED						115-199
	6		W1161	2043B	24		23-21-11	001-099
	6	UNUSED						115-199
	7		W1161	0070	22		23-34-15	ALL
	8	UNUSED						ALL
	9		W1161	0067	22		23-34-15	ALL
	10		W1161	0060	22		23-34-15	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 71

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41455P		E4-4/ /		PLUG- (continued)				ALL
	11		W1161	0070	22		23-34-15	ALL
	12		W1161	0057	22		23-34-15	ALL
	13	UNUSED						001-099
	13		W1161	0062	22		23-34-15	115-199
	14		W1161	0051	22		23-34-15	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W1161	0033	24		31-31-61	001-099
	17	UNUSED						115-199
	18		W1161	2042R	24		23-51-11	001-099
	18	UNUSED						115-199
	19		W1161	2042B	24		23-51-11	001-099
	19	UNUSED						115-199
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W1161	0044	22		23-34-15	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W1161	2040R	24		23-34-15	ALL
	28		W1161	0031	24		23-12-31	001-099
	28	UNUSED						115-199
	29		W1161	0042	24		23-51-11	001-099
	29	UNUSED						115-199
	30		W1161	2041B	24		23-51-11	001-099
	30	UNUSED						115-199
	31		W1161	2041R	24		23-51-11	001-099
	31	UNUSED						115-199
D41457J		E004-03/ /		RCPT				001-099
	1		W1163	0596	22		23-31-19	001-099
	2		W1163	0597	22		23-31-19	001-099
	3		W1163	2031R	24		23-31-19	001-099
	4		W1163	2031B	24		23-31-19	001-099
	5		W1163	0598	22		23-31-19	001-099
	6		W1163	2030B	24		23-31-19	001-099
	7		W1163	2030R	24		23-31-19	001-099
	8		W1163	0771	22		23-31-19	001-099
	9		W1163	2015R	22		23-31-19	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 72

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41457J		E004-03/ /		RCPT (continued)				001-099
	10		W1163	2015B	22		23-31-19	001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D41457P		E004-03/ /		PLUG				001-099
	1		W4477	0308	22		23-31-19	001-099
	2		W4477	0309	22		23-31-19	001-099
	3		W4477	2015R	22		23-31-19	001-099
	4		W4477	2015B	22		23-31-19	001-099
	5		W4477	0310	22		23-31-19	001-099
	6		W4477	2016B	22		23-31-19	001-099
	7		W4477	2016R	22		23-31-19	001-099
	8		W4477	0311	22		23-31-19	001-099
	9		W4477	2017R	22		23-31-19	001-099
	10		W4477	2017B	22		23-31-19	001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D41458J		AD0880/ /		RCPT				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W4108	2501R	16		78-34-61	ALL
	4		W4108	2501B	16		78-34-61	ALL
	5		W4108	2501Z			78-34-61	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	S/R		W4108	YAAA			78-34-61	ALL
D41458P		AD0880/ /		PLUG(SB780032)				001-002, 115-199
D41458P		AD0880/ /		PLUG				003-099
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W3422	2501R	16		78-34-61	ALL
	4		W3422	2501B	16		78-34-61	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 73

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41458P		AD0880/ /		PLUG(SB780032) (continued)				001-002, 115-199
D41458P		AD0880/ /		PLUG (continued)				003-099
	5		W3422	2501Z			78-34-61	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	S/R		W3422	YBBB			78-34-61	ALL
D41459J		E5-1/ /		RCPT				001-099
D41459J		AE0501/ /		RCPT				115-199
	1		W1282	0118	24		31-31-31	ALL
	2		W1282	0119	24		31-31-61	001-099
	2		W1282	0119	24		31-31-31	115-199
	3		W1282	0120	24		31-31-61	001-099
	3		W1282	0120	24		31-31-31	115-199
	4		W1282	0121	24		31-31-61	001-099
	4		W1282	0121	24		31-31-31	115-199
	5		W1282	0248	24		24-27-11	ALL
	6		W1282	0249	24		24-27-11	ALL
	7		W1282	0250	24		24-27-11	ALL
	8		W1282	0063	24		24-28-21	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W1282	0294	22		74-31-11	001-099
	12	UNUSED						115-199
	13		W1282	0153	22		34-46-12	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W1282	2001R	24		31-31-51	001-099
	23		W1282	2001R	24		31-31-31	115-199
	24		W1282	2001B	24		31-31-51	001-099
	24		W1282	2001B	24		31-31-31	115-199
	25		W1282	0052	24		24-28-21	001-099
	25	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 74

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41459J		E5-1/ /		RCPT (continued)				001-099
D41459J		AE0501/ /		RCPT (continued)				115-199
	26		W1282	0320	24		31-31-63	001-099
	26	UNUSED						115-199
	27		W1282	0380	24		31-31-63	001-099
	27	UNUSED						115-199
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W1282	0350	22		74-31-11	001-099
	35	UNUSED						115-199
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D41459P		E005-01/ /		PLUG-				001-099
D41459P		E5-1/ /		PLUG-				115-199
	1		W4477	0195	24		31-31-61	001-099
	1		W4477	0195	24		31-31-31	115-199
	2		W4477	0028	24		31-31-61	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 75

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41459P		E005-01/ /		PLUG- (continued)				001-099
D41459P		E5-1/ /		PLUG- (continued)				115-199
	2		W4477	0028	24		31-31-31	115-199
	3		W4477	0029	24		31-31-61	001-099
	3		W4477	0029	24		31-31-31	115-199
	4		W4477	0030	24		31-31-61	001-099
	4		W4477	0030	24		31-31-31	115-199
	5		W4477	0061	24		24-27-11	ALL
	6		W4477	0062	24		24-27-11	ALL
	7		W4477	0063	24		24-27-11	ALL
	8		W4477	0066	24		24-28-21	ALL
	9		W4477	0222	24		SPARE	001-099
	9		W4477	0081	24		SPARE	115-199
	10	UNUSED						001-099
	10		W4477	0082	24		SPARE	115-199
	11	UNUSED						ALL
	12		W4477	0192	22		74-31-11	001-099
	12		W4477	0192	22		SPARE	115-199
	13		W4477	0199	20		34-46-12	ALL
	14		W4477	0204	24		SPARE	001-099
	14	UNUSED						115-199
	15		W4477	0205	24		SPARE	001-099
	15	UNUSED						115-199
	16		W4477	0206	24		SPARE	001-099
	16	UNUSED						115-199
	17		W4477	0207	24		SPARE	001-099
	17	UNUSED						115-199
	18		W4477	0208	24		SPARE	001-099
	18	UNUSED						115-199
	19		W4477	0209	24		SPARE	001-099
	19	UNUSED						115-199
	20	UNUSED						001-099
	20		W4477	0139	24		SPARE	115-199
	21		W4477	0210	22		SPARE	001-099
	21	UNUSED						115-199
	22		W4477	0140	24		SPARE	ALL
	23		W4477	2004R	24		31-31-51	001-099
	23		W4477	2004R	24		31-31-31	115-199
	24		W4477	2004B	24		31-31-51	001-099
	24		W4477	2004B	24		31-31-31	115-199
	25		W4477	0067	24		24-28-21	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 76

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41459P		E005-01/ /		PLUG- (continued)				001-099
D41459P		E5-1/ /		PLUG- (continued)				115-199
	25	UNUSED						115-199
	26		W4477	0118	24		31-31-63	001-099
	26		W4477	5016B	24		SPARE	115-199
	27		W4477	0129	24		31-31-63	001-099
	27		W4477	5016R	24		SPARE	115-199
	28	UNUSED						001-099
	28		W4477	5016Z			SPARE	115-199
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						001-099
	32		W4477	5018B	24		SPARE	115-199
	33	UNUSED						001-099
	33		W4477	5018R	24		SPARE	115-199
	34	UNUSED						001-099
	34		W4477	5018Z			SPARE	115-199
	35		W4477	0193	22		74-31-11	001-099
	35	UNUSED						115-199
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	CAP	Y	W4477	0138	24		SPARE	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 77

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41461J		E5-2/ /		RCPT				ALL
	1		W1284	0075	24		24-28-21	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1284	0036	22		22-21-11	ALL
	5		W1284	0037	22		22-21-11	ALL
	6		W1284	0038	22		22-21-11	ALL
	7		W1284	0200	22		33-16-51	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W1284	0302	22		32-42-11	001-099
	31	UNUSED						115-199
	32		W1284	0301	22		32-42-11	001-099
	32	UNUSED						115-199
	33		W1284	0320	22		32-42-11	001-099
	33	UNUSED						115-199
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 78

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41461J		E5-2/ /		RCPT (continued)				ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55		W1284	0039	24		32-41-11	001-099
	55	UNUSED						115-199
D41461P		E005-02/ /		PLUG-				001-099
D41461P		E5-2/ /		PLUG-				115-199
	1		W4477	0068	24		24-28-21	ALL
	2		W4477	0140	24		SPARE	ALL
	3	UNUSED						001-099
	3		W4477	0139	24		SPARE	115-199
	4		W4477	0153	22		22-21-11	ALL
	5		W4477	0154	22		22-21-11	ALL
	6		W4477	0155	22		22-21-11	ALL
	7		W4477	0006	22		33-16-51	ALL
	8		W4477	0204	24		SPARE	001-099
	8	UNUSED						115-199
	9		W4477	0205	24		SPARE	001-099
	9	UNUSED						115-199
	10		W4477	0206	24		SPARE	001-099
	10	UNUSED						115-199
	11		W4477	0207	24		SPARE	001-099
	11	UNUSED						115-199
	12	UNUSED						001-099
	12		W4477	5016R	24		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 79

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41461P		E005-02/ /		PLUG- (continued)				001-099
D41461P		E5-2/ /		PLUG- (continued)				115-199
	13	UNUSED						001-099
	13		W4477	5016B	24		SPARE	115-199
	14		W4477	0228	24		SPARE	001-099
	14		W4477	5016Z			SPARE	115-199
	15		W4477	0208	24		SPARE	001-099
	15	UNUSED						115-199
	16		W4477	0209	24		SPARE	001-099
	16	UNUSED						115-199
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						001-099
	21		W4477	0177	24		SPARE	115-199
	22	UNUSED						001-099
	22		W4477	0181	22		SPARE	115-199
	23	UNUSED						001-099
	23		W4477	0182	22		SPARE	115-199
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W4477	0093	22		32-42-11	001-099
	31	UNUSED						115-199
	32		W4477	0092	22		32-42-11	001-099
	32	UNUSED						115-199
	33		W4477	0243	22		32-42-11	001-099
	33	UNUSED						115-199
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						001-099
	37		W4477	5018B	24		SPARE	115-199
	38	UNUSED						001-099
	38		W4477	5018R	24		SPARE	115-199
	39	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 80

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41461P		E005-02/ /		PLUG- (continued)				001-099
D41461P		E5-2/ /		PLUG- (continued)				115-199
	39		W4477	5018Z			SPARE	115-199
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55		W4477	0245	24		32-41-11	001-099
	55	UNUSED						115-199
I D41462J		P036-00/ /		RCPT (SB78-32)				001-002
I D41462J		P36/ /		RCPT (SB78-32)				001-002
D41462J		P036-00/ /		RCPT				003-099, 115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1260	FRAG			78-34-51	ALL
	7	18	W1260	1126	18		78-34-51	ALL
	8	18	W1260	1127	18		78-34-51	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W1260	6446	22		78-34-11	001-002, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 81

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
I D41462J		P036-00/ /		RCPT (SB78-32) (continued)				001-002
I D41462J		P36/ /		RCPT (SB78-32) (continued)				001-002
D41462J		P036-00/ /		RCPT (continued)				003-099, 115-199
	17		W1260	0414	22		78-34-11	003-099
	18		W1260	6452	20		78-34-11	ALL
	19	18	W1260	6453	18		78-34-51	ALL
	20	UNUSED						ALL
	21	UNUSED						001-002, 115-199
	21		W1260	0432	24		78-36-11	003-099
	22		W1260	6412	24		78-36-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W1260	5806	22		78-34-11	001-099
	31		W1260	0092	22		78-34-11	115-199
			W1260	1126Z			78-34-51	ALL
			W1260	1127Z			78-34-51	ALL
			W1260	FRAG			78-34-51	ALL
D41462P		P036-00/ /		PLUG				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W4028	2501Z			78-34-51	ALL
	7	16	W4028	2501R	16		78-34-51	ALL
	8	16	W4028	2501B	16		78-34-51	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 82

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41462P		P036-00/ /		PLUG (continued)				ALL
	17		W4028	1004	20		78-34-11	001-002, 115-199
	17	18	W4028	1004	18		78-34-11	003-099
	18		W4028	FRAA			78-34-11	ALL
	19	16	W4028	0008	16		78-34-51	ALL
	20	UNUSED						ALL
	21		W4028	0012	22		SPARE	ALL
	22		W4028	1005	22		78-36-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W4028	1002	20		78-34-11	001-002, 115-199
	31	18	W4028	1002	18		78-34-11	003-099
	DED		W4028	1005Z			78-36-11	ALL
			W4028	1002Z			78-34-11	ALL
			W4028	1004Z			78-34-11	ALL
			W4028	FRAA			78-34-11	ALL
D41463J		E005-03/ /		RCPT				001-099
D41463J		E5-3/ /		RCPT				115-199
	1		W1286	2006R	24		27-32-11	ALL
	2		W1286	2006B	24		27-32-11	ALL
	3		W1286	0106	24		27-32-11	ALL
	4		W1286	0107	24		27-32-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1286	0110	24		27-32-11	ALL
	8		W1286	0115	24		27-32-11	ALL
	9	UNUSED						001-099
	9		W1286	0041	24		24-28-21	115-199
	10		W1286	0031	24		24-28-21	ALL
	11		W1286	0116	24		27-32-11	ALL
	12	UNUSED						ALL
	13		W1286	0260	22		74-31-11	001-099
	13	UNUSED						115-199
	14	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 83

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41463J		E005-03/ /		RCPT (continued)				001-099
D41463J		E5-3/ /		RCPT (continued)				115-199
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W1286	0027	22		33-16-51	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						001-008, 010-099, 115-199
	21		W1286	5012R	24		31-51-34	009
	22	UNUSED						001-008, 010-099, 115-199
	22		W1286	5012B	24		31-51-34	009
	23	UNUSED						001-008, 010-099, 115-199
	23		W1286	5012Z			31-51-34	009
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44		W1286	0267	24		31-51-41	ALL
	45		W1286	0268	24		31-51-41	ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 84

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41463J		E005-03/ /		RCPT (continued)				001-099
D41463J		E5-3/ /		RCPT (continued)				115-199
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D41463P		E005-03/ /		PLUG-				001-099
D41463P		E5-3/ /		PLUG-				115-199
	1		W4477	2003R	24		27-32-11	ALL
	2		W4477	2003B	24		27-32-11	ALL
	3		W4477	0036	24		27-32-11	ALL
	4		W4477	0037	24		27-32-11	ALL
	5		W4477	0038	24		SPARE	ALL
	6		W4477	0039	24		SPARE	ALL
	7		W4477	0040	24		27-32-11	ALL
	8		W4477	0041	24		27-32-11	ALL
	9	UNUSED						001-099
	9		W4477	0067	24		24-28-21	115-199
	10		W4477	0069	24		24-28-21	ALL
	11		W4477	0109	24		27-32-11	ALL
	12		W4477	0141	24		SPARE	ALL
	13		W4477	0193	22		74-31-11	001-099
	13		W4477	0193	22		SPARE	115-199
	14		W4477	0218	24		SPARE	001-099
	14		W4477	5028R	24		SPARE	115-199
	15	UNUSED						001-099
	15		W4477	5028B	24		SPARE	115-199
	16	UNUSED						001-099
	16		W4477	5028Z			SPARE	115-199
	17		W4477	0006	22		33-16-51	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						001-008, 010-099, 115-199
	21		W4477	5061R	24		31-51-34	009
	22	UNUSED						001-008, 010-099, 115-199
	22		W4477	5061B	24		31-51-34	009
	23	UNUSED						001-008, 010-099, 115-199
	23		W4477	5061Z			31-51-34	009

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 85

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41463P		E005-03/ /		PLUG- (continued)				001-099
D41463P		E5-3/ /		PLUG- (continued)				115-199
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44		W4477	0232	24		31-51-41	ALL
	45		W4477	0233	24		31-51-41	ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D41470J		P034-00/ /		RCPT				001-099
D41470J		P34/ /		RCPT				115-199
	1		W1240	0047	24		33-24-11	001-099
	1		W1240	0060	22		33-24-11	115-199
	2		W1240	0046	24		33-24-11	001-099
	2		W1240	0046	22		33-24-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 86

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41470J		P034-00/ /		RCPT (continued)				001-099
D41470J		P34/ /		RCPT (continued)				115-199
	3		W1240	0430	24		33-42-12	001-099
	3		W1242	0030	20		33-42-12	115-199
	4		W1240	0431	24		33-42-12	001-099
	4		W1242	0031	20		33-42-12	115-199
	5		W1240	0432	24		33-42-12	001-099
	5		W1242	0032	20		33-42-12	115-199
	6		W1240	0433	24		33-42-12	001-099
	6		W1242	0033	20		33-42-12	115-199
	7		W1240	0104	20		23-31-11	ALL
	8		W1240	0131	24		24-41-12	ALL
	9		W1240	0155	24		24-51-71	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W1240	0126	22		33-51-11	ALL
	19		W1240	0079	22		33-14-41	ALL
	20		W1240	0127	22		33-51-11	ALL
	21	UNUSED						ALL
	22		W1196	0402	22		33-11-31	ALL
	23	UNUSED						ALL
	24		W1196	0016	20		30-71-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33		W1240	0032	22		52-51-11	ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 87

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41470J		P034-00/ /		RCPT (continued)				001-099
D41470J		P34/ /		RCPT (continued)				115-199
	38		W1240	0138	22		33-22-11	ALL
	39		W1240	0382	24		31-31-62	001-099
	39	UNUSED						115-199
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D41470P		P034-00/ /		PLUG				ALL
	1		W2070	0103	24		33-24-11	001-099
	1		W2070	0103	22		33-24-11	115-199
	2		W2070	0160	24		33-24-11	001-099
	2		W2070	0160	22		33-24-11	115-199
	3		W2070	0079	24		33-42-12	001-099
	3		W2070	0079	20		33-42-12	115-199
	4		W2070	0080	24		33-42-11	001-099
	4		W2070	0080	20		33-42-11	115-199
	5		W2070	0081	24		33-42-11	001-099
	5		W2070	0081	20		33-42-11	115-199
	6		W2070	0082	24		33-42-11	001-099
	6		W2070	0082	20		33-42-11	115-199
	7		W2070	0245	20		23-31-11	ALL
	8		W2070	0091	24		24-41-12	ALL
	9		W2070	0478	24		24-51-71	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 88

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41470P		P034-00/ /		PLUG (continued)				ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W2070	0117	22		33-51-11	ALL
	19		W2070	0052	22		33-14-41	ALL
	20		W2070	0118	22		33-51-11	ALL
	21		W2070	0090	20		SPARE	ALL
	22		W2070	0220	24		33-11-31	ALL
	23	UNUSED						ALL
	24		W2070	0515	20		30-71-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W2070	0015	20		SPARE	ALL
	29		W2070	0261	22		SPARE	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W2070	0016	22		SPARE	ALL
	33		W2070	0067	22		52-51-11	ALL
	34		W2070	0513	22		SPARE	ALL
	35		W2070	0514	22		SPARE	ALL
	36	UNUSED						001-099
	36		W2070	0518	22		SPARE	115-199
	37	UNUSED						001-099
	37		W2070	0519	22		SPARE	115-199
	38		W2070	0811	22		33-22-11	ALL
	39		W2070	0578	24		31-31-62	001-099
	39	UNUSED						115-199
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 89

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41470P		P034-00/ /		PLUG (continued)				ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	CAP	Y	W2070	0124	22		SPARE	115-199
D41472J		P034-00/ /		RCPT				001-099
D41472J		P34/ /		RCPT				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1240	0086	22		38-14-11	ALL
	8		W1240	0090	22		38-14-11	ALL
	9	UNUSED						001-099
	9		W1240	0226	20		33-22-11	115-199
	10	UNUSED						001-099
	10		W1240	0035	20		33-22-13	115-199
	11		W1240	0125	24		33-21-11	ALL
	12		W1196	0303	22		33-31-11	ALL
	13		W1196	0304	22		33-26-31	ALL
	14		W1196	0305	22		33-31-41	ALL
	15	16	W1196	0018	16		33-26-11	001-099
	15		W1196	0018	22		33-26-11	115-199
	16		W1240	0029	24		33-22-11	001-099
	16		W1240	0029	22		33-22-11	115-199
	17	UNUSED						ALL
	18		W1240	0275	22		33-22-11	001-099
	18	18	W1240	0041	18		33-24-11	115-199
	19		W1240	0042	22		33-24-11	ALL
	20		W1240	0111	22		33-51-11	ALL
	21		W1240	0044	20		33-24-11	ALL
	22		W1240	0058	24		33-24-11	001-099
	22		W1240	0058	22		33-24-11	115-199
	23	UNUSED						001-099
	23		W1240	0043	20		33-24-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 90

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41472J		P034-00/ /		RCPT (continued)				001-099
D41472J		P34/ /		RCPT (continued)				115-199
	24		W1240	0045	22		33-24-11	ALL
	25	UNUSED						ALL
	26	UNUSED						001-099
	26		W1240	0275	22		33-22-11	115-199
	27	UNUSED						ALL
	28		W1240	0265	22		33-21-51	ALL
	29		W1240	0266	22		33-21-51	ALL
	30	UNUSED						001-099
	30		W1240	0069	22		33-27-31	115-199
	31	UNUSED						001-099
	31		W1240	0070	22		33-27-31	115-199
	32		W1240	0078	22		33-26-31	ALL
	33		W1240	0427	24		33-42-12	001-099
	33		W1242	0027	20		33-42-12	115-199
	34		W1240	0439	20		33-42-12	001-099
	34		W1242	0039	20		33-42-12	115-199
	35		W1240	0438	20		33-42-12	001-099
	35		W1242	0038	20		33-42-12	115-199
	36	UNUSED						001-099
	36	16	W1240	0122	16		28-21-11	115-199
	37	UNUSED						001-099
	37	16	W1240	0123	16		28-21-11	115-199
	38	UNUSED						001-099
	38	16	W1240	0121	16		28-21-11	115-199
	39		W1240	0440	20		33-42-21	001-099
	39		W1242	0040	20		33-42-21	115-199
	40	UNUSED						001-099
	40		W1196	0014	22		35-11-13	115-199
	41	16	W1196	0300	16		33-26-11	001-099
	41		W1196	0300	22		33-26-11	115-199
	42	UNUSED						ALL
	43		W1240	0021	22		33-22-11	ALL
	44	UNUSED						001-099
	44		W1242	0034	20		33-42-12	115-199
	45		W1240	0128	24		33-21-31	ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48		W1240	0232	22		33-21-51	001-099
	48		W1242	0021	22		33-21-51	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 91

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41472J		P034-00/ /		RCPT (continued)				001-099
D41472J		P34/ /		RCPT (continued)				115-199
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53		W1128	0042	20		25-31-11	001-099
	53	UNUSED						115-199
	54	UNUSED						ALL
	55	UNUSED						ALL
D41472P		P034-00/ /		PLUG-				001-099
D41472P		P34/ /		PLUG-				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W2356	0234	22		SPARE	ALL
	4		W2356	0244	22		SPARE	ALL
	5	UNUSED						001-099
	5		W2356	0245	20		SPARE	115-199
	6	UNUSED						001-099
	6		W2356	0055	22		SPARE	115-199
	7		W2356	0003	22		38-14-11	ALL
	8		W2356	0247	22		38-14-11	ALL
	9	UNUSED						001-099
	9		W2356	0252	20		33-22-11	115-199
	10	UNUSED						001-099
	10		W2356	0253	22		SPARE	115-199
	11		W2356	0254	24		33-21-11	ALL
	12		W2356	0255	20		33-31-11	ALL
	13		W2356	0256	22		33-26-31	ALL
	14		W2356	0257	20		33-31-41	ALL
	15	16	W2356	0037	16		33-26-11	001-099
	15		W2356	0258	22		33-26-11	115-199
	16		W2356	0261	24		33-22-11	001-099
	16		W2356	0261	22		33-22-11	115-199
	17	UNUSED						001-099
	17		W2356	0262	22		SPARE	115-199
	18		W2356	0293	22		33-22-11	001-099
	18	16	W2356	0263	16		33-24-11	115-199
	19		W2356	0264	22		33-24-11	ALL
	20		W2356	0282	22		33-51-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 92

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41472P		P034-00/ /		PLUG- (continued)				001-099
D41472P		P34/ /		PLUG- (continued)				115-199
	21		W2356	0266	20		33-24-11	001-099
	21	16	W2356	0266	16		33-24-11	115-199
	22		W2356	0267	24		33-24-11	001-099
	22		W2356	0267	22		33-24-11	115-199
	23	UNUSED						001-099
	23	16	W2356	0268	16		33-24-11	115-199
	24		W2356	0269	22		33-24-11	ALL
	25	UNUSED						001-099
	25	18	W2356	0270	18		SPARE	115-199
	26	UNUSED						001-099
	26		W2356	0271	22		33-22-11	115-199
	27	UNUSED						001-099
	27		W2356	0272	22		SPARE	115-199
	28		W2356	0273	22		33-21-51	ALL
	29		W2356	0274	22		33-21-51	ALL
	30		W2356	0275	22		SPARE	001-099
	30		W2356	0275	22		33-27-31	115-199
	31		W2356	0276	22		SPARE	001-099
	31		W2356	0276	22		33-27-31	115-199
	32		W2356	0277	22		33-26-31	ALL
	33		W2356	0002	24		33-42-12	001-099
	33		W2356	0002	20		33-42-12	115-199
	34		W2356	0278	20		33-42-12	ALL
	35		W2356	0279	20		33-42-12	ALL
	36	UNUSED						001-099
	36	16	W2356	0288	16		28-21-11	115-199
	37	UNUSED						001-099
	37	16	W2356	0287	16		28-21-11	115-199
	38	UNUSED						001-099
	38	16	W2356	0289	16		28-21-11	115-199
	39		W2356	0292	20		33-42-21	ALL
	40	UNUSED						001-099
	40		W2356	0259	22		35-11-13	115-199
	41	16	W2356	0260	16		33-26-11	001-099
	41		W2356	0260	22		33-26-11	115-199
	42	UNUSED						001-099
	42		W2356	0293	22		SPARE	115-199
	43		W2356	0294	22		33-22-11	ALL
	44	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 93

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41472P		P034-00/ /		PLUG- (continued)				001-099
D41472P		P34/ /		PLUG- (continued)				115-199
	44		W2356	0280	20		33-42-12	115-199
	45		W2356	0298	24		33-21-31	ALL
	46	UNUSED						001-099
	46		W2356	0054	22		SPARE	115-199
	47		W2356	0614	22		SPARE	ALL
	48		W2356	0092	22		33-21-51	ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52		W2356	0213	20		SPARE	001-099
	52	UNUSED						115-199
	53		W2356	0073	20		25-31-11	001-099
	53	UNUSED						115-199
	54	UNUSED						001-099
	54		W2356	0324	20		SPARE	115-199
	55	UNUSED						001-099
	55		W2356	0325	20		SPARE	115-199
D41473J		P36/ /		RCPT				ALL
	1	UNUSED						001-099
	1		W1260	2004R	24		31-31-32	115-199
	2	UNUSED						001-099
	2		W1260	2004B	24		31-31-32	115-199
	3	UNUSED						001-099
	3		W1260	0323	24		31-31-32	115-199
	4	UNUSED						001-009
	4		W1260	2004R	22		31-31-51	010-099
	4		W1260	2005R	24		31-31-32	115-199
	5	UNUSED						001-009
	5		W1260	2004B	22		31-31-51	010-099
	5		W1260	2005B	24		31-31-32	115-199
	6		W1260	0812	24		27-32-11	ALL
	7	UNUSED						001, 003-099, 115-199
	7		W1260	1138	22		34-22-18	002
	8		W1260	5713	24		31-51-21	ALL
	9		W1260	5630	22		22-14-31	ALL
	10	UNUSED						001-009, 115-199
	10		W1260	6437	22		31-31-61	010-099
	11		W1260	5642	24		22-32-15	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 94

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41473J		P36/ /		RCPT (continued)				ALL
	12		W1260	5643	24		22-32-15	ALL
	13		W1260	0039	24		24-28-11	ALL
	14	UNUSED						ALL
	15		W1260	5867	22		27-09-12	ALL
	16		W1260	5801	24		34-61-14	ALL
	17		W1260	0355	22		30-32-11	ALL
	18		W1260	0783	22		30-32-11	ALL
	19		W1260	5707	24		30-33-11	ALL
	20	UNUSED						ALL
	21		W1260	0001	24		21-31-11	ALL
	22		W1260	2001R	24		21-31-11	ALL
	23		W1260	2001B	24		21-31-11	ALL
	24		W1260	5650	22		23-71-11	ALL
	25		W1260	5652	22		23-71-11	ALL
	26		W1260	6055	22		76-11-21	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W1260	5800	24		34-55-11	ALL
	30	UNUSED						001-099
	30		W1260	0370	20		74-31-11	115-199
	31		W1260	5788	24		34-12-12	ALL
	32		W1260	5785	24		34-12-12	ALL
	33	UNUSED						ALL
	34		W1260	0239	24		27-58-11	001-099
	34		W1260	0239	22		27-58-11	115-199
	35		W1260	0240	24		27-58-11	001-099
	35		W1260	0240	22		27-58-11	115-199
	36		W1260	0241	24		27-58-11	001-099
	36		W1260	0241	22		27-58-11	115-199
	37		W1260	0242	24		27-58-11	001-099
	37		W1260	0242	22		27-58-11	115-199
	38	UNUSED						001-099
	38		W1260	0371	20		74-31-11	115-199
	39		W1260	0075	20		34-12-11	ALL
	40		W1260	0076	20		34-12-11	ALL
	41		W1260	0110	24		34-12-12	ALL
	42	UNUSED						ALL
	43		W1260	5005B	22		32-42-11	ALL
	44		W1260	5005R	22		32-42-11	ALL
	45		W1260	5005Z			32-42-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 95

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41473J		P36/ /		RCPT (continued)				ALL
	46		W1260	5710	24		31-41-19	ALL
	47	UNUSED						ALL
	48	UNUSED						001-099
	48		W1260	5017R	24		34-45-02	115-199
	49	UNUSED						001-099
	49		W1260	5017B	24		34-45-02	115-199
	50	UNUSED						001-099
	50		W1260	5017Z			34-45-02	115-199
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D41473P		P036-00/ /		PLUG-				001-099
D41473P		P36/ /		PLUG-				115-199
	1		W4471	2001R	24		SPARE	001-099
	1		W4471	2001R	24		31-31-32	115-199
	2		W4471	2001B	24		SPARE	001-099
	2		W4471	2001B	24		31-31-32	115-199
	3		W4471	0013	24		SPARE	001-099
	3		W4471	0013	24		31-31-32	115-199
	4		W4471	2002R	24		SPARE	001-099
	4		W4471	2002R	24		31-31-51	010-099
	4		W4471	2002R	24		31-31-32	115-199
	5		W4471	2002B	24		SPARE	001-099
	5		W4471	2002B	24		31-31-51	010-099
	5		W4471	2002B	24		31-31-32	115-199
	6		W4471	0021	24		27-32-11	ALL
	7	UNUSED						001, 003-099
	7		W4471	0472	22		34-22-18	002
	7		W4471	0022	24		SPARE	115-199
	8		W4471	0033	24		31-51-21	ALL
	9		W4471	0044	22		22-14-31	ALL
	10		W4471	0166	24		SPARE	001-099, 115-199
	10		W4471	0166	24		31-31-61	010-099
	11		W4471	0066	24		22-32-15	ALL
	12		W4471	0067	24		22-32-15	ALL
	13		W4471	0031	24		24-28-11	ALL
	14		W4471	0049	22		SPARE	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 96

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41473P		P036-00/ /		PLUG- (continued)				001-099
D41473P		P36/ /		PLUG- (continued)				115-199
	14		W4471	5048R	24		SPARE	115-199
	15		W4471	0077	22		27-09-12	ALL
	16		W4471	0001	24		34-61-14	ALL
	17		W4471	0078	22		30-32-11	ALL
	18		W4471	0079	22		30-32-11	ALL
	19		W4471	0080	24		30-33-11	ALL
	20		W4471	0083	24		SPARE	ALL
	21		W4471	0084	24		21-31-11	ALL
	22		W4471	2008R	24		21-31-11	ALL
	23		W4471	2008B	24		21-31-11	ALL
	24		W4471	0081	22		23-71-11	ALL
	25		W4471	0082	22		23-71-11	ALL
	26		W4471	0087	22		76-11-21	ALL
	27	UNUSED						001-099
	27		W4471	5048B	24		SPARE	115-199
	28		W4471	0093	24		SPARE	ALL
	29		W4471	0094	24		34-55-11	ALL
	30	UNUSED						001-099
	30		W4471	0252	22		74-31-11	115-199
	31		W4471	0103	24		34-12-12	ALL
	32		W4471	0102	24		34-12-12	ALL
	33		W4471	0113	24		SPARE	001-099
	33		W4471	5048Z			SPARE	115-199
	34		W4471	0114	24		27-58-11	001-099
	34		W4471	0114	22		27-58-11	115-199
	35		W4471	0115	24		27-58-11	001-099
	35		W4471	0115	22		27-58-11	115-199
	36		W4471	0116	24		27-58-11	001-099
	36		W4471	0116	22		27-58-11	115-199
	37		W4471	0117	24		27-58-11	001-099
	37		W4471	0117	22		27-58-11	115-199
	38		W4471	0253	22		SPARE	001-099
	38		W4471	0253	22		74-31-11	115-199
	39		W4471	0126	22		34-12-11	ALL
	40		W4471	0127	22		34-12-11	ALL
	41		W4471	0128	24		34-12-12	ALL
	42		W4471	0192	22		SPARE	001-099
	42	UNUSED						115-199
	43		W4471	5039B	22		32-42-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 97

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41473P		P036-00/ /		PLUG- (continued)				001-099
D41473P		P36/ /		PLUG- (continued)				115-199
	43		W4471	5039B	24		32-42-11	115-199
	44		W4471	5039R	22		32-42-11	001-099
	44		W4471	5039R	24		32-42-11	115-199
	45		W4471	5039Z			32-42-11	ALL
	46		W4471	0248	24		31-41-19	001-099
	46		W4471	0134	24		31-41-19	115-199
	47		W4471	0146	24		SPARE	ALL
	48		W4471	5048R	24		SPARE	001-099
	48		W4471	5096R	24		34-45-02	115-199
	49		W4471	5048B	24		SPARE	001-099
	49		W4471	5096B	24		34-45-02	115-199
	50		W4471	5048Z			SPARE	001-099
	50		W4471	5096Z			34-45-02	115-199
	51	UNUSED						001-099
	51		W4471	0161	24		SPARE	115-199
	52		W4471	0137	22		SPARE	001-099
	52		W4471	0165	22		SPARE	115-199
	53		W4471	0170	24		SPARE	ALL
	54		W4471	0185	24		SPARE	ALL
	55	UNUSED						ALL
D41474J		P034-00/ /		RCPT				001-099
D41474J		P34/ /		RCPT				115-199
	1		W1240	0019	20		33-22-11	ALL
	2		W1240	0034	22		33-22-12	ALL
	3		W1240	0422	22		33-22-11	001-099
	3		W1240	0022	22		33-22-11	115-199
	4		W1240	0232	22		33-21-51	001-099
	4		W1242	0021	22		33-21-51	115-199
	5		W1240	0020	22		33-22-11	ALL
	6		W1240	0423	22		33-22-11	001-099
	6		W1240	0132	22		33-22-11	115-199
	7		W1240	0017	24		33-21-31	ALL
	8		W1240	0136	22		33-22-11	ALL
	9		W1240	0222	24		33-21-31	ALL
	10		W1240	0128	24		33-21-31	ALL
	11		W1196	0201	20		33-21-51	001-099
	11		W1196	0201	22		33-21-11	115-199
	12		W1240	0189	24		33-21-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 98

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41474J		P034-00/ /		RCPT (continued)				001-099
D41474J		P34/ /		RCPT (continued)				115-199
	12		W1242	0009	24		33-21-11	115-199
	13		W1240	0006	24		33-21-11	ALL
	14		W1240	0125	24		33-21-11	ALL
	15		W1240	0126	22		33-51-11	ALL
	16		W1240	0111	22		33-51-11	ALL
	17		W1240	0127	22		33-51-11	ALL
	18		W1240	0120	20		24-51-51	001-099
	18		W1240	0120	24		24-51-51	115-199
	19		W1240	0118	24		24-51-51	ALL
	20		W1240	0119	24		24-51-51	ALL
	21		W1240	0036	22		33-22-14	ALL
	22		W1240	0137	24		33-22-11	ALL
	23		W1240	0281	22		33-22-14	001-099
	23	UNUSED						115-199
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						001-099
	26		W1240	0281	22		33-22-14	115-199
	27	UNUSED						001-099
	27		W1240	0282	22		33-22-14	115-199
	28		W1240	0282	22		33-22-14	001-099
	28		W1240	0277	22		33-22-12	115-199
	29	UNUSED						001-099
	29		W1240	0278	22		33-22-12	115-199
	30		W1240	0233	22		33-22-11	ALL
	31		W1240	0274	22		33-22-11	ALL
D41474P		P34/ /		PLUG-				ALL
	1		W3576	0001	20		33-22-11	ALL
	2		W3576	0017	22		33-22-12	ALL
	3		W3576	0011	22		33-22-11	ALL
	4		W3576	0032	20		33-21-51	001-099
	4		W3576	0032	22		33-21-51	115-199
	5		W3576	0005	22		33-22-11	ALL
	6		W3576	0006	22		33-22-11	ALL
	7		W3576	0033	24		33-21-31	ALL
	8		W3576	0012	22		33-22-11	ALL
	9		W3576	0034	24		33-21-31	ALL
	10		W3576	0035	24		33-21-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 99

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41474P		P34/ /		PLUG- (continued)				ALL
	11		W3576	0039	20		33-21-51	001-099
	11		W3576	0039	22		33-21-11	115-199
	12		W3576	0038	24		33-21-11	ALL
	13		W3576	0037	24		33-21-11	ALL
	14		W3576	0036	24		33-21-11	ALL
	15		W3576	0040	22		33-51-11	ALL
	16		W3576	0041	22		33-51-11	ALL
	17		W3576	0042	22		33-51-11	ALL
	18		W3576	0045	20		24-51-51	001-099
	18		W3576	0045	22		24-51-51	115-199
	19		W3576	0046	22		24-51-51	ALL
	20		W3576	0047	22		24-51-51	ALL
	21		W3576	0048	22		33-22-14	ALL
	22		W3576	0049	24		33-22-11	001-099
	22		W3576	0049	22		33-22-11	115-199
	23		W3576	0078	22		33-22-14	001-099
	23		W3576	0050	22		SPARE	115-199
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						001-099
	26		W3576	0078	22		33-22-14	115-199
	27	UNUSED						001-099
	27		W3576	0054	22		33-22-14	115-199
	28		W3576	0054	22		33-22-14	001-099
	28		W3576	0136	22		33-22-12	115-199
	29		W3576	0072	24		SPARE	001-099
	29		W3576	0020	22		33-22-12	115-199
	30		W3576	0077	22		33-22-11	ALL
	31		W3576	0002	22		33-22-11	ALL
D41475J		P36/ /		RCPT				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1260	5899	22		27-23-21	ALL
	4	UNUSED						001-099
	4		W1260	0080	24		36-11-11	115-199
	5	UNUSED						ALL
	6	UNUSED						001-099
	6		W1260	0604	22		31-31-32	115-199
	7	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 100

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41475J		P36/ /		RCPT (continued)				ALL
	7		W1260	0607	22		31-31-32	115-199
	8	UNUSED						001-099
	8		W1260	0610	22		31-31-32	115-199
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W1260	0170	24		23-12-11	ALL
	23		W1260	5009R	24		34-61-15	ALL
	24		W1260	5009B	24		34-61-15	ALL
	25		W1260	5009Z			34-61-15	ALL
	26		W1260	5007B	24		34-61-15	ALL
	27		W1260	5007R	24		34-61-15	ALL
	28		W1260	5007Z			34-61-15	ALL
	29		W1260	5008R	24		34-61-15	ALL
	30		W1260	5008B	24		34-61-15	ALL
	31		W1260	5008Z			34-61-15	ALL
	32		W1260	8002	22		34-61-15	ALL
	33	UNUSED						001-099
	33		W1260	8003	22		34-61-15	115-199
	34	UNUSED						ALL
	35		W1260	8536	22		30-34-21	ALL
	36		W1260	8032	22		30-34-21	ALL
	37		W1260	8034	22		30-34-21	ALL
	38	UNUSED						ALL
	39	UNUSED						001-099
	39		W1260	0045	22		27-23-11	115-199
	40	UNUSED						001-099
	40		W1260	5663	22		27-23-11	115-199
	41	UNUSED						001-099
	41		W1260	0047	22		27-23-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 101

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41475J		P36/ /		RCPT (continued)				ALL
	42		W1260	5882	22		32-42-11	ALL
	43		W1260	0104	24		21-33-12	ALL
	44		W1260	0874	24		24-25-13	ALL
	45		W1260	5633	22		22-14-31	ALL
	46		W1260	0871	24		24-25-13	001-002, 115-199
	46		W1260	6379	24		24-25-13	003-099
	47		W1260	0872	24		24-25-13	ALL
	48		W1260	0802	24		73-21-12	ALL
	49		W1260	0873	24		24-25-13	ALL
I	50	UNUSED						001-099
I	50		W1260	2513B	22		34-22-38	115-199
I	51	UNUSED						001-099
I	51		W1260	2513Z			34-22-38	115-199
I	52	UNUSED						001-099
I	52		W1260	2513R	22		34-22-38	115-199
	53	UNUSED						001-099
	53		W1260	5012R	24		27-32-11	115-199
	54	UNUSED						001-099
	54		W1260	5012B	24		27-32-11	115-199
	55	UNUSED						001-099
	55		W1260	5012Z			27-32-11	115-199
D41475P		P036-00/ /		PLUG-				001-099
D41475P		P36/ /		PLUG-				115-199
	1		W4471	0182	24		34-61-11	001-099
	1		W4471	0182	24		SPARE	115-199
	2		W4471	0183	24		SPARE	ALL
	3		W4471	0228	22		27-23-21	ALL
	4		W4471	0187	24		SPARE	001-099
	4		W4471	0187	24		36-11-11	115-199
	5	UNUSED						001-099
	5		W4471	0190	24		SPARE	115-199
	6	UNUSED						001-099
	6		W4471	0193	22		31-31-32	115-199
	7		W4471	0162	24		SPARE	001-099
	7		W4471	0194	22		31-31-32	115-199
	8	UNUSED						001-099
	8		W4471	0199	22		31-31-32	115-199
	9	UNUSED						001-099
	9		W4471	2014R	24		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 102

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41475P		P036-00/ /		PLUG- (continued)				001-099
D41475P		P36/ /		PLUG- (continued)				115-199
	10	UNUSED						001-099
	10		W4471	2014B	24		SPARE	115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W4471	0047	24		23-12-11	ALL
	23		W4471	5069R	24		34-61-15	ALL
	24		W4471	5069B	24		34-61-15	ALL
	25		W4471	5069Z			34-61-15	ALL
	26		W4471	5070B	24		34-61-15	ALL
	27		W4471	5070R	24		34-61-15	ALL
	28		W4471	5070Z			34-61-15	ALL
	29		W4471	5071R	24		34-61-15	ALL
	30		W4471	5071B	24		34-61-15	ALL
	31		W4471	5071Z			34-61-15	ALL
	32		W4471	0189	22		34-61-15	ALL
	33	UNUSED						001-099
	33		W4471	0807	22		34-61-15	115-199
	34	UNUSED						ALL
	35		W4471	0270	22		30-34-21	ALL
	36		W4471	0268	22		30-34-21	ALL
	37		W4471	0269	22		30-34-21	ALL
	38		W4471	0271	22		SPARE	001-099
	38	UNUSED						115-199
	39	UNUSED						001-099
	39		W4471	0339	22		27-23-11	115-199
	40	UNUSED						001-099
	40		W4471	0340	22		27-23-11	115-199
	41	UNUSED						001-099
	41		W4471	0341	22		27-23-11	115-199
	42		W4471	0129	22		32-42-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 103

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41475P		P036-00/ /		PLUG- (continued)				001-099
D41475P		P36/ /		PLUG- (continued)				115-199
	43		W4471	0236	24		21-33-12	ALL
	44		W4471	0144	24		24-25-13	ALL
	45		W4471	0240	22		22-14-31	ALL
	46		W4471	0139	24		24-25-13	ALL
	47		W4471	0140	24		24-25-13	ALL
	48		W4471	0288	24		73-21-12	ALL
	49		W4471	0141	24		24-25-13	ALL
	50	UNUSED						001-099
	50		W4471	5111B	22		34-22-38	115-199
	51	UNUSED						001-099
	51		W4471	5111Z			34-22-38	115-199
	52	UNUSED						001-099
	52		W4471	5111R	22		34-22-38	115-199
	53	UNUSED						001-099
	53		W4471	5092R	24		27-32-11	115-199
	54	UNUSED						001-099
	54		W4471	5092B	24		27-32-11	115-199
	55	UNUSED						001-099
	55		W4471	5092Z			27-32-11	115-199
D41476J		P034-00/ /		RCPT				001-099
D41476J		P34/ /		RCPT				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1196	0019	18		24-51-25	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W1240	0001	16		33-21-11	ALL
	9		W1240	0002	16		33-21-11	ALL
	10		W1196	0110	18		33-31-41	ALL
	11	UNUSED						ALL
	12		W1240	0007	16		33-21-31	ALL
	13		W1240	0008	16		33-21-31	ALL
	14		W1240	0041	18		33-24-11	001-099
	14	UNUSED						115-199
	15		W1240	0040	18		33-24-11	001-099
	15	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 104

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41476J		P034-00/ /		RCPT (continued)				001-099
D41476J		P34/ /		RCPT (continued)				115-199
	16	UNUSED						ALL
	17		W1240	0122	16		28-21-11	001-099
	17	UNUSED						115-199
	18		W1240	0123	16		28-21-11	001-099
	18	UNUSED						115-199
	19		W1240	0121	16		28-21-11	001-099
	19	UNUSED						115-199
D41476P		P034-00/ /		PLUG-				001-099
D41476P		P34/ /		PLUG-				115-199
	1	UNUSED						001-099
	1		W2356	0248	18		SPARE	115-199
	2	UNUSED						001-099
	2		W2356	0249	18		SPARE	115-199
	3		W2356	0250	18		24-51-25	ALL
	4	UNUSED						001-099
	4		W2356	0251	18		SPARE	115-199
	5	UNUSED						001-099
	5		W2356	0284	18		SPARE	115-199
	6	UNUSED						001-099
	6		W2356	0285	18		SPARE	115-199
	7	UNUSED						001-099
	7		W2356	0286	18		SPARE	115-199
	8		W2356	0295	16		33-21-11	ALL
	9		W2356	0296	16		33-21-11	ALL
	10		W2356	0297	18		33-31-41	ALL
	11	UNUSED						001-099
	11		W2356	0332	22		SPARE	115-199
	12		W2356	0610	16		33-21-31	ALL
	13		W2356	0611	16		33-21-31	ALL
	14		W2356	0263	16		33-24-11	001-099
	14		W2356	0612	18		SPARE	115-199
	15		W2356	0268	16		33-24-11	001-099
	15	UNUSED						115-199
	16	UNUSED						ALL
	17		W2356	0288	16		28-21-11	001-099
	17	UNUSED						115-199
	18		W2356	0287	16		28-21-11	001-099
	18	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 105

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41476P		P034-00/ /		PLUG- (continued)				001-099
D41476P		P34/ /		PLUG- (continued)				115-199
	19		W2356	0289	16		28-21-11	001-099
	19	UNUSED						115-199
D41477J		P50/ /		RCPT				ALL
	1	UNUSED						ALL
	2		W1140	2005R	22		22-24-11	ALL
	3		W1140	2005B	22		22-24-11	ALL
	4	UNUSED						ALL
	5		W1140	0067	24		34-61-13	ALL
	6		W1140	0068	24		34-61-13	ALL
	7		W1140	0069	24		34-61-13	ALL
	8		W1140	0070	24		34-61-13	ALL
	9		W1140	0071	24		34-61-13	ALL
	10		W1140	0531	22		27-23-21	ALL
	11		W1140	0073	24		34-61-13	ALL
	12		W1140	0074	24		34-61-13	ALL
	13		W1140	0075	24		34-61-13	ALL
	14		W1140	0532	22		27-23-21	ALL
	15		W1140	0533	22		27-23-21	ALL
	16		W1140	0403	22		22-12-11	ALL
	17		W1140	0404	22		22-12-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26		W1140	0015	24		22-32-13	ALL
	27		W1140	0016	24		22-32-13	ALL
	28		W1140	0017	24		22-32-13	ALL
	29		W1140	0018	24		22-32-13	ALL
	30		W1140	0019	24		22-32-13	ALL
	31		W1140	0023	24		22-32-13	ALL
	32		W1140	0024	24		22-32-13	ALL
	33		W1140	0020	24		22-32-13	ALL
	34		W1140	0021	24		22-32-13	ALL
	35		W1140	0022	24		22-32-13	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 106

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41477J		P50/ /		RCPT (continued)				ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41		W1140	0534	22		27-23-21	ALL
	42		W1140	0537	22		27-23-21	ALL
	43		W1140	0072	24		34-61-13	ALL
	44		W1140	0076	24		34-61-13	ALL
	45		W1140	0414	24		34-61-13	ALL
	46		W1140	0415	24		34-61-13	ALL
	47	UNUSED						ALL
	48		W1140	0346	22		30-34-21	ALL
	49		W1140	0347	22		30-34-21	ALL
	50	UNUSED						ALL
	51		W1140	0348	22		30-34-21	ALL
	52	UNUSED						ALL
	53		W1140	0538	22		27-23-21	ALL
	54		W1140	0539	22		27-23-21	ALL
	55		W1140	0540	22		27-23-21	ALL
D41477P		P050-00/ /		PLUG-				001-099
D41477P		P50/ /		PLUG-				115-199
	1		W4471	0147	24		SPARE	ALL
	2		W4471	2010R	22		22-24-11	ALL
	3		W4471	2010B	22		22-24-11	ALL
	4	UNUSED						ALL
	5		W4471	0005	24		34-61-13	ALL
	6		W4471	0006	24		34-61-13	ALL
	7		W4471	0007	24		34-61-13	ALL
	8		W4471	0008	24		34-61-13	ALL
	9		W4471	0009	24		34-61-13	ALL
	10		W4471	0225	22		27-23-21	ALL
	11		W4471	0010	24		34-61-13	ALL
	12		W4471	0011	24		34-61-13	ALL
	13		W4471	0012	24		34-61-13	ALL
	14		W4471	0226	22		27-23-21	ALL
	15		W4471	0227	22		27-23-21	ALL
	16		W4471	0040	22		22-12-11	ALL
	17		W4471	0041	22		22-12-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 107

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41477P		P050-00/ /		PLUG- (continued)				001-099
D41477P		P50/ /		PLUG- (continued)				115-199
	18	UNUSED						001-099
	18		W4471	2004R	24		SPARE	115-199
	19	UNUSED						001-099
	19		W4471	2004B	24		SPARE	115-199
	20	UNUSED						001-099
	20		W4471	2005R	24		SPARE	115-199
	21	UNUSED						001-099
	21		W4471	2005B	24		SPARE	115-199
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W4471	2007R	22		SPARE	ALL
	25		W4471	2007B	22		SPARE	ALL
	26		W4471	0054	24		22-32-13	ALL
	27		W4471	0055	24		22-32-13	ALL
	28		W4471	0056	24		22-32-13	ALL
	29		W4471	0057	24		22-32-13	ALL
	30		W4471	0058	24		22-32-13	ALL
	31		W4471	0059	24		22-32-13	ALL
	32		W4471	0060	24		22-32-13	ALL
	33		W4471	0061	24		22-32-13	ALL
	34		W4471	0062	24		22-32-13	ALL
	35		W4471	0063	24		22-32-13	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						001-099
	38		W4471	5034R	24		SPARE	115-199
	39	UNUSED						001-099
	39		W4471	5034B	24		SPARE	115-199
	40	UNUSED						001-099
	40		W4471	5034Z			SPARE	115-199
	41		W4471	0228	22		27-23-21	ALL
	42		W4471	0229	22		27-23-21	ALL
	43		W4471	0088	24		34-61-13	ALL
	44		W4471	0091	24		34-61-13	ALL
	45		W4471	0089	24		34-61-13	ALL
	46		W4471	0090	24		34-61-13	ALL
	47		W4471	0149	24		SPARE	001-099
	47	UNUSED						115-199
	48		W4471	0268	22		30-34-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 108

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41477P		P050-00/ /		PLUG- (continued)				001-099
D41477P		P50/ /		PLUG- (continued)				115-199
	49		W4471	0269	22		30-34-21	ALL
	50	UNUSED						001-099
	50		W4471	0168	22		SPARE	115-199
	51		W4471	0270	22		30-34-21	ALL
	52	UNUSED						ALL
	53		W4471	0230	22		27-23-21	ALL
	54		W4471	0231	22		27-23-21	ALL
	55		W4471	0232	22		27-23-21	ALL
D41478J		P037-00/ /		RCPT (SB78-32)				001-002
D41478J		P37/ /		RCPT				003-099
D41478J		P037-00/ /		RCPT				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1270	FRAG			78-34-61	ALL
	7	18	W1270	1111	18		78-34-61	ALL
	8	18	W1270	1120	18		78-34-61	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W1270	6551	22		78-34-21	001-002, 115-199
	17		W1270	0748	22		78-34-21	003-099
	18		W1270	6534	22		78-34-21	ALL
	19	18	W1270	6541	18		78-34-61	ALL
	20	UNUSED						ALL
	21	UNUSED						001-002, 115-199
	21		W1270	0768	24		78-36-21	003-099
	22		W1270	6522	24		78-36-21	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 109

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41478J		P037-00/ /		RCPT (SB78-32) (continued)				001-002
D41478J		P37/ /		RCPT (continued)				003-099
D41478J		P037-00/ /		RCPT (continued)				115-199
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W1270	5937	22		78-34-21	ALL
			W1270	1111Z			78-34-61	ALL
			W1270	1120Z			78-34-61	ALL
			W1270	FRAG			78-34-61	ALL
D41478P		P037-00/ /		PLUG				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W4108	2501Z			78-34-61	ALL
	7	16	W4108	2501R	16		78-34-61	ALL
	8	16	W4108	2501B	16		78-34-61	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	18	W4108	1004	18		78-34-21	ALL
	18		W4108	FRAA			78-34-21	ALL
	19	16	W4108	0008	16		78-34-61	ALL
	20	UNUSED						ALL
	21		W4108	0012	22		SPARE	001-002, 115-199
	21		W4108	0012	22		78-36-21	003-099
	22		W4108	1005	22		78-36-21	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 110

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41478P		P037-00/ /		PLUG (continued)				ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	18	W4108	1002	18		78-34-21	ALL
	DED		W4108	1005Z			78-36-21	ALL
			W4108	1002Z			78-34-21	ALL
			W4108	1004Z			78-34-21	ALL
			W4108	FRAA			78-34-21	ALL
D41481J		P051-00/ /		RCPT-				ALL
	1	UNUSED						ALL
	2		W1451	0065	22		27-32-11	ALL
	3		W1451	5001R	24		27-32-11	ALL
	4		W1451	5001B	24		27-32-11	ALL
	5		W1451	FRBF			27-32-11	ALL
	6		W1451	0062	24		27-32-11	ALL
	7		W1451	0166	24		31-51-21	001-099
	7	UNUSED						115-199
	8	UNUSED						001-008, 010-099
	8		W1451	0327	24		31-51-34	009, 115-199
	9		W1451	0068	24		31-51-41	ALL
	10		W1451	0177	24		31-51-41	ALL
	11		W1451	0176	24		31-51-41	ALL
	12		W1451	0069	24		31-51-42	ALL
	13		W1451	0223	24		31-51-42	ALL
	14		W1451	0179	24		31-51-33	ALL
	15		W1451	0238	24		31-51-21	ALL
	16		W1451	0240	24		31-51-21	ALL
	17		W1451	0241	24		31-51-21	001-008, 010-099
	17		W1451	1069	24		31-51-21	009, 115-199
	18	UNUSED						ALL
	19		W1451	0319	24		31-51-21	ALL
	20		W1451	0073	24		31-51-21	ALL
	21		W1451	0178	24		31-51-33	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26		W1451	0406	24		31-51-42	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 111

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41481J		P051-00/ /		RCPT- (continued)				ALL
	27	UNUSED						ALL
	28		W1451	0086	24		22-14-11	001-099
	28		W1451	1062	24		22-14-11	115-199
	29		W1451	0323	24		31-51-33	ALL
	30		W1451	5004R	24		34-16-11	ALL
	31		W1451	5004B	24		34-16-11	ALL
	32		W1451	FRAW			34-16-11	ALL
	33	UNUSED						001-008, 010-099
	33		W1451	5021R	24		31-51-34	009, 115-199
	34	UNUSED						001-008, 010-099
	34		W1451	5021B	24		31-51-34	009, 115-199
	35	UNUSED						001-008, 010-099
	35		W1451	FRAY			31-51-34	009, 115-199
	36	UNUSED						001-008, 010-099
	36		W1451	0337	24		31-51-34	009, 115-199
	37		W1451	5019R	24		31-51-21	ALL
	38		W1451	5019B	24		31-51-21	ALL
	39		W1451	5019Z			31-51-21	ALL
	40	UNUSED						ALL
	41		W1451	0418	22		31-51-43	ALL
	42		W1451	0419	22		31-51-43	ALL
	43	UNUSED						ALL
	44		W1451	5025R	24		34-46-12	ALL
	45		W1451	5025B	24		34-46-12	ALL
	46		W1451	FRBD			34-46-12	ALL
	47	UNUSED						ALL
	48		W1451	0424	24		31-51-21	ALL
	49	UNUSED						ALL
	50		W1451	5029R	24		27-32-11	001-099
	50	UNUSED						115-199
	51		W1451	5029B	24		27-32-11	001-099
	51	UNUSED						115-199
	52		W1451	FRBM			27-32-11	001-099
	52	UNUSED						115-199
	53		W1451	5023R	24		27-32-11	ALL
	54		W1451	5023B	24		27-32-11	ALL
	55		W1451	FRBB			27-32-11	ALL
DED			W1451	1069Z			31-51-21	009, 115-199
DED			W1451	1062Z			22-14-11	115-199
			W1451	0463	22		27-32-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 112

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41481J		P051-00/ /		RCPT- (continued)				ALL
			W1451	5029Z			27-32-11	001-099
			W1451	FRBM			27-32-11	001-099
			W1451	0329	20		34-16-11	ALL
			W1451	0420	22		27-32-11	ALL
			W1451	0422	22		34-46-12	ALL
			W1451	0425	22		27-32-11	ALL
			W1451	5001Z			27-32-11	ALL
			W1451	5004Z			34-16-11	ALL
			W1451	5023Z			27-32-11	ALL
			W1451	5025Z			34-46-12	ALL
			W1451	FRAW			34-16-11	ALL
			W1451	FRBB			27-32-11	ALL
			W1451	FRBD			34-46-12	ALL
			W1451	FRBF			27-32-11	ALL
			W1451	0335	20		31-51-34	009, 115-199
			W1451	5021Z			31-51-34	009, 115-199
			W1451	FRAY			31-51-34	009, 115-199
D41481P		P051-00/ /		PLUG-				001-099
D41481P		P51/ /		PLUG-				115-199
	1		W4471	0018	24		SPARE	ALL
	2		W4471	0019	22		27-32-11	001-099
	2		W4471	0019	24		27-32-11	115-199
	3		W4471	5012R	24		27-32-11	ALL
	4		W4471	5012B	24		27-32-11	ALL
	5		W4471	5012Z			27-32-11	ALL
	6		W4471	0021	24		27-32-11	ALL
	7		W4471	0022	24		31-31-62	001-099
	7		W4471	0022	24		SPARE	115-199
	8	UNUSED						001-008, 010-099
	8		W4471	0023	24		31-51-34	009, 115-199
	9		W4471	0024	24		31-51-41	ALL
	10		W4471	0025	24		31-51-41	ALL
	11		W4471	0026	24		31-51-41	ALL
	12		W4471	0027	24		31-51-42	ALL
	13		W4471	0028	24		31-51-42	ALL
	14		W4471	0032	24		31-51-33	ALL
	15		W4471	0033	24		31-51-21	ALL
	16		W4471	0034	24		31-51-21	ALL
	17		W4471	0035	24		31-51-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 113

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41481P		P051-00/ /		PLUG- (continued)				001-099
D41481P		P51/ /		PLUG- (continued)				115-199
	18		W4471	0112	22		SPARE	ALL
	19		W4471	0131	24		31-51-21	ALL
	20		W4471	0132	24		31-51-21	ALL
	21		W4471	0133	24		31-51-33	ALL
	22	UNUSED						001-099
	22		W4471	0156	24		SPARE	115-199
	23	UNUSED						001-099
	23		W4471	0157	24		SPARE	115-199
	24	UNUSED						001-099
	24		W4471	0158	24		SPARE	115-199
	25		W4471	0170	24		SPARE	ALL
	26		W4471	0065	24		31-51-42	ALL
	27		W4471	0043	22		SPARE	ALL
	28		W4471	0042	22		22-14-11	ALL
	29		W4471	0180	24		31-51-33	ALL
	30		W4471	5061R	24		34-16-11	ALL
	31		W4471	5061B	24		34-16-11	ALL
	32		W4471	5061Z			34-16-11	ALL
	33	UNUSED						001-008, 010-099
	33		W4471	5063R	24		31-51-34	009, 115-199
	34	UNUSED						001-008, 010-099
	34		W4471	5063B	24		31-51-34	009, 115-199
	35	UNUSED						001-008, 010-099
	35		W4471	5063Z			31-51-34	009, 115-199
	36	UNUSED						001-008, 010-099
	36		W4471	0224	24		31-51-34	009, 115-199
	37		W4471	5035R	24		31-51-21	ALL
	38		W4471	5035B	24		31-51-21	ALL
	39		W4471	5035Z			31-51-21	ALL
	40	UNUSED						ALL
	41		W4471	2017R	22		31-51-43	ALL
	42		W4471	2017B	22		31-51-43	ALL
	43	UNUSED						ALL
	44		W4471	5091R	24		34-46-12	ALL
	45		W4471	5091B	24		34-46-12	ALL
	46		W4471	5091Z			34-46-12	ALL
	47	UNUSED						ALL
	48		W4471	0048	24		31-51-21	ALL
	49	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 114

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41481P		P051-00/ /		PLUG- (continued)				001-099
D41481P		P51/ /		PLUG- (continued)				115-199
	50		W4471	5079R	24		27-32-11	001-099
	50	UNUSED						115-199
	51		W4471	5079B	24		27-32-11	001-099
	51	UNUSED						115-199
	52		W4471	5079Z			27-32-11	001-099
	52	UNUSED						115-199
	53		W4471	5092R	24		27-32-11	ALL
	54		W4471	5092B	24		27-32-11	ALL
	55		W4471	5092Z			27-32-11	ALL
D41487J		P37/ /		RCPT				ALL
	1		W1272	0215	22		34-61-15	001-008, 115-199
	1	UNUSED						009-099
	2		W1270	5929	24		34-61-24	ALL
	3		W1270	5005B	24		31-31-41	001-099
	3		W1270	5005B	24		31-31-21	115-199
	4		W1270	5005R	24		31-31-41	001-099
	4		W1270	5005R	24		31-31-21	115-199
	5		W1270	5005Z			31-31-41	001-099
	5		W1270	5005Z			31-31-21	115-199
	6		W1270	0277	24		27-32-21	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W1270	5983	22		27-09-12	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						001-009, 115-199
	15		W1270	5032R	22		31-31-41	010-099
	16	UNUSED						ALL
	17	UNUSED						001-009, 115-199
	17		W1270	5032B	22		31-31-41	010-099
	18	UNUSED						001-009, 115-199
	18		W1270	5032Z			31-31-41	010-099
	19		W1270	5952	22		30-32-11	001-099
	19		W1270	5949	22		30-32-11	115-199
	20		W1270	5954	22		30-32-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 115

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41487J		P37/ /		RCPT (continued)				ALL
	20		W1270	0099	22		30-32-11	115-199
	21		W1270	5927	24		34-55-21	ALL
	22		W1270	5915	24		34-12-22	ALL
	23		W1270	5917	24		34-12-22	ALL
	24		W1270	5920	24		34-12-22	ALL
	25		W1270	5922	24		34-12-22	ALL
	26		W1270	0066	20		34-12-21	ALL
	27		W1270	0067	20		34-12-21	ALL
	28		W1270	0068	24		34-12-21	ALL
	29		W1270	5014B	22		32-42-11	ALL
	30		W1270	5014R	22		32-42-11	ALL
	31		W1270	5014Z			32-42-11	ALL
	32		W1270	0190	22		32-42-11	ALL
	33		W1272	0250	24		24-28-11	ALL
	34	UNUSED						ALL
	35		W1270	5888	22		32-31-11	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39		W1270	5925	24		34-53-21	ALL
	40	UNUSED						001-099
	40		W1270	0894	22		31-31-32	115-199
	41	UNUSED						ALL
	42		W1270	6025	24		31-31-62	001-099
	42		W1270	6025	22		31-31-32	115-199
	43	UNUSED						001-099
	43		W1270	0896	22		31-31-32	115-199
	44	UNUSED						ALL
	45	UNUSED						001-099
	45		W1270	0891	22		31-31-32	115-199
	46	UNUSED						ALL
	47		W1270	6019	24		21-44-11	ALL
	48	UNUSED						001, 003-099, 115-199
	48		W1270	8003	22		34-43-14	002
	49	UNUSED						ALL
	50	UNUSED						001, 003-099, 115-199
	50		W1270	6466	22		34-25-12	002
	51	UNUSED						ALL
	52	UNUSED						ALL
	53		W1270	5900	22		32-61-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 116

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41487J		P37/ /		RCPT (continued)				ALL
	54		W1270	5895	22		32-61-12	ALL
	55	UNUSED						ALL
D41487P		P037-00/ /		PLUG-				001-099
D41487P		P37/ /		PLUG-				115-199
	1		W4473	0001	22		34-61-15	001-008, 115-199
	1		W4473	0001	22		SPARE	009-099
	2		W4473	0002	24		34-61-24	ALL
	3		W4473	5009B	24		SPARE	ALL
	4		W4473	5009R	24		SPARE	ALL
	5		W4473	5009Z			SPARE	ALL
	6		W4473	0011	24		27-32-21	ALL
	7		W4473	0012	24		SPARE	ALL
	8	UNUSED						001-099
	8		W4473	0029	24		SPARE	115-199
	9		W4473	0111	22		SPARE	001-099
	9	UNUSED						115-199
	10		W4473	0037	22		SPARE	ALL
	11	UNUSED						001-099
	11		W4473	0038	24		SPARE	115-199
	12		W4473	0127	22		27-09-12	001-099
	12		W4473	0039	22		27-09-12	115-199
	13	UNUSED						001-099
	13		W4473	0051	20		SPARE	115-199
	14		W4473	0052	24		SPARE	ALL
	15	UNUSED						001-009
	15		W4473	5256R	22		31-31-41	010-099
	15		W4473	0054	24		SPARE	115-199
	16		W4473	0055	22		34-61-21	001-099
	16		W4473	0055	24		SPARE	115-199
	17	UNUSED						001-009
	17		W4473	5256B	22		31-31-41	010-099
	17		W4473	0062	24		SPARE	115-199
	18	UNUSED						001-009
	18		W4473	5256Z			31-31-41	010-099
	18		W4473	0063	24		SPARE	115-199
	19		W4473	0064	22		30-32-11	ALL
	20		W4473	0065	22		30-32-11	ALL
	21		W4473	0067	24		34-55-21	ALL
	22		W4473	0068	24		34-12-22	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 117

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41487P		P037-00/ /		PLUG- (continued)				001-099
D41487P		P37/ /		PLUG- (continued)				115-199
	23		W4473	0069	24		34-12-22	ALL
	24		W4473	0070	24		34-12-22	ALL
	25		W4473	0071	24		34-12-22	ALL
	26		W4473	0074	22		34-12-21	ALL
	27		W4473	0075	22		34-12-21	ALL
	28		W4473	0076	24		34-12-21	ALL
	29		W4473	5034B	22		32-42-11	001-099
	29		W4473	5034B	24		32-42-11	115-199
	30		W4473	5034R	22		32-42-11	001-099
	30		W4473	5034R	24		32-42-11	115-199
	31		W4473	5034Z			32-42-11	ALL
	32		W4473	0090	22		32-42-11	ALL
	33		W4473	0033	24		24-28-11	ALL
	34	UNUSED						001-099
	34		W4473	0098	24		SPARE	115-199
	35		W4473	0100	22		32-31-11	ALL
	36	UNUSED						001-099
	36		W4473	0113	24		SPARE	115-199
	37	UNUSED						001-099
	37		W4473	0118	24		SPARE	115-199
	38		W4473	0130	24		SPARE	ALL
	39		W4473	0149	24		34-53-21	ALL
	40	UNUSED						001-099
	40		W4473	0161	22		31-31-32	115-199
	41		W4473	0199	24		SPARE	001-099
	41	UNUSED						115-199
	42		W4473	0159	24		31-31-62	001-099
	42		W4473	0159	22		31-31-32	115-199
	43	UNUSED						001-099
	43		W4473	0160	22		31-31-32	115-199
	44	UNUSED						001-099
	44		W4473	0132	24		SPARE	115-199
	45	UNUSED						001-099
	45		W4473	0166	22		31-31-32	115-199
	46	UNUSED						001-099
	46		W4473	2008R	24		SPARE	115-199
	47		W4473	0174	24		21-44-11	ALL
	48	UNUSED						001, 003-099, 115-199
	48		W2309	0084	22		34-43-14	002

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 118

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41487P		P037-00/ /		PLUG- (continued)				001-099
D41487P		P37/ /		PLUG- (continued)				115-199
	49		W4473	0016	24		SPARE	001, 003-099
	49		W4473	0016	22		SPARE	002
	49	UNUSED						115-199
	50	UNUSED						001, 003-099, 115-199
	50		W4473	0348	22		34-25-12	002
	51	UNUSED						ALL
	52	UNUSED						ALL
	53		W4473	0186	22		32-61-12	ALL
	54		W4473	0187	22		32-61-12	ALL
	55	UNUSED						001-099
	55		W4473	2008B	24		SPARE	115-199
D41489J		P50/ /		RCPT				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1140	0263	24		31-51-21	ALL
	4		W1140	0535	22		27-23-21	ALL
	5		W1140	0536	22		27-23-21	ALL
	6	UNUSED						ALL
	7		W1140	2008R	22		22-24-21	ALL
	8		W1140	2008B	22		22-24-21	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W1140	0349	22		30-34-22	ALL
	13		W1140	0407	22		22-12-21	ALL
	14		W1140	0408	22		22-12-21	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W1140	0350	22		30-34-22	ALL
	19	UNUSED						ALL
	20		W1140	0351	22		30-34-22	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 119

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41489P		P050-00/ /		PLUG- PLUG-				001-099
D41489P		P50/ /						115-199
	1	UNUSED						001-099
	1		W4473	2001R	24		SPARE	115-199
	2	UNUSED						001-099
	2		W4473	2001B	24		SPARE	115-199
	3		W4473	0210	24		31-51-21	ALL
	4		W4473	0197	22		27-23-21	ALL
	5		W4473	0198	22		27-23-21	ALL
	6	UNUSED						001-099
	6		W4473	0211	24		34-12-12	115-199
	7		W4473	2003R	22		22-24-21	ALL
	8		W4473	2003B	22		22-24-21	ALL
	9	UNUSED						001-099
	9		W4473	0051	20		SPARE	115-199
	10		W4473	0261	22		SPARE	001-099
	10		W4473	0054	24		SPARE	115-199
	11	UNUSED						ALL
	12		W4473	0244	22		30-34-22	ALL
	13		W4473	0059	22		22-12-21	ALL
	14		W4473	0060	22		22-12-21	ALL
	15	UNUSED						001-099
	15		W4473	5022R	24		SPARE	115-199
	16	UNUSED						001-099
	16		W4473	5022B	24		SPARE	115-199
	17		W4473	0264	24		SPARE	001-099
	17		W4473	5022Z			SPARE	115-199
	18		W4473	0245	22		30-34-22	ALL
	19		W4473	0126	24		SPARE	ALL
	20		W4473	0246	22		30-34-22	ALL
	21		W4473	0134	22		SPARE	001-099
	21		W4473	0134	24		SPARE	115-199
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D41491J		P051-00/ /		RCPT-				ALL
	1		W1451	5011R	24		27-32-21	ALL
	2		W1451	5011B	24		27-32-21	ALL
	3		W1451	FRBG			27-32-21	ALL
	4		W1451	0162	24		27-32-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 120

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41491J		P051-00/ /		RCPT- (continued)				ALL
	5		W1451	0167	24		31-51-21	001-099
	5	UNUSED						115-199
	6	UNUSED						ALL
	7		W1451	0165	22		27-32-21	ALL
	8		W1451	0160	24		27-32-21	ALL
	9		W1451	0161	22		27-32-21	ALL
	10		W1451	0156	24		27-32-21	ALL
	11		W1451	0157	24		27-32-21	ALL
	12	UNUSED						001-099
	12		W1451	0415	24		34-16-11	115-199
	13	UNUSED						001-099
	13		W1451	0227	24		34-16-11	115-199
	14	UNUSED						ALL
	15		W1451	0154	24		27-32-21	ALL
	16		W1451	0155	24		27-32-21	ALL
	17	UNUSED						ALL
	18		W1451	0181	24		31-51-33	ALL
	19		W1451	0168	24		31-51-41	ALL
	20		W1451	0169	24		31-51-42	ALL
	21	UNUSED						ALL
	22		W1451	0164	24		27-32-21	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26		W1451	0322	24		31-51-21	ALL
	27		W1451	0173	24		31-51-21	ALL
	28		W1451	0180	24		31-51-33	ALL
	29		W1451	0411	24		31-51-41	ALL
	30	UNUSED						ALL
	31		W1451	FRBN			27-32-21	001-099
	31	UNUSED						115-199
	32	UNUSED						ALL
	33		W1451	0407	24		31-51-21	ALL
	34		W1451	2003R	24		31-51-31	ALL
	35		W1451	2003B	24		31-51-31	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39		W1451	0324	24		31-51-33	ALL
	40		W1451	0208	24		31-51-41	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 121

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41491J		P051-00/ /		RCPT- (continued)				ALL
	41	UNUSED						ALL
	42		W1451	5024R	24		27-32-21	001-099
	42	UNUSED						115-199
	43		W1451	5024B	24		27-32-21	001-099
	43	UNUSED						115-199
	44		W1451	FRBC			27-32-21	001-099
	44	UNUSED						115-199
	45		W1451	0403	24		31-41-24	ALL
	46		W1451	5007R	24		31-51-33	ALL
	47		W1451	5007B	24		31-51-33	ALL
	48		W1451	5007Z			31-51-33	ALL
	49		W1451	0412	24		31-51-21	001-008, 010-099
	49		W1451	1072	24		31-51-21	009, 115-199
	50	UNUSED						001-099
	50		W1451	5024R	24		27-32-21	115-199
	51		W1451	5030R	24		27-32-21	001-099
	51		W1451	5024B	24		27-32-21	115-199
	52		W1451	5030B	24		27-32-21	001-099
	52		W1451	FRBC			27-32-21	115-199
	53		W1451	5026R	24		34-46-12	ALL
	54		W1451	5026B	24		34-46-12	ALL
	55		W1451	FRBE			34-46-12	ALL
DED			W1451	1072Z			31-51-21	009, 115-199
			W1451	0464	22		27-32-21	001-099
			W1451	5030Z			27-32-21	001-099
			W1451	FRBN			27-32-21	001-099
			W1451	0421	22		27-32-21	ALL
			W1451	0423	22		34-46-12	ALL
			W1451	0426	22		27-32-21	ALL
			W1451	5011Z			27-32-21	ALL
			W1451	5024Z			27-32-21	ALL
			W1451	5026Z			34-46-12	ALL
			W1451	FRBC			27-32-21	ALL
			W1451	FRBE			34-46-12	ALL
			W1451	FRBG			27-32-21	ALL
D41491P		P051-00/ /		PLUG-				001-099
D41491P		P51/ /		PLUG-				115-199
	1		W4473	5013R	24		27-32-21	ALL
	2		W4473	5013B	24		27-32-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 122

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41491P		P051-00/ /		PLUG- (continued)				001-099
D41491P		P51/ /		PLUG- (continued)				115-199
	3		W4473	5013Z			27-32-21	ALL
	4		W4473	0011	24		27-32-21	ALL
	5		W4473	0102	24		31-31-62	001-099
	5		W4473	0012	24		SPARE	115-199
	6		W4473	0013	24		SPARE	ALL
	7		W4473	0014	22		27-32-21	001-099
	7		W4473	0014	24		27-32-21	115-199
	8		W4473	2007R	24		27-32-21	ALL
	9		W4473	2007B	24		27-32-21	ALL
	10		W4473	0017	24		27-32-21	ALL
	11		W4473	0018	24		27-32-21	ALL
	12		W4473	0012	24		SPARE	001-099
	12		W4473	0251	22		34-16-11	115-199
	13		W4473	0020	24		SPARE	001-099
	13		W4473	0252	22		34-16-11	115-199
	14		W4473	0019	24		SPARE	001-099
	14		W4473	0110	24		SPARE	115-199
	15		W4473	0021	24		27-32-21	ALL
	16		W4473	0022	24		27-32-21	ALL
	17	UNUSED						001-099
	17		W4473	0112	24		SPARE	115-199
	18		W4473	0023	24		31-51-33	ALL
	19		W4473	0024	24		31-51-41	ALL
	20		W4473	0025	24		31-51-42	ALL
	21	UNUSED						001-099
	21		W4473	0081	22		SPARE	115-199
	22		W4473	0091	24		27-32-21	ALL
	23		W4473	5037R	24		SPARE	ALL
	24		W4473	5037B	24		SPARE	ALL
	25		W4473	5037Z			SPARE	ALL
	26		W4473	0092	24		31-51-21	ALL
	27		W4473	0093	24		31-51-21	ALL
	28		W4473	0094	24		31-51-33	ALL
	29		W4473	0095	24		31-51-41	ALL
	30	UNUSED						001-099
	30		W4473	0125	24		SPARE	115-199
	31		W4473	5079Z			27-32-21	001-099
	31		W4473	0135	24		SPARE	115-199
	32		W4473	0136	24		SPARE	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 123

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41491P		P051-00/ /		PLUG- (continued)				001-099
D41491P		P51/ /		PLUG- (continued)				115-199
	33		W4473	0210	24		31-51-21	ALL
	34		W4473	5041R	24		34-46-12	ALL
	35		W4473	5041B	24		34-46-12	ALL
	36		W4473	5041Z			34-46-12	ALL
	37	UNUSED						ALL
	38		W4473	0137	24		SPARE	ALL
	39		W4473	0146	24		31-51-33	ALL
	40		W4473	0148	24		31-51-41	ALL
	41		W4473	0063	24		SPARE	001-099
	41		W4473	0173	24		SPARE	115-199
	42		W4473	5092R	24		27-32-21	001-099
	42	UNUSED						115-199
	43		W4473	5092B	24		27-32-21	001-099
	43	UNUSED						115-199
	44		W4473	5092Z			27-32-21	001-099
	44	UNUSED						115-199
	45		W4473	0208	24		31-41-24	ALL
	46		W4473	5025R	24		31-51-33	ALL
	47		W4473	5025B	24		31-51-33	ALL
	48		W4473	5025Z			31-51-33	ALL
	49		W4473	0031	24		31-51-21	ALL
	50		W4473	0264	24		SPARE	001-099
	50		W4473	5092R	24		27-32-21	115-199
	51		W4473	5079R	24		27-32-21	001-099
	51		W4473	5092B	24		27-32-21	115-199
	52		W4473	5079B	24		27-32-21	001-099
	52		W4473	5092Z			27-32-21	115-199
	53		W4473	5091R	24		34-46-12	ALL
	54		W4473	5091B	24		34-46-12	ALL
	55		W4473	5091Z			34-46-12	ALL
	CAP	Y	W4473	0019	24		34-12-12	115-199
	CAP	Y	W4473	0211	24		34-12-12	115-199
D41493J		P36/ /		RCPT				ALL
	1	UNUSED						ALL
	2		W1260	5793	24		34-31-31	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 124

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41493J		P36/ /		RCPT (continued)				ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W1260	5873	22		27-09-12	ALL
	9		W1260	6051	22		76-11-21	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W1260	5869	22		27-09-12	ALL
	14		W1260	5870	22		27-09-12	ALL
	15		W1260	5871	22		27-09-12	ALL
	16		W1260	5872	22		27-09-12	ALL
	17		W1260	8507	22		27-09-12	ALL
	18		W1260	8508	22		27-09-12	ALL
	19		W1260	0025	22		27-48-21	ALL
	20		W1260	0026	22		27-48-21	ALL
	21	UNUSED						001-099
	21		W1260	6252	22		34-22-38	115-199
	22	UNUSED						001-099
	22		W1260	2512R	22		34-22-38	115-199
	23	UNUSED						001-099
	23		W1260	2512B	22		34-22-38	115-199
	24	UNUSED						001-099
	24		W1260	2512Z			34-22-38	115-199
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 125

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41493J		P36/ /		RCPT (continued)				ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D41493P		P036-00/ /		PLUG-				ALL
	1	UNUSED						001-099
	1		W4475	0011	22		SPARE	115-199
	2		W4475	0037	24		34-31-31	ALL
	3	UNUSED						001-099
	3		W4475	0050	22		SPARE	115-199
	4		W4475	0062	22		SPARE	001-099
	4	UNUSED						115-199
	5	UNUSED						ALL
	6	UNUSED						001-099
	6		W4475	0056	22		SPARE	115-199
	7		W4475	0057	22		SPARE	ALL
	8		W4475	0035	22		27-09-12	ALL
	9		W4475	0064	22		76-11-21	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W4475	0073	22		27-09-12	ALL
	14		W4475	0076	22		27-09-12	ALL
	15		W4475	0072	22		27-09-12	ALL
	16		W4475	0075	22		27-09-12	ALL
	17		W4475	0071	22		27-09-12	ALL
	18		W4475	0074	22		27-09-12	ALL
	19		W4475	0077	22		27-48-21	ALL
	20		W4475	0078	22		27-48-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 126

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41493P		P036-00/ /		PLUG- (continued)				ALL
	21	UNUSED						001-099
	21		W4475	0201	22		34-22-38	115-199
	22	UNUSED						001-099
	22		W4475	5111R	22		34-22-38	115-199
	23	UNUSED						001-099
	23		W4475	5111B	22		34-22-38	115-199
	24	UNUSED						001-099
	24		W4475	5111Z			34-22-38	115-199
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 127

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41495J		P37/ /		RCPT				ALL
	1		W1270	5002Z			31-31-41	001-009
	1		W1270	5033Z			31-31-41	010-099
	1		W1270	5002Z			31-31-21	115-199
	2		W1270	5002R	24		31-31-41	001-009
	2		W1270	5033R	22		31-31-41	010-099
	2		W1270	5002R	24		31-31-21	115-199
	3		W1270	5002B	24		31-31-41	001-009
	3		W1270	5033B	22		31-31-41	010-099
	3		W1270	5002B	24		31-31-21	115-199
	4	UNUSED						ALL
	5		W1270	5991	22		27-09-12	ALL
	6		W1270	5992	22		27-09-12	ALL
	7		W1270	0069	24		34-33-31	ALL
	8		W1270	5017B	22		32-42-11	ALL
	9		W1270	5017R	22		32-42-11	ALL
	10		W1270	5017Z			32-42-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W1270	5701	22		27-09-12	ALL
	16		W1270	5988	22		27-09-12	ALL
	17		W1270	5989	22		27-09-12	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						001, 003-099, 115-199
	24		W1270	2513R	22		34-25-12	002
	25	UNUSED						001, 003-099, 115-199
	25		W1270	2513B	22		34-25-12	002
	26	UNUSED						001, 003-099, 115-199
	26		W1270	2513Z			34-25-12	002
	27	UNUSED						001, 003-099, 115-199
	27		W1270	2514R	22		34-25-12	002
	28	UNUSED						001, 003-099, 115-199
	28		W1270	2514B	22		34-25-12	002
	29	UNUSED						001, 003-099, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 128

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41495J		P37/ /		RCPT (continued)				ALL
	29		W1270	2514Z			34-25-12	002
	30		W1270	8129	20		28-22-11	ALL
	31	UNUSED						ALL
D41495P		P037-00/ /		PLUG-				ALL
	1		W4475	5005Z			31-31-41	001-099
	1		W4475	5005Z			31-31-21	115-199
	2		W4475	5005R	24		31-31-41	001-099
	2		W4475	5005R	24		31-31-21	115-199
	3		W4475	5005B	24		31-31-41	001-099
	3		W4475	5005B	24		31-31-21	115-199
	4	UNUSED						ALL
	5		W4475	0036	22		27-09-12	ALL
	6		W4475	0035	22		27-09-12	ALL
	7		W4475	0039	24		34-33-31	ALL
	8		W4475	5019B	22		32-42-11	001-099
	8		W4475	5019B	24		32-42-11	115-199
	9		W4475	5019R	22		32-42-11	001-099
	9		W4475	5019R	24		32-42-11	115-199
	10		W4475	5019Z			32-42-11	ALL
	11	UNUSED						001-099
	11		W4475	0055	24		SPARE	115-199
	12		W4475	0057	22		SPARE	ALL
	13	UNUSED						001-099
	13		W4475	0058	22		SPARE	115-199
	14	UNUSED						001-099
	14		W4475	0059	22		SPARE	115-199
	15		W4475	0071	22		27-09-12	ALL
	16		W4475	0072	22		27-09-12	ALL
	17		W4475	0073	22		27-09-12	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						001, 003-099, 115-199
	24		W4475	5043R	22		34-25-12	002
	25	UNUSED						001, 003-099, 115-199
	25		W4475	5043B	22		34-25-12	002

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 129

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41495P		P037-00/ /		PLUG- (continued)				ALL
	26	UNUSED						001, 003-099, 115-199
	26		W4475	5043Z			34-25-12	002
	27	UNUSED						001, 003-099, 115-199
	27		W4475	5044R	22		34-25-12	002
	28	UNUSED						001, 003-099, 115-199
	28		W4475	5044B	22		34-25-12	002
	29	UNUSED						001, 003-099, 115-199
	29		W4475	5044Z			34-25-12	002
	30		W4475	0123	22		28-22-11	ALL
	31	UNUSED						ALL
D41497J		P36/ /		RCPT				ALL
	1	UNUSED						ALL
	2		W1260	5795	24		34-46-12	ALL
	3	UNUSED						001-099
	3		W1260	5644	24		SPARE	115-199
	4		W1260	0968	22		34-22-16	001, 003-099
	4		W1260	6256	22		34-22-16	002
	4		W1260	5646	24		SPARE	115-199
	5		W1260	5649	24		23-31-13	ALL
	6		W1260	0321	22		31-31-01	001-099
	6		W1260	0321	22		31-31-13	115-199
	7		W1260	0322	22		31-31-01	001-099
	7		W1260	0322	22		31-31-13	115-199
	8		W1260	5797	24		34-53-11	ALL
	9		W1260	0133	24		31-51-31	ALL
	10		W1260	5715	24		31-51-33	ALL
	11		W1260	5716	24		31-51-41	ALL
	12	UNUSED						ALL
	13		W1260	0063	22		33-25-11	001-099
	13	UNUSED						115-199
	14		W1260	2003R	22		23-31-21	ALL
	15		W1260	2003B	22		23-31-21	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W1260	0016	22		23-31-41	ALL
	19		W1260	0017	22		23-31-41	ALL
	20		W1260	0018	22		23-31-41	ALL
	21	UNUSED						001-099
	21		W1260	2517R	22		34-22-38	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 130

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41497J		P36/ /		RCPT (continued)				ALL
	22	UNUSED						ALL
	23		W1260	6298	22		23-31-19	001-099
	23	UNUSED						115-199
	24	UNUSED						001-099
	24		W1260	2517B	22		34-22-38	115-199
	25	UNUSED						001-099
	25		W1260	2517Z			34-22-38	115-199
	26	UNUSED						ALL
	27		W1260	0621	24		24-34-11	ALL
	28		W1260	6290	22		23-31-19	001-099
	28	UNUSED						115-199
	29	UNUSED						001-099
	29		W1260	0616	22		31-31-13	115-199
	30		W1260	2021R	22		23-31-19	001-099
	30		W1260	5916	22		31-31-32	115-199
	31		W1260	2021B	22		23-31-19	001-099
	31	UNUSED						115-199
	32		W1260	8013	24		26-16-21	001-099
	32		W1260	8017	24		26-16-21	115-199
	33		W1260	8018	24		26-16-21	ALL
	34		W1260	8026	24		26-16-21	ALL
	35	UNUSED						ALL
	36		W1260	0369	20		74-31-11	001-099
	36	UNUSED						115-199
	37		W1260	0103	24		34-12-11	ALL
	38		W1260	5937	22		32-61-11	ALL
	39		W1260	5782	22		32-61-11	ALL
	40		W1260	6297	22		23-31-19	001-099
	40	UNUSED						115-199
	41		W1260	2019R	22		23-31-19	001-099
	41	UNUSED						115-199
	42		W1260	2019B	22		23-31-19	001-099
	42	UNUSED						115-199
	43		W1260	6295	22		23-31-19	001-099
	43	UNUSED						115-199
	44		W1260	2020B	22		23-31-19	001-099
	44	UNUSED						115-199
	45		W1260	2020R	22		23-31-19	001-099
	45		W1260	6256	22		34-22-16	115-199
	46		W1260	6206	22		23-34-15	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 131

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41497J		P36/ /		RCPT (continued)				ALL
	47		W1260	6205	22		23-34-15	001-099
	47		W1260	6215	22		23-34-15	115-199
	48		W1260	6209	22		23-34-15	001-099
	48		W1260	6216	22		23-34-15	115-199
	49		W1260	6210	22		23-34-15	ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						001-099
	52		W1260	6211	22		23-34-15	115-199
	53	UNUSED						ALL
	54	UNUSED						ALL
	55		W1260	6147	22		23-31-41	ALL
D41497P		P036-00/ /		PLUG-				001-099
D41497P		P36/ /		PLUG-				115-199
	1	UNUSED						001-099
	1		W4477	0001	24		SPARE	115-199
	2		W4477	0002	24		34-46-12	ALL
	3		W4477	0210	22		SPARE	001-099
	3	UNUSED						115-199
	4		W4477	0115	24		34-22-16	001-099
	4	UNUSED						115-199
	5		W4477	0015	24		23-31-13	ALL
	6		W4477	0022	22		31-31-01	001-099
	6		W4477	0022	22		31-31-13	115-199
	7		W4477	0023	22		31-31-01	001-099
	7		W4477	0023	22		31-31-13	115-199
	8		W4477	0032	24		34-53-11	ALL
	9		W4477	0043	24		31-51-31	ALL
	10		W4477	0046	24		31-51-33	ALL
	11		W4477	0048	24		31-51-41	ALL
	12		W4477	0055	24		SPARE	ALL
	13		W4477	0084	22		33-25-11	001-099
	13		W4477	0084	22		SPARE	115-199
	14		W4477	2001R	22		23-31-21	ALL
	15		W4477	2001B	22		23-31-21	ALL
	16	UNUSED						001-099
	16		W4477	0095	22		SPARE	115-199
	17	UNUSED						001-099
	17		W4477	0096	22		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 132

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41497P		P036-00/ /		PLUG- (continued)				001-099
D41497P		P36/ /		PLUG- (continued)				115-199
	18		W4477	0101	22		23-31-41	ALL
	19		W4477	0102	22		23-31-41	ALL
	20		W4477	0103	22		23-31-41	ALL
I	21	UNUSED						001-099
I	21		W4477	2509R	22		34-22-38	115-199
	22	UNUSED						001-099
	22		W4477	0142	24		SPARE	115-199
	23		W4477	0311	22		23-31-19	001-099
	23		W4477	0143	24		SPARE	115-199
I	24	UNUSED						001-099
I	24		W4477	2509B	22		34-22-38	115-199
I	25	UNUSED						001-099
I	25		W4477	2509Z			34-22-38	115-199
	26		W4477	0133	24		SPARE	ALL
	27		W4477	0164	24		24-34-11	ALL
	28		W4477	0308	22		23-31-19	001-099
	28		W4477	0165	24		SPARE	115-199
	29		W4477	0166	22		SPARE	001-099
	29		W4477	0166	22		31-31-13	115-199
	30		W4477	2017R	22		23-31-19	001-099
	30		W4477	0170	22		31-31-32	115-199
	31		W4477	2017B	22		23-31-19	001-099
	31		W4477	0177	24		SPARE	115-199
	32		W4477	0178	24		26-16-21	ALL
	33		W4477	0179	24		26-16-21	ALL
	34		W4477	0180	24		26-16-21	ALL
	35		W4477	0228	24		SPARE	001-099
	35		W4477	0193	22		SPARE	115-199
	36		W4477	0192	22		74-31-11	001-099
	36		W4477	0192	22		SPARE	115-199
	37		W4477	0194	24		34-12-11	ALL
	38		W4477	0035	22		32-61-11	ALL
	39		W4477	0044	24		32-61-11	ALL
	40		W4477	0309	22		23-31-19	001-099
	40	UNUSED						115-199
	41		W4477	2015R	22		23-31-19	001-099
	41	UNUSED						115-199
	42		W4477	2015B	22		23-31-19	001-099
	42	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 133

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41497P		P036-00/ /		PLUG- (continued)				001-099
D41497P		P36/ /		PLUG- (continued)				115-199
	43		W4477	0310	22		23-31-19	001-099
	43	UNUSED						115-199
	44		W4477	2016B	22		23-31-19	001-099
	44	UNUSED						115-199
	45		W4477	2016R	22		23-31-19	001-099
	45		W4477	0115	24		34-22-16	115-199
	46		W4477	0246	22		23-34-15	ALL
	47		W4477	0247	22		23-34-15	ALL
	48		W4477	0248	22		23-34-15	ALL
	49		W4477	0249	22		23-34-15	ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						001-099
	52		W4477	0252	22		23-34-15	115-199
	53	UNUSED						ALL
	54	UNUSED						ALL
	55		W4477	0107	22		23-31-41	ALL
D41498J		665/295/L030		RCPT-				009-099
	1		W3702	0741	16		33-24-12	009-099
	2		W3702	0742	22		33-25-11	009-099
	3	UNUSED						009-099
	4	UNUSED						009-099
	5		W3702	0745	22		33-25-11	009-099
	6	UNUSED						009-099
	7		W3702	0747	20		33-24-12	009-099
	8	UNUSED						009-099
	9	UNUSED						009-099
	10		W3702	0740	18		35-21-12	009-099
	11		W3702	0749	20		35-21-12	009-099
	12	UNUSED						009-099
	13		W3702	2001R	22		23-31-21	009-099
	14		W3702	2001B	22		23-31-21	009-099
D41498P		656/ /		PLUG-				009-099
	1		W3572	0176	20		SPARE	009-099
	2		W3572	0171	22		33-25-11	009-099
	3	UNUSED						009-099
	4	UNUSED						009-099

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 134

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41498P		656/ /		PLUG- (continued)				009-099
	5		W3572	0172	22		33-25-11	009-099
	6	UNUSED						009-099
	7		W3572	0175	20		SPARE	009-099
	8	UNUSED						009-099
	9	UNUSED						009-099
	10		W3572	0173	18		35-21-12	009-099
	11		W3572	0174	20		35-21-12	009-099
	12	UNUSED						009-099
	13		W3572	2005R	22		23-31-21	009-099
	14		W3572	2005B	22		23-31-21	009-099

HOOKUP LIST

D280N032

91-21-51

Section D41400

Page 135 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41513J		E004-03/ /		RCPT				001-099
D41513J		E4-3/ /		RCPT-				115-199
	1		W1163	2015R	22		23-31-19	001-099
	1		W1163	2015R	22		23-32-02	115-199
	2		W1163	2015B	22		23-31-19	001-099
	2		W1163	2015B	22		23-32-02	115-199
	3		W1163	0524	24		23-32-02	ALL
	4		W1163	2024R	22		23-32-02	001-099
	4		W1163	2025R	22		23-32-02	115-199
	5		W1163	2024B	22		23-32-02	001-099
	5		W1163	2025B	22		23-32-02	115-199
	6		W1163	0526	24		23-32-02	ALL
	7		W1163	0527	24		23-32-02	ALL
	8		W1163	0528	24		23-32-02	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D41513P		E004-03/ /		PLUG				ALL
	1		W2843	2001R	22		23-31-19	001-099
	1		W2843	2001R	22		23-32-02	115-199
	2		W2843	2001B	22		23-31-19	001-099
	2		W2843	2001B	22		23-32-02	115-199
	3		W2843	0038	22		23-32-02	ALL
	4		W2843	2002R	22		23-32-02	ALL
	5		W2843	2002B	22		23-32-02	ALL
	6		W2843	0035	22		23-32-02	ALL
	7		W2843	0036	22		23-32-02	ALL
	8		W2843	0037	22		23-32-02	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41515J		E004-04/ /		PLUG				001-099
D41515J		E004-04/ /		RECP				115-199
	1		W2843	2003R	22		23-32-02	ALL
	2		W2843	2003B	22		23-32-02	ALL
	3		W2843	2004R	22		23-32-02	ALL
	4		W2843	2004B	22		23-32-02	ALL
	5	UNUSED						ALL
D41515P		E4-4/ /		PLUG				ALL
	1		W1161	2046R	22		23-34-15	ALL
	2		W1161	2046B	22		23-34-15	ALL
	3		W1161	2045R	22		23-34-15	ALL
	4		W1161	2045B	22		23-34-15	ALL
	5	UNUSED						ALL
D41519J		E3-3/ /		RCPT-				ALL
	1		W1433	0063	22		31-31-01	001-099
	1		W1433	0063	22		31-31-11	115-199
	2		W1433	0065	22		31-31-01	001-099
	2		W1433	0065	22		31-31-11	115-199
	3	UNUSED						ALL
	4	UNUSED						001-099
	4		W1433	0064	22		31-31-11	115-199
	5		W1433	0084	24		31-31-01	001-099
	5		W1433	0084	22		31-31-11	115-199
	6		W1433	0175	24		31-31-01	001-099
	6		W1433	0175	24		31-31-11	115-199
	7	UNUSED						ALL
	8		W1433	5055R	24		31-31-01	001-099
	8		W1433	5055R	24		31-31-11	115-199
	9		W1433	5055B	24		31-31-01	001-099
	9		W1433	5055B	24		31-31-11	115-199
	10	UNUSED						001-099
	10		W1433	5011R	24		31-31-11	115-199
	11	UNUSED						001-099
	11		W1433	5011B	24		31-31-11	115-199
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1433	5012R	24		31-31-01	001-099
	14		W1433	5012R	24		31-31-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41519J		E3-3/ /		RCPT- (continued)				ALL
	15		W1433	5012B	24		31-31-01	001-099
	15		W1433	5012B	24		31-31-11	115-199
	16	UNUSED						001-099
	16		W1433	5013R	24		31-31-11	115-199
	17	UNUSED						001-099
	17		W1433	5013B	24		31-31-11	115-199
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W1433	5055Z			31-31-01	001-099
	21		W1433	5055Z			31-31-11	115-199
	22		W1433	0085	22		31-31-01	001-099
	22		W1433	0085	22		31-31-11	115-199
	23	UNUSED						001-099
	23		W1433	FRAJ			31-31-11	115-199
	24		W1433	0088	24		31-31-01	001-099
	24		W1433	0088	24		31-31-11	115-199
	25	UNUSED						ALL
	26		W1433	0087	24		31-31-01	001-099
	26		W1433	0087	24		31-31-11	115-199
	27		W1433	FRAK			31-31-01	001-099
	27		W1433	FRAK			31-31-11	115-199
	28		W1433	0077	24		31-31-01	001-099
	28		W1433	0077	22		31-31-11	115-199
	29	UNUSED						001-099
	29		W1433	FRAL			31-31-11	115-199
	30	UNUSED						ALL
	31		W1433	0074	24		31-31-01	001-099
	31		W1433	0074	24		31-31-11	115-199
			W1433	0092	20		31-31-01	001-099
			W1433	5012Z			31-31-01	001-099
			W1433	FRAK			31-31-01	001-099
			W1433	0091	20		31-31-11	115-199
			W1433	0092	20		31-31-11	115-199
			W1433	0093	20		31-31-11	115-199
			W1433	5011Z			31-31-11	115-199
			W1433	5012Z			31-31-11	115-199
			W1433	5013Z			31-31-11	115-199
			W1433	FRAJ			31-31-11	115-199
			W1433	FRAK			31-31-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41519J		E3-3/ /		RCPT- (continued)				ALL
			W1433	FRAL			31-31-11	115-199
D41519P		E003-03/ /		PLUG-				ALL
	1		W2299	0001	22		31-31-01	001-099
	1		W2299	0001	22		31-31-11	115-199
	2		W2299	0002	22		31-31-01	001-099
	2		W2299	0002	22		31-31-11	115-199
	3		W2299	0003	22		SPARE	ALL
	4		W2299	0004	22		SPARE	001-099
	4		W2299	0004	22		31-31-11	115-199
	5		W2299	0005	24		31-31-01	001-099
	5		W2299	0005	24		31-31-11	115-199
	6		W2299	0006	24		31-31-01	001-099
	6		W2299	0006	24		31-31-11	115-199
	7	UNUSED						ALL
	8		W2299	5004R	24		31-31-01	001-099
	8		W2299	5004R	24		31-31-11	115-199
	9		W2299	5004B	24		31-31-01	001-099
	9		W2299	5004B	24		31-31-11	115-199
	10		W2299	5001R	24		SPARE	001-099
	10		W2299	5001R	24		31-31-11	115-199
	11		W2299	5001B	24		SPARE	001-099
	11		W2299	5001B	24		31-31-11	115-199
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W2299	5002R	24		31-31-01	001-099
	14		W2299	5002R	24		31-31-11	115-199
	15		W2299	5002B	24		31-31-01	001-099
	15		W2299	5002B	24		31-31-11	115-199
	16		W2299	5003R	24		SPARE	001-099
	16		W2299	5003R	24		31-31-11	115-199
	17		W2299	5003B	24		SPARE	001-099
	17		W2299	5003B	24		31-31-11	115-199
	18		W2299	5005R	24		SPARE	001-099
	18		W2299	0008	22		SPARE	115-199
	19		W2299	5005B	24		SPARE	001-099
	19		W2299	0009	22		SPARE	115-199
	20		W2299	0010	22		SPARE	001-099
	20		W2299	0010	22		31-31-11	115-199
	21		W2299	5004Z			31-31-01	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 4

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41519P		E003-03/ /		PLUG- (continued)				ALL
	21		W2299	5004Z			31-31-11	115-199
	22		W2299	0011	22		31-31-01	001-099
	22		W2299	0011	22		31-31-11	115-199
	23		W2299	5001Z			31-31-11	ALL
	24		W2299	0013	24		31-31-01	001-099
	24		W2299	0013	24		31-31-11	115-199
	25		W2299	0015	22		SPARE	001-099
	25	UNUSED						115-199
	26		W2299	0012	24		31-31-01	001-099
	26		W2299	0012	24		31-31-11	115-199
	27		W2299	5002Z			31-31-01	001-099
	27		W2299	5002Z			31-31-11	115-199
	28		W2299	0007	24		31-31-01	001-099
	28		W2299	0007	24		31-31-11	115-199
	29		W2299	5003Z			SPARE	001-099
	29		W2299	5003Z			31-31-11	115-199
	30		W2299	5005Z			SPARE	001-099
	30		W2299	0015	22		SPARE	115-199
	31		W2299	0014	24		31-31-01	001-099
	31		W2299	0014	24		31-31-11	115-199
D41521J		E3-3/ /		RCPT-				ALL
	1		W1433	5014R	24		31-31-01	001-099
	1		W1433	5014R	24		31-31-11	115-199
	2		W1433	5014B	24		31-31-01	001-099
	2		W1433	5014B	24		31-31-11	115-199
	3		W1433	5014Z			31-31-01	001-099
	3		W1433	5014Z			31-31-11	115-199
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1433	5015R	24		31-31-01	001-099
	7		W1433	5015R	24		31-31-11	115-199
	8		W1433	5015B	24		31-31-01	001-099
	8		W1433	5015B	24		31-31-11	115-199
	9		W1433	FRAN			31-31-01	001-099
	9		W1433	FRAN			31-31-11	115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 5

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41521J		E3-3/ /		RCPT- (continued)				ALL
	13		W1433	0084	24		31-31-01	001-099
	13		W1433	0084	22		31-31-11	115-199
	14		W1433	0078	24		31-31-01	001-099
	14		W1433	0078	22		31-31-11	115-199
	15	UNUSED						ALL
	16		W1433	0082	22		31-31-01	001-099
	16		W1433	0082	22		31-31-11	115-199
	17	UNUSED						001-099
	17		W1433	0083	22		31-31-11	115-199
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W1433	0081	22		31-31-01	001-099
	20		W1433	0081	22		31-31-11	115-199
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
			W1433	0095	20		31-31-01	001-099
			W1433	5015Z			31-31-01	001-099
			W1433	FRAN			31-31-01	001-099
			W1433	0095	20		31-31-11	115-199
			W1433	5015Z			31-31-11	115-199
			W1433	FRAN			31-31-11	115-199
D41521P		E003-03/ /		PLUG-				ALL
	1		W2651	5001R	24		31-31-01	001-099
	1		W2651	5001R	24		31-31-13	115-199
	2		W2651	5001B	24		31-31-01	001-099
	2		W2651	5001B	24		31-31-13	115-199
	3		W2651	5001Z			31-31-01	001-099
	3		W2651	5001Z			31-31-13	115-199
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W2651	5002R	24		31-31-13	ALL
	8		W2651	5002B	24		31-31-01	001-099
	8		W2651	5002B	24		31-31-13	115-199
	9		W2651	5002Z			31-31-01	001-099
	9		W2651	5002Z			31-31-13	115-199
	10	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 6

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41521P		E003-03/ /		PLUG- (continued)				ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W2651	0004	24		31-31-01	001-099
	13		W2651	0004	24		31-31-13	115-199
	14		W2651	0005	24		31-31-01	001-099
	14		W2651	0005	24		31-31-13	115-199
	15	UNUSED						ALL
	16		W2651	0002	22		31-31-01	001-099
	16		W2651	0002	22		31-31-13	115-199
	17	UNUSED						001-099
	17		W2651	0003	22		31-31-13	115-199
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W2651	0001	22		31-31-01	001-099
	20		W2651	0001	22		31-31-13	115-199
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D41523J		E3-3/ /		RCPT-				115-199
	1	UNUSED						115-199
	2	UNUSED						115-199
	3	UNUSED						115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10		W1433	5031R	24		31-31-13	115-199
	11		W1433	5031B	24		31-31-13	115-199
	12		W1433	FRAZ			31-31-13	115-199
	13		W1433	1001	22		31-31-13	115-199
	14		W1433	1002	22		31-31-13	115-199
	15		W1433	1003	22		31-31-13	115-199
	16		W1433	FRAY			31-31-13	115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 7

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41523J		E3-3/ /		RCPT- (continued)				115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
			W1433	0150	20		31-31-13	115-199
			W1433	0151	20		31-31-13	115-199
			W1433	1001Z			31-31-13	115-199
			W1433	1002Z			31-31-13	115-199
			W1433	1003Z			31-31-13	115-199
			W1433	5031Z			31-31-13	115-199
			W1433	FRAY			31-31-13	115-199
			W1433	FRAZ			31-31-13	115-199
D41523P		E003-03/ /		PLUG-				115-199
	1		W2079	0001	22		31-31-13	115-199
	2		W2079	0002	22		31-31-13	115-199
	3		W2079	0003	22		31-31-13	115-199
	4		W2079	0004	22		31-31-13	115-199
	5		W2079	0005	22		31-31-13	115-199
	6		W2079	0006	22		31-31-13	115-199
	7		W2079	0007	22		31-31-13	115-199
	8		W2079	0008	22		31-31-13	115-199
	9		W2079	0009	22		31-31-13	115-199
	10		W2079	5001R	24		31-31-13	115-199
	11		W2079	5001B	24		31-31-13	115-199
	12		W2079	5001Z			31-31-13	115-199
	13		W2079	1001	22		31-31-13	115-199
	14		W2079	1002	22		31-31-13	115-199
	15		W2079	1003	22		31-31-13	115-199
	16		W2079	FRAA			31-31-13	115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
			W2079	1001Z			31-31-13	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 8

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41523P		E003-03/ /		PLUG- (continued)				115-199
			W2079	1002Z			31-31-13	115-199
			W2079	1003Z			31-31-13	115-199
			W2079	FRAA			31-31-13	115-199
D41525J		E3-3/ /		RCPT-				ALL
	1	UNUSED						ALL
	2	UNUSED						001-099
	2		W1433	0028	24		34-53-11	115-199
	3	UNUSED						001-099
	3		W1433	0110	24		34-53-11	115-199
	4	UNUSED						001-099
	4		W1433	0129	24		34-53-11	115-199
	5	UNUSED						001-099
	5		W1433	0037	22		34-53-11	115-199
	6	UNUSED						ALL
	7		W1433	0300	24		34-53-11	001-099
	7	UNUSED						115-199
	8	UNUSED						001-099
	8		W1433	0030	24		34-53-11	115-199
	9		W1433	0026	24		34-53-11	001-002, 115-199
	9	UNUSED						003-099
	10		W1433	0030	24		34-53-11	001-099
	10		W1433	0027	24		34-53-11	115-199
	11		W1433	0198	24		34-53-11	001-099
	11		W1433	0130	24		34-53-11	115-199
	12		W1433	0199	24		34-53-11	001-099
	12		W1433	0036	24		34-53-11	115-199
	13		W1433	0037	22		34-53-11	001-099
	13	UNUSED						115-199
	14	UNUSED						ALL
	15		W1433	0137	24		34-53-11	001-099
	15	UNUSED						115-199
	16	UNUSED						001-099
	17		W1433	0106	22		34-53-11	001-002
	17	UNUSED						003-099
	18	UNUSED						001-099
	19		W1433	0027	24		34-53-11	001-002
	19	UNUSED						003-099
	20		W1433	0028	24		34-53-11	001-099
	21		W1433	FRAA			34-53-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 9

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41525J		E3-3/ /		RCPT- (continued)				ALL
	22		W1433	5001R	24		34-53-11	001-099
	23		W1433	5001B	24		34-53-11	001-099
	24		W1433	0036	24		34-53-11	001-099
			W1433	0031	20		34-53-11	001-099
			W1433	5001Z			34-53-11	001-099
			W1433	FRAA			34-53-11	001-099
D41525P		E003-03/ /		PLUG-				001-099
D41525P		E3-3/ /		PLUG-				115-199
	1	UNUSED						001-099
	1		W2075	0009	24		SPARE	115-199
	2	UNUSED						001-099
	2		W2075	0010	24		34-53-11	115-199
	3	UNUSED						001-099
	3		W2075	0015	24		34-53-11	115-199
	4	UNUSED						001-099
	4		W2075	0017	24		34-53-11	115-199
	5		W2075	0005	22		34-53-11	ALL
	6	UNUSED						ALL
	7		W2075	0007	24		34-53-11	001-099
	7	UNUSED						115-199
	8	UNUSED						001-099
	8		W2075	0013	24		34-53-11	115-199
	9		W2075	0009	24		34-53-11	001-099
	9		W2075	0008	24		34-53-11	115-199
	10		W2075	0010	24		34-53-11	001-099
	10		W2075	5001R	24		34-53-11	115-199
	11		W2075	0111	24		34-53-11	001-099
	11		W2075	5001B	24		34-53-11	115-199
	12		W2075	0112	24		34-53-11	001-099
	12		W2075	0024	24		34-53-11	115-199
	13		W2075	0113	22		34-53-11	001-099
	13		W2075	5001Z			34-53-11	115-199
	14	UNUSED						ALL
	15		W2075	0015	24		34-53-11	001-099
	15	UNUSED						115-199
	16		W2075	0016	24		34-53-11	001-099
	17		W2075	0017	22		34-53-11	001-099
	18	UNUSED						001-099
	19		W2075	0019	24		34-53-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 10

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41525P		E003-03/ /		PLUG- (continued)				001-099
D41525P		E3-3/ /		PLUG- (continued)				115-199
	20		W2075	0020	24		34-53-11	001-099
	21		W2075	5001Z			34-53-11	001-099
	22		W2075	5001R	24		34-53-11	001-099
	23		W2075	5001B	24		34-53-11	001-099
	24		W2075	0024	24		34-53-11	001-099
D41527J		E003-02/ /		RCPT-				001-099
D41527J		E3-2/ /		RCPT-				115-199
	1	UNUSED						ALL
	2	UNUSED						001-099
	2		W1423	0028	24		34-53-21	115-199
	3	UNUSED						001-099
	3		W1423	0143	24		34-53-21	115-199
	4	UNUSED						001-099
	4		W1423	0036	24		34-53-21	115-199
	5		W1423	0037	22		34-53-21	ALL
	6	UNUSED						001-099
	6		W1423	0145	22		34-53-21	115-199
	7		W1423	0107	24		34-53-21	001-099
	7	UNUSED						115-199
	8	UNUSED						ALL
	9		W1423	0026	24		34-53-21	001-002, 115-199
	9	UNUSED						003-099
	10	UNUSED						001-099
	10		W1423	5001R	24		34-53-21	115-199
	11		W1423	0111	24		34-53-21	001-099
	11		W1423	5001B	24		34-53-21	115-199
	12		W1423	0112	24		34-53-21	001-099
	12		W1423	0142	24		34-53-21	115-199
	13		W1423	0145	20		34-53-21	001-099
	13		W1423	0113	24		34-53-21	115-199
	14	UNUSED						001-099
	14		W1423	FRAA			34-53-21	115-199
	15		W1423	0115	24		34-53-21	001-099
	15	UNUSED						115-199
	16	UNUSED						001-099
	17		W1423	0117	24		34-53-21	001-002
	17	UNUSED						003-099
	18	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 11

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41527J		E003-02/ /		RCPT- (continued)				001-099
D41527J		E3-2/ /		RCPT- (continued)				115-199
	19	UNUSED	W1423	0119	24		34-53-21	001-002
	19							003-099
	20		W1423	0028	24		34-53-21	001-099
	21		W1423	FRAA			34-53-21	001-099
	22		W1423	5001R	24		34-53-21	001-099
	23		W1423	5001B	24		34-53-21	001-099
	24		W1423	0036	24		34-53-21	001-099
			W1423	0031	20		34-53-21	ALL
			W1423	5001Z			34-53-21	ALL
			W1423	FRAA			34-53-21	ALL
D41527P		E003-02/ /		PLUG-				001-099
D41527P		E3-2/ /		PLUG-				115-199
	1	UNUSED						001-099
	1		W2077	0009	24		SPARE	115-199
	2	UNUSED						001-099
	2		W2077	0010	24		34-53-21	115-199
	3	UNUSED						001-099
	3		W2077	0015	24		34-53-21	115-199
	4	UNUSED						001-099
	4		W2077	0024	24		34-53-21	115-199
	5		W2077	0025	22		34-53-21	ALL
	6	UNUSED						001-099
	6		W2077	0026	20		34-53-21	115-199
	7		W2077	0007	24		34-53-21	001-099
	7		W2077	0007	22		SPARE	115-199
	8	UNUSED						ALL
	9		W2077	0009	24		34-53-21	001-099
	9		W2077	0008	24		34-53-21	115-199
	10		W2077	0010	24		34-53-21	001-099
	10		W2077	5001R	24		34-53-21	115-199
	11		W2077	0111	24		34-53-21	001-099
	11		W2077	5001B	24		34-53-21	115-199
	12		W2077	0012	24		34-53-21	001-099
	12		W2077	0017	24		34-53-21	115-199
	13		W2077	0026	20		34-53-21	001-099
	13		W2077	0013	24		34-53-21	115-199
	14	UNUSED						001-099
	14		W2077	5001Z			34-53-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 12

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41527P		E003-02/ /		PLUG- (continued)				001-099
D41527P		E3-2/ /		PLUG- (continued)				115-199
	15		W2077	0015	24		34-53-21	001-099
	15	UNUSED						115-199
	16		W2077	0016	24		34-53-21	001-099
	17		W2077	0017	24		34-53-21	001-099
	18	UNUSED						001-099
	19		W2077	0019	24		34-53-21	001-099
	20		W2077	0020	24		34-53-21	001-099
	21		W2077	5001Z			34-53-21	001-099
	22		W2077	5001R	24		34-53-21	001-099
	23		W2077	5001B	24		34-53-21	001-099
	24		W2077	0024	24		34-53-21	001-099
D41529J		E004-04/ /		RCPT-				001-099
	1		W2069	0007	24		23-12-31	001-099
	2	UNUSED						001-099
	3		W2069	5001Z			23-12-31	001-099
	4	UNUSED						001-099
	5		W2069	0005	24		23-12-31	001-099
	6		W2069	0006	24		23-12-31	001-099
	7		W2069	0003	18		23-12-31	001-099
	8		W2069	0008	24		23-12-31	001-099
	9		W2069	0009	24		23-12-31	001-099
	10	UNUSED						001-099
	11		W2069	5001R	24		23-12-31	001-099
	12		W2069	5001B	24		23-12-31	001-099
D41529P		E4-4/ /		PLUG				001-099
	1		W1161	0041	24		23-12-31	001-099
	2	UNUSED						001-099
	3		W1161	5005Z			23-12-31	001-099
	4	UNUSED						001-099
	5		W1161	0039	24		23-12-31	001-099
	6		W1161	0040	24		23-12-31	001-099
	7		W1161	0037	18		23-12-31	001-099
	8		W1161	0029	24		23-12-31	001-099
	9		W1161	0030	24		23-12-31	001-099
	10	UNUSED						001-099
	11		W1161	5005R	24		23-12-31	001-099
	12		W1161	5005B	24		23-12-31	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 13

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41531J		E004-03/ /		RCPT-				001-099
D41531J		E4-3/ /		RCPT-				115-199
	1		W1163	0426	24		23-12-11	ALL
	2	UNUSED						ALL
	3		W1163	FRAO			23-12-11	ALL
	4	UNUSED						ALL
	5		W1163	0424	24		23-12-11	ALL
	6		W1163	0425	24		23-12-11	ALL
	7		W1163	0463	16		23-12-11	001-099
	7		W1163	1004	16		23-12-11	115-199
	8		W1163	0427	24		23-12-11	ALL
	9		W1163	0428	24		23-12-11	ALL
	10	UNUSED						ALL
	11		W1163	5016R	24		23-12-11	ALL
	12		W1163	5016B	24		23-12-11	ALL
	DED		W1163	1004Z			23-12-11	115-199
			W1163	0423	20		23-12-11	ALL
			W1163	5016Z			23-12-11	ALL
			W1163	FRAO			23-12-11	ALL
D41531P		E004-03/ /		PLUG-				ALL
	1		W2071	0007	24		23-12-11	ALL
	2	UNUSED						ALL
	3		W2071	5001Z			23-12-11	ALL
	4	UNUSED						ALL
	5		W2071	0005	24		23-12-11	ALL
	6		W2071	0006	24		23-12-11	ALL
	7		W2071	0003	18		23-12-11	ALL
	8		W2071	0008	24		23-12-11	ALL
	9		W2071	0009	24		23-12-11	ALL
	10	UNUSED						ALL
	11		W2071	5001R	24		23-12-11	ALL
	12		W2071	5001B	24		23-12-11	ALL
D41533J		E004-03/ /		RCPT-				001-099
D41533J		E4-3/ /		RCPT-				115-199
	1		W1163	0433	24		23-12-21	ALL
	2	UNUSED						ALL
	3		W1163	FRAP			23-12-21	ALL
	4	UNUSED						ALL
	5		W1163	0431	24		23-12-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 14

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41533J		E004-03/ /		RCPT- (continued)				001-099
D41533J		E4-3/ /		RCPT- (continued)				115-199
	6		W1163	0432	24		23-12-21	ALL
	7	18	W1163	0467	18		23-12-21	001-099
	7		W1163	1008	18		23-12-21	115-199
	8		W1163	0458	24		23-12-21	001-099
	8		W1163	0471	24		23-12-21	115-199
	9		W1163	0459	24		23-12-21	001-099
	9		W1163	0472	24		23-12-21	115-199
	10	UNUSED						ALL
	11		W1163	5017R	24		23-12-21	ALL
	12		W1163	5017B	24		23-12-21	ALL
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
	16	UNUSED						001-099
	17	UNUSED						001-099
	18	UNUSED						001-099
	19	UNUSED						001-099
	20	UNUSED						001-099
	21	UNUSED						001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
	DED		W1163	1008Z			23-12-21	115-199
			W1163	0434	20		23-12-21	ALL
			W1163	5017Z			23-12-21	ALL
			W1163	FRAP			23-12-21	ALL
D41533P		E004-03/ /		PLUG-				ALL
	1		W2073	0007	24		23-12-21	ALL
	2	UNUSED						ALL
	3		W2073	5001Z			23-12-21	ALL
	4	UNUSED						ALL
	5		W2073	0005	24		23-12-21	ALL
	6		W2073	0006	24		23-12-21	ALL
	7	18	W2073	0003	18		23-12-21	001-099
	7		W2073	0003	18		23-12-21	115-199
	8		W2073	0008	24		23-12-21	ALL
	9		W2073	0009	24		23-12-21	ALL
	10	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 15

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41533P		E004-03/ /		PLUG- (continued)				ALL
	11		W2073	5001R	24		23-12-21	ALL
	12		W2073	5001B	24		23-12-21	ALL
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
	16	UNUSED						001-099
	17	UNUSED						001-099
	18	UNUSED						001-099
	19	UNUSED						001-099
	20	UNUSED						001-099
	21	UNUSED						001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
D41541J		E004-03/ /		RCPT-				001-099
D41541J		E4-3/ /		RCPT-				115-199
	1		W1163	0007	24		23-21-11	ALL
	2		W1163	0008	24		23-21-11	ALL
	3		W1163	0009	24		23-21-11	ALL
	4		W1163	0010	24		23-21-11	ALL
	5		W1163	0011	24		23-21-11	ALL
	6		W1163	0012	24		23-21-11	ALL
	7		W1163	0013	24		23-21-11	ALL
	8		W1163	0014	24		23-21-11	ALL
	9		W1163	0015	24		23-21-11	ALL
	10		W1163	0016	24		23-21-11	ALL
	11		W1163	0018	24		23-21-11	ALL
	12		W1163	0019	24		23-21-11	ALL
	13		W1163	0070	24		23-21-11	001-099
	13	UNUSED						115-199
	14		W1163	0020	24		23-21-11	ALL
	15		W1163	0021	24		23-21-11	ALL
	16		W1163	0017	24		23-21-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W1163	0181	22		23-42-11	ALL
	20		W1163	0182	22		23-42-11	ALL
	21		W1163	0406	20		23-71-11	ALL
	22		W1163	0407	22		23-71-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 16

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41541J		E004-03/ /		RCPT- (continued)				001-099
D41541J		E4-3/ /		RCPT- (continued)				115-199
	23		W1163	2504B	24		23-41-11	ALL
	24		W1163	2504R	24		23-41-11	ALL
	25		W1163	FRAT			23-41-11	ALL
	26		W1163	0412	22		23-71-11	ALL
	27		W1163	0414	22		23-71-11	ALL
	28		W1163	2508R	24		23-71-11	ALL
	29		W1163	2508B	24		23-71-11	ALL
	30		W1163	0180	22		23-42-11	ALL
	31		W1163	2507B	24		23-71-11	ALL
	32		W1163	2507R	24		23-71-11	ALL
	33		W1163	0183	22		23-42-11	ALL
	34		W1163	1001	22		23-42-11	ALL
	35		W1163	1001Z			23-42-11	ALL
	36		W1163	0408	24		23-71-11	ALL
	37		W1163	0409	24		23-71-11	ALL
	38		W1163	0410	24		23-71-11	ALL
	39		W1163	0411	24		23-71-11	ALL
	40		W1163	FRAM			23-71-11	ALL
	41		W1163	0452	24		31-51-33	ALL
	42		W1163	0072	22		23-42-11	001-099
	42	UNUSED						115-199
	43	UNUSED						ALL
	44		W1163	0469	24		23-71-11	001-099
	44	UNUSED						115-199
	45		W1163	2514R	24		23-71-11	001-099
	45	UNUSED						115-199
	46		W1163	2514B	24		23-71-11	001-099
	46	UNUSED						115-199
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
			W1163	2514Z			23-71-11	001-099
			W1163	0455	20		23-41-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 17

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41541J		E004-03/ /		RCPT- (continued)				001-099
D41541J		E4-3/ /		RCPT- (continued)				115-199
			W1163	2504Z			23-41-11	ALL
			W1163	2507Z			23-71-11	ALL
			W1163	2508Z			23-71-11	ALL
			W1163	FRAM			23-71-11	ALL
			W1163	FRAT			23-41-11	ALL
D41541P		E004-03/ /		PLUG-				001-099
D41541P		E4-3/ /		PLUG-				115-199
	1		W2351	0001	24		23-21-11	ALL
	2		W2351	0002	24		23-21-11	ALL
	3		W2351	0003	24		23-21-11	ALL
	4		W2351	0004	24		23-21-11	ALL
	5		W2351	0005	24		23-21-11	ALL
	6		W2351	0006	24		23-21-11	ALL
	7		W2351	0007	24		23-21-11	ALL
	8		W2351	0008	24		23-21-11	ALL
	9		W2351	0009	24		23-21-11	ALL
	10		W2351	0010	24		23-21-11	ALL
	11		W2351	0011	24		23-21-11	ALL
	12		W2351	0012	24		23-21-11	ALL
	13		W2351	0013	24		23-21-11	ALL
	14		W2351	0014	24		23-21-11	ALL
	15		W2351	0015	24		23-21-11	ALL
	16		W2351	0016	24		23-21-11	ALL
	17		W2351	0045	24		23-22-11	001-099
	17		W2351	0045	24		SPARE	115-199
	18	UNUSED						ALL
	19		W2351	0033	22		23-42-11	ALL
	20		W2351	0034	22		23-42-11	ALL
	21		W2351	0036	20		23-71-11	ALL
	22		W2351	0037	22		23-71-11	ALL
	23		W2351	2501B	24		23-41-11	ALL
	24		W2351	2501R	24		23-41-11	ALL
	25		W2351	2501Z			23-41-11	ALL
	26		W2351	0028	22		23-71-11	ALL
	27		W2351	0031	22		23-71-11	ALL
	28		W2351	2502R	24		23-71-11	ALL
	29		W2351	2502B	24		23-71-11	ALL
	30		W2351	0032	22		23-42-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 18

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41541P		E004-03/ /		PLUG- (continued)				001-099
D41541P		E4-3/ /		PLUG- (continued)				115-199
	31		W2351	2503B	24		23-71-11	ALL
	32		W2351	2503R	24		23-71-11	ALL
	33		W2351	0035	22		23-42-11	ALL
	34		W2351	1001	22		23-42-11	ALL
	35		W2351	1001Z			23-42-11	ALL
	36		W2351	0038	24		23-71-11	ALL
	37		W2351	0039	24		23-71-11	ALL
	38		W2351	0040	24		23-71-11	ALL
	39		W2351	0041	24		23-71-11	ALL
	40		W2351	FRAA			23-71-11	ALL
	41		W2351	0053	24		31-51-33	ALL
	42		W2351	0061	22		23-42-11	001-099
	42	UNUSED						115-199
	43	UNUSED						ALL
	44		W2351	0060	24		23-71-11	001-099
	44	UNUSED						115-199
	45		W2351	2504R	24		23-71-11	001-099
	45	UNUSED						115-199
	46		W2351	2504B	24		23-71-11	001-099
	46	UNUSED						115-199
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51		W2351	0055	24		SPARE	001-099
	51	UNUSED						115-199
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
			W2351	2504Z			23-71-11	001-099
			W2351	2502Z			23-71-11	ALL
			W2351	2503Z			23-71-11	ALL
			W2351	FRAA			23-71-11	ALL
D41544J		P36/ /		RCPT				ALL
	1		W1260	0984	24		21-51-11	001-099
	1	UNUSED						115-199
	2	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 19

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41544J		P36/ /		RCPT (continued)				ALL
	3		W1260	0996	24		21-51-12	001-099
	3	UNUSED						115-199
	4		W1260	0995	24		21-51-12	001-099
	4	UNUSED						115-199
	5		W1260	0992	24		21-51-12	001-099
	5	UNUSED						115-199
	6		W1260	0991	24		21-51-12	001-099
	6	UNUSED						115-199
	7		W1260	0990	24		21-51-12	001-099
	7	UNUSED						115-199
	8		W1260	6042	24		21-51-12	001-099
	8	UNUSED						115-199
	9		W1260	2012R	24		21-51-12	001-099
	9	UNUSED						115-199
	10		W1260	2012B	24		21-51-12	001-099
	10	UNUSED						115-199
	11		W1260	2011B	24		21-51-12	001-099
	11	UNUSED						115-199
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W1260	0311	24		36-22-11	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						001-099
	19		W1260	5545	24		21-58-11	115-199
	20		W1260	0997	24		21-51-12	001-099
	20	UNUSED						115-199
	21		W1260	2011R	24		21-51-12	001-099
	21	UNUSED						115-199
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						001-099
	24		W1260	0215	24		21-58-11	115-199
	25	UNUSED						ALL
	26		W1260	0115	22		32-42-11	ALL
	27	UNUSED						001-099
	27		W1260	5623	22		21-58-24	115-199
	28	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 20

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41544J		P36/ /		RCPT (continued)				ALL
	28		W1260	5622	22		21-58-24	115-199
	29	UNUSED						001-099
	29		W1260	5621	22		21-58-24	115-199
	30	UNUSED						001-099
	30		W1260	5626	22		21-58-24	115-199
	31	UNUSED						001-099
	31		W1260	5612	22		21-58-24	115-199
	32		W1260	5878	24		21-51-13	ALL
	33		W1260	2002R	24		21-61-51	ALL
	34		W1260	2002B	24		21-61-51	ALL
	35		W1260	5006R	22		32-42-11	001-099
	35		W1260	5011R	22		32-42-11	115-199
	36		W1260	5006B	22		32-42-11	001-099
	36		W1260	5011B	22		32-42-11	115-199
	37		W1260	5006Z			32-42-11	001-099
	37		W1260	5011Z			32-42-11	115-199
	38		W1260	5825	22		32-42-11	ALL
	39		W1260	5823	22		32-42-11	ALL
	40		W1260	5839	22		32-42-11	ALL
	41		W1260	5838	22		32-42-11	ALL
	42		W1260	5886	22		32-42-12	ALL
	43		W1260	5887	22		32-42-12	ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						001-099
	46		W1260	5547	20		21-58-11	115-199
	47		W1260	5833	22		32-42-11	ALL
	48		W1260	5842	22		32-42-11	ALL
	49		W1260	5861	22		32-42-11	ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55		W1260	0156	24		21-61-51	ALL
D41544P		P036-00/ /		PLUG				001-099
D41544P		P36/ /		PLUG				115-199
	1		W4006	0126	24		21-51-11	001-099
	1	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 21

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41544P		P036-00/ /		PLUG (continued)				001-099
D41544P		P36/ /		PLUG (continued)				115-199
	2	UNUSED						001-099
	2		W4006	0302	22		SPARE	115-199
	3		W4006	0070	24		21-51-12	001-099
	3	UNUSED						115-199
	4		W4006	0069	24		21-51-12	001-099
	4	UNUSED						115-199
	5		W4006	0068	24		21-51-12	001-099
	5	UNUSED						115-199
	6		W4006	0067	24		21-51-12	001-099
	6	UNUSED						115-199
	7		W4006	0066	24		21-51-12	001-099
	7	UNUSED						115-199
	8		W4006	0134	24		21-51-12	001-099
	8	UNUSED						115-199
	9		W4006	2040R	24		21-51-12	001-099
	9	UNUSED						115-199
	10		W4006	2040B	24		21-51-12	001-099
	10	UNUSED						115-199
	11		W4006	2041B	24		21-51-12	001-099
	11	UNUSED						115-199
	12	UNUSED						001-099
	12		W4006	0034	24		21-58-14	115-199
	13	UNUSED						001-099
	13		W4006	0136	24		SPARE	115-199
	14		W4006	0138	22		SPARE	ALL
	15		W4006	0029	24		36-22-11	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						001-099
	19		W4006	0242	24		21-58-11	115-199
	20		W4006	0071	24		21-51-12	001-099
	20	UNUSED						115-199
	21		W4006	2041R	24		21-51-12	001-099
	21	UNUSED						115-199
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						001-099
	24		W4006	0245	24		21-58-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 22

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41544P		P036-00/ /		PLUG (continued)				001-099
D41544P		P36/ /		PLUG (continued)				115-199
	25	UNUSED						ALL
	26		W4006	0269	22		32-42-11	ALL
	27	UNUSED						001-099
	27		W4006	0252	22		21-58-24	115-199
	28	UNUSED						001-099
	28		W4006	0251	22		21-58-24	115-199
	29	UNUSED						001-099
	29		W4006	0250	22		21-58-24	115-199
	30	UNUSED						001-099
	30		W4006	0253	22		21-58-24	115-199
	31	UNUSED						001-099
	31		W4006	0254	22		21-58-24	115-199
	32		W4006	0097	24		21-51-13	ALL
	33		W4006	2050R	24		21-61-51	ALL
	34		W4006	2050B	24		21-61-51	ALL
	35		W4006	5001R	22		32-42-11	ALL
	36		W4006	5001B	22		32-42-11	ALL
	37		W4006	5001Z			32-42-11	ALL
	38		W4006	0212	22		32-42-11	ALL
	39		W4006	0213	22		32-42-11	ALL
	40		W4006	0214	22		32-42-11	ALL
	41		W4006	0232	24		32-42-11	ALL
	42		W4006	0237	22		32-42-12	ALL
	43		W4006	0238	22		32-42-12	ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						001-099
	46		W4006	0246	20		21-58-11	115-199
	47		W4006	0270	22		32-42-11	ALL
	48		W4006	0267	22		32-42-11	ALL
	49		W4006	0268	22		32-42-11	ALL
	50		W4006	0272	22		SPARE	ALL
	51	UNUSED						001-099
	51		W4006	0261	24		SPARE	115-199
	52	UNUSED						001-099
	52		W4006	1001	22		SPARE	115-199
	53	UNUSED						001-099
	53		W4006	0235	24		SPARE	115-199
	54	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 23

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41544P		P036-00/ /		PLUG (continued)				001-099
D41544P		P36/ /		PLUG (continued)				115-199
	55		W4006	0259	24		21-61-51	ALL
	DED		W4006	1001Z			SPARE	115-199
D41546J		P37/ /		PLUG				ALL
	1		W1270	5593	24		21-61-11	ALL
	2		W1270	5586	24		21-61-11	ALL
	3		W1270	5587	24		21-61-11	ALL
	4		W1270	5588	24		21-61-11	ALL
	5		W1270	5603	24		21-61-11	ALL
	6		W1270	3007Y	24		21-61-11	ALL
	7		W1270	3007B	24		21-61-11	ALL
	8		W1270	3007R	24		21-61-11	ALL
	9		W1270	5591	24		21-61-11	ALL
	10		W1270	5592	24		21-61-11	ALL
	11		W1270	5609	24		21-61-21	ALL
	12		W1270	5610	24		21-61-21	ALL
	13		W1270	5611	24		21-61-21	ALL
	14		W1270	5612	24		21-61-21	ALL
	15		W1270	5613	24		21-61-21	ALL
	16		W1270	5614	24		21-61-21	ALL
	17		W1270	5629	24		21-61-21	ALL
	18		W1270	3008Y	24		21-61-21	ALL
	19		W1270	3008B	24		21-61-21	ALL
	20		W1270	3008R	24		21-61-21	ALL
	21		W1270	3009Y	24		21-61-31	ALL
	22		W1270	3009B	24		21-61-31	ALL
	23		W1270	3009R	24		21-61-31	ALL
	24		W1270	5976	24		21-61-31	ALL
	25		W1270	5645	24		21-61-31	ALL
	26		W1270	5646	24		21-61-31	ALL
	27		W1270	5655	24		21-61-31	ALL
	28		W1270	5638	24		21-61-31	ALL
	29		W1270	5637	24		21-61-31	ALL
	30		W1270	5636	24		21-61-31	ALL
	31		W1270	2008B	24		21-61-11	ALL
	32		W1270	2008R	24		21-61-11	ALL
	33		W1270	2007B	24		21-61-11	ALL
	34		W1270	2007R	24		21-61-11	ALL
	35		W1270	0949	22		21-51-23	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 24

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41546J		P37/ /		PLUG (continued)				ALL
	35		W1270	0159	22		52-35-11	115-199
	36		W1270	0948	22		21-51-23	001-099
	36		W1270	0160	22		52-35-11	115-199
	37		W1270	0955	24		21-51-23	001-099
	37		W1270	5998	22		32-42-12	115-199
	38		W1270	0954	24		21-51-23	001-099
	38		W1270	0410	20		28-25-11	115-199
	39		W1270	2005B	24		21-51-22	ALL
	40		W1270	2005R	24		21-51-22	ALL
	41		W1270	0952	22		21-51-23	001-099
	41		W1270	0158	22		52-35-11	115-199
	42	UNUSED						ALL
	43		W1270	2010R	24		21-61-11	ALL
	44		W1270	2010B	24		21-61-11	ALL
	45		W1270	0950	22		21-51-23	001-099
	45	UNUSED						115-199
	46		W1270	0995	24		21-61-11	ALL
	47		W1270	5979	24		21-51-23	ALL
	48		W1270	0960	24		21-51-23	001-099
	48		W1270	5997	22		32-42-12	115-199
	49	UNUSED						ALL
	50		W1270	5584	24		21-61-11	ALL
	51	UNUSED						001-099
	51		W1270	0021	20		28-25-11	115-199
	52		W1270	0996	24		21-61-21	ALL
	53		W1270	5619	24		21-61-21	ALL
	54		W1270	0997	24		21-61-31	ALL
	55		W1270	5632	24		21-61-31	ALL
D41546P		P037-00/ /		PLUG				001-099
D41546P		P37/ /		PLUG				115-199
	1		W4106	0178	24		21-61-11	ALL
	2		W4106	0177	24		21-61-11	ALL
	3		W4106	0176	24		21-61-11	ALL
	4		W4106	0175	24		21-61-11	ALL
	5		W4106	0174	24		21-61-11	ALL
	6		W4106	3007Y	24		21-61-11	ALL
	7		W4106	3007B	24		21-61-11	ALL
	8		W4106	3007R	24		21-61-11	ALL
	9		W4106	0179	24		21-61-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 25

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41546P		P037-00/ /		PLUG (continued)				001-099
D41546P		P37/ /		PLUG (continued)				115-199
	10		W4106	0180	24		21-61-11	ALL
	11		W4106	0186	24		21-61-21	ALL
	12		W4106	0187	24		21-61-21	ALL
	13		W4106	0197	24		21-61-21	ALL
	14		W4106	0196	24		21-61-21	ALL
	15		W4106	0195	24		21-61-21	ALL
	16		W4106	0194	24		21-61-21	ALL
	17		W4106	0193	24		21-61-21	ALL
	18		W4106	3008Y	24		21-61-21	ALL
	19		W4106	3008B	24		21-61-21	ALL
	20		W4106	3008R	24		21-61-21	ALL
	21		W4106	3009Y	24		21-61-31	ALL
	22		W4106	3009B	24		21-61-31	ALL
	23		W4106	3009R	24		21-61-31	ALL
	24		W4106	0211	24		21-61-31	ALL
	25		W4106	0212	24		21-61-31	ALL
	26		W4106	0210	24		21-61-31	ALL
	27		W4106	0201	24		21-61-31	ALL
	28		W4106	0202	24		21-61-31	ALL
	29		W4106	0203	24		21-61-31	ALL
	30		W4106	0204	24		21-61-31	ALL
	31		W4106	2027B	24		21-61-11	ALL
	32		W4106	2027R	24		21-61-11	ALL
	33		W4106	2028B	24		21-61-11	ALL
	34		W4106	2028R	24		21-61-11	ALL
	35		W4106	0062	20		21-51-23	001-099
	35		W4106	0226	22		52-35-11	115-199
	36		W4106	0063	20		21-51-23	001-099
	36		W4106	0227	22		52-35-11	115-199
	37		W4106	0047	24		21-51-23	001-099
	37		W4106	0234	22		32-42-12	115-199
	38		W4106	0048	24		21-51-23	001-099
	38		W4106	0232	20		28-25-11	115-199
	39		W4106	2030B	24		21-51-22	ALL
	40		W4106	2030R	24		21-51-22	ALL
	41		W4106	0060	20		21-51-23	001-099
	41		W4106	0225	22		52-35-11	115-199
	42	UNUSED						ALL
	43		W4106	2055R	24		21-61-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 26

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41546P		P037-00/ /		PLUG (continued)				001-099
D41546P		P37/ /		PLUG (continued)				115-199
	44		W4106	2055B	24		21-61-11	ALL
	45		W4106	0061	20		21-51-23	001-099
	45	UNUSED						115-199
	46		W4106	0190	24		21-61-11	ALL
	47		W4106	0240	24		21-51-23	ALL
	48		W4106	0049	24		21-51-23	001-099
	48		W4106	0233	22		32-42-12	115-199
	49	UNUSED						001-099
	49		W4106	0157	24		SPARE	115-199
	50		W4106	0183	24		21-61-11	ALL
	51	UNUSED						001-099
	51		W4106	0093	20		28-25-11	115-199
	52		W4106	0184	24		21-61-21	ALL
	53		W4106	0191	24		21-61-21	ALL
	54		W4106	0185	24		21-61-31	ALL
	55		W4106	0192	24		21-61-31	ALL
D41547J		E004-04/ /		RCPT-				ALL
	1		W4057	5001Z			23-34-12	ALL
	2		W4057	5001B	24		23-34-12	ALL
	3		W4057	5001W	24		23-34-12	ALL
	4	UNUSED						001-099
	4		W4057	2001R	20		23-34-12	115-199
	5	18	W4057	2001B	18		23-34-12	001-099
	5		W4057	2001B	20		23-34-12	115-199
	6		W4057	0001	22		23-34-12	ALL
	7		W4057	5002Z			23-34-12	ALL
	8		W4057	5002B	24		23-34-12	ALL
	9		W4057	5002W	24		23-34-12	ALL
	10	18	W4057	2002R	18		23-34-12	001-099
	10		W4057	2002R	20		23-34-12	115-199
	11	UNUSED						001-099
	11		W4057	2002B	20		23-34-12	115-199
	12		W4057	0002	22		23-34-12	ALL
	13	18	W4057	2002B	18		23-34-12	001-099
	13	UNUSED						115-199
	14	UNUSED						ALL
	15	18	W4057	2001R	18		23-34-12	001-099
	15	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 27

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41547J		E004-04/ /		RCPT- (continued)				ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D41547P		E4-4/ /		PLUG-				ALL
	1		W1161	5003Z			23-34-12	ALL
	2		W1161	5003B	24		23-34-12	ALL
	3		W1161	5003W	24		23-34-12	ALL
	4	UNUSED						001-099
	4		W1161	2003R	20		23-34-12	115-199
	5	18	W1161	2003B	18		23-34-12	001-099
	5		W1161	2003B	20		23-34-12	115-199
	6		W1161	0055	22		23-34-12	ALL
	7		W1161	5004Z			23-34-12	ALL
	8		W1161	5004B	24		23-34-12	ALL
	9		W1161	5004W	24		23-34-12	ALL
	10	18	W1161	2004R	18		23-34-12	001-099
	10		W1161	2004R	20		23-34-12	115-199
	11	UNUSED						001-099
	11		W1161	2004B	20		23-34-12	115-199
	12		W1161	0056	22		23-34-12	ALL
	13	18	W1161	2004B	18		23-34-12	001-099
	13	UNUSED						115-199
	14	UNUSED						ALL
	15	18	W1161	2003R	18		23-34-12	001-099
	15	UNUSED						115-199
	16	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 28

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41547P		E4-4/ /		PLUG- (continued)				ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D41548J		360/297/L045		RCPT-				ALL
	1		W3702	0701	16		33-24-12	ALL
	2		W3702	0702	22		33-25-11	ALL
	3		W3702	0703	22		33-25-11	ALL
	4		W3702	0704	22		33-25-11	ALL
	5		W3702	0705	22		33-25-11	ALL
	6		W3702	0706	16		33-23-11	ALL
	7		W3702	0707	20		33-24-12	ALL
	8		W3702	0708	16		33-23-11	ALL
	9	UNUSED						001-099
	9		W3702	0711	22		33-25-11	115-199
	10		W3702	0710	18		35-21-12	ALL
	11		W3702	0709	20		35-21-12	ALL
	12	UNUSED						ALL
	13		W3702	2301R	22		23-31-21	001-099
	13		W3702	2301B	22		23-31-21	115-199
	14		W3702	2301B	22		23-31-21	001-099
	14		W3702	2301R	22		23-31-21	115-199
	15	UNUSED						ALL
	16	UNUSED						ALL
D41548P D41548P		355/290/L30 AA0360/ /		PLUG- PLUG-				001-099 115-199
	1		W3572	0152	20		33-24-12	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 29

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41548P		355/290/L30		PLUG- (continued)				001-099
D41548P		AA0360/ /		PLUG- (continued)				115-199
	1	UNUSED						115-199
	2		W3572	0105	22		33-25-11	001-099
	2	UNUSED						115-199
	3	UNUSED						ALL
	4		W3572	0109	22		33-25-11	ALL
	5		W3572	0106	22		33-25-11	ALL
	6	UNUSED						ALL
	7		W3572	0157	20		33-24-12	001-099
	7	UNUSED						115-199
	8	UNUSED						ALL
	9	UNUSED						001-099
	9		W3572	0105	22		33-25-11	115-199
	10		W3572	0108	18		35-21-12	ALL
	11		W3572	0087	20		35-21-12	ALL
	12	UNUSED						ALL
	13		W3572	2001R	22		23-31-21	001-099
	13		W3572	2003B	22		23-31-21	115-199
	14		W3572	2001B	22		23-31-21	001-099
	14		W3572	2003R	22		23-31-21	115-199
	15	UNUSED						ALL
	16	UNUSED						ALL
D41549J		E004-04/ /		RCPT-				ALL
	1		W4059	5001Z			23-34-12	ALL
	2		W4059	5001B	24		23-34-12	ALL
	3		W4059	5001W	24		23-34-12	ALL
	4	UNUSED						001-099
	4		W4059	2001R	20		23-34-12	115-199
	5	18	W4059	2001B	18		23-34-12	001-099
	5		W4059	2001B	20		23-34-12	115-199
	6		W4059	0001	22		23-34-12	ALL
	7		W4059	5002Z			23-34-12	ALL
	8		W4059	5002B	24		23-34-12	ALL
	9		W4059	5002W	24		23-34-12	ALL
	10	18	W4059	2002R	18		23-34-12	001-099
	10		W4059	2002R	20		23-34-12	115-199
	11	UNUSED						001-099
	11		W4059	2002B	20		23-34-12	115-199
	12		W4059	0002	22		23-34-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 30

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41549J		E004-04/ /		RCPT- (continued)				ALL
	13	18	W4059	2002B	18		23-34-12	001-099
	13	UNUSED						115-199
	14	UNUSED						ALL
	15	18	W4059	2001R	18		23-34-12	001-099
	15	UNUSED						115-199
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D41549P		E4-4/ /		PLUG-				ALL
	1		W1161	5001Z			23-34-12	ALL
	2		W1161	5001B	24		23-34-12	ALL
	3		W1161	5001W	24		23-34-12	ALL
	4	UNUSED						001-099
	4		W1161	2001R	20		23-34-12	115-199
	5	18	W1161	2001B	18		23-34-12	001-099
	5		W1161	2001B	20		23-34-12	115-199
	6		W1161	0053	22		23-34-12	ALL
	7		W1161	5002Z			23-34-12	ALL
	8		W1161	5002B	24		23-34-12	ALL
	9		W1161	5002W	24		23-34-12	ALL
	10	18	W1161	2002R	18		23-34-12	001-099
	10		W1161	2002R	20		23-34-12	115-199
	11	UNUSED						001-099
	11		W1161	2002B	20		23-34-12	115-199
	12		W1161	0054	22		23-34-12	ALL
	13	18	W1161	2002B	18		23-34-12	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 31

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41549P		E4-4/ /		PLUG- (continued)				ALL
	13	UNUSED						115-199
	14	UNUSED						ALL
	15	18	W1161	2001R	18		23-34-12	001-099
	15	UNUSED						115-199
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D41551J D41551J		E004-03/ / E4-3/ /		RCPT- RCPT-				001-099 115-199
	1		W1163	4251R	24		23-42-11	ALL
	2		W1163	4251B	24		23-42-11	ALL
	3		W1163	4251Y	24		23-42-11	ALL
	4		W1163	4251G	24		23-42-11	ALL
	5		W1163	FRAI			23-42-11	ALL
	6		W1163	4252R	24		23-42-11	ALL
	7		W1163	4252B	24		23-42-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W1163	4255R	24		23-42-11	001-099
	11		W1163	4253R	24		23-42-11	115-199
	12		W1163	4255B	24		23-42-11	001-099
	12		W1163	4253B	24		23-42-11	115-199
	13		W1163	FRXX			23-42-11	001-099
	13		W1163	FRAK			23-42-11	115-199
	14		W1163	4254R	24		23-42-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 32

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41551J		E004-03/ /		RCPT- (continued)				001-099
D41551J		E4-3/ /		RCPT- (continued)				115-199
	15		W1163	4254B	24		23-42-11	ALL
	16		W1163	FRAJ			23-42-11	ALL
	17		W1163	4252Y	24		23-42-11	ALL
	18		W1163	4252G	24		23-42-11	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						001-099
	22		W1163	4255G	24		23-42-11	115-199
	23	UNUSED						001-099
	23		W1163	FRAU			23-42-11	115-199
	24		W1163	4255Y	24		23-42-11	001-099
	24		W1163	4253Y	24		23-42-11	115-199
	25		W1163	4255G	24		23-42-11	001-099
	25		W1163	4253G	24		23-42-11	115-199
	26		W1163	4254Y	24		23-42-11	ALL
	27		W1163	4254G	24		23-42-11	ALL
	28		W1163	FRAL			23-42-11	ALL
	29	UNUSED						001-099
	29		W1163	4255R	24		23-42-11	115-199
	30	UNUSED						001-099
	30		W1163	4255B	24		23-42-11	115-199
	31	UNUSED						001-099
	31		W1163	4255Y	24		23-42-11	115-199
			W1163	0127	20		23-42-11	001-099
			W1163	FRXX			23-42-11	001-099
			W1163	0189	20		23-42-11	ALL
			W1163	0190	20		23-42-11	ALL
			W1163	0191	20		23-42-11	ALL
			W1163	4251Z			23-42-11	ALL
			W1163	4252Z			23-42-11	ALL
			W1163	4254Z			23-42-11	ALL
			W1163	4255Z			23-42-11	ALL
			W1163	FRAI			23-42-11	ALL
			W1163	FRAJ			23-42-11	ALL
			W1163	FRAL			23-42-11	ALL
			W1163	0184	20		23-42-11	115-199
			W1163	0460	20		23-42-11	115-199
			W1163	4253Z			23-42-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 33

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41551J		E004-03/ /		RCPT- (continued)				001-099
D41551J		E4-3/ /		RCPT- (continued)				115-199
			W1163	FRAK			23-42-11	115-199
			W1163	FRAU			23-42-11	115-199
D41551P		E004-03/ /		PLUG-				001-099
D41551P		E4-3/ /		PLUG-				115-199
	1		W3525	4251R	24		23-42-11	ALL
	2		W3525	4251B	24		23-42-11	ALL
	3		W3525	4251Y	24		23-42-11	ALL
	4		W3525	4251G	24		23-42-11	ALL
	5		W3525	4251Z			23-42-11	ALL
	6		W3525	4252R	24		23-42-11	ALL
	7		W3525	4252B	24		23-42-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W3525	4253R	24		23-42-11	ALL
	12		W3525	4253B	24		23-42-11	ALL
	13		W3525	4253Z			23-42-11	ALL
	14		W3525	4254R	24		23-42-11	ALL
	15		W3525	4254B	24		23-42-11	ALL
	16		W3525	4252Z			23-42-11	ALL
	17		W3525	4252Y	24		23-42-11	ALL
	18		W3525	4252G	24		23-42-11	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						001-099
	22		W3525	4255G	24		23-42-11	115-199
	23	UNUSED						001-099
	23		W3525	4255Z			23-42-11	115-199
	24		W3525	4253Y	24		23-42-11	ALL
	25		W3525	4253G	24		23-42-11	ALL
	26		W3525	4254Y	24		23-42-11	ALL
	27		W3525	4254G	24		23-42-11	ALL
	28		W3525	4254Z			23-42-11	ALL
	29	UNUSED						001-099
	29		W3525	4255R	24		23-42-11	115-199
	30	UNUSED						001-099
	30		W3525	4255B	24		23-42-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 34

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41551P		E004-03/ /		PLUG- (continued)				001-099
D41551P		E4-3/ /		PLUG- (continued)				115-199
	31	UNUSED						001-099
	31		W3525	4255Y	24		23-42-11	115-199
D41553J		E004-03/ /		RCPT-				001-099
D41553J		E4-3/ /		RCPT-				115-199
	1		W1163	0207	22		23-51-11	ALL
	2		W1163	0206	24		23-51-11	ALL
	3		W1163	0205	24		23-51-11	ALL
	4		W1163	0208	22		23-51-11	ALL
	5		W1163	0201	24		23-51-11	ALL
	6		W1163	0202	24		23-51-11	ALL
	7		W1163	0271	24		23-51-13	ALL
	8		W1163	0230	24		23-51-11	ALL
	9		W1163	0231	24		23-51-11	ALL
	10		W1163	0294	24		23-51-14	ALL
	11		W1163	0296	24		23-51-14	ALL
	12		W1163	0473	24		23-51-11	001-099
	12	UNUSED						115-199
	13		W1163	0504	24		23-51-11	001-099
	13	UNUSED						115-199
	14		W1163	0284	24		23-51-14	ALL
	15		W1163	0281	24		23-51-14	ALL
	16		W1163	0222	24		23-51-11	ALL
	17		W1163	0223	24		23-51-11	ALL
	18		W1163	0214	24		23-51-11	ALL
	19		W1163	0215	24		23-51-11	ALL
	20		W1163	0288	20		23-51-14	ALL
	21		W1163	0232	24		23-51-11	ALL
	22		W1163	0291	24		23-51-14	ALL
	23		W1163	0475	24		23-51-11	001-099
	23	UNUSED						115-199
	24		W1163	0286	24		23-51-14	ALL
	25		W1163	0224	24		23-51-11	ALL
	26		W1163	0216	24		23-51-11	ALL
	27		W1163	0250	24		23-51-12	ALL
	28		W1163	0275	24		23-51-13	ALL
	29		W1163	0246	24		23-51-12	ALL
	30		W1163	0257	24		23-51-12	ALL
	31		W1163	0256	24		23-51-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 35

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41553J		E004-03/ /		RCPT- (continued)				001-099
D41553J		E4-3/ /		RCPT- (continued)				115-199
	32		W1163	0274	24		23-51-13	ALL
	33		W1163	0273	24		23-51-13	ALL
	34		W1163	0272	24		23-51-13	ALL
	35		W1163	0236	24		23-51-12	ALL
	36		W1163	0237	24		23-51-12	ALL
	37		W1163	0243	24		23-51-12	ALL
	38		W1163	0279	24		23-51-13	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D41553P		E004-03/ /		PLUG-				ALL
	1		W2335	4501AD	20		23-51-11	ALL
	2		W2335	4501B	24		23-51-11	ALL
	3		W2335	4501Y	24		23-51-11	ALL
	4		W2335	4501G	24		23-51-11	ALL
	5		W2335	4501K	24		23-51-11	ALL
	6		W2335	4501L	24		23-51-11	ALL
	7		W2335	4501O	24		23-51-13	ALL
	8		W2335	4501N	24		23-51-11	ALL
	9		W2335	4501P	24		23-51-11	ALL
	10		W2335	4501W	24		23-51-14	ALL
	11		W2335	4501WR	24		23-51-14	ALL
	12		W2335	4501WB	24		23-51-11	ALL
	13		W2335	4501WY	24		23-51-11	ALL
	14		W2335	4501WG	24		23-51-14	ALL
	15		W2335	4501WK	24		23-51-14	ALL
	16		W2335	4501WL	24		23-51-11	ALL
	17		W2335	4501WO	24		23-51-11	ALL
	18		W2335	4501WN	24		23-51-11	ALL
	19		W2335	4501AA	24		23-51-11	ALL
	20		W2335	4501	20		23-51-14	ALL
	21		W2335	4501RY	24		23-51-11	ALL
	22		W2335	4501RG	24		23-51-14	ALL
	23		W2335	4501RK	24		23-51-11	ALL
	24		W2335	4501RL	24		23-51-14	ALL
	25		W2335	4501RO	24		23-51-11	ALL
	26		W2335	4501RN	24		23-51-11	ALL
	27		W2335	4501AB	24		23-51-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 36

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41553P		E004-03/ /		PLUG- (continued)				ALL
	28		W2335	4501BY	24		23-51-13	ALL
	29		W2335	4501BG	24		23-51-12	ALL
	30		W2335	4501BK	24		23-51-12	ALL
	31		W2335	4501BL	24		23-51-12	ALL
	32		W2335	4501BO	24		23-51-13	ALL
	33		W2335	4501BN	24		23-51-13	ALL
	34		W2335	4501AC	24		23-51-13	ALL
	35		W2335	4501YG	24		23-51-12	ALL
	36		W2335	4501YK	24		23-51-12	ALL
	37		W2335	4501YL	24		23-51-12	ALL
	38		W2335	4501YO	24		23-51-13	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D41555J		E004-03/ /		RCPT-				001-099
D41555J		E4-3/ /		RCPT-				115-199
	1		W1163	0332	24		23-51-21	ALL
	2		W1163	0298	24		23-51-21	ALL
	3		W1163	0297	24		23-51-21	ALL
	4		W1163	0302	24		23-51-21	ALL
	5		W1163	0299	24		23-51-21	ALL
	6		W1163	0300	24		23-51-21	ALL
	7		W1163	0333	24		23-51-21	ALL
	8		W1163	0310	24		23-51-21	ALL
	9		W1163	0311	24		23-51-21	ALL
	10		W1163	0316	24		23-51-21	ALL
	11		W1163	0317	24		23-51-21	ALL
	12		W1163	0478	24		23-51-21	001-099
	12	UNUSED						115-199
	13		W1163	0479	24		23-51-21	001-099
	13	UNUSED						115-199
	14		W1163	0313	24		23-51-21	ALL
	15		W1163	0314	24		23-51-21	ALL
	16		W1163	0307	24		23-51-21	ALL
	17		W1163	0308	24		23-51-21	ALL
	18		W1163	0304	24		23-51-21	ALL
	19		W1163	0305	24		23-51-21	ALL
	20		W1163	0303	20		23-51-21	ALL
	21		W1163	0312	24		23-51-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 37

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41555J		E004-03/ /		RCPT- (continued)				001-099
D41555J		E4-3/ /		RCPT- (continued)				115-199
	22		W1163	0318	24		23-51-21	ALL
	23		W1163	0480	24		23-51-21	001-099
	23	UNUSED						115-199
	24		W1163	0315	24		23-51-21	ALL
	25		W1163	0309	24		23-51-21	ALL
	26		W1163	0306	24		23-51-21	ALL
	27		W1163	0330	24		23-51-21	ALL
	28		W1163	0320	24		23-51-21	ALL
	29		W1163	0327	24		23-51-21	ALL
	30		W1163	0325	24		23-51-21	ALL
	31		W1163	0329	24		23-51-21	ALL
	32		W1163	0323	24		23-51-21	ALL
	33		W1163	0322	24		23-51-21	ALL
	34		W1163	0321	24		23-51-21	ALL
	35		W1163	0328	24		23-51-21	ALL
	36		W1163	0324	24		23-51-21	ALL
	37		W1163	0326	24		23-51-21	ALL
	38		W1163	0319	24		23-51-21	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D41555P		E4-3/ /		PLUG-				ALL
	1		W2337	4501AD	20		23-51-21	ALL
	2		W2337	4501B	24		23-51-21	ALL
	3		W2337	4501Y	24		23-51-21	ALL
	4		W2337	4501G	24		23-51-21	ALL
	5		W2337	4501K	24		23-51-21	ALL
	6		W2337	4501L	24		23-51-21	ALL
	7		W2337	4501O	24		23-51-21	ALL
	8		W2337	4501N	24		23-51-21	ALL
	9		W2337	4501P	24		23-51-21	ALL
	10		W2337	4501W	24		23-51-21	ALL
	11		W2337	4501WR	24		23-51-21	ALL
	12		W2337	4501WB	24		23-51-21	ALL
	13		W2337	4501WY	24		23-51-21	ALL
	14		W2337	4501WG	24		23-51-21	ALL
	15		W2337	4501WK	24		23-51-21	ALL
	16		W2337	4501WL	24		23-51-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 38

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41555P		E4-3/ /		PLUG- (continued)				ALL
	17		W2337	4501WO	24		23-51-21	ALL
	18		W2337	4501WN	24		23-51-21	ALL
	19		W2337	4501AA	24		23-51-21	ALL
	20		W2337	4501	20		23-51-21	ALL
	21		W2337	4501RY	24		23-51-21	ALL
	22		W2337	4501RG	24		23-51-21	ALL
	23		W2337	4501RK	24		23-51-21	ALL
	24		W2337	4501RL	24		23-51-21	ALL
	25		W2337	4501RO	24		23-51-21	ALL
	26		W2337	4501RN	24		23-51-21	ALL
	27		W2337	4501AB	24		23-51-21	ALL
	28		W2337	4501BY	24		23-51-21	ALL
	29		W2337	4501BG	24		23-51-21	ALL
	30		W2337	4501BK	24		23-51-21	ALL
	31		W2337	4501BL	24		23-51-21	ALL
	32		W2337	4501BO	24		23-51-21	ALL
	33		W2337	4501BN	24		23-51-21	ALL
	34		W2337	4501AC	24		23-51-21	ALL
	35		W2337	4501YG	24		23-51-21	ALL
	36		W2337	4501YK	24		23-51-21	ALL
	37		W2337	4501YL	24		23-51-21	ALL
	38		W2337	4501YO	24		23-51-21	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D41557J		E004-03/ /		RCPT-				115-199
	1		W1163	0368	24		23-51-51	115-199
	2		W1163	0336	24		23-51-51	115-199
	3		W1163	0335	24		23-51-51	115-199
	4		W1163	0340	22		23-51-51	115-199
	5		W1163	0337	24		23-51-51	115-199
	6		W1163	0338	24		23-51-51	115-199
	7		W1163	0369	24		23-51-51	115-199
	8		W1163	0347	24		23-51-51	115-199
	9		W1163	0348	24		23-51-51	115-199
	10		W1163	0353	24		23-51-51	115-199
	11		W1163	0354	24		23-51-51	115-199
	12	UNUSED						115-199
	13	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 39

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41557J		E004-03/ /		RCPT- (continued)				115-199
	14		W1163	0350	24		23-51-51	115-199
	15		W1163	0351	24		23-51-51	115-199
	16		W1163	0344	24		23-51-51	115-199
	17		W1163	0345	24		23-51-51	115-199
	18		W1163	0341	24		23-51-51	115-199
	19		W1163	0342	24		23-51-51	115-199
	20		W1163	0339	22		23-51-51	115-199
	21		W1163	0349	24		23-51-51	115-199
	22		W1163	0355	24		23-51-51	115-199
	23	UNUSED						115-199
	24		W1163	0352	24		23-51-51	115-199
	25		W1163	0346	24		23-51-51	115-199
	26		W1163	0343	24		23-51-51	115-199
	27		W1163	0367	24		23-51-51	115-199
	28		W1163	0357	24		23-51-51	115-199
	29		W1163	0364	24		23-51-51	115-199
	30		W1163	0362	24		23-51-51	115-199
	31		W1163	0366	24		23-51-51	115-199
	32		W1163	0360	24		23-51-51	115-199
	33		W1163	0359	24		23-51-51	115-199
	34		W1163	0358	24		23-51-51	115-199
	35		W1163	0365	24		23-51-51	115-199
	36		W1163	0361	24		23-51-51	115-199
	37		W1163	0363	24		23-51-51	115-199
	38		W1163	0356	24		23-51-51	115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
D41557P		E004-03/ /		PLUG-				115-199
	1		W2339	4501AD	20		23-51-51	115-199
	2		W2339	4501B	24		23-51-51	115-199
	3		W2339	4501Y	24		23-51-51	115-199
	4		W2339	4501G	24		23-51-51	115-199
	5		W2339	4501K	24		23-51-51	115-199
	6		W2339	4501L	24		23-51-51	115-199
	7		W2339	4501O	24		23-51-51	115-199
	8		W2339	4501N	24		23-51-51	115-199
	9		W2339	4501P	24		23-51-51	115-199
	10		W2339	4501W	24		23-51-51	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 40

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41557P		E004-03/ /		PLUG- (continued)				115-199
	11		W2339	4501WR	24		23-51-51	115-199
	12		W2339	4501WB	24		23-51-51	115-199
	13		W2339	4501WY	24		23-51-51	115-199
	14		W2339	4501WG	24		23-51-51	115-199
	15		W2339	4501WK	24		23-51-51	115-199
	16		W2339	4501WL	24		23-51-51	115-199
	17		W2339	4501WO	24		23-51-51	115-199
	18		W2339	4501WN	24		23-51-51	115-199
	19		W2339	4501AA	24		23-51-51	115-199
	20		W2339	4501	20		23-51-51	115-199
	21		W2339	4501RY	24		23-51-51	115-199
	22		W2339	4501RG	24		23-51-51	115-199
	23		W2339	4501RK	24		23-51-51	115-199
	24		W2339	4501RL	24		23-51-51	115-199
	25		W2339	4501RO	24		23-51-51	115-199
	26		W2339	4501RN	24		23-51-51	115-199
	27		W2339	4501AB	24		23-51-51	115-199
	28		W2339	4501BY	24		23-51-51	115-199
	29		W2339	4501BG	24		23-51-51	115-199
	30		W2339	4501BK	24		23-51-51	115-199
	31		W2339	4501BL	24		23-51-51	115-199
	32		W2339	4501BO	24		23-51-51	115-199
	33		W2339	4501BN	24		23-51-51	115-199
	34		W2339	4501AC	24		23-51-51	115-199
	35		W2339	4501YG	24		23-51-51	115-199
	36		W2339	4501YK	24		23-51-51	115-199
	37		W2339	4501YL	24		23-51-51	115-199
	38		W2339	4501YO	24		23-51-51	115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
D41559J D41559J		E004-03/ / E4-3/ /		RCPT- RCPT-				001-099 115-199
	1		W1163	0404	24		23-51-41	ALL
	2		W1163	0372	24		23-51-41	ALL
	3		W1163	0371	24		23-51-41	ALL
	4		W1163	0376	24		23-51-41	ALL
	5		W1163	0373	24		23-51-41	ALL
	6		W1163	0374	24		23-51-41	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 41

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41559J		E004-03/ /		RCPT- (continued)				001-099
D41559J		E4-3/ /		RCPT- (continued)				115-199
	7		W1163	0369	24		23-51-41	001-099
	7	UNUSED						115-199
	8		W1163	0383	24		23-51-41	ALL
	9		W1163	0384	24		23-51-41	ALL
	10		W1163	0389	24		23-51-41	ALL
	11		W1163	0390	24		23-51-41	ALL
	12		W1163	0481	24		23-51-41	001-099
	12	UNUSED						115-199
	13		W1163	0482	24		23-51-41	001-099
	13	UNUSED						115-199
	14		W1163	0386	24		23-51-41	ALL
	15		W1163	0387	24		23-51-41	ALL
	16		W1163	0380	24		23-51-41	ALL
	17		W1163	0381	24		23-51-41	ALL
	18		W1163	0377	24		23-51-41	ALL
	19		W1163	0378	24		23-51-41	ALL
	20		W1163	0375	20		23-51-41	ALL
	21		W1163	0385	24		23-51-41	ALL
	22		W1163	0391	24		23-51-41	ALL
	23		W1163	0483	24		23-51-41	001-099
	23	UNUSED						115-199
	24		W1163	0388	24		23-51-41	ALL
	25		W1163	0382	24		23-51-41	ALL
	26		W1163	0379	24		23-51-41	ALL
	27		W1163	0403	24		23-51-41	ALL
	28		W1163	0393	24		23-51-41	ALL
	29		W1163	0400	24		23-51-41	ALL
	30		W1163	0398	24		23-51-41	ALL
	31		W1163	0402	24		23-51-41	ALL
	32		W1163	0396	24		23-51-41	ALL
	33		W1163	0395	24		23-51-41	ALL
	34		W1163	0394	24		23-51-41	ALL
	35		W1163	0401	24		23-51-41	ALL
	36		W1163	0397	24		23-51-41	ALL
	37		W1163	0399	24		23-51-41	ALL
	38		W1163	0392	24		23-51-41	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 42

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41559P		E4-3/ /		PLUG-				ALL
	1		W2341	4501AD	20		23-51-41	ALL
	2		W2341	4501B	24		23-51-41	ALL
	3		W2341	4501Y	24		23-51-41	ALL
	4		W2341	4501G	24		23-51-41	ALL
	5		W2341	4501K	24		23-51-41	ALL
	6		W2341	4501L	24		23-51-41	ALL
	7		W2341	4501O	24		23-51-41	ALL
	8		W2341	4501N	24		23-51-41	ALL
	9		W2341	4501P	24		23-51-41	ALL
	10		W2341	4501W	24		23-51-41	ALL
	11		W2341	4501WR	24		23-51-41	ALL
	12		W2341	4501WB	24		23-51-41	ALL
	13		W2341	4501WY	24		23-51-41	ALL
	14		W2341	4501WG	24		23-51-41	ALL
	15		W2341	4501WK	24		23-51-41	ALL
	16		W2341	4501WL	24		23-51-41	ALL
	17		W2341	4501WO	24		23-51-41	ALL
	18		W2341	4501WN	24		23-51-41	ALL
	19		W2341	4501AA	24		23-51-41	ALL
	20		W2341	4501	20		23-51-41	ALL
	21		W2341	4501RY	24		23-51-41	ALL
	22		W2341	4501RG	24		23-51-41	ALL
	23		W2341	4501RK	24		23-51-41	ALL
	24		W2341	4501RL	24		23-51-41	ALL
	25		W2341	4501RO	24		23-51-41	ALL
	26		W2341	4501RN	24		23-51-41	ALL
	27		W2341	4501AB	24		23-51-41	ALL
	28		W2341	4501BY	24		23-51-41	ALL
	29		W2341	4501BG	24		23-51-41	ALL
	30		W2341	4501BK	24		23-51-41	ALL
	31		W2341	4501BL	24		23-51-41	ALL
	32		W2341	4501BO	24		23-51-41	ALL
	33		W2341	4501BN	24		23-51-41	ALL
	34		W2341	4501AC	24		23-51-41	ALL
	35		W2341	4501YG	24		23-51-41	ALL
	36		W2341	4501YK	24		23-51-41	ALL
	37		W2341	4501YL	24		23-51-41	ALL
	38		W2341	4501YO	24		23-51-41	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 43

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41559P		E4-3/ /		PLUG- (continued)				ALL
	41	UNUSED						ALL
D41561J		E004-03/ /		RCPT-				001-099
D41561J		E4-3/ /		RCPT-				115-199
	1		W1163	0405	20		23-71-11	ALL
	2		W1163	0334	24		23-51-21	ALL
	3		W1163	0406	20		23-71-11	ALL
	4		W1163	0409	24		23-71-11	ALL
	5		W1163	0407	22		23-71-11	ALL
	6		W1163	0408	24		23-71-11	ALL
	7		W1163	0271	24		23-51-13	ALL
	8		W1163	0333	24		23-51-21	ALL
	9		W1163	2507R	24		23-71-11	ALL
	10		W1163	2508B	24		23-71-11	ALL
	11		W1163	0411	24		23-71-11	ALL
	12		W1163	0410	24		23-71-11	ALL
	13		W1163	0469	24		23-71-11	001-099
	13	UNUSED						115-199
	14	UNUSED						ALL
	15		W1163	0413	22		23-71-11	ALL
	16		W1163	0412	22		23-71-11	ALL
	17		W1163	0270	24		23-51-13	ALL
	18		W1163	0369	24		23-51-41	001-099
	18		W1163	0369	24		23-51-51	115-199
	19		W1163	0370	24		23-51-41	001-099
	19		W1163	0370	24		23-51-51	115-199
	20		W1163	2507B	24		23-71-11	ALL
	21		W1163	2508R	24		23-71-11	ALL
	22		W1163	FRAN			23-71-11	ALL
	23	UNUSED						ALL
	24		W1163	2514R	24		23-71-11	001-099
	24	UNUSED						115-199
	25		W1163	2514B	24		23-71-11	001-099
	26	UNUSED						001-099
	27	UNUSED						001-099
	28	UNUSED						001-099
	29	UNUSED						001-099
	30	UNUSED						001-099
	31	UNUSED						001-099
			W1163	2514Z			23-71-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 44

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41561J		E004-03/ /		RCPT- (continued)				001-099
D41561J		E4-3/ /		RCPT- (continued)				115-199
			W1163	2507Z			23-71-11	ALL
			W1163	2508Z			23-71-11	ALL
			W1163	FRAN			23-71-11	ALL
D41561P		E004-03/ /		PLUG-				ALL
	1		W2653	0001	20		23-71-11	ALL
	2		W2653	2504B	24		23-71-11	ALL
	3		W2653	0005	20		23-71-11	ALL
	4		W2653	0008	24		23-71-11	ALL
	5		W2653	0006	22		23-71-11	ALL
	6		W2653	0007	24		23-71-11	ALL
	7		W2653	2503R	24		23-71-11	ALL
	8		W2653	2504R	24		23-71-11	ALL
	9		W2653	2501R	24		23-71-11	ALL
	10		W2653	2502B	24		23-71-11	ALL
	11		W2653	0010	24		23-71-11	ALL
	12		W2653	0009	24		23-71-11	ALL
	13		W2653	0013	24		23-71-11	001-099
	13	UNUSED						115-199
	14	UNUSED						ALL
	15		W2653	0011	22		23-71-11	ALL
	16		W2653	0012	22		23-71-11	ALL
	17		W2653	2503B	24		23-71-11	ALL
	18		W2653	2505R	24		23-71-11	ALL
	19		W2653	2505B	24		23-71-11	ALL
	20		W2653	2501B	24		23-71-11	ALL
	21		W2653	2502R	24		23-71-11	ALL
	22		W2653	FRAB			23-71-11	ALL
	23	UNUSED						ALL
	24		W2653	2506R	24		23-71-11	001-099
	24	UNUSED						115-199
	25		W2653	2506B	24		23-71-11	001-099
	26	UNUSED						001-099
	27	UNUSED						001-099
	28	UNUSED						001-099
	29	UNUSED						001-099
	30	UNUSED						001-099
	31	UNUSED						001-099
			W2653	2506Z			23-71-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 45

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41561P		E004-03/ /		PLUG- (continued)				ALL
			W2653	2501Z			23-71-11	ALL
			W2653	2502Z			23-71-11	ALL
			W2653	2503Z			23-71-11	ALL
			W2653	2504Z			23-71-11	ALL
			W2653	2505Z			23-71-11	ALL
			W2653	FRAB			23-71-11	ALL
D41563J		E002-01/ /		RCPT-				001-099
D41563J		E2-1/ /		RCPT-				115-199
	1		W1171	5120R	24		34-61-12	ALL
	2		W1171	5120B	24		34-61-12	ALL
	3		W1171	FRAK			34-61-12	ALL
	4		W1171	5128R	24		34-61-12	ALL
	5		W1171	5128B	24		34-61-12	ALL
	6		W1171	5128Z			34-61-12	ALL
	7		W1171	5084R	24		34-61-15	ALL
	8		W1171	5084B	24		34-61-15	ALL
	9		W1171	5084Z			34-61-15	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W1171	5116R	24		34-61-23	ALL
	13		W1171	5116B	24		34-61-23	ALL
	14		W1171	5116Z			34-61-23	ALL
	15		W1171	5117R	24		34-61-23	ALL
	16		W1171	5117B	24		34-61-23	ALL
	17		W1171	5117Z			34-61-23	ALL
	18		W1171	5118R	24		34-61-23	ALL
	19		W1171	5118B	24		34-61-23	ALL
	20		W1171	5118Z			34-61-23	ALL
	21		W1171	0179	24		34-61-23	ALL
	22		W1171	0181	24		34-61-23	ALL
	23		W1171	5115R	24		34-61-23	ALL
	24		W1171	5115B	24		34-61-23	ALL
	25		W1171	5115Z			34-61-23	ALL
	26		W1171	0182	24		34-61-23	ALL
	27		W1171	0183	24		34-61-23	ALL
	28		W1171	0184	24		34-61-23	ALL
	29		W1171	0185	24		34-61-23	ALL
	30		W1171	0186	24		34-61-23	ALL
	31		W1171	0187	24		34-61-23	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 46

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41563J		E002-01/ /		RCPT- (continued)				001-099
D41563J		E2-1/ /		RCPT- (continued)				115-199
	32		W1171	0188	24		34-61-23	ALL
	33		W1171	0189	24		34-61-23	ALL
	34	UNUSED						ALL
	35		W1171	5019R	24		34-22-18	ALL
	36		W1171	5019B	24		34-22-18	ALL
	37		W1171	FRAA			34-22-18	001-099
	37		W1171	5019Z			34-22-18	115-199
	38		W1171	5010R	24		34-22-19	ALL
	39		W1171	5010B	24		34-22-19	ALL
	40		W1171	FRDH			34-22-19	ALL
	41		W1171	5013R	24		34-22-28	001-099
	41	UNUSED						115-199
	42		W1171	5013B	24		34-22-28	001-099
	42	UNUSED						115-199
	43		W1171	5013Z			34-22-28	001-099
	43	UNUSED						115-199
	44		W1171	5027Z			34-43-11	001, 003-099, 115-199
	44	UNUSED						002
	45		W1171	5027B	24		34-43-11	001, 003-099, 115-199
	45	UNUSED						002
	46		W1171	5027W	24		34-43-11	001, 003-099, 115-199
	46	UNUSED						002
	47		W1171	5134R	24		34-22-38	001-099
	47	UNUSED						115-199
	48		W1171	5134B	24		34-22-38	001-099
	48	UNUSED						115-199
	49		W1171	5134Z			34-22-38	001-099
	49	UNUSED						115-199
	50		W1171	0195	22		22-32-15	ALL
	51		W1171	5177R	24		34-22-19	ALL
	52		W1171	5177B	24		34-22-19	ALL
	53		W1171	FRKW			34-22-19	ALL
	54	UNUSED						ALL
	55		W1171	0498	24		34-22-17	ALL
			W1171	0420	20		34-22-18	001-099
			W1171	5019Z			34-22-18	001-099
			W1171	FRAA			34-22-18	001-099
			W1171	0051	20		34-22-19	ALL
			W1171	0178	20		34-61-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 47

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41563J		E002-01/ /		RCPT- (continued)				001-099
D41563J		E2-1/ /		RCPT- (continued)				115-199
			W1171	0501	20		34-22-19	ALL
			W1171	5010Z			34-22-19	ALL
			W1171	5120Z			34-61-12	ALL
			W1171	5177Z			34-22-19	ALL
			W1171	FRAK			34-61-12	ALL
			W1171	FRDH			34-22-19	ALL
			W1171	FRKW			34-22-19	ALL
D41563P		E002-01/ /		PLUG-				001-099
D41563P		E2-1/ /		PLUG-				115-199
	1		W4479	5004R	24		34-61-12	ALL
	2		W4479	5004B	24		34-61-12	ALL
	3		W4479	5004Z			34-61-12	ALL
	4		W4479	5005R	24		34-61-12	ALL
	5		W4479	5005B	24		34-61-12	ALL
	6		W4479	5005Z			34-61-12	ALL
	7		W4479	5006R	24		34-61-15	ALL
	8		W4479	5006B	24		34-61-15	ALL
	9		W4479	5006Z			34-61-15	ALL
	10		W4479	0019	22		34-61-11	001-099
	10		W4479	0019	22		SPARE	115-199
	11		W4479	0020	22		SPARE	ALL
	12		W4479	5008R	24		34-61-23	ALL
	13		W4479	5008B	24		34-61-23	ALL
	14		W4479	5008Z			34-61-23	ALL
	15		W4479	5009R	24		34-61-23	ALL
	16		W4479	5009B	24		34-61-23	ALL
	17		W4479	5009Z			34-61-23	ALL
	18		W4479	5010R	24		34-61-23	ALL
	19		W4479	5010B	24		34-61-23	ALL
	20		W4479	5010Z			34-61-23	ALL
	21		W4479	0002	24		34-61-23	ALL
	22		W4479	0003	24		34-61-23	ALL
	23		W4479	5007R	24		34-61-23	ALL
	24		W4479	5007B	24		34-61-23	ALL
	25		W4479	5007Z			34-61-23	ALL
	26		W4479	0004	24		34-61-23	ALL
	27		W4479	0005	24		34-61-23	ALL
	28		W4479	0006	24		34-61-23	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 48

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41563P		E002-01/ /		PLUG- (continued)				001-099
D41563P		E2-1/ /		PLUG- (continued)				115-199
	29		W4479	0007	24		34-61-23	ALL
	30		W4479	0008	24		34-61-23	ALL
	31		W4479	0009	24		34-61-23	ALL
	32		W4479	0010	24		34-61-23	ALL
	33		W4479	0011	24		34-61-23	ALL
	34	UNUSED						ALL
	35		W4479	5011R	24		34-22-18	ALL
	36		W4479	5011B	24		34-22-18	ALL
	37		W4479	5011Z			34-22-18	ALL
	38		W4479	5012R	24		34-22-19	ALL
	39		W4479	5012B	24		34-22-19	ALL
	40		W4479	5012Z			34-22-19	ALL
I	41		W4479	5013R	24		34-22-28	001-099
I	41		W4479	5013R	24		SPARE	115-199
I	42		W4479	5013B	24		34-22-28	001-099
I	42		W4479	5013B	24		SPARE	115-199
I	43		W4479	5013Z			34-22-28	001-099
I	43		W4479	5013Z			SPARE	115-199
	44		W4479	5015Z			34-43-11	001, 003-099, 115-199
	44		W4479	5015Z			SPARE	002
	45		W4479	5015B	24		34-43-11	001, 003-099, 115-199
	45		W4479	5015B	24		SPARE	002
	46		W4479	5015W	24		34-43-11	001, 003-099, 115-199
	46		W4479	5015W	24		SPARE	002
	47		W4479	5017R	24		34-61-12	001-099
I	47		W4479	5017R	24		SPARE	115-199
	48		W4479	5017B	24		34-61-12	001-099
I	48		W4479	5017B	24		SPARE	115-199
	49		W4479	5017Z			34-61-12	001-099
I	49		W4479	5017Z			SPARE	115-199
	50		W4479	0046	22		22-32-15	ALL
	51		W4479	5033R	24		34-22-19	ALL
	52		W4479	5033B	24		34-22-19	ALL
	53		W4479	5033Z			34-22-19	ALL
	54	UNUSED						ALL
	55		W4479	0034	24		34-22-17	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 49

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41565J D41565J		E002-02/ / E2-2/ /		RCPT- RCPT-				001-099 115-199
	1		W1173	FRAC			34-61-11	ALL
	2		W1173	5033B	24		34-61-11	ALL
	3		W1173	5033R	24		34-61-11	ALL
	4		W1173	FRAD			34-61-11	ALL
	5		W1173	5034B	24		34-61-11	ALL
	6		W1173	5034R	24		34-61-11	ALL
	7		W1173	0043	24		34-61-11	ALL
	8		W1173	FRAE			34-61-11	ALL
	9		W1173	5035R	24		34-61-11	ALL
	10		W1173	5035B	24		34-61-11	ALL
	11	UNUSED						ALL
	12		W1173	5113R	24		34-61-23	ALL
	13		W1173	5113B	24		34-61-23	ALL
	14		W1173	FRAT			34-61-23	ALL
	15		W1173	5114R	24		34-61-23	ALL
	16		W1173	5114B	24		34-61-23	ALL
	17		W1173	FRAU			34-61-23	ALL
	18		W1173	5115R	24		34-61-23	ALL
	19		W1173	5115B	24		34-61-23	ALL
	20		W1173	FRAV			34-61-23	ALL
	21		W1173	0050	22		34-61-23	ALL
	22		W1173	0051	24		34-61-23	ALL
	23		W1173	5112R	24		34-61-23	ALL
	24		W1173	5112B	24		34-61-23	ALL
	25		W1173	FRAS			34-61-23	ALL
	26		W1173	0052	24		34-61-23	ALL
	27		W1173	0053	24		34-61-23	ALL
	28		W1173	0054	24		34-61-23	ALL
	29		W1173	0055	24		34-61-23	ALL
	30		W1173	0056	24		34-61-23	ALL
	31		W1173	0057	24		34-61-23	ALL
	32		W1173	0058	24		34-61-23	ALL
	33		W1173	0059	24		34-61-23	ALL
	34	UNUSED						ALL
	35		W1173	5011R	24		34-22-28	ALL
	36		W1173	5011B	24		34-22-28	ALL
	37		W1173	FRAA			34-22-28	ALL
	38		W1173	5023R	24		34-22-29	ALL
	39		W1173	5023B	24		34-22-29	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 50

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41565J		E002-02/ /		RCPT- (continued)				001-099
D41565J		E2-2/ /		RCPT- (continued)				115-199
	40		W1173	5023Z			34-22-29	ALL
	41	UNUSED						ALL
	42		W1173	5086R	24		22-12-11	ALL
	43		W1173	5086B	24		22-12-11	ALL
	44		W1173	5086Z			22-12-11	ALL
	45		W1173	5105R	24		22-12-11	ALL
	46		W1173	5105B	24		22-12-11	ALL
	47		W1173	5105Z			22-12-11	ALL
	48		W1173	0369	22		22-15-12	001-099
	48		W1173	1154	22		22-15-12	115-199
	49	UNUSED						001-099
	49		W1173	5195R	22		34-58-21	115-199
	50	UNUSED						001-099
	50		W1173	5195B	22		34-58-21	115-199
	51	UNUSED						001-099
	51		W1173	FRBL			34-58-21	115-199
	52	UNUSED						ALL
	53	UNUSED						001-099
	53		W1173	5181R	24		34-22-28	115-199
	54	UNUSED						001-099
	54		W1173	5181B	24		34-22-28	115-199
	55	UNUSED						001-099
	55		W1173	FRLE			34-22-28	115-199
DED			W1173	1154Z			22-15-12	115-199
			W1173	0238	20		34-22-28	ALL
			W1173	0240	20		34-61-11	ALL
			W1173	0241	20		34-61-11	ALL
			W1173	0242	20		34-61-11	ALL
			W1173	0256	20		34-61-23	ALL
			W1173	0257	20		34-61-23	ALL
			W1173	0258	20		34-61-23	ALL
			W1173	0259	20		34-61-23	ALL
			W1173	5011Z			34-22-28	ALL
			W1173	5033Z			34-61-11	ALL
			W1173	5034Z			34-61-11	ALL
			W1173	5035Z			34-61-11	ALL
			W1173	5112Z			34-61-23	ALL
			W1173	5113Z			34-61-23	ALL
			W1173	5114Z			34-61-23	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 51

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41565J		E002-02/ /		RCPT- (continued)				001-099
D41565J		E2-2/ /		RCPT- (continued)				115-199
			W1173	5115Z			34-61-23	ALL
			W1173	FRAA			34-22-28	ALL
			W1173	FRAC			34-61-11	ALL
			W1173	FRAD			34-61-11	ALL
			W1173	FRAE			34-61-11	ALL
			W1173	FRAS			34-61-23	ALL
			W1173	FRAT			34-61-23	ALL
			W1173	FRAU			34-61-23	ALL
			W1173	FRAV			34-61-23	ALL
			W1173	0469	20		34-58-21	115-199
			W1173	0581	22		34-22-28	115-199
			W1173	5181Z			34-22-28	115-199
			W1173	5195Z			34-58-21	115-199
			W1173	FRBL			34-58-21	115-199
			W1173	FRLE			34-22-28	115-199
D41565P		E002-02/ /		PLUG-				001-099
D41565P		E2-2/ /		PLUG-				115-199
	1		W4479	5001Z			34-61-11	ALL
	2		W4479	5001B	24		34-61-11	ALL
	3		W4479	5001R	24		34-61-11	ALL
	4		W4479	5002Z			34-61-11	ALL
	5		W4479	5002B	24		34-61-11	ALL
	6		W4479	5002R	24		34-61-11	ALL
	7		W4479	0001	24		34-61-11	ALL
	8		W4479	5003Z			34-61-11	ALL
	9		W4479	5003R	24		34-61-11	ALL
	10		W4479	5003B	24		34-61-11	ALL
	11	UNUSED						ALL
	12		W4479	5008R	24		34-61-23	ALL
	13		W4479	5008B	24		34-61-23	ALL
	14		W4479	5008Z			34-61-23	ALL
	15		W4479	5009R	24		34-61-23	ALL
	16		W4479	5009B	24		34-61-23	ALL
	17		W4479	5009Z			34-61-23	ALL
	18		W4479	5010R	24		34-61-23	ALL
	19		W4479	5010B	24		34-61-23	ALL
	20		W4479	5010Z			34-61-23	ALL
	21		W4479	0002	24		34-61-23	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 52

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41565P		E002-02/ /		PLUG- (continued)				001-099
D41565P		E2-2/ /		PLUG- (continued)				115-199
	22		W4479	0003	24		34-61-23	ALL
	23		W4479	5007R	24		34-61-23	ALL
	24		W4479	5007B	24		34-61-23	ALL
	25		W4479	5007Z			34-61-23	ALL
	26		W4479	0004	24		34-61-23	ALL
	27		W4479	0005	24		34-61-23	ALL
	28		W4479	0006	24		34-61-23	ALL
	29		W4479	0007	24		34-61-23	ALL
	30		W4479	0008	24		34-61-23	ALL
	31		W4479	0009	24		34-61-23	ALL
	32		W4479	0010	24		34-61-23	ALL
	33		W4479	0011	24		34-61-23	ALL
	34	UNUSED						ALL
	35		W4479	5013R	24		34-22-28	001-099
	35		W4479	5013R	24		SPARE	115-199
	36		W4479	5013B	24		34-22-28	001-099
	36		W4479	5013B	24		SPARE	115-199
	37		W4479	5013Z			34-22-28	001-099
	37		W4479	5013Z			SPARE	115-199
	38		W4479	5014R	24		34-22-29	ALL
	39		W4479	5014B	24		34-22-29	ALL
	40		W4479	5014Z			34-22-29	ALL
	41		W4479	0019	22		34-61-11	001-099
	41		W4479	0019	22		SPARE	115-199
	42		W4479	5024R	24		22-12-11	ALL
	43		W4479	5024B	24		22-12-11	ALL
	44		W4479	5024Z			22-12-11	ALL
	45		W4479	5025R	24		22-12-11	ALL
	46		W4479	5025B	24		22-12-11	ALL
	47		W4479	5025Z			22-12-11	ALL
	48		W4479	0030	22		22-15-12	ALL
	49	UNUSED						001-099
	49		W4479	5046R	22		34-58-21	115-199
	50	UNUSED						001-099
	50		W4479	5046B	22		34-58-21	115-199
	51	UNUSED						001-099
	51		W4479	5046Z			34-58-21	115-199
	52	UNUSED						ALL
	53	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 53

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41565P		E002-02/ /		PLUG- (continued)				001-099
D41565P		E2-2/ /		PLUG- (continued)				115-199
	53		W4479	5186R	24		34-22-28	115-199
	54	UNUSED						001-099
	54		W4479	5186B	24		34-22-28	115-199
	55	UNUSED						001-099
	55		W4479	5186Z			34-22-28	115-199
D41567J		E002-03/ /		RCPT-				001-099
D41567J		E2-3/ /		RCPT-				115-199
	1		W1175	5070R	24		34-61-12	ALL
	2		W1175	5070B	24		34-61-12	ALL
	3		W1175	5070Z			34-61-12	ALL
	4		W1175	5023R	24		34-22-19	ALL
	5		W1175	5023B	24		34-22-19	ALL
	6		W1175	5023Z			34-22-19	ALL
	7		W1175	5001R	24		34-22-29	ALL
	8		W1175	5001B	24		34-22-29	ALL
	9		W1175	5001Z			34-22-29	ALL
	10		W1175	5018B	24		34-43-11	001, 003-099, 115-199
	10	UNUSED						002
	11		W1175	5018W	24		34-43-11	001, 003-099, 115-199
	11	UNUSED						002
	12		W1175	5018Z			34-43-11	001, 003-099, 115-199
	12	UNUSED						002
	13		W1175	5008R	24		34-22-38	001-099
	13	UNUSED						115-199
	14		W1175	5008B	24		34-22-38	001-099
	14	UNUSED						115-199
	15		W1175	FRCU			34-22-38	001-099
	15	UNUSED						115-199
	16		W1175	5015R	24		34-22-39	ALL
	17		W1175	5015B	24		34-22-39	ALL
	18		W1175	FRDB			34-22-39	ALL
	19		W1175	5016R	24		34-22-39	ALL
	20		W1175	5016B	24		34-22-39	ALL
	21		W1175	FRDC			34-22-39	ALL
	22		W1175	5017R	24		34-22-39	ALL
	23		W1175	5017B	24		34-22-39	ALL
	24		W1175	FRDD			34-22-39	ALL
	25		W1175	5003R	24		34-22-35	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 54

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41567J		E002-03/ /		RCPT- (continued)				001-099
D41567J		E2-3/ /		RCPT- (continued)				115-199
	26		W1175	5003B	24		34-22-35	ALL
	27		W1175	FRBX			34-22-35	ALL
	28		W1175	5005R	24		34-22-38	ALL
	29		W1175	5005B	24		34-22-38	ALL
	30		W1175	FRCR			34-22-38	ALL
	31		W1175	0010	24		34-22-35	ALL
	32		W1175	0011	24		34-22-35	ALL
	33		W1175	0012	24		34-22-35	ALL
	34		W1175	0007	24		34-22-35	ALL
	35		W1175	0008	24		SPARE	001-099
	35		W1175	0008	24		34-22-35	115-199
	36		W1175	0009	24		34-22-35	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39		W1175	5046R	24		22-12-11	ALL
	40		W1175	5046B	24		22-12-11	ALL
	41		W1175	FRDL			22-12-11	ALL
	42		W1175	5054R	24		22-13-11	ALL
	43		W1175	5054B	24		22-13-11	ALL
	44		W1175	5054Z			22-13-11	ALL
	45		W1175	5105Z			34-22-19	ALL
	46		W1175	0050	22		22-14-11	ALL
	47		W1175	0391	22		22-15-12	001-099
	47		W1175	1020	22		22-15-12	115-199
	48		W1175	5105R	24		34-22-19	ALL
	49		W1175	5105B	24		34-22-19	ALL
	50		W1175	0084	24		22-32-15	ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54		W1175	0619	24		34-22-37	ALL
	55	UNUSED						ALL
	DED		W1175	1020Z			22-15-12	115-199
			W1175	0063	20		34-22-38	001-099
			W1175	5008Z			34-22-38	001-099
			W1175	FRCU			34-22-38	001-099
			W1175	0030	20		34-22-39	ALL
			W1175	0031	20		34-22-39	ALL
			W1175	0032	20		34-22-39	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 55

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41567J		E002-03/ /		RCPT- (continued)				001-099
D41567J		E2-3/ /		RCPT- (continued)				115-199
			W1175	0059	20		34-22-35	ALL
			W1175	0060	20		34-22-38	ALL
			W1175	0192	20		22-12-11	ALL
			W1175	5003Z			34-22-35	ALL
			W1175	5005Z			34-22-38	ALL
			W1175	5015Z			34-22-39	ALL
			W1175	5016Z			34-22-39	ALL
			W1175	5017Z			34-22-39	ALL
			W1175	5046Z			22-12-11	ALL
			W1175	FRBX			34-22-35	ALL
			W1175	FRCR			34-22-38	ALL
			W1175	FRDB			34-22-39	ALL
			W1175	FRDC			34-22-39	ALL
			W1175	FRDD			34-22-39	ALL
			W1175	FRDL			22-12-11	ALL
D41567P		E002-03/ /		PLUG-				001-099
D41567P		E2-3/ /		PLUG-				115-199
	1		W4479	5004R	24		34-61-12	ALL
	2		W4479	5004B	24		34-61-12	ALL
	3		W4479	5004Z			34-61-12	ALL
	4		W4479	5012R	24		34-22-19	ALL
	5		W4479	5012B	24		34-22-19	ALL
	6		W4479	5012Z			34-22-19	ALL
	7		W4479	5014R	24		34-22-29	ALL
	8		W4479	5014B	24		34-22-29	ALL
	9		W4479	5014Z			34-22-29	ALL
	10		W4479	5015B	24		34-43-11	001, 003-099, 115-199
	10		W4479	5015B	24		SPARE	002
	11		W4479	5015W	24		34-43-11	001, 003-099, 115-199
	11		W4479	5015W	24		SPARE	002
	12		W4479	5015Z			34-43-11	001, 003-099, 115-199
	12		W4479	5015Z			SPARE	002
	13		W4479	5017R	24		34-61-12	001-099
	13		W4479	5017R	24		SPARE	115-199
	14		W4479	5017B	24		34-61-12	001-099
	14		W4479	5017B	24		SPARE	115-199
	15		W4479	5017Z			34-61-12	001-099
	15		W4479	5017Z			SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 56

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41567P		E002-03/ /		PLUG- (continued)				001-099
D41567P		E2-3/ /		PLUG- (continued)				115-199
	16		W4479	5018R	24		34-22-39	ALL
	17		W4479	5018B	24		34-22-39	ALL
	18		W4479	5018Z			34-22-39	ALL
	19		W4479	5019R	24		34-22-39	ALL
	20		W4479	5019B	24		34-22-39	ALL
	21		W4479	5019Z			34-22-39	ALL
	22		W4479	5020R	24		34-22-39	ALL
	23		W4479	5020B	24		34-22-39	ALL
	24		W4479	5020Z			34-22-39	ALL
	25		W4479	5023R	24		34-22-35	ALL
	26		W4479	5023B	24		34-22-35	ALL
	27		W4479	5023Z			34-22-35	ALL
	28		W4479	5016R	24		34-22-38	ALL
	29		W4479	5016B	24		34-22-38	ALL
	30		W4479	5016Z			34-22-38	ALL
	31		W4479	0016	24		34-22-35	ALL
	32		W4479	0017	24		34-22-35	ALL
	33		W4479	0018	24		34-22-35	ALL
	34		W4479	0013	24		34-22-35	ALL
	35		W4479	0014	24		34-22-35	ALL
	36		W4479	0015	24		34-22-35	ALL
	37		W4479	0020	22		SPARE	ALL
	38		W4479	0021	22		SPARE	ALL
	39		W4479	5024R	24		22-12-11	ALL
	40		W4479	5024B	24		22-12-11	ALL
	41		W4479	5024Z			22-12-11	ALL
	42		W4479	5026R	24		22-13-11	ALL
	43		W4479	5026B	24		22-13-11	ALL
	44		W4479	5026Z			22-13-11	ALL
	45		W4479	5033Z			34-22-19	ALL
	46		W4479	0028	22		22-14-11	ALL
	47		W4479	0029	22		22-15-12	ALL
	48		W4479	5033R	24		34-22-19	ALL
	49		W4479	5033B	24		34-22-19	ALL
	50		W4479	0046	22		22-32-15	ALL
	51		W4479	5038R	24		SPARE	001-099
	51		W4479	0048	22		SPARE	115-199
	52		W4479	5038B	24		SPARE	001-099
	52	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 57

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41567P		E002-03/ /		PLUG- (continued)				001-099
D41567P		E2-3/ /		PLUG- (continued)				115-199
	53		W4479	5038Z			SPARE	001-099
	53	UNUSED						115-199
	54		W4479	0054	24		34-22-37	ALL
	55	UNUSED						ALL
D41569J		E002-04/ /		RCPT				001-099
D41569J		E2-4/ /		RCPT				115-199
	1		W1177	5017R	24		34-22-18	ALL
	2		W1177	5017B	24		34-22-18	ALL
	3		W1177	5017Z			34-22-18	ALL
	4		W1177	5014R	24		34-61-12	ALL
	5		W1177	5014B	24		34-61-12	ALL
	6		W1177	5014Z			34-61-12	ALL
	7		W1177	5028R	24		34-61-15	ALL
	8		W1177	5028B	24		34-61-15	ALL
	9		W1177	5028Z			34-61-15	ALL
	10		W1177	5007B	24		34-21-11	ALL
	11		W1177	5007R	24		34-21-11	ALL
	12		W1177	5007Z			34-21-11	ALL
	13		W1177	5009B	24		34-21-11	ALL
	14		W1177	5009R	24		34-21-11	ALL
	15		W1177	FRAI			34-21-11	ALL
	16		W1177	5018R	24		22-13-11	ALL
	17		W1177	5018B	24		22-13-11	ALL
	18		W1177	5018Z			22-13-11	ALL
	19		W1177	5013R	24		22-32-11	ALL
	20		W1177	5013B	24		22-32-11	ALL
	21		W1177	5013Z			22-32-11	ALL
	22		W1177	5015R	24		34-22-38	ALL
	23		W1177	5015B	24		34-22-38	ALL
	24		W1177	5015Z			34-22-38	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W1177	0056	24		34-22-17	001-099
	28	UNUSED						115-199
	29		W1177	0057	24		34-22-37	001-099
	29	UNUSED						115-199
	30	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 58

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41569J		E002-04/ /		RCPT (continued)				001-099
D41569J		E2-4/ /		RCPT (continued)				115-199
	31	UNUSED						ALL
	32	UNUSED						115-199
	33	UNUSED						115-199
	34		W1177	0056	24		34-22-17	115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54		W1177	0057	24		34-22-37	115-199
	55	UNUSED						115-199
			W1177	0073	20		34-21-11	ALL
			W1177	5009Z			34-21-11	ALL
			W1177	FRAI			34-21-11	ALL
D41569P		E002-04/ /		PLUG-				001-099
D41569P		E2-4/ /		PLUG-				115-199
	1		W4479	5011R	24		34-22-18	ALL
	2		W4479	5011B	24		34-22-18	ALL
	3		W4479	5011Z			34-22-18	ALL
	4		W4479	5005R	24		34-61-12	ALL
	5		W4479	5005B	24		34-61-12	ALL
	6		W4479	5005Z			34-61-12	ALL
	7		W4479	5006R	24		34-61-15	ALL
	8		W4479	5006B	24		34-61-15	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 59

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41569P		E002-04/ /		PLUG- (continued)				001-099
D41569P		E2-4/ /		PLUG- (continued)				115-199
	9		W4479	5006Z			34-61-15	ALL
	10		W4479	5021B	24		34-21-11	ALL
	11		W4479	5021R	24		34-21-11	ALL
	12		W4479	5021Z			34-21-11	ALL
	13		W4479	5022B	24		34-21-11	ALL
	14		W4479	5022R	24		34-21-11	ALL
	15		W4479	5022Z			34-21-11	ALL
	16		W4479	5027R	24		22-13-11	ALL
	17		W4479	5027B	24		22-13-11	ALL
	18		W4479	5027Z			22-13-11	ALL
	19		W4479	5031R	24		22-32-11	ALL
	20		W4479	5031B	24		22-32-11	ALL
	21		W4479	5031Z			22-32-11	ALL
	22		W4479	5016R	24		34-22-38	ALL
	23		W4479	5016B	24		34-22-38	ALL
	24		W4479	5016Z			34-22-38	ALL
	25		W4479	5038R	24		SPARE	001-099
	25	UNUSED						115-199
	26		W4479	5038B	24		SPARE	001-099
	26	UNUSED						115-199
	27		W4479	5038Z			SPARE	001-099
	27	UNUSED						115-199
	28		W4479	0034	24		34-22-17	001-099
	28	UNUSED						115-199
	29		W4479	0054	24		34-22-37	001-099
	29	UNUSED						115-199
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						115-199
	33	UNUSED						115-199
	34		W4479	0034	24		34-22-17	115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 60

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41569P		E002-04/ /		PLUG- (continued)				001-099
D41569P		E2-4/ /		PLUG- (continued)				115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54		W4479	0054	24		34-22-37	115-199
	55	UNUSED						115-199
D41576J		AB0254/ /		RCPT				ALL
	1		W2316	A-CA			30-41-11	ALL
	2		W2316	A-BA			30-41-11	ALL
	3		W2316	A-BB			30-41-11	ALL
	4		W2316	A-AA			30-41-11	ALL
	5		W2316	A-AB			30-41-11	ALL
	6		W2316	A-CB			30-41-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D41576P		254/257/R040		PLUG				ALL
	1		W2388	4501K	20		30-41-11	ALL
	2		W2388	4501R	22		30-41-11	ALL
	3		W2388	4501N	22		30-41-11	ALL
	4		W2388	4501Y	22		30-41-11	ALL
	5		W2388	4501G	22		30-41-11	ALL
	6		W2388	4501O	20		30-41-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 61

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41576P		254/257/R040		PLUG (continued)				ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D41578J		AA0260/ /		RCPT				ALL
	1		W2306	A-CA			30-41-12	ALL
	2		W2306	A-CB			30-41-12	ALL
	3		W2306	A-BA			30-41-12	ALL
	4		W2306	A-BB			30-41-12	ALL
	5		W2306	A-AA			30-41-12	ALL
	6		W2306	A-AB			30-41-12	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D41578P		262/257/L040		PLUG				ALL
	1		W2386	4501K	20		30-41-12	ALL
	2		W2386	4501O	20		30-41-12	ALL
	3		W2386	4501R	22		30-41-12	ALL
	4		W2386	4501N	22		30-41-12	ALL
	5		W2386	4501Y	22		30-41-12	ALL
	6		W2386	4501G	22		30-41-12	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D41592J		E1-2/ /		RCPT				ALL
	1		W1320	2001B	12		30-41-11	ALL
	2		W1320	2001R	12		30-41-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
D41592P		E001-02/ /		PLUG				ALL
	1		W2384	2001B	12		30-41-11	ALL
	2		W2384	2001R	12		30-41-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 62

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41592P		E001-02/ /		PLUG (continued)				ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
D41594J		E1-2/ /		RCPT				ALL
	1	UNUSED						ALL
	2		W1320	2508B	22		30-41-11	ALL
	3		W1320	2508R	22		30-41-11	ALL
	4	UNUSED						001-099
	4		W1320	2509B	22		30-41-11	115-199
	5	UNUSED						001-099
	5		W1320	2509R	22		30-41-11	115-199
	6		W1320	FRAE			30-41-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
			W1320	0021	20		30-41-11	001-099
			W1320	2508Z			30-41-11	ALL
			W1320	FRAE			30-41-11	ALL
			W1320	2509Z			30-41-11	115-199
D41594P		E001-02/ /		PLUG				ALL
	1	UNUSED						ALL
	2		W2384	2501B	22		30-41-11	ALL
	3		W2384	2501R	22		30-41-11	ALL
	4	UNUSED						001-099
	4		W2384	2502B	22		30-41-11	115-199
	5	UNUSED						001-099
	5		W2384	2502R	22		30-41-11	115-199
	6		W2384	2501Z			30-41-11	001-099
	6		W2384	FRAA			30-41-11	115-199
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 63

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41594P		E001-02/ /		PLUG (continued)				ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
			W2384	2501Z			30-41-11	115-199
			W2384	2502Z			30-41-11	115-199
			W2384	FRAA			30-41-11	115-199
D41595J		E002-01/ /		RCPT-				001-099
D41595J		E2-1/ /		RCPT-				115-199
	1		W1171	5022R	24		34-22-39	ALL
	2		W1171	5022B	24		34-22-39	ALL
	3		W1171	5022Z			34-22-39	ALL
	4		W1171	5023R	24		34-22-39	ALL
	5		W1171	5023B	24		34-22-39	ALL
	6		W1171	5023Z			34-22-39	ALL
	7		W1171	5024R	24		34-22-39	ALL
	8		W1171	5024B	24		34-22-39	ALL
	9		W1171	5024Z			34-22-39	ALL
	10		W1171	5050B	24		34-21-11	ALL
	11		W1171	5050R	24		34-21-11	ALL
	12		W1171	5050Z			34-21-11	ALL
	13		W1171	5051B	24		34-21-11	ALL
	14		W1171	5051R	24		34-21-11	ALL
	15		W1171	5051Z			34-21-11	ALL
	16		W1171	5021R	24		34-22-35	ALL
	17		W1171	5021B	24		34-22-35	ALL
	18		W1171	5021Z			34-22-35	ALL
	19	UNUSED						001-099
	19		W1171	5184R	24		34-22-38	115-199
	20	UNUSED						001-099
	20		W1171	5184B	24		34-22-38	115-199
	21	UNUSED						001-099
	21		W1171	5184Z			34-22-38	115-199
	22		W1171	0037	24		34-22-35	ALL
	23		W1171	0038	24		34-22-35	ALL
	24		W1171	0039	24		34-22-35	ALL
	25		W1171	0034	24		34-22-35	ALL
	26		W1171	0035	24		34-22-35	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 64

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41595J		E002-01/ /		RCPT- (continued)				001-099
D41595J		E2-1/ /		RCPT- (continued)				115-199
	27		W1171	0036	24		34-22-35	ALL
	28	UNUSED						ALL
	29		W1171	5104R	24		22-12-11	ALL
	30		W1171	5104B	24		22-12-11	ALL
	31		W1171	5104Z			22-12-11	ALL
	32		W1171	5110R	24		22-13-11	ALL
	33		W1171	5110B	24		22-13-11	ALL
	34		W1171	5110Z			22-13-11	ALL
	35		W1171	5112R	24		22-13-11	ALL
	36		W1171	5112B	24		22-13-11	ALL
	37		W1171	FRFX			22-13-11	ALL
	38	UNUSED						ALL
	39		W1171	0101	22		22-14-11	ALL
	40		W1171	0102	22		22-14-11	ALL
	41		W1171	0103	22		22-14-11	ALL
	42		W1171	0104	22		22-14-11	ALL
I	43	UNUSED						001-099
I	43		W1171	FRPB			34-61-14	115-199
	44		W1171	0113	22		22-14-11	ALL
	45		W1171	5132R	24		22-15-11	ALL
	46		W1171	5132B	24		22-15-11	ALL
	47		W1171	FRGG			22-15-11	ALL
	48		W1171	0265	22		22-15-12	ALL
	49		W1171	0266	22		22-15-12	ALL
	50		W1171	0105	22		22-14-11	ALL
I	51		W1171	5208R	24		34-61-14	001-099
I	51		W1171	5208R	22		34-61-14	115-199
	52		W1171	5208B	24		34-61-14	001-099
	52		W1171	5208B	22		34-61-14	115-199
	53		W1171	FRPB			34-61-14	001-099
	53		W1171	5186R	24		34-22-28	115-199
	54	UNUSED						001-099
	54		W1171	5186B	24		34-22-28	115-199
	55	UNUSED						001-099
	55		W1171	5186Z			34-22-28	115-199
I			W1171	0292	20		22-15-11	ALL
I			W1171	0298	20		22-13-11	ALL
I			W1171	0705	20		34-61-14	ALL
I			W1171	5112Z			22-13-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 65

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41595J		E002-01/ /		RCPT- (continued)				001-099
D41595J		E2-1/ /		RCPT- (continued)				115-199
			W1171	5132Z			22-15-11	ALL
			W1171	5208Z			34-61-14	ALL
			W1171	FRFX			22-13-11	ALL
			W1171	FRGG			22-15-11	ALL
			W1171	FRPB			34-61-14	ALL
D41595P		E002-01/ /		PLUG-				001-099
D41595P		E2-1/ /		PLUG-				115-199
	1		W4479	5018R	24		34-22-39	ALL
	2		W4479	5018B	24		34-22-39	ALL
	3		W4479	5018Z			34-22-39	ALL
	4		W4479	5019R	24		34-22-39	ALL
	5		W4479	5019B	24		34-22-39	ALL
	6		W4479	5019Z			34-22-39	ALL
	7		W4479	5020R	24		34-22-39	ALL
	8		W4479	5020B	24		34-22-39	ALL
	9		W4479	5020Z			34-22-39	ALL
	10		W4479	5021B	24		34-21-11	ALL
	11		W4479	5021R	24		34-21-11	ALL
	12		W4479	5021Z			34-21-11	ALL
	13		W4479	5022B	24		34-21-11	ALL
	14		W4479	5022R	24		34-21-11	ALL
	15		W4479	5022Z			34-21-11	ALL
	16		W4479	5023R	24		34-22-35	ALL
	17		W4479	5023B	24		34-22-35	ALL
	18		W4479	5023Z			34-22-35	ALL
	19	UNUSED						001-099
	19		W4479	5039R	24		34-22-38	115-199
	20	UNUSED						001-099
	20		W4479	5039B	24		34-22-38	115-199
	21	UNUSED						001-099
	21		W4479	5039Z			34-22-38	115-199
	22		W4479	0016	24		34-22-35	ALL
	23		W4479	0017	24		34-22-35	ALL
	24		W4479	0018	24		34-22-35	ALL
	25		W4479	0013	24		34-22-35	ALL
	26		W4479	0014	24		34-22-35	ALL
	27		W4479	0015	24		34-22-35	ALL
	28		W4479	0021	22		SPARE	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 66

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41595P		E002-01/ /		PLUG- (continued)				001-099
D41595P		E2-1/ /		PLUG- (continued)				115-199
	29		W4479	5025R	24		22-12-11	ALL
	30		W4479	5025B	24		22-12-11	ALL
	31		W4479	5025Z			22-12-11	ALL
	32		W4479	5026R	24		22-13-11	ALL
	33		W4479	5026B	24		22-13-11	ALL
	34		W4479	5026Z			22-13-11	ALL
	35		W4479	5027R	24		22-13-11	ALL
	36		W4479	5027B	24		22-13-11	ALL
	37		W4479	5027Z			22-13-11	ALL
	38		W4479	0022	22		SPARE	ALL
	39		W4479	0023	22		22-14-11	ALL
	40		W4479	0024	22		22-14-11	ALL
	41		W4479	0025	22		22-14-11	ALL
	42		W4479	0026	22		22-14-11	ALL
I	43	UNUSED						001-099
I	43		W4479	5121Z			34-61-14	115-199
	44		W4479	0028	22		22-14-11	ALL
	45		W4479	5028R	24		22-15-11	ALL
	46		W4479	5028B	24		22-15-11	ALL
	47		W4479	5028Z			22-15-11	ALL
	48		W4479	0029	22		22-15-12	ALL
	49		W4479	0030	22		22-15-12	ALL
	50		W4479	0047	22		22-14-11	ALL
	51		W4479	5121R	24		34-61-14	001-099
I	51		W4479	5121R	22		34-61-14	115-199
	52		W4479	5121B	24		34-61-14	001-099
I	52		W4479	5121B	22		34-61-14	115-199
	53		W4479	5121Z			34-61-14	001-099
	53		W4479	5186R	24		34-22-28	115-199
	54	UNUSED						001-099
	54		W4479	5186B	24		34-22-28	115-199
	55	UNUSED						001-099
	55		W4479	5186Z			34-22-28	115-199
D41596J		E001-02/ /		RCPT				ALL
	1		W1320	0001	20		30-41-11	ALL
	2	UNUSED						001-099
	2		W1320	2503B	22		30-41-11	115-199
	3	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 67

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41596J		E001-02/ /		RCPT (continued)				ALL
	3		W1320	2503R	22		30-41-11	115-199
	4		W1320	2502B	22		30-41-11	ALL
	5		W1320	2502R	22		30-41-11	ALL
	6		W1320	FRAA			30-41-11	ALL
	7		W1320	0004	20		30-41-11	ALL
	8		W1320	2505B	22		30-41-11	ALL
	9		W1320	2505R	22		30-41-11	ALL
	10	UNUSED						001-099
	10		W1320	2506B	22		30-41-11	115-199
	11	UNUSED						001-099
	11		W1320	2506R	22		30-41-11	115-199
	12		W1320	FRAC			30-41-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
			W1320	0019	20		30-41-11	001-099
			W1320	0020	20		30-41-11	001-099
			W1320	2502Z			30-41-11	ALL
			W1320	2505Z			30-41-11	ALL
			W1320	FRAA			30-41-11	ALL
			W1320	FRAC			30-41-11	ALL
			W1320	2503Z			30-41-11	115-199
			W1320	2506Z			30-41-11	115-199
D41596P		E001-02/ /		PLUG				ALL
	1		W2388	0001	20		30-41-11	ALL
	2	UNUSED						001-099
	2		W2388	2501B	22		30-41-11	115-199
	3	UNUSED						001-099
	3		W2388	2501R	22		30-41-11	115-199
	4		W2388	2502B	22		30-41-11	ALL
	5		W2388	2502R	22		30-41-11	ALL
	6		W2388	2502Z			30-41-11	001-099
	6		W2388	FRAA			30-41-11	115-199
	7		W2388	0004	20		30-41-11	ALL
	8		W2388	2503B	22		30-41-11	ALL
	9		W2388	2503R	22		30-41-11	ALL
	10	UNUSED						001-099
	10		W2388	2504B	22		30-41-11	115-199
	11	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 68

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41596P		E001-02/ /		PLUG (continued)				ALL
	11		W2388	2504R	22		30-41-11	115-199
	12		W2388	2503Z			30-41-11	001-099
	12		W2388	FRAB			30-41-11	115-199
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
			W2388	2501Z			30-41-11	115-199
			W2388	2502Z			30-41-11	115-199
			W2388	2503Z			30-41-11	115-199
			W2388	2504Z			30-41-11	115-199
			W2388	FRAA			30-41-11	115-199
			W2388	FRAB			30-41-11	115-199
D41599J		P051-00/ /		RCPT-				115-199
	1	UNUSED						115-199
	2	UNUSED						115-199
	3	UNUSED						115-199
	4		W1451	0328	24		31-51-34	115-199
	5		W1451	5022R	24		31-51-34	115-199
	6		W1451	5022B	24		31-51-34	115-199
	7		W1451	FRAZ			31-51-34	115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
			W1451	0336	20		31-51-34	115-199
			W1451	5022Z			31-51-34	115-199
			W1451	FRAZ			31-51-34	115-199
D41599P		P051-00/ /		PLUG				115-199
	1	UNUSED						115-199
	2	UNUSED						115-199
	3	UNUSED						115-199
	4		W4475	0004	24		31-51-34	115-199
	5		W4475	5017R	24		31-51-34	115-199
	6		W4475	5017B	24		31-51-34	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 69

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41599P		P051-00/ /		PLUG (continued)				115-199
	7		W4475	5017Z			31-51-34	115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41500

Page 70 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41600J		E001-01/ /		RCPT				ALL
	1		W1310	0001	20		30-41-12	ALL
	2	UNUSED						001-099
	2		W1310	2503B	22		30-41-12	115-199
	3	UNUSED						001-099
	3		W1310	2503R	22		30-41-12	115-199
	4		W1310	2502B	22		30-41-12	ALL
	5		W1310	2502R	22		30-41-12	ALL
	6		W1310	FRAA			30-41-12	ALL
	7		W1310	0004	20		30-41-12	ALL
	8		W1310	2505B	22		30-41-12	ALL
	9		W1310	2505R	22		30-41-12	ALL
	10	UNUSED						001-099
	10		W1310	2506B	22		30-41-12	115-199
	11	UNUSED						001-099
	11		W1310	2506R	22		30-41-12	115-199
	12		W1310	FRAC			30-41-12	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
			W1310	0019	20		30-41-12	001-099
			W1310	0020	20		30-41-12	001-099
			W1310	2502Z			30-41-12	ALL
			W1310	2505Z			30-41-12	ALL
			W1310	FRAA			30-41-12	ALL
			W1310	FRAC			30-41-12	ALL
			W1310	2503Z			30-41-12	115-199
			W1310	2506Z			30-41-12	115-199
D41600P		E001-01/ /		PLUG				ALL
	1		W2386	0001	20		30-41-12	ALL
	2	UNUSED						001-099
	2		W2386	2501B	22		30-41-12	115-199
	3	UNUSED						001-099
	3		W2386	2501R	22		30-41-12	115-199
	4		W2386	2502B	22		30-41-12	ALL
	5		W2386	2502R	22		30-41-12	ALL
	6		W2386	2502Z			30-41-12	001-099
	6		W2386	FRAA			30-41-12	115-199
	7		W2386	0004	20		30-41-12	ALL
	8		W2386	2503B	22		30-41-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 1

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41600P		E001-01/ /		PLUG (continued)				ALL
	9		W2386	2503R	22		30-41-12	ALL
	10	UNUSED						001-099
	10		W2386	2504B	22		30-41-12	115-199
	11	UNUSED						001-099
	11		W2386	2504R	22		30-41-12	115-199
	12		W2386	2503Z			30-41-12	001-099
	12		W2386	FRAB			30-41-12	115-199
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
			W2386	2501Z			30-41-12	115-199
			W2386	2502Z			30-41-12	115-199
			W2386	2503Z			30-41-12	115-199
			W2386	2504Z			30-41-12	115-199
			W2386	FRAA			30-41-12	115-199
			W2386	FRAB			30-41-12	115-199
D41601J D41601J		E002-01/ / E2-1/ /		RCPT- RCPT-				001-099 115-199
I	1	UNUSED						001, 003-099
	1		W1171	0810	22		34-22-16	002
I	1		W1171	5221Z			34-61-24	115-199
	2	UNUSED						001, 003-099, 115-199
	2		W1171	0811	22		34-22-16	002
	3	UNUSED						ALL
	4		W1171	0127	24		34-61-13	ALL
	5		W1171	5072R	24		34-61-13	ALL
	6		W1171	5072B	24		34-61-13	ALL
	7		W1171	FRAU			34-61-13	ALL
	8		W1171	5073R	24		34-61-13	ALL
	9		W1171	5073B	24		34-61-13	ALL
	10		W1171	FRAV			34-61-13	ALL
	11		W1171	0131	24		34-61-13	ALL
	12		W1171	5074R	24		34-61-13	ALL
	13		W1171	5074B	24		34-61-13	ALL
	14		W1171	FRAW			34-61-13	ALL
	15		W1171	5075R	24		34-61-13	ALL
	16		W1171	5075B	24		34-61-13	ALL
	17		W1171	FRAX			34-61-13	ALL
	18		W1171	5086B	24		34-61-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41601J		E002-01/ /		RCPT- (continued)				001-099
D41601J		E2-1/ /		RCPT- (continued)				115-199
	19		W1171	5086R	24		34-61-21	ALL
	20		W1171	FRBI			34-61-21	ALL
	21		W1171	0174	24		34-61-21	ALL
	22		W1171	FRBJ			34-61-21	ALL
	23		W1171	5087B	24		34-61-21	ALL
	24		W1171	5087R	24		34-61-21	ALL
	25		W1171	5088R	24		34-61-21	ALL
	26		W1171	5088B	24		34-61-21	ALL
	27		W1171	FRBK			34-61-21	ALL
	28		W1171	5089R	24		34-61-22	ALL
	29		W1171	5089B	24		34-61-22	ALL
	30		W1171	5089Z			34-61-22	ALL
	31		W1171	5017R	24		34-22-18	001-099
I	31	UNUSED						115-199
I	32		W1171	5017B	24		34-22-18	001-099
I	32	UNUSED						115-199
I	33		W1171	FRCW			34-22-18	001-099
I	33	UNUSED						115-199
	34		W1171	0191	24		34-61-25	ALL
I	35	UNUSED						001-099
I	35		W1171	5212R	22		34-61-24	115-199
I	36	UNUSED						001-099
I	36		W1171	5212B	22		34-61-24	115-199
I	37	UNUSED						001-099
I	37		W1171	5212Z			34-61-24	115-199
	38		W1171	0040	24		34-22-37	ALL
	39		W1171	0041	24		34-22-37	ALL
	40		W1171	0042	24		34-22-37	ALL
	41		W1171	0043	24		34-22-37	ALL
I	42	UNUSED						001-099
I	42		W1171	0831	24		34-22-37	115-199
	43	UNUSED						ALL
	44		W1171	0408	22		22-14-21	001-099
	44		W1171	1019	22		22-14-21	115-199
	45		W1171	5176R	24		34-22-19	ALL
	46		W1171	5176B	24		34-22-19	ALL
	47		W1171	FRKV			34-22-19	ALL
	48		W1171	0322	24		34-22-16	ALL
	49		W1171	0323	24		34-22-16	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41601J		E002-01/ /		RCPT- (continued)				001-099
D41601J		E2-1/ /		RCPT- (continued)				115-199
	50	UNUSED						001-099
	50		W1171	5221R	22		34-61-24	115-199
	51	UNUSED						001-099
	51		W1171	5221B	22		34-61-24	115-199
	52		W1171	0495	22		34-22-16	ALL
	53		W1171	5212R	24		34-61-24	001-099
	53		W1171	5183R	24		34-22-18	115-199
	54		W1171	5212B	24		34-61-24	001-099
	54		W1171	5183B	24		34-22-18	115-199
	55		W1171	5212Z			34-61-24	001-099
	55		W1171	FRLA			34-22-18	115-199
	DED		W1171	1019Z			22-14-21	115-199
			W1171	0052	20		34-22-18	001-099
			W1171	5017Z			34-22-18	001-099
			W1171	FRCW			34-22-18	001-099
			W1171	0128	20		34-61-13	ALL
			W1171	0130	20		34-61-13	ALL
			W1171	0132	20		34-61-13	ALL
			W1171	0133	20		34-61-13	ALL
			W1171	0173	20		34-61-21	ALL
			W1171	0175	20		34-61-21	ALL
			W1171	0176	20		34-61-21	ALL
			W1171	0499	20		34-22-19	ALL
			W1171	5072Z			34-61-13	ALL
			W1171	5073Z			34-61-13	ALL
			W1171	5074Z			34-61-13	ALL
			W1171	5075Z			34-61-13	ALL
			W1171	5086Z			34-61-21	ALL
			W1171	5087Z			34-61-21	ALL
			W1171	5088Z			34-61-21	ALL
			W1171	5176Z			34-22-19	ALL
			W1171	FRAU			34-61-13	ALL
			W1171	FRAV			34-61-13	ALL
			W1171	FRAW			34-61-13	ALL
			W1171	FRAX			34-61-13	ALL
			W1171	FRBI			34-61-21	ALL
			W1171	FRBJ			34-61-21	ALL
			W1171	FRBK			34-61-21	ALL
			W1171	FRKV			34-22-19	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 4

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41601J		E002-01/ /		RCPT- (continued)				001-099
D41601J		E2-1/ /		RCPT- (continued)				115-199
			W1171	0581	22		34-22-18	115-199
			W1171	5183Z			34-22-18	115-199
			W1171	FRLA			34-22-18	115-199
D41601P		E002-01/ /		PLUG-				001-099
D41601P		E2-1/ /		PLUG-				115-199
I	1	UNUSED						001, 003-099
	1		W4481	0029	22		34-22-16	002
I	1		W4481	5023Z			34-61-24	115-199
	2	UNUSED						001, 003-099
	2		W4481	0055	22		34-22-16	002
	2		W4481	0034	24		SPARE	115-199
	3		W4481	0035	24		SPARE	ALL
	4		W4481	0001	24		34-61-13	ALL
	5		W4481	5002R	24		34-61-13	ALL
	6		W4481	5002B	24		34-61-13	ALL
	7		W4481	5002Z			34-61-13	ALL
	8		W4481	5003R	24		34-61-13	ALL
	9		W4481	5003B	24		34-61-13	ALL
	10		W4481	5003Z			34-61-13	ALL
	11		W4481	0002	24		34-61-13	ALL
	12		W4481	5004R	24		34-61-13	ALL
	13		W4481	5004B	24		34-61-13	ALL
	14		W4481	5004Z			34-61-13	ALL
	15		W4481	5005R	24		34-61-13	ALL
	16		W4481	5005B	24		34-61-13	ALL
	17		W4481	5005Z			34-61-13	ALL
	18		W4481	5006B	24		34-61-21	ALL
	19		W4481	5006R	24		34-61-21	ALL
	20		W4481	5006Z			34-61-21	ALL
	21		W4481	0003	24		34-61-21	ALL
	22		W4481	5007Z			34-61-21	ALL
	23		W4481	5007B	24		34-61-21	ALL
	24		W4481	5007R	24		34-61-21	ALL
	25		W4481	5008R	24		34-61-21	ALL
	26		W4481	5008B	24		34-61-21	ALL
	27		W4481	5008Z			34-61-21	ALL
	28		W4481	5010R	24		34-61-22	ALL
	29		W4481	5010B	24		34-61-22	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 5

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41601P		E002-01/ /		PLUG- (continued)				001-099
D41601P		E2-1/ /		PLUG- (continued)				115-199
I	30		W4481	5010Z			34-61-22	ALL
I	31		W4481	5012R	24		34-22-18	001-099
I	31		W4481	5012R	24		SPARE	115-199
I	32		W4481	5012B	24		34-22-18	001-099
I	32		W4481	5012B	24		SPARE	115-199
I	33		W4481	5012Z			34-22-18	001-099
I	33		W4481	5012Z			SPARE	115-199
	34		W4481	0004	24		34-61-25	ALL
	35		W4481	5001R	24		SPARE	001-099
I	35		W4481	5120R	22		34-61-24	115-199
I	36		W4481	5001B	24		SPARE	001-099
I	36		W4481	5120B	22		34-61-24	115-199
I	37		W4481	5001Z			SPARE	001-099
I	37		W4481	5120Z			34-61-24	115-199
	38		W4481	0015	24		34-22-37	ALL
	39		W4481	0016	24		34-22-37	ALL
	40		W4481	0017	24		34-22-37	ALL
	41		W4481	0018	24		34-22-37	ALL
	42		W4481	0019	24		SPARE	001-099
I	42		W4481	0019	24		34-22-37	115-199
	43		W4481	0023	22		SPARE	ALL
	44		W4481	0021	22		22-14-21	ALL
	45		W4481	5031R	24		34-22-19	ALL
	46		W4481	5031B	24		34-22-19	ALL
	47		W4481	5031Z			34-22-19	ALL
	48		W4481	0041	24		34-22-16	ALL
	49		W4481	0040	24		34-22-16	ALL
I	50	UNUSED						001-099
I	50		W4481	5023R	22		34-61-24	115-199
I	51	UNUSED						001-099
I	51		W4481	5023B	22		34-61-24	115-199
	52		W4481	0052	24		34-22-16	ALL
	53		W4481	5120R	24		34-61-24	001-099
	53		W4481	5186R	24		34-22-18	115-199
	54		W4481	5120B	24		34-61-24	001-099
	54		W4481	5186B	24		34-22-18	115-199
	55		W4481	5120Z			34-61-24	001-099
	55		W4481	5186Z			34-22-18	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 6

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41602J		E001-01/ /		RCPT				ALL
	1		W1310	2001B	12		30-41-12	ALL
	2		W1310	2001R	12		30-41-12	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
D41602P		E001-01/ /		PLUG				ALL
	1		W2390	2001B	12		30-41-12	ALL
	2		W2390	2001R	12		30-41-12	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
D41603J		E002-02/ /		RCPT-				001-099
D41603J		E2-2/ /		RCPT-				115-199
	1		W1173	5001R	24		34-22-18	ALL
	2		W1173	5001B	24		34-22-18	ALL
	3		W1173	5001Z			34-22-18	ALL
	4		W1173	0044	24		34-61-13	ALL
	5		W1173	5037R	24		34-61-13	ALL
	6		W1173	5037B	24		34-61-13	ALL
	7		W1173	5037Z			34-61-13	ALL
	8		W1173	5040R	24		34-61-13	ALL
	9		W1173	5040B	24		34-61-13	ALL
	10		W1173	5040Z			34-61-13	ALL
	11		W1173	0047	24		34-61-13	ALL
	12		W1173	5048R	24		34-61-13	ALL
	13		W1173	5048B	24		34-61-13	ALL
	14		W1173	5048Z			34-61-13	ALL
	15		W1173	5042R	24		34-61-13	ALL
	16		W1173	5042B	24		34-61-13	ALL
	17		W1173	5042Z			34-61-13	ALL
	18		W1173	5109B	24		34-61-21	ALL
	19		W1173	5109R	24		34-61-21	ALL
	20		W1173	5109Z			34-61-21	ALL
	21		W1173	0206	24		34-61-21	ALL
	22		W1173	5110Z			34-61-21	ALL
	23		W1173	5110B	24		34-61-21	ALL
	24		W1173	5110R	24		34-61-21	ALL
	25		W1173	5111R	24		34-61-21	ALL
	26		W1173	5111B	24		34-61-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 7

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41603J		E002-02/ /		RCPT- (continued)				001-099
D41603J		E2-2/ /		RCPT- (continued)				115-199
	27		W1173	FRAR			34-61-21	ALL
	28		W1173	5047R	24		34-61-22	ALL
	29		W1173	5047B	24		34-61-22	ALL
	30		W1173	FRAF			34-61-22	ALL
	31	UNUSED						ALL
	32		W1173	0141	24		34-22-16	ALL
	33	UNUSED						001, 003-099, 115-199
	33		W1173	0562	22		34-22-26	002
	34		W1173	0063	24		34-61-25	ALL
	35		W1173	5151R	24		34-22-19	ALL
	36		W1173	5151B	24		34-22-19	ALL
	37		W1173	5151Z			34-22-19	ALL
	38		W1173	5008R	24		34-22-34	ALL
	39		W1173	5008B	24		34-22-34	ALL
	40		W1173	5008Z			34-22-34	ALL
	41		W1173	0019	24		34-22-34	ALL
	42		W1173	0020	24		34-22-34	ALL
	43		W1173	0021	24		34-22-34	ALL
	44		W1173	0028	24		34-22-34	ALL
	45		W1173	0029	24		34-22-34	ALL
	46		W1173	0030	24		34-22-34	ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						001-099
	52		W1173	5186R	24		34-22-18	115-199
	53		W1173	0495	22		34-22-26	ALL
	54	UNUSED						001, 003-099
	54		W1173	0564	22		34-22-26	002
	54		W1173	5186B	24		34-22-18	115-199
	55	UNUSED						001-099
	55		W1173	5186Z			34-22-18	115-199
			W1173	0243	20		34-61-22	ALL
			W1173	0255	20		34-61-21	ALL
			W1173	5047Z			34-61-22	ALL
			W1173	5111Z			34-61-21	ALL
			W1173	FRAF			34-61-22	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 8

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41603J		E002-02/ /		RCPT- (continued)				001-099
D41603J		E2-2/ /		RCPT- (continued)				115-199
			W1173	FRAR			34-61-21	ALL
D41603P		E002-02/ /		PLUG-				001-099
D41603P		E2-2/ /		PLUG-				115-199
I	1		W4481	5012R	24		34-22-18	001-099
I	1		W4481	5012R	24		SPARE	115-199
I	2		W4481	5012B	24		34-22-18	001-099
I	2		W4481	5012B	24		SPARE	115-199
I	3		W4481	5012Z			34-22-18	001-099
I	3		W4481	5012Z			SPARE	115-199
	4		W4481	0001	24		34-61-13	ALL
	5		W4481	5002R	24		34-61-13	ALL
	6		W4481	5002B	24		34-61-13	ALL
	7		W4481	5002Z			34-61-13	ALL
	8		W4481	5003R	24		34-61-13	ALL
	9		W4481	5003B	24		34-61-13	ALL
	10		W4481	5003Z			34-61-13	ALL
	11		W4481	0002	24		34-61-13	ALL
	12		W4481	5004R	24		34-61-13	ALL
	13		W4481	5004B	24		34-61-13	ALL
	14		W4481	5004Z			34-61-13	ALL
	15		W4481	5005R	24		34-61-13	ALL
	16		W4481	5005B	24		34-61-13	ALL
	17		W4481	5005Z			34-61-13	ALL
	18		W4481	5006B	24		34-61-21	ALL
	19		W4481	5006R	24		34-61-21	ALL
	20		W4481	5006Z			34-61-21	ALL
	21		W4481	0003	24		34-61-21	ALL
	22		W4481	5007Z			34-61-21	ALL
	23		W4481	5007B	24		34-61-21	ALL
	24		W4481	5007R	24		34-61-21	ALL
	25		W4481	5008R	24		34-61-21	ALL
	26		W4481	5008B	24		34-61-21	ALL
	27		W4481	5008Z			34-61-21	ALL
	28		W4481	5010R	24		34-61-22	ALL
	29		W4481	5010B	24		34-61-22	ALL
	30		W4481	5010Z			34-61-22	ALL
	31		W4481	0035	24		SPARE	ALL
	32		W4481	0040	24		34-22-16	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 9

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41603P		E002-02/ /		PLUG- (continued)				001-099
D41603P		E2-2/ /		PLUG- (continued)				115-199
	33	UNUSED						001, 003-099, 115-199
	33		W4481	0056	22		34-22-26	002
	34		W4481	0004	24		34-61-25	ALL
	35		W4481	5031R	24		34-22-19	ALL
	36		W4481	5031B	24		34-22-19	ALL
	37		W4481	5031Z			34-22-19	ALL
	38		W4481	5014R	24		34-22-34	ALL
	39		W4481	5014B	24		34-22-34	ALL
	40		W4481	5014Z			34-22-34	ALL
	41		W4481	0005	24		34-22-34	ALL
	42		W4481	0006	24		34-22-34	ALL
	43		W4481	0007	24		34-22-34	ALL
	44		W4481	0008	24		34-22-34	ALL
	45		W4481	0009	24		34-22-34	ALL
	46		W4481	0010	24		34-22-34	ALL
	47		W4481	5001R	24		SPARE	001-099
	47	UNUSED						115-199
	48		W4481	5001B	24		SPARE	001-099
	48	UNUSED						115-199
	49		W4481	5001Z			SPARE	001-099
	49	UNUSED						115-199
	50		W4481	0025	24		SPARE	001-099
	50	UNUSED						115-199
	51	UNUSED						ALL
	52	UNUSED						001-099
	52		W4481	5186R	24		34-22-18	115-199
	53		W4481	0053	24		34-22-26	ALL
	54	UNUSED						001, 003-099
	54		W4481	0030	22		34-22-26	002
	54		W4481	5186B	24		34-22-18	115-199
	55	UNUSED						001-099
	55		W4481	5186Z			34-22-18	115-199
D41604J		E001-01/ /		RCPT				ALL
	1	UNUSED						ALL
	2		W1310	2508B	22		30-41-12	ALL
	3		W1310	2508R	22		30-41-12	ALL
	4	UNUSED						001-099
	4		W1310	2509B	22		30-41-12	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 10

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41604J		E001-01/ /		RCPT (continued)				ALL
	5	UNUSED						001-099
	5		W1310	2509R	22		30-41-12	115-199
	6		W1310	FRAE			30-41-12	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
			W1310	0021	20		30-41-12	001-099
			W1310	2508Z			30-41-12	ALL
			W1310	FRAE			30-41-12	ALL
			W1310	2509Z			30-41-12	115-199
D41604P		E001-01/ /		PLUG				ALL
	1	UNUSED						ALL
	2		W2390	2501B	22		30-41-12	ALL
	3		W2390	2501R	22		30-41-12	ALL
	4	UNUSED						001-099
	4		W2390	2502B	22		30-41-12	115-199
	5	UNUSED						001-099
	5		W2390	2502R	22		30-41-12	115-199
	6		W2390	2501Z			30-41-12	001-099
	6		W2390	FRAA			30-41-12	115-199
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
			W2390	2501Z			30-41-12	115-199
			W2390	2502Z			30-41-12	115-199
			W2390	FRAA			30-41-12	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 11

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41605J D41605J		E002-03/ / E2-3/ /		RCPT- RCPT-				001-099 115-199
	1		W1175	0001	24		34-22-34	ALL
	2		W1175	0002	24		34-22-34	ALL
	3		W1175	0003	24		34-22-34	ALL
	4		W1175	0004	24		34-22-34	ALL
	5		W1175	0005	24		34-22-34	ALL
	6		W1175	0006	24		34-22-34	ALL
	7		W1175	5002R	24		34-22-34	ALL
	8		W1175	5002B	24		34-22-34	ALL
	9		W1175	FRBE			34-22-34	ALL
	10		W1175	5021W	24		34-43-11	001, 003-099, 115-199
	10	UNUSED						002
	11		W1175	5021B	24		34-43-11	001, 003-099, 115-199
	11	UNUSED						002
	12		W1175	5021Z			34-43-11	001, 003-099, 115-199
	12	UNUSED						002
	13		W1175	5022Z			34-43-11	ALL
	14		W1175	5022R	24		34-43-11	ALL
	15		W1175	5022B	24		34-43-11	ALL
	16		W1175	0017	24		34-22-37	ALL
	17		W1175	0018	24		34-22-37	ALL
	18		W1175	0019	24		34-22-37	ALL
	19		W1175	0020	24		34-22-37	ALL
	20		W1175	0026	24		34-22-37	ALL
	21		W1175	0027	24		34-22-37	ALL
	22		W1175	0028	24		34-22-37	ALL
	23		W1175	0029	24		34-22-37	ALL
	24		W1175	5007R	24		34-22-38	001-099
	24	UNUSED						115-199
	25		W1175	5007B	24		34-22-38	001-099
	25	UNUSED						115-199
	26		W1175	FRCT			34-22-38	001-099
	26	UNUSED						115-199
	27		W1175	FRCW			34-22-39	ALL
	28		W1175	5010R	24		34-22-39	ALL
	29		W1175	5010B	24		34-22-39	ALL
	30		W1175	FRCX			34-22-39	ALL
	31		W1175	5011R	24		34-22-39	ALL
	32		W1175	5011B	24		34-22-39	ALL
	33		W1175	FRCY			34-22-39	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 12

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41605J		E002-03/ /		RCPT- (continued)				001-099
D41605J		E2-3/ /		RCPT- (continued)				115-199
	34		W1175	5012R	24		34-22-39	ALL
	35		W1175	5012B	24		34-22-39	ALL
	36	UNUSED						001-099
	36		W1175	0695	24		34-22-37	115-199
	37	UNUSED						ALL
	38		W1175	0023	22		34-22-37	ALL
	39	UNUSED						001, 003-099, 115-199
	39		W1175	0560	22		34-22-16	002
	40		W1175	0382	22		22-14-21	001-099
	40		W1175	1012	22		22-14-21	115-199
	41		W1175	0392	22		22-15-12	001-099
	41		W1175	1021	22		22-15-12	115-199
	42		W1175	5071R	24		22-12-21	ALL
	43		W1175	5071B	24		22-12-21	ALL
	44		W1175	FRDM			22-12-21	ALL
	45	UNUSED						001-099
	45		W1175	5183R	24		34-22-38	115-199
	46	UNUSED						001-099
	46		W1175	5183B	24		34-22-38	115-199
	47	UNUSED						001-099
	47		W1175	FRLC			34-22-38	115-199
	48		W1175	0383	22		22-14-21	001-099
	48		W1175	1013	22		22-14-21	115-199
	49	UNUSED						001-099
	49		W1175	0694	24		34-22-37	115-199
	50		W1175	0287	24		34-22-16	ALL
	51	UNUSED						001, 003-099, 115-199
	51		W1175	0580	22		34-22-26	002
	52		W1175	0609	22		34-22-16	ALL
	53		W1175	0608	22		34-22-26	ALL
	54	UNUSED						001, 003-099, 115-199
	54		W1175	0320	22		34-22-16	002
	55	UNUSED						001, 003-099, 115-199
	55		W1175	0579	22		34-22-26	002
	DED		W1175	1012Z			22-14-21	115-199
	DED		W1175	1013Z			22-14-21	115-199
	DED		W1175	1021Z			22-15-12	115-199
			W1175	0062	20		34-22-38	001-099
			W1175	5007Z			34-22-38	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 13

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41605J		E002-03/ /		RCPT- (continued)				001-099
D41605J		E2-3/ /		RCPT- (continued)				115-199
			W1175	FRCT			34-22-38	001-099
			W1175	0055	20		34-22-34	ALL
			W1175	0065	20		34-22-39	ALL
			W1175	0066	20		34-22-39	ALL
			W1175	0067	20		34-22-39	ALL
			W1175	0193	20		22-12-21	ALL
			W1175	5002Z			34-22-34	ALL
			W1175	5010Z			34-22-39	ALL
			W1175	5011Z			34-22-39	ALL
			W1175	5012Z			34-22-39	ALL
			W1175	5071Z			22-12-21	ALL
			W1175	FRBE			34-22-34	ALL
			W1175	FRCW			34-22-39	ALL
			W1175	FRCX			34-22-39	ALL
			W1175	FRCY			34-22-39	ALL
			W1175	FRDM			22-12-21	ALL
			W1175	0583	22		34-22-38	115-199
			W1175	5183Z			34-22-38	115-199
			W1175	FRLC			34-22-38	115-199
D41605P		E002-03/ /		PLUG-				001-099
D41605P		E2-3/ /		PLUG-				115-199
	1		W4481	0005	24		34-22-34	ALL
	2		W4481	0006	24		34-22-34	ALL
	3		W4481	0007	24		34-22-34	ALL
	4		W4481	0008	24		34-22-34	ALL
	5		W4481	0009	24		34-22-34	ALL
	6		W4481	0010	24		34-22-34	ALL
	7		W4481	5014R	24		34-22-34	ALL
	8		W4481	5014B	24		34-22-34	ALL
	9		W4481	5014Z			34-22-34	ALL
	10		W4481	5015W	24		34-43-11	001, 003-099, 115-199
	10		W4481	5015W	24		SPARE	002
	11		W4481	5015B	24		34-43-11	001, 003-099, 115-199
	11		W4481	5015B	24		SPARE	002
	12		W4481	5015Z			34-43-11	001, 003-099, 115-199
	12		W4481	5015Z			SPARE	002
	13		W4481	5016Z			34-43-11	ALL
	14		W4481	5016R	24		34-43-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 14

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41605P		E002-03/ /		PLUG- (continued)				001-099
D41605P		E2-3/ /		PLUG- (continued)				115-199
	15		W4481	5016B	24		34-43-11	ALL
	16		W4481	0011	24		34-22-37	ALL
	17		W4481	0012	24		34-22-37	ALL
	18		W4481	0013	24		34-22-37	ALL
	19		W4481	0014	24		34-22-37	ALL
	20		W4481	0015	24		34-22-37	ALL
	21		W4481	0016	24		34-22-37	ALL
	22		W4481	0017	24		34-22-37	ALL
	23		W4481	0018	24		34-22-37	ALL
	24		W4481	5017R	24		34-22-38	001-099
	24		W4481	5017R	24		SPARE	115-199
	25		W4481	5017B	24		34-22-38	001-099
	25		W4481	5017B	24		SPARE	115-199
	26		W4481	5017Z			34-22-38	001-099
	26		W4481	5017Z			SPARE	115-199
	27		W4481	5018Z			34-22-39	ALL
	28		W4481	5018R	24		34-22-39	ALL
	29		W4481	5018B	24		34-22-39	ALL
	30		W4481	5019Z			34-22-39	ALL
	31		W4481	5019R	24		34-22-39	ALL
	32		W4481	5019B	24		34-22-39	ALL
	33		W4481	5020Z			34-22-39	ALL
	34		W4481	5020R	24		34-22-39	ALL
	35		W4481	5020B	24		34-22-39	ALL
	36		W4481	0019	24		SPARE	001-099
	36		W4481	0019	24		34-22-37	115-199
	37		W4481	0025	24		SPARE	001-099
	37	UNUSED						115-199
	38		W4481	0054	24		34-22-37	ALL
	39	UNUSED						001, 003-099, 115-199
	39		W4481	0029	22		34-22-16	002
	40		W4481	0026	22		22-14-21	ALL
	41		W4481	0028	22		22-15-12	ALL
	42		W4481	5026R	24		22-12-21	ALL
	43		W4481	5026B	24		22-12-21	ALL
	44		W4481	5026Z			22-12-21	ALL
	45	UNUSED						001-099
	45		W4481	5039R	24		34-22-38	115-199
	46	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 15

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41605P		E002-03/ /		PLUG- (continued)				001-099
D41605P		E2-3/ /		PLUG- (continued)				115-199
	46		W4481	5039B	24		34-22-38	115-199
	47	UNUSED						001-099
	47		W4481	5039Z			34-22-38	115-199
	48		W4481	0032	22		22-14-21	ALL
	49		W4481	0038	24		SPARE	001-099
	49		W4481	0038	24		34-22-37	115-199
	50		W4481	0041	24		34-22-16	ALL
	51		W4481	0039	24		SPARE	001, 003-099, 115-199
	51		W4481	0056	22		34-22-26	002
	52		W4481	0052	24		34-22-16	ALL
	53		W4481	0053	24		34-22-26	ALL
	54	UNUSED						001, 003-099, 115-199
	54		W4481	0055	22		34-22-16	002
	55	UNUSED						001, 003-099, 115-199
	55		W4481	0030	22		34-22-26	002
	REF	JB	W4481	0039	24		SPARE	002
D41606J		E002-01/ /		RCPT-				001-099
D41606J		E2-1/ /		RCPT-				115-199
	1	UNUSED						ALL
	2		W1171	0229	22		22-11-12	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W1171	2018B	22		22-13-11	ALL
	6		W1171	2018R	22		22-13-11	ALL
	7		W1171	3009B	22		22-13-11	ALL
	8		W1171	3009R	22		22-13-11	ALL
	9		W1171	3009Y	22		22-13-11	ALL
	10		W1171	3010B	22		22-13-11	ALL
	11		W1171	3010R	22		22-13-11	ALL
	12		W1171	3010Y	22		22-13-11	ALL
	13	UNUSED						ALL
	14		W1171	2013B	22		22-11-11	ALL
	15		W1171	2013R	22		22-11-11	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W1171	0228	22		22-11-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 16

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41606J		E002-01/ /		RCPT- (continued)				001-099
D41606J		E2-1/ /		RCPT- (continued)				115-199
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D41606P		E002-01/ /		PLUG-				001-099
D41606P		E2-1/ /		PLUG-				115-199
	1		W4202	0091	20		SPARE	001-099
	1	UNUSED						115-199
	2		W4202	0042	20		22-11-12	ALL
	3		W4202	0088	20		SPARE	ALL
	4		W4202	0089	20		SPARE	ALL
	5		W4202	2008B	20		22-13-11	ALL
	6		W4202	2008R	20		22-13-11	ALL
	7		W4202	3004B	20		22-13-11	ALL
	8		W4202	3004R	20		22-13-11	ALL
	9		W4202	3004Y	20		22-13-11	ALL
	10		W4202	3003B	20		22-13-11	ALL
	11		W4202	3003R	20		22-13-11	ALL
	12		W4202	3003Y	20		22-13-11	ALL
	13	UNUSED						ALL
	14		W4202	2007B	20		22-11-11	ALL
	15		W4202	2007R	20		22-11-11	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W4202	0043	20		22-11-12	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D41610J		E003-04/ /		RCPT				ALL
	1	UNUSED						001-099
	1		W1280	0402	22		29-11-12	115-199
	2		W1280	0201	22		32-09-11	ALL
	3		W1280	0202	22		32-09-11	001-099
	3		W1280	0195	22		32-09-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 17

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41610J		E003-04/ /		RCPT (continued)				ALL
	4		W1280	0203	22		32-09-11	ALL
	5		W1280	0204	22		32-09-11	ALL
	6		W1280	0205	22		32-09-11	ALL
	7		W1280	0304	22		32-09-11	ALL
	8		W1280	0207	22		32-09-11	ALL
	9		W1280	0306	22		32-09-11	ALL
	10		W1280	0303	22		32-09-11	ALL
	11		W1280	2093R	22		32-09-11	ALL
	12		W1280	2093B	22		32-09-11	ALL
	13	UNUSED						001-099
	13		W1280	0401	22		29-11-12	115-199
	14		W1280	0346	22		32-09-11	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W1280	0328	22		27-11-11	ALL
	18		W1280	0329	22		27-11-11	ALL
	19		W1280	2048B	24		32-61-22	ALL
	20		W1280	2048R	24		32-61-22	ALL
	21		W1280	2501R	22		28-21-21	ALL
	22		W1280	2501B	22		28-21-21	ALL
	23		W1280	2501Z			28-21-21	ALL
	24		W1280	2076R	24		32-61-13	ALL
	25		W1280	2076B	24		32-61-13	ALL
	26		W1280	2081R	24		32-61-13	ALL
	27		W1280	2081B	24		32-61-13	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						001-099
	30		W1280	0194	22		32-09-11	115-199
	31		W1280	0506	24		28-41-14	ALL
	32		W1280	0103	24		28-41-14	ALL
	33		W1280	0099	22		28-41-11	001-099
	33		W1280	0099	24		28-41-11	115-199
	34		W1280	0105	22		28-41-11	001-099
	34		W1280	0105	24		28-41-11	115-199
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 18

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41610J		E003-04/ /		RCPT (continued)				ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44		W1280	0480	24		29-33-11	001-099
	44	UNUSED						115-199
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D41610P		E003-04/ /		PLUG-				001-099
D41610P		E3-4/ /		PLUG-				115-199
	1		W4202	0010	20		SPARE	001-099
	1		W4202	0010	20		29-11-12	115-199
	2		W4202	0011	22		32-09-11	001-099
	2		W4202	0011	20		32-09-11	115-199
	3		W4202	0012	22		32-09-11	001-099
	3		W4202	0012	20		32-09-11	115-199
	4		W4202	0013	22		32-09-11	001-099
	4		W4202	0013	20		32-09-11	115-199
	5		W4202	0014	22		32-09-11	001-099
	5		W4202	0014	20		32-09-11	115-199
	6		W4202	0015	22		32-09-11	ALL
	7		W4202	0016	22		32-09-11	001-099
	7		W4202	0016	20		32-09-11	115-199
	8		W4202	0017	22		32-09-11	001-099
	8		W4202	0017	20		32-09-11	115-199
	9		W4202	0018	20		32-09-11	ALL
	10		W4202	0019	22		32-09-11	001-099
	10		W4202	0019	20		32-09-11	115-199
	11		W4202	2001R	20		32-09-11	ALL
	12		W4202	2001B	20		32-09-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 19

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41610P		E003-04/ /		PLUG- (continued)				001-099
D41610P		E3-4/ /		PLUG- (continued)				115-199
	13		W4202	0002	22		SPARE	001-099
	13		W4202	0002	22		29-11-12	115-199
	14		W4202	0028	22		32-09-11	001-099
	14		W4202	0028	20		32-09-11	115-199
	15		W4202	2005R	22		SPARE	001-099
	15		W4202	2005R	22		28-41-21	115-199
	16		W4202	2005B	22		SPARE	001-099
	16		W4202	2005B	22		28-41-21	115-199
	17		W4202	0023	22		27-11-11	ALL
	18		W4202	0024	22		27-11-11	ALL
	19		W4202	2004B	24		32-61-22	ALL
	20		W4202	2004R	24		32-61-22	ALL
	21		W4202	2501R	22		28-21-21	ALL
	22		W4202	2501B	22		28-21-21	ALL
	23		W4202	2501Z			28-21-21	ALL
	24		W4202	2002R	22		32-61-13	ALL
	25		W4202	2002B	22		32-61-13	ALL
	26		W4202	2003R	22		32-61-13	ALL
	27		W4202	2003B	22		32-61-13	ALL
	28		W4202	2012B	24		SPARE	001-099
	28		W4202	2012B	22		SPARE	115-199
	29		W4202	2012R	24		SPARE	001-099
	29		W4202	2012R	22		SPARE	115-199
	30		W4202	0029	20		SPARE	001-099
	30		W4202	0029	20		32-09-11	115-199
	31		W4202	0031	24		28-41-14	001-099
	31		W4202	0031	20		28-41-14	115-199
	32		W4202	0032	24		28-41-14	001-099
	32		W4202	0032	20		28-41-14	115-199
	33		W4202	0033	24		28-41-11	001-099
	33		W4202	0033	20		28-41-11	115-199
	34		W4202	0034	24		28-41-11	001-099
	34		W4202	0034	20		28-41-11	115-199
	35		W4202	0088	20		SPARE	ALL
	36		W4202	0089	20		SPARE	ALL
	37		W4202	0090	20		SPARE	ALL
	38	UNUSED						001-099
	38		W4202	0091	20		SPARE	115-199
	39		W4202	0092	20		SPARE	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 20

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41610P		E003-04/ /		PLUG- (continued)				001-099
D41610P		E3-4/ /		PLUG- (continued)				115-199
	40		W4202	0093	20		SPARE	ALL
	41		W4202	2006R	22		SPARE	001-099
	41		W4202	2006R	22		28-41-21	115-199
	42		W4202	2006B	22		SPARE	001-099
	42		W4202	2006B	22		28-41-21	115-199
	43		W4202	0094	20		SPARE	ALL
	44		W4202	0050	24		29-33-11	001-099
	44	UNUSED						115-199
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D41612J		P36/ /		RCPT				ALL
	1		W1260	0111	20		27-62-11	ALL
	2		W1260	5732	22		32-09-11	ALL
	3		W1260	5925	22		32-09-11	001-099
	3		W1260	5751	22		32-09-11	115-199
	4		W1260	5727	22		32-09-11	ALL
	5		W1260	5760	22		32-09-11	001-099
	5		W1260	5758	22		32-09-11	115-199
	6		W1260	0233	24		27-58-11	001-009
	6		W1260	0232	22		27-58-11	010-099, 115-199
	7		W1260	0231	24		27-58-11	001-009
	7		W1260	0230	22		27-58-11	010-099, 115-199
	8		W1260	0029	24		27-58-11	001-099
	8		W1260	0029	22		27-58-11	115-199
	9		W1260	0788	22		32-09-11	ALL
	10		W1260	8518	24		29-33-11	001-099
	10	UNUSED						115-199
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 21

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41612J		P36/ /		RCPT (continued)				ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W1260	0069	20		33-41-11	ALL
	21		W1260	5667	22		27-23-11	ALL
	22		W1260	5664	22		27-23-11	ALL
	23		W1260	0224	22		27-51-51	001-099
	23		W1260	0224	20		27-51-51	115-199
	24		W1260	0882	22		32-09-11	001-099
	24		W1260	5750	22		32-09-11	115-199
	25		W1260	5728	22		32-09-11	ALL
	26		W1260	5719	22		32-09-11	ALL
	27	UNUSED						001-099
	27		W1260	2007R	24		SPARE	115-199
	28		W1260	5895	22		32-09-11	ALL
	29	UNUSED						ALL
	30		W1260	0244	24		27-58-11	ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						001-099
	45		W1260	2007B	24		SPARE	115-199
	46		W1260	0223	22		27-51-51	ALL
	47	UNUSED						ALL
	48	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 22

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41612J		P36/ /		RCPT (continued)				ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52		W1260	5696	24		30-31-11	ALL
	53		W1260	5697	24		30-31-11	ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D41612P		P036-00/ /		PLUG-				001-099
D41612P		P36/ /		PLUG-				115-199
	1		W4202	0007	20		27-62-11	ALL
	2		W4202	0011	22		32-09-11	001-099
	2		W4202	0011	20		32-09-11	115-199
	3		W4202	0012	22		32-09-11	001-099
	3		W4202	0012	20		32-09-11	115-199
	4		W4202	0013	22		32-09-11	001-099
	4		W4202	0013	20		32-09-11	115-199
	5		W4202	0014	22		32-09-11	001-099
	5		W4202	0014	20		32-09-11	115-199
	6		W4202	0078	22		27-58-11	ALL
	7		W4202	0079	22		27-58-11	ALL
	8		W4202	0080	22		27-58-11	ALL
	9		W4202	0019	22		32-09-11	001-099
	9		W4202	0019	20		32-09-11	115-199
	10		W4202	0050	24		29-33-11	001-099
	10	UNUSED						115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W4202	0008	20		SPARE	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W4202	0084	20		33-41-11	ALL
	21		W4202	0045	22		27-23-11	ALL
	22		W4202	0044	22		27-23-11	ALL
	23		W4202	0077	22		27-51-51	001-099
	23		W4202	0077	20		27-51-51	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 23

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41612P		P036-00/ /		PLUG- (continued)				001-099
D41612P		P36/ /		PLUG- (continued)				115-199
	24		W4202	0015	22		32-09-11	ALL
	25		W4202	0016	22		32-09-11	001-099
	25		W4202	0016	20		32-09-11	115-199
	26		W4202	0017	22		32-09-11	001-099
	26		W4202	0017	20		32-09-11	115-199
	27		W4202	2012R	24		SPARE	001-099
	27		W4202	2012R	22		SPARE	115-199
	28		W4202	0028	22		32-09-11	001-099
	28		W4202	0028	20		32-09-11	115-199
	29	UNUSED						ALL
	30		W4202	0070	24		27-58-11	ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45		W4202	2012B	24		SPARE	001-099
	45		W4202	2012B	22		SPARE	115-199
	46		W4202	0068	22		27-51-51	ALL
	47		W4202	0069	22		SPARE	ALL
	48		W4202	0095	22		SPARE	ALL
	49		W4202	0096	22		SPARE	ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52		W4202	0052	24		30-31-11	001-099
	52		W4202	0052	22		30-31-11	115-199
	53		W4202	0053	24		30-31-11	001-099
	53		W4202	0053	22		30-31-11	115-199
	54	UNUSED						ALL
	55	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 24

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41614J		E003-04/ /		RCPT				ALL
	1	UNUSED						ALL
	2		W1280	0099	22		28-41-11	001-099
	2		W1280	0099	24		28-41-11	115-199
	3	UNUSED						ALL
	4		W1280	0105	22		28-41-11	001-099
	4		W1280	0105	24		28-41-11	115-199
	5		W1280	FRVB			28-41-11	001-099
	5		W1280	FRVA			28-41-11	115-199
	6		W1280	2508B	22		28-41-11	001-099
	6		W1280	2508B	24		28-41-11	115-199
	7		W1280	2508R	22		28-41-11	001-099
	7		W1280	2508R	24		28-41-11	115-199
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1280	2509B	22		28-41-11	ALL
	11		W1280	2509R	22		28-41-11	ALL
	12		W1280	FRUB			28-41-11	ALL
	13	UNUSED						ALL
	14	UNUSED						001-099
	14		W1280	2088B	24		28-21-22	115-199
	15	UNUSED						001-099
	15		W1280	2088R	24		28-21-22	115-199
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	18	W1280	2029B	18		28-43-11	ALL
	27	18	W1280	2029R	18		28-43-11	ALL
	28		W1280	0250	20		28-21-11	001-099
	28		W1280	0250	22		28-21-11	115-199
	29		W1280	0265	22		28-21-21	001-099
	29		W1280	0265	20		28-21-21	115-199
	30		W1280	3011R	24		28-21-22	001-099
	30		W1280	4006R	24		28-21-22	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 25

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41614J		E003-04/ /		RCPT (continued)				ALL
	31		W1280	3011B	24		28-21-22	001-099
	31		W1280	4006B	24		28-21-22	115-199
	32		W1280	2108B	24		28-21-22	001-099
	32	UNUSED						115-199
	33		W1280	3011Y	24		28-21-22	001-099
	33		W1280	4006Y	24		28-21-22	115-199
	34		W1280	0181	22		28-21-22	ALL
	35		W1280	0182	22		28-21-22	ALL
	36		W1280	0222	22		28-21-22	ALL
	37		W1280	0219	22		28-21-22	ALL
	38		W1280	0595	24		28-21-22	001-099
	38		W1280	4001G	24		28-21-22	115-199
	39		W1280	3013R	24		28-21-22	001-099
	39		W1280	4001R	24		28-21-22	115-199
	40		W1280	3013Y	24		28-21-22	001-099
	40		W1280	4001Y	24		28-21-22	115-199
	41		W1280	3001B	24		28-21-22	ALL
	42		W1280	3001R	24		28-21-22	ALL
	43		W1280	3001Y	24		28-21-22	ALL
	44		W1280	0210	22		32-09-12	ALL
	45		W1280	0211	22		32-09-12	ALL
	46		W1280	0212	22		32-09-12	ALL
	47		W1280	0213	22		32-09-12	ALL
	48		W1280	0309	22		32-09-12	ALL
	49		W1280	0215	22		32-09-12	ALL
	50		W1280	2108R	24		28-21-22	001-099
	50	UNUSED						115-199
	51		W1280	0217	22		32-09-12	ALL
	52		W1280	0311	22		32-09-12	ALL
	53		W1280	2095B	22		32-09-12	ALL
	54		W1280	2095R	22		32-09-12	ALL
	55		W1280	3013B	24		28-21-22	001-099
	55		W1280	4001B	24		28-21-22	115-199
	CAP	Y	W1280	4006G	24		28-21-22	115-199
			W1280	FRUA			28-41-11	001-099
			W1280	FRVB			28-41-11	001-099
			W1280	2508Z			28-41-11	ALL
			W1280	2509Z			28-41-11	ALL
			W1280	FRUB			28-41-11	ALL
			W1280	FRVA			28-41-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 26

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41614J		E003-04/ /		RCPT (continued)				ALL
			W1280	0613	20		28-41-11	115-199
			W1280	0616	20		28-41-11	115-199
D41614P D41614P		E003-04/ / E3-4/ /		PLUG PLUG				001-099 115-199
	1	UNUSED						001-099
	1		W4216	0041	20		28-41-11	115-199
	2		W4216	0042	20		28-41-11	ALL
	3	UNUSED						001-099
	3		W4216	0043	20		SPARE	115-199
	4		W4216	0044	20		28-41-11	ALL
	5		W4216	2506Z			28-41-11	ALL
	6		W4216	2506B	20		28-41-11	ALL
	7		W4216	2506R	20		28-41-11	ALL
	8	UNUSED						001-099
	8		W4216	2007B	20		SPARE	115-199
	9	UNUSED						001-099
	9		W4216	2007R	20		SPARE	115-199
	10		W4216	2508B	20		28-41-11	ALL
	11		W4216	2508R	20		28-41-11	ALL
	12		W4216	2508Z			28-41-11	ALL
	13	UNUSED						001-099
	13		W4216	2009R	20		SPARE	115-199
	14	UNUSED						001-099
	14		W4216	2004B	20		28-21-22	115-199
	15	UNUSED						001-099
	15		W4216	2004R	20		28-21-22	115-199
	16	UNUSED						001-099
	16		W4216	2005B	20		SPARE	115-199
	17	UNUSED						001-099
	17		W4216	2005R	20		SPARE	115-199
	18	UNUSED						001-099
	18		W4216	2014R	22		28-41-31	115-199
	19	UNUSED						001-099
	19		W4216	2014B	22		28-41-31	115-199
	20	UNUSED						001-099
	20		W4216	2015R	22		28-41-31	115-199
	21	UNUSED						001-099
	21		W4216	2015B	22		28-41-31	115-199
	22	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 27

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41614P		E003-04/ /		PLUG (continued)				001-099
D41614P		E3-4/ /		PLUG (continued)				115-199
	22		W4216	2016R	22		28-41-41	115-199
	23	UNUSED						001-099
	23		W4216	2016B	22		28-41-41	115-199
	24	UNUSED						001-099
	24		W4216	2017R	22		28-41-41	115-199
	25	UNUSED						001-099
	25		W4216	2017B	22		28-41-41	115-199
	26	18	W4216	2018B	18		28-43-11	ALL
	27	18	W4216	2018R	18		28-43-11	ALL
	28		W4216	0038	20		28-21-11	001-099
	28		W4216	0038	22		28-21-11	115-199
	29		W4216	0051	22		28-21-21	001-099
	29		W4216	0051	20		28-21-21	115-199
	30		W4216	3004R	20		28-21-22	001-099
	30		W4216	4002B	22		28-21-22	115-199
	31		W4216	3004B	20		28-21-22	001-099
	31		W4216	4002G	22		28-21-22	115-199
	32		W4216	2019B	20		28-21-22	001-099
	32		W4216	4002R	22		SPARE	115-199
	33		W4216	3004Y	20		28-21-22	001-099
	33		W4216	4002Y	22		28-21-22	115-199
	34		W4216	0034	20		28-21-22	ALL
	35		W4216	0035	20		28-21-22	ALL
	36		W4216	0036	20		28-21-22	ALL
	37		W4216	0033	20		28-21-22	ALL
	38		W4216	4003G	22		28-21-22	001-099
	38		W4216	4003G	20		28-21-22	115-199
	39		W4216	4003R	22		28-21-22	001-099
	39		W4216	4003R	20		28-21-22	115-199
	40		W4216	4003Y	22		28-21-22	001-099
	40		W4216	4003Y	20		28-21-22	115-199
	41		W4216	3003B	22		28-21-22	001-099
	41		W4216	3003B	20		28-21-22	115-199
	42		W4216	3003R	22		28-21-22	001-099
	42		W4216	3003R	20		28-21-22	115-199
	43		W4216	3003Y	22		28-21-22	001-099
	43		W4216	3003Y	20		28-21-22	115-199
	44		W4216	0002	22		32-09-12	ALL
	45		W4216	0003	22		32-09-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 28

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41614P		E003-04/ /		PLUG (continued)				001-099
D41614P		E3-4/ /		PLUG (continued)				115-199
	46		W4216	0004	22		32-09-12	ALL
	47		W4216	0005	22		32-09-12	ALL
	48		W4216	0006	22		32-09-12	ALL
	49		W4216	0007	22		32-09-12	ALL
	50		W4216	2019R	20		28-21-22	001-099
	50		W4216	0008	20		SPARE	115-199
	51		W4216	0009	22		32-09-12	ALL
	52		W4216	0029	20		32-09-12	ALL
	53		W4216	2013B	20		32-09-12	ALL
	54		W4216	2013R	20		32-09-12	ALL
	55		W4216	4003B	22		28-21-22	001-099
	55		W4216	4003B	20		28-21-22	115-199
	CAP	Y	W4216	0045	20		SPARE	115-199
	CAP	Y	W4216	2006B	20		SPARE	115-199
	CAP	Y	W4216	2006R	20		SPARE	115-199
	CAP	Y	W4216	2008B	20		SPARE	115-199
	CAP	Y	W4216	2008R	20		SPARE	115-199
	CAP	Y	W4216	2009B	20		SPARE	115-199
D41616J		P37/ /		RCPT				ALL
	1		W1270	5757	24		30-31-12	ALL
	2		W1270	0234	22		32-09-12	ALL
	3		W1270	0590	22		76-11-21	ALL
	4		W1270	5747	24		30-31-12	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1270	6202	22		76-11-21	ALL
	8		W1270	0818	20		74-31-21	001-099
	8		W1270	0820	20		74-31-21	115-199
	9		W1270	0126	20		27-62-11	ALL
	10	UNUSED						001-099
	10		W1270	0819	20		74-31-21	115-199
	11		W1270	5881	22		32-09-12	ALL
	12		W1270	5876	22		32-09-12	ALL
	13		W1270	5880	22		32-09-12	ALL
	14		W1270	5833	22		32-09-12	001-099
	14		W1270	5835	22		32-09-12	115-199
	15		W1270	5849	22		32-09-12	ALL
	16		W1270	5878	22		32-09-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 29

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41616J		P37/ /		RCPT (continued)				ALL
	17	UNUSED						ALL
	18		W1270	5869	22		32-09-12	ALL
	19		W1270	5893	22		32-61-12	ALL
	20		W1270	5894	22		32-61-12	ALL
	21		W1270	5901	22		32-61-12	ALL
	22	UNUSED						ALL
	23		W1270	5905	22		32-61-12	ALL
	24		W1270	8503	22		27-23-11	001-099
	24		W1270	5703	22		27-23-11	115-199
	25		W1270	8504	22		27-23-11	001-099
	25		W1270	5704	22		27-23-11	115-199
	26		W1270	5705	22		27-23-11	ALL
	27	UNUSED						ALL
	28		W1270	5759	24		30-31-12	ALL
	29		W1270	5746	24		30-31-12	ALL
	30		W1270	0110	22		29-21-32	ALL
	31		W1270	0111	22		29-21-32	ALL
	32		W1270	5948	24		30-32-11	ALL
	33		W1270	0129	20		27-62-11	ALL
	34		W1270	0362	20		27-62-11	ALL
	35		W1270	6032	22		32-09-12	ALL
	36		W1270	6030	22		32-09-12	ALL
	37		W1270	6005	22		32-09-12	ALL
	38		W1270	0553	22		29-22-11	ALL
	39		W1270	6444	20		28-21-11	001-099
	39	UNUSED						115-199
	40		W1270	6445	20		28-21-11	001-099
	40	UNUSED						115-199
	41	UNUSED						ALL
D41616P		P037-00/ /		PLUG				001-099
D41616P		P37/ /		PLUG				115-199
	1		W4216	0075	24		30-31-12	ALL
	2		W4216	0093	22		32-09-12	ALL
	3		W4216	0010	22		76-11-21	ALL
	4		W4216	0076	24		30-31-12	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W4216	0118	22		76-11-21	001-099
	7		W4216	0031	22		76-11-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 30

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41616P		P037-00/ /		PLUG (continued)				001-099
D41616P		P37/ /		PLUG (continued)				115-199
	8	UNUSED	W4216	0086	22		74-31-21	ALL
	9		W4216	0046	20		27-62-11	ALL
	10							001-099
	10		W4216	0088	22		74-31-21	115-199
	11		W4216	0002	22		32-09-12	ALL
	12		W4216	0003	22		32-09-12	ALL
	13		W4216	0004	22		32-09-12	ALL
	14		W4216	0005	22		32-09-12	ALL
	15	UNUSED	W4216	0006	22		32-09-12	ALL
	16		W4216	0007	22		32-09-12	ALL
	17							001-099
	17		W4216	0008	20		SPARE	115-199
	18		W4216	0009	22		32-09-12	ALL
	19		W4216	0011	22		32-61-12	ALL
	20		W4216	0012	22		32-61-12	ALL
	21		W4216	0013	22		32-61-12	ALL
	22		W4216	0014	22		SPARE	ALL
	23		W4216	0015	22		32-61-12	ALL
	24		W4216	0060	22		27-23-11	001-099
	24		W4216	0016	22		27-23-11	115-199
	25		W4216	0059	22		27-23-11	001-099
	25		W4216	0017	22		27-23-11	115-199
	26		W4216	0061	22		27-23-11	ALL
	27		W4216	0079	22		SPARE	ALL
	28		W4216	0080	24		30-31-12	ALL
	29		W4216	0081	24		30-31-12	ALL
	30		W4216	0098	22		29-21-32	ALL
	31		W4216	0097	22		29-21-32	ALL
	32		W4216	0084	24		30-32-11	ALL
	33		W4216	0019	20		27-62-11	ALL
	34		W4216	0020	20		27-62-11	ALL
	35		W4216	0090	22		32-09-12	ALL
	36		W4216	0091	22		32-09-12	ALL
	37		W4216	0092	22		32-09-12	ALL
	38		W4216	0113	22		29-22-11	ALL
	39		W4216	0089	20		28-21-11	001-099
	39		W4216	0082	24		SPARE	115-199
	40		W4216	0072	20		28-21-11	001-099
	40		W4216	0083	24		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 31

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41616P		P037-00/ /		PLUG (continued)				001-099
D41616P		P37/ /		PLUG (continued)				115-199
	41	UNUSED						ALL
D41618J		E003-04/ /		RCPT				ALL
	1	UNUSED						001-099
	1		W1280	0358	20		33-45-11	115-199
	2		W1280	0026	24		52-71-11	001-099
	2	UNUSED						115-199
	3		W1280	0025	24		52-71-11	001-099
	3	UNUSED						115-199
	4		W1280	0024	24		52-71-11	001-099
	4	UNUSED						115-199
	5		W1280	0023	24		52-71-11	001-099
	5	UNUSED						115-199
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W1280	0358	20		33-45-11	001-099
	8	UNUSED						115-199
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W1280	5009B	24		28-41-11	ALL
	12		W1280	5009R	24		28-41-11	ALL
	13		W1280	FRRB			28-41-11	001-099
	13		W1280	FRAD			28-41-11	115-199
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W1280	0169	24		28-41-13	ALL
	19		W1280	0168	24		28-41-11	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W1280	0028	24		52-71-11	ALL
	23	UNUSED						ALL
	24		W1280	0027	24		52-71-11	ALL
	25		W1280	0026	24		52-71-11	115-199
	26		W1280	0025	24		52-71-11	115-199
	27		W1280	0024	24		52-71-11	115-199
	28		W1280	0023	24		52-71-11	115-199
	29	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 32

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41618J		E003-04/ /		RCPT (continued)				ALL
	30	UNUSED						115-199
	31	UNUSED						115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
			W1280	FRR A			28-41-11	001-099
			W1280	FRR B			28-41-11	001-099
			W1280	5009Z			28-41-11	ALL
			W1280	0434	20		28-41-11	115-199
			W1280	FRAD			28-41-11	115-199
D41618P		E003-04/ /		PLUG				001-099
D41618P		E3-4/ /		PLUG				115-199
	1	UNUSED						001-099
	1		W4204	0002	20		33-45-11	115-199
	2		W4204	0005	24		52-71-11	001-099
	2		W4204	0048	22		SPARE	115-199
	3		W4204	0006	24		52-71-11	001-099
	3		W4204	0049	22		SPARE	115-199
	4		W4204	0007	24		52-71-11	001-099
	4		W4204	0050	22		SPARE	115-199
	5		W4204	0008	24		52-71-11	001-099
	5		W4204	0051	22		SPARE	115-199
	6		W4204	0052	22		SPARE	ALL
	7	UNUSED						ALL
	8		W4204	0002	20		33-45-11	001-099
	8	UNUSED						115-199
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W4204	5001B	24		28-41-11	ALL
	12		W4204	5001R	24		28-41-11	ALL
	13		W4204	5001Z			28-41-11	ALL
	14	UNUSED						ALL
	15		W4204	0184	22		SPARE	001-099
	15	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 33

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41618P		E003-04/ /		PLUG (continued)				001-099
D41618P		E3-4/ /		PLUG (continued)				115-199
	16		W4204	0183	22		SPARE	001-099
	16	UNUSED						115-199
	17	UNUSED						ALL
	18		W4204	0016	24		28-41-13	001-099
	18		W4204	0016	22		28-41-13	115-199
	19		W4204	0017	24		28-41-11	001-099
	19		W4204	0017	22		28-41-11	115-199
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W4204	0003	24		52-71-11	ALL
	23	UNUSED						ALL
	24		W4204	0004	24		52-71-11	ALL
	25		W4204	0005	24		52-71-11	115-199
	26		W4204	0006	24		52-71-11	115-199
	27		W4204	0007	24		52-71-11	115-199
	28		W4204	0008	24		52-71-11	115-199
	29		W4204	0009	22		SPARE	115-199
	30		W4204	0010	22		SPARE	115-199
	31		W4204	0011	22		SPARE	115-199
	32		W4204	0012	22		SPARE	115-199
	33		W4204	0013	22		SPARE	115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36		W4204	0184	22		SPARE	115-199
	37		W4204	0183	22		SPARE	115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
D41620J		E003-04/ /		RCPT				ALL
	1	UNUSED						001-099
	1		W1280	0280	24		28-41-31	115-199
	2	UNUSED						001-099
	2		W1280	0281	24		28-41-31	115-199
	3	UNUSED						001-099
	3		W1280	0282	24		28-41-31	115-199
	4	UNUSED						001-099
	4		W1280	0283	24		28-41-31	115-199
	5	UNUSED						001-099
	5		W1280	0284	24		28-41-31	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 34

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41620J		E003-04/ /		RCPT (continued)				ALL
	6	UNUSED						001-099
	6		W1280	0285	24		28-41-31	115-199
	7	UNUSED						001-099
	7		W1280	0286	24		28-41-31	115-199
	8	UNUSED						001-099
	8		W1280	0287	24		28-41-31	115-199
	9	UNUSED						001-099
	9		W1280	0288	24		28-41-31	115-199
	10	UNUSED						001-099
	10		W1280	0289	24		28-41-31	115-199
	11	UNUSED						001-099
	11		W1280	0290	24		28-41-31	115-199
	12	UNUSED						001-099
	12		W1280	0292	24		28-41-41	115-199
	13	UNUSED						001-099
	13		W1280	0293	24		28-41-41	115-199
	14	UNUSED						001-099
	14		W1280	0294	24		28-41-41	115-199
	15		W1280	0305	22		32-09-11	ALL
	16	UNUSED						001-099
	16		W1280	0296	24		28-41-41	115-199
	17	UNUSED						001-099
	17		W1280	0291	24		28-41-41	115-199
	18		W1280	3010B	24		28-41-14	ALL
	19		W1280	3010R	24		28-41-14	ALL
	20		W1280	0357	20		33-45-11	ALL
	21		W1280	0303	22		32-09-11	001-099
	21	UNUSED						115-199
	22	UNUSED						001-099
	22		W1280	0364	20		28-41-31	115-199
	23	UNUSED						ALL
	24	UNUSED						001-099
	24		W1280	0402	22		29-11-12	115-199
	25	UNUSED						001-099
	25		W1280	0401	22		29-11-12	115-199
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						001-099
	29		W1280	0365	20		28-41-41	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 35

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41620J		E003-04/ /		RCPT (continued)				ALL
	30		W1280	3010Y	24		28-41-14	ALL
	31	UNUSED						ALL
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35		W1280	0303	22		32-09-11	115-199
	36		W1280	0315	24		28-41-31	115-199
	37		W1280	0316	24		28-41-31	115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
D41620P		E003-04/ /		PLUG				ALL
	1	UNUSED						001-099
	1		W4218	4501W	20		28-41-31	115-199
	2	UNUSED						001-099
	2		W4218	4501RY	20		28-41-31	115-199
	3	UNUSED						001-099
	3		W4218	4501RK	20		28-41-31	115-199
	4	UNUSED						001-099
	4		W4218	4501RG	20		28-41-31	115-199
	5	UNUSED						001-099
	5		W4218	4501RB	20		28-41-31	115-199
	6	UNUSED						001-099
	6		W4218	4501WK	20		28-41-31	115-199
	7	UNUSED						001-099
	7		W4218	4501RV	20		28-41-31	115-199
	8	UNUSED						001-099
	8		W4218	4501WN	20		28-41-31	115-199
	9	UNUSED						001-099
	9		W4218	4501WR	20		28-41-31	115-199
	10	UNUSED						001-099
	10		W4218	4501WY	20		28-41-31	115-199
	11	UNUSED						001-099
	11		W4218	4501WO	20		28-41-31	115-199
	12	UNUSED						001-099
	12		W4218	4502R	20		28-41-41	115-199
	13	UNUSED						001-099
	13		W4218	4502G	20		28-41-41	115-199
	14	UNUSED						001-099
	14		W4218	4502Y	20		28-41-41	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 36

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41620P		E003-04/ /		PLUG (continued)				ALL
	15		W4218	0039	22		32-09-11	ALL
	16	UNUSED						001-099
	16		W4218	4502K	20		28-41-41	115-199
	17	UNUSED						001-099
	17		W4218	4502B	20		28-41-41	115-199
	18		W4218	3002B	24		28-41-14	ALL
	19		W4218	3002R	24		28-41-14	ALL
	20		W4218	0006	20		33-45-11	ALL
	21		W4218	0040	22		32-09-11	001-099
	21		W4218	0043	20		SPARE	115-199
	22	UNUSED						001-099
	22		W4218	4501Z			28-41-31	115-199
	23	UNUSED						001-099
	23		W4218	0044	20		SPARE	115-199
	24	UNUSED						001-099
	24		W4218	0009	24		29-11-12	115-199
	25	UNUSED						001-099
	25		W4218	0010	24		29-11-12	115-199
	26	UNUSED						001-099
	26		W4218	0011	24		SPARE	115-199
	27	UNUSED						001-099
	27		W4218	0012	22		SPARE	115-199
	28	UNUSED						001-099
	28		W4218	0013	22		SPARE	115-199
	29	UNUSED						001-099
	29		W4218	4502Z			28-41-41	115-199
	30		W4218	3002Y	24		28-41-14	ALL
	31		W4218	0359	24		SPARE	001-099
	31	UNUSED						115-199
	32	UNUSED						115-199
	33		W4218	0321	22		SPARE	115-199
	34		W4218	0322	22		SPARE	115-199
	35		W4218	0040	22		32-09-11	115-199
	36		W4218	4501WG	20		28-41-31	115-199
	37		W4218	4501WB	20		28-41-31	115-199
	38		W4218	4501AA	20		SPARE	115-199
	39		W4218	4501WV	20		SPARE	115-199
CAP	Y		W4218	2006B	22		SPARE	115-199
CAP	Y		W4218	2006R	22		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 37

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41622J		E002-03/ /		RCPT				001-099
D41622J		E2-3/ /		RCPT				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1175	3006R	22		22-13-31	ALL
	8		W1175	3006B	22		22-13-31	ALL
	9		W1175	3006Y	22		22-13-31	ALL
	10		W1175	3007R	22		22-13-31	ALL
	11		W1175	3007B	22		22-13-31	ALL
	12		W1175	3007Y	22		22-13-31	ALL
	13		W1175	0311	20		29-35-11	ALL
	14		W1175	0312	20		29-35-11	ALL
	15		W1175	2021B	22		22-11-31	ALL
	16		W1175	2021R	22		22-11-31	ALL
	17		W1175	2025R	22		22-13-31	ALL
	18		W1175	2025B	22		22-13-31	ALL
	19		W1175	2027R	20		29-32-41	ALL
	20		W1175	2027B	20		29-32-41	ALL
	21	UNUSED						ALL
	22		W1175	0190	22		22-11-32	ALL
	23	UNUSED						ALL
	24		W1175	0189	22		22-11-32	ALL
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
D41622P		E002-03/ /		PLUG				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 38

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41622P		E002-03/ /		PLUG (continued)				ALL
	7		W4226	3001R	22		22-13-31	ALL
	8		W4226	3001B	22		22-13-31	ALL
	9		W4226	3001Y	22		22-13-31	ALL
	10		W4226	3002R	22		22-13-31	ALL
	11		W4226	3002B	22		22-13-31	ALL
	12		W4226	3002Y	22		22-13-31	ALL
	13		W4226	0009	20		29-35-11	ALL
	14		W4226	0010	20		29-35-11	ALL
	15		W4226	2001B	20		22-11-31	ALL
	16		W4226	2001R	20		22-11-31	ALL
	17		W4226	2002R	22		22-13-31	ALL
	18		W4226	2002B	22		22-13-31	ALL
	19		W4226	2003R	20		29-32-41	ALL
	20		W4226	2003B	20		29-32-41	ALL
	21		W4226	0011	20		SPARE	001-099
	21	UNUSED						115-199
	22		W4226	0001	20		22-11-32	ALL
	23		W4226	0012	20		SPARE	001-099
	23	UNUSED						115-199
	24		W4226	0002	20		22-11-32	ALL
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28		W4226	0011	20		SPARE	115-199
	29		W4226	0012	20		SPARE	115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
D41624J		E002-02/ /		RCPT-				001-099
D41624J		E2-2/ /		RCPT-				115-199
	1	UNUSED						ALL
	2		W1173	0102	22		22-11-22	ALL
	3		W1173	2009B	22		22-11-21	ALL
	4		W1173	2009R	22		22-11-21	ALL
	5		W1173	2018B	22		22-13-21	ALL
	6		W1173	2018R	22		22-13-21	ALL
	7		W1173	3011B	22		22-13-21	ALL
	8		W1173	3011R	22		22-13-21	ALL
	9		W1173	3011Y	22		22-13-21	ALL
	10		W1173	3010B	22		22-13-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 39

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41624J		E002-02/ /		RCPT- (continued)				001-099
D41624J		E2-2/ /		RCPT- (continued)				115-199
	11		W1173	3010R	22		22-13-21	ALL
	12		W1173	3010Y	22		22-13-21	ALL
	13		W1173	0219	22		27-62-11	001-099
	13		W1173	0219	20		27-62-11	115-199
	14		W1173	0220	22		27-62-11	001-099
	14		W1173	0220	20		27-62-11	115-199
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W1173	0101	22		22-11-22	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D41624P		E002-02/ /		PLUG				001-099
D41624P		E2-2/ /		PLUG				115-199
	1	UNUSED						ALL
	2		W4208	0024	20		22-11-22	ALL
	3		W4208	2003B	20		22-11-21	ALL
	4		W4208	2003R	20		22-11-21	ALL
	5		W4208	2004B	20		22-13-21	ALL
	6		W4208	2004R	20		22-13-21	ALL
	7		W4208	3001B	20		22-13-21	ALL
	8		W4208	3001R	20		22-13-21	ALL
	9		W4208	3001Y	20		22-13-21	ALL
	10		W4208	3002B	20		22-13-21	ALL
	11		W4208	3002R	20		22-13-21	ALL
	12		W4208	3002Y	20		22-13-21	ALL
	13		W4208	0035	22		27-62-11	001-099
	13		W4208	0035	20		27-62-11	115-199
	14		W4208	0036	22		27-62-11	001-099
	14		W4208	0036	20		27-62-11	115-199
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 40

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41624P		E002-02/ /		PLUG (continued)				001-099
D41624P		E2-2/ /		PLUG (continued)				115-199
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W4208	0023	20		22-11-22	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D41626J		P33/ /		RCPT				ALL
	1		W1230	0228	22		29-11-12	001-099
	1	UNUSED						115-199
	2		W1230	0227	22		29-11-12	001-099
	2	UNUSED						115-199
	3	UNUSED						ALL
	4		W1230	0447	20		33-42-11	001-099
	4		W1234	0048	20		33-42-11	115-199
	5		W1230	0448	20		33-42-11	001-099
	5		W1234	0049	20		33-42-11	115-199
	6	UNUSED						ALL
	7		W1230	0456	20		33-43-11	001-099
	7		W1234	0059	20		33-43-11	115-199
	8		W1230	0457	20		33-44-21	001-099
	8		W1234	0060	20		33-44-21	115-199
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						001-099
	12		W1230	0230	22		29-11-12	001-099
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
	16	UNUSED						001-099
	17	UNUSED						001-099
	18	UNUSED						001-099
	19	UNUSED						001-099
	20	UNUSED						001-099
	21	UNUSED						001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 41

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41626P		P033-00/ /		PLUG-				ALL
	1		W4204	0222	22		29-11-12	001-099
	1	UNUSED						115-199
	2		W4204	0202	22		29-11-12	001-099
	2	UNUSED						115-199
	3	UNUSED						ALL
	4		W4204	0034	20		33-42-11	ALL
	5		W4204	0035	20		33-42-11	ALL
	6	UNUSED						ALL
	7		W4204	0037	20		33-43-11	ALL
	8		W4204	0038	20		33-44-21	ALL
	9	UNUSED						001-099
	9		W4204	0048	22		SPARE	115-199
	10	UNUSED						001-099
	10		W4204	0049	22		SPARE	115-199
	11	UNUSED						001-099
	12		W4204	0203	22		29-11-12	001-099
	13		W4204	0011	22		SPARE	001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
	16	UNUSED						001-099
	17	UNUSED						001-099
	18	UNUSED						001-099
	19	UNUSED						001-099
	20	UNUSED						001-099
	21	UNUSED						001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
D41628J		E4-2/ /		RCPT-				ALL
	1		W1275	0887	24		28-41-13	ALL
	1		W1275	0888	24		28-41-13	ALL
	2		W1275	0883	24		28-41-11	ALL
	2		W1275	0885	24		28-41-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W1275	0023	24		52-71-11	ALL
	5		W1275	0049	24		52-71-11	ALL
	6		W1275	0025	24		52-71-11	ALL
	6		W1275	0050	24		52-71-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 42

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41628J		E4-2/ /		RCPT- (continued)				ALL
	7		W1275	0027	24		52-71-11	ALL
	7		W1275	0051	24		52-71-11	ALL
	8		W1275	0029	24		52-71-11	ALL
	8		W1275	0052	24		52-71-11	ALL
	9		W1275	0030	24		52-71-11	ALL
	10		W1275	0032	24		52-71-11	ALL
	11	UNUSED						ALL
	12		W1275	5513	24		27-23-11	001-099
	12		W1275	5514	24		27-23-11	001-099
	12	UNUSED						115-199
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W1275	6044	22		29-11-12	001-099
	15	UNUSED						115-199
	16	UNUSED						ALL
	17		W1275	0979	24		27-28-11	ALL
	18		W1275	0989	22		27-38-11	ALL
	19		W1275	2045R	24		27-38-11	ALL
	20		W1275	2045B	24		27-38-11	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W1275	0978	24		27-28-11	001-099
	23		W1275	0978	22		27-28-11	115-199
	24		W1275	2039B	24		27-28-11	ALL
	25		W1275	2039R	24		27-28-11	ALL
	26		W1275	6155	22		27-28-13	001-099
	26		W1275	6155	24		27-28-13	115-199
	27		W1275	6156	22		27-28-13	001-099
	27		W1275	6156	24		27-28-13	115-199
	28		W1275	2043B	24		27-28-13	ALL
	29		W1275	2043R	24		27-28-13	ALL
	30	UNUSED						ALL
	31		W1275	6144	24		27-23-11	ALL
	31		W1275	6145	24		27-23-11	ALL
	32		W1275	6141	24		27-23-11	ALL
	32		W1275	6142	24		27-23-11	ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 43

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41628J		E4-2/ /		RCPT- (continued)				ALL
	37	UNUSED						001-099
	37		W1275	5513	24		27-23-11	115-199
	37		W1275	5514	24		27-23-11	115-199
	38		W1275	6026	22		29-11-12	001-099
	38	UNUSED						115-199
	39		W1275	6027	22		29-11-12	001-099
	39	UNUSED						115-199
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47		W1275	0987	24		27-38-11	ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50		W1275	5028B	24		28-41-11	ALL
	51		W1275	5028R	24		28-41-11	ALL
	52		W1275	5028Z			28-41-11	ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D41628P		E004-02/ /		PLUG				001-099
D41628P		E4-2/ /		PLUG				115-199
	1		W4204	0016	24		28-41-13	001-099
	1		W4204	0016	22		28-41-13	115-199
	2		W4204	0017	24		28-41-11	001-099
	2		W4204	0017	22		28-41-11	115-199
	3		W4204	0184	22		SPARE	ALL
	4		W4204	0183	22		SPARE	ALL
	5		W4204	0003	24		52-71-11	ALL
	6		W4204	0004	24		52-71-11	ALL
	7		W4204	0005	24		52-71-11	ALL
	8		W4204	0006	24		52-71-11	ALL
	9		W4204	0007	24		52-71-11	ALL
	10		W4204	0008	24		52-71-11	ALL
	11	UNUSED						001-099
	11		W4204	0009	22		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 44

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41628P		E004-02/ /		PLUG (continued)				001-099
D41628P		E4-2/ /		PLUG (continued)				115-199
	12		W4204	0139	22		27-23-11	001-099
	12		W4204	0010	22		SPARE	115-199
	13	UNUSED						001-099
	13		W4204	0011	22		SPARE	115-199
	14	UNUSED						001-099
	14		W4204	0012	22		SPARE	115-199
	15		W4204	0222	22		29-11-12	001-099
	15		W4204	0013	22		SPARE	115-199
	16		W4204	1004	22		27-28-11	ALL
	17		W4204	1004Z			27-28-11	ALL
	18		W4204	0001	22		27-38-11	ALL
	19		W4204	2001R	22		27-38-11	ALL
	20		W4204	2001B	22		27-38-11	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W4204	0028	24		27-28-11	001-099
	23		W4204	0028	22		27-28-11	115-199
	24		W4204	2003B	24		27-28-11	001-099
	24		W4204	2003B	22		27-28-11	115-199
	25		W4204	2003R	24		27-28-11	001-099
	25		W4204	2003R	22		27-28-11	115-199
	26		W4204	0031	22		27-28-13	ALL
	27		W4204	0032	22		27-28-13	ALL
	28		W4204	2002B	24		27-28-13	001-099
	28		W4204	2002B	22		27-28-13	115-199
	29		W4204	2002R	24		27-28-13	001-099
	29		W4204	2002R	22		27-28-13	115-199
	30	UNUSED						ALL
	31		W4204	0023	22		27-23-11	ALL
	32		W4204	0024	22		27-23-11	ALL
	33		W4204	0044	22		SPARE	ALL
	34		W4204	0045	22		SPARE	ALL
	35		W4204	0046	22		SPARE	ALL
	36		W4204	0047	22		SPARE	ALL
	37	UNUSED						001-099
	37		W4204	0139	22		27-23-11	115-199
	38		W4204	0203	22		29-11-12	001-099
	38	UNUSED						115-199
	39		W4204	0202	22		29-11-12	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 45

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41628P		E004-02/ /		PLUG (continued)				001-099
D41628P		E4-2/ /		PLUG (continued)				115-199
	39	UNUSED						115-199
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46		W4204	1025	22		27-38-11	ALL
	47		W4204	1025Z			27-38-11	ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50		W4204	5001B	24		28-41-11	ALL
	51		W4204	5001R	24		28-41-11	ALL
	52		W4204	5001Z			28-41-11	ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D41630J		E5-1/ /		RCPT				ALL
	1		W1282	4010B	24		27-51-41	ALL
	2		W1282	4010G	24		27-51-41	ALL
	3		W1282	4010R	24		27-51-41	ALL
	4		W1282	4010Y	24		27-51-41	ALL
	5		W1282	2019B	24		27-51-41	ALL
	6		W1282	2019R	24		27-51-41	ALL
	7		W1282	0291	22		27-81-31	ALL
	8		W1282	0207	22		27-23-21	ALL
	9		W1282	0208	22		27-23-21	ALL
	10		W1282	0209	22		27-23-21	ALL
	11		W1282	0210	22		27-23-21	ALL
	12	UNUSED						ALL
	13	UNUSED						001-099
	13		W1282	0013	22		27-23-11	115-199
	14	UNUSED						001-099
	14		W1282	0014	22		27-23-11	115-199
	15	UNUSED						001-099
	15		W1282	0015	22		27-23-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 46

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41630P		E005-01/ /		PLUG				001-099
D41630P		E5-1/ /		PLUG				115-199
	1		W4204	4001B	22		27-51-41	ALL
	2		W4204	4001G	22		27-51-41	ALL
	3		W4204	4001R	22		27-51-41	ALL
	4		W4204	4001Y	22		27-51-41	ALL
	5		W4204	2005B	22		27-51-41	ALL
	6		W4204	2005R	22		27-51-41	ALL
	7		W4204	0039	22		27-81-31	ALL
	8		W4204	0040	22		27-23-21	ALL
	9		W4204	0041	22		27-23-21	ALL
	10		W4204	0042	22		27-23-21	ALL
	11		W4204	0043	22		27-23-21	ALL
	12		W4204	0052	22		SPARE	ALL
	13	UNUSED						001-099
	13		W4204	0140	20		27-23-11	115-199
	14	UNUSED						001-099
	14		W4204	0141	20		27-23-11	115-199
	15	UNUSED						001-099
	15		W4204	0142	22		27-23-11	115-199
D41632J		E4-2/ /		RCPT-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1275	5685	24		32-09-11	ALL
	3		W1275	5686	24		32-09-11	ALL
	4		W1275	5688	24		32-09-11	ALL
	4		W1275	5689	24		32-09-11	ALL
	5		W1275	0986	24		27-38-11	ALL
	6	UNUSED						ALL
	7		W1275	6138	24		27-23-11	ALL
	7		W1275	6139	24		27-23-11	ALL
	8		W1275	6147	24		27-23-11	ALL
	8		W1275	6148	24		27-23-11	ALL
	9	UNUSED						001-099
	9		W1275	6308	22		29-11-12	115-199
	10	UNUSED						001-099
	10		W1275	6044	22		29-11-12	115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 47

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41632J		E4-2/ /		RCPT- (continued)				ALL
	14		W1275	0985	22		27-38-11	ALL
	15		W1275	2044B	24		27-38-11	ALL
	16		W1275	2044R	24		27-38-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 48

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41632J		E4-2/ /		RCPT- (continued)				ALL
	54	UNUSED						115-199
	55	UNUSED						115-199
D41632P		E004-02/ /		PLUG				ALL
	1	UNUSED						001-099
	1		W4218	0321	22		SPARE	115-199
	2	UNUSED						001-099
	2		W4218	0322	22		SPARE	115-199
	3		W4218	0039	22		32-09-11	ALL
	4		W4218	0040	22		32-09-11	ALL
	5		W4218	1025Z			27-38-11	ALL
	6		W4218	1025	22		27-38-11	ALL
	7		W4218	0007	22		27-23-11	ALL
	8		W4218	0008	22		27-23-11	ALL
	9	UNUSED						001-099
	9		W4218	0009	24		29-11-12	115-199
	10	UNUSED						001-099
	10		W4218	0010	24		29-11-12	115-199
	11		W4218	0011	22		SPARE	001-099
	11		W4218	0011	24		SPARE	115-199
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W4218	0001	22		27-38-11	ALL
	15		W4218	2001B	22		27-38-11	ALL
	16		W4218	2001R	22		27-38-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W4218	0358	24		SPARE	001-099
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 49

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41632P		E004-02/ /		PLUG (continued)				ALL
	31	UNUSED						115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D41634J		E003-04/ /		RCPT				ALL
	1		W1280	2502B	22		28-21-21	ALL
	2		W1280	2502R	22		28-21-21	ALL
	3		W1280	2502Z			28-21-21	ALL
	4		W1280	0066	20		32-12-12	ALL
	5		W1280	0067	20		32-12-12	ALL
	6		W1280	2092B	22		32-09-11	ALL
	7		W1280	2092R	22		32-09-11	ALL
	8		W1280	2507B	24		23-41-11	001-099
	8	UNUSED						115-199
	9		W1280	2507R	24		23-41-11	001-099
	9	UNUSED						115-199
	10		W1280	2084B	24		32-61-13	ALL
	11		W1280	2084R	24		32-61-13	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 50

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41634J		E003-04/ /		RCPT (continued)				ALL
	12		W1280	2087B	24		32-61-13	ALL
	13		W1280	2087R	24		32-61-13	ALL
	14		W1280	0223	22		32-09-12	ALL
	15		W1280	0224	22		32-09-12	ALL
	16		W1280	2507Z			23-41-11	001-099
	16	UNUSED						115-199
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W1280	2047R	24		32-61-22	ALL
	22	UNUSED						ALL
	23		W1280	2047B	24		32-61-22	ALL
	24	UNUSED						ALL
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28		W1280	3502B	24		23-41-11	115-199
	29		W1280	3502R	24		23-41-11	115-199
	30		W1280	3502Y	24		23-41-11	115-199
	31		W1280	3502Z			23-41-11	115-199
D41634P		E003-04/ /		PLUG				001-099
D41634P		E3-4/ /		PLUG				115-199
	1		W4212	2502B	22		28-21-21	ALL
	2		W4212	2502R	22		28-21-21	ALL
	3		W4212	2502Z			28-21-21	ALL
	4		W4212	0001	20		32-12-12	ALL
	5		W4212	0002	20		32-12-12	ALL
	6		W4212	2001B	20		32-09-11	ALL
	7		W4212	2001R	20		32-09-11	ALL
	8		W4212	2503B	20		23-41-12	001-099
	8		W4212	0015	22		SPARE	115-199
	9		W4212	2503R	20		23-41-12	001-099
	9		W4212	0016	22		SPARE	115-199
	10		W4212	2003B	22		32-61-13	ALL
	11		W4212	2003R	22		32-61-13	ALL
	12		W4212	2004B	22		32-61-13	ALL
	13		W4212	2004R	22		32-61-13	ALL
	14		W4212	0013	22		32-09-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 51

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41634P		E003-04/ /		PLUG (continued)				001-099
D41634P		E3-4/ /		PLUG (continued)				115-199
	15		W4212	0012	22		32-09-12	ALL
	16		W4212	2503Z			23-41-12	001-099
	16		W4212	0014	22		SPARE	115-199
	17	UNUSED						ALL
	18		W4212	0016	22		SPARE	001-099
	18	UNUSED						115-199
	19		W4212	0014	22		SPARE	001-099
	19	UNUSED						115-199
	20	UNUSED						ALL
	21		W4212	2002R	24		32-61-22	ALL
	22	UNUSED						ALL
	23		W4212	2002B	24		32-61-22	ALL
	24	UNUSED						ALL
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28		W4212	3501B	20		23-41-12	115-199
	29		W4212	3501R	20		23-41-12	115-199
	30		W4212	3501Y	20		23-41-12	115-199
	31		W4212	3501Z			23-41-12	115-199
D41636J		E003-04/ /		RCPT				ALL
	1		W1280	2096B	22		32-09-12	ALL
	2		W1280	2096R	22		32-09-12	ALL
	3		W1280	2044R	24		32-61-22	ALL
	4		W1280	2044B	24		32-61-22	ALL
	5		W1280	2041R	24		32-61-13	ALL
	6		W1280	2041B	24		32-61-13	ALL
	7		W1280	2042R	24		32-61-13	ALL
	8		W1280	2042B	24		32-61-13	ALL
	9	UNUSED						001-099
	9		W1280	0368	20		28-41-21	115-199
	10	UNUSED						ALL
	11	UNUSED						001-099
	11		W1280	0269	24		28-41-21	115-199
	12	UNUSED						001-099
	12		W1280	0270	24		28-41-21	115-199
	13	UNUSED						001-099
	13		W1280	0271	24		28-41-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 52

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41636J		E003-04/ /		RCPT (continued)				ALL
	14	UNUSED						001-099
	14		W1280	0272	24		28-41-21	115-199
	15	UNUSED						001-099
	15		W1280	0273	24		28-41-21	115-199
	16	UNUSED						001-099
	16		W1280	0274	24		28-41-21	115-199
	17	UNUSED						001-099
	17		W1280	0275	24		28-41-21	115-199
	18	UNUSED						001-099
	18		W1280	0276	24		28-41-21	115-199
	19	UNUSED						001-099
	19		W1280	0277	24		28-41-21	115-199
	20	UNUSED						001-099
	20		W1280	0278	24		28-41-21	115-199
	21	UNUSED						001-099
	21		W1280	0279	24		28-41-21	115-199
	22	UNUSED						001-099
	22		W1280	0317	24		28-41-21	115-199
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						001-099
	25		W1280	0318	24		28-41-21	115-199
	26	UNUSED						001-099
	26		W1280	0297	24		28-41-41	115-199
	27	UNUSED						001-099
	27		W1280	0298	24		28-41-41	115-199
	28	UNUSED						001-099
	28		W1280	0299	24		28-41-41	115-199
	29	UNUSED						001-099
	29		W1280	0300	24		28-41-41	115-199
	30	UNUSED						001-099
	30		W1280	0301	24		28-41-41	115-199
	31	UNUSED						001-099
	31		W1280	0369	20		28-41-41	115-199
D41636P		E003-04/ /		PLUG				001-099
D41636P		E3-4/ /		PLUG				115-199
	1		W4206	2001B	20		32-09-12	ALL
	2		W4206	2001R	20		32-09-12	ALL
	3		W4206	2002R	24		32-61-22	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 53

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41636P		E003-04/ /		PLUG (continued)				001-099
D41636P		E3-4/ /		PLUG (continued)				115-199
	4		W4206	2002B	24		32-61-22	ALL
	5		W4206	2003R	22		32-61-13	ALL
	6		W4206	2003B	22		32-61-13	ALL
	7		W4206	2004R	22		32-61-13	ALL
	8		W4206	2004B	22		32-61-13	ALL
	9	UNUSED						001-099
	9		W4206	4501Z			28-41-21	115-199
	10		W4206	0042	20		SPARE	ALL
	11	UNUSED						001-099
	11		W4206	4501W	20		28-41-21	115-199
	12	UNUSED						001-099
	12		W4206	4501RY	20		28-41-21	115-199
	13	UNUSED						001-099
	13		W4206	4501RK	20		28-41-21	115-199
	14	UNUSED						001-099
	14		W4206	4501RG	20		28-41-21	115-199
	15	UNUSED						001-099
	15		W4206	4501RB	20		28-41-21	115-199
	16	UNUSED						001-099
	16		W4206	4501WK	20		28-41-21	115-199
	17	UNUSED						001-099
	17		W4206	4501RV	20		28-41-21	115-199
	18	UNUSED						001-099
	18		W4206	4501WN	20		28-41-21	115-199
	19	UNUSED						001-099
	19		W4206	4501WR	20		28-41-21	115-199
	20	UNUSED						001-099
	20		W4206	4501WY	20		28-41-21	115-199
	21	UNUSED						001-099
	21		W4206	4501WO	20		28-41-21	115-199
	22	UNUSED						001-099
	22		W4206	4501WG	20		28-41-21	115-199
	23	UNUSED						001-099
	23		W4206	4501AA	20		SPARE	115-199
	24	UNUSED						001-099
	24		W4206	4501WV	20		SPARE	115-199
	25	UNUSED						001-099
	25		W4206	4501WB	20		28-41-21	115-199
	26	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 54

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41636P		E003-04/ /		PLUG (continued)				001-099
D41636P		E3-4/ /		PLUG (continued)				115-199
	26		W4206	4502B	20		28-41-41	115-199
	27	UNUSED						001-099
	27		W4206	4502R	20		28-41-41	115-199
	28	UNUSED						001-099
	28		W4206	4502G	20		28-41-41	115-199
	29	UNUSED						001-099
	29		W4206	4502Y	20		28-41-41	115-199
	30	UNUSED						001-099
	30		W4206	4502K	20		28-41-41	115-199
	31	UNUSED						001-099
	31		W4206	4502Z			28-41-41	115-199
D41637J		P37/ /		RCPT				ALL
	1		W1270	5003B	24		31-31-41	001-099
	1		W1270	5003B	24		31-31-21	115-199
	2		W1270	5003R	24		31-31-41	001-099
	2		W1270	5003R	24		31-31-21	115-199
	3		W1270	5003Z			31-31-41	001-099
	3		W1270	5003Z			31-31-21	115-199
	4		W1270	5004R	24		31-31-41	001-099
	4		W1270	5004R	24		31-31-21	115-199
	5		W1270	5004B	24		31-31-41	001-099
	5		W1270	5004B	24		31-31-21	115-199
	6		W1270	5004Z			31-31-41	001-099
	6		W1270	5004Z			31-31-21	115-199
	7	UNUSED						ALL
	8		W1270	6023	24		31-31-62	001-099
	8		W1270	6023	22		31-31-32	115-199
	9		W1270	0172	24		29-35-11	ALL
	10	UNUSED						ALL
	11		W1270	0585	24		73-21-12	ALL
	12		W1270	0583	24		73-21-12	ALL
	13		W1270	2509R	24		31-31-42	001-099
	13	UNUSED						115-199
	14		W1270	2509B	24		31-31-42	001-099
	14	UNUSED						115-199
	15		W1270	2509Z			31-31-42	001-099
	15	UNUSED						115-199
	16	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 55

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41637J		P37/ /		RCPT (continued)				ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D41637P		P037-00/ /		PLUG-				001-099
D41637P		P37/ /		PLUG-				115-199
	1		W4471	5015B	24		31-31-41	001-099
	1		W4471	5015B	24		31-31-21	115-199
	2		W4471	5015R	24		31-31-41	001-099
	2		W4471	5015R	24		31-31-21	115-199
	3		W4471	5015Z			31-31-41	001-099
	3		W4471	5015Z			31-31-21	115-199
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						001-099
	7		W4471	0188	24		SPARE	115-199
	8		W4471	0191	24		31-31-62	001-099
	8		W4471	0191	22		31-31-32	115-199
	9		W4471	0243	20		29-35-11	ALL
	10	UNUSED						ALL
	11		W4471	0289	24		73-21-12	ALL
	12		W4471	0257	24		73-21-12	ALL
	13		W4471	5130R	24		31-31-42	001-099
	13	UNUSED						115-199
	14		W4471	5130B	24		31-31-42	001-099
	14	UNUSED						115-199
	15		W4471	5130Z			31-31-42	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 56

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41637P		P037-00/ /		PLUG- (continued)				001-099
D41637P		P37/ /		PLUG- (continued)				115-199
	15	UNUSED						115-199
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D41638J		820/ /		PLUG				115-199
	1		W4106	0060	20		21-51-23	115-199
	2		W4106	0061	20		21-51-23	115-199
	3		W4106	0062	20		21-51-23	115-199
	4		W4106	0063	20		21-51-23	115-199
	5		W4106	0064	20		21-51-23	115-199
	6		W4106	0065	20		21-51-23	115-199
	7		W4106	2020B	24		21-51-22	115-199
	8		W4106	2020R	24		21-51-22	115-199
	9		W4106	2023B	24		21-51-24	115-199
	10		W4106	2023R	24		21-51-24	115-199
	11		W4106	2024B	24		21-51-24	115-199
	12		W4106	2024R	24		21-51-24	115-199
	13		W4106	2025B	24		21-51-24	115-199
	14		W4106	2025R	24		21-51-24	115-199
	15		W4106	2026B	24		21-51-25	115-199
	16		W4106	2026R	24		21-51-25	115-199
	17		W4106	2051B	24		21-51-22	115-199
	18		W4106	2051R	24		21-51-22	115-199
	19		W4106	3001B	24		21-51-22	115-199
	20		W4106	3001R	24		21-51-22	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 57

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41638J		820/ /		PLUG (continued)				115-199
	21		W4106	3001Y	24		21-51-22	115-199
	22		W4106	3002B	24		21-51-22	115-199
	23		W4106	3002R	24		21-51-22	115-199
	24		W4106	3002Y	24		21-51-22	115-199
	25		W4106	3003B	24		21-51-22	115-199
	26		W4106	3003R	24		21-51-22	115-199
	27		W4106	3003Y	24		21-51-22	115-199
	28		W4106	3004B	24		21-51-22	115-199
	29		W4106	3004R	24		21-51-22	115-199
	30		W4106	3004Y	24		21-51-22	115-199
	31		W4106	3005B	24		21-51-22	115-199
	32		W4106	3005R	24		21-51-22	115-199
	33		W4106	3005Y	24		21-51-22	115-199
	34		W4106	3006B	24		21-51-22	115-199
	35		W4106	3006R	24		21-51-22	115-199
	36		W4106	3006Y	24		21-51-22	115-199
	37		W4106	2000B	24		SPARE	115-199
	38		W4106	2000R	24		SPARE	115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48		W4106	0150	24		SPARE	115-199
	49		W4106	0151	24		SPARE	115-199
	50		W4106	3011B	24		21-51-22	115-199
	51		W4106	3011R	24		21-51-22	115-199
	52		W4106	3011Y	24		21-51-22	115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D41638P		820/ /		PLUG				115-199
	1		W2716	0060	22		21-51-23	115-199
	2		W2716	0061	22		21-51-23	115-199
	3		W2716	0062	22		21-51-23	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 58

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41638P		820/ /		PLUG (continued)				115-199
	4		W2716	0063	22		21-51-23	115-199
	5		W2716	0064	22		21-51-23	115-199
	6		W2716	0065	22		21-51-23	115-199
	7		W2716	2020B	24		21-51-22	115-199
	8		W2716	2020R	24		21-51-22	115-199
	9		W2716	2023B	24		21-51-24	115-199
	10		W2716	2023R	24		21-51-24	115-199
	11		W2716	2024B	24		21-51-24	115-199
	12		W2716	2024R	24		21-51-24	115-199
	13		W2716	2025B	24		21-51-24	115-199
	14		W2716	2025R	24		21-51-24	115-199
	15		W2716	2026B	24		21-51-25	115-199
	16		W2716	2026R	24		21-51-25	115-199
	17		W2716	2051B	24		21-51-22	115-199
	18		W2716	2051R	24		21-51-22	115-199
	19		W2716	3001B	24		21-51-22	115-199
	20		W2716	3001R	24		21-51-22	115-199
	21		W2716	3001Y	24		21-51-22	115-199
	22		W2716	3002B	24		21-51-22	115-199
	23		W2716	3002R	24		21-51-22	115-199
	24		W2716	3002Y	24		21-51-22	115-199
	25		W2716	3003B	24		21-51-22	115-199
	26		W2716	3003R	24		21-51-22	115-199
	27		W2716	3003Y	24		21-51-22	115-199
	28		W2716	3004B	24		21-51-22	115-199
	29		W2716	3004R	24		21-51-22	115-199
	30		W2716	3004Y	24		21-51-22	115-199
	31		W2716	3005B	24		21-51-22	115-199
	32		W2716	3005R	24		21-51-22	115-199
	33		W2716	3005Y	24		21-51-22	115-199
	34		W2716	3006B	24		21-51-22	115-199
	35		W2716	3006R	24		21-51-22	115-199
	36		W2716	3006Y	24		21-51-22	115-199
	37		W2716	2000B	24		SPARE	115-199
	38		W2716	2000R	24		SPARE	115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 59

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41638P		820/ /		PLUG (continued)				115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46		W2716	0008	24		SPARE	115-199
	47		W2716	0009	24		SPARE	115-199
	48		W2716	0014	24		SPARE	115-199
	49		W2716	0015	24		SPARE	115-199
	50		W2716	3011B	24		21-51-22	115-199
	51		W2716	3011R	24		21-51-22	115-199
	52		W2716	3011Y	24		21-51-22	115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D41640J		530/290/R035		RCPT				001-099
D41640J		820/ /		PLUG				115-199
	1		W4106	0039	24		21-61-21	001-099
	1		W4106	0037	24		21-61-31	115-199
	2		W4106	2001R	24		21-61-21	001-099
	2		W4106	0039	24		21-61-21	115-199
	3		W4106	2001B	24		21-61-21	001-099
	3		W4106	0093	20		28-25-11	115-199
	4		W4106	0037	24		21-61-31	001-099
	4		W4106	0104	24		21-51-22	115-199
	5		W4106	2033R	24		21-61-31	001-099
	5		W4106	0174	24		21-61-11	115-199
	6		W4106	2033B	24		21-61-31	001-099
	6		W4106	0175	24		21-61-11	115-199
	7		W4106	2034B	24		21-61-31	001-099
	7		W4106	0176	24		21-61-11	115-199
	8		W4106	2034R	24		21-61-31	001-099
	8		W4106	0177	24		21-61-11	115-199
	9	UNUSED						001-099
	9		W4106	0178	24		21-61-11	115-199
	10	UNUSED						001-099
	10		W4106	0193	24		21-61-21	115-199
	11	UNUSED						001-099
	11		W4106	0194	24		21-61-21	115-199
	12	UNUSED						001-099
	12		W4106	0195	24		21-61-21	115-199
	13		W4106	2019B	24		21-65-12	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 60

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41640J		530/290/R035		RCPT (continued)				001-099
D41640J		820/ /		PLUG (continued)				115-199
	13		W4106	0196	24		21-61-21	115-199
	14	UNUSED						001-099
	14		W4106	0197	24		21-61-21	115-199
	15		W4106	2019R	24		21-65-12	001-099
	15		W4106	0201	24		21-61-31	115-199
	16	UNUSED						001-099
	16		W4106	0202	24		21-61-31	115-199
	17		W4106	2011B	24		21-65-12	001-099
	17		W4106	0203	24		21-61-31	115-199
	18	UNUSED						001-099
	18		W4106	0204	24		21-61-31	115-199
	19		W4106	2011R	24		21-65-12	001-099
	19		W4106	0210	24		21-61-31	115-199
	20	UNUSED						001-099
	20		W4106	0225	22		52-35-11	115-199
	21	UNUSED						001-099
	21		W4106	0226	22		52-35-11	115-199
	22	UNUSED						001-099
	22		W4106	0227	22		52-35-11	115-199
	23	UNUSED						001-099
	23		W4106	0232	20		28-25-11	115-199
	24	UNUSED						001-099
	24		W4106	0233	22		32-42-12	115-199
	25	UNUSED						001-099
	25		W4106	0234	22		32-42-12	115-199
	26		W4106	0241	20		21-51-22	115-199
	27		W4106	0242	24		SPARE	115-199
	28		W4106	0243	24		SPARE	115-199
	29		W4106	2027B	24		21-61-11	115-199
	30		W4106	2027R	24		21-61-11	115-199
	31		W4106	2028B	24		21-61-11	115-199
	32		W4106	2028R	24		21-61-11	115-199
	33		W4106	2030B	24		21-51-22	115-199
	34		W4106	2030R	24		21-51-22	115-199
	35		W4106	2031B	24		21-51-12	115-199
	36		W4106	2031R	24		21-51-12	115-199
	37		W4106	2049B	24		21-51-22	115-199
	38		W4106	2049R	24		21-51-22	115-199
	39		W4106	2055B	24		21-61-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 61

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41640J		530/290/R035		RCPT (continued)				001-099
D41640J		820/ /		PLUG (continued)				115-199
	40		W4106	2055R	24		21-61-11	115-199
	41		W4106	3007B	24		21-61-11	115-199
	42		W4106	3007R	24		21-61-11	115-199
	43		W4106	3007Y	24		21-61-11	115-199
	44		W4106	3008B	24		21-61-21	115-199
	45		W4106	3008R	24		21-61-21	115-199
	46		W4106	3008Y	24		21-61-21	115-199
	47		W4106	3009B	24		21-61-31	115-199
	48		W4106	3009R	24		21-61-31	115-199
	49		W4106	3009Y	24		21-61-31	115-199
	50		W4106	5001B	22		32-42-11	115-199
	51		W4106	5001R	22		32-42-11	115-199
	52		W4106	5001Z			32-42-11	115-199
	53		W4106	0157	24		SPARE	115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D41640P		530/290/R035		PLUG				001-099
D41640P		820/ /		PLUG				115-199
	1		W2728	0039	24		21-61-21	001-099
	1		W2716	0037	24		21-61-31	115-199
	2		W2728	2001R	24		21-61-21	001-099
	2		W2716	0039	24		21-61-21	115-199
	3		W2728	2001B	24		21-61-21	001-099
	3		W2716	0093	20		28-25-11	115-199
	4		W2728	0037	24		21-61-31	001-099
	4		W2716	0104	24		21-51-22	115-199
	5		W2728	2033R	24		21-61-31	001-099
	5		W2716	0174	24		21-61-11	115-199
	6		W2728	2033B	24		21-61-31	001-099
	6		W2716	0175	24		21-61-11	115-199
	7		W2728	2034B	24		21-61-31	001-099
	7		W2716	0176	24		21-61-11	115-199
	8		W2728	2034R	24		21-61-31	001-099
	8		W2716	0177	24		21-61-11	115-199
	9	UNUSED						001-099
	9		W2716	0178	24		21-61-11	115-199
	10	UNUSED						001-099
	10		W2716	0193	24		21-61-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 62

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41640P		530/290/R035		PLUG (continued)				001-099
D41640P		820/ /		PLUG (continued)				115-199
	11	UNUSED						001-099
	11		W2716	0194	24		21-61-21	115-199
	12	UNUSED						001-099
	12		W2716	0195	24		21-61-21	115-199
	13		W2728	2019B	24		21-65-12	001-099
	13		W2716	0196	24		21-61-21	115-199
	14	UNUSED						001-099
	14		W2716	0197	24		21-61-21	115-199
	15		W2728	2019R	24		21-65-12	001-099
	15		W2716	0201	24		21-61-31	115-199
	16	UNUSED						001-099
	16		W2716	0202	24		21-61-31	115-199
	17		W2728	2011B	24		21-65-12	001-099
	17		W2716	0203	24		21-61-31	115-199
	18	UNUSED						001-099
	18		W2716	0204	24		21-61-31	115-199
	19		W2728	2011R	24		21-65-12	001-099
	19		W2716	0210	24		21-61-31	115-199
	20	UNUSED						001-099
	20		W2716	0225	22		52-35-11	115-199
	21	UNUSED						001-099
	21		W2716	0226	22		52-35-11	115-199
	22	UNUSED						001-099
	22		W2716	0227	22		52-35-11	115-199
	23	UNUSED						001-099
	23		W2716	0232	20		28-25-11	115-199
	24	UNUSED						001-099
	24		W2716	0233	22		32-42-12	115-199
	25	UNUSED						001-099
	25		W2716	0234	22		32-42-12	115-199
	26		W2716	0241	20		21-51-22	115-199
	27		W2716	0242	24		SPARE	115-199
	28		W2716	0243	24		SPARE	115-199
	29		W2716	2027B	24		21-61-11	115-199
	30		W2716	2027R	24		21-61-11	115-199
	31		W2716	2028B	24		21-61-11	115-199
	32		W2716	2028R	24		21-61-11	115-199
	33		W2716	2030B	24		21-51-22	115-199
	34		W2716	2030R	24		21-51-22	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 63

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41640P		530/290/R035		PLUG (continued)				001-099
D41640P		820/ /		PLUG (continued)				115-199
	35		W2716	2031B	24		21-51-12	115-199
	36		W2716	2031R	24		21-51-12	115-199
	37		W2716	2049B	24		21-51-22	115-199
	38		W2716	2049R	24		21-51-22	115-199
	39		W2716	2055B	24		21-61-11	115-199
	40		W2716	2055R	24		21-61-11	115-199
	41		W2716	3007B	24		21-61-11	115-199
	42		W2716	3007R	24		21-61-11	115-199
	43		W2716	3007Y	24		21-61-11	115-199
	44		W2716	3008B	24		21-61-21	115-199
	45		W2716	3008R	24		21-61-21	115-199
	46		W2716	3008Y	24		21-61-21	115-199
	47		W2716	3009B	24		21-61-31	115-199
	48		W2716	3009R	24		21-61-31	115-199
	49		W2716	3009Y	24		21-61-31	115-199
	50		W2716	5001B	22		32-42-11	115-199
	51		W2716	5001R	22		32-42-11	115-199
	52		W2716	5001Z			32-42-11	115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D41642J		820/ /		PLUG				115-199
	1		W4106	0047	24		21-51-23	115-199
	2		W4106	0048	24		21-51-23	115-199
	3		W4106	0049	24		21-51-23	115-199
	4		W4106	0050	24		21-51-23	115-199
	5		W4106	0051	24		21-51-23	115-199
	6		W4106	0052	24		21-51-23	115-199
	7		W4106	0067	24		21-51-24	115-199
	8		W4106	0166	24		21-51-23	115-199
	9		W4106	0167	24		21-51-25	115-199
	10		W4106	0169	24		21-51-25	115-199
	11		W4106	0170	24		21-51-25	115-199
	12		W4106	0218	22		32-42-12	115-199
	13		W4106	0219	22		32-42-12	115-199
	14		W4106	0220	22		32-42-12	115-199
	15		W4106	0221	22		32-42-12	115-199
	16		W4106	0222	22		32-42-12	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 64

Oct 09/2008



Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41642J		820/ /		PLUG (continued)				115-199
	17		W4106	0223	22		32-42-12	115-199
	18		W4106	0224	22		32-42-12	115-199
	19		W4106	2011B	24		21-65-12	115-199
	20		W4106	2011R	24		21-65-12	115-199
	21		W4106	2019B	24		21-65-12	115-199
	22		W4106	2019R	24		21-65-12	115-199
	23		W4106	2054B	24		21-51-22	115-199
	24		W4106	2054R	24		21-51-22	115-199
	25		W4106	3010B	24		21-61-21	115-199
	26		W4106	3010R	24		21-61-21	115-199
	27		W4106	3010Y	24		21-61-21	115-199
	28		W4106	3017B	24		21-61-31	115-199
	29		W4106	3017R	24		21-61-31	115-199
	30		W4106	3017Y	24		21-61-31	115-199
	31		W4106	3018B	24		21-61-11	115-199
	32		W4106	3018R	24		21-61-11	115-199
	33		W4106	3018Y	24		21-61-11	115-199
	34		W4106	0248	24		SPARE	115-199
	35		W4106	0249	24		SPARE	115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39		W4106	2029B	24		SPARE	115-199
	40		W4106	2029R	24		SPARE	115-199
	41		W4106	0162	24		SPARE	115-199
	42		W4106	0244	22		SPARE	115-199
	43		W4106	0245	22		SPARE	115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 65

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41642P		820/ /		PLUG				115-199
	1		W2716	0047	24		21-51-23	115-199
	2		W2716	0048	24		21-51-23	115-199
	3		W2716	0049	24		21-51-23	115-199
	4		W2716	0050	24		21-51-23	115-199
	5		W2716	0051	24		21-51-23	115-199
	6		W2716	0052	24		21-51-23	115-199
	7		W2716	0067	24		21-51-24	115-199
	8		W2716	0166	24		21-51-23	115-199
	9		W2716	0167	24		21-51-25	115-199
	10		W2716	0169	24		21-51-25	115-199
	11		W2716	0170	24		21-51-25	115-199
	12		W2716	0218	22		32-42-12	115-199
	13		W2716	0219	22		32-42-12	115-199
	14		W2716	0220	22		32-42-12	115-199
	15		W2716	0221	22		32-42-12	115-199
	16		W2716	0222	22		32-42-12	115-199
	17		W2716	0223	22		32-42-12	115-199
	18		W2716	0224	22		32-42-12	115-199
	19		W2716	2011B	24		21-65-12	115-199
	20		W2716	2011R	24		21-65-12	115-199
	21		W2716	2019B	24		21-65-12	115-199
	22		W2716	2019R	24		21-65-12	115-199
	23		W2716	2054B	24		21-51-22	115-199
	24		W2716	2054R	24		21-51-22	115-199
	25		W2716	3010B	24		21-61-21	115-199
	26		W2716	3010R	24		21-61-21	115-199
	27		W2716	3010Y	24		21-61-21	115-199
	28		W2716	3017B	24		21-61-31	115-199
	29		W2716	3017R	24		21-61-31	115-199
	30		W2716	3017Y	24		21-61-31	115-199
	31		W2716	3018B	24		21-61-11	115-199
	32		W2716	3018R	24		21-61-11	115-199
	33		W2716	3018Y	24		21-61-11	115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38		W2716	0016	24		SPARE	115-199
	39		W2716	2004B	24		SPARE	115-199
	40		W2716	2004R	24		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 66

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41642P		820/ /		PLUG (continued)				115-199
	41		W2716	0017	24		SPARE	115-199
	42	UNUSED						115-199
	43		W2716	0012	24		SPARE	115-199
	44		W2716	0013	24		SPARE	115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48		W2716	0010	24		SPARE	115-199
	49		W2716	0011	24		SPARE	115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D41643J		E002-03/ /		RCPT-				001-099
D41643J		E2-3/ /		RCPT-				115-199
	1		W1175	2027R	20		29-32-41	ALL
	2		W1175	2027B	20		29-32-41	ALL
	3		W1175	0386	22		22-14-31	001-099
	3		W1175	1015	22		22-14-31	115-199
	4	UNUSED						001-099
	4		W1175	5138R	22		34-58-11	115-199
	5	UNUSED						001-099
	5		W1175	5138B	22		34-58-11	115-199
	6	UNUSED						001-099
	6		W1175	FRCU			34-22-38	115-199
	7		W1175	5050R	24		22-12-31	ALL
	8		W1175	5050B	24		22-12-31	ALL
	9		W1175	FRDQ			22-12-31	ALL
	10	UNUSED						001, 003-099
	10		W1175	0566	22		34-22-18	002
	10		W1175	5077R	24		34-22-38	115-199
	11		W1175	5095R	24		22-33-11	ALL
	12		W1175	5095B	24		22-33-11	ALL
	13		W1175	FRGP			22-33-11	ALL
	14		W1175	5091R	24		22-33-11	ALL
	15		W1175	5091B	24		22-33-11	ALL
	16		W1175	FRIC			22-33-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 67

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41643J		E002-03/ /		RCPT- (continued)				001-099
D41643J		E2-3/ /		RCPT- (continued)				115-199
	17	UNUSED						001-099
	17		W1175	0365	24		SPARE	115-199
	18	UNUSED						001-099
	18		W1175	0366	24		SPARE	115-199
	19	UNUSED						001-099
	19		W1175	5077B	24		34-22-38	115-199
	20		W1175	0388	22		22-14-31	001-099
	20		W1175	1017	22		22-14-31	115-199
	21		W1175	0389	22		22-14-31	001-099
	21		W1175	1018	22		22-14-31	115-199
	22		W1175	0373	22		22-11-12	001-099
	22		W1175	1004	22		22-11-12	115-199
	23		W1175	0374	22		22-11-12	001-099
	23		W1175	1005	22		22-11-12	115-199
	24	UNUSED						001, 003-099
	24		W1175	0571	22		34-22-18	002
	24		W1175	FRAJ			34-58-11	115-199
	25		W1175	0411	24		34-45-02	001, 003-099, 115-199
	25	UNUSED						002
	26		W1175	0412	22		34-45-02	001, 003-099, 115-199
	26	UNUSED						002
	27		W1175	0413	22		34-45-02	001, 003-099, 115-199
	27	UNUSED						002
	28	UNUSED						ALL
	29		W1175	2539R	24		23-51-13	ALL
	30		W1175	2539B	24		23-51-13	ALL
	31		W1175	2539Z			23-51-13	ALL
	32		W1175	0414	22		22-13-11	ALL
	33		W1175	5110R	24		22-13-11	ALL
	34		W1175	5110B	24		22-13-11	ALL
	35		W1175	FRJF			22-13-11	ALL
	36		W1175	5114R	24		34-31-11	ALL
	37		W1175	5114B	24		34-31-11	ALL
	38		W1175	FRJE			34-31-11	ALL
	39		W1175	0421	22		34-31-11	ALL
	40	UNUSED						001, 003-099, 115-199
	40		W1175	0578	22		34-22-18	002
	41		W1175	0427	22		34-31-11	ALL
	DED		W1175	1004Z			22-11-12	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 68

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41643J		E002-03/ /		RCPT- (continued)				001-099
D41643J		E2-3/ /		RCPT- (continued)				115-199
	DED		W1175	1005Z			22-11-12	115-199
	DED		W1175	1015Z			22-14-31	115-199
	DED		W1175	1017Z			22-14-31	115-199
	DED		W1175	1018Z			22-14-31	115-199
			W1175	0360	20		22-33-11	001-099
			W1175	0363	20		22-33-11	001-099
			W1175	0205	20		22-12-31	ALL
			W1175	0415	22		22-13-11	ALL
			W1175	0425	22		34-31-11	ALL
			W1175	5050Z			22-12-31	ALL
			W1175	5091Z			22-33-11	ALL
			W1175	5095Z			22-33-11	ALL
			W1175	5110Z			22-13-11	ALL
			W1175	5114Z			34-31-11	ALL
			W1175	FRDQ			22-12-31	ALL
			W1175	FRGP			22-33-11	ALL
			W1175	FRIC			22-33-11	ALL
			W1175	FRJE			34-31-11	ALL
			W1175	FRJF			22-13-11	ALL
			W1175	0063	20		34-22-38	115-199
			W1175	0360	22		22-33-11	115-199
			W1175	0363	22		22-33-11	115-199
			W1175	0546	20		34-58-11	115-199
			W1175	5077Z			34-22-38	115-199
			W1175	5138Z			34-58-11	115-199
			W1175	FRAJ			34-58-11	115-199
			W1175	FRCU			34-22-38	115-199
D41643P		E002-03/ /		PLUG-				001-099
D41643P		E2-3/ /		PLUG-				115-199
	1		W4471	2015R	20		29-32-41	ALL
	2		W4471	2015B	20		29-32-41	ALL
	3		W4471	0239	22		22-14-31	ALL
	4	UNUSED						001-099
	4		W4471	5078R	22		34-58-11	115-199
	5	UNUSED						001-099
	5		W4471	5078B	22		34-58-11	115-199
	6		W4471	0234	22		SPARE	001-099
	6		W4471	5111Z			34-22-38	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 69

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41643P		E002-03/ /		PLUG- (continued)				001-099
D41643P		E2-3/ /		PLUG- (continued)				115-199
	7		W4471	5064R	24		22-12-31	ALL
	8		W4471	5064B	24		22-12-31	ALL
	9		W4471	5064Z			22-12-31	ALL
	10	UNUSED						001, 003-099
	10		W4471	0476	22		34-22-18	002
	10		W4471	5111R	22		34-22-38	115-199
	11		W4471	5068R	24		22-33-11	ALL
	12		W4471	5068B	24		22-33-11	ALL
	13		W4471	5068Z			22-33-11	ALL
	14		W4471	5072R	24		22-33-11	ALL
	15		W4471	5072B	24		22-33-11	ALL
	16		W4471	5072Z			22-33-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						001-099
	19		W4471	5111B	22		34-22-38	115-199
	20		W4471	0159	22		22-14-31	ALL
	21		W4471	0176	22		22-14-31	ALL
	22		W4471	0119	22		22-11-12	ALL
	23		W4471	0123	22		22-11-12	ALL
	24	UNUSED						001, 003-099
	24		W4471	0473	22		34-22-18	002
	24		W4471	5078Z			34-58-11	115-199
	25		W4471	0329	24		34-45-02	001, 003-099, 115-199
	25		W4471	0329	24		SPARE	002
	26		W4471	0330	24		34-45-02	001, 003-099, 115-199
	26		W4471	0330	24		SPARE	002
	27		W4471	0331	24		34-45-02	001, 003-099, 115-199
	27		W4471	0331	24		SPARE	002
	28		W4471	0332	24		34-45-02	001, 003-099, 115-199
	28		W4471	0332	24		SPARE	002
	29		W4471	2501R	24		23-51-13	ALL
	30		W4471	2501B	24		23-51-13	ALL
	31		W4471	2501Z			23-51-13	ALL
	32		W4471	0333	22		22-13-11	ALL
	33		W4471	5090R	24		22-13-11	ALL
	34		W4471	5090B	24		22-13-11	ALL
	35		W4471	5090Z			22-13-11	ALL
	36		W4471	5095R	24		34-31-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 70

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41643P		E002-03/ /		PLUG- (continued)				001-099
D41643P		E2-3/ /		PLUG- (continued)				115-199
	37		W4471	5095B	24		34-31-11	ALL
	38		W4471	5095Z			34-31-11	ALL
	39		W4471	0334	22		34-31-11	ALL
	40	UNUSED						001, 003-099, 115-199
	40		W4471	0472	22		34-22-18	002
	41		W4471	0336	22		34-31-11	ALL
D41644J		E5-3/ /		RCPT				115-199
	1		W1286	0143	22		24-22-41	115-199
	2	UNUSED						115-199
	3		W1286	0076	22		33-31-31	115-199
	4	UNUSED						115-199
	5		W1286	3003R	20		24-21-41	115-199
	6		W1286	3003B	20		24-21-41	115-199
	7		W1286	3003Y	20		24-21-41	115-199
	8		W1286	2506R	22		24-21-41	115-199
	9		W1286	2506B	22		24-21-41	115-199
	10		W1286	4002B	24		24-21-41	115-199
	11		W1286	4002G	24		24-21-41	115-199
	12		W1286	4002R	24		24-21-41	115-199
	13		W1286	4002Y	24		24-21-41	115-199
	14		W1286	2506Z			24-21-41	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D41644P		E5-3/ /		PLUG-				115-199
	1		W4018	0012	22		24-22-41	115-199
	2		W4018	0013	20		SPARE	115-199
	3		W4018	0003	22		33-31-31	115-199
	4		W4018	0014	20		SPARE	115-199
	5		W4018	3001R	18		24-21-41	115-199
	6		W4018	3001B	18		24-21-41	115-199
	7		W4018	3001Y	18		24-21-41	115-199
	8		W4018	2501R	20		24-21-41	115-199
	9		W4018	2501B	20		24-21-41	115-199
	10		W4018	4001B	20		24-21-41	115-199
	11		W4018	4001G	20		24-21-41	115-199
	12		W4018	4001R	20		24-21-41	115-199
	13		W4018	4001Y	20		24-21-41	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 71

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41644P		E5-3/ /		PLUG- (continued)				115-199
	14		W4018	2501Z			24-21-41	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D41646J		E003-04/ /		RCPT				001-099
D41646J		E3-4/ /		RCPT				115-199
	1		W1280	2039B	24		32-61-13	ALL
	2		W1280	2039R	24		32-61-13	ALL
	3		W1280	2045B	22		32-61-22	ALL
	4		W1280	2045R	22		32-61-22	ALL
	5		W1280	2046B	22		32-61-22	ALL
	6		W1280	2046R	22		32-61-22	ALL
	7		W1280	2040B	24		32-61-13	ALL
	8		W1280	2040R	24		32-61-13	ALL
	9		W1280	2094B	22		32-09-12	ALL
	10		W1280	2094R	22		32-09-12	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						001-099
D41646P		E003-04/ /		PLUG-				ALL
	1		W2052	2001B	20		32-61-13	ALL
	2		W2052	2001R	20		32-61-13	ALL
	3		W2052	2002B	20		32-61-22	ALL
	4		W2052	2002R	20		32-61-22	ALL
	5		W2052	2003B	20		32-61-22	ALL
	6		W2052	2003R	20		32-61-22	ALL
	7		W2052	2004B	20		32-61-13	ALL
	8		W2052	2004R	20		32-61-13	ALL
	9		W2052	2005B	20		32-09-12	001-099
	9		W2052	2005B	18		32-09-12	115-199
	10		W2052	2005R	20		32-09-12	001-099
	10		W2052	2005R	18		32-09-12	115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 72

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41648J		E004-03/ /		RCPT-				001-099
D41648J		E4-3/ /		RCPT-				115-199
	1		W1163	2505B	24		23-41-11	ALL
	2		W1163	2505R	24		23-41-11	ALL
	3	UNUSED						001-099
	3		W1163	0176	24		23-41-11	115-199
	4		W1163	2505Z			23-41-11	ALL
	5		W1163	0196	24		23-51-11	ALL
	6		W1163	0195	24		23-51-11	ALL
	7		W1163	0198	24		23-51-11	ALL
	8		W1163	0197	20		23-51-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D41648P		E004-03/ /		PLUG-				ALL
	1		W2052	2501B	20		23-41-12	001-099
	1		W2052	3501B	20		23-41-12	115-199
	2		W2052	2501R	20		23-41-12	001-099
	2		W2052	3501R	20		23-41-12	115-199
	3	UNUSED						001-099
	3		W2052	3501Y	20		23-41-12	115-199
	4		W2052	2501Z			23-41-12	001-099
	4		W2052	3501Z			23-41-12	115-199
	5		W2052	3502B	20		23-51-13	ALL
	6		W2052	3502R	20		23-51-13	ALL
	7		W2052	3502Y	20		23-51-13	ALL
	8		W2052	3502Z			23-51-13	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 73

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41650J		E003-04/ /		RCPT				ALL
	1	UNUSED						ALL
	2		W1280	2050B	22		32-61-22	ALL
	3		W1280	2049R	22		32-61-22	ALL
	4		W1280	2049B	22		32-61-22	ALL
	5		W1280	0065	20		32-12-12	ALL
	6		W1280	0064	20		32-12-12	ALL
	7		W1280	2091B	22		32-09-11	ALL
	8		W1280	2091R	22		32-09-11	ALL
	9		W1280	2050R	22		32-61-22	ALL
	10		W1280	2074B	24		32-61-13	ALL
	11		W1280	2074R	24		32-61-13	ALL
	12		W1280	2075B	24		32-61-13	ALL
	13		W1280	2075R	24		32-61-13	ALL
	14	UNUSED						ALL
	15	UNUSED						001-099
D41650P		E3-4/ /		PLUG-				ALL
	1	UNUSED						ALL
	2		W2152	2001B	20		32-61-22	ALL
	3		W2152	2002R	20		32-61-22	ALL
	4		W2152	2002B	20		32-61-22	ALL
	5		W2152	0021	20		32-12-12	001-099
	5		W2152	0021	18		32-12-12	115-199
	6		W2152	0011	20		32-12-12	001-099
	6		W2152	0011	18		32-12-12	115-199
	7		W2152	2003B	20		32-09-11	001-099
	7		W2152	2003B	18		32-09-11	115-199
	8		W2152	2003R	20		32-09-11	001-099
	8		W2152	2003R	18		32-09-11	115-199
	9		W2152	2001R	20		32-61-22	ALL
	10		W2152	2004B	20		32-61-13	ALL
	11		W2152	2004R	20		32-61-13	ALL
	12		W2152	2005B	20		32-61-13	ALL
	13		W2152	2005R	20		32-61-13	ALL
	14	UNUSED						ALL
	15	UNUSED						001-099
D41652J		E5-1/ /		RCPT				ALL
	1	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 74

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41652J		E5-1/ /		RCPT (continued)				ALL
	2	UNUSED						ALL
	3		W1282	0042	24		27-58-31	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W1282	4011B	24		27-51-41	ALL
	14		W1282	4011G	24		27-51-41	ALL
	15		W1282	4011R	24		27-51-41	ALL
	16		W1282	4011Y	24		27-51-41	ALL
	17		W1282	0177	24		27-51-31	ALL
	18		W1282	0178	22		27-51-31	ALL
	19	UNUSED						ALL
	20		W1282	0187	24		27-51-41	ALL
	21		W1282	0188	24		27-51-41	ALL
	22		W1282	0189	24		27-51-41	ALL
	23		W1282	0190	24		27-51-41	ALL
	24		W1282	0203	24		27-58-11	ALL
	25		W1282	0244	22		27-51-51	ALL
	26	UNUSED						ALL
	27		W1282	2021B	24		27-51-41	ALL
	28		W1282	2021R	24		27-51-41	ALL
	29		W1282	0206	22		27-51-51	ALL
	30		W1282	0297	24		27-51-31	001-099
	30		W1282	0297	22		27-51-31	115-199
	31		W1282	0298	22		27-51-31	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 75

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41652J		E5-1/ /		RCPT (continued)				ALL
	41	UNUSED						ALL
D41652P		E005-01/ /		PLUG-				001-099
D41652P		E5-1/ /		PLUG-				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W4202	0064	24		27-58-31	001-099
	3		W4202	0064	22		27-58-31	115-199
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W4202	4001B	22		27-51-41	ALL
	14		W4202	4001G	22		27-51-41	ALL
	15		W4202	4001R	22		27-51-41	ALL
	16		W4202	4001Y	22		27-51-41	ALL
	17		W4202	0058	24		27-51-31	001-099
	17		W4202	0058	22		27-51-31	115-199
	18		W4202	0020	22		27-51-31	ALL
	19		W4202	0066	20		SPARE	ALL
	20		W4202	0060	24		27-51-41	001-099
	20		W4202	0060	22		27-51-41	115-199
	21		W4202	0061	24		27-51-41	001-099
	21		W4202	0061	22		27-51-41	115-199
	22		W4202	0062	24		27-51-41	001-099
	22		W4202	0062	22		27-51-41	115-199
	23		W4202	0063	24		27-51-41	001-099
	23		W4202	0063	22		27-51-41	115-199
	24		W4202	0070	24		27-58-11	ALL
	25		W4202	0068	22		27-51-51	ALL
	26	UNUSED						ALL
	27		W4202	2011B	22		27-51-41	ALL
	28		W4202	2011R	22		27-51-41	ALL
	29		W4202	0087	22		27-51-51	ALL
	30		W4202	0097	24		27-51-31	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 76

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41652P		E005-01/ /		PLUG- (continued)				001-099
D41652P		E5-1/ /		PLUG- (continued)				115-199
	30		W4202	0097	22		27-51-31	115-199
	31		W4202	0098	22		27-51-31	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34		W4202	0059	22		SPARE	ALL
	35		W4202	0069	22		SPARE	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W4202	0095	22		SPARE	ALL
	41		W4202	0096	22		SPARE	ALL
D41654J		E5-1/ /		RCPT				ALL
	1		W1282	2017R	24		27-51-41	ALL
	2		W1282	2017B	24		27-51-41	ALL
	3		W1282	4008R	24		27-51-41	ALL
	4		W1282	4008B	24		27-51-41	ALL
	5		W1282	4008Y	24		27-51-41	ALL
	6		W1282	4008G	24		27-51-41	ALL
	7		W1282	2018R	24		27-51-41	ALL
	8		W1282	2018B	24		27-51-41	ALL
	9		W1282	4009R	24		27-51-41	ALL
	10		W1282	4009B	24		27-51-41	ALL
	11		W1282	4009Y	24		27-51-41	ALL
	12		W1282	4009G	24		27-51-41	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 77

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41654J		E5-1/ /		RCPT (continued)				ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D41654P		E005-01/ /		PLUG				001-099
D41654P		E5-1/ /		PLUG				115-199
	1		W4212	2006R	22		27-51-41	ALL
	2		W4212	2006B	22		27-51-41	ALL
	3		W4212	4002R	22		27-51-41	ALL
	4		W4212	4002B	22		27-51-41	ALL
	5		W4212	4002Y	22		27-51-41	ALL
	6		W4212	4002G	22		27-51-41	ALL
	7		W4212	2005R	22		27-51-41	ALL
	8		W4212	2005B	22		27-51-41	ALL
	9		W4212	4001R	22		27-51-41	ALL
	10		W4212	4001B	22		27-51-41	ALL
	11		W4212	4001Y	22		27-51-41	ALL
	12		W4212	4001G	22		27-51-41	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W4212	0017	22		SPARE	ALL
	18		W4212	0018	22		SPARE	ALL
	19		W4212	0015	22		SPARE	001-099
	19	UNUSED						115-199
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 78

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41654P		E005-01/ /		PLUG (continued)				001-099
D41654P		E5-1/ /		PLUG (continued)				115-199
	31	UNUSED						ALL
D41656J		E005-03/ /		RCPT				001-099
D41656J		E5-3/ /		RCPT				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1286	2023B	24		27-51-61	ALL
	4		W1286	2023R	24		27-51-61	ALL
	5		W1286	2022B	24		27-51-61	ALL
	6		W1286	2022R	24		27-51-61	ALL
	7		W1286	4008B	24		27-51-61	ALL
	8		W1286	4008G	24		27-51-61	ALL
	9		W1286	4008R	24		27-51-61	ALL
	10		W1286	4008Y	24		27-51-61	ALL
	11		W1286	4009B	24		27-51-61	ALL
	12		W1286	4009G	24		27-51-61	ALL
	13		W1286	4009R	24		27-51-61	ALL
	14		W1286	4009Y	24		27-51-61	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W1286	0029	22		27-81-21	ALL
	24		W1286	0030	22		27-81-21	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D41656P		E005-03/ /		PLUG				001-099
D41656P		E5-3/ /		PLUG				115-199
	1	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 79

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41656P		E005-03/ /		PLUG (continued)				001-099
D41656P		E5-3/ /		PLUG (continued)				115-199
	2	UNUSED						ALL
	3		W4206	2005B	22		27-51-61	ALL
	4		W4206	2005R	22		27-51-61	ALL
	5		W4206	2006B	22		27-51-61	ALL
	6		W4206	2006R	22		27-51-61	ALL
	7		W4206	4001B	22		27-51-61	ALL
	8		W4206	4001G	22		27-51-61	ALL
	9		W4206	4001R	22		27-51-61	ALL
	10		W4206	4001Y	22		27-51-61	ALL
	11		W4206	4002B	22		27-51-61	ALL
	12		W4206	4002G	22		27-51-61	ALL
	13		W4206	4002R	22		27-51-61	ALL
	14		W4206	4002Y	22		27-51-61	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W4206	0023	22		27-81-21	ALL
	24		W4206	0024	22		27-81-21	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W4206	0040	22		SPARE	ALL
	28		W4206	0041	22		SPARE	ALL
	29		W4206	0042	20		SPARE	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D41658J		E005-03/ /		RCPT				001-099
D41658J		E5-3/ /		RCPT				115-199
	1		W1286	2025B	24		27-51-61	ALL
	2		W1286	2025R	24		27-51-61	ALL
	3		W1286	4010B	24		27-51-61	ALL
	4		W1286	4010G	24		27-51-61	ALL
	5		W1286	4010R	24		27-51-61	ALL
	6		W1286	4010Y	24		27-51-61	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 80

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41658J		E005-03/ /		RCPT (continued)				001-099
D41658J		E5-3/ /		RCPT (continued)				115-199
	7		W1286	0048	22		24-41-11	ALL
	8		W1286	0249	24		27-51-61	ALL
	9	UNUSED						ALL
	10		W1286	0019	22		74-31-21	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D41658P		E005-03/ /		PLUG				001-099
D41658P		E5-3/ /		PLUG				115-199
	1		W4216	2010B	22		27-51-61	ALL
	2		W4216	2010R	22		27-51-61	ALL
	3		W4216	4001B	22		27-51-61	ALL
	4		W4216	4001G	22		27-51-61	ALL
	5		W4216	4001R	22		27-51-61	ALL
	6		W4216	4001Y	22		27-51-61	ALL
	7		W4216	0001	22		24-41-11	ALL
	8		W4216	0116	22		27-51-21	ALL
	9	UNUSED						001-099
	9		W4216	0117	22		SPARE	115-199
	10		W4216	0088	22		74-31-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 81

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41658P		E005-03/ /		PLUG (continued)				001-099
D41658P		E5-3/ /		PLUG (continued)				115-199
	11	UNUSED						001-099
	11		W4216	0103	22		SPARE	115-199
	12		W4216	0104	22		SPARE	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D41660J		E4-2/ /		RCPT-				ALL
	1		W1275	0121	22		49-61-11	ALL
	2		W1275	6016	24		49-61-11	ALL
	2		W1275	6017	24		49-61-11	ALL
	3		W1275	0123	22		49-61-11	ALL
	4		W1275	0124	22		49-61-11	ALL
	5		W1275	0125	22		49-61-11	ALL
	6		W1275	0126	22		49-61-11	ALL
	7		W1275	0017	24		49-61-11	ALL
	7		W1275	0129	24		49-61-11	ALL
	8		W1275	0120	22		49-61-11	ALL
	9		W1275	6295	24		49-94-11	001-099
	9		W1275	6296	24		49-94-11	001-099
	9	UNUSED						115-199
	10		W1275	0262	22		24-33-12	001-099
	10	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 82

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41660J		E4-2/ /		RCPT- (continued)				ALL
	11		W1275	5661	24		24-34-11	ALL
	12		W1275	0341	24		49-61-11	ALL
	12		W1275	0342	24		49-61-11	ALL
	13	UNUSED						001-099
	13		W1275	5579	22		49-94-14	115-199
	14		W1275	0350	24		24-33-12	001-099
	14		W1275	0352	24		24-33-12	001-099
	14		W1275	5574	24		49-94-14	115-199
	14		W1275	5577	24		49-94-14	115-199
	15	UNUSED						ALL
	16	UNUSED						001-099
	16		W1275	5581	22		49-94-14	115-199
	17		W1275	6508	24		49-71-11	001-099
	17		W1275	2002B	24		49-71-11	115-199
	18	UNUSED						001-099
	18		W1275	2002R	24		49-71-11	115-199
	19		W1275	6507	24		49-73-11	001-099
	19		W1275	2005B	24		49-73-11	115-199
	20	UNUSED						001-099
	20		W1275	2005R	24		49-73-11	115-199
	21		W1275	6009	24		49-61-14	ALL
	21		W1275	6010	24		49-61-14	ALL
	22		W1275	2627Z			23-41-11	001-099
	22		W1275	3504Z			23-41-11	115-199
	23		W1275	0267	22		24-33-12	001-099
	23	UNUSED						115-199
	24		W1275	2028B	24		24-34-11	ALL
	25		W1275	2028R	24		24-34-11	ALL
	26		W1275	2627B	24		23-41-11	001-099
	26		W1275	3504B	24		23-41-11	115-199
	27		W1275	2627R	24		23-41-11	001-099
	27		W1275	3504R	24		23-41-11	115-199
	28	UNUSED						001-099
	28		W1275	3504Y	24		23-41-11	115-199
	29		W1275	0127	22		49-61-11	ALL
	30		W1275	6019	22		49-61-11	001-099
	30		W1275	0350	24		24-33-12	115-199
	30		W1275	0352	24		24-33-12	115-199
	31		W1275	6020	22		49-61-11	ALL
	32	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 83

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41660J		E4-2/ /		RCPT- (continued)				ALL
	32		W1275	6019	22		49-61-11	115-199
	33		W1275	0348	24		24-33-12	001-099
	33	UNUSED						115-199
	34		W1275	0268	22		24-33-12	001-099
	34	UNUSED						115-199
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						001-099
	41	UNUSED						001-099
D41660P		E004-02/ /		PLUG				001-099
D41660P		E4-2/ /		PLUG				115-199
	1		W2650	0010	22		49-61-11	ALL
	2		W2650	0051	22		49-61-11	ALL
	3		W2650	0012	22		49-61-11	ALL
	4		W2650	0013	22		49-61-11	ALL
	5		W2650	0014	22		49-61-11	ALL
	6		W2650	0015	22		49-61-11	ALL
	7		W2650	0016	22		49-61-11	ALL
	8		W2650	0052	22		49-61-11	ALL
	9		W2650	0028	22		49-94-11	001-099
	9		W2650	0018	22		SPARE	115-199
	10		W2650	0035	22		24-33-12	001-099
	10	UNUSED						115-199
	11		W2650	0020	24		24-34-11	001-099
	11		W2650	0020	22		24-34-11	115-199
	12		W2650	0021	22		49-61-11	ALL
	13	UNUSED						001-099
	13		W2650	0028	22		49-94-14	115-199
	14		W2650	0040	22		24-33-12	001-099
	14		W2650	0029	22		49-94-14	115-199
	15		W2650	0070	22		SPARE	001-099
	15	UNUSED						115-199
	16	UNUSED						001-099
	16		W2650	0030	22		49-94-14	115-199
	17		W2650	0056	24		49-71-11	001-099
	17		W2650	2001B	24		49-71-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 84

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41660P		E004-02/ /		PLUG (continued)				001-099
D41660P		E4-2/ /		PLUG (continued)				115-199
	18	UNUSED						001-099
	18		W2650	2001R	24		49-71-11	115-199
	19		W2650	0057	24		49-73-11	001-099
	19		W2650	2002B	24		49-73-11	115-199
	20	UNUSED						001-099
	20		W2650	2002R	24		49-73-11	115-199
	21		W2650	0060	24		49-61-14	001-099
	21		W2650	0060	22		49-61-14	115-199
	22		W2650	2501Z			23-41-12	001-099
	22		W2650	3501Z			23-41-12	115-199
	23		W2650	0039	22		24-33-12	001-099
	23	UNUSED						115-199
	24		W2650	2004B	24		24-34-11	001-099
	24		W2650	2004B	22		24-34-11	115-199
	25		W2650	2004R	24		24-34-11	001-099
	25		W2650	2004R	22		24-34-11	115-199
	26		W2650	2501B	24		23-41-12	001-099
	26		W2650	3501B	24		23-41-12	115-199
	27		W2650	2501R	24		23-41-12	001-099
	27		W2650	3501R	24		23-41-12	115-199
	28		W2650	0072	22		SPARE	001-099
	28		W2650	3501Y	24		23-41-12	115-199
	29		W2650	0050	22		49-61-11	ALL
	30		W2650	0046	22		49-61-11	001-099
	30	UNUSED						115-199
	31		W2650	0045	22		49-61-11	ALL
	32	UNUSED						001-099
	32		W2650	0046	22		49-61-11	115-199
	33		W2650	0038	22		24-33-12	001-099
	33	UNUSED						115-199
	34		W2650	0061	22		24-33-12	001-099
	34	UNUSED						115-199
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						001-099
	41	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 85

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41662J		E6-2/ /		RCPT				001-099
D41662J		E6-4/ /		RCPT				115-199
	1		W1020	0327	22		24-22-41	001-099
	1		W1032	0370	22		24-22-41	115-199
	2		W1020	0450	24		36-11-41	001-099
	2		W1032	0450	24		36-11-41	115-199
	3	UNUSED						ALL
	4		W1020	0318	22		49-61-11	001-099
	4		W1032	0318	22		49-61-11	115-199
	5		W1020	0321	22		49-61-11	001-099
	5		W1032	0321	22		49-61-11	115-199
	6		W1020	0322	22		49-61-11	001-099
	6		W1032	0322	22		49-61-11	115-199
	7		W1020	0320	22		49-61-11	001-099
	7		W1032	0320	22		49-61-11	115-199
	8	UNUSED						ALL
	9		W1020	0341	22		49-72-11	001-099
	9		W1032	0341	22		49-72-11	115-199
	10		W1020	0371	24		24-27-41	001-099
	10		W1032	0371	24		24-27-41	115-199
	11	UNUSED						ALL
	12		W1020	0323	22		49-61-11	001-099
	12		W1032	0323	22		49-61-11	115-199
	13		W1020	0319	22		49-61-11	001-099
	13		W1032	0319	22		49-61-11	115-199
	14	UNUSED						ALL
	15		W1020	0315	16		49-61-11	001-099
	15		W1032	0315	16		49-61-11	115-199
	16		W1020	0510	22		49-61-11	001-099
	16		W1032	0510	22		49-61-11	115-199
	17		W1020	0042	24		49-71-11	001-099
	17		W1032	2101B	24		49-71-11	115-199
	18	UNUSED						001-099
	18		W1032	2101R	24		49-71-11	115-199
	19	UNUSED						ALL
	20		W1020	0041	24		49-73-11	001-099
	20		W1032	2102B	24		49-73-11	115-199
	21	UNUSED						001-099
	21		W1032	2102R	24		49-73-11	115-199
	22		W1020	0344	22		49-41-11	001-099
	22		W1032	0344	22		49-41-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 86

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41662J		E6-2/ /		RCPT (continued)				001-099
D41662J		E6-4/ /		RCPT (continued)				115-199
	23	UNUSED						ALL
	24	UNUSED						001-099
	24		W1032	0115	24		29-33-11	115-199
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
D41662P		E006-02/ /		PLUG				001-099
D41662P		E6-4/ /		PLUG				115-199
	1		W2650	0001	22		24-22-41	ALL
	2		W2650	0003	24		36-11-41	ALL
	3	UNUSED						001-099
	3		W2650	0018	22		SPARE	115-199
	4		W2650	0021	22		49-61-11	ALL
	5		W2650	0023	22		49-61-11	ALL
	6		W2650	0024	22		49-61-11	ALL
	7		W2650	0012	22		49-61-11	001-099
	7		W2650	0025	22		49-61-11	115-199
	8	UNUSED						ALL
	9		W2650	0027	22		49-72-11	ALL
	10		W2650	0026	24		24-27-41	ALL
	11	UNUSED						ALL
	12		W2650	0048	22		49-61-11	ALL
	13		W2650	0052	22		49-61-11	ALL
	14	UNUSED						ALL
	15		W2650	0036	16		49-61-11	ALL
	16		W2650	0047	22		49-61-11	ALL
	17		W2650	0056	24		49-71-11	001-099
	17		W2650	2001B	24		49-71-11	115-199
	18	UNUSED						001-099
	18		W2650	2001R	24		49-71-11	115-199
	19	UNUSED						ALL
	20		W2650	0057	24		49-73-11	001-099
	20		W2650	2002B	24		49-73-11	115-199
	21	UNUSED						001-099
	21		W2650	2002R	24		49-73-11	115-199
	22		W2650	0034	22		49-41-11	ALL
	23	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 87

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41662P		E006-02/ /		PLUG (continued)				001-099
D41662P		E6-4/ /		PLUG (continued)				115-199
	24		W2650	0002	24		SPARE	001-099
	24		W2650	0017	24		29-33-11	115-199
	25		W2650	0066	22		SPARE	001-099
	25	UNUSED						115-199
	26		W2650	0068	22		SPARE	001-099
	26	UNUSED						115-199
	27	UNUSED						ALL
	28	UNUSED						ALL
D41664J		E4-2/ /		RCPT-				ALL
	1	UNUSED						001-099
	1		W1275	0412	24		32-46-11	115-199
	1		W1275	0413	24		32-46-11	115-199
	2		W1275	5747	24		21-51-15	ALL
	2		W1275	5748	24		21-51-15	ALL
	3	UNUSED						001-099
	3		W1275	0418	24		32-46-11	115-199
	3		W1275	0419	24		32-46-11	115-199
	4	UNUSED						001-099
	4		W1275	0421	24		32-46-11	115-199
	4		W1275	0422	24		32-46-11	115-199
	5	UNUSED						001-099
	5		W1275	0424	24		32-46-11	115-199
	5		W1275	0425	24		32-46-11	115-199
	6	UNUSED						001-099
	6		W1275	0427	24		32-46-11	115-199
	6		W1275	0428	24		32-46-11	115-199
	7	UNUSED						001-099
	7		W1275	0430	24		32-46-11	115-199
	7		W1275	0431	24		32-46-11	115-199
	8	UNUSED						001-099
	8		W1275	0433	24		32-46-11	115-199
	8		W1275	0434	24		32-46-11	115-199
	9		W1275	0946	24		32-42-11	001-099
	9		W1275	0948	24		32-42-11	001-099
	9	UNUSED						115-199
	10		W1275	5602	24		36-22-11	ALL
	11		W1275	0954	24		32-42-11	001-099
	11		W1275	0955	24		32-42-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 88

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41664J		E4-2/ /		RCPT- (continued)				ALL
	11	UNUSED						115-199
	12		W1275	6241	24		32-42-11	001-099
	12		W1275	6242	24		32-42-11	001-099
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20		W1275	0913	24		32-46-11	115-199
	21		W1275	6180	24		32-41-11	115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
	32		W1275	0415	24		32-46-11	115-199
	32		W1275	0416	24		32-46-11	115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38		W1275	0946	24		32-42-11	115-199
	38		W1275	0948	24		32-42-11	115-199
	39		W1275	6241	24		32-42-11	115-199
	39		W1275	6242	24		32-42-11	115-199
	40		W1275	0951	24		32-42-11	115-199
	40		W1275	0952	24		32-42-11	115-199
	41		W1275	0954	24		32-42-11	115-199
	41		W1275	0955	24		32-42-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 89

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41664P D41664P		E004-02/ / E4-2/ /		PLUG PLUG				001-099 115-199
	1		W4006	0272	22		SPARE	001-099
	1		W4006	0215	24		32-46-11	115-199
	2		W4006	0163	24		21-51-15	ALL
	3	UNUSED						001-099
	3		W4006	0217	24		32-46-11	115-199
	4	UNUSED						001-099
	4		W4006	0218	24		32-46-11	115-199
	5	UNUSED						001-099
	5		W4006	0219	24		32-46-11	115-199
	6	UNUSED						001-099
	6		W4006	0220	24		32-46-11	115-199
	7	UNUSED						001-099
	7		W4006	0221	24		32-46-11	115-199
	8	UNUSED						001-099
	8		W4006	0222	24		32-46-11	115-199
	9		W4006	0270	22		32-42-11	001-099
	9	UNUSED						115-199
	10		W4006	0033	24		36-22-11	ALL
	11		W4006	0267	22		32-42-11	001-099
	11	UNUSED						115-199
	12		W4006	0268	22		32-42-11	001-099
	12		W4006	0034	24		21-58-14	115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20		W4006	0211	24		32-46-11	115-199
	21		W4006	0223	24		32-41-11	115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 90

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41664P		E004-02/ /		PLUG (continued)				001-099
D41664P		E4-2/ /		PLUG (continued)				115-199
	30		W4006	0272	22		SPARE	115-199
	31	UNUSED						115-199
	32		W4006	0216	24		32-46-11	115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38		W4006	0270	22		32-42-11	115-199
	39		W4006	0268	22		32-42-11	115-199
	40		W4006	0185	22		32-42-11	115-199
	41		W4006	0267	22		32-42-11	115-199
D41668J		E6-4/ /		RCPT				115-199
	1		W1032	2518B	22		32-42-11	115-199
	2		W1032	2518R	22		32-42-11	115-199
	3		W1032	2519B	22		32-42-11	115-199
	4		W1032	2519R	22		32-42-11	115-199
	5		W1032	FRAE			32-42-11	115-199
	6	UNUSED						115-199
	7		W1032	4501G	22		32-46-11	115-199
	8		W1032	4501W	22		32-46-11	115-199
	9		W1032	4502G	22		32-46-11	115-199
	10		W1032	4502W	22		32-46-11	115-199
	11		W1032	FRAM			32-42-11	115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
			W1032	0408	20		32-42-11	115-199
			W1032	0529	20		32-42-11	115-199
			W1032	2518Z			32-42-11	115-199
			W1032	2519Z			32-42-11	115-199
			W1032	FRAE			32-42-11	115-199
			W1032	FRAM			32-42-11	115-199
D41668P		E6-4/ /		PLUG-				115-199
	1		W2642	2501B	20		32-42-11	115-199
	2		W2642	2501R	20		32-42-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 91

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41668P		E6-4/ /		PLUG- (continued)				115-199
	3		W2642	2502B	20		32-42-11	115-199
	4		W2642	2502R	20		32-42-11	115-199
	5		W2642	2501Z			32-42-11	115-199
	6		W2642	0001	20		SPARE	115-199
	7		W2642	4501G	20		32-46-11	115-199
	8		W2642	4501W	20		32-46-11	115-199
	9		W2642	4502G	20		32-46-11	115-199
	10		W2642	4502W	20		32-46-11	115-199
	11		W2642	2502Z			32-42-11	115-199
	12		W2642	0003	20		SPARE	115-199
	13		W2642	0002	20		SPARE	115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
D41670J		E6-4/ /		RCPT				115-199
	1		W1032	2514B	22		32-42-11	115-199
	2		W1032	2514R	22		32-42-11	115-199
	3		W1032	2515B	22		32-42-11	115-199
	4		W1032	2515R	22		32-42-11	115-199
	5		W1032	FRAC			32-42-11	115-199
	6		W1032	4505G	22		32-46-11	115-199
	7		W1032	4505W	22		32-46-11	115-199
	8		W1032	4506G	22		32-46-11	115-199
	9		W1032	4506W	22		32-46-11	115-199
	10		W1032	0394	22		32-42-11	115-199
	11		W1032	0431	22		32-42-12	115-199
	12		W1032	0432	22		32-42-12	115-199
	13		W1032	0397	22		32-42-11	115-199
	14		W1032	0395	22		32-42-11	115-199
	15		W1032	0398	22		32-42-11	115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18		W1032	FRAK			32-42-11	115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 92

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41670J		E6-4/ /		RCPT (continued)				115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
			W1032	0406	20		32-42-11	115-199
			W1032	0527	20		32-42-11	115-199
			W1032	2514Z			32-42-11	115-199
			W1032	2515Z			32-42-11	115-199
			W1032	FRAC			32-42-11	115-199
			W1032	FRAK			32-42-11	115-199
D41670P		E6-4/ /		PLUG				115-199
	1		W2644	2501B	20		32-42-11	115-199
	2		W2644	2501R	20		32-42-11	115-199
	3		W2644	2502B	20		32-42-11	115-199
	4		W2644	2502R	20		32-42-11	115-199
	5		W2644	2501Z			32-42-11	115-199
	6		W2644	4501G	20		32-46-11	115-199
	7		W2644	4501W	20		32-46-11	115-199
	8		W2644	4502G	20		32-46-11	115-199
	9		W2644	4502W	20		32-46-11	115-199
	10		W2644	0001	20		32-42-11	115-199
	11		W2644	0002	20		32-42-12	115-199
	12		W2644	0003	20		32-42-12	115-199
	13		W2644	0004	20		32-42-11	115-199
	14		W2644	0005	20		32-42-11	115-199
	15		W2644	0006	20		32-42-11	115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18		W2644	2502Z			32-42-11	115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21		W2644	0010	20		SPARE	115-199
	22		W2644	0011	20		SPARE	115-199
	23		W2644	0009	20		SPARE	115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 93

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41670P		E6-4/ /		PLUG (continued)				115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
D41672J		E6-4/ /		RCPT				115-199
	1		W1032	4503W	22		32-46-11	115-199
	2		W1032	4503G	22		32-46-11	115-199
	3		W1032	2521B	22		32-42-11	115-199
	4		W1032	FRAF			32-42-11	115-199
	5		W1032	2521R	22		32-42-11	115-199
	6		W1032	FRAN			32-42-11	115-199
	7		W1032	FRDA			32-42-12	115-199
	8	UNUSED						115-199
	9		W1032	2520B	22		32-42-11	115-199
	10		W1032	2520R	22		32-42-11	115-199
	11		W1032	2522B	22		32-42-12	115-199
	12		W1032	2522R	22		32-42-12	115-199
	13		W1032	4504W	22		32-46-11	115-199
	14		W1032	4504G	22		32-46-11	115-199
	15		W1032	0401	22		32-42-11	115-199
	16		W1032	0402	22		32-42-11	115-199
	17	UNUSED						115-199
	18		W1032	0404	22		32-42-11	115-199
	19		W1032	0405	22		32-42-11	115-199
	20		W1032	0433	22		32-42-12	115-199
	21		W1032	0434	22		32-42-12	115-199
	22		W1032	0435	22		32-42-12	115-199
	23		W1032	0430	22		32-42-12	115-199
	24		W1032	0437	22		32-42-12	115-199
	25		W1032	0438	22		32-42-12	115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
			W1032	0409	20		32-42-11	115-199
			W1032	0505	22		32-42-12	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 94

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41672J		E6-4/ /		RCPT (continued)				115-199
			W1032	0530	20		32-42-11	115-199
			W1032	2520Z			32-42-11	115-199
			W1032	2521Z			32-42-11	115-199
			W1032	2522Z			32-42-12	115-199
			W1032	FRAF			32-42-11	115-199
			W1032	FRAN			32-42-11	115-199
			W1032	FRDA			32-42-12	115-199
D41672P		E6-4/ /		PLUG-				115-199
	1		W2646	4501W	20		32-46-11	115-199
	2		W2646	4501G	20		32-46-11	115-199
	3		W2646	2502B	20		32-42-11	115-199
	4		W2646	2501Z			32-42-11	115-199
	5		W2646	2502R	20		32-42-11	115-199
	6		W2646	2502Z			32-42-11	115-199
	7		W2646	2503Z			32-42-12	115-199
	8	UNUSED						115-199
	9		W2646	2501B	20		32-42-11	115-199
	10		W2646	2501R	20		32-42-11	115-199
	11		W2646	2503B	20		32-42-12	115-199
	12		W2646	2503R	20		32-42-12	115-199
	13		W2646	4502W	20		32-46-11	115-199
	14		W2646	4502G	20		32-46-11	115-199
	15		W2646	0005	20		32-42-11	115-199
	16		W2646	0006	20		32-42-11	115-199
	17	UNUSED						115-199
	18		W2646	0002	20		32-42-11	115-199
	19		W2646	0003	20		32-42-11	115-199
	20		W2646	0007	20		32-42-12	115-199
	21		W2646	0008	20		32-42-12	115-199
	22		W2646	0009	20		32-42-12	115-199
	23		W2646	0010	20		32-42-12	115-199
	24		W2646	0011	20		32-42-12	115-199
	25		W2646	0012	20		32-42-12	115-199
	26		W2646	0016	20		SPARE	115-199
	27		W2646	0017	20		SPARE	115-199
	28		W2646	0013	20		SPARE	115-199
	29		W2646	0014	20		SPARE	115-199
	30	UNUSED						115-199
	31	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 95

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41674J		E6-4/ /		RCPT				115-199
	1		W1032	2516B	22		32-42-11	115-199
	2		W1032	2516R	22		32-42-11	115-199
	3		W1032	2517B	22		32-42-11	115-199
	4		W1032	2517R	22		32-42-11	115-199
	5		W1032	FRAD			32-42-11	115-199
	6		W1032	4507G	22		32-46-11	115-199
	7		W1032	4507W	22		32-46-11	115-199
	8		W1032	4508G	22		32-46-11	115-199
	9		W1032	4508W	22		32-46-11	115-199
	10		W1032	FRAL			32-42-11	115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
			W1032	0407	20		32-42-11	115-199
			W1032	0528	20		32-42-11	115-199
			W1032	2516Z			32-42-11	115-199
			W1032	2517Z			32-42-11	115-199
			W1032	FRAD			32-42-11	115-199
			W1032	FRAL			32-42-11	115-199
D41674P		E6-4/ /		PLUG				115-199
	1		W2648	2501B	20		32-42-11	115-199
	2		W2648	2501R	20		32-42-11	115-199
	3		W2648	2502B	20		32-42-11	115-199
	4		W2648	2502R	20		32-42-11	115-199
	5		W2648	2501Z			32-42-11	115-199
	6		W2648	4501G	20		32-46-11	115-199
	7		W2648	4501W	20		32-46-11	115-199
	8		W2648	4502G	20		32-46-11	115-199
	9		W2648	4502W	20		32-46-11	115-199
	10		W2648	2502Z			32-42-11	115-199
	11		W2648	0002	20		SPARE	115-199
	12		W2648	0003	20		SPARE	115-199
	13		W2648	0001	20		SPARE	115-199
	14	UNUSED						115-199
	15	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 96

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41675J		P50/ /		RCPT				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1140	0411	22		22-12-31	ALL
	4		W1140	0412	22		22-12-31	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1140	0523	22		27-48-21	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D41675P		P050-00/ /		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W4475	0008	22		22-12-31	ALL
	4		W4475	0009	22		22-12-31	ALL
	5		W4475	0062	22		SPARE	001-099
	5		W4475	0031	22		SPARE	115-199
	6	UNUSED						001-099
	6		W4475	0060	22		SPARE	115-199
	7		W4475	0078	22		27-48-21	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D41676J		E6-2/ /		RCPT				001-099
D41676J		E6-4/ /		RCPT				115-199
	1		W1020	0328	22		49-14-11	001-099
	1		W1032	0328	22		49-14-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 97

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41676J		E6-2/ /		RCPT (continued)				001-099
D41676J		E6-4/ /		RCPT (continued)				115-199
	2		W1020	0329	22		49-14-11	001-099
	2		W1032	0329	22		49-14-11	115-199
	3		W1020	0330	22		49-14-11	001-099
	3		W1032	0330	22		49-14-11	115-199
	4		W1020	0331	22		49-14-11	001-099
	4		W1032	0331	22		49-14-11	115-199
	5		W1020	0332	22		49-14-11	001-099
	5		W1032	0332	22		49-14-11	115-199
	6		W1020	0333	22		49-14-11	001-099
	6		W1032	0333	22		49-14-11	115-199
	7		W1020	0334	22		49-14-11	001-099
	7		W1032	0334	22		49-14-11	115-199
	8		W1020	0335	22		49-14-11	001-099
	8		W1032	0335	22		49-14-11	115-199
	9	UNUSED						001-099
	9		W1032	0336	22		SPARE	115-199
	10		W1020	0337	22		49-14-11	001-099
	10		W1032	0337	22		49-14-11	115-199
	11		W1020	0338	22		49-14-11	001-099
	11		W1032	0338	22		49-14-11	115-199
	12		W1020	0339	22		49-14-11	001-099
	12		W1032	0339	22		49-14-11	115-199
	13		W1020	0340	22		49-14-11	001-099
	13		W1032	0340	22		49-14-11	115-199
	14		W1020	0343	22		49-61-14	001-099
	14		W1032	0343	22		49-61-14	115-199
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W1020	2504B	22		49-14-11	001-099
	19		W1032	2504B	22		49-14-11	115-199
	20		W1020	2504R	22		49-14-11	001-099
	20		W1032	2504R	22		49-14-11	115-199
	21		W1020	2505B	22		49-14-11	001-099
	21		W1032	2505B	22		49-14-11	115-199
	22		W1020	2505R	22		49-14-11	001-099
	22		W1032	2505R	22		49-14-11	115-199
	23		W1020	2506B	22		49-14-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 98

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41676J		E6-2/ /		RCPT (continued)				001-099
D41676J		E6-4/ /		RCPT (continued)				115-199
	23		W1032	2506B	22		49-14-11	115-199
	24		W1020	2506R	22		49-14-11	001-099
	24		W1032	2506R	22		49-14-11	115-199
	25		W1020	2507B	22		49-14-11	001-099
	25		W1032	2507B	22		49-14-11	115-199
	26		W1020	2507R	22		49-14-11	001-099
	26		W1032	2507R	22		49-14-11	115-199
	27		W1020	2508B	22		49-14-11	001-099
	27		W1032	2508B	22		49-14-11	115-199
	28		W1020	2508R	22		49-14-11	001-099
	28		W1032	2508R	22		49-14-11	115-199
	29		W1020	FRAG			49-14-11	001-099
	29		W1032	FRAG			49-14-11	115-199
	30		W1020	2512B	22		49-14-11	001-099
	30		W1032	2512B	22		49-14-11	115-199
	31		W1020	2512R	22		49-14-11	001-099
	31		W1032	2512R	22		49-14-11	115-199
	32		W1020	2513B	22		49-14-11	001-099
	32		W1032	2513B	22		49-14-11	115-199
	33		W1020	2513R	22		49-14-11	001-099
	33		W1032	2513R	22		49-14-11	115-199
	34	TC	W1020	4601G	22		49-14-11	001-099
	34		W1032	4601G	22		49-14-11	115-199
	35	TD	W1020	4601W	22		49-14-11	001-099
	35		W1032	4601W	22		49-14-11	115-199
	36	TC	W1020	4602G	22		49-14-11	001-099
	36		W1032	4602G	22		49-14-11	115-199
	37	TD	W1020	4602W	22		49-14-11	001-099
	37		W1032	4602W	22		49-14-11	115-199
	38	TC	W1020	4603G	22		49-14-11	001-099
	38		W1032	4603G	22		49-14-11	115-199
	39	TD	W1020	4603W	22		49-14-11	001-099
	39		W1032	4603W	22		49-14-11	115-199
	40		W1020	FRAH			49-14-11	001-099
	40		W1032	FRAH			49-14-11	115-199
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 99

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41676J		E6-2/ /		RCPT (continued)				001-099
D41676J		E6-4/ /		RCPT (continued)				115-199
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
			W1020	2504Z			49-14-11	001-099
			W1020	2505Z			49-14-11	001-099
			W1020	2506Z			49-14-11	001-099
			W1020	2507Z			49-14-11	001-099
			W1020	2508Z			49-14-11	001-099
			W1020	2512Z			49-14-11	001-099
			W1020	2513Z			49-14-11	001-099
			W1020	4601Z			49-14-11	001-099
			W1020	4602Z			49-14-11	001-099
			W1020	4603Z			49-14-11	001-099
			W1020	FRAG			49-14-11	001-099
			W1020	FRAH			49-14-11	001-099
			W1032	2504Z			49-14-11	115-199
			W1032	2505Z			49-14-11	115-199
			W1032	2506Z			49-14-11	115-199
			W1032	2507Z			49-14-11	115-199
			W1032	2508Z			49-14-11	115-199
			W1032	2512Z			49-14-11	115-199
			W1032	2513Z			49-14-11	115-199
			W1032	4601Z			49-14-11	115-199
			W1032	4602Z			49-14-11	115-199
			W1032	4603Z			49-14-11	115-199
			W1032	FRAG			49-14-11	115-199
			W1032	FRAH			49-14-11	115-199
D41676P		E6-2/ /		PLUG				001-099
D41676P		E6-4/ /		PLUG				115-199
	1		W2654	0003	20		49-14-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 100

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41676P		E6-2/ /		PLUG (continued)				001-099
D41676P		E6-4/ /		PLUG (continued)				115-199
	2		W2654	0004	20		49-14-11	ALL
	3		W2654	0005	20		49-14-11	ALL
	4		W2654	0006	20		49-14-11	ALL
	5		W2654	0007	20		49-14-11	ALL
	6		W2654	0008	20		49-14-11	ALL
	7		W2654	0009	20		49-14-11	ALL
	8		W2654	0010	20		49-14-11	ALL
	9	UNUSED						ALL
	10		W2654	0012	20		49-14-11	ALL
	11		W2654	0013	20		49-14-11	ALL
	12		W2654	0014	20		49-14-11	ALL
	13		W2654	0015	20		49-14-11	ALL
	14		W2654	0028	20		49-61-14	ALL
	15	UNUSED						001-099
	15		W2654	0049	20		SPARE	115-199
	16	UNUSED						001-099
	16		W2654	0037	20		SPARE	115-199
	17		W2654	0042	20		SPARE	ALL
	18		W2654	0043	20		SPARE	ALL
	19		W2654	2504B	20		49-14-11	ALL
	20		W2654	2504R	20		49-14-11	ALL
	21		W2654	2505B	20		49-14-11	ALL
	22		W2654	2505R	20		49-14-11	ALL
	23		W2654	2506B	20		49-14-11	ALL
	24		W2654	2506R	20		49-14-11	ALL
	25		W2654	2507B	20		49-14-11	ALL
	26		W2654	2507R	20		49-14-11	ALL
	27		W2654	2508B	20		49-14-11	ALL
	28		W2654	2508R	20		49-14-11	ALL
	29		W2654	FRAA			49-14-11	ALL
	30		W2654	2509B	20		49-14-11	ALL
	31		W2654	2509R	20		49-14-11	ALL
	32		W2654	2510B	20		49-14-11	ALL
	33		W2654	2510R	20		49-14-11	ALL
	34	TC	W2654	4501G	20		49-14-11	001-099
	34		W2654	4501G	20		49-14-11	115-199
	35	TD	W2654	4501W	20		49-14-11	001-099
	35		W2654	4501W	20		49-14-11	115-199
	36	TC	W2654	4502G	20		49-14-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 101

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41676P		E6-2/ /		PLUG (continued)				001-099
D41676P		E6-4/ /		PLUG (continued)				115-199
	36		W2654	4502G	20		49-14-11	115-199
	37	TD	W2654	4502W	20		49-14-11	001-099
	37		W2654	4502W	20		49-14-11	115-199
	38	TC	W2654	4503G	20		49-14-11	001-099
	38		W2654	4503G	20		49-14-11	115-199
	39	TD	W2654	4503W	20		49-14-11	001-099
	39		W2654	4503W	20		49-14-11	115-199
	40		W2654	FRAB			49-14-11	ALL
	41		W2654	0044	20		SPARE	ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
			W2654	2504Z			49-14-11	ALL
			W2654	2505Z			49-14-11	ALL
			W2654	2506Z			49-14-11	ALL
			W2654	2507Z			49-14-11	ALL
			W2654	2508Z			49-14-11	ALL
			W2654	2509Z			49-14-11	ALL
			W2654	2510Z			49-14-11	ALL
			W2654	4501Z			49-14-11	ALL
			W2654	4502Z			49-14-11	ALL
			W2654	4503Z			49-14-11	ALL
			W2654	FRAA			49-14-11	ALL
			W2654	FRAB			49-14-11	ALL
D41678J		E6-2/ /		RCPT				001-099
D41678J		E6-4/ /		RCPT				115-199
	1		W1020	2502B	22		49-14-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 102

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41678J		E6-2/ /		RCPT (continued)				001-099
D41678J		E6-4/ /		RCPT (continued)				115-199
	1		W1032	2502B	22		49-14-11	115-199
	2		W1020	2502R	22		49-14-11	001-099
	2		W1032	2502R	22		49-14-11	115-199
	3		W1020	2503B	22		49-14-11	001-099
	3		W1032	2503B	22		49-14-11	115-199
	4		W1020	2503R	22		49-14-11	001-099
	4		W1032	2503R	22		49-14-11	115-199
	5		W1020	2501B	22		49-14-11	001-099
	5		W1032	2501B	22		49-14-11	115-199
	6		W1020	2501R	22		49-14-11	001-099
	6		W1032	2501R	22		49-14-11	115-199
	7		W1020	FRAI			49-14-11	001-099
	7		W1032	FRAI			49-14-11	115-199
	8		W1020	4251B	22		49-14-11	001-099
	8		W1032	4251B	22		49-14-11	115-199
	9		W1020	4251G	22		49-14-11	001-099
	9		W1032	4251G	22		49-14-11	115-199
	10		W1020	4251R	22		49-14-11	001-099
	10		W1032	4251R	22		49-14-11	115-199
	11		W1020	4251Y	22		49-14-11	001-099
	11		W1032	4251Y	22		49-14-11	115-199
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
			W1020	2501Z			49-14-11	001-099
			W1020	2502Z			49-14-11	001-099
			W1020	2503Z			49-14-11	001-099
			W1020	4251Z			49-14-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 103

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41678J		E6-2/ /		RCPT (continued)				001-099
D41678J		E6-4/ /		RCPT (continued)				115-199
			W1020	FRAI			49-14-11	001-099
			W1032	2501Z			49-14-11	115-199
			W1032	2502Z			49-14-11	115-199
			W1032	2503Z			49-14-11	115-199
			W1032	4251Z			49-14-11	115-199
			W1032	FRAI			49-14-11	115-199
D41678P		E006-02/ /		PLUG				001-099
D41678P		E006-04/ /		PLUG				115-199
	1		W2654	2501B	20		49-14-11	ALL
	2		W2654	2501R	20		49-14-11	ALL
	3		W2654	2502B	20		49-14-11	ALL
	4		W2654	2502R	20		49-14-11	ALL
	5		W2654	2503B	20		49-14-11	ALL
	6		W2654	2503R	20		49-14-11	ALL
	7		W2654	FRAC			49-14-11	ALL
	8		W2654	4251B	20		49-14-11	ALL
	9		W2654	4251G	20		49-14-11	ALL
	10		W2654	4251R	20		49-14-11	ALL
	11		W2654	4251Y	20		49-14-11	ALL
	12		W2654	2511B	20		SPARE	ALL
	13		W2654	2511R	20		SPARE	ALL
	14	UNUSED						ALL
	15		W2654	0041	20		SPARE	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	DED		W2654	2511Z			SPARE	ALL
			W2654	2501Z			49-14-11	ALL
			W2654	2502Z			49-14-11	ALL
			W2654	2503Z			49-14-11	ALL
			W2654	4251Z			49-14-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 104

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41678P		E006-02/ /		PLUG (continued)				001-099
D41678P		E006-04/ /		PLUG (continued)				115-199
			W2654	FRAC			49-14-11	ALL
D41679J		E002-02/ /		RCPT-				001-099
D41679J		E2-2/ /		RCPT-				115-199
	1		W1173	5079Z			34-43-11	ALL
	2		W1173	5079B	24		34-43-11	ALL
	3		W1173	5079R	24		34-43-11	ALL
	4		W1173	5080Z			34-43-11	001, 003-099, 115-199
	4	UNUSED						002
	5		W1173	5080B	24		34-43-11	001, 003-099, 115-199
	5	UNUSED						002
	6		W1173	5080W	24		34-43-11	001, 003-099, 115-199
	6	UNUSED						002
	7		W1173	0035	24		34-22-37	ALL
	8		W1173	0042	24		34-22-37	ALL
	9		W1173	0036	24		34-22-37	ALL
	10		W1173	0041	24		34-22-37	ALL
	11		W1173	5004R	24		34-22-38	ALL
	12		W1173	5004B	24		34-22-38	ALL
	13		W1173	5004Z			34-22-38	ALL
	14		W1173	5029Z			34-22-39	ALL
	15		W1173	5029R	24		34-22-39	ALL
	16		W1173	5029B	24		34-22-39	ALL
	17		W1173	5026Z			34-22-39	ALL
	18		W1173	5026R	24		34-22-39	ALL
	19		W1173	5026B	24		34-22-39	ALL
	20		W1173	5015Z			34-22-39	ALL
	21		W1173	5015R	24		34-22-39	ALL
	22		W1173	5015B	24		34-22-39	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						001-099
	25		W1173	5184R	24		34-22-38	115-199
	26	UNUSED						001-099
	26		W1173	5184B	24		34-22-38	115-199
	27	UNUSED						001-099
	27		W1173	5184Z			34-22-38	115-199
	28	UNUSED						ALL
	29	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 105

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41679J		E002-02/ /		RCPT- (continued)				001-099
D41679J		E2-2/ /		RCPT- (continued)				115-199
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W1173	0144	22		22-14-21	ALL
	33		W1173	0506	24		34-22-37	ALL
	34		W1173	0198	22		22-14-21	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W1173	0199	22		22-14-21	ALL
	39		W1173	5101R	24		22-15-11	ALL
	40		W1173	5101B	24		22-15-11	ALL
	41		W1173	FRBB			22-15-11	ALL
	42		W1173	0153	22		22-15-12	ALL
	43		W1173	0151	22		22-15-12	ALL
	44		W1173	5088R	24		22-12-21	ALL
	45		W1173	5088B	24		22-12-21	ALL
	46		W1173	5088Z			22-12-21	ALL
	47		W1173	5090B	24		22-12-21	ALL
	48		W1173	5090R	24		22-12-21	ALL
	49		W1173	5090Z			22-12-21	ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53		W1173	5212R	24		34-61-24	001-099
	53	UNUSED						115-199
	54		W1173	5212B	24		34-61-24	001-099
	54	UNUSED						115-199
	55		W1173	FRLM			34-61-24	001-099
	55	UNUSED						115-199
			W1173	0715	20		34-61-24	001-099
			W1173	5212Z			34-61-24	001-099
			W1173	FRLM			34-61-24	001-099
			W1173	0273	20		22-15-11	ALL
			W1173	5101Z			22-15-11	ALL
			W1173	FRBB			22-15-11	ALL
D41679P		E002-02/ /		PLUG-				001-099
D41679P		E2-2/ /		PLUG-				115-199
	1		W4481	5016Z			34-43-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 106

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41679P		E002-02/ /		PLUG- (continued)				001-099
D41679P		E2-2/ /		PLUG- (continued)				115-199
	2		W4481	5016B	24		34-43-11	ALL
	3		W4481	5016R	24		34-43-11	ALL
	4		W4481	5015Z			34-43-11	001, 003-099, 115-199
	4		W4481	5015Z			SPARE	002
	5		W4481	5015B	24		34-43-11	001, 003-099, 115-199
	5		W4481	5015B	24		SPARE	002
	6		W4481	5015W	24		34-43-11	001, 003-099, 115-199
	6		W4481	5015W	24		SPARE	002
	7		W4481	0011	24		34-22-37	ALL
	8		W4481	0012	24		34-22-37	ALL
	9		W4481	0013	24		34-22-37	ALL
	10		W4481	0014	24		34-22-37	ALL
I	11		W4481	5017R	24		34-22-38	001-099
I	11		W4481	5017R	24		SPARE	115-199
I	12		W4481	5017B	24		34-22-38	001-099
I	12		W4481	5017B	24		SPARE	115-199
I	13		W4481	5017Z			34-22-38	001-099
I	13		W4481	5017Z			SPARE	115-199
	14		W4481	5018Z			34-22-39	ALL
	15		W4481	5018R	24		34-22-39	ALL
	16		W4481	5018B	24		34-22-39	ALL
	17		W4481	5019Z			34-22-39	ALL
	18		W4481	5019R	24		34-22-39	ALL
	19		W4481	5019B	24		34-22-39	ALL
	20		W4481	5020Z			34-22-39	ALL
	21		W4481	5020R	24		34-22-39	ALL
	22		W4481	5020B	24		34-22-39	ALL
I	23	UNUSED						001-099
I	23		W4481	5120R	22		34-61-24	115-199
I	24	UNUSED						001-099
I	24		W4481	5120B	22		34-61-24	115-199
	25	UNUSED						001-099
	25		W4481	5039R	24		34-22-38	115-199
	26	UNUSED						001-099
	26		W4481	5039B	24		34-22-38	115-199
	27	UNUSED						001-099
	27		W4481	5039Z			34-22-38	115-199
I	28	UNUSED						001-099
I	28		W4481	5023R	22		34-61-24	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 107

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41679P		E002-02/ /		PLUG- (continued)				001-099
D41679P		E2-2/ /		PLUG- (continued)				115-199
	29	UNUSED						001-099
	29		W4481	5023B	22		34-61-24	115-199
	30	UNUSED						001-099
	30		W4481	5023Z			34-61-24	115-199
	31	UNUSED						001-099
	31		W4481	5120Z			34-61-24	115-199
	32		W4481	0032	22		22-14-21	ALL
	33		W4481	0054	24		34-22-37	ALL
	34		W4481	0021	22		22-14-21	ALL
	35	UNUSED						ALL
	36		W4481	0023	22		SPARE	ALL
	37		W4481	0039	24		SPARE	001-099
	37	UNUSED						115-199
	38		W4481	0026	22		22-14-21	ALL
	39		W4481	5025R	24		22-15-11	ALL
	40		W4481	5025B	24		22-15-11	ALL
	41		W4481	5025Z			22-15-11	ALL
	42		W4481	0027	22		22-15-12	ALL
	43		W4481	0028	22		22-15-12	ALL
	44		W4481	5026R	24		22-12-21	ALL
	45		W4481	5026B	24		22-12-21	ALL
	46		W4481	5026Z			22-12-21	ALL
	47		W4481	5027B	24		22-12-21	ALL
	48		W4481	5027R	24		22-12-21	ALL
	49		W4481	5027Z			22-12-21	ALL
	50	UNUSED						001-099
	50		W4481	0034	24		SPARE	115-199
	51		W4481	0036	24		SPARE	ALL
	52		W4481	0038	24		SPARE	001-099
	52		W4481	0038	24		34-22-37	115-199
	53		W4481	5120R	24		34-61-24	001-099
	53		W4481	0039	24		SPARE	115-199
	54		W4481	5120B	24		34-61-24	001-099
	54	UNUSED						115-199
	55		W4481	5120Z			34-61-24	001-099
	55	UNUSED						115-199
D41680J		E6 RLY/PNL/		RCPT				ALL
	1	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 108

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41680J		E6 RLY/PNL/		RCPT (continued)				ALL
	1		W1024	0259	24		36-11-41	115-199
	2		W1024	0260	20		36-11-41	ALL
	3		W1024	0261	20		36-11-41	ALL
	4		W1024	0262	20		36-11-41	ALL
	5		W1024	0263	20		36-11-41	ALL
	6		W1024	0012	22		49-61-11	ALL
	7		W1024	0086	22		49-61-11	ALL
	8		W1024	0029	22		49-61-11	ALL
	9		W1024	0048	22		49-61-11	ALL
	10	UNUSED						001-099
	10		W1024	0031	22		49-61-11	115-199
	11		W1024	0032	22		49-61-11	ALL
	12		W1024	0036	22		49-61-11	ALL
	13		W1024	0028	22		49-61-11	ALL
	14		W1024	0047	22		49-61-11	ALL
	15	UNUSED						ALL
I	16		W1024	0082	24		24-33-12	001, 009
I	16		W1024	0403	24		24-33-12	002-008, 010-099
	16	UNUSED						115-199
	17		W1024	0083	24		24-34-11	001-099
	17		W1024	0083	22		24-34-11	115-199
	18		W1024	0024	22		49-61-11	ALL
	19		W1024	0242	22		49-61-11	001-099
	19		W1024	0045	22		49-61-11	115-199
	20	UNUSED						001-099
	20		W1024	0014	22		49-61-11	115-199
	21	UNUSED						ALL
I	22		W1024	0077	24		24-33-12	001-099
I	22	UNUSED						115-199
	23	UNUSED						ALL
	24		W1024	0099	22		49-72-11	ALL
	25		W1024	0105	22		49-94-11	001-099
	25		W1024	0105	22		49-94-14	115-199
	26	UNUSED						001-099
	26		W1024	0106	22		49-94-14	115-199
I	27		W1024	0071	24		24-33-12	001-099
I	27	UNUSED						115-199
	28	UNUSED						001-099
	28		W1024	0107	22		49-94-14	115-199
	29	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 109

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41680J		E6 RLY/PNL/		RCPT (continued)				ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W1024	2004B	24		24-34-11	001-099
	32		W1024	2004B	22		24-34-11	115-199
	33		W1024	2004R	24		24-34-11	001-099
	33		W1024	2004R	22		24-34-11	115-199
	34		W1024	2501B	24		23-41-12	001-099
	34		W1024	3501B	24		23-41-12	115-199
	35		W1024	2501R	24		23-41-12	001-099
	35		W1024	3501R	24		23-41-12	115-199
	36	UNUSED						001-099
	36		W1024	3501Y	24		23-41-12	115-199
	37		W1024	2501Z			23-41-12	001-099
	37		W1024	3501Z			23-41-12	115-199
	38		W1024	0256	22		49-61-11	ALL
	39		W1024	0118	22		49-61-11	ALL
	40		W1024	0419	22		49-61-11	ALL
	41	UNUSED						ALL
	42		W1024	0423	22		49-61-11	ALL
	43		W1024	0421	22		49-61-11	ALL
	44	UNUSED						ALL
	45		W1024	0095	24		24-33-12	001-099
	45	UNUSED						115-199
	46		W1024	0072	20		28-25-11	001-099
	46	UNUSED						115-199
	47	UNUSED						ALL
	48	UNUSED						ALL
	49		W1024	0342	22		49-61-11	001-099
	49	UNUSED						115-199
	50		W1024	0425	22		49-61-11	ALL
	51		W1024	0019	22		49-61-11	ALL
	52		W1024	0420	22		49-61-11	ALL
	53		W1024	0120	24		49-61-14	ALL
	54		W1024	0451	24		24-33-12	001-099
	54	UNUSED						115-199
	55	UNUSED						ALL
D41680P		E006-00/ /		PLUG				001-099
D41680P		E6/ /		PLUG				115-199
	1	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 110

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41680P		E006-00/ /		PLUG (continued)				001-099
D41680P		E6/ /		PLUG (continued)				115-199
	1		W2650	0002	24		36-11-41	115-199
	2		W2650	0004	20		36-11-41	ALL
	3		W2650	0005	20		36-11-41	ALL
	4		W2650	0006	20		36-11-41	ALL
	5		W2650	0007	20		36-11-41	ALL
	6		W2650	0008	22		49-61-11	ALL
	7		W2650	0009	22		49-61-11	ALL
	8		W2650	0010	22		49-61-11	ALL
	9		W2650	0011	22		49-61-11	ALL
	10	UNUSED						001-099
	10		W2650	0012	22		49-61-11	115-199
	11		W2650	0013	22		49-61-11	ALL
	12		W2650	0014	22		49-61-11	ALL
	13		W2650	0015	22		49-61-11	ALL
	14		W2650	0016	22		49-61-11	ALL
	15	UNUSED						ALL
I	16		W2650	0039	22		24-33-12	001-099
I	16	UNUSED						115-199
	17		W2650	0020	24		24-34-11	001-099
	17		W2650	0020	22		24-34-11	115-199
	18		W2650	0023	22		49-61-11	ALL
	19		W2650	0024	22		49-61-11	ALL
	20	UNUSED						001-099
	20		W2650	0025	22		49-61-11	115-199
	21	UNUSED						ALL
I	22		W2650	0038	22		24-33-12	001-099
I	22	UNUSED						115-199
	23		W2650	0071	22		SPARE	001-099
	23	UNUSED						115-199
	24		W2650	0027	22		49-72-11	ALL
	25		W2650	0028	22		49-94-11	001-099
	25		W2650	0028	22		49-94-14	115-199
	26	UNUSED						001-099
	26		W2650	0029	22		49-94-14	115-199
I	27		W2650	0040	22		24-33-12	001-099
I	27	UNUSED						115-199
	28	UNUSED						001-099
	28		W2650	0030	22		49-94-14	115-199
	29	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 111

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41680P		E006-00/ /		PLUG (continued)				001-099
D41680P		E6/ /		PLUG (continued)				115-199
	29		W2650	0037	22		SPARE	115-199
	30		W2650	2003B	24		SPARE	ALL
	31		W2650	2003R	24		SPARE	ALL
	32		W2650	2004B	24		24-34-11	001-099
	32		W2650	2004B	22		24-34-11	115-199
	33		W2650	2004R	24		24-34-11	001-099
	33		W2650	2004R	22		24-34-11	115-199
	34		W2650	2501B	24		23-41-12	001-099
	34		W2650	3501B	24		23-41-12	115-199
	35		W2650	2501R	24		23-41-12	001-099
	35		W2650	3501R	24		23-41-12	115-199
	36	UNUSED						001-099
	36		W2650	3501Y	24		23-41-12	115-199
	37		W2650	2501Z			23-41-12	001-099
	37		W2650	3501Z			23-41-12	115-199
	38		W2650	0034	22		49-41-11	ALL
	39		W2650	0044	22		49-61-11	ALL
	40		W2650	0043	22		49-61-11	ALL
	41	UNUSED						ALL
	42		W2650	0051	22		49-61-11	ALL
	43		W2650	0047	22		49-61-11	ALL
	44		W2650	0070	22		SPARE	001-099
	44	UNUSED						115-199
	45		W2650	0035	22		24-33-12	001-099
	45	UNUSED						115-199
	46		W2650	0058	20		28-25-11	001-099
	46	UNUSED						115-199
	47	UNUSED						ALL
	48	UNUSED						ALL
	49		W2650	0080	22		49-61-11	001-099
	49	UNUSED						115-199
	50		W2650	0050	22		49-61-11	ALL
	51		W2650	0041	22		49-61-11	ALL
	52		W2650	0042	22		49-61-11	ALL
	53		W2650	0060	24		49-61-14	001-099
	53		W2650	0060	22		49-61-14	115-199
	54		W2650	0061	22		24-33-12	001-099
	54	UNUSED						115-199
	55	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 112

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41681J		E006-01/ /		RCPT				001-099
	1		W1003	5017R	24		34-57-21	001-099
	2		W1003	5017B	24		34-57-21	001-099
	3		W1003	FRBS			34-57-21	001-099
	4	UNUSED						001-099
	5	UNUSED						001-099
	6	UNUSED						001-099
	7		W1003	1001	22		34-57-21	001-099
	8	UNUSED						001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
	16	UNUSED						001-099
	17	UNUSED						001-099
	18	UNUSED						001-099
	19	UNUSED						001-099
	20	UNUSED						001-099
	21	UNUSED						001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
	DED		W1003	1001Z			34-57-21	001-099
			W1003	0167	20		34-57-21	001-099
			W1003	5017Z			34-57-21	001-099
			W1003	FRBS			34-57-21	001-099
D41681P		E006-01/ /		PLUG-				001-099
	1		W2229	5001R	24		34-57-21	001-099
	2		W2229	5001B	24		34-57-21	001-099
	3		W2229	5001Z			34-57-21	001-099
	4	UNUSED						001-099
	5	UNUSED						001-099
	6	UNUSED						001-099
	7		W2229	1003	22		34-57-21	001-099
	7		W2229	1003	20		34-57-21	010-099
	8		W2229	2502B	24		SPARE	001-099
	8	UNUSED						010-099

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 113

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41681P		E006-01/ /		PLUG- (continued)				001-099
	9		W2229	2502R	24		SPARE	001-009
	9	UNUSED						010-099
	10		W2229	2502Z			SPARE	001-009
	10	UNUSED						010-099
	11		W2229	5006B	24		34-22-91	001-002
	11		W2229	5006B	24		SPARE	003-009
	11	UNUSED						010-099
	12		W2229	5006R	24		34-22-91	001-002
	12		W2229	5006R	24		SPARE	003-009
	12	UNUSED						010-099
	13		W2229	5006Z			34-22-91	001-002
	13		W2229	5006Z			SPARE	003-009
	13	UNUSED						010-099
	14		W2229	0014	24		SPARE	001-009
	14	UNUSED						010-099
	15	UNUSED						001-099
	16	UNUSED						001-099
	17	UNUSED						001-099
	18	UNUSED						001-099
	19	UNUSED						001-099
	20	UNUSED						001-099
	21	UNUSED						001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
	DED		W2229	1003Z			34-57-21	001-099
D41683J		E6-1/ /		PLUG				115-199
	1	UNUSED						115-199
	2	UNUSED						115-199
	3		W1013	2003B	24		23-51-12	115-199
	4		W1013	2003R	24		23-51-12	115-199
	5		W1013	0035	20		23-51-12	115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
	8		W1013	5008R	24		34-22-28	115-199
	9		W1013	5008B	24		34-22-28	115-199
	10		W1013	FRAM			34-22-28	115-199
	11	UNUSED						115-199
	12	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 114

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41683J		E6-1/ /		PLUG (continued)				115-199
	13		W1013	5001R	24		34-51-21	115-199
	14		W1013	5001B	24		34-51-21	115-199
	15		W1013	FRAB			34-51-21	115-199
	16		W1013	5003R	24		34-51-21	115-199
	17		W1013	5003B	24		34-51-21	115-199
	18		W1013	FRAD			34-51-21	115-199
	19		W1013	0028	22		34-51-21	115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29		W1013	0030	22		34-51-21	115-199
	30		W1013	5004R	24		34-22-29	115-199
	31		W1013	5004B	24		34-22-29	115-199
	32		W1013	FRAE			34-22-29	115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38		W1013	FRAF			23-51-13	115-199
	39		W1013	2504R	24		23-51-13	115-199
	40		W1013	2504B	24		23-51-13	115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 115

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41683J		E6-1/ /		PLUG (continued)				115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
			W1013	0031	20		34-51-21	115-199
			W1013	0033	20		34-51-21	115-199
			W1013	0034	20		34-22-29	115-199
			W1013	0044	20		23-51-13	115-199
			W1013	0175	20		34-22-28	115-199
			W1013	2504Z			23-51-13	115-199
			W1013	5001Z			34-51-21	115-199
			W1013	5003Z			34-51-21	115-199
			W1013	5004Z			34-22-29	115-199
			W1013	5008Z			34-22-28	115-199
			W1013	FRAB			34-51-21	115-199
			W1013	FRAD			34-51-21	115-199
			W1013	FRAE			34-22-29	115-199
			W1013	FRAF			23-51-13	115-199
			W1013	FRAM			34-22-28	115-199
D41683P		E6-1/ /		PLUG				115-199
	1	UNUSED						115-199
	2	UNUSED						115-199
	3		W4061	2501B	24		23-51-12	115-199
	4		W4061	2501R	24		23-51-12	115-199
	5		W4061	2501Z			23-51-12	115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
	8		W4061	5094R	24		34-22-28	115-199
	9		W4061	5094B	24		34-22-28	115-199
	10		W4061	5094Z			34-22-28	115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13		W4061	5001R	24		34-51-21	115-199
	14		W4061	5001B	24		34-51-21	115-199
	15		W4061	5001Z			34-51-21	115-199
	16		W4061	5002R	24		34-51-21	115-199
	17		W4061	5002B	24		34-51-21	115-199
	18		W4061	5002Z			34-51-21	115-199
	19		W4061	0002	22		34-51-21	115-199
	20	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 116

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41683P		E6-1/ /		PLUG (continued)				115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29		W4061	0003	24		34-51-21	115-199
	30		W4061	5004R	24		34-22-29	115-199
	31		W4061	5004B	24		34-22-29	115-199
	32		W4061	5004Z			34-22-29	115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38		W4061	2502Z			23-51-13	115-199
	39		W4061	2502R	24		23-51-13	115-199
	40		W4061	2502B	24		23-51-13	115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D41684J		P37/ /		RCPT				ALL
	1	UNUSED						001-099
	1		W1270	0467	24		36-11-41	115-199
	2		W1270	0469	24		36-11-41	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 117

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41684J		P37/ /		RCPT (continued)				ALL
	3		W1270	0468	24		36-11-41	ALL
	4		W1270	0455	20		36-11-41	ALL
	5		W1270	0454	20		36-11-41	ALL
	6		W1270	0471	24		36-11-41	001-099
	6		W1270	0471	20		36-11-41	115-199
	7		W1270	5931	22		49-61-11	ALL
	8		W1270	5932	22		49-61-11	ALL
	9		W1270	0175	24		24-27-41	ALL
	10	UNUSED						ALL
	11		W1270	0410	20		28-25-11	001-099
	11	UNUSED						115-199
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1270	0859	22		49-61-11	ALL
	15		W1270	5962	22		49-61-11	001-099
	15		W1270	5961	22		49-61-11	115-199
	16		W1270	0858	22		49-61-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D41684P		P037-00/ /		PLUG				001-099
D41684P		P37/ /		PLUG				115-199
	1	UNUSED						001-099
	1		W2650	0002	24		36-11-41	115-199
	2		W2650	0003	24		36-11-41	ALL
	3		W2650	0004	20		36-11-41	ALL
	4		W2650	0005	20		36-11-41	ALL
	5		W2650	0006	20		36-11-41	ALL
	6		W2650	0007	20		36-11-41	ALL
	7		W2650	0008	22		49-61-11	ALL
	8		W2650	0009	22		49-61-11	ALL
	9		W2650	0026	24		24-27-41	ALL
	10	UNUSED						ALL
	11		W2650	0058	20		28-25-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 118

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41684P		P037-00/ /		PLUG (continued)				001-099
D41684P		P37/ /		PLUG (continued)				115-199
	11		W2650	0037	22		SPARE	115-199
	12		W2650	2003B	24		SPARE	ALL
	13		W2650	2003R	24		SPARE	ALL
	14		W2650	0042	22		49-61-11	ALL
	15		W2650	0048	22		49-61-11	ALL
	16		W2650	0041	22		49-61-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D41685J		E6-1/ /		RCPT				115-199
	1	UNUSED						115-199
	2	UNUSED						115-199
	3	UNUSED						115-199
	4		W1011	2003B	24		23-51-12	115-199
	5		W1011	2003R	24		23-51-12	115-199
	6		W1011	0035	22		23-51-12	115-199
	7		W1011	2004B	24		23-51-12	115-199
	8		W1011	2004R	24		23-51-12	115-199
	9		W1011	0036	22		23-51-12	115-199
	10		W1011	2504B	24		23-51-13	115-199
	11		W1011	2504R	24		23-51-13	115-199
	12		W1011	FRAF			23-51-13	115-199
	13		W1011	5008R	24		34-22-18	115-199
	14		W1011	5008B	24		34-22-18	115-199
	15		W1011	FRAM			34-22-18	115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23		W1011	0030	22		34-51-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 119

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41685J		E6-1/ /		RCPT (continued)				115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29		W1011	5001R	24		34-51-11	115-199
	30		W1011	5001B	24		34-51-11	115-199
	31		W1011	FRAB			34-51-11	115-199
	32		W1011	0028	22		34-51-11	115-199
	33		W1011	5003R	24		34-51-11	115-199
	34		W1011	5003B	24		34-51-11	115-199
	35		W1011	FRAD			34-51-11	115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41		W1011	5004R	24		34-22-19	115-199
	42		W1011	5004B	24		34-22-19	115-199
	43		W1011	FRAE			34-22-19	115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
			W1011	0031	20		34-51-11	115-199
			W1011	0033	20		34-51-11	115-199
			W1011	0034	20		34-22-19	115-199
			W1011	0044	20		23-51-13	115-199
			W1011	0056	20		34-22-18	115-199
			W1011	2504Z			23-51-13	115-199
			W1011	5001Z			34-51-11	115-199
			W1011	5003Z			34-51-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 120

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41685J		E6-1/ /		RCPT (continued)				115-199
			W1011	5004Z			34-22-19	115-199
			W1011	5008Z			34-22-18	115-199
			W1011	FRAB			34-51-11	115-199
			W1011	FRAD			34-51-11	115-199
			W1011	FRAE			34-22-19	115-199
			W1011	FRAF			23-51-13	115-199
			W1011	FRAM			34-22-18	115-199
D41685P		E6-1/ /		PLUG				115-199
	1	UNUSED						115-199
	2	UNUSED						115-199
	3	UNUSED						115-199
	4		W4063	2501B	24		23-51-12	115-199
	5		W4063	2501R	24		23-51-12	115-199
	6		W4063	2501Z			23-51-12	115-199
	7		W4063	2502B	24		23-51-12	115-199
	8		W4063	2502R	24		23-51-12	115-199
	9		W4063	2502Z			23-51-12	115-199
	10		W4063	2503B	24		23-51-13	115-199
	11		W4063	2503R	24		23-51-13	115-199
	12		W4063	2503Z			23-51-13	115-199
	13		W4063	5058R	24		34-22-18	115-199
	14		W4063	5058B	24		34-22-18	115-199
	15		W4063	5058Z			34-22-18	115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23		W4063	0002	24		34-51-11	115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26		W4063	5004B	24		SPARE	115-199
	27		W4063	5004R	24		SPARE	115-199
	28		W4063	5004Z			SPARE	115-199
	29		W4063	5001R	24		34-51-11	115-199
	30		W4063	5001B	24		34-51-11	115-199
	31		W4063	5001Z			34-51-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 121

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41685P		E6-1/ /		PLUG (continued)				115-199
	32		W4063	0003	22		34-51-11	115-199
	33		W4063	5002R	24		34-51-11	115-199
	34		W4063	5002B	24		34-51-11	115-199
	35		W4063	5002Z			34-51-11	115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41		W4063	5003R	24		34-22-19	115-199
	42		W4063	5003B	24		34-22-19	115-199
	43		W4063	5003Z			34-22-19	115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D41686J		E6-4/ /		RCPT				115-199
	1		W1032	0124	24		29-33-11	115-199
	2	UNUSED						115-199
	3	UNUSED						115-199
	4	UNUSED						115-199
	5		W1032	0128	24		29-33-11	115-199
	6		W1032	0129	24		29-33-11	115-199
	7		W1032	0105	24		29-33-11	115-199
	8		W1032	0107	24		29-33-11	115-199
	9		W1032	0110	24		29-33-11	115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14		W1032	0454	22		32-44-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 122

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41686J		E6-4/ /		RCPT (continued)				115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17		W1032	0116	24		29-33-11	115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25		W1032	0130	24		29-33-11	115-199
	26		W1032	0134	24		29-33-11	115-199
	27		W1032	0135	24		29-33-11	115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
	32		W1032	0373	22		32-42-11	115-199
	33		W1032	0374	22		32-42-11	115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 123

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41686J		E6-4/ /		RCPT (continued)				115-199
	55	UNUSED						115-199
D41686P		E6-4/ /		PLUG				115-199
	1		W4210	0027	20		29-33-11	115-199
	2	UNUSED						115-199
	3	UNUSED						115-199
	4	UNUSED						115-199
	5		W4210	0031	20		29-33-11	115-199
	6		W4210	0032	20		29-33-11	115-199
	7		W4210	0049	22		29-33-11	115-199
	8		W4210	0050	22		29-33-11	115-199
	9		W4210	0051	22		29-33-11	115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12		W4210	0054	22		SPARE	115-199
	13		W4210	0055	22		SPARE	115-199
	14		W4210	0116	22		32-44-11	115-199
	15		W4210	0100	22		SPARE	115-199
	16	UNUSED						115-199
	17		W4210	0102	24		29-33-11	115-199
	18		W4210	0104	22		SPARE	115-199
	19	UNUSED						115-199
	20		W4210	0118	24		SPARE	115-199
	21		W4210	0119	24		SPARE	115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25		W4210	0120	22		29-33-11	115-199
	26		W4210	0121	22		29-33-11	115-199
	27		W4210	0122	22		29-33-11	115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
	32		W4210	0128	22		32-42-11	115-199
	33		W4210	0127	22		32-42-11	115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 124

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41686P		E6-4/ /		PLUG (continued)				115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D41687J		E4-3/ /		RCPT-				115-199
	1		W1163	2003R	24		23-21-11	115-199
	2		W1163	2003B	24		23-21-11	115-199
	3		W1163	0241	24		23-51-12	115-199
	4		W1163	0242	24		23-51-12	115-199
	5		W1163	0240	24		23-51-12	115-199
	6		W1163	0278	20		23-51-13	115-199
	7		W1163	0277	24		23-51-13	115-199
	8		W1163	0276	20		23-51-13	115-199
	9		W1163	0280	24		23-51-14	115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13		W1163	0282	20		23-51-14	115-199
	14		W1163	0283	24		23-51-14	115-199
	15		W1163	0448	20		23-51-14	115-199
	16		W1163	0287	20		23-51-14	115-199
	17		W1163	0285	24		23-51-14	115-199
	18		W1163	0449	20		23-51-14	115-199
	19	UNUSED						115-199
	20	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 125

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41687J		E4-3/ /		RCPT- (continued)				115-199
	21	UNUSED						115-199
	22		W1163	0453	20		23-51-14	115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
D41687P		E4-3/ /		PLUG-				115-199
	1		W4061	2001R	24		23-21-11	115-199
	2		W4061	2001B	24		23-21-11	115-199
	3		W4061	2501B	24		23-51-12	115-199
	4		W4061	2501R	24		23-51-12	115-199
	5		W4061	2501Z			23-51-12	115-199
	6		W4061	2502B	24		23-51-13	115-199
	7		W4061	2502R	24		23-51-13	115-199
	8		W4061	2502Z			23-51-13	115-199
	9		W4061	0001	24		23-51-14	115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13		W4061	2503B	24		23-51-14	115-199
	14		W4061	2503R	24		23-51-14	115-199
	15		W4061	2503Z			23-51-14	115-199
	16		W4061	2504B	24		23-51-14	115-199
	17		W4061	2504R	24		23-51-14	115-199
	18		W4061	2504Z			23-51-14	115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22		W4061	0004	20		23-51-14	115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 126

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41687P		E4-3/ /		PLUG- (continued)				115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
D41688J		E6 RLY/PNL/		RCPT				ALL
	1		W1024	0079	18		49-61-14	ALL
	2		W1024	0080	18		49-61-14	ALL
	3		W1024	0260	20		36-11-41	ALL
	4		W1024	0325	24		49-61-14	ALL
	5		W1024	0261	20		36-11-41	ALL
	6		W1024	0326	24		49-61-14	ALL
	7		W1024	0262	20		36-11-41	ALL
	8		W1024	2502Z			23-41-12	001-099
	8	UNUSED						115-199
	9		W1024	0263	20		36-11-41	ALL
	10	UNUSED						ALL
	11		W1024	2502R	24		23-41-12	001-099
	11	UNUSED						115-199
	12		W1024	2502B	24		23-41-12	001-099
	12	UNUSED						115-199
	13		W1024	0105	22		49-94-11	001-099
	13		W1024	0105	22		49-94-14	115-199
	14	UNUSED						001-099
	14		W1024	0106	22		49-94-14	115-199
	15	UNUSED						001-099
	15		W1024	0107	22		49-94-14	115-199
	16	UNUSED						ALL
	17	UNUSED						001-099
	17		W1024	3502B	24		23-41-12	115-199
	18	UNUSED						001-099
	18		W1024	3502R	24		23-41-12	115-199
	19	UNUSED						001-099
	19		W1024	3502Y	24		23-41-12	115-199
	20	UNUSED						001-099
	20		W1024	3502Z			23-41-12	115-199
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 127

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41688J		E6 RLY/PNL/		RCPT (continued)				ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
D41688P		E6 RLY/PNL/		PLUG				001-099
D41688P		E6/ /		PLUG				115-199
	1		W2654	0025	18		49-61-14	ALL
	2		W2654	0026	18		49-61-14	ALL
	3	18	W2654	0019	18		36-11-41	001-099
	3		W2654	0019	20		36-11-41	115-199
	4		W2654	0045	24		49-61-14	ALL
	5	18	W2654	0020	18		36-11-41	001-099
	5		W2654	0020	20		36-11-41	115-199
	6		W2654	0046	24		49-61-14	ALL
	7	18	W2654	0021	18		36-11-41	001-099
	7		W2654	0021	20		36-11-41	115-199
	8		W2654	2512Z			23-41-12	001-099
	8	UNUSED						115-199
	9	18	W2654	0022	18		36-11-41	001-099
	9		W2654	0022	20		36-11-41	115-199
	10	UNUSED						ALL
	11		W2654	2512R	20		23-41-12	001-099
	11		W2654	0048	20		SPARE	115-199
	12		W2654	2512B	20		23-41-12	001-099
	12	UNUSED						115-199
	13		W2654	0037	20		49-94-11	001-099
	13		W2654	0032	20		49-94-14	115-199
	14		W2654	0048	20		SPARE	001-099
	14		W2654	0033	20		49-94-14	115-199
	15	UNUSED						001-099
	15		W2654	0034	20		49-94-14	115-199
	16	UNUSED						ALL
	17	UNUSED						001-099
	17		W2654	3501B	20		23-41-12	115-199
	18	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 128

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41688P		E6 RLY/PNL/		PLUG (continued)				001-099
D41688P		E6/ /		PLUG (continued)				115-199
	18		W2654	3501R	20		23-41-12	115-199
	19	UNUSED						001-099
	19		W2654	3501Y	20		23-41-12	115-199
	20	UNUSED						001-099
	20		W2654	3501Z			23-41-12	115-199
	21	UNUSED						ALL
	22		W2654	0047	20		SPARE	001-099
	22	UNUSED						115-199
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	CAP	Y	W2654	0047	20		SPARE	115-199
D41689J		E4-3/ /		RCPT-				115-199
	1		W1163	2002B	24		23-21-11	115-199
	2		W1163	2002R	24		23-21-11	115-199
	3		W1163	0295	24		23-51-14	115-199
	4		W1163	0245	24		23-51-12	115-199
	5		W1163	0247	24		23-51-12	115-199
	6		W1163	0244	24		23-51-12	115-199
	7		W1163	0248	24		23-51-12	115-199
	8		W1163	0249	24		23-51-12	115-199
	9		W1163	0251	20		23-51-12	115-199
	10		W1163	0269	24		23-51-13	115-199
	11		W1163	0268	24		23-51-13	115-199
	12		W1163	0267	20		23-51-13	115-199
	13		W1163	0292	24		23-51-14	115-199
	14		W1163	0293	24		23-51-14	115-199
	15		W1163	0451	20		23-51-14	115-199
	16		W1163	0289	24		23-51-14	115-199
	17		W1163	0290	24		23-51-14	115-199
	18		W1163	0450	20		23-51-14	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 129

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41689J		E4-3/ /		RCPT- (continued)				115-199
	19		W1163	5021B	24		SPARE	115-199
	20		W1163	5021R	24		SPARE	115-199
	21		W1163	5021Z			SPARE	115-199
	22		W1163	0454	20		23-51-14	115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
D41689P		E4-3/ /		PLUG-				115-199
	1		W4063	2001B	24		23-21-11	115-199
	2		W4063	2001R	24		23-21-11	115-199
	3		W4063	0001	24		23-51-14	115-199
	4		W4063	2501B	24		23-51-12	115-199
	5		W4063	2501R	24		23-51-12	115-199
	6		W4063	2501Z			23-51-12	115-199
	7		W4063	2502B	24		23-51-12	115-199
	8		W4063	2502R	24		23-51-12	115-199
	9		W4063	2502Z			23-51-12	115-199
	10		W4063	2503B	24		23-51-13	115-199
	11		W4063	2503R	24		23-51-13	115-199
	12		W4063	2503Z			23-51-13	115-199
	13		W4063	2504B	24		23-51-14	115-199
	14		W4063	2504R	24		23-51-14	115-199
	15		W4063	2504Z			23-51-14	115-199
	16		W4063	2505B	24		23-51-14	115-199
	17		W4063	2505R	24		23-51-14	115-199
	18		W4063	2505Z			23-51-14	115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22		W4063	0004	20		23-51-14	115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 130

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41689P		E4-3/ /		PLUG- (continued)				115-199
	26		W4063	5004B	24		SPARE	115-199
	27		W4063	5004R	24		SPARE	115-199
	28		W4063	5004Z			SPARE	115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
D41690J		P36/ /		RCPT				ALL
	1		W1260	8511	22		29-11-22	ALL
	2		W1260	8510	22		29-11-22	ALL
	3		W1260	8514	22		29-11-22	001-099
	3	UNUSED						115-199
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1260	0238	24		27-58-11	001-099
	6		W1260	0237	22		27-58-11	115-199
	7		W1260	0236	24		27-58-11	001-099
	7		W1260	0235	22		27-58-11	115-199
	8		W1260	0234	24		27-58-11	001-099
	8		W1260	0234	22		27-58-11	115-199
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D41690P		P036-00/ /		PLUG				001-099
D41690P		P36/ /		PLUG				115-199
	1		W4212	0020	22		29-11-22	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 131

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41690P		P036-00/ /		PLUG (continued)				001-099
D41690P		P36/ /		PLUG (continued)				115-199
	1		W4212	0020	20		29-11-22	115-199
	2		W4212	0021	22		29-11-22	001-099
	2		W4212	0021	20		29-11-22	115-199
	3		W4212	0022	22		29-11-22	001-099
	3	UNUSED						115-199
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W4212	0005	22		27-58-11	ALL
	7		W4212	0004	22		27-58-11	ALL
	8		W4212	0003	22		27-58-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D41691J		E002-01/ /		RCPT-				001-099
D41691J		E2-1/ /		RCPT-				115-199
	1		W1171	0231	22		22-11-12	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1171	3006R	22		22-12-11	ALL
	5		W1171	2014B	22		22-11-11	ALL
	6		W1171	2014R	22		22-11-11	ALL
	7		W1171	2015B	22		22-11-11	ALL
	8		W1171	2015R	22		22-11-11	ALL
	9		W1171	2017B	22		22-12-11	ALL
	10		W1171	2017R	22		22-12-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 132

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41691J		E002-01/ /		RCPT- (continued)				001-099
D41691J		E2-1/ /		RCPT- (continued)				115-199
	11		W1171	2019B	22		22-13-11	ALL
	12		W1171	2019R	22		22-13-11	ALL
	13		W1171	3007B	22		22-12-11	ALL
	14		W1171	3007R	22		22-12-11	ALL
	15		W1171	3007Y	22		22-12-11	ALL
	16		W1171	3006B	22		22-12-11	ALL
	17		W1171	0236	22		22-11-12	ALL
	18		W1171	3006Y	22		22-12-11	ALL
	19		W1171	3012B	22		22-13-11	ALL
	20		W1171	3012R	22		22-13-11	ALL
	21		W1171	3012Y	22		22-13-11	ALL
	22		W1171	3011B	22		22-13-11	ALL
	23		W1171	3011R	22		22-13-11	ALL
	24		W1171	3011Y	22		22-13-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W1171	0232	22		22-11-12	ALL
	30	UNUSED						ALL
	31		W1171	0237	22		22-11-12	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34		W1171	2016R	22		22-11-11	ALL
	35		W1171	2016B	22		22-11-11	ALL
	36		W1171	3008R	22		22-12-11	ALL
	37		W1171	3008B	22		22-12-11	ALL
	38		W1171	3008Y	22		22-12-11	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D41691P		E002-01/ /		PLUG-				ALL
	1		W2605	0001	22		22-11-12	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W2605	3002R	22		22-12-11	ALL
	5		W2605	2001B	22		22-11-11	ALL
	6		W2605	2001R	22		22-11-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 133

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41691P		E002-01/ /		PLUG- (continued)				ALL
	7		W2605	2002B	22		22-11-11	ALL
	8		W2605	2002R	22		22-11-11	ALL
	9		W2605	2003B	22		22-12-11	ALL
	10		W2605	2003R	22		22-12-11	ALL
	11		W2605	2004B	22		22-13-11	ALL
	12		W2605	2004R	22		22-13-11	ALL
	13		W2605	3001B	22		22-12-11	ALL
	14		W2605	3001R	22		22-12-11	ALL
	15		W2605	3001Y	22		22-12-11	ALL
	16		W2605	3002B	22		22-12-11	ALL
	17		W2605	0004	22		22-11-12	ALL
	18		W2605	3002Y	22		22-12-11	ALL
	19		W2605	3003B	22		22-13-11	ALL
	20		W2605	3003R	22		22-13-11	ALL
	21		W2605	3003Y	22		22-13-11	ALL
	22		W2605	3004B	22		22-13-11	ALL
	23		W2605	3004R	22		22-13-11	ALL
	24		W2605	3004Y	22		22-13-11	ALL
	25	UNUSED						ALL
	26		W2605	3005R	22		22-13-11	ALL
	27		W2605	3005B	22		22-13-11	ALL
	28		W2605	3005Y	22		22-13-11	ALL
	29		W2605	0002	22		22-11-12	ALL
	30	UNUSED						ALL
	31		W2605	0003	22		22-11-12	ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34		W2605	2010R	22		22-11-11	ALL
	35		W2605	2010B	22		22-11-11	ALL
	36		W2605	3009R	22		22-12-11	ALL
	37		W2605	3009B	22		22-12-11	ALL
	38		W2605	3009Y	22		22-12-11	ALL
	39		W2605	3010R	22		22-12-11	ALL
	40		W2605	3010B	22		22-12-11	ALL
	41		W2605	3010Y	22		22-12-11	ALL
D41692J		P33/ /		RCPT				ALL
	1		W1230	0435	24		27-81-11	001-099
	1		W1234	0036	22		27-81-11	115-199
	2		W1230	0434	24		27-81-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 134

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41692J		P33/ /		RCPT (continued)				ALL
	2		W1234	0035	22		27-81-11	115-199
	3	UNUSED						ALL
	4		W1230	0418	24		27-51-11	001-099
	4		W1234	0019	24		27-51-11	115-199
	5		W1230	0420	24		27-51-11	001-099
	5		W1234	0021	24		27-51-11	115-199
	6		W1230	0007	22		27-51-21	ALL
	7		W1230	0419	24		27-51-11	001-099
	7		W1234	0020	24		27-51-11	115-199
	8		W1230	0137	22		27-51-21	ALL
	9		W1230	0006	22		27-51-21	ALL
	10		W1230	0140	22		27-51-21	ALL
	11		W1230	0139	22		27-51-21	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1230	0426	14		27-81-11	001-099
	14		W1234	0027	14		27-81-11	115-199
	15		W1230	0238	22		27-51-21	ALL
	16		W1230	0425	14		27-81-11	001-099
	16		W1234	0026	14		27-81-11	115-199
	17		W1230	0458	24		27-51-11	001-099
	17		W1234	0080	22		27-51-11	115-199
	18		W1230	0424	14		27-81-11	001-099
	18		W1234	0025	14		27-81-11	115-199
	19		W1230	0465	24		27-81-11	001-099
	19		W1234	0087	22		27-81-11	115-199
	20		W1230	0408	14		27-51-11	001-099
	20		W1234	0009	14		27-51-11	115-199
	21		W1230	0239	22		27-51-21	ALL
	22		W1230	0409	14		27-51-11	001-099
	22		W1234	0010	14		27-51-11	115-199
	23		W1230	0234	22		27-51-21	ALL
	24		W1230	0410	14		27-51-11	001-099
	24		W1234	0011	14		27-51-11	115-199
	25		W1230	0235	22		27-51-21	ALL
D41692P		P033-00/ /		PLUG-				ALL
	1		W4208	0001	24		27-81-11	001-099
	1		W4208	0001	22		27-81-11	115-199
	2		W4208	0002	24		27-81-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 135

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41692P		P033-00/ /		PLUG- (continued)				ALL
	2	UNUSED	W4208	0002	22		27-81-11	115-199
	3		W4208	0037	22		SPARE	001-099
	3							115-199
	4		W4208	0009	24		27-51-11	001-099
	4		W4208	0009	22		27-51-11	115-199
	5		W4208	0010	24		27-51-11	001-099
	5		W4208	0010	22		27-51-11	115-199
	6		W4208	0017	22		27-51-21	ALL
	7		W4208	0018	22		27-51-21	ALL
	8		W4208	0019	22		27-51-21	ALL
	9		W4208	0020	22		27-51-21	001-099
	9		W4208	0020	20		27-51-21	115-199
	10		W4208	0021	22		27-51-21	ALL
	11		W4208	0022	22		27-51-21	ALL
	12		W4208	0041	22		SPARE	ALL
	13		W4208	0042	22		SPARE	ALL
	14		W4208	0003	14		27-81-11	ALL
	15		W4208	0029	22		27-51-21	001-099
	15		W4208	0029	20		27-51-21	115-199
	16		W4208	0005	14		27-81-11	ALL
	17		W4208	0014	22		27-51-21	ALL
	18		W4208	0006	14		27-81-11	ALL
	19		W4208	0015	22		27-51-21	ALL
	20		W4208	0011	14		27-51-11	ALL
	21		W4208	0039	22		27-51-21	001-099
	21		W4208	0039	20		27-51-21	115-199
	22		W4208	0012	14		27-51-11	ALL
	23		W4208	0044	22		27-51-21	ALL
	24		W4208	0013	14		27-51-11	ALL
	25		W4208	0045	22		27-51-21	ALL
D41693J		E002-02/ /		RCPT-				001-099
D41693J		E2-2/ /		RCPT-				115-199
	1		W1173	0105	22		22-11-22	ALL
	2		W1173	3007R	22		22-12-21	ALL
	3		W1173	3012B	22		22-13-21	ALL
	4		W1173	3006R	22		22-12-21	ALL
	5		W1173	2010B	22		22-11-21	ALL
	6		W1173	2010R	22		22-11-21	ALL
	7		W1173	2011B	22		22-11-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 136

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41693J		E002-02/ /		RCPT- (continued)				001-099
D41693J		E2-2/ /		RCPT- (continued)				115-199
	8		W1173	2011R	22		22-11-21	ALL
	9		W1173	2017B	22		22-12-21	ALL
	10		W1173	2017R	22		22-12-21	ALL
	11		W1173	2019B	22		22-13-21	ALL
	12		W1173	2019R	22		22-13-21	ALL
	13		W1173	3006B	22		22-12-21	ALL
	14		W1173	0104	22		22-11-22	ALL
	15		W1173	3006Y	22		22-12-21	ALL
	16		W1173	3007B	22		22-12-21	ALL
	17		W1173	0106	22		22-11-22	ALL
	18		W1173	3007Y	22		22-12-21	ALL
	19		W1173	0103	22		22-11-22	ALL
	20		W1173	3012R	22		22-13-21	ALL
	21		W1173	3012Y	22		22-13-21	ALL
	22		W1173	3013B	22		22-13-21	ALL
	23		W1173	3013R	22		22-13-21	ALL
	24		W1173	3013Y	22		22-13-21	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33		W1173	0265	22		27-31-11	ALL
	34		W1173	2026R	22		22-11-21	ALL
	35		W1173	2026B	22		22-11-21	ALL
	36		W1173	3019R	22		22-12-21	ALL
	37		W1173	3019B	22		22-12-21	ALL
	38		W1173	3019Y	22		22-12-21	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 137

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41693J		E002-02/ /		RCPT- (continued)				001-099
D41693J		E2-2/ /		RCPT- (continued)				115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D41693P		E002-02/ /		PLUG-				001-099
D41693P		E2-2/ /		PLUG-				115-199
	1		W2611	0001	22		22-11-22	ALL
	2		W2611	3002R	22		22-12-21	ALL
	3		W2611	3003B	22		22-13-21	ALL
	4		W2611	3001R	22		22-12-21	ALL
	5		W2611	2001B	22		22-11-21	ALL
	6		W2611	2001R	22		22-11-21	ALL
	7		W2611	2002B	22		22-11-21	ALL
	8		W2611	2002R	22		22-11-21	ALL
	9		W2611	2003B	22		22-12-21	ALL
	10		W2611	2003R	22		22-12-21	ALL
	11		W2611	2004B	22		22-13-21	ALL
	12		W2611	2004R	22		22-13-21	ALL
	13		W2611	3001B	22		22-12-21	ALL
	14		W2611	0004	22		22-11-22	ALL
	15		W2611	3001Y	22		22-12-21	ALL
	16		W2611	3002B	22		22-12-21	ALL
	17		W2611	0002	22		22-11-22	ALL
	18		W2611	3002Y	22		22-12-21	ALL
	19		W2611	0003	22		22-11-22	ALL
	20		W2611	3003R	22		22-13-21	ALL
	21		W2611	3003Y	22		22-13-21	ALL
	22		W2611	3004B	22		22-13-21	ALL
	23		W2611	3004R	22		22-13-21	ALL
	24		W2611	3004Y	22		22-13-21	ALL
	25	UNUSED						ALL
	26		W2611	3005R	22		22-13-21	ALL
	27		W2611	3005B	22		22-13-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 138

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41693P		E002-02/ /		PLUG- (continued)				001-099
D41693P		E2-2/ /		PLUG- (continued)				115-199
	28		W2611	3005Y	22		22-13-21	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33		W2611	0033	22		27-31-11	ALL
	34		W2611	2010R	22		22-11-21	ALL
	35		W2611	2010B	22		22-11-21	ALL
	36		W2611	3009R	22		22-12-21	ALL
	37		W2611	3009B	22		22-12-21	ALL
	38		W2611	3009Y	22		22-12-21	ALL
	39		W2611	3010R	22		22-12-21	ALL
	40		W2611	3010B	22		22-12-21	ALL
	41		W2611	3010Y	22		22-12-21	ALL
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D41694J		E5-2/ /		RCPT				ALL
	1		W1284	0122	24		27-81-11	ALL
	2		W1284	0121	24		27-81-11	ALL
	3		W1284	0099	24		27-51-11	ALL
	4		W1284	0100	24		27-51-11	ALL
	5		W1284	2002B	24		27-81-11	ALL
	6		W1284	2002R	24		27-81-11	ALL
	7		W1284	2001B	24		27-51-11	ALL
	8		W1284	2001R	24		27-51-11	ALL
	9		W1284	0134	20		21-31-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 139

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41694J		E5-2/ /		RCPT (continued)				ALL
	10		W1284	4002G	24		27-81-11	ALL
	11		W1284	4002R	24		27-81-11	ALL
	12		W1284	4001G	24		27-51-11	ALL
	13		W1284	4001R	24		27-51-11	ALL
	14		W1284	4251B	22		21-31-21	ALL
	15		W1284	4251G	22		21-31-21	ALL
	16	UNUSED						ALL
	17		W1284	0016	22		27-51-21	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W1284	4002B	24		27-81-11	ALL
	25		W1284	4002Y	24		27-81-11	ALL
	26		W1284	0137	24		21-31-21	ALL
	27		W1284	4001B	24		27-51-11	ALL
	28		W1284	4001Y	24		27-51-11	ALL
	29		W1284	0138	24		21-31-21	ALL
	30		W1284	4251Y	22		21-31-21	ALL
	31		W1284	4251R	22		21-31-21	ALL
	32		W1284	4251Z			21-31-21	ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
D41694P		E005-02/ /		PLUG				001-099
D41694P		E5-2/ /		PLUG				115-199
	1		W4208	0001	24		27-81-11	001-099
	1		W4208	0001	22		27-81-11	115-199
	2		W4208	0002	24		27-81-11	001-099
	2		W4208	0002	22		27-81-11	115-199
	3		W4208	0009	24		27-51-11	001-099
	3		W4208	0009	22		27-51-11	115-199
	4		W4208	0010	24		27-51-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 140

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41694P		E005-02/ /		PLUG (continued)				001-099
D41694P		E5-2/ /		PLUG (continued)				115-199
	4		W4208	0010	22		27-51-11	115-199
	5		W4208	2001B	22		27-81-11	ALL
	6		W4208	2001R	22		27-81-11	ALL
	7		W4208	2002B	22		27-51-11	ALL
	8		W4208	2002R	22		27-51-11	ALL
	9		W4208	0026	20		21-31-21	ALL
	10		W4208	4001G	22		27-81-11	ALL
	11		W4208	4001R	22		27-81-11	ALL
	12		W4208	4002G	22		27-51-11	ALL
	13		W4208	4002R	22		27-51-11	ALL
	14		W4208	4251B	22		21-31-21	ALL
	15		W4208	4251G	22		21-31-21	ALL
	16		W4208	0038	22		SPARE	ALL
	17		W4208	0016	22		27-51-21	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W4208	0043	20		SPARE	001-099
	21	UNUSED						115-199
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W4208	4001B	22		27-81-11	ALL
	25		W4208	4001Y	22		27-81-11	ALL
	26		W4208	0027	24		21-31-21	ALL
	27		W4208	4002B	22		27-51-11	ALL
	28		W4208	4002Y	22		27-51-11	ALL
	29		W4208	0028	24		21-31-21	ALL
	30		W4208	4251Y	22		21-31-21	ALL
	31		W4208	4251R	22		21-31-21	ALL
	32		W4208	4251Z			21-31-21	ALL
	33		W4208	0041	22		SPARE	ALL
	34		W4208	0042	22		SPARE	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 141

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41695J D41695J		E002-03/ / E2-3/ /		RCPT- RCPT-				001-099 115-199
	1		W1175	0183	22		22-11-32	ALL
	2		W1175	3004R	22		22-12-31	ALL
	3		W1175	3009B	22		22-13-31	ALL
	4		W1175	3003R	22		22-12-31	ALL
	5		W1175	2022B	22		22-11-31	ALL
	6		W1175	2022R	22		22-11-31	ALL
	7		W1175	2023B	22		22-11-31	ALL
	8		W1175	2023R	22		22-11-31	ALL
	9		W1175	2024B	22		22-12-31	ALL
	10		W1175	2024R	22		22-12-31	ALL
	11		W1175	2026B	22		22-13-31	ALL
	12		W1175	2026R	22		22-13-31	ALL
	13		W1175	3003B	22		22-12-31	ALL
	14		W1175	0182	22		22-11-32	ALL
	15		W1175	3003Y	22		22-12-31	ALL
	16		W1175	3004B	22		22-12-31	ALL
	17		W1175	0184	22		22-11-32	ALL
	18		W1175	3004Y	22		22-12-31	ALL
	19		W1175	0181	22		22-11-32	ALL
	20		W1175	3009R	22		22-13-31	ALL
	21		W1175	3009Y	22		22-13-31	ALL
	22		W1175	3008B	22		22-13-31	ALL
	23		W1175	3008R	22		22-13-31	ALL
	24		W1175	3008Y	22		22-13-31	ALL
	25		W1175	0314	24		31-51-41	ALL
	26		W1175	0266	22		27-23-11	ALL
	27		W1175	0265	22		27-23-11	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34		W1175	2020R	22		22-11-31	ALL
	35		W1175	2020B	22		22-11-31	ALL
	36		W1175	3005R	22		22-12-31	ALL
	37		W1175	3005B	22		22-12-31	ALL
	38		W1175	3005Y	22		22-12-31	ALL
	39	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 142

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41695J		E002-03/ /		RCPT- (continued)				001-099
D41695J		E2-3/ /		RCPT- (continued)				115-199
	40	UNUSED						ALL
	41	UNUSED						ALL
D41695P		E002-03/ /		PLUG-				001-099
D41695P		E2-3/ /		PLUG-				115-199
	1		W2621	0001	22		22-11-32	ALL
	2		W2621	3002R	22		22-12-31	ALL
	3		W2621	3003B	22		22-13-31	ALL
	4		W2621	3001R	22		22-12-31	ALL
	5		W2621	2001B	22		22-11-31	ALL
	6		W2621	2001R	22		22-11-31	ALL
	7		W2621	2002B	22		22-11-31	ALL
	8		W2621	2002R	22		22-11-31	ALL
	9		W2621	2003B	22		22-12-31	ALL
	10		W2621	2003R	22		22-12-31	ALL
	11		W2621	2004B	22		22-13-31	ALL
	12		W2621	2004R	22		22-13-31	ALL
	13		W2621	3001B	22		22-12-31	ALL
	14		W2621	0004	22		22-11-32	ALL
	15		W2621	3001Y	22		22-12-31	ALL
	16		W2621	3002B	22		22-12-31	ALL
	17		W2621	0002	22		22-11-32	ALL
	18		W2621	3002Y	22		22-12-31	ALL
	19		W2621	0003	22		22-11-32	ALL
	20		W2621	3003R	22		22-13-31	ALL
	21		W2621	3003Y	22		22-13-31	ALL
	22		W2621	3004B	22		22-13-31	ALL
	23		W2621	3004R	22		22-13-31	ALL
	24		W2621	3004Y	22		22-13-31	ALL
	25		W2621	0025	22		31-51-41	ALL
	26		W2621	0026	22		27-23-11	ALL
	27		W2621	0027	22		27-23-11	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34		W2621	2010R	22		22-11-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 143

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41695P		E002-03/ /		PLUG- (continued)				001-099
D41695P		E2-3/ /		PLUG- (continued)				115-199
	35		W2621	2010B	22		22-11-31	ALL
	36		W2621	3009R	22		22-12-31	ALL
	37		W2621	3009B	22		22-12-31	ALL
	38		W2621	3009Y	22		22-12-31	ALL
	39		W2621	3010R	22		SPARE	ALL
	40		W2621	3010B	22		SPARE	ALL
	41		W2621	3010Y	22		SPARE	ALL
D41696J		E5-1/ /		RCPT				ALL
	1		W1282	0226	22		27-81-21	ALL
	2		W1282	0227	22		27-81-21	ALL
	3	UNUSED						ALL
	4		W1282	0168	24		27-51-41	ALL
	5		W1282	0255	24		27-51-41	ALL
	6		W1282	0388	22		27-51-21	ALL
	7		W1282	0288	20		21-31-21	ALL
	8		W1282	0289	24		21-31-21	ALL
	9		W1282	0290	24		21-31-21	ALL
	10	UNUSED						ALL
	11		W1282	4252Y	22		21-31-21	ALL
	12		W1282	4252B	22		21-31-21	ALL
	13		W1282	4252R	22		21-31-21	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W1282	4252Z			21-31-21	ALL
	25		W1282	4252G	22		21-31-21	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 144

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41696J		E5-1/ /		RCPT (continued)				ALL
	31	UNUSED						ALL
D41696P		E005-01/ /		PLUG				001-099
D41696P		E5-1/ /		PLUG				115-199
	1		W4208	0007	22		27-81-21	ALL
	2		W4208	0008	22		27-81-21	ALL
	3	UNUSED						ALL
	4		W4208	0044	22		27-51-21	ALL
	5		W4208	0045	22		27-51-21	ALL
	6		W4208	0022	22		27-51-21	ALL
	7		W4208	0026	20		21-31-21	ALL
	8		W4208	0027	24		21-31-21	ALL
	9		W4208	0028	24		21-31-21	ALL
	10	UNUSED						ALL
	11		W4208	4251Y	22		21-31-21	ALL
	12		W4208	4251B	22		21-31-21	ALL
	13		W4208	4251R	22		21-31-21	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						001-099
	22		W4208	0043	20		SPARE	115-199
	23	UNUSED						ALL
	24		W4208	4251Z			21-31-21	ALL
	25		W4208	4251G	22		21-31-21	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D41698J		E4-2/ /		RCPT-				ALL
	1		W1275	5568	24		27-51-41	ALL
	1		W1275	5569	24		27-51-41	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 145

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41698J		E4-2/ /		RCPT- (continued)				ALL
	2		W1275	5571	24		27-51-41	ALL
	2		W1275	5572	24		27-51-41	ALL
	3		W1275	5562	24		27-51-41	ALL
	3		W1275	5563	24		27-51-41	ALL
	4		W1275	5565	24		27-51-41	ALL
	4		W1275	5566	24		27-51-41	ALL
	5		W1275	0558	24		27-18-11	ALL
	6		W1275	1557	22		27-18-11	ALL
	7		W1275	6243	24		27-51-51	ALL
	7		W1275	6244	24		27-51-51	ALL
	8		W1275	6095	22		27-18-11	001-099
	8		W1275	6095	24		27-18-11	115-199
	9		W1275	0943	22		28-42-11	ALL
	10	UNUSED						ALL
	11		W1275	0559	24		27-18-11	ALL
	12		W1275	0453	22		28-42-11	ALL
	13	UNUSED						ALL
	14		W1275	6184	22		27-23-11	ALL
	15	UNUSED						ALL
	16		W1275	0811	24		29-31-11	ALL
	16		W1275	0812	24		29-31-11	ALL
	17		W1275	6187	20		29-31-11	ALL
	18	UNUSED						ALL
	19		W1275	0200	24		30-31-11	ALL
	19		W1275	0201	24		30-31-11	ALL
	20		W1275	0203	24		30-31-11	ALL
	20		W1275	0204	24		30-31-11	ALL
	21		W1275	0199	24		30-31-11	ALL
	21		W1275	5735	24		30-31-11	ALL
	22		W1275	0202	24		30-31-11	ALL
	22		W1275	5736	24		30-31-11	ALL
	23		W1275	6161	24		27-58-31	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W1275	5507	24		27-51-31	001-099
	30		W1275	5508	24		27-51-31	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 146

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41698J		E4-2/ /		RCPT- (continued)				ALL
	30	UNUSED						115-199
	31		W1275	0219	24		30-32-11	001-099
	31		W1275	0220	24		30-32-11	001-099
	31	UNUSED						115-199
	32		W1275	0219	24		30-32-11	115-199
	32		W1275	0220	24		30-32-11	115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38		W1275	5507	24		27-51-31	115-199
	38		W1275	5508	24		27-51-31	115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	DED		W1275	1557Z			27-18-11	ALL
D41698P		E004-02/ /		PLUG-				001-099
D41698P		E4-2/ /		PLUG-				115-199
	1		W4202	0060	24		27-51-41	001-099
	1		W4202	0060	22		27-51-41	115-199
	2		W4202	0061	24		27-51-41	001-099
	2		W4202	0061	22		27-51-41	115-199
	3		W4202	0062	24		27-51-41	001-099
	3		W4202	0062	22		27-51-41	115-199
	4		W4202	0063	24		27-51-41	001-099
	4		W4202	0063	22		27-51-41	115-199
	5		W4202	2009B	22		27-18-11	ALL
	6		W4202	2009R	22		27-18-11	ALL
	7		W4202	0087	22		27-51-51	ALL
	8		W4202	0056	22		27-18-11	ALL
	9		W4202	0049	22		28-42-11	001-099
	9		W4202	0049	20		28-42-11	115-199
	10		W4202	1020	22		27-18-11	ALL
	11		W4202	1020Z			27-18-11	ALL
	12		W4202	0048	22		28-42-11	001-099
	12		W4202	0048	20		28-42-11	115-199
	13	UNUSED						ALL
	14		W4202	0046	22		27-23-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 147

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41698P		E004-02/ /		PLUG- (continued)				001-099
D41698P		E4-2/ /		PLUG- (continued)				115-199
	15	UNUSED						ALL
	16		W4202	2013B	20		29-31-11	ALL
	17		W4202	2013R	20		29-31-11	ALL
	18		W4202	0057	22		SPARE	ALL
	19		W4202	0052	24		30-31-11	001-099
	19		W4202	0052	22		30-31-11	115-199
	20		W4202	0053	24		30-31-11	001-099
	20		W4202	0053	22		30-31-11	115-199
	21		W4202	0054	24		30-31-11	001-099
	21		W4202	0054	22		30-31-11	115-199
	22		W4202	0055	24		30-31-11	001-099
	22		W4202	0055	22		30-31-11	115-199
	23		W4202	0064	24		27-58-31	001-099
	23		W4202	0064	22		27-58-31	115-199
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W4202	0059	22		SPARE	001-099
	29	UNUSED						115-199
	30		W4202	0058	24		27-51-31	001-099
	30	UNUSED						115-199
	31		W4202	0009	22		30-32-11	001-099
	31	UNUSED						115-199
	32		W4202	0009	22		30-32-11	115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38		W4202	0058	22		27-51-31	115-199
	39		W4202	0059	22		SPARE	115-199
	40	UNUSED						115-199
	41	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41600

Page 148 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41700J		E004-03/ /		RCPT-				001-099
D41700J		E4-3/ /		RCPT-				115-199
	1	UNUSED						001-099
	1		W1163	0187	22		23-42-11	115-199
	2		W1163	0177	22		23-42-11	001-099
	2		W1163	0469	22		23-42-11	115-199
	3		W1163	0188	22		23-42-11	ALL
	4		W1163	0185	22		23-42-11	ALL
	5	UNUSED						001-099
	5		W1163	0464	24		23-42-12	115-199
	6		W1163	0187	22		23-42-11	001-099
	6		W1163	0465	24		23-42-12	115-199
	7	UNUSED						001-099
	7		W1163	0466	24		23-42-12	115-199
	8	UNUSED						001-099
	8		W1163	0463	22		23-42-12	115-199
	9	UNUSED						001-099
	9		W1163	0467	22		23-42-12	115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D41700P		E004-03/ /		PLUG-				ALL
	1	UNUSED						001-099
	1		W3672	0090	22		23-42-11	115-199
	2		W3672	0021	22		23-42-11	ALL
	3		W3672	0006	22		23-42-11	ALL
	4		W3672	0010	22		23-42-11	ALL
	5	UNUSED						001-099
	5		W3672	0155	24		23-42-12	115-199
	6		W3672	0090	22		23-42-11	001-099
	6		W3672	0163	22		23-42-12	115-199
	7	UNUSED						001-099
	7		W3672	0161	24		23-42-12	115-199
	8	UNUSED						001-099
	8		W3672	0162	22		23-42-12	115-199
	9	UNUSED						001-099
	9		W3672	0153	22		23-42-12	115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41701J		E002-01/ /		RCPT-				001-099
D41701J		E2-1/ /		RCPT-				115-199
	1		W1171	0214	22		22-11-12	ALL
	2		W1171	0218	22		22-11-12	ALL
	3		W1171	0219	20		22-11-12	ALL
	4		W1171	0220	20		22-11-12	ALL
	5		W1171	0221	22		22-11-12	ALL
	6		W1171	0222	20		22-11-12	ALL
	7		W1171	0242	20		22-12-11	ALL
	8		W1171	0243	22		22-12-11	ALL
	9		W1171	0389	24		73-21-12	001-099
	9	UNUSED						115-199
	10		W1171	0390	24		73-21-12	001-099
	10	UNUSED						115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29		W1171	0333	22		32-42-12	115-199
	30		W1171	0335	22		32-42-12	115-199
	31		W1171	0336	22		32-42-12	115-199
	32		W1171	0389	24		73-21-12	115-199
	33		W1171	0390	24		73-21-12	115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41701J		E002-01/ /		RCPT- (continued)				001-099
D41701J		E2-1/ /		RCPT- (continued)				115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D41701P		E002-01/ /		PLUG				ALL
	1		W2355	0001	22		22-11-12	ALL
	2		W2355	0002	22		22-11-12	ALL
	3		W2355	0003	22		22-11-12	ALL
	4		W2355	0005	22		22-11-12	ALL
	5		W2355	0006	22		22-11-12	ALL
	6		W2355	0007	22		22-11-12	ALL
	7		W2355	0008	22		22-12-11	ALL
	8		W2355	0009	22		22-12-11	ALL
	9		W2355	0045	24		73-21-12	001-099
	9	UNUSED						115-199
	10		W2355	0044	24		73-21-12	001-099
	10	UNUSED						115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41701P		E002-01/ /		PLUG (continued)				ALL
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29		W2355	0092	24		32-42-12	115-199
	30		W2355	0093	24		32-42-12	115-199
	31		W2355	0094	24		32-42-12	115-199
	32		W2355	0045	24		73-21-12	115-199
	33		W2355	0044	24		73-21-12	115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 4

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41702J		E4-4/ /		RCPT-				ALL
	1		W3576	0027	22		23-34-15	ALL
	2		W3576	0029	22		SPARE	001-099
	2		W3576	0029	22		23-34-16	115-199
	3		W3576	0031	22		SPARE	001-099
	3		W3576	0031	22		23-34-16	115-199
	4	UNUSED						ALL
	5		W3576	3001R	22		SPARE	001-099
	5		W3576	3001R	22		23-34-16	115-199
	6		W3576	3001B	22		SPARE	001-099
	6		W3576	3001B	22		23-34-16	115-199
	7		W3576	3001Y	22		SPARE	001-099
	7		W3576	3001Y	22		23-34-16	115-199
	8		W3576	0135	22		23-34-15	ALL
	9	UNUSED						001-099
	9		W3576	0050	22		SPARE	115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						001-099
	14		W3576	0132	22		23-34-16	115-199
	15	UNUSED						001-099
	15		W3576	0133	22		23-34-16	115-199
	16	UNUSED						001-099
	16		W3576	0134	22		23-34-16	115-199
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 5

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41702P		E4-4/ /		PLUG-				ALL
	1		W1161	0015	22		23-34-15	ALL
	2	UNUSED						001-099
	2		W1161	0062	22		23-34-15	115-199
	3	UNUSED						001-099
	3		W1161	0008	24		23-34-16	115-199
	4	UNUSED						ALL
	5	UNUSED						001-099
	5		W1161	3001R	24		23-34-16	115-199
	6	UNUSED						001-099
	6		W1161	3001B	24		23-34-16	115-199
	7	UNUSED						001-099
	7		W1161	3001Y	24		23-34-16	115-199
	8		W1161	0067	22		23-34-15	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						001-099
	14		W1161	0071	22		23-34-16	115-199
	15	UNUSED						001-099
	15		W1161	0072	22		23-34-16	115-199
	16	UNUSED						001-099
	16		W1161	0073	22		23-34-16	115-199
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 6

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41703J D41703J		E002-02/ / E2-2/ /		RCPT- RCPT-				001-099 115-199
	1		W1173	0089	22		22-11-22	ALL
	2		W1173	0219	22		27-62-11	001-099
	2		W1173	0219	20		27-62-11	115-199
	3		W1173	0220	22		27-62-11	001-099
	3		W1173	0220	20		27-62-11	115-199
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1173	0091	20		22-11-22	ALL
	7		W1173	0111	20		22-12-21	ALL
	8		W1173	0112	22		22-12-21	ALL
	9		W1173	0384	24		73-21-22	001-099
	9	UNUSED						115-199
	10		W1173	0385	24		73-21-22	001-099
	10	UNUSED						115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 7

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41703J		E002-02/ /		RCPT- (continued)				001-099
D41703J		E2-2/ /		RCPT- (continued)				115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D41703P		E2-2/ /		PLUG				ALL
	1		W2357	0001	22		22-11-22	ALL
	2		W2357	0004	20		27-62-11	ALL
	3		W2357	0005	20		27-62-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W2357	0002	22		22-11-22	ALL
	7		W2357	0006	22		22-12-21	ALL
	8		W2357	0007	22		22-12-21	ALL
	9		W2357	0014	24		73-21-22	001-099
	9	UNUSED						115-199
	10		W2357	0015	24		73-21-22	001-099
	10	UNUSED						115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 8

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41703P		E2-2/ /		PLUG (continued)				ALL
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 9

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41704J		P33/ /		RCPT				ALL
	1	UNUSED						001-099
	1		W1230	0242	22		29-11-12	115-199
	2	UNUSED						ALL
	3		W1230	0220	22		29-31-11	ALL
	4		W1230	3508R	16		28-22-11	ALL
	5		W1230	0013	22		27-51-31	ALL
	6		W1230	3508B	16		28-22-11	ALL
	7	UNUSED						ALL
	8	UNUSED						001-099
	8		W1230	0228	22		29-11-12	115-199
	9	UNUSED						ALL
	10		W1230	3508Y	16		28-22-11	ALL
	11		W1230	0225	24		27-51-31	001-099
	11		W1230	0225	22		27-51-31	115-199
	12		W1230	0075	22		28-26-11	001-099
	12		W1230	0075	20		28-26-11	115-199
	13		W1230	0076	22		28-26-11	001-099
	13		W1230	0076	20		28-26-11	115-199
	14		W1230	0083	22		28-26-11	001-099
	14		W1230	0083	20		28-26-11	115-199
	15		W1230	0160	20		28-41-14	ALL
	16		W1230	0161	20		28-41-14	ALL
	17		W1230	0030	20		28-41-11	001-099
	17		W1230	0030	22		28-41-11	115-199
	18		W1230	0163	20		28-41-11	ALL
	19	UNUSED						ALL
	20		W1230	0705	24		30-32-11	001-099
	20		W1232	0094	24		30-32-11	115-199
	21		W1230	0728	24		30-31-11	001-099
	21		W1232	0126	24		30-31-11	115-199
	22		W1230	0732	24		30-31-11	001-099
	22		W1232	0130	24		30-31-11	115-199
	23	18	W1230	3002B	18		28-22-11	001-099
	23	18	W1232	3002B	18		28-22-11	115-199
	24		W1230	0833	20		28-22-11	ALL
	25	18	W1230	3002R	18		28-22-11	001-099
	25	18	W1232	3002R	18		28-22-11	115-199
	26		W1230	0012	22		27-51-31	ALL
	27	18	W1230	3002Y	18		28-22-11	001-099
	27	18	W1232	3002Y	18		28-22-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 10

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41704J		P33/ /		RCPT (continued)				ALL
	28	UNUSED						ALL
	29	UNUSED						001-099
	29		W1232	0105	22		32-09-11	115-199
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
I	DED		W1230	3508Z			28-22-11	ALL
D41704P		P033-00/ /		PLUG-				ALL
	1		W4202	0010	20		SPARE	001-099
	1		W4202	0010	20		29-11-12	115-199
	2	UNUSED						ALL
	3		W4202	0021	20		29-31-11	ALL
	4		W4202	3001R	16		28-22-11	ALL
	5		W4202	0098	22		27-51-31	ALL
	6		W4202	3001B	16		28-22-11	ALL
	7		W4202	0003	20		SPARE	ALL
	8		W4202	0002	22		SPARE	001-099
	8		W4202	0002	22		29-11-12	115-199
	9		W4202	0001	20		SPARE	ALL
	10		W4202	3001Y	16		28-22-11	ALL
	11		W4202	0097	24		27-51-31	001-099
	11		W4202	0097	22		27-51-31	115-199
	12		W4202	0004	22		28-26-11	001-099
	12		W4202	0004	20		28-26-11	115-199
	13		W4202	0005	22		28-26-11	001-099
	13		W4202	0005	20		28-26-11	115-199
	14		W4202	0006	22		28-26-11	001-099
	14		W4202	0006	20		28-26-11	115-199
	15		W4202	0031	24		28-41-14	001-099
	15		W4202	0031	20		28-41-14	115-199
	16		W4202	0032	24		28-41-14	001-099
	16		W4202	0032	20		28-41-14	115-199
	17		W4202	0033	24		28-41-11	001-099
	17		W4202	0033	20		28-41-11	115-199
	18		W4202	0034	24		28-41-11	001-099
	18		W4202	0034	20		28-41-11	115-199
	19		W4202	0008	20		SPARE	ALL
	20		W4202	0009	22		30-32-11	ALL
	21		W4202	0054	24		30-31-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 11

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41704P		P033-00/ /		PLUG- (continued)				ALL
	21		W4202	0054	22		30-31-11	115-199
	22		W4202	0055	24		30-31-11	001-099
	22		W4202	0055	22		30-31-11	115-199
	23	18	W4202	3002B	18		28-22-11	ALL
	24		W4202	0083	22		28-22-11	ALL
	25	18	W4202	3002R	18		28-22-11	ALL
	26		W4202	0020	22		27-51-31	ALL
	27	18	W4202	3002Y	18		28-22-11	ALL
	28	UNUSED						ALL
	29		W4202	0029	20		SPARE	001-099
	29		W4202	0029	20		32-09-11	115-199
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
D41705J		E002-03/ /		RCPT-				001-099
D41705J		E2-3/ /		RCPT-				115-199
	1		W1175	0177	22		22-11-32	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1175	0180	22		22-11-32	ALL
	7		W1175	0196	20		22-12-31	ALL
	8		W1175	0197	22		22-12-31	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 12

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41705J		E002-03/ /		RCPT- (continued)				001-099
D41705J		E2-3/ /		RCPT- (continued)				115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D41705P		E002-03/ /		PLUG				ALL
	1		W2359	0001	22		22-11-32	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 13

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41705P		E002-03/ /		PLUG (continued)				ALL
	6		W2359	0007	22		22-11-32	ALL
	7		W2359	0006	22		22-12-31	ALL
	8		W2359	0005	22		22-12-31	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 14

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41705P		E002-03/ /		PLUG (continued)				ALL
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D41706J		E003-04/ /		RCPT				ALL
	1		W1280	0157	22		25-66-11	ALL
	2		W1280	2009R	24		52-71-11	ALL
	3		W1280	2009B	24		52-71-11	ALL
	4		W1280	2010R	24		52-71-11	ALL
	5		W1280	2010B	24		52-71-11	ALL
	6		W1280	2011R	24		52-71-11	ALL
	7		W1280	2011B	24		52-71-11	ALL
	8		W1280	2012R	24		52-71-11	ALL
	9		W1280	2012B	24		52-71-11	ALL
	10		W1280	2100R	24		52-71-11	001-099
	10		W1280	2013R	24		52-71-11	115-199
	11		W1280	2100B	24		52-71-11	001-099
	11		W1280	2013B	24		52-71-11	115-199
	12		W1280	2014R	24		52-71-11	ALL
	13		W1280	2014B	24		52-71-11	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 15

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41706P D41706P		E3-4/ / E003-04/ /		PLUG- PLUG-				001-099 115-199
	1		W3582	0001	20		25-66-11	ALL
	2		W3582	2001R	24		52-71-11	001-099
	2		W3582	2001R	20		52-71-11	115-199
	3		W3582	2001B	24		52-71-11	001-099
	3		W3582	2001B	20		52-71-11	115-199
	4		W3582	2002R	24		52-71-11	001-099
	4		W3582	2002R	20		52-71-11	115-199
	5		W3582	2002B	24		52-71-11	001-099
	5		W3582	2002B	20		52-71-11	115-199
	6		W3582	2003R	24		52-71-11	001-099
	6		W3582	2003R	20		52-71-11	115-199
	7		W3582	2003B	24		52-71-11	001-099
	7		W3582	2003B	20		52-71-11	115-199
	8		W3582	2004R	24		52-71-11	001-099
	8		W3582	2004R	20		52-71-11	115-199
	9		W3582	2004B	24		52-71-11	001-099
	9		W3582	2004B	20		52-71-11	115-199
	10		W3582	2005R	24		52-71-11	001-099
	10		W3582	2005R	20		52-71-11	115-199
	11		W3582	2005B	24		52-71-11	001-099
	11		W3582	2005B	20		52-71-11	115-199
	12		W3582	2006R	24		52-71-11	001-099
	12		W3582	2006R	20		52-71-11	115-199
	13		W3582	2006B	24		52-71-11	001-099
	13		W3582	2006B	20		52-71-11	115-199
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 16

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41707J		E004-01/ /		RCPT				001-099
D41707J		E4-1/ /		RCPT				115-199
	1		W1165	0158Y	22		27-41-21	ALL
	2		W1165	0272Y	22		27-41-21	ALL
	3	UNUSED						ALL
	4		W1165	0274Y	22		27-41-21	ALL
	5	UNUSED						ALL
	6		W1165	0276Y	22		27-41-21	ALL
	7		W1165	0363Y	22		27-41-21	ALL
	8		W1165	0364Y	22		27-41-21	ALL
	9	UNUSED						ALL
	10		W1165	0203	22		27-48-11	ALL
	11		W1165	0204	22		27-48-11	ALL
	12		W1165	0205	22		27-48-11	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W1165	0367	22		27-32-21	ALL
	18		W1165	0368	22		27-32-21	001-099
	18		W1165	0368	24		27-32-21	115-199
	19	UNUSED						ALL
	20		W1165	0370	24		31-51-42	ALL
	21		W1165	0371	24		31-51-41	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D41707P		E4-1/ /		PLUG-				ALL
	1		W2357	0008Y	22		27-41-21	ALL
	2		W2357	0009Y	22		27-41-21	ALL
	3	UNUSED						ALL
	4		W2357	0011Y	22		27-41-21	ALL
	5	UNUSED						ALL
	6		W2357	0013Y	22		27-41-21	ALL
	7		W2357	0036Y	22		27-41-21	ALL
	8		W2357	0029Y	22		27-41-21	ALL
	9	UNUSED						ALL
	10		W2357	0016	22		27-48-11	ALL
	11		W2357	0017	22		27-48-11	ALL
	12		W2357	0018	22		27-48-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 17

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41707P		E4-1/ /		PLUG- (continued)				ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W2357	0026	22		27-32-21	ALL
	18		W2357	0027	22		27-32-21	ALL
	19	UNUSED						ALL
	20		W2357	0039	24		31-51-42	ALL
	21		W2357	0047	24		31-51-41	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D41708J		E3-4/ /		RCPT				001-099
D41708J		E003-04/ /		RCPT				115-199
	1		W1280	0158	22		25-66-11	ALL
	2		W1280	2015R	24		52-71-21	ALL
	3		W1280	2015B	24		52-71-21	ALL
	4		W1280	2016R	24		52-71-21	ALL
	5		W1280	2016B	24		52-71-21	ALL
	6		W1280	2104R	24		52-71-21	001-099
	6		W1280	2017R	24		52-71-21	115-199
	7		W1280	2104B	24		52-71-21	001-099
	7		W1280	2017B	24		52-71-21	115-199
	8		W1280	2018R	24		52-71-21	ALL
	9		W1280	2018B	24		52-71-21	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D41708P		E3-4/ /		PLUG-				ALL
	1		W3682	0001	20		25-66-11	ALL
	2		W3682	2001R	24		52-71-21	001-099
	2		W3682	2001R	20		52-71-21	115-199
	3		W3682	2001B	24		52-71-21	001-099
	3		W3682	2001B	20		52-71-21	115-199
	4		W3682	2002R	24		52-71-21	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 18

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41708P		E3-4/ /		PLUG- (continued)				ALL
	4		W3682	2002R	20		52-71-21	115-199
	5		W3682	2002B	24		52-71-21	001-099
	5		W3682	2002B	20		52-71-21	115-199
	6		W3682	2003R	24		52-71-21	001-099
	6		W3682	2003R	20		52-71-21	115-199
	7		W3682	2003B	24		52-71-21	001-099
	7		W3682	2003B	20		52-71-21	115-199
	8		W3682	2004R	24		52-71-21	001-099
	8		W3682	2004R	20		52-71-21	115-199
	9		W3682	2004B	24		52-71-21	001-099
	9		W3682	2004B	20		52-71-21	115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D41709J		E003-01/ /		RCPT				ALL
	1	UNUSED						ALL
	2		W1265	0121Y	22		27-41-11	ALL
	3		W1265	0124Y	22		27-41-11	ALL
	4		W1265	0125Y	22		27-41-11	ALL
	5		W1265	0066	22		27-41-31	ALL
	6		W1265	0175	24		31-51-42	ALL
	7		W1265	0169Y	22		27-41-11	ALL
	8		W1265	0165Y	22		27-41-11	ALL
	9		W1265	0082	22		27-41-31	001-099
	9	UNUSED						115-199
	10		W1265	0158Y	22		27-41-11	ALL
	11	UNUSED						ALL
	12		W1265	0166Y	22		27-41-11	ALL
	13		W1265	0173	22		27-32-11	ALL
	14		W1265	0174	22		27-32-11	001-099
	14		W1265	0174	24		27-32-11	115-199
	15	UNUSED						ALL
	16		W1265	0159	22		27-48-11	ALL
	17		W1265	0160	22		27-48-11	ALL
	18		W1265	0161	22		27-48-11	ALL
	19	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 19

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41709J		E003-01/ /		RCPT (continued)				ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D41709P		E3-1/ /		PLUG				ALL
	1	UNUSED						ALL
	2		W2355	0084Y	22		27-41-11	ALL
	3		W2355	0085Y	22		27-41-11	ALL
	4		W2355	0086Y	22		27-41-11	ALL
	5		W2355	0043Y	20		27-41-31	ALL
	6		W2355	0030	24		31-51-42	ALL
	7		W2355	0060Y	22		27-41-11	ALL
	8		W2355	0073Y	22		27-41-11	ALL
	9		W2355	0046Y	20		27-41-31	001-099
	9	UNUSED						115-199
	10		W2355	0066Y	22		27-41-11	ALL
	11	UNUSED						ALL
	12		W2355	0075Y	22		27-41-11	ALL
	13		W2355	0032	22		27-32-11	ALL
	14		W2355	0033	22		27-32-11	ALL
	15	UNUSED						ALL
	16		W2355	0027	22		27-48-11	ALL
	17		W2355	0028	22		27-48-11	ALL
	18		W2355	0029	22		27-48-11	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D41711J		E002-03/ /		RCPT-				001-099
D41711J		E2-3/ /		RCPT-				115-199
	1		W1175	0081	24		22-32-15	ALL
	2		W1175	0079	24		22-32-15	ALL
	3		W1175	0085	24		22-32-15	ALL
	4		W1175	0080	20		22-32-15	001-099
	4	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 20

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41711J		E002-03/ /		RCPT- (continued)				001-099
D41711J		E2-3/ /		RCPT- (continued)				115-199
	5		W1175	0083	24		22-32-15	ALL
	6		W1175	0082	20		22-32-15	ALL
	7		W1175	0145	24		22-31-11	ALL
	8		W1175	0147	20		22-31-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W1175	2013B	24		22-32-13	ALL
	12		W1175	2013R	24		22-32-13	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W1175	3002B	22		22-32-13	ALL
	16		W1175	3002R	22		22-32-13	ALL
	17		W1175	3002Y	22		22-32-13	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W1175	0080	20		22-32-15	115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
D41711P		E002-03/ /		PLUG				ALL
	1		W2355	0010	24		22-32-15	ALL
	2		W2355	0011	24		22-32-15	ALL
	3		W2355	0013	24		22-32-15	ALL
	4		W2355	0015	24		22-32-15	001-099
	4	UNUSED						115-199
	5		W2355	0012	24		22-32-15	ALL
	6		W2355	0014	24		22-32-15	ALL
	7		W2355	0016	24		22-31-11	ALL
	8		W2355	0017	20		22-31-11	ALL
	9	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 21

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41711P		E002-03/ /		PLUG (continued)				ALL
	10	UNUSED						ALL
	11		W2355	2005B	24		22-32-13	ALL
	12		W2355	2005R	24		22-32-13	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W2355	3005B	20		22-32-13	ALL
	16		W2355	3005R	20		22-32-13	ALL
	17		W2355	3005Y	20		22-32-13	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W2355	0015	24		22-32-15	115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
D41713J		P36/ /		RCPT				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1260	0044	24		24-22-22	ALL
	4		W1260	0270	20		27-62-11	001-099
	4		W1260	0272	20		27-62-11	115-199
	5		W1260	0274	20		27-62-11	001-099
	5		W1260	0273	20		27-62-11	115-199
	6		W1260	0253	20		27-62-11	ALL
	7		W1260	0281	20		27-62-11	ALL
	8	UNUSED						ALL
	9		W1260	0001	24		21-31-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						001-099
	14	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 22

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41713J		P36/ /		RCPT (continued)				ALL
	15	UNUSED						001-099
D41713P		P36/ /		PLUG				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W2355	0103	24		24-22-22	ALL
	4		W2355	0038	20		27-62-11	ALL
	5		W2355	0039	20		27-62-11	ALL
	6		W2355	0040	20		27-62-11	ALL
	7		W2355	0041	20		27-62-11	ALL
	8	UNUSED						ALL
	9		W2355	0042	24		21-31-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D41714J		930/390/L28		RCPT-				001-099
D41714J		930/300/L030		RECP-				115-199
	1	UNUSED						001-099
	1		W3514	0341	20		33-21-12	115-199
	2	UNUSED						ALL
	3	UNUSED						001-099
	3		W3514	0343	24		33-21-12	115-199
	4	UNUSED						001-099
	4		W3514	0330	20		33-21-51	115-199
	5	UNUSED						ALL
	6		W3514	0343	24		33-21-12	001-099
	7		W3514	0341	20		33-21-12	001-099
	8		W3514	0308	20		SPARE	001-099
	9		W3514	0309	20		SPARE	001-099
	10		W3514	0330	20		33-21-51	001-099
	11	UNUSED						001-099
	12		W3514	0312	20		SPARE	001-099
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 23

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41714P		930/300/L34		PLUG-				001-099
D41714P		930/300/L30		PLUG-				115-199
	1	UNUSED						001-099
	1		W3516	0341	20		33-21-13	115-199
	2	UNUSED						ALL
	3	UNUSED						001-099
	3		W3516	0343	24		33-21-13	115-199
	4	UNUSED						001-099
	4		W3516	0330	20		33-21-51	115-199
	5	UNUSED						ALL
	6		W3516	0306	24		33-21-13	001-099
	7		W3516	0307	20		33-21-13	001-099
	8		W3516	0308	20		SPARE	001-099
	9	UNUSED						001-099
	10		W3516	0330	20		33-21-51	001-099
	11		W3516	0311	20		SPARE	001-099
	12		W3516	0312	20		SPARE	001-099
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D41715J		E2-1/ /		RCPT-				115-199
	1		W1171	0337	22		32-42-12	115-199
	2		W1171	0338	22		32-42-12	115-199
	3		W1171	0339	22		32-42-12	115-199
	4		W1171	0340	22		32-42-12	115-199
	5		W1171	0341	22		32-42-12	115-199
	6		W1171	1033	24		73-21-22	115-199
	7		W1171	1034	24		73-21-22	115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	DED		W1171	1033Z			73-21-22	115-199
	DED		W1171	1034Z			73-21-22	115-199
D41715P		E2-1/ /		PLUG				115-199
	1		W2357	0023	24		32-42-12	115-199
	2		W2357	0030	24		32-42-12	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 24

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41715P		E2-1/ /		PLUG (continued)				115-199
	3		W2357	0024	24		32-42-12	115-199
	4		W2357	0025	22		32-42-12	115-199
	5		W2357	0028	22		32-42-12	115-199
	6		W2357	0014	24		73-21-22	115-199
	7		W2357	0015	24		73-21-22	115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
D41716J		1235/300/L28		RCPT				001-099
D41716J		1215/295/L35		RECP-				115-199
	1	UNUSED						001-099
	1		W3516	0471	20		33-21-13	115-199
	2	UNUSED						ALL
	3	UNUSED						001-099
	3		W3516	0473	24		33-21-13	115-199
	4	UNUSED						001-099
	4		W3516	0360	20		33-21-51	115-199
	5	UNUSED						ALL
	6		W3516	0473	24		33-21-13	001-099
	7	UNUSED						001-099
	8		W3516	0308	20		SPARE	001-099
	9		W3516	0471	20		33-21-13	001-099
	10		W3516	0360	20		33-21-51	001-099
	11		W3516	0311	20		SPARE	001-099
	12		W3516	0312	20		SPARE	001-099
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D41716P		1235/300/L28		PLUG-				001-099
D41716P		1215/295/L35		PLUG-				115-199
	1	UNUSED						001-099
	1		W3518	0381	20		33-21-14	115-199
	2	UNUSED						ALL
	3	UNUSED						001-099
	3		W3518	0383	24		33-21-14	115-199
	4	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 25

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41716P		1235/300/L28		PLUG- (continued)				001-099
D41716P		1215/295/L35		PLUG- (continued)				115-199
	4		W3518	0360	20		33-21-51	115-199
	5	UNUSED						ALL
	6		W3518	0306	24		33-21-14	001-099
	7	UNUSED						001-099
	8	UNUSED						001-099
	9		W3518	0309	20		33-21-14	001-099
	10		W3518	0310	20		33-21-51	001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D41718J		P33/ /		RCPT				ALL
	1	UNUSED						001-099
	1		W1230	0085	20		SPARE	115-199
	2	UNUSED						001-099
	2		W1230	0086	22		SPARE	115-199
	3		W1230	0152	20		28-21-11	ALL
	4	18	W1230	0035	18		28-21-11	001-099
	4		W1230	0035	20		28-21-11	115-199
	5	UNUSED						ALL
	6	18	W1230	0031	18		28-21-11	001-099
	6		W1230	0031	22		28-21-11	115-199
	7	18	W1230	0038	18		28-21-11	001-099
	7		W1230	0038	20		28-21-11	115-199
	8		W1230	0043	22		28-21-21	ALL
	9		W1230	0045	20		28-21-22	ALL
	10		W1230	0049	20		28-21-22	ALL
	11		W1230	0052	20		28-21-22	ALL
	12		W1230	0055	20		28-21-22	ALL
	13		W1230	0044	20		28-21-22	ALL
	14		W1230	0046	20		28-21-22	ALL
	15		W1230	0054	20		28-21-22	ALL
	16		W1230	0153	20		28-21-22	ALL
	17		W1230	0058	20		28-21-23	ALL
	18		W1230	0059	20		28-21-23	ALL
	19		W1230	0057	20		28-21-23	ALL
	20		W1230	0060	20		28-21-23	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 26

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41718J		P33/ /		RCPT (continued)				ALL
	21		W1230	0072	20		28-26-11	ALL
	22		W1230	0062	20		28-26-11	ALL
	23		W1230	0063	20		28-26-11	ALL
	24		W1230	0073	20		28-26-11	ALL
	25		W1230	0074	20		28-26-11	ALL
	26		W1230	0070	22		28-26-11	001-099
	26		W1230	0070	20		28-26-11	115-199
	27		W1230	0064	22		28-26-11	001-099
	27		W1230	0064	20		28-26-11	115-199
	28		W1230	0065	22		28-26-11	001-099
	28		W1230	0065	20		28-26-11	115-199
	29		W1230	0240	22		27-51-21	ALL
	30	UNUSED						ALL
	31		W1230	0438	24		33-42-11	001-099
	31		W1234	0039	20		33-42-11	115-199
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	CAP	Y	W1230	0151	22		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 27

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41718P		P033-00/ /		PLUG				001-099
D41718P		P33/ /		PLUG				115-199
	1	UNUSED						001-099
	1		W4216	0077	20		28-41-31	115-199
	2	UNUSED						001-099
	2		W4216	0078	20		28-41-41	115-199
	3		W4216	0021	20		28-21-11	ALL
	4		W4216	0122	20		28-21-11	001-099
	4		W4216	0072	20		28-21-11	115-199
	5		W4216	0073	22		SPARE	001-099
	5		W4216	0073	22		28-21-11	115-199
	6		W4216	0074	22		28-21-11	ALL
	7		W4216	0038	20		28-21-11	001-099
	7		W4216	0038	22		28-21-11	115-199
	8		W4216	0022	22		28-21-21	001-099
	8		W4216	0022	20		28-21-21	115-199
	9		W4216	0033	20		28-21-22	ALL
	10		W4216	0034	20		28-21-22	ALL
	11		W4216	0035	20		28-21-22	ALL
	12		W4216	0036	20		28-21-22	ALL
	13		W4216	0023	20		28-21-22	ALL
	14		W4216	0024	20		28-21-22	ALL
	15		W4216	0025	20		28-21-22	ALL
	16		W4216	0085	20		28-21-22	ALL
	17		W4216	0063	20		28-21-23	ALL
	18		W4216	0064	20		28-21-23	ALL
	19		W4216	0062	20		28-21-23	ALL
	20		W4216	0065	20		28-21-23	ALL
	21		W4216	0067	20		28-26-11	ALL
	22		W4216	0068	20		28-26-11	ALL
	23		W4216	0069	20		28-26-11	ALL
	24		W4216	0070	20		28-26-11	ALL
	25		W4216	0071	20		28-26-11	ALL
	26		W4216	0026	22		28-26-11	001-099
	26		W4216	0026	20		28-26-11	115-199
	27		W4216	0027	22		28-26-11	001-099
	27		W4216	0027	20		28-26-11	115-199
	28		W4216	0028	22		28-26-11	001-099
	28		W4216	0028	20		28-26-11	115-199
	29		W4216	0116	22		27-51-21	ALL
	30	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 28

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41718P		P033-00/ /		PLUG (continued)				001-099
D41718P		P33/ /		PLUG (continued)				115-199
	31		W4216	0037	24		33-42-11	001-099
	31		W4216	0037	20		33-42-11	115-199
	32		W4216	0108	20		SPARE	ALL
	33		W4216	0109	20		SPARE	ALL
	34		W4216	0110	20		SPARE	ALL
	35		W4216	0111	20		SPARE	ALL
	36		W4216	0112	20		SPARE	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D41719J		E4-4/ /		RCPT-				001-099
	= A1		W2659	001CX			23-12-31	001-099
	= C1		W2659	001CO			23-12-31	001-099
D41719P		E4-4/ /		PLUG				001-099
	= A1		W1161	001CX			23-12-31	001-099
	= C1		W1161	001CO			23-12-31	001-099
D41720J		E4-2/ /		RCPT-				ALL
	1		W1275	0445	22		28-42-11	ALL
	2		W1275	0927	22		28-42-11	ALL
	3		W1275	6278	24		30-31-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 29

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41720J		E4-2/ /		RCPT- (continued)				ALL
	3		W1275	6279	24		30-31-12	ALL
	4		W1275	5516	24		27-23-11	ALL
	4		W1275	5517	24		27-23-11	ALL
	5		W1275	0964	24		27-62-11	ALL
	5		W1275	0965	24		27-62-11	ALL
	6		W1275	0205	24		30-31-12	ALL
	6		W1275	0208	24		30-31-12	ALL
	7	UNUSED						ALL
	8		W1275	0209	24		30-31-12	ALL
	8		W1275	0210	24		30-31-12	ALL
	9		W1275	0206	24		30-31-12	ALL
	9		W1275	0207	24		30-31-12	ALL
	10	UNUSED						ALL
	11		W1275	0557	24		27-18-11	ALL
	12		W1275	0216	24		30-32-11	ALL
	12		W1275	0217	24		30-32-11	ALL
	13		W1275	1537	22		27-18-11	ALL
	14		W1275	0556	24		27-18-11	ALL
	15		W1275	6097	22		27-18-11	ALL
	16	UNUSED						ALL
	17		W1275	0441	24		29-22-11	ALL
	18		W1275	5578	24		29-35-11	ALL
	19		W1275	5718	24		29-35-11	ALL
	19		W1275	5719	24		29-35-11	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 30

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41720J		E4-2/ /		RCPT- (continued)				ALL
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	DED		W1275	1537Z			27-18-11	ALL
D41720P		E004-02/ /		PLUG				001-099
D41720P		E4-2/ /		PLUG				115-199
	1		W4216	0030	22		28-42-11	001-099
	1		W4216	0030	20		28-42-11	115-199
	2		W4216	0058	22		28-42-11	001-099
	2		W4216	0058	20		28-42-11	115-199
	3		W4216	0075	24		30-31-12	ALL
	4		W4216	0039	22		27-23-11	ALL
	5		W4216	0046	20		27-62-11	ALL
	6		W4216	0076	24		30-31-12	ALL
	7		W4216	0079	22		SPARE	ALL
	8		W4216	0080	24		30-31-12	ALL
	9		W4216	0081	24		30-31-12	ALL
	10		W4216	1025	22		27-18-11	ALL
	11		W4216	1025Z			27-18-11	ALL
	12		W4216	0084	24		30-32-11	ALL
	13		W4216	2012B	22		27-18-11	ALL
	14		W4216	2012R	22		27-18-11	ALL
	15		W4216	0087	22		27-18-11	ALL
	16		W4216	0105	22		SPARE	ALL
	17		W4216	0113	22		29-22-11	ALL
	18		W4216	0114	20		29-35-11	ALL
	19		W4216	0115	20		29-35-11	ALL
	20	UNUSED						001-099
	20		W4216	0082	24		SPARE	115-199
	21	UNUSED						001-099
	21		W4216	0083	24		SPARE	115-199
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						115-199
	26	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 31

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41720P		E004-02/ /		PLUG (continued)				001-099
D41720P		E4-2/ /		PLUG (continued)				115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
D41721J		E004-03/ /		RCPT-				001-099
D41721J		E4-3/ /		RCPT-				115-199
	=A1		W1163	001CX			23-12-11	001-099
	=A1		W1163	002CX			23-12-11	115-199
	=C1		W1163	001CO			23-12-11	001-099
	=C1		W1163	002CO			23-12-11	115-199
D41721P		E4-3/ /		PLUG-				ALL
	=A1		W4071	001CX			23-12-11	ALL
	=C1		W4071	001CO			23-12-11	ALL
D41722J		P33/ /		RCPT				ALL
	1		W1230	3006R	18		28-22-11	001-099
	1		W1232	3006R	18		28-22-11	115-199
	2		W1230	3006Y	18		28-22-11	001-099
	2		W1232	3006Y	18		28-22-11	115-199
	3		W1230	3006B	18		28-22-11	001-099
	3		W1232	3006B	18		28-22-11	115-199
	4		W1230	0221	22		29-31-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 32

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41722J		P33/ /		RCPT (continued)				ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
D41722P		P033-00/ /		PLUG				001-099
D41722P		P33/ /		PLUG				115-199
	1		W4212	3002R	18		28-22-11	ALL
	2		W4212	3002Y	18		28-22-11	ALL
	3		W4212	3002B	18		28-22-11	ALL
	4		W4212	0008	20		29-31-11	ALL
	5		W4212	0019	20		SPARE	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
D41728J		P37/ /		RCPT				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						001-099
	3		W1270	3010B	24		28-41-14	115-199
	4	UNUSED						001-099
	4		W1270	3010R	24		28-41-14	115-199
	5	UNUSED						001-099
	5		W1270	3010Y	24		28-41-14	115-199
	6		W1270	0112	20		33-42-12	ALL
	7		W1270	0113	20		33-42-12	ALL
	8		W1270	0117	20		33-43-12	ALL
	9	UNUSED						ALL
	10		W1270	0057	20		33-44-21	ALL
	11		W1270	0102	20		33-41-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						001-099
	18	UNUSED						001-099
	19	UNUSED						001-099
	20	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 33

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41728J		P37/ /		RCPT (continued)				ALL
	21	UNUSED						001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
	25	UNUSED						001-099
	26	UNUSED						001-099
	27	UNUSED						001-099
	28	UNUSED						001-099
	29	UNUSED						001-099
	30	UNUSED						001-099
	31	UNUSED						001-099
	32	UNUSED						001-099
	33	UNUSED						001-099
	34	UNUSED						001-099
	35	UNUSED						001-099
	36	UNUSED						001-099
	37	UNUSED						001-099
	38	UNUSED						001-099
	39	UNUSED						001-099
	40		W1270	3010B	24		28-41-14	001-099
	41		W1270	3010Y	24		28-41-14	001-099
	42		W1270	3010R	24		28-41-14	001-099
	43	UNUSED						001-099
	44	UNUSED						001-099
	45	UNUSED						001-099
	46	UNUSED						001-099
	47	UNUSED						001-099
	48	UNUSED						001-099
	49	UNUSED						001-099
	50	UNUSED						001-099
	51	UNUSED						001-099
	52	UNUSED						001-099
	53	UNUSED						001-099
	54	UNUSED						001-099
	55	UNUSED						001-099
	CAP	Y	W1270	2004B	24		SPARE	115-199
	CAP	Y	W1270	2004R	24		SPARE	115-199
D41728P		P037-00/ /		PLUG				ALL
	1	UNUSED						ALL

HOOKUP LIST
D280N032

91-21-51
Section D41700
Page 34
Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41728P		P037-00/ /		PLUG (continued)				ALL
	2	UNUSED						ALL
	3	UNUSED						001-099
	3		W4218	3002B	24		28-41-14	115-199
	4	UNUSED						001-099
	4		W4218	3002R	24		28-41-14	115-199
	5	UNUSED						001-099
	5		W4218	3002Y	24		28-41-14	115-199
	6		W4218	0003	20		33-42-12	ALL
	7		W4218	0004	20		33-42-12	ALL
	8		W4218	0032	20		33-43-12	ALL
	9		W4218	0033	20		SPARE	ALL
	10		W4218	0034	20		33-44-21	ALL
	11		W4218	0036	20		33-41-11	ALL
	12		W4218	0010	22		SPARE	001-099
	12		W4218	0012	22		SPARE	115-199
	13	UNUSED						001-099
	13		W4218	0013	22		SPARE	115-199
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						001-099
	18	UNUSED						001-099
	19	UNUSED						001-099
	20	UNUSED						001-099
	21	UNUSED						001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
	25	UNUSED						001-099
	26	UNUSED						001-099
	27	UNUSED						001-099
	28	UNUSED						001-099
	29	UNUSED						001-099
	30	UNUSED						001-099
	31	UNUSED						001-099
	32		W4218	0358	24		SPARE	001-099
	33		W4218	0359	24		SPARE	001-099
	34	UNUSED						001-099
	35	UNUSED						001-099
	36	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 35

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41728P		P037-00/ /		PLUG (continued)				ALL
	37	UNUSED						001-099
	38	UNUSED						001-099
	39	UNUSED						001-099
	40		W4218	3002B	24		28-41-14	001-099
	41		W4218	3002Y	24		28-41-14	001-099
	42		W4218	3002R	24		28-41-14	001-099
	43	UNUSED						001-099
	44	UNUSED						001-099
	45	UNUSED						001-099
	46	UNUSED						001-099
	47	UNUSED						001-099
	48	UNUSED						001-099
	49	UNUSED						001-099
	50	UNUSED						001-099
	51	UNUSED						001-099
	52	UNUSED						001-099
	53	UNUSED						001-099
	54	UNUSED						001-099
	55	UNUSED						001-099
	CAP	Y	W4218	2006B	22		SPARE	115-199
	CAP	Y	W4218	2006R	22		SPARE	115-199
D41730J		E5-2/ /		RCPT				ALL
	1	UNUSED						001-099
	1		W1284	0014	22		76-11-21	115-199
	2		W1284	0252	22		74-31-21	001-099
	2	UNUSED						115-199
	3		W1284	0255	22		76-11-21	001-099
	3	UNUSED						115-199
	4		W1284	0013	22		74-31-21	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1284	0015	22		24-41-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 36

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41730J		E5-2/ /		RCPT (continued)				ALL
	15	UNUSED						ALL
D41730P		E005-02/ /		PLUG				001-099
D41730P		E5-2/ /		PLUG				115-199
	1	UNUSED						001-099
	1		W4216	0031	22		76-11-21	115-199
	2		W4216	0088	22		74-31-21	001-099
	2	UNUSED						115-199
	3		W4216	0118	22		76-11-21	001-099
	3	UNUSED						115-199
	4		W4216	0086	22		74-31-21	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W4216	0001	22		24-41-11	ALL
	11	UNUSED						001-099
	11		W4216	0106	22		SPARE	115-199
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D41731J		E004-03/ /		RCPT-				001-099
D41731J		E4-3/ /		RCPT-				115-199
	=A1		W1163	002CX			23-12-21	001-099
	=A1		W1163	001CX			23-12-21	115-199
	=C1		W1163	002CO			23-12-21	001-099
	=C1		W1163	001CO			23-12-21	115-199
D41731P		E004-03/ /		PLUG-				ALL
	=A1		W4073	001CX			23-12-21	ALL
	=C1		W4073	001CO			23-12-21	ALL
D41732J		P37/ /		RCPT				ALL
	1		W1270	3006R	18		28-22-11	ALL
	2		W1270	3006Y	18		28-22-11	ALL
	3		W1270	3006B	18		28-22-11	ALL
	4	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 37

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41732J		P37/ /		RCPT (continued)				ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1270	0157	22		29-31-11	ALL
	8		W1270	0171	24		29-35-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
D41732P		P037-00/ /		PLUG				001-099
D41732P		P37/ /		PLUG				115-199
	1		W4206	3001R	18		28-22-11	ALL
	2		W4206	3001Y	18		28-22-11	ALL
	3		W4206	3001B	18		28-22-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W4206	0010	20		SPARE	ALL
	7		W4206	0035	20		29-31-11	ALL
	8		W4206	0044	20		29-35-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
D41733J		1685/298/L010		RCPT-				001-099
D41733J		1685/304/L010		RCPT-				115-199
	1		W3133	0001	20		23-11-11	ALL
	2		W3133	0002	20		23-11-11	ALL
	3		W3133	0003	20		23-11-11	ALL
	4		W3133	0004	20		23-11-11	ALL
	5		W3133	0005	20		23-11-11	ALL
	6		W3133	0006	20		23-11-11	ALL
	7		W3133	0007	20		23-11-11	ALL
	8		W3133	0008	20		23-11-11	ALL
	9		W3133	0013	20		SPARE	001-099
	9	UNUSED						115-199
	10		W3133	0014	20		SPARE	001-099
	10	UNUSED						115-199
	11		W3133	0015	20		SPARE	001-099
	11	UNUSED						115-199
	12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 38

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41733P		1685/298/L010		PLUG-				001-099
D41733P		1685/304/L010		PLUG-				115-199
	1		W2663	0001	20		23-11-11	ALL
	2		W2663	0002	20		23-11-11	ALL
	3		W2663	0003	20		23-11-11	ALL
	4		W2663	0004	20		23-11-11	ALL
	5		W2663	0005	20		23-11-11	ALL
	6		W2663	0006	20		23-11-11	ALL
	7		W2663	0007	20		23-11-11	ALL
	8		W2663	0008	20		23-11-11	ALL
	9		W2663	0009	20		SPARE	ALL
	10		W2663	0010	20		SPARE	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D41734J		E4-2/ /		RCPT-				ALL
	1		W1275	6042	24		29-22-11	001-099
	1		W1275	6043	24		29-22-11	001-099
	1		W1275	0188	24		30-21-11	115-199
	2		W1275	3004R	24		73-31-11	ALL
	3		W1275	3004B	24		73-31-11	ALL
	4		W1275	3004Y	24		73-31-11	ALL
	5		W1275	0188	24		30-21-11	001-099
	5		W1275	0829	22		29-32-11	115-199
	6		W1275	5982	24		30-21-11	ALL
	7	UNUSED						001-099
	7		W1275	0194	24		30-21-11	115-199
	7		W1275	0195	24		30-21-11	115-199
	8		W1275	6437	24		79-31-11	001-099
	8		W1275	3009Y	24		79-31-11	115-199
	9		W1275	6435	24		79-31-11	001-099
	9		W1275	3009B	24		79-31-11	115-199
	10		W1275	6436	24		79-31-11	001-099
	10		W1275	3009R	24		79-31-11	115-199
	11		W1275	6442	24		79-32-11	001-099
	11		W1275	3014R	24		79-32-11	115-199
	12		W1275	6441	24		79-32-11	001-099
	12		W1275	3014B	24		79-32-11	115-199
	13		W1275	6443	24		79-32-11	001-099
	13		W1275	3014Y	24		79-32-11	115-199
	14		W1275	2524B	24		79-34-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 39

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41734J		E4-2/ /		RCPT- (continued)				ALL
	15		W1275	2524R	24		79-34-11	ALL
	16		W1275	FRAG			79-34-11	ALL
	17		W1275	0667	24		26-11-12	001-099
	17		W1275	0669	24		26-11-12	001-099
	17		W1275	0664	24		26-11-12	115-199
	17		W1275	0666	24		26-11-12	115-199
	18	UNUSED						001-099
	18		W1275	6023	24		26-11-12	115-199
	18		W1275	6024	24		26-11-12	115-199
	19		W1275	0700	24		26-12-11	ALL
	19		W1275	0701	24		26-12-11	ALL
	20		W1275	0194	24		30-21-11	001-099
	20		W1275	0195	24		30-21-11	001-099
	20		W1275	6042	24		29-22-11	115-199
	20		W1275	6043	24		29-22-11	115-199
	21		W1275	5980	24		30-21-11	ALL
	22		W1275	0325	24		78-36-11	ALL
	22		W1275	0326	24		78-36-11	ALL
	23		W1275	5981	24		30-21-11	ALL
	24		W1275	0324	24		78-36-11	ALL
	24		W1275	0327	24		78-36-11	ALL
	25		W1275	0493	24		78-36-11	ALL
	25		W1275	0494	24		78-36-11	ALL
	26		W1275	0729	24		26-17-11	ALL
	27		W1275	5993	24		26-17-11	ALL
	27		W1275	5994	24		26-17-11	ALL
	28		W1275	0719	24		26-15-11	ALL
	28		W1275	0721	24		26-15-11	ALL
	29		W1275	0735	24		26-18-11	ALL
	30		W1275	0845	24		29-33-11	ALL
	30		W1275	0846	24		29-33-11	ALL
	31		W1275	0851	24		29-33-11	ALL
	31		W1275	0852	24		29-33-11	ALL
	32		W1275	0860	24		29-33-11	ALL
	32		W1275	0861	24		29-33-11	ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36		W1275	0829	22		29-32-11	001-099
	36	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 40

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41734J		E4-2/ /		RCPT- (continued)				ALL
	37		W1275	2592R	24		77-12-31	ALL
	38		W1275	2592B	24		77-12-31	ALL
	39		W1275	2592Z			77-12-31	ALL
	40		W1275	6063	24		26-16-11	ALL
	40		W1275	6064	24		26-16-11	ALL
	41		W1275	2625B	24		79-34-11	ALL
	42		W1275	6323	24		73-21-11	001-099
	42		W1275	6324	24		73-21-11	001-099
	42		W1275	0451	24		73-21-11	115-199
	42		W1275	0452	24		73-21-11	115-199
	43		W1275	FRRRA			79-34-11	ALL
	44		W1275	0895	24		28-42-21	ALL
	44		W1275	0896	24		28-42-21	ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51		W1275	6489	22		32-44-11	001-099
	51		W1275	6176	22		32-44-11	115-199
	52	UNUSED						001-099
	52		W1275	0956	24		32-44-11	115-199
	52		W1275	0957	24		32-44-11	115-199
	53		W1275	2625R	24		79-34-11	ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
			W1275	5954	22		79-34-11	001-099
			W1275	2524Z			79-34-11	ALL
			W1275	2625Z			79-34-11	ALL
			W1275	6282	22		79-34-11	ALL
			W1275	FRAG			79-34-11	ALL
			W1275	FRRRA			79-34-11	ALL
			W1275	5954	20		79-34-11	115-199
D41734P		E004-02/ /		PLUG				001-099
D41734P		E4-2/ /		PLUG				115-199
	1		W4210	0146	22		29-22-11	001-099
	1		W4210	0004	22		30-21-11	115-199
	2		W4210	3004R	22		73-31-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 41

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41734P		E004-02/ /		PLUG (continued)				001-099
D41734P		E4-2/ /		PLUG (continued)				115-199
	2		W4210	3001R	22		73-31-11	115-199
	3		W4210	3004B	22		73-31-11	001-099
	3		W4210	3001B	22		73-31-11	115-199
	4		W4210	3004Y	22		73-31-11	001-099
	4		W4210	3001Y	22		73-31-11	115-199
	5		W4210	0005	22		30-21-11	001-099
	5		W4210	0056	22		29-32-11	115-199
	6		W4210	0004	22		30-21-11	001-099
	6		W4210	0005	22		30-21-11	115-199
	7	UNUSED						001-099
	7		W4210	0070	22		30-21-11	115-199
	8		W4210	3002Y	22		79-31-11	ALL
	9		W4210	3002B	22		79-31-11	ALL
	10		W4210	3002R	22		79-31-11	ALL
	11		W4210	3003R	22		79-32-11	ALL
	12		W4210	3003B	22		79-32-11	ALL
	13		W4210	3003Y	22		79-32-11	ALL
	14		W4210	2501B	22		79-34-11	ALL
	15		W4210	2501R	22		79-34-11	ALL
	16		W4210	2501Z			79-34-11	ALL
	17		W4210	0016	22		26-11-12	ALL
	18		W4210	0017	22		SPARE	001-099
	18		W4210	0017	22		26-11-12	115-199
	19		W4210	0022	22		26-12-11	ALL
	20		W4210	0070	22		30-21-11	001-099
	20		W4210	0146	22		29-22-11	115-199
	21		W4210	0072	22		30-21-11	ALL
	22		W4210	0025	24		78-36-11	ALL
	23		W4210	0071	22		30-21-11	ALL
	24		W4210	0163	24		78-36-11	ALL
	25		W4210	0026	24		78-36-11	ALL
	26		W4210	0034	22		26-17-11	ALL
	27		W4210	0035	22		26-17-11	ALL
	28		W4210	0039	22		26-15-11	ALL
	29		W4210	0043	22		26-18-11	ALL
	30		W4210	0049	24		29-33-11	001-099
	30		W4210	0049	22		29-33-11	115-199
	31		W4210	0050	24		29-33-11	001-099
	31		W4210	0050	22		29-33-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 42

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41734P		E004-02/ /		PLUG (continued)				001-099
D41734P		E4-2/ /		PLUG (continued)				115-199
	32		W4210	0051	24		29-33-11	001-099
	32		W4210	0051	22		29-33-11	115-199
	33	UNUSED						001-099
	33		W4210	0158	20		SPARE	115-199
	34	UNUSED						ALL
	35	UNUSED						001-099
	35		W4210	0054	22		SPARE	115-199
	36		W4210	0056	22		29-32-11	001-099
	36		W4210	0055	22		SPARE	115-199
	37		W4210	2505R	24		77-12-31	ALL
	38		W4210	2505B	24		77-12-31	ALL
	39		W4210	2505Z			77-12-31	ALL
	40		W4210	0081	22		26-16-11	ALL
	41		W4210	2506B	22		79-34-11	ALL
	42		W4210	0094	24		73-21-11	ALL
	43		W4210	2506Z			79-34-11	ALL
	44		W4210	0139	22		28-42-21	ALL
	45		W4210	2507B	22		SPARE	001-099
	45		W4210	0100	22		SPARE	115-199
	46	UNUSED						001-099
	46		W4210	2508B	20		SPARE	115-199
	47		W4210	0103	22		SPARE	ALL
	48		W4210	0105	22		SPARE	ALL
	49		W4210	0107	22		SPARE	ALL
	50		W4210	0108	22		SPARE	ALL
	51		W4210	0110	22		32-44-11	ALL
	52		W4210	0111	22		SPARE	001-099
	52		W4210	0111	22		32-44-11	115-199
	53		W4210	2506R	22		79-34-11	ALL
	54		W4210	2507R	22		SPARE	001-099
	54		W4210	2508R	20		SPARE	115-199
	55		W4210	2507Z			SPARE	001-099
	55		W4210	2508Z			SPARE	115-199
D41735J		1670/ /		RCPT-				001-099
D41735J		1685/298/R010		RCPT-				115-199
	1		W2665	0001	20		23-11-21	001-099
	1		W3135	0001	20		23-11-21	115-199
	2		W2665	0002	20		23-11-21	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 43

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41735J		1670/ /		RCPT- (continued)				001-099
D41735J		1685/298/R010		RCPT- (continued)				115-199
	2		W3135	0002	20		23-11-21	115-199
	3		W2665	0003	20		23-11-21	001-099
	3		W3135	0003	20		23-11-21	115-199
	4		W2665	0004	20		23-11-21	001-099
	4		W3135	0004	20		23-11-21	115-199
	5		W2665	0005	20		23-11-21	001-099
	5		W3135	0005	20		23-11-21	115-199
	6		W2665	0006	20		23-11-21	001-099
	6		W3135	0006	20		23-11-21	115-199
	7		W2665	0007	20		23-11-21	001-099
	7		W3135	0007	20		23-11-21	115-199
	8		W2665	0008	20		23-11-21	001-099
	8		W3135	0008	20		23-11-21	115-199
	9		W2665	0009	20		SPARE	001-099
	9		W3135	0013	20		SPARE	115-199
	10		W2665	0010	20		SPARE	001-099
	10		W3135	0014	20		SPARE	115-199
	11	UNUSED						001-099
	11		W3135	0015	20		SPARE	115-199
	12	UNUSED						ALL
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D41735P		1670/ /		PLUG-				001-099
D41735P		1685/298/R010		PLUG-				115-199
	1		W3135	0001	20		23-11-21	001-099
	1		W2665	0001	20		23-11-21	115-199
	2		W3135	0002	20		23-11-21	001-099
	2		W2665	0002	20		23-11-21	115-199
	3		W3135	0003	20		23-11-21	001-099
	3		W2665	0003	20		23-11-21	115-199
	4		W3135	0004	20		23-11-21	001-099
	4		W2665	0004	20		23-11-21	115-199
	5		W3135	0005	20		23-11-21	001-099
	5		W2665	0005	20		23-11-21	115-199
	6		W3135	0006	20		23-11-21	001-099
	6		W2665	0006	20		23-11-21	115-199
	7		W3135	0007	20		23-11-21	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 44

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41735P		1670/ /		PLUG- (continued)				001-099
D41735P		1685/298/R010		PLUG- (continued)				115-199
	7		W2665	0007	20		23-11-21	115-199
	8		W3135	0008	20		23-11-21	001-099
	8		W2665	0008	20		23-11-21	115-199
	9		W3135	0013	20		SPARE	001-099
	9		W2665	0009	20		SPARE	115-199
	10		W3135	0014	20		SPARE	001-099
	10		W2665	0010	20		SPARE	115-199
	11		W3135	0015	20		SPARE	001-099
	11	UNUSED						115-199
	12	UNUSED						ALL
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D41736J		E4-2/ /		RCPT-				ALL
	1		W1275	0186	24		30-21-11	ALL
	2		W1275	3001R	24		73-31-11	ALL
	3		W1275	3001B	24		73-31-11	ALL
	4		W1275	3001Y	24		73-31-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1275	5987	24		30-21-11	ALL
	8		W1275	6434	24		79-31-11	001-099
	8		W1275	3007Y	24		79-31-11	115-199
	9		W1275	6432	24		79-31-11	001-099
	9		W1275	3007B	24		79-31-11	115-199
	10		W1275	6433	24		79-31-11	001-099
	10		W1275	3007R	24		79-31-11	115-199
	11		W1275	6439	24		79-32-11	001-099
	11		W1275	3011R	24		79-32-11	115-199
	12		W1275	6438	24		79-32-11	001-099
	12		W1275	3011B	24		79-32-11	115-199
	13		W1275	6440	24		79-32-11	001-099
	13		W1275	3011Y	24		79-32-11	115-199
	14		W1275	2523B	24		79-34-11	ALL
	15		W1275	2523R	24		79-34-11	ALL
	16		W1275	FRAA			79-34-11	ALL
	17		W1275	0740	24		26-18-21	ALL
	17		W1275	0742	24		26-18-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 45

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41736J		E4-2/ /		RCPT- (continued)				ALL
	18		W1275	0328	24		78-36-21	ALL
	18		W1275	0331	24		78-36-21	ALL
	19		W1275	0329	24		78-36-21	ALL
	19		W1275	0330	24		78-36-21	ALL
	20	UNUSED						001-099
	20		W1275	0689	24		26-11-22	115-199
	20		W1275	0690	24		26-11-22	115-199
	21		W1275	2073R	24		29-32-41	ALL
	22		W1275	0709	24		26-12-21	ALL
	22		W1275	0710	24		26-12-21	ALL
	23		W1275	2073B	24		29-32-41	ALL
	24		W1275	0510	24		78-36-21	ALL
	24		W1275	0511	24		78-36-21	ALL
	25		W1275	0683	24		26-11-21	ALL
	25		W1275	0684	24		26-11-21	ALL
	26		W1275	0673	24		26-11-21	001-099
	26		W1275	0674	24		26-11-21	001-099
	26		W1275	0676	24		26-11-21	115-199
	26		W1275	0677	24		26-11-21	115-199
	27		W1275	0837	22		29-32-21	ALL
	28		W1275	2590R	24		77-12-31	ALL
	29		W1275	2590B	24		77-12-31	ALL
	30		W1275	2590Z			77-12-31	ALL
	31		W1275	0183	24		30-21-11	ALL
	31		W1275	0184	24		30-21-11	ALL
	32		W1275	5985	24		30-21-11	ALL
	33		W1275	5986	24		30-21-11	ALL
	34	UNUSED						ALL
	35		W1275	6057	24		26-16-11	ALL
	35		W1275	6058	24		26-16-11	ALL
	36		W1275	6331	24		73-21-21	001-099
	36		W1275	6332	24		73-21-21	001-099
	36		W1275	0462	24		73-21-21	115-199
	36		W1275	0463	24		73-21-21	115-199
	37		W1275	6179	24		32-41-11	ALL
	38	UNUSED						ALL
	39		W1275	6255	24		29-21-31	ALL
	39		W1275	6256	24		29-21-31	ALL
	40	UNUSED						ALL
	41	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 46

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41736J		E4-2/ /		RCPT- (continued)				ALL
	42		W1275	2626R	24		79-34-11	ALL
	43		W1275	2626B	24		79-34-11	ALL
	44		W1275	FRRB			79-34-11	ALL
	45		W1275	6253	24		29-21-31	ALL
	45		W1275	6254	24		29-21-31	ALL
	46	UNUSED						ALL
	47		W1275	6176	22		32-44-11	001-099
	47	UNUSED						115-199
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55		W1275	0689	24		26-11-22	001-099
	55		W1275	0690	24		26-11-22	001-099
	55	UNUSED						115-199
			W1275	5953	22		79-34-11	001-099
			W1275	2523Z			79-34-11	ALL
			W1275	2626Z			79-34-11	ALL
			W1275	6283	22		79-34-11	ALL
			W1275	FRAA			79-34-11	ALL
			W1275	FRRB			79-34-11	ALL
			W1275	5953	20		79-34-11	115-199
D41736P		E004-02/ /		PLUG				001-099
D41736P		E4-2/ /		PLUG				115-199
	1		W4220	0001	22		30-21-11	ALL
	2		W4220	3001R	22		73-31-11	ALL
	3		W4220	3001B	22		73-31-11	ALL
	4		W4220	3001Y	22		73-31-11	ALL
	5	UNUSED						001-099
	5		W4220	0044	20		SPARE	115-199
	6	UNUSED						001-099
	6		W4220	0045	20		SPARE	115-199
	7		W4220	0002	22		30-21-11	ALL
	8		W4220	3002Y	22		79-31-11	ALL
	9		W4220	3002B	22		79-31-11	ALL
	10		W4220	3002R	22		79-31-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 47

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41736P		E004-02/ /		PLUG (continued)				001-099
D41736P		E4-2/ /		PLUG (continued)				115-199
	11		W4220	3003R	22		79-32-11	ALL
	12		W4220	3003B	22		79-32-11	ALL
	13		W4220	3003Y	22		79-32-11	ALL
	14		W4220	2501B	22		79-34-11	ALL
	15		W4220	2501R	22		79-34-11	ALL
	16		W4220	2501Z			79-34-11	ALL
	17		W4220	0006	22		26-18-21	ALL
	18		W4220	0012	24		78-36-21	ALL
	19		W4220	0013	24		78-36-21	ALL
	20	UNUSED						001-099
	20		W4220	0016	22		26-11-22	115-199
	21		W4220	2006R	20		29-32-41	ALL
	22		W4220	0019	22		26-12-21	ALL
	23		W4220	2006B	20		29-32-41	ALL
	24		W4220	0067	24		78-36-21	ALL
	25		W4220	0023	22		26-11-21	ALL
	26		W4220	0024	22		26-11-21	ALL
	27		W4220	0046	22		29-32-21	001-099
	27		W4220	0046	20		29-32-21	115-199
	28		W4220	2502R	24		77-12-31	ALL
	29		W4220	2502B	24		77-12-31	ALL
	30		W4220	2502Z			77-12-31	ALL
	31		W4220	0062	22		30-21-11	ALL
	32		W4220	0063	22		30-21-11	ALL
	33		W4220	0064	22		30-21-11	ALL
	34	UNUSED						ALL
	35		W4220	0068	22		26-16-11	ALL
	36		W4220	0078	24		73-21-21	ALL
	37		W4220	0087	24		32-41-11	ALL
	38	UNUSED						001-099
	38		W4220	0088	24		SPARE	115-199
	39		W4220	0114	22		29-21-31	ALL
	40	UNUSED						001-099
	40		W4220	0089	20		SPARE	115-199
	41	UNUSED						001-099
	41		W4220	0090	20		SPARE	115-199
	42		W4220	2503R	22		79-34-11	ALL
	43		W4220	2503B	22		79-34-11	ALL
	44		W4220	2503Z			79-34-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 48

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41736P		E004-02/ /		PLUG (continued)				001-099
D41736P		E4-2/ /		PLUG (continued)				115-199
	45		W4220	0115	22		29-21-31	ALL
	46	UNUSED						ALL
	47		W4220	0073	22		32-44-11	001-099
	47		W4220	0158	20		SPARE	115-199
	48	UNUSED						001-099
	48		W4220	2508B	20		SPARE	115-199
	49		W4220	0149	22		SPARE	001-099
	49		W4220	2508R	20		SPARE	115-199
	50		W4220	0150	22		SPARE	001-099
	50		W4220	2508Z			SPARE	115-199
	51		W4220	0151	22		SPARE	001-099
	51	UNUSED						115-199
	52		W4220	2504B	22		SPARE	001-099
	52	UNUSED						115-199
	53		W4220	2504R	22		SPARE	001-099
	53	UNUSED						115-199
	54		W4220	2504Z			SPARE	001-099
	54	UNUSED						115-199
	55		W4220	0016	22		26-11-22	001-099
	55	UNUSED						115-199
D41738J		E4-2/ /		RCPT-				ALL
	1		W1275	0939	22		28-42-11	ALL
	2		W1275	0647	24		26-11-11	ALL
	2		W1275	0658	24		26-11-11	ALL
	3		W1275	0649	24		26-11-11	ALL
	3		W1275	0657	24		26-11-11	ALL
	4		W1275	0648	24		26-11-11	ALL
	4		W1275	0659	24		26-11-11	ALL
	5		W1275	5717	24		21-58-12	ALL
	5		W1275	5726	24		21-58-12	ALL
	6		W1275	0503	24		26-11-11	ALL
	7	UNUSED						ALL
	8		W1275	0091	24		26-13-11	ALL
	8		W1275	0092	24		26-13-11	ALL
	9		W1275	0880	24		28-22-21	ALL
	9		W1275	0881	24		28-22-21	ALL
	10		W1275	0664	24		26-11-12	001-099
	10		W1275	0666	24		26-11-12	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 49

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41738J		E4-2/ /		RCPT- (continued)				ALL
	10		W1275	0667	24		26-11-12	115-199
	10		W1275	0669	24		26-11-12	115-199
	11		W1275	0722	24		26-15-11	ALL
	11		W1275	0724	24		26-15-11	ALL
	12		W1275	0716	24		26-15-11	ALL
	12		W1275	0718	24		26-15-11	ALL
	13		W1275	0697	24		26-12-11	ALL
	13		W1275	0699	24		26-12-11	ALL
	14		W1275	0745	22		26-21-11	ALL
	15		W1275	0748	22		26-21-11	ALL
	16		W1275	6023	24		26-11-12	001-099
	16		W1275	6024	24		26-11-12	001-099
	16	UNUSED						115-199
	17		W1275	6021	22		49-61-11	ALL
	18		W1275	0121	22		49-61-11	ALL
	19		W1275	6019	22		49-61-11	ALL
	20		W1275	5848	24		77-12-41	ALL
	20		W1275	5849	24		77-12-41	ALL
	21		W1275	6408	22		29-11-12	001-099
	21		W1275	6026	22		29-11-12	115-199
	22		W1275	6407	22		29-11-12	001-099
	22		W1275	6306	22		29-11-12	115-199
	23		W1275	5836	24		74-31-11	001-099
	23		W1275	5837	24		74-31-11	001-099
	23		W1275	6027	22		29-11-12	115-199
	24		W1275	6274	22		29-11-12	ALL
	25		W1275	0916	24		73-21-12	ALL
	25		W1275	0917	24		73-21-12	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	18	W1275	6073	18		73-21-12	ALL
	31		W1275	0455	24		73-21-12	ALL
	31		W1275	0456	24		73-21-12	ALL
	32		W1275	0918	24		73-21-12	ALL
	33		W1275	5075B	24		77-11-11	ALL
	34		W1275	5075R	24		77-11-11	ALL
	35		W1275	5075Z			77-11-11	ALL
	36		W1275	5076R	24		77-11-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 50

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41738J		E4-2/ /		RCPT- (continued)				ALL
	37		W1275	5076B	24		77-11-11	ALL
	38		W1275	5076Z			77-11-11	ALL
	39		W1275	2613R	24		77-12-11	ALL
	40		W1275	2613B	24		77-12-11	ALL
	41		W1275	2613Z			77-12-11	ALL
	42	UNUSED						ALL
	43	UNUSED						001-099
	43		W1275	0771	22		26-22-21	115-199
	44		W1275	0311	24		76-11-11	001-099
	44		W1275	0312	24		76-11-11	001-099
	44		W1275	5739	24		76-11-11	115-199
	45		W1275	0314	24		76-11-11	ALL
	45		W1275	0315	24		76-11-11	ALL
	46		W1275	6069	24		26-16-11	ALL
	46		W1275	6070	24		26-16-11	ALL
	47		W1275	6054	24		26-16-11	ALL
	47		W1275	6055	24		26-16-11	ALL
	48		W1275	6090	24		26-23-11	ALL
	48		W1275	6091	24		26-23-11	ALL
	49		W1275	6093	24		26-23-11	ALL
	49		W1275	6094	24		26-23-11	ALL
	50	UNUSED						ALL
	51		W1275	5720	24		21-58-12	ALL
	51		W1275	5729	24		21-58-12	ALL
	52		W1275	5723	24		21-58-12	ALL
	52		W1275	5732	24		21-58-12	ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D41738P		E004-02/ /		PLUG				ALL
	1		W4228	0012	22		28-42-11	ALL
	2		W4228	0013	22		26-11-11	ALL
	3		W4228	0014	22		26-11-11	ALL
	4		W4228	0015	22		26-11-11	ALL
	5		W4228	0016	22		21-58-12	ALL
	6		W4228	0017	22		26-11-11	ALL
	7		W4228	0027	22		SPARE	ALL
	8		W4228	0031	22		26-13-11	ALL
	9		W4228	0040	22		28-22-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 51

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41738P		E004-02/ /		PLUG (continued)				ALL
	10		W4228	0042	22		26-11-12	ALL
	11		W4228	0146	22		26-15-11	ALL
	12		W4228	0147	22		26-15-11	ALL
	13		W4228	0057	22		26-12-11	ALL
	14		W4228	0061	22		26-21-11	ALL
	15		W4228	0172	22		26-21-11	ALL
	16		W4228	0252	22		26-11-12	001-099
	16	UNUSED						115-199
	17		W4228	0083	22		49-61-11	ALL
	18		W4228	0084	22		49-61-11	ALL
	19		W4228	0085	22		49-61-11	ALL
	20		W4228	0091	24		77-12-41	001-099
	20		W4228	0091	22		77-12-41	115-199
	21		W4228	0093	22		29-11-12	001-099
	21		W4228	0093	20		29-11-12	115-199
	22		W4228	0107	22		29-11-12	001-099
	22		W4228	0221	22		29-11-12	115-199
	23		W4228	0121	24		74-31-11	001-099
	23		W4228	0222	22		29-11-12	115-199
	24		W4228	0179	22		29-11-12	001-099
	24		W4228	0179	20		29-11-12	115-199
	25		W4228	0219	24		73-21-12	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	18	W4228	0122	18		73-21-12	ALL
	31		W4228	0123	24		73-21-12	ALL
	32		W4228	0125	24		73-21-12	ALL
	33		W4228	5001B	24		77-11-11	ALL
	34		W4228	5001R	24		77-11-11	ALL
	35		W4228	5001Z			77-11-11	ALL
	36		W4228	5002R	24		77-11-11	ALL
	37		W4228	5002B	24		77-11-11	ALL
	38		W4228	5002Z			77-11-11	ALL
	39		W4228	2508R	24		77-12-11	001-099
	39		W4228	2507R	24		77-12-11	115-199
	40		W4228	2508B	24		77-12-11	001-099
	40		W4228	2507B	24		77-12-11	115-199
	41		W4228	2508Z			77-12-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 52

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41738P		E004-02/ /		PLUG (continued)				ALL
	41		W4228	2507Z			77-12-11	115-199
	42		W4228	0109	20		SPARE	001-099
	42	UNUSED						115-199
	43	UNUSED						001-099
	43		W4228	0157	22		26-22-21	115-199
	44		W4228	0144	24		76-11-11	ALL
	45		W4228	0145	24		76-11-11	ALL
	46		W4228	0155	22		26-16-11	ALL
	47		W4228	0156	22		26-16-11	ALL
	48		W4228	0161	22		26-23-11	ALL
	49		W4228	0162	22		26-23-11	ALL
	50	UNUSED						ALL
	51		W4228	0243	24		21-58-12	ALL
	52		W4228	0244	24		21-58-12	ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D41739J		P37/ /		RCPT				ALL
	1		W1270	0349	24		23-31-13	ALL
	2		W1270	5813	22		31-31-01	001-099
	2		W1270	5813	22		31-31-13	115-199
	3		W1270	5820	22		31-31-61	001-099
	3		W1270	5820	22		31-31-13	115-199
	4	UNUSED						001-099
	4		W1270	5822	22		31-31-13	115-199
	5		W1270	0026	22		31-31-01	001-099
	5		W1270	0026	22		31-31-13	115-199
	6		W1270	6342	22		31-31-01	001-099
	6		W1270	0709	22		31-31-13	115-199
	7		W1270	5826	22		31-31-41	001-099
	7		W1270	5826	22		31-31-21	115-199
	8		W1270	5001B	24		31-31-41	001-099
	8		W1270	5001B	24		31-31-21	115-199
	9		W1270	5001R	24		31-31-41	001-099
	9		W1270	5001R	24		31-31-21	115-199
	10		W1270	5001Z			31-31-41	001-099
	10		W1270	5001Z			31-31-21	115-199
	11		W1270	5006Z			31-31-41	001-099
	11		W1270	5006Z			31-31-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 53

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41739J		P37/ /		RCPT (continued)				ALL
	12		W1270	5006R	24		31-31-41	001-099
	12		W1270	5006R	24		31-31-21	115-199
	13		W1270	5006B	24		31-31-41	001-099
	13		W1270	5006B	24		31-31-21	115-199
	14		W1270	5827	22		31-31-41	001-099
	14		W1270	5827	22		31-31-21	115-199
	15	UNUSED						ALL
	16		W1272	0240	22		23-31-19	001-099
	16		W1272	0240	22		23-34-15	115-199
	17		W1270	8000	24		34-22-19	001-099
	17	UNUSED						115-199
	18	UNUSED						ALL
	19		W1270	0035	22		33-25-21	001-099
	19	UNUSED						115-199
	20		W1270	0392	22		35-21-11	ALL
	21		W1270	6338	24		31-31-62	001-099
	21	UNUSED						115-199
	22		W1270	0185	24		24-28-11	ALL
	23		W1272	0018	22		23-34-15	001-099
	23		W1272	0016	22		23-34-15	115-199
	24	UNUSED						001, 003-099, 115-199
	24		W1270	2515R	22		34-25-13	002
	25	UNUSED						001, 003-099, 115-199
	25		W1270	2515B	22		34-25-13	002
	26	UNUSED						001, 003-099, 115-199
	26		W1270	2515Z			34-25-13	002
	27		W1270	2001R	22		23-31-21	ALL
	28		W1270	2001B	22		23-31-21	ALL
	29		W1270	0009	24		23-31-41	ALL
	30		W1270	0186	24		24-28-11	ALL
	31		W1270	5814	22		31-31-61	001-099
	31	UNUSED						115-199
	32		W1270	0027	24		31-51-41	ALL
	33		W1270	0101	24		31-51-42	ALL
	34	UNUSED						ALL
	35		W1270	5924	24		34-46-12	ALL
	36		W1270	6392	22		34-45-01	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 54

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41739J		P37/ /		RCPT (continued)				ALL
	40	UNUSED						ALL
	41		W1270	6052	22		32-42-11	ALL
	42		W1270	6053	22		32-42-11	ALL
	43		W1270	6051	22		32-42-11	ALL
	44		W1270	6036	22		32-61-11	ALL
	45		W1270	5522	24		23-12-31	001-099
	45	UNUSED						115-199
	46		W1270	6421	22		31-31-42	001-099
	46	UNUSED						115-199
	47		W1270	6422	22		31-31-42	001-099
	47	UNUSED						115-199
	48	UNUSED						ALL
	49		W1272	0087	22		23-34-15	001-099
	49	UNUSED						115-199
	50	UNUSED						ALL
	51		W1270	2508R	24		31-31-42	001-099
	51	UNUSED						115-199
	52		W1270	2508B	24		31-31-42	001-099
	52	UNUSED						115-199
	53		W1270	2508Z			31-31-42	001-099
	53	UNUSED						115-199
	54	UNUSED						ALL
	55	UNUSED						ALL
D41739P		P037-00/ /		PLUG-				001-099
D41739P		P37/ /		PLUG-				115-199
	1		W4477	0014	24		23-31-13	ALL
	2		W4477	0016	22		31-31-01	001-099
	2		W4477	0016	22		31-31-13	115-199
	3		W4477	0017	22		31-31-61	001-099
	3		W4477	0017	22		31-31-13	115-199
	4		W4477	0018	22		SPARE	001-099
	4		W4477	0118	22		31-31-13	115-199
	5		W4477	0019	22		31-31-01	001-099
	5		W4477	0119	22		31-31-13	115-199
	6		W4477	0020	22		31-31-01	001-099
	6		W4477	0020	22		31-31-13	115-199
	7		W4477	0025	22		31-31-61	001-099
	7		W4477	0025	22		31-31-21	115-199
	8		W4477	5010B	24		31-31-41	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 55

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41739P		P037-00/ /		PLUG- (continued)				001-099
D41739P		P37/ /		PLUG- (continued)				115-199
	8		W4477	5010B	24		31-31-21	115-199
	9		W4477	5010R	24		31-31-41	001-099
	9		W4477	5010R	24		31-31-21	115-199
	10		W4477	5010Z			31-31-41	001-099
	10		W4477	5010Z			31-31-21	115-199
	11		W4477	5011Z			31-31-41	001-099
	11		W4477	5011Z			31-31-21	115-199
	12		W4477	5011R	24		31-31-41	001-099
	12		W4477	5011R	24		31-31-21	115-199
	13		W4477	5011B	24		31-31-41	001-099
	13		W4477	5011B	24		31-31-21	115-199
	14		W4477	0026	22		31-31-61	001-099
	14		W4477	0026	22		31-31-21	115-199
	15		W4477	0156	22		SPARE	001-099
	15	UNUSED						115-199
	16		W4477	0057	22		23-31-19	001-099
	16		W4477	0057	22		23-34-15	115-199
	17		W4477	0414	24		34-22-19	001-099
	17		W4477	0081	24		SPARE	115-199
	18		W4477	0001	24		SPARE	001-099
	18		W4477	0082	24		SPARE	115-199
	19		W4477	0085	22		33-25-21	001-099
	19		W4477	0085	22		SPARE	115-199
	20		W4477	0086	22		35-21-11	ALL
	21		W4477	0146	24		31-31-62	001-099
	21		W4477	0146	24		SPARE	115-199
	22		W4477	0064	24		24-28-11	ALL
	23		W4477	0230	22		23-34-15	ALL
	24	UNUSED						001, 003-099
	24		W4477	5060R	22		34-25-13	002
	24		W4477	0089	20		SPARE	115-199
	25	UNUSED						001, 003-099
	25		W4477	5060B	22		34-25-13	002
	25		W4477	0092	22		SPARE	115-199
	26	UNUSED						001, 003-099
	26		W4477	5060Z			34-25-13	002
	26		W4477	0093	22		SPARE	115-199
	27		W4477	2002R	22		23-31-21	ALL
	28		W4477	2002B	22		23-31-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 56

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41739P		P037-00/ /		PLUG- (continued)				001-099
D41739P		P37/ /		PLUG- (continued)				115-199
	29		W4477	0100	22		23-31-41	ALL
	30		W4477	0065	24		24-28-11	ALL
	31		W4477	0123	24		31-31-61	001-099
	31		W4477	0123	24		SPARE	115-199
	32		W4477	0110	24		31-51-41	ALL
	33		W4477	0111	24		31-51-42	ALL
	34		W4477	0135	24		SPARE	ALL
	35		W4477	0163	24		34-46-12	ALL
	36		W4477	0250	22		34-45-01	ALL
	37		W4477	0171	22		SPARE	ALL
	38	UNUSED						001-099
	38		W4477	0152	20		SPARE	115-199
	39	UNUSED						001-099
	39		W4477	0145	24		SPARE	115-199
	40		W4477	0196	20		SPARE	ALL
	41		W4477	0021	22		32-42-11	ALL
	42		W4477	0033	22		32-42-11	ALL
	43		W4477	0034	22		32-42-11	ALL
	44		W4477	0047	22		32-61-11	ALL
	45		W4477	0201	24		23-12-31	001-099
	45	UNUSED						115-199
	46		W4477	0402	22		31-31-42	001-099
	46	UNUSED						115-199
	47		W4477	0403	22		31-31-42	001-099
	47	UNUSED						115-199
	48	UNUSED						ALL
	49		W4477	0412	22		23-34-15	001-099
	49	UNUSED						115-199
	50	UNUSED						ALL
	51		W4477	5017R	24		31-31-42	001-099
	51	UNUSED						115-199
	52		W4477	5017B	24		31-31-42	001-099
	52	UNUSED						115-199
	53		W4477	5017Z			31-31-42	001-099
	53	UNUSED						115-199
	54	UNUSED						ALL
	55	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 57

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41741J D41741J		E003-02/ / E3-2/ /		RCPT- RCPT-				001-099 115-199
	1		W1423	5024R	24		22-41-13	ALL
	2		W1423	5024B	24		22-41-13	ALL
	3		W1423	5024Z			22-41-13	ALL
	4		W1423	0076	22		22-41-13	ALL
	5		W1423	0077	22		22-41-13	ALL
	6		W1423	0078	22		22-41-13	ALL
	7		W1423	0079	22		22-41-13	ALL
	8		W1423	0080	22		22-41-13	ALL
	9		W1423	0081	22		22-41-13	ALL
	10		W1423	0082	22		22-41-13	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1423	0083	20		22-41-13	ALL
	15	UNUSED						ALL
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
D41741P		E003-02/ /		PLUG-				ALL
	1		W2353	5001R	24		22-41-13	ALL
	2		W2353	5001B	24		22-41-13	ALL
	3		W2353	5001Z			22-41-13	ALL
	4		W2353	0001	22		22-41-13	ALL
	5		W2353	0002	22		22-41-13	ALL
	6		W2353	0003	22		22-41-13	ALL
	7		W2353	0004	22		22-41-13	ALL
	8		W2353	0005	22		22-41-13	ALL
	9		W2353	0006	22		22-41-13	ALL
	10		W2353	0007	22		22-41-13	ALL
	11		W2353	0008	22		SPARE	ALL
	12		W2353	0009	22		SPARE	ALL
	13		W2353	0010	22		SPARE	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 58

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41741P		E003-02/ /		PLUG- (continued)				ALL
	14		W2353	0011	22		22-41-13	ALL
	15	UNUSED						ALL
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
D41742J		E5-1/ /		RCPT				ALL
	1		W1282	0090	22		24-22-11	ALL
	2		W1282	0084	22		24-22-12	ALL
	3	UNUSED						ALL
	4		W1282	0088	22		24-22-12	ALL
	5	UNUSED						ALL
	6		W1282	0078	22		24-21-11	ALL
	7	UNUSED						ALL
	8		W1282	0077	22		24-21-11	ALL
	9		W1282	0091	22		24-22-11	ALL
	10		W1282	0079	22		24-21-11	ALL
	11		W1282	4005G	24		24-23-11	ALL
	12		W1282	4005B	24		24-23-11	ALL
	13		W1282	4005Y	24		24-23-11	ALL
	14		W1282	4005R	24		24-23-11	ALL
	15		W1282	4006G	24		24-23-11	ALL
	16		W1282	4006B	24		24-23-11	ALL
	17		W1282	4006Y	24		24-23-11	ALL
	18		W1282	4006R	24		24-23-11	ALL
	19		W1282	0249	24		24-27-11	ALL
	20		W1282	0250	24		24-27-11	ALL
	21		W1282	0089	22		24-22-12	ALL
	22		W1282	0095	22		24-22-11	ALL
	23		W1282	0085	22		24-22-12	ALL
	24		W1282	0086	22		24-22-12	ALL
	25		W1282	0087	22		24-22-12	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 59

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41742J		E5-1/ /		RCPT (continued)				ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W1282	0093	22		24-22-11	ALL
	32		W1282	0094	22		24-22-11	ALL
D41742P		E005-01/ /		PLUG				ALL
	1		W4500	0001	18		24-22-11	ALL
	2		W4500	0034	24		24-22-12	001-099
	2		W4500	0034	18		24-22-12	115-199
	3		W4500	0616	20		SPARE	ALL
	4		W4500	0007	18		24-22-12	ALL
	5		W4500	0617	20		SPARE	ALL
	6		W4500	0009	18		24-21-11	ALL
	7	UNUSED						001-099
	7		W4500	0037	20		SPARE	115-199
	8		W4500	0008	18		24-21-11	ALL
	9		W4500	0002	24		24-22-11	ALL
	10		W4500	0010	18		24-21-11	ALL
	11		W4500	4001G	24		24-23-11	ALL
	12		W4500	4001B	24		24-23-11	ALL
	13		W4500	4001Y	24		24-23-11	ALL
	14		W4500	4001R	24		24-23-11	ALL
	15		W4500	4002G	24		24-23-11	ALL
	16		W4500	4002B	24		24-23-11	ALL
	17		W4500	4002Y	24		24-23-11	ALL
	18		W4500	4002R	24		24-23-11	ALL
	19		W4500	0004	24		24-27-11	ALL
	20		W4500	0005	24		24-27-11	ALL
	21		W4500	0006	24		24-22-12	ALL
	22		W4500	0014	20		24-22-11	ALL
	23		W4500	0015	20		24-22-12	ALL
	24		W4500	0016	20		24-22-12	ALL
	25		W4500	0017	20		24-22-12	ALL
	26	UNUSED						001-099
	26		W4500	0601	20		SPARE	115-199
	27	UNUSED						001-099
	27		W4500	0602	20		SPARE	115-199
	28	UNUSED						001-099
	28		W4500	0603	20		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 60

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41742P		E005-01/ /		PLUG (continued)				ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W4500	0012	20		24-22-11	ALL
	32		W4500	0013	20		24-22-11	ALL
D41743J		E002-02/ /		RCPT-				001-099
D41743J		E2-2/ /		RCPT-				115-199
	1		W1173	5102B	24		22-15-11	ALL
	2		W1173	5102R	24		22-15-11	ALL
	3		W1173	FRBC			22-15-11	ALL
	4	UNUSED						ALL
	5		W1173	0351	22		22-14-11	001-099
	5		W1173	1121	22		22-14-11	115-199
	6		W1173	0353	22		22-14-11	001-099
	6		W1173	1122	22		22-14-11	115-199
	7		W1173	0371	22		22-14-11	001-099
	7		W1173	1267	22		22-14-11	115-199
	8		W1173	0356	22		22-14-11	001-099
	8		W1173	1123	22		22-14-11	115-199
	9	UNUSED						ALL
	10		W1173	0226	24		34-61-23	ALL
	11		W1173	0227	24		34-61-23	ALL
	12		W1173	0228	24		34-61-23	ALL
	13		W1173	0231	24		34-61-23	ALL
	14		W1173	0372	22		22-14-11	001-099
	14		W1173	1269	22		22-14-11	115-199
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 61

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41743J		E002-02/ /		RCPT- (continued)				001-099
D41743J		E2-2/ /		RCPT- (continued)				115-199
	29		W1173	5208R	24		34-61-14	001-099
	29	UNUSED						115-199
	30		W1173	5208B	24		34-61-14	001-099
	30	UNUSED						115-199
	31		W1173	5208Z			34-61-14	001-099
	31	UNUSED						115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
	DED		W1173	1121Z			22-14-11	115-199
	DED		W1173	1122Z			22-14-11	115-199
	DED		W1173	1123Z			22-14-11	115-199
	DED		W1173	1267Z			22-14-11	115-199
	DED		W1173	1269Z			22-14-11	115-199
			W1173	0274	20		22-15-11	ALL
			W1173	5102Z			22-15-11	ALL
			W1173	FRBC			22-15-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 62

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41743P D41743P		E002-02/ / E2-2/ /		PLUG- PLUG-				001-099 115-199
	1		W4479	5028B	24		22-15-11	ALL
	2		W4479	5028R	24		22-15-11	ALL
	3		W4479	5028Z			22-15-11	ALL
	4		W4479	0022	22		SPARE	ALL
	5		W4479	0023	22		22-14-11	ALL
	6		W4479	0024	22		22-14-11	ALL
	7		W4479	0025	22		22-14-11	ALL
	8		W4479	0026	22		22-14-11	ALL
	9	UNUSED						ALL
	10		W4479	0041	24		34-61-23	ALL
	11		W4479	0045	24		34-61-23	ALL
	12		W4479	0043	24		34-61-23	ALL
	13		W4479	0044	24		34-61-23	ALL
	14		W4479	0047	22		22-14-11	ALL
	15		W4479	5034R	24		SPARE	001-099
	15		W4479	0048	22		SPARE	115-199
	16		W4479	5034B	24		SPARE	001-099
I	16		W4479	5121B	22		34-61-14	115-199
I	17		W4479	5034Z			SPARE	001-099
	17		W4479	5121Z			34-61-14	115-199
	18		W4479	0035	24		SPARE	001-099
I	18		W4479	5121R	22		34-61-14	115-199
I	19	UNUSED						001-099
I	19		W4479	5034R	24		34-61-14	115-199
I	20	UNUSED						001-099
I	20		W4479	5034B	24		34-61-14	115-199
I	21	UNUSED						001-099
I	21		W4479	5034Z			34-61-14	115-199
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W4479	5121R	24		34-61-14	001-099
	29	UNUSED						115-199
	30		W4479	5121B	24		34-61-14	001-099
	30	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 63

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41743P		E002-02/ /		PLUG- (continued)				001-099
D41743P		E2-2/ /		PLUG- (continued)				115-199
	31		W4479	5121Z			34-61-14	001-099
	31	UNUSED						115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D41744J		E005-03/ /		RCPT				001-099
D41744J		E5-3/ /		RCPT				115-199
	1		W1286	0077	22		25-31-33	ALL
	2		W1286	4003B	24		24-23-12	ALL
	3		W1286	4003G	24		24-23-12	ALL
	4		W1286	4003R	24		24-23-12	ALL
	5		W1286	4003Y	24		24-23-12	ALL
	6		W1286	0017	22		24-22-12	ALL
	7		W1286	0018	24		24-22-12	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1286	0133	24		24-22-22	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 64

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41744J		E005-03/ /		RCPT (continued)				001-099
D41744J		E5-3/ /		RCPT (continued)				115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D41744P		E005-03/ /		PLUG				ALL
	1		W4500	0018	20		25-31-33	ALL
	2		W4500	4003B	24		24-23-12	ALL
	3		W4500	4003G	24		24-23-12	ALL
	4		W4500	4003R	24		24-23-12	ALL
	5		W4500	4003Y	24		24-23-12	ALL
	6		W4500	0019	24		24-22-12	ALL
	7		W4500	0020	24		24-22-12	ALL
	8		W4500	0613	20		SPARE	ALL
	9		W4500	0614	20		SPARE	ALL
	10		W4500	0606	24		24-22-22	001-099
	10		W4500	0606	20		24-22-22	115-199
	11	UNUSED						001-099
	11		W4500	0607	20		SPARE	115-199
	12	UNUSED						001-099
	12		W4500	0608	20		SPARE	115-199
	13	UNUSED						ALL
	14		W4500	0011	24		SPARE	001-099
	14	UNUSED						115-199
	15	UNUSED						ALL
D41745J		E002-01/ /		RCPT-				001-099
D41745J		E2-1/ /		RCPT-				115-199
	1		W1171	5133R	24		22-15-11	ALL
	2		W1171	5133B	24		22-15-11	ALL
	3		W1171	FRGH			22-15-11	ALL
	4		W1171	0407	22		22-15-12	001-099
	4		W1171	1018	22		22-15-12	115-199
	5		W1171	5106B	24		22-12-21	ALL
	6		W1171	5106R	24		22-12-21	ALL
	7		W1171	FRCH			22-12-21	ALL
	8	UNUSED						001, 003-099, 115-199
	8		W1171	5236R	22		34-25-12	002

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 65

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41745J		E002-01/ /		RCPT- (continued)				001-099
D41745J		E2-1/ /		RCPT- (continued)				115-199
	9	UNUSED						001, 003-099, 115-199
	9		W1171	5236B	22		34-25-12	002
	10		W1171	0094	24		34-12-22	ALL
	11	UNUSED						001, 003-099, 115-199
	11		W1171	FRMS			34-25-12	002
	12	UNUSED						ALL
	13	UNUSED						001, 003-099, 115-199
	13		W1171	5232R	22		34-25-12	002
	14	UNUSED						001, 003-099, 115-199
	14		W1171	5232B	22		34-25-12	002
	15	UNUSED						001, 003-099, 115-199
	15		W1171	5232Z			34-25-12	002
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 66

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41745J		E002-01/ /		RCPT- (continued)				001-099
D41745J		E2-1/ /		RCPT- (continued)				115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
	DED		W1171	1018Z			22-15-12	115-199
			W1171	0270	20		22-12-21	ALL
			W1171	0293	20		22-15-11	ALL
			W1171	5106Z			22-12-21	ALL
			W1171	5133Z			22-15-11	ALL
			W1171	FRCH			22-12-21	ALL
			W1171	FRGH			22-15-11	ALL
			W1171	0553	20		34-25-12	002
			W1171	5236Z			34-25-12	002
			W1171	FRMS			34-25-12	002
D41745P		E002-01/ /		PLUG-				001-099
D41745P		E2-1/ /		PLUG-				115-199
	1		W4481	5025R	24		22-15-11	ALL
	2		W4481	5025B	24		22-15-11	ALL
	3		W4481	5025Z			22-15-11	ALL
	4		W4481	0027	22		22-15-12	ALL
	5		W4481	5027B	24		22-12-21	ALL
	6		W4481	5027R	24		22-12-21	ALL
	7		W4481	5027Z			22-12-21	ALL
	8	UNUSED						001, 003-099, 115-199
	8		W4481	5035R	22		34-25-12	002
	9	UNUSED						001, 003-099, 115-199
	9		W4481	5035B	22		34-25-12	002
	10		W4481	0031	24		34-12-22	ALL
	11	UNUSED						001, 003-099

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 67

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41745P		E002-01/ /		PLUG- (continued)				001-099
D41745P		E2-1/ /		PLUG- (continued)				115-199
	11		W4481	5035Z			34-25-12	002
	11		W4481	0033	24		SPARE	115-199
	12		W4481	0036	24		SPARE	ALL
	13		W4481	5011R	24		SPARE	001, 003-099
	13		W4481	5032R	22		34-25-12	002
	13	UNUSED						115-199
	14		W4481	5011B	24		SPARE	001, 003-099
	14		W4481	5032B	22		34-25-12	002
	14	UNUSED						115-199
	15		W4481	5011Z			SPARE	001, 003-099
	15		W4481	5032Z			34-25-12	002
	15	UNUSED						115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 68

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41745P		E002-01/ /		PLUG- (continued)				001-099
D41745P		E2-1/ /		PLUG- (continued)				115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
	DED		W4481	5011Z			SPARE	002
	REF	JB	W4481	5011B	24		SPARE	002
	REF	JB	W4481	5011R	24		SPARE	002
D41746J		P070-00/ /		RCPT				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1250	0028	20		24-53-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1250	0095	22		21-25-11	ALL
	11		W1250	0005	24		21-25-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1250	0030	14		24-53-11	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W1250	0077	16		21-25-11	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 69

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41746J		P070-00/ /		RCPT (continued)				ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
D41746P		P070-00/ /		PLUG-				ALL
	1	UNUSED						ALL
	2		W2256	0030	20		SPARE	ALL
	3		W2256	0003	20		24-53-11	ALL
	4		W2256	0032	20		SPARE	ALL
	5	UNUSED						001-099
	5		W2256	0033	20		SPARE	115-199
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						001-099
	9		W2256	0037	20		SPARE	115-199
	10		W2256	0038	20		21-25-11	ALL
	11		W2256	0602	24		21-25-11	ALL
	12	UNUSED						001-099
	12		W2256	0607	20		SPARE	115-199
	13	UNUSED						001-099
	13		W2256	0608	20		SPARE	115-199
	14		W2256	0001	14		24-53-11	ALL
	15	UNUSED						001-099
	15		W2256	0610	20		SPARE	115-199
	16	UNUSED						001-099
	16		W2256	0609	20		SPARE	115-199
	17	UNUSED						001-099
	17		W2256	0612	20		SPARE	115-199
	18		W2256	0002	16		21-25-11	ALL
	19	UNUSED						001-099
	19		W2256	0606	20		SPARE	115-199
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 70

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41747J		E6-3/ /		RCPT				115-199
	1	UNUSED						115-199
	2	UNUSED						115-199
	3		W1017	0029	22		23-11-21	115-199
	4		W1017	0030	22		23-11-21	115-199
	5		W1017	0028	22		23-11-21	115-199
	6		W1017	0031	22		23-11-21	115-199
	7		W1017	0032	22		23-11-21	115-199
	8		W1017	0033	22		23-11-21	115-199
	9		W1017	2504R	24		23-11-21	115-199
	10		W1017	2504B	24		23-11-21	115-199
	11		W1017	2504Z			23-11-21	115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
D41747P		E6-3/ /		PLUG				115-199
	1	UNUSED						115-199
	2	UNUSED						115-199
	3		W2345	0003	22		23-11-21	115-199
	4		W2345	0004	22		23-11-21	115-199
	5		W2345	0005	22		23-11-21	115-199
	6		W2345	0006	22		23-11-21	115-199
	7		W2345	0007	22		23-11-21	115-199
	8		W2345	0008	22		23-11-21	115-199
	9		W2345	2501R	24		23-11-21	115-199
	10		W2345	2501B	24		23-11-21	115-199
	11		W2345	2501Z			23-11-21	115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
D41748J		P37/ /		RCPT				ALL
	1		W1270	0354	24		24-51-71	ALL
	2		W1270	0018	24		24-51-71	ALL
	3		W1272	0252	24		24-27-21	ALL
	4		W1272	0251	24		24-27-21	ALL
	5	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 71

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41748J		P37/ /		RCPT (continued)				ALL
	6	UNUSED						ALL
	7	UNUSED						001-099
	7		W1270	0498	20		25-31-21	115-199
	8		W1270	0353	24		24-51-71	ALL
	9		W1270	0017	24		24-51-71	ALL
	10		W1270	0351	24		24-51-71	ALL
	11	UNUSED						ALL
	12	UNUSED						001-099
	12		W1270	0049	22		33-27-11	115-199
	13		W1272	0250	24		24-28-11	ALL
	14		W1272	0093	24		24-27-21	ALL
	15	UNUSED						001-099
	15		W1270	0050	22		33-27-21	115-199
	16	UNUSED						ALL
	17		W1270	6462	20		24-51-24	ALL
	18		W1270	0880	24		24-51-71	ALL
	19		W1270	0881	24		24-51-71	ALL
	20		W1270	5997	22		32-42-12	001-099
	20	UNUSED						115-199
	21		W1270	5998	22		32-42-12	001-099
	21	UNUSED						115-199
	22		W1270	5013R	22		32-42-11	001-099
	22	UNUSED						115-199
	23		W1270	5013B	22		32-42-11	001-099
	23	UNUSED						115-199
	24		W1270	5013Z			32-42-11	001-099
	24	UNUSED						115-199
	25	UNUSED						ALL
	26		W1270	0100	24		24-34-11	001-099
	26		W1270	0100	22		24-34-11	115-199
	27	UNUSED						ALL
	28		W1272	0242	18		25-29-11	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 72

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41748J		P37/ /		RCPT (continued)				ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
D41748P		P037-00/ /		PLUG-				ALL
	1		W4502	0018	24		24-51-71	ALL
	2		W4502	0019	24		24-51-71	ALL
	3		W4502	0003	24		24-27-21	ALL
	4		W4502	0004	24		24-27-21	ALL
	5		W4502	0022	22		SPARE	ALL
	6	UNUSED						001-099
	6		W4502	0142	20		SPARE	115-199
	7	UNUSED						001-099
	7		W4502	0144	20		25-31-21	115-199
	8		W4502	0031	24		24-51-71	ALL
	9		W4502	0032	24		24-51-71	ALL
	10		W4502	0033	24		24-51-71	ALL
	11		W4502	0211	22		SPARE	ALL
	12		W4502	0046	22		SPARE	001-099
	12		W4502	0046	22		33-27-11	115-199
	13		W4502	0005	24		24-28-11	ALL
	14		W4502	0067	24		24-27-21	ALL
	15	UNUSED						001-099
	15		W4502	0050	22		33-27-21	115-199
	16		W4502	0088	24		SPARE	ALL
	17		W4502	0091	24		24-27-11	ALL
	18		W4502	0089	24		24-51-71	ALL
	19		W4502	0093	24		24-51-71	ALL
	20		W4502	0014	22		32-42-12	001-099
	20	UNUSED						115-199
	21		W4502	0024	22		32-42-12	001-099
	21	UNUSED						115-199
	22		W4502	5001R	22		32-42-11	001-099
	22	UNUSED						115-199
	23		W4502	5001B	22		32-42-11	001-099
	23	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 73

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41748P		P037-00/ /		PLUG- (continued)				ALL
	24		W4502	5001Z			32-42-11	001-099
	24	UNUSED						115-199
	25	UNUSED						ALL
	26		W4502	0604	24		24-34-11	001-099
	26		W4502	0604	22		24-34-11	115-199
	27		W4502	0062	16		SPARE	ALL
	28		W4502	0301	18		25-29-11	ALL
	29		W4502	0605	22		SPARE	ALL
	30		W4502	0606	22		SPARE	ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
D41749J		E003-02/ /		RCPT-				001-099
	= A1		W1423	013CX			34-32-11	001-099
	= C1		W1423	013CO			34-32-11	001-099
D41749P		E3-2/ /		PLUG-				001-099
	= A1		W2661	001CX			34-32-11	001-099
	= C1		W2661	001CO			34-32-11	001-099
D41750J		E005-03/ /		RCPT				001-099
D41750J		E5-3/ /		RCPT				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1286	4005B	24		24-23-12	ALL
	7		W1286	4005G	24		24-23-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 74

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41750J		E005-03/ /		RCPT (continued)				001-099
D41750J		E5-3/ /		RCPT (continued)				115-199
	8		W1286	4005R	24		24-23-12	ALL
	9		W1286	4005Y	24		24-23-12	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W1286	0135	24		24-22-22	ALL
	14		W1286	0134	24		24-22-22	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						001-099
	17		W1286	0078	22		25-31-21	115-199
	18		W1286	0305	22		25-31-11	001-099
	18	UNUSED						115-199
	19		W1286	5005B	24		24-22-22	ALL
	20		W1286	5005R	24		24-22-22	ALL
	21		W1286	5005Z			24-22-22	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D41750P		E005-03/ /		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W4502	4001B	24		24-23-12	ALL
	7		W4502	4001G	24		24-23-12	ALL
	8		W4502	4001R	24		24-23-12	ALL
	9		W4502	4001Y	24		24-23-12	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 75

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41750P		E005-03/ /		PLUG- (continued)				ALL
	12	UNUSED						ALL
	13		W4502	0009	24		24-22-22	001-099
	13		W4502	0009	20		24-22-22	115-199
	14		W4502	0008	24		24-22-22	ALL
	15	UNUSED						ALL
	16		W4502	0042	20		SPARE	ALL
	17		W4502	0043	20		SPARE	001-099
	17		W4502	0043	20		25-31-21	115-199
	18		W4502	0065	20		25-31-11	001-099
	18	UNUSED						115-199
	19		W4502	2504B	24		24-22-22	ALL
	20		W4502	2504R	24		24-22-22	ALL
	21		W4502	2504Z			24-22-22	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26		W4502	0601	22		SPARE	ALL
	27	UNUSED						ALL
	28	UNUSED						001-099
	28		W4502	0602	22		SPARE	115-199
	29	UNUSED						001-099
	29		W4502	0603	22		SPARE	115-199
	30	UNUSED						ALL
	31	UNUSED						ALL
D41752J		E5-1/ /		RCPT				ALL
	1		W1282	4003R	24		24-23-11	ALL
	2		W1282	4003Y	24		24-23-11	ALL
	3		W1282	4003B	24		24-23-11	ALL
	4		W1282	4003G	24		24-23-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 76

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41752J		E5-1/ /		RCPT (continued)				ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D41752P		E5-1/ /		PLUG-				ALL
	1		W2240	4001R	24		24-23-11	ALL
	2		W2240	4001Y	24		24-23-11	ALL
	3		W2240	4001B	24		24-23-11	ALL
	4		W2240	4001G	24		24-23-11	ALL
	5		W2240	0601	22		SPARE	001-002, 115-199
	5	UNUSED						003-099
	6	UNUSED						001-099
	6		W2240	0602	22		SPARE	115-199
	7	UNUSED						001-099
	7		W2240	0603	22		SPARE	115-199
	8	UNUSED						001-099
	8		W2240	0604	22		SPARE	115-199
	9	UNUSED						001-099
	9		W2240	0605	22		SPARE	115-199
	10		W2240	0606	20		SPARE	ALL
	11	UNUSED						001-099
	11		W2240	0607	20		SPARE	115-199
	12	UNUSED						001-099
	12		W2240	0608	20		SPARE	115-199
	13	UNUSED						001-099
	13		W2240	0609	20		SPARE	115-199
	14	UNUSED						ALL
	15	UNUSED						ALL
D41753J		E3-3/ /		RCPT-				ALL
	= A1		W1433	001CX			34-53-11	ALL
	= C1		W1433	001CO			34-53-11	ALL
D41753P		E003-03/ /		PLUG-				ALL
	= A1		W4453	001CX			34-53-11	ALL
	= C1		W4453	001CO			34-53-11	ALL
D41754J		P070-00/ /		RCPT-				ALL
	1		W1252	2001B	12		30-41-11	ALL
	2		W1252	2001R	12		30-41-11	ALL
	3		W1252	0113	18		21-58-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 77

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41754J		P070-00/ /		RCPT- (continued)				ALL
	4		W1252	0114	18		21-58-21	ALL
	5		W1252	0115	18		21-58-21	ALL
	6	UNUSED						ALL
	7		W1252	0107	20		30-41-11	ALL
	8		W1252	0108	20		30-41-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D41754P		P70/ /		PLUG-				ALL
	1		W2352	2001B	12		30-41-11	ALL
	2		W2352	2001R	12		30-41-11	ALL
	3		W2352	0113	18		21-58-21	ALL
	4		W2352	0114	18		21-58-21	ALL
	5		W2352	0115	18		21-58-21	ALL
	6	UNUSED						ALL
	7		W2352	0505	20		30-41-11	ALL
	8		W2352	0504	20		30-41-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						001-099
	11		W2352	0643	12		SPARE	115-199
	12	UNUSED						ALL
D41755J		E003-02/ /		RCPT- COAX				001-099
D41755J		E3-2/ /		RCPT- COAX				115-199
	= A1		W1423	001CX			34-53-21	ALL
	= C1		W1423	001CO			34-53-21	ALL
D41755P		E003-02/ /		PLUG-				ALL
	= A1		W4457	001CX			34-53-21	ALL
	= C1		W4457	001CO			34-53-21	ALL
D41756J		E001-01/ /		RCPT				ALL
	1		W1310	0011	20		30-41-12	ALL
	2		W1310	0010	20		30-41-12	ALL
	3	UNUSED						ALL
	4		W1310	2002B	12		30-41-12	ALL
	5		W1310	2002R	12		30-41-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 78

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41756J		E001-01/ /		RCPT (continued)				ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D41756P		E001-01/ /		PLUG-				001-099
D41756P		E1-1/ /		PLUG-				115-199
	1		W2244	0041	20		30-41-12	001-099
	1		W2244	0041	18		30-41-12	115-199
	2		W2244	0042	20		30-41-12	001-099
	2		W2244	0042	18		30-41-12	115-199
	3	UNUSED						ALL
	4		W2244	2003B	12		30-41-12	ALL
	5		W2244	2003R	12		30-41-12	ALL
	6	UNUSED						ALL
	7	UNUSED						001-099
	7		W2244	0057	16		SPARE	115-199
	8	UNUSED						001-099
	8		W2244	0058	16		SPARE	115-199
	9	UNUSED						001-099
	9		W2244	0604	20		SPARE	115-199
	10	UNUSED						001-099
	10		W2244	0605	20		SPARE	115-199
	11	UNUSED						001-099
	11		W2244	0606	20		SPARE	115-199
	12	UNUSED						001-099
	12		W2244	0607	20		SPARE	115-199
D41758J		E002-04/ /		RCPT-				001-099
D41758J		E2-4/ /		RCPT				115-199
	1	UNUSED						ALL
	2		W1177	0105	24		34-21-11	001-099
	2		W1179	0005	24		34-21-11	115-199
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 79

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41758P		E002-04/ /		PLUG-				ALL
	1	UNUSED						ALL
	2		W2250	1052	20		34-21-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						001-099
	DED		W2250	1052Z			34-21-11	ALL
D41761J		E003-01/ /		RCPT				ALL
	1		W1265	2004R	22		27-61-13	ALL
	2	UNUSED						ALL
	3		W1265	2004B	22		27-61-13	ALL
	4	UNUSED						ALL
	5		W1265	2005B	22		27-61-13	ALL
	6	UNUSED						ALL
	7		W1265	2005R	22		27-61-13	ALL
	8		W1265	2007B	22		27-61-13	ALL
	9		W1265	2007R	22		27-61-13	ALL
	10	UNUSED						ALL
	11		W1265	2010R	22		27-61-13	ALL
	12	UNUSED						ALL
	13		W1265	2010B	22		27-61-13	ALL
	14	UNUSED						ALL
	15		W1265	2009B	22		27-61-13	ALL
	16	UNUSED						ALL
	17		W1265	2009R	22		27-61-13	ALL
	18		W1265	2008B	22		27-61-13	ALL
	19		W1265	2008R	22		27-61-13	ALL
	20	UNUSED						ALL
	21		W1265	2015R	22		27-61-17	001-099
	21	UNUSED						115-199
	22		W1265	2015B	22		27-61-17	001-099
	22	UNUSED						115-199
	23		W1265	2016R	22		27-61-17	001-099
	23	UNUSED						115-199
	24		W1265	2016B	22		27-61-17	001-099
	24	UNUSED						115-199
	25		W1265	2017R	22		27-61-17	001-099
	25	UNUSED						115-199
	26		W1265	2017B	22		27-61-17	001-099
	26	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 80

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41761J		E003-01/ /		RCPT (continued)				ALL
	27		W1265	2019R	22		27-61-17	001-099
	27	UNUSED						115-199
	28		W1265	2019B	22		27-61-17	001-099
	28	UNUSED						115-199
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						001-099
	31		W1265	2015B	22		27-61-17	115-199
	32		W1265	2015R	22		27-61-17	115-199
	33		W1265	2016R	22		27-61-17	115-199
	34		W1265	2016B	22		27-61-17	115-199
	35		W1265	2017R	22		27-61-17	115-199
	36		W1265	2017B	22		27-61-17	115-199
	37		W1265	2019R	22		27-61-17	115-199
	38		W1265	2019B	22		27-61-17	115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
D41761P		E003-01/ /		PLUG-				ALL
	1		W2441	2001R	20		27-61-13	ALL
	2		W2441	2007R	20		SPARE	ALL
	3		W2441	2001B	20		27-61-13	ALL
	4		W2441	2007B	20		SPARE	ALL
	5		W2441	2002B	20		27-61-13	ALL
	6	UNUSED						ALL
	7		W2441	2002R	20		27-61-13	ALL
	8		W2441	2003B	20		27-61-13	ALL
	9		W2441	2003R	20		27-61-13	ALL
	10	UNUSED						ALL
	11		W2441	2004R	20		27-61-13	ALL
	12	UNUSED						ALL
	13		W2441	2004B	20		27-61-13	ALL
	14	UNUSED						ALL
	15		W2441	2005B	20		27-61-13	ALL
	16	UNUSED						ALL
	17		W2441	2005R	20		27-61-13	ALL
	18		W2441	2006B	20		27-61-13	ALL
	19		W2441	2006R	20		27-61-13	ALL
	20	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 81

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41761P		E003-01/ /		PLUG- (continued)				ALL
	21		W2441	2009R	22		27-61-17	001-099
	21	UNUSED						115-199
	22		W2441	2009B	22		27-61-17	001-099
	22	UNUSED						115-199
	23		W2441	2010R	22		27-61-17	001-099
	23	UNUSED						115-199
	24		W2441	2010B	22		27-61-17	001-099
	24	UNUSED						115-199
	25		W2441	2011R	22		27-61-17	001-099
	25	UNUSED						115-199
	26		W2441	2011B	22		27-61-17	001-099
	26	UNUSED						115-199
	27		W2441	2012R	22		27-61-17	001-099
	27	UNUSED						115-199
	28		W2441	2012B	22		27-61-17	001-099
	28	UNUSED						115-199
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						001-099
	31		W2441	2009B	22		27-61-17	115-199
	32		W2441	2009R	22		27-61-17	115-199
	33		W2441	2010R	22		27-61-17	115-199
	34		W2441	2010B	22		27-61-17	115-199
	35		W2441	2011R	22		27-61-17	115-199
	36		W2441	2011B	22		27-61-17	115-199
	37		W2441	2012R	22		27-61-17	115-199
	38		W2441	2012B	22		27-61-17	115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
D41763J		E003-01/ /		RCPT				ALL
	1		W1265	2204R	22		27-61-17	ALL
	2	UNUSED						ALL
	3		W1265	2204B	22		27-61-17	ALL
	4	UNUSED						ALL
	5		W1265	2205B	22		27-61-17	ALL
	6	UNUSED						ALL
	7		W1265	2205R	22		27-61-17	ALL
	8		W1265	2207B	22		27-61-17	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 82

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41763J		E003-01/ /		RCPT (continued)				ALL
	9		W1265	2207R	22		27-61-17	ALL
	10	UNUSED						ALL
	11		W1265	2210R	22		27-61-17	ALL
	12	UNUSED						ALL
	13		W1265	2210B	22		27-61-17	ALL
	14	UNUSED						ALL
	15		W1265	2209B	22		27-61-17	ALL
	16	UNUSED						ALL
	17		W1265	2209R	22		27-61-17	ALL
	18		W1265	2208B	22		27-61-17	ALL
	19		W1265	2208R	22		27-61-17	ALL
	20	UNUSED						ALL
	21		W1265	2214R	22		27-61-18	001-099
	21	UNUSED						115-199
	22		W1265	2214B	22		27-61-18	001-099
	22	UNUSED						115-199
	23		W1265	2216R	22		27-61-18	001-099
	23	UNUSED						115-199
	24		W1265	2216B	22		27-61-18	001-099
	24	UNUSED						115-199
	25		W1265	2217R	22		27-61-18	001-099
	25	UNUSED						115-199
	26		W1265	2217B	22		27-61-18	001-099
	26	UNUSED						115-199
	27		W1265	2218R	22		27-61-18	001-099
	27	UNUSED						115-199
	28		W1265	2218B	22		27-61-18	001-099
	28	UNUSED						115-199
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						001-099
	31		W1265	2214B	22		27-61-18	115-199
	32		W1265	2214R	22		27-61-18	115-199
	33		W1265	2216R	22		27-61-18	115-199
	34		W1265	2216B	22		27-61-18	115-199
	35		W1265	2217R	22		27-61-18	115-199
	36		W1265	2217B	22		27-61-18	115-199
	37		W1265	2218R	22		27-61-18	115-199
	38		W1265	2218B	22		27-61-18	115-199
	39	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 83

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41763J		E003-01/ /		RCPT (continued)				ALL
	40	UNUSED						115-199
	41	UNUSED						115-199
D41763P		E003-01/ /		PLUG-				ALL
	1		W2449	2001R	20		27-61-17	ALL
	2	UNUSED						ALL
	3		W2449	2001B	20		27-61-17	ALL
	4	UNUSED						ALL
	5		W2449	2002B	20		27-61-17	ALL
	6	UNUSED						ALL
	7		W2449	2002R	20		27-61-17	ALL
	8		W2449	2003B	20		27-61-17	ALL
	9		W2449	2003R	20		27-61-17	ALL
	10	UNUSED						ALL
	11		W2449	2004R	20		27-61-17	ALL
	12	UNUSED						ALL
	13		W2449	2004B	20		27-61-17	ALL
	14	UNUSED						ALL
	15		W2449	2005B	20		27-61-17	ALL
	16	UNUSED						ALL
	17		W2449	2005R	20		27-61-17	ALL
	18		W2449	2006B	20		27-61-17	ALL
	19		W2449	2006R	20		27-61-17	ALL
	20	UNUSED						ALL
	21		W2449	2009R	22		27-61-18	001-099
	21	UNUSED						115-199
	22		W2449	2009B	22		27-61-18	001-099
	22	UNUSED						115-199
	23		W2449	2010R	22		27-61-18	001-099
	23	UNUSED						115-199
	24		W2449	2010B	22		27-61-18	001-099
	24	UNUSED						115-199
	25		W2449	2011R	22		27-61-18	001-099
	25	UNUSED						115-199
	26		W2449	2011B	22		27-61-18	001-099
	26	UNUSED						115-199
	27		W2449	2012R	22		27-61-18	001-099
	27	UNUSED						115-199
	28		W2449	2012B	22		27-61-18	001-099
	28	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 84

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41763P		E003-01/ /		PLUG- (continued)				ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						001-099
	31		W2449	2009B	22		27-61-18	115-199
	32		W2449	2009R	22		27-61-18	115-199
	33		W2449	2010R	22		27-61-18	115-199
	34		W2449	2010B	22		27-61-18	115-199
	35		W2449	2011R	22		27-61-18	115-199
	36		W2449	2011B	22		27-61-18	115-199
	37		W2449	2012R	22		27-61-18	115-199
	38		W2449	2012B	22		27-61-18	115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
D41764J		E004-2/ /		RECPT-				001-099
D41764J		E4-2/ /		RCPT-				115-199
	1		W1275	0076	24		73-33-11	ALL
	1		W1275	0077	24		73-33-11	ALL
	2		W1275	5733	24		73-34-11	ALL
	2		W1275	5734	24		73-34-11	ALL
	3		W1275	2514R	24		77-12-11	ALL
	4		W1275	2514B	24		77-12-11	ALL
	5		W1275	2514Z			77-12-11	ALL
	6		W1275	2520R	24		77-12-21	ALL
	7		W1275	2520B	24		77-12-21	ALL
	8		W1275	2520Z			77-12-21	ALL
	9		W1275	0109	22		79-33-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1275	0116	24		79-35-11	ALL
	14		W1275	0117	24		79-35-11	ALL
	15	UNUSED						ALL
	16		W1275	0086	24		26-13-11	ALL
	16		W1275	0090	24		26-13-11	ALL
	17	UNUSED						ALL
	18		W1275	0517	24		80-11-11	ALL
	18		W1275	0518	24		80-11-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 85

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41764J		E004-2/ /		RECPT- (continued)				001-099
D41764J		E4-2/ /		RCPT- (continued)				115-199
	19		W1275	0520	24		80-11-11	ALL
	19		W1275	0521	24		80-11-11	ALL
	20	UNUSED						ALL
	21		W1275	6048	24		26-11-11	001-099
	21		W1275	6049	24		26-11-11	001-099
	21	UNUSED						115-199
	22		W1275	4507Z			77-21-11	001-099
	22	UNUSED						115-199
	23		W1275	4507W	22		77-21-11	ALL
	24		W1275	4507G	22		77-21-11	ALL
	25		W1275	4507Z			77-21-11	115-199
	26		W1275	5836	24		74-31-11	115-199
	26		W1275	5837	24		74-31-11	115-199
	27	UNUSED						115-199
	28		W1275	6048	24		26-11-11	115-199
	28		W1275	6049	24		26-11-11	115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
D41764P		E004-02/ /		PLUG				ALL
	1		W4230	0001	22		73-33-11	ALL
	2		W4230	0002	22		73-34-11	ALL
	3		W4230	2501R	22		77-12-11	ALL
	4		W4230	2501B	22		77-12-11	ALL
	5		W4230	2501Z			77-12-11	ALL
	6		W4230	2502R	22		77-12-21	ALL
	7		W4230	2502B	22		77-12-21	ALL
	8		W4230	2502Z			77-12-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 86

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41764P		E004-02/ /		PLUG (continued)				ALL
	9		W4230	0003	22		79-33-11	ALL
	10		W4230	0004	22		SPARE	001-099
	10	UNUSED						115-199
	11		W4230	0028	22		SPARE	ALL
	12		W4230	0027	22		SPARE	ALL
	13		W4230	0029	22		SPARE	ALL
	14		W4230	0005	22		79-35-11	ALL
	15		W4230	0035	24		SPARE	001-099
	15	UNUSED						115-199
	16		W4230	0010	22		26-13-11	ALL
	17		W4230	0026	20		SPARE	ALL
	18		W4230	0020	24		80-11-11	ALL
	19		W4230	0021	24		80-11-11	ALL
	20		W4230	0024	22		SPARE	ALL
	21		W4230	0036	22		26-11-11	001-099
	21	UNUSED						115-199
	22		W4230	4501Z			77-21-11	001-099
	22	UNUSED						115-199
	23	4L	W4230	4501W	20		77-21-11	ALL
	24	4H	W4230	4501G	20		77-21-11	ALL
	25		W4230	4501Z			77-21-11	115-199
	26		W4230	0035	24		74-31-11	115-199
	27	UNUSED						115-199
	28		W4230	0036	22		26-11-11	115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
D41765J		E003-01/ /		RCPT				ALL
	1		W1265	2104R	22		27-61-18	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 87

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41765J		E003-01/ /		RCPT (continued)				ALL
	2	UNUSED						ALL
	3		W1265	2104B	22		27-61-18	ALL
	4	UNUSED						ALL
	5		W1265	2105B	22		27-61-18	ALL
	6	UNUSED						ALL
	7		W1265	2105R	22		27-61-18	ALL
	8		W1265	2107B	22		27-61-18	ALL
	9		W1265	2107R	22		27-61-18	ALL
	10	UNUSED						ALL
	11		W1265	2110R	22		27-61-18	ALL
	12	UNUSED						ALL
	13		W1265	2110B	22		27-61-18	ALL
	14	UNUSED						ALL
	15		W1265	2109B	22		27-61-18	ALL
	16	UNUSED						ALL
	17		W1265	2109R	22		27-61-18	ALL
	18		W1265	2108B	22		27-61-18	ALL
	19		W1265	2108R	22		27-61-18	ALL
	20	UNUSED						ALL
	21		W1265	2121R	22		27-61-13	ALL
	22		W1265	2121B	22		27-61-13	ALL
	23		W1265	2122R	22		27-61-13	ALL
	24		W1265	2122B	22		27-61-13	ALL
	25		W1265	2123R	22		27-61-13	ALL
	26		W1265	2123B	22		27-61-13	ALL
	27		W1265	2124R	22		27-61-13	ALL
	28		W1265	2124B	22		27-61-13	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 88

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41765P		E003-01/ /		PLUG				ALL
	1		W2451	2001R	20		27-61-18	ALL
	2	UNUSED						ALL
	3		W2451	2001B	20		27-61-18	ALL
	4	UNUSED						ALL
	5		W2451	2002B	20		27-61-18	ALL
	6	UNUSED						ALL
	7		W2451	2002R	20		27-61-18	ALL
	8		W2451	2003B	20		27-61-18	ALL
	9		W2451	2003R	20		27-61-18	ALL
	10	UNUSED						ALL
	11		W2451	2004R	20		27-61-18	ALL
	12	UNUSED						ALL
	13		W2451	2004B	20		27-61-18	ALL
	14	UNUSED						ALL
	15		W2451	2005B	20		27-61-18	ALL
	16	UNUSED						ALL
	17		W2451	2005R	20		27-61-18	ALL
	18		W2451	2006B	20		27-61-18	ALL
	19		W2451	2006R	20		27-61-18	ALL
	20	UNUSED						ALL
	21		W2451	2009R	22		27-61-13	ALL
	22		W2451	2009B	22		27-61-13	ALL
	23		W2451	2010R	22		27-61-13	ALL
	24		W2451	2010B	22		27-61-13	ALL
	25		W2451	2011R	22		27-61-13	ALL
	26		W2451	2011B	22		27-61-13	ALL
	27		W2451	2012R	22		27-61-13	ALL
	28		W2451	2012B	22		27-61-13	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 89

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41765P		E003-01/ /		PLUG (continued)				ALL
	41	UNUSED						115-199
D41766J		P37/ /		RCPT				001-099
D41766J		P37/ /		PLUG				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1270	0128	22		27-62-11	001-099
	6		W1270	0128	20		27-62-11	115-199
	7		W1270	6784	20		27-62-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D41766P		P037-00/ /		PLUG				001-099
D41766P		P37/ /		PLUG				115-199
	1		W4208	0030	20		SPARE	ALL
	2		W4208	0031	20		SPARE	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W4208	0035	22		27-62-11	001-099
	6		W4208	0035	20		27-62-11	115-199
	7		W4208	0036	22		27-62-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 90

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41766P		P037-00/ /		PLUG (continued)				001-099
D41766P		P37/ /		PLUG (continued)				115-199
	7		W4208	0036	20		27-62-11	115-199
	8	UNUSED						001-099
	8		W4208	0037	22		SPARE	115-199
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D41767J		E004-01/ /		RCPT				001-099
D41767J		E4-1/ /		RCPT				115-199
	1		W1165	2004R	22		27-61-14	ALL
	2	UNUSED						ALL
	3		W1165	2004B	22		27-61-14	ALL
	4	UNUSED						ALL
	5		W1165	2005B	22		27-61-14	ALL
	6	UNUSED						ALL
	7		W1165	2005R	22		27-61-14	ALL
	8		W1165	2007B	22		27-61-14	ALL
	9		W1165	2007R	22		27-61-14	ALL
	10	UNUSED						ALL
	11		W1165	2010R	22		27-61-14	ALL
	12	UNUSED						ALL
	13		W1165	2010B	22		27-61-14	ALL
	14	UNUSED						ALL
	15		W1165	2009B	22		27-61-14	ALL
	16	UNUSED						ALL
	17		W1165	2009R	22		27-61-14	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 91

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41767J		E004-01/ /		RCPT (continued)				001-099
D41767J		E4-1/ /		RCPT (continued)				115-199
	18		W1165	2008B	22		27-61-14	ALL
	19		W1165	2008R	22		27-61-14	ALL
	20	UNUSED						ALL
	21		W1165	2014R	22		27-61-15	001-099
	21	UNUSED						115-199
	22		W1165	2014B	22		27-61-15	001-099
	22	UNUSED						115-199
	23		W1165	2015R	22		27-61-15	001-099
	23	UNUSED						115-199
	24		W1165	2015B	22		27-61-15	001-099
	24	UNUSED						115-199
	25		W1165	2016R	22		27-61-15	001-099
	25	UNUSED						115-199
	26		W1165	2016B	22		27-61-15	001-099
	26	UNUSED						115-199
	27		W1165	2017R	22		27-61-15	001-099
	27	UNUSED						115-199
	28		W1165	2017B	22		27-61-15	001-099
	28	UNUSED						115-199
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						001-099
	31		W1165	2014B	22		27-61-15	115-199
	32	UNUSED						001-099
	32		W1165	2014R	22		27-61-15	115-199
	33	UNUSED						001-099
	33		W1165	2015R	22		27-61-15	115-199
	34	UNUSED						001-099
	34		W1165	2015B	22		27-61-15	115-199
	35	UNUSED						001-099
	35		W1165	2016R	22		27-61-15	115-199
	36	UNUSED						001-099
	36		W1165	2016B	22		27-61-15	115-199
	37	UNUSED						001-099
	37		W1165	2017R	22		27-61-15	115-199
	38	UNUSED						001-099
	38		W1165	2017B	22		27-61-15	115-199
	39	UNUSED						ALL
	40	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 92

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41767J		E004-01/ /		RCPT (continued)				001-099
D41767J		E4-1/ /		RCPT (continued)				115-199
	41	UNUSED						ALL
D41767P		E004-01/ /		PLUG-				001-099
D41767P		E4-1/ /		PLUG-				115-199
	1		W2443	2001R	20		27-61-14	ALL
	2	UNUSED						ALL
	3		W2443	2001B	20		27-61-14	ALL
	4	UNUSED						ALL
	5		W2443	2002B	20		27-61-14	ALL
	6	UNUSED						ALL
	7		W2443	2002R	20		27-61-14	ALL
	8		W2443	2003B	20		27-61-14	ALL
	9		W2443	2003R	20		27-61-14	ALL
	10	UNUSED						ALL
	11		W2443	2004R	20		27-61-14	ALL
	12	UNUSED						ALL
	13		W2443	2004B	20		27-61-14	ALL
	14	UNUSED						ALL
	15		W2443	2005B	20		27-61-14	ALL
	16	UNUSED						ALL
	17		W2443	2005R	20		27-61-14	ALL
	18		W2443	2006B	20		27-61-14	ALL
	19		W2443	2006R	20		27-61-14	ALL
	20	UNUSED						ALL
	21		W2443	2009R	22		27-61-15	001-099
	21	UNUSED						115-199
	22		W2443	2009B	22		27-61-15	001-099
	22	UNUSED						115-199
	23		W2443	2010R	22		27-61-15	001-099
	23	UNUSED						115-199
	24		W2443	2010B	22		27-61-15	001-099
	24	UNUSED						115-199
	25		W2443	2011R	22		27-61-15	001-099
	25	UNUSED						115-199
	26		W2443	2011B	22		27-61-15	001-099
	26	UNUSED						115-199
	27		W2443	2012R	22		27-61-15	001-099
	27	UNUSED						115-199
	28		W2443	2012B	22		27-61-15	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 93

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41767P		E004-01/ /		PLUG- (continued)				001-099
D41767P		E4-1/ /		PLUG- (continued)				115-199
	28	UNUSED						115-199
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						001-099
	31		W2443	2009B	22		27-61-15	115-199
	32	UNUSED						001-099
	32		W2443	2009R	22		27-61-15	115-199
	33	UNUSED						001-099
	33		W2443	2010R	22		27-61-15	115-199
	34	UNUSED						001-099
	34		W2443	2010B	22		27-61-15	115-199
	35	UNUSED						001-099
	35		W2443	2011R	22		27-61-15	115-199
	36	UNUSED						001-099
	36		W2443	2011B	22		27-61-15	115-199
	37	UNUSED						001-099
	37		W2443	2012R	22		27-61-15	115-199
	38	UNUSED						001-099
	38		W2443	2012B	22		27-61-15	115-199
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D41769J		E004-01/ /		RCPT				001-099
D41769J		E4-1/ /		RCPT				115-199
	1		W1165	2204R	22		27-61-15	ALL
	2	UNUSED						ALL
	3		W1165	2204B	22		27-61-15	ALL
	4	UNUSED						ALL
	5		W1165	2205B	22		27-61-15	ALL
	6	UNUSED						ALL
	7		W1165	2205R	22		27-61-15	ALL
	8		W1165	2211B	22		27-61-15	ALL
	9		W1165	2211R	22		27-61-15	ALL
	10	UNUSED						ALL
	11		W1165	2208R	22		27-61-15	ALL
	12	UNUSED						ALL
	13		W1165	2208B	22		27-61-15	ALL
	14	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 94

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41769J		E004-01/ /		RCPT (continued)				001-099
D41769J		E4-1/ /		RCPT (continued)				115-199
	15		W1165	2207B	22		27-61-15	ALL
	16	UNUSED						ALL
	17		W1165	2207R	22		27-61-15	ALL
	18		W1165	2212B	22		27-61-15	ALL
	19		W1165	2212R	22		27-61-15	ALL
	20	UNUSED						ALL
	21		W1165	2214R	22		27-61-16	001-099
	21	UNUSED						115-199
	22		W1165	2214B	22		27-61-16	001-099
	22	UNUSED						115-199
	23		W1165	2215R	22		27-61-16	001-099
	23	UNUSED						115-199
	24		W1165	2215B	22		27-61-16	001-099
	24	UNUSED						115-199
	25		W1165	2216R	22		27-61-16	001-099
	25	UNUSED						115-199
	26		W1165	2216B	22		27-61-16	001-099
	26	UNUSED						115-199
	27		W1165	2217R	22		27-61-16	001-099
	27	UNUSED						115-199
	28		W1165	2217B	22		27-61-16	001-099
	28	UNUSED						115-199
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						001-099
	31		W1165	2214B	22		27-61-16	115-199
	32	UNUSED						001-099
	32		W1165	2214R	22		27-61-16	115-199
	33	UNUSED						001-099
	33		W1165	2215R	22		27-61-16	115-199
	34	UNUSED						001-099
	34		W1165	2215B	22		27-61-16	115-199
	35	UNUSED						001-099
	35		W1165	2216R	22		27-61-16	115-199
	36	UNUSED						001-099
	36		W1165	2216B	22		27-61-16	115-199
	37	UNUSED						001-099
	37		W1165	2217R	22		27-61-16	115-199
	38	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 95

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41769J		E004-01/ /		RCPT (continued)				001-099
D41769J		E4-1/ /		RCPT (continued)				115-199
	38		W1165	2217B	22		27-61-16	115-199
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D41769P		E004-01/ /		PLUG-				001-099
D41769P		E4-1/ /		PLUG-				115-199
	1		W2445	2001R	20		27-61-15	ALL
	2	UNUSED						ALL
	3		W2445	2001B	20		27-61-15	ALL
	4	UNUSED						ALL
	5		W2445	2002B	20		27-61-15	ALL
	6	UNUSED						ALL
	7		W2445	2002R	20		27-61-15	ALL
	8		W2445	2003B	20		27-61-15	ALL
	9		W2445	2003R	20		27-61-15	ALL
	10	UNUSED						ALL
	11		W2445	2004R	20		27-61-15	ALL
	12	UNUSED						ALL
	13		W2445	2004B	20		27-61-15	ALL
	14	UNUSED						ALL
	15		W2445	2005B	20		27-61-15	ALL
	16	UNUSED						ALL
	17		W2445	2005R	20		27-61-15	ALL
	18		W2445	2006B	20		27-61-15	ALL
	19		W2445	2006R	20		27-61-15	ALL
	20	UNUSED						ALL
	21		W2445	2009R	22		27-61-16	001-099
	21	UNUSED						115-199
	22		W2445	2009B	22		27-61-16	001-099
	22	UNUSED						115-199
	23		W2445	2010R	22		27-61-16	001-099
	23	UNUSED						115-199
	24		W2445	2010B	22		27-61-16	001-099
	24	UNUSED						115-199
	25		W2445	2011R	22		27-61-16	001-099
	25	UNUSED						115-199
	26		W2445	2011B	22		27-61-16	001-099
	26	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 96

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41769P		E004-01/ /		PLUG- (continued)				001-099
D41769P		E4-1/ /		PLUG- (continued)				115-199
	27		W2445	2012R	22		27-61-16	001-099
	27	UNUSED						115-199
	28		W2445	2012B	22		27-61-16	001-099
	28	UNUSED						115-199
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						001-099
	31		W2445	2009B	22		27-61-16	115-199
	32	UNUSED						001-099
	32		W2445	2009R	22		27-61-16	115-199
	33	UNUSED						001-099
	33		W2445	2010R	22		27-61-16	115-199
	34	UNUSED						001-099
	34		W2445	2010B	22		27-61-16	115-199
	35	UNUSED						001-099
	35		W2445	2011R	22		27-61-16	115-199
	36	UNUSED						001-099
	36		W2445	2011B	22		27-61-16	115-199
	37	UNUSED						001-099
	37		W2445	2012R	22		27-61-16	115-199
	38	UNUSED						001-099
	38		W2445	2012B	22		27-61-16	115-199
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D41770J		E6 RLY/PNL/		RCPT				ALL
	1		W1024	0058	24		28-25-21	ALL
	2	UNUSED						ALL
	3		W1024	0055	24		28-25-21	ALL
	4		W1024	0057	24		28-25-21	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 97

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41770P		1451 / /		PLUG				001-099
D41770P		E6 / /		PLUG				115-199
	1		W2658	0001	20		28-25-21	ALL
	2	UNUSED						ALL
	3		W2658	0003	20		28-25-21	ALL
	4		W2658	0004	20		28-25-21	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D41771J		E004-01 / /		RCPT				001-099
D41771J		E4-1 / /		RCPT				115-199
	1		W1165	2112R	22		27-61-16	ALL
	2	UNUSED						ALL
	3		W1165	2112B	22		27-61-16	ALL
	4	UNUSED						ALL
	5		W1165	2113B	22		27-61-16	ALL
	6	UNUSED						ALL
	7		W1165	2113R	22		27-61-16	ALL
	8		W1165	2119B	22		27-61-16	ALL
	9		W1165	2119R	22		27-61-16	ALL
	10	UNUSED						ALL
	11		W1165	2116R	22		27-61-16	ALL
	12	UNUSED						ALL
	13		W1165	2116B	22		27-61-16	ALL
	14	UNUSED						ALL
	15		W1165	2115B	22		27-61-16	ALL
	16	UNUSED						ALL
	17		W1165	2115R	22		27-61-16	ALL
	18		W1165	2120B	22		27-61-16	ALL
	19		W1165	2120R	22		27-61-16	ALL
	20	UNUSED						ALL
	21		W1165	2101R	22		27-61-14	ALL
	22		W1165	2101B	22		27-61-14	ALL
	23		W1165	2103R	22		27-61-14	ALL
	24		W1165	2103B	22		27-61-14	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 98

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41771J		E004-01/ /		RCPT (continued)				001-099
D41771J		E4-1/ /		RCPT (continued)				115-199
	25		W1165	2104R	22		27-61-14	ALL
	26		W1165	2104B	22		27-61-14	ALL
	27		W1165	2105R	22		27-61-14	ALL
	28		W1165	2105B	22		27-61-14	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D41771P		E4-1/ /		PLUG				ALL
	1		W2447	2001R	20		27-61-16	ALL
	2	UNUSED						ALL
	3		W2447	2001B	20		27-61-16	ALL
	4	UNUSED						ALL
	5		W2447	2002B	20		27-61-16	ALL
	6	UNUSED						ALL
	7		W2447	2002R	20		27-61-16	ALL
	8		W2447	2003B	20		27-61-16	ALL
	9		W2447	2003R	20		27-61-16	ALL
	10	UNUSED						ALL
	11		W2447	2004R	20		27-61-16	ALL
	12	UNUSED						ALL
	13		W2447	2004B	20		27-61-16	ALL
	14	UNUSED						ALL
	15		W2447	2005B	20		27-61-16	ALL
	16	UNUSED						ALL
	17		W2447	2005R	20		27-61-16	ALL
	18		W2447	2006B	20		27-61-16	ALL
	19		W2447	2006R	20		27-61-16	ALL
	20	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 99

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41771P		E4-1/ /		PLUG (continued)				ALL
	21		W2447	2009R	22		27-61-14	ALL
	22		W2447	2009B	22		27-61-14	ALL
	23		W2447	2010R	22		27-61-14	ALL
	24		W2447	2010B	22		27-61-14	ALL
	25		W2447	2011R	22		27-61-14	ALL
	26		W2447	2011B	22		27-61-14	ALL
	27		W2447	2012R	22		27-61-14	ALL
	28		W2447	2012B	22		27-61-14	ALL
	29		W2447	2013B	22		SPARE	001-099
	29	UNUSED						115-199
	30		W2447	2013R	22		SPARE	001-099
	30	UNUSED						115-199
	31		W2447	2014B	22		SPARE	001-099
	31	UNUSED						115-199
	32		W2447	2014R	22		SPARE	001-099
	32	UNUSED						115-199
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D41772J		E4-2/ /		RECPT-				001-099
D41772J		E4-2/ /		RCPT-				115-199
	1	UNUSED						ALL
	2		W1275	0605	24		75-31-11	001-099
	2		W1275	0623	24		75-31-11	001-099
	2		W1275	5845	24		75-31-11	115-199
	2		W1275	5846	24		75-31-11	115-199
	3	VP	W1275	6299	24		75-31-11	001-009
	3	VP	W1275	6300	24		75-31-11	001-009
	3	UNUSED						010-099, 115-199
	4		W1275	5019B	24		77-11-11	ALL
	5		W1275	5019R	24		77-11-11	ALL
	6		W1275	5019Z			77-11-11	ALL
	7	18	W1275	6072	18		73-21-12	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 100

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41772J		E4-2/ /		RECPT- (continued)				001-099
D41772J		E4-2/ /		RCPT- (continued)				115-199
	7	UNUSED						115-199
	8		W1275	2506R	24		77-12-31	ALL
	9		W1275	2506B	24		77-12-31	ALL
	10		W1275	2506Z			77-12-31	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1275	FRFY			77-31-11	ALL
	15	UNUSED						ALL
	16		W1275	FRFW			77-31-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W1275	5076B	24		77-11-11	ALL
	21		W1275	5076R	24		77-11-11	ALL
	22		W1275	5076Z			77-11-11	ALL
	23	UNUSED						001-099
	23	18	W1275	6072	18		73-21-12	115-199
	24	UNUSED						ALL
	25	UNUSED						ALL
	26		W1275	4523W	22		77-31-11	001-099
	26		W1275	2623B	22		77-31-11	115-199
	27		W1275	4523B	22		77-31-11	001-099
	27		W1275	2623W	22		77-31-11	115-199
	28		W1275	4524W	22		77-31-11	001-099
	28		W1275	2624B	22		77-31-11	115-199
	29		W1275	4524B	22		77-31-11	001-099
	29		W1275	2624W	22		77-31-11	115-199
	30		W1275	6504	24		77-31-11	001-099
	30	UNUSED						115-199
	31		W1275	6505	24		77-31-11	001-099
	31		W1275	6506	24		77-31-11	001-099
	31	UNUSED						115-199
CAP	Y		W1275	0475	24		75-31-11	115-199
CAP	Y		W1275	0476	24		75-31-11	115-199
			W1275	4523Z			77-31-11	001-099
			W1275	4524Z			77-31-11	001-099
			W1275	0606	22		77-31-11	ALL
			W1275	0607	22		77-31-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 101

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41772J		E4-2/ /		RECPT- (continued)				001-099
D41772J		E4-2/ /		RCPT- (continued)				115-199
			W1275	FRFW			77-31-11	ALL
			W1275	FRFY			77-31-11	ALL
			W1275	2623Z			77-31-11	115-199
			W1275	2624Z			77-31-11	115-199
D41772P		E004-02/ /		PLUG				ALL
	1	UNUSED						ALL
	2		W4232	0006	22		75-31-11	ALL
	3		W4232	0007	22		75-31-11	ALL
	4		W4232	5001B	22		77-11-11	ALL
	5		W4232	5001R	22		77-11-11	ALL
	6		W4232	5001Z			77-11-11	ALL
	7	18	W4232	0019	18		73-21-12	001-099
	7	UNUSED						115-199
	8		W4232	2501R	22		77-12-31	ALL
	9		W4232	2501B	22		77-12-31	ALL
	10		W4232	2501Z			77-12-31	ALL
	11	UNUSED						ALL
	12		W4232	0015	20		SPARE	001-099
	12	UNUSED						115-199
	13	UNUSED						ALL
	14		W4232	4501Z			77-31-11	ALL
	15	UNUSED						ALL
	16		W4232	4502Z			77-31-11	ALL
	17		W4232	0022	24		77-31-11	ALL
	18		W4232	0016	20		SPARE	001-099
	18	UNUSED						115-199
	19	UNUSED						ALL
	20		W4232	5002B	22		77-11-11	ALL
	21		W4232	5002R	22		77-11-11	ALL
	22		W4232	5002Z			77-11-11	ALL
	23	UNUSED						001-099
	23	18	W4232	0019	18		73-21-12	115-199
	24	UNUSED						ALL
	25		W4232	0022	24		77-31-11	ALL
	26		W4232	4501W	20		77-31-11	ALL
	27		W4232	4501R	20		77-31-11	ALL
	28		W4232	4502W	20		77-31-11	ALL
	29		W4232	4502R	20		77-31-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 102

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41772P		E004-02/ /		PLUG (continued)				ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D41773J		E004-01/ /		RCPT				001-099
D41773J		E4-1/ /		RCPT				115-199
	1	UNUSED						ALL
	2		W1165	0150	22		27-41-21	ALL
	3		W1165	0105	22		22-24-21	ALL
	4		W1165	0106	22		22-24-21	ALL
	5		W1165	0107	22		22-24-21	ALL
	6		W1165	0108	22		27-41-31	ALL
	7	UNUSED						ALL
	8		W1165	0109	22		22-22-21	ALL
	9		W1165	0148Y	22		27-41-21	ALL
	10		W1165	0149Y	22		27-41-21	ALL
	11		W1165	0152	22		27-41-21	ALL
	12		W1165	0038	22		27-09-12	ALL
	13		W1165	0041	22		27-09-13	ALL
	14		W1165	0042	22		27-09-13	ALL
	15		W1165	0098	22		27-21-22	ALL
	16		W1165	0099	22		27-21-22	ALL
	17		W1165	0100	22		27-21-22	ALL
	18		W1165	0101	22		27-21-22	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W1165	0029	20		27-31-22	ALL
	22		W1165	0030	22		27-31-22	ALL
	23		W1165	2033R	22		27-21-22	ALL
	24		W1165	2033B	22		27-21-22	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W1165	0031	22		27-31-22	ALL
	32		W1165	0104	22		22-21-21	ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 103

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41773J		E004-01/ /		RCPT (continued)				001-099
D41773J		E4-1/ /		RCPT (continued)				115-199
	36		W1165	0102	22		27-31-22	ALL
	37		W1165	0103	22		27-31-22	ALL
	38		W1165	0652	22		27-21-12	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D41773P		E004-01/ /		PLUG-				ALL
	1		W4421	0001	22		SPARE	ALL
	2		W4421	0002	22		27-41-11	ALL
	3		W4421	0003	22		22-24-21	ALL
	4		W4421	0004	22		22-24-21	ALL
	5		W4421	0005	22		22-24-21	ALL
	6		W4421	0006	22		27-41-31	ALL
	7		W4421	0007	22		SPARE	ALL
	8		W4421	0008	22		22-22-11	ALL
	9		W4421	0009Y	22		27-41-11	ALL
	10		W4421	0010Y	22		27-41-11	ALL
	11		W4421	0011	22		27-41-11	ALL
	12		W4421	0012	22		27-09-12	ALL
	13		W4421	0013	22		27-09-13	ALL
	14		W4421	0014	22		27-09-13	ALL
	15		W4421	0015	22		27-21-22	ALL
	16		W4421	0016	22		27-21-22	ALL
	17		W4421	0017	22		27-21-22	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 104

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41773P		E004-01/ /		PLUG- (continued)				ALL
	18		W4421	0018	22		27-21-22	ALL
	19	UNUSED						001-099
	19		W4421	2002R	22		SPARE	115-199
	20	UNUSED						001-099
	20		W4421	2002B	22		SPARE	115-199
	21		W4421	0021	20		27-31-12	ALL
	22		W4421	0022	20		27-31-12	ALL
	23		W4421	2001R	22		27-21-22	ALL
	24		W4421	2001B	22		27-21-22	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						001-099
	28		W4421	3001R	22		SPARE	115-199
	29	UNUSED						001-099
	29		W4421	3001B	22		SPARE	115-199
	30	UNUSED						001-099
	30		W4421	3001Y	22		SPARE	115-199
	31		W4421	0031	20		27-31-12	ALL
	32		W4421	0032	22		22-21-21	ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36		W4421	0036	22		27-31-22	ALL
	37		W4421	0037	22		27-31-22	ALL
	38		W4421	0038	22		27-21-12	ALL
	39		W4421	0039	22		SPARE	ALL
	40	UNUSED						001-099
	40		W4421	0040	22		SPARE	115-199
	41	UNUSED						001-099
	41		W4421	0041	22		SPARE	115-199
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 105

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41773P		E004-01/ /		PLUG- (continued)				ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D41774J		E4-2/ /		RECPT-				001-099
D41774J		E4-2/ /		RCPT-				115-199
	1		W1275	0073	24		73-33-11	ALL
	1		W1275	0074	24		73-33-11	ALL
	2		W1275	5730	24		73-34-11	ALL
	2		W1275	5731	24		73-34-11	ALL
	3		W1275	0106	22		79-33-11	ALL
	4		W1275	2510R	24		77-12-11	ALL
	5		W1275	2510B	24		77-12-11	ALL
	6		W1275	2510Z			77-12-11	ALL
	7		W1275	2517R	24		77-12-21	ALL
	8		W1275	2517B	24		77-12-21	ALL
	9		W1275	2517Z			77-12-21	ALL
	10		W1275	0113	24		79-35-11	ALL
	10		W1275	0114	24		79-35-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W1275	0094	24		26-13-21	ALL
	15		W1275	0095	24		26-13-21	ALL
	16	UNUSED						ALL
	17		W1275	0531	24		80-11-21	ALL
	17		W1275	0532	24		80-11-21	ALL
	18		W1275	5871	24		80-11-21	ALL
	18		W1275	5872	24		80-11-21	ALL
	19		W1275	4501W	22		77-21-11	001-099
	19	UNUSED						115-199
	20	UNUSED						ALL
	21	UNUSED						001-099
	21		W1275	5839	24		74-31-21	115-199
	21		W1275	5840	24		74-31-21	115-199
	22		W1275	4501G	22		77-21-11	ALL
	23		W1275	4501Z			77-21-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 106

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41774J		E4-2/ /		RECPT- (continued)				001-099
D41774J		E4-2/ /		RCPT- (continued)				115-199
	24	UNUSED						001-099
	24		W1275	5576	24		29-35-11	115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31		W1275	4501W	22		77-21-11	115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
D41774P		E004-02/ /		PLUG				ALL
	1		W4234	0001	22		73-33-11	ALL
	2		W4234	0002	22		73-34-11	ALL
	3		W4234	0003	22		79-33-11	ALL
	4		W4234	2501R	22		77-12-11	ALL
	5		W4234	2501B	22		77-12-11	ALL
	6		W4234	2501Z			77-12-11	ALL
	7		W4234	2502R	22		77-12-21	ALL
	8		W4234	2502B	22		77-12-21	ALL
	9		W4234	2502Z			77-12-21	ALL
	10		W4234	0004	22		79-35-11	ALL
	11		W4234	2503R	22		SPARE	ALL
	12		W4234	2503B	22		SPARE	ALL
	13		W4234	2503Z			SPARE	ALL
	14		W4234	0011	22		SPARE	ALL
	15		W4234	0013	22		26-13-21	ALL
	16		W4234	0014	22		SPARE	ALL
	17		W4234	0021	24		80-11-21	ALL
	18		W4234	0022	24		80-11-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 107

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41774P		E004-02/ /		PLUG (continued)				ALL
	19		W4234	4501W	20		77-21-11	001-099
	19	UNUSED						115-199
	20		W4234	0024	24		SPARE	ALL
	21		W4234	0032	24		SPARE	001-099
	21		W4234	0032	24		74-31-21	115-199
	22		W4234	4501G	20		77-21-11	ALL
	23		W4234	4501Z			77-21-11	ALL
	24		W4234	0033	20		SPARE	001-099
	24		W4234	0033	20		29-35-11	115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31		W4234	4501W	20		77-21-11	115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
D41775J		E003-01/ /		RCPT				ALL
	1	UNUSED						ALL
	2		W1265	0129	22		27-41-11	ALL
	3		W1265	0063	22		22-24-11	ALL
	4		W1265	0064	22		22-24-11	ALL
	5		W1265	0068	22		22-24-11	ALL
	6		W1265	0065	22		27-41-31	ALL
	7	UNUSED						ALL
	8		W1265	0061	22		22-22-11	ALL
	9		W1265	0126Y	22		27-41-11	ALL
	10		W1265	0127Y	22		27-41-11	ALL
	11		W1265	0128	22		27-41-11	ALL
	12		W1265	0003	22		27-09-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 108

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41775J		E003-01/ /		RCPT (continued)				ALL
	13		W1265	0010	22		27-09-13	ALL
	14		W1265	0009	22		27-09-13	ALL
	15		W1265	0106	22		27-21-22	ALL
	16		W1265	0107	22		27-21-22	ALL
	17		W1265	0108	22		27-21-22	ALL
	18		W1265	0109	22		27-21-22	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W1265	0031	20		27-31-12	ALL
	22		W1265	0032	20		27-31-12	ALL
	23		W1265	2003R	22		27-21-22	ALL
	24		W1265	2003B	22		27-21-22	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W1265	0033	20		27-31-12	ALL
	32		W1265	0092	22		22-21-11	ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36		W1265	0034	22		27-31-12	ALL
	37		W1265	0035	22		27-31-12	ALL
	38		W1265	0632	22		27-21-12	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 109

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41775J		E003-01/ /		RCPT (continued)				ALL
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D41775P		E003-01/ /		PLUG-				ALL
	1		W4421	0001	22		SPARE	ALL
	2		W4421	0002	22		27-41-11	ALL
	3		W4421	0003	22		22-24-21	ALL
	4		W4421	0004	22		22-24-21	ALL
	5		W4421	0005	22		22-24-21	ALL
	6		W4421	0006	22		27-41-31	ALL
	7		W4421	0007	22		SPARE	ALL
	8		W4421	0008	22		22-22-11	ALL
	9		W4421	0009Y	22		27-41-11	ALL
	10		W4421	0010Y	22		27-41-11	ALL
	11		W4421	0011	22		27-41-11	ALL
	12		W4421	0012	22		27-09-12	ALL
	13		W4421	0013	22		27-09-13	ALL
	14		W4421	0014	22		27-09-13	ALL
	15		W4421	0015	22		27-21-22	ALL
	16		W4421	0016	22		27-21-22	ALL
	17		W4421	0017	22		27-21-22	ALL
	18		W4421	0018	22		27-21-22	ALL
	19	UNUSED						001-099
	19		W4421	2002R	22		SPARE	115-199
	20	UNUSED						001-099
	20		W4421	2002B	22		SPARE	115-199
	21		W4421	0021	20		27-31-12	ALL
	22		W4421	0022	20		27-31-12	ALL
	23		W4421	2001R	22		27-21-22	ALL
	24		W4421	2001B	22		27-21-22	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						001-099
	28		W4421	3001R	22		SPARE	115-199
	29	UNUSED						001-099
	29		W4421	3001B	22		SPARE	115-199
	30	UNUSED						001-099
	30		W4421	3001Y	22		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 110

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41775P		E003-01/ /		PLUG- (continued)				ALL
	31		W4421	0031	20		27-31-12	ALL
	32		W4421	0032	22		22-21-21	ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36		W4421	0036	22		27-31-22	ALL
	37		W4421	0037	22		27-31-22	ALL
	38		W4421	0038	22		27-21-12	ALL
	39		W4421	0039	22		SPARE	ALL
	40	UNUSED						001-099
	40		W4421	0040	22		SPARE	115-199
	41	UNUSED						001-099
	41		W4421	0041	22		SPARE	115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D41776J		E4-2/ /		RCPT-				ALL
	1		W1275	0923	22		28-42-11	ALL
	2		W1275	0676	24		26-11-21	001-099
	2		W1275	0677	24		26-11-21	001-099
	2		W1275	0673	24		26-11-21	115-199
	2		W1275	0674	24		26-11-21	115-199
	3		W1275	0100	24		26-13-21	ALL
	3		W1275	0101	24		26-13-21	ALL
	4		W1275	0877	24		28-22-21	ALL
	4		W1275	0878	24		28-22-21	ALL
	5		W1275	0691	24		26-11-22	ALL
	5		W1275	0693	24		26-11-22	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 111

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41776J		E4-2/ /		RCPT- (continued)				ALL
	6		W1275	6051	24		26-11-22	ALL
	6		W1275	6052	24		26-11-22	ALL
	7		W1275	0706	24		26-12-21	ALL
	7		W1275	0708	24		26-12-21	ALL
	8		W1275	0752	22		26-21-11	ALL
	9	UNUSED						ALL
	10		W1275	0749	22		26-21-11	ALL
	11		W1275	5851	24		77-12-42	ALL
	11		W1275	5852	24		77-12-42	ALL
	12	UNUSED						ALL
	13		W1275	2611R	24		73-21-22	ALL
	14		W1275	2611B	24		73-21-22	ALL
	15		W1275	2612R	24		73-21-22	ALL
	16		W1275	2612B	24		73-21-22	ALL
	17		W1275	FRRS			73-21-22	001-099
	17		W1275	FRKB			73-21-22	115-199
	18	18	W1275	6076	18		73-21-22	ALL
	19		W1275	6077	24		73-21-22	ALL
	20		W1275	0465	24		73-21-22	ALL
	20		W1275	0466	24		73-21-22	ALL
	21		W1275	5071B	24		77-11-11	ALL
	22		W1275	5071R	24		77-11-11	ALL
	23		W1275	5071Z			77-11-11	ALL
	24		W1275	5839	24		74-31-21	001-099
	24		W1275	5840	24		74-31-21	001-099
	24		W1275	5072R	24		77-11-11	115-199
	25		W1275	5072B	24		77-11-11	ALL
	26		W1275	5072Z			77-11-11	ALL
	27		W1275	5072R	24		77-11-11	001-099
	27	UNUSED						115-199
	28		W1275	6275	22		29-11-22	ALL
	29	UNUSED						001-099
	29		W1275	6046	22		29-11-22	115-199
	30		W1275	6047	22		29-11-22	ALL
	31		W1275	0319	24		76-11-12	ALL
	31		W1275	0320	24		76-11-12	ALL
	32		W1275	0322	24		76-11-12	001-099
	32		W1275	0323	24		76-11-12	001-099
	32		W1275	5738	24		76-11-12	115-199
	33	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 112

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41776J		E4-2/ /		RCPT- (continued)				ALL
	34		W1275	6066	24		26-16-11	ALL
	34		W1275	6067	24		26-16-11	ALL
	35		W1275	6060	24		26-16-11	ALL
	35		W1275	6061	24		26-16-11	ALL
	36		W1275	0769	24		26-22-21	001-099
	36		W1275	0770	24		26-22-21	001-099
	36		W1275	0769	22		26-22-21	115-199
	37		W1275	2614B	24		77-12-11	ALL
	38		W1275	2614R	24		77-12-11	ALL
	39		W1275	2614Z			77-12-11	ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
	DED		W1275	6076Z			73-21-22	115-199
	DED		W1275	6077Z			73-21-22	115-199
			W1275	FRRS			73-21-22	001-099
			W1275	2611Z			73-21-22	ALL
			W1275	2612Z			73-21-22	ALL
			W1275	FRKB			73-21-22	115-199
D41776P		E004-02/ /		PLUG				ALL
	1		W4236	0012	22		28-42-11	ALL
	2		W4236	0021	22		26-11-21	ALL
	3		W4236	0028	22		26-13-21	ALL
	4		W4236	0071	22		28-22-21	ALL
	5		W4236	0043	22		26-11-22	ALL
	6		W4236	0044	22		26-11-22	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 113

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41776P		E004-02/ /		PLUG (continued)				ALL
	7		W4236	0052	22		26-12-21	ALL
	8		W4236	0147	22		26-21-11	ALL
	9		W4236	2509Z			SPARE	001-099
	9	UNUSED						115-199
	10		W4236	0062	22		26-21-11	ALL
	11		W4236	0078	24		77-12-42	001-099
	11		W4236	0078	22		77-12-42	115-199
	12		W4236	0221	20		SPARE	001-099
	12		W4236	0083	20		SPARE	115-199
	13		W4236	2505R	24		73-21-22	ALL
	14		W4236	2505B	24		73-21-22	ALL
	15		W4236	2506R	24		73-21-22	ALL
	16		W4236	2506B	24		73-21-22	ALL
	17		W4236	FRAB			73-21-22	001-099
	17		W4236	FRAD			73-21-22	115-199
	18	18	W4236	0110	18		73-21-22	ALL
	19		W4236	0111	24		73-21-22	ALL
	20		W4236	0112	24		73-21-22	ALL
	21		W4236	5001B	24		77-11-11	ALL
	22		W4236	5001R	24		77-11-11	ALL
	23		W4236	5001Z			77-11-11	ALL
	24		W4236	0116	24		74-31-21	001-099
	24		W4236	5002R	24		77-11-11	115-199
	25		W4236	5002B	24		77-11-11	ALL
	26		W4236	5002Z			77-11-11	ALL
	27		W4236	5002R	24		77-11-11	001-099
	27	UNUSED						115-199
	28		W4236	0165	20		29-11-22	ALL
	29	UNUSED						001-099
	29		W4236	0232	20		29-11-22	115-199
	30		W4236	0095	20		29-11-22	ALL
	31		W4236	0129	24		76-11-12	ALL
	32		W4236	0130	24		76-11-12	ALL
	33		W4236	0131	22		SPARE	ALL
	34		W4236	0135	22		26-16-11	ALL
	35		W4236	0136	22		26-16-11	ALL
	36		W4236	0137	22		26-22-21	ALL
	37		W4236	2508B	24		77-12-11	ALL
	38		W4236	2508R	24		77-12-11	ALL
	39		W4236	2508Z			77-12-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 114

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41776P		E004-02/ /		PLUG (continued)				ALL
	40		W4236	2509B	20		SPARE	001-099
	40	UNUSED						115-199
	41		W4236	2509R	20		SPARE	001-099
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
			W4236	FRAB			73-21-22	001-099
			W4236	2505Z			73-21-22	ALL
			W4236	2506Z			73-21-22	ALL
			W4236	FRAD			73-21-22	115-199
D41777J		E004-01/ /		RCPT				001-099
D41777J		E4-1/ /		RCPT				115-199
	1		W1165	0308	22		22-24-21	ALL
	2		W1165	0365Y	22		27-41-21	ALL
	3		W1165	0366Y	22		27-41-21	ALL
	4		W1165	0353	22		27-41-21	ALL
	5	UNUSED						ALL
	6		W1165	0347Y	22		27-41-21	ALL
	7		W1165	0233	22		27-09-12	ALL
	8		W1165	0257	22		27-09-13	ALL
	9		W1165	0258	22		27-09-13	ALL
	10		W1165	0317	22		27-21-12	ALL
	11		W1165	0318	22		27-21-12	ALL
	12		W1165	0319	22		27-21-12	ALL
	13		W1165	0320	22		27-21-12	ALL
	14		W1165	0321	22		27-21-12	ALL
	15		W1165	2124R	22		27-21-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 115

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41777J		E004-01/ /		RCPT (continued)				001-099
D41777J		E4-1/ /		RCPT (continued)				115-199
	16		W1165	2124B	22		27-21-12	ALL
	17		W1165	0369	22		27-09-14	001-099
	17	UNUSED						115-199
	18		W1165	0284	22		27-09-14	001-099
	18	UNUSED						115-199
	19		W1165	0286	22		27-09-14	001-099
	19	UNUSED						115-199
	20		W1165	0287	22		27-09-14	001-099
	20	UNUSED						115-199
	21		W1165	0283	22		27-09-14	001-099
	21	UNUSED						115-199
	22		W1165	0251	22		27-61-12	ALL
	23		W1165	0312	22		22-24-21	ALL
	24		W1165	0307	22		22-21-21	ALL
	25		W1165	0383	22		27-41-21	001-099
	25	UNUSED						115-199
	26		W1165	0382	22		27-41-21	001-099
	26	UNUSED						115-199
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W1165	0303	22		22-21-21	ALL
	32		W1165	0304	22		22-21-21	ALL
	33		W1165	0314	22		22-22-21	ALL
	34		W1165	0313	22		22-24-21	ALL
	35		W1165	0297	22		27-31-22	ALL
	36		W1165	0298	22		27-31-22	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						001-099
	42		W1165	0383	22		27-41-21	115-199
	43	UNUSED						001-099
	43		W1165	0382	22		27-41-21	115-199
	44	UNUSED						001-099
	44		W1165	0369	22		27-09-14	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 116

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41777J		E004-01/ /		RCPT (continued)				001-099
D41777J		E4-1/ /		RCPT (continued)				115-199
	45	UNUSED						001-099
	45		W1165	0284	22		27-09-14	115-199
	46	UNUSED						001-099
	46		W1165	0286	22		27-09-14	115-199
	47	UNUSED						001-099
	47		W1165	0287	22		27-09-14	115-199
	48	UNUSED						001-099
	48		W1165	0283	22		27-09-14	115-199
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D41777P		E004-01/ /		PLUG-				ALL
	1		W4423	0001	22		22-24-11	ALL
	2		W4423	0002Y	22		27-41-11	ALL
	3		W4423	0003Y	22		27-41-11	ALL
	4		W4423	0004	22		27-41-11	ALL
	5		W4423	0005	22		SPARE	ALL
	6		W4423	0006Y	22		27-41-11	ALL
	7		W4423	0007	22		27-09-12	ALL
	8		W4423	0008	22		27-09-13	ALL
	9		W4423	0009	22		27-09-13	ALL
	10		W4423	0010	22		27-21-12	ALL
	11		W4423	0011	22		27-21-12	ALL
	12		W4423	0012	22		27-21-12	ALL
	13		W4423	0013	22		27-21-12	ALL
	14		W4423	0014	22		27-21-12	ALL
	15		W4423	2001R	22		27-21-12	ALL
	16		W4423	2001B	22		27-21-12	ALL
	17		W4423	0044	22		27-09-14	001-099
	17		W4423	2002R	22		SPARE	115-199
	18		W4423	0045	22		27-09-14	001-099
	18		W4423	2002B	22		SPARE	115-199
	19		W4423	0046	22		27-09-14	001-099
	19		W4423	3001R	22		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 117

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41777P		E004-01/ /		PLUG- (continued)				ALL
	20		W4423	0047	22		27-09-14	001-099
	20		W4423	3001B	22		SPARE	115-199
	21		W4423	0048	22		27-09-14	001-099
	21		W4423	3001Y	22		SPARE	115-199
	22		W4423	0022	20		27-61-12	ALL
	23		W4423	0023	22		22-24-21	ALL
	24		W4423	0024	22		22-21-21	ALL
	25		W4423	0042Y	22		27-41-11	001-099
	25	UNUSED						115-199
	26		W4423	0043Y	22		27-41-11	001-099
	26	UNUSED						115-199
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W4423	0031	22		22-21-11	ALL
	32		W4423	0032	22		22-21-11	ALL
	33		W4423	0033	22		22-22-11	ALL
	34		W4423	0034	22		22-24-21	ALL
	35		W4423	0035	22		27-31-22	ALL
	36		W4423	0036	22		27-31-22	ALL
	37		W4423	0037	22		SPARE	ALL
	38		W4423	0038	22		SPARE	ALL
	39	UNUSED						001-099
	39		W4423	0039	22		SPARE	115-199
	40	UNUSED						001-099
	40		W4423	0040	22		SPARE	115-199
	41	UNUSED						001-099
	41		W4423	0041	22		SPARE	115-199
	42	UNUSED						001-099
	42		W4423	0042Y	22		27-41-11	115-199
	43	UNUSED						001-099
	43		W4423	0043Y	22		27-41-11	115-199
	44	UNUSED						001-099
	44		W4423	0044	22		27-09-14	115-199
	45	UNUSED						001-099
	45		W4423	0045	22		27-09-14	115-199
	46	UNUSED						001-099
	46		W4423	0046	22		27-09-14	115-199
	47	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 118

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41777P		E004-01/ /		PLUG- (continued)				ALL
	47		W4423	0047	22		27-09-14	115-199
	48	UNUSED						001-099
	48		W4423	0048	22		27-09-14	115-199
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D41779J		E003-01/ /		RCPT				ALL
	1		W1265	0330	22		22-24-11	ALL
	2		W1265	0335Y	22		27-41-11	ALL
	3		W1265	0338Y	22		27-41-11	ALL
	4		W1265	0341	22		27-41-11	ALL
	5	UNUSED						ALL
	6		W1265	0370Y	22		27-41-11	ALL
	7		W1265	0225	22		27-09-12	ALL
	8		W1265	0232	22		27-09-13	ALL
	9		W1265	0233	22		27-09-13	ALL
	10		W1265	0318	22		27-21-12	ALL
	11		W1265	0266	22		27-21-12	ALL
	12		W1265	0267	22		27-21-12	ALL
	13		W1265	0268	22		27-21-12	ALL
	14		W1265	0269	22		27-21-12	ALL
	15		W1265	2117R	22		27-21-12	ALL
	16		W1265	2117B	22		27-21-12	ALL
	17		W1265	0243	22		27-09-14	001-099
	17	UNUSED						115-199
	18		W1265	0317	22		27-09-14	001-099
	18	UNUSED						115-199
	19		W1265	0238	22		27-09-14	001-099
	19	UNUSED						115-199
	20		W1265	0237	22		27-09-14	001-099
	20	UNUSED						115-199
	21		W1265	0244	22		27-09-14	001-099
	21	UNUSED						115-199
	22		W1265	0315	22		27-61-12	ALL
	23		W1265	0328	22		22-24-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 119

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41779J		E003-01/ /		RCPT (continued)				ALL
	24		W1265	0322	22		22-21-11	ALL
	25		W1265	0380	22		27-41-11	001-099
	25	UNUSED						115-199
	26		W1265	0381	22		27-41-11	001-099
	26	UNUSED						115-199
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W1265	0325	22		22-21-11	ALL
	32		W1265	0326	22		22-21-11	ALL
	33		W1265	0327	22		22-22-11	ALL
	34		W1265	0329	22		22-24-11	ALL
	35		W1265	0270	22		27-31-12	ALL
	36		W1265	0271	22		27-31-12	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42		W1265	0380	22		27-41-11	115-199
	43		W1265	0381	22		27-41-11	115-199
	44		W1265	0243	22		27-09-14	115-199
	45		W1265	0317	22		27-09-14	115-199
	46		W1265	0238	22		27-09-14	115-199
	47		W1265	0237	22		27-09-14	115-199
	48		W1265	0244	22		27-09-14	115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D41779P		E003-01/ /		PLUG-				ALL
	1		W4423	0001	22		22-24-11	ALL
	2		W4423	0002Y	22		27-41-11	ALL
	3		W4423	0003Y	22		27-41-11	ALL
	4		W4423	0004	22		27-41-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 120

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41779P		E003-01/ /		PLUG- (continued)				ALL
	5		W4423	0005	22		SPARE	ALL
	6		W4423	0006Y	22		27-41-11	ALL
	7		W4423	0007	22		27-09-12	ALL
	8		W4423	0008	22		27-09-13	ALL
	9		W4423	0009	22		27-09-13	ALL
	10		W4423	0010	22		27-21-12	ALL
	11		W4423	0011	22		27-21-12	ALL
	12		W4423	0012	22		27-21-12	ALL
	13		W4423	0013	22		27-21-12	ALL
	14		W4423	0014	22		27-21-12	ALL
	15		W4423	2001R	22		27-21-12	ALL
	16		W4423	2001B	22		27-21-12	ALL
	17		W4423	0044	22		27-09-14	001-099
	17		W4423	2002R	22		SPARE	115-199
	18		W4423	0045	22		27-09-14	001-099
	18		W4423	2002B	22		SPARE	115-199
	19		W4423	0046	22		27-09-14	001-099
	19		W4423	3001R	22		SPARE	115-199
	20		W4423	0047	22		27-09-14	001-099
	20		W4423	3001B	22		SPARE	115-199
	21		W4423	0048	22		27-09-14	001-099
	21		W4423	3001Y	22		SPARE	115-199
	22		W4423	0022	20		27-61-12	ALL
	23		W4423	0023	22		22-24-21	ALL
	24		W4423	0024	22		22-21-21	ALL
	25		W4423	0042Y	22		27-41-11	001-099
	25	UNUSED						115-199
	26		W4423	0043Y	22		27-41-11	001-099
	26	UNUSED						115-199
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W4423	0031	22		22-21-11	ALL
	32		W4423	0032	22		22-21-11	ALL
	33		W4423	0033	22		22-22-11	ALL
	34		W4423	0034	22		22-24-21	ALL
	35		W4423	0035	22		27-31-22	ALL
	36		W4423	0036	22		27-31-22	ALL
	37		W4423	0037	22		SPARE	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 121

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41779P		E003-01/ /		PLUG- (continued)				ALL
	38		W4423	0038	22		SPARE	ALL
	39	UNUSED						001-099
	39		W4423	0039	22		SPARE	115-199
	40	UNUSED						001-099
	40		W4423	0040	22		SPARE	115-199
	41	UNUSED						001-099
	41		W4423	0041	22		SPARE	115-199
	42		W4423	0042Y	22		27-41-11	115-199
	43		W4423	0043Y	22		27-41-11	115-199
	44		W4423	0044	22		27-09-14	115-199
	45		W4423	0045	22		27-09-14	115-199
	46		W4423	0046	22		27-09-14	115-199
	47		W4423	0047	22		27-09-14	115-199
	48		W4423	0048	22		27-09-14	115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D41781J		E004-01/ /		RCPT				001-099
D41781J		E4-1/ /		RCPT				115-199
	1		W1165	0470	22		22-24-21	ALL
	2		W1165	0471	22		22-22-21	ALL
	3		W1165	0472	22		22-22-21	ALL
	4		W1165	0473	22		22-22-21	ALL
	5		W1165	0581	22		27-09-13	ALL
	6		W1165	0582	22		27-09-13	ALL
	7		W1165	5202B	24		22-22-21	ALL
	8		W1165	5202R	24		22-22-21	ALL
	9		W1165	5202Z			22-22-21	ALL
	10		W1165	0595	22		27-09-12	ALL
	11		W1165	0469	22		22-21-21	ALL
	12		W1165	0458	22		27-09-12	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 122

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41781J		E004-01/ /		RCPT (continued)				001-099
D41781J		E4-1/ /		RCPT (continued)				115-199
	17		W1165	5201R	24		22-21-21	ALL
	18		W1165	5201B	24		22-21-21	ALL
	19		W1165	5201Z			22-21-21	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D41781P		E004-01/ /		PLUG-				ALL
	1		W4425	0001	22		22-24-21	ALL
	2		W4425	0002	22		22-22-11	ALL
	3		W4425	0003	22		22-22-11	ALL
	4		W4425	0004	22		22-22-11	ALL
	5		W4425	0005	22		27-09-13	ALL
	6		W4425	0006	22		27-09-13	ALL
	7		W4425	2501B	24		22-22-11	ALL
	8		W4425	2501R	24		22-22-11	ALL
	9		W4425	2501Z			22-22-11	ALL
	10		W4425	0010	22		27-09-12	ALL
	11		W4425	0011	22		22-21-21	ALL
	12		W4425	0012	22		27-09-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 123

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41781P		E004-01/ /		PLUG- (continued)				ALL
	13		W4425	0013	22		SPARE	ALL
	14		W4425	0014	22		SPARE	ALL
	15	UNUSED						001-099
	15		W4425	2001B	22		SPARE	115-199
	16	UNUSED						001-099
	16		W4425	2001R	22		SPARE	115-199
	17		W4425	5001R	24		22-21-21	ALL
	18		W4425	5001B	24		22-21-21	ALL
	19		W4425	5001Z			22-21-21	ALL
	20	UNUSED						001-099
	20		W4425	0020	20		SPARE	115-199
	21	UNUSED						001-099
	21		W4425	3001B	22		SPARE	115-199
	22	UNUSED						001-099
	22		W4425	3001R	22		SPARE	115-199
	23	UNUSED						001-099
	23		W4425	3001Y	22		SPARE	115-199
	24	UNUSED						001-099
	24		W4425	0024	22		SPARE	115-199
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
D41782J		E2-3/ /		RCPT-				ALL
	1		W1175	2009R	22		22-33-11	ALL
	2		W1175	2009B	22		22-33-11	ALL

HOOKUP LIST
D280N032

91-21-51
Section D41700
Page 124
Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41782J		E2-3/ /		RCPT- (continued)				ALL
	3		W1175	2010B	24		22-33-11	ALL
	4		W1175	2010R	24		22-33-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1175	0338	22		77-11-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D41782P		E002-03/ /		PLUG				ALL
	1		W4232	2001R	20		22-33-11	ALL
	2		W4232	2001B	20		22-33-11	ALL
	3		W4232	2002B	20		22-33-11	ALL
	4		W4232	2002R	20		22-33-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W4232	1002	20		77-11-11	ALL
	8		W4232	2503B	20		SPARE	001-099
	8	UNUSED						115-199
	9		W4232	2503R	20		SPARE	001-099
	9	UNUSED						115-199
	10		W4232	2503Z			SPARE	001-099
	10	UNUSED						115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
D41783J		E003-01/ /		RCPT				ALL
	1		W1265	0491	22		22-24-11	ALL
	2		W1265	0489	22		22-22-11	ALL
	3		W1265	0488	22		22-22-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 125

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41783J		E003-01/ /		RCPT (continued)				ALL
	4		W1265	0490	22		22-22-11	ALL
	5		W1265	0428	22		27-09-13	ALL
	6		W1265	0429	22		27-09-13	ALL
	7		W1265	5206B	24		22-22-11	ALL
	8		W1265	5206R	24		22-22-11	ALL
	9		W1265	5206Z			22-22-11	ALL
	10		W1265	0592	22		27-09-12	ALL
	11		W1265	0484	22		22-21-11	ALL
	12		W1265	0420	22		27-09-12	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W1265	5203R	24		22-21-11	ALL
	18		W1265	5203B	24		22-21-11	ALL
	19		W1265	5203Z			22-21-11	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 126

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41783P		E003-01/ /		PLUG-				ALL
	1		W4425	0001	22		22-24-21	ALL
	2		W4425	0003	22		22-22-11	ALL
	3		W4425	0002	22		22-22-11	ALL
	4		W4425	0004	22		22-22-11	ALL
	5		W4425	0005	22		27-09-13	ALL
	6		W4425	0006	22		27-09-13	ALL
	7		W4425	2501B	24		22-22-11	ALL
	8		W4425	2501R	24		22-22-11	ALL
	9		W4425	2501Z			22-22-11	ALL
	10		W4425	0010	22		27-09-12	ALL
	11		W4425	0011	22		22-21-21	ALL
	12		W4425	0012	22		27-09-12	ALL
	13		W4425	0013	22		SPARE	ALL
	14		W4425	0014	22		SPARE	ALL
	15	UNUSED						001-099
	15		W4425	2001B	22		SPARE	115-199
	16	UNUSED						001-099
	16		W4425	2001R	22		SPARE	115-199
	17		W4425	5001R	24		22-21-21	ALL
	18		W4425	5001B	24		22-21-21	ALL
	19		W4425	5001Z			22-21-21	ALL
	20	UNUSED						001-099
	20		W4425	0020	20		SPARE	115-199
	21	UNUSED						001-099
	21		W4425	3001B	22		SPARE	115-199
	22	UNUSED						001-099
	22		W4425	3001R	22		SPARE	115-199
	23	UNUSED						001-099
	23		W4425	3001Y	22		SPARE	115-199
	24	UNUSED						001-099
	24		W4425	0024	22		SPARE	115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
	32	UNUSED						115-199
	33	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 127

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41783P		E003-01/ /		PLUG- (continued)				ALL
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
D41784J		E2-3/ /		RCPT-				ALL
	1		W1175	0410	24		73-21-22	001-099
	1		W1175	1029	24		73-21-22	115-199
	2		W1175	0409	24		73-21-22	001-099
	2		W1175	1028	24		73-21-22	115-199
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W1175	2008R	22		22-33-11	ALL
	6		W1175	2008B	22		22-33-11	ALL
	7		W1175	2007R	24		22-33-11	ALL
	8		W1175	2007B	24		22-33-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						001-099
	12	UNUSED						001-099
	DED		W1175	1028Z			73-21-22	115-199
	DED		W1175	1029Z			73-21-22	115-199
D41784P		E2-3/ /		PLUG				ALL
	1		W4238	0023	24		73-21-22	ALL
	2		W4238	0024	24		73-21-22	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W4238	2001R	20		22-33-11	ALL
	6		W4238	2001B	20		22-33-11	ALL
	7		W4238	2002R	20		22-33-11	ALL
	8		W4238	2002B	20		22-33-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						001-099
	12	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 128

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41785J		E004-01/ /		RCPT				001-099
D41785J		E4-1/ /		RCPT				115-199
	1		W1165	0650	22		22-24-21	ALL
	2		W1165	0651	22		22-22-21	ALL
	3		W1165	0654	22		27-41-21	ALL
	4		W1165	0655	22		27-41-21	ALL
	5	UNUSED						ALL
	6		W1165	0653	22		27-21-12	ALL
	7		W1165	0601	22		27-31-22	ALL
	8		W1165	0602	22		27-31-22	ALL
	9		W1165	0603	22		27-31-22	ALL
	10		W1165	0636	22		27-61-12	ALL
	11		W1165	0647	22		22-21-21	ALL
	12		W1165	0648	22		22-21-21	ALL
	13		W1165	0644	22		27-09-14	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W1165	0622	22		27-09-14	ALL
	18		W1165	0625	22		27-09-14	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W1165	0624	22		27-09-14	ALL
	24		W1165	0626	22		27-09-14	ALL
D41785P		E004-01/ /		PLUG-				ALL
	1		W4427	0001	22		22-24-21	ALL
	2		W4427	0002	22		22-22-11	ALL
	3		W4427	0003	22		27-41-11	ALL
	4		W4427	0004	22		27-41-11	ALL
	5		W4427	0005	22		SPARE	ALL
	6		W4427	0006	22		27-21-12	ALL
	7		W4427	0007	22		27-31-12	ALL
	8		W4427	0008	22		27-31-12	ALL
	9		W4427	0009	22		27-31-12	ALL
	10		W4427	0010	22		27-61-12	ALL
	11		W4427	0011	22		22-21-21	ALL
	12		W4427	0012	22		22-21-21	ALL
	13		W4427	0013	22		27-09-14	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 129

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41785P		E004-01/ /		PLUG- (continued)				ALL
	14		W4427	0014	22		SPARE	ALL
	15		W4427	2001B	22		SPARE	ALL
	16		W4427	2001R	22		SPARE	ALL
	17		W4427	0017	22		27-09-14	ALL
	18		W4427	0018	22		27-09-14	ALL
	19		W4427	2002B	22		SPARE	ALL
	20		W4427	2002R	22		SPARE	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W4427	0023	22		27-09-14	ALL
	24		W4427	0024	22		27-09-14	ALL
D41787J		E003-01/ /		RCPT				ALL
	1		W1265	0697	22		22-24-11	ALL
	2		W1265	0694	22		22-22-11	ALL
	3		W1265	0701	22		27-41-11	ALL
	4		W1265	0702	22		27-41-11	ALL
	5	UNUSED						ALL
	6		W1265	0633	22		27-21-12	ALL
	7		W1265	0638	22		27-31-12	ALL
	8		W1265	0639	22		27-31-12	ALL
	9		W1265	0641	22		27-31-12	ALL
	10		W1265	0683	22		27-61-12	ALL
	11		W1265	0690	22		22-21-11	ALL
	12		W1265	0691	22		22-21-11	ALL
	13		W1265	0656	22		27-09-14	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W1265	0620	22		27-09-14	ALL
	18		W1265	0609	22		27-09-14	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W1265	0611	22		27-09-14	ALL
	24		W1265	0610	22		27-09-14	ALL
D41787P		E003-01/ /		PLUG-				ALL
	1		W4427	0001	22		22-24-21	ALL

HOOKUP LIST
D280N032

91-21-51
Section D41700
Page 130
Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41787P		E003-01/ /		PLUG- (continued)				ALL
	2		W4427	0002	22		22-22-11	ALL
	3		W4427	0003	22		27-41-11	ALL
	4		W4427	0004	22		27-41-11	ALL
	5		W4427	0005	22		SPARE	ALL
	6		W4427	0006	22		27-21-12	ALL
	7		W4427	0007	22		27-31-12	ALL
	8		W4427	0008	22		27-31-12	ALL
	9		W4427	0009	22		27-31-12	ALL
	10		W4427	0010	22		27-61-12	ALL
	11		W4427	0011	22		22-21-21	ALL
	12		W4427	0012	22		22-21-21	ALL
	13		W4427	0013	22		27-09-14	ALL
	14		W4427	0014	22		SPARE	ALL
	15		W4427	2001B	22		SPARE	ALL
	16		W4427	2001R	22		SPARE	ALL
	17		W4427	0017	22		27-09-14	ALL
	18		W4427	0018	22		27-09-14	ALL
	19		W4427	2002B	22		SPARE	ALL
	20		W4427	2002R	22		SPARE	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W4427	0023	22		27-09-14	ALL
	24		W4427	0024	22		27-09-14	ALL
D41788J		E4-2/ /		RECPT-				001-099
D41788J		E4-2/ /		RCPT-				115-199
	1	UNUSED						ALL
	2	VP	W1275	6301	24		75-31-11	001-009
	2	VP	W1275	6302	24		75-31-11	001-009
	2	UNUSED						010-099, 115-199
	3		W1275	0961	24		75-31-11	001-099
	3		W1275	6287	24		75-31-11	001-099
	3		W1275	5842	24		75-31-11	115-199
	3		W1275	5843	24		75-31-11	115-199
	4		W1275	5013B	24		77-11-11	ALL
	5		W1275	5013R	24		77-11-11	ALL
	6		W1275	5013Z			77-11-11	ALL
	7	UNUSED						001-099
	7		W1275	6176	22		32-44-11	115-199
	8		W1275	2501B	24		77-12-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 131

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41788J		E4-2/ /		RECPT- (continued)				001-099
D41788J		E4-2/ /		RCPT- (continued)				115-199
	9		W1275	2501R	24		77-12-31	ALL
	10		W1275	2501Z			77-12-31	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1275	FRFT			77-31-11	ALL
	15	UNUSED						ALL
	16		W1275	FRFU			77-31-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	18	W1275	6075	18		73-21-22	ALL
	20		W1275	5071R	24		77-11-11	ALL
	21		W1275	5071B	24		77-11-11	ALL
	22		W1275	5071Z			77-11-11	ALL
	23	UNUSED						ALL
	24		W1275	5545	24		73-21-22	ALL
	24		W1275	5546	24		73-21-22	ALL
	25	UNUSED						ALL
	26		W1275	4521W	22		77-31-11	001-099
	26		W1275	2621B	22		77-31-11	115-199
	27		W1275	4521B	22		77-31-11	001-099
	27		W1275	2621W	22		77-31-11	115-199
	28		W1275	4522W	22		77-31-11	001-099
	28		W1275	2622B	22		77-31-11	115-199
	29		W1275	4522B	22		77-31-11	001-099
	29		W1275	2622W	22		77-31-11	115-199
	30	UNUSED						ALL
	31	UNUSED						ALL
CAP	Y		W1275	0471	24		75-31-11	115-199
CAP	Y		W1275	0472	24		75-31-11	115-199
DED			W1275	6075Z			73-21-22	115-199
			W1275	4521Z			77-31-11	001-099
			W1275	4522Z			77-31-11	001-099
			W1275	0602	22		77-31-11	ALL
			W1275	0604	22		77-31-11	ALL
			W1275	FRFT			77-31-11	ALL
			W1275	FRFU			77-31-11	ALL
			W1275	2621Z			77-31-11	115-199
			W1275	2622Z			77-31-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 132

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41788P		E4-2/ /		PLUG				ALL
	1		W4238	2502B	22		SPARE	001-099
	1	UNUSED						115-199
	2		W4238	0008	22		75-31-11	ALL
	3		W4238	0009	20		75-31-11	ALL
	4		W4238	5001B	22		77-11-11	ALL
	5		W4238	5001R	22		77-11-11	ALL
	6		W4238	5001Z			77-11-11	ALL
	7	UNUSED						001-099
	7		W4238	0016	22		32-44-11	115-199
	8		W4238	2501B	22		77-12-31	ALL
	9		W4238	2501R	22		77-12-31	ALL
	10		W4238	2501Z			77-12-31	ALL
	11		W4238	2502Z			SPARE	001-099
	11	UNUSED						115-199
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W4238	4501Z			77-31-11	ALL
	15	UNUSED						ALL
	16		W4238	4502Z			77-31-11	ALL
	17		W4238	0022	24		77-31-11	ALL
	18	UNUSED						ALL
	19	18	W4238	0014	18		73-21-22	001-099
	19	18	W4238	0003	18		73-21-22	115-199
	20		W4238	5002R	22		77-11-11	ALL
	21		W4238	5002B	22		77-11-11	ALL
	22		W4238	5002Z			77-11-11	ALL
	23		W4238	2502R	22		SPARE	001-099
	23	UNUSED						115-199
	24		W4238	0024	24		73-21-22	ALL
	25		W4238	0022	24		77-31-11	ALL
	26		W4238	4501W	20		77-31-11	ALL
	27		W4238	4501R	20		77-31-11	ALL
	28		W4238	4502W	20		77-31-11	ALL
	29		W4238	4502R	20		77-31-11	ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D41789J		E003-01/ /		RCPT-				ALL
	1		W1265	2028B	22		22-21-11	ALL
	2		W1265	2028R	22		22-21-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 133

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41789J		E003-01/ /		RCPT- (continued)				ALL
	3		W1265	0310	22		22-21-11	ALL
	4		W1265	2501R	22		22-21-11	ALL
	5		W1265	2501B	22		22-21-11	ALL
	6	UNUSED						ALL
	7		W1265	2501Z			22-21-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D41789P		E3-1/ /		PLUG-				ALL
	1		W2647	2001B	22		22-21-11	ALL
	2		W2647	2001R	22		22-21-11	ALL
	3		W2647	0003	22		22-21-11	ALL
	4		W2647	2501R	22		22-21-11	ALL
	5		W2647	2501B	22		22-21-11	ALL
	6		W2647	0006	22		22-21-11	ALL
	7		W2647	2501Z			22-21-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D41791J		E004-01/ /		RCPT-				001-099
D41791J		E4-1/ /		RCPT-				115-199
	1		W1165	2222B	22		22-21-21	ALL
	2		W1165	2222R	22		22-21-21	ALL
	3		W1165	0355	22		22-21-21	ALL
	4		W1165	2501R	22		22-21-21	ALL
	5		W1165	2501B	22		22-21-21	ALL
	6	UNUSED						ALL
	7		W1165	2501Z			22-21-21	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 134

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41791P		E4-1/ /		PLUG-				ALL
	1		W2649	2001B	22		22-21-21	ALL
	2		W2649	2001R	22		22-21-21	ALL
	3		W2649	0003	22		22-21-21	ALL
	4		W2649	2501R	22		22-21-21	ALL
	5		W2649	2501B	22		22-21-21	ALL
	6		W2649	0006	22		22-21-21	ALL
	7		W2649	2501Z			22-21-21	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D41792J		E4-2/ /		RCPT-				ALL
	1		W1275	0822	24		29-31-11	001-099
	1		W1275	0823	24		29-31-11	001-099
	1	UNUSED						115-199
	2		W1275	6186	20		29-31-11	001-099
	2	UNUSED						115-199
	3	UNUSED						ALL
	4		W1275	0869	24		29-35-11	ALL
	4		W1275	0870	24		29-35-11	ALL
	5		W1275	5721	24		29-35-11	ALL
	5		W1275	5722	24		29-35-11	ALL
	6		W1275	2074R	24		29-32-41	ALL
	7		W1275	2074B	24		29-32-41	ALL
	8	UNUSED						ALL
	9		W1275	6044	22		29-11-12	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W1275	0822	24		29-31-11	115-199
	13		W1275	0823	24		29-31-11	115-199
	14		W1275	6186	20		29-31-11	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 135

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41792J		E4-2/ /		RCPT- (continued)				ALL
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
D41792P		E004-02/ /		PLUG				001-099
D41792P		E4-2/ /		PLUG				115-199
	1		W4206	2008B	20		29-31-11	001-099
	1	UNUSED						115-199
	2		W4206	2008R	20		29-31-11	001-099
	2	UNUSED						115-199
	3	UNUSED						ALL
	4		W4206	0006	20		29-35-11	ALL
	5		W4206	0007	20		29-35-11	ALL
	6		W4206	2007R	20		29-32-41	ALL
	7		W4206	2007B	20		29-32-41	ALL
	8		W4206	0010	20		SPARE	ALL
	9		W4206	0034	20		29-11-12	ALL
	10		W4206	0038	22		SPARE	ALL
	11		W4206	0039	22		SPARE	ALL
	12	UNUSED						ALL
	13		W4206	2008B	20		29-31-11	115-199
	14		W4206	2008R	20		29-31-11	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
D41793J		E004-01/ /		RCPT				001-099
D41793J		E4-1/ /		RCPT				115-199
	1		W1165	2029R	22		27-21-22	ALL
	2		W1165	2029B	22		27-21-22	ALL
	3		W1165	3004R	22		27-21-22	ALL
	4		W1165	3004B	22		27-21-22	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 136

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41793J		E004-01/ /		RCPT (continued)				001-099
D41793J		E4-1/ /		RCPT (continued)				115-199
	5		W1165	3004Y	22		27-21-22	ALL
	6		W1165	2032R	22		27-21-22	ALL
	7		W1165	2032B	22		27-21-22	ALL
	8		W1165	2025R	22		22-21-21	ALL
	9		W1165	2025B	22		22-21-21	ALL
	10		W1165	3001R	22		22-21-21	ALL
	11		W1165	3001B	22		22-21-21	ALL
	12		W1165	3001Y	22		22-21-21	ALL
	13		W1165	2027R	22		22-21-21	ALL
	14		W1165	2027B	22		22-21-21	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W1165	0067	22		22-21-21	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26		W1165	0277Y	22		27-41-21	ALL
	27		W1165	0278Y	22		27-41-21	ALL
	28		W1165	0153	22		27-41-21	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
D41793P		E004-01/ /		PLUG-				001-099
D41793P		E4-1/ /		PLUG-				115-199
	1		W2617	2001R	22		27-21-22	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 137

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41793P		E004-01/ /		PLUG- (continued)				001-099
D41793P		E4-1/ /		PLUG- (continued)				115-199
	2		W2617	2001B	22		27-21-22	ALL
	3		W2617	3001R	22		27-21-22	ALL
	4		W2617	3001B	22		27-21-22	ALL
	5		W2617	3001Y	22		27-21-22	ALL
	6		W2617	2002R	22		27-21-22	ALL
	7		W2617	2002B	22		27-21-22	ALL
	8		W2617	2003R	22		22-21-21	ALL
	9		W2617	2003B	22		22-21-21	ALL
	10		W2617	3002R	22		22-21-21	ALL
	11		W2617	3002B	22		22-21-21	ALL
	12		W2617	3002Y	22		22-21-21	ALL
	13		W2617	2004R	22		22-21-21	ALL
	14		W2617	2004B	22		22-21-21	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W2617	0001	18		22-21-21	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26		W2617	0003Y	22		27-41-21	ALL
	27		W2617	0002Y	22		27-41-21	ALL
	28		W2617	0004	22		27-41-21	ALL
	29	UNUSED						ALL
	30		W2617	2005R	22		27-21-22	ALL
	31		W2617	2005B	22		27-21-22	ALL
	32		W2617	2006R	22		27-21-22	ALL
	33		W2617	2006B	22		27-21-22	ALL
	34	UNUSED						ALL
	35		W2617	2007R	22		22-21-21	ALL
	36		W2617	2007B	22		22-21-21	ALL
	37		W2617	0005Y	22		27-41-21	ALL
	38		W2617	0006	22		27-41-21	ALL
	39	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 138

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41794J		E4-2/ /		RCPT-				ALL
	1	UNUSED						ALL
	2		W1275	5694	24		32-09-12	ALL
	2		W1275	5695	24		32-09-12	ALL
	3		W1275	5691	24		32-09-12	ALL
	3		W1275	5692	24		32-09-12	ALL
	4		W1275	0800	24		29-31-11	ALL
	4		W1275	0801	24		29-31-11	ALL
	5		W1275	6046	22		29-11-22	001-099
	5	UNUSED						115-199
	6		W1275	6185	20		29-31-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W1275	6045	22		29-11-22	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
D41794P		E004-02/ /		PLUG				001-099
D41794P		E4-2/ /		PLUG				115-199
	1		W4212	0014	22		SPARE	ALL
	2		W4212	0012	22		32-09-12	ALL
	3		W4212	0013	22		32-09-12	ALL
	4		W4212	2007B	20		29-31-11	ALL
	5		W4212	0022	22		29-11-22	001-099
	5	UNUSED						115-199
	6		W4212	2007R	20		29-31-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 139

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41794P		E004-02/ /		PLUG (continued)				001-099
D41794P		E4-2/ /		PLUG (continued)				115-199
	9		W4212	0021	22		29-11-22	001-099
	9		W4212	0021	20		29-11-22	115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
D41795J		E003-01/ /		RCPT				ALL
	1		W1265	2115R	22		27-21-12	ALL
	2		W1265	2115B	22		27-21-12	ALL
	3		W1265	3103R	22		27-21-12	ALL
	4		W1265	3103B	22		27-21-12	ALL
	5		W1265	3103Y	22		27-21-12	ALL
	6		W1265	2133R	22		27-21-12	ALL
	7		W1265	2133B	22		27-21-12	ALL
	8		W1265	0319	22		27-21-12	ALL
	9	UNUSED						ALL
	10		W1265	2129R	22		22-21-11	ALL
	11		W1265	2129B	22		22-21-11	ALL
	12		W1265	3104R	22		22-21-11	ALL
	13		W1265	3104B	22		22-21-11	ALL
	14		W1265	3104Y	22		22-21-11	ALL
	15		W1265	2131R	22		22-21-11	ALL
	16		W1265	2131B	22		22-21-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 140

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41795J		E003-01/ /		RCPT (continued)				ALL
	21		W1265	0299	22		22-21-11	ALL
	22		W1265	0366Y	22		27-41-11	ALL
	23		W1265	0367Y	22		27-41-11	ALL
	24		W1265	0369Y	22		27-41-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
D41795P		E003-01/ /		PLUG-				001-099
D41795P		E3-1/ /		PLUG-				115-199
	1		W2631	2001R	22		27-21-12	ALL
	2		W2631	2001B	22		27-21-12	ALL
	3		W2631	3001R	22		27-21-12	ALL
	4		W2631	3001B	22		27-21-12	ALL
	5		W2631	3001Y	22		27-21-12	ALL
	6		W2631	2002R	22		27-21-12	ALL
	7		W2631	2002B	22		27-21-12	ALL
	8		W2631	0001	22		27-21-12	ALL
	9	UNUSED						ALL
	10		W2631	2003R	22		22-21-11	ALL
	11		W2631	2003B	22		22-21-11	ALL
	12		W2631	3002R	22		22-21-11	ALL
	13		W2631	3002B	22		22-21-11	ALL
	14		W2631	3002Y	22		22-21-11	ALL
	15		W2631	2004R	22		22-21-11	ALL
	16		W2631	2004B	22		22-21-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 141

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41795P		E003-01/ /		PLUG- (continued)				001-099
D41795P		E3-1/ /		PLUG- (continued)				115-199
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W2631	0002	18		22-21-11	ALL
	22		W2631	0003Y	22		27-41-11	ALL
	23		W2631	0004Y	22		27-41-11	ALL
	24		W2631	0005Y	22		27-41-11	ALL
	25		W2631	2005R	22		27-21-12	ALL
	26		W2631	2005B	22		27-21-12	ALL
	27		W2631	2006R	22		27-21-12	ALL
	28		W2631	2006B	22		27-21-12	ALL
	29		W2631	2007R	22		22-21-11	ALL
	30		W2631	2007B	22		22-21-11	ALL
	31		W2631	0006Y	22		27-41-11	ALL
	32		W2631	0007	22		27-41-11	ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
D41797J		E6-3/ /		RCPT-				115-199
	1	UNUSED						115-199
	2	UNUSED						115-199
	3		W1017	0009	22		23-11-11	115-199
	4		W1017	0010	22		23-11-11	115-199
	5		W1017	0008	22		23-11-11	115-199
	6		W1017	0011	22		23-11-11	115-199
	7		W1017	0012	22		23-11-11	115-199
	8		W1017	0013	22		23-11-11	115-199
	9		W1017	2501R	24		23-11-11	115-199
	10		W1017	2501B	24		23-11-11	115-199
	11		W1017	2501Z			23-11-11	115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 142

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41797P		E6-3/ /		PLUG-				115-199
	1	UNUSED						115-199
	2	UNUSED						115-199
	3		W2343	0003	22		23-11-11	115-199
	4		W2343	0004	22		23-11-11	115-199
	5		W2343	0005	22		23-11-11	115-199
	6		W2343	0006	22		23-11-11	115-199
	7		W2343	0007	22		23-11-11	115-199
	8		W2343	0008	22		23-11-11	115-199
	9		W2343	2501R	24		23-11-11	115-199
	10		W2343	2501B	24		23-11-11	115-199
	11		W2343	2501Z			23-11-11	115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
D41799J		E6-3/ /		RCPT-				115-199
	1		W1017	0016	22		23-11-11	115-199
	2		W1017	0017	22		23-11-11	115-199
	3		W1017	0014	20		23-11-11	115-199
	4		W1017	0018	22		23-11-11	115-199
	5		W1017	0020	20		23-11-11	115-199
	6		W1017	0015	20		23-11-11	115-199
	7		W1017	0012	22		23-11-11	115-199
	8		W1017	0013	22		23-11-11	115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
D41799P		E6-3/ /		PLUG-				115-199
	1		W2663	0001	20		23-11-11	115-199
	2		W2663	0002	20		23-11-11	115-199
	3		W2663	0003	20		23-11-11	115-199
	4		W2663	0004	20		23-11-11	115-199
	5		W2663	0005	20		23-11-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 143

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41799P		E6-3/ /		PLUG- (continued)				115-199
	6		W2663	0006	20		23-11-11	115-199
	7		W2663	0007	20		23-11-11	115-199
	8		W2663	0008	20		23-11-11	115-199
	9		W2663	0009	20		SPARE	115-199
	10		W2663	0010	20		SPARE	115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41700

Page 144 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41801J		E003-02/ /		RCPT-COAX				001-099
D41801J		E3-2/ /		RCPT				115-199
	= A1		W1423	014CX			34-53-21	ALL
	= C1		W1423	014CO			34-53-21	ALL
D41801P		E003-02/ /		PLUG-				ALL
	= A1		W4455	001CX			34-53-21	ALL
	= C1		W4455	001CO			34-53-21	ALL
D41805J		E6-3/ /		RCPT				115-199
	= A1		W1017	002CX			23-11-21	115-199
	= C1		W1017	002CO			23-11-21	115-199
D41805P		E006-03/ /		PLUG				115-199
	= A1		W2669	001CX			23-11-21	115-199
	= C1		W2669	001CO			23-11-21	115-199
D41807J		E6-3/ /		RCPT-				115-199
	= A1		W1017	001CX			23-11-11	115-199
	= C1		W1017	001CO			23-11-11	115-199
D41807P		E6-3/ /		PLUG-				115-199
	= A1		W2667	001CX			23-11-11	115-199
	= C1		W2667	001CO			23-11-11	115-199
D41810J		E2-1/ /		RCPT-				115-199
	1		W1171	0333	22		32-42-12	115-199
	2		W1171	0334	22		32-42-12	115-199
	3		W1171	0336	22		32-42-12	115-199
	4		W1171	0337	22		32-42-12	115-199
	5		W1171	0339	22		32-42-12	115-199
	6		W1171	0340	22		32-42-12	115-199
	7		W1171	0341	22		32-42-12	115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41810J		E2-1/ /		RCPT- (continued)				115-199
	15	UNUSED						115-199
D41810P		E2-1/ /		PLUG				115-199
	1		W4106	0218	22		32-42-12	115-199
	2		W4106	0219	22		32-42-12	115-199
	3		W4106	0220	22		32-42-12	115-199
	4		W4106	0221	22		32-42-12	115-199
	5		W4106	0222	22		32-42-12	115-199
	6		W4106	0223	22		32-42-12	115-199
	7		W4106	0224	22		32-42-12	115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
D41812J		AC1090/ /		RCPT-				ALL
	1		W2646	2503B	20		32-42-12	ALL
	2		W2646	2503R	20		32-42-12	ALL
	3		W2646	0007	20		32-42-12	ALL
	4		W2646	0008	20		32-42-12	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W2646	0011	20		32-42-12	ALL
	8		W2646	0012	20		32-42-12	ALL
	9		W2646	0004	20		32-42-11	ALL
	10	UNUSED						ALL
	11		W2646	0001	20		32-42-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W2646	0016	20		SPARE	ALL
	17		W2646	0017	20		SPARE	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41812J		AC1090/ /		RCPT- (continued)				ALL
	21		W2646	2503Z			32-42-12	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D41812P		AC1090/ /		PLUG				ALL
	1		W2412	2501B	20		32-42-12	ALL
	2		W2412	2501R	20		32-42-12	ALL
	3	18	W2412	2517R	18		32-42-12	ALL
	4	18	W2412	2517B	18		32-42-12	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	18	W2412	2521R	18		32-42-12	ALL
	8	18	W2412	2521B	18		32-42-12	ALL
	9	18	W2412	1011	18		32-42-11	ALL
	10	UNUSED						ALL
	11	18	W2412	1009	18		32-42-11	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	18	W2412	2501ZI			32-42-12	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	S/R		W2412	1009Z			32-42-11	ALL
	S/R		W2412	1011Z			32-42-11	ALL
	S/R		W2412	2501ZO			32-42-12	ALL
	S/R		W2412	2517Z			32-42-12	ALL
	S/R		W2412	2521Z			32-42-12	ALL
D41813J		E6-3/ /		RCPT				115-199
	1		W1017	0036	22		23-11-21	115-199
	2		W1017	0037	22		23-11-21	115-199
	3		W1017	0034	20		23-11-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41813J		E6-3/ /		RCPT (continued)				115-199
	4		W1017	0038	22		23-11-21	115-199
	5		W1017	0040	20		23-11-21	115-199
	6		W1017	0035	20		23-11-21	115-199
	7		W1017	0032	22		23-11-21	115-199
	8		W1017	0033	22		23-11-21	115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
D41813P		E6-3/ /		PLUG				115-199
	1		W2665	0001	20		23-11-21	115-199
	2		W2665	0002	20		23-11-21	115-199
	3		W2665	0003	20		23-11-21	115-199
	4		W2665	0004	20		23-11-21	115-199
	5		W2665	0005	20		23-11-21	115-199
	6		W2665	0006	20		23-11-21	115-199
	7		W2665	0007	20		23-11-21	115-199
	8		W2665	0008	20		23-11-21	115-199
	9		W2665	0009	20		SPARE	115-199
	10		W2665	0010	20		SPARE	115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
D41814J		930/300/R30		RCPT-				001-099
D41814J		930/300/R30		RECP-				115-199
	1	UNUSED						001-099
	1		W3614	0371	20		33-21-22	115-199
	2	UNUSED						ALL
	3	UNUSED						001-099
	3		W3614	0373	24		33-21-22	115-199
	4	UNUSED						001-099
	4		W3614	0370	20		33-21-51	115-199
	5	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 4

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41814J		930/300/R30		RCPT- (continued)				001-099
D41814J		930/300/R30		RECP- (continued)				115-199
	6		W3614	0353	24		33-21-21	001-099
	7		W3614	0351	20		33-21-21	001-099
	8		W3614	0308	20		SPARE	001-099
	9		W3614	0309	20		SPARE	001-099
	10		W3614	0340	20		33-21-51	001-099
	11	UNUSED						001-099
	12		W3614	0312	20		SPARE	001-099
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D41814P		930/300/R30		PLUG-				ALL
	1	UNUSED						001-099
	1		W3616	0371	20		33-21-22	115-199
	2	UNUSED						ALL
	3	UNUSED						001-099
	3		W3616	0373	24		33-21-22	115-199
	4	UNUSED						001-099
	4		W3616	0310	20		33-21-51	115-199
	5	UNUSED						ALL
	6		W3616	0306	24		33-21-22	001-099
	7		W3616	0307	20		33-21-22	001-099
	8		W3616	0308	20		SPARE	001-099
	9	UNUSED						001-099
	10		W3616	0310	20		33-21-51	001-099
	11	UNUSED						001-099
	12		W3616	0312	20		SPARE	001-099
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D41815J		E2-3/ /		RCPT-				001-002, 115-199
D41815J		E002-03/ /		RCPT-				003-099
	1		W1175	0202	22		22-12-31	ALL
	2		W1175	0204	22		22-12-31	ALL
	3		W1175	5073R	24		22-22-11	ALL
	4		W1175	5073B	24		22-22-11	ALL
	5		W1175	5073Z			22-22-11	ALL
	6		W1175	0203	22		22-12-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 5

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41815J		E2-3/ /		RCPT- (continued)				001-002, 115-199
D41815J		E002-03/ /		RCPT- (continued)				003-099
	7		W1175	5029R	24		22-41-11	ALL
	8		W1175	5029B	24		22-41-11	ALL
	9		W1175	FRER			22-41-11	ALL
	10		W1175	0191	22		22-11-32	ALL
	11		W1175	0274	20		34-21-31	ALL
	12	UNUSED						001-002, 115-199
	12		W1175	0501	24		34-45-01	003-099
	13		W1175	0369	24		34-45-01	ALL
	14	UNUSED						ALL
	15		W1175	5109R	24		34-45-01	ALL
	16		W1175	5109B	24		34-45-01	ALL
	17		W1175	FRJA			34-45-01	ALL
	18	UNUSED						001, 003-099, 115-199
	18		W1175	5201R	22		34-58-21	002
	19		W1175	5026R	24		31-31-42	001-099
	19		W1175	5026R	24		31-31-22	115-199
	20		W1175	5026B	24		31-31-42	001-099
	20		W1175	5026B	24		31-31-22	115-199
	21		W1175	5026Z			31-31-42	001-099
	21		W1175	5026Z			31-31-22	115-199
	22		W1175	5084R	24		31-31-42	001, 003-099
	22		W1175	5084R	22		31-31-42	002
	22		W1175	FRFD			31-31-22	115-199
	23		W1175	5084B	24		31-31-42	001, 003-099
	23		W1175	5084B	22		31-31-42	002
	23		W1175	5084R	24		31-31-22	115-199
	24		W1175	FRLI			31-31-42	001, 003-099
	24		W1175	5084Z			31-31-42	002
	24		W1175	5084B	24		31-31-22	115-199
	25		W1175	5086R	24		31-31-43	001-099
	25		W1175	5086Z			31-31-22	115-199
	26		W1175	5086B	24		31-31-43	001-099
	26		W1175	5086R	24		31-31-22	115-199
	27		W1175	5086Z			31-31-43	001-099
	27		W1175	5086B	24		31-31-22	115-199
	28		W1175	5089B	24		22-12-31	ALL
	29		W1175	5089R	24		22-12-31	ALL
	30		W1175	FRFK			22-12-31	ALL
	31		W1175	0299	22		22-15-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 6

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41815J		E2-3/ /		RCPT- (continued)				001-002, 115-199
D41815J		E002-03/ /		RCPT- (continued)				003-099
	32		W1175	0300	22		22-15-12	ALL
	33	UNUSED						001, 003-099, 115-199
	33		W1175	5201B	22		34-58-21	002
	34		W1175	5203R	24		31-31-42	001-099
	34	UNUSED						115-199
	35		W1175	5203B	24		31-31-42	001-099
	35	UNUSED						115-199
	36		W1175	FRLH			31-31-42	001-099
	36	UNUSED						115-199
	37	UNUSED						001, 003-099
	37		W1175	5201Z			34-58-21	002
	37		W1175	0277	24		31-51-34	115-199
	38		W1175	0334	22		22-14-11	ALL
	39		W1175	0326	22		22-14-21	ALL
	40		W1175	2028R	22		22-12-31	ALL
	41		W1175	2028B	22		22-12-31	ALL
	42		W1175	5115R	24		34-45-01	003-099
	42	UNUSED						115-199
	43		W1175	5115B	24		34-45-01	003-099
	43	UNUSED						115-199
	44		W1175	FRET			34-45-01	003-099
	44	UNUSED						115-199
	45	UNUSED						003-099
	45		W1175	5007R	24		34-22-38	115-199
	46	UNUSED						003-099
	46		W1175	5007B	24		34-22-38	115-199
	47	UNUSED						003-099
	47		W1175	FRCT			34-22-38	115-199
	48	UNUSED						003-099
	48		W1175	0733	24		34-22-38	115-199
	49	UNUSED						003-099, 115-199
	50	UNUSED						003-099, 115-199
	51	UNUSED						003-099, 115-199
	52	UNUSED						003-099, 115-199
	53	UNUSED						003-099
	53		W1175	5139R	22		34-58-11	115-199
	54	UNUSED						003-099
	54		W1175	5139B	22		34-58-11	115-199
	55	UNUSED						003-099

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 7

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41815J		E2-3/ /		RCPT- (continued)				001-002, 115-199
D41815J		E002-03/ /		RCPT- (continued)				003-099
	55		W1175	FRAK			34-58-11	115-199
			W1175	0292	20		31-31-42	001, 003-099
			W1175	5084Z			31-31-42	001, 003-099
			W1175	FRLI			31-31-42	001, 003-099
			W1175	0702	20		31-31-42	001-099
			W1175	5203Z			31-31-42	001-099
			W1175	FRLH			31-31-42	001-099
			W1175	0112	20		22-41-11	ALL
			W1175	0308	20		22-12-31	ALL
			W1175	0422	22		34-45-01	ALL
			W1175	5029Z			22-41-11	ALL
			W1175	5089Z			22-12-31	ALL
			W1175	5109Z			34-45-01	ALL
			W1175	FRER			22-41-11	ALL
			W1175	FRFK			22-12-31	ALL
			W1175	FRJA			34-45-01	ALL
			W1175	0502	22		34-45-01	003-099
			W1175	5115Z			34-45-01	003-099
			W1175	FRET			34-45-01	003-099
			W1175	0062	20		34-22-38	115-199
			W1175	0292	20		31-31-22	115-199
			W1175	0547	20		34-58-11	115-199
			W1175	5007Z			34-22-38	115-199
			W1175	5084Z			31-31-22	115-199
			W1175	5139Z			34-58-11	115-199
			W1175	FRAK			34-58-11	115-199
			W1175	FRCT			34-22-38	115-199
			W1175	FRFD			31-31-22	115-199
D41815P		E002-03/ /		PLUG-				ALL
	1		W4475	0028	22		22-22-11	ALL
	2		W4475	0029	22		22-22-11	ALL
	3		W4475	5013R	24		22-22-11	ALL
	4		W4475	5013B	24		22-22-11	ALL
	5		W4475	5013Z			22-22-11	ALL
	6		W4475	0030	22		22-22-11	ALL
	7		W4475	5014R	24		22-41-11	ALL
	8		W4475	5014B	24		22-41-11	ALL
	9		W4475	5014Z			22-41-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 8

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41815P		E002-03/ /		PLUG- (continued)				ALL
	10		W4475	0048	22		22-11-32	ALL
	11		W4475	0043	20		34-21-31	ALL
	12		W4475	0086	24		34-45-01	ALL
	13		W4475	0087	24		34-45-01	ALL
	14		W4475	0088	24		34-45-01	ALL
	15		W4475	5041R	24		34-45-01	ALL
	16		W4475	5041B	24		34-45-01	ALL
	17		W4475	5041Z			34-45-01	ALL
	18		W4475	5024R	24		SPARE	001, 003-099
	18		W4475	5052R	22		34-58-21	002
	18		W4475	0054	24		SPARE	115-199
	19		W4475	5027R	24		31-31-42	001-099
	19		W4475	5027R	24		31-31-22	115-199
	20		W4475	5027B	24		31-31-42	001-099
	20		W4475	5027B	24		31-31-22	115-199
	21		W4475	5027Z			31-31-42	001-099
	21		W4475	5027Z			31-31-22	115-199
	22		W4475	5028R	24		31-31-42	001-099
	22		W4475	5028Z			31-31-22	115-199
	23		W4475	5028B	24		31-31-42	001-099
	23		W4475	5028R	24		31-31-22	115-199
	24		W4475	5028Z			31-31-42	001-099
	24		W4475	5028B	24		31-31-22	115-199
	25		W4475	5029R	24		31-31-43	001-099
	25		W4475	5029Z			31-31-22	115-199
	26		W4475	5029B	24		31-31-43	001-099
	26		W4475	5029R	24		31-31-22	115-199
	27		W4475	5029Z			31-31-43	001-099
	27		W4475	5029B	24		31-31-22	115-199
	28		W4475	5032B	24		22-12-31	ALL
	29		W4475	5032R	24		22-12-31	ALL
	30		W4475	5032Z			22-12-31	ALL
	31		W4475	0066	22		22-15-12	ALL
	32		W4475	0067	22		22-15-12	ALL
	33		W4475	5024B	24		SPARE	001, 003-099
	33		W4475	5052B	22		34-58-21	002
	33		W4475	5024R	24		SPARE	115-199
	34		W4475	5114R	24		31-31-42	001-099
	34		W4475	5024B	24		SPARE	115-199
	35		W4475	5114B	24		31-31-42	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 9

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41815P		E002-03/ /		PLUG- (continued)				ALL
	35		W4475	5024Z			SPARE	115-199
	36		W4475	5114Z			31-31-42	001-099
	36	UNUSED						115-199
	37		W4475	5024Z			SPARE	001, 003-099
	37		W4475	5052Z			34-58-21	002
	37		W4475	0004	24		31-51-34	115-199
	38		W4475	0084	22		22-14-11	ALL
	39		W4475	0080	22		22-14-21	ALL
	40		W4475	2001R	22		22-12-31	ALL
	41		W4475	2001B	22		22-12-31	ALL
	42		W4475	5042R	24		34-45-01	003-099
	42	UNUSED						115-199
	43		W4475	5042B	24		34-45-01	003-099
	43	UNUSED						115-199
	44		W4475	5042Z			34-45-01	003-099
	44	UNUSED						115-199
	45	UNUSED						003-099
	45		W4475	5111R	22		34-22-38	115-199
	46	UNUSED						003-099
	46		W4475	5111B	22		34-22-38	115-199
	47	UNUSED						003-099
	47		W4475	5111Z			34-22-38	115-199
	48	UNUSED						003-099
	48		W4475	0201	22		34-22-38	115-199
	49	UNUSED						003-099, 115-199
	50	UNUSED						003-099, 115-199
	51	UNUSED						003-099, 115-199
	52	UNUSED						003-099, 115-199
	53	UNUSED						003-099
	53		W4475	5038R	22		34-58-11	115-199
	54	UNUSED						003-099
	54		W4475	5038B	22		34-58-11	115-199
	55	UNUSED						003-099
	55		W4475	5038Z			34-58-11	115-199
	REF	JB	W4475	5024B	24		SPARE	002
	REF	JB	W4475	5024R	24		SPARE	002
	REF	JB	W4475	5024Z			SPARE	002

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 10

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41816J		1270/290/R40		RCPT-				001-099
D41816J		1230/300/R28		RECP-				115-199
	1	UNUSED						001-099
	1		W3616	0401	20		33-21-22	115-199
	2	UNUSED						ALL
	3	UNUSED						001-099
	3		W3616	0403	24		33-21-22	115-199
	4	UNUSED						001-099
	4		W3616	0320	20		33-21-51	115-199
	5	UNUSED						ALL
	6		W3616	0323	24		33-21-22	001-099
	7	UNUSED						001-099
	8		W3616	0308	20		SPARE	001-099
	9		W3616	0321	20		33-21-22	001-099
	10		W3616	0320	20		33-21-51	001-099
	11	UNUSED						001-099
	12		W3616	0312	20		SPARE	001-099
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D41816P		1270/290/R40		PLUG-				001-099
D41816P		1230/300/R28		PLUG-				115-199
	1	UNUSED						001-099
	1		W3618	0401	20		33-21-23	115-199
	2	UNUSED						ALL
	3	UNUSED						001-099
	3		W3618	0403	24		33-21-23	115-199
	4	UNUSED						001-099
	4		W3618	0130	20		33-21-51	115-199
	5	UNUSED						ALL
	6		W3618	0306	24		33-21-23	001-099
	7	UNUSED						001-099
	8	UNUSED						001-099
	9		W3618	0309	20		33-21-23	001-099
	10		W3618	0020	20		33-21-51	001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 11

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41817J		E002-01/ /		RCPT-				001-099
D41817J		E2-1/ /		RCPT-				115-199
	1	UNUSED						001-099
	1		W1171	5244R	22		34-58-11	115-199
	2		W1171	5094R	24		22-32-11	ALL
	3		W1171	5094B	24		22-32-11	ALL
	4		W1171	5094Z			22-32-11	ALL
	5		W1171	5095R	24		22-32-11	ALL
	6		W1171	5095B	24		22-32-11	ALL
	7		W1171	5095Z			22-32-11	ALL
	8	UNUSED						001-099
	8		W1171	5244B	22		34-58-11	115-199
	9		W1171	0279	24		34-61-23	ALL
	10		W1171	0280	24		34-61-23	ALL
	11		W1171	0281	24		34-61-23	ALL
	12		W1171	0282	24		34-61-23	ALL
	13		W1171	5070Z			34-61-11	ALL
	14		W1171	5070B	24		34-61-11	ALL
	15		W1171	5070R	24		34-61-11	ALL
	16		W1171	5069Z			34-61-11	ALL
	17		W1171	5069B	24		34-61-11	ALL
	18		W1171	5069R	24		34-61-11	ALL
	19		W1171	0125	24		34-61-11	ALL
	20		W1171	FRAH			34-61-11	ALL
	21		W1171	5071R	24		34-61-11	ALL
	22		W1171	5071B	24		34-61-11	ALL
	23	UNUSED						001-099
	23		W1171	5220R	22		34-61-14	115-199
	24	UNUSED						001-099
	24		W1171	5220B	22		34-61-14	115-199
	25	UNUSED						001-099
	25		W1171	FRQV			34-61-14	115-199
	26	UNUSED						001, 003-099, 115-199
	26		W1171	5276R	22		34-43-15	002
	27	UNUSED						001, 003-099, 115-199
	27		W1171	5276B	22		34-43-15	002
	28	UNUSED						001, 003-099, 115-199
	28		W1171	5276Z			34-43-15	002
	29	UNUSED						001, 003-099, 115-199
	29		W1171	0813	22		34-43-15	002
	30	UNUSED						001, 003-099, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 12

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41817J		E002-01/ /		RCPT- (continued)				001-099
D41817J		E2-1/ /		RCPT- (continued)				115-199
	30		W1171	0832	22		34-46-14	002
	31	UNUSED						001-099
	31		W1171	5244Z			34-58-11	115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53		W1171	5245R	22		34-58-21	115-199
	54		W1171	5245B	22		34-58-21	115-199
	55		W1171	5245Z			34-58-21	115-199
			W1171	0126	20		34-61-11	ALL
			W1171	5071Z			34-61-11	ALL
			W1171	FRAH			34-61-11	ALL
			W1171	0746	20		34-61-14	115-199
			W1171	5220Z			34-61-14	115-199
			W1171	FRQV			34-61-14	115-199
D41817P		E002-01/ /		PLUG-				001-099
D41817P		E2-1/ /		PLUG-				115-199
	1	UNUSED						001-099
	1		W4479	5035R	24		34-58-11	115-199
	2		W4479	5029R	24		22-32-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 13

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41817P		E002-01/ /		PLUG- (continued)				001-099
D41817P		E2-1/ /		PLUG- (continued)				115-199
	3		W4479	5029B	24		22-32-11	ALL
	4		W4479	5029Z			22-32-11	ALL
	5		W4479	5030R	24		22-32-11	ALL
	6		W4479	5030B	24		22-32-11	ALL
	7		W4479	5030Z			22-32-11	ALL
	8	UNUSED						001-099
	8		W4479	5035B	24		34-58-11	115-199
	9		W4479	0041	24		34-61-23	ALL
	10		W4479	0045	24		34-61-23	ALL
	11		W4479	0043	24		34-61-23	ALL
	12		W4479	0044	24		34-61-23	ALL
	13		W4479	5001Z			34-61-11	ALL
	14		W4479	5001B	24		34-61-11	ALL
	15		W4479	5001R	24		34-61-11	ALL
	16		W4479	5002Z			34-61-11	ALL
	17		W4479	5002B	24		34-61-11	ALL
	18		W4479	5002R	24		34-61-11	ALL
	19		W4479	0001	24		34-61-11	ALL
	20		W4479	5003Z			34-61-11	ALL
	21		W4479	5003R	24		34-61-11	ALL
	22		W4479	5003B	24		34-61-11	ALL
	23		W4479	5034R	24		SPARE	001-099
I	23		W4479	5034R	24		34-61-14	115-199
	24		W4479	5034B	24		SPARE	001-099
I	24		W4479	5034B	24		34-61-14	115-199
	25		W4479	5034Z			SPARE	001-099
I	25		W4479	5034Z			34-61-14	115-199
	26		W4479	5035R	24		SPARE	001, 003-099
	26		W4479	5035R	24		34-46-14	002
	26	UNUSED						115-199
	27		W4479	5035B	24		SPARE	001, 003-099
	27		W4479	5035B	24		34-46-14	002
	27	UNUSED						115-199
	28		W4479	5035Z			SPARE	001, 003-099
	28		W4479	5035Z			34-46-14	002
	28	UNUSED						115-199
	29		W4479	0036	24		SPARE	001, 003-099
	29		W4479	0036	24		34-46-14	002
	29	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 14

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41817P		E002-01/ /		PLUG- (continued)				001-099
D41817P		E2-1/ /		PLUG- (continued)				115-199
	30		W4479	0035	24		SPARE	001, 003-099
	30		W4479	0501	22		34-46-14	002
	30	UNUSED						115-199
	31	UNUSED						001-099
	31		W4479	5035Z			34-58-11	115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53		W4479	5046R	22		34-58-21	115-199
	54		W4479	5046B	22		34-58-21	115-199
	55		W4479	5046Z			34-58-21	115-199
	REF	JB	W4479	0035	24		SPARE	002
D41818J		AD1090/ /		RCPT-				ALL
	1		W2644	0001	20		32-42-11	ALL
	2		W2644	0002	20		32-42-12	ALL
	3		W2644	0003	20		32-42-12	ALL
	4		W2644	0004	20		32-42-11	ALL
	5		W2644	0005	20		32-42-11	ALL
	6		W2644	0006	20		32-42-11	ALL
	7		W2644	0027	20		SPARE	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 15

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41818J		AD1090/ /		RCPT- (continued)				ALL
	7	UNUSED						115-199
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D41818P		AD1090/ /		PLUG				ALL
	1		W2512	1009	18		32-42-11	ALL
	2		W2512	2521R	18		32-42-12	ALL
	3		W2512	2521B	18		32-42-12	ALL
	4		W2512	1007	18		32-42-11	ALL
	5		W2512	1005	18		32-42-11	ALL
	6		W2512	1003	18		32-42-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	S/R		W2512	1003Z			32-42-11	ALL
	S/R		W2512	1005Z			32-42-11	ALL
	S/R		W2512	1007Z			32-42-11	ALL
	S/R		W2512	1009Z			32-42-11	ALL
	S/R		W2512	2521Z			32-42-12	ALL
D41819J		E002-03/ /		RCPT-				001-099
D41819J		E2-3/ /		RCPT-				115-199
	1	UNUSED						ALL
	2		W1175	5038R	24		22-32-11	ALL
	3		W1175	5038B	24		22-32-11	ALL
	4		W1175	FRAP			22-32-11	ALL
	5		W1175	5039R	24		22-32-11	ALL
	6		W1175	5039B	24		22-32-11	ALL
	7		W1175	FRAQ			22-32-11	ALL
	8		W1175	5040R	24		22-32-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 16

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41819J		E002-03/ /		RCPT- (continued)				001-099
D41819J		E2-3/ /		RCPT- (continued)				115-199
	9		W1175	5040B	24		22-32-11	ALL
	10		W1175	5040Z			22-32-11	ALL
	11	UNUSED						001, 003-099, 115-199
	11		W1175	5158R	22		34-46-14	002
	12	UNUSED						001, 003-099, 115-199
	12		W1175	5158B	22		34-46-14	002
	13	UNUSED						001, 003-099, 115-199
	13		W1175	FREE			34-46-14	002
	14	UNUSED						001, 003-099, 115-199
	14		W1175	8564	22		34-46-14	002
	15	UNUSED						001, 003-099
	15		W1175	5122R	22		34-25-12	002
	15		W1175	5181R	24		34-22-38	115-199
	16	UNUSED						001, 003-099
	16		W1175	5122B	22		34-25-12	002
	16		W1175	5181B	24		34-22-38	115-199
	17	UNUSED						001, 003-099
	17		W1175	5122Z			34-25-12	002
	17		W1175	FRLA			34-22-38	115-199
	18	UNUSED						001, 003-099
	18		W1175	5116R	22		34-25-12	002
	18		W1175	5136R	22		34-58-11	115-199
	19	UNUSED						001, 003-099
	19		W1175	5116B	22		34-25-12	002
	19		W1175	5136B	22		34-58-11	115-199
	20	UNUSED						001, 003-099
	20		W1175	5116Z			34-25-12	002
	20		W1175	FRAB			34-58-11	115-199
	21	UNUSED						001, 003-099, 115-199
	21		W1175	5118R	22		34-25-12	002
	22	UNUSED						001, 003-099, 115-199
	22		W1175	5118B	22		34-25-12	002
	23	UNUSED						001, 003-099, 115-199
	23		W1175	5118Z			34-25-12	002
	24	UNUSED						001, 003-099, 115-199
	24		W1175	0696	22		34-46-14	002
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 17

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41819J		E002-03/ /		RCPT- (continued)				001-099
D41819J		E2-3/ /		RCPT- (continued)				115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
			W1175	0132	20		22-32-11	ALL
			W1175	0133	20		22-32-11	ALL
			W1175	5038Z			22-32-11	ALL
			W1175	5039Z			22-32-11	ALL
			W1175	FRAP			22-32-11	ALL
			W1175	FRAQ			22-32-11	ALL
			W1175	0681	20		34-46-14	002
			W1175	5158Z			34-46-14	002
			W1175	FREE			34-46-14	002
			W1175	0544	20		34-58-11	115-199
			W1175	0581	22		34-22-38	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 18

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41819J		E002-03/ /		RCPT- (continued)				001-099
D41819J		E2-3/ /		RCPT- (continued)				115-199
			W1175	5136Z			34-58-11	115-199
			W1175	5181Z			34-22-38	115-199
			W1175	FRAB			34-58-11	115-199
			W1175	FRLA			34-22-38	115-199
D41819P		E002-03/ /		PLUG-				001-099
D41819P		E2-3/ /		PLUG-				115-199
	1	UNUSED						ALL
	2		W4479	5029R	24		22-32-11	ALL
	3		W4479	5029B	24		22-32-11	ALL
	4		W4479	5029Z			22-32-11	ALL
	5		W4479	5030R	24		22-32-11	ALL
	6		W4479	5030B	24		22-32-11	ALL
	7		W4479	5030Z			22-32-11	ALL
	8		W4479	5031R	24		22-32-11	ALL
	9		W4479	5031B	24		22-32-11	ALL
	10		W4479	5031Z			22-32-11	ALL
	11		W4479	5035R	24		SPARE	001, 003-099
	11		W4479	5035R	24		34-46-14	002
	11	UNUSED						115-199
	12		W4479	5035B	24		SPARE	001, 003-099
	12		W4479	5035B	24		34-46-14	002
	12	UNUSED						115-199
	13		W4479	5035Z			SPARE	001, 003-099
	13		W4479	5035Z			34-46-14	002
	13	UNUSED						115-199
	14		W4479	0036	24		SPARE	001, 003-099
	14		W4479	0036	24		34-46-14	002
	14	UNUSED						115-199
	15	UNUSED						001, 003-099
	15		W4481	5033R	22		34-25-12	002
	15		W4479	5039R	24		34-22-38	115-199
	16	UNUSED						001, 003-099
	16		W4481	5033B	22		34-25-12	002
	16		W4479	5039B	24		34-22-38	115-199
	17	UNUSED						001, 003-099
	17		W4481	5033Z			34-25-12	002
	17		W4479	5039Z			34-22-38	115-199
	18	UNUSED						001, 003-099

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 19

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41819P		E002-03/ /		PLUG- (continued)				001-099
D41819P		E2-3/ /		PLUG- (continued)				115-199
	18		W4479	5042R	22		34-25-12	002
	18		W4479	5035R	24		34-58-11	115-199
	19	UNUSED						001, 003-099
	19		W4479	5042B	22		34-25-12	002
	19		W4479	5035B	24		34-58-11	115-199
	20	UNUSED						001, 003-099
	20		W4479	5042Z			34-25-12	002
	20		W4479	5035Z			34-58-11	115-199
	21	UNUSED						001, 003-099, 115-199
	21		W4479	5041R	22		34-25-12	002
	22	UNUSED						001, 003-099, 115-199
	22		W4479	5041B	22		34-25-12	002
	23	UNUSED						001, 003-099, 115-199
	23		W4479	5041Z			34-25-12	002
	24	UNUSED						001, 003-099, 115-199
	24		W4479	0501	22		34-46-14	002
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 20

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41819P		E002-03/ /		PLUG- (continued)				001-099
D41819P		E2-3/ /		PLUG- (continued)				115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D41820J		E004-03/ /		RCPT-				001-099
	1		W1163	0150	24		23-31-19	001-099
	2		W1163	2023B	24		23-31-19	001-099
	2		W1163	2031B	24		23-31-19	001-099
	3		W1163	0598	22		23-31-19	001-099
	4		W1163	0573	24		23-31-19	001-099
	5		W1163	0572	24		23-31-19	001-099
	6		W1163	2031R	24		23-31-19	001-099
	7		W1163	2023R	24		23-31-19	001-099
	8	UNUSED						001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12		W1163	0571	24		23-31-19	001-099
D41820P		E004-03/ /		PLUG-				001-099
	1		W3576	0141	22		23-31-19	001-099
	2		W3576	3002B	22		23-31-19	001-099
	3		W3576	0143	22		23-31-19	001-099
	4		W3576	0140	22		23-31-19	001-099
	5		W3576	0139	22		23-31-19	001-099
	6		W3576	3002R	22		23-31-19	001-099
	7		W3576	3002Y	22		23-31-19	001-099
	8	UNUSED						001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12		W3576	0138	22		23-31-19	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 21

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41821J D41821J		E002-02/ / E2-2/ /		RCPT- RCPT-				001-099 115-199
	1		W1173	5064R	24		22-32-11	ALL
	2		W1173	5064B	24		22-32-11	ALL
	3		W1173	5064Z			22-32-11	ALL
	4		W1173	5060R	24		22-32-11	ALL
	5		W1173	5060B	24		22-32-11	ALL
	6		W1173	5060Z			22-32-11	ALL
	7		W1173	0185	24		34-12-22	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 22

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41821J		E002-02/ /		RCPT- (continued)				001-099
D41821J		E2-2/ /		RCPT- (continued)				115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D41821P		E002-02/ /		PLUG-				001-099
D41821P		E2-2/ /		PLUG-				115-199
	1		W4481	5029R	24		22-32-11	ALL
	2		W4481	5029B	24		22-32-11	ALL
	3		W4481	5029Z			22-32-11	ALL
	4		W4481	5030R	24		22-32-11	ALL
	5		W4481	5030B	24		22-32-11	ALL
	6		W4481	5030Z			22-32-11	ALL
	7		W4481	0031	24		34-12-22	ALL
	8	UNUSED						001-099
	8		W4481	0033	24		SPARE	115-199
	9	UNUSED						001-099
	9		W4481	0037	24		SPARE	115-199
	10		W4481	5013R	24		SPARE	001-099
	10	UNUSED						115-199
	11		W4481	5013B	24		SPARE	001-099
	11	UNUSED						115-199
	12		W4481	5013Z			SPARE	001-099
	12	UNUSED						115-199
	13		W4481	5011R	24		SPARE	001-099
	13	UNUSED						115-199
	14		W4481	5011B	24		SPARE	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 23

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41821P		E002-02/ /		PLUG- (continued)				001-099
D41821P		E2-2/ /		PLUG- (continued)				115-199
	14	UNUSED						115-199
	15		W4481	5011Z			SPARE	001-099
	15	UNUSED						115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 24

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41821P		E002-02/ /		PLUG- (continued)				001-099
D41821P		E2-2/ /		PLUG- (continued)				115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D41823J		E002-03/ /		RCPT-				001-099
D41823J		E2-3/ /		RCPT-				115-199
	1		W1175	5044R	24		22-32-11	ALL
	2		W1175	5044B	24		22-32-11	ALL
	3		W1175	FRAV			22-32-11	ALL
	4		W1175	5045R	24		22-32-11	ALL
	5		W1175	5045B	24		22-32-11	ALL
	6		W1175	FRAW			22-32-11	ALL
	7	UNUSED						ALL
	8	UNUSED						001, 003-099, 115-199
	8		W1175	5123B	22		34-25-12	002
	9	UNUSED						001, 003-099, 115-199
	9		W1175	5123R	22		34-25-12	002
	10	UNUSED						001, 003-099, 115-199
	10		W1175	5123Z			34-25-12	002
	11	UNUSED						001, 003-099, 115-199
	11		W1175	0531	22		34-43-14	002
	12	UNUSED						001, 003-099, 115-199
	12		W1175	0541	22		34-43-14	002
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 25

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41823J		E002-03/ /		RCPT- (continued)				001-099
D41823J		E2-3/ /		RCPT- (continued)				115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
			W1175	0134	20		22-32-11	ALL
			W1175	0135	20		22-32-11	ALL
			W1175	5044Z			22-32-11	ALL
			W1175	5045Z			22-32-11	ALL
			W1175	FRAV			22-32-11	ALL
			W1175	FRAW			22-32-11	ALL
D41823P		E002-03/ /		PLUG-				001-099
D41823P		E2-3/ /		PLUG-				115-199
	1		W4481	5029R	24		22-32-11	ALL
	2		W4481	5029B	24		22-32-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 26

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41823P		E002-03/ /		PLUG- (continued)				001-099
D41823P		E2-3/ /		PLUG- (continued)				115-199
	3		W4481	5029Z			22-32-11	ALL
	4		W4481	5030R	24		22-32-11	ALL
	5		W4481	5030B	24		22-32-11	ALL
	6		W4481	5030Z			22-32-11	ALL
	7	UNUSED						001-099
	7		W4481	0037	24		SPARE	115-199
	8		W4481	5013R	24		SPARE	001, 003-099
	8		W4481	5034B	22		34-25-12	002
	8	UNUSED						115-199
	9		W4481	5013B	24		SPARE	001, 003-099
	9		W4481	5034R	22		34-25-12	002
	9	UNUSED						115-199
	10		W4481	5013Z			SPARE	001, 003-099
	10		W4481	5034Z			34-25-12	002
	10	UNUSED						115-199
	11	UNUSED						001, 003-099, 115-199
	11		W2309	0072	22		34-43-14	002
	12	UNUSED						001, 003-099, 115-199
	12		W2309	0068	22		34-43-14	002
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
	32	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 27

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41823P		E002-03/ /		PLUG- (continued)				001-099
D41823P		E2-3/ /		PLUG- (continued)				115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
	DED		W4481	5013Z			SPARE	002
	REF	JB	W4481	5013B	24		SPARE	002
	REF	JB	W4481	5013R	24		SPARE	002
D41828J		E005-03/ /		RCPT				001-099
D41828J		E5-3/ /		RCPT				115-199
	1		W1286	4007B	24		27-51-61	ALL
	2		W1286	4007G	24		27-51-61	ALL
	3		W1286	4007R	24		27-51-61	ALL
	4		W1286	4007Y	24		27-51-61	ALL
	5		W1286	2024R	24		27-51-61	ALL
	6		W1286	2024B	24		27-51-61	ALL
	7		W1286	0258	22		27-81-31	ALL
	8		W1286	0154	22		27-23-21	ALL
	9		W1286	0153	22		27-23-21	ALL
	10	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 28

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41828J		E005-03/ /		RCPT (continued)				001-099
D41828J		E5-3/ /		RCPT (continued)				115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D41828P		E005-03/ /		PLUG				ALL
	1		W4218	4001B	22		27-51-61	ALL
	2		W4218	4001G	22		27-51-61	ALL
	3		W4218	4001R	22		27-51-61	ALL
	4		W4218	4001Y	22		27-51-61	ALL
	5		W4218	2002R	22		27-51-61	ALL
	6		W4218	2002B	22		27-51-61	ALL
	7		W4218	0002	22		27-81-31	ALL
	8		W4218	0041	22		27-23-21	ALL
	9		W4218	0042	22		27-23-21	ALL
	10	UNUSED						001-099
	10		W4218	0045	22		SPARE	115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D41829J		E2-2/ /		RCPT-				115-199
	1		W1173	5123R	24		34-51-21	115-199
	2		W1173	5123B	24		34-51-21	115-199
	3		W1173	5123Z			34-51-21	115-199
	4		W1173	5120R	24		34-51-21	115-199
	5		W1173	5120B	24		34-51-21	115-199
	6		W1173	5120Z			34-51-21	115-199
	7		W1173	0266	22		34-51-21	115-199
	8		W1173	5182R	24		34-22-28	115-199
	9		W1173	5182B	24		34-22-28	115-199
	10		W1173	5182Z			34-22-28	115-199
	11		W1173	0167	24		34-51-21	115-199
	12		W1173	5024R	24		34-22-29	115-199
	13		W1173	5024B	24		34-22-29	115-199
	14		W1173	5024Z			34-22-29	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 29

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41829J		E2-2/ /		RCPT- (continued)				115-199
	15	UNUSED						115-199
D41829P		E2-2/ /		PLUG				115-199
	1		W4061	5001R	24		34-51-21	115-199
	2		W4061	5001B	24		34-51-21	115-199
	3		W4061	5001Z			34-51-21	115-199
	4		W4061	5002R	24		34-51-21	115-199
	5		W4061	5002B	24		34-51-21	115-199
	6		W4061	5002Z			34-51-21	115-199
	7		W4061	0002	22		34-51-21	115-199
	8		W4061	5094R	24		34-22-28	115-199
	9		W4061	5094B	24		34-22-28	115-199
	10		W4061	5094Z			34-22-28	115-199
	11		W4061	0003	24		34-51-21	115-199
	12		W4061	5004R	24		34-22-29	115-199
	13		W4061	5004B	24		34-22-29	115-199
	14		W4061	5004Z			34-22-29	115-199
	15	UNUSED						115-199
D41830J		E6-3/ /		RCPT				115-199
	1		W1017	0022	20		23-11-21	115-199
	2		W1017	0023	20		23-11-21	115-199
	3		W1017	0024	20		23-11-21	115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
D41830P		E6-3/ /		PLUG				115-199
	1		W2354	0050	20		23-11-21	115-199
	2		W2354	0051	20		23-11-21	115-199
	3		W2354	0052	20		23-11-21	115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
	6	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 30

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41830P		E6-3/ /		PLUG (continued)				115-199
	7	UNUSED						115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
D41831J		E2-1/ /		RCPT-				115-199
	1		W1171	0083	22		34-51-11	115-199
	2		W1171	5048R	24		34-51-11	115-199
	3		W1171	5048B	24		34-51-11	115-199
	4		W1171	5048Z			34-51-11	115-199
	5		W1171	0097	22		34-51-11	115-199
	6		W1171	5056R	24		34-51-11	115-199
	7		W1171	5056B	24		34-51-11	115-199
	8		W1171	5056Z			34-51-11	115-199
	9		W1171	5004R	24		34-22-19	115-199
	10		W1171	5004B	24		34-22-19	115-199
	11		W1171	5004Z			34-22-19	115-199
	12	UNUSED						115-199
	13		W1171	5182R	24		34-22-18	115-199
	14		W1171	5182B	24		34-22-18	115-199
	15		W1171	5182Z			34-22-18	115-199
D41831P		E2-1/ /		PLUG-				115-199
	1		W4063	0002	24		34-51-11	115-199
	2		W4063	5001R	24		34-51-11	115-199
	3		W4063	5001B	24		34-51-11	115-199
	4		W4063	5001Z			34-51-11	115-199
	5		W4063	0003	22		34-51-11	115-199
	6		W4063	5002R	24		34-51-11	115-199
	7		W4063	5002B	24		34-51-11	115-199
	8		W4063	5002Z			34-51-11	115-199
	9		W4063	5003R	24		34-22-19	115-199
	10		W4063	5003B	24		34-22-19	115-199
	11		W4063	5003Z			34-22-19	115-199
	12	UNUSED						115-199
	13		W4063	5058R	24		34-22-18	115-199
	14		W4063	5058B	24		34-22-18	115-199
	15		W4063	5058Z			34-22-18	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 31

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41833J		E6-4/ /		RCPT				115-199
	1		W1032	0412	22		32-42-12	115-199
	2		W1032	0413	22		32-42-12	115-199
	3		W1032	0414	22		32-42-12	115-199
	4		W1032	0415	22		32-42-12	115-199
	5		W1032	0416	22		32-42-12	115-199
	6		W1032	0417	22		32-42-12	115-199
	7		W1032	0418	22		32-42-12	115-199
	8		W1032	0419	22		32-42-12	115-199
	9		W1032	0420	22		32-42-12	115-199
	10		W1032	0439	22		32-42-12	115-199
	11		W1032	0458	22		32-42-12	115-199
	12		W1032	0457	22		32-42-12	115-199
	13		W1032	0459	22		32-42-12	115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
D41833P		E6-4/ /		PLUG				115-199
	1		W2241	0075	22		32-42-12	115-199
	2		W2241	0076	22		32-42-12	115-199
	3		W2241	0077	22		32-42-12	115-199
	4		W2241	0078	22		32-42-12	115-199
	5		W2241	0079	22		32-42-12	115-199
	6		W2241	0080	22		32-42-12	115-199
	7		W2241	0081	22		32-42-12	115-199
	8		W2241	0082	22		32-42-12	115-199
	9		W2241	0083	22		32-42-12	115-199
	10		W2241	0087	22		32-42-12	115-199
	11		W2241	0112	22		32-42-12	115-199
	12		W2241	0113	22		32-42-12	115-199
	13		W2241	0088	22		32-42-12	115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
D41834J		AP0003/ /		RCPT				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W2066	0802	24		21-33-12	ALL
	4		W2066	0199	22		33-16-11	ALL
	5		W2066	0200	22		33-16-11	ALL
	6		W2066	0541	20		SPARE	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 32

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41834J		AP0003/ /		RCPT (continued)				ALL
	7		W2066	0201	22		33-16-11	ALL
	8		W2066	0202	22		33-16-11	ALL
	9		W2066	0203	22		33-16-11	ALL
	10		W2066	0326	22		33-16-21	ALL
	11	UNUSED						001-099
	11		W2066	0329	22		SPARE	115-199
	12		W2066	0327	22		33-16-21	ALL
	13		W2066	0330	22		33-16-21	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W2066	0516	22		33-16-11	ALL
	23		W2066	0517	22		33-16-11	ALL
	24		W2066	0518	22		33-16-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						001-099
	30		W2066	2022B	24		23-51-11	115-199
	31	UNUSED						001-099
	31		W2066	2022R	24		23-51-11	115-199
D41834P		217.6/198/R34		PLUG				001-099
D41834P		AP0003/ /		PLUG				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W0001	0113	24		21-33-12	ALL
	4		W0001	0063	22		33-16-11	ALL
	5		W0001	0006	22		33-16-11	ALL
	6	UNUSED						ALL
	7		W0001	0008	22		33-16-11	ALL
	8		W0001	0003	22		33-16-11	ALL
	9		W0001	0005	22		33-16-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 33

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41834P		217.6/198/R34		PLUG (continued)				001-099
D41834P		AP0003/ /		PLUG (continued)				115-199
	10		W0001	0058	22		33-16-21	001-099
	10		W0001	0057	22		33-16-21	115-199
	11	UNUSED						ALL
	12		W0001	0052	22		33-16-21	ALL
	13		W0001	0059	22		33-16-21	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W0001	0207	22		33-16-11	ALL
	23		W0001	0208	22		33-16-11	ALL
	24		W0001	0209	22		33-16-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						001-099
	30		W0001	2020B	24		23-51-11	115-199
	31	UNUSED						001-099
	31		W0001	2020R	24		23-51-11	115-199
D41835J		P50/ /		RCPT				ALL
	1		W1140	3006R	24		27-48-21	ALL
	2		W1140	3006B	24		27-48-21	ALL
	3		W1140	3006Y	24		27-48-21	ALL
	4		W1140	2012R	24		27-48-21	ALL
	5		W1140	2012B	24		27-48-21	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 34

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41835J		P50/ /		RCPT (continued)				ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D41835P		P050-00/ /		PLUG-				ALL
	1		W2605	3007R	24		27-48-21	ALL
	2		W2605	3007B	24		27-48-21	ALL
	3		W2605	3007Y	24		27-48-21	ALL
	4		W2605	2007R	24		27-48-21	ALL
	5		W2605	2007B	24		27-48-21	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D41837J		P50/ /		RCPT				ALL
	1		W1140	3004R	24		27-48-21	ALL
	2		W1140	3004B	24		27-48-21	ALL
	3		W1140	3004Y	24		27-48-21	ALL
	4		W1140	2010R	24		27-48-21	ALL
	5		W1140	2010B	24		27-48-21	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 35

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41837P D41837P		P050-00/ / P50/ /		PLUG- PLUG-				001-099 115-199
	1		W2611	3007R	24		27-48-21	ALL
	2		W2611	3007B	24		27-48-21	ALL
	3		W2611	3007Y	24		27-48-21	ALL
	4		W2611	2007R	24		27-48-21	ALL
	5		W2611	2007B	24		27-48-21	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D41838J		E003-01/ /		RCPT				ALL
	1		W1265	0629	22		27-21-12	ALL
	2		W1265	0696	22		22-24-11	ALL
	3	UNUSED						ALL
	4		W1265	0682	22		27-61-12	ALL
	5	UNUSED						ALL
	6		W1265	0706	22		27-41-11	ALL
	7		W1265	0705	22		27-41-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D41838P D41838P		E003-01/ / E3-1/ /		PLUG PLUG				001-099 115-199
	1		W2156	0001	22		27-21-12	ALL
	2		W2156	0002	22		22-24-11	ALL
	3	UNUSED						ALL
	4		W2156	0046	20		27-61-12	ALL
	5	UNUSED						ALL
	6		W2156	0009	22		27-41-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 36

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41838P		E003-01/ /		PLUG (continued)				001-099
D41838P		E3-1/ /		PLUG (continued)				115-199
	7		W2156	0008	22		27-41-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D41839J		P50/ /		RCPT				ALL
	1		W1140	3005R	24		27-48-21	ALL
	2		W1140	3005B	24		27-48-21	ALL
	3		W1140	3005Y	24		27-48-21	ALL
	4		W1140	2011R	24		27-48-21	ALL
	5		W1140	2011B	24		27-48-21	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D41839P		P050-00/ /		PLUG-				001-099
D41839P		P50/ /		PLUG-				115-199
	1		W2621	3007R	24		27-48-21	ALL
	2		W2621	3007B	24		27-48-21	ALL
	3		W2621	3007Y	24		27-48-21	ALL
	4		W2621	2007R	24		27-48-21	ALL
	5		W2621	2007B	24		27-48-21	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 37

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41839P		P050-00/ /		PLUG- (continued)				001-099
D41839P		P50/ /		PLUG- (continued)				115-199
	14	UNUSED						ALL
	15	UNUSED						ALL
D41840J		E4-2/ /		RCPT-				ALL
	1		W1275	0211	24		30-33-11	ALL
	2		W1275	0222	24		30-41-11	ALL
	2		W1275	0223	24		30-41-11	ALL
	3		W1275	0225	24		30-41-11	ALL
	3		W1275	0226	24		30-41-11	ALL
	4		W1275	6431	22		29-11-22	001-099
	4		W1275	6305	22		29-11-22	115-199
	5	UNUSED						001-099
	5		W1275	5768	24		21-58-24	115-199
	5		W1275	5769	24		21-58-24	115-199
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W1275	6477	24		30-34-21	ALL
	9		W1275	6479	24		30-34-21	ALL
	10		W1275	5774	24		21-61-11	ALL
	10		W1275	5775	24		21-61-11	ALL
	11	UNUSED						001-099
	11		W1275	5771	24		21-58-24	115-199
	11		W1275	5772	24		21-58-24	115-199
	12	UNUSED						ALL
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 38

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41840J		E4-2/ /		RCPT- (continued)				ALL
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D41840P		E4-2/ /		PLUG				ALL
	1		W2064	0040	24		30-33-11	ALL
	2		W2064	0044	22		30-41-11	ALL
	3		W2064	0058	22		30-41-11	ALL
	4		W2064	0149	20		29-11-22	ALL
	5		W2064	0150	24		SPARE	001-099
	5		W2064	0150	24		21-58-24	115-199
	6	UNUSED						001-099
	6		W2064	0151	20		SPARE	115-199
	7	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 39

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41840P		E4-2/ /		PLUG (continued)				ALL
	7		W2064	0152	20		SPARE	115-199
	8	UNUSED						001-099
	8		W2064	0153	20		SPARE	115-199
	9		W2064	0186	22		30-34-21	ALL
	10		W2064	0088	24		21-61-11	ALL
	11		W2064	0087	24		SPARE	001-099
	11		W2064	0087	24		21-58-24	115-199
	12	UNUSED						ALL
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 40

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41840P		E4-2/ /		PLUG (continued)				ALL
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D41841J		E003-01/ /		RCPT				ALL
	1		W1265	0029	20		27-31-12	ALL
	2		W1265	0030	20		27-31-12	ALL
	3		W1265	0636	22		27-31-12	ALL
	4		W1265	0637	22		27-31-12	ALL
	5		W1265	0154Y	20		27-41-11	ALL
	6		W1265	0155Y	20		27-41-11	ALL
	7		W1265	0156Y	22		27-41-11	ALL
	8		W1265	0157Y	22		27-41-11	ALL
	9		W1265	0158Y	22		27-41-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W1265	0163	22		27-48-11	ALL
	14		W1265	0160	22		27-48-11	001-009
	14		W1265	0164	22		27-48-11	010-099, 115-199
	15		W1265	0161	22		27-48-11	001-009
	15		W1265	0167	22		27-48-11	010-099, 115-199
D41841P		E003-01/ /		PLUG-				ALL
	1		W2605	0006	20		27-31-12	ALL
	2		W2605	0007	20		27-31-12	ALL
	3		W2605	0008	20		27-31-12	ALL
	4		W2605	0009	20		27-31-12	ALL
	5		W2605	0019Y	20		27-41-11	ALL
	6		W2605	0020Y	20		27-41-11	ALL
	7		W2605	0021Y	22		27-41-11	ALL
	8		W2605	0022Y	22		27-41-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 41

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41841P		E003-01/ /		PLUG- (continued)				ALL
	9		W2605	0023Y	22		27-41-11	ALL
	10		W2605	0024Y	22		SPARE	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W2605	0016	22		27-48-11	ALL
	14		W2605	0017	22		27-48-11	ALL
	15		W2605	0018	22		27-48-11	ALL
D41842J		E4-2/ /		RCPT-				ALL
	1	UNUSED						001-099
	1		W1275	5676	24		30-11-11	115-199
	1		W1275	5677	24		30-11-11	115-199
	2	UNUSED						001-099
	2		W1275	5675	24		30-11-11	115-199
	2		W1275	5678	24		30-11-11	115-199
	3		W1275	0228	24		30-41-12	ALL
	3		W1275	0229	24		30-41-12	ALL
	4		W1275	0231	24		30-41-12	ALL
	4		W1275	0232	24		30-41-12	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 42

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41842J		E4-2/ /		RCPT- (continued)				ALL
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
D41842P		E004-02/ /		PLUG				ALL
	1	UNUSED						001-099
	1		W2072	0047	22		30-11-11	115-199
	2	UNUSED						001-099
	2		W2072	0048	22		30-11-11	115-199
	3		W2072	0051	22		30-41-12	ALL
	4		W2072	0052	22		30-41-12	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W2072	0074	24		SPARE	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						001-099
	10		W2072	0109	20		SPARE	115-199
	11	UNUSED						001-099
	11		W2072	0110	20		SPARE	115-199
	12	UNUSED						001-099
	12		W2072	0111	20		SPARE	115-199
	13		W2072	0112	20		SPARE	115-199
	14		W2072	0113	20		SPARE	115-199
	15		W2072	0114	20		SPARE	115-199
	16		W2072	0115	20		SPARE	115-199
	17		W2072	0116	20		SPARE	115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 43

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41842P		E004-02/ /		PLUG (continued)				ALL
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
D41843J		E004-01/ /		RCPT				001-099
D41843J		E4-1/ /		RCPT				115-199
	1		W1165	0269Y	20		27-41-21	ALL
	2		W1165	0270Y	20		27-41-21	ALL
	3		W1165	0156Y	22		27-41-21	ALL
	4		W1165	0157Y	22		27-41-21	ALL
	5		W1165	0274Y	22		27-41-21	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W1165	0202	22		27-48-11	ALL
	14		W1165	0204	22		27-48-11	ALL
	15		W1165	0205	22		27-48-11	ALL
D41843P		E004-01/ /		PLUG-				001-099
D41843P		E4-1/ /		PLUG-				115-199
	1		W2611	0005Y	20		27-41-21	ALL
	2		W2611	0006Y	20		27-41-21	ALL
	3		W2611	0007Y	22		27-41-21	ALL
	4		W2611	0008Y	22		27-41-21	ALL
	5		W2611	0009Y	22		27-41-21	ALL
	6		W2611	0010	22		SPARE	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W2611	0016	22		27-48-11	ALL
	14		W2611	0017	22		27-48-11	ALL
	15		W2611	0018	22		27-48-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 44

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41844J		E4-2/ /		RCPT-				ALL
	1		W1275	5637	24		24-33-11	ALL
	1		W1275	5638	24		24-33-11	ALL
	2		W1275	5634	24		24-33-11	ALL
	2		W1275	5635	24		24-33-11	ALL
	3	UNUSED						ALL
	4		W1275	0619	24		36-11-41	ALL
	5		W1275	0620	24		36-11-41	ALL
	6		W1275	5765	24		21-58-12	ALL
	6		W1275	5766	24		21-58-12	ALL
	7		W1275	0638	24		21-58-12	ALL
	7		W1275	0639	24		21-58-12	ALL
	8		W1275	0640	24		21-58-12	ALL
	8		W1275	0642	24		21-58-12	ALL
	9		W1275	0628	24		21-58-21	ALL
	9		W1275	0629	24		21-58-21	ALL
	10		W1275	0892	24		28-22-31	ALL
	10		W1275	0893	24		28-22-31	ALL
	11		W1275	5990	24		28-22-31	ALL
	11		W1275	5991	24		28-22-31	ALL
	12		W1275	6033	22		29-11-31	ALL
	13		W1275	6029	22		29-11-31	ALL
	14		W1275	5543	22		29-32-31	ALL
	15		W1275	5557	22		29-32-31	ALL
	16	UNUSED						ALL
	17		W1275	0268	22		24-33-12	001-099
	17	UNUSED						115-199
	18		W1275	0264	22		24-33-12	001-099
	18	UNUSED						115-199
	19		W1275	5675	24		30-11-11	001-099
	19		W1275	5678	24		30-11-11	001-099
	19	UNUSED						115-199
	20		W1275	5676	24		30-11-11	001-099
	20		W1275	5677	24		30-11-11	001-099
	20	UNUSED						115-199
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W1275	5554	24		29-33-11	001-099
	24	UNUSED						115-199
	25	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 45

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41844J		E4-2/ /		RCPT- (continued)				ALL
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
	32		W1275	5554	24		29-33-11	115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
D41844P		E004-02/ /		PLUG				001-099
D41844P		E4-2/ /		PLUG				115-199
	1		W2078	0159	24		24-33-11	001-099
	1		W2078	0159	22		24-33-11	115-199
	2		W2078	0160	24		24-33-11	001-099
	2		W2078	0160	22		24-33-11	115-199
	3	UNUSED						001-099
	3		W2078	0126	24		SPARE	115-199
	4		W2078	0127	24		36-11-41	ALL
	5		W2078	0175	24		36-11-41	ALL
	6		W2078	0185	24		21-58-12	ALL
	7		W2078	0338	24		21-58-12	ALL
	8		W2078	0130	24		21-58-12	ALL
	9		W2078	0131	24		21-58-21	ALL
	10		W2078	0281	24		28-22-31	ALL
	11		W2078	0282	20		28-22-31	ALL
	12		W2078	0024	22		29-11-31	ALL
	13		W2078	0025	22		29-11-31	ALL
	14		W2078	0058	22		29-32-31	ALL
	15		W2078	0059	22		29-32-31	ALL
	16	UNUSED						ALL
	17		W2078	0418	20		24-33-12	001-099
	17		W2078	0339	20		SPARE	115-199
	18		W2078	0419	20		24-33-12	001-099
	18		W2078	0340	20		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 46

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41844P		E004-02/ /		PLUG (continued)				001-099
D41844P		E4-2/ /		PLUG (continued)				115-199
	19		W2078	0459	22		30-11-11	001-099
	19		W2078	0341	20		SPARE	115-199
	20		W2078	0456	22		30-11-11	001-099
	20		W2078	0342	20		SPARE	115-199
	21		W2078	0402	20		SPARE	ALL
	22		W2078	0403	20		SPARE	ALL
	23		W2078	0420	20		SPARE	001-099
	23		W2078	0404	20		SPARE	115-199
	24		W2078	0192	24		29-33-11	001-099
	24		W2078	0405	20		SPARE	115-199
	25		W2078	0406	20		SPARE	115-199
	26		W2078	0407	20		SPARE	115-199
	27		W2078	0408	20		SPARE	115-199
	28		W2078	0409	20		SPARE	115-199
	29		W2078	0410	20		SPARE	115-199
	30		W2078	0411	20		SPARE	115-199
	31		W2078	0412	20		SPARE	115-199
	32		W2078	0192	24		29-33-11	115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35		W2078	0416	20		SPARE	115-199
	36		W2078	0417	20		SPARE	115-199
I	37	UNUSED						115-199
I	38	UNUSED						115-199
	39		W2078	0420	20		SPARE	115-199
D41845J		E6 RLY/PNL/		RCPT				115-199
	1		W1024	2008R	24		21-51-14	115-199
	2		W1024	2008B	24		21-51-14	115-199
	3		W1024	0170	22		21-51-13	115-199
	4		W1024	0171	22		21-51-13	115-199
	5		W1024	0172	24		21-51-14	115-199
	6		W1024	0126	24		21-51-12	115-199
	7		W1024	0127	24		21-51-12	115-199
	8		W1024	0128	24		21-51-12	115-199
	9		W1024	0129	24		21-51-12	115-199
	10		W1024	2005R	24		21-51-12	115-199
	11		W1024	2005B	24		21-51-12	115-199
	12		W1024	0163	24		21-51-13	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 47

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41845J		E6 RLY/PNL/		RCPT (continued)				115-199
	13		W1024	0138	24		21-51-13	115-199
	14		W1024	0142	24		21-51-13	115-199
	15		W1024	0146	24		21-51-13	115-199
	16		W1024	0154	24		21-51-13	115-199
	17		W1024	0158	24		21-51-13	115-199
	18		W1024	0162	24		21-51-13	115-199
	19	UNUSED						115-199
	20		W1024	0122	24		21-51-12	115-199
	21		W1024	2007B	24		21-51-14	115-199
	22		W1024	2007R	24		21-51-14	115-199
	23		W1024	0123	24		21-51-12	115-199
	24		W1024	0124	24		21-51-12	115-199
	25		W1024	2009R	24		21-51-14	115-199
	26		W1024	2009B	24		21-51-14	115-199
	27		W1024	0175	24		21-51-15	115-199
	28		W1024	0176	24		21-51-15	115-199
	29		W1024	0177	24		21-51-15	115-199
	30	UNUSED						115-199
	31		W1024	0178	24		21-51-15	115-199
	32		W1024	2006R	24		21-51-12	115-199
	33		W1024	2006B	24		21-51-12	115-199
	34		W1024	0331	24		21-51-13	115-199
	35		W1024	0119	24		21-51-14	115-199
	36	UNUSED						115-199
	37		W1024	0165	22		21-51-13	115-199
	38		W1024	0166	22		21-51-13	115-199
	39		W1024	0167	22		21-51-13	115-199
	40		W1024	0169	22		21-51-13	115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51		W1024	0015	24		21-51-11	115-199
	52		W1024	0115	24		21-51-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 48

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41845J		E6 RLY/PNL/		RCPT (continued)				115-199
	53		W1024	0121	24		21-51-12	115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D41845P		E6-0/ /		PLUG				115-199
	1		W2706	2013R	24		21-51-14	115-199
	2		W2706	2013B	24		21-51-14	115-199
	3		W2706	0005	22		21-51-13	115-199
	4		W2706	0006	22		21-51-13	115-199
	5		W2706	0050	24		21-51-14	115-199
	6		W2706	0068	24		21-51-12	115-199
	7		W2706	0067	24		21-51-12	115-199
	8		W2706	0066	24		21-51-12	115-199
	9		W2706	0134	24		21-51-12	115-199
	10		W2706	2040R	24		21-51-12	115-199
	11		W2706	2040B	24		21-51-12	115-199
	12		W2706	0085	24		21-51-13	115-199
	13		W2706	0091	24		21-51-13	115-199
	14		W2706	0092	24		21-51-13	115-199
	15		W2706	0093	24		21-51-13	115-199
	16		W2706	0094	24		21-51-13	115-199
	17		W2706	0095	24		21-51-13	115-199
	18		W2706	0096	24		21-51-13	115-199
	19	UNUSED						115-199
	20		W2706	0071	24		21-51-12	115-199
	21		W2706	2014B	24		21-51-14	115-199
	22		W2706	2014R	24		21-51-14	115-199
	23		W2706	0070	24		21-51-12	115-199
	24		W2706	0069	24		21-51-12	115-199
	25		W2706	2015R	24		21-51-14	115-199
	26		W2706	2015B	24		21-51-14	115-199
	27		W2706	0160	24		21-51-15	115-199
	28		W2706	0161	24		21-51-15	115-199
	29		W2706	0162	24		21-51-15	115-199
	30	UNUSED						115-199
	31		W2706	0164	24		21-51-15	115-199
	32		W2706	2041R	24		21-51-12	115-199
	33		W2706	2041B	24		21-51-12	115-199
	34		W2706	0099	24		21-51-13	115-199
	35		W2706	0266	24		21-51-14	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 49

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41845P		E6-0/ /		PLUG (continued)				115-199
	36		W2706	0258	24		SPARE	115-199
	37		W2706	0003	22		21-51-13	115-199
	38		W2706	0004	22		21-51-13	115-199
	39		W2706	0030	22		21-51-13	115-199
	40		W2706	0031	22		21-51-13	115-199
	41		W2706	0008	24		SPARE	115-199
	42		W2706	0010	24		SPARE	115-199
	43		W2706	0012	24		SPARE	115-199
	44		W2706	0013	24		SPARE	115-199
	45		W2706	2002B	24		SPARE	115-199
	46		W2706	2002R	24		SPARE	115-199
	47		W2706	0014	24		SPARE	115-199
	48		W2706	0015	24		SPARE	115-199
	49		W2706	0016	24		SPARE	115-199
	50		W2706	0017	24		SPARE	115-199
	51		W2706	0126	24		21-51-11	115-199
	52		W2706	0265	24		21-51-11	115-199
	53		W2706	0135	24		21-51-12	115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D41846J		AP0001/ /		RCPT				ALL
	1		W2064	0337	22		29-21-32	ALL
	2		W2064	0338	22		29-21-32	ALL
	3		W2064	0152	20		SPARE	001-099
	3	UNUSED						115-199
	4		W2064	0153	20		SPARE	001-099
	4	UNUSED						115-199
	5		W2064	0166	20		SPARE	001-099
	5		W2064	0800	24		34-22-83	115-199
	6		W2064	0167	20		SPARE	001-099
	6	UNUSED						115-199
	7		W2064	0173	20		SPARE	001-099
	7	UNUSED						115-199
	8		W2064	0091	20		33-13-11	ALL
	9		W2064	0182	22		32-42-12	001-099
	9	UNUSED						115-199
	10		W2064	0301	22		30-43-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 50

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41846J		AP0001/ /		RCPT (continued)				ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						001-099
	20		W2064	0801	22		34-55-11	115-199
	21		W2064	0326	18		30-42-11	ALL
	22	UNUSED						ALL
	23		W2064	0328	18		30-42-11	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
D41846P		P1/ /		PLUG				001-099
D41846P		P1-1/ /		PLUG				115-199
	1		W0001	0513	22		29-21-32	ALL
	2		W0001	0514	22		29-21-32	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						001-099
	5		W0001	0511	24		34-22-83	115-199
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W0001	0464	20		33-13-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 51

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41846P		P1/ /		PLUG (continued)				001-099
D41846P		P1-1/ /		PLUG (continued)				115-199
	9		W0001	0101	22		32-42-12	001-099
	9	UNUSED						115-199
	10		W0001	0025	22		30-43-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						001-099
	20		W0001	0554	22		34-55-11	115-199
	21		W0001	0066	18		30-42-11	ALL
	22	UNUSED						ALL
	23		W0001	0068	18		30-42-11	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
D41848J		P034-00/ /		RCPT				001-099
D41848J		P34/ /		RCPT				115-199
	1		W1240	0428	20		33-42-12	001-099
	1		W1242	0028	20		33-42-12	115-199
	2	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 52

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41848J		P034-00/ /		RCPT (continued)				001-099
D41848J		P34/ /		RCPT (continued)				115-199
	2		W1242	0029	20		33-42-12	115-199
	3		W1240	0113	24		33-24-11	001-099
	3		W1240	0113	22		33-24-11	115-199
	4		W1240	0047	24		33-24-11	001-099
	4		W1240	0047	22		33-24-11	115-199
	5		W1240	0057	24		33-24-11	001-099
	5		W1240	0057	22		33-24-11	115-199
	6		W1240	0048	24		33-24-11	001-099
	6		W1240	0048	22		33-24-11	115-199
	7		W1240	0100	20		23-31-13	ALL
	8		W1240	0103	20		23-31-13	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W1240	0039	24		33-24-11	001-099
	13		W1240	0039	22		33-24-11	115-199
	14		W1240	0441	20		33-42-21	001-099
	14		W1242	0041	20		33-42-21	115-199
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 53

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41848J		P034-00/ /		RCPT (continued)				001-099
D41848J		P34/ /		RCPT (continued)				115-199
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
D41848P		P034-00/ /		PLUG				001-099
D41848P		P34/ /		PLUG				115-199
	1		W2072	0072	20		33-42-12	ALL
	2	UNUSED						001-099
	2		W2072	0073	20		33-42-12	115-199
	3		W2072	0026	24		33-24-11	001-099
	3		W2072	0026	22		33-24-11	115-199
	4		W2072	0032	24		33-24-11	001-099
	4		W2072	0032	22		33-24-11	115-199
	5		W2072	0036	24		33-24-11	001-099
	5		W2072	0036	22		33-24-11	115-199
	6		W2072	0035	24		33-24-11	001-099
	6		W2072	0035	22		33-24-11	115-199
	7		W2072	0102	20		23-31-13	ALL
	8		W2072	0103	20		23-31-13	ALL
	9		W2072	0117	20		SPARE	ALL
	10		W2072	0118	20		SPARE	ALL
	11	UNUSED						001-099
	11		W2072	0119	20		SPARE	115-199
	12	UNUSED						001-099
	12		W2072	0120	20		SPARE	115-199
	13		W2072	0250	24		33-24-11	ALL
	14		W2072	0028	20		33-42-21	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 54

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41848P		P034-00/ /		PLUG (continued)				001-099
D41848P		P34/ /		PLUG (continued)				115-199
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
D41850J		P36/ /		RCPT				ALL
	1		W1260	0099	20		28-22-31	ALL
	2		W1260	0100	20		28-22-31	ALL
	3	UNUSED						ALL
	4		W1260	0178	24		29-33-11	ALL
	5		W1260	0194	24		29-33-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W1260	5561	24		21-58-12	ALL
	10		W1260	5689	22		30-21-11	ALL
	11		W1260	5680	22		30-21-11	ALL
	12	UNUSED						ALL
	13		W1260	5819	24		26-15-11	ALL
	14		W1260	0521	24		26-15-11	ALL
	15		W1260	0515	24		26-15-11	ALL
	16		W1260	0520	24		26-15-11	ALL
	17		W1260	0152	24		29-33-11	ALL
	18		W1260	8500	22		29-22-11	ALL
	19		W1260	8501	22		29-22-11	ALL
	20		W1260	8502	22		29-22-11	ALL
	21		W1260	0647	20		74-31-11	ALL
	22		W1260	0407	22		77-12-41	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 55

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41850J		P36/ /		RCPT (continued)				ALL
	23		W1260	5848	22		32-42-11	ALL
	24		W1260	5852	22		32-42-11	ALL
	25	UNUSED						001-002, 115-199
	25		W1260	6195	22		24-25-11	003-099
	26		W1260	0598	24		26-15-11	001-099
	26		W1260	0598	24		26-15-12	115-199
	27		W1260	0648	20		74-31-11	ALL
	28		W1260	0592	24		26-15-12	ALL
	29		W1260	0594	24		26-15-12	ALL
	30		W1260	0595	24		26-15-12	ALL
	31	UNUSED						001-099
	31		W1260	0784	22		29-22-11	115-199
	32		W1260	0879	22		24-25-11	001-002, 115-199
	32	UNUSED						003-099
	33		W1260	0593	24		26-15-12	ALL
	34	UNUSED						001-099
	34		W1260	0786	22		29-22-11	115-199
	35	UNUSED						001-099
	35		W1260	0787	22		29-22-11	115-199
	36		W1260	0908	24		21-58-12	ALL
	37		W1260	5846	22		32-42-11	001-099
	37	UNUSED						115-199
	38		W1260	5849	22		32-42-11	001-099
	38	UNUSED						115-199
	39		W1260	5854	22		32-42-11	001-099
	39	UNUSED						115-199
	40		W1260	5853	22		32-42-11	001-099
	40	UNUSED						115-199
	41		W1260	8552	24		21-25-11	ALL
	42		W1260	5859	22		32-42-11	001-099
	42	UNUSED						115-199
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46		W1260	0622	24		24-34-11	ALL
	47		W1260	5686	22		30-21-11	ALL
	48		W1260	6149	22		30-21-11	ALL
	49		W1260	6311	20		24-11-11	ALL
	50		W1260	5772	22		32-44-11	001-099
	50	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 56

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41850J		P36/ /		RCPT (continued)				ALL
	51	UNUSED						001-008, 115-199
	51		W1260	0038	20		28-22-31	009-099
	52	UNUSED						001-002, 115-199
	52		W1260	6196	22		24-25-11	003-099
	53		W1260	0911	24		21-58-12	ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D41850P		P036-00/ /		PLUG				001-099
D41850P		P36/ /		PLUG				115-199
	1		W2078	0075	20		28-22-31	ALL
	2		W2078	0084	20		28-22-31	ALL
	3	UNUSED						ALL
	4		W2078	0192	24		29-33-11	ALL
	5		W2078	0193	24		29-33-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W2078	0185	24		21-58-12	ALL
	10		W2078	0270	22		30-21-11	ALL
	11		W2078	0271	22		30-21-11	ALL
	12	UNUSED						ALL
	13		W2078	0236	22		26-15-11	001-099
	13		W2078	0283	22		26-15-11	115-199
	14		W2078	0235	22		26-15-11	001-099
	14		W2078	0284	22		26-15-11	115-199
	15		W2078	0295	22		26-15-11	ALL
	16		W2078	0296	22		26-15-11	ALL
	17		W2078	0085	24		29-33-11	ALL
	18		W2078	0320	20		29-22-11	ALL
	19		W2078	0321	20		29-22-11	ALL
	20		W2078	0322	20		29-22-11	ALL
	21		W2078	0273	20		74-31-11	ALL
	22		W2078	0324	22		77-12-41	ALL
	23		W2078	0325	22		32-42-11	ALL
	24		W2078	0326	22		32-42-11	ALL
	25	UNUSED						001-002
	25		W2078	0431	22		24-25-11	003-099
	25		W2078	0327	20		SPARE	115-199
	26		W2078	0328	22		26-15-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 57

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41850P		P036-00/ /		PLUG (continued)				001-099
D41850P		P36/ /		PLUG (continued)				115-199
	27		W2078	0272	20		74-31-11	ALL
	28		W2078	0330	22		26-15-12	ALL
	29		W2078	0331	22		26-15-12	ALL
	30		W2078	0332	22		26-15-12	ALL
	31	UNUSED						001-099
	31		W2078	0212	22		29-22-11	115-199
	32		W2078	0430	22		24-25-11	001-002, 115-199
	32	UNUSED						003-099
	33		W2078	0335	22		26-15-12	ALL
	34		W2078	0336	20		SPARE	001-099
	34		W2078	0336	20		29-22-11	115-199
	35		W2078	0337	20		SPARE	001-099
	35		W2078	0337	20		29-22-11	115-199
	36		W2078	0338	24		21-58-12	ALL
	37		W2078	0339	22		32-42-11	001-099
	37		W2078	0339	20		SPARE	115-199
	38		W2078	0340	22		32-42-11	001-099
	38		W2078	0340	20		SPARE	115-199
	39		W2078	0341	22		32-42-11	001-099
	39		W2078	0341	20		SPARE	115-199
	40		W2078	0342	22		32-42-11	001-099
	40		W2078	0342	20		SPARE	115-199
	41		W2078	0343	20		21-25-11	ALL
	42		W2078	0344	22		32-42-11	001-099
	42		W2078	0344	20		SPARE	115-199
	43		W2078	0345	22		SPARE	001-099
	43		W2078	0345	20		SPARE	115-199
	44	UNUSED						001-099
	44		W2078	0346	22		SPARE	115-199
	45	UNUSED						ALL
	46		W2078	0348	24		24-34-11	ALL
	47		W2078	0349	20		30-21-11	ALL
	48		W2078	0350	20		30-21-11	ALL
	49	16	W2078	0006	16		24-11-11	ALL
	50		W2078	0352	22		32-44-11	001-099
	50		W2078	0352	20		SPARE	115-199
	51	UNUSED						001-008
	51		W2078	0552	20		28-22-31	009-099
	51		W2078	0353	20		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 58

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41850P		P036-00/ /		PLUG (continued)				001-099
D41850P		P36/ /		PLUG (continued)				115-199
	52	UNUSED						001-002
	52		W2078	0430	22		24-25-11	003-099
	52		W2078	0354	20		SPARE	115-199
	53		W2078	0355	24		21-58-12	ALL
	54		W2078	0356	20		SPARE	ALL
	55	UNUSED						001-099
	55		W2078	0357	20		SPARE	115-199
D41851J		E3-3/ /		RCPT				ALL
	= A1		W1433	005CX			34-53-11	ALL
	= C1		W1433	005CO			34-53-11	ALL
D41851P		E003-03/ /		PLUG-				ALL
	= A1		W4451	001CX			34-53-11	ALL
	= C1		W4451	001CO			34-53-11	ALL
D41852J		P37/ /		RCPT				ALL
	1		W1270	0059	20		33-44-21	ALL
	2		W1270	0058	20		33-44-21	ALL
	3		W1270	5585	24		21-61-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1270	0117	20		33-43-12	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W1270	0638	24		21-25-11	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 59

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41852J		P37/ /		RCPT (continued)				ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W1270	6044	22		30-34-21	ALL
	28		W1270	6057	22		30-34-21	ALL
	29		W1270	6069	22		30-34-21	ALL
	30		W1270	0110	22		29-21-32	ALL
	31		W1270	0111	22		29-21-32	ALL
D41852P		P37/ /		PLUG				ALL
	1		W2064	0029	20		33-44-21	ALL
	2		W2064	0243	20		33-44-21	ALL
	3		W2064	0088	24		21-61-11	ALL
	4	UNUSED						001-099
	4		W2064	0154	20		SPARE	115-199
	5	UNUSED						001-099
	5		W2064	0155	20		SPARE	115-199
	6		W2064	0079	20		33-43-12	ALL
	7	UNUSED						001-099
	7		W2064	0156	20		SPARE	115-199
	8	UNUSED						001-099
	8		W2064	0157	20		SPARE	115-199
	9	UNUSED						001-099
	9		W2064	0158	20		SPARE	115-199
	10	UNUSED						001-099
	10		W2064	0159	20		SPARE	115-199
	11	UNUSED						001-099
	11		W2064	0160	20		SPARE	115-199
	12	UNUSED						001-099
	12		W2064	0161	20		SPARE	115-199
	13	UNUSED						001-099
	13		W2064	0162	20		SPARE	115-199
	14	UNUSED						001-099
	14		W2064	0163	20		SPARE	115-199
	15		W2064	0188	20		SPARE	ALL
	16		W2064	0189	20		SPARE	ALL
	17	UNUSED						ALL
	18		W2064	0075	24		21-25-11	ALL
	19	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 60

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41852P		P37/ /		PLUG (continued)				ALL
	20	UNUSED						ALL
	21		W2064	0170	20		SPARE	ALL
	22		W2064	0171	20		SPARE	ALL
	23		W2064	0172	20		SPARE	ALL
	24	UNUSED						001-099
	24		W2064	0173	20		SPARE	115-199
	25	UNUSED						001-099
	25		W2064	0174	20		SPARE	115-199
	26	UNUSED						001-099
	26		W2064	0175	20		SPARE	115-199
	27		W2064	0185	22		30-34-21	ALL
	28		W2064	0186	22		30-34-21	ALL
	29		W2064	0187	22		30-34-21	ALL
	30		W2064	0337	22		29-21-32	ALL
	31		W2064	0338	22		29-21-32	ALL
D41854J		P37/ /		RCPT				ALL
	1		W1270	0355	24		24-51-71	ALL
	2	UNUSED						001-099
	2		W1270	0499	20		25-31-33	115-199
	3	UNUSED						ALL
	4		W1270	0442	24		36-11-31	ALL
	5		W1270	0439	24		36-11-31	ALL
	6		W1270	5788	24		21-51-11	001-099
	6	UNUSED						115-199
	7		W1270	0660	24		21-58-12	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1270	5656	24		21-61-51	ALL
	11		W1270	5731	24		30-31-11	ALL
	12	UNUSED						001-099
	12		W1270	0500	20		25-31-33	115-199
	13		W1270	0319	24		21-44-11	001-099
	13		W1270	0319	22		21-44-11	115-199
	14	UNUSED						ALL
	15		W1270	5732	24		30-31-11	ALL
	16		W1270	0669	24		21-58-21	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19		W1270	0519	24		24-51-71	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 61

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41854J		P37/ /		RCPT (continued)				ALL
	20		W1270	0641	24		21-25-11	ALL
	21		W1270	0644	24		21-25-11	ALL
	22		W1270	0947	20		21-51-23	001-099
	22	UNUSED						115-199
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26		W1270	0966	20		21-51-23	001-099
	26	UNUSED						115-199
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W1270	0157	22		29-31-11	ALL
	30		W1270	5589	24		21-61-11	ALL
	31	UNUSED						ALL
D41854P		P037-00/ /		PLUG				001-099
D41854P		P37/ /		PLUG				115-199
	1		W2066	0125	24		24-51-71	001-099
	1		W2066	0125	22		24-51-71	115-199
	2		W2066	0238	24		SPARE	001-099
	2	18	W2066	1006	18		25-31-33	115-199
	3		W2066	0130	24		SPARE	ALL
	4		W2066	0136	24		36-11-31	ALL
	5		W2066	0137	24		36-11-31	ALL
	6		W2066	0286	24		21-51-11	001-099
	6	UNUSED						115-199
	7		W2066	0280	24		21-58-12	ALL
	8		W2066	0104	24		SPARE	ALL
	9		W2066	0129	24		SPARE	ALL
	10		W2066	0040	24		21-61-51	ALL
	11		W2066	0446	24		30-31-11	ALL
	12	UNUSED						001-099
	12	18	W2066	1007	18		25-31-33	115-199
	13		W2066	0427	22		21-44-11	ALL
	14		W2066	0428	24		SPARE	ALL
	15		W2066	0447	24		30-31-11	ALL
	16		W2066	0283	24		21-58-21	ALL
	17		W2066	0521	20		34-61-21	001-099
	17		W2066	0521	20		SPARE	115-199
	18		W2066	0522	20		34-61-21	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 62

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41854P		P037-00/ /		PLUG (continued)				001-099
D41854P		P37/ /		PLUG (continued)				115-199
	18		W2066	0522	20		SPARE	115-199
	19		W2066	0117	24		24-51-71	001-099
	19		W2066	0117	22		24-51-71	115-199
	20		W2066	0510	24		21-25-11	ALL
	21		W2066	0285	24		21-25-11	ALL
	22		W2066	0287	20		21-51-23	001-099
	22	UNUSED						115-199
	23		W2066	0527	20		SPARE	ALL
	24		W2066	0528	20		SPARE	ALL
	25		W2066	0529	20		SPARE	ALL
	26		W2066	0530	20		21-51-23	001-099
	26		W2066	0530	20		SPARE	115-199
	27		W2066	0531	20		SPARE	ALL
	28		W2066	0512	20		SPARE	ALL
	29		W2066	0513	22		29-31-11	ALL
	30		W2066	0102	24		21-61-11	ALL
	31	UNUSED						001-099
	31		W2066	0246	24		SPARE	115-199
	DED		W2066	1006Z			25-31-33	115-199
	DED		W2066	1007Z			25-31-33	115-199
D41855J		E6 RLY/PNL/		RCPT				115-199
	1		W1024	0189	24		21-51-22	115-199
	2		W1024	0188	24		21-51-22	115-199
	3		W1024	0187	24		21-51-22	115-199
	4		W1024	0185	24		21-51-22	115-199
	5		W1024	0184	24		21-51-22	115-199
	6		W1024	0183	24		21-51-22	115-199
	7		W1024	0191	24		21-51-22	115-199
	8	UNUSED						115-199
	9		W1024	2011B	24		21-51-22	115-199
	10		W1024	2011R	24		21-51-22	115-199
	11		W1024	2010R	24		21-51-22	115-199
	12		W1024	2010B	24		21-51-22	115-199
	13		W1024	0297	22		52-35-11	115-199
	14		W1024	2012B	24		21-51-24	115-199
	15		W1024	2012R	24		21-51-24	115-199
	16		W1024	0225	24		21-51-23	115-199
	17		W1024	0199	24		21-51-23	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 63

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41855J		E6 RLY/PNL/		RCPT (continued)				115-199
	18		W1024	0072	20		28-25-11	115-199
	19		W1024	2014R	24		21-51-24	115-199
	20		W1024	2014B	24		21-51-24	115-199
	21		W1024	0237	24		21-51-25	115-199
	22		W1024	0238	24		21-51-25	115-199
	23	UNUSED						115-199
	24		W1024	0239	24		21-51-25	115-199
	25	UNUSED						115-199
	26		W1024	0240	24		21-51-25	115-199
	27		W1024	0301	22		52-35-11	115-199
	28		W1024	0236	24		21-51-24	115-199
	29		W1024	0234	24		21-51-24	115-199
	30		W1024	2013R	24		21-51-24	115-199
	31		W1024	2013B	24		21-51-24	115-199
	32		W1024	0228	22		21-51-23	115-199
	33		W1024	0229	22		21-51-23	115-199
	34		W1024	0230	22		21-51-23	115-199
	35		W1024	0231	22		21-51-23	115-199
	36		W1024	0232	22		21-51-23	115-199
	37		W1024	0233	22		21-51-23	115-199
	38	UNUSED						115-199
	39		W1024	0203	24		21-51-23	115-199
	40		W1024	0207	24		21-51-23	115-199
	41		W1024	0216	24		21-51-23	115-199
	42		W1024	0220	24		21-51-23	115-199
	43		W1024	0223	24		21-51-23	115-199
	44	UNUSED						115-199
	45		W1024	0181	24		21-51-22	115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51		W1024	0097	20		28-25-11	115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 64

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41855P		E6-0/ /		PLUG				115-199
	1		W2716	0001	24		21-51-22	115-199
	2		W2716	0002	24		21-51-22	115-199
	3		W2716	0003	24		21-51-22	115-199
	4		W2716	0004	24		21-51-22	115-199
	5		W2716	0005	24		21-51-22	115-199
	6		W2716	0006	24		21-51-22	115-199
	7		W2716	0007	24		21-51-22	115-199
	8	UNUSED						115-199
	9		W2716	2020B	24		21-51-22	115-199
	10		W2716	2020R	24		21-51-22	115-199
	11		W2716	2035R	24		21-51-22	115-199
	12		W2716	2035B	24		21-51-22	115-199
	13		W2716	0225	22		52-35-11	115-199
	14		W2716	2022B	24		21-51-24	115-199
	15		W2716	2022R	24		21-51-24	115-199
	16		W2716	0166	24		21-51-23	115-199
	17		W2716	0047	24		21-51-23	115-199
	18		W2716	0232	20		28-25-11	115-199
	19		W2716	2025R	24		21-51-24	115-199
	20		W2716	2025B	24		21-51-24	115-199
	21		W2716	0167	24		21-51-25	115-199
	22		W2716	0168	24		21-51-25	115-199
	23		W2716	0018	24		SPARE	115-199
	24		W2716	0169	24		21-51-25	115-199
	25		W2716	0019	24		SPARE	115-199
	26		W2716	0171	24		21-51-25	115-199
	27		W2716	0226	22		52-35-11	115-199
	28		W2716	0067	24		21-51-24	115-199
	29		W2716	0066	24		21-51-24	115-199
	30		W2716	2021R	24		21-51-24	115-199
	31		W2716	2021B	24		21-51-24	115-199
	32		W2716	0060	22		21-51-23	115-199
	33		W2716	0061	22		21-51-23	115-199
	34		W2716	0062	22		21-51-23	115-199
	35		W2716	0063	22		21-51-23	115-199
	36		W2716	0064	22		21-51-23	115-199
	37		W2716	0065	22		21-51-23	115-199
	38		W2716	0020	24		SPARE	115-199
	39		W2716	0048	24		21-51-23	115-199
	40		W2716	0049	24		21-51-23	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 65

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41855P		E6-0/ /		PLUG (continued)				115-199
	41		W2716	0050	24		21-51-23	115-199
	42		W2716	0051	24		21-51-23	115-199
	43		W2716	0052	24		21-51-23	115-199
	44		W2716	0021	24		SPARE	115-199
	45		W2716	0104	24		21-51-22	115-199
	46		W2716	0008	24		SPARE	115-199
	47		W2716	0009	24		SPARE	115-199
	48		W2716	0010	24		SPARE	115-199
	49		W2716	0011	24		SPARE	115-199
	50	UNUSED						115-199
	51		W2716	0093	20		28-25-11	115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54		W2716	0243	24		SPARE	115-199
	55		W2716	0242	24		SPARE	115-199
D41856J		P37/ /		RCPT				ALL
	1	UNUSED						ALL
	2		W1270	0445	24		36-11-31	ALL
	3		W1270	2002R	24		36-21-11	ALL
	4		W1270	2002B	24		36-21-11	ALL
	5		W1272	0217	20		21-45-11	ALL
	6		W1270	0324	20		21-45-11	ALL
	7		W1270	0136	20		21-45-11	ALL
	8	UNUSED						ALL
	9		W1270	0135	24		21-51-22	ALL
	10		W1270	3007R	24		21-61-11	ALL
	11		W1270	3007B	24		21-61-11	ALL
	12		W1270	3007Y	24		21-61-11	ALL
	13		W1270	5583	24		21-61-11	ALL
	14		W1270	5594	24		21-61-11	ALL
	15		W1270	5617	24		21-61-21	ALL
	16		W1270	5623	24		21-61-21	ALL
	17		W1270	3008R	24		21-61-21	ALL
	18		W1270	3008B	24		21-61-21	ALL
	19		W1270	3008Y	24		21-61-21	ALL
	20		W1270	5618	24		21-61-21	ALL
	21		W1270	5650	24		21-61-31	ALL
	22		W1270	5635	24		21-61-31	ALL
	23		W1270	3009R	24		21-61-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 66

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41856J		P37/ /		RCPT (continued)				ALL
	24		W1270	3009B	24		21-61-31	ALL
	25		W1270	3009Y	24		21-61-31	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	18	W1270	0522	18		28-22-11	ALL
	29	UNUSED						ALL
	30		W1270	6020	24		21-25-11	ALL
	31		W1270	0012	20		24-51-24	ALL
	32		W1270	0188	20		33-43-11	ALL
	33		W1270	0293	20		36-11-21	ALL
	34	UNUSED						001-099
	34		W1270	0432	24		36-11-21	115-199
	35		W1270	6081	20		36-11-21	001-099
	35		W1270	6089	20		36-11-21	115-199
	36		W1270	6064	20		36-11-21	ALL
	37		W1270	6104	24		36-11-21	001-099
	37		W1270	0430	24		36-11-21	115-199
	38	UNUSED						001-099
	38		W1270	0431	24		36-11-21	115-199
	39	18	W1270	0884	18		28-22-11	ALL
	40		W1270	0011	20		24-51-24	ALL
	41		W1270	5634	24		21-61-31	ALL
	42	UNUSED						ALL
	43		W1270	0316	24		21-44-11	ALL
	44	UNUSED						ALL
	45	UNUSED						001-002, 115-199
	45	18	W1270	8005	18		28-22-11	003-099
	46	UNUSED						001-002, 115-199
	46	18	W1270	8006	18		28-22-11	003-099
	47	UNUSED						ALL
	48		W1270	2003B	24		21-31-21	ALL
	49		W1270	2003R	24		21-31-21	ALL
	50	UNUSED						ALL
	51		W1270	0480	20		28-22-11	ALL
	52	UNUSED						ALL
	53		W1270	0005	24		21-25-11	ALL
	54		W1270	0189	20		33-41-11	ALL
	55	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 67

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41856P		P037-00/ /		PLUG				001-099
D41856P		P37/ /		PLUG				115-199
	1	UNUSED						ALL
	2		W2070	0119	24		36-11-31	ALL
	3		W2070	2006R	24		36-21-11	ALL
	4		W2070	2006B	24		36-21-11	ALL
	5		W2070	0147	20		21-45-11	ALL
	6		W2070	0148	20		21-45-11	ALL
	7		W2070	0149	20		21-45-11	ALL
	8	UNUSED						ALL
	9		W2070	0188	24		21-51-22	ALL
	10		W2070	3012R	24		21-61-11	ALL
	11		W2070	3012B	24		21-61-11	ALL
	12		W2070	3012Y	24		21-61-11	ALL
	13		W2070	0204	24		21-61-11	ALL
	14		W2070	0205	24		21-61-11	ALL
	15		W2070	0206	24		21-61-21	ALL
	16		W2070	0208	24		21-61-21	ALL
	17		W2070	3003R	24		21-61-21	ALL
	18		W2070	3003B	24		21-61-21	ALL
	19		W2070	3003Y	24		21-61-21	ALL
	20		W2070	0216	24		21-61-21	ALL
	21		W2070	0264	24		21-61-31	ALL
	22		W2070	0266	24		21-61-31	ALL
	23		W2070	3002R	24		21-61-31	ALL
	24		W2070	3002B	24		21-61-31	ALL
	25		W2070	3002Y	24		21-61-31	ALL
	26		W2070	0394	24		SPARE	001-099
	26	UNUSED						115-199
	27		W2070	0331	24		SPARE	001-099
	27	UNUSED						115-199
	28	18	W2070	0481	18		28-22-11	ALL
	29	UNUSED						ALL
	30		W2070	0154	24		21-25-11	ALL
	31		W2070	0141	20		24-51-24	ALL
	32		W2070	0210	20		33-43-11	ALL
	33		W2070	0071	20		36-11-21	ALL
	34		W2070	0533	22		SPARE	001-099
	34		W2070	0133	24		36-11-21	115-199
	35		W2070	0134	20		36-11-21	ALL
	36		W2070	0135	20		36-11-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 68

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41856P		P037-00/ /		PLUG (continued)				001-099
D41856P		P37/ /		PLUG (continued)				115-199
	37		W2070	0136	24		36-11-21	ALL
	38		W2070	0474	22		SPARE	001-099
	38		W2070	0137	24		36-11-21	115-199
	39	18	W2070	0022	18		28-22-11	ALL
	40		W2070	0142	22		24-51-24	ALL
	41		W2070	0262	24		21-61-31	ALL
	42	UNUSED						ALL
	43		W2070	0378	24		21-44-11	ALL
	44		W2070	0475	22		SPARE	001-099
	44	UNUSED						115-199
	45	UNUSED						001-002, 115-199
	45	18	W2070	0605	18		28-22-11	003-099
	46	UNUSED						001-002
	46	18	W2070	0606	18		28-22-11	003-099
	46		W2070	0094	22		SPARE	115-199
	47		W2070	0476	22		SPARE	001-099
	47	UNUSED						115-199
	48		W2070	2032B	24		21-31-21	ALL
	49		W2070	2032R	24		21-31-21	ALL
	50		W2070	0114	22		SPARE	ALL
	51		W2070	0505	20		28-22-11	ALL
	52		W2070	0477	22		SPARE	001-099
	52	UNUSED						115-199
	53		W2070	0427	24		21-25-11	ALL
	54		W2070	0131	20		33-41-11	ALL
	55		W2070	0178	22		SPARE	ALL
D41858J		P37/ /		RCPT				ALL
	1	UNUSED						ALL
	2		W1270	5718	22		30-21-11	ALL
	3		W1270	0140	22		30-21-11	ALL
	4		W1270	0664	24		21-58-13	ALL
	5	UNUSED						ALL
	6		W1270	0622	22		33-51-11	ALL
	7		W1270	0618	22		33-51-11	ALL
	8		W1270	0391	22		35-21-11	ALL
	9		W1270	0526	24		35-21-11	ALL
	10	UNUSED						ALL
	11	UNUSED						001-002, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 69

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41858J		P37/ /		RCPT (continued)				ALL
	11		W1270	6535	22		78-34-21	003-099
	12	UNUSED						ALL
	13		W1270	6535	22		78-34-21	001-002, 115-199
	13	UNUSED						003-099
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26		W1270	5712	22		30-21-11	ALL
	27		W1270	0022	24		26-11-21	ALL
	28		W1270	0033	24		26-16-11	ALL
	29		W1270	0084	22		30-21-11	ALL
	30		W1270	0890	20		74-31-21	ALL
	31		W1270	0898	20		74-31-21	ALL
	CAP	Y	W1270	0690	22		78-34-21	001-002, 115-199
D41858P		P037-00/ /		PLUG				001-099
D41858P		P37/ /		PLUG				115-199
	1		W2156	0125	22		SPARE	ALL
	2		W2156	0092	22		30-21-11	ALL
	3		W2156	0091	22		30-21-11	ALL
	4		W2156	0160	24		21-58-13	ALL
	5		W2156	0127	22		SPARE	ALL
	6		W2156	0174	22		33-51-11	ALL
	7		W2156	0175	22		33-51-11	ALL
	8		W2156	0050	22		35-21-11	001-099
	8		W2156	0050	20		35-21-11	115-199
	9		W2156	0051	24		35-21-11	001-099
	9		W2156	0051	22		35-21-11	115-199
	10	UNUSED						ALL
	11	UNUSED						001-002, 115-199
	11		W2156	0250	22		78-34-21	003-099

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 70

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41858P		P037-00/ /		PLUG (continued)				001-099
D41858P		P37/ /		PLUG (continued)				115-199
	12	UNUSED						ALL
	13		W2156	0252	22		78-34-21	001-002, 115-199
	13	UNUSED						003-099
	14	UNUSED						001-099
	14		W2156	0133	20		SPARE	115-199
	15	UNUSED						001-099
	15		W2156	0134	20		SPARE	115-199
	16		W2156	0135	20		SPARE	001-002, 115-199
	16	UNUSED						003-099
	17		W2156	0136	20		SPARE	001-002, 115-199
	17	UNUSED						003-099
	18	UNUSED						001-099
	18		W2156	0137	20		SPARE	115-199
	19	UNUSED						001-099
	19		W2156	0138	20		SPARE	115-199
	20	UNUSED						001-099
	20		W2156	0139	20		SPARE	115-199
	21	UNUSED						001-099
	21		W2156	0140	20		SPARE	115-199
	22	UNUSED						001-099
	22		W2156	0141	20		SPARE	115-199
	23	UNUSED						ALL
	24	UNUSED						001-099
	24		W2156	0143	20		SPARE	115-199
	25		W2156	0144	20		SPARE	ALL
	26		W2156	0145	20		30-21-11	ALL
	27		W2156	0066	22		26-11-21	ALL
	28		W2156	0069	22		26-16-11	ALL
	29		W2156	0057	22		30-21-11	ALL
	30		W2156	0043	20		74-31-21	ALL
	31		W2156	0042	20		74-31-21	ALL
	CAP	Y	W2156	0131	20		SPARE	115-199
D41860J		P37/ /		RCPT				ALL
	1		W1270	0347	24		21-58-13	ALL
	2		W1270	0145	24		36-11-22	ALL
	3		W1270	0147	24		36-11-22	ALL
	4	UNUSED						ALL
	5		W1270	0515	24		24-51-71	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 71

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41860J		P37/ /		RCPT (continued)				ALL
	6		W1270	0183	22		32-42-11	001-099
	6	UNUSED						115-199
	7		W1270	0191	22		32-42-11	001-099
	7		W1270	0893	22		32-42-11	115-199
	8		W1270	5016B	22		32-42-11	ALL
	9		W1270	5016R	22		32-42-11	ALL
	10		W1270	5016Z			32-42-11	ALL
	11		W1270	0882	24		24-51-71	ALL
	12		W1270	0883	24		24-51-71	ALL
	13	UNUSED						001-099
	13		W1270	0183	22		32-42-11	115-199
	14	UNUSED						ALL
	15	UNUSED						001-008, 115-199
	15		W1270	6519	20		28-22-32	009-099
	16	UNUSED						ALL
	17	UNUSED						001-008, 115-199
	17		W1270	6520	20		28-22-32	009-099
	18	UNUSED						001-008, 115-199
	18		W1270	6521	20		28-22-32	009-099
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W1270	8128	20		28-22-11	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W1270	5790	20		30-71-11	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W1270	6538	22		78-34-21	001-002, 115-199
	30	UNUSED						003-099
	31		W1270	5950	24		30-32-11	ALL
D41860P		P037-00/ /		PLUG				001-099
D41860P		P37/ /		PLUG				115-199
	1		W2070	0310	24		21-58-13	ALL
	2		W2070	0072	24		36-11-22	ALL
	3		W2070	0051	24		36-11-22	ALL
	4		W2070	0385	22		SPARE	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 72

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41860P		P037-00/ /		PLUG (continued)				001-099
D41860P		P37/ /		PLUG (continued)				115-199
	5		W2070	0479	24		24-51-71	001-099
	5		W2070	0479	22		24-51-71	115-199
	6		W2070	0387	22		32-42-11	001-099
	6		W2070	0387	22		SPARE	115-199
	7		W2070	0388	22		32-42-11	ALL
	8		W2070	5003B	22		32-42-11	ALL
	9		W2070	5003R	22		32-42-11	ALL
	10		W2070	5003Z			32-42-11	ALL
	11		W2070	0400	24		24-51-71	001-099
	11		W2070	0400	20		24-51-71	115-199
	12		W2070	0401	24		24-51-71	001-099
	12		W2070	0401	20		24-51-71	115-199
	13		W2070	0402	20		SPARE	001-099
	13		W2070	0402	20		32-42-11	115-199
	14		W2070	0403	22		SPARE	ALL
	15		W2070	0404	20		SPARE	001-008, 115-199
	15		W2070	0624	20		28-22-32	009-099
	16		W2070	0405	20		SPARE	ALL
	17		W2070	0406	20		SPARE	001-008
	17		W2070	0625	20		28-22-32	009-099
	17	UNUSED						115-199
	18		W2070	0407	20		SPARE	001-008
	18		W2070	0629	20		28-22-32	009-099
	18	UNUSED						115-199
	19	UNUSED						ALL
	20	UNUSED						001-099
	20		W2070	0409	20		SPARE	115-199
	21		W2070	0314	22		28-22-11	ALL
	22	UNUSED						ALL
	23		W2070	0412	22		SPARE	001-099
	23		W2070	0412	20		SPARE	115-199
	24		W2070	0515	20		30-71-11	ALL
	25		W2070	0414	20		SPARE	ALL
	26	UNUSED						001-099
	26		W2070	0415	20		SPARE	115-199
	27		W2070	0416	20		SPARE	ALL
	28	UNUSED						001-099
	28		W2070	0417	20		SPARE	115-199
	29	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 73

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41860P		P037-00/ /		PLUG (continued)				001-099
D41860P		P37/ /		PLUG (continued)				115-199
	29		W2070	0418	20		SPARE	115-199
	30		W2070	0231	22		78-34-21	001-002, 115-199
	30		W2070	0419	20		SPARE	003-099
	31		W2070	0420	24		30-32-11	ALL
	CAP	Y	W2070	0419	20		SPARE	001-002, 115-199
D41862J		E004-01/ /		RCPT				001-099
D41862J		E4-1/ /		RCPT				115-199
	1		W1165	0300	22		22-21-21	ALL
	2		W1165	0299	22		22-21-21	ALL
	3		W1165	0301	22		22-21-21	ALL
	4		W1165	0250	22		27-61-12	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D41862P		E004-01/ /		PLUG				001-099
D41862P		E004-011/ /		PLUG				115-199
	1		W2072	0041	22		22-21-21	ALL
	2		W2072	0042	22		22-21-21	ALL
	3		W2072	0043	22		22-21-21	ALL
	4		W2072	0044	22		27-61-12	ALL
	5	UNUSED						001-099
	5		W2072	0109	20		SPARE	115-199
	6	UNUSED						001-099
	6		W2072	0110	20		SPARE	115-199
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 74

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41862P		E004-01/ /		PLUG (continued)				001-099
D41862P		E004-011/ /		PLUG (continued)				115-199
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						001-099
	15		W2072	0112	20		SPARE	115-199
D41864J		E5-1/ /		RCPT				ALL
	1		W1282	0083	22		24-22-12	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W1282	0116	24		27-32-21	ALL
	6		W1282	0030	24		21-31-11	ALL
	7		W1282	0024	24		21-31-11	ALL
	8		W1282	0025	24		21-31-11	ALL
	9		W1282	0022	20		21-31-11	ALL
	10		W1282	0098	22		24-22-11	ALL
	11		W1282	0279	22		24-22-11	ALL
	12		W1282	0288	20		21-31-21	ALL
	13		W1282	4251Z			21-31-11	ALL
	14		W1282	4251G	22		21-31-11	ALL
	15		W1282	4251Y	22		21-31-11	ALL
	16		W1282	4251B	22		21-31-11	ALL
	17		W1282	4251R	22		21-31-11	ALL
	18		W1282	0100	22		24-22-11	ALL
	19		W1282	0289	24		21-31-21	ALL
	20		W1282	0102	22		24-22-11	001-003, 115-199
	20	UNUSED						004-099
	21		W1282	0101	22		24-22-11	001-003, 115-199
	21	UNUSED						004-099
	22		W1282	0290	24		21-31-21	ALL
	23		W1282	0129	22		24-11-11	ALL
	24		W1282	0007	24		34-33-11	ALL
	25		W1282	0136	24		24-11-11	ALL
	26		W1282	0132	24		24-11-11	ALL
	27		W1282	0131	24		24-11-11	ALL
	28		W1282	0133	24		24-11-11	ALL
	29		W1282	0139	24		24-11-11	ALL
	30		W1282	4252B	22		21-31-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 75

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41864J		E5-1/ /		RCPT (continued)				ALL
	31		W1282	4252G	22		21-31-21	ALL
	32		W1282	4252R	22		21-31-21	ALL
	33		W1282	4252Y	22		21-31-21	ALL
	34		W1282	4252Z			21-31-21	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W1282	0127	20		24-11-11	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D41864P		E005-01/ /		PLUG				001-099
D41864P		E5-1/ /		PLUG				115-199
	1		W2066	0110	22		24-22-12	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W2066	0131	24		SPARE	001-099
	4	UNUSED						115-199
	5		W2066	0237	24		27-32-21	ALL
	6		W2066	0004	24		21-31-11	ALL
	7		W2066	0005	24		21-31-11	ALL
	8		W2066	0006	24		21-31-11	ALL
	9		W2066	0007	20		21-31-11	ALL
	10		W2066	0029	22		24-22-11	ALL
	11		W2066	0030	22		24-22-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 76

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41864P		E005-01/ /		PLUG (continued)				001-099
D41864P		E5-1/ /		PLUG (continued)				115-199
	12		W2066	1003	20		21-31-21	ALL
	13		W2066	4251Z			21-31-11	ALL
	14		W2066	4251G	22		21-31-11	ALL
	15		W2066	4251Y	22		21-31-11	ALL
	16		W2066	4251B	22		21-31-11	ALL
	17		W2066	4251R	22		21-31-11	ALL
	18		W2066	0023	22		24-22-11	ALL
	19		W2066	1004	24		21-31-21	ALL
	20		W2066	0027	22		24-22-11	001-003, 115-199
	20	UNUSED						004-099
	21		W2066	0028	22		24-22-11	001-003, 115-199
	21	UNUSED						004-099
	22		W2066	1005	24		21-31-21	ALL
	23		W2066	0021	22		24-11-11	ALL
	24		W2066	0060	24		34-33-11	ALL
	25		W2066	0020	24		24-11-11	ALL
	26		W2066	0083	24		24-11-11	ALL
	27		W2066	0084	24		24-11-11	ALL
	28		W2066	0085	24		24-11-11	ALL
	29		W2066	0086	24		24-11-11	ALL
	30		W2066	4252B	22		21-31-21	ALL
	31		W2066	4252G	22		21-31-21	ALL
	32		W2066	4252R	22		21-31-21	ALL
	33		W2066	4252Y	22		21-31-21	ALL
	34		W2066	4252Z			21-31-21	ALL
	35		W2066	0579	22		SPARE	001-099
	35	UNUSED						115-199
	36		W2066	0580	22		SPARE	001-099
	36	UNUSED						115-199
	37		W2066	0238	24		SPARE	001-099
	37	UNUSED						115-199
	38		W2066	0382	20		24-11-11	ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 77

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41864P		E005-01/ /		PLUG (continued)				001-099
D41864P		E5-1/ /		PLUG (continued)				115-199
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	DED		W2066	1003Z			21-31-21	ALL
	DED		W2066	1004Z			21-31-21	ALL
	DED		W2066	1005Z			21-31-21	ALL
D41867J		E4-2/ /		RCPT-				ALL
	1	UNUSED						ALL
	2	UNUSED						001, 003-099, 115-199
	2		W1275	6724	22		34-43-14	002
	3		W1275	0388	24		32-61-21	ALL
	4		W1275	0392	24		32-61-21	ALL
	5		W1275	0396	24		32-61-21	ALL
	6		W1275	2627B	24		23-41-11	001-099
	6		W1275	3504B	24		23-41-11	115-199
	7		W1275	2627R	24		23-41-11	001-099
	7		W1275	3504R	24		23-41-11	115-199
	8	UNUSED						001-099
	8		W1275	3504Y	24		23-41-11	115-199
	9		W1275	2627Z			23-41-11	001-099
	9		W1275	3504Z			23-41-11	115-199
	10	UNUSED						ALL
	11	UNUSED						001-099
	11		W1275	5716	24		32-61-12	115-199
	12		W1275	6174	22		29-11-12	ALL
	13	UNUSED						001-099
	13		W1275	5066R	24		34-25-11	115-199
	14	UNUSED						001-099
	14		W1275	5066B	24		34-25-11	115-199
	15	UNUSED						001-099
	15		W1275	FRJD			34-25-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 78

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41867J		E4-2/ /		RCPT- (continued)				ALL
	16	UNUSED						001, 003-099, 115-199
	16		W1275	6725	22		34-43-14	002
	17		W1275	0009	24		21-44-11	ALL
	17		W1275	0041	24		21-44-11	ALL
	18		W1275	6123	24		31-51-41	001, 003-099, 115-199
	18		W1275	6686	22		31-51-41	002
	19	UNUSED						ALL
	20		W1275	6181	22		22-41-11	ALL
	21		W1275	6183	22		22-41-11	ALL
	22		W1275	0834	22		29-32-11	ALL
	23	UNUSED						001-099
	23		W1275	5716	24		32-61-12	115-199
	24	UNUSED						ALL
	25		W1275	6233	24		32-61-12	ALL
	25		W1275	6234	24		32-61-12	ALL
	26		W1275	6229	24		32-61-12	ALL
	26		W1275	6230	24		32-61-12	ALL
	27		W1275	6231	24		32-61-12	ALL
	27		W1275	6232	24		32-61-12	ALL
	28		W1275	6274	22		29-11-12	ALL
	29		W1275	5916	24		31-41-24	ALL
	30		W1275	0362	24		34-12-12	ALL
	30		W1275	0368	24		34-12-22	ALL
	31	UNUSED						001-099
	31		W1275	6609	22		34-61-26	115-199
	32	UNUSED						ALL
	33	UNUSED						ALL
	34		W1275	0610	24		32-61-12	001-099
	34		W1275	0611	24		32-61-12	001-099
	34		W1275	0610	24		32-61-11	115-199
	34		W1275	0611	24		32-61-11	115-199
	35		W1275	0612	24		32-61-12	001-099
	35		W1275	0613	24		32-61-12	001-099
	35		W1275	0612	24		32-61-11	115-199
	35		W1275	0613	24		32-61-11	115-199
	36		W1275	0614	24		32-61-12	ALL
	36		W1275	0615	24		32-61-12	ALL
	37		W1275	0616	24		32-61-12	ALL
	37		W1275	0617	24		32-61-12	ALL
	38		W1275	5079Z			22-33-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 79

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41867J		E4-2/ /		RCPT- (continued)				ALL
	39		W1275	5079R	24		22-33-11	ALL
	40		W1275	5079B	24		22-33-11	ALL
	41		W1275	6411	24		27-09-14	ALL
	42		W1275	5955	24		27-09-14	ALL
	43		W1275	6419	24		27-09-14	ALL
	44		W1275	6423	24		27-09-14	ALL
	45		W1275	6427	24		27-09-14	ALL
	46		W1275	5957	24		27-09-14	ALL
	47		W1275	5029B	24		28-41-11	ALL
	48		W1275	5029R	24		28-41-11	ALL
	49		W1275	5029Z			28-41-11	ALL
	50	UNUSED						001-099
	50		W1275	6496	24		31-51-33	115-199
	51	UNUSED						001-099
	51		W1275	6494	24		SPARE	115-199
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	DED		W1275	5916Z			31-41-24	115-199
	DED		W1275	6123Z			31-51-41	115-199
			W1275	5066Z			34-25-11	115-199
			W1275	5971	22		34-25-11	115-199
			W1275	FRJD			34-25-11	115-199
D41867P		E004-02/ /		PLUG-				001-099
D41867P		E4-2/ /		PLUG-				115-199
	1	UNUSED						001-099
	1		W4473	0062	24		SPARE	115-199
	2		W4473	0063	24		SPARE	001, 003-099, 115-199
	2		W2309	0075	22		34-43-14	002
	3		W4473	0087	22		32-61-21	001-099
	3		W4473	0087	24		32-61-21	115-199
	4		W4473	0088	22		32-61-21	001-099
	4		W4473	0088	24		32-61-21	115-199
	5		W4473	0089	22		32-61-21	001-099
	5		W4473	0089	24		32-61-21	115-199
	6		W4473	2504B	24		23-41-11	001-099
	6		W4473	3504B	24		23-41-11	115-199
	7		W4473	2504R	24		23-41-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 80

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41867P		E004-02/ /		PLUG- (continued)				001-099
D41867P		E4-2/ /		PLUG- (continued)				115-199
	7		W4473	3504R	24		23-41-11	115-199
	8	UNUSED						001-099
	8		W4473	3504Y	24		23-41-11	115-199
	9		W4473	2504Z			23-41-11	001-099
	9		W4473	3504Z			23-41-11	115-199
	10	UNUSED						001-099
	10		W4473	0118	24		SPARE	115-199
	11		W4473	0106	22		SPARE	001-099
	11		W4473	0119	24		32-61-12	115-199
	12		W4473	0036	22		27-09-13	ALL
	13	UNUSED						001-099
	13		W4473	5043R	24		34-25-11	115-199
	14	UNUSED						001-099
	14		W4473	5043B	24		34-25-11	115-199
	15	UNUSED						001-099
	15		W4473	5043Z			34-25-11	115-199
	16	UNUSED						001, 003-099, 115-199
	16		W2309	0076	22		34-43-14	002
	17		W4473	0174	24		21-44-11	ALL
	18		W4473	0024	24		31-51-41	ALL
	19	UNUSED						ALL
	20		W4473	0178	22		22-41-11	ALL
	21		W4473	0179	22		22-41-11	ALL
	22		W4473	0181	22		29-32-11	ALL
	23	UNUSED						001-099
	23		W4473	0188	24		32-61-12	115-199
	24		W4473	0189	22		SPARE	ALL
	25		W4473	0190	22		32-61-12	ALL
	26		W4473	0191	24		32-61-12	ALL
	27		W4473	0192	24		32-61-12	ALL
	28		W4473	0182	22		27-09-13	ALL
	29		W4473	0208	24		31-41-24	ALL
	30		W4473	0032	24		34-12-22	ALL
	31	UNUSED						001-099
	31		W4473	0046	24		34-61-26	115-199
	32		W4473	0047	24		SPARE	ALL
	33		W4473	0108	24		SPARE	ALL
	34		W4473	0221	24		32-61-12	001-099
	34		W4473	0221	22		32-61-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 81

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41867P		E004-02/ /		PLUG- (continued)				001-099
D41867P		E4-2/ /		PLUG- (continued)				115-199
	35		W4473	0222	24		32-61-12	001-099
	35		W4473	0222	22		32-61-11	115-199
	36		W4473	0223	22		32-61-12	ALL
	37		W4473	0224	22		32-61-12	ALL
	38		W4473	5071Z			22-33-11	ALL
	39		W4473	5071R	24		22-33-11	ALL
	40		W4473	5071B	24		22-33-11	ALL
	41		W4473	0253	22		27-09-14	ALL
	42		W4473	0254	22		27-09-14	ALL
	43		W4473	0255	22		27-09-14	ALL
	44		W4473	0256	22		27-09-14	ALL
	45		W4473	0257	22		27-09-14	ALL
	46		W4473	0258	22		27-09-14	ALL
	47		W4473	5072B	24		28-41-11	ALL
	48		W4473	5072R	24		28-41-11	ALL
	49		W4473	5072Z			28-41-11	ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
	REF	VP	W4473	0063	24		SPARE	002
D41868J		E005-03/ /		RCPT				001-099
D41868J		E5-3/ /		RCPT				115-199
	1	UNUSED						001-099
	1		W1286	0139	22		24-22-41	115-199
	2	UNUSED						001-099
	2		W1286	0140	24		24-22-41	115-199
	3	UNUSED						001-099
	3		W1286	0142	24		24-22-41	115-199
	4	UNUSED						001-099
	4		W1286	0141	24		24-22-41	115-199
	5	UNUSED						001-099
	5		W1286	0145	24		24-22-41	115-199
	6	UNUSED						001-099
	6		W1286	0159	24		24-22-41	115-199
	7		W1286	0151	24		24-27-41	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 82

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41868J		E005-03/ /		RCPT (continued)				001-099
D41868J		E5-3/ /		RCPT (continued)				115-199
	8		W1286	0152	24		24-27-41	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D41868P		E005-03/ /		PLUG				001-099
D41868P		E5-3/ /		PLUG				115-199
	1	UNUSED						001-099
	1		W2080	0001	20		24-22-41	115-199
	2	UNUSED						001-099
	2		W2080	0002	24		24-22-41	115-199
	3	UNUSED						001-099
	3		W2080	0003	24		24-22-41	115-199
	4	UNUSED						001-099
	4		W2080	0004	24		24-22-41	115-199
	5	UNUSED						001-099
	5		W2080	0007	24		24-22-41	115-199
	6	UNUSED						001-099
	6		W2080	0008	24		24-22-41	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 83

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41868P		E005-03/ /		PLUG (continued)				001-099
D41868P		E5-3/ /		PLUG (continued)				115-199
	7		W2080	0015	24		24-27-41	ALL
	8		W2080	0016	24		24-27-41	ALL
	9		W2080	0033	20		SPARE	ALL
	10	UNUSED						001-099
	10		W2080	0034	20		SPARE	115-199
	11	UNUSED						001-099
	11		W2080	0037	20		SPARE	115-199
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						001-099
	21		W2080	0027	22		SPARE	115-199
	22	UNUSED						001-099
	22		W2080	0028	22		SPARE	115-199
	23	UNUSED						001-099
	23		W2080	0029	22		SPARE	115-199
	24	UNUSED						001-099
	24		W2080	0030	22		SPARE	115-199
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D41870J		P33/ /		RCPT				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W1230	0468	22		29-11-11	001-099
	5		W1234	0090	22		29-11-11	115-199

HOOKUP LIST
D280N032

91-21-51
Section D41800
Page 84
Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41870J		P33/ /		RCPT (continued)				ALL
	6		W1230	0469	22		29-11-11	001-099
	6		W1234	0091	22		29-11-11	115-199
	7		W1230	0470	22		29-11-11	001-099
	7		W1234	0092	22		29-11-11	115-199
	8	UNUSED						ALL
	9		W1230	0835	20		28-22-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W1230	0697	24		30-31-11	001-099
	12		W1232	0086	24		30-31-11	115-199
	13	18	W1230	0838	18		28-22-11	001-099
	13	18	W1232	0038	18		28-22-11	115-199
	14		W1230	0666	20		28-22-11	001-099
	14		W1232	0037	20		28-22-11	115-199
	15		W1230	0695	20		28-22-11	001-099
	15		W1232	0078	20		28-22-11	115-199
	16		W1230	0716	24		30-31-11	001-099
	16		W1232	0114	24		30-31-11	115-199
	17		W1230	0724	24		30-31-11	001-099
	17		W1232	0122	24		30-31-11	115-199
	18	UNUSED						001-099
	18		W1232	0128	24		30-31-11	115-199
	19		W1230	0710	22		30-32-11	001-099
	19		W1232	0100	22		30-32-11	115-199
	20		W1230	0711	22		30-32-11	001-099
	20		W1232	0103	22		30-32-11	115-199
	21		W1230	0731	24		30-31-11	001-099
	21		W1232	0129	24		30-31-11	115-199
	22		W1230	0725	24		30-31-11	001-099
	22		W1232	0123	24		30-31-11	115-199
	23		W1230	0210	20		28-26-11	ALL
	24		W1230	0209	20		28-26-11	ALL
	25		W1230	0061	22		28-26-11	001-099
	25		W1230	0061	20		28-26-11	115-199
	26		W1230	0077	22		28-26-11	001-099
	26		W1230	0077	20		28-26-11	115-199
	27		W1230	0665	20		28-22-11	001-099
	27		W1232	0036	20		28-22-11	115-199
	28	18	W1230	0668	18		28-22-11	001-099
	28	18	W1232	0039	18		28-22-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 85

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41870J		P33/ /		RCPT (continued)				ALL
	29		W1230	0669	20		28-22-11	001-099
	29		W1232	0040	20		28-22-11	115-199
	30	UNUSED						ALL
	31		W1230	0133	20		28-22-11	ALL
D41870P		P033-00/ /		PLUG				001-099
D41870P		P33/ /		PLUG				115-199
	1	UNUSED						ALL
	2		W2066	0269	20		SPARE	ALL
	3	18	W2066	0268	18		SPARE	ALL
	4		W2066	0430	22		SPARE	ALL
	5		W2066	0395	22		29-11-11	ALL
	6		W2066	0397	22		29-11-11	ALL
	7		W2066	0396	22		29-11-11	ALL
	8	UNUSED						001-099
	8		W2066	0439	20		SPARE	115-199
	9		W2066	0279	22		28-22-11	ALL
	10	UNUSED						001-099
	10		W2066	0441	20		SPARE	115-199
	11	UNUSED						ALL
	12		W2066	0442	24		30-31-11	ALL
	13	18	W2066	0577	18		28-22-11	ALL
	14		W2066	0266	20		28-22-11	ALL
	15		W2066	0295	20		28-22-11	ALL
	16		W2066	0443	24		30-31-11	ALL
	17		W2066	0444	24		30-31-11	ALL
	18		W2066	0445	24		SPARE	001-099
	18		W2066	0445	24		30-31-11	115-199
	19		W2066	0434	22		30-32-11	ALL
	20		W2066	0435	22		30-32-11	ALL
	21		W2066	0446	24		30-31-11	ALL
	22		W2066	0447	24		30-31-11	ALL
	23		W2066	0546	20		28-26-11	ALL
	24		W2066	0547	20		28-26-11	ALL
	25		W2066	0548	22		28-26-11	ALL
	26		W2066	0549	22		28-26-11	ALL
	27		W2066	0294	20		28-22-11	ALL
	28	18	W2066	0578	18		28-22-11	ALL
	29		W2066	0552	20		28-22-11	ALL
	30	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 86

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41870P		P033-00/ /		PLUG (continued)				001-099
D41870P		P33/ /		PLUG (continued)				115-199
	30		W2066	0553	22		SPARE	115-199
	31		W2066	0315	20		28-22-11	ALL
D41872J		E001-01/ /		RCPT				ALL
	1		W1310	0005	22		30-41-12	ALL
	2		W1310	0007	22		30-41-12	ALL
	3		W1310	0006	22		30-41-12	ALL
	4		W1310	0008	22		30-41-12	ALL
	5		W1310	0009	22		30-41-12	ALL
	6		W1310	0002	22		30-41-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D41872P		E001-01/ /		PLUG				ALL
	1		W2072	0009	22		30-41-12	ALL
	2		W2072	0006	22		30-41-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 87

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41872P		E001-01/ /		PLUG (continued)				ALL
	3		W2072	0007	22		30-41-12	ALL
	4		W2072	0008	22		30-41-12	ALL
	5		W2072	0053	22		30-41-12	ALL
	6		W2072	0067	22		30-41-11	ALL
	7	UNUSED						001-099
	7		W2072	0115	20		SPARE	115-199
	8	UNUSED						001-099
	8		W2072	0116	20		SPARE	115-199
	9		W2072	0117	20		SPARE	ALL
	10		W2072	0118	20		SPARE	ALL
	11	UNUSED						001-099
	11		W2072	0119	20		SPARE	115-199
	12	UNUSED						001-099
	12		W2072	0120	20		SPARE	115-199
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D41874J		E001-02/ /		RCPT				ALL
	1	UNUSED						ALL
	2		W1320	0023	22		30-41-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W1320	0005	22		30-41-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 88

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41874J		E001-02/ /		RCPT (continued)				ALL
	6		W1320	0007	22		30-41-11	ALL
	7		W1320	0006	22		30-41-11	ALL
	8		W1320	0008	22		30-41-11	ALL
	9		W1320	0022	22		30-41-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W1320	0009	22		30-41-11	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 89

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41874J		E001-02/ /		RCPT (continued)				ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D41874P		E1-2/ /		PLUG				ALL
	1	UNUSED						ALL
	2		W2064	0148	22		30-41-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W2064	0105	22		30-41-11	ALL
	6		W2064	0106	22		30-41-11	ALL
	7		W2064	0107	22		30-41-11	ALL
	8		W2064	0108	22		30-41-11	ALL
	9		W2064	0334	22		30-41-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W2064	0003	22		30-41-11	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 90

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41874P		E1-2/ /		PLUG (continued)				ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D41876J		E003-04/ /		RCPT				ALL
	1		W1280	0265	22		28-21-21	001-099
	1		W1280	0265	20		28-21-21	115-199
	2		W1280	0450	22		32-61-21	ALL
	3		W1280	0238	24		33-24-11	001-099
	3		W1280	0238	22		33-24-11	115-199
	4		W1280	0494	24		31-31-62	001-099
	4	UNUSED						115-199
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1280	3012R	24		28-41-14	ALL
	8		W1280	3012Y	24		28-41-14	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 91

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41876J		E003-04/ /		RCPT (continued)				ALL
	9		W1280	3012B	24		28-41-14	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	18	W1280	2029R	18		28-43-11	001-099
	12	UNUSED						115-199
	13	18	W1280	2029B	18		28-43-11	001-099
	13	UNUSED						115-199
	14		W1280	2569R	22		28-41-11	001-099
	14		W1280	2569R	24		28-41-11	115-199
	15		W1280	2569B	22		28-41-11	001-099
	15		W1280	2569B	24		28-41-11	115-199
	16		W1280	0161	20		28-41-11	ALL
	17		W1280	FRSB			28-41-11	ALL
	18	UNUSED						ALL
	19		W1280	2501R	22		28-21-21	ALL
	20		W1280	2501B	22		28-21-21	ALL
	21		W1280	2501Z			28-21-21	ALL
	22		W1280	2502R	22		28-21-21	ALL
	23		W1280	2502B	22		28-21-21	ALL
	24		W1280	2502Z			28-21-21	ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						001-099
	27		W1280	0008	22		27-23-11	115-199
	28	UNUSED						001-099
	28		W1280	0002	22		27-23-11	115-199
	29	UNUSED						001-099
	29		W1280	0018	22		27-23-11	115-199
	30		W1280	0363	22		25-66-11	ALL
	31		W1280	0481	24		29-33-11	001-099
	31	UNUSED						115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 92

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41876J		E003-04/ /		RCPT (continued)				ALL
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
			W1280	FRSA			28-41-11	001-099
			W1280	2569Z			28-41-11	ALL
			W1280	FRSB			28-41-11	ALL
			W1280	0615	20		28-41-11	115-199
D41876P		E003-04/ /		PLUG				001-099
D41876P		E3-4/ /		PLUG				115-199
	1		W2070	0157	22		28-21-21	ALL
	2		W2070	0379	22		32-61-21	ALL
	3		W2070	0160	24		33-24-11	001-099
	3		W2070	0160	22		33-24-11	115-199
	4		W2070	0578	24		31-31-62	001-099
	4	UNUSED						115-199
	5	UNUSED						001-099
	5		W2070	0086	24		SPARE	115-199
	6	UNUSED						001-099
	6		W2070	2001R	24		SPARE	115-199
	7		W2070	3004R	24		28-41-14	ALL
	8		W2070	3004Y	24		28-41-14	ALL
	9		W2070	3004B	24		28-41-14	ALL
	10	UNUSED						001-099
	10		W2070	2003R	24		SPARE	115-199
	11	UNUSED						001-099
	11		W2070	2003B	24		SPARE	115-199
	12	18	W2070	2070R	18		28-43-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 93

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41876P		E003-04/ /		PLUG (continued)				001-099
D41876P		E3-4/ /		PLUG (continued)				115-199
	12		W2070	2008R	24		SPARE	115-199
	13	18	W2070	2070B	18		28-43-11	001-099
	13		W2070	2008B	24		SPARE	115-199
	14		W2070	2509R	22		28-41-11	ALL
	15		W2070	2509B	22		28-41-11	ALL
	16		W2070	0166	20		28-41-11	ALL
	17		W2070	2509Z			28-41-11	ALL
	18	UNUSED						ALL
	19		W2070	2501R	22		28-21-21	ALL
	20		W2070	2501B	22		28-21-21	ALL
	21		W2070	2501Z			28-21-21	ALL
	22		W2070	2502R	22		28-21-21	ALL
	23		W2070	2502B	22		28-21-21	ALL
	24		W2070	2502Z			28-21-21	ALL
	25		W2070	0016	22		SPARE	ALL
	26	UNUSED						001-099
	26		W2070	0094	22		SPARE	115-199
	27	UNUSED						001-099
	27		W2070	0003	22		27-23-11	115-199
	28	UNUSED						001-099
	28		W2070	0004	22		27-23-11	115-199
	29	UNUSED						001-099
	29		W2070	0005	22		27-23-11	115-199
	30		W2070	0811	22		33-22-11	ALL
	31		W2070	0146	24		29-33-11	001-099
	31	UNUSED						115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 94

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41876P		E003-04/ /		PLUG (continued)				001-099
D41876P		E3-4/ /		PLUG (continued)				115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
	CAP	Y	W2070	2001B	24		SPARE	115-199
	CAP	Y	W2070	2002B	24		SPARE	115-199
	CAP	Y	W2070	2002R	24		SPARE	115-199
	CAP	Y	W2070	2009B	24		28-41-11	115-199
	CAP	Y	W2070	2009R	24		28-41-11	115-199
	CAP	Y	W2070	2010B	24		28-41-11	115-199
	CAP	Y	W2070	2010R	24		28-41-11	115-199
D41878J		AP0003/ /		RCPT				ALL
	1		W2078	0186	24		33-11-11	ALL
	2		W2078	0187	24		33-11-11	ALL
	3		W2078	2501B	24		33-11-11	ALL
	4		W2078	2501R	24		33-11-11	ALL
	5		W2078	3502B	24		33-11-11	ALL
	6		W2078	3502R	24		33-11-11	ALL
	7		W2078	3502Y	24		33-11-11	ALL
	8		W2078	0382	20		SPARE	001-008, 115-199
	8	UNUSED						009-099
	9	UNUSED						ALL
	10		W2078	1001	20		33-13-12	ALL
	11	UNUSED						001-099
	11		W2078	0229	22		33-16-51	115-199
	12		W2078	0070	24		77-12-11	ALL
	13		W2078	0231	22		33-16-51	ALL
	14		W2078	0232	22		33-16-51	ALL
	15		W2078	0226	22		33-16-51	ALL
	16		W2078	0227	22		33-16-51	ALL
	17		W2078	0248	22		33-16-61	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 95

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41878J		AP0003/ /		RCPT (continued)				ALL
	18		W2078	0230	22		33-16-51	ALL
	19	UNUSED						ALL
	20		W2078	0420	20		SPARE	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W2078	1001Z			33-13-12	ALL
	25		W2078	0537	24		33-14-11	001-099
	26	UNUSED						115-199
	27	UNUSED	W2078	0073	22		31-25-11	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39		W2078	FRAA			33-11-11	ALL
			W2078	2501Z			33-11-11	ALL
			W2078	3502Z			33-11-11	ALL
			W2078	FRAA			33-11-11	ALL
D41878P		217.6/198/R34		PLUG				001-099
D41878P		AP0003/ /		PLUG				115-199
	1		W0001	0335	24		33-11-11	ALL
	2		W0001	0249	24		33-11-11	ALL
	3		W0001	2516B	24		33-11-11	ALL
	4		W0001	2516R	24		33-11-11	ALL
	5		W0001	3502B	24		33-11-11	ALL
	6		W0001	3502R	24		33-11-11	ALL
	7		W0001	3502Y	24		33-11-11	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W0001	1001	20		33-13-12	ALL
	11	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 96

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41878P		217.6/198/R34		PLUG (continued)				001-099
D41878P		AP0003/ /		PLUG (continued)				115-199
	11		W0001	0373	22		33-16-51	115-199
	12		W0001	0301	24		77-12-11	ALL
	13		W0001	0320	22		33-16-51	ALL
	14		W0001	0321	22		33-16-51	ALL
	15		W0001	0326	22		33-16-51	ALL
	16		W0001	0327	22		33-16-51	ALL
	17		W0001	0319	22		33-16-61	ALL
	18		W0001	0077	22		33-16-51	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W0001	1001Z			33-13-12	ALL
	25		W0001	0426	22		33-14-11	001-099
	25	UNUSED						115-199
	26	UNUSED						ALL
	27		W0001	0306	22		31-25-11	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39		W0001	FRAL			33-11-11	ALL
			W0001	2516Z			33-11-11	ALL
			W0001	3502Z			33-11-11	ALL
			W0001	FRAL			33-11-11	ALL
D41879J		E4-2/ /		RCPT-				ALL
	1		W1275	0400	24		32-61-21	ALL
	2		W1275	0404	24		32-61-21	ALL
	3		W1275	0408	24		32-61-21	ALL
	4		W1275	6190	24		22-34-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 97

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41879J		E4-2/ /		RCPT- (continued)				ALL
	4		W1275	6191	24		22-34-11	ALL
	5		W1275	0884	24		31-41-19	ALL
	6		W1275	5103Z			34-25-11	001, 003-099
	6	UNUSED						002
	6		W1275	FRJC			34-25-11	115-199
	7		W1275	5103R	24		34-25-11	001, 003-099
	7	UNUSED						002
	7		W1275	5065R	24		34-25-11	115-199
	8		W1275	5103B	24		34-25-11	001, 003-099
	8	UNUSED						002
	8		W1275	5065B	24		34-25-11	115-199
	9		W1275	6237	24		32-61-12	001-099
	9		W1275	6238	24		32-61-12	001-099
	9		W1275	6237	24		32-61-11	115-199
	9		W1275	6238	24		32-61-11	115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W1275	5724	24		29-35-11	ALL
	15		W1275	5725	24		29-35-11	ALL
	16	UNUSED						ALL
	17	UNUSED						001-099
	17		W1275	5586	24		36-11-11	115-199
	17		W1275	5587	24		36-11-11	115-199
	18	UNUSED						ALL
	19		W1275	0373	24		22-14-31	ALL
	19		W1275	0375	24		22-14-31	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W1275	5973	24		22-14-31	ALL
	23		W1275	5974	24		22-14-31	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W1275	6182	22		22-41-11	ALL
	28		W1275	5550	24		29-35-11	ALL
	29		W1275	6175	22		29-11-22	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 98

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41879J		E4-2/ /		RCPT- (continued)				ALL
	30		W1275	5551	24		29-35-11	ALL
	31		W1275	2075R	24		29-32-41	ALL
	32		W1275	2075B	24		29-32-41	ALL
	33		W1275	6239	24		32-61-12	001-099
	33		W1275	6240	24		32-61-12	001-099
	33		W1275	6239	24		32-61-11	115-199
	33		W1275	6240	24		32-61-11	115-199
	34		W1275	6235	24		32-61-12	001-099
	34		W1275	6236	24		32-61-12	001-099
	34		W1275	6235	24		32-61-11	115-199
	34		W1275	6236	24		32-61-11	115-199
	35		W1275	6263	24		27-23-21	ALL
	35		W1275	6266	24		27-23-21	ALL
	36		W1275	6264	24		27-23-21	ALL
	36		W1275	6267	24		27-23-21	ALL
	37		W1275	6265	24		27-23-21	ALL
	37		W1275	6268	24		27-23-21	ALL
	38		W1275	6275	22		29-11-22	ALL
	39		W1275	0361	24		34-12-12	ALL
	39		W1275	0363	24		34-12-22	ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43		W1275	0369	24		21-33-12	ALL
	43		W1275	0370	24		21-33-12	ALL
	44	UNUSED						ALL
	45		W1275	5078Z			22-33-11	ALL
	46		W1275	5078R	24		22-33-11	ALL
	47		W1275	5078B	24		22-33-11	ALL
	48		W1275	6074	24		73-21-12	ALL
	49		W1275	0918	24		73-21-12	ALL
	50	UNUSED						001, 003-099, 115-199
	50		W1275	6723	22		34-43-14	002
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						001-099
	53		W1275	6498	24		31-51-33	115-199
	54	UNUSED						001-099
	54		W1275	6495	24		SPARE	115-199
	55	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 99

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41879J		E4-2/ /		RCPT- (continued)				ALL
			W1275	5065Z			34-25-11	115-199
			W1275	5970	22		34-25-11	115-199
			W1275	FRJC			34-25-11	115-199
D41879P		E004-02/ /		PLUG-				001-099
D41879P		E4-2/ /		PLUG-				115-199
	1		W4471	0120	22		32-61-21	ALL
	2		W4471	0121	22		32-61-21	ALL
	3		W4471	0122	22		32-61-21	ALL
	4		W4471	0130	22		22-34-11	ALL
	5		W4471	0248	24		31-41-19	001-099
	5		W4471	0134	24		31-41-19	115-199
	6		W4471	5041Z			34-25-11	001, 003-099, 115-199
	6		W4471	5041Z			SPARE	002
	7		W4471	5041R	24		34-25-11	001, 003-099, 115-199
	7		W4471	5041R	24		SPARE	002
	8		W4471	5041B	24		34-25-11	001, 003-099, 115-199
	8		W4471	5041B	24		SPARE	002
	9		W4471	0153	24		32-61-12	001-099
	9		W4471	0153	24		32-61-11	115-199
	10	UNUSED						001-099
	10		W4471	0154	22		SPARE	115-199
	11		W4471	0155	24		SPARE	ALL
	12	UNUSED						001-099
	12		W4471	0172	22		SPARE	115-199
	13	UNUSED						001-099
	13		W4471	0173	22		SPARE	115-199
	14		W4471	0174	22		SPARE	ALL
	15		W4471	0175	20		29-35-11	ALL
	16		W4471	0185	24		SPARE	ALL
	17		W4471	0187	24		SPARE	001-099
	17		W4471	0187	24		36-11-11	115-199
	18	UNUSED						001-099
	18		W4471	0188	24		SPARE	115-199
	19		W4471	0184	22		22-14-31	ALL
	20	UNUSED						001-099
	20		W4471	0190	24		SPARE	115-199
	21	UNUSED						001-099
	21		W4471	2009B	24		SPARE	115-199
	22	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 100

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41879P		E004-02/ /		PLUG- (continued)				001-099
D41879P		E4-2/ /		PLUG- (continued)				115-199
	22		W4471	2009R	24		SPARE	115-199
	23		W4471	0202	22		22-14-31	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W4471	0211	22		22-41-11	ALL
	28		W4471	0243	20		29-35-11	ALL
	29		W4471	0075	22		27-09-13	ALL
	30		W4471	0171	20		29-35-11	ALL
	31		W4471	2015R	20		29-32-41	ALL
	32		W4471	2015B	20		29-32-41	ALL
	33		W4471	0220	24		32-61-12	001-099
	33		W4471	0220	24		32-61-11	115-199
	34		W4471	0221	22		32-61-12	001-099
	34		W4471	0221	22		32-61-11	115-199
	35		W4471	0225	22		27-23-21	ALL
	36		W4471	0226	22		27-23-21	ALL
	37		W4471	0227	22		27-23-21	ALL
	38		W4471	0076	22		27-09-13	ALL
	39		W4471	0101	24		34-12-12	ALL
	40	UNUSED						001-099
	40		W4471	0124	24		SPARE	115-199
	41	UNUSED						001-099
	41		W4471	0125	24		SPARE	115-199
	42	UNUSED						ALL
	43		W4471	0236	24		21-33-12	ALL
	44		W4471	0177	24		SPARE	001-099
	44	UNUSED						115-199
	45		W4471	5072Z			22-33-11	ALL
	46		W4471	5072R	24		22-33-11	ALL
	47		W4471	5072B	24		22-33-11	ALL
	48		W4471	0256	24		73-21-12	ALL
	49		W4471	0257	24		73-21-12	ALL
	50	UNUSED						001, 003-099, 115-199
	50		W2309	0074	22		34-43-14	002
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 101

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41879P		E004-02/ /		PLUG- (continued)				001-099
D41879P		E4-2/ /		PLUG- (continued)				115-199
	55	UNUSED						ALL
D41880J		P070-00/ /		RCPT-				001-099
D41880J		P70/ /		RCPT-				115-199
	1		W1252	0101	20		33-23-11	ALL
	2		W1252	0102	20		33-23-12	ALL
	3		W1252	0103	20		33-23-13	ALL
	4		W1252	0104	20		33-23-14	ALL
	5		W1252	0105	20		21-45-11	ALL
	6		W1252	0106	20		21-45-11	ALL
	7	UNUSED						001-099
	7		W1252	0110	22		21-58-24	115-199
	8	UNUSED						001-099
	8		W1252	0111	22		21-58-24	115-199
	9	UNUSED						001-099
	9		W1252	0112	22		21-58-24	115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1250	0020	22		21-44-11	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 102

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41880J		P070-00/ /		RCPT- (continued)				001-099
D41880J		P70/ /		RCPT- (continued)				115-199
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
D41880P		P70/ /		PLUG-				ALL
	1		W2352	0101	20		33-23-11	ALL
	2		W2352	0102	20		33-23-12	ALL
	3		W2352	0103	20		33-23-13	ALL
	4		W2352	0104	20		33-23-14	ALL
	5		W2352	0502	20		21-45-11	ALL
	6		W2352	0503	20		21-45-11	ALL
	7	UNUSED						001-099
	7		W2352	0110	22		21-58-24	115-199
	8	UNUSED						001-099
	8		W2352	0111	22		21-58-24	115-199
	9	UNUSED						001-099
	9		W2352	0112	22		21-58-24	115-199
	10	UNUSED						001-099
	10		W2352	0010	24		SPARE	115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W2352	0014	22		21-44-11	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						001-099
	18		W2352	0614	22		SPARE	115-199
	19	UNUSED						001-099
	19		W2352	0615	22		SPARE	115-199
	20	UNUSED						001-099
	20		W2352	0616	22		SPARE	115-199
	21	UNUSED						ALL
	22	UNUSED						001-099
	22		W2352	0637	20		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 103

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41880P		P70/ /		PLUG- (continued)				ALL
	23	UNUSED						ALL
	24	UNUSED						001-099
	24		W2352	0639	20		SPARE	115-199
	25	UNUSED						001-099
	25		W2352	0640	20		SPARE	115-199
	26	UNUSED						001-099
	26		W2352	0641	20		SPARE	115-199
	27	UNUSED						001-099
	27		W2352	0636	20		SPARE	115-199
	28	UNUSED						001-099
	28		W2352	0638	20		SPARE	115-199
	29	UNUSED						001-099
	29		W2352	0651	20		SPARE	115-199
	30	UNUSED						001-099
	30		W2352	0652	20		SPARE	115-199
	31	UNUSED						001-099
	31		W2352	0649	20		SPARE	115-199
	32	UNUSED						001-099
	32		W2352	0650	20		SPARE	115-199
	33	UNUSED						001-099
	33		W2352	0647	20		SPARE	115-199
	34	UNUSED						001-099
	34		W2352	0648	20		SPARE	115-199
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
D41881J		E002-02/ /		RCPT-				001-099
D41881J		E2-2/ /		RCPT-				115-199
	1		W1173	5021R	24		34-21-21	ALL
	2		W1173	5021B	24		34-21-21	ALL
	3		W1173	5021Z			34-21-21	ALL
	4		W1173	5061R	24		34-21-21	ALL
	5		W1173	5061B	24		34-21-21	ALL
	6		W1173	5061Z			34-21-21	ALL
	7		W1173	5098R	24		22-13-21	ALL
	8		W1173	5098B	24		22-13-21	ALL
	9		W1173	FRAY			22-13-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 104

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41881J		E002-02/ /		RCPT- (continued)				001-099
D41881J		E2-2/ /		RCPT- (continued)				115-199
	10		W1173	5043R	24		34-61-22	ALL
	11		W1173	5043B	24		34-61-22	ALL
	12		W1173	5043Z			34-61-22	ALL
	13		W1173	5119R	24		34-22-28	ALL
	14		W1173	5119B	24		34-22-28	ALL
	15		W1173	FRAX			34-22-28	ALL
	16		W1173	5078B	24		SPARE	ALL
	17		W1173	5078R	24		SPARE	ALL
	18		W1173	5078Z			SPARE	ALL
	19		W1173	0303	22		22-15-12	001-099
	19	UNUSED						115-199
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						001-009, 115-199
	24		W1173	8011	22		31-31-61	010-099
	25		W1173	FRID			34-25-11	001, 003-009
	25	UNUSED						002
	25		W1173	5337Z			34-25-11	010-099
	25		W1173	FRBE			34-25-11	115-199
	26		W1173	5124R	24		34-25-11	001, 003-009, 115-199
	26	UNUSED						002
	26		W1173	5337R	22		34-25-11	010-099
	27		W1173	5124B	24		34-25-11	001, 003-009, 115-199
	27	UNUSED						002
	27		W1173	5337B	22		34-25-11	010-099
	28		W1173	5129B	24		34-22-81	001-099
	28	UNUSED						115-199
	29		W1173	5129R	24		34-22-81	001-099
	29	UNUSED						115-199
	30		W1173	5129Z			34-22-81	001-099
	30	UNUSED						115-199
	31		W1173	0301	22		22-15-12	001-099
	31	UNUSED						115-199
	32		W1173	5126R	24		31-31-43	001-099
	32		W1173	5125Z			SPARE	115-199
	33		W1173	5126B	24		31-31-43	001-099
	33		W1173	5125R	24		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 105

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41881J		E002-02/ /		RCPT- (continued)				001-099
D41881J		E2-2/ /		RCPT- (continued)				115-199
	34		W1173	5126Z			31-31-43	001-099
	34		W1173	5125B	24		SPARE	115-199
	35		W1173	5313R	24		31-31-43	001-099
	35		W1173	5126R	24		31-31-22	115-199
	36		W1173	5313B	24		31-31-43	001-099
	36		W1173	5126B	24		31-31-22	115-199
	37		W1173	5313Z			31-31-43	001-099
	37		W1173	5126Z			31-31-22	115-199
	38	UNUSED						001-099
	38		W1173	5127Z			31-31-22	115-199
	39	UNUSED						001-099
	39		W1173	5127R	24		31-31-22	115-199
	40	UNUSED						001-099
	40		W1173	5127B	24		31-31-22	115-199
	41		W1173	5127R	24		31-31-43	001-099
	41		W1173	FRBF			31-31-22	115-199
	42		W1173	5127B	24		31-31-43	001-099
	42		W1173	5128R	24		31-31-22	115-199
	43		W1173	5127Z			31-31-43	001-099
	43		W1173	5128B	24		31-31-22	115-199
	44	UNUSED						001-099
	44		W1173	5129B	24		34-22-83	115-199
	45	UNUSED						001-099
	45		W1173	5129R	24		34-22-83	115-199
	46	UNUSED						001-099
	46		W1173	5129Z			34-22-83	115-199
	47	UNUSED						001, 003-099, 115-199
	47		W1173	5242Z			34-46-12	002
	48	UNUSED						001, 003-099, 115-199
	48		W1173	5242R	22		34-46-12	002
	49	UNUSED						001, 003-099, 115-199
	49		W1173	5242B	22		34-46-12	002
	50	UNUSED						001, 003-099
	50		W1173	5294Z			34-46-12	002
	50		W1173	5196R	22		34-58-21	115-199
	51	UNUSED						001, 003-099
	51		W1173	5294R	22		34-46-12	002
	51		W1173	5196B	22		34-58-21	115-199
	52	UNUSED						001, 003-099, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 106

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41881J		E002-02/ /		RCPT- (continued)				001-099
D41881J		E2-2/ /		RCPT- (continued)				115-199
	52		W1173	5294B	22		34-46-12	002
	53	UNUSED						001-099
	53		W1173	0301	22		22-15-12	115-199
	54	UNUSED						001-099
	54		W1173	0303	22		22-15-12	115-199
	55	UNUSED						001-099
	55		W1173	FRBN			34-58-21	115-199
			W1173	FRID			34-25-11	001, 003-009
			W1173	0283	20		34-25-11	001, 003-009, 115-199
			W1173	5124Z			34-25-11	001, 003-009, 115-199
			W1173	0270	20		22-13-21	001-099
			W1173	0261	20		34-22-28	ALL
			W1173	5098Z			22-13-21	ALL
			W1173	5119Z			34-22-28	ALL
			W1173	FRAX			34-22-28	ALL
			W1173	FRAY			22-13-21	ALL
			W1173	0284	20		31-31-22	115-199
			W1173	0470	20		34-58-21	115-199
			W1173	5128Z			31-31-22	115-199
			W1173	5196Z			34-58-21	115-199
			W1173	FRBE			34-25-11	115-199
			W1173	FRBF			31-31-22	115-199
			W1173	FRBN			34-58-21	115-199
D41881P		E002-02/ /		PLUG-				001-099
D41881P		E2-2/ /		PLUG-				115-199
	1		W4473	5028R	24		34-21-21	ALL
	2		W4473	5028B	24		34-21-21	ALL
	3		W4473	5028Z			34-21-21	ALL
	4		W4473	5029R	24		34-21-21	ALL
	5		W4473	5029B	24		34-21-21	ALL
	6		W4473	5029Z			34-21-21	ALL
	7		W4473	5031R	24		22-13-21	ALL
	8		W4473	5031B	24		22-13-21	ALL
	9		W4473	5031Z			22-13-21	ALL
	10		W4473	5033R	24		34-61-22	ALL
	11		W4473	5033B	24		34-61-22	ALL
	12		W4473	5033Z			34-61-22	ALL
	13		W4473	5036R	24		34-22-28	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 107

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41881P		E002-02/ /		PLUG- (continued)				001-099
D41881P		E2-2/ /		PLUG- (continued)				115-199
	14		W4473	5036B	24		34-22-28	ALL
	15		W4473	5036Z			34-22-28	ALL
	16		W4473	5009B	24		SPARE	ALL
	17		W4473	5009R	24		SPARE	ALL
	18		W4473	5009Z			SPARE	ALL
	19		W4473	0176	22		22-15-12	001-099
	19		W4473	0173	24		SPARE	115-199
	20		W4473	0329	24		34-45-01	001-002, 115-199
	20		W4473	0329	24		SPARE	003-099
	21		W4473	0330	24		34-45-01	001-002, 115-199
	21		W4473	0330	24		SPARE	003-099
	22		W4473	0130	24		SPARE	ALL
	23	UNUSED						001-099
	23		W4473	0195	22		SPARE	115-199
	24	UNUSED						001-009
	24		W4473	0265	22		31-31-61	010-099
	24		W4473	0098	24		SPARE	115-199
	25		W4473	5042Z			34-25-11	001, 003-099, 115-199
	25		W4473	5042Z			SPARE	002
	26		W4473	5042R	24		34-25-11	001, 003-099, 115-199
	26		W4473	5042R	24		SPARE	002
	27		W4473	5042B	24		34-25-11	001, 003-099, 115-199
	27		W4473	5042B	24		SPARE	002
	28		W4473	5049B	24		34-22-81	001-099
	28		W4473	5094R	24		SPARE	115-199
	29		W4473	5049R	24		34-22-81	001-099
	29		W4473	5094B	24		SPARE	115-199
	30		W4473	5049Z			34-22-81	001-099
	30		W4473	5094Z			SPARE	115-199
	31		W4473	0175	22		22-15-12	001-099
	31		W4473	0105	24		SPARE	115-199
	32		W4473	5133R	24		31-31-43	001-099
	32		W4473	5044Z			SPARE	115-199
	33		W4473	5133B	24		31-31-43	001-099
	33		W4473	5044R	24		SPARE	115-199
	34		W4473	5133Z			31-31-43	001-099
	34		W4473	5044B	24		SPARE	115-199
	35		W4473	5134R	24		31-31-43	001-099
	35		W4473	5045R	24		31-31-22	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 108

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41881P		E002-02/ /		PLUG- (continued)				001-099
D41881P		E2-2/ /		PLUG- (continued)				115-199
	36		W4473	5134B	24		31-31-43	001-099
	36		W4473	5045B	24		31-31-22	115-199
	37		W4473	5134Z			31-31-43	001-099
	37		W4473	5045Z			31-31-22	115-199
	38	UNUSED						001-099
	38		W4473	5046Z			31-31-22	115-199
	39	UNUSED						001-099
	39		W4473	5046R	24		31-31-22	115-199
	40	UNUSED						001-099
	40		W4473	5046B	24		31-31-22	115-199
	41		W4473	5047R	24		31-31-43	001-099
	41		W4473	5047Z			31-31-22	115-199
	42		W4473	5047B	24		31-31-43	001-099
	42		W4473	5047R	24		31-31-22	115-199
	43		W4473	5047Z			31-31-43	001-099
	43		W4473	5047B	24		31-31-22	115-199
	44	UNUSED						001-099
	44		W4473	5049B	24		34-22-83	115-199
	45	UNUSED						001-099
	45		W4473	5049R	24		34-22-83	115-199
	46	UNUSED						001-099
	46		W4473	5049Z			34-22-83	115-199
	47	UNUSED						001, 003-099, 115-199
	47		W4473	5242Z			34-46-12	002
	48	UNUSED						001, 003-099, 115-199
	48		W4473	5242R	22		34-46-12	002
	49	UNUSED						001, 003-099, 115-199
	49		W4473	5242B	22		34-46-12	002
	50	UNUSED						001, 003-099
	50		W4473	8071Z			34-46-12	002
	50		W4473	5194R	22		34-58-21	115-199
	51	UNUSED						001, 003-099
	51		W4473	8071R	22		34-46-12	002
	51		W4473	5194B	22		34-58-21	115-199
	52	UNUSED						001, 003-099, 115-199
	52		W4473	8071B	22		34-46-12	002
	53	UNUSED						001-099
	53		W4473	0175	22		22-15-12	115-199
	54	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 109

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41881P		E002-02/ /		PLUG- (continued)				001-099
D41881P		E2-2/ /		PLUG- (continued)				115-199
	54		W4473	0176	22		22-15-12	115-199
	55	UNUSED						001-099
	55		W4473	5194Z			34-58-21	115-199
D41882J		E5-1/ /		RCPT				ALL
	1		W1282	0001	22		34-33-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1282	0181	24		27-51-41	ALL
	7	UNUSED						ALL
	8		W1282	0182	24		27-51-41	ALL
	9		W1282	0163	24		27-51-41	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D41882P		E005-01/ /		PLUG-				001-099
D41882P		E5-1/ /		PLUG-				115-199
	1		W2350	0027	22		34-33-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						001-099
	4		W2350	0705	22		SPARE	115-199
	5	UNUSED						001-099
	5		W2350	0703	22		SPARE	115-199
	6		W2350	0036	24		27-51-41	001-099
	6		W2350	0036	22		27-51-41	115-199
	7	UNUSED						001-099
	7		W2350	0706	22		SPARE	115-199
	8		W2350	0047	24		27-51-41	001-099
	8		W2350	0047	22		27-51-41	115-199
	9		W2350	0043	24		27-51-41	001-099
	9		W2350	0043	22		27-51-41	115-199
	10	UNUSED						001-099
	10		W2350	0205	18		SPARE	115-199
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 110

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41883J		E5-2/ /		RCPT				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1284	5020R	24		34-45-02	ALL
	8		W1284	5020B	24		34-45-02	ALL
	9		W1284	0023	22		27-41-21	ALL
	10		W1284	5020Z			34-45-02	ALL
	11	UNUSED						ALL
	12		W1284	0205	24		27-51-31	001-099
	12		W1284	0205	22		27-51-31	115-199
	13		W1284	0034	22		27-51-21	ALL
	14		W1284	0031	22		27-51-21	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W1284	5024R	24		21-31-21	ALL
	21		W1284	5024B	24		21-31-21	ALL
	22		W1284	5024Z			21-31-21	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						001-099
	28		W1284	5026R	24		31-31-22	115-199
	29	UNUSED						001-099
	29		W1284	5026B	24		31-31-22	115-199
	30	UNUSED						001-099
	30		W1284	5026Z			31-31-22	115-199
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						001, 003-099, 115-199
	34		W1284	5051R	22		34-46-12	002
	35	UNUSED						001, 003-099, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 111

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41883J		E5-2/ /		RCPT (continued)				ALL
	35		W1284	5051B	22		34-46-12	002
	36	UNUSED						001, 003-099, 115-199
	36		W1284	5051Z			34-46-12	002
	37		W1284	0079	24		24-22-22	ALL
	38		W1284	0080	24		24-22-22	ALL
	39		W1284	0081	24		24-22-22	ALL
	40	UNUSED						ALL
	41		W1284	5046R	24		27-32-21	001-099
	41	UNUSED						115-199
	42		W1284	5046B	24		27-32-21	001-099
	42	UNUSED						115-199
	43		W1284	5046Z			27-32-21	001-099
	43	UNUSED						115-199
	44	UNUSED						ALL
	45	UNUSED						ALL
	46		W1284	5047R	24		31-31-43	001-099
	46	UNUSED						115-199
	47		W1284	5047B	24		31-31-43	001-099
	47	UNUSED						115-199
	48		W1284	5047Z			31-31-43	001-099
	48	UNUSED						115-199
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D41883P		E005-02/ /		PLUG-				001-099
D41883P		E5-2/ /		PLUG-				115-199
	1		W4473	0138	22		SPARE	ALL
	2		W4473	0139	22		SPARE	ALL
	3	UNUSED						001-099
	3		W4473	0140	22		SPARE	115-199
	4	UNUSED						001-099
	4		W4473	0141	22		SPARE	115-199
	5	UNUSED						001-099
	5		W4473	0142	22		SPARE	115-199
	6	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 112

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41883P		E005-02/ /		PLUG- (continued)				001-099
D41883P		E5-2/ /		PLUG- (continued)				115-199
	6		W4473	0143	22		SPARE	115-199
	7		W4473	5119R	24		34-45-02	ALL
	8		W4473	5119B	24		34-45-02	ALL
	9		W4473	0180	22		27-41-21	ALL
	10		W4473	5119Z			34-45-02	ALL
	11	UNUSED						001-099
	11		W4473	0144	22		SPARE	115-199
	12		W4473	0167	24		27-51-31	001-099
	12		W4473	0167	20		27-51-31	115-199
	13		W4473	0168	22		27-51-21	001-099
	13		W4473	0168	20		27-51-21	115-199
	14		W4473	0169	22		27-51-21	001-099
	14		W4473	0169	20		27-51-21	115-199
	15	UNUSED						001-099
	15		W4473	4001G	24		SPARE	115-199
	16	UNUSED						001-099
	16		W4473	4001Y	24		SPARE	115-199
	17	UNUSED						001-099
	17		W4473	4001B	24		SPARE	115-199
	18	UNUSED						001-099
	18		W4473	4001R	24		SPARE	115-199
	19	UNUSED						001-099
	19		W4473	4001Z			SPARE	115-199
	20		W4473	5051R	24		21-31-21	ALL
	21		W4473	5051B	24		21-31-21	ALL
	22		W4473	5051Z			21-31-21	ALL
	23	UNUSED						001-099
	23		W4473	0170	24		SPARE	115-199
	24		W4473	0171	24		SPARE	ALL
	25	UNUSED						001-099
	25		W4473	5052B	24		SPARE	115-199
	26	UNUSED						001-099
	26		W4473	5052R	24		SPARE	115-199
	27	UNUSED						001-099
	27		W4473	5052Z			SPARE	115-199
	28	UNUSED						001-099
	28		W4473	5048R	24		31-31-22	115-199
	29	UNUSED						001-099
	29		W4473	5048B	24		31-31-22	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 113

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41883P		E005-02/ /		PLUG- (continued)				001-099
D41883P		E5-2/ /		PLUG- (continued)				115-199
	30	UNUSED						001-099
	30		W4473	5048Z			31-31-22	115-199
	31	UNUSED						001-099
	31		W4473	0145	22		SPARE	115-199
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						001, 003-099, 115-199
	34		W4473	5189R	22		34-46-12	002
	35	UNUSED						001, 003-099, 115-199
	35		W4473	5189B	22		34-46-12	002
	36	UNUSED						001, 003-099, 115-199
	36		W4473	5189Z			34-46-12	002
	37		W4473	0213	24		24-22-22	ALL
	38		W4473	0185	24		24-22-22	ALL
	39		W4473	0214	24		24-22-22	ALL
	40		W4473	0215	24		SPARE	ALL
	41		W4473	5092R	24		27-32-21	001-099
	41	UNUSED						115-199
	42		W4473	5092B	24		27-32-21	001-099
	42	UNUSED						115-199
	43		W4473	5092Z			27-32-21	001-099
	43	UNUSED						115-199
	44	UNUSED						ALL
	45	UNUSED						ALL
	46		W4473	5048R	24		31-31-43	001-099
	46	UNUSED						115-199
	47		W4473	5048B	24		31-31-43	001-099
	47	UNUSED						115-199
	48		W4473	5048Z			31-31-43	001-099
	48	UNUSED						115-199
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 114

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41884J		E002-03/ /		RCPT-				001-099
D41884J		E2-3/ /		RCPT-				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						001-099
	6		W1175	0706	22		34-61-15	115-199
	7		W1175	0038	22		34-31-31	ALL
	8		W1175	0034	20		34-24-11	ALL
	9		W1175	0033	24		34-24-11	ALL
	10		W1175	0372	20		22-31-12	001-099
	10		W1175	1003	20		22-31-12	115-199
	11		W1175	0379	22		22-11-32	001-099
	11		W1175	1009	20		22-11-32	115-199
	12	UNUSED						ALL
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	DED		W1175	1003Z			22-31-12	115-199
	DED		W1175	1009Z			22-11-32	115-199
D41884P		E2-3/ /		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						001-099
	2		W2358	0617	20		SPARE	115-199
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						001-099
	6		W2358	0054	22		34-61-15	115-199
	7		W2358	0007	22		34-31-31	ALL
	8		W2358	0008	20		34-24-11	ALL
	9		W2358	0009	24		34-24-11	ALL
	10		W2358	0010	20		22-31-12	ALL
	11		W2358	0011	20		22-11-32	ALL
	12	UNUSED						ALL
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 115

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41888J		E002-03/ /		RCPT-				001-099
D41888J		E2-3/ /		RCPT-				115-199
	1		W1175	0401	22		22-11-32	001-099
	1		W1175	0173	22		22-11-32	115-199
	2		W1175	0402	22		22-11-32	001-099
	2		W1175	0174	22		22-11-32	115-199
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D41888P		E002-03/ /		PLUG-				001-099
D41888P		E2-3/ /		PLUG-				115-199
	1		W2370	0001	22		22-11-32	ALL
	2		W2370	0002	22		22-11-32	ALL
	3	UNUSED						001-099
	3		W2370	0104	22		SPARE	115-199
	4	UNUSED						001-099
	4		W2370	0105	22		SPARE	115-199
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D41890J		E002-03/ /		RCPT-				001-099
D41890J		E2-3/ /		RCPT-				115-199
	1		W1175	0157	20		22-11-31	ALL
	2	UNUSED						ALL
	3		W1175	0163	20		22-11-32	ALL
	4	UNUSED						ALL
	5		W1175	0274	20		34-21-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 116

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41890J		E002-03/ /		RCPT- (continued)				001-099
D41890J		E2-3/ /		RCPT- (continued)				115-199
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
D41890P		E002-03/ /		PLUG-				001-099
D41890P		E2-3/ /		PLUG-				115-199
	1		W2362	0001	20		22-11-31	ALL
	2		W2362	0002	20		SPARE	ALL
	3		W2362	0003	20		22-11-32	ALL
	4	UNUSED						ALL
	5		W2362	0005	20		34-21-31	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						001-099
	11		W2362	0101	20		SPARE	115-199
	12	UNUSED						001-099
	12		W2362	0102	20		SPARE	115-199
	13		W2362	0103	20		SPARE	115-199
	14		W2362	0104	20		SPARE	115-199
	15	UNUSED						115-199
D41891J		675/300/L30		RCPT				115-199
	1		W3525	4251R	24		23-42-11	115-199
	2		W3525	4251Z			23-42-11	115-199
	3		W3525	4251B	24		23-42-11	115-199
	4		W3525	4251Y	24		23-42-11	115-199
	5		W3525	4251G	24		23-42-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 117

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41892J D41892J		E005-03/ / E5-3/ /		RCPT RCPT				001-099 115-199
	1		W1286	0004	22		34-33-31	ALL
	2	UNUSED						ALL
	3		W1286	0067	24		24-51-31	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W1286	0261	22		27-48-21	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D41892P D41892P		E005-03/ / E5-3/ /		PLUG- PLUG-				001-099 115-199
	1		W2362	0004	22		34-33-31	ALL
	2	UNUSED						ALL
	3		W2362	0006	24		24-51-31	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W2362	0106	22		SPARE	ALL
	7	UNUSED						001-099
	7		W2362	0107	22		SPARE	115-199
	8		W2362	0108	22		SPARE	ALL
	9		W2362	0109	22		27-48-21	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D41893J D41893J		1633/300/L025 1630/300/L25		RCPT- RCPT				001-099 115-199
	1		W3525	4252R	24		23-42-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 118

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41893J		1633/300/L025		RCPT- (continued)				001-099
D41893J		1630/300/L25		RCPT (continued)				115-199
	2		W3525	4252Z			23-42-11	ALL
	3		W3525	4252B	24		23-42-11	ALL
	4		W3525	4252Y	24		23-42-11	ALL
	5		W3525	4252G	24		23-42-11	ALL
D41893P		1638/300/L025		PLUG-				ALL
	1		W0507	4252R	22		23-42-11	ALL
	2		W0507	4252Z			23-42-11	ALL
	3		W0507	4252B	22		23-42-11	ALL
	4		W0507	4252Y	22		23-42-11	ALL
	5		W0507	4252G	22		23-42-11	ALL
D41894J		E5-1/ /		RCPT				ALL
	1	UNUSED						ALL
	2		W1282	0092	24		24-11-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W1282	0124	22		24-11-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D41894P		E005-01/ /		PLUG-				ALL
	1	UNUSED						ALL
	2		W2250	0072	24		24-11-11	ALL
	3		W2250	0603	20		SPARE	ALL
	4		W2250	0008	16		SPARE	ALL
	5		W2250	0002	20		24-11-11	ALL
	6	UNUSED						001-099
	6		W2250	0607	20		SPARE	115-199
	7	UNUSED						001-099
	7		W2250	0608	20		SPARE	115-199
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W2250	0017	18		SPARE	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 119

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41894P		E005-01/ /		PLUG- (continued)				ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D41896J		E005-03/ /		RCPT				001-099
D41896J		E5-3/ /		RCPT				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1286	0051	22		24-41-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						001-099
	7		W1286	0138	22		24-22-41	115-199
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D41896P		E005-03/ /		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W2250	0007	20		24-41-11	ALL
	5	UNUSED						ALL
	6	UNUSED						001-099
	6		W2250	0609	20		SPARE	115-199
	7	UNUSED						001-099
	7		W2250	0003	20		24-22-41	115-199
	8	UNUSED						001-099
	8		W2250	0610	20		SPARE	115-199
	9	UNUSED						001-099
	9		W2250	0611	20		SPARE	115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 120

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41896P		E005-03/ /		PLUG- (continued)				ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D41898J		E5-1/ /		RCPT				ALL
	1		W1282	3002B	18		24-21-11	ALL
	2		W1282	3002Y	18		24-21-11	ALL
	3		W1282	4001G	24		24-21-11	ALL
	4		W1282	3002R	18		24-21-11	ALL
	5		W1282	2508Z			24-11-11	ALL
	6	UNUSED						ALL
	7		W1282	2010B	24		24-11-11	ALL
	8		W1282	0137	20		24-11-11	ALL
	9		W1282	2505R	22		24-21-11	ALL
	10		W1282	2505B	22		24-21-11	ALL
	11		W1282	2505Z			24-21-11	ALL
	12		W1282	4001R	24		24-21-11	ALL
	13		W1282	4001B	24		24-21-11	ALL
	14		W1282	4001Y	24		24-21-11	ALL
	15		W1282	2010R	24		24-11-11	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W1282	2009R	24		24-11-11	ALL
	19		W1282	2009B	24		24-11-11	ALL
	20		W1282	2508R	24		24-11-11	ALL
	21	UNUSED						ALL
	22		W1282	2508B	24		24-11-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W1282	0135	24		24-11-11	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
D41898P		E005-01/ /		PLUG-				001-099
D41898P		E5-1/ /		PLUG-				115-199
	1		W4300	3001B	18		24-21-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 121

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41898P		E005-01/ /		PLUG- (continued)				001-099
D41898P		E5-1/ /		PLUG- (continued)				115-199
	2		W4300	3001Y	18		24-21-11	ALL
	3		W4300	4001G	24		24-21-11	ALL
	4		W4300	3001R	18		24-21-11	ALL
	5		W4300	2502Z			24-11-11	ALL
	6	UNUSED						ALL
	7		W4300	2002B	20		24-11-11	ALL
	8		W4300	0002	16		24-11-11	ALL
	9		W4300	2501R	20		24-21-11	ALL
	10		W4300	2501B	20		24-21-11	ALL
	11		W4300	2501Z			24-21-11	ALL
	12		W4300	4001R	24		24-21-11	ALL
	13		W4300	4001B	24		24-21-11	ALL
	14		W4300	4001Y	24		24-21-11	ALL
	15		W4300	2002R	20		24-11-11	ALL
	16		W4300	0602	20		SPARE	ALL
	17		W4300	0603	20		SPARE	ALL
	18		W4300	2001R	20		24-11-11	ALL
	19		W4300	2001B	20		24-11-11	ALL
	20		W4300	2502R	20		24-11-11	ALL
	21		W4300	2003B	20		SPARE	ALL
	22		W4300	2502B	20		24-11-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26		W4300	2003R	20		SPARE	ALL
	27		W4300	0001	20		24-11-11	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41800

Page 122 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41900J		E005-03/ /		RCPT				001-099
D41900J		E5-3/ /		RCPT				115-199
	1	UNUSED						001-099
	1		W1286	0080	22		24-21-41	115-199
	2		W1286	0075	22		24-51-61	ALL
	3		W1286	0074	22		24-51-61	ALL
	4		W1286	4006Y	24		24-23-12	ALL
	5	UNUSED						001-099
	5		W1286	0147	22		24-22-41	115-199
	6	UNUSED						001-099
	6		W1286	0148	22		24-22-41	115-199
	7	UNUSED						001-099
	7		W1286	0149	24		24-22-41	115-199
	8	UNUSED						001-099
	8		W1286	0081	22		24-21-41	115-199
	9		W1286	0061	22		24-41-12	ALL
	10	UNUSED						001-099
	10		W1286	0146	22		24-22-41	115-199
	11	UNUSED						001-099
	11		W1286	0155	24		24-41-11	115-199
	12	UNUSED						001-099
	12		W1286	0150	22		24-22-41	115-199
	13		W1286	0152	24		24-27-41	ALL
	14	UNUSED						001-099
	14		W1286	0082	22		24-21-41	115-199
	15	UNUSED						001-099
	15		W1286	4004B	24		24-23-11	115-199
	16	UNUSED						001-099
	16		W1286	4004G	24		24-23-11	115-199
	17	UNUSED						001-099
	17		W1286	4004R	24		24-23-11	115-199
	18	UNUSED						001-099
	18		W1286	4004Y	24		24-23-11	115-199
	19	UNUSED						001-099
	19		W1286	0159	24		24-22-41	115-199
	20		W1286	4006G	24		24-23-12	ALL
	21		W1286	4006R	24		24-23-12	ALL
	22		W1286	4006B	24		24-23-12	ALL
	23		W1286	4001B	24		24-23-12	ALL
	24		W1286	4001G	24		24-23-12	ALL
	25		W1286	4001R	24		24-23-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41900J		E005-03/ /		RCPT (continued)				001-099
D41900J		E5-3/ /		RCPT (continued)				115-199
	26		W1286	4001Y	24		24-23-12	ALL
	27		W1286	4011B	24		24-41-11	ALL
	28		W1286	4011G	24		24-41-11	ALL
	29		W1286	4011R	24		24-41-11	ALL
	30		W1286	4011Y	24		24-41-11	ALL
	31		W1286	0060	24		24-41-11	ALL
	32		W1286	0052	24		24-41-11	ALL
	33		W1286	0053	24		24-41-11	ALL
	34		W1286	0054	24		24-41-11	ALL
	35		W1286	0055	24		24-41-11	ALL
	36		W1286	0056	24		24-41-11	ALL
	37		W1286	0058	24		24-41-11	ALL
	38		W1286	0057	24		24-41-11	ALL
	39		W1286	0059	22		24-41-11	ALL
	40		W1286	0070	24		24-51-51	ALL
	41		W1286	0071	22		24-51-51	ALL
	42		W1286	0072	22		24-51-51	ALL
	43		W1286	0073	24		24-51-51	ALL
	44		W1286	0151	24		24-27-41	ALL
	45	UNUSED						001-099
	45		W1286	0076	22		33-31-31	115-199
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D41900P		E005-03/ /		PLUG-				ALL
	1	UNUSED						001-099
	1	18	W4504	0001	18		24-21-41	115-199
	2		W4504	0042	20		24-51-61	ALL
	3		W4504	0041	20		24-51-61	ALL
	4		W4504	4002Y	24		24-23-12	ALL
	5	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41900P		E005-03/ /		PLUG- (continued)				ALL
	5		W4504	0005	20		24-22-41	115-199
	6	UNUSED						001-099
	6		W4504	0006	20		24-22-41	115-199
	7	UNUSED						001-099
	7		W4504	0007	24		24-22-41	115-199
	8	UNUSED						001-099
	8	18	W4504	0002	18		24-21-41	115-199
	9		W4504	0046	24		24-41-12	ALL
	10	UNUSED						001-099
	10	18	W4504	0010	18		24-22-41	115-199
	11	UNUSED						001-099
	11	18	W4504	0011	18		24-41-11	115-199
	12	UNUSED						001-099
	12	18	W4504	0004	18		24-22-41	115-199
	13		W4504	0013	24		24-27-41	ALL
	14	UNUSED						001-099
	14	18	W4504	0003	18		24-21-41	115-199
	15	UNUSED						001-099
	15		W4504	4001B	24		24-23-11	115-199
	16	UNUSED						001-099
	16		W4504	4001G	24		24-23-11	115-199
	17	UNUSED						001-099
	17		W4504	4001R	24		24-23-11	115-199
	18	UNUSED						001-099
	18		W4504	4001Y	24		24-23-11	115-199
	19	UNUSED						001-099
	19		W4504	0015	24		24-22-41	115-199
	20		W4504	4002G	24		24-23-12	ALL
	21		W4504	4002R	24		24-23-12	ALL
	22		W4504	4002B	24		24-23-12	ALL
	23		W4504	4003B	24		24-23-12	ALL
	24		W4504	4003G	24		24-23-12	ALL
	25		W4504	4003R	24		24-23-12	ALL
	26		W4504	4003Y	24		24-23-12	ALL
	27		W4504	4004B	24		24-41-11	ALL
	28		W4504	4004G	24		24-41-11	ALL
	29		W4504	4004R	24		24-41-11	ALL
	30		W4504	4004Y	24		24-41-11	ALL
	31		W4504	0031	24		24-41-11	ALL
	32		W4504	0032	24		24-41-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41900P		E005-03/ /		PLUG- (continued)				ALL
	33		W4504	0033	24		24-41-11	ALL
	34		W4504	0034	24		24-41-11	ALL
	35		W4504	0035	24		24-41-11	ALL
	36		W4504	0036	24		24-41-11	ALL
	37		W4504	0037	24		24-41-11	ALL
	38		W4504	0038	24		24-41-11	001-099
	38		W4504	0038	20		24-41-11	115-199
	39		W4504	0039	20		24-41-11	ALL
	40		W4504	0057	24		24-51-51	ALL
	41		W4504	0040	20		24-51-51	ALL
	42		W4504	0059	20		24-51-51	001-099
	42		W4504	0059	24		24-51-51	115-199
	43		W4504	0058	24		24-51-51	001-099
	43		W4504	0058	20		24-51-51	115-199
	44		W4504	0012	24		24-27-41	ALL
	45	UNUSED						001-099
	45		W4504	0014	20		33-31-31	115-199
	46	UNUSED						001-099
	46	18	W4504	0062	18		SPARE	115-199
	47		W4504	0060	22		SPARE	ALL
	48	UNUSED						001-099
	48		W4504	0056	22		SPARE	115-199
	49		W4504	0601	20		SPARE	ALL
	50	UNUSED						001-099
	50		W4504	0602	20		SPARE	115-199
	51		W4504	0606	20		SPARE	ALL
	52		W4504	0607	20		SPARE	ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D41902J		E003-01/ /		RCPT				ALL
	1	UNUSED						ALL
	2		W1265	0173	22		27-32-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 4

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41902J		E003-01/ /		RCPT (continued)				ALL
	9		W1265	0218	22		27-09-11	ALL
	10		W1265	0311	22		27-09-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
D41902P		E003-01/ /		PLUG-				001-099
D41902P		E3-1/ /		PLUG-				115-199
	1	UNUSED						ALL
	2		W2360	0120	22		27-32-11	ALL
	3		W2360	0603	22		SPARE	ALL
	4		W2360	0604	22		SPARE	ALL
	5		W2360	0605	22		SPARE	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W2360	0029	22		27-09-11	ALL
	10		W2360	0030	22		27-09-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
D41904J		P6/ /		RCPT-				ALL
	1		W0060	0205	22		76-11-11	ALL
	2		W0060	0212	20		26-21-11	ALL
	3		W0060	0106	20		26-21-11	ALL
	4		W0074	0067	24		24-33-12	001-099
	4	UNUSED						115-199
	5		W0060	0405	20		26-21-11	ALL
	6		W0060	0406	20		26-21-11	ALL
	7		W0060	0307	20		26-23-11	ALL
	8		W0060	0207	20		28-22-21	ALL
	9		W0074	0035	24		24-33-12	001-099
	9	UNUSED						115-199
	10		W0074	0042	24		24-33-12	001-099
	10	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 5

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41904J		P6/ /		RCPT- (continued)				ALL
	11		W0074	0041	24		24-33-12	001-099
	11	UNUSED						115-199
	12		W0074	0039	24		24-33-12	001-099
	12	UNUSED						115-199
	13		W0060	0024	22		29-21-31	001-099
	13	UNUSED						115-199
	14	UNUSED						ALL
	15		W0060	0214	20		26-22-21	001-099
	15	UNUSED						115-199
	16	UNUSED						003-099
	17	UNUSED						003-099
	18	UNUSED						003-099
	19	UNUSED						003-099
	20	UNUSED						003-099
	21	UNUSED						003-099
	22	UNUSED						003-099
	23	UNUSED						003-099
	24	UNUSED						003-099
D41904P		P006-00/ /		PLUG				ALL
	1		W2156	0081	22		76-11-11	ALL
	2		W2156	0082	20		26-21-11	ALL
	3		W2156	0083	20		26-21-11	ALL
	4		W2156	0059	24		24-33-12	001-099
	4	UNUSED						115-199
	5		W2156	0114	20		26-21-11	ALL
	6		W2156	0115	20		26-21-11	ALL
	7		W2156	0120	20		26-23-11	ALL
	8		W2156	0024	20		28-22-21	ALL
	9		W2156	0198	22		24-33-12	001-099
	9	UNUSED						115-199
	10		W2156	0195	22		24-33-12	001-099
	10	UNUSED						115-199
	11		W2156	0196	22		24-33-12	001-099
	11	UNUSED						115-199
	12		W2156	0197	22		24-33-12	001-099
	12	UNUSED						115-199
	13		W2156	0193	22		29-21-31	001-099
	13	UNUSED						115-199
	14	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 6

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41904P		P006-00/ /		PLUG (continued)				ALL
	15		W2156	0119	20		26-22-21	001-099
	15	UNUSED						115-199
	16	UNUSED						003-099
	17	UNUSED						003-099
	18	UNUSED						003-099
	19	UNUSED						003-099
	20	UNUSED						003-099
	21	UNUSED						003-099
	22	UNUSED						003-099
	23	UNUSED						003-099
	24	UNUSED						003-099
D41905J D41905J		E002-01/ / E2-1/ /		RCPT RCPT				001-099 115-199
	1		W1171	5113R	24		22-13-11	001-099
	1	UNUSED						115-199
	2		W1171	5113B	24		22-13-11	001-099
	2	UNUSED						115-199
	3		W1171	FRNA			22-13-11	001-099
	3	UNUSED						115-199
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1171	5149R	24		34-16-11	ALL
	8		W1171	5149B	24		34-16-11	ALL
	9		W1171	5149Z			34-16-11	ALL
	10		W1171	0252	22		22-13-11	001-099
	10		W1171	5043R	24		31-31-22	115-199
	11		W1171	0471	24		34-45-02	001, 003-099
	11	UNUSED						002
	11		W1171	5043B	24		31-31-22	115-199
	12		W1171	FRNB			34-45-02	001-099
	12		W1171	5043Z			31-31-22	115-199
	13		W1171	0468	24		34-45-02	001, 003-099
	13	UNUSED						002
	13		W1171	0350	24		31-51-34	115-199
	14		W1171	0469	24		34-45-02	001, 003-099
	14	UNUSED						002
	14		W1171	5044R	24		31-51-34	115-199
	15		W1171	0470	24		34-45-02	001, 003-099

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 7

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41905J		E002-01/ /		RCPT (continued)				001-099
D41905J		E2-1/ /		RCPT (continued)				115-199
	15	UNUSED						002
	15		W1171	5044B	24		31-51-34	115-199
	16		W1171	5160R	24		34-45-02	001-099
	16		W1171	5044Z			31-51-34	115-199
	17		W1171	5160B	24		34-45-02	001-099
	17	UNUSED						115-199
	18		W1171	0285	22		22-14-21	ALL
	19		W1171	0289	22		22-14-21	ALL
	20		W1171	0259	22		22-14-31	ALL
	21		W1171	0263	22		22-14-31	ALL
	22		W1171	0226	22		22-11-12	ALL
	23		W1171	0227	22		22-11-12	ALL
	24		W1171	0260	22		22-14-31	ALL
	25		W1171	5123R	24		22-24-21	ALL
	26		W1171	5123B	24		22-24-21	ALL
	27		W1171	5123Z			22-24-21	ALL
	28	UNUSED						001-099
	28		W1171	0706	22		34-61-15	115-199
	29		W1171	0369	22		22-14-31	ALL
	30		W1171	5139R	24		22-12-31	ALL
	31		W1171	5139B	24		22-12-31	ALL
	32		W1171	5139Z			22-12-31	ALL
	33		W1171	5171R	24		22-33-11	ALL
	34		W1171	5171B	24		22-33-11	ALL
	35		W1171	5171Z			22-33-11	ALL
	36		W1171	2006R	22		22-12-11	ALL
	37		W1171	2006B	22		22-12-11	ALL
	38		W1171	0388	22		34-61-15	ALL
	39		W1171	5152R	24		34-61-15	ALL
	40		W1171	5152B	24		34-61-15	ALL
	41		W1171	5152Z			34-61-15	ALL
	42		W1171	5153B	24		34-61-15	ALL
	43		W1171	5153R	24		34-61-15	ALL
	44		W1171	5153Z			34-61-15	ALL
	45	UNUSED						ALL
	46	UNUSED						001-008, 010-099, 115-199
	46		W1171	5044Z			31-51-34	009
	47	UNUSED						001-008, 010-099, 115-199
	47		W1171	0350	24		31-51-34	009

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 8

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41905J		E002-01/ /		RCPT (continued)				001-099
D41905J		E2-1/ /		RCPT (continued)				115-199
	48	UNUSED						001-008, 010-099, 115-199
	48		W1171	5044R	24		31-51-34	009
	49	UNUSED						001-008, 010-099, 115-199
	49		W1171	5044B	24		31-51-34	009
	50		W1171	5158R	24		27-32-11	001-099
	50	UNUSED						115-199
	51		W1171	5158B	24		27-32-11	001-099
	51	UNUSED						115-199
	52		W1171	5158Z			27-32-11	001-099
	52	UNUSED						115-199
	53		W1171	5161R	24		34-45-02	001-099
	53	UNUSED						115-199
	54		W1171	5161B	24		34-45-02	001-099
	54	UNUSED						115-199
	55		W1171	FRNC			34-45-02	001-099
	55	UNUSED						115-199
			W1171	0446	22		22-13-11	001-099
			W1171	0448	22		34-45-02	001-099
			W1171	0449	22		34-45-02	001-099
			W1171	5113Z			22-13-11	001-099
			W1171	5160Z			34-45-02	001-099
			W1171	5161Z			34-45-02	001-099
			W1171	FRNA			22-13-11	001-099
			W1171	FRNB			34-45-02	001-099
			W1171	FRNC			34-45-02	001-099
D41905P		E002-01/ /		PLUG-				001-099
D41905P		E2-1/ /		PLUG-				115-199
	1		W4471	5090R	24		22-13-11	001-099
	1	UNUSED						115-199
	2		W4471	5090B	24		22-13-11	001-099
	2	UNUSED						115-199
	3		W4471	5090Z			22-13-11	001-099
	3	UNUSED						115-199
	4	UNUSED						ALL
	5		W4471	0113	24		SPARE	001-099
	5	UNUSED						115-199
	6		W4471	0234	22		SPARE	001-099
	6	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 9

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41905P		E002-01/ /		PLUG- (continued)				001-099
D41905P		E2-1/ /		PLUG- (continued)				115-199
	7		W4471	5061R	24		34-16-11	ALL
	8		W4471	5061B	24		34-16-11	ALL
	9		W4471	5061Z			34-16-11	ALL
	10		W4471	0333	22		22-13-11	001-099
	10		W4471	5053R	24		31-31-22	115-199
	11		W4471	0332	24		34-45-02	001, 003-099
	11		W4471	0332	24		SPARE	002
	11		W4471	5053B	24		31-31-22	115-199
	12		W4471	5127Z			34-45-02	001-099
	12		W4471	5053Z			31-31-22	115-199
	13		W4471	0329	24		34-45-02	001, 003-099
	13		W4471	0329	24		SPARE	002
	13		W4471	0224	24		31-51-34	115-199
	14		W4471	0330	24		34-45-02	001, 003-099
	14		W4471	0330	24		SPARE	002
	14		W4471	5063R	24		31-51-34	115-199
	15		W4471	0331	24		34-45-02	001, 003-099
	15		W4471	0331	24		SPARE	002
	15		W4471	5063B	24		31-51-34	115-199
	16		W4471	5127R	24		34-45-02	001-099
	16		W4471	5063Z			31-51-34	115-199
	17		W4471	5127B	24		34-45-02	001-099
	17	UNUSED						115-199
	18		W4471	0238	22		22-14-21	ALL
	19		W4471	0237	22		22-14-21	ALL
	20		W4471	0159	22		22-14-31	ALL
	21		W4471	0176	22		22-14-31	ALL
	22		W4471	0119	22		22-11-12	ALL
	23		W4471	0123	22		22-11-12	ALL
	24		W4471	0240	22		22-14-31	ALL
	25		W4471	5066R	24		22-24-21	ALL
	26		W4471	5066B	24		22-24-21	ALL
	27		W4471	5066Z			22-24-21	ALL
	28		W4471	0177	24		SPARE	001-099
	28		W4471	0807	22		34-61-15	115-199
	29		W4471	0184	22		22-14-31	ALL
	30		W4471	5064R	24		22-12-31	ALL
	31		W4471	5064B	24		22-12-31	ALL
	32		W4471	5064Z			22-12-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 10

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41905P		E002-01/ /		PLUG- (continued)				001-099
D41905P		E2-1/ /		PLUG- (continued)				115-199
	33		W4471	5068R	24		22-33-11	ALL
	34		W4471	5068B	24		22-33-11	ALL
	35		W4471	5068Z			22-33-11	ALL
	36		W4471	2006R	22		22-12-11	ALL
	37		W4471	2006B	22		22-12-11	ALL
	38		W4471	0189	22		34-61-15	ALL
	39		W4471	5069R	24		34-61-15	ALL
	40		W4471	5069B	24		34-61-15	ALL
	41		W4471	5069Z			34-61-15	ALL
	42		W4471	5070B	24		34-61-15	ALL
	43		W4471	5070R	24		34-61-15	ALL
	44		W4471	5070Z			34-61-15	ALL
	45	UNUSED						ALL
	46	UNUSED						001-008, 010-099, 115-199
	46		W4471	5063Z			31-51-34	009
	47	UNUSED						001-008, 010-099, 115-199
	47		W4471	0224	24		31-51-34	009
	48	UNUSED						001-008, 010-099, 115-199
	48		W4471	5063R	24		31-51-34	009
	49	UNUSED						001-008, 010-099, 115-199
	49		W4471	5063B	24		31-51-34	009
	50		W4471	5079R	24		27-32-11	001-099
	50	UNUSED						115-199
	51		W4471	5079B	24		27-32-11	001-099
	51	UNUSED						115-199
	52		W4471	5079Z			27-32-11	001-099
	52	UNUSED						115-199
	53		W4471	5128R	24		34-45-02	001-099
	53	UNUSED						115-199
	54		W4471	5128B	24		34-45-02	001-099
	54	UNUSED						115-199
	55		W4471	5128Z			34-45-02	001-099
	55	UNUSED						115-199
D41907J		E002-02/ /		RCPT-				001-099
D41907J		E2-2/ /		RCPT-				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 11

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41907J		E002-02/ /		RCPT- (continued)				001-099
D41907J		E2-2/ /		RCPT- (continued)				115-199
	4		W1173	0384	24		73-21-22	001-099
	4	UNUSED						115-199
	5		W1173	0385	24		73-21-22	001-099
	5	UNUSED						115-199
	6	UNUSED						001-099
	6		W1173	5193R	22		34-58-11	115-199
	7	UNUSED						001-099
	7		W1173	5193B	22		34-58-11	115-199
	8	UNUSED						001-099
	8		W1173	5193Z			34-58-11	115-199
	9	UNUSED						ALL
	10		W1173	0324	24		34-12-22	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W1173	0352	22		34-61-25	ALL
	14		W1173	0100	22		22-11-22	ALL
	15		W1173	0099	22		22-11-22	ALL
	16		W1173	0097	22		22-11-22	ALL
	17		W1173	0129	22		22-14-31	ALL
	18		W1173	0120	22		22-14-11	ALL
	19		W1173	5137R	24		31-51-33	ALL
	20		W1173	5137B	24		31-51-33	ALL
	21		W1173	5137Z			31-51-33	ALL
	22		W1173	0320	24		31-51-21	ALL
	23		W1173	5140R	24		22-24-11	ALL
	24		W1173	5140B	24		22-24-11	ALL
	25		W1173	5140Z			22-24-11	ALL
	26	UNUSED						ALL
	27		W1173	2003R	22		22-12-21	ALL
	28		W1173	2003B	22		22-12-21	ALL
	29	UNUSED						ALL
	30		W1173	5141R	24		22-33-11	ALL
	31		W1173	5141B	24		22-33-11	ALL
	32		W1173	5141Z			22-33-11	ALL
	33		W1173	5144Z			34-61-25	ALL
	34		W1173	5144R	24		34-61-25	ALL
	35		W1173	5144B	24		34-61-25	ALL
	36		W1173	5145B	24		34-61-25	ALL
	37		W1173	5145R	24		34-61-25	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 12

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41907J		E002-02/ /		RCPT- (continued)				001-099
D41907J		E2-2/ /		RCPT- (continued)				115-199
	38		W1173	5145Z			34-61-25	ALL
	39	UNUSED						001-099
	39		W1173	0354	24		SPARE	115-199
	40	UNUSED						001-099
	40		W1173	0355	24		SPARE	115-199
	41	UNUSED						ALL
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D41907P		E002-02/ /		PLUG-				001-099
D41907P		E2-2/ /		PLUG				115-199
	1		W4473	5037R	24		SPARE	001-099
	1	UNUSED						115-199
	2		W4473	5037B	24		SPARE	001-099
	2	UNUSED						115-199
	3		W4473	5037Z			SPARE	001-099
	3	UNUSED						115-199
	4		W4473	0227	24		73-21-22	001-099
	4	UNUSED						115-199
	5		W4473	0228	24		73-21-22	001-099
	5	UNUSED						115-199
	6	UNUSED						001-099
	6		W4473	5172R	22		34-58-11	115-199
	7	UNUSED						001-099
	7		W4473	5172B	22		34-58-11	115-199
	8	UNUSED						001-099
	8		W4473	5172Z			34-58-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 13

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41907P		E002-02/ /		PLUG- (continued)				001-099
D41907P		E2-2/ /		PLUG (continued)				115-199
	9	UNUSED						001-099
	9		W4473	0046	24		34-61-26	115-199
	10		W4473	0032	24		34-12-22	ALL
	11	UNUSED						ALL
	12		W4473	0047	24		SPARE	ALL
	13		W4473	0220	22		34-61-25	ALL
	14		W4473	0200	22		22-11-22	ALL
	15		W4473	0201	22		22-11-22	ALL
	16		W4473	0202	22		22-11-22	ALL
	17		W4473	0203	22		22-14-31	ALL
	18		W4473	0204	22		22-14-11	ALL
	19		W4473	5025R	24		31-51-33	ALL
	20		W4473	5025B	24		31-51-33	ALL
	21		W4473	5025Z			31-51-33	ALL
	22		W4473	0031	24		31-51-21	ALL
	23		W4473	5063R	24		22-24-11	ALL
	24		W4473	5063B	24		22-24-11	ALL
	25		W4473	5063Z			22-24-11	ALL
	26		W4473	0108	24		SPARE	ALL
	27		W4473	2006R	22		22-12-21	ALL
	28		W4473	2006B	22		22-12-21	ALL
	29	UNUSED						ALL
	30		W4473	5067R	24		22-33-11	ALL
	31		W4473	5067B	24		22-33-11	ALL
	32		W4473	5067Z			22-33-11	ALL
	33		W4473	5069Z			34-61-25	ALL
	34		W4473	5069R	24		34-61-25	ALL
	35		W4473	5069B	24		34-61-25	ALL
	36		W4473	5070B	24		34-61-25	ALL
	37		W4473	5070R	24		34-61-25	ALL
	38		W4473	5070Z			34-61-25	ALL
	39		W4473	0225	22		34-61-21	001-099
	39	UNUSED						115-199
	40		W4473	0226	22		34-61-21	001-099
	40	UNUSED						115-199
	41	UNUSED						ALL
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 14

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41907P		E002-02/ /		PLUG- (continued)				001-099
D41907P		E2-2/ /		PLUG (continued)				115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D41908J		E6-1/ /		RCPT				115-199
	1	UNUSED						115-199
	2	UNUSED						115-199
	3	UNUSED						115-199
	4	UNUSED						115-199
	5		W1013	0025	22		34-51-21	115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
D41908P		E6-1/ /		PLUG-				115-199
	1	UNUSED						115-199
	2	UNUSED						115-199
	3	UNUSED						115-199
	4		W2354	0515	16		SPARE	115-199
	5		W2354	0137	22		34-51-21	115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10		W2354	0630	18		SPARE	115-199
	11	UNUSED						115-199
	12	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 15

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41909J		P37/ I		RCPT				ALL
	1		W1270	6306	20		23-32-02	ALL
	2		W1270	6385	20		23-32-02	ALL
	3		W1270	6390	20		23-32-02	ALL
	4	UNUSED						001-009, 115-199
	4		W1270	6540	22		31-31-41	010-099
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						001, 003-099, 115-199
	10		W1270	1148	22		34-22-28	002
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W1270	5691	24		24-22-22	ALL
	19		W1270	5684	22		22-14-31	ALL
	20		W1270	0013	20		24-51-24	ALL
	21		W1270	0161	24		23-12-21	ALL
	22	UNUSED						ALL
	23		W1270	5681	22		22-14-31	ALL
	24	UNUSED						ALL
	25	UNUSED						001-099
	25		W1270	0539	22		35-11-13	115-199
	26	UNUSED						ALL
	27	UNUSED						001-099
	27		W1270	5938	22		34-61-25	115-199
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W1270	0109	20		30-33-11	ALL
	31		W1270	5779	20		30-33-11	001-099
	31		W1270	5770	20		30-33-11	115-199
	32	UNUSED						ALL
	33		W1270	5021R	24		34-61-25	ALL
	34		W1270	5021B	24		34-61-25	ALL
	35		W1270	5021Z			34-61-25	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 16

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41909J		P37/ /		RCPT (continued)				ALL
	36		W1270	5019B	24		34-61-25	ALL
	37		W1270	5019R	24		34-61-25	ALL
	38		W1270	5019Z			34-61-25	ALL
	39		W1270	5020R	24		34-61-25	ALL
	40		W1270	5020B	24		34-61-25	ALL
	41		W1270	5020Z			34-61-25	ALL
	42		W1270	5933	22		34-61-25	ALL
	43		W1270	0909	22		30-34-22	ALL
	44		W1270	0911	22		30-34-22	ALL
	45		W1270	8518	22		30-34-22	ALL
	46		W1270	2510R	24		31-31-42	001-099
	46	UNUSED						115-199
	47		W1270	2510B	24		31-31-42	001-099
	47	UNUSED						115-199
	48		W1270	2510Z			31-31-42	001-099
	48	UNUSED						115-199
	49	UNUSED						001-009, 115-199
	49		W1270	5031R	22		31-31-41	010-099
	50	UNUSED						001-009
	50		W1270	5031B	22		31-31-41	010-099
	50		W1270	5023R	24		27-32-21	115-199
	51	UNUSED						001-009
	51		W1270	5031Z			31-31-41	010-099
	51		W1270	5023B	24		27-32-21	115-199
	52	UNUSED						001-099
	52		W1270	5023Z			27-32-21	115-199
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						001, 003-099, 115-199
	55		W1270	6413	22		34-22-26	002
D41909P		P037-00/ /		PLUG-				001-099
D41909P		P37/ /		PLUG-				115-199
	1		W4473	0273	20		23-32-01	ALL
	2		W4473	0274	20		23-32-01	ALL
	3		W4473	0275	20		23-32-01	ALL
	4	UNUSED						001-009, 115-199
	4		W4473	0486	22		31-31-61	010-099
	5	UNUSED						ALL
	6	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 17

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41909P		P037-00/ /		PLUG- (continued)				001-099
D41909P		P37/ /		PLUG- (continued)				115-199
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						001, 003-099, 115-199
	10		W4473	0453	22		34-22-28	002
	11		W4473	0117	24		SPARE	001-099
	11	UNUSED						115-199
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W4473	0121	20		SPARE	001-099
	17	UNUSED						115-199
	18		W4473	0185	24		24-22-22	ALL
	19		W4473	0193	22		22-14-31	ALL
	20		W4473	0194	22		24-51-24	ALL
	21		W4473	0026	24		23-12-21	ALL
	22		W4473	0225	22		34-61-21	001-099
	22	UNUSED						115-199
	23		W4473	0207	22		22-14-31	001-099
	23		W4473	0083	22		22-14-31	115-199
	24		W4473	0226	22		34-61-21	001-099
	24	UNUSED						115-199
	25	UNUSED						001-099
	25		W4473	0209	22		35-11-13	115-199
	26	UNUSED						ALL
	27	UNUSED						001-099
	27		W4473	0295	22		34-61-25	115-199
	28	UNUSED						001-099
	28		W4473	0097	22		SPARE	115-199
	29	UNUSED						001-099
	29		W4473	0107	22		SPARE	115-199
	30		W4473	0153	20		30-33-11	ALL
	31		W4473	0152	20		30-33-11	ALL
	32		W4473	0215	24		SPARE	ALL
	33		W4473	5068R	24		34-61-25	ALL
	34		W4473	5068B	24		34-61-25	ALL
	35		W4473	5068Z			34-61-25	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 18

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41909P		P037-00/ /		PLUG- (continued)				001-099
D41909P		P37/ /		PLUG- (continued)				115-199
	36		W4473	5069B	24		34-61-25	ALL
	37		W4473	5069R	24		34-61-25	ALL
	38		W4473	5069Z			34-61-25	ALL
	39		W4473	5070R	24		34-61-25	ALL
	40		W4473	5070B	24		34-61-25	ALL
	41		W4473	5070Z			34-61-25	ALL
	42		W4473	0220	22		34-61-25	ALL
	43		W4473	0244	22		30-34-22	ALL
	44		W4473	0245	22		30-34-22	ALL
	45		W4473	0246	22		30-34-22	ALL
	46		W4473	5130R	24		31-31-42	001-099
	46	UNUSED						115-199
	47		W4473	5130B	24		31-31-42	001-099
	47	UNUSED						115-199
	48		W4473	5130Z			31-31-42	001-099
	48	UNUSED						115-199
	49	UNUSED						001-009, 115-199
	49		W4473	5257R	22		31-31-41	010-099
	50	UNUSED						001-009
	50		W4473	5257B	22		31-31-41	010-099
	50		W4473	5092R	24		27-32-21	115-199
	51	UNUSED						001-009
	51		W4473	5257Z			31-31-41	010-099
	51		W4473	5092B	24		27-32-21	115-199
	52	UNUSED						001-099
	52		W4473	5092Z			27-32-21	115-199
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						001, 003-099, 115-199
	55		W4473	0346	22		34-22-26	002
D41910J		E002-01/ /		RCPT-				001-099
D41910J		E2-1/ /		RCPT-				115-199
	1	UNUSED						ALL
	2		W1171	0008	22		34-22-16	ALL
	3		W1171	0119	22		34-61-11	ALL
	4	UNUSED						ALL
	5		W1171	0044	20		34-43-11	ALL
	6	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 19

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41910J		E002-01/ /		RCPT- (continued)				001-099
D41910J		E2-1/ /		RCPT- (continued)				115-199
	7		W1171	0199	20		22-11-11	ALL
	8		W1171	0073	22		34-12-11	ALL
	9		W1171	0074	22		34-12-11	ALL
	10		W1171	0202	20		22-11-12	ALL
	11		W1171	0206	20		22-11-12	ALL
	12	UNUSED						ALL
	13		W1171	0077	22		34-12-11	ALL
	14	UNUSED						ALL
	15		W1171	0439	20		34-45-01	ALL
	16		W1171	0164	22		34-61-15	009-099
	17	UNUSED						009-099
	18	UNUSED						009-099
	19	UNUSED						009-099
	20	UNUSED						009-099
	21	UNUSED						009-099
	22	UNUSED						009-099
	23	UNUSED						009-099
	24	UNUSED						009-099
D41910P		E002-01/ /		PLUG-				001-099
D41910P		E2-1/ /		PLUG-				115-199
	1		W2350	0031	24		34-22-16	001, 003-008
	1		W2350	0031	24		SPARE	002, 009-099, 115-199
	2		W2350	0019	24		34-22-16	ALL
	3		W2350	0022	22		34-61-11	ALL
	4		W2350	0082	24		SPARE	001-099
	4	UNUSED						115-199
	5		W2350	0033	20		34-43-11	ALL
	6		W2350	0018	22		SPARE	ALL
	7		W2350	0017	20		22-11-11	ALL
	8		W2350	0080	20		34-12-11	ALL
	9		W2350	0038	24		34-12-11	ALL
	10		W2350	0020	20		22-11-12	ALL
	11		W2350	0021	20		22-11-12	ALL
	12	UNUSED						ALL
	13		W2350	0037	24		34-12-11	ALL
	14	UNUSED						ALL
	15		W2350	0060	20		34-45-01	ALL
	16		W2350	0065	22		34-61-15	009-099

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 20

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41910P		E002-01/ /		PLUG- (continued)				001-099
D41910P		E2-1/ /		PLUG- (continued)				115-199
	17		W2350	0066	22		SPARE	009-099
	18		W2350	0067	22		SPARE	009-099
	19	UNUSED						009-099
	20	UNUSED						009-099
	21	UNUSED						009-099
	22	UNUSED						009-099
	23	UNUSED						009-099
	24	UNUSED						009-099
D41912J		E5-1/ /		RCPT				001-099
	1		W1282	0263	22		24-22-41	001-099
	2	UNUSED						001-099
	3	UNUSED						001-099
	4	UNUSED						001-099
	5	UNUSED						001-099
D41912P		E005-01/ /		PLUG				001-099
	1		W2650	0001	22		24-22-41	001-099
	2		W2650	0066	22		SPARE	001-099
	3	UNUSED						001-099
	4	UNUSED						001-099
	5	UNUSED						001-099
D41914J		E1-2/ /		RCPT				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1320	0011	20		30-41-11	ALL
	4		W1320	0010	20		30-41-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1320	2002B	12		30-41-11	ALL
	15	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 21

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41914J		E1-2/ /		RCPT (continued)				ALL
	16		W1320	2002R	12		30-41-11	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
D41914P		E001-02/ /		PLUG-				001-099
D41914P		E1-2/ /		PLUG-				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W2352	0504	20		30-41-11	ALL
	4		W2352	0505	20		30-41-11	ALL
	5	UNUSED						001-099
	5		W2352	0636	20		SPARE	115-199
	6	UNUSED						001-099
	6		W2352	0637	20		SPARE	115-199
	7	UNUSED						001-099
	7		W2352	0638	20		SPARE	115-199
	8	UNUSED						001-099
	8		W2352	0639	20		SPARE	115-199
	9	UNUSED						001-099
	9		W2352	0640	20		SPARE	115-199
	10	UNUSED						001-099
	10		W2352	0641	20		SPARE	115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W2352	2001B	12		30-41-11	ALL
	15	UNUSED						ALL
	16		W2352	2001R	12		30-41-11	ALL
	17	UNUSED						ALL
	18	UNUSED						001-099
	18		W2352	0643	12		SPARE	115-199
	19	UNUSED						001-099
	19		W2352	0651	20		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 22

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41914P		E001-02/ /		PLUG- (continued)				001-099
D41914P		E1-2/ /		PLUG- (continued)				115-199
	20	UNUSED						001-099
	20		W2352	0652	20		SPARE	115-199
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
D41916J		E002-04/ /		RCPT-				001-099
D41916J		E2-4/ /		RCPT				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W1177	0110	20		34-21-21	001-099
	5	UNUSED						115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
	8		W1179	0010	24		34-21-21	115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
D41916P		E2-4/ /		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W2354	0028	20		34-21-21	001-099
	5	UNUSED						115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
	8		W2354	0028	20		34-21-21	115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 23

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41917J		E6-1/ /		RCPT				115-199
	= A1		W1011	003CX			34-32-11	115-199
	= C1		W1011	003CO			34-32-11	115-199
D41917P		E6-1/ /		PLUG-				115-199
	= A1		W2661	001CX			34-32-11	115-199
	= C1		W2661	001CO			34-32-11	115-199
D41918J		E004-01/ /		RCPT				001-099
D41918J		E4-1/ /		RCPT				115-199
	1		W1165	0266	22		27-09-11	ALL
	2		W1165	0267	22		27-09-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1165	0367	22		27-32-21	ALL
	8	UNUSED						ALL
	9		W1165	0348Y	22		27-41-21	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W1165	0201	22		27-48-11	ALL
D41918P		E4-1/ /		PLUG-				ALL
	1		W2354	0151	22		27-09-11	ALL
	2		W2354	0152	22		27-09-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						001-099
	5		W2354	0603	22		SPARE	115-199
	6	UNUSED						001-099
	6		W2354	0604	22		SPARE	115-199
	7		W2354	0217	22		27-32-21	ALL
	8	UNUSED						001-099
	8		W2354	0605	22		SPARE	115-199
	9		W2354	0049Y	22		27-41-21	ALL
	10	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 24

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41918P		E4-1/ /		PLUG- (continued)				ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W2354	0115	22		27-48-11	ALL
D41920J		E5-1/ /		RCPT				001-099
	1		W1282	0257	22		24-22-41	001-099
	2	UNUSED						001-099
	3	UNUSED						001-099
	4	UNUSED						001-099
	5	UNUSED						001-099
D41920P		E005-01/ /		PLUG				001-099
	1		W2250	0003	20		24-22-41	001-099
	2	UNUSED						001-099
	3	UNUSED						001-099
	4	UNUSED						001-099
	5	UNUSED						001-099
D41922J		P065-00/ /		RCPT				ALL
	1	UNUSED						ALL
	2		W4104	0068	22		SPARE	001-099
	2		W4104	0068	22		25-51-11	115-199
	3		W4104	0073	20		25-51-11	ALL
	4	UNUSED						001-099
	4		W4104	0072	20		25-51-11	115-199
	5		W4104	0074	22		33-37-11	ALL
	6		W4104	0052	22		33-37-11	001-099
	6		W4104	0052	20		33-37-11	115-199
	7		W4104	0041	22		52-34-11	ALL
	8		W4104	0040	22		52-34-11	ALL
	9		W4104	0069	18		SPARE	001-099
	9		W4104	0069	16		25-51-11	115-199
	10		W4104	0070	18		SPARE	001-099
	10		W4104	0070	16		25-51-11	115-199
	11		W4104	0071	18		SPARE	001-099
	11		W4104	0071	16		25-51-11	115-199
	12		W4104	0036	20		52-34-11	ALL
	13		W4104	0037	20		52-34-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 25

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41922J		P065-00/ /		RCPT (continued)				ALL
	14		W4104	0038	20		52-34-11	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
D41922P		P65/ /		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						001-099
	2		W0808	0026	22		25-51-11	115-199
	3	UNUSED						001-099
	3		W0808	0010	22		25-51-11	115-199
	4	UNUSED						001-099
	4		W0808	0004	20		25-51-11	115-199
	5		W0808	0027	20		33-37-11	ALL
	6		W0808	0029	22		33-37-11	001-099
	6		W0808	0029	20		33-37-11	115-199
	7		W0808	0039	22		52-34-11	ALL
	8		W0808	0050	22		52-34-11	ALL
	9	UNUSED						001-099
	9		W0808	0001	16		25-51-11	115-199
	10	UNUSED						001-099
	10		W0808	0002	16		25-51-11	115-199
	11	UNUSED						001-099
	11		W0808	0003	16		25-51-11	115-199
	12		W0808	0036	20		52-34-11	ALL
	13		W0808	0037	20		52-34-11	ALL
	14		W0808	0038	20		52-34-11	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
D41924J		E5-1/ /		RCPT				ALL
	1		W1282	0021	20		21-31-11	ALL
	2		W1282	2504R	24		21-31-11	ALL
	3		W1282	2504B	24		21-31-11	ALL
	4		W1282	2504Z			21-31-11	ALL
	5		W1282	2002R	22		21-31-11	ALL
	6		W1282	2002B	22		21-31-11	ALL
	7	UNUSED						ALL
	8		W1282	2003R	24		21-31-11	ALL
	9		W1282	2003B	24		21-31-11	ALL
	10	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 26

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41924J		E5-1/ /		RCPT (continued)				ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D41924P		E005-01/ /		PLUG				ALL
	1		W2634	0008	20		21-31-11	ALL
	2		W2634	2501R	24		21-31-11	ALL
	3		W2634	2501B	24		21-31-11	ALL
	4		W2634	2501Z			21-31-11	ALL
	5		W2634	2002R	20		21-31-11	ALL
	6		W2634	2002B	20		21-31-11	ALL
	7	UNUSED						ALL
	8		W2634	2001R	24		21-31-11	ALL
	9		W2634	2001B	24		21-31-11	ALL
	10	UNUSED						ALL
	11	UNUSED						001-099
	11		W2634	0021	20		SPARE	115-199
	12	UNUSED						001-099
	12		W2634	0022	20		SPARE	115-199
	13	UNUSED						001-099
	13		W2634	0025	20		SPARE	115-199
	14	UNUSED						001-099
	14		W2634	0026	20		SPARE	115-199
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 27

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41924P		E005-01/ /		PLUG (continued)				ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D41926J		P65/ /		RCPT-				001-099
D41926J		AP0065/ /		RCPT-				115-199
	1		W4162	0037	14		33-37-11	ALL
	2		W4162	0036	14		33-37-11	ALL
	3	UNUSED						001-099
	3		W4162	0006	22		25-51-11	115-199
	4	UNUSED						001-099
	4		W4162	0001	18		25-51-11	115-199
	5	UNUSED						001-099
	5		W4162	0010	22		25-51-11	115-199
	6	UNUSED						001-099
	6		W4162	0002	18		25-51-11	115-199
	7		W4162	0033	22		52-34-11	ALL
	8	UNUSED						001-099
	8		W4162	0003	18		25-51-11	115-199
	9	UNUSED						001-099
	9		W4162	0007	22		25-51-11	115-199
	10	UNUSED						ALL
	11	UNUSED						001-099
	11		W4162	0004	22		25-51-11	115-199
	12	UNUSED						ALL
	13	UNUSED						001-099
	13		W4162	0009	22		25-51-11	115-199
	14		W4162	0030	20		52-34-11	ALL
	15		W4162	0031	20		52-34-11	ALL
	16		W4162	0032	20		52-34-11	ALL
	17		W4162	0034	22		52-34-11	ALL
	18	UNUSED						001-099
	18		W4162	0043	20		25-51-11	115-199
	19	UNUSED						001-099
	19		W4162	0044	20		25-51-11	115-199
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 28

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41926J		P65/ /		RCPT- (continued)				001-099
D41926J		AP0065/ /		RCPT- (continued)				115-199
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
D41926P		P65/ /		PLUG-				ALL
	1		W0808	0040	12		33-37-11	ALL
	2		W0808	0034	14		33-37-11	ALL
	3	UNUSED						001-099
	3		W0808	0017	22		25-51-11	115-199
	4	UNUSED						001-099
	4		W0808	0005	16		25-51-11	115-199
	5	UNUSED						001-099
	5		W0808	0015	22		25-51-11	115-199
	6	UNUSED						001-099
	6		W0808	0006	16		25-51-11	115-199
	7		W0808	0047	22		52-34-11	ALL
	8	UNUSED						001-099
	8		W0808	0007	16		25-51-11	115-199
	9	UNUSED						001-099
	9		W0808	0025	22		25-51-11	115-199
	10	UNUSED						ALL
	11	UNUSED						001-099
	11		W0808	0028	22		25-51-11	115-199
	12	UNUSED						ALL
	13	UNUSED						001-099
	13		W0808	0021	22		25-51-11	115-199
	14		W0808	0041	20		52-34-11	ALL
	15		W0808	0043	20		52-34-11	ALL
	16		W0808	0046	20		52-34-11	ALL
	17		W0808	0035	22		52-34-11	ALL
	18	UNUSED						001-099
	18		W0808	0074	20		25-51-11	115-199
	19	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 29

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41926P		P65/ /		PLUG- (continued)				ALL
	19		W0808	0012	22		25-51-11	115-199
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
D41928J		E003-04/ /		RCPT				ALL
	1		W1280	0004	22		52-34-11	ALL
	2		W1280	0005	22		52-34-11	ALL
	3		W1280	0006	22		52-34-11	ALL
	4		W1280	2001B	22		52-34-11	ALL
	5		W1280	2001R	22		52-34-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W1280	2003R	22		52-34-11	ALL
	9		W1280	2003B	22		52-34-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W1280	2019R	24		52-71-21	ALL
	13		W1280	2019B	24		52-71-21	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 30

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41928P		E003-04/ /		PLUG				ALL
	1		W4104	0040	22		52-34-11	ALL
	2		W4104	0041	22		52-34-11	ALL
	3		W4104	0042	22		52-34-11	ALL
	4		W4104	2001R	22		52-34-11	ALL
	5		W4104	2001B	22		52-34-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W4104	2003R	22		52-34-11	ALL
	9		W4104	2003B	22		52-34-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W4104	2005R	24		52-71-21	ALL
	13		W4104	2005B	24		52-71-21	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
D41930J		E003-04/ /		RCPT				001-099
D41930J		E3-4/ /		RCPT				115-199
	1		W1280	0009	22		52-35-11	ALL
	2		W1280	0010	22		52-35-11	ALL
	3		W1280	2005R	24		52-35-11	ALL
	4		W1280	2005B	24		52-35-11	ALL
	5	UNUSED						001-099
	5		W1280	2002R	24		52-71-21	115-199
	6	UNUSED						001-099
	6		W1280	2002B	24		52-71-21	115-199
	7		W1280	2007R	24		52-35-11	ALL
	8		W1280	2007B	24		52-35-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 31

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41930J		E003-04/ /		RCPT (continued)				001-099
D41930J		E3-4/ /		RCPT (continued)				115-199
	12		W1280	2020R	24		52-71-21	ALL
	13		W1280	2020B	24		52-71-21	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
D41930P		E003-04/ /		PLUG				ALL
	1		W2602	0010	22		52-35-11	ALL
	2		W2602	0011	22		52-35-11	ALL
	3		W2602	2001R	24		52-35-11	ALL
	4		W2602	2001B	24		52-35-11	ALL
	5	UNUSED						001-099
	5		W2602	2002R	24		52-71-21	115-199
	6	UNUSED						001-099
	6		W2602	2002B	24		52-71-21	115-199
	7		W2602	2003R	24		52-35-11	ALL
	8		W2602	2003B	24		52-35-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W2602	2005R	24		52-71-21	ALL
	13		W2602	2005B	24		52-71-21	ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 32

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41930P		E003-04/ /		PLUG (continued)				ALL
	23	UNUSED						115-199
	24	UNUSED						115-199
D41932J		E6 RLY/PNL/ E6/ /		RCPT RCPT				001-099
D41932J								115-199
	1		W1024	0303	22		52-35-11	001-099
	1		W1024	0265	22		25-51-21	115-199
	2		W1024	0310	22		52-35-11	001-099
	2		W1024	0304	16		52-35-11	115-199
	3	UNUSED						001-099
	3		W1024	0288	22		25-51-21	115-199
	4	UNUSED						001-099
	4		W1024	0257	18		33-37-21	115-199
	5	UNUSED						001-099
	5		W1024	0290	22		25-51-21	115-199
	6	UNUSED						001-099
	6		W1024	0283	22		25-51-21	115-199
	7	UNUSED						001-099
	7		W1024	0303	22		52-35-11	115-199
	8	UNUSED						001-099
	8		W1024	0308	16		52-35-11	115-199
	9	UNUSED						001-099
	9		W1024	0310	22		52-35-11	115-199
	10	UNUSED						001-099
	10		W1024	0311	16		52-35-11	115-199
	11	UNUSED						001-099
	11		W1024	0280	22		25-51-21	115-199
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1024	0296	12		33-37-21	001-099
	14		W1024	0023	20		33-37-21	115-199
	15	UNUSED						001-099
	15		W1024	0005	20		33-37-21	115-199
	16		W1024	0291	14		33-37-21	001-099
	16		W1024	0452	20		25-51-21	115-199
	17	UNUSED						001-099
	17		W1024	0284	22		25-51-21	115-199
	18		W1024	0304	16		52-35-11	001-099
	18	UNUSED						115-199
	19	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 33

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41932J		E6 RLY/PNL/		RCPT (continued)				001-099
D41932J		E6/ /		RCPT (continued)				115-199
	20		W1024	0311	16		52-35-11	001-099
	20	UNUSED						115-199
	21	UNUSED						ALL
	22		W1024	0308	16		52-35-11	001-099
	22	UNUSED						115-199
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
	32	UNUSED						115-199
D41932P		E6/ /		PLUG-				ALL
	1		W2662	0036	22		52-35-11	001-099
	1		W2662	0004	20		25-51-21	115-199
	2		W2662	0037	22		52-35-11	001-099
	2		W2662	0032	16		52-35-11	115-199
	3	UNUSED						001-099
	3		W2662	0007	20		25-51-21	115-199
	4	UNUSED						001-099
	4		W2662	0029	16		33-37-21	115-199
	5	UNUSED						001-099
	5		W2662	0009	20		25-51-21	115-199
	6	UNUSED						001-099
	6		W2662	0010	20		25-51-21	115-199
	7	UNUSED						001-099
	7		W2662	0036	22		52-35-11	115-199
	8	UNUSED						001-099
	8		W2662	0034	16		52-35-11	115-199
	9	UNUSED						001-099
	9		W2662	0037	22		52-35-11	115-199
	10	UNUSED						001-099
	10		W2662	0033	16		52-35-11	115-199
	11	UNUSED						001-099
	11		W2662	0006	20		25-51-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 34

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41932P		E6/ /		PLUG- (continued)				ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W2662	0038	12		33-37-21	001-099
	14		W2662	0042	20		33-37-21	115-199
	15	UNUSED						001-099
	15		W2662	0043	20		33-37-21	115-199
	16		W2662	0041	14		33-37-21	001-099
	16		W2662	0052	20		25-51-21	115-199
	17	UNUSED						001-099
	17		W2662	0053	20		25-51-21	115-199
	18		W2662	0032	16		52-35-11	001-099
	18	UNUSED						115-199
	19	UNUSED						ALL
	20		W2662	0033	16		52-35-11	001-099
	20	UNUSED						115-199
	21	UNUSED						ALL
	22		W2662	0034	16		52-35-11	001-099
	22	UNUSED						115-199
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
	32	UNUSED						115-199
D41934J		P070-00/ /		RCPT				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W1250	0014	24		21-43-11	ALL
	9		W1250	0012	24		21-43-11	ALL
	10		W1250	0015	24		21-43-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 35

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41934J		P070-00/ /		RCPT (continued)				ALL
	10		W1250	0016	24		21-43-11	115-199
	11		W1250	0009	20		21-43-11	ALL
	12		W1250	0010	20		21-43-11	ALL
	13		W1250	0038	20		21-43-11	ALL
	14		W1250	0001	14		21-25-11	ALL
	15	UNUSED						ALL
	16		W1250	0002	14		21-25-11	ALL
	17	UNUSED						ALL
	18		W1250	0003	14		21-25-11	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
D41934P		P070-00/ /		PLUG				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W4004	0008	24		21-43-11	ALL
	9		W4004	0005	24		21-43-11	ALL
	10		W4004	0004	24		21-43-11	ALL
	11		W4004	0001	20		21-43-11	ALL
	12		W4004	0002	20		21-43-11	ALL
	13		W4004	0003	20		21-43-11	ALL
	14		W4004	0015	14		21-25-11	ALL
	15	UNUSED						ALL
	16		W4004	0016	14		21-25-11	ALL
	17	UNUSED						ALL
	18		W4004	0017	14		21-25-11	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 36

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41934P		P070-00/ /		PLUG (continued)				ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
D41936J		P54/ /		RCPT				ALL
	1		W1120	0012	24		26-11-11	001-099
	1		W1120	0482	24		26-11-11	115-199
	2	UNUSED						ALL
	3		W1120	0551	24		26-13-11	001-099
	3		W1120	0212	24		26-13-11	115-199
	4	UNUSED						ALL
	5		W1120	0542	24		26-13-11	001-099
	5		W1120	0267	24		26-13-11	115-199
	6	UNUSED						ALL
	7		W1120	0552	24		26-13-11	001-099
	7		W1120	0213	24		26-13-11	115-199
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1120	0011	24		26-11-11	001-099
	10		W1120	0481	24		26-11-11	115-199
	11	UNUSED						ALL
	12		W1120	0035	24		26-11-11	ALL
	13		W1120	0010	24		26-11-11	001-099
	13		W1120	0480	24		26-11-11	115-199
	14	UNUSED						ALL
	15		W1120	0001	24		26-11-11	001-099
	15		W1120	0505	24		26-11-11	115-199
D41936P		P054-00/ /		PLUG				ALL
	1		W4230	0006R	20		26-11-11	ALL
	2		W4230	0024	22		SPARE	ALL
	3		W4230	0011	20		26-13-11	001-099
	3		W4230	0011	22		26-13-11	115-199
	4	UNUSED						ALL
	5		W4230	0010	22		26-13-11	ALL
	6	UNUSED						ALL
	7		W4230	0012	20		26-13-11	001-099
	7		W4230	0012	22		26-13-11	115-199
	8		W4230	0022	22		SPARE	ALL
	9		W4230	0023	20		SPARE	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 37

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41936P		P054-00/ /		PLUG (continued)				ALL
	10		W4230	0007R	20		26-11-11	ALL
	11	UNUSED						ALL
	12		W4230	0036	22		26-11-11	ALL
	13		W4230	0008R	20		26-11-11	ALL
	14	UNUSED						ALL
	15		W4230	0009	22		26-11-11	ALL
D41938J		P36/ /		RCPT				ALL
	1	UNUSED						001-099
	1		W1260	0357	20		74-31-11	115-199
	2		W1260	0358	20		74-31-11	001-099
	2		W1260	0361	20		74-31-11	115-199
	3		W1260	0415	22		78-34-11	ALL
	4		W1260	0173	20		80-11-11	001-099
	4		W1260	0462	20		80-11-11	115-199
	5		W1260	0451	20		80-11-11	ALL
	6		W1260	0466	20		80-11-11	ALL
	7		W1260	0360	20		74-31-11	ALL
	8		W1260	0097	24		80-11-11	ALL
	9		W1260	0523	24		80-11-11	ALL
	10		W1260	0651	20		74-31-11	ALL
	11	UNUSED						ALL
	12	UNUSED						001-099
	12		W1260	0470	24		74-31-11	115-199
	13		W1260	0374	20		74-31-11	ALL
	14	UNUSED						ALL
	15	UNUSED						001-099
	15		W1260	0019	24		26-11-11	115-199
	16	UNUSED						ALL
	17	18	W1260	8535	18		30-34-21	ALL
	18	18	W1260	8037	18		30-34-21	ALL
	19		W1260	8907	20		30-34-21	ALL
	20		W1260	0818	20		74-31-11	ALL
	21		W1260	0822	20		74-31-11	ALL
	22		W1260	0821	20		74-31-11	001-099
	22	UNUSED						115-199
	23	UNUSED						ALL
	24	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 38

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41938P		P036-00/ /		PLUG				ALL
	1	UNUSED						001-099
	1		W4230	0013	20		74-31-11	115-199
	2		W4230	0014	20		74-31-11	ALL
	3		W4230	0015	22		78-34-11	ALL
	4		W4230	0016	20		80-11-11	ALL
	5		W4230	0017	20		80-11-11	ALL
	6		W4230	0018	20		80-11-11	ALL
	7		W4230	0032	20		74-31-11	ALL
	8		W4230	0020	24		80-11-11	ALL
	9		W4230	0021	24		80-11-11	ALL
	10		W4230	0031	20		74-31-11	ALL
	11	UNUSED						ALL
	12		W4230	0035	24		SPARE	001-099
	12		W4230	0035	24		74-31-11	115-199
	13		W4230	0030	20		74-31-11	ALL
	14	UNUSED						ALL
	15	UNUSED						001-099
	15		W4230	0009	22		26-11-11	115-199
	16	UNUSED						ALL
	17	18	W4230	2504B	18		30-34-21	ALL
	18	18	W4230	2504R	18		30-34-21	ALL
	19	18	W4230	2504Z			30-34-21	001-099
	19		W4230	2504Z			30-34-21	115-199
	20		W4230	1002	20		74-31-11	ALL
	21		W4230	0041	20		74-31-11	ALL
	22		W4230	0043	20		74-31-11	001-099
	22	UNUSED						115-199
	23	UNUSED						ALL
	24	UNUSED						ALL
D41940J		P54/ /		RECT				ALL
	1		W1120	0100	24		26-11-21	001-099
	1		W1120	0491	24		26-11-21	115-199
	2	UNUSED						ALL
	3		W1120	0407	24		26-13-21	ALL
	4	UNUSED						ALL
	5		W1120	0408	24		26-13-21	ALL
	6		W1120	0089	24		26-11-21	001-099
	6		W1120	0507	24		26-11-21	115-199
	7	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 39

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41940J		P54/ /		RECT (continued)				ALL
	8		W1120	0390	24		26-13-21	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13		W1120	0099	24		26-11-21	001-099
	13		W1120	0490	24		26-11-21	115-199
	14	UNUSED						ALL
	15		W1120	0098	24		26-11-21	001-099
	15		W1120	0489	24		26-11-21	115-199
D41940P		P054-00/ /		PLUG				ALL
	1		W4234	0005R	20		26-11-21	ALL
	2	UNUSED						ALL
	3		W4234	0008	20		26-13-21	ALL
	4	UNUSED						ALL
	5		W4234	0009	20		26-13-21	ALL
	6		W4234	0010	22		26-11-21	001-099
	6		W4234	0010	20		26-11-21	115-199
	7		W4234	0012	22		SPARE	ALL
	8		W4234	0013	22		26-13-21	ALL
	9		W4234	0014	22		SPARE	ALL
	10		W4234	0025	22		SPARE	ALL
	11		W4234	0026	22		SPARE	ALL
	12	UNUSED						ALL
	13		W4234	0006R	20		26-11-21	ALL
	14	UNUSED						ALL
	15		W4234	0007R	20		26-11-21	ALL
D41942J		P070-00/ /		RCPT				ALL
	1		W1250	0021	22		21-44-11	ALL
	2		W1250	0022	22		21-44-11	ALL
	3		W1250	0023	22		21-44-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 40

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41942J		P070-00/ /		RCPT (continued)				ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1250	0017	14		21-44-11	ALL
	15	UNUSED						ALL
	16		W1250	0018	14		21-44-11	ALL
	17	UNUSED						ALL
	18		W1250	0019	14		21-44-11	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
D41942P		P070-00/ /		PLUG				ALL
	1		W2634	0014	22		21-44-11	ALL
	2		W2634	0015	22		21-44-11	ALL
	3		W2634	0016	22		21-44-11	ALL
	4	UNUSED						ALL
	5	UNUSED						001-099
	5		W2634	0023	20		SPARE	115-199
	6	UNUSED						ALL
	7	UNUSED						001-099
	7		W2634	0025	20		SPARE	115-199
	8	UNUSED						001-099
	8		W2634	0026	20		SPARE	115-199
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W2634	0011	14		21-44-11	ALL
	15	UNUSED						ALL
	16		W2634	0012	14		21-44-11	ALL
	17	UNUSED						ALL
	18		W2634	0013	14		21-44-11	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 41

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41942P		P070-00/ /		PLUG (continued)				ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
D41944J		P54/ /		RCPT				ALL
	1		W1120	0047	24		26-11-11	001-099
	1		W1120	0032	24		26-11-11	115-199
	2		W1120	0031	24		26-11-11	001-099
	2		W1120	0033	24		26-11-11	115-199
	3		W1120	0045	24		26-11-11	001-099
	3		W1120	0034	24		26-11-11	115-199
	4	UNUSED						ALL
	5		W1120	0043	24		26-11-11	001-099
	5		W1120	0036	24		26-11-11	115-199
	6		W1120	0034	24		26-11-11	001-099
	6		W1120	0038	24		26-11-11	115-199
	7		W1120	0044	24		26-11-11	001-099
	7		W1120	0025	24		26-11-11	115-199
	8		W1120	0042	24		26-11-11	001-099
	8		W1120	0011	24		26-11-11	115-199
	9		W1120	0006	24		26-11-11	001-099
	9		W1120	0478	24		26-11-11	115-199
	10		W1120	0054	24		26-11-12	001-099
	10		W1120	0061	24		26-11-12	115-199
	11		W1120	0008	24		26-11-11	001-099
	11		W1120	0479	24		26-11-11	115-199
	12		W1120	0456	20		28-22-21	ALL
	13		W1120	0455	20		28-22-21	ALL
	14		W1120	0550	24		26-13-11	001-099
	14		W1120	0211	24		26-13-11	115-199
	15		W1120	0454	20		28-22-21	ALL
	16		W1120	0063	24		26-11-12	001-099
	16		W1120	0045	24		26-11-12	115-199
	17		W1120	0084	24		26-11-12	001-099
	17		W1120	0278	22		26-22-21	115-199
	18	UNUSED						001-099
	18		W1120	0062	24		26-11-12	115-199
	19		W1120	0376	24		26-13-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 42

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41944J		P54/ /		RCPT (continued)				ALL
	20		W1120	0055	24		26-11-12	001-099
	20	UNUSED						115-199
	21		W1120	0213	24		26-15-11	001-099
	21		W1120	0158	24		26-15-11	115-199
	22		W1120	0002	24		26-11-11	001-099
	22	UNUSED						115-199
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W1120	0549	24		26-13-11	001-099
	25		W1120	0210	24		26-13-11	115-199
	26		W1120	0481	24		26-12-11	001-099
	26		W1120	0118	24		26-12-11	115-199
	27		W1120	0502	24		26-12-11	001-099
	27		W1120	0287	24		26-12-11	115-199
	28		W1120	0484	24		26-12-11	001-099
	28		W1120	0123	24		26-12-11	115-199
	29		W1120	0085	24		26-11-12	001-099
	29		W1120	0286	24		26-12-11	115-199
	30		W1120	0501	24		26-12-11	001-099
	30		W1120	0284	24		26-12-11	115-199
	31	UNUSED						ALL
	32		W1120	0272	22		31-51-21	ALL
	33		W1120	0273	22		31-51-21	ALL
	34		W1120	0318	20		26-21-11	001-099
	34		W1120	0240	20		26-21-11	115-199
	35		W1120	0316	22		26-21-11	001-099
	35		W1120	0280	22		26-21-11	115-199
	36	UNUSED						ALL
	37		W1120	0046	24		26-11-11	001-099
	37		W1120	0027	24		26-11-11	115-199
	38		W1120	0007	24		26-11-11	001-099
	38		W1120	0477	24		26-11-11	115-199
	39		W1120	0285	24		26-16-11	001-099
	39		W1120	0337	24		26-16-11	115-199
	40		W1120	0290	24		26-16-11	001-099
	40		W1120	0342	24		26-16-11	115-199
	41		W1120	0202	24		26-15-11	001-099
	41		W1120	0308	24		26-15-11	115-199
	42		W1120	0201	24		26-15-11	001-099
	42		W1120	0159	24		26-15-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 43

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41944J		P54/ /		RCPT (continued)				ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47		W1120	0243	24		26-16-11	001-099
	47		W1120	0184	24		26-16-11	115-199
	48	UNUSED						001-099
	48		W1120	0243	20		26-22-21	115-199
	49	UNUSED						001-099
	49		W1120	0250	20		26-22-21	115-199
	50		W1120	0344	22		26-23-11	001-099
	50		W1120	0195	22		26-23-11	115-199
	51		W1120	0354	22		26-23-11	001-099
	51		W1120	0209	22		26-23-11	115-199
	52		W1120	0340	20		26-23-11	001-099
	52		W1120	0191	20		26-23-11	115-199
	53		W1120	0342	20		26-23-11	001-099
	53		W1120	0193	20		26-23-11	115-199
	54		W1120	0353	20		26-23-11	001-099
	54		W1120	0194	20		26-23-11	115-199
	55		W1120	0315	20		26-21-11	001-099
	55		W1120	0241	20		26-21-11	115-199
D41944P		P054-00/ /		PLUG				ALL
	1		W4228	0013	22		26-11-11	ALL
	2		W4228	0014	22		26-11-11	ALL
	3		W4228	0015	22		26-11-11	ALL
	4	UNUSED						ALL
	5		W4228	0017	22		26-11-11	ALL
	6		W4228	0018	22		26-11-11	ALL
	7		W4228	0019	22		26-11-11	ALL
	8		W4228	0020	22		26-11-11	ALL
	9		W4228	0024R	20		26-11-11	ALL
	10		W4228	0043	22		26-11-12	001-099
	10		W4228	0043	20		26-11-12	115-199
	11		W4228	0026R	20		26-11-11	ALL
	12		W4228	0037	20		28-22-21	ALL
	13		W4228	0038	20		28-22-21	ALL
	14		W4228	0030	20		26-13-11	001-099
	14		W4228	0030	22		26-13-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 44

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41944P		P054-00/ /		PLUG (continued)				ALL
	15		W4228	0041	20		28-22-21	ALL
	16		W4228	0042	22		26-11-12	ALL
	17		W4228	0252	22		26-11-12	001-099
	17		W4228	0157	22		26-22-21	115-199
	18	UNUSED						001-099
	18		W4228	0044	20		26-11-12	115-199
	19		W4228	0031	22		26-13-11	ALL
	20		W4228	0044	22		26-11-12	001-099
	20	UNUSED						115-199
	21		W4228	0148	22		26-15-11	ALL
	22		W4228	0075	22		26-11-11	001-099
	22	UNUSED						115-199
	23		W4228	0154	22		SPARE	ALL
	24	UNUSED						ALL
	25		W4228	0029	20		26-13-11	001-099
	25		W4228	0029	22		26-13-11	115-199
	26		W4228	0055	20		26-12-11	ALL
	27		W4228	0056	20		26-12-11	ALL
	28		W4228	0057	22		26-12-11	ALL
	29		W4228	0058	22		26-11-12	001-099
	29		W4228	0058	22		26-12-11	115-199
	30		W4228	0059	22		26-12-11	ALL
	31	UNUSED						ALL
	32		W4228	0088	22		31-51-21	ALL
	33		W4228	0089	22		31-51-21	ALL
	34		W4228	0170	20		26-21-11	ALL
	35		W4228	0172	22		26-21-11	ALL
	36		W4228	0027	22		SPARE	ALL
	37		W4228	0028	22		26-11-11	ALL
	38		W4228	0025R	20		26-11-11	ALL
	39		W4228	0155	22		26-16-11	ALL
	40		W4228	0156	22		26-16-11	ALL
	41		W4228	0146	22		26-15-11	ALL
	42		W4228	0147	22		26-15-11	ALL
	43		W4228	2509B	20		SPARE	001-099
	43		W4228	0149	22		SPARE	115-199
	44		W4228	2509R	20		SPARE	001-099
	44		W4228	0150	22		SPARE	115-199
	45		W4228	2509Z			SPARE	001-099
	45		W4228	0151	22		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 45

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41944P		P054-00/ /		PLUG (continued)				ALL
	46		W4228	0152	22		SPARE	ALL
	47		W4228	0153	22		26-16-11	ALL
	48	UNUSED						001-099
	48		W4228	0158	20		26-22-21	115-199
	49	UNUSED						001-099
	49		W4228	0159	20		26-22-21	115-199
	50		W4228	0161	22		26-23-11	ALL
	51		W4228	0162	22		26-23-11	ALL
	52		W4228	0163	20		26-23-11	ALL
	53		W4228	0165	20		26-23-11	ALL
	54		W4228	0166	20		26-23-11	ALL
	55		W4228	0171	20		26-21-11	ALL
D41946J		P54/ /		RCPT				ALL
	1		W1120	0094	24		26-11-21	001-099
	1		W1120	0486	24		26-11-21	115-199
	2		W1120	0244	24		26-16-11	001-099
	2		W1120	0187	24		26-16-11	115-199
	3	UNUSED						001-099
	3		W1120	0493	24		26-11-22	115-199
	4		W1120	0131	24		26-11-21	001-099
	4		W1120	0083	24		26-11-21	115-199
	5		W1120	0129	24		26-11-21	001-099
	5		W1120	0081	24		26-11-21	115-199
	6		W1120	0130	24		26-11-21	001-099
	6		W1120	0082	24		26-11-21	115-199
	7		W1120	0132	24		26-11-21	001-099
	7		W1120	0092	24		26-11-21	115-199
	8		W1120	0477	24		26-11-21	001-099
	8		W1120	0080	24		26-11-21	115-199
	9		W1120	0139	24		26-11-22	001-099
	9	UNUSED						115-199
	10		W1120	0406	24		26-13-21	ALL
	11	UNUSED						ALL
	12		W1120	0148	24		26-11-22	001-099
	12		W1120	0105	24		26-11-22	115-199
	13		W1120	0095	24		26-11-21	001-099
	13		W1120	0487	24		26-11-21	115-199
	14		W1120	0170	24		26-11-22	001-099
	14		W1120	0104	24		26-11-22	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 46

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41946J		P54/ /		RCPT (continued)				ALL
	15		W1120	0138	24		26-11-22	001-099
	15		W1120	0492	24		26-11-22	115-199
	16		W1120	0286	24		26-16-11	001-099
	16		W1120	0338	24		26-16-11	115-199
	17		W1120	0328	22		26-22-21	001-099
	17		W1120	0291	24		26-12-21	115-199
	18		W1120	0527	24		26-12-21	001-099
	18		W1120	0294	24		26-12-21	115-199
	19		W1120	0506	24		26-12-21	001-099
	19		W1120	0132	24		26-12-21	115-199
	20		W1120	0330	20		26-22-21	001-099
	20		W1120	0135	24		26-12-21	115-199
	21		W1120	0049	24		26-11-11	001-099
	21		W1120	0030	24		26-11-11	115-199
	22		W1120	0048	24		26-11-11	001-099
	22		W1120	0028	24		26-11-11	115-199
	23		W1120	0509	24		26-12-21	001-099
	23	UNUSED						115-199
	24		W1120	0526	24		26-12-21	001-099
	24	UNUSED						115-199
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W1120	0220	24		26-15-12	001-099
	27		W1120	0174	24		26-15-12	115-199
	28		W1120	0288	24		26-16-11	001-099
	28		W1120	0340	24		26-16-11	115-199
	29		W1120	0221	24		26-15-12	001-099
	29		W1120	0173	24		26-15-12	115-199
	30		W1120	0096	24		26-11-21	001-099
	30		W1120	0488	24		26-11-21	115-199
	31	UNUSED						ALL
	32		W1120	0350	20		26-23-11	001-099
	32		W1120	0205	20		26-23-11	115-199
	33		W1120	0352	20		26-23-11	001-099
	33		W1120	0207	20		26-23-11	115-199
	34		W1120	0343	20		26-23-11	001-099
	34		W1120	0208	20		26-23-11	115-199
	35		W1120	0317	20		26-21-11	001-099
	35		W1120	0215	20		26-21-11	115-199
	36		W1120	0314	20		26-21-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 47

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41946J		P54/ /		RCPT (continued)				ALL
	36		W1120	0216	20		26-21-11	115-199
	37		W1120	0319	22		26-21-11	001-099
	37		W1120	0242	22		26-21-11	115-199
	38	UNUSED						001-099
	38		W1120	0281	20		26-15-12	115-199
	39		W1120	0331	22		26-22-21	001-099
	39	UNUSED						115-199
	40	UNUSED						ALL
	41		W1120	0405	24		26-13-21	ALL
	42		W1120	0090	24		26-11-21	001-099
	42		W1120	0508	24		26-11-21	115-199
	43		W1120	0169	24		26-11-22	001-099
	43		W1120	0108	24		26-11-22	115-199
	44		W1120	0300	24		26-18-11	001-099
	44		W1120	0196	24		26-18-11	115-199
	45		W1120	0301	24		26-18-11	001-099
	45		W1120	0197	24		26-18-11	115-199
	46		W1120	0302	24		26-18-11	001-099
	46		W1120	0198	24		26-18-11	115-199
	47		W1120	0303	24		26-18-11	001-099
	47		W1120	0199	24		26-18-11	115-199
	48		W1120	0304	24		26-18-11	001-099
	48		W1120	0200	24		26-18-11	115-199
	49		W1120	0305	24		26-18-11	001-099
	49		W1120	0201	24		26-18-11	115-199
	50		W1120	0306	24		26-18-11	001-099
	50		W1120	0202	24		26-18-11	115-199
	51		W1120	0307	24		26-18-11	001-099
	51		W1120	0203	24		26-18-11	115-199
	52		W1120	0404	24		26-13-21	ALL
	53		W1120	0459	20		28-22-21	ALL
	54		W1120	0458	20		28-22-21	ALL
	55		W1120	0457	20		28-22-21	ALL
D41946P		P054-00/ /		PLUG				ALL
	1		W4236	0014R	20		26-11-21	ALL
	2		W4236	0133	22		26-16-11	ALL
	3	UNUSED						001-099
	3		W4236	0047	20		26-11-22	115-199
	4		W4236	0016	22		26-11-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 48

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41946P		P054-00/ /		PLUG (continued)				ALL
	5		W4236	0019	22		26-11-21	ALL
	6		W4236	0020	22		26-11-21	ALL
	7		W4236	0021	22		26-11-21	ALL
	8		W4236	0022	22		26-11-21	ALL
	9		W4236	0047	22		26-11-22	001-099
	9	UNUSED						115-199
	10		W4236	0027	20		26-13-21	ALL
	11	UNUSED						ALL
	12		W4236	0043	22		26-11-22	ALL
	13		W4236	0013R	20		26-11-21	ALL
	14		W4236	0045	22		26-11-22	ALL
	15		W4236	0046	22		26-11-22	001-099
	15		W4236	0046	20		26-11-22	115-199
	16		W4236	0135	22		26-16-11	ALL
	17		W4236	0148	22		26-22-21	001-099
	17		W4236	0048	22		26-12-21	115-199
	18		W4236	0049	22		26-12-21	ALL
	19		W4236	0048	22		26-12-21	001-099
	19		W4236	0050	22		26-12-21	115-199
	20		W4236	0173	20		26-22-21	001-099
	20		W4236	0052	22		26-12-21	115-199
	21		W4236	0063	22		26-11-11	ALL
	22		W4236	0064	22		26-11-11	ALL
	23		W4236	0052	22		26-12-21	001-099
	23		W4236	0085	20		SPARE	115-199
	24		W4236	0050	22		26-12-21	001-099
	24		W4236	0086	20		SPARE	115-199
	25	UNUSED						001-099
	25		W4236	2003B	20		SPARE	115-199
	26	UNUSED						001-099
	26		W4236	2003R	20		SPARE	115-199
	27		W4236	0166	22		26-15-12	ALL
	28		W4236	0136	22		26-16-11	ALL
	29		W4236	0167	22		26-15-12	ALL
	30		W4236	0015R	20		26-11-21	ALL
	31		W4236	0131	22		SPARE	ALL
	32		W4236	0141	20		26-23-11	ALL
	33		W4236	0142	20		26-23-11	ALL
	34		W4236	0143	20		26-23-11	ALL
	35		W4236	0146	20		26-21-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 49

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41946P		P054-00/ /		PLUG (continued)				ALL
	36		W4236	0145	20		26-21-11	ALL
	37		W4236	0147	22		26-21-11	ALL
	38	UNUSED						001-099
	38		W4236	0168	20		26-15-12	115-199
	39		W4236	0137	22		26-22-21	001-099
	39	UNUSED						115-199
	40		W4236	0134	22		SPARE	ALL
	41		W4236	0026	20		26-13-21	ALL
	42		W4236	0195	22		26-11-21	ALL
	43		W4236	0044	22		26-11-22	ALL
	44		W4236	0155	22		26-18-11	ALL
	45		W4236	0156	22		26-18-11	ALL
	46		W4236	0157	22		26-18-11	ALL
	47		W4236	0158	22		26-18-11	ALL
	48		W4236	0159	22		26-18-11	ALL
	49		W4236	0160	22		26-18-11	ALL
	50		W4236	0161	22		26-18-11	ALL
	51		W4236	0162	22		26-18-11	ALL
	52		W4236	0028	22		26-13-21	ALL
	53		W4236	0039	20		28-22-21	ALL
	54		W4236	0040	20		28-22-21	ALL
	55		W4236	0042	22		28-22-21	ALL
D41948J		P36/ /		RCPT				ALL
	1		W1260	0646	22		76-11-11	001-099
	1		W1260	0390	22		76-11-11	115-199
	2		W1260	0395	22		76-11-11	ALL
	3	UNUSED						001-099
	3		W1260	0383	22		76-11-11	115-199
	4		W1260	0388	24		76-11-11	ALL
	5		W1260	0418	22		78-34-11	ALL
	6	UNUSED						001-002, 115-199
	6		W1260	6454	20		78-34-51	003-099
	7	UNUSED						001-002, 115-199
	7		W1260	1124	20		78-34-51	003-099
	8		W1260	0335	20		36-11-11	ALL
	9		W1260	0458	24		80-11-11	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W1260	0038	20		28-22-31	001-008, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 50

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41948J		P36/ /		RCPT (continued)				ALL
	12	UNUSED						009-099
	13		W1260	0473	22		77-12-41	001-099
	13		W1260	0408	22		77-12-41	115-199
	14	UNUSED						ALL
	15		W1260	0114	20		28-22-31	001-008, 115-199
	15	UNUSED						009-099
	16		W1260	0483	20		32-35-11	ALL
	17		W1260	0653	24		76-11-11	001-099
	17		W1260	0386	24		76-11-11	115-199
	18		W1260	0389	24		76-11-11	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W1260	0505	24		26-15-11	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W1260	0470	24		74-31-11	001-099
	24		W1260	0581	20		26-22-21	115-199
	25	UNUSED						001-099
	25		W1260	0584	20		26-22-21	115-199
	26	UNUSED						001-099
	26		W1260	0587	20		26-22-21	115-199
	27	UNUSED						ALL
	28		W1260	5860	22		32-42-11	ALL
	29		W1260	5976	24		73-21-11	ALL
	30		W1260	5986	22		77-12-41	ALL
	31		W1260	5977	24		73-21-11	ALL
	32		W1260	5805	22		78-34-11	001-099
	32		W1260	0091	22		78-34-11	115-199
	33	UNUSED						001-099
	33		W1260	5923	22		32-44-11	115-199
	34		W1260	5978	24		73-21-12	ALL
	35		W1260	5979	24		73-21-12	ALL
	36		W1260	5980	24		73-21-12	ALL
	37		W1260	0806	24		73-21-12	ALL
	38		W1260	0019	24		26-11-11	001-099
	38		W1260	5982	24		73-21-12	115-199
	39		W1260	0383	22		76-11-11	001-099
	39	UNUSED						115-199
	40	16	W1260	0603	16		75-31-11	ALL
	41		W1260	0704	24		21-58-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 51

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41948J		P36/ /		RCPT (continued)				ALL
	42		W1260	0787	22		29-22-11	001-099
	42		W1260	0800	20		73-21-12	115-199
	43		W1260	0800	20		73-21-12	001-099
	43	UNUSED						115-199
	44		W1260	5982	24		73-21-12	001-099
	44	UNUSED						115-199
	45		W1260	0673	24		21-58-12	ALL
	46		W1260	0917	24		21-58-12	ALL
	47		W1260	0946	24		21-58-12	ALL
	48	UNUSED						ALL
	49		W1260	1124Z			78-34-51	ALL
	50		W1260	1124	20		78-34-51	001-002, 115-199
	50	UNUSED						003-099
	51		W1260	6454	20		78-34-51	001-002, 115-199
	51	UNUSED						003-099
	52		W1260	0939	24		21-58-12	ALL
	53		W1260	8502	22		29-22-11	ALL
	54		W1260	8501	22		29-22-11	ALL
	55		W1260	8500	22		29-22-11	ALL
D41948P		P036-00/ /		PLUG				ALL
	1		W4228	0005	22		76-11-11	ALL
	2		W4228	0004	22		76-11-11	ALL
	3	UNUSED						001-099
	3		W4228	0007	22		76-11-11	115-199
	4		W4228	0008	22		76-11-11	001-099
	4		W4228	0008	24		76-11-11	115-199
	5		W4228	0045	22		78-34-11	ALL
	6		W4228	0046	22		SPARE	001-002, 115-199
	6		W4228	1006	22		78-34-51	003-099
	7		W4228	0047	22		SPARE	001-002, 115-199
	7		W4228	1007	22		78-34-51	003-099
	8		W4228	0220	20		36-11-11	ALL
	9		W4228	0066	24		80-11-11	ALL
	10		W4228	0067	20		SPARE	ALL
	11		W4228	0096	22		SPARE	001-099
	11		W4228	0068	20		SPARE	115-199
	12		W4228	0072	20		28-22-31	001-008, 115-199
	12		W4228	0072	20		SPARE	009-099
	13		W4228	0090	22		77-12-41	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 52

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41948P		P036-00/ /		PLUG (continued)				ALL
	14	UNUSED						001-099
	14		W4228	0094	20		SPARE	115-199
	15		W4228	0141	20		28-22-31	001-008, 115-199
	15		W4228	0141	20		SPARE	009-099
	16		W4228	0250	20		32-35-11	001-099
	16		W4228	0251	20		32-35-11	115-199
	17		W4228	0144	24		76-11-11	ALL
	18		W4228	0145	24		76-11-11	ALL
	19		W4228	0149	22		SPARE	ALL
	20	UNUSED						001-099
	20		W4228	0150	22		SPARE	115-199
	21		W4228	0148	22		26-15-11	ALL
	22	UNUSED						001-099
	22		W4228	0151	22		SPARE	115-199
	23		W4228	0152	22		SPARE	ALL
	24		W4228	0121	24		74-31-11	001-099
	24		W4228	0158	20		26-22-21	115-199
	25		W4228	2510R	20		SPARE	001-099
	25		W4228	0160	20		26-22-21	115-199
	26		W4228	2510Z			SPARE	001-099
	26		W4228	0159	20		26-22-21	115-199
	27		W4228	0194	22		SPARE	ALL
	28		W4228	0175	22		32-42-11	ALL
	29		W4228	0118	24		73-21-11	ALL
	30		W4228	0054	22		77-12-41	ALL
	31		W4228	0215	24		73-21-11	ALL
	32		W4228	0048	22		78-34-11	ALL
	33		W4228	0195	22		SPARE	001-099
	33		W4228	0195	22		32-44-11	115-199
	34		W4228	0253	24		73-21-12	001-099
	34		W4228	0121	24		73-21-12	115-199
	35		W4228	0124	24		73-21-12	ALL
	36		W4228	0216	24		73-21-12	ALL
	37		W4228	0217	24		73-21-12	ALL
	38		W4228	0075	22		26-11-11	001-099
	38		W4228	0218	24		73-21-12	115-199
	39		W4228	0251	22		76-11-11	001-099
	39	UNUSED						115-199
	40	16	W4228	0193	16		75-31-11	ALL
	41		W4228	0245	24		21-58-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 53

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41948P		P036-00/ /		PLUG (continued)				ALL
	42		W4228	0210	22		29-22-11	001-099
	42	18	W4228	0254	18		73-21-12	115-199
	43	18	W4228	0254	18		73-21-12	001-099
	43	UNUSED						115-199
	44		W4228	0218	24		73-21-12	001-099
	44	UNUSED						115-199
	45		W4228	0246	24		21-58-12	ALL
	46		W4228	0016	22		21-58-12	ALL
	47		W4228	0247	24		21-58-12	ALL
	48		W4228	2510B	20		SPARE	001-099
	48	UNUSED						115-199
	49		W4228	FRAT			78-34-51	ALL
	50		W4228	1007	22		78-34-51	001-002, 115-199
	50	UNUSED						003-099
	51		W4228	1006	22		78-34-51	001-002, 115-199
	51	UNUSED						003-099
	52		W4228	0077	24		21-58-12	ALL
	53		W4228	0196	22		29-22-11	ALL
	54		W4228	0197	22		29-22-11	ALL
	55		W4228	0198	22		29-22-11	ALL
			W4228	1006Z			78-34-51	ALL
			W4228	1007Z			78-34-51	ALL
			W4228	FRAT			78-34-51	ALL
D41950J		P33/ /		RCPT				ALL
	1		W1230	0681	22		28-22-21	001-099
	1		W1232	0062	22		28-22-21	115-199
	2		W1230	0682	22		28-22-21	001-099
	2		W1232	0063	22		28-22-21	115-199
	3		W1230	0660	24		26-15-12	001-099
	3		W1232	0016	24		26-15-12	115-199
	4		W1230	0661	24		26-15-12	001-099
	4		W1232	0017	24		26-15-12	115-199
	5		W1230	0248	20		26-22-21	001-099
	5		W1232	0065	20		26-15-12	115-199
	6		W1230	0690	20		26-22-21	001-099
	6	UNUSED						115-199
	7		W1230	0187	22		29-22-11	ALL
	8		W1230	0192	22		29-22-11	ALL
	9	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 54

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41950J		P33/ /		RCPT (continued)				ALL
	10	UNUSED						ALL
	11		W1230	0755	20		26-22-21	001-099
	11	UNUSED						115-199
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D41950P		P033-00/ /		PLUG-				ALL
	1		W4236	0041	22		28-22-21	ALL
	2		W4236	0042	22		28-22-21	ALL
	3		W4236	0166	22		26-15-12	ALL
	4		W4236	0167	22		26-15-12	ALL
	5		W4236	0173	20		26-22-21	001-099
	5		W4236	0168	20		26-15-12	115-199
	6		W4236	0172	20		26-22-21	001-099
	6	UNUSED						115-199
	7		W4236	0149	22		29-22-11	ALL
	8		W4236	0150	22		29-22-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W4236	0180	20		26-22-21	001-099
	11	UNUSED						115-199
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W4236	0153	24		SPARE	ALL
D41956J		E3-3/ /		RCPT-				ALL
	1		W1433	2501R	24		31-31-51	001-099
	1		W1433	2501R	24		31-31-31	115-199
	2		W1433	2501B	24		31-31-51	001-099
	2		W1433	2501B	24		31-31-31	115-199
	3		W1433	FRBA			31-31-51	001-099
	3		W1433	FRBA			31-31-31	115-199
	4		W1433	2502R	24		31-31-51	001-099
	4		W1433	2502R	24		31-31-31	115-199
	5		W1433	2502B	24		31-31-51	001-099
	5		W1433	2502B	24		31-31-31	115-199
	6		W1433	FRBB			31-31-51	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 55

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41956J		E3-3/ /		RCPT- (continued)				ALL
	6		W1433	FRBB			31-31-31	115-199
	7		W1433	2503R	24		31-31-51	001-099
	7		W1433	2503R	24		31-31-31	115-199
	8		W1433	2503B	24		31-31-51	001-099
	8		W1433	2503B	24		31-31-31	115-199
	9		W1433	FRBC			31-31-51	001-099
	9		W1433	FRBC			31-31-31	115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W1433	2002R	22		31-31-51	001-099
	12		W1433	2002R	22		31-31-31	115-199
	13		W1433	2002B	22		31-31-51	001-099
	13		W1433	2002B	22		31-31-31	115-199
	14	UNUSED						ALL
	15	UNUSED						ALL
			W1433	0131	20		31-31-51	001-099
			W1433	0132	20		31-31-51	001-099
			W1433	0133	20		31-31-51	001-099
			W1433	2501Z			31-31-51	001-099
			W1433	2502Z			31-31-51	001-099
			W1433	2503Z			31-31-51	001-099
			W1433	FRBA			31-31-51	001-099
			W1433	FRBB			31-31-51	001-099
			W1433	FRBC			31-31-51	001-099
			W1433	0131	20		31-31-31	115-199
			W1433	0132	20		31-31-31	115-199
			W1433	0133	20		31-31-31	115-199
			W1433	2501Z			31-31-31	115-199
			W1433	2502Z			31-31-31	115-199
			W1433	2503Z			31-31-31	115-199
			W1433	FRBA			31-31-31	115-199
			W1433	FRBB			31-31-31	115-199
			W1433	FRBC			31-31-31	115-199
D41956P		E003-03/ /		PLUG				001-099
D41956P		E3-3/ /		PLUG				115-199
	1		W4210	2502R	20		31-31-51	001-099
	1		W4210	2502R	20		31-31-31	115-199
	2		W4210	2502B	20		31-31-51	001-099
	2		W4210	2502B	20		31-31-31	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 56

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41956P		E003-03/ /		PLUG (continued)				001-099
D41956P		E3-3/ /		PLUG (continued)				115-199
	3		W4210	2502Z			31-31-51	001-099
	3		W4210	2502Z			31-31-31	115-199
	4		W4210	2503R	20		31-31-51	001-099
	4		W4210	2503R	20		31-31-31	115-199
	5		W4210	2503B	20		31-31-51	001-099
	5		W4210	2503B	20		31-31-31	115-199
	6		W4210	2503Z			31-31-51	001-099
	6		W4210	2503Z			31-31-31	115-199
	7		W4210	2504R	20		31-31-51	001-099
	7		W4210	2504R	20		31-31-31	115-199
	8		W4210	2504B	20		31-31-51	001-099
	8		W4210	2504B	20		31-31-31	115-199
	9		W4210	2504Z			31-31-51	001-099
	9		W4210	2504Z			31-31-31	115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W4210	2006R	20		31-31-51	001-099
	12		W4210	2006R	20		31-31-31	115-199
	13		W4210	2006B	20		31-31-51	001-099
	13		W4210	2006B	20		31-31-31	115-199
	14	UNUSED						ALL
	15	UNUSED						ALL
D41958J		P36/ /		RCPT				ALL
	1	UNUSED						ALL
	2	UNUSED						001-099
	2		W1260	5690	22		30-21-11	115-199
	3		W1260	0394	22		76-11-11	ALL
	4		W1260	0393	22		76-11-11	ALL
	5	UNUSED						001-099
	5		W1260	0365	20		74-31-11	115-199
	6		W1260	0366	20		74-31-11	001-099
	6		W1260	0471	20		74-31-11	115-199
	7		W1260	5969	20		76-11-21	ALL
	8		W1260	6458	24		78-36-11	ALL
	9		W1260	0432	24		78-36-11	ALL
	10		W1260	0432	24		78-36-11	001-002, 115-199
	10		W1260	0422	24		78-36-11	003-099
	11		W1260	0368	20		74-31-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 57

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41958J		P36/ /		RCPT (continued)				ALL
	12		W1260	0652	20		74-31-11	ALL
	13		W1260	0468	20		80-11-11	ALL
	14		W1260	0461	20		80-11-11	ALL
	15		W1260	0450	20		80-11-11	ALL
	16		W1260	0093	24		80-11-11	ALL
	17		W1260	0038	20		28-22-31	ALL
	18		W1260	0100	20		28-22-31	ALL
	19		W1260	0099	20		28-22-31	ALL
	20		W1260	5681	22		30-21-11	ALL
	21		W1260	0482	22		30-21-11	ALL
	22		W1260	5690	22		30-21-11	001-099
	22		W1260	0427	24		78-36-11	115-199
	23		W1260	0114	20		28-22-31	001-008, 115-199
	23	UNUSED						009-099
	24		W1260	0514	24		26-15-11	ALL
	25	UNUSED						001-099
	25		W1260	0511	24		26-15-11	115-199
	26		W1260	0519	24		26-15-11	ALL
	27		W1260	6526	24		78-36-11	001-099
	27		W1260	0608	24		26-15-11	115-199
	28	UNUSED						001-099
	28		W1260	0609	24		26-15-11	115-199
	29		W1260	6333	22		76-11-11	ALL
	30		W1260	6530	24		78-36-11	ALL
	31		W1260	0797	22		32-61-21	ALL
	32		W1260	0486	20		32-35-11	ALL
	33		W1260	0504	22		32-61-21	ALL
	34	UNUSED						001-099
	34		W1260	0845	20		32-35-11	115-199
	35		W1260	5506	24		28-25-11	001-099
	35		W1260	5506	22		28-25-11	115-199
	36		W1260	0511	24		26-15-11	001-099
	36		W1260	0020	24		26-15-11	115-199
	37		W1260	0824	20		74-31-11	ALL
	38		W1260	0427	24		78-36-11	001-099
	38	UNUSED						115-199
	39		W1260	0823	20		74-31-11	001-099
	39	UNUSED						115-199
	40		W1260	0173	20		80-11-11	001-099
	40	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 58

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41958J		P36/ /		RCPT (continued)				ALL
	41		W1260	8517	24		29-33-11	ALL
	42	UNUSED						001-099
	42		W1260	6526	24		78-36-11	115-199
	43	UNUSED						001-002, 115-199
	43		W1260	0422	24		78-36-11	003-099
	44		W1260	5775	22		32-44-11	ALL
	45	UNUSED						001-099
	45		W1260	5773	22		32-44-11	115-199
	46		W1260	5769	22		32-44-11	ALL
	47		W1260	5776	22		32-44-11	ALL
	48		W1260	0050	22		32-44-11	ALL
	49		W1260	5774	22		32-44-11	ALL
	50	UNUSED						001-099
	50		W1260	5772	22		32-44-11	115-199
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						001-099
	53	18	W1260	0033	18		29-21-31	115-199
	54		W1260	6200	20		29-21-31	ALL
	55		W1260	0590	22		29-21-31	001-099
	55	18	W1260	0590	18		29-21-31	115-199
D41958P		P036-00/ /		PLUG				001-099
D41958P		P36/ /		PLUG				115-199
	1		W4210	0147	22		SPARE	ALL
	2	UNUSED						001-099
	2		W4210	0006	22		30-21-11	115-199
	3		W4210	0008	22		76-11-11	ALL
	4		W4210	0007	22		76-11-11	ALL
	5	UNUSED						001-099
	5		W4210	0009	20		74-31-11	115-199
	6		W4210	0010	20		74-31-11	ALL
	7		W4210	1005	20		76-11-21	ALL
	8		W4210	0012	22		78-36-11	ALL
	9		W4210	0013	22		78-36-11	ALL
	10		W4210	0026	24		78-36-11	ALL
	11		W4210	0063	20		74-31-11	001-099
	11		W4210	0059	20		74-31-11	115-199
	12		W4210	0064	20		74-31-11	001-099
	12		W4210	0058	20		74-31-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 59

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41958P		P036-00/ /		PLUG (continued)				001-099
D41958P		P36/ /		PLUG (continued)				115-199
	13		W4210	0065	20		80-11-11	ALL
	14		W4210	0066	20		80-11-11	ALL
	15		W4210	0067	20		80-11-11	ALL
	16		W4210	0069	24		80-11-11	ALL
	17		W4210	0040	20		28-22-31	ALL
	18		W4210	0041	20		28-22-31	ALL
	19		W4210	0042	20		28-22-31	ALL
	20		W4210	0070	22		30-21-11	ALL
	21		W4210	0071	22		30-21-11	ALL
	22		W4210	0006	22		30-21-11	001-099
	22		W4210	0074	24		78-36-11	115-199
	23		W4210	0075	20		28-22-31	001-008, 115-199
	23	UNUSED						009-099
	24		W4210	0078	22		26-15-11	ALL
	25	UNUSED						001-099
	25		W4210	0079	22		26-15-11	115-199
	26		W4210	0080	22		26-15-11	ALL
	27		W4210	0024	24		78-36-11	001-099
	27		W4210	0082	22		26-15-11	115-199
	28	UNUSED						001-099
	28		W4210	0083	22		26-15-11	115-199
	29		W4210	0162	20		74-31-11	ALL
	30		W4210	0163	24		78-36-11	ALL
	31		W4210	0152	22		32-61-21	ALL
	32		W4210	0088	20		32-35-11	ALL
	33		W4210	0089	22		32-61-21	ALL
	34	UNUSED						001-099
	34		W4210	0156	20		32-35-11	115-199
	35		W4210	0141	24		28-25-11	ALL
	36		W4210	0106	22		26-15-11	ALL
	37		W4210	0153	20		74-31-11	ALL
	38		W4210	0074	24		78-36-11	001-099
	38		W4210	0001	22		SPARE	115-199
	39		W4210	0155	20		74-31-11	001-099
	39		W4210	0002	22		SPARE	115-199
	40		W4210	0068	20		80-11-11	001-099
	40	UNUSED						115-199
	41		W4210	0102	24		29-33-11	ALL
	42	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 60

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41958P		P036-00/ /		PLUG (continued)				001-099
D41958P		P36/ /		PLUG (continued)				115-199
	42		W4210	0024	24		78-36-11	115-199
	43	UNUSED						001-002
	43		W4210	0178	20		78-36-11	003-099
	43		W4210	0104	22		SPARE	115-199
	44		W4210	0110	22		32-44-11	ALL
	45		W4210	0111	22		SPARE	001-099
	45		W4210	0111	22		32-44-11	115-199
	46		W4210	0112	22		32-44-11	ALL
	47		W4210	0113	22		32-44-11	ALL
	48		W4210	0114	22		32-44-11	ALL
	49		W4210	0115	22		32-44-11	ALL
	50	UNUSED						001-099
	50		W4210	0116	22		32-44-11	115-199
	51	UNUSED						001-099
	51		W4210	0118	24		SPARE	115-199
	52	UNUSED						001-099
	52		W4210	0119	24		SPARE	115-199
	53		W4210	0135	22		SPARE	001-099
	53	18	W4210	0130	18		29-21-31	115-199
	54		W4210	0129	20		29-21-31	ALL
	55	18	W4210	0131	18		29-21-31	ALL
	CAP	Y	W4210	0082	22		SPARE	001-099
	CAP	Y	W4210	0084	22		SPARE	115-199
	CAP	Y	W4210	0085	22		SPARE	115-199
	CAP	Y	W4210	0103	22		SPARE	115-199
D41962J		E6-1/ /		RCPT				115-199
	1		W1011	1001	22		34-51-11	115-199
	2	UNUSED						115-199
	3	UNUSED						115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 61

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41962J		E6-1/ /		RCPT (continued)				115-199
	DED		W1011	1001Z			34-51-11	115-199
D41962P		E6-1/ /		PLUG-				115-199
	1		W2358	0014	22		34-51-11	115-199
	2	UNUSED						115-199
	3	UNUSED						115-199
	4	UNUSED						115-199
	5		W2358	0115	20		SPARE	115-199
	6		W2358	0046	20		SPARE	115-199
	7	UNUSED						115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
D41964J		E003-01/ /		RCPT				ALL
	1		W1265	0708	22		27-21-12	001-099
	1	UNUSED						115-199
	2		W1265	0613	22		27-09-11	ALL
	3	UNUSED						ALL
	4		W1265	0614	22		27-09-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						001-099
	9		W1265	0708	22		27-21-12	115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
D41964P		E3-1/ /		PLUG-				ALL
	1		W2358	0068	22		27-21-12	001-004
	1		W2358	0066	22		27-21-12	005-099
	1	UNUSED						115-199
	2		W2358	0112	22		27-09-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 62

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41964P		E3-1/ /		PLUG- (continued)				ALL
	3	UNUSED						ALL
	4		W2358	0114	22		27-09-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						001-099
	8		W2358	0608	22		SPARE	115-199
	9	UNUSED						001-099
	9		W2358	0609	22		27-21-12	115-199
	10	UNUSED						001-099
	10		W2358	0610	22		SPARE	115-199
	11	UNUSED						ALL
	12	UNUSED						001-099
	12		W2358	0022	22		SPARE	115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
D41966J		E005-03/ /		RCPT				001-099
D41966J		E5-3/ /		RCPT				115-199
	1		W1286	0191	24		27-51-61	ALL
	2		W1286	0190	24		27-51-61	ALL
	3		W1286	0192	24		27-51-61	ALL
	4		W1286	0062	22		24-51-14	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D41966P		E5-3/ /		PLUG-				ALL
	1		W2358	0241	24		27-51-61	001-099
	1		W2358	0241	22		27-51-61	115-199
	2		W2358	0242	24		27-51-61	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 63

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41966P		E5-3/ /		PLUG- (continued)				ALL
	2		W2358	0242	22		27-51-61	115-199
	3		W2358	0243	24		27-51-61	001-099
	3		W2358	0243	22		27-51-61	115-199
	4		W2358	0024	20		24-51-14	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						001-099
	8		W2358	0606	22		SPARE	115-199
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D41968J		P070-00/ /		RCPT-				001-099
D41968J		P70/ /		RCPT-				115-199
	1		W1252	0201	24		26-16-21	ALL
	2		W1252	0202	24		26-16-21	ALL
	3		W1252	0203	24		26-16-21	ALL
	4		W1252	0204	24		26-16-21	ALL
	5		W1252	0090	24		26-16-21	ALL
	6		W1252	0091	24		26-16-21	ALL
	7		W1252	0092	24		26-16-21	ALL
	8		W1252	0093	24		26-16-21	ALL
	9		W1250	0025	20		24-51-14	ALL
	10	UNUSED						ALL
	11		W1252	0124	22		38-13-11	001-099
	11		W1252	0124	20		38-13-11	115-199
	12		W1252	0125	22		38-13-11	001-099
	12		W1252	0125	20		38-13-11	115-199
	13	UNUSED						ALL
	14		W1250	0031	24		27-51-61	001-099
	14		W1250	0031	22		27-51-61	115-199
	15		W1250	0057	16		28-25-11	ALL
	16		W1250	0032	24		27-51-61	001-099
	16		W1250	0032	22		27-51-61	115-199
	17		W1250	0060	20		28-25-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 64

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41968J		P070-00/ /		RCPT- (continued)				001-099
D41968J		P70/ /		RCPT- (continued)				115-199
	17	UNUSED						115-199
	18		W1250	0061	24		28-25-11	ALL
	19	UNUSED						ALL
	20		W1250	0063	22		28-25-11	ALL
	21		W1252	0066	20		38-13-11	001-099
	21	UNUSED						115-199
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
D41968P		P70/ /		PLUG-				ALL
	1		W2358	0418	22		26-16-21	ALL
	2		W2358	0417	22		26-16-21	ALL
	3		W2358	0416	22		26-16-21	ALL
	4		W2358	0425	22		26-16-21	ALL
	5		W2358	0422	22		26-16-21	ALL
	6		W2358	0421	22		26-16-21	ALL
	7		W2358	0420	22		26-16-21	ALL
	8		W2358	0419	22		26-16-21	ALL
	9		W2358	0024	20		24-51-14	ALL
	10	UNUSED						001-099
	10		W2358	0510	24		SPARE	115-199
	11		W2358	0511	22		38-13-11	001-099
	11		W2358	0511	20		38-13-11	115-199
	12		W2358	0512	22		38-13-11	001-099
	12		W2358	0512	20		38-13-11	115-199
	13		W2358	0028	24		SPARE	001-099
	13		W2358	0513	20		SPARE	115-199
	14		W2358	0244	24		27-51-61	001-099
	14		W2358	0244	22		27-51-61	115-199
	15		W2358	0005	12		28-25-11	ALL
	16		W2358	0245	24		27-51-61	001-099
	16		W2358	0245	22		27-51-61	115-199
	17		W2358	0017	22		28-25-11	001-099
	17	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 65

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41968P		P70/ /		PLUG- (continued)				ALL
	18		W2358	0006	24		28-25-11	001-099
	18		W2358	0006	22		28-25-11	115-199
	19	UNUSED						ALL
	20		W2358	0019	22		28-25-11	ALL
	21		W2358	0026	20		38-13-11	001-099
	21	UNUSED						115-199
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
D41970J		P011-00/ /		RCPT-				ALL
	1		W0128	0099	22		27-51-21	ALL
	2		W0128	0122	22		27-48-21	ALL
	3	UNUSED						ALL
	4		W0128	0019	20		21-51-21	ALL
	5	UNUSED						001, 003-099, 115-199
	5		W0128	0023	22		34-22-26	002
	6	UNUSED						ALL
	7	UNUSED						001-099
	7		W0128	0402	20		25-31-21	115-199
	8		W0128	0351	24		27-51-31	001-099
	8		W0128	0351	22		27-51-31	115-199
	9		W0128	0010	22		21-51-13	001-099
	9	UNUSED						115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D41970P		P011-00/ /		PLUG-				001-099
D41970P		P11/ /		PLUG-				115-199
	1		W2356	0281	22		27-51-21	ALL
	2		W2356	0022	22		27-48-21	ALL
	3	UNUSED						ALL
	4		W2356	0019	20		21-51-21	ALL
	5	UNUSED						001, 003-099
	5		W2356	0020	22		34-22-26	002

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 66

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41970P		P011-00/ /		PLUG- (continued)				001-099
D41970P		P11/ /		PLUG- (continued)				115-199
	5		W2356	0020	20		SPARE	115-199
	6	UNUSED						001-099
	6		W2356	0036	20		SPARE	115-199
	7	UNUSED						001-099
	7		W2356	0037	20		25-31-21	115-199
	8		W2356	0321	24		27-51-31	001-099
	8		W2356	0321	22		27-51-31	115-199
	9		W2356	0049	20		21-51-13	001-099
	9	UNUSED						115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D41972J		P011-00/ /		RCPT-				ALL
	1		W0128	0002	16		75-31-11	001-099
	1		W0134	0005	16		75-31-11	115-199
	2	UNUSED						001-002, 115-199
	2		W0128	0103	24		78-36-21	003-099
	3		W0128	0703	24		35-21-11	001-099
	3		W0134	0003	22		35-21-11	115-199
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						001-099
	6		W0134	0025	20		29-22-11	115-199
	7		W0128	0747	22		77-12-42	001-099
	7		W0134	0047	22		77-12-42	115-199
	8		W0128	0072	24		30-31-12	001-099
	8		W0128	0085	22		30-31-12	115-199
	9	UNUSED						001-099
	9		W0134	0056	24		78-36-21	115-199
	10		W0128	0704	24		35-21-11	001-099
	10		W0134	0004	22		35-21-11	115-199
	11		W0128	0911	22		29-21-31	001-099
	11		W0134	0411	20		29-21-31	115-199
	12		W0128	0035	24		78-36-21	001-002
	12	UNUSED						003-099, 115-199
	13	18	W0128	0036	18		23-32-01	ALL
	14		W0128	0406	22		30-21-11	001-099
	14		W0134	0406	22		30-21-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 67

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41972J		P011-00/ /		RCPT- (continued)				ALL
	15		W0128	0804	22		80-11-21	001-099
	15		W0134	0204	22		80-11-21	115-199
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	18	W0128	0130	18		23-32-01	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27		W0128	0707	16		35-21-11	001-099
	27		W0134	0007	16		35-21-11	115-199
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W0128	0702	16		35-21-11	001-099
	32		W0134	0002	16		35-21-11	115-199
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
D41972P		P011-00/ /		PLUG-				001-099
D41972P		P11/ /		PLUG-				115-199
	1		W2360	0005	16		75-31-11	ALL
	2	UNUSED						001-002, 115-199
	2		W2360	0016	24		78-36-21	003-099
	3		W2360	0003	24		35-21-11	001-099
	3		W2360	0003	22		35-21-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 68

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41972P		P011-00/ /		PLUG- (continued)				001-099
D41972P		P11/ /		PLUG- (continued)				115-199
	4	UNUSED						ALL
	5	UNUSED						001-099
	5		W2360	0515	24		SPARE	115-199
	6	UNUSED						001-099
	6		W2360	0035	20		29-22-11	115-199
	7		W2360	0615	22		77-12-42	ALL
	8		W2360	0050	24		30-31-12	001-099
	8		W2360	0006	24		30-31-12	115-199
	9	UNUSED						001-099
	9		W2360	0009	24		78-36-21	115-199
	10		W2360	0004	24		35-21-11	001-099
	10		W2360	0004	22		35-21-11	115-199
	11		W2360	0311	20		29-21-31	ALL
	12		W2360	0024	24		78-36-21	001-002
	12		W2360	0024	24		SPARE	003-099
	12	UNUSED						115-199
	13		W2360	0051	20		23-32-01	ALL
	14		W2360	0026	22		30-21-11	ALL
	15		W2360	0505	20		80-11-21	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						001-099
	22		W2360	0611	22		SPARE	115-199
	23		W2360	0612	22		23-32-02	ALL
	24	UNUSED						001-099
	24		W2360	0613	22		SPARE	115-199
	25	UNUSED						001-099
	25		W2360	0614	22		SPARE	115-199
	26	UNUSED						ALL
	27		W2360	0007	16		35-21-11	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W2360	0002	16		35-21-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 69

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41972P		P011-00/ /		PLUG- (continued)				001-099
D41972P		P11/ /		PLUG- (continued)				115-199
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
D41974J		E6-3/ /		RCPT-				115-199
	1		W1017	0001	20		23-11-11	115-199
	2		W1017	0002	20		23-11-11	115-199
	3		W1017	0003	20		23-11-11	115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
D41974P		E6-3/ /		PLUG-				115-199
	1		W2350	0051	20		23-11-11	115-199
	2		W2350	0052	20		23-11-11	115-199
	3		W2350	0053	20		23-11-11	115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
	8	UNUSED						115-199
	9	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 70

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41974P		E6-3/ /		PLUG- (continued)				115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13		W2350	0716	22		SPARE	115-199
	14		W2350	0712	22		SPARE	115-199
	15	UNUSED						115-199
D41986J		P54/ /		RCPT				ALL
	1		W1120	0071	24		26-11-12	001-099
	1		W1120	0303	24		26-11-12	115-199
	2	UNUSED						001-099
	2		W1120	0047	24		26-11-12	115-199
	3	UNUSED						ALL
	4		W1120	0081	24		26-11-12	001-099
	4		W1120	0060	24		26-11-12	115-199
	5		W1120	0485	24		26-12-11	001-099
	5		W1120	0119	24		26-12-11	115-199
	6		W1120	0503	24		26-12-11	001-099
	6		W1120	0120	24		26-12-11	115-199
	7		W1120	0500	24		26-12-11	001-099
	7		W1120	0129	24		26-12-11	115-199
	8		W1120	0474	20		28-25-11	ALL
	9		W1120	0195	24		26-15-11	001-099
	9		W1120	0502	24		26-15-11	115-199
	10		W1120	0080	24		26-11-12	001-099
	10		W1120	0058	24		26-11-12	115-199
	11	UNUSED						ALL
	12		W1120	0275	22		31-51-21	ALL
	13		W1120	0200	24		26-15-11	001-099
	13		W1120	0161	24		26-15-11	115-199
	14		W1120	0276	22		31-51-33	ALL
	15		W1120	0214	24		26-15-11	001-099
	15		W1120	0162	24		26-15-11	115-199
	16	UNUSED						001-099
	16		W1120	0164	24		26-15-11	115-199
	17		W1120	0215	24		26-15-11	001-099
	17		W1120	0165	24		26-15-11	115-199
	18		W1120	0287	24		26-16-11	001-099
	18		W1120	0339	24		26-16-11	115-199
	19	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 71

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41986J		P54/ /		RCPT (continued)				ALL
	19		W1120	0170	24		26-15-11	115-199
	20	UNUSED						001-099
	20		W1120	0171	24		26-15-11	115-199
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						001-099
	23		W1120	0506	24		26-11-11	115-199
	24		W1120	0278	24		26-16-11	001-099
	24		W1120	0330	24		26-16-11	115-199
D41986P		P054-00/ /		PLUG				001-099
D41986P		P54/ /		PLUG				115-199
	1		W4210	0016	22		26-11-12	ALL
	2		W4210	0017	22		SPARE	001-099
	2		W4210	0017	22		26-11-12	115-199
	3		W4210	0084	20		SPARE	001-099
	3		W4210	0105	22		SPARE	115-199
	4		W4210	0019	22		26-11-12	001-099
	4		W4210	0019	20		26-11-12	115-199
	5		W4210	0020	20		26-12-11	ALL
	6		W4210	0021	20		26-12-11	ALL
	7		W4210	0022	22		26-12-11	ALL
	8		W4210	0137	20		28-25-11	ALL
	9		W4210	0106	22		26-15-11	ALL
	10		W4210	0018	22		26-11-12	001-099
	10		W4210	0018	20		26-11-12	115-199
	11	UNUSED						001-099
	11		W4210	0109	22		SPARE	115-199
	12		W4210	0048	22		31-51-21	ALL
	13		W4210	0039	22		26-15-11	ALL
	14		W4210	0057	24		31-51-33	ALL
	15		W4210	0078	22		26-15-11	ALL
	16	UNUSED						001-099
	16		W4210	0079	22		26-15-11	115-199
	17		W4210	0080	22		26-15-11	ALL
	18		W4210	0081	22		26-16-11	ALL
	19	UNUSED						001-099
	19		W4210	0082	22		26-15-11	115-199
	20	UNUSED						001-099
	20		W4210	0083	22		26-15-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 72

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41986P		P054-00/ /		PLUG (continued)				001-099
D41986P		P54/ /		PLUG (continued)				115-199
	21	UNUSED						001-099
	21		W4210	0084	22		SPARE	115-199
	22	UNUSED						001-099
	22		W4210	0085	22		SPARE	115-199
	23	UNUSED						001-099
	23		W4210	0095	22		26-11-11	115-199
	24		W4210	0117	22		26-16-11	ALL
D41988J		P36/ /		RCPT				ALL
	1		W1260	0380	16		75-31-11	ALL
	2		W1260	0382	18		75-31-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
D41988P		P036-00/ /		PLUG				ALL
	1		W4232	0008	16		75-31-11	ALL
	2		W4232	0009	18		75-31-11	ALL
	3		W4232	2504B	20		SPARE	001-099
	3	UNUSED						115-199
	4		W4232	2504R	20		SPARE	001-099
	4	UNUSED						115-199
	5		W4232	2504Z			SPARE	001-099
	5	UNUSED						115-199
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 73

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41988P		P036-00/ /		PLUG (continued)				ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
D41990J		P50/ /		RCPT				ALL
	1		W1140	0309	24		26-18-21	ALL
	2		W1140	0310	24		26-18-21	ALL
	3		W1140	0292	24		26-18-11	ALL
	4		W1140	0293	24		26-18-11	ALL
	5		W1140	0294	24		26-18-11	ALL
	6		W1140	0295	24		26-18-11	ALL
	7		W1140	0219	24		80-11-21	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1140	0318	22		77-12-42	ALL
	11		W1140	0319	24		77-12-42	001-099
	11		W1140	0319	22		77-12-42	115-199
	12		W1140	0340	22		77-12-42	ALL
	13		W1140	0261	24		26-17-11	ALL
	14		W1140	0252	24		26-17-11	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W1140	0552	24		73-21-22	ALL
	19		W1140	0553	24		73-21-22	ALL
	20		W1140	0554	24		73-21-22	ALL
	21		W1140	0555	24		73-21-22	ALL
	22		W1140	0556	24		73-21-22	ALL
	23		W1140	0557	24		73-21-22	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 74

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41990J		P50/ /		RCPT (continued)				ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44		W1140	0296	24		26-18-11	ALL
	45		W1140	0297	24		26-18-11	ALL
	46		W1140	0298	24		26-18-11	ALL
	47		W1140	0299	24		26-18-11	ALL
	48		W1140	0300	24		26-18-11	ALL
	49		W1140	0301	24		26-18-11	ALL
	50		W1140	0302	24		26-18-11	ALL
	51		W1140	0303	24		26-18-11	ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D41990P		P050-00/ /		PLUG				ALL
	1		W4236	0029	22		26-18-21	001-099
	1		W4236	0029	20		26-18-21	115-199
	2		W4236	0030	22		26-18-21	001-099
	2		W4236	0030	20		26-18-21	115-199
	3		W4236	0031	22		26-18-11	001-099
	3		W4236	0031	20		26-18-11	115-199
	4		W4236	0032	22		26-18-11	001-099
	4		W4236	0032	20		26-18-11	115-199
	5		W4236	0033	22		26-18-11	001-099
	5		W4236	0033	20		26-18-11	115-199
	6		W4236	0034	22		26-18-11	001-099
	6		W4236	0034	20		26-18-11	115-199
	7		W4236	0066	24		80-11-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 75

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41990P		P050-00/ /		PLUG (continued)				ALL
	8	UNUSED						001-099
	8		W4236	0067	20		SPARE	115-199
	9	UNUSED						001-099
	9		W4236	0068	20		SPARE	115-199
	10		W4236	0077	22		77-12-42	ALL
	11		W4236	0078	24		77-12-42	001-099
	11		W4236	0078	22		77-12-42	115-199
	12		W4236	0099	22		77-12-42	ALL
	13		W4236	0222	22		26-17-11	ALL
	14		W4236	0097	22		26-17-11	001-099
	14		W4236	0097	20		26-17-11	115-199
	15	UNUSED						ALL
	16		W4236	0220	22		SPARE	001-099
	16	UNUSED						115-199
	17	UNUSED						ALL
	18		W4236	0114	24		73-21-22	ALL
	19		W4236	0115	24		73-21-22	ALL
	20		W4236	0067	24		73-21-22	001-099
	20		W4236	0116	24		73-21-22	115-199
	21		W4236	0117	24		73-21-22	ALL
	22		W4236	0118	24		73-21-22	ALL
	23		W4236	0119	24		73-21-22	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 76

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41990P		P050-00/ /		PLUG (continued)				ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44		W4236	0155	22		26-18-11	ALL
	45		W4236	0156	22		26-18-11	ALL
	46		W4236	0157	22		26-18-11	ALL
	47		W4236	0158	22		26-18-11	ALL
	48		W4236	0159	22		26-18-11	ALL
	49		W4236	0160	22		26-18-11	ALL
	50		W4236	0161	22		26-18-11	ALL
	51		W4236	0162	22		26-18-11	ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D41992J		P54/ /		RCPT				ALL
	1	UNUSED						001-099
	1		W1120	0103	24		26-11-22	115-199
	2		W1120	0166	24		26-11-22	001-099
	2		W1120	0494	24		26-11-22	115-199
	3		W1120	0150	24		26-11-22	001-099
	3	UNUSED						115-199
	4		W1120	0525	24		26-12-21	001-099
	4		W1120	0141	24		26-12-21	115-199
	5	UNUSED						ALL
	6		W1120	0510	24		26-12-21	001-099
	6		W1120	0131	24		26-12-21	115-199
	7		W1120	0528	24		26-12-21	001-099
	7		W1120	0293	24		26-12-21	115-199
	8		W1120	0133	24		26-11-21	001-099
	8		W1120	0087	24		26-11-21	115-199
	9		W1120	0134	24		26-11-21	001-099
	9		W1120	0086	24		26-11-21	115-199
	10		W1120	0277	22		31-51-21	ALL
	11		W1120	0274	22		31-51-21	ALL
	12		W1120	0196	24		26-15-11	001-099
	12		W1120	0499	24		26-15-11	115-199
	13		W1120	0289	24		26-16-11	001-099
	13		W1120	0341	24		26-16-11	115-199
	14		W1120	0167	24		26-11-22	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 77

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41992J		P54/ /		RCPT (continued)				ALL
	14		W1120	0495	24		26-11-22	115-199
	15		W1120	0236	24		26-16-11	001-099
	15		W1120	0177	24		26-16-11	115-199
D41992P		P054-00/ /		PLUG				001-099
D41992P		P54/ /		PLUG				115-199
	1	UNUSED						001-099
	1		W4220	0016	22		26-11-22	115-199
	2		W4220	0017	22		26-11-22	001-099
	2		W4220	0017	20		26-11-22	115-199
	3		W4220	0016	22		26-11-22	001-099
	3	UNUSED						115-199
	4		W4220	0019	22		26-12-21	ALL
	5		W4220	0020	20		SPARE	001-099
	5	UNUSED						115-199
	6		W4220	0021	22		26-12-21	ALL
	7		W4220	0022	22		26-12-21	ALL
	8		W4220	0023	22		26-11-21	ALL
	9		W4220	0024	22		26-11-21	ALL
	10		W4220	0040	22		31-51-21	ALL
	11		W4220	0041	22		31-51-21	ALL
	12		W4220	0047	22		26-15-11	ALL
	13		W4220	0068	22		26-16-11	ALL
	14		W4220	0018	22		26-11-22	001-099
	14		W4220	0018	20		26-11-22	115-199
	15		W4220	0076	22		26-16-11	ALL
D41993J		E006-01/ /		RCPT				001-099
D41993J		E6-1/ /		RCPT				115-199
	1		W1003	2510B	24		34-57-21	001-099
	1		W1013	2505B	24		34-57-21	115-199
	2		W1003	2510N	24		34-57-21	001-099
	2		W1013	2505N	24		34-57-21	115-199
	3		W1003	FRBL			34-57-21	001-099
	3		W1013	FRAG			34-57-21	115-199
	4		W1003	2511B	24		34-57-21	001-099
	4		W1013	2506B	24		34-57-21	115-199
	5		W1003	2511N	24		34-57-21	001-099
	5		W1013	2506N	24		34-57-21	115-199
	6		W1003	FRBM			34-57-21	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 78

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41993J		E006-01/ /		RCPT (continued)				001-099
D41993J		E6-1/ /		RCPT (continued)				115-199
	6		W1013	FRAH			34-57-21	115-199
	7		W1003	2512B	24		34-57-21	001-099
	7		W1013	2507B	24		34-57-21	115-199
	8		W1003	2512N	24		34-57-21	001-099
	8		W1013	2507N	24		34-57-21	115-199
	9		W1003	FRBN			34-57-21	001-099
	9		W1013	FRAI			34-57-21	115-199
	10		W1003	2028R	22		34-57-21	001-099
	10		W1013	2005R	22		34-57-21	115-199
	11		W1003	2028B	22		34-57-21	001-099
	11		W1013	2005B	22		34-57-21	115-199
	12		W1003	0164	22		34-57-21	001-099
	12		W1013	0051	22		34-57-21	115-199
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	18	W1003	0022	18		34-57-21	001-099
	21	18	W1013	0022	18		34-57-21	115-199
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
			W1003	0168	20		34-57-21	001-099
			W1003	0169	20		34-57-21	001-099
			W1003	0170	20		34-57-21	001-099
			W1003	2510Z			34-57-21	001-099
			W1003	2511Z			34-57-21	001-099
			W1003	2512Z			34-57-21	001-099
			W1003	FRBL			34-57-21	001-099
			W1003	FRBM			34-57-21	001-099
			W1003	FRBN			34-57-21	001-099
			W1013	0045	20		34-57-21	115-199
			W1013	0046	20		34-57-21	115-199
			W1013	0047	20		34-57-21	115-199
			W1013	2505Z			34-57-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 79

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41993J		E006-01/ /		RCPT (continued)				001-099
D41993J		E6-1/ /		RCPT (continued)				115-199
			W1013	2506Z			34-57-21	115-199
			W1013	2507Z			34-57-21	115-199
			W1013	FRAG			34-57-21	115-199
			W1013	FRAH			34-57-21	115-199
			W1013	FRAI			34-57-21	115-199
D41993P		E6-1/ /		PLUG				ALL
	1		W2729	8991R	24		34-57-21	ALL
	2		W2729	8991B	24		34-57-21	ALL
	3		W2729	8991ZA			34-57-21	ALL
	4		W2729	8991Y	24		34-57-21	ALL
	5		W2729	8991G	24		34-57-21	ALL
	6		W2729	8991ZB			34-57-21	ALL
	7		W2729	8991V	24		34-57-21	ALL
	8		W2729	8991K	24		34-57-21	ALL
	9		W2729	8991ZC			34-57-21	ALL
	10		W2729	8991O	22		34-57-21	ALL
	11		W2729	8991N	22		34-57-21	ALL
	12		W2729	8991W	20		34-57-21	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W2729	8991Z			34-57-21	001-099
	21	18	W2729	8991Z			34-57-21	115-199
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D41994J		P37/ /		RCPT				ALL
	1		W1270	0119	22		33-31-11	001-099
	1		W1270	0714	22		74-31-21	115-199
	2	UNUSED						001-099
	2		W1270	0715	22		74-31-21	115-199
	3		W1270	0743	22		76-11-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 80

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41994J		P37/ I		RCPT (continued)				ALL
	4		W1270	0141	22		77-12-42	ALL
	5		W1270	5722	22		30-21-11	ALL
	6		W1270	0729	22		76-11-12	ALL
	7		W1270	0730	22		76-11-12	ALL
	8		W1270	0754	24		78-36-21	001-002, 115-199
	8		W1270	0768	24		78-36-21	003-099
	9		W1270	6550	24		78-36-21	ALL
	10		W1270	0780	20		80-11-21	ALL
	11		W1270	0781	20		80-11-21	ALL
	12		W1270	0784	20		80-11-21	ALL
	13		W1270	0788	24		80-11-21	ALL
	14		W1270	5719	22		30-21-11	ALL
	15		W1270	0852	22		30-21-11	ALL
	16		W1270	6567	24		78-36-21	001-099
	16		W1270	0759	24		78-36-21	115-199
	17		W1270	0196	20		80-11-21	001-099
	17		W1270	0754	24		78-36-21	115-199
	18		W1270	0710	20		74-31-21	001-099
	18		W1270	0710	22		74-31-21	115-199
	19		W1270	0900	20		74-31-21	ALL
	20		W1270	0176	20		29-21-31	ALL
	21		W1270	0448	24		36-11-31	ALL
	22		W1270	0447	24		36-11-31	ALL
	23		W1270	0441	24		36-11-31	ALL
	24		W1270	0446	24		36-11-31	ALL
	25		W1270	0033	24		26-16-11	ALL
	26		W1270	6302	22		30-21-11	ALL
	27		W1270	0575	22		29-22-11	ALL
	28		W1270	0576	22		29-22-11	ALL
	29		W1270	0232	22		29-22-11	001-099
	29		W1270	6567	24		78-36-21	115-199
	30		W1270	6432	22		76-11-12	ALL
	31		W1270	6564	24		78-36-21	001-003
	31		W1270	0118	24		SPARE	004-099
	31		W1270	0287	20		74-31-21	115-199
	32		W1270	0287	20		74-31-21	001-099
	32		W1270	0119	22		33-31-11	115-199
	33		W1270	0286	20		74-31-21	001-099
	33	UNUSED						115-199
	34		W1270	0713	20		74-31-21	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 81

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41994J		P37/ /		RCPT (continued)				ALL
	34	UNUSED						115-199
	35		W1270	0754	24		78-36-21	001-099
	35	UNUSED						115-199
	36		W1270	0759	24		78-36-21	001-099
	36	UNUSED						115-199
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						001-003
	41		W1270	6564	24		78-36-21	004-099, 115-199
	42	UNUSED						003-099
	43	UNUSED						003-099
	44	UNUSED						003-099
	45	UNUSED						003-099
	46	UNUSED						003-099
	47	UNUSED						003-099
	48	UNUSED						003-008
	48		W1270	6519	20		28-22-32	009-099
	49	UNUSED						003-008
	49		W1270	6520	20		28-22-32	009-099
	50	UNUSED						003-008
	50		W1270	6521	20		28-22-32	009-099
	51		W1270	0754	24		78-36-21	003-099
	52	UNUSED						003-099
	53	UNUSED						003-099
	54	UNUSED						003-099
	55	UNUSED						003-099
	CAP	Y	W1270	0118	24		SPARE	003
D41994P		P037-00/ /		PLUG				001-099
D41994P		P37/ /		PLUG				115-199
	1		W4220	0044	20		33-31-11	001-099
	1		W4220	0007	20		74-31-21	115-199
	2	UNUSED						001-099
	2		W4220	0008	20		74-31-21	115-199
	3		W4220	1003	20		76-11-21	ALL
	4		W4220	0025	22		77-12-42	ALL
	5		W4220	0055	22		30-21-11	001-099
	5		W4220	0003	22		30-21-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 82

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41994P		P037-00/ /		PLUG (continued)				001-099
D41994P		P37/ /		PLUG (continued)				115-199
	6		W4220	0009	22		76-11-12	ALL
	7		W4220	0010	22		76-11-12	ALL
	8		W4220	0014	22		78-36-21	ALL
	9		W4220	0015	22		78-36-21	ALL
	10		W4220	0057	20		80-11-21	ALL
	11		W4220	0058	20		80-11-21	ALL
	12		W4220	0059	20		80-11-21	ALL
	13		W4220	0061	24		80-11-21	ALL
	14		W4220	0062	22		30-21-11	ALL
	15		W4220	0064	22		30-21-11	ALL
	16		W4220	0172	24		78-36-21	001-099
	16		W4220	0066	24		78-36-21	115-199
	17		W4220	0060	20		80-11-21	001-099
	17		W4220	0067	24		78-36-21	115-199
	18		W4220	0097	20		74-31-21	001-099
	18		W4220	0051	20		74-31-21	115-199
	19		W4220	0056	20		74-31-21	001-099
	19		W4220	0050	20		74-31-21	115-199
	20		W4220	0142	20		29-21-31	001-099
	20		W4220	0160	20		29-21-31	115-199
	21		W4220	0129	20		36-11-31	ALL
	22		W4220	0128	20		36-11-31	ALL
	23		W4220	0127	20		36-11-31	ALL
	24		W4220	0126	20		36-11-31	ALL
	25		W4220	0076	22		26-16-11	ALL
	26		W4220	0065	22		30-21-11	ALL
	27		W4220	0130	22		29-22-11	ALL
	28		W4220	0134	22		29-22-11	ALL
	29		W4220	0140	22		29-22-11	001-099
	29		W4220	0172	24		78-36-21	115-199
	30		W4220	0170	20		74-31-21	ALL
	31		W4220	0012	24		78-36-21	001-003
	31		W4220	0106	24		SPARE	004-099
	31		W4220	0145	20		74-31-21	115-199
	32		W4220	0145	20		74-31-21	001-099
	32		W4220	0144	20		33-31-11	115-199
	33		W4220	0147	20		74-31-21	001-099
	33	UNUSED						115-199
	34		W4220	0007	20		74-31-21	001-099

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 83

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41994P		P037-00/ /		PLUG (continued)				001-099
D41994P		P37/ /		PLUG (continued)				115-199
	34	UNUSED						115-199
	35		W4220	0067	24		78-36-21	001-099
	35	UNUSED						115-199
	36		W4220	0066	24		78-36-21	001-099
	36	UNUSED						115-199
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						001-003
	41		W4220	0012	24		78-36-21	004-099, 115-199
	42	UNUSED						003-099
	43	UNUSED						003-099
	44	UNUSED						003-099
	45	UNUSED						003-099
	46	UNUSED						003-099
	47	UNUSED						003-099
	48	UNUSED						003-008
	48		W4220	0175	20		28-22-32	009-099
	49	UNUSED						003-008
	49		W4220	0176	20		28-22-32	009-099
	50	UNUSED						003-008
	50		W4220	0177	20		28-22-32	009-099
	51		W4220	0178	20		78-36-21	003-099
	52	UNUSED						003-099
	53	UNUSED						003-099
	54	UNUSED						003-099
	55	UNUSED						003-099
	CAP	Y	W4220	0106	24		SPARE	001-003
D41995J		E6-1/ /		RCPT				115-199
	= A1		W1011	002CX			34-51-11	115-199
	= C1		W1011	002CO			34-51-11	115-199
D41995P		E6-1/ /		PLUG				115-199
	= A1		W2723	001CX			34-51-11	115-199
	= C1		W2723	001CO			34-51-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 84

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41997J		E6-1/ /		RCPT				115-199
	= A1		W1013	002CX			34-51-21	115-199
	= C1		W1013	002CO			34-51-21	115-199
D41997P		E6-1/ /		PLUG				115-199
	= A1		W2725	001CX			34-51-21	115-199
	= C1		W2725	001CO			34-51-21	115-199
D41998J		P37/ /		RCPT				ALL
	1		W1270	0725	18		75-31-11	ALL
	2		W1270	0727	16		75-31-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1270	0174	22		77-11-11	ALL
	8		W1270	6110	24		73-21-22	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
D41998P		P37/ /		PLUG				ALL
	1		W4238	0006	18		75-31-11	ALL
	2		W4238	0007	16		75-31-11	ALL
	3	UNUSED						ALL
	4		W4238	2503B	20		SPARE	001-099
	4	UNUSED						115-199
	5		W4238	2503R	20		SPARE	001-099
	5		W4238	0015	24		SPARE	115-199
	6		W4238	2503Z			SPARE	001-099
	6	UNUSED						115-199
	7		W4238	1002	20		77-11-11	ALL
	8		W4238	0023	24		73-21-22	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
D41999J		E6-1/ /		RCPT				115-199
	1		W1011	2505B	24		34-57-11	115-199
	2		W1011	2505N	24		34-57-11	115-199
	3		W1011	FRAG			34-57-11	115-199
	4		W1011	2506B	24		34-57-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 85

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41999J		E6-1/ /		RCPT (continued)				115-199
	5		W1011	2506N	24		34-57-11	115-199
	6		W1011	FRAH			34-57-11	115-199
	7		W1011	2507B	24		34-57-11	115-199
	8		W1011	2507N	24		34-57-11	115-199
	9		W1011	FRAI			34-57-11	115-199
	10		W1011	2005R	22		34-57-11	115-199
	11		W1011	2005B	22		34-57-11	115-199
	12		W1011	0051	22		34-57-11	115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	18	W1011	0022	18		34-57-11	115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
			W1011	0045	20		34-57-11	115-199
			W1011	0046	20		34-57-11	115-199
			W1011	0047	20		34-57-11	115-199
			W1011	2505Z			34-57-11	115-199
			W1011	2506Z			34-57-11	115-199
			W1011	2507Z			34-57-11	115-199
			W1011	FRAG			34-57-11	115-199
			W1011	FRAH			34-57-11	115-199
			W1011	FRAI			34-57-11	115-199
D41999P		E6-1/ /		PLUG				115-199
	1		W2727	8991R	24		34-57-11	115-199
	2		W2727	8991B	24		34-57-11	115-199
	3		W2727	8991ZA			34-57-11	115-199
	4		W2727	8991Y	24		34-57-11	115-199
	5		W2727	8991G	24		34-57-11	115-199
	6		W2727	8991ZB			34-57-11	115-199
	7		W2727	8991V	24		34-57-11	115-199
	8		W2727	8991K	24		34-57-11	115-199
	9		W2727	8991ZC			34-57-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 86

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D41999P		E6-1/ /		PLUG (continued)				115-199
	10		W2727	8991O	22		34-57-11	115-199
	11		W2727	8991N	22		34-57-11	115-199
	12		W2727	8991W	20		34-57-11	115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	18	W2727	8991Z			34-57-11	115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D41900

Page 87 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42000J		P50/ /		RCPT				ALL
	1		W1140	0284	24		26-18-11	ALL
	2		W1140	0285	24		26-18-11	ALL
	3		W1140	0255	24		26-17-11	ALL
	4		W1140	0253	24		26-17-11	ALL
	5		W1140	0254	24		26-17-11	ALL
	6		W1140	0282	24		26-18-11	ALL
	7		W1140	0288	24		26-18-11	ALL
	8		W1140	0289	24		26-18-11	ALL
	9		W1140	0290	24		26-18-11	ALL
	10		W1140	0291	24		26-18-11	ALL
	11		W1140	2504R	24		77-12-31	ALL
	12		W1140	2504B	24		77-12-31	ALL
	13		W1140	2504Z			77-12-31	ALL
	14		W1140	0328	22		30-21-11	ALL
	15	UNUSED						ALL
	16		W1140	0424	22		29-22-11	ALL
	17	UNUSED						ALL
	18		W1140	0475	22		29-22-11	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W1140	0241	24		26-16-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D42000P		P050-00/ /		PLUG				001-099
D42000P		P50/ /		PLUG				115-199
	1		W4210	0014	22		26-18-11	001-099
	1		W4210	0014	20		26-18-11	115-199
	2		W4210	0015	22		26-18-11	001-099
	2		W4210	0015	20		26-18-11	115-199
	3		W4210	0033	22		26-17-11	001-099
	3		W4210	0033	20		26-17-11	115-199
	4		W4210	0034	22		26-17-11	ALL
	5		W4210	0035	22		26-17-11	ALL
	6		W4210	0043	22		26-18-11	ALL
	7		W4210	0044	22		26-18-11	001-099
	7		W4210	0044	20		26-18-11	115-199
	8		W4210	0045	22		26-18-11	001-099
	8		W4210	0045	20		26-18-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42000P		P050-00/ /		PLUG (continued)				001-099
D42000P		P50/ /		PLUG (continued)				115-199
	9		W4210	0046	22		26-18-11	001-099
	9		W4210	0046	20		26-18-11	115-199
	10		W4210	0047	22		26-18-11	001-099
	10		W4210	0047	20		26-18-11	115-199
	11		W4210	2505R	24		77-12-31	ALL
	12		W4210	2505B	24		77-12-31	ALL
	13		W4210	2505Z			77-12-31	ALL
	14		W4210	0072	22		30-21-11	ALL
	15	UNUSED						ALL
	16		W4210	0096	22		29-22-11	ALL
	17	UNUSED						ALL
	18		W4210	0098	22		29-22-11	ALL
	19	UNUSED						001-099
	19		W4210	0107	22		SPARE	115-199
	20		W4210	0108	22		SPARE	ALL
	21	UNUSED						ALL
	22		W4210	0117	22		26-16-11	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D42001J		E6-1/ /		RCPT-				115-199
	1		W1011	5002R	24		34-51-11	115-199
	2		W1011	5002B	24		34-51-11	115-199
	3		W1011	FRAC			34-51-11	115-199
	4		W1011	2002R	22		34-51-11	115-199
	5		W1011	2002B	22		34-51-11	115-199
	6		W1011	5006R	24		34-22-83	115-199
	7		W1011	5006B	24		34-22-83	115-199
	8		W1011	FRAK			34-22-83	115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11		W1011	0037	22		34-32-11	115-199
	12		W1011	0038	22		34-32-11	115-199
	13		W1011	0039	22		34-32-11	115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
			W1011	0032	20		34-51-11	115-199
			W1011	0049	20		34-22-83	115-199
			W1011	5002Z			34-51-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42001J		E6-1/ /		RCPT- (continued)				115-199
			W1011	5006Z			34-22-83	115-199
			W1011	FRAC			34-51-11	115-199
			W1011	FRAK			34-22-83	115-199
D42001P		E6-1/ /		PLUG				115-199
	1		W2241	5019R	24		34-51-11	115-199
	2		W2241	5019B	24		34-51-11	115-199
	3		W2241	5019Z			34-51-11	115-199
	4		W2241	2004R	22		34-51-11	115-199
	5		W2241	2004B	22		34-51-11	115-199
	6		W2241	5003R	24		34-22-83	115-199
	7		W2241	5003B	24		34-22-83	115-199
	8		W2241	5003Z			34-22-83	115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11		W2241	0047	22		34-32-11	115-199
	12		W2241	0048	22		34-32-11	115-199
	13		W2241	0049	22		34-32-11	115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
D42002J		P50/ /		RCPT				ALL
	1		W1140	0307	24		26-18-21	ALL
	2		W1140	0308	24		26-18-21	ALL
	3		W1140	0251	24		26-18-21	ALL
	4		W1140	0334	22		77-12-42	001-099
	4		W1140	0550	22		77-12-42	115-199
	5		W1140	0311	24		26-18-21	ALL
	6		W1140	0312	24		26-18-21	ALL
	7		W1140	0313	24		26-18-21	ALL
	8		W1140	0314	24		26-18-21	ALL
	9		W1140	0512	22		29-21-31	001-099
	9	18	W1140	0516	18		29-21-31	115-199
	10		W1140	2503R	24		77-12-31	001-099
	10		W1140	0424	22		29-22-11	115-199
	11		W1140	0475	22		29-22-11	001-099
	11	UNUSED						115-199
	12		W1140	0222	24		26-15-11	ALL
	13		W1140	0424	22		29-22-11	001-099
	13		W1140	2503R	24		77-12-31	115-199

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42002J		P50/ /		RCPT (continued)				ALL
	14		W1140	2503B	24		77-12-31	ALL
	15		W1140	2503Z			77-12-31	ALL
	16		W1140	0329	22		30-21-11	ALL
	17		W1140	0330	22		30-21-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W1140	0515	22		29-21-31	001-099
	20	18	W1140	0518	18		29-21-31	115-199
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D42002P D42002P		P050-00/ / P50/ /		PLUG PLUG				001-099 115-199
	1		W4220	0004	22		26-18-21	001-099
	1		W4220	0004	20		26-18-21	115-199
	2		W4220	0005	22		26-18-21	001-099
	2		W4220	0005	20		26-18-21	115-199
	3		W4220	0006	22		26-18-21	ALL
	4		W4220	0025	22		77-12-42	ALL
	5		W4220	0036	22		26-18-21	001-099
	5		W4220	0036	20		26-18-21	115-199
	6		W4220	0037	22		26-18-21	001-099
	6		W4220	0037	20		26-18-21	115-199
	7		W4220	0038	22		26-18-21	001-099
	7		W4220	0038	20		26-18-21	115-199
	8		W4220	0039	22		26-18-21	001-099
	8		W4220	0039	20		26-18-21	115-199
	9		W4220	0100	20		29-21-31	001-099
	9	18	W4220	0100	18		29-21-31	115-199
	10		W4220	2502R	24		77-12-31	001-099
	10		W4220	0133	22		29-22-11	115-199
	11		W4220	0003	22		29-22-11	001-099
	11	UNUSED						115-199
	12		W4220	0047	22		26-15-11	ALL
	13		W4220	0141	22		29-22-11	001-099
	13		W4220	2502R	24		77-12-31	115-199
	14		W4220	2502B	24		77-12-31	ALL
	15		W4220	2502Z			77-12-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 4

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42002P		P050-00/ /		PLUG (continued)				001-099
D42002P		P50/ /		PLUG (continued)				115-199
	16		W4220	0065	22		30-21-11	ALL
	17		W4220	0063	22		30-21-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W4220	0101	20		29-21-31	001-099
	20	18	W4220	0101	18		29-21-31	115-199
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D42003J		E6-1/ /		RCPT-				115-199
	1		W1013	5002R	24		34-51-21	115-199
	2		W1013	5002B	24		34-51-21	115-199
	3		W1013	FRAC			34-51-21	115-199
	4		W1013	2002R	22		34-51-21	115-199
	5		W1013	2002B	22		34-51-21	115-199
	6		W1013	5006R	24		34-22-93	115-199
	7		W1013	5006B	24		34-22-93	115-199
	8		W1013	FRAK			34-22-93	115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
			W1013	0032	20		34-51-21	115-199
			W1013	0049	20		34-22-93	115-199
			W1013	5002Z			34-51-21	115-199
			W1013	5006Z			34-22-93	115-199
			W1013	FRAC			34-51-21	115-199
			W1013	FRAK			34-22-93	115-199
D42003P		E6-1/ /		PLUG				115-199
	1		W2253	5013R	24		34-51-21	115-199
	2		W2253	5013B	24		34-51-21	115-199
	3		W2253	5013Z			34-51-21	115-199
	4		W2253	2006R	22		34-51-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 5

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42003P		E6-1/ /		PLUG (continued)				115-199
	5		W2253	2006B	22		34-51-21	115-199
	6		W2253	5017R	24		34-22-93	115-199
	7		W2253	5017B	24		34-22-93	115-199
	8		W2253	5017Z			34-22-93	115-199
	9		W2253	0096	22		SPARE	115-199
	10		W2253	0097	22		SPARE	115-199
	11		W2253	0098	22		SPARE	115-199
	12		W2253	5021B	24		SPARE	115-199
	13		W2253	5021R	24		SPARE	115-199
	14		W2253	5021Z			SPARE	115-199
	15	UNUSED						115-199
D42004J		P50/ /		RCPT				ALL
	1		W1140	0286	24		26-18-11	ALL
	2		W1140	0287	24		26-18-11	ALL
	3		W1140	0215	24		80-11-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1140	0324	22		77-12-41	ALL
	7		W1140	0325	24		77-12-41	001-099
	7		W1140	0325	22		77-12-41	115-199
	8	UNUSED						001-099
	8		W1140	0475	22		29-22-11	115-199
	9		W1140	0338	22		77-12-41	ALL
	10	UNUSED						ALL
	11		W1140	0544	24		73-21-12	ALL
	12		W1140	0545	24		73-21-12	ALL
	13		W1140	0546	24		73-21-12	ALL
	14		W1140	0547	24		73-21-12	ALL
	15		W1140	0548	24		73-21-12	ALL
	16		W1140	0543	24		73-21-12	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W1140	0389	22		30-11-11	ALL
	24	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 6

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42004P		P050-00/ /		PLUG				ALL
	1		W4228	0032	22		26-18-11	001-099
	1		W4228	0032	20		26-18-11	115-199
	2		W4228	0033	22		26-18-11	001-099
	2		W4228	0033	20		26-18-11	115-199
	3		W4228	0066	24		80-11-11	ALL
	4		W4228	0067	20		SPARE	ALL
	5	UNUSED						001-099
	5		W4228	0068	20		SPARE	115-199
	6		W4228	0090	22		77-12-41	ALL
	7		W4228	0091	24		77-12-41	001-099
	7		W4228	0091	22		77-12-41	115-199
	8		W4228	0174	22		SPARE	001-099
	8		W4228	0174	22		29-22-11	115-199
	9		W4228	0054	22		77-12-41	ALL
	10		W4228	0108	22		SPARE	001-099
	10	UNUSED						115-199
	11		W4228	0127	24		73-21-12	ALL
	12		W4228	0128	24		73-21-12	ALL
	13		W4228	0129	24		73-21-12	ALL
	14		W4228	0130	24		73-21-12	ALL
	15		W4228	0131	24		73-21-12	ALL
	16		W4228	0126	24		73-21-12	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W4228	0261	22		30-11-11	ALL
	24	UNUSED						ALL
D42005J		E006-01/ /		RCPT-				001-099
D42005J		E6-1/ /		RCPT-				115-199
	1		W1001	5005R	24		34-57-11	001-099
	1		W1011	5005R	24		34-57-11	115-199
	2		W1001	5005B	24		34-57-11	001-099
	2		W1011	5005B	24		34-57-11	115-199
	3		W1001	FRAJ			34-57-11	001-099
	3		W1011	FRAJ			34-57-11	115-199
	4	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 7

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42005J		E006-01/ /		RCPT- (continued)				001-099
D42005J		E6-1/ /		RCPT- (continued)				115-199
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1001	0041	22		34-57-11	001-099
	7		W1011	1002	22		34-57-11	115-199
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						001-099
	17	UNUSED						001-099
	18	UNUSED						001-099
	19	UNUSED						001-099
	20	UNUSED						001-099
	21	UNUSED						001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
			W1001	0048	20		34-57-11	001-099
			W1001	5005Z			34-57-11	001-099
			W1001	FRAJ			34-57-11	001-099
			W1011	0048	20		34-57-11	115-199
			W1011	5005Z			34-57-11	115-199
			W1011	FRAJ			34-57-11	115-199
D42005P		E006-01/ /		PLUG-				ALL
	1		W2227	5001R	24		34-57-11	ALL
	2		W2227	5001B	24		34-57-11	ALL
	3		W2227	5001Z			34-57-11	ALL
	4	UNUSED						001-099
	4		W2227	5002R	24		34-57-11	115-199
	5	UNUSED						001-099
	5		W2227	5002B	24		34-57-11	115-199
	6	UNUSED						001-099
	6		W2227	5002Z			34-57-11	115-199
	7		W2227	0003	22		34-57-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 8

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42005P		E006-01/ /		PLUG- (continued)				ALL
	7		W2227	1003	20		34-57-11	115-199
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						001-099
	17	UNUSED						001-099
	18	UNUSED						001-099
	19	UNUSED						001-099
	20	UNUSED						001-099
	21	UNUSED						001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
	DED		W2227	1003Z			34-57-11	115-199
D42006J		P33/ /		RCPT				ALL
	1		W1230	0677	22		28-22-21	001-099
	1		W1232	0058	22		28-22-21	115-199
	2		W1230	0678	22		28-22-21	001-099
	2		W1232	0059	22		28-22-21	115-199
	3		W1230	0673	20		28-22-31	001-008
	3	UNUSED						009-099
	3		W1232	0053	20		28-22-31	115-199
	4		W1230	0691	24		28-22-31	001-008
	4	UNUSED						009-099
	4		W1232	0074	24		28-22-31	115-199
	5		W1230	0198	20		26-21-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W1230	0197	20		26-21-11	ALL
	9	UNUSED						001-099
	9		W1232	0073	20		26-22-21	115-199
	10	UNUSED						ALL
	11	UNUSED						001-099
	11		W1230	0191	20		29-22-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 9

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42006J		P33/ /		RCPT (continued)				ALL
	12	UNUSED						ALL
	13	UNUSED						001-099
	13		W1230	0224	22		32-44-11	115-199
	14	UNUSED						001-099
	14		W1230	0084	20		SPARE	115-199
	15	18	W1230	0022	18		28-21-11	001-099
	15		W1230	0144	22		28-21-11	115-199
	16	18	W1230	0268	18		32-12-12	ALL
	17	UNUSED						001-099
	17	18	W1230	0269	18		32-12-12	115-199
	18		W1230	0466	22		29-11-11	001-099
	18		W1234	0088	22		29-11-11	115-199
	19		W1230	0467	22		29-11-11	001-099
	19		W1234	0089	22		29-11-11	115-199
	20		W1230	0468	22		29-11-11	001-099
	20		W1234	0090	22		29-11-11	115-199
	21		W1230	0469	22		29-11-11	001-099
	21		W1234	0091	22		29-11-11	115-199
	22		W1230	0470	22		29-11-11	001-099
	22		W1234	0092	22		29-11-11	115-199
	23		W1230	0733	20		32-35-11	001-099
	23		W1232	0145	20		32-35-11	115-199
	24		W1230	0734	20		32-35-11	001-099
	24		W1232	0146	20		32-35-11	115-199
	25	UNUSED						001-099
	25		W1230	0256	22		29-22-11	115-199
	26		W1230	0229	22		29-11-12	ALL
	27	UNUSED						ALL
	28	UNUSED						001-099
	28		W1230	0230	22		29-11-12	115-199
	29	UNUSED						001-099
	29		W1230	0227	22		29-11-12	115-199
	30	UNUSED						ALL
	31	18	W1230	0269	18		32-12-12	001-099
	31	UNUSED						115-199
D42006P		P033-00/ /		PLUG-				ALL
	1		W4228	0039	22		28-22-21	ALL
	2		W4228	0041	20		28-22-21	ALL
	3		W4228	0072	20		28-22-31	001-008, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 10

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42006P		P033-00/ /		PLUG- (continued)				ALL
	3		W4228	0072	20		SPARE	009-099
	4		W4228	0141	20		28-22-31	001-008, 115-199
	4		W4228	0141	20		SPARE	009-099
	5		W4228	0064	20		26-21-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W4228	0171	20		26-21-11	ALL
	9	UNUSED						001-099
	9		W4228	0160	20		26-22-21	115-199
	10		W4228	0154	22		SPARE	ALL
	11		W4228	0174	22		SPARE	001-099
	11		W4228	0174	22		29-22-11	115-199
	12		W4228	0194	22		SPARE	ALL
	13		W4228	0195	22		SPARE	001-099
	13		W4228	0195	22		32-44-11	115-199
	14		W4228	0201	22		SPARE	001-099
	14		W4228	0201	20		28-41-21	115-199
	15		W4228	0200	20		28-21-11	001-099
	15		W4228	0200	22		28-21-11	115-199
	16	18	W4228	0248	18		32-12-12	001-099
	16	18	W4228	0252	18		32-12-12	115-199
	17	UNUSED						001-099
	17	18	W4228	0253	18		32-12-12	115-199
	18		W4228	0142	22		29-11-11	ALL
	19		W4228	0143	22		29-11-11	ALL
	20		W4228	0102	22		29-11-11	ALL
	21		W4228	0103	22		29-11-11	ALL
	22		W4228	0099	22		29-11-11	001-099
	22		W4228	0099	20		29-11-11	115-199
	23		W4228	0208	20		32-35-11	ALL
	24		W4228	0209	20		32-35-11	ALL
	25	UNUSED						001-099
	25		W4228	0210	22		29-22-11	115-199
	26		W4228	0104	22		29-11-12	001-099
	26		W4228	0104	20		29-11-12	115-199
	27	UNUSED						001-099
	27		W4228	0105	20		SPARE	115-199
	28	UNUSED						001-099
	28		W4228	0221	22		29-11-12	115-199
	29	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 11

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42006P		P033-00/ /		PLUG- (continued)				ALL
	29		W4228	0222	22		29-11-12	115-199
	30	UNUSED						ALL
	31	18	W4228	0249	18		32-12-12	001-099
	31	UNUSED						115-199
D42007J		E6-1/ /		RCPT-				115-199
	1		W1013	5005R	24		34-57-21	115-199
	2		W1013	5005B	24		34-57-21	115-199
	3		W1013	FRAJ			34-57-21	115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7		W1013	1001	20		34-57-21	115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	DED		W1013	1001Z			34-57-21	115-199
			W1013	0048	20		34-57-21	115-199
			W1013	5005Z			34-57-21	115-199
			W1013	FRAJ			34-57-21	115-199
D42007P		E6-1/ /		PLUG-				115-199
	1		W2229	5001R	24		34-57-21	115-199
	2		W2229	5001B	24		34-57-21	115-199
	3		W2229	5001Z			34-57-21	115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7		W2229	1003	20		34-57-21	115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 12

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42007P		E6-1/ /		PLUG- (continued)				115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	DED		W2229	1003Z			34-57-21	115-199
D42008J		P37/ /		RCPT				ALL
	1	UNUSED						001-099
	1		W1270	0808	20		74-31-21	115-199
	2		W1270	0720	20		74-31-21	001-099
	2		W1270	0723	20		74-31-21	115-199
	3		W1270	0837	22		78-34-21	ALL
	4		W1270	0196	20		80-11-21	001-099
	4		W1270	0805	20		80-11-21	115-199
	5		W1270	0787	20		80-11-21	ALL
	6		W1270	0806	20		80-11-21	ALL
	7		W1270	0791	24		80-11-21	ALL
	8		W1270	0793	24		80-11-21	001-099
	8		W1270	0792	24		80-11-21	115-199
	9		W1270	0023	24		26-11-21	ALL
	10	UNUSED						ALL
	11		W1270	0899	20		74-31-21	ALL
	12		W1270	0721	20		74-31-21	ALL
	13		W1270	0813	20		74-31-21	ALL
	14	UNUSED						001-099
	14		W1270	0811	24		74-31-21	115-199
	15	UNUSED						001-099
	15		W1270	0170	24		29-35-11	115-199
	16		W1270	0284	20		74-31-21	ALL
	17		W1270	0908	20		30-34-22	001-099
	17	18	W1270	8514	18		30-34-22	115-199
	18	18	W1270	0916	18		30-34-22	ALL
	19		W1270	8901	20		30-34-22	ALL
	20		W1270	0279	20		74-31-21	ALL
	21		W1270	0283	20		74-31-21	001-099
	21	UNUSED						115-199
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 13

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42008J		P37/ /		RCPT (continued)				ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D42008P		P037-00/ /		PLUG				ALL
	1	UNUSED						001-099
	1		W4234	0015	20		74-31-21	115-199
	2		W4234	0016	20		74-31-21	ALL
	3		W4234	0017	22		78-34-21	ALL
	4		W4234	0018	20		80-11-21	ALL
	5		W4234	0019	20		80-11-21	ALL
	6		W4234	0020	20		80-11-21	ALL
	7		W4234	0021	24		80-11-21	ALL
	8		W4234	0022	24		80-11-21	ALL
	9		W4234	0010	22		26-11-21	001-099
	9		W4234	0010	20		26-11-21	115-199
	10		W4234	0024	24		SPARE	ALL
	11		W4234	0028	20		74-31-21	ALL
	12		W4234	0029	20		74-31-21	ALL
	13		W4234	0027	20		74-31-21	ALL
	14		W4234	0032	24		SPARE	001-099
	14		W4234	0032	24		74-31-21	115-199
	15		W4234	0033	20		SPARE	001-099
	15		W4234	0033	20		29-35-11	115-199
	16		W4234	0041	20		74-31-21	ALL
	17	18	W4234	2504B	18		30-34-22	ALL
	18	18	W4234	2504R	18		30-34-22	ALL
	19	18	W4234	2504Z			30-34-22	ALL
	20		W4234	1002	20		74-31-21	ALL
	21		W4234	0043	20		74-31-21	001-099
	21	UNUSED						115-199
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 14

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42008P		P037-00/ /		PLUG (continued)				ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D42010J		P37/ /		RCPT				ALL
	1		W1270	0740	22		76-11-12	ALL
	2		W1270	0299	22		76-11-12	001-099
	2		W1270	0731	22		76-11-12	115-199
	3		W1270	0739	24		76-11-12	ALL
	4		W1270	0728	22		76-11-12	ALL
	5		W1270	6546	20		78-34-61	ALL
	6		W1270	1115	20		78-34-61	ALL
	7		W1270	0751	22		78-34-21	ALL
	8		W1270	0750	22		78-34-21	ALL
	9		W1270	0803	20		80-11-21	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12		W1270	0828	22		77-12-42	ALL
	13		W1270	6536	22		78-34-21	001-002, 115-199
	13	UNUSED						003-099
	14	UNUSED						ALL
	15		W1270	0829	22		77-12-42	ALL
	16		W1270	0811	24		74-31-21	001-099
	16		W1270	6068	20		36-11-21	115-199
	17		W1270	0732	24		76-11-12	ALL
	18		W1270	0738	24		76-11-12	ALL
	19		W1270	0022	24		26-11-21	ALL
	20		W1270	0552	22		77-12-42	ALL
	21		W1270	6107	24		73-21-21	ALL
	22		W1270	6106	24		73-21-21	ALL
	23		W1270	0034	22		29-11-21	ALL
	24	16	W1270	0886	16		75-31-11	ALL
	25		W1270	6108	24		73-21-22	ALL
	26		W1270	6109	24		73-21-22	ALL
	27		W1270	0273	24		73-21-22	ALL
	28		W1270	6112	24		73-21-22	ALL
	29		W1270	0267	20		73-21-22	ALL
	30		W1270	0264	24		73-21-22	ALL
	31	UNUSED						ALL
	32		W1270	0104	22		30-11-11	ALL
	33		W1270	0103	22		30-11-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 15

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42010J		P37/ /		RCPT (continued)				ALL
	34		W1270	0706	22		30-11-11	ALL
	35		W1270	6068	20		36-11-21	001-099
	35	UNUSED						115-199
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						001-002, 115-199
	40		W1270	1115Z			78-34-61	003-099
	41	UNUSED						001-002, 115-199
	41		W1270	6536	22		78-34-21	003-099
	DED		W1270	1115Z			78-34-61	001-002, 115-199
D42010P		P037-00/ /		PLUG				ALL
	1		W4236	0001	22		76-11-12	ALL
	2		W4236	0002	22		76-11-12	ALL
	3		W4236	0103	22		76-11-12	ALL
	4		W4236	0102	22		76-11-12	ALL
	5		W4236	1008	22		78-34-61	ALL
	6		W4236	1009	22		78-34-61	ALL
	7		W4236	0055	22		78-34-21	ALL
	8		W4236	0057	22		78-34-21	ALL
	9		W4236	0066	24		80-11-21	ALL
	10	UNUSED						001-099
	10		W4236	0067	20		SPARE	115-199
	11	UNUSED						001-099
	11		W4236	0068	20		SPARE	115-199
	12		W4236	0077	22		77-12-42	ALL
	13		W4236	0262	22		78-34-21	001-002, 115-199
	13		W4236	0134	22		SPARE	003-099
	14	UNUSED						001-099
	14		W4236	0084	20		SPARE	115-199
	15		W4236	0196	22		77-12-42	ALL
	16		W4236	0116	24		74-31-21	001-099
	16		W4236	0231	20		36-11-21	115-199
	17		W4236	0130	24		76-11-12	ALL
	18		W4236	0129	24		76-11-12	ALL
	19		W4236	0195	22		26-11-21	ALL
	20		W4236	0099	22		77-12-42	ALL
	21		W4236	0227	24		73-21-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 16

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42010P		P037-00/ /		PLUG (continued)				ALL
	22		W4236	0006	24		73-21-21	ALL
	23		W4236	0128	22		29-11-21	ALL
	24	16	W4236	0193	16		75-31-11	ALL
	25		W4236	0109	24		73-21-22	ALL
	26		W4236	0228	24		73-21-22	ALL
	27		W4236	0229	24		73-21-22	ALL
	28		W4236	0230	24		73-21-22	ALL
	29	18	W4236	0235	18		73-21-22	ALL
	30		W4236	0234	24		73-21-22	ALL
	31	UNUSED						ALL
	32		W4236	0258	22		30-11-11	ALL
	33		W4236	0259	22		30-11-11	ALL
	34		W4236	0260	22		30-11-11	ALL
	35		W4236	0231	20		36-11-21	001-099
	35	UNUSED						115-199
	36		W4236	0236	20		SPARE	001-099
	36	UNUSED						115-199
	37		W4236	2510B	20		SPARE	001-099
	37	UNUSED						115-199
	38		W4236	2510R	20		SPARE	001-099
	38	UNUSED						115-199
	39		W4236	2510Z			SPARE	001-099
	39	UNUSED						115-199
	40	UNUSED						001-002, 115-199
	40		W4236	FRAT			78-34-61	003-099
	41	UNUSED						001-002, 115-199
	41		W4236	0262	22		78-34-21	003-099
CAP	Y		W4236	0053	22		SPARE	001-002, 115-199
CAP	Y		W4236	0054	22		SPARE	001-002, 115-199
CAP	Y		W4236	0134	22		SPARE	001-002, 115-199
DED			W4236	1008Z			78-34-61	001-002, 115-199
DED			W4236	1009Z			78-34-61	001-002, 115-199
			W4236	1008Z			78-34-61	003-099
			W4236	1009Z			78-34-61	003-099
			W4236	FRAT			78-34-61	003-099
D42011J		E002-01/ /		RCPT-				001-099
D42011J		E2-1/ /		RCPT-				115-199
	1		W1171	5037Z			34-22-81	001-099
	1	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 17

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42011J		E002-01/ /		RCPT- (continued)				001-099
D42011J		E2-1/ /		RCPT- (continued)				115-199
	2		W1171	5037R	24		34-22-81	001-099
	2	UNUSED						115-199
	3		W1171	5037B	24		34-22-81	001-099
	3	UNUSED						115-199
	4		W1171	5038R	24		34-22-81	001-099
	4		W1171	5140R	24		34-22-83	115-199
	5		W1171	5038B	24		34-22-81	001-099
	5		W1171	5140B	24		34-22-83	115-199
	6		W1171	5038Z			34-22-81	001-099
	6		W1171	5140Z			34-22-83	115-199
	7		W1171	0414	22		22-41-13	001-099
	7		W1171	1027	22		22-41-13	115-199
	8		W1171	0010	22		34-22-16	001-099
	8		W1171	0010	24		34-22-16	115-199
	9		W1171	0165	22		34-61-15	ALL
	10	UNUSED						001-099
	10		W1171	3003R	24		34-12-11	115-199
	11	UNUSED						001-099
	11		W1171	3003B	24		34-12-11	115-199
	12	UNUSED						001-099
	12		W1171	3003Y	24		34-12-11	115-199
	13	UNUSED						001-099
	13		W1171	0313	22		34-12-11	115-199
	14	UNUSED						001-099
	14		W1171	0312	22		34-12-11	115-199
	15		W1171	0021	24		34-22-17	ALL
	16		W1171	5060R	24		31-25-11	001-099
	16	UNUSED						115-199
	17		W1171	5060B	24		31-25-11	001-099
	17	UNUSED						115-199
	18		W1171	5060Z			31-25-11	001-099
	18	UNUSED						115-199
	19		W1171	3002R	24		34-12-11	ALL
	20		W1171	3002B	24		34-12-11	ALL
	21		W1171	3002Y	24		34-12-11	ALL
	22		W1171	0311	22		34-12-11	ALL
	23		W1171	0310	22		34-12-11	ALL
	24		W1171	0066	24		34-12-12	ALL
	25		W1171	5170R	24		34-13-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 18

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42011J		E002-01/ /		RCPT- (continued)				001-099
D42011J		E2-1/ /		RCPT- (continued)				115-199
	26		W1171	5170B	24		34-13-11	ALL
	27		W1171	5170Z			34-13-11	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31		W1171	0106	22		22-14-11	ALL
	32		W1171	0013	24		34-22-17	ALL
	33		W1171	0015	24		34-22-17	ALL
	34		W1171	0017	24		34-22-17	ALL
	35		W1171	0019	24		34-22-17	ALL
	36		W1171	0353	22		32-42-11	ALL
	37	UNUSED						ALL
	38		W1171	0388	22		34-61-15	001-099
	38		W1171	0714	22		34-61-15	115-199
	39		W1171	0887	22		34-12-61	ALL
	40		W1171	0886	22		34-12-61	ALL
	41	UNUSED						ALL
	42	UNUSED						115-199
	43	UNUSED						115-199
	44		W1171	5060R	24		31-25-11	115-199
	45		W1171	5060B	24		31-25-11	115-199
	46		W1171	5060Z			31-25-11	115-199
	47		W1171	5057R	24		34-55-11	115-199
	48		W1171	5057B	24		34-55-11	115-199
	49		W1171	5057Z			34-55-11	115-199
	50		W1171	5186R	24		34-22-28	115-199
	51		W1171	5186B	24		34-22-28	115-199
	52		W1171	FRLF			34-22-28	115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
	DED		W1171	1027Z			22-41-13	115-199
			W1171	0686	22		34-22-28	115-199
			W1171	5186Z			34-22-28	115-199
			W1171	FRLF			34-22-28	115-199
D42011P		E002-01/ /		PLUG				001-099
D42011P		E2-1/ /		PLUG				115-199
	1		W2241	5001Z			34-22-81	001-099

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 19

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42011P		E002-01/ /		PLUG (continued)				001-099
D42011P		E2-1/ /		PLUG (continued)				115-199
	1		W2241	5001Z			SPARE	115-199
	2		W2241	5001R	24		34-22-81	001-099
	2		W2241	5001R	24		SPARE	115-199
	3		W2241	5001B	24		34-22-81	001-099
	3		W2241	5001B	24		SPARE	115-199
	4		W2241	5002R	24		34-22-81	001-099
	4		W2241	5002R	24		34-22-83	115-199
	5		W2241	5002B	24		34-22-81	001-099
	5		W2241	5002B	24		34-22-83	115-199
	6		W2241	5002Z			34-22-81	001-099
	6		W2241	5002Z			34-22-83	115-199
	7		W2241	0011	22		22-41-13	ALL
	8		W2241	0023	22		34-22-16	001-099
	8		W2241	0023	24		34-22-16	115-199
	9		W2241	0013	22		34-61-15	ALL
	10		W2241	3002R	24		SPARE	001-099
	10		W2241	3002R	24		34-12-11	115-199
	11		W2241	3002B	24		SPARE	001-099
	11		W2241	3002B	24		34-12-11	115-199
	12		W2241	3002Y	24		SPARE	001-099
	12		W2241	3002Y	24		34-12-11	115-199
	13		W2241	2002R	22		SPARE	001-099
	13		W2241	2002R	22		34-12-11	115-199
	14		W2241	2002B	22		SPARE	001-099
	14		W2241	2002B	22		34-12-11	115-199
	15		W2241	0057	24		34-22-17	ALL
	16		W2241	5009R	24		31-25-11	001-099
	16	UNUSED						115-199
	17		W2241	5009B	24		31-25-11	001-099
	17	UNUSED						115-199
	18		W2241	5009Z			31-25-11	001-099
	18	UNUSED						115-199
	19		W2241	3001R	24		34-12-11	ALL
	20		W2241	3001B	24		34-12-11	ALL
	21		W2241	3001Y	24		34-12-11	ALL
	22		W2241	2001R	22		34-12-11	ALL
	23		W2241	2001B	22		34-12-11	ALL
	24		W2241	0001	24		34-12-12	ALL
	25		W2241	5007R	24		34-13-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 20

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42011P		E002-01/ /		PLUG (continued)				001-099
D42011P		E2-1/ /		PLUG (continued)				115-199
	26		W2241	5007B	24		34-13-11	ALL
	27		W2241	5007Z			34-13-11	ALL
	28		W2241	5008R	24		SPARE	ALL
	29		W2241	5008B	24		SPARE	ALL
	30		W2241	5008Z			SPARE	ALL
	31		W2241	0006	22		22-14-11	ALL
	32		W2241	0014	24		34-22-17	ALL
	33		W2241	0019	24		34-22-17	ALL
	34		W2241	0015	24		34-22-17	ALL
	35		W2241	0016	24		34-22-17	ALL
	36		W2241	0024	22		32-42-11	ALL
	37	UNUSED						001-099
	37		W2241	0032	22		SPARE	115-199
	38		W2241	0033	22		34-61-15	ALL
	39		W2241	0029	22		34-12-61	ALL
	40		W2241	0030	22		34-12-61	ALL
	41	UNUSED						001-099
	41		W2241	2512R	24		SPARE	115-199
	42		W2241	2512B	24		SPARE	115-199
	43		W2241	2512Z			SPARE	115-199
	44		W2241	5009R	24		31-25-11	115-199
	45		W2241	5009B	24		31-25-11	115-199
	46		W2241	5009Z			31-25-11	115-199
	47		W2241	5028R	24		34-55-11	115-199
	48		W2241	5028B	24		34-55-11	115-199
	49		W2241	5028Z			34-55-11	115-199
	50		W2241	5010R	24		34-22-28	115-199
	51		W2241	5010B	24		34-22-28	115-199
	52		W2241	5010Z			34-22-28	115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D42012J		E003-04/ /		RCPT				ALL
	1		W1280	2052R	22		78-34-11	ALL
	2		W1280	2052B	22		78-34-11	ALL
	3		W1280	2051R	22		78-34-11	ALL
	4		W1280	2051B	22		78-34-11	ALL
	5		W1280	0147	22		78-34-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 21

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42012J		E003-04/ /		RCPT (continued)				ALL
	6		W1280	0077	24		31-51-33	ALL
	7		W1280	0189	24		31-51-21	ALL
	8		W1280	0190	24		31-51-21	ALL
	9	UNUSED						001-002, 115-199
	9		W1280	0150	22		78-34-11	003-099
	10		W1280	0079	24		31-51-33	ALL
	11	UNUSED						001-099
	11		W1280	5003R	24		31-31-23	115-199
	12		W1280	5003B	20		31-31-44	001-099
	12		W1280	5003B	24		31-31-23	115-199
	13	UNUSED						001-099
	13		W1280	5003Z			31-31-23	115-199
	14		W1280	0360	20		28-25-11	ALL
	15		W1280	0249	20		28-21-11	001-099
	15		W1280	0249	22		28-21-11	115-199
	16		W1280	0059	20		32-35-11	ALL
	17		W1280	0447	20		32-35-11	ALL
	18		W1280	0062	22		32-42-11	ALL
	19		W1280	0448	20		32-35-11	ALL
	20		W1280	0445	20		32-12-12	ALL
	21		W1280	0150	22		78-34-11	001-002
	21	UNUSED						003-099
	21		W1280	0446	20		32-12-12	115-199
	22		W1280	0446	20		32-12-12	001-099
	22	UNUSED						115-199
	23		W1280	5003R	20		31-31-44	001-099
	23		W1280	0150	22		78-34-11	115-199
	24		W1280	5003Z			31-31-44	001-099
	24	UNUSED						115-199
D42012P		E003-04/ /		PLUG				ALL
	1		W4228	2001R	22		78-34-11	ALL
	2		W4228	2001B	22		78-34-11	ALL
	3		W4228	2002R	22		78-34-11	ALL
	4		W4228	2002B	22		78-34-11	ALL
	5		W4228	0045	22		78-34-11	ALL
	6		W4228	0087	22		31-51-33	ALL
	7		W4228	0088	22		31-51-21	ALL
	8		W4228	0089	22		31-51-21	ALL
	9		W4228	0097	20		SPARE	001-002, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 22

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42012P		E003-04/ /		PLUG (continued)				ALL
	9		W4228	0078	22		78-34-11	003-099
	10		W4228	0136	24		31-51-33	ALL
	11		W4228	0149	22		SPARE	001-099
	11		W4228	5003R	24		31-31-23	115-199
	12		W4228	5003B	20		31-31-44	001-099
	12		W4228	5003B	24		31-31-23	115-199
	13		W4228	0258	20		SPARE	001-099
	13		W4228	5003Z			31-31-23	115-199
	14		W4228	0202	20		28-25-11	ALL
	15		W4228	0200	20		28-21-11	001-099
	15		W4228	0200	22		28-21-11	115-199
	16		W4228	0208	20		32-35-11	ALL
	17		W4228	0209	20		32-35-11	ALL
	18		W4228	0175	22		32-42-11	ALL
	19		W4228	0250	20		32-35-11	001-099
	19		W4228	0251	20		32-35-11	115-199
	20	18	W4228	0248	18		32-12-12	001-099
	20	18	W4228	0252	18		32-12-12	115-199
	21		W4228	0078	22		78-34-11	001-002
	21	UNUSED						003-099
	21	18	W4228	0253	18		32-12-12	115-199
	22	18	W4228	0249	18		32-12-12	001-099
	22	UNUSED						115-199
	23		W4228	5003R	20		31-31-44	001-099
	23		W4228	0078	22		78-34-11	115-199
	24		W4228	5003Z			31-31-44	001-099
	24	UNUSED						115-199
D42013J		E002-01/ /		RCPT-				001-099
D42013J		E2-1/ /		RCPT-				115-199
	1		W1171	0207	22		22-11-12	ALL
	2	UNUSED						001-099
	2		W1171	0211	22		22-11-12	115-199
	3		W1171	0208	22		22-11-12	ALL
	4		W1171	0213	22		22-11-12	ALL
	5		W1171	5099R	24		22-12-11	ALL
	6		W1171	5099B	24		22-12-11	ALL
	7		W1171	5099Z			22-12-11	ALL
	8		W1171	5109R	24		22-13-11	ALL
	9		W1171	5109B	24		22-13-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 23

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42013J		E002-01/ /		RCPT- (continued)				001-099
D42013J		E2-1/ /		RCPT- (continued)				115-199
	10		W1171	5109Z			22-13-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1171	0093	22		34-51-11	ALL
	15		W1171	5055R	24		34-51-11	ALL
	16		W1171	5055B	24		34-51-11	ALL
	17		W1171	5055Z			34-51-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W1171	0356	22		22-14-11	001-099
	24	UNUSED						115-199
	25		W1171	0359	22		22-14-11	001-099
	25	UNUSED						115-199
	26		W1171	0360	22		22-14-11	001-099
	26	UNUSED						115-199
	27		W1171	0071	22		34-22-16	001-099
	27	UNUSED						115-199
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						001-099
	31		W1171	0363	22		34-12-12	115-199
	32	UNUSED						001-099
	32		W1171	0364	22		34-12-12	115-199
	33	UNUSED						001-099
	33		W1171	0356	22		22-14-11	115-199
	34	UNUSED						001-099
	34		W1171	0359	22		22-14-11	115-199
	35	UNUSED						001-099
	35		W1171	0360	22		22-14-11	115-199
	36	UNUSED						001-099
	36		W1171	0071	22		34-22-16	115-199
	37	UNUSED						ALL
	38	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 24

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42013J		E002-01/ /		RCPT- (continued)				001-099
D42013J		E2-1/ /		RCPT- (continued)				115-199
	39	UNUSED						ALL
	40	UNUSED						ALL
	41		W1171	0454	24		34-45-01	001-002, 115-199
	41	UNUSED						003-099
	42		W1171	5189R	24		34-45-01	001-002, 115-199
	42	UNUSED						003-099
	43		W1171	5189B	24		34-45-01	001-002, 115-199
	43	UNUSED						003-099
	44		W1171	FRNL			34-45-01	001-002, 115-199
	44	UNUSED						003-099
	45	UNUSED						001-099
	45		W1171	0455	24		34-45-01	115-199
	46		W1171	0456	24		34-45-01	ALL
	47	UNUSED						ALL
	48		W1171	5190R	24		34-45-01	ALL
	49		W1171	5190B	24		34-45-01	ALL
	50		W1171	5190Z			34-45-01	ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						001-099
	53		W1171	0708	22		34-61-16	115-199
	54	UNUSED						001-099
	54		W1171	0724	24		34-61-18	115-199
	55	UNUSED						ALL
			W1171	0477	22		34-45-01	001-002, 115-199
			W1171	5189Z			34-45-01	001-002, 115-199
			W1171	FRNL			34-45-01	001-002, 115-199
D42013P		E002-01/ /		PLUG-				001-099
D42013P		E2-1/ /		PLUG-				115-199
	1		W2241	0058	22		22-11-12	ALL
	2		W2241	0059	22		SPARE	001-099
	2		W2241	0059	22		22-11-12	115-199
	3		W2241	0060	22		22-11-12	ALL
	4		W2241	0061	22		22-11-12	ALL
	5		W2241	5015R	24		22-12-11	ALL
	6		W2241	5015B	24		22-12-11	ALL
	7		W2241	5015Z			22-12-11	ALL
	8		W2241	5016R	24		22-13-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 25

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42013P		E002-01/ /		PLUG- (continued)				001-099
D42013P		E2-1/ /		PLUG- (continued)				115-199
	9		W2241	5016B	24		22-13-11	ALL
	10		W2241	5016Z			22-13-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W2241	0063	22		34-51-11	ALL
	15		W2241	5018R	24		34-51-11	ALL
	16		W2241	5018B	24		34-51-11	ALL
	17		W2241	5018Z			34-51-11	ALL
	18	UNUSED						ALL
	19	UNUSED						001-099
	19		W2241	2526R	24		SPARE	115-199
	20	UNUSED						001-099
	20		W2241	2526B	24		SPARE	115-199
	21		W2241	5021R	24		SPARE	001-099
	21		W2241	2526Z			SPARE	115-199
	22		W2241	5021B	24		SPARE	001-099
	22		W2241	0064	22		SPARE	115-199
	23		W2241	5021Z			SPARE	001-099
	23		W2241	0065	22		SPARE	115-199
	24		W2241	0103	22		22-14-11	001-099
	24	UNUSED						115-199
	25		W2241	0104	22		22-14-11	001-099
	25		W2241	5021R	24		SPARE	115-199
	26		W2241	0105	22		22-14-11	001-099
	26		W2241	5021B	24		SPARE	115-199
	27		W2241	0046	22		34-22-16	001-099
	27		W2241	5021Z			SPARE	115-199
	28	UNUSED						001-099
	28		W2241	2525R	24		SPARE	115-199
	29	UNUSED						001-099
	29		W2241	2525B	24		SPARE	115-199
	30	UNUSED						001-099
	30		W2241	2525Z			SPARE	115-199
	31	UNUSED						001-099
	31		W2241	0091	22		34-12-12	115-199
	32	UNUSED						001-099
	32		W2241	0092	22		34-12-12	115-199
	33	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 26

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42013P		E002-01/ /		PLUG- (continued)				001-099
D42013P		E2-1/ /		PLUG- (continued)				115-199
	33		W2241	0103	22		22-14-11	115-199
	34	UNUSED						001-099
	34		W2241	0104	22		22-14-11	115-199
	35	UNUSED						001-099
	35		W2241	0105	22		22-14-11	115-199
	36	UNUSED						001-099
	36		W2241	0046	22		34-22-16	115-199
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41		W2241	0120	24		34-45-01	001-002, 115-199
	41	UNUSED						003-099
	42		W2241	5030R	24		34-45-01	001-002, 115-199
	42	UNUSED						003-099
	43		W2241	5030B	24		34-45-01	001-002, 115-199
	43	UNUSED						003-099
	44		W2241	5030Z			34-45-01	001-002, 115-199
	44	UNUSED						003-099
	45		W2241	0121	24		34-45-01	001-002, 115-199
	45	UNUSED						003-099
	46		W2241	0122	24		34-45-01	ALL
	47		W2241	0123	24		34-45-01	ALL
	48		W2241	5031R	24		34-45-01	ALL
	49		W2241	5031B	24		34-45-01	ALL
	50		W2241	5031Z			34-45-01	ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						001-099
	53		W2241	0114	24		34-61-16	115-199
	54	UNUSED						001-099
	54		W2241	0134	24		34-61-18	115-199
	55	UNUSED						ALL
D42014J		E003-04/ /		RCPT				ALL
	1		W1280	0076	24		31-51-33	ALL
	2		W1280	0152	22		78-34-21	ALL
	3		W1280	2054R	22		78-34-21	ALL
	4		W1280	2054B	22		78-34-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 27

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42014J		E003-04/ /		RCPT (continued)				ALL
	5		W1280	2053R	22		78-34-21	ALL
	6		W1280	2053B	22		78-34-21	ALL
	7		W1280	2503Z			31-31-63	001-099
	7	UNUSED						115-199
	8		W1280	0080	24		31-51-33	ALL
	9	UNUSED						001-099
	9		W1280	5004R	24		31-31-23	115-199
	10		W1280	5004B	20		31-31-44	001-099
	10		W1280	5004B	24		31-31-23	115-199
	11		W1280	5004Z			31-31-44	001-099
	11		W1280	5004Z			31-31-23	115-199
	12		W1280	0151	24		32-41-11	ALL
	13		W1280	0062	22		32-42-11	ALL
	14		W1280	2503R	22		31-31-63	001-099
	14	UNUSED						115-199
	15	UNUSED						ALL
	16	16	W1280	0451	16		75-31-11	ALL
	17	16	W1280	0452	16		75-31-11	ALL
	18		W1280	0372	22		32-42-11	ALL
	19		W1280	5004R	20		31-31-44	001-099
	19	UNUSED						115-199
	20		W1280	2503B	22		31-31-63	001-099
	20	UNUSED						115-199
	21		W1280	0155	22		78-34-21	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
D42014P		E003-04/ /		PLUG				ALL
	1		W4236	0025	22		31-51-33	ALL
	2		W4236	0055	22		78-34-21	ALL
	3		W4236	2001R	22		78-34-21	ALL
	4		W4236	2001B	22		78-34-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 28

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42014P		E003-04/ /		PLUG (continued)				ALL
	5		W4236	2002R	22		78-34-21	ALL
	6		W4236	2002B	22		78-34-21	ALL
	7		W4236	2511Z			31-31-63	001-099
	7		W4236	0089	20		SPARE	115-199
	8		W4236	0123	24		31-51-33	ALL
	9		W4236	0089	20		SPARE	001-099
	9		W4236	5003R	24		31-31-23	115-199
	10		W4236	5003B	20		31-31-44	001-099
	10		W4236	5003B	24		31-31-23	115-199
	11		W4236	5003Z			31-31-44	001-099
	11		W4236	5003Z			31-31-23	115-199
	12		W4236	0151	22		32-41-11	ALL
	13		W4236	0154	20		32-42-11	ALL
	14		W4236	2511R	22		31-31-63	001-099
	14		W4236	0152	20		SPARE	115-199
	15		W4236	0153	24		SPARE	ALL
	16	16	W4236	0255	16		75-31-11	ALL
	17	16	W4236	0256	16		75-31-11	ALL
	18		W4236	0189	20		32-42-11	ALL
	19		W4236	5003R	20		31-31-44	001-099
	19	UNUSED						115-199
	20		W4236	2511B	22		31-31-63	001-099
	20	UNUSED						115-199
	21		W4236	0098	22		78-34-21	ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
D42015J		E002-04/ /		RCPT				001-099
D42015J		E2-4/ /		RCPT				115-199
	1	UNUSED						ALL
	2		W1177	0015	24		34-21-11	ALL
	3	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 29

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42015J		E002-04/ /		RCPT (continued)				001-099
D42015J		E2-4/ /		RCPT (continued)				115-199
	4	UNUSED						ALL
	5		W1177	5025R	24		34-22-82	ALL
	6		W1177	5025B	24		34-22-82	ALL
	7		W1177	5025Z			34-22-82	ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
D42015P		E002-04/ /		PLUG				001-099
D42015P		E2-4/ /		PLUG				115-199
	1	UNUSED						ALL
	2		W2241	0002	24		34-21-11	ALL
	3	UNUSED						001-099
	3		W2241	0090	22		SPARE	115-199
	4	UNUSED						ALL
	5		W2241	5005R	24		34-22-82	ALL
	6		W2241	5005B	24		34-22-82	ALL
	7		W2241	5005Z			34-22-82	ALL
	8		W2241	5014R	24		SPARE	001-099
	8	UNUSED						115-199
	9		W2241	5014B	24		SPARE	001-099
	9	UNUSED						115-199
	10		W2241	5014Z			SPARE	001-099
	10	UNUSED						115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
D42016J		E003-04/ /		RCPT				ALL
	1		W1280	2021R	24		78-36-11	ALL
	2		W1280	2021B	24		78-36-11	ALL
	3		W1280	2023R	24		78-36-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 30

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42016J		E003-04/ /		RCPT (continued)				ALL
	3		W1280	2022R	24		78-36-11	115-199
	4		W1280	2023B	24		78-36-11	001-099
	4		W1280	2022B	24		78-36-11	115-199
	5		W1280	2022R	24		78-36-11	001-099
	5		W1280	2023R	24		78-36-11	115-199
	6		W1280	2022B	24		78-36-11	001-099
	6		W1280	2023B	24		78-36-11	115-199
	7		W1280	2024R	24		78-36-11	ALL
	8		W1280	2024B	24		78-36-11	ALL
	9		W1280	0352	22		29-21-31	ALL
	10		W1280	0353	22		29-21-31	ALL
	11		W1280	0048	24		78-36-11	ALL
	12		W1280	0049	24		78-36-11	ALL
	13		W1280	0191	24		31-51-21	ALL
	14		W1280	0078	24		31-51-33	ALL
	15		W1280	0056	24		78-36-11	ALL
	16	UNUSED						ALL
	17		W1280	0070	20		32-35-11	ALL
	18		W1280	0106	22		32-61-21	ALL
	19		W1280	0334	22		32-44-11	ALL
	20		W1280	0335	22		32-44-11	ALL
	21		W1280	0337	22		32-44-11	ALL
	22		W1280	0336	22		32-44-11	ALL
	23	UNUSED						001-099
	23		W1280	0267	22		32-42-11	115-199
	24	UNUSED						001-099
	24		W1280	0266	22		32-42-11	115-199
	25	UNUSED						ALL
	26		W1280	0360	20		28-25-11	ALL
	27	UNUSED						001-099
	27		W1280	0454	20		32-35-11	115-199
	28		W1280	0377	22		29-22-11	ALL
	29		W1280	0490	20		29-21-31	ALL
	30	UNUSED						ALL
	31		W1280	0449	22		32-61-21	ALL
	32	UNUSED						001-099
	33	UNUSED						001-099
	34	UNUSED						001-099
	35	UNUSED						001-099
	36	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 31

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42016J		E003-04/ /		RCPT (continued)				ALL
	37	UNUSED						001-099
	38	UNUSED						001-099
	39	UNUSED						001-099
	40	UNUSED						001-099
	41		W1280	0477	24		29-33-11	001-099
	42		W1280	0478	24		29-33-11	001-099
	43		W1280	0479	24		29-33-11	001-099
	44		W1280	0459	24		29-33-11	001-099
	45		W1280	0460	22		29-33-11	001-099
	46		W1280	0461	24		29-33-11	001-099
	47		W1280	0455	24		29-33-11	001-099
	48		W1280	0456	24		29-33-11	001-099
	49		W1280	0457	24		29-33-11	001-099
	50	UNUSED						001-099
	51	UNUSED						001-099
	52	UNUSED						001-099
	53		W1280	0482	24		29-33-11	001-099
	54	UNUSED						001-099
	55	UNUSED						001-099
D42016P		E003-04/ /		PLUG				001-099
D42016P		E3-4/ /		PLUG				115-199
	1		W4210	2001R	22		78-36-11	ALL
	2		W4210	2001B	22		78-36-11	ALL
	3		W4210	2002R	22		78-36-11	ALL
	4		W4210	2002B	22		78-36-11	ALL
	5		W4210	2003R	22		78-36-11	ALL
	6		W4210	2003B	22		78-36-11	ALL
	7		W4210	2004R	22		78-36-11	ALL
	8		W4210	2004B	22		78-36-11	ALL
	9		W4210	0132	22		29-21-31	ALL
	10		W4210	0133	22		29-21-31	ALL
	11		W4210	0024	24		78-36-11	ALL
	12		W4210	0025	24		78-36-11	ALL
	13		W4210	0048	22		31-51-21	ALL
	14		W4210	0057	24		31-51-33	ALL
	15		W4210	0074	24		78-36-11	ALL
	16	UNUSED						ALL
	17		W4210	0088	20		32-35-11	ALL
	18		W4210	0089	22		32-61-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 32

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42016P		E003-04/ /		PLUG (continued)				001-099
D42016P		E3-4/ /		PLUG (continued)				115-199
	19		W4210	0112	22		32-44-11	ALL
	20		W4210	0113	22		32-44-11	001-099
	20		W4210	0115	22		32-44-11	115-199
	21		W4210	0114	22		32-44-11	ALL
	22		W4210	0115	22		32-44-11	001-099
	22		W4210	0113	22		32-44-11	115-199
	23	UNUSED						001-099
	23		W4210	0127	22		32-42-11	115-199
	24	UNUSED						001-099
	24		W4210	0128	22		32-42-11	115-199
	25	UNUSED						ALL
	26		W4210	0136	20		28-25-11	ALL
	27		W4210	0082	22		SPARE	001-099
	27		W4210	0156	20		32-35-11	115-199
	28		W4210	0097	22		29-22-11	ALL
	29		W4210	0129	20		29-21-31	ALL
	30	UNUSED						ALL
	31		W4210	0152	22		32-61-21	ALL
	32	UNUSED						001-099
	33	UNUSED						001-099
	34	UNUSED						001-099
	35	UNUSED						001-099
	36	UNUSED						001-099
	37	UNUSED						001-099
	38	UNUSED						001-099
	39	UNUSED						001-099
	40	UNUSED						001-099
	41		W4210	0049	24		29-33-11	001-099
	42		W4210	0050	24		29-33-11	001-099
	43		W4210	0051	24		29-33-11	001-099
	44		W4210	0031	20		29-33-11	001-099
	45		W4210	0027	20		29-33-11	001-099
	46		W4210	0032	20		29-33-11	001-099
	47		W4210	0121	22		29-33-11	001-099
	48		W4210	0120	22		29-33-11	001-099
	49		W4210	0122	22		29-33-11	001-099
	50	UNUSED						001-099
	51	UNUSED						001-099
	52	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 33

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42016P		E003-04/ /		PLUG (continued)				001-099
D42016P		E3-4/ /		PLUG (continued)				115-199
	53		W4210	0102	24		29-33-11	001-099
	54	UNUSED						001-099
	55	UNUSED						001-099
D42018J		E003-04/ /		RCPT				ALL
	1		W1280	2025R	24		78-36-21	ALL
	2		W1280	2025B	24		78-36-21	ALL
	3		W1280	2027R	24		78-36-21	001-099
	3		W1280	2026R	24		78-36-21	115-199
	4		W1280	2027B	24		78-36-21	001-099
	4		W1280	2026B	24		78-36-21	115-199
	5		W1280	2026R	24		78-36-21	001-099
	5		W1280	2027R	24		78-36-21	115-199
	6		W1280	2026B	24		78-36-21	001-099
	6		W1280	2027B	24		78-36-21	115-199
	7		W1280	0146	24		32-41-11	001-099
	7		W1280	2028R	24		78-36-21	115-199
	8		W1280	2028B	24		78-36-21	ALL
	9		W1280	0052	24		78-36-21	ALL
	10		W1280	0053	24		78-36-21	ALL
	11		W1280	0192	24		31-51-21	ALL
	12		W1280	0193	24		31-51-21	ALL
	13		W1280	0081	24		31-51-41	ALL
	14		W1280	0490	20		29-21-31	ALL
	15		W1280	2028R	24		78-36-21	001-099
	15	UNUSED						115-199
	16		W1280	0054	24		78-36-21	ALL
	17		W1280	0058	20		32-35-11	ALL
	18		W1280	0063	20		32-12-12	ALL
	19		W1280	0071	20		32-35-11	ALL
	20		W1280	0334	22		32-44-11	ALL
	21		W1280	0335	22		32-44-11	ALL
	22		W1280	0336	22		32-44-11	ALL
	23		W1280	0337	22		32-44-11	ALL
	24		W1280	0352	22		29-21-31	ALL
	25		W1280	0444	20		32-12-12	001-099
	25	UNUSED						115-199
	26		W1280	0141	24		32-41-11	ALL
	27		W1280	0142	24		32-41-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 34

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42018J		E003-04/ /		RCPT (continued)				ALL
	28		W1280	0143	24		32-41-11	ALL
	29		W1280	0377	22		29-22-11	ALL
	30		W1280	0353	22		29-21-31	ALL
	31		W1280	0445	20		32-12-12	001-099
	31		W1280	0320	24		31-31-31	115-199
	32	UNUSED						001-099
	32		W1280	0321	24		31-31-31	115-199
	33	UNUSED						001-099
	33		W1280	0322	24		31-31-31	115-199
	34	UNUSED						001-099
	34		W1280	0444	20		32-12-12	115-199
	35	UNUSED						001-099
	35		W1280	0445	20		32-12-12	115-199
	36	UNUSED						ALL
	37	UNUSED						001-099
	37		W1280	0146	24		32-41-11	115-199
	38		W1280	0462	24		29-33-11	001-099
	38	UNUSED						115-199
	39		W1280	0463	24		29-33-11	001-099
	39	UNUSED						115-199
	40		W1280	0464	24		29-33-11	001-099
	40	UNUSED						115-199
	41		W1280	0465	24		29-33-11	001-099
	41	UNUSED						115-199
	42		W1280	0471	24		29-33-11	001-099
	43		W1280	0472	24		29-33-11	001-099
	44		W1280	0473	24		29-33-11	001-099
	45	UNUSED						001-099
	46	UNUSED						001-099
	47	UNUSED						001-099
	48	UNUSED						001-099
	49	UNUSED						001-099
	50	UNUSED						001-099
	51	UNUSED						001-099
	52	UNUSED						001-099
	53	UNUSED						001-099
	54	UNUSED						001-099
	55	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 35

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42018P D42018P		E003-04/ / E3-4/ /		PLUG PLUG				001-099 115-199
	1		W4220	2001R	22		78-36-21	ALL
	2		W4220	2001B	22		78-36-21	ALL
	3		W4220	2002R	22		78-36-21	ALL
	4		W4220	2002B	22		78-36-21	ALL
	5		W4220	2003R	22		78-36-21	ALL
	6		W4220	2003B	22		78-36-21	ALL
	7		W4220	0087	24		32-41-11	001-099
	7		W4220	2004R	22		78-36-21	115-199
	8		W4220	2004B	22		78-36-21	ALL
	9		W4220	0172	24		78-36-21	ALL
	10		W4220	0013	24		78-36-21	ALL
	11		W4220	0040	22		31-51-21	ALL
	12		W4220	0041	22		31-51-21	ALL
	13		W4220	0042	22		31-51-41	ALL
	14		W4220	0110	20		29-21-31	ALL
	15		W4220	2004R	22		78-36-21	001-099
	15		W4220	2005B	20		SPARE	115-199
	16		W4220	0066	24		78-36-21	ALL
	17	18	W4220	0070	18		32-35-11	001-099
	17		W4220	0070	20		32-35-11	115-199
	18		W4220	0071	20		32-12-12	ALL
	19		W4220	0072	20		32-35-11	ALL
	20		W4220	0091	22		32-44-11	ALL
	21		W4220	0092	22		32-44-11	ALL
	22		W4220	0093	22		32-44-11	ALL
	23		W4220	0096	22		32-44-11	ALL
	24		W4220	0108	22		29-21-31	ALL
	25	18	W4220	0083	18		32-12-12	001-099
	25	UNUSED						115-199
	26		W4220	0084	22		32-41-11	ALL
	27		W4220	0085	22		32-41-11	ALL
	28		W4220	0086	22		32-41-11	ALL
	29		W4220	0130	22		29-22-11	ALL
	30		W4220	0109	22		29-21-31	ALL
	31	18	W4220	0143	18		32-12-12	001-099
	31		W4220	0097	24		31-31-31	115-199
	32	UNUSED						001-099
	32		W4220	0098	24		31-31-31	115-199
	33	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 36

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42018P		E003-04/ /		PLUG (continued)				001-099
D42018P		E3-4/ /		PLUG (continued)				115-199
	33		W4220	0077	24		31-31-31	115-199
	34	UNUSED						001-099
	34	18	W4220	0083	18		32-12-12	115-199
	35	UNUSED						001-099
	35	18	W4220	0143	18		32-12-12	115-199
	36	UNUSED						ALL
	37	UNUSED						001-099
	37		W4220	0087	24		32-41-11	115-199
	38		W4220	0030	22		29-33-11	001-099
	38		W4220	0088	24		SPARE	115-199
	39		W4220	0026	22		29-33-11	001-099
	39	UNUSED						115-199
	40		W4220	0031	22		29-33-11	001-099
	40	UNUSED						115-199
	41		W4220	0032	22		29-33-11	001-099
	41		W4220	2005R	20		SPARE	115-199
	42		W4220	0035	22		29-33-11	001-099
	43		W4220	0034	22		29-33-11	001-099
	44		W4220	0033	22		29-33-11	001-099
	45	UNUSED						001-099
	46	UNUSED						001-099
	47	UNUSED						001-099
	48	UNUSED						001-099
	49	UNUSED						001-099
	50	UNUSED						001-099
	51	UNUSED						001-099
	52	UNUSED						001-099
	53	UNUSED						001-099
	54	UNUSED						001-099
	55	UNUSED						001-099
D42019J		E3-3/ /		RCPT-				ALL
	1		W1433	0121	22		34-22-17	ALL
	2	UNUSED						001-099
	2		W1433	0183	24		31-31-31	115-199
	3	UNUSED						001-099
	3		W1433	0184	24		31-31-31	115-199
	4	UNUSED						001-099
	4		W1433	0182	24		31-31-31	115-199

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 37

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42019J		E3-3/ /		RCPT- (continued)				ALL
	5		W1433	0342	22		34-53-11	001-099
	5		W1433	0029	22		34-53-11	115-199
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						001-099
	10		W1433	0226	22		31-31-31	115-199
	11	UNUSED						001-099
	11		W1433	0214	22		31-31-31	115-199
	12	UNUSED						001-099
	12		W1433	0215	22		31-31-31	115-199
	13		W1433	0124	22		34-12-61	ALL
	14		W1433	0044	24		34-55-11	ALL
	15		W1433	2001R	24		23-51-12	ALL
	16		W1433	2001B	24		23-51-12	ALL
	17		W1433	0048	24		23-51-12	ALL
	18		W1433	0050	22		23-51-12	ALL
	19		W1433	5006R	24		34-55-11	ALL
	20		W1433	5006B	24		34-55-11	ALL
	21		W1433	FRAF			34-55-11	ALL
	22	UNUSED						001-099
	22		W1433	0041	22		34-55-11	115-199
	23	UNUSED						ALL
	24	UNUSED						001-099
	24		W1433	0216	22		31-31-31	115-199
	25	UNUSED						001-099
	25		W1433	0211	22		31-31-31	115-199
	26	UNUSED						001-099
	26		W1433	0052	24		34-55-11	115-199
	27		W1433	0192	24		31-31-61	001-099
	27		W1433	5049B	24		31-31-22	115-199
	28		W1433	5063R	24		31-31-42	001-099
	28		W1433	5049R	24		31-31-22	115-199
	29		W1433	5063B	24		31-31-42	001-099
	29		W1433	FRBM			31-31-22	115-199
	30		W1433	FRDC			31-31-42	001-099
	30		W1433	0212	22		31-31-31	115-199
	31	UNUSED						001-099
	31		W1433	0213	22		31-31-31	115-199

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 38

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42019J		E3-3/ /		RCPT- (continued)				ALL
			W1433	0406	20		31-31-42	001-099
			W1433	5063Z			31-31-42	001-099
			W1433	FRDC			31-31-42	001-099
			W1433	0056	20		34-55-11	ALL
			W1433	5006Z			34-55-11	ALL
			W1433	FRAF			34-55-11	ALL
			W1433	0169	20		31-31-22	115-199
			W1433	5049Z			31-31-22	115-199
			W1433	FRBM			31-31-22	115-199
D42019P		E003-03/ /		PLUG				001-099
D42019P		E3-3/ /		PLUG				115-199
	1		W2241	0020	22		34-22-17	ALL
	2	UNUSED	W2241	0097	24		31-31-31	001-099
	2							115-199
	3	UNUSED	W2241	0098	24		31-31-31	001-099
	3							115-199
	4	UNUSED	W2241	0096	24		31-31-31	001-099
	4							115-199
	5		W2241	0051	22		34-12-61	ALL
	6		W2241	5012R	24		SPARE	001-099
	6	UNUSED	W2241	5012B	24		SPARE	115-199
	7							001-099
	7	UNUSED	W2241	5012Z			SPARE	115-199
	8							001-099
	8	UNUSED	W2241	0066	22		SPARE	115-199
	9							ALL
	10	UNUSED	W2241	0035	22		31-31-31	001-099
	10							115-199
	11	UNUSED	W2241	0089	22		31-31-31	001-099
	11							115-199
	12	UNUSED	W2241	0084	22		31-31-31	001-099
	12							115-199
	13		W2241	0021	22		34-12-61	ALL
	14		W2241	0062	22		34-55-11	ALL
	15		W2241	3502R	24		23-51-12	ALL
	16		W2241	3502B	24		23-51-12	ALL
	17		W2241	3502Y	24		23-51-12	ALL
	18		W2241	3502Z			23-51-12	ALL
	19		W2241	5017R	24		34-55-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 39

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42019P		E003-03/ /		PLUG (continued)				001-099
D42019P		E3-3/ /		PLUG (continued)				115-199
	20		W2241	5017B	24		34-55-11	ALL
	21		W2241	5017Z			34-55-11	ALL
	22	UNUSED						001-099
	22		W2241	0093	22		34-55-11	115-199
	23	UNUSED						001-099
	23		W2241	0099	22		SPARE	115-199
	24	UNUSED						001-099
	24		W2241	0085	22		31-31-31	115-199
	25	UNUSED						001-099
	25		W2241	0086	22		31-31-31	115-199
	26	UNUSED						001-099
	26		W2241	0094	24		34-55-11	115-199
	27		W2241	0109	24		31-31-61	001-099
	27		W2241	5025B	24		31-31-22	115-199
	28		W2241	5025R	24		31-31-42	001-099
	28		W2241	5025R	24		31-31-22	115-199
	29		W2241	5025B	24		31-31-42	001-099
	29		W2241	5025Z			31-31-22	115-199
	30		W2241	5025Z			31-31-42	001-099
	30		W2241	0101	22		31-31-31	115-199
	31		W2241	0108	24		31-31-61	001-099
	31		W2241	0102	22		31-31-31	115-199
D42020J		E004-01/ /		RCPT				001-099
D42020J		E4-1/ /		RCPT				115-199
	1		W1165	0269Y	20		27-41-21	ALL
	2		W1165	0270Y	20		27-41-21	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						001-099
	14	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 40

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42020J		E004-01/ /		RCPT (continued)				001-099
D42020J		E4-1/ /		RCPT (continued)				115-199
	15	UNUSED						001-099
D42020P		E004-01/ /		PLUG				ALL
	1		W4220	0075Y	20		27-41-21	001-099
	1		W4232	0010Y	20		27-41-21	115-199
	2		W4220	0077Y	20		27-41-21	001-099
	2		W4232	0011Y	20		27-41-21	115-199
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D42021J		E002-03/ /		RCPT-				001-099
D42021J		E2-3/ /		RCPT-				115-199
	1	UNUSED						ALL
	2		W1175	0088	24		22-32-15	ALL
	3		W1175	0087	24		22-32-15	ALL
	4		W1175	0607	22		34-46-11	001-099
	4	UNUSED						115-199
	5		W1175	0075	22		22-34-11	ALL
	6	UNUSED						001-099
	6		W1175	0365	24		SPARE	115-199
	7	UNUSED						001-099
	7		W1175	0366	24		SPARE	115-199
	8		W1175	0244	24		34-46-11	001-099
	8	UNUSED						115-199
	9		W1175	0245	22		34-46-11	001-099
	9	UNUSED						115-199
	10		W1175	0246	22		34-46-11	001-099
	10	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 41

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42021J		E002-03/ /		RCPT- (continued)				001-099
D42021J		E2-3/ /		RCPT- (continued)				115-199
	11	UNUSED						ALL
	12		W1175	5059R	24		22-14-11	ALL
	13		W1175	5059B	24		22-14-11	ALL
	14		W1175	5059Z			22-14-11	ALL
	15		W1175	0394	22		22-41-13	001-099
	15		W1175	1023	22		22-41-13	115-199
	16	UNUSED						001-099
	16		W1175	0244	24		34-46-11	115-199
	17	UNUSED						001-099
	17		W1175	0245	22		34-46-11	115-199
	18	UNUSED						001-099
	18		W1175	0246	22		34-46-11	115-199
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W1175	5113R	24		34-31-11	ALL
	25		W1175	5113B	24		34-31-11	ALL
	26		W1175	5113Z			34-31-11	ALL
	27	UNUSED						001-099
	27		W1175	0607	22		34-46-11	115-199
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	DED		W1175	1023Z			22-41-13	115-199
D42021P		E002-03/ /		PLUG				001-099
D42021P		E2-3/ /		PLUG				115-199
	1		W2241	0038	24		SPARE	001-099
	1		W2241	0038	22		SPARE	115-199
	2		W2241	0068	24		22-32-15	ALL
	3		W2241	0069	24		22-32-15	ALL
	4		W2241	0039	22		34-46-11	001-099
	4	UNUSED						115-199
	5		W2241	0008	22		22-34-11	ALL
	6		W2241	0010	22		SPARE	ALL
	7	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 42

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42021P		E002-03/ /		PLUG (continued)				001-099
D42021P		E2-3/ /		PLUG (continued)				115-199
	7		W2241	0045	22		SPARE	115-199
	8		W2241	0012	24		34-46-11	001-099
	8	UNUSED						115-199
	9		W2241	0017	22		34-46-11	001-099
	9	UNUSED						115-199
	10		W2241	0018	22		34-46-11	001-099
	10	UNUSED						115-199
	11	UNUSED						ALL
	12		W2241	5024R	24		22-14-11	ALL
	13		W2241	5024B	24		22-14-11	ALL
	14		W2241	5024Z			22-14-11	ALL
	15		W2241	0009	22		22-41-13	ALL
	16	UNUSED						001-099
	16		W2241	0012	24		34-46-11	115-199
	17	UNUSED						001-099
	17		W2241	0017	22		34-46-11	115-199
	18	UNUSED						001-099
	18		W2241	0018	22		34-46-11	115-199
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						001-099
	23		W2241	0040	22		SPARE	115-199
	24		W2241	5020R	24		34-31-11	ALL
	25		W2241	5020B	24		34-31-11	ALL
	26		W2241	5020Z			34-31-11	ALL
	27	UNUSED						001-099
	27		W2241	0039	22		34-46-11	115-199
	28	UNUSED						001-099
	28		W2241	0028	22		SPARE	115-199
	29	UNUSED						001-099
	29		W2241	2518R	24		SPARE	115-199
	30	UNUSED						001-099
	30		W2241	2518B	24		SPARE	115-199
	31	UNUSED						001-099
	31		W2241	2518Z			SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 43

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42023J		E4-2/ /		RCPT-				ALL
	1		W1275	2505B	24		77-12-31	001-099
	1	UNUSED						115-199
	2		W1275	2505R	24		77-12-31	001-099
	2	UNUSED						115-199
	3		W1275	2505Z			77-12-31	001-099
	3	UNUSED						115-199
	4	UNUSED						001-099
	4		W1275	2505B	24		77-12-31	115-199
	5	UNUSED						001-099
	5		W1275	2505R	24		77-12-31	115-199
	6	UNUSED						001-099
	6		W1275	2505Z			77-12-31	115-199
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1275	0661	24		26-11-11	ALL
	15		W1275	5015R	24		77-11-11	ALL
	16		W1275	5015B	24		77-11-11	ALL
	17		W1275	5015Z			77-11-11	ALL
	18		W1275	5682	22		79-33-11	ALL
	19		W1275	0585	24		34-22-37	001-099
	19		W1275	0586	24		34-22-37	001-099
	19		W1275	6625	22		34-22-37	115-199
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 44

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42023P		E004-02/ /		PLUG				001-099
D42023P		E4-2/ /		PLUG				115-199
	1		W2241	2508B	24		77-12-31	001-099
	1		W2241	2508B	24		SPARE	115-199
	2		W2241	2508R	24		77-12-31	001-099
	2		W2241	2508R	24		SPARE	115-199
	3		W2241	2508Z			77-12-31	001-099
	3		W2241	2508Z			SPARE	115-199
	4		W2241	2509B	24		SPARE	001-099
	4		W2241	2509B	24		77-12-31	115-199
	5		W2241	2509R	24		SPARE	001-099
	5		W2241	2509R	24		77-12-31	115-199
	6		W2241	2509Z			SPARE	001-099
	6		W2241	2509Z			77-12-31	115-199
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						001-099
	13		W2241	0041	22		SPARE	115-199
	14		W2241	0070	22		26-11-11	ALL
	15		W2241	5011R	24		77-11-11	ALL
	16		W2241	5011B	24		77-11-11	ALL
	17		W2241	5011Z			77-11-11	ALL
	18		W2241	0074	22		79-33-11	ALL
	19		W2241	0106	24		34-22-37	ALL
	20		W2241	0031	24		SPARE	001-099
	20	UNUSED						115-199
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31		W2241	0031	24		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 45

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42026J		E003-01/ /		RCPT				ALL
	1		W1265	0154Y	20		27-41-11	ALL
	2		W1265	0155Y	20		27-41-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D42026P		E003-01/ /		PLUG				ALL
	1		W4228	0070Y	20		27-41-11	ALL
	2		W4228	0071Y	20		27-41-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D42028J		E6-4/ /		RCPT				115-199
	1		W1032	0118	24		29-33-11	115-199
	2	UNUSED						115-199
	3	UNUSED						115-199
	4	UNUSED						115-199
	5		W1032	0122	24		29-33-11	115-199
	6		W1032	0123	24		29-33-11	115-199
	7		W1032	0136	24		29-33-11	115-199
	8		W1032	0137	24		29-33-11	115-199
	9		W1032	0138	24		29-33-11	115-199
	10		W1032	0139	24		29-33-11	115-199
	11	UNUSED						115-199
	12	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 46

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42028J		E6-4/ /		RCPT (continued)				115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
D42028P		E6-4/ /		PLUG				115-199
	1		W4220	0026	22		29-33-11	115-199
	2	UNUSED						115-199
	3	UNUSED						115-199
	4	UNUSED						115-199
	5		W4220	0030	22		29-33-11	115-199
	6		W4220	0031	22		29-33-11	115-199
	7		W4220	0032	22		29-33-11	115-199
	8		W4220	0033	22		29-33-11	115-199
	9		W4220	0034	22		29-33-11	115-199
	10		W4220	0035	22		29-33-11	115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
D42030J		P33/ /		RCPT				ALL
	1		W1230	0722	24		30-31-11	001-099
	1		W1232	0120	24		30-31-11	115-199
	2		W1230	0723	24		30-31-11	001-099
	2		W1232	0121	24		30-31-11	115-199
	3		W1230	0746	24		30-31-11	001-099
	3	UNUSED						115-199
	4		W1230	0730	24		30-31-11	001-099
	4	UNUSED						115-199
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 47

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42030P		P033-00/ /		PLUG				ALL
	1		W2042	0001	20		30-31-11	ALL
	2		W2042	0002	20		30-31-11	ALL
	3		W2042	0003	20		30-31-11	001-099
	3	UNUSED						115-199
	4		W2042	0004	20		30-31-11	001-099
	4	UNUSED						115-199
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D42031J		E004-03/ /		RCPT-				001-099
	1	UNUSED						001-099
	2	UNUSED						001-099
	3		W1163	0559	22		23-11-11	001-099
	4		W1163	0560	22		23-11-11	001-099
	5		W1163	0558	22		23-11-11	001-099
	6		W1163	0561	22		23-11-11	001-099
	7		W1163	0562	22		23-11-11	001-099
	8		W1163	0563	22		23-11-11	001-099
	9		W1163	2526R	24		23-11-11	001-099
	10		W1163	2526B	24		23-11-11	001-099
	11		W1163	FRAW			23-11-11	001-099
	12	UNUSED						001-099
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
			W1163	0556	20		23-11-11	001-099
			W1163	2526Z			23-11-11	001-099
			W1163	FRAW			23-11-11	001-099
D42031P		E004-03/ /		PLUG-				001-099
	1	UNUSED						001-099
	2	UNUSED						001-099
	3		W2343	0003	22		23-11-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 48

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42031P		E004-03/ /		PLUG- (continued)				001-099
	4		W2343	0004	22		23-11-11	001-099
	5		W2343	0005	22		23-11-11	001-099
	6		W2343	0006	22		23-11-11	001-099
	7		W2343	0007	22		23-11-11	001-099
	8		W2343	0008	22		23-11-11	001-099
	9		W2343	2501R	24		23-11-11	001-099
	10		W2343	2501B	24		23-11-11	001-099
	11		W2343	2501Z			23-11-11	001-099
	12	UNUSED						001-099
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D42032J		E6/ /		RCPT				115-199
	1		W1024	0269	18		25-51-21	115-199
	2		W1024	0270	18		25-51-21	115-199
	3		W1024	0271	18		25-51-21	115-199
	4		W1024	0296	12		33-37-21	115-199
	5		W1024	0291	14		33-37-21	115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
	8	UNUSED						115-199
D42032P		E6/ /		PLUG-				115-199
	1		W2662	0001	18		25-51-21	115-199
	2		W2662	0002	18		25-51-21	115-199
	3		W2662	0003	18		25-51-21	115-199
	4		W2662	0038	12		33-37-21	115-199
	5		W2662	0041	14		33-37-21	115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
	8	UNUSED						115-199
D42033J		E004-03/ /		RCPT-				001-099
	1		W1163	0566	22		23-11-11	001-099
	2		W1163	0567	22		23-11-11	001-099
	3		W1163	0564	20		23-11-11	001-099
	4		W1163	0568	22		23-11-11	001-099
	5		W1163	0570	20		23-11-11	001-099
	6		W1163	0565	20		23-11-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 49

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42033J		E004-03/ /		RCPT- (continued)				001-099
	7		W1163	0562	22		23-11-11	001-099
	8		W1163	0563	22		23-11-11	001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D42033P		E4-3/ /		PLUG-				001-099
	1		W2663	0001	20		23-11-11	001-099
	2		W2663	0002	20		23-11-11	001-099
	3		W2663	0003	20		23-11-11	001-099
	4		W2663	0004	20		23-11-11	001-099
	5		W2663	0005	20		23-11-11	001-099
	6		W2663	0006	20		23-11-11	001-099
	7		W2663	0007	20		23-11-11	001-099
	8		W2663	0008	20		23-11-11	001-099
	9		W2663	0009	20		SPARE	001-099
	10		W2663	0010	20		SPARE	001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D42035J		E002-02/ /		RCPT-				001-099
D42035J		E2-2/ /		RCPT-				115-199
	1		W1173	5022Z			34-13-11	ALL
	2		W1173	5022R	24		34-13-11	ALL
	3		W1173	5022B	24		34-13-11	ALL
	4		W1173	0325	24		34-12-22	001-099
	4	UNUSED						115-199
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1173	0314	22		22-14-11	ALL
	8		W1173	0315	22		22-14-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 50

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42035J		E002-02/ /		RCPT- (continued)				001-099
D42035J		E2-2/ /		RCPT- (continued)				115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1173	0352	22		34-61-25	ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						001-099
	18		W1173	3002R	24		34-12-21	115-199
	19	UNUSED						001-099
	19		W1173	3002B	24		34-12-21	115-199
	20	UNUSED						001-099
	20		W1173	3002Y	24		34-12-21	115-199
	21	UNUSED						001-099
	21		W1173	0222	22		34-12-21	115-199
	22	UNUSED						001-099
	22		W1173	0223	22		34-12-21	115-199
	23		W1173	0370	22		22-41-13	001-099
	23		W1173	1157	22		22-41-13	115-199
	24		W1173	3003R	24		34-12-21	ALL
	25		W1173	3003B	24		34-12-21	ALL
	26		W1173	3003Y	24		34-12-21	ALL
	27		W1173	0224	22		34-12-21	ALL
	28		W1173	0225	22		34-12-21	ALL
	29		W1173	5129R	24		34-22-81	001-099
	29		W1173	5129R	24		34-22-83	115-199
	30		W1173	5129B	24		34-22-81	001-099
	30		W1173	5129B	24		34-22-83	115-199
	31		W1173	5129Z			34-22-81	001-099
	31		W1173	5129Z			34-22-83	115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34		W1173	0325	24		34-12-22	115-199
	35		W1173	0354	24		SPARE	115-199
	36		W1173	0355	24		SPARE	115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 51

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42035J		E002-02/ /		RCPT- (continued)				001-099
D42035J		E2-2/ /		RCPT- (continued)				115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
	DED		W1173	1157Z			22-41-13	115-199
D42035P		E002-02/ /		PLUG				ALL
	1		W2243	5001Z			34-13-11	ALL
	2		W2243	5001R	24		34-13-11	ALL
	3		W2243	5001B	24		34-13-11	ALL
	4		W2243	0096	24		34-12-22	001-099
	4	UNUSED						115-199
	5	UNUSED						001-099
	5		W2243	0026	24		34-61-18	115-199
	6	UNUSED						ALL
	7		W2243	0007	22		22-14-11	ALL
	8		W2243	0008	22		22-14-11	ALL
	9	UNUSED						001-099
	9		W2243	0009	22		SPARE	115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W2243	0004	22		34-61-25	001-099
	14	UNUSED						115-199
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 52

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42035P		E002-02/ /		PLUG (continued)				ALL
	18		W2243	3002R	24		SPARE	001-099
	18		W2243	3002R	24		34-12-21	115-199
	19		W2243	3002B	24		SPARE	001-099
	19		W2243	3002B	24		34-12-21	115-199
	20		W2243	3002Y	24		SPARE	001-099
	20		W2243	3002Y	24		34-12-21	115-199
	21		W2243	2002R	22		SPARE	001-099
	21		W2243	2002R	22		34-12-21	115-199
	22		W2243	2002B	22		SPARE	001-099
	22		W2243	2002B	22		34-12-21	115-199
	23		W2243	0003	22		22-41-13	ALL
	24		W2243	3001R	24		34-12-21	ALL
	25		W2243	3001B	24		34-12-21	ALL
	26		W2243	3001Y	24		34-12-21	ALL
	27		W2243	2001R	22		34-12-21	ALL
	28		W2243	2001B	22		34-12-21	ALL
	29		W2243	5002R	24		34-22-81	001-099
	29		W2243	5002R	24		34-22-83	115-199
	30		W2243	5002B	24		34-22-81	001-099
	30		W2243	5002B	24		34-22-83	115-199
	31		W2243	5002Z			34-22-81	001-099
	31		W2243	5002Z			34-22-83	115-199
	32		W2243	0020	22		SPARE	115-199
	33		W2243	0021	22		SPARE	115-199
	34		W2243	0096	24		34-12-22	115-199
	35		W2243	0097	22		SPARE	115-199
	36		W2243	0098	22		SPARE	115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 53

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42035P		E002-02/ /		PLUG (continued)				ALL
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D42038J		E6 RLY/PNL/		RCPT				ALL
	1	UNUSED						001-099
	1		W1024	0272	22		25-51-21	115-199
	2	UNUSED						001-099
	2		W1024	0276	22		25-51-21	115-199
	3		W1024	0301	22		52-35-11	001-099
	3		W1024	0108	20		33-37-21	115-199
	4		W1024	0297	22		52-35-11	001-099
	4	UNUSED						115-199
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1024	0294	22		33-37-21	001-099
	7		W1024	0052	20		33-37-21	115-199
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						001-099
	10		W1024	0264	22		25-51-21	115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						001-099
	14		W1024	0266	18		25-51-21	115-199
	15	UNUSED						ALL
	16	UNUSED						001-099
	16		W1024	0267	18		25-51-21	115-199
	17	UNUSED						ALL
	18	UNUSED						001-099
	18		W1024	0268	18		25-51-21	115-199
	19	UNUSED						ALL
	20		W1024	0298	16		52-35-11	ALL
	21	UNUSED						ALL
	22		W1024	0299	16		52-35-11	ALL
	23	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 54

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42038J		E6 RLY/PNL/		RCPT (continued)				ALL
	24		W1024	0300	16		52-35-11	ALL
	25		W1024	0292	20		33-37-21	ALL
D42038P		E006-00/ /		PLUG				ALL
	1	UNUSED						001-099
	1		W2632	0076	20		25-51-21	115-199
	2	UNUSED						001-099
	2		W2632	0077	20		25-51-21	115-199
	3		W2632	0010	22		52-35-11	001-099
	3		W2632	0078	20		33-37-21	115-199
	4		W2632	0011	22		52-35-11	001-099
	4	UNUSED						115-199
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W2632	0071	22		33-37-21	001-099
	7		W2632	0081	22		33-37-21	115-199
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						001-099
	10		W2632	0072	20		25-51-21	115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						001-099
	14		W2632	0073	18		25-51-21	115-199
	15	UNUSED						ALL
	16	UNUSED						001-099
	16		W2632	0074	18		25-51-21	115-199
	17		W2632	0073	20		SPARE	001-099
	17	UNUSED						115-199
	18	UNUSED						001-099
	18		W2632	0075	18		25-51-21	115-199
	19	UNUSED						ALL
	20		W2632	0030	16		52-35-11	ALL
	21	UNUSED						ALL
	22		W2632	0031	16		52-35-11	ALL
	23	UNUSED						ALL
	24		W2632	0032	16		52-35-11	ALL
	25		W2632	0070	20		33-37-21	001-099
	25		W2632	0080	20		33-37-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 55

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42039J		E3-2/ /		RCPT-				115-199
	1		W1423	0052	22		34-55-21	115-199
	2	UNUSED						115-199
	3	UNUSED						115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
D42039P		E3-2/ /		PLUG				115-199
	1		W2243	0095	24		34-55-21	115-199
	2	UNUSED						115-199
	3	UNUSED						115-199
	4		W2243	5006R	24		SPARE	115-199
	5		W2243	5006B	24		SPARE	115-199
	6		W2243	5006Z			SPARE	115-199
	7	UNUSED						115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
D42041J		E4-2/ /		RCPT-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1275	5010R	24		77-11-11	ALL
	5		W1275	5010B	24		77-11-11	ALL
	6		W1275	5010Z			77-11-11	ALL
	7		W1275	2502R	24		77-12-31	001-099
	7	UNUSED						115-199
	8		W1275	2502B	24		77-12-31	001-099
	8	UNUSED						115-199
	9		W1275	2502Z			77-12-31	001-099
	9	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 56

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42041J		E4-2/ /		RCPT- (continued)				ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W1275	5714	24		29-21-32	ALL
	17		W1275	5715	24		29-21-32	ALL
	18		W1275	5683	22		79-33-11	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W1275	0344	24		32-42-12	ALL
	24		W1275	0345	24		32-42-12	ALL
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29		W1275	2502R	24		77-12-31	115-199
	30		W1275	2502B	24		77-12-31	115-199
	31		W1275	2502Z			77-12-31	115-199
D42041P		E004-02/ /		PLUG				ALL
	1		W2243	2504R	24		SPARE	001-099
	1	UNUSED						115-199
	2		W2243	2504B	24		SPARE	001-099
	2	UNUSED						115-199
	3		W2243	2504Z			SPARE	001-099
	3	UNUSED						115-199
	4		W2243	5003R	24		77-11-11	ALL
	5		W2243	5003B	24		77-11-11	ALL
	6		W2243	5003Z			77-11-11	ALL
	7		W2243	2502R	24		77-12-31	001-099
	7		W2243	2502R	24		SPARE	115-199
	8		W2243	2502B	24		77-12-31	001-099
	8		W2243	2502B	24		SPARE	115-199
	9		W2243	2502Z			77-12-31	001-099

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 57

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42041P		E004-02/ /		PLUG (continued)				ALL
	9		W2243	2502Z			SPARE	115-199
	10		W2243	0001	24		SPARE	001-099
	10		W2243	0001	22		SPARE	115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W2243	0002	22		29-21-32	ALL
	18		W2243	0018	22		79-33-11	ALL
	19	UNUSED						001-099
	19		W2243	2508R	24		SPARE	115-199
	20	UNUSED						001-099
	20		W2243	2508B	24		SPARE	115-199
	21	UNUSED						001-099
	21		W2243	2508Z			SPARE	115-199
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W2243	0014	22		32-42-12	ALL
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29		W2243	2504R	24		77-12-31	115-199
	30		W2243	2504B	24		77-12-31	115-199
	31		W2243	2504Z			77-12-31	115-199
D42043J		E004-03/ /		RCPT				001-099
	= A1		W1163	003CX			23-11-11	001-099
	= C1		W1163	003CO			23-11-11	001-099
D42043P		E4-3/ /		PLUG-				001-099
	= A1		W2667	001CX			23-11-11	001-099
	= C1		W2667	001CO			23-11-11	001-099
D42044J		AA1862/ /		RCPT-				ALL
	1		W2812	0015	20		33-45-11	ALL
	2		W2812	0016	20		SPARE	ALL
	3	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 58

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42044P		AA1862/ /		PLUG-				ALL
	1		W3204	0004	18		33-45-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
D42045J		E003-02/ /		RCPT-				001-099
	1	UNUSED						001-099
	2	UNUSED						001-099
	3		W1423	0209	22		23-11-21	001-099
	4		W1423	0210	22		23-11-21	001-099
	5		W1423	0208	22		23-11-21	001-099
	6		W1423	0211	22		23-11-21	001-099
	7		W1423	0212	22		23-11-21	001-099
	8		W1423	0213	22		23-11-21	001-099
	9		W1423	2701R	24		23-11-21	001-099
	10		W1423	2701B	24		23-11-21	001-099
	11		W1423	FRCA			23-11-21	001-099
	12	UNUSED						001-099
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
			W1423	0206	20		23-11-21	001-099
			W1423	2701Z			23-11-21	001-099
			W1423	FRCA			23-11-21	001-099
D42045P		E003-02/ /		PLUG-				001-099
	1	UNUSED						001-099
	2	UNUSED						001-099
	3		W2345	0003	22		23-11-21	001-099
	4		W2345	0004	22		23-11-21	001-099
	5		W2345	0005	22		23-11-21	001-099
	6		W2345	0006	22		23-11-21	001-099
	7		W2345	0007	22		23-11-21	001-099
	8		W2345	0008	22		23-11-21	001-099
	9		W2345	2501R	24		23-11-21	001-099
	10		W2345	2501B	24		23-11-21	001-099
	11		W2345	2501Z			23-11-21	001-099
	12	UNUSED						001-099
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 59

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42047J		AP0001/ /		RCPT				ALL
	1		W2245	0001	24		34-21-31	ALL
	2		W2245	0002	24		34-22-37	ALL
	3		W2245	3001R	22		34-24-11	ALL
	4		W2245	3001B	22		34-24-11	ALL
	5		W2245	3001Y	22		34-24-11	ALL
	6		W2245	0009	22		22-14-11	ALL
	7		W2245	2002R	24		34-24-11	ALL
	8		W2245	2002B	24		34-24-11	ALL
	9		W2245	2003R	24		34-24-11	ALL
	10		W2245	2003B	24		34-24-11	ALL
	11		W2245	2005R	24		34-24-11	ALL
	12		W2245	2005B	24		34-24-11	ALL
	13		W2245	2004R	24		34-24-11	ALL
	14		W2245	2004B	24		34-24-11	ALL
	15		W2245	5002B	24		34-22-81	001-099
	15		W2245	5002B	24		34-22-83	115-199
	16		W2245	5002R	24		34-22-81	001-099
	16		W2245	5002R	24		34-22-83	115-199
	17		W2245	5002Z			34-22-81	001-099
	17		W2245	5002Z			34-22-83	115-199
	18		W2245	0007	22		22-14-11	ALL
	19		W2245	0008	22		22-14-11	ALL
	20		W2245	0015	22		34-22-36	ALL
	21		W2245	2001R	24		SPARE	ALL
	22		W2245	2001B	24		SPARE	ALL
	23		W2245	0003	24		34-22-37	ALL
	24		W2245	0016	22		SPARE	ALL
	25		W2245	5005R	24		SPARE	ALL
	26		W2245	5005B	24		SPARE	ALL
	27		W2245	5005Z			SPARE	ALL
	28		W2245	5001R	24		34-22-82	ALL
	29		W2245	5001B	24		34-22-82	ALL
	30		W2245	5001Z			34-22-82	ALL
	31	UNUSED						ALL
	32		W2245	2006R	22		34-24-11	ALL
	33		W2245	2006B	22		34-24-11	ALL
	34	UNUSED						001-099
	34		W2245	5006R	24		SPARE	115-199
	35	UNUSED						001-099
	35		W2245	5006B	24		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 60

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42047J		AP0001/ /		RCPT (continued)				ALL
	36	UNUSED						001-099
	36		W2245	5006Z			SPARE	115-199
	37		W2245	0012	22		SPARE	ALL
	38	UNUSED						001-099
	38		W2245	0013	22		SPARE	115-199
	39	UNUSED						001-099
	39		W2245	0014	22		SPARE	115-199
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50		W2245	0017	24		34-24-11	ALL
	51		W2245	0018	24		34-24-11	ALL
	52		W2245	0019	24		34-24-11	ALL
	53		W2245	0020	24		34-24-11	ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D42047P		217.6/198/R34		PLUG				001-099
D42047P		AP0001/ /		PLUG				115-199
	1		W0001	0041	24		34-21-31	ALL
	2		W0001	0014	24		34-22-37	ALL
	3		W0001	3005R	22		34-24-11	ALL
	4		W0001	3005B	22		34-24-11	ALL
	5		W0001	3005Y	22		34-24-11	ALL
	6		W0001	0030	22		22-14-11	ALL
	7		W0001	2015R	24		34-24-11	ALL
	8		W0001	2015B	24		34-24-11	ALL
	9		W0001	2016R	24		34-24-11	ALL
	10		W0001	2016B	24		34-24-11	ALL
	11		W0001	2013R	24		34-24-11	ALL
	12		W0001	2013B	24		34-24-11	ALL
	13		W0001	2017R	24		34-24-11	ALL
	14		W0001	2017B	24		34-24-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 61

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42047P		217.6/198/R34		PLUG (continued)				001-099
D42047P		AP0001/ /		PLUG (continued)				115-199
	15		W0001	5040B	24		34-22-81	001-099
	15		W0001	5040B	24		34-22-83	115-199
	16		W0001	5040R	24		34-22-81	001-099
	16		W0001	5040R	24		34-22-83	115-199
	17		W0001	5040Z			34-22-81	001-099
	17		W0001	5040Z			34-22-83	115-199
	18		W0001	0023	22		22-14-11	ALL
	19		W0001	0031	22		22-14-11	ALL
	20		W0001	0490	22		34-22-36	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W0001	0212	24		34-22-37	ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28		W0001	5028R	24		34-22-82	ALL
	29		W0001	5028B	24		34-22-82	ALL
	30		W0001	FRAH			34-22-82	ALL
	31	UNUSED						ALL
	32		W0001	2014R	24		34-24-11	ALL
	33		W0001	2014B	24		34-24-11	ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50		W0001	0476	24		34-24-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 62

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42047P		217.6/198/R34		PLUG (continued)				001-099
D42047P		AP0001/ /		PLUG (continued)				115-199
	51		W0001	0477	24		34-24-11	ALL
	52		W0001	0478	24		34-24-11	ALL
	53		W0001	0479	24		34-24-11	ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
			W0001	0038	20		34-22-82	ALL
			W0001	5028Z			34-22-82	ALL
			W0001	FRAH			34-22-82	ALL
D42049J		E002-03/ /		RCPT-				001-099
D42049J		E2-3/ /		RCPT-				115-199
	1		W1175	3011R	24		34-24-11	ALL
	2		W1175	3011B	24		34-24-11	ALL
	3		W1175	3011Y	24		34-24-11	ALL
	4		W1175	2005R	24		34-24-11	ALL
	5		W1175	2005B	24		34-24-11	ALL
	6		W1175	2002R	24		34-24-11	ALL
	7		W1175	2002B	24		34-24-11	ALL
	8		W1175	2003R	24		34-24-11	ALL
	9		W1175	2003B	24		34-24-11	ALL
	10		W1175	2004R	24		34-24-11	ALL
	11		W1175	2004B	24		34-24-11	ALL
	12		W1175	2001R	24		34-24-11	ALL
	13		W1175	2001B	24		34-24-11	ALL
	14		W1175	0337	22		22-14-11	ALL
	15		W1175	0167	22		22-11-32	ALL
	16		W1175	0168	22		22-11-32	ALL
	17	UNUSED						001-099
	17		W1175	0170	22		22-11-32	115-199
	18	UNUSED						ALL
	19		W1175	0016	24		34-22-37	001-099
	19		W1175	0732	24		34-22-37	115-199
	20	UNUSED						ALL
	21	UNUSED						ALL
	22		W1175	0025	24		34-22-37	ALL
	23		W1175	5047B	24		22-12-31	ALL
	24		W1175	5047R	24		22-12-31	ALL
	25		W1175	5047Z			22-12-31	ALL
	26	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 63

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42049J		E002-03/ /		RCPT- (continued)				001-099
D42049J		E2-3/ /		RCPT- (continued)				115-199
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34		W1175	0334	22		22-14-11	ALL
	35		W1175	0051	22		22-14-11	ALL
	36		W1175	0315	24		34-24-11	ALL
	37		W1175	0316	24		34-24-11	ALL
	38		W1175	0317	24		34-24-11	ALL
	39		W1175	0318	24		34-24-11	ALL
	40		W1175	0323	22		34-22-36	ALL
	41	UNUSED						ALL
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D42049P		E2-3/ /		PLUG				001-099
D42049P		E002-03/ /		PLUG				115-199
	1		W2245	3001R	22		34-24-11	ALL
	2		W2245	3001B	22		34-24-11	ALL
	3		W2245	3001Y	22		34-24-11	ALL
	4		W2245	2006R	22		34-24-11	ALL
	5		W2245	2006B	22		34-24-11	ALL
	6		W2245	2002R	24		34-24-11	ALL
	7		W2245	2002B	24		34-24-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 64

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42049P		E2-3/ /		PLUG (continued)				001-099
D42049P		E002-03/ /		PLUG (continued)				115-199
	8		W2245	2003R	24		34-24-11	ALL
	9		W2245	2003B	24		34-24-11	ALL
	10		W2245	2004R	24		34-24-11	ALL
	11		W2245	2004B	24		34-24-11	ALL
	12		W2245	2005R	24		34-24-11	ALL
	13		W2245	2005B	24		34-24-11	ALL
	14		W2245	0009	22		22-14-11	ALL
	15		W2245	0004	22		22-11-32	ALL
	16		W2245	0005	22		22-11-32	ALL
	17		W2245	0006	22		SPARE	001-099
	17		W2245	0006	22		22-11-32	115-199
	18		W2245	0016	22		SPARE	ALL
	19		W2245	0003	24		34-22-37	ALL
	20		W2245	2001B	24		SPARE	ALL
	21		W2245	2001R	24		SPARE	ALL
	22		W2245	0002	24		34-22-37	ALL
	23		W2245	5003B	24		22-12-31	ALL
	24		W2245	5003R	24		22-12-31	ALL
	25		W2245	5003Z			22-12-31	ALL
	26	UNUSED						ALL
	27		W2245	5004R	24		SPARE	ALL
	28		W2245	5004B	24		SPARE	ALL
	29		W2245	5004Z			SPARE	ALL
	30	UNUSED						001-099
	30		W2245	0010	22		SPARE	115-199
	31	UNUSED						001-099
	31		W2245	0011	22		SPARE	115-199
	32	UNUSED						ALL
	33	UNUSED						ALL
	34		W2245	0007	22		22-14-11	ALL
	35		W2245	0008	22		22-14-11	ALL
	36		W2245	0017	24		34-24-11	ALL
	37		W2245	0018	24		34-24-11	ALL
	38		W2245	0019	24		34-24-11	ALL
	39		W2245	0020	24		34-24-11	ALL
	40		W2245	0015	22		34-22-36	ALL
	41	UNUSED						ALL
	42	UNUSED						115-199
	43	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 65

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42049P		E2-3/ /		PLUG (continued)				001-099
D42049P		E002-03/ /		PLUG (continued)				115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D42050J		E6 RLY/PNL/		RCPT				ALL
	1		W1024	0312	16		49-61-11	ALL
	2		W1024	0252	18		24-31-41	ALL
	3		W1024	0083	24		24-34-11	001-099
	3		W1024	0083	22		24-34-11	115-199
	4		W1024	0253	18		24-31-41	ALL
	5	UNUSED						ALL
	6		W1024	0081	18		49-61-14	ALL
	7		W1024	0250	24		24-31-41	ALL
	8		W1024	0050	16		49-61-11	ALL
	9		W1024	2004B	24		24-34-11	001-099
	9		W1024	2004B	22		24-34-11	115-199
	10		W1024	0251	18		24-31-41	ALL
	11		W1024	2503B	24		23-41-12	001-099
	11		W1024	3503B	24		23-41-12	115-199
	12		W1024	2503R	24		23-41-12	001-099
	12		W1024	3503R	24		23-41-12	115-199
	13	UNUSED						001-099
	13		W1024	3503Y	24		23-41-12	115-199
	14		W1024	2503Z			23-41-12	001-099
	14		W1024	3503Z			23-41-12	115-199
	15		W1024	0067	24		24-33-12	001-099
	15	UNUSED						115-199
	16		W1024	0051	20		49-61-11	ALL
	17		W1024	2004R	24		24-34-11	001-099
	17		W1024	2004R	22		24-34-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 66

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42050J		E6 RLY/PNL/		RCPT (continued)				ALL
	18		W1024	0094	22		49-72-11	ALL
	19		W1024	0258	22		49-72-11	ALL
	20		W1024	0113	24		24-32-41	001-099
	20		W1024	0030	24		24-32-41	115-199
	21		W1024	0114	20		24-32-41	001-099
	21		W1024	0042	20		24-32-41	115-199
	22		W1024	0115	20		24-32-41	001-099
	22		W1024	0044	20		24-32-41	115-199
	23		W1024	0116	20		24-32-41	001-099
	23		W1024	0043	20		24-32-41	115-199
	24		W1024	0148	20		24-32-41	001-099
	24		W1024	0103	20		24-32-41	115-199
	25		W1024	0109	20		24-32-41	001-099
	25		W1024	0027	20		24-32-41	115-199
	26		W1024	0110	24		24-31-41	ALL
	27		W1024	0112	20		24-32-41	001-099
	27		W1024	0010	20		24-32-41	115-199
	28		W1024	0111	20		24-32-41	001-099
	28		W1024	0016	20		24-32-41	115-199
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
D42050P		E006-00/ /		PLUG-				001-099
D42050P		E6/ /		PLUG-				115-199
	1		W1026	0010	16		49-61-11	ALL
	2		W1026	0107	18		24-31-41	ALL
	3		W1026	0083	24		24-34-11	001-099
	3		W1026	0083	22		24-34-11	115-199
	4		W1026	0108	18		24-31-41	ALL
	5	UNUSED						ALL
	6		W1026	0016	18		49-61-14	ALL
	7		W1026	0020	22		24-31-41	ALL
	8		W1026	0050	16		49-61-11	ALL
	9		W1026	2004B	24		24-34-11	001-099
	9		W1026	2004B	22		24-34-11	115-199
	10		W1026	0106	18		24-31-41	ALL
	11		W1026	2501B	24		23-41-12	001-099
	11		W1026	3503B	24		23-41-12	115-199

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 67

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42050P		E006-00/ /		PLUG- (continued)				001-099
D42050P		E6/ /		PLUG- (continued)				115-199
	12		W1026	2501R	24		23-41-12	001-099
	12		W1026	3503R	24		23-41-12	115-199
	13	UNUSED						001-099
	13		W1026	3503Y	24		23-41-12	115-199
	14		W1026	2501Z			23-41-12	001-099
	14		W1026	3503Z			23-41-12	115-199
	15		W1026	0033	22		24-33-12	001-099
	15	UNUSED						115-199
	16		W1026	0051	20		49-61-11	ALL
	17		W1026	2004R	24		24-34-11	001-099
	17		W1026	2004R	22		24-34-11	115-199
	18		W1026	0048	22		49-72-11	ALL
	19		W1026	0049	22		49-72-11	ALL
	20		W1026	0094	20		24-32-41	ALL
	21		W1026	0087	20		24-32-41	ALL
	22		W1026	0086	20		24-32-41	ALL
	23		W1026	0085	20		24-32-41	ALL
	24		W1026	0084	20		24-32-41	ALL
	25		W1026	0090	20		24-32-41	ALL
	26		W1026	0115	24		24-31-41	ALL
	27		W1026	0088	20		24-32-41	ALL
	28		W1026	0089	20		24-32-41	ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
D42051J		E2-4/ /		RCPT				ALL
	1		W1177	0038	24		34-21-31	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W1177	5051B	24		34-22-81	001-099
	5	UNUSED						115-199
	6		W1177	5051R	24		34-22-81	001-099
	6	UNUSED						115-199
	7		W1177	5051Z			34-22-81	001-099
	7	UNUSED						115-199
	8		W1177	5052R	24		34-22-82	001-099

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 68

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42051J		E2-4/ /		RCPT (continued)				ALL
	8	UNUSED						115-199
	9		W1177	5052B	24		34-22-82	001-099
	9	UNUSED						115-199
	10		W1177	5052Z			34-22-82	001-099
	10	UNUSED						115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						115-199
	14	UNUSED						115-199
	15		W1177	5051B	24		34-22-83	115-199
	16		W1177	5051R	24		34-22-83	115-199
	17		W1177	5051Z			34-22-83	115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28		W1177	5052R	24		34-22-82	115-199
	29		W1177	5052B	24		34-22-82	115-199
	30		W1177	5052Z			34-22-82	115-199
	31	UNUSED						115-199
D42051P		E2-4/ /		PLUG				001-099
D42051P		E002-04/ /		PLUG				115-199
	1		W2245	0001	24		34-21-31	ALL
	2	UNUSED						ALL
	3		W2245	0012	22		SPARE	ALL
	4		W2245	5005Z			SPARE	001-099
	4		W2245	0013	22		SPARE	115-199
	5		W2245	5002B	24		34-22-81	001-099
	5		W2245	0014	22		SPARE	115-199
	6		W2245	5002R	24		34-22-81	001-099
	6	UNUSED						115-199
	7		W2245	5002Z			34-22-81	001-099
	7	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 69

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42051P		E2-4/ /		PLUG (continued)				001-099
D42051P		E002-04/ /		PLUG (continued)				115-199
	8		W2245	5001R	24		34-22-82	001-099
	8	UNUSED						115-199
	9		W2245	5001B	24		34-22-82	001-099
	9	UNUSED						115-199
	10		W2245	5001Z			34-22-82	001-099
	10	UNUSED						115-199
	11		W2245	5005R	24		SPARE	001-099
	11	UNUSED						115-199
	12		W2245	5005B	24		SPARE	001-099
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15		W2245	5002B	24		34-22-83	115-199
	16		W2245	5002R	24		34-22-83	115-199
	17		W2245	5002Z			34-22-83	115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22		W2245	5006R	24		SPARE	115-199
	23		W2245	5006B	24		SPARE	115-199
	24		W2245	5006Z			SPARE	115-199
	25		W2245	5005R	24		SPARE	115-199
	26		W2245	5005B	24		SPARE	115-199
	27		W2245	5005Z			SPARE	115-199
	28		W2245	5001R	24		34-22-82	115-199
	29		W2245	5001B	24		34-22-82	115-199
	30		W2245	5001Z			34-22-82	115-199
	31	UNUSED						115-199
D42052J		1633/280/L25		RCPT-				ALL
	1		W3576	0048	22		33-22-14	ALL
	2		W3576	0057	22		33-22-14	ALL
	3		W3576	0055	20		33-22-14	ALL
	4		W3576	0054	22		33-22-14	ALL
	5	UNUSED						001-099
	5		W3576	0062	20		33-27-31	115-199
	6	UNUSED						001-099
	6		W3576	0063	22		33-27-31	115-199

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 70

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42052J		1633/280/L25		RCPT- (continued)				ALL
	7	UNUSED						001-099
	7		W3576	0064	22		33-27-31	115-199
	8	UNUSED						001-099
	8		W3576	0065	22		33-27-31	115-199
	9	UNUSED						001-099
	9		W3576	0066	20		33-22-14	115-199
	10	UNUSED						ALL
	11		W3576	0072	24		SPARE	001-099
	11	UNUSED						115-199
	12	UNUSED						ALL
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D42052P		1633/300/L025		PLUG-				ALL
	1		W0530	0001	22		33-22-14	ALL
	2		W0530	0002	22		33-22-14	ALL
	3		W0530	0003	20		33-22-14	ALL
	4		W0530	0004	22		33-22-14	ALL
	5		W0530	0005	22		SPARE	001-099
	5		W0530	0005	22		33-27-31	115-199
	6	UNUSED						001-099
	6		W0530	0006	22		33-27-31	115-199
	7	UNUSED						001-099
	7		W0530	0007	22		33-27-31	115-199
	8	UNUSED						001-099
	8		W0530	0008	22		33-27-31	115-199
	9	UNUSED						001-099
	9		W0530	0009	20		33-22-14	115-199
	10	UNUSED						001-099
	10		W0530	0010	22		SPARE	115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D42053J		E005-03/ /		RCPT				001-099
D42053J		E5-3/ /		RCPT				115-199
	1	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 71

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42053J		E005-03/ /		RCPT (continued)				001-099
D42053J		E5-3/ /		RCPT (continued)				115-199
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6		W1286	0200	24		27-51-61	ALL
	7		W1286	0201	24		27-51-61	ALL
	8		W1286	0202	24		27-51-61	ALL
	9		W1286	0187	24		27-51-61	ALL
	10		W1286	0188	24		27-51-61	ALL
	11		W1286	0195	24		27-51-61	ALL
	12		W1286	0196	24		27-51-61	ALL
	13		W1286	0197	24		27-51-61	ALL
	14		W1286	0198	24		27-51-61	ALL
	15		W1286	0199	24		27-51-61	ALL
D42053P		E005-03/ /		PLUG				ALL
	1		W2247	0031	22		SPARE	ALL
	2	UNUSED						001-099
	2		W2247	0032	22		SPARE	115-199
	3	UNUSED						001-099
	3		W2247	0033	22		SPARE	115-199
	4	UNUSED						001-099
	4		W2247	0034	22		SPARE	115-199
	5	UNUSED						ALL
	6		W2247	0028	24		27-51-61	001-099
	6		W2247	0028	22		27-51-61	115-199
	7		W2247	0029	24		27-51-61	001-099
	7		W2247	0029	22		27-51-61	115-199
	8		W2247	0030	24		27-51-61	001-099
	8		W2247	0030	22		27-51-61	115-199
	9		W2247	0021	24		27-51-61	001-099
	9		W2247	0021	22		27-51-61	115-199
	10		W2247	0022	24		27-51-61	001-099
	10		W2247	0022	22		27-51-61	115-199
	11		W2247	0023	24		27-51-61	001-099
	11		W2247	0023	22		27-51-61	115-199
	12		W2247	0024	24		27-51-61	001-099
	12		W2247	0024	22		27-51-61	115-199
	13		W2247	0025	24		27-51-61	001-099

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 72

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42053P		E005-03/ /		PLUG (continued)				ALL
	13		W2247	0025	22		27-51-61	115-199
	14		W2247	0026	24		27-51-61	001-099
	14		W2247	0026	22		27-51-61	115-199
	15		W2247	0027	24		27-51-61	001-099
	15		W2247	0027	22		27-51-61	115-199
D42055J		AP0003/ /		RCPT				ALL
	1		W2251	4501Z			77-21-11	ALL
	2		W2251	4501W	22		77-21-11	001-099
	2	TD	W2251	4501W	20		77-21-11	115-199
	3		W2251	4501G	22		77-21-11	001-099
	3	TC	W2251	4501G	20		77-21-11	115-199
	4	UNUSED						001-099
	4		W2251	0032	22		SPARE	115-199
	5	UNUSED						001-099
	5		W2251	0031	22		SPARE	115-199
	6	UNUSED						001-099
	6		W2251	0053	22		SPARE	115-199
	7	UNUSED						001-099
	7		W2251	0052	22		SPARE	115-199
	8	UNUSED						001, 003-099
	8		W2251	0038	22		34-25-12	002
	8		W2251	0050	22		SPARE	115-199
	9	UNUSED						001-099
	9		W2251	0051	22		SPARE	115-199
	10		W2251	5006R	24		SPARE	ALL
	11		W2251	5006B	24		SPARE	ALL
	12		W2251	5006Z			SPARE	ALL
	13		W2251	5004R	24		SPARE	001-099
	13		W2251	0036	24		34-61-18	115-199
	14		W2251	5004B	24		SPARE	001-099
	14	UNUSED						115-199
	15		W2251	5004Z			SPARE	001-099
	15	UNUSED						115-199
	16	UNUSED						001-099
	16		W2251	0054	24		34-55-11	115-199
	17		W2251	2002R	24		22-31-12	ALL
	18		W2251	2002B	24		22-31-12	ALL
	19		W2251	2003R	24		22-31-12	ALL
	20		W2251	2003B	24		22-31-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 73

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42055J		AP0003/ /		RCPT (continued)				ALL
	21		W2251	2004R	22		22-31-12	ALL
	22		W2251	2004B	22		22-31-12	ALL
	23	UNUSED						001-099
	23		W2251	2006R	22		SPARE	115-199
	24	UNUSED						001-099
	24		W2251	2006B	22		SPARE	115-199
	25	UNUSED						001-099
	25		W2251	0057	22		SPARE	115-199
	26	UNUSED						001-099
	26		W2251	0058	22		SPARE	115-199
	27	UNUSED						001-099
	27		W2251	0059	22		SPARE	115-199
	28	UNUSED						001-099
	28		W2251	0025	24		77-12-11	115-199
	29	UNUSED						001-099
	29		W2251	2504R	24		77-12-11	115-199
	30	UNUSED						001-099
	30		W2251	2504B	24		77-12-11	115-199
	31	UNUSED						001-099
	31		W2251	2504Z			77-12-11	115-199
	32	UNUSED						001-099
	32		W2251	0041	24		34-45-01	115-199
	33	UNUSED						001-099
	33		W2251	5021R	24		34-45-01	115-199
	34	UNUSED						001-099
	34		W2251	5021B	24		34-45-01	115-199
	35	UNUSED						001-099
	35		W2251	FRAM			34-45-01	115-199
	36	UNUSED						001-099
	36		W2251	0042	24		34-45-01	115-199
	37	UNUSED						001-099
	37		W2251	0044	24		34-45-01	115-199
	38	UNUSED						001-099
	38		W2251	0043	24		34-45-01	115-199
	39	UNUSED						001-099
	39		W2251	5022R	24		34-45-01	115-199
	40	UNUSED						001-099
	40		W2251	5022B	24		34-45-01	115-199
	41		W2251	0041	24		34-45-01	001-002
	41	UNUSED						003-099

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 74

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42055J		AP0003/ /		RCPT (continued)				ALL
	41		W2251	FRAG			34-45-01	115-199
	42		W2251	5021R	24		34-45-01	001-002
	42	UNUSED						003-099
	43		W2251	5021B	24		34-45-01	001-002
	43	UNUSED						003-099
	44		W2251	FRAF			34-45-01	001-002
	44	UNUSED						003-099
	45		W2251	0042	24		34-45-01	001-099
	46		W2251	0044	24		34-45-01	001-099
	47		W2251	0043	24		34-45-01	001-002
	47	UNUSED						003-099
	48		W2251	5022R	24		34-45-01	001-099
	49		W2251	5022B	24		34-45-01	001-099
	50		W2251	FRAG			34-45-01	001-099
	51	UNUSED						001-099
	52	UNUSED						001-099
	53	UNUSED						001-099
	54	UNUSED						001-099
	55	UNUSED						001-099
			W2251	FRAF			34-45-01	001-002
			W2251	0045	22		34-45-01	001-002, 115-199
			W2251	5021Z			34-45-01	001-002, 115-199
			W2251	0046	22		34-45-01	ALL
			W2251	5022Z			34-45-01	ALL
			W2251	FRAG			34-45-01	ALL
			W2251	FRAM			34-45-01	115-199
D42055P		217.6/200/R40		PLUG				001-099
D42055P		AP0003/ /		PLUG				115-199
	1		W0003	4501Z			77-21-11	ALL
	2		W0003	4501W	22		77-21-11	001-099
	2	TC	W0003	4501W	22		77-21-11	115-199
	3		W0003	4501G	22		77-21-11	001-099
	3	TD	W0003	4501G	22		77-21-11	115-199
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						001, 003-099, 115-199
	8		W0003	0233	22		34-25-12	002

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 75

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42055P		217.6/200/R40		PLUG (continued)				001-099
D42055P		AP0003/ /		PLUG (continued)				115-199
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						001-099
	13		W0003	0402	22		34-61-18	115-199
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						001-099
	16		W0003	0558	24		34-55-11	115-199
	17		W0003	2003R	24		22-31-12	ALL
	18		W0003	2003B	24		22-31-12	ALL
	19		W0003	2004R	24		22-31-12	ALL
	20		W0003	2004B	24		22-31-12	ALL
	21		W0003	2005R	22		22-31-12	ALL
	22		W0003	2005B	22		22-31-12	ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						001-099
	28		W0003	0565	24		77-12-11	115-199
	29	UNUSED						001-099
	29		W0003	2517R	24		77-12-11	115-199
	30	UNUSED						001-099
	30		W0003	2517B	24		77-12-11	115-199
	31	UNUSED						001-099
	31		W0003	2517Z			77-12-11	115-199
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 76

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42055P		217.6/200/R40		PLUG (continued)				001-099
D42055P		AP0003/ /		PLUG (continued)				115-199
	42	UNUSED						001-099
	43	UNUSED						001-099
	44	UNUSED						001-099
	45	UNUSED						001-099
	46	UNUSED						001-099
	47	UNUSED						001-099
	48	UNUSED						001-099
	49	UNUSED						001-099
	50	UNUSED						001-099
	51	UNUSED						001-099
	52	UNUSED						001-099
	53	UNUSED						001-099
	54	UNUSED						001-099
	55	UNUSED						001-099
D42057J		E003-02/ /		RCPT-				001-099
	= A1		W1423	021CX			23-11-21	001-099
	= C1		W1423	021CO			23-11-21	001-099
D42057P		E003-02/ /		PLUG-				001-099
	= A1		W2669	001CX			23-11-21	001-099
	= C1		W2669	001CO			23-11-21	001-099
D42059J		E003-02/ /		RCPT-				001-099
	1		W1423	0216	22		23-11-21	001-099
	2		W1423	0217	22		23-11-21	001-099
	3		W1423	0214	20		23-11-21	001-099
	4		W1423	0218	22		23-11-21	001-099
	5		W1423	0220	20		23-11-21	001-099
	6		W1423	0215	20		23-11-21	001-099
	7		W1423	0212	22		23-11-21	001-099
	8		W1423	0213	22		23-11-21	001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
D42059P		E3-2/ /		PLUG-				001-099
	1		W2665	0001	20		23-11-21	001-099

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 77

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42059P		E3-2/ /		PLUG- (continued)				001-099
	2		W2665	0002	20		23-11-21	001-099
	3		W2665	0003	20		23-11-21	001-099
	4		W2665	0004	20		23-11-21	001-099
	5		W2665	0005	20		23-11-21	001-099
	6		W2665	0006	20		23-11-21	001-099
	7		W2665	0007	20		23-11-21	001-099
	8		W2665	0008	20		23-11-21	001-099
	9		W2665	0009	20		SPARE	001-099
	10		W2665	0010	20		SPARE	001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
D42060J		E003-04/ /		RCPT				ALL
	1		W1280	0382	22		76-11-21	001-099
	1		W1280	0380	22		76-11-21	115-199
	2	UNUSED						ALL
	3		W1280	0031	22		32-61-12	ALL
	4		W1280	0075	22		32-61-12	ALL
	5		W1280	0033	22		32-61-12	ALL
	6	UNUSED						ALL
	7		W1280	0035	22		32-61-12	ALL
	8	UNUSED						001-099
	8		W1280	0002	22		27-23-11	115-199
	9	UNUSED						001-099
	9		W1280	0007	22		27-23-11	115-199
	10		W1280	0001	24		33-42-11	001-099
	10		W1280	0001	22		33-42-11	115-199
	11	UNUSED						001-099
	11		W1280	0017	22		27-23-11	115-199
	12	UNUSED						001-099
	12		W1280	0016	22		27-23-11	115-199
	13	UNUSED						001-099
	13		W1280	0019	22		27-23-11	115-199
	14		W1280	2037B	24		32-61-13	ALL
	15		W1280	2037R	24		32-61-13	ALL
	16		W1280	2038B	24		32-61-13	ALL
	17		W1280	2038R	24		32-61-13	ALL
	18		W1280	2043B	24		32-61-22	ALL
	19		W1280	2043R	24		32-61-22	ALL
	20		W1280	2505B	24		23-41-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 78

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42060J		E003-04/ /		RCPT (continued)				ALL
	20		W1280	3501B	24		23-41-11	115-199
	21		W1280	2505R	24		23-41-11	001-099
	21		W1280	3501R	24		23-41-11	115-199
	22	UNUSED						001-099
	22		W1280	3501Y	24		23-41-11	115-199
	23		W1280	2505Z			23-41-11	001-099
	23		W1280	3501Z			23-41-11	115-199
	24		W1280	0349	22		32-09-12	001-002
	24		W1280	0347	22		32-09-12	003-099, 115-199
	25		W1280	0348	22		32-09-12	ALL
	26		W1280	0347	22		32-09-12	001-002
	26		W1280	0349	22		32-09-12	003-099, 115-199
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W1280	0223	22		32-09-12	ALL
	31	UNUSED						ALL
D42060P		E003-04/ /		PLUG				001-099
D42060P		E3-4/ /		PLUG				115-199
	1		W4216	0010	22		76-11-21	ALL
	2		W4216	0101	20		SPARE	001-099
	2	UNUSED						115-199
	3		W4216	0011	22		32-61-12	ALL
	4		W4216	0012	22		32-61-12	ALL
	5		W4216	0013	22		32-61-12	ALL
	6		W4216	0014	22		SPARE	ALL
	7		W4216	0015	22		32-61-12	ALL
	8	UNUSED						001-099
	8		W4216	0016	22		27-23-11	115-199
	9		W4216	0103	22		SPARE	001-099
	9		W4216	0017	22		27-23-11	115-199
	10		W4216	0037	24		33-42-11	001-099
	10		W4216	0037	20		33-42-11	115-199
	11		W4216	0106	22		SPARE	001-099
	11		W4216	0039	22		27-23-11	115-199
	12	UNUSED						001-099
	12		W4216	0059	22		27-23-11	115-199
	13	UNUSED						001-099
	13		W4216	0060	22		27-23-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 79

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42060P		E003-04/ /		PLUG (continued)				001-099
D42060P		E3-4/ /		PLUG (continued)				115-199
	14		W4216	2001B	22		32-61-13	ALL
	15		W4216	2001R	22		32-61-13	ALL
	16		W4216	2002B	22		32-61-13	ALL
	17		W4216	2002R	22		32-61-13	ALL
	18		W4216	2003B	24		32-61-22	ALL
	19		W4216	2003R	24		32-61-22	ALL
	20		W4216	2501B	20		23-41-12	001-099
	20		W4216	3501B	20		23-41-12	115-199
	21		W4216	2501R	20		23-41-12	001-099
	21		W4216	3501R	20		23-41-12	115-199
	22	UNUSED						001-099
	22		W4216	3501Y	20		23-41-12	115-199
	23		W4216	2501Z			23-41-12	001-099
	23		W4216	3501Z			23-41-12	115-199
	24		W4216	0092	22		32-09-12	001-002
	24		W4216	0090	22		32-09-12	003-099, 115-199
	25		W4216	0091	22		32-09-12	ALL
	26		W4216	0090	22		32-09-12	001-002
	26		W4216	0092	22		32-09-12	003-099, 115-199
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						001-099
	29		W4216	0103	22		SPARE	115-199
	30		W4216	0093	22		32-09-12	ALL
	31	UNUSED						ALL
D42062J		P37/ /		RCPT				ALL
I	1		W1270	3502Y	16		28-22-11	ALL
I	2		W1270	3502R	16		28-22-11	ALL
	3		W1270	6047	20		29-21-32	ALL
I	4		W1270	3502B	16		28-22-11	ALL
	5		W1270	6048	20		29-21-32	ALL
	6		W1270	6829	20		27-62-11	ALL
	7	UNUSED						ALL
	8		W1270	3004R	18		28-22-11	ALL
	9		W1270	3004Y	18		28-22-11	ALL
	10		W1270	3004B	18		28-22-11	ALL
	11		W1270	6834	20		27-62-11	ALL
	12		W1270	0170	24		29-35-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 80

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42062J		P37/ /		RCPT (continued)				ALL
	12	UNUSED						115-199
	13		W1270	6838	20		27-62-11	ALL
	14		W1270	6839	20		27-62-11	ALL
	DED		W1270	3502Z			28-22-11	ALL
D42062P		P037-00/ /		PLUG				001-099
D42062P		P37/ /		PLUG				115-199
	1		W4216	3001Y	16		28-22-11	ALL
	2		W4216	3001R	16		28-22-11	ALL
	3		W4216	0100	20		29-21-32	ALL
	4		W4216	3001B	16		28-22-11	ALL
	5		W4216	0099	20		29-21-32	ALL
	6		W4212	3502Y	18		27-62-11	ALL
	7	UNUSED						ALL
	8		W4216	3002R	18		28-22-11	ALL
	9		W4216	3002Y	18		28-22-11	ALL
	10		W4216	3002B	18		28-22-11	ALL
	11		W4212	3502Z			27-62-11	ALL
	12		W4216	0120	20		29-35-11	001-099
	12	UNUSED						115-199
	13		W4212	3502R	18		27-62-11	ALL
	14		W4212	3502B	18		27-62-11	ALL
	CAP	Y	W4216	0119	20		SPARE	001-099
	CAP	Y	W4216	0107	20		SPARE	ALL
D42063J		E002-03/ /		RCPT-				001-099
D42063J		E2-3/ /		RCPT-				115-199
	1		W1175	5037R	24		22-32-11	ALL
	2		W1175	5037B	24		22-32-11	ALL
	3		W1175	FRAO			22-32-11	ALL
	4	UNUSED						ALL
	5		W1175	2014R	24		22-31-12	ALL
	6		W1175	2014B	24		22-31-12	ALL
	7		W1175	2015R	22		22-31-12	ALL
	8		W1175	2015B	22		22-31-12	ALL
	9		W1175	2016R	24		22-31-12	ALL
	10		W1175	2016B	24		22-31-12	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 81

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42063J		E002-03/ /		RCPT- (continued)				001-099
D42063J		E2-3/ /		RCPT- (continued)				115-199
	14	UNUSED						ALL
	15	UNUSED						ALL
	16		W1175	5090R	24		34-22-91	001-099
	16		W1175	5093R	24		34-22-93	115-199
	17		W1175	5090B	24		34-22-91	001-099
	17		W1175	5093B	24		34-22-93	115-199
	18		W1175	5090Z			34-22-91	001-099
	18		W1175	5093Z			34-22-93	115-199
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
			W1175	0131	20		22-32-11	ALL
			W1175	5037Z			22-32-11	ALL
			W1175	FRAO			22-32-11	ALL
D42063P		E002-03/ /		PLUG				ALL
	1		W2251	5003R	24		22-32-11	ALL
	2		W2251	5003B	24		22-32-11	ALL
	3		W2251	5003Z			22-32-11	ALL
	4	UNUSED						ALL
	5		W2251	2003R	24		22-31-12	ALL
	6		W2251	2003B	24		22-31-12	ALL
	7		W2251	2004R	22		22-31-12	ALL
	8		W2251	2004B	22		22-31-12	ALL
	9		W2251	2002R	24		22-31-12	ALL
	10		W2251	2002B	24		22-31-12	ALL
	11	UNUSED						001-099
	11		W2251	2501R	24		SPARE	115-199
	12	UNUSED						001-099
	12		W2251	2501B	24		SPARE	115-199
	13	UNUSED						001-099
	13		W2251	2501Z			SPARE	115-199
	14	UNUSED						001-099
	14		W2251	2006R	22		SPARE	115-199
	15	UNUSED						001-099
	15		W2251	2006B	22		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 82

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42063P		E002-03/ /		PLUG (continued)				ALL
	16		W2251	5001R	24		34-22-91	001-099
	16		W2251	5001R	24		34-22-93	115-199
	17		W2251	5001B	24		34-22-91	001-099
	17		W2251	5001B	24		34-22-93	115-199
	18		W2251	5001Z			34-22-91	001-099
	18		W2251	5001Z			34-22-93	115-199
	19	UNUSED						001-099
	19		W2251	5008R	24		SPARE	115-199
	20	UNUSED						001-099
	20		W2251	5008B	24		SPARE	115-199
	21	UNUSED						001-099
	21		W2251	5008Z			SPARE	115-199
	22		W2251	5006R	24		SPARE	ALL
	23		W2251	5006B	24		SPARE	ALL
	24		W2251	5006Z			SPARE	ALL
D42065J		E002-01/ /		RCPT-				001-099
D42065J		E2-1/ /		RCPT-				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1171	5052R	24		34-13-21	ALL
	5		W1171	5052B	24		34-13-21	ALL
	6		W1171	5052Z			34-13-21	ALL
	7		W1171	0309	22		34-12-11	ALL
	8		W1171	0308	22		34-12-11	ALL
	9		W1171	3001R	24		34-12-11	ALL
	10		W1171	3001B	24		34-12-11	ALL
	11		W1171	3001Y	24		34-12-11	ALL
	12		W1171	0413	22		22-41-13	001-099
	12		W1171	1026	22		22-41-13	115-199
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						001-099
	17		W1171	0725	24		34-61-18	115-199
	18	UNUSED						001, 003-099, 115-199
	18		W1171	0554	22		34-25-12	002
	19	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 83

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42065J		E002-01/ /		RCPT- (continued)				001-099
D42065J		E2-1/ /		RCPT- (continued)				115-199
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						001-099
	32		W1171	0444	24		34-45-01	115-199
	33	UNUSED						001-099
	33		W1171	5187R	24		34-45-01	115-199
	34	UNUSED						001-099
	34		W1171	5187B	24		34-45-01	115-199
	35	UNUSED						ALL
	36	UNUSED						001-099
	36		W1171	FRNJ			34-45-01	115-199
	37	UNUSED						001-099
	37		W1171	0453	24		34-45-01	115-199
	38	UNUSED						001-099
	38		W1171	0452	24		34-45-01	115-199
	39	UNUSED						001-099
	39		W1171	5188R	24		34-45-01	115-199
	40	UNUSED						001-099
	40		W1171	5188B	24		34-45-01	115-199
	41	UNUSED						001-099
	41		W1171	5188Z			34-45-01	115-199
	42		W1171	5187R	24		34-45-01	001-002
	42	UNUSED						003-099
	43		W1171	5187B	24		34-45-01	001-002
	43	UNUSED						003-099
	44		W1171	FRNJ			34-45-01	001-002
	44	UNUSED						003-099
	45	UNUSED						001-099
	46		W1171	0453	24		34-45-01	001-099

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 84

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42065J		E002-01/ /		RCPT- (continued)				001-099
D42065J		E2-1/ /		RCPT- (continued)				115-199
	47		W1171	0452	24		34-45-01	001-002
	47	UNUSED						003-099
	48		W1171	5188R	24		34-45-01	001-099
	49		W1171	5188B	24		34-45-01	001-099
	50		W1171	5188Z			34-45-01	001-099
	51	UNUSED						001-099
	52	UNUSED						001-099
	53	UNUSED						001-099
	54	UNUSED						001-099
	55	UNUSED						001-099
	DED		W1171	1026Z			22-41-13	115-199
			W1171	0476	22		34-45-01	001-002, 115-199
			W1171	5187Z			34-45-01	001-002, 115-199
			W1171	FRNJ			34-45-01	001-002, 115-199
D42065P		E002-01/ /		PLUG				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W2251	5002R	24		34-13-21	ALL
	5		W2251	5002B	24		34-13-21	ALL
	6		W2251	5002Z			34-13-21	ALL
	7		W2251	2001R	22		34-12-11	ALL
	8		W2251	2001B	22		34-12-11	ALL
	9		W2251	3001R	24		34-12-11	ALL
	10		W2251	3001B	24		34-12-11	ALL
	11		W2251	3001Y	24		34-12-11	ALL
	12		W2251	0008	22		22-41-13	ALL
	13		W2251	2005B	22		SPARE	ALL
	14		W2251	2005R	22		SPARE	ALL
	15	UNUSED						001-099
	15		W2251	0006	22		SPARE	115-199
	16	UNUSED						001-099
	16		W2251	0009	24		SPARE	115-199
	17	UNUSED						001-099
	17		W2251	0036	24		34-61-18	115-199
	18	UNUSED						001, 003-099, 115-199
	18		W2251	0038	22		34-25-12	002
	19	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 85

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42065P		E002-01/ /		PLUG (continued)				ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						001-099
	32		W2251	0041	24		34-45-01	115-199
	33	UNUSED						001-099
	33		W2251	5021R	24		34-45-01	115-199
	34	UNUSED						001-099
	34		W2251	5021B	24		34-45-01	115-199
	35	UNUSED						001-099
	35		W2251	5021Z			34-45-01	115-199
	36	UNUSED						001-099
	36		W2251	0042	24		34-45-01	115-199
	37	UNUSED						001-099
	37		W2251	0044	24		34-45-01	115-199
	38	UNUSED						001-099
	38		W2251	0043	24		34-45-01	115-199
	39	UNUSED						001-099
	39		W2251	5022R	24		34-45-01	115-199
	40	UNUSED						001-099
	40		W2251	5022B	24		34-45-01	115-199
	41		W2251	0041	24		34-45-01	001-002
	41	UNUSED						003-099
	41		W2251	5022Z			34-45-01	115-199
	42		W2251	5021R	24		34-45-01	001-002
	42	UNUSED						003-099
	43		W2251	5021B	24		34-45-01	001-002
	43	UNUSED						003-099
	44		W2251	5021Z			34-45-01	001-002
	44	UNUSED						003-099
	45		W2251	0042	24		34-45-01	001-099

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 86

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42065P		E002-01/ /		PLUG (continued)				ALL
	46		W2251	0044	24		34-45-01	001-099
	47		W2251	0043	24		34-45-01	001-002
	47	UNUSED						003-099
	48		W2251	5022R	24		34-45-01	001-099
	49		W2251	5022B	24		34-45-01	001-099
	50		W2251	5022Z			34-45-01	001-099
	51	UNUSED						001-099
	52	UNUSED						001-099
	53	UNUSED						001-099
	54	UNUSED						001-099
	55	UNUSED						001-099
D42069J		E5-1/ /		RCPT				ALL
	1		W1282	0168	24		27-51-41	ALL
	2		W1282	0186	24		27-51-41	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						001-099
	17	UNUSED						001-099
	18	UNUSED						001-099
	19	UNUSED						001-099
	20	UNUSED						001-099
	21	UNUSED						001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
D42069P		E005-01/ /		PLUG				ALL
	1		W2251	0016	24		27-51-41	001-099

HOOKUP LIST
D280N032

91-21-51
Section D42000
Page 87
Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42069P		E005-01/ /		PLUG (continued)				ALL
	1		W2251	0016	22		27-51-41	115-199
	2		W2251	0017	24		27-51-41	001-099
	2		W2251	0017	22		27-51-41	115-199
	3	UNUSED						001-099
	3		W2251	0021	22		SPARE	115-199
	4	UNUSED						001-099
	4		W2251	0031	22		SPARE	115-199
	5	UNUSED						001-099
	5		W2251	0032	22		SPARE	115-199
	6	UNUSED						001-099
	6		W2251	0029	22		SPARE	115-199
	7	UNUSED						001-099
	7		W2251	0030	22		SPARE	115-199
	8	UNUSED						001-099
	8		W2251	0050	22		SPARE	115-199
	9	UNUSED						001-099
	9		W2251	0053	22		SPARE	115-199
	10	UNUSED						001-099
	10		W2251	0052	22		SPARE	115-199
	11	UNUSED						001-099
	11		W2251	0051	22		SPARE	115-199
	12		W2251	5010R	24		SPARE	001-099
	12	UNUSED						115-199
	13		W2251	5010B	24		SPARE	001-099
	13	UNUSED						115-199
	14		W2251	5010Z			SPARE	001-099
	14	UNUSED						115-199
	15	UNUSED						ALL
	16	UNUSED						001-099
	17	UNUSED						001-099
	18	UNUSED						001-099
	19	UNUSED						001-099
	20	UNUSED						001-099
	21	UNUSED						001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
D42071J		E3-3/ /		RCPT-				ALL
	1		W1433	0243	22		32-61-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 88

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42071J		E3-3/ /		RCPT- (continued)				ALL
	2		W1433	0242	24		32-61-12	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10		W1433	0239	22		32-61-12	ALL
	11		W1433	0237	24		32-61-12	001-099
	11		W1433	0237	22		32-61-12	115-199
	12	UNUSED						001-099
	12		W1433	0053	24		34-55-11	115-199
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
D42071P		E003-03/ /		PLUG				ALL
	1		W2251	0033	22		32-61-12	ALL
	2		W2251	0034	24		32-61-12	ALL
	3	UNUSED						001-099
	3		W2251	0035	22		SPARE	115-199
	4	UNUSED						001-099
	4		W2251	5005R	24		SPARE	115-199
	5	UNUSED						001-099
	5		W2251	5005B	24		SPARE	115-199
	6	UNUSED						001-099
	6		W2251	5005Z			SPARE	115-199
	7	UNUSED						001-099
	7		W2251	0022	24		SPARE	115-199
	8	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 89

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42071P		E003-03/ /		PLUG (continued)				ALL
	8		W2251	0023	22		SPARE	115-199
	9		W2251	0024	22		SPARE	ALL
	10		W2251	0010	22		32-61-12	ALL
	11		W2251	0011	24		32-61-12	ALL
	12	UNUSED						001-099
	12		W2251	0054	24		34-55-11	115-199
	13		W2251	5004R	24		SPARE	001-099
	13	UNUSED						115-199
	14		W2251	5004B	24		SPARE	001-099
	14	UNUSED						115-199
	15		W2251	5004Z			SPARE	001-099
	15	UNUSED						115-199
	16		W2251	0057	22		SPARE	115-199
	17		W2251	0058	22		SPARE	115-199
	18		W2251	0059	22		SPARE	115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
D42073J		E4-2/ /		RCPT-				ALL
	1	UNUSED						001-099
	1		W1275	6245	24		32-46-11	115-199
	2		W1275	5890	24		31-41-14	ALL
	2		W1275	5924	24		31-41-24	ALL
	3		W1275	6160	24		27-58-11	001-099
	3		W1275	6160	22		27-58-11	115-199
	4		W1275	6159	24		27-58-11	001-099
	4		W1275	6159	22		27-58-11	115-199
	5		W1275	6158	24		27-58-11	001-099
	5		W1275	6158	22		27-58-11	115-199
	6		W1275	6157	24		27-58-11	001-099
	6		W1275	6157	22		27-58-11	115-199
	7		W1275	0406	24		32-61-21	ALL
	8		W1275	0402	24		32-61-21	ALL
	9		W1275	0398	24		32-61-21	ALL
	10	UNUSED						001-099
	10		W1275	0081	24		77-12-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 90

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42073J		E4-2/ /		RCPT- (continued)				ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1275	5874	24		31-41-14	ALL
	15		W1275	4506W	22		77-21-11	ALL
	16		W1275	4506G	22		77-21-11	ALL
	17		W1275	4506Z			77-21-11	ALL
	18	UNUSED						001-099
	18		W1275	2513R	24		77-12-11	115-199
	19	UNUSED						001-099
	19		W1275	2513B	24		77-12-11	115-199
	20	UNUSED						001-099
	20		W1275	2513Z			77-12-11	115-199
	21		W1275	2513R	24		77-12-11	001-099
	21	UNUSED						115-199
	22		W1275	2513B	24		77-12-11	001-099
	22	UNUSED						115-199
	23		W1275	2513Z			77-12-11	001-099
	23	UNUSED						115-199
	24		W1275	0081	24		77-12-11	001-099
	24	UNUSED						115-199
D42073P		E004-02/ /		PLUG				ALL
	1	UNUSED						001-099
	1		W2251	0027	22		32-46-11	115-199
	2		W2251	0028	22		31-41-14	ALL
	3		W2251	0012	24		27-58-11	001-099
	3		W2251	0012	22		27-58-11	115-199
	4		W2251	0013	24		27-58-11	001-099
	4		W2251	0013	22		27-58-11	115-199
	5		W2251	0014	24		27-58-11	001-099
	5		W2251	0014	22		27-58-11	115-199
	6		W2251	0015	24		27-58-11	001-099
	6		W2251	0015	22		27-58-11	115-199
	7		W2251	0018	22		32-61-21	ALL
	8		W2251	0019	22		32-61-21	ALL
	9		W2251	0020	22		32-61-21	ALL
	10	UNUSED						001-099
	10		W2251	0025	24		77-12-11	115-199
	11	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 91

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42073P		E004-02/ /		PLUG (continued)				ALL
	11		W2251	0026	22		SPARE	115-199
	12		W2251	0004	22		SPARE	ALL
	13	UNUSED						001-099
	13		W2251	0005	22		SPARE	115-199
	14		W2251	0003	22		31-41-14	ALL
	15		W2251	4501W	22		77-21-11	001-099
	15	TD	W2251	4501W	20		77-21-11	115-199
	16		W2251	4501G	22		77-21-11	001-099
	16	TC	W2251	4501G	20		77-21-11	115-199
	17		W2251	4501Z			77-21-11	ALL
	18	UNUSED						001-099
	18		W2251	2504R	24		77-12-11	115-199
	19	UNUSED						001-099
	19		W2251	2504B	24		77-12-11	115-199
	20	UNUSED						001-099
	20		W2251	2504Z			77-12-11	115-199
	21		W2251	2501R	24		77-12-11	001-099
	21	UNUSED						115-199
	22		W2251	2501B	24		77-12-11	001-099
	22	UNUSED						115-199
	23		W2251	2501Z			77-12-11	001-099
	23	UNUSED						115-199
	24		W2251	0025	24		77-12-11	001-099
	24	UNUSED						115-199
D42074J		P070-00/ /		RCPT				ALL
	1		W1250	0026	20		24-51-14	ALL
	2		W1250	0027	20		24-51-14	ALL
	3		W1250	0039	22		21-25-11	ALL
	4		W1250	0040	22		21-25-11	ALL
	5		W1250	0042	24		21-43-11	ALL
	6		W1250	0015	24		21-43-11	ALL
	7		W1250	0041	24		21-51-11	ALL
	8		W1250	0081	24		21-58-12	ALL
	9		W1250	0023	22		21-44-11	ALL
	10		W1250	0004	24		21-25-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1252	0301	20		28-26-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 92

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42074J		P070-00/ /		RCPT (continued)				ALL
	15		W1252	0303	20		28-26-11	ALL
	16		W1252	0304	22		28-26-11	ALL
	17		W1252	0302	22		28-26-11	ALL
	18		W1250	0045	22		33-45-11	ALL
	19		W1250	0044	20		33-45-11	ALL
	20		W1250	0043	20		33-45-11	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
D42074P		P070-00/ /		PLUG				001-099
D42074P		P70/ /		PLUG				115-199
	1		W2066	0115	20		24-51-14	ALL
	2		W2066	0116	20		24-51-14	ALL
	3		W2066	0195	24		21-25-11	ALL
	4		W2066	0151	24		21-25-11	ALL
	5		W2066	0032	24		21-43-11	ALL
	6		W2066	0419	24		21-43-11	ALL
	7		W2066	0421	24		21-51-11	ALL
	8		W2066	0280	24		21-58-12	ALL
	9		W2066	0427	22		21-44-11	ALL
	10		W2066	0285	24		21-25-11	ALL
	11		W2066	0273	24		SPARE	ALL
	12		W2066	0526	24		SPARE	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 93

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42074P		P070-00/ /		PLUG (continued)				001-099
D42074P		P70/ /		PLUG (continued)				115-199
	13		W2066	0527	20		SPARE	ALL
	14		W2066	0546	20		28-26-11	ALL
	15		W2066	0547	20		28-26-11	ALL
	16		W2066	0548	22		28-26-11	ALL
	17		W2066	0549	22		28-26-11	ALL
	18		W2066	0805	22		33-45-11	ALL
	19		W2066	0806	20		33-45-11	ALL
	20		W2066	0807	20		33-45-11	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
D42076J		AD0880/ /		RCPT-				001-099
D42076J		AD0880/ /		RCPT				115-199
	1	UNUSED						ALL
	2		W4212	2005R	22		27-51-41	ALL
	3		W4212	2005B	22		27-51-41	ALL
	4		W4212	4001R	22		27-51-41	ALL
	5		W4212	4001B	22		27-51-41	ALL
	6		W4212	4001Y	22		27-51-41	ALL
	7		W4212	4001G	22		27-51-41	ALL
	8		W4212	3002R	18		28-22-11	ALL
	9		W4212	3002Y	18		28-22-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 94

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42076J		AD0880/ /		RCPT- (continued)				001-099
D42076J		AD0880/ /		RCPT (continued)				115-199
	10		W4212	3002B	18		28-22-11	ALL
	11		W4212	0015	22		SPARE	ALL
	12		W4212	0016	22		SPARE	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	S/R		W4212	YAAA			27-51-41	001-099
	S/R		W4212	YAAC			27-51-41	115-199
D42076P		AD0880/ /		PLUG-				ALL
	1		W3446	0001	20		SPARE	ALL
	2		W3446	2001R	20		27-51-41	ALL
	3		W3446	2001B	20		27-51-41	ALL
	4		W3446	4001R	20		27-51-41	ALL
	5		W3446	4001B	20		27-51-41	ALL
	6		W3446	4001Y	20		27-51-41	ALL
	7		W3446	4001G	20		27-51-41	ALL
	8		W3446	3001R	18		28-22-11	ALL
	9		W3446	3001Y	18		28-22-11	ALL
	10		W3446	3001B	18		28-22-11	ALL
	11		W3446	0011	20		SPARE	ALL
	12		W3446	0012	20		SPARE	ALL
	13		W3446	0013	20		SPARE	ALL
	14		W3446	0014	20		SPARE	ALL
	S/R		W3446	YAAA			27-51-42	ALL
D42080J		P36/ /		RCPT				ALL
	1		W1260	0488	22		49-61-11	ALL
	2		W1260	0489	22		49-61-11	ALL
	3		W1260	0490	22		49-61-11	ALL
	4		W1260	0492	22		49-61-11	ALL
	5		W1260	0491	22		49-61-11	ALL
	6	UNUSED						001-099
	6		W1260	8516	24		29-33-11	115-199
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 95

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42080J		P36/ /		RCPT (continued)				ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W1260	0988	22		49-61-11	001-099
	15	UNUSED						115-199
D42080P		P036-00/ /		PLUG				001-099
D42080P		P36/ /		PLUG				115-199
	1		W2650	0045	22		49-61-11	ALL
	2		W2650	0046	22		49-61-11	ALL
	3		W2650	0011	22		49-61-11	ALL
	4		W2650	0044	22		49-61-11	ALL
	5		W2650	0043	22		49-61-11	ALL
	6		W2650	0002	24		SPARE	001-099
	6		W2650	0017	24		29-33-11	115-199
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W2650	0071	22		SPARE	001-099
	9	UNUSED						115-199
	10		W2650	0068	22		SPARE	001-099
	10	UNUSED						115-199
	11		W2650	0072	22		SPARE	001-099
	11	UNUSED						115-199
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W2650	0080	22		49-61-11	001-099
	15	UNUSED						115-199
D42081J		P051-00/ /		RCPT-				ALL
	1	UNUSED						ALL
	2		W1451	0246	24		31-51-31	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W1451	5016R	24		22-14-21	ALL
	10		W1451	5016B	24		22-14-21	ALL
	11		W1451	FRAE			22-14-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 96

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42081J		P051-00/ /		RCPT- (continued)				ALL
	12		W1451	0358	24		31-51-21	001-099
	12		W1451	0234	24		31-51-21	115-199
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
			W1451	0186	20		22-14-21	ALL
			W1451	5016Z			22-14-21	ALL
			W1451	FRAE			22-14-21	ALL
D42081P		P051-00/ /		PLUG				ALL
	1	UNUSED						001-099
	1		W2253	0090	24		SPARE	115-199
	2		W2253	0089	24		31-51-31	ALL
	3		W2253	5015R	24		SPARE	ALL
	4		W2253	5015B	24		SPARE	ALL
	5		W2253	5015Z			SPARE	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W2253	5005R	24		22-14-21	ALL
	10		W2253	5005B	24		22-14-21	ALL
	11		W2253	5005Z			22-14-21	ALL
	12		W2253	0091	24		31-51-21	ALL
	13	UNUSED						001-099
	13		W2253	0093	22		SPARE	115-199
	14	UNUSED						001-099
	14		W2253	0094	22		SPARE	115-199
	15	UNUSED						ALL
D42083J		E002-03/ /		RCPT-				001-099
D42083J		E2-3/ /		RCPT-				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						001, 003-099, 115-199
	4		W1175	0683	22		34-46-11	002
	5		W1175	0282	24		34-25-11	001, 003-099, 115-199
	5	UNUSED						002
	6	UNUSED						001, 003-099, 115-199
	6		W1175	0585	22		34-22-28	002

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 97

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42083J		E002-03/ /		RCPT- (continued)				001-099
D42083J		E2-3/ /		RCPT- (continued)				115-199
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W1175	5060R	24		22-14-21	ALL
	10		W1175	5060B	24		22-14-21	ALL
	11		W1175	5060Z			22-14-21	ALL
	12	UNUSED						ALL
	13		W1175	0240	24		34-46-11	ALL
	14		W1175	0242	24		34-46-11	ALL
	15	UNUSED						ALL
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
D42083P		E002-03/ /		PLUG				001-099
D42083P		E2-3/ /		PLUG				115-199
	1		W2253	5026R	24		SPARE	001-099
	1	UNUSED						115-199
	2		W2253	5026B	24		SPARE	001-099
	2	UNUSED						115-199
	3		W2253	5026Z			SPARE	001-099
	3	UNUSED						115-199
	4	UNUSED						001, 003-099
	4		W2253	0030	22		34-46-11	002
	4		W2253	0004	22		SPARE	115-199
	5		W2253	0092	24		34-25-11	001, 003-099, 115-199
	5	UNUSED						002

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 98

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42083P		E002-03/ /		PLUG (continued)				001-099
D42083P		E2-3/ /		PLUG (continued)				115-199
	6		W2253	5027R	24		SPARE	001, 003-099
	6		W2253	0125	22		34-22-28	002
	6	UNUSED						115-199
	7		W2253	5027B	24		SPARE	001-099
	7	UNUSED						115-199
	8		W2253	5027Z			SPARE	001-099
	8	UNUSED						115-199
	9		W2253	5009R	24		22-14-21	ALL
	10		W2253	5009B	24		22-14-21	ALL
	11		W2253	5009Z			22-14-21	ALL
	12	UNUSED						001-099
	12		W2253	0079	22		SPARE	115-199
	13		W2253	0013	24		34-46-11	ALL
	14		W2253	0014	24		34-46-11	ALL
	15		W2253	0080	24		SPARE	001-099
	15		W2253	0080	22		SPARE	115-199
	16		W2253	0016	22		SPARE	115-199
	17		W2253	0017	22		SPARE	115-199
	18		W2253	0081	22		SPARE	115-199
	19		W2253	0082	22		SPARE	115-199
	20	UNUSED						115-199
	21		W2253	0030	22		SPARE	115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25		W2253	0025	22		SPARE	115-199
	26		W2253	0026	22		SPARE	115-199
	27		W2253	0027	22		SPARE	115-199
	28		W2253	0028	22		SPARE	115-199
	29		W2253	0036	22		SPARE	115-199
	30		W2253	0037	22		SPARE	115-199
	31	UNUSED						115-199
	CAP	Y	W2253	5027R	24		SPARE	002
D42084J		E4-2/ /		RCPT-				ALL
	1		W1275	2048B	24		21-52-11	ALL
	2		W1275	2048R	24		21-52-11	ALL
	3		W1275	2049B	24		21-52-11	001-099
	3	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 99

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42084J		E4-2/ /		RCPT- (continued)				ALL
	4		W1275	2049R	24		21-52-11	001-099
	4	UNUSED						115-199
	5		W1275	2050B	24		21-52-11	001-099
	5	UNUSED						115-199
	6		W1275	2050R	24		21-52-11	001-099
	6	UNUSED						115-199
	7		W1275	2051B	24		21-52-11	001-099
	7	UNUSED						115-199
	8		W1275	2051R	24		21-52-11	001-099
	8	UNUSED						115-199
	9		W1275	2052B	24		21-52-11	001-099
	9	UNUSED						115-199
	10		W1275	2052R	24		21-52-11	001-099
	10	UNUSED						115-199
	11		W1275	6223	24		21-52-21	ALL
	12		W1275	6226	24		21-52-21	ALL
	13		W1275	6194	24		21-52-21	ALL
	14		W1275	6195	24		21-52-21	ALL
	15		W1275	6406	24		21-52-21	ALL
	16		W1275	6405	24		21-52-21	ALL
	17		W1275	2064R	24		21-52-31	ALL
	18		W1275	2064B	24		21-52-31	ALL
	19		W1275	4001R	24		21-52-31	ALL
	20		W1275	4001B	24		21-52-31	ALL
	21		W1275	4001Y	24		21-52-31	ALL
	22		W1275	2065R	24		21-52-31	ALL
	23		W1275	2065B	24		21-52-31	ALL
	24		W1275	6210	24		36-21-11	ALL
	25		W1275	6209	24		36-21-11	ALL
	26		W1275	2071B	24		36-22-21	ALL
	27		W1275	2071R	24		36-22-21	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W1275	2076B	24		21-52-11	001-099
	32	UNUSED						115-199
	33		W1275	2076R	24		21-52-11	001-099
	33	UNUSED						115-199
	34	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 100

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42084J		E4-2/ /		RCPT- (continued)				ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W1275	4001G	24		21-52-31	ALL
	41		W1275	6251	24		21-61-51	001-099
	41		W1275	6252	24		21-61-51	001-099
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55		W1275	6251	24		21-61-51	115-199
	55		W1275	6252	24		21-61-51	115-199
	DED		W1275	6210Z			36-21-11	115-199
D42084P		E004-02/ /		PLUG				001-099
D42084P		E4-2/ /		PLUG				115-199
	1		W4006	2007B	24		21-52-11	ALL
	2		W4006	2007R	24		21-52-11	ALL
	3		W4006	2008B	24		21-52-11	001-099
	3	UNUSED						115-199
	4		W4006	2008R	24		21-52-11	001-099
	4	UNUSED						115-199
	5		W4006	2009B	24		21-52-11	001-099
	5	UNUSED						115-199
	6		W4006	2009R	24		21-52-11	001-099
	6	UNUSED						115-199
	7		W4006	2010B	24		21-52-11	001-099
	7	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 101

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42084P		E004-02/ /		PLUG (continued)				001-099
D42084P		E4-2/ /		PLUG (continued)				115-199
	8		W4006	2010R	24		21-52-11	001-099
	8	UNUSED						115-199
	9		W4006	2011B	24		21-52-11	001-099
	9	UNUSED						115-199
	10		W4006	2011R	24		21-52-11	001-099
	10	UNUSED						115-199
	11		W4006	3020R	24		21-52-21	ALL
	12		W4006	3020B	24		21-52-21	ALL
	13		W4006	3020Y	24		21-52-21	ALL
	14		W4006	3021Y	24		21-52-21	ALL
	15		W4006	3021B	24		21-52-21	ALL
	16		W4006	3021R	24		21-52-21	ALL
	17		W4006	2033R	24		21-52-31	ALL
	18		W4006	2033B	24		21-52-31	ALL
	19		W4006	4000R	24		21-52-31	ALL
	20		W4006	4000B	24		21-52-31	ALL
	21		W4006	4000Y	24		21-52-31	ALL
	22		W4006	2035R	24		21-52-31	ALL
	23		W4006	2035B	24		21-52-31	ALL
	24		W4006	2036R	24		36-21-11	ALL
	25		W4006	2036B	24		36-21-11	ALL
	26		W4006	2038B	24		36-22-21	ALL
	27		W4006	2038R	24		36-22-21	ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W4006	2004B	24		21-52-11	001-099
	32	UNUSED						115-199
	33		W4006	2004R	24		21-52-11	001-099
	33	UNUSED						115-199
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W4006	4000G	24		21-52-31	ALL
	41		W4006	0239	24		21-61-51	001-099

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 102

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42084P		E004-02/ /		PLUG (continued)				001-099
D42084P		E4-2/ /		PLUG (continued)				115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52		W4006	0311	22		SPARE	115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55		W4006	0239	24		21-61-51	115-199
D42085J		E002-02/ /		RCPT-				001-099
D42085J		E2-2/ /		RCPT-				115-199
	1	UNUSED						ALL
	2		W1173	0304	22		32-42-11	ALL
	3	UNUSED						ALL
	4		W1173	0139	22		22-14-21	ALL
	5		W1173	0134	22		22-14-21	ALL
	6		W1173	0136	22		22-14-21	ALL
	7		W1173	0138	22		22-14-21	ALL
	8		W1173	5121R	24		34-22-91	001-099
	8	UNUSED						115-199
	9		W1173	5121B	24		34-22-91	001-099
	9	UNUSED						115-199
	10		W1173	5121Z			34-22-91	001-099
	10	UNUSED						115-199
	11		W1173	0003	22		34-22-26	ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W1173	0505	24		34-22-27	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 103

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42085J		E002-02/ /		RCPT- (continued)				001-099
D42085J		E2-2/ /		RCPT- (continued)				115-199
	19		W1173	3001R	24		34-12-21	ALL
	20		W1173	3001B	24		34-12-21	ALL
	21		W1173	3001Y	24		34-12-21	ALL
	22		W1173	0088	22		34-12-21	ALL
	23		W1173	0046	22		34-12-21	ALL
	24		W1173	0156	22		32-31-11	ALL
	25		W1173	5091R	24		22-12-21	ALL
	26		W1173	5091B	24		22-12-21	ALL
	27		W1173	5091Z			22-12-21	ALL
	28		W1173	5052R	24		22-13-21	ALL
	29		W1173	5052B	24		22-13-21	ALL
	30		W1173	5052Z			22-13-21	ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34		W1173	0107	22		22-11-22	ALL
	35		W1173	0108	22		22-11-22	ALL
	36	UNUSED						001-099
	36		W1173	0085	22		22-11-22	115-199
	37		W1173	0109	22		22-11-22	ALL
	38		W1173	5116R	24		31-25-11	ALL
	39		W1173	5116B	24		31-25-11	ALL
	40		W1173	FRBD			31-25-11	ALL
	41		W1173	0158	22		22-41-13	ALL
	42		W1173	0031	24		34-22-27	ALL
	43		W1173	0032	24		34-22-27	ALL
	44		W1173	0037	24		34-22-27	ALL
	45		W1173	0007	24		34-22-27	001-009, 115-199
	45		W1173	8012	22		34-22-27	010-099
	46		W1173	0038	24		34-22-27	ALL
	47	UNUSED						ALL
	48		W1173	0735	22		34-12-62	ALL
	49		W1173	0736	22		34-12-62	ALL
	50	UNUSED						001-099
	50		W1173	5186R	24		34-22-18	115-199
	51	UNUSED						001-099
	51		W1173	5186B	24		34-22-18	115-199
	52	UNUSED						001-099
	52		W1173	FRLK			34-22-18	115-199

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 104

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42085J		E002-02/ /		RCPT- (continued)				001-099
D42085J		E2-2/ /		RCPT- (continued)				115-199
	53		W1173	5131R	24		34-22-91	001-099
	53		W1173	5130R	24		34-55-21	115-199
	54		W1173	5131B	24		34-22-91	001-099
	54		W1173	5130B	24		34-55-21	115-199
	55		W1173	5131Z			34-22-91	001-099
	55		W1173	5130Z			34-55-21	115-199
			W1173	0275	20		31-25-11	ALL
			W1173	5116Z			31-25-11	ALL
			W1173	FRBD			31-25-11	ALL
			W1173	0686	22		34-22-18	115-199
			W1173	5186Z			34-22-18	115-199
			W1173	FRLK			34-22-18	115-199
D42085P		E002-02/ /		PLUG				001-099
D42085P		E2-2/ /		PLUG				115-199
I	1	UNUSED						001-099
I	1		W2253	0107	22		34-61-26	115-199
	2		W2253	0024	22		32-42-11	ALL
	3		W2253	0003	22		SPARE	ALL
	4		W2253	0008	22		22-14-21	ALL
	5		W2253	0005	22		22-14-21	ALL
	6		W2253	0006	22		22-14-21	ALL
	7		W2253	0007	22		22-14-21	ALL
	8		W2253	5003R	24		34-22-91	001-099
	8		W2253	5003R	24		SPARE	115-199
	9		W2253	5003B	24		34-22-91	001-099
	9		W2253	5003B	24		SPARE	115-199
	10		W2253	5003Z			34-22-91	001-099
	10		W2253	5003Z			SPARE	115-199
	11		W2253	0018	22		34-22-26	001-099
	11		W2253	0018	24		34-22-26	115-199
	12	UNUSED						001-099
	12		W2253	2502R	24		SPARE	115-199
	13	UNUSED						001-099
	13		W2253	2502B	24		SPARE	115-199
	14	UNUSED						001-099
	14		W2253	2502Z			SPARE	115-199
	15	UNUSED						001-099
	15		W2253	0021	22		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 105

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42085P		E002-02/ /		PLUG (continued)				001-099
D42085P		E2-2/ /		PLUG (continued)				115-199
	16	UNUSED						001-099
	16		W2253	0022	22		SPARE	115-199
	17	UNUSED						001-099
	17		W2253	0108	22		34-61-25	115-199
	18		W2253	0023	24		34-22-27	ALL
	19		W2253	3001R	24		34-12-21	ALL
	20		W2253	3001B	24		34-12-21	ALL
	21		W2253	3001Y	24		34-12-21	ALL
	22		W2253	2001R	22		34-12-21	ALL
	23		W2253	2001B	22		34-12-21	ALL
	24		W2253	0064	22		32-31-11	ALL
	25		W2253	5007R	24		22-12-21	ALL
	26		W2253	5007B	24		22-12-21	ALL
	27		W2253	5007Z			22-12-21	ALL
	28		W2253	5008R	24		22-13-21	ALL
	29		W2253	5008B	24		22-13-21	ALL
	30		W2253	5008Z			22-13-21	ALL
	31	UNUSED						001-099
	31		W2253	2511R	24		SPARE	115-199
	32	UNUSED						001-099
	32		W2253	2511B	24		SPARE	115-199
	33	UNUSED						001-099
	33		W2253	2511Z			SPARE	115-199
	34		W2253	0032	22		22-11-22	ALL
	35		W2253	0033	22		22-11-22	ALL
	36		W2253	0034	22		SPARE	001-099
	36		W2253	0034	22		22-11-22	115-199
	37		W2253	0035	22		22-11-22	ALL
	38		W2253	5014R	24		31-25-11	ALL
	39		W2253	5014B	24		31-25-11	ALL
	40		W2253	5014Z			31-25-11	ALL
	41		W2253	0015	22		22-41-13	ALL
	42		W2253	0009	24		34-22-27	ALL
	43		W2253	0010	24		34-22-27	ALL
	44		W2253	0011	24		34-22-27	ALL
	45		W2253	0029	24		34-22-27	ALL
	46		W2253	0012	24		34-22-27	ALL
	47	UNUSED						ALL
	48		W2253	0048	22		34-12-62	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 106

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42085P		E002-02/ /		PLUG (continued)				001-099
D42085P		E2-2/ /		PLUG (continued)				115-199
	49		W2253	0049	22		34-12-62	ALL
	50		W2253	2501R	24		SPARE	001-099
	50		W2253	5020R	24		34-22-18	115-199
	51		W2253	2501B	24		SPARE	001-099
	51		W2253	5020B	24		34-22-18	115-199
	52		W2253	2501Z			SPARE	001-099
	52		W2253	5020Z			34-22-18	115-199
	53		W2253	5002R	24		34-22-91	001-099
	53		W2253	5019R	24		34-55-21	115-199
	54		W2253	5002B	24		34-22-91	001-099
	54		W2253	5019B	24		34-55-21	115-199
	55		W2253	5002Z			34-22-91	001-099
	55		W2253	5019Z			34-55-21	115-199
D42086J		E4-2/ /		RCPT-				ALL
	1		W1275	2053B	24		21-52-11	ALL
	2		W1275	2053R	24		21-52-11	ALL
	3		W1275	2054B	24		21-52-11	001-099
	3	UNUSED						115-199
	4		W1275	2054R	24		21-52-11	001-099
	4	UNUSED						115-199
	5		W1275	2055B	24		21-52-11	001-099
	5	UNUSED						115-199
	6		W1275	2055R	24		21-52-11	001-099
	6	UNUSED						115-199
	7		W1275	2056B	24		21-52-11	001-099
	7	UNUSED						115-199
	8		W1275	2056R	24		21-52-11	001-099
	8	UNUSED						115-199
	9		W1275	2057B	24		21-52-11	001-099
	9	UNUSED						115-199
	10		W1275	2057R	24		21-52-11	001-099
	10	UNUSED						115-199
	11		W1275	6224	24		21-52-21	ALL
	12		W1275	6225	24		21-52-21	ALL
	13		W1275	6192	24		21-52-21	ALL
	14		W1275	6193	24		21-52-21	ALL
	15		W1275	6401	24		21-52-21	ALL
	16		W1275	6402	24		21-52-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 107

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42086J		E4-2/ /		RCPT- (continued)				ALL
	17		W1275	2062R	24		21-52-31	ALL
	18		W1275	2062B	24		21-52-31	ALL
	19		W1275	4002R	24		21-52-31	ALL
	20		W1275	4002B	24		21-52-31	ALL
	21		W1275	4002Y	24		21-52-31	ALL
	22		W1275	2063R	24		21-52-31	ALL
	23		W1275	2063B	24		21-52-31	ALL
	24		W1275	6211	24		36-21-11	ALL
	25		W1275	6208	24		36-21-11	ALL
	26		W1275	2072B	24		36-22-21	ALL
	27		W1275	2072R	24		36-22-21	ALL
	28		W1275	5599	24		36-22-11	001-099
	28		W1275	5601	24		36-22-11	001-099
	28		W1275	5597	24		36-22-11	115-199
	29		W1275	0842	22		29-32-21	ALL
	30	UNUSED						ALL
	31		W1275	5756	24		21-51-25	ALL
	31		W1275	5757	24		21-51-25	ALL
	32		W1275	2077B	24		21-52-11	001-099
	32	UNUSED						115-199
	33		W1275	2077R	24		21-52-11	001-099
	33	UNUSED						115-199
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W1275	4002G	24		21-52-31	ALL
	41		W1275	6218	24		21-64-11	ALL
	42		W1275	6222	24		21-64-11	ALL
	43		W1275	6207	24		21-64-11	ALL
	44		W1275	6203	24		21-64-11	ALL
	45		W1275	6204	24		21-64-11	ALL
	46		W1275	6205	24		21-64-11	ALL
	47		W1275	6219	24		21-64-11	ALL
	48		W1275	6221	24		21-64-11	ALL
	49		W1275	6206	24		21-64-11	ALL
	50		W1275	2068B	24		21-65-12	ALL
	51		W1275	2068R	24		21-65-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 108

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42086J		E4-2/ /		RCPT- (continued)				ALL
	52		W1275	2069B	24		21-65-12	ALL
	53		W1275	2069R	24		21-65-12	ALL
	54		W1275	2070B	24		21-65-12	ALL
	55		W1275	2070R	24		21-65-12	ALL
	DED		W1275	6211Z			36-21-11	115-199
D42086P		E004-02/ /		PLUG				001-099
D42086P		E4-2/ /		PLUG				115-199
	1		W4106	2014B	24		21-52-11	ALL
	2		W4106	2014R	24		21-52-11	ALL
	3		W4106	2015B	24		21-52-11	001-099
	3	UNUSED						115-199
	4		W4106	2015R	24		21-52-11	001-099
	4	UNUSED						115-199
	5		W4106	2016B	24		21-52-11	001-099
	5	UNUSED						115-199
	6		W4106	2016R	24		21-52-11	001-099
	6	UNUSED						115-199
	7		W4106	2017B	24		21-52-11	001-099
	7	UNUSED						115-199
	8		W4106	2017R	24		21-52-11	001-099
	8	UNUSED						115-199
	9		W4106	2018B	24		21-52-11	001-099
	9	UNUSED						115-199
	10		W4106	2018R	24		21-52-11	001-099
	10	UNUSED						115-199
	11		W4106	3020R	24		21-52-21	ALL
	12		W4106	3020B	24		21-52-21	ALL
	13		W4106	3020Y	24		21-52-21	ALL
	14		W4106	3021Y	24		21-52-21	ALL
	15		W4106	3021B	24		21-52-21	ALL
	16		W4106	3021R	24		21-52-21	ALL
	17		W4106	2003R	24		21-52-31	ALL
	18		W4106	2003B	24		21-52-31	ALL
	19		W4106	4000R	24		21-52-31	ALL
	20		W4106	4000B	24		21-52-31	ALL
	21		W4106	4000Y	24		21-52-31	ALL
	22		W4106	2009R	24		21-52-31	ALL
	23		W4106	2009B	24		21-52-31	ALL
	24		W4106	2037R	24		36-21-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 109

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42086P		E004-02/ /		PLUG (continued)				001-099
D42086P		E4-2/ /		PLUG (continued)				115-199
	25		W4106	2037B	24		36-21-11	ALL
	26		W4106	2038B	24		36-22-21	ALL
	27		W4106	2038R	24		36-22-21	ALL
	28		W4106	0095	24		36-22-11	ALL
	29		W4106	0163	22		29-32-21	ALL
	30	UNUSED						ALL
	31		W4106	0170	24		21-51-25	ALL
	32		W4106	2039B	24		21-52-11	001-099
	32	UNUSED						115-199
	33		W4106	2039R	24		21-52-11	001-099
	33	UNUSED						115-199
	34		W4106	0248	24		SPARE	ALL
	35		W4106	0249	24		SPARE	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W4106	4000G	24		21-52-31	ALL
	41		W4106	3022R	24		21-64-11	ALL
	42		W4106	3022B	24		21-64-11	ALL
	43		W4106	3022Y	24		21-64-11	ALL
	44		W4106	3023R	24		21-64-11	ALL
	45		W4106	3023B	24		21-64-11	ALL
	46		W4106	3023Y	24		21-64-11	ALL
	47		W4106	3024R	24		21-64-11	ALL
	48		W4106	3024B	24		21-64-11	ALL
	49		W4106	3024Y	24		21-64-11	ALL
	50		W4106	2019B	24		21-65-12	ALL
	51		W4106	2019R	24		21-65-12	ALL
	52		W4106	2011B	24		21-65-12	ALL
	53		W4106	2011R	24		21-65-12	ALL
	54		W4106	2036B	24		21-65-12	ALL
	55		W4106	2036R	24		21-65-12	ALL
D42087J		E002-02/ /		RCPT-				001-099
D42087J		E2-2/ /		RCPT-				115-199
	1		W1173	5067Z			34-13-21	ALL
	2		W1173	5067R	24		34-13-21	ALL
	3		W1173	5067B	24		34-13-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 110

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42087J		E002-02/ /		RCPT- (continued)				001-099
D42087J		E2-2/ /		RCPT- (continued)				115-199
	4		W1173	5036R	24		34-51-21	ALL
	5		W1173	5036B	24		34-51-21	ALL
	6		W1173	5036Z			34-51-21	ALL
	7		W1173	0264	22		34-51-21	ALL
	8	UNUSED						001-099
	8		W1173	0309	22		34-12-22	115-199
	9	UNUSED						001-099
	9		W1173	0310	22		34-12-22	115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						001-099
	14		W1173	5121R	24		34-22-93	115-199
	15	UNUSED						001-099
	15		W1173	5121B	24		34-22-93	115-199
	16	UNUSED						001-099
	16		W1173	5121Z			34-22-93	115-199
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W1173	5070R	24		34-31-21	ALL
	22		W1173	5070B	24		34-31-21	ALL
	23		W1173	5070Z			34-31-21	ALL
	24		W1173	0323	22		34-22-26	ALL
D42087P		E002-02/ /		PLUG				001-099
D42087P		E2-2/ /		PLUG				115-199
	1		W2253	5001Z			34-13-21	ALL
	2		W2253	5001R	24		34-13-21	ALL
	3		W2253	5001B	24		34-13-21	ALL
	4		W2253	5012R	24		34-51-21	ALL
	5		W2253	5012B	24		34-51-21	ALL
	6		W2253	5012Z			34-51-21	ALL
	7		W2253	0039	22		34-51-21	ALL
	8	UNUSED						001-099
	8		W2253	0085	22		34-12-22	115-199
	9	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 111

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42087P		E002-02/ /		PLUG (continued)				001-099
D42087P		E2-2/ /		PLUG (continued)				115-199
	9		W2253	0086	22		34-12-22	115-199
	10		W2253	5016B	24		SPARE	ALL
	11		W2253	5016R	24		SPARE	ALL
	12		W2253	5016Z			SPARE	ALL
	13	UNUSED						001-099
	13		W2253	0095	22		SPARE	115-199
	14	UNUSED						001-099
	14		W2253	5018R	24		34-22-93	115-199
	15	UNUSED						001-099
	15		W2253	5018B	24		34-22-93	115-199
	16	UNUSED						001-099
	16		W2253	5018Z			34-22-93	115-199
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						001-099
	20		W2253	0031	24		34-61-18	115-199
	21		W2253	5011R	24		34-51-21	ALL
	22		W2253	5011B	24		34-51-21	ALL
	23		W2253	5011Z			34-51-21	ALL
	24		W2253	0066	22		34-22-26	ALL
D42089J		E002-04/ /		RCPT				001-099
D42089J		E2-4/ /		RCPT				115-199
	1		W1177	0034	24		34-21-21	ALL
	2	UNUSED						ALL
	3		W1177	5036R	24		34-22-92	ALL
	4		W1177	5036B	24		34-22-92	ALL
	5		W1177	5036Z			34-22-92	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 112

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42089J		E002-04/ /		RCPT (continued)				001-099
D42089J		E2-4/ /		RCPT (continued)				115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
D42089P		E002-04/ /		PLUG				001-099
D42089P		E2-4/ /		PLUG				115-199
	1		W2253	0001	24		34-12-62	ALL
	2	UNUSED						001-099
	2		W2253	0002	24		SPARE	115-199
	3		W2253	5004R	24		34-22-92	ALL
	4		W2253	5004B	24		34-22-92	ALL
	5		W2253	5004Z			34-22-92	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W2253	5028R	24		SPARE	001-099
	9		W2253	2505R	24		SPARE	115-199
	10		W2253	5028B	24		SPARE	001-099
	10		W2253	2505B	24		SPARE	115-199
	11		W2253	5028Z			SPARE	001-099
	11		W2253	2505Z			SPARE	115-199
	12	UNUSED						001-099
	12		W2253	2506R	24		SPARE	115-199
	13		W2253	2506B	24		SPARE	115-199
	14		W2253	2506Z			SPARE	115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17		W2253	0084	22		SPARE	115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 113

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42089P		E002-04/ /		PLUG (continued)				001-099
D42089P		E2-4/ /		PLUG (continued)				115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
D42091J		E003-02/ /		RCPT-				001-099
D42091J		E3-2/ /		RCPT-				115-199
	1		W1423	0096	24		32-61-12	001-099
	1		W1423	0096	22		32-61-12	115-199
	2		W1423	0091	22		32-61-12	ALL
	3		W1423	0094	22		32-61-12	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1423	0029	22		34-53-21	ALL
	8		W1423	5210R	24		34-22-91	001-099
	8	UNUSED						115-199
	9		W1423	5210B	24		34-22-91	001-099
	9	UNUSED						115-199
	10		W1423	5210Z			34-22-91	001-099
	10	UNUSED						115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18		W1423	5006R	24		34-55-21	ALL
	19		W1423	5006B	24		34-55-21	ALL
	20		W1423	FRAF			34-55-21	ALL
	21		W1423	0044	24		34-55-21	001-099
	21		W1423	0041	22		34-55-21	115-199
	22		W1423	2001R	24		23-51-12	001-099
	22	UNUSED						115-199
	23		W1423	2001B	24		23-51-12	001-099
	23	UNUSED						115-199
	24		W1423	0048	24		23-51-12	001-099
	24	UNUSED						115-199
	25		W1423	0050	22		23-51-12	001-099
	25		W1423	0053	22		34-55-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 114

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42091J		E003-02/ /		RCPT- (continued)				001-099
D42091J		E3-2/ /		RCPT- (continued)				115-199
	26		W1423	2202R	22		34-51-21	001-099
	26	UNUSED						115-199
	27		W1423	0097	24		32-61-12	ALL
	28		W1423	2202B	22		34-51-21	001-099
	28	UNUSED						115-199
	29		W1423	5202R	24		34-51-21	001-099
	29	UNUSED						115-199
	30		W1423	5202B	24		34-51-21	001-099
	30	UNUSED						115-199
	31		W1423	FRCL			34-51-21	001-099
	31	UNUSED						115-199
	32	UNUSED						115-199
	33		W1423	0044	24		34-55-21	115-199
	34	UNUSED						115-199
	35		W1423	2001R	24		23-51-12	115-199
	36		W1423	2001B	24		23-51-12	115-199
	37		W1423	0048	24		23-51-12	115-199
	38		W1423	0050	22		23-51-12	115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
			W1423	0232	20		34-51-21	001-099
			W1423	5202Z			34-51-21	001-099
			W1423	FRCL			34-51-21	001-099
			W1423	0056	20		34-55-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 115

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42091J		E003-02/ /		RCPT- (continued)				001-099
D42091J		E3-2/ /		RCPT- (continued)				115-199
			W1423	5006Z			34-55-21	ALL
			W1423	FRAF			34-55-21	ALL
D42091P		E003-02/ /		PLUG				001-099
D42091P		E3-2/ /		PLUG				115-199
	1		W2253	0075	24		32-61-12	001-099
	1		W2253	0075	22		32-61-12	115-199
	2		W2253	0083	22		32-61-12	ALL
	3		W2253	0074	22		32-61-12	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W2253	0019	22		34-12-62	ALL
	8		W2253	5017R	24		34-22-91	001-099
	8		W2253	2503R	24		SPARE	115-199
	9		W2253	5017B	24		34-22-91	001-099
	9		W2253	2503B	24		SPARE	115-199
	10		W2253	5017Z			34-22-91	001-099
	10		W2253	2503Z			SPARE	115-199
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W2253	0020	22		SPARE	ALL
	15		W2253	5006R	24		SPARE	001-099
	15	UNUSED						115-199
	16		W2253	5006B	24		SPARE	001-099
	16	UNUSED						115-199
	17		W2253	5006Z			SPARE	001-099
	17	UNUSED						115-199
	18		W2253	5010R	24		34-55-21	ALL
	19		W2253	5010B	24		34-55-21	ALL
	20		W2253	5010Z			34-55-21	ALL
	21		W2253	0038	24		34-55-21	001-099
	21		W2253	0087	22		34-55-21	115-199
	22		W2253	3501R	24		23-51-12	001-099
	22	UNUSED						115-199
	23		W2253	3501B	24		23-51-12	001-099
	23	UNUSED						115-199
	24		W2253	3501Y	24		23-51-12	001-099

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 116

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42091P		E003-02/ /		PLUG (continued)				001-099
D42091P		E3-2/ /		PLUG (continued)				115-199
	24	UNUSED						115-199
	25		W2253	3501Z			23-51-12	001-099
	25		W2253	0088	24		34-55-21	115-199
	26		W2253	2006R	22		34-51-21	001-099
	26	UNUSED						115-199
	27		W2253	0076	24		32-61-12	ALL
	28		W2253	2006B	22		34-51-21	001-099
	28	UNUSED						115-199
	29		W2253	5013R	24		34-51-21	001-099
	29	UNUSED						115-199
	30		W2253	5013B	24		34-51-21	001-099
	30	UNUSED						115-199
	31		W2253	5013Z			34-51-21	001-099
	31	UNUSED						115-199
	32	UNUSED						115-199
	33		W2253	0038	24		34-55-21	115-199
	34	UNUSED						115-199
	35		W2253	3501R	24		23-51-12	115-199
	36		W2253	3501B	24		23-51-12	115-199
	37		W2253	3501Y	24		23-51-12	115-199
	38		W2253	3501Z			23-51-12	115-199
	39	UNUSED						115-199
	40		W2253	2510R	24		SPARE	115-199
	41		W2253	2510B	24		SPARE	115-199
	42		W2253	2510Z			SPARE	115-199
	43		W2253	0077	22		SPARE	115-199
	44		W2253	0078	22		SPARE	115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 117

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42093J		E4-2/ /		RCPT-				ALL
	1		W1275	0080	24		77-12-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						001-099
	4		W1275	2509R	24		77-12-11	115-199
	5	UNUSED						001-099
	5		W1275	2509B	24		77-12-11	115-199
	6	UNUSED						001-099
	6		W1275	2509Z			77-12-11	115-199
	7		W1275	0394	24		32-61-21	ALL
	8		W1275	1156	22		34-12-62	ALL
	9		W1275	0386	24		32-61-21	ALL
	10		W1275	4503Z			77-21-11	ALL
	11		W1275	4503W	22		77-21-11	ALL
	12		W1275	4503G	22		77-21-11	ALL
	13		W1275	2509R	24		77-12-11	001-099
	13	UNUSED						115-199
	14		W1275	2509B	24		77-12-11	001-099
	14	UNUSED						115-199
	15		W1275	2509Z			77-12-11	001-099
	15	UNUSED						115-199
D42093P		E004-02/ /		PLUG				001-099
D42093P		E4-2/ /		PLUG				115-199
	1		W2253	0025	24		77-12-11	001-099
	1		W2253	0070	24		77-12-11	115-199
	2	UNUSED						001-099
	2		W2253	0071	22		SPARE	115-199
	3	UNUSED						001-099
	3		W2253	0072	22		SPARE	115-199
	4		W2253	2504R	24		SPARE	001-099
	4		W2253	2504R	24		77-12-11	115-199
	5		W2253	2504B	24		SPARE	001-099
	5		W2253	2504B	24		77-12-11	115-199
	6		W2253	2504Z			SPARE	001-099
	6		W2253	2504Z			77-12-11	115-199
	7		W2253	0067	22		32-61-21	ALL
	8		W4477	0097	22		34-12-62	ALL
	9		W2253	0069	22		32-61-21	ALL
	10		W2253	4501Z			77-21-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 118

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42093P		E004-02/ /		PLUG (continued)				001-099
D42093P		E4-2/ /		PLUG (continued)				115-199
	11		W2253	4501W	22		77-21-11	001-099
	11	TD	W2253	4501W	20		77-21-11	115-199
	12		W2253	4501G	22		77-21-11	001-099
	12	TC	W2253	4501G	20		77-21-11	115-199
	13		W2253	2512R	24		77-12-11	001-099
	13	UNUSED						115-199
	14		W2253	2512B	24		77-12-11	001-099
	14	UNUSED						115-199
	15		W2253	2512Z			77-12-11	001-099
	15	UNUSED						115-199
D42094J		P33/ /		RCPT				ALL
	1	UNUSED						001-099
	1		W1230	0211	16		29-21-31	115-199
	2		W1230	0213	22		29-21-31	001-099
	2		W1230	0213	18		29-21-31	115-199
	3		W1230	0264	22		29-22-11	001-099
	3		W1230	0190	22		29-22-11	115-199
	4		W1230	0265	22		29-22-11	001-099
	4		W1230	0253	22		29-22-11	115-199
	5		W1230	0267	22		29-22-11	001-099
	5		W1230	0181	22		29-22-11	115-199
	6		W1230	0212	16		29-21-31	ALL
	7		W1230	0215	22		29-21-31	001-099
	7		W1230	0215	18		29-21-31	115-199
	8		W1230	0190	22		29-22-11	001-099
	8		W1230	0199	22		29-22-11	115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
D42094P		P033-00/ /		PLUG				001-099
D42094P		P33/ /		PLUG				115-199
	1	UNUSED						001-099
	1		W4220	0141	16		29-21-31	115-199
	2		W4220	0101	20		29-21-31	001-099

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 119

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42094P		P033-00/ /		PLUG (continued)				001-099
D42094P		P33/ /		PLUG (continued)				115-199
	2		W4220	0101	18		29-21-31	115-199
	3		W4220	0138	22		29-22-11	ALL
	4		W4220	0139	22		29-22-11	ALL
	5		W4220	0003	22		29-22-11	001-099
	5		W4220	0140	22		29-22-11	115-199
	6		W4220	0104	12		29-21-31	001-099
	6		W4220	0142	16		29-21-31	115-199
	7		W4220	0111	20		29-21-31	001-099
	7		W4220	0111	18		29-21-31	115-199
	8		W4220	0137	22		29-22-11	001-099
	8		W4220	0132	22		29-22-11	115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
D42095J		E5-2/ /		RCPT				ALL
	1		W1284	0103	24		27-51-11	ALL
	2		W1284	0104	24		27-51-11	ALL
	3		W1284	0105	24		27-51-11	ALL
	4		W1284	0106	24		27-51-11	ALL
	5		W1284	0107	24		27-51-11	ALL
	6		W1284	0108	24		27-51-11	ALL
	7	UNUSED						001-099
	7		W1284	0109	24		27-51-11	115-199
	8	UNUSED						ALL
	9		W1284	0102	24		27-51-11	ALL
	10		W1284	0101	24		27-51-11	ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1284	0205	24		27-51-31	001-099
	14		W1284	0205	22		27-51-31	115-199
	15		W1284	0016	22		27-51-21	ALL
	16		W1284	0031	22		27-51-21	ALL
	17		W1284	0034	22		27-51-21	ALL
	18	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 120

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42095J		E5-2/ /		RCPT (continued)				ALL
	19		W1284	0110	24		27-51-11	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						001-099
	33	UNUSED						001-099
	34	UNUSED						001-099
	35	UNUSED						001-099
	36	UNUSED						001-099
	37	UNUSED						001-099
	38	UNUSED						001-099
	39	UNUSED						001-099
	40	UNUSED						001-099
	41	UNUSED						001-099
	42	UNUSED						001-099
	43	UNUSED						001-099
	44	UNUSED						001-099
	45	UNUSED						001-099
	46	UNUSED						001-099
	47	UNUSED						001-099
	48	UNUSED						001-099
	49	UNUSED						001-099
	50	UNUSED						001-099
	51	UNUSED						001-099
	52	UNUSED						001-099
	53	UNUSED						001-099
	54	UNUSED						001-099
	55	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 121

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42095P D42095P		E005-02/ / E5-2/ /		PLUG PLUG				001-099 115-199
	1		W2253	0054	24		27-51-11	ALL
	2		W2253	0055	24		27-51-11	ALL
	3		W2253	0056	24		27-51-11	ALL
	4		W2253	0057	24		27-51-11	ALL
	5		W2253	0058	24		27-51-11	ALL
	6		W2253	0059	24		27-51-11	ALL
	7	UNUSED						001-099
	7		W2253	0060	24		27-51-11	115-199
	8		W2253	0050	22		SPARE	ALL
	9		W2253	0053	24		27-51-11	001-099
	9		W2253	0053	22		27-51-11	115-199
	10		W2253	0052	24		27-51-11	001-099
	10		W2253	0052	22		27-51-11	115-199
	11		W2253	5020B	24		SPARE	001-099
	11	UNUSED						115-199
	12		W2253	5020R	24		SPARE	001-099
	12	UNUSED						115-199
	13		W2253	5020Z			SPARE	001-099
	13	UNUSED						115-199
	14		W2253	0065	24		27-51-31	001-099
	14		W2253	0065	22		27-51-31	115-199
	15		W2253	0104	22		27-51-21	ALL
	16		W2253	0105	22		27-51-21	ALL
	17		W2253	0106	22		27-51-21	ALL
	18	UNUSED						ALL
	19		W2253	0061	24		27-51-11	ALL
	20		W2253	0051	22		SPARE	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W2253	5024Z			SPARE	001-099
	25	UNUSED						115-199
	26		W2253	5024R	24		SPARE	001-099
	26	UNUSED						115-199
	27		W2253	5024B	24		SPARE	001-099
	27	UNUSED						115-199
	28		W2253	5025R	24		SPARE	001-099
	28		W2253	2509R	24		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 122

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42095P		E005-02/ /		PLUG (continued)				001-099
D42095P		E5-2/ /		PLUG (continued)				115-199
	29		W2253	5025B	24		SPARE	001-099
	29		W2253	2509B	24		SPARE	115-199
	30		W2253	5025Z			SPARE	001-099
	30		W2253	2509Z			SPARE	115-199
	31	UNUSED						ALL
	32		W2253	5026R	24		SPARE	001-099
	33		W2253	5026B	24		SPARE	001-099
	34		W2253	5026Z			SPARE	001-099
	35	UNUSED						001-099
	36	UNUSED						001-099
	37	UNUSED						001-099
	38	UNUSED						001-099
	39	UNUSED						001-099
	40	UNUSED						001-099
	41	UNUSED						001-099
	42	UNUSED						001-099
	43	UNUSED						001-099
	44	UNUSED						001-099
	45	UNUSED						001-099
	46	UNUSED						001-099
	47	UNUSED						001-099
	48	UNUSED						001-099
	49	UNUSED						001-099
	50	UNUSED						001-099
	51	UNUSED						001-099
	52	UNUSED						001-099
	53	UNUSED						001-099
	54	UNUSED						001-099
	55	UNUSED						001-099
D42096J		P36/ /		RCPT				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1260	8512	22		29-11-22	ALL
	4	UNUSED						ALL
	5		W1260	0411	22		77-12-42	ALL
	6		W1260	0583	20		26-22-21	001-099
	6		W1260	8514	22		29-11-22	115-199
	7	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 123

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42096J		P36/ /		RCPT (continued)				ALL
	8	UNUSED						ALL
	9		W1260	5999	24		73-21-22	ALL
	10		W1260	5998	24		73-21-22	ALL
	11		W1260	0586	20		26-22-21	001-099
	11	UNUSED						115-199
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W1260	0037	12		29-21-31	ALL
	15	UNUSED						ALL
	16		W1260	0588	16		29-21-31	001-099
	16		W1260	0034	12		29-21-31	115-199
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
D42096P		P036-00/ /		PLUG				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W4236	0096	20		29-11-22	ALL
	4	UNUSED						ALL
	5		W4236	0196	22		77-12-42	ALL
	6		W4236	0172	20		26-22-21	001-099
	6		W4236	0232	20		29-11-22	115-199
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W4236	0233	24		73-21-22	ALL
	10		W4236	0113	24		73-21-22	ALL
	11		W4236	0180	20		26-22-21	001-099
	11	UNUSED						115-199
	12	UNUSED						ALL
	13	UNUSED						ALL
	14		W4236	0181	12		29-21-31	ALL
	15	UNUSED						ALL
	16		W4236	0175	12		29-21-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 124

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42096P		P036-00/ /		PLUG (continued)				ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
D42098J		AB1862/ /		RCPT-				ALL
	1		W2814	0015	20		33-45-11	ALL
	2		W2814	0016	20		SPARE	ALL
	3	UNUSED						ALL
D42098P		AB1862/250/		PLUG-				ALL
	1		W3206	0004	18		33-45-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42000

Page 125 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42105J		E002-03/ /		RCPT-				001-099
D42105J		E2-3/ /		RCPT-				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W1175	0426	20		34-31-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W1175	2018B	22		34-31-11	ALL
	9		W1175	2018R	22		34-31-11	ALL
	10	UNUSED						ALL
	11		W1175	0427	22		34-31-11	ALL
	12		W1175	5111Z			34-31-11	ALL
	13		W1175	5111R	24		34-31-11	ALL
	14		W1175	5111B	24		34-31-11	ALL
	15	UNUSED						ALL
D42105P		E002-03/ /		PLUG				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W2255	0002	24		34-31-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W2255	2001B	22		34-31-11	ALL
	9		W2255	2001R	22		34-31-11	ALL
	10	UNUSED						ALL
	11		W2255	0003	24		34-31-11	ALL
	12		W2255	5001Z			34-31-11	ALL
	13		W2255	5001R	24		34-31-11	ALL
	14		W2255	5001B	24		34-31-11	ALL
	15	UNUSED						ALL
D42107J		E002-02/ /		RCPT-				001-099
D42107J		E2-2/ /		RCPT-				115-199
	1	UNUSED						ALL
	2		W1173	5068Z			34-31-21	001-099
	2	UNUSED						115-199
	3		W1173	5068B	24		34-31-21	001-099

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42107J		E002-02/ /		RCPT- (continued)				001-099
D42107J		E2-2/ /		RCPT- (continued)				115-199
	3	UNUSED						115-199
	4		W1173	5068R	24		34-31-21	001-099
	4	UNUSED						115-199
	5		W1173	0071	24		34-31-21	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W1173	2021B	22		34-31-21	ALL
	9		W1173	2021R	22		34-31-21	ALL
	10	UNUSED						ALL
	11		W1173	0166	24		34-31-21	ALL
	12	UNUSED						001-099
	12		W1173	5068Z			34-31-21	115-199
	13		W1173	5068B	24		34-31-21	115-199
	14		W1173	5068R	24		34-31-21	115-199
	15	UNUSED						115-199
D42107P		E002-02/ /		PLUG				ALL
	1	UNUSED						ALL
	2		W2257	5001Z			34-31-21	001-099
	2	UNUSED						115-199
	3		W2257	5001B	24		34-31-21	001-099
	3	UNUSED						115-199
	4		W2257	5001R	24		34-31-21	001-099
	4	UNUSED						115-199
	5		W2257	0002	24		34-31-21	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W2257	2001B	22		34-31-21	ALL
	9		W2257	2001R	22		34-31-21	ALL
	10	UNUSED						ALL
	11		W2257	0003	24		34-31-21	ALL
	12	UNUSED						001-099
	12		W2257	5001Z			34-31-21	115-199
	13		W2257	5001B	24		34-31-21	115-199
	14		W2257	5001R	24		34-31-21	115-199
	15	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42109J		E002-03/ /		RCPT-				001-099
D42109J		E2-3/ /		RCPT-				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W1175	0045	22		34-31-31	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W1175	2006B	22		34-31-31	ALL
	9		W1175	2006R	22		34-31-31	ALL
	10	UNUSED						ALL
	11		W1175	0046	22		34-31-31	ALL
	12		W1175	FRGN			34-31-31	ALL
	13		W1175	5024B	24		34-31-31	ALL
	14		W1175	5024R	24		34-31-31	ALL
	15	UNUSED						ALL
			W1175	0047	20		34-31-31	ALL
			W1175	5024Z			34-31-31	ALL
			W1175	FRGN			34-31-31	ALL
D42109P		E002-03/ /		PLUG				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W2259	0002	24		34-31-31	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W2259	2001B	22		34-31-31	ALL
	9		W2259	2001R	22		34-31-31	ALL
	10	UNUSED						ALL
	11		W2259	0003	24		34-31-31	ALL
	12		W2259	5001Z			34-31-31	ALL
	13		W2259	5001B	24		34-31-31	ALL
	14		W2259	5001R	24		34-31-31	ALL
	15	UNUSED						ALL
D42118J		E5-1/ /		RCPT				001-099
	1		W1282	0046	22		24-21-41	001-099

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42118J		E5-1/ /		RCPT (continued)				001-099
	2		W1282	0047	22		24-21-41	001-099
	3		W1282	0048	22		24-21-41	001-099
	4		W1282	0269	22		24-22-41	001-099
	5		W1282	0266	22		24-22-41	001-099
	6		W1282	0267	22		24-22-41	001-099
	7		W1282	0268	24		24-22-41	001-099
	8		W1282	0265	22		24-22-41	001-099
	9		W1282	0262	24		24-22-41	001-099
	10		W1282	4004G	24		24-23-11	001-099
	11		W1282	4004B	24		24-23-11	001-099
	12		W1282	4004Y	24		24-23-11	001-099
	13		W1282	4004R	24		24-23-11	001-099
	14		W1282	0053	24		24-41-11	001-099
	15		W1282	0049	22		33-31-31	001-099
	16	UNUSED						001-099
D42118P		E005-01/ /		PLUG				001-099
	1		W4504	0001	18		24-21-41	001-099
	2		W4504	0002	18		24-21-41	001-099
	3		W4504	0003	18		24-21-41	001-099
	4		W4504	0004	18		24-22-41	001-099
	5		W4504	0005	20		24-22-41	001-099
	6		W4504	0006	20		24-22-41	001-099
	7		W4504	0007	24		24-22-41	001-099
	8		W4504	0010	20		24-22-41	001-099
	9		W4504	0015	24		24-22-41	001-099
	10		W4504	4001G	24		24-23-11	001-099
	11		W4504	4001B	24		24-23-11	001-099
	12		W4504	4001Y	24		24-23-11	001-099
	13		W4504	4001R	24		24-23-11	001-099
	14		W4504	0011	24		24-41-11	001-099
	15		W4504	0014	22		33-31-31	001-099
	16	UNUSED						001-099
D42120J		E5-1/ /		RCPT				001-099
	1		W1282	3003R	20		24-21-41	001-099
	2		W1282	3003B	20		24-21-41	001-099
	3		W1282	3003Y	20		24-21-41	001-099
	4		W1282	4002R	24		24-21-41	001-099
	5		W1282	4002B	24		24-21-41	001-099

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 4

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42120J		E5-1/ /		RCPT (continued)				001-099
	6		W1282	4002Y	24		24-21-41	001-099
	7		W1282	4002G	24		24-21-41	001-099
	8		W1282	2506R	22		24-21-41	001-099
	9		W1282	2506B	22		24-21-41	001-099
	10		W1282	2506Z			24-21-41	001-099
	11		W1282	0049	22		33-31-31	001-099
	12	UNUSED						001-099
	13	UNUSED						001-099
	14	UNUSED						001-099
D42120P		E005-01/ /		PLUG				001-099
	1		W4018	3001R	18		24-21-41	001-099
	2		W4018	3001B	18		24-21-41	001-099
	3		W4018	3001Y	18		24-21-41	001-099
	4		W4018	4001R	20		24-21-41	001-099
	5		W4018	4001B	20		24-21-41	001-099
	6		W4018	4001Y	20		24-21-41	001-099
	7		W4018	4001G	20		24-21-41	001-099
	8		W4018	2501R	20		24-21-41	001-099
	9		W4018	2501B	20		24-21-41	001-099
	10		W4018	2501Z			24-21-41	001-099
	11		W4018	0003	22		33-31-31	001-099
	12		W4018	0013	20		SPARE	001-099
	13		W4018	0014	20		SPARE	001-099
	14	UNUSED						001-099
D42121J		E002-03/ /		RCPT-				001-099
D42121J		E2-3/ /		RCPT-				115-199
	= A1		W1175	006CX			34-31-11	ALL
	= C1		W1175	006CO			34-31-11	ALL
D42121P		E002-03/ /		PLUG				ALL
	= A1		W2261	001CX			34-31-11	ALL
	= C1		W2261	001CO			34-31-11	ALL
D42123J		E002-02/ /		RCPT-				001-099
D42123J		E2-2/ /		RCPT-				115-199
	= A1		W1173	004CX			34-31-21	ALL
	= C1		W1173	004CO			34-31-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 5

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42123P		E002-02/ /		PLUG				ALL
	= A1		W2263	001CX			34-31-21	ALL
	= C1		W2263	001CO			34-31-21	ALL
D42125J		E002-03/ /		RCPT-				001-099
D42125J		E2-3/ /		RCPT-				115-199
	= A1		W1175	005CX			34-31-11	ALL
	= C1		W1175	005CO			34-31-11	ALL
D42125P		E002-03/ /		PLUG				ALL
	= A1		W2265	001CX			34-31-11	ALL
	= C1		W2265	001CO			34-31-11	ALL
D42127J		E002-02/ /		RCPT-				001-099
D42127J		E2-2/ /		RCPT-				115-199
	= A1		W1173	005CX			34-31-21	ALL
	= C1		W1173	005CO			34-31-21	ALL
D42127P		E002-02/ /		PLUG				ALL
	= A1		W2267	001CX			34-31-21	ALL
	= C1		W2267	001CO			34-31-21	ALL
D42129J		E002-01/ /		RCPT-				001-099
D42129J		E2-1/ /		RCPT-				115-199
	1		W1171	0307	22		34-12-11	ALL
	2		W1171	0306	22		34-12-11	ALL
	3		W1171	3005R	24		34-12-11	ALL
	4		W1171	3005B	24		34-12-11	ALL
	5		W1171	3005Y	24		34-12-11	ALL
	6		W1171	0348	22		30-32-11	ALL
	7		W1171	0349	22		30-32-11	ALL
	8		W1171	0304	22		34-12-11	ALL
	9		W1171	0305	22		34-12-11	ALL
	10		W1171	3004B	24		34-12-11	ALL
	11		W1171	3004R	24		34-12-11	ALL
	12		W1171	3004Y	24		34-12-11	ALL
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 6

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42129P		E002-01/ /		PLUG				ALL
	1		W2269	2001R	22		34-12-11	ALL
	2		W2269	2001B	22		34-12-11	ALL
	3		W2269	3001R	24		34-12-11	ALL
	4		W2269	3001B	24		34-12-11	ALL
	5		W2269	3001Y	24		34-12-11	ALL
	6		W2269	0010	22		30-32-11	ALL
	7		W2269	0007	22		30-32-11	ALL
	8		W2269	2002R	22		34-12-11	ALL
	9		W2269	2002B	22		34-12-11	ALL
	10		W2269	3002B	24		34-12-11	ALL
	11		W2269	3002R	24		34-12-11	ALL
	12		W2269	3002Y	24		34-12-11	ALL
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D42132J		E003-04/ /		RCPT				001-099
	1		W1280	1006	24		29-33-11	001-099
	2	UNUSED						001-099
	3	UNUSED						001-099
	=C1		W1280	1006Z			29-33-11	001-099
D42132P		E003-04/ /		PLUG				001-099
	1		W4210	1002	22		29-33-11	001-099
	2	UNUSED						001-099
	3	UNUSED						001-099
	=C1		W4210	1002Z			29-33-11	001-099
D42133J		E002-02/ /		RCPT-				001-099
D42133J		E2-2/ /		RCPT-				115-199
	1		W1173	0218	20		30-33-11	ALL
	2		W1173	5066R	22		34-12-21	ALL
	3		W1173	5066B	22		34-12-21	ALL
	4		W1173	5066Z			34-12-21	ALL
	5	UNUSED						ALL
	6		W1173	0217	20		30-33-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 7

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42133J		E002-02/ /		RCPT- (continued)				001-099
D42133J		E2-2/ /		RCPT- (continued)				115-199
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D42133P		E002-02/ /		PLUG				ALL
	1		W2271	0001	20		30-33-11	ALL
	2		W2271	2502R	20		34-12-21	ALL
	3		W2271	2502B	20		34-12-21	ALL
	4		W2271	2502Z			34-12-21	ALL
	5	UNUSED						ALL
	6		W2271	0006	20		30-33-11	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D42134J		E003-04/ /		RCPT				001-099
	1		W1280	1007	24		29-33-11	001-099
	2	UNUSED						001-099
	3	UNUSED						001-099
	=C1		W1280	1007Z			29-33-11	001-099
D42134P		E003-04/ /		PLUG				001-099
	1		W4220	1001	22		29-33-11	001-099
	2	UNUSED						001-099
	3	UNUSED						001-099
	=C1		W4220	1001Z			29-33-11	001-099
D42135J		E002-01/ /		RCPT-				001-099
D42135J		E2-1/ /		RCPT-				115-199
	1	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 8

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42135J		E002-01/ /		RCPT- (continued)				001-099
D42135J		E2-1/ /		RCPT- (continued)				115-199
	2		W1171	2537Z			34-12-11	ALL
	3		W1171	2537R	22		34-12-11	ALL
	4		W1171	2537B	22		34-12-11	ALL
	5	UNUSED						ALL
	6	UNUSED						001-099
	7	UNUSED						001-099
	8	UNUSED						001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
D42135P		E002-01/ /		PLUG				ALL
	1	UNUSED						ALL
	2		W2271	2501Z			34-12-11	ALL
	3		W2271	2501R	20		34-12-11	ALL
	4		W2271	2501B	20		34-12-11	ALL
	5	UNUSED						ALL
	6	UNUSED						001-099
	7	UNUSED						001-099
	8	UNUSED						001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
D42137J		E002-03/ /		RCPT-				001-099
D42137J		E2-3/ /		RCPT-				115-199
	= A1		W1175	004CX			34-31-31	ALL
	= C1		W1175	004CO			34-31-31	ALL
D42137P		E002-03/ /		PLUG				ALL
	= A1		W2273	001CX			34-31-31	ALL
	= C1		W2273	001CO			34-31-31	ALL
D42138J		E003-04/ /		RCPT				001-099
	1		W1280	1005	24		29-33-11	001-099
	2	UNUSED						001-099
	3	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 9

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42138J		E003-04/ /		RCPT (continued)				001-099
	= C1		W1280	1005Z			29-33-11	001-099
D42138P		E003-04/ /		PLUG				001-099
	1		W4210	1001	22		29-33-11	001-099
	2	UNUSED						001-099
	3	UNUSED						001-099
	= C1		W4210	1001Z			29-33-11	001-099
D42139J		E002-03/ /		RCPT-				001-099
D42139J		E2-3/ /		RCPT-				115-199
	= A1		W1175	003CX			34-31-31	ALL
	= C1		W1175	003CO			34-31-31	ALL
D42139P		E002-03/ /		PLUG				ALL
	= A1		W2275	001CX			34-31-31	ALL
	= C1		W2275	001CO			34-31-31	ALL
D42143J		E002-02/ /		RCPT-				001-099
D42143J		E2-2/ /		RCPT-				115-199
	1		W1173	0213	22		34-12-21	ALL
	2		W1173	0214	22		34-12-21	ALL
	3		W1173	3004R	24		34-12-21	ALL
	4		W1173	3004B	24		34-12-21	ALL
	5		W1173	3004Y	24		34-12-21	ALL
	6		W1173	0170	22		30-32-11	ALL
	7		W1173	0048	22		30-32-11	ALL
	8		W1173	0215	22		34-12-21	ALL
	9		W1173	0221	22		34-12-21	ALL
	10		W1173	3005B	24		34-12-21	ALL
	11		W1173	3005R	24		34-12-21	ALL
	12		W1173	3005Y	24		34-12-21	ALL
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D42143P		E002-02/ /		PLUG				ALL
	1		W2277	2002R	22		34-12-21	ALL
	2		W2277	2002B	22		34-12-21	ALL
	3		W2277	3002R	24		34-12-21	ALL
	4		W2277	3002B	24		34-12-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 10

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42143P		E002-02/ /		PLUG (continued)				ALL
	5		W2277	3002Y	24		34-12-21	ALL
	6		W2277	0010	22		30-32-11	ALL
	7		W2277	0007	22		30-32-11	ALL
	8		W2277	2001B	22		34-12-21	ALL
	9		W2277	2001R	22		34-12-21	ALL
	10		W2277	3001B	24		34-12-21	ALL
	11		W2277	3001R	24		34-12-21	ALL
	12		W2277	3001Y	24		34-12-21	ALL
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D42144J		1189/163/L018		RCPT				ALL
	1		W2024	0001R	20		26-23-11	ALL
	2		W2024	0002R	20		26-23-11	ALL
	3		W2024	0003R	20		26-23-11	ALL
	4		W2024	0004R	20		26-23-11	ALL
	5		W2024	0005R	20		26-23-11	ALL
	6		W2024	0006R	20		26-23-11	ALL
	7		W2024	0007R	20		26-23-11	ALL
	8		W2024	0007R	20		26-23-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D42144P		1189/163/L018		PLUG				ALL
	1		W2626	1001	20		26-23-11	ALL
	2		W2626	0048	20		26-23-11	ALL
	3		W2626	0047	20		26-23-11	ALL
	4		W2626	0049	20		26-23-11	ALL
	5		W2626	0051	20		26-23-11	ALL
	6		W2626	0050	20		26-23-11	ALL
	7		W2626	0068	20		26-23-11	ALL
	8		W2626	0067	20		26-23-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 11

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42144P		1189/163/L018		PLUG (continued)				ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
			W2626	0046	20		26-23-11	ALL
			W2626	1001Z			26-23-11	ALL
D42145J		E3-3/ /		RCPT-				ALL
	= A1		W1433	003CX			34-55-11	ALL
	= C1		W1433	003CO			34-55-11	ALL
D42145P		E003-03/ /		PLUG				ALL
	= A1		W4053	001CX			34-55-11	ALL
	= C1		W4053	001CO			34-55-11	ALL
D42146J		1189/163/R018		RCPT				ALL
	1		W2026	0001R	20		26-23-11	ALL
	2		W2026	0002R	20		26-23-11	ALL
	3		W2026	0003R	20		26-23-11	ALL
	4		W2026	0004R	20		26-23-11	ALL
	5		W2026	0005R	20		26-23-11	ALL
	6		W2026	0006R	20		26-23-11	ALL
	7		W2026	0007R	20		26-23-11	ALL
	8		W2026	0007R	20		26-23-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D42146P		1189/163/R018		PLUG				ALL
	1		W2628	1001	20		26-23-11	ALL
	2		W2628	0038	20		26-23-11	ALL
	3		W2628	0037	20		26-23-11	ALL
	4		W2628	0039	20		26-23-11	ALL
	5		W2628	0041	20		26-23-11	ALL
	6		W2628	0040	20		26-23-11	ALL
	7		W2628	0066	20		26-23-11	ALL
	8		W2628	0034	20		26-23-11	ALL
	9	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 12

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42146P		1189/163/R018		PLUG (continued)				ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
			W2628	0036	20		26-23-11	ALL
			W2628	1001Z			26-23-11	ALL
D42147J		E003-02/ /		RCPT- COAX				001-099
D42147J		E3-2/ /		RCPT- COAX				115-199
	= A1		W1423	003CX			34-55-21	ALL
	= C1		W1423	003CO			34-55-21	ALL
D42147P		E3-2/ /		PLUG				ALL
	= A1		W4055	001CX			34-55-21	ALL
	= C1		W4055	001CO			34-55-21	ALL
D42148J		1187/185/R031		RCPT				ALL
	1		W2088	0001R	20		26-21-11	ALL
	2		W2088	0002R	20		26-21-11	ALL
	3		W2088	0003R	20		26-21-11	ALL
	4		W2088	0004R	20		26-21-11	ALL
	5		W2088	0005R	20		26-21-11	ALL
	6		W2088	0006R	20		26-21-11	ALL
	7		W2088	0007R	20		26-21-11	ALL
	8		W2088	0007R	20		26-21-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D42148P		1187/185/R031		PLUG				ALL
	1		W2626	0030	20		26-21-11	ALL
	2		W2626	0031	20		26-21-11	ALL
	3		W2626	0032	20		26-21-11	ALL
	4		W2626	0027	20		26-21-11	ALL
	5		W2626	0028	20		26-21-11	ALL
	6		W2626	0029	20		26-21-11	ALL
	7		W2626	0059	20		26-21-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 13

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42148P		1187/185/R031		PLUG (continued)				ALL
	8		W2626	0025	20		26-21-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D42149J		E003-02/ /		RCPT-				001-099
	= A1		W1423	012CX			34-51-11	001-099
	= C1		W1423	012CO			34-51-11	001-099
D42149P		E003-02/ /		PLUG				001-099
	= A1		W2723	001CX			34-51-11	001-099
	= C1		W2723	001CO			34-51-11	001-099
D42150J		1196/184/R056		RCPT				ALL
	1		W2090	0001R	20		26-21-11	ALL
	2		W2090	0002R	20		26-21-11	ALL
	3		W2090	0003R	20		26-21-11	ALL
	4		W2090	0004R	20		26-21-11	ALL
	5		W2090	0005R	20		26-21-11	ALL
	6		W2090	0006R	20		26-21-11	ALL
	7		W2090	0007R	20		26-21-11	ALL
	8		W2090	0007R	20		26-21-11	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D42150P		1196/184/R056		PLUG				ALL
	1		W2628	0007	20		26-21-11	ALL
	2		W2628	0008	20		26-21-11	ALL
	3		W2628	0009	20		26-21-11	ALL
	4		W2628	0010	20		26-21-11	ALL
	5		W2628	0011	20		26-21-11	ALL
	6		W2628	0012	20		26-21-11	ALL
	7		W2628	0057	20		26-21-11	ALL
	8		W2628	0014	20		26-21-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 14

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42150P		1196/184/R056		PLUG (continued)				ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D42151J		E003-02/ /		RCPT-				001-099
	= A1		W1423	022CX			34-51-21	001-099
	= C1		W1423	022CO			34-51-21	001-099
D42151P		E3-2/ /		PLUG				001-099
	= A1		W2725	001CX			34-51-21	001-099
	= C1		W2725	001CO			34-51-21	001-099
D42163J		E6-1/ /		RCPT-				001-099
	1		W1001	2505B	24		34-57-11	001-099
	2		W1001	2505N	24		34-57-11	001-099
	3		W1001	FRAG			34-57-11	001-099
	4		W1001	2506B	24		34-57-11	001-099
	5		W1001	2506N	24		34-57-11	001-099
	6		W1001	FRAH			34-57-11	001-099
	7		W1001	2507B	24		34-57-11	001-099
	8		W1001	2507N	24		34-57-11	001-099
	9		W1001	FRAI			34-57-11	001-099
	10		W1001	2005R	22		34-57-11	001-099
	11		W1001	2005B	22		34-57-11	001-099
	12		W1001	0051	22		34-57-11	001-099
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
	16	UNUSED						001-099
	17	UNUSED						001-099
	18	UNUSED						001-099
	19	UNUSED						001-099
	20	UNUSED						001-099
	21	18	W1001	0022	18		34-57-11	001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
			W1001	0045	20		34-57-11	001-099
			W1001	0046	20		34-57-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 15

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42163J		E6-1/ /		RCPT- (continued)				001-099
			W1001	0047	20		34-57-11	001-099
			W1001	2505Z			34-57-11	001-099
			W1001	2506Z			34-57-11	001-099
			W1001	2507Z			34-57-11	001-099
			W1001	FRAG			34-57-11	001-099
			W1001	FRAH			34-57-11	001-099
			W1001	FRAI			34-57-11	001-099
D42163P		E6-1/ /		PLUG				001-099
	1		W2727	8991R	24		34-57-11	001-099
	2		W2727	8991B	24		34-57-11	001-099
	3		W2727	8991ZA			34-57-11	001-099
	4		W2727	8991Y	24		34-57-11	001-099
	5		W2727	8991G	24		34-57-11	001-099
	6		W2727	8991ZB			34-57-11	001-099
	7		W2727	8991V	24		34-57-11	001-099
	8		W2727	8991K	24		34-57-11	001-099
	9		W2727	8991ZC			34-57-11	001-099
	10		W2727	8991O	22		34-57-11	001-099
	11		W2727	8991N	22		34-57-11	001-099
	12		W2727	8991W	20		34-57-11	001-099
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
	16	UNUSED						001-099
	17	UNUSED						001-099
	18	UNUSED						001-099
	19	UNUSED						001-099
	20	UNUSED						001-099
	21		W2727	8991Z			34-57-11	001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
D42165J		AP0003/ /		RCPT				ALL
	1		W2247	0001	22		26-17-11	ALL
	2		W2247	0002	22		22-14-21	ALL
	3		W2247	0003	22		22-41-13	ALL
	4		W2247	0036	22		22-14-21	ALL
	5	18	W2247	0005	20		32-35-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 16

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42165J		AP0003/ /		RCPT (continued)				ALL
	5	18	W2247	0005	18		32-35-11	115-199
	6	18	W2247	0006	20		32-35-11	001-099
	6	18	W2247	0006	18		32-35-11	115-199
	7	18	W2247	0007	20		32-35-11	001-099
	7	18	W2247	0007	18		32-35-11	115-199
	8		W2247	0008	24		32-41-11	ALL
	9		W2247	0009	24		32-41-11	ALL
	10		W2247	0010	24		32-41-11	ALL
	11		W2247	0011	24		32-41-11	ALL
	12		W2247	0012	22		SPARE	001, 003-099, 115-199
	12		W2247	0012	22		34-25-12	002
	13	UNUSED						001-099
	13		W2247	0013	22		SPARE	115-199
	14	UNUSED						001-099
	14		W2247	0014	22		SPARE	115-199
	15	UNUSED						001-099
	15		W2247	0015	22		SPARE	115-199
	16	18	W2247	0016	18		SPARE	001-099
	16	18	W2247	0016	18		32-35-11	115-199
	17	UNUSED						001-099
	17		W2247	0017	22		SPARE	115-199
	18	UNUSED						001-099
	18		W2247	0018	22		SPARE	115-199
	19	UNUSED						001-099
	19		W2247	0019	22		SPARE	115-199
	20	UNUSED						001-099
	20		W2247	0020	22		SPARE	115-199
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 17

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42165J		AP0003/ /		RCPT (continued)				ALL
	34	UNUSED						ALL
	35		W2247	0035	22		22-14-21	ALL
	36		W2247	0031	22		SPARE	ALL
	37	UNUSED						001-099
	37		W2247	0032	22		SPARE	115-199
	38	UNUSED						001-099
	38		W2247	0033	22		SPARE	115-199
	39	UNUSED						001-099
	39		W2247	0034	22		SPARE	115-199
	40		W2247	0023	24		27-51-61	001-099
	40		W2247	0023	22		27-51-61	115-199
	41		W2247	0024	24		27-51-61	001-099
	41		W2247	0024	22		27-51-61	115-199
	42		W2247	0025	24		27-51-61	001-099
	42		W2247	0025	22		27-51-61	115-199
	43		W2247	0026	24		27-51-61	001-099
	43		W2247	0026	22		27-51-61	115-199
	44		W2247	0027	24		27-51-61	001-099
	44		W2247	0027	22		27-51-61	115-199
	45		W2247	0028	24		27-51-61	001-099
	45		W2247	0028	22		27-51-61	115-199
	46		W2247	0029	24		27-51-61	001-099
	46		W2247	0029	22		27-51-61	115-199
	47		W2247	0030	24		27-51-61	001-099
	47		W2247	0030	22		27-51-61	115-199
	48		W2247	0021	24		27-51-61	001-099
	48		W2247	0021	22		27-51-61	115-199
	49		W2247	0022	24		27-51-61	001-099
	49		W2247	0022	22		27-51-61	115-199
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D42165P		217.6/200/R40		PLUG				001-099
D42165P		AP0003/ /		PLUG				115-199
	1		W0003	0303	24		26-17-11	ALL
	2		W0003	0332	22		22-14-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 18

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42165P		217.6/200/R40		PLUG (continued)				001-099
D42165P		AP0003/ /		PLUG (continued)				115-199
	3		W0003	0185	22		22-41-13	ALL
	4		W0003	0154	22		22-14-21	ALL
	5		W0003	0302	20		32-35-11	ALL
	6		W0003	0334	20		32-35-11	ALL
	7		W0003	0305	20		32-35-11	ALL
	8		W0003	0342	24		32-41-11	ALL
	9		W0003	0343	24		32-41-11	ALL
	10		W0003	0371	24		32-41-11	ALL
	11		W0003	0344	24		32-41-11	ALL
	12	UNUSED						001, 003-099, 115-199
	12		W0003	0234	22		34-25-12	002
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						001-099
	16		W0003	0372	20		32-35-11	115-199
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35		W0003	0153	22		22-14-21	ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 19

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42165P		217.6/200/R40		PLUG (continued)				001-099
D42165P		AP0003/ /		PLUG (continued)				115-199
	40		W0003	0064	24		27-51-61	ALL
	41		W0003	0065	24		27-51-61	ALL
	42		W0003	0066	24		27-51-61	ALL
	43		W0003	0071	24		27-51-61	ALL
	44		W0003	0072	24		27-51-61	ALL
	45		W0003	0075	24		27-51-61	ALL
	46		W0003	0088	24		27-51-61	ALL
	47		W0003	0094	24		27-51-61	ALL
	48		W0003	0278	24		27-51-61	ALL
	49		W0003	0279	24		27-51-61	ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D42166J		P070-00/ /		RCPT				ALL
	1		W1250	0075	20		28-22-11	ALL
	2		W1250	0076	20		28-22-11	ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						001-099
	5		W1250	0060	20		28-25-11	115-199
	6		W1250	0085	20		24-51-14	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D42166P		P70/ /		PLUG				ALL
	1		W2070	0504	20		28-22-11	ALL
	2		W2070	0503	20		28-22-11	ALL
	3		W2070	0509	22		SPARE	ALL
	4		W2070	0510	22		SPARE	ALL
	5		W2070	0526	20		SPARE	001-099
	5		W2070	0526	20		28-25-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 20

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42166P		P70/ /		PLUG (continued)				ALL
	6		W2070	0604	24		24-27-21	ALL
	7		W2070	0513	22		SPARE	ALL
	8		W2070	0514	22		SPARE	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D42167J		E002-03/ /		RCPT-				001-099
D42167J		E2-3/ /		RCPT-				115-199
	1		W1175	0313	24		26-17-11	ALL
	2		W1175	0371	22		22-14-21	001-099
	2		W1175	1002	22		22-14-21	115-199
	3		W1175	0393	22		22-41-13	001-099
	3		W1175	1022	22		22-41-13	115-199
	4		W1175	0213	22		22-14-21	ALL
	5	UNUSED						001, 003-099, 115-199
	5		W1175	0433	22		34-25-12	002
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9		W1175	0326	22		22-14-21	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	DED		W1175	1002Z			22-14-21	115-199
	DED		W1175	1022Z			22-41-13	115-199
D42167P		E002-03/ /		RCPT				ALL
	1		W2247	0001	22		26-17-11	ALL
	2		W2247	0002	22		22-14-21	ALL
	3		W2247	0003	22		22-41-13	ALL
	4		W2247	0036	22		22-14-21	ALL
	5		W2247	0012	22		SPARE	001, 003-099, 115-199
	5		W2247	0012	22		34-25-12	002
	6	UNUSED						001-099
	6		W2247	0013	22		SPARE	115-199
	7	UNUSED						001-099
	7		W2247	0014	22		SPARE	115-199
	8	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 21

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42167P		E002-03/ /		RCPT (continued)				ALL
	8		W2247	0015	22		SPARE	115-199
	9		W2247	0035	22		22-14-21	ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D42169J		E003-04/ /		RCPT				ALL
	1	UNUSED						001-099
	1		W1280	0454	20		32-35-11	115-199
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W1280	0069	20		32-35-11	ALL
	6		W1280	0071	20		32-35-11	ALL
	7		W1280	0070	20		32-35-11	ALL
	8		W1280	0145	24		32-41-11	ALL
	9		W1280	0142	24		32-41-11	ALL
	10		W1280	0144	24		32-41-11	ALL
	11		W1280	0333	24		32-41-11	ALL
	12	UNUSED						ALL
D42169P		E003-04/ /		PLUG				ALL
	1	18	W2247	0016	18		SPARE	001-099
	1	18	W2247	0016	18		32-35-11	115-199
	2	UNUSED						001-099
	2		W2247	0017	22		SPARE	115-199
	3	UNUSED						001-099
	3		W2247	0018	22		SPARE	115-199
	4	UNUSED						001-099
	4		W2247	0019	22		SPARE	115-199
	5	18	W2247	0005	20		32-35-11	001-099
	5	18	W2247	0005	18		32-35-11	115-199
	6	18	W2247	0006	20		32-35-11	001-099
	6	18	W2247	0006	18		32-35-11	115-199
	7	18	W2247	0007	20		32-35-11	001-099
	7	18	W2247	0007	18		32-35-11	115-199
	8		W2247	0008	24		32-41-11	ALL
	9		W2247	0009	24		32-41-11	ALL
	10		W2247	0010	24		32-41-11	ALL
	11		W2247	0011	24		32-41-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 22

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42169P		E003-04/ /		PLUG (continued)				ALL
	12	UNUSED						001-099
	12		W2247	0020	22		SPARE	115-199
D42172J		685/272/L38		RCPT-				115-199
	1		W3576	0017	22		33-22-12	115-199
	2	UNUSED						115-199
	3		W3576	0051	20		33-22-12	115-199
	4		W3576	0136	22		33-22-12	115-199
	5	UNUSED						115-199
D42173J		E002-001/ /		RCPT (34-0414)				115-199
	1		W1171	5213R	22		34-61-26	115-199
	2		W1171	5213B	22		34-61-26	115-199
	3		W1171	5213Z			34-61-26	115-199
	4		W1171	5214R	22		34-61-26	115-199
	5		W1171	5214B	22		34-61-26	115-199
	6		W1171	5214Z			34-61-26	115-199
	7		W1171	5215R	22		34-61-26	115-199
	8		W1171	5215B	22		34-61-26	115-199
	9		W1171	5215Z			34-61-26	115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 23

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42173J		E002-001/ /		RCPT (34-0414) (continued)				115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D42173P		E002-01/ /		PLUG- (34-0414)				115-199
	1		W4473	5103R	22		34-61-26	115-199
	2		W4473	5103B	22		34-61-26	115-199
	3		W4473	5103Z			34-61-26	115-199
	4		W4473	5104R	22		34-61-26	115-199
	5		W4473	5104B	22		34-61-26	115-199
	6		W4473	5104Z			34-61-26	115-199
	7		W4473	5122R	22		34-61-26	115-199
	8		W4473	5122B	22		34-61-26	115-199
	9		W4473	5122Z			34-61-26	115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 24

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42173P		E002-01/ /		PLUG- (34-0414) (continued)				115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 25

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42173P		E002-01/ /		PLUG- (34-0414) (continued)				115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D42174J		P003-01/ /		RCPT				ALL
	1		W0002	0096	20		32-35-11	ALL
	2		W0002	0097	20		32-35-11	ALL
	3		W0002	0098	20		32-35-11	ALL
	4	UNUSED						001-099
	4		W0002	0099	20		32-35-11	115-199
	5	UNUSED						001-099
	5		W0002	0050	22		33-16-51	115-199
	6	UNUSED						001-099
	6		W0002	0051	22		33-16-51	115-199
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0002	0121	20		32-35-11	ALL
D42174P		P3-1/ /		PLUG				ALL
	1		W0003	0302	20		32-35-11	ALL
	2		W0003	0334	20		32-35-11	ALL
	3		W0003	0305	20		32-35-11	ALL
	4	UNUSED						001-099
	4		W0003	0372	20		32-35-11	115-199
	5	UNUSED						001-099
	5		W0003	0373	22		33-16-51	115-199
	6	UNUSED						001-099
	6		W0003	0374	22		33-16-51	115-199
	7		W0003	0223	20		SPARE	001-099
	7	UNUSED						115-199
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 26

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42174P		P3-1/ /		PLUG (continued)				ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W0003	0333	20		32-35-11	ALL
D42175J		E002-01/ /		RCPT-				ALL
	1		W1171	0886	22		34-12-61	ALL
	2		W1171	0887	22		34-12-61	ALL
	3		W1171	5034R	24		34-12-61	ALL
	4		W1171	5034B	24		34-12-61	ALL
	5		W1171	5034Z			34-12-61	ALL
	6		W1171	5354R	24		27-32-11	ALL
	7		W1171	5354B	24		27-32-11	ALL
	8		W1171	5354Z			27-32-11	ALL
	9		W1171	0888	22		34-12-61	ALL
	10		W1171	0890	22		34-12-61	ALL
	11		W1171	5355R	24		34-12-62	ALL
	12		W1171	5355B	24		34-12-62	ALL
	13		W1171	5355Z			34-12-62	ALL
	14		W1171	0882	22		34-12-61	ALL
	15		W1171	0883	22		34-12-61	ALL
	16		W1171	0881	22		34-12-61	ALL
	17		W1171	0889	22		34-12-61	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D42175P		E002-01/ /		PLUG-				ALL
	1		W4471	0555	22		34-12-61	ALL
	2		W4471	0556	22		34-12-61	ALL
	3		W4471	2511R	24		34-12-61	ALL
	4		W4471	2511B	24		34-12-61	ALL
	5		W4471	2511Z			34-12-61	ALL
	6		W4471	2512R	24		34-12-61	ALL
	7		W4471	2512B	24		34-12-61	ALL
	8		W4471	2512Z			34-12-61	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 27

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42175P		E002-01/ /		PLUG- (continued)				ALL
	9		W4471	0557	22		34-12-61	ALL
	10		W4471	0558	22		34-12-61	ALL
	11		W4471	2514R	24		34-12-62	ALL
	12		W4471	2514B	24		34-12-62	ALL
	13		W4471	2514Z			34-12-62	ALL
	14		W4471	0553	22		34-12-61	ALL
	15		W4471	0554	22		34-12-61	ALL
	16		W4471	0562	22		34-12-61	ALL
	17		W4471	0564	22		34-12-61	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D42176J		P37/ /		RCPT				ALL
	1		W1270	0477	20		28-22-11	ALL
	2		W1270	0478	20		28-22-11	ALL
	3		W1270	0472	20		28-22-11	ALL
	4		W1270	0486	20		28-22-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W1270	0173	24		36-22-11	001-099
	7	UNUSED						115-199
	8		W1270	0912	22		30-34-22	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W1272	0093	24		24-27-21	ALL
	12		W1270	8505	22		27-23-11	001-099
	12	UNUSED						115-199
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						001-099
	16		W1270	0021	20		28-25-11	115-199
	17	UNUSED						ALL
	18		W1270	5914	24		34-12-22	ALL
	19	UNUSED						001-002, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 28

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42176J		P37/ /		RCPT (continued)				ALL
	19		W1270	6538	22		78-34-21	003-099
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W1270	5703	22		27-23-11	001-099
	24	UNUSED						115-199
	25		W1270	8503	22		27-23-11	001-099
	25	UNUSED						115-199
	26	UNUSED						ALL
	27		W1270	8518	22		30-34-22	ALL
	28		W1270	5733	24		30-31-12	001-099
	28	UNUSED						115-199
	29		W1270	5735	24		30-31-12	001-099
	29	UNUSED						115-199
	30		W1270	5734	24		30-31-12	001-099
	30	UNUSED						115-199
	31		W1270	5760	24		30-31-12	001-099
	31	UNUSED						115-199
D42176P		P037-00/ /		PLUG				001-099
D42176P		P37/ /		PLUG				115-199
	1		W2070	0506	20		28-22-11	ALL
	2		W2070	0508	20		28-22-11	ALL
	3		W2070	0507	20		28-22-11	ALL
	4		W2070	0504	20		28-22-11	ALL
	5		W2070	0509	22		SPARE	ALL
	6		W2070	0510	22		SPARE	ALL
	7		W2070	0144	24		36-22-11	001-099
	7	UNUSED						115-199
	8		W2070	0432	22		30-34-22	ALL
	9	UNUSED						001-099
	9		W2070	0518	22		SPARE	115-199
	10	UNUSED						001-099
	10		W2070	0519	22		SPARE	115-199
	11		W2070	0604	24		24-27-21	ALL
	12		W2070	0003	22		27-23-11	001-099
	12	UNUSED						115-199
	13	UNUSED						001-099
	13		W2070	0522	22		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 29

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42176P		P037-00/ /		PLUG (continued)				001-099
D42176P		P37/ /		PLUG (continued)				115-199
	14	UNUSED						001-099
	14		W2070	0523	22		SPARE	115-199
	15	UNUSED						001-099
	15		W2070	0524	22		SPARE	115-199
	16		W2070	0526	20		SPARE	001-099
	16		W2070	0526	20		28-25-11	115-199
	17	UNUSED						001-099
	17		W2070	0525	22		SPARE	115-199
	18		W2070	0527	24		34-12-22	ALL
	19	UNUSED						001-002, 115-199
	19		W2070	0231	22		78-34-21	003-099
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24		W2070	0004	22		27-23-11	001-099
	24	UNUSED						115-199
	25		W2070	0005	22		27-23-11	001-099
	25	UNUSED						115-199
	26		W2070	0332	22		SPARE	001-099
	26	UNUSED						115-199
	27		W2070	0431	22		30-34-22	ALL
	28		W2070	0045	20		30-31-12	001-099
	28	UNUSED						115-199
	29		W2070	0046	20		30-31-12	001-099
	29	UNUSED						115-199
	30		W2070	0047	20		30-31-12	001-099
	30	UNUSED						115-199
	31		W2070	0048	20		30-31-12	001-099
	31	UNUSED						115-199
D42178J		E6 RLY/PNL/		RCPT				001-099
D42178J		E6/ /		RCPT				115-199
I	1		W1024	0066	24		24-33-12	001-099
I	1	UNUSED						115-199
	2	UNUSED						ALL
	3	UNUSED						ALL
I	4		W1024	0065	24		24-33-12	001-099
I	4	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 30

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42178J		E6 RLY/PNL/		RCPT (continued)				001-099
D42178J		E6/ /		RCPT (continued)				115-199
	5		W1024	0059	24		24-33-12	001-099
	5	UNUSED						115-199
	6	UNUSED						ALL
	7		W1024	0069	24		24-33-12	001-099
	7	UNUSED						115-199
	8		W1024	0088	24		24-33-12	001-099
	8	UNUSED						115-199
	9		W1024	0071	24		24-33-12	001-099
	9	UNUSED						115-199
	10		W1024	0070	24		24-33-12	001-099
	10	UNUSED						115-199
	11		W1024	0060	24		24-33-12	001-099
	11	UNUSED						115-199
	12		W1024	0068	24		24-33-12	001-099
	12	UNUSED						115-199
	13	UNUSED						ALL
	14		W1024	0241	24		24-33-12	001-099
	14	UNUSED						115-199
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D42178P		E006-00/ /		PLUG-				001-099
D42178P		E6 RLY/ /		PLUG-				115-199
	1		W1026	0021	22		24-33-12	001-099
	1	UNUSED						115-199
	2	UNUSED						ALL
	3	UNUSED						ALL
	4		W1026	0024	22		24-33-12	001-099
	4	UNUSED						115-199
	5		W1026	0025	22		24-33-12	001-099
	5	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 31

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42178P		E006-00/ /		PLUG- (continued)				001-099
D42178P		E6 RLY/ /		PLUG- (continued)				115-199
	6	UNUSED						ALL
	7		W1026	0027	22		24-33-12	001-099
	7	UNUSED						115-199
	8		W1026	0028	22		24-33-12	001-099
	8	UNUSED						115-199
	9		W1026	0029	22		24-33-12	001-099
	9	UNUSED						115-199
	10		W1026	0030	22		24-33-12	001-099
	10	UNUSED						115-199
	11		W1026	0031	22		24-33-12	001-099
	11	UNUSED						115-199
	12		W1026	0032	22		24-33-12	001-099
	12	UNUSED						115-199
	13	UNUSED						ALL
	14		W1026	0041	24		24-33-12	001-099
	14	UNUSED						115-199
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D42180J		E6-4/ /		RCPT				115-199
	1		W1032	0076	24		32-46-11	115-199
	2		W1032	0077	24		32-46-11	115-199
	3		W1032	0078	24		32-46-11	115-199
	4		W1032	0079	24		32-46-11	115-199
	5		W1032	0080	24		32-46-11	115-199
	6		W1032	0081	24		32-46-11	115-199
	7		W1032	0082	24		32-46-11	115-199
	8		W1032	0083	24		32-46-11	115-199
	9		W1032	0460	22		32-42-11	115-199
	10		W1032	5001R	22		32-42-11	115-199
	11		W1032	5001B	22		32-42-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 32

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42180J		E6-4/ /		RCPT (continued)				115-199
	12		W1032	5001Z			32-42-11	115-199
	13		W1032	0378	22		32-42-11	115-199
	14	UNUSED						115-199
	15		W1032	0410	22		32-42-12	115-199
	16		W1032	0384	22		32-42-11	115-199
	17		W1032	0411	22		32-42-12	115-199
	18		W1032	0379	22		32-42-11	115-199
	19		W1032	0380	22		32-42-11	115-199
	20		W1032	0039	24		32-46-11	115-199
	21		W1032	0036	24		32-41-11	115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30		W1032	0500	24		21-51-11	115-199
	31		W1032	2001R	24		21-61-51	115-199
	32		W1032	2001B	24		21-61-51	115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36		W1032	0037	22		32-42-11	115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 33

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42180J		E6-4/ /		RCPT (continued)				115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D42180P		E6-4/ /		PLUG				115-199
	1		W2706	0215	24		32-46-11	115-199
	2		W2706	0216	24		32-46-11	115-199
	3		W2706	0217	24		32-46-11	115-199
	4		W2706	0218	24		32-46-11	115-199
	5		W2706	0219	24		32-46-11	115-199
	6		W2706	0220	24		32-46-11	115-199
	7		W2706	0221	24		32-46-11	115-199
	8		W2706	0222	24		32-46-11	115-199
	9		W2706	0269	22		32-42-11	115-199
	10		W2706	5001R	22		32-42-11	115-199
	11		W2706	5001B	22		32-42-11	115-199
	12		W2706	5001Z			32-42-11	115-199
	13		W2706	0212	22		32-42-11	115-199
	14	UNUSED						115-199
	15		W2706	0237	22		32-42-12	115-199
	16		W2706	0232	22		32-42-11	115-199
	17		W2706	0238	22		32-42-12	115-199
	18		W2706	0213	22		32-42-11	115-199
	19		W2706	0214	22		32-42-11	115-199
	20		W2706	0211	24		32-46-11	115-199
	21		W2706	0223	24		32-41-11	115-199
	22		W2706	0224	24		SPARE	115-199
	23		W2706	0225	24		SPARE	115-199
	24		W2706	0226	24		SPARE	115-199
	25		W2706	0227	24		SPARE	115-199
	26		W2706	0228	24		SPARE	115-199
	27		W2706	0229	24		SPARE	115-199
	28		W2706	0230	24		SPARE	115-199
	29	UNUSED						115-199
	30		W2706	0265	24		21-51-11	115-199
	31		W2706	2055R	24		21-61-51	115-199
	32		W2706	2055B	24		21-61-51	115-199
	33	UNUSED						115-199
	34	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 34

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42180P		E6-4/ /		PLUG (continued)				115-199
	35	UNUSED						115-199
	36		W2706	0185	22		32-42-11	115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45		W2706	0009	24		SPARE	115-199
	46		W2706	2000B	24		SPARE	115-199
	47		W2706	2000R	24		SPARE	115-199
	48		W2706	0011	24		SPARE	115-199
	49		W2706	0016	24		SPARE	115-199
	50		W2706	0017	24		SPARE	115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D42182J		E6-2/ /		RECPT				115-199
	1		W1030	0001	20		21-51-12	115-199
	2	UNUSED						115-199
	3		W1030	0007	24		21-51-12	115-199
	4		W1030	0008	24		21-51-12	115-199
	5		W1030	0009	24		21-51-12	115-199
	6		W1030	0010	24		21-51-12	115-199
	7		W1030	0011	24		21-51-12	115-199
	8		W1030	0012	24		21-51-12	115-199
	9		W1030	0013	24		21-51-12	115-199
	10		W1030	2001R	24		21-51-12	115-199
	11		W1030	2001B	24		21-51-12	115-199
	12		W1030	0171	24		21-51-14	115-199
	13		W1030	2033R	24		21-51-12	115-199
	14		W1030	2033B	24		21-51-12	115-199
	15		W1030	2032B	24		21-51-12	115-199
	16		W1030	2032R	24		21-51-12	115-199
	17		W1030	3019R	24		21-51-12	115-199

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 35

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42182J		E6-2/ /		RECPT (continued)				115-199
	18		W1030	3019Y	24		21-51-12	115-199
	19		W1030	3019B	24		21-51-12	115-199
	20		W1030	2029R	24		21-51-12	115-199
	21		W1030	2029B	24		21-51-12	115-199
	22		W1030	3001R	24		21-51-12	115-199
	23		W1030	3001B	24		21-51-12	115-199
	24		W1030	3001Y	24		21-51-12	115-199
	25		W1030	3002R	24		21-51-12	115-199
	26		W1030	3002B	24		21-51-12	115-199
	27		W1030	3002Y	24		21-51-12	115-199
	28		W1030	3003R	24		21-51-12	115-199
	29		W1030	3003B	24		21-51-12	115-199
	30		W1030	3003Y	24		21-51-12	115-199
	31		W1030	3004R	24		21-51-12	115-199
	32		W1030	3004B	24		21-51-12	115-199
	33		W1030	3004Y	24		21-51-12	115-199
	34		W1030	3005R	24		21-51-12	115-199
	35		W1030	3005B	24		21-51-12	115-199
	36		W1030	3005Y	24		21-51-12	115-199
	37		W1030	3006R	24		21-51-12	115-199
	38		W1030	3006B	24		21-51-12	115-199
	39		W1030	3006Y	24		21-51-12	115-199
	40		W1030	2002B	24		21-51-14	115-199
	41		W1030	2002R	24		21-51-14	115-199
	42		W1030	0025	24		21-51-15	115-199
	43		W1030	0026	24		21-51-15	115-199
	44		W1030	2003B	24		21-51-15	115-199
	45		W1030	2003R	24		21-51-15	115-199
	46		W1030	2025R	24		21-51-14	115-199
	47		W1030	2025B	24		21-51-14	115-199
	48		W1030	2026R	24		21-51-14	115-199
	49		W1030	2026B	24		21-51-14	115-199
	50		W1030	2027R	24		21-51-14	115-199
	51		W1030	2027B	24		21-51-14	115-199
	52		W1030	0056	24		21-61-51	115-199
	53		W1030	0020	24		21-51-15	115-199
	54	UNUSED						115-199
	55	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 36

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42182P		E6-2/ /		PLUG				115-199
	1		W2706	0257	20		21-51-12	115-199
	2		W2706	0258	24		SPARE	115-199
	3		W2706	0071	24		21-51-12	115-199
	4		W2706	0070	24		21-51-12	115-199
	5		W2706	0069	24		21-51-12	115-199
	6		W2706	0068	24		21-51-12	115-199
	7		W2706	0067	24		21-51-12	115-199
	8		W2706	0066	24		21-51-12	115-199
	9		W2706	0134	24		21-51-12	115-199
	10		W2706	2040R	24		21-51-12	115-199
	11		W2706	2040B	24		21-51-12	115-199
	12		W2706	0266	24		21-51-14	115-199
	13		W2706	2054R	24		21-51-12	115-199
	14		W2706	2054B	24		21-51-12	115-199
	15		W2706	2049B	24		21-51-12	115-199
	16		W2706	2049R	24		21-51-12	115-199
	17		W2706	3009R	24		21-51-12	115-199
	18		W2706	3009Y	24		21-51-12	115-199
	19		W2706	3009B	24		21-51-12	115-199
	20		W2706	2051R	24		21-51-12	115-199
	21		W2706	2051B	24		21-51-12	115-199
	22		W2706	3001R	24		21-51-12	115-199
	23		W2706	3001B	24		21-51-12	115-199
	24		W2706	3001Y	24		21-51-12	115-199
	25		W2706	3002R	24		21-51-12	115-199
	26		W2706	3002B	24		21-51-12	115-199
	27		W2706	3002Y	24		21-51-12	115-199
	28		W2706	3003R	24		21-51-12	115-199
	29		W2706	3003B	24		21-51-12	115-199
	30		W2706	3003Y	24		21-51-12	115-199
	31		W2706	3004R	24		21-51-12	115-199
	32		W2706	3004B	24		21-51-12	115-199
	33		W2706	3004Y	24		21-51-12	115-199
	34		W2706	3005R	24		21-51-12	115-199
	35		W2706	3005B	24		21-51-12	115-199
	36		W2706	3005Y	24		21-51-12	115-199
	37		W2706	3006R	24		21-51-12	115-199
	38		W2706	3006B	24		21-51-12	115-199
	39		W2706	3006Y	24		21-51-12	115-199
	40		W2706	2014B	24		21-51-14	115-199

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 37

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42182P		E6-2/ /		PLUG (continued)				115-199
	41		W2706	2014R	24		21-51-14	115-199
	42		W2706	0161	24		21-51-15	115-199
	43		W2706	0163	24		21-51-15	115-199
	44		W2706	2042B	24		21-51-15	115-199
	45		W2706	2042R	24		21-51-15	115-199
	46		W2706	2029R	24		21-51-14	115-199
	47		W2706	2029B	24		21-51-14	115-199
	48		W2706	2012R	24		21-51-14	115-199
	49		W2706	2012B	24		21-51-14	115-199
	50		W2706	2013R	24		21-51-14	115-199
	51		W2706	2013B	24		21-51-14	115-199
	52		W2706	0259	24		21-61-51	115-199
	53		W2706	0164	24		21-51-15	115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D42183J		E002-01/ /		RCPT-				001-099
D42183J		E2-1/ /		RCPT-				115-199
	1		W1171	5080B	24		34-61-14	ALL
	2		W1171	5080R	24		34-61-14	ALL
	3		W1171	5081R	24		34-61-15	ALL
	4		W1171	5081B	24		34-61-15	ALL
	5		W1171	FRBA			34-61-14	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W1171	FRBD			34-61-15	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W1171	0162	24		34-61-14	ALL
	12		W1171	0354	20		34-61-14	ALL
	13		W1171	0164	22		34-61-15	ALL
	14		W1171	0168	20		34-61-15	ALL
	15		W1171	0169	20		34-61-15	ALL
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 38

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42183J		E002-01/ /		RCPT- (continued)				001-099
D42183J		E2-1/ /		RCPT- (continued)				115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
			W1171	0163	20		34-61-14	ALL
			W1171	0172	20		34-61-15	ALL
			W1171	5080Z			34-61-14	ALL
			W1171	5081Z			34-61-15	ALL
			W1171	FRBA			34-61-14	ALL
			W1171	FRBD			34-61-15	ALL
D42183P		E002-01/ /		PLUG-				ALL
	1		W2329	5080B	24		34-61-14	ALL
	2		W2329	5080R	24		34-61-14	ALL
	3		W2329	5081R	24		34-61-15	ALL
	4		W2329	5081B	24		34-61-15	ALL
	5		W2329	5080Z			34-61-14	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8		W2329	5081Z			34-61-15	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W2329	0162	24		34-61-14	ALL
	12		W2329	0354	20		34-61-14	ALL
	13		W2329	0167	22		34-61-15	ALL
	14		W2329	0168	20		34-61-15	ALL
	15		W2329	0169	20		34-61-15	ALL
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 39

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42183P		E002-01/ /		PLUG- (continued)				ALL
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
D42184J		E6-4/ /		RCPT				115-199
	1	UNUSED						115-199
	2	UNUSED						115-199
	3	UNUSED						115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10		W1032	5002R	22		32-42-11	115-199
	11		W1032	5002B	22		32-42-11	115-199
	12		W1032	FRAB			32-42-11	115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25		W1032	0421	22		32-42-12	115-199
	26		W1032	0422	22		32-42-12	115-199
	27		W1032	0424	22		32-42-12	115-199
	28		W1032	0425	22		32-42-12	115-199
	29		W1032	0426	22		32-42-12	115-199

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 40

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42184J		E6-4/ /		RCPT (continued)				115-199
	30		W1032	0427	22		32-42-12	115-199
	31	UNUSED						115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35		W1032	0423	22		32-42-12	115-199
	36	UNUSED						115-199
	37		W1032	0429	22		32-42-12	115-199
	38		W1032	0428	22		32-42-12	115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
			W1032	0382	20		32-42-11	115-199
			W1032	5002Z			32-42-11	115-199
			W1032	FRAB			32-42-11	115-199
D42184P		E6-4/ /		PLUG				115-199
	1	UNUSED						115-199
	2	UNUSED						115-199
	3	UNUSED						115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
	8	UNUSED						115-199
	9	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 41

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42184P		E6-4/ /		PLUG (continued)				115-199
	10		W2716	5001R	22		32-42-11	115-199
	11		W2716	5001B	22		32-42-11	115-199
	12		W2716	5001Z			32-42-11	115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23		W2716	0012	24		SPARE	115-199
	24		W2716	0013	24		SPARE	115-199
	25		W2716	0233	22		32-42-12	115-199
	26		W2716	0234	22		32-42-12	115-199
	27		W2716	0218	22		32-42-12	115-199
	28		W2716	0220	22		32-42-12	115-199
	29		W2716	0221	22		32-42-12	115-199
	30		W2716	0222	22		32-42-12	115-199
	31	UNUSED						115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35		W2716	0219	22		32-42-12	115-199
	36	UNUSED						115-199
	37		W2716	0224	22		32-42-12	115-199
	38		W2716	0223	22		32-42-12	115-199
	39		W2716	0020	24		SPARE	115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44		W2716	0021	24		SPARE	115-199
	45		W2716	0022	24		SPARE	115-199
	46		W2716	0023	22		SPARE	115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 42

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42184P		E6-4/ /		PLUG (continued)				115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D42185J		E4-2/ /		RCPT-				001, 003-099, 115-199
D42185J		E004-02/ /		RCPT- (S/B 757-34-0200)				002
	1		W1275	0279	24		27-21-12	ALL
	1		W1275	0280	24		27-21-12	ALL
	2		W1275	0288	24		27-31-12	ALL
	2		W1275	0289	24		27-31-12	ALL
	3		W1275	0276	24		27-61-12	ALL
	3		W1275	0277	24		27-61-12	ALL
	4	UNUSED						ALL
	5		W1275	0284	24		27-41-11	ALL
	5		W1275	0286	24		27-41-11	ALL
	6		W1275	0283	24		27-41-11	ALL
	6		W1275	0285	24		27-41-11	ALL
	7	UNUSED						ALL
	8		W1275	5875	24		31-41-14	ALL
	9		W1275	5658	24		24-34-11	ALL
	9		W1275	5659	24		24-34-11	ALL
	10		W1275	5959	24		27-09-14	001-099
	10	UNUSED						115-199
	11	UNUSED						001, 003-099
	11		W1275	5111R	22		34-25-13	002
	11		W1275	5077R	24		31-31-22	115-199
	12	UNUSED						001, 003-099
	12		W1275	5111B	22		34-25-13	002
	12		W1275	5077B	24		31-31-22	115-199
	13	UNUSED						001, 003-099
	13		W1275	5111Z			34-25-13	002
	13		W1275	5077Z			31-31-22	115-199
	14	UNUSED						ALL
	15		W1275	5995	20		23-31-11	ALL
	16		W1275	2612B	24		73-21-22	ALL
	17		W1275	2612R	24		73-21-22	ALL
	18	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 43

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42185J		E4-2/ /		RCPT- (continued)				001, 003-099, 115-199
D42185J		E004-02/ /		RCPT- (S/B 757-34-0200) (continued)				002
	19		W1275	2611B	24		73-21-22	ALL
	20		W1275	2611R	24		73-21-22	ALL
	21		W1275	FRRT			73-21-22	001-099
	21		W1275	FRKA			73-21-22	115-199
	22		W1275	6168	24		26-16-21	ALL
	22		W1275	6169	24		26-16-21	ALL
	23		W1275	6170	24		26-16-21	ALL
	23		W1275	6171	24		26-16-21	ALL
	24		W1275	6079	24		26-16-21	ALL
	24		W1275	6080	24		26-16-21	ALL
	25		W1275	6413	24		27-09-14	ALL
	26		W1275	5958	24		27-09-14	ALL
	27		W1275	0440	22		29-11-22	ALL
	28		W1275	0439	22		29-11-22	ALL
	29		W1275	6421	24		27-09-14	ALL
	30		W1275	6425	24		27-09-14	ALL
	31		W1275	6429	24		27-09-14	ALL
	32	UNUSED						002
	32		W1275	5959	24		27-09-14	115-199
	33	UNUSED						002, 115-199
	34	UNUSED						002, 115-199
	35	UNUSED						002, 115-199
	36	UNUSED						002, 115-199
	37	UNUSED						002, 115-199
	38	UNUSED						002, 115-199
	39	UNUSED						002, 115-199
	40	UNUSED						002, 115-199
	41	UNUSED						002, 115-199
	42	UNUSED						002, 115-199
	43	UNUSED						002, 115-199
	44	UNUSED						002, 115-199
	45	UNUSED						002, 115-199
	46	UNUSED						002, 115-199
	47	UNUSED						002, 115-199
	48	UNUSED						002, 115-199
	49	UNUSED						002, 115-199
	50	UNUSED						002, 115-199
	51	UNUSED						002, 115-199
	52	UNUSED						002, 115-199

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 44

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42185J		E4-2/ /		RCPT- (continued)				001, 003-099, 115-199
D42185J		E004-02/ /		RCPT- (S/B 757-34-0200) (continued)				002
	53	UNUSED						002, 115-199
	54	UNUSED						002, 115-199
	55	UNUSED						002, 115-199
	DED		W1275	5995Z			23-31-11	115-199
			W1275	FRRT			73-21-22	001-099
			W1275	2611Z			73-21-22	ALL
			W1275	2612Z			73-21-22	ALL
			W1275	FRKA			73-21-22	115-199
D42185P		E004-02/ /		PLUG-				001-099
D42185P		E4-2/ /		PLUG-				115-199
	1		W4477	0148	22		27-21-12	ALL
	2		W4477	0149	22		27-31-12	ALL
	3		W4477	0150	22		27-61-12	ALL
	4		W4477	0220	22		SPARE	001-099
	4	UNUSED						115-199
	5		W4477	0157	22		27-41-11	ALL
	6		W4477	0158	22		27-41-11	ALL
	7		W4477	0159	24		SPARE	ALL
	8		W4477	0162	24		31-41-14	ALL
	9		W4477	0164	24		24-34-11	ALL
	10		W4477	0217	22		27-09-14	001-099
	10		W4477	0165	24		SPARE	115-199
	11	UNUSED						001, 003-099
	11		W4477	5060R	22		34-25-13	002
	11		W4477	5021R	24		31-31-22	115-199
	12	UNUSED						001, 003-099
	12		W4477	5060B	22		34-25-13	002
	12		W4477	5021B	24		31-31-22	115-199
	13	UNUSED						001, 003-099
	13		W4477	5060Z			34-25-13	002
	13		W4477	5021Z			31-31-22	115-199
	14		W4477	0171	22		SPARE	ALL
	15		W4477	0099	20		23-31-11	ALL
	16		W4477	5025B	24		73-21-22	ALL
	17		W4477	5025R	24		73-21-22	ALL
	18	UNUSED						ALL
	19		W4477	5026B	24		73-21-22	ALL
	20		W4477	5026R	24		73-21-22	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 45

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42185P		E004-02/ /		PLUG- (continued)				001-099
D42185P		E4-2/ /		PLUG- (continued)				115-199
	21		W4477	FRAA			73-21-22	ALL
	22		W4477	0178	24		26-16-21	ALL
	23		W4477	0179	24		26-16-21	ALL
	24		W4477	0180	24		26-16-21	ALL
	25		W4477	0212	22		27-09-14	ALL
	26		W4477	0213	22		27-09-14	ALL
	27		W4477	0033	22		32-42-11	ALL
	28		W4477	0034	22		32-42-11	ALL
	29		W4477	0214	22		27-09-14	ALL
	30		W4477	0215	22		27-09-14	ALL
	31		W4477	0216	22		27-09-14	ALL
	32	UNUSED						002
	32		W4477	0217	22		27-09-14	115-199
	33	UNUSED						002, 115-199
	34	UNUSED						002, 115-199
	35	UNUSED						002, 115-199
	36	UNUSED						002, 115-199
	37	UNUSED						002, 115-199
	38	UNUSED						002, 115-199
	39	UNUSED						002, 115-199
	40	UNUSED						002, 115-199
	41	UNUSED						002, 115-199
	42	UNUSED						002, 115-199
	43	UNUSED						002, 115-199
	44	UNUSED						002, 115-199
	45	UNUSED						002, 115-199
	46	UNUSED						002, 115-199
	47	UNUSED						002, 115-199
	48	UNUSED						002, 115-199
	49	UNUSED						002, 115-199
	50	UNUSED						002, 115-199
	51	UNUSED						002, 115-199
	52	UNUSED						002, 115-199
	53	UNUSED						002, 115-199
	54	UNUSED						002, 115-199
	55	UNUSED						002, 115-199
			W4477	5025Z			73-21-22	ALL
			W4477	5026Z			73-21-22	ALL
			W4477	FRAA			73-21-22	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 46

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42186J		E6-2/ /		RECPT				115-199
	1		W1030	0027	24		21-51-24	115-199
	2		W1030	2004R	24		21-51-24	115-199
	3		W1030	2004B	24		21-51-24	115-199
	4		W1030	2005R	24		21-51-24	115-199
	5		W1030	2005B	24		21-51-24	115-199
	6		W1030	2006R	24		21-51-24	115-199
	7		W1030	2006B	24		21-51-24	115-199
	8		W1030	3007R	24		21-61-11	115-199
	9		W1030	3007B	24		21-61-11	115-199
	10		W1030	3007Y	24		21-61-11	115-199
	11		W1030	0030	24		21-61-11	115-199
	12		W1030	0031	24		21-61-11	115-199
	13		W1030	0032	24		21-61-11	115-199
	14		W1030	0033	24		21-61-11	115-199
	15		W1030	0034	24		21-61-11	115-199
	16		W1030	3018R	24		21-61-11	115-199
	17		W1030	3018B	24		21-61-11	115-199
	18		W1030	3018Y	24		21-61-11	115-199
	19		W1030	2007R	24		21-61-11	115-199
	20		W1030	2007B	24		21-61-11	115-199
	21		W1030	2008R	24		21-61-11	115-199
	22		W1030	2008B	24		21-61-11	115-199
	23		W1030	3008R	24		21-61-21	115-199
	24		W1030	3008B	24		21-61-21	115-199
	25		W1030	3008Y	24		21-61-21	115-199
	26		W1030	0038	24		21-61-21	115-199
	27		W1030	0039	24		21-61-21	115-199
	28		W1030	0040	24		21-61-21	115-199
	29		W1030	0041	24		21-61-21	115-199
	30		W1030	0042	24		21-61-21	115-199
	31		W1030	3020R	24		21-61-21	115-199
	32		W1030	3020B	24		21-61-21	115-199
	33		W1030	3020Y	24		21-61-21	115-199
	34		W1030	2009R	24		21-61-21	115-199
	35		W1030	2009B	24		21-61-21	115-199
	36		W1030	2030R	24		21-61-11	115-199
	37		W1030	2030B	24		21-61-11	115-199
	38	UNUSED						115-199
	39		W1030	3017Y	24		21-61-31	115-199
	40		W1030	3017B	24		21-61-31	115-199

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 47

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42186J		E6-2/ /		RECPT (continued)				115-199
	41		W1030	3017R	24		21-61-31	115-199
	42		W1030	0050	24		21-61-31	115-199
	43		W1030	0051	24		21-61-31	115-199
	44		W1030	0052	24		21-61-31	115-199
	45		W1030	0053	24		21-61-31	115-199
	46		W1030	0054	24		21-61-31	115-199
	47		W1030	3009R	24		21-61-31	115-199
	48		W1030	3009B	24		21-61-31	115-199
	49		W1030	3009Y	24		21-61-31	115-199
	50		W1030	2011R	24		21-61-31	115-199
	51		W1030	2011B	24		21-61-31	115-199
	52		W1030	2012R	24		21-61-31	115-199
	53		W1030	2012B	24		21-61-31	115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D42186P		E6-2/ /		PLUG				115-199
	1		W2716	0066	24		21-51-24	115-199
	2		W2716	2021R	24		21-51-24	115-199
	3		W2716	2021B	24		21-51-24	115-199
	4		W2716	2023R	24		21-51-24	115-199
	5		W2716	2023B	24		21-51-24	115-199
	6		W2716	2024R	24		21-51-24	115-199
	7		W2716	2024B	24		21-51-24	115-199
	8		W2716	3007R	24		21-61-11	115-199
	9		W2716	3007B	24		21-61-11	115-199
	10		W2716	3007Y	24		21-61-11	115-199
	11		W2716	0174	24		21-61-11	115-199
	12		W2716	0175	24		21-61-11	115-199
	13		W2716	0176	24		21-61-11	115-199
	14		W2716	0177	24		21-61-11	115-199
	15		W2716	0178	24		21-61-11	115-199
	16		W2716	3018R	24		21-61-11	115-199
	17		W2716	3018B	24		21-61-11	115-199
	18		W2716	3018Y	24		21-61-11	115-199
	19		W2716	2028R	24		21-61-11	115-199
	20		W2716	2028B	24		21-61-11	115-199
	21		W2716	2027R	24		21-61-11	115-199
	22		W2716	2027B	24		21-61-11	115-199
	23		W2716	3008R	24		21-61-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 48

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42186P		E6-2/ /		PLUG (continued)				115-199
	24		W2716	3008B	24		21-61-21	115-199
	25		W2716	3008Y	24		21-61-21	115-199
	26		W2716	0193	24		21-61-21	115-199
	27		W2716	0194	24		21-61-21	115-199
	28		W2716	0195	24		21-61-21	115-199
	29		W2716	0196	24		21-61-21	115-199
	30		W2716	0197	24		21-61-21	115-199
	31		W2716	3010R	24		21-61-21	115-199
	32		W2716	3010B	24		21-61-21	115-199
	33		W2716	3010Y	24		21-61-21	115-199
	34		W2716	2001R	24		21-61-21	115-199
	35		W2716	2001B	24		21-61-21	115-199
	36		W2716	2055R	24		21-61-11	115-199
	37		W2716	2055B	24		21-61-11	115-199
	38	UNUSED						115-199
	39		W2716	3017Y	24		21-61-31	115-199
	40		W2716	3017B	24		21-61-31	115-199
	41		W2716	3017R	24		21-61-31	115-199
	42		W2716	0210	24		21-61-31	115-199
	43		W2716	0201	24		21-61-31	115-199
	44		W2716	0202	24		21-61-31	115-199
	45		W2716	0203	24		21-61-31	115-199
	46		W2716	0204	24		21-61-31	115-199
	47		W2716	3009R	24		21-61-31	115-199
	48		W2716	3009B	24		21-61-31	115-199
	49		W2716	3009Y	24		21-61-31	115-199
	50		W2716	2033R	24		21-61-31	115-199
	51		W2716	2033B	24		21-61-31	115-199
	52		W2716	2034R	24		21-61-31	115-199
	53		W2716	2034B	24		21-61-31	115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D42187J		E5-1/ /		RCPT				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W1282	0012	22		22-24-11	ALL
	6		W1282	0207	22		27-23-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 49

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42187J		E5-1/ /		RCPT (continued)				ALL
	7		W1282	0208	22		27-23-21	ALL
	8		W1282	0209	22		27-23-21	ALL
	9		W1282	0210	22		27-23-21	ALL
	10		W1282	5008R	24		21-31-21	ALL
	11		W1282	5008B	24		21-31-21	ALL
	12		W1282	5008Z			21-31-21	ALL
	13		W1282	0033	24		21-31-21	ALL
	14		W1282	2004R	24		21-31-21	ALL
	15		W1282	2004B	24		21-31-21	ALL
	16		W1282	2005R	24		21-31-21	ALL
	17		W1282	2005B	24		21-31-21	ALL
	18	UNUSED						001-099
	18		W1282	0294	22		74-31-11	115-199
	19		W1282	0027	22		27-41-11	ALL
	20		W1282	2012R	24		22-32-13	ALL
	21		W1282	2012B	24		22-32-13	ALL
	22	UNUSED						ALL
	23		W1282	5009B	24		24-22-12	ALL
	24		W1282	5009R	24		24-22-12	ALL
	25		W1282	5009Z			24-22-12	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						001-099
	39		W1282	0015	22		27-23-11	115-199
	40	UNUSED						001-099
	40		W1282	0014	22		27-23-11	115-199
	41	UNUSED						001-099
	41		W1282	0013	22		27-23-11	115-199
	42	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 50

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42187J		E5-1/ /		RCPT (continued)				ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D42187P		E005-01/ /		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED	W4471	2016R	24		SPARE	001-099
	4		W4471	2016B	24		SPARE	001-099
	4		W4471	0142	22		SPARE	115-199
	5		W4471	0186	22		22-24-11	ALL
	6		W4471	0229	22		27-23-21	ALL
	7		W4471	0230	22		27-23-21	ALL
	8		W4471	0231	22		27-23-21	ALL
	9		W4471	0232	22		27-23-21	ALL
	10		W4471	5055R	24		21-31-21	ALL
	11		W4471	5055B	24		21-31-21	ALL
	12		W4471	5055Z			21-31-21	ALL
	13		W4471	0201	24		21-31-21	ALL
	14		W4471	2012R	24		21-31-21	ALL
	15		W4471	2012B	24		21-31-21	ALL
	16		W4471	2013R	24		21-31-21	ALL
	17		W4471	2013B	24		21-31-21	ALL
	18		W4471	0253	22		SPARE	001-099
	18		W4471	0253	22		74-31-11	115-199
	19		W4471	0203	22		27-41-11	ALL
	20		W4471	2011R	24		22-32-13	ALL
	21		W4471	2011B	24		22-32-13	ALL
	22		W4471	0285	22		SPARE	001-099

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 51

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42187P		E005-01/ /		PLUG- (continued)				ALL
	22	UNUSED						115-199
	23		W4471	5062B	24		24-22-12	ALL
	24		W4471	5062R	24		24-22-12	ALL
	25		W4471	5062Z			24-22-12	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39		W4471	0281	24		SPARE	001-099
	39		W4471	0339	22		27-23-11	115-199
	40	UNUSED						001-099
	40		W4471	0340	22		27-23-11	115-199
	41	UNUSED						001-099
	41		W4471	0341	22		27-23-11	115-199
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D42188J		E6-2/ /		RECPT				115-199
	1		W1030	2013R	24		21-61-51	115-199

HOOKUP LIST
D280N032

91-21-51
Section D42100
Page 52
Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42188J		E6-2/ /		RECPT (continued)				115-199
	2		W1030	2013B	24		21-61-51	115-199
	3		W1030	0057	24		21-61-51	115-199
	4		W1030	2019R	24		21-61-51	115-199
	5		W1030	2019B	24		21-61-51	115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21		W1030	2010R	24		21-61-21	115-199
	22		W1030	2010B	24		21-61-21	115-199
	23		W1030	2112R	24		21-61-21	115-199
	24		W1030	2112B	24		21-61-21	115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 53

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42188J		E6-2/ /		RECPT (continued)				115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D42188P		E6-2/ /		PLUG				115-199
	1		W2706	2050R	24		21-61-51	115-199
	2		W2706	2050B	24		21-61-51	115-199
	3		W2706	0239	24		21-61-51	115-199
	4		W2706	2055R	24		21-61-51	115-199
	5		W2706	2055B	24		21-61-51	115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21		W2706	2052R	24		21-61-21	115-199
	22		W2706	2052B	24		21-61-21	115-199
	23		W2706	2053R	24		21-61-21	115-199
	24		W2706	2053B	24		21-61-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 54

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42188P		E6-2/ /		PLUG (continued)				115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40		W2706	0007	24		SPARE	115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47		W2706	0014	24		SPARE	115-199
	48		W2706	0015	24		SPARE	115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D42189J		AC1090/ /		RCPT-				ALL
	1		W2646	0003	20		32-42-11	ALL
	2		W2646	0006	20		32-42-11	ALL
	3		W2646	0002	20		32-42-11	ALL
	4		W2646	0005	20		32-42-11	ALL
	5		W2646	0027	20		SPARE	001-099
	5	UNUSED						115-199
	6	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 55

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42189J		AC1090/ /		RCPT- (continued)				ALL
	7		W2646	0009	20		32-42-12	ALL
	8		W2646	0010	20		32-42-12	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
D42189P		AC1090/ /		PLUG				ALL
	1		W2412	1001	18		32-42-11	ALL
	2		W2412	1003	18		32-42-11	ALL
	3		W2412	1005	18		32-42-11	ALL
	4		W2412	1007	18		32-42-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7		W2412	1013	18		32-42-12	ALL
	8		W2412	1019	18		32-42-12	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	S/R		W2412	1001Z			32-42-11	ALL
	S/R		W2412	1003Z			32-42-11	ALL
	S/R		W2412	1005Z			32-42-11	ALL
	S/R		W2412	1007Z			32-42-11	ALL
	S/R		W2412	1013Z			32-42-12	ALL
	S/R		W2412	1019Z			32-42-12	ALL
D42190J		E6-2/ /		RECPT				115-199
	1	UNUSED						115-199
	2	UNUSED						115-199
	3	UNUSED						115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13		W1030	3110R	24		21-51-22	115-199
	14		W1030	3110B	24		21-51-22	115-199
	15		W1030	3110Y	24		21-51-22	115-199
	16		W1030	3111R	24		21-51-22	115-199

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 56

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42190J		E6-2/ /		RECPT (continued)				115-199
	17		W1030	3111B	24		21-51-22	115-199
	18		W1030	3111Y	24		21-51-22	115-199
	19		W1030	3112B	24		21-51-22	115-199
	20		W1030	3112R	24		21-51-22	115-199
	21		W1030	3112Y	24		21-51-22	115-199
	22		W1030	3113R	24		21-51-22	115-199
	23		W1030	3113B	24		21-51-22	115-199
	24		W1030	3113Y	24		21-51-22	115-199
	25		W1030	3015R	24		21-51-22	115-199
	26		W1030	3015B	24		21-51-22	115-199
	27		W1030	3015Y	24		21-51-22	115-199
	28		W1030	3014R	24		21-51-22	115-199
	29		W1030	3014B	24		21-51-22	115-199
	30		W1030	3014Y	24		21-51-22	115-199
	31	UNUSED						115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 57

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42190P		E6-2/ /		PLUG				115-199
	1	UNUSED						115-199
	2	UNUSED						115-199
	3	UNUSED						115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11		W2716	0023	22		SPARE	115-199
	12		W2716	0022	24		SPARE	115-199
	13		W2716	3001R	24		21-51-22	115-199
	14		W2716	3001B	24		21-51-22	115-199
	15		W2716	3001Y	24		21-51-22	115-199
	16		W2716	3002R	24		21-51-22	115-199
	17		W2716	3002B	24		21-51-22	115-199
	18		W2716	3002Y	24		21-51-22	115-199
	19		W2716	3003B	24		21-51-22	115-199
	20		W2716	3003R	24		21-51-22	115-199
	21		W2716	3003Y	24		21-51-22	115-199
	22		W2716	3004R	24		21-51-22	115-199
	23		W2716	3004B	24		21-51-22	115-199
	24		W2716	3004Y	24		21-51-22	115-199
	25		W2716	3006R	24		21-51-22	115-199
	26		W2716	3006B	24		21-51-22	115-199
	27		W2716	3006Y	24		21-51-22	115-199
	28		W2716	3005R	24		21-51-22	115-199
	29		W2716	3005B	24		21-51-22	115-199
	30		W2716	3005Y	24		21-51-22	115-199
	31	UNUSED						115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34		W2716	0016	24		SPARE	115-199
	35		W2716	0017	24		SPARE	115-199
	36	UNUSED						115-199
	37		W2716	2000B	24		SPARE	115-199
	38		W2716	2000R	24		SPARE	115-199
	39		W2716	2004B	24		SPARE	115-199
	40		W2716	2004R	24		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 58

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42190P		E6-2/ /		PLUG (continued)				115-199
	41		W2716	0018	24		SPARE	115-199
	42		W2716	0019	24		SPARE	115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48		W2716	0014	24		SPARE	115-199
	49		W2716	0015	24		SPARE	115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D42196J		E6-2/ /		RECPT				115-199
	1		W1030	0355	24		21-51-22	115-199
	2		W1030	0354	24		21-51-22	115-199
	3		W1030	0353	24		21-51-22	115-199
	4		W1030	0352	24		21-51-22	115-199
	5		W1030	0351	24		21-51-22	115-199
	6		W1030	0350	24		21-51-22	115-199
	7		W1030	0356	24		21-51-22	115-199
	8	UNUSED						115-199
	9		W1030	2108R	24		21-51-22	115-199
	10		W1030	2108B	24		21-51-22	115-199
	11		W1030	2103B	24		21-51-22	115-199
	12		W1030	2103R	24		21-51-22	115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 59

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42196J		E6-2/ /		RECPT (continued)				115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29		W1030	2109B	24		21-51-22	115-199
	30		W1030	2109R	24		21-51-22	115-199
	31		W1030	2104B	24		21-51-24	115-199
	32		W1030	2104R	24		21-51-24	115-199
	33		W1030	2110B	24		21-51-22	115-199
	34		W1030	2110R	24		21-51-22	115-199
	35		W1030	0360	24		21-51-25	115-199
	36		W1030	0368	24		21-51-25	115-199
	37		W1030	0369	24		21-51-25	115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41		W1030	2105B	24		21-51-25	115-199
	42		W1030	2105R	24		21-51-25	115-199
	43		W1030	2113B	24		21-51-22	115-199
	44		W1030	2113R	24		21-51-22	115-199
	45		W1030	3117R	22		21-51-22	115-199
	46		W1030	3117B	22		21-51-22	115-199
	47		W1030	3117Y	22		21-51-22	115-199
	48		W1030	0346	22		21-51-22	115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53		W1030	2031R	24		21-51-12	115-199
	54		W1030	2031B	24		21-51-12	115-199
	55	UNUSED						115-199
D42196P		E6-2/ /		PLUG				115-199
	1		W2716	0001	24		21-51-22	115-199
	2		W2716	0002	24		21-51-22	115-199
	3		W2716	0003	24		21-51-22	115-199
	4		W2716	0004	24		21-51-22	115-199
	5		W2716	0005	24		21-51-22	115-199
	6		W2716	0006	24		21-51-22	115-199

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 60

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42196P		E6-2/ /		PLUG (continued)				115-199
	7		W2716	0007	24		21-51-22	115-199
	8	UNUSED						115-199
	9		W2716	2054R	24		21-51-22	115-199
	10		W2716	2054B	24		21-51-22	115-199
	11		W2716	2035B	24		21-51-22	115-199
	12		W2716	2035R	24		21-51-22	115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29		W2716	2049B	24		21-51-22	115-199
	30		W2716	2049R	24		21-51-22	115-199
	31		W2716	2022B	24		21-51-24	115-199
	32		W2716	2022R	24		21-51-24	115-199
	33		W2716	2051B	24		21-51-22	115-199
	34		W2716	2051R	24		21-51-22	115-199
	35		W2716	0171	24		21-51-25	115-199
	36		W2716	0168	24		21-51-25	115-199
	37		W2716	0170	24		21-51-25	115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41		W2716	2026B	24		21-51-25	115-199
	42		W2716	2026R	24		21-51-25	115-199
	43		W2716	2030B	24		21-51-22	115-199
	44		W2716	2030R	24		21-51-22	115-199
	45		W2716	3011R	24		21-51-22	115-199
	46		W2716	3011B	24		21-51-22	115-199

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 61

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42196P		E6-2/ /		PLUG (continued)				115-199
	47		W2716	3011Y	24		21-51-22	115-199
	48		W2716	0241	20		21-51-22	115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53		W2716	2031R	24		21-51-12	115-199
	54		W2716	2031B	24		21-51-12	115-199
	55	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D42100

Page 62 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42201J		E002-04/ /		RCPT				001-099
D42201J		E2-4/ /		RCPT				115-199
	1		W1177	0001	24		34-21-11	ALL
	2		W1177	0002	24		34-21-11	ALL
	3		W1177	0003	22		34-21-11	ALL
	4		W1177	0007	22		34-21-11	ALL
	5		W1177	0008	22		34-21-11	ALL
	6		W1177	0009	22		34-21-11	ALL
	7		W1177	0010	22		34-21-11	ALL
	8		W1177	0011	22		34-21-11	ALL
	9		W1177	0012	22		34-21-11	ALL
	10		W1177	5002R	24		34-21-11	ALL
	11		W1177	5002B	24		34-21-11	ALL
	12		W1177	FRAB			34-21-11	ALL
	13	UNUSED						ALL
	14		W1177	5004R	24		34-21-11	ALL
	15		W1177	5004B	24		34-21-11	ALL
	16		W1177	5004Z			34-21-11	ALL
	17	UNUSED						ALL
	18		W1177	0061	22		33-16-21	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
			W1177	0071	20		34-21-11	ALL
			W1177	5002Z			34-21-11	ALL
			W1177	FRAB			34-21-11	ALL
D42201P		E002-04/ /		PLUG-				ALL
	1		W2221	0001	24		34-21-11	ALL
	2		W2221	0002	24		34-21-11	ALL
	3		W2221	0003	22		34-21-11	ALL
	4		W2221	0004	22		34-21-11	ALL
	5		W2221	0005	22		34-21-11	ALL
	6		W2221	0006	22		34-21-11	ALL
	7		W2221	0007	20		34-21-11	ALL
	8		W2221	0008	20		34-21-11	ALL
	9		W2221	0009	20		34-21-11	ALL
	10		W2221	5001R	24		34-21-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42201P		E002-04/ /		PLUG- (continued)				ALL
	11		W2221	5001B	24		34-21-11	ALL
	12		W2221	5001Z			34-21-11	ALL
	13	UNUSED						ALL
	14		W2221	5002R	24		34-21-11	ALL
	15		W2221	5002B	24		34-21-11	ALL
	16		W2221	5002Z			34-21-11	ALL
	17	UNUSED						ALL
	18		W2221	0013	22		33-16-21	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D42203J		E002-04/ /		RCPT				001-099
D42203J		E2-4/ /		RCPT				115-199
	1		W1177	0020	24		34-21-21	ALL
	2		W1177	0021	24		34-21-21	ALL
	3		W1177	0022	22		34-21-21	ALL
	4		W1177	0024	22		34-21-21	ALL
	5		W1177	0026	22		34-21-21	ALL
	6		W1177	0027	22		34-21-21	ALL
	7		W1177	0028	22		34-21-21	ALL
	8		W1177	0029	22		34-21-21	ALL
	9		W1177	0031	22		34-21-21	ALL
	10		W1177	5020R	24		34-21-21	ALL
	11		W1177	5020B	24		34-21-21	ALL
	12		W1177	FRAT			34-21-21	ALL
	13		W1177	5022R	24		34-21-21	ALL
	14		W1177	5022B	24		34-21-21	ALL
	15		W1177	5022Z			34-21-21	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W1177	0062	22		33-16-31	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42203J		E002-04/ /		RCPT (continued)				001-099
D42203J		E2-4/ /		RCPT (continued)				115-199
	24	UNUSED						ALL
			W1177	0066	20		34-21-21	ALL
			W1177	5020Z			34-21-21	ALL
			W1177	FRAT			34-21-21	ALL
D42203P		E002-04/ /		PLUG				ALL
	1		W2223	0001	24		34-21-21	ALL
	2		W2223	0002	24		34-21-21	ALL
	3		W2223	0003	22		34-21-21	ALL
	4		W2223	0004	22		34-21-21	ALL
	5		W2223	0005	22		34-21-21	ALL
	6		W2223	0006	20		34-21-21	ALL
	7		W2223	0007	20		34-21-21	ALL
	8		W2223	0008	20		34-21-21	ALL
	9		W2223	0009	22		34-21-21	ALL
	10		W2223	5001R	24		34-21-21	ALL
	11		W2223	5001B	24		34-21-21	ALL
	12		W2223	5001Z			34-21-21	ALL
	13		W2223	5002R	24		34-21-21	ALL
	14		W2223	5002B	24		34-21-21	ALL
	15		W2223	5002Z			34-21-21	ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20		W2223	0014	22		33-16-31	ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D42204J		P006-00/ /		RCPT-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0064	0601	22		24-51-72	ALL
	6		W0064	0602	22		24-51-72	ALL
	7	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42204J		P006-00/ /		RCPT- (continued)				ALL
	8		W0064	0603	22		24-51-72	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D42204P		P006-00/ /		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W2014	0015	22		24-51-72	ALL
	6		W2014	0016	22		24-51-72	ALL
	7	UNUSED						ALL
	8		W2014	0017	22		24-51-72	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D42205J		E002-04/ /		RCPT				001-099
D42205J		E2-4/ /		RCPT				115-199
	1		W1177	0039	24		34-21-31	ALL
	2		W1177	0040	24		34-21-31	ALL
	3		W1177	0041	22		34-21-31	ALL
	4		W1177	0048	22		34-21-31	ALL
	5		W1177	0049	22		34-21-31	ALL
	6		W1177	0050	22		34-21-31	ALL
	7		W1177	0051	22		34-21-31	ALL
	8		W1177	0052	22		34-21-31	ALL
	9		W1177	0053	22		34-21-31	ALL
	10		W1177	5040R	24		34-21-31	ALL
	11		W1177	5040B	24		34-21-31	ALL
	12		W1177	FRBN			34-21-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 4

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42205J		E002-04/ /		RCPT (continued)				001-099
D42205J		E2-4/ /		RCPT (continued)				115-199
	13		W1177	5039R	24		34-21-31	ALL
	14		W1177	5039B	24		34-21-31	ALL
	15		W1177	5039Z			34-21-31	ALL
	16		W1177	0063	22		33-16-61	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
			W1177	0069	20		34-21-31	ALL
			W1177	5040Z			34-21-31	ALL
			W1177	FRBN			34-21-31	ALL
D42205P		E002-04/ /		PLUG				ALL
	1		W2225	0001	24		34-21-31	ALL
	2		W2225	0002	24		34-21-31	ALL
	3		W2225	0003	22		34-21-31	ALL
	4		W2225	0004	22		34-21-31	ALL
	5		W2225	0005	22		34-21-31	ALL
	6		W2225	0006	22		34-21-31	ALL
	7		W2225	0007	20		34-21-31	ALL
	8		W2225	0008	20		34-21-31	ALL
	9		W2225	0009	20		34-21-31	ALL
	10		W2225	5001R	24		34-21-31	ALL
	11		W2225	5001B	24		34-21-31	ALL
	12		W2225	5001Z			34-21-31	ALL
	13		W2225	5002R	24		34-21-31	ALL
	14		W2225	5002B	24		34-21-31	ALL
	15		W2225	5002Z			34-21-31	ALL
	16		W2225	0013	22		33-16-61	ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 5

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42205P		E002-04/ /		PLUG (continued)				ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
D42206J		P006-00/ /		RCPT-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W0074	0711	22		24-51-72	ALL
	6		W0074	0710	22		24-51-72	ALL
	7	UNUSED						ALL
	8		W0074	0712	22		24-51-72	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D42206P		P006-00/ /		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
	5		W2012	0017	22		24-51-72	ALL
	6		W2012	0016	22		24-51-72	ALL
	7	UNUSED						ALL
	8		W2012	0018	22		24-51-72	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
D42207J		E6-3/ /		RCPT				115-199
	1		W1017	2002R	24		23-21-11	115-199
	2		W1017	2002B	24		23-21-11	115-199

HOOKUP LIST
D280N032

91-21-51
Section D42200
Page 6
Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42207J		E6-3/ /		RCPT (continued)				115-199
	3		W1017	2506B	24		23-51-14	115-199
	4		W1017	2506R	24		23-51-14	115-199
	5		W1017	2506Z			23-51-14	115-199
	6		W1017	2505B	24		23-51-14	115-199
	7		W1017	2505R	24		23-51-14	115-199
	8		W1017	2505Z			23-51-14	115-199
	9		W1017	0043	24		23-51-14	115-199
	10		W1017	0044	22		23-51-14	115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
D42207P		E6-3/ /		PLUG				115-199
	1		W4061	2001R	24		23-21-11	115-199
	2		W4061	2001B	24		23-21-11	115-199
	3		W4061	2504B	24		23-51-14	115-199
	4		W4061	2504R	24		23-51-14	115-199
	5		W4061	2504Z			23-51-14	115-199
	6		W4061	2503B	24		23-51-14	115-199
	7		W4061	2503R	24		23-51-14	115-199
	8		W4061	2503Z			23-51-14	115-199
	9		W4061	0001	24		23-51-14	115-199
	10		W4061	0004	20		23-51-14	115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
D42208J		E6-2/ /		RCPT				001-099
D42208J		E6-4/ /		RCPT				115-199
	1		W1020	2111R	24		21-61-51	001-099
	1	UNUSED						115-199
	2		W1020	2111B	24		21-61-51	001-099
	2	UNUSED						115-199
	3	UNUSED						ALL
	4	UNUSED						ALL
	5	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 7

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42208J		E6-2/ /		RCPT (continued)				001-099
D42208J		E6-4/ /		RCPT (continued)				115-199
	6		W1032	0073	24		32-46-11	115-199
	7	UNUSED						115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
D42208P		E006-02/ /		PLUG				001-099
D42208P		E006-04/ /		PLUG-				115-199
	1		W2350	2048R	24		21-61-51	001-099
	1	UNUSED						115-199
	2		W2350	2048B	24		21-61-51	001-099
	2	UNUSED						115-199
	3	UNUSED						001-099
	3		W2350	0733	22		SPARE	115-199
	4	UNUSED						001-099
	4		W2350	0732	22		SPARE	115-199
	5	UNUSED						ALL
	6		W2350	0046	24		32-46-11	115-199
	7	UNUSED						115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
D42209P		352/290/L35		PLUG-				115-199
	1		W3533	4251R	24		23-42-11	115-199
	2		W3533	4251Z			23-42-11	115-199
	3		W3533	4251B	24		23-42-11	115-199
	4		W3533	4251Y	24		23-42-11	115-199
	5		W3533	4251G	24		23-42-11	115-199
D42211J		E6-3/ /		RCPT-				115-199
	1		W1017	2001B	24		23-21-11	115-199
	2		W1017	2001R	24		23-21-11	115-199
	3		W1017	2503B	24		23-51-14	115-199
	4		W1017	2503R	24		23-51-14	115-199

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 8

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42211J		E6-3/ /		RCPT- (continued)				115-199
	5		W1017	2503Z			23-51-14	115-199
	6		W1017	2502B	24		23-51-14	115-199
	7		W1017	2502R	24		23-51-14	115-199
	8		W1017	2502Z			23-51-14	115-199
	9		W1017	0021	24		23-51-14	115-199
	10		W1017	0007	22		23-51-14	115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
D42211P		E6-3/ /		PLUG				115-199
	1		W4063	2001B	24		23-21-11	115-199
	2		W4063	2001R	24		23-21-11	115-199
	3		W4063	2505B	24		23-51-14	115-199
	4		W4063	2505R	24		23-51-14	115-199
	5		W4063	2505Z			23-51-14	115-199
	6		W4063	2504B	24		23-51-14	115-199
	7		W4063	2504R	24		23-51-14	115-199
	8		W4063	2504Z			23-51-14	115-199
	9		W4063	0001	24		23-51-14	115-199
	10		W4063	0004	20		23-51-14	115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
D42212J		E6 RLY/PNL/		RCPT				115-199
	1	UNUSED						115-199
	2	UNUSED						115-199
	3	UNUSED						115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7		W1024	0135	24		21-51-13	115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 9

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42212J		E6 RLY/PNL/		RCPT (continued)				115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
D42212P		E6/ /		PLUG-				115-199
	1	UNUSED						115-199
	2	UNUSED						115-199
	3		W2354	0645	22		SPARE	115-199
	4	UNUSED						115-199
	5		W2354	0644	22		SPARE	115-199
	6	UNUSED						115-199
	7		W2354	0061	20		21-51-13	115-199
	8		W2354	0062	20		SPARE	115-199
	9		W2354	0514	22		SPARE	115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
D42214J		E6-4/ /		RCPT				115-199
	1	UNUSED						115-199
	2	UNUSED						115-199
	3	UNUSED						115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
	6		W1032	0102	22		29-33-11	115-199
	7		W1032	0103	22		29-33-11	115-199
	8		W1032	0104	22		29-33-11	115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
D42214P		E6-4/ /		PLUG-				115-199
	1	UNUSED						115-199
	2		W2354	0643	22		SPARE	115-199
	3	UNUSED						115-199
	4		W2354	0642	22		SPARE	115-199
	5	UNUSED						115-199
	6		W2354	0016	22		29-33-11	115-199
	7		W2354	0361	22		29-33-11	115-199
	8		W2354	0362	22		29-33-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 10

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42214P		E6-4/ /		PLUG- (continued)				115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
D42216J		E6 RLY/PNL/		RCPT				115-199
	1	UNUSED						115-199
	2		W1024	0006	22		33-37-21	115-199
	3	UNUSED						115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
	8		W1024	0200	24		21-51-23	115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
D42216P		E6/ /		PLUG-				115-199
	1		W2350	0141	22		SPARE	115-199
	2		W2350	0142	22		33-37-21	115-199
	3		W2350	0730	22		SPARE	115-199
	4	UNUSED						115-199
	5		W2350	0520	22		SPARE	115-199
	6	UNUSED						115-199
	7		W2350	0731	22		SPARE	115-199
	8		W2350	0048	20		21-51-23	115-199
	9		W2350	0049	20		SPARE	115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
D42218J		E6-2/ /		RECPT-				001-099
D42218J		E6-4/ /		RECPT				115-199
	1		W1020	0500	24		21-51-11	001-099
	1	UNUSED						115-199
	2	UNUSED						001-099
	2		W1032	0385	22		32-42-11	115-199
	3	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 11

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42218J		E6-2/ /		RECPT- (continued)				001-099
D42218J		E6-4/ /		RECPT (continued)				115-199
	3		W1032	0386	22		32-42-11	115-199
	4	UNUSED						001-099
	4		W1032	0387	22		32-42-11	115-199
	5	UNUSED						001-099
	5		W1032	0388	22		32-42-11	115-199
	6		W1032	0389	22		32-42-11	115-199
	7		W1032	0117	24		29-33-11	115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
D42218P		E6-2/ /		PLUG-				001-099
D42218P		E6-4/ /		PLUG-				115-199
	1		W2358	0029	24		21-51-11	001-099
	1	UNUSED						115-199
	2	UNUSED						001-099
	2		W2358	0332	22		32-42-11	115-199
	3	UNUSED						001-099
	3		W2358	0333	22		32-42-11	115-199
	4	UNUSED						001-099
	4		W2358	0334	22		32-42-11	115-199
	5	UNUSED						001-099
	5		W2358	0335	22		32-42-11	115-199
	6		W2358	0336	22		32-42-11	115-199
	7		W2358	0437	24		29-33-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 12

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42218P		E6-2/ /		PLUG- (continued)				001-099
D42218P		E6-4/ /		PLUG- (continued)				115-199
	8		W2358	0438	22		SPARE	115-199
	9		W2358	0439	22		SPARE	115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
D42220J		E003-04/ /		RCPT				ALL
	1		W1280	1001	22		28-41-21	001-099
	1	VN	W1280	1001	22		28-41-21	115-199
	2	UNUSED						001-099
	2		W1280	0370	20		28-41-21	115-199
	3	UNUSED						ALL
	= C1		W1280	1001Z			28-41-21	ALL
D42220P		E3-4/ /		PLUG				001-099
D42220P		E3-4/ /		PLUG-				115-199
	1		W4024	001TX	18		28-41-21	001-099
	1		W4206	001TX	18		28-41-21	115-199
	2		W4024	0001	18		28-41-21	001-099
	2		W4206	001TO			28-41-21	115-199
	3		W4024	0002	18		28-41-21	001-099
	3	UNUSED						115-199
	= C1		W4024	001TI			28-41-21	001-099
	= C1		W4206	001TI			28-41-21	115-199
	S/R		W4024	001TO			28-41-21	001-099
	CAP	Y	W4024	0001	18		28-41-21	001-099
	CAP	Y	W4024	0002	18		28-41-21	001-099

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 13

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42221J		E002-02/ /		RCPT-				ALL
	1		W1173	0740	22		34-12-62	ALL
	2		W1173	5333R	24		34-12-61	ALL
	3		W1173	5333B	24		34-12-61	ALL
	4		W1173	5333Z			34-12-61	ALL
	5		W1173	0742	22		34-12-62	ALL
	6		W1173	0741	22		34-12-62	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 14

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42221J		E002-02/ /		RCPT- (continued)				ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D42221P		E002-02/ /		PLUG-				ALL
	1		W4471	0559	22		34-12-61	ALL
	2		W4471	2513R	24		34-12-61	ALL
	3		W4471	2513B	24		34-12-61	ALL
	4		W4471	2513Z			34-12-61	ALL
	5		W4471	0560	22		34-12-61	ALL
	6		W4471	0561	22		34-12-61	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 15

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42221P		E002-02/ /		PLUG- (continued)				ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
	32	UNUSED						ALL
	33	UNUSED						ALL
	34	UNUSED						ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	43	UNUSED						ALL
	44	UNUSED						ALL
	45	UNUSED						ALL
	46	UNUSED						ALL
	47	UNUSED						ALL
	48	UNUSED						ALL
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D42222J		E003-04/ /		RCPT				ALL
	1		W1280	1002	22		28-41-31	001-099
	1	VN	W1280	1002	22		28-41-31	115-199
	2	UNUSED						001-099
	2		W1280	0366	20		28-41-31	115-199
	3	UNUSED						ALL
	= C1		W1280	1002Z			28-41-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 16

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42222P		E3-4/ /		PLUG				001-002
D42222P		E003-04/ /		PLUG				003-099, 115-199
	1		W4026	001TX	18		28-41-31	001-099
	1		W4218	001TX	18		28-41-31	115-199
	2		W4026	0001	18		28-41-31	001-099
	2		W4218	001TO			28-41-31	115-199
	3		W4026	0004	18		28-41-41	001-002
	3		W4026	0004	18		28-41-31	003-099
	3	UNUSED						115-199
	= C1		W4026	001TI			28-41-31	001-099
	= C1		W4218	001TI			28-41-31	115-199
	S/R		W4026	001TO			28-41-31	001-099
	CAP	Y	W4026	0004	18		28-41-41	001-002
	CAP	Y	W4026	0001	18		28-41-31	001-099
	CAP	Y	W4026	0004	18		28-41-31	003-099
D42224J		E003-04/ /		RCPT				ALL
	1		W1280	1009	22		28-41-41	001-099
	1	VN	W1280	1009	22		28-41-41	115-199
	2	UNUSED						001-099
	2		W1280	0371	20		28-41-41	115-199
	3	UNUSED						ALL
	4		W1280	0298	24		28-41-41	001-099
	5		W1280	0299	24		28-41-41	001-099
	6		W1280	0300	24		28-41-41	001-099
	7		W1280	0301	24		28-41-41	001-099
	8		W1280	0297	24		28-41-41	001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	= C1		W1280	1009Z			28-41-41	ALL
D42224P		E3-4/ /		PLUG				001-099
D42224P		E3-4/ /		PLUG-				115-199
	1		W4024	002TX	18		28-41-41	001-099
	1		W4206	002TX	18		28-41-41	115-199
	2		W4024	0003	18		28-41-41	001-099
	2		W4206	002TO			28-41-41	115-199
	3		W4024	0004	18		28-41-41	001-099
	3	UNUSED						115-199
	4		W4024	4502R	20		28-41-41	001-099

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 17

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42224P		E3-4/ /		PLUG (continued)				001-099
D42224P		E3-4/ /		PLUG- (continued)				115-199
	5		W4024	4502G	20		28-41-41	001-099
	6		W4024	4502B	20		28-41-41	001-099
	7		W4024	4502K	20		28-41-41	001-099
	8		W4024	4502Y	20		28-41-41	001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	= C1		W4024	002TI			28-41-41	001-099
	= C1		W4206	002TI			28-41-41	115-199
	S/R		W4024	002TO			28-41-41	001-099
	S/R		W4024	4502Z			28-41-41	001-099
	CAP	Y	W4024	0003	18		28-41-41	001-099
	CAP	Y	W4024	0004	18		28-41-41	001-099
D42225J		E002-04/ /		RCPT-				001-099
D42225J		E2-4/ /		RCPT				115-199
	1		W1177	0104	14		34-21-11	001-099
	1		W1179	0004	14		34-21-11	115-199
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
D42225P		E002-04/ /		PLUG-				ALL
	1		W2250	0051	14		34-21-11	ALL
	2	UNUSED						ALL
	3	UNUSED						ALL
	4	UNUSED						ALL
D42226J		E003-04/ /		RCPT				ALL
	1		W1280	1003	22		28-41-41	001-099
	1	VN	W1280	1003	22		28-41-41	115-199
	2	UNUSED						001-099
	2		W1280	0367	20		28-41-41	115-199
	3	UNUSED						ALL
	4		W1280	0292	24		28-41-41	001-099
	5		W1280	0293	24		28-41-41	001-099
	6		W1280	0294	24		28-41-41	001-099
	7		W1280	0291	24		28-41-41	001-099
	8	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 18

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42226J		E003-04/ /		RCPT (continued)				ALL
	9		W1280	0296	24		28-41-41	001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	= C1		W1280	1003Z			28-41-41	ALL
D42226P		E3-4/ /		PLUG				001-002
D42226P		E003-04/ /		PLUG				003-099, 115-199
	1		W4026	002TX	18		28-41-41	001-099
	1		W4218	002TX	18		28-41-41	115-199
	2		W4026	0002	18		28-41-41	001-099
	2		W4218	002TO			28-41-41	115-199
	3		W4026	0003	18		28-41-41	001-099
	3	UNUSED						115-199
	4		W4026	4502G	20		28-41-41	001-099
	5		W4026	4502R	20		28-41-41	001-099
	6		W4026	4502B	20		28-41-41	001-099
	7		W4026	4502Y	20		28-41-41	001-099
	8	UNUSED						001-099
	9		W4026	4502K	20		28-41-41	001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	= C1		W4026	002TI			28-41-41	001-099
	= C1		W4218	002TI			28-41-41	115-199
	S/R		W4026	002TO			28-41-41	001-099
	S/R		W4026	4502Z			28-41-41	001-099
	CAP	Y	W4026	0002	18		28-41-41	001-099
	CAP	Y	W4026	0003	18		28-41-41	001-099
D42227J		E002-04/ /		RCPT-				001-099
D42227J		E2-4/ /		RCPT				115-199
	1	UNUSED						ALL
	2		W1177	0107	14		34-21-21	001-099
	2		W1179	0007	14		34-21-21	115-199
	3	UNUSED						ALL
	4	UNUSED						ALL
D42227P		E002-04/ /		PLUG-				ALL
	1	UNUSED						ALL
	2		W2250	0520	14		34-21-21	ALL
	3	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 19

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42227P		E002-04/ /		PLUG- (continued)				ALL
	4	UNUSED						ALL
D42228J		E5-1/ /		RCPT				ALL
	1		W1282	2020R	24		27-51-41	ALL
	2		W1282	2020B	24		27-51-41	ALL
	3		W1282	4007R	24		27-51-41	ALL
	4		W1282	4007B	24		27-51-41	ALL
	5		W1282	4007Y	24		27-51-41	ALL
	6		W1282	4007G	24		27-51-41	ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
D42228P		E005-01/ /		PLUG				ALL
	1		W4220	2007R	24		27-51-41	001-099
	1		W4232	2003R	22		27-51-41	115-199
	2		W4220	2007B	24		27-51-41	001-099
	2		W4232	2003B	22		27-51-41	115-199
	3		W4220	4001R	24		27-51-41	001-099
	3		W4232	4001R	22		27-51-41	115-199
	4		W4220	4001B	24		27-51-41	001-099
	4		W4232	4001B	22		27-51-41	115-199
	5		W4220	4001Y	24		27-51-41	001-099
	5		W4232	4001Y	22		27-51-41	115-199
	6		W4220	4001G	24		27-51-41	001-099
	6		W4232	4001G	22		27-51-41	115-199
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 20

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42228P		E005-01/ /		PLUG (continued)				ALL
	15	UNUSED						ALL
D42229J		E002-04/ /		RCPT-				001-099
D42229J		E2-4/ /		RCPT				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1177	0112	14		34-21-31	001-099
	3		W1179	0012	14		34-21-31	115-199
	4	UNUSED						ALL
D42229P		E002-04/ /		PLUG-				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W2250	0054	14		34-21-31	ALL
	4	UNUSED						ALL
D42230J		E002-01/ /		RCPT-				001-099
D42230J		E2-1/ /		RCPT-				115-199
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W1171	2540Z			73-21-12	ALL
	4		W1171	2539B	24		73-21-12	ALL
	5		W1171	2539R	24		73-21-12	ALL
	6		W1171	2540B	24		73-21-12	ALL
	7		W1171	2540R	24		73-21-12	ALL
	8		W1171	2539Z			73-21-12	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W1171	0389	24		73-21-12	ALL
	12		W1171	0390	24		73-21-12	ALL
	13	UNUSED						ALL
	14	16	W1171	0110	16		75-31-11	ALL
	15	16	W1171	0112	16		75-31-11	ALL
D42230P		E002-01/ /		PLUG				ALL
	1	UNUSED						ALL
	2	UNUSED						ALL
	3		W4228	2506Z			73-21-12	ALL
	4		W4228	2505B	22		73-21-12	001-099
	4		W4228	2505B	24		73-21-12	115-199

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 21

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42230P		E002-01/ /		PLUG (continued)				ALL
	5		W4228	2505R	22		73-21-12	001-099
	5		W4228	2505R	24		73-21-12	115-199
	6		W4228	2506B	22		73-21-12	001-099
	6		W4228	2506B	24		73-21-12	115-199
	7		W4228	2506R	22		73-21-12	001-099
	7		W4228	2506R	24		73-21-12	115-199
	8		W4228	2505Z			73-21-12	ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11		W4228	0219	24		73-21-12	ALL
	12		W4228	0216	24		73-21-12	ALL
	13	UNUSED						ALL
	14	16	W4228	0255	16		75-31-11	ALL
	15	16	W4228	0256	16		75-31-11	ALL
D42233J		E002-02/ /		RCPT-				ALL
	1		W1173	0735	22		34-12-62	ALL
	2		W1173	0736	22		34-12-62	ALL
	3		W1173	0737	22		34-12-62	ALL
	4		W1173	5118B	24		34-12-62	ALL
	5		W1173	5118R	24		34-12-62	ALL
	6		W1173	FRHJ			34-12-62	ALL
	7		W1173	5335R	24		34-12-62	ALL
	8		W1173	5335B	24		34-12-62	ALL
	9		W1173	5335Z			34-12-62	ALL
	10		W1173	5336R	24		34-12-62	ALL
	11		W1173	5336B	24		34-12-62	ALL
	12		W1173	FRSB			34-12-62	ALL
	13		W1173	0738	22		34-12-62	ALL
	14		W1173	0739	22		34-12-62	ALL
	15		W1173	0741	22		34-12-62	ALL
	16		W1173	0742	22		34-12-62	ALL
	17		W1173	0743	22		34-12-62	ALL
	18		W1173	0746	22		34-12-62	ALL
	19		W1173	0747	22		34-12-62	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 22

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42233J		E002-02/ /		RCPT- (continued)				ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
			W1173	0744	20		34-12-62	ALL
			W1173	0745	20		34-12-62	ALL
			W1173	5118Z			34-12-62	ALL
			W1173	5336Z			34-12-62	ALL
			W1173	FRHJ			34-12-62	ALL
			W1173	FRSB			34-12-62	ALL
D42233P		E002-02/ /		PLUG-				ALL
	1		W4473	0535	22		34-12-62	ALL
	2		W4473	0536	22		34-12-62	ALL
	3		W4473	0537	22		34-12-62	ALL
	4		W4473	2509B	24		34-12-62	ALL
	5		W4473	2509R	24		34-12-62	ALL
	6		W4473	2509Z			34-12-62	ALL
	7		W4473	2510R	24		34-12-62	ALL
	8		W4473	2510B	24		34-12-62	ALL
	9		W4473	2510Z			34-12-62	ALL
	10		W4473	2511R	24		34-12-62	ALL
	11		W4473	2511B	24		34-12-62	ALL
	12		W4473	2511Z			34-12-62	ALL
	13		W4473	0538	22		34-12-62	ALL
	14		W4473	0539	22		34-12-62	ALL
	15		W4473	0540	22		34-12-62	ALL
	16		W4473	0541	22		34-12-62	ALL
	17		W4473	0542	22		34-12-62	ALL
	18		W4473	0543	22		34-12-62	ALL
	19		W4473	0544	22		34-12-62	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 23

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42233P		E002-02/ /		PLUG- (continued)				ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	31	UNUSED						ALL
D42238J		E6 RLY/PNL/		RCPT				ALL
I	1		W1024	0101	24		24-33-12	001-099
I	1	UNUSED						115-199
I	2		W1024	0084	24		24-33-12	001-099
I	2	UNUSED						115-199
	3		W1024	0002	22		28-25-21	001-099
	3		W1024	0002	20		28-25-21	115-199
I	4		W1024	0241	24		24-33-12	001-099
I	4	UNUSED						115-199
I	5		W1024	0056	24		24-33-12	001-099
I	5	UNUSED						115-199
I	6		W1024	0068	24		24-33-12	001-099
I	6	UNUSED						115-199
	7		W1024	0001	16		49-61-11	001-099
	7	UNUSED						115-199
	8		W1024	0017	24		28-25-11	ALL
I	9		W1024	0069	24		24-33-12	001-099
I	9	UNUSED						115-199
I	10		W1024	0070	24		24-33-12	001-099
I	10	UNUSED						115-199
	11		W1024	0097	20		28-25-11	001-099
	11		W1024	0330	24		21-51-13	115-199
	12		W1024	0018	20		28-25-11	ALL
	13	UNUSED						115-199
	14		W1024	0001	16		49-61-11	115-199
	15		W1024	0210	24		21-51-23	115-199
	16	UNUSED						115-199
	17	UNUSED						115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 24

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42238J		E6 RLY/PNL/		RCPT (continued)				ALL
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
D42238P		E-6/ /		PLUG-				001-099
D42238P		E6/ /		PLUG-				115-199
I	1		W2358	0701	24		24-33-12	001-099
I	1	UNUSED						115-199
I	2		W2358	0702	22		24-33-12	001-099
I	2	UNUSED						115-199
I	3		W2358	0532	22		28-25-21	ALL
I	4		W2358	0700	22		24-33-12	001-099
I	4	UNUSED						115-199
I	5		W2358	0715	22		24-33-12	001-099
I	5	UNUSED						115-199
I	6		W2358	0703	22		24-33-12	001-099
I	6	UNUSED						115-199
I	7		W2358	0207	16		49-61-11	001-099
I	7	UNUSED						115-199
I	8		W2358	0015	24		28-25-11	001-099
I	8		W2358	0015	22		28-25-11	115-199
I	9		W2358	0704	22		24-33-12	001-099
I	9	UNUSED						115-199
I	10		W2358	0710	22		24-33-12	001-099
I	10	UNUSED						115-199
I	11		W2358	0017	22		28-25-11	001-099
I	11		W2358	0045	20		21-51-13	115-199
I	12		W2358	0019	22		28-25-11	ALL
I	13	UNUSED						115-199
I	14		W2358	0207	16		49-61-11	115-199
I	15		W2358	0048	20		21-51-23	115-199
I	16	UNUSED						115-199
I	17	UNUSED						115-199
I	18	UNUSED						115-199
I	19	UNUSED						115-199
I	20	UNUSED						115-199
I	21	UNUSED						115-199
I	22	UNUSED						115-199
I	23	UNUSED						115-199
I	24	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 25

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42238P		E-6/ /		PLUG- (continued)				001-099
D42238P		E6/ /		PLUG- (continued)				115-199
	25	UNUSED						115-199
D42272J		AW1285/ /		PLUG				ALL
	1		W5104	2504B	20		75-31-11	ALL
	2		W5104	2505B	18		75-31-11	ALL
	3		W5104	1004	20		77-11-11	ALL
	4		W5104	2504R	20		75-31-11	ALL
	5		W5104	2506B	20		SPARE	001-099
	5		W5104	0010	20		SPARE	115-199
	6		W5104	0028	20		SPARE	001-099
	6		W5104	2502B	20		SPARE	115-199
	7		W5104	0002	20		77-31-11	ALL
	8		W5104	0002	20		77-31-11	ALL
	9		W5104	0029	20		SPARE	001-099
	9		W5104	2506R	18		73-21-11	115-199
	10		W5104	2503B	18		73-21-12	ALL
	11		W5104	2503R	18		73-21-12	ALL
	12		W5104	2505R	18		75-31-11	ALL
	13		W5104	2001B	18		22-33-11	ALL
	14		W5104	2001R	18		22-33-11	ALL
	15		W5104	2002B	18		22-33-11	ALL
	16		W5104	2002R	18		22-33-11	ALL
	17	UNUSED						ALL
	18		W5104	0003	20		77-31-11	ALL
	19		W5104	4501R	20		77-31-11	ALL
	20		W5104	4501Z			77-31-11	ALL
	21		W5104	0008	20		77-31-11	ALL
	22		W5104	5001R	20		77-11-11	ALL
	23		W5104	5002B	20		77-11-11	ALL
	24		W5104	5002R	20		77-11-11	ALL
	25		W5104	2502R	20		SPARE	001-099
	25		W5104	2507B	20		SPARE	115-199
	26		W5104	2502B	20		SPARE	001-099
	26		W5104	2507R	20		SPARE	115-199
	27		W5104	2506R	20		SPARE	001-099
	27	UNUSED						115-199
	28	UNUSED						001-099
	28		W5104	2502R	20		SPARE	115-199
	29		W5104	2507B	18		73-21-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 26

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42272J		AW1285/ /		PLUG (continued)				ALL
	29		W5104	2506B	18		73-21-11	115-199
	30		W5104	2507R	18		73-21-11	001-099
	30	UNUSED						115-199
	31		W5104	2501B	20		77-12-31	ALL
	32		W5104	2501R	20		77-12-31	ALL
	33	UNUSED						ALL
	34		W5104	0003	20		77-31-11	ALL
	35		W5104	4501W	20		77-31-11	ALL
	36		W5104	4502R	20		77-31-11	ALL
	37		W5104	4502W	20		77-31-11	ALL
	38		W5104	4502Z			77-31-11	ALL
	39		W5104	0008	20		77-31-11	ALL
	40		W5104	5001B	20		77-11-11	ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	S/R		W5104	2506Z			SPARE	001-099
	S/R		W5104	2507Z			73-21-11	001-099
	S/R		W5104	1004Z			77-11-11	ALL
	S/R		W5104	2501Z			77-12-31	ALL
	S/R		W5104	2502Z			SPARE	ALL
	S/R		W5104	2503Z			73-21-12	ALL
	S/R		W5104	2504Z			75-31-11	ALL
	S/R		W5104	2505Z			75-31-11	ALL
	S/R		W5104	5001Z			77-11-11	ALL
	S/R		W5104	5002Z			77-11-11	ALL
	S/R		W5104	2506Z			73-21-11	115-199
	S/R		W5104	2507Z			SPARE	115-199
D42272P		AW1285/ /		PLUG				ALL
	1		W3304	2504B	20		75-31-11	ALL
	2		W3304	2505B	16		75-31-11	ALL
	3		W3304	1003	20		77-11-11	ALL
	4		W3304	2504R	20		75-31-11	ALL
	5		W3304	2509B	20		SPARE	001-099
	5		W3304	0010	20		SPARE	115-199
	6		W3304	0008	20		SPARE	001-099
	6		W3304	2502B	20		SPARE	115-199
	7		W3304	0001	20		77-31-11	ALL
	8		W3304	0001	20		77-31-11	ALL
	9		W3304	0009	20		SPARE	001-099

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 27

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42272P		AW1285/ /		PLUG (continued)				ALL
	9		W3304	2506R	18		73-21-11	115-199
	10		W3304	2503B	18		73-21-12	ALL
	11		W3304	2503R	18		73-21-12	ALL
	12		W3304	2505R	16		75-31-11	ALL
	13		W3304	2001B	18		22-33-11	ALL
	14		W3304	2001R	18		22-33-11	ALL
	15		W3304	2002B	18		22-33-11	ALL
	16		W3304	2002R	18		22-33-11	ALL
	17	UNUSED						ALL
	18		W3304	0002	20		77-31-11	ALL
	19		W3304	4501R	20		77-31-11	ALL
	20		W3304	4501Z			77-31-11	ALL
	21		W3304	0003	20		77-31-11	ALL
	22		W3304	5001R	20		77-11-11	ALL
	23		W3304	5002B	20		77-11-11	ALL
	24		W3304	5002R	20		77-11-11	ALL
	25		W3304	2508R	20		SPARE	001-099
	25		W3304	2507B	20		SPARE	115-199
	26		W3304	2508B	20		SPARE	001-099
	26		W3304	2507R	20		SPARE	115-199
	27		W3304	2509R	20		SPARE	001-099
	27	UNUSED						115-199
	28	UNUSED						001-099
	28		W3304	2502R	20		SPARE	115-199
	29		W3304	2507B	18		73-21-11	001-099
	29		W3304	2506B	18		73-21-11	115-199
	30		W3304	2507R	18		73-21-11	001-099
	30	UNUSED						115-199
	31		W3304	2501B	20		77-12-31	ALL
	32		W3304	2501R	20		77-12-31	ALL
	33	UNUSED						ALL
	34		W3304	0002	20		77-31-11	ALL
	35		W3304	4501W	20		77-31-11	ALL
	36		W3304	4502R	20		77-31-11	ALL
	37		W3304	4502W	20		77-31-11	ALL
	38		W3304	4502Z			77-31-11	ALL
	39		W3304	0003	20		77-31-11	ALL
	40		W3304	5001B	20		77-11-11	ALL
	41	UNUSED						ALL
	42	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 28

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42272P		AW1285/ /		PLUG (continued)				ALL
	S/R		W3304	2507Z			73-21-11	001-099
	S/R		W3304	2508Z			SPARE	001-099
	S/R		W3304	2509Z			SPARE	001-099
	S/R		W3304	1003Z			77-11-11	ALL
	S/R		W3304	2501Z			77-12-31	ALL
	S/R		W3304	2503Z			73-21-12	ALL
	S/R		W3304	2504Z			75-31-11	ALL
	S/R		W3304	2505Z			75-31-11	ALL
	S/R		W3304	5001Z			77-11-11	ALL
	S/R		W3304	5002Z			77-11-11	ALL
	S/R		W3304	2502Z			SPARE	115-199
	S/R		W3304	2506Z			73-21-11	115-199
	S/R		W3304	2507Z			SPARE	115-199
D42276J		AW1285/ /		RCPT				ALL
	1		W3302	0006	18		29-32-11	ALL
	2		W3302	3502B	20		30-21-11	ALL
	3		W3302	3502R	20		30-21-11	ALL
	4		W3302	3502Y	20		30-21-11	ALL
	5		W3302	2503B	20		74-31-11	ALL
	6		W3302	2503R	20		74-31-11	ALL
	7		W3302	1002	20		76-11-21	ALL
	8		W3302	0017	20		78-36-11	ALL
	9		W3302	0018	20		78-36-11	ALL
	10		W3302	0020	20		76-11-11	ALL
	11		W3302	0021	20		76-11-11	ALL
	12		W3302	3506B	20		SPARE	ALL
	13		W3302	3506R	20		SPARE	ALL
	14		W3302	3506Y	20		SPARE	ALL
	15		W3302	2501B	20		79-34-11	ALL
	16		W3302	2501R	20		79-34-11	ALL
	17		W3302	3503Y	20		73-31-11	ALL
	18		W3302	3503R	20		73-31-11	ALL
	19		W3302	3503B	20		73-31-11	ALL
	20		W3302	3504B	20		79-31-11	ALL
	21		W3302	3504R	20		79-31-11	ALL
	22		W3302	3504Y	20		79-31-11	ALL
	23		W3302	3505B	20		79-32-11	ALL
	24		W3302	3505R	20		79-32-11	ALL
	25		W3302	3505Y	20		79-32-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 29

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42276J		AW1285/ /		RCPT (continued)				ALL
	26		W3302	0004	18		26-18-11	ALL
	27		W3302	2502B	20		79-34-11	ALL
	28		W3302	2502R	20		79-34-11	ALL
	29	UNUSED						001-002, 115-199
	29		W3302	0037	20		78-36-11	003-099
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W3302	2504B	20		SPARE	001-099
	32		W3302	0035	20		SPARE	115-199
	33		W3302	2504R	20		SPARE	001-099
	33		W3302	2505B	20		SPARE	115-199
	34	UNUSED						001-099
	34		W3302	2505R	20		SPARE	115-199
	35		W3302	2504Z			SPARE	001-099
	35		W3302	2505Z			SPARE	115-199
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	S/R		W3302	1002Z			76-11-21	ALL
	S/R		W3302	2501Z			79-34-11	ALL
	S/R		W3302	2502Z			79-34-11	ALL
	S/R		W3302	2503Z			74-31-11	ALL
	S/R		W3302	3502Z			30-21-11	ALL
	S/R		W3302	3503Z			73-31-11	ALL
	S/R		W3302	3504Z			79-31-11	ALL
	S/R		W3302	3505Z			79-32-11	ALL
	S/R		W3302	3506Z			SPARE	ALL
D42276P		AW1285/ /		PLUG				ALL
	1		W5102	0006	18		29-32-11	ALL
	2		W5102	3502B	20		30-21-11	ALL
	3		W5102	3502R	20		30-21-11	ALL
	4		W5102	3502Y	20		30-21-11	ALL
	5		W5102	2503B	20		74-31-11	ALL
	6		W5102	2503R	20		74-31-11	ALL
	7		W5102	1001	20		76-11-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 30

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42276P		AW1285/ /		PLUG (continued)				ALL
	8		W5102	0017	20		78-36-11	ALL
	9		W5102	0018	20		78-36-11	ALL
	10		W5102	0020	20		76-11-11	ALL
	11		W5102	0021	20		76-11-11	ALL
	12		W5102	3506B	20		SPARE	ALL
	13		W5102	3506R	20		SPARE	ALL
	14		W5102	3506Y	20		SPARE	ALL
	15		W5102	2501B	20		79-34-11	ALL
	16		W5102	2501R	20		79-34-11	ALL
	17		W5102	3503Y	20		73-31-11	ALL
	18		W5102	3503R	20		73-31-11	ALL
	19		W5102	3503B	20		73-31-11	ALL
	20		W5102	3504B	20		79-31-11	ALL
	21		W5102	3504R	20		79-31-11	ALL
	22		W5102	3504Y	20		79-31-11	ALL
	23		W5102	3505B	20		79-32-11	ALL
	24		W5102	3505R	20		79-32-11	ALL
	25		W5102	3505Y	20		79-32-11	ALL
	26		W5102	0004	18		26-18-11	ALL
	27		W5102	2502B	20		79-34-11	ALL
	28		W5102	2502R	20		79-34-11	ALL
	29	UNUSED						001-002, 115-199
	29		W5102	0036	20		78-36-11	003-099
	30	UNUSED						ALL
	31	UNUSED						ALL
	32		W5102	2504B	20		SPARE	001-099
	32		W5102	0035	20		SPARE	115-199
	33		W5102	2504R	20		SPARE	001-099
	33		W5102	2505B	20		SPARE	115-199
	34	UNUSED						001-099
	34		W5102	2505R	20		SPARE	115-199
	35		W5102	2504Z			SPARE	001-099
	35		W5102	2505Z			SPARE	115-199
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 31

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42276P		AW1285/ /		PLUG (continued)				ALL
	S/R		W5102	1001Z			76-11-21	ALL
	S/R		W5102	2501Z			79-34-11	ALL
	S/R		W5102	2502Z			79-34-11	ALL
	S/R		W5102	2503Z			74-31-11	ALL
	S/R		W5102	3502Z			30-21-11	ALL
	S/R		W5102	3503Z			73-31-11	ALL
	S/R		W5102	3504Z			79-31-11	ALL
	S/R		W5102	3505Z			79-32-11	ALL
	S/R		W5102	3506Z			SPARE	ALL
D42278J		AW1285/ /		RCPT				ALL
	1		W3380	4251R	20		73-33-11	ALL
	2		W3380	2503B	20		74-31-11	ALL
	3		W3380	2503R	20		74-31-11	ALL
	4		W3380	2501R	20		77-12-11	ALL
	5		W3380	2501B	20		77-12-11	ALL
	6	UNUSED						ALL
	7		W3380	2502R	20		77-12-21	ALL
	8		W3380	2502B	20		77-12-21	ALL
	9	UNUSED						ALL
	10		W3380	4251G	20		79-33-11	ALL
	11		W3380	4251B	20		79-35-11	ALL
	12		W3380	3501B	20		80-11-11	ALL
	13		W3380	3501R	20		80-11-11	ALL
	14		W3380	3501Y	20		80-11-11	ALL
	15		W3380	1001	20		74-31-11	ALL
	16		W3380	0012	20		SPARE	ALL
	17		W3380	2504B	20		SPARE	ALL
	18		W3380	2504R	20		SPARE	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W3380	4251Y	20		73-34-11	ALL
	22	4H	W3380	4501G	20		77-21-11	ALL
	23	4L	W3380	4501W	20		77-21-11	ALL
	24	UNUSED						ALL
	25		W3380	0018R	20		26-11-11	ALL
	26		W3380	0026	20		78-34-11	ALL
	27		W3380	0020R	20		26-11-11	ALL
	28		W3380	0021	18		26-13-11	ALL
	29	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 32

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42278J		AW1285/ /		RCPT (continued)				ALL
	30		W3380	2505B	20		SPARE	ALL
	31		W3380	2505R	20		SPARE	ALL
	32	UNUSED						ALL
	33		W3380	0019R	20		26-11-11	ALL
	34		W3380	0022	18		26-13-11	ALL
	35		W3380	2506B	18		30-34-21	ALL
	36		W3380	2506R	18		30-34-21	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	S/R		W3380	1001Z			74-31-11	ALL
	S/R		W3380	2501Z			77-12-11	ALL
	S/R		W3380	2502Z			77-12-21	ALL
	S/R		W3380	2503Z			74-31-11	ALL
	S/R		W3380	2504Z			SPARE	ALL
	S/R		W3380	2505Z			SPARE	ALL
	S/R		W3380	2506Z			30-34-21	ALL
	S/R		W3380	3501Z			80-11-11	ALL
	S/R		W3380	4251Z			79-35-11	ALL
	S/R		W3380	4501Z			77-21-11	ALL
D42278P		AW1285/ /		PLUG				ALL
	1		W5108	4251R	20		73-33-11	ALL
	2		W5108	2503B	20		74-31-11	ALL
	3		W5108	2503R	20		74-31-11	ALL
	4		W5108	2501R	20		77-12-11	ALL
	5		W5108	2501B	20		77-12-11	ALL
	6	UNUSED						ALL
	7		W5108	2502R	20		77-12-21	ALL
	8		W5108	2502B	20		77-12-21	ALL
	9	UNUSED						ALL
	10		W5108	4251G	20		79-33-11	ALL
	11		W5108	4251B	20		79-35-11	ALL
	12		W5108	3501B	20		80-11-11	ALL
	13		W5108	3501R	20		80-11-11	ALL
	14		W5108	3501Y	20		80-11-11	ALL
	15		W5108	1004	20		74-31-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 33

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42278P		AW1285/ /		PLUG (continued)				ALL
	16		W5108	0012	20		SPARE	ALL
	17		W5108	2504B	20		SPARE	ALL
	18		W5108	2504R	20		SPARE	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W5108	4251Y	20		73-34-11	ALL
	22		W5108	4501G	20		77-21-11	ALL
	23		W5108	4501W	20		77-21-11	ALL
	24	UNUSED						ALL
	25		W5108	0018R	20		26-11-11	ALL
	26		W5108	1001	20		78-34-11	ALL
	27		W5108	0020R	20		26-11-11	ALL
	28		W5108	0021	18		26-13-11	ALL
	29	UNUSED						ALL
	30		W5108	2505B	20		SPARE	ALL
	31		W5108	2505R	20		SPARE	ALL
	32	UNUSED						ALL
	33		W5108	0019R	20		26-11-11	ALL
	34		W5108	0022	18		26-13-11	ALL
	35		W5108	2506B	18		30-34-21	ALL
	36		W5108	2506R	18		30-34-21	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	S/R		W5108	1001Z			78-34-11	ALL
	S/R		W5108	1004Z			74-31-11	ALL
	S/R		W5108	2501Z			77-12-11	ALL
	S/R		W5108	2502Z			77-12-21	ALL
	S/R		W5108	2503Z			74-31-11	ALL
	S/R		W5108	2504Z			SPARE	ALL
	S/R		W5108	2505Z			SPARE	ALL
	S/R		W5108	2506Z			30-34-21	ALL
	S/R		W5108	3501Z			80-11-11	ALL
	S/R		W5108	4251Z			79-35-11	ALL
	S/R		W5108	4501Z			77-21-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 34

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42280J		AW1285/ /		RECPT				001-099
D42280J		AW1285/ /		RECPT-				115-199
	1		W5100	1002	20		76-11-11	ALL
	2		W5100	3504B	20		SPARE	001-099
	2		W5100	2505B	20		SPARE	115-199
	3		W5100	3504R	20		SPARE	001-099
	3		W5100	2505R	20		SPARE	115-199
	4		W5100	3504Y	20		SPARE	001-099
	4		W5100	2506B	20		SPARE	115-199
	5		W5100	2501B	20		73-21-11	ALL
	6		W5100	0066	20		SPARE	001-099
	6		W5100	2506R	20		SPARE	115-199
	7		W5100	0067	20		29-11-12	ALL
	8		W5100	0072	20		29-11-12	ALL
	9		W5100	1007	18		28-22-21	ALL
	10		W5100	0095	20		29-22-11	ALL
	11		W5100	0080	20		29-11-12	ALL
	12	UNUSED						001-099
	12		W5100	1008	20		28-41-21	115-199
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W5100	2501R	20		73-21-11	ALL
	16		W5100	2502B	20		73-21-11	ALL
	17		W5100	2502R	20		73-21-11	ALL
	18	UNUSED						ALL
	19		W5100	1003	20		SPARE	001-099
	19	UNUSED						115-199
	20		W5100	2510B	20		SPARE	001-099
	20	UNUSED						115-199
	21		W5100	2510R	20		SPARE	001-099
	21	UNUSED						115-199
	22		W5100	2510Z			SPARE	001-099
	22	UNUSED						115-199
	23		W5100	2511B	20		SPARE	001-099
	23	UNUSED						115-199
	24		W5100	2511R	20		SPARE	001-099
	24	UNUSED						115-199
	25		W5100	2511Z			SPARE	001-099
	25	UNUSED						115-199
	26		W5100	0096	20		SPARE	001-099
	26	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 35

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42280J		AW1285/ /		RECPT (continued)				001-099
D42280J		AW1285/ /		RECPT- (continued)				115-199
	27		W5100	0097	20		SPARE	001-099
	27	UNUSED						115-199
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W5100	FRAD			73-21-11	ALL
	31		W5100	2503B	20		73-21-11	ALL
	32		W5100	2503R	20		73-21-11	ALL
	33		W5100	4501G	20		75-31-11	ALL
	34		W5100	4501W	20		75-31-11	ALL
	35		W5100	4502G	20		77-21-11	ALL
	36		W5100	4502W	20		77-21-11	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	S/R		W5100	1003Z			SPARE	001-099
	S/R		W5100	3504Z			SPARE	001-099
	S/R		W5100	1002Z			76-11-11	ALL
	S/R		W5100	1007Z			28-22-21	ALL
	S/R		W5100	4501Z			75-31-11	ALL
	S/R		W5100	4502Z			77-21-11	ALL
	S/R		W5100	1008Z			28-41-21	115-199
	S/R		W5100	2505Z			SPARE	115-199
	S/R		W5100	2506Z			SPARE	115-199
			W5100	2501Z			73-21-11	ALL
			W5100	2502Z			73-21-11	ALL
			W5100	2503Z			73-21-11	ALL
			W5100	FRAD			73-21-11	ALL
D42280P		AW1285/ /		PLUG				ALL
	1		W3300	1002	20		76-11-11	ALL
	2		W3300	3504B	20		SPARE	001-099
	2		W3300	2510B	20		SPARE	115-199
	3		W3300	3504R	20		SPARE	001-099
	3		W3300	2510R	20		SPARE	115-199
	4		W3300	3504Y	20		SPARE	001-099
	4		W3300	2506B	20		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 36

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42280P		AW1285/ /		PLUG (continued)				ALL
	5		W3300	2510B	20		73-21-11	001-099
	5		W3300	2501B	20		73-21-11	115-199
	6		W3300	0066	20		SPARE	001-099
	6		W3300	2506R	20		SPARE	115-199
	7		W3300	0067	20		29-11-12	ALL
	8		W3300	0072	20		29-11-12	ALL
	9		W3300	1007	18		28-22-21	ALL
	10		W3300	0085	20		29-22-11	ALL
	11		W3300	0080	20		29-11-12	ALL
	12		W3300	1008	20		SPARE	001-099
	12		W3300	1008	20		28-41-21	115-199
	13	UNUSED						ALL
	14	UNUSED						ALL
	15		W3300	2510R	20		73-21-11	001-099
	15		W3300	2501R	20		73-21-11	115-199
	16		W3300	2502B	20		73-21-11	ALL
	17		W3300	2502R	20		73-21-11	ALL
	18	UNUSED						ALL
	19		W3300	1006	20		SPARE	001-099
	19	UNUSED						115-199
	20		W3300	2511B	20		SPARE	001-099
	20	UNUSED						115-199
	21		W3300	2511R	20		SPARE	001-099
	21	UNUSED						115-199
	22		W3300	2511Z			SPARE	001-099
	22	UNUSED						115-199
	23		W3300	2512B	20		SPARE	001-099
	23	UNUSED						115-199
	24		W3300	2512R	20		SPARE	001-099
	24	UNUSED						115-199
	25		W3300	2512Z			SPARE	001-099
	25	UNUSED						115-199
	26		W3300	0095	20		SPARE	001-099
	26	UNUSED						115-199
	27		W3300	0094	20		SPARE	001-099
	27	UNUSED						115-199
	28	UNUSED						ALL
	29	UNUSED						ALL
	30		W3300	FRAD			73-21-11	ALL
	31		W3300	2503B	20		73-21-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 37

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42280P		AW1285/ /		PLUG (continued)				ALL
	32		W3300	2503R	20		73-21-11	ALL
	33	4H	W3300	4501G	20		75-31-11	ALL
	34	4L	W3300	4501W	20		75-31-11	ALL
	35	4H	W3300	4502G	20		77-21-11	ALL
	36	4L	W3300	4502W	20		77-21-11	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	S/R		W3300	1006Z			SPARE	001-099
	S/R		W3300	1008Z			SPARE	001-099
	S/R		W3300	3504Z			SPARE	001-099
	S/R		W3300	1002Z			76-11-11	ALL
	S/R		W3300	1007Z			28-22-21	ALL
	S/R		W3300	4501Z			75-31-11	ALL
	S/R		W3300	4502Z			77-21-11	ALL
	S/R		W3300	1008Z			28-41-21	115-199
	S/R		W3300	2506Z			SPARE	115-199
	S/R		W3300	2510Z			SPARE	115-199
			W3300	2510Z			73-21-11	001-099
			W3300	2502Z			73-21-11	ALL
			W3300	2503Z			73-21-11	ALL
			W3300	FRAD			73-21-11	ALL
			W3300	2501Z			73-21-11	115-199
D42282J		AW1285/ /		RECPT-				ALL
	1		W5100	0005	20		29-11-11	ALL
	2		W5100	0002	18		26-13-11	ALL
	3		W5100	3503B	20		76-11-11	ALL
	4		W5100	0011R	20		26-11-11	ALL
	5		W5100	0003	18		26-13-11	ALL
	6		W5100	0013R	20		26-11-11	ALL
	7		W5100	3503R	20		76-11-11	ALL
	8		W5100	0012R	20		26-11-11	ALL
	9		W5100	3503Y	20		76-11-11	ALL
	10		W5100	0061	20		29-11-11	ALL
	11		W5100	0057	20		SPARE	ALL
	12		W5100	0058	20		SPARE	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 38

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42282J		AW1285/ /		RECPT- (continued)				ALL
	13		W5100	0062	20		29-11-11	ALL
	14		W5100	0059	18		26-18-11	ALL
	15		W5100	2504B	18		75-31-11	ALL
	16		W5100	1001	18		73-21-11	ALL
	17		W5100	2504R	18		75-31-11	ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W5100	0036	20		29-22-11	ALL
	24		W5100	0037	20		29-22-11	ALL
	25		W5100	0038	20		29-22-11	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	S/R		W5100	1001Z			73-21-11	ALL
	S/R		W5100	2504Z			75-31-11	ALL
	S/R		W5100	3503Z			76-11-11	ALL
D42282P		AW1285/ /		PLUG				ALL
	1		W3300	0005	20		29-11-11	ALL
	2		W3300	0002	18		26-13-11	ALL
	3		W3300	2504B	20		76-11-11	001-099
	3		W3300	2505B	20		76-11-11	115-199
	4		W3300	0011R	20		26-11-11	ALL
	5		W3300	0003	18		26-13-11	ALL
	6		W3300	0013R	20		26-11-11	ALL
	7		W3300	2504R	20		76-11-11	001-099
	7		W3300	2505R	20		76-11-11	115-199
	8		W3300	0012R	20		26-11-11	ALL
	9		W3300	1003	20		76-11-11	ALL
	10		W3300	0061	20		29-11-11	ALL
	11		W3300	0057	20		SPARE	ALL
	12		W3300	0058	20		SPARE	ALL
	13		W3300	0062	20		29-11-11	ALL
	14		W3300	0059	18		26-18-11	ALL
	15		W3300	2501B	16		75-31-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 39

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42282P		AW1285/ /		PLUG (continued)				ALL
	15		W3300	2504B	16		75-31-11	115-199
	16		W3300	1001	18		73-21-11	ALL
	17		W3300	2501R	16		75-31-11	001-099
	17		W3300	2504R	16		75-31-11	115-199
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23		W3300	0014	20		29-22-11	ALL
	24		W3300	0015	20		29-22-11	ALL
	25		W3300	0016	20		29-22-11	ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	S/R		W3300	2501Z			75-31-11	001-099
	S/R		W3300	2504Z			76-11-11	001-099
	S/R		W3300	1001Z			73-21-11	ALL
	S/R		W3300	1003Z			76-11-11	ALL
	S/R		W3300	2504Z			75-31-11	115-199
	S/R		W3300	2505Z			76-11-11	115-199
D42284J		AW2285/ /		PLUG				001-099
D42284J		AW2285/ /		RECPT-				115-199
	1		W5204	2504B	20		75-31-11	ALL
	2		W5204	2507B	18		73-21-21	001-099
	2		W5204	2506B	18		73-21-21	115-199
	3		W5204	1004	20		77-11-11	ALL
	4		W5204	5001B	20		77-11-11	ALL
	5		W5204	5001R	20		77-11-11	ALL
	6		W5204	2002R	18		22-33-11	ALL
	7		W5204	2503R	18		73-21-22	ALL
	8		W5204	2503B	18		73-21-22	ALL
	9		W5204	0029	20		77-31-11	ALL
	10		W5204	0029	20		77-31-11	ALL
	11		W5204	0028	20		77-31-11	ALL
	12	UNUSED						001-099
	12		W5204	2502B	20		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 40

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42284J		AW2285/ /		PLUG (continued)				001-099
D42284J		AW2285/ /		RECPT- (continued)				115-199
	13		W5204	2504R	20		75-31-11	ALL
	14		W5204	2001B	18		22-33-11	ALL
	15	UNUSED						001-099
	15		W5204	0010	20		SPARE	115-199
	16		W5204	2001R	18		22-33-11	ALL
	17		W5204	2508B	20		SPARE	001-099
	17	UNUSED						115-199
	18		W5204	2508R	20		SPARE	001-099
	18		W5204	2502R	20		SPARE	115-199
	19		W5204	2509B	20		SPARE	001-099
	19		W5204	2507B	20		SPARE	115-199
	20		W5204	2509R	20		SPARE	001-099
	20		W5204	2507R	20		SPARE	115-199
	21	UNUSED						ALL
	22		W5204	0030	20		77-31-11	ALL
	23		W5204	4501Z			77-31-11	ALL
	24		W5204	4502Z			77-31-11	ALL
	25		W5204	4501W	20		77-31-11	ALL
	26		W5204	0028	20		77-31-11	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W5204	2501R	20		77-12-31	ALL
	30		W5204	2501B	20		77-12-31	ALL
	31		W5204	2505B	18		75-31-11	ALL
	32	UNUSED						ALL
	33		W5204	2505R	18		75-31-11	ALL
	34		W5204	2507R	18		73-21-21	001-099
	34		W5204	2506R	18		73-21-21	115-199
	35		W5204	2002B	18		22-33-11	ALL
	36		W5204	5002R	20		77-11-11	ALL
	37		W5204	5002B	20		77-11-11	ALL
	38	UNUSED						ALL
	39		W5204	0030	20		77-31-11	ALL
	40		W5204	4501R	20		77-31-11	ALL
	41		W5204	4502W	20		77-31-11	ALL
	42		W5204	4502R	20		77-31-11	ALL
	S/R		W5204	2507Z			73-21-21	001-099
	S/R		W5204	2508Z			SPARE	001-099
	S/R		W5204	2509Z			SPARE	001-099

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 41

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42284J		AW2285/ /		PLUG (continued)				001-099
D42284J		AW2285/ /		RECPT- (continued)				115-199
	S/R		W5204	1004Z			77-11-11	ALL
	S/R		W5204	2501Z			77-12-31	ALL
	S/R		W5204	2503Z			73-21-22	ALL
	S/R		W5204	2504Z			75-31-11	ALL
	S/R		W5204	2505Z			75-31-11	ALL
	S/R		W5204	5001Z			77-11-11	ALL
	S/R		W5204	5002Z			77-11-11	ALL
	S/R		W5204	2502Z			SPARE	115-199
	S/R		W5204	2506Z			73-21-21	115-199
	S/R		W5204	2507Z			SPARE	115-199
D42284P		AW2285/ /		PLUG-				ALL
	1		W3404	2504B	20		75-31-11	ALL
	2		W3404	2507B	18		73-21-21	001-099
	2		W3404	2506B	18		73-21-21	115-199
	3		W3404	1003	20		77-11-11	ALL
	4		W3404	5001B	20		77-11-11	ALL
	5		W3404	5001R	20		77-11-11	ALL
	6		W3404	2002R	18		22-33-11	ALL
	7		W3404	2503R	18		73-21-22	ALL
	8		W3404	2503B	18		73-21-22	ALL
	9		W3404	0006	20		77-31-11	ALL
	10		W3404	0006	20		77-31-11	ALL
	11		W3404	0005	20		77-31-11	ALL
	12	UNUSED						001-099
	12		W3404	2502B	20		SPARE	115-199
	13		W3404	2504R	20		75-31-11	ALL
	14		W3404	2001B	18		22-33-11	ALL
	15	UNUSED						001-099
	15		W3404	0010	20		SPARE	115-199
	16		W3404	2001R	18		22-33-11	ALL
	17		W3404	2506B	20		SPARE	001-099
	17	UNUSED						115-199
	18		W3404	2506R	20		SPARE	001-099
	18		W3404	2502R	20		SPARE	115-199
	19		W3404	2502B	20		SPARE	001-099
	19		W3404	2507B	20		SPARE	115-199
	20		W3404	2502R	20		SPARE	001-099
	20		W3404	2507R	20		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 42

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42284P		AW2285/ /		PLUG- (continued)				ALL
	21	UNUSED						ALL
	22		W3404	0007	20		77-31-11	ALL
	23		W3404	4501Z			77-31-11	ALL
	24		W3404	4502Z			77-31-11	ALL
	25		W3404	4501W	20		77-31-11	ALL
	26		W3404	0005	20		77-31-11	ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29		W3404	2501R	20		77-12-31	ALL
	30		W3404	2501B	20		77-12-31	ALL
	31		W3404	2505B	16		75-31-11	ALL
	32	UNUSED						ALL
	33		W3404	2505R	16		75-31-11	ALL
	34		W3404	2507R	18		73-21-21	001-099
	34		W3404	2506R	18		73-21-21	115-199
	35		W3404	2002B	18		22-33-11	ALL
	36		W3404	5002R	20		77-11-11	ALL
	37		W3404	5002B	20		77-11-11	ALL
	38	UNUSED						ALL
	39		W3404	0007	20		77-31-11	ALL
	40		W3404	4501R	20		77-31-11	ALL
	41		W3404	4502W	20		77-31-11	ALL
	42		W3404	4502R	20		77-31-11	ALL
	S/R		W3404	2506Z			SPARE	001-099
	S/R		W3404	2507Z			73-21-21	001-099
	S/R		W3404	1003Z			77-11-11	ALL
	S/R		W3404	2501Z			77-12-31	ALL
	S/R		W3404	2502Z			SPARE	ALL
	S/R		W3404	2503Z			73-21-22	ALL
	S/R		W3404	2504Z			75-31-11	ALL
	S/R		W3404	2505Z			75-31-11	ALL
	S/R		W3404	5001Z			77-11-11	ALL
	S/R		W3404	5002Z			77-11-11	ALL
	S/R		W3404	2506Z			73-21-21	115-199
	S/R		W3404	2507Z			SPARE	115-199
D42288J		AW2285/ /		RCPT				ALL
	1		W3402	2504B	20		SPARE	001-099
	1		W3402	0035	20		SPARE	115-199
	2		W3402	2504R	20		SPARE	001-099

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 43

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42288J		AW2285/ /		RCPT (continued)				ALL
	2		W3402	2505B	20		SPARE	115-199
	3	UNUSED						001-099
	3		W3402	2505R	20		SPARE	115-199
	4		W3402	2504Z			SPARE	001-099
	4		W3402	2505Z			SPARE	115-199
	5		W3402	2502R	20		79-34-11	ALL
	6		W3402	2502B	20		79-34-11	ALL
	7	UNUSED						ALL
	8		W3402	0004	18		26-18-21	ALL
	9	UNUSED						ALL
	10		W3402	0006	18		29-32-21	ALL
	11		W3402	3502B	20		30-21-11	ALL
	12		W3402	3502R	20		30-21-11	ALL
	13		W3402	3502Y	20		30-21-11	ALL
	14		W3402	3503R	20		73-31-11	ALL
	15		W3402	3503B	20		73-31-11	ALL
	16		W3402	3503Y	20		73-31-11	ALL
	17		W3402	2503B	20		74-31-21	ALL
	18		W3402	2503R	20		74-31-21	ALL
	19		W3402	1002	20		76-11-21	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W3402	3504Y	20		79-31-11	ALL
	26		W3402	3504B	20		79-31-11	ALL
	27		W3402	3504R	20		79-31-11	ALL
	28		W3402	3505B	20		79-32-11	ALL
	29		W3402	3505R	20		79-32-11	ALL
	30		W3402	3505Y	20		79-32-11	ALL
	31		W3402	2501B	20		79-34-11	ALL
	32		W3402	2501R	20		79-34-11	ALL
	33	UNUSED						001-002, 115-199
	33		W3402	0036	20		78-36-21	003-099
	34		W3402	0017	20		78-36-21	ALL
	35		W3402	0018	20		78-36-21	ALL
	36		W3402	0020	20		76-11-12	ALL
	37		W3402	0021	20		76-11-12	ALL
	38	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 44

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42288J		AW2285/ /		RCPT (continued)				ALL
	39	UNUSED						ALL
	40		W3402	3506B	20		SPARE	ALL
	41		W3402	3506R	20		SPARE	ALL
	42		W3402	3506Y	20		SPARE	ALL
	S/R		W3402	1002Z			76-11-21	ALL
	S/R		W3402	2501Z			79-34-11	ALL
	S/R		W3402	2502Z			79-34-11	ALL
	S/R		W3402	2503Z			74-31-21	ALL
	S/R		W3402	3502Z			30-21-11	ALL
	S/R		W3402	3503Z			73-31-11	ALL
	S/R		W3402	3504Z			79-31-11	ALL
	S/R		W3402	3505Z			79-32-11	ALL
	S/R		W3402	3506Z			SPARE	ALL
D42288P		AW2285/ /		PLUG				ALL
	1		W5202	2504B	20		SPARE	001-099
	1		W5202	0035	20		SPARE	115-199
	2		W5202	2504R	20		SPARE	001-099
	2		W5202	2505B	20		SPARE	115-199
	3	UNUSED						001-099
	3		W5202	2505R	20		SPARE	115-199
	4		W5202	2504Z			SPARE	001-099
	4		W5202	2505Z			SPARE	115-199
	5		W5202	2502R	20		79-34-11	ALL
	6		W5202	2502B	20		79-34-11	ALL
	7	UNUSED						ALL
	8		W5202	0004	18		26-18-21	ALL
	9	UNUSED						ALL
	10		W5202	0006	18		29-32-21	ALL
	11		W5202	3502B	20		30-21-11	ALL
	12		W5202	3502R	20		30-21-11	ALL
	13		W5202	3502Y	20		30-21-11	ALL
	14		W5202	3503R	20		73-31-11	ALL
	15		W5202	3503B	20		73-31-11	ALL
	16		W5202	3503Y	20		73-31-11	ALL
	17		W5202	2503B	20		74-31-21	ALL
	18		W5202	2503R	20		74-31-21	ALL
	19		W5202	1001	20		76-11-21	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 45

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42288P		AW2285/ /		PLUG (continued)				ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25		W5202	3504Y	20		79-31-11	ALL
	26		W5202	3504B	20		79-31-11	ALL
	27		W5202	3504R	20		79-31-11	ALL
	28		W5202	3505B	20		79-32-11	ALL
	29		W5202	3505R	20		79-32-11	ALL
	30		W5202	3505Y	20		79-32-11	ALL
	31		W5202	2501B	20		79-34-11	ALL
	32		W5202	2501R	20		79-34-11	ALL
	33	UNUSED						001-002, 115-199
	33		W5202	0036	20		78-36-21	003-099
	34		W5202	0017	20		78-36-21	ALL
	35		W5202	0018	20		78-36-21	ALL
	36		W5202	0020	20		76-11-12	ALL
	37		W5202	0021	20		76-11-12	ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40		W5202	3506B	20		SPARE	ALL
	41		W5202	3506R	20		SPARE	ALL
	42		W5202	3506Y	20		SPARE	ALL
	S/R		W5202	1001Z			76-11-21	ALL
	S/R		W5202	2501Z			79-34-11	ALL
	S/R		W5202	2502Z			79-34-11	ALL
	S/R		W5202	2503Z			74-31-21	ALL
	S/R		W5202	3502Z			30-21-11	ALL
	S/R		W5202	3503Z			73-31-11	ALL
	S/R		W5202	3504Z			79-31-11	ALL
	S/R		W5202	3505Z			79-32-11	ALL
	S/R		W5202	3506Z			SPARE	ALL
D42290J		AW2285/ /		RCPT				ALL
	1		W3480	4251R	20		73-33-11	ALL
	2		W3480	2503B	20		74-31-21	ALL
	3		W3480	2503R	20		74-31-21	ALL
	4		W3480	2501R	20		77-12-11	ALL
	5		W3480	2501B	20		77-12-11	ALL
	6	UNUSED						ALL
	7		W3480	2502R	20		77-12-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 46

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42290J		AW2285/ /		RCPT (continued)				ALL
	8		W3480	2502B	20		77-12-21	ALL
	9	UNUSED						ALL
	10		W3480	4251G	20		79-33-11	ALL
	11		W3480	4251B	20		79-35-11	ALL
	12		W3480	3501B	20		80-11-21	ALL
	13		W3480	3501R	20		80-11-21	ALL
	14		W3480	3501Y	20		80-11-21	ALL
	15		W3480	1001	20		74-31-21	ALL
	16		W3480	0012	20		SPARE	ALL
	17		W3480	2504B	20		SPARE	ALL
	18		W3480	2504R	20		SPARE	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W3480	4251Y	20		73-34-11	ALL
	22	4H	W3480	4501G	20		77-21-11	ALL
	23	4L	W3480	4501W	20		77-21-11	ALL
	24	UNUSED						ALL
	25		W3480	0018R	20		26-11-21	ALL
	26	UNUSED						ALL
	27		W3480	0020R	20		26-11-21	ALL
	28		W3480	0021	18		26-13-21	ALL
	29	UNUSED						ALL
	30		W3480	2505B	20		SPARE	ALL
	31		W3480	2505R	20		SPARE	ALL
	32		W3480	0027	20		78-34-21	ALL
	33		W3480	0019R	20		26-11-21	ALL
	34		W3480	0022	18		26-13-21	ALL
	35		W3480	2506B	18		30-34-22	ALL
	36		W3480	2506R	18		30-34-22	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	S/R		W3480	1001Z			74-31-21	ALL
	S/R		W3480	2501Z			77-12-11	ALL
	S/R		W3480	2502Z			77-12-21	ALL
	S/R		W3480	2503Z			74-31-21	ALL
	S/R		W3480	2504Z			SPARE	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 47

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42290J		AW2285/ /		RCPT (continued)				ALL
	S/R		W3480	2505Z			SPARE	ALL
	S/R		W3480	2506Z			30-34-22	ALL
	S/R		W3480	3501Z			80-11-21	ALL
	S/R		W3480	4251Z			79-35-11	ALL
	S/R		W3480	4501Z			77-21-11	ALL
D42290P		AW2285/ /		PLUG				ALL
	1		W5208	4251R	20		73-33-11	ALL
	2		W5208	2503B	20		74-31-21	ALL
	3		W5208	2503R	20		74-31-21	ALL
	4		W5208	2501R	20		77-12-11	ALL
	5		W5208	2501B	20		77-12-11	ALL
	6	UNUSED						ALL
	7		W5208	2502R	20		77-12-21	ALL
	8		W5208	2502B	20		77-12-21	ALL
	9	UNUSED						ALL
	10		W5208	4251G	20		79-33-11	ALL
	11		W5208	4251B	20		79-35-11	ALL
	12		W5208	3501B	20		80-11-21	ALL
	13		W5208	3501R	20		80-11-21	ALL
	14		W5208	3501Y	20		80-11-21	ALL
	15		W5208	1004	20		74-31-21	ALL
	16		W5208	0012	20		SPARE	ALL
	17		W5208	2504B	20		SPARE	ALL
	18		W5208	2504R	20		SPARE	ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21		W5208	4251Y	20		73-34-11	ALL
	22		W5208	4501G	20		77-21-11	ALL
	23		W5208	4501W	20		77-21-11	ALL
	24	UNUSED						ALL
	25		W5208	0018R	20		26-11-21	ALL
	26	UNUSED						ALL
	27		W5208	0020R	20		26-11-21	ALL
	28		W5208	0021	18		26-13-21	ALL
	29	UNUSED						ALL
	30		W5208	2505B	20		SPARE	ALL
	31		W5208	2505R	20		SPARE	ALL
	32		W5208	1001	20		78-34-21	ALL
	33		W5208	0019R	20		26-11-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 48

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42290P		AW2285/ /		PLUG (continued)				ALL
	34		W5208	0022	18		26-13-21	ALL
	35		W5208	2506B	18		30-34-22	ALL
	36		W5208	2506R	18		30-34-22	ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	S/R		W5208	1001Z			78-34-21	ALL
	S/R		W5208	1004Z			74-31-21	ALL
	S/R		W5208	2501Z			77-12-11	ALL
	S/R		W5208	2502Z			77-12-21	ALL
	S/R		W5208	2503Z			74-31-21	ALL
	S/R		W5208	2504Z			SPARE	ALL
	S/R		W5208	2505Z			SPARE	ALL
	S/R		W5208	2506Z			30-34-22	ALL
	S/R		W5208	3501Z			80-11-21	ALL
	S/R		W5208	4251Z			79-35-11	ALL
	S/R		W5208	4501Z			77-21-11	ALL
D42292J		AW2285/ /		RECPT-				ALL
	1		W5200	4252G	20		76-11-12	ALL
	2		W5200	4252R	20		76-11-12	ALL
	3		W5200	4252Y	20		76-11-12	ALL
	4		W5200	0043	20		29-11-21	ALL
	5		W5200	0044	20		29-11-21	ALL
	6		W5200	0062	20		SPARE	ALL
	7		W5200	0064	20		SPARE	ALL
	8		W5200	0068	20		29-11-22	ALL
	9		W5200	0073	20		29-11-22	ALL
	10	UNUSED						ALL
	11		W5200	1007	18		28-22-21	ALL
	12		W5200	0083	20		29-11-22	ALL
	13		W5200	2501R	20		73-21-21	ALL
	14		W5200	2501B	20		73-21-21	ALL
	15		W5200	2503B	20		73-21-21	ALL
	16		W5200	4501W	20		75-31-11	ALL
	17		W5200	4501G	20		75-31-11	ALL
	18	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 49

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42292J		AW2285/ /		RECPT- (continued)				ALL
	19		W5200	4252B	20		76-11-12	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26		W5200	0038	18		26-18-21	ALL
	27	UNUSED						ALL
	28		W5200	2502B	20		73-21-21	ALL
	29		W5200	2502R	20		73-21-21	ALL
	30		W5200	2503R	20		73-21-21	ALL
	31		W5200	FRAD			73-21-21	ALL
	32	UNUSED						ALL
	33		W5200	4502G	20		77-21-11	ALL
	34		W5200	4502W	20		77-21-11	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38	UNUSED						ALL
	39	UNUSED						ALL
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						ALL
	S/R		W5200	1007Z			28-22-21	ALL
	S/R		W5200	4252Z			76-11-12	ALL
	S/R		W5200	4501Z			75-31-11	ALL
	S/R		W5200	4502Z			77-21-11	ALL
			W5200	2501Z			73-21-21	ALL
			W5200	2502Z			73-21-21	ALL
			W5200	2503Z			73-21-21	ALL
			W5200	FRAD			73-21-21	ALL
D42292P		AW2285/ /		PLUG-				ALL
	1		W3400	3503B	20		76-11-12	ALL
	2		W3400	3503R	20		76-11-12	ALL
	3		W3400	3503Y	20		76-11-12	ALL
	4		W3400	0043	20		29-11-21	ALL
	5		W3400	0044	20		29-11-21	ALL
	6		W3400	0062	20		SPARE	ALL

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 50

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42292P		AW2285/ /		PLUG- (continued)				ALL
	7		W3400	0064	20		SPARE	ALL
	8		W3400	0068	20		29-11-22	ALL
	9		W3400	0073	20		29-11-22	ALL
	10	UNUSED						ALL
	11		W3400	1007	18		28-22-21	ALL
	12		W3400	0083	20		29-11-22	ALL
	13		W3400	2501R	20		73-21-21	ALL
	14		W3400	2501B	20		73-21-21	ALL
	15		W3400	2503B	20		73-21-21	ALL
	16	4L	W3400	4501W	20		75-31-11	ALL
	17	4H	W3400	4501G	20		75-31-11	ALL
	18		W3400	1005	20		SPARE	001-099
	18	UNUSED						115-199
	19		W3400	1003	20		76-11-12	001-099
	19		W3400	1004	20		76-11-12	115-199
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26		W3400	0038	18		26-18-21	ALL
	27	UNUSED						ALL
	28		W3400	2502B	20		73-21-21	ALL
	29		W3400	2502R	20		73-21-21	ALL
	30		W3400	2503R	20		73-21-21	ALL
	31		W3400	FRAD			73-21-21	001-099
	31		W3400	FRAA			73-21-21	115-199
	32	UNUSED						ALL
	33	4H	W3400	4502G	20		77-21-11	ALL
	34	4L	W3400	4502W	20		77-21-11	ALL
	35	UNUSED						ALL
	36	UNUSED						ALL
	37	UNUSED						ALL
	38		W3400	2509B	20		SPARE	001-099
	38	UNUSED						115-199
	39		W3400	2509R	20		SPARE	001-099
	39	UNUSED						115-199
	40		W3400	2510B	20		SPARE	001-099
	40	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 51

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42292P		AW2285/ /		PLUG- (continued)				ALL
	41		W3400	2510R	20		SPARE	001-099
	41	UNUSED						115-199
	42	UNUSED						ALL
	S/R		W3400	1003Z			76-11-12	001-099
	S/R		W3400	1005Z			SPARE	001-099
	S/R		W3400	2509Z			SPARE	001-099
	S/R		W3400	2510Z			SPARE	001-099
	S/R		W3400	1007Z			28-22-21	ALL
	S/R		W3400	3503Z			76-11-12	ALL
	S/R		W3400	4501Z			75-31-11	ALL
	S/R		W3400	4502Z			77-21-11	ALL
	S/R		W3400	1004Z			76-11-12	115-199
			W3400	FRAD			73-21-21	001-099
			W3400	2501Z			73-21-21	ALL
			W3400	2502Z			73-21-21	ALL
			W3400	2503Z			73-21-21	ALL
			W3400	FRAA			73-21-21	115-199
D42294J		AW2285/ /		RECPT-				ALL
	1		W5200	2505B	20		SPARE	ALL
	2		W5200	2505R	20		SPARE	ALL
	3		W5200	2506B	20		SPARE	ALL
	4		W5200	0040R	20		26-11-21	ALL
	5		W5200	2506R	20		SPARE	ALL
	6		W5200	0042R	20		26-11-21	ALL
	7		W5200	0047	20		29-11-21	ALL
	8		W5200	0052	18		26-13-21	ALL
	9		W5200	1003	18		73-21-21	ALL
	10	UNUSED						ALL
	11		W5200	2504B	18		75-31-11	ALL
	12		W5200	0053	18		26-13-21	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W5200	2504R	18		75-31-11	ALL
	18	UNUSED						ALL
	19		W5200	0041R	20		26-11-21	ALL
	20	UNUSED						ALL
	21	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 52

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42294J		AW2285/ /		RECPT- (continued)				ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	S/R		W5200	1003Z			73-21-21	ALL
	S/R		W5200	2504Z			75-31-11	ALL
	S/R		W5200	2505Z			SPARE	ALL
	S/R		W5200	2506Z			SPARE	ALL
D42294P		AW2285/ /		PLUG-				ALL
	1		W3400	3504B	20		SPARE	001-099
	1		W3400	2505B	20		SPARE	115-199
	2		W3400	3504R	20		SPARE	001-099
	2		W3400	2505R	20		SPARE	115-199
	3		W3400	3504Y	20		SPARE	001-099
	3		W3400	2506B	20		SPARE	115-199
	4		W3400	0040R	20		26-11-21	ALL
	5		W3400	0067	20		SPARE	001-099
	5		W3400	2506R	20		SPARE	115-199
	6		W3400	0042R	20		26-11-21	ALL
	7		W3400	0047	20		29-11-21	ALL
	8		W3400	0052	18		26-13-21	ALL
	9		W3400	1001	18		73-21-21	001-099
	9		W3400	1006	18		73-21-21	115-199
	10	UNUSED						ALL
	11		W3400	2504B	16		75-31-11	ALL
	12		W3400	0053	18		26-13-21	ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17		W3400	2504R	16		75-31-11	ALL
	18	UNUSED						ALL
	19		W3400	0041R	20		26-11-21	ALL
	20	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 53

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42294P		AW2285/ /		PLUG- (continued)				ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						ALL
	26	UNUSED						ALL
	27	UNUSED						ALL
	28	UNUSED						ALL
	29	UNUSED						ALL
	30	UNUSED						ALL
	S/R		W3400	1001Z			73-21-21	001-099
	S/R		W3400	3504Z			SPARE	001-099
	S/R		W3400	2504Z			75-31-11	ALL
	S/R		W3400	1006Z			73-21-21	115-199
	S/R		W3400	2505Z			SPARE	115-199
	S/R		W3400	2506Z			SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section D42200

Page 54 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42368J		E5-1/ /		RCPT				001-099
	1		W1282	0258	22		24-22-41	001-099
	2		W1282	0259	24		24-22-41	001-099
	3		W1282	0260	24		24-22-41	001-003
	3	UNUSED						004-099
	4		W1282	0261	24		24-22-41	001-003
	4	UNUSED						004-099
	5		W1282	0262	24		24-22-41	001-099
	6		W1282	0264	24		24-22-41	001-099
	7	UNUSED						001-099
	8	UNUSED						001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
D42368P		E005-01/ /		PLUG				001-099
	1		W2080	0001	20		24-22-41	001-099
	2		W2080	0002	24		24-22-41	001-099
	3		W2080	0004	24		24-22-41	001-003
	3	UNUSED						004-099
	4		W2080	0003	24		24-22-41	001-003
	4	UNUSED						004-099
	5		W2080	0008	24		24-22-41	001-099
	6		W2080	0007	24		24-22-41	001-099
	7	UNUSED						001-099
	8	UNUSED						001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D42300

Page 1 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42412J		E5-2/ /		RCPT				001-099
	1		W1284	0187	22		32-42-12	001-099
	2		W1284	0186	22		32-42-12	001-099
	3		W1284	0185	22		32-42-12	001-099
	4		W1284	0192	22		32-42-12	001-099
	5		W1284	0193	22		32-42-12	001-099
	6		W1284	0142	24		21-31-21	001-099
	7	UNUSED						001-099
	8	UNUSED						001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
D42412P		E5-2/ /		PLUG				001-099
	1		W2357	0023	22		32-42-12	001-099
	2		W2357	0030	22		32-42-12	001-099
	3		W2357	0024	22		32-42-12	001-099
	4		W2357	0025	22		32-42-12	001-099
	5		W2357	0028	22		32-42-12	001-099
	6		W2357	0109	24		21-31-21	001-099
	7	UNUSED						001-099
	8	UNUSED						001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
D42414J		E5-2/ /		RCPT				001-099
	1		W1284	0191	22		32-42-12	001-099
	2		W1284	0190	22		32-42-12	001-099
	3		W1284	0188	22		32-42-12	001-099
	4	UNUSED						001-099
	5	UNUSED						001-099
	6	UNUSED						001-099
	7	UNUSED						001-099
	8	UNUSED						001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D42400

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42414P		E5-2/ /		PLUG				001-099
	1		W2355	0092	22		32-42-12	001-099
	2		W2355	0093	22		32-42-12	001-099
	3		W2355	0094	22		32-42-12	001-099
	4	UNUSED						001-099
	5	UNUSED						001-099
	6	UNUSED						001-099
	7	UNUSED						001-099
	8	UNUSED						001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D42400

Page 2 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42510J		E5-2/ /		RCPT				001-099
	1		W1284	2512B	22		32-42-11	001-099
	2		W1284	2512R	22		32-42-11	001-099
	3		W1284	2515B	22		32-42-11	001-099
	4		W1284	2515R	22		32-42-11	001-099
	5		W1284	FRAJ			32-42-11	001-099
	6		W1284	FRAK			32-42-11	001-099
	7		W1284	0123	22		32-42-12	001-099
	8		W1284	0124	22		32-42-12	001-099
	9		W1284	0326	22		32-42-11	001-099
	10		W1284	0325	22		32-42-11	001-099
	11		W1284	0328	22		32-42-11	001-099
	12		W1284	0329	22		32-42-11	001-099
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
			W1284	0337	20		32-42-11	001-099
			W1284	0338	20		32-42-11	001-099
			W1284	2512Z			32-42-11	001-099
			W1284	2515Z			32-42-11	001-099
			W1284	FRAJ			32-42-11	001-099
			W1284	FRAK			32-42-11	001-099
D42510P		E005-02/ /		PLUG				001-099
	1		W2644	2501B	20		32-42-11	001-099
	2		W2644	2501R	20		32-42-11	001-099
	3		W2644	2502B	20		32-42-11	001-099
	4		W2644	2502R	20		32-42-11	001-099
	5		W2644	2501Z			32-42-11	001-099
	6		W2644	2502Z			32-42-11	001-099
	7		W2644	0002	20		32-42-12	001-099
	8		W2644	0003	20		32-42-12	001-099
	9		W2644	0005	20		32-42-11	001-099
	10		W2644	0001	20		32-42-11	001-099
	11		W2644	0004	20		32-42-11	001-099
	12		W2644	0006	20		32-42-11	001-099
	13		W2644	0009	20		SPARE	001-099
	14		W2644	0027	20		SPARE	001-099
	15	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D42500

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42512J		E5-2/ /		RCPT				001-099
	1		W1284	0327	22		32-42-11	001-099
	2		W1284	0330	22		32-42-11	001-099
	3	UNUSED						001-099
	4	UNUSED						001-099
	5	UNUSED						001-099
D42512P		E005-02/ /		PLUG				001-099
	1		W2644	0008	20		32-42-11	001-099
	2		W2644	0007	20		32-42-11	001-099
	3	UNUSED						001-099
	4		W2644	0028	20		SPARE	001-099
	5		W2644	0029	20		SPARE	001-099
D42514J		E5-2/ /		RCPT				001-099
	1		W1284	0331	22		32-42-11	001-099
	2		W1284	0334	22		32-42-11	001-099
	3	UNUSED						001-099
	4	UNUSED						001-099
	5	UNUSED						001-099
D42514P		E5-2/ /		PLUG				001-099
	1		W2646	0004	20		32-42-11	001-099
	2		W2646	0001	20		32-42-11	001-099
	3	UNUSED						001-099
	4	UNUSED						001-099
	5	UNUSED						001-099
D42516J		E5-2/ /		RCPT				001-099
	1		W1284	2520B	22		32-42-11	001-099
	2		W1284	2520R	22		32-42-11	001-099
	3		W1284	2521B	22		32-42-11	001-099
	4		W1284	2521R	22		32-42-11	001-099
	5		W1284	FRAQ			32-42-11	001-099
	6		W1284	FRAR			32-42-11	001-099
	7		W1284	FRDB			32-42-12	001-099
	8		W1284	2501B	22		32-42-12	001-099
	9		W1284	2501R	22		32-42-12	001-099
	10		W1284	0127	22		32-42-12	001-099
	11		W1284	0128	22		32-42-12	001-099

HOOKUP LIST

D280N032

91-21-51

Section D42500

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42516J		E5-2/ /		RCPT (continued)				001-099
	12		W1284	0129	22		32-42-12	001-099
	13		W1284	0131	22		32-42-12	001-099
	14		W1284	0132	22		32-42-12	001-099
	15		W1284	0133	22		32-42-12	001-099
	16		W1284	0333	22		32-42-11	001-099
	17		W1284	0332	22		32-42-11	001-099
	18		W1284	0335	22		32-42-11	001-099
	19		W1284	0336	22		32-42-11	001-099
	20	UNUSED						001-099
	21	UNUSED						001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
			W1284	0125	22		32-42-12	001-099
			W1284	0343	20		32-42-11	001-099
			W1284	0344	20		32-42-11	001-099
			W1284	2501Z			32-42-12	001-099
			W1284	2520Z			32-42-11	001-099
			W1284	2521Z			32-42-11	001-099
			W1284	FRAQ			32-42-11	001-099
			W1284	FRAR			32-42-11	001-099
			W1284	FRDB			32-42-12	001-099
D42516P		E5-2/ /		PLUG-				001-099
	1		W2646	2501B	20		32-42-11	001-099
	2		W2646	2501R	20		32-42-11	001-099
	3		W2646	2502B	20		32-42-11	001-099
	4		W2646	2502R	20		32-42-11	001-099
	5		W2646	2501Z			32-42-11	001-099
	6		W2646	2502Z			32-42-11	001-099
	7		W2646	2503Z			32-42-12	001-099
	8		W2646	2503B	20		32-42-12	001-099
	9		W2646	2503R	20		32-42-12	001-099
	10		W2646	0007	20		32-42-12	001-099
	11		W2646	0008	20		32-42-12	001-099
	12		W2646	0009	20		32-42-12	001-099
	13		W2646	0010	20		32-42-12	001-099
	14		W2646	0011	20		32-42-12	001-099
	15		W2646	0012	20		32-42-12	001-099
	16		W2646	0006	20		32-42-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D42500

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42516P		E5-2/ /		PLUG- (continued)				001-099
	17		W2646	0005	20		32-42-11	001-099
	18		W2646	0002	20		32-42-11	001-099
	19		W2646	0003	20		32-42-11	001-099
	20	UNUSED						001-099
	21		W2646	0016	20		SPARE	001-099
	22		W2646	0017	20		SPARE	001-099
	23		W2646	0013	20		SPARE	001-099
	24		W2646	0027	20		SPARE	001-099
D42518J		E5-2/ /		RCPT				001-099
	1		W1284	2518B	22		32-42-11	001-099
	2		W1284	2518R	22		32-42-11	001-099
	3		W1284	2519B	22		32-42-11	001-099
	4		W1284	2519R	22		32-42-11	001-099
	5		W1284	FRAP			32-42-11	001-099
	6		W1284	FRAM			32-42-11	001-099
	7	UNUSED						001-099
	8	UNUSED						001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
			W1284	0341	20		32-42-11	001-099
			W1284	0342	20		32-42-11	001-099
			W1284	2518Z			32-42-11	001-099
			W1284	2519Z			32-42-11	001-099
			W1284	FRAM			32-42-11	001-099
			W1284	FRAP			32-42-11	001-099
D42518P		E005-02/ /		PLUG				001-099
	1		W2642	2501B	20		32-42-11	001-099
	2		W2642	2501R	20		32-42-11	001-099
	3		W2642	2502B	20		32-42-11	001-099
	4		W2642	2502R	20		32-42-11	001-099
	5		W2642	2501Z			32-42-11	001-099
	6		W2642	2502Z			32-42-11	001-099
	7		W2642	0001	20		SPARE	001-099
	8	UNUSED						001-099
	9	UNUSED						001-099
	10	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D42500

Page 4

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D42518P		E005-02/ /		PLUG (continued)				001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
D42520J		E5-2/ /		RCPT				001-099
	1		W1284	2516B	22		32-42-11	001-099
	2		W1284	2516R	22		32-42-11	001-099
	3		W1284	2517B	22		32-42-11	001-099
	4		W1284	2517R	22		32-42-11	001-099
	5		W1284	FRAN			32-42-11	001-099
	6		W1284	FRAL			32-42-11	001-099
	7	UNUSED						001-099
	8	UNUSED						001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12	UNUSED						001-099
			W1284	0339	20		32-42-11	001-099
			W1284	0340	20		32-42-11	001-099
			W1284	2516Z			32-42-11	001-099
			W1284	2517Z			32-42-11	001-099
			W1284	FRAL			32-42-11	001-099
			W1284	FRAN			32-42-11	001-099
D42520P		E5-2/ /		PLUG				001-099
	1		W2648	2501B	20		32-42-11	001-099
	2		W2648	2501R	20		32-42-11	001-099
	3		W2648	2502B	20		32-42-11	001-099
	4		W2648	2502R	20		32-42-11	001-099
	5		W2648	2501Z			32-42-11	001-099
	6		W2648	2502Z			32-42-11	001-099
	7		W2648	0001	20		SPARE	001-099
	8	UNUSED						001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D42500

Page 5 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D43001J		E003-02/ /		RCPT-				001-099
	1		W1423	5104R	24		34-22-19	001-099
	2		W1423	5104B	24		34-22-19	001-099
	3		W1423	FRBN			34-22-19	001-099
	4		W1423	0128	22		34-51-11	001-099
	5		W1423	5103R	24		34-51-11	001-099
	6		W1423	5103B	24		34-51-11	001-099
	7		W1423	FRBM			34-51-11	001-099
	8		W1423	5101R	24		34-51-11	001-099
	9		W1423	5101B	24		34-51-11	001-099
	10		W1423	FRBK			34-51-11	001-099
	11		W1423	0130	22		34-51-11	001-099
	12		W1423	5211R	24		23-51-13	001-099
	13		W1423	5211B	24		23-51-13	001-099
	14		W1423	5211Z			23-51-13	001-099
	15	UNUSED						001-099
	16	UNUSED						001-099
	17	UNUSED						001-099
	18	UNUSED						001-099
	19	UNUSED						001-099
	20	UNUSED						001-099
	21	UNUSED						001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
			W1423	0131	20		34-51-11	001-099
			W1423	0133	20		34-51-11	001-099
			W1423	0134	20		34-22-19	001-099
			W1423	5101Z			34-51-11	001-099
			W1423	5103Z			34-51-11	001-099
			W1423	5104Z			34-22-19	001-099
			W1423	FRBK			34-51-11	001-099
			W1423	FRBM			34-51-11	001-099
			W1423	FRBN			34-22-19	001-099
D43001P		E003-02/ /		PLUG-				001-099
	1		W4471	5080R	24		34-22-19	001-099
	2		W4471	5080B	24		34-22-19	001-099
	3		W4471	5080Z			34-22-19	001-099
	4		W4471	0286	22		34-51-11	001-099
	5		W4471	5081R	24		34-51-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D43000

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D43001P		E003-02/ /		PLUG- (continued)				001-099
	6		W4471	5081B	24		34-51-11	001-099
	7		W4471	5081Z			34-51-11	001-099
	8		W4471	5082R	24		34-51-11	001-099
	9		W4471	5082B	24		34-51-11	001-099
	10		W4471	5082Z			34-51-11	001-099
	11		W4471	0282	24		34-51-11	001-099
	12		W4471	5083R	24		23-51-13	001-099
	13		W4471	5083B	24		23-51-13	001-099
	14		W4471	5083Z			23-51-13	001-099
	15		W4471	0283	22		SPARE	001-099
	16		W4471	0284	24		SPARE	001-099
	17		W4471	5088R	24		SPARE	001-099
	18		W4471	5088B	24		SPARE	001-099
	19		W4471	5088Z			SPARE	001-099
	20	UNUSED						001-099
	21	UNUSED						001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
D43003J D43003J		E002-01/ / E2-1/ /		RCPT- RCPT-				001-099 115-199
	1	UNUSED						ALL
	2		W1171	0461	22		34-45-01	ALL
	3	UNUSED						ALL
	4		W1171	0097	22		34-51-11	001-099
	4	UNUSED						115-199
	5		W1171	5056R	24		34-51-11	001-099
	5	UNUSED						115-199
	6		W1171	5056B	24		34-51-11	001-099
	6	UNUSED						115-199
	7		W1171	5056Z			34-51-11	001-099
	7	UNUSED						115-199
	8		W1171	5048R	24		34-51-11	001-099
	8	UNUSED						115-199
	9		W1171	5048B	24		34-51-11	001-099
	9	UNUSED						115-199
	10		W1171	5048Z			34-51-11	001-099
	10	UNUSED						115-199
	11		W1171	0083	22		34-51-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section D43000

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D43003J		E002-01/ /		RCPT- (continued)				001-099
D43003J		E2-1/ /		RCPT- (continued)				115-199
	11	UNUSED						115-199
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						001-099
	17		W1171	5164R	24		34-45-02	115-199
	18	UNUSED						001-099
	18		W1171	5164B	24		34-45-02	115-199
	19	UNUSED						001-099
	19		W1171	FRNF			34-45-02	115-199
	20		W1171	5009R	24		34-31-11	ALL
	21		W1171	5009B	24		34-31-11	ALL
	22		W1171	5009Z			34-31-11	ALL
	23		W1171	0091	22		34-31-11	ALL
	24		W1171	0084	22		34-31-11	ALL
	25		W1171	5043R	24		31-31-43	001-099
	25	UNUSED						115-199
	26		W1171	5043B	24		31-31-43	001-099
	26	UNUSED						115-199
	27		W1171	5043Z			31-31-43	001-099
	27	UNUSED						115-199
	28		W1171	5313R	24		31-31-43	001-099
	28	UNUSED						115-199
	29		W1171	5313B	24		31-31-43	001-099
	29	UNUSED						115-199
	30		W1171	5313Z			31-31-43	001-099
	30		W1171	0468	24		34-45-02	115-199
	31		W1171	5229R	24		31-31-43	001-099
	31		W1171	0469	24		34-45-02	115-199
	32		W1171	5229B	24		31-31-43	001-099
	32		W1171	0470	24		34-45-02	115-199
	33		W1171	5229Z			31-31-43	001-099
	33		W1171	0471	24		34-45-02	115-199
	34		W1171	5141R	24		31-31-43	001-099
	34		W1171	5160R	24		34-45-02	115-199
	35		W1171	5141B	24		31-31-43	001-099
	35		W1171	5160B	24		34-45-02	115-199

HOOKUP LIST

D280N032

91-21-51

Section D43000

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D43003J		E002-01/ /		RCPT- (continued)				001-099
D43003J		E2-1/ /		RCPT- (continued)				115-199
	36		W1171	5141Z			31-31-43	001-099
	36		W1171	FRNB			34-45-02	115-199
	37		W1171	5312R	24		31-31-43	001-099
	37		W1171	5161R	24		34-45-02	115-199
	38		W1171	5312B	24		31-31-43	001-099
	38		W1171	5161B	24		34-45-02	115-199
	39		W1171	5312Z			31-31-43	001-099
	39		W1171	FRNC			34-45-02	115-199
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						001-099
	42		W1171	0252	22		22-13-11	115-199
	43	UNUSED						001-099
	43		W1171	5113R	24		22-13-11	115-199
	44	UNUSED						001-099
	44		W1171	5113B	24		22-13-11	115-199
	45	UNUSED						001-099
	45		W1171	FRNA			22-13-11	115-199
	46	UNUSED						001-099
	46		W1171	5192R	24		34-45-01	115-199
	47	UNUSED						001-099
	47		W1171	5192B	24		34-45-01	115-199
	48	UNUSED						001-099
	48		W1171	5192Z			34-45-01	115-199
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
			W1171	0446	22		22-13-11	115-199
			W1171	0448	22		34-45-02	115-199
			W1171	0449	22		34-45-02	115-199
			W1171	0473	22		34-45-02	115-199
			W1171	5113Z			22-13-11	115-199
			W1171	5160Z			34-45-02	115-199
			W1171	5161Z			34-45-02	115-199
			W1171	5164Z			34-45-02	115-199

HOOKUP LIST

D280N032

91-21-51

Section D43000

Page 4

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D43003J		E002-01/ /		RCPT- (continued)				001-099
D43003J		E2-1/ /		RCPT- (continued)				115-199
			W1171	FRNA			22-13-11	115-199
			W1171	FRNB			34-45-02	115-199
			W1171	FRNC			34-45-02	115-199
			W1171	FRNF			34-45-02	115-199
D43003P		E002-01/ /		PLUG-				001-099
D43003P		E2-1/8/8		PLUG-				115-199
	1		W4471	0327	22		34-45-01	001-002, 115-199
	1		W4471	0327	22		SPARE	003-099
	2		W4471	0328	22		34-45-01	ALL
	3		W4471	0284	24		SPARE	001-099
	3	UNUSED						115-199
	4		W4471	0286	22		34-51-11	001-099
	4	UNUSED						115-199
	5		W4471	5081R	24		34-51-11	001-099
	5	UNUSED						115-199
	6		W4471	5081B	24		34-51-11	001-099
	6	UNUSED						115-199
	7		W4471	5081Z			34-51-11	001-099
	7	UNUSED						115-199
	8		W4471	5082R	24		34-51-11	001-099
	8	UNUSED						115-199
	9		W4471	5082B	24		34-51-11	001-099
	9	UNUSED						115-199
	10		W4471	5082Z			34-51-11	001-099
	10	UNUSED						115-199
	11		W4471	0282	24		34-51-11	001-099
	11	UNUSED						115-199
	12		W4471	5088R	24		SPARE	001-099
	12	UNUSED						115-199
	13		W4471	5088B	24		SPARE	001-099
	13	UNUSED						115-199
	14		W4471	5088Z			SPARE	001-099
	14	UNUSED						115-199
	15		W4471	0283	22		SPARE	001-099
	15	UNUSED						115-199
	16	UNUSED						ALL
	17	UNUSED						001-099
	17		W4471	5096R	24		34-45-02	115-199

HOOKUP LIST

D280N032

91-21-51

Section D43000

Page 5

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D43003P		E002-01/ /		PLUG- (continued)				001-099
D43003P		E2-1/8/8		PLUG- (continued)				115-199
	18	UNUSED						001-099
	18		W4471	5096B	24		34-45-02	115-199
	19	UNUSED						001-099
	19		W4471	5096Z			34-45-02	115-199
	20		W4471	5095R	24		34-31-11	ALL
	21		W4471	5095B	24		34-31-11	ALL
	22		W4471	5095Z			34-31-11	ALL
	23		W4471	0336	22		34-31-11	ALL
	24		W4471	0334	22		34-31-11	ALL
	25		W4471	5053R	24		31-31-43	001-099
	25	UNUSED						115-199
	26		W4471	5053B	24		31-31-43	001-099
	26	UNUSED						115-199
	27		W4471	5053Z			31-31-43	001-099
	27	UNUSED						115-199
	28		W4471	5115R	24		31-31-43	001-099
	28	UNUSED						115-199
	29		W4471	5115B	24		31-31-43	001-099
	29	UNUSED						115-199
	30		W4471	5115Z			31-31-43	001-099
	30		W4471	0329	24		34-45-02	115-199
	31		W4471	5044R	24		31-31-43	001-099
	31		W4471	0330	24		34-45-02	115-199
	32		W4471	5044B	24		31-31-43	001-099
	32		W4471	0331	24		34-45-02	115-199
	33		W4471	5044Z			31-31-43	001-099
	33		W4471	0332	24		34-45-02	115-199
	34		W4471	5304R	24		31-31-43	001-099
	34		W4471	5127R	24		34-45-02	115-199
	35		W4471	5304B	24		31-31-43	001-099
	35		W4471	5127B	24		34-45-02	115-199
	36		W4471	5304Z			31-31-43	001-099
	36		W4471	5127Z			34-45-02	115-199
	37		W4471	5305R	24		31-31-43	001-099
	37		W4471	5128R	24		34-45-02	115-199
	38		W4471	5305B	24		31-31-43	001-099
	38		W4471	5128B	24		34-45-02	115-199
	39		W4471	5305Z			31-31-43	001-099
	39		W4471	5128Z			34-45-02	115-199

HOOKUP LIST

D280N032

91-21-51

Section D43000

Page 6

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D43003P		E002-01/ /		PLUG- (continued)				001-099
D43003P		E2-1/8/8		PLUG- (continued)				115-199
	40	UNUSED						ALL
	41	UNUSED						ALL
	42	UNUSED						001-099
	42		W4471	0333	22		22-13-11	115-199
	43	UNUSED						001-099
	43		W4471	5090R	24		22-13-11	115-199
	44	UNUSED						001-099
	44		W4471	5090B	24		22-13-11	115-199
	45	UNUSED						001-099
	45		W4471	5090Z			22-13-11	115-199
	46	UNUSED						001-099
	46		W4471	5126R	24		34-45-01	115-199
	47	UNUSED						001-099
	47		W4471	5126B	24		34-45-01	115-199
	48	UNUSED						001-099
	48		W4471	5126Z			34-45-01	115-199
	49	UNUSED						ALL
	50	UNUSED						ALL
	51	UNUSED						ALL
	52	UNUSED						ALL
	53	UNUSED						ALL
	54	UNUSED						ALL
	55	UNUSED						ALL
D43005J		E003-02/ /		RCPT-				001-099
D43005J		E3-2/ /		RCPT				115-199
	1		W1423	0228	22		34-51-21	001-099
	1		W1423	5225R	24		34-45-02	115-199
	2		W1423	5201R	24		34-51-21	001-099
	2		W1423	5225B	24		34-45-02	115-199
	3		W1423	5201B	24		34-51-21	001-099
	3		W1423	FRDV			34-45-02	115-199
	4		W1423	FRCK			34-51-21	001-099
	4		W1423	5226R	24		34-45-02	115-199
	5		W1423	5203R	24		34-51-21	001-099
	5		W1423	5226B	24		34-45-02	115-199
	6		W1423	5203B	24		34-51-21	001-099
	6		W1423	FRDW			34-45-02	115-199
	7		W1423	FRCM			34-51-21	001-099

HOOKUP LIST

D280N032

91-21-51

Section D43000

Page 7

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D43005J		E003-02/ /		RCPT- (continued)				001-099
D43005J		E3-2/ /		RCPT (continued)				115-199
	7	UNUSED						115-199
	8		W1423	0230	22		34-51-21	001-099
	8	UNUSED						115-199
	9		W1423	5204R	24		34-22-29	001-099
	9	UNUSED						115-199
	10		W1423	5204B	24		34-22-29	001-099
	10	UNUSED						115-199
	11		W1423	FRCN			34-22-29	001-099
	11	UNUSED						115-199
	12		W1423	5212R	24		23-51-13	001-099
	12	UNUSED						115-199
	13		W1423	5212B	24		23-51-13	001-099
	13	UNUSED						115-199
	14		W1423	5212Z			23-51-13	001-099
	14	UNUSED						115-199
	15	UNUSED						ALL
	16	UNUSED						ALL
	17	UNUSED						ALL
	18	UNUSED						ALL
	19	UNUSED						ALL
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						001-099
	26		W1423	5225R	24		34-45-02	001-099
	27		W1423	5225B	24		34-45-02	001-099
	28		W1423	FRDV			34-45-02	001-099
	29		W1423	5226R	24		34-45-02	001-099
	30		W1423	5226B	24		34-45-02	001-099
	31		W1423	FRDW			34-45-02	001-099
			W1423	0231	20		34-51-21	001-099
			W1423	0233	20		34-51-21	001-099
			W1423	0234	20		34-22-29	001-099
			W1423	5201Z			34-51-21	001-099
			W1423	5203Z			34-51-21	001-099
			W1423	5204Z			34-22-29	001-099
			W1423	FRCK			34-51-21	001-099

HOOKUP LIST

D280N032

91-21-51

Section D43000

Page 8

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D43005J		E003-02/ /		RCPT- (continued)				001-099
D43005J		E3-2/ /		RCPT (continued)				115-199
			W1423	FRCM			34-51-21	001-099
			W1423	FRCN			34-22-29	001-099
			W1423	0242	22		34-45-02	ALL
			W1423	0243	22		34-45-02	ALL
			W1423	5225Z			34-45-02	ALL
			W1423	5226Z			34-45-02	ALL
			W1423	FRDV			34-45-02	ALL
			W1423	FRDW			34-45-02	ALL
D43005P		E003-02/ /		PLUG-				001-099
D43005P		E3-2/ /		PLUG-				115-199
	1		W4473	0283	22		34-51-21	001-099
	1		W4473	5116R	24		34-45-02	115-199
	2		W4473	5081R	24		34-51-21	001-099
	2		W4473	5116B	24		34-45-02	115-199
	3		W4473	5081B	24		34-51-21	001-099
	3		W4473	5116Z			34-45-02	115-199
	4		W4473	5081Z			34-51-21	001-099
	4		W4473	5117R	24		34-45-02	115-199
	5		W4473	5082R	24		34-51-21	001-099
	5		W4473	5117B	24		34-45-02	115-199
	6		W4473	5082B	24		34-51-21	001-099
	6		W4473	5117Z			34-45-02	115-199
	7		W4473	5082Z			34-51-21	001-099
	7		W4473	0332	22		SPARE	115-199
	8		W4473	0284	24		34-51-21	001-099
	8		W4473	0333	24		SPARE	115-199
	9		W4473	5080R	24		34-22-29	001-099
	9		W4473	5120R	24		SPARE	115-199
	10		W4473	5080B	24		34-22-29	001-099
	10		W4473	5120B	24		SPARE	115-199
	11		W4473	5080Z			34-22-29	001-099
	11		W4473	5120Z			SPARE	115-199
	12		W4473	5083R	24		23-51-13	001-099
	12	UNUSED						115-199
	13		W4473	5083B	24		23-51-13	001-099
	13	UNUSED						115-199
	14		W4473	5083Z			23-51-13	001-099
	14	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D43000

Page 9

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D43005P		E003-02/ /		PLUG- (continued)				001-099
D43005P		E3-2/ /		PLUG- (continued)				115-199
	15		W4473	0285	22		SPARE	001-099
	15	UNUSED						115-199
	16	UNUSED						ALL
	17		W4473	5087R	24		SPARE	001-099
	17	UNUSED						115-199
	18		W4473	5087B	24		SPARE	001-099
	18	UNUSED						115-199
	19		W4473	5087Z			SPARE	001-099
	19	UNUSED						115-199
	20	UNUSED						ALL
	21	UNUSED						ALL
	22	UNUSED						ALL
	23	UNUSED						ALL
	24	UNUSED						ALL
	25	UNUSED						001-099
	26		W4473	5116R	24		34-45-02	001-099
	27		W4473	5116B	24		34-45-02	001-099
	28		W4473	5116Z			34-45-02	001-099
	29		W4473	5117R	24		34-45-02	001-099
	30		W4473	5117B	24		34-45-02	001-099
	31		W4473	5117Z			34-45-02	001-099
D43007J		E002-02/ /		RCPT-				001-099
	1		W1173	0266	22		34-51-21	001-099
	2		W1173	5123R	24		34-51-21	001-099
	3		W1173	5123B	24		34-51-21	001-099
	4		W1173	5123Z			34-51-21	001-099
	5		W1173	5120R	24		34-51-21	001-099
	6		W1173	5120B	24		34-51-21	001-099
	7		W1173	5120Z			34-51-21	001-099
	8		W1173	0167	24		34-51-21	001-099
	9		W1173	5024R	24		34-22-29	001-099
	10		W1173	5024B	24		34-22-29	001-099
	11		W1173	5024Z			34-22-29	001-099
	12	UNUSED						001-099
	13	UNUSED						001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
	16	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D43000

Page 10

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D43007J		E002-02/ /		RCPT- (continued)				001-099
	17	UNUSED						001-099
	18	UNUSED						001-099
	19		W1173	5324R	24		31-31-43	001-009
	19	UNUSED						010-099
	20		W1173	5324B	24		31-31-43	001-009
	20	UNUSED						010-099
	21		W1173	5324Z			31-31-43	001-009
	21	UNUSED						010-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
D43007P		E002-02/ /		PLUG-				001-099
	1		W4473	0283	22		34-51-21	001-099
	2		W4473	5081R	24		34-51-21	001-099
	3		W4473	5081B	24		34-51-21	001-099
	4		W4473	5081Z			34-51-21	001-099
	5		W4473	5082R	24		34-51-21	001-099
	6		W4473	5082B	24		34-51-21	001-099
	7		W4473	5082Z			34-51-21	001-099
	8		W4473	0284	24		34-51-21	001-099
	9		W4473	5080R	24		34-22-29	001-099
	10		W4473	5080B	24		34-22-29	001-099
	11		W4473	5080Z			34-22-29	001-099
	12		W4473	5087R	24		SPARE	001-099
	13		W4473	5087B	24		SPARE	001-099
	14		W4473	5087Z			SPARE	001-099
	15		W4473	0285	22		SPARE	001-099
	16	UNUSED						001-099
	17	UNUSED						001-099
	18	UNUSED						001-099
	19		W4473	5132R	24		31-31-43	001-009
	19		W4473	5132R	24		SPARE	010-099
	20		W4473	5132B	24		31-31-43	001-009
	20		W4473	5132B	24		SPARE	010-099
	21		W4473	5132Z			31-31-43	001-009
	21		W4473	5132Z			SPARE	010-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D43000

Page 11

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D43009J		E003-02/ /		PLUG-				001-099
	1		W1423	5102R	24		34-51-11	001-099
	2		W1423	5102B	24		34-51-11	001-099
	3		W1423	FRBL			34-51-11	001-099
	4		W1423	2102R	22		34-51-11	001-099
	5		W1423	2102B	22		34-51-11	001-099
	6		W1423	0137	22		34-32-11	001-099
	7		W1423	0138	22		34-32-11	001-099
	8		W1423	0139	22		34-32-11	001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11		W1423	5214R	24		34-22-81	001-099
	12		W1423	5214B	24		34-22-81	001-099
	13		W1423	5214Z			34-22-81	001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
	16	UNUSED						001-099
	17	UNUSED						001-099
	18	UNUSED						001-099
	19	UNUSED						001-099
	20	UNUSED						001-099
	21	UNUSED						001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
			W1423	0132	20		34-51-11	001-099
			W1423	5102Z			34-51-11	001-099
			W1423	FRBL			34-51-11	001-099
D43009P		E003-02/ /		PLUG				001-099
	1		W2241	5019R	24		34-51-11	001-099
	2		W2241	5019B	24		34-51-11	001-099
	3		W2241	5019Z			34-51-11	001-099
	4		W2241	2004R	22		34-51-11	001-099
	5		W2241	2004B	22		34-51-11	001-099
	6		W2241	0047	22		34-32-11	001-099
	7		W2241	0048	22		34-32-11	001-099
	8		W2241	0049	22		34-32-11	001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11		W2241	5003R	24		34-22-81	001-099

HOOKUP LIST

D280N032

91-21-51

Section D43000

Page 12

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D43009P		E003-02/ /		PLUG (continued)				001-099
	12		W2241	5003B	24		34-22-81	001-099
	13		W2241	5003Z			34-22-81	001-099
	14	UNUSED						001-099
	15	UNUSED						001-099
	16	UNUSED						001-099
	17	UNUSED						001-099
	18	UNUSED						001-099
	19	UNUSED						001-099
	20	UNUSED						001-099
	21	UNUSED						001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
D43010J		AD1090/ /		RCPT-				ALL
	1		W2644	0007	20		32-42-11	ALL
	2	UNUSED						ALL
	3		W2644	0008	20		32-42-11	ALL
	4		W2644	0028	20		SPARE	001-099
	4	UNUSED						115-199
	5		W2644	0029	20		SPARE	001-099
	5	UNUSED						115-199
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
D43010P		AD1090/ /		PLUG				ALL
	1		W2512	1001	18		32-42-11	ALL
	2	UNUSED						ALL
	3		W2512	1011	18		32-42-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D43000

Page 13

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D43010P		AD1090/ /		PLUG (continued)				ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
	13	UNUSED						ALL
	14	UNUSED						ALL
	S/R		W2512	1001Z			32-42-11	ALL
	S/R		W2512	1011Z			32-42-11	ALL
D43011J		E003-02/ /		PLUG-				001-099
	1		W1423	1101	22		34-51-11	001-099
	2	UNUSED						001-099
	3	UNUSED						001-099
	4	UNUSED						001-099
	5	UNUSED						001-099
D43011P		E3-2/ /		PLUG				001-099
	1		W2358	0014	22		34-51-11	001-099
	2		W2358	0046	20		SPARE	001-099
	3	UNUSED						001-099
	4	UNUSED						001-099
	5	UNUSED						001-099
D43012J		E6-4/ /		RCPT				115-199
	1	UNUSED						115-199
	2	UNUSED						115-199
	3	UNUSED						115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D43000

Page 14

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D43012J		E6-4/ /		RCPT (continued)				115-199
	16		W1032	0396	22		32-42-11	115-199
	17		W1032	0399	22		32-42-11	115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
D43012P		E6-4/ /		PLUG				115-199
	1	UNUSED						115-199
	2	UNUSED						115-199
	3	UNUSED						115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16		W2644	0008	20		32-42-11	115-199
	17		W2644	0007	20		32-42-11	115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D43000

Page 15

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D43012P		E6-4/ /		PLUG (continued)				115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
D43014J		E6-4/ /		RCPT				115-199
	1	UNUSED						115-199
	2	UNUSED						115-199
	3	UNUSED						115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17		W1032	0403	22		32-42-11	115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D43000

Page 16

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D43014J		E6-4/ /		RCPT (continued)				115-199
	30		W1032	0400	22		32-42-11	115-199
	31	UNUSED						115-199
D43014P		E6-4/ /		PLUG				115-199
	1	UNUSED						115-199
	2	UNUSED						115-199
	3	UNUSED						115-199
	4	UNUSED						115-199
	5	UNUSED						115-199
	6	UNUSED						115-199
	7	UNUSED						115-199
	8	UNUSED						115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15	UNUSED						115-199
	16	UNUSED						115-199
	17		W2646	0001	20		32-42-11	115-199
	18	UNUSED						115-199
	19	UNUSED						115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23	UNUSED						115-199
	24	UNUSED						115-199
	25	UNUSED						115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30		W2646	0004	20		32-42-11	115-199
	31	UNUSED						115-199
D43015J		E003-02/ /		PLUG-				001-099
	1	UNUSED						001-099
	2	UNUSED						001-099
	3	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D43000

Page 17

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D43015J		E003-02/ /		PLUG- (continued)				001-099
	4	UNUSED						001-099
	5		W1423	0225	22		34-51-21	001-099
D43015P		E3-2/ /		PLUG				001-099
	1	UNUSED						001-099
	2	UNUSED						001-099
	3	UNUSED						001-099
	4	UNUSED						001-099
	5		W2354	0137	22		34-51-21	001-099
D43017J		P0037-00/ /		RCPT				115-199
	1		W1270	6347	24		34-61-26	115-199
	2		W1270	6346	24		34-61-26	115-199
	3		W1270	2500R	22		34-61-26	115-199
	4		W1270	2500B	22		34-61-26	115-199
	5		W1270	2500Z			34-61-26	115-199
	6		W1270	2501R	22		34-61-26	115-199
	7		W1270	2501B	22		34-61-26	115-199
	8		W1270	2501Z			34-61-26	115-199
	9		W1270	2502R	22		34-61-26	115-199
	10		W1270	2502B	22		34-61-26	115-199
	11		W1270	2502Z			34-61-26	115-199
	12		W1270	2503R	22		34-61-26	115-199
	13		W1270	2503B	22		34-61-26	115-199
	14		W1270	2503Z			34-61-26	115-199
	15		W1270	2504R	22		34-61-26	115-199
	16		W1270	2504B	22		34-61-26	115-199
	17		W1270	2504Z			34-61-26	115-199
	18		W1270	6349	24		34-61-26	115-199
	19		W1270	6350	24		34-61-26	115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23		W1270	2505R	22		34-61-26	115-199
	24		W1270	2505B	22		34-61-26	115-199
	25		W1270	2505Z			34-61-26	115-199
	26		W1270	2507R	22		34-61-26	115-199
	27		W1270	2507B	22		34-61-26	115-199
	28		W1270	2507Z			34-61-26	115-199
	29		W1270	6351	24		34-61-26	115-199

HOOKUP LIST

D280N032

91-21-51

Section D43000

Page 18

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D43017J		P0037-00/ /		RCPT (continued)				115-199
	30		W1270	6352	24		34-61-26	115-199
	31	UNUSED						115-199
D43017P		P037-00/ /		PLUG- (34-0414)				115-199
	1		W4473	0306	24		34-61-26	115-199
	2		W4473	0296	24		34-61-26	115-199
	3		W4473	5101R	22		34-61-26	115-199
	4		W4473	5101B	22		34-61-26	115-199
	5		W4473	5101Z			34-61-26	115-199
	6		W4473	5102R	22		34-61-26	115-199
	7		W4473	5102B	22		34-61-26	115-199
	8		W4473	5102Z			34-61-26	115-199
	9		W4473	5103R	22		34-61-26	115-199
	10		W4473	5103B	22		34-61-26	115-199
	11		W4473	5103Z			34-61-26	115-199
	12		W4473	5104R	22		34-61-26	115-199
	13		W4473	5104B	22		34-61-26	115-199
	14		W4473	5104Z			34-61-26	115-199
	15		W4473	5105R	22		34-61-26	115-199
	16		W4473	5105B	22		34-61-26	115-199
	17		W4473	5105Z			34-61-26	115-199
	18		W4473	0297	24		34-61-26	115-199
	19		W4473	0298	24		34-61-26	115-199
	20	UNUSED						115-199
	21	UNUSED						115-199
	22	UNUSED						115-199
	23		W4473	5122R	22		34-61-26	115-199
	24		W4473	5122B	22		34-61-26	115-199
	25		W4473	5122Z			34-61-26	115-199
	26		W4473	5123R	22		34-61-26	115-199
	27		W4473	5123B	22		34-61-26	115-199
	28		W4473	5123Z			34-61-26	115-199
	29		W4473	0299	24		34-61-26	115-199
	30		W4473	0300	24		34-61-26	115-199
	31	UNUSED						115-199
D43019J		P036-00/ /		RCPT-				115-199
	1		W1260	6247	22		34-61-16	115-199
	2		W1260	6246	22		34-61-16	115-199
	3		W1260	2503R	22		34-61-16	115-199

HOOKUP LIST

D280N032

91-21-51

Section D43000

Page 19

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D43019J		P036-00/ /		RCPT- (continued)				115-199
	4		W1260	2503B	22		34-61-16	115-199
	5		W1260	2503Z			34-61-16	115-199
	6		W1260	2505R	22		34-61-16	115-199
	7		W1260	2505B	22		34-61-16	115-199
	8		W1260	2505Z			34-61-16	115-199
	9		W1260	2507R	22		34-61-16	115-199
	10		W1260	2507B	22		34-61-16	115-199
	11		W1260	2507Z			34-61-16	115-199
	12		W1260	2508R	22		34-61-16	115-199
	13		W1260	2508B	22		34-61-16	115-199
	14		W1260	2508Z			34-61-16	115-199
	15		W1260	2509R	22		34-61-16	115-199
	16		W1260	2509B	22		34-61-16	115-199
	17		W1260	2509Z			34-61-16	115-199
	18		W1260	6250	22		34-61-16	115-199
	19		W1260	6249	22		34-61-16	115-199
	20		W1260	2510R	22		34-61-16	115-199
	21		W1260	2510B	22		34-61-16	115-199
	22		W1260	2510Z			34-61-16	115-199
	23		W1260	2518R	22		34-22-38	115-199
	24		W1260	2518B	22		34-22-38	115-199
	25		W1260	2518Z			34-22-38	115-199
	26	UNUSED						115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D43000

Page 20

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D43019J		P036-00/ /		RCPT- (continued)				115-199
	44		W1260	2539R	22		34-61-16	115-199
	45		W1260	2539B	22		34-61-16	115-199
	46		W1260	2539Z			34-61-16	115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D43019P		P036-00/ /		PLUG (34-0414)				115-199
	1		W4471	0809	22		34-61-16	115-199
	2		W4471	0808	22		34-61-16	115-199
	3		W4471	5101R	22		34-61-16	115-199
	4		W4471	5101B	22		34-61-16	115-199
	5		W4471	5101Z			34-61-16	115-199
	6		W4471	5102R	22		34-61-16	115-199
	7		W4471	5102B	22		34-61-16	115-199
	8		W4471	5102Z			34-61-16	115-199
	9		W4471	5103R	22		34-61-16	115-199
	10		W4471	5103B	22		34-61-16	115-199
	11		W4471	5103Z			34-61-16	115-199
	12		W4471	5104R	22		34-61-16	115-199
	13		W4471	5104B	22		34-61-16	115-199
	14		W4471	5104Z			34-61-16	115-199
	15		W4471	5105R	22		34-61-16	115-199
	16		W4471	5105B	22		34-61-16	115-199
	17		W4471	5105Z			34-61-16	115-199
	18		W4471	0810	22		34-61-16	115-199
	19		W4471	0811	22		34-61-16	115-199
	20		W4471	5106R	22		34-61-16	115-199
	21		W4471	5106B	22		34-61-16	115-199
	22		W4471	5106Z			34-61-16	115-199
	23		W4471	5117R	22		34-22-38	115-199
	24		W4471	5117B	22		34-22-38	115-199
	25		W4471	5117Z			34-22-38	115-199
	26	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D43000

Page 21

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D43019P		P036-00/ /		PLUG (34-0414) (continued)				115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44		W4471	5136R	22		34-61-16	115-199
	45		W4471	5136B	22		34-61-16	115-199
	46		W4471	5136Z			34-61-16	115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
D43021J		E002-02/ /		RCPT-				010-099
	1	UNUSED						010-099
	2	UNUSED						010-099
	3	UNUSED						010-099
	4	UNUSED						010-099
	5	UNUSED						010-099
	6	UNUSED						010-099
	7	UNUSED						010-099
	8	UNUSED						010-099
	9	UNUSED						010-099

HOOKUP LIST

D280N032

91-21-51

Section D43000

Page 22

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D43021J		E002-02/ /		RCPT- (continued)				010-099
	10	UNUSED						010-099
	11	UNUSED						010-099
	12	UNUSED						010-099
	13	UNUSED						010-099
	14	UNUSED						010-099
	15	UNUSED						010-099
	16	UNUSED						010-099
	17	UNUSED						010-099
	18	UNUSED						010-099
	19	UNUSED						010-099
	20		W1173	5326R	22		31-31-41	010-099
	21		W1173	5326B	22		31-31-41	010-099
	22		W1173	5326Z			31-31-41	010-099
	23	UNUSED						010-099
	24	UNUSED						010-099
	25	UNUSED						010-099
	26	UNUSED						010-099
	27	UNUSED						010-099
	28	UNUSED						010-099
	29	UNUSED						010-099
	30	UNUSED						010-099
	31	UNUSED						010-099
D43021P		E002-02/ /		PLUG-				010-099
D43021P		E002-02/ /		PLUG- (34-0414)				115-199
	1	UNUSED						010-099
	1		W4473	0306	24		34-61-26	115-199
	2	UNUSED						010-099
	2		W4473	0296	24		34-61-26	115-199
	3	UNUSED						010-099
	3		W4473	5101R	22		34-61-26	115-199
	4	UNUSED						010-099
	4		W4473	5101B	22		34-61-26	115-199
	5	UNUSED						010-099
	5		W4473	5101Z			34-61-26	115-199
	6	UNUSED						010-099
	6		W4473	5102R	22		34-61-26	115-199
	7	UNUSED						010-099
	7		W4473	5102B	22		34-61-26	115-199
	8	UNUSED						010-099

HOOKUP LIST

D280N032

91-21-51

Section D43000

Page 23

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D43021P		E002-02/ /		PLUG- (continued)				010-099
D43021P		E002-02/ /		PLUG- (34-0414) (continued)				115-199
	8		W4473	5102Z			34-61-26	115-199
	9	UNUSED						010-099, 115-199
	10	UNUSED						010-099, 115-199
	11	UNUSED						010-099, 115-199
	12	UNUSED						010-099, 115-199
	13	UNUSED						010-099, 115-199
	14	UNUSED						010-099, 115-199
	15	UNUSED						010-099
	15		W4473	5105R	22		34-61-26	115-199
	16	UNUSED						010-099
	16		W4473	5105B	22		34-61-26	115-199
	17	UNUSED						010-099
	17		W4473	5105Z			34-61-26	115-199
	18	UNUSED						010-099
	18		W4473	0297	24		34-61-26	115-199
	19	UNUSED						010-099
	19		W4473	0298	24		34-61-26	115-199
	20		W4473	5256R	22		31-31-41	010-099
	20	UNUSED						115-199
	21		W4473	5256B	22		31-31-41	010-099
	21	UNUSED						115-199
	22		W4473	5256Z			31-31-41	010-099
	22	UNUSED						115-199
	23	UNUSED						010-099, 115-199
	24	UNUSED						010-099, 115-199
	25	UNUSED						010-099, 115-199
	26	UNUSED						010-099
	26		W4473	5123R	22		34-61-26	115-199
	27	UNUSED						010-099
	27		W4473	5123B	22		34-61-26	115-199
	28	UNUSED						010-099
	28		W4473	5123Z			34-61-26	115-199
	29	UNUSED						010-099
	29		W4473	0299	24		34-61-26	115-199
	30	UNUSED						010-099
	30		W4473	0300	24		34-61-26	115-199
	31	UNUSED						010-099, 115-199
	32	UNUSED						115-199
	33	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D43000

Page 24

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D43021P		E002-02/ /		PLUG- (continued)				010-099
D43021P		E002-02/ /		PLUG- (34-0414) (continued)				115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199
I D43023J		E002-001/ /		RCPT (34-0414)				115-199
I	1		W1171	0710	22		34-61-16	115-199
I	2		W1171	0829	24		34-61-16	115-199
I	3		W1171	5209R	22		34-61-16	115-199
I	4		W1171	5209B	22		34-61-16	115-199
I	5		W1171	5209Z			34-61-16	115-199
I	6		W1171	5020R	24		34-22-18	115-199
I	7		W1171	5020B	24		34-22-18	115-199
I	8		W1171	FRRT			34-22-18	115-199
I	9	UNUSED						115-199
I	10	UNUSED						115-199
I	11	UNUSED						115-199
I	12	UNUSED						115-199
I	13	UNUSED						115-199
I	14	UNUSED						115-199
I	15		W1171	5210R	22		34-61-16	115-199

HOOKUP LIST

D280N032

91-21-51

Section D43000

Page 25

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D43023J		E002-001/ /		RCPT (34-0414) (continued)				115-199
	16		W1171	5210B	22		34-61-16	115-199
	17		W1171	5210Z			34-61-16	115-199
	18		W1171	0712	22		34-61-16	115-199
	19		W1171	0711	22		34-61-16	115-199
	20		W1171	5211R	22		34-61-16	115-199
	21		W1171	5211B	22		34-61-16	115-199
	22		W1171	5211Z			34-61-16	115-199
	23	UNUSED						115-199
	24		W1171	5134R	24		34-22-38	115-199
	25		W1171	5134B	24		34-22-38	115-199
	26		W1171	5134Z			34-22-38	115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D43000

Page 26

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D43023J		E002-001/ /		RCPT (34-0414) (continued)				115-199
			W1171	0052	20		34-22-18	115-199
			W1171	5020Z			34-22-18	115-199
			W1171	FRRT			34-22-18	115-199
D43023P		E002-01/ /		PLUG (34-0414)				115-199
	1		W4471	0809	22		34-61-16	115-199
	2		W4471	0808	22		34-61-16	115-199
	3		W4471	5101R	22		34-61-16	115-199
	4		W4471	5101B	22		34-61-16	115-199
	5		W4471	5101Z			34-61-16	115-199
	6		W4471	5102R	22		34-61-16	115-199
	7		W4471	5102B	22		34-61-16	115-199
	8		W4471	5102Z			34-61-16	115-199
	9	UNUSED						115-199
	10	UNUSED						115-199
	11	UNUSED						115-199
	12	UNUSED						115-199
	13	UNUSED						115-199
	14	UNUSED						115-199
	15		W4471	5105R	22		34-61-16	115-199
	16		W4471	5105B	22		34-61-16	115-199
	17		W4471	5105Z			34-61-16	115-199
	18		W4471	0810	22		34-61-16	115-199
	19		W4471	0811	22		34-61-16	115-199
	20		W4471	5106R	22		34-61-16	115-199
	21		W4471	5106B	22		34-61-16	115-199
	22		W4471	5106Z			34-61-16	115-199
	23	UNUSED						115-199
	24		W4471	5117R	22		34-22-38	115-199
	25		W4471	5117B	22		34-22-38	115-199
	26		W4471	5117Z			34-22-38	115-199
	27	UNUSED						115-199
	28	UNUSED						115-199
	29	UNUSED						115-199
	30	UNUSED						115-199
	31	UNUSED						115-199
	32	UNUSED						115-199
	33	UNUSED						115-199
	34	UNUSED						115-199
	35	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D43000

Page 27

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D43023P		E002-01/ /		PLUG (34-0414) (continued)				115-199
	36	UNUSED						115-199
	37	UNUSED						115-199
	38	UNUSED						115-199
	39	UNUSED						115-199
	40	UNUSED						115-199
	41	UNUSED						115-199
	42	UNUSED						115-199
	43	UNUSED						115-199
	44	UNUSED						115-199
	45	UNUSED						115-199
	46	UNUSED						115-199
	47	UNUSED						115-199
	48	UNUSED						115-199
	49	UNUSED						115-199
	50	UNUSED						115-199
	51	UNUSED						115-199
	52	UNUSED						115-199
	53	UNUSED						115-199
	54	UNUSED						115-199
	55	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D43000

Page 28 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D43309J		E003-03/ /		RCPT-				010-099
	1		W1433	0592	22		31-31-61	010-099
	2		W1433	0593	22		31-31-61	010-099
	3		W1433	0594	22		31-31-61	010-099
	4		W1433	0595	22		31-31-61	010-099
	5		W1433	0588	22		31-31-61	010-099
	6		W1433	0589	22		31-31-61	010-099
	7		W1433	0590	22		31-31-61	010-099
	8		W1433	0591	22		31-31-61	010-099
	9	UNUSED						010-099
	10	UNUSED						010-099
	11	UNUSED						010-099
	12	UNUSED						010-099
	13	UNUSED						010-099
	14	UNUSED						010-099
	15	UNUSED						010-099
	16	UNUSED						010-099
	17	UNUSED						010-099
	18	UNUSED						010-099
	19	UNUSED						010-099
	20	UNUSED						010-099
	21	UNUSED						010-099
	22	UNUSED						010-099
	23	UNUSED						010-099
	24	UNUSED						010-099
	25	UNUSED						010-099
	26	UNUSED						010-099
	27	UNUSED						010-099
	28	UNUSED						010-099
	29	UNUSED						010-099
	30	UNUSED						010-099
	31	UNUSED						010-099
D43309P		E003-03/ /		PLUG-				010-099
	1		W4477	0456	22		31-31-61	010-099
	2		W4477	0457	22		31-31-61	010-099
	3		W4477	0458	22		31-31-61	010-099
	4		W4477	0459	22		31-31-61	010-099
	5		W4477	0452	22		31-31-61	010-099
	6		W4477	0453	22		31-31-61	010-099
	7		W4477	0454	22		31-31-61	010-099

HOOKUP LIST

D280N032

91-21-51

Section D43300

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D43309P		E003-03/ /		PLUG- (continued)				010-099
	8		W4477	0455	22		31-31-61	010-099
	9	UNUSED						010-099
	10	UNUSED						010-099
	11	UNUSED						010-099
	12	UNUSED						010-099
	13	UNUSED						010-099
	14	UNUSED						010-099
	15	UNUSED						010-099
	16	UNUSED						010-099
	17	UNUSED						010-099
	18	UNUSED						010-099
	19	UNUSED						010-099
	20	UNUSED						010-099
	21	UNUSED						010-099
	22	UNUSED						010-099
	23	UNUSED						010-099
	24	UNUSED						010-099
	25	UNUSED						010-099
	26	UNUSED						010-099
	27	UNUSED						010-099
	28	UNUSED						010-099
	29	UNUSED						010-099
	30	UNUSED						010-099
	31	UNUSED						010-099
D43315J		E003-03/ /		RCPT-				010-099
	1		W1433	5105R	22		31-31-41	010-099
	2		W1433	5105B	22		31-31-41	010-099
	3		W1433	FRDW			31-31-41	010-099
	4		W1433	0536	22		31-31-61	010-099
	5		W1433	0537	22		31-31-61	010-099
	6		W1433	0581	22		31-31-61	010-099
	7	UNUSED						010-099
	8	UNUSED						010-099
	9	UNUSED						010-099
	10	UNUSED						010-099
	11	UNUSED						010-099
	12	UNUSED						010-099
	13	UNUSED						010-099
	14	UNUSED						010-099

HOOKUP LIST

D280N032

91-21-51

Section D43300

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D43315J		E003-03/ /		RCPT- (continued)				010-099
	15	UNUSED						010-099
	16	UNUSED						010-099
	17	UNUSED						010-099
	18	UNUSED						010-099
	19	UNUSED						010-099
	20	UNUSED						010-099
	21	UNUSED						010-099
	22	UNUSED						010-099
	23	UNUSED						010-099
	24	UNUSED						010-099
	25	UNUSED						010-099
	26	UNUSED						010-099
	27	UNUSED						010-099
	28	UNUSED						010-099
	29	UNUSED						010-099
	30	UNUSED						010-099
	31	UNUSED						010-099
			W1433	0236	20		31-31-41	010-099
			W1433	5105Z			31-31-41	010-099
			W1433	FRDW			31-31-41	010-099
D43315P		E003-03/ /		PLUG-				010-099
	1		W4473	5257R	22		31-31-41	010-099
	2		W4473	5257B	22		31-31-41	010-099
	3		W4473	5257Z			31-31-41	010-099
	4		W4473	0392	22		31-31-61	010-099
	5		W4473	0393	22		31-31-61	010-099
	6		W4473	0486	22		31-31-61	010-099
	7	UNUSED						010-099
	8	UNUSED						010-099
	9	UNUSED						010-099
	10	UNUSED						010-099
	11	UNUSED						010-099
	12	UNUSED						010-099
	13	UNUSED						010-099
	14	UNUSED						010-099
	15	UNUSED						010-099
	16	UNUSED						010-099
	17	UNUSED						010-099
	18	UNUSED						010-099

HOOKUP LIST

D280N032

91-21-51

Section D43300

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D43315P		E003-03/ /		PLUG- (continued)				010-099
	19	UNUSED						010-099
	20	UNUSED						010-099
	21	UNUSED						010-099
	22	UNUSED						010-099
	23	UNUSED						010-099
	24	UNUSED						010-099
	25	UNUSED						010-099
	26	UNUSED						010-099
	27	UNUSED						010-099
	28	UNUSED						010-099
	29	UNUSED						010-099
	30	UNUSED						010-099
	31	UNUSED						010-099

HOOKUP LIST

D280N032

91-21-51

Section D43300

Page 4 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D43683P		E3-2/ /		PLUG				001-009
	1	UNUSED						001-009
	2	UNUSED						001-009
	3	UNUSED						001-009
	4	UNUSED						001-009
	5	UNUSED						001-009
	6	UNUSED						001-009
	7	UNUSED						001-009
	8		W2229	2502R	24		SPARE	001-009
	9		W2229	2502B	24		SPARE	001-009
	10		W2229	2502Z			SPARE	001-009
	11		W2229	5006B	24		34-22-91	001-002
	11		W2229	5006B	24		SPARE	003-009
	12		W2229	5006R	24		34-22-91	001-002
	12		W2229	5006R	24		SPARE	003-009
	13		W2229	5006Z			34-22-91	001-002
	13		W2229	5006Z			SPARE	003-009
	14		W2229	0014	24		SPARE	001-009
	15	UNUSED						001-009
	16	UNUSED						001-009
	17	UNUSED						001-009
	18	UNUSED						001-009
	19	UNUSED						001-009
	20	UNUSED						001-009
	21	UNUSED						001-009
	22	UNUSED						001-009
	23	UNUSED						001-009
	24	UNUSED						001-009
D43685J		E003-02/ /		RCPT				001
	1	UNUSED						001
	2	UNUSED						001
	3	UNUSED						001
	4	UNUSED						001
	5	UNUSED						001
	6	UNUSED						001
	7	UNUSED						001
	8	UNUSED						001
	9	UNUSED						001
	10	UNUSED						001
	11	UNUSED						001

HOOKUP LIST

D280N032

91-21-51

Section D43600

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D43685J		E003-02/ /		RCPT (continued)				001
	12	UNUSED						001
	13	UNUSED						001
	14	UNUSED						001
	15	UNUSED						001
	16	UNUSED						001
	17	UNUSED						001
	18	UNUSED						001
	19	UNUSED						001
	20	UNUSED						001
	21	UNUSED						001
	22	UNUSED						001
	23	UNUSED						001
	24	UNUSED						001

HOOKUP LIST

D280N032

91-21-51

Section D43600

Page 2 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D44102J		P061-00/ /		RECP				001-099
D44102J		P61/ /		RECP				115-199
	1		W2078	0096	20		26-21-11	ALL
	2		W2078	0293	20		26-23-11	ALL
	3		W2078	0482	20		26-23-11	ALL
	4		W2078	0287	20		26-21-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D44102P		P061-00/ /		PLUG				ALL
	1		W4228	0063	20		26-21-11	ALL
	2		W4228	0168	20		26-23-11	ALL
	3		W4228	0169	20		26-23-11	ALL
	4		W4228	0227	20		26-21-11	ALL
	5	UNUSED						ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D44104J		P061-00/ /		RECP				001-099
D44104J		P61/ /		RECP				115-199
	1	UNUSED						ALL
	2		W2078	0097	20		26-21-11	ALL
	3		W2078	0294	20		26-23-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D44104P		P061-00/ /		PLUG				ALL
	1	UNUSED						ALL
	2		W4236	0058	20		26-21-11	ALL
	3		W4236	0139	20		26-23-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section D44100

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D44104P		P061-00/ /		PLUG (continued)				ALL
	4	UNUSED						ALL
	5	UNUSED						ALL
D44106J		P061-00/ /		RECP				001-099
D44106J		P61/ /		RECP				115-199
	1		W2156	0117	20		26-21-11	ALL
	2		W2156	0083	20		26-21-11	ALL
	3		W2156	0236	20		26-23-11	ALL
	4		W2156	0122	22		26-23-11	001-099
	4		W2156	0122	20		26-23-11	115-199
	5		W2156	0116	20		26-21-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D44106P		P061-00/ /		PLUG				ALL
	1		W4236	0246	20		26-21-11	ALL
	2		W4236	0059	20		26-21-11	ALL
	3		W4236	0138	20		26-23-11	ALL
	4		W4236	0140	20		26-23-11	ALL
	5		W4236	0287	20		26-21-11	ALL
	6	UNUSED						ALL
	7	UNUSED						ALL
	8	UNUSED						ALL
	9	UNUSED						ALL
	10	UNUSED						ALL
	11	UNUSED						ALL
	12	UNUSED						ALL
D44108J		P061-00/ /		RECP				001-099
D44108J		P61/ /		RECP				115-199
	1	UNUSED						ALL
	2		W2156	0082	20		26-21-11	ALL
	3		W2156	0123	22		26-23-11	001-099
	3		W2156	0123	20		26-23-11	115-199
	4	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D44100

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D44108J		P061-00/ /		RECP (continued)				001-099
D44108J		P61/ /		RECP (continued)				115-199
	5	UNUSED						ALL
D44108P		P061-00/ /		PLUG				ALL
	1	UNUSED						ALL
	2		W4228	0062	20		26-21-11	ALL
	3		W4228	0167	20		26-23-11	ALL
	4	UNUSED						ALL
	5	UNUSED						ALL

HOOKUP LIST

D280N032

91-21-51

Section D44100

Page 3 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D45001J		E003-02/ /		RCPT-				001-099
	1		W1423	0239	22		34-57-11	001-099
	2	UNUSED						001-099
	3		W1423	5211B	24		23-51-13	001-099
	4		W1423	5211R	24		23-51-13	001-099
	5		W1423	5211Z			23-51-13	001-099
	6	UNUSED						001-099
	7	UNUSED						001-099
	8	UNUSED						001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12		W1423	5214B	24		34-22-81	001-099
	13		W1423	5214R	24		34-22-81	001-099
	14		W1423	5214Z			34-22-81	001-099
	15	UNUSED						001-099
	16	UNUSED						001-099
	17	UNUSED						001-099
	18	UNUSED						001-099
	19	UNUSED						001-099
	20	UNUSED						001-099
	21	UNUSED						001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
D45001P		E003-02/ /		PLUG				001-099
	1		W4515	0001	24		34-57-11	001-099
	2		W4515	0002	24		SPARE	001-099
	3		W4515	2501B	24		23-51-13	001-099
	4		W4515	2501R	24		23-51-13	001-099
	5		W4515	2501Z			23-51-13	001-099
	6		W4515	2502B	24		SPARE	001-099
	7		W4515	2502R	24		SPARE	001-099
	8		W4515	2502Z			SPARE	001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12		W4515	5002B	24		34-22-81	001-099
	13		W4515	5002R	24		34-22-81	001-099
	14		W4515	5002Z			34-22-81	001-099

HOOKUP LIST

D280N032

91-21-51

Section D45000

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D45001P		E003-02/ /		PLUG (continued)				001-099
	15		W4515	5003B	24		SPARE	001-099
	16		W4515	5003R	24		SPARE	001-099
	17		W4515	5003Z			SPARE	001-099
	18	UNUSED						001-099
	19	UNUSED						001-099
	20	UNUSED						001-099
	21	UNUSED						001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
D45003J		E006-01/ /		RCPT				001-099
	1		W1001	0040	22		34-57-11	001-099
	2	UNUSED						001-099
	3		W1001	2504B	24		23-51-13	001-099
	4		W1001	2504R	24		23-51-13	001-099
	5		W1001	FRAF			23-51-13	001-099
	6	UNUSED						001-099
	7	UNUSED						001-099
	8	UNUSED						001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12		W1001	5006B	24		34-22-81	001-099
	13		W1001	5006R	24		34-22-81	001-099
	14		W1001	FRAK			34-22-81	001-099
	15	UNUSED						001-099
	16	UNUSED						001-099
	17	UNUSED						001-099
	18	UNUSED						001-099
	19	UNUSED						001-099
	20	UNUSED						001-099
	21	UNUSED						001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
			W1001	0044	20		23-51-13	001-099
			W1001	0049	20		34-22-81	001-099
			W1001	2504Z			23-51-13	001-099
			W1001	5006Z			34-22-81	001-099

HOOKUP LIST

D280N032

91-21-51

Section D45000

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D45003J		E006-01/ /		RCPT (continued)				001-099
			W1001	FRAF			23-51-13	001-099
			W1001	FRAK			34-22-81	001-099
D45003P		E006-01/ /		PLUG				001-099
	1		W4515	0001	24		34-57-11	001-099
	2		W4515	0002	24		SPARE	001-099
	3		W4515	2501B	24		23-51-13	001-099
	4		W4515	2501R	24		23-51-13	001-099
	5		W4515	2501Z			23-51-13	001-099
	6		W4515	2502B	24		SPARE	001-099
	7		W4515	2502R	24		SPARE	001-099
	8		W4515	2502Z			SPARE	001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12		W4515	5002B	24		34-22-81	001-099
	13		W4515	5002R	24		34-22-81	001-099
	14		W4515	5002Z			34-22-81	001-099
	15		W4515	5003B	24		SPARE	001-099
	16		W4515	5003R	24		SPARE	001-099
	17		W4515	5003Z			SPARE	001-099
	18	UNUSED						001-099
	19	UNUSED						001-099
	20	UNUSED						001-099
	21	UNUSED						001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
D45005J		E003-02/ /		RCPT-				001-099
	1		W1423	0240	22		34-57-21	001-099
	2	UNUSED						001-099
	3		W1423	5212B	24		23-51-13	001-099
	4		W1423	5212R	24		23-51-13	001-099
	5		W1423	5212Z			23-51-13	001-099
	6	UNUSED						001-099
	7	UNUSED						001-099
	8	UNUSED						001-099
	9	UNUSED						001-099
	10	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D45000

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D45005J		E003-02/ /		RCPT- (continued)				001-099
	11	UNUSED						001-099
	12		W1423	5210B	24		34-22-91	001-099
	13		W1423	5210R	24		34-22-91	001-099
	14		W1423	5210Z			34-22-91	001-099
	15	UNUSED						001-099
	16	UNUSED						001-099
	17	UNUSED						001-099
	18	UNUSED						001-099
	19	UNUSED						001-099
	20	UNUSED						001-099
	21	UNUSED						001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
D45005P		E3-2/ /		PLUG				001-099
	1		W4517	0001	24		34-57-21	001-099
	2		W4517	0002	24		SPARE	001-099
	3		W4517	2501B	24		23-51-13	001-099
	4		W4517	2501R	24		23-51-13	001-099
	5		W4517	2501Z			23-51-13	001-099
	6		W4517	2502B	24		SPARE	001-099
	7		W4517	2502R	24		SPARE	001-099
	8		W4517	2502Z			SPARE	001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12		W4517	5002B	24		34-22-91	001-099
	13		W4517	5002R	24		34-22-91	001-099
	14		W4517	5002Z			34-22-91	001-099
	15		W4517	5003B	24		SPARE	001-099
	16		W4517	5003R	24		SPARE	001-099
	17		W4517	5003Z			SPARE	001-099
	18	UNUSED						001-099
	19	UNUSED						001-099
	20	UNUSED						001-099
	21	UNUSED						001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D45000

Page 4

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D45007J		E006-01/ /		RPT				001-099
	1		W1003	0165	24		34-57-21	001-099
	2	UNUSED						001-099
	3		W1003	2513B	24		23-51-13	001-099
	4		W1003	2513R	24		23-51-13	001-099
	5		W1003	2513Z			23-51-13	001-099
	6	UNUSED						001-099
	7	UNUSED						001-099
	8	UNUSED						001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099
	12		W1003	5001B	24		34-22-91	001-099
	13		W1003	5001R	24		34-22-91	001-099
	14		W1003	FRAO			34-22-91	001-099
	15	UNUSED						001-099
	16	UNUSED						001-099
	17	UNUSED						001-099
	18	UNUSED						001-099
	19	UNUSED						001-099
	20	UNUSED						001-099
	21	UNUSED						001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
			W1003	0004	20		34-22-91	001-099
			W1003	5001Z			34-22-91	001-099
			W1003	FRAO			34-22-91	001-099
D45007P		E6-1/ /		PLUG				001-099
	1		W4517	0001	24		34-57-21	001-099
	2		W4517	0002	24		SPARE	001-099
	3		W4517	2501B	24		23-51-13	001-099
	4		W4517	2501R	24		23-51-13	001-099
	5		W4517	2501Z			23-51-13	001-099
	6		W4517	2502B	24		SPARE	001-099
	7		W4517	2502R	24		SPARE	001-099
	8		W4517	2502Z			SPARE	001-099
	9	UNUSED						001-099
	10	UNUSED						001-099
	11	UNUSED						001-099

HOOKUP LIST

D280N032

91-21-51

Section D45000

Page 5

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D45007P		E6-1/ /		PLUG (continued)				001-099
	12		W4517	5002B	24		34-22-91	001-099
	13		W4517	5002R	24		34-22-91	001-099
	14		W4517	5002Z			34-22-91	001-099
	15		W4517	5003B	24		SPARE	001-099
	16		W4517	5003R	24		SPARE	001-099
	17		W4517	5003Z			SPARE	001-099
	18	UNUSED						001-099
	19	UNUSED						001-099
	20	UNUSED						001-099
	21	UNUSED						001-099
	22	UNUSED						001-099
	23	UNUSED						001-099
	24	UNUSED						001-099
D45017J		E002-03/ /		RECPT				115-199
	= A1		W1175	007CX			34-58-11	115-199
	= C1		W1175	007CO			34-58-11	115-199
D45017P		E002-03/ /		PLUG				115-199
	= A1		W4079	001CX			34-58-11	115-199
	= C1		W4079	001CO			34-58-11	115-199
D45019J		E002-02/ /		RECPT				115-199
	= A1		W1173	006CX			34-58-21	115-199
	= C1		W1173	006CO			34-58-21	115-199
D45019P		E002-02/ /		PLUG - (TNC) STRAIGHT				115-199
	= A1		W4081	001CX			34-58-21	115-199
	= C1		W4081	001CO			34-58-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section D45000

Page 6 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D52172P		682/238/L047		PLUG-				115-199
	1		W3570	0001	22		33-22-12	115-199
	2	UNUSED						115-199
	3		W3570	0003	20		33-22-12	115-199
	4	UNUSED						115-199
	5	UNUSED						115-199

HOOKUP LIST

D280N032

91-21-51

Section D52100

Page 1 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D65001J		P065-00/ /		RECEPT- (S/B: 757-34-0200)				002
	1		W2379	0001	22		34-46-14	002
	2		W2379	2001W	24		34-46-14	002
	3		W2379	2001B	24		34-46-14	002
	4		W2379	0003	22		34-46-14	002
	5		W2379	0002	22		34-46-14	002
	6	UNUSED						002
	7	UNUSED						002
	8	UNUSED						002
	9		W2379	2001Z			34-46-14	002
	10		W2379	2003W	24		34-43-15	002
	11		W2379	2003B	24		34-43-15	002
	12		W2379	2003Z			34-43-15	002
	13	UNUSED						002
	14	UNUSED						002
	15	UNUSED						002
	16	UNUSED						002
	17	UNUSED						002
	18	UNUSED						002
	19		W2379	2005Z			34-43-15	002
	20		W2379	2005W	24		34-43-15	002
	21		W2379	2005B	24		34-43-15	002
	22		W2379	2006Z			34-43-15	002
	23		W2379	2006W	24		34-43-15	002
	24		W2379	2006B	24		34-43-15	002
	25		W2379	2008R	22		34-46-14	002
	26		W2379	2008B	22		34-46-14	002
	27		W2379	2008Z			34-46-14	002
	28		W2379	2009Z			34-43-11	002
	29		W2379	2009R	22		34-43-11	002
	30		W2379	2009B	22		34-43-11	002
	31	UNUSED						002
	32	UNUSED						002
	33	UNUSED						002
	34	UNUSED						002
	35	UNUSED						002
	36		W2379	2501R	22		34-22-18	002
	37		W2379	2501B	22		34-22-18	002
	38		W2379	2501Z			34-22-18	002
	39		W2379	0021	22		34-22-18	002
	40	UNUSED						002

HOOKUP LIST

D280N032

91-21-51

Section D65000

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D65001J		P065-00/ /		RECEPT- (S/B: 757-34-0200) (continued)				002
	41	UNUSED						002
	42	UNUSED						002
	43		W2379	2502R	22		34-22-18	002
	44		W2379	2502B	22		34-22-18	002
	45		W2379	2502Z			34-22-18	002
	46		W2379	0022	22		34-22-18	002
	47	UNUSED						002
	48	UNUSED						002
	49	UNUSED						002
	50	UNUSED						002
	51	UNUSED						002
	52	UNUSED						002
	53	UNUSED						002
	54	UNUSED						002
	55	UNUSED						002
	56	UNUSED						002
	57	UNUSED						002
	58	UNUSED						002
	59	UNUSED						002
	60	UNUSED						002
	61	UNUSED						002
D65001P		P065-00/ /		PLUG- (S/B: 757-34-0200)				002
	1		W0814	0106	22		34-46-14	002
	2		W0814	2507W	24		34-46-14	002
	3		W0814	2507B	24		34-46-14	002
	4		W0814	0110	22		34-46-14	002
	5		W0814	0195	22		34-46-14	002
	6	UNUSED						002
	7	UNUSED						002
	8	UNUSED						002
	9		W0814	2507Z			34-46-14	002
	10		W0814	2509W	24		34-43-15	002
	11		W0814	2509B	24		34-43-15	002
	12		W0814	2509Z			34-43-15	002
	13	UNUSED						002
	14	UNUSED						002
	15	UNUSED						002
	16	UNUSED						002
	17	UNUSED						002

HOOKUP LIST

D280N032

91-21-51

Section D65000

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D65001P		P065-00/ /		PLUG- (S/B: 757-34-0200) (continued)				002
	18	UNUSED						002
	19		W0814	2513Z			34-43-15	002
	20		W0814	2513W	24		34-43-15	002
	21		W0814	2513B	24		34-43-15	002
	22		W0814	2515Z			34-43-15	002
	23		W0814	2515W	24		34-43-15	002
	24		W0814	2515B	24		34-43-15	002
	25		W0814	2527R	22		34-46-14	002
	26		W0814	2527B	22		34-46-14	002
	27		W0814	2527Z			34-46-14	002
	28		W0814	2529Z			34-43-11	002
	29		W0814	2529R	22		34-43-11	002
	30		W0814	2529B	22		34-43-11	002
	31	UNUSED						002
	32	UNUSED						002
	33	UNUSED						002
	34	UNUSED						002
	35	UNUSED						002
	36		W0814	2503R	22		34-22-18	002
	37		W0814	2503B	22		34-22-18	002
	38		W0814	2503Z			34-22-18	002
	39		W0814	0012	22		34-22-18	002
	40	UNUSED						002
	41	UNUSED						002
	42	UNUSED						002
	43		W0814	2504R	22		34-22-18	002
	44		W0814	2504B	22		34-22-18	002
	45		W0814	2504Z			34-22-18	002
	46		W0814	0013	22		34-22-18	002
	47	UNUSED						002
	48	UNUSED						002
	49	UNUSED						002
	50	UNUSED						002
	51	UNUSED						002
	52	UNUSED						002
	53	UNUSED						002
	54	UNUSED						002
	55	UNUSED						002
	56	UNUSED						002
	57	UNUSED						002

HOOKUP LIST

D280N032

91-21-51

Section D65000

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D65001P		P065-00/ /		PLUG- (S/B: 757-34-0200) (continued)				002
	58	UNUSED						002
	59	UNUSED						002
	60	UNUSED						002
	61	UNUSED						002
D65003J		P065-00/ /		PLUG- (S/B: 757-34-0200)				002
	1		W2381	0001	22		34-46-14	002
	2		W2381	0002	22		34-46-14	002
	3		W2381	2005W	24		34-46-14	002
	4		W2381	2005B	24		34-46-14	002
	5		W2381	2005Z			34-46-14	002
	6		W2381	2001Z			34-43-15	002
	7		W2381	2001W	24		34-43-15	002
	8		W2381	2001B	24		34-43-15	002
	9		W2381	2002Z			34-43-15	002
	10		W2381	2002W	24		34-43-15	002
	11		W2381	2002B	24		34-43-15	002
	12	UNUSED						002
	13	UNUSED						002
	14	UNUSED						002
	15	UNUSED						002
	16	UNUSED						002
	17	UNUSED						002
	18	UNUSED						002
	19	UNUSED						002
	20	UNUSED						002
	21	UNUSED						002
	22	UNUSED						002
	23	UNUSED						002
	24		W2381	2008Z			34-46-14	002
	25		W2381	2008R	22		34-46-14	002
	26		W2381	2008B	22		34-46-14	002
	27	UNUSED						002
	28	UNUSED						002
	29	UNUSED						002
	30		W2381	2009Z			34-43-11	002
	31		W2381	2009R	22		34-43-11	002
	32		W2381	2009B	22		34-43-11	002
	33		W2381	2012B	24		34-43-15	002
	34		W2381	2012W	24		34-43-15	002

HOOKUP LIST

D280N032

91-21-51

Section D65000

Page 4

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D65003J		P065-00/ /		PLUG- (S/B: 757-34-0200) (continued)				002
	35		W2381	2012Z			34-43-15	002
	36		W2381	2503R	22		34-22-28	002
	37		W2381	2503B	22		34-22-28	002
	38		W2381	2503Z			34-22-28	002
	39		W2381	0023	22		34-22-28	002
	40	UNUSED						002
	41	UNUSED						002
	42	UNUSED						002
	43		W2381	2504R	22		34-22-28	002
	44		W2381	2504B	22		34-22-28	002
	45		W2381	2504Z			34-22-28	002
	46		W2381	0024	22		34-22-28	002
	47	UNUSED						002
	48	UNUSED						002
	49	UNUSED						002
	50	UNUSED						002
	51	UNUSED						002
	52	UNUSED						002
	53	UNUSED						002
	54	UNUSED						002
	55	UNUSED						002
	56	UNUSED						002
	57	UNUSED						002
	58	UNUSED						002
	59	UNUSED						002
	60	UNUSED						002
	61	UNUSED						002
D65003P		P065-00/ /		PLUG- (S/B: 757-34-0200)				002
	1		W0814	0206	22		34-46-14	002
	2		W0814	0210	22		34-46-14	002
	3		W0814	2508W	24		34-46-14	002
	4		W0814	2508B	24		34-46-14	002
	5		W0814	2508Z			34-46-14	002
	6		W0814	2514Z			34-43-15	002
	7		W0814	2514W	24		34-43-15	002
	8		W0814	2514B	24		34-43-15	002
	9		W0814	2516Z			34-43-15	002
	10		W0814	2516W	24		34-43-15	002
	11		W0814	2516B	24		34-43-15	002

HOOKUP LIST

D280N032

91-21-51

Section D65000

Page 5

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D65003P		P065-00/ /		PLUG- (S/B: 757-34-0200) (continued)				002
	12	UNUSED						002
	13	UNUSED						002
	14	UNUSED						002
	15	UNUSED						002
	16	UNUSED						002
	17	UNUSED						002
	18	UNUSED						002
	19	UNUSED						002
	20	UNUSED						002
	21	UNUSED						002
	22	UNUSED						002
	23	UNUSED						002
	24		W0814	2532Z			34-46-14	002
	25		W0814	2532R	22		34-46-14	002
	26		W0814	2532B	22		34-46-14	002
	27	UNUSED						002
	28	UNUSED						002
	29	UNUSED						002
	30		W0814	2528Z			34-43-11	002
	31		W0814	2528R	22		34-43-11	002
	32		W0814	2528B	22		34-43-11	002
	33		W0814	2510B	24		34-43-15	002
	34		W0814	2510W	24		34-43-15	002
	35		W0814	2510Z			34-43-15	002
	36		W0814	2501R	22		34-22-28	002
	37		W0814	2501B	22		34-22-28	002
	38		W0814	2501Z			34-22-28	002
	39		W0814	0029	22		34-22-28	002
	40	UNUSED						002
	41	UNUSED						002
	42	UNUSED						002
	43		W0814	2502R	22		34-22-28	002
	44		W0814	2502B	22		34-22-28	002
	45		W0814	2502Z			34-22-28	002
	46		W0814	0030	22		34-22-28	002
	47	UNUSED						002
	48	UNUSED						002
	49	UNUSED						002
	50	UNUSED						002
	51	UNUSED						002

HOOKUP LIST

D280N032

91-21-51

Section D65000

Page 6

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
D65003P		P065-00/ /		PLUG- (S/B: 757-34-0200) (continued)				002
	52	UNUSED						002
	53	UNUSED						002
	54	UNUSED						002
	55	UNUSED						002
	56	UNUSED						002
	57	UNUSED						002
	58	UNUSED						002
	59	UNUSED						002
	60	UNUSED						002
	61	UNUSED						002

HOOKUP LIST

D280N032

91-21-51

Section D65000

Page 7 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
GD00082		251/204/L010		GND-TERMINAL BLOCK				ALL
	DED		W2227	1004Z			34-57-11	115-199
GD00203		IRSS270/ /RRS		GND-				ALL
	CAP	Y	W3406	0008	18		28-43-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section GD0000

Page 1 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
GD01650		250/202/R014		GND-TERMINAL BLOCK				ALL
	DED		W2229	1004Z			34-57-21	ALL
GD01758		E004-03/ /		GND-TERMINAL BLOCK				ALL
	DED		W1163	1003Z			23-12-11	115-199
	DED		W1163	1007Z			23-12-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section GD0100

Page 1 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
GD03105		1619/202/R052		GND-				001-099
	CAP	Y	W2632	A-BW			30-71-21	001-099

HOOKUP LIST

D280N032

91-21-51

Section GD0300

Page 1 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
K00031		P065-00/ /		RELAY-CARGO DR HINGE CONTROL				115-199
	A1	D	W0808	0042	20		52-34-11	115-199
	A2	D	W0808	0036	20		52-34-11	115-199
	A3	D	W0808	0041	20		52-34-11	115-199
	A3	D	W0808	0042	20		52-34-11	115-199
	B1	D	W0808	0043	20		52-34-11	115-199
	B1	D	W0808	0045	20		52-34-11	115-199
	B2	D	W0808	0037	20		52-34-11	115-199
	B3	D	W0808	0044	20		52-34-11	115-199
	C1	D	W0808	0044	20		52-34-11	115-199
	C1	D	W0808	0046	20		52-34-11	115-199
	C2	D	W0808	0038	20		52-34-11	115-199
	C3	D	W0808	0045	20		52-34-11	115-199
	X1	C	W0808	0047	22		52-34-11	115-199
	X2	C	W0808	0048	22		52-34-11	115-199
	Y1	C	W0808	0039	22		52-34-11	115-199
	Y2	C	W0808	0035	22		52-34-11	115-199
K00036		E006-00/ /		RELAY-NO.2 CARGO DR HINGE				115-199
	A1	D	W1024	0305	16		52-35-11	115-199
	A2	D	W1024	0298	16		52-35-11	115-199
	A3	D	W1024	0304	16		52-35-11	115-199
	A3	D	W1024	0305	16		52-35-11	115-199
	B1	D	W1024	0309	16		52-35-11	115-199
	B1	D	W1024	0311	16		52-35-11	115-199
	B2	D	W1024	0299	16		52-35-11	115-199
	B3	D	W1024	0307	16		52-35-11	115-199
	C1	D	W1024	0307	16		52-35-11	115-199
	C1	D	W1024	0308	16		52-35-11	115-199
	C2	D	W1024	0300	16		52-35-11	115-199
	C3	D	W1024	0309	16		52-35-11	115-199
	X1	C	W1024	0310	22		52-35-11	115-199
	X2	C	W1024	0302	22		52-35-11	115-199
	Y1	C	W1024	0301	22		52-35-11	115-199
	Y2	C	W1024	0303	22		52-35-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section K00000

Page 1 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
K00101		P034-00/ /		RELAY-GND HANDLING				ALL
	A1	F	W1134	0019	14		24-51-61	001-099
	A1	F	W1134	0019	10		24-51-61	115-199
	A2	F	W1190	0001	14		24-51-61	001-099
	A2	F	W1134	0025	10		24-51-61	115-199
	A3	F	W1134	0016	14		24-51-61	001-099
	A3	F	W1134	0016	10		24-51-61	115-199
	B1	F	W1134	0020	14		24-51-61	001-099
	B1	F	W1134	0020	10		24-51-61	115-199
	B2	F	W1190	0002	14		24-51-61	001-099
	B2	F	W1134	0026	10		24-51-61	115-199
	B3	F	W1134	0017	14		24-51-61	001-099
	B3	F	W1134	0017	10		24-51-61	115-199
	C1	F	W1134	0021	14		24-51-61	001-099
	C1	F	W1134	0021	10		24-51-61	115-199
	C2	F	W1190	0003	14		24-51-61	001-099
	C2	F	W1134	0027	10		24-51-61	115-199
	C3	F	W1134	0018	14		24-51-61	001-099
	C3	F	W1134	0018	10		24-51-61	115-199
	X1	C	W1128	0135	20		24-51-61	ALL
	X2	C	W1128	0030	20		24-51-61	ALL
	Y1	C	W1128	0136	20		24-51-61	ALL
	Y2	C	W1128	0031	20		24-51-61	ALL
K00102		P034-00/ /		RELAY-TRANSFER,GND SERVICE				001-099
K00102		P037-00/ /		RELAY-TRANSFER,GND SERVICE				115-199
	A1	F	W1134	0030	08		24-51-52	001-099
	A1	F	W4512	0001	08		24-51-52	115-199
	A2	F	W4510	0017	08		24-51-52	001-099
	A2	F	W1272	0003	08		24-51-52	115-199
	A2	F	W2022	0001	08		24-51-52	115-199
	A3	F	W4510	0004	08		24-51-52	ALL
	B1	F	W1134	0031	08		24-51-52	001-099
	B1	F	W4512	0002	08		24-51-52	115-199
	B2	F	W4510	0018	08		24-51-52	001-099
	B2	F	W1272	0002	08		24-51-52	115-199
	B2	F	W2022	0002	08		24-51-52	115-199
	B3	F	W4510	0005	08		24-51-52	ALL
	C1	F	W1134	0032	08		24-51-52	001-099
	C1	F	W4512	0003	08		24-51-52	115-199
	C2	F	W4510	0019	08		24-51-52	001-099

HOOKUP LIST

D280N032

91-21-51

Section K00100

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
K00102		P034-00/ /		RELAY-TRANSFER,GND SERVICE (continued)				001-099
K00102		P037-00/ /		RELAY-TRANSFER,GND SERVICE (continued)				115-199
	C2	F	W1272	0001	08		24-51-52	115-199
	C2	F	W2022	0003	08		24-51-52	115-199
	C3	F	W4510	0006	08		24-51-52	ALL
	X1	C	W1128	0002	20		24-51-51	001-099
	X1	C	W1128	0144	20		24-51-51	001-099
	X1	C	W1270	0014	20		24-51-51	115-199
	X1	C	W1270	0015	20		24-51-51	115-199
	X2	C	W1128	0003	20		24-51-51	001-099
	X2	C	W1270	0016	20		24-51-51	115-199
	12	C	W1128	0130	24		24-41-12	001-099
	12	C	W1270	0121	24		24-41-12	115-199
	13	C	W1128	0133	24		24-41-12	001-099
	13	C	W1270	0120	24		24-41-12	115-199
K00103		P034-00/ /		RELAY-SELECT,GND SERVICE				ALL
	A1	F	W1134	0004	08		24-51-52	ALL
	A2	F	W1134	0030	08		24-51-52	001-099
	A2	F	W4512	0001	08		24-51-52	115-199
	A3	F	W1134	0001	08		24-51-52	ALL
	B1	F	W1134	0005	08		24-51-52	ALL
	B2	F	W1134	0031	08		24-51-52	001-099
	B2	F	W4512	0002	08		24-51-52	115-199
	B3	F	W1134	0002	08		24-51-52	ALL
	C1	F	W1134	0006	08		24-51-52	ALL
	C2	F	W1134	0032	08		24-51-52	001-099
	C2	F	W4512	0003	08		24-51-52	115-199
	C3	F	W1134	0003	08		24-51-52	ALL
	X1	C	W1128	0134	20		24-51-51	ALL
	X2	C	W1128	0029	20		24-51-51	ALL
K00104		P006-00/ /		RELAY-MAIN BAT				ALL
	A1	E	W0066	0002	06		24-33-11	ALL
	A2	E	W0074	0004	08		24-33-11	ALL
	A2	E	W2008	0001	06		24-33-11	ALL
	B1	E	W0066	0003	08		24-33-11	ALL
	B2	E	W0060	0001	08		24-33-11	ALL
	B2	E	W0074	0005	08		24-33-11	ALL
	X1	C	W0074	0043	24		24-33-12	001-099
	X1	C	W0060	0015	22		24-33-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section K00100

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
K00104		P006-00/ /		RELAY-MAIN BAT (continued)				ALL
	X2	C	W0074	0044	24		24-33-12	001-099
	X2	C	W0074	0002	22		24-33-11	ALL
	11	C	W0060	0021	22		24-51-31	ALL
	12	C	W0074	0026	22		24-51-31	ALL
	13	C	W0074	0404	22		24-31-11	ALL
	14	C	W0074	0014	20		24-31-11	ALL
K00106		P006-00/ /		RELAY-MAIN BAT XFR				ALL
	A1	E	W0072	0006	08		24-33-11	ALL
	A2	E	W0074	0004	08		24-33-11	ALL
	B1	E	W0072	0005	08		24-33-11	ALL
	B2	E	W0074	0003	08		24-54-71	ALL
	B2	E	W0074	0005	08		24-33-11	ALL
	X1	C	W0074	0018	22		24-33-11	ALL
	X2	C	W0074	0006	22		24-33-11	ALL
	11	C	W0074	0058	22		24-33-11	ALL
	11	C	W0074	0059	22		24-33-11	ALL
	12	C	W0074	0056	22		24-33-11	ALL
	12	C	W0074	0057	22		24-33-11	ALL
	13	C	W0074	0002	22		24-33-11	ALL
	14	C	W0074	0301	22		24-33-11	ALL
K00108		P006-00/ /		RELAY-TIE,DC				ALL
	A1	F	W0072	0008	04		24-32-11	ALL
	A2	F	W0070	0002	04		24-32-11	ALL
	X1	C	W0074	0031	22		24-34-11	ALL
	X1	C	W0074	0307	22		24-34-11	ALL
	X2	C	W0074	0009	22		24-51-72	ALL
	11	C	W0074	0221	22		24-34-11	ALL
	11	C	W0074	0525	22		24-51-72	ALL
	12	C	W0074	0030	20		24-51-72	ALL
	13	C	W0074	0501	22		24-51-72	ALL
K00114		P034-00/ /		CONTACTOR-EXTERNAL POWER				ALL
	A1	H	W1128	0021	18		24-41-11	ALL
	A1	H	W1128	0037	16		24-41-11	ALL
	A1	H	W1134	0007	08		24-51-52	ALL
	A1	H	W1134	0022	08		24-51-61	ALL
	A1	H	W2036	0001	*1		24-41-11	ALL
	A2	H	W4406	0002	04		24-21-51	ALL

HOOKUP LIST

D280N032

91-21-51

Section K00100

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
K00114		P034-00/ /		CONTACTOR-EXTERNAL POWER (continued)				ALL
	A2	H	W4406	0003	04		24-21-51	ALL
	B1	H	W1128	0038	16		24-41-11	ALL
	B1	H	W1134	0008	08		24-51-52	ALL
	B1	H	W1134	0023	08		24-51-61	ALL
	B1	H	W2036	0002	*1		24-41-11	ALL
	B2	H	W4406	0006	04		24-21-51	ALL
	B2	H	W4406	0007	04		24-21-51	ALL
	C1	H	W1128	0039	16		24-41-11	ALL
	C1	H	W1134	0009	08		24-51-52	ALL
	C1	H	W1134	0024	08		24-51-61	ALL
	C1	H	W2036	0003	*1		24-41-11	ALL
	C2	H	W1128	0006	18		24-21-51	ALL
	C2	H	W4406	0010	04		24-21-51	ALL
	C2	H	W4406	0011	04		24-21-51	ALL
K00117		E006-00/174/R050		CONTACTOR-APU CRANK				ALL
	X1	E	W1024	0074	22		49-41-11	ALL
	X2	E	W1024	0073	22		49-41-11	ALL
K00119		P070-00/ /		RELAY-UTILITY BUS,LEFT				ALL
	A1	E	W1250	0035	08		24-51-14	ALL
	A2	E	W1252	0026	08		24-51-14	ALL
	B1	E	W1250	0036	08		24-51-14	ALL
	B2	E	W1252	0025	08		24-51-14	ALL
	C1	E	W1250	0037	08		24-51-14	ALL
	C2	E	W1252	0017	08		24-51-14	ALL
	X1	C	W1250	0025	20		24-51-14	ALL
	X1	C	W1250	0085	20		24-51-14	ALL
	X1	C	W1250	0050	20		24-51-14	115-199
	X2	C	W1250	0026	20		24-51-14	ALL
	X2	C	W1250	0052	20		24-51-14	115-199
	13	C	W1250	0024	20		24-51-14	ALL
	14	C	W1250	0027	20		24-51-14	001-099
	14	C	W1250	0053	20		24-51-14	115-199
K00120		P037-00/ /		RELAY-UTILITY BUS,RIGHT				ALL
	A1	E	W4510	0007	10		24-51-24	001-099
	A1	E	W4510	0007	08		24-51-24	115-199
	A2	E	W1272	0032	10		24-51-24	ALL
	B1	E	W4510	0008	10		24-51-24	001-099

HOOKUP LIST

D280N032

91-21-51

Section K00100

Page 4

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
K00120		P037-00/ /		RELAY-UTILITY BUS,RIGHT (continued)				ALL
	B1	E	W4510	0008	08		24-51-24	115-199
	B2	E	W1272	0031	10		24-51-24	ALL
	C1	E	W4510	0009	10		24-51-24	001-099
	C1	E	W4510	0009	08		24-51-24	115-199
	C2	E	W1272	0030	10		24-51-24	ALL
	X1	C	W1270	0012	20		24-51-24	ALL
	X1	C	W1270	0193	20		24-51-24	ALL
	X2	C	W1270	0013	20		24-51-24	ALL
	X2	C	W1270	0192	20		24-51-24	ALL
	X2	C	W1270	6462	20		24-51-24	ALL
	13	C	W1270	0010	20		24-51-24	ALL
	14	C	W1270	0194	20		24-51-24	ALL
K00162		P034-00/ /		RELAY-LDG LT DIMMING,RIGHT				ALL
	A1	E	W1242	0038	20		33-42-12	115-199
	A2	E	W1242	0028	20		33-42-12	115-199
	A3	E	W1242	0039	20		33-42-12	115-199
	X1	C	W1242	0036	20		33-42-12	115-199
	X2	C	W1242	0037	20		33-42-12	115-199
K00187		P033-00/ /		RELAY-FUEL BOOST PUMP CONT,L AFT				ALL
	A1	D	W1230	3001R	18		28-22-11	001-099
	A1	D	W1232	3001R	18		28-22-11	115-199
	A2	D	W1230	3002R	18		28-22-11	001-099
	A2	D	W1232	3002R	18		28-22-11	115-199
	B1	D	W1230	3001Y	18		28-22-11	001-099
	B1	D	W1232	3001Y	18		28-22-11	115-199
	B2	D	W1230	3002Y	18		28-22-11	001-099
	B2	D	W1232	3002Y	18		28-22-11	115-199
	C1	D	W1230	0665	20		28-22-11	001-099
	C1	D	W1230	3001B	18		28-22-11	001-099
	C1	D	W1232	0036	20		28-22-11	115-199
	C1	D	W1232	3001B	18		28-22-11	115-199
	C2	D	W1230	3002B	18		28-22-11	001-099
	C2	D	W1232	3002B	18		28-22-11	115-199
	X1	C	W1230	0666	20		28-22-11	001-099
	X1	C	W1232	0037	20		28-22-11	115-199
	X2	C	W1230	0693	18		28-22-11	001-099
	X2	C	W1232	0076	18		28-22-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section K00100

Page 5

Oct 09/2008

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
K00188		P037-00/ /		RELAY-FUEL BOOST PUMP CONT,L FWD				ALL
	A1	D	W1270	3005R	18		28-22-11	ALL
	A2	D	W1270	3006R	18		28-22-11	ALL
	B1	D	W1270	3005Y	18		28-22-11	ALL
	B2	D	W1270	3006Y	18		28-22-11	ALL
	C1	D	W1270	0410	20		28-25-11	ALL
	C1	D	W1270	0480	20		28-22-11	ALL
	C1	D	W1270	3005B	18		28-22-11	ALL
	C2	D	W1270	3006B	18		28-22-11	ALL
	X1	C	W1270	0472	20		28-22-11	ALL
	X1	C	W1270	0486	20		28-22-11	ALL
	X2	C	W1270	0536	20		28-22-11	ALL
K00189		P037-00/ /		RELAY-FUEL BOOST PUMP CONT,R AFT				ALL
	A1	D	W1270	3003R	18		28-22-11	ALL
	A2	D	W1270	3004R	18		28-22-11	ALL
	B1	D	W1270	3003Y	18		28-22-11	ALL
	B2	D	W1270	3004Y	18		28-22-11	ALL
	C1	D	W1270	0477	20		28-22-11	ALL
	C1	D	W1270	3003B	18		28-22-11	ALL
	C2	D	W1270	3004B	18		28-22-11	ALL
	X1	C	W1270	0478	20		28-22-11	ALL
	X2	C	W1270	0535	20		28-22-11	ALL
K00190		P033-00/ /		RELAY-FUEL BOOST PUMP CONT,R FWD				ALL
	A1	D	W1230	3005R	18		28-22-11	001-099
	A1	D	W1232	3005R	18		28-22-11	115-199
	A2	D	W1230	3006R	18		28-22-11	001-099
	A2	D	W1232	3006R	18		28-22-11	115-199
	B1	D	W1230	3005Y	18		28-22-11	001-099
	B1	D	W1232	3005Y	18		28-22-11	115-199
	B2	D	W1230	3006Y	18		28-22-11	001-099
	B2	D	W1232	3006Y	18		28-22-11	115-199
	C1	D	W1230	0669	20		28-22-11	001-099
	C1	D	W1230	3005B	18		28-22-11	001-099
	C1	D	W1232	0040	20		28-22-11	115-199
	C1	D	W1232	3005B	18		28-22-11	115-199
	C2	D	W1230	3006B	18		28-22-11	001-099
	C2	D	W1232	3006B	18		28-22-11	115-199
	X1	C	W1230	0695	20		28-22-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section K00100

Page 6

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
K00190		P033-00/ /		RELAY-FUEL BOOST PUMP CONT,R FWD (continued)				ALL
	X1	C	W1232	0078	20		28-22-11	115-199
	X2	C	W1230	0670	20		28-22-11	001-099
	X2	C	W1232	0041	20		28-22-11	115-199
K00191		P070-00/ /		RELAY-FUEL PUMP CONT,DC				ALL
	A1	D	W1250	0057	16		28-25-11	ALL
	A2	D	W1250	0058	16		28-25-11	ALL
	X1	C	W1250	0066	22		28-25-11	ALL
	X2	C	W1250	0059	20		28-25-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section K00100

Page 7 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
K00343		P036-00/ /		RELAY-FWD EQUIP SUPPLY FAN 1				ALL
	A1	E	W1260	5568	16		21-58-13	ALL
	A2	E	W1260	5571	16		21-58-13	ALL
	B1	E	W1260	5569	16		21-58-13	ALL
	B2	E	W1260	5572	16		21-58-13	ALL
	C1	E	W1260	0948	16		21-58-13	ALL
	C1	E	W1260	5570	16		21-58-13	ALL
	C2	E	W1260	5573	16		21-58-13	ALL
	X1	C	W1260	0948	16		21-58-13	ALL
	X2	C	W1260	5578	16		21-58-13	ALL
	11	C	W1260	0901	22		21-58-15	ALL
	12	C	W1260	0902	22		21-58-15	ALL
	13	C	W1260	0679	24		21-58-13	ALL
	14	C	W1260	0950	24		21-58-13	ALL
K00344		P037-00/ /		RELAY-FWD EQUIP SUPPLY FAN 2				ALL
	A1	E	W1270	0329	16		21-58-13	ALL
	A2	E	W1270	0334	16		21-58-13	ALL
	B1	E	W1270	0330	16		21-58-13	ALL
	B2	E	W1270	0335	16		21-58-13	ALL
	C1	E	W1270	0331	16		21-58-13	ALL
	C1	E	W1270	0390	16		21-58-13	ALL
	C2	E	W1270	0336	16		21-58-13	ALL
	X1	C	W1270	0390	16		21-58-13	ALL
	X2	C	W1270	0383	16		21-58-13	ALL
	11	C	W1270	0614	22		21-58-15	ALL
	12	C	W1270	0682	22		21-58-15	ALL
	13	C	W1270	0664	24		21-58-13	ALL
	13	C	W1270	0663	24		21-58-13	115-199
	14	C	W1270	0347	24		21-58-13	ALL
	14	C	W1270	0647	24		21-58-13	ALL
K00359		P033-00/ /		RELAY-EXT,ALT FLAP				ALL
	A1	E	W1230	0414	14		27-51-11	001-099
	A1	E	W1234	0015	14		27-51-11	115-199
	A2	E	W1230	0411	14		27-51-11	001-099
	A2	E	W1234	0012	14		27-51-11	115-199
	B1	E	W1230	0415	14		27-51-11	001-099
	B1	E	W1234	0016	14		27-51-11	115-199
	B2	E	W1230	0412	14		27-51-11	001-099
	B2	E	W1234	0013	14		27-51-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section K00300

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
K00359		P033-00/ /		RELAY-EXT,ALT FLAP (continued)				ALL
	C1	E	W1230	0416	14		27-51-11	001-099
	C1	E	W1234	0017	14		27-51-11	115-199
	C2	E	W1230	0413	14		27-51-11	001-099
	C2	E	W1234	0014	14		27-51-11	115-199
	X1	C	W1230	0417	24		27-51-11	001-099
	X1	C	W1234	0018	24		27-51-11	115-199
	X2	C	W1230	0420	24		27-51-11	001-099
	X2	C	W1234	0021	24		27-51-11	115-199
	11	C	W1230	0459	24		27-51-11	001-099
	11	C	W1234	0081	22		27-51-11	115-199
	12	C	W1230	0458	24		27-51-11	001-099
	12	C	W1230	0460	24		27-51-11	001-099
	12	C	W1234	0080	22		27-51-11	115-199
	12	C	W1234	0082	22		27-51-11	115-199
K00360		P033-00/ /		RELAY-RET,ALT FLAP				ALL
	A1	E	W1230	0405	14		27-51-11	001-099
	A1	E	W1230	0414	14		27-51-11	001-099
	A1	E	W1234	0006	14		27-51-11	115-199
	A1	E	W1234	0015	14		27-51-11	115-199
	A2	E	W1230	0408	14		27-51-11	001-099
	A2	E	W1230	0411	14		27-51-11	001-099
	A2	E	W1234	0009	14		27-51-11	115-199
	A2	E	W1234	0012	14		27-51-11	115-199
	B1	E	W1230	0406	14		27-51-11	001-099
	B1	E	W1230	0415	14		27-51-11	001-099
	B1	E	W1234	0007	14		27-51-11	115-199
	B1	E	W1234	0016	14		27-51-11	115-199
	B2	E	W1230	0409	14		27-51-11	001-099
	B2	E	W1230	0413	14		27-51-11	001-099
	B2	E	W1234	0010	14		27-51-11	115-199
	B2	E	W1234	0014	14		27-51-11	115-199
	C1	E	W1230	0407	14		27-51-11	001-099
	C1	E	W1230	0416	14		27-51-11	001-099
	C1	E	W1234	0008	14		27-51-11	115-199
	C1	E	W1234	0017	14		27-51-11	115-199
	C2	E	W1230	0410	14		27-51-11	001-099
	C2	E	W1230	0412	14		27-51-11	001-099
	C2	E	W1234	0011	14		27-51-11	115-199
	C2	E	W1234	0013	14		27-51-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section K00300

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
K00360		P033-00/ /		RELAY-RET,ALT FLAP (continued)				ALL
	X1	C	W1230	0417	24		27-51-11	001-099
	X1	C	W1230	0419	24		27-51-11	001-099
	X1	C	W1234	0018	24		27-51-11	115-199
	X1	C	W1234	0020	24		27-51-11	115-199
	X2	C	W1230	0418	24		27-51-11	001-099
	X2	C	W1234	0019	24		27-51-11	115-199
	11	C	W1230	0459	24		27-51-11	001-099
	11	C	W1230	0461	24		27-51-11	001-099
	11	C	W1234	0081	22		27-51-11	115-199
	11	C	W1234	0083	22		27-51-11	115-199
	12	C	W1230	0460	24		27-51-11	001-099
	12	C	W1234	0082	22		27-51-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section K00300

Page 3 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
K00415		P070-00/ /		RELAY-RECIRC FAN,L				ALL
	A1	E	W1252	0116	14		21-25-11	ALL
	A2	E	W1250	0001	14		21-25-11	ALL
	B1	E	W1252	0119	14		21-25-11	ALL
	B2	E	W1250	0002	14		21-25-11	ALL
	C1	E	W1252	0118	14		21-25-11	ALL
	C2	E	W1250	0003	14		21-25-11	ALL
	C2	E	W1250	0077	16		21-25-11	ALL
	X1	C	W1250	0004	24		21-25-11	ALL
	X2	C	W1250	0005	24		21-25-11	ALL
	11	C	W1250	0041	24		21-51-11	ALL
	12	C	W1250	0079	24		21-51-11	ALL
	13	C	W1250	0081	24		21-58-12	ALL
	13	C	W1250	0094	22		21-25-11	ALL
	14	C	W1250	0080	24		21-25-11	ALL
K00416		P037-00/ /		RELAY-RECIRC FAN,R				ALL
	A1	E	W1272	0210	14		21-25-11	ALL
	A2	E	W1270	0555	14		21-25-11	ALL
	B1	E	W1272	0211	14		21-25-11	ALL
	B2	E	W1270	0556	14		21-25-11	ALL
	C1	E	W1272	0212	14		21-25-11	ALL
	C2	E	W1270	0557	14		21-25-11	ALL
	X1	C	W1270	0561	24		21-25-11	ALL
	X2	C	W1270	0253	24		21-25-11	ALL
	11	C	W1270	6022	24		21-51-21	ALL
	12	C	W1270	0648	22		21-51-21	ALL
	13	C	W1270	0639	24		21-25-11	ALL
	14	C	W1270	0645	22		21-25-11	ALL
K00435		P034-00/ /		RELAY-NLG LT,RIGHT				ALL
	A1	E	W1242	0034	20		33-42-12	115-199
	A2	E	W1242	0029	20		33-42-12	115-199
	B1	E	W1242	0040	20		33-42-21	115-199
	B2	E	W1242	0041	20		33-42-21	115-199
	X1	C	W1242	0035	20		33-42-12	115-199
	X2	C	W1242	0033	20		33-42-12	115-199

HOOKUP LIST

D280N032

91-21-51

Section K00400

Page 1 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
K10010		E006-00/ /		RELAY-APU TRU START				ALL
	A1	BS	W2700	0016	08		24-32-41	ALL
	A1	E	W1026	0091	10		24-32-41	ALL
	A2	E	W1026	0117	10		24-32-41	ALL
	B1	BS	W2700	0017	08		24-32-41	ALL
	B1	E	W1026	0092	10		24-32-41	ALL
	B2	E	W1026	0118	10		24-32-41	ALL
	C1	BS	W2700	0018	08		24-32-41	ALL
	C1	E	W1026	0093	10		24-32-41	ALL
	C2	E	W1026	0119	10		24-32-41	ALL
	X1	C	W1024	0091	24		24-32-41	001-099
	X1	C	W1024	0038	24		24-32-41	115-199
	X2	C	W1024	0255	22		24-32-41	ALL
	11	C	W1024	0092	20		24-32-41	001-099
	11	C	W1024	0093	20		24-32-41	001-099
	11	C	W1024	0111	20		24-32-41	115-199
	11	C	W1024	0112	20		24-32-41	115-199
	12	C	W1024	0045	20		24-32-41	001-099
	12	C	W1024	0091	20		24-32-41	115-199
K10011		P033-00/ /		RELAY-OVRD FUEL BOOST PUMP CONT,L				ALL
	A1	D	W1230	3003R	16		28-22-11	001-099
	A1	D	W1232	3003R	16		28-22-11	115-199
	A2	D	W1230	3507R	16		28-22-11	ALL
	B1	D	W1230	3003Y	16		28-22-11	001-099
	B1	D	W1232	3003Y	16		28-22-11	115-199
	B2	D	W1230	3507Y	16		28-22-11	ALL
	C1	D	W1230	0668	18		28-22-11	001-099
	C1	D	W1230	3003B	16		28-22-11	001-099
	C1	D	W1232	0039	18		28-22-11	115-199
	C1	D	W1232	3003B	16		28-22-11	115-199
	C2	D	W1230	3507B	16		28-22-11	ALL
	X1	C	W1230	0685	20		28-22-11	ALL
	X2	C	W1230	0694	18		28-22-11	001-099
	X2	C	W1232	0077	18		28-22-11	115-199
	DED		W1230	3507Z			28-22-11	ALL
K10012		P037-00/ /		RELAY-OVRD FUEL BOOST PUMP CONT,R				ALL
	A1	D	W1270	3001R	16		28-22-11	ALL
	A2	D	W1270	3501R	16		28-22-11	ALL
	B1	D	W1270	3001Y	16		28-22-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section K10000

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
K10012		P037-00/ /		RELAY-OVRD FUEL BOOST PUMP CONT,R (continued)				ALL
	B2	D	W1270	3501Y	16		28-22-11	ALL
	C1	D	W1270	0522	18		28-22-11	ALL
	C1	D	W1270	3001B	16		28-22-11	ALL
	C2	D	W1270	3501B	16		28-22-11	ALL
	X1	C	W1270	8135	20		28-22-11	ALL
	X2	C	W1270	0475	18		28-22-11	ALL
	DED		W1270	3501Z			28-22-11	ALL
K10028		P034-00/ /		RELAY-FASTEN SEAT BELT				ALL
	A1	D	W1240	0040	18		33-24-11	001-099
	A1	D	W1240	0075	20		33-24-11	001-099
	A1	D	W1240	0040	20		33-24-11	115-199
	A2	D	W1240	0038	18		33-24-11	001-099
	A2	D	W1240	0038	20		33-24-11	115-199
	B1	D	W1240	0041	18		33-24-11	ALL
	B2	D	W1240	0037	18		33-24-11	001-099
	B2	D	W1240	0037	20		33-24-11	115-199
	C1	D	W1240	0103	20		23-31-13	ALL
	C2	D	W1240	0102	20		23-31-13	ALL
	X1	C	W1240	0072	24		33-24-11	001-099
	X1	C	W1240	0072	22		33-24-11	115-199
	X2	C	W1240	0113	24		33-24-11	001-099
	X2	C	W1240	0382	24		31-31-62	001-099
	X2	C	W1240	0113	22		33-24-11	115-199
K10057		P070-00/ /		RELAY-CARGO FAN,FWD				ALL
	A1	D	W1250	0009	20		21-43-11	ALL
	A2	D	W1252	0109	20		21-43-11	ALL
	B1	D	W1250	0010	20		21-43-11	ALL
	B2	D	W1252	0122	20		21-43-11	ALL
	C1	D	W1250	0011	20		21-43-11	ALL
	C2	D	W1252	0123	20		21-43-11	ALL
	X1	C	W1250	0012	24		21-43-11	ALL
	X2	C	W1250	0013	24		21-43-11	ALL
K10083		P070-00/ /		RELAY-HEATER,AFT CARGO				ALL
	A1	E	W1252	0117	14		21-44-11	ALL
	A2	E	W1250	0017	14		21-44-11	ALL
	B1	E	W1252	0121	14		21-44-11	ALL
	B2	E	W1250	0018	14		21-44-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section K10000

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
K10083		P070-00/ /		RELAY-HEATER,AFT CARGO (continued)				ALL
	C1	E	W1252	0120	14		21-44-11	ALL
	C2	E	W1250	0019	14		21-44-11	ALL
	X1	C	W1250	0020	22		21-44-11	ALL
	X1	C	W1250	0021	22		21-44-11	ALL
	X2	C	W1250	0022	22		21-44-11	ALL
K10084		P037-00/ /		RELAY-FAN,AFT CARGO				ALL
	A1	D	W1270	0307	18		21-44-11	ALL
	A2	D	W1270	0304	18		21-44-11	ALL
	B1	D	W1270	0306	18		21-44-11	ALL
	B2	D	W1270	0303	18		21-44-11	ALL
	C1	D	W1270	0305	18		21-44-11	ALL
	C2	D	W1270	0302	18		21-44-11	ALL
	X1	C	W1270	0308	24		21-44-11	ALL
	X2	C	W1270	0309	24		21-44-11	ALL
K10097		P033-00/ /		RELAY-EXT,ALT SLAT				ALL
	A1	E	W1230	0430	14		27-81-11	001-099
	A1	E	W1234	0031	14		27-81-11	115-199
	A2	E	W1230	0429	14		27-81-11	001-099
	A2	E	W1234	0030	14		27-81-11	115-199
	B1	E	W1230	0431	14		27-81-11	001-099
	B1	E	W1234	0032	14		27-81-11	115-199
	B2	E	W1230	0428	14		27-81-11	001-099
	B2	E	W1234	0029	14		27-81-11	115-199
	C1	E	W1230	0432	14		27-81-11	001-099
	C1	E	W1234	0033	14		27-81-11	115-199
	C2	E	W1230	0427	14		27-81-11	001-099
	C2	E	W1234	0028	14		27-81-11	115-199
	X1	C	W1230	0433	24		27-81-11	001-099
	X1	C	W1234	0034	22		27-81-11	115-199
	X2	C	W1230	0435	24		27-81-11	001-099
	X2	C	W1234	0036	22		27-81-11	115-199
	11	C	W1230	0463	24		27-81-11	001-099
	11	C	W1230	0465	24		27-81-11	001-099
	11	C	W1234	0085	22		27-81-11	115-199
	11	C	W1234	0087	22		27-81-11	115-199
	12	C	W1230	0462	24		27-81-11	001-099
	12	C	W1230	0464	24		27-81-11	001-099
	12	C	W1234	0084	22		27-81-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section K10000

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
K10097		P033-00/ /		RELAY-EXT,ALT SLAT (continued)				ALL
	12	C	W1234	0086	22		27-81-11	115-199
K10098		P033-00/ /		RELAY-RET,ALT SLAT				ALL
	A1	E	W1230	0421	14		27-81-11	001-099
	A1	E	W1230	0430	14		27-81-11	001-099
	A1	E	W1234	0022	14		27-81-11	115-199
	A1	E	W1234	0031	14		27-81-11	115-199
	A2	E	W1230	0424	14		27-81-11	001-099
	A2	E	W1230	0429	14		27-81-11	001-099
	A2	E	W1234	0025	14		27-81-11	115-199
	A2	E	W1234	0030	14		27-81-11	115-199
	B1	E	W1230	0422	14		27-81-11	001-099
	B1	E	W1230	0431	14		27-81-11	001-099
	B1	E	W1234	0023	14		27-81-11	115-199
	B1	E	W1234	0032	14		27-81-11	115-199
	B2	E	W1230	0425	14		27-81-11	001-099
	B2	E	W1230	0427	14		27-81-11	001-099
	B2	E	W1234	0026	14		27-81-11	115-199
	B2	E	W1234	0028	14		27-81-11	115-199
	C1	E	W1230	0423	14		27-81-11	001-099
	C1	E	W1230	0432	14		27-81-11	001-099
	C1	E	W1234	0024	14		27-81-11	115-199
	C1	E	W1234	0033	14		27-81-11	115-199
	C2	E	W1230	0426	14		27-81-11	001-099
	C2	E	W1230	0428	14		27-81-11	001-099
	C2	E	W1234	0027	14		27-81-11	115-199
	C2	E	W1234	0029	14		27-81-11	115-199
	X1	C	W1230	0433	24		27-81-11	001-099
	X1	C	W1230	0436	22		27-51-21	001-099
	X1	C	W1234	0034	22		27-81-11	115-199
	X1	C	W1234	0037	22		27-51-21	115-199
	X2	C	W1230	0434	24		27-81-11	001-099
	X2	C	W1234	0035	22		27-81-11	115-199
	11	C	W1230	0463	24		27-81-11	001-099
	11	C	W1234	0085	22		27-81-11	115-199
	12	C	W1230	0464	24		27-81-11	001-099
	12	C	W1234	0086	22		27-81-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section K10000

Page 4 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
K10186								115-199
	CAP	Y	W0808	0001	16		25-51-11	115-199
	CAP	Y	W0808	0002	16		25-51-11	115-199
	CAP	Y	W0808	0003	16		25-51-11	115-199
	CAP	Y	W0808	0004	20		25-51-11	115-199
	CAP	Y	W0808	0005	16		25-51-11	115-199
	CAP	Y	W0808	0006	16		25-51-11	115-199
	CAP	Y	W0808	0007	16		25-51-11	115-199
	CAP	Y	W0808	0008	22		25-51-11	115-199
	CAP	Y	W0808	0019	22		25-51-11	115-199
K10187		E006-00/ /		RELAY-AFT CARGO LOADER PDU				115-199
	A1	D	W1024	0269	18		25-51-21	115-199
	A2	D	W1024	0266	18		25-51-21	115-199
	B1	D	W1024	0270	18		25-51-21	115-199
	B2	D	W1024	0267	18		25-51-21	115-199
	C1	D	W1024	0271	18		25-51-21	115-199
	C2	D	W1024	0268	18		25-51-21	115-199
	X1	C	W1024	0275	22		25-51-21	115-199
	X2	C	W1024	0272	22		25-51-21	115-199
	Y1	C	W1024	0286	22		25-51-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section K10100

Page 1 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
K10297		P070-00/ /		RELAY-UTIL BUS L,GALLEYS				115-199
	A1	E	W4508	0007	10		24-51-14	115-199
	A2	E	W1252	0043	10		24-51-14	115-199
	B1	E	W4508	0008	10		24-51-14	115-199
	B2	E	W1252	0044	10		24-51-14	115-199
	C1	E	W4508	0009	10		24-51-14	115-199
	C2	E	W1252	0045	10		24-51-14	115-199
	X1	C	W1250	0050	20		24-51-14	115-199
	X2	C	W1250	0052	20		24-51-14	115-199
	13	C	W1250	0053	20		24-51-14	115-199
	14	C	W1250	0027	20		24-51-14	115-199
K10298		P037-00/ /		RELAY-UTIL BUS R,GALLEYS				ALL
	A1	E	W4510	0010	08		24-51-24	001-099
	A1	E	W4510	0011	10		24-51-24	115-199
	A2	E	W1272	0318	08		24-51-24	001-099
	A2	E	W1272	0101	08		24-51-24	115-199
	B1	E	W4510	0011	08		24-51-24	001-099
	B1	E	W4510	0012	10		24-51-24	115-199
	B2	E	W1272	0319	08		24-51-24	001-099
	B2	E	W1272	0102	08		24-51-24	115-199
	C1	E	W4510	0012	08		24-51-24	001-099
	C1	E	W4510	0013	10		24-51-24	115-199
	C2	E	W1272	0320	08		24-51-24	001-099
	C2	E	W1272	0103	08		24-51-24	115-199
	X1	C	W1270	0193	20		24-51-24	ALL
	X2	C	W1270	0192	20		24-51-24	ALL
	13	C	W1270	0194	20		24-51-24	ALL
	14	C	W1270	0011	20		24-51-24	ALL

HOOKUP LIST

D280N032

91-21-51

Section K10200

Page 1 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Station / WL / BL			Description	GA	CO	Diagram	Effectivity
	Term	Type	Bundle	Wire No.				
K10369	P036-00/ /			RELAY-CONTROL ALTERNATE EXTENSION			ALL	
	A1	E	W2260	0024	10	32-35-11	ALL	
	A2	E	W1260	0108	12	32-35-11	ALL	
	A2	E	W2520	0005	08	32-35-11	ALL	
	A3	E	W1260	0108	12	32-35-11	ALL	
	A4	E	W1260	0109	12	32-35-11	ALL	
	X1	C	W1260	0484	20	32-35-11	001-099	
	X1	C	W1260	0485	20	32-35-11	001-099	
	X1	C	W1260	0854	20	32-35-11	ALL	
	X1	C	W1260	0101	20	32-35-11	115-199	
	X2	C	W1260	0107	20	32-35-11	ALL	
	X2	C	W1260	0853	20	32-35-11	ALL	

HOOKUP LIST

D280N032

91-21-51

Section K10300

Page 1 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
K10564		P071-00/ /		RELAY-28V DC POWER				001-002, 115-199
	A1	F	W1254	0053	10		24-25-13	001-002, 115-199
	A1	F	W1254	0084	10		24-25-13	001-002, 115-199
	A1	F	W2396	0012	06		24-25-12	001-002, 115-199
	A2	F	W2392	0001	06		24-31-11	001-002, 115-199
	X1	C	W1254	0020	22		24-25-11	001-002, 115-199
	X2	C	W1254	0017	20		24-25-11	001-002, 115-199
	12	C	W1254	0022	20		24-25-11	001-002, 115-199
	13	C	W1254	0016	22		24-25-11	001-002, 115-199
K10565		P071-00/ /		RELAY-CAPT 115V AC FLT INSTR TRANSFER				ALL
	A1	E	W1254	0036	20		24-25-12	001-002, 115-199
	A1	E	W1254	0039	12		24-25-12	001-002, 115-199
	A1	E	W1254	0049	12		24-25-12	001-002, 115-199
	A1	E	W1254	0126	12		24-25-12	003-099
	A2	E	W1254	0075	12		24-51-72	ALL
	A3	E	W1254	0078	16		24-51-72	ALL
	B1	E	W1254	0037	20		24-25-12	001-002, 115-199
	B1	E	W1254	0040	12		24-25-12	001-002, 115-199
	B1	E	W1254	0047	12		24-25-12	001-002, 115-199
	B1	E	W1254	0125	12		24-25-12	003-099
	B2	E	W1254	0074	12		24-51-72	ALL
	B3	E	W1254	0077	16		24-51-72	ALL
	C1	E	W1254	0038	20		24-25-12	001-002, 115-199
	C1	E	W1254	0041	12		24-25-12	001-002, 115-199
	C1	E	W1254	0045	12		24-25-12	001-002, 115-199
	C1	E	W1254	0124	12		24-25-12	003-099
	C2	E	W1254	0073	12		24-51-72	ALL
	C3	E	W1254	0076	16		24-51-72	ALL
	X1	C	W1254	0008	22		24-25-11	001-002, 115-199
	X1	C	W1254	0009	22		24-25-11	ALL
	X1	C	W1254	0155	22		24-25-11	003-099
	X2	C	W1254	0010	20		24-25-11	ALL
	11	C	W1254	0055	22		24-25-13	001-002, 115-199
	11	C	W1254	0055	24		24-25-13	003-099
	12	C	W1254	0007	22		24-25-11	001-002, 115-199
	12	C	W1254	0112	22		24-25-11	003-099
	13	C	W1254	0085	22		24-25-11	001-002, 115-199
	13	C	W1254	0113	22		24-25-11	003-099

HOOKUP LIST

D280N032

91-21-51

Section K10500

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
K10566		P071-00/ /		RELAY-115V AC L TRANSFER				ALL
	A1	E	W1254	0049	12		24-25-12	001-002, 115-199
	A1	E	W1254	0052	12		24-25-12	001-002, 115-199
	A1	E	W1254	0133	12		24-25-12	003-099
	A2	E	W1254	0065	12		24-51-15	ALL
	A3	E	W1254	0068	14		24-51-15	ALL
	B1	E	W1254	0047	12		24-25-12	001-002, 115-199
	B1	E	W1254	0051	12		24-25-12	001-002, 115-199
	B1	E	W1254	0134	12		24-25-12	003-099
	B2	E	W1254	0066	12		24-51-15	ALL
	B3	E	W1254	0069	14		24-51-15	ALL
	C1	E	W1254	0045	12		24-25-12	001-002, 115-199
	C1	E	W1254	0050	12		24-25-12	001-002, 115-199
	C1	E	W1254	0135	12		24-25-12	003-099
	C2	E	W1254	0067	12		24-51-15	ALL
	C3	E	W1254	0070	14		24-51-15	ALL
	X1	C	W1254	0009	22		24-25-11	ALL
	X1	C	W1254	0018	22		24-25-11	ALL
	X2	C	W1254	0019	20		24-25-11	ALL
	11	C	W1254	0083	20		34-22-81	ALL
	12	C	W1254	0082	22		34-22-81	001-099
	12	C	W1254	0082	22		34-22-83	115-199
K10567		P071-00/ /		RELAY-115V AC R TRANSFER				ALL
	A1	E	W1254	0052	12		24-25-12	001-002, 115-199
	A1	E	W1254	0138	12		24-25-12	003-099
	A2	E	W1254	0064	12		24-51-25	ALL
	A3	E	W1254	0059	18		24-51-25	001-002, 115-199
	A3	E	W1254	0059	12		24-51-25	003-099
	B1	E	W1254	0051	12		24-25-12	001-002, 115-199
	B1	E	W1254	0054	12		24-25-13	ALL
	B1	E	W1254	0137	12		24-25-12	003-099
	B2	E	W1254	0063	12		24-51-25	ALL
	B3	E	W1254	0060	18		24-51-25	001-002, 115-199
	B3	E	W1254	0060	12		24-51-25	003-099
	C1	E	W1254	0050	12		24-25-12	001-002, 115-199
	C1	E	W1254	0136	12		24-25-12	003-099
	C2	E	W1254	0062	12		24-51-25	ALL
	C3	E	W1254	0061	18		24-51-25	001-002, 115-199
	C3	E	W1254	0061	12		24-51-25	003-099
	X1	C	W1254	0020	22		24-25-11	001-002, 115-199

HOOKUP LIST

D280N032

91-21-51

Section K10500

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Station / WL / BL		Description					
	Term	Type	Bundle	Wire No.	GA	CO	Diagram	Effectivity
K10567	P071-00/ /		RELAY-115V AC R TRANSFER (continued)					ALL
	X1	C	W1254	0018	22		24-25-11	ALL
	X1	C	W1254	0117	22		24-25-11	003-099
	X2	C	W1254	0021	20		24-25-11	ALL
	11	C	W1254	0081	22		33-51-11	ALL
	12	C	W1254	0080	22		33-51-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section K10500

Page 3 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
K10874		P037-00/ /		RLY-OVRD BST PMP,SEC CONT,R (SB 28A0105)				ALL
	A1	D	W1270	3502R	16		28-22-11	ALL
	A2	D	W1270	3501R	16		28-22-11	ALL
	B1	D	W1270	3502Y	16		28-22-11	ALL
	B2	D	W1270	3501Y	16		28-22-11	ALL
	C1	D	W1270	3502B	16		28-22-11	ALL
	C2	D	W1270	3501B	16		28-22-11	ALL
	X1	C	W1270	8137	20		28-22-11	ALL
	X2	C	W1270	8138	20		28-22-11	ALL
	DED		W1270	3501Z			28-22-11	ALL
	DED		W1270	3502Z			28-22-11	ALL
K10875		P033-00/ /		RLY-OVRD BST PMP,SEC CONT,L (SB 28A0105)				ALL
	A1	D	W1230	3508R	16		28-22-11	ALL
	A2	D	W1230	3507R	16		28-22-11	ALL
	B1	D	W1230	3508Y	16		28-22-11	ALL
	B2	D	W1230	3507Y	16		28-22-11	ALL
	C1	D	W1230	3508B	16		28-22-11	ALL
	C2	D	W1230	3507B	16		28-22-11	ALL
	X1	C	W1230	0134	20		28-22-11	ALL
	X2	C	W1230	0135	20		28-22-11	ALL
	DED		W1230	3507Z			28-22-11	ALL
	DED		W1230	3508Z			28-22-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section K10800

Page 1 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00004		P030-00/ /		LT-AC CONNECTED				ALL
	1	C	W2038	0004	24		24-41-12	ALL
	1	C	W2038	0006	24		24-41-12	ALL
	2	I	W2038	0003	20		24-41-12	ALL
L00005		P030-00/ /		LT-PWR NOT IN USE				ALL
	1	C	W2038	0006	24		24-41-12	ALL
	2	C	W2038	0005	24		24-41-12	ALL
L00007		P031-00/ /		LT-HOT BUS WARN,TIE BUS,L				ALL
	1	C	W1136	0006	18		24-21-51	ALL
	2	C	W1136	0005	18		24-21-51	ALL
L00008		P032-00/ /		LT-HOT BUS WARN,TIE BUS,R				ALL
	1	C	W1138	0038	18		24-21-51	001-099
	1	I	W1138	0038	18		24-21-51	115-199
	2	C	W1138	0039	18		24-21-51	001-099
	2	I	W1138	0039	18		24-21-51	115-199
L00009		P034-00/ /		LT-HOT BUS WARN,TIE BUS,EXT				ALL
	1	C	W1128	0006	18		24-21-51	ALL
	2	C	W1128	0007	18		24-21-51	ALL
L00010		P034-00/ /		LT-HOT BUS WARN				ALL
	1	C	W1128	0004	18		24-21-41	ALL
	2	C	W1128	0005	18		24-21-41	ALL
L00011		P031-00/ /		LT-HOT BUS WARN,GEN L				ALL
	1	C	W1136	0003	18		24-21-11	ALL
	2	C	W1136	0004	18		24-21-11	ALL
L00012		P031-00/ /		LT-HOT BUS WARN,115 VAC L				ALL
	1	C	W1136	0001	18		24-21-11	ALL
	2	C	W1136	0002	18		24-21-11	ALL
L00013		P032-00/ /		LT-HOT BUS WARN,115 VAC R				ALL
	1	I	W1138	0052	18		24-21-21	ALL
	2	I	W1138	0053	18		24-21-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section L00000

Page 1

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00014		P032-00/ /		LT-HOT BUS WARN,GEN R				ALL
	1	C	W1138	0050	18		24-21-21	001-099
	1	I	W1138	0050	18		24-21-21	115-199
	2	C	W1138	0051	18		24-21-21	001-099
	2	I	W1138	0051	18		24-21-21	115-199
L00015		P034-00/ /		LT-HOT BUS WARN,EXT PWR				ALL
	1	I	W1128	0021	18		24-41-11	ALL
	2	I	W1128	0022	18		24-41-11	ALL
L00020		WBL740/ /L		LT-ANTI-COLLISION,L WING				ALL
	J3		W3326	A-A			33-44-21	ALL
L00021		WBL740/ /R		LT-ANTI-COLLISION,R WING				ALL
	J3		W3426	A-A			33-44-21	ALL
L00024		P001-03/ /		LT-AUTOBRAKE				ALL
	1	1A	W0101	0079	22		33-16-41	ALL
	2	1A	W0101	0096	22		32-42-12	ALL
	3	1A	W0101	0086	22		33-16-41	ALL
L00069		0650/215/R007		LT-WING ILLUMINATION,R				001-002, 115-199
L00069		0650/215/R072		LT-WING ILLUMINATION,R				003-099
	GND	E	W4218	0038	14		33-41-11	ALL
	RTN	E	W4218	0037	14		33-41-11	ALL
	115V	E	W4218	0036	20		33-41-11	ALL
L00070		650/215/L072		LT-WING ILLUMINATION,L				ALL
	GND	E	W4202	0086	14		33-41-11	ALL
	RTN	E	W4202	0085	14		33-41-11	ALL
	115V	E	W4202	0084	20		33-41-11	ALL
L00071		381/190/L004		LT-WHEEL WELL,NOSE GEAR				ALL
	=G	E	W2152	0003	18		33-31-11	ALL
	=P	C	W2152	0002	18		33-31-11	ALL
	=P	C	W2152	0006	18		33-31-11	ALL
L00072		1180/185/R035		LT-WHEEL WELL,MAIN,R				ALL
	=G	E	W2516	0052	16		33-31-11	ALL
	=P	C	W2516	1017	16		33-31-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section L00000

Page 2

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00072		1180/185/R035		LT-WHEEL WELL,MAIN,R (continued)				ALL
	= P	C	W2516	1028	16		33-31-11	ALL
L00073		1072/196/R028		LT-WHEEL WELL,MAIN,R				ALL
	= G	E	W2516	0018	16		33-31-11	ALL
	= P	C	W2410	1013	16		33-31-11	ALL
	= P	C	W2516	1028	16		33-31-11	ALL
L00076		1072/196/L028		LT-WHEEL WELL,MAIN,L				ALL
	= G	E	W2410	0043	16		33-31-11	ALL
	= P	C	W2410	1004	16		33-31-11	ALL
L00077		1180/185/L035		LT-WHEEL WELL,MAIN,L				ALL
	= G	E	W2410	0042	16		33-31-11	ALL
	= P	C	W2410	1004	16		33-31-11	ALL
	= P	C	W2410	1013	16		33-31-11	ALL
L00078		0274/175/R025		LT-WHEEL WELL,NOSE GEAR				ALL
	= G	E	W2152	0004	18		33-31-11	ALL
	= P	C	W2152	0002	18		33-31-11	ALL
L00079		P063-00/ /		LT-RUNWAY TURNOFF,L				ALL
	= G	M	W3052	0011	16		33-42-21	ALL
	= P	M	W3052	0010	18		33-42-21	ALL
L00080		P062-00/ /		LT-RUNWAY TURNOFF,R				ALL
	= G	M	W3054	0023	16		33-42-21	ALL
	= P	M	W3054	0025	16		33-42-21	ALL
L00081		P028-00/ /		LT-REFUELING VALVE OPEN,R				ALL
	1	B	W1500	0021	20		28-21-23	ALL
	2	B	W1500	0020	20		28-21-23	ALL
	3	B	W1500	0022	20		28-21-23	ALL
L00082		P028-00/ /		LT-REFUELING VALVE OPEN,R CTR				ALL
	1	B	W1500	0015	20		28-21-23	ALL
	2	B	W1500	0014	20		28-21-23	ALL
	3	B	W1500	0016	20		28-21-23	ALL

HOOKUP LIST

D280N032

91-21-51

Section L00000

Page 3

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00083		P028-00/ /		LT-REFUELING VALVE OPEN,L				ALL
	1	B	W1500	0012	20		28-21-23	ALL
	2	B	W1500	0011	20		28-21-23	ALL
	3	B	W1500	0013	20		28-21-23	ALL

HOOKUP LIST

D280N032

91-21-51

Section L00000

Page 4 End

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00224		1230/200/R015		LT-AFT CARGO COMPT				ALL
	=G	C	W2662	0016	20		33-37-21	ALL
	=P	C	W2662	0012	18		33-37-21	ALL
	=P	C	W2662	0013	20		33-37-21	ALL
L00225		1380/200/R015		LT-AFT CARGO COMPT				ALL
	=G	C	W2662	0017	20		33-37-21	ALL
	=P	C	W2662	0013	20		33-37-21	ALL
	=P	C	W2662	0014	20		33-37-21	ALL
L00226		1430/200/R015		LT-AFT CARGO COMPT				ALL
	=G	C	W2662	0018	20		33-37-21	ALL
	=P	C	W2662	0014	20		33-37-21	ALL
	=P	C	W2662	0015	20		33-37-21	ALL
L00227		1530/200/R015		LT-AFT CARGO COMPT				ALL
	=G	C	W2662	0019	20		33-37-21	ALL
	=P	C	W2662	0015	20		33-37-21	ALL
L00228		1590/200/L015		LT-AFT CARGO COMPT				ALL
	=G	C	W2662	0027	20		33-37-21	ALL
	=P	C	W2662	0023	20		33-37-21	ALL
L00229		1470/200/L015		LT-AFT CARGO COMPT				ALL
	=G	C	W2662	0026	20		33-37-21	ALL
	=P	C	W2662	0022	20		33-37-21	ALL
	=P	C	W2662	0023	20		33-37-21	ALL
L00230		1390/200/L015		LT-AFT CARGO COMPT				ALL
	=G	C	W2662	0025	20		33-37-21	ALL
	=P	C	W2662	0021	20		33-37-21	ALL
	=P	C	W2662	0022	20		33-37-21	ALL
L00231		1290/200/L015		LT-AFT CARGO COMPT				ALL
	=G	C	W2662	0024	20		33-37-21	ALL
	=P	C	W2662	0020	18		33-37-21	ALL
	=P	C	W2662	0021	20		33-37-21	ALL
L00232		750/201/L015		LT-FWD CARGO COMPT				ALL
	=G	C	W4162	0022	18		33-37-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section L00200

Page 1

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00232		750/201/L015		LT-FWD CARGO COMPT (continued)				ALL
	= P	C	W4162	0014	18		33-37-11	ALL
L00233		630/200/L015		LT-FWD CARGO COMPT				ALL
	= G	C	W4162	0021	18		33-37-11	ALL
	= P	C	W4162	0013	18		33-37-11	ALL
	= P	C	W4162	0014	18		33-37-11	ALL
L00234		810/201/R015		LT-FWD CARGO COMPT				ALL
	= G	C	W4162	0025	18		33-37-11	ALL
	= P	C	W4162	0017	18		33-37-11	ALL
L00235		690/201/R015		LT-FWD CARGO COMPT				ALL
	= G	C	W4162	0024	18		33-37-11	ALL
	= P	C	W4162	0016	18		33-37-11	ALL
	= P	C	W4162	0017	18		33-37-11	ALL
L00237		P001-03/ /		LT-MKR BCN,CAPT,INNER				ALL
	1	1A	W0101	0023	22		33-16-51	ALL
	2	1A	W0101	0013	22		34-32-11	ALL
	3	1A	W0101	0024	22		33-16-51	ALL
L00238		P001-03/ /		LT-MKR BCN,CAPT,MIDDLE				ALL
	1	1A	W0101	0025	22		33-16-51	ALL
	2	1A	W0101	0014	22		34-32-11	ALL
	3	1A	W0101	0026	22		33-16-51	ALL
L00239		P001-03/ /		LT-MKR BCN,CAPT,OUTER				ALL
	1	1A	W0101	0027	22		33-16-51	ALL
	2	1A	W0101	0015	22		34-32-11	ALL
	3	1A	W0101	0028	22		33-16-51	ALL
L00240		P003-03/ /		LT-MKR BCN,F/O,INNER				ALL
	1	1A	W0033	0023	22		33-16-61	ALL
	2	1A	W0033	0015	22		34-32-11	ALL
	3	1A	W0033	0024	22		33-16-11	001-099
	3	1A	W0033	0024	22		33-16-51	115-199
L00241		P003-03/ /		LT-MKR BCN,F/O,MIDDLE				ALL
	1	1A	W0033	0025	22		33-16-61	ALL

HOOKUP LIST

D280N032

91-21-51

Section L00200

Page 2

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00241		P003-03/ /		LT-MKR BCN,F/O,MIDDLE (continued)				ALL
	2	1A	W0033	0014	22		34-32-11	ALL
	3	1A	W0033	0026	22		33-16-51	ALL
L00242		P003-03/ /		LT-MKR BCN,F/O,OUTER				ALL
	1	1A	W0033	0027	22		33-16-61	ALL
	2	1A	W0033	0013	22		34-32-11	ALL
	3	1A	W0033	0028	22		33-16-51	ALL
L00243		OSS495/ /RLE		LT-FUELING PANEL				ALL
	BLK		W3426	A-AF			28-21-11	ALL
	WHT		W3426	A-AD			28-21-11	ALL
L00252		682/270/L053		LT-ENTRY SPOT				115-199
	= G	C	W3570	0005	20		33-22-12	115-199
	= P	C	W3570	0004	22		33-22-12	115-199
L00253		0737/270/L053		LT-ENTRY SPOT				ALL
	= G	C	W3576	0025	20		33-22-12	001-099
	= G	C	W3570	0007	20		33-22-12	115-199
	= P	C	W3576	0024	22		33-22-12	001-099
	= P	C	W3570	0006	22		33-22-12	115-199
L00259		361/288/L024		LT-WORK,L FWD				ALL
	= G	C	W3576	0010	20		33-22-11	ALL
	= P	C	W3576	0002	22		33-22-11	ALL
L00260		0349/288/L024		LT-THRESHOLD,L FWD				ALL
	= G	C	W3576	0009	20		33-22-11	ALL
	= P	C	W3576	0003	22		33-22-11	ALL
L00267		1677/288/L032		LT-THRESHOLD				ALL
	= G	C	W3576	0056	20		33-22-14	ALL
	= P	C	W3576	0057	22		33-22-14	ALL
L00269		P001-03/ /		LT-CAUTION DISPLAY				ALL
	1	1A	W0101	0081	22		33-16-41	ALL
	2	1A	W0101	0102	22		22-14-11	ALL
	3	1A	W0101	0084	22		33-16-41	ALL

HOOKUP LIST

D280N032

91-21-51

Section L00200

Page 3

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00270		P028-00/ /		LT-DEFUEL VALVE,R				ALL
	1	B	W1500	0027	20		28-26-11	ALL
	2	B	W1500	0026	20		28-26-11	ALL
	3	B	W1500	0028	20		28-26-11	ALL
L00271		P028-00/ /		LT-DEFUEL VALVE,L				ALL
	1	B	W1500	0024	20		28-26-11	ALL
	2	B	W1500	0023	20		28-26-11	ALL
	3	B	W1500	0025	20		28-26-11	ALL
L00275		258/260/L024		LT-DOME,CAPT				ALL
	=G	C	W0200	0004	22		33-11-31	001-099
	=G	C	W2078	0202	22		33-11-31	115-199
	=P	C	W0200	0003	22		33-11-31	001-099
	=P	C	W2078	0201	22		33-11-31	115-199
L00276		258/260/R024		LT-DOME,F/O				ALL
	=G	C	W0202	0004	22		33-11-31	001-099
	=G	C	W2078	0200	22		33-11-31	115-199
	=P	C	W0202	0003	22		33-11-31	001-099
	=P	C	W2078	0199	24		33-11-31	115-199
L00277		0247/255/L018		LT-MAP,CAPT OVHD				ALL
	=G	C	W0200	0002	22		33-14-11	001-099
	=G	C	W2364	0028	20		33-14-11	115-199
	=P	C	W0200	0001	22		33-14-11	001-099
	=P	C	W2364	0027	22		33-14-11	115-199
L00278		247/255/R018		LT-MAP,F/O OVHD				ALL
	=G	C	W0202	0002	22		33-14-11	001-099
	=G	C	W2366	0027	20		33-14-11	115-199
	=P	C	W0202	0001	22		33-14-11	001-099
	=P	C	W2366	0014	22		33-14-11	115-199
L00279		P007-00/ /		LT-CAPT CHART				ALL
	=G	C	W0010	0002	22		33-14-21	ALL
	WHT		W0010	C-WT			33-14-21	ALL
L00280		P007-00/ /		LT-F/O CHART				ALL
	=G	C	W0012	0002	22		33-14-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section L00200

Page 4

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00280		P007-00/ /		LT-F/O CHART (continued)				ALL
	WHT		W0012	C-WT			33-14-21	ALL
L00283		P011-01/ /		LT PLATE-ROW A				ALL
	= P	B	W0124	0405	20		33-13-61	ALL
L00284		P011-01/ /		LT PLATE-ROW A/B				ALL
	= P	B	W0124	0405	20		33-13-61	ALL
	= P	B	W0124	0406	20		33-13-61	ALL
L00285		P011-01/ /		LT PLATE-ROW B/C				ALL
	= P	B	W0124	0406	20		33-13-61	ALL
	= P	B	W0124	0407	20		33-13-61	ALL
L00286		P011-01/ /		LT PLATE-ROW C/D				ALL
	= G	G	W0124	0402	16		33-13-61	ALL
	= P	B	W0124	0407	20		33-13-61	ALL
	= P	B	W0128	0094	18		33-13-61	ALL
L00287		P011-01/ /		LT PLATE-ROW D/E				ALL
	= P	B	W0124	0408	20		33-13-61	ALL
L00288		P011-01/ /		LT PLATE-ROW E/F				ALL
	= P	B	W0124	0408	20		33-13-61	ALL
	= P	B	W0124	0410	20		33-13-61	ALL
L00289		P011-01/ /		LT PLATE-ROW F/G				ALL
	= P	B	W0124	0403	20		33-13-61	ALL
	= P	B	W0124	0410	20		33-13-61	ALL
L00290		P011-01/ /		LT PLATE-ROW G/H				ALL
	= P	B	W0124	0403	20		33-13-61	ALL
	= P	B	W0124	0404	20		33-13-61	ALL
L00291		P011-03/ /		LT PLATE-ROW J				ALL
	= P	B	W0126	0341	20		33-13-61	ALL
L00292		P011-03/ /		LT PLATE-ROW J/K				ALL
	= P	B	W0126	0341	20		33-13-61	ALL
	= P	B	W0126	0342	20		33-13-61	ALL

HOOKUP LIST

D280N032

91-21-51

Section L00200

Page 5

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00293		P011-03/ /		LT PLATE-ROW K/L				ALL
	= P	B	W0126	0342	20		33-13-61	ALL
	= P	B	W0126	0343	20		33-13-61	ALL
L00294		P011-03/ /		LT PLATE-ROW L/M				ALL
	= P	B	W0126	0343	20		33-13-61	ALL
	= P	B	W0128	0088	18		33-13-61	ALL
L00295		P011-03/ /		LT PLATE-ROW M/N				ALL
	= P	B	W0126	0347	20		33-13-61	ALL
L00296		P011-03/ /		LT PLATE-ROW N/P				ALL
	= P	B	W0126	0347	20		33-13-61	ALL
	= P	B	W0126	0348	20		33-13-61	ALL
L00297		P011-03/ /		LT PLATE-ROW P/Q				ALL
	= P	B	W0126	0348	20		33-13-61	ALL
	= P	B	W0126	0349	20		33-13-61	ALL
L00298		P011-03/ /		LT PLATE-ROW Q/R				ALL
	= P	B	W0126	0349	20		33-13-61	ALL
	= P	B	W0126	0350	20		33-13-61	ALL
L00299		P011-03/ /		LT PLATE-ROW R/S				ALL
	= P	B	W0126	0350	20		33-13-61	ALL
	= P	B	W0126	0351	20		33-13-61	ALL

HOOKUP LIST

D280N032

91-21-51

Section L00200

Page 6 End

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00300		P011-02/ /		LT PLATE-ROW A				ALL
	= P	B	W0128	0248	20		33-13-61	ALL
L00301		P011-02/ /		LT PLATE-ROW A/B				ALL
	= P	B	W0128	0248	20		33-13-61	ALL
	= P	B	W0128	0249	20		33-13-61	ALL
L00302		P011-02/ /		LT PLATE-ROW B/C				ALL
	= P	B	W0128	0249	20		33-13-61	ALL
	= P	B	W0128	0250	20		33-13-61	ALL
L00303		P011-02/ /		LT PLATE-ROW C/D				ALL
	= P	B	W0128	0050	18		33-13-61	ALL
	= P	B	W0128	0250	20		33-13-61	ALL
L00304		P011-02/ /		LT PLATE-ROW D/E				ALL
	= P	B	W0128	0237	20		33-13-61	ALL
L00305		P011-02/ /		LT PLATE-ROW E/F				ALL
	= P	B	W0128	0237	20		33-13-61	ALL
	= P	B	W0128	0238	20		33-13-61	ALL
L00306		P011-02/ /		LT PLATE-ROW F/G				ALL
	= P	B	W0128	0238	20		33-13-61	ALL
	= P	B	W0128	0239	20		33-13-61	ALL
L00307		P011-02/ /		LT PLATE-ROW G/H				ALL
	= P	B	W0128	0239	20		33-13-61	ALL
	= P	B	W0128	0240	20		33-13-61	ALL
L00308		P011-04/ /		LT PLATE-ROW J				ALL
	= P	B	W0130	0422	20		33-13-61	ALL
L00309		P011-04/ /		LT PLATE-ROW J/K				ALL
	= P	B	W0130	0422	20		33-13-61	ALL
	= P	B	W0130	0423	20		33-13-61	ALL
L00310		P011-04/ /		LT PLATE-ROW K/L				ALL
	= P	B	W0130	0423	20		33-13-61	ALL
	= P	B	W0130	0424	20		33-13-61	ALL

HOOKUP LIST

D280N032

91-21-51

Section L00300

Page 1

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00311		P011-04/ /		LT PLATE-ROW L/M				ALL
	=P	B	W0128	0113	18		33-13-61	ALL
	=P	B	W0130	0424	20		33-13-61	ALL
L00312		P011-04/ /		LT PLATE-ROW M/N				ALL
	=P	B	W0130	0426	20		33-13-61	ALL
L00313		P011-04/ /		LT PLATE-ROW N/P				ALL
	=P	B	W0130	0426	20		33-13-61	ALL
	=P	B	W0130	0427	20		33-13-61	ALL
L00314		P011-04/ /		LT PLATE-ROW P/Q				ALL
	=P	B	W0130	0427	20		33-13-61	ALL
	=P	B	W0130	0428	20		33-13-61	ALL
L00315		P011-04/ /		LT PLATE-ROW Q/R				ALL
	=P	B	W0130	0428	20		33-13-61	ALL
	=P	B	W0130	0429	20		33-13-61	ALL
L00316		P011-04/ /		LT PLATE-ROW R/S				ALL
	=P	B	W0130	0429	20		33-13-61	ALL
	=P	B	W0130	0430	20		33-13-61	ALL
L00324		350/288/L005		LT-CALL,ATTEND,FWD				ALL
	=G	H	W3672	0122	20		33-25-11	ALL
	=P	Z2	W3672	0010	22		23-42-11	ALL
L00335		0263/196/L031		LT-FWD ELEC EQUIP CTR				ALL
	=G		W2356	B-L			33-31-41	001-099
	=G		W4086	B-L			33-31-41	115-199
	=P		W2356	A-L			33-31-41	001-099
	=P		W4086	A-L			33-31-41	115-199
L00336		0263/196/R031		LT-FWD ELEC EQUIP CTR				ALL
	=G		W2356	B-M			33-31-41	001-099
	=G		W4086	B-M			33-31-41	115-199
	=P		W2356	A-M			33-31-41	001-099
	=P		W4086	A-M			33-31-41	115-199

HOOKUP LIST

D280N032

91-21-51

Section L00300

Page 2

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00337		0362/201/R041		LT-MN ELEC EQUIP CTR				ALL
	= G		W4086	B-A			33-31-41	ALL
	= P		W4086	A-A			33-31-41	ALL
L00338		0418/198/R013		LT-MN ELEC EQUIP CTR				ALL
	= G		W4086	B-B			33-31-41	ALL
	= P		W4086	A-B			33-31-41	ALL
L00339		0418/198/L006		LT-MN ELEC EQUIP,CTR				ALL
	= G		W4086	B-C			33-31-41	ALL
	= P		W4086	A-C			33-31-41	ALL
L00340		0418/198/L029		LT-MN ELEC EQUIP CTR				ALL
	= G		W4086	B-D			33-31-41	ALL
	= P		W4086	A-D			33-31-41	ALL
L00341		0463/201/L003		LT-MN ELEC EQUIP CTR				ALL
	= G		W4086	B-E			33-31-41	ALL
	= P		W4086	A-E			33-31-41	ALL
L00342		0471/201/R016		LT-MN ELEC EQUIP CTR				ALL
	= G		W4086	B-F			33-31-41	ALL
	= P		W4086	A-F			33-31-41	ALL
L00343		0477/201/L016		LT-MN ELEC EQUIP,CTR				ALL
	= G		W4086	B-G			33-31-41	ALL
	= P		W4086	A-G			33-31-41	ALL
L00344		961/160/L030		LT-AIR COND COMPT LEFT				ALL
	BLK		W2406	A-BK			33-31-21	ALL
	WHT		W2406	A-WT			33-31-21	ALL
L00345		1037/137/L016		LT-AIR COND COMPT LEFT				ALL
	BLK		W2406	B-BK			33-31-21	ALL
	WHT		W2406	B-WT			33-31-21	ALL
L00346		961/160/R045		LT-AIR COND COMPT RIGHT				ALL
	BLK		W2506	A-BK			33-31-21	ALL
	WHT		W2506	A-WT			33-31-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section L00300

Page 3

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00347		1037/137/R020		LT-AIR COND COMPT RIGHT				ALL
	BLK		W2506	B-BK			33-31-21	ALL
	WHT		W2506	B-WT			33-31-21	ALL
L00348		1727/245/L030		LT-TAILCONE COMPT				ALL
	BLK		W2818	A-AP			33-31-31	ALL
	WHT		W2818	A-AG			33-31-31	ALL
L00349		1727/245/R030		LT-TAILCONE COMPT				ALL
	BLK		W2818	B-AP			33-31-31	ALL
	WHT		W2818	B-AG			33-31-31	ALL
L00350		1864/275/L009		LT-TAILCONE COMPT				ALL
	BLK		W2818	B-CP			33-31-31	ALL
	WHT		W2818	B-CG			33-31-31	ALL
L00351		1885/224/R016		LT-APU COMPT				ALL
	BLK		W2822	A-B			33-31-31	ALL
	WHT		W2822	B-B			33-31-31	ALL
L00352		319/290/L017		LT-THRESHOLD,FWD LAV A				001-099
L00352		319/289/L017		LT-THRESHOLD,FWD LAV A				115-199
	= G	C	W3572	0061	20		33-26-31	ALL
	= P	C	W3572	0059	22		33-26-31	ALL
L00353								001-099
	CAP	Y	W3572	0060	22		33-26-31	001-099
	CAP	Y	W3572	0062	20		33-26-31	001-099
L00354		1300/289/L019		LT-THRESHOLD,MID LAV C				001-099
L00354		1303/289/L019		LT-THRESHOLD,MID LAV C				115-199
	= G	C	W3672	0076	20		33-26-31	ALL
	= P	C	W3672	0043	22		33-26-31	ALL
L00355		1300/289/R019		LT-THRESHOLD,MID LAV D				001-099
L00355		1303/289/R019		LT-THRESHOLD,MID LAV D				115-199
	= G	C	W3672	0077	20		33-26-31	ALL
	= P	C	W3672	0094	22		33-26-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section L00300

Page 4

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00356		FSS97/184/W88		LT-FIXED LDG,LEFT				ALL
	=G	M	W3346	1003	12		33-42-11	ALL
	=P	M	W3346	1001	12		33-42-11	ALL
L00357		FSS94.5/ /RLE		LT-FIXED LDG,RIGHT				ALL
	=G	M	W3424	1003	12		33-42-12	ALL
	=P	M	W3424	1002	12		33-42-12	ALL
L00358		P063-00/ /		LT-NLG LDG,LEFT				ALL
	=G	M	W3052	0004	12		33-42-11	ALL
	=P	M	W3052	0003	12		33-42-11	ALL
L00359		P062-00/ /		LIGHT-NLG LDG,RIGHT				ALL
	=G	M	W3052	0041	12		33-42-12	001-099
	=G	M	W3054	0015	12		33-42-12	115-199
	=P	M	W3052	0040	12		33-42-12	001-099
	=P	M	W3054	0014	12		33-42-12	115-199
L00361		P001-01/ /		LT PLATE-LH INSTR SOURCE CONT PNL				ALL
	=G	G	W0017	0046	20		33-13-11	ALL
	=P	B	W0017	0047	20		33-13-11	ALL
L00367		P003-03/ /		LT PLATE-RH INSTR SOURCE CONT PNL				ALL
	=G	G	W0033	0056	20		33-13-21	ALL
	=P	B	W0033	0057	20		33-13-21	ALL
L00370		P003-01/ /		LT PLATE-LANDING GEAR/FLAP CONTROL				ALL
	=G	G	W0002	0043	20		33-13-21	ALL
	=P	B	W0002	0042	20		33-13-21	ALL
L00371		P001-03/ /		LT PLATE-CAUTION CANCEL/RECALL				ALL
	=G	G	W0101	0125	20		33-13-12	ALL
	=P	B	W0101	0124	20		33-13-12	ALL
L00372		P001-03/ /		LT PLATE-AUTO BRAKE CONTROL				ALL
	=G	G	W0101	0090	20		33-13-12	ALL
	=P	B	W0101	0089	20		33-13-12	ALL
L00373		P037-00/ /		LT-HOT BUS WARN,GND SVCE				ALL
	1	C	W1272	0070	22		24-51-52	ALL

HOOKUP LIST

D280N032

91-21-51

Section L00300

Page 5

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00373		P037-00/ /		LT-HOT BUS WARN,GND SVCE (continued)				ALL
	2	C	W1272	0071	22		24-51-52	001-099
	2	C	W1272	0071	20		24-51-52	115-199
L00374		590/201/R015		LT-FWD CARGO COMPT				ALL
	=G	C	W4162	0023	18		33-37-11	ALL
	=P	C	W4162	0015	18		33-37-11	ALL
	=P	C	W4162	0016	18		33-37-11	ALL
L00375		244/215/L048		LT-FLT KIT,CAPT				ALL
	=G		W2364	A-B			33-14-31	ALL
	=P		W2364	A-A			33-14-31	ALL
L00376		240/220/R048		LT-FLT KIT,F/O				ALL
	=G		W2366	A-B			33-14-31	ALL
	=P		W2366	A-A			33-14-31	ALL
L00377		0275/245/R033		LT-UTILITY,S/OBS				ALL
	=G		W2366	A-D			33-14-31	ALL
	=P		W2366	A-C			33-14-31	ALL
L00379		OSS515/ /RLE		LT-FUELING PANEL				ALL
	BLK		W3426	A-AG			28-21-11	ALL
	WHT		W3426	A-AE			28-21-11	ALL
L00380		1825/282/R016		LT-TAILCONE COMPT				ALL
	BLK		W2818	B-BP			33-31-31	ALL
	WHT		W2818	B-BG			33-31-31	ALL
L00381		0520/200/R028		LT-MN ELEC EQUIP,CTR				ALL
	=G		W4162	A-GA			33-37-11	ALL
	=P		W4162	A-PA			33-37-11	ALL
L00384		0245/182/		LT-FWD ELEC EQUIP,CTR				ALL
	=G		W2356	B-K			33-31-41	001-099
	=G		W4086	B-K			33-31-41	115-199
	=P		W2356	A-K			33-31-41	001-099
	=P		W4086	A-K			33-31-41	115-199

HOOKUP LIST

D280N032

91-21-51

Section L00300

Page 6

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00385		0568/ /		LT-NO.1 CARGO DOOR,LOWER FWD				ALL
	BLK		W0818	B-A			33-37-11	ALL
	WHT		W0818	A-A			33-37-11	ALL
L00386		0568/ /		LT-NO.1 CARGO DOOR,CENTER				ALL
	BLK		W0818	B-B			33-37-11	ALL
	WHT		W0818	A-B			33-37-11	ALL
L00387		0594/ /		LT-NO.1 CARGO DOOR,LOWER AFT				ALL
	BLK		W0818	B-C			33-37-11	ALL
	WHT		W0818	A-C			33-37-11	ALL
L00388		0612/ /		LT-NO.1 CARGO DOOR,UPPER FWD				ALL
	BLK		W0818	B-D			33-37-11	ALL
	WHT		W0818	A-D			33-37-11	ALL
L00389		0612/ /		LT-FWD CARGO DOOR,UPPER AFT				ALL
	BLK		W0818	B-E			33-37-11	ALL
	WHT		W0818	A-E			33-37-11	ALL
L00390		1388/ /		LT-NO.2 CARGO DOOR,LOWER FWD				ALL
	BLK		W1018	B-A			33-37-21	ALL
	WHT		W1018	A-A			33-37-21	ALL
L00391		1388/ /		LT-NO.2 CARGO DOOR,CENTER				ALL
	BLK		W1018	B-B			33-37-21	ALL
	WHT		W1018	A-B			33-37-21	ALL
L00392		1415/ /		LT-NO.2 CARGO DOOR,LOWER AFT				ALL
	BLK		W1018	B-C			33-37-21	ALL
	WHT		W1018	A-C			33-37-21	ALL
L00393		1432/ /		LT-NO.2 CARGO DOOR,UPPER FWD				ALL
	BLK		W1018	B-D			33-37-21	ALL
	WHT		W1018	A-D			33-37-21	ALL
L00394		1432/ /		LT-NO.2 CARGO DOOR,UPPER AFT				ALL
	BLK		W1018	B-E			33-37-21	ALL
	WHT		W1018	A-E			33-37-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section L00300

Page 7

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00395		P063-00/ /		LT-TAXI				001-099
	=G	M	W3052	0050	16		33-42-31	001-099
	=P	M	W3052	0047	16		33-42-31	001-099
L00396		P003-01/ /		LT-DOORS				ALL
	1	1A	W0002	0071	22		33-16-61	ALL
	2	1A	W0002	0103	22		32-61-12	ALL
	3	1A	W0002	0063	22		33-16-51	ALL
	4	1A	W0002	0139	22		33-16-31	ALL
	5	1A	W0002	0131	22		32-61-12	ALL
	6	1A	W0002	0145	22		33-16-41	ALL
L00397		P003-01/ /		LT-GEAR				ALL
	1	1A	W0002	0070	22		33-16-61	ALL
	2	1A	W0002	0104	22		32-61-12	ALL
	3	1A	W0002	0060	22		33-16-51	ALL
	4	1A	W0002	0140	22		33-16-31	ALL
	5	1A	W0002	0132	22		32-61-12	ALL
	6	1A	W0002	0146	22		33-16-41	ALL
L00398		P003-01/ /		LT-NOSE				ALL
	1	1A	W0002	0057	22		33-16-61	ALL
	2	1A	W0002	0109	22		32-61-21	ALL
	3	1A	W0002	0061	22		33-16-51	ALL
	4	1A	W0002	0143	22		33-16-31	ALL
	5	1A	W0002	0135	22		32-61-21	ALL
	6	1A	W0002	0149	22		33-16-41	ALL
L00399		P003-01/ /		LT-RIGHT				ALL
	1	1A	W0002	0058	22		33-16-61	ALL
	2	1A	W0002	0110	22		32-61-21	ALL
	3	1A	W0002	0064	22		33-16-51	ALL
	4	1A	W0002	0141	22		33-16-31	ALL
	5	1A	W0002	0136	22		32-61-21	ALL
	6	1A	W0002	0147	22		33-16-41	ALL

HOOKUP LIST

D280N032

91-21-51

Section L00300

Page 8 End

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00400		P003-01/ /		LT-LEFT				ALL
	1	1A	W0002	0059	22		33-16-61	ALL
	2	1A	W0002	0111	22		32-61-21	ALL
	3	1A	W0002	0056	22		33-16-51	ALL
	4	1A	W0002	0142	22		33-16-31	ALL
	5	1A	W0002	0137	22		32-61-21	ALL
	6	1A	W0002	0148	22		33-16-41	ALL
L00401		P062-00/ /		LT-FIRE,APU				ALL
	=G	C	W3060	0002	20		26-15-12	ALL
	=P	\$	W3060	0001	20		26-15-12	ALL
L00402		P028-00/ /		LT-REFUELING VALVE OPEN,L CTR				ALL
	1	B	W1500	0018	20		28-21-23	ALL
	2	B	W1500	0017	20		28-21-23	ALL
	3	B	W1500	0019	20		28-21-23	ALL
L00403		360/288/L040		LT-GIRT BAR ANN,NO 1 PASS DR,LEFT				ALL
	1	B	W3582	0009	20		25-66-11	ALL
	2	B	W3582	0009	20		25-66-11	001-099
	2	B	W3582	0003	20		25-66-11	ALL
	C	B	W3582	0002	20		25-66-11	ALL
L00404		352/286/R050		LT-GIRT BAR ANN,NO 1 PASS DR,RIGHT				ALL
	1	B	W3682	0009	20		25-66-11	ALL
	2	B	W3682	0009	20		25-66-11	001-099
	2	B	W3682	0003	20		25-66-11	ALL
	C	B	W3682	0002	20		25-66-11	ALL
L00405		720/285/L050		LT-GIRT BAR ANN,NO 2 PASS DR,LEFT				ALL
	1	B	W3582	0010	20		25-66-11	ALL
	2	B	W3582	0010	20		25-66-11	001-099
	2	B	W3582	0006	20		25-66-11	ALL
	C	B	W3582	0005	20		25-66-11	ALL
L00406		712/282/R050		LT-GIRT BAR ANN,NO 2 PASS DR,RIGHT				ALL
	1	B	W3682	0010	20		25-66-11	ALL
	2	B	W3682	0010	20		25-66-11	001-099
	2	B	W3682	0006	20		25-66-11	ALL
	C	B	W3682	0005	20		25-66-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section L00400

Page 1

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00407		1664/290/L060		LT-GIRT BAR ANN,NO 4 PASS DR,LEFT				ALL
	1	B	W3582	0011	20		25-66-11	ALL
	2	B	W3582	0011	20		25-66-11	001-099
	2	B	W3582	0008	20		25-66-11	ALL
	C	B	W3582	0007	20		25-66-11	ALL
L00408		1679/280/R060		LT-GIRT BAR ANN,NO 4 PASS DR,RIGHT				ALL
	1	B	W3682	0011	20		25-66-11	ALL
	2	B	W3682	0011	20		25-66-11	001-099
	2	B	W3682	0008	20		25-66-11	ALL
	C	B	W3682	0007	20		25-66-11	ALL
L00409		0737/277/L037		LT-MID FWD ATTND SIGN				001-099
	1	C	W3592	0001	20		33-24-12	001-099
	2	C	W3592	0002	16		33-24-12	001-099
	3	C	W3592	0003	20		33-24-12	001-099
L00412		1502/290/L001		LT-MID AFT ATTND SIGN				001-099
L00412		1502/290/R001		LT-MID AFT ATTND SIGN				115-199
	1	C	W3706	0857	20		33-24-14	ALL
	2	C	W3706	0858	20		33-24-14	ALL
	3	C	W3706	0851	16		33-24-14	ALL
L00413		P010-00/*/		LT-PARK BRAKE				ALL
	1	1A	W1115	0389	22		33-16-61	ALL
	2	1A	W1115	0387	22		32-44-11	ALL
	3	1A	W1115	0388	22		33-16-51	ALL
L00418		378/298/R002		LT-LAVATORY OCCUPIED SIGN				001-099
	GND	C	W3572	0054	16		33-26-21	001-099
	LAV	C	W3572	0053	16		33-26-21	001-099
	OCC	C	W3572	0125	16		33-26-21	001-099
L00419		1243/289/L001		LT-LAVATORY OCCUPIED SIGN				ALL
	GND	C	W3672	0073	16		33-26-21	001-099
	GND	C	W3672	0073	20		33-26-21	115-199
	LAV	C	W3672	0071	16		33-26-21	001-099
	LAV	C	W3672	0159	16		33-26-21	001-099
	LAV	C	W3672	0069	22		33-26-21	115-199
	LAV	C	W3672	0179	22		33-26-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section L00400

Page 2

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00419		1243/289/L001		LT-LAVATORY OCCUPIED SIGN (continued)				ALL
	OCC	C	W3672	0078	16		33-26-21	001-099
	OCC	C	W3672	0158	16		33-26-21	001-099
	OCC	C	W3672	0070	22		33-26-21	115-199
	OCC	C	W3672	0072	22		33-26-21	115-199
L00420		1316/289/L001		LT-LAVATORY OCCUPIED SIGN				001-099
	GND	C	W3672	0160	16		33-26-21	001-099
	LAV	C	W3672	0159	16		33-26-21	001-099
	OCC	C	W3672	0158	16		33-26-21	001-099
L00429		P011-01/ /		LT PLATE-ROW H				ALL
	= P	B	W0124	0404	20		33-13-61	ALL
	= P	B	W0128	0095	18		33-13-61	ALL
L00430		P011-03/ /		LT PLATE-ROW S				ALL
	= G	G	W0126	0323	16		33-13-61	ALL
	= P	B	W0126	0351	20		33-13-61	ALL
	= P	B	W0128	0089	18		33-13-61	ALL
L00431		P011-02/ /		LT PLATE-ROW H				ALL
	= G	G	W0128	0219	16		33-13-61	ALL
	= P	B	W0128	0051	18		33-13-61	ALL
	= P	B	W0128	0240	20		33-13-61	ALL
L00432		P011-04/ /		LT PLATE-ROW S				ALL
	= G	G	W0130	0417	16		33-13-61	ALL
	= P	B	W0128	0111	18		33-13-61	ALL
	= P	B	W0130	0430	20		33-13-61	ALL
L00433		P003-01/ /		LT-LEADING EDGE				ALL
	1	1A	W0002	0069	22		33-16-51	ALL
	2	1A	W0002	0076	24		27-51-41	ALL
	3	1A	W0002	0074	22		33-16-51	ALL
L00434		P003-01/ /		LT-TRAILING EDGE				ALL
	1	1A	W0002	0068	22		33-16-51	ALL
	2	1A	W0002	0077	24		27-51-41	ALL
	3	1A	W0002	0075	22		33-16-51	ALL

HOOKUP LIST

D280N032

91-21-51

Section L00400

Page 3

May 17/2006

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00441		P007-00/ /		LT ASSY-GLARESHIELD FLDT,L				ALL
	W-A		W0010	B-WT			33-11-21	ALL
	W-B		W0010	B-BK			33-11-21	ALL
L00442		P007-00/ /		LT ASSY-GLARESHIELD FLDT,R				ALL
	W-A		W0012	B-WT			33-11-21	ALL
	W-B		W0012	B-BK			33-11-21	ALL
L00443		0255/260/L018		LT ASSY-FLOOD LT AISLE STAND,L				ALL
	W-A		W0200	C-A			33-11-21	001-099
	W-B		W0200	C-B			33-11-21	001-099
	W-A		W2366	C-A			33-11-21	115-199
	W-B		W2366	C-B			33-11-21	115-199
L00444		0255/260/R018		LT ASSY-FLOOD LT AISLE STAND,R				ALL
	W-A		W0202	B-A			33-11-21	001-099
	W-B		W0202	B-B			33-11-21	001-099
	W-A		W2366	B-A			33-11-21	115-199
	W-B		W2366	B-B			33-11-21	115-199
L00445		P003-01/ /		LT-WHEELWELL FIRE				ALL
	1	1A	W0002	0066	22		33-16-51	ALL
	2	1A	W0002	0120	22		26-17-11	ALL
	3	1A	W0002	0054	22		33-16-51	ALL
L00447		MULTI/ /		LT-PASS INFO SIGN				ALL
	NS	AB	W0512	0007W	20		33-24-31	001-099
	NS	AB	W0512	0007L	20		33-24-31	115-199
	FSB	AB	W0512	0001WY	18		33-24-31	001-099
	FSB	AB	W0512	0001Y	20		33-24-31	115-199
	GND	AB	W0512	0018BO	18		33-24-31	001-099
	GND	BY	W0512	0018N	16		33-24-31	115-199
L00448A		MULTI/ /		LT-PASS READ,LEFT				ALL
	=G	L	W0512	0028O	16		33-23-31	001-099
	=G	L	W0512	0028N	16		33-23-31	115-199
	=P	L	W0512	0056N	16		33-23-31	001-099
	=P	L	W0512	0056P	16		33-23-31	115-199

HOOKUP LIST

D280N032

91-21-51

Section L00400

Page 4

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00448B		MULTI/ /		LT-PASS READ,LEFT				001-099
L00448B		MULTI/ /		LT-PASS READ				115-199
	=G	L	W0512	0038O	16		33-23-31	001-099
	=G	L	W0512	0038N	16		33-23-31	115-199
	=P	L	W0512	0066N	16		33-23-31	001-099
	=P	L	W0512	0066P	16		33-23-31	115-199
L00448C		MULTI/ /		LT-PASS READ,LEFT				001-099
L00448C		MULTI/ /		LT-PASS READ				115-199
	=G	L	W0512	0048O	16		33-23-31	001-099
	=G	L	W0512	0048N	16		33-23-31	115-199
	=P	L	W0512	0076N	16		33-23-31	001-099
	=P	L	W0512	0076P	16		33-23-31	115-199
L00449		MULTI/ /		LT-PASS INFO SIGN				ALL
	NS	AB	W0514	0007W	20		33-24-31	001-099
	NS	AB	W0514	0007L	20		33-24-31	115-199
	FSB	AB	W0514	0001WY	18		33-24-31	001-099
	FSB	AB	W0514	0001Y	20		33-24-31	115-199
	GND	AB	W0514	0018BO	18		33-24-31	001-099
	GND	BY	W0514	0018N	16		33-24-31	115-199
L00450A		MULTI/ /		LT-PASS READ,LEFT				ALL
	=G	L	W0514	0028O	16		33-23-31	001-099
	=G	L	W0514	0028N	16		33-23-31	115-199
	=P	L	W0514	0056N	16		33-23-31	001-099
	=P	L	W0514	0056P	16		33-23-31	115-199
L00450B		MULTI/ /		LT-PASS READ,LEFT				ALL
	=G	L	W0514	0038O	16		33-23-31	001-099
	=G	L	W0514	0038N	16		33-23-31	115-199
	=P	L	W0514	0066N	16		33-23-31	001-099
	=P	L	W0514	0066P	16		33-23-31	115-199
L00450C		MULTI/ /		LT-PASS READ,LEFT				ALL
	=G	L	W0514	0048O	16		33-23-31	001-099
	=G	L	W0514	0048N	16		33-23-31	115-199
	=P	L	W0514	0076N	16		33-23-31	001-099
	=P	L	W0514	0076P	16		33-23-31	115-199

HOOKUP LIST

D280N032

91-21-51

Section L00400

Page 5

May 17/2006

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00453		MULTI/ /		LT-PASS INFO SIGN,SPACER PNL				ALL
	NS	AB	W0518	0007W	20		33-24-31	001-099
	NS	AB	W0518	0007	20		33-24-31	115-199
	FSB	AB	W0518	0001WY	18		33-24-31	001-099
	FSB	AB	W0518	0001	20		33-24-31	115-199
	GND	AB	W0518	0008O	18		33-24-31	001-099
	GND	BY	W0518	0008	16		33-24-31	115-199
L00454A		MULTI/ /		LT-ATT WK,LEFT				115-199
	=G	L	W0520	0028N	16		33-23-31	115-199
	=P	L	W0520	0056P	16		33-23-31	115-199
L00454B								115-199
	=G	L	W0520	0038N	16		33-23-31	115-199
	=P	L	W0520	0066P	16		33-23-31	115-199
L00455A		MULTI/ /		LT-PASS READ,LEFT				115-199
	=G	C	W0522	0028O	16		33-23-31	001-099
	=G	L	W0522	0028N	16		33-23-31	115-199
	=P	C	W0522	0056N	16		33-23-31	001-099
	=P	L	W0522	0056P	16		33-23-31	115-199
L00455B		MULTI/ /		LT-PASS READ,LEFT				115-199
	=G	C	W0522	0038O	16		33-23-31	001-099
	=G	L	W0522	0038N	16		33-23-31	115-199
	=P	C	W0522	0066N	16		33-23-31	001-099
	=P	L	W0522	0066P	16		33-23-31	115-199
L00456		P062-00/ /		LT-PARKING BRAKE ON				115-199
	1	B	W3060	0007	20		32-44-11	115-199
	2	B	W3060	0006	20		32-44-11	115-199
	3	B	W3060	0005	20		32-44-11	115-199
L00457		355/288/L014		LAMP-FLUORESCENT,FWD ENTRY LT ASSY				ALL
	=A		W0614	A-A			33-22-11	ALL
	=B		W0614	A-B			33-22-11	ALL
	=C		W0614	A-C			33-22-11	ALL
	=D		W0614	A-D			33-22-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section L00400

Page 6

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00458		355/288/L014		LAMP-FLUORESCENT,FWD ENTRY LT ASSY				ALL
	= A		W0614	B-A			33-22-11	ALL
	= B		W0614	B-B			33-22-11	ALL
	= C		W0614	B-C			33-22-11	ALL
	= D		W0614	B-D			33-22-11	ALL
L00459		355/288/L014		LAMP-FLUORESCENT,FWD ENTRY LT ASSY				ALL
	= A		W0614	C-A			33-22-11	ALL
	= B		W0614	C-B			33-22-11	ALL
	= C		W0614	C-C			33-22-11	ALL
	= D		W0614	C-D			33-22-11	ALL
L00460		355/288/L014		LAMP-FLUORESCENT,FWD ENTRY LT ASSY				ALL
	= A		W0614	D-A			33-22-11	ALL
	= B		W0614	D-B			33-22-11	ALL
	= C		W0614	D-C			33-22-11	ALL
	= D		W0614	D-D			33-22-11	ALL
L00461		347/289/R019		LT-FWD GALLEY				001-099
L00461		355/288/L014		LT-FWD GALLEY				115-199
	= A		W0608	A-A			33-27-11	ALL
	= B		W0608	A-B			33-27-11	ALL
	= C		W0608	A-C			33-27-11	ALL
	= D		W0608	A-D			33-27-11	ALL
L00462		347/289/R019		LT-FWD GALLEY				ALL
	= A		W0608	B-A			33-27-11	ALL
	= B		W0608	B-B			33-27-11	ALL
	= C		W0608	B-C			33-27-11	ALL
	= D		W0608	B-D			33-27-11	ALL
L00463		347/289/R019		LT-FWD GALLEY				ALL
	= A		W0608	C-A			33-27-11	ALL
	= B		W0608	C-B			33-27-11	ALL
	= C		W0608	C-C			33-27-11	ALL
	= D		W0608	C-D			33-27-11	ALL
L00464		347/289/R019		LT-FWD GALLEY				ALL
	= A		W0608	D-A			33-27-11	ALL
	= B		W0608	D-B			33-27-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section L00400

Page 7

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00464		347/289/R019		LT-FWD GALLEY (continued)				ALL
	= C		W0608	D-C			33-27-11	ALL
	= D		W0608	D-D			33-27-11	ALL
L00469		1668/294/R005		LT-AFT GALLEY				ALL
	= A		W0612	A-A			33-27-31	ALL
	= B		W0612	A-B			33-27-31	ALL
	= C		W0612	A-C			33-27-31	ALL
	= D		W0612	A-D			33-27-31	ALL
L00470		1668/294/R005		LT-AFT GALLEY				ALL
	= A		W0612	B-A			33-27-31	ALL
	= B		W0612	B-B			33-27-31	ALL
	= C		W0612	B-C			33-27-31	ALL
	= D		W0612	B-D			33-27-31	ALL
L00471		P001-03/ /		LT-ANNUN IND,FLIGHT MANAGEMENT COMPUTER				ALL
	1	1A	W0101	0080	22		33-16-41	ALL
	2	1A	W0101	0111	24		34-61-15	ALL
	3	1A	W0101	0083	22		33-16-41	ALL
L00472		1570/193/R063		LT-NO.3 CARGO DR				115-199
	= G	C	W2662	0044	20		33-37-21	115-199
	= P	C	W2662	0043	20		33-37-21	115-199
L00474		P001-03/ /		LT-L OIL PRESS				ALL
	1	1A	W0101	0109	22		33-16-51	ALL
	2	1A	W0101	0115	22		79-33-11	ALL
	3	1A	W0101	0110	22		33-16-51	ALL
L00475		P001-03/ /		LT-R OIL PRESS				ALL
	1	1A	W0101	0106	22		33-16-61	ALL
	2	1A	W0101	0116	22		79-33-11	ALL
	3	1A	W0101	0107	22		33-16-51	ALL
L00480		392/288/L014		LT-THRESHOLD,FWD LAV F				115-199
	= G	C	W3572	0062	20		33-26-31	115-199
	= P	C	W3572	0123	22		33-26-31	115-199

HOOKUP LIST

D280N032

91-21-51

Section L00400

Page 8

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00482		P007-00/ /		LT PLATE-LH CLOCK/LIGHT CONT PNL				ALL
	= G	G	W0010	0012	20		33-13-41	ALL
	= P	B	W0010	0011	20		33-13-41	ALL
L00483		P007-00/ /		LT PLATE-RH CLOCK/LIGHT CONT PNL				ALL
	= G	G	W0012	0012	20		33-13-41	ALL
	= P	B	W0012	0011	20		33-13-41	ALL
L00485		P001-03/ /		LT-ALTITUDE ALERT				ALL
	1	1A	W0101	0068	22		33-16-41	ALL
	2	1A	W0101	0112	24		34-16-11	ALL
	3	1A	W0101	0060	22		33-16-41	ALL
L00486		P001-03/ /		LT-A/T DISC				ALL
	1	1A	W0101	0088	22		33-16-41	ALL
	2	1A	W0101	0103	22		22-34-11	ALL
	3	1A	W0101	0085	22		33-16-41	ALL
L00487		1194/147/L062		LT-HYDRAULIC SERVICE CENTER				ALL
	BLK		W2608	A-AB			33-31-21	ALL
	WHT		W2608	A-AD			33-31-21	ALL
L00488		1226/147/L062		LT-HYDRAULIC SERVICE CENTER				ALL
	BLK		W2608	A-AC			33-31-21	ALL
	WHT		W2608	A-AE			33-31-21	ALL
L00489		263/155/C000		LT-NOSE GEAR DOOR UNSAFE				ALL
	CTR	BK	W2150	0021	18		32-12-12	ALL
	GND	C	W2150	0022	18		32-12-12	ALL
L00490		1111/126/R006		LT-MAIN GEAR DOOR UNSAFE,R				ALL
	= G	C	W2516	1038	18		32-12-12	ALL
	= P	C	W2516	1023	18		32-12-12	ALL
L00491		P001-03/ /		LT-BRAKE SOURCE				ALL
	1	1A	W0101	0133	22		33-16-51	ALL
	2	1A	W0101	0134	24		32-41-11	ALL
	3	1A	W0101	0135	22		33-16-51	ALL

HOOKUP LIST

D280N032

91-21-51

Section L00400

Page 9

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00495		P010-00*/		LT PLATE-STAB TRIM CONT				ALL
	BLK		W1115	L-ST			33-13-51	ALL
	WHT		W1115	G-95			33-13-51	ALL
L00497		P010-00*/		LT PLATE-FLAP POSN SELECTOR				ALL
	BLK		W1115	L-FL			33-13-51	ALL
	WHT		W1115	G-97			33-13-51	ALL
L00498		P010-00*/		LT PLATE-SPDBRK POSN SELECTOR				ALL
	BLK		W1115	L-SB			33-13-51	ALL
	WHT		W1115	G-98			33-13-51	ALL
L00499		P010-00*/		LT PLATE-FUEL CONT				ALL
	BLK		W1115	L-FC			33-13-51	ALL
	WHT		W1115	G-99			33-13-51	ALL

HOOKUP LIST

D280N032

91-21-51

Section L00400

Page 10 End

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00504		530/201/L015		LT-FWD CARGO COMPT				ALL
	= G	C	W4162	0020	18		33-37-11	ALL
	= P	C	W4162	0018	18		33-37-11	ALL
L00505		1105/140/L010		LT-MAIN GEAR DOOR UNSAFE,L				ALL
	= G	C	W2416	1033	18		32-12-12	ALL
	= P	BK	W2416	1028	18		32-12-12	ALL
L00518		1650/288/L024		LT-ATTENDANT WORK,AFT LEFT				ALL
	= G	C	W3576	0058	20		33-22-14	ALL
	= P	C	W3576	0076	22		33-22-14	001-099
	= P	C	W3576	0078	22		33-22-14	ALL
	= P	C	W3576	0067	22		33-22-14	115-199
L00519		350/288/L005		LT-FWD LAV CALL				ALL
	= G	H	W3672	0120	20		33-25-11	ALL
	= P	Z2	W3672	0007	22		33-25-11	ALL
L00520		350/288/L005		LT-FWD PASS CALL				ALL
	= G	H	W3672	0121	20		33-25-11	ALL
	= P	Z2	W3672	0008	22		33-25-11	ALL
L00521		0662/293/R007		LT-GALLEY WALL THRESHOLD,G2A				115-199
	CAP	Y	W3672	0129	22		33-26-31	115-199
	CAP	Y	W3672	0130	20		33-26-31	115-199
L00522		0747/293/R007		LT-GALLEY WALL THRESHOLD,G2B				115-199
	CAP	Y	W3672	0131	22		33-26-31	115-199
	CAP	Y	W3672	0132	20		33-26-31	115-199
L00523		747/293/L007		LT-GALLEY WALL THRESHOLD,G2D				115-199
	CAP	Y	W3572	0124	22		33-26-31	115-199
	CAP	Y	W3572	0125	20		33-26-31	115-199
L00530								115-199
	1	1A	W0002	0128	22		33-16-51	115-199
	2	1A	W0002	0130	22		32-46-11	115-199
	3	1A	W0002	0126	22		33-16-51	115-199

HOOKUP LIST

D280N032

91-21-51

Section L00500

Page 1

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00531		1650/288/R024		LT-ATTENDANT WORK,AFT RIGHT				001-099
L00531		1660/288/R018		LT-ATTENDANT WORK,AFT RIGHT				115-199
	=G	C	W3576	0061	20		33-22-14	001-099
	=G	C	W3576	0068	20		33-22-14	115-199
	=P	C	W3576	0076	22		33-22-14	001-099
	=P	C	W3576	0067	22		33-22-14	115-199
L00532		737/277/R037		LT-MID FWD ATTENDANT SIGN,R				115-199
	1	C	W3696	0007	20		33-24-21	115-199
	2	C	W3696	0008	16		33-24-21	115-199
	3	C	W3696	0001	20		33-24-21	115-199
L00533		P061-00/ /		LT-FLOOD AUXILLIARY CIRCUIT BREAKER PNL				ALL
	=G	C	W2156	0157	20		33-11-61	001-099
	=P		W2156	A-WT			33-11-61	ALL
L00535A		MULTI/ /		LT-PASS READ				115-199
	=G	L	W0534	0028N	16		33-23-31	115-199
	=P	L	W0534	0056P	16		33-23-31	115-199
L00535B		MULTI/ /		LT-PASS READ				115-199
	=G	L	W0534	0038N	16		33-23-31	115-199
	=P	L	W0534	0066P	16		33-23-31	115-199
L00535C		MULTI/ /		LT-PASS READ				115-199
	=G	L	W0534	0048N	16		33-23-31	115-199
	=P	L	W0534	0076P	16		33-23-31	115-199
L00536		0683/277/L037		LT-MID FWD PASS INFO SIGN				115-199
	1	C	W3596	0007	20		33-24-12	115-199
	2	C	W3596	0008	16		33-24-12	115-199
	3	C	W3596	0001	20		33-24-12	115-199
L00540		1886/224/L016		LT-APU COMPARTMENT				ALL
	BLK		W2822	A-F			33-31-31	ALL
	WHT		W2822	A-G			33-31-31	ALL
L00541		1907/235/L035		LT-APU COMPARTMENT				ALL
	BLK		W2822	A-H			33-31-31	ALL
	WHT		W2822	A-J			33-31-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section L00500

Page 2

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00542		P001-03/ /		LT PLATE-RESERVE BRAKES				ALL
	= G	G	W0101	0123	20		33-13-12	ALL
	= P	B	W0101	0122	20		33-13-12	ALL
L00546		0683/277/R037		LT-MID FWD ATTENDANT SIGN,R				ALL
	1	C	W3692	0007	20		33-24-21	115-199
	2	C	W3692	0008	16		33-24-21	115-199
	3	C	W3692	0001	20		33-24-21	115-199
L00574		P003-01/ /		LT PLT-HEADING REFERENCE SWITCH				ALL
	= G	G	W0002	0039	20		33-13-21	ALL
	= P	B	W0002	0038	20		33-13-21	ALL
L00575		0292/266/L027		LT-UTILITY,FIRST OBSERVER				ALL
	= G		W2364	A-D			33-14-31	ALL
	= P		W2364	A-C			33-14-31	ALL
L00586		0657/290/L019		LT-THRESHOLD,MID FWD LAV S				001-099
	= G	C	W3572	0019	20		33-26-31	001-099
	= P	C	W3572	0018	22		33-26-31	001-099

HOOKUP LIST

D280N032

91-21-51

Section L00500

Page 3 End

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00616		1316/291/L012		LT-LAVATORIES SIGN				115-199
	1	C	W3672	0063	22		33-26-21	115-199
	2	C	W3672	0180	20		33-26-21	115-199
	2	C	W3672	0196	20		33-26-21	115-199
L00617		1315/291/L012		LT-OCCUPIED SIGN				115-199
	1	C	W3672	0111	22		33-26-21	115-199
	2	C	W3672	0066	20		33-26-21	115-199
	2	C	W3672	0180	20		33-26-21	115-199
L00641		1315/291/R018		LT-LAVATORIES SIGN				115-199
	1	C	W3672	0063	22		33-26-21	115-199
	1	C	W3672	0069	22		33-26-21	115-199
	2	C	W3672	0065	20		33-26-21	115-199
L00642		1315/290/R018		LT-OCCUPIED SIGN				115-199
	1	C	W3672	0070	22		33-26-21	115-199
	1	C	W3672	0111	22		33-26-21	115-199
	2	C	W3672	0065	20		33-26-21	115-199
	2	C	W3672	0066	20		33-26-21	115-199
L00643		0412/288/L001		LT-LAVATORY OCCUPIED SIGN				115-199
	GND	C	W3572	0054	20		33-26-21	115-199
	LAV	C	W3572	0053	22		33-26-21	115-199
	OCC	C	W3572	0156	22		33-26-21	115-199
L00649		P001-03/ /		LT-WINDSHEAR				ALL
	1	1A	W0101	0136	22		33-16-51	ALL
	2	BJ	W0101	0006	22		34-46-11	001-099
	2		W0101	0006	22		34-46-11	115-199
	3	1A	W0101	0137	22		33-16-51	ALL

HOOKUP LIST

D280N032

91-21-51

Section L00600

Page 1 End

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L00716		P001-03/ /		LT-SPEED BRAKE				ALL
	1	1A	W0101	0155	22		33-16-41	ALL
	2	1A	W0101	0153	24		31-51-43	ALL
	3	1A	W0101	0154	22		33-16-41	ALL

HOOKUP LIST

D280N032

91-21-51

Section L00700

Page 1 End

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
L01065		MULTI/ /		LT-EMERGENCY AISLE				ALL
	= G	C	W0634	0002	20		33-51-12	ALL
	= P	C	W0634	0001	20		33-51-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section L01000

Page 1 End

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
M00207		E006-00/ /		CHGR-APU BAT				ALL
	+	H	W1026	0002	08		24-31-41	ALL
	-	G	W1002	0003	08		24-31-41	ALL
M00217		0239/170/L020		STATIC INVERTER-				ALL
	+	G	W2008	0001	06		24-33-11	ALL
	-	F	W2008	0002	06		24-33-11	ALL
M00218		247/170/L020		CHGR-MAIN BATTERY				ALL
	+	H	W2008	0003	02		24-31-11	ALL
	-	G	W2008	0004	04		24-31-11	ALL
M00224		247/152/35		SHUNT-MAIN BATT				ALL
	A	F	W2000	0002	*1		24-31-11	ALL
	B	F	W2000	0003	*1		24-31-11	ALL
	C	D	W2034	2001R	22		24-34-11	ALL
	D	D	W2034	2001B	22		24-34-11	ALL
M00225		P032-00/ /R035		ELCU-GALLEY PWR,MID FWD,R				115-199
	A1	H	W1132	0013	04		24-21-21	115-199
	A1	H	W1132	0016	04		24-21-21	115-199
	A2	H6	W3658	0005	06		25-31-21	115-199
	B1	H	W1132	0014	04		24-21-21	115-199
	B1	H	W1132	0017	04		24-21-21	115-199
	B2	H6	W3658	0006	06		25-31-21	115-199
	C1	H	W1132	0015	04		24-21-21	115-199
	C1	H	W1132	0018	04		24-21-21	115-199
	C2	H6	W3658	0007	06		25-31-21	115-199
M00227		P031-00/ /		ELCU-GALLEY PWR,AFT,L				ALL
	A1	H	W1130	0007	04		24-21-11	001-099
	A1	H	W1130	0013	04		24-21-11	ALL
	A1	H	W1130	0031	04		24-21-11	115-199
	A2	H2	W3538	0005	02		25-31-33	ALL
	B1	H	W1130	0008	04		24-21-11	001-099
	B1	H	W1130	0014	04		24-21-11	ALL
	B1	H	W1130	0032	04		24-21-11	115-199
	B2	H2	W3538	0006	02		25-31-33	ALL
	C1	H	W1130	0009	04		24-21-11	001-099
	C1	H	W1130	0015	04		24-21-11	ALL
	C1	H	W1130	0033	04		24-21-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section M00200

Page 1

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
M00227		P031-00/ /		ELCU-GALLEY PWR,AFT,L (continued)				ALL
	C2	H2	W3538	0007	02		25-31-33	ALL
M00281		APU/ /		GEN-AUXILIARY POWER UNIT				ALL
	T1	R	W2806	0001	*1		24-21-41	ALL
	T2	R	W2806	0002	*1		24-21-41	ALL
	T3	R	W2806	0003	*1		24-21-41	ALL
	N	R	W2806	0004	04		24-21-41	ALL

HOOKUP LIST

D280N032

91-21-51

Section M00200

Page 2 End

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
M00499		P033-00/ /		MDL-TIME DELAY,ELEC HYD PUMP L ON				ALL
	A	C	W1230	0175	22		29-11-12	ALL
	B	C	W1230	0176	22		29-11-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section M00400

Page 1 End

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
M00500		P036-00/ /		MDL-TIME DELAY,ELEC HYD PUMP R ON				ALL
	A	C	W1260	0736	20		29-11-22	001-099
	A	C	W1260	0119	20		29-11-22	115-199
	B	C	W1260	0120	20		29-11-22	ALL
M00540		P006-00/ /		MODULE-C BUS XFER TIME DELAY				ALL
	= A	C	W0074	0027	22		24-51-31	ALL
	= B	C	W0074	0028	22		24-51-31	ALL
M00546		P032-00/ /		ELCU-GALLEY PWR G1A				001-099
	A1	H	W1132	0007	04		24-21-21	001-099
	A1	H	W1132	0016	04		24-21-21	001-099
	A2	H6	W3650	0005	06		25-31-11	001-099
	B1	H	W1132	0008	04		24-21-21	001-099
	B1	H	W1132	0017	04		24-21-21	001-099
	B2	H6	W3650	0006	06		25-31-11	001-099
	C1	H	W1132	0009	04		24-21-21	001-099
	C1	H	W1132	0018	04		24-21-21	001-099
	C2	H6	W3650	0007	06		25-31-11	001-099
M00588		WS838/ /L		PWR SUPPLY-ANTI-COLL LT,L WING				ALL
	J2		W3326	A-A			33-44-21	ALL
M00589		WS838/ /R		PWR SUPPLY-ANTI-COLL LT,R WING				ALL
	J2		W3426	A-A			33-44-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section M00500

Page 1 End

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
M00779		P001-03/ /		MODULE-WARNING DISPLAY,DISCRETE				ALL
	A1	1A	W0101	0037	22		33-16-51	ALL
	A2	1A	W0101	0001	22		26-11-11	ALL
	A3	1A	W0101	0036	22		33-16-51	ALL
	A4	1A	W0101	0074	22		33-16-41	ALL
	A5	1A	W0101	0003	22		26-11-11	ALL
	A6	1A	W0101	0056	22		33-16-41	ALL
	B1	1A	W0101	0039	22		33-16-51	ALL
	B2	1A	W0101	0093	22		31-51-42	ALL
	B3	1A	W0101	0038	22		33-16-51	ALL
	B4	1A	W0101	0070	22		33-16-41	ALL
	B5	1A	W0101	0094	22		31-51-42	ALL
	B6	1A	W0101	0053	22		33-16-41	ALL
	C1	1A	W0101	0043	22		33-16-51	ALL
	C2	1A	W0101	0012	22		34-46-11	ALL
	C3	1A	W0101	0042	22		33-16-51	ALL
	C4	1A	W0101	0073	22		33-16-21	ALL
	C5	1A	W0101	0008	22		34-46-11	ALL
	C6	1A	W0101	0055	22		33-16-11	ALL
	D1	1A	W0101	0035	22		33-16-51	ALL
	D2	1A	W0101	1003	22		22-14-11	ALL
	D3	1A	W0101	0034	22		33-16-51	ALL
	D4	1A	W0101	0071	22		33-16-41	ALL
	D5	1A	W0101	0101	22		22-14-11	ALL
	D6	1A	W0101	0052	22		33-16-41	ALL
	E1	1A	W0101	0041	22		33-16-51	ALL
	E2	1A	W0101	0119	24		21-33-12	ALL
	E3	1A	W0101	0040	22		33-16-51	ALL
	E4	1A	W0101	0069	22		33-16-21	ALL
	E5	1A	W0101	0120	24		21-33-12	ALL
	E6	1A	W0101	0054	22		33-16-11	ALL
	F1	1A	W0101	0033	22		33-16-51	ALL
	F2	1A	W0101	0005	24		34-12-22	ALL
	F3	1A	W0101	0032	22		33-16-51	ALL
	F4	1A	W0101	0072	22		33-16-41	ALL
	F5	1A	W0101	0002	24		34-12-12	ALL
	F6	1A	W0101	0051	22		33-16-41	ALL
	DED		W0101	1003Z			22-14-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section M00700

Page 1 End

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
M00893		APU / /		MOTOR-AUXILIARY POWER UNIT STARTER				ALL
	+	R	W2810	0001	*1		49-41-11	ALL
	+	R	W2810	0002	*1		49-41-11	ALL
	-	Q	W2810	0003	*1		49-41-11	ALL
	-	Q	W2810	0004	*1		49-41-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section M00800

Page 1 End

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
M00963		P036-00/ /		MDL-T/D,AUTO SPOILER WRN				ALL
	A	C	W1260	0030	22		27-62-11	001-099
	A	C	W1260	0030	20		27-62-11	115-199
	B	C	W1260	0031	22		27-62-11	001-099
	B	C	W1260	0031	20		27-62-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section M00900

Page 1 End

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
M01102		P051-00/ /		MODULE-400HZ EMI FILTER				ALL
	= GND	D	W1451	0348	22		31-51-11	ALL
	LINE	D	W1451	1001	22		31-51-11	ALL
	LOAD	D	W1451	0347	22		31-51-11	ALL
M01103		P051-00/ /		MODULE-400HZ EMI FILTER				ALL
	= GND	D	W1451	0350	22		31-51-12	ALL
	LINE	D	W1451	1031	22		31-51-12	ALL
	LOAD	D	W1451	0349	22		31-51-12	ALL
M01174		P001-03/ /		MODULE-TIME DELAY,AUTOBRAKES LIGHT				ALL
	A	C	W0101	0096	22		32-42-12	ALL
	B	C	W0101	0098	22		32-42-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section M01100

Page 1 End

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
M10001		P032-00/ /		CONT UNIT-ELEC LOAD,ELEC HYD PUMP,L				ALL
	A1	H	W1132	0016	04		24-21-21	ALL
	A1	H	W1132	0019	04		24-21-21	ALL
	A2	H4	W2604	0001	04		29-11-12	ALL
	B1	H	W1132	0017	04		24-21-21	ALL
	B1	H	W1132	0020	04		24-21-21	ALL
	B2	H4	W2604	0002	04		29-11-12	ALL
	C1	H	W1132	0018	04		24-21-21	ALL
	C1	H	W1132	0021	04		24-21-21	ALL
	C2	H4	W2604	0003	04		29-11-12	ALL
M10004		P036-00/ /		100 MS TIME DELAY-L				ALL
	A	C	W1260	6446	22		78-34-11	001-002, 115-199
	A	C	W1260	0414	22		78-34-11	003-099
	B	C	W1260	6451	22		78-34-11	ALL
M10005		P031-00/ /		CONT UNIT-ELEC LOAD,ELEC HYD PUMP,R				ALL
	A1	H	W1130	0013	04		24-21-11	ALL
	A1	H	W1130	0016	04		24-21-11	ALL
	A2	H4	W2606	0001	04		29-11-22	ALL
	B1	H	W1130	0014	04		24-21-11	ALL
	B1	H	W1130	0017	04		24-21-11	ALL
	B2	H4	W2606	0002	04		29-11-22	ALL
	C1	H	W1130	0015	04		24-21-11	ALL
	C1	H	W1130	0018	04		24-21-11	ALL
	C2	H4	W2606	0003	04		29-11-22	ALL
M10006		P031-00/ /		CONT UNIT-ELEC LOAD,ELEC HYD PMP,C1				ALL
	A1	H	W1130	0019	04		24-21-11	001-099
	A1	H	W1130	0016	04		24-21-11	ALL
	A1	H	W1130	0007	04		24-21-11	115-199
	A2	H4	W2608	0001	04		29-11-31	ALL
	B1	H	W1130	0020	04		24-21-11	001-099
	B1	H	W1130	0017	04		24-21-11	ALL
	B1	H	W1130	0008	04		24-21-11	115-199
	B2	H4	W2608	0002	04		29-11-31	ALL
	C1	H	W1130	0021	04		24-21-11	001-099
	C1	H	W1130	0018	04		24-21-11	ALL
	C1	H	W1130	0009	04		24-21-11	115-199
	C2	H4	W2608	0003	04		29-11-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section M10000

Page 1

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
M10010		P037-00/ /		100 MIL-STD TIME DELAY-R				ALL
	A	C	W1270	6551	22		78-34-21	001-002, 115-199
	A	C	W1270	0748	22		78-34-21	003-099
	B	C	W1270	6533	22		78-34-21	ALL
M10020		P036-00/ /		MODULE-ELEC HYD PUMP ON DELAY,C2				ALL
	A	C	W1260	0744	22		29-11-31	001-099
	A	C	W1260	0121	20		29-11-31	115-199
	B	C	W1260	0122	20		29-11-31	ALL
M10022		P032-00/ /		CONT UNIT-ELEC LOAD,ELEC HYD PUMP,C2				ALL
	A1	H	W1132	0022	04		24-21-21	001-099
	A1	H	W1132	0019	04		24-21-21	ALL
	A1	H	W1132	0007	04		24-21-21	115-199
	A2	H4	W2610	0001	04		29-11-31	ALL
	B1	H	W1132	0023	04		24-21-21	001-099
	B1	H	W1132	0020	04		24-21-21	ALL
	B1	H	W1132	0008	04		24-21-21	115-199
	B2	H4	W2610	0002	04		29-11-31	ALL
	C1	H	W1132	0024	04		24-21-21	001-099
	C1	H	W1132	0021	04		24-21-21	ALL
	C1	H	W1132	0009	04		24-21-21	115-199
	C2	H4	W2610	0003	04		29-11-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section M10000

Page 2 End

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
M10145		P033-00/ /		MODULE-PTU ON DELAY#1				ALL
	A	C	W1230	0264	22		29-22-11	001-099
	A	C	W1230	0253	22		29-22-11	115-199
	B	C	W1230	0266	22		29-22-11	001-099
	B	C	W1230	0183	22		29-22-11	115-199
	B	C	W1230	0191	20		29-22-11	115-199
M10146		P033-00/ /		MODULE-PTU IND DELAY				ALL
	A	C	W1230	0265	22		29-22-11	001-099
	A	C	W1230	0181	22		29-22-11	115-199
	B	C	W1230	0266	22		29-22-11	001-099
	B	C	W1230	0267	22		29-22-11	001-099
	B	C	W1230	0183	22		29-22-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section M10100

Page 1 End

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
M10251		E006-00/ /		SHUNT-AUX PWR UNIT BATTERY CHARGER				ALL
	= A	F	W1002	0003	08		24-31-41	ALL
	= B	F	W1002	0004	08		24-31-41	ALL
	= C	D	W1026	2004R	24		24-34-11	001-099
	= C	D	W1026	2004R	22		24-34-11	115-199
	= D	D	W1026	2004B	24		24-34-11	001-099
	= D	D	W1026	2004B	22		24-34-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section M10200

Page 1 End

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
M10323		P033-00/ /		MDL-RAM AIR TURBINE TIME DELAY				ALL
	A	C	W1230	0214	22		29-21-31	001-099
	A	C	W1230	0214	18		29-21-31	115-199
	B	C	W1230	0215	22		29-21-31	001-099
	B	C	W1230	0215	18		29-21-31	115-199
M10334		P036-00/ /		MDL-DELAY,START/FAIL,L				ALL
	A	C	W1260	0095	24		80-11-11	ALL
	B	C	W1260	0096	24		80-11-11	ALL
I M10335		P037-00/ /		MDL-DELAY,START/FAIL,R (PLATE C)				ALL
	A	C	W1270	0789	24		80-11-21	ALL
	B	C	W1270	0794	24		80-11-21	001-099
	B	C	W1270	0793	24		80-11-21	ALL
M10342		MULTI/ /		SPEAKER-PSU				ALL
	2K	AD	W0512	2001R	22		23-31-42	ALL
	COM	AC	W0512	2001B	22		23-31-42	ALL
M10343		MULTI/ /		SPEAKER-PSU,MUTED				115-199
	2K	AD	W0514	2002R	22		23-31-42	ALL
	COM	AC	W0514	2002B	22		23-31-42	ALL

HOOKUP LIST

D280N032

91-21-51

Section M10300

Page 1 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
M10479		P037-00/ /		TIME DELAY-TEST SAFETY				ALL
	A	C	W1270	0359	22		30-11-11	ALL
	B	C	W1270	0360	22		30-11-11	ALL
M10482		P036-00/ /		MODULE,TIME DELAY,C1				ALL
	A	C	W1260	0741	22		29-11-31	001-099
	A	C	W1260	8543	22		29-11-31	ALL
	A	C	W1260	5921	22		29-11-31	115-199
	B	C	W1260	5913	20		29-11-31	ALL
M10496		E006-00/ /		RCCB-MN/APU BAT TIE				ALL
I	3	1A	W1026	0028	22		24-33-12	001-099
I	4	1A	W1026	0030	22		24-33-12	001-099
I	A1	F	W1002	0005	*1		24-33-12	001-009
	A1	CK	W1002	0005	*1		24-33-12	010-099
I	A2	BU	W2702	0001	*2		24-33-12	001-099
I	S1	1A	W1026	0029	22		24-33-12	001-099
I	S2	1A	W1026	0041	24		24-33-12	001-099
I	S3	1A	W1026	0027	22		24-33-12	001-099
I	5A	1A	W1026	0026	20		24-33-12	001-099

HOOKUP LIST

D280N032

91-21-51

Section M10400

Page 1 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
M10549		292/278/L027		MODULE-FLT DK DOME/EMER LT				ALL
	GND	C	W0200	0005	22		33-11-31	001-099
	GND	C	W2070	0382	22		33-11-31	115-199
	PWR	C	W0200	0006	22		33-11-31	001-099
	PWR	C	W2070	0380	24		33-11-31	115-199
M10557		P033-00/ /		MODULE-T/D,L EMP IND				ALL
	A	C	W1230	0227	22		29-11-12	001-099
	A	C	W1230	0242	22		29-11-12	115-199
	B	C	W1230	0228	22		29-11-12	ALL
M10558		P033-00/ /		MODULE-T/D,L SYS IND				ALL
	A	C	W1230	0230	22		29-11-12	ALL
	B	C	W1230	0229	22		29-11-12	ALL
	B	C	W1230	0227	22		29-11-12	115-199
M10559		P036-00/ /		MODULE-T/D,R EMP IND				ALL
	A	C	W1260	8510	22		29-11-22	ALL
	B	C	W1260	8511	22		29-11-22	ALL
M10560		P036-00/ /		MODULE-T/D,R SYS IND				ALL
	A	C	W1260	8514	22		29-11-22	ALL
	B	C	W1260	8512	22		29-11-22	ALL
	B	C	W1260	8554	22		29-11-22	ALL
M10588		MULTI/ /		SPEAKER-PSU,MUTED				115-199
	2K	AD	W0534	2001R	22		23-31-16	115-199
	COM	AC	W0534	2001B	22		23-31-16	115-199

HOOKUP LIST

D280N032

91-21-51

Section M10500

Page 1 End

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
M10648		PSU/ /		SPKR-PASS ADDRESS				004-099
	2K	AD	W0536	2001R	22		23-31-42	004-099
	COM	AC	W0536	2001B	22		23-31-42	004-099
M10663		P71/ /		MODULE-TIME DELAY				001-002, 115-199
	A	C	W1254	0028	22		24-25-11	001-002, 115-199
	B	C	W1254	0027	22		24-25-11	001-002, 115-199
M10664		P71/ /		MODULE-TIME DELAY				001-002, 115-199
	A	C	W1254	0029	22		24-25-11	001-002, 115-199
	B	C	W1254	0030	22		24-25-11	001-002, 115-199
M10688		P037-00/ /		TIME DELAY-10 SEC				ALL
	A	C	W1270	0661	24		21-58-12	ALL
	B	C	W1270	0658	24		21-58-12	ALL
M10689		P036-00/ /		TIME DELAY-.75 SEC				ALL
	A	C	W1260	0688	24		21-58-12	ALL
	A	C	W1260	0903	24		21-58-12	ALL
	A	C	W1260	6040	24		21-58-12	ALL
	B	C	W1260	0315	24		21-58-12	ALL
M10690		P036-00/ /		TIME DELAY-3 SEC				ALL
	A	C	W1260	0908	24		21-58-12	ALL
	A	C	W1260	0909	24		21-58-12	ALL
	B	C	W1260	0923	24		21-58-12	ALL
M10691		P036-00/ /		TIME DELAY-3 SEC				ALL
	A	C	W1260	0926	24		21-58-12	ALL
	B	C	W1260	0921	24		21-58-12	ALL
	B	C	W1260	0927	24		21-58-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section M10600

Page 1 End

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
N10005		0333/281/R048		IND-WATER QUANTITY				115-199
	1	B	W3672	0005	22		38-14-11	ALL
	2	B	W3672	0004	22		38-14-11	ALL
N10015		P001-03/ /		IND-LT SW GND PROX ALERT/G/S INHB				ALL
	2	1A	W0101	0019	24		34-46-11	ALL
	3	1A	W0101	0108	24		34-46-11	ALL
	13	1A	W0101	0066	22		33-16-21	ALL
	14	1A	W0101	0050	22		33-16-11	ALL
	15	1A	W0101	0031	22		34-46-11	ALL
	16	1A	W0101	0016	22		34-46-11	ALL
	17	1A	W0101	0049	22		33-16-11	ALL
	18	1A	W0101	0065	22		33-16-21	ALL
N10017		E006-00/ /		IND-RUN TIME				001-099
N10017		E006-01/ /		IND-RUN TIME				115-199
	+	D	W1026	0046	22		49-72-11	ALL
	-	D	W1026	0048	22		49-72-11	ALL
N10032		E006-00/ /		IND-CYCLE METER				ALL
	+	\$	W1026	0047	22		49-72-11	ALL
	-	\$	W1026	0049	22		49-72-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section N10000

Page 1 End

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
QD0001		233-/ /		QUICK DISCONNECT				ALL
		GS	W0443	0000R	24		SPARE	ALL
QD0002		233-/ /		QUICK DISCONNECT				ALL
		GS	W0443	0000B	24		SPARE	ALL
QD0003		233-/ /		QUICK DISCONNECT				ALL
		GS	W0443	0000Y	24		SPARE	ALL
QD0004		233-/ /		QUICK DISCONNECT				ALL
		GS	W0443	0000G	24		SPARE	ALL
QD0005		233/ /		QUICK DISCONNECT				ALL
		GS	W0443	0000K	24		27-41-11	ALL
QD0006		233/ /		QUICK DISCONNECT				ALL
		GS	W0443	0000V	24		27-41-11	ALL
QD0007		233/ /		QUICK DISCONNECT				ALL
		GS	W0443	0000O	24		27-41-11	ALL
QD0008		233/ /		QUICK DISCONNECT				ALL
		GS	W0443	0000N	24		27-41-11	ALL
QD0009		233/ /		QUICK DISCONNECT				ALL
		GS	W0443	0000P	24		23-51-11	ALL
QD0010		233/ /		QUICK DISCONNECT				ALL
		GS	W0443	0000WR	24		23-51-11	ALL
QD0011		233/ /		QUICK DISCONNECT				ALL
		GS	W0443	0000WB	24		22-11-22	ALL
QD0012		233/ /		QUICK DISCONNECT				ALL
		GS	W0443	0000WY	24		22-11-12	ALL
QD0013		233/ /		QUICK DISCONNECT				ALL
		GS	W0443	0000WG	24		22-11-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section QD0000

Page 1

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
QD0014		233/ /		QUICK DISCONNECT				ALL
		GS	W0443	0000WK	24		22-11-22	ALL
QD0015		233/ /		QUICK DISCONNECT				ALL
		GS	W0443	0000WV	24		27-41-11	ALL
QD0016		233/ /		QUICK DISCONNECT				ALL
		GS	W0443	0000WO	24		23-51-11	ALL
QD0017		233/ /		QUICK DISCONNECT				ALL
		GS	W0443	0000WN	24		22-11-32	ALL
QD0018		233/ /		QUICK DISCONNECT				ALL
		GS	W0443	0000WP	24		22-11-12	ALL
QD0019		233/ /		QUICK DISCONNECT				ALL
		GS	W0443	0000KY	24		22-11-12	ALL
QD0020		233/ /		QUICK DISCONNECT				ALL
		GS	W0443	0000RG	24		22-11-32	ALL
QD0021		233/ /		QUICK DISCONNECT				ALL
		GS	W0443	0000RK	24		23-51-11	ALL
QD0022		233/ /		QUICK DISCONNECT				ALL
		GS	W0445	0000K	24		27-41-21	ALL
QD0023		233/ /		QUICK DISCONNECT				ALL
		GS	W0445	0000V	24		27-41-21	ALL
QD0024		233/ /		QUICK DISCONNECT				ALL
		GS	W0445	0000O	24		27-41-21	ALL
QD0025		233/ /		QUICK DISCONNECT				ALL
		GS	W0445	0000N	24		27-41-21	ALL
QD0026		233/ /		QUICK DISCONNECT				ALL
		GS	W0445	0000P	24		23-51-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section QD0000

Page 2

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
QD0027		233/ I		QUICK DISCONNECT				ALL
		GS	W0445	0000WR	24		23-51-21	ALL
QD0028		233/ I		QUICK DISCONNECT				ALL
		GS	W0445	0000WB	24		22-11-22	ALL
QD0029		233/ I		QUICK DISCONNECT				ALL
		GS	W0445	0000WY	24		22-11-12	ALL
QD0030		233/ I		QUICK DISCONNECT				ALL
		GS	W0445	0000WG	24		22-11-12	ALL
QD0031		233/ I		QUICK DISCONNECT				ALL
		GS	W0445	0000WK	24		22-11-22	ALL
QD0032		233/ I		QUICK DISCONNECT				ALL
		GS	W0445	0000WV	24		27-41-21	ALL
QD0033		233/ I		QUICK DISCONNECT				ALL
		GS	W0445	0000WO	24		23-51-21	ALL
QD0034		233/ I		QUICK DISCONNECT				ALL
		GS	W0445	0000WN	24		22-11-32	ALL
QD0035		233/ I		QUICK DISCONNECT				ALL
		GS	W0445	0000WP	24		22-11-12	ALL
QD0036		233/ I		QUICK DISCONNECT				ALL
		GS	W0445	0000KY	24		22-11-12	ALL
QD0037		233/ I		QUICK DISCONNECT				ALL
		GS	W0445	0000RG	24		22-11-32	ALL
QD0038		233/ I		QUICK DISCONNECT				ALL
		GS	W0445	0000RK	24		23-51-21	ALL
QD0039		233-/ I		QUICK DISCONNECT				ALL
		GS	W0445	0000R	24		SPARE	ALL

HOOKUP LIST

D280N032

91-21-51

Section QD0000

Page 3

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
QD0040		233-/ /		QUICK DISCONNECT				ALL
		GS	W0445	0000B	24		SPARE	ALL
QD0041		233-/ /		QUICK DISCONNECT				ALL
		GS	W0445	0000Y	24		SPARE	ALL
QD0042		233-/ /		QUICK DISCONNECT				ALL
		GS	W0445	0000G	24		SPARE	ALL

HOOKUP LIST

D280N032

91-21-51

Section QD0000

Page 4 End

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
R00011		E006-00/ /		DIODE-APU CONT,MAIN				ALL
	A	\$	W1024	0001	16		49-61-11	ALL
	C	E	W1024	0011	16		49-61-11	ALL
	C	E	W1024	0049	16		49-61-11	ALL
R00012		E006-00/ /		DIODE-APU CONT,BATT				ALL
	A	\$	W1024	0050	16		49-61-11	ALL
	C	E	W1024	0049	16		49-61-11	ALL
	C	E	W1024	0312	16		49-61-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section R00000

Page 1 End

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
R00503		P007-00/ /		RHEOSTAT-LIGHT,CAPT CHART				ALL
	1	C	W0010	0001	22		33-14-21	ALL
	2	C	W0010	C-WT			33-14-21	ALL
R00504		P007-00/ /		RHEOSTAT-LIGHT,F/O CHART				ALL
	1	C	W0012	0001	22		33-14-21	ALL
	2	C	W0012	C-WT			33-14-21	ALL
R00505		P007-00/ /		RHEOSTAT-MAP LT,CAPT				ALL
	1	C	W0010	0003	24		33-14-11	ALL
	2	C	W0010	0004	22		33-14-11	ALL
R00506		P007-00/ /		RHEOSTAT-MAP LT,F/O				ALL
	1	C	W0012	0003	24		33-14-11	ALL
	2	C	W0012	0004	22		33-14-11	ALL
R00507		P007-00/ /		POTENTIOMETER-PNL FLDT CONT,CAPT & CTR				ALL
	2	\$	W0010	2501R	22		33-11-11	ALL
	3	\$	W0010	2501B	22		33-11-11	ALL
	A	\$	W0010	0007	22		33-11-11	ALL
	B	\$	W0010	0008	22		33-11-11	ALL
	DED		W0010	2501Z			33-11-11	ALL
R00508		P007-00/ /		POTENTIOMETER-PNL FLDT CONT,CAPT & CTR				ALL
	2	\$	W0012	2501R	22		33-11-11	ALL
	3	\$	W0012	2501B	22		33-11-11	ALL
	A	\$	W0012	0007	22		33-11-11	ALL
	B	\$	W0012	0008	22		33-11-11	ALL
	DED		W0012	2501Z			33-11-11	ALL
R00511		P007-00/ /		POTENTIOMETER-CAPT INSTR & PNL LT CONT				ALL
	1	\$	W0010	3001Y	22		33-13-11	ALL
	2	\$	W0010	3001B	22		33-13-11	ALL
	3	\$	W0010	3001R	22		33-13-11	ALL
R00512		P007-00/ /		POTENTIOMETER-F/O INSTR & PNL LT CONT				ALL
	1	\$	W0012	3001Y	22		33-13-21	ALL
	2	\$	W0012	3001B	22		33-13-21	ALL
	3	\$	W0012	3001R	22		33-13-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section R00500

Page 1 End

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
R10151		E004-02/ /		FILTER-L/C				ALL
	A	\$	W1275	1537	22		27-18-11	ALL
	B	\$	W1275	0513	22		27-18-11	ALL
	= GND	F	W1275	1537Z			27-18-11	ALL
R10152		E004-02/ /		FILTER-L/C				ALL
	A	\$	W1275	1557	22		27-18-11	ALL
	B	\$	W1275	0527	22		27-18-11	ALL
	= GND	F	W1275	1557Z			27-18-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section R10100

Page 1 End

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
R10238		262/273/R001		RESISTOR ASSY-FLT DK DOME/EMER LT				ALL
	BLK		W2070	A-BK			33-51-12	115-199
	WHT		W2070	A-WT			33-51-12	115-199

HOOKUP LIST

D280N032

91-21-51

Section R10200

Page 1 End

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
R10381		260/263/L023		RESISTOR-FLT DK DOME/EMER LT				001-099
	= G	\$	W0200	0009	22		33-51-12	001-099
	= P	\$	W0200	0007	22		33-51-12	001-099

HOOKUP LIST

D280N032

91-21-51

Section R10300

Page 1 End

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
R10409		IRSS258/ /		DIODE ASSEMBLY- L TANK V10003				010-099
	BLU		W3306	T-B			28-21-23	010-099
	BLU		W3306	W-B			SPARE	010-099
	CAP	Y	W3306	W-B			SPARE	010-099
	CAP	Y	W3306	W-R			SPARE	010-099
	RED		W3306	T-R			28-21-23	010-099
	RED		W3306	W-R			SPARE	010-099
R10410		1040/180/L050		DIODE ASSEMBLY-L CTR TANK V10001				010-099
	BLU		W2418	T-B			28-21-23	010-099
	BLU		W2418	W-B			SPARE	010-099
	CAP	Y	W2418	W-B			SPARE	010-099
	CAP	Y	W2418	W-R			SPARE	010-099
	RED		W2418	T-R			28-21-23	010-099
	RED		W2418	W-R			SPARE	010-099
R10411		1051/172/R43		DIODE ASSEMBLY-R CTR TANK V10064				010-099
	BLU		W2516	T-B			28-21-23	010-099
	BLU		W2516	W-B			SPARE	010-099
	CAP	Y	W2516	W-B			SPARE	010-099
	CAP	Y	W2516	W-R			SPARE	010-099
	RED		W2516	T-R			28-21-23	010-099
	RED		W2516	W-R			SPARE	010-099
R10412		IRSS255/ /		DIODE ASSEMBLY- R TANK V10003				010-099
	BLU		W3406	T-B			28-21-23	010-099
	BLU		W3406	W-B			SPARE	010-099
	CAP	Y	W3406	W-B			SPARE	010-099
	CAP	Y	W3406	W-R			SPARE	010-099
	RED		W3406	T-R			28-21-23	010-099
	RED		W3406	W-R			SPARE	010-099

HOOKUP LIST

D280N032

91-21-51

Section R10400

Page 1 End

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00001		P001-01/ /		SW-FD INSTR SOURCE SELECT,CAPT				ALL
	A	1A	W0017	0007	20		34-22-17	ALL
	B	1A	W0017	0005	24		34-22-17	ALL
	D	1A	W0017	0006	24		34-22-17	ALL
	F	1A	W0017	0042	22		22-41-13	ALL
	G	1A	W0017	0039	22		22-41-13	ALL
	H	1A	W0017	0040	22		22-41-13	ALL
	J	1A	W0017	0041	22		22-41-13	ALL
I S00002		P001-01/ /		SWITCH-CAPT FMCS NAV SRC SEL(SB 34-0427)				001
I S00002		P001-01/ /		SWITCH-CAPT FMCS NAV SOURCE SELECT				ALL
I S00002		P001-01/ /		SWITCH-CAPT FMCS NAV SRC SEL(34-0414)				115-199
I	2	1A	W0017	0010	20		34-22-17	001-099
I	3	1A	W0017	0011	24		34-22-17	001-099
I	5	1A	W0017	0062	24		34-61-25	001-099
I	6	1A	W0017	0063	24		34-61-25	001-099
I	11	1A	W0017	0060	24		34-61-15	001-099
I	12	1A	W0017	0061	24		34-61-15	001-099
I	13	1A	W0017	0049	20		33-13-11	001-099
I	15	1A	W0017	0054	20		33-13-11	001-099
I	AA	1A	W0017	0011	24		34-22-17	115-199
I	AB	1A	W0017	0075	22		34-22-17	115-199
I	AD	1A	W0017	0076	22		34-22-17	115-199
I	AE	1A	W0017	0071	22		34-61-16	115-199
I	AF	1A	W0017	0070	22		34-61-16	115-199
I	AH	1A	W0017	0061	24		34-61-15	115-199
I	AJ	1A	W0017	0077	22		34-61-15	115-199
I	AK	1A	W0017	0060	24		34-61-15	115-199
I	BA	1A	W0017	0105	22		34-61-18	115-199
I	BB	1A	W0017	0103	22		34-61-18	115-199
I	BC	1A	W0017	0104	22		34-61-18	115-199
I	BE	1A	W0017	0102	22		34-61-18	115-199
I	BF	1A	W0017	0100	22		34-61-18	115-199
I	BG	1A	W0017	0101	22		34-61-18	115-199
I	BH	1A	W0017	0073	22		34-61-16	115-199
I	BJ	1A	W0017	0072	22		34-61-16	115-199
S00003		P001-01/ /		SW-EFI INSTR SOURCE SELECT,CAPT				ALL
	1	1A	W0017	0012	24		34-22-38	001-099
	1	1A	W0017	0012	24		34-22-37	115-199
	2	1A	W0017	0064	24		34-22-38	001-099

HOOKUP LIST

D280N032

91-21-51

Section S00000

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00003		P001-01/ /		SW-EFI INSTR SOURCE SELECT,CAPT (continued)				ALL
	2	1A	W0017	0064	24		34-22-37	115-199
	3	1A	W0017	0013	24		34-22-38	001-099
	3	1A	W0017	0013	24		34-22-37	115-199
	5	1A	W0017	0008	22		34-22-17	ALL
	6	1A	W0017	0009	20		34-22-17	ALL
	7	1A	W0017	0014	24		34-22-37	ALL
	8	1A	W0017	0059	24		34-22-17	ALL
	9	1A	W0017	0015	20		34-22-37	ALL
	11	1A	W0017	0044	20		34-22-16	ALL
	12	1A	W0017	0043	22		34-22-16	ALL
	13	1A	W0017	0050	20		33-13-11	ALL
	15	1A	W0017	0055	20		33-13-11	ALL
S00004		P001-01/ /		SW-IRS INSTR SOURCE SELECT,CAPT				ALL
	2	1A	W0017	0001	24		34-22-82	ALL
	3	1A	W0017	0002	20		34-22-82	ALL
	5	1A	W0017	0004	20		34-22-17	ALL
	6	1A	W0017	0003	24		34-22-17	ALL
	8	1A	W0017	0017	20		34-22-91	001-099
	8	1A	W0017	0017	20		34-22-93	115-199
	9	1A	W0017	0016	24		34-22-91	001-099
	9	1A	W0017	0016	24		34-22-93	115-199
	11	1A	W0017	0057	22		32-42-11	ALL
	12	1A	W0017	0058	22		32-42-11	ALL
	13	1A	W0017	0051	20		33-13-11	ALL
	15	1A	W0017	0056	20		33-13-11	ALL
S00009		P003-03/ /		SW-FD INSTR SOURCE SELECT,F/O				ALL
	A	1A	W0033	0007	20		34-22-27	ALL
	B	1A	W0033	0005	24		34-22-27	ALL
	D	1A	W0033	0006	24		34-22-27	ALL
	F	1A	W0033	0053	20		22-41-13	ALL
	G	1A	W0033	0050	22		22-41-13	ALL
	H	1A	W0033	0051	22		22-41-13	ALL
	J	1A	W0033	0052	22		22-41-13	ALL
I S00010		P003-03/ /		SWITCH-F/O FMCS NAV SRC SEL (SB 34-0427)				001
I S00010		P003-03/ /		SWITCH-F/O FMCS NAV SOURCE SELECT				ALL
I S00010		P003-03/ /		SWITCH-F/O FMCS NAV SRC SEL (34-0414)				115-199
I	1	1A	W0033	0009	24		34-22-27	001-099

HOOKUP LIST

D280N032

91-21-51

Section S00000

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00010		P003-03/ /		SWITCH-F/O FMCS NAV SRC SEL (SB 34-0427) (continued)				001
S00010		P003-03/ /		SWITCH-F/O FMCS NAV SOURCE SELECT (continued)				ALL
S00010		P003-03/ /		SWITCH-F/O FMCS NAV SRC SEL (34-0414) (continued)				115-199
	2	1A	W0033	0186	24		34-22-27	001-099
	3	1A	W0033	0008	20		34-22-27	001-099
	13	1A	W0033	0059	20		33-13-21	001-099
	15	1A	W0033	0064	20		33-13-21	001-099
	AA	1A	W0033	0008	20		34-22-27	115-199
	AC	1A	W0033	0009	24		34-22-27	115-199
	AE	1A	W0033	0071	22		34-61-26	115-199
	AG	1A	W0033	0070	22		34-61-26	115-199
	AH	1A	W0033	0082	22		34-61-25	115-199
	AJ	1A	W0033	0081	22		34-61-25	115-199
	AK	1A	W0033	0080	22		34-61-25	115-199
	BA	1A	W0033	0102	22		34-61-18	115-199
	BC	1A	W0033	0100	22		34-61-18	115-199
	BD	1A	W0033	0101	22		34-61-18	115-199
	BE	1A	W0033	0105	22		34-61-18	115-199
	BF	1A	W0033	0103	22		34-61-18	115-199
	BG	1A	W0033	0104	22		34-61-18	115-199
	BH	1A	W0033	0186	24		34-61-26	115-199
	BK	1A	W0033	0072	22		34-61-26	115-199
S00011		P003-03/ /		SW-EFI INSTR SOURCE SELECT,F/O				ALL
	2	1A	W0033	0022	24		34-22-37	ALL
	3	1A	W0033	0021	20		34-22-37	ALL
	5	1A	W0033	0011	22		34-22-27	ALL
	6	1A	W0033	0010	20		34-22-27	ALL
	7	1A	W0033	0018	24		34-22-37	ALL
	9	1A	W0033	0019	24		34-22-37	ALL
	11	1A	W0033	0055	20		34-22-26	ALL
	12	1A	W0033	0054	22		34-22-26	ALL
	13	1A	W0033	0060	20		33-13-21	ALL
	15	1A	W0033	0065	20		33-13-21	ALL
S00012		P003-03/ /		SW-IRS INSTR SOURCE SELECT,F/O				ALL
	1	1A	W0033	0012	24		34-21-31	ALL
	2	1A	W0033	0001	24		34-22-92	ALL
	3	1A	W0033	0002	20		34-22-92	ALL
	5	1A	W0033	0004	20		34-22-27	ALL
	6	1A	W0033	0003	24		34-22-27	ALL

HOOKUP LIST

D280N032

91-21-51

Section S00000

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00012		P003-03/ /		SW-IRS INSTR SOURCE SELECT,F/O (continued)				ALL
	8	1A	W0033	0067	22		32-42-11	ALL
	9	1A	W0033	0068	22		32-42-11	ALL
	11	1A	W0033	0016	20		34-22-81	001-099
	11	1A	W0033	0016	20		34-22-83	115-199
	12	1A	W0033	0017	24		34-22-81	001-099
	12	1A	W0033	0017	24		34-22-83	115-199
	13	1A	W0033	0061	20		33-13-21	ALL
	15	1A	W0033	0066	20		33-13-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section S00000

Page 4 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00318		1210/145/R025		SW-INSP LIGHT,WHEEL WELL,MAIN				ALL
	2	C	W2516	1019	20		33-31-11	ALL
	3	C	W2516	1033	18		33-31-11	ALL
S00320		P007-00/ /		SW-CLOCK,CAPT				ALL
	1C	Z2	W0010	3002B	22		31-25-11	ALL
	1NC	Z2	W0010	3002R	22		31-25-11	ALL
	1NO	Z2	W0010	3002Y	22		31-25-11	ALL
S00321		P007-00/ /		SW-CLOCK,F/O				ALL
	1C	Z2	W0012	3002B	22		31-25-11	ALL
	1NC	Z2	W0012	3002R	22		31-25-11	ALL
	1NO	Z2	W0012	3002Y	22		31-25-11	ALL
S00324		P063-00/ /		SW-LIGHT,WHEEL WELL,NOSE GEAR				ALL
	2	C	W3052	0001	18		33-31-11	ALL
	3	C	W3052	0002	18		33-31-11	ALL
S00334		0239/188/L030		SW-LEFT COL-OUTBD AFT				ALL
	C		W2355	A-B			27-41-11	ALL
	NO		W2355	A-A			27-41-11	ALL
S00335		0239/188/L030		SW-LEFT COL-OUTBD FWD				ALL
	C		W2355	C-B			27-41-11	ALL
	NO		W2355	C-A			27-41-11	ALL
S00337		333/190/L20		SW-RIGHT COL-OUTBD AFT				ALL
	C		W2357	A-B			27-41-21	ALL
	NO		W2357	A-A			27-41-21	ALL
S00338		229/190/L20		SW-RIGHT COL-OUTBD FWD				ALL
	C		W2357	C-B			27-41-21	ALL
	NO		W2357	C-A			27-41-21	ALL
S00345		P028-00/ /		SW-FUELING POWER SELECT				ALL
	2	C	W1500	0001	20		28-21-11	ALL
	3	C	W1500	0002	20		28-21-21	ALL
	3	C	W1500	0055	20		28-21-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section S00300

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00346		OSS504/ /RLE		SW-FUELING PANEL DOOR				ALL
	BLU		W3426	A-AH			28-21-11	ALL
	RED		W3426	A-AI			28-21-11	ALL
S00347		P028-00/ /		SW-OVERFILL RESET				ALL
	1	A	W1500	0002	20		28-21-21	ALL
	1	A	W1500	0004	20		28-21-21	ALL
	2	A	W1500	0003	20		28-21-21	ALL
S00348		P028-00/ /		SW-REFUELING VALVE CONT,L TANK				ALL
	2	C	W1500	0047	20		28-21-22	ALL
	3	C	W1500	0046	20		28-21-22	ALL
S00349		P028-00/ /		SW-REFUELING VALVE CONT,R TANK				ALL
	2	C	W1500	0050	20		28-21-22	ALL
	3	C	W1500	0053	20		28-21-22	ALL
S00350		P028-00/ /		SW-DEFUEL VALVE CONT,L				ALL
	2	C	W1500	0024	20		28-26-11	ALL
	2	C	W1500	0030	20		28-26-11	ALL
	3	C	W1500	0029	20		28-26-11	ALL
S00351		P028-00/ /		SW-DEFUEL VALVE CONT,R				ALL
	2	C	W1500	0027	20		28-26-11	ALL
	2	C	W1500	0032	20		28-26-11	ALL
	3	C	W1500	0031	20		28-26-11	ALL
S00355		477/162/R023		SW-E/E CTR LTS, MAIN				ALL
	2	C	W4086	0006	18		33-31-41	ALL
	3	C	W4086	0008	18		33-31-41	ALL
	5	C	W2356	0297	18		33-31-41	001-099
	5	C	W4086	0006	18		33-31-41	ALL
	5	C	W4086	0002	18		33-31-41	115-199
	6	C	W4086	0007	18		33-31-41	ALL
S00357		231/157/R007		SW-E/E CTR LTS, FWD				ALL
	2	C	W2356	0257	20		33-31-41	001-099
	2	C	W4086	0001	20		33-31-41	115-199
	3	C	W2356	0056	20		33-31-41	001-099
	3	C	W4086	0003	20		33-31-41	115-199

HOOKUP LIST

D280N032

91-21-51

Section S00300

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00361		1035/134/L016		SW-AIR COND COMPT LTS, LEFT				ALL
	2	C	W2506	1011	18		33-31-21	001-099
	2	C	W2406	1009	18		33-31-21	ALL
	2	C	W2406	1006	18		33-31-21	115-199
	3	C	W2406	1008	18		33-31-21	ALL
	3	C	W2406	B-BK			33-31-21	ALL
S00362		1035/134/R016		SW-AIR COND COMPT LTS, RIGHT				ALL
	2	C	W2506	1011	18		33-31-21	001-099
	2	C	W2406	1006	18		33-31-21	115-199
	3	C	W2506	1009	18		33-31-21	ALL
	3	C	W2506	B-BK			33-31-21	ALL
S00371		P010-00/ /		SW-ARMING,AUTO SPEED BRAKE				ALL
	C		W1115	A-CO			27-62-11	ALL
	C		W1115	B-CO			27-62-11	ALL
	NC		W1115	A-NC			27-62-11	ALL
	NC		W1115	B-NC			27-62-11	ALL
	NO		W1115	A-N			27-62-11	ALL
	NO		W1115	B-N			27-62-11	ALL
S00374		P010-00/ /		SW-ENG THRUST REV				ALL
	C		W1115	C-CO			27-62-11	ALL
	NC		W1115	C-NC			27-62-11	ALL
	NO		W1115	C-NO			27-62-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section S00300

Page 3 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00416		P028-00/ /		SW-OVERFILL SYS TEST				ALL
	1	A	W1500	0004	20		28-21-21	ALL
	2	A	W1500	0006	20		28-21-21	ALL
S00417		P028-00/ /		SW-REFUELING VALVE CONT,CTR TANK				ALL
	2	C	W1500	0048	20		28-21-22	ALL
	3	C	W1500	0049	20		28-21-22	ALL
S00418		P028-00/ /		SW-TANK LOAD SET,L				ALL
	1	A	W1500	0058	20		28-21-22	ALL
	2	A	W1500	0059	20		28-21-22	ALL
S00419		P028-00/ /		SW-TANK LOAD SET,R				ALL
	1	A	W1500	0063	20		28-21-22	ALL
	2	A	W1500	0062	20		28-21-22	ALL
S00420		P028-00/ /		SW-TANK LOAD SET,CTR				ALL
	1	A	W1500	0060	20		28-21-22	ALL
	2	A	W1500	0061	20		28-21-22	ALL
S00421		P028-00/ /		SW-TEST,SHUTOFF SYS				ALL
	1	A	W1500	0007	20		28-21-22	ALL
	2	A	W1500	0008	20		28-21-22	ALL
S00426		P062-00/ /		SW-FLIGHT DECK CALL				ALL
	1	C	W3054	0001	18		23-43-11	ALL
	2	C	W3054	0002	18		23-43-11	ALL
S00427		1759/190/L018		SW-TAILCONE COMPT LTS,FWD				ALL
	1	C	W2818	0007	20		33-31-31	ALL
	2	C	W2818	0008	20		33-31-31	ALL
	2	C	W2818	0016	20		33-31-31	ALL
	3	C	W2818	0011	20		33-31-31	ALL
S00428		1886/210/L005		SW-APU COMPT LTS				ALL
	2	C	W2822	0001	20		33-31-31	ALL
	3	C	W2822	0003	20		33-31-31	ALL
	3	C	W2822	0002	20		SPARE	115-199

HOOKUP LIST

D280N032

91-21-51

Section S00400

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00429		P044-00/ /		SW-AFT CARGO COMPT LIGHTS				ALL
	2	C	W1016	0007	18		33-37-21	ALL
	3	C	W1016	0008	18		33-37-21	ALL
S00441		P007-00/ /		SWITCH-CAPT GLARESHIELD (SB 23-0101)				115-199
	1C	Z2	W0010	2005B	24		23-51-11	115-199
	1NO	Z2	W0010	2005R	24		23-51-11	115-199
S00442		P007-00/ /		SWITCH-F/O GLARESHIELD (SB 23-0101)				115-199
	1C	Z2	W0012	2005B	24		23-51-21	115-199
	1NO	Z2	W0012	2005R	24		23-51-21	115-199
S00443		1864/212/R018		SW-TAILCONE COMPT LTS,AFT				ALL
	1	C	W2818	0007	20		33-31-31	ALL
	2	C	W2818	0009	20		33-31-31	ALL
	2	C	W2818	0010	20		33-31-31	ALL
	3	C	W2818	0011	20		33-31-31	ALL
S00457		P028-00/ /		SW-INDICATOR TEST				ALL
	1	A	W1500	0009	20		28-21-22	ALL
	2	A	W1500	0010	20		28-21-22	ALL
S00459		217/183/L016		SW-PARKING BRAKE				ALL
	1C	B	W4220	0096	22		32-44-11	ALL
	2C	B	W4220	0043	20		31-51-41	ALL
	1NC	B	W4220	0094	22		32-44-11	ALL
	1NO	B	W4220	0095	22		32-44-11	ALL
	2NO	B	W4220	0042	22		31-51-41	ALL
S00482		P001-01/ /		SW-ADC INSTR SOURCE SELECT,CAPT				ALL
	2	1A	W0017	0037	22		34-13-11	ALL
	3	1A	W0017	0032	20		34-12-61	ALL
	5	1A	W0017	0036	22		34-12-61	ALL
	6	1A	W0017	0030	20		34-12-61	ALL
	7	1A	W0017	0024	22		34-12-61	ALL
	8	1A	W0017	0025	22		34-12-61	ALL
	9	1A	W0017	0031	22		34-12-61	ALL
	11	1A	W0017	0035	22		34-12-61	ALL
	12	1A	W0017	0033	20		34-12-61	ALL
	13	1A	W0017	0048	20		33-13-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section S00400

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00482		P001-01/ /		SW-ADC INSTR SOURCE SELECT,CAPT (continued)				ALL
	15	1A	W0017	0053	20		33-13-11	ALL
S00483		P003-03/ /		SW-ADC INSTR SOURCE SELECT,F/O				ALL
	1	1A	W0033	0033	24		34-22-27	ALL
	2	1A	W0033	0044	20		34-13-21	ALL
	3	1A	W0033	0046	20		34-12-62	ALL
	5	1A	W0033	0069	22		34-12-62	ALL
	6	1A	W0033	0047	20		34-12-62	ALL
	7	1A	W0033	0032	22		34-12-62	ALL
	8	1A	W0033	0043	22		34-12-62	ALL
	9	1A	W0033	0031	20		34-12-62	ALL
	10	1A	W0033	0049	22		34-12-62	ALL
	11	1A	W0033	0048	22		34-12-62	ALL
	12	1A	W0033	0045	20		34-12-62	ALL
	13	1A	W0033	0058	20		33-13-21	ALL
	15	1A	W0033	0063	20		33-13-21	ALL
S00484		P062-00/ /		SW-APU FIRE SHT DN				ALL
	1		W3060	A-01			26-15-12	ALL
	2		W3060	A-02			26-15-12	ALL
	3		W3060	A-03			26-15-12	ALL
	4		W3060	A-04			26-15-12	ALL
	5		W3060	A-05			26-15-12	ALL
	6		W3060	A-06			26-15-12	ALL
	CAP	Y	W3060	A-02			26-15-12	ALL
	CAP	Y	W3060	A-04			26-15-12	ALL
	CAP	Y	W3060	A-05			26-15-12	ALL
	CAP	Y	W3060	A-06			26-15-12	ALL
S00485		P062-00/ /		SW-APU BTL 1 DISCH				ALL
	1		W3060	B-01			26-15-12	ALL
	2		W3060	B-02			26-15-12	ALL
	3		W3060	B-03			26-22-21	001-099
	3		W3060	B-03			26-15-12	115-199
	4		W3060	B-04			26-15-12	ALL
	5		W3060	B-05			26-15-12	ALL
	6		W3060	B-06			26-15-12	ALL
	CAP	Y	W3060	B-02			26-15-12	ALL
	CAP	Y	W3060	B-04			26-15-12	ALL
	CAP	Y	W3060	B-05			26-15-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section S00400

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00485		P062-00/ /		SW-APU BTL 1 DISCH (continued)				ALL
	CAP	Y	W3060	B-06			26-15-12	ALL
S00493		P010-00/ /		SW-SPOILER HANDLE DETENT SW POSITION				ALL
	BLK		W1115	A-BK			32-42-12	ALL
	BLK		W1115	B-BK			31-51-41	ALL
	BLU		W1115	A-BU			32-42-12	ALL
	BLU		W1115	B-BU			31-51-41	ALL
	RED		W1115	A-RD			32-42-12	ALL
	RED		W1115	B-RD			31-51-41	ALL

HOOKUP LIST

D280N032

91-21-51

Section S00400

Page 4 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00507		P007-00/ /		SW-MASTER CAUTION/WARNING LT,CAPT				ALL
	2	1A	W0010	0028	22		31-51-21	ALL
	3	1A	W0010	0026	22		31-51-21	ALL
	5	1A	W0010	0030	22		SPARE	ALL
	6	1A	W0010	0031	22		SPARE	ALL
	8	1A	W0010	0032	22		31-41-14	ALL
	9	1A	W0010	0033	22		31-41-14	ALL
	13	1A	W0010	0022	22		33-16-51	ALL
	14	1A	W0010	0024	22		33-16-51	ALL
	15	1A	W0010	0027	22		31-51-21	ALL
	16	1A	W0010	0029	22		31-41-14	ALL
	17	1A	W0010	0025	22		33-16-11	ALL
	18	1A	W0010	0023	22		33-16-21	ALL
S00508		P007-00/ /		SW-MASTER CAUTION/WARNING LT,F/O				ALL
	2	1A	W0012	0028	22		31-51-21	ALL
	3	1A	W0012	0026	22		31-51-21	ALL
	5	1A	W0012	0030	22		SPARE	ALL
	6	1A	W0012	0031	22		SPARE	ALL
	8	1A	W0012	0032	22		31-41-14	ALL
	9	1A	W0012	0033	22		31-41-14	ALL
	13	1A	W0012	0022	22		33-16-61	ALL
	14	1A	W0012	0024	22		33-16-51	ALL
	15	1A	W0012	0027	22		31-51-21	ALL
	16	1A	W0012	0029	22		31-41-14	ALL
	17	1A	W0012	0025	22		33-16-41	ALL
	18	1A	W0012	0023	22		33-16-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section S00500

Page 1 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S00616		P003-00/ /		SW-MAG/TRUE				ALL
	1C	Z2	W0002	0033	20		34-22-36	ALL
	3C	Z2	W0002	0036	20		34-22-36	ALL
	4C	Z2	W0002	0034	20		34-22-36	ALL
	3NC	Z2	W0002	0035	22		34-22-36	ALL
	4NC	Z2	W0002	0037	22		34-22-36	ALL
	1NO	Z2	W0002	0032	22		34-22-36	ALL

HOOKUP LIST

D280N032

91-21-51

Section S00600

Page 1 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S10031		1821/286/R014		SW-APU INLET DOOR				ALL
	B		W2654	A-B			49-61-14	ALL
	R		W2654	A-A			49-61-14	ALL
S10035		P062-00/ /		SW-TEST,EMER LT				ALL
	1	C	W3054	0007	20		33-51-11	ALL
	2	C	W3054	0006	20		33-51-11	ALL
	4	C	W3054	0007	20		33-51-11	ALL
	4	C	W3054	0008	20		33-51-11	ALL
	5	C	W3054	0005	20		33-51-11	ALL
	7	C	W3054	0008	20		33-51-11	ALL
	7	C	W3054	0009	20		33-51-11	ALL
	8	C	W3054	0004	20		33-51-11	ALL
	10	C	W3054	0009	20		33-51-11	ALL
	10	C	W3054	0013	20		33-51-11	ALL
	11	C	W3054	0003	20		33-51-11	ALL
S10057		R MLG/ /		SW-PROX SNSR,R GEAR DOWN & LOCKED,SYS 1				ALL
	BLU		W4920	A-AB			32-61-22	ALL
	RED		W4920	A-AA			32-61-22	ALL
S10059		R MLG/ /		SW-PROX SNSR,R TRUCK NOT TILTED,SYS 2				ALL
	BLU		W4926	A-AA			32-09-12	ALL
	RED		W4926	A-AB			32-09-12	ALL
S10060		R MLG/ /		SW-PROX SNSR,R TRUCK NOT TILTED,SYS 1				ALL
	BLU		W4906	A-AA			32-09-11	ALL
	RED		W4906	A-AB			32-09-11	ALL
S10061		L MLG/ /		SW-PROX SNSR,L GEAR DOWN & LOCKED,SYS 1				ALL
	BLU		W3020	A-AB			32-61-22	ALL
	RED		W3020	A-AA			32-61-22	ALL
S10062		L MLG/ /		SW-PROX SNSR,L TRUCK NOT TILTED,SYS 1				ALL
	BLU		W3006	A-AA			32-09-11	ALL
	RED		W3006	A-AB			32-09-11	ALL
S10064		L MLG/ /		SW-PROX SNSR,L TRUCK NOT TILTED,SYS 2				ALL
	BLU		W3026	A-AA			32-09-12	ALL
	RED		W3026	A-AB			32-09-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section S10000

Page 1

Oct 09/2008

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S10065		395/192/R002		SW-PROX SNSR,NOSE GEAR LOCKED,SYS 1				ALL
S10065		MLG/ /		SW-PROX SNSR,NOSE GEAR LOCKED,SYS 1				ALL
	BLU		W2152	A-C			32-61-22	ALL
	RED		W2152	A-D			32-61-22	ALL
S10066		350/192/L020		SW-PROX SNSR,NOSE GEAR DOWN,SYS 1				ALL
	BLU		W2152	A-A			32-61-22	ALL
	RED		W2152	A-B			32-61-22	ALL
S10067		NWW/ /		SW-PROX SNSR,NOSE GEAR NOT CPRSD,SYS 1				ALL
	BLU		W3052	A-B			32-09-11	ALL
	RED		W3052	A-A			32-09-11	ALL
S10068		NWW/ /		SW-PROX SNSR,NOSE GEAR NOT CPRSD,SYS 2				ALL
	BLU		W3054	A-D			32-09-12	ALL
	RED		W3054	A-E			32-09-12	ALL
S10069		1068/175/R065		SW-PROX SNSR,R GEAR UP & LOCKED,SYS 2				ALL
	BLU		W2510	A-AB			32-61-13	ALL
	RED		W2510	A-AA			32-61-13	ALL
S10070		R MLG/ /		SW-PROX SNSR,R GEAR DOWN & LOCKED,SYS 2				ALL
	BLU		W4922	A-AB			32-61-22	ALL
	RED		W4922	A-AA			32-61-22	ALL
S10072		1070/145/R060		SW-PROX SNSR,R GEAR DOOR CLOSED,SYS 2				ALL
	BLU		W2510	A-BB			32-61-13	ALL
	RED		W2510	A-BA			32-61-13	ALL
S10073		1130/170/L050		SW-PROX SNSR,L GEAR UP & LOCKED,SYS 2				ALL
	BLU		W2412	A-BB			32-61-13	ALL
	RED		W2412	A-BA			32-61-13	ALL
S10074		L MLG/ /		SW-PROX SNSR,L GEAR DOWN & LOCKED,SYS 2				ALL
	BLU		W3022	A-AB			32-61-22	ALL
	RED		W3022	A-AA			32-61-22	ALL
S10076		LWW/ /		SW-PROX SNSR,L GEAR DOOR CLOSED,SYS 2				ALL
	BLU		W2412	A-AB			32-61-13	ALL
	RED		W2412	A-AA			32-61-13	ALL

HOOKUP LIST

D280N032

91-21-51

Section S10000

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S10077		350/192/R017		SW-PROX SNSR,NOSE GEAR UP,SYS 2				ALL
	BLU		W2052	A-A			32-61-13	ALL
	RED		W2052	A-B			32-61-13	ALL
S10078		NLG/ /		SW-PROX SNSR,NOSE GEAR LOCKED,SYS 2				ALL
	BLU		W2052	A-C			32-61-22	ALL
	RED		W2052	A-D			32-61-22	ALL
S10079		350/192/R020		SW-PROX SNSR,NOSE GEAR DOWN,SYS 2				ALL
	BLU		W2052	A-E			32-61-22	ALL
	RED		W2052	A-F			32-61-22	ALL
S10081		263/158/R009		SW-PROX SNSR,NOSE GEAR DOOR CLOSED,SYS 2				ALL
	BLU		W2052	A-G			32-61-13	ALL
	RED		W2052	A-H			32-61-13	ALL
S10083		0560/169/R046		SW-SNSR,NO.1 CARGO DR				ALL
S10083		582/200/R065		SW-SNSR,NO.1 CARGO DR				ALL
	BLU		W4104	E-BL			52-71-21	ALL
	RED		W4104	E-RD			52-71-21	ALL
S10085		230/148/		SW-SNSR,FWD ACCESS DR				ALL
	BLU		W3582	G-GA			52-71-11	ALL
	RED		W3582	G-PA			52-71-11	ALL
S10086		468/152/R009		SW-SNSR,E/E ACCESS DR				ALL
S10086		467/150/R008		SW-SNSR,E/E ACCESS DR				ALL
	BLU		W3582	J-GA			52-71-11	ALL
	RED		W3582	J-PA			52-71-11	ALL
S10088		1380/194/R044		SW-SNSR,NO.2 CARGO DR				ALL
	BLU		W2632	G-BL			52-71-21	ALL
	RED		W2632	G-RD			52-71-21	ALL
S10089		1640/160/R040		SW-SNSR,NO.3 CARGO DR				115-199
	BLU		W2632	J-BL			52-71-21	115-199
	RED		W2632	J-RD			52-71-21	115-199
S10090		333/265/R060		SW-SNSR,NO.1 PASS DR R				ALL
	BLU		W3682	G-GA			52-71-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section S10000

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S10090		333/265/R060		SW-SNSR,NO.1 PASS DR R (continued)				ALL
	RED		W3682	G-PA			52-71-21	ALL
S10091		0730/270/R060		SW-SNSR,NO.2 PASS DR R				ALL
S10091		737/267/R060		SW-SNSR,NO.2 PASS DR R				ALL
	BLU		W3682	H-GA			52-71-21	ALL
	RED		W3682	H-PA			52-71-21	ALL
S10092		1320/210/R065		SW-SNSR,NO.3 EMER EXIT R				ALL
	BLU		W3682	J-GA			52-71-21	ALL
	RED		W3682	J-PA			52-71-21	ALL
S10093		1682/220/R062		SW-SNSR,NO.4 PASS DR R				ALL
	BLU		W3682	K-GA			52-71-21	ALL
	RED		W3682	K-PA			52-71-21	ALL
S10094		377/274/L056		SW-SNSR,NO.1 PASS DR L				ALL
	BLU		W3582	H-GA			52-71-11	ALL
	RED		W3582	H-PA			52-71-11	ALL
S10095		729/277/L057		SW-SNSR,NO.2 PASS DR L				ALL
	BLU		W3582	K-GA			52-71-11	ALL
	RED		W3582	K-PA			52-71-11	ALL
S10096		1320/240/L072		SW-SNSR,NO.3 EMER EXIT L				ALL
	BLU		W3582	L-GA			52-71-11	ALL
	RED		W3582	L-PA			52-71-11	ALL
S10097		1682/220/L065		SW-SNSR,NO.4 PASS DR L				ALL
	BLU		W3582	M-GA			52-71-11	ALL
	RED		W3582	M-PA			52-71-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section S10000

Page 4 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S10128		P043-00/ /		SW-FWD CARGO COMPT LTS				ALL
	2	C	W0816	0007	22		33-37-11	001-099
	2	C	W0816	0007	18		33-37-11	115-199
	3	C	W0816	0008	22		33-37-11	001-099
	3	C	W0816	0008	18		33-37-11	115-199
S10159		P023-00/ /		SW-ENTRY LT,MID FWD ATTEND PNL				001-099
S10159		P076-00/ /		SW-ENTRY LT,MID FWD ATTEND PNL				115-199
	C	Z1	W0506	0001	22		33-22-12	001-099
	C	Z1	W0540	0001	22		33-22-12	115-199
	NO	Z1	W0506	0005	22		33-22-12	001-099
	NO	Z1	W0540	0004	22		33-22-12	115-199
	+	Z1	W0506	0004	22		33-22-12	001-099
	+	Z1	W0540	0005	22		33-22-12	115-199
	-	Z1	W0506	0003	22		33-22-12	001-099
	-	Z1	W0540	0002	22		33-22-12	115-199
S10165B		0308/250/R.35		SW-FLT DECK OPEN/CLOSE DOOR SENSOR				ALL
	BLU		W0502	B-GA			33-22-11	ALL
	RED		W0502	B-PA			33-22-11	ALL
S10167		P022-00/ /		SW-THRESHOLD LTS,AFT ATTEND PNL				ALL
	C	Z1	W0510	0005	22		33-22-14	001-099
	C	Z1	W0510	0020	22		33-22-14	115-199
	NO	Z1	W0510	0006	22		33-22-14	001-099
	NO	Z1	W0510	0001	22		33-22-14	115-199
	+	Z1	W0510	0007	22		33-22-14	001-099
	+	Z1	W0510	0002	22		33-22-14	115-199
	-	Z1	W0510	0008	22		33-22-14	001-099
	-	Z1	W0510	0003	20		33-22-14	115-199
S10170		P001-03/ /		SW-EICAS DISPLAY,CANCEL				ALL
	C	\$	W0101	0075	22		31-41-19	ALL
	NO	\$	W0101	0078	24		31-41-19	ALL
S10172		P003-01/ /		SW-GND PROX FLAP OVERRIDE				ALL
	7	1A	W0002	0115	24		SPARE	115-199
	11	1A	W0002	0112	24		34-46-11	ALL
	12	1A	W0002	0116	24		34-46-11	ALL
	13	1A	W0002	0048	20		33-13-21	ALL
	15	1A	W0002	0049	20		33-13-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section S10100

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S10179		P021-00/ /		SW-BOARDING MUSIC REMOTE CONTROL				115-199
	3	\$	W0504	0035	22		23-34-16	115-199
	3	\$	W0504	0042	22		23-34-16	115-199
	4	\$	W0504	0032	22		23-34-16	115-199
	4	\$	W0504	0035	22		23-34-16	115-199
	6	\$	W0504	0031	22		23-34-16	115-199
	8	\$	W0504	0031	22		23-34-16	115-199
	8	\$	W0504	0032	22		23-34-16	115-199
	A	\$	W0504	0057	20		23-34-16	115-199
	B	\$	W0504	0029	22		23-34-16	115-199
	C	\$	W0504	0056	20		23-34-16	115-199
	C	\$	W0504	0057	20		23-34-16	115-199
	D	\$	W0504	0030	22		23-34-16	115-199
	E	\$	W0504	0037	22		23-34-16	115-199
	F	\$	W0504	0036	22		23-34-16	115-199
	CW	\$	W0504	3026R	22		23-34-16	115-199
	ARM	\$	W0504	3026Y	22		23-34-16	115-199
	CCW	\$	W0504	3026B	22		23-34-16	115-199
S10180		578/200/R020		SW-DOOR CONTROL				ALL
	1	C	W4104	0048	22		52-34-11	ALL
	2	C	W4104	0081	22		52-34-11	001-099
	2	C	W4104	0080	22		52-34-11	ALL
	5	C	W4104	0081	22		52-34-11	ALL
	6	C	W4104	0050	22		52-34-11	ALL
S10181		1397/204/R016		SW-DR CONTROL				ALL
	1	C	W2632	0230	22		52-35-11	001-099
	1	C	W2716	0230	22		52-35-11	115-199
	2	C	W2632	0228	22		52-35-11	001-099
	2	C	W2632	0229	22		52-35-11	001-099
	2	C	W2716	0229	22		52-35-11	115-199
	5	C	W2632	0228	22		52-35-11	001-099
	5	C	W2716	0228	22		52-35-11	115-199
	6	C	W2632	0231	22		52-35-11	001-099
	6	C	W2716	0231	22		52-35-11	115-199
S10182		P044-00/ /		SW-CARGO DR CONTROL				ALL
	1	C	W1016	0004	22		52-35-11	ALL
	2	C	W1016	0001	22		52-35-11	ALL
	2	C	W1016	0002	22		52-35-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section S10100

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S10182		P044-00/ /		SW-CARGO DR CONTROL (continued)				ALL
	5	C	W1016	0002	22		52-35-11	ALL
	6	C	W1016	0003	22		52-35-11	ALL
S10183		P043-00/ /		SW-CARGO DOOR CONTROL				ALL
	1	C	W0816	0004	22		52-34-11	ALL
	2	C	W0816	0001	22		52-34-11	ALL
	2	C	W0816	0002	22		52-34-11	ALL
	5	C	W0816	0002	22		52-34-11	ALL
	6	C	W0816	0003	22		52-34-11	ALL
S10190		1218/133/R025		SW-ALL DOORS OPEN				ALL
	1	C	W2516	1018	18		32-12-11	ALL
	2	C	W2516	0003	18		32-12-11	ALL
S10191		1218/133/R025		SW-ALL DOORS OPEN ARM				ALL
	1	C	W2516	0003	18		32-12-11	ALL
	2	C	W2516	1025	20		32-35-11	ALL
S10192		1216/133/R025		SW-MAIN GEAR DOORS CLOSE				ALL
	1	C	W2512	1014	18		32-12-12	ALL
	2	C	W2512	1015	18		32-12-12	ALL
	3	C	W2512	1013	18		32-12-12	ALL
S10193		P063-00/ /		SW-CLOSE,NOSE GEAR DOOR				ALL
	1	C	W3052	0026	18		32-12-12	ALL
	2	C	W3052	0027	18		32-12-12	ALL
	3	C	W3052	0025	18		32-12-12	ALL
S10194		PPS135/ /		SW-OVHT,L STRUT,LOOP 1,NO 1				ALL
	=1	C	W3328	0001	18		26-12-11	ALL
	=1	C	W3328	0003	18		26-12-11	ALL
	=2	C	W3328	0002	18		26-12-11	ALL
S10195		PPS166/154/		SW-OVHT,L STRUT,LOOP 1,NO 2				ALL
	=1	C	W3328	0003	18		26-12-11	ALL
	=1	C	W3328	0005	18		26-12-11	ALL
	=2	C	W3328	0004	18		26-12-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section S10100

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S10196		PPS185/ /		SW-OVHT,L STRUT,LOOP 1,NO 3				ALL
	=1	L	W3330	0001	18		26-12-11	ALL
	=1	L	W3330	0002	18		26-12-11	ALL
	=2	L	W3330	0003	18		26-12-11	ALL
S10197		PPS166/154/		SW-OVHT,L STRUT,LOOP 2,NO 2				ALL
	=1	C	W3320	0005	18		26-12-11	ALL
	=1	C	W3320	0007	18		26-12-11	ALL
	=2	C	W3320	0004	18		26-12-11	ALL
S10198		PPS135/ /		SW-OVHT,L STRUT,LOOP 2,NO 1				ALL
	=1	C	W3320	0007	18		26-12-11	ALL
	=1	C	W3320	0008	18		26-12-11	ALL
	=2	C	W3320	0006	18		26-12-11	ALL
S10199		PPS185/ /		SW-OVHT,L STRUT,LOOP 2,NO 3				ALL
	=1	L	W3370	0003	18		26-12-11	ALL
	=1	L	W3370	0004	18		26-12-11	ALL
	=2	L	W3370	0005	18		26-12-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section S10100

Page 4 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S10200		PPS166/154/R		SW-OVHT,R STRUT,LOOP 1,NO 2				ALL
	=1	C	W3428	0003	18		26-12-21	ALL
	=1	C	W3428	0004	18		26-12-21	ALL
	=2	C	W3428	0005	18		26-12-21	ALL
S10201		PPS135/ /		SW-OVHT,R STRUT,LOOP 1,NO 1				ALL
	=1	C	W3428	0004	18		26-12-21	ALL
	=1	C	W3428	0006	18		26-12-21	ALL
	=2	C	W3428	0007	18		26-12-21	ALL
S10202		PPS185/ /		SW-OVHT,R STRUT,LOOP 1,NO 3				ALL
	=1	L	W3430	0001	18		26-12-21	ALL
	=1	L	W3430	0002	18		26-12-21	ALL
	=2	L	W3430	0003	18		26-12-21	ALL
S10203		PPS166/154/R		SW-OVHT,R STRUT,LOOP 2,NO 2				ALL
	=1	C	W3420	0005	18		26-12-21	ALL
	=1	C	W3420	0007	18		26-12-21	ALL
	=2	C	W3420	0004	18		26-12-21	ALL
S10204		PPS135/ /		SW-OVHT,R STRUT,LOOP 2,NO 1				ALL
	=1	C	W3420	0007	18		26-12-21	ALL
	=1	C	W3420	0008	18		26-12-21	ALL
	=2	C	W3420	0006	18		26-12-21	ALL
S10205		PPS185/ /		SW-OVHT,R STRUT,LOOP 2,NO 3				ALL
	=1	L	W3470	0003	18		26-12-21	ALL
	=1	L	W3470	0004	18		26-12-21	ALL
	=2	L	W3470	0005	18		26-12-21	ALL
S10206								115-199
	CAP	Y	W4162	0006	22		25-51-11	115-199
	CAP	Y	W4162	0007	22		25-51-11	115-199
	CAP	Y	W4162	0041	22		25-51-11	115-199
	CAP	Y	W4162	0042	22		25-51-11	115-199
	CAP	Y	W4162	0043	20		25-51-11	115-199
	CAP	Y	W4162	0044	20		25-51-11	115-199
S10207		1400/200/L020		SW-AFT CARGO LOADER CONTROL				115-199
	1	C	W2662	0007	20		25-51-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section S10200

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S10207		1400/200/L020		SW-AFT CARGO LOADER CONTROL (continued)				115-199
	2	C	W2662	0051	20		25-51-21	115-199
	3	C	W2662	0006	20		25-51-21	115-199
	4	C	W2662	0053	20		25-51-21	115-199
	5	C	W2662	0050	20		25-51-21	115-199
	6	C	W2662	0052	20		25-51-21	115-199
S10209		0699/196/R050		SW-FWD CARGO LOADER RETR LIMIT				115-199
	CAP	Y	W4162	0010	22		25-51-11	115-199
S10210		1301/196/R050		SW-AFT CARGO LOADER RETR LIMIT				115-199
	BLU		W2662	B-BL			25-51-21	115-199
	RED		W2662	B-RD			25-51-21	115-199
S10211								115-199
	CAP	Y	W4162	0009	22		25-51-11	115-199
	CAP	Y	W4162	0062	20		25-51-11	115-199
S10212		1206/190/R049		SW-AFT CARGO LOADER EXT LIMIT				115-199
	C	C	W2662	0009	20		25-51-21	115-199
	NC	C	W2662	0062	20		25-51-21	115-199
S10214		0343/208/L066		SW-GIRT BAR PROX SNSR A,NO 1 PASS DR,L				ALL
	BLU		W3582	A-GA			25-66-11	ALL
	RED		W3582	A-PA			25-66-11	ALL
S10215		0360/210/L065		SW-GIRT BAR PROX SNSR B,NO 1 PASS DR,L				ALL
	BLU		W3582	B-GA			25-66-11	ALL
	RED		W3582	B-PA			25-66-11	ALL
S10216		332/208/R066		SW-GIRT BAR PROX SNSR A,NO 1 PASS DR,R				ALL
	BLU		W3682	A-GA			25-66-11	ALL
	RED		W3682	A-PA			25-66-11	ALL
S10217		362/210/R065		SW-GIRT BAR PROX SNSR B,NO 1 PASS DR,R				ALL
	BLU		W3682	B-GA			25-66-11	ALL
	RED		W3682	B-PA			25-66-11	ALL
S10218		720/210/L065		SW-GIRT BAR PROX SNSR A,NO 2 PASS DR,L				ALL
	BLU		W3582	C-GA			25-66-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section S10200

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S10218		720/210/L065		SW-GIRT BAR PROX SNSR A,NO 2 PASS DR,L (continued)				ALL
	RED		W3582	C-PA			25-66-11	ALL
S10219		725/210/L065		SW-GIRT BAR PROX SNSR B,NO 2 PASS DR,L				ALL
	BLU		W3582	D-GA			25-66-11	ALL
	RED		W3582	D-PA			25-66-11	ALL
S10220		695/210/R065		SW-GIRT BAR PROX SNSR A,NO 2 PASS DR,R				ALL
	BLU		W3682	C-GA			25-66-11	ALL
	RED		W3682	C-PA			25-66-11	ALL
S10221		720/210/R065		SW-GIRT BAR PROX SNSR B,NO 2 PASS DR,R				ALL
	BLU		W3682	D-GA			25-66-11	ALL
	RED		W3682	D-PA			25-66-11	ALL
S10222		1644/210/L060		SW-GIRT BAR PROX SNSR A,NO 4 PASS DR,L				ALL
	BLU		W3582	E-GA			25-66-11	ALL
	RED		W3582	E-PA			25-66-11	ALL
S10223		1679/210/L060		SW-GIRT BAR PROX SNSR B,NO 4 PASS DR,L				ALL
	BLU		W3582	F-GA			25-66-11	ALL
	RED		W3582	F-PA			25-66-11	ALL
S10224		1644/210/R065		SW-GIRT BAR PROX SNSR A,NO 4 PASS DR,R				ALL
	BLU		W3682	E-GA			25-66-11	ALL
	RED		W3682	E-PA			25-66-11	ALL
S10225		1684/208/R060		SW-GIRT BAR PROX SNSR B,NO 4 PASS DR,R				ALL
	BLU		W3682	F-GA			25-66-11	ALL
	RED		W3682	F-PA			25-66-11	ALL
S10230		P001-03/ /		SW-EICAS DISPLAY,RECALL				ALL
	C	\$	W0101	0076	22		31-41-19	ALL
	NO	\$	W0101	0077	24		31-41-19	ALL
S10231		P003-01/ /		SW-GND PROX/CONFIG GEAR OVRD				ALL
	2	1A	W0002	0122	24		31-51-31	ALL
	3	1A	W0002	0123	24		31-51-31	ALL
	5	1A	W0002	0114	24		34-46-11	ALL
	6	1A	W0002	0117	24		34-46-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section S10200

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S10231		P003-01/ /		SW-GND PROX/CONFIG GEAR OVRD (continued)				ALL
	13	1A	W0002	0040	20		33-13-21	ALL
	15	1A	W0002	0041	20		33-13-21	ALL
S10234		239/188/R029		SW-RIGHT COLUMN-INBD AFT				ALL
	C		W2355	B-B			27-41-11	ALL
	NO		W2355	B-A			27-41-11	ALL
S10235		0239/188/R030		SW-RIGHT COLUMN-INBD FWD				ALL
	C		W2355	D-B			27-41-11	ALL
	NO		W2355	D-A			27-41-11	ALL
S10236		232/190/L20		SW-LEFT COLUMN-INBD AFT				ALL
	C		W2357	B-B			27-41-21	ALL
	NO		W2357	B-A			27-41-21	ALL
S10237		231/190/L20		SW-LEFT COLUMN-INBD FWD				ALL
	C		W2357	D-B			27-41-21	ALL
	NO		W2357	D-A			27-41-21	ALL
S10238		350/192/L018		SW-PROX SNSR,NOSE GEAR UP,SYS 1				ALL
	BLU		W2152	A-E			32-61-13	ALL
	RED		W2152	A-F			32-61-13	ALL
S10239		MLG/ /		SW-PROX SNSR,R GEAR UP AND LOCKED,SYS 1				ALL
	BLU		W2512	A-BB			32-61-13	ALL
	RED		W2512	A-BA			32-61-13	ALL
S10240		1118/185/60		SW-PROX SNSR,L GEAR UP AND LOCKED,SYS 1				ALL
S10240		MLG/ /		SW-PROX SNSR,L GEAR UP AND LOCKED,SYS 1				ALL
	BLU		W2414	A-AB			32-61-13	ALL
	RED		W2414	A-AA			32-61-13	ALL
S10241		RWW/ /		SW-PROX SNSR,R GEAR DOOR CLOSED,SYS 1				ALL
	BLU		W2512	A-CB			32-61-13	ALL
	RED		W2512	A-CA			32-61-13	ALL
S10242		1064/145/L061		SW-PROX SNSR,L GEAR DOOR CLOSED,SYS 1				ALL
S10242		LWW/ /		SW-PROX SNSR,L GEAR DOOR CLOSED,SYS 1				ALL
	BLU		W2414	A-BB			32-61-13	ALL

HOOKUP LIST

D280N032

91-21-51

Section S10200

Page 4

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S10242		1064/145/L061		SW-PROX SNSR,L GEAR DOOR CLOSED,SYS 1 (continued)				ALL
S10242		LWW/ /		SW-PROX SNSR,L GEAR DOOR CLOSED,SYS 1 (continued)				ALL
	RED		W2414	A-BA			32-61-13	ALL
S10243		263/158/L009		SW-PROX SNSR,NOSE GEAR DOOR CLOSED,SYS 1				ALL
	BLU		W2152	A-G			32-61-13	ALL
	RED		W2152	A-H			32-61-13	ALL
S10254		P003-01/ /		SW-FLAP ARM				ALL
	2	1A	W0002	0019	22		27-51-21	ALL
	3	1A	W0002	0017	22		27-51-21	ALL
	4	1A	W0002	0018	22		27-51-21	ALL
	5	1A	W0002	0016	22		27-51-21	ALL
	6	1A	W0002	0020	22		27-51-21	ALL
	7	1A	W0002	0015	24		27-51-11	ALL
	8	1A	W0002	0002	24		27-51-11	ALL
	9	1A	W0002	0003	24		27-51-11	ALL
	10	1A	W0002	0092	24		27-51-61	ALL
	11	1A	W0002	0078	24		27-51-61	ALL
	12	1A	W0002	0079	24		27-51-61	ALL
	13	1A	W0002	0044	20		33-13-21	ALL
	15	1A	W0002	0045	20		33-13-21	ALL
S10255		P003-01/ /		SW-SLAT ARM				ALL
	1	1A	W0002	0031	22		27-51-21	ALL
	2	1A	W0002	0025	22		27-51-21	ALL
	3	1A	W0002	0023	22		27-51-21	ALL
	4	1A	W0002	0024	22		27-51-21	ALL
	5	1A	W0002	0022	22		27-51-21	ALL
	6	1A	W0002	0026	22		27-51-21	ALL
	7	1A	W0002	0021	24		27-51-11	ALL
	8	1A	W0002	0005	24		27-51-11	ALL
	9	1A	W0002	0004	24		27-51-11	ALL
	10	1A	W0002	0093	24		27-51-61	ALL
	11	1A	W0002	0080	24		27-51-61	ALL
	12	1A	W0002	0081	24		27-51-61	ALL
	13	1A	W0002	0046	20		33-13-21	ALL
	15	1A	W0002	0047	20		33-13-21	ALL
S10256		P003-01/ /		SW-ALT FLAP/SLAT POSN				ALL
	AA	1A	W0002	0006	24		27-51-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section S10200

Page 5

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S10256		P003-01/ /		SW-ALT FLAP/SLAT POSN (continued)				ALL
	AB	1A	W0002	0013	24		27-51-11	115-199
	AC	1A	W0002	0014	24		27-51-11	ALL
	AD	1A	W0002	0007	24		27-51-11	ALL
	AE	1A	W0002	0008	24		27-51-11	ALL
	AF	1A	W0002	0009	24		27-51-11	ALL
	AG	1A	W0002	0010	24		27-51-11	ALL
	AH	1A	W0002	0011	24		27-51-11	ALL
	AJ	1A	W0002	0012	24		27-51-11	ALL
	BA	1A	W0002	0082	24		27-51-61	ALL
	BB	1A	W0002	0089	24		27-51-61	ALL
	BC	1A	W0002	0090	24		27-51-61	ALL
	BD	1A	W0002	0083	24		27-51-61	ALL
	BE	1A	W0002	0084	24		27-51-61	ALL
	BF	1A	W0002	0085	24		27-51-61	ALL
	BG	1A	W0002	0086	24		27-51-61	ALL
	BH	1A	W0002	0087	24		27-51-61	ALL
	BJ	1A	W0002	0088	24		27-51-61	ALL
S10258		1235/157/R035		SW-LIMIT,RAT STOWED				ALL
	1		W2516	1-01			29-21-31	ALL
	2		W2516	1-02			29-21-31	ALL
	3		W2516	1-03			29-21-31	ALL
	4		W2516	1-04			29-21-31	ALL
	5		W2516	1-05			29-21-31	ALL
	6		W2516	1-06			29-21-31	ALL
	7		W2516	1-07			29-21-31	ALL
	8		W2516	1-08			29-21-31	ALL
	9		W2516	1-09			29-21-31	ALL
	10		W2516	1-10			29-21-31	ALL
	11		W2516	1-11			29-21-31	ALL
	12		W2516	1-12			29-21-31	ALL
	CAP	Y	W2516	1-01			29-21-31	ALL
	CAP	Y	W2516	1-02			29-21-31	ALL
	CAP	Y	W2516	1-03			29-21-31	ALL
S10260		P003-01/ /		SW-ALT L/G EXT				ALL
	1	C	W0002	0096	20		32-35-11	001-099
	1	1A	W0002	0097	20		32-35-11	115-199
	2	C	W0002	0098	20		32-35-11	001-099
	2	1A	W0002	0096	20		32-35-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section S10200

Page 6

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S10260		P003-01/ /		SW-ALT L/G EXT (continued)				ALL
	3	C	W0002	0097	20		32-35-11	001-099
	3	1A	W0002	0098	20		32-35-11	115-199
	13	1A	W0002	0050	22		33-16-51	115-199
	14	1A	W0002	0051	22		33-16-51	115-199
	15	1A	W0002	0099	20		32-35-11	115-199
S10271		MULTI/ /		SW-PASS CALL				ALL
	1	Z1	W0512	0020AH	22		33-25-31	001-099
	1	Z1	W0512	0020K	18		33-25-31	115-199
	2	Z1	W0512	0023WK	22		33-25-31	001-099
	2	BX	W0512	0023RL	22		33-25-31	115-199
	3	Z1	W0512	0002WV	22		33-25-31	001-099
	3	BX	W0512	0022RY	22		33-25-31	115-199
	4	Z1	W0512	0005V	22		33-25-31	001-099
	4	BX	W0512	0005RB	22		33-25-31	115-199
S10272		MULTI/ /		SW-PASS CALL SELECT				ALL
	1	Z2	W0512	0004WO	22		33-25-31	001-099
	1	Z2	W0512	0004RN	22		33-25-31	115-199
	2	Z2	W0512	0023WK	22		33-25-31	001-099
	2	Z2	W0512	0023RL	22		33-25-31	115-199
	3	Z2	W0512	0003WG	22		33-25-31	001-099
	3	Z2	W0512	0003RL	22		33-25-31	115-199
	4	Z2	W0512	0009A	22		33-25-31	115-199
	5	Z2	W0512	0022RY	22		33-25-31	115-199
	6	Z2	W0512	0002RY	22		33-25-31	115-199
S10273		MULTI/ /		SW-PASS READ LT				ALL
	1	BV	W0512	0026N	16		33-23-31	001-099
	1	BV	W0512	0026P	16		33-23-31	115-199
	2	BV	W0512	0056N	16		33-23-31	001-099
	2	BV	W0512	0056P	16		33-23-31	115-199
S10274		MULTI/ /		SW-PASS READ LT				ALL
	1	BV	W0512	0036N	16		33-23-31	001-099
	1	BV	W0512	0036P	16		33-23-31	115-199
	2	BV	W0512	0066N	16		33-23-31	001-099
	2	BV	W0512	0066P	16		33-23-31	115-199

HOOKUP LIST

D280N032

91-21-51

Section S10200

Page 7

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S10275		MULTI/ /		SW-PASS READ LT				ALL
	1	BV	W0512	0046N	16		33-23-31	001-099
	1	BV	W0512	0046P	16		33-23-31	115-199
	2	BV	W0512	0076N	16		33-23-31	001-099
	2	BV	W0512	0076P	16		33-23-31	115-199
S10276		MULTI/ /		SW-PASS CALL				ALL
	1	Z1	W0514	0020AH	22		33-25-31	001-099
	1	Z1	W0514	0020K	18		33-25-31	115-199
	2	Z1	W0514	0023WK	22		33-25-31	001-099
	2	Z1	W0514	0023RL	22		33-25-31	115-199
	3	Z1	W0514	0002WV	22		33-25-31	001-099
	3	Z1	W0514	0022RY	22		33-25-31	115-199
	4	Z1	W0514	0005V	22		33-25-31	001-099
	4	Z1	W0514	0005RB	22		33-25-31	115-199
S10277		MULTI/ /		SW-PASS CALL SELECT				ALL
	1	Z2	W0514	0004WO	22		33-25-31	001-099
	1	Z2	W0514	0004RN	22		33-25-31	115-199
	2	Z2	W0514	0023WK	22		33-25-31	001-099
	2	Z2	W0514	0023RL	22		33-25-31	115-199
	3	Z2	W0514	0003WG	22		33-25-31	001-099
	3	Z2	W0514	0003RL	22		33-25-31	115-199
	4	Z2	W0514	0009A	22		33-25-31	115-199
	5	Z2	W0514	0022RY	22		33-25-31	115-199
	6	Z2	W0514	0002RY	22		33-25-31	115-199
S10278		MULTI/ /		SW-PASS READ LT				ALL
	1	BV	W0514	0026N	16		33-23-31	001-099
	1	BV	W0514	0026P	16		33-23-31	115-199
	2	BV	W0514	0056N	16		33-23-31	001-099
	2	BV	W0514	0056P	16		33-23-31	115-199
S10279		MULTI/ /		SW-PASS READ LT				ALL
	1	BV	W0514	0036N	16		33-23-31	001-099
	1	BV	W0514	0036P	16		33-23-31	115-199
	2	BV	W0514	0066N	16		33-23-31	001-099
	2	BV	W0514	0066P	16		33-23-31	115-199

HOOKUP LIST

D280N032

91-21-51

Section S10200

Page 8

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S10280		MULTI/ /		SW-PASS READ LT				ALL
	1	BV	W0514	0046N	16		33-23-31	001-099
	1	BV	W0514	0046P	16		33-23-31	115-199
	2	BV	W0514	0076N	16		33-23-31	001-099
	2	BV	W0514	0076P	16		33-23-31	115-199
S10286		MULTI/ /		SW-PASS CALL				ALL
	1	Z1	W0522	0020AH	22		33-25-31	001-099
	1	Z1	W0522	0020K	18		33-25-31	115-199
	2	Z1	W0522	0023WK	22		33-25-31	001-099
	2	Z1	W0522	0023RL	22		33-25-31	115-199
	3	Z1	W0522	0002WV	22		33-25-31	001-099
	3	Z1	W0522	0022RY	22		33-25-31	115-199
	4	Z1	W0522	0005V	22		33-25-31	001-099
	4	Z1	W0522	0005RB	22		33-25-31	115-199
S10287		MULTI/ /		SW-PASS CALL SELECT				ALL
	1	Z2	W0522	0004WO	22		33-25-31	001-099
	1	Z2	W0522	0004RN	22		33-25-31	115-199
	2	Z2	W0522	0023WK	22		33-25-31	001-099
	2	Z2	W0522	0023RL	22		33-25-31	115-199
	3	Z2	W0522	0003WG	22		33-25-31	001-099
	3	Z2	W0522	0003RL	22		33-25-31	115-199
	4	Z2	W0522	0009A	22		33-25-31	115-199
	5	Z2	W0522	0022RY	22		33-25-31	115-199
	6	Z2	W0522	0002RY	22		33-25-31	115-199
S10288		MULTI/ /		SW-PASS READ LT				ALL
	1	BV	W0522	0026N	16		33-23-31	001-099
	1	BV	W0522	0026P	16		33-23-31	115-199
	2	BV	W0522	0056N	16		33-23-31	001-099
	2	BV	W0522	0056P	16		33-23-31	115-199
S10289		MULTI/ /		SW-PASS READ LT				ALL
	1	BV	W0522	0036N	16		33-23-31	001-099
	1	BV	W0522	0036P	16		33-23-31	115-199
	2	BV	W0522	0066N	16		33-23-31	001-099
	2	BV	W0522	0066P	16		33-23-31	115-199

HOOKUP LIST

D280N032

91-21-51

Section S10200

Page 9

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S10291		MULTI/ /		SW-ATT WK LT				115-199
	1	BV	W0520	0016P	16		33-23-31	115-199
	2	BV	W0520	0056P	16		33-23-31	115-199
S10292		0345/285/L039		SW-EMER LT TEST,FWD				ALL
	C	Z1	W3532	0035	22		33-51-12	ALL
	NO	Z1	W3532	0036	22		33-51-12	ALL
S10293		0694/284/L047		SW-EMER LT TEST				ALL
	C	Z1	W3532	0037	22		33-51-13	ALL
	NO	Z1	W3532	0038	22		33-51-13	ALL
S10294		1326/262/L061		SW-EMER LT TEST,MID AFT				ALL
	C	Z1	W3534	0035	22		33-51-14	ALL
	NO	Z1	W3534	0036	22		33-51-14	ALL
S10295		1656/286/L038		SW-EMER LTS TEST,AFT				ALL
	C	Z1	W3534	0037	22		33-51-15	ALL
	NO	Z1	W3534	0038	22		33-51-15	ALL
S10296		P021-00/ /		SW-GND SERVICE LTS				ALL
	C	Z1	W0504	0010	22		24-51-51	ALL
	NO	Z1	W0504	0009	22		24-51-51	ALL
	+	Z1	W0504	0011	22		24-51-51	001-099
	+	Z1	W0504	0011	20		24-51-51	115-199
	-	Z1	W0504	0012	22		24-51-51	001-099
	-	Z1	W0504	0012	20		24-51-51	115-199
S10297		P021-00/ /		SW-EMER LT CONT				ALL
	1C	Z1	W0504	0039	22		33-51-11	ALL
	2C	Z1	W0504	0038	22		33-51-11	ALL
	3C	Z1	W0504	0040	22		33-51-11	ALL
	3NC	Z1	W0504	0065	22		33-51-11	001-099
	3NC	Z1	W0504	0065	20		33-51-11	115-199
	2NO	Z1	W0504	0045	22		33-51-11	001-099
	1NO	Z1	W0504	0063	22		33-51-11	ALL
	2NO	Z1	W0504	0045	20		33-51-11	115-199
	+	Z1	W0504	0063	22		33-51-11	ALL
	-	Z1	W0504	0064	22		33-51-11	001-099
	-	Z1	W0504	0064	20		33-51-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section S10200

Page 10

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S10298		P021-00/ /		SW-CEILING LTS CONTROL				ALL
	4	\$	W0504	0015	24		33-21-11	ALL
	8	\$	W0504	0016	22		33-21-51	ALL
	9	\$	W0504	0062	24		33-21-11	ALL
	C1	\$	W0504	0013	24		33-21-11	ALL
	C2	\$	W0504	0017	22		33-21-51	001-099
	C2	\$	W0504	0017	22		33-21-11	115-199
	10	\$	W0504	0014	24		33-21-11	ALL
	10	\$	W0504	0062	24		33-21-11	ALL
S10299		P021-00/ /		SW-SIDEWALL LTS CONTROL				ALL
	2	\$	W0504	0018	24		33-21-31	ALL
	2	\$	W0504	0058	24		33-21-31	ALL
	3	\$	W0504	0058	24		33-21-31	ALL
	5	\$	W0504	0019	24		33-21-31	ALL
	C1	\$	W0504	0020	24		33-21-31	ALL
	C2	\$	W0504	0059	24		33-21-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section S10200

Page 11 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S10300		P021-00/ /		SW-WORK LTS FWD,ATT PNL				ALL
	C	Z1	W0504	0101	22		33-22-11	ALL
	NO	Z1	W0504	0102	22		33-22-11	ALL
	+	Z1	W0504	0051	22		33-22-11	ALL
	-	Z1	W0504	0052	22		33-22-11	001-099
	-	Z1	W0504	0052	20		33-22-11	115-199
S10301		P021-00/ /		SW-THRESHOLD LTS,FWD ATT PNL				ALL
	C	Z1	W0504	0066	22		33-22-11	ALL
	NO	Z1	W0504	0033	22		33-22-11	ALL
	+	Z1	W0504	0055	22		33-22-11	ALL
	-	Z1	W0504	0053	22		33-22-11	001-099
	-	Z1	W0504	0053	20		33-22-11	115-199
S10302		P021-00/ /		SW-ENTRY LTS,FWD ATT PNL				ALL
	1	\$	W0504	0008	22		33-22-11	ALL
	2	\$	W0504	0006	22		33-22-11	ALL
	2	\$	W0504	0060	22		33-22-11	ALL
	3	\$	W0504	0060	22		33-22-11	ALL
	6	\$	W0504	0007	22		33-22-11	ALL
	C1	\$	W0504	0005	22		33-22-11	ALL
	C1	\$	W0504	0061	22		33-22-11	ALL
	C2	\$	W0504	0061	22		33-22-11	ALL
	C2	\$	W0504	0027	22		33-27-11	115-199
S10308		215/180/L015		SW-L CAPT PEDAL-AIDS				115-199
	1C	B	W4220	0073	24		31-31-31	115-199
	1NO	B	W4220	0097	24		31-31-31	115-199
S10309		215/180/L010		SW-R CAPT PEDAL-AIDS				115-199
	1C	B	W4220	0074	24		31-31-31	115-199
	1NO	B	W4220	0077	24		31-31-31	115-199
S10311		E006-00/ /		SW-CARGO LTS				115-199
	2	C	W2632	0082	20		33-37-21	115-199
	3	C	W2632	0078	20		33-37-21	115-199
S10328		1183/136/L031		SW-HYDRAULIC SERVICE CENTER LTS				ALL
	2	C	W2608	0013	18		33-31-21	ALL
	3	C	W2608	0014	18		33-31-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section S10300

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S10329		475/160/R025		SW-FLA TEST				ALL
	1	C	W4473	0028	20		27-51-51	ALL
	2	C	W4473	0027	22		27-51-51	ALL
S10331		MULTI/ /		SW-ATT WK LT				115-199
	1	BV	W0520	0026P	16		33-23-31	115-199
	2	BV	W0520	0066P	16		33-23-31	115-199
S10336		P022-00/ /		SW-WORK LT,AFT ATTENDANT PNL				ALL
	C	Z1	W0510	0009	22		33-22-14	001-099
	C	Z1	W0510	0018	22		33-22-14	115-199
	NO	Z1	W0510	0011	22		33-22-14	001-099
	NO	Z1	W0510	0004	22		33-22-14	115-199
	+	Z1	W0510	0012	22		33-22-14	001-099
	+	Z1	W0510	0005	22		33-22-14	115-199
	-	Z1	W0510	0010	22		33-22-14	001-099
	-	Z1	W0510	0006	20		33-22-14	115-199
S10339		OSS627/ /RLE		SW-SLAT LOSS SENSING,R OUTBD				ALL
	1		W3426	A-C			27-81-31	ALL
	2		W3426	A-D			27-81-31	ALL
	3		W3426	A-B			27-81-31	ALL
S10341		OSS630/WRP/L090		SW-SLAT LOSS SENSING,L OUTBD				ALL
	1		W3326	A-C			27-81-31	ALL
	2		W3326	A-D			27-81-31	ALL
	3		W3326	A-B			27-81-31	ALL
S10350		575/202/R065		PROX SNSR A-NO.1 CARGO DR OPEN				ALL
	BLU		W4104	A-BL			52-34-11	ALL
	RED		W4104	A-RD			52-34-11	ALL
S10352		0560/169/R046		PROX SNSR A-NO.1 CARGO DR DN				ALL
	BLU		W4104	C-BL			52-34-11	ALL
	RED		W4104	C-RD			52-34-11	ALL
S10357		1394/194/R059		PROX SNSR A-NO.2 CARGO DR OPEN				ALL
	BLU		W2632	A-BL			52-35-11	ALL
	RED		W2632	A-RD			52-35-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section S10300

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S10359		1380/160/R044		PROX SNSR A-NO.2 CARGO DR DN				ALL
	BLU		W2632	C-BL			52-35-11	ALL
	RED		W2632	C-RD			52-35-11	ALL
S10361		P063-00/ /		SW-PTT,NOSE GEAR DOOR UNSAFE LT				ALL
	C	LW	W3052	2501R	18		32-12-12	001-099
	C	LW	W3052	2501R	20		32-12-12	115-199
	NO	LW	W3052	2501B	18		32-12-12	001-099
	NO	LW	W3052	2501B	20		32-12-12	115-199
	CAP	Y	W3052	0030	18		SPARE	115-199
	CAP	Y	W3052	0031	18		SPARE	115-199
	DED		W3052	2501Z			32-12-12	ALL
S10362		273/173/L028		SW-NOSE GEAR DOOR LOCK				ALL
	1		W2150	A-01			32-12-12	ALL
	2		W2150	A-02			32-12-12	ALL
	3		W2150	A-03			32-12-12	ALL
	4		W2150	A-04			32-12-12	ALL
	5		W2150	A-05			32-12-12	ALL
	6		W2150	A-06			32-12-12	ALL
S10363		1121/180/R002		SW-MAIN GEAR DOOR LOCK,R				ALL
	1		W2516	A-AA			32-12-12	ALL
	2		W2516	A-AB			32-12-12	ALL
	3		W2516	A-AC			32-12-12	ALL
	4		W2516	A-AF			32-12-12	ALL
	5		W2516	A-AG			32-12-12	ALL
	6		W2516	A-AH			32-12-12	ALL
S10364		1121/180/L002		SW-MAIN GEAR DOOR LOCK,L				ALL
	1		W2416	A-AC			32-12-12	ALL
	2		W2416	A-AA			32-12-12	ALL
	3		W2416	A-AB			32-12-12	ALL
	4		W2416	A-AF			32-12-12	ALL
	5		W2416	A-AG			32-12-12	ALL
	6		W2416	A-AH			32-12-12	ALL
S10365		1216/133/R025		SW-PTT,MAIN GEAR DOOR UNSAFE LT				ALL
	1	C	W2516	1050	18		32-12-12	ALL
	2	C	W2516	1032	18		32-12-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section S10300

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S10365		1216/133/R025		SW-PTT,MAIN GEAR DOOR UNSAFE LT (continued)				ALL
	4	C	W2516	1020	18		32-12-12	ALL
	5	C	W2516	1021	18		32-12-12	ALL
S10368		P022-00/ /		SW-AFT GALLEY (G4B) LIGHT CONTROL				115-199
	3	\$	W0510	0007	22		33-27-31	115-199
	4	\$	W0510	0010	22		33-27-31	115-199
	5	\$	W0510	0009	22		33-27-31	115-199
	6	\$	W0510	0008	22		33-27-31	115-199
	C1	\$	W0510	0016	22		33-27-31	115-199
	C2	\$	W0510	0015	22		33-27-31	115-199
S10369		P021-00/ /		SW-FWD GALLEY (G1A) LIGHT CONTROL				115-199
	3	\$	W0504	0021	22		33-27-11	115-199
	4	\$	W0504	0024	22		33-27-11	115-199
	5	\$	W0504	0023	22		33-27-11	115-199
	6	\$	W0504	0022	22		33-27-11	115-199
	C1	\$	W0504	0026	22		33-27-11	115-199
	C1	\$	W0504	0027	22		33-27-11	115-199
	C2	\$	W0504	0026	22		33-27-11	115-199
S10370		1070/145/		SW-MAIN GEAR DOOR CLOSED,R				ALL
	1		W2516	A-AD			32-12-12	ALL
	2		W2516	A-AE			32-12-12	ALL
	3		W2516	A-AI			32-12-12	ALL
	4		W2516	A-AJ			32-12-12	ALL
	5		W2516	A-AK			32-12-12	ALL
	6		W2516	A-AL			32-12-12	ALL
S10371		1063/140/L062		SW-MAIN GEAR DOOR CLOSED,L				ALL
	1		W2416	A-AD			32-12-12	ALL
	2		W2416	A-AE			32-12-12	ALL
	3		W2416	A-AI			32-12-12	ALL
	4		W2416	A-AJ			32-12-12	ALL
	5		W2416	A-AK			32-12-12	ALL
	6		W2416	A-AL			32-12-12	ALL
S10372		263/159/L008		SW-NOSE GEAR DOOR CLOSED				ALL
	1		W2150	B-01			32-12-12	ALL
	2		W2150	B-02			32-12-12	ALL
	3		W2150	B-03			32-12-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section S10300

Page 4

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S10372		263/159/L008		SW-NOSE GEAR DOOR CLOSED (continued)				ALL
	4		W2150	B-04			32-12-12	ALL
	5		W2150	B-05			32-12-12	ALL
	6		W2150	B-06			32-12-12	ALL
S10379		454/161/L026		SW-EEC GND TEST,L				ALL
	1		W4228	A-A			75-31-11	ALL
	2		W4228	A-H			75-31-11	ALL
	3		W4228	A-C			75-31-11	ALL
	4		W4228	A-B			75-31-11	ALL
	5		W4228	A-D			75-31-11	ALL
	6		W4228	A-G			75-31-11	ALL
	7		W4228	A-E			75-31-11	ALL
	8		W4228	A-F			75-31-11	ALL
S10380		482/160/L021		SW-EEC GND TEST,R				ALL
	1		W4236	A-A			75-31-11	ALL
	2		W4236	A-H			75-31-11	ALL
	3		W4236	A-C			75-31-11	ALL
	4		W4236	A-B			75-31-11	ALL
	5		W4236	A-D			75-31-11	ALL
	6		W4236	A-G			75-31-11	ALL
	7		W4236	A-E			75-31-11	ALL
	8		W4236	A-F			75-31-11	ALL
S10381		MULTI/ /		SW-PASS READ LT				115-199
	1	BV	W0534	0026P	16		33-23-31	115-199
	2	BV	W0534	0056P	16		33-23-31	115-199
S10382		MULTI/ /		SW-PASS READ LT				115-199
	1	BV	W0534	0036P	16		33-23-31	115-199
	2	BV	W0534	0066P	16		33-23-31	115-199
S10383		MULTI/ /		SW-PASS READ LT				115-199
	1	BV	W0534	0046P	16		33-23-31	115-199
	2	BV	W0534	0076P	16		33-23-31	115-199
S10384		MULTI/ /		SW-PASS CALL SELECT				115-199
	1	Z2	W0534	0004RN	22		33-25-31	115-199
	2	Z2	W0534	0023RL	22		33-25-31	115-199

HOOKUP LIST

D280N032

91-21-51

Section S10300

Page 5

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S10384		MULTI/ /		SW-PASS CALL SELECT (continued)				115-199
	3	Z2	W0534	0003RL	22		33-25-31	115-199
	4	Z2	W0534	0009A	22		33-25-31	115-199
	5	Z2	W0534	0022RY	22		33-25-31	115-199
	6	Z2	W0534	0002RY	22		33-25-31	115-199
S10385		MULTI/ /		SW-PASS CALL				115-199
	1	Z1	W0534	0020K	18		33-25-31	115-199
	2	Z1	W0534	0023RL	22		33-25-31	115-199
	3	Z1	W0534	0022RY	22		33-25-31	115-199
	4	Z1	W0534	0005RB	22		33-25-31	115-199
S10390		P001-03/ /		SW-RESERVE BRAKE				ALL
	5	1A	W0101	0138	22		29-21-32	ALL
	6	1A	W0101	1002	20		29-21-32	ALL
	7	1A	W0101	0139	22		29-21-32	ALL
	8	1A	W0101	0140	22		29-21-32	ALL
	9	1A	W0101	0131	22		29-21-32	ALL
	13	1A	W0101	0126	20		33-13-12	ALL
	15	1A	W0101	0128	20		33-13-12	ALL
	DED		W0101	1002Z			29-21-32	ALL

HOOKUP LIST

D280N032

91-21-51

Section S10300

Page 6 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S10471		475/163/R028		SW-ALTERNATE VMO/MMO SELECT				115-199
	2	C	W4473	0247	22		34-12-12	115-199
	3	C	W4473	0248	20		34-12-12	115-199
	5	C	W4473	0249	22		34-12-22	115-199
	6	C	W4473	0250	20		34-12-22	115-199
	7	C	W4473	0251	22		34-16-11	115-199
	8	C	W4473	0252	22		34-16-11	115-199
S10479		P021-00/ /		SW-ENTERTAINMENT SYSTEM				ALL
	3	\$	W0504	0108	22		23-34-15	001-099
	3	\$	W0504	0043	22		23-34-15	115-199
	5	\$	W0504	0104	22		23-34-15	ALL
	5	\$	W0504	0109	22		23-34-15	ALL
	6	\$	W0504	0109	22		23-34-15	ALL
	C1	\$	W0504	0103	22		23-34-15	ALL
	C2	\$	W0504	0105	22		23-34-15	ALL

HOOKUP LIST

D280N032

91-21-51

Section S10400

Page 1 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S10561		0600/180/R067		SW-NO.1 CARGO DOOR MOTOR INTERLOCKED				ALL
	1		W0818	C-1			52-34-11	ALL
	2		W0818	C-2			52-34-11	ALL
	3		W0818	C-3			52-34-11	ALL
	4		W0818	C-4			52-34-11	ALL
	5		W0818	C-5			52-34-11	ALL
	6		W0818	C-6			52-34-11	ALL
S10562		1420/172/R066		SW-NO.2 CARGO DOOR MOTOR INTERLOCKED				ALL
	1		W1018	C-1			52-35-11	ALL
	2		W1018	C-2			52-35-11	ALL
	3		W1018	C-3			52-35-11	ALL
	4		W1018	C-4			52-35-11	ALL
	5		W1018	C-5			52-35-11	ALL
	6		W1018	C-6			52-35-11	ALL
S10588		FSS248/+9/R217		SW-SLAT LOSS SENSING,R INBD (SB 27-0117)				ALL
	1		W3424	A-C			27-81-31	ALL
	2		W3424	A-D			27-81-31	ALL
	3		W3424	A-B			27-81-31	ALL
S10589		FSS248/+9/L217		SW-SLAT LOSS SENSING,L INBD (SB 27-0117)				ALL
	1		W3346	A-C			27-81-31	ALL
	2		W3346	A-D			27-81-31	ALL
	3		W3346	A-B			27-81-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section S10500

Page 1 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
S10680		P003-01/ /		SW-GND PROX TERRAIN OVERRIDE (SB 34-0200)				002
	11	1A	W0002	0155	22		34-46-11	002
	12	1A	W0002	0171	22		34-46-11	002
	13	1A	W0002	0170	20		33-13-21	002
	15	1A	W0002	0169	20		33-13-21	002

HOOKUP LIST

D280N032

91-21-51

Section S10600

Page 1 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Station / WL / BL		Bundle	Description		GA	CO	Diagram	Effectivity
	Term	Type		Wire No.					
I S10711		E002-01/ /		SW- FUEL TEST AUTO S/O - R (SB 28A0081)					ALL
I	1C	Z2	W4475	0122		20		28-22-11	ALL
I	1NO	Z2	W4475	0123		22		28-22-11	ALL
I S10712		E002-01/ /		SW- FUEL TEST AUTO S/O - L (SB 28A0081)					ALL
I	1C	Z2	W4202	0082		20		28-22-11	ALL
I	1NO	Z2	W4202	0083		22		28-22-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section S10700

Page 1 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
SM00003								ALL
	DED		W1175	1013Z			22-14-21	115-199
	DED		W2822	3501Z			23-41-12	115-199
	DED		W4473	3502Z			23-41-12	115-199
			W2388	0003	20		30-41-11	001-099
			W2388	2502Z			30-41-11	001-099
SM00004								ALL
	CAP	Y	W2386	4501G	22		30-41-12	001-099
	CAP	Y	W2386	4501Y	22		30-41-12	001-099
	CAP	Y	W2388	4501G	22		30-41-11	001-099
	CAP	Y	W2388	4501Y	22		30-41-11	001-099
	DED		W2295	3501Z			23-51-21	ALL
	DED		W2293	3501Z			23-51-41	115-199
	DED		W2297	3501Z			23-51-11	115-199
SM00005								115-199
	DED		W2654	3503Z			23-41-12	115-199
SM00006								115-199
	DED		W4473	3503Z			23-41-12	115-199
			W2388	0003	20		30-41-11	115-199
			W2388	2501Z			30-41-11	115-199
			W2388	2502Z			30-41-11	115-199
SM00012								115-199
	DED		W1163	1006Z			23-12-21	115-199
	DED		W1163	1008Z			23-12-21	115-199
	DED		W1163	1009Z			23-12-21	115-199
SM00013								115-199
	DED		W1163	1002Z			23-12-11	115-199
	DED		W1163	1004Z			23-12-11	115-199
	DED		W1163	1005Z			23-12-11	115-199
	DED		W1175	1002Z			22-14-21	115-199
	DED		W1175	1006Z			22-11-22	115-199
	DED		W1175	1009Z			22-11-32	115-199
	DED		W1175	1010Z			22-11-32	115-199
	DED		W1175	1151Z			22-11-12	115-199

HOOKUP LIST

D280N032

91-21-51

Section SM0000

Page 1

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
SM00014								115-199
	DED		W1173	1132Z			22-14-31	115-199
	DED		W1173	1142Z			22-14-21	115-199
	DED		W1173	1269Z			22-14-11	115-199
	DED		W1175	1004Z			22-11-12	115-199
	DED		W1175	1007Z			22-11-22	115-199
SM00015								115-199
	DED		W1175	1005Z			22-11-12	115-199
	DED		W1175	1008Z			22-11-22	115-199
SM00017								115-199
	CAP	Y	W1171	0369	22		22-14-31	115-199
SM00018								115-199
	DED		W1171	1002Z			22-14-31	115-199
	DED		W1171	1005Z			22-14-11	115-199
	DED		W1171	1006Z			22-14-11	115-199
	DED		W1171	1016Z			22-14-31	115-199
	DED		W1171	1020Z			22-14-21	115-199
	DED		W1173	1121Z			22-14-11	115-199
	DED		W1173	1133Z			22-14-31	115-199
	DED		W1175	1001Z			22-14-11	115-199
	DED		W1175	1011Z			22-14-11	115-199
	DED		W1175	1012Z			22-14-21	115-199
	DED		W1175	1019Z			22-14-31	115-199
SM00019								115-199
	DED		W1173	1124Z			22-14-31	115-199
	DED		W1173	1267Z			22-14-11	115-199
SM00022								115-199
	DED		W1173	1123Z			22-14-11	115-199
	DED		W1173	1130Z			22-14-31	115-199
	DED		W1173	1145Z			22-14-21	115-199
	DED		W1173	1287Z			22-14-31	115-199
SM00035								115-199
	DED		W1451	1061Z			22-14-11	115-199
	DED		W1451	1063Z			31-51-21	115-199

HOOKUP LIST

D280N032

91-21-51

Section SM0000

Page 2

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Station / WL / BL	Description						
	Term	Type	Bundle	Wire No.	GA	CO	Diagram	Effectivity
SM00036								115-199
	DED		W1451	1062Z			22-14-11	115-199
	DED		W1451	1064Z			31-51-21	115-199
SM00039								009, 115-199
	DED		W1451	1069Z			31-51-21	009, 115-199
	DED		W1451	1070Z			31-51-21	009, 115-199
	DED		W1451	1071Z			31-51-35	115-199
SM00041								115-199
	DED		W1171	1010Z			22-14-31	115-199
	DED		W1171	1011Z			22-14-11	115-199
	DED		W1171	1012Z			22-14-11	115-199
	DED		W1171	1019Z			22-14-21	115-199
SM00045								115-199
	DED		W1171	1009Z			22-11-22	115-199
	DED		W1171	1239Z			22-11-32	115-199
SM00051								115-199
	DED		W1171	1013Z			22-14-11	115-199
	DED		W1171	1014Z			22-14-11	115-199
	DED		W1171	1015Z			22-14-31	115-199
	DED		W1171	1021Z			22-14-21	115-199
	DED		W1451	1012Z			31-51-11	115-199
SM00053								115-199
	DED		W1451	1014Z			31-51-11	115-199
SM00054								009, 115-199
	DED		W1451	1026Z			31-51-11	009, 115-199
SM00055								009, 115-199
	DED		W1451	1027Z			31-51-11	009, 115-199
SM00059								009, 115-199
	DED		W1451	1072Z			31-51-21	009, 115-199
	DED		W1451	1073Z			31-51-21	009, 115-199
	DED		W1451	1074Z			31-51-36	115-199

HOOKUP LIST

D280N032

91-21-51

Section SM0000

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
SM00061								115-199
	DED		W1451	1042Z			31-51-12	115-199
SM00063								115-199
	DED		W1171	1025Z			22-14-11	115-199
	DED		W1451	1044Z			31-51-12	115-199
SM00064								009, 115-199
	DED		W1451	1056Z			31-51-12	009, 115-199
SM00065								009, 115-199
	DED		W1451	1057Z			31-51-12	009, 115-199
SM00222								115-199
	DED		W1026	3503Z			23-41-12	115-199

HOOKUP LIST

D280N032

91-21-51

Section SM0000

Page 4 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
SM00REF								ALL
	0001		W3400	1002Z			76-11-12	115-199
	0001		W3400	1003Z			76-11-12	115-199
	0001		W3400	1004Z			76-11-12	115-199
	1		W3400	1002Z			76-11-12	001-099
	1		W3400	1003Z			76-11-12	001-099
	1		W3400	1004Z			76-11-12	001-099
	1		W2412	0009	18		29-32-41	ALL
	1		W2412	1002Z			29-32-41	ALL
	1		W2412	2503Z			29-32-41	ALL
	1		W3300	1003Z			76-11-11	ALL
	1		W3300	1004Z			76-11-11	ALL
	1		W3300	1005Z			76-11-11	ALL
	1		W0069	5001Z			31-31-12	115-199
	1		W0069	5004Z			31-31-12	115-199
	1		W0069	5010Z			31-31-12	115-199
	1		W0069	FRAA			31-31-12	115-199
	3		W0069	5002Z			31-31-12	115-199
	3		W0069	5005Z			31-31-12	115-199
	3		W0069	5011Z			31-31-12	115-199
	3		W0069	FRAB			31-31-12	115-199
	4		W2293	2503Z			23-51-41	001-099
	4		W2293	3501Z			23-51-41	001-099
	5		W0069	5003Z			31-31-12	115-199
	5		W0069	5006Z			31-31-12	115-199
	5		W0069	5012Z			31-31-12	115-199
	5		W0069	FRAC			31-31-12	115-199
	9		W2506	1001Z			36-21-11	115-199
	9		W2506	1010Z			36-21-11	115-199
	DED		W2297	3501Z			23-51-11	001-099
	DED		W1451	1012Z			31-51-11	009
	DED		W1451	1014Z			31-51-11	009
	DED		W1451	1042Z			31-51-12	009
	DED		W1451	1044Z			31-51-12	009
	DED		W1451	1063Z			31-51-21	009
	DED		W1451	1064Z			31-51-21	009
	DED		W1451	1065Z			31-51-35	009
	DED		W1451	1066Z			31-51-35	009
	DED		W1451	1067Z			31-51-36	009
	DED		W1451	1068Z			31-51-36	009
	DED		W1451	1071Z			31-51-35	009

HOOKUP LIST

D280N032

91-21-51

Section SM00

Page 1

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
SM00REF				(continued)				ALL
	DED		W1451	1074Z			31-51-36	009
	DED		W2351	2508Z			23-71-11	115-199
			W2386	0003	20		30-41-12	ALL
			W2386	2502Z			30-41-12	ALL
			W2386	2501Z			30-41-12	115-199

HOOKUP LIST

D280N032

91-21-51

Section SM00

Page 2 End

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
SP00043		IRSS253/ /		SPLC-				115-199
	REF		W5100	1008Z			28-41-21	115-199
	REF		W5100	FRAP			28-41-21	115-199
SP00285		710/190/L043		SPLC-				001-099
	CAP	Y	W4104	0085	20		SPARE	001
SP00327		280/230/R035		SPLC-				115-199
	DED		W0041	3501Z			23-51-51	115-199
SP00576		FSS493/ /		SPLC-				ALL
	REF		W3426	1006Z			28-21-11	ALL
	REF		W3426	FRAC			28-21-11	ALL
SP00602		1130/180/R002		SPLC-				ALL
	CAP	Y	W2516	A-AF			32-12-12	ALL
	CAP	Y	W2516	A-AG			32-12-12	ALL
	CAP	Y	W2516	A-AH			32-12-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section SP0000

Page 1 End

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
SP01032		E002-04/ /		SPLC-				ALL
	DED		W2250	1052Z			34-21-11	ALL
SP01040		482/158/L031		SPLC-				ALL
	CAP	Y	W4236	A-H			75-31-11	ALL
SP01044		482/158/L031		SPLC-				ALL
	CAP	Y	W4236	A-D			75-31-11	ALL
SP01046		455/162/L038		SPLC-				ALL
	CAP	Y	W4228	A-H			75-31-11	ALL
SP01050		455/162/L042		SPLC-				ALL
	CAP	Y	W4228	A-D			75-31-11	ALL
SP01102		274/166/R027		SPLC-				001-099
SP01102		268/166/R020		SPLC-				115-199
	CAP	Y	W2150	A-04			32-12-12	ALL
	CAP	Y	W2150	A-05			32-12-12	ALL
	CAP	Y	W2150	A-06			32-12-12	ALL
	DED		W2150	2501Z			32-12-12	001-099
SP01104		274/166/R027		SPLC-				001-099
SP01104		268/150/R020		SPLC-				115-199
	CAP	Y	W2152	0022	18		SPARE	115-199
SP01108		274/166/R027		SPLC-				001-099
SP01108		268/150/R020		SPLC-				115-199
	CAP	Y	W2150	B-03			32-12-12	115-199
	CAP	Y	W2150	B-05			32-12-12	115-199
	CAP	Y	W2152	0023	18		SPARE	115-199
SP01112		OSS630/ /		SPLC-				ALL
	CAP	Y	W3326	A-B			27-81-31	ALL
SP01116		OSS630/ /		SPLC-				ALL
	CAP	Y	W3426	A-B			27-81-31	ALL
SP01180		P062-00/ /		SPLC-				115-199
	DED		W3050	2503Z			32-12-12	115-199

HOOKUP LIST

D280N032

91-21-51

Section SP0100

Page 1

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
SP01180		P062-00/ /		SPLC- (continued)				115-199
	DED		W3052	2501Z			32-12-12	115-199
SP01238		268/166/R020		SPLC-				ALL
	CAP	Y	W2150	B-03			32-12-12	001-099
	CAP	Y	W2150	B-05			32-12-12	001-099
SP01514		1230/170/R050		SPLC-				ALL
	CAP	Y	W2516	1-06			29-21-31	ALL
SP01522		1230/170/R050		SPLC-				ALL
	CAP	Y	W2516	1-11			29-21-31	ALL
SP01542		1120/182/L003		SPLC-				ALL
	CAP	Y	W2416	A-AF			32-12-12	ALL
	CAP	Y	W2416	A-AG			32-12-12	ALL
	CAP	Y	W2416	A-AH			32-12-12	ALL
SP01544		1068/140/L065		SPLC-				ALL
	CAP	Y	W2416	A-AI			32-12-12	ALL
	CAP	Y	W2416	A-AK			32-12-12	ALL
SP01546		1065/145/R060		SPLC-				001-099
SP01546		1068/140/R065		SPLC-				115-199
	CAP	Y	W2516	A-AI			32-12-12	ALL
	CAP	Y	W2516	A-AK			32-12-12	ALL
SP01568		1210/145/R025		SPLC-				ALL
	DED		W2512	3502Z			23-41-12	115-199
SP01712		TBD/ /		SPLC-				ALL
	CAP	Y	W0818	C-2			52-34-11	ALL
	CAP	Y	W0818	C-4			52-34-11	ALL
	CAP	Y	W0818	C-5			52-34-11	ALL
	CAP	Y	W0818	C-6			52-34-11	ALL
SP01718		1422/180/R055		SPLC-				ALL
	CAP	Y	W1018	C-2			52-35-11	ALL
	CAP	Y	W1018	C-4			52-35-11	ALL
	CAP	Y	W1018	C-5			52-35-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section SP0100

Page 2

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
SP01718		1422/180/R055		SPLC- (continued)				ALL
	CAP	Y	W1018	C-6			52-35-11	ALL
SP01872		WBL740/ /LH		SPLC-				ALL
	REF		W3326	0014	18		33-43-11	ALL
	REF		W3326	2506Z			33-43-11	ALL
SP01900		1611/200/R050		SPLC-				001-099
	CAP	Y	W2632	A-BU			30-71-21	001-099

HOOKUP LIST

D280N032

91-21-51

Section SP0100

Page 3 End

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
SP02156		P061-00/245/R040		SPLC-				001-099
	DED		W2156	2501Z			23-51-41	001-099
SP02194		FSS248/ /		SP- (SB 27-0117)				ALL
	CAP	Y	W3346	A-B			27-81-31	ALL
SP02196		FSS248/ /		SP- (SB 27-0117)				ALL
	CAP	Y	W3424	A-B			27-81-31	ALL
SP02872		OSS630/ /		SPLC-				ALL
	REF		W3426	0014	18		33-43-12	ALL
	REF		W3426	2506Z			33-43-12	ALL

HOOKUP LIST

D280N032

91-21-51

Section SP0200

Page 1 End

Aug 01/2005



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
I SP05002		AC0880/ /		SP- (SB 28-0095)				ALL
I	DED		W3342	YAAB			28-22-11	ALL
I SP05014		AC0880/ /		SP- (SB 28-0095)				ALL
I	DED		W4216	YAAF			28-42-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section SP0500

Page 1 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
T00101		E001-02/ /		TRU-LEFT				ALL
	+	H	W2230	0001	02		24-32-11	ALL
	-	G5	W2230	0002	02		24-32-11	ALL
T00102		E001-01/ /		TRU-RIGHT				ALL
	+	H	W2232	0001	02		24-32-11	ALL
	-	G5	W2232	0002	02		24-32-11	ALL
I T00103		P034-00/ /		XFMR RECT UNIT-GND HDLG BUS (PLATE E)				ALL
	A	C	W1128	0032	22		24-54-61	ALL
	B	C	W1128	0033	22		24-54-61	ALL
	C	C	W1128	0034	22		24-54-61	ALL
	+	C	W1128	0001	12		24-54-61	ALL
	+	C	W1128	0035	12		24-54-61	ALL
	-	C	W1128	0036	12		24-54-61	ALL
T00123		P070-00/ /		XFMR-28V AC BUS,LEFT				ALL
	HV	E	W1250	0028	20		24-53-11	ALL
	LV	E	W1250	0030	14		24-53-11	ALL
	GND	E	W1250	0029	14		24-53-11	ALL
T00124		P033-00/ /		XFMR-28V AC BUS,RIGHT				ALL
	HV	E	W1230	0452	20		24-53-21	001-099
	HV	E	W1234	0055	20		24-53-21	115-199
	LV	E	W1230	0454	14		24-53-21	001-099
	LV	E	W1234	0057	14		24-53-21	115-199
	GND	E	W1230	0453	14		24-53-21	001-099
	GND	E	W1234	0056	14		24-53-21	115-199
T00126		P034-00/ /		XFMR-28V AC BUS,GND SERVICE				001-099
T00126		P037-00/ /		XFMR-28V AC BUS,GND SERVICE				115-199
	HV	E	W4510	0014	14		24-53-51	001-099
	HV	E	W1272	0218	14		24-53-51	115-199
	LV	E	W1196	0006	06		24-53-51	001-099
	LV	E	W4512	0004	06		24-53-51	115-199
	GND	E	W1196	0017	06		24-53-51	001-099
	GND	E	W1272	0072	06		24-53-51	115-199
T00139		P036-00/ /		XFMR-AIR DATA COMPUTER,LEFT				ALL
	G	D	W1260	0076	20		34-12-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section T00100

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
T00139		P036-00/ /		XFMR-AIR DATA COMPUTER,LEFT (continued)				ALL
	HV	D	W1260	0074	24		34-12-11	ALL
	LV	D	W1260	0075	20		34-12-11	ALL
T00140		P037-00/ /		XFMR-AIR DATA COMPUTER,RIGHT				ALL
	G	D	W1270	0067	20		34-12-21	ALL
	HV	D	W1270	0068	24		34-12-21	ALL
	LV	D	W1270	0066	20		34-12-21	ALL
T00148		P065-00/ /		XFMR-FWD CARGO COMPT LTS				ALL
	HV1	E	W0808	0030	22		33-37-11	001-099
	HV2	E	W0808	0030	20		33-37-11	115-199
	LV	E	W0808	0040	12		33-37-11	ALL
	GND	E	W0808	0034	14		33-37-11	ALL
T00155		P031-00/ /		XFMR-R SYS HYD LEAK DET CURRENT				115-199
	X1	E	W1136	2001R	22		29-11-22	115-199
	X2	E	W1136	2001B	22		29-11-22	115-199
T00156		P032-00/ /		XFMR-L SYS HYD LEAK DET CURRENT				115-199
	X1	E	W1138	2001B	22		29-11-12	115-199
	X2	E	W1138	2001R	22		29-11-12	115-199
T00157		P031-00/ /		XFMR-C SYS HYD LEAK DET CURRENT				115-199
	X1	E	W1136	2002B	22		29-11-31	115-199
	X2	E	W1136	2002R	22		29-11-31	115-199
T00189		1467/156/R024		TRU-APU START				001-099
T00189		1620/170/R043		TRU-APU START				115-199
	+	H	W1002	0012	*1		24-32-41	001-099
	+	H	W1002	0012	*1		49-41-11	115-199
	-	R	W1002	0014	*1		24-32-41	001-099
	-	R	W1002	0014	*1		49-41-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section T00100

Page 2 End

Oct 09/2008

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
T10002		E006-00/ /		XFMR-AFT CARGO COMPT LIGHTS				ALL
	HV2	E	W1024	0293	18		33-37-21	ALL
	HV2	E	W1024	0008	20		33-37-21	115-199
	LV	E	W1024	0296	12		33-37-21	ALL
	GND	E	W1024	0291	14		33-37-21	ALL
T10003		P034-00/ /		XFMR-CEILING LTS RIGHT				ALL
	HV2	E	W1240	0164	20		33-21-11	001-099
	HV2	E	W1242	0002	20		33-21-11	115-199
	LV	E	W1240	0003	16		33-21-11	001-099
	LV	E	W1242	0001	16		33-21-11	115-199
	GND	E	W1240	0161	16		33-21-11	001-099
	GND	E	W1242	0003	16		33-21-11	115-199
T10004		P034-00/ /		XFMR-CEILING LTS LEFT				ALL
	HV2	E	W1240	0165	20		33-21-11	001-099
	HV2	E	W1242	0005	20		33-21-11	115-199
	LV	E	W1240	0004	16		33-21-11	001-099
	LV	E	W1242	0004	16		33-21-11	115-199
	GND	E	W1240	0163	16		33-21-11	001-099
	GND	E	W1242	0006	16		33-21-11	115-199
T10012		802/274/L054		XFMR-PASS READ LTS,L MID FWD				ALL
	HV3	E	W3702	0862	20		33-23-12	ALL
	LV	E	W3702	0866	16		33-23-12	ALL
	GND	E	W3702	0861	14		33-23-12	ALL
T10013		1083/278/L057		XFMR-PASS READ LTS,L MID AFT				ALL
	HV3	E	W3704	0833	20		33-23-13	ALL
	LV	E	W3704	0846	16		33-23-13	ALL
	GND	E	W3704	0842	14		33-23-13	ALL
T10014		1420/274/L054		XFMR-PASS READ LTS,L AFT				ALL
	HV3	E	W3706	0824	20		33-23-14	ALL
	LV	E	W3706	0826	16		33-23-14	ALL
	GND	E	W3706	0825	14		33-23-14	ALL
T10016		803/275/R055		XFMR-PASS READ LTS,R MID FWD				ALL
	HV3	E	W3802	0865	20		33-23-22	ALL
	LV	E	W3802	0866	16		33-23-22	ALL

HOOKUP LIST

D280N032

91-21-51

Section T10000

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
T10016		803/275/R055		XFMR-PASS READ LTS,R MID FWD (continued)				ALL
	GND	E	W3802	0861	14		33-23-22	ALL
T10017		1083/278/R054		XFMR-PASS READ LTS,R MID AFT				ALL
	HV3	E	W3804	0827	20		33-23-23	ALL
	LV	E	W3804	0846	16		33-23-23	ALL
	GND	E	W3804	0842	14		33-23-23	ALL
T10018		1380/274/R054		XFMR-PASS READ LTS,R AFT				ALL
	HV3	E	W3806	0828	20		33-23-24	ALL
	LV	E	W3806	0826	16		33-23-24	ALL
	GND	E	W3806	0823	14		33-23-24	ALL
T10022		P034-00/ /		XFMR-GALLEY & ENTRY LTS				ALL
	HV2	E	W1240	0422	22		33-22-11	001-099
	HV2	E	W1242	0022	22		33-22-11	115-199
	LV	E	W1240	0423	22		33-22-11	001-099
	LV	E	W1242	0023	20		33-22-11	115-199
	GND	E	W1240	0424	20		33-22-11	001-099
	GND	E	W1242	0024	20		33-22-11	115-199
T10040		P006-00/ /		XFMR-28V AC XFR BUS LEFT				ALL
	HV2	E	W0062	0377	22		24-51-15	ALL
	GD	E	W0062	0378	16		24-51-15	ALL
	LV	E	W0062	0387	18		24-51-15	ALL
T10041		P006-00/ /		XFMR-28V AC XFR BUS RIGHT				ALL
	HV2	E	W0064	0088	22		24-51-25	ALL
	GD	E	W0064	0085	16		24-51-25	ALL
	LV	E	W0064	0087	18		24-51-25	ALL
T10051		0470/274/L054		XFMR-PASS READ LTS,L FWD				ALL
	HV3	E	W3702	0851	20		33-23-11	ALL
	LV	E	W3702	0856	16		33-23-11	ALL
	GND	E	W3702	0850	14		33-23-11	ALL
T10052		530/275/R055		XFMR-PASS READ LTS,R FWD				ALL
	HV3	E	W3802	0855	20		33-23-21	ALL
	LV	E	W3802	0856	16		33-23-21	ALL
	GND	E	W3802	0854	14		33-23-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section T10000

Page 2 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0015X		P3 PNL / /		TERMINAL BLOCK				001-099
TB0015X		P3 / /		TERMINAL BLOCK				115-199
	DED		W0001	1002Z			29-21-32	ALL
	DED		W0003	1002Z			29-21-32	ALL
TB0025K		P62 / /		TERM. BLOCK				ALL
	DED		W3052	2501Z			32-12-12	001-099
	DED		W3050	2503Z			32-12-12	ALL
	DED		W3054	3501Z			23-51-13	ALL
	DED		W3054	3502Z			23-41-12	115-199
TB0058Y		253/207/R006		TERMINAL BLOCK				001-099
TB0058Y		253/207/R6		TERMINAL BLOCK				115-199
	CAP	Y	W2156	0176	22		SPARE	115-199
TB0059X		253/207/L006		TERMINAL BLOCK				001-099
TB0059X		253/207/L6		TERMINAL BLOCK				115-199
	DED		W2229	1002Z			34-57-21	ALL
	DED		W2227	1002Z			34-57-11	115-199
TB0065X		P10 / /		TERMINAL BLOCK				ALL
	CAP	Y	W0443	0000B	24		SPARE	ALL
	CAP	Y	W0443	0000G	24		SPARE	ALL
	CAP	Y	W0443	0000R	24		SPARE	ALL
	CAP	Y	W0443	0000Y	24		SPARE	ALL
	CAP	Y	W0445	0000B	24		SPARE	ALL
	CAP	Y	W0445	0000G	24		SPARE	ALL
	CAP	Y	W0445	0000R	24		SPARE	ALL
	CAP	Y	W0445	0000Y	24		SPARE	ALL
TB0072Z		P051-00 / /		TERMINAL BLOCK				001-099
TB0072Z		P051-00 / /		BURNDY BLOCK				115-199
			W1451	5005Z			31-51-33	ALL
			W1451	5007Z			31-51-33	ALL
			W1451	5014Z			34-16-11	ALL
			W1451	5015Z			31-51-33	ALL
			W1451	5017Z			31-51-42	ALL
			W1451	5018Z			31-51-21	ALL
			W1451	5019Z			31-51-21	ALL
			W1451	5020Z			31-51-33	ALL
			W1451	FRAC			31-51-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section TB0000

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0072Z		P051-00/ /		TERMINAL BLOCK (continued)				001-099
TB0072Z		P051-00/ /		BURNDY BLOCK (continued)				115-199
			W1451	FRBA			31-51-33	ALL

HOOKUP LIST

D280N032

91-21-51

Section TB0000

Page 2 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0106X		E1-2/ /		TERMINAL MODULE				ALL
	REF		W1320	0019	20		30-41-11	115-199
	REF		W1320	0020	20		30-41-11	115-199
	REF		W1320	0021	20		30-41-11	115-199
	REF		W1320	2501Z			30-41-11	115-199
	REF		W1320	2502Z			30-41-11	115-199
	REF		W1320	2503Z			30-41-11	115-199
	REF		W1320	2504Z			30-41-11	115-199
	REF		W1320	2505Z			30-41-11	115-199
	REF		W1320	2506Z			30-41-11	115-199
	REF		W1320	2507Z			30-41-11	115-199
	REF		W1320	2508Z			30-41-11	115-199
	REF		W1320	2509Z			30-41-11	115-199
TB0107X		E001-01/ /		TERMINAL MODULE				115-199
	REF		W1310	0019	20		30-41-12	115-199
	REF		W1310	0020	20		30-41-12	115-199
	REF		W1310	0021	20		30-41-12	115-199
	REF		W1310	2501Z			30-41-12	115-199
	REF		W1310	2502Z			30-41-12	115-199
	REF		W1310	2503Z			30-41-12	115-199
	REF		W1310	2504Z			30-41-12	115-199
	REF		W1310	2505Z			30-41-12	115-199
	REF		W1310	2506Z			30-41-12	115-199
	REF		W1310	2507Z			30-41-12	115-199
	REF		W1310	2508Z			30-41-12	115-199
	REF		W1310	2509Z			30-41-12	115-199
TB0108Y		E004-01/ /		BURNDY BLOCK				001-099
TB0108Y		E4-1/ /		BURNDY BLOCK				115-199
			W1165	5001Z			22-21-21	ALL
			W1165	5003Z			22-24-21	ALL
			W1165	5004Z			22-24-21	ALL
			W1165	5101Z			22-21-21	ALL
			W1165	5103Z			22-21-21	ALL
			W1165	5104Z			22-21-21	ALL
			W1165	5105Z			22-24-21	ALL
			W1165	5106Z			22-24-21	ALL
			W1165	FRAB			22-21-21	ALL
			W1165	FRAC			22-24-21	ALL
			W1165	FRAD			22-24-21	ALL

HOOKUP LIST

D280N032

91-21-51

Section TB0100

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0109Y		E003-01/ /		BURNDY BLOCK				ALL
			W1265	5004Z			22-24-11	ALL
			W1265	5005Z			22-24-11	ALL
			W1265	5007Z			22-21-11	ALL
			W1265	5008Z			22-21-11	ALL
			W1265	5010Z			22-21-11	ALL
			W1265	5101Z			22-24-11	ALL
			W1265	5102Z			22-24-11	ALL
			W1265	5104Z			22-21-11	ALL
			W1265	5201Z			22-21-11	ALL
			W1265	5202Z			22-21-11	ALL
			W1265	5203Z			22-21-11	ALL
			W1265	5204Z			22-22-11	ALL
			W1265	5205Z			22-22-11	ALL
			W1265	5206Z			22-22-11	ALL
			W1265	FRAB			22-21-11	ALL
			W1265	FRAC			22-21-11	ALL
			W1265	FRAD			22-22-11	ALL
			W1265	FRAE			22-24-11	ALL
			W1265	FRAF			22-24-11	ALL
TB0113X		272/280/L015		BLOCK				001-099
TB0113X		272/280/L15		1				115-199
	DED		W2066	1001Z			21-31-21	ALL
TB0141Z		E4-3/ /		TERMINAL BLOCK-				ALL
	DED		W1163	2513Z			23-51-15	115-199
TB0155Y		P070-00/ /		TERMINAL BLOCK				ALL
	CAP	Y	W1250	B-05			21-43-11	115-199
TB0158X		250/205/R010		TERMINAL BLOCK				001-099
TB0158X		250/205/R10		TERMINAL BLOCK				115-199
	DED		W2066	1011Z			27-21-11	115-199
	DED		W2066	1012Z			27-21-11	115-199
	DED		W2066	1013Z			27-21-11	115-199

HOOKUP LIST

D280N032

91-21-51

Section TB0100

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0161C		P36/ /		DIODE (R10398) (SB78-32)				001-002
TB0161C		P036-00/ /		DIODE (R10398)				003-099
I TB0161C		P36/ /		DIODE (R10220,R10221)				115-199
I TB0161C		P36/ /		DIODE (R10220,R10221,R10398)				115-199
			W1260	1125Z			78-34-51	ALL
			W1260	1126Z			78-34-51	ALL
TB0180A		P037-00/ /		DIODE (R10399) (SB78-32)				001-002
TB0180A		P37/ /		DIODE (R10399)				003-099
TB0180A		P037-00/ /		DIODE (R10399)				115-199
			W1270	1111Z			78-34-61	ALL
			W1270	1112Z			78-34-61	ALL
TB0182Y		E003-04/ /		TERMINAL MODULE				ALL
			W1280	5006Z			28-41-11	ALL
			W1280	5009Z			28-41-11	ALL
			W1280	5010Z			28-41-11	ALL
TB0190X		P010-00/ /		TERMINAL BLOCK				ALL
	CAP	Y	W1115	A-RD			32-42-12	ALL
TB0190Y		P010-00/ /		TERMINAL BLOCK				ALL
	CAP	Y	W1115	B-RD			31-51-41	ALL

HOOKUP LIST

D280N032

91-21-51

Section TB0100

Page 3 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0201Y		E002-01/ /		TERMINAL BLOCK				001-099
TB0201Y		E2-1/ /		BURNDY MODULE				115-199
			W1171	0891	20		27-32-11	ALL
			W1171	0892	20		27-32-11	ALL
			W1171	0894	20		27-32-11	ALL
			W1171	5033Z			27-32-11	ALL
			W1171	5353Z			27-32-11	ALL
			W1171	5354Z			27-32-11	ALL
TB0203Y		E2-2/ /		TERMINAL BLOCK				001-099
TB0203Y		E2-2/ /		BURNDYBLOCK				115-199
			W1173	5316Z			34-25-12	002
			W1173	FRMG			34-25-12	002
			W1173	FRMH			34-25-12	002
TB0203Z		E002-02/ /		TERMINAL BLOCK				001-099
TB0203Z		E2-2/ /		BURNDYBLOCK				115-199
	DED		W1173	1122Z			22-14-11	115-199
	DED		W1173	1131Z			22-14-31	115-199
TB0207C		E4-2/ /		RESISTOR (R10142,R10143)				001-099
TB0207C		E4-2/ /		BURNDY RESISTOR BLOCK				115-199
	CAP	Y	W1275	2002R	24		49-71-11	115-199
	CAP	Y	W1275	2005R	24		49-73-11	115-199
TB0207G		E4-2/ /		TERMINAL BLOCK				001-099
TB0207G		E4-2/ /		BURNDY BLOCK				115-199
	DED		W1275	6075Z			73-21-22	115-199
	DED		W1275	6076Z			73-21-22	115-199
	DED		W1275	6077Z			73-21-22	115-199
TB0207Y		E4-2/ /		TERMINAL BLOCK				001-099
TB0207Y		E4-2/ /		BURNDY BLOCK				115-199
	DED		W1275	5952Z			31-41-21	115-199
			W1275	5004Z			22-41-13	001-099
			W1275	5005Z			22-41-13	001-099
			W1275	5006Z			22-41-13	001-099
			W1275	5045Z			77-31-11	001-099
			W1275	5046Z			77-31-11	001-099
			W1275	5047Z			77-31-11	001-099
			W1275	5080Z			77-31-11	001-099

HOOKUP LIST

D280N032

91-21-51

Section TB0200

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0207Y		E4-2/ /		TERMINAL BLOCK (continued)				001-099
TB0207Y		E4-2/ /		BURNDY BLOCK (continued)				115-199
			W1275	5081Z			77-31-11	001-099
			W1275	5082Z			77-31-11	001-099
			W1275	FRTD			77-31-11	001-099
			W1275	FRTI			77-31-11	001-099
			W1275	FRTM			22-41-13	001-099
			W1275	2511Z			77-12-11	ALL
			W1275	2512Z			77-12-11	ALL
			W1275	2515Z			77-12-11	ALL
			W1275	2516Z			77-12-11	ALL
			W1275	2517Z			77-12-21	ALL
			W1275	2518Z			77-12-21	ALL
			W1275	2519Z			77-12-21	ALL
			W1275	2520Z			77-12-21	ALL
			W1275	2521Z			77-12-21	ALL
			W1275	2522Z			77-12-21	ALL
			W1275	2617Z			77-12-21	ALL
			W1275	2618Z			77-12-21	ALL
			W1275	5028Z			28-41-11	ALL
			W1275	5029Z			28-41-11	ALL
			W1275	5042Z			28-41-11	ALL
			W1275	5043Z			28-41-11	ALL
			W1275	FRTF			77-12-21	ALL
			W1275	FRTG			77-12-21	ALL
			W1275	FRUA			28-41-11	ALL
TB0207Z		E4-2/ /		TERMINAL BLOCK				001-099
TB0207Z		E4-2/ /		BURNDY BLOCK				115-199
	CAP	Y	W1275	5059B	24		31-41-13	115-199
	CAP	Y	W1275	5059R	24		31-41-13	115-199
	CAP	Y	W1275	5064B	24		31-41-23	115-199
	CAP	Y	W1275	5064R	24		31-41-23	115-199
			W1275	2501Z			77-12-31	ALL
			W1275	2502Z			77-12-31	ALL
			W1275	2503Z			77-12-31	ALL
			W1275	2504Z			77-12-31	ALL
			W1275	2505Z			77-12-31	ALL
			W1275	2506Z			77-12-31	ALL
			W1275	2507Z			77-12-31	ALL
			W1275	2508Z			77-12-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section TB0200

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB0207Z		E4-2/ /		TERMINAL BLOCK (continued)				001-099
TB0207Z		E4-2/ /		BURNDY BLOCK (continued)				115-199
			W1275	2509Z			77-12-11	ALL
			W1275	2510Z			77-12-11	ALL
			W1275	2513Z			77-12-11	ALL
			W1275	2514Z			77-12-11	ALL
			W1275	2590Z			77-12-31	ALL
			W1275	2592Z			77-12-31	ALL
			W1275	2613Z			77-12-11	ALL
			W1275	2614Z			77-12-11	ALL
			W1275	2615Z			77-12-11	ALL
			W1275	2616Z			77-12-11	ALL
			W1275	2619Z			77-12-31	ALL
			W1275	2620Z			77-12-31	ALL

HOOKUP LIST

D280N032

91-21-51

Section TB0200

Page 3 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TB5006		272/250/R010		TERMINAL STRIP-				ALL
	CAP	Y	W2010	0004	18		SPARE	ALL
	CAP	Y	W2010	0005	16		SPARE	ALL
TB5028		225/225/L037		TERMINAL STRIP-				ALL
			W2384	2501Z			30-41-11	115-199
			W2384	2502Z			30-41-11	115-199
			W2384	FRAB			30-41-11	115-199
TB5030		250/215/L047		TERMINAL STRIP-				ALL
			W2386	2503Z			30-41-12	115-199
			W2386	2504Z			30-41-12	115-199
			W2386	FRAD			30-41-12	115-199
TB5038		223/230/R040		TERMINAL STRIP-				ALL
			W2390	2501Z			30-41-12	115-199
			W2390	2502Z			30-41-12	115-199
			W2390	FRAB			30-41-12	115-199
TB5040		255/216/R047		TERMINAL STRIP-				ALL
			W2388	2503Z			30-41-11	115-199
			W2388	2504Z			30-41-11	115-199
			W2388	FRAD			30-41-11	115-199
TB5070		P037-00/ /		TERMINAL STRIP-				ALL
	CAP	Y	W3660	0001	10		25-31-21	001-099
	CAP	Y	W3660	0002	10		25-31-21	001-099
	CAP	Y	W3660	0003	10		25-31-21	001-099

HOOKUP LIST

D280N032

91-21-51

Section TB5000

Page 1 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TS0187		P007-00/ /		SNSR-EFIS REMOTE LIGHT,CAPT				ALL
	BLK		W0010	A-BK			34-22-15	ALL
	BLU		W0010	A-BL			34-22-15	ALL
	ORG		W0010	A-OR			34-22-15	ALL
	RED		W0010	A-RD			34-22-15	ALL
	YEL		W0010	A-YL			34-22-15	ALL
TS0188		P007-00/ /		SNSR-EFIS REMOTE LIGHT,F/O				ALL
	BLK		W0012	A-BK			34-22-25	ALL
	BLU		W0012	A-BL			34-22-25	ALL
	ORG		W0012	A-OR			34-22-25	ALL
	RED		W0012	A-RD			34-22-25	ALL
	YEL		W0012	A-YL			34-22-25	ALL

HOOKUP LIST

D280N032

91-21-51

Section TS0100

Page 1 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TS0281		P001-03/ /		SNSR ASSY-AUTO BRT,MD&T				ALL
	A1	1A	W0101	0059	22		33-16-11	ALL
	A2	1A	W0101	0057	22		33-16-11	ALL
	A3	1A	W0101	0058	22		33-16-11	ALL
	B1	1A	W0101	0047	22		33-16-51	ALL
	B2	1A	W0101	0048	22		33-16-51	ALL
	B3	1A	W0101	0046	22		33-16-51	ALL

HOOKUP LIST

D280N032

91-21-51

Section TS0200

Page 1 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TS0352		P010-00/ /		SYNCHRO-AIDS				115-199
	BLK		W1115	M-BK			31-31-31	115-199
	BLU		W1115	M-BU			31-31-31	115-199
	GRN		W1115	M-GN			31-31-31	115-199
	RED		W1115	M-RD			31-31-31	115-199
	YEL		W1115	M-YL			31-31-31	115-199

HOOKUP LIST

D280N032

91-21-51

Section TS0300

Page 1 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TS5018		P070-00/ /		SNSR-CURRENT,CARGO FAN,FWD				115-199
	1		W1250	B-01			21-43-11	115-199
	2		W1250	B-02			21-43-11	115-199
	3		W1250	B-03			21-43-11	115-199
	4		W1250	B-04			21-43-11	115-199
	5		W1250	B-05			21-43-11	115-199
I TS5044		P037-00/ /		SNSR-CURRENT,CARGO FAN,AFT (PLATE B)				115-199
	1		W1270	B-01			21-44-11	115-199
	2		W1270	B-02			21-44-11	115-199
	3		W1270	B-03			21-44-11	115-199
	4		W1270	B-04			21-44-11	115-199
	5		W1270	B-05			21-44-11	115-199
TS5084		P036-00/ /LFS		SNSR-SLAT POS REF				ALL
	1		W1260	C-01			27-58-11	ALL
	2		W1260	C-02			27-58-11	ALL
	3		W1260	C-03			27-58-11	ALL
	4		W1260	C-04			27-58-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section TS5000

Page 1 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
TS5140		0265/ /RS		SNSR-FUEL TEMP				ALL
	= A		W3406	A-01			28-43-11	ALL
	= B		W3406	B-02			28-43-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section TS5100

Page 1 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Equip	Term	Station / WL / BL Type	Bundle	Description Wire No.	GA	CO	Diagram	Effectivity
V00029		1065/184/L062		VALVE-ANTISKID,2				ALL
	= GND	E	W2412	0039	18		32-42-11	ALL
V00030		1065/187/L062		VALVE-ANTISKID,1				ALL
	= GND	E	W2412	0036	18		32-42-11	ALL
V00031		1065/187/L062		VALVE-ANTISKID,6				ALL
	= GND	E	W2412	0040	18		32-42-11	ALL
V00032		1065/187/L062		VALVE-ANTISKID,5				ALL
	= GND	E	W2412	0037	18		32-42-11	ALL
V00033		1065/184/R075		VALVE-ANTISKID,3				ALL
	= GND	E	W2512	0035	18		32-42-11	ALL
V00034		1065/184/R075		VALVE-ANTISKID,4				ALL
	= GND	E	W2512	0038	18		32-42-11	ALL
V00035		1065/184/R075		VALVE-ANTISKID,7				ALL
	= GND	E	W2512	0036	18		32-42-11	ALL
V00036		1065/184/R075		VALVE-ANTISKID,8				ALL
	= GND	E	W2512	0039	18		32-42-11	ALL
V00037		1070/184/L004		VALVE-ANTISKID,RESERVE (5 & 6)				ALL
	= GND	E	W2412	0038	18		32-42-11	ALL
V00038		1078/184/L004		VALVE-ANTISKID,RESERVE (1 & 2)				ALL
	= GND	E	W2412	0035	18		32-42-11	ALL
V00039		1070/184/R005		VALVE-ANTISKID,RESERVE (7 & 8)				ALL
	= GND	E	W2512	0037	18		32-42-11	ALL
V00040		1070/184/R005		VALVE-ANTISKID,RESERVE (3 & 4)				ALL
	= GND	E	W2512	0040	18		32-42-11	ALL

HOOKUP LIST

D280N032

91-21-51

Section V00000

Page 1 End

Oct 09/2008