

91-21-41

TERMINAL STRIP LIST

91-21-41
TERMINAL STRIP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
EFFECTIVE PAGES			TB0000 cont.			TB0000 cont.		
	1 thru 5	Oct 09/2008	R	19	Oct 09/2008	O	46	Oct 09/2008
	6	BLANK	R	20	Oct 09/2008	O	47	Oct 09/2008
T00100	1	May 17/2006	O	21	Oct 09/2008	O	48	Oct 09/2008
	2	May 17/2006	O	22	Oct 09/2008	O	49	Oct 09/2008
	3	May 17/2006	O	23	Oct 09/2008	O	50	Oct 09/2008
	4	May 17/2006	R	24	Oct 09/2008	O	51	Oct 09/2008
T10000	1	May 17/2006	R	25	Oct 09/2008	O	52	Oct 09/2008
	2	May 17/2006	R	26	Oct 09/2008	O	53	Oct 09/2008
	3	May 17/2006	R	27	Oct 09/2008	O	54	Oct 09/2008
TB0000	1	Dec 18/2007	R	28	Oct 09/2008	O	55	Oct 09/2008
	2	May 17/2006	R	29	Oct 09/2008	O	56	Oct 09/2008
	3	May 17/2006	R	30	Oct 09/2008	O	57	Oct 09/2008
R	4	Oct 09/2008	R	31	Oct 09/2008	O	58	Oct 09/2008
R	5	Oct 09/2008	R	32	Oct 09/2008	O	59	Oct 09/2008
O	6	Oct 09/2008	R	33	Oct 09/2008	O	60	Oct 09/2008
R	7	Oct 09/2008	R	34	Oct 09/2008	O	61	Oct 09/2008
O	8	Oct 09/2008	O	35	Oct 09/2008	A	62	Oct 09/2008
O	9	Oct 09/2008	O	36	Oct 09/2008	O TB0100	1	Oct 09/2008
R	10	Oct 09/2008	O	37	Oct 09/2008	O	2	Oct 09/2008
O	11	Oct 09/2008	O	38	Oct 09/2008	O	3	Oct 09/2008
R	12	Oct 09/2008	O	39	Oct 09/2008	O	4	Oct 09/2008
R	13	Oct 09/2008	O	40	Oct 09/2008	O	5	Oct 09/2008
R	14	Oct 09/2008	O	41	Oct 09/2008	O	6	Oct 09/2008
R	15	Oct 09/2008	O	42	Oct 09/2008	O	7	Oct 09/2008
O	16	Oct 09/2008	O	43	Oct 09/2008	O	8	Oct 09/2008
O	17	Oct 09/2008	O	44	Oct 09/2008	O	9	Oct 09/2008
O	18	Oct 09/2008	O	45	Oct 09/2008	O	10	Oct 09/2008

A = Added, R = Revised, D = Deleted, O = Overflow

TERMINAL STRIP LIST

D280N032

EFFECTIVE PAGES

Page 1
Oct 09/2008

91-21-41
TERMINAL STRIP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
TB0100 cont.			TB0100 cont.			TB0100 cont.		
O	11	Oct 09/2008	O	38	Oct 09/2008	O	65	Oct 09/2008
O	12	Oct 09/2008	O	39	Oct 09/2008	O	66	Oct 09/2008
R	13	Oct 09/2008	O	40	Oct 09/2008	O	67	Oct 09/2008
R	14	Oct 09/2008	O	41	Oct 09/2008	O	68	Oct 09/2008
R	15	Oct 09/2008	O	42	Oct 09/2008	O	69	Oct 09/2008
R	16	Oct 09/2008	O	43	Oct 09/2008	O	70	Oct 09/2008
R	17	Oct 09/2008	O	44	Oct 09/2008	O	71	Oct 09/2008
R	18	Oct 09/2008	O	45	Oct 09/2008	O	72	Oct 09/2008
R	19	Oct 09/2008	O	46	Oct 09/2008	O	73	Oct 09/2008
R	20	Oct 09/2008	O	47	Oct 09/2008	O	74	Oct 09/2008
R	21	Oct 09/2008	O	48	Oct 09/2008	O	75	Oct 09/2008
R	22	Oct 09/2008	O	49	Oct 09/2008	R	76	Oct 09/2008
R	23	Oct 09/2008	O	50	Oct 09/2008	R	77	Oct 09/2008
R	24	Oct 09/2008	O	51	Oct 09/2008	R	78	Oct 09/2008
R	25	Oct 09/2008	O	52	Oct 09/2008	O	79	Oct 09/2008
O	26	Oct 09/2008	O	53	Oct 09/2008	O	80	Oct 09/2008
O	27	Oct 09/2008	O	54	Oct 09/2008	R	81	Oct 09/2008
O	28	Oct 09/2008	O	55	Oct 09/2008	O	82	Oct 09/2008
O	29	Oct 09/2008	O	56	Oct 09/2008	R	83	Oct 09/2008
O	30	Oct 09/2008	O	57	Oct 09/2008	R	84	Oct 09/2008
O	31	Oct 09/2008	O	58	Oct 09/2008	R	85	Oct 09/2008
O	32	Oct 09/2008	O	59	Oct 09/2008	R	86	Oct 09/2008
O	33	Oct 09/2008	O	60	Oct 09/2008	O	87	Oct 09/2008
O	34	Oct 09/2008	O	61	Oct 09/2008	O	88	Oct 09/2008
O	35	Oct 09/2008	O	62	Oct 09/2008	O	89	Oct 09/2008
O	36	Oct 09/2008	O	63	Oct 09/2008	O	90	Oct 09/2008
O	37	Oct 09/2008	O	64	Oct 09/2008	O	91	Oct 09/2008

A = Added, R = Revised, D = Deleted, O = Overflow

TERMINAL STRIP LIST

D280N032

EFFECTIVE PAGES

Page 2
Oct 09/2008

91-21-41
TERMINAL STRIP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
TB0100 cont.			TB0100 cont.			TB0100 cont.		
R	92	Oct 09/2008	R	119	Oct 09/2008	O	146	Oct 09/2008
R	93	Oct 09/2008	R	120	Oct 09/2008	R TB0200	1	Oct 09/2008
R	94	Oct 09/2008	R	121	Oct 09/2008	R	2	Oct 09/2008
R	95	Oct 09/2008	R	122	Oct 09/2008	R	3	Oct 09/2008
R	96	Oct 09/2008	R	123	Oct 09/2008	R	4	Oct 09/2008
R	97	Oct 09/2008	R	124	Oct 09/2008	R	5	Oct 09/2008
R	98	Oct 09/2008	R	125	Oct 09/2008	R	6	Oct 09/2008
R	99	Oct 09/2008	O	126	Oct 09/2008	R	7	Oct 09/2008
O	100	Oct 09/2008	O	127	Oct 09/2008	R	8	Oct 09/2008
O	101	Oct 09/2008	O	128	Oct 09/2008	R	9	Oct 09/2008
O	102	Oct 09/2008	O	129	Oct 09/2008	R	10	Oct 09/2008
O	103	Oct 09/2008	O	130	Oct 09/2008	R	11	Oct 09/2008
O	104	Oct 09/2008	O	131	Oct 09/2008	R	12	Oct 09/2008
R	105	Oct 09/2008	O	132	Oct 09/2008	R	13	Oct 09/2008
R	106	Oct 09/2008	O	133	Oct 09/2008	R	14	Oct 09/2008
R	107	Oct 09/2008	O	134	Oct 09/2008	R	15	Oct 09/2008
O	108	Oct 09/2008	O	135	Oct 09/2008	R	16	Oct 09/2008
O	109	Oct 09/2008	O	136	Oct 09/2008	R	17	Oct 09/2008
O	110	Oct 09/2008	O	137	Oct 09/2008	R	18	Oct 09/2008
O	111	Oct 09/2008	O	138	Oct 09/2008	R	19	Oct 09/2008
R	112	Oct 09/2008	O	139	Oct 09/2008	R	20	Oct 09/2008
R	113	Oct 09/2008	O	140	Oct 09/2008	O	21	Oct 09/2008
R	114	Oct 09/2008	O	141	Oct 09/2008	O	22	Oct 09/2008
R	115	Oct 09/2008	O	142	Oct 09/2008	O	23	Oct 09/2008
R	116	Oct 09/2008	O	143	Oct 09/2008	O	24	Oct 09/2008
R	117	Oct 09/2008	O	144	Oct 09/2008	O	25	Oct 09/2008
R	118	Oct 09/2008	O	145	Oct 09/2008	O	26	Oct 09/2008

A = Added, R = Revised, D = Deleted, O = Overflow

TERMINAL STRIP LIST

D280N032

EFFECTIVE PAGES

Page 3
Oct 09/2008

91-21-41
TERMINAL STRIP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
TB0200 cont.			TB0200 cont.			TB0300 cont.		
O	27	Oct 09/2008	O	54	Oct 09/2008	R	2	Oct 09/2008
O	28	Oct 09/2008	O	55	Oct 09/2008	TB5000	1	Dec 18/2007
O	29	Oct 09/2008	O	56	Oct 09/2008		2	Dec 18/2007
O	30	Oct 09/2008	O	57	Oct 09/2008		3	Dec 18/2007
O	31	Oct 09/2008	O	58	Oct 09/2008	R	4	Oct 09/2008
O	32	Oct 09/2008	O	59	Oct 09/2008	R	5	Oct 09/2008
O	33	Oct 09/2008	R	60	Oct 09/2008	R	6	Oct 09/2008
O	34	Oct 09/2008	R	61	Oct 09/2008	R	7	Oct 09/2008
O	35	Oct 09/2008	O	62	Oct 09/2008		8	Dec 18/2007
O	36	Oct 09/2008	O	63	Oct 09/2008		9	Dec 18/2007
O	37	Oct 09/2008	O	64	Oct 09/2008		10	Dec 18/2007
O	38	Oct 09/2008	R	65	Oct 09/2008		11	Dec 18/2007
O	39	Oct 09/2008	O	66	Oct 09/2008		12	Dec 18/2007
O	40	Oct 09/2008	O	67	Oct 09/2008	R	13	Oct 09/2008
O	41	Oct 09/2008	O	68	Oct 09/2008		14	Dec 18/2007
O	42	Oct 09/2008	O	69	Oct 09/2008		15	Dec 18/2007
O	43	Oct 09/2008	O	70	Oct 09/2008	TS0000	1	Dec 18/2007
O	44	Oct 09/2008	O	71	Oct 09/2008	TS0100	1	Dec 18/2007
O	45	Oct 09/2008	O	72	Oct 09/2008		2	Dec 18/2007
O	46	Oct 09/2008	O	73	Oct 09/2008		3	Dec 18/2007
O	47	Oct 09/2008	O	74	Oct 09/2008	R TS0200	1	Oct 09/2008
O	48	Oct 09/2008	O	75	Oct 09/2008	TS0300	1	Dec 18/2007
O	49	Oct 09/2008	O	76	Oct 09/2008	TS5000	1	Dec 18/2007
O	50	Oct 09/2008	A	77	Oct 09/2008		2	Dec 18/2007
O	51	Oct 09/2008	A	78	Oct 09/2008		3	Dec 18/2007
R	52	Oct 09/2008	A	79	Oct 09/2008	TS5100	1	Dec 18/2007
O	53	Oct 09/2008	R TB0300	1	Oct 09/2008		2	Dec 18/2007

A = Added, R = Revised, D = Deleted, O = Overflow

TERMINAL STRIP LIST

D280N032

EFFECTIVE PAGES

Page 4
Oct 09/2008

91-21-41
 TERMINAL STRIP LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
TS5100 cont.								
	3	Dec 18/2007						
	4	Dec 18/2007						
TS5200	1	Dec 18/2007						
TS5300	1	Dec 18/2007						

A = Added, R = Revised, D = Deleted, O = Overflow

TERMINAL STRIP LIST

D280N032

EFFECTIVE PAGES

Page 5
 Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
T00101		S282T001-1					E001-02/ /		ALL
		+	H	W2230	0001	02		24-32-11	ALL
		-	G5	W2230	0002	02		24-32-11	ALL
T00102		S282T001-1					E001-01/ /		ALL
		+	H	W2232	0001	02		24-32-11	ALL
		-	G5	W2232	0002	02		24-32-11	ALL
T00103		10-60011-2					P034-00/ /		ALL
		+	C	W1128	0001	12		24-54-61	ALL
		+	C	W1128	0035	12		24-54-61	ALL
		-	C	W1128	0036	12		24-54-61	ALL
		A	C	W1128	0032	22		24-54-61	ALL
		B	C	W1128	0033	22		24-54-61	ALL
		C	C	W1128	0034	22		24-54-61	ALL
T00105		S281T001-4					P031-00/ /		ALL
T00106		S281T001-4					P6-3/ /		ALL
T00107		S281T001-4					P032-00/ /		ALL
T00108		S281T001-4					P6-4/ /		001-099
T00108		S281T001-4					P006-04/ /		115-199
T00111		S281T001-4					P034-00/ /		ALL
T00112		S281T001-4					P031-00/ /		ALL
T00113		S281T001-4					P032-00/ /		ALL
T00115		S281T001-4					P034-00/ /		ALL
T00116		S281T001-4					P034-00/ /		ALL
T00122		S281T001-4					P034-00/ /		ALL
T00123		60B40026-14					P070-00/ /		ALL
		GND	E	W1250	0029	14		24-53-11	ALL
		HV	E	W1250	0028	20		24-53-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section T00100

Page 1

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
T00123		60B40026-14 (continued)					P070-00/ /		ALL
		LV	E	W1250	0030	14		24-53-11	ALL
T00124		60B40026-14					P033-00/ /		ALL
		GND	E	W1230	0453	14		24-53-21	001-099
		GND	E	W1234	0056	14		24-53-21	115-199
		HV	E	W1230	0452	20		24-53-21	001-099
		HV	E	W1234	0055	20		24-53-21	115-199
		LV	E	W1230	0454	14		24-53-21	001-099
		LV	E	W1234	0057	14		24-53-21	115-199
T00126		60B40026-13					P034-00/ /		001-099
T00126		60B40026-13					P037-00/ /		115-199
		GND	E	W1196	0017	06		24-53-51	001-099
		GND	E	W1272	0072	06		24-53-51	115-199
		HV	E	W1272	0218	14		24-53-51	115-199
		HV	E	W4510	0014	14		24-53-51	001-099
		LV	E	W1196	0006	06		24-53-51	001-099
		LV	E	W4512	0004	06		24-53-51	115-199
T00127		S281T001-4					P031-00/ /		ALL
T00128		S281T001-4					P032-00/ /		ALL
T00129		FT1221					FSS94/ /		ALL
T00130		FT1221					FSS84/184/RW88		001-099
T00130		FT1221					0880/184/RW88		115-199
T00137		FT1222					P063-00/ /		ALL
T00138		FT1222					P062-00/ /		ALL
T00139		10615					P036-00/ /		ALL
		G	D	W1260	0076	20		34-12-11	ALL
		HV	D	W1260	0074	24		34-12-11	ALL
		LV	D	W1260	0075	20		34-12-11	ALL
T00140		10615					P037-00/ /		ALL
		G	D	W1270	0067	20		34-12-21	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section T00100

Page 2

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
T00140		10615 (continued)					P037-00/ /		ALL
		HV	D	W1270	0068	24		34-12-21	ALL
		LV	D	W1270	0066	20		34-12-21	ALL
T00141		60B40026-20					1178/189/R036		ALL
T00142		FT1222					/ /		001-099
T00143		FT1221					P063-00/ /		ALL
T00144		FT1221					P062-00/ /		ALL
T00148		60B40026-17					P065-00/ /		ALL
		GND	E	W0808	0034	14		33-37-11	ALL
		HV1	E	W0808	0030	22		33-37-11	001-099
		HV2	E	W0808	0030	20		33-37-11	115-199
		LV	E	W0808	0040	12		33-37-11	ALL
T00149		60B40026-20					1744/271/L036		ALL
T00153		60B40026-20					P070-00/ /		001-099
T00153		60B40026-19					P070-00/ /		115-199
T00155		314-14544-01					P031-00/ /		115-199
		X1	E	W1136	2001R	22		29-11-22	115-199
		X2	E	W1136	2001B	22		29-11-22	115-199
T00156		314-14544-01					P032-00/ /		115-199
		X1	E	W1138	2001B	22		29-11-12	115-199
		X2	E	W1138	2001R	22		29-11-12	115-199
T00157		314-14544-01					P031-00/ /		115-199
		X1	E	W1136	2002B	22		29-11-31	115-199
		X2	E	W1136	2002R	22		29-11-31	115-199
T00189		60B40104-2					1467/156/R024		001-099
T00189		60B40104-2					1620/170/R043		115-199
		+	H	W1002	0012	*1		24-32-41	001-099
		+	H	W1002	0012	*1		49-41-11	115-199
		-	R	W1002	0014	*1		24-32-41	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section T00100

Page 3

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Part Number		Type	Bundle	Wire No.	GA	Station / WL / BL		Effectivity
	Fix	Term					CO	Diagram	
T00189		60B40104-2 (continued)					1467/156/R024		001-099
T00189		60B40104-2 (continued)					1620/170/R043		115-199
		-	R	W1002	0014	*1		49-41-11	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section T00100

Page 4 End

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
T10002		60B40026-17					E006-00/ /		ALL
		GND	E	W1024	0291	14		33-37-21	ALL
		HV2	E	W1024	0008	20		33-37-21	115-199
		HV2	E	W1024	0293	18		33-37-21	ALL
		LV	E	W1024	0296	12		33-37-21	ALL
T10003		60B40026-15					P034-00/ /		ALL
		GND	E	W1240	0161	16		33-21-11	001-099
		GND	E	W1242	0003	16		33-21-11	115-199
		HV2	E	W1240	0164	20		33-21-11	001-099
		HV2	E	W1242	0002	20		33-21-11	115-199
		LV	E	W1240	0003	16		33-21-11	001-099
		LV	E	W1242	0001	16		33-21-11	115-199
T10004		60B40026-15					P034-00/ /		ALL
		GND	E	W1240	0163	16		33-21-11	001-099
		GND	E	W1242	0006	16		33-21-11	115-199
		HV2	E	W1240	0165	20		33-21-11	001-099
		HV2	E	W1242	0005	20		33-21-11	115-199
		LV	E	W1240	0004	16		33-21-11	001-099
		LV	E	W1242	0004	16		33-21-11	115-199
T10012		60B40026-17					802/274/L054		ALL
		GND	E	W3702	0861	14		33-23-12	ALL
		HV3	E	W3702	0862	20		33-23-12	ALL
		LV	E	W3702	0866	16		33-23-12	ALL
T10013		60B40026-17					1083/278/L057		ALL
		GND	E	W3704	0842	14		33-23-13	ALL
		HV3	E	W3704	0833	20		33-23-13	ALL
		LV	E	W3704	0846	16		33-23-13	ALL
T10014		60B40026-17					1420/274/L054		ALL
		GND	E	W3706	0825	14		33-23-14	ALL
		HV3	E	W3706	0824	20		33-23-14	ALL
		LV	E	W3706	0826	16		33-23-14	ALL
T10016		60B40026-17					803/275/R055		ALL
		GND	E	W3802	0861	14		33-23-22	ALL
		HV3	E	W3802	0865	20		33-23-22	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section T10000

Page 1

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
T10016		60B40026-17 (continued)					803/275/R055		ALL
		LV	E	W3802	0866	16		33-23-22	ALL
T10017		60B40026-17					1083/278/R054		ALL
		GND	E	W3804	0842	14		33-23-23	ALL
		HV3	E	W3804	0827	20		33-23-23	ALL
		LV	E	W3804	0846	16		33-23-23	ALL
T10018		60B40026-17					1380/274/R054		ALL
		GND	E	W3806	0823	14		33-23-24	ALL
		HV3	E	W3806	0828	20		33-23-24	ALL
		LV	E	W3806	0826	16		33-23-24	ALL
T10022		60B40026-15					P034-00/ /		ALL
		GND	E	W1240	0424	20		33-22-11	001-099
		GND	E	W1242	0024	20		33-22-11	115-199
		HV2	E	W1240	0422	22		33-22-11	001-099
		HV2	E	W1242	0022	22		33-22-11	115-199
		LV	E	W1240	0423	22		33-22-11	001-099
		LV	E	W1242	0023	20		33-22-11	115-199
T10031		60B40026-19					P036-00/ /		ALL
T10040		60B40026-16					P006-00/ /		ALL
		GD	E	W0062	0378	16		24-51-15	ALL
		HV2	E	W0062	0377	22		24-51-15	ALL
		LV	E	W0062	0387	18		24-51-15	ALL
T10041		60B40026-16					P006-00/ /		ALL
		GD	E	W0064	0085	16		24-51-25	ALL
		HV2	E	W0064	0088	22		24-51-25	ALL
		LV	E	W0064	0087	18		24-51-25	ALL
T10043		FT1246					WS807/ /LTIP		ALL
T10044		FT1246					WS807/ /RTIP		ALL
T10051		60B40026-17					0470/274/L054		ALL
		GND	E	W3702	0850	14		33-23-11	ALL
		HV3	E	W3702	0851	20		33-23-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section T10000

Page 2

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
T10051		60B40026-17 (continued)					0470/274/L054		ALL
		LV	E	W3702	0856	16		33-23-11	ALL
T10052		60B40026-17					530/275/R055		ALL
		GND	E	W3802	0854	14		33-23-21	ALL
		HV3	E	W3802	0855	20		33-23-21	ALL
		LV	E	W3802	0856	16		33-23-21	ALL
T10053		S271T451-1					1042/173/L028		001-099
T10054		S271T451-1					1042/181/R057		001-099
T10055		S271T451-1					1074/177/L001		001-099
T10056		S271T451-1					1079/168/R002		001-099
T10060		10-3257-5					E001-01/ /		003-099

TERMINAL STRIP LIST

D280N032

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

91-21-41

Section T10000

Page 3 End

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0001		97437-121-01A-MATRIXP-N-					ENG/ /		ALL
TB0001		3600097-ROLLS-ROYCEP-N-					ENG/ /		ALL
TB0001	N	12103B16E16-204-MATRIP-N-					ENG/ /		001, 003-099, 115-199
TB0001	N	2506685-ROLLS-ROYCEP-N-					ENG/ /		ALL
TB0001	P	12103B16E15-204-MATRIXP-N-					ENG/ /		001, 003-099, 115-199
TB0001	P	592852-1-AMPP-N-					ENG/ /		ALL
TB0001	P	2506678-ROLLS-ROYCEP-N-					ENG/ /		ALL
TB0001	Q	MRFB16E11-204-MATRIXP-N-					ENG/ /		001, 003-099, 115-199
TB0001	Q	2506677-ROLLS-ROYCEP-N-					ENG/ /		ALL
TB0001	R	MRFB16E12-204-MATRIXP-N-					ENG/ /		001, 003-099, 115-199
TB0001	R	2506681-ROLLS-ROYCEP-N-					ENG/ /		ALL
TB0001	S	MRFB16E02-204-MATRIXP-N-					ENG/ /		001, 003-099, 115-199
TB0001	S	2506682-ROLLS-ROYCEP-N-					ENG/ /		ALL
TB0001	T	MRFB16E04-204-MATRIXP-N-					ENG/ /		001, 003-099, 115-199
TB0001	T	2506680-ROLLS-ROYCEP-N-					ENG/ /		ALL
TB0001	U	MRFB16E03-204-MATRIXP-N-					ENG/ /		001, 003-099, 115-199
TB0001	U	2506679-ROLLS-ROYCEP-N-					ENG/ /		ALL
TB0001	V	12103B16E14-204-MATRIP-N-					ENG/ /		001, 003-099, 115-199
TB0001	V	2506684-ROLLS-ROYCEP-N-					ENG/ /		ALL
TB0001	W	12093B16E13-204MATRIXP-N-					ENG/ /		001, 003-099, 115-199
TB0001	W	2506683-ROLLS-ROYCEP-N-					ENG/ /		ALL
TB0002		12220BE01A-MATRIXP-N-					ENG/ /		001, 003-099, 115-199
TB0002		2508409-ROLLS-ROYCEP-N-					ENG/ /		ALL
TB0002	A	12220B16E09-MATRIXP-N-					ENG/ /		001, 003-099, 115-199
TB0002	A	2508410-ROLLS-ROYCEP-N-					ENG/ /		ALL
TB0002	J	MRTB16E06-204-MATRIXP-N-					ENG/ /		001, 003-099, 115-199
TB0002	J	2508412-ROLLS-ROYCEP-N-					ENG/ /		ALL
TB0002	L	MRTB16E03-204-MATRIXP-N-					ENG/ /		001, 003-099, 115-199
TB0002	L	2508411-ROLLS-ROYCEP-N-					ENG/ /		ALL
TB0002	M	MRTB16E04-204-MATRIXP-N-					ENG/ /		001, 003-099, 115-199
TB0002	M	2508413-ROLLS-ROYCEP-N-					ENG/ /		ALL
TB0005		MRTBL-7					P028-00/ /		001, 003-099, 115-199
TB0005	A	M81714-1-DB3					P028-00/ /		ALL
TB0005	B	M81714-1-DA1					P028-00/ /		ALL
TB0005	C	M81714-1-DB1					P028-00/ /		ALL
TB0005	P	M81714-2-BC1					P28/ /		ALL
	A	A001	1A	W1500	0071	20		28-41-11	ALL
	A	A001	1A	W1500	0072	20		28-41-11	ALL
	A	A001	1A	W1500	0073	20		28-41-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0005		MRTBL-7 (continued)					P028-00/ /		001, 003-099, 115-199
TB0005	A	M81714-1-DB3 (continued)					P028-00/ /		ALL
TB0005	B	M81714-1-DA1 (continued)					P028-00/ /		ALL
TB0005	C	M81714-1-DB1 (continued)					P028-00/ /		ALL
TB0005	P	M81714-2-BC1 (continued)					P28/ /		ALL
	A	A001	1A	W1500	0074	20		28-41-11	ALL
	B	A002	1A	W1500	0013	20		28-21-23	ALL
	B	A002	1A	W1500	0016	20		28-21-23	ALL
	B	A002	1A	W1500	0019	20		28-21-23	ALL
	B	A002	1A	W1500	0022	20		28-21-23	ALL
	B	A002	1A	W1500	0025	20		28-26-11	ALL
	B	A002	1A	W1500	0028	20		28-26-11	ALL
	B	A002	1A	W1500	0067	20		28-21-23	ALL
	A	A003	1A	W1500	2503B	20		28-41-11	ALL
	A	A003	1A	W1500	2506B	20		28-41-11	ALL
	A	A003	1A	W1500	2509B	20		28-41-11	ALL
	A	A003	1A	W1500	2512B	20		28-41-11	ALL
	C	A004	1A	W1500	0102	20		28-41-11	ALL
	C	A004	1A	W1500	2503Z			28-41-11	ALL
	C	A004	1A	W1500	2506Z			28-41-11	ALL
	C	A004	1A	W1500	2509Z			28-41-11	ALL
	C	A004	1A	W1500	2512Z			28-41-11	ALL
	A	A005	1A	W1500	2502B	20		28-41-11	ALL
	A	A005	1A	W1500	2505B	20		28-41-11	ALL
	A	A005	1A	W1500	2508B	20		28-41-11	ALL
	A	A005	1A	W1500	2511B	20		28-41-11	ALL
	P	A006	1A	W1500	0008	20		28-21-22	ALL
	P	A006	1A	W1500	0010	20		28-21-22	ALL
	P	A006	1A	W1500	0064	20		28-21-22	ALL
	A	A007	1A	W1500	0052	20		28-21-22	ALL
	A	A007	1A	W1500	0059	20		28-21-22	ALL
	A	A007	1A	W1500	0061	20		28-21-22	ALL
	A	A007	1A	W1500	0062	20		28-21-22	ALL
	A	C001	1A	W1500	0077	20		28-41-11	ALL
	A	C001	1A	W1500	0078	20		28-41-11	ALL
	A	C001	1A	W1500	0079	20		28-41-11	ALL
	A	C001	1A	W1500	0080	20		28-41-11	ALL
	A	C003	1A	W1500	2503R	20		28-41-11	ALL
	A	C003	1A	W1500	2506R	20		28-41-11	ALL
	A	C003	1A	W1500	2509R	20		28-41-11	ALL
	A	C003	1A	W1500	2512R	20		28-41-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 2

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0005		MRTBL-7 (continued)					P028-00/ /		001, 003-099, 115-199
TB0005	A	M81714-1-DB3 (continued)					P028-00/ /		ALL
TB0005	B	M81714-1-DA1 (continued)					P028-00/ /		ALL
TB0005	C	M81714-1-DB1 (continued)					P028-00/ /		ALL
TB0005	P	M81714-2-BC1 (continued)					P28/ /		ALL
	A	C005	1A	W1500	2502R	20		28-41-11	ALL
	A	C005	1A	W1500	2505R	20		28-41-11	ALL
	A	C005	1A	W1500	2508R	20		28-41-11	ALL
	A	C005	1A	W1500	2511R	20		28-41-11	ALL
	A	C007	1A	W1500	0012	20		28-21-23	ALL
	A	C007	1A	W1500	0015	20		28-21-23	ALL
	A	C007	1A	W1500	0018	20		28-21-23	ALL
	A	C007	1A	W1500	0021	20		28-21-23	ALL
	A	C007	1A	W1500	0056	20		28-21-11	ALL
	A	C007	1A	W1500	0057	20		28-21-11	ALL
	P	D006	1A	W1500	0047	20		28-21-22	ALL
	P	D006	1A	W1500	0048	20		28-21-22	ALL
	P	D006	1A	W1500	0050	20		28-21-22	ALL
	P	D006	1A	W1500	0051	20		28-21-22	ALL
	C	F004	1A	W1500	0101	20		28-41-11	ALL
	C	F004	1A	W1500	2502Z			28-41-11	ALL
	C	F004	1A	W1500	2505Z			28-41-11	ALL
	C	F004	1A	W1500	2508Z			28-41-11	ALL
	C	F004	1A	W1500	2511Z			28-41-11	ALL
	P	F006	1A	W1500	0030	20		28-26-11	ALL
	P	F006	1A	W1500	0032	20		28-26-11	ALL
	P	F006	1A	W1500	0033	20		28-26-11	ALL
TB0012		TERMSTRIP					E001-01/ /		003-099
		1	E	W1310	0029	08		24-31-11	003-099
		1	E	W2382	0001	08		24-31-11	003-099
TB0013		AMY4100T-10U					P001-00/ /		001, 003-099, 115-199
TB0013	X	BACM15C3A					AP0001/ /		ALL
TB0013	X	BACM15C3A					P1/ /		115-199
TB0013	Y	BACM15C3B					AP0001/ /		001-099
TB0013	Y	BACM15C3B					P1/ /		115-199
TB0013	Z	BACM15C3C					AP0001/ /		001-099
TB0013	Z	BACM15C3C					P1/ /		115-199
	Z	27	BJ	W0001	0410	24		34-22-81	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 3

May 17/2006



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0013		AMY4100T-10U (continued)					P001-00/ /		001, 003-099, 115-199
TB0013	X	BACM15C3A (continued)					AP0001/ /		ALL
TB0013	X	BACM15C3A (continued)					P1/ /		115-199
TB0013	Y	BACM15C3B (continued)					AP0001/ /		001-099
TB0013	Y	BACM15C3B (continued)					P1/ /		115-199
TB0013	Z	BACM15C3C (continued)					AP0001/ /		001-099
TB0013	Z	BACM15C3C (continued)					P1/ /		115-199
	Z	27	BJ	W0001	0550	24		34-55-11	115-199
	Z	27	BJ	W0003	0070	24		34-22-81	001-099
	Z	27	BJ	W0003	0557	24		34-55-11	115-199
	Z	27	BJ	W2041	0026	24		34-22-18	ALL
	Z	27	BJ	W2321	0024	24		34-22-18	ALL
	Z	27	BJ	W2321	0025	24		34-22-18	ALL
	X	A001	BJ	W0001	0014	24		34-22-37	ALL
	X	A001	BJ	W0003	0189	24		34-22-37	ALL
	X	A002	BJ	W0001	4501G	22		77-21-11	ALL
	X	A002	BJ	W0003	4501G	22		77-21-11	ALL
	Y	A003	BJ	W0001	0045	22		34-32-11	ALL
	Y	A003	BJ	W0001	0047	22		34-32-11	ALL
	Y	A003	BJ	W0001	0074	24		31-31-31	115-199
	Y	A003	BJ	W0003	0035	22		34-32-11	ALL
	Y	A004	BJ	W0001	0043	22		34-32-11	ALL
	Y	A004	BJ	W0001	0049	22		34-32-11	ALL
	Y	A004	BJ	W0001	0076	24		31-31-31	115-199
	Y	A004	BJ	W0003	0037	22		34-32-11	ALL
	X	A005	BJ	W0001	0178	24		77-12-11	ALL
	X	A005	BJ	W0003	0567	24		77-12-11	ALL
	X	A006	BJ	W0001	2508R	24		77-12-11	001-099
	X	A006	BJ	W0003	2509R	24		77-12-11	001-099
	Y	A007	BJ	W0001	0063	22		33-16-11	ALL
	Y	A007	BJ	W2311	0014	22		31-41-11	ALL
	Y	A007	BJ	W2321	0029	24		34-22-15	ALL
	Y	A007	BJ	W2321	0035	24		34-22-14	ALL
	Y	A009	BJ	W0001	0600	24		31-31-61	001-099
	Y	A010	BJ	W0001	0601	24		31-31-61	001-099
	Y	A010	BJ	W0001	0681	22		34-61-16	115-199
	Y	A010	BJ	W0001	0703	22		34-61-16	115-199
	Y	A011	BJ	W2041	0025	24		34-22-18	ALL
	Y	A011	BJ	W2321	0026	24		34-22-18	ALL
	Y	A011	BJ	W2321	0027	24		34-22-18	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 4

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0013		AMY4100T-10U (continued)					P001-00/ /		001, 003-099, 115-199
TB0013	X	BACM15C3A (continued)					AP0001/ /		ALL
TB0013	X	BACM15C3A (continued)					P1/ /		115-199
TB0013	Y	BACM15C3B (continued)					AP0001/ /		001-099
TB0013	Y	BACM15C3B (continued)					P1/ /		115-199
TB0013	Z	BACM15C3C (continued)					AP0001/ /		001-099
TB0013	Z	BACM15C3C (continued)					P1/ /		115-199
	Y	A012	BJ	W0001	0173	22		33-14-21	ALL
	Y	A012	BJ	W0001	0174	22		33-14-21	ALL
	Y	A012	BJ	W0003	0257	22		33-14-21	ALL
	Y	A013	BJ	W0001	5046B	24		34-55-11	115-199
	Y	A013	BJ	W0001	5047B	24		34-55-11	115-199
	Y	A013	BJ	W0003	5048B	24		34-55-11	115-199
	X	A016	BJ	W0001	0490	22		34-22-36	ALL
	X	A016	BJ	W0003	0490	22		34-22-36	ALL
	Y	A017	BJ	W0001	0491	22		34-22-16	ALL
	Y	A017	BJ	W0001	0492	22		34-22-36	ALL
	Y	A017	BJ	W0003	0491	22		34-22-36	ALL
	Y	A017	BJ	W2331	0012	22		34-61-16	115-199
	Y	A018	BJ	W0001	0683	22		34-61-16	115-199
	Y	A018	BJ	W2331	0016	22		34-61-16	115-199
	X	A020	BJ	W0001	0163	22		34-12-62	ALL
	X	A020	BJ	W0003	0418	22		34-12-62	ALL
	Y	A026	BJ	W0001	5004R	24		31-31-42	001-099
	Y	A026	BJ	W0001	5004R	24		31-31-22	115-199
	Y	A026	BJ	W0001	5005R	24		22-14-11	ALL
	Y	A026	BJ	W0001	5007R	24		22-14-11	ALL
	Y	A026	BJ	W2041	5008R	24		22-14-11	ALL
	X	A029	BJ	W0001	0032	22		31-41-11	ALL
	X	A029	BJ	W2311	0001	22		31-41-11	ALL
	X	A030	BJ	W0001	0207	22		33-16-11	ALL
	X	A030	BJ	W2321	0038	24		34-22-16	ALL
	X	B001	BJ	W0001	0177	24		77-12-11	ALL
	X	B001	BJ	W0003	0565	24		77-12-11	ALL
	X	B002	BJ	W0001	4501W	22		77-21-11	ALL
	X	B002	BJ	W0003	4501W	22		77-21-11	ALL
	X	B005	BJ	W0001	2502B	24		77-12-11	115-199
	X	B005	BJ	W0003	2518B	24		77-12-11	115-199
	X	B006	BJ	W0001	2508B	24		77-12-11	001-099
	X	B006	BJ	W0003	2509B	24		77-12-11	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 5

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0013		AMY4100T-10U (continued)					P001-00/ /		001, 003-099, 115-199
TB0013	X	BACM15C3A (continued)					AP0001/ /		ALL
TB0013	X	BACM15C3A (continued)					P1/ /		115-199
TB0013	Y	BACM15C3B (continued)					AP0001/ /		001-099
TB0013	Y	BACM15C3B (continued)					P1/ /		115-199
TB0013	Z	BACM15C3C (continued)					AP0001/ /		001-099
TB0013	Z	BACM15C3C (continued)					P1/ /		115-199
	X	B030	BJ	W0001	0208	22		33-16-11	ALL
	X	B030	BJ	W2321	0039	24		34-22-16	ALL
	X	C001	BJ	W0001	2508B	24		77-12-11	115-199
	X	C001	BJ	W0003	2517B	24		77-12-11	115-199
	X	C002	BJ	W0001	4502G	22		77-21-11	ALL
	X	C002	BJ	W0003	4502G	22		77-21-11	ALL
	Y	C003	BJ	W0001	0044	22		34-32-11	ALL
	Y	C003	BJ	W0001	0048	22		34-32-11	ALL
	Y	C003	BJ	W0001	0075	24		31-31-31	115-199
	Y	C003	BJ	W0003	0036	22		34-32-11	ALL
	Y	C004	BJ	W0001	0202	22		31-51-21	ALL
	Y	C004	BJ	W0001	0203	22		31-51-21	ALL
	Y	C004	BJ	W0003	0215	22		31-51-21	ALL
	X	C005	BJ	W0001	2502R	24		77-12-11	115-199
	X	C005	BJ	W0003	2518R	24		77-12-11	115-199
	X	C006	BJ	W0001	2502R	24		77-12-11	001-099
	X	C006	BJ	W0003	2504R	24		77-12-11	001-099
	Y	C007	BJ	W0001	0006	22		33-16-11	ALL
	Y	C007	BJ	W0001	0461	22		33-16-11	ALL
	Y	C007	BJ	W2041	0015	22		33-16-11	ALL
	Y	C008	BJ	W0001	0059	22		33-16-21	ALL
	Y	C008	BJ	W0001	0462	22		33-16-21	ALL
	Y	C008	BJ	W2041	0016	22		33-16-21	ALL
	Y	C011	BJ	W0001	0057	22		33-16-21	115-199
	Y	C011	BJ	W0001	0058	22		33-16-21	115-199
	Y	C013	BJ	W0001	5046R	24		34-55-11	115-199
	Y	C013	BJ	W0001	5047R	24		34-55-11	115-199
	Y	C013	BJ	W0003	5048R	24		34-55-11	115-199
	Y	C014	BJ	W0001	0008	22		33-16-11	ALL
	Y	C014	BJ	W0001	0009	22		33-16-11	ALL
	Y	C014	BJ	W0001	0010	22		33-16-11	ALL
	X	C015	BJ	W0001	0319	22		33-16-61	ALL
	X	C015	BJ	W2041	0024	22		33-16-61	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 6

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0013		AMY4100T-10U (continued)					P001-00/ /		001, 003-099, 115-199
TB0013	X	BACM15C3A (continued)					AP0001/ /		ALL
TB0013	X	BACM15C3A (continued)					P1/ /		115-199
TB0013	Y	BACM15C3B (continued)					AP0001/ /		001-099
TB0013	Y	BACM15C3B (continued)					P1/ /		115-199
TB0013	Z	BACM15C3C (continued)					AP0001/ /		001-099
TB0013	Z	BACM15C3C (continued)					P1/ /		115-199
	X	C016	BJ	W2311	0004	24		31-41-19	ALL
	X	C016	BJ	W2315	0011	24		31-41-19	ALL
	Y	C017	BJ	W0003	0492	22		34-22-36	ALL
	Y	C017	BJ	W0003	0493	22		34-22-36	ALL
	Y	C017	BJ	W0003	0494	22		34-22-26	ALL
	Y	C017	BJ	W0003	0603	22		34-61-26	115-199
	Y	C026	BJ	W0001	5004B	24		31-31-42	001-099
	Y	C026	BJ	W0001	5004B	24		31-31-22	115-199
	Y	C026	BJ	W0001	5005B	24		22-14-11	ALL
	Y	C026	BJ	W0001	5007B	24		22-14-11	ALL
	Y	C026	BJ	W2041	5008B	24		22-14-11	ALL
	X	C030	BJ	W0001	0209	22		33-16-11	115-199
	X	C030	BJ	W2321	0036	24		34-22-16	115-199
	X	D001	BJ	W0001	2508R	24		77-12-11	115-199
	X	D001	BJ	W0003	2517R	24		77-12-11	115-199
	X	D002	BJ	W0001	4502W	22		77-21-11	ALL
	X	D002	BJ	W0003	4502W	22		77-21-11	ALL
	X	D006	BJ	W0001	2502B	24		77-12-11	001-099
	X	D006	BJ	W0003	2504B	24		77-12-11	001-099
	X	D015	BJ	W2311	0005	24		31-41-19	ALL
	X	D015	BJ	W2315	0012	24		31-41-19	ALL
	X	D016	BJ	W2311	0006	24		31-41-19	ALL
	X	D016	BJ	W2315	0013	24		31-41-19	ALL
	X	D029	BJ	W0001	0209	22		33-16-11	001-099
	X	D029	BJ	W2321	0036	24		34-22-16	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 7

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0014		AMY4100T-10U					P001-00/ /		001, 003-099, 115-199
TB0014	A	YHLZD-29					P1-1/ /		ALL
TB0014	A	YHLZD-33					P1-1/ /		ALL
TB0014	X	BACM15C3A					AP0001/ /		001-099
TB0014	X	BACM15C3A					P1/ /		115-199
TB0014	Y	BACM15C3B					AP0001/ /		001-099
TB0014	Y	BACM15C3B					P1/ /		115-199
TB0014	Z	BACM15C3C					AP0001/ /		ALL
	Z	7	BJ	W0001	0054	22		32-42-12	ALL
	Z	7	BJ	W0001	0111	22		32-42-12	ALL
	Z	7	BJ	W0001	0112	22		32-42-12	ALL
	Z	7	BJ	W0001	0126	22		32-42-12	ALL
	Z	7	BJ	W0001	0127	22		32-42-12	ALL
	Z	7	BJ	W0001	0128	22		32-42-12	ALL
	Z	8	BJ	W0001	0055	22		32-42-12	ALL
	Z	8	BJ	W0001	0114	22		32-42-12	ALL
	Z	8	BJ	W0001	0115	22		32-42-12	ALL
	Z	8	BJ	W0001	0130	22		32-42-12	ALL
	Z	8	BJ	W0001	0131	22		32-42-12	ALL
	Z	8	BJ	W0001	0132	22		32-42-12	ALL
	Z	8	BJ	W0001	0135	22		32-42-12	ALL
	X	A001	BJ	W0001	0188	24		34-22-15	ALL
	X	A001	BJ	W2321	0005	24		34-22-15	ALL
	X	A002	BJ	W0001	0016	24		34-22-16	ALL
	X	A002	BJ	W2321	0014	24		34-22-16	ALL
	Y	A009	BJ	W0001	0080	24		34-13-21	ALL
	Y	A009	BJ	W0001	0082	24		34-13-21	ALL
	Y	A009	BJ	W0003	0084	24		34-13-21	ALL
	Y	A010	BJ	W0001	0215	22		31-51-42	ALL
	Y	A010	BJ	W0001	0216	22		31-51-42	ALL
	Y	A010	BJ	W0001	0217	22		31-51-42	ALL
	Y	A011	BJ	W0001	0002	24		34-21-11	ALL
	Y	A011	BJ	W0001	0021	22		34-12-61	ALL
	Y	A011	BJ	W0001	0110	22		34-16-11	ALL
	Y	A011	BJ	W0001	0242	22		34-12-61	ALL
	Y	A013	BJ	W0001	5015R	24		34-13-11	ALL
	Y	A013	BJ	W0001	5017R	24		34-13-11	ALL
	Y	A013	BJ	W0001	5021R	24		34-13-11	ALL
	Y	A014	BJ	W0001	5016R	24		34-13-11	ALL
	Y	A014	BJ	W0001	5018R	24		34-13-11	ALL
	Y	A014	BJ	W0001	5022R	24		34-13-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 8

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0014		AMY4100T-10U (continued)					P001-00/ /		001, 003-099, 115-199
TB0014	A	YHLZD-29 (continued)					P1-1/ /		ALL
TB0014	A	YHLZD-33 (continued)					P1-1/ /		ALL
TB0014	X	BACM15C3A (continued)					AP0001/ /		001-099
TB0014	X	BACM15C3A (continued)					P1/ /		115-199
TB0014	Y	BACM15C3B (continued)					AP0001/ /		001-099
TB0014	Y	BACM15C3B (continued)					P1/ /		115-199
TB0014	Z	BACM15C3C (continued)					AP0001/ /		ALL
	Y	A015	BJ	W0001	5035R	24		34-22-81	001-099
	Y	A015	BJ	W0001	5041R	24		34-22-81	001-099
	Y	A015	BJ	W0003	5010R	24		34-22-91	001-099
	Y	A016	BJ	W0001	5036R	24		34-22-81	001-099
	Y	A016	BJ	W0001	5036R	24		34-22-83	115-199
	Y	A016	BJ	W0001	5042R	24		34-22-81	001-099
	Y	A016	BJ	W0001	5042R	24		34-22-83	115-199
	Y	A016	BJ	W0003	5007R	24		34-22-91	001-099
	Y	A016	BJ	W0003	5007R	24		34-22-93	115-199
	Y	A017	BJ	W0001	5037R	24		34-22-81	001-099
	Y	A017	BJ	W0001	5037R	24		34-22-83	115-199
	Y	A017	BJ	W0001	5038R	24		34-22-81	001-099
	Y	A017	BJ	W0001	5038R	24		34-22-83	115-199
	Y	A017	BJ	W0001	5055R	24		34-22-28	115-199
	Y	A017	BJ	W0003	5008R	24		34-22-91	001-099
	Y	A017	BJ	W0003	5008R	24		34-22-93	115-199
	Y	A018	BJ	W0001	5039R	24		34-22-81	001-099
	Y	A018	BJ	W0001	5039R	24		34-22-83	115-199
	Y	A018	BJ	W0001	5040R	24		34-22-81	001-099
	Y	A018	BJ	W0001	5040R	24		34-22-83	115-199
	Y	A018	BJ	W0003	5009R	24		34-22-91	001-099
	Y	A018	BJ	W0003	5009R	24		34-22-93	115-199
	Y	A018	BJ	W0003	5015R	24		34-22-92	ALL
	Y	A020	BJ	W0001	2507Z			34-22-15	ALL
	Y	A020	BJ	W2321	2510Z			34-22-15	ALL
	Y	A020	BJ	W2321	2511Z			34-22-14	ALL
	Y	A021	BJ	W0001	2507R	24		34-22-15	ALL
	Y	A021	BJ	W2321	2510R	24		34-22-15	ALL
	Y	A021	BJ	W2321	2511R	24		34-22-14	ALL
	A	A24	2	W0001	0670	22		32-42-12	ALL
	X	B001	BJ	W0001	0189	24		34-22-15	ALL
	X	B001	BJ	W2321	0006	24		34-22-15	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 9

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0014		AMY4100T-10U (continued)					P001-00/ /		001, 003-099, 115-199
TB0014	A	YHLZD-29 (continued)					P1-1/ /		ALL
TB0014	A	YHLZD-33 (continued)					P1-1/ /		ALL
TB0014	X	BACM15C3A (continued)					AP0001/ /		001-099
TB0014	X	BACM15C3A (continued)					P1/ /		115-199
TB0014	Y	BACM15C3B (continued)					AP0001/ /		001-099
TB0014	Y	BACM15C3B (continued)					P1/ /		115-199
TB0014	Z	BACM15C3C (continued)					AP0001/ /		ALL
	X	B002	BJ	W0001	0419	24		34-22-91	001-099
	X	B002	BJ	W0001	0419	24		34-22-93	115-199
	X	B002	BJ	W0003	0027	24		34-22-91	001-099
	X	B002	BJ	W0003	0027	24		34-22-93	115-199
	X	C001	BJ	W0001	0190	24		34-22-15	ALL
	X	C001	BJ	W2321	0007	24		34-22-15	ALL
	Y	C004	BJ	W0001	0401	24		34-13-11	ALL
	Y	C004	BJ	W0001	0402	24		34-13-11	ALL
	Y	C004	BJ	W0001	0403	24		34-13-11	ALL
	X	C005	BJ	W0001	0244	24		31-41-19	ALL
	X	C005	BJ	W2315	0009	24		31-41-19	ALL
	Y	C009	BJ	W0001	0193	24		34-22-17	ALL
	Y	C009	BJ	W0001	0199	24		34-22-17	ALL
	Y	C009	BJ	W2331	0010	24		34-61-11	001-099
	Y	C010	BJ	W0001	0506	24		34-22-83	115-199
	Y	C010	BJ	W0001	0511	24		34-22-83	115-199
	Y	C010	BJ	W0003	0506	24		34-22-93	115-199
	Y	C013	BJ	W0001	5015B	24		34-13-11	ALL
	Y	C013	BJ	W0001	5017B	24		34-13-11	ALL
	Y	C013	BJ	W0001	5021B	24		34-13-11	ALL
	Y	C014	BJ	W0001	5016B	24		34-13-11	ALL
	Y	C014	BJ	W0001	5018B	24		34-13-11	ALL
	Y	C014	BJ	W0001	5022B	24		34-13-11	ALL
	Y	C015	BJ	W0001	5035B	24		34-22-81	001-099
	Y	C015	BJ	W0001	5041B	24		34-22-81	001-099
	Y	C015	BJ	W0003	5010B	24		34-22-91	001-099
	Y	C016	BJ	W0001	5036B	24		34-22-81	001-099
	Y	C016	BJ	W0001	5036B	24		34-22-83	115-199
	Y	C016	BJ	W0001	5042B	24		34-22-81	001-099
	Y	C016	BJ	W0001	5042B	24		34-22-83	115-199
	Y	C016	BJ	W0003	5007B	24		34-22-91	001-099
	Y	C016	BJ	W0003	5007B	24		34-22-93	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 10

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0014		AMY4100T-10U (continued)					P001-00/ /		001, 003-099, 115-199
TB0014	A	YHLZD-29 (continued)					P1-1/ /		ALL
TB0014	A	YHLZD-33 (continued)					P1-1/ /		ALL
TB0014	X	BACM15C3A (continued)					AP0001/ /		001-099
TB0014	X	BACM15C3A (continued)					P1/ /		115-199
TB0014	Y	BACM15C3B (continued)					AP0001/ /		001-099
TB0014	Y	BACM15C3B (continued)					P1/ /		115-199
TB0014	Z	BACM15C3C (continued)					AP0001/ /		ALL
	Y	C017	BJ	W0001	5037B	24		34-22-81	001-099
	Y	C017	BJ	W0001	5037B	24		34-22-83	115-199
	Y	C017	BJ	W0001	5038B	24		34-22-81	001-099
	Y	C017	BJ	W0001	5038B	24		34-22-83	115-199
	Y	C017	BJ	W0001	5055B	24		34-22-28	115-199
	Y	C017	BJ	W0003	5008B	24		34-22-91	001-099
	Y	C017	BJ	W0003	5008B	24		34-22-93	115-199
	Y	C018	BJ	W0001	5039B	24		34-22-81	001-099
	Y	C018	BJ	W0001	5039B	24		34-22-83	115-199
	Y	C018	BJ	W0001	5040B	24		34-22-81	001-099
	Y	C018	BJ	W0001	5040B	24		34-22-83	115-199
	Y	C018	BJ	W0003	5009B	24		34-22-91	001-099
	Y	C018	BJ	W0003	5009B	24		34-22-93	115-199
	Y	C018	BJ	W0003	5015B	24		34-22-92	ALL
	Y	C021	BJ	W0001	2507B	24		34-22-15	ALL
	Y	C021	BJ	W2321	2510B	24		34-22-15	ALL
	Y	C021	BJ	W2321	2511B	24		34-22-14	ALL
	A	C24	2	W0001	0669	22		32-42-12	ALL
	X	D002	BJ	W0001	0017	24		34-22-16	ALL
	X	D002	BJ	W2321	0015	24		34-22-16	ALL
	X	D005	BJ	W0001	0245	24		31-41-19	ALL
	X	D005	BJ	W2315	0010	24		31-41-19	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 11

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0015		AMY4100T-10U					P003-00/ /		001, 003-099, 115-199
TB0015	A	YHLZD-33					AP0301/ /		001-099
TB0015	A	YHLZD-29					P3/ /		115-199
TB0015	A	YHLZD-33					P3/ /		115-199
TB0015	X	BACM15C3A					P3 PNL/ /		001-099
TB0015	X	BACM15C3A					P3/ /		115-199
TB0015	Y	BACM15C3B					P3 PNL/ /		001-099
TB0015	Y	BACM15C3B					P3/ /		115-199
TB0015	Z	BACM15C3C					P3 PNL/ /		001-099
TB0015	Z	BACM15C3C					P3/ /		115-199
	Z	13	BJ	W0001	0321	22		33-16-51	ALL
	Z	13	BJ	W0001	0324	22		33-16-51	ALL
	Z	13	BJ	W0001	0329	22		33-16-51	ALL
	Z	13	BJ	W2041	0023	22		33-16-51	ALL
	Z	14	BJ	W0001	0062	22		33-16-41	ALL
	Z	14	BJ	W0003	0099	22		33-16-41	ALL
	Z	14	BJ	W0003	0145	22		33-16-41	ALL
	Z	14	BJ	W0003	0461	22		33-16-41	ALL
	Z	14	BJ	W2051	0018	22		33-16-41	ALL
	Z	14	BJ	W2051	0020	22		33-16-41	ALL
	Z	3	BJ	W0001	0370	22		33-16-51	ALL
	Z	3	BJ	W0003	0082	22		33-16-11	001-099
	Z	3	BJ	W0003	0082	22		33-16-51	115-199
	Z	3	BJ	W0003	0326	22		33-16-51	ALL
	Z	3	BJ	W0003	0330	22		33-16-51	ALL
	Z	3	BJ	W0003	0346	22		33-16-51	115-199
	Z	3	BJ	W0003	0370	22		33-16-51	ALL
	Z	3	BJ	W0003	0383	22		33-16-51	ALL
	Z	4	BJ	W0001	0372	22		33-16-51	ALL
	Z	4	BJ	W0003	0331	22		33-16-51	ALL
	Z	4	BJ	W0003	0347	22		33-16-51	115-199
	Z	4	BJ	W0003	0384	22		33-16-51	ALL
	Y	A005	BJ	W0001	0448	22		31-41-14	ALL
	Y	A005	BJ	W0003	0445	22		31-41-14	ALL
	Y	A005	BJ	W0003	0448	22		31-41-14	ALL
	Y	A006	BJ	W0001	5048B	24		34-55-21	115-199
	Y	A006	BJ	W0003	5046B	24		34-55-21	115-199
	Y	A006	BJ	W0003	5047B	24		34-55-21	115-199
	Y	A007	BJ	W0003	0167	22		33-16-41	ALL
	Y	A007	BJ	W2313	0014	22		31-41-21	ALL
	Y	A007	BJ	W2323	0030	24		34-22-25	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 12

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0015		AMY4100T-10U (continued)					P003-00/ /		001, 003-099, 115-199
TB0015	A	YHLZD-33 (continued)					AP0301/ /		001-099
TB0015	A	YHLZD-29 (continued)					P3/ /		115-199
TB0015	A	YHLZD-33 (continued)					P3/ /		115-199
TB0015	X	BACM15C3A (continued)					P3 PNL/ /		001-099
TB0015	X	BACM15C3A (continued)					P3/ /		115-199
TB0015	Y	BACM15C3B (continued)					P3 PNL/ /		001-099
TB0015	Y	BACM15C3B (continued)					P3/ /		115-199
TB0015	Z	BACM15C3C (continued)					P3 PNL/ /		001-099
TB0015	Z	BACM15C3C (continued)					P3/ /		115-199
	Y	A007	BJ	W2323	0035	24		34-22-24	ALL
	Y	A009	BJ	W0003	0601	22		34-61-26	115-199
	Y	A009	BJ	W0003	0704	22		34-61-26	115-199
	Y	A010	BJ	W0003	0700	22		34-61-25	115-199
	Y	A010	BJ	W0003	0703	22		34-61-25	115-199
	Y	A012	BJ	W0003	0146	22		33-16-41	ALL
	Y	A012	BJ	W2051	0017	22		33-16-41	ALL
	Y	A015	BJ	W0001	0320	22		33-16-51	ALL
	Y	A015	BJ	W0001	0322	22		33-16-51	ALL
	Y	A015	BJ	W0003	0373	22		33-16-51	115-199
	Y	A016	BJ	W0001	0425	24		33-14-11	ALL
	Y	A016	BJ	W0003	0107	24		33-14-11	ALL
	Y	A016	BJ	W0003	0108	24		33-14-11	ALL
	Y	A017	BJ	W0001	0373	22		33-16-51	115-199
	Y	A017	BJ	W0003	0374	22		33-16-51	115-199
	X	A021	BJ	W0003	0603	22		34-61-26	115-199
	X	A021	BJ	W2333	0012	22		34-61-26	115-199
	X	A022	BJ	W0001	0309	24		34-22-83	115-199
	X	A022	BJ	W0003	0309	20		34-22-83	115-199
	Y	A023	BJ	W0003	0093	22		33-16-61	ALL
	Y	A023	BJ	W0003	0098	22		33-16-61	ALL
	Y	A023	BJ	W0003	0227	22		33-16-61	ALL
	Y	A024	BJ	W0003	0091	22		33-16-21	ALL
	Y	A024	BJ	W0003	0092	22		33-16-21	ALL
	X	B021	BJ	W0003	0500	24		34-22-27	001-099
	X	B021	BJ	W0003	0500	24		34-61-26	115-199
	X	B021	BJ	W2333	0010	24		34-61-21	001-099
	X	B021	BJ	W2333	0010	24		34-61-26	115-199
	X	B022	BJ	W0001	0371	24		32-41-11	ALL
	X	B022	BJ	W0003	0371	24		32-41-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 13

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0015		AMY4100T-10U (continued)					P003-00/ /		001, 003-099, 115-199
TB0015	A	YHLZD-33 (continued)					AP0301/ /		001-099
TB0015	A	YHLZD-29 (continued)					P3/ /		115-199
TB0015	A	YHLZD-33 (continued)					P3/ /		115-199
TB0015	X	BACM15C3A (continued)					P3 PNL/ /		001-099
TB0015	X	BACM15C3A (continued)					P3/ /		115-199
TB0015	Y	BACM15C3B (continued)					P3 PNL/ /		001-099
TB0015	Y	BACM15C3B (continued)					P3/ /		115-199
TB0015	Z	BACM15C3C (continued)					P3 PNL/ /		001-099
TB0015	Z	BACM15C3C (continued)					P3/ /		115-199
	Y	C005	BJ	W0001	0442	22		31-41-14	ALL
	Y	C005	BJ	W0003	0442	22		31-41-14	ALL
	Y	C005	BJ	W0003	0443	22		31-41-14	ALL
	Y	C006	BJ	W0001	5048R	24		34-55-21	115-199
	Y	C006	BJ	W0003	5046R	24		34-55-21	115-199
	Y	C006	BJ	W0003	5047R	24		34-55-21	115-199
	Y	C007	BJ	W0003	0057	24		33-42-12	001-099
	Y	C007	BJ	W0003	0057	20		33-42-12	115-199
	Y	C007	BJ	W0003	0275	24		33-42-12	001-099
	Y	C007	BJ	W0003	0275	22		33-42-12	115-199
	Y	C007	BJ	W0003	0276	24		32-61-12	001-099
	Y	C007	BJ	W0003	0276	22		32-61-12	115-199
	Y	C012	BJ	W0003	0144	22		33-16-41	ALL
	Y	C012	BJ	W2051	0019	22		33-16-41	ALL
	Y	C015	BJ	W0001	0077	22		33-16-51	ALL
	Y	C015	BJ	W0001	0328	22		33-16-51	ALL
	Y	C015	BJ	W0003	0226	22		33-16-51	ALL
	X	C021	BJ	W0001	1002	20		29-21-32	ALL
	X	C021	BJ	W0003	1002	20		29-21-32	ALL
	X	C022	BJ	W0001	0512	20		29-21-32	ALL
	X	C022	BJ	W0003	0512	20		29-21-32	ALL
	Y	C023	BJ	W0003	0080	22		33-16-11	ALL
	Y	C023	BJ	W0003	0083	22		33-16-11	ALL
	Y	C024	BJ	W0001	0334	22		33-16-61	ALL
	Y	C024	BJ	W0003	0318	22		33-16-61	ALL
	Y	C024	BJ	W0003	0338	22		33-16-61	ALL
	X	D021	BJ	W0001	0161	22		34-61-25	001-099
	X	D021	BJ	W0003	0277	22		34-61-25	001-099
	X	D022	BJ	W0001	0061	22		33-16-41	ALL
	X	D022	BJ	W0003	0272	22		33-16-41	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 14

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0015		AMY4100T-10U (continued)					P003-00/ /		001, 003-099, 115-199
TB0015	A	YHLZD-33 (continued)					AP0301/ /		001-099
TB0015	A	YHLZD-29 (continued)					P3/ /		115-199
TB0015	A	YHLZD-33 (continued)					P3/ /		115-199
TB0015	X	BACM15C3A (continued)					P3 PNL/ /		001-099
TB0015	X	BACM15C3A (continued)					P3/ /		115-199
TB0015	Y	BACM15C3B (continued)					P3 PNL/ /		001-099
TB0015	Y	BACM15C3B (continued)					P3/ /		115-199
TB0015	Z	BACM15C3C (continued)					P3 PNL/ /		001-099
TB0015	Z	BACM15C3C (continued)					P3/ /		115-199
	X	DED		W0001	1002Z			29-21-32	ALL
	X	DED		W0003	1002Z			29-21-32	ALL
TB0016		AMY4100T-10U					P003-00/ /		001, 003-099, 115-199
TB0016	X	BACM15C3A					P3 PNL/ /		001-099
TB0016	X	BACM15C3A					P3/ /		115-199
TB0016	Y	BACM15C3B					P3 PNL/ /		001-099
TB0016	Y	BACM15C3B					P3/ /		115-199
TB0016	Z	BACM15C3C					P3 PNL/ /		001-099
TB0016	Z	BACM15C3C					P3/ /		115-199
	Z	11	BJ	W0001	0409	24		34-22-81	001-099
	Z	11	BJ	W0001	0557	24		34-55-21	115-199
	Z	11	BJ	W0003	0069	24		34-22-81	001-099
	Z	11	BJ	W0003	0550	24		34-55-21	115-199
	Z	11	BJ	W2051	0003	24		34-22-28	ALL
	Z	11	BJ	W2323	0025	24		34-22-28	ALL
	Z	11	BJ	W2323	0026	24		34-22-28	ALL
	Z	29	BJ	W0003	2501R	24		34-22-25	ALL
	Z	29	BJ	W2311	2510R	24		31-41-19	ALL
	Z	29	BJ	W2313	2510R	24		31-41-19	ALL
	Z	29	BJ	W2323	2510R	24		34-22-24	ALL
	Z	29	BJ	W2323	2520R	24		34-22-25	ALL
	Z	30	BJ	W0003	2501B	24		34-22-25	ALL
	Z	30	BJ	W2311	2510B	24		31-41-19	ALL
	Z	30	BJ	W2313	2510B	24		31-41-19	ALL
	Z	30	BJ	W2323	2510B	24		34-22-24	ALL
	Z	30	BJ	W2323	2520B	24		34-22-25	ALL
	Z	31	BJ	W0003	2501Z			34-22-25	ALL
	Z	31	BJ	W2311	2510Z			31-41-19	ALL
	Z	31	BJ	W2313	2510Z			31-41-19	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 15

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0016		AMY4100T-10U (continued)					P003-00/ /		001, 003-099, 115-199
TB0016	X	BACM15C3A (continued)					P3 PNL/ /		001-099
TB0016	X	BACM15C3A (continued)					P3/ /		115-199
TB0016	Y	BACM15C3B (continued)					P3 PNL/ /		001-099
TB0016	Y	BACM15C3B (continued)					P3/ /		115-199
TB0016	Z	BACM15C3C (continued)					P3 PNL/ /		001-099
TB0016	Z	BACM15C3C (continued)					P3/ /		115-199
	Z	31	BJ	W2323	2510Z			34-22-24	ALL
	Z	31	BJ	W2323	2520Z			34-22-25	ALL
	X	A001	BJ	W2313	0004	24		31-41-19	ALL
	X	A001	BJ	W2315	0006	24		31-41-19	ALL
	X	A002	BJ	W0003	0266	24		34-22-26	ALL
	X	A002	BJ	W2323	0007	24		34-22-26	ALL
	X	A005	BJ	W0003	0060	24		34-22-25	ALL
	X	A005	BJ	W2323	0020	24		34-22-25	ALL
	X	A006	BJ	W2311	0010	24		31-41-19	ALL
	X	A006	BJ	W2313	0010	24		31-41-19	ALL
	Y	A007	BJ	W2051	0004	24		34-22-28	ALL
	Y	A007	BJ	W2323	0023	24		34-22-28	ALL
	Y	A007	BJ	W2323	0024	24		34-22-28	ALL
	Y	A008	BJ	W0003	0005	24		34-13-21	ALL
	Y	A008	BJ	W0003	0009	24		34-13-21	ALL
	Y	A008	BJ	W0003	0010	24		34-13-21	ALL
	Y	A013	BJ	W0001	5034R	24		34-22-81	001-099
	Y	A013	BJ	W0001	5034R	24		34-22-83	115-199
	Y	A013	BJ	W0003	5013R	24		34-22-91	001-099
	Y	A013	BJ	W0003	5013R	24		34-22-93	115-199
	Y	A013	BJ	W0003	5014R	24		34-22-91	001-099
	Y	A013	BJ	W0003	5014R	24		34-22-93	115-199
	Y	A014	BJ	W0001	5033R	24		34-22-81	001-099
	Y	A014	BJ	W0003	5011R	24		34-22-91	001-099
	Y	A014	BJ	W0003	5012R	24		34-22-91	001-099
	Y	A015	BJ	W0003	5016B	24		22-14-21	ALL
	Y	A015	BJ	W0003	5017B	24		22-14-21	ALL
	Y	A015	BJ	W2051	5004B	24		22-14-21	ALL
	Y	A016	BJ	W0003	0001	24		34-12-62	ALL
	Y	A016	BJ	W0003	0002	24		34-12-62	ALL
	Y	A016	BJ	W0003	0004	24		34-12-62	ALL
	Y	A018	BJ	W0003	0233	22		34-25-12	002
	Y	A018	BJ	W0003	0234	22		34-25-12	002

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 16

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0016		AMY4100T-10U (continued)					P003-00/ /		001, 003-099, 115-199
TB0016	X	BACM15C3A (continued)					P3 PNL/ /		001-099
TB0016	X	BACM15C3A (continued)					P3/ /		115-199
TB0016	Y	BACM15C3B (continued)					P3 PNL/ /		001-099
TB0016	Y	BACM15C3B (continued)					P3/ /		115-199
TB0016	Z	BACM15C3C (continued)					P3 PNL/ /		001-099
TB0016	Z	BACM15C3C (continued)					P3/ /		115-199
	Y	A018	BJ	W0003	0298	22		34-25-12	002
	Y	A019	BJ	W0003	5001R	24		34-13-21	ALL
	Y	A019	BJ	W0003	5002R	24		34-13-21	ALL
	Y	A019	BJ	W0003	5003R	24		34-13-21	ALL
	Y	A020	BJ	W0003	5004R	24		34-13-21	ALL
	Y	A020	BJ	W0003	5005R	24		34-13-21	ALL
	Y	A020	BJ	W0003	5006R	24		34-13-21	ALL
	X	A021	BJ	W0001	0433	24		27-58-11	001-099
	X	A021	BJ	W0001	0433	22		27-58-11	115-199
	X	A021	BJ	W0003	0056	24		27-58-11	001-099
	X	A021	BJ	W0003	0056	22		27-58-11	115-199
	Y	A023	BJ	W0001	0509	24		34-22-83	115-199
	Y	A023	BJ	W0003	0509	24		34-22-93	115-199
	Y	A023	BJ	W0003	0511	24		34-22-93	115-199
	Y	A024	BJ	W0001	5044R	24		34-22-83	115-199
	Y	A024	BJ	W0003	5044R	24		34-22-93	115-199
	Y	A024	BJ	W0003	5045R	24		34-22-93	115-199
	Y	A024	BJ	W0003	5055R	24		34-22-18	115-199
	Y	A025	BJ	W0001	5050R	24		34-22-81	001-099
	Y	A025	BJ	W0003	5050R	24		34-22-91	001-099
	Y	A025	BJ	W0003	5051R	24		34-22-91	001-099
	X	B001	BJ	W2313	0005	24		31-41-19	ALL
	X	B001	BJ	W2315	0007	24		31-41-19	ALL
	X	B002	BJ	W0003	0267	24		34-22-26	ALL
	X	B002	BJ	W2323	0008	24		34-22-26	ALL
	X	B005	BJ	W0003	0061	24		34-22-25	ALL
	X	B005	BJ	W2323	0021	24		34-22-25	ALL
	X	B006	BJ	W2311	0009	24		31-41-19	ALL
	X	B006	BJ	W2313	0009	24		31-41-19	ALL
	X	B021	BJ	W0001	0434	24		27-58-11	001-099
	X	B021	BJ	W0001	0434	22		27-58-11	115-199
	X	B021	BJ	W0003	0059	24		27-58-11	001-099
	X	B021	BJ	W0003	0059	22		27-58-11	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 17

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0016		AMY4100T-10U (continued)					P003-00/ /		001, 003-099, 115-199
TB0016	X	BACM15C3A (continued)					P3 PNL/ /		001-099
TB0016	X	BACM15C3A (continued)					P3/ /		115-199
TB0016	Y	BACM15C3B (continued)					P3 PNL/ /		001-099
TB0016	Y	BACM15C3B (continued)					P3/ /		115-199
TB0016	Z	BACM15C3C (continued)					P3 PNL/ /		001-099
TB0016	Z	BACM15C3C (continued)					P3/ /		115-199
	X	C001	BJ	W2313	0006	24		31-41-19	ALL
	X	C001	BJ	W2315	0008	24		31-41-19	ALL
	X	C005	BJ	W0003	0062	24		34-22-25	ALL
	X	C005	BJ	W2323	0022	24		34-22-25	ALL
	X	C006	BJ	W2311	0008	24		31-41-19	ALL
	X	C006	BJ	W2313	0008	24		31-41-19	ALL
	Y	C007	BJ	W0001	0405	24		34-22-81	001-099
	Y	C007	BJ	W0001	0405	24		34-22-83	115-199
	Y	C007	BJ	W0003	0068	24		34-22-81	001-099
	Y	C007	BJ	W0003	0068	24		34-22-83	115-199
	Y	C007	BJ	W0003	0225	24		34-22-81	001-099
	Y	C007	BJ	W0003	0225	24		34-22-83	115-199
	Y	C008	BJ	W0001	0213	24		34-22-37	ALL
	Y	C008	BJ	W0003	0058	24		34-22-27	ALL
	X	C009	BJ	W0001	0041	24		34-21-31	ALL
	X	C009	BJ	W0003	0041	24		34-21-31	ALL
	X	C010	BJ	W0001	0214	24		34-22-37	ALL
	X	C010	BJ	W0003	0164	24		34-22-37	ALL
	Y	C013	BJ	W0001	5034B	24		34-22-81	001-099
	Y	C013	BJ	W0001	5034B	24		34-22-83	115-199
	Y	C013	BJ	W0003	5013B	24		34-22-91	001-099
	Y	C013	BJ	W0003	5013B	24		34-22-93	115-199
	Y	C013	BJ	W0003	5014B	24		34-22-91	001-099
	Y	C013	BJ	W0003	5014B	24		34-22-93	115-199
	Y	C014	BJ	W0001	5033B	24		34-22-81	001-099
	Y	C014	BJ	W0003	5011B	24		34-22-91	001-099
	Y	C014	BJ	W0003	5012B	24		34-22-91	001-099
	Y	C015	BJ	W0003	5016R	24		22-14-21	ALL
	Y	C015	BJ	W0003	5017R	24		22-14-21	ALL
	Y	C015	BJ	W2051	5004R	24		22-14-21	ALL
	Y	C016	BJ	W0001	0332	22		22-14-11	ALL
	Y	C016	BJ	W0003	0324	22		22-14-21	ALL
	Y	C016	BJ	W0003	0332	22		22-14-21	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 18

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0016		AMY4100T-10U (continued)					P003-00/ /		001, 003-099, 115-199
TB0016	X	BACM15C3A (continued)					P3 PNL/ /		001-099
TB0016	X	BACM15C3A (continued)					P3/ /		115-199
TB0016	Y	BACM15C3B (continued)					P3 PNL/ /		001-099
TB0016	Y	BACM15C3B (continued)					P3/ /		115-199
TB0016	Z	BACM15C3C (continued)					P3 PNL/ /		001-099
TB0016	Z	BACM15C3C (continued)					P3/ /		115-199
	Y	C019	BJ	W0003	5001B	24		34-13-21	ALL
	Y	C019	BJ	W0003	5002B	24		34-13-21	ALL
	Y	C019	BJ	W0003	5003B	24		34-13-21	ALL
	Y	C020	BJ	W0003	5004B	24		34-13-21	ALL
	Y	C020	BJ	W0003	5005B	24		34-13-21	ALL
	Y	C020	BJ	W0003	5006B	24		34-13-21	ALL
	Y	C023	BJ	W0003	0024	24		34-25-11	001, 003-099, 115-199
	Y	C023	BJ	W0003	0053	24		34-22-27	ALL
	Y	C023	BJ	W0003	0298	22		34-25-12	002
	Y	C023	BJ	W0003	0395	22		34-22-28	002
	Y	C023	BJ	W0003	0564	24		34-22-37	ALL
	Y	C024	BJ	W0001	5044B	24		34-22-83	115-199
	Y	C024	BJ	W0003	5044B	24		34-22-93	115-199
	Y	C024	BJ	W0003	5045B	24		34-22-93	115-199
	Y	C024	BJ	W0003	5055B	24		34-22-18	115-199
	Y	C025	BJ	W0001	5050B	24		34-22-81	001-099
	Y	C025	BJ	W0003	5050B	24		34-22-91	001-099
	Y	C025	BJ	W0003	5051B	24		34-22-91	001-099
	X	D001	BJ	W2313	0001	22		31-41-21	ALL
	X	D001	BJ	W2366	0016	22		31-41-21	ALL
	X	D002	BJ	W0001	0101	20		32-42-12	115-199
	X	D002	BJ	W0003	0483	22		32-42-12	115-199
	X	D006	BJ	W2311	0007	24		31-41-19	ALL
	X	D006	BJ	W2313	0007	24		31-41-19	ALL
I TB0024		BACT44A0700U					P006-01/ /		001, 003-099, 115-199
TB0024	X	BACM15C3A					P006-00/ /		ALL
TB0024	Y	BACM15C3B					P006-00/ /		ALL
TB0024	Z	BACM15C3C					P006-00/ /		ALL
	Z	5	BJ	W0074	0718	24		24-51-72	ALL
	Z	5	BJ	W0074	0719	22		24-51-72	ALL
	Z	5	BJ	W0074	0720	22		24-51-72	ALL
	Y	A001	BJ	W0074	0010	22		24-31-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 19

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
I TB0024		BACT44A0700U (continued)					P006-01/ /		001, 003-099, 115-199
TB0024	X	BACM15C3A (continued)					P006-00/ /		ALL
TB0024	Y	BACM15C3B (continued)					P006-00/ /		ALL
TB0024	Z	BACM15C3C (continued)					P006-00/ /		ALL
	Y	A001	BJ	W0074	0068	22		24-31-11	001-002, 115-199
	Y	A001	BJ	W0074	0306	22		24-31-11	ALL
	Y	A001	BJ	W0074	0406	22		24-31-11	ALL
	Y	A002	BJ	W0074	0225	22		24-34-11	ALL
	Y	A002	BJ	W0074	0304	22		24-33-11	ALL
	Y	A002	BJ	W0074	0409	22		24-34-11	ALL
	Y	A007	BJ	W0074	0046	22		24-34-11	ALL
	Y	A007	BJ	W0074	0047	22		24-34-11	ALL
	Y	A007	BJ	W0074	0048	22		24-34-11	ALL
	Y	A008	BJ	W0060	0005	22		24-34-11	ALL
	Y	A008	BJ	W0074	0051	22		24-34-11	ALL
I	Y	A008	BJ	W0074	0052	22		24-34-11	001-099
	Y	A009	BJ	W0074	0602	22		24-51-31	ALL
	Y	A009	BJ	W0074	0604	22		24-51-31	ALL
	Y	A009	BJ	W0074	0605	22		24-51-31	ALL
	Y	C001	BJ	W0074	0019	22		24-33-11	ALL
	Y	C001	BJ	W0074	0020	22		24-33-11	ALL
	Y	C001	BJ	W0074	0057	22		24-33-11	ALL
	Y	C001	BJ	W0074	0305	22		24-33-11	ALL
	Y	C002	BJ	W0074	0504	24		24-51-31	001-099
	Y	C002	BJ	W0074	0504	22		24-51-31	115-199
	Y	C002	BJ	W0074	0703	24		24-51-31	001-099
	Y	C002	BJ	W0074	0703	22		24-51-31	115-199
	Y	C002	BJ	W0074	0705	24		24-51-31	001-099
	Y	C002	BJ	W0074	0705	22		24-51-31	115-199
	Y	C007	BJ	W0074	0049	22		24-34-11	ALL
I	Y	C007	BJ	W0074	0050	22		24-34-11	001-099
	Y	C007	BJ	W0074	0064	22		24-34-11	ALL
	Y	C007	BJ	W0074	0065	22		24-34-11	ALL
	Y	C010	BJ	W0074	0502	24		24-51-31	001-099
	Y	C010	BJ	W0074	0502	22		24-51-31	115-199
	Y	C010	BJ	W0074	0503	24		24-51-31	001-099
	Y	C010	BJ	W0074	0503	22		24-51-31	115-199
	Y	C010	BJ	W0074	0601	24		24-51-31	001-099
	Y	C010	BJ	W0074	0601	22		24-51-31	115-199
	X	D004	BJ	W0060	0031	20		29-11-31	ALL
	X	D004	BJ	W0064	0021	20		29-11-31	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 20

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0025		M81714-5-7					P062-00/ /		001, 003-099
TB0025		M81714-5-10					P062-00/ /		115-199
TB0025	B	TJM112602					P62-00/ /		ALL
TB0025	B	M81714-4-DB1					P62-00/ /		ALL
TB0025	C	M81714-3-DC2					P62/ /		ALL
TB0025	K	M81714-3-DD1					P62/ /		ALL
TB0025	L	M81714-3-BB1					P62/ /		115-199
	K	A001	1	W3054	2501R	20		23-41-12	001-099
	K	A001	1	W3054	3502R	20		23-41-12	115-199
	K	A001	1	W3054	A-F			23-41-12	ALL
	B	A002	1C	W3054	0015	12		33-42-12	115-199
	B	A002	1C	W3054	0016	12		33-42-12	115-199
	B	A002	1C	W3054	0017	12		33-42-12	115-199
	C	A005	1	W3054	2001R	18		32-09-12	ALL
	C	A005	1	W3054	A-E			32-09-12	ALL
	K	A006	1	W3054	3501R	20		23-51-13	ALL
	K	A006	1	W3054	A-A			23-51-13	ALL
	K	A007	1	W3050	0001	20		26-15-12	115-199
	C	A007	1	W3050	0005	20		26-15-12	001-099
	K	A007	1	W3060	0001	20		26-15-12	115-199
	C	A007	1	W3060	B-01			26-15-12	001-099
	L	A008	1	W3050	0002	20		26-15-12	115-199
	L	A008	1	W3050	0003	20		26-15-12	115-199
	L	A008	1	W3060	0003	20		26-15-12	115-199
	L	A008	1	W3060	A-03			26-15-12	115-199
	K	A009	1	W3050	0006	20		26-15-12	115-199
	K	A009	1	W3060	A-01			26-15-12	115-199
	K	A010	1	W3050	2501B	20		23-71-11	115-199
	K	A010	1	W3060	2501B	20		23-71-11	115-199
	K	A011	1	W3050	2502B	20		23-71-11	115-199
	K	A011	1	W3060	C-01			23-71-11	115-199
	K	C001	1	W3054	2501B	20		23-41-12	001-099
	K	C001	1	W3054	3502B	20		23-41-12	115-199
	K	C001	1	W3054	A-G			23-41-12	ALL
	C	C005	1	W3054	2001B	18		32-09-12	ALL
	C	C005	1	W3054	A-D			32-09-12	ALL
	K	C006	1	W3054	3501B	20		23-51-13	ALL
	K	C006	1	W3054	A-B			23-51-13	ALL
	K	C007	1	W3050	0002	20		26-15-12	115-199
	C	C007	1	W3050	0009	20		26-22-21	001-099
	K	C007	1	W3060	0002	20		26-15-12	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 21

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0025		M81714-5-7 (continued)					P062-00/ /		001, 003-099
TB0025		M81714-5-10 (continued)					P062-00/ /		115-199
TB0025	B	TJM112602 (continued)					P62-00/ /		ALL
TB0025	B	M81714-4-DB1 (continued)					P62-00/ /		ALL
TB0025	C	M81714-3-DC2 (continued)					P62/ /		ALL
TB0025	K	M81714-3-DD1 (continued)					P62/ /		ALL
TB0025	L	M81714-3-BB1 (continued)					P62/ /		115-199
	C	C007	1	W3060	B-03			26-22-21	001-099
	K	C008	1	W3050	0006	20		26-15-12	001-099
	K	C008	1	W3060	A-01			26-15-12	001-099
	K	C009	1	W3050	0008	20		32-12-12	115-199
	K	C009	1	W3050	2503R	20		32-12-12	115-199
	K	C010	1	W3050	2501R	20		23-71-11	115-199
	K	C010	1	W3060	2501R	20		23-71-11	115-199
	K	C011	1	W3050	2502R	20		23-71-11	115-199
	K	C011	1	W3060	C-02			23-71-11	115-199
	K	DED		W3050	2503Z			32-12-12	ALL
	K	DED		W3052	2501Z			32-12-12	001-099
	K	DED		W3054	3501Z			23-51-13	ALL
	K	DED		W3054	3502Z			23-41-12	115-199
	K	E001	1	W3054	2501Z			23-41-12	001-099
	K	E001	1	W3054	3502Y	20		23-41-12	115-199
	K	E001	1	W3054	A-H			23-41-12	ALL
	C	E005	1	W3054	0022	16		33-42-21	115-199
	C	E005	1	W3054	0023	16		33-42-21	115-199
	C	E005	1	W3054	0024	16		33-42-21	115-199
	K	E006	1	W3054	3501Y	20		23-51-13	ALL
	K	E006	1	W3054	A-C			23-51-13	ALL
	C	E007	1	W3050	0002	20		26-15-12	001-099
	K	E007	1	W3050	0004	20		26-15-12	115-199
	C	E007	1	W3060	0002	20		26-15-12	001-099
	K	E007	1	W3060	0004	20		26-15-12	115-199
	K	E008	1	W3050	2503R	20		32-12-12	001-099
	K	E008	1	W3052	2501R	18		32-12-12	001-099
	K	E009	1	W3050	0005	20		26-15-12	115-199
	K	E009	1	W3060	B-01			26-15-12	115-199
	K	E010	1	W3050	2501Z			23-71-11	115-199
	K	E010	1	W3060	2501Z			23-71-11	115-199
	K	E011	1	W3050	2502Z			23-71-11	115-199
	K	E011	1	W3060	C-03			23-71-11	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 22

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0025		M81714-5-7 (continued)					P062-00/ /		001, 003-099
TB0025		M81714-5-10 (continued)					P062-00/ /		115-199
TB0025	B	TJM112602 (continued)					P62-00/ /		ALL
TB0025	B	M81714-4-DB1 (continued)					P62-00/ /		ALL
TB0025	C	M81714-3-DC2 (continued)					P62/ /		ALL
TB0025	K	M81714-3-DD1 (continued)					P62/ /		ALL
TB0025	L	M81714-3-BB1 (continued)					P62/ /		115-199
	K	G001	1	W3050	0010	20		32-44-11	115-199
	K	G001	1	W3060	0005	20		32-44-11	115-199
	K	G006	1	W3050	0007	20		SPARE	001-099
	K	G006	1	W3050	0011	20		32-44-11	115-199
	K	G006	1	W3060	0006	20		32-44-11	115-199
	K	G007	1	W3050	0007	20		32-12-12	115-199
	K	G007	1	W3050	2503B	20		32-12-12	115-199
	K	G008	1	W3050	2503B	20		32-12-12	001-099
	K	G008	1	W3052	2501B	18		32-12-12	001-099
	K	G009	1	W3050	0009	20		26-15-12	115-199
	K	G009	1	W3060	B-03			26-15-12	115-199
	K	G010	1	W3050	0012	20		32-44-11	115-199
	K	G010	1	W3060	0007	20		32-44-11	115-199
TB0027		BACT44B0400U					P036-00/ /		001, 003-099, 115-199
TB0028		BACT44B0400U					P036-00/ /		001, 003-099, 115-199
TB0029		BACT44B0400U					P036-00/ /		001, 003-099, 115-199
TB0031		BACT44B0450U					P037-00/ /		001, 003-099, 115-199
TB0032		BACT44B0450U					P037-00/ /		001, 003-099, 115-199
TB0033		BACT44B0450U					P037-00/ /		001, 003-099, 115-199
TB0036		AMY4100T-10U					E6 RACK/ /		001, 003-099, 115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 23

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
							CO		
TB0037		AMY4100T-10U					E6 RACK/ /		001, 003-099, 115-199
TB0037	B	YHLZD-33					E006-00/ /		001-099
TB0037	B	YHLZD-33					E6/ /		115-199
TB0037	B	YHLZD-29					E6/ /		115-199
TB0037	C	YHLZD-33					E006-00/ /		001-099
TB0037	C	YHLZD-33					E6/ /		115-199
TB0037	C	YHLZD-30					E6/ /		115-199
TB0037	G	BACM15C1B					E006-00/ /		001-099
TB0037	Y	BACM15C3B					E006-00/ /		001-099
TB0037	Y	BACM15C3B					E6/ /		115-199
TB0037	Z	BACM15C3C					E006-00/ /		001-099
TB0037	Z	BACM15C3C					E6/ /		115-199
	Z	17	BJ	W1024	0119	24		21-51-14	115-199
	Z	17	BJ	W1024	0134	24		21-51-13	115-199
	Z	17	BJ	W1024	0137	24		21-51-13	115-199
	Z	17	BJ	W1024	0140	24		21-51-13	115-199
	Z	17	BJ	W1024	0145	24		21-51-13	115-199
	Z	17	BJ	W1024	0152	24		21-51-13	115-199
	Z	17	BJ	W1024	0155	24		21-51-13	115-199
	Z	17	BJ	W1024	0160	24		21-51-13	115-199
	Z	18	BJ	W1024	0139	24		21-51-13	115-199
	Z	18	BJ	W1024	0141	24		21-51-13	115-199
	Z	18	BJ	W1024	0147	24		21-51-13	115-199
	Z	18	BJ	W1024	0153	24		21-51-13	115-199
	Z	18	BJ	W1024	0157	24		21-51-13	115-199
	Z	18	BJ	W1024	0161	24		21-51-13	115-199
	Z	18	BJ	W1024	0173	24		21-51-14	115-199
	Z	18	BJ	W1024	0174	24		21-51-13	115-199
	Z	19	BJ	W1024	0195	24		21-51-23	115-199
	Z	19	BJ	W1024	0197	24		21-51-23	115-199
	Z	19	BJ	W1024	0201	24		21-51-23	115-199
	Z	19	BJ	W1024	0205	24		21-51-23	115-199
	Z	19	BJ	W1024	0214	24		21-51-23	115-199
	Z	19	BJ	W1024	0218	24		21-51-23	115-199
	Z	19	BJ	W1024	0221	24		21-51-23	115-199
	Z	19	BJ	W1024	0234	24		21-51-24	115-199
	G	2	2	W1024	0271	16		52-35-11	001-099
	G	2	2	W1024	0273	16		52-35-11	001-099
	G	2	2	W1024	0304	16		52-35-11	001-099
	Z	20	BJ	W1024	0198	24		21-51-23	115-199
	Z	20	BJ	W1024	0202	24		21-51-23	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 24

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0037		AMY4100T-10U (continued)					E6 RACK/ /		001, 003-099, 115-199
TB0037	B	YHLZD-33 (continued)					E006-00/ /		001-099
TB0037	B	YHLZD-33 (continued)					E6/ /		115-199
TB0037	B	YHLZD-29 (continued)					E6/ /		115-199
TB0037	C	YHLZD-33 (continued)					E006-00/ /		001-099
TB0037	C	YHLZD-33 (continued)					E6/ /		115-199
TB0037	C	YHLZD-30 (continued)					E6/ /		115-199
TB0037	G	BACM15C1B (continued)					E006-00/ /		001-099
TB0037	Y	BACM15C3B (continued)					E006-00/ /		001-099
TB0037	Y	BACM15C3B (continued)					E6/ /		115-199
TB0037	Z	BACM15C3C (continued)					E006-00/ /		001-099
TB0037	Z	BACM15C3C (continued)					E6/ /		115-199
	Z	20	BJ	W1024	0206	24		21-51-23	115-199
	Z	20	BJ	W1024	0211	24		21-51-23	115-199
	Z	20	BJ	W1024	0215	24		21-51-23	115-199
	Z	20	BJ	W1024	0219	24		21-51-23	115-199
	Z	20	BJ	W1024	0222	24		21-51-23	115-199
	Z	20	BJ	W1024	0235	24		21-51-24	115-199
	G	21	2	W1024	0268	16		52-35-11	001-099
	G	21	2	W1024	0269	16		52-35-11	001-099
	G	21	2	W1024	0308	16		52-35-11	001-099
	G	22	2	W1024	0270	16		52-35-11	001-099
	G	22	2	W1024	0272	16		52-35-11	001-099
	G	22	2	W1024	0311	16		52-35-11	001-099
	Z	27	BJ	W1024	0013	22		49-61-11	001-099
	Z	27	BJ	W1024	0013	20		49-61-11	115-199
	Z	27	BJ	W1024	0025	22		49-61-11	ALL
	Z	27	BJ	W1024	0032	22		49-61-11	001-099
	Z	27	BJ	W1024	0035	22		49-61-11	115-199
	Z	27	BJ	W1024	0051	20		49-61-11	ALL
	Z	27	BJ	W1024	0076	22		49-41-11	ALL
	Z	27	BJ	W1024	0085	22		49-41-11	ALL
	Z	27	BJ	W1024	0116	22		49-61-11	115-199
	Z	27	BJ	W1024	0245	22		49-61-11	001-099
	C	A001	2	W1024	0086	22		49-61-11	ALL
	C	A001	2	W1024	0098	22		49-61-11	ALL
	Y	A003	BJ	W1024	0040	22		49-61-11	ALL
	Y	A003	BJ	W1024	0047	22		49-61-11	ALL
	Y	A003	BJ	W1024	0426	22		49-61-11	ALL
	Y	A004	BJ	W1024	0021	22		49-61-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 25

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
							CO		
TB0037		AMY4100T-10U (continued)					E6 RACK/ /		001, 003-099, 115-199
TB0037	B	YHLZD-33 (continued)					E006-00/ /		001-099
TB0037	B	YHLZD-33 (continued)					E6/ /		115-199
TB0037	B	YHLZD-29 (continued)					E6/ /		115-199
TB0037	C	YHLZD-33 (continued)					E006-00/ /		001-099
TB0037	C	YHLZD-33 (continued)					E6/ /		115-199
TB0037	C	YHLZD-30 (continued)					E6/ /		115-199
TB0037	G	BACM15C1B (continued)					E006-00/ /		001-099
TB0037	Y	BACM15C3B (continued)					E006-00/ /		001-099
TB0037	Y	BACM15C3B (continued)					E6/ /		115-199
TB0037	Z	BACM15C3C (continued)					E006-00/ /		001-099
TB0037	Z	BACM15C3C (continued)					E6/ /		115-199
	Y	A004	BJ	W1024	0024	22		49-61-11	ALL
	Y	A004	BJ	W1024	0026	22		49-61-11	ALL
	Y	A006	BJ	W1024	0014	22		49-61-11	115-199
	Y	A006	BJ	W1024	0031	22		49-61-11	115-199
	Y	A006	BJ	W1024	0033	22		49-61-11	115-199
	Y	A006	BJ	W1024	0034	22		49-61-11	115-199
	Y	A010	BJ	W1024	0028	22		49-61-11	ALL
	Y	A010	BJ	W1024	0094	22		49-72-11	ALL
	Y	A010	BJ	W1024	0099	22		49-72-11	ALL
	Y	A010	BJ	W1024	0117	22		49-61-11	115-199
	Y	A011	BJ	W1024	0419	22		49-61-11	ALL
	Y	A011	BJ	W1024	0420	22		49-61-11	ALL
	Y	A011	BJ	W1024	0421	22		49-61-11	ALL
	Y	A012	BJ	W1024	0046	22		49-61-11	115-199
	Y	A012	BJ	W1024	0113	24		21-51-11	115-199
	Y	A012	BJ	W1024	0114	24		21-51-11	115-199
	Y	A012	BJ	W1024	0116	22		49-61-11	115-199
	Y	A013	BJ	W1024	0121	24		21-51-12	115-199
	Y	A013	BJ	W1024	0125	24		21-51-12	115-199
	Y	A013	BJ	W1024	0131	24		21-51-12	115-199
	Y	A013	BJ	W1024	0133	24		21-51-12	115-199
	Y	A014	BJ	W1024	0149	24		21-51-13	115-199
	Y	A014	BJ	W1024	0330	24		21-51-13	115-199
	Y	A014	BJ	W1024	0331	24		21-51-13	115-199
	Y	A015	BJ	W1024	0181	24		21-51-22	115-199
	Y	A015	BJ	W1024	0182	24		21-51-22	115-199
	Y	A015	BJ	W1024	0186	24		21-51-22	115-199
	Y	A015	BJ	W1024	0190	24		21-51-22	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 26

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0037		AMY4100T-10U (continued)					E6 RACK/ /		001, 003-099, 115-199
TB0037	B	YHLZD-33 (continued)					E006-00/ /		001-099
TB0037	B	YHLZD-33 (continued)					E6/ /		115-199
TB0037	B	YHLZD-29 (continued)					E6/ /		115-199
TB0037	C	YHLZD-33 (continued)					E006-00/ /		001-099
TB0037	C	YHLZD-33 (continued)					E6/ /		115-199
TB0037	C	YHLZD-30 (continued)					E6/ /		115-199
TB0037	G	BACM15C1B (continued)					E006-00/ /		001-099
TB0037	Y	BACM15C3B (continued)					E006-00/ /		001-099
TB0037	Y	BACM15C3B (continued)					E6/ /		115-199
TB0037	Z	BACM15C3C (continued)					E006-00/ /		001-099
TB0037	Z	BACM15C3C (continued)					E6/ /		115-199
	Y	A016	BJ	W1024	0046	22		49-61-11	001-099
	Y	A016	BJ	W1024	0245	22		49-61-11	001-099
	Y	A016	BJ	W1024	0342	22		49-61-11	001-099
	Y	A021	BJ	W1024	0276	22		25-51-21	115-199
	Y	A021	BJ	W1024	0277	22		25-51-21	115-199
	Y	A021	BJ	W1024	0285	22		25-51-21	115-199
	Y	A022	BJ	W1024	0278	22		25-51-21	115-199
	Y	A022	BJ	W1024	0282	22		25-51-21	115-199
	Y	A022	BJ	W1024	0283	22		25-51-21	115-199
	Y	A023	BJ	W1024	0264	22		52-35-11	001-099
	Y	A023	BJ	W1024	0295	22		33-37-21	ALL
	Y	A023	BJ	W1024	0297	22		52-35-11	ALL
	Y	A023	BJ	W1024	0302	22		52-35-11	115-199
	Y	A024	BJ	W1024	0007	22		33-37-21	115-199
	Y	A024	BJ	W1024	0052	20		33-37-21	115-199
	Y	A024	BJ	W1024	0294	22		33-37-21	115-199
	Y	A025	BJ	W1024	2501B	24		23-41-12	001-099
	Y	A025	BJ	W1024	2502B	24		23-41-12	001-099
	Y	A025	BJ	W1024	2503B	24		23-41-12	001-099
	Y	A025	BJ	W1024	3501B	24		23-41-12	115-199
	Y	A025	BJ	W1024	3502B	24		23-41-12	115-199
	Y	A025	BJ	W1024	3503B	24		23-41-12	115-199
	Y	A026	BJ	W1024	2501Z			23-41-12	001-099
	Y	A026	BJ	W1024	2502Z			23-41-12	001-099
	Y	A026	BJ	W1024	2503Z			23-41-12	001-099
	Y	A026	BJ	W1024	3501Z			23-41-12	115-199
	Y	A026	BJ	W1024	3502Z			23-41-12	115-199
	Y	A026	BJ	W1024	3503Z			23-41-12	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 27

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
							CO		
TB0037		AMY4100T-10U (continued)					E6 RACK/ /		001, 003-099, 115-199
TB0037	B	YHLZD-33 (continued)					E006-00/ /		001-099
TB0037	B	YHLZD-33 (continued)					E6/ /		115-199
TB0037	B	YHLZD-29 (continued)					E6/ /		115-199
TB0037	C	YHLZD-33 (continued)					E006-00/ /		001-099
TB0037	C	YHLZD-33 (continued)					E6/ /		115-199
TB0037	C	YHLZD-30 (continued)					E6/ /		115-199
TB0037	G	BACM15C1B (continued)					E006-00/ /		001-099
TB0037	Y	BACM15C3B (continued)					E006-00/ /		001-099
TB0037	Y	BACM15C3B (continued)					E6/ /		115-199
TB0037	Z	BACM15C3C (continued)					E006-00/ /		001-099
TB0037	Z	BACM15C3C (continued)					E6/ /		115-199
	Y	A029	BJ	W1024	0101	24		24-33-12	001-099
	Y	A029	BJ	W1024	0104	24		24-31-41	ALL
	Y	A029	BJ	W1024	0110	24		24-31-41	ALL
	Y	A030	BJ	W1024	0009	20		24-32-41	115-199
	Y	A030	BJ	W1024	0027	20		24-32-41	115-199
	Y	A030	BJ	W1024	0053	22		24-32-41	115-199
	Y	A030	BJ	W1024	0096	20		24-32-41	001-099
	Y	A030	BJ	W1024	0103	22		24-32-41	001-099
	Y	A030	BJ	W1024	0109	20		24-32-41	001-099
	B	A031	2	W1024	0104	24		24-31-41	ALL
	B	A031	2	W1024	0249	24		24-31-41	ALL
	B	A035	2	W1024	0397	24		24-32-41	ALL
	Y	A036	BJ	W1024	0030	24		24-32-41	115-199
	Y	A036	BJ	W1024	0113	24		24-32-41	001-099
	Y	A036	BJ	W1024	0396	24		24-32-41	ALL
	Y	A036	BJ	W1024	0398	24		24-32-41	ALL
	C	C001	2	W1024	0012	22		49-61-11	ALL
	C	C001	2	W1024	0036	22		49-61-11	ALL
	Y	C003	BJ	W1024	0082	24		24-33-12	001-099
	Y	C003	BJ	W1024	0180	24		24-33-12	001-099
	Y	C003	BJ	W1024	0313	24		24-33-12	001-099
	Y	C005	BJ	W1024	0013	22		49-61-11	001-099
	Y	C005	BJ	W1024	0013	20		49-61-11	115-199
	Y	C005	BJ	W1024	0019	22		49-61-11	ALL
	Y	C005	BJ	W1024	0029	22		49-61-11	ALL
	Y	C005	BJ	W1024	0118	22		49-61-11	ALL
	Y	C009	BJ	W1024	0003	22		49-41-11	ALL
	Y	C009	BJ	W1024	0256	22		49-41-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 28

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
							CO		
TB0037		AMY4100T-10U (continued)					E6 RACK/ /		001, 003-099, 115-199
TB0037	B	YHLZD-33 (continued)					E006-00/ /		001-099
TB0037	B	YHLZD-33 (continued)					E6/ /		115-199
TB0037	B	YHLZD-29 (continued)					E6/ /		115-199
TB0037	C	YHLZD-33 (continued)					E006-00/ /		001-099
TB0037	C	YHLZD-33 (continued)					E6/ /		115-199
TB0037	C	YHLZD-30 (continued)					E6/ /		115-199
TB0037	G	BACM15C1B (continued)					E006-00/ /		001-099
TB0037	Y	BACM15C3B (continued)					E006-00/ /		001-099
TB0037	Y	BACM15C3B (continued)					E6/ /		115-199
TB0037	Z	BACM15C3C (continued)					E006-00/ /		001-099
TB0037	Z	BACM15C3C (continued)					E6/ /		115-199
	Y	C009	BJ	W1024	0258	22		49-72-11	ALL
	Y	C010	BJ	W1024	0020	22		49-61-11	ALL
	Y	C010	BJ	W1024	0022	22		49-61-11	ALL
	Y	C010	BJ	W1024	0098	22		49-61-11	ALL
	Y	C013	BJ	W1024	0130	24		21-51-12	115-199
	Y	C013	BJ	W1024	0163	24		21-51-13	115-199
	Y	C013	BJ	W1024	0164	24		21-51-13	115-199
	Y	C013	BJ	W1024	0168	24		21-51-13	115-199
	Y	C015	BJ	W1024	0193	24		21-51-22	115-199
	Y	C015	BJ	W1024	0225	24		21-51-23	115-199
	Y	C015	BJ	W1024	0226	24		21-51-23	115-199
	Y	C015	BJ	W1024	0227	24		21-51-23	115-199
	Y	C021	BJ	W1024	0279	22		25-51-21	115-199
	Y	C021	BJ	W1024	0280	22		25-51-21	115-199
	Y	C021	BJ	W1024	0281	22		25-51-21	115-199
	Y	C022	BJ	W1024	0287	22		25-51-21	115-199
	Y	C022	BJ	W1024	0288	22		25-51-21	115-199
	Y	C022	BJ	W1024	0289	22		25-51-21	115-199
	Y	C024	BJ	W1024	0004	20		33-37-21	115-199
	Y	C024	BJ	W1024	0023	20		33-37-21	115-199
	Y	C024	BJ	W1024	0209	20		33-37-21	115-199
	Y	C025	BJ	W1024	3501Y	24		23-41-12	115-199
	Y	C025	BJ	W1024	3502Y	24		23-41-12	115-199
	Y	C025	BJ	W1024	3503Y	24		23-41-12	115-199
	Y	C026	BJ	W1024	2501R	24		23-41-12	001-099
	Y	C026	BJ	W1024	2502R	24		23-41-12	001-099
	Y	C026	BJ	W1024	2503R	24		23-41-12	001-099
	Y	C026	BJ	W1024	3501R	24		23-41-12	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 29

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
							CO		
TB0037		AMY4100T-10U (continued)					E6 RACK/ /		001, 003-099, 115-199
TB0037	B	YHLZD-33 (continued)					E006-00/ /		001-099
TB0037	B	YHLZD-33 (continued)					E6/ /		115-199
TB0037	B	YHLZD-29 (continued)					E6/ /		115-199
TB0037	C	YHLZD-33 (continued)					E006-00/ /		001-099
TB0037	C	YHLZD-33 (continued)					E6/ /		115-199
TB0037	C	YHLZD-30 (continued)					E6/ /		115-199
TB0037	G	BACM15C1B (continued)					E006-00/ /		001-099
TB0037	Y	BACM15C3B (continued)					E006-00/ /		001-099
TB0037	Y	BACM15C3B (continued)					E6/ /		115-199
TB0037	Z	BACM15C3C (continued)					E006-00/ /		001-099
TB0037	Z	BACM15C3C (continued)					E6/ /		115-199
	Y	C026	BJ	W1024	3502R	24		23-41-12	115-199
	Y	C026	BJ	W1024	3503R	24		23-41-12	115-199
	Y	C029	BJ	W1024	0061	24		24-33-12	001-099
	Y	C029	BJ	W1024	0065	24		24-33-12	001-099
	Y	C029	BJ	W1024	0077	24		24-33-12	001-099
	Y	C029	BJ	W1024	0405	24		24-33-12	002-008, 010-099
	B	C031	2	W1024	0090	24		24-31-41	ALL
	B	C035	2	W1024	0399	24		24-32-41	ALL
TB0045		M81714-5-1					P063-00/ /		001, 003-099, 115-199
TB0045	A	M81714-3-DD1					P063-00/ /		ALL
TB0045	B	M81714-4-DB1					P063-00/ /		001-099
TB0045	B	TJM112602					P063-00/ /		001-099
TB0045	B	TJM112601					P063-00/ /		115-199
TB0045	B	M81714-3-DA1					P063-00/ /		115-199
TB0045	C	M81714-3-DA1					P063-00/ /		001-099
TB0045	C	M81714-4-DB1					P063-00/ /		115-199
TB0045	D	M81714-3-DB1					P063-00/ /		ALL
	B	2	1	W3052	0011	16		33-42-21	115-199
	B	2	1	W3052	0014	18		33-42-21	115-199
	B	2	1	W3052	0015	16		33-42-21	115-199
	A	A001	1	W3052	2001B	18		32-09-11	ALL
	A	A001	1	W3052	A-B			32-09-11	ALL
	B	A002	1C	W3052	0004	12		33-42-11	001-099
	B	A002	1C	W3052	0005	12		33-42-11	001-099
	B	A002	1C	W3052	0008	12		33-42-11	001-099
	C	A003	1C	W3052	0004	12		33-42-11	115-199
	C	A003	1C	W3052	0005	12		33-42-11	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 30

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0045		M81714-5-1 (continued)					P063-00/ /		001, 003-099, 115-199
TB0045	A	M81714-3-DD1 (continued)					P063-00/ /		ALL
TB0045	B	M81714-4-DB1 (continued)					P063-00/ /		001-099
TB0045	B	TJM112602 (continued)					P063-00/ /		001-099
TB0045	B	TJM112601 (continued)					P063-00/ /		115-199
TB0045	B	M81714-3-DA1 (continued)					P063-00/ /		115-199
TB0045	C	M81714-3-DA1 (continued)					P063-00/ /		001-099
TB0045	C	M81714-4-DB1 (continued)					P063-00/ /		115-199
TB0045	D	M81714-3-DB1 (continued)					P063-00/ /		ALL
	C	A003	1C	W3052	0008	12		33-42-11	115-199
	C	A005	1	W3052	0011	16		33-42-21	001-099
	C	A005	1	W3052	0014	18		33-42-21	001-099
	C	A005	1	W3052	0015	16		33-42-21	001-099
	C	A005	1	W3052	0048	16		33-42-31	001-099
	C	A005	1	W3052	0050	16		33-42-31	001-099
	D	A006	1	W3052	0013	18		33-42-21	ALL
	D	A006	1	W3052	0017	18		33-42-21	ALL
	D	A006	1	W3052	0049	16		33-42-31	001-099
	A	C001	1	W3052	2001R	18		32-09-11	ALL
	A	C001	1	W3052	A-A			32-09-11	ALL
	B	E002	1C	W3052	0041	12		33-42-12	001-099
	B	E002	1C	W3052	0042	12		33-42-12	001-099
	B	E002	1C	W3052	0043	12		33-42-12	001-099
TB0046		BACT44B0900U					P033-00/ /		001, 003-099, 115-199
TB0046	A	YHLZD-33					P33/ /		ALL
TB0046	B	YHLZD-32					P033-00/ /		ALL
TB0046	G	BACM15C1B					P33/ /		ALL
TB0046	H	BACM15C2A					P33/ /		001-099
TB0046	Y	BACM15C3B					P33/ /		ALL
TB0046	Z	BACM15C3C					P33/ /		115-199
	G	15	2	W1230	0171	18		28-22-11	ALL
	G	15	2	W1230	0686	18		28-22-11	001-099
	G	15	2	W1230	0836	20		28-22-11	ALL
	G	15	2	W1230	0837	20		28-22-11	ALL
	G	15	2	W1232	0067	18		28-22-11	115-199
	G	16	2	W1230	0170	18		28-22-11	ALL
	G	16	2	W1230	0838	18		28-22-11	001-099
	G	16	2	W1230	0869	18		28-22-11	001-099
	G	16	2	W1232	0038	18		28-22-11	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 31

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0046		BACT44B0900U (continued)					P033-00/ /		001, 003-099, 115-199
TB0046	A	YHLZD-33 (continued)					P33/ /		ALL
TB0046	B	YHLZD-32 (continued)					P033-00/ /		ALL
TB0046	G	BACM15C1B (continued)					P33/ /		ALL
TB0046	H	BACM15C2A (continued)					P33/ /		001-099
TB0046	Y	BACM15C3B (continued)					P33/ /		ALL
TB0046	Z	BACM15C3C (continued)					P33/ /		115-199
	G	16	2	W1232	0069	18		28-22-11	115-199
	H	18	2	W1230	0029	18		28-21-11	001-099
	Z	18	BJ	W1230	0029	20		28-21-11	115-199
	H	18	2	W1230	0035	18		28-21-11	001-099
	Z	18	BJ	W1230	0035	20		28-21-11	115-199
	H	18	2	W1230	0036	18		28-21-11	001-099
	Z	18	BJ	W1230	0036	20		28-21-11	115-199
	H	18	2	W1230	0072	20		28-26-11	001-099
	Z	18	BJ	W1230	0072	20		28-26-11	115-199
	H	18	2	W1230	0164	22		28-21-21	001-099
	Z	18	BJ	W1230	0164	22		28-21-21	115-199
	H	18	2	W1230	0165	20		28-21-21	001-099
	Z	18	BJ	W1230	0165	20		28-21-21	115-199
	H	18	2	W1230	0205	22		28-21-21	001-099
	Z	18	BJ	W1230	0205	22		28-21-21	115-199
	Y	A001	BJ	W1230	0656	24		26-15-12	001-099
	Y	A001	BJ	W1230	0661	24		26-15-12	001-099
	Y	A001	BJ	W1230	0662	24		26-15-12	001-099
	Y	A001	BJ	W1232	0011	24		26-15-12	115-199
	Y	A001	BJ	W1232	0017	24		26-15-12	115-199
	Y	A001	BJ	W1232	0018	24		26-15-12	115-199
	Y	A002	BJ	W1230	0247	20		26-22-21	001-099
	Y	A002	BJ	W1230	0248	20		26-22-21	001-099
	Y	A002	BJ	W1230	0684	20		26-22-21	001-099
	Y	A002	BJ	W1230	0690	20		26-22-21	001-099
	A	A003	2	W1230	0188	22		29-22-11	ALL
	Y	A007	BJ	W1230	0196	20		26-21-11	ALL
	Y	A007	BJ	W1230	0197	20		26-21-11	ALL
	Y	A007	BJ	W1230	0198	20		26-21-11	ALL
	Y	A008	BJ	W1230	0199	22		29-22-11	115-199
	Y	A008	BJ	W1230	0254	22		29-22-11	115-199
	Y	A008	BJ	W1230	0255	22		29-22-11	115-199
	Y	A011	BJ	W1230	0440	24		33-42-11	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 32

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.		Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
Fix	Term						CO		
		TB0046	BACT44B0900U (continued)				P033-00/ /		001, 003-099, 115-199
	A	TB0046	YHLZD-33 (continued)				P33/ /		ALL
I	B	TB0046	YHLZD-32 (continued)				P033-00/ /		ALL
I	G	TB0046	BACM15C1B (continued)				P33/ /		ALL
I	H	TB0046	BACM15C2A (continued)				P33/ /		001-099
I	Y	TB0046	BACM15C3B (continued)				P33/ /		ALL
	Z	TB0046	BACM15C3C (continued)				P33/ /		115-199
	Y	A011	BJ	W1230	0441	24		33-42-11	001-099
	Y	A011	BJ	W1230	0442	24		33-42-11	001-099
	Y	A011	BJ	W1230	0742	24		33-42-31	001-099
	Y	A011	BJ	W1234	0041	20		33-42-11	115-199
	Y	A011	BJ	W1234	0042	20		33-42-11	115-199
	Y	A011	BJ	W1234	0043	20		33-42-11	115-199
I	B	A019	2	W1230	0833	20		28-22-11	ALL
I	B	A019	2	W1230	0834	20		28-22-11	ALL
	Y	C001	BJ	W1230	0401	24		26-15-12	001-099
	Y	C001	BJ	W1230	0404	24		26-15-12	001-099
	Y	C001	BJ	W1230	0660	24		26-15-12	001-099
	Y	C001	BJ	W1230	0664	24		26-15-12	001-099
	Y	C001	BJ	W1232	0016	24		26-15-12	115-199
	Y	C001	BJ	W1232	0020	24		26-15-12	115-199
	Y	C001	BJ	W1234	0001	24		26-15-12	115-199
	Y	C001	BJ	W1234	0004	24		26-15-12	115-199
	Y	C002	BJ	W1230	0231	22		27-51-21	ALL
	Y	C002	BJ	W1230	0238	22		27-51-21	ALL
	Y	C002	BJ	W1230	0436	22		27-51-21	001-099
	Y	C002	BJ	W1234	0037	22		27-51-21	115-199
	A	C003	2	W1230	0185	22		29-22-11	001-099
	A	C003	2	W1230	0192	22		29-22-11	001-099
	A	C003	2	W1230	0241	22		29-22-11	115-199
	Y	C005	BJ	W1230	0085	20		SPARE	115-199
	Y	C005	BJ	W1230	0086	22		SPARE	115-199
	Y	C005	BJ	W1230	0151	22		SPARE	115-199
	Y	C006	BJ	W1230	0022	22		28-21-11	115-199
	Y	C006	BJ	W1230	0084	20		SPARE	115-199
	Y	C006	BJ	W1230	0144	22		28-21-11	115-199
	Y	C007	BJ	W1230	0246	20		26-22-21	001-099
	Y	C007	BJ	W1230	0249	20		26-22-21	001-099
	Y	C007	BJ	W1230	0688	20		26-22-21	001-099
	Y	C007	BJ	W1230	0755	20		26-22-21	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 33

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0046		BACT44B0900U (continued)					P033-00/ /		001, 003-099, 115-199
TB0046	A	YHLZD-33 (continued)					P33/ /		ALL
TB0046	B	YHLZD-32 (continued)					P033-00/ /		ALL
TB0046	G	BACM15C1B (continued)					P33/ /		ALL
TB0046	H	BACM15C2A (continued)					P33/ /		001-099
TB0046	Y	BACM15C3B (continued)					P33/ /		ALL
TB0046	Z	BACM15C3C (continued)					P33/ /		115-199
	Y	C008	BJ	W1230	0437	24		33-42-11	001-099
	Y	C008	BJ	W1230	0438	24		33-42-11	001-099
	Y	C008	BJ	W1230	0443	24		33-42-11	001-099
	Y	C008	BJ	W1230	0743	24		33-42-31	001-099
	Y	C008	BJ	W1234	0038	20		33-42-11	115-199
	Y	C008	BJ	W1234	0039	20		33-42-11	115-199
	Y	C008	BJ	W1234	0044	20		33-42-11	115-199
	B	C019	2	W1230	0835	20		28-22-11	ALL
TB0047		BACT44C0900U					P034-00/ /		001, 003-099, 115-199
TB0047	A	YHLZD-29					P034-00/ /		001-099
TB0047	A	YHLZD-29					P34/ /		115-199
TB0047	A	YHLZD-33					P34/ /		115-199
TB0047	F	BACM15C1A					P034-00/ /		001-099
TB0047	F	BACM15C1A					P34/ /		115-199
TB0047	G	BACM15C1B					P034-00/ /		001-099
TB0047	G	BACM15C1B					P34/ /		115-199
TB0047	X	BACM15C3A					P034-00/ /		001-099
TB0047	X	BACM15C3A					P34/ /		115-199
TB0047	Y	BACM15C3B					P034-00/ /		001-099
TB0047	Y	BACM15C3B					P34/ /		115-199
TB0047	Z	BACM15C3C					P034-00/ /		001-099
TB0047	Z	BACM15C3C					P34/ /		115-199
	Z	0008	BJ	W1128	0153	22		33-27-21	115-199
	Z	10	BJ	W1128	0150	22		33-27-11	115-199
	Z	10	BJ	W1128	0154	22		33-27-21	115-199
	Z	10	BJ	W1240	0022	22		33-22-11	115-199
	Z	10	BJ	W1240	0070	22		33-27-31	115-199
	Z	10	BJ	W1242	0022	22		33-22-11	115-199
	Z	15	BJ	W1240	0046	24		33-24-11	001-099
	Z	15	BJ	W1240	0046	22		33-24-11	115-199
	Z	15	BJ	W1240	0055	22		33-24-11	115-199
	Z	15	BJ	W1240	0057	24		33-24-11	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 34

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0047		BACT44C0900U (continued)					P034-00/ /		001, 003-099, 115-199
TB0047	A	YHLZD-29 (continued)					P034-00/ /		001-099
TB0047	A	YHLZD-29 (continued)					P34/ /		115-199
TB0047	A	YHLZD-33 (continued)					P34/ /		115-199
TB0047	F	BACM15C1A (continued)					P034-00/ /		001-099
TB0047	F	BACM15C1A (continued)					P34/ /		115-199
TB0047	G	BACM15C1B (continued)					P034-00/ /		001-099
TB0047	G	BACM15C1B (continued)					P34/ /		115-199
TB0047	X	BACM15C3A (continued)					P034-00/ /		001-099
TB0047	X	BACM15C3A (continued)					P34/ /		115-199
TB0047	Y	BACM15C3B (continued)					P034-00/ /		001-099
TB0047	Y	BACM15C3B (continued)					P34/ /		115-199
TB0047	Z	BACM15C3C (continued)					P034-00/ /		001-099
TB0047	Z	BACM15C3C (continued)					P34/ /		115-199
	Z	15	BJ	W1240	0057	22		33-24-11	115-199
	Z	15	BJ	W1240	0074	24		33-24-11	001-099
	Z	15	BJ	W1240	0074	22		33-24-11	115-199
	Z	15	BJ	W1240	0425	24		33-24-11	001-099
	Z	16	BJ	W1190	0306	22		38-14-11	001-099
	Z	16	BJ	W1240	0087	22		38-14-11	001-099
	Z	16	BJ	W1240	0088	22		38-14-11	001-099
	G	2	2	W1190	0022	16		33-21-31	001-099
	G	2	2	W1240	0009	16		33-21-31	001-099
	G	2	2	W1240	0010	16		33-21-31	001-099
	G	27	2	W1190	0022	16		33-21-31	115-199
	G	27	2	W1240	0009	16		33-21-31	115-199
	G	27	2	W1240	0010	16		33-21-31	115-199
	Z	33	BJ	W1196	0023	22		33-22-11	ALL
	Z	33	BJ	W1240	0159	22		33-22-11	ALL
	Z	33	BJ	W1240	0184	22		33-22-11	ALL
	Z	33	BJ	W1240	0276	22		33-22-11	ALL
	Z	33	BJ	W1240	0279	22		33-22-11	115-199
	Z	7	BJ	W1196	0007	20		33-22-11	ALL
	Z	7	BJ	W1240	0034	22		33-22-12	ALL
	Z	7	BJ	W1240	0035	20		33-22-13	115-199
	Z	7	BJ	W1240	0036	22		33-22-14	ALL
	Z	7	BJ	W1240	0077	22		33-22-11	ALL
	Z	7	BJ	W1240	0080	22		33-14-41	ALL
	Z	8	BJ	W1128	0151	22		33-27-11	115-199
	Z	8	BJ	W1240	0069	22		33-27-31	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 35

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0047		BACT44C0900U (continued)					P034-00/ /		001, 003-099, 115-199
TB0047	A	YHLZD-29 (continued)					P034-00/ /		001-099
TB0047	A	YHLZD-29 (continued)					P34/ /		115-199
TB0047	A	YHLZD-33 (continued)					P34/ /		115-199
TB0047	F	BACM15C1A (continued)					P034-00/ /		001-099
TB0047	F	BACM15C1A (continued)					P34/ /		115-199
TB0047	G	BACM15C1B (continued)					P034-00/ /		001-099
TB0047	G	BACM15C1B (continued)					P34/ /		115-199
TB0047	X	BACM15C3A (continued)					P034-00/ /		001-099
TB0047	X	BACM15C3A (continued)					P34/ /		115-199
TB0047	Y	BACM15C3B (continued)					P034-00/ /		001-099
TB0047	Y	BACM15C3B (continued)					P34/ /		115-199
TB0047	Z	BACM15C3C (continued)					P034-00/ /		001-099
TB0047	Z	BACM15C3C (continued)					P34/ /		115-199
	Z	8	BJ	W1240	0132	22		33-22-11	115-199
	Z	8	BJ	W1240	0225	22		33-22-11	115-199
	F	A001	2	W1196	0010	18		33-24-11	001-099
	F	A001	2	W1240	0038	18		33-24-11	001-099
	F	A002	2	W1240	0003	16		33-21-11	115-199
	F	A002	2	W1242	0001	16		33-21-11	115-199
	Y	A003	BJ	W1242	0007	24		33-21-11	115-199
	Y	A003	BJ	W1242	0008	24		33-21-11	115-199
	Y	A003	BJ	W1242	0009	24		33-21-11	115-199
	Y	A004	BJ	W1240	0220	24		33-21-31	115-199
	Y	A004	BJ	W1240	0221	24		33-21-31	115-199
	Y	A004	BJ	W1240	0222	24		33-21-31	115-199
	X	A005	BJ	W1128	0142	24		24-51-51	ALL
	X	A005	BJ	W1240	0118	24		24-51-51	ALL
	X	A006	BJ	W1240	0227	20		33-22-11	115-199
	X	A006	BJ	W1242	0023	20		33-22-11	115-199
	Y	A011	BJ	W1128	0152	22		33-27-11	115-199
	Y	A011	BJ	W1240	0064	22		33-27-11	115-199
	Y	A011	BJ	W1240	0220	24		33-21-31	001-099
	Y	A011	BJ	W1240	0221	24		33-21-31	001-099
	Y	A011	BJ	W1240	0222	24		33-21-31	001-099
	Y	A012	BJ	W1240	0040	20		33-24-11	115-199
	Y	A012	BJ	W1240	0043	20		33-24-11	115-199
	Y	A012	BJ	W1240	0075	20		33-24-11	115-199
	Y	A013	BJ	W1196	0008	22		33-24-11	ALL
	Y	A013	BJ	W1240	0050	22		33-24-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 36

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0047		BACT44C0900U (continued)					P034-00/ /		001, 003-099, 115-199
TB0047	A	YHLZD-29 (continued)					P034-00/ /		001-099
TB0047	A	YHLZD-29 (continued)					P34/ /		115-199
TB0047	A	YHLZD-33 (continued)					P34/ /		115-199
TB0047	F	BACM15C1A (continued)					P034-00/ /		001-099
TB0047	F	BACM15C1A (continued)					P34/ /		115-199
TB0047	G	BACM15C1B (continued)					P034-00/ /		001-099
TB0047	G	BACM15C1B (continued)					P34/ /		115-199
TB0047	X	BACM15C3A (continued)					P034-00/ /		001-099
TB0047	X	BACM15C3A (continued)					P34/ /		115-199
TB0047	Y	BACM15C3B (continued)					P034-00/ /		001-099
TB0047	Y	BACM15C3B (continued)					P34/ /		115-199
TB0047	Z	BACM15C3C (continued)					P034-00/ /		001-099
TB0047	Z	BACM15C3C (continued)					P34/ /		115-199
	Y	A014	BJ	W1240	0020	22		33-22-11	ALL
	Y	A014	BJ	W1240	0021	22		33-22-11	ALL
	Y	A014	BJ	W1240	0023	22		33-22-11	ALL
	Y	A014	BJ	W1240	0139	22		33-22-11	ALL
	Y	A018	BJ	W1240	0101	20		23-31-13	ALL
	Y	A018	BJ	W1240	0102	20		23-31-13	ALL
	Y	A018	BJ	W1240	0104	20		23-31-11	ALL
	F	A019	2	W1190	0402	16		28-21-11	ALL
	F	A019	2	W1240	0121	16		28-21-11	ALL
	F	A024	2	W1190	0403	16		28-21-11	ALL
	F	A024	2	W1240	0123	16		28-21-11	ALL
	F	A025	2	W1190	0023	16		33-21-31	ALL
	F	A025	2	W1240	0011	16		33-21-31	ALL
	A	A026	2	W1240	0432	24		33-42-12	001-099
	A	A026	2	W1240	0437	24		33-42-12	001-099
	Y	A028	BJ	W1240	0027	24		33-22-11	001-099
	Y	A028	BJ	W1240	0027	22		33-22-11	115-199
	Y	A028	BJ	W1240	0030	24		33-22-11	001-099
	Y	A028	BJ	W1240	0030	22		33-22-11	115-199
	Y	A028	BJ	W1240	0138	22		33-22-11	ALL
	Y	A029	BJ	W1240	0238	22		33-21-51	001-099
	Y	A029	BJ	W1240	0239	22		33-21-51	001-099
	Y	A029	BJ	W1240	0265	22		33-21-51	001-099
	Y	A030	BJ	W1196	0202	22		33-21-51	ALL
	Y	A030	BJ	W1240	0266	22		33-21-51	ALL
	A	A041	2	W1242	0032	20		33-42-12	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 37

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0047		BACT44C0900U (continued)					P034-00/ /		001, 003-099, 115-199
TB0047	A	YHLZD-29 (continued)					P034-00/ /		001-099
TB0047	A	YHLZD-29 (continued)					P34/ /		115-199
TB0047	A	YHLZD-33 (continued)					P34/ /		115-199
TB0047	F	BACM15C1A (continued)					P034-00/ /		001-099
TB0047	F	BACM15C1A (continued)					P34/ /		115-199
TB0047	G	BACM15C1B (continued)					P034-00/ /		001-099
TB0047	G	BACM15C1B (continued)					P34/ /		115-199
TB0047	X	BACM15C3A (continued)					P034-00/ /		001-099
TB0047	X	BACM15C3A (continued)					P34/ /		115-199
TB0047	Y	BACM15C3B (continued)					P034-00/ /		001-099
TB0047	Y	BACM15C3B (continued)					P34/ /		115-199
TB0047	Z	BACM15C3C (continued)					P034-00/ /		001-099
TB0047	Z	BACM15C3C (continued)					P34/ /		115-199
	A	A041	2	W1242	0037	20		33-42-12	115-199
	X	B005	BJ	W1128	0143	24		24-51-51	ALL
	X	B005	BJ	W1240	0119	24		24-51-51	ALL
	X	B006	BJ	W1128	0165	24		24-51-71	001-099
	X	B006	BJ	W1196	0011	20		33-24-11	115-199
	X	B006	BJ	W1240	0037	20		33-24-11	115-199
	X	B006	BJ	W1240	0155	24		24-51-71	001-099
	X	B023	BJ	W1128	0165	24		24-51-71	115-199
	X	B023	BJ	W1240	0155	24		24-51-71	115-199
	F	C001	2	W1196	0011	18		33-24-11	001-099
	F	C001	2	W1240	0037	18		33-24-11	001-099
	F	C002	2	W1240	0004	16		33-21-11	115-199
	F	C002	2	W1242	0004	16		33-21-11	115-199
	Y	C003	BJ	W1240	0185	24		33-21-11	001-099
	Y	C003	BJ	W1240	0188	24		33-21-11	001-099
	Y	C003	BJ	W1240	0189	24		33-21-11	001-099
	Y	C004	BJ	W1240	0265	22		33-21-51	115-199
	Y	C004	BJ	W1242	0019	22		33-21-51	115-199
	Y	C004	BJ	W1242	0020	22		33-21-51	115-199
	X	C005	BJ	W1128	0131	24		24-41-12	001-099
	X	C005	BJ	W1240	0131	24		24-41-12	001-099
	X	C006	BJ	W1240	0053	22		33-24-11	115-199
	X	C006	BJ	W1242	0025	22		33-24-11	115-199
	Y	C011	BJ	W1196	0010	20		33-24-11	115-199
	Y	C011	BJ	W1240	0038	20		33-24-11	115-199
	Y	C012	BJ	W1240	0047	22		33-24-11	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 38

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0047		BACT44C0900U (continued)					P034-00/ /		001, 003-099, 115-199
TB0047	A	YHLZD-29 (continued)					P034-00/ /		001-099
TB0047	A	YHLZD-29 (continued)					P34/ /		115-199
TB0047	A	YHLZD-33 (continued)					P34/ /		115-199
TB0047	F	BACM15C1A (continued)					P034-00/ /		001-099
TB0047	F	BACM15C1A (continued)					P34/ /		115-199
TB0047	G	BACM15C1B (continued)					P034-00/ /		001-099
TB0047	G	BACM15C1B (continued)					P34/ /		115-199
TB0047	X	BACM15C3A (continued)					P034-00/ /		001-099
TB0047	X	BACM15C3A (continued)					P34/ /		115-199
TB0047	Y	BACM15C3B (continued)					P034-00/ /		001-099
TB0047	Y	BACM15C3B (continued)					P34/ /		115-199
TB0047	Z	BACM15C3C (continued)					P034-00/ /		001-099
TB0047	Z	BACM15C3C (continued)					P34/ /		115-199
	Y	C012	BJ	W1240	0060	22		33-24-11	115-199
	Y	C013	BJ	W1196	0009	22		33-24-11	ALL
	Y	C013	BJ	W1240	0051	22		33-24-11	ALL
	Y	C013	BJ	W1240	0054	22		33-24-11	115-199
	Y	C014	BJ	W1240	0427	24		33-42-12	001-099
	Y	C014	BJ	W1240	0431	24		33-42-12	001-099
	Y	C014	BJ	W1240	0435	24		33-42-12	001-099
	Y	C014	BJ	W1240	0436	24		33-42-12	001-099
	Y	C014	BJ	W1242	0027	20		33-42-12	115-199
	Y	C014	BJ	W1242	0031	20		33-42-12	115-199
	Y	C014	BJ	W1242	0035	20		33-42-12	115-199
	Y	C014	BJ	W1242	0036	20		33-42-12	115-199
	Y	C017	BJ	W1190	0306	22		38-14-11	115-199
	Y	C017	BJ	W1240	0087	22		38-14-11	115-199
	Y	C017	BJ	W1240	0088	22		38-14-11	115-199
	F	C019	2	W1190	0401	16		28-21-11	ALL
	F	C019	2	W1240	0122	16		28-21-11	ALL
	X	C021	BJ	W1128	0131	24		24-41-12	115-199
	X	C021	BJ	W1240	0131	24		24-41-12	115-199
	A	C026	2	W1240	0430	24		33-42-12	001-099
	Y	C028	BJ	W1240	0039	24		33-24-11	001-099
	Y	C028	BJ	W1240	0039	22		33-24-11	115-199
	Y	C028	BJ	W1240	0049	24		33-24-11	001-099
	Y	C028	BJ	W1240	0049	22		33-24-11	115-199
	Y	C028	BJ	W1240	0072	24		33-24-11	001-099
	Y	C028	BJ	W1240	0072	22		33-24-11	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 39

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0047		BACT44C0900U (continued)					P034-00/ /		001, 003-099, 115-199
TB0047	A	YHLZD-29 (continued)					P034-00/ /		001-099
TB0047	A	YHLZD-29 (continued)					P34/ /		115-199
TB0047	A	YHLZD-33 (continued)					P34/ /		115-199
TB0047	F	BACM15C1A (continued)					P034-00/ /		001-099
TB0047	F	BACM15C1A (continued)					P34/ /		115-199
TB0047	G	BACM15C1B (continued)					P034-00/ /		001-099
TB0047	G	BACM15C1B (continued)					P34/ /		115-199
TB0047	X	BACM15C3A (continued)					P034-00/ /		001-099
TB0047	X	BACM15C3A (continued)					P34/ /		115-199
TB0047	Y	BACM15C3B (continued)					P034-00/ /		001-099
TB0047	Y	BACM15C3B (continued)					P34/ /		115-199
TB0047	Z	BACM15C3C (continued)					P034-00/ /		001-099
TB0047	Z	BACM15C3C (continued)					P34/ /		115-199
	Y	C028	BJ	W1240	0073	24		33-24-11	001-099
	Y	C028	BJ	W1240	0073	22		33-24-11	115-199
	Y	C029	BJ	W1240	0019	20		33-22-11	ALL
	Y	C029	BJ	W1240	0062	22		33-26-31	ALL
	Y	C029	BJ	W1240	0078	22		33-26-31	ALL
	A	C041	2	W1242	0030	20		33-42-12	115-199
	X	D005	BJ	W1128	0152	22		33-27-11	001-099
	X	D005	BJ	W1240	0064	22		33-27-11	001-099
	X	D006	BJ	W1128	0144	20		24-51-51	ALL
	X	D006	BJ	W1240	0120	20		24-51-51	001-099
	X	D006	BJ	W1240	0120	24		24-51-51	115-199
TB0051		AMY4100T-10U					E003-01/ /		001, 003-099, 115-199
TB0058		BACT44B0560U					253/207/R006		001, 003-099, 115-199
TB0058	X	BACM15C3A					253/207/R006		001-099
TB0058	X	BACM15C3A					253/207/R6		115-199
TB0058	Y	BACM15C3B					253/207/R006		001-099
TB0058	Y	BACM15C3B					253/207/R6		115-199
TB0058	Z	BACM15C3C					255/187/14		001-099
TB0058	Z	BACM15C3C					253/207/R6		115-199
	Z	3	BJ	W2066	0009	20		33-13-52	ALL
	Z	3	BJ	W2073	0001	20		33-13-52	ALL
	Z	3	BJ	W2295	0016	20		33-13-52	115-199
	Z	3	BJ	W4228	0137	20		33-13-52	ALL
	Z	4	BJ	W2075	0011	22		33-16-61	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 40

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0058		BACT44B0560U (continued)					253/207/R006		001, 003-099, 115-199
TB0058	X	BACM15C3A (continued)					253/207/R006		001-099
TB0058	X	BACM15C3A (continued)					253/207/R6		115-199
TB0058	Y	BACM15C3B (continued)					253/207/R006		001-099
TB0058	Y	BACM15C3B (continued)					253/207/R6		115-199
TB0058	Z	BACM15C3C (continued)					255/187/14		001-099
TB0058	Z	BACM15C3C (continued)					253/207/R6		115-199
	Z	4	BJ	W2078	0039	22		33-16-61	ALL
	Z	4	BJ	W4228	0092	22		33-16-61	ALL
	Z	4	BJ	W4236	0082	22		33-16-61	ALL
	X	A001	BJ	W2070	0029	22		33-16-41	115-199
	X	A001	BJ	W2077	0011	22		33-16-41	115-199
	X	A002	BJ	W2078	0002	24		36-11-41	115-199
	X	A002	BJ	W2078	0069	24		36-11-41	001-099
	X	A002	BJ	W2134	0015	24		36-11-41	ALL
	Y	A005	BJ	W2070	0102	22		23-51-21	ALL
	Y	A005	BJ	W2293	0003	22		23-51-41	001-099
	Y	A005	BJ	W2295	0003	22		23-51-21	ALL
	Y	A006	BJ	W4236	0056	22		78-34-21	115-199
	Y	A006	BJ	W4236	0098	22		78-34-21	115-199
	Y	A006	BJ	W4236	0262	22		78-34-21	115-199
	X	A007	BJ	W2066	2021B	24		23-51-21	115-199
	X	A007	BJ	W2295	2003B	24		23-51-21	115-199
	X	A008	BJ	W2066	2021R	24		23-51-21	115-199
	X	A008	BJ	W2295	2003R	24		23-51-21	115-199
	X	A010	BJ	W2070	0070	20		36-11-21	ALL
	X	A010	BJ	W4236	0184	20		36-11-21	ALL
	X	A011	BJ	W2078	0310	24		21-25-11	ALL
	X	A011	BJ	W4228	0011	24		21-25-11	ALL
	X	A012	BJ	W2078	0188	22		28-25-21	ALL
	X	A012	BJ	W2134	0019	22		28-25-21	ALL
	X	B001	BJ	W2260	0021	22		76-11-12	ALL
	X	B001	BJ	W4236	0010	22		76-11-12	ALL
	X	B007	BJ	W2080	0007	24		24-22-41	ALL
	X	B007	BJ	W2134	0014	24		24-22-41	ALL
	X	B010	BJ	W2070	0071	20		36-11-21	ALL
	X	B010	BJ	W4236	0183	20		36-11-21	ALL
	X	B011	BJ	W2134	0020	22		49-61-11	ALL
	X	B011	BJ	W4228	0083	22		49-61-11	ALL
	X	B012	BJ	W2070	0377	24		21-44-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 41

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0058		BACT44B0560U (continued)					253/207/R006		001, 003-099, 115-199
TB0058	X	BACM15C3A (continued)					253/207/R006		001-099
TB0058	X	BACM15C3A (continued)					253/207/R6		115-199
TB0058	Y	BACM15C3B (continued)					253/207/R006		001-099
TB0058	Y	BACM15C3B (continued)					253/207/R6		115-199
TB0058	Z	BACM15C3C (continued)					255/187/14		001-099
TB0058	Z	BACM15C3C (continued)					253/207/R6		115-199
	X	B012	BJ	W4236	0163	24		21-44-11	ALL
	X	C002	BJ	W2080	0005	24		24-22-41	ALL
	X	C002	BJ	W2134	0013	24		24-22-41	ALL
	Y	C005	BJ	W2078	0145	20		26-22-21	001-099
	Y	C005	BJ	W2134	0007	20		26-22-21	ALL
	Y	C005	BJ	W2134	0008	20		26-22-21	ALL
	Y	C005	BJ	W2134	0012	20		26-22-21	115-199
	X	C007	BJ	W2066	0022	22		24-22-11	ALL
	X	C007	BJ	W4228	0185	22		24-22-11	ALL
	X	C008	BJ	W2260	0020	20		28-22-21	ALL
	X	C008	BJ	W4236	0035	20		28-22-21	ALL
	X	C009	BJ	W2070	0109	22		24-22-21	ALL
	X	C009	BJ	W4236	0069	22		24-22-21	ALL
	X	C010	BJ	W2066	0037	20		36-11-11	ALL
	X	C010	BJ	W4228	0074	20		36-11-11	ALL
	X	C011	BJ	W2134	0021	22		49-61-11	ALL
	X	C011	BJ	W4228	0084	22		49-61-11	ALL
	X	C012	BJ	W2070	0378	24		21-44-11	ALL
	X	C012	BJ	W4236	0164	24		21-44-11	ALL
	Y	C013	BJ	W2070	0241	22		34-53-21	ALL
	Y	C013	BJ	W2077	0003	22		34-53-21	ALL
	Y	C013	BJ	W2077	0025	22		34-53-21	ALL
	Y	C014	BJ	W2078	0504	22		33-16-61	ALL
	Y	C014	BJ	W2134	0025	22		33-16-61	ALL
	Y	C014	BJ	W4236	0126	22		33-16-61	ALL
	Y	CAP	Y	W2156	0176	22		SPARE	115-199
	X	D001	BJ	W2078	0013	24		36-11-41	ALL
	X	D001	BJ	W4228	0181	24		36-11-41	ALL
	X	D007	BJ	W2066	0023	22		24-22-11	ALL
	X	D007	BJ	W4228	0186	22		24-22-11	ALL
	X	D009	BJ	W2070	0110	22		24-22-21	ALL
	X	D009	BJ	W4236	0070	22		24-22-21	ALL
	X	D010	BJ	W2066	0099	20		36-11-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 42

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0058		BACT44B0560U (continued)					253/207/R006		001, 003-099, 115-199
TB0058	X	BACM15C3A (continued)					253/207/R006		001-099
TB0058	X	BACM15C3A (continued)					253/207/R6		115-199
TB0058	Y	BACM15C3B (continued)					253/207/R006		001-099
TB0058	Y	BACM15C3B (continued)					253/207/R6		115-199
TB0058	Z	BACM15C3C (continued)					255/187/14		001-099
TB0058	Z	BACM15C3C (continued)					253/207/R6		115-199
	X	D010	BJ	W4228	0073	20		36-11-11	ALL
	X	D011	BJ	W2134	0022	22		49-61-11	ALL
	X	D011	BJ	W4228	0085	22		49-61-11	ALL
	X	D012	BJ	W2134	0016	24		36-11-41	ALL
	X	D012	BJ	W4228	0180	24		36-11-41	ALL
TB0059		BACT44B0560U					253/207/L006		001, 003-099, 115-199
TB0059	X	BACM15C3A					253/207/L006		001-099
TB0059	X	BACM15C3A					253/207/L6		115-199
TB0059	Y	BACM15C3B					253/207/L006		001-099
TB0059	Y	BACM15C3B					253/207/L6		115-199
TB0059	Z	BACM15C3C					253/207/L006		001-099
TB0059	Z	BACM15C3C					253/207/L6		115-199
	Z	1	BJ	W2066	0357	20		33-13-52	ALL
	Z	1	BJ	W2069	0001	20		33-13-52	001-099
	Z	1	BJ	W2309	0023	20		33-13-52	ALL
	Z	1	BJ	W4236	0075	20		33-13-52	ALL
	Z	2	BJ	W2066	0180	20		33-13-52	ALL
	Z	2	BJ	W2066	0183	20		33-13-52	ALL
	Z	2	BJ	W2066	0359	20		33-13-52	ALL
	Z	2	BJ	W2075	0001	20		33-13-52	ALL
	X	A003	BJ	W2066	0051	22		33-16-11	115-199
	X	A003	BJ	W2075	0011	22		33-16-11	115-199
	X	A004	BJ	W2066	0805	22		33-45-11	ALL
	X	A004	BJ	W2070	0802	22		33-45-11	ALL
	Y	A005	BJ	W4228	0035	20		28-22-21	ALL
	Y	A005	BJ	W4228	0038	20		28-22-21	ALL
	Y	A005	BJ	W4228	0051	20		28-22-21	ALL
	Y	A005	BJ	W4228	0052	20		28-22-21	ALL
	Y	A006	BJ	W2078	0435	22		78-34-11	ALL
	Y	A006	BJ	W4228	0049	22		78-34-11	ALL
	Y	A006	BJ	W4228	0078	22		78-34-11	ALL
	X	A007	BJ	W2156	0017	22		23-51-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 43

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0059		BACT44B0560U (continued)					253/207/L006		001, 003-099, 115-199
TB0059	X	BACM15C3A (continued)					253/207/L006		001-099
TB0059	X	BACM15C3A (continued)					253/207/L6		115-199
TB0059	Y	BACM15C3B (continued)					253/207/L006		001-099
TB0059	Y	BACM15C3B (continued)					253/207/L6		115-199
TB0059	Z	BACM15C3C (continued)					253/207/L006		001-099
TB0059	Z	BACM15C3C (continued)					253/207/L6		115-199
	X	A007	BJ	W2297	0003	22		23-51-11	ALL
	X	A008	BJ	W2156	0021	22		29-11-21	ALL
	X	A008	BJ	W4236	0127	22		29-11-21	ALL
	Y	A011	BJ	W2064	0145	22		34-53-11	ALL
	Y	A011	BJ	W2075	0003	22		34-53-11	ALL
	Y	A011	BJ	W2075	0005	22		34-53-11	115-199
	Y	A011	BJ	W2075	0113	22		34-53-11	001-099
	X	A014	BJ	W2066	2022B	24		23-51-11	115-199
	X	A014	BJ	W2297	2003B	24		23-51-11	115-199
	X	A015	BJ	W2066	2022R	24		23-51-11	115-199
	X	A015	BJ	W2297	2003R	24		23-51-11	115-199
	X	B003	BJ	W2066	0050	22		33-16-11	115-199
	X	B003	BJ	W2075	0012	22		33-16-11	115-199
	X	B004	BJ	W2156	0081	22		76-11-11	ALL
	X	B004	BJ	W4228	0010	22		76-11-11	ALL
	X	B007	BJ	W2070	0172	22		29-11-21	ALL
	X	B007	BJ	W4236	0093	22		29-11-21	ALL
	X	B010	BJ	W2156	0124	24		21-25-11	ALL
	X	B010	BJ	W4236	0079	24		21-25-11	ALL
	X	C003	BJ	W2156	0024	20		28-22-21	ALL
	X	C003	BJ	W4228	0034	20		28-22-21	ALL
	X	C007	BJ	W2070	0173	22		29-11-21	ALL
	X	C007	BJ	W4236	0094	22		29-11-21	ALL
	X	C008	BJ	W2070	0806	24		34-22-93	115-199
	X	C008	BJ	W2229	0007	24		34-22-93	115-199
	X	C009	BJ	W2064	0190	22		34-57-11	001-099
	X	C009	BJ	W2064	0190	20		34-57-11	115-199
	X	C009	BJ	W2227	0002	20		34-57-11	001-099
	X	C009	BJ	W2227	1002	20		34-57-11	115-199
	X	C010	BJ	W2066	0418	24		21-43-11	ALL
	X	C010	BJ	W4228	0176	24		21-43-11	ALL
	X	D007	BJ	W2070	0174	22		29-11-21	ALL
	X	D007	BJ	W4236	0092	22		29-11-21	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 44

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0059		BACT44B0560U (continued)					253/207/L006		001, 003-099, 115-199
TB0059	X	BACM15C3A (continued)					253/207/L006		001-099
TB0059	X	BACM15C3A (continued)					253/207/L6		115-199
TB0059	Y	BACM15C3B (continued)					253/207/L006		001-099
TB0059	Y	BACM15C3B (continued)					253/207/L6		115-199
TB0059	Z	BACM15C3C (continued)					253/207/L006		001-099
TB0059	Z	BACM15C3C (continued)					253/207/L6		115-199
	X	D008	BJ	W2064	0800	24		34-22-83	115-199
	X	D008	BJ	W2227	0007	24		34-22-83	115-199
	X	D009	BJ	W2078	0434	22		34-57-21	ALL
	X	D009	BJ	W2229	1002	22		34-57-21	001-009
	X	D009	BJ	W2229	1002	20		34-57-21	010-099, 115-199
	X	D010	BJ	W2066	0419	24		21-43-11	ALL
	X	D010	BJ	W4228	0177	24		21-43-11	ALL
	X	DED		W2227	1002Z			34-57-11	115-199
	X	DED		W2229	1002Z			34-57-21	ALL
TB0061		YHLS-33					272/280/L015		ALL
TB0064		AMY4100T-10					***/*/		001, 003-099, 115-199
TB0064	Y	BACM15C3B					P1-3/ /		ALL
TB0064	Z	BACM15C3C					P1-3/ /		ALL
	Z	1	BJ	W0101	0032	22		33-16-51	ALL
	Z	1	BJ	W0101	0034	22		33-16-51	ALL
	Z	1	BJ	W0101	0036	22		33-16-51	ALL
	Z	1	BJ	W0101	0038	22		33-16-51	ALL
	Z	1	BJ	W0101	0040	22		33-16-51	ALL
	Z	1	BJ	W0101	0042	22		33-16-51	ALL
	Z	1	BJ	W0101	0044	22		33-16-51	ALL
	Z	1	BJ	W0101	0142	22		33-16-51	ALL
	Z	10	BJ	W0101	0068	22		33-16-41	ALL
	Z	10	BJ	W0101	0070	22		33-16-41	ALL
	Z	10	BJ	W0101	0071	22		33-16-41	ALL
	Z	10	BJ	W0101	0072	22		33-16-41	ALL
	Z	10	BJ	W0101	0074	22		33-16-41	ALL
	Z	10	BJ	W0101	0082	22		33-16-41	ALL
	Z	10	BJ	W0101	0114	22		33-16-41	ALL
	Z	15	BJ	W0101	0051	22		33-16-41	ALL
	Z	15	BJ	W0101	0052	22		33-16-41	ALL
	Z	15	BJ	W0101	0053	22		33-16-41	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 45

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
TB0064		AMY4100T-10 (continued)					***/*/		001, 003-099, 115-199
TB0064	Y	BACM15C3B (continued)					P1-3/ /		ALL
TB0064	Z	BACM15C3C (continued)					P1-3/ /		ALL
	Z	15	BJ	W0101	0056	22		33-16-41	ALL
	Z	15	BJ	W0101	0060	22		33-16-41	ALL
	Z	15	BJ	W0101	0087	22		33-16-41	ALL
	Z	15	BJ	W0101	0113	22		33-16-41	ALL
	Z	16	BJ	W0101	0083	22		33-16-41	ALL
	Z	16	BJ	W0101	0084	22		33-16-41	ALL
	Z	16	BJ	W0101	0085	22		33-16-41	ALL
	Z	16	BJ	W0101	0086	22		33-16-41	ALL
	Z	16	BJ	W0101	0087	22		33-16-41	ALL
	Z	16	BJ	W0101	0154	22		33-16-41	ALL
	Z	17	BJ	W0101	0023	22		33-16-51	ALL
	Z	17	BJ	W0101	0025	22		33-16-51	ALL
	Z	17	BJ	W0101	0027	22		33-16-51	ALL
	Z	17	BJ	W0101	0136	22		33-16-51	ALL
	Z	17	BJ	W0101	0141	22		33-16-51	ALL
	Z	18	BJ	W0101	0024	22		33-16-51	ALL
	Z	18	BJ	W0101	0026	22		33-16-51	ALL
	Z	18	BJ	W0101	0028	22		33-16-51	ALL
	Z	18	BJ	W0101	0107	22		33-16-51	ALL
	Z	18	BJ	W0101	0137	22		33-16-51	ALL
	Z	18	BJ	W0101	0142	22		33-16-51	ALL
	Z	2	BJ	W0101	0033	22		33-16-51	ALL
	Z	2	BJ	W0101	0035	22		33-16-51	ALL
	Z	2	BJ	W0101	0037	22		33-16-51	ALL
	Z	2	BJ	W0101	0039	22		33-16-51	ALL
	Z	2	BJ	W0101	0041	22		33-16-51	ALL
	Z	2	BJ	W0101	0043	22		33-16-51	ALL
	Z	2	BJ	W0101	0045	22		33-16-51	ALL
	Z	2	BJ	W0101	0141	22		33-16-51	ALL
	Z	3	BJ	W0101	0062	22		33-16-11	115-199
	Z	4	BJ	W0101	0049	22		33-16-11	ALL
	Z	4	BJ	W0101	0050	22		33-16-11	ALL
	Z	4	BJ	W0101	0054	22		33-16-11	ALL
	Z	4	BJ	W0101	0055	22		33-16-11	ALL
	Z	4	BJ	W0101	0061	22		33-16-11	ALL
	Z	4	BJ	W0101	0062	22		33-16-11	115-199
	Z	7	BJ	W0101	0065	22		33-16-21	ALL
	Z	7	BJ	W0101	0066	22		33-16-21	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 46

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0064		AMY4100T-10 (continued)					***/*/		001, 003-099, 115-199
TB0064	Y	BACM15C3B (continued)					P1-3/ /		ALL
TB0064	Z	BACM15C3C (continued)					P1-3/ /		ALL
	Z	7	BJ	W0101	0067	22		33-16-21	ALL
	Z	8	BJ	W0101	0064	22		33-16-21	ALL
	Z	8	BJ	W0101	0067	22		33-16-21	ALL
	Z	8	BJ	W0101	0069	22		33-16-21	ALL
	Z	8	BJ	W0101	0073	22		33-16-21	ALL
	Z	9	BJ	W0101	0079	22		33-16-41	ALL
	Z	9	BJ	W0101	0080	22		33-16-41	ALL
	Z	9	BJ	W0101	0081	22		33-16-41	ALL
	Z	9	BJ	W0101	0082	22		33-16-41	ALL
	Z	9	BJ	W0101	0088	22		33-16-41	ALL
	Z	9	BJ	W0101	0155	22		33-16-41	ALL
	Y	A006	BJ	W0101	0009	22		32-42-12	ALL
	Y	A006	BJ	W0101	0097	22		32-42-12	ALL
	Y	A006	BJ	W0101	0098	22		32-42-12	ALL
	Y	A006	BJ	W0101	0156	22		32-42-12	ALL
	Y	A011	BJ	W0101	0016	22		34-46-11	ALL
	Y	A011	BJ	W0101	0022	22		34-46-11	ALL
	Y	A011	BJ	W0101	0031	22		34-46-11	ALL
	Y	A012	BJ	W0101	0001	22		26-11-11	ALL
	Y	A012	BJ	W0101	0003	22		26-11-11	ALL
	Y	A012	BJ	W0101	0004	22		26-11-11	ALL
	Y	A013	BJ	W0101	0110	22		33-16-51	ALL
	Y	A013	BJ	W0101	0135	22		33-16-51	ALL
	Y	A013	BJ	W0101	0152	22		33-16-51	ALL
	Y	C005	BJ	W0101	0119	24		21-33-12	ALL
	Y	C005	BJ	W0101	0120	24		21-33-12	ALL
	Y	C005	BJ	W0101	0121	24		21-33-12	ALL
	Y	C011	BJ	W0101	0008	22		34-46-11	ALL
	Y	C011	BJ	W0101	0011	22		34-46-11	ALL
	Y	C011	BJ	W0101	0012	22		34-46-11	ALL
	Y	C013	BJ	W0101	0109	22		33-16-51	ALL
	Y	C013	BJ	W0101	0133	22		33-16-51	ALL
	Y	C013	BJ	W0101	0151	22		33-16-51	ALL
TB0065	X	BACM15C3A					P10/ /		ALL
TB0065	Y	BACM15C3B					P10/ /		ALL
	X	A001	BJ	W0445	0000WY	24		22-11-12	ALL
	X	A001	BJ	W2355	0001	22		22-11-12	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 47

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0065	X	BACM15C3A (continued)					P10/ /		ALL
TB0065	Y	BACM15C3B (continued)					P10/ /		ALL
	X	A002	BJ	W0443	0000KY	24		22-11-12	ALL
	X	A002	BJ	W2355	0005	22		22-11-12	ALL
	X	A003	BJ	W0445	0000WK	24		22-11-22	ALL
	X	A003	BJ	W2357	0001	22		22-11-22	ALL
	X	A004	BJ	W0445	0000RG	24		22-11-32	ALL
	X	A004	BJ	W2359	0001	22		22-11-32	ALL
	Y	A005	BJ	W0443	0000V	24		27-41-11	ALL
	Y	A005	BJ	W0445	0000V	24		27-41-21	ALL
	Y	A005	BJ	W2357	0036Y	22		27-41-21	ALL
	Y	A006	BJ	W0443	0000WV	24		27-41-11	ALL
	Y	A006	BJ	W0445	0000WV	24		27-41-21	ALL
	Y	A006	BJ	W2355	0084Y	22		27-41-11	ALL
	Y	A007	BJ	W0443	0000O	24		27-41-11	ALL
	Y	A007	BJ	W0445	0000O	24		27-41-21	ALL
	Y	A007	BJ	W2355	0086Y	22		27-41-11	ALL
	Y	A008	BJ	W0443	0000P	24		23-51-11	ALL
	Y	A008	BJ	W0443	0000RK	24		23-51-11	ALL
	Y	A008	BJ	W2297	0005	24		23-51-11	ALL
	X	A009	BJ	W0443	0000WO	24		23-51-11	ALL
	X	A009	BJ	W2297	0004	24		23-51-11	ALL
	X	A010	BJ	W0445	0000WO	24		23-51-21	ALL
	X	A010	BJ	W2295	0004	24		23-51-21	ALL
	Y	A011	BJ	W2295	2504B	24		23-51-21	009
	Y	A011	BJ	W2295	5001B	24		23-51-21	115-199
	Y	A011	BJ	W2297	2504B	24		23-51-11	009
	Y	A011	BJ	W2297	5001B	24		23-51-11	115-199
	Y	A011	BJ	W2309	5003B	24		34-46-12	009, 115-199
	Y	A012	BJ	W2295	2504Z			23-51-21	009
	Y	A012	BJ	W2295	5001Z			23-51-21	115-199
	Y	A012	BJ	W2297	2504Z			23-51-11	009
	Y	A012	BJ	W2297	5001Z			23-51-11	115-199
	Y	A012	BJ	W2309	5003Z			34-46-12	009, 115-199
	X	B001	BJ	W0445	0000WP	24		22-11-12	ALL
	X	B001	BJ	W2355	0002	22		22-11-12	ALL
	X	B002	BJ	W0443	0000WP	24		22-11-12	ALL
	X	B002	BJ	W2355	0006	22		22-11-12	ALL
	X	B003	BJ	W0443	0000WB	24		22-11-22	ALL
	X	B003	BJ	W2357	0002	22		22-11-22	ALL
	X	B004	BJ	W0443	0000WN	24		22-11-32	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 48

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0065	X	BACM15C3A (continued)					P10/ /		ALL
TB0065	Y	BACM15C3B (continued)					P10/ /		ALL
	X	B004	BJ	W2359	0004	22		22-11-32	ALL
	X	C001	BJ	W0445	0000KY	24		22-11-12	ALL
	X	C001	BJ	W2355	0003	22		22-11-12	ALL
	X	C002	BJ	W0443	0000WG	24		22-11-12	ALL
	X	C002	BJ	W2355	0007	22		22-11-12	ALL
	X	C003	BJ	W0445	0000WB	24		22-11-22	ALL
	X	C003	BJ	W2357	0003	22		22-11-22	ALL
	X	C004	BJ	W0443	0000WK	24		22-11-22	ALL
	X	C004	BJ	W2357	0003	22		22-11-22	ALL
	Y	C005	BJ	W0443	0000K	24		27-41-11	ALL
	Y	C005	BJ	W0445	0000K	24		27-41-21	ALL
	Y	C005	BJ	W2357	0029Y	22		27-41-21	ALL
	Y	C006	BJ	W0443	0000N	24		27-41-11	ALL
	Y	C006	BJ	W0445	0000N	24		27-41-21	ALL
	Y	C006	BJ	W2355	0085Y	22		27-41-11	ALL
	Y	C008	BJ	W0445	0000P	24		23-51-21	ALL
	Y	C008	BJ	W0445	0000RK	24		23-51-21	ALL
	Y	C008	BJ	W2295	0005	24		23-51-21	ALL
	X	C009	BJ	W0443	0000WR	24		23-51-11	ALL
	X	C009	BJ	W2297	0006	24		23-51-11	ALL
	X	C010	BJ	W0445	0000WR	24		23-51-21	ALL
	X	C010	BJ	W2295	0006	24		23-51-21	ALL
	Y	C011	BJ	W2295	2504R	24		23-51-21	009
	Y	C011	BJ	W2295	5001R	24		23-51-21	115-199
	Y	C011	BJ	W2297	2504R	24		23-51-11	009
	Y	C011	BJ	W2297	5001R	24		23-51-11	115-199
	Y	C011	BJ	W2309	5003R	24		34-46-12	009, 115-199
	X	CAP	Y	W0443	0000B	24		SPARE	ALL
	X	CAP	Y	W0443	0000G	24		SPARE	ALL
	X	CAP	Y	W0443	0000R	24		SPARE	ALL
	X	CAP	Y	W0443	0000Y	24		SPARE	ALL
	X	CAP	Y	W0445	0000B	24		SPARE	ALL
	X	CAP	Y	W0445	0000G	24		SPARE	ALL
	X	CAP	Y	W0445	0000R	24		SPARE	ALL
	X	CAP	Y	W0445	0000Y	24		SPARE	ALL
	X	D001	BJ	W0445	0000WG	24		22-11-12	ALL
	X	D001	BJ	W2355	0004	22		22-11-12	ALL
	X	D002	BJ	W0443	0000WY	24		22-11-12	ALL
	X	D002	BJ	W2355	0004	22		22-11-12	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 49

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0065	X	BACM15C3A (continued)					P10/ /		ALL
TB0065	Y	BACM15C3B (continued)					P10/ /		ALL
	X	D003	BJ	W0445	0000WN	24		22-11-32	ALL
	X	D003	BJ	W2359	0004	22		22-11-32	ALL
	X	D004	BJ	W0443	0000RG	24		22-11-32	ALL
	X	D004	BJ	W2359	0007	22		22-11-32	ALL
TB0069		285N0031-3					P054-00/ /		001, 003-099, 115-199
TB0069	Y	BACM15C3B					P54/ /		ALL
TB0069	Z	BACM15C3C					P54/ /		ALL
	Z	1	BJ	W1120	0001	24		26-11-11	001-099
	Z	1	BJ	W1120	0007	24		26-11-11	115-199
	Z	1	BJ	W1120	0009	24		26-11-11	001-099
	Z	1	BJ	W1120	0023	24		26-11-11	001-099
	Z	1	BJ	W1120	0046	24		26-11-12	115-199
	Z	1	BJ	W1120	0074	24		26-11-12	001-099
	Z	1	BJ	W1120	0079	24		26-11-12	001-099
	Z	1	BJ	W1120	0127	24		26-12-11	115-199
	Z	1	BJ	W1120	0374	24		26-13-11	ALL
	Z	1	BJ	W1120	0476	24		26-11-11	115-199
	Z	1	BJ	W1120	0483	24		26-11-12	115-199
	Z	1	BJ	W1120	0498	24		26-12-11	001-099
	Z	1	BJ	W1120	0505	24		26-11-11	115-199
	Z	10	BJ	W1120	0155	24		26-15-11	115-199
	Z	10	BJ	W1120	0156	24		26-15-11	115-199
	Z	10	BJ	W1120	0159	24		26-15-11	115-199
	Z	10	BJ	W1120	0162	24		26-15-11	115-199
	Z	10	BJ	W1120	0186	24		26-15-11	001-099
	Z	10	BJ	W1120	0198	24		26-15-11	001-099
	Z	10	BJ	W1120	0201	24		26-15-11	001-099
	Z	10	BJ	W1120	0214	24		26-15-11	001-099
	Z	10	BJ	W1120	0275	22		31-51-21	ALL
	Z	13	BJ	W1120	0081	24		26-11-21	115-199
	Z	13	BJ	W1120	0090	24		26-11-21	001-099
	Z	13	BJ	W1120	0091	24		26-11-21	001-099
	Z	13	BJ	W1120	0111	24		26-11-21	001-099
	Z	13	BJ	W1120	0116	24		26-11-22	115-199
	Z	13	BJ	W1120	0129	24		26-11-21	001-099
	Z	13	BJ	W1120	0140	24		26-12-21	115-199
	Z	13	BJ	W1120	0142	24		26-11-22	001-099
	Z	13	BJ	W1120	0147	24		26-11-22	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 50

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0069		285N0031-3 (continued)					P054-00/ /		001, 003-099, 115-199
TB0069	Y	BACM15C3B (continued)					P54/ /		ALL
TB0069	Z	BACM15C3C (continued)					P54/ /		ALL
	Z	13	BJ	W1120	0223	24		26-11-21	115-199
	Z	13	BJ	W1120	0403	24		26-13-21	ALL
	Z	13	BJ	W1120	0484	24		26-11-21	115-199
	Z	13	BJ	W1120	0508	24		26-11-21	115-199
	Z	13	BJ	W1120	0510	24		26-11-22	115-199
	Z	13	BJ	W1120	0524	24		26-12-21	001-099
	Z	14	BJ	W1120	0082	24		26-11-21	115-199
	Z	14	BJ	W1120	0083	24		26-11-21	115-199
	Z	14	BJ	W1120	0087	24		26-11-21	115-199
	Z	14	BJ	W1120	0091	24		26-11-21	115-199
	Z	14	BJ	W1120	0119	24		26-11-21	001-099
	Z	14	BJ	W1120	0130	24		26-11-21	001-099
	Z	14	BJ	W1120	0131	24		26-11-21	001-099
	Z	14	BJ	W1120	0133	24		26-11-21	001-099
	Z	14	BJ	W1120	0274	22		31-51-21	ALL
	Z	14	BJ	W1120	0399	24		26-13-21	ALL
	Z	17	BJ	W1120	0157	24		26-15-11	115-199
	Z	17	BJ	W1120	0158	24		26-15-11	115-199
	Z	17	BJ	W1120	0174	24		26-15-11	001-099
	Z	17	BJ	W1120	0181	24		26-15-11	001-099
	Z	17	BJ	W1120	0196	24		26-15-11	001-099
	Z	17	BJ	W1120	0197	24		26-15-11	001-099
	Z	17	BJ	W1120	0213	24		26-15-11	001-099
	Z	17	BJ	W1120	0298	24		26-15-11	115-199
	Z	17	BJ	W1120	0496	24		26-15-11	115-199
	Z	17	BJ	W1120	0499	24		26-15-11	115-199
	Z	18	BJ	W1120	0063	24		26-11-21	115-199
	Z	18	BJ	W1120	0089	24		26-11-21	001-099
	Z	18	BJ	W1120	0097	24		26-11-21	001-099
	Z	18	BJ	W1120	0106	24		26-11-22	115-199
	Z	18	BJ	W1120	0124	24		26-11-21	001-099
	Z	18	BJ	W1120	0137	24		26-12-21	115-199
	Z	18	BJ	W1120	0159	24		26-11-22	001-099
	Z	18	BJ	W1120	0164	24		26-11-22	001-099
	Z	18	BJ	W1120	0402	24		26-13-21	ALL
	Z	18	BJ	W1120	0485	24		26-11-21	115-199
	Z	18	BJ	W1120	0507	24		26-11-21	115-199
	Z	18	BJ	W1120	0509	24		26-11-22	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 51

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0069		285N0031-3 (continued)					P054-00/ /		001, 003-099, 115-199
TB0069	Y	BACM15C3B (continued)					P54/ /		ALL
TB0069	Z	BACM15C3C (continued)					P54/ /		ALL
	Z	18	BJ	W1120	0523	24		26-12-21	001-099
	Z	2	BJ	W1120	0022	24		26-11-11	001-099
	Z	2	BJ	W1120	0036	24		26-11-11	115-199
	Z	2	BJ	W1120	0037	24		26-11-11	115-199
	Z	2	BJ	W1120	0043	24		26-11-11	001-099
	Z	2	BJ	W1120	0089	24		26-11-21	115-199
	Z	2	BJ	W1120	0123	24		26-11-21	001-099
	Z	2	BJ	W1120	0166	24		26-15-11	115-199
	Z	2	BJ	W1120	0210	24		26-15-11	001-099
	Z	2	BJ	W1120	0266	24		26-16-11	001-099
	Z	2	BJ	W1120	0267	24		26-16-11	001-099
	Z	2	BJ	W1120	0357	24		26-16-11	115-199
	Z	2	BJ	W1120	0358	24		26-16-11	115-199
	Z	2	BJ	W1120	0369	24		26-13-11	ALL
	Z	2	BJ	W1120	0400	24		26-13-21	ALL
	Z	5	BJ	W1120	0028	24		26-11-11	115-199
	Z	5	BJ	W1120	0029	24		26-11-11	115-199
	Z	5	BJ	W1120	0032	24		26-11-11	115-199
	Z	5	BJ	W1120	0036	24		26-11-11	001-099
	Z	5	BJ	W1120	0047	24		26-11-11	001-099
	Z	5	BJ	W1120	0048	24		26-11-11	001-099
	Z	5	BJ	W1120	0088	24		26-11-21	115-199
	Z	5	BJ	W1120	0120	24		26-11-21	001-099
	Z	5	BJ	W1120	0212	24		26-15-11	001-099
	Z	5	BJ	W1120	0265	24		26-16-11	001-099
	Z	5	BJ	W1120	0296	24		26-15-11	115-199
	Z	5	BJ	W1120	0356	24		26-16-11	115-199
	Z	5	BJ	W1120	0371	24		26-13-11	ALL
	Z	5	BJ	W1120	0397	24		26-13-21	ALL
	Z	6	BJ	W1120	0030	24		26-11-11	115-199
	Z	6	BJ	W1120	0031	24		26-11-11	115-199
	Z	6	BJ	W1120	0037	24		26-11-11	001-099
	Z	6	BJ	W1120	0049	24		26-11-11	001-099
	Z	6	BJ	W1120	0090	24		26-11-21	115-199
	Z	6	BJ	W1120	0122	24		26-11-21	001-099
	Z	6	BJ	W1120	0167	24		26-15-11	115-199
	Z	6	BJ	W1120	0211	24		26-15-11	001-099
	Z	6	BJ	W1120	0268	24		26-16-11	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 52

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0069		285N0031-3 (continued)					P054-00/ /		001, 003-099, 115-199
TB0069	Y	BACM15C3B (continued)					P54/ /		ALL
TB0069	Z	BACM15C3C (continued)					P54/ /		ALL
	Z	6	BJ	W1120	0359	24		26-16-11	115-199
	Z	6	BJ	W1120	0372	24		26-13-11	ALL
	Z	6	BJ	W1120	0398	24		26-13-21	ALL
	Z	9	BJ	W1120	0002	24		26-11-11	001-099
	Z	9	BJ	W1120	0003	24		26-11-11	001-099
	Z	9	BJ	W1120	0012	24		26-11-11	115-199
	Z	9	BJ	W1120	0026	24		26-11-11	001-099
	Z	9	BJ	W1120	0027	24		26-11-11	115-199
	Z	9	BJ	W1120	0046	24		26-11-11	001-099
	Z	9	BJ	W1120	0048	24		26-11-12	115-199
	Z	9	BJ	W1120	0057	24		26-11-12	001-099
	Z	9	BJ	W1120	0062	24		26-11-12	001-099
	Z	9	BJ	W1120	0128	24		26-12-11	115-199
	Z	9	BJ	W1120	0375	24		26-13-11	ALL
	Z	9	BJ	W1120	0475	24		26-11-11	115-199
	Z	9	BJ	W1120	0499	24		26-12-11	001-099
	Z	9	BJ	W1120	0504	24		26-11-12	115-199
	Z	9	BJ	W1120	0506	24		26-11-11	115-199
	Y	A003	BJ	W1120	0164	24		26-15-11	115-199
	Y	A003	BJ	W1120	0187	24		26-15-11	001-099
	Y	A003	BJ	W1120	0192	24		26-15-11	001-099
	Y	A003	BJ	W1120	0195	24		26-15-11	001-099
	Y	A003	BJ	W1120	0297	24		26-15-11	115-199
	Y	A003	BJ	W1120	0497	24		26-15-11	115-199
	Y	A003	BJ	W1120	0502	24		26-15-11	115-199
	Y	A004	BJ	W1120	0120	24		26-12-11	115-199
	Y	A004	BJ	W1120	0121	24		26-12-11	115-199
	Y	A004	BJ	W1120	0124	24		26-12-11	115-199
	Y	A004	BJ	W1120	0328	22		26-22-21	001-099
	Y	A004	BJ	W1120	0331	22		26-22-21	001-099
	Y	A004	BJ	W1120	0335	22		26-22-21	001-099
	Y	A007	BJ	W1120	0038	24		26-11-11	115-199
	Y	A007	BJ	W1120	0039	24		26-11-11	115-199
	Y	A007	BJ	W1120	0059	24		26-11-12	115-199
	Y	A008	BJ	W1120	0104	24		26-11-22	115-199
	Y	A008	BJ	W1120	0108	24		26-11-22	115-199
	Y	A008	BJ	W1120	0114	24		26-11-22	115-199
	Y	A008	BJ	W1120	0139	24		26-12-21	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 53

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0069		285N0031-3 (continued)					P054-00/ /		001, 003-099, 115-199
TB0069	Y	BACM15C3B (continued)					P54/ /		ALL
TB0069	Z	BACM15C3C (continued)					P54/ /		ALL
	Y	A008	BJ	W1120	0149	24		26-11-22	001-099
	Y	A008	BJ	W1120	0169	24		26-11-22	001-099
	Y	A008	BJ	W1120	0170	24		26-11-22	001-099
	Y	A008	BJ	W1120	0505	24		26-12-21	001-099
	Y	A011	BJ	W1120	0244	20		26-22-21	115-199
	Y	A011	BJ	W1120	0249	20		26-22-21	115-199
	Y	A011	BJ	W1120	0250	20		26-22-21	115-199
	Y	A011	BJ	W1120	0281	20		26-15-12	115-199
	Y	A011	BJ	W1120	0327	20		26-22-21	001-099
	Y	A011	BJ	W1120	0330	20		26-22-21	001-099
	Y	A011	BJ	W1120	0334	20		26-22-21	001-099
	Y	A012	BJ	W1120	0034	24		26-11-11	001-099
	Y	A012	BJ	W1120	0073	24		26-11-12	001-099
	Y	A012	BJ	W1120	0117	24		26-12-11	115-199
	Y	A012	BJ	W1120	0130	24		26-12-11	115-199
	Y	A012	BJ	W1120	0287	24		26-12-11	115-199
	Y	A012	BJ	W1120	0476	24		26-11-11	001-099
	Y	A015	BJ	W1120	0184	24		26-16-11	115-199
	Y	A015	BJ	W1120	0185	24		26-16-11	115-199
	Y	A015	BJ	W1120	0232	24		26-16-11	001-099
	Y	A015	BJ	W1120	0243	24		26-16-11	001-099
	Y	A015	BJ	W1120	0272	22		31-51-21	ALL
	Y	A015	BJ	W1120	0286	24		26-16-11	001-099
	Y	A015	BJ	W1120	0338	24		26-16-11	115-199
	Y	A019	BJ	W1120	0486	24		26-12-11	001-099
	Y	A019	BJ	W1120	0487	24		26-12-11	001-099
	Y	A019	BJ	W1120	0503	24		26-12-11	001-099
	Y	A020	BJ	W1120	0482	24		26-12-11	001-099
	Y	A020	BJ	W1120	0483	24		26-12-11	001-099
	Y	A020	BJ	W1120	0502	24		26-12-11	001-099
	Y	C003	BJ	W1120	0160	24		26-15-11	115-199
	Y	C003	BJ	W1120	0163	24		26-15-11	115-199
	Y	C003	BJ	W1120	0165	24		26-15-11	115-199
	Y	C003	BJ	W1120	0185	24		26-15-11	001-099
	Y	C003	BJ	W1120	0199	24		26-15-11	001-099
	Y	C003	BJ	W1120	0215	24		26-15-11	001-099
	Y	C004	BJ	W1120	0110	24		26-11-21	001-099
	Y	C004	BJ	W1120	0132	24		26-12-21	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 54

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0069		285N0031-3 (continued)					P054-00/ /		001, 003-099, 115-199
TB0069	Y	BACM15C3B (continued)					P54/ /		ALL
TB0069	Z	BACM15C3C (continued)					P54/ /		ALL
	Y	C004	BJ	W1120	0133	24		26-12-21	115-199
	Y	C004	BJ	W1120	0158	24		26-11-22	001-099
	Y	C004	BJ	W1120	0401	24		26-13-21	115-199
	Y	C004	BJ	W1120	0477	24		26-11-21	001-099
	Y	C007	BJ	W1120	0080	24		26-11-21	115-199
	Y	C007	BJ	W1120	0093	24		26-11-21	115-199
	Y	C007	BJ	W1120	0094	24		26-11-22	115-199
	Y	C007	BJ	W1120	0511	24		26-12-21	001-099
	Y	C007	BJ	W1120	0512	24		26-12-21	001-099
	Y	C007	BJ	W1120	0528	24		26-12-21	001-099
	Y	C008	BJ	W1120	0136	24		26-12-21	115-199
	Y	C008	BJ	W1120	0234	24		26-16-11	001-099
	Y	C008	BJ	W1120	0235	24		26-16-11	001-099
	Y	C008	BJ	W1120	0245	24		26-16-11	001-099
	Y	C008	BJ	W1120	0293	24		26-12-21	115-199
	Y	C008	BJ	W1120	0295	24		26-12-21	115-199
	Y	C011	BJ	W1120	0047	24		26-11-12	115-199
	Y	C011	BJ	W1120	0049	24		26-11-12	115-199
	Y	C011	BJ	W1120	0072	24		26-11-12	001-099
	Y	C011	BJ	W1120	0084	24		26-11-12	001-099
	Y	C011	BJ	W1120	0085	24		26-11-12	001-099
	Y	C011	BJ	W1120	0285	24		26-12-11	115-199
	Y	C011	BJ	W1120	0286	24		26-12-11	115-199
	Y	C011	BJ	W1120	0480	24		26-12-11	001-099
	Y	C012	BJ	W1120	0142	24		26-12-21	115-199
	Y	C012	BJ	W1120	0292	24		26-12-21	115-199
	Y	C012	BJ	W1120	0294	24		26-12-21	115-199
	Y	C012	BJ	W1120	0340	20		26-23-11	001-099
	Y	C012	BJ	W1120	0341	20		26-23-11	001-099
	Y	C012	BJ	W1120	0344	22		26-23-11	001-099
	Y	C015	BJ	W1120	0350	20		26-23-11	001-099
	Y	C015	BJ	W1120	0351	20		26-23-11	001-099
	Y	C015	BJ	W1120	0354	22		26-23-11	001-099
	Y	C016	BJ	W1120	0186	24		26-16-11	115-199
	Y	C016	BJ	W1120	0187	24		26-16-11	115-199
	Y	C016	BJ	W1120	0233	24		26-16-11	001-099
	Y	C016	BJ	W1120	0244	24		26-16-11	001-099
	Y	C016	BJ	W1120	0277	22		31-51-21	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 55

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0069		285N0031-3 (continued)					P054-00/ /		001, 003-099, 115-199
TB0069	Y	BACM15C3B (continued)					P54/ /		ALL
TB0069	Z	BACM15C3C (continued)					P54/ /		ALL
	Y	C016	BJ	W1120	0285	24		26-16-11	001-099
	Y	C016	BJ	W1120	0337	24		26-16-11	115-199
	Y	C019	BJ	W1120	0401	24		26-13-21	001-099
	Y	C019	BJ	W1120	0504	24		26-12-21	001-099
	Y	C019	BJ	W1120	0526	24		26-12-21	001-099
	Y	C020	BJ	W1120	0507	24		26-12-21	001-099
	Y	C020	BJ	W1120	0508	24		26-12-21	001-099
	Y	C020	BJ	W1120	0527	24		26-12-21	001-099
TB0070		BACT44B0560U					P003-01/ /		001, 003-099, 115-199
TB0070	Z	BACM15C3C					P003-01/ /		ALL
	Z	3	BJ	W0002	0039	20		33-13-21	ALL
	Z	3	BJ	W0002	0041	20		33-13-21	ALL
	Z	3	BJ	W0002	0043	20		33-13-21	ALL
	Z	3	BJ	W0002	0045	20		33-13-21	ALL
	Z	3	BJ	W0002	0047	20		33-13-21	ALL
	Z	3	BJ	W0002	0049	20		33-13-21	ALL
	Z	3	BJ	W0002	0053	20		33-13-21	ALL
	Z	3	BJ	W0002	0124	20		31-51-31	ALL
	Z	4	BJ	W0002	0038	20		33-13-21	ALL
	Z	4	BJ	W0002	0040	20		33-13-21	ALL
	Z	4	BJ	W0002	0044	20		33-13-21	ALL
	Z	4	BJ	W0002	0046	20		33-13-21	ALL
	Z	4	BJ	W0002	0048	20		33-13-21	ALL
	Z	4	BJ	W0002	0052	20		33-13-21	ALL
	Z	5	BJ	W0002	0055	22		33-16-51	ALL
	Z	5	BJ	W0002	0056	22		33-16-51	ALL
	Z	5	BJ	W0002	0060	22		33-16-51	ALL
	Z	5	BJ	W0002	0061	22		33-16-51	ALL
	Z	5	BJ	W0002	0063	22		33-16-51	ALL
	Z	5	BJ	W0002	0064	22		33-16-51	ALL
	Z	5	BJ	W0002	0065	22		33-16-51	ALL
	Z	6	BJ	W0002	0123	24		31-51-31	ALL
	Z	6	BJ	W0002	0124	20		31-51-31	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 56

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0071		AMY4100-T-10U					P003-01/ /		001, 003-099, 115-199
TB0071	A	YHLZD-33					P003-01/ /		ALL
TB0071	Y	BACM15C3B					P003-01/ /		ALL
TB0071	Z	BACM15C3C					P003-01/ /		ALL
	Z	5	BJ	W0002	0001	22		27-51-21	ALL
	Z	5	BJ	W0002	0003	24		27-51-11	ALL
	Z	5	BJ	W0002	0004	24		27-51-11	ALL
	Z	5	BJ	W0002	0017	22		27-51-21	ALL
	Z	5	BJ	W0002	0020	22		27-51-21	ALL
	Z	5	BJ	W0002	0023	22		27-51-21	ALL
	Z	5	BJ	W0002	0026	22		27-51-21	ALL
	Z	6	BJ	W0002	0057	22		33-16-61	ALL
	Z	6	BJ	W0002	0058	22		33-16-61	ALL
	Z	6	BJ	W0002	0059	22		33-16-61	ALL
	Z	6	BJ	W0002	0070	22		33-16-61	ALL
	Z	6	BJ	W0002	0071	22		33-16-61	ALL
	Z	6	BJ	W0002	0072	22		33-16-61	ALL
	Y	A001	BJ	W0002	0002	24		27-51-11	ALL
	Y	A001	BJ	W0002	0005	24		27-51-11	ALL
	Y	A001	BJ	W0002	0006	24		27-51-11	ALL
	Y	A001	BJ	W0002	0125	24		27-51-11	ALL
	Y	A003	BJ	W0002	0073	22		33-16-41	ALL
	Y	A003	BJ	W0002	0144	22		33-16-41	ALL
	Y	A004	BJ	W0002	0078	24		27-51-61	ALL
	Y	A004	BJ	W0002	0080	24		27-51-61	ALL
	Y	A004	BJ	W0002	0082	24		27-51-61	ALL
	A	A007	2	W0002	0127	22		32-31-11	ALL
	A	A007	2	W0002	0129	22		32-31-11	ALL
	Y	C001	BJ	W0002	0019	22		27-51-21	ALL
	Y	C001	BJ	W0002	0025	22		27-51-21	ALL
	Y	C001	BJ	W0002	0027	22		27-51-21	ALL
	Y	C002	BJ	W0002	0067	22		33-16-31	ALL
	Y	C002	BJ	W0002	0138	22		33-16-31	ALL
	Y	C004	BJ	W0002	0079	24		27-51-61	ALL
	Y	C004	BJ	W0002	0081	24		27-51-61	ALL
	Y	C004	BJ	W0002	0091	24		27-51-61	ALL
	A	C007	2	W0002	0118	22		32-31-11	ALL
	A	C007	2	W0002	0119	22		32-31-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 57

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0072		BACT44B					P051-00/ /		001, 003-099, 115-199
TB0072	Y	BACM15C3B					P051-00/ /		115-199
TB0072	Z	BACM15C3C					P051-00/ /		ALL
	Z			W1451	5005Z			31-51-33	ALL
	Z			W1451	5007Z			31-51-33	ALL
	Z			W1451	5014Z			34-16-11	ALL
	Z			W1451	5015Z			31-51-33	ALL
	Z			W1451	5017Z			31-51-42	ALL
	Z			W1451	5018Z			31-51-21	ALL
	Z			W1451	5019Z			31-51-21	ALL
	Z			W1451	5020Z			31-51-33	ALL
	Z			W1451	FRAC			31-51-21	ALL
	Z			W1451	FRBA			31-51-33	ALL
	Z	3	BJ	W1451	5005R	24		31-51-33	ALL
	Z	3	BJ	W1451	5007R	24		31-51-33	ALL
	Z	3	BJ	W1451	5014R	24		34-16-11	ALL
	Z	3	BJ	W1451	5015R	24		31-51-33	ALL
	Z	4	BJ	W1451	5005B	24		31-51-33	ALL
	Z	4	BJ	W1451	5007B	24		31-51-33	ALL
	Z	4	BJ	W1451	5014B	24		34-16-11	ALL
	Z	4	BJ	W1451	5015B	24		31-51-33	ALL
	Z	5	BJ	W1451	5017R	24		31-51-42	ALL
	Z	5	BJ	W1451	5018R	24		31-51-21	ALL
	Z	5	BJ	W1451	5019R	24		31-51-21	ALL
	Z	5	BJ	W1451	5020R	24		31-51-33	ALL
	Z	6	BJ	W1451	5017B	24		31-51-42	ALL
	Z	6	BJ	W1451	5018B	24		31-51-21	ALL
	Z	6	BJ	W1451	5019B	24		31-51-21	ALL
	Z	6	BJ	W1451	5020B	24		31-51-33	ALL
TB0079		BACM15C3B					*** ***		001, 003-099, 115-199
TB0080		BACT44B0450U					P033-00/ /		001, 003-099, 115-199
TB0080	G	BACM15C1B					P33/ /		001-099
TB0080	G	BACM15C1B					P33-00/ /		115-199
TB0080	H	BACM15C2A					P33/ /		001-099
TB0080	Y	BACM15C3B					P33/ /		ALL
TB0080	Z	BACM15C3C					P33/ /		115-199
	G	13	2	W1230	0019	20		28-21-11	115-199
	G	13	2	W1230	0027	20		28-41-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 58

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0080		BACT44B0450U (continued)					P033-00/ /		001, 003-099, 115-199
TB0080	G	BACM15C1B (continued)					P33/ /		001-099
TB0080	G	BACM15C1B (continued)					P33-00/ /		115-199
TB0080	H	BACM15C2A (continued)					P33/ /		001-099
TB0080	Y	BACM15C3B (continued)					P33/ /		ALL
TB0080	Z	BACM15C3C (continued)					P33/ /		115-199
	G	13	2	W1230	0148	18		28-21-11	001-099
	G	13	2	W1230	0148	20		28-21-11	115-199
	G	13	2	W1230	0150	18		28-21-11	ALL
	H	5	2	W1230	0047	20		28-21-22	001-099
	Z	5	BJ	W1230	0047	20		28-21-22	115-199
	H	5	2	W1230	0050	20		28-21-22	001-099
	Z	5	BJ	W1230	0050	20		28-21-22	115-199
	H	5	2	W1230	0053	20		28-21-22	001-099
	Z	5	BJ	W1230	0053	20		28-21-22	115-199
	H	5	2	W1230	0056	20		28-21-22	001-099
	Z	5	BJ	W1230	0056	20		28-21-22	115-199
	H	5	2	W1230	0146	18		28-21-22	001-099
	Z	5	BJ	W1230	0146	20		28-21-22	115-199
	H	5	2	W1230	0209	20		28-26-11	001-099
	Z	5	BJ	W1230	0209	20		28-26-11	115-199
	H	5	2	W1230	0210	20		28-26-11	001-099
	Z	5	BJ	W1230	0210	20		28-26-11	115-199
	G	7	2	W1230	0167	18		28-21-11	001-099
	G	7	2	W1230	0168	18		28-21-11	001-099
	G	7	2	W1230	0169	18		28-21-11	001-099
	G	8	2	W1230	0028	18		28-21-11	001-099
	G	8	2	W1230	0032	18		28-21-11	001-099
	G	8	2	W1230	0166	18		28-21-11	001-099
	G	8	2	W1230	0208	20		28-21-21	001-099
	G	9	2	W1230	0018	18		28-21-11	001-099
	G	9	2	W1230	0147	18		28-21-11	001-099
	G	9	2	W1230	0162	20		28-41-11	001-099
	Y	A001	BJ	W1230	0001	22		27-51-21	ALL
	Y	A001	BJ	W1230	0002	22		27-51-21	ALL
	Y	A001	BJ	W1230	0003	22		27-51-21	ALL
	Y	A001	BJ	W1230	0004	22		27-51-21	ALL
	Y	A003	BJ	W1230	0041	22		28-21-21	ALL
	Y	A003	BJ	W1230	0042	22		28-21-21	ALL
	Y	A003	BJ	W1230	0043	22		28-21-21	ALL
	Y	A003	BJ	W1230	0204	22		28-21-21	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 59

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0080		BACT44B0450U (continued)					P033-00/ /		001, 003-099, 115-199
TB0080	G	BACM15C1B (continued)					P33/ /		001-099
TB0080	G	BACM15C1B (continued)					P33-00/ /		115-199
TB0080	H	BACM15C2A (continued)					P33/ /		001-099
TB0080	Y	BACM15C3B (continued)					P33/ /		ALL
TB0080	Z	BACM15C3C (continued)					P33/ /		115-199
	Y	A004	BJ	W1230	0005	22		27-51-21	001-099
	Y	A004	BJ	W1230	0128	22		27-51-21	001-099
	Y	A004	BJ	W1230	0139	22		27-51-21	001-099
	Y	A009	BJ	W1230	0018	20		28-21-11	115-199
	Y	A009	BJ	W1230	0147	20		28-21-11	115-199
	Y	A009	BJ	W1230	0162	20		28-41-11	115-199
	Y	A010	BJ	W1230	0184	22		29-22-11	ALL
	Y	A010	BJ	W1230	0186	22		29-22-11	ALL
	Y	A010	BJ	W1230	0189	22		29-22-11	ALL
	Y	A011	BJ	W1230	0233	22		27-51-21	ALL
	Y	A011	BJ	W1230	0236	22		27-51-21	ALL
	Y	A011	BJ	W1230	0240	22		27-51-21	ALL
	Y	C001	BJ	W1230	0009	22		27-51-31	ALL
	Y	C001	BJ	W1230	0010	22		27-51-31	ALL
	Y	C001	BJ	W1230	0011	22		27-51-31	ALL
	Y	C001	BJ	W1230	0245	24		27-51-31	001-099
	Y	C001	BJ	W1230	0245	22		27-51-31	115-199
	Y	C002	BJ	W1230	0167	20		28-21-11	115-199
	Y	C002	BJ	W1230	0168	20		28-21-11	115-199
	Y	C002	BJ	W1230	0169	20		28-21-11	115-199
	Y	C003	BJ	W1230	0046	20		28-21-22	ALL
	Y	C003	BJ	W1230	0048	20		28-21-22	ALL
	Y	C003	BJ	W1230	0051	20		28-21-22	ALL
	Y	C004	BJ	W1230	0028	20		28-21-11	115-199
	Y	C004	BJ	W1230	0032	22		28-21-11	115-199
	Y	C004	BJ	W1230	0166	20		28-21-11	115-199
	Y	C004	BJ	W1230	0208	20		28-21-21	115-199
	Y	C008	BJ	W1230	0005	22		27-51-21	115-199
	Y	C008	BJ	W1230	0128	22		27-51-21	115-199
	Y	C008	BJ	W1230	0139	22		27-51-21	115-199
	Y	C010	BJ	W1230	0185	20		29-22-11	115-199
	Y	C010	BJ	W1230	0192	22		29-22-11	115-199
	Y	C010	BJ	W1230	0241	22		29-22-11	115-199
	Y	C011	BJ	W1230	0232	22		27-51-21	ALL
	Y	C011	BJ	W1230	0237	22		27-51-21	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 60

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0080		BACT44B0450U (continued)					P033-00/ /		001, 003-099, 115-199
TB0080	G	BACM15C1B (continued)					P33/ /		001-099
TB0080	G	BACM15C1B (continued)					P33-00/ /		115-199
TB0080	H	BACM15C2A (continued)					P33/ /		001-099
TB0080	Y	BACM15C3B (continued)					P33/ /		ALL
TB0080	Z	BACM15C3C (continued)					P33/ /		115-199
	Y	C011	BJ	W1230	0239	22		27-51-21	ALL
TB0081		BACT44B0450U					P033-00/ /		ALL
TB0081	Y	BACM15C3B					P33/ /		ALL
	Y	A002	BJ	W1230	0719	24		30-31-11	001-099
	Y	A002	BJ	W1230	0720	24		30-31-11	001-099
	Y	A002	BJ	W1230	0721	24		30-31-11	001-099
	Y	A002	BJ	W1232	0117	24		30-31-11	115-199
	Y	A002	BJ	W1232	0118	24		30-31-11	115-199
	Y	A002	BJ	W1232	0119	24		30-31-11	115-199
	Y	A003	BJ	W1230	0671	24		28-22-31	001-099
	Y	A003	BJ	W1230	0674	24		28-22-31	001-099
	Y	A003	BJ	W1230	0675	24		28-22-31	001-099
	Y	A003	BJ	W1232	0050	24		28-22-31	115-199
	Y	A003	BJ	W1232	0054	24		28-22-31	115-199
	Y	A003	BJ	W1232	0055	24		28-22-31	115-199
	Y	A004	BJ	W1230	0703	24		30-32-11	001-099
	Y	A004	BJ	W1230	0704	24		30-32-11	001-099
	Y	A004	BJ	W1230	0705	24		30-32-11	001-099
	Y	A004	BJ	W1232	0092	24		30-32-11	115-199
	Y	A004	BJ	W1232	0093	24		30-32-11	115-199
	Y	A004	BJ	W1232	0094	24		30-32-11	115-199
	Y	A012	BJ	W1230	0760	24		28-22-32	009-099
	Y	A012	BJ	W1230	0761	24		28-22-32	009-099
	Y	A012	BJ	W1230	0762	24		28-22-32	009-099
	Y	A013	BJ	W1230	0759	24		28-22-31	009-099
	Y	A013	BJ	W1230	0769	24		28-22-32	009-099
	Y	A013	BJ	W1230	0770	24		28-22-32	009-099
	Y	A013	BJ	W1230	0771	24		28-22-32	009-099
	Y	C001	BJ	W1230	0653	24		26-15-12	001-099
	Y	C001	BJ	W1230	0657	24		26-15-12	001-099
	Y	C001	BJ	W1230	0663	24		26-15-12	001-099
	Y	C001	BJ	W1232	0008	24		26-15-12	115-199
	Y	C001	BJ	W1232	0012	24		26-15-12	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 61

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0081		BACT44B0450U (continued)					P033-00/ /		ALL
TB0081	Y	BACM15C3B (continued)					P33/ /		ALL
	Y	C001	BJ	W1232	0019	24		26-15-12	115-199
	Y	C002	BJ	W1232	0101	22		30-32-11	115-199
	Y	C002	BJ	W1232	0102	22		30-32-11	115-199
	Y	C002	BJ	W1232	0103	22		30-32-11	115-199
	Y	C004	BJ	W1230	0709	22		30-32-11	001-099
	Y	C004	BJ	W1230	0710	22		30-32-11	001-099
	Y	C004	BJ	W1232	0098	22		30-32-11	115-199
	Y	C004	BJ	W1232	0099	22		30-32-11	115-199
	Y	C004	BJ	W1232	0100	22		30-32-11	115-199
	Y	C012	BJ	W1230	0692	24		28-22-31	009-099
	Y	C012	BJ	W1230	0756	24		28-22-31	009-099
	Y	C012	BJ	W1230	0765	24		28-22-32	009-099
TB0084		BACT44B0800U					P033-00/ /		001, 003-099, 115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0000

Page 62 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0100	F	BACM15C1A					222/196/R10		115-199
TB0100	X	BACM15C3A					222/196/R010		001-099
TB0100	X	BACM15C3A					222/196/R10		115-199
TB0100	Y	BACM15C3B					222/196/R010		001-099
TB0100	Y	BACM15C3B					222/196/R10		115-199
TB0100	Z	BACM15C3C					222/196/R010		001-099
TB0100	Z	BACM15C3C					222/196/R10		115-199
	X	A001	BJ	W2078	0091	22		26-11-11	115-199
	X	A001	BJ	W4210	0095	22		26-11-11	115-199
	X	A002	BJ	W2078	0457	22		30-11-11	ALL
	X	A002	BJ	W4228	0260	22		30-11-11	ALL
	X	A003	BJ	W2070	0021	22		33-16-31	ALL
	X	A003	BJ	W2333	0007	22		33-16-31	ALL
	X	A004	BJ	W2066	0260	20		27-62-11	001-099
	X	A004	BJ	W2066	0260	22		27-62-11	115-199
	X	A004	BJ	W2355	0055	22		27-62-11	ALL
	Y	A005	BJ	W2066	0019	20		33-13-51	ALL
	Y	A005	BJ	W2323	0031	20		33-13-51	ALL
	Y	A005	BJ	W2333	0008	20		33-13-51	ALL
	Y	A009	BJ	W2078	0030	22		33-16-51	ALL
	Y	A009	BJ	W2331	0007	22		33-16-51	ALL
	Y	A009	BJ	W4236	0087	22		33-16-51	ALL
	Y	A010	BJ	W2075	0012	22		33-16-51	001-099
	Y	A010	BJ	W2078	0031	22		33-16-51	ALL
	Y	A010	BJ	W4228	0080	22		33-16-51	ALL
	Y	A010	BJ	W4236	0125	22		33-16-51	ALL
	F	A013	2	W2066	0575	18		73-21-11	115-199
	F	A013	2	W4232	0004	18		73-21-11	115-199
	X	B001	BJ	W2078	0038	22		33-16-61	ALL
	X	B001	BJ	W4236	0072	22		33-16-61	ALL
	X	B002	BJ	W2078	0458	22		30-11-11	ALL
	X	B002	BJ	W4228	0259	22		30-11-11	ALL
	X	B003	BJ	W2156	0070Y	20		27-41-11	ALL
	X	B003	BJ	W4228	0069Y	20		27-41-11	ALL
	X	B004	BJ	W2078	0014Y	20		27-41-21	ALL
	X	B004	BJ	W4236	0038Y	20		27-41-21	ALL
	X	C001	BJ	W2070	0044	24		34-22-26	ALL
	X	C001	BJ	W2323	0011	24		34-22-26	ALL
	X	C002	BJ	W2066	0069	20		33-13-51	ALL
	X	C002	BJ	W4220	0074	20		33-13-51	001-099
	X	C002	BJ	W4238	0010	20		33-13-51	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0100	F	BACM15C1A (continued)					222/196/R10		115-199
TB0100	X	BACM15C3A (continued)					222/196/R010		001-099
TB0100	X	BACM15C3A (continued)					222/196/R10		115-199
TB0100	Y	BACM15C3B (continued)					222/196/R010		001-099
TB0100	Y	BACM15C3B (continued)					222/196/R10		115-199
TB0100	Z	BACM15C3C (continued)					222/196/R010		001-099
TB0100	Z	BACM15C3C (continued)					222/196/R10		115-199
	X	C003	BJ	W2070	0027	22		33-16-41	ALL
	X	C003	BJ	W2333	0006	22		33-16-41	ALL
	Y	C005	BJ	W2078	0037	22		33-16-51	ALL
	Y	C005	BJ	W2331	0006	22		33-16-51	ALL
	Y	C005	BJ	W4228	0139	22		33-16-51	ALL
	Y	C009	BJ	W2078	0033	22		33-16-51	ALL
	Y	C009	BJ	W4228	0140	22		33-16-51	ALL
	Y	C009	BJ	W4236	0073	22		33-16-51	ALL
	Y	C009	BJ	W4236	0080	22		33-16-51	ALL
	Y	C010	BJ	W2078	0077	22		33-16-51	ALL
	Y	C010	BJ	W4228	0079	22		33-16-51	ALL
	Y	C010	BJ	W4236	0074	22		33-16-51	ALL
	Y	C010	BJ	W4236	0081	22		33-16-51	ALL
	F	C013	2	W2066	0576	18		73-21-12	115-199
	F	C013	2	W4232	0018	18		73-21-12	115-199
	X	D001	BJ	W2078	0032	22		33-16-51	ALL
	X	D001	BJ	W4236	0088	22		33-16-51	ALL
	X	D002	BJ	W2078	0486	20		27-41-31	ALL
	X	D002	BJ	W2615	0004Y	20		27-41-31	ALL
	X	D004	BJ	W2070	0167	24		34-61-21	ALL
	X	D004	BJ	W2333	0001	24		34-61-21	ALL
TB0101	F	BACM15C1A					222/196/L010		115-199
TB0101	X	BACM15C3A					222/196/L010		001-099
TB0101	X	BACM15C3A					222/196/L10		115-199
TB0101	Y	BACM15C3B					222/196/L010		001-099
TB0101	Y	BACM15C3B					222/196/L10		115-199
TB0101	Z	BACM15C3C					222/196/L010		001-099
TB0101	Z	BACM15C3C					222/196/L10		115-199
	Z	9	BJ	W2066	0068	20		33-13-52	ALL
	Z	9	BJ	W2321	0031	20		33-13-52	ALL
	Z	9	BJ	W2355	0087	20		33-13-52	ALL
	Z	9	BJ	W2357	0032	20		33-13-52	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0101	F	BACM15C1A (continued)					222/196/L010		115-199
TB0101	X	BACM15C3A (continued)					222/196/L010		001-099
TB0101	X	BACM15C3A (continued)					222/196/L10		115-199
TB0101	Y	BACM15C3B (continued)					222/196/L010		001-099
TB0101	Y	BACM15C3B (continued)					222/196/L10		115-199
TB0101	Z	BACM15C3C (continued)					222/196/L010		001-099
TB0101	Z	BACM15C3C (continued)					222/196/L10		115-199
	Y	A003	BJ	W2066	0365	20		33-13-52	ALL
	Y	A003	BJ	W2315	0015	20		33-13-52	ALL
	Y	A003	BJ	W2331	0008	20		33-13-52	ALL
	F	A005	2	W2072	0252	18		73-21-21	115-199
	F	A005	2	W4238	0001	18		73-21-21	115-199
	X	A007	BJ	W2066	0601	22		31-31-31	115-199
	X	A007	BJ	W2359	0008	22		31-31-31	115-199
	X	C001	BJ	W2066	0217	24		34-22-16	ALL
	X	C001	BJ	W2321	0018	24		34-22-16	ALL
	X	C002	BJ	W2072	0003	20		31-41-19	ALL
	X	C002	BJ	W2315	0001	22		31-41-19	ALL
	F	C005	2	W2072	0253	18		73-21-22	115-199
	F	C005	2	W4238	0004	18		73-21-22	115-199
	X	D002	BJ	W2066	0341	24		34-61-11	ALL
	X	D002	BJ	W2331	0001	24		34-61-11	ALL
TB0103		BACT44B0300U					P071-00/ /		001, 003-099, 115-199
TB0103	Y	BACM15C3B					P71/ /		ALL
	Y	A001	BJ	W1254	0104	22		24-25-11	003-099
	Y	A001	BJ	W1254	0105	22		24-25-11	003-099
	Y	A001	BJ	W1254	0108	22		24-25-11	003-099
	Y	A001	BJ	W1254	0112	22		24-25-11	003-099
	Y	C001	BJ	W1254	0025	22		24-25-11	001-002, 115-199
	Y	C001	BJ	W1254	0072	22		24-25-11	001-002, 115-199
	Y	C001	BJ	W1254	0079	22		21-58-15	001-002, 115-199
	Y	C002	BJ	W1254	0001	22		24-25-11	001-002, 115-199
	Y	C002	BJ	W1254	0002	22		24-25-11	001-002, 115-199
	Y	C002	BJ	W1254	0007	22		24-25-11	001-002, 115-199
	Y	C002	BJ	W1254	0024	22		24-25-11	001-002, 115-199
	Y	C003	BJ	W1254	0015	22		24-25-11	001-002, 115-199
	Y	C003	BJ	W1254	0026	22		24-25-11	001-002, 115-199
	Y	C003	BJ	W1254	0071	22		24-25-11	001-002, 115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0106	X	BACM15C3A					E1-2/ /		ALL
TB0106	Y	BACM15C3B					E1-2/ /		ALL
	X	A001	BJ	W1320	2501B	22		30-41-11	115-199
	X	A001	BJ	W1320	2502B	22		30-41-11	115-199
	X	A002	BJ	W1320	2504B	22		30-41-11	115-199
	X	A002	BJ	W1320	2505B	22		30-41-11	115-199
	X	A003	BJ	W1320	2507B	22		30-41-11	115-199
	X	A003	BJ	W1320	2508B	22		30-41-11	115-199
	Y	A005	BJ	W1320	0002	22		30-41-11	ALL
	Y	A005	BJ	W1320	0022	22		30-41-11	ALL
	Y	A005	BJ	W1320	0023	22		30-41-11	ALL
	X	B001	BJ	W1320	2501R	22		30-41-11	115-199
	X	B001	BJ	W1320	2502R	22		30-41-11	115-199
	X	B002	BJ	W1320	2504R	22		30-41-11	115-199
	X	B002	BJ	W1320	2505R	22		30-41-11	115-199
	X	B003	BJ	W1320	2507R	22		30-41-11	115-199
	X	B003	BJ	W1320	2508R	22		30-41-11	115-199
	X	C001	BJ	W1320	2503B	22		30-41-11	115-199
	X	C002	BJ	W1320	2506B	22		30-41-11	115-199
	X	C003	BJ	W1320	2509B	22		30-41-11	115-199
	X	D001	BJ	W1320	2503R	22		30-41-11	115-199
	X	D002	BJ	W1320	2506R	22		30-41-11	115-199
	X	D003	BJ	W1320	2509R	22		30-41-11	115-199
	X	REF		W1320	0019	20		30-41-11	115-199
	X	REF		W1320	0020	20		30-41-11	115-199
	X	REF		W1320	0021	20		30-41-11	115-199
	X	REF		W1320	2501Z			30-41-11	115-199
	X	REF		W1320	2502Z			30-41-11	115-199
	X	REF		W1320	2503Z			30-41-11	115-199
	X	REF		W1320	2504Z			30-41-11	115-199
	X	REF		W1320	2505Z			30-41-11	115-199
	X	REF		W1320	2506Z			30-41-11	115-199
	X	REF		W1320	2507Z			30-41-11	115-199
	X	REF		W1320	2508Z			30-41-11	115-199
	X	REF		W1320	2509Z			30-41-11	115-199
TB0107	X	BACM15C3A					E001-01/ /		115-199
	X	A001	BJ	W1310	2507B	22		30-41-12	115-199
	X	A001	BJ	W1310	2508B	22		30-41-12	115-199
	X	A002	BJ	W1310	2501B	22		30-41-12	115-199
	X	A002	BJ	W1310	2502B	22		30-41-12	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 4

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0107	X	BACM15C3A (continued)					E001-01/ /		115-199
	X	A003	BJ	W1310	2504B	22		30-41-12	115-199
	X	A003	BJ	W1310	2505B	22		30-41-12	115-199
	X	B001	BJ	W1310	2507R	22		30-41-12	115-199
	X	B001	BJ	W1310	2508R	22		30-41-12	115-199
	X	B002	BJ	W1310	2501R	22		30-41-12	115-199
	X	B002	BJ	W1310	2502R	22		30-41-12	115-199
	X	B003	BJ	W1310	2504R	22		30-41-12	115-199
	X	B003	BJ	W1310	2505R	22		30-41-12	115-199
	X	C001	BJ	W1310	2509B	22		30-41-12	115-199
	X	C002	BJ	W1310	2503B	22		30-41-12	115-199
	X	C003	BJ	W1310	2506B	22		30-41-12	115-199
	X	D001	BJ	W1310	2509R	22		30-41-12	115-199
	X	D002	BJ	W1310	2503R	22		30-41-12	115-199
	X	D003	BJ	W1310	2506R	22		30-41-12	115-199
	X	REF		W1310	0019	20		30-41-12	115-199
	X	REF		W1310	0020	20		30-41-12	115-199
	X	REF		W1310	0021	20		30-41-12	115-199
	X	REF		W1310	2501Z			30-41-12	115-199
	X	REF		W1310	2502Z			30-41-12	115-199
	X	REF		W1310	2503Z			30-41-12	115-199
	X	REF		W1310	2504Z			30-41-12	115-199
	X	REF		W1310	2505Z			30-41-12	115-199
	X	REF		W1310	2506Z			30-41-12	115-199
	X	REF		W1310	2507Z			30-41-12	115-199
	X	REF		W1310	2508Z			30-41-12	115-199
	X	REF		W1310	2509Z			30-41-12	115-199
TB0108		AMY4100T-10U					E004-01/ /		001, 003-099, 115-199
TB0108	Y	BACM15C3B					E004-01/ /		001-099
TB0108	Y	BACM15C3B					E4-1/ /		115-199
TB0108	Z	BACM15C3C					E004-01/ /		001-099
TB0108	Z	BACM15C3C					E4-1/ /		115-199
	Y			W1165	5001Z			22-21-21	ALL
	Y			W1165	5003Z			22-24-21	ALL
	Y			W1165	5004Z			22-24-21	ALL
	Y			W1165	5101Z			22-21-21	ALL
	Y			W1165	5103Z			22-21-21	ALL
	Y			W1165	5104Z			22-21-21	ALL
	Y			W1165	5105Z			22-24-21	ALL
	Y			W1165	5106Z			22-24-21	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 5

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0108		AMY4100T-10U (continued)					E004-01/ /		001, 003-099, 115-199
TB0108	Y	BACM15C3B (continued)					E004-01/ /		001-099
TB0108	Y	BACM15C3B (continued)					E4-1/ /		115-199
TB0108	Z	BACM15C3C (continued)					E004-01/ /		001-099
TB0108	Z	BACM15C3C (continued)					E4-1/ /		115-199
	Y			W1165	FRAB			22-21-21	ALL
	Y			W1165	FRAC			22-24-21	ALL
	Y			W1165	FRAD			22-24-21	ALL
	Z	10	BJ	W1165	0009	22		27-61-14	ALL
	Z	10	BJ	W1165	0018	22		27-61-15	ALL
	Z	10	BJ	W1165	0025	22		27-61-16	ALL
	Z	10	BJ	W1165	0051	22		27-09-11	ALL
	Z	10	BJ	W1165	0052	22		27-09-11	ALL
	Z	10	BJ	W1165	0053	22		27-09-11	ALL
	Z	10	BJ	W1165	0110	22		22-21-21	ALL
	Z	13	BJ	W1165	2026R	22		22-21-21	ALL
	Z	13	BJ	W1165	2027R	22		22-21-21	ALL
	Z	13	BJ	W1165	2028R	22		27-21-22	ALL
	Z	13	BJ	W1165	2029R	22		27-21-22	ALL
	Z	13	BJ	W1165	2030R	22		27-21-22	ALL
	Z	13	BJ	W1165	2125R	22		27-21-22	ALL
	Z	14	BJ	W1165	0097	22		27-21-22	ALL
	Z	14	BJ	W1165	2026B	22		22-21-21	ALL
	Z	14	BJ	W1165	2027B	22		22-21-21	ALL
	Z	14	BJ	W1165	2028B	22		27-21-22	ALL
	Z	14	BJ	W1165	2029B	22		27-21-22	ALL
	Z	14	BJ	W1165	2030B	22		27-21-22	ALL
	Z	14	BJ	W1165	2125B	22		27-21-22	ALL
	Z	45	BJ	W1165	2103R	22		27-61-14	ALL
	Z	45	BJ	W1165	2104R	22		27-61-14	ALL
	Z	45	BJ	W1165	2107R	22		27-61-14	ALL
	Z	45	BJ	W1165	2108R	22		27-61-14	ALL
	Z	45	BJ	W1165	2111R	22		27-61-15	ALL
	Z	45	BJ	W1165	2121R	22		27-61-16	ALL
	Z	46	BJ	W1165	0211	22		27-61-14	ALL
	Z	46	BJ	W1165	2103B	22		27-61-14	ALL
	Z	46	BJ	W1165	2104B	22		27-61-14	ALL
	Z	46	BJ	W1165	2107B	22		27-61-14	ALL
	Z	46	BJ	W1165	2108B	22		27-61-14	ALL
	Z	46	BJ	W1165	2111B	22		27-61-15	ALL
	Z	46	BJ	W1165	2121B	22		27-61-16	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 6

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0108		AMY4100T-10U (continued)					E004-01/ /		001, 003-099, 115-199
TB0108	Y	BACM15C3B (continued)					E004-01/ /		001-099
TB0108	Y	BACM15C3B (continued)					E4-1/ /		115-199
TB0108	Z	BACM15C3C (continued)					E004-01/ /		001-099
TB0108	Z	BACM15C3C (continued)					E4-1/ /		115-199
	Z	47	BJ	W1165	0232	22		27-09-12	ALL
	Z	47	BJ	W1165	0233	22		27-09-12	ALL
	Z	47	BJ	W1165	0234	22		27-09-12	ALL
	Z	47	BJ	W1165	0235	22		27-09-12	ALL
	Z	47	BJ	W1165	0236	22		27-09-12	ALL
	Z	47	BJ	W1165	0237	22		27-09-12	ALL
	Z	47	BJ	W1165	0238	22		27-09-12	ALL
	Z	47	BJ	W1165	0239	22		27-09-12	ALL
	Z	48	BJ	W1165	0240	22		27-09-14	ALL
	Z	48	BJ	W1165	0245	22		27-09-14	ALL
	Z	48	BJ	W1165	0246	22		27-09-14	ALL
	Z	48	BJ	W1165	0247	22		27-09-14	ALL
	Z	48	BJ	W1165	0283	22		27-09-14	ALL
	Z	5	BJ	W1165	2013R	22		27-61-14	ALL
	Z	5	BJ	W1165	2015R	22		27-61-15	ALL
	Z	5	BJ	W1165	2016R	22		27-61-15	ALL
	Z	5	BJ	W1165	2020R	22		27-61-15	ALL
	Z	5	BJ	W1165	2021R	22		27-61-15	ALL
	Z	5	BJ	W1165	2024R	22		27-61-16	ALL
	Z	51	BJ	W1165	0250	22		27-61-12	ALL
	Z	51	BJ	W1165	0251	22		27-61-12	ALL
	Z	51	BJ	W1165	0252	22		27-61-12	ALL
	Z	51	BJ	W1165	0253	22		27-61-12	ALL
	Z	51	BJ	W1165	0254	22		27-61-12	ALL
	Z	59	BJ	W1165	0215	22		27-61-14	ALL
	Z	59	BJ	W1165	0222	22		27-61-15	ALL
	Z	59	BJ	W1165	0231	22		27-61-16	ALL
	Z	59	BJ	W1165	0265	22		27-09-11	ALL
	Z	59	BJ	W1165	0267	22		27-09-11	ALL
	Z	59	BJ	W1165	0268	22		27-09-11	ALL
	Z	59	BJ	W1165	0309	22		22-21-21	ALL
	Z	6	BJ	W1165	0014	22		27-61-15	ALL
	Z	6	BJ	W1165	2013B	22		27-61-14	ALL
	Z	6	BJ	W1165	2015B	22		27-61-15	ALL
	Z	6	BJ	W1165	2016B	22		27-61-15	ALL
	Z	6	BJ	W1165	2020B	22		27-61-15	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 7

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0108		AMY4100T-10U (continued)					E004-01/ /		001, 003-099, 115-199
TB0108	Y	BACM15C3B (continued)					E004-01/ /		001-099
TB0108	Y	BACM15C3B (continued)					E4-1/ /		115-199
TB0108	Z	BACM15C3C (continued)					E004-01/ /		001-099
TB0108	Z	BACM15C3C (continued)					E4-1/ /		115-199
	Z	6	BJ	W1165	2021B	22		27-61-15	ALL
	Z	6	BJ	W1165	2024B	22		27-61-16	ALL
	Z	7	BJ	W1165	0032	22		27-09-12	ALL
	Z	7	BJ	W1165	0033	22		27-09-12	ALL
	Z	7	BJ	W1165	0034	22		27-09-12	ALL
	Z	7	BJ	W1165	0035	22		27-09-12	ALL
	Z	7	BJ	W1165	0036	22		27-09-12	ALL
	Z	7	BJ	W1165	0037	22		27-09-12	ALL
	Z	7	BJ	W1165	0038	22		27-09-12	ALL
	Z	8	BJ	W1165	0039	22		27-09-13	ALL
	Z	8	BJ	W1165	0041	22		27-09-13	ALL
	Z	8	BJ	W1165	0045	22		27-09-13	ALL
	Z	8	BJ	W1165	0047	22		27-09-13	ALL
	Z	85	BJ	W1165	2203R	22		27-61-14	ALL
	Z	85	BJ	W1165	2213R	22		27-61-15	ALL
	Z	85	BJ	W1165	2215R	22		27-61-16	ALL
	Z	85	BJ	W1165	2216R	22		27-61-16	ALL
	Z	85	BJ	W1165	2220R	22		27-61-16	ALL
	Z	85	BJ	W1165	2221R	22		27-61-16	ALL
	Z	86	BJ	W1165	0432	22		27-61-16	ALL
	Z	86	BJ	W1165	2203B	22		27-61-14	ALL
	Z	86	BJ	W1165	2213B	22		27-61-15	ALL
	Z	86	BJ	W1165	2215B	22		27-61-16	ALL
	Z	86	BJ	W1165	2216B	22		27-61-16	ALL
	Z	86	BJ	W1165	2220B	22		27-61-16	ALL
	Z	86	BJ	W1165	2221B	22		27-61-16	ALL
	Z	87	BJ	W1165	0458	22		27-09-12	ALL
	Z	87	BJ	W1165	0461	22		27-09-12	ALL
	Z	87	BJ	W1165	0462	22		27-09-12	ALL
	Z	87	BJ	W1165	0463	22		27-09-12	ALL
	Z	9	BJ	W1165	0040	22		27-09-13	ALL
	Z	9	BJ	W1165	0042	22		27-09-13	ALL
	Z	9	BJ	W1165	0046	22		27-09-13	ALL
	Z	9	BJ	W1165	0048	22		27-09-13	ALL
	Y	A001	BJ	W1165	0026	22		27-31-22	ALL
	Y	A001	BJ	W1165	0027	22		27-31-22	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 8

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0108		AMY4100T-10U (continued)					E004-01/ /		001, 003-099, 115-199
TB0108	Y	BACM15C3B (continued)					E004-01/ /		001-099
TB0108	Y	BACM15C3B (continued)					E4-1/ /		115-199
TB0108	Z	BACM15C3C (continued)					E004-01/ /		001-099
TB0108	Z	BACM15C3C (continued)					E4-1/ /		115-199
	Y	A001	BJ	W1165	0028	20		27-31-22	ALL
	Y	A001	BJ	W1165	0029	20		27-31-22	ALL
	Y	A002	BJ	W1165	2006B	22		27-61-14	ALL
	Y	A002	BJ	W1165	2007B	22		27-61-14	ALL
	Y	A002	BJ	W1165	2008B	22		27-61-14	ALL
	Y	A003	BJ	W1165	2011B	22		27-61-14	ALL
	Y	A003	BJ	W1165	2014B	22		27-61-15	ALL
	Y	A003	BJ	W1165	2018B	22		27-61-15	ALL
	Y	A003	BJ	W1165	2022B	22		27-61-16	ALL
	Y	A004	BJ	W1165	2012B	22		27-61-14	ALL
	Y	A004	BJ	W1165	2017B	22		27-61-15	ALL
	Y	A004	BJ	W1165	2019B	22		27-61-15	ALL
	Y	A004	BJ	W1165	2023B	22		27-61-16	ALL
	Y	A011	BJ	W1165	5001R	24		22-21-21	ALL
	Y	A011	BJ	W1165	5003R	24		22-24-21	ALL
	Y	A011	BJ	W1165	5004R	24		22-24-21	ALL
	Y	A012	BJ	W1165	2031R	22		27-21-22	ALL
	Y	A012	BJ	W1165	2032R	22		27-21-22	ALL
	Y	A012	BJ	W1165	2033R	22		27-21-22	ALL
	Y	A015	BJ	W1165	3002R	22		27-21-22	ALL
	Y	A015	BJ	W1165	3004R	22		27-21-22	ALL
	Y	A015	BJ	W1165	3101R	22		27-21-22	ALL
	Y	A016	BJ	W1165	3002Y	22		27-21-22	ALL
	Y	A016	BJ	W1165	3004Y	22		27-21-22	ALL
	Y	A016	BJ	W1165	3101Y	22		27-21-22	ALL
	Y	A041	BJ	W1165	2114R	22		27-61-16	ALL
	Y	A041	BJ	W1165	2119R	22		27-61-16	ALL
	Y	A041	BJ	W1165	2120R	22		27-61-16	ALL
	Y	A043	BJ	W1165	2101B	22		27-61-14	ALL
	Y	A043	BJ	W1165	2102B	22		27-61-14	ALL
	Y	A043	BJ	W1165	2109B	22		27-61-15	ALL
	Y	A043	BJ	W1165	2117B	22		27-61-16	ALL
	Y	A044	BJ	W1165	2105B	22		27-61-14	ALL
	Y	A044	BJ	W1165	2106B	22		27-61-14	ALL
	Y	A044	BJ	W1165	2110B	22		27-61-15	ALL
	Y	A044	BJ	W1165	2118B	22		27-61-16	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 9

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0108		AMY4100T-10U (continued)					E004-01/ /		001, 003-099, 115-199
TB0108	Y	BACM15C3B (continued)					E004-01/ /		001-099
TB0108	Y	BACM15C3B (continued)					E4-1/ /		115-199
TB0108	Z	BACM15C3C (continued)					E004-01/ /		001-099
TB0108	Z	BACM15C3C (continued)					E4-1/ /		115-199
	Y	A049	BJ	W1165	0206	22		27-09-14	ALL
	Y	A049	BJ	W1165	0241	22		27-09-14	ALL
	Y	A049	BJ	W1165	0248	22		27-09-14	ALL
	Y	A050	BJ	W1165	0257	22		27-09-13	ALL
	Y	A050	BJ	W1165	0260	22		27-09-13	ALL
	Y	A050	BJ	W1165	0263	22		27-09-13	ALL
	Y	A053	BJ	W1165	5103R	24		22-21-21	ALL
	Y	A053	BJ	W1165	5104R	24		22-21-21	ALL
	Y	A054	BJ	W1165	0305	22		22-21-21	ALL
	Y	A054	BJ	W1165	0306	22		22-21-21	ALL
	Y	A054	BJ	W1165	0307	22		22-21-21	ALL
	Y	A055	BJ	W1165	5101R	24		22-21-21	ALL
	Y	A055	BJ	W1165	5105R	24		22-24-21	ALL
	Y	A055	BJ	W1165	5106R	24		22-24-21	ALL
	Y	A056	BJ	W1165	0154	22		27-41-21	ALL
	Y	A056	BJ	W1165	0348Y	22		27-41-21	ALL
	Y	A056	BJ	W1165	0349Y	22		27-41-21	ALL
	Y	A056	BJ	W1165	0350Y	22		27-41-21	ALL
	Y	A057	BJ	W1165	0201	22		27-48-11	ALL
	Y	A057	BJ	W1165	0202	22		27-48-11	ALL
	Y	A057	BJ	W1165	0203	22		27-48-11	ALL
	Y	A058	BJ	W1165	0351Y	22		27-41-21	ALL
	Y	A058	BJ	W1165	0363Y	22		27-41-21	ALL
	Y	A058	BJ	W1165	0365Y	22		27-41-21	ALL
	Y	A061	BJ	W1165	0368	22		27-32-21	001-099
	Y	A061	BJ	W1165	0368	24		27-32-21	115-199
	Y	A061	BJ	W1165	0384	22		27-32-21	001-099
	Y	A061	BJ	W1165	0384	24		27-32-21	115-199
	Y	A061	BJ	W1165	0385	22		27-32-21	001-099
	Y	A061	BJ	W1165	0385	24		27-32-21	115-199
	Y	A062	BJ	W1165	0207	22		27-09-14	ALL
	Y	A062	BJ	W1165	0244	22		27-09-14	ALL
	Y	A062	BJ	W1165	0284	22		27-09-14	ALL
	Y	A063	BJ	W1165	0214	22		27-09-14	ALL
	Y	A063	BJ	W1165	0242	22		27-09-14	ALL
	Y	A063	BJ	W1165	0287	22		27-09-14	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 10

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0108		AMY4100T-10U (continued)					E004-01/ /		001, 003-099, 115-199
TB0108	Y	BACM15C3B (continued)					E004-01/ /		001-099
TB0108	Y	BACM15C3B (continued)					E4-1/ /		115-199
TB0108	Z	BACM15C3C (continued)					E004-01/ /		001-099
TB0108	Z	BACM15C3C (continued)					E4-1/ /		115-199
	Y	A081	BJ	W1165	2206R	22		27-61-15	ALL
	Y	A081	BJ	W1165	2211R	22		27-61-15	ALL
	Y	A081	BJ	W1165	2212R	22		27-61-15	ALL
	Y	A082	BJ	W1165	2201R	22		27-61-14	ALL
	Y	A082	BJ	W1165	2209R	22		27-61-15	ALL
	Y	A082	BJ	W1165	2214R	22		27-61-16	ALL
	Y	A082	BJ	W1165	2218R	22		27-61-16	ALL
	Y	A083	BJ	W1165	0623	22		27-09-14	ALL
	Y	A083	BJ	W1165	0630	22		27-09-14	ALL
	Y	A083	BJ	W1165	0644	22		27-09-14	ALL
	Y	A084	BJ	W1165	2202R	22		27-61-14	ALL
	Y	A084	BJ	W1165	2210R	22		27-61-15	ALL
	Y	A084	BJ	W1165	2217R	22		27-61-16	ALL
	Y	A084	BJ	W1165	2219R	22		27-61-16	ALL
	Y	A089	BJ	W1165	0579	22		27-09-13	ALL
	Y	A089	BJ	W1165	0581	22		27-09-13	ALL
	Y	A089	BJ	W1165	0583	22		27-09-13	ALL
	Y	A090	BJ	W1165	0459	22		27-09-12	ALL
	Y	A090	BJ	W1165	0460	22		27-09-12	ALL
	Y	A090	BJ	W1165	0595	22		27-09-12	ALL
	Y	A112	BJ	W1165	0622	22		27-09-14	ALL
	Y	A112	BJ	W1165	0627	22		27-09-14	ALL
	Y	A112	BJ	W1165	0628	22		27-09-14	ALL
	Y	A112	BJ	W1165	0629	22		27-09-14	ALL
	Y	C001	BJ	W1165	2006R	22		27-61-14	ALL
	Y	C001	BJ	W1165	2007R	22		27-61-14	ALL
	Y	C001	BJ	W1165	2008R	22		27-61-14	ALL
	Y	C002	BJ	W1165	2011R	22		27-61-14	ALL
	Y	C002	BJ	W1165	2014R	22		27-61-15	ALL
	Y	C002	BJ	W1165	2018R	22		27-61-15	ALL
	Y	C002	BJ	W1165	2022R	22		27-61-16	ALL
	Y	C003	BJ	W1165	2012R	22		27-61-14	ALL
	Y	C003	BJ	W1165	2017R	22		27-61-15	ALL
	Y	C003	BJ	W1165	2019R	22		27-61-15	ALL
	Y	C003	BJ	W1165	2023R	22		27-61-16	ALL
	Y	C011	BJ	W1165	5001B	24		22-21-21	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 11

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0108		AMY4100T-10U (continued)					E004-01/ /		001, 003-099, 115-199
TB0108	Y	BACM15C3B (continued)					E004-01/ /		001-099
TB0108	Y	BACM15C3B (continued)					E4-1/ /		115-199
TB0108	Z	BACM15C3C (continued)					E004-01/ /		001-099
TB0108	Z	BACM15C3C (continued)					E4-1/ /		115-199
	Y	C011	BJ	W1165	5003B	24		22-24-21	ALL
	Y	C011	BJ	W1165	5004B	24		22-24-21	ALL
	Y	C012	BJ	W1165	2031B	22		27-21-22	ALL
	Y	C012	BJ	W1165	2032B	22		27-21-22	ALL
	Y	C012	BJ	W1165	2033B	22		27-21-22	ALL
	Y	C015	BJ	W1165	3002B	22		27-21-22	ALL
	Y	C015	BJ	W1165	3004B	22		27-21-22	ALL
	Y	C015	BJ	W1165	3101B	22		27-21-22	ALL
	Y	C041	BJ	W1165	2114B	22		27-61-16	ALL
	Y	C041	BJ	W1165	2119B	22		27-61-16	ALL
	Y	C041	BJ	W1165	2120B	22		27-61-16	ALL
	Y	C042	BJ	W1165	2101R	22		27-61-14	ALL
	Y	C042	BJ	W1165	2102R	22		27-61-14	ALL
	Y	C042	BJ	W1165	2109R	22		27-61-15	ALL
	Y	C042	BJ	W1165	2117R	22		27-61-16	ALL
	Y	C043	BJ	W1165	2105R	22		27-61-14	ALL
	Y	C043	BJ	W1165	2106R	22		27-61-14	ALL
	Y	C043	BJ	W1165	2110R	22		27-61-15	ALL
	Y	C043	BJ	W1165	2118R	22		27-61-16	ALL
	Y	C044	BJ	W1165	0150	22		27-41-21	ALL
	Y	C044	BJ	W1165	0151	22		27-41-21	ALL
	Y	C044	BJ	W1165	0153	22		27-41-21	ALL
	Y	C049	BJ	W1165	0301	22		22-21-21	ALL
	Y	C049	BJ	W1165	0302	22		22-21-21	ALL
	Y	C049	BJ	W1165	0303	22		22-21-21	ALL
	Y	C049	BJ	W1165	0354	22		22-21-21	ALL
	Y	C050	BJ	W1165	0258	22		27-09-13	ALL
	Y	C050	BJ	W1165	0259	22		27-09-13	ALL
	Y	C050	BJ	W1165	0262	22		27-09-13	ALL
	Y	C050	BJ	W1165	0264	22		27-09-13	ALL
	Y	C053	BJ	W1165	5103B	24		22-21-21	ALL
	Y	C053	BJ	W1165	5104B	24		22-21-21	ALL
	Y	C054	BJ	W1165	0308	22		22-24-21	ALL
	Y	C054	BJ	W1165	0310	22		22-24-21	ALL
	Y	C054	BJ	W1165	0311	22		22-24-21	ALL
	Y	C055	BJ	W1165	5101B	24		22-21-21	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 12

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0108		AMY4100T-10U (continued)					E004-01/ /		001, 003-099, 115-199
TB0108	Y	BACM15C3B (continued)					E004-01/ /		001-099
TB0108	Y	BACM15C3B (continued)					E4-1/ /		115-199
TB0108	Z	BACM15C3C (continued)					E004-01/ /		001-099
TB0108	Z	BACM15C3C (continued)					E4-1/ /		115-199
	Y	C055	BJ	W1165	5105B	24		22-24-21	ALL
	Y	C055	BJ	W1165	5106B	24		22-24-21	ALL
	Y	C058	BJ	W1165	0352Y	22		27-41-21	ALL
	Y	C058	BJ	W1165	0364Y	22		27-41-21	ALL
	Y	C058	BJ	W1165	0366Y	22		27-41-21	ALL
	Y	C062	BJ	W1165	0218	22		27-09-14	ALL
	Y	C062	BJ	W1165	0243	22		27-09-14	ALL
	Y	C062	BJ	W1165	0286	22		27-09-14	ALL
	Y	C081	BJ	W1165	2206B	22		27-61-15	ALL
	Y	C081	BJ	W1165	2211B	22		27-61-15	ALL
	Y	C081	BJ	W1165	2212B	22		27-61-15	ALL
	Y	C082	BJ	W1165	2201B	22		27-61-14	ALL
	Y	C082	BJ	W1165	2209B	22		27-61-15	ALL
	Y	C082	BJ	W1165	2214B	22		27-61-16	ALL
	Y	C082	BJ	W1165	2218B	22		27-61-16	ALL
	Y	C083	BJ	W1165	0633	22		27-61-12	ALL
	Y	C083	BJ	W1165	0636	22		27-61-12	ALL
	Y	C083	BJ	W1165	0637	22		27-61-12	ALL
	Y	C083	BJ	W1165	0643	22		27-61-12	ALL
	Y	C084	BJ	W1165	2202B	22		27-61-14	ALL
	Y	C084	BJ	W1165	2210B	22		27-61-15	ALL
	Y	C084	BJ	W1165	2217B	22		27-61-16	ALL
	Y	C084	BJ	W1165	2219B	22		27-61-16	ALL
	Y	C089	BJ	W1165	0580	22		27-09-13	ALL
	Y	C089	BJ	W1165	0582	22		27-09-13	ALL
	Y	C089	BJ	W1165	0584	22		27-09-13	ALL
TB0109		AMY4100T-10U					E003-01/ /		001, 003-099
TB0109	A	YHLZD-33					E003-01/ /		001-099
TB0109	A	YHLZD-29					E3-1/ /		115-199
TB0109	A	YHLZD-33					E3-1/ /		115-199
TB0109	B	YHLZR-32					E003-01/ /		001-099
TB0109	Y	BACM15C3B					E003-01/ /		ALL
TB0109	Z	BACM15C3C					E003-01/ /		ALL
	Y			W1265	5004Z			22-24-11	ALL
	Y			W1265	5005Z			22-24-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 13

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.		Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
	Fix	Term					CO		
TB0109		AMY4100T-10U (continued)					E003-01/ /		001, 003-099
TB0109	A	YHLZD-33 (continued)					E003-01/ /		001-099
TB0109	A	YHLZD-29 (continued)					E3-1/ /		115-199
TB0109	A	YHLZD-33 (continued)					E3-1/ /		115-199
TB0109	B	YHLZR-32 (continued)					E003-01/ /		001-099
TB0109	Y	BACM15C3B (continued)					E003-01/ /		ALL
TB0109	Z	BACM15C3C (continued)					E003-01/ /		ALL
	Y			W1265	5007Z			22-21-11	ALL
	Y			W1265	5008Z			22-21-11	ALL
	Y			W1265	5010Z			22-21-11	ALL
	Y			W1265	5101Z			22-24-11	ALL
	Y			W1265	5102Z			22-24-11	ALL
	Y			W1265	5104Z			22-21-11	ALL
	Y			W1265	5201Z			22-21-11	ALL
	Y			W1265	5202Z			22-21-11	ALL
	Y			W1265	5203Z			22-21-11	ALL
	Y			W1265	5204Z			22-22-11	ALL
	Y			W1265	5205Z			22-22-11	ALL
	Y			W1265	5206Z			22-22-11	ALL
	Y			W1265	FRAB			22-21-11	ALL
	Y			W1265	FRAC			22-21-11	ALL
	Y			W1265	FRAD			22-22-11	ALL
	Y			W1265	FRAE			22-24-11	ALL
	Y			W1265	FRAF			22-24-11	ALL
	Z	10	BJ	W1265	0118Y	22		27-41-11	ALL
	Z	10	BJ	W1265	0119Y	22		27-41-11	ALL
	Z	10	BJ	W1265	0120Y	22		27-41-11	ALL
	Z	10	BJ	W1265	0121Y	22		27-41-11	ALL
	Z	10	BJ	W1265	0170Y	22		27-41-11	ALL
	Z	113	BJ	W1265	2203R	22		27-61-13	ALL
	Z	113	BJ	W1265	2213R	22		27-61-17	ALL
	Z	113	BJ	W1265	2216R	22		27-61-18	ALL
	Z	113	BJ	W1265	2217R	22		27-61-18	ALL
	Z	113	BJ	W1265	2219R	22		27-61-18	ALL
	Z	113	BJ	W1265	2220R	22		27-61-18	ALL
	Z	114	BJ	W1265	0481	22		27-61-18	ALL
	Z	114	BJ	W1265	2203B	22		27-61-13	ALL
	Z	114	BJ	W1265	2213B	22		27-61-17	ALL
	Z	114	BJ	W1265	2216B	22		27-61-18	ALL
	Z	114	BJ	W1265	2217B	22		27-61-18	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 14

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0109		AMY4100T-10U (continued)					E003-01/ /		001, 003-099
TB0109	A	YHLZD-33 (continued)					E003-01/ /		001-099
TB0109	A	YHLZD-29 (continued)					E3-1/ /		115-199
TB0109	A	YHLZD-33 (continued)					E3-1/ /		115-199
TB0109	B	YHLZR-32 (continued)					E003-01/ /		001-099
TB0109	Y	BACM15C3B (continued)					E003-01/ /		ALL
TB0109	Z	BACM15C3C (continued)					E003-01/ /		ALL
	Z	114	BJ	W1265	2219B	22		27-61-18	ALL
	Z	114	BJ	W1265	2220B	22		27-61-18	ALL
	Z	115	BJ	W1265	0612	22		27-09-14	ALL
	Z	115	BJ	W1265	0620	22		27-09-14	ALL
	Z	115	BJ	W1265	0623	22		27-09-14	ALL
	Z	115	BJ	W1265	0624	22		27-09-14	ALL
	Z	115	BJ	W1265	0625	22		27-09-14	ALL
	Z	116	BJ	W1265	0614	22		27-09-11	ALL
	Z	116	BJ	W1265	0615	22		27-09-11	ALL
	Z	116	BJ	W1265	0616	22		27-09-11	ALL
	Z	116	BJ	W1265	0645	22		27-61-13	ALL
	Z	116	BJ	W1265	0674	22		27-61-18	ALL
	Z	116	BJ	W1265	0675	22		27-61-17	ALL
	Z	116	BJ	W1265	0693	22		22-21-11	ALL
	Z	119	BJ	W1265	0679	22		27-61-12	ALL
	Z	119	BJ	W1265	0680	22		27-61-12	ALL
	Z	119	BJ	W1265	0681	22		27-61-12	ALL
	Z	119	BJ	W1265	0682	22		27-61-12	ALL
	Z	119	BJ	W1265	0683	22		27-61-12	ALL
	Z	119	BJ	W1265	0684	22		27-61-12	ALL
	Z	47	BJ	W1265	0219	22		27-09-12	ALL
	Z	47	BJ	W1265	0220	22		27-09-12	ALL
	Z	47	BJ	W1265	0221	22		27-09-12	ALL
	Z	47	BJ	W1265	0223	22		27-09-12	ALL
	Z	47	BJ	W1265	0224	22		27-09-12	ALL
	Z	47	BJ	W1265	0225	22		27-09-12	ALL
	Z	49	BJ	W1265	2103R	22		27-61-17	ALL
	Z	49	BJ	W1265	2113R	22		27-61-18	ALL
	Z	49	BJ	W1265	2122R	22		27-61-13	ALL
	Z	49	BJ	W1265	2123R	22		27-61-13	ALL
	Z	49	BJ	W1265	2127R	22		27-61-13	ALL
	Z	49	BJ	W1265	2128R	22		27-61-13	ALL
	Z	50	BJ	W1265	0250	22		27-61-13	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 15

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.		Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
	Fix	Term					CO		
I I		AMY4100T-10U (continued)					E003-01/ /		001, 003-099
		YHLZD-33 (continued)					E003-01/ /		001-099
	A	YHLZD-29 (continued)					E3-1/ /		115-199
	A	YHLZD-33 (continued)					E3-1/ /		115-199
	B	YHLZR-32 (continued)					E003-01/ /		001-099
	Y	BACM15C3B (continued)					E003-01/ /		ALL
	Z	BACM15C3C (continued)					E003-01/ /		ALL
	Z	50	BJ	W1265	2103B	22		27-61-17	ALL
	Z	50	BJ	W1265	2113B	22		27-61-18	ALL
	Z	50	BJ	W1265	2122B	22		27-61-13	ALL
	Z	50	BJ	W1265	2123B	22		27-61-13	ALL
	Z	50	BJ	W1265	2127B	22		27-61-13	ALL
	Z	50	BJ	W1265	2128B	22		27-61-13	ALL
	Z	55	BJ	W1265	2002R	22		27-21-12	ALL
	Z	55	BJ	W1265	2114R	22		27-21-12	ALL
	Z	55	BJ	W1265	2115R	22		27-21-12	ALL
	Z	55	BJ	W1265	2118R	22		27-21-12	ALL
	Z	55	BJ	W1265	2130R	22		22-21-11	ALL
	Z	55	BJ	W1265	2131R	22		22-21-11	ALL
	Z	56	BJ	W1265	0264	22		27-21-12	ALL
	Z	56	BJ	W1265	2002B	22		27-21-12	ALL
	Z	56	BJ	W1265	2114B	22		27-21-12	ALL
	Z	56	BJ	W1265	2115B	22		27-21-12	ALL
	Z	56	BJ	W1265	2118B	22		27-21-12	ALL
	Z	56	BJ	W1265	2130B	22		22-21-11	ALL
	Z	56	BJ	W1265	2131B	22		22-21-11	ALL
	Z	57	BJ	W1265	0207	22		27-61-17	ALL
	Z	57	BJ	W1265	0216	22		27-09-11	ALL
	Z	57	BJ	W1265	0217	22		27-09-11	ALL
	Z	57	BJ	W1265	0218	22		27-09-11	ALL
	Z	57	BJ	W1265	0257	22		27-61-13	ALL
	Z	57	BJ	W1265	0316	22		27-61-18	ALL
	Z	57	BJ	W1265	0323	22		22-21-11	ALL
	Z	7	BJ	W1265	0001	22		27-09-12	ALL
	Z	7	BJ	W1265	0002	22		27-09-12	ALL
	Z	7	BJ	W1265	0003	22		27-09-12	ALL
	Z	7	BJ	W1265	0004	22		27-09-12	ALL
	Z	7	BJ	W1265	0005	22		27-09-12	ALL
	Z	7	BJ	W1265	0006	22		27-09-12	ALL
	Z	7	BJ	W1265	0008	22		27-09-12	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 16

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0109		AMY4100T-10U (continued)					E003-01/ /		001, 003-099
TB0109	A	YHLZD-33 (continued)					E003-01/ /		001-099
TB0109	A	YHLZD-29 (continued)					E3-1/ /		115-199
TB0109	A	YHLZD-33 (continued)					E3-1/ /		115-199
TB0109	B	YHLZR-32 (continued)					E003-01/ /		001-099
TB0109	Y	BACM15C3B (continued)					E003-01/ /		ALL
TB0109	Z	BACM15C3C (continued)					E003-01/ /		ALL
	Z	8	BJ	W1265	2013R	22		27-61-13	ALL
	Z	8	BJ	W1265	2016R	22		27-61-17	ALL
	Z	8	BJ	W1265	2017R	22		27-61-17	ALL
	Z	8	BJ	W1265	2020R	22		27-61-17	ALL
	Z	8	BJ	W1265	2021R	22		27-61-17	ALL
	Z	8	BJ	W1265	2024R	22		27-61-18	ALL
	Z	85	BJ	W1265	0419	22		27-09-12	ALL
	Z	85	BJ	W1265	0420	22		27-09-12	ALL
	Z	85	BJ	W1265	0421	22		27-09-12	ALL
	Z	9	BJ	W1265	0051	22		27-61-17	ALL
	Z	9	BJ	W1265	2013B	22		27-61-13	ALL
	Z	9	BJ	W1265	2016B	22		27-61-17	ALL
	Z	9	BJ	W1265	2017B	22		27-61-17	ALL
	Z	9	BJ	W1265	2020B	22		27-61-17	ALL
	Z	9	BJ	W1265	2021B	22		27-61-17	ALL
	Z	9	BJ	W1265	2024B	22		27-61-18	ALL
	Y	A001	BJ	W1265	0025	22		27-31-12	ALL
	Y	A001	BJ	W1265	0026	22		27-31-12	ALL
	Y	A001	BJ	W1265	0031	20		27-31-12	ALL
	Y	A003	BJ	W1265	2006R	22		27-61-13	ALL
	Y	A003	BJ	W1265	2007R	22		27-61-13	ALL
	Y	A003	BJ	W1265	2008R	22		27-61-13	ALL
	Y	A004	BJ	W1265	2011R	22		27-61-13	ALL
	Y	A004	BJ	W1265	2014R	22		27-61-17	ALL
	Y	A004	BJ	W1265	2015R	22		27-61-17	ALL
	Y	A004	BJ	W1265	2022R	22		27-61-18	ALL
	Y	A005	BJ	W1265	2012R	22		27-61-13	ALL
	Y	A005	BJ	W1265	2018R	22		27-61-17	ALL
	Y	A005	BJ	W1265	2019R	22		27-61-17	ALL
	Y	A005	BJ	W1265	2023R	22		27-61-18	ALL
	Y	A006	BJ	W1265	0010	22		27-09-13	ALL
	Y	A006	BJ	W1265	0011	22		27-09-13	ALL
	Y	A006	BJ	W1265	0013	22		27-09-13	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 17

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0109		AMY4100T-10U (continued)					E003-01/ /		001, 003-099
TB0109	A	YHLZD-33 (continued)					E003-01/ /		001-099
TB0109	A	YHLZD-29 (continued)					E3-1/ /		115-199
TB0109	A	YHLZD-33 (continued)					E3-1/ /		115-199
TB0109	B	YHLZR-32 (continued)					E003-01/ /		001-099
TB0109	Y	BACM15C3B (continued)					E003-01/ /		ALL
TB0109	Z	BACM15C3C (continued)					E003-01/ /		ALL
	Y	A006	BJ	W1265	0015	22		27-09-13	ALL
	Y	A011	BJ	W1265	5007R	24		22-21-11	ALL
	Y	A011	BJ	W1265	5008R	24		22-21-11	ALL
	Y	A012	BJ	W1265	0090	22		22-21-11	ALL
	Y	A012	BJ	W1265	0091	22		22-21-11	ALL
	Y	A012	BJ	W1265	0092	22		22-21-11	ALL
	Y	A013	BJ	W1265	5004R	24		22-24-11	ALL
	Y	A013	BJ	W1265	5005R	24		22-24-11	ALL
	Y	A013	BJ	W1265	5010R	24		22-21-11	ALL
	Y	A014	BJ	W1265	0065	22		27-41-31	ALL
	Y	A014	BJ	W1265	0066	22		27-41-31	115-199
	Y	A014	BJ	W1265	0067	22		27-41-31	ALL
	Y	A014	BJ	W1265	0072	22		27-41-31	001-099
	Y	A014	BJ	W1265	0073	22		27-41-31	001-099
	Y	A014	BJ	W1265	0081	22		31-31-31	115-199
	Y	A015	BJ	W1265	0123Y	22		27-41-11	ALL
	Y	A015	BJ	W1265	0125Y	22		27-41-11	ALL
	Y	A015	BJ	W1265	0127Y	22		27-41-11	ALL
	Y	A015	BJ	W1265	0727	24		31-31-62	001-099
	Y	A016	BJ	W1265	0161	22		27-48-11	010-099, 115-199
	Y	A016	BJ	W1265	0167	22		27-48-11	010-099, 115-199
	Y	A016	BJ	W1265	2026R	22		31-31-51	010-099
	Y	A016	BJ	W1265	2026R	24		31-31-32	115-199
	Y	A017	BJ	W1265	0159	22		27-48-11	ALL
	Y	A017	BJ	W1265	0162	22		27-48-11	ALL
	Y	A017	BJ	W1265	0163	22		27-48-11	ALL
	Y	A018	BJ	W1265	0630	22		27-21-12	ALL
	Y	A018	BJ	W1265	0632	22		27-21-12	ALL
	Y	A018	BJ	W1265	0708	22		27-21-12	ALL
	A	A019	2	W1265	0028	22		27-31-12	ALL
	A	A019	2	W1265	0033	20		27-31-12	ALL
	A	A021	2	W1265	0027	22		27-31-12	ALL
	A	A021	2	W1265	0032	20		27-31-12	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 18

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0109		AMY4100T-10U (continued)					E003-01/ /		001, 003-099
TB0109	A	YHLZD-33 (continued)					E003-01/ /		001-099
TB0109	A	YHLZD-29 (continued)					E3-1/ /		115-199
TB0109	A	YHLZD-33 (continued)					E3-1/ /		115-199
TB0109	B	YHLZR-32 (continued)					E003-01/ /		001-099
TB0109	Y	BACM15C3B (continued)					E003-01/ /		ALL
TB0109	Z	BACM15C3C (continued)					E003-01/ /		ALL
	B	A026	2	W1265	0729	24		31-31-62	001-099
	B	A027	2	W1265	0730	24		31-31-62	001-099
	A	A028	2	W1265	0072	22		27-41-31	001-099
	A	A029	2	W1265	0073	22		27-41-31	001-099
	B	A030	2	W1265	0074	22		27-41-31	001-099
	B	A030	2	W1265	0079	22		31-31-62	001-099
	B	A031	2	W1265	0075	22		27-41-31	001-099
	B	A031	2	W1265	0078	22		31-31-62	001-099
	Y	A032	BJ	W1265	0076	22		31-31-62	001-099
	Y	A032	BJ	W1265	0077	22		31-31-62	001-099
	Y	A032	BJ	W1265	0080	22		31-31-62	001-099
	Y	A041	BJ	W1265	2101R	22		27-61-17	ALL
	Y	A041	BJ	W1265	2111R	22		27-61-18	ALL
	Y	A041	BJ	W1265	2121R	22		27-61-13	ALL
	Y	A041	BJ	W1265	2125R	22		27-61-13	ALL
	Y	A042	BJ	W1265	0312	22		27-61-12	ALL
	Y	A042	BJ	W1265	0313	22		27-61-12	ALL
	Y	A042	BJ	W1265	0314	22		27-61-12	ALL
	Y	A042	BJ	W1265	0315	22		27-61-12	ALL
	Y	A043	BJ	W1265	2102R	22		27-61-17	ALL
	Y	A043	BJ	W1265	2112R	22		27-61-18	ALL
	Y	A043	BJ	W1265	2124R	22		27-61-13	ALL
	Y	A043	BJ	W1265	2126R	22		27-61-13	ALL
	Y	A044	BJ	W1265	2106R	22		27-61-18	ALL
	Y	A044	BJ	W1265	2107R	22		27-61-18	ALL
	Y	A044	BJ	W1265	2108R	22		27-61-18	ALL
	Y	A045	BJ	W1265	0228	22		27-09-13	ALL
	Y	A045	BJ	W1265	0230	22		27-09-13	ALL
	Y	A045	BJ	W1265	0232	22		27-09-13	ALL
	Y	A046	BJ	W1265	0239	22		27-09-14	ALL
	Y	A046	BJ	W1265	0240	22		27-09-14	ALL
	Y	A046	BJ	W1265	0241	22		27-09-14	ALL
	Y	A046	BJ	W1265	0244	22		27-09-14	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 19

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.		Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
	Fix	Term					CO		
I I		AMY4100T-10U (continued)					E003-01/ /		001, 003-099
		YHLZD-33 (continued)					E003-01/ /		001-099
		YHLZD-29 (continued)					E3-1/ /		115-199
		YHLZD-33 (continued)					E3-1/ /		115-199
		YHLZR-32 (continued)					E003-01/ /		001-099
		BACM15C3B (continued)					E003-01/ /		ALL
		BACM15C3C (continued)					E003-01/ /		ALL
	Y	A051	BJ	W1265	3001B	22		27-21-12	ALL
	Y	A051	BJ	W1265	3101B	22		27-21-12	ALL
	Y	A051	BJ	W1265	3103B	22		27-21-12	ALL
	Y	A052	BJ	W1265	3001R	22		27-21-12	ALL
	Y	A052	BJ	W1265	3101R	22		27-21-12	ALL
	Y	A052	BJ	W1265	3103R	22		27-21-12	ALL
	Y	A053	BJ	W1265	2117R	22		27-21-12	ALL
	Y	A053	BJ	W1265	2119R	22		27-21-12	ALL
	Y	A053	BJ	W1265	2133R	22		27-21-12	ALL
	Y	A054	BJ	W1265	0265	22		27-21-12	ALL
	Y	A054	BJ	W1265	0318	22		27-21-12	ALL
	Y	A054	BJ	W1265	0319	22		27-21-12	ALL
	Y	A059	BJ	W1265	5101R	24		22-24-11	ALL
	Y	A059	BJ	W1265	5102R	24		22-24-11	ALL
	Y	A059	BJ	W1265	5104R	24		22-21-11	ALL
	Y	A061	BJ	W1265	0236	22		27-09-14	ALL
	Y	A061	BJ	W1265	0242	22		27-09-14	ALL
	Y	A061	BJ	W1265	0243	22		27-09-14	ALL
	Y	A081	BJ	W1265	2201R	22		27-61-13	ALL
	Y	A081	BJ	W1265	2211R	22		27-61-17	ALL
	Y	A081	BJ	W1265	2214R	22		27-61-18	ALL
	Y	A081	BJ	W1265	2215R	22		27-61-18	ALL
	Y	A082	BJ	W1265	2202R	22		27-61-13	ALL
	Y	A082	BJ	W1265	2212R	22		27-61-17	ALL
	Y	A082	BJ	W1265	2218R	22		27-61-18	ALL
	Y	A082	BJ	W1265	2221R	22		27-61-18	ALL
	Y	A083	BJ	W1265	2206R	22		27-61-17	ALL
	Y	A083	BJ	W1265	2207R	22		27-61-17	ALL
	Y	A083	BJ	W1265	2208R	22		27-61-17	ALL
	Y	A084	BJ	W1265	0422	22		27-09-13	ALL
	Y	A084	BJ	W1265	0424	22		27-09-13	ALL
	Y	A084	BJ	W1265	0426	22		27-09-13	ALL
	Y	A084	BJ	W1265	0428	22		27-09-13	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 20

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0109		AMY4100T-10U (continued)					E003-01/ /		001, 003-099
TB0109	A	YHLZD-33 (continued)					E003-01/ /		001-099
TB0109	A	YHLZD-29 (continued)					E3-1/ /		115-199
TB0109	A	YHLZD-33 (continued)					E3-1/ /		115-199
TB0109	B	YHLZR-32 (continued)					E003-01/ /		001-099
TB0109	Y	BACM15C3B (continued)					E003-01/ /		ALL
TB0109	Z	BACM15C3C (continued)					E003-01/ /		ALL
	Y	A087	BJ	W1265	5201R	24		22-21-11	ALL
	Y	A087	BJ	W1265	5202R	24		22-21-11	ALL
	Y	A087	BJ	W1265	5203R	24		22-21-11	ALL
	Y	A088	BJ	W1265	0482	22		22-21-11	ALL
	Y	A088	BJ	W1265	0483	22		22-21-11	ALL
	Y	A088	BJ	W1265	0484	22		22-21-11	ALL
	Y	A089	BJ	W1265	5204R	24		22-22-11	ALL
	Y	A089	BJ	W1265	5205R	24		22-22-11	ALL
	Y	A089	BJ	W1265	5206R	24		22-22-11	ALL
	Y	A090	BJ	W1265	0491	22		22-24-11	ALL
	Y	A090	BJ	W1265	0492	22		22-24-11	ALL
	Y	A090	BJ	W1265	0493	22		22-24-11	ALL
	Y	A091	BJ	W1265	0523	22		27-61-17	ALL
	Y	A091	BJ	W1265	0524	22		27-61-17	ALL
	Y	A091	BJ	W1265	0669	22		27-61-12	ALL
	Y	A092	BJ	W1265	0415	22		27-09-12	ALL
	Y	A092	BJ	W1265	0416	22		27-09-12	ALL
	Y	A092	BJ	W1265	0592	22		27-09-12	ALL
	Y	A092	BJ	W1265	0593	22		27-09-12	ALL
	Y	A093	BJ	W1265	0418	22		27-09-12	ALL
	Y	A093	BJ	W1265	0588	22		27-09-12	ALL
	Y	A093	BJ	W1265	0589	22		27-09-12	ALL
	Y	A095	BJ	W1265	0610	22		27-09-14	ALL
	Y	A095	BJ	W1265	0622	22		27-09-14	ALL
	Y	A095	BJ	W1265	0672	22		27-09-14	ALL
	Y	A109	BJ	W1265	0699	22		27-41-11	ALL
	Y	A109	BJ	W1265	0701	22		27-41-11	ALL
	Y	A109	BJ	W1265	0703	22		27-41-11	ALL
	Y	A109	BJ	W1265	0706	22		27-41-11	ALL
	Y	A111	BJ	W1265	0634	22		27-31-12	ALL
	Y	A111	BJ	W1265	0636	22		27-31-12	ALL
	Y	A111	BJ	W1265	0638	22		27-31-12	ALL
	Y	A112	BJ	W1265	0640	22		27-31-12	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 21

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0109		AMY4100T-10U (continued)					E003-01/ /		001, 003-099
TB0109	A	YHLZD-33 (continued)					E003-01/ /		001-099
TB0109	A	YHLZD-29 (continued)					E3-1/ /		115-199
TB0109	A	YHLZD-33 (continued)					E3-1/ /		115-199
TB0109	B	YHLZR-32 (continued)					E003-01/ /		001-099
TB0109	Y	BACM15C3B (continued)					E003-01/ /		ALL
TB0109	Z	BACM15C3C (continued)					E003-01/ /		ALL
	Y	A112	BJ	W1265	0641	22		27-31-12	ALL
	Y	A112	BJ	W1265	0642	22		27-31-12	ALL
	Y	A117	BJ	W1265	0628	22		27-21-12	ALL
	Y	A117	BJ	W1265	0629	22		27-21-12	ALL
	Y	A117	BJ	W1265	0631	22		27-21-12	ALL
	Y	A117	BJ	W1265	0633	22		27-21-12	ALL
	Y	A118	BJ	W1265	0687	22		22-21-11	ALL
	Y	A118	BJ	W1265	0688	22		22-21-11	ALL
	Y	A118	BJ	W1265	0689	22		22-21-11	ALL
	Y	A118	BJ	W1265	0690	22		22-21-11	ALL
	Y	C003	BJ	W1265	2006B	22		27-61-13	ALL
	Y	C003	BJ	W1265	2007B	22		27-61-13	ALL
	Y	C003	BJ	W1265	2008B	22		27-61-13	ALL
	Y	C004	BJ	W1265	2011B	22		27-61-13	ALL
	Y	C004	BJ	W1265	2014B	22		27-61-17	ALL
	Y	C004	BJ	W1265	2015B	22		27-61-17	ALL
	Y	C004	BJ	W1265	2022B	22		27-61-18	ALL
	Y	C005	BJ	W1265	2012B	22		27-61-13	ALL
	Y	C005	BJ	W1265	2018B	22		27-61-17	ALL
	Y	C005	BJ	W1265	2019B	22		27-61-17	ALL
	Y	C005	BJ	W1265	2023B	22		27-61-18	ALL
	Y	C006	BJ	W1265	0009	22		27-09-13	ALL
	Y	C006	BJ	W1265	0012	22		27-09-13	ALL
	Y	C006	BJ	W1265	0014	22		27-09-13	ALL
	Y	C006	BJ	W1265	0016	22		27-09-13	ALL
	Y	C011	BJ	W1265	5007B	24		22-21-11	ALL
	Y	C011	BJ	W1265	5008B	24		22-21-11	ALL
	Y	C012	BJ	W1265	0068	22		22-24-11	ALL
	Y	C012	BJ	W1265	0069	22		22-24-11	ALL
	Y	C012	BJ	W1265	0070	22		22-24-11	ALL
	Y	C013	BJ	W1265	5004B	24		22-24-11	ALL
	Y	C013	BJ	W1265	5005B	24		22-24-11	ALL
	Y	C013	BJ	W1265	5010B	24		22-21-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 22

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.		Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
	Fix	Term					CO		
TB0109		AMY4100T-10U (continued)					E003-01/ /		001, 003-099
TB0109	A	YHLZD-33 (continued)					E003-01/ /		001-099
TB0109	A	YHLZD-29 (continued)					E3-1/ /		115-199
TB0109	A	YHLZD-33 (continued)					E3-1/ /		115-199
TB0109	B	YHLZR-32 (continued)					E003-01/ /		001-099
TB0109	Y	BACM15C3B (continued)					E003-01/ /		ALL
TB0109	Z	BACM15C3C (continued)					E003-01/ /		ALL
	Y	C014	BJ	W1265	0122Y	22		27-41-11	ALL
	Y	C014	BJ	W1265	0124Y	22		27-41-11	ALL
	Y	C014	BJ	W1265	0126Y	22		27-41-11	ALL
	Y	C014	BJ	W1265	0728	24		31-31-62	001-099
	Y	C016	BJ	W1265	0160	22		27-48-11	010-099, 115-199
	Y	C016	BJ	W1265	0164	22		27-48-11	010-099, 115-199
	Y	C016	BJ	W1265	2026B	22		31-31-51	010-099
	Y	C016	BJ	W1265	2026B	24		31-31-32	115-199
	Y	C017	BJ	W1265	0174	22		27-32-11	001-099
	Y	C017	BJ	W1265	0174	24		27-32-11	115-199
	Y	C017	BJ	W1265	0176	22		27-32-11	001-099
	Y	C017	BJ	W1265	0176	24		27-32-11	115-199
	Y	C017	BJ	W1265	0177	22		27-32-11	001-099
	Y	C017	BJ	W1265	0177	24		27-32-11	115-199
	Y	C017	BJ	W1265	0711	24		34-46-12	115-199
	A	C019	2	W1265	0030	20		27-31-12	ALL
	A	C021	2	W1265	0029	20		27-31-12	ALL
	B	C026	2	W1265	0727	24		31-31-62	001-099
	B	C027	2	W1265	0728	24		31-31-62	001-099
	A	C028	2	W1265	0066	22		27-41-31	001-099
	A	C028	2	W1265	0074	22		27-41-31	001-099
	A	C029	2	W1265	0075	22		27-41-31	001-099
	A	C029	2	W1265	0082	22		27-41-31	001-099
	B	C030	2	W1265	0077	22		31-31-62	001-099
	B	C031	2	W1265	0076	22		31-31-62	001-099
	Y	C041	BJ	W1265	2101B	22		27-61-17	ALL
	Y	C041	BJ	W1265	2111B	22		27-61-18	ALL
	Y	C041	BJ	W1265	2121B	22		27-61-13	ALL
	Y	C041	BJ	W1265	2125B	22		27-61-13	ALL
	Y	C043	BJ	W1265	2102B	22		27-61-17	ALL
	Y	C043	BJ	W1265	2112B	22		27-61-18	ALL
	Y	C043	BJ	W1265	2124B	22		27-61-13	ALL
	Y	C043	BJ	W1265	2126B	22		27-61-13	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 23

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.		Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
	Fix	Term					CO		
I I		AMY4100T-10U (continued)					E003-01/ /		001, 003-099
		YHLZD-33 (continued)					E003-01/ /		001-099
		YHLZD-29 (continued)					E3-1/ /		115-199
		YHLZD-33 (continued)					E3-1/ /		115-199
		YHLZR-32 (continued)					E003-01/ /		001-099
		BACM15C3B (continued)					E003-01/ /		ALL
		BACM15C3C (continued)					E003-01/ /		ALL
	Y	C044	BJ	W1265	2106B	22		27-61-18	ALL
	Y	C044	BJ	W1265	2107B	22		27-61-18	ALL
	Y	C044	BJ	W1265	2108B	22		27-61-18	ALL
	Y	C045	BJ	W1265	0227	22		27-09-13	ALL
	Y	C045	BJ	W1265	0229	22		27-09-13	ALL
	Y	C045	BJ	W1265	0231	22		27-09-13	ALL
	Y	C045	BJ	W1265	0233	22		27-09-13	ALL
	Y	C051	BJ	W1265	3001Y	22		27-21-12	ALL
	Y	C051	BJ	W1265	3101Y	22		27-21-12	ALL
	Y	C051	BJ	W1265	3103Y	22		27-21-12	ALL
	Y	C053	BJ	W1265	2117B	22		27-21-12	ALL
	Y	C053	BJ	W1265	2119B	22		27-21-12	ALL
	Y	C053	BJ	W1265	2133B	22		27-21-12	ALL
	Y	C059	BJ	W1265	5101B	24		22-24-11	ALL
	Y	C059	BJ	W1265	5102B	24		22-24-11	ALL
	Y	C059	BJ	W1265	5104B	24		22-21-11	ALL
	Y	C081	BJ	W1265	2201B	22		27-61-13	ALL
	Y	C081	BJ	W1265	2211B	22		27-61-17	ALL
	Y	C081	BJ	W1265	2214B	22		27-61-18	ALL
	Y	C081	BJ	W1265	2215B	22		27-61-18	ALL
	Y	C082	BJ	W1265	2202B	22		27-61-13	ALL
	Y	C082	BJ	W1265	2212B	22		27-61-17	ALL
	Y	C082	BJ	W1265	2218B	22		27-61-18	ALL
	Y	C082	BJ	W1265	2221B	22		27-61-18	ALL
	Y	C083	BJ	W1265	2206B	22		27-61-17	ALL
	Y	C083	BJ	W1265	2207B	22		27-61-17	ALL
	Y	C083	BJ	W1265	2208B	22		27-61-17	ALL
	Y	C084	BJ	W1265	0423	22		27-09-13	ALL
	Y	C084	BJ	W1265	0425	22		27-09-13	ALL
	Y	C084	BJ	W1265	0427	22		27-09-13	ALL
	Y	C084	BJ	W1265	0429	22		27-09-13	ALL
	Y	C087	BJ	W1265	5201B	24		22-21-11	ALL
	Y	C087	BJ	W1265	5202B	24		22-21-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 24

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0109		AMY4100T-10U (continued)					E003-01/ /		001, 003-099
TB0109	A	YHLZD-33 (continued)					E003-01/ /		001-099
TB0109	A	YHLZD-29 (continued)					E3-1/ /		115-199
TB0109	A	YHLZD-33 (continued)					E3-1/ /		115-199
TB0109	B	YHLZR-32 (continued)					E003-01/ /		001-099
TB0109	Y	BACM15C3B (continued)					E003-01/ /		ALL
TB0109	Z	BACM15C3C (continued)					E003-01/ /		ALL
	Y	C087	BJ	W1265	5203B	24		22-21-11	ALL
	Y	C088	BJ	W1265	0486	22		22-22-11	ALL
	Y	C088	BJ	W1265	0487	22		22-22-11	ALL
	Y	C088	BJ	W1265	0488	22		22-22-11	ALL
	Y	C089	BJ	W1265	5204B	24		22-22-11	ALL
	Y	C089	BJ	W1265	5205B	24		22-22-11	ALL
	Y	C089	BJ	W1265	5206B	24		22-22-11	ALL
	Y	C091	BJ	W1265	0368Y	22		27-41-11	ALL
	Y	C091	BJ	W1265	0369Y	22		27-41-11	ALL
	Y	C091	BJ	W1265	0370Y	22		27-41-11	ALL
	Y	C092	BJ	W1265	0417	22		27-09-12	ALL
	Y	C092	BJ	W1265	0590	22		27-09-12	ALL
	Y	C092	BJ	W1265	0591	22		27-09-12	ALL
	Y	C095	BJ	W1265	0609	22		27-09-14	ALL
	Y	C095	BJ	W1265	0621	22		27-09-14	ALL
	Y	C095	BJ	W1265	0673	22		27-09-14	ALL
	Y	C109	BJ	W1265	0700	22		27-41-11	ALL
	Y	C109	BJ	W1265	0702	22		27-41-11	ALL
	Y	C109	BJ	W1265	0704	22		27-41-11	ALL
	Y	C109	BJ	W1265	0705	22		27-41-11	ALL
	Y	C111	BJ	W1265	0635	22		27-31-12	ALL
	Y	C111	BJ	W1265	0637	22		27-31-12	ALL
	Y	C111	BJ	W1265	0639	22		27-31-12	ALL
	Y	C112	BJ	W1265	0611	22		27-09-14	ALL
	Y	C112	BJ	W1265	0619	22		27-09-14	ALL
	Y	C112	BJ	W1265	0627	22		27-09-14	ALL
	Y	C117	BJ	W1265	0617	22		27-09-14	ALL
	Y	C117	BJ	W1265	0618	22		27-09-14	ALL
	Y	C117	BJ	W1265	0626	22		27-09-14	ALL
	Y	C118	BJ	W1265	0695	22		22-24-11	ALL
	Y	C118	BJ	W1265	0696	22		22-24-11	ALL
	Y	C118	BJ	W1265	0697	22		22-24-11	ALL
	Y	C118	BJ	W1265	0698	22		22-24-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 25

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0111		MS27212-12					272/280/14		ALL
TB0111	A	YHLZD-33					272/280/L014		001-099
TB0111	A	YHLZD-33					272/280/L14		115-199
TB0111	B	YHLZR-17					272/280/L014		001-099
TB0111	B	YHLZR-17					272/280/L14		115-199
TB0111	X	BACM15C3A					272/280/L014		001-099
TB0111	X	BACM15C3A					272/280/L14		115-199
TB0111	Y	BACM15C3B					272/280/L014		001-099
TB0111	Y	BACM15C3B					272/280/L14		115-199
TB0111	Z	BACM15C3C					272/280/L014		001-099
TB0111	Z	BACM15C3C					272/280/L14		115-199
	X	A001	BJ	W2064	0144	20		23-11-11	ALL
	X	A001	BJ	W2343	0009	20		23-11-11	ALL
	A	A003	2	W0126	0507	22		24-51-31	115-199
	A	A003	2	W2066	0276	24		24-51-31	001-099
	Y	A005	BJ	W2066	3008Y	24		33-13-31	ALL
	Y	A005	BJ	W2070	3014Y	24		33-13-31	ALL
	Y	A005	BJ	W2070	3017Y	24		33-13-32	ALL
	Y	A006	BJ	W2066	3008R	24		33-13-31	ALL
	Y	A006	BJ	W2070	3014R	24		33-13-31	ALL
	Y	A006	BJ	W2070	3017R	24		33-13-32	ALL
	A	A007	2	W0130	0053	22		24-51-31	115-199
	A	A007	2	W2072	0154	24		24-51-31	001-099
	A	A008	2	W0132	0350	22		24-51-31	115-199
	A	A008	2	W2078	0425	24		24-51-31	001-099
	Y	A009	BJ	W2156	0031	24		21-58-11	ALL
	Y	A009	BJ	W2221	0017	24		21-58-11	ALL
	Y	A009	BJ	W2223	0015	24		21-58-11	ALL
	Y	A009	BJ	W2225	0011	24		21-58-11	ALL
	A	A016	2	W2066	0345	22		29-11-22	ALL
	B	A017	2	W2066	0345	22		29-11-22	ALL
	X	B002	BJ	W2064	0334	22		30-41-11	ALL
	X	B002	BJ	W2072	0067	22		30-41-11	ALL
	X	C001	BJ	W2066	0431	24		21-61-31	ALL
	X	C001	BJ	W2072	0239	24		21-61-31	ALL
	X	C002	BJ	W2070	0313	22		33-51-12	001-099
	X	C002	BJ	W2078	0549	22		33-51-12	001-099
	A	C003	2	W0122	0007	22		24-51-31	115-199
	A	C003	2	W2072	0155	24		24-51-31	001-099
	Y	C005	BJ	W2066	3008B	24		33-13-31	ALL
	Y	C005	BJ	W2070	3014B	24		33-13-31	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 26

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0111		MS27212-12 (continued)					272/280/14		ALL
TB0111	A	YHLZD-33 (continued)					272/280/L014		001-099
TB0111	A	YHLZD-33 (continued)					272/280/L14		115-199
TB0111	B	YHLZR-17 (continued)					272/280/L014		001-099
TB0111	B	YHLZR-17 (continued)					272/280/L14		115-199
TB0111	X	BACM15C3A (continued)					272/280/L014		001-099
TB0111	X	BACM15C3A (continued)					272/280/L14		115-199
TB0111	Y	BACM15C3B (continued)					272/280/L014		001-099
TB0111	Y	BACM15C3B (continued)					272/280/L14		115-199
TB0111	Z	BACM15C3C (continued)					272/280/L014		001-099
TB0111	Z	BACM15C3C (continued)					272/280/L14		115-199
	Y	C005	BJ	W2070	3017B	24		33-13-32	ALL
	Y	C006	BJ	W2066	0342	24		33-13-31	ALL
	Y	C006	BJ	W2066	0420	24		33-13-31	ALL
	Y	C006	BJ	W2070	0384	24		33-13-32	ALL
	A	C007	2	W0122	0007	22		24-51-31	115-199
	A	C007	2	W0122	0008	22		24-51-31	115-199
	A	C007	2	W2072	0155	24		24-51-31	001-099
	A	C007	2	W2072	0156	24		24-51-31	001-099
	A	C008	2	W0122	0008	22		24-51-31	115-199
	A	C008	2	W0122	0009	22		24-51-31	115-199
	A	C008	2	W2072	0156	24		24-51-31	001-099
	A	C008	2	W2072	0157	24		24-51-31	001-099
	Y	C009	BJ	W2221	0018	24		21-58-11	ALL
	Y	C009	BJ	W2221	0020	20		21-58-11	ALL
	Y	C009	BJ	W2223	0016	24		21-58-11	ALL
	Y	C009	BJ	W2225	0012	24		21-58-11	ALL
	A	C016	2	W2066	0346	22		29-11-22	ALL
	A	C016	2	W2066	0400	22		29-11-22	ALL
	B	C017	2	W2066	0344	22		29-11-22	ALL
	X	D002	BJ	W2070	0380	24		33-11-31	001-099
	X	D002	BJ	W2078	0548	24		33-11-31	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 27

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0112		MS27212-12					272/280/R014		ALL
TB0112	A	YHLZD-33					272/280/R014		001-099
TB0112	A	YHLZD-33					272/280/R14		115-199
TB0112	X	BACM15C3A					272/280/R014		001-099
TB0112	X	BACM15C3A					272/280/R14		115-199
TB0112	Y	BACM15C3B					272/280/R014		001-099
TB0112	Y	BACM15C3B					272/280/R14		115-199
TB0112	Z	BACM15C3C					272/280/R014		001-099
TB0112	Z	BACM15C3C					272/280/R14		115-199
	Z	11	BJ	W2066	0205	22		33-16-12	ALL
	Z	11	BJ	W2066	0309	22		33-16-12	ALL
	Z	11	BJ	W2070	0277	22		33-16-12	ALL
	Z	5	BJ	W2064	0227	22		33-16-12	ALL
	Z	5	BJ	W2066	0016	22		33-16-12	ALL
	Z	5	BJ	W2066	0311	22		33-16-12	ALL
	Z	5	BJ	W2066	0313	22		33-16-12	ALL
	Z	6	BJ	W2064	0227	22		33-16-12	ALL
	Z	6	BJ	W2066	0305	22		33-16-12	ALL
	Z	6	BJ	W2066	0307	22		33-16-12	ALL
	Z	6	BJ	W2066	0310	22		33-16-12	ALL
	Z	7	BJ	W2064	0218	22		33-16-12	ALL
	Z	7	BJ	W2064	0228	22		33-16-12	ALL
	Z	7	BJ	W2066	0070	22		33-16-12	ALL
	Z	7	BJ	W2066	0306	22		33-16-12	ALL
	Z	8	BJ	W2064	0223	22		33-16-12	ALL
	Z	8	BJ	W2064	0228	22		33-16-12	ALL
	Z	8	BJ	W2066	0308	22		33-16-12	ALL
	Z	8	BJ	W2066	0312	22		33-16-12	ALL
	Z	8	BJ	W2066	0314	22		33-16-12	ALL
	Y	A002	BJ	W2066	0300	22		33-16-12	ALL
	Y	A002	BJ	W2221	0015	22		33-16-12	ALL
	Y	A002	BJ	W2221	0016	22		33-16-12	ALL
	X	A003	BJ	W2064	0130	22		33-16-22	ALL
	X	A003	BJ	W2066	0424	22		33-16-22	ALL
	X	A004	BJ	W2066	0425	22		33-16-22	ALL
	X	A004	BJ	W2070	0280	22		33-16-22	ALL
	Y	A010	BJ	W2066	0017	24		21-25-11	ALL
	Y	A010	BJ	W2066	0150	24		21-25-11	ALL
	Y	A010	BJ	W2066	0151	24		21-25-11	ALL
	X	A015	BJ	W2066	0580	22		SPARE	001-099
	X	A016	BJ	W2066	0299	22		33-16-12	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 28

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0112		MS27212-12 (continued)					272/280/R014		ALL
TB0112	A	YHLZD-33 (continued)					272/280/R014		001-099
TB0112	A	YHLZD-33 (continued)					272/280/R14		115-199
TB0112	X	BACM15C3A (continued)					272/280/R014		001-099
TB0112	X	BACM15C3A (continued)					272/280/R14		115-199
TB0112	Y	BACM15C3B (continued)					272/280/R014		001-099
TB0112	Y	BACM15C3B (continued)					272/280/R14		115-199
TB0112	Z	BACM15C3C (continued)					272/280/R014		001-099
TB0112	Z	BACM15C3C (continued)					272/280/R14		115-199
	X	A016	BJ	W2221	0014	22		33-16-12	ALL
	A	A017	2	W0130	0402	24		26-16-11	115-199
	A	A017	2	W2072	0163	24		26-16-11	001-099
	A	A018	2	W0134	0402	24		26-16-11	115-199
	A	A018	2	W2156	0171	24		26-16-11	001-099
	A	A019	2	W0130	0308	24		26-15-11	115-199
	A	A019	2	W2072	0161	24		26-15-11	001-099
	A	A020	2	W0134	0304	24		26-15-11	115-199
	A	A020	2	W2078	0429	24		26-15-11	001-099
	A	A021	2	W0130	0310	24		26-11-21	115-199
	A	A021	2	W2072	0159	24		26-11-21	001-099
	A	A022	2	W0134	0306	24		26-11-21	115-199
	A	A022	2	W2078	0428	24		26-11-21	001-099
	A	A023	2	W0130	0205	24		26-11-11	115-199
	A	A023	2	W2072	0158	24		26-11-11	001-099
	A	A024	2	W0134	0200	24		26-11-11	115-199
	A	A024	2	W2078	0426	24		26-11-11	001-099
	X	B004	BJ	W2066	0146	20		21-31-11	ALL
	X	B004	BJ	W2078	0423	20		21-31-11	ALL
	X	B015	BJ	W2066	0579	22		SPARE	001-099
	X	B016	BJ	W2066	0324	22		33-16-21	ALL
	X	B016	BJ	W2221	0013	22		33-16-21	ALL
	X	C003	BJ	W2066	0561	24		33-24-11	ALL
	X	C003	BJ	W2072	0250	24		33-24-11	ALL
	X	C004	BJ	W2078	0513	24		28-25-11	001-099
	X	C004	BJ	W2078	0513	22		28-25-11	115-199
	X	C004	BJ	W2156	0192	24		28-25-11	001-099
	X	C004	BJ	W2156	0192	22		28-25-11	115-199
	Y	C009	BJ	W2064	0246	22		33-16-22	ALL
	Y	C009	BJ	W2064	0247	22		33-16-22	ALL
	Y	C009	BJ	W2066	0426	22		33-16-22	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 29

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0112		MS27212-12 (continued)					272/280/R014		ALL
TB0112	A	YHLZD-33 (continued)					272/280/R014		001-099
TB0112	A	YHLZD-33 (continued)					272/280/R14		115-199
TB0112	X	BACM15C3A (continued)					272/280/R014		001-099
TB0112	X	BACM15C3A (continued)					272/280/R14		115-199
TB0112	Y	BACM15C3B (continued)					272/280/R014		001-099
TB0112	Y	BACM15C3B (continued)					272/280/R14		115-199
TB0112	Z	BACM15C3C (continued)					272/280/R014		001-099
TB0112	Z	BACM15C3C (continued)					272/280/R14		115-199
	X	C015	BJ	W2066	3005Y	22		21-31-31	ALL
	X	C015	BJ	W2078	3003Y	22		21-31-31	ALL
	X	C016	BJ	W2066	3005R	22		21-31-31	ALL
	X	C016	BJ	W2078	3003R	22		21-31-31	ALL
	A	C017	2	W0134	0403	24		26-16-11	115-199
	A	C017	2	W2156	0069	22		26-16-11	001-099
	A	C017	2	W2156	0172	24		26-16-11	001-099
	A	C018	2	W0134	0403	24		26-16-11	115-199
	A	C018	2	W0134	0419	24		26-16-11	115-199
	A	C018	2	W2156	0172	24		26-16-11	001-099
	A	C019	2	W0134	0305	24		26-15-11	115-199
	A	C019	2	W2072	0162	24		26-15-11	001-099
	A	C020	2	W0134	0301	24		26-15-11	115-199
	A	C020	2	W0134	0305	24		26-15-11	115-199
	A	C020	2	W2072	0162	24		26-15-11	001-099
	A	C020	2	W2078	0092	22		26-15-11	001-099
	A	C021	2	W0134	0307	24		26-11-21	115-199
	A	C021	2	W2072	0160	24		26-11-21	001-099
	A	C022	2	W0134	0300	24		26-11-21	115-199
	A	C022	2	W0134	0307	24		26-11-21	115-199
	A	C022	2	W2072	0160	24		26-11-21	001-099
	A	C022	2	W2078	0061	22		26-11-21	001-099
	A	C023	2	W0134	0210	24		26-11-11	115-199
	A	C023	2	W2078	0427	24		26-11-11	001-099
	A	C024	2	W0134	0210	24		26-11-11	115-199
	A	C024	2	W0134	0216	24		26-11-11	115-199
	A	C024	2	W2078	0427	24		26-11-11	001-099
	A	C024	2	W4230	0009	22		26-11-11	001-099
	X	D004	BJ	W2078	0514	24		28-25-11	001-099
	X	D004	BJ	W2078	0514	22		28-25-11	115-199
	X	D004	BJ	W2156	0191	24		28-25-11	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 30

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0112		MS27212-12 (continued)					272/280/R014		ALL
TB0112	A	YHLZD-33 (continued)					272/280/R014		001-099
TB0112	A	YHLZD-33 (continued)					272/280/R14		115-199
TB0112	X	BACM15C3A (continued)					272/280/R014		001-099
TB0112	X	BACM15C3A (continued)					272/280/R14		115-199
TB0112	Y	BACM15C3B (continued)					272/280/R014		001-099
TB0112	Y	BACM15C3B (continued)					272/280/R14		115-199
TB0112	Z	BACM15C3C (continued)					272/280/R014		001-099
TB0112	Z	BACM15C3C (continued)					272/280/R14		115-199
	X	D004	BJ	W2156	0191	22		28-25-11	115-199
	X	D015	BJ	W2066	3005B	22		21-31-31	ALL
	X	D015	BJ	W2078	3003B	22		21-31-31	ALL
	X	D016	BJ	W2064	0003	22		30-41-11	ALL
	X	D016	BJ	W2066	0058	22		30-41-11	ALL
TB0113		MS27212-12					272/280/L015		ALL
TB0113	A	YHLZD-33					272/280/L015		ALL
TB0113	B	YHLZR-17					272/280/L015		001-099
TB0113	B	YHLZR-17					272/280/L15		115-199
TB0113	X	BACM15C3A					272/280/L015		001-099
TB0113	X	BACM15C3A					272/280/L15		115-199
TB0113	Y	BACM15C3B					272/280/L015		001-099
TB0113	Y	BACM15C3B					272/280/L15		115-199
TB0113	Z	BACM15C3C					272/280/L015		001-099
TB0113	Z	BACM15C3C					272/280/L15		115-199
	Z	13	BJ	W2066	0257	22		33-51-11	ALL
	Z	13	BJ	W2070	0361	22		33-51-11	ALL
	Z	14	BJ	W2066	0256	22		33-51-11	ALL
	Z	14	BJ	W2066	0258	22		33-51-11	ALL
	Z	14	BJ	W2070	0117	22		33-51-11	ALL
	Z	14	BJ	W2070	0255	22		33-51-11	ALL
	Z	14	BJ	W2070	0258	22		33-51-11	ALL
	Z	14	BJ	W2070	0362	22		33-51-11	ALL
	X	A001	BJ	W2066	0338	24		22-21-21	ALL
	X	A001	BJ	W2072	0041	22		22-21-21	ALL
	X	A002	BJ	W2070	0017	22		23-43-11	ALL
	X	A002	BJ	W2351	0046	22		23-43-11	ALL
	Y	A003	BJ	W2070	0151	24		21-25-11	ALL
	Y	A003	BJ	W2070	0156	24		21-25-11	ALL
	Y	A003	BJ	W2070	0428	24		21-25-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 31

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0113		MS27212-12 (continued)					272/280/L015		ALL
TB0113	A	YHLZD-33 (continued)					272/280/L015		ALL
TB0113	B	YHLZR-17 (continued)					272/280/L015		001-099
TB0113	B	YHLZR-17 (continued)					272/280/L15		115-199
TB0113	X	BACM15C3A (continued)					272/280/L015		001-099
TB0113	X	BACM15C3A (continued)					272/280/L15		115-199
TB0113	Y	BACM15C3B (continued)					272/280/L015		001-099
TB0113	Y	BACM15C3B (continued)					272/280/L15		115-199
TB0113	Z	BACM15C3C (continued)					272/280/L015		001-099
TB0113	Z	BACM15C3C (continued)					272/280/L15		115-199
	Y	A004	BJ	W2072	0048	22		30-11-11	115-199
	Y	A004	BJ	W2078	0459	22		30-11-11	115-199
	Y	A006	BJ	W2070	0087	24		30-32-11	ALL
	Y	A006	BJ	W2072	0001	24		30-32-11	ALL
	Y	A006	BJ	W2072	0005	24		30-32-11	ALL
	A	A007	2	W0128	0120	22		23-51-11	115-199
	A	A007	2	W2156	0168	22		23-51-11	001-099
	A	A008	2	W0134	0122	22		23-51-11	115-199
	A	A008	2	W2156	0169	22		23-51-11	001-099
	A	A009	2	W0134	0220	22		23-51-21	115-199
	A	A009	2	W2070	0535	22		23-51-21	001-099
	A	A010	2	W0128	0121	22		23-51-21	115-199
	A	A010	2	W2070	0534	22		23-51-21	001-099
	X	A011	BJ	W2070	0009	22		30-41-12	ALL
	X	A011	BJ	W2072	0053	22		30-41-12	ALL
	X	A012	BJ	W2070	0219	22		33-16-31	ALL
	X	A012	BJ	W2223	0014	22		33-16-31	ALL
	X	A015	BJ	W2066	0191	22		33-51-11	ALL
	X	A015	BJ	W2070	0502	22		33-51-11	ALL
	X	A016	BJ	W2066	1001	24		21-31-21	ALL
	X	A016	BJ	W2072	0240	20		21-31-21	ALL
	X	A019	BJ	W2078	0002	24		36-11-41	001-099
	X	A019	BJ	W2080	0019	24		36-11-41	001-099
	B	A021	2	W2070	0357	22		29-11-12	ALL
	A	A022	2	W2070	0357	22		29-11-12	ALL
	A	A023	2	W0126	0539	22		32-42-11	115-199
	A	A023	2	W2064	0180	22		32-42-11	001-099
	A	A024	2	W0130	0107	20		32-42-12	115-199
	A	A024	2	W2070	0537	22		32-42-12	001-099
	X	B011	BJ	W2070	0237	22		30-43-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 32

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0113		MS27212-12 (continued)					272/280/L015		ALL
TB0113	A	YHLZD-33 (continued)					272/280/L015		ALL
TB0113	B	YHLZR-17 (continued)					272/280/L015		001-099
TB0113	B	YHLZR-17 (continued)					272/280/L15		115-199
TB0113	X	BACM15C3A (continued)					272/280/L015		001-099
TB0113	X	BACM15C3A (continued)					272/280/L15		115-199
TB0113	Y	BACM15C3B (continued)					272/280/L015		001-099
TB0113	Y	BACM15C3B (continued)					272/280/L15		115-199
TB0113	Z	BACM15C3C (continued)					272/280/L015		001-099
TB0113	Z	BACM15C3C (continued)					272/280/L15		115-199
	X	B011	BJ	W2072	0050	22		30-43-11	ALL
	X	B012	BJ	W2070	0229	22		33-16-32	ALL
	X	B012	BJ	W2223	0011	22		33-16-32	ALL
	X	B015	BJ	W2066	0362	22		33-51-11	ALL
	X	B015	BJ	W2070	0561	22		33-51-11	ALL
	X	B016	BJ	W2070	0187	24		21-51-22	ALL
	X	B016	BJ	W2078	0383	24		21-51-22	ALL
	X	C001	BJ	W2070	0240	20		23-11-21	ALL
	X	C001	BJ	W2345	0009	20		23-11-21	ALL
	Y	C004	BJ	W2072	0047	22		30-11-11	115-199
	Y	C004	BJ	W2078	0456	22		30-11-11	115-199
	Y	C005	BJ	W2066	0219	20		33-42-31	001-099
	Y	C005	BJ	W2078	0143	20		33-42-31	001-099
	Y	C006	BJ	W2066	0301	24		33-16-12	001-099
	Y	C006	BJ	W2070	0276	24		33-16-12	001-099
	Y	C006	BJ	W2070	0616	20		33-13-32	001-099
	A	C007	2	W0134	0121	22		23-51-11	115-199
	A	C007	2	W0134	0124	22		23-51-11	115-199
	A	C007	2	W2156	0018	22		23-51-11	001-099
	A	C007	2	W2156	0170	22		23-51-11	001-099
	A	C008	2	W0134	0124	22		23-51-11	115-199
	A	C008	2	W0134	0125	22		23-51-11	115-199
	A	C008	2	W2156	0017	22		23-51-11	001-099
	A	C008	2	W2156	0170	22		23-51-11	001-099
	A	C009	2	W0128	0123	22		23-51-21	115-199
	A	C009	2	W0128	0124	22		23-51-21	115-199
	A	C009	2	W2070	0102	22		23-51-21	001-099
	A	C009	2	W2070	0536	22		23-51-21	001-099
	A	C010	2	W0128	0124	22		23-51-21	115-199
	A	C010	2	W0128	0229	22		23-51-21	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 33

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0113		MS27212-12 (continued)					272/280/L015		ALL
TB0113	A	YHLZD-33 (continued)					272/280/L015		ALL
TB0113	B	YHLZR-17 (continued)					272/280/L015		001-099
TB0113	B	YHLZR-17 (continued)					272/280/L15		115-199
TB0113	X	BACM15C3A (continued)					272/280/L015		001-099
TB0113	X	BACM15C3A (continued)					272/280/L15		115-199
TB0113	Y	BACM15C3B (continued)					272/280/L015		001-099
TB0113	Y	BACM15C3B (continued)					272/280/L15		115-199
TB0113	Z	BACM15C3C (continued)					272/280/L015		001-099
TB0113	Z	BACM15C3C (continued)					272/280/L15		115-199
	A	C010	2	W2070	0536	22		23-51-21	001-099
	X	C011	BJ	W2070	0244	22		31-51-12	ALL
	X	C011	BJ	W2195	0001	22		31-51-12	ALL
	X	C012	BJ	W2066	0413	20		33-42-21	ALL
	X	C012	BJ	W2072	0022	20		33-42-21	ALL
	X	C015	BJ	W2066	0126	22		24-51-24	ALL
	X	C015	BJ	W2070	0375	22		24-51-24	ALL
	X	C016	BJ	W2070	0140	20		24-51-24	ALL
	X	C016	BJ	W2072	0244	20		24-51-24	ALL
	Y	C017	BJ	W2070	0810	22		23-51-21	115-199
	Y	C017	BJ	W2293	0007	22		23-51-41	115-199
	Y	C017	BJ	W2295	0021	22		23-51-51	115-199
	Y	C018	BJ	W0134	0123	22		23-51-11	115-199
	Y	C018	BJ	W0134	0125	22		23-51-11	115-199
	B	C021	2	W2070	0356	22		29-11-12	ALL
	A	C022	2	W2070	0168	22		29-11-12	ALL
	A	C022	2	W2070	0358	22		29-11-12	ALL
	A	C023	2	W0126	0049	22		32-42-11	115-199
	A	C023	2	W0130	0065	20		32-42-12	115-199
	A	C023	2	W2064	0181	22		32-42-11	001-099
	A	C023	2	W2064	0183	22		32-42-12	001-099
	A	C024	2	W0130	0064	20		32-42-12	115-199
	A	C024	2	W0130	0065	20		32-42-12	115-199
	A	C024	2	W2064	0182	22		32-42-12	001-099
	A	C024	2	W2064	0183	22		32-42-12	001-099
	X	D002	BJ	W2156	0032	20		21-58-11	ALL
	X	D002	BJ	W2351	0051	20		21-58-11	ALL
	X	D012	BJ	W2066	0412	20		33-42-21	ALL
	X	D012	BJ	W2072	0028	20		33-42-21	ALL
	X	D015	BJ	W2066	0127	22		24-51-14	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 34

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0113		MS27212-12 (continued)					272/280/L015		ALL
TB0113	A	YHLZD-33 (continued)					272/280/L015		ALL
TB0113	B	YHLZR-17 (continued)					272/280/L015		001-099
TB0113	B	YHLZR-17 (continued)					272/280/L15		115-199
TB0113	X	BACM15C3A (continued)					272/280/L015		001-099
TB0113	X	BACM15C3A (continued)					272/280/L15		115-199
TB0113	Y	BACM15C3B (continued)					272/280/L015		001-099
TB0113	Y	BACM15C3B (continued)					272/280/L15		115-199
TB0113	Z	BACM15C3C (continued)					272/280/L015		001-099
TB0113	Z	BACM15C3C (continued)					272/280/L15		115-199
	X	D015	BJ	W2070	0376	22		24-51-14	ALL
	X	D016	BJ	W2070	0246	22		22-21-21	ALL
	X	D016	BJ	W2072	0045	22		22-21-21	ALL
	X	DED		W2066	1001Z			21-31-21	ALL
TB0114		MS27212-12					272/280/R015		ALL
TB0114	F	BACM15C1A					272/280/R15		001-099
TB0114	X	BACM15C3A					272/280/R015		001-099
TB0114	X	BACM15C3A					272/280/R15		115-199
TB0114	Y	BACM15C3B					272/280/R015		001-099
TB0114	Y	BACM15C3B					272/280/R15		115-199
TB0114	Z	BACM15C3C					272/280/R015		001-099
TB0114	Z	BACM15C3C					272/280/R15		115-199
	Z	10	BJ	W2066	0082	20		33-13-31	ALL
	Z	10	BJ	W2072	0099	20		33-13-31	ALL
	Z	10	BJ	W2078	0312	20		33-13-31	ALL
	Z	10	BJ	W2221	0011	20		33-13-31	ALL
	Z	10	BJ	W2351	0019	20		33-13-31	ALL
	Z	10	BJ	W2351	0023	20		33-13-31	115-199
	Z	10	BJ	W4210	0029	20		33-13-31	ALL
	Z	11	BJ	W2064	0302	20		33-13-31	ALL
	Z	11	BJ	W2066	0564	20		33-13-31	ALL
	Z	11	BJ	W2070	0158	20		33-13-31	ALL
	Z	11	BJ	W2078	0118	20		33-13-31	ALL
	Z	11	BJ	W2156	0014	20		33-13-31	ALL
	Z	11	BJ	W2156	0096	20		33-13-31	ALL
	Z	11	BJ	W2156	0111	20		33-13-31	ALL
	Z	11	BJ	W2351	0022	20		33-13-31	115-199
	Z	12	BJ	W2064	0303	20		33-13-31	ALL
	Z	12	BJ	W2066	0074	20		33-13-31	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 35

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0114		MS27212-12 (continued)					272/280/R015		ALL
TB0114	F	BACM15C1A (continued)					272/280/R15		001-099
TB0114	X	BACM15C3A (continued)					272/280/R015		001-099
TB0114	X	BACM15C3A (continued)					272/280/R15		115-199
TB0114	Y	BACM15C3B (continued)					272/280/R015		001-099
TB0114	Y	BACM15C3B (continued)					272/280/R15		115-199
TB0114	Z	BACM15C3C (continued)					272/280/R015		001-099
TB0114	Z	BACM15C3C (continued)					272/280/R15		115-199
	Z	12	BJ	W2070	0159	20		33-13-31	ALL
	Z	12	BJ	W2078	0042	20		33-13-31	ALL
	Z	12	BJ	W2078	0117	20		33-13-31	ALL
	Z	12	BJ	W2156	0015	20		33-13-31	ALL
	Z	12	BJ	W2156	0097	20		33-13-31	ALL
	Z	12	BJ	W2156	0112	20		33-13-31	ALL
	Z	15	BJ	W2070	0061	22		33-16-32	ALL
	Z	15	BJ	W2070	0230	22		33-16-32	ALL
	Z	15	BJ	W2070	0301	22		33-16-32	ALL
	Z	15	BJ	W2070	0307	22		33-16-32	ALL
	Z	16	BJ	W2070	0306	22		33-16-42	ALL
	Z	16	BJ	W2070	0327	22		33-16-42	ALL
	Z	16	BJ	W2072	0017	22		33-16-42	ALL
	Z	16	BJ	W2156	0006	22		33-16-42	ALL
	Z	17	BJ	W2070	0343	22		33-16-42	ALL
	Z	17	BJ	W2072	0021	22		33-16-42	ALL
	Z	17	BJ	W2072	0088	22		33-16-42	ALL
	Z	18	BJ	W2070	0062	22		33-16-42	ALL
	Z	18	BJ	W2070	0300	22		33-16-42	ALL
	Z	18	BJ	W2070	0302	22		33-16-42	ALL
	Z	18	BJ	W2070	0304	22		33-16-42	ALL
	Z	18	BJ	W2072	0010	22		33-16-42	ALL
	Z	18	BJ	W2072	0021	22		33-16-42	ALL
	Z	18	BJ	W2072	0090	22		33-16-42	ALL
	Z	19	BJ	W2070	0344	22		33-16-42	ALL
	Z	19	BJ	W2072	0089	22		33-16-42	ALL
	Z	19	BJ	W2072	0091	22		33-16-42	ALL
	Z	2	BJ	W2070	0287	22		33-16-32	ALL
	Z	2	BJ	W2070	0299	22		33-16-32	ALL
	Z	2	BJ	W2070	0303	22		33-16-32	ALL
	Z	2	BJ	W2072	0086	22		33-16-32	ALL
	Z	2	BJ	W2072	0238	22		33-16-32	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 36

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0114		MS27212-12 (continued)					272/280/R015		ALL
TB0114	F	BACM15C1A (continued)					272/280/R15		001-099
TB0114	X	BACM15C3A (continued)					272/280/R015		001-099
TB0114	X	BACM15C3A (continued)					272/280/R15		115-199
TB0114	Y	BACM15C3B (continued)					272/280/R015		001-099
TB0114	Y	BACM15C3B (continued)					272/280/R15		115-199
TB0114	Z	BACM15C3C (continued)					272/280/R015		001-099
TB0114	Z	BACM15C3C (continued)					272/280/R15		115-199
	Z	20	BJ	W2070	0305	22		33-16-42	ALL
	Z	20	BJ	W2070	0324	22		33-16-42	ALL
	Z	20	BJ	W2072	0020	22		33-16-42	ALL
	Z	20	BJ	W2156	0007	22		33-16-42	ALL
	Z	21	BJ	W2078	0252	22		33-16-52	ALL
	Z	21	BJ	W2078	0279	22		33-16-52	ALL
	Z	21	BJ	W2078	0313	22		33-16-52	ALL
	Z	21	BJ	W2156	0055	22		33-16-52	ALL
	Z	21	BJ	W4220	0069	22		33-16-52	ALL
	Z	22	BJ	W2078	0307	22		33-16-62	ALL
	Z	22	BJ	W2156	0013	22		33-16-62	ALL
	Z	22	BJ	W4220	0121	22		33-16-62	ALL
	Z	22	BJ	W4236	0214	22		33-16-62	ALL
	Z	7	BJ	W2064	0306	20		33-13-31	ALL
	Z	7	BJ	W2066	0072	20		33-13-31	ALL
	Z	7	BJ	W2066	0079	20		33-13-31	ALL
	Z	7	BJ	W2070	0437	20		33-13-31	115-199
	Z	7	BJ	W2156	0053	20		33-13-31	ALL
	Z	7	BJ	W2343	0001	20		33-13-31	ALL
	Z	7	BJ	W2345	0001	20		33-13-31	ALL
	Z	8	BJ	W2066	0072	20		33-13-31	ALL
	Z	8	BJ	W2072	0098	20		33-13-31	ALL
	Z	8	BJ	W2078	0311	20		33-13-31	ALL
	Z	8	BJ	W2221	0012	20		33-13-31	ALL
	Z	8	BJ	W2351	0018	20		33-13-31	ALL
	Z	8	BJ	W4210	0028	20		33-13-31	ALL
	Z	9	BJ	W2064	0307	20		33-13-31	ALL
	Z	9	BJ	W2066	0073	20		33-13-31	ALL
	Z	9	BJ	W2066	0082	20		33-13-31	ALL
	Z	9	BJ	W2070	0438	20		33-13-31	115-199
	Z	9	BJ	W2156	0054	20		33-13-31	ALL
	Z	9	BJ	W2343	0002	20		33-13-31	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 37

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0114		MS27212-12 (continued)					272/280/R015		ALL
TB0114	F	BACM15C1A (continued)					272/280/R15		001-099
TB0114	X	BACM15C3A (continued)					272/280/R015		001-099
TB0114	X	BACM15C3A (continued)					272/280/R15		115-199
TB0114	Y	BACM15C3B (continued)					272/280/R015		001-099
TB0114	Y	BACM15C3B (continued)					272/280/R15		115-199
TB0114	Z	BACM15C3C (continued)					272/280/R015		001-099
TB0114	Z	BACM15C3C (continued)					272/280/R15		115-199
	Z	9	BJ	W2345	0002	20		33-13-31	ALL
	Y	A003	BJ	W2070	0284	22		33-16-32	ALL
	Y	A003	BJ	W2225	0015	22		33-16-32	ALL
	Y	A003	BJ	W2225	0016	22		33-16-32	ALL
	F	A005	2	W2072	0252	18		73-21-21	001-099
	F	A005	2	W4238	0001	18		73-21-21	001-099
	F	A006	2	W4220	0079	18		73-21-21	001-099
	F	A006	2	W4238	0002	18		73-21-21	001-099
	X	A013	BJ	W2070	0177	20		25-31-21	115-199
	X	A013	BJ	W2072	0228	20		25-31-21	115-199
	X	A014	BJ	W4220	0082	24		73-21-21	001-099
	X	A014	BJ	W4236	0227	24		73-21-21	001-099
	X	A023	BJ	W2072	0230	24		33-11-11	ALL
	X	A023	BJ	W2078	0010	24		33-11-11	ALL
	X	A024	BJ	W2064	0078	20		33-43-12	ALL
	X	A024	BJ	W2072	0152	20		33-43-12	ALL
	X	B014	BJ	W2064	0322	22		33-14-41	ALL
	X	B014	BJ	W2070	0052	22		33-14-41	ALL
	Y	C005	BJ	W2066	0002	24		33-13-71	115-199
	Y	C005	BJ	W2070	0224	24		33-13-71	115-199
	F	C005	2	W2072	0253	18		73-21-22	001-099
	F	C005	2	W4238	0013	18		73-21-22	001-099
	F	C006	2	W4220	0080	18		73-21-21	001-099
	F	C006	2	W4236	0005	18		73-21-21	001-099
	X	C014	BJ	W2064	0324	22		30-43-11	ALL
	X	C014	BJ	W2070	0239	22		30-43-11	ALL
	X	C023	BJ	W2066	0429	24		21-61-21	ALL
	X	C023	BJ	W2072	0151	24		21-61-21	ALL
	X	D013	BJ	W2078	0016	20		74-31-21	001-099
	X	D013	BJ	W2156	0016	20		74-31-21	115-199
	X	D013	BJ	W4220	0054	20		74-31-21	ALL
	X	D014	BJ	W2070	0377	24		21-44-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 38

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0114		MS27212-12 (continued)					272/280/R015		ALL
TB0114	F	BACM15C1A (continued)					272/280/R15		001-099
TB0114	X	BACM15C3A (continued)					272/280/R015		001-099
TB0114	X	BACM15C3A (continued)					272/280/R15		115-199
TB0114	Y	BACM15C3B (continued)					272/280/R015		001-099
TB0114	Y	BACM15C3B (continued)					272/280/R15		115-199
TB0114	Z	BACM15C3C (continued)					272/280/R015		001-099
TB0114	Z	BACM15C3C (continued)					272/280/R15		115-199
	X	D014	BJ	W2072	0233	24		21-44-11	ALL
TB0115		MS27212-12					272/280/L016		ALL
TB0115	X	BACM15C3A					272/280/L016		001-099
TB0115	X	BACM15C3A					272/280/L16		115-199
TB0115	Y	BACM15C3B					272/280/L016		001-099
TB0115	Y	BACM15C3B					272/280/L16		115-199
TB0115	Z	BACM15C3C					272/280/L016		001-099
TB0115	Z	BACM15C3C					272/280/L16		115-199
	Z	10	BJ	W2078	0174	22		33-16-52	ALL
	Z	10	BJ	W2078	0253	22		33-16-52	ALL
	Z	10	BJ	W2078	0305	22		33-16-52	ALL
	Z	10	BJ	W2078	0314	22		33-16-52	ALL
	Z	11	BJ	W2070	0315	22		33-16-52	ALL
	Z	11	BJ	W2078	0189	22		33-16-52	ALL
	Z	11	BJ	W2078	0256	22		33-16-52	ALL
	Z	11	BJ	W2156	0010	22		33-16-52	ALL
	Z	13	BJ	W2066	0415	20		33-13-32	115-199
	Z	13	BJ	W2070	0063	20		33-13-32	115-199
	Z	13	BJ	W2070	0126	20		33-13-32	115-199
	Z	13	BJ	W2070	0222	20		33-13-32	115-199
	Z	13	BJ	W4228	0272	22		33-13-32	115-199
	Z	13	BJ	W4236	0211	22		33-13-32	115-199
	Z	14	BJ	W2066	0392	20		33-13-32	ALL
	Z	14	BJ	W2066	0416	20		33-13-32	ALL
	Z	14	BJ	W2070	0064	20		33-13-32	ALL
	Z	14	BJ	W2070	0197	20		33-13-32	ALL
	Z	14	BJ	W2070	0223	20		33-13-32	ALL
	Z	14	BJ	W4228	0273	22		33-13-32	ALL
	Z	14	BJ	W4236	0213	22		33-13-32	ALL
	Z	7	BJ	W2066	0383	20		33-13-32	ALL
	Z	7	BJ	W2066	0385	20		33-13-32	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 39

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0115		MS27212-12 (continued)					272/280/L016		ALL
TB0115	X	BACM15C3A (continued)					272/280/L016		001-099
TB0115	X	BACM15C3A (continued)					272/280/L16		115-199
TB0115	Y	BACM15C3B (continued)					272/280/L016		001-099
TB0115	Y	BACM15C3B (continued)					272/280/L16		115-199
TB0115	Z	BACM15C3C (continued)					272/280/L016		001-099
TB0115	Z	BACM15C3C (continued)					272/280/L16		115-199
	Z	7	BJ	W2066	0387	20		33-13-32	ALL
	Z	7	BJ	W2070	0122	20		33-13-32	ALL
	Z	7	BJ	W2078	0043	20		33-13-32	ALL
	Z	7	BJ	W2080	0022	20		33-13-32	ALL
	Z	8	BJ	W2066	0384	20		33-13-32	ALL
	Z	8	BJ	W2066	0386	20		33-13-32	ALL
	Z	8	BJ	W2066	0388	20		33-13-32	ALL
	Z	8	BJ	W2066	0390	20		33-13-32	ALL
	Z	8	BJ	W2066	0808	20		33-13-32	ALL
	Z	8	BJ	W2078	0044	20		33-13-32	ALL
	Z	8	BJ	W2080	0023	20		33-13-32	ALL
	X	A001	BJ	W2078	0074	20		28-22-31	ALL
	X	A001	BJ	W2156	0153	20		28-22-31	ALL
	X	A002	BJ	W2070	0486	24		24-41-11	ALL
	X	A002	BJ	W2078	0421	24		24-41-11	001-099
	X	A002	BJ	W2078	0421	20		24-41-11	115-199
	X	A004	BJ	W2078	0306	22		33-16-62	ALL
	X	A004	BJ	W2156	0004	22		33-16-62	ALL
	Y	A005	BJ	W2156	0078	24		21-58-12	ALL
	Y	A005	BJ	W2156	0178	22		21-58-12	ALL
	Y	A005	BJ	W2358	0016	22		21-58-12	ALL
	Y	A006	BJ	W2066	0800	24		21-33-12	ALL
	Y	A006	BJ	W2066	0802	24		21-33-12	ALL
	Y	A006	BJ	W2156	0800	24		21-33-12	ALL
	Y	A018	BJ	W2066	0352	24		33-13-52	ALL
	Y	A018	BJ	W2066	0565	24		33-13-31	ALL
	Y	A018	BJ	W2070	0614	20		33-13-32	ALL
	Y	A018	BJ	W2078	0500	24		33-13-31	ALL
	X	A019	BJ	W2066	0574	20		33-13-32	ALL
	X	A019	BJ	W2070	0500	20		33-13-32	ALL
	X	A020	BJ	W2066	0573	20		33-13-32	ALL
	X	A020	BJ	W2070	0501	20		33-13-32	ALL
	Y	A021	BJ	W2351	2502R	24		23-71-11	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 40

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0115		MS27212-12 (continued)					272/280/L016		ALL
TB0115	X	BACM15C3A (continued)					272/280/L016		001-099
TB0115	X	BACM15C3A (continued)					272/280/L16		115-199
TB0115	Y	BACM15C3B (continued)					272/280/L016		001-099
TB0115	Y	BACM15C3B (continued)					272/280/L16		115-199
TB0115	Z	BACM15C3C (continued)					272/280/L016		001-099
TB0115	Z	BACM15C3C (continued)					272/280/L16		115-199
	Y	A021	BJ	W2351	2504R	24		23-71-11	115-199
	Y	A021	%	W2351	2505B	24		23-71-11	115-199
	Y	A021	%	W2351	2506B	24		23-71-11	115-199
	Y	A022	%	W2351	2505R	24		23-71-11	115-199
	Y	A022	%	W2351	2506R	24		23-71-11	115-199
	Y	A022	BJ	W2351	2508R	24		23-71-11	115-199
	X	B001	BJ	W2078	0553	20		28-22-31	009-099
	X	B001	BJ	W2156	0251	20		28-22-31	009-099
	X	B002	BJ	W2066	0218	20		33-42-21	ALL
	X	B002	BJ	W2078	0110	20		33-42-21	ALL
	X	B004	BJ	W2078	0063	22		26-15-12	ALL
	X	B004	BJ	W2080	0026	22		26-15-12	ALL
	X	B016	BJ	W2066	0221	24		21-51-12	115-199
	X	B016	BJ	W2078	0384	24		21-51-12	ALL
	X	B020	BJ	W2066	0389	20		33-13-32	ALL
	X	B020	BJ	W2070	0622	20		33-13-32	ALL
	X	B16	BJ	W2066	0221	24		21-51-12	001-099
	X	C001	BJ	W2078	0267	22		31-51-11	ALL
	X	C001	BJ	W2193	0001	22		31-51-11	ALL
	X	C002	BJ	W2078	0238	24		33-16-52	ALL
	X	C002	BJ	W2156	0012	24		33-16-52	ALL
	X	C004	BJ	W2066	0112	22		24-34-11	ALL
	X	C004	BJ	W2078	0275	22		24-34-11	ALL
	Y	C005	BJ	W2080	0014	24		24-27-41	ALL
	Y	C005	BJ	W2080	0015	24		24-27-41	ALL
	Y	C005	BJ	W2080	0020	22		24-27-41	ALL
	Y	C006	BJ	W2078	0198	24		33-11-31	ALL
	Y	C006	BJ	W2078	0204	24		33-11-41	ALL
	Y	C006	BJ	W2156	0005	24		33-11-31	ALL
	X	C015	BJ	W2156	0152	22		SPARE	115-199
	X	C016	BJ	W2156	0151	22		SPARE	115-199
	Y	C017	BJ	W2070	0615	20		33-13-32	001-099
	Y	C017	BJ	W2078	0214	22		33-16-51	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 41

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0115		MS27212-12 (continued)					272/280/L016		ALL
TB0115	X	BACM15C3A (continued)					272/280/L016		001-099
TB0115	X	BACM15C3A (continued)					272/280/L16		115-199
TB0115	Y	BACM15C3B (continued)					272/280/L016		001-099
TB0115	Y	BACM15C3B (continued)					272/280/L16		115-199
TB0115	Z	BACM15C3C (continued)					272/280/L016		001-099
TB0115	Z	BACM15C3C (continued)					272/280/L16		115-199
	Y	C017	BJ	W2078	0529	22		33-16-51	001-099
	X	C019	BJ	W2066	0507	20		21-58-13	ALL
	X	C019	BJ	W2156	0180	20		21-58-13	ALL
	X	C020	BJ	W2351	2502Z			23-71-11	115-199
	X	C020	BJ	W2351	2504Z			23-71-11	115-199
	Y	C021	BJ	W2351	2502B	24		23-71-11	115-199
	Y	C021	BJ	W2351	2504B	24		23-71-11	115-199
	Y	C022	%	W2351	2505Z			23-71-11	115-199
	Y	C022	%	W2351	2506Z			23-71-11	115-199
	Y	C022	BJ	W2351	2508B	24		23-71-11	115-199
	Y	C022	BJ	W2351	2508Z			23-71-11	115-199
	X	D001	BJ	W2078	0019	22		49-61-11	ALL
	X	D001	BJ	W2080	0031	22		49-61-11	ALL
	X	D002	BJ	W2064	0301	22		30-43-11	ALL
	X	D002	BJ	W2070	0238	22		30-43-11	ALL
	X	D004	BJ	W2066	0113	22		24-34-11	ALL
	X	D004	BJ	W2078	0422	22		24-34-11	ALL
	X	D015	BJ	W2072	0561	24		33-11-21	ALL
	X	D015	BJ	W2078	0191	24		33-11-21	ALL
	X	D016	BJ	W2066	0563	24		33-11-21	ALL
	X	D016	BJ	W2078	0023	24		33-11-21	ALL
	X	D020	BJ	W2066	0475	20		33-13-32	ALL
	X	D020	BJ	W2070	0621	20		33-13-32	ALL
TB0116		MS27212-12					272/280/R016		ALL
TB0116	F	BACM15C1A					272/280/R016		001-099
TB0116	X	BACM15C3A					272/280/R016		001-099
TB0116	X	BACM15C3A					272/280/R16		115-199
TB0116	Y	BACM15C3B					272/280/R015		001-099
TB0116	Y	BACM15C3B					272/280/R16		115-199
TB0116	Z	BACM15C3C					272/280/R016		001-099
TB0116	Z	BACM15C3C					272/280/R16		115-199
	Z	10	BJ	W2078	0189	22		33-16-52	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 42

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0116		MS27212-12 (continued)					272/280/R016		ALL
TB0116	F	BACM15C1A (continued)					272/280/R016		001-099
TB0116	X	BACM15C3A (continued)					272/280/R016		001-099
TB0116	X	BACM15C3A (continued)					272/280/R16		115-199
TB0116	Y	BACM15C3B (continued)					272/280/R015		001-099
TB0116	Y	BACM15C3B (continued)					272/280/R16		115-199
TB0116	Z	BACM15C3C (continued)					272/280/R016		001-099
TB0116	Z	BACM15C3C (continued)					272/280/R16		115-199
	Z	10	BJ	W2078	0278	22		33-16-52	ALL
	Z	10	BJ	W2078	0298	22		33-16-52	ALL
	Z	10	BJ	W2156	0085	22		33-16-52	ALL
	Z	10	BJ	W4228	0276	22		33-16-52	ALL
	Z	10	BJ	W4236	0215	22		33-16-52	ALL
	Z	13	BJ	W2078	0301	22		33-16-52	ALL
	Z	13	BJ	W2078	0501	22		33-16-52	ALL
	Z	13	BJ	W2156	0056	22		33-16-52	ALL
	Z	13	BJ	W2351	0021	22		33-16-52	ALL
	Z	13	BJ	W4228	0275	22		33-16-52	ALL
	Z	14	BJ	W2066	0335	22		33-16-52	ALL
	Z	14	BJ	W2078	0254	22		33-16-52	ALL
	Z	14	BJ	W2078	0300	22		33-16-52	ALL
	Z	14	BJ	W2080	0025	22		33-16-52	ALL
	Z	14	BJ	W2351	0020	22		33-16-52	ALL
	Z	22	BJ	W2066	0415	20		33-13-32	001-099
	Z	22	BJ	W2070	0063	20		33-13-32	001-099
	Z	22	BJ	W2070	0126	20		33-13-32	001-099
	Z	22	BJ	W2070	0222	20		33-13-32	001-099
	Z	22	BJ	W4228	0272	22		33-13-32	001-099
	Z	22	BJ	W4236	0211	22		33-13-32	001-099
	Z	3	BJ	W2066	0333	22		33-16-52	ALL
	Z	3	BJ	W2078	0279	22		33-16-52	ALL
	Z	3	BJ	W2078	0297	22		33-16-52	ALL
	Z	3	BJ	W2156	0003	22		33-16-52	ALL
	Z	3	BJ	W4210	0076	22		33-16-52	ALL
	Z	4	BJ	W2066	0332	22		33-16-62	ALL
	Z	4	BJ	W2070	0316	22		33-16-62	ALL
	Z	4	BJ	W2078	0507	22		33-16-62	ALL
	Z	4	BJ	W2080	0024	22		33-16-62	ALL
	Z	4	BJ	W4210	0077	22		33-16-62	ALL
	Z	9	BJ	W2066	0041	22		33-16-53	001-003, 115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 43

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0116		MS27212-12 (continued)					272/280/R016		ALL
TB0116	F	BACM15C1A (continued)					272/280/R016		001-099
TB0116	X	BACM15C3A (continued)					272/280/R016		001-099
TB0116	X	BACM15C3A (continued)					272/280/R16		115-199
TB0116	Y	BACM15C3B (continued)					272/280/R015		001-099
TB0116	Y	BACM15C3B (continued)					272/280/R16		115-199
TB0116	Z	BACM15C3C (continued)					272/280/R016		001-099
TB0116	Z	BACM15C3C (continued)					272/280/R16		115-199
	Z	9	BJ	W2066	0334	22		33-16-52	ALL
	Z	9	BJ	W2078	0255	22		33-16-52	ALL
	Z	9	BJ	W2078	0299	22		33-16-52	ALL
	Z	9	BJ	W2078	0302	22		33-16-53	001-003, 115-199
	Y	A001	BJ	W2078	0277	22		33-16-62	ALL
	Y	A001	BJ	W2078	0506	22		33-16-62	ALL
	Y	A001	BJ	W2156	0089	22		33-16-62	ALL
	F	A007	2	W2066	0575	18		73-21-11	001-099
	F	A007	2	W4232	0004	18		73-21-11	001-099
	F	A008	2	W4210	0090	18		73-21-11	001-099
	F	A008	2	W4232	0001	18		73-21-11	001-099
	X	A011	BJ	W2078	0247	22		33-16-61	ALL
	X	A011	BJ	W2225	0013	22		33-16-61	ALL
	X	A015	BJ	W2052	0009	20		23-43-11	ALL
	X	A015	BJ	W2351	0048	22		23-43-11	ALL
	X	A016	BJ	W2070	0235	22		33-16-52	ALL
	X	A016	BJ	W2078	0309	22		33-16-52	ALL
	X	A017	BJ	W2066	0542	22		24-51-72	ALL
	X	A017	BJ	W2078	0316	22		24-51-72	ALL
	X	A018	BJ	W2066	0123	24		24-51-71	ALL
	X	A018	BJ	W2070	0480	24		24-51-71	ALL
	X	B011	BJ	W2078	0249	22		33-16-62	ALL
	X	B011	BJ	W2225	0014	22		33-16-62	ALL
	X	B015	BJ	W2052	0010	20		23-43-11	ALL
	X	B015	BJ	W2351	0049	22		23-43-11	ALL
	X	B016	BJ	W2070	0234	22		33-16-52	ALL
	X	B016	BJ	W2078	0308	22		33-16-52	ALL
	X	B017	BJ	W2066	0543	22		24-51-72	ALL
	X	B017	BJ	W2072	0248	22		24-51-72	ALL
	X	B018	BJ	W2072	0249	24		33-11-61	ALL
	X	B018	BJ	W2156	0159	24		33-11-61	ALL
	Y	C002	BJ	W2078	0174	22		33-16-52	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 44

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0116		MS27212-12 (continued)					272/280/R016		ALL
TB0116	F	BACM15C1A (continued)					272/280/R016		001-099
TB0116	X	BACM15C3A (continued)					272/280/R016		001-099
TB0116	X	BACM15C3A (continued)					272/280/R16		115-199
TB0116	Y	BACM15C3B (continued)					272/280/R015		001-099
TB0116	Y	BACM15C3B (continued)					272/280/R16		115-199
TB0116	Z	BACM15C3C (continued)					272/280/R016		001-099
TB0116	Z	BACM15C3C (continued)					272/280/R16		115-199
	Y	C002	BJ	W2078	0251	22		33-16-52	ALL
	Y	C005	BJ	W2078	0250	22		33-16-62	ALL
	Y	C005	BJ	W2223	0012	22		33-16-62	ALL
	Y	C005	BJ	W2223	0013	22		33-16-62	ALL
	Y	C006	BJ	W2156	0193	22		29-21-31	001-099
	Y	C006	BJ	W4210	0130	22		29-21-31	001-099
	Y	C006	BJ	W4210	0135	22		SPARE	001-099
	F	C007	2	W2066	0576	18		73-21-12	001-099
	F	C007	2	W4232	0018	18		73-21-12	001-099
	F	C008	2	W4210	0091	18		73-21-11	001-099
	F	C008	2	W4228	0119	18		73-21-11	001-099
	X	C011	BJ	W2066	0414	20		52-51-11	ALL
	X	C011	BJ	W2070	0065	20		52-51-11	ALL
	X	C015	BJ	W2152	0018	20		23-43-11	ALL
	X	C015	BJ	W2351	0050	22		23-43-11	ALL
	X	C017	BJ	W2066	0801	22		24-51-72	ALL
	X	C017	BJ	W2070	0807	22		24-51-72	ALL
	X	C018	BJ	W2066	0076	20		33-13-31	ALL
	X	C018	BJ	W2078	0041	20		33-13-31	ALL
	X	D011	BJ	W2078	0016	20		74-31-11	115-199
	X	D011	BJ	W2156	0019	20		74-31-11	001-099
	X	D011	BJ	W4210	0062	20		74-31-11	ALL
	X	D012	BJ	W2070	0322	24		33-11-41	ALL
	X	D012	BJ	W2078	0205	24		33-11-41	ALL
	X	D017	BJ	W2070	0808	22		24-51-72	ALL
	X	D017	BJ	W2078	0800	22		24-51-72	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 45

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0121	X	BACM15C3A					P061-00/ /		ALL
TB0121	Y	BACM15C3B					P061-00/ /		001-099
TB0121	Y	BACM15C3B					P061/ /		115-199
TB0121	Z	BACM15C3C					P061-00/ /		ALL
TB0121	Z	BACM15C3C					P009-00/ /		002
	Z	10	BJ	W0069	0065	22		33-16-13	115-199
	Z	10	BJ	W0069	0067	22		33-16-13	001-099
	Z	10	BJ	W2066	0213	22		33-16-13	ALL
	Z	10	BJ	W2066	0302	22		33-16-13	ALL
	Z	11	BJ	W0041	0001	22		23-51-51	115-199
	Z	11	BJ	W2156	0018	22		23-51-11	115-199
	Z	11	BJ	W2354	0301	22		23-51-11	115-199
	Z	12	BJ	W2315	0036	24		31-41-19	ALL
	Z	12	BJ	W2315	0047	24		31-41-19	ALL
	Z	12	BJ	W2315	0048	24		31-41-19	ALL
	Z	12	BJ	W2315	0056	20		31-41-19	ALL
	Z	13	BJ	W2315	0014	24		31-41-19	ALL
	Z	13	BJ	W2315	0040	24		31-41-19	ALL
	Z	13	BJ	W2315	0041	24		31-41-19	ALL
	Z	13	BJ	W2315	0042	24		31-41-19	ALL
	Z	13	BJ	W2315	0049	24		31-41-19	ALL
	Z	13	BJ	W2315	0056	20		31-41-19	ALL
	Z	13	BJ	W2315	0057	20		31-41-19	ALL
	Z	14	BJ	W2315	0043	24		31-41-19	ALL
	Z	14	BJ	W2315	0044	24		31-41-19	ALL
	Z	14	BJ	W2315	0045	24		31-41-19	ALL
	Z	14	BJ	W2315	0054	24		31-41-19	ALL
	Z	14	BJ	W2315	0057	20		31-41-19	ALL
	Z	14	BJ	W2315	0559	24		31-41-19	ALL
	Z	15	BJ	W0069	0066	22		33-16-13	115-199
	Z	15	BJ	W0069	0068	22		33-16-13	001-099
	Z	15	BJ	W2064	0131	22		33-16-13	ALL
	Z	15	BJ	W2066	0212	22		33-16-13	ALL
	Z	15	BJ	W2070	0275	22		33-16-13	001-003, 115-199
	Z	9	BJ	W0041	0005	20		33-13-71	115-199
	Z	9	BJ	W0069	0063	20		33-13-71	115-199
	Z	9	BJ	W2070	0296	20		33-13-71	115-199
	X	A004	BJ	W2066	2019B	22		29-11-12	115-199
	X	A004	BJ	W2070	2035B	22		29-11-12	115-199
	X	A005	BJ	W2080	0018	22		29-22-11	ALL
	X	A005	BJ	W4220	0137	22		29-22-11	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 46

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0121	X	BACM15C3A (continued)					P061-00/ /		ALL
TB0121	Y	BACM15C3B (continued)					P061-00/ /		001-099
TB0121	Y	BACM15C3B (continued)					P061/ /		115-199
TB0121	Z	BACM15C3C (continued)					P061-00/ /		ALL
TB0121	Z	BACM15C3C (continued)					P009-00/ /		002
	X	A005	BJ	W4220	0138	22		29-22-11	115-199
	X	A008	BJ	W2080	0038	22		29-22-11	ALL
	X	A008	BJ	W4220	0133	22		29-22-11	115-199
	X	A008	BJ	W4220	0141	22		29-22-11	001-099
	X	A017	BJ	W2070	0512	22		24-25-11	ALL
	X	A017	BJ	W2346	0009	20		24-25-11	ALL
	X	A018	BJ	W2066	0349	22		24-25-11	ALL
	X	A018	BJ	W2344	0017	22		24-25-11	ALL
	X	A019	BJ	W2066	0340	22		34-22-81	001-099
	X	A019	BJ	W2066	0340	22		34-22-83	115-199
	X	A019	BJ	W2344	0018	22		34-22-81	001-099
	X	A019	BJ	W2344	0018	22		34-22-83	115-199
	Y	A023	BJ	W2078	0047	22		29-22-11	ALL
	Y	A023	BJ	W2080	0041	22		29-22-11	ALL
	Y	A024	BJ	W2156	0156	24		33-11-61	ALL
	Y	A024	BJ	W2156	A-WT			33-11-61	ALL
	X	B004	BJ	W2066	2019R	22		29-11-12	115-199
	X	B004	BJ	W2070	2035R	22		29-11-12	115-199
	X	B005	BJ	W2080	0044	22		29-22-11	ALL
	X	B005	BJ	W4220	0138	22		29-22-11	001-099
	X	B005	BJ	W4220	0139	22		29-22-11	115-199
	X	B006	BJ	W2070	0312	22		33-16-63	001-003, 115-199
	X	B006	BJ	W2078	0303	22		33-16-63	001-003, 115-199
	X	B008	BJ	W2080	0039	22		29-22-11	ALL
	X	B008	BJ	W4220	0132	22		29-22-11	115-199
	X	B008	BJ	W4220	0140	22		29-22-11	001-099
	Y	C001	BJ	W0069	0024	22		31-31-12	115-199
	Y	C001	BJ	W0069	0044	22		31-31-12	115-199
	Y	C001	BJ	W2079	0014	22		31-31-13	115-199
	X	C003	BJ	W2066	2018B	22		29-11-22	115-199
	X	C003	BJ	W2070	2034B	22		29-11-22	115-199
	X	C004	BJ	W2064	2010B	22		29-11-31	115-199
	X	C004	BJ	W2066	2017B	22		29-11-31	115-199
	X	C005	BJ	W2080	0045	22		29-22-11	ALL
	X	C005	BJ	W4220	0139	22		29-22-11	001-099
	X	C005	BJ	W4220	0140	22		29-22-11	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 47

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0121	X	BACM15C3A (continued)					P061-00/ /		ALL
TB0121	Y	BACM15C3B (continued)					P061-00/ /		001-099
TB0121	Y	BACM15C3B (continued)					P061/ /		115-199
TB0121	Z	BACM15C3C (continued)					P061-00/ /		ALL
TB0121	Z	BACM15C3C (continued)					P009-00/ /		002
	X	C008	BJ	W2080	0040	22		29-22-11	ALL
	X	C008	BJ	W4220	0134	22		29-22-11	ALL
	Y	C023	BJ	W2078	0051	22		29-22-11	ALL
	Y	C023	BJ	W2080	0043	22		29-22-11	ALL
	Y	C024	BJ	W2078	0284	20		26-22-21	001-099
	Y	C024	BJ	W2156	0118	20		26-22-21	001-099
	X	D003	BJ	W2066	2018R	22		29-11-22	115-199
	X	D003	BJ	W2070	2034R	22		29-11-22	115-199
	X	D004	BJ	W2064	2010R	22		29-11-31	115-199
	X	D004	BJ	W2066	2017R	22		29-11-31	115-199
	X	D005	BJ	W2156	0018	22		23-51-11	001-099
	X	D005	BJ	W2354	0301	22		23-51-11	001-099
	X	D006	BJ	W2070	0214	24		33-11-11	ALL
	X	D006	BJ	W2078	0027	24		33-11-11	ALL
	X	D008	BJ	W2078	0048	22		29-22-11	ALL
	X	D008	BJ	W2080	0042	22		29-22-11	ALL
TB0131		BACT44A0580D					P031-00/ /		115-199
TB0131	A	YHLZD-33					P031-00/ /		ALL
TB0131	B	YHLZR-27					P031-00/ /		001-099
TB0131	X	BACM15C3A					P031-00/ /		ALL
TB0131	Y	BACM15C3B					P031-00/ /		ALL
	Y	A001	BJ	W1136	0300	20		24-22-12	ALL
	Y	A001	BJ	W1136	0308	20		24-22-12	ALL
	Y	A001	BJ	W1136	0309	20		24-22-12	ALL
	Y	A002	BJ	W1136	0304	24		24-22-12	ALL
	Y	A002	BJ	W1136	0305	24		24-22-12	ALL
	Y	A002	BJ	W1136	0307	24		24-22-12	ALL
	A	A003	2	W1136	0314	20		24-22-11	ALL
	A	A003	2	W1136	0315	20		24-22-11	ALL
	A	A004	2	W1136	0317	20		24-22-12	ALL
	A	A004	2	W1136	0318	20		24-22-12	ALL
	Y	A005	BJ	W1136	0319	24		24-27-11	ALL
	Y	A005	BJ	W1136	0320	24		24-27-11	ALL
	Y	A005	BJ	W1136	0321	24		24-27-11	ALL
	Y	A006	BJ	W1136	0324	24		24-27-21	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 48

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0131		BACT44A0580D (continued)					P031-00/ /		115-199
TB0131	A	YHLZD-33 (continued)					P031-00/ /		ALL
TB0131	B	YHLZR-27 (continued)					P031-00/ /		001-099
TB0131	X	BACM15C3A (continued)					P031-00/ /		ALL
TB0131	Y	BACM15C3B (continued)					P031-00/ /		ALL
	Y	A006	BJ	W1136	0325	24		24-27-21	ALL
	Y	A006	BJ	W1136	0327	24		24-27-21	ALL
	B	A007	2	W1136	0135	22		25-31-33	001-099
	X	A009	BJ	W1136	0047	20		29-11-22	115-199
	X	A009	BJ	W2606	0007	20		29-11-22	115-199
	Y	A011	BJ	W1136	0336	22		29-11-31	ALL
	Y	A011	BJ	W1136	0337	22		29-11-31	ALL
	Y	A011	BJ	W1136	0338	22		29-11-31	ALL
	Y	A011	BJ	W1136	0339	22		29-11-31	ALL
	A	A013	2	W1136	0061	24		24-27-11	ALL
	X	B009	BJ	W1136	0048	20		29-11-31	115-199
	X	B009	BJ	W2608	0007	20		29-11-31	115-199
	Y	C001	BJ	W1136	0301	20		24-22-12	ALL
	Y	C001	BJ	W1136	0302	24		24-22-12	ALL
	Y	C001	BJ	W1136	0312	20		24-22-12	ALL
	Y	C002	BJ	W1136	0306	24		24-22-12	ALL
	Y	C002	BJ	W1136	0310	24		24-22-12	ALL
	Y	C002	BJ	W1136	0311	24		24-22-12	001-099
	Y	C002	BJ	W1136	0311	20		24-22-12	115-199
	A	C003	2	W1136	0313	20		24-22-11	ALL
	A	C004	2	W1136	0316	20		24-22-12	ALL
	Y	C005	BJ	W1136	0322	24		24-27-21	ALL
	Y	C005	BJ	W1136	0323	24		24-27-21	ALL
	Y	C005	BJ	W1136	0326	24		24-27-21	ALL
	Y	C006	BJ	W1136	0330	22		29-11-22	ALL
	Y	C006	BJ	W1136	0331	22		29-11-22	ALL
	Y	C006	BJ	W1136	0332	22		29-11-22	ALL
	Y	C006	BJ	W1136	0333	22		29-11-22	ALL
	B	C007	2	W1136	0133	22		25-31-33	001-099
	Y	C012	BJ	W1136	0019	24		24-51-31	ALL
	Y	C012	BJ	W1136	0123	24		24-51-31	ALL
	Y	C012	BJ	W1136	0303	24		24-22-12	ALL
	A	C013	2	W1136	0062	24		24-27-11	ALL
	A	C013	2	W1136	0119	24		24-27-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 49

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0132		BACT44A0580D					P032-00/ /		001, 003-099, 115-199
TB0132	A	YHLZD-33					P032-00/ /		ALL
TB0132	B	YHLZR-22					P032-00/ /		ALL
TB0132	G	BACM15C1B					P032-00/ /		001-099
TB0132	X	BACM15C3A					P032-00/ /		115-199
TB0132	Y	BACM15C3B					P032-00/ /		ALL
	G	9	2	W1138	0086	16		29-11-12	001-099
	G	9	2	W1138	0151	16		29-11-12	001-099
	G	9	2	W1138	0152	16		29-11-12	001-099
	Y	A001	BJ	W1138	0001	20		24-22-22	ALL
	Y	A001	BJ	W1138	0002	20		24-22-22	ALL
	Y	A001	BJ	W1138	0019	20		24-22-22	ALL
	Y	A002	BJ	W1138	0006	24		24-22-22	ALL
	Y	A002	BJ	W1138	0007	24		24-22-22	ALL
	Y	A002	BJ	W1138	0010	24		24-22-22	ALL
	Y	A003	BJ	W1138	0033	24		24-27-21	ALL
	Y	A003	BJ	W1138	0034	24		24-27-21	ALL
	Y	A003	BJ	W1138	0035	24		24-27-21	ALL
	Y	A004	BJ	W1138	0059	24		24-27-11	ALL
	Y	A004	BJ	W1138	0061	24		24-27-11	ALL
	Y	A004	BJ	W1138	0062	24		24-27-11	ALL
	A	A005	2	W1138	0014	20		24-22-22	ALL
	A	A005	2	W1138	0017	20		24-22-22	ALL
	A	A006	2	W1138	0045	20		24-22-21	ALL
	A	A006	2	W1138	0054	20		24-22-21	ALL
	Y	A007	BJ	W1138	0065	22		29-11-31	ALL
	Y	A007	BJ	W1138	0070	22		29-11-31	ALL
	Y	A007	BJ	W1138	0071	22		29-11-31	ALL
	Y	A008	BJ	W1138	0088	22		29-11-12	ALL
	Y	A008	BJ	W1138	0089	22		29-11-12	ALL
	Y	A008	BJ	W1138	0090	22		29-11-12	ALL
	Y	A008	BJ	W1138	0091	22		29-11-12	ALL
	X	A009	BJ	W1138	0158	20		29-11-31	115-199
	X	A009	BJ	W2610	0007	20		29-11-31	115-199
	Y	A012	BJ	W1138	0078	22		29-11-31	ALL
	Y	A012	BJ	W1138	0079	22		29-11-31	ALL
	Y	A012	BJ	W1138	0080	22		29-11-31	ALL
	Y	A012	BJ	W1138	0081	22		29-11-31	ALL
	A	A013	2	W1138	0189	24		24-27-21	ALL
	B	A014	2	W1138	0111	22		25-31-21	115-199
	B	A016	2	W1138	0172	22		25-31-11	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 50

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0132		BACT44A0580D (continued)					P032-00/ /		001, 003-099, 115-199
TB0132	A	YHLZD-33 (continued)					P032-00/ /		ALL
TB0132	B	YHLZR-22 (continued)					P032-00/ /		ALL
TB0132	G	BACM15C1B (continued)					P032-00/ /		001-099
TB0132	X	BACM15C3A (continued)					P032-00/ /		115-199
TB0132	Y	BACM15C3B (continued)					P032-00/ /		ALL
	X	B009	BJ	W1138	0157	20		29-11-12	115-199
	X	B009	BJ	W2604	0007	20		29-11-12	115-199
	Y	C001	BJ	W1138	0004	24		24-22-22	ALL
	Y	C001	BJ	W1138	0005	24		24-22-22	ALL
	Y	C001	BJ	W1138	0012	24		24-22-22	ALL
	Y	C002	BJ	W1138	0008	24		24-22-22	ALL
	Y	C002	BJ	W1138	0026	24		24-22-22	ALL
	Y	C002	BJ	W1138	0027	24		24-22-22	ALL
	Y	C004	BJ	W1138	0056	24		24-27-11	ALL
	Y	C004	BJ	W1138	0057	24		24-27-11	ALL
	Y	C004	BJ	W1138	0060	24		24-27-11	ALL
	A	C005	2	W1138	0015	20		24-22-22	ALL
	A	C006	2	W1138	0046	20		24-22-21	ALL
	Y	C008	BJ	W1138	0112	20		25-31-21	115-199
	Y	C008	BJ	W1138	0113	20		25-31-21	115-199
	Y	C011	BJ	W1138	0011	24		24-22-22	ALL
	Y	C011	BJ	W1138	0133	24		24-51-31	ALL
	Y	C011	BJ	W1138	0135	24		24-51-31	ALL
	Y	C011	BJ	W1138	0136	24		24-51-31	ALL
	Y	C012	BJ	W1138	0131	24		24-51-31	ALL
	Y	C012	BJ	W1138	0132	24		24-51-31	ALL
	Y	C012	BJ	W1138	0134	24		24-51-31	ALL
	A	C013	2	W1138	0031	24		24-27-21	ALL
	A	C013	2	W1138	0188	24		24-27-21	ALL
	B	C014	2	W1138	0144	22		25-31-21	115-199
	B	C016	2	W1138	0173	22		25-31-11	001-099
TB0134		BACT44A0350D					P034-00/ /		001, 003-099, 115-199
TB0134	A	YHLZD-33					P034-00/ /		ALL
TB0134	B	YHLZR-17					P034-00/ /		ALL
TB0134	Y	BACM15C3B					P034-00/ /		ALL
	Y	A001	BJ	W1128	0008	24		24-22-12	ALL
	Y	A001	BJ	W1128	0104	24		24-22-12	ALL
	Y	A001	BJ	W1128	0105	24		24-22-12	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 51

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0134		BACT44A0350D (continued)					P034-00/ /		001, 003-099, 115-199
TB0134	A	YHLZD-33 (continued)					P034-00/ /		ALL
TB0134	B	YHLZR-17 (continued)					P034-00/ /		ALL
TB0134	Y	BACM15C3B (continued)					P034-00/ /		ALL
	A	A003	2	W1128	0114	20		24-22-41	ALL
	A	A003	2	W1128	0115	24		24-22-41	ALL
	B	A004	2	W1128	0020	24		24-41-11	ALL
	B	A004	2	W1128	0122	24		24-41-11	ALL
	Y	C001	BJ	W1128	0018	24		24-27-41	ALL
	Y	C001	BJ	W1128	0019	24		24-27-41	ALL
	Y	C001	BJ	W1128	0120	24		24-27-41	ALL
	A	C003	2	W1128	0013	20		24-22-41	ALL
	B	C004	2	W1128	0121	24		24-41-11	001-099
	B	C004	2	W1128	0121	20		24-41-11	115-199
TB0135		M81714-5-8					WBL740/ /		001, 003-099, 115-199
TB0136		M81714-5-8					WBL740/ /		001, 003-099, 115-199
TB0137		AMY4100T-10U					E003-02/ /		001, 003-099, 115-199
TB0137	Y	BACM15C3B					E003-02/ /		001-099
TB0137	Y	BACM15C3B					E3-2/ /		115-199
	Y	A071	BJ	W1423	5021R	24		22-41-12	ALL
	Y	A071	BJ	W1423	5022R	24		22-41-12	ALL
	Y	A071	BJ	W1423	5023R	24		22-41-12	ALL
	Y	A072	BJ	W1423	5019R	24		22-41-13	ALL
	Y	A072	BJ	W1423	5020R	24		22-41-13	ALL
	Y	A072	BJ	W1423	5024R	24		22-41-13	ALL
	Y	A091	BJ	W1423	0027	24		34-53-22	001-099
	Y	A091	BJ	W1423	0054	24		34-53-22	001-099
	Y	A091	BJ	W1423	0055	24		34-53-22	001-099
	Y	C071	BJ	W1423	5021B	24		22-41-12	ALL
	Y	C071	BJ	W1423	5022B	24		22-41-12	ALL
	Y	C071	BJ	W1423	5023B	24		22-41-12	ALL
	Y	C072	BJ	W1423	5019B	24		22-41-13	ALL
	Y	C072	BJ	W1423	5020B	24		22-41-13	ALL
	Y	C072	BJ	W1423	5024B	24		22-41-13	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 52

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0141		BACM15C3					E004-03/ /		001, 003-099, 115-199
TB0141	A	YHLZD-33					E004-03/ /		001-099
TB0141	A	YHLZD-33					E4-3/ /		115-199
TB0141	B	YHLZR-27					E004-03/ /		ALL
TB0141	X	BACM15C3A					E4-3/ /		001-099
TB0141	Y	BACM15C3B					E4-3/ /		ALL
TB0141	Z	BACM15C3C					E4-3/ /		ALL
	Z	1	BJ	W1163	0018	24		23-21-11	ALL
	Z	1	BJ	W1163	0227	24		23-51-11	ALL
	Z	1	BJ	W1163	0231	24		23-51-11	ALL
	Z	1	BJ	W1163	0311	24		23-51-21	ALL
	Z	1	BJ	W1163	0348	24		23-51-51	115-199
	Z	1	BJ	W1163	0384	24		23-51-41	ALL
	Z	11	BJ	W1163	0204	24		23-51-11	ALL
	Z	11	BJ	W1163	0206	24		23-51-11	ALL
	Z	11	BJ	W1163	0298	24		23-51-21	ALL
	Z	11	BJ	W1163	0336	24		23-51-51	115-199
	Z	11	BJ	W1163	0372	24		23-51-41	ALL
	Z	12	BJ	W1163	0210	24		23-51-11	ALL
	Z	12	BJ	W1163	0214	24		23-51-11	ALL
	Z	12	BJ	W1163	0304	24		23-51-21	ALL
	Z	12	BJ	W1163	0341	24		23-51-51	115-199
	Z	12	BJ	W1163	0377	24		23-51-41	ALL
	Z	12	BJ	W1163	0497	24		23-51-11	001-099
	Z	12	BJ	W1163	2513R	24		23-51-15	115-199
	Z	15	BJ	W1163	0218	24		23-51-11	ALL
	Z	15	BJ	W1163	0222	24		23-51-11	ALL
	Z	15	BJ	W1163	0307	24		23-51-21	ALL
	Z	15	BJ	W1163	0344	24		23-51-51	115-199
	Z	15	BJ	W1163	0380	24		23-51-41	ALL
	Z	16	BJ	W1163	0221	24		23-51-11	ALL
	Z	16	BJ	W1163	0224	24		23-51-11	ALL
	Z	16	BJ	W1163	0309	24		23-51-21	ALL
	Z	16	BJ	W1163	0346	24		23-51-51	115-199
	Z	16	BJ	W1163	0382	24		23-51-41	ALL
	Z	17	BJ	W1163	0226	24		23-51-11	ALL
	Z	17	BJ	W1163	0230	24		23-51-11	ALL
	Z	17	BJ	W1163	0310	24		23-51-21	ALL
	Z	17	BJ	W1163	0347	24		23-51-51	115-199
	Z	17	BJ	W1163	0383	24		23-51-41	ALL
	Z	18	BJ	W1163	0229	24		23-51-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 53

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0141		BACM15C3 (continued)					E004-03/ /		001, 003-099, 115-199
TB0141	A	YHLZD-33 (continued)					E004-03/ /		001-099
TB0141	A	YHLZD-33 (continued)					E4-3/ /		115-199
TB0141	B	YHLZR-27 (continued)					E004-03/ /		ALL
TB0141	X	BACM15C3A (continued)					E4-3/ /		001-099
TB0141	Y	BACM15C3B (continued)					E4-3/ /		ALL
TB0141	Z	BACM15C3C (continued)					E4-3/ /		ALL
	Z	18	BJ	W1163	0232	24		23-51-11	ALL
	Z	18	BJ	W1163	0312	24		23-51-21	ALL
	Z	18	BJ	W1163	0349	24		23-51-51	115-199
	Z	18	BJ	W1163	0385	24		23-51-41	ALL
	Z	19	BJ	W1163	0234	24		23-51-12	ALL
	Z	19	BJ	W1163	0236	24		23-51-12	ALL
	Z	19	BJ	W1163	0328	24		23-51-21	ALL
	Z	19	BJ	W1163	0365	24		23-51-51	115-199
	Z	19	BJ	W1163	0401	24		23-51-41	ALL
	Z	2	BJ	W1163	0019	24		23-21-11	ALL
	Z	2	BJ	W1163	0219	24		23-51-11	ALL
	Z	2	BJ	W1163	0223	24		23-51-11	ALL
	Z	2	BJ	W1163	0308	24		23-51-21	ALL
	Z	2	BJ	W1163	0345	24		23-51-51	115-199
	Z	2	BJ	W1163	0381	24		23-51-41	ALL
	Z	20	BJ	W1163	0235	24		23-51-12	ALL
	Z	20	BJ	W1163	0237	24		23-51-12	ALL
	Z	20	BJ	W1163	0324	24		23-51-21	ALL
	Z	20	BJ	W1163	0361	24		23-51-51	115-199
	Z	20	BJ	W1163	0397	24		23-51-41	ALL
	Z	21	BJ	W1163	0242	24		23-51-12	ALL
	Z	21	BJ	W1163	0243	24		23-51-12	ALL
	Z	21	BJ	W1163	0326	24		23-51-21	ALL
	Z	21	BJ	W1163	0363	24		23-51-51	115-199
	Z	21	BJ	W1163	0399	24		23-51-41	ALL
	Z	22	BJ	W1163	0255	24		23-51-12	ALL
	Z	22	BJ	W1163	0256	24		23-51-12	ALL
	Z	22	BJ	W1163	0329	24		23-51-21	ALL
	Z	22	BJ	W1163	0366	24		23-51-51	115-199
	Z	22	BJ	W1163	0402	24		23-51-41	ALL
	Z	23	BJ	W1163	0254	24		23-51-12	ALL
	Z	23	BJ	W1163	0257	24		23-51-12	ALL
	Z	23	BJ	W1163	0325	24		23-51-21	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 54

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0141		BACM15C3 (continued)					E004-03/ /		001, 003-099, 115-199
TB0141	A	YHLZD-33 (continued)					E004-03/ /		001-099
TB0141	A	YHLZD-33 (continued)					E4-3/ /		115-199
TB0141	B	YHLZR-27 (continued)					E004-03/ /		ALL
TB0141	X	BACM15C3A (continued)					E4-3/ /		001-099
TB0141	Y	BACM15C3B (continued)					E4-3/ /		ALL
TB0141	Z	BACM15C3C (continued)					E4-3/ /		ALL
	Z	23	BJ	W1163	0362	24		23-51-51	115-199
	Z	23	BJ	W1163	0398	24		23-51-41	ALL
	Z	24	BJ	W1163	0249	24		23-51-12	ALL
	Z	24	BJ	W1163	0250	24		23-51-12	ALL
	Z	24	BJ	W1163	0330	24		23-51-21	ALL
	Z	24	BJ	W1163	0367	24		23-51-51	115-199
	Z	24	BJ	W1163	0403	24		23-51-41	ALL
	Z	25	BJ	W1163	0245	24		23-51-12	001-099
	Z	25	BJ	W1163	0246	24		23-51-12	ALL
	Z	25	BJ	W1163	0247	24		23-51-12	115-199
	Z	25	BJ	W1163	0327	24		23-51-21	ALL
	Z	25	BJ	W1163	0364	24		23-51-51	115-199
	Z	25	BJ	W1163	0400	24		23-51-41	ALL
	Z	26	BJ	W1163	0259	24		23-51-13	ALL
	Z	26	BJ	W1163	0272	24		23-51-13	ALL
	Z	26	BJ	W1163	0321	24		23-51-21	ALL
	Z	26	BJ	W1163	0358	24		23-51-51	115-199
	Z	26	BJ	W1163	0394	24		23-51-41	ALL
	Z	27	BJ	W1163	0262	24		23-51-13	ALL
	Z	27	BJ	W1163	0273	24		23-51-13	ALL
	Z	27	BJ	W1163	0322	24		23-51-21	ALL
	Z	27	BJ	W1163	0359	24		23-51-51	115-199
	Z	27	BJ	W1163	0395	24		23-51-41	ALL
	Z	28	BJ	W1163	0265	24		23-51-13	ALL
	Z	28	BJ	W1163	0274	24		23-51-13	ALL
	Z	28	BJ	W1163	0323	24		23-51-21	ALL
	Z	28	BJ	W1163	0360	24		23-51-51	115-199
	Z	28	BJ	W1163	0396	24		23-51-41	ALL
	Z	29	BJ	W1163	0268	24		23-51-13	ALL
	Z	29	BJ	W1163	0275	24		23-51-13	ALL
	Z	29	BJ	W1163	0320	24		23-51-21	ALL
	Z	29	BJ	W1163	0357	24		23-51-51	115-199
	Z	29	BJ	W1163	0393	24		23-51-41	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 55

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0141		BACM15C3 (continued)					E004-03/ /		001, 003-099, 115-199
TB0141	A	YHLZD-33 (continued)					E004-03/ /		001-099
TB0141	A	YHLZD-33 (continued)					E4-3/ /		115-199
TB0141	B	YHLZR-27 (continued)					E004-03/ /		ALL
TB0141	X	BACM15C3A (continued)					E4-3/ /		001-099
TB0141	Y	BACM15C3B (continued)					E4-3/ /		ALL
TB0141	Z	BACM15C3C (continued)					E4-3/ /		ALL
	Z	3	BJ	W1163	0020	24		23-21-11	ALL
	Z	3	BJ	W1163	0295	24		23-51-14	115-199
	Z	3	BJ	W1163	0296	24		23-51-14	ALL
	Z	3	BJ	W1163	0317	24		23-51-21	ALL
	Z	3	BJ	W1163	0354	24		23-51-51	115-199
	Z	3	BJ	W1163	0390	24		23-51-41	ALL
	Z	3	BJ	W1163	0419	24		31-31-32	115-199
	Z	3	BJ	W1163	0569	22		23-11-11	001-099
	Z	3	BJ	W1163	0570	20		23-11-11	001-099
	Z	30	BJ	W1163	0283	24		23-51-14	ALL
	Z	30	BJ	W1163	0284	24		23-51-14	ALL
	Z	30	BJ	W1163	0313	24		23-51-21	ALL
	Z	30	BJ	W1163	0350	24		23-51-51	115-199
	Z	30	BJ	W1163	0386	24		23-51-41	ALL
	Z	31	BJ	W1163	0285	24		23-51-14	ALL
	Z	31	BJ	W1163	0286	24		23-51-14	ALL
	Z	31	BJ	W1163	0315	24		23-51-21	ALL
	Z	31	BJ	W1163	0352	24		23-51-51	115-199
	Z	31	BJ	W1163	0388	24		23-51-41	ALL
	Z	31	BJ	W1163	0489	24		23-51-14	ALL
	Z	32	BJ	W1163	0290	24		23-51-14	115-199
	Z	32	BJ	W1163	0291	24		23-51-14	115-199
	Z	32	BJ	W1163	0318	24		23-51-21	115-199
	Z	32	BJ	W1163	0355	24		23-51-51	115-199
	Z	32	BJ	W1163	0391	24		23-51-41	115-199
	Z	32	BJ	W1163	0491	24		23-51-14	115-199
	Z	33	BJ	W1163	0293	24		23-51-14	115-199
	Z	33	BJ	W1163	0294	24		23-51-14	115-199
	Z	33	BJ	W1163	0316	24		23-51-21	115-199
	Z	33	BJ	W1163	0353	24		23-51-51	115-199
	Z	33	BJ	W1163	0389	24		23-51-41	115-199
	Z	34	BJ	W1163	0331	24		23-51-21	ALL
	Z	34	BJ	W1163	0334	24		23-51-21	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 56

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0141		BACM15C3 (continued)					E004-03/ /		001, 003-099, 115-199
TB0141	A	YHLZD-33 (continued)					E004-03/ /		001-099
TB0141	A	YHLZD-33 (continued)					E4-3/ /		115-199
TB0141	B	YHLZR-27 (continued)					E004-03/ /		ALL
TB0141	X	BACM15C3A (continued)					E4-3/ /		001-099
TB0141	Y	BACM15C3B (continued)					E4-3/ /		ALL
TB0141	Z	BACM15C3C (continued)					E4-3/ /		ALL
	Z	34	BJ	W1163	0368	24		23-51-51	115-199
	Z	34	BJ	W1163	0370	24		23-51-41	001-099
	Z	34	BJ	W1163	0370	24		23-51-51	115-199
	Z	34	BJ	W1163	0404	24		23-51-41	ALL
	Z	35	BJ	W1163	0138	20		23-31-11	001-099
	Z	35	BJ	W1163	0139	20		23-31-11	001-099
	Z	35	BJ	W1163	0141	20		23-31-11	001-099
	Z	35	BJ	W1163	0146	22		23-31-11	001-099
	Z	35	BJ	W1163	0164	24		23-34-15	001-099
	Z	35	BJ	W1163	0596	22		23-31-19	001-099
	Z	39	BJ	W1163	0277	24		23-51-13	ALL
	Z	39	BJ	W1163	0279	24		23-51-13	ALL
	Z	39	BJ	W1163	0319	24		23-51-21	ALL
	Z	39	BJ	W1163	0356	24		23-51-51	115-199
	Z	39	BJ	W1163	0392	24		23-51-41	ALL
	Z	4	BJ	W1163	0021	24		23-21-11	ALL
	Z	4	BJ	W1163	0280	24		23-51-14	ALL
	Z	4	BJ	W1163	0281	24		23-51-14	ALL
	Z	4	BJ	W1163	0314	24		23-51-21	ALL
	Z	4	BJ	W1163	0351	24		23-51-51	115-199
	Z	4	BJ	W1163	0387	24		23-51-41	ALL
	Z	4	BJ	W1163	0418	24		SPARE	115-199
	Z	40	BJ	W1163	0138	20		23-31-11	115-199
	Z	40	BJ	W1163	0139	20		23-31-11	115-199
	Z	40	BJ	W1163	0141	20		23-31-11	115-199
	Z	40	BJ	W1163	0146	22		23-31-11	115-199
	Z	40	BJ	W1163	0164	24		23-34-15	115-199
	Z	40	BJ	W1163	0473	24		23-51-11	001-099
	Z	40	BJ	W1163	0478	24		23-51-21	001-099
	Z	40	BJ	W1163	0481	24		23-51-41	001-099
	Z	40	BJ	W1163	0505	24		23-51-11	001-099
	Z	41	BJ	W1163	2502R	24		23-41-11	ALL
	Z	41	BJ	W1163	2503R	24		23-41-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 57

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0141		BACM15C3 (continued)					E004-03/ /		001, 003-099, 115-199
TB0141	A	YHLZD-33 (continued)					E004-03/ /		001-099
TB0141	A	YHLZD-33 (continued)					E4-3/ /		115-199
TB0141	B	YHLZR-27 (continued)					E004-03/ /		ALL
TB0141	X	BACM15C3A (continued)					E4-3/ /		001-099
TB0141	Y	BACM15C3B (continued)					E4-3/ /		ALL
TB0141	Z	BACM15C3C (continued)					E4-3/ /		ALL
	Z	41	BJ	W1163	2505R	24		23-41-11	ALL
	Z	41	BJ	W1163	2510R	24		23-41-11	ALL
	Z	41	BJ	W1163	2511R	24		23-41-11	ALL
	Z	41	BJ	W1163	2512R	24		23-41-11	ALL
	Z	42	BJ	W1163	2502B	24		23-41-11	ALL
	Z	42	BJ	W1163	2503B	24		23-41-11	ALL
	Z	42	BJ	W1163	2505B	24		23-41-11	ALL
	Z	42	BJ	W1163	2510B	24		23-41-11	ALL
	Z	42	BJ	W1163	2511B	24		23-41-11	ALL
	Z	42	BJ	W1163	2512B	24		23-41-11	ALL
	Z	45	BJ	W1163	0474	24		23-51-11	001-099
	Z	45	BJ	W1163	0475	24		23-51-11	001-099
	Z	45	BJ	W1163	0480	24		23-51-21	001-099
	Z	45	BJ	W1163	0483	24		23-51-41	001-099
	Z	46	BJ	W1163	0070	24		23-21-11	001-099
	Z	46	BJ	W1163	0479	24		23-51-21	001-099
	Z	46	BJ	W1163	0482	24		23-51-41	001-099
	Z	46	BJ	W1163	0503	24		23-51-11	001-099
	Z	46	BJ	W1163	0504	24		23-51-11	001-099
	Z	5	BJ	W1163	0142	24		23-31-11	001-099
	Z	5	BJ	W1163	0145	24		23-31-11	001-099
	Z	5	BJ	W1163	0172	22		23-34-15	001-099
	Z	5	BJ	W1163	0528	24		23-32-02	001-099
	Z	5	BJ	W1163	0571	24		23-31-19	001-099
	Z	68	BJ	W1163	0291	24		23-51-14	001-099
	Z	68	BJ	W1163	0318	24		23-51-21	001-099
	Z	68	BJ	W1163	0391	24		23-51-41	001-099
	Z	68	BJ	W1163	0491	24		23-51-14	001-099
	Z	68	BJ	W1163	2028R	24		23-51-14	001-099
	Z	69	BJ	W1163	0294	24		23-51-14	001-099
	Z	69	BJ	W1163	0316	24		23-51-21	001-099
	Z	69	BJ	W1163	0389	24		23-51-41	001-099
	Z	69	BJ	W1163	2029R	24		23-51-14	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 58

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0141		BACM15C3 (continued)					E004-03/ /		001, 003-099, 115-199
TB0141	A	YHLZD-33 (continued)					E004-03/ /		001-099
TB0141	A	YHLZD-33 (continued)					E4-3/ /		115-199
TB0141	B	YHLZR-27 (continued)					E004-03/ /		ALL
TB0141	X	BACM15C3A (continued)					E4-3/ /		001-099
TB0141	Y	BACM15C3B (continued)					E4-3/ /		ALL
TB0141	Z	BACM15C3C (continued)					E4-3/ /		ALL
	Z	7	BJ	W1163	0173	22		23-34-15	001-099
	Z	7	BJ	W1163	0173	24		23-34-15	115-199
	Z	7	BJ	W1163	0211	24		23-51-11	ALL
	Z	7	BJ	W1163	0215	24		23-51-11	ALL
	Z	7	BJ	W1163	0305	24		23-51-21	ALL
	Z	7	BJ	W1163	0342	24		23-51-51	115-199
	Z	7	BJ	W1163	0378	24		23-51-41	ALL
	Z	7	BJ	W1163	0496	24		23-51-11	001-099
	Z	7	BJ	W1163	0527	24		23-32-02	ALL
	Z	7	BJ	W1163	0572	24		23-31-19	001-099
	Z	7	BJ	W1163	2016R	24		23-51-15	115-199
	Z	8	BJ	W1163	0213	24		23-51-11	ALL
	Z	8	BJ	W1163	0216	24		23-51-11	ALL
	Z	8	BJ	W1163	0306	24		23-51-21	ALL
	Z	8	BJ	W1163	0343	24		23-51-51	115-199
	Z	8	BJ	W1163	0379	24		23-51-41	ALL
	Y	A005	BJ	W1163	5001R	24		23-21-11	115-199
	Y	A005	BJ	W1163	5002R	24		23-21-11	115-199
	Y	A006	BJ	W1163	0142	24		23-31-11	115-199
	Y	A006	BJ	W1163	0145	24		23-31-11	115-199
	Y	A006	BJ	W1163	0172	24		23-34-15	115-199
	Y	A006	BJ	W1163	0528	24		23-32-02	115-199
	Y	A010	BJ	W1163	0203	24		23-51-11	ALL
	Y	A010	BJ	W1163	0205	24		23-51-11	ALL
	Y	A013	BJ	W1163	0200	24		23-51-11	ALL
	Y	A013	BJ	W1163	0202	24		23-51-11	ALL
	Y	A013	BJ	W1163	0338	24		23-51-51	115-199
	Y	A036	BJ	W1163	2001R	24		23-21-11	115-199
	Y	A036	BJ	W1163	2008R	24		23-21-11	115-199
	Y	A037	BJ	W1163	0456	24		23-31-11	115-199
	Y	A037	BJ	W1163	0457	24		23-31-11	115-199
	Y	A043	BJ	W1163	0153	24		23-31-13	ALL
	Y	A043	BJ	W1163	0459	24		23-31-13	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 59

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0141		BACM15C3 (continued)					E004-03/ /		001, 003-099, 115-199
TB0141	A	YHLZD-33 (continued)					E004-03/ /		001-099
TB0141	A	YHLZD-33 (continued)					E4-3/ /		115-199
TB0141	B	YHLZR-27 (continued)					E004-03/ /		ALL
TB0141	X	BACM15C3A (continued)					E4-3/ /		001-099
TB0141	Y	BACM15C3B (continued)					E4-3/ /		ALL
TB0141	Z	BACM15C3C (continued)					E4-3/ /		ALL
	Y	A043	BJ	W1163	0526	24		23-32-02	ALL
	Y	A043	BJ	W1163	0573	24		23-31-19	001-099
	Y	A043	BJ	W1163	0577	24		23-31-13	001-099
	B	A049	2	W1163	0489	24		23-51-14	ALL
	B	A051	2	W1163	0491	24		23-51-14	ALL
	A	A053	2	W1163	0162	22		23-34-15	ALL
	A	A054	2	W1163	0163	22		23-34-15	ALL
	A	A055	2	W1163	0165	22		23-34-15	ALL
	A	A056	2	W1163	0538	20		23-31-41	ALL
	A	A057	2	W1163	0541	20		23-31-41	ALL
	A	A058	2	W1163	0537	20		23-31-41	ALL
	A	A059	2	W1163	0542	20		23-31-41	ALL
	X	A070	BJ	W1163	2008R	24		23-21-11	001-099
	X	A070	BJ	W1163	2009R	24		23-21-11	001-099
	X	A071	BJ	W1163	2021R	24		23-21-11	001-099
	X	A071	BJ	W1163	2022R	24		23-21-11	001-099
	Y	A075	BJ	W1163	0524	24		23-32-02	001-099
	Y	A075	BJ	W1163	0597	22		23-31-19	001-099
	X	B070	BJ	W1163	2008B	24		23-21-11	001-099
	X	B070	BJ	W1163	2009B	24		23-21-11	001-099
	Y	C005	BJ	W1163	5001B	24		23-21-11	115-199
	Y	C005	BJ	W1163	5002B	24		23-21-11	115-199
	Y	C006	BJ	W1163	0143	24		23-31-11	115-199
	Y	C006	BJ	W1163	0144	24		23-31-11	115-199
	Y	C006	BJ	W1163	0166	22		23-34-15	115-199
	Y	C006	BJ	W1163	0524	24		23-32-02	115-199
	Y	C010	BJ	W1163	0199	24		23-51-11	ALL
	Y	C010	BJ	W1163	0201	24		23-51-11	ALL
	Y	C036	BJ	W1163	2001B	24		23-21-11	115-199
	Y	C036	BJ	W1163	2008B	24		23-21-11	115-199
	Y	C037	BJ	W1163	0300	24		23-51-21	ALL
	Y	C037	BJ	W1163	0301	24		23-51-21	ALL
	Y	C037	BJ	W1163	0374	24		23-51-41	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 60

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0141		BACM15C3 (continued)					E004-03/ /		001, 003-099, 115-199
TB0141	A	YHLZD-33 (continued)					E004-03/ /		001-099
TB0141	A	YHLZD-33 (continued)					E4-3/ /		115-199
TB0141	B	YHLZR-27 (continued)					E004-03/ /		ALL
TB0141	X	BACM15C3A (continued)					E4-3/ /		001-099
TB0141	Y	BACM15C3B (continued)					E4-3/ /		ALL
TB0141	Z	BACM15C3C (continued)					E4-3/ /		ALL
	Y	C038	BJ	W1163	0415	22		33-25-11	001-099
	Y	C038	BJ	W1163	0416	22		33-25-11	001-099
	Y	C038	BJ	W1163	0417	22		33-25-21	001-099
	Y	C043	BJ	W1163	0178	22		23-42-11	115-199
	Y	C043	BJ	W1163	0461	22		23-42-11	115-199
	Y	C043	BJ	W1163	0463	22		23-42-12	115-199
	Y	C043	BJ	W1163	0467	22		23-42-12	115-199
	Y	C044	BJ	W1163	0186	22		23-42-11	115-199
	Y	C044	BJ	W1163	0187	22		23-42-11	115-199
	Y	C044	BJ	W1163	0469	22		23-42-11	115-199
	B	C049	2	W1163	0490	20		23-51-14	ALL
	B	C051	2	W1163	0492	20		23-51-14	ALL
	A	C053	2	W1163	0173	22		23-34-15	001-099
	A	C053	2	W1163	0173	24		23-34-15	115-199
	A	C054	2	W1163	0172	22		23-34-15	001-099
	A	C054	2	W1163	0172	24		23-34-15	115-199
	A	C055	2	W1163	0166	22		23-34-15	ALL
	A	C056	2	W1163	0169	24		23-31-41	ALL
	A	C056	2	W1163	0539	24		23-31-41	ALL
	A	C057	2	W1163	0170	24		23-31-41	ALL
	A	C057	2	W1163	0540	24		23-31-41	ALL
	A	C058	2	W1163	0171	24		23-31-41	ALL
	A	C058	2	W1163	0536	24		23-31-41	ALL
	A	C059	2	W1163	0126	24		23-31-41	ALL
	A	C059	2	W1163	0168	24		23-31-41	ALL
	A	C059	2	W1163	0415	24		23-31-41	115-199
	A	C059	2	W1163	0419	24		23-31-41	001-099
	X	C071	BJ	W1163	2021B	24		23-21-11	001-099
	X	C071	BJ	W1163	2022B	24		23-21-11	001-099
	Y	C075	BJ	W1163	0143	22		23-31-19	001-099
	Y	C075	BJ	W1163	0166	22		23-34-15	001-099
	Y	C075	BJ	W1163	0771	22		23-31-19	001-099
	Z	DED		W1163	2513Z			23-51-15	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 61

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0147	A	YHLZD-33					P50/ /		ALL
TB0147	Y	BACM15C3B					P50/ /		ALL
TB0147	Z	BACM15C3C					P50/ /		ALL
	Z	15	BJ	W1140	0183	24		36-11-11	ALL
	Z	15	BJ	W1140	0184	24		36-11-11	ALL
	Z	15	BJ	W1140	0185	24		36-11-11	ALL
	Z	15	BJ	W1140	0186	24		36-11-11	ALL
	Z	15	BJ	W1140	0187	24		36-11-11	ALL
	Z	15	BJ	W1140	0240	24		36-11-11	001-099
	Z	15	BJ	W1140	0247	24		36-11-11	001-099
	Z	16	BJ	W1140	0563	22		30-11-11	ALL
	Z	16	BJ	W1140	0564	22		30-11-11	ALL
	Z	16	BJ	W1140	0565	22		30-11-11	ALL
	Z	16	BJ	W1140	0566	22		30-11-11	ALL
	Z	16	BJ	W1140	0567	22		30-11-11	ALL
	Z	5	BJ	W1140	0177	24		36-11-21	ALL
	Z	5	BJ	W1140	0178	24		36-11-21	ALL
	Z	5	BJ	W1140	0179	24		36-11-21	ALL
	Z	5	BJ	W1140	0205	24		36-11-21	ALL
	Z	5	BJ	W1140	0209	24		36-11-21	ALL
	Z	5	BJ	W1140	0344	24		36-11-21	001-099
	Z	5	BJ	W1140	0345	24		36-11-21	001-099
	A	A001	2	W1140	0522	24		21-51-11	ALL
	A	A001	2	W1140	0558	24		21-51-11	ALL
	A	A002	2	W1140	0558	24		21-51-11	ALL
	Y	A003	BJ	W1140	0098	24		21-51-13	ALL
	Y	A003	BJ	W1140	0127	24		21-51-13	ALL
	Y	A003	BJ	W1140	0501	24		21-51-13	ALL
	Y	A007	BJ	W1140	0079	22		21-51-23	ALL
	Y	A007	BJ	W1140	0441	22		21-51-23	ALL
	Y	A007	BJ	W1140	0442	22		21-51-23	ALL
	Y	A008	BJ	W1140	0188	24		36-11-31	ALL
	Y	A008	BJ	W1140	0189	24		36-11-31	ALL
	Y	A008	BJ	W1140	0190	24		36-11-31	ALL
	Y	A009	BJ	W1140	0032	24		21-51-11	ALL
	Y	A009	BJ	W1140	0033	24		21-51-11	ALL
	Y	A009	BJ	W1140	0042	24		21-51-11	ALL
	Y	A010	BJ	W1140	0321	22		77-12-41	001-099
	Y	A010	BJ	W1140	0322	22		77-12-41	001-099
	Y	A010	BJ	W1140	0336	22		77-12-41	001-099
	Y	A010	BJ	W1140	0337	22		77-12-41	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 62

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0147	A	YHLZD-33 (continued)					P50/ /		ALL
TB0147	Y	BACM15C3B (continued)					P50/ /		ALL
TB0147	Z	BACM15C3C (continued)					P50/ /		ALL
	Y	A011	BJ	W1140	0129	22		21-51-21	ALL
	Y	A011	BJ	W1140	0133	24		21-51-21	ALL
	Y	A011	BJ	W1140	0138	24		21-51-21	ALL
	Y	A012	BJ	W1140	0225	24		21-51-25	ALL
	Y	A012	BJ	W1140	0226	24		21-51-25	ALL
	Y	A012	BJ	W1140	0229	24		21-51-25	ALL
	Y	A013	BJ	W1140	0242	24		26-18-21	ALL
	Y	A013	BJ	W1140	0251	24		26-18-21	ALL
	Y	A013	BJ	W1140	0305	24		26-18-21	ALL
	Y	A017	BJ	W1140	0137	24		21-51-21	ALL
	Y	A017	BJ	W1140	0433	24		21-51-11	ALL
	Y	A017	BJ	W1140	0521	24		21-51-21	ALL
	A	C001	2	W1140	0433	24		21-51-11	ALL
	A	C002	2	W1140	0500	24		21-51-11	ALL
	Y	C003	BJ	W1140	0119	24		21-51-15	ALL
	Y	C003	BJ	W1140	0232	24		21-51-15	ALL
	Y	C003	BJ	W1140	0234	24		21-51-15	ALL
	Y	C003	BJ	W1140	0238	24		21-51-15	ALL
	Y	C007	BJ	W1140	0120	24		21-51-15	ALL
	Y	C007	BJ	W1140	0236	24		21-51-15	ALL
	Y	C007	BJ	W1140	0237	24		21-51-15	ALL
	Y	C008	BJ	W1140	0121	24		21-51-15	ALL
	Y	C008	BJ	W1140	0122	24		21-51-15	ALL
	Y	C008	BJ	W1140	0239	24		21-51-15	ALL
	Y	C009	BJ	W1140	0025	22		21-51-11	ALL
	Y	C009	BJ	W1140	0029	22		21-51-11	ALL
	Y	C009	BJ	W1140	0030	24		21-51-11	ALL
	Y	C010	BJ	W1140	0315	22		77-12-42	001-099
	Y	C010	BJ	W1140	0316	22		77-12-42	001-099
	Y	C010	BJ	W1140	0334	22		77-12-42	001-099
	Y	C010	BJ	W1140	0339	22		77-12-42	001-099
	Y	C011	BJ	W1140	0152	24		21-51-25	ALL
	Y	C011	BJ	W1140	0153	24		21-51-25	ALL
	Y	C011	BJ	W1140	0223	24		21-51-25	ALL
	Y	C011	BJ	W1140	0227	24		21-51-25	ALL
	Y	C012	BJ	W1140	0228	24		21-51-25	ALL
	Y	C012	BJ	W1140	0230	24		21-51-25	ALL
	Y	C012	BJ	W1140	0231	24		21-51-25	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 63

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0147	A	YHLZD-33 (continued)					P50/ /		ALL
TB0147	Y	BACM15C3B (continued)					P50/ /		ALL
TB0147	Z	BACM15C3C (continued)					P50/ /		ALL
	Y	C013	BJ	W1140	0031	24		21-51-21	ALL
	Y	C013	BJ	W1140	0445	24		21-51-21	ALL
	Y	C013	BJ	W1140	0528	24		21-51-21	ALL
TB0150		BACC					215/167/R010		115-199
TB0150	F	BACM15C1A					200/210/R015		115-199
TB0150	X	BACM15C3A					215/170/R015		001-099
	X	A001	BJ	W2309	5101W	24		34-43-11	001-099
	F	A001	2	W2309	5101W	24		34-43-11	115-199
	X	A001	BJ	W2309	5102W	24		34-43-11	001-099
	F	A001	2	W2309	5102W	24		34-43-11	115-199
	X	A002	BJ	W2309	5103W	24		34-43-11	001-099
	F	A002	2	W2309	5103W	24		34-43-11	115-199
	X	A002	BJ	W2309	5104W	24		34-43-11	001-099
	F	A002	2	W2309	5104W	24		34-43-11	115-199
	X	B001	BJ	W2309	5101B	24		34-43-11	001-099
	X	B001	BJ	W2309	5102B	24		34-43-11	001-099
	X	B002	BJ	W2309	5103B	24		34-43-11	001-099
	X	B002	BJ	W2309	5104B	24		34-43-11	001-099
	F	C001	2	W2309	5101B	24		34-43-11	115-199
	F	C001	2	W2309	5102B	24		34-43-11	115-199
	F	C002	2	W2309	5103B	24		34-43-11	115-199
	F	C002	2	W2309	5104B	24		34-43-11	115-199
TB0155		BACT44B0400U					P070-00/ /		001, 003-099, 115-199
TB0155	X	BACM15C3A					P070-00/ /		ALL
TB0155	Y	BACM15C3B					P070-00/ /		ALL
	X	A001	BJ	W1250	0011	20		21-43-11	115-199
	X	A001	BJ	W1250	0038	20		21-43-11	115-199
	X	A002	BJ	W1250	0039	22		21-25-11	ALL
	X	A002	BJ	W1252	0031	24		21-25-11	ALL
	Y	A003	BJ	W1250	0015	24		21-43-11	115-199
	Y	A003	BJ	W1250	0016	24		21-43-11	115-199
	Y	A003	BJ	W1250	B-01			21-43-11	115-199
	Y	A004	BJ	W1250	0046	20		33-45-11	ALL
	Y	A004	BJ	W1250	0047	20		33-45-11	ALL
	Y	A004	BJ	W1252	0048	20		33-45-11	ALL
	Y	A005	BJ	W1250	0062	24		28-25-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 64

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0155		BACT44B0400U (continued)					P070-00/ /		001, 003-099, 115-199
TB0155	X	BACM15C3A (continued)					P070-00/ /		ALL
TB0155	Y	BACM15C3B (continued)					P070-00/ /		ALL
	Y	A005	BJ	W1250	0070	24		28-25-11	ALL
	Y	A005	BJ	W1250	0073	24		28-25-11	ALL
	Y	A006	BJ	W1250	0067	22		28-25-11	ALL
	Y	A006	BJ	W1250	0069	22		28-25-11	ALL
	Y	A006	BJ	W1250	0071	22		28-25-11	ALL
	Y	A008	BJ	W1250	0040	22		21-25-11	ALL
	Y	A008	BJ	W1250	0094	22		21-25-11	ALL
	Y	A008	BJ	W1250	0095	22		21-25-11	ALL
	X	B001	BJ	W1250	0048	20		33-45-11	ALL
	X	B001	BJ	W1252	0047	20		33-45-11	ALL
	Y	C003	BJ	W1250	0013	24		21-43-11	ALL
	Y	C003	BJ	W1250	0014	24		21-43-11	ALL
	Y	C003	BJ	W1250	0082	24		21-43-11	001-099
	Y	C003	BJ	W1250	B-04			21-43-11	115-199
	Y	C005	BJ	W1250	0065	24		28-25-11	ALL
	Y	C005	BJ	W1250	0072	24		28-25-11	ALL
	Y	C005	BJ	W1250	0074	24		28-25-11	ALL
	Y	C007	BJ	W1250	0011	20		21-43-11	001-099
	Y	C007	BJ	W1250	0038	20		21-43-11	001-099
	Y	C007	BJ	W1250	0084	20		21-43-11	001-099
	Y	CAP	Y	W1250	B-05			21-43-11	115-199
	X	D002	BJ	W1250	0042	24		21-43-11	115-199
	X	D002	BJ	W1250	B-03			21-43-11	115-199
TB0158		BACT44B0560U					253/207/R006		001, 003-099, 115-199
TB0158	A	YHLZD-33					250/205/R10		001-099
TB0158	A	YHLZD-29					253/207/R6		115-199
TB0158	A	YHLZD-33					253/207/R6		115-199
TB0158	F	BACM15C1A					250/205/R010		001-099
TB0158	F	BACM15C1A					253/207/R6		115-199
TB0158	X	BACM15C3A					250/205/R010		001-099
TB0158	X	BACM15C3A					250/205/R10		115-199
TB0158	Y	BACM15C3B					250/205/R010		ALL
	Y	A001	BJ	W4236	0036	20		28-22-21	ALL
	Y	A001	BJ	W4236	0040	20		28-22-21	ALL
	Y	A001	BJ	W4236	0185	20		28-22-21	ALL
	Y	A001	BJ	W4236	0186	20		28-22-21	ALL
	Y	A002	BJ	W2156	0176	22		78-34-21	001-002

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 65

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0158		BACT44B0560U (continued)					253/207/R006		001, 003-099, 115-199
TB0158	A	YHLZD-33 (continued)					250/205/R10		001-099
TB0158	A	YHLZD-29 (continued)					253/207/R6		115-199
TB0158	A	YHLZD-33 (continued)					253/207/R6		115-199
TB0158	F	BACM15C1A (continued)					250/205/R010		001-099
TB0158	F	BACM15C1A (continued)					253/207/R6		115-199
TB0158	X	BACM15C3A (continued)					250/205/R010		001-099
TB0158	X	BACM15C3A (continued)					250/205/R10		115-199
TB0158	Y	BACM15C3B (continued)					250/205/R010		ALL
	Y	A002	BJ	W4236	0056	22		78-34-21	001-099
	Y	A002	BJ	W4236	0098	22		78-34-21	001-099
	Y	A002	BJ	W4236	0262	22		78-34-21	001-099
	X	A003	BJ	W2134	0017	22		28-25-21	ALL
	X	A003	BJ	W4210	0023	20		28-25-21	ALL
	X	A004	BJ	W2156	2501Z			23-51-41	001-099
	X	A004	BJ	W2293	2503Z			23-51-41	001-099
	A	A005	2	W4228	0188	22		26-11-11	ALL
	A	A006	2	W2134	0003	22		26-15-11	ALL
	A	A007	2	W2134	0001	22		26-15-11	ALL
	A	A008	2	W4228	0022	22		26-11-11	ALL
	A	A009	2	W4228	0021	22		26-11-11	ALL
	F	A010	2	W2066	0024	16		33-13-51	ALL
	F	A010	2	W2295	0001	16		33-13-51	ALL
	F	A011	2	W4210	0090	18		73-21-11	115-199
	F	A011	2	W4232	0001	18		73-21-11	115-199
	X	B003	BJ	W2066	0263	20		27-21-11	001-099
	X	B003	BJ	W2066	1012	20		27-21-11	115-199
	X	B003	BJ	W2078	0511	20		27-21-11	ALL
	X	B004	BJ	W4210	0093	24		73-21-11	ALL
	X	B004	BJ	W4228	0215	24		73-21-11	ALL
	X	C003	BJ	W2066	0267	20		27-21-11	001-099
	X	C003	BJ	W2066	1013	20		27-21-11	115-199
	X	C003	BJ	W2078	0512	20		27-21-11	ALL
	X	C004	BJ	W2156	2501R	24		23-51-41	001-099
	X	C004	BJ	W2293	2503R	24		23-51-41	001-099
	A	C005	2	W4228	0020	22		26-11-11	ALL
	A	C006	2	W2134	0030	22		26-15-11	ALL
	A	C006	2	W2134	0033	22		26-15-11	ALL
	A	C007	2	W2134	0033	22		26-15-11	ALL
	A	C008	2	W4228	0019	22		26-11-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 66

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0158		BACT44B0560U (continued)					253/207/R006		001, 003-099, 115-199
TB0158	A	YHLZD-33 (continued)					250/205/R10		001-099
TB0158	A	YHLZD-29 (continued)					253/207/R6		115-199
TB0158	A	YHLZD-33 (continued)					253/207/R6		115-199
TB0158	F	BACM15C1A (continued)					250/205/R010		001-099
TB0158	F	BACM15C1A (continued)					253/207/R6		115-199
TB0158	X	BACM15C3A (continued)					250/205/R010		001-099
TB0158	X	BACM15C3A (continued)					250/205/R10		115-199
TB0158	Y	BACM15C3B (continued)					250/205/R010		ALL
	A	C008	2	W4228	0187	22		26-11-11	ALL
	A	C009	2	W4228	0187	22		26-11-11	ALL
	F	C011	2	W4210	0091	18		73-21-11	115-199
	F	C011	2	W4228	0119	18		73-21-11	115-199
	X	D003	BJ	W2066	0262	20		27-21-11	001-099
	X	D003	BJ	W2066	1011	20		27-21-11	115-199
	X	D003	BJ	W2078	0510	20		27-21-11	ALL
	X	D004	BJ	W2156	2501B	24		23-51-41	001-099
	X	D004	BJ	W2293	2503B	24		23-51-41	001-099
	X	DED		W2066	1011Z			27-21-11	115-199
	X	DED		W2066	1012Z			27-21-11	115-199
	X	DED		W2066	1013Z			27-21-11	115-199
TB0159		BACT44B0560U					253/207/L006		ALL
TB0159	A	YHLZD-33					250/205/L010		001-099
TB0159	A	YHLZD-29					253/207/L6		115-199
TB0159	A	YHLZD-33					253/207/L006		115-199
TB0159	F	BACM15C1A					253/207/L006		001-099
TB0159	F	BACM15C1A					253/207/L6		115-199
TB0159	X	BACM15C3A					253/207/L6		115-199
TB0159	Z	BACM15CSC					253/207/L6		ALL
	Z	11	BJ	W2066	0066	20		33-13-52	ALL
	Z	11	BJ	W2066	0356	20		33-13-52	ALL
	Z	11	BJ	W2071	0001	20		33-13-52	ALL
	Z	11	BJ	W2227	0005	20		33-13-52	ALL
	Z	11	BJ	W2229	0005	20		33-13-52	001-009
	Z	12	BJ	W2066	0264	20		33-13-52	ALL
	Z	12	BJ	W2066	0358	20		33-13-52	ALL
	Z	12	BJ	W2259	0004	20		33-13-52	ALL
	A	A003	2	W4236	0018	22		26-11-21	ALL
	A	A004	2	W4236	0017	22		26-11-21	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 67

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0159		BACT44B0560U (continued)					253/207/L006		ALL
TB0159	A	YHLZD-33 (continued)					250/205/L010		001-099
TB0159	A	YHLZD-29 (continued)					253/207/L6		115-199
TB0159	A	YHLZD-33 (continued)					253/207/L006		115-199
TB0159	F	BACM15C1A (continued)					253/207/L006		001-099
TB0159	F	BACM15C1A (continued)					253/207/L6		115-199
TB0159	X	BACM15C3A (continued)					253/207/L6		115-199
TB0159	Z	BACM15CSC (continued)					253/207/L6		ALL
	A	A005	2	W4236	0188	22		26-11-21	ALL
	F	A006	2	W4220	0079	18		73-21-21	115-199
	F	A006	2	W4238	0002	18		73-21-21	115-199
	F	A010	2	W2066	0067	16		33-13-52	ALL
	F	A010	2	W2297	0001	16		33-13-52	ALL
	X	B001	BJ	W4220	0082	24		73-21-21	115-199
	X	B001	BJ	W4236	0227	24		73-21-21	115-199
	A	C003	2	W4236	0020	22		26-11-21	ALL
	A	C003	2	W4236	0187	22		26-11-21	ALL
	A	C004	2	W4236	0187	22		26-11-21	ALL
	A	C005	2	W4236	0016	22		26-11-21	ALL
	F	C006	2	W4220	0080	18		73-21-21	115-199
	F	C006	2	W4236	0005	18		73-21-21	115-199
TB0160	A	YHLZD-33					P036-00/ /		001-099
TB0160	A	YHLZD-33					P36/ /		115-199
TB0160	C	YHLZD-33					P36/ /		115-199
TB0160	C	YHLZD-29					P36/ /		115-199
TB0160	F	BACM15C1A					P36/ /		115-199
TB0160	G	BACM15C1B					P36/ /		001-099
TB0160	J	YHLZD-33					P36/ /		115-199
TB0160	X	BACM15C3A					P36/ /		115-199
TB0160	Y	BACM15C3B					P36/ /		ALL
TB0160	Z	BACM15C3C					P36/ /		ALL
	Z	10	BJ	W1260	5721	22		32-09-11	ALL
	Z	10	BJ	W1260	5740	22		32-09-11	001-099
	Z	10	BJ	W1260	5741	22		32-09-11	001-099
	Z	10	BJ	W1260	5742	22		32-09-11	001-099
	Z	10	BJ	W1260	5743	22		32-09-11	001-099
	Z	10	BJ	W1260	5744	22		32-09-11	001-099
	Z	10	BJ	W1260	5745	22		32-09-11	001-099
	Z	10	BJ	W1260	5746	22		32-09-11	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 68

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0160	A	YHLZD-33 (continued)					P036-00/ /		001-099
TB0160	A	YHLZD-33 (continued)					P36/ /		115-199
TB0160	C	YHLZD-33 (continued)					P36/ /		115-199
TB0160	C	YHLZD-29 (continued)					P36/ /		115-199
TB0160	F	BACM15C1A (continued)					P36/ /		115-199
TB0160	G	BACM15C1B (continued)					P36/ /		001-099
TB0160	J	YHLZD-33 (continued)					P36/ /		115-199
TB0160	X	BACM15C3A (continued)					P36/ /		115-199
TB0160	Y	BACM15C3B (continued)					P36/ /		ALL
TB0160	Z	BACM15C3C (continued)					P36/ /		ALL
	Z	10	BJ	W1260	5761	22		32-09-11	115-199
	Z	10	BJ	W1260	5764	22		32-09-11	115-199
	Z	10	BJ	W1260	5888	22		32-09-11	115-199
	Z	11	BJ	W1260	0352	22		30-32-11	001-099
	Z	11	BJ	W1260	0353	22		30-32-11	001-099
	Z	11	BJ	W1260	0354	22		30-32-11	001-099
	Z	11	BJ	W1260	0355	22		30-32-11	001-099
	Z	11	BJ	W1260	5724	22		32-09-11	115-199
	Z	11	BJ	W1260	5738	22		32-09-11	115-199
	Z	11	BJ	W1260	5743	22		32-09-11	115-199
	Z	11	BJ	W1260	5744	22		32-09-11	115-199
	Z	11	BJ	W1260	5745	22		32-09-11	115-199
	Z	11	BJ	W1260	5746	22		32-09-11	115-199
	Z	11	BJ	W1260	5926	22		30-32-11	001-099
	Z	12	BJ	W1260	5730	22		32-09-11	ALL
	Z	12	BJ	W1260	5732	22		32-09-11	ALL
	Z	12	BJ	W1260	5733	22		32-09-11	ALL
	Z	12	BJ	W1260	5734	22		32-09-11	ALL
	Z	12	BJ	W1260	5735	22		32-09-11	ALL
	Z	13	BJ	W1260	5737	22		32-09-11	115-199
	Z	13	BJ	W1260	5738	22		32-09-11	115-199
	Z	13	BJ	W1260	5740	22		32-09-11	115-199
	Z	13	BJ	W1260	5741	22		32-09-11	115-199
	Z	13	BJ	W1260	5742	22		32-09-11	115-199
	Z	13	BJ	W1260	5901	22		32-09-11	115-199
	Z	14	BJ	W1260	5727	22		32-09-11	115-199
	Z	14	BJ	W1260	5729	22		32-09-11	115-199
	Z	14	BJ	W1260	5754	22		32-09-11	115-199
	Z	14	BJ	W1260	5756	22		32-09-11	115-199
	Z	22	BJ	W1260	0910	24		21-58-12	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 69

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0160	A	YHLZD-33 (continued)					P036-00/ /		001-099
TB0160	A	YHLZD-33 (continued)					P36/ /		115-199
TB0160	C	YHLZD-33 (continued)					P36/ /		115-199
TB0160	C	YHLZD-29 (continued)					P36/ /		115-199
TB0160	F	BACM15C1A (continued)					P36/ /		115-199
TB0160	G	BACM15C1B (continued)					P36/ /		001-099
TB0160	J	YHLZD-33 (continued)					P36/ /		115-199
TB0160	X	BACM15C3A (continued)					P36/ /		115-199
TB0160	Y	BACM15C3B (continued)					P36/ /		ALL
TB0160	Z	BACM15C3C (continued)					P36/ /		ALL
	Z	22	BJ	W1260	0911	24		21-58-12	ALL
	Z	22	BJ	W1260	0913	24		21-58-12	ALL
	Z	22	BJ	W1260	0941	24		21-58-12	ALL
	Z	22	BJ	W1260	0947	24		21-58-12	ALL
	Z	23	BJ	W1260	5720	22		32-09-11	001-002
	Z	23	BJ	W1260	5722	22		32-09-11	ALL
	Z	23	BJ	W1260	5739	22		32-09-11	ALL
	Z	23	BJ	W1260	5761	22		32-09-11	001-099
	Z	23	BJ	W1260	5763	22		32-09-11	115-199
	Z	23	BJ	W1260	5783	22		32-61-11	ALL
	Z	23	BJ	W1260	5891	22		32-09-11	ALL
	Z	23	BJ	W1260	5892	22		32-09-11	ALL
	Z	23	BJ	W1260	5936	22		32-61-11	115-199
	Z	23	BJ	W1260	5937	22		32-61-11	115-199
	Z	23	BJ	W1260	6350	22		32-09-11	ALL
	G	7	2	W1260	0619	18		30-34-21	001-099
	G	7	2	W1260	6010	18		30-34-21	001-099
	G	7	2	W1260	8531	18		30-34-21	001-099
	G	8	2	W1260	0632	18		30-34-21	001-099
	G	8	2	W1260	6008	18		30-34-21	001-099
	G	8	2	W1260	8535	18		30-34-21	001-099
	Z	9	BJ	W1260	5718	22		32-09-11	ALL
	Z	9	BJ	W1260	5721	22		32-09-11	ALL
	Z	9	BJ	W1260	5723	22		32-09-11	ALL
	Z	9	BJ	W1260	5724	22		32-09-11	115-199
	Z	9	BJ	W1260	5737	22		32-09-11	001-099
	Z	9	BJ	W1260	5747	22		32-09-11	ALL
	Z	9	BJ	W1260	5755	22		32-09-11	115-199
	Z	9	BJ	W1260	5888	22		32-09-11	001-099
	Z	9	BJ	W1260	6243	22		32-09-11	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 70

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0160	A	YHLZD-33 (continued)					P036-00/ /		001-099
TB0160	A	YHLZD-33 (continued)					P36/ /		115-199
TB0160	C	YHLZD-33 (continued)					P36/ /		115-199
TB0160	C	YHLZD-29 (continued)					P36/ /		115-199
TB0160	F	BACM15C1A (continued)					P36/ /		115-199
TB0160	G	BACM15C1B (continued)					P36/ /		001-099
TB0160	J	YHLZD-33 (continued)					P36/ /		115-199
TB0160	X	BACM15C3A (continued)					P36/ /		115-199
TB0160	Y	BACM15C3B (continued)					P36/ /		ALL
TB0160	Z	BACM15C3C (continued)					P36/ /		ALL
	Z	9	BJ	W1260	8299	20		27-62-11	ALL
	Y	A001	BJ	W1260	5503	20		21-45-11	115-199
	Y	A001	BJ	W1260	5504	20		21-45-11	115-199
	Y	A001	BJ	W1260	5505	20		21-45-11	115-199
	Y	A002	BJ	W1260	0043	24		24-22-22	001-099
	Y	A002	BJ	W1260	0044	24		24-22-22	001-099
	Y	A002	BJ	W1260	5656	24		24-22-22	001-099
	A	A003	2	W1260	5731	22		32-09-11	ALL
	A	A004	2	W1260	0932	24		21-58-12	ALL
	A	A004	2	W1260	5557	24		21-58-12	ALL
	Y	A005	BJ	W1260	5631	22		22-14-31	ALL
	Y	A005	BJ	W1260	5632	22		22-14-31	ALL
	Y	A005	BJ	W1260	5633	22		22-14-31	ALL
	Y	A006	BJ	W1260	5680	22		30-21-11	115-199
	Y	A006	BJ	W1260	5681	22		30-21-11	115-199
	Y	A006	BJ	W1260	5729	22		32-09-11	001-099
	Y	A006	BJ	W1260	5754	22		32-09-11	001-099
	Y	A006	BJ	W1260	5756	22		32-09-11	001-099
	Y	A006	BJ	W1260	6150	22		30-21-11	115-199
	Y	A007	BJ	W1260	5929	22		33-16-11	115-199
	Y	A007	BJ	W1260	5931	22		33-16-11	115-199
	Y	A007	BJ	W1260	5933	22		33-16-11	115-199
	Y	A007	BJ	W1260	5935	22		33-16-11	115-199
	Y	A008	BJ	W1260	5751	22		32-09-11	115-199
	Y	A008	BJ	W1260	5752	22		32-09-11	115-199
	Y	A008	BJ	W1260	5753	22		32-09-11	115-199
	A	A015	2	W1260	5657	24		30-31-11	001-099
	A	A015	2	W1260	6204	22		32-09-11	115-199
	A	A016	2	W1260	5658	24		30-31-11	001-099
	A	A017	2	W1260	0664	24		21-58-12	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 71

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0160	A	YHLZD-33 (continued)					P036-00/ /		001-099
TB0160	A	YHLZD-33 (continued)					P36/ /		115-199
TB0160	C	YHLZD-33 (continued)					P36/ /		115-199
TB0160	C	YHLZD-29 (continued)					P36/ /		115-199
TB0160	F	BACM15C1A (continued)					P36/ /		115-199
TB0160	G	BACM15C1B (continued)					P36/ /		001-099
TB0160	J	YHLZD-33 (continued)					P36/ /		115-199
TB0160	X	BACM15C3A (continued)					P36/ /		115-199
TB0160	Y	BACM15C3B (continued)					P36/ /		ALL
TB0160	Z	BACM15C3C (continued)					P36/ /		ALL
	A	A017	2	W1260	0835	24		21-58-12	001-099
	A	A017	2	W1260	0930	24		21-58-12	001-099
	Y	A018	BJ	W1260	5875	22		27-09-12	001-099
	Y	A018	BJ	W1260	8507	22		27-09-12	001-099
	Y	A018	BJ	W1260	8508	22		27-09-12	001-099
	Y	A020	BJ	W1260	5752	22		32-09-11	001-099
	Y	A020	BJ	W1260	5753	22		32-09-11	001-099
	Y	A020	BJ	W1260	6226	22		32-09-11	001-099
	C	A024	2	W1260	5657	24		30-31-11	115-199
	A	A024	2	W1260	5749	22		32-09-11	001-099
	A	A024	2	W1260	5889	22		32-09-11	001-099
	C	A025	2	W1260	5658	24		30-31-11	115-199
	Y	A026	BJ	W1260	0812	24		27-32-11	115-199
	Y	A026	BJ	W1260	0814	24		27-32-11	115-199
	Y	A026	BJ	W1260	5669	24		27-32-11	115-199
	Y	A027	BJ	W1260	0893	24		21-25-11	ALL
	Y	A027	BJ	W1260	0894	24		21-25-11	ALL
	Y	A027	BJ	W1260	5500	24		21-25-11	ALL
	Y	A027	BJ	W1260	6016	24		21-25-11	ALL
	A	A028	2	W1260	0977	22		32-09-11	001-099
	A	A028	2	W1260	5757	22		32-09-11	115-199
	A	A029	2	W1260	5736	22		32-09-11	ALL
	A	A029	2	W1260	5759	22		32-09-11	ALL
	Y	C001	BJ	W1260	5929	22		33-16-11	001-099
	Y	C001	BJ	W1260	5931	22		33-16-11	001-099
	Y	C001	BJ	W1260	5933	22		33-16-11	001-099
	Y	C001	BJ	W1260	5935	22		33-16-11	001-099
	Y	C002	BJ	W1260	5628	22		22-14-31	ALL
	Y	C002	BJ	W1260	5629	22		22-14-31	ALL
	Y	C002	BJ	W1260	5630	22		22-14-31	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 72

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0160	A	YHLZD-33 (continued)					P036-00/ /		001-099
TB0160	A	YHLZD-33 (continued)					P36/ /		115-199
TB0160	C	YHLZD-33 (continued)					P36/ /		115-199
TB0160	C	YHLZD-29 (continued)					P36/ /		115-199
TB0160	F	BACM15C1A (continued)					P36/ /		115-199
TB0160	G	BACM15C1B (continued)					P36/ /		001-099
TB0160	J	YHLZD-33 (continued)					P36/ /		115-199
TB0160	X	BACM15C3A (continued)					P36/ /		115-199
TB0160	Y	BACM15C3B (continued)					P36/ /		ALL
TB0160	Z	BACM15C3C (continued)					P36/ /		ALL
	A	C003	2	W1260	0882	22		32-09-11	001-002
	A	C003	2	W1260	0981	22		32-09-11	ALL
	A	C003	2	W1260	6352	22		32-09-11	115-199
	A	C004	2	W1260	0673	24		21-58-12	ALL
	Y	C005	BJ	W1260	0812	24		27-32-11	001-099
	Y	C005	BJ	W1260	0814	24		27-32-11	001-099
	Y	C005	BJ	W1260	5664	22		27-23-11	115-199
	Y	C005	BJ	W1260	5665	22		27-23-11	115-199
	Y	C005	BJ	W1260	5666	22		27-23-11	115-199
	Y	C005	BJ	W1260	5669	24		27-32-11	001-099
	Y	C006	BJ	W1260	5726	22		32-09-11	ALL
	Y	C006	BJ	W1260	5893	22		32-09-11	ALL
	Y	C006	BJ	W1260	5894	22		32-09-11	ALL
	Y	C006	BJ	W1260	5895	22		32-09-11	ALL
	Y	C007	BJ	W1260	0024	24		30-31-12	115-199
	Y	C007	BJ	W1260	5779	24		30-31-12	115-199
	Y	C007	BJ	W1260	5780	24		30-31-12	115-199
	Y	C008	BJ	W1260	5748	22		32-09-11	115-199
	Y	C008	BJ	W1260	5749	22		32-09-11	115-199
	Y	C008	BJ	W1260	5889	22		32-09-11	115-199
	Y	C008	BJ	W1260	6204	22		32-09-11	115-199
	A	C015	2	W1260	0981	22		32-09-11	115-199
	A	C015	2	W1260	5692	24		30-31-11	001-099
	A	C015	2	W1260	5750	22		32-09-11	115-199
	A	C016	2	W1260	5699	24		30-31-11	001-099
	A	C017	2	W1260	6229	24		21-58-21	001-099
	A	C017	2	W1260	6230	24		21-58-21	001-099
	Y	C018	BJ	W1260	5680	22		30-21-11	001-099
	Y	C018	BJ	W1260	5681	22		30-21-11	001-099
	Y	C018	BJ	W1260	6150	22		30-21-11	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 73

Oct 09/2008



Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0160	A	YHLZD-33 (continued)					P036-00/ /		001-099
TB0160	A	YHLZD-33 (continued)					P36/ /		115-199
TB0160	C	YHLZD-33 (continued)					P36/ /		115-199
TB0160	C	YHLZD-29 (continued)					P36/ /		115-199
TB0160	F	BACM15C1A (continued)					P36/ /		115-199
TB0160	G	BACM15C1B (continued)					P36/ /		001-099
TB0160	J	YHLZD-33 (continued)					P36/ /		115-199
TB0160	X	BACM15C3A (continued)					P36/ /		115-199
TB0160	Y	BACM15C3B (continued)					P36/ /		ALL
TB0160	Z	BACM15C3C (continued)					P36/ /		ALL
	Y	C020	BJ	W1260	0841	22		77-12-41	001-099
	Y	C020	BJ	W1260	5880	22		77-12-41	ALL
	Y	C020	BJ	W1260	5985	22		77-12-41	ALL
	Y	C020	BJ	W1260	5986	22		77-12-41	ALL
	A	C024	2	W1260	0882	22		32-09-11	003-099
	A	C024	2	W1260	0981	22		32-09-11	001-002
	C	C024	2	W1260	5692	24		30-31-11	115-199
	A	C024	2	W1260	6352	22		32-09-11	001-099
	C	C025	2	W1260	5699	24		30-31-11	115-199
	Y	C026	BJ	W1260	0890	24		21-25-11	ALL
	Y	C026	BJ	W1260	0891	24		21-25-11	ALL
	Y	C026	BJ	W1260	6013	24		21-25-11	ALL
	Y	C026	BJ	W1260	6015	24		21-25-11	ALL
	A	C028	2	W1260	5758	22		32-09-11	115-199
	A	C028	2	W1260	5760	22		32-09-11	001-099
	A	C028	2	W1260	6244	22		32-09-11	ALL
	A	C029	2	W1260	6244	22		32-09-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 74

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0161	A	YHLZD-33					P036-00/ /		001-099
TB0161	A	YHLZD-33					P36/ /		115-199
TB0161	C	YHLZD-33					P36/ /		001-002, 115-199
TB0161	C	YHLZD-33					P036-00/ /		003-099
TB0161	C	YHLZD-29					P36/ /		115-199
TB0161	G	BACM15C1B					P036-00/ /		003-099
TB0161	G	BACM15C1B					P36/ /		115-199
TB0161	J	YHLZD-33					P36/ /		115-199
TB0161	X	BACM15C3A					P36/ /		ALL
TB0161	Y	BACM15C3B					P036-00/ /		001-099
TB0161	Y	BACM15C3B					P36/ /		115-199
TB0161	Z	BACM15C3C					P036-00/ /		001-099
TB0161	Z	BACM15C3C					P36/ /		115-199
	C			W1260	1125Z			78-34-51	ALL
	C			W1260	1126Z			78-34-51	ALL
	Z	1	BJ	W1260	5771	22		32-44-11	115-199
	Z	1	BJ	W1260	5773	22		32-44-11	115-199
	Z	1	BJ	W1260	5774	22		32-44-11	115-199
	Z	1	BJ	W1260	5775	22		32-44-11	115-199
	Z	1	BJ	W1260	5923	22		32-44-11	115-199
	Z	21	BJ	W1260	5827	22		32-42-11	115-199
	Z	21	BJ	W1260	5829	22		32-42-11	115-199
	Z	21	BJ	W1260	5832	22		32-42-11	115-199
	Z	21	BJ	W1260	5833	22		32-42-11	115-199
	Z	21	BJ	W1260	5834	22		32-42-11	115-199
	Z	22	BJ	W1260	5826	22		32-42-11	115-199
	Z	22	BJ	W1260	5828	22		32-42-11	115-199
	Z	22	BJ	W1260	5830	22		32-42-11	115-199
	Z	22	BJ	W1260	5831	22		32-42-11	115-199
	Z	22	BJ	W1260	5835	22		32-42-11	115-199
	Z	22	BJ	W1260	5842	22		32-42-11	115-199
	Z	22	BJ	W1260	5862	22		32-42-11	115-199
	G	30	2	W1260	6453	18		78-34-51	003-099
	G	30	2	W1260	6454	20		78-34-51	003-099
	G	30	2	W1260	6455	20		78-34-51	003-099
	G	5	2	W1260	0632	18		30-34-21	115-199
	G	5	2	W1260	6008	18		30-34-21	115-199
	G	5	2	W1260	8535	18		30-34-21	115-199
	G	6	2	W1260	0619	18		30-34-21	115-199
	G	6	2	W1260	6010	18		30-34-21	115-199
	G	6	2	W1260	8531	18		30-34-21	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 75

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0161	A	YHLZD-33 (continued)					P036-00/ /		001-099
TB0161	A	YHLZD-33 (continued)					P36/ /		115-199
TB0161	C	YHLZD-33 (continued)					P36/ /		001-002, 115-199
TB0161	C	YHLZD-33 (continued)					P036-00/ /		003-099
TB0161	C	YHLZD-29 (continued)					P36/ /		115-199
TB0161	G	BACM15C1B (continued)					P036-00/ /		003-099
TB0161	G	BACM15C1B (continued)					P36/ /		115-199
TB0161	J	YHLZD-33 (continued)					P36/ /		115-199
TB0161	X	BACM15C3A (continued)					P36/ /		ALL
TB0161	Y	BACM15C3B (continued)					P036-00/ /		001-099
TB0161	Y	BACM15C3B (continued)					P36/ /		115-199
TB0161	Z	BACM15C3C (continued)					P036-00/ /		001-099
TB0161	Z	BACM15C3C (continued)					P36/ /		115-199
	Z	8	BJ	W1260	5827	22		32-42-11	001-099
	Z	8	BJ	W1260	5829	22		32-42-11	001-099
	Z	8	BJ	W1260	5832	22		32-42-11	001-099
	Z	8	BJ	W1260	5833	22		32-42-11	001-099
	Z	8	BJ	W1260	5834	22		32-42-11	001-099
	Z	9	BJ	W1260	5826	22		32-42-11	001-099
	Z	9	BJ	W1260	5828	22		32-42-11	001-099
	Z	9	BJ	W1260	5830	22		32-42-11	001-099
	Z	9	BJ	W1260	5831	22		32-42-11	001-099
	Z	9	BJ	W1260	5835	22		32-42-11	001-099
	Z	9	BJ	W1260	5842	22		32-42-11	001-099
	Z	9	BJ	W1260	5862	22		32-42-11	001-099
	A	A001	2	W1260	5540	24		21-58-11	001-099
	A	A001	2	W1260	6228	24		21-58-11	001-099
	A	A002	2	W1260	6228	24		21-58-11	001-099
	A	A003	2	W1260	0791	24		21-58-11	ALL
	A	A003	2	W1260	5534	20		21-58-11	ALL
	A	A004	2	W1260	5687	22		30-21-11	ALL
	A	A007	2	W1260	5516	24		21-58-11	115-199
	A	A007	2	W1260	5533	24		21-58-11	115-199
	A	A010	2	W1260	0204	24		21-58-11	ALL
	A	A010	2	W1260	5516	24		21-58-11	115-199
	A	A010	2	W1260	5533	24		21-58-11	001-099
	A	A011	2	W1260	0204	24		21-58-11	ALL
	G	A012	BJ	W1260	2507Z			34-61-16	115-199
	G	A012	BJ	W1260	2514Z			34-22-38	115-199
	G	A014	BJ	W1260	2504Z			34-61-16	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 76

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0161	A	YHLZD-33 (continued)					P036-00/ /		001-099
TB0161	A	YHLZD-33 (continued)					P36/ /		115-199
TB0161	C	YHLZD-33 (continued)					P36/ /		001-002, 115-199
TB0161	C	YHLZD-33 (continued)					P036-00/ /		003-099
TB0161	C	YHLZD-29 (continued)					P36/ /		115-199
TB0161	G	BACM15C1B (continued)					P036-00/ /		003-099
TB0161	G	BACM15C1B (continued)					P36/ /		115-199
TB0161	J	YHLZD-33 (continued)					P36/ /		115-199
TB0161	X	BACM15C3A (continued)					P36/ /		ALL
TB0161	Y	BACM15C3B (continued)					P036-00/ /		001-099
TB0161	Y	BACM15C3B (continued)					P36/ /		115-199
TB0161	Z	BACM15C3C (continued)					P036-00/ /		001-099
TB0161	Z	BACM15C3C (continued)					P36/ /		115-199
	G	A014	BJ	W1260	2505Z			34-61-16	115-199
	G	A014	BJ	W1260	2515Z			34-22-38	115-199
	Y	A015	BJ	W1260	5529	20		21-58-11	ALL
	Y	A015	BJ	W1260	5530	20		21-58-11	ALL
	Y	A015	BJ	W1260	5531	20		21-58-11	ALL
	Y	A017	BJ	W1260	2504B	22		34-61-16	115-199
	Y	A017	BJ	W1260	2505B	22		34-61-16	115-199
	Y	A017	BJ	W1260	2515B	22		34-22-38	115-199
	Y	A018	BJ	W1260	0866	22		21-58-15	003-099
	Y	A018	BJ	W1260	2507B	22		34-61-16	115-199
	Y	A018	BJ	W1260	2514B	22		34-22-38	115-199
	Y	A018	BJ	W1260	6381	22		24-25-11	003-099
	Y	A018	BJ	W1260	6382	22		24-25-11	003-099
	Y	A019	BJ	W1260	5822	22		32-42-11	001-099
	Y	A019	BJ	W1260	5823	22		32-42-11	001-099
	Y	A019	BJ	W1260	5883	22		32-42-11	001-099
	Y	A019	BJ	W1260	5884	22		32-42-11	001-099
	Y	A020	BJ	W1260	5847	22		32-42-11	ALL
	Y	A020	BJ	W1260	5848	22		32-42-11	ALL
	Y	A020	BJ	W1260	5849	22		32-42-11	ALL
	Y	A024	BJ	W1260	0867	22		21-58-15	ALL
	Y	A024	BJ	W1260	0869	22		21-58-15	ALL
	Y	A024	BJ	W1260	0870	22		21-58-15	ALL
	Y	A024	BJ	W1260	0901	22		21-58-15	ALL
	A	A025	2	W1260	0922	24		21-58-12	ALL
	A	A025	2	W1260	6035	24		21-58-12	ALL
	A	A026	2	W1260	0932	24		21-58-12	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 77

Oct 09/2008



Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0161	A	YHLZD-33 (continued)					P036-00/ /		001-099
TB0161	A	YHLZD-33 (continued)					P36/ /		115-199
TB0161	C	YHLZD-33 (continued)					P36/ /		001-002, 115-199
TB0161	C	YHLZD-33 (continued)					P036-00/ /		003-099
TB0161	C	YHLZD-29 (continued)					P36/ /		115-199
TB0161	G	BACM15C1B (continued)					P036-00/ /		003-099
TB0161	G	BACM15C1B (continued)					P36/ /		115-199
TB0161	J	YHLZD-33 (continued)					P36/ /		115-199
TB0161	X	BACM15C3A (continued)					P36/ /		ALL
TB0161	Y	BACM15C3B (continued)					P036-00/ /		001-099
TB0161	Y	BACM15C3B (continued)					P36/ /		115-199
TB0161	Z	BACM15C3C (continued)					P036-00/ /		001-099
TB0161	Z	BACM15C3C (continued)					P36/ /		115-199
	A	A026	2	W1260	0940	24		21-58-12	ALL
	A	A028	2	W1260	0664	24		21-58-12	115-199
	A	A028	2	W1260	0835	24		21-58-12	115-199
	A	A028	2	W1260	0938	24		21-58-12	115-199
	C	A029	2	W1260	6456	20		78-34-51	ALL
	A	C001	2	W1260	0962	24		21-58-21	001-099
	A	C001	2	W1260	6229	24		21-58-21	001-099
	A	C002	2	W1260	0210	24		21-58-11	001-099
	A	C002	2	W1260	6227	24		21-58-11	001-099
	A	C003	2	W1260	0710	24		21-58-11	ALL
	A	C004	2	W1260	6149	22		30-21-11	ALL
	A	C007	2	W1260	5540	24		21-58-11	115-199
	A	C007	2	W1260	5545	24		21-58-11	115-199
	A	C010	2	W1260	0210	24		21-58-11	115-199
	A	C010	2	W1260	6506	24		21-25-11	ALL
	A	C011	2	W1260	0293	24		21-58-11	ALL
	A	C011	2	W1260	5518	24		21-58-11	ALL
	Y	C017	BJ	W1260	2504R	22		34-61-16	115-199
	Y	C017	BJ	W1260	2505R	22		34-61-16	115-199
	Y	C017	BJ	W1260	2515R	22		34-22-38	115-199
	Y	C018	BJ	W1260	2507R	22		34-61-16	115-199
	Y	C018	BJ	W1260	2514R	22		34-22-38	115-199
	Y	C019	BJ	W1260	5821	22		32-42-11	ALL
	Y	C019	BJ	W1260	5836	22		32-42-11	ALL
	Y	C019	BJ	W1260	5837	22		32-42-11	ALL
	Y	C019	BJ	W1260	5838	22		32-42-11	ALL
	Y	C020	BJ	W1260	5851	22		32-42-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 78

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0161	A	YHLZD-33 (continued)					P036-00/ /		001-099
TB0161	A	YHLZD-33 (continued)					P36/ /		115-199
TB0161	C	YHLZD-33 (continued)					P36/ /		001-002, 115-199
TB0161	C	YHLZD-33 (continued)					P036-00/ /		003-099
TB0161	C	YHLZD-29 (continued)					P36/ /		115-199
TB0161	G	BACM15C1B (continued)					P036-00/ /		003-099
TB0161	G	BACM15C1B (continued)					P36/ /		115-199
TB0161	J	YHLZD-33 (continued)					P36/ /		115-199
TB0161	X	BACM15C3A (continued)					P36/ /		ALL
TB0161	Y	BACM15C3B (continued)					P036-00/ /		001-099
TB0161	Y	BACM15C3B (continued)					P36/ /		115-199
TB0161	Z	BACM15C3C (continued)					P036-00/ /		001-099
TB0161	Z	BACM15C3C (continued)					P36/ /		115-199
	Y	C020	BJ	W1260	5852	22		32-42-11	ALL
	Y	C020	BJ	W1260	5853	22		32-42-11	ALL
	Y	C020	BJ	W1260	5858	22		32-42-11	ALL
	Y	C023	BJ	W1260	5822	22		32-42-11	115-199
	Y	C023	BJ	W1260	5823	22		32-42-11	115-199
	Y	C023	BJ	W1260	5883	22		32-42-11	115-199
	Y	C023	BJ	W1260	5884	22		32-42-11	115-199
	Y	C024	BJ	W1260	5875	22		27-09-12	115-199
	Y	C024	BJ	W1260	8507	22		27-09-12	115-199
	Y	C024	BJ	W1260	8508	22		27-09-12	115-199
	A	C025	2	W1260	0940	24		21-58-12	ALL
	A	C026	2	W1260	0946	24		21-58-12	ALL
	A	C028	2	W1260	0965	24		21-58-24	115-199
	A	C028	2	W1260	0967	24		21-58-24	115-199
	C	C029	2	W1260	1125	18		78-34-51	ALL
	C	C029	2	W1260	1126	18		78-34-51	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 79

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0163	A	YHLZD-33					P036-00/ /		001-099
TB0163	A	YHLZD-33					P36/ /		115-199
TB0163	B	YHLZD-33					P036-00/ /		001-099
TB0163	B	YHLZD-33					P36/ /		115-199
TB0163	B	YHLZD-30					P36/ /		115-199
TB0163	C	YHLZD-33					P36/ /		115-199
TB0163	C	YHLZD-29					P36/ /		115-199
TB0163	G	BACM15C1B					P36/ /		ALL
TB0163	X	BACM15C3A					P36/ /		115-199
TB0163	Y	BACM15C3B					P036-00/ /		001-099
TB0163	Y	BACM15C3B					P36/ /		115-199
TB0163	Z	BACM15C3C					P036-00/ /		001-099
TB0163	Z	BACM15C3C					P36/ /		115-199
	Z	6	BJ	W1260	0413	22		78-34-11	001-002
	Z	6	BJ	W1260	0415	22		78-34-11	001-002
	Z	6	BJ	W1260	6451	22		78-34-11	001-002
	G	7	2	W1260	0953	16		21-58-13	ALL
	G	7	2	W1260	0955	16		21-58-13	ALL
	G	7	2	W1260	0958	16		21-58-13	ALL
	Z	8	BJ	W1260	6049	24		21-51-13	001-099
	Z	8	BJ	W1260	6060	24		21-51-13	001-099
	Z	8	BJ	W1260	6064	24		21-51-13	001-099
	Z	8	BJ	W1260	6076	24		21-51-13	001-099
	Z	8	BJ	W1260	6078	24		21-51-13	001-099
	Z	8	BJ	W1260	6079	24		21-51-13	001-099
	Z	8	BJ	W1260	6089	24		21-51-13	001-099
	Z	8	BJ	W1260	6092	24		21-51-14	001-099
	Z	9	BJ	W1260	6059	24		21-51-13	001-099
	Z	9	BJ	W1260	6066	24		21-51-13	001-099
	Z	9	BJ	W1260	6067	24		21-51-13	001-099
	Z	9	BJ	W1260	6069	24		21-51-13	001-099
	Z	9	BJ	W1260	6082	24		21-51-13	001-099
	Z	9	BJ	W1260	6084	24		21-51-13	001-099
	Z	9	BJ	W1260	6086	24		21-51-13	001-099
	Z	9	BJ	W1260	6090	24		21-51-14	001-099
	X	A001	BJ	W1260	0126	20		36-11-11	115-199
	X	A001	BJ	W1260	0127	20		36-11-11	115-199
	B	A001	2	W1260	8027	24		26-16-21	001-099
	B	A002	2	W1260	8012	24		26-16-21	001-099
	A	A003	2	W1260	0930	24		21-58-12	115-199
	A	A003	2	W1260	0938	24		21-58-12	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 80

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0163	A	YHLZD-33 (continued)					P036-00/ /		001-099
TB0163	A	YHLZD-33 (continued)					P36/ /		115-199
TB0163	B	YHLZD-33 (continued)					P036-00/ /		001-099
TB0163	B	YHLZD-33 (continued)					P36/ /		115-199
TB0163	B	YHLZD-30 (continued)					P36/ /		115-199
TB0163	C	YHLZD-33 (continued)					P36/ /		115-199
TB0163	C	YHLZD-29 (continued)					P36/ /		115-199
TB0163	G	BACM15C1B (continued)					P36/ /		ALL
TB0163	X	BACM15C3A (continued)					P36/ /		115-199
TB0163	Y	BACM15C3B (continued)					P036-00/ /		001-099
TB0163	Y	BACM15C3B (continued)					P36/ /		115-199
TB0163	Z	BACM15C3C (continued)					P036-00/ /		001-099
TB0163	Z	BACM15C3C (continued)					P36/ /		115-199
	A	A004	2	W1260	0928	24		21-58-12	ALL
	A	A004	2	W1260	0930	24		21-58-12	ALL
	A	A011	2	W1260	0968	22		34-22-16	002
	A	A011	2	W1260	6256	22		34-22-16	002
	Y	A013	BJ	W1260	0968	20		34-22-16	115-199
	Y	A013	BJ	W1260	6255	22		34-22-38	115-199
	Y	A013	BJ	W1260	6256	22		34-22-16	115-199
	B	A016	2	W1260	8024	24		26-16-21	001-099
	B	A017	2	W1260	8026	24		26-16-21	001-099
	B	A017	2	W1260	8027	24		26-16-21	001-099
	Y	A020	BJ	W1260	8004	24		26-16-21	115-199
	Y	A020	BJ	W1260	8005	24		26-16-21	115-199
	Y	A020	BJ	W1260	8007	24		26-16-21	115-199
	Y	A024	BJ	W1260	8006	24		26-16-21	115-199
	Y	A024	BJ	W1260	8008	24		26-16-21	115-199
	Y	A024	BJ	W1260	8009	24		26-16-21	115-199
	B	A025	2	W1260	8025	24		26-16-21	115-199
	B	A026	2	W1260	8026	24		26-16-21	115-199
	B	A026	2	W1260	8027	24		26-16-21	115-199
	B	A027	2	W1260	8027	24		26-16-21	115-199
	B	A028	2	W1260	8012	24		26-16-21	115-199
	B	C001	2	W1260	8020	24		26-16-21	001-099
	B	C002	2	W1260	8016	24		26-16-21	001-099
	B	C002	2	W1260	8019	24		26-16-21	001-099
	A	C003	2	W1260	0964	24		21-58-24	115-199
	A	C003	2	W1260	5625	24		21-58-24	115-199
	A	C004	2	W1260	0952	24		21-58-13	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 81

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
							CO		
TB0163	A	YHLZD-33 (continued)					P036-00/ /		001-099
TB0163	A	YHLZD-33 (continued)					P36/ /		115-199
TB0163	B	YHLZD-33 (continued)					P036-00/ /		001-099
TB0163	B	YHLZD-33 (continued)					P36/ /		115-199
TB0163	B	YHLZD-30 (continued)					P36/ /		115-199
TB0163	C	YHLZD-33 (continued)					P36/ /		115-199
TB0163	C	YHLZD-29 (continued)					P36/ /		115-199
TB0163	G	BACM15C1B (continued)					P36/ /		ALL
TB0163	X	BACM15C3A (continued)					P36/ /		115-199
TB0163	Y	BACM15C3B (continued)					P036-00/ /		001-099
TB0163	Y	BACM15C3B (continued)					P36/ /		115-199
TB0163	Z	BACM15C3C (continued)					P036-00/ /		001-099
TB0163	Z	BACM15C3C (continued)					P36/ /		115-199
	A	C004	2	W1260	5585	24		21-58-13	ALL
	A	C011	2	W1260	1138	22		34-22-18	002
	B	C016	2	W1260	8020	24		26-16-21	001-099
	B	C016	2	W1260	8021	24		26-16-21	001-099
	B	C017	2	W1260	8019	24		26-16-21	001-099
	Y	C019	BJ	W1260	8011	24		26-16-21	115-199
	Y	C019	BJ	W1260	8012	24		26-16-21	115-199
	Y	C019	BJ	W1260	8013	24		26-16-21	115-199
	Y	C019	BJ	W1260	8017	24		26-16-21	115-199
	Y	C020	BJ	W1260	8018	24		26-16-21	115-199
	Y	C020	BJ	W1260	8023	24		26-16-21	115-199
	Y	C020	BJ	W1260	8024	24		26-16-21	115-199
	Y	C020	BJ	W1260	8025	24		26-16-21	115-199
	B	C025	2	W1260	8020	24		26-16-21	115-199
	B	C025	2	W1260	8021	24		26-16-21	115-199
	B	C026	2	W1260	8019	24		26-16-21	115-199
	B	C027	2	W1260	8020	24		26-16-21	115-199
	B	C028	2	W1260	8016	24		26-16-21	115-199
	B	C028	2	W1260	8019	24		26-16-21	115-199
TB0164		BACT44B0400U					P036-00/ /		ALL
TB0164	A	YHLZD-33					P36/ /		ALL
	A	A001	2	W1260	6329	22		76-11-11	ALL
	A	A001	2	W1260	6335	22		76-11-11	ALL
	A	A002	2	W1260	6330	22		76-11-11	ALL
	A	A002	2	W1260	6334	22		76-11-11	ALL
	A	A003	2	W1260	6334	22		76-11-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 82

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0164		BACT44B0400U (continued)					P036-00/ /		ALL
TB0164	A	YHLZD-33 (continued)					P36/ /		ALL
	A	A003	2	W1260	6335	22		76-11-11	ALL
	A	C001	2	W1260	6332	22		76-11-11	ALL
	A	C002	2	W1260	6331	22		76-11-11	ALL
	A	C003	2	W1260	6333	22		76-11-11	ALL
TB0165	A	YHLZD-33					P036-00/ /		001-099
TB0165	A	YHLZD-33					P36/ /		115-199
TB0165	B	YHLZD-40					P036-00/ /		ALL
TB0165	C	YHLZD-33					P36/ /		115-199
TB0165	C	YHLZD-29					P36/ /		115-199
TB0165	G	BACM15C1B					P36/ /		ALL
TB0165	Y	BACM15C3B					P036-00/ /		001-099
TB0165	Y	BACM15C3B					P36/ /		115-199
TB0165	Z	BACM15C3C					P036-00/ /		001-099
TB0165	Z	BACM15C3C					P36/ /		115-199
	G	15	2	W1260	0379	16		75-31-11	ALL
	G	15	2	W1260	0380	16		75-31-11	ALL
	G	15	2	W1260	0381	16		75-31-11	ALL
	G	16	2	W1260	0125	22		29-11-22	115-199
	G	16	2	W1260	0211	16		29-11-22	115-199
	G	16	2	W1260	0495	16		29-11-22	115-199
	Z	6	BJ	W1260	0255	20		27-62-11	115-199
	Z	6	BJ	W1260	0256	20		27-62-11	115-199
	Z	6	BJ	W1260	0257	20		27-62-11	115-199
	Z	6	BJ	W1260	0258	20		27-62-11	115-199
	Z	6	BJ	W1260	0259	20		27-62-11	115-199
	Z	6	BJ	W1260	0260	20		27-62-11	115-199
	Z	6	BJ	W1260	0261	20		27-62-11	115-199
	A	A001	2	W1260	0887	24		21-25-11	ALL
	A	A001	2	W1260	5866	24		21-25-11	ALL
	Y	A002	BJ	W1260	0983	24		21-51-11	001-099
	Y	A002	BJ	W1260	0986	24		21-51-11	001-099
	Y	A002	BJ	W1260	0988	22		49-61-11	001-099
	Y	A003	BJ	W1260	0357	20		74-31-11	115-199
	Y	A003	BJ	W1260	0821	20		74-31-11	115-199
	Y	A003	BJ	W1260	0825	20		74-31-11	115-199
	A	A005	2	W1260	0513	24		26-15-11	001-099
	Y	A008	BJ	W1260	0228	24		27-58-11	001-099
	Y	A008	BJ	W1260	0229	24		27-58-11	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 83

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
							CO		
TB0165	A	YHLZD-33 (continued)					P036-00/ /		001-099
TB0165	A	YHLZD-33 (continued)					P36/ /		115-199
TB0165	B	YHLZD-40 (continued)					P036-00/ /		ALL
I TB0165	C	YHLZD-33 (continued)					P36/ /		115-199
I TB0165	C	YHLZD-29 (continued)					P36/ /		115-199
TB0165	G	BACM15C1B (continued)					P36/ /		ALL
TB0165	Y	BACM15C3B (continued)					P036-00/ /		001-099
TB0165	Y	BACM15C3B (continued)					P36/ /		115-199
TB0165	Z	BACM15C3C (continued)					P036-00/ /		001-099
TB0165	Z	BACM15C3C (continued)					P36/ /		115-199
	Y	A008	BJ	W1260	0480	22		74-31-11	115-199
	Y	A008	BJ	W1260	0647	20		74-31-11	115-199
	Y	A008	BJ	W1260	0651	20		74-31-11	115-199
	Y	A008	BJ	W1260	C-02			27-58-11	001-099
	Y	A009	BJ	W1260	0220	24		27-58-11	001-099
	Y	A009	BJ	W1260	0234	24		27-58-11	001-099
	Y	A009	BJ	W1260	C-03			27-58-11	001-099
	Y	A011	BJ	W1260	0088	22		30-32-11	115-199
	Y	A011	BJ	W1260	0349	22		30-32-11	115-199
	Y	A011	BJ	W1260	0350	22		30-32-11	115-199
	Y	A011	BJ	W1260	0351	22		30-32-11	115-199
	A	A011	2	W1260	6292	22		23-31-19	001-099
	A	A011	2	W1260	6295	22		23-31-19	001-099
	Y	A012	BJ	W1260	0356	20		74-31-11	115-199
	Y	A012	BJ	W1260	0375	20		74-31-11	115-199
	Y	A012	BJ	W1260	0376	20		74-31-11	115-199
	Y	A013	BJ	W1260	0362	20		74-31-11	115-199
	Y	A013	BJ	W1260	0363	20		74-31-11	115-199
	Y	A013	BJ	W1260	0469	20		80-11-11	115-199
	Y	A014	BJ	W1260	0369	20		74-31-11	115-199
	Y	A014	BJ	W1260	0370	20		74-31-11	115-199
	Y	A014	BJ	W1260	0371	20		74-31-11	115-199
	Y	A017	BJ	W1260	0384	20		76-11-11	115-199
	Y	A017	BJ	W1260	0446	20		80-11-11	115-199
	Y	A017	BJ	W1260	0447	20		80-11-11	115-199
	Y	A018	BJ	W1260	0413	22		78-34-11	003-099, 115-199
	Y	A018	BJ	W1260	0415	22		78-34-11	003-099, 115-199
	Y	A018	BJ	W1260	6451	22		78-34-11	003-099, 115-199
	Y	A019	BJ	W1260	0426	24		78-36-11	115-199
	Y	A019	BJ	W1260	0427	24		78-36-11	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 84

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0165	A	YHLZD-33 (continued)					P036-00/ /		001-099
TB0165	A	YHLZD-33 (continued)					P36/ /		115-199
TB0165	B	YHLZD-40 (continued)					P036-00/ /		ALL
I TB0165	C	YHLZD-33 (continued)					P36/ /		115-199
I TB0165	C	YHLZD-29 (continued)					P36/ /		115-199
TB0165	G	BACM15C1B (continued)					P36/ /		ALL
TB0165	Y	BACM15C3B (continued)					P036-00/ /		001-099
TB0165	Y	BACM15C3B (continued)					P36/ /		115-199
TB0165	Z	BACM15C3C (continued)					P036-00/ /		001-099
TB0165	Z	BACM15C3C (continued)					P36/ /		115-199
	Y	A019	BJ	W1260	6406	24		78-36-11	115-199
	Y	A020	BJ	W1260	0516	24		26-15-11	115-199
	Y	A020	BJ	W1260	0517	24		26-15-11	115-199
	Y	A020	BJ	W1260	0598	24		26-15-12	115-199
	C	A021	2	W1260	0505	24		26-15-11	115-199
	C	A022	2	W1260	0511	24		26-15-11	115-199
	A	A023	2	W1260	6351	22		32-09-11	ALL
	B	A024	2	W1260	6615	24		76-11-11	001-099
	B	A024	2	W1260	6616	24		76-11-11	115-199
	C	A025	2	W1260	0513	24		26-15-11	115-199
	A	C001	2	W1260	0889	24		21-25-11	ALL
	A	C001	2	W1260	0892	24		21-25-11	ALL
	Y	C002	BJ	W1260	0476	20		36-11-11	115-199
	Y	C002	BJ	W1260	0838	20		36-11-11	115-199
	Y	C002	BJ	W1260	0839	20		36-11-11	115-199
	Y	C003	BJ	W1260	0365	20		74-31-11	115-199
	Y	C003	BJ	W1260	0823	20		74-31-11	115-199
	Y	C003	BJ	W1260	0826	20		74-31-11	115-199
	A	C005	2	W1260	0512	24		26-15-11	001-099
	A	C005	2	W1260	0514	24		26-15-11	001-099
	Y	C008	BJ	W1260	0226	24		27-58-11	001-099
	Y	C008	BJ	W1260	0227	24		27-58-11	001-099
	Y	C008	BJ	W1260	0479	20		74-31-11	115-199
	Y	C008	BJ	W1260	0649	20		74-31-11	115-199
	Y	C008	BJ	W1260	0652	20		74-31-11	115-199
	Y	C008	BJ	W1260	C-01			27-58-11	001-099
	Y	C011	BJ	W1260	0352	22		30-32-11	115-199
	Y	C011	BJ	W1260	0353	22		30-32-11	115-199
	Y	C011	BJ	W1260	0354	22		30-32-11	115-199
	Y	C011	BJ	W1260	0355	22		30-32-11	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 85

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0165	A	YHLZD-33 (continued)					P036-00/ /		001-099
TB0165	A	YHLZD-33 (continued)					P36/ /		115-199
TB0165	B	YHLZD-40 (continued)					P036-00/ /		ALL
I TB0165	C	YHLZD-33 (continued)					P36/ /		115-199
I TB0165	C	YHLZD-29 (continued)					P36/ /		115-199
TB0165	G	BACM15C1B (continued)					P36/ /		ALL
TB0165	Y	BACM15C3B (continued)					P036-00/ /		001-099
TB0165	Y	BACM15C3B (continued)					P36/ /		115-199
TB0165	Z	BACM15C3C (continued)					P036-00/ /		001-099
TB0165	Z	BACM15C3C (continued)					P36/ /		115-199
	A	C011	2	W1260	6290	22		23-31-19	001-099
	A	C011	2	W1260	6291	22		23-31-19	001-099
	Y	C012	BJ	W1260	0358	20		74-31-11	115-199
	Y	C012	BJ	W1260	0359	20		74-31-11	115-199
	Y	C012	BJ	W1260	0360	20		74-31-11	115-199
	Y	C012	BJ	W1260	0648	20		74-31-11	115-199
	Y	C013	BJ	W1260	0366	20		74-31-11	115-199
	Y	C013	BJ	W1260	0367	20		74-31-11	115-199
	Y	C013	BJ	W1260	0368	20		74-31-11	115-199
	Y	C013	BJ	W1260	0650	20		74-31-11	115-199
	Y	C014	BJ	W1260	0387	24		76-11-11	115-199
	Y	C014	BJ	W1260	0388	24		76-11-11	115-199
	Y	C014	BJ	W1260	0389	24		76-11-11	115-199
	Y	C014	BJ	W1260	6616	24		76-11-11	115-199
	Y	C019	BJ	W1260	0506	24		26-15-11	115-199
	Y	C019	BJ	W1260	0507	24		26-15-11	115-199
	Y	C019	BJ	W1260	0508	24		26-15-11	115-199
	Y	C019	BJ	W1260	0509	24		26-15-11	115-199
	Y	C020	BJ	W1260	0600	24		24-51-71	115-199
	Y	C020	BJ	W1260	0601	24		24-51-71	115-199
	Y	C020	BJ	W1260	0602	24		24-51-71	115-199
	C	C021	2	W1260	0506	24		26-15-11	115-199
	C	C021	2	W1260	0522	24		26-15-11	115-199
	C	C022	2	W1260	0508	24		26-15-11	115-199
	C	C022	2	W1260	0510	24		26-15-11	115-199
	A	C023	2	W1260	6352	22		32-09-11	ALL
	B	C024	2	W1260	6614	24		76-11-11	ALL
	C	C025	2	W1260	0512	24		26-15-11	115-199
	C	C025	2	W1260	0514	24		26-15-11	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 86

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0166		BACT44B1300U					P036-00/ /		ALL
TB0166	A	YHLZD-33					P036-00/ /		001-099
TB0166	A	YHLZD-33					P36/ /		115-199
TB0166	B	YHLZR-33					P036-00/ /		010-099
TB0166	C	YHLZD-30					P036-00/ /		010-099
TB0166	G	BACM15C1B					P36/ /		ALL
TB0166	Y	BACM15C3B					P036-00/ /		001-099
TB0166	Y	BACM15C3B					P36/ /		115-199
TB0166	Z	BACM15C3C					P36/ /		ALL
	G	10	2	W1260	5908	16		29-11-31	001-099
	G	10	2	W1260	5909	22		29-11-31	001-099
	G	10	2	W1260	5910	16		29-11-31	001-099
	Z	12	BJ	W1260	0127	20		36-11-11	001-099
	Z	12	BJ	W1260	0324	20		36-11-11	001-099
	Z	12	BJ	W1260	0325	20		36-11-11	001-099
	Z	12	BJ	W1260	0327	20		36-11-11	001-099
	Z	12	BJ	W1260	0329	20		36-11-11	001-099
	Z	12	BJ	W1260	0475	20		36-11-11	001-099
	Z	12	BJ	W1260	0885	22		36-11-11	001-099
	Z	16	BJ	W1260	0126	20		36-11-11	115-199
	Z	16	BJ	W1260	0324	20		36-11-11	115-199
	Z	16	BJ	W1260	0325	20		36-11-11	115-199
	Z	16	BJ	W1260	0327	20		36-11-11	115-199
	Z	16	BJ	W1260	0329	20		36-11-11	115-199
	Z	16	BJ	W1260	0475	20		36-11-11	115-199
	Z	16	BJ	W1260	0885	22		36-11-11	115-199
	Z	17	BJ	W1260	0302	20		36-11-11	115-199
	Z	17	BJ	W1260	0304	20		36-11-11	115-199
	Z	17	BJ	W1260	0330	20		36-11-11	115-199
	Z	17	BJ	W1260	0331	20		36-11-11	115-199
	Z	17	BJ	W1260	0336	20		36-11-11	115-199
	G	19	2	W1260	5908	16		29-11-31	115-199
	G	19	2	W1260	5909	22		29-11-31	115-199
	G	19	2	W1260	5910	16		29-11-31	115-199
	Z	22	BJ	W1260	0255	20		27-62-11	001-099
	Z	22	BJ	W1260	0256	20		27-62-11	001-099
	Z	22	BJ	W1260	0257	20		27-62-11	001-099
	Z	22	BJ	W1260	0258	20		27-62-11	001-099
	Z	22	BJ	W1260	0259	20		27-62-11	001-099
	Z	22	BJ	W1260	0260	20		27-62-11	001-099
	Z	22	BJ	W1260	0261	20		27-62-11	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 87

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0166		BACT44B1300U (continued)					P036-00/ /		ALL
TB0166	A	YHLZD-33 (continued)					P036-00/ /		001-099
TB0166	A	YHLZD-33 (continued)					P36/ /		115-199
TB0166	B	YHLZR-33 (continued)					P036-00/ /		010-099
TB0166	C	YHLZD-30 (continued)					P036-00/ /		010-099
TB0166	G	BACM15C1B (continued)					P36/ /		ALL
TB0166	Y	BACM15C3B (continued)					P036-00/ /		001-099
TB0166	Y	BACM15C3B (continued)					P36/ /		115-199
TB0166	Z	BACM15C3C (continued)					P36/ /		ALL
	G	25	2	W1260	0125	22		29-11-22	001-099
	G	25	2	W1260	0211	16		29-11-22	001-099
	G	25	2	W1260	0495	16		29-11-22	001-099
	Z	7	BJ	W1260	0440	20		80-11-11	ALL
	Z	7	BJ	W1260	0441	20		74-31-11	001-099
	Z	7	BJ	W1260	0441	20		80-11-11	115-199
	Z	7	BJ	W1260	0442	20		80-11-11	ALL
	Z	7	BJ	W1260	0443	20		80-11-11	ALL
	Z	7	BJ	W1260	0444	20		80-11-11	115-199
	Z	7	BJ	W1260	0445	20		80-11-11	115-199
	Z	7	BJ	W1260	0468	20		80-11-11	001-099
	Z	7	BJ	W1260	0820	20		74-31-11	ALL
	Z	8	BJ	W1260	0579	20		26-22-21	115-199
	Z	8	BJ	W1260	0580	20		26-22-21	115-199
	Z	8	BJ	W1260	0581	20		26-22-21	115-199
	Z	8	BJ	W1260	0582	20		26-22-21	115-199
	Z	8	BJ	W1260	0583	20		26-22-21	115-199
	Z	8	BJ	W1260	0584	20		26-22-21	115-199
	Y	A001	BJ	W1260	0220	22		27-51-51	115-199
	Y	A001	BJ	W1260	0221	22		27-51-51	115-199
	Y	A001	BJ	W1260	0222	22		27-51-51	115-199
	Y	A002	BJ	W1260	0230	22		27-58-11	010-099, 115-199
	Y	A002	BJ	W1260	0231	24		27-58-11	010-099
	Y	A002	BJ	W1260	0231	22		27-58-11	115-199
	Y	A002	BJ	W1260	2004R	22		31-31-51	010-099
	Y	A002	BJ	W1260	2004R	24		31-31-32	115-199
	Y	A003	BJ	W1260	0235	22		27-58-11	115-199
	Y	A003	BJ	W1260	0236	22		27-58-11	115-199
	Y	A003	BJ	W1260	2005R	24		31-31-32	115-199
	Y	A004	BJ	W1260	0228	22		27-58-11	115-199
	Y	A004	BJ	W1260	0229	22		27-58-11	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 88

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0166		BACT44B1300U (continued)					P036-00/ /		ALL
TB0166	A	YHLZD-33 (continued)					P036-00/ /		001-099
TB0166	A	YHLZD-33 (continued)					P36/ /		115-199
TB0166	B	YHLZR-33 (continued)					P036-00/ /		010-099
TB0166	C	YHLZD-30 (continued)					P036-00/ /		010-099
TB0166	G	BACM15C1B (continued)					P36/ /		ALL
TB0166	Y	BACM15C3B (continued)					P036-00/ /		001-099
TB0166	Y	BACM15C3B (continued)					P36/ /		115-199
TB0166	Z	BACM15C3C (continued)					P36/ /		ALL
	Y	A004	BJ	W1260	0480	22		74-31-11	001-099
	Y	A004	BJ	W1260	0647	20		74-31-11	001-099
	Y	A004	BJ	W1260	0651	20		74-31-11	001-099
	Y	A004	BJ	W1260	C-02			27-58-11	115-199
	Y	A005	BJ	W1260	0269	20		27-62-11	115-199
	Y	A005	BJ	W1260	0270	20		27-62-11	115-199
	Y	A005	BJ	W1260	0271	20		27-62-11	115-199
	Y	A005	BJ	W1260	0272	20		27-62-11	115-199
	Y	A005	BJ	W1260	0459	20		80-11-11	001-099
	Y	A005	BJ	W1260	0461	20		80-11-11	001-099
	Y	A005	BJ	W1260	0465	20		80-11-11	001-099
	Y	A006	BJ	W1260	0448	20		80-11-11	ALL
	Y	A006	BJ	W1260	0449	20		80-11-11	ALL
	Y	A006	BJ	W1260	0450	20		80-11-11	ALL
	Y	A006	BJ	W1260	0451	20		80-11-11	ALL
	A	A009	2	W1260	0307	20		36-11-11	001-099
	A	A009	2	W1260	0309	20		36-11-11	001-099
	Y	A009	BJ	W1260	0312	20		36-11-11	115-199
	Y	A009	BJ	W1260	0328	20		36-11-11	115-199
	Y	A009	BJ	W1260	0333	20		36-11-11	115-199
	Y	A009	BJ	W1260	0338	20		36-11-11	115-199
	Y	A010	BJ	W1260	0301	20		36-11-11	115-199
	Y	A010	BJ	W1260	0306	20		36-11-11	115-199
	Y	A010	BJ	W1260	0308	20		36-11-11	115-199
	Y	A010	BJ	W1260	0339	20		36-11-11	115-199
	A	A011	2	W1260	0505	24		26-15-11	001-099
	A	A015	2	W1260	0524	24		80-11-11	115-199
	A	A018	2	W1260	0307	20		36-11-11	115-199
	A	A018	2	W1260	0309	20		36-11-11	115-199
	Y	A018	BJ	W1260	0358	20		74-31-11	001-099
	Y	A018	BJ	W1260	0359	20		74-31-11	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 89

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0166		BACT44B1300U (continued)					P036-00/ /		ALL
TB0166	A	YHLZD-33 (continued)					P036-00/ /		001-099
TB0166	A	YHLZD-33 (continued)					P36/ /		115-199
TB0166	B	YHLZR-33 (continued)					P036-00/ /		010-099
TB0166	C	YHLZD-30 (continued)					P036-00/ /		010-099
TB0166	G	BACM15C1B (continued)					P36/ /		ALL
TB0166	Y	BACM15C3B (continued)					P036-00/ /		001-099
TB0166	Y	BACM15C3B (continued)					P36/ /		115-199
TB0166	Z	BACM15C3C (continued)					P36/ /		ALL
	Y	A018	BJ	W1260	0360	20		74-31-11	001-099
	Y	A018	BJ	W1260	0648	20		74-31-11	001-099
	Y	A019	BJ	W1260	0387	24		76-11-11	001-099
	Y	A019	BJ	W1260	0388	24		76-11-11	001-099
	Y	A019	BJ	W1260	0389	24		76-11-11	001-099
	Y	A019	BJ	W1260	6615	24		76-11-11	001-099
	Y	A020	BJ	W1260	0516	24		26-15-11	001-099
	Y	A020	BJ	W1260	0517	24		26-15-11	001-099
	Y	A020	BJ	W1260	0598	24		26-15-11	001-099
	A	A024	2	W1260	0020	24		26-15-11	001-099
	A	A024	2	W1260	0511	24		26-15-11	001-099
	A	A026	2	W1260	0667	24		21-58-12	ALL
	A	A026	2	W1260	0906	24		21-58-12	ALL
	A	A027	2	W1260	0314	24		21-58-12	ALL
	A	A028	2	W1260	0316	24		21-58-12	ALL
	A	A029	2	W1260	0906	24		21-58-12	ALL
	C	A030	2	W1260	6425	22		27-62-11	010-099
	B	A031	2	W1260	6425	22		27-62-11	010-099
	Y	C001	BJ	W1260	0225	22		27-58-11	115-199
	Y	C001	BJ	W1260	0234	22		27-58-11	115-199
	Y	C001	BJ	W1260	0323	24		31-31-32	115-199
	Y	C001	BJ	W1260	C-03			27-58-11	115-199
	Y	C002	BJ	W1260	0232	22		27-58-11	010-099, 115-199
	Y	C002	BJ	W1260	0233	24		27-58-11	010-099
	Y	C002	BJ	W1260	0233	22		27-58-11	115-199
	Y	C002	BJ	W1260	2004B	22		31-31-51	010-099
	Y	C002	BJ	W1260	2004B	24		31-31-32	115-199
	Y	C003	BJ	W1260	0237	22		27-58-11	115-199
	Y	C003	BJ	W1260	0238	22		27-58-11	115-199
	Y	C003	BJ	W1260	2005B	24		31-31-32	115-199
	Y	C004	BJ	W1260	0226	22		27-58-11	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 90

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0166		BACT44B1300U (continued)					P036-00/ /		ALL
TB0166	A	YHLZD-33 (continued)					P036-00/ /		001-099
TB0166	A	YHLZD-33 (continued)					P36/ /		115-199
TB0166	B	YHLZR-33 (continued)					P036-00/ /		010-099
TB0166	C	YHLZD-30 (continued)					P036-00/ /		010-099
TB0166	G	BACM15C1B (continued)					P36/ /		ALL
TB0166	Y	BACM15C3B (continued)					P036-00/ /		001-099
TB0166	Y	BACM15C3B (continued)					P36/ /		115-199
TB0166	Z	BACM15C3C (continued)					P36/ /		ALL
	Y	C004	BJ	W1260	0227	22		27-58-11	115-199
	Y	C004	BJ	W1260	0479	20		74-31-11	001-099
	Y	C004	BJ	W1260	0649	20		74-31-11	001-099
	Y	C004	BJ	W1260	0652	20		74-31-11	001-099
	Y	C004	BJ	W1260	C-01			27-58-11	115-199
	Y	C005	BJ	W1260	0273	20		27-62-11	115-199
	Y	C005	BJ	W1260	0274	20		27-62-11	115-199
	Y	C005	BJ	W1260	0275	20		27-62-11	115-199
	Y	C005	BJ	W1260	0276	20		27-62-11	115-199
	Y	C006	BJ	W1260	0426	24		78-36-11	001-002
	Y	C006	BJ	W1260	0427	24		78-36-11	001-002
	Y	C006	BJ	W1260	0459	20		80-11-11	115-199
	Y	C006	BJ	W1260	0461	20		80-11-11	115-199
	Y	C006	BJ	W1260	0465	20		80-11-11	115-199
	Y	C006	BJ	W1260	6406	24		78-36-11	001-002
	A	C009	2	W1260	0311	24		36-22-11	001-099
	A	C011	2	W1260	0508	24		26-15-11	001-099
	A	C011	2	W1260	0522	24		26-15-11	001-099
	Y	C014	BJ	W1260	0585	20		26-22-21	115-199
	Y	C014	BJ	W1260	0586	20		26-22-21	115-199
	Y	C014	BJ	W1260	0587	20		26-22-21	115-199
	A	C015	2	W1260	0455	20		80-11-11	115-199
	A	C015	2	W1260	0523	24		80-11-11	115-199
	A	C018	2	W1260	0311	24		36-22-11	115-199
	Y	C018	BJ	W1260	0366	20		74-31-11	001-099
	Y	C018	BJ	W1260	0367	20		74-31-11	001-099
	Y	C018	BJ	W1260	0368	20		74-31-11	001-099
	Y	C018	BJ	W1260	0650	20		74-31-11	001-099
	Y	C019	BJ	W1260	0600	24		24-51-71	001-099
	Y	C019	BJ	W1260	0601	24		24-51-71	001-099
	Y	C019	BJ	W1260	0602	24		24-51-71	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 91

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0166		BACT44B1300U (continued)					P036-00/ /		ALL
TB0166	A	YHLZD-33 (continued)					P036-00/ /		001-099
TB0166	A	YHLZD-33 (continued)					P36/ /		115-199
TB0166	B	YHLZR-33 (continued)					P036-00/ /		010-099
TB0166	C	YHLZD-30 (continued)					P036-00/ /		010-099
TB0166	G	BACM15C1B (continued)					P36/ /		ALL
TB0166	Y	BACM15C3B (continued)					P036-00/ /		001-099
TB0166	Y	BACM15C3B (continued)					P36/ /		115-199
TB0166	Z	BACM15C3C (continued)					P36/ /		ALL
	A	C024	2	W1260	0507	24		26-15-11	001-099
	A	C024	2	W1260	0508	24		26-15-11	001-099
	A	C024	2	W1260	0509	24		26-15-11	001-099
	A	C024	2	W1260	0510	24		26-15-11	001-099
	A	C026	2	W1260	0703	24		21-58-12	ALL
	A	C026	2	W1260	0943	24		21-58-12	ALL
	A	C027	2	W1260	0904	24		21-58-12	ALL
	A	C028	2	W1260	0670	24		21-58-12	ALL
	A	C028	2	W1260	0916	24		21-58-12	ALL
	A	C028	2	W1260	0924	24		21-58-12	ALL
	A	C029	2	W1260	0666	24		21-58-12	ALL
	A	C029	2	W1260	5561	24		21-58-12	ALL
	C	C030	2	W1260	6437	22		31-31-61	010-099
	B	C031	2	W1260	6426	22		27-62-11	010-099
TB0168	A	YHLZD-33					P036-00/ /		001-099
TB0168	A	YHLZD-33					P36/ /		115-199
TB0168	A	YHLZD-15					P36/ /		115-199
TB0168	X	BACM15C3A					P036-00/ /		001-099
TB0168	X	BACM15C3A					P36/ /		115-199
TB0168	Y	BACM15C3B					P036-00/ /		001-099
TB0168	Y	BACM15C3B					P36/ /		115-199
TB0168	Z	BACM15C3C					P036-00/ /		001-099
TB0168	Z	BACM15C3C					P36/ /		115-199
	Z	5	BJ	W1260	0605	22		31-31-32	115-199
	Z	5	BJ	W1260	0606	22		31-31-32	115-199
	Z	5	BJ	W1260	0611	22		31-31-32	115-199
	Z	5	BJ	W1260	0616	22		31-31-13	115-199
	Z	5	BJ	W1260	5917	22		31-31-32	115-199
	Z	6	BJ	W1260	0403	22		76-11-21	ALL
	Z	6	BJ	W1260	0404	22		76-11-21	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 92

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0168	A	YHLZD-33 (continued)					P036-00/ /		001-099
TB0168	A	YHLZD-33 (continued)					P36/ /		115-199
TB0168	A	YHLZD-15 (continued)					P36/ /		115-199
TB0168	X	BACM15C3A (continued)					P036-00/ /		001-099
TB0168	X	BACM15C3A (continued)					P36/ /		115-199
TB0168	Y	BACM15C3B (continued)					P036-00/ /		001-099
TB0168	Y	BACM15C3B (continued)					P36/ /		115-199
TB0168	Z	BACM15C3C (continued)					P036-00/ /		001-099
TB0168	Z	BACM15C3C (continued)					P36/ /		115-199
	Z	6	BJ	W1260	0406	22		76-11-21	ALL
	Z	6	BJ	W1260	5804	20		76-11-21	ALL
	Z	6	BJ	W1260	5967	22		76-11-21	ALL
	Z	6	BJ	W1260	6054	22		76-11-21	ALL
	A	A003	2	W1260	0524	24		80-11-11	001-099
	Y	A003	BJ	W1260	0742	22		29-11-31	115-199
	Y	A003	BJ	W1260	5912	22		29-11-31	115-199
	Y	A003	BJ	W1260	8525	22		29-11-31	115-199
	Y	A004	BJ	W1260	0096	24		80-11-11	001-099
	Y	A004	BJ	W1260	0097	24		80-11-11	001-099
	Y	A004	BJ	W1260	0283	20		27-62-11	115-199
	Y	A004	BJ	W1260	0284	20		27-62-11	115-199
	Y	A004	BJ	W1260	0456	24		80-11-11	001-099
	Y	A004	BJ	W1260	5673	20		27-62-11	115-199
	Y	A005	BJ	W1260	0074	24		34-12-11	001-099
	Y	A005	BJ	W1260	0102	24		34-12-11	001-099
	Y	A005	BJ	W1260	0103	24		34-12-11	001-099
	A	A008	2	W1260	0093	24		80-11-11	ALL
	A	A008	2	W1260	0524	24		80-11-11	ALL
	A	A009	2	W1260	0152	24		29-33-11	001-099
	A	A009	2	W1260	0194	24		29-33-11	001-099
	A	A010	2	W1260	0153	24		29-33-11	001-099
	A	A010	2	W1260	8515	24		29-33-11	001-099
	Y	A011	BJ	W1260	0116	22		29-11-22	115-199
	Y	A011	BJ	W1260	0497	22		29-11-22	115-199
	Y	A011	BJ	W1260	5816	22		29-11-22	115-199
	Y	A012	BJ	W1260	0042	24		30-31-11	ALL
	Y	A012	BJ	W1260	0054	24		30-31-11	ALL
	Y	A012	BJ	W1260	0346	24		30-31-11	ALL
	Y	A012	BJ	W1260	0347	24		30-31-11	ALL
	Y	A013	BJ	W1260	0064	22		33-25-11	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 93

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0168	A	YHLZD-33 (continued)					P036-00/ /		001-099
TB0168	A	YHLZD-33 (continued)					P36/ /		115-199
TB0168	A	YHLZD-15 (continued)					P36/ /		115-199
TB0168	X	BACM15C3A (continued)					P036-00/ /		001-099
TB0168	X	BACM15C3A (continued)					P36/ /		115-199
TB0168	Y	BACM15C3B (continued)					P036-00/ /		001-099
TB0168	Y	BACM15C3B (continued)					P36/ /		115-199
TB0168	Z	BACM15C3C (continued)					P036-00/ /		001-099
TB0168	Z	BACM15C3C (continued)					P36/ /		115-199
	Y	A013	BJ	W1260	0065	22		33-25-11	115-199
	Y	A013	BJ	W1260	0066	22		33-25-13	115-199
	A	A013	2	W1260	0151	24		29-33-11	001-099
	A	A013	2	W1260	0174	24		29-33-11	001-099
	Y	A014	BJ	W1260	0079	24		36-11-11	115-199
	Y	A014	BJ	W1260	0080	24		36-11-11	115-199
	Y	A014	BJ	W1260	0082	24		36-11-11	115-199
	Y	A014	BJ	W1260	0130	24		36-11-11	115-199
	Y	A015	BJ	W1260	0091	22		78-34-11	115-199
	Y	A015	BJ	W1260	0416	22		78-34-11	115-199
	Y	A015	BJ	W1260	0417	22		78-34-11	115-199
	Y	A015	BJ	W1260	5805	22		78-34-11	115-199
	Y	A016	BJ	W1260	0074	24		34-12-11	115-199
	Y	A016	BJ	W1260	0102	24		34-12-11	115-199
	Y	A016	BJ	W1260	0103	24		34-12-11	115-199
	Y	A020	BJ	W1260	0101	20		32-35-11	115-199
	Y	A020	BJ	W1260	0484	20		32-35-11	115-199
	Y	A020	BJ	W1260	0485	20		32-35-11	115-199
	Y	A020	BJ	W1260	0486	20		32-35-11	115-199
	X	B009	BJ	W1260	0741	22		29-11-31	115-199
	X	B009	BJ	W1260	5921	22		29-11-31	115-199
	X	B017	BJ	W1260	0119	20		29-11-22	115-199
	X	B017	BJ	W1260	0736	20		29-11-22	115-199
	A	C003	2	W1260	0455	24		80-11-11	001-099
	A	C003	2	W1260	0523	24		80-11-11	001-099
	Y	C004	BJ	W1260	0031	22		27-62-11	001-099
	Y	C004	BJ	W1260	0031	20		27-62-11	115-199
	Y	C004	BJ	W1260	0032	20		27-62-11	ALL
	Y	C004	BJ	W1260	0290	22		27-62-11	001-099
	Y	C004	BJ	W1260	0290	20		27-62-11	115-199
	Y	C005	BJ	W1260	0040	24		24-51-71	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 94

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.		Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
	Fix	Term					CO		
■ TB0168	A	YHLZD-33 (continued)					P036-00/ /		001-099
■ TB0168	A	YHLZD-33 (continued)					P36/ /		115-199
■ TB0168	A	YHLZD-15 (continued)					P36/ /		115-199
TB0168	X	BACM15C3A (continued)					P036-00/ /		001-099
TB0168	X	BACM15C3A (continued)					P36/ /		115-199
TB0168	Y	BACM15C3B (continued)					P036-00/ /		001-099
TB0168	Y	BACM15C3B (continued)					P36/ /		115-199
TB0168	Z	BACM15C3C (continued)					P036-00/ /		001-099
TB0168	Z	BACM15C3C (continued)					P36/ /		115-199
	Y	C005	BJ	W1260	0041	24		24-51-71	001-099
	Y	C005	BJ	W1260	0599	24		24-51-71	001-099
	Y	C005	BJ	W1260	5896	24		24-51-71	001-099
	A	C008	2	W1260	0095	24		80-11-11	ALL
	A	C009	2	W1260	0178	24		29-33-11	001-099
	A	C009	2	W1260	8517	24		29-33-11	001-099
	A	C010	2	W1260	0198	24		29-33-11	001-099
	A	C010	2	W1260	8518	24		29-33-11	001-099
	Y	C011	BJ	W1260	0003	24		21-33-12	ALL
	Y	C011	BJ	W1260	0104	24		21-33-12	ALL
	Y	C011	BJ	W1260	0132	24		21-33-12	ALL
	Y	C011	BJ	W1260	0133	24		31-51-31	ALL
	Y	C012	BJ	W1260	0043	24		24-22-22	115-199
	Y	C012	BJ	W1260	0044	24		24-22-22	115-199
	Y	C012	BJ	W1260	5656	24		24-22-22	115-199
	Y	C013	BJ	W1260	0085	24		36-11-41	115-199
	Y	C013	BJ	W1260	0086	24		36-11-41	115-199
	A	C013	2	W1260	0167	24		29-33-11	001-099
	Y	C013	BJ	W1260	0343	24		36-11-41	115-199
	A	C013	2	W1260	8516	24		29-33-11	001-099
	Y	C014	BJ	W1260	0092	22		78-34-11	115-199
	Y	C014	BJ	W1260	5806	22		78-34-11	115-199
	Y	C015	BJ	W1260	0096	24		80-11-11	115-199
	Y	C015	BJ	W1260	0097	24		80-11-11	115-199
	Y	C015	BJ	W1260	0456	24		80-11-11	115-199
	Y	C016	BJ	W1260	0481	22		30-21-11	ALL
	Y	C016	BJ	W1260	5679	22		30-21-11	ALL
	Y	C016	BJ	W1260	5689	22		30-21-11	ALL
	X	C017	BJ	W1260	0121	20		29-11-31	115-199
	X	C017	BJ	W1260	0744	22		29-11-31	115-199
	Y	C019	BJ	W1260	0040	24		24-51-71	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 95

Oct 09/2008



TERMINAL STRIP LIST

91-21-41

Section TB0100

Page 96

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
■ TB0170	A	YHLZD-33 (continued)					P37/ /		ALL
■ TB0170	A	YHLZD-33 (continued)					P037-00/ /		115-199
■ TB0170	Y	BACM15C3B (continued)					P37/ /		ALL
■ TB0170	Z	BACM15C3C (continued)					P37/ /		ALL
	Z	11	BJ	W1270	5598	24		21-61-11	ALL
	Z	11	BJ	W1270	5620	24		21-61-21	ALL
	Z	11	BJ	W1270	5621	24		21-61-21	ALL
	Z	11	BJ	W1270	5647	24		21-61-31	ALL
	Z	11	BJ	W1270	5648	24		21-61-31	ALL
	Z	2	BJ	W1270	5838	22		32-09-12	001-099
	Z	2	BJ	W1270	5840	22		32-09-12	001-099
	Z	2	BJ	W1270	5845	22		32-09-12	001-099
	Z	2	BJ	W1270	5861	22		32-09-12	001-099
	Z	2	BJ	W1270	5866	22		32-09-12	001-099
	Z	2	BJ	W1270	5871	22		32-09-12	001-099
	Z	2	BJ	W1270	5873	22		32-09-12	001-099
	Z	2	BJ	W1270	5884	22		32-09-12	001-099
	Y	A003	BJ	W1270	5892	22		32-61-12	001-099
	Y	A003	BJ	W1270	5904	22		32-61-12	001-099
	Y	A003	BJ	W1270	6036	22		32-61-11	001-099
	Y	A004	BJ	W1270	0036	22		31-31-01	001-099
	Y	A004	BJ	W1270	0036	22		31-31-13	115-199
	Y	A004	BJ	W1270	5813	22		31-31-01	001-099
	Y	A004	BJ	W1270	5813	22		31-31-13	115-199
	Y	A004	BJ	W1270	6401	22		31-31-41	001-009
	Y	A004	BJ	W1270	6401	22		31-31-21	115-199
	Y	A004	BJ	W1270	8090	22		31-31-41	010-099
	A	A005	2	W1270	0655	24		21-58-12	ALL
	A	A005	2	W1270	5519	24		21-58-12	ALL
	A	A006	2	W1270	0670	24		21-58-21	ALL
	A	A006	2	W1270	0672	24		21-58-21	ALL
	A	A006	2	W1270	5542	24		21-58-21	ALL
	A	A006	2	W1270	6013	24		21-58-21	ALL
	A	A007	2	W1270	0643	24		21-25-11	ALL
	A	A007	2	W1270	5666	24		21-25-11	ALL
	Y	A008	BJ	W1270	5015R	22		32-42-11	001-099
	Y	A008	BJ	W1270	5016R	22		32-42-11	001-099
	Y	A008	BJ	W1270	5017R	22		32-42-11	001-099
	A	A008	2	W1270	6401	22		31-31-21	115-199
	Y	A010	BJ	W1270	0276	24		27-32-21	115-199
	Y	A010	BJ	W1270	0277	24		27-32-21	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 97

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0170	A	YHLZD-33 (continued)					P37/ /		ALL
TB0170	A	YHLZD-33 (continued)					P037-00/ /		115-199
TB0170	Y	BACM15C3B (continued)					P37/ /		ALL
TB0170	Z	BACM15C3C (continued)					P37/ /		ALL
	Y	A010	BJ	W1270	5706	24		27-32-21	115-199
	Y	A012	BJ	W1270	5640	24		21-61-31	001-099
	Y	A012	BJ	W1270	5641	24		21-61-31	001-099
	Y	A012	BJ	W1270	5642	24		21-61-31	001-099
	Y	A012	BJ	W1270	5643	24		21-61-31	001-099
	Y	A013	BJ	W1270	5627	24		21-61-21	ALL
	Y	A013	BJ	W1270	5628	24		21-61-21	ALL
	Y	A013	BJ	W1270	5629	24		21-61-21	ALL
	Y	A014	BJ	W1270	5640	24		21-61-31	115-199
	Y	A014	BJ	W1270	5641	24		21-61-31	115-199
	Y	A014	BJ	W1270	5642	24		21-61-31	115-199
	Y	A014	BJ	W1270	5643	24		21-61-31	115-199
	Y	A015	BJ	W1270	5682	22		22-14-31	115-199
	Y	A015	BJ	W1270	5683	22		22-14-31	115-199
	Y	A015	BJ	W1270	5684	22		22-14-31	115-199
	Y	A016	BJ	W1270	5892	22		32-61-12	115-199
	Y	A016	BJ	W1270	5904	22		32-61-12	115-199
	Y	A016	BJ	W1270	6036	22		32-61-11	115-199
	Y	C003	BJ	W1270	5682	22		22-14-31	001-099
	Y	C003	BJ	W1270	5683	22		22-14-31	001-099
	Y	C003	BJ	W1270	5684	22		22-14-31	001-099
	Y	C004	BJ	W1270	6401	22		31-31-41	010-099
	Y	C004	BJ	W1270	6572	22		31-31-41	010-099
	Y	C004	BJ	W1270	8090	22		31-31-41	010-099
	A	C005	2	W1270	0654	24		21-58-12	ALL
	A	C005	2	W1270	5517	24		21-58-12	ALL
	A	C006	2	W1270	0669	24		21-58-21	ALL
	A	C006	2	W1270	5575	24		21-58-21	ALL
	A	C007	2	W1270	0638	24		21-25-11	ALL
	A	C007	2	W1270	0642	24		21-25-11	ALL
	A	C007	2	W1270	5513	24		21-25-11	ALL
	Y	C008	BJ	W1270	5601	24		21-61-11	001-099
	Y	C008	BJ	W1270	5602	24		21-61-11	001-099
	Y	C008	BJ	W1270	5603	24		21-61-11	001-099
	A	C008	2	W1270	5815	22		31-31-21	115-199
	Y	C009	BJ	W1270	5015B	22		32-42-11	001-099
	Y	C009	BJ	W1270	5016B	22		32-42-11	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 98

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0170	A	YHLZD-33 (continued)					P37/ /		ALL
TB0170	A	YHLZD-33 (continued)					P037-00/ /		115-199
TB0170	Y	BACM15C3B (continued)					P37/ /		ALL
TB0170	Z	BACM15C3C (continued)					P37/ /		ALL
	Y	C009	BJ	W1270	5017B	22		32-42-11	001-099
	Y	C010	BJ	W1270	5601	24		21-61-11	115-199
	Y	C010	BJ	W1270	5602	24		21-61-11	115-199
	Y	C010	BJ	W1270	5603	24		21-61-11	115-199
	Y	C012	BJ	W1270	5679	22		22-14-31	001-099
	Y	C012	BJ	W1270	5680	22		22-14-31	001-099
	Y	C012	BJ	W1270	5681	22		22-14-31	001-099
	Y	C013	BJ	W1270	5653	24		21-61-31	ALL
	Y	C013	BJ	W1270	5654	24		21-61-31	ALL
	Y	C013	BJ	W1270	5655	24		21-61-31	ALL
	Y	C014	BJ	W1270	5679	22		22-14-31	115-199
	Y	C014	BJ	W1270	5680	22		22-14-31	115-199
	Y	C014	BJ	W1270	5681	22		22-14-31	115-199
	Y	C015	BJ	W1270	5015B	22		32-42-11	115-199
	Y	C015	BJ	W1270	5016B	22		32-42-11	115-199
	Y	C015	BJ	W1270	5017B	22		32-42-11	115-199
	Y	C016	BJ	W1270	5015R	22		32-42-11	115-199
	Y	C016	BJ	W1270	5016R	22		32-42-11	115-199
	Y	C016	BJ	W1270	5017R	22		32-42-11	115-199
TB0171	A	YHLZD-33					P37/ /		115-199
TB0171	A	YHLZD-15					P37/ /		115-199
TB0171	C	YHLZD-33					P37/ /		115-199
TB0171	C	YHLZD-29					P37/ /		115-199
TB0171	Y	BACM15C3B					P37/ /		ALL
TB0171	Z	BACM15C3C					P37/ /		ALL
	Z	10	BJ	W1270	5846	22		32-09-12	115-199
	Z	10	BJ	W1270	5851	22		32-09-12	115-199
	Z	10	BJ	W1270	5866	22		32-09-12	115-199
	Z	10	BJ	W1270	5868	22		32-09-12	115-199
	Z	10	BJ	W1270	5877	22		32-09-12	115-199
	Z	10	BJ	W1270	5884	22		32-09-12	115-199
	Z	11	BJ	W1270	5844	22		32-09-12	115-199
	Z	11	BJ	W1270	5860	22		32-09-12	115-199
	Z	11	BJ	W1270	5870	22		32-09-12	115-199
	Z	11	BJ	W1270	5872	22		32-09-12	115-199
	Z	11	BJ	W1270	5875	22		32-09-12	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 99

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0171	A	YHLZD-33 (continued)					P37/ /		115-199
TB0171	A	YHLZD-15 (continued)					P37/ /		115-199
TB0171	C	YHLZD-33 (continued)					P37/ /		115-199
TB0171	C	YHLZD-29 (continued)					P37/ /		115-199
TB0171	Y	BACM15C3B (continued)					P37/ /		ALL
TB0171	Z	BACM15C3C (continued)					P37/ /		ALL
	Z	11	BJ	W1270	5881	22		32-09-12	115-199
	Z	12	BJ	W1270	5845	22		32-09-12	115-199
	Z	12	BJ	W1270	5857	22		32-09-12	115-199
	Z	12	BJ	W1270	5861	22		32-09-12	115-199
	Z	12	BJ	W1270	5871	22		32-09-12	115-199
	Z	12	BJ	W1270	5873	22		32-09-12	115-199
	Z	12	BJ	W1270	5874	22		32-09-12	115-199
	Z	12	BJ	W1270	5882	22		32-09-12	115-199
	Z	12	BJ	W1270	5883	22		32-09-12	115-199
	Z	14	BJ	W1270	5832	22		32-09-12	003-099
	Z	14	BJ	W1270	5855	22		32-09-12	003-099
	Z	14	BJ	W1270	6505	22		32-61-11	003-099
	Z	14	BJ	W1270	6508	22		32-61-11	003-099
	Z	15	BJ	W1270	6504	22		32-61-11	003-099
	Z	15	BJ	W1270	6509	22		32-61-11	003-099
	Z	15	BJ	W1270	6524	22		32-61-11	003-099
	Z	3	BJ	W1270	5850	22		32-09-12	001-099
	Z	3	BJ	W1270	5853	22		32-09-12	001-099
	Z	3	BJ	W1270	5867	22		32-09-12	001-099
	Z	3	BJ	W1270	5880	22		32-09-12	001-099
	Z	4	BJ	W1270	5842	22		32-09-12	001-099
	Z	4	BJ	W1270	5864	22		32-09-12	001-099
	Z	4	BJ	W1270	5874	22		32-09-12	001-099
	Z	4	BJ	W1270	5877	22		32-09-12	001-099
	Z	4	BJ	W1270	5995	22		32-09-12	001-099
	Z	4	BJ	W1270	6003	22		32-09-12	001-099
	Z	4	BJ	W1270	6004	22		32-09-12	001-099
	Z	5	BJ	W1270	5847	22		32-09-12	001-099
	Z	5	BJ	W1270	5863	22		32-09-12	001-099
	Z	5	BJ	W1270	5865	22		32-09-12	001-099
	Z	5	BJ	W1270	5878	22		32-09-12	001-099
	Z	5	BJ	W1270	5996	22		32-09-12	001-099
	Z	6	BJ	W1270	5838	22		32-09-12	115-199
	Z	6	BJ	W1270	5839	22		32-09-12	001-099
	Z	6	BJ	W1270	5840	22		32-09-12	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 100

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0171	A	YHLZD-33 (continued)					P37/ /		115-199
TB0171	A	YHLZD-15 (continued)					P37/ /		115-199
TB0171	C	YHLZD-33 (continued)					P37/ /		115-199
TB0171	C	YHLZD-29 (continued)					P37/ /		115-199
TB0171	Y	BACM15C3B (continued)					P37/ /		ALL
TB0171	Z	BACM15C3C (continued)					P37/ /		ALL
	Z	6	BJ	W1270	5841	22		32-09-12	001-099
	Z	6	BJ	W1270	5842	22		32-09-12	115-199
	Z	6	BJ	W1270	5843	22		32-09-12	001-099
	Z	6	BJ	W1270	5848	22		32-09-12	115-199
	Z	6	BJ	W1270	5856	22		32-09-12	001-099
	Z	6	BJ	W1270	5876	22		32-09-12	001-099
	Z	6	BJ	W1270	5877	22		32-09-12	115-199
	Z	6	BJ	W1270	6830	20		32-09-12	001-099
	Z	7	BJ	W1270	5839	22		32-09-12	115-199
	Z	7	BJ	W1270	5841	22		32-09-12	115-199
	Z	7	BJ	W1270	5843	22		32-09-12	115-199
	Z	7	BJ	W1270	5856	22		32-09-12	115-199
	Z	7	BJ	W1270	5876	22		32-09-12	115-199
	Z	7	BJ	W1270	6830	20		32-09-12	115-199
	Z	8	BJ	W1270	5850	22		32-09-12	115-199
	Z	8	BJ	W1270	5853	22		32-09-12	115-199
	Z	8	BJ	W1270	5867	22		32-09-12	115-199
	Z	8	BJ	W1270	5880	22		32-09-12	115-199
	Z	9	BJ	W1270	5852	22		32-09-12	115-199
	Z	9	BJ	W1270	5862	22		32-09-12	115-199
	Z	9	BJ	W1270	5864	22		32-09-12	115-199
	Z	9	BJ	W1270	5882	22		32-09-12	115-199
	Z	9	BJ	W1270	5884	22		32-09-12	115-199
	Z	9	BJ	W1270	6006	22		32-09-12	115-199
	Y	A001	BJ	W1270	5775	20		30-33-11	115-199
	Y	A001	BJ	W1270	5776	20		30-33-11	115-199
	Y	A001	BJ	W1270	5777	20		30-33-11	115-199
	Y	A001	BJ	W1270	6001	22		32-09-12	001-099
	Y	A001	BJ	W1270	6002	22		32-09-12	001-099
	Y	A001	BJ	W1270	6005	22		32-09-12	001-099
	Y	A002	BJ	W1270	5770	20		30-33-11	115-199
	Y	A002	BJ	W1270	5778	20		30-33-11	115-199
	Y	A002	BJ	W1270	5779	20		30-33-11	115-199
	Y	A002	BJ	W1270	5834	22		32-09-12	001-099
	Y	A002	BJ	W1270	5852	22		32-09-12	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 101

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0171	A	YHLZD-33 (continued)					P37/ /		115-199
TB0171	A	YHLZD-15 (continued)					P37/ /		115-199
TB0171	C	YHLZD-33 (continued)					P37/ /		115-199
TB0171	C	YHLZD-29 (continued)					P37/ /		115-199
TB0171	Y	BACM15C3B (continued)					P37/ /		ALL
TB0171	Z	BACM15C3C (continued)					P37/ /		ALL
	Y	A002	BJ	W1270	5877	22		32-09-12	001-099
	Y	A002	BJ	W1270	6006	22		32-09-12	001-099
	Y	A004	BJ	W1270	5831	22		32-09-12	115-199
	Y	A004	BJ	W1270	5833	22		32-09-12	115-199
	Y	A004	BJ	W1270	5835	22		32-09-12	115-199
	Y	A004	BJ	W1270	5836	22		32-09-12	115-199
	C	A016	2	W1270	5751	24		30-31-12	115-199
	Y	C002	BJ	W1270	0276	24		27-32-21	001-099
	Y	C002	BJ	W1270	0277	24		27-32-21	001-099
	Y	C002	BJ	W1270	5706	24		27-32-21	001-099
	Y	C002	BJ	W1270	5791	20		30-71-11	115-199
	Y	C002	BJ	W1270	5792	20		30-71-11	115-199
	Y	C002	BJ	W1270	5793	20		30-71-11	115-199
	Y	C004	BJ	W1270	0085	24		30-31-11	115-199
	Y	C004	BJ	W1270	6091	24		30-31-11	115-199
	Y	C004	BJ	W1270	6093	24		30-31-11	115-199
	C	C016	2	W1270	5723	24		30-31-12	115-199
TB0172	A	YHLZD-33					P37/ /		ALL
TB0172	G	BACM15C1B					P37/ /		ALL
TB0172	X	BACM15C3A					P37/ /		001-099
TB0172	Y	BACM15C3B					P37/ /		ALL
TB0172	Z	BACM15C3C					P37/ /		ALL
	G	10	2	W1270	0376	16		35-21-11	115-199
	G	10	2	W1270	0377	16		35-21-11	115-199
	G	10	2	W1270	0378	16		35-21-11	115-199
	G	11	2	W1270	0397	16		35-21-11	115-199
	G	11	2	W1270	0398	16		35-21-11	115-199
	G	11	2	W1270	0399	16		35-21-11	115-199
	G	11	2	W1270	0400	16		35-21-11	115-199
	G	12	2	W1270	0401	16		35-21-11	115-199
	G	12	2	W1270	0402	16		35-21-11	115-199
	G	12	2	W1270	0403	16		35-21-11	115-199
	G	12	2	W1270	0404	16		35-21-11	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 102

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0172	A	YHLZD-33 (continued)					P37/ /		ALL
TB0172	G	BACM15C1B (continued)					P37/ /		ALL
TB0172	X	BACM15C3A (continued)					P37/ /		001-099
TB0172	Y	BACM15C3B (continued)					P37/ /		ALL
TB0172	Z	BACM15C3C (continued)					P37/ /		ALL
	G	20	2	W1270	0307	18		21-44-11	001-099
	G	20	2	W1270	6007	18		21-44-11	001-099
	G	20	2	W1270	6454	20		21-44-11	001-099
	G	3	2	W1270	0373	16		35-21-11	001-099
	G	3	2	W1270	0374	16		35-21-11	001-099
	G	3	2	W1270	0375	16		35-21-11	001-099
	G	4	2	W1270	0376	16		35-21-11	001-099
	G	4	2	W1270	0377	16		35-21-11	001-099
	G	4	2	W1270	0378	16		35-21-11	001-099
	Z	5	BJ	W1270	0312	24		21-44-11	115-199
	Z	5	BJ	W1270	0315	20		21-44-11	115-199
	Z	5	BJ	W1270	0316	24		21-44-11	115-199
	Z	5	BJ	W1270	0317	24		21-44-11	115-199
	Z	5	BJ	W1270	0318	24		21-44-11	115-199
	G	5	2	W1270	0397	16		35-21-11	001-099
	G	5	2	W1270	0398	16		35-21-11	001-099
	G	5	2	W1270	0399	16		35-21-11	001-099
	G	5	2	W1270	0400	16		35-21-11	001-099
	Z	5	BJ	W1270	6014	24		21-44-11	115-199
	G	6	2	W1270	0401	16		35-21-11	001-099
	G	6	2	W1270	0402	16		35-21-11	001-099
	G	6	2	W1270	0403	16		35-21-11	001-099
	G	6	2	W1270	0404	16		35-21-11	001-099
	G	9	2	W1270	0373	16		35-21-11	115-199
	G	9	2	W1270	0374	16		35-21-11	115-199
	G	9	2	W1270	0375	16		35-21-11	115-199
	A	A001	2	W1270	0309	24		21-44-11	115-199
	A	A001	2	W1270	0310	24		21-44-11	115-199
	Y	A001	BJ	W1270	0512	24		24-51-71	001-099
	Y	A001	BJ	W1270	0513	24		24-51-71	001-099
	Y	A001	BJ	W1270	0514	24		24-51-71	001-099
	Y	A001	BJ	W1270	0515	24		24-51-71	001-099
	A	A002	2	W1270	0320	24		21-44-11	115-199
	Y	A002	BJ	W1270	0518	24		24-51-71	001-099
	Y	A002	BJ	W1270	0519	24		24-51-71	001-099
	Y	A002	BJ	W1270	0520	24		24-51-71	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 103

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0172	A	YHLZD-33 (continued)					P37/ /		ALL
TB0172	G	BACM15C1B (continued)					P37/ /		ALL
TB0172	X	BACM15C3A (continued)					P37/ /		001-099
TB0172	Y	BACM15C3B (continued)					P37/ /		ALL
TB0172	Z	BACM15C3C (continued)					P37/ /		ALL
	Y	A003	BJ	W1270	0541	22		35-11-13	115-199
	Y	A003	BJ	W1270	0542	22		35-11-13	115-199
	Y	A003	BJ	W1270	0543	22		35-11-13	115-199
	Y	A004	BJ	W1270	0352	24		24-51-71	115-199
	Y	A004	BJ	W1270	0353	24		24-51-71	115-199
	Y	A004	BJ	W1270	0354	24		24-51-71	115-199
	Y	A007	BJ	W1270	0512	24		24-51-71	115-199
	Y	A007	BJ	W1270	0513	24		24-51-71	115-199
	Y	A007	BJ	W1270	0514	24		24-51-71	115-199
	Y	A007	BJ	W1270	0515	24		24-51-71	115-199
	A	A013	2	W1270	0658	24		21-58-12	ALL
	Y	A015	BJ	W1270	0518	24		24-51-71	115-199
	Y	A015	BJ	W1270	0519	24		24-51-71	115-199
	Y	A015	BJ	W1270	0520	24		24-51-71	115-199
	A	C001	2	W1270	0320	24		21-44-11	115-199
	Y	C001	BJ	W1270	5736	24		30-31-12	001-099
	Y	C001	BJ	W1270	5737	24		30-31-12	001-099
	Y	C001	BJ	W1270	5738	24		30-31-12	001-099
	A	C001	2	W1270	6015	24		21-44-11	115-199
	A	C002	2	W1270	0321	24		21-44-11	115-199
	A	C002	2	W1270	0323	24		21-44-11	115-199
	A	C013	2	W1270	0659	24		21-58-12	ALL
	A	C013	2	W1270	5511	24		21-58-12	ALL
	Y	C015	BJ	W1270	0322	22		30-11-11	115-199
	Y	C015	BJ	W1270	0326	22		30-11-11	115-199
	Y	C015	BJ	W1270	0359	22		30-11-11	115-199
	Y	C016	BJ	W1270	5736	24		30-31-12	115-199
	Y	C016	BJ	W1270	5737	24		30-31-12	115-199
	Y	C016	BJ	W1270	5738	24		30-31-12	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 104

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0173	A	YHLZD-33					P37/ /		001-099
TB0173	B	YHLZR-17					P37/ /		ALL
TB0173	C	YHLZD-33					P37/ /		115-199
TB0173	C	YHLZD-29					P37/ /		115-199
TB0173	F	BACM15C1A					P37/ /		115-199
TB0173	X	BACM15C3A					P37/ /		ALL
TB0173	Y	BACM15C3B					P37/ /		ALL
TB0173	Z	BACM15C3C					P37/ /		ALL
	Z	1	BJ	W1270	0461	24		36-11-41	115-199
	Z	1	BJ	W1270	0462	24		36-11-41	115-199
	Z	1	BJ	W1270	0463	24		36-11-41	115-199
	Z	1	BJ	W1270	0464	24		36-11-41	115-199
	Z	1	BJ	W1270	0465	24		36-11-41	115-199
	Z	1	BJ	W1270	0466	24		36-11-41	115-199
	Z	17	BJ	W1270	0461	24		36-11-41	001-099
	Z	17	BJ	W1270	0462	24		36-11-41	001-099
	Z	17	BJ	W1270	0463	24		36-11-41	001-099
	Z	17	BJ	W1270	0464	24		36-11-41	001-099
	Z	17	BJ	W1270	0465	24		36-11-41	001-099
	Z	17	BJ	W1270	0466	24		36-11-41	001-099
	Y	A001	BJ	W1270	0312	24		21-44-11	001-099
	Y	A001	BJ	W1270	0315	24		21-44-11	001-099
	Y	A001	BJ	W1270	0316	24		21-44-11	001-099
	Y	A002	BJ	W1270	0129	20		27-62-11	001-099
	Y	A002	BJ	W1270	0361	20		27-62-11	001-099
	Y	A002	BJ	W1270	6786	20		27-62-11	001-099
	Y	A003	BJ	W1270	0363	20		27-62-11	ALL
	Y	A003	BJ	W1270	0364	20		27-62-11	ALL
	Y	A003	BJ	W1270	0365	20		27-62-11	ALL
	Y	A004	BJ	W1270	0391	22		35-21-11	ALL
	Y	A004	BJ	W1270	0392	22		35-21-11	ALL
	Y	A004	BJ	W1270	0393	22		35-21-11	ALL
	Y	A005	BJ	W1270	0450	24		36-11-41	001-099
	Y	A005	BJ	W1270	0549	24		36-11-41	001-099
	Y	A005	BJ	W1270	6132	24		36-11-41	001-099
	X	A007	BJ	W1270	6014	24		21-44-11	115-199
	A	A007	2	W1270	6572	22		31-31-41	010-099
	X	A007	BJ	W1270	B-01			21-44-11	115-199
	X	A008	BJ	W1270	6019	24		21-44-11	115-199
	X	A008	BJ	W1270	B-03			21-44-11	115-199
	F	A009	2	W1270	0307	18		21-44-11	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 105

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
							CO		
TB0173	A	YHLZD-33 (continued)					P37/ /		001-099
TB0173	B	YHLZR-17 (continued)					P37/ /		ALL
TB0173	C	YHLZD-33 (continued)					P37/ /		115-199
TB0173	C	YHLZD-29 (continued)					P37/ /		115-199
TB0173	F	BACM15C1A (continued)					P37/ /		115-199
TB0173	X	BACM15C3A (continued)					P37/ /		ALL
TB0173	Y	BACM15C3B (continued)					P37/ /		ALL
TB0173	Z	BACM15C3C (continued)					P37/ /		ALL
	A	A009	2	W1270	0309	24		21-44-11	001-099
	A	A009	2	W1270	0310	24		21-44-11	001-099
	F	A009	2	W1270	6007	18		21-44-11	115-199
	A	A010	2	W1270	0230	22		29-22-11	001-099
	C	A010	2	W1270	0230	22		29-22-11	115-199
	A	A010	2	W1270	0574	22		29-22-11	001-099
	C	A010	2	W1270	0574	22		29-22-11	115-199
	A	A011	2	W1270	0592	20		27-62-11	001-099
	B	A012	2	W1270	0592	20		27-62-11	001-099
	C	A013	2	W1270	0592	20		27-62-11	115-199
	B	A014	2	W1270	0592	20		27-62-11	115-199
	Y	A019	BJ	W1270	0130	20		27-62-11	ALL
	Y	A019	BJ	W1270	5711	20		27-62-11	ALL
	Y	A019	BJ	W1270	6785	20		27-62-11	ALL
	Y	A020	BJ	W1270	0367	22		27-62-11	ALL
	Y	A020	BJ	W1270	6760	20		27-62-11	ALL
	Y	A020	BJ	W1270	6784	20		27-62-11	ALL
	X	B007	BJ	W1270	6015	24		21-44-11	115-199
	X	B007	BJ	W1270	B-04			21-44-11	115-199
	X	B008	BJ	W1270	6018	24		21-44-11	115-199
	X	B008	BJ	W1270	B-05			21-44-11	115-199
	Y	C001	BJ	W1270	0017	24		24-51-71	001-099
	Y	C001	BJ	W1270	0018	24		24-51-71	001-099
	Y	C001	BJ	W1270	0357	24		24-51-71	001-099
	Y	C001	BJ	W1270	5695	24		24-51-71	001-099
	Y	C003	BJ	W1270	0573	22		29-22-11	ALL
	Y	C003	BJ	W1270	0575	22		29-22-11	ALL
	Y	C003	BJ	W1270	0576	22		29-22-11	ALL
	Y	C004	BJ	W1270	0434	24		36-11-31	ALL
	Y	C004	BJ	W1270	0437	24		36-11-31	ALL
	Y	C004	BJ	W1270	0438	24		36-11-31	ALL
	Y	C005	BJ	W1270	0551	22		77-12-42	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 106

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0173	A	YHLZD-33 (continued)					P37/ /		001-099
TB0173	B	YHLZR-17 (continued)					P37/ /		ALL
TB0173	C	YHLZD-33 (continued)					P37/ /		115-199
TB0173	C	YHLZD-29 (continued)					P37/ /		115-199
TB0173	F	BACM15C1A (continued)					P37/ /		115-199
TB0173	X	BACM15C3A (continued)					P37/ /		ALL
TB0173	Y	BACM15C3B (continued)					P37/ /		ALL
TB0173	Z	BACM15C3C (continued)					P37/ /		ALL
	Y	C005	BJ	W1270	0552	22		77-12-42	001-099
	Y	C005	BJ	W1270	0877	22		77-12-42	001-099
	Y	C005	BJ	W1270	6115	22		77-12-42	001-099
	Y	C006	BJ	W1270	0510	24		36-11-41	001-099
	Y	C006	BJ	W1270	0577	24		36-11-41	001-099
	Y	C006	BJ	W1270	6130	24		36-11-41	001-099
	A	C007	2	W1270	6571	22		31-31-41	010-099
	A	C009	2	W1270	0321	24		21-44-11	001-099
	A	C009	2	W1270	0323	24		21-44-11	001-099
	A	C009	2	W1270	6015	24		21-44-11	001-099
	A	C010	2	W1270	0553	22		29-22-11	001-099
	C	C010	2	W1270	0553	22		29-22-11	115-199
	A	C011	2	W1270	0125	22		27-62-11	001-099
	A	C011	2	W1270	0126	20		27-62-11	001-099
	A	C011	2	W1270	0127	22		27-62-11	001-099
	B	C012	2	W1270	0366	20		27-62-11	001-099
	B	C012	2	W1270	0595	20		27-62-11	001-099
	C	C013	2	W1270	0591	20		27-62-11	115-199
	Y	C014	BJ	W1270	0231	22		29-22-11	001-099
	Y	C014	BJ	W1270	0232	22		29-22-11	001-099
	Y	C014	BJ	W1270	0233	22		29-22-11	001-099
	B	C014	2	W1270	0366	20		27-62-11	115-199
	B	C014	2	W1270	0595	20		27-62-11	115-199
	Y	C019	BJ	W1270	6787	20		27-62-11	ALL
	Y	C019	BJ	W1270	6837	20		27-62-11	ALL
	Y	C019	BJ	W1270	6838	20		27-62-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 107

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0174		BACT44B1000U					P037-00/ /		001, 003-099, 115-199
TB0174	A	YHLZD-33					P37/ /		ALL
TB0174	A	YHLZD-15					P37/ /		115-199
TB0174	B	YHLZD-40					P037-00/ /		ALL
TB0174	C	YHLZD-33					P37/ /		115-199
TB0174	C	YHLZD-29					P37/ /		115-199
TB0174	G	BACM15C1B					P37/ /		ALL
TB0174	X	BACM15C3A					P37/ /		001-099
TB0174	Y	BACM15C3B					P37/ /		ALL
TB0174	Z	BACM15C3C					P37/ /		ALL
	Z	11	BJ	W1270	0282	20		74-31-21	115-199
	Z	11	BJ	W1270	0773	20		80-11-21	115-199
	Z	11	BJ	W1270	0775	20		80-11-21	115-199
	Z	11	BJ	W1270	0776	20		80-11-21	115-199
	Z	11	BJ	W1270	0777	20		80-11-21	115-199
	Z	11	BJ	W1270	0778	20		80-11-21	115-199
	Z	11	BJ	W1270	0838	20		80-11-21	115-199
	G	17	2	W1270	0876	18		28-22-11	115-199
	G	17	2	W1270	0884	18		28-22-11	115-199
	G	17	2	W1270	0885	18		28-22-11	115-199
	G	3	2	W1270	0724	18		75-31-11	115-199
	G	3	2	W1270	0726	16		75-31-11	115-199
	G	3	2	W1270	0727	16		75-31-11	115-199
	G	8	2	W1270	0724	18		75-31-11	001-099
	G	8	2	W1270	0726	16		75-31-11	001-099
	G	8	2	W1270	0727	16		75-31-11	001-099
	A	A001	2	W1270	0774	24		80-11-21	001-099
	A	A001	2	W1270	0788	24		80-11-21	001-099
	Y	A002	BJ	W1270	0717	20		74-31-21	115-199
	Y	A002	BJ	W1270	0718	20		74-31-21	115-199
	A	A002	2	W1270	0774	24		80-11-21	001-099
	Y	A002	BJ	W1270	0779	20		80-11-21	115-199
	Y	A003	BJ	W1270	0784	20		80-11-21	001-099
	Y	A003	BJ	W1270	0785	20		80-11-21	001-099
	Y	A003	BJ	W1270	0786	20		80-11-21	001-099
	Y	A003	BJ	W1270	0787	20		80-11-21	001-099
	A	A004	2	W1270	0774	24		80-11-21	115-199
	A	A004	2	W1270	0788	24		80-11-21	115-199
	Y	A005	BJ	W1270	0736	24		76-11-12	115-199
	Y	A005	BJ	W1270	0738	24		76-11-12	115-199
	Y	A005	BJ	W1270	0739	24		76-11-12	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 108

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0174		BACT44B1000U (continued)					P037-00/ /		001, 003-099, 115-199
TB0174	A	YHLZD-33 (continued)					P37/ /		ALL
TB0174	A	YHLZD-15 (continued)					P37/ /		115-199
TB0174	B	YHLZD-40 (continued)					P037-00/ /		ALL
TB0174	C	YHLZD-33 (continued)					P37/ /		115-199
TB0174	C	YHLZD-29 (continued)					P37/ /		115-199
TB0174	G	BACM15C1B (continued)					P37/ /		ALL
TB0174	X	BACM15C3A (continued)					P37/ /		001-099
TB0174	Y	BACM15C3B (continued)					P37/ /		ALL
TB0174	Z	BACM15C3C (continued)					P37/ /		ALL
	Y	A005	BJ	W1270	6765	24		76-11-12	115-199
	Y	A006	BJ	W1270	0758	24		78-36-21	115-199
	Y	A006	BJ	W1270	0759	24		78-36-21	115-199
	Y	A006	BJ	W1270	6512	24		78-36-21	115-199
	A	A008	2	W1270	0774	24		80-11-21	115-199
	Y	A009	BJ	W1270	0792	24		80-11-21	115-199
	Y	A009	BJ	W1270	0793	24		80-11-21	115-199
	Y	A009	BJ	W1270	0794	24		80-11-21	115-199
	Y	A010	BJ	W1270	0784	20		80-11-21	115-199
	Y	A010	BJ	W1270	0785	20		80-11-21	115-199
	Y	A010	BJ	W1270	0786	20		80-11-21	115-199
	Y	A010	BJ	W1270	0787	20		80-11-21	115-199
	Y	A013	BJ	W1270	0814	20		74-31-21	115-199
	Y	A013	BJ	W1270	0815	20		74-31-21	115-199
	Y	A013	BJ	W1270	0816	20		74-31-21	115-199
	Y	A014	BJ	W1270	0818	20		74-31-21	115-199
	Y	A014	BJ	W1270	0819	20		74-31-21	115-199
	Y	A014	BJ	W1270	0820	20		74-31-21	115-199
	Y	A015	BJ	W1270	0283	20		74-31-21	115-199
	Y	A015	BJ	W1270	0288	20		74-31-21	115-199
	Y	A015	BJ	W1270	0808	20		74-31-21	115-199
	Y	A016	BJ	W1270	0864	22		29-22-11	115-199
	Y	A016	BJ	W1270	0869	22		29-22-11	115-199
	Y	A016	BJ	W1270	0870	22		29-22-11	115-199
	Y	A018	BJ	W1270	0809	20		74-31-21	115-199
	Y	A018	BJ	W1270	0899	20		74-31-21	115-199
	Y	A018	BJ	W1270	0901	20		74-31-21	115-199
	Y	A019	BJ	W1270	0871	22		29-22-11	115-199
	Y	A019	BJ	W1270	0905	22		29-22-11	115-199
	Y	A019	BJ	W1270	0906	22		29-22-11	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 109

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0174		BACT44B1000U (continued)					P037-00/ /		001, 003-099, 115-199
TB0174	A	YHLZD-33 (continued)					P37/ /		ALL
TB0174	A	YHLZD-15 (continued)					P37/ /		115-199
TB0174	B	YHLZD-40 (continued)					P037-00/ /		ALL
TB0174	C	YHLZD-33 (continued)					P37/ /		115-199
TB0174	C	YHLZD-29 (continued)					P37/ /		115-199
TB0174	G	BACM15C1B (continued)					P37/ /		ALL
TB0174	X	BACM15C3A (continued)					P37/ /		001-099
TB0174	Y	BACM15C3B (continued)					P37/ /		ALL
TB0174	Z	BACM15C3C (continued)					P37/ /		ALL
	C	A022	2	W1270	0168	24		29-35-11	115-199
	C	A023	2	W1270	0169	24		29-35-11	115-199
	C	A024	2	W1270	0071	24		29-35-11	115-199
	B	A025	2	W1270	6764	24		76-11-12	001-099
	B	A025	2	W1270	6765	24		76-11-12	115-199
	A	A026	2	W1270	6427	22		76-11-12	ALL
	A	A026	2	W1270	6434	22		76-11-12	ALL
	A	A027	2	W1270	6429	22		76-11-12	ALL
	A	A027	2	W1270	6433	22		76-11-12	ALL
	A	A028	2	W1270	6433	22		76-11-12	ALL
	A	A028	2	W1270	6434	22		76-11-12	ALL
	Y	C001	BJ	W1270	0710	22		74-31-21	115-199
	Y	C001	BJ	W1270	0711	22		74-31-21	115-199
	Y	C001	BJ	W1270	0713	22		74-31-21	115-199
	A	C001	2	W1270	0789	24		80-11-21	001-099
	Y	C001	BJ	W1270	0898	20		74-31-21	115-199
	Y	C002	BJ	W1270	0720	20		74-31-21	115-199
	Y	C002	BJ	W1270	0721	20		74-31-21	115-199
	Y	C002	BJ	W1270	0722	20		74-31-21	115-199
	A	C002	2	W1270	0790	24		80-11-21	001-099
	A	C002	2	W1270	0791	24		80-11-21	001-099
	Y	C002	BJ	W1270	0889	20		74-31-21	115-199
	A	C004	2	W1270	0789	24		80-11-21	115-199
	Y	C004	BJ	W1270	0827	22		77-12-42	001-099
	Y	C004	BJ	W1270	0828	22		77-12-42	001-099
	Y	C004	BJ	W1270	0829	22		77-12-42	001-099
	Y	C004	BJ	W1270	0830	22		77-12-42	001-099
	Y	C005	BJ	W1270	0747	22		78-34-21	115-199
	Y	C005	BJ	W1270	0837	22		78-34-21	115-199
	Y	C005	BJ	W1270	6533	22		78-34-21	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 110

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0174		BACT44B1000U (continued)					P037-00/ /		001, 003-099, 115-199
TB0174	A	YHLZD-33 (continued)					P37/ /		ALL
TB0174	A	YHLZD-15 (continued)					P37/ /		115-199
TB0174	B	YHLZD-40 (continued)					P037-00/ /		ALL
TB0174	C	YHLZD-33 (continued)					P37/ /		115-199
TB0174	C	YHLZD-29 (continued)					P37/ /		115-199
TB0174	G	BACM15C1B (continued)					P37/ /		ALL
TB0174	X	BACM15C3A (continued)					P37/ /		001-099
TB0174	Y	BACM15C3B (continued)					P37/ /		ALL
TB0174	Z	BACM15C3C (continued)					P37/ /		ALL
	A	C008	2	W1270	0790	24		80-11-21	115-199
	A	C008	2	W1270	0791	24		80-11-21	115-199
	Y	C009	BJ	W1270	0781	20		80-11-21	ALL
	Y	C009	BJ	W1270	0782	20		80-11-21	ALL
	Y	C009	BJ	W1270	0804	20		80-11-21	ALL
	Y	C010	BJ	W1270	0797	20		80-11-21	115-199
	Y	C010	BJ	W1270	0798	20		80-11-21	115-199
	Y	C010	BJ	W1270	0821	20		76-11-12	115-199
	Y	C013	BJ	W1270	0822	22		77-12-41	115-199
	Y	C013	BJ	W1270	0823	22		77-12-41	115-199
	Y	C013	BJ	W1270	0824	22		77-12-41	115-199
	Y	C014	BJ	W1270	0827	22		77-12-42	115-199
	Y	C014	BJ	W1270	0828	22		77-12-42	115-199
	Y	C014	BJ	W1270	0829	22		77-12-42	115-199
	Y	C014	BJ	W1270	0830	22		77-12-42	115-199
	Y	C015	BJ	W1270	0286	20		74-31-21	115-199
	Y	C015	BJ	W1270	0289	20		74-31-21	115-199
	Y	C015	BJ	W1270	0715	22		74-31-21	115-199
	Y	C016	BJ	W1270	0879	24		24-51-71	115-199
	Y	C016	BJ	W1270	0880	24		24-51-71	115-199
	Y	C016	BJ	W1270	0881	24		24-51-71	115-199
	Y	C016	BJ	W1270	0882	24		24-51-71	115-199
	Y	C018	BJ	W1270	0712	22		74-31-21	115-199
	Y	C018	BJ	W1270	0890	20		74-31-21	115-199
	Y	C018	BJ	W1270	0900	20		74-31-21	115-199
	Y	C019	BJ	W1270	0747	22		78-34-21	003-099
	Y	C019	BJ	W1270	0837	22		78-34-21	003-099
	Y	C019	BJ	W1270	6533	22		78-34-21	003-099
	C	C022	2	W1270	0171	24		29-35-11	115-199
	C	C023	2	W1270	0172	24		29-35-11	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 111

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0174		BACT44B1000U (continued)					P037-00/ /		001, 003-099, 115-199
TB0174	A	YHLZD-33 (continued)					P37/ /		ALL
TB0174	A	YHLZD-15 (continued)					P37/ /		115-199
TB0174	B	YHLZD-40 (continued)					P037-00/ /		ALL
TB0174	C	YHLZD-33 (continued)					P37/ /		115-199
TB0174	C	YHLZD-29 (continued)					P37/ /		115-199
TB0174	G	BACM15C1B (continued)					P37/ /		ALL
TB0174	X	BACM15C3A (continued)					P37/ /		001-099
TB0174	Y	BACM15C3B (continued)					P37/ /		ALL
TB0174	Z	BACM15C3C (continued)					P37/ /		ALL
	C	C024	2	W1270	0170	24		29-35-11	115-199
	B	C025	2	W1270	6768	24		76-11-12	ALL
	A	C026	2	W1270	6431	22		76-11-12	ALL
	A	C027	2	W1270	6430	22		76-11-12	ALL
	A	C028	2	W1270	6432	22		76-11-12	ALL
I TB0177	A	YHLZD-15					P37/ /		115-199
I TB0177	A	YHLZD-33					P37/ /		115-199
I TB0177	C	YHLZD-33					P37/ /		115-199
I TB0177	C	YHLZD-29					P37/ /		115-199
TB0177	F	BACM15C1A					P37/ /		ALL
TB0177	G	BACM15C1B					P37/ /		001-099
TB0177	X	BACM15C3A					P37/ /		ALL
TB0177	Y	BACM15C3B					P37/ /		ALL
TB0177	Z	BACM15C3C					P37/ /		115-199
	Z	10	BJ	W1270	6042	20		36-11-21	115-199
	Z	10	BJ	W1270	6043	20		36-11-21	115-199
	Z	10	BJ	W1270	6065	20		36-11-21	115-199
	Z	10	BJ	W1270	6078	20		36-11-21	115-199
	Z	10	BJ	W1270	6085	20		36-11-21	115-199
	Z	9	BJ	W1270	6039	20		36-11-21	115-199
	Z	9	BJ	W1270	6041	20		36-11-21	115-199
	Z	9	BJ	W1270	6055	20		36-11-21	115-199
	Z	9	BJ	W1270	6056	20		36-11-21	115-199
	Z	9	BJ	W1270	6064	20		36-11-21	115-199
	Z	9	BJ	W1270	6100	20		36-11-21	115-199
	F	A001	2	W1270	5525	18		21-58-21	ALL
	F	A001	2	W1272	0207	18		21-58-21	ALL
	F	A002	2	W1270	5527	18		21-58-21	ALL
	F	A002	2	W1272	0209	18		21-58-21	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 112

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
■ TB0177	A	YHLZD-15 (continued)					P37/ /		115-199
■ TB0177	A	YHLZD-33 (continued)					P37/ /		115-199
■ TB0177	C	YHLZD-33 (continued)					P37/ /		115-199
■ TB0177	C	YHLZD-29 (continued)					P37/ /		115-199
TB0177	F	BACM15C1A (continued)					P37/ /		ALL
TB0177	G	BACM15C1B (continued)					P37/ /		001-099
TB0177	X	BACM15C3A (continued)					P37/ /		ALL
TB0177	Y	BACM15C3B (continued)					P37/ /		ALL
TB0177	Z	BACM15C3C (continued)					P37/ /		115-199
	X	A003	BJ	W1270	5550	22		21-58-24	115-199
	X	A003	BJ	W1272	0237	22		21-58-24	115-199
	X	A004	BJ	W1270	5787	20		30-71-11	001-099
	X	A004	BJ	W1272	0219	20		30-71-11	001-099
	Y	A006	BJ	W1270	0087	22		29-22-11	115-199
	Y	A006	BJ	W1270	0866	22		29-22-11	115-199
	Y	A006	BJ	W1270	0867	22		29-22-11	115-199
	F	A007	2	W1270	0302	18		21-44-11	001-099
	F	A007	2	W1272	0236	18		21-44-11	001-099
	Y	A008	BJ	W1270	0450	24		36-11-41	115-199
	Y	A008	BJ	W1270	0549	24		36-11-41	115-199
	Y	A008	BJ	W1270	6132	24		36-11-41	115-199
	A	A011	2	W1270	6080	20		36-11-21	115-199
	A	A011	2	W1270	6082	20		36-11-21	115-199
	X	A012	BJ	W1270	6020	24		21-25-11	ALL
	X	A012	BJ	W1272	0029	24		21-25-11	ALL
	X	A014	BJ	W1270	6304	20		23-32-02	ALL
	X	A014	BJ	W1272	0081	20		23-32-02	ALL
	X	A015	BJ	W1270	6389	20		23-32-02	ALL
	X	A015	BJ	W1272	0085	20		23-32-02	ALL
	X	B003	BJ	W1270	5551	22		21-58-24	115-199
	X	B003	BJ	W1272	0238	22		21-58-24	115-199
	X	B004	BJ	W1270	0587	22		76-11-21	ALL
	X	B004	BJ	W1270	0932	22		76-11-21	ALL
	X	B012	BJ	W1270	6445	20		28-21-11	001-099
	X	B012	BJ	W1272	0090	20		28-21-11	001-099
	X	B014	BJ	W1270	6356	20		23-32-02	ALL
	X	B014	BJ	W1272	0082	20		23-32-02	ALL
	X	B015	BJ	W1270	6391	20		23-32-02	ALL
	X	B015	BJ	W1272	0086	20		23-32-02	ALL
	F	C001	2	W1270	5526	18		21-58-21	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 113

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.		Part Number		Bundle	Wire No.	GA	Station / WL / BL		Diagram	Effectivity
Fix	Term	Type	CO							
I I I I	TB0177	A	YHLZD-15 (continued)				P37/ /	115-199		
	TB0177	A	YHLZD-33 (continued)				P37/ /	115-199		
	TB0177	C	YHLZD-33 (continued)				P37/ /	115-199		
	TB0177	C	YHLZD-29 (continued)				P37/ /	115-199		
	TB0177	F	BACM15C1A (continued)				P37/ /	ALL		
	TB0177	G	BACM15C1B (continued)				P37/ /	001-099		
	TB0177	X	BACM15C3A (continued)				P37/ /	ALL		
	TB0177	Y	BACM15C3B (continued)				P37/ /	ALL		
	TB0177	Z	BACM15C3C (continued)				P37/ /	115-199		
	F	C001	2	W1272	0208	18		21-58-21	ALL	
	F	C002	2	W1270	0304	18		21-44-11	001-099	
	F	C002	2	W1272	0234	18		21-44-11	001-099	
	X	C003	BJ	W1270	5552	22		21-58-24	115-199	
	X	C003	BJ	W1272	0239	22		21-58-24	115-199	
	X	C004	BJ	W1270	0588	22		76-11-21	ALL	
	X	C004	BJ	W1270	0856	22		76-11-21	ALL	
	Y	C005	BJ	W1270	0136	20		21-45-11	001-099	
	Y	C005	BJ	W1270	0325	20		21-45-11	001-099	
	Y	C005	BJ	W1272	0216	20		21-45-11	001-099	
	F	C007	2	W1270	0303	18		21-44-11	001-099	
	F	C007	2	W1272	0235	18		21-44-11	001-099	
	Y	C008	BJ	W1270	0510	24		36-11-41	115-199	
	Y	C008	BJ	W1270	0577	24		36-11-41	115-199	
	Y	C008	BJ	W1270	6130	24		36-11-41	115-199	
	A	C011	2	W1270	6088	24		36-22-11	115-199	
	X	C012	BJ	W1270	6444	20		28-21-11	001-099	
	X	C012	BJ	W1272	0027	20		28-21-11	001-099	
	X	C014	BJ	W1270	6357	20		23-32-02	ALL	
	X	C014	BJ	W1272	0083	20		23-32-02	ALL	
	X	D003	BJ	W1270	5748	24		30-31-12	115-199	
	X	D003	BJ	W1270	5749	24		30-31-12	115-199	
	X	D004	BJ	W1270	0855	22		76-11-21	ALL	
	X	D004	BJ	W1270	6201	22		76-11-21	ALL	
	X	D014	BJ	W1270	6387	20		23-32-02	ALL	
	X	D014	BJ	W1272	0084	20		23-32-02	ALL	

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 114

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0178		BACT44B1400U					P037-00/ /		ALL
TB0178	A	YHLZD-33					P37/ /		ALL
TB0178	C	YHLZD-29					P37/ /		115-199
TB0178	C	YHLZD-33					P37/ /		115-199
TB0178	D	YHLZD-32					P037-00/ /		ALL
TB0178	F	BACM15C1A					P37/ /		115-199
TB0178	G	BACM15C1B					P37/ /		ALL
TB0178	X	BACM15C3A					P37/ /		ALL
TB0178	Y	BACM15C3B					P37/ /		ALL
TB0178	Z	BACM15C3C					P37/ /		ALL
	Z	1	BJ	W1270	0637	22		36-11-21	001-099
	Z	1	BJ	W1270	0849	20		36-11-21	001-099
	G	1	2	W1270	0908	18		30-34-22	115-199
	Z	1	BJ	W1270	6039	20		36-11-21	001-099
	Z	1	BJ	W1270	6041	20		36-11-21	001-099
	Z	1	BJ	W1270	6055	20		36-11-21	001-099
	Z	1	BJ	W1270	6064	20		36-11-21	001-099
	G	1	2	W1270	6095	18		30-34-22	115-199
	Z	1	BJ	W1270	6100	20		36-11-21	001-099
	G	1	2	W1270	8514	18		30-34-22	115-199
	Z	11	BJ	W1270	0088	22		76-11-21	001-099
	Z	11	BJ	W1270	0589	22		76-11-21	001-099
	Z	11	BJ	W1270	0744	22		76-11-21	001-099
	Z	11	BJ	W1270	0853	22		76-11-21	001-099
	Z	11	BJ	W1270	0854	22		76-11-21	001-099
	Z	11	BJ	W1270	5935	22		76-11-21	001-099
	G	13	2	W1270	5787	20		30-71-11	115-199
	G	13	2	W1272	0219	20		30-71-11	115-199
	G	14	2	W1270	0501	18		38-15-11	115-199
	G	14	2	W1270	0502	18		38-15-11	115-199
	G	14	2	W1270	0503	18		38-15-11	115-199
	Z	17	BJ	W1270	0040	22		33-26-11	115-199
	Z	17	BJ	W1270	0042	22		33-26-11	115-199
	Z	17	BJ	W1270	0043	22		33-26-21	115-199
	Z	17	BJ	W1270	0044	22		33-26-21	115-199
	Z	17	BJ	W1270	0628	22		33-26-11	115-199
	Z	18	BJ	W1270	0049	22		33-27-11	115-199
	Z	18	BJ	W1270	0050	22		33-27-21	115-199
	Z	18	BJ	W1270	0051	22		33-27-31	115-199
	Z	18	BJ	W1270	0167	22		33-22-11	115-199
	G	18	2	W1270	0876	18		28-22-11	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 115

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
							CO		
TB0178		BACT44B1400U (continued)					P037-00/ /		ALL
TB0178	A	YHLZD-33 (continued)					P37/ /		ALL
TB0178	C	YHLZD-29 (continued)					P37/ /		115-199
TB0178	C	YHLZD-33 (continued)					P37/ /		115-199
TB0178	D	YHLZD-32 (continued)					P037-00/ /		ALL
TB0178	F	BACM15C1A (continued)					P37/ /		115-199
TB0178	G	BACM15C1B (continued)					P37/ /		ALL
TB0178	X	BACM15C3A (continued)					P37/ /		ALL
TB0178	Y	BACM15C3B (continued)					P37/ /		ALL
TB0178	Z	BACM15C3C (continued)					P37/ /		ALL
	G	18	2	W1270	0884	18		28-22-11	001-099
	G	18	2	W1270	0885	18		28-22-11	001-099
	G	18	2	W1270	8005	18		28-22-11	003-099
	Z	18	BJ	W1272	0230	22		33-22-11	115-199
	G	19	2	W1270	0165	18		28-22-11	001-099
	G	19	2	W1270	0875	18		28-22-11	001-099
	G	19	2	W1270	8006	18		28-22-11	003-099
	G	19	2	W1270	8120	20		28-22-11	001-099
	Z	2	BJ	W1270	0747	22		78-34-21	001-002
	Z	2	BJ	W1270	0837	22		78-34-21	001-002
	G	2	2	W1270	0907	18		30-34-22	115-199
	G	2	2	W1270	6092	18		30-34-22	115-199
	Z	2	BJ	W1270	6533	22		78-34-21	001-002
	G	2	2	W1270	8512	18		30-34-22	115-199
	Z	21	BJ	W1270	0088	22		76-11-21	115-199
	Z	21	BJ	W1270	0589	22		76-11-21	115-199
	Z	21	BJ	W1270	0744	22		76-11-21	115-199
	Z	21	BJ	W1270	0853	22		76-11-21	115-199
	Z	21	BJ	W1270	0854	22		76-11-21	115-199
	Z	21	BJ	W1270	5935	22		76-11-21	115-199
	Z	22	BJ	W1270	0098	22		30-32-11	115-199
	Z	22	BJ	W1270	0481	22		30-32-11	115-199
	Z	22	BJ	W1270	0483	22		30-32-11	115-199
	Z	22	BJ	W1270	5952	22		30-32-11	115-199
	Z	22	BJ	W1270	5953	22		30-32-11	115-199
	Z	25	BJ	W1270	0099	22		30-32-11	115-199
	Z	25	BJ	W1270	0482	22		30-32-11	115-199
	Z	25	BJ	W1270	0484	22		30-32-11	115-199
	Z	25	BJ	W1270	5954	22		30-32-11	115-199
	Z	25	BJ	W1270	5955	22		30-32-11	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 116

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0178		BACT44B1400U (continued)					P037-00/ /		ALL
TB0178	A	YHLZD-33 (continued)					P37/ /		ALL
TB0178	C	YHLZD-29 (continued)					P37/ /		115-199
TB0178	C	YHLZD-33 (continued)					P37/ /		115-199
TB0178	D	YHLZD-32 (continued)					P037-00/ /		ALL
TB0178	F	BACM15C1A (continued)					P37/ /		115-199
TB0178	G	BACM15C1B (continued)					P37/ /		ALL
TB0178	X	BACM15C3A (continued)					P37/ /		ALL
TB0178	Y	BACM15C3B (continued)					P37/ /		ALL
TB0178	Z	BACM15C3C (continued)					P37/ /		ALL
	Z	26	BJ	W1270	0036	22		31-31-13	115-199
	Z	26	BJ	W1270	0892	22		31-31-32	115-199
	Z	26	BJ	W1270	0895	22		31-31-32	115-199
	Z	26	BJ	W1270	0897	22		31-31-32	115-199
	Z	26	BJ	W1270	5814	22		31-31-13	115-199
	Z	26	BJ	W1270	6024	22		31-31-32	115-199
	Z	26	BJ	W1270	6026	22		31-31-32	115-199
	G	31	2	W1270	0165	18		28-22-11	115-199
	G	31	2	W1270	0875	18		28-22-11	115-199
	G	31	2	W1270	8120	20		28-22-11	115-199
	Y	A003	BJ	W1270	0296	20		36-11-21	115-199
	Y	A003	BJ	W1270	0492	20		36-11-21	115-199
	Y	A003	BJ	W1270	0850	20		36-11-21	115-199
	Y	A004	BJ	W1270	0105	22		30-11-11	ALL
	Y	A004	BJ	W1270	0706	22		30-11-11	ALL
	Y	A004	BJ	W1270	5716	22		30-11-11	ALL
	Y	A005	BJ	W1270	5582	24		21-61-11	001-099
	Y	A005	BJ	W1270	5583	24		21-61-11	001-099
	Y	A005	BJ	W1270	5585	24		21-61-11	001-099
	Y	A006	BJ	W1270	5633	24		21-61-31	001-099
	Y	A006	BJ	W1270	5634	24		21-61-31	001-099
	Y	A006	BJ	W1270	5635	24		21-61-31	001-099
	F	A007	2	W1270	0302	18		21-44-11	115-199
	F	A007	2	W1272	0236	18		21-44-11	115-199
	F	A008	2	W1270	0304	18		21-44-11	115-199
	F	A008	2	W1272	0234	18		21-44-11	115-199
	Y	A009	BJ	W1270	0086	24		30-31-12	115-199
	Y	A009	BJ	W1270	0845	24		30-31-12	115-199
	Y	A009	BJ	W1270	0847	24		30-31-12	115-199
	Y	A009	BJ	W1270	5752	24		30-31-12	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 117

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0178		BACT44B1400U (continued)					P037-00/ /		ALL
TB0178	A	YHLZD-33 (continued)					P37/ /		ALL
TB0178	C	YHLZD-29 (continued)					P37/ /		115-199
TB0178	C	YHLZD-33 (continued)					P37/ /		115-199
TB0178	D	YHLZD-32 (continued)					P037-00/ /		ALL
TB0178	F	BACM15C1A (continued)					P37/ /		115-199
TB0178	G	BACM15C1B (continued)					P37/ /		ALL
TB0178	X	BACM15C3A (continued)					P37/ /		ALL
TB0178	Y	BACM15C3B (continued)					P37/ /		ALL
TB0178	Z	BACM15C3C (continued)					P37/ /		ALL
	Y	A010	BJ	W1270	0087	22		29-22-11	001-099
	Y	A010	BJ	W1270	0839	24		30-33-11	115-199
	Y	A010	BJ	W1270	0842	24		30-33-11	115-199
	Y	A010	BJ	W1270	0866	22		29-22-11	001-099
	Y	A010	BJ	W1270	0867	22		29-22-11	001-099
	Y	A010	BJ	W1270	5817	24		30-33-11	115-199
	Y	A012	BJ	W1270	0028	20		33-24-11	115-199
	Y	A012	BJ	W1270	0029	20		33-24-11	115-199
	Y	A012	BJ	W1270	0030	20		33-24-11	115-199
	A	A013	2	W1270	6401	22		31-31-41	001-099
	Y	A015	BJ	W1270	0037	20		33-26-11	115-199
	Y	A015	BJ	W1270	0038	22		33-26-11	115-199
	Y	A015	BJ	W1270	0039	22		33-26-11	115-199
	A	A015	2	W1270	0168	24		29-35-11	001-099
	Y	A016	BJ	W1270	0045	22		33-26-31	115-199
	Y	A016	BJ	W1270	0047	22		33-26-31	115-199
	Y	A016	BJ	W1270	0048	22		33-26-31	115-199
	A	A016	2	W1270	0169	24		29-35-11	001-099
	A	A017	2	W1270	0071	24		29-35-11	001-099
	Y	A019	BJ	W1270	0637	22		36-11-21	115-199
	Y	A019	BJ	W1270	0849	20		36-11-21	115-199
	Y	A019	BJ	W1270	6056	20		36-11-21	115-199
	Y	A020	BJ	W1270	0090	20		38-32-21	115-199
	Y	A020	BJ	W1270	0091	20		38-32-21	115-199
	Y	A020	BJ	W1270	0092	20		38-32-21	115-199
	Y	A024	BJ	W1270	0129	20		27-62-11	115-199
	Y	A024	BJ	W1270	0361	20		27-62-11	115-199
	Y	A024	BJ	W1270	6786	20		27-62-11	115-199
	Y	A026	BJ	W1270	0036	22		31-31-01	001-099
	Y	A026	BJ	W1270	6024	24		31-31-62	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 118

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0178		BACT44B1400U (continued)					P037-00/ /		ALL
TB0178	A	YHLZD-33 (continued)					P37/ /		ALL
TB0178	C	YHLZD-29 (continued)					P37/ /		115-199
TB0178	C	YHLZD-33 (continued)					P37/ /		115-199
TB0178	D	YHLZD-32 (continued)					P037-00/ /		ALL
TB0178	F	BACM15C1A (continued)					P37/ /		115-199
TB0178	G	BACM15C1B (continued)					P37/ /		ALL
TB0178	X	BACM15C3A (continued)					P37/ /		ALL
TB0178	Y	BACM15C3B (continued)					P37/ /		ALL
TB0178	Z	BACM15C3C (continued)					P37/ /		ALL
	Y	A026	BJ	W1270	6026	24		31-31-62	001-099
	Y	A026	BJ	W1270	6339	24		31-31-62	001-099
	Y	A027	BJ	W1270	0140	22		30-21-11	115-199
	Y	A027	BJ	W1270	0710	20		74-31-21	001-099
	Y	A027	BJ	W1270	0711	20		74-31-21	001-099
	Y	A027	BJ	W1270	0713	20		74-31-21	001-099
	Y	A027	BJ	W1270	0851	22		30-21-11	115-199
	Y	A027	BJ	W1270	0898	20		74-31-21	001-099
	Y	A027	BJ	W1270	5726	22		30-21-11	115-199
	Y	A028	BJ	W1270	0076	22		38-14-11	115-199
	Y	A028	BJ	W1270	0077	22		38-14-11	115-199
	Y	A028	BJ	W1270	0078	20		38-14-11	115-199
	Y	A028	BJ	W1270	0809	20		74-31-21	001-099
	Y	A028	BJ	W1270	0899	20		74-31-21	001-099
	Y	A028	BJ	W1270	0901	20		74-31-21	001-099
	X	A029	BJ	W1270	0511	24		36-11-41	115-199
	Y	A029	BJ	W1270	0758	24		78-36-21	001-002
	Y	A029	BJ	W1270	0759	24		78-36-21	001-002
	X	A029	BJ	W1270	6101	24		36-11-41	115-199
	Y	A029	BJ	W1270	6512	24		78-36-21	001-002
	X	A030	BJ	W1270	0488	24		30-31-12	115-199
	X	A030	BJ	W1270	5741	24		30-31-12	115-199
	D	A033	2	W1270	8127	20		28-22-11	115-199
	D	A033	2	W1270	8129	20		28-22-11	115-199
	D	A037	2	W1270	8127	20		28-22-11	001-099
	D	A037	2	W1270	8129	20		28-22-11	001-099
	A	A038	2	W1270	0650	24		21-58-12	ALL
	A	A038	2	W1270	5510	24		21-58-12	ALL
	Y	A039	BJ	W1270	0709	22		31-31-01	001-099
	Y	A039	BJ	W1270	5822	22		31-31-01	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 119

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0178		BACT44B1400U (continued)					P037-00/ /		ALL
TB0178	A	YHLZD-33 (continued)					P37/ /		ALL
TB0178	C	YHLZD-29 (continued)					P37/ /		115-199
TB0178	C	YHLZD-33 (continued)					P37/ /		115-199
TB0178	D	YHLZD-32 (continued)					P037-00/ /		ALL
TB0178	F	BACM15C1A (continued)					P37/ /		115-199
TB0178	G	BACM15C1B (continued)					P37/ /		ALL
TB0178	X	BACM15C3A (continued)					P37/ /		ALL
TB0178	Y	BACM15C3B (continued)					P37/ /		ALL
TB0178	Z	BACM15C3C (continued)					P37/ /		ALL
	Y	A039	BJ	W1270	6342	22		31-31-01	001-099
	X	B005	BJ	W1270	0356	24		24-51-71	115-199
	X	B005	BJ	W1270	5696	24		24-51-71	115-199
	X	B022	BJ	W1270	0745	22		76-11-21	001-099
	X	B022	BJ	W1270	5934	22		76-11-21	001-099
	X	B030	BJ	W1270	0381	22		30-11-11	115-199
	X	B030	BJ	W1270	5715	22		30-11-11	115-199
	Y	C003	BJ	W1270	0017	24		24-51-71	115-199
	Y	C003	BJ	W1270	0018	24		24-51-71	115-199
	Y	C003	BJ	W1270	0357	24		24-51-71	115-199
	Y	C003	BJ	W1270	5695	24		24-51-71	115-199
	Y	C003	BJ	W1270	5791	20		30-71-11	001-099
	Y	C003	BJ	W1270	5792	20		30-71-11	001-099
	Y	C003	BJ	W1270	5793	20		30-71-11	001-099
	Y	C004	BJ	W1270	0136	20		21-45-11	115-199
	Y	C004	BJ	W1270	0325	20		21-45-11	115-199
	Y	C004	BJ	W1270	5990	22		27-09-12	001-099
	Y	C004	BJ	W1270	5991	22		27-09-12	001-099
	Y	C004	BJ	W1270	5992	22		27-09-12	001-099
	Y	C004	BJ	W1272	0216	20		21-45-11	115-199
	Y	C006	BJ	W1270	5946	24		30-32-11	001-099
	Y	C006	BJ	W1270	5947	24		30-32-11	001-099
	Y	C006	BJ	W1270	5948	24		30-32-11	001-099
	F	C007	2	W1270	0303	18		21-44-11	115-199
	Y	C007	BJ	W1270	0712	20		74-31-21	001-099
	Y	C007	BJ	W1270	0890	20		74-31-21	001-099
	Y	C007	BJ	W1270	0900	20		74-31-21	001-099
	F	C007	2	W1272	0235	18		21-44-11	115-199
	Y	C009	BJ	W1270	0282	20		74-31-21	001-099
	Y	C009	BJ	W1270	0773	20		80-11-21	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 120

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.		Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
	Fix	Term					CO		
TB0178		BACT44B1400U (continued)					P037-00/ /		ALL
TB0178	A	YHLZD-33 (continued)					P37/ /		ALL
TB0178	C	YHLZD-29 (continued)					P37/ /		115-199
TB0178	C	YHLZD-33 (continued)					P37/ /		115-199
TB0178	D	YHLZD-32 (continued)					P037-00/ /		ALL
TB0178	F	BACM15C1A (continued)					P37/ /		115-199
TB0178	G	BACM15C1B (continued)					P37/ /		ALL
TB0178	X	BACM15C3A (continued)					P37/ /		ALL
TB0178	Y	BACM15C3B (continued)					P37/ /		ALL
TB0178	Z	BACM15C3C (continued)					P37/ /		ALL
	Y	C009	BJ	W1270	0780	20		80-11-21	001-099
	Y	C009	BJ	W1270	0838	20		80-11-21	001-099
	Y	C010	BJ	W1270	0024	24		30-33-11	115-199
	Y	C010	BJ	W1270	0140	22		30-21-11	001-099
	Y	C010	BJ	W1270	0840	24		30-33-11	115-199
	Y	C010	BJ	W1270	0851	22		30-21-11	001-099
	Y	C010	BJ	W1270	5726	22		30-21-11	001-099
	Y	C010	BJ	W1270	5767	24		30-33-11	115-199
	Y	C010	BJ	W1270	5818	24		30-33-11	115-199
	Y	C011	BJ	W1270	0026	22		31-31-13	115-199
	Y	C011	BJ	W1270	0708	22		31-31-13	115-199
	Y	C011	BJ	W1270	5821	22		31-31-13	115-199
	A	C013	2	W1270	5815	22		31-31-41	001-099
	Y	C015	BJ	W1270	0054	20		33-44-11	115-199
	Y	C015	BJ	W1270	0055	20		33-44-11	115-199
	Y	C015	BJ	W1270	0056	20		33-44-11	115-199
	A	C015	2	W1270	0171	24		29-35-11	001-099
	Y	C016	BJ	W1270	0057	20		33-44-21	115-199
	Y	C016	BJ	W1270	0058	20		33-44-21	115-199
	Y	C016	BJ	W1270	0059	20		33-44-21	115-199
	A	C016	2	W1270	0172	24		29-35-11	001-099
	A	C017	2	W1270	0170	24		29-35-11	001-099
	Y	C019	BJ	W1270	0430	24		36-11-21	115-199
	Y	C019	BJ	W1270	0431	24		36-11-21	115-199
	Y	C019	BJ	W1270	0432	24		36-11-21	115-199
	Y	C019	BJ	W1270	6104	24		36-11-21	115-199
	Y	C023	BJ	W1270	0125	20		27-62-11	115-199
	Y	C023	BJ	W1270	0126	20		27-62-11	115-199
	Y	C023	BJ	W1270	0127	20		27-62-11	115-199
	Y	C023	BJ	W1270	0591	20		27-62-11	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 121

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
							CO		
TB0178		BACT44B1400U (continued)					P037-00/ /		ALL
TB0178	A	YHLZD-33 (continued)					P37/ /		ALL
TB0178	C	YHLZD-29 (continued)					P37/ /		115-199
TB0178	C	YHLZD-33 (continued)					P37/ /		115-199
TB0178	D	YHLZD-32 (continued)					P037-00/ /		ALL
TB0178	F	BACM15C1A (continued)					P37/ /		115-199
TB0178	G	BACM15C1B (continued)					P37/ /		ALL
TB0178	X	BACM15C3A (continued)					P37/ /		ALL
TB0178	Y	BACM15C3B (continued)					P37/ /		ALL
TB0178	Z	BACM15C3C (continued)					P37/ /		ALL
	Y	C026	BJ	W1270	0720	20		74-31-21	001-099
	Y	C026	BJ	W1270	0721	20		74-31-21	001-099
	Y	C026	BJ	W1270	0722	20		74-31-21	001-099
	Y	C026	BJ	W1270	0889	20		74-31-21	001-099
	Y	C027	BJ	W1270	0079	22		38-14-11	115-199
	Y	C027	BJ	W1270	0080	20		38-14-11	115-199
	Y	C027	BJ	W1270	0081	22		38-14-11	115-199
	Y	C027	BJ	W1270	0082	20		38-14-11	115-199
	Y	C027	BJ	W1270	0736	24		76-11-12	001-099
	Y	C027	BJ	W1270	0738	24		76-11-12	001-099
	Y	C027	BJ	W1270	0739	24		76-11-12	001-099
	Y	C027	BJ	W1270	6764	24		76-11-12	001-099
	Y	C028	BJ	W1270	0145	24		36-11-22	115-199
	Y	C028	BJ	W1270	0146	24		36-11-22	115-199
	Y	C028	BJ	W1270	0147	24		36-11-22	115-199
	Y	C028	BJ	W1270	0879	24		24-51-71	001-099
	Y	C028	BJ	W1270	0880	24		24-51-71	001-099
	Y	C028	BJ	W1270	0881	24		24-51-71	001-099
	Y	C028	BJ	W1270	0882	24		24-51-71	001-099
	Y	C029	BJ	W1270	0864	22		29-22-11	001-099
	Y	C029	BJ	W1270	0869	22		29-22-11	001-099
	Y	C029	BJ	W1270	0870	22		29-22-11	001-099
	D	C033	2	W1270	8128	20		28-22-11	115-199
	Y	C037	BJ	W1270	0551	22		77-12-42	115-199
	Y	C037	BJ	W1270	0552	22		77-12-42	115-199
	Y	C037	BJ	W1270	0877	22		77-12-42	115-199
	Y	C037	BJ	W1270	6115	22		77-12-42	115-199
	D	C037	2	W1270	8128	20		28-22-11	001-099
	A	C038	2	W1270	0647	24		21-58-13	ALL
	Y	C039	BJ	W1270	0026	22		31-31-01	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 122

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
							CO		
TB0178		BACT44B1400U (continued)					P037-00/ /		ALL
TB0178	A	YHLZD-33 (continued)					P37/ /		ALL
I TB0178	C	YHLZD-29 (continued)					P37/ /		115-199
I TB0178	C	YHLZD-33 (continued)					P37/ /		115-199
I TB0178	D	YHLZD-32 (continued)					P037-00/ /		ALL
I TB0178	F	BACM15C1A (continued)					P37/ /		115-199
I TB0178	G	BACM15C1B (continued)					P37/ /		ALL
I TB0178	X	BACM15C3A (continued)					P37/ /		ALL
I TB0178	Y	BACM15C3B (continued)					P37/ /		ALL
TB0178	Z	BACM15C3C (continued)					P37/ /		ALL
	Y	C039	BJ	W1270	0708	22		31-31-01	001-099
	Y	C039	BJ	W1270	5821	22		31-31-01	001-099
	X	D005	BJ	W1270	0745	22		76-11-21	115-199
	X	D005	BJ	W1270	5934	22		76-11-21	115-199
TB0179		BACT44B0625U					P037-00/ /		001, 003-099, 115-199
TB0179	A	YHLZD-33					P37/ /		ALL
I TB0179	C	YHLZD-33					P37/ /		115-199
I TB0179	C	YHLZD-29					P37/ /		115-199
I TB0179	D	YHLZD-33					P37/ /		115-199
I TB0179	D	YHLZD-26					P37/ /		115-199
TB0179	Y	BACM15C3B					P37/ /		ALL
TB0179	Z	BACM15C3C					P37/ /		ALL
	Z	11	BJ	W1270	6042	20		36-11-21	001-099
	Z	11	BJ	W1270	6043	20		36-11-21	001-099
	Z	11	BJ	W1270	6065	20		36-11-21	001-099
	Z	11	BJ	W1270	6078	20		36-11-21	001-099
	Z	11	BJ	W1270	6085	20		36-11-21	001-099
	Z	3	BJ	W1270	5576	24		21-61-11	ALL
	Z	3	BJ	W1270	5577	24		21-61-11	ALL
	Z	3	BJ	W1270	5578	24		21-61-11	ALL
	Z	3	BJ	W1270	5579	24		21-61-11	ALL
	Z	3	BJ	W1270	5580	24		21-61-11	ALL
	Z	4	BJ	W1270	5604	24		21-61-21	ALL
	Z	4	BJ	W1270	5605	24		21-61-21	ALL
	Z	4	BJ	W1270	5606	24		21-61-21	ALL
	Z	4	BJ	W1270	5607	24		21-61-21	ALL
	Z	4	BJ	W1270	5608	24		21-61-21	ALL
	A	A001	2	W1270	6080	20		36-11-21	001-099
	A	A001	2	W1270	6082	20		36-11-21	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 123

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
							CO		
TB0179		BACT44B0625U (continued)					P037-00/ /		001, 003-099, 115-199
TB0179	A	YHLZD-33 (continued)					P37/ /		ALL
TB0179	C	YHLZD-33 (continued)					P37/ /		115-199
TB0179	C	YHLZD-29 (continued)					P37/ /		115-199
TB0179	D	YHLZD-33 (continued)					P37/ /		115-199
TB0179	D	YHLZD-26 (continued)					P37/ /		115-199
TB0179	Y	BACM15C3B (continued)					P37/ /		ALL
TB0179	Z	BACM15C3C (continued)					P37/ /		ALL
	A	A002	2	W1270	5751	24		30-31-12	001-099
	Y	A005	BJ	W1270	5582	24		21-61-11	115-199
	Y	A005	BJ	W1270	5583	24		21-61-11	115-199
	Y	A005	BJ	W1270	5585	24		21-61-11	115-199
	Y	A006	BJ	W1270	5633	24		21-61-31	115-199
	Y	A006	BJ	W1270	5634	24		21-61-31	115-199
	Y	A006	BJ	W1270	5635	24		21-61-31	115-199
	Y	A006	BJ	W1270	5718	22		30-21-11	001-099
	Y	A006	BJ	W1270	5719	22		30-21-11	001-099
	Y	A006	BJ	W1270	6303	22		30-21-11	001-099
	A	A007	2	W1270	5576	24		21-61-11	001-099
	D	A007	2	W1270	5576	24		21-61-11	115-199
	A	A008	2	W1270	5604	24		21-61-21	001-099
	D	A008	2	W1270	5604	24		21-61-21	115-199
	A	A009	2	W1270	5639	24		21-61-31	001-099
	D	A009	2	W1270	5639	24		21-61-31	115-199
	A	A009	2	W1270	5640	24		21-61-31	001-099
	D	A009	2	W1270	5640	24		21-61-31	115-199
	A	A010	2	W1270	5717	24		30-31-12	001-099
	C	A010	2	W1270	5717	24		30-31-12	115-199
	Y	A011	BJ	W1270	5718	22		30-21-11	115-199
	Y	A011	BJ	W1270	5719	22		30-21-11	115-199
	Y	A011	BJ	W1270	6303	22		30-21-11	115-199
	Y	A012	BJ	W1270	6073	20		36-11-21	115-199
	Y	A012	BJ	W1270	6079	20		36-11-21	115-199
	Y	A012	BJ	W1270	6081	20		36-11-21	115-199
	Y	A012	BJ	W1270	6089	20		36-11-21	115-199
	Y	A014	BJ	W1270	5946	24		30-32-11	115-199
	Y	A014	BJ	W1270	5947	24		30-32-11	115-199
	Y	A014	BJ	W1270	5948	24		30-32-11	115-199
	A	A015	2	W1270	6413	22		34-22-26	002
	A	A015	2	W1270	6456	22		34-22-26	002

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 124

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.		Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
	Fix	Term					CO		
TB0179		BACT44B0625U (continued)					P037-00/ /		001, 003-099, 115-199
TB0179	A	YHLZD-33 (continued)					P37/ /		ALL
TB0179	C	YHLZD-33 (continued)					P37/ /		115-199
TB0179	C	YHLZD-29 (continued)					P37/ /		115-199
TB0179	D	YHLZD-33 (continued)					P37/ /		115-199
TB0179	D	YHLZD-26 (continued)					P37/ /		115-199
TB0179	Y	BACM15C3B (continued)					P37/ /		ALL
TB0179	Z	BACM15C3C (continued)					P37/ /		ALL
	A	A016	2	W1270	5713	22		30-21-11	ALL
	A	C001	2	W1270	0173	24		36-22-11	001-099
	A	C001	2	W1270	6088	24		36-22-11	001-099
	A	C002	2	W1270	5723	24		30-31-12	001-099
	Y	C005	BJ	W1270	5616	24		21-61-21	115-199
	Y	C005	BJ	W1270	5617	24		21-61-21	115-199
	Y	C005	BJ	W1270	5618	24		21-61-21	115-199
	A	C007	2	W1270	5981	24		21-61-11	001-099
	D	C007	2	W1270	5981	24		21-61-11	115-199
	A	C008	2	W1270	5981	24		21-61-11	001-099
	D	C008	2	W1270	5981	24		21-61-11	115-199
	A	C008	2	W1270	5982	24		21-61-21	001-099
	D	C008	2	W1270	5982	24		21-61-21	115-199
	A	C009	2	W1270	5656	24		21-61-51	001-099
	D	C009	2	W1270	5656	24		21-61-51	115-199
	A	C009	2	W1270	5982	24		21-61-21	001-099
	D	C009	2	W1270	5982	24		21-61-21	115-199
	A	C010	2	W1270	5750	24		30-31-12	001-099
	C	C010	2	W1270	5750	24		30-31-12	115-199
	Y	C011	BJ	W1270	6038	20		36-11-21	115-199
	Y	C011	BJ	W1270	6070	20		36-11-21	115-199
	Y	C011	BJ	W1270	6076	20		36-11-21	115-199
	Y	C011	BJ	W1270	6077	20		36-11-21	115-199
	Y	C014	BJ	W1270	0616	22		33-22-11	ALL
	Y	C014	BJ	W1270	0630	24		33-51-11	ALL
	Y	C014	BJ	W1270	0631	24		33-51-11	ALL
	A	C015	2	W1270	1148	22		34-22-28	002
	A	C015	2	W1270	6465	22		34-25-12	002
	A	C016	2	W1270	0084	22		30-21-11	ALL
	A	C016	2	W1270	6302	22		30-21-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 125

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0180		BACT44B0400U					P037-00/ /		001, 003-099, 115-199
TB0180	A	YHLZD-33					P037-00/ /		001-002, 115-199
TB0180	A	YHLZD-33					P37/ /		003-099
TB0180	F	BACM15C1A					P37/ /		115-199
TB0180	G	BACM15C1B					P37/ /		003-099
TB0180	G	BACM15C1B					P037-00/ /		115-199
TB0180	X	BACM15C3A					P37/ /		115-199
TB0180	Y	BACM15C3B					P37/ /		115-199
TB0180	Z	BACM15C3C					P37/ /		ALL
	A			W1270	1111Z			78-34-61	ALL
	A			W1270	1112Z			78-34-61	ALL
	Z	3	BJ	W1270	5858	22		32-09-12	115-199
	Z	3	BJ	W1270	5995	22		32-09-12	115-199
	Z	3	BJ	W1270	6003	22		32-09-12	115-199
	Z	3	BJ	W1270	6004	22		32-09-12	115-199
	Z	3	BJ	W1270	6006	22		32-09-12	115-199
	Z	3	BJ	W1270	6029	22		32-09-12	115-199
	Z	3	BJ	W1270	6031	22		32-09-12	115-199
	Z	4	BJ	W1270	5847	22		32-09-12	115-199
	Z	4	BJ	W1270	5863	22		32-09-12	115-199
	Z	4	BJ	W1270	5865	22		32-09-12	115-199
	Z	4	BJ	W1270	5878	22		32-09-12	115-199
	Z	4	BJ	W1270	5996	22		32-09-12	115-199
	Z	7	BJ	W1270	0953	24		21-51-23	001-099
	Z	7	BJ	W1270	0956	24		21-51-23	001-099
	Z	7	BJ	W1270	0959	24		21-51-23	001-099
	Z	7	BJ	W1270	0972	24		21-51-23	001-099
	Z	7	BJ	W1270	0975	24		21-51-23	001-099
	Z	7	BJ	W1270	0976	24		21-51-23	001-099
	Z	7	BJ	W1270	0987	24		21-51-23	001-099
	Z	7	BJ	W1270	0990	24		21-51-24	001-099
	Z	8	BJ	W1270	0958	24		21-51-23	001-099
	Z	8	BJ	W1270	0962	24		21-51-23	001-099
	Z	8	BJ	W1270	0963	24		21-51-23	001-099
	Z	8	BJ	W1270	0965	24		21-51-23	001-099
	Z	8	BJ	W1270	0982	24		21-51-23	001-099
	Z	8	BJ	W1270	0984	24		21-51-23	001-099
	Z	8	BJ	W1270	0985	24		21-51-23	001-099
	Z	8	BJ	W1270	0988	24		21-51-24	001-099
	G	9	2	W1270	6450	18		78-34-61	003-099
	G	9	2	W1270	6542	18		78-34-61	003-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 126

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0180		BACT44B0400U (continued)					P037-00/ /		001, 003-099, 115-199
TB0180	A	YHLZD-33 (continued)					P037-00/ /		001-002, 115-199
TB0180	A	YHLZD-33 (continued)					P37/ /		003-099
TB0180	F	BACM15C1A (continued)					P37/ /		115-199
TB0180	G	BACM15C1B (continued)					P37/ /		003-099
TB0180	G	BACM15C1B (continued)					P037-00/ /		115-199
TB0180	X	BACM15C3A (continued)					P37/ /		115-199
TB0180	Y	BACM15C3B (continued)					P37/ /		115-199
TB0180	Z	BACM15C3C (continued)					P37/ /		ALL
	G	9	2	W1270	6543	18		78-34-61	003-099
	Y	A005	BJ	W1270	6001	22		32-09-12	115-199
	Y	A005	BJ	W1270	6002	22		32-09-12	115-199
	Y	A005	BJ	W1270	6005	22		32-09-12	115-199
	A	A006	2	W1270	6549	20		78-34-61	ALL
	Y	C002	BJ	W1270	5990	22		27-09-12	115-199
	Y	C002	BJ	W1270	5991	22		27-09-12	115-199
	Y	C002	BJ	W1270	5992	22		27-09-12	115-199
	A	C006	2	W1270	1111	18		78-34-61	ALL
	A	C006	2	W1270	1112	18		78-34-61	ALL
TB0181		AMY4100T-10U					E003-03/ /		001, 003-099, 115-199
TB0181	A	YHLZD-33					E3-3/ /		ALL
TB0181	B	YHLZR-10					E3-3/ /		115-199
TB0181	C	285N0094-12					E003-03/ /		ALL
TB0181	X	BACM15C3A					E3-3/ /		ALL
TB0181	Y	BACM15C3B					E3-3/ /		ALL
TB0181	Z	BACM15C3C					E3-3/ /		ALL
	Z	105	BJ	W1433	0061	22		31-31-11	115-199
	Z	105	BJ	W1433	0070	22		31-31-11	115-199
	Z	105	BJ	W1433	0081	22		31-31-11	115-199
	Z	105	BJ	W1433	0157	22		31-31-11	115-199
	Z	105	BJ	W1433	0158	22		31-31-11	115-199
	Z	105	BJ	W1433	0181	24		31-31-31	115-199
	Z	106	BJ	W1433	0062	22		31-31-01	001-099
	Z	106	BJ	W1433	0062	22		31-31-11	115-199
	Z	106	BJ	W1433	0063	22		31-31-01	001-099
	Z	106	BJ	W1433	0063	22		31-31-11	115-199
	Z	106	BJ	W1433	0068	22		31-31-01	001-099
	Z	106	BJ	W1433	0068	22		31-31-11	115-199
	Z	106	BJ	W1433	0072	22		31-31-01	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 127

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0181		AMY4100T-10U (continued)					E003-03/ /		001, 003-099, 115-199
TB0181	A	YHLZD-33 (continued)					E3-3/ /		ALL
TB0181	B	YHLZR-10 (continued)					E3-3/ /		115-199
TB0181	C	285N0094-12 (continued)					E003-03/ /		ALL
TB0181	X	BACM15C3A (continued)					E3-3/ /		ALL
TB0181	Y	BACM15C3B (continued)					E3-3/ /		ALL
TB0181	Z	BACM15C3C (continued)					E3-3/ /		ALL
	Z	106	BJ	W1433	0072	22		31-31-11	115-199
	Z	106	BJ	W1433	0083	22		31-31-11	115-199
	Z	106	BJ	W1433	0155	22		31-31-13	115-199
	Z	107	BJ	W1433	0064	22		31-31-11	115-199
	Z	107	BJ	W1433	0073	22		31-31-11	115-199
	Z	107	BJ	W1433	0082	22		31-31-11	115-199
	Z	108	BJ	W1433	0065	22		31-31-01	001-099
	Z	108	BJ	W1433	0065	22		31-31-11	115-199
	Z	108	BJ	W1433	0069	22		31-31-01	001-099
	Z	108	BJ	W1433	0069	22		31-31-11	115-199
	Z	108	BJ	W1433	0071	22		31-31-01	001-099
	Z	108	BJ	W1433	0071	22		31-31-11	115-199
	Z	108	BJ	W1433	0082	22		31-31-01	001-099
	Z	109	BJ	W1433	0158	22		31-31-11	115-199
	Z	109	BJ	W1433	0223	22		31-31-32	115-199
	Z	109	BJ	W1433	0224	22		31-31-32	115-199
	Z	109	BJ	W1433	0225	22		31-31-32	115-199
	Z	109	BJ	W1433	0226	22		31-31-31	115-199
	Z	109	BJ	W1433	0233	22		31-31-32	115-199
	Z	109	BJ	W1433	0234	22		31-31-32	115-199
	Z	109	BJ	W1433	0235	22		31-31-32	115-199
	C	113		W1433	A-BL			31-31-44	001-099
	C	113		W1433	A-BL			31-31-23	115-199
	C	113		W1433	A-RD			31-31-44	001-099
	C	113		W1433	A-RD			31-31-23	115-199
	C	113		W1433	A-YL			31-31-44	001-099
	C	113		W1433	A-YL			31-31-23	115-199
	C	114		W1433	B-BL			31-31-44	001-099
	C	114		W1433	B-BL			31-31-23	115-199
	C	114		W1433	B-RD			31-31-44	001-099
	C	114		W1433	B-RD			31-31-23	115-199
	C	114		W1433	B-YL			31-31-44	001-099
	C	114		W1433	B-YL			31-31-23	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 128

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0181		AMY4100T-10U (continued)					E003-03/ /		001, 003-099, 115-199
TB0181	A	YHLZD-33 (continued)					E3-3/ /		ALL
TB0181	B	YHLZR-10 (continued)					E3-3/ /		115-199
TB0181	C	285N0094-12 (continued)					E003-03/ /		ALL
TB0181	X	BACM15C3A (continued)					E3-3/ /		ALL
TB0181	Y	BACM15C3B (continued)					E3-3/ /		ALL
TB0181	Z	BACM15C3C (continued)					E3-3/ /		ALL
	C	115		W1433	C-BL			31-31-44	001-099
	C	115		W1433	C-BL			31-31-23	115-199
	C	115		W1433	C-RD			31-31-44	001-099
	C	115		W1433	C-RD			31-31-23	115-199
	C	115		W1433	C-YL			31-31-44	001-099
	C	115		W1433	C-YL			31-31-23	115-199
	C	116		W1433	D-BL			31-31-44	001-099
	C	116		W1433	D-BL			31-31-23	115-199
	C	116		W1433	D-RD			31-31-44	001-099
	C	116		W1433	D-RD			31-31-23	115-199
	C	116		W1433	D-YL			31-31-44	001-099
	C	116		W1433	D-YL			31-31-23	115-199
	Z	83	BJ	W1433	0456	22		31-31-02	001-099
	Z	83	BJ	W1433	0457	22		31-31-02	001-099
	Z	83	BJ	W1433	0458	22		31-31-02	001-099
	Z	87	BJ	W1433	0073	22		31-31-01	001-099
	Z	87	BJ	W1433	0138	24		31-31-51	001-099
	Z	87	BJ	W1433	0258	24		31-31-52	001-099
	Z	87	BJ	W1433	0259	24		31-31-52	001-099
	Z	87	BJ	W1433	0263	24		31-31-52	001-099
	Z	87	BJ	W1433	0264	24		31-31-52	001-099
	Z	87	BJ	W1433	0333	24		31-31-51	001-099
	Z	87	BJ	W1433	0334	24		31-31-51	001-099
	Z	88	BJ	W1433	0073	22		31-31-01	001-099
	Z	88	BJ	W1433	0083	22		31-31-01	001-099
	Z	88	BJ	W1433	0268	24		31-31-52	001-099
	Z	88	BJ	W1433	0269	24		31-31-52	001-099
	Z	88	BJ	W1433	0273	24		31-31-52	001-099
	Z	88	BJ	W1433	0274	24		31-31-52	001-099
	Z	88	BJ	W1433	0335	24		31-31-51	001-099
	A	A001	2	W1433	0031	22		34-53-11	115-199
	Y	A003	BJ	W1433	0054	24		34-53-12	001-099
	Y	A003	BJ	W1433	0055	24		34-53-12	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 129

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0181		AMY4100T-10U (continued)					E003-03/ /		001, 003-099, 115-199
TB0181	A	YHLZD-33 (continued)					E3-3/ /		ALL
TB0181	B	YHLZR-10 (continued)					E3-3/ /		115-199
TB0181	C	285N0094-12 (continued)					E003-03/ /		ALL
TB0181	X	BACM15C3A (continued)					E3-3/ /		ALL
TB0181	Y	BACM15C3B (continued)					E3-3/ /		ALL
TB0181	Z	BACM15C3C (continued)					E3-3/ /		ALL
	Y	A003	BJ	W1433	0344	24		34-53-12	001-099
	A	A090	2	W1433	0347	22		31-31-42	001-099
	B	A093	2	W1433	0217	24		31-31-32	115-199
	B	A093	2	W1433	0220	24		31-31-32	115-199
	B	A094	2	W1433	0218	24		31-31-32	115-199
	B	A094	2	W1433	0221	24		31-31-32	115-199
	B	A095	2	W1433	0219	24		31-31-32	115-199
	B	A095	2	W1433	0222	24		31-31-32	115-199
	B	A096	2	W1433	0227	24		31-31-32	115-199
	B	A096	2	W1433	0230	24		31-31-32	115-199
	B	A097	2	W1433	0228	24		31-31-32	115-199
	B	A097	2	W1433	0231	24		31-31-32	115-199
	B	A098	2	W1433	0229	24		31-31-32	115-199
	B	A098	2	W1433	0232	24		31-31-32	115-199
	X	A099	BJ	W1433	5032R	24		31-31-13	115-199
	X	A099	BJ	W1433	5036R	24		31-31-13	115-199
	X	A100	BJ	W1433	5032B	24		31-31-13	115-199
	X	A100	BJ	W1433	5036B	24		31-31-13	115-199
	Y	A102	BJ	W1433	5014R	24		31-31-01	001-099
	Y	A102	BJ	W1433	5014R	24		31-31-11	115-199
	Y	A102	BJ	W1433	5055R	24		31-31-01	001-099
	Y	A102	BJ	W1433	5055R	24		31-31-11	115-199
	Y	A102	BJ	W1433	5056R	24		31-31-01	001-099
	Y	A102	BJ	W1433	5056R	24		31-31-11	115-199
	Y	A104	BJ	W1433	0076	24		31-31-01	001-099
	Y	A104	BJ	W1433	0076	22		31-31-11	115-199
	Y	A104	BJ	W1433	0174	24		31-31-01	001-099
	Y	A104	BJ	W1433	0174	24		31-31-11	115-199
	Y	A104	BJ	W1433	0175	24		31-31-01	001-099
	Y	A104	BJ	W1433	0175	24		31-31-11	115-199
	X	A112	BJ	W1433	5057R	20		31-31-44	001-099
	X	A112	BJ	W1433	5057R	24		31-31-23	115-199
	X	A112	BJ	W1433	A-BL			31-31-44	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 130

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0181		AMY4100T-10U (continued)					E003-03/ /		001, 003-099, 115-199
TB0181	A	YHLZD-33 (continued)					E3-3/ /		ALL
TB0181	B	YHLZR-10 (continued)					E3-3/ /		115-199
TB0181	C	285N0094-12 (continued)					E003-03/ /		ALL
TB0181	X	BACM15C3A (continued)					E3-3/ /		ALL
TB0181	Y	BACM15C3B (continued)					E3-3/ /		ALL
TB0181	Z	BACM15C3C (continued)					E3-3/ /		ALL
	X	A112	BJ	W1433	A-BL			31-31-23	115-199
	Y	A117	BJ	W1433	5053R	24		31-31-23	115-199
	Y	A117	BJ	W1433	5138R	24		31-31-44	001-099
	Y	A117	BJ	W1433	A-RD			31-31-44	001-099
	Y	A117	BJ	W1433	A-RD			31-31-23	115-199
	Y	A118	BJ	W1433	5054R	24		31-31-23	115-199
	Y	A118	BJ	W1433	5137R	24		31-31-44	001-099
	Y	A118	BJ	W1433	C-RD			31-31-44	001-099
	Y	A118	BJ	W1433	C-RD			31-31-23	115-199
	X	B099	BJ	W1433	5033R	24		31-31-13	115-199
	X	B099	BJ	W1433	5037R	24		31-31-13	115-199
	X	B100	BJ	W1433	5033B	24		31-31-13	115-199
	X	B100	BJ	W1433	5037B	24		31-31-13	115-199
	X	B112	BJ	W1433	5057B	20		31-31-44	001-099
	X	B112	BJ	W1433	5057B	24		31-31-23	115-199
	X	B112	BJ	W1433	B-BL			31-31-44	001-099
	X	B112	BJ	W1433	B-BL			31-31-23	115-199
	A	C001	2	W1433	0029	22		34-53-11	115-199
	Y	C003	BJ	W1433	0578	22		31-31-61	010-099
	Y	C003	BJ	W1433	0580	22		31-31-61	010-099
	Y	C003	BJ	W1433	0581	22		31-31-61	010-099
	A	C090	2	W1433	0346	22		31-31-42	001-099
	B	C093	2	W1433	0223	22		31-31-32	115-199
	B	C094	2	W1433	0224	22		31-31-32	115-199
	B	C095	2	W1433	0225	22		31-31-32	115-199
	B	C096	2	W1433	0233	22		31-31-32	115-199
	B	C097	2	W1433	0234	22		31-31-32	115-199
	B	C098	2	W1433	0235	22		31-31-32	115-199
	X	C099	BJ	W1433	5034R	24		31-31-13	115-199
	X	C099	BJ	W1433	5038R	24		31-31-13	115-199
	X	C100	BJ	W1433	5034B	24		31-31-13	115-199
	X	C100	BJ	W1433	5038B	24		31-31-13	115-199
	Y	C102	BJ	W1433	5014B	24		31-31-01	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 131

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0181		AMY4100T-10U (continued)					E003-03/ /		001, 003-099, 115-199
TB0181	A	YHLZD-33 (continued)					E3-3/ /		ALL
TB0181	B	YHLZR-10 (continued)					E3-3/ /		115-199
TB0181	C	285N0094-12 (continued)					E003-03/ /		ALL
TB0181	X	BACM15C3A (continued)					E3-3/ /		ALL
TB0181	Y	BACM15C3B (continued)					E3-3/ /		ALL
TB0181	Z	BACM15C3C (continued)					E3-3/ /		ALL
	Y	C102	BJ	W1433	5014B	24		31-31-11	115-199
	Y	C102	BJ	W1433	5055B	24		31-31-01	001-099
	Y	C102	BJ	W1433	5055B	24		31-31-11	115-199
	Y	C102	BJ	W1433	5056B	24		31-31-01	001-099
	Y	C102	BJ	W1433	5056B	24		31-31-11	115-199
	Y	C104	BJ	W1433	0188	24		31-31-31	115-199
	Y	C104	BJ	W1433	0189	24		31-31-31	115-199
	Y	C104	BJ	W1433	0190	24		31-31-31	115-199
	X	C112	BJ	W1433	5058R	20		31-31-44	001-099
	X	C112	BJ	W1433	5058R	24		31-31-23	115-199
	X	C112	BJ	W1433	C-BL			31-31-44	001-099
	X	C112	BJ	W1433	C-BL			31-31-23	115-199
	Y	C117	BJ	W1433	5053B	24		31-31-23	115-199
	Y	C117	BJ	W1433	5138B	24		31-31-44	001-099
	Y	C117	BJ	W1433	B-RD			31-31-44	001-099
	Y	C117	BJ	W1433	B-RD			31-31-23	115-199
	Y	C118	BJ	W1433	5054B	24		31-31-23	115-199
	Y	C118	BJ	W1433	5137B	24		31-31-44	001-099
	Y	C118	BJ	W1433	D-RD			31-31-44	001-099
	Y	C118	BJ	W1433	D-RD			31-31-23	115-199
	X	D099	BJ	W1433	5035R	24		31-31-13	115-199
	X	D099	BJ	W1433	5039R	24		31-31-13	115-199
	X	D100	BJ	W1433	5035B	24		31-31-13	115-199
	X	D100	BJ	W1433	5039B	24		31-31-13	115-199
	X	D112	BJ	W1433	5058B	20		31-31-44	001-099
	X	D112	BJ	W1433	5058B	24		31-31-23	115-199
	X	D112	BJ	W1433	D-BL			31-31-44	001-099
	X	D112	BJ	W1433	D-BL			31-31-23	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 132

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0182		AMY4100T-10U					E003-04/ /		001, 003-099, 115-199
TB0182	A	YHLZD-33					E003-04/ /		ALL
TB0182	A	YHLZD-15					E003-04/ /		115-199
TB0182	C	YHLZD-33					E003-04/ /		ALL
TB0182	X	BACM15C3A					E003-04/ /		001-099
TB0182	Y	BACM15C3B					E003-04/ /		ALL
TB0182	Z	BACM15C3C					E003-04/ /		ALL
	Y			W1280	5006Z			28-41-11	ALL
	Y			W1280	5009Z			28-41-11	ALL
	Y			W1280	5010Z			28-41-11	ALL
	Z	15	BJ	W1280	0058	20		32-35-11	ALL
	Z	15	BJ	W1280	0059	20		32-35-11	ALL
	Z	15	BJ	W1280	0063	20		32-12-12	ALL
	Z	15	BJ	W1280	0069	20		32-35-11	ALL
	Z	16	BJ	W1280	0341	22		28-41-13	001-099
	Z	16	BJ	W1280	0341	20		28-41-13	115-199
	Z	16	BJ	W1280	0342	22		28-41-13	001-099
	Z	16	BJ	W1280	0342	20		28-41-13	115-199
	Z	16	BJ	W1280	0359	22		28-41-13	ALL
	Y	A001	BJ	W1280	2505Z			23-41-11	001-099
	Y	A001	BJ	W1280	2506Z			23-41-11	001-099
	Y	A001	BJ	W1280	2507Z			23-41-11	001-099
	Y	A001	BJ	W1280	3501Z			23-41-11	115-199
	Y	A001	BJ	W1280	3502Z			23-41-11	115-199
	Y	A001	BJ	W1280	3503Z			23-41-11	115-199
	Y	A002	BJ	W1280	2505R	24		23-41-11	001-099
	Y	A002	BJ	W1280	2506R	24		23-41-11	001-099
	Y	A002	BJ	W1280	2507R	24		23-41-11	001-099
	Y	A002	BJ	W1280	3501R	24		23-41-11	115-199
	Y	A002	BJ	W1280	3502R	24		23-41-11	115-199
	Y	A002	BJ	W1280	3503R	24		23-41-11	115-199
	Y	A003	BJ	W1280	5006R	24		28-41-11	ALL
	Y	A003	BJ	W1280	5009R	24		28-41-11	ALL
	Y	A003	BJ	W1280	5010R	24		28-41-11	ALL
	Y	A004	BJ	W1280	0194	22		32-09-11	115-199
	Y	A004	BJ	W1280	0195	22		32-09-11	115-199
	Y	A004	BJ	W1280	0202	22		32-09-11	115-199
	Y	A005	BJ	W1280	5006B	24		28-41-11	115-199
	Y	A005	BJ	W1280	5009B	24		28-41-11	115-199
	Y	A005	BJ	W1280	5010B	24		28-41-11	115-199
	Y	A006	BJ	W1280	0144	24		32-41-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 133

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0182		AMY4100T-10U (continued)					E003-04/ /		001, 003-099, 115-199
TB0182	A	YHLZD-33 (continued)					E003-04/ /		ALL
TB0182	A	YHLZD-15 (continued)					E003-04/ /		115-199
TB0182	C	YHLZD-33 (continued)					E003-04/ /		ALL
TB0182	X	BACM15C3A (continued)					E003-04/ /		001-099
TB0182	Y	BACM15C3B (continued)					E003-04/ /		ALL
TB0182	Z	BACM15C3C (continued)					E003-04/ /		ALL
	Y	A006	BJ	W1280	0146	24		32-41-11	ALL
	Y	A006	BJ	W1280	0151	24		32-41-11	ALL
	Y	A007	BJ	W1280	0007	22		27-23-11	115-199
	Y	A007	BJ	W1280	0008	22		27-23-11	115-199
	Y	A007	BJ	W1280	0016	22		27-23-11	115-199
	Y	A008	BJ	W1280	0030	22		32-61-12	001-099
	Y	A008	BJ	W1280	0030	22		32-61-11	115-199
	Y	A008	BJ	W1280	0075	22		32-61-12	ALL
	Y	A008	BJ	W1280	0239	22		32-61-12	001-099
	Y	A008	BJ	W1280	0239	22		32-61-11	115-199
	Y	A009	BJ	W1280	0064	20		32-12-12	ALL
	Y	A009	BJ	W1280	0066	20		32-12-12	ALL
	Y	A009	BJ	W1280	0083	22		32-61-12	ALL
	Y	A010	BJ	W1280	0180	22		28-21-22	ALL
	Y	A010	BJ	W1280	0219	22		28-21-22	ALL
	Y	A010	BJ	W1280	0220	22		28-21-22	ALL
	Y	A011	BJ	W1280	5002R	24		34-61-14	010-099
	Y	A011	BJ	W1280	5011R	22		34-61-14	010-099
	Y	A011	BJ	W1280	5014R	22		31-31-42	010-099
	Y	A012	BJ	W1280	0087	24		32-61-12	001-099
	Y	A012	BJ	W1280	0087	22		32-61-12	115-199
	Y	A012	BJ	W1280	0374	24		32-61-12	001-099
	Y	A012	BJ	W1280	0374	22		32-61-11	115-199
	Y	A012	BJ	W1280	0375	24		32-61-12	001-099
	Y	A012	BJ	W1280	0375	22		32-61-12	115-199
	Y	A013	BJ	W1280	0035	22		32-61-12	ALL
	Y	A013	BJ	W1280	0038	22		32-61-12	ALL
	Y	A013	BJ	W1280	0041	22		32-61-12	ALL
	Y	A014	BJ	W1280	0156	22		25-66-11	ALL
	Y	A014	BJ	W1280	0157	22		25-66-11	ALL
	Y	A014	BJ	W1280	0158	22		25-66-11	ALL
	Y	A014	BJ	W1280	0363	22		25-66-11	ALL
	Y	A017	BJ	W1280	0339	24		52-71-21	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 134

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0182		AMY4100T-10U (continued)					E003-04/ /		001, 003-099, 115-199
TB0182	A	YHLZD-33 (continued)					E003-04/ /		ALL
TB0182	A	YHLZD-15 (continued)					E003-04/ /		115-199
TB0182	C	YHLZD-33 (continued)					E003-04/ /		ALL
TB0182	X	BACM15C3A (continued)					E003-04/ /		001-099
TB0182	Y	BACM15C3B (continued)					E003-04/ /		ALL
TB0182	Z	BACM15C3C (continued)					E003-04/ /		ALL
	Y	A017	BJ	W1280	0354	24		52-71-21	115-199
	Y	A017	BJ	W1280	0356	24		52-71-21	115-199
	Y	A018	BJ	W1280	0085	22		32-61-12	ALL
	Y	A018	BJ	W1280	0373	24		32-61-12	001-099
	Y	A018	BJ	W1280	0373	22		32-61-11	115-199
	Y	A018	BJ	W1280	0376	24		32-61-12	001-099
	Y	A018	BJ	W1280	0376	22		32-61-12	115-199
	A	A019	2	W1280	0355	24		52-71-21	115-199
	A	A022	2	W1280	0453	16		75-31-11	ALL
	C	A027	2	W1280	0503	24		32-61-12	001-099
	C	A027	2	W1280	0503	24		32-61-11	115-199
	C	A028	2	W1280	0504	24		32-61-12	ALL
	Y	A034	BJ	W1280	0161	20		28-41-11	ALL
	Y	A034	BJ	W1280	0249	20		28-21-11	001-099
	Y	A034	BJ	W1280	0249	22		28-21-11	115-199
	Y	A034	BJ	W1280	0515	22		28-21-11	ALL
	Y	A034	BJ	W1280	0599	22		28-21-11	ALL
	Y	C001	BJ	W1280	2505B	24		23-41-11	001-099
	Y	C001	BJ	W1280	2506B	24		23-41-11	001-099
	Y	C001	BJ	W1280	2507B	24		23-41-11	001-099
	Y	C001	BJ	W1280	3501B	24		23-41-11	115-199
	Y	C001	BJ	W1280	3502B	24		23-41-11	115-199
	Y	C001	BJ	W1280	3503B	24		23-41-11	115-199
	Y	C002	BJ	W1280	3501Y	24		23-41-11	115-199
	Y	C002	BJ	W1280	3502Y	24		23-41-11	115-199
	Y	C002	BJ	W1280	3503Y	24		23-41-11	115-199
	Y	C002	BJ	W1280	5006B	24		28-41-11	001-099
	Y	C002	BJ	W1280	5009B	24		28-41-11	001-099
	Y	C002	BJ	W1280	5010B	24		28-41-11	001-099
	Y	C003	BJ	W1280	0444	20		32-12-12	ALL
	Y	C003	BJ	W1280	0446	20		32-12-12	ALL
	Y	C003	BJ	W1280	0447	20		32-35-11	ALL
	Y	C003	BJ	W1280	0448	20		32-35-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 135

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0182		AMY4100T-10U (continued)					E003-04/ /		001, 003-099, 115-199
TB0182	A	YHLZD-33 (continued)					E003-04/ /		ALL
TB0182	A	YHLZD-15 (continued)					E003-04/ /		115-199
TB0182	C	YHLZD-33 (continued)					E003-04/ /		ALL
TB0182	X	BACM15C3A (continued)					E003-04/ /		001-099
TB0182	Y	BACM15C3B (continued)					E003-04/ /		ALL
TB0182	Z	BACM15C3C (continued)					E003-04/ /		ALL
	Y	C004	BJ	W1280	0140	24		32-41-11	ALL
	Y	C004	BJ	W1280	0141	24		32-41-11	ALL
	Y	C004	BJ	W1280	0145	24		32-41-11	ALL
	Y	C005	BJ	W1280	0214	22		32-09-12	ALL
	Y	C005	BJ	W1280	0224	22		32-09-12	ALL
	Y	C005	BJ	W1280	0309	22		32-09-12	ALL
	Y	C007	BJ	W1280	0017	22		27-23-11	115-199
	Y	C007	BJ	W1280	0018	22		27-23-11	115-199
	Y	C007	BJ	W1280	0019	22		27-23-11	115-199
	Y	C008	BJ	W1280	0065	20		32-12-12	ALL
	Y	C008	BJ	W1280	0067	20		32-12-12	ALL
	Y	C008	BJ	W1280	0068	20		32-12-12	ALL
	Y	C008	BJ	W1280	0379	22		32-61-12	ALL
	Y	C009	BJ	W1280	0032	24		32-61-12	ALL
	Y	C009	BJ	W1280	0088	24		32-61-12	ALL
	Y	C009	BJ	W1280	0089	24		32-61-12	ALL
	Y	C010	BJ	W1280	0183	22		28-21-22	ALL
	Y	C010	BJ	W1280	0221	22		28-21-22	ALL
	Y	C010	BJ	W1280	0222	22		28-21-22	ALL
	Y	C011	BJ	W1280	5002B	24		34-61-14	010-099
	Y	C011	BJ	W1280	5011B	22		34-61-14	010-099
	Y	C011	BJ	W1280	5014B	22		31-31-42	010-099
	Y	C012	BJ	W1280	0033	22		32-61-12	ALL
	Y	C012	BJ	W1280	0036	22		32-61-12	ALL
	Y	C012	BJ	W1280	0039	22		32-61-12	ALL
	Y	C013	BJ	W1280	0031	22		32-61-12	ALL
	Y	C013	BJ	W1280	0051	22		32-61-12	ALL
	Y	C013	BJ	W1280	0084	22		32-61-12	ALL
	Y	C014	BJ	W1280	0206	22		32-09-11	ALL
	Y	C014	BJ	W1280	0304	22		32-09-11	ALL
	Y	C014	BJ	W1280	0305	22		32-09-11	ALL
	Y	C017	BJ	W1280	0153	22		32-61-11	ALL
	Y	C017	BJ	W1280	0208	22		32-61-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 136

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0182		AMY4100T-10U (continued)					E003-04/ /		001, 003-099, 115-199
TB0182	A	YHLZD-33 (continued)					E003-04/ /		ALL
TB0182	A	YHLZD-15 (continued)					E003-04/ /		115-199
TB0182	C	YHLZD-33 (continued)					E003-04/ /		ALL
TB0182	X	BACM15C3A (continued)					E003-04/ /		001-099
TB0182	Y	BACM15C3B (continued)					E003-04/ /		ALL
TB0182	Z	BACM15C3C (continued)					E003-04/ /		ALL
	Y	C017	BJ	W1280	0216	22		32-61-11	ALL
	Y	C018	BJ	W1280	0091	22		32-61-21	ALL
	Y	C018	BJ	W1280	0449	22		32-61-21	ALL
	Y	C018	BJ	W1280	0450	22		32-61-21	ALL
	A	C019	2	W1280	0339	24		52-71-21	115-199
	A	C022	2	W1280	0451	16		75-31-11	ALL
	A	C022	2	W1280	0452	16		75-31-11	ALL
	C	C027	2	W1280	0073	24		32-61-12	001-099
	C	C027	2	W1280	0073	24		32-61-11	115-199
	C	C028	2	W1280	0340	24		32-61-12	ALL
	Y	C034	BJ	W1280	0250	20		28-21-11	001-099
	Y	C034	BJ	W1280	0250	22		28-21-11	115-199
	Y	C034	BJ	W1280	0507	20		28-41-11	ALL
	Y	C034	BJ	W1280	0513	22		28-21-11	ALL
	Y	C034	BJ	W1280	0598	22		28-21-11	ALL
TB0183		AMY4100T-10U					E005-01/ /		001, 003-099, 115-199
TB0183	X	BACM15C3A					E5-1/ /		001-099
TB0183	Y	BACM15C3B					E5-1/ /		ALL
TB0183	Z	BACM15C3C					E5-1/ /		ALL
	Z	17	BJ	W1282	5004B	24		27-51-51	ALL
	Z	17	BJ	W1282	5005B	24		21-31-11	ALL
	Z	17	BJ	W1282	5008B	24		21-31-21	ALL
	Z	17	BJ	W1282	5010B	24		21-31-11	ALL
	Z	18	BJ	W1282	5004R	24		27-51-51	ALL
	Z	18	BJ	W1282	5005R	24		21-31-11	ALL
	Z	18	BJ	W1282	5008R	24		21-31-21	ALL
	Z	18	BJ	W1282	5010R	24		21-31-11	ALL
	Y	A001	BJ	W1282	0063	24		24-28-21	ALL
	Y	A001	BJ	W1282	0064	24		24-28-21	ALL
	Y	A001	BJ	W1282	0065	24		24-28-21	ALL
	Y	A002	BJ	W1282	0050	24		24-28-21	001-099
	Y	A002	BJ	W1282	0051	24		24-28-21	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 137

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0183		AMY4100T-10U (continued)					E005-01/ /		001, 003-099, 115-199
TB0183	X	BACM15C3A (continued)					E5-1/ /		001-099
TB0183	Y	BACM15C3B (continued)					E5-1/ /		ALL
TB0183	Z	BACM15C3C (continued)					E5-1/ /		ALL
	Y	A002	BJ	W1282	0052	24		24-28-21	001-099
	Y	A008	BJ	W1282	0170	24		27-51-41	ALL
	Y	A008	BJ	W1282	0187	24		27-51-41	ALL
	Y	A008	BJ	W1282	0252	24		27-51-41	ALL
	Y	A009	BJ	W1282	0189	24		27-51-41	ALL
	Y	A009	BJ	W1282	0228	24		27-51-41	ALL
	Y	A009	BJ	W1282	0254	24		27-51-41	ALL
	Y	A011	BJ	W1282	0127	20		24-11-11	ALL
	Y	A011	BJ	W1282	0128	22		24-11-11	ALL
	Y	A011	BJ	W1282	0137	20		24-11-11	ALL
	Y	A012	BJ	W1282	0023	24		21-31-11	ALL
	Y	A012	BJ	W1282	0024	24		21-31-11	ALL
	Y	A012	BJ	W1282	0033	24		21-31-21	ALL
	Y	A013	BJ	W1282	0021	20		21-31-11	ALL
	Y	A013	BJ	W1282	0022	20		21-31-11	ALL
	Y	A013	BJ	W1282	0031	22		21-31-11	ALL
	Y	A019	BJ	W1282	0291	22		27-81-31	ALL
	Y	A019	BJ	W1282	0292	22		27-81-31	ALL
	Y	A019	BJ	W1282	0293	22		27-81-31	ALL
	Y	A019	BJ	W1282	0386	22		27-81-31	ALL
	Y	A020	BJ	W1282	0172	22		27-51-21	ALL
	Y	A020	BJ	W1282	0387	22		27-51-21	ALL
	Y	A020	BJ	W1282	0388	22		27-51-21	ALL
	X	A049	BJ	W1282	0278	24		21-31-11	009-099
	X	A049	BJ	W1282	0283	24		21-31-11	009-099
	X	B049	BJ	W1282	0029	24		21-31-11	009-099
	X	B049	BJ	W1282	0278	24		21-31-11	009-099
	Y	C001	BJ	W1282	0294	22		74-31-11	001-099
	Y	C001	BJ	W1282	0350	22		74-31-11	001-099
	Y	C001	BJ	W1282	0351	22		74-31-11	001-099
	Y	C002	BJ	W1282	0176	22		27-51-21	001-099
	Y	C002	BJ	W1282	0380	24		31-31-63	001-099
	Y	C002	BJ	W1282	0399	22		27-51-21	001-099
	Y	C003	BJ	W1282	0175	22		27-51-21	001-099
	Y	C003	BJ	W1282	0320	24		31-31-63	001-099
	Y	C003	BJ	W1282	0398	22		27-51-21	001-099
	Y	C007	BJ	W1282	0169	24		27-51-41	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 138

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0183		AMY4100T-10U (continued)					E005-01/ /		001, 003-099, 115-199
TB0183	X	BACM15C3A (continued)					E5-1/ /		001-099
TB0183	Y	BACM15C3B (continued)					E5-1/ /		ALL
TB0183	Z	BACM15C3C (continued)					E5-1/ /		ALL
	Y	C007	BJ	W1282	0186	24		27-51-41	ALL
	Y	C007	BJ	W1282	0256	24		27-51-41	ALL
	Y	C008	BJ	W1282	0171	24		27-51-41	ALL
	Y	C008	BJ	W1282	0188	24		27-51-41	ALL
	Y	C008	BJ	W1282	0251	24		27-51-41	ALL
	Y	C009	BJ	W1282	0190	24		27-51-41	ALL
	Y	C009	BJ	W1282	0229	24		27-51-41	ALL
	Y	C009	BJ	W1282	0253	24		27-51-41	ALL
	Y	C010	BJ	W1282	0203	24		27-58-11	ALL
	Y	C010	BJ	W1282	0204	24		27-58-11	ALL
	Y	C010	BJ	W1282	0205	24		27-58-11	ALL
	Y	C011	BJ	W1282	0092	24		24-11-11	ALL
	Y	C011	BJ	W1282	0130	24		24-11-11	ALL
	Y	C011	BJ	W1282	0132	24		24-11-11	ALL
	Y	C011	BJ	W1282	0136	24		24-11-11	ALL
	Y	C012	BJ	W1282	5006R	24		21-31-11	ALL
	Y	C012	BJ	W1282	5007R	24		21-31-11	ALL
	Y	C012	BJ	W1282	5013R	24		21-31-21	ALL
	Y	C013	BJ	W1282	5006B	24		21-31-11	ALL
	Y	C013	BJ	W1282	5007B	24		21-31-11	ALL
	Y	C013	BJ	W1282	5013B	24		21-31-21	ALL
	Y	C019	BJ	W1282	0099	22		24-22-11	ALL
	Y	C019	BJ	W1282	0276	22		24-22-11	ALL
	Y	C019	BJ	W1282	0279	22		24-22-11	ALL
	X	C049	BJ	W1282	0240	24		21-31-11	009-099
TB0184		AMY4100T-10U					E005-02/ /		001, 003-099, 115-199
TB0184	X	BACM15C3A					E5-2/ /		001-099
TB0184	X	BACM15C3A					AE0502/ /		115-199
TB0184	Y	BACM15C3B					E5-2/ /		001-099
TB0184	Y	BACM15C3B					AE0502/ /		115-199
TB0184	Z	BACM15C3C					E5-2/ /		001-099
TB0184	Z	BACM15C3C					AE0502/ /		115-199
	Z	1	BJ	W1284	2529R	22		34-43-14	002
	Z	1	BJ	W1284	5001R	24		34-22-29	001-099
	Z	1	BJ	W1284	5001R	24		34-33-21	115-199
	Z	1	BJ	W1284	5004R	24		31-41-22	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 139

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0184		AMY4100T-10U (continued)					E005-02/ /		001, 003-099, 115-199
TB0184	X	BACM15C3A (continued)					E5-2/ /		001-099
TB0184	X	BACM15C3A (continued)					AE0502/ /		115-199
TB0184	Y	BACM15C3B (continued)					E5-2/ /		001-099
TB0184	Y	BACM15C3B (continued)					AE0502/ /		115-199
TB0184	Z	BACM15C3C (continued)					E5-2/ /		001-099
TB0184	Z	BACM15C3C (continued)					AE0502/ /		115-199
	Z	1	BJ	W1284	5005R	24		34-22-29	ALL
	Z	1	BJ	W1284	5020R	24		34-45-02	ALL
	Z	1	BJ	W1284	5026R	24		31-31-22	115-199
	Z	1	BJ	W1284	5047R	24		31-31-43	001-099
	Z	1	BJ	W1284	5051R	22		34-46-12	002
	Z	2	BJ	W1284	2529B	22		34-43-14	002
	Z	2	BJ	W1284	5001B	24		34-22-29	001-099
	Z	2	BJ	W1284	5001B	24		34-33-21	115-199
	Z	2	BJ	W1284	5004B	24		31-41-22	ALL
	Z	2	BJ	W1284	5005B	24		34-22-29	ALL
	Z	2	BJ	W1284	5020B	24		34-45-02	ALL
	Z	2	BJ	W1284	5026B	24		31-31-22	115-199
	Z	2	BJ	W1284	5047B	24		31-31-43	001-099
	Z	2	BJ	W1284	5051B	22		34-46-12	002
	Y	A003	BJ	W1284	0075	24		24-28-21	ALL
	Y	A003	BJ	W1284	0076	24		24-28-21	ALL
	Y	A003	BJ	W1284	0077	24		24-28-21	ALL
	Y	A005	BJ	W1284	0177	22		32-42-12	001-099
	Y	A005	BJ	W1284	0179	22		32-42-12	001-099
	Y	A005	BJ	W1284	0180	22		32-42-12	001-099
	Y	A006	BJ	W1284	0186	22		32-42-12	001-099
	Y	A006	BJ	W1284	0189	22		32-42-12	001-099
	Y	A006	BJ	W1284	0190	22		32-42-12	001-099
	Y	A008	BJ	W1284	0013	22		74-31-21	001-099
	Y	A008	BJ	W1284	0252	22		74-31-21	001-099
	Y	A008	BJ	W1284	0253	22		74-31-21	001-099
	X	A009	BJ	W1284	0240	24		21-31-21	009-099
	X	A009	BJ	W1284	0283	24		21-31-21	009-099
	Y	A011	BJ	W1284	0134	20		21-31-21	ALL
	Y	A011	BJ	W1284	0135	22		21-31-21	ALL
	Y	A011	BJ	W1284	0144	20		21-31-21	ALL
	Y	A012	BJ	W1284	0074	24		24-22-22	ALL
	Y	A012	BJ	W1284	0079	24		24-22-22	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 140

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0184		AMY4100T-10U (continued)					E005-02/ /		001, 003-099, 115-199
TB0184	X	BACM15C3A (continued)					E5-2/ /		001-099
TB0184	X	BACM15C3A (continued)					AE0502/ /		115-199
TB0184	Y	BACM15C3B (continued)					E5-2/ /		001-099
TB0184	Y	BACM15C3B (continued)					AE0502/ /		115-199
TB0184	Z	BACM15C3C (continued)					E5-2/ /		001-099
TB0184	Z	BACM15C3C (continued)					AE0502/ /		115-199
	Y	A012	BJ	W1284	0080	24		24-22-22	ALL
	Y	A012	BJ	W1284	0081	24		24-22-22	ALL
	Y	A037	BJ	W1284	5006R	22		32-42-11	001-099
	Y	A037	BJ	W1284	5043R	22		32-42-11	001-099
	Y	A037	BJ	W1284	5044R	24		27-32-11	001-099
	Y	A037	BJ	W1284	5050R	24		34-45-02	001-099
	Y	A038	BJ	W1284	5003R	22		32-42-11	001-099
	Y	A038	BJ	W1284	5045R	22		32-42-11	001-099
	Y	A038	BJ	W1284	5046R	24		27-32-21	001-099
	X	B009	BJ	W1284	0214	24		21-31-21	009-099
	X	B009	BJ	W1284	0240	24		21-31-21	009-099
	Y	C005	BJ	W1284	0130	22		32-42-12	001-099
	Y	C005	BJ	W1284	0131	22		32-42-12	001-099
	Y	C005	BJ	W1284	0178	22		32-42-12	001-099
	Y	C008	BJ	W1284	0027	20		24-11-21	ALL
	Y	C008	BJ	W1284	0028	22		24-11-21	ALL
	Y	C008	BJ	W1284	0029	20		24-11-21	ALL
	X	C009	BJ	W1284	0278	24		21-31-21	009-099
	Y	C011	BJ	W1284	0070	22		24-22-21	ALL
	Y	C011	BJ	W1284	0207	22		24-22-21	ALL
	Y	C011	BJ	W1284	0208	22		24-22-21	ALL
	Y	C037	BJ	W1284	5006B	22		32-42-11	001-099
	Y	C037	BJ	W1284	5043B	22		32-42-11	001-099
	Y	C037	BJ	W1284	5044B	24		27-32-11	001-099
	Y	C037	BJ	W1284	5050B	24		34-45-02	001-099
	Y	C038	BJ	W1284	5003B	22		32-42-11	001-099
	Y	C038	BJ	W1284	5045B	22		32-42-11	001-099
	Y	C038	BJ	W1284	5046B	24		27-32-21	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 141

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0185		AMY4100T-10U					E005-03/ /		001, 003-099, 115-199
TB0185	Y	BACM15C3B					E005-03/ /		001-099
TB0185	Y	BACM15C3B					E5-3/ /		115-199
TB0185	Z	BACM15C3C					E5-3/ /		115-199
	Z	5	BJ	W1286	5003R	24		34-33-31	115-199
	Z	5	BJ	W1286	5006R	24		34-22-39	115-199
	Z	5	BJ	W1286	5007R	24		31-31-22	115-199
	Z	5	BJ	W1286	5012R	24		31-51-34	115-199
	Y	A001	BJ	W1286	0252	24		27-58-31	ALL
	Y	A001	BJ	W1286	0253	24		27-58-31	ALL
	Y	A001	BJ	W1286	0254	24		27-58-31	ALL
	Y	A001	BJ	W1286	0255	24		27-58-31	ALL
	Y	A002	BJ	W1286	0085	24		24-51-24	ALL
	Y	A002	BJ	W1286	0086	24		24-51-24	ALL
	Y	A002	BJ	W1286	0087	24		24-51-24	ALL
	Y	A003	BJ	W1286	0041	24		24-28-21	115-199
	Y	A003	BJ	W1286	0042	24		24-28-21	115-199
	Y	A003	BJ	W1286	0043	24		24-28-21	115-199
	Y	A004	BJ	W1286	0257	22		27-81-31	ALL
	Y	A004	BJ	W1286	0258	22		27-81-31	ALL
	Y	A004	BJ	W1286	0259	22		27-81-31	ALL
	Y	A005	BJ	W1286	5003R	24		34-22-39	001-099
	Y	A005	BJ	W1286	5006R	24		34-22-39	001-099
	Y	A005	BJ	W1286	5007R	24		31-31-43	001-099
	Y	A005	BJ	W1286	5012R	24		31-51-34	009
	Y	A005	BJ	W1286	5051R	22		34-46-12	002
	Y	A006	BJ	W1286	0084	24		24-51-14	001-099
	Y	A006	BJ	W1286	0275	24		24-51-14	001-099
	Y	A006	BJ	W1286	0276	24		24-51-14	001-099
	Y	C001	BJ	W1286	0068	24		24-51-51	ALL
	Y	C001	BJ	W1286	0069	24		24-51-51	ALL
	Y	C001	BJ	W1286	0070	24		24-51-51	ALL
	Y	C002	BJ	W1286	0251	24		27-58-31	ALL
	Y	C002	BJ	W1286	0262	24		27-58-31	ALL
	Y	C002	BJ	W1286	0263	24		27-58-31	ALL
	Y	C003	BJ	W1286	0031	24		24-28-21	ALL
	Y	C003	BJ	W1286	0032	24		24-28-21	ALL
	Y	C003	BJ	W1286	0033	24		24-28-21	ALL
	Y	C004	BJ	W1286	5003B	24		34-22-39	001-099
	Y	C004	BJ	W1286	5003B	24		34-33-31	115-199
	Y	C004	BJ	W1286	5006B	24		34-22-39	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 142

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0185		AMY4100T-10U (continued)					E005-03/ /		001, 003-099, 115-199
TB0185	Y	BACM15C3B (continued)					E005-03/ /		001-099
TB0185	Y	BACM15C3B (continued)					E5-3/ /		115-199
TB0185	Z	BACM15C3C (continued)					E5-3/ /		115-199
	Y	C004	BJ	W1286	5007B	24		31-31-43	001-099
	Y	C004	BJ	W1286	5007B	24		31-31-22	115-199
	Y	C004	BJ	W1286	5012B	24		31-51-34	009, 115-199
	Y	C004	BJ	W1286	5051B	22		34-46-12	002
TB0187		S280W555-506					P065-00/ /		002
TB0187	Y	S280W555-506					P065-00/ /		002
TB0187	Z	S280W555-506					P065-00/ /		002
	Y	A001	BJ	W0814	2506R	22		34-22-18	002
	Y	A001	BJ	W0814	2527R	22		34-46-14	002
	Y	A001	BJ	W0814	2529R	22		34-43-11	002
	Y	A003	BJ	W0814	2505R	22		34-22-28	002
	Y	A003	BJ	W0814	2528R	22		34-43-11	002
	Y	A003	BJ	W0814	2532R	22		34-46-14	002
	Y	A005	BJ	W0814	2511W	24		34-43-15	002
	Y	A005	BJ	W0814	2513W	24		34-43-15	002
	Y	A005	BJ	W0814	2515W	24		34-43-15	002
	Y	A007	BJ	W0814	2512W	24		34-43-15	002
	Y	A007	BJ	W0814	2514W	24		34-43-15	002
	Y	A007	BJ	W0814	2516W	24		34-43-15	002
	Z	A009	BJ	W0814	0111	22		34-46-14	002
	Z	A009	BJ	W0814	0112	22		34-46-14	002
	Z	A009	BJ	W0814	0195	22		34-46-14	002
	Z	A009	BJ	W0814	0211	22		34-46-14	002
	Z	A009	BJ	W0814	0212	22		34-46-14	002
	Y	B001	BJ	W0814	2506B	22		34-22-18	002
	Y	B001	BJ	W0814	2527B	22		34-46-14	002
	Y	B001	BJ	W0814	2529B	22		34-43-11	002
	Y	B003	BJ	W0814	2505B	22		34-22-28	002
	Y	B003	BJ	W0814	2528B	22		34-43-11	002
	Y	B003	BJ	W0814	2532B	22		34-46-14	002
	Y	B005	BJ	W0814	2511B	24		34-43-15	002
	Y	B005	BJ	W0814	2513B	24		34-43-15	002
	Y	B005	1A	W0814	2515B	24		34-43-15	002
	Y	B007	BJ	W0814	2512B	24		34-43-15	002
	Y	B007	BJ	W0814	2514B	24		34-43-15	002
	Y	B007	BJ	W0814	2516B	24		34-43-15	002

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 143

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0188		BACT44B0800U					P065-00/ /		001, 003-099, 115-199
TB0188	Y	BACM15C3B					P65/ /		ALL
TB0188	Z	S280W555-108					P065-00/ /		002
	Y	A001	BJ	W0808	0010	22		25-51-11	115-199
	Y	A001	BJ	W0808	0011	22		25-51-11	115-199
	Y	A001	BJ	W0808	0020	22		25-51-11	115-199
	Y	A002	BJ	W0808	0013	22		25-51-11	115-199
	Y	A002	BJ	W0808	0014	22		25-51-11	115-199
	Y	A002	BJ	W0808	0015	22		25-51-11	115-199
	Y	A004	BJ	W0808	0041	20		52-34-11	001-099
	Y	A004	BJ	W0808	0051	20		52-34-11	001-099
	Y	A004	BJ	W0808	0056	20		52-34-11	001-099
	Y	A005	BJ	W0808	0046	20		52-34-11	001-099
	Y	A005	BJ	W0808	0054	20		52-34-11	001-099
	Y	A005	BJ	W0808	0055	20		52-34-11	001-099
	Y	C001	BJ	W0808	0016	22		25-51-11	115-199
	Y	C001	BJ	W0808	0017	22		25-51-11	115-199
	Y	C001	BJ	W0808	0018	22		25-51-11	115-199
	Y	C002	BJ	W0808	0023	22		25-51-11	115-199
	Y	C002	BJ	W0808	0024	22		25-51-11	115-199
	Y	C002	BJ	W0808	0025	22		25-51-11	115-199
	Y	C003	BJ	W0808	0048	22		52-34-11	ALL
	Y	C003	BJ	W0808	0049	22		33-37-11	ALL
	Y	C003	BJ	W0808	0050	22		52-34-11	ALL
	Y	C004	BJ	W0808	0043	20		52-34-11	001-099
	Y	C004	BJ	W0808	0045	20		52-34-11	001-099
	Y	C004	BJ	W0808	0053	20		52-34-11	001-099
TB0190		BACT44A0500U					P010-00/ /		001, 003-099, 115-199
TB0190	X	BACM15C3A					P010-00/ /		ALL
TB0190	Y	BACM15C3B					P010-00/ /		ALL
TB0190	Z	BACM15C3C					P010-00/ /		ALL
	Z	7	BJ	W1115	0401	22		32-42-12	ALL
	Z	7	BJ	W1115	0402	22		32-42-12	ALL
	Z	7	BJ	W1115	0406	22		32-42-12	ALL
	Z	7	BJ	W1115	A-BU			32-42-12	ALL
	X	A001	BJ	W1115	0440	22		SPARE	001-099
	X	A001	BJ	W1115	0440	22		31-31-31	115-199
	X	A001	BJ	W1115	M-RD			31-31-31	115-199
	X	A002	BJ	W1115	0426	22		27-62-11	ALL
	X	A002	BJ	W1115	B-NC			27-62-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 144

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0190		BACT44A0500U (continued)					P010-00/ /		001, 003-099, 115-199
TB0190	X	BACM15C3A (continued)					P010-00/ /		ALL
TB0190	Y	BACM15C3B (continued)					P010-00/ /		ALL
TB0190	Z	BACM15C3C (continued)					P010-00/ /		ALL
	Y	A003	BJ	W1115	0359	22		27-62-11	ALL
	Y	A003	BJ	W1115	0427	22		27-62-11	ALL
	Y	A003	BJ	W1115	B-N			27-62-11	ALL
	Y	A004	BJ	W1115	0360	22		27-62-11	ALL
	Y	A004	BJ	W1115	0361	22		27-62-11	ALL
	Y	A004	BJ	W1115	C-NC			27-62-11	ALL
	X	A005	BJ	W1115	0355	22		27-62-11	ALL
	X	A005	BJ	W1115	A-NC			27-62-11	ALL
	Y	A009	BJ	W1115	0201	22		33-16-51	ALL
	Y	A009	BJ	W1115	0252	22		33-16-51	ALL
	Y	A009	BJ	W1115	0388	22		33-16-51	ALL
	Y	A009	BJ	W1115	0424	22		33-16-51	ALL
	X	B001	BJ	W1115	0387	22		32-44-11	ALL
	X	B001	BJ	W1115	0423	22		32-44-11	ALL
	X	B002	BJ	W1115	0409	22		32-42-12	ALL
	X	B002	BJ	W1115	A-BK			32-42-12	ALL
	X	B005	BJ	W1115	0356	22		27-62-11	ALL
	X	B005	BJ	W1115	A-CO			27-62-11	ALL
	X	C001	BJ	W1115	0426	22		27-62-11	ALL
	X	C001	BJ	W1115	C-CO			27-62-11	ALL
	X	C002	BJ	W1115	2002R	22		SPARE	001-099
	X	C002	BJ	W1115	2002R	22		31-31-31	115-199
	X	C002	BJ	W1115	M-YL			31-31-31	115-199
	Y	C003	BJ	W1115	0251	22		33-16-61	ALL
	Y	C003	BJ	W1115	0389	22		33-16-61	ALL
	Y	C003	BJ	W1115	0425	22		33-16-61	ALL
	Y	C004	BJ	W1115	0412	22		31-51-41	ALL
	Y	C004	BJ	W1115	B-BK			31-51-41	ALL
	X	C005	BJ	W1115	0357	22		27-62-11	ALL
	X	C005	BJ	W1115	A-N			27-62-11	ALL
	X	CAP	Y	W1115	A-RD			32-42-12	ALL
	Y	CAP	Y	W1115	B-RD			31-51-41	ALL
	X	D001	BJ	W1115	0427	22		27-62-11	ALL
	X	D001	BJ	W1115	C-NO			27-62-11	ALL
	X	D002	BJ	W1115	2002B	22		SPARE	001-099
	X	D002	BJ	W1115	2002B	22		31-31-31	115-199
	X	D002	BJ	W1115	M-GN			31-31-31	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 145

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0190		BACT44A0500U (continued)					P010-00/ /		001, 003-099, 115-199
TB0190	X	BACM15C3A (continued)					P010-00/ /		ALL
TB0190	Y	BACM15C3B (continued)					P010-00/ /		ALL
TB0190	Z	BACM15C3C (continued)					P010-00/ /		ALL
	X	D005	BJ	W1115	0358	22		27-62-11	ALL
	X	D005	BJ	W1115	B-CO			27-62-11	ALL
TB0191		BACM15C3A					/ /		001, 003-099, 115-199
TB0192		BACT44A0400U					P010-00/ /		001, 003-099, 115-199
TB0192	Y	BACM15C3B					P010-00/ /		ALL
TB0192	Z	BACM15C3C					P010-00/ /		ALL
	Z	3	BJ	W1115	0362	22		33-13-51	ALL
	Z	3	BJ	W1115	0391	20		33-13-51	ALL
	Z	3	BJ	W1115	L-FC			33-13-51	ALL
	Z	3	BJ	W1115	L-ST			33-13-51	ALL
	Z	4	BJ	W1115	0278	20		33-13-51	ALL
	Z	4	BJ	W1115	0362	22		33-13-51	ALL
	Z	4	BJ	W1115	L-FL			33-13-51	ALL
	Z	4	BJ	W1115	L-SB			33-13-51	ALL
	Y	A001	BJ	W1115	0439	22		SPARE	001-099
	Y	A002	BJ	W1115	0438	22		SPARE	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0100

Page 146 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0200		AMY4100T-10U					E006-02/ /		001, 003-099
TB0200	A	YHLZD-33					E6-2/ /		001-099
TB0200	Y	BACM15C3B					E6-2/ /		001-099
	A	A003	2	W1020	0371	24		24-27-41	001-099
	Y	A005	BJ	W1020	0324	22		49-72-11	001-099
	Y	A005	BJ	W1020	0341	22		49-72-11	001-099
	Y	A005	BJ	W1020	0372	24		24-27-41	001-099
	A	C003	2	W1020	0372	24		24-27-41	001-099
TB0201		AMY4100T-10U					E002-01/ /		001, 003-099
TB0201	A	285N0096-1					E002-02/ /		ALL
TB0201	B	YHLZD-33					E002-01/ /		001-099
TB0201	B	YHLZD-33					E2-1/ /		115-199
TB0201	B	HLZD-33					E002-001/ /		115-199
TB0201	D	YHLZD-33					E002-001/ /		115-199
TB0201	E	YHLZD-33					E002-001/ /		115-199
TB0201	F	BACM15C3B					E002-01/ /		ALL
TB0201	X	BACM15C3A					E002-01/ /		009-099
TB0201	Y	BACM15C3B					E002-01/ /		001-099
TB0201	Y	BACM15C3B					E2-1/ /		115-199
TB0201	Z	BACM15C3C					E002-01/ /		001-099
TB0201	Z	BACM15C3C					E2-1/ /		115-199
	Y			W1171	0891	20		27-32-11	ALL
	Y			W1171	0892	20		27-32-11	ALL
	Y			W1171	0894	20		27-32-11	ALL
	Y			W1171	5033Z			27-32-11	ALL
	Y			W1171	5353Z			27-32-11	ALL
	Y			W1171	5354Z			27-32-11	ALL
	Z	10	BJ	W1171	5007R	24		34-22-19	ALL
	Z	10	BJ	W1171	5022R	24		34-22-39	ALL
	Z	10	BJ	W1171	5050R	24		34-21-11	ALL
	Z	10	BJ	W1171	5054R	24		34-13-11	ALL
	Z	10	BJ	W1171	5170R	24		34-13-11	ALL
	Z	10	BJ	W1171	5355R	24		34-12-62	ALL
	Z	101	BJ	W1171	5055B	24		34-51-11	ALL
	Z	101	BJ	W1171	5056B	24		34-51-11	ALL
	Z	101	BJ	W1171	5115B	24		34-61-23	ALL
	Z	101	BJ	W1171	5122B	24		34-61-12	ALL
	Z	102	BJ	W1171	5055R	24		34-51-11	ALL
	Z	102	BJ	W1171	5056R	24		34-51-11	ALL
	Z	102	BJ	W1171	5115R	24		34-61-23	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0201		AMY4100T-10U (continued)					E002-01/ /		001, 003-099
TB0201	A	285N0096-1 (continued)					E002-02/ /		ALL
TB0201	B	YHLZD-33 (continued)					E002-01/ /		001-099
TB0201	B	YHLZD-33 (continued)					E2-1/ /		115-199
TB0201	B	HLZD-33 (continued)					E002-001/ /		115-199
TB0201	D	YHLZD-33 (continued)					E002-001/ /		115-199
TB0201	E	YHLZD-33 (continued)					E002-001/ /		115-199
TB0201	F	BACM15C3B (continued)					E002-01/ /		ALL
TB0201	X	BACM15C3A (continued)					E002-01/ /		009-099
TB0201	Y	BACM15C3B (continued)					E002-01/ /		001-099
TB0201	Y	BACM15C3B (continued)					E2-1/ /		115-199
TB0201	Z	BACM15C3C (continued)					E002-01/ /		001-099
TB0201	Z	BACM15C3C (continued)					E2-1/ /		115-199
	Z	102	BJ	W1171	5122R	24		34-61-12	ALL
	Z	103	BJ	W1171	5051B	24		34-21-11	001-099
	Z	103	BJ	W1171	5082B	24		34-61-15	001-099
	Z	103	BJ	W1171	5095B	24		22-32-11	ALL
	Z	103	BJ	W1171	5101B	24		22-12-11	ALL
	Z	103	BJ	W1171	5139B	24		22-12-31	ALL
	Z	103	BJ	W1171	5152B	24		34-61-15	001-099
	Z	103	BJ	W1171	5158B	24		27-32-11	001-099
	Z	103	BJ	W1171	5211B	22		34-61-16	115-199
	Z	103	BJ	W1171	5215B	22		34-61-26	115-199
	Z	104	BJ	W1171	5051R	24		34-21-11	001-099
	Z	104	BJ	W1171	5082R	24		34-61-15	001-099
	Z	104	BJ	W1171	5095R	24		22-32-11	ALL
	Z	104	BJ	W1171	5101R	24		22-12-11	ALL
	Z	104	BJ	W1171	5139R	24		22-12-31	ALL
	Z	104	BJ	W1171	5152R	24		34-61-15	001-099
	Z	104	BJ	W1171	5158R	24		27-32-11	001-099
	Z	104	BJ	W1171	5211R	22		34-61-16	115-199
	Z	104	BJ	W1171	5215R	22		34-61-26	115-199
	Z	112	BJ	W1171	5051B	24		34-21-11	115-199
	Z	112	BJ	W1171	5082B	24		34-61-15	115-199
	Z	112	BJ	W1171	5152B	24		34-61-15	115-199
	Z	112	BJ	W1171	5210B	22		34-61-16	115-199
	Z	113	BJ	W1171	5051R	24		34-21-11	115-199
	Z	113	BJ	W1171	5082R	24		34-61-15	115-199
	Z	113	BJ	W1171	5152R	24		34-61-15	115-199
	Z	113	BJ	W1171	5210R	22		34-61-16	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 2

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0201		AMY4100T-10U (continued)					E002-01/ /		001, 003-099
TB0201	A	285N0096-1 (continued)					E002-02/ /		ALL
TB0201	B	YHLZD-33 (continued)					E002-01/ /		001-099
TB0201	B	YHLZD-33 (continued)					E2-1/ /		115-199
TB0201	B	HLZD-33 (continued)					E002-001/ /		115-199
TB0201	D	YHLZD-33 (continued)					E002-001/ /		115-199
TB0201	E	YHLZD-33 (continued)					E002-001/ /		115-199
TB0201	F	BACM15C3B (continued)					E002-01/ /		ALL
TB0201	X	BACM15C3A (continued)					E002-01/ /		009-099
TB0201	Y	BACM15C3B (continued)					E002-01/ /		001-099
TB0201	Y	BACM15C3B (continued)					E2-1/ /		115-199
TB0201	Z	BACM15C3C (continued)					E002-01/ /		001-099
TB0201	Z	BACM15C3C (continued)					E2-1/ /		115-199
	Z	114	BJ	W1171	0074	22		34-12-11	ALL
	Z	114	BJ	W1171	0303	22		34-12-11	ALL
	Z	114	BJ	W1171	0304	22		34-12-11	ALL
	Z	114	BJ	W1171	0307	22		34-12-11	ALL
	Z	114	BJ	W1171	0315	22		34-12-11	ALL
	Z	115	BJ	W1171	5034B	24		34-12-61	ALL
	Z	115	BJ	W1171	5040B	24		34-12-12	ALL
	Z	115	BJ	W1171	5058B	24		22-12-11	ALL
	Z	115	BJ	W1171	5094B	24		22-32-11	ALL
	Z	115	BJ	W1171	5096B	24		22-24-11	ALL
	Z	115	BJ	W1171	5143B	24		22-12-31	ALL
	Z	115	BJ	W1171	5149B	24		34-16-11	ALL
	Z	115	BJ	W1171	5248B	22		34-43-14	002
	Z	116	BJ	W1171	5034R	24		34-12-61	ALL
	Z	116	BJ	W1171	5040R	24		34-12-12	ALL
	Z	116	BJ	W1171	5058R	24		22-12-11	ALL
	Z	116	BJ	W1171	5094R	24		22-32-11	ALL
	Z	116	BJ	W1171	5096R	24		22-24-11	ALL
	Z	116	BJ	W1171	5143R	24		22-12-31	ALL
	Z	116	BJ	W1171	5149R	24		34-16-11	ALL
	Z	116	BJ	W1171	5248R	22		34-43-14	002
	Z	117	BJ	W1171	0081	24		34-12-12	ALL
	Z	117	BJ	W1171	5117B	24		34-61-23	ALL
	Z	117	BJ	W1171	5121B	24		34-61-12	ALL
	Z	117	BJ	W1171	5178B	24		34-22-29	ALL
	Z	118	BJ	W1171	0080	24		34-12-12	ALL
	Z	118	BJ	W1171	5117R	24		34-61-23	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 3

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0201		AMY4100T-10U (continued)					E002-01/ /		001, 003-099
TB0201	A	285N0096-1 (continued)					E002-02/ /		ALL
TB0201	B	YHLZD-33 (continued)					E002-01/ /		001-099
TB0201	B	YHLZD-33 (continued)					E2-1/ /		115-199
TB0201	B	HLZD-33 (continued)					E002-001/ /		115-199
TB0201	D	YHLZD-33 (continued)					E002-001/ /		115-199
TB0201	E	YHLZD-33 (continued)					E002-001/ /		115-199
TB0201	F	BACM15C3B (continued)					E002-01/ /		ALL
TB0201	X	BACM15C3A (continued)					E002-01/ /		009-099
TB0201	Y	BACM15C3B (continued)					E002-01/ /		001-099
TB0201	Y	BACM15C3B (continued)					E2-1/ /		115-199
TB0201	Z	BACM15C3C (continued)					E002-01/ /		001-099
TB0201	Z	BACM15C3C (continued)					E2-1/ /		115-199
	Z	118	BJ	W1171	5121R	24		34-61-12	ALL
	Z	118	BJ	W1171	5178R	24		34-22-29	ALL
	Z	119	BJ	W1171	0059	24		34-12-12	ALL
	Z	119	BJ	W1171	0081	24		34-12-12	ALL
	Z	119	BJ	W1171	5029B	24		31-41-12	ALL
	Z	119	BJ	W1171	5035B	24		34-53-21	ALL
	Z	119	BJ	W1171	5036B	24		34-53-11	ALL
	Z	119	BJ	W1171	5123B	24		22-24-21	ALL
	Z	119	BJ	W1171	5151B	24		34-21-21	ALL
	Z	120	BJ	W1171	0060	24		34-12-12	ALL
	Z	120	BJ	W1171	0080	24		34-12-12	ALL
	Z	120	BJ	W1171	5029R	24		31-41-12	ALL
	Z	120	BJ	W1171	5035R	24		34-53-21	ALL
	Z	120	BJ	W1171	5036R	24		34-53-11	ALL
	Z	120	BJ	W1171	5123R	24		22-24-21	ALL
	Z	120	BJ	W1171	5151R	24		34-21-21	ALL
	Z	121	BJ	W1171	0059	24		34-12-12	ALL
	Z	121	BJ	W1171	5041B	24		34-12-12	ALL
	Z	121	BJ	W1171	5042B	24		34-12-12	ALL
	Z	121	BJ	W1171	5052B	24		34-13-21	ALL
	Z	121	BJ	W1171	5065B	24		34-46-12	ALL
	Z	122	BJ	W1171	0060	24		34-12-12	ALL
	Z	122	BJ	W1171	5041R	24		34-12-12	ALL
	Z	122	BJ	W1171	5042R	24		34-12-12	ALL
	Z	122	BJ	W1171	5052R	24		34-13-21	ALL
	Z	122	BJ	W1171	5065R	24		34-46-12	ALL
	Z	13	BJ	W1171	0385	22		34-61-13	011-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 4

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0201		AMY4100T-10U (continued)					E002-01/ /		001, 003-099
TB0201	A	285N0096-1 (continued)					E002-02/ /		ALL
TB0201	B	YHLZD-33 (continued)					E002-01/ /		001-099
TB0201	B	YHLZD-33 (continued)					E2-1/ /		115-199
I TB0201	B	HLZD-33 (continued)					E002-001/ /		115-199
I TB0201	D	YHLZD-33 (continued)					E002-001/ /		115-199
I TB0201	E	YHLZD-33 (continued)					E002-001/ /		115-199
I TB0201	F	BACM15C3B (continued)					E002-01/ /		ALL
I TB0201	X	BACM15C3A (continued)					E002-01/ /		009-099
I TB0201	Y	BACM15C3B (continued)					E002-01/ /		001-099
TB0201	Y	BACM15C3B (continued)					E2-1/ /		115-199
TB0201	Z	BACM15C3C (continued)					E002-01/ /		001-099
TB0201	Z	BACM15C3C (continued)					E2-1/ /		115-199
	Z	13	BJ	W1171	0386	22		34-61-13	011-099
	Z	13	BJ	W1171	0387	22		34-61-13	011-099
	Z	13	BJ	W1171	0546	24		34-61-13	011-099
	Z	14	BJ	W1171	0326	22		34-61-13	011-099
	Z	14	BJ	W1171	0599	22		34-61-13	011-099
	Z	14	BJ	W1171	0617	22		34-61-13	011-099
	Z	22	BJ	W1171	0452	24		34-45-01	001-002, 115-199
	Z	22	BJ	W1171	0454	24		34-45-01	001-002, 115-199
	Z	22	BJ	W1171	0457	24		34-45-01	001-002, 115-199
	Z	22	BJ	W1171	0462	24		34-45-01	001-002, 115-199
	Z	22	BJ	W1171	0465	24		34-45-01	001-002, 115-199
	Z	22	BJ	W1171	0466	24		34-45-02	001-002, 115-199
	Z	23	BJ	W1171	5188B	24		34-45-01	ALL
	Z	23	BJ	W1171	5195B	24		34-45-01	ALL
	Z	23	BJ	W1171	5196B	24		34-45-01	ALL
	Z	23	BJ	W1171	5199B	24		34-45-01	003-099
	Z	24	BJ	W1171	5188R	24		34-45-01	ALL
	Z	24	BJ	W1171	5195R	24		34-45-01	ALL
	Z	24	BJ	W1171	5196R	24		34-45-01	ALL
	Z	24	BJ	W1171	5199R	24		34-45-01	003-099
	Z	33	BJ	W1171	5190B	24		34-45-01	ALL
	Z	33	BJ	W1171	5191B	24		34-45-01	ALL
	Z	33	BJ	W1171	5192B	24		34-45-01	ALL
	Z	33	BJ	W1171	5193B	24		34-45-01	ALL
	Z	33	BJ	W1171	5194B	24		34-45-01	ALL
	Z	34	BJ	W1171	5190R	24		34-45-01	ALL
	Z	34	BJ	W1171	5191R	24		34-45-01	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 5

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
							CO		
TB0201		AMY4100T-10U (continued)					E002-01/ /		001, 003-099
TB0201	A	285N0096-1 (continued)					E002-02/ /		ALL
TB0201	B	YHLZD-33 (continued)					E002-01/ /		001-099
TB0201	B	YHLZD-33 (continued)					E2-1/ /		115-199
TB0201	B	HLZD-33 (continued)					E002-001/ /		115-199
TB0201	D	YHLZD-33 (continued)					E002-001/ /		115-199
TB0201	E	YHLZD-33 (continued)					E002-001/ /		115-199
TB0201	F	BACM15C3B (continued)					E002-01/ /		ALL
TB0201	X	BACM15C3A (continued)					E002-01/ /		009-099
TB0201	Y	BACM15C3B (continued)					E002-01/ /		001-099
TB0201	Y	BACM15C3B (continued)					E2-1/ /		115-199
TB0201	Z	BACM15C3C (continued)					E002-01/ /		001-099
TB0201	Z	BACM15C3C (continued)					E2-1/ /		115-199
	Z	34	BJ	W1171	5192R	24		34-45-01	ALL
	Z	34	BJ	W1171	5193R	24		34-45-01	ALL
	Z	34	BJ	W1171	5194R	24		34-45-01	ALL
	Z	39	BJ	W1171	0157	22		34-61-14	011-099
	Z	39	BJ	W1171	0376	22		34-61-14	011-099
	Z	39	BJ	W1171	0381	22		34-61-14	011-099
	Z	39	BJ	W1171	0383	22		34-61-14	011-099
	Z	39	BJ	W1171	0505	22		34-61-14	011-099
	Z	39	BJ	W1171	0506	22		34-61-14	011-099
	Z	40	BJ	W1171	0155	22		34-61-14	011-099
	Z	40	BJ	W1171	0156	22		34-61-14	011-099
	Z	40	BJ	W1171	0382	22		34-61-14	011-099
	Z	40	BJ	W1171	0615	22		34-61-14	011-099
	Z	47	BJ	W1171	5011B	24		34-22-19	ALL
	Z	47	BJ	W1171	5012B	24		34-33-11	ALL
	Z	47	BJ	W1171	5028B	24		31-41-12	ALL
	Z	47	BJ	W1171	5043B	24		31-31-43	001-099
	Z	47	BJ	W1171	5043B	24		31-31-22	115-199
	Z	47	BJ	W1171	5044B	24		31-51-34	009, 115-199
	Z	47	BJ	W1171	5063B	24		34-46-12	001, 003-099, 115-199
	Z	47	BJ	W1171	5093B	24		31-51-21	ALL
	Z	47	BJ	W1171	5165B	24		34-45-02	ALL
	Z	47	BJ	W1171	8761	22		34-43-14	002
	Z	48	BJ	W1171	5011R	24		34-22-19	ALL
	Z	48	BJ	W1171	5012R	24		34-33-11	ALL
	Z	48	BJ	W1171	5028R	24		31-41-12	ALL
	Z	48	BJ	W1171	5043R	24		31-31-43	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 6

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0201		AMY4100T-10U (continued)					E002-01/ /		001, 003-099
TB0201	A	285N0096-1 (continued)					E002-02/ /		ALL
TB0201	B	YHLZD-33 (continued)					E002-01/ /		001-099
TB0201	B	YHLZD-33 (continued)					E2-1/ /		115-199
I TB0201	B	HLZD-33 (continued)					E002-001/ /		115-199
I TB0201	D	YHLZD-33 (continued)					E002-001/ /		115-199
I TB0201	E	YHLZD-33 (continued)					E002-001/ /		115-199
I TB0201	F	BACM15C3B (continued)					E002-01/ /		ALL
I TB0201	X	BACM15C3A (continued)					E002-01/ /		009-099
I TB0201	Y	BACM15C3B (continued)					E002-01/ /		001-099
TB0201	Y	BACM15C3B (continued)					E2-1/ /		115-199
TB0201	Z	BACM15C3C (continued)					E002-01/ /		001-099
TB0201	Z	BACM15C3C (continued)					E2-1/ /		115-199
	Z	48	BJ	W1171	5043R	24		31-31-22	115-199
	Z	48	BJ	W1171	5044R	24		31-51-34	009, 115-199
	Z	48	BJ	W1171	5063R	24		34-46-12	001, 003-099, 115-199
	Z	48	BJ	W1171	5093R	24		31-51-21	ALL
	Z	48	BJ	W1171	5165R	24		34-45-02	ALL
	Z	48	BJ	W1171	8762	22		34-43-14	002
I	Z	49	BJ	W1171	5013B	24		34-22-28	001-099
	Z	49	BJ	W1171	5014B	24		34-22-18	ALL
	Z	49	BJ	W1171	5015B	24		34-61-15	ALL
	Z	49	BJ	W1171	5134B	24		34-22-38	ALL
	Z	49	BJ	W1171	5142B	24		31-31-42	001-099
	Z	49	BJ	W1171	5173B	24		34-46-12	ALL
	A	5		W1171	A-BL			73-21-12	ALL
	A	5		W1171	A-GR			73-21-12	ALL
	A	5		W1171	A-RD			73-21-12	ALL
	A	5		W1171	A-YL			73-21-12	ALL
I	Z	50	BJ	W1171	5013R	24		34-22-28	001-099
	Z	50	BJ	W1171	5014R	24		34-22-18	ALL
	Z	50	BJ	W1171	5015R	24		34-61-15	ALL
	Z	50	BJ	W1171	5134R	24		34-22-38	ALL
	Z	50	BJ	W1171	5142R	24		31-31-42	001-099
	Z	50	BJ	W1171	5173R	24		34-46-12	ALL
	Z	51	BJ	W1171	0015	24		34-22-17	ALL
	Z	51	BJ	W1171	0016	24		34-22-17	ALL
	Z	51	BJ	W1171	0043	24		34-22-37	ALL
	Z	51	BJ	W1171	0045	22		34-43-11	ALL
	Z	51	BJ	W1171	0046	24		31-31-61	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 7

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
							CO		
TB0201		AMY4100T-10U (continued)					E002-01/ /		001, 003-099
TB0201	A	285N0096-1 (continued)					E002-02/ /		ALL
TB0201	B	YHLZD-33 (continued)					E002-01/ /		001-099
TB0201	B	YHLZD-33 (continued)					E2-1/ /		115-199
TB0201	B	HLZD-33 (continued)					E002-001/ /		115-199
TB0201	D	YHLZD-33 (continued)					E002-001/ /		115-199
TB0201	E	YHLZD-33 (continued)					E002-001/ /		115-199
TB0201	F	BACM15C3B (continued)					E002-01/ /		ALL
TB0201	X	BACM15C3A (continued)					E002-01/ /		009-099
TB0201	Y	BACM15C3B (continued)					E002-01/ /		001-099
TB0201	Y	BACM15C3B (continued)					E2-1/ /		115-199
TB0201	Z	BACM15C3C (continued)					E002-01/ /		001-099
TB0201	Z	BACM15C3C (continued)					E2-1/ /		115-199
	Z	51	BJ	W1171	0046	24		31-31-31	115-199
	Z	52	BJ	W1171	0013	24		34-22-17	ALL
	Z	52	BJ	W1171	0014	24		34-22-17	ALL
	Z	52	BJ	W1171	0042	24		34-22-37	ALL
	Z	52	BJ	W1171	0047	24		31-31-61	001-099
	Z	52	BJ	W1171	0047	24		31-31-31	115-199
	Z	52	BJ	W1171	0713	22		34-61-25	115-199
	Z	53	BJ	W1171	5001B	24		34-22-14	ALL
	Z	53	BJ	W1171	5002B	24		34-22-14	ALL
	Z	53	BJ	W1171	5016B	24		34-43-11	001, 003-099, 115-199
	Z	53	BJ	W1171	5021B	24		34-22-35	ALL
	Z	53	BJ	W1171	5079B	24		34-61-14	ALL
	Z	53	BJ	W1171	5207B	24		34-61-11	001-099
	Z	53	BJ	W1171	5207B	22		34-61-11	115-199
	Z	53	BJ	W1171	5212B	24		34-61-24	001-099
	Z	53	BJ	W1171	5212B	22		34-61-24	115-199
	Z	53	BJ	W1171	5313B	24		31-31-43	001-009
	Z	54	BJ	W1171	5001R	24		34-22-14	ALL
	Z	54	BJ	W1171	5002R	24		34-22-14	ALL
	Z	54	BJ	W1171	5016R	24		34-43-11	001, 003-099, 115-199
	Z	54	BJ	W1171	5021R	24		34-22-35	ALL
	Z	54	BJ	W1171	5079R	24		34-61-14	ALL
	Z	54	BJ	W1171	5207R	24		34-61-11	001-099
	Z	54	BJ	W1171	5207R	22		34-61-11	115-199
	Z	54	BJ	W1171	5212R	24		34-61-24	001-099
	Z	54	BJ	W1171	5212R	22		34-61-24	115-199
	Z	54	BJ	W1171	5313R	24		31-31-43	001-009

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 8

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0201		AMY4100T-10U (continued)					E002-01/ /		001, 003-099
TB0201	A	285N0096-1 (continued)					E002-02/ /		ALL
TB0201	B	YHLZD-33 (continued)					E002-01/ /		001-099
TB0201	B	YHLZD-33 (continued)					E2-1/ /		115-199
I TB0201	B	HLZD-33 (continued)					E002-001/ /		115-199
I TB0201	D	YHLZD-33 (continued)					E002-001/ /		115-199
I TB0201	E	YHLZD-33 (continued)					E002-001/ /		115-199
I TB0201	F	BACM15C3B (continued)					E002-01/ /		ALL
I TB0201	X	BACM15C3A (continued)					E002-01/ /		009-099
I TB0201	Y	BACM15C3B (continued)					E002-01/ /		001-099
TB0201	Y	BACM15C3B (continued)					E2-1/ /		115-199
TB0201	Z	BACM15C3C (continued)					E002-01/ /		001-099
TB0201	Z	BACM15C3C (continued)					E2-1/ /		115-199
	Z	55	BJ	W1171	5008B	24		34-22-19	ALL
	Z	55	BJ	W1171	5009B	24		34-31-11	ALL
	Z	55	BJ	W1171	5062B	24		34-46-12	ALL
	Z	55	BJ	W1171	5119B	24		34-61-12	ALL
	Z	55	BJ	W1171	5141B	24		31-31-22	115-199
	Z	55	BJ	W1171	5229B	24		31-31-43	001-099
	Z	56	BJ	W1171	5008R	24		34-22-19	ALL
	Z	56	BJ	W1171	5009R	24		34-31-11	ALL
	Z	56	BJ	W1171	5062R	24		34-46-12	ALL
	Z	56	BJ	W1171	5119R	24		34-61-12	ALL
	Z	56	BJ	W1171	5141R	24		31-31-22	115-199
	Z	56	BJ	W1171	5229R	24		31-31-43	001-099
	Z	61	BJ	W1171	2012R	20		22-11-11	ALL
	Z	61	BJ	W1171	2013R	22		22-11-11	ALL
	Z	61	BJ	W1171	2014R	22		22-11-11	ALL
	Z	61	BJ	W1171	2015R	22		22-11-11	ALL
	Z	61	BJ	W1171	2016R	22		22-11-11	ALL
	Z	62	BJ	W1171	2012B	20		22-11-11	ALL
	Z	62	BJ	W1171	2013B	22		22-11-11	ALL
	Z	62	BJ	W1171	2014B	22		22-11-11	ALL
	Z	62	BJ	W1171	2015B	22		22-11-11	ALL
	Z	62	BJ	W1171	2016B	22		22-11-11	ALL
	A	7		W1171	B-BL			73-21-12	ALL
	A	7		W1171	B-GR			73-21-12	ALL
	A	7		W1171	B-RD			73-21-12	ALL
	A	7		W1171	B-YL			73-21-12	ALL
	Z	73	BJ	W1171	5005B	24		34-22-19	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 9

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0201		AMY4100T-10U (continued)					E002-01/ /		001, 003-099
TB0201	A	285N0096-1 (continued)					E002-02/ /		ALL
TB0201	B	YHLZD-33 (continued)					E002-01/ /		001-099
TB0201	B	YHLZD-33 (continued)					E2-1/ /		115-199
TB0201	B	HLZD-33 (continued)					E002-001/ /		115-199
TB0201	D	YHLZD-33 (continued)					E002-001/ /		115-199
TB0201	E	YHLZD-33 (continued)					E002-001/ /		115-199
TB0201	F	BACM15C3B (continued)					E002-01/ /		ALL
TB0201	X	BACM15C3A (continued)					E002-01/ /		009-099
TB0201	Y	BACM15C3B (continued)					E002-01/ /		001-099
TB0201	Y	BACM15C3B (continued)					E2-1/ /		115-199
TB0201	Z	BACM15C3C (continued)					E002-01/ /		001-099
TB0201	Z	BACM15C3C (continued)					E2-1/ /		115-199
	Z	73	BJ	W1171	5006B	24		34-22-19	001-099
	Z	73	BJ	W1171	5024B	24		34-22-39	001-099
	Z	73	BJ	W1171	5037B	24		34-22-81	001-099
	Z	73	BJ	W1171	5141B	24		31-31-43	001-099
	Z	74	BJ	W1171	5005R	24		34-22-19	001-099
	Z	74	BJ	W1171	5006R	24		34-22-19	001-099
	Z	74	BJ	W1171	5024R	24		34-22-39	001-099
	Z	74	BJ	W1171	5037R	24		34-22-81	001-099
	Z	74	BJ	W1171	5141R	24		31-31-43	001-099
	Z	75	BJ	W1171	5003B	24		34-22-19	001-099
	Z	75	BJ	W1171	5004B	24		34-22-19	001-099
	Z	75	BJ	W1171	5023B	24		34-22-39	001-099
	Z	75	BJ	W1171	5038B	24		34-22-81	001-099
	Z	75	BJ	W1171	5312B	24		31-31-43	001-099
	Z	76	BJ	W1171	5003R	24		34-22-19	001-099
	Z	76	BJ	W1171	5004R	24		34-22-19	001-099
	Z	76	BJ	W1171	5023R	24		34-22-39	001-099
	Z	76	BJ	W1171	5038R	24		34-22-81	001-099
	Z	76	BJ	W1171	5312R	24		31-31-43	001-099
	Z	79	BJ	W1171	5083B	24		34-61-15	ALL
	Z	79	BJ	W1171	5084B	24		34-61-15	ALL
	Z	79	BJ	W1171	5085B	24		34-61-15	ALL
	Z	79	BJ	W1171	5092B	24		22-41-11	ALL
	Z	79	BJ	W1171	5142B	24		31-31-22	115-199
	Z	79	BJ	W1171	5154B	24		34-61-25	ALL
	Z	79	BJ	W1171	5214B	22		34-61-26	115-199
	Z	80	BJ	W1171	5083R	24		34-61-15	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 10

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0201		AMY4100T-10U (continued)					E002-01/ /		001, 003-099
TB0201	A	285N0096-1 (continued)					E002-02/ /		ALL
TB0201	B	YHLZD-33 (continued)					E002-01/ /		001-099
TB0201	B	YHLZD-33 (continued)					E2-1/ /		115-199
I TB0201	B	HLZD-33 (continued)					E002-001/ /		115-199
I TB0201	D	YHLZD-33 (continued)					E002-001/ /		115-199
I TB0201	E	YHLZD-33 (continued)					E002-001/ /		115-199
I TB0201	F	BACM15C3B (continued)					E002-01/ /		ALL
I TB0201	X	BACM15C3A (continued)					E002-01/ /		009-099
I TB0201	Y	BACM15C3B (continued)					E002-01/ /		001-099
TB0201	Y	BACM15C3B (continued)					E2-1/ /		115-199
TB0201	Z	BACM15C3C (continued)					E002-01/ /		001-099
TB0201	Z	BACM15C3C (continued)					E2-1/ /		115-199
	Z	80	BJ	W1171	5084R	24		34-61-15	ALL
	Z	80	BJ	W1171	5085R	24		34-61-15	ALL
	Z	80	BJ	W1171	5092R	24		22-41-11	ALL
	Z	80	BJ	W1171	5142R	24		31-31-22	115-199
I	Z	80	BJ	W1171	5154R	24		34-61-25	ALL
	Z	80	BJ	W1171	5214R	22		34-61-26	115-199
	Z	89	BJ	W1171	0687	20		34-12-12	011-099
	Z	89	BJ	W1171	0756	22		34-12-12	011-099
	Z	9	BJ	W1171	5007B	24		34-22-19	ALL
	Z	9	BJ	W1171	5022B	24		34-22-39	ALL
	Z	9	BJ	W1171	5050B	24		34-21-11	ALL
	Z	9	BJ	W1171	5054B	24		34-13-11	ALL
	Z	9	BJ	W1171	5170B	24		34-13-11	ALL
	Z	9	BJ	W1171	5355B	24		34-12-62	ALL
	Z	90	BJ	W1171	0064	22		34-12-12	011-099
	Z	90	BJ	W1171	0688	20		34-12-12	011-099
	Z	91	BJ	W1171	0377	22		34-61-14	011-099
	Z	91	BJ	W1171	0378	22		34-61-14	011-099
	Z	91	BJ	W1171	0379	22		34-61-14	011-099
	Z	91	BJ	W1171	0437	22		34-61-14	011-099
	Z	92	BJ	W1171	0616	22		34-61-14	011-099
	Z	93	BJ	W1171	5031B	24		31-31-43	001-099
	Z	93	BJ	W1171	5031B	24		31-31-21	115-199
	Z	93	BJ	W1171	5064B	24		34-46-12	ALL
	Z	93	BJ	W1171	5118B	24		34-61-23	ALL
	Z	93	BJ	W1171	5128B	24		34-61-12	ALL
	Z	93	BJ	W1171	5129B	24		34-61-12	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 11

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0201		AMY4100T-10U (continued)					E002-01/ /		001, 003-099
TB0201	A	285N0096-1 (continued)					E002-02/ /		ALL
TB0201	B	YHLZD-33 (continued)					E002-01/ /		001-099
TB0201	B	YHLZD-33 (continued)					E2-1/ /		115-199
TB0201	B	HLZD-33 (continued)					E002-001/ /		115-199
TB0201	D	YHLZD-33 (continued)					E002-001/ /		115-199
TB0201	E	YHLZD-33 (continued)					E002-001/ /		115-199
TB0201	F	BACM15C3B (continued)					E002-01/ /		ALL
TB0201	X	BACM15C3A (continued)					E002-01/ /		009-099
TB0201	Y	BACM15C3B (continued)					E002-01/ /		001-099
TB0201	Y	BACM15C3B (continued)					E2-1/ /		115-199
TB0201	Z	BACM15C3C (continued)					E002-01/ /		001-099
TB0201	Z	BACM15C3C (continued)					E2-1/ /		115-199
	Z	93	BJ	W1171	5206B	22		34-61-11	115-199
	Z	94	BJ	W1171	5031R	24		31-31-43	001-099
	Z	94	BJ	W1171	5031R	24		31-31-21	115-199
	Z	94	BJ	W1171	5064R	24		34-46-12	ALL
	Z	94	BJ	W1171	5118R	24		34-61-23	ALL
	Z	94	BJ	W1171	5128R	24		34-61-12	ALL
	Z	94	BJ	W1171	5129R	24		34-61-12	ALL
	Z	94	BJ	W1171	5206R	22		34-61-11	115-199
	Z	95	BJ	W1171	5116B	24		34-61-23	ALL
	Z	95	BJ	W1171	5124B	24		34-61-12	ALL
	Z	95	BJ	W1171	5125B	24		34-61-12	ALL
	Z	96	BJ	W1171	5116R	24		34-61-23	ALL
	Z	96	BJ	W1171	5124R	24		34-61-12	ALL
	Z	96	BJ	W1171	5125R	24		34-61-12	ALL
	X	A001	BJ	W1171	0626	22		22-11-13	009
	X	A002	BJ	W1171	0626	22		22-11-13	010-099
	X	A002	BJ	W1171	0652	22		22-11-13	009-099
	X	A003	BJ	W1171	0630	22		22-11-13	009-099
	X	A004	BJ	W1171	0657	22		22-11-13	009-099
	Y	A011	BJ	W1171	5098B	24		22-22-11	ALL
	Y	A011	BJ	W1171	5099B	24		22-12-11	ALL
	Y	A011	BJ	W1171	5100B	24		22-12-11	ALL
	Y	A012	BJ	W1171	5098R	24		22-22-11	ALL
	Y	A012	BJ	W1171	5099R	24		22-12-11	ALL
	Y	A012	BJ	W1171	5100R	24		22-12-11	ALL
	Y	A015	BJ	W1171	2541R	24		73-21-12	ALL
	Y	A015	BJ	W1171	A-RD			73-21-12	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 12

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0201		AMY4100T-10U (continued)					E002-01/ /		001, 003-099
TB0201	A	285N0096-1 (continued)					E002-02/ /		ALL
TB0201	B	YHLZD-33 (continued)					E002-01/ /		001-099
TB0201	B	YHLZD-33 (continued)					E2-1/ /		115-199
TB0201	B	HLZD-33 (continued)					E002-001/ /		115-199
TB0201	D	YHLZD-33 (continued)					E002-001/ /		115-199
TB0201	E	YHLZD-33 (continued)					E002-001/ /		115-199
TB0201	F	BACM15C3B (continued)					E002-01/ /		ALL
TB0201	X	BACM15C3A (continued)					E002-01/ /		009-099
TB0201	Y	BACM15C3B (continued)					E002-01/ /		001-099
TB0201	Y	BACM15C3B (continued)					E2-1/ /		115-199
TB0201	Z	BACM15C3C (continued)					E002-01/ /		001-099
TB0201	Z	BACM15C3C (continued)					E2-1/ /		115-199
	Y	A016	BJ	W1171	2540R	24		73-21-12	ALL
	Y	A016	BJ	W1171	A-BL			73-21-12	ALL
	X	A017	BJ	W1171	0634	22		22-11-13	009-099
	X	A018	BJ	W1171	0661	22		22-11-13	009-099
	X	A019	BJ	W1171	0638	22		22-11-13	009-099
	X	A020	BJ	W1171	0665	22		22-11-13	009-099
	F	A021	2	W1171	0883	22		34-12-61	ALL
	F	A021	2	W1171	0884	22		34-12-61	ALL
	Y	A025	BJ	W1171	5078B	24		34-61-14	ALL
	Y	A025	BJ	W1171	5109B	24		22-13-11	ALL
	Y	A025	BJ	W1171	5110B	24		22-13-11	ALL
	Y	A025	BJ	W1171	5111B	24		22-13-11	ALL
	Y	A026	BJ	W1171	5078R	24		34-61-14	ALL
	Y	A026	BJ	W1171	5109R	24		22-13-11	ALL
	Y	A026	BJ	W1171	5110R	24		22-13-11	ALL
	Y	A026	BJ	W1171	5111R	24		22-13-11	ALL
	Y	A030	BJ	W1171	5076R	24		34-61-14	ALL
	Y	A030	BJ	W1171	5171R	24		22-33-11	ALL
	Y	A030	BJ	W1171	5172R	24		34-61-14	ALL
	Y	A031	BJ	W1171	0444	24		34-45-01	001-099
	Y	A031	BJ	W1171	0453	24		34-45-01	ALL
	Y	A031	BJ	W1171	0457	24		34-45-01	003-099
	Y	A031	BJ	W1171	0463	24		34-45-01	ALL
	Y	A031	BJ	W1171	0464	24		34-45-01	115-199
	Y	A032	BJ	W1171	0455	24		34-45-01	001-099
	Y	A032	BJ	W1171	0456	24		34-45-01	ALL
	Y	A032	BJ	W1171	0458	24		34-45-01	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 13

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0201		AMY4100T-10U (continued)					E002-01/ /		001, 003-099
TB0201	A	285N0096-1 (continued)					E002-02/ /		ALL
TB0201	B	YHLZD-33 (continued)					E002-01/ /		001-099
TB0201	B	YHLZD-33 (continued)					E2-1/ /		115-199
I TB0201	B	HLZD-33 (continued)					E002-001/ /		115-199
I TB0201	D	YHLZD-33 (continued)					E002-001/ /		115-199
I TB0201	E	YHLZD-33 (continued)					E002-001/ /		115-199
I TB0201	F	BACM15C3B (continued)					E002-01/ /		ALL
I TB0201	X	BACM15C3A (continued)					E002-01/ /		009-099
I TB0201	Y	BACM15C3B (continued)					E002-01/ /		001-099
TB0201	Y	BACM15C3B (continued)					E2-1/ /		115-199
TB0201	Z	BACM15C3C (continued)					E002-01/ /		001-099
TB0201	Z	BACM15C3C (continued)					E2-1/ /		115-199
	Y	A032	BJ	W1171	0459	24		34-45-01	115-199
	Y	A032	BJ	W1171	0460	24		34-45-01	ALL
	Y	A035	BJ	W1171	0494	22		34-22-16	ALL
	Y	A035	BJ	W1171	0495	22		34-22-16	ALL
	Y	A035	BJ	W1171	0496	22		34-22-16	ALL
	Y	A037	BJ	W1171	5048B	24		34-51-11	ALL
	Y	A037	BJ	W1171	5049B	24		34-55-11	ALL
	Y	A037	BJ	W1171	5153B	24		34-61-15	ALL
	Y	A037	BJ	W1171	5313B	24		31-31-43	010-099
	Y	A038	BJ	W1171	5048R	24		34-51-11	ALL
	Y	A038	BJ	W1171	5049R	24		34-55-11	ALL
	Y	A038	BJ	W1171	5153R	24		34-61-15	ALL
	Y	A038	BJ	W1171	5313R	24		31-31-43	010-099
	Y	A041	BJ	W1171	2542B	24		73-21-22	ALL
	Y	A041	BJ	W1171	B-BL			73-21-12	ALL
	Y	A042	BJ	W1171	2542R	24		73-21-22	ALL
	Y	A042	BJ	W1171	A-GR			73-21-12	ALL
	X	A043	BJ	W1171	0643	22		22-11-13	009-099
	X	A044	BJ	W1171	0669	22		22-11-13	009-099
	X	A045	BJ	W1171	0647	22		22-11-13	009-099
	X	A046	BJ	W1171	0673	22		22-11-13	009-099
	Y	A063	BJ	W1171	5181R	24		34-22-18	115-199
	Y	A063	BJ	W1171	5182R	24		34-22-18	115-199
	Y	A063	BJ	W1171	5184R	24		34-22-38	115-199
	Y	A065	BJ	W1171	0733	24		34-22-19	001-099
	Y	A065	BJ	W1171	0734	24		34-22-19	001-099
	Y	A065	BJ	W1171	0735	24		34-22-39	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 14

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0201		AMY4100T-10U (continued)					E002-01/ /		001, 003-099
TB0201	A	285N0096-1 (continued)					E002-02/ /		ALL
TB0201	B	YHLZD-33 (continued)					E002-01/ /		001-099
TB0201	B	YHLZD-33 (continued)					E2-1/ /		115-199
TB0201	B	HLZD-33 (continued)					E002-001/ /		115-199
TB0201	D	YHLZD-33 (continued)					E002-001/ /		115-199
TB0201	E	YHLZD-33 (continued)					E002-001/ /		115-199
TB0201	F	BACM15C3B (continued)					E002-01/ /		ALL
TB0201	X	BACM15C3A (continued)					E002-01/ /		009-099
TB0201	Y	BACM15C3B (continued)					E002-01/ /		001-099
TB0201	Y	BACM15C3B (continued)					E2-1/ /		115-199
TB0201	Z	BACM15C3C (continued)					E002-01/ /		001-099
TB0201	Z	BACM15C3C (continued)					E2-1/ /		115-199
	Y	A065	BJ	W1171	0736	24		34-22-29	001-099
	Y	A066	BJ	W1171	5033R	24		27-32-11	001-099
	Y	A066	BJ	W1171	5353R	24		27-32-11	001-099
	Y	A066	BJ	W1171	5354R	24		27-32-11	001-099
	B	A068	1A	W1171	0513	22		34-61-15	115-199
	D	A069	2	W1171	0515	22		34-61-16	115-199
	E	A070	2	W1171	0514	22		34-61-16	115-199
	Y	A071	BJ	W1171	5032B	24		31-31-41	001-099
	Y	A071	BJ	W1171	5032B	24		31-31-21	115-199
	Y	A071	BJ	W1171	5137B	24		34-25-11	001, 003-099, 115-199
	Y	A071	BJ	W1171	5138B	24		34-22-19	001, 003-099, 115-199
	Y	A071	BJ	W1171	5138B	22		34-25-12	002
	Y	A071	BJ	W1171	5232B	22		34-25-12	002
	Y	A071	BJ	W1171	5234B	22		34-25-12	002
	Y	A072	BJ	W1171	5032R	24		31-31-41	001-099
	Y	A072	BJ	W1171	5032R	24		31-31-21	115-199
	Y	A072	BJ	W1171	5137R	24		34-25-11	001, 003-099, 115-199
	Y	A072	BJ	W1171	5138R	24		34-22-19	001, 003-099, 115-199
	Y	A072	BJ	W1171	5138R	22		34-25-12	002
	Y	A072	BJ	W1171	5232R	22		34-25-12	002
	Y	A072	BJ	W1171	5234R	22		34-25-12	002
	Y	A073	BJ	W1171	5005B	24		34-22-19	115-199
	Y	A073	BJ	W1171	5006B	24		34-22-19	115-199
	Y	A073	BJ	W1171	5024B	24		34-22-39	115-199
	Y	A073	BJ	W1171	5057B	24		34-55-11	115-199
	Y	A074	BJ	W1171	5005R	24		34-22-19	115-199
	Y	A074	BJ	W1171	5006R	24		34-22-19	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 15

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0201		AMY4100T-10U (continued)					E002-01/ /		001, 003-099
TB0201	A	285N0096-1 (continued)					E002-02/ /		ALL
TB0201	B	YHLZD-33 (continued)					E002-01/ /		001-099
TB0201	B	YHLZD-33 (continued)					E2-1/ /		115-199
I TB0201	B	HLZD-33 (continued)					E002-001/ /		115-199
I TB0201	D	YHLZD-33 (continued)					E002-001/ /		115-199
I TB0201	E	YHLZD-33 (continued)					E002-001/ /		115-199
I TB0201	F	BACM15C3B (continued)					E002-01/ /		ALL
I TB0201	X	BACM15C3A (continued)					E002-01/ /		009-099
I TB0201	Y	BACM15C3B (continued)					E002-01/ /		001-099
TB0201	Y	BACM15C3B (continued)					E2-1/ /		115-199
TB0201	Z	BACM15C3C (continued)					E002-01/ /		001-099
TB0201	Z	BACM15C3C (continued)					E2-1/ /		115-199
	Y	A074	BJ	W1171	5024R	24		34-22-39	115-199
	Y	A074	BJ	W1171	5057R	24		34-55-11	115-199
	Y	A077	BJ	W1171	5033R	24		27-32-11	115-199
	Y	A077	BJ	W1171	5353R	24		27-32-11	115-199
	Y	A077	BJ	W1171	5354R	24		27-32-11	115-199
	Y	A078	BJ	W1171	5033B	24		27-32-11	115-199
	Y	A078	BJ	W1171	5353B	24		27-32-11	115-199
	Y	A078	BJ	W1171	5354B	24		27-32-11	115-199
	X	A085	BJ	W1171	0198	24		34-12-12	011-099
	X	A086	BJ	W1171	0682	22		34-12-12	011-099
	X	A087	BJ	W1171	0624	22		34-12-12	011-099
	X	A088	BJ	W1171	0678	22		34-12-12	011-099
	B	A105	2	W1171	0109	16		75-31-11	ALL
I	Y	A30	BJ	W1171	5221R	22		34-61-24	115-199
	X	B002	BJ	W1171	0627	22		22-11-13	009-099
	X	B002	BJ	W1171	0653	22		22-11-13	009-099
	X	B003	BJ	W1171	0631	22		22-11-13	009-099
	X	B004	BJ	W1171	0658	22		22-11-13	009-099
	X	B017	BJ	W1171	0635	22		22-11-13	009-099
	X	B018	BJ	W1171	0662	22		22-11-13	009-099
	X	B019	BJ	W1171	0639	22		22-11-13	009
	X	B020	BJ	W1171	0639	22		22-11-13	010-099
	X	B020	BJ	W1171	0666	22		22-11-13	009-099
	X	B043	BJ	W1171	0644	22		22-11-13	009-099
	X	B044	BJ	W1171	0670	22		22-11-13	009-099
	X	B045	BJ	W1171	0648	22		22-11-13	009-099
	X	B046	BJ	W1171	0674	22		22-11-13	009-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 16

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0201		AMY4100T-10U (continued)					E002-01/ /		001, 003-099
TB0201	A	285N0096-1 (continued)					E002-02/ /		ALL
TB0201	B	YHLZD-33 (continued)					E002-01/ /		001-099
TB0201	B	YHLZD-33 (continued)					E2-1/ /		115-199
I TB0201	B	HLZD-33 (continued)					E002-001/ /		115-199
I TB0201	D	YHLZD-33 (continued)					E002-001/ /		115-199
I TB0201	E	YHLZD-33 (continued)					E002-001/ /		115-199
I TB0201	F	BACM15C3B (continued)					E002-01/ /		ALL
I TB0201	X	BACM15C3A (continued)					E002-01/ /		009-099
I TB0201	Y	BACM15C3B (continued)					E002-01/ /		001-099
TB0201	Y	BACM15C3B (continued)					E2-1/ /		115-199
TB0201	Z	BACM15C3C (continued)					E002-01/ /		001-099
TB0201	Z	BACM15C3C (continued)					E2-1/ /		115-199
	X	B085	BJ	W1171	0380	24		34-12-12	011-099
	X	B086	BJ	W1171	0683	22		34-12-12	011-099
	X	B087	BJ	W1171	0625	22		34-12-12	011-099
	X	B088	BJ	W1171	0679	22		34-12-12	011-099
	X	C002	BJ	W1171	0628	22		22-11-13	009-099
	X	C002	BJ	W1171	0654	22		22-11-13	009-099
	X	C003	BJ	W1171	0632	22		22-11-13	009-099
	X	C004	BJ	W1171	0659	22		22-11-13	009-099
	Y	C015	BJ	W1171	2541B	24		73-21-12	ALL
	Y	C015	BJ	W1171	B-RD			73-21-12	ALL
	Y	C016	BJ	W1171	2540B	24		73-21-12	ALL
	Y	C016	BJ	W1171	B-GR			73-21-12	ALL
	X	C017	BJ	W1171	0636	22		22-11-13	009-099
	X	C018	BJ	W1171	0663	22		22-11-13	009-099
	X	C020	BJ	W1171	0641	22		22-11-13	009-099
	X	C020	BJ	W1171	0667	22		22-11-13	009-099
	F	C021	2	W1171	0882	22		34-12-61	ALL
	Y	C027	BJ	W1171	5103B	24		22-12-11	ALL
	Y	C027	BJ	W1171	5104B	24		22-12-11	ALL
	Y	C027	BJ	W1171	5105B	24		22-12-11	ALL
	Y	C028	BJ	W1171	5103R	24		22-12-11	ALL
	Y	C028	BJ	W1171	5104R	24		22-12-11	ALL
	Y	C028	BJ	W1171	5105R	24		22-12-11	ALL
	Y	C030	BJ	W1171	5076B	24		34-61-14	ALL
	Y	C030	BJ	W1171	5171B	24		22-33-11	ALL
	Y	C030	BJ	W1171	5172B	24		34-61-14	ALL
	Y	C042	BJ	W1171	0651	22		22-11-13	009-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 17

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0201		AMY4100T-10U (continued)					E002-01/ /		001, 003-099
TB0201	A	285N0096-1 (continued)					E002-02/ /		ALL
TB0201	B	YHLZD-33 (continued)					E002-01/ /		001-099
TB0201	B	YHLZD-33 (continued)					E2-1/ /		115-199
TB0201	B	HLZD-33 (continued)					E002-001/ /		115-199
TB0201	D	YHLZD-33 (continued)					E002-001/ /		115-199
TB0201	E	YHLZD-33 (continued)					E002-001/ /		115-199
TB0201	F	BACM15C3B (continued)					E002-01/ /		ALL
TB0201	X	BACM15C3A (continued)					E002-01/ /		009-099
TB0201	Y	BACM15C3B (continued)					E002-01/ /		001-099
TB0201	Y	BACM15C3B (continued)					E2-1/ /		115-199
TB0201	Z	BACM15C3C (continued)					E002-01/ /		001-099
TB0201	Z	BACM15C3C (continued)					E2-1/ /		115-199
	Y	C042	BJ	W1171	0677	22		22-11-13	009-099
	X	C043	BJ	W1171	0645	22		22-11-13	009-099
	X	C044	BJ	W1171	0671	22		22-11-13	009-099
	X	C045	BJ	W1171	0649	22		22-11-13	009-099
	X	C046	BJ	W1171	0675	22		22-11-13	009-099
	Y	C063	BJ	W1171	5181B	24		34-22-18	115-199
	Y	C063	BJ	W1171	5182B	24		34-22-18	115-199
	Y	C063	BJ	W1171	5184B	24		34-22-38	115-199
	Y	C064	BJ	W1171	0269	22		34-43-12	002
	Y	C064	BJ	W1171	0817	22		34-22-18	002
	Y	C064	BJ	W1171	0818	22		34-22-18	002
	Y	C066	BJ	W1171	5033B	24		27-32-11	001-099
	Y	C066	BJ	W1171	5353B	24		27-32-11	001-099
	Y	C066	BJ	W1171	5354B	24		27-32-11	001-099
	B	C068	1A	W1171	0388	22		34-61-15	115-199
	D	C069	2	W1171	0712	22		34-61-16	115-199
	E	C070	2	W1171	0710	22		34-61-16	115-199
	Y	C075	BJ	W1171	5003B	24		34-22-19	115-199
	Y	C075	BJ	W1171	5004B	24		34-22-19	115-199
	Y	C075	BJ	W1171	5023B	24		34-22-39	115-199
	Y	C075	BJ	W1171	5140B	24		34-22-83	115-199
	Y	C076	BJ	W1171	5003R	24		34-22-19	115-199
	Y	C076	BJ	W1171	5004R	24		34-22-19	115-199
	Y	C076	BJ	W1171	5023R	24		34-22-39	115-199
	Y	C076	BJ	W1171	5140R	24		34-22-83	115-199
	Y	C077	BJ	W1171	5067B	24		34-61-11	ALL
	Y	C077	BJ	W1171	5068B	24		34-61-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 18

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0201		AMY4100T-10U (continued)					E002-01/ /		001, 003-099
TB0201	A	285N0096-1 (continued)					E002-02/ /		ALL
TB0201	B	YHLZD-33 (continued)					E002-01/ /		001-099
TB0201	B	YHLZD-33 (continued)					E2-1/ /		115-199
I TB0201	B	HLZD-33 (continued)					E002-001/ /		115-199
I TB0201	D	YHLZD-33 (continued)					E002-001/ /		115-199
I TB0201	E	YHLZD-33 (continued)					E002-001/ /		115-199
I TB0201	F	BACM15C3B (continued)					E002-01/ /		ALL
I TB0201	X	BACM15C3A (continued)					E002-01/ /		009-099
I TB0201	Y	BACM15C3B (continued)					E002-01/ /		001-099
TB0201	Y	BACM15C3B (continued)					E2-1/ /		115-199
TB0201	Z	BACM15C3C (continued)					E002-01/ /		001-099
TB0201	Z	BACM15C3C (continued)					E2-1/ /		115-199
	Y	C077	BJ	W1171	5069B	24		34-61-11	ALL
	Y	C078	BJ	W1171	5067R	24		34-61-11	ALL
	Y	C078	BJ	W1171	5068R	24		34-61-11	ALL
	Y	C078	BJ	W1171	5069R	24		34-61-11	ALL
	X	C085	BJ	W1171	0618	24		34-12-12	011-099
	X	C086	BJ	W1171	0692	22		34-12-12	011-099
	X	C088	BJ	W1171	0680	22		34-12-12	011-099
	Y	C097	BJ	W1171	5089B	24		34-61-22	ALL
	Y	C097	BJ	W1171	5126B	24		34-61-12	ALL
	Y	C097	BJ	W1171	5127B	24		34-61-12	ALL
	Y	C098	BJ	W1171	5089R	24		34-61-22	ALL
	Y	C098	BJ	W1171	5126R	24		34-61-12	ALL
	Y	C098	BJ	W1171	5127R	24		34-61-12	ALL
	Y	C099	BJ	W1171	5030B	24		31-31-41	001-099
	Y	C099	BJ	W1171	5030B	24		31-31-21	115-199
	Y	C099	BJ	W1171	5060B	24		31-25-11	ALL
	Y	C099	BJ	W1171	5061B	24		31-25-11	ALL
	Y	C100	BJ	W1171	5030R	24		31-31-41	001-099
	Y	C100	BJ	W1171	5030R	24		31-31-21	115-199
	Y	C100	BJ	W1171	5060R	24		31-25-11	ALL
	Y	C100	BJ	W1171	5061R	24		31-25-11	ALL
	B	C105	2	W1171	0110	16		75-31-11	ALL
	B	C105	2	W1171	0112	16		75-31-11	ALL
I	Y	C30	BJ	W1171	5221B	22		34-61-24	115-199
	X	D001	BJ	W1171	0629	22		22-11-13	009-099
	X	D002	BJ	W1171	0655	22		22-11-13	009-099
	X	D004	BJ	W1171	0633	22		22-11-13	009-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 19

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0201		AMY4100T-10U (continued)					E002-01/ /		001, 003-099
TB0201	A	285N0096-1 (continued)					E002-02/ /		ALL
TB0201	B	YHLZD-33 (continued)					E002-01/ /		001-099
TB0201	B	YHLZD-33 (continued)					E2-1/ /		115-199
TB0201	B	HLZD-33 (continued)					E002-001/ /		115-199
TB0201	D	YHLZD-33 (continued)					E002-001/ /		115-199
TB0201	E	YHLZD-33 (continued)					E002-001/ /		115-199
TB0201	F	BACM15C3B (continued)					E002-01/ /		ALL
TB0201	X	BACM15C3A (continued)					E002-01/ /		009-099
TB0201	Y	BACM15C3B (continued)					E002-01/ /		001-099
TB0201	Y	BACM15C3B (continued)					E2-1/ /		115-199
TB0201	Z	BACM15C3C (continued)					E002-01/ /		001-099
TB0201	Z	BACM15C3C (continued)					E2-1/ /		115-199
	X	D004	BJ	W1171	0660	22		22-11-13	009-099
	X	D017	BJ	W1171	0637	22		22-11-13	009-099
	X	D018	BJ	W1171	0664	22		22-11-13	009-099
	X	D020	BJ	W1171	0642	22		22-11-13	009-099
	X	D020	BJ	W1171	0668	22		22-11-13	009-099
	X	D044	BJ	W1171	0646	22		22-11-13	009-099
	X	D044	BJ	W1171	0672	22		22-11-13	009-099
	X	D045	BJ	W1171	0650	22		22-11-13	009-099
	X	D046	BJ	W1171	0676	22		22-11-13	009-099
	X	D085	BJ	W1171	0619	24		34-12-12	011-099
	X	D086	BJ	W1171	0685	22		34-12-12	011-099
	X	D087	BJ	W1171	0364	22		34-12-12	011-099
	X	D088	BJ	W1171	0681	22		34-12-12	011-099
TB0202	Y	BACM15C3B					E002-01/ /		001-099
TB0202	Y	BACM15C3B					E2-2/ /		115-199
	Y	A001	BJ	W1171	5025W	24		34-43-11	001, 003-099, 115-199
	Y	A001	BJ	W1171	5026W	24		34-43-11	001, 003-099, 115-199
	Y	A001	BJ	W1171	5027W	24		34-43-11	001, 003-099, 115-199
	Y	A002	BJ	W1171	5025B	24		34-43-11	001, 003-099, 115-199
	Y	A002	BJ	W1171	5026B	24		34-43-11	001, 003-099, 115-199
	Y	A002	BJ	W1171	5027B	24		34-43-11	001, 003-099, 115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 20

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0203	A	285N0096-1					E002-02/ /		ALL
TB0203	L	BACM15C3B					E002-02/ /		ALL
TB0203	X	BACM15C3A					E002-02/ /		009-099
TB0203	Y	BACM15C3B					E2-2/ /		ALL
TB0203	Z	BACM15C3C					E002-02/ /		001-099
TB0203	Z	BACM15C3C					E2-2/ /		115-199
	Y			W1173	5316Z			34-25-12	002
	Y			W1173	FRMG			34-25-12	002
	Y			W1173	FRMH			34-25-12	002
	Z	1	BJ	W1173	0346	22		34-61-24	011-099
	Z	1	BJ	W1173	0347	22		34-61-24	011-099
	Z	1	BJ	W1173	0348	22		34-61-24	011-099
	Z	1	BJ	W1173	0398	22		34-61-24	011-099
	Z	105	BJ	W1173	0312	22		34-12-22	ALL
	Z	105	BJ	W1173	5064B	24		22-32-11	ALL
	Z	105	BJ	W1173	5078B	24		SPARE	ALL
	Z	105	BJ	W1173	5125B	24		SPARE	115-199
	Z	105	BJ	W1173	5137B	24		31-51-33	ALL
	Z	105	BJ	W1173	5139B	24		34-21-11	ALL
	Z	106	BJ	W1173	0330	22		34-12-22	ALL
	Z	106	BJ	W1173	5064R	24		22-32-11	ALL
	Z	106	BJ	W1173	5078R	24		SPARE	ALL
	Z	106	BJ	W1173	5125R	24		SPARE	115-199
	Z	106	BJ	W1173	5137R	24		31-51-33	ALL
	Z	106	BJ	W1173	5139R	24		34-21-11	ALL
	Z	109	BJ	W1173	5021B	24		34-21-21	ALL
	Z	109	BJ	W1173	5067B	24		34-13-21	ALL
	Z	109	BJ	W1173	5138B	24		34-12-22	ALL
	Z	109	BJ	W1173	5140B	24		22-24-11	ALL
	Z	109	BJ	W1173	5152B	24		34-22-29	ALL
	Z	109	BJ	W1173	5333B	24		34-12-61	ALL
	Z	110	BJ	W1173	5021R	24		34-21-21	ALL
	Z	110	BJ	W1173	5067R	24		34-13-21	ALL
	Z	110	BJ	W1173	5138R	24		34-12-22	ALL
	Z	110	BJ	W1173	5140R	24		22-24-11	ALL
	Z	110	BJ	W1173	5152R	24		34-22-29	ALL
	Z	110	BJ	W1173	5333R	24		34-12-61	ALL
	Z	111	BJ	W1173	0286	24		34-12-22	ALL
	Z	111	BJ	W1173	0312	22		34-12-22	ALL
	Z	111	BJ	W1173	5015B	24		34-22-39	ALL
	Z	111	BJ	W1173	5019B	24		34-53-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 21

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0203	A	285N0096-1 (continued)					E002-02/ /		ALL
TB0203	L	BACM15C3B (continued)					E002-02/ /		ALL
TB0203	X	BACM15C3A (continued)					E002-02/ /		009-099
TB0203	Y	BACM15C3B (continued)					E2-2/ /		ALL
TB0203	Z	BACM15C3C (continued)					E002-02/ /		001-099
TB0203	Z	BACM15C3C (continued)					E2-2/ /		115-199
	Z	111	BJ	W1173	5020B	24		31-41-22	ALL
	Z	111	BJ	W1173	5022B	24		34-13-11	ALL
	Z	111	BJ	W1173	5103B	24		34-12-22	ALL
	Z	112	BJ	W1173	0285	24		34-12-22	ALL
	Z	112	BJ	W1173	0330	22		34-12-22	ALL
	Z	112	BJ	W1173	5015R	24		34-22-39	ALL
	Z	112	BJ	W1173	5019R	24		34-53-11	ALL
	Z	112	BJ	W1173	5020R	24		31-41-22	ALL
	Z	112	BJ	W1173	5022R	24		34-13-11	ALL
	Z	112	BJ	W1173	5103R	24		34-12-22	ALL
	Z	113	BJ	W1173	0286	24		34-12-22	ALL
	Z	113	BJ	W1173	5017B	24		34-12-22	ALL
	Z	113	BJ	W1173	5018B	24		34-53-21	ALL
	Z	113	BJ	W1173	5048B	24		34-61-13	ALL
	Z	113	BJ	W1173	5049B	24		34-61-22	ALL
	Z	113	BJ	W1173	5151B	24		34-22-19	ALL
	Z	113	BJ	W1173	5221B	22		34-43-14	002
	Z	113	BJ	W1173	5242B	22		34-46-12	002
	Z	114	BJ	W1173	0285	24		34-12-22	ALL
	Z	114	BJ	W1173	5017R	24		34-12-22	ALL
	Z	114	BJ	W1173	5018R	24		34-53-21	ALL
	Z	114	BJ	W1173	5048R	24		34-61-13	ALL
	Z	114	BJ	W1173	5049R	24		34-61-22	ALL
	Z	114	BJ	W1173	5151R	24		34-22-19	ALL
	Z	114	BJ	W1173	5221R	22		34-43-14	002
	Z	114	BJ	W1173	5242R	22		34-46-12	002
	Z	116	BJ	W1173	0189	24		34-12-21	ALL
	Z	116	BJ	W1173	0191	22		34-12-21	ALL
	Z	116	BJ	W1173	0201	22		34-12-21	ALL
	Z	116	BJ	W1173	0213	22		34-12-21	ALL
	Z	116	BJ	W1173	0221	22		34-12-21	ALL
	Z	117	BJ	W1173	2009R	22		22-11-21	ALL
	Z	117	BJ	W1173	2010R	22		22-11-21	ALL
	Z	117	BJ	W1173	2011R	22		22-11-21	ALL
	Z	117	BJ	W1173	2012R	20		22-11-21	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 22

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0203	A	285N0096-1 (continued)					E002-02/ /		ALL
TB0203	L	BACM15C3B (continued)					E002-02/ /		ALL
TB0203	X	BACM15C3A (continued)					E002-02/ /		009-099
TB0203	Y	BACM15C3B (continued)					E2-2/ /		ALL
TB0203	Z	BACM15C3C (continued)					E002-02/ /		001-099
TB0203	Z	BACM15C3C (continued)					E2-2/ /		115-199
	Z	117	BJ	W1173	2026R	22		22-11-21	ALL
	Z	118	BJ	W1173	2009B	22		22-11-21	ALL
	Z	118	BJ	W1173	2010B	22		22-11-21	ALL
	Z	118	BJ	W1173	2011B	22		22-11-21	ALL
	Z	118	BJ	W1173	2012B	20		22-11-21	ALL
	Z	118	BJ	W1173	2026B	22		22-11-21	ALL
	Z	119	BJ	W1173	5062B	24		34-12-22	ALL
	Z	119	BJ	W1173	5065B	24		22-24-21	ALL
	Z	119	BJ	W1173	5135B	24		22-12-21	ALL
	Z	119	BJ	W1173	5335B	24		34-12-62	ALL
	Z	120	BJ	W1173	5062R	24		34-12-22	ALL
	Z	120	BJ	W1173	5065R	24		22-24-21	ALL
	Z	120	BJ	W1173	5135R	24		22-12-21	ALL
	Z	120	BJ	W1173	5335R	24		34-12-62	ALL
	A	17		W1173	A-BL			73-21-12	ALL
	A	17		W1173	A-GR			73-21-12	ALL
	A	17		W1173	A-RD			73-21-12	ALL
	A	17		W1173	A-YL			73-21-12	ALL
	A	19		W1173	B-BL			73-21-12	ALL
	A	19		W1173	B-GR			73-21-12	ALL
	A	19		W1173	B-RD			73-21-12	ALL
	A	19		W1173	B-YL			73-21-12	ALL
	Z	2	BJ	W1173	0424	22		34-61-24	011-099
	Z	35	BJ	W1173	0440	20		34-12-22	011-099
	Z	35	BJ	W1173	0458	22		34-12-22	011-099
	Z	36	BJ	W1173	0181	22		34-12-22	011-099
	Z	36	BJ	W1173	0439	20		34-12-22	011-099
	Z	37	BJ	W1173	0211	22		34-61-24	011-099
	Z	37	BJ	W1173	0341	22		34-61-24	011-099
	Z	37	BJ	W1173	0343	22		34-61-24	011-099
	Z	37	BJ	W1173	0344	22		34-61-24	011-099
	Z	37	BJ	W1173	0501	22		34-61-24	011-099
	Z	37	BJ	W1173	0502	22		34-61-24	011-099
	Z	38	BJ	W1173	0209	22		34-61-24	011-099
	Z	38	BJ	W1173	0210	22		34-61-24	011-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 23

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0203	A	285N0096-1 (continued)					E002-02/ /		ALL
TB0203	L	BACM15C3B (continued)					E002-02/ /		ALL
TB0203	X	BACM15C3A (continued)					E002-02/ /		009-099
TB0203	Y	BACM15C3B (continued)					E2-2/ /		ALL
TB0203	Z	BACM15C3C (continued)					E002-02/ /		001-099
TB0203	Z	BACM15C3C (continued)					E2-2/ /		115-199
	Z	38	BJ	W1173	0342	22		34-61-24	011-099
	Z	38	BJ	W1173	0422	22		34-61-24	011-099
	Z	44	BJ	W1173	0164	22		34-31-21	ALL
	Z	44	BJ	W1173	0165	24		34-33-21	ALL
	Z	44	BJ	W1173	0167	24		34-51-21	ALL
	Z	44	BJ	W1173	0262	24		34-55-21	ALL
	Z	44	BJ	W1173	0263	24		34-55-21	ALL
	Z	49	BJ	W1173	0349	22		34-61-23	011-099
	Z	49	BJ	W1173	0350	22		34-61-23	011-099
	Z	49	BJ	W1173	0383	22		34-61-23	011-099
	Z	49	BJ	W1173	0544	22		34-61-23	011-099
	Z	50	BJ	W1173	0331	22		34-61-23	011-099
	Z	50	BJ	W1173	0442	22		34-61-23	011-099
	Z	50	BJ	W1173	0768	22		34-61-23	011-099
	Z	58	BJ	W1173	5005B	24		34-22-24	ALL
	Z	58	BJ	W1173	5006B	24		34-22-24	ALL
	Z	58	BJ	W1173	5007B	24		34-43-11	001, 003-099, 115-199
	Z	58	BJ	W1173	5008B	24		34-22-34	ALL
	Z	58	BJ	W1173	5009B	24		34-61-24	ALL
	Z	58	BJ	W1173	5207B	24		34-61-21	001-099
	Z	58	BJ	W1173	5208B	24		34-61-14	001-099
	Z	58	BJ	W1173	5324B	24		31-31-43	001-009
	Z	59	BJ	W1173	5005R	24		34-22-24	ALL
	Z	59	BJ	W1173	5006R	24		34-22-24	ALL
	Z	59	BJ	W1173	5007R	24		34-43-11	001, 003-099, 115-199
	Z	59	BJ	W1173	5008R	24		34-22-34	ALL
	Z	59	BJ	W1173	5009R	24		34-61-24	ALL
	Z	59	BJ	W1173	5207R	24		34-61-21	001-099
	Z	59	BJ	W1173	5208R	24		34-61-14	001-099
	Z	59	BJ	W1173	5324R	24		31-31-43	001-009
	Z	60	BJ	W1173	0088	22		34-12-21	ALL
	Z	60	BJ	W1173	0193	24		34-12-21	ALL
	Z	60	BJ	W1173	0197	22		34-12-21	ALL
	Z	60	BJ	W1173	0222	22		34-12-21	115-199
	Z	60	BJ	W1173	0224	22		34-12-21	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 24

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0203	A	285N0096-1 (continued)					E002-02/ /		ALL
TB0203	L	BACM15C3B (continued)					E002-02/ /		ALL
TB0203	X	BACM15C3A (continued)					E002-02/ /		009-099
TB0203	Y	BACM15C3B (continued)					E2-2/ /		ALL
TB0203	Z	BACM15C3C (continued)					E002-02/ /		001-099
TB0203	Z	BACM15C3C (continued)					E2-2/ /		115-199
	Z	79	BJ	W1173	5072B	24		34-61-25	ALL
	Z	79	BJ	W1173	5073B	24		34-61-25	ALL
	Z	79	BJ	W1173	5074B	24		34-61-25	ALL
	Z	79	BJ	W1173	5077B	24		22-41-11	ALL
	Z	79	BJ	W1173	5126B	24		31-31-22	115-199
	Z	79	BJ	W1173	5145B	24		34-61-25	ALL
	Z	80	BJ	W1173	5072R	24		34-61-25	ALL
	Z	80	BJ	W1173	5073R	24		34-61-25	ALL
	Z	80	BJ	W1173	5074R	24		34-61-25	ALL
	Z	80	BJ	W1173	5077R	24		22-41-11	ALL
	Z	80	BJ	W1173	5126R	24		31-31-22	115-199
	Z	80	BJ	W1173	5145R	24		34-61-25	ALL
	Z	81	BJ	W1173	0139	22		22-14-21	115-199
	Z	81	BJ	W1173	0140	22		22-14-21	115-199
	Z	81	BJ	W1173	1122	22		22-14-11	115-199
	Z	81	BJ	W1173	1131	22		22-14-31	115-199
	Z	82	BJ	W1173	5058B	24		22-12-21	ALL
	Z	82	BJ	W1173	5059B	24		34-61-25	ALL
	Z	82	BJ	W1173	5060B	24		22-32-11	ALL
	Z	82	BJ	W1173	5061B	24		34-21-21	ALL
	Z	82	BJ	W1173	5143B	24		34-61-15	ALL
	Z	82	BJ	W1173	5158B	24		27-32-21	001-099
	Z	83	BJ	W1173	5058R	24		22-12-21	ALL
	Z	83	BJ	W1173	5059R	24		34-61-25	ALL
	Z	83	BJ	W1173	5060R	24		22-32-11	ALL
	Z	83	BJ	W1173	5061R	24		34-21-21	ALL
	Z	83	BJ	W1173	5143R	24		34-61-15	ALL
	Z	83	BJ	W1173	5158R	24		27-32-21	001-099
	Z	85	BJ	W1173	5001B	24		34-22-18	001-099
	Z	85	BJ	W1173	5002B	24		34-22-28	001-099
	Z	85	BJ	W1173	5003B	24		34-61-25	001-099
	Z	85	BJ	W1173	5004B	24		34-22-38	001-099
	Z	85	BJ	W1173	5294B	22		34-46-12	002
	Z	85	BJ	W1173	5311B	24		31-31-42	001-099
	Z	86	BJ	W1173	5001R	24		34-22-18	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 25

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0203	A	285N0096-1 (continued)					E002-02/ /		ALL
TB0203	L	BACM15C3B (continued)					E002-02/ /		ALL
TB0203	X	BACM15C3A (continued)					E002-02/ /		009-099
TB0203	Y	BACM15C3B (continued)					E2-2/ /		ALL
TB0203	Z	BACM15C3C (continued)					E002-02/ /		001-099
TB0203	Z	BACM15C3C (continued)					E2-2/ /		115-199
	Z	86	BJ	W1173	5002R	24		34-22-28	001-099
	Z	86	BJ	W1173	5003R	24		34-61-25	001-099
	Z	86	BJ	W1173	5004R	24		34-22-38	001-099
	Z	86	BJ	W1173	5294R	22		34-46-12	002
	Z	86	BJ	W1173	5311R	24		31-31-42	001-099
	Z	87	BJ	W1173	5024B	24		34-22-29	ALL
	Z	87	BJ	W1173	5025B	24		34-22-29	ALL
	Z	87	BJ	W1173	5026B	24		34-22-39	ALL
	Z	87	BJ	W1173	5121B	24		34-22-91	001-099
	Z	87	BJ	W1173	5121B	24		34-22-93	115-199
	Z	87	BJ	W1173	5313B	24		31-31-43	001-099
	Z	88	BJ	W1173	5024R	24		34-22-29	ALL
	Z	88	BJ	W1173	5025R	24		34-22-29	ALL
	Z	88	BJ	W1173	5026R	24		34-22-39	ALL
	Z	88	BJ	W1173	5121R	24		34-22-91	001-099
	Z	88	BJ	W1173	5121R	24		34-22-93	115-199
	Z	88	BJ	W1173	5313R	24		31-31-43	001-099
	Z	96	BJ	W1173	5027B	24		34-22-29	001-099
	Z	96	BJ	W1173	5028B	24		34-22-29	001-099
	Z	96	BJ	W1173	5029B	24		34-22-39	001-099
	Z	96	BJ	W1173	5126B	24		31-31-43	001-099
	Z	96	BJ	W1173	5131B	24		34-22-91	001-099
	Z	97	BJ	W1173	5027R	24		34-22-29	001-099
	Z	97	BJ	W1173	5028R	24		34-22-29	001-099
	Z	97	BJ	W1173	5029R	24		34-22-39	001-099
	Z	97	BJ	W1173	5126R	24		31-31-43	001-099
	Z	97	BJ	W1173	5131R	24		34-22-91	001-099
	X	A003	BJ	W1173	0626	22		22-11-23	009
	X	A004	BJ	W1173	0626	22		22-11-23	010-099
	X	A004	BJ	W1173	0652	22		22-11-23	009-099
	X	A005	BJ	W1173	0630	22		22-11-23	009-099
	X	A006	BJ	W1173	0657	22		22-11-23	009-099
	X	A007	BJ	W1173	0634	22		22-11-23	009-099
	X	A008	BJ	W1173	0661	22		22-11-23	009-099
	X	A009	BJ	W1173	0638	22		22-11-23	009-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 26

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0203	A	285N0096-1 (continued)					E002-02/ /		ALL
TB0203	L	BACM15C3B (continued)					E002-02/ /		ALL
TB0203	X	BACM15C3A (continued)					E002-02/ /		009-099
TB0203	Y	BACM15C3B (continued)					E2-2/ /		ALL
TB0203	Z	BACM15C3C (continued)					E002-02/ /		001-099
TB0203	Z	BACM15C3C (continued)					E2-2/ /		115-199
	X	A010	BJ	W1173	0665	22		22-11-23	009-099
	X	A011	BJ	W1173	0643	22		22-11-23	009-099
	X	A012	BJ	W1173	0669	22		22-11-23	009-099
	X	A013	BJ	W1173	0647	22		22-11-23	009-099
	X	A014	BJ	W1173	0673	22		22-11-23	009-099
	X	A016	BJ	W1173	0651	22		22-11-23	009-099
	X	A016	BJ	W1173	0677	22		22-11-23	009-099
	Y	A026	BJ	W1173	5087B	24		22-12-21	ALL
	Y	A026	BJ	W1173	5088B	24		22-12-21	ALL
	Y	A026	BJ	W1173	5089B	24		22-12-21	ALL
	Y	A026	BJ	W1173	5090B	24		22-12-21	ALL
	Y	A027	BJ	W1173	5087R	24		22-12-21	ALL
	Y	A027	BJ	W1173	5088R	24		22-12-21	ALL
	Y	A027	BJ	W1173	5089R	24		22-12-21	ALL
	Y	A027	BJ	W1173	5090R	24		22-12-21	ALL
	Y	A028	BJ	W1173	2539R	24		73-21-12	ALL
	Y	A028	BJ	W1173	A-RD			73-21-12	ALL
	Y	A029	BJ	W1173	2538R	24		73-21-12	ALL
	Y	A029	BJ	W1173	A-BL			73-21-12	ALL
	Y	A030	BJ	W1173	5054R	24		34-61-24	ALL
	Y	A030	BJ	W1173	5141R	24		22-33-11	ALL
	Y	A030	BJ	W1173	5142R	24		34-61-24	ALL
	X	A031	BJ	W1173	0296	24		34-12-22	011-099
	X	A032	BJ	W1173	0434	22		34-12-22	011-099
	X	A033	BJ	W1173	0427	22		34-12-22	011-099
	X	A034	BJ	W1173	0430	22		34-12-22	011-099
	Y	A039	BJ	W1173	0494	22		34-22-26	ALL
	Y	A039	BJ	W1173	0495	22		34-22-26	ALL
	Y	A039	BJ	W1173	0496	22		34-22-26	ALL
	Y	A040	BJ	W1173	0007	24		34-22-27	010-099
	Y	A040	BJ	W1173	8011	22		31-31-61	010-099
	Y	A040	BJ	W1173	8012	22		34-22-27	010-099
	Y	A041	BJ	W1173	5071R	24		34-55-21	ALL
	Y	A041	BJ	W1173	5123R	24		34-51-21	ALL
	Y	A041	BJ	W1173	5144R	24		34-61-25	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 27

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0203	A	285N0096-1 (continued)					E002-02/ /		ALL
TB0203	L	BACM15C3B (continued)					E002-02/ /		ALL
TB0203	X	BACM15C3A (continued)					E002-02/ /		009-099
TB0203	Y	BACM15C3B (continued)					E2-2/ /		ALL
TB0203	Z	BACM15C3C (continued)					E002-02/ /		001-099
TB0203	Z	BACM15C3C (continued)					E2-2/ /		115-199
	Y	A042	BJ	W1173	5071B	24		34-55-21	ALL
	Y	A042	BJ	W1173	5123B	24		34-51-21	ALL
	Y	A042	BJ	W1173	5144B	24		34-61-25	ALL
	Y	A045	BJ	W1173	5076B	24		22-13-21	ALL
	Y	A045	BJ	W1173	5097B	24		22-13-21	ALL
	Y	A046	BJ	W1173	5076R	24		22-13-21	ALL
	Y	A046	BJ	W1173	5097R	24		22-13-21	ALL
	Y	A047	BJ	W1173	5068B	24		34-31-21	ALL
	Y	A047	BJ	W1173	5069B	24		34-31-21	ALL
	Y	A047	BJ	W1173	5070B	24		34-31-21	ALL
	Y	A048	BJ	W1173	5068R	24		34-31-21	ALL
	Y	A048	BJ	W1173	5069R	24		34-31-21	ALL
	Y	A048	BJ	W1173	5070R	24		34-31-21	ALL
	Y	A063	BJ	W1173	5042B	24		34-61-13	ALL
	Y	A063	BJ	W1173	5043B	24		34-61-22	ALL
	Y	A063	BJ	W1173	5044B	24		34-61-22	ALL
	Y	A064	BJ	W1173	5042R	24		34-61-13	ALL
	Y	A064	BJ	W1173	5043R	24		34-61-22	ALL
	Y	A064	BJ	W1173	5044R	24		34-61-22	ALL
	Y	A068	BJ	W1173	5175Z			34-25-12	002
	Y	A068	BJ	W1173	5177Z			34-25-12	002
	Y	A068	BJ	W1173	FRMH			34-25-12	002
	Y	A073	BJ	W1173	5036B	24		34-51-21	ALL
	Y	A073	BJ	W1173	5037B	24		34-61-13	ALL
	Y	A073	BJ	W1173	5038B	24		34-61-22	ALL
	Y	A073	BJ	W1173	5120B	24		34-51-21	ALL
	Y	A074	BJ	W1173	5036R	24		34-51-21	ALL
	Y	A074	BJ	W1173	5037R	24		34-61-13	ALL
	Y	A074	BJ	W1173	5038R	24		34-61-22	ALL
	Y	A074	BJ	W1173	5120R	24		34-51-21	ALL
	Y	A075	BJ	W1173	5182R	24		34-22-28	115-199
	Y	A075	BJ	W1173	5183R	24		34-22-28	115-199
	Y	A075	BJ	W1173	5184R	24		34-22-38	115-199
	Y	A090	BJ	W1173	5001B	24		34-22-18	115-199
	Y	A090	BJ	W1173	5002B	24		34-22-28	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 28

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0203	A	285N0096-1 (continued)					E002-02/ /		ALL
TB0203	L	BACM15C3B (continued)					E002-02/ /		ALL
TB0203	X	BACM15C3A (continued)					E002-02/ /		009-099
TB0203	Y	BACM15C3B (continued)					E2-2/ /		ALL
TB0203	Z	BACM15C3C (continued)					E002-02/ /		001-099
TB0203	Z	BACM15C3C (continued)					E2-2/ /		115-199
	Y	A090	BJ	W1173	5003B	24		34-61-25	115-199
	Y	A090	BJ	W1173	5004B	24		34-22-38	115-199
	Y	A091	BJ	W1173	5001R	24		34-22-18	115-199
	Y	A091	BJ	W1173	5002R	24		34-22-28	115-199
	Y	A091	BJ	W1173	5003R	24		34-61-25	115-199
	Y	A091	BJ	W1173	5004R	24		34-22-38	115-199
	Y	A092	BJ	W1173	5085B	24		22-12-11	ALL
	Y	A092	BJ	W1173	5086B	24		22-12-11	ALL
	Y	A092	BJ	W1173	5105B	24		22-12-11	ALL
	Y	A093	BJ	W1173	5085R	24		22-12-11	ALL
	Y	A093	BJ	W1173	5086R	24		22-12-11	ALL
	Y	A093	BJ	W1173	5105R	24		22-12-11	ALL
	Y	A094	BJ	W1173	5030B	24		34-22-28	ALL
	Y	A094	BJ	W1173	5031B	24		34-22-28	ALL
	Y	A094	BJ	W1173	5032B	24		34-43-11	ALL
	Y	A095	BJ	W1173	5030R	24		34-22-28	ALL
	Y	A095	BJ	W1173	5031R	24		34-22-28	ALL
	Y	A095	BJ	W1173	5032R	24		34-43-11	ALL
	L	A102	2	W1173	0747	22		34-12-62	ALL
	L	A102	2	W1173	0748	22		34-12-62	ALL
	Y	A107	BJ	W1173	2537B	24		73-21-22	ALL
	Y	A107	BJ	W1173	B-BL			73-21-12	ALL
	Y	A108	BJ	W1173	2537R	24		73-21-22	ALL
	Y	A108	BJ	W1173	A-GR			73-21-12	ALL
	X	B004	BJ	W1173	0627	22		22-11-23	009-099
	X	B004	BJ	W1173	0653	22		22-11-23	009-099
	X	B005	BJ	W1173	0631	22		22-11-23	009-099
	X	B006	BJ	W1173	0658	22		22-11-23	009-099
	X	B007	BJ	W1173	0635	22		22-11-23	009-099
	X	B008	BJ	W1173	0662	22		22-11-23	009-099
	X	B009	BJ	W1173	0639	22		22-11-23	009
	X	B010	BJ	W1173	0639	22		22-11-23	010-099
	X	B010	BJ	W1173	0666	22		22-11-23	009-099
	X	B011	BJ	W1173	0644	22		22-11-23	009-099
	X	B012	BJ	W1173	0670	22		22-11-23	009-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 29

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0203	A	285N0096-1 (continued)					E002-02/ /		ALL
TB0203	L	BACM15C3B (continued)					E002-02/ /		ALL
TB0203	X	BACM15C3A (continued)					E002-02/ /		009-099
TB0203	Y	BACM15C3B (continued)					E2-2/ /		ALL
TB0203	Z	BACM15C3C (continued)					E002-02/ /		001-099
TB0203	Z	BACM15C3C (continued)					E2-2/ /		115-199
	X	B013	BJ	W1173	0648	22		22-11-23	009-099
	X	B014	BJ	W1173	0674	22		22-11-23	009-099
	X	B031	BJ	W1173	0345	24		34-12-22	011-099
	X	B032	BJ	W1173	0435	22		34-12-22	011-099
	X	B033	BJ	W1173	0428	22		34-12-22	011-099
	X	B034	BJ	W1173	0431	22		34-12-22	011-099
	X	C004	BJ	W1173	0628	22		22-11-23	009-099
	X	C004	BJ	W1173	0654	22		22-11-23	009-099
	X	C005	BJ	W1173	0632	22		22-11-23	009-099
	X	C006	BJ	W1173	0659	22		22-11-23	009-099
	X	C007	BJ	W1173	0636	22		22-11-23	009-099
	X	C008	BJ	W1173	0663	22		22-11-23	009-099
	X	C010	BJ	W1173	0641	22		22-11-23	009-099
	X	C010	BJ	W1173	0667	22		22-11-23	009-099
	X	C011	BJ	W1173	0645	22		22-11-23	009-099
	X	C012	BJ	W1173	0671	22		22-11-23	009-099
	X	C013	BJ	W1173	0649	22		22-11-23	009-099
	X	C014	BJ	W1173	0675	22		22-11-23	009-099
	Y	C026	BJ	W1173	5091B	24		22-12-21	ALL
	Y	C026	BJ	W1173	5092B	24		22-12-21	ALL
	Y	C026	BJ	W1173	5095B	24		22-22-21	ALL
	Y	C027	BJ	W1173	5091R	24		22-12-21	ALL
	Y	C027	BJ	W1173	5092R	24		22-12-21	ALL
	Y	C027	BJ	W1173	5095R	24		22-22-21	ALL
	Y	C028	BJ	W1173	2539B	24		73-21-12	ALL
	Y	C028	BJ	W1173	B-RD			73-21-12	ALL
	Y	C029	BJ	W1173	2538B	24		73-21-12	ALL
	Y	C029	BJ	W1173	B-GR			73-21-12	ALL
	Y	C030	BJ	W1173	5054B	24		34-61-24	ALL
	Y	C030	BJ	W1173	5141B	24		22-33-11	ALL
	Y	C030	BJ	W1173	5142B	24		34-61-24	ALL
	X	C031	BJ	W1173	0425	24		34-12-22	011-099
	X	C032	BJ	W1173	0437	22		34-12-22	011-099
	X	C033	BJ	W1173	0309	22		34-12-22	011-099
	X	C034	BJ	W1173	0432	22		34-12-22	011-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 30

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0203	A	285N0096-1 (continued)					E002-02/ /		ALL
TB0203	L	BACM15C3B (continued)					E002-02/ /		ALL
TB0203	X	BACM15C3A (continued)					E002-02/ /		009-099
TB0203	Y	BACM15C3B (continued)					E2-2/ /		ALL
TB0203	Z	BACM15C3C (continued)					E002-02/ /		001-099
TB0203	Z	BACM15C3C (continued)					E2-2/ /		115-199
	Y	C063	BJ	W1173	5107B	24		34-61-21	ALL
	Y	C063	BJ	W1173	5108B	24		34-61-21	ALL
	Y	C063	BJ	W1173	5110B	24		34-61-21	ALL
	Y	C064	BJ	W1173	5107R	24		34-61-21	ALL
	Y	C064	BJ	W1173	5108R	24		34-61-21	ALL
	Y	C064	BJ	W1173	5110R	24		34-61-21	ALL
	Y	C067	BJ	W1173	5124B	24		34-25-11	010-099
	Y	C067	BJ	W1173	5175B	22		34-25-12	002
	Y	C067	BJ	W1173	5177B	22		34-25-12	002
	Y	C067	BJ	W1173	5316B	22		34-25-12	002
	Y	C067	BJ	W1173	5326B	22		31-31-41	010-099
	Y	C067	BJ	W1173	5337B	22		34-25-11	010-099
	Y	C068	BJ	W1173	5124R	24		34-25-11	010-099
	Y	C068	BJ	W1173	5175R	22		34-25-12	002
	Y	C068	BJ	W1173	5177R	22		34-25-12	002
	Y	C068	BJ	W1173	5316R	22		34-25-12	002
	Y	C068	BJ	W1173	5326R	22		31-31-41	010-099
	Y	C068	BJ	W1173	5337R	22		34-25-11	010-099
	Y	C073	BJ	W1173	5039B	24		34-61-13	ALL
	Y	C073	BJ	W1173	5040B	24		34-61-13	ALL
	Y	C073	BJ	W1173	5041B	24		34-61-22	ALL
	Y	C074	BJ	W1173	5039R	24		34-61-13	ALL
	Y	C074	BJ	W1173	5040R	24		34-61-13	ALL
	Y	C074	BJ	W1173	5041R	24		34-61-22	ALL
	Y	C075	BJ	W1173	5182B	24		34-22-28	115-199
	Y	C075	BJ	W1173	5183B	24		34-22-28	115-199
	Y	C075	BJ	W1173	5184B	24		34-22-38	115-199
	Y	C077	BJ	W1173	5051B	24		34-61-24	ALL
	Y	C077	BJ	W1173	5052B	24		22-13-21	ALL
	Y	C077	BJ	W1173	5053B	24		22-13-21	ALL
	Y	C078	BJ	W1173	5051R	24		34-61-24	ALL
	Y	C078	BJ	W1173	5052R	24		22-13-21	ALL
	Y	C078	BJ	W1173	5053R	24		22-13-21	ALL
	Y	C090	BJ	W1173	5010B	24		34-31-21	ALL
	Y	C090	BJ	W1173	5013B	24		34-22-29	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 31

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0203	A	285N0096-1 (continued)					E002-02/ /		ALL
TB0203	L	BACM15C3B (continued)					E002-02/ /		ALL
TB0203	X	BACM15C3A (continued)					E002-02/ /		009-099
TB0203	Y	BACM15C3B (continued)					E2-2/ /		ALL
TB0203	Z	BACM15C3C (continued)					E002-02/ /		001-099
TB0203	Z	BACM15C3C (continued)					E2-2/ /		115-199
	Y	C090	BJ	W1173	5014B	24		34-61-22	ALL
	Y	C090	BJ	W1173	5127B	24		31-31-43	001-099
	Y	C090	BJ	W1173	5127B	24		31-31-22	115-199
	Y	C091	BJ	W1173	5010R	24		34-31-21	ALL
	Y	C091	BJ	W1173	5013R	24		34-22-29	ALL
	Y	C091	BJ	W1173	5014R	24		34-61-22	ALL
	Y	C091	BJ	W1173	5127R	24		31-31-43	001-099
	Y	C091	BJ	W1173	5127R	24		31-31-22	115-199
	Y	C092	BJ	W1173	5075B	24		22-12-31	ALL
	Y	C092	BJ	W1173	5094B	24		22-12-31	ALL
	Y	C092	BJ	W1173	5096B	24		22-12-31	ALL
	Y	C093	BJ	W1173	5075R	24		22-12-31	ALL
	Y	C093	BJ	W1173	5094R	24		22-12-31	ALL
	Y	C093	BJ	W1173	5096R	24		22-12-31	ALL
	Y	C094	BJ	W1173	5023B	24		34-22-29	ALL
	Y	C094	BJ	W1173	5045B	24		34-22-29	ALL
	Y	C094	BJ	W1173	5046B	24		34-61-22	ALL
	Y	C095	BJ	W1173	5023R	24		34-22-29	ALL
	Y	C095	BJ	W1173	5045R	24		34-22-29	ALL
	Y	C095	BJ	W1173	5046R	24		34-61-22	ALL
	Y	C096	BJ	W1173	5027B	24		34-22-29	115-199
	Y	C096	BJ	W1173	5028B	24		34-22-29	115-199
	Y	C096	BJ	W1173	5029B	24		34-22-39	115-199
	Y	C096	BJ	W1173	5130B	24		34-55-21	115-199
	Y	C097	BJ	W1173	5027R	24		34-22-29	115-199
	Y	C097	BJ	W1173	5028R	24		34-22-29	115-199
	Y	C097	BJ	W1173	5029R	24		34-22-39	115-199
	Y	C097	BJ	W1173	5130R	24		34-55-21	115-199
	L	C102	2	W1173	0746	22		34-12-62	ALL
	X	D003	BJ	W1173	0629	22		22-11-23	009-099
	X	D004	BJ	W1173	0655	22		22-11-23	009-099
	X	D006	BJ	W1173	0633	22		22-11-23	009-099
	X	D006	BJ	W1173	0660	22		22-11-23	009-099
	X	D007	BJ	W1173	0637	22		22-11-23	009-099
	X	D008	BJ	W1173	0664	22		22-11-23	009-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 32

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0203	A	285N0096-1 (continued)					E002-02/ /		ALL
TB0203	L	BACM15C3B (continued)					E002-02/ /		ALL
TB0203	X	BACM15C3A (continued)					E002-02/ /		009-099
TB0203	Y	BACM15C3B (continued)					E2-2/ /		ALL
TB0203	Z	BACM15C3C (continued)					E002-02/ /		001-099
TB0203	Z	BACM15C3C (continued)					E2-2/ /		115-199
	X	D010	BJ	W1173	0642	22		22-11-23	009-099
	X	D010	BJ	W1173	0668	22		22-11-23	009-099
	X	D012	BJ	W1173	0646	22		22-11-23	009-099
	X	D012	BJ	W1173	0672	22		22-11-23	009-099
	X	D013	BJ	W1173	0650	22		22-11-23	009-099
	X	D014	BJ	W1173	0676	22		22-11-23	009-099
	X	D031	BJ	W1173	0426	24		34-12-22	011-099
	X	D032	BJ	W1173	0438	22		34-12-22	011-099
	X	D034	BJ	W1173	0433	22		34-12-22	011-099
	Z	DED		W1173	1122Z			22-14-11	115-199
	Z	DED		W1173	1131Z			22-14-31	115-199
TB0204	Y	BACM15C3B					E002-02/ /		001-099
TB0204	Y	BACM15C3B					E2-2/ /		115-199
	Y	A001	BJ	W1173	5080B	24		34-43-11	001, 003-099, 115-199
	Y	A001	BJ	W1173	5081B	24		34-43-11	001, 003-099, 115-199
	Y	A001	BJ	W1173	5082B	24		34-43-11	001, 003-099, 115-199
	Y	A002	BJ	W1173	5080W	24		34-43-11	001, 003-099, 115-199
	Y	A002	BJ	W1173	5081W	24		34-43-11	001, 003-099, 115-199
	Y	A002	BJ	W1173	5082W	24		34-43-11	001, 003-099, 115-199
TB0205		AMY4100T-10U					E002-03/ /		001, 003-099
TB0205	A	YHLZD-33					E002-03/ /		002
TB0205	X	BACM15C3A					E2-3/ /		ALL
TB0205	Y	BACM15C3B					E2-3/ /		ALL
TB0205	Z	BACM15C3C					E2-3/ /		ALL
	Z	103	BJ	W1175	5101B	24		34-46-12	ALL
	Z	103	BJ	W1175	5102B	24		34-46-12	ALL
	Z	103	BJ	W1175	5105B	24		34-22-19	ALL
	Z	103	BJ	W1175	5108B	24		34-22-39	ALL
	Z	104	BJ	W1175	5101R	24		34-46-12	ALL
	Z	104	BJ	W1175	5102R	24		34-46-12	ALL
	Z	104	BJ	W1175	5105R	24		34-22-19	ALL
	Z	104	BJ	W1175	5108R	24		34-22-39	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 33

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0205		AMY4100T-10U (continued)					E002-03/ /		001, 003-099
TB0205	A	YHLZD-33 (continued)					E002-03/ /		002
TB0205	X	BACM15C3A (continued)					E2-3/ /		ALL
TB0205	Y	BACM15C3B (continued)					E2-3/ /		ALL
TB0205	Z	BACM15C3C (continued)					E2-3/ /		ALL
	Z	105	BJ	W1175	5103B	24		34-46-12	ALL
	Z	105	BJ	W1175	5104B	24		34-46-12	ALL
	Z	105	BJ	W1175	5106B	24		34-22-29	ALL
	Z	105	BJ	W1175	5107B	24		34-22-39	ALL
	Z	106	BJ	W1175	5103R	24		34-46-12	ALL
	Z	106	BJ	W1175	5104R	24		34-46-12	ALL
	Z	106	BJ	W1175	5106R	24		34-22-29	ALL
	Z	106	BJ	W1175	5107R	24		34-22-39	ALL
	Z	109	BJ	W1175	5014B	24		34-22-39	ALL
	Z	109	BJ	W1175	5023B	24		34-22-19	ALL
	Z	109	BJ	W1175	5033B	24		22-32-12	ALL
	Z	109	BJ	W1175	5059B	24		22-14-11	ALL
	Z	109	BJ	W1175	5070B	24		34-61-12	ALL
	Z	110	BJ	W1175	5014R	24		34-22-39	ALL
	Z	110	BJ	W1175	5023R	24		34-22-19	ALL
	Z	110	BJ	W1175	5033R	24		22-32-12	ALL
	Z	110	BJ	W1175	5059R	24		22-14-11	ALL
	Z	110	BJ	W1175	5070R	24		34-61-12	ALL
	Z	115	BJ	W1175	0413	22		34-45-02	001, 003-099, 115-199
	Z	115	BJ	W1175	0606	22		34-46-11	001, 003-099, 115-199
	Z	115	BJ	W1175	0607	22		34-46-11	ALL
	Z	115	BJ	W1175	0608	22		34-22-26	001, 003-099, 115-199
	Z	115	BJ	W1175	0609	22		34-22-16	001, 003-099, 115-199
	Z	115	BJ	W1175	0610	22		34-22-36	001, 003-099, 115-199
	Z	115	BJ	W1175	0611	22		34-22-36	001, 003-099, 115-199
	Z	115	BJ	W1175	0612	24		31-51-21	ALL
	Z	115	BJ	W1175	0772	22		34-46-11	002
	Z	116	BJ	W1175	0056	22		31-51-21	002
	Z	116	BJ	W1175	0246	22		34-46-11	002
	Z	116	BJ	W1175	8006	22		34-46-13	002
	Z	116	BJ	W1175	8018	22		34-46-13	002
	Z	116	BJ	W1175	8019	22		34-46-13	002
	Z	117	BJ	W1175	0601	22		34-46-11	001, 003-008, 115-199
	Z	117	BJ	W1175	0602	22		34-46-11	001, 003-008, 115-199
	Z	117	BJ	W1175	0603	22		34-46-12	001, 003-008, 115-199
	Z	117	BJ	W1175	0604	22		34-46-12	001, 003-008, 115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 34

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0205		AMY4100T-10U (continued)					E002-03/ /		001, 003-099
TB0205	A	YHLZD-33 (continued)					E002-03/ /		002
TB0205	X	BACM15C3A (continued)					E2-3/ /		ALL
TB0205	Y	BACM15C3B (continued)					E2-3/ /		ALL
TB0205	Z	BACM15C3C (continued)					E2-3/ /		ALL
	Z	117	BJ	W1175	0605	22		34-46-12	001, 003-008, 115-199
	Z	117	BJ	W1175	0621	22		34-46-11	001, 003-008, 115-199
	Z	121	BJ	W1175	5026B	24		31-31-42	001-099
	Z	121	BJ	W1175	5026B	24		31-31-22	115-199
	Z	121	BJ	W1175	5030B	24		22-41-11	ALL
	Z	121	BJ	W1175	5031B	24		22-32-12	ALL
	Z	121	BJ	W1175	5034B	24		22-32-12	ALL
	Z	121	BJ	W1175	5035B	24		22-32-12	ALL
	Z	122	BJ	W1175	5026R	24		31-31-42	001-099
	Z	122	BJ	W1175	5026R	24		31-31-22	115-199
	Z	122	BJ	W1175	5030R	24		22-41-11	ALL
	Z	122	BJ	W1175	5031R	24		22-32-12	ALL
	Z	122	BJ	W1175	5034R	24		22-32-12	ALL
	Z	122	BJ	W1175	5035R	24		22-32-12	ALL
	Z	13	BJ	W1175	0099	22		22-32-14	011-099
	Z	13	BJ	W1175	0102	22		22-32-14	011-099
	Z	13	BJ	W1175	0104	22		22-32-14	011-099
	Z	13	BJ	W1175	0264	22		22-32-14	011-099
	Z	13	BJ	W1175	0482	22		22-32-14	011-099
	Z	55	BJ	W1175	5006B	24		34-22-38	ALL
	Z	55	BJ	W1175	5055B	24		22-13-31	ALL
	Z	55	BJ	W1175	5085B	24		34-22-38	ALL
	Z	56	BJ	W1175	5006R	24		34-22-38	ALL
	Z	56	BJ	W1175	5055R	24		22-13-31	ALL
	Z	56	BJ	W1175	5085R	24		34-22-38	ALL
	Z	57	BJ	W1175	0457	22		34-46-13	009-099
	Z	57	BJ	W1175	0602	22		34-46-13	009-099
	Z	57	BJ	W1175	0603	22		34-46-13	009-099
	Z	57	BJ	W1175	0604	22		34-46-13	009-099
	Z	57	BJ	W1175	0605	22		34-46-13	009-099
	Z	57	BJ	W1175	8008	22		34-46-13	002
	Z	57	BJ	W1175	8010	22		34-46-13	002
	Z	57	BJ	W1175	8011	22		34-46-13	002
	Z	57	BJ	W1175	8012	22		34-46-13	002
	Z	59	BJ	W1175	0406	22		34-46-13	009-099
	Z	59	BJ	W1175	0458	22		34-46-13	009-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 35

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0205		AMY4100T-10U (continued)					E002-03/ /		001, 003-099
TB0205	A	YHLZD-33 (continued)					E002-03/ /		002
TB0205	X	BACM15C3A (continued)					E2-3/ /		ALL
TB0205	Y	BACM15C3B (continued)					E2-3/ /		ALL
TB0205	Z	BACM15C3C (continued)					E2-3/ /		ALL
	Z	59	BJ	W1175	0621	22		34-46-13	009-099
	Z	59	BJ	W1175	8007	22		34-46-13	002
	Z	59	BJ	W1175	8009	22		34-46-13	002
	Z	59	BJ	W1175	8014	22		34-46-13	002
	Z	59	BJ	W1175	8015	22		34-46-13	002
	Z	59	BJ	W1175	8016	22		34-46-13	002
	Z	63	BJ	W1175	5084R	22		31-31-42	002
	Z	63	BJ	W1175	5152R	22		34-46-12	002
	Z	63	BJ	W1175	5154R	22		34-46-12	002
	Z	63	BJ	W1175	5155R	22		34-46-12	002
	Z	63	BJ	W1175	5159R	22		34-22-38	002
	Z	64		W1175	5084B	22		31-31-42	002
	Z	64	BJ	W1175	5152B	22		34-46-12	002
	Z	64	BJ	W1175	5154B	22		34-46-12	002
	Z	64	BJ	W1175	5155B	22		34-46-12	002
	Z	64	BJ	W1175	5159B	22		34-22-38	002
	Z	73	BJ	W1175	2019R	20		22-11-31	115-199
	Z	73	BJ	W1175	2020R	22		22-11-31	ALL
	Z	73	BJ	W1175	2021R	22		22-11-31	ALL
	Z	73	BJ	W1175	2022R	22		22-11-31	ALL
	Z	73	BJ	W1175	2023R	22		22-11-31	ALL
	Z	73	BJ	W1175	2036R	20		22-11-31	001-099
	Z	74	BJ	W1175	2019B	20		22-11-31	115-199
	Z	74	BJ	W1175	2020B	22		22-11-31	ALL
	Z	74	BJ	W1175	2021B	22		22-11-31	ALL
	Z	74	BJ	W1175	2022B	22		22-11-31	ALL
	Z	74	BJ	W1175	2023B	22		22-11-31	ALL
	Z	74	BJ	W1175	2036B	20		22-11-31	001-099
	Z	91	BJ	W1175	0608	22		34-22-26	002
	Z	91	BJ	W1175	0609	22		34-22-16	002
	Z	91	BJ	W1175	0610	22		34-22-36	002
	Z	91	BJ	W1175	0611	22		34-22-36	002
	Z	91	BJ	W1175	0796	22		34-46-11	002
	A	A009	2	W1175	0530	22		34-43-14	002
	A	A010	2	W1175	0530	22		34-43-14	002
	A	A010	2	W1175	0772	22		34-46-11	002

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 36

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0205		AMY4100T-10U (continued)					E002-03/ /		001, 003-099
TB0205	A	YHLZD-33 (continued)					E002-03/ /		002
TB0205	X	BACM15C3A (continued)					E2-3/ /		ALL
TB0205	Y	BACM15C3B (continued)					E2-3/ /		ALL
TB0205	Z	BACM15C3C (continued)					E2-3/ /		ALL
	X	A011	BJ	W1175	0100	22		22-32-14	011-099
	X	A011	BJ	W1175	0483	22		22-32-14	011-099
	X	A012	BJ	W1175	0487	22		22-32-14	011-099
	Y	A015	BJ	W1175	5111B	24		34-31-11	ALL
	Y	A015	BJ	W1175	5112B	24		34-31-11	ALL
	Y	A015	BJ	W1175	5113B	24		34-31-11	ALL
	Y	A016	BJ	W1175	5111R	24		34-31-11	ALL
	Y	A016	BJ	W1175	5112R	24		34-31-11	ALL
	Y	A016	BJ	W1175	5113R	24		34-31-11	ALL
	Y	A017	BJ	W1175	5146R	22		34-22-18	002
	Y	A017	BJ	W1175	5148R	22		34-22-28	002
	Y	A017	BJ	W1175	5149R	22		34-22-38	002
	Y	A018	BJ	W1175	5146B	22		34-22-18	002
	Y	A018	BJ	W1175	5148B	22		34-22-28	002
	Y	A018	BJ	W1175	5149B	22		34-22-38	002
	X	A029	BJ	W1175	0626	22		22-11-33	010-099
	X	A030	BJ	W1175	0626	22		22-11-33	009
	X	A030	BJ	W1175	0652	22		22-11-33	009-099
	X	A031	BJ	W1175	0630	22		22-11-33	009-099
	X	A032	BJ	W1175	0678	22		22-11-33	009-099
	X	A033	BJ	W1175	0634	22		22-11-33	009-099
	X	A034	BJ	W1175	0661	22		22-11-33	009-099
	X	A035	BJ	W1175	0638	22		22-11-33	009-099
	X	A036	BJ	W1175	0665	22		22-11-33	009-099
	X	A037	BJ	W1175	0643	22		22-11-33	009-099
	X	A038	BJ	W1175	0669	22		22-11-33	009-099
	X	A039	BJ	W1175	0647	22		22-11-33	009-099
	X	A040	BJ	W1175	0673	22		22-11-33	009-099
	Y	A042	BJ	W1175	0259	22		34-46-12	009-099
	Y	A042	BJ	W1175	0615	22		34-46-12	009-099
	Y	A042	BJ	W1175	0616	22		34-46-12	009-099
	X	A044	BJ	W1175	0651	22		22-11-33	009-099
	X	A044	BJ	W1175	0677	22		22-11-33	009-099
	X	A045	BJ	W1175	8023	22		34-46-13	002
	X	A046	BJ	W1175	0448	22		34-46-13	009-099
	X	A047	BJ	W1175	8022	22		34-46-13	002

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 37

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0205		AMY4100T-10U (continued)					E002-03/ /		001, 003-099
TB0205	A	YHLZD-33 (continued)					E002-03/ /		002
TB0205	X	BACM15C3A (continued)					E2-3/ /		ALL
TB0205	Y	BACM15C3B (continued)					E2-3/ /		ALL
TB0205	Z	BACM15C3C (continued)					E2-3/ /		ALL
	X	A048	BJ	W1175	0709	22		34-46-13	009-099
	X	A048	BJ	W1175	8005	22		34-46-13	002
	X	A051	BJ	W1175	0452	22		34-46-13	009-099
	X	A052	BJ	W1175	0708	22		34-46-13	009-099
	X	A053	BJ	W1175	0450	22		34-46-13	009-099
	X	A054	BJ	W1175	0455	22		34-46-13	009-099
	Y	A063	BJ	W1175	5119B	22		34-25-12	002
	Y	A063	BJ	W1175	5123B	22		34-25-12	002
	Y	A063	BJ	W1175	5124B	22		34-25-12	002
	Y	A064	BJ	W1175	5119R	22		34-25-12	002
	Y	A064	BJ	W1175	5123R	22		34-25-12	002
	Y	A064	BJ	W1175	5124R	22		34-25-12	002
	Y	A065	BJ	W1175	5066B	24		34-46-12	009, 115-199
	Y	A065	BJ	W1175	5087B	24		34-46-12	009, 115-199
	Y	A065	BJ	W1175	5088B	24		34-46-12	009, 115-199
	Y	A066	BJ	W1175	5066R	24		34-46-12	009, 115-199
	Y	A066	BJ	W1175	5087R	24		34-46-12	009, 115-199
	Y	A066	BJ	W1175	5088R	24		34-46-12	009, 115-199
	Y	A067	BJ	W1175	5025B	24		31-31-41	001-099
	Y	A067	BJ	W1175	5025B	24		31-31-21	115-199
	Y	A067	BJ	W1175	5078B	24		34-25-11	001, 003-099, 115-199
	Y	A067	BJ	W1175	5079B	24		34-22-39	001, 003-099, 115-199
	Y	A067	BJ	W1175	5079B	24		34-25-12	002
	Y	A067	BJ	W1175	5116B	22		34-25-12	002
	Y	A067	BJ	W1175	5122B	22		34-25-12	002
	Y	A068	BJ	W1175	5025R	24		31-31-41	001-099
	Y	A068	BJ	W1175	5025R	24		31-31-21	115-199
	Y	A068	BJ	W1175	5078R	24		34-25-11	001, 003-099, 115-199
	Y	A068	BJ	W1175	5079R	24		34-22-39	001, 003-099, 115-199
	Y	A068	BJ	W1175	5079R	24		34-25-12	002
	Y	A068	BJ	W1175	5116R	22		34-25-12	002
	Y	A068	BJ	W1175	5122R	22		34-25-12	002
	Y	A069	BJ	W1175	5051B	24		22-12-31	ALL
	Y	A069	BJ	W1175	5052B	24		22-12-31	ALL
	Y	A069	BJ	W1175	5053B	24		22-12-31	ALL
	Y	A070	BJ	W1175	5051R	24		22-12-31	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 38

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0205		AMY4100T-10U (continued)					E002-03/ /		001, 003-099
TB0205	A	YHLZD-33 (continued)					E002-03/ /		002
TB0205	X	BACM15C3A (continued)					E2-3/ /		ALL
TB0205	Y	BACM15C3B (continued)					E2-3/ /		ALL
TB0205	Z	BACM15C3C (continued)					E2-3/ /		ALL
	Y	A070	BJ	W1175	5052R	24		22-12-31	ALL
	Y	A070	BJ	W1175	5053R	24		22-12-31	ALL
	Y	A075	BJ	W1175	5047B	24		22-12-31	ALL
	Y	A075	BJ	W1175	5048B	24		22-12-31	ALL
	Y	A075	BJ	W1175	5073B	24		22-22-11	ALL
	Y	A076	BJ	W1175	5047R	24		22-12-31	ALL
	Y	A076	BJ	W1175	5048R	24		22-12-31	ALL
	Y	A076	BJ	W1175	5073R	24		22-22-11	ALL
	Y	A093	BJ	W1175	0119	24		22-32-13	ALL
	Y	A094	BJ	W1175	0118	24		22-32-13	ALL
	Y	A095	BJ	W1175	0531	22		34-43-14	002
	Y	A095	BJ	W1175	0771	22		34-43-14	002
	Y	A095	BJ	W1175	0773	22		34-43-14	002
	Y	A111	BJ	W1175	5022B	24		34-43-11	ALL
	Y	A111	BJ	W1175	5040B	24		22-32-11	ALL
	Y	A111	BJ	W1175	5041B	24		22-32-11	ALL
	Y	A112	BJ	W1175	5022R	24		34-43-11	ALL
	Y	A112	BJ	W1175	5040R	24		22-32-11	ALL
	Y	A112	BJ	W1175	5041R	24		22-32-11	ALL
	Y	A113	BJ	W1175	0259	22		34-46-12	001-008, 115-199
	Y	A113	BJ	W1175	0615	22		34-46-12	001, 003-008, 115-199
	Y	A113	BJ	W1175	0616	22		34-46-12	001-008, 115-199
	X	A119	BJ	W1175	2537R	24		22-32-12	ALL
	X	A120	BJ	W1175	2537B	24		22-32-12	ALL
	X	B011	BJ	W1175	0101	22		22-32-14	011-099
	X	B011	BJ	W1175	0484	22		22-32-14	011-099
	X	B012	BJ	W1175	0098	22		22-32-14	011-099
	X	B012	BJ	W1175	0488	22		22-32-14	011-099
	X	B030	BJ	W1175	0627	22		22-11-33	009-099
	X	B030	BJ	W1175	0653	22		22-11-33	009-099
	X	B031	BJ	W1175	0631	22		22-11-33	009-099
	X	B032	BJ	W1175	0679	22		22-11-33	009-099
	X	B033	BJ	W1175	0635	22		22-11-33	009-099
	X	B034	BJ	W1175	0662	22		22-11-33	009-099
	X	B035	BJ	W1175	0639	22		22-11-33	009
	X	B036	BJ	W1175	0639	22		22-11-33	010-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 39

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0205		AMY4100T-10U (continued)					E002-03/ /		001, 003-099
TB0205	A	YHLZD-33 (continued)					E002-03/ /		002
TB0205	X	BACM15C3A (continued)					E2-3/ /		ALL
TB0205	Y	BACM15C3B (continued)					E2-3/ /		ALL
TB0205	Z	BACM15C3C (continued)					E2-3/ /		ALL
	X	B036	BJ	W1175	0666	22		22-11-33	009-099
	X	B037	BJ	W1175	0644	22		22-11-33	009-099
	X	B038	BJ	W1175	0670	22		22-11-33	009-099
	X	B039	BJ	W1175	0648	22		22-11-33	009-099
	X	B040	BJ	W1175	0674	22		22-11-33	009-099
	X	B045	BJ	W1175	0446	22		34-46-13	009-099
	X	B045	BJ	W1175	8021	22		34-46-13	002
	X	B047	BJ	W1175	0294	22		34-46-13	009-099
	X	B048	BJ	W1175	0449	22		34-46-13	009-099
	X	B048	BJ	W1175	8020	22		34-46-13	002
	X	B051	BJ	W1175	0453	22		34-46-13	009-099
	X	B052	BJ	W1175	0734	22		34-46-13	009-099
	X	B053	BJ	W1175	0454	22		34-46-13	009-099
	X	B054	BJ	W1175	0456	22		34-46-13	009-099
	X	B119	BJ	W1175	3501B	24		22-32-12	ALL
	X	B120	BJ	W1175	3501R	24		22-32-12	ALL
	A	C009	2	W1175	0771	22		34-43-14	002
	A	C010	2	W1175	0606	22		34-46-11	002
	A	C010	2	W1175	0796	22		34-46-11	002
	X	C011	BJ	W1175	0485	22		22-32-14	011-099
	X	C030	BJ	W1175	0628	22		22-11-33	009-099
	X	C030	BJ	W1175	0654	22		22-11-33	009-099
	X	C031	BJ	W1175	0632	22		22-11-33	009-099
	X	C032	BJ	W1175	0659	22		22-11-33	009-099
	X	C033	BJ	W1175	0636	22		22-11-33	009-099
	X	C034	BJ	W1175	0663	22		22-11-33	009-099
	X	C036	BJ	W1175	0641	22		22-11-33	009-099
	X	C036	BJ	W1175	0667	22		22-11-33	009-099
	X	C037	BJ	W1175	0645	22		22-11-33	009-099
	X	C038	BJ	W1175	0671	22		22-11-33	009-099
	X	C039	BJ	W1175	0649	22		22-11-33	009-099
	X	C040	BJ	W1175	0675	22		22-11-33	009-099
	Y	C042	BJ	W1175	0696	22		34-46-14	002
	Y	C042	BJ	W1175	8003	22		34-46-13	002
	Y	C042	BJ	W1175	8004	22		34-46-13	002
	X	C045	BJ	W1175	0447	22		34-46-13	009-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 40

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0205		AMY4100T-10U (continued)					E002-03/ /		001, 003-099
TB0205	A	YHLZD-33 (continued)					E002-03/ /		002
TB0205	X	BACM15C3A (continued)					E2-3/ /		ALL
TB0205	Y	BACM15C3B (continued)					E2-3/ /		ALL
TB0205	Z	BACM15C3C (continued)					E2-3/ /		ALL
	X	C047	BJ	W1175	0657	22		34-46-13	009-099
	X	C048	BJ	W1175	0614	22		34-46-13	009-099
	X	C052	BJ	W1175	0625	22		34-46-13	009-099
	X	C054	BJ	W1175	0408	22		34-46-13	009-099
	Y	C067	BJ	W1175	5118B	22		34-25-12	002
	Y	C067	BJ	W1175	5120B	22		34-25-12	002
	Y	C067	BJ	W1175	5121B	22		34-25-12	002
	Y	C068	BJ	W1175	5118R	22		34-25-12	002
	Y	C068	BJ	W1175	5120R	22		34-25-12	002
	Y	C068	BJ	W1175	5121R	22		34-25-12	002
	Y	C069	BJ	W1175	5057B	24		22-13-31	ALL
	Y	C069	BJ	W1175	5058B	24		22-13-31	ALL
	Y	C070	BJ	W1175	5057R	24		22-13-31	ALL
	Y	C070	BJ	W1175	5058R	24		22-13-31	ALL
	Y	C077	BJ	W1175	0320	22		34-22-16	002
	Y	C077	BJ	W1175	0541	22		34-43-14	002
	Y	C077	BJ	W1175	0579	22		34-22-26	002
	Y	C077	BJ	W1175	0588	22		34-22-36	002
	Y	C078	BJ	W1175	0560	22		34-22-16	002
	Y	C078	BJ	W1175	0580	22		34-22-26	002
	Y	C078	BJ	W1175	0587	22		34-22-36	002
	Y	C078	BJ	W1175	0773	22		34-43-14	002
	Y	C087	BJ	W1175	0087	24		22-32-15	ALL
	Y	C087	BJ	W1175	0327	24		22-32-15	ALL
	Y	C093	BJ	W1175	0127	24		22-32-13	ALL
	Y	C094	BJ	W1175	0120	24		22-32-13	ALL
	Y	C099	BJ	W1175	0245	22		34-46-11	002
	Y	C099	2	W1175	0423	22		34-46-11	002
	Y	C099	BJ	W1175	8002	22		34-46-13	002
	Y	C101	BJ	W1175	5013B	24		34-22-39	ALL
	Y	C101	BJ	W1175	5074B	24		34-24-11	ALL
	Y	C101	BJ	W1175	5075B	24		34-31-31	ALL
	Y	C101	BJ	W1175	5086B	24		31-31-43	001-099
	Y	C101	BJ	W1175	5086B	24		31-31-22	115-199
	Y	C102	BJ	W1175	5013R	24		34-22-39	ALL
	Y	C102	BJ	W1175	5074R	24		34-24-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 41

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0205		AMY4100T-10U (continued)					E002-03/ /		001, 003-099
TB0205	A	YHLZD-33 (continued)					E002-03/ /		002
TB0205	X	BACM15C3A (continued)					E2-3/ /		ALL
TB0205	Y	BACM15C3B (continued)					E2-3/ /		ALL
TB0205	Z	BACM15C3C (continued)					E2-3/ /		ALL
	Y	C102	BJ	W1175	5075R	24		34-31-31	ALL
	Y	C102	BJ	W1175	5086R	24		31-31-43	001-099
	Y	C102	BJ	W1175	5086R	24		31-31-22	115-199
	Y	C107	BJ	W1175	5001B	24		34-22-29	ALL
	Y	C107	BJ	W1175	5032B	24		22-32-12	ALL
	Y	C107	BJ	W1175	5060B	24		22-14-21	ALL
	Y	C108	BJ	W1175	5001R	24		34-22-29	ALL
	Y	C108	BJ	W1175	5032R	24		22-32-12	ALL
	Y	C108	BJ	W1175	5060R	24		22-14-21	ALL
	Y	C111	BJ	W1175	5036B	24		22-32-11	ALL
	Y	C111	BJ	W1175	5054B	24		22-13-11	ALL
	Y	C111	BJ	W1175	5056B	24		22-13-31	ALL
	Y	C112	BJ	W1175	5036R	24		22-32-11	ALL
	Y	C112	BJ	W1175	5054R	24		22-13-11	ALL
	Y	C112	BJ	W1175	5056R	24		22-13-31	ALL
	X	C119	BJ	W1175	3501Y	24		22-32-12	ALL
	X	D011	BJ	W1175	0103	22		22-32-14	011-099
	X	D011	BJ	W1175	0486	22		22-32-14	011-099
	X	D029	BJ	W1175	0629	22		22-11-33	009-099
	X	D030	BJ	W1175	0655	22		22-11-33	009-099
	X	D032	BJ	W1175	0633	22		22-11-33	009-099
	X	D032	BJ	W1175	0660	22		22-11-33	009-099
	X	D033	BJ	W1175	0637	22		22-11-33	009-099
	X	D034	BJ	W1175	0664	22		22-11-33	009-099
	X	D036	BJ	W1175	0642	22		22-11-33	009-099
	X	D036	BJ	W1175	0668	22		22-11-33	009-099
	X	D038	BJ	W1175	0646	22		22-11-33	009-099
	X	D038	BJ	W1175	0672	22		22-11-33	009-099
	X	D039	BJ	W1175	0650	22		22-11-33	009-099
	X	D040	BJ	W1175	0676	22		22-11-33	009-099
	X	D045	BJ	W1175	0736	22		34-46-13	009-099
	X	D047	BJ	W1175	0658	22		34-46-13	009-099
	X	D051	BJ	W1175	0451	22		34-46-13	009-099
	X	D052	BJ	W1175	0310	22		34-46-13	009-099
	X	D053	BJ	W1175	0735	22		34-46-13	009-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 42

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0206	A	YHLZR-16					E002-03/ /		001-099
TB0206	A	YHLZR-16					E2-3/ /		115-199
	A	A001	2	W1175	5018W	24		34-43-11	001, 003-099, 115-199
	A	A001	2	W1175	5018W	24		34-43-15	002
	A	A001	2	W1175	5019W	24		34-43-11	001, 003-099, 115-199
	A	A001	2	W1175	5019W	24		34-43-15	002
	A	A002	2	W1175	5020W	24		34-43-11	001, 003-099, 115-199
	A	A002	2	W1175	5020W	24		34-43-15	002
	A	A002	2	W1175	5021W	24		34-43-11	001, 003-099, 115-199
	A	A002	2	W1175	5021W	24		34-43-15	002
	A	C001	2	W1175	5018B	24		34-43-11	001, 003-099, 115-199
	A	C001	2	W1175	5018B	24		34-43-15	002
	A	C001	2	W1175	5019B	24		34-43-11	001, 003-099, 115-199
	A	C001	2	W1175	5019B	24		34-43-15	002
	A	C002	2	W1175	5020B	24		34-43-11	001, 003-099, 115-199
	A	C002	2	W1175	5020B	24		34-43-15	002
	A	C002	2	W1175	5021B	24		34-43-11	001, 003-099, 115-199
	A	C002	2	W1175	5021B	24		34-43-15	002
TB0207		AMY4100T-10U					E004-02/ /		001, 003-099, 115-199
TB0207	A	YHLZD-33					E4-2/ /		ALL
TB0207	A	YHLZD-29					E4-2/ /		115-199
TB0207	B	YHLZR-30					E4-2/ /		ALL
TB0207	C	YHLZR-29					E4-2/ /		ALL
TB0207	D	285N0094-12					E004-02/ /		ALL
TB0207	E	285N0089-8					E004-02/ /		ALL
TB0207	G	BACM15C1B					E4-2/ /		ALL
TB0207	X	BACM15C3A					E4-2/ /		ALL
TB0207	Y	BACM15C3B					E4-2/ /		ALL
TB0207	Z	BACM15C3C					E4-2/ /		ALL
	Z			W1275	2501Z			77-12-31	ALL
	Z			W1275	2502Z			77-12-31	ALL
	Z			W1275	2503Z			77-12-31	ALL
	Z			W1275	2504Z			77-12-31	ALL
	Z			W1275	2505Z			77-12-31	ALL
	Z			W1275	2506Z			77-12-31	ALL
	Z			W1275	2507Z			77-12-31	ALL
	Z			W1275	2508Z			77-12-31	ALL
	Z			W1275	2509Z			77-12-11	ALL
	Z			W1275	2510Z			77-12-11	ALL
	Y			W1275	2511Z			77-12-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 43

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0207		AMY4100T-10U (continued)					E004-02/ /		001, 003-099, 115-199
TB0207	A	YHLZD-33 (continued)					E4-2/ /		ALL
TB0207	A	YHLZD-29 (continued)					E4-2/ /		115-199
TB0207	B	YHLZR-30 (continued)					E4-2/ /		ALL
TB0207	C	YHLZR-29 (continued)					E4-2/ /		ALL
TB0207	D	285N0094-12 (continued)					E004-02/ /		ALL
TB0207	E	285N0089-8 (continued)					E004-02/ /		ALL
TB0207	G	BACM15C1B (continued)					E4-2/ /		ALL
TB0207	X	BACM15C3A (continued)					E4-2/ /		ALL
TB0207	Y	BACM15C3B (continued)					E4-2/ /		ALL
TB0207	Z	BACM15C3C (continued)					E4-2/ /		ALL
	Y			W1275	2512Z			77-12-11	ALL
	Z			W1275	2513Z			77-12-11	ALL
	Z			W1275	2514Z			77-12-11	ALL
	Y			W1275	2515Z			77-12-11	ALL
	Y			W1275	2516Z			77-12-11	ALL
	Y			W1275	2517Z			77-12-21	ALL
	Y			W1275	2518Z			77-12-21	ALL
	Y			W1275	2519Z			77-12-21	ALL
	Y			W1275	2520Z			77-12-21	ALL
	Y			W1275	2521Z			77-12-21	ALL
	Y			W1275	2522Z			77-12-21	ALL
	Z			W1275	2590Z			77-12-31	ALL
	Z			W1275	2592Z			77-12-31	ALL
	Z			W1275	2613Z			77-12-11	ALL
	Z			W1275	2614Z			77-12-11	ALL
	Z			W1275	2615Z			77-12-11	ALL
	Z			W1275	2616Z			77-12-11	ALL
	Y			W1275	2617Z			77-12-21	ALL
	Y			W1275	2618Z			77-12-21	ALL
	Z			W1275	2619Z			77-12-31	ALL
	Z			W1275	2620Z			77-12-31	ALL
	Y			W1275	5004Z			22-41-13	001-099
	Y			W1275	5005Z			22-41-13	001-099
	Y			W1275	5006Z			22-41-13	001-099
	Y			W1275	5028Z			28-41-11	ALL
	Y			W1275	5029Z			28-41-11	ALL
	Y			W1275	5042Z			28-41-11	ALL
	Y			W1275	5043Z			28-41-11	ALL
	Y			W1275	5045Z			77-31-11	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 44

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0207		AMY4100T-10U (continued)					E004-02/ /		001, 003-099, 115-199
TB0207	A	YHLZD-33 (continued)					E4-2/ /		ALL
TB0207	A	YHLZD-29 (continued)					E4-2/ /		115-199
TB0207	B	YHLZR-30 (continued)					E4-2/ /		ALL
TB0207	C	YHLZR-29 (continued)					E4-2/ /		ALL
TB0207	D	285N0094-12 (continued)					E004-02/ /		ALL
TB0207	E	285N0089-8 (continued)					E004-02/ /		ALL
TB0207	G	BACM15C1B (continued)					E4-2/ /		ALL
TB0207	X	BACM15C3A (continued)					E4-2/ /		ALL
TB0207	Y	BACM15C3B (continued)					E4-2/ /		ALL
TB0207	Z	BACM15C3C (continued)					E4-2/ /		ALL
	Y			W1275	5046Z			77-31-11	001-099
	Y			W1275	5047Z			77-31-11	001-099
	Y			W1275	5080Z			77-31-11	001-099
	Y			W1275	5081Z			77-31-11	001-099
	Y			W1275	5082Z			77-31-11	001-099
	Y			W1275	FRTD			77-31-11	001-099
	Y			W1275	FRTF			77-12-21	ALL
	Y			W1275	FRTG			77-12-21	ALL
	Y			W1275	FRTI			77-31-11	001-099
	Y			W1275	FRTM			22-41-13	001-099
	Y			W1275	FRUA			28-41-11	ALL
	Z	10	BJ	W1275	2501R	24		77-12-31	ALL
	Z	10	BJ	W1275	2502R	24		77-12-31	ALL
	Z	10	BJ	W1275	2503R	24		77-12-31	ALL
	Z	10	BJ	W1275	2504R	24		77-12-31	ALL
	Z	10	BJ	W1275	2590R	24		77-12-31	ALL
	Z	10	BJ	W1275	2620R	24		77-12-31	ALL
	D	101		W1275	E-BL			77-11-11	ALL
	D	101		W1275	E-RD			77-11-11	ALL
	D	101		W1275	E-YL			77-11-11	ALL
	D	102		W1275	F-BL			77-11-11	ALL
	D	102		W1275	F-RD			77-11-11	ALL
	D	102		W1275	F-YL			77-11-11	ALL
	Z	103	BJ	W1275	0441	24		29-22-11	001-099
	Z	103	BJ	W1275	0781	24		29-11-12	115-199
	Z	103	BJ	W1275	0782	24		29-11-12	115-199
	Z	103	BJ	W1275	0783	22		29-11-12	001-099
	Z	103	BJ	W1275	0784	24		29-11-12	001-099
	Z	103	BJ	W1275	0785	24		29-11-12	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 45

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0207		AMY4100T-10U (continued)					E004-02/ /		001, 003-099, 115-199
TB0207	A	YHLZD-33 (continued)					E4-2/ /		ALL
TB0207	A	YHLZD-29 (continued)					E4-2/ /		115-199
TB0207	B	YHLZR-30 (continued)					E4-2/ /		ALL
TB0207	C	YHLZR-29 (continued)					E4-2/ /		ALL
TB0207	D	285N0094-12 (continued)					E004-02/ /		ALL
TB0207	E	285N0089-8 (continued)					E004-02/ /		ALL
TB0207	G	BACM15C1B (continued)					E4-2/ /		ALL
TB0207	X	BACM15C3A (continued)					E4-2/ /		ALL
TB0207	Y	BACM15C3B (continued)					E4-2/ /		ALL
TB0207	Z	BACM15C3C (continued)					E4-2/ /		ALL
	Z	103	BJ	W1275	6027	22		29-11-12	115-199
	Z	103	BJ	W1275	6174	22		29-11-12	115-199
	Z	103	BJ	W1275	6408	22		29-11-12	001-099
	Z	104	BJ	W1275	0790	24		29-11-22	ALL
	Z	104	BJ	W1275	0791	24		29-11-22	ALL
	Z	104	BJ	W1275	6175	22		29-11-22	ALL
	Z	104	BJ	W1275	6305	22		29-11-22	115-199
	Z	104	BJ	W1275	6431	22		29-11-22	001-099
	Z	105	BJ	W1275	6028	22		29-11-31	ALL
	Z	105	BJ	W1275	6029	22		29-11-31	ALL
	Z	105	BJ	W1275	6030	24		29-11-31	ALL
	Z	105	BJ	W1275	6031	24		29-11-31	ALL
	Z	105	BJ	W1275	6173	22		29-11-31	ALL
	Z	105	BJ	W1275	6183	22		22-41-11	ALL
	Z	106	BJ	W1275	2509R	24		77-12-11	ALL
	Z	106	BJ	W1275	2510R	24		77-12-11	ALL
	Z	106	BJ	W1275	2614R	24		77-12-11	ALL
	Z	106	BJ	W1275	2616R	24		77-12-11	ALL
	Z	106	BJ	W1275	A-YL			77-12-11	ALL
	Z	107	BJ	W1275	2509B	24		77-12-11	ALL
	Z	107	BJ	W1275	2510B	24		77-12-11	ALL
	Z	107	BJ	W1275	2614B	24		77-12-11	ALL
	Z	107	BJ	W1275	2616B	24		77-12-11	ALL
	Z	107	BJ	W1275	A-RD			77-12-11	ALL
	Z	108	BJ	W1275	6002	24		31-51-33	115-199
	Z	108	BJ	W1275	6003	24		31-51-33	115-199
	Z	108	BJ	W1275	6496	24		31-51-33	115-199
	Z	108	BJ	W1275	6499	24		31-51-33	115-199
	Z	111	BJ	W1275	2513R	24		77-12-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 46

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0207		AMY4100T-10U (continued)					E004-02/ /		001, 003-099, 115-199
TB0207	A	YHLZD-33 (continued)					E4-2/ /		ALL
TB0207	A	YHLZD-29 (continued)					E4-2/ /		115-199
TB0207	B	YHLZR-30 (continued)					E4-2/ /		ALL
TB0207	C	YHLZR-29 (continued)					E4-2/ /		ALL
TB0207	D	285N0094-12 (continued)					E004-02/ /		ALL
TB0207	E	285N0089-8 (continued)					E004-02/ /		ALL
TB0207	G	BACM15C1B (continued)					E4-2/ /		ALL
TB0207	X	BACM15C3A (continued)					E4-2/ /		ALL
TB0207	Y	BACM15C3B (continued)					E4-2/ /		ALL
TB0207	Z	BACM15C3C (continued)					E4-2/ /		ALL
	Z	111	BJ	W1275	2514R	24		77-12-11	ALL
	Z	111	BJ	W1275	2613R	24		77-12-11	ALL
	Z	111	BJ	W1275	2615R	24		77-12-11	ALL
	Z	111	BJ	W1275	B-YL			77-12-11	ALL
	Z	112	BJ	W1275	2513B	24		77-12-11	ALL
	Z	112	BJ	W1275	2514B	24		77-12-11	ALL
	Z	112	BJ	W1275	2613B	24		77-12-11	ALL
	Z	112	BJ	W1275	2615B	24		77-12-11	ALL
	Z	112	BJ	W1275	B-RD			77-12-11	ALL
	E	113		W1275	A-BL			77-12-11	ALL
	E	113		W1275	A-GR			77-12-11	ALL
	E	113		W1275	A-RD			77-12-11	ALL
	E	113		W1275	A-WT			77-12-11	ALL
	E	113		W1275	A-YL			77-12-11	ALL
	E	114		W1275	B-BL			77-12-11	ALL
	E	114		W1275	B-GR			77-12-11	ALL
	E	114		W1275	B-RD			77-12-11	ALL
	E	114		W1275	B-WT			77-12-11	ALL
	E	114		W1275	B-YL			77-12-11	ALL
	G	115	2	W1275	6072	18		73-21-12	ALL
	G	115	2	W1275	6073	18		73-21-12	ALL
	G	115	2	W1275	6074	24		73-21-12	ALL
	G	116	2	W1275	6075	18		73-21-22	ALL
	G	116	2	W1275	6076	18		73-21-22	ALL
	G	116	2	W1275	6077	24		73-21-22	ALL
	Z	117	BJ	W1275	5067R	24		77-11-11	ALL
	Z	117	BJ	W1275	5069R	24		77-11-11	ALL
	Z	117	BJ	W1275	5079R	24		22-33-11	ALL
	Z	117	BJ	W1275	E-RD			77-11-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 47

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0207		AMY4100T-10U (continued)					E004-02/ /		001, 003-099, 115-199
TB0207	A	YHLZD-33 (continued)					E4-2/ /		ALL
TB0207	A	YHLZD-29 (continued)					E4-2/ /		115-199
TB0207	B	YHLZR-30 (continued)					E4-2/ /		ALL
TB0207	C	YHLZR-29 (continued)					E4-2/ /		ALL
TB0207	D	285N0094-12 (continued)					E004-02/ /		ALL
TB0207	E	285N0089-8 (continued)					E004-02/ /		ALL
TB0207	G	BACM15C1B (continued)					E4-2/ /		ALL
TB0207	X	BACM15C3A (continued)					E4-2/ /		ALL
TB0207	Y	BACM15C3B (continued)					E4-2/ /		ALL
TB0207	Z	BACM15C3C (continued)					E4-2/ /		ALL
	Z	118	BJ	W1275	5067B	24		77-11-11	ALL
	Z	118	BJ	W1275	5069B	24		77-11-11	ALL
	Z	118	BJ	W1275	5079B	24		22-33-11	ALL
	Z	118	BJ	W1275	F-RD			77-11-11	ALL
	Z	13	BJ	W1275	0439	22		29-11-22	ALL
	Z	13	BJ	W1275	0786	22		29-11-22	ALL
	Z	13	BJ	W1275	0787	24		29-11-22	ALL
	Z	13	BJ	W1275	0788	24		29-11-22	ALL
	Z	13	BJ	W1275	6045	22		29-11-22	ALL
	Z	14	BJ	W1275	0792	22		29-11-22	ALL
	Z	14	BJ	W1275	0793	24		29-11-22	ALL
	Z	14	BJ	W1275	0794	24		29-11-22	ALL
	Z	14	BJ	W1275	6047	22		29-11-22	ALL
	Z	15	BJ	W1275	2505R	24		77-12-31	ALL
	Z	15	BJ	W1275	2506R	24		77-12-31	ALL
	Z	15	BJ	W1275	2507R	24		77-12-31	ALL
	Z	15	BJ	W1275	2508R	24		77-12-31	ALL
	Z	15	BJ	W1275	2592R	24		77-12-31	ALL
	Z	15	BJ	W1275	2619R	24		77-12-31	ALL
	Z	16	BJ	W1275	2505B	24		77-12-31	ALL
	Z	16	BJ	W1275	2506B	24		77-12-31	ALL
	Z	16	BJ	W1275	2507B	24		77-12-31	ALL
	Z	16	BJ	W1275	2508B	24		77-12-31	ALL
	Z	16	BJ	W1275	2592B	24		77-12-31	ALL
	Z	16	BJ	W1275	2619B	24		77-12-31	ALL
	Z	17	BJ	W1275	5010B	24		77-11-11	ALL
	Z	17	BJ	W1275	5011B	24		31-31-22	115-199
	Z	17	BJ	W1275	5012B	24		77-11-11	ALL
	Z	17	BJ	W1275	5013B	24		77-11-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 48

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0207		AMY4100T-10U (continued)					E004-02/ /		001, 003-099, 115-199
TB0207	A	YHLZD-33 (continued)					E4-2/ /		ALL
TB0207	A	YHLZD-29 (continued)					E4-2/ /		115-199
TB0207	B	YHLZR-30 (continued)					E4-2/ /		ALL
TB0207	C	YHLZR-29 (continued)					E4-2/ /		ALL
TB0207	D	285N0094-12 (continued)					E004-02/ /		ALL
TB0207	E	285N0089-8 (continued)					E004-02/ /		ALL
TB0207	G	BACM15C1B (continued)					E4-2/ /		ALL
TB0207	X	BACM15C3A (continued)					E4-2/ /		ALL
TB0207	Y	BACM15C3B (continued)					E4-2/ /		ALL
TB0207	Z	BACM15C3C (continued)					E4-2/ /		ALL
	Z	17	BJ	W1275	5014B	24		77-11-11	ALL
	Z	18	BJ	W1275	5010R	24		77-11-11	ALL
	Z	18	BJ	W1275	5011R	24		31-31-22	115-199
	Z	18	BJ	W1275	5012R	24		77-11-11	ALL
	Z	18	BJ	W1275	5013R	24		77-11-11	ALL
	Z	18	BJ	W1275	5014R	24		77-11-11	ALL
	Z	19	BJ	W1275	5015B	24		77-11-11	001-099
	Z	19	BJ	W1275	5015R	24		77-11-11	115-199
	Z	19	BJ	W1275	5016B	24		77-11-11	001-099
	Z	19	BJ	W1275	5016R	24		77-11-11	115-199
	Z	19	BJ	W1275	5017R	24		31-31-22	115-199
	Z	19	BJ	W1275	5018B	24		77-11-11	001-099
	Z	19	BJ	W1275	5018R	24		77-11-11	115-199
	Z	19	BJ	W1275	5019B	24		77-11-11	001-099
	Z	19	BJ	W1275	5019R	24		77-11-11	115-199
	Z	20	BJ	W1275	5015B	24		77-11-11	115-199
	Z	20	BJ	W1275	5015R	24		77-11-11	001-099
	Z	20	BJ	W1275	5016B	24		77-11-11	115-199
	Z	20	BJ	W1275	5016R	24		77-11-11	001-099
	Z	20	BJ	W1275	5017B	24		31-31-22	115-199
	Z	20	BJ	W1275	5018B	24		77-11-11	115-199
	Z	20	BJ	W1275	5018R	24		77-11-11	001-099
	Z	20	BJ	W1275	5019B	24		77-11-11	115-199
	Z	20	BJ	W1275	5019R	24		77-11-11	001-099
	Z	27	BJ	W1275	0441	24		29-22-11	115-199
	Z	27	BJ	W1275	0783	22		29-11-12	115-199
	Z	27	BJ	W1275	0784	24		29-11-12	115-199
	Z	27	BJ	W1275	0785	24		29-11-12	115-199
	Z	27	BJ	W1275	6026	22		29-11-12	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 49

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0207		AMY4100T-10U (continued)					E004-02/ /		001, 003-099, 115-199
TB0207	A	YHLZD-33 (continued)					E4-2/ /		ALL
TB0207	A	YHLZD-29 (continued)					E4-2/ /		115-199
TB0207	B	YHLZR-30 (continued)					E4-2/ /		ALL
TB0207	C	YHLZR-29 (continued)					E4-2/ /		ALL
TB0207	D	285N0094-12 (continued)					E004-02/ /		ALL
TB0207	E	285N0089-8 (continued)					E004-02/ /		ALL
TB0207	G	BACM15C1B (continued)					E4-2/ /		ALL
TB0207	X	BACM15C3A (continued)					E4-2/ /		ALL
TB0207	Y	BACM15C3B (continued)					E4-2/ /		ALL
TB0207	Z	BACM15C3C (continued)					E4-2/ /		ALL
	Z	28	BJ	W1275	0780	22		29-11-12	115-199
	Z	28	BJ	W1275	6181	22		22-41-11	115-199
	Z	28	BJ	W1275	6306	22		29-11-12	115-199
	D	5		W1275	C-BL			77-11-11	ALL
	D	5		W1275	C-RD			77-11-11	ALL
	D	5		W1275	C-YL			77-11-11	ALL
	Z	53	%	W1275	5059R	24		31-41-13	001-099
	Z	53	BJ	W1275	5065R	24		34-25-11	001, 003-099
	Z	53	BJ	W1275	5066R	24		34-25-11	001, 003-099
	Z	53	BJ	W1275	5103R	24		34-25-11	001, 003-099
	Z	54	%	W1275	5059B	24		31-41-13	001-099
	Z	54	BJ	W1275	5065B	24		34-25-11	001, 003-099
	Z	54	BJ	W1275	5066B	24		34-25-11	001, 003-099
	Z	54	BJ	W1275	5103B	24		34-25-11	001, 003-099
	D	6		W1275	D-BL			77-11-11	ALL
	D	6		W1275	D-RD			77-11-11	ALL
	D	6		W1275	D-YL			77-11-11	ALL
	Z	73	BJ	W1275	6006	24		31-51-33	115-199
	Z	73	BJ	W1275	6007	24		31-51-33	115-199
	Z	73	BJ	W1275	6497	24		31-51-33	115-199
	Z	73	BJ	W1275	6498	24		31-51-33	115-199
	Z	74	BJ	W1275	6203	24		21-64-11	ALL
	Z	74	BJ	W1275	6218	24		21-64-11	ALL
	Z	74	BJ	W1275	6219	24		21-64-11	ALL
	Z	74	BJ	W1275	6220	20		21-64-11	ALL
	Z	74	BJ	W1275	6223	24		21-52-21	ALL
	Z	74	BJ	W1275	6224	24		21-52-21	ALL
	Z	77	BJ	W1275	0354	24		24-11-21	ALL
	Z	77	BJ	W1275	0443	24		79-31-11	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 50

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0207		AMY4100T-10U (continued)					E004-02/ /		001, 003-099, 115-199
TB0207	A	YHLZD-33 (continued)					E4-2/ /		ALL
TB0207	A	YHLZD-29 (continued)					E4-2/ /		115-199
TB0207	B	YHLZR-30 (continued)					E4-2/ /		ALL
TB0207	C	YHLZR-29 (continued)					E4-2/ /		ALL
TB0207	D	285N0094-12 (continued)					E004-02/ /		ALL
TB0207	E	285N0089-8 (continued)					E004-02/ /		ALL
TB0207	G	BACM15C1B (continued)					E4-2/ /		ALL
TB0207	X	BACM15C3A (continued)					E4-2/ /		ALL
TB0207	Y	BACM15C3B (continued)					E4-2/ /		ALL
TB0207	Z	BACM15C3C (continued)					E4-2/ /		ALL
	Z	77	BJ	W1275	3007B	24		79-31-11	115-199
	Z	77	BJ	W1275	5581	22		49-94-14	115-199
	Z	77	BJ	W1275	5855	24		79-31-11	001-099
	Z	77	BJ	W1275	5857	24		79-31-11	115-199
	Z	77	BJ	W1275	6402	24		21-52-21	ALL
	Z	77	BJ	W1275	6405	24		21-52-21	ALL
	Z	78	BJ	W1275	0353	24		24-11-11	ALL
	Z	78	BJ	W1275	0444	24		79-31-11	ALL
	Z	78	BJ	W1275	3009B	24		79-31-11	115-199
	Z	78	BJ	W1275	5856	24		79-31-11	ALL
	Z	78	BJ	W1275	6220	20		21-64-11	ALL
	Z	78	BJ	W1275	6435	24		79-31-11	001-099
	Z	9	BJ	W1275	2501B	24		77-12-31	ALL
	Z	9	BJ	W1275	2502B	24		77-12-31	ALL
	Z	9	BJ	W1275	2503B	24		77-12-31	ALL
	Z	9	BJ	W1275	2504B	24		77-12-31	ALL
	Z	9	BJ	W1275	2590B	24		77-12-31	ALL
	Z	9	BJ	W1275	2620B	24		77-12-31	ALL
	Y	A001	BJ	W1275	3011Y	24		79-32-11	115-199
	Y	A001	BJ	W1275	5864	24		79-32-11	ALL
	Y	A001	BJ	W1275	5865	24		79-32-11	ALL
	Y	A001	BJ	W1275	6440	24		79-32-11	001-099
	Y	A002	BJ	W1275	3014Y	24		79-32-11	115-199
	Y	A002	BJ	W1275	5868	24		79-32-11	ALL
	Y	A002	BJ	W1275	5869	24		79-32-11	ALL
	Y	A002	BJ	W1275	6443	24		79-32-11	001-099
	Y	A003	BJ	W1275	5075R	24		77-11-11	ALL
	Y	A003	BJ	W1275	C-BL			77-11-11	ALL
	Y	A004	BJ	W1275	5072R	24		77-11-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 51

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0207		AMY4100T-10U (continued)					E004-02/ /		001, 003-099, 115-199
TB0207	A	YHLZD-33 (continued)					E4-2/ /		ALL
TB0207	A	YHLZD-29 (continued)					E4-2/ /		115-199
TB0207	B	YHLZR-30 (continued)					E4-2/ /		ALL
TB0207	C	YHLZR-29 (continued)					E4-2/ /		ALL
TB0207	D	285N0094-12 (continued)					E004-02/ /		ALL
TB0207	E	285N0089-8 (continued)					E004-02/ /		ALL
TB0207	G	BACM15C1B (continued)					E4-2/ /		ALL
TB0207	X	BACM15C3A (continued)					E4-2/ /		ALL
TB0207	Y	BACM15C3B (continued)					E4-2/ /		ALL
TB0207	Z	BACM15C3C (continued)					E4-2/ /		ALL
	Y	A004	BJ	W1275	E-BL			77-11-11	ALL
	Y	A007	BJ	W1275	2517B	24		77-12-21	ALL
	Y	A007	BJ	W1275	2518B	24		77-12-21	ALL
	Y	A007	BJ	W1275	2519B	24		77-12-21	ALL
	Y	A007	BJ	W1275	2617B	24		77-12-21	ALL
	Y	A008	BJ	W1275	2517R	24		77-12-21	ALL
	Y	A008	BJ	W1275	2518R	24		77-12-21	ALL
	Y	A008	BJ	W1275	2519R	24		77-12-21	ALL
	Y	A008	BJ	W1275	2617R	24		77-12-21	ALL
	Y	A011	BJ	W1275	0106	22		79-33-11	ALL
	Y	A011	BJ	W1275	0107	24		79-33-11	ALL
	Y	A011	BJ	W1275	0108	24		79-33-11	ALL
	Y	A011	BJ	W1275	5683	22		79-33-11	ALL
	Y	A012	BJ	W1275	0262	22		24-33-12	001-099
	Y	A012	BJ	W1275	0264	22		24-33-12	001-099
	Y	A012	BJ	W1275	0265	24		24-33-12	ALL
	Y	A012	BJ	W1275	0266	24		24-33-12	ALL
	Y	A021	BJ	W1275	0386	24		32-61-21	ALL
	Y	A021	BJ	W1275	0387	24		32-61-21	ALL
	Y	A021	BJ	W1275	0388	24		32-61-21	ALL
	Y	A021	BJ	W1275	0389	24		32-61-21	ALL
	Y	A022	BJ	W1275	0394	24		32-61-21	ALL
	Y	A022	BJ	W1275	0395	24		32-61-21	ALL
	Y	A022	BJ	W1275	0396	24		32-61-21	ALL
	Y	A022	BJ	W1275	0397	24		32-61-21	ALL
	Y	A023	BJ	W1275	0406	24		32-61-21	ALL
	Y	A023	BJ	W1275	0407	24		32-61-21	ALL
	Y	A023	BJ	W1275	0408	24		32-61-21	ALL
	Y	A023	BJ	W1275	0409	24		32-61-21	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 52

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0207		AMY4100T-10U (continued)					E004-02/ /		001, 003-099, 115-199
TB0207	A	YHLZD-33 (continued)					E4-2/ /		ALL
TB0207	A	YHLZD-29 (continued)					E4-2/ /		115-199
TB0207	B	YHLZR-30 (continued)					E4-2/ /		ALL
TB0207	C	YHLZR-29 (continued)					E4-2/ /		ALL
TB0207	D	285N0094-12 (continued)					E004-02/ /		ALL
TB0207	E	285N0089-8 (continued)					E004-02/ /		ALL
TB0207	G	BACM15C1B (continued)					E4-2/ /		ALL
TB0207	X	BACM15C3A (continued)					E4-2/ /		ALL
TB0207	Y	BACM15C3B (continued)					E4-2/ /		ALL
TB0207	Z	BACM15C3C (continued)					E4-2/ /		ALL
	Y	A024	BJ	W1275	0440	22		29-11-22	ALL
	Y	A024	BJ	W1275	0789	22		29-11-22	ALL
	Y	A024	BJ	W1275	6046	22		29-11-22	ALL
	Y	A024	BJ	W1275	6182	22		22-41-11	ALL
	Y	A025	BJ	W1275	5045R	24		77-31-11	ALL
	Y	A025	BJ	W1275	5046R	24		77-31-11	ALL
	Y	A025	BJ	W1275	5047R	24		77-31-11	ALL
	Y	A025	BJ	W1275	5077R	24		31-31-22	115-199
	Y	A026	BJ	W1275	5045B	24		77-31-11	ALL
	Y	A026	BJ	W1275	5046B	24		77-31-11	ALL
	Y	A026	BJ	W1275	5047B	24		77-31-11	ALL
	Y	A026	BJ	W1275	5077B	24		31-31-22	115-199
	Y	A027	BJ	W1275	0780	22		29-11-12	001-099
	Y	A027	BJ	W1275	6026	22		29-11-12	001-099
	Y	A027	BJ	W1275	6181	22		22-41-11	001-099
	Y	A029	BJ	W1275	0828	22		29-32-11	ALL
	Y	A029	BJ	W1275	0829	22		29-32-11	ALL
	Y	A029	BJ	W1275	0830	24		29-32-11	ALL
	Y	A029	BJ	W1275	0831	24		29-32-11	ALL
	Y	A030	BJ	W1275	5978	24		30-21-11	ALL
	Y	A030	BJ	W1275	5981	24		30-21-11	ALL
	Y	A030	BJ	W1275	5982	24		30-21-11	ALL
	Y	A030	BJ	W1275	5984	24		30-21-11	ALL
	Y	A031	BJ	W1275	0836	22		29-32-21	ALL
	Y	A031	BJ	W1275	0837	22		29-32-21	ALL
	Y	A031	BJ	W1275	0838	24		29-32-21	ALL
	Y	A031	BJ	W1275	0839	24		29-32-21	ALL
	Y	A032	BJ	W1275	5543	22		29-32-31	ALL
	Y	A032	BJ	W1275	5544	22		29-32-31	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 53

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0207		AMY4100T-10U (continued)					E004-02/ /		001, 003-099, 115-199
TB0207	A	YHLZD-33 (continued)					E4-2/ /		ALL
TB0207	A	YHLZD-29 (continued)					E4-2/ /		115-199
TB0207	B	YHLZR-30 (continued)					E4-2/ /		ALL
TB0207	C	YHLZR-29 (continued)					E4-2/ /		ALL
TB0207	D	285N0094-12 (continued)					E004-02/ /		ALL
TB0207	E	285N0089-8 (continued)					E004-02/ /		ALL
TB0207	G	BACM15C1B (continued)					E4-2/ /		ALL
TB0207	X	BACM15C3A (continued)					E4-2/ /		ALL
TB0207	Y	BACM15C3B (continued)					E4-2/ /		ALL
TB0207	Z	BACM15C3C (continued)					E4-2/ /		ALL
	Y	A032	BJ	W1275	5555	24		29-32-31	ALL
	Y	A032	BJ	W1275	5556	24		29-32-31	ALL
	Y	A033	BJ	W1275	5606	24		24-27-11	ALL
	Y	A033	BJ	W1275	5607	24		24-27-11	ALL
	Y	A033	BJ	W1275	5608	24		24-27-11	ALL
	Y	A033	BJ	W1275	5609	24		24-27-11	ALL
	Y	A034	BJ	W1275	3001R	24		73-31-11	ALL
	Y	A034	BJ	W1275	3002R	24		73-31-11	ALL
	Y	A034	BJ	W1275	3003R	24		73-31-11	ALL
	Y	A035	BJ	W1275	3001Y	24		73-31-11	ALL
	Y	A035	BJ	W1275	3002Y	24		73-31-11	ALL
	Y	A035	BJ	W1275	3003Y	24		73-31-11	ALL
	Y	A036	BJ	W1275	3004B	24		73-31-11	ALL
	Y	A036	BJ	W1275	3005B	24		73-31-11	ALL
	Y	A036	BJ	W1275	3006B	24		73-31-11	ALL
	Y	A037	BJ	W1275	5614	22		24-27-11	ALL
	Y	A037	BJ	W1275	5615	24		24-27-11	ALL
	Y	A037	BJ	W1275	5616	22		24-27-11	ALL
	Y	A037	BJ	W1275	5617	24		24-27-11	ALL
	Y	A038	BJ	W1275	5618	22		24-27-21	ALL
	Y	A038	BJ	W1275	5620	22		24-27-21	ALL
	Y	A038	BJ	W1275	5623	24		24-27-21	ALL
	Y	A038	BJ	W1275	5625	24		24-27-21	ALL
	Y	A039	BJ	W1275	6036	22		29-11-31	ALL
	Y	A039	BJ	W1275	6037	22		29-11-31	ALL
	Y	A039	BJ	W1275	6038	24		29-11-31	ALL
	Y	A039	BJ	W1275	6039	24		29-11-31	ALL
	Y	A040	BJ	W1275	6122	24		31-51-41	002
	Y	A040	BJ	W1275	6685	22		31-51-41	002

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 54

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0207		AMY4100T-10U (continued)					E004-02/ /		001, 003-099, 115-199
TB0207	A	YHLZD-33 (continued)					E4-2/ /		ALL
TB0207	A	YHLZD-29 (continued)					E4-2/ /		115-199
TB0207	B	YHLZR-30 (continued)					E4-2/ /		ALL
TB0207	C	YHLZR-29 (continued)					E4-2/ /		ALL
TB0207	D	285N0094-12 (continued)					E004-02/ /		ALL
TB0207	E	285N0089-8 (continued)					E004-02/ /		ALL
TB0207	G	BACM15C1B (continued)					E4-2/ /		ALL
TB0207	X	BACM15C3A (continued)					E4-2/ /		ALL
TB0207	Y	BACM15C3B (continued)					E4-2/ /		ALL
TB0207	Z	BACM15C3C (continued)					E4-2/ /		ALL
	Y	A040	BJ	W1275	6723	22		34-43-14	002
	Y	A041	BJ	W1275	0290	24		27-09-14	ALL
	Y	A041	BJ	W1275	0292	24		27-09-14	ALL
	Y	A041	BJ	W1275	5955	24		27-09-14	ALL
	Y	A041	BJ	W1275	5958	24		27-09-14	ALL
	Y	A042	BJ	W1275	0769	22		26-22-21	115-199
	Y	A042	BJ	W1275	0770	24		26-22-21	115-199
	Y	A042	BJ	W1275	0771	22		26-22-21	115-199
	Y	A042	BJ	W1275	0772	24		26-22-21	115-199
	Y	A043	BJ	W1275	6419	24		27-09-14	ALL
	Y	A043	BJ	W1275	6420	24		27-09-14	ALL
	Y	A043	BJ	W1275	6421	24		27-09-14	ALL
	Y	A043	BJ	W1275	6422	24		27-09-14	ALL
	Y	A044	BJ	W1275	0120	22		49-61-11	ALL
	Y	A044	BJ	W1275	6020	22		49-61-11	ALL
	Y	A044	BJ	W1275	6021	22		49-61-11	ALL
	Y	A045	BJ	W1275	0445	22		28-42-11	ALL
	Y	A045	BJ	W1275	0446	24		28-42-11	ALL
	Y	A045	BJ	W1275	0447	24		28-42-11	ALL
	Y	A045	BJ	W1275	0936	22		28-42-11	ALL
	Y	A046	BJ	W1275	0453	22		28-42-11	ALL
	Y	A046	BJ	W1275	0461	24		28-42-11	ALL
	Y	A046	BJ	W1275	0486	24		28-42-11	ALL
	Y	A046	BJ	W1275	0932	22		28-42-11	ALL
	Y	A047	BJ	W1275	0211	24		30-33-11	ALL
	Y	A047	BJ	W1275	0212	24		30-33-11	ALL
	Y	A047	BJ	W1275	0213	24		30-33-11	ALL
	Y	A047	BJ	W1275	0214	24		30-33-11	ALL
	Y	A048	BJ	W1275	0185	24		30-21-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 55

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0207		AMY4100T-10U (continued)					E004-02/ /		001, 003-099, 115-199
TB0207	A	YHLZD-33 (continued)					E4-2/ /		ALL
TB0207	A	YHLZD-29 (continued)					E4-2/ /		115-199
TB0207	B	YHLZR-30 (continued)					E4-2/ /		ALL
TB0207	C	YHLZR-29 (continued)					E4-2/ /		ALL
TB0207	D	285N0094-12 (continued)					E004-02/ /		ALL
TB0207	E	285N0089-8 (continued)					E004-02/ /		ALL
TB0207	G	BACM15C1B (continued)					E4-2/ /		ALL
TB0207	X	BACM15C3A (continued)					E4-2/ /		ALL
TB0207	Y	BACM15C3B (continued)					E4-2/ /		ALL
TB0207	Z	BACM15C3C (continued)					E4-2/ /		ALL
	Y	A048	BJ	W1275	0186	24		30-21-11	ALL
	Y	A048	BJ	W1275	0187	24		30-21-11	ALL
	Y	A048	BJ	W1275	5985	24		30-21-11	ALL
	Y	A050	BJ	W1275	6725	22		34-43-14	002
	Y	A050	BJ	W1275	6726	22		34-43-14	002
	Y	A050	BJ	W1275	6727	22		34-43-14	002
	Y	A051	BJ	W1275	6177	24		32-41-11	ALL
	Y	A051	BJ	W1275	6178	24		32-41-11	ALL
	Y	A051	BJ	W1275	6179	24		32-41-11	ALL
	Y	A051	BJ	W1275	6180	24		32-41-11	ALL
	Y	A052	BJ	W1275	0551	24		31-41-11	ALL
	Y	A052	BJ	W1275	0555	24		31-41-21	ALL
	Y	A052	BJ	W1275	5952	22		31-41-21	ALL
	Y	A055	BJ	W1275	0552	24		31-41-11	ALL
	Y	A055	BJ	W1275	0553	24		31-31-61	001-099
	Y	A055	BJ	W1275	0553	24		31-31-21	115-199
	Y	A055	BJ	W1275	0554	24		31-41-21	ALL
	Y	A055	BJ	W1275	0876	24		31-41-19	ALL
	Y	A056	BJ	W1275	0872	24		29-35-11	ALL
	Y	A056	BJ	W1275	0873	24		29-35-11	ALL
	Y	A056	BJ	W1275	5550	24		29-35-11	ALL
	Y	A056	BJ	W1275	5551	24		29-35-11	ALL
	Y	A057	BJ	W1275	0034	24		52-71-21	ALL
	Y	A057	BJ	W1275	0055	24		52-71-21	ALL
	Y	A057	BJ	W1275	0061	24		52-71-21	ALL
	Y	A058	BJ	W1275	0527	22		27-18-11	ALL
	Y	A058	BJ	W1275	0973	24		27-18-11	ALL
	Y	A058	BJ	W1275	0974	24		27-18-11	ALL
	Y	A059	BJ	W1275	0997	24		27-38-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 56

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0207		AMY4100T-10U (continued)					E004-02/ /		001, 003-099, 115-199
TB0207	A	YHLZD-33 (continued)					E4-2/ /		ALL
TB0207	A	YHLZD-29 (continued)					E4-2/ /		115-199
TB0207	B	YHLZR-30 (continued)					E4-2/ /		ALL
TB0207	C	YHLZR-29 (continued)					E4-2/ /		ALL
TB0207	D	285N0094-12 (continued)					E004-02/ /		ALL
TB0207	E	285N0089-8 (continued)					E004-02/ /		ALL
TB0207	G	BACM15C1B (continued)					E4-2/ /		ALL
TB0207	X	BACM15C3A (continued)					E4-2/ /		ALL
TB0207	Y	BACM15C3B (continued)					E4-2/ /		ALL
TB0207	Z	BACM15C3C (continued)					E4-2/ /		ALL
	Y	A059	BJ	W1275	0998	24		27-38-11	ALL
	Y	A059	BJ	W1275	2044R	24		27-38-11	ALL
	Y	A060	BJ	W1275	5509	22		27-23-11	ALL
	Y	A060	BJ	W1275	5510	24		27-23-11	ALL
	Y	A060	BJ	W1275	5511	24		27-23-11	ALL
	Y	A060	BJ	W1275	6184	22		27-23-11	ALL
	B	A061	2	W1275	0353	24		24-11-11	ALL
	B	A062	2	W1275	0354	24		24-11-21	ALL
	Y	A063	BJ	W1275	5038R	24		31-41-13	ALL
	Y	A063	BJ	W1275	5039R	24		31-41-22	ALL
	Y	A064	BJ	W1275	5038B	24		31-41-13	ALL
	Y	A064	BJ	W1275	5039B	24		31-41-22	ALL
	Y	A065	BJ	W1275	5874	24		31-41-14	ALL
	Y	A065	BJ	W1275	5876	24		31-41-14	ALL
	Y	A065	BJ	W1275	5917	24		31-41-24	ALL
	Y	A067	BJ	W1275	0513	22		27-18-11	ALL
	Y	A067	BJ	W1275	0967	24		27-18-11	ALL
	Y	A067	BJ	W1275	0968	24		27-18-11	ALL
	Y	A068	BJ	W1275	5080B	24		77-31-11	ALL
	Y	A068	BJ	W1275	5081B	24		77-31-11	ALL
	Y	A068	BJ	W1275	5082B	24		77-31-11	ALL
	Y	A069	BJ	W1275	4501W	22		77-21-11	ALL
	Y	A069	BJ	W1275	4502W	22		77-21-11	ALL
	Y	A069	BJ	W1275	4503W	22		77-21-11	ALL
	Y	A069	BJ	W1275	4504W	22		77-21-11	ALL
	Y	A070	BJ	W1275	4501G	22		77-21-11	ALL
	Y	A070	BJ	W1275	4502G	22		77-21-11	ALL
	Y	A070	BJ	W1275	4503G	22		77-21-11	ALL
	Y	A070	BJ	W1275	4504G	22		77-21-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 57

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0207		AMY4100T-10U (continued)					E004-02/ /		001, 003-099, 115-199
TB0207	A	YHLZD-33 (continued)					E4-2/ /		ALL
TB0207	A	YHLZD-29 (continued)					E4-2/ /		115-199
TB0207	B	YHLZR-30 (continued)					E4-2/ /		ALL
TB0207	C	YHLZR-29 (continued)					E4-2/ /		ALL
TB0207	D	285N0094-12 (continued)					E004-02/ /		ALL
TB0207	E	285N0089-8 (continued)					E004-02/ /		ALL
TB0207	G	BACM15C1B (continued)					E4-2/ /		ALL
TB0207	X	BACM15C3A (continued)					E4-2/ /		ALL
TB0207	Y	BACM15C3B (continued)					E4-2/ /		ALL
TB0207	Z	BACM15C3C (continued)					E4-2/ /		ALL
	Y	A071	BJ	W1275	5028R	24		28-41-11	ALL
	Y	A071	BJ	W1275	5029R	24		28-41-11	ALL
	Y	A071	BJ	W1275	5042R	24		28-41-11	ALL
	Y	A071	BJ	W1275	5043R	24		28-41-11	ALL
	Y	A072	BJ	W1275	5028B	24		28-41-11	ALL
	Y	A072	BJ	W1275	5029B	24		28-41-11	ALL
	Y	A072	BJ	W1275	5042B	24		28-41-11	ALL
	Y	A072	BJ	W1275	5043B	24		28-41-11	ALL
	Y	A075	BJ	W1275	2031R	24		24-34-11	ALL
	Y	A075	BJ	W1275	2032R	24		24-34-11	ALL
	Y	A075	BJ	W1275	2033R	24		24-34-11	ALL
	Y	A076	BJ	W1275	2031B	24		24-34-11	ALL
	Y	A076	BJ	W1275	2032B	24		24-34-11	ALL
	Y	A076	BJ	W1275	2033B	24		24-34-11	ALL
	Y	A079	BJ	W1275	3007R	24		79-31-11	115-199
	Y	A079	BJ	W1275	5858	24		79-31-11	ALL
	Y	A079	BJ	W1275	5859	24		79-31-11	ALL
	Y	A079	BJ	W1275	6433	24		79-31-11	001-099
	Y	A080	BJ	W1275	0030	24		52-71-11	ALL
	Y	A080	BJ	W1275	0031	24		52-71-11	ALL
	Y	A080	BJ	W1275	0053	24		52-71-11	ALL
	A	A081	2	W1275	0154	24		34-53-11	115-199
	Y	A081	%	W1275	5064R	24		31-41-23	001-099
	A	A082	2	W1275	0155	24		34-53-11	115-199
	Y	A082	%	W1275	5064B	24		31-41-23	001-099
	Y	A083	BJ	W1275	0913	24		32-46-11	115-199
	Y	A083	BJ	W1275	0914	24		32-46-11	115-199
	Y	A083	BJ	W1275	0915	24		32-46-11	115-199
	Y	A083	BJ	W1275	6245	24		32-46-11	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 58

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0207		AMY4100T-10U (continued)					E004-02/ /		001, 003-099, 115-199
TB0207	A	YHLZD-33 (continued)					E4-2/ /		ALL
TB0207	A	YHLZD-29 (continued)					E4-2/ /		115-199
TB0207	B	YHLZR-30 (continued)					E4-2/ /		ALL
TB0207	C	YHLZR-29 (continued)					E4-2/ /		ALL
TB0207	D	285N0094-12 (continued)					E004-02/ /		ALL
TB0207	E	285N0089-8 (continued)					E004-02/ /		ALL
TB0207	G	BACM15C1B (continued)					E4-2/ /		ALL
TB0207	X	BACM15C3A (continued)					E4-2/ /		ALL
TB0207	Y	BACM15C3B (continued)					E4-2/ /		ALL
TB0207	Z	BACM15C3C (continued)					E4-2/ /		ALL
	Y	A084	BJ	W1275	0733	24		26-18-11	ALL
	Y	A084	BJ	W1275	0734	24		26-18-11	ALL
	Y	A084	BJ	W1275	0735	24		26-18-11	ALL
	Y	A084	BJ	W1275	0736	24		26-18-11	ALL
	Y	A085	BJ	W1275	0745	22		26-21-11	ALL
	Y	A085	BJ	W1275	0746	24		26-21-11	ALL
	Y	A085	BJ	W1275	0747	24		26-21-11	ALL
	Y	A085	BJ	W1275	0748	22		26-21-11	ALL
	Y	A086	BJ	W1275	5068R	24		77-11-11	ALL
	Y	A086	BJ	W1275	5070R	24		77-11-11	ALL
	Y	A086	BJ	W1275	5078R	24		22-33-11	ALL
	Y	A086	BJ	W1275	C-RD			77-11-11	ALL
	A	A087	2	W1275	0503	24		26-11-11	ALL
	A	A087	2	W1275	0661	24		26-11-11	ALL
	Y	A089	BJ	W1275	5588	24		36-11-12	ALL
	Y	A089	BJ	W1275	5589	24		36-11-12	ALL
	Y	A089	BJ	W1275	5590	24		36-11-12	ALL
	Y	A089	BJ	W1275	5594	24		36-11-12	ALL
	Y	A091	BJ	W1275	0618	24		36-11-41	ALL
	Y	A091	BJ	W1275	0619	24		36-11-41	ALL
	Y	A091	BJ	W1275	0620	24		36-11-41	ALL
	Y	A091	BJ	W1275	0621	24		36-11-41	ALL
	Y	A092	BJ	W1275	5602	24		36-22-11	ALL
	Y	A092	BJ	W1275	5603	24		36-22-11	ALL
	Y	A092	BJ	W1275	5604	24		36-22-11	ALL
	Y	A092	BJ	W1275	5605	24		36-22-11	ALL
	Y	A093	BJ	W1275	5004R	24		22-41-13	ALL
	Y	A093	BJ	W1275	5005R	24		22-41-13	ALL
	Y	A093	BJ	W1275	5006R	24		22-41-13	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 59

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0207		AMY4100T-10U (continued)					E004-02/ /		001, 003-099, 115-199
TB0207	A	YHLZD-33 (continued)					E4-2/ /		ALL
TB0207	A	YHLZD-29 (continued)					E4-2/ /		115-199
TB0207	B	YHLZR-30 (continued)					E4-2/ /		ALL
TB0207	C	YHLZR-29 (continued)					E4-2/ /		ALL
TB0207	D	285N0094-12 (continued)					E004-02/ /		ALL
TB0207	E	285N0089-8 (continued)					E004-02/ /		ALL
TB0207	G	BACM15C1B (continued)					E4-2/ /		ALL
TB0207	X	BACM15C3A (continued)					E4-2/ /		ALL
TB0207	Y	BACM15C3B (continued)					E4-2/ /		ALL
TB0207	Z	BACM15C3C (continued)					E4-2/ /		ALL
	Y	A094	BJ	W1275	6261	24		24-51-72	ALL
	Y	A094	BJ	W1275	6262	24		24-51-72	ALL
	Y	A094	BJ	W1275	6501	24		24-51-72	ALL
	Y	A095	BJ	W1275	0443	24		79-31-11	001-099
	Y	A095	BJ	W1275	5855	24		79-31-11	001-099
	Y	A095	BJ	W1275	5857	24		79-31-11	001-099
	Y	A095	BJ	W1275	6432	24		79-31-11	001-099
	Y	A097	BJ	W1275	0925	22		28-42-11	ALL
	Y	A097	BJ	W1275	0926	24		28-42-11	ALL
	Y	A097	BJ	W1275	0927	22		28-42-11	ALL
	Y	A097	BJ	W1275	0928	24		28-42-11	ALL
	Y	A098	BJ	W1275	6526	24		24-11-21	ALL
	Y	A098	BJ	W1275	6527	24		24-11-21	ALL
	Y	A098	BJ	W1275	6528	24		24-11-21	ALL
	Y	A099	BJ	W1275	6520	24		24-11-11	ALL
	Y	A099	BJ	W1275	6521	24		24-11-11	ALL
	Y	A099	BJ	W1275	6522	24		24-11-11	ALL
	Y	A100	BJ	W1275	0301	24		35-11-13	ALL
	Y	A100	BJ	W1275	0302	24		35-11-13	ALL
	Y	A100	BJ	W1275	0358	22		35-11-13	115-199
	Y	A100	BJ	W1275	2040R	20		35-11-13	001-099
	Y	A100	BJ	W1275	2040R	22		35-11-13	115-199
	Y	A109	BJ	W1275	2511R	24		77-12-11	ALL
	Y	A109	BJ	W1275	2512R	24		77-12-11	ALL
	Y	A109	BJ	W1275	A-BL			77-12-11	ALL
	Y	A110	BJ	W1275	2515R	24		77-12-11	ALL
	Y	A110	BJ	W1275	2516R	24		77-12-11	ALL
	Y	A110	BJ	W1275	B-BL			77-12-11	ALL
	Y	A119	BJ	W1275	0586	24		34-22-37	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 60

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0207		AMY4100T-10U (continued)					E004-02/ /		001, 003-099, 115-199
TB0207	A	YHLZD-33 (continued)					E4-2/ /		ALL
TB0207	A	YHLZD-29 (continued)					E4-2/ /		115-199
TB0207	B	YHLZR-30 (continued)					E4-2/ /		ALL
TB0207	C	YHLZR-29 (continued)					E4-2/ /		ALL
TB0207	D	285N0094-12 (continued)					E004-02/ /		ALL
TB0207	E	285N0089-8 (continued)					E004-02/ /		ALL
TB0207	G	BACM15C1B (continued)					E4-2/ /		ALL
TB0207	X	BACM15C3A (continued)					E4-2/ /		ALL
TB0207	Y	BACM15C3B (continued)					E4-2/ /		ALL
TB0207	Z	BACM15C3C (continued)					E4-2/ /		ALL
	Y	A119	BJ	W1275	6609	22		34-61-26	115-199
	Y	A119	BJ	W1275	6625	22		34-22-37	115-199
	C	A121	2	W1275	2005B	24		49-73-11	115-199
	C	A121	2	W1275	6014	24		49-73-11	ALL
	C	A121	2	W1275	6015	24		49-73-11	ALL
	C	A121	2	W1275	6507	24		49-73-11	001-099
	C	A122	2	W1275	2002B	24		49-71-11	115-199
	C	A122	2	W1275	6012	24		49-71-11	ALL
	C	A122	2	W1275	6013	24		49-71-11	ALL
	C	A122	2	W1275	6508	24		49-71-11	001-099
	Y	C001	BJ	W1275	0104	22		79-32-11	115-199
	Y	C001	BJ	W1275	3011B	24		79-32-11	115-199
	Y	C001	BJ	W1275	5862	24		79-32-11	115-199
	Y	C001	BJ	W1275	5863	24		79-32-11	115-199
	Y	C002	BJ	W1275	0105	24		79-32-11	115-199
	Y	C002	BJ	W1275	3014B	24		79-32-11	115-199
	Y	C002	BJ	W1275	5866	24		79-32-11	115-199
	Y	C002	BJ	W1275	5867	24		79-32-11	115-199
	Y	C003	BJ	W1275	5075B	24		77-11-11	ALL
	Y	C003	BJ	W1275	D-BL			77-11-11	ALL
	Y	C004	BJ	W1275	5072B	24		77-11-11	ALL
	Y	C004	BJ	W1275	F-BL			77-11-11	ALL
	Y	C007	BJ	W1275	2520B	24		77-12-21	ALL
	Y	C007	BJ	W1275	2521B	24		77-12-21	ALL
	Y	C007	BJ	W1275	2522B	24		77-12-21	ALL
	Y	C007	BJ	W1275	2618B	24		77-12-21	ALL
	Y	C008	BJ	W1275	2520R	24		77-12-21	ALL
	Y	C008	BJ	W1275	2521R	24		77-12-21	ALL
	Y	C008	BJ	W1275	2522R	24		77-12-21	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 61

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0207		AMY4100T-10U (continued)					E004-02/ /		001, 003-099, 115-199
TB0207	A	YHLZD-33 (continued)					E4-2/ /		ALL
TB0207	A	YHLZD-29 (continued)					E4-2/ /		115-199
TB0207	B	YHLZR-30 (continued)					E4-2/ /		ALL
TB0207	C	YHLZR-29 (continued)					E4-2/ /		ALL
TB0207	D	285N0094-12 (continued)					E004-02/ /		ALL
TB0207	E	285N0089-8 (continued)					E004-02/ /		ALL
TB0207	G	BACM15C1B (continued)					E4-2/ /		ALL
TB0207	X	BACM15C3A (continued)					E4-2/ /		ALL
TB0207	Y	BACM15C3B (continued)					E4-2/ /		ALL
TB0207	Z	BACM15C3C (continued)					E4-2/ /		ALL
	Y	C008	BJ	W1275	2618R	24		77-12-21	ALL
	Y	C011	BJ	W1275	0109	22		79-33-11	ALL
	Y	C011	BJ	W1275	0110	24		79-33-11	ALL
	Y	C011	BJ	W1275	0111	24		79-33-11	ALL
	Y	C011	BJ	W1275	5682	22		79-33-11	ALL
	Y	C021	BJ	W1275	0391	24		32-61-21	ALL
	Y	C021	BJ	W1275	0392	24		32-61-21	ALL
	Y	C021	BJ	W1275	0393	24		32-61-21	ALL
	Y	C022	BJ	W1275	0402	24		32-61-21	ALL
	Y	C022	BJ	W1275	0403	24		32-61-21	ALL
	Y	C022	BJ	W1275	0404	24		32-61-21	ALL
	Y	C022	BJ	W1275	0405	24		32-61-21	ALL
	Y	C023	BJ	W1275	0512	24		26-17-11	ALL
	Y	C023	BJ	W1275	0729	24		26-17-11	ALL
	Y	C023	BJ	W1275	0731	24		26-17-11	ALL
	Y	C023	BJ	W1275	0732	24		26-17-11	ALL
	Y	C024	BJ	W1275	0398	24		32-61-21	ALL
	Y	C024	BJ	W1275	0399	24		32-61-21	ALL
	Y	C024	BJ	W1275	0400	24		32-61-21	ALL
	Y	C024	BJ	W1275	0401	24		32-61-21	ALL
	Y	C025	BJ	W1275	0777	22		29-11-12	ALL
	Y	C025	BJ	W1275	0778	24		29-11-12	ALL
	Y	C025	BJ	W1275	0779	24		29-11-12	ALL
	Y	C025	BJ	W1275	6027	22		29-11-12	001-099
	Y	C025	BJ	W1275	6308	22		29-11-12	115-199
	Y	C026	BJ	W1275	0781	24		29-11-12	001-099
	Y	C026	BJ	W1275	0782	24		29-11-12	001-099
	Y	C026	BJ	W1275	6174	22		29-11-12	001-099
	Y	C026	BJ	W1275	6407	22		29-11-12	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 62

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0207		AMY4100T-10U (continued)					E004-02/ /		001, 003-099, 115-199
TB0207	A	YHLZD-33 (continued)					E4-2/ /		ALL
TB0207	A	YHLZD-29 (continued)					E4-2/ /		115-199
TB0207	B	YHLZR-30 (continued)					E4-2/ /		ALL
TB0207	C	YHLZR-29 (continued)					E4-2/ /		ALL
TB0207	D	285N0094-12 (continued)					E004-02/ /		ALL
TB0207	E	285N0089-8 (continued)					E004-02/ /		ALL
TB0207	G	BACM15C1B (continued)					E4-2/ /		ALL
TB0207	X	BACM15C3A (continued)					E4-2/ /		ALL
TB0207	Y	BACM15C3B (continued)					E4-2/ /		ALL
TB0207	Z	BACM15C3C (continued)					E4-2/ /		ALL
	Y	C027	BJ	W1275	0956	24		32-44-11	001-099
	Y	C027	BJ	W1275	0957	24		32-44-11	001-099
	Y	C027	BJ	W1275	6176	22		32-44-11	001-099
	Y	C027	BJ	W1275	6489	22		32-44-11	001-099
	Y	C028	BJ	W1275	0267	22		24-33-12	001-099
	Y	C028	BJ	W1275	0269	22		24-33-12	001-099
	Y	C028	BJ	W1275	0270	22		24-33-12	001-099
	Y	C029	BJ	W1275	0832	22		29-32-11	ALL
	Y	C029	BJ	W1275	0833	24		29-32-11	ALL
	Y	C029	BJ	W1275	0834	22		29-32-11	ALL
	Y	C029	BJ	W1275	0835	24		29-32-11	ALL
	Y	C030	BJ	W1275	5979	24		30-21-11	ALL
	Y	C030	BJ	W1275	5983	24		30-21-11	ALL
	Y	C030	BJ	W1275	5986	24		30-21-11	ALL
	Y	C030	BJ	W1275	5987	24		30-21-11	ALL
	Y	C031	BJ	W1275	0840	22		29-32-21	ALL
	Y	C031	BJ	W1275	0841	24		29-32-21	ALL
	Y	C031	BJ	W1275	0842	22		29-32-21	ALL
	Y	C031	BJ	W1275	0843	24		29-32-21	ALL
	Y	C032	BJ	W1275	5557	22		29-32-31	ALL
	Y	C032	BJ	W1275	5558	24		29-32-31	ALL
	Y	C032	BJ	W1275	5559	24		29-32-31	ALL
	Y	C032	BJ	W1275	5560	22		29-32-31	ALL
	Y	C033	BJ	W1275	5610	22		24-27-11	ALL
	Y	C033	BJ	W1275	5611	24		24-27-11	ALL
	Y	C033	BJ	W1275	5612	22		24-27-11	ALL
	Y	C033	BJ	W1275	5613	24		24-27-11	ALL
	Y	C034	BJ	W1275	3001B	24		73-31-11	ALL
	Y	C034	BJ	W1275	3002B	24		73-31-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 63

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
TB0207		AMY4100T-10U (continued)					E004-02/ /		001, 003-099, 115-199
TB0207	A	YHLZD-33 (continued)					E4-2/ /		ALL
TB0207	A	YHLZD-29 (continued)					E4-2/ /		115-199
TB0207	B	YHLZR-30 (continued)					E4-2/ /		ALL
TB0207	C	YHLZR-29 (continued)					E4-2/ /		ALL
TB0207	D	285N0094-12 (continued)					E004-02/ /		ALL
TB0207	E	285N0089-8 (continued)					E004-02/ /		ALL
TB0207	G	BACM15C1B (continued)					E4-2/ /		ALL
TB0207	X	BACM15C3A (continued)					E4-2/ /		ALL
TB0207	Y	BACM15C3B (continued)					E4-2/ /		ALL
TB0207	Z	BACM15C3C (continued)					E4-2/ /		ALL
	Y	C034	BJ	W1275	3003B	24		73-31-11	ALL
	Y	C035	BJ	W1275	3004R	24		73-31-11	ALL
	Y	C035	BJ	W1275	3005R	24		73-31-11	ALL
	Y	C035	BJ	W1275	3006R	24		73-31-11	ALL
	Y	C036	BJ	W1275	3004Y	24		73-31-11	ALL
	Y	C036	BJ	W1275	3005Y	24		73-31-11	ALL
	Y	C036	BJ	W1275	3006Y	24		73-31-11	ALL
	Y	C037	BJ	W1275	5619	24		24-27-21	ALL
	Y	C037	BJ	W1275	5621	24		24-27-21	ALL
	Y	C037	BJ	W1275	5622	22		24-27-21	ALL
	Y	C037	BJ	W1275	5624	22		24-27-21	ALL
	Y	C038	BJ	W1275	5626	22		24-27-21	ALL
	Y	C038	BJ	W1275	5627	24		24-27-21	ALL
	Y	C038	BJ	W1275	5628	22		24-27-21	ALL
	Y	C038	BJ	W1275	5629	24		24-27-21	ALL
	Y	C039	BJ	W1275	6411	24		27-09-14	ALL
	Y	C039	BJ	W1275	6412	24		27-09-14	ALL
	Y	C039	BJ	W1275	6413	24		27-09-14	ALL
	Y	C039	BJ	W1275	6414	24		27-09-14	ALL
	Y	C040	BJ	W1275	6032	22		29-11-31	ALL
	Y	C040	BJ	W1275	6033	22		29-11-31	ALL
	Y	C040	BJ	W1275	6034	24		29-11-31	ALL
	Y	C040	BJ	W1275	6035	24		29-11-31	ALL
	Y	C041	BJ	W1275	0291	24		27-09-14	ALL
	Y	C041	BJ	W1275	0293	24		27-09-14	ALL
	Y	C041	BJ	W1275	5957	24		27-09-14	ALL
	Y	C041	BJ	W1275	5959	24		27-09-14	ALL
	Y	C043	BJ	W1275	2025B	24		24-34-11	ALL
	Y	C043	BJ	W1275	2026B	24		24-34-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 64

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0207		AMY4100T-10U (continued)					E004-02/ /		001, 003-099, 115-199
TB0207	A	YHLZD-33 (continued)					E4-2/ /		ALL
TB0207	A	YHLZD-29 (continued)					E4-2/ /		115-199
TB0207	B	YHLZR-30 (continued)					E4-2/ /		ALL
TB0207	C	YHLZR-29 (continued)					E4-2/ /		ALL
TB0207	D	285N0094-12 (continued)					E004-02/ /		ALL
TB0207	E	285N0089-8 (continued)					E004-02/ /		ALL
TB0207	G	BACM15C1B (continued)					E4-2/ /		ALL
TB0207	X	BACM15C3A (continued)					E4-2/ /		ALL
TB0207	Y	BACM15C3B (continued)					E4-2/ /		ALL
TB0207	Z	BACM15C3C (continued)					E4-2/ /		ALL
	Y	C043	BJ	W1275	2027B	24		24-34-11	ALL
	Y	C044	BJ	W1275	2025R	24		24-34-11	ALL
	Y	C044	BJ	W1275	2026R	24		24-34-11	ALL
	Y	C044	BJ	W1275	2027R	24		24-34-11	ALL
	Y	C045	BJ	W1275	5051B	24		34-61-25	115-199
	Y	C045	BJ	W1275	5134B	24		34-61-25	115-199
	Y	C045	BJ	W1275	5135B	24		34-61-25	115-199
	Y	C046	BJ	W1275	5051R	24		34-61-25	115-199
	Y	C046	BJ	W1275	5134R	24		34-61-25	115-199
	Y	C046	BJ	W1275	5135R	24		34-61-25	115-199
	Y	C047	BJ	W1275	6153	22		27-28-13	001-099
	Y	C047	BJ	W1275	6153	24		27-28-13	115-199
	Y	C047	BJ	W1275	6154	22		27-28-13	001-099
	Y	C047	BJ	W1275	6154	24		27-28-13	115-199
	Y	C047	BJ	W1275	6155	22		27-28-13	001-099
	Y	C047	BJ	W1275	6155	24		27-28-13	115-199
	Y	C048	BJ	W1275	6161	24		27-58-31	ALL
	Y	C048	BJ	W1275	6162	24		27-58-31	ALL
	Y	C048	BJ	W1275	6163	24		27-58-31	ALL
	Y	C048	BJ	W1275	6164	24		27-58-31	ALL
	Y	C049	BJ	W1275	6123	24		31-51-41	002
	Y	C049	BJ	W1275	6686	22		31-51-41	002
	Y	C049	BJ	W1275	6724	22		34-43-14	002
	Y	C051	BJ	W1275	5037R	24		34-61-15	115-199
	Y	C051	BJ	W1275	5131R	24		34-61-15	115-199
	Y	C051	BJ	W1275	5133R	24		34-61-15	115-199
	Y	C052	BJ	W1275	5037B	24		34-61-15	115-199
	Y	C052	BJ	W1275	5065B	24		34-25-13	002
	Y	C052	BJ	W1275	5066B	24		34-25-13	002

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 65

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0207		AMY4100T-10U (continued)					E004-02/ /		001, 003-099, 115-199
TB0207	A	YHLZD-33 (continued)					E4-2/ /		ALL
TB0207	A	YHLZD-29 (continued)					E4-2/ /		115-199
TB0207	B	YHLZR-30 (continued)					E4-2/ /		ALL
TB0207	C	YHLZR-29 (continued)					E4-2/ /		ALL
TB0207	D	285N0094-12 (continued)					E004-02/ /		ALL
TB0207	E	285N0089-8 (continued)					E004-02/ /		ALL
TB0207	G	BACM15C1B (continued)					E4-2/ /		ALL
TB0207	X	BACM15C3A (continued)					E4-2/ /		ALL
TB0207	Y	BACM15C3B (continued)					E4-2/ /		ALL
TB0207	Z	BACM15C3C (continued)					E4-2/ /		ALL
	Y	C052	BJ	W1275	5111B	22		34-25-13	002
	Y	C052	BJ	W1275	5131B	24		34-61-15	115-199
	Y	C052	BJ	W1275	5133B	24		34-61-15	115-199
	Y	C053	BJ	W1275	5065R	24		34-25-13	002
	Y	C053	BJ	W1275	5066R	24		34-25-13	002
	Y	C053	BJ	W1275	5111R	22		34-25-13	002
	Y	C055	BJ	W1275	0980	24		27-28-11	ALL
	Y	C055	BJ	W1275	0981	24		27-28-11	ALL
	Y	C055	BJ	W1275	2039B	24		27-28-11	ALL
	Y	C056	BJ	W1275	0866	24		29-35-11	ALL
	Y	C056	BJ	W1275	0867	24		29-35-11	ALL
	Y	C056	BJ	W1275	5576	24		29-35-11	115-199
	Y	C056	BJ	W1275	5578	24		29-35-11	ALL
	Y	C057	BJ	W1275	0056	24		52-71-21	ALL
	Y	C057	BJ	W1275	0062	24		52-71-21	ALL
	Y	C057	BJ	W1275	0067	24		52-71-21	ALL
	Y	C058	BJ	W1275	6423	24		27-09-14	ALL
	Y	C058	BJ	W1275	6424	24		27-09-14	ALL
	Y	C058	BJ	W1275	6425	24		27-09-14	ALL
	Y	C058	BJ	W1275	6426	24		27-09-14	ALL
	Y	C059	BJ	W1275	2045B	24		27-38-11	ALL
	Y	C059	BJ	W1275	5504	24		27-38-11	ALL
	Y	C059	BJ	W1275	5505	24		27-38-11	ALL
	Y	C060	BJ	W1275	0188	24		30-21-11	ALL
	Y	C060	BJ	W1275	0189	24		30-21-11	ALL
	Y	C060	BJ	W1275	0190	24		30-21-11	ALL
	Y	C060	BJ	W1275	5980	24		30-21-11	ALL
	B	C061	2	W1275	0133	24		24-11-11	ALL
	B	C061	2	W1275	0135	24		24-11-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 66

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0207		AMY4100T-10U (continued)					E004-02/ /		001, 003-099, 115-199
TB0207	A	YHLZD-33 (continued)					E4-2/ /		ALL
TB0207	A	YHLZD-29 (continued)					E4-2/ /		115-199
TB0207	B	YHLZR-30 (continued)					E4-2/ /		ALL
TB0207	C	YHLZR-29 (continued)					E4-2/ /		ALL
TB0207	D	285N0094-12 (continued)					E004-02/ /		ALL
TB0207	E	285N0089-8 (continued)					E004-02/ /		ALL
TB0207	G	BACM15C1B (continued)					E4-2/ /		ALL
TB0207	X	BACM15C3A (continued)					E4-2/ /		ALL
TB0207	Y	BACM15C3B (continued)					E4-2/ /		ALL
TB0207	Z	BACM15C3C (continued)					E4-2/ /		ALL
	B	C061	2	W1275	0136	24		24-11-11	ALL
	B	C062	2	W1275	0145	24		24-11-21	ALL
	B	C062	2	W1275	0148	24		24-11-21	ALL
	B	C062	2	W1275	0150	24		24-11-21	ALL
	Y	C063	BJ	W1275	0854	24		29-33-11	ALL
	Y	C063	BJ	W1275	0855	24		29-33-11	ALL
	Y	C063	BJ	W1275	5552	24		29-33-11	ALL
	Y	C064	BJ	W1275	0863	24		29-33-11	ALL
	Y	C064	BJ	W1275	0864	24		29-33-11	ALL
	Y	C064	BJ	W1275	5553	24		29-33-11	ALL
	Y	C065	BJ	W1275	0857	24		29-33-11	ALL
	Y	C065	BJ	W1275	0858	24		29-33-11	ALL
	Y	C065	BJ	W1275	5554	24		29-33-11	ALL
	Y	C067	BJ	W1275	6427	24		27-09-14	ALL
	Y	C067	BJ	W1275	6428	24		27-09-14	ALL
	Y	C067	BJ	W1275	6429	24		27-09-14	ALL
	Y	C067	BJ	W1275	6430	24		27-09-14	ALL
	Y	C068	BJ	W1275	5080R	24		77-31-11	ALL
	Y	C068	BJ	W1275	5081R	24		77-31-11	ALL
	Y	C068	BJ	W1275	5082R	24		77-31-11	ALL
	Y	C069	BJ	W1275	4505G	22		77-21-11	ALL
	Y	C069	BJ	W1275	4506G	22		77-21-11	ALL
	Y	C069	BJ	W1275	4507G	22		77-21-11	ALL
	Y	C069	BJ	W1275	4508G	22		77-21-11	ALL
	Y	C070	BJ	W1275	4505W	22		77-21-11	ALL
	Y	C070	BJ	W1275	4506W	22		77-21-11	ALL
	Y	C070	BJ	W1275	4507W	22		77-21-11	ALL
	Y	C070	BJ	W1275	4508W	22		77-21-11	ALL
	Y	C071	BJ	W1275	5040R	24		31-41-23	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 67

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0207		AMY4100T-10U (continued)					E004-02/ /		001, 003-099, 115-199
TB0207	A	YHLZD-33 (continued)					E4-2/ /		ALL
TB0207	A	YHLZD-29 (continued)					E4-2/ /		115-199
TB0207	B	YHLZR-30 (continued)					E4-2/ /		ALL
TB0207	C	YHLZR-29 (continued)					E4-2/ /		ALL
TB0207	D	285N0094-12 (continued)					E004-02/ /		ALL
TB0207	E	285N0089-8 (continued)					E004-02/ /		ALL
TB0207	G	BACM15C1B (continued)					E4-2/ /		ALL
TB0207	X	BACM15C3A (continued)					E4-2/ /		ALL
TB0207	Y	BACM15C3B (continued)					E4-2/ /		ALL
TB0207	Z	BACM15C3C (continued)					E4-2/ /		ALL
	Y	C071	BJ	W1275	5041R	24		31-41-12	ALL
	Y	C072	BJ	W1275	5040B	24		31-41-23	ALL
	Y	C072	BJ	W1275	5041B	24		31-41-12	ALL
	Y	C075	BJ	W1275	2028B	24		24-34-11	ALL
	Y	C075	BJ	W1275	2029B	24		24-34-11	ALL
	Y	C075	BJ	W1275	2030B	24		24-34-11	ALL
	Y	C076	BJ	W1275	2028R	24		24-34-11	ALL
	Y	C076	BJ	W1275	2029R	24		24-34-11	ALL
	Y	C076	BJ	W1275	2030R	24		24-34-11	ALL
	Y	C079	BJ	W1275	3009R	24		79-31-11	115-199
	Y	C079	BJ	W1275	5860	24		79-31-11	ALL
	Y	C079	BJ	W1275	5861	24		79-31-11	ALL
	Y	C079	BJ	W1275	6436	24		79-31-11	001-099
	Y	C080	BJ	W1275	0032	24		52-71-11	ALL
	Y	C080	BJ	W1275	0033	24		52-71-11	ALL
	Y	C080	BJ	W1275	0054	24		52-71-11	ALL
	A	C081	2	W1275	6603	24		34-53-11	115-199
	A	C081	2	W1275	6605	24		34-53-11	115-199
	A	C082	2	W1275	6604	24		34-53-11	115-199
	A	C082	2	W1275	6605	24		34-53-11	115-199
	Y	C083	BJ	W1275	0104	24		79-32-11	001-099
	Y	C083	BJ	W1275	0322	24		76-11-12	115-199
	Y	C083	BJ	W1275	0323	24		76-11-12	115-199
	Y	C083	BJ	W1275	5738	24		76-11-12	115-199
	Y	C083	BJ	W1275	5862	24		79-32-11	001-099
	Y	C083	BJ	W1275	5863	24		79-32-11	001-099
	Y	C083	BJ	W1275	6438	24		79-32-11	001-099
	Y	C083	BJ	W1275	6495	24		SPARE	115-199
	Y	C084	BJ	W1275	0105	24		79-32-11	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 68

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0207		AMY4100T-10U (continued)					E004-02/ /		001, 003-099, 115-199
TB0207	A	YHLZD-33 (continued)					E4-2/ /		ALL
TB0207	A	YHLZD-29 (continued)					E4-2/ /		115-199
TB0207	B	YHLZR-30 (continued)					E4-2/ /		ALL
TB0207	C	YHLZR-29 (continued)					E4-2/ /		ALL
TB0207	D	285N0094-12 (continued)					E004-02/ /		ALL
TB0207	E	285N0089-8 (continued)					E004-02/ /		ALL
TB0207	G	BACM15C1B (continued)					E4-2/ /		ALL
TB0207	X	BACM15C3A (continued)					E4-2/ /		ALL
TB0207	Y	BACM15C3B (continued)					E4-2/ /		ALL
TB0207	Z	BACM15C3C (continued)					E4-2/ /		ALL
	Y	C084	BJ	W1275	5866	24		79-32-11	001-099
	Y	C084	BJ	W1275	5867	24		79-32-11	001-099
	Y	C084	BJ	W1275	6441	24		79-32-11	001-099
	Y	C085	BJ	W1275	0749	22		26-21-11	ALL
	Y	C085	BJ	W1275	0750	24		26-21-11	ALL
	Y	C085	BJ	W1275	0751	24		26-21-11	ALL
	Y	C085	BJ	W1275	0752	22		26-21-11	ALL
	Y	C086	BJ	W1275	5068B	24		77-11-11	ALL
	Y	C086	BJ	W1275	5070B	24		77-11-11	ALL
	Y	C086	BJ	W1275	5078B	24		22-33-11	ALL
	Y	C086	BJ	W1275	D-RD			77-11-11	ALL
	A	C087	2	W1275	0512	24		26-17-11	ALL
	A	C087	2	W1275	0730	24		26-17-11	ALL
	Y	C089	BJ	W1275	0154	24		34-53-11	001-099
	Y	C089	BJ	W1275	0155	24		34-53-11	001-099
	Y	C089	BJ	W1275	6607	24		34-53-11	001-099
	Y	C091	BJ	W1275	5597	24		36-22-11	115-199
	Y	C091	BJ	W1275	5598	24		36-22-11	115-199
	Y	C091	BJ	W1275	5599	24		36-22-11	115-199
	Y	C091	BJ	W1275	5601	24		36-22-11	115-199
	Y	C092	BJ	W1275	0526	24		31-41-19	ALL
	Y	C092	BJ	W1275	0550	24		31-41-19	ALL
	Y	C093	BJ	W1275	5004B	24		22-41-13	ALL
	Y	C093	BJ	W1275	5005B	24		22-41-13	ALL
	Y	C093	BJ	W1275	5006B	24		22-41-13	ALL
	Y	C094	BJ	W1275	0921	22		28-42-11	115-199
	Y	C094	BJ	W1275	0922	24		28-42-11	115-199
	Y	C094	BJ	W1275	0923	22		28-42-11	115-199
	Y	C094	BJ	W1275	0924	24		28-42-11	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 69

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB0207		AMY4100T-10U (continued)					E004-02/ /		001, 003-099, 115-199
TB0207	A	YHLZD-33 (continued)					E4-2/ /		ALL
TB0207	A	YHLZD-29 (continued)					E4-2/ /		115-199
TB0207	B	YHLZR-30 (continued)					E4-2/ /		ALL
TB0207	C	YHLZR-29 (continued)					E4-2/ /		ALL
TB0207	D	285N0094-12 (continued)					E004-02/ /		ALL
TB0207	E	285N0089-8 (continued)					E004-02/ /		ALL
TB0207	G	BACM15C1B (continued)					E4-2/ /		ALL
TB0207	X	BACM15C3A (continued)					E4-2/ /		ALL
TB0207	Y	BACM15C3B (continued)					E4-2/ /		ALL
TB0207	Z	BACM15C3C (continued)					E4-2/ /		ALL
	Y	C095	BJ	W1275	0921	22		28-42-11	001-099
	Y	C095	BJ	W1275	0922	24		28-42-11	001-099
	Y	C095	BJ	W1275	0923	22		28-42-11	001-099
	Y	C095	BJ	W1275	0924	24		28-42-11	001-099
	Y	C097	BJ	W1275	0937	22		28-42-11	ALL
	Y	C097	BJ	W1275	0938	24		28-42-11	ALL
	Y	C097	BJ	W1275	0939	22		28-42-11	ALL
	Y	C097	BJ	W1275	0940	24		28-42-11	ALL
	Y	C098	BJ	W1275	0941	22		28-42-11	ALL
	Y	C098	BJ	W1275	0942	24		28-42-11	ALL
	Y	C098	BJ	W1275	0943	22		28-42-11	ALL
	Y	C098	BJ	W1275	0944	24		28-42-11	ALL
	Y	C100	BJ	W1275	0311	24		76-11-11	115-199
	Y	C100	BJ	W1275	0312	24		76-11-11	115-199
	Y	C100	BJ	W1275	5739	24		76-11-11	115-199
	Y	C100	BJ	W1275	6494	24		SPARE	115-199
	Y	C109	BJ	W1275	2511B	24		77-12-11	ALL
	Y	C109	BJ	W1275	2512B	24		77-12-11	ALL
	Y	C109	BJ	W1275	A-GR			77-12-11	ALL
	Y	C110	BJ	W1275	2515B	24		77-12-11	ALL
	Y	C110	BJ	W1275	2516B	24		77-12-11	ALL
	Y	C110	BJ	W1275	B-GR			77-12-11	ALL
	Y	C119	BJ	W1275	2034R	24		24-34-11	ALL
	Y	C119	BJ	W1275	2035R	24		24-34-11	ALL
	Y	C119	BJ	W1275	2036R	24		24-34-11	ALL
	Y	C120	BJ	W1275	2034B	24		24-34-11	ALL
	Y	C120	BJ	W1275	2035B	24		24-34-11	ALL
	Y	C120	BJ	W1275	2036B	24		24-34-11	ALL
	C	C121	2	W1275	6285	20		49-73-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 70

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0207		AMY4100T-10U (continued)					E004-02/ /		001, 003-099, 115-199
TB0207	A	YHLZD-33 (continued)					E4-2/ /		ALL
TB0207	A	YHLZD-29 (continued)					E4-2/ /		115-199
TB0207	B	YHLZR-30 (continued)					E4-2/ /		ALL
TB0207	C	YHLZR-29 (continued)					E4-2/ /		ALL
TB0207	D	285N0094-12 (continued)					E004-02/ /		ALL
TB0207	E	285N0089-8 (continued)					E004-02/ /		ALL
TB0207	G	BACM15C1B (continued)					E4-2/ /		ALL
TB0207	X	BACM15C3A (continued)					E4-2/ /		ALL
TB0207	Y	BACM15C3B (continued)					E4-2/ /		ALL
TB0207	Z	BACM15C3C (continued)					E4-2/ /		ALL
	C	C122	2	W1275	6284	20		49-71-11	ALL
	C	CAP	Y	W1275	2002R	24		49-71-11	115-199
	C	CAP	Y	W1275	2005R	24		49-73-11	115-199
	Z	CAP	Y	W1275	5059B	24		31-41-13	115-199
	Z	CAP	Y	W1275	5059R	24		31-41-13	115-199
	Z	CAP	Y	W1275	5064B	24		31-41-23	115-199
	Z	CAP	Y	W1275	5064R	24		31-41-23	115-199
	Y	DED		W1275	5952Z			31-41-21	115-199
	G	DED		W1275	6075Z			73-21-22	115-199
	G	DED		W1275	6076Z			73-21-22	115-199
	G	DED		W1275	6077Z			73-21-22	115-199
TB0208		BACT44B0250U					690/ /		115-199
TB0208	A	YHLZD-33					700/305/L015		115-199
TB0208	A	YHLZD-15					700/305/L15		115-199
	A	A01	2	W3672	0149	22		33-25-12	115-199
	A	A02	2	W3672	0150	22		33-25-12	115-199
	A	C01	2	W3672	0151	22		33-25-12	115-199
	A	C01	2	W3672	0181	22		33-25-12	115-199
	A	C02	2	W3672	0152	22		33-25-12	115-199
	A	C02	2	W3672	0182	22		33-25-12	115-199
TB0209		M81714-5-7					L/MLG/ /		001, 003-099
TB0209		M81714-5-3					L/MLG/ /		115-199
TB0209	K	M81714-3-BD1					J-BOX/FWD/L/H		ALL
TB0209	L	M81714-3-BB1					J-BOX/FWD/L/H		ALL
	K	A001	1	W3010	4502G	18		32-46-11	115-199
	K	A001	1	W3030	4501G	18		32-46-11	115-199
	K	A002	1	W3000	4501G	18		32-46-11	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 71

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0209		M81714-5-7 (continued)					L/MLG/ /		001, 003-099
TB0209		M81714-5-3 (continued)					L/MLG/ /		115-199
TB0209	K	M81714-3-BD1 (continued)					J-BOX/FWD/L/H		ALL
TB0209	L	M81714-3-BB1 (continued)					J-BOX/FWD/L/H		ALL
	K	A002	1	W3010	4501G	18		32-46-11	115-199
	K	A003	1	W3004	2501B	20		32-42-11	ALL
	K	A003	1	W3010	2501B	20		32-42-11	ALL
	L	A004	1	W3004	2501Z			32-42-11	ALL
	L	A004	1	W3010	2501Z			32-42-11	ALL
	K	C001	1	W3010	4502W	18		32-46-11	115-199
	K	C001	1	W3030	4501W	18		32-46-11	115-199
	K	C003	1	W3004	2501R	20		32-42-11	ALL
	K	C003	1	W3010	2501R	20		32-42-11	ALL
	K	E001	1	W3006	A-AB			32-09-11	ALL
	K	E001	1	W3010	2001R	18		32-09-11	ALL
	K	E002	1	W3000	4501W	18		32-46-11	115-199
	K	E002	1	W3010	4501W	18		32-46-11	115-199
	K	E003	1	W3004	2502B	20		32-42-11	ALL
	K	E003	1	W3010	2502B	20		32-42-11	ALL
	L	E004	1	W3004	2502Z			32-42-11	ALL
	L	E004	1	W3010	2502Z			32-42-11	ALL
	K	G001	1	W3006	A-AA			32-09-11	ALL
	K	G001	1	W3010	2001B	18		32-09-11	ALL
	K	G003	1	W3004	2502R	20		32-42-11	ALL
	K	G003	1	W3010	2502R	20		32-42-11	ALL
TB0210		M81714-5-7					L/MLG/ /		001, 003-099
TB0210		M81714-5-3					L/MLG/ /		115-199
TB0210	K	M81714-3-BD1					J-BOX/AFT/L/H		ALL
TB0210	L	M81714-3-BB1					J-BOX/AFT/L/H		ALL
	K	A001	1	W3002	4501W	18		32-46-11	115-199
	K	A001	1	W3012	4501W	18		32-46-11	115-199
	K	A002	1	W3012	4502W	18		32-46-11	115-199
	K	A002	1	W3032	4501W	18		32-46-11	115-199
	K	A003	1	W3012	2502B	20		32-42-11	ALL
	K	A003	1	W3024	2502B	20		32-42-11	ALL
	L	A004	1	W3012	2501Z			32-42-11	ALL
	L	A004	1	W3024	2501Z			32-42-11	ALL
	K	C001	1	W3002	4501G	18		32-46-11	115-199
	K	C001	1	W3012	4501G	18		32-46-11	115-199
	K	C003	1	W3012	2502R	20		32-42-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 72

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0210		M81714-5-7 (continued)					L/MLG/ /		001, 003-099
TB0210		M81714-5-3 (continued)					L/MLG/ /		115-199
TB0210	K	M81714-3-BD1 (continued)					J-BOX/AFT/L/H		ALL
TB0210	L	M81714-3-BB1 (continued)					J-BOX/AFT/L/H		ALL
	K	C003	1	W3024	2502R	20		32-42-11	ALL
	K	E001	1	W3012	2001R	18		32-09-12	ALL
	K	E001	1	W3026	A-AB			32-09-12	ALL
	K	E002	1	W3012	4502G	18		32-46-11	115-199
	K	E002	1	W3032	4501G	18		32-46-11	115-199
	K	E003	1	W3012	2501B	20		32-42-11	ALL
	K	E003	1	W3024	2501B	20		32-42-11	ALL
	L	E004	1	W3012	2502Z			32-42-11	ALL
	L	E004	1	W3024	2502Z			32-42-11	ALL
	K	G001	1	W3012	2001B	18		32-09-12	ALL
	K	G001	1	W3026	A-AA			32-09-12	ALL
	K	G003	1	W3012	2501R	20		32-42-11	ALL
	K	G003	1	W3024	2501R	20		32-42-11	ALL
TB0211		M81714-5-7					R/MLG/ /		001, 003-099
TB0211		M81714-5-3					R/MLG/ /		115-199
TB0211	K	M81714-3-BD1					J-BOX/FWD/R/H		ALL
TB0211	L	M81714-3-BB1					J-BOX/FWD/R/H		ALL
	K	A001	1	W4910	4502G	18		32-46-11	115-199
	K	A001	1	W4930	4501G	18		32-46-11	115-199
	K	A002	1	W4900	4501G	18		32-46-11	115-199
	K	A002	1	W4906	3001Y	20		27-62-11	001-099
	K	A002	1	W4910	3001Y	20		27-62-11	001-099
	K	A002	1	W4910	4501G	18		32-46-11	115-199
	K	A003	1	W4904	2502B	20		32-42-11	ALL
	K	A003	1	W4910	2502B	20		32-42-11	ALL
	L	A004	1	W4904	2501Z			32-42-11	ALL
	L	A004	1	W4910	2501Z			32-42-11	ALL
	K	C001	1	W4910	4502W	18		32-46-11	115-199
	K	C001	1	W4930	4501W	18		32-46-11	115-199
	K	C002	1	W4906	3001B	20		27-62-11	ALL
	K	C002	1	W4910	3001B	20		27-62-11	ALL
	K	C003	1	W4904	2502R	20		32-42-11	ALL
	K	C003	1	W4910	2502R	20		32-42-11	ALL
	K	C005	1	W4906	3001Y	20		27-62-11	115-199
	K	C005	1	W4910	3001Y	20		27-62-11	115-199
	K	E001	1	W4906	A-AB			32-09-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 73

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0211		M81714-5-7 (continued)					R/MLG/ /		001, 003-099
TB0211		M81714-5-3 (continued)					R/MLG/ /		115-199
TB0211	K	M81714-3-BD1 (continued)					J-BOX/FWD/R/H		ALL
TB0211	L	M81714-3-BB1 (continued)					J-BOX/FWD/R/H		ALL
	K	E001	1	W4910	2001R	18		32-09-11	ALL
	K	E002	1	W4900	4501W	18		32-46-11	115-199
	K	E002	1	W4910	4501W	18		32-46-11	115-199
	K	E003	1	W4904	2501B	20		32-42-11	ALL
	K	E003	1	W4910	2501B	20		32-42-11	ALL
	L	E004	1	W4904	2502Z			32-42-11	ALL
	L	E004	1	W4910	2502Z			32-42-11	ALL
	K	G001	1	W4906	A-AA			32-09-11	ALL
	K	G001	1	W4910	2001B	18		32-09-11	ALL
	K	G002	1	W4906	3001R	20		27-62-11	ALL
	K	G002	1	W4910	3001R	20		27-62-11	ALL
	K	G003	1	W4904	2501R	20		32-42-11	ALL
	K	G003	1	W4910	2501R	20		32-42-11	ALL
TB0212		M81714-5-7					R/MLG/ /		001, 003-099
TB0212		M81714-5-3					R/MLG/ /		115-199
TB0212	K	M81714-3-BD1					J-BOX/AFT/R/H		ALL
TB0212	L	M81714-3-BB1					J-BOX/AFT/R/H		ALL
	K	A001	1	W4902	4501W	18		32-46-11	115-199
	K	A001	1	W4912	4501W	18		32-46-11	115-199
	K	A002	1	W4912	4502W	18		32-46-11	115-199
	K	A002	1	W4932	4501W	18		32-46-11	115-199
	K	A003	1	W4912	2502B	20		32-42-11	ALL
	K	A003	1	W4924	2502B	20		32-42-11	ALL
	L	A004	1	W4912	2501Z			32-42-11	ALL
	L	A004	1	W4924	2501Z			32-42-11	ALL
	K	C001	1	W4902	4501G	18		32-46-11	115-199
	K	C001	1	W4912	4501G	18		32-46-11	115-199
	K	C003	1	W4912	2502R	20		32-42-11	ALL
	K	C003	1	W4924	2502R	20		32-42-11	ALL
	K	E001	1	W4912	2001R	18		32-09-12	ALL
	K	E001	1	W4926	A-AB			32-09-12	ALL
	K	E002	1	W4912	4502G	18		32-46-11	115-199
	K	E002	1	W4932	4501G	18		32-46-11	115-199
	K	E003	1	W4912	2501B	20		32-42-11	ALL
	K	E003	1	W4924	2501B	20		32-42-11	ALL
	L	E004	1	W4912	2502Z			32-42-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 74

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0212		M81714-5-7 (continued)					R/MLG/ /		001, 003-099
TB0212		M81714-5-3 (continued)					R/MLG/ /		115-199
TB0212	K	M81714-3-BD1 (continued)					J-BOX/AFT/R/H		ALL
TB0212	L	M81714-3-BB1 (continued)					J-BOX/AFT/R/H		ALL
	L	E004	1	W4924	2502Z			32-42-11	ALL
	K	G001	1	W4912	2001B	18		32-09-12	ALL
	K	G001	1	W4926	A-AA			32-09-12	ALL
	K	G003	1	W4912	2501R	20		32-42-11	ALL
	K	G003	1	W4924	2501R	20		32-42-11	ALL
TB0221		AMY4100T-10U					E002-04/ /		001, 003-099, 115-199
TB0221	Y	BACM15C3B					E002-04/ /		001-099
TB0221	Y	BACM15C3B					E2-4/ /		115-199
TB0221	Z	BACM15C3C					E002-04/ /		001-099
TB0221	Z	BACM15C3C					E2-4/ /		115-199
	Z	15	BJ	W1177	5021R	24		34-21-21	ALL
	Z	15	BJ	W1177	5022R	24		34-21-21	ALL
	Z	15	BJ	W1177	5027R	22		32-42-11	001-099
	Z	15	BJ	W1177	5027R	24		32-42-11	115-199
	Z	15	BJ	W1177	5029R	24		34-61-22	ALL
	Z	15	BJ	W1177	5030R	24		22-32-11	ALL
	Z	15	BJ	W1177	5032R	24		34-22-81	001-099
	Z	15	BJ	W1177	5032R	24		34-22-83	115-199
	Z	15	BJ	W1177	5096R	22		34-46-12	002
	Z	16	BJ	W1177	5021B	24		34-21-21	ALL
	Z	16	BJ	W1177	5022B	24		34-21-21	ALL
	Z	16	BJ	W1177	5027B	22		32-42-11	001-099
	Z	16	BJ	W1177	5027B	24		32-42-11	115-199
	Z	16	BJ	W1177	5029B	24		34-61-22	ALL
	Z	16	BJ	W1177	5030B	24		22-32-11	ALL
	Z	16	BJ	W1177	5032B	24		34-22-81	001-099
	Z	16	BJ	W1177	5032B	24		34-22-83	115-199
	Z	16	BJ	W1177	5096B	22		34-46-12	002
	Z	17	BJ	W1177	5031R	24		22-21-21	ALL
	Z	17	BJ	W1177	5034R	24		34-22-28	ALL
	Z	17	BJ	W1177	5035R	24		34-21-21	ALL
	Z	17	BJ	W1177	5036R	24		34-22-92	ALL
	Z	17	BJ	W1177	5057R	24		34-22-38	ALL
	Z	18	BJ	W1177	5031B	24		22-21-21	ALL
	Z	18	BJ	W1177	5034B	24		34-22-28	ALL
	Z	18	BJ	W1177	5035B	24		34-21-21	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 75

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0221		AMY4100T-10U (continued)					E002-04/ /		001, 003-099, 115-199
TB0221	Y	BACM15C3B (continued)					E002-04/ /		001-099
TB0221	Y	BACM15C3B (continued)					E2-4/ /		115-199
TB0221	Z	BACM15C3C (continued)					E002-04/ /		001-099
TB0221	Z	BACM15C3C (continued)					E2-4/ /		115-199
	Z	18	BJ	W1177	5036B	24		34-22-92	ALL
	Z	18	BJ	W1177	5057B	24		34-22-38	ALL
	Z	41	BJ	W1177	5007R	24		34-21-11	ALL
	Z	41	BJ	W1177	5008R	24		34-21-11	ALL
	Z	41	BJ	W1177	5037R	24		34-21-31	ALL
	Z	42	BJ	W1177	5007B	24		34-21-11	ALL
	Z	42	BJ	W1177	5008B	24		34-21-11	ALL
	Z	42	BJ	W1177	5037B	24		34-21-31	ALL
	Z	47	BJ	W1177	5038R	24		34-21-31	ALL
	Z	47	BJ	W1177	5039R	24		34-21-31	ALL
	Z	47	BJ	W1177	5049R	24		34-61-12	ALL
	Z	47	BJ	W1177	5050R	24		22-21-11	ALL
	Z	47	BJ	W1177	5051R	24		34-22-81	001-099
	Z	47	BJ	W1177	5051R	24		34-22-83	115-199
	Z	47	BJ	W1177	5054R	22		32-42-11	001-099
	Z	47	BJ	W1177	5054R	24		32-42-11	115-199
	Z	47	BJ	W1177	5074R	22		34-58-21	115-199
	Z	48	BJ	W1177	5038B	24		34-21-31	ALL
	Z	48	BJ	W1177	5039B	24		34-21-31	ALL
	Z	48	BJ	W1177	5049B	24		34-61-12	ALL
	Z	48	BJ	W1177	5050B	24		22-21-11	ALL
	Z	48	BJ	W1177	5051B	24		34-22-81	001-099
	Z	48	BJ	W1177	5051B	24		34-22-83	115-199
	Z	48	BJ	W1177	5054B	22		32-42-11	001-099
	Z	48	BJ	W1177	5054B	24		32-42-11	115-199
	Z	48	BJ	W1177	5074B	22		34-58-21	115-199
	Z	79	BJ	W1177	5003R	24		34-21-11	ALL
	Z	79	BJ	W1177	5004R	24		34-21-11	ALL
	Z	79	BJ	W1177	5010R	22		32-42-11	001-099
	Z	79	BJ	W1177	5010R	24		32-42-11	115-199
	Z	79	BJ	W1177	5012R	24		34-22-91	001-099
	Z	79	BJ	W1177	5012R	24		34-22-93	115-199
	Z	79	BJ	W1177	5013R	24		22-32-11	ALL
	Z	79	BJ	W1177	5014R	24		34-61-12	ALL
	Z	80	BJ	W1177	5003B	24		34-21-11	ALL
	Z	80	BJ	W1177	5004B	24		34-21-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 76

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0221		AMY4100T-10U (continued)					E002-04/ /		001, 003-099, 115-199
TB0221	Y	BACM15C3B (continued)					E002-04/ /		001-099
TB0221	Y	BACM15C3B (continued)					E2-4/ /		115-199
TB0221	Z	BACM15C3C (continued)					E002-04/ /		001-099
TB0221	Z	BACM15C3C (continued)					E2-4/ /		115-199
	Z	80	BJ	W1177	5010B	22		32-42-11	001-099
	Z	80	BJ	W1177	5010B	24		32-42-11	115-199
	Z	80	BJ	W1177	5012B	24		34-22-91	001-099
	Z	80	BJ	W1177	5012B	24		34-22-93	115-199
	Z	80	BJ	W1177	5013B	24		22-32-11	ALL
	Z	80	BJ	W1177	5014B	24		34-61-12	ALL
	Z	81	BJ	W1177	5011R	24		22-21-11	ALL
	Z	81	BJ	W1177	5015R	24		34-22-38	ALL
	Z	81	BJ	W1177	5016R	24		34-21-11	ALL
	Z	81	BJ	W1177	5017R	24		34-22-18	ALL
	Z	81	BJ	W1177	5025R	24		34-22-82	ALL
	Z	82	BJ	W1177	5011B	24		22-21-11	ALL
	Z	82	BJ	W1177	5015B	24		34-22-38	ALL
	Z	82	BJ	W1177	5016B	24		34-21-11	ALL
	Z	82	BJ	W1177	5017B	24		34-22-18	ALL
	Z	82	BJ	W1177	5025B	24		34-22-82	ALL
	Y	A013	BJ	W1177	5033R	24		22-13-21	ALL
	Y	A013	BJ	W1177	5059R	24		22-21-11	ALL
	Y	A013	BJ	W1177	5060R	24		34-21-21	ALL
	Y	A013	BJ	W1177	5082R	22		34-58-21	115-199
	Y	A014	BJ	W1177	5005R	24		34-21-11	ALL
	Y	A014	BJ	W1177	5006R	24		34-61-25	ALL
	Y	A014	BJ	W1177	5041R	24		34-21-31	ALL
	Y	A039	BJ	W1177	0072	24		34-21-31	115-199
	Y	A039	BJ	W1179	0015	24		34-21-31	115-199
	Y	A043	BJ	W1177	5023R	24		34-21-21	ALL
	Y	A043	BJ	W1177	5028R	24		34-61-15	ALL
	Y	A043	BJ	W1177	5043R	24		34-21-31	ALL
	Y	A044	BJ	W1177	5045R	24		34-22-38	ALL
	Y	A044	BJ	W1177	5047R	24		34-21-31	ALL
	Y	A044	BJ	W1177	5052R	24		34-22-82	ALL
	Y	A045	BJ	W1177	5001R	24		34-21-11	ALL
	Y	A045	BJ	W1177	5042R	24		34-21-31	ALL
	Y	A045	BJ	W1177	5058R	24		34-21-11	ALL
	Y	A049	BJ	W1177	5044R	24		34-21-31	ALL
	Y	A049	BJ	W1177	5046R	24		34-22-18	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 77

Oct 09/2008



Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0221		AMY4100T-10U (continued)					E002-04/ /		001, 003-099, 115-199
TB0221	Y	BACM15C3B (continued)					E002-04/ /		001-099
TB0221	Y	BACM15C3B (continued)					E2-4/ /		115-199
TB0221	Z	BACM15C3C (continued)					E002-04/ /		001-099
TB0221	Z	BACM15C3C (continued)					E2-4/ /		115-199
	Y	A049	BJ	W1177	5048R	24		34-22-28	ALL
	Y	A049	BJ	W1177	5072R	22		34-58-11	115-199
	Y	A084	BJ	W1177	5018R	24		22-13-11	ALL
	Y	A084	BJ	W1177	5055R	24		34-21-11	ALL
	Y	A084	BJ	W1177	5056R	24		22-21-21	ALL
	Y	A084	BJ	W1177	5065R	22		34-58-11	115-199
	Y	C013	BJ	W1177	5033B	24		22-13-21	ALL
	Y	C013	BJ	W1177	5059B	24		22-21-11	ALL
	Y	C013	BJ	W1177	5060B	24		34-21-21	ALL
	Y	C013	BJ	W1177	5082B	22		34-58-21	115-199
	Y	C014	BJ	W1177	5005B	24		34-21-11	ALL
	Y	C014	BJ	W1177	5006B	24		34-61-25	ALL
	Y	C014	BJ	W1177	5041B	24		34-21-31	ALL
	Y	C043	BJ	W1177	5023B	24		34-21-21	ALL
	Y	C043	BJ	W1177	5028B	24		34-61-15	ALL
	Y	C043	BJ	W1177	5043B	24		34-21-31	ALL
	Y	C044	BJ	W1177	5045B	24		34-22-38	ALL
	Y	C044	BJ	W1177	5047B	24		34-21-31	ALL
	Y	C044	BJ	W1177	5052B	24		34-22-82	ALL
	Y	C045	BJ	W1177	5001B	24		34-21-11	ALL
	Y	C045	BJ	W1177	5042B	24		34-21-31	ALL
	Y	C045	BJ	W1177	5058B	24		34-21-11	ALL
	Y	C049	BJ	W1177	5044B	24		34-21-31	ALL
	Y	C049	BJ	W1177	5046B	24		34-22-18	ALL
	Y	C049	BJ	W1177	5048B	24		34-22-28	ALL
	Y	C049	BJ	W1177	5072B	22		34-58-11	115-199
	Y	C084	BJ	W1177	5018B	24		22-13-11	ALL
	Y	C084	BJ	W1177	5055B	24		34-21-11	ALL
	Y	C084	BJ	W1177	5056B	24		22-21-21	ALL
	Y	C084	BJ	W1177	5065B	22		34-58-11	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 78

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0225		M81714-5-7					P062-00/ /		001, 003-099
TB0225	A	TJM112603					P62-00/ /		001-099
TB0225	A	M81714-4-DB2					P62-00/ /		001-099
TB0225	C	M81714-3-BC2					P062-00/ /		001-099
TB0225	K	M81714-3-BD1					P062-00/ /		001-099
	C	A001	1	W3050	0004	20		26-15-12	001-099
	C	A001	1	W3060	0004	20		26-15-12	001-099
	K	A003	1	W3050	0008	20		SPARE	001-099
	A	A005	1C	W3054	0022	16		33-42-21	001-099
	A	A005	1C	W3054	0023	16		33-42-21	001-099
	A	A005	1C	W3054	0024	16		33-42-21	001-099
	C	C001	1	W3050	0001	20		26-15-12	001-099
	C	C001	1	W3060	0001	20		26-15-12	001-099
	C	E004	1	W3050	0003	20		26-15-12	001-099
	C	E004	1	W3060	0003	20		26-15-12	001-099
	C	E004	1	W3060	A-03			26-15-12	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0200

Page 79 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB0300		AMY4100T-10U					E006-04/ /		115-199
TB0300	A	YHLZD-29					E6-4/ /		115-199
TB0300	A	YHLZD-33					E6-4/ /		115-199
TB0300	Y	BACM15C3B					E6-4/ /		115-199
TB0300	Z	BACM15C3C					E6-4/ /		115-199
	A	A001	2	W1032	0371	24		24-27-41	115-199
	Y	A004	BJ	W1032	0324	22		49-72-11	115-199
	Y	A004	BJ	W1032	0341	22		49-72-11	115-199
	Y	A004	BJ	W1032	0372	24		24-27-41	115-199
	A	C001	2	W1032	0372	24		24-27-41	115-199
	Y	C003	BJ	W1032	0419	22		32-42-12	115-199
	Y	C003	BJ	W1032	0430	22		32-42-12	115-199
	Y	C003	BJ	W1032	0436	22		32-42-12	115-199
	Y	C004	BJ	W1032	0418	22		32-42-12	115-199
	Y	C004	BJ	W1032	0455	22		32-42-12	115-199
	Y	C004	BJ	W1032	0456	22		32-42-12	115-199
TB0360	A	YHLZD-38					P36/ /		ALL
TB0360	B	YHLZD-33					P036-00/ /		003-099
TB0360	X	BACM15C3A					P036-00/ /		001-099
TB0360	X	BACM15C3A					P36/ /		115-199
TB0360	Y	BACM15C3B					P36/ /		115-199
	A	A013	2	W1260	0855	20		32-35-11	ALL
	A	A014	2	W1260	0855	20		32-35-11	ALL
	B	A015	2	W1260	6407	22		32-09-11	003-099
	X	B010	BJ	W1260	0400	22		76-11-21	ALL
	X	B010	BJ	W1260	6052	22		76-11-21	ALL
	A	C013	2	W1260	0853	20		32-35-11	ALL
	A	C014	2	W1260	0486	20		32-35-11	001-099
	A	C014	2	W1260	0854	20		32-35-11	ALL
	B	C015	2	W1260	0981	22		32-09-11	003-099
	B	C015	2	W1260	5925	22		32-09-11	003-099
	X	D009	BJ	W1260	0405	22		76-11-21	ALL
	X	D009	BJ	W1260	6050	22		76-11-21	ALL
TB0361	Z	BACM15C3C					P36/ /		115-199
I TB0362	C	YHLZD-29					P36/ /		115-199
I TB0362	C	YHLZD-33					P36/ /		115-199
TB0362	J	YHLZD-33					P36/ /		115-199
	C	A001	2	W1260	0151	24		29-33-11	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0300

Page 1

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

	Terminal No.	Part Number			Wire No.	GA	Station / WL / BL		Diagram	Effectivity
		Fix	Term	Type			Bundle	CO		
I	TB0362	C	YHLZD-29 (continued)				P36/ /			115-199
I	TB0362	C	YHLZD-33 (continued)				P36/ /			115-199
	TB0362	J	YHLZD-33 (continued)				P36/ /			115-199
		C	A001	2	W1260	0174	24		29-33-11	115-199
		C	A002	2	W1260	0152	24		29-33-11	115-199
		C	A002	2	W1260	0194	24		29-33-11	115-199
		C	A003	2	W1260	0153	24		29-33-11	115-199
		C	A003	2	W1260	8515	24		29-33-11	115-199
		C	C001	2	W1260	0167	24		29-33-11	115-199
		C	C001	2	W1260	8516	24		29-33-11	115-199
		C	C002	2	W1260	0178	24		29-33-11	115-199
		C	C002	2	W1260	8517	24		29-33-11	115-199
		C	C003	2	W1260	0198	24		29-33-11	115-199
		C	C003	2	W1260	8518	24		29-33-11	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB0300

Page 2 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB5001		MS27212-2-12					275/270/L015		ALL
		1	E	W0110	0016	08		24-54-11	ALL
		1	E	W0112	0207	08		24-54-11	ALL
		1	E	W2002	0005	08		24-54-11	ALL
		10	E	W0110	0301	12		24-51-15	ALL
		10	E	W0112	0023	12		24-51-15	ALL
		10	E	W2344	0008	12		24-51-15	ALL
		11	E	W0110	0302	12		24-51-15	ALL
		11	E	W0112	0024	12		24-51-15	ALL
		11	E	W2344	0009	12		24-51-15	ALL
		12	E	W0110	0044	18		24-51-15	ALL
		12	E	W0112	0026	12		24-51-15	ALL
		12	E	W2344	0010	18		24-51-15	ALL
		2	E	W0110	0001	16		24-51-12	ALL
		2	E	W0112	0214	16		24-51-12	ALL
		2	E	W2012	0001	16		24-51-12	ALL
		3	E	W0110	0002	16		24-51-12	ALL
		3	E	W0112	0209	16		24-51-12	001-099
		3	E	W0112	0215	16		24-51-12	115-199
		3	E	W2012	0002	16		24-51-12	ALL
		4	E	W0110	0003	16		24-51-12	ALL
		4	E	W0112	0205	16		24-51-12	001-099
		4	E	W0112	0205	12		24-51-12	115-199
		4	E	W0112	0216	16		24-51-12	115-199
		4	E	W2012	0003	16		24-51-12	ALL
		5	E	W0110	0026	14		24-53-11	ALL
		5	E	W0112	0201	14		24-53-11	ALL
		5	E	W2012	0004	14		24-53-11	ALL
		6	E	W0112	0210	22		24-51-72	ALL
		6	E	W2012	0016	22		24-51-72	ALL
		7	E	W0112	0211	22		24-51-72	ALL
		7	E	W2012	0017	22		24-51-72	ALL
		8	E	W0112	0212	22		24-51-72	ALL
		8	E	W2012	0018	22		24-51-72	ALL
		9	E	W0110	0300	12		24-51-15	ALL
		9	E	W0112	0022	12		24-51-15	ALL
		9	E	W2344	0007	12		24-51-15	ALL
TB5002		MS27212-2-12					275/270/R015		ALL
		1	E	W0114	0301	16		24-51-22	ALL
		1	E	W0116	0029	16		24-51-22	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB5000

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
		Term					CO		
TB5002		MS27212-2-12 (continued)					275/270/R015		ALL
		1	E	W2014	0001	16		24-51-22	ALL
		10	E	W0116	0026	22		24-51-72	001-099
		10	E	W0116	0026	16		24-51-72	115-199
		10	E	W2004	0008	22		24-51-72	ALL
		12	E	W0126	0313	24		33-13-61	ALL
		12	E	W0128	0092	24		33-13-61	ALL
		2	E	W0114	0302	16		24-51-22	ALL
		2	E	W0116	0028	16		24-51-22	ALL
		2	E	W2014	0002	16		24-51-22	ALL
		3	E	W0114	0303	16		24-51-22	ALL
		3	E	W0116	0027	16		24-51-22	ALL
		3	E	W2014	0003	16		24-51-22	ALL
		4	E	W0114	0071	14		24-53-21	ALL
		4	E	W0116	0101	14		24-53-21	ALL
		4	E	W2014	0010	14		24-53-21	ALL
		5	E	W0114	0014	22		24-51-72	ALL
		5	E	W2014	0015	22		24-51-72	ALL
		6	E	W0114	0012	22		24-51-72	ALL
		6	E	W0116	0200	22		24-51-72	ALL
		6	E	W2014	0016	22		24-51-72	ALL
		7	E	W0114	0016	22		24-51-72	ALL
		7	E	W2014	0017	22		24-51-72	ALL
		8	E	W0116	0024	22		24-51-72	001-099
		8	E	W0116	0024	16		24-51-72	115-199
		8	E	W2004	0006	22		24-51-72	ALL
		9	E	W0116	0025	22		24-51-72	001-099
		9	E	W0116	0025	16		24-51-72	115-199
		9	E	W2004	0007	22		24-51-72	ALL
TB5003		MS27212-2-12					275/270/L015		ALL
		1	E	W0112	0501	10		24-51-13	001-099
		1	E	W0112	0501	08		24-51-13	115-199
		1	E	W2002	0001	10		24-51-13	001-099
		1	E	W2002	0001	08		24-51-13	115-199
		10	E	W0110	0031	16		24-51-72	ALL
		10	E	W2344	0014	12		24-51-72	ALL
		2	E	W0112	0502	10		24-51-13	001-099
		2	E	W0112	0502	08		24-51-13	115-199
		2	E	W2002	0002	10		24-51-13	001-099
		2	E	W2002	0002	08		24-51-13	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB5000

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB5003		MS27212-2-12 (continued)					275/270/L015		ALL
		3	E	W0112	0503	10		24-51-13	001-099
		3	E	W0112	0503	08		24-51-13	115-199
		3	E	W2002	0003	10		24-51-13	001-099
		3	E	W2002	0003	08		24-51-13	115-199
		4	E	W0112	0001	08		24-54-11	ALL
		4	E	W2002	0004	08		24-54-11	ALL
		5	E	W0112	0101	16		24-51-11	ALL
		5	E	W2012	0005	16		24-51-11	ALL
		6	E	W0112	0301	16		24-51-11	ALL
		6	E	W2012	0006	16		24-51-11	ALL
		7	E	W0112	0401	16		24-51-11	ALL
		7	E	W2012	0007	16		24-51-11	ALL
		8	E	W0110	0029	16		24-51-72	ALL
		8	E	W2344	0016	12		24-51-72	ALL
		9	E	W0110	0030	16		24-51-72	ALL
		9	E	W0112	0108	16		24-51-72	ALL
		9	E	W2344	0015	12		24-51-72	ALL
TB5004		MS27212-2-12					275/270/R015		ALL
		1	E	W0116	0401	12		24-51-23	ALL
		1	E	W2004	0001	08		24-51-23	ALL
		10	E	W0116	0303	12		24-51-52	ALL
		10	E	W2014	0008	12		24-51-52	ALL
		11	E	W0114	0036	12		24-51-52	009-099
		11	E	W0116	0301	12		24-51-52	ALL
		11	E	W2014	0009	12		24-51-52	ALL
		2	E	W0116	0402	12		24-51-23	ALL
		2	E	W2004	0002	08		24-51-23	ALL
		3	E	W0116	0403	12		24-51-23	ALL
		3	E	W2004	0003	08		24-51-23	ALL
		4	E	W0114	0001	08		24-54-21	ALL
		4	E	W0116	0501	10		24-54-21	001-099
		4	E	W0116	0501	12		24-54-21	115-199
		4	E	W2004	0004	08		24-54-21	ALL
		5	E	W0114	0031	12		24-54-21	001-099
		5	E	W0114	0061	12		24-54-21	115-199
		5	E	W0116	0001	08		24-54-21	ALL
		5	E	W2004	0005	08		24-54-21	ALL
		6	E	W0116	0212	16		24-51-21	ALL
		6	E	W2014	0004	16		24-51-21	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB5000

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB5004		MS27212-2-12 (continued)					275/270/R015		ALL
		7	E	W0116	0206	16		24-51-21	ALL
		7	E	W2014	0005	16		24-51-21	ALL
		8	E	W0116	0201	16		24-51-21	ALL
		8	E	W2014	0006	16		24-51-21	ALL
		9	E	W0116	0308	12		24-51-52	ALL
		9	E	W2014	0007	12		24-51-52	ALL
TB5005		MS27212-2-12					272/250/L010		ALL
		1	E	W0110	0701	12		24-54-73	001-099
		1	E	W0118	0001	12		24-54-73	115-199
		1	E	W2016	0001	12		24-54-73	ALL
		2	E	W0110	0714	16		24-54-73	001-099
		2	E	W0118	0014	16		24-54-73	115-199
		2	E	W2016	0002	16		24-54-73	ALL
TB5006		MS27212-2-12					272/250/R010		ALL
		1	E	W0122	0009	22		24-51-31	115-199
		1	E	W2010	0001	24		24-51-31	ALL
		1	E	W2072	0157	24		24-51-31	001-099
		10	E	W0116	0040	12		24-51-25	ALL
		10	E	W2346	0006	12		24-51-25	001-002, 115-199
		10	E	W2346	0020	12		24-51-25	003-099
		11	E	W0116	0041	12		24-51-25	ALL
		11	E	W2346	0007	12		24-51-25	ALL
		12	E	W0116	0042	12		24-51-25	ALL
		12	E	W2346	0008	12		24-51-25	ALL
		2	E	W0114	0802	22		24-51-31	001-099
		2	E	W0122	0002	22		24-51-31	115-199
		2	E	W2010	0002	22		24-51-31	ALL
		3	E	W0114	0801	18		24-51-31	001-099
		3	E	W0122	0001	18		24-51-31	115-199
		3	E	W2010	0003	18		24-51-31	ALL
		4	E	W0114	0701	08		24-54-71	001-099
		4	E	W0120	0001	08		24-54-71	115-199
		4	E	W2016	0003	08		24-54-71	ALL
		CAP	Y	W2010	0004	18		SPARE	ALL
		CAP	Y	W2010	0005	16		SPARE	ALL
I TB5007		MS27212-3-1					P006-01/ /		001, 003-099, 115-199
		= 1	F	W0070	0001	02		24-32-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB5000

Page 4

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.		Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
	Fix	Term					CO		
I	TB5007	MS27212-3-1 (continued)					P006-01/ /		001, 003-099, 115-199
		= 1	F	W2232	0001	02		24-32-11	ALL
I	TB5008	MS27212-3-1					P006-01/ /		001, 003-099, 115-199
		= 1	F	W0072	0001	02		24-32-11	ALL
		= 1	F	W2230	0001	02		24-32-11	ALL
I	TB5009	MS27212-3-1					P006-02/ /		001, 003-099, 115-199
		= 1	F	W0066	0005	02		24-31-11	ALL
		= 1	F	W2008	0003	02		24-31-11	ALL
I	TB5010	MS27212-3-1					P006-02/ /		001, 003-099, 115-199
		= 1	F	W0060	0311	06		24-31-11	ALL
		= 1	F	W0066	0006	02		24-31-11	ALL
		= 1	F	W2000	0001	*1		24-31-11	ALL
	TB5011	MS27212-2-10					P006-00/ /		ALL
		1	E	W0072	0009	08		24-54-11	ALL
		1	E	W2002	0004	08		24-54-11	ALL
		10	E	W0060	0312	18		29-21-31	ALL
		10	E	W2260	0028	12		29-21-31	ALL
		2	E	W0072	0002	08		24-54-11	ALL
		2	E	W2002	0005	08		24-54-11	ALL
		3	E	W0074	0003	08		24-54-71	ALL
		3	E	W2016	0003	08		24-54-71	ALL
		4	E	W0070	0004	08		24-54-21	ALL
		4	E	W2004	0004	08		24-54-21	ALL
		5	E	W0070	0005	08		24-54-21	ALL
		5	E	W2004	0005	08		24-54-21	ALL
		6	E	W0074	0069	16		34-21-21	115-199
		6	E	W0074	0201	16		34-21-21	001-099
		6	E	W2250	0520	14		34-21-21	ALL
		7	E	W0060	0017	16		34-21-31	001-099
		7	E	W0060	0036	16		34-21-31	115-199
		7	E	W2250	0054	14		34-21-31	ALL
		8	E	W0060	0012	08		24-54-72	ALL
		8	E	W0066	0004	08		24-54-72	ALL
		9	E	W0060	0310	10		32-35-11	ALL
		9	E	W2260	0024	10		32-35-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB5000

Page 5

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL		Diagram	Effectivity
							CO			
I TB5012		MS27212-3-3					P006-03/ /			ALL
		1	F	W0062	0001	06			24-51-11	ALL
		1	F	W2018	0001	06			24-51-11	ALL
		2	F	W0062	0002	06			24-51-11	ALL
		2	F	W2018	0002	06			24-51-11	ALL
		3	F	W0062	0003	06			24-51-11	ALL
		3	F	W2018	0003	06			24-51-11	ALL
I TB5013		MS27212-2-8					P006-03/ /			ALL
		1	E	W0062	0013	10			24-51-13	001-099
		1	E	W0062	0013	12			24-51-13	115-199
		1	E	W0062	0019	12			24-51-13	ALL
		1	E	W2002	0001	10			24-51-13	001-099
		1	E	W2002	0001	08			24-51-13	115-199
		2	E	W0062	0014	10			24-51-13	001-099
		2	E	W0062	0014	12			24-51-13	115-199
		2	E	W0062	0020	12			24-51-13	ALL
		2	E	W2002	0002	10			24-51-13	001-099
		2	E	W2002	0002	08			24-51-13	115-199
		3	E	W0062	0015	10			24-51-13	001-099
		3	E	W0062	0015	12			24-51-13	115-199
		3	E	W0062	0021	12			24-51-13	ALL
		3	E	W2002	0003	10			24-51-13	001-099
		3	E	W2002	0003	08			24-51-13	115-199
		4	E	W0068	0001	14			24-33-11	ALL
		4	E	W0068	0006	18			24-33-11	ALL
		4	E	W2008	0005	14			24-33-11	ALL
I TB5014		MS27212-3-3					P006-04/ /			ALL
		1	F	W0064	0001	06			24-51-21	ALL
		1	F	W2020	0001	06			24-51-21	ALL
		2	F	W0064	0002	06			24-51-21	ALL
		2	F	W2020	0002	06			24-51-21	ALL
		3	F	W0064	0003	06			24-51-21	ALL
		3	F	W2020	0003	06			24-51-21	ALL
I TB5015		MS27212-2-3					P006-04/ /			ALL
		1	E	W0064	0034	12			24-51-52	ALL
		1	E	W2022	0001	08			24-51-52	ALL
		2	E	W0064	0035	12			24-51-52	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB5000

Page 6

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

	Terminal No.	Fix	Part Number	Type	Bundle	Wire No.	GA	Station / WL / BL	Diagram	Effectivity
			Term					CO		
I	TB5015		MS27212-2-3 (continued)					P006-04/ /		ALL
			2	E	W2022	0002	08		24-51-52	ALL
			3	E	W0064	0036	12		24-51-52	ALL
			3	E	W2022	0003	08		24-51-52	ALL
I	TB5016		MS27212-2-6					P006-04/ /		ALL
			1	E	W0064	0007	08		24-51-23	ALL
			1	E	W0064	0010	08		24-51-23	ALL
			1	E	W2004	0001	08		24-51-23	ALL
			2	E	W0064	0008	08		24-51-23	ALL
			2	E	W0064	0011	08		24-51-23	ALL
			2	E	W2004	0002	08		24-51-23	ALL
			3	E	W0064	0009	08		24-51-23	ALL
			3	E	W0064	0012	08		24-51-23	ALL
			3	E	W2004	0003	08		24-51-23	ALL
			4	E	W0064	0055	22		24-51-72	ALL
			4	E	W2004	0006	22		24-51-72	ALL
			5	E	W0064	0056	22		24-51-72	ALL
			5	E	W2004	0007	22		24-51-72	ALL
			6	E	W0064	0057	22		24-51-72	ALL
			6	E	W2004	0008	22		24-51-72	ALL
	TB5017		MS27212-5-1					P006-02/ /		001, 003-099, 115-199
I			= 1	H	W0066	0010	02		24-33-12	001-099
I			= 1	H*	W2702	0001	*2		24-33-12	001-099
	TB5019		MS27212-2-12					P006-03/ /		ALL
			1	E	W0062	0374	14		24-51-15	ALL
			1	E	W2344	0004	14		24-51-15	ALL
			10	E	W0062	0049	16		24-51-72	ALL
			10	E	W2344	0011	16		24-51-72	ALL
			12	E	W0066	0012	06		24-31-11	001-002, 115-199
			12	E	W0066	0017	08		24-31-11	003-099
			12	E	W2382	0001	08		24-31-11	003-099
			12	E	W2392	0001	06		24-31-11	001-002, 115-199
			2	E	W0062	0375	14		24-51-15	ALL
			2	E	W2344	0005	14		24-51-15	ALL
			3	E	W0062	0376	14		24-51-15	ALL
			3	E	W2344	0006	14		24-51-15	ALL
			4	E	W0062	0370	12		24-51-15	ALL
			4	E	W2344	0001	12		24-51-15	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB5000

Page 7

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB5019		MS27212-2-12 (continued)					P006-03/ /		ALL
		4	E	W2344	0007	12		24-51-15	ALL
		5	E	W0062	0371	12		24-51-15	ALL
		5	E	W2344	0002	12		24-51-15	ALL
		5	E	W2344	0008	12		24-51-15	ALL
		6	E	W0062	0372	12		24-51-15	ALL
		6	E	W2344	0003	12		24-51-15	ALL
		6	E	W2344	0009	12		24-51-15	ALL
		7	E	W0062	0387	18		24-51-15	ALL
		7	E	W2344	0010	18		24-51-15	ALL
		8	E	W0062	0047	16		24-51-72	ALL
		8	E	W2344	0013	16		24-51-72	ALL
		9	E	W0062	0048	16		24-51-72	ALL
		9	E	W2344	0012	16		24-51-72	ALL
TB5021		MS27212-6-2					288/253/L045		ALL
		1	D	W2364	0033	22		33-14-31	ALL
		1	D	W2364	A-C			33-14-31	ALL
		2	D	W2364	0034	20		33-14-31	ALL
		2	D	W2364	A-D			33-14-31	ALL
TB5025		MS27212-2-10					P006-00/ /		ALL
		1	E	W0064	0081	18		24-51-25	001-002, 115-199
		1	E	W0064	0081	12		24-51-25	003-099
		1	E	W2346	0001	18		24-51-25	001-002, 115-199
		1	E	W2346	0001	12		24-51-25	003-099
		2	E	W0064	0082	18		24-51-25	001-002, 115-199
		2	E	W0064	0082	12		24-51-25	003-099
		2	E	W2346	0002	18		24-51-25	001-002, 115-199
		2	E	W2346	0002	12		24-51-25	003-099
		3	E	W0064	0083	18		24-51-25	001-002, 115-199
		3	E	W0064	0083	12		24-51-25	003-099
		3	E	W2346	0003	18		24-51-25	001-002, 115-199
		3	E	W2346	0003	12		24-51-25	003-099
		4	E	W0064	0084	12		24-51-25	ALL
		4	E	W0064	0120	12		24-51-25	003-099
		4	E	W2346	0004	12		24-51-25	ALL
		4	E	W2346	0008	12		24-51-25	ALL
		5	E	W0064	0086	12		24-51-25	ALL
		5	E	W0064	0119	12		24-51-25	003-099
		5	E	W2346	0005	12		24-51-25	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB5000

Page 8

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB5025		MS27212-2-10 (continued)					P006-00/ /		ALL
		5	E	W2346	0007	12		24-51-25	ALL
		6	E	W0064	0118	12		24-51-25	003-099
		6	E	W2346	0006	12		24-51-25	003-099
		6	E	W2346	0020	12		24-51-25	003-099
TB5028		MS27212-2-7					225/225/L037		ALL
				W2384	2501Z			30-41-11	115-199
				W2384	2502Z			30-41-11	115-199
				W2384	FRAB			30-41-11	115-199
		1	E	W2304	A-AA			30-41-11	ALL
		1	E	W2304	A-AB			30-41-11	ALL
		1	E	W2384	2001B	12		30-41-11	ALL
		2	E	W2304	A-AC			30-41-11	ALL
		2	E	W2384	2001R	12		30-41-11	ALL
		3	E	W2304	A-BA			30-41-11	ALL
		3	E	W2384	2501B	22		30-41-11	ALL
		4	E	W2304	A-BB			30-41-11	ALL
		4	E	W2384	2501R	22		30-41-11	ALL
		5	E	W2304	A-CA			30-41-11	ALL
		5	E	W2384	2502B	22		30-41-11	115-199
		6	E	W2304	A-CB			30-41-11	ALL
		6	E	W2384	2502R	22		30-41-11	115-199
		7	E	W2384	0001	20		30-41-11	ALL
		7	E	W2384	2501Z			30-41-11	001-099
		7	E	W2384	FRAB			30-41-11	115-199
TB5029		MS27212-1-7					APR235/ /		001, 003-099, 115-199
TB5030		MS27212-1-7					250/215/L047		ALL
				W2386	2503Z			30-41-12	115-199
				W2386	2504Z			30-41-12	115-199
				W2386	FRAD			30-41-12	115-199
		1	C	W2308	A-DA			30-41-12	ALL
		1	C	W2386	0004	20		30-41-12	ALL
		2	C	W2308	A-DB			30-41-12	ALL
		2	C	W2386	0005	20		30-41-12	ALL
		3	C	W2308	A-EA			30-41-12	ALL
		3	C	W2386	2503B	22		30-41-12	ALL
		4	C	W2308	A-EB			30-41-12	ALL
		4	C	W2386	2503R	22		30-41-12	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB5000

Page 9

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB5030		MS27212-1-7 (continued)					250/215/L047		ALL
		5	C	W2308	A-FA			30-41-12	ALL
		5	C	W2386	2504B	22		30-41-12	115-199
		6	C	W2308	A-FB			30-41-12	ALL
		6	C	W2386	2504R	22		30-41-12	115-199
		7	C	W2386	0006	20		30-41-12	ALL
		7	C	W2386	2503Z			30-41-12	001-099
		7	C	W2386	FRAD			30-41-12	115-199
TB5031		MS27212-2-15					P031-00/ /		ALL
		1	E	W1130	0028	08		24-51-11	ALL
		1	E	W4508	0001	08		24-51-11	ALL
		2	E	W1130	0029	08		24-51-11	ALL
		2	E	W4508	0002	08		24-51-11	ALL
		3	E	W1130	0030	08		24-51-11	ALL
		3	E	W4508	0003	08		24-51-11	ALL
		4	E	W1130	0025	08		24-51-14	ALL
		4	E	W4508	0004	10		24-51-14	001-099
		4	E	W4508	0004	08		24-51-14	115-199
		5	E	W1130	0026	08		24-51-14	ALL
		5	E	W4508	0005	10		24-51-14	001-099
		5	E	W4508	0005	08		24-51-14	115-199
		6	E	W1130	0027	08		24-51-14	ALL
		6	E	W4508	0006	10		24-51-14	001-099
		6	E	W4508	0006	08		24-51-14	115-199
		7	E	W1130	0034	08		24-51-14	115-199
		7	E	W4508	0007	10		24-51-14	115-199
		8	E	W1130	0035	08		24-51-14	115-199
		8	E	W4508	0008	10		24-51-14	115-199
		9	E	W1130	0036	08		24-51-14	115-199
		9	E	W4508	0009	10		24-51-14	115-199
TB5032		MS27212-2-15					P032-00/ /		ALL
		1	E	W1132	0031	08		24-51-52	ALL
		1	E	W4510	0004	08		24-51-52	ALL
		10	E	W1132	0040	08		24-51-24	115-199
		10	E	W1132	0059	08		24-51-24	001-099
		10	E	W4510	0010	08		24-51-24	001-099
		10	E	W4510	0011	10		24-51-24	115-199
		11	E	W1132	0041	08		24-51-24	115-199
		11	E	W1132	0060	08		24-51-24	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB5000

Page 10

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB5032		MS27212-2-15 (continued)					P032-00/ /		ALL
		11	E	W4510	0011	08		24-51-24	001-099
		11	E	W4510	0012	10		24-51-24	115-199
		12	E	W1132	0042	08		24-51-24	115-199
		12	E	W1132	0061	08		24-51-24	001-099
		12	E	W4510	0012	08		24-51-24	001-099
		12	E	W4510	0013	10		24-51-24	115-199
		13	E	W1132	0043	10		24-32-41	ALL
		13	BS	W2700	0016	08		24-32-41	ALL
		14	E	W1132	0044	10		24-32-41	ALL
		14	BS	W2700	0017	08		24-32-41	ALL
		15	E	W1132	0045	10		24-32-41	ALL
		15	BS	W2700	0018	08		24-32-41	ALL
		2	E	W1132	0032	08		24-51-52	ALL
		2	E	W4510	0005	08		24-51-52	ALL
		3	E	W1132	0033	08		24-51-52	ALL
		3	E	W4510	0006	08		24-51-52	ALL
		4	E	W1132	0034	08		24-51-21	ALL
		4	E	W4510	0001	08		24-51-21	ALL
		5	E	W1132	0035	08		24-51-21	ALL
		5	E	W4510	0002	08		24-51-21	ALL
		6	E	W1132	0036	08		24-51-21	ALL
		6	E	W4510	0003	08		24-51-21	ALL
		7	E	W1132	0037	08		24-51-24	ALL
		7	E	W4510	0007	10		24-51-24	001-099
		7	E	W4510	0007	08		24-51-24	115-199
		8	E	W1132	0038	08		24-51-24	ALL
		8	E	W4510	0008	10		24-51-24	001-099
		8	E	W4510	0008	08		24-51-24	115-199
		9	E	W1132	0039	08		24-51-24	ALL
		9	E	W4510	0009	10		24-51-24	001-099
		9	E	W4510	0009	08		24-51-24	115-199
TB5034		MS27212-2-4					P034-00/ /		001, 003-099, 115-199
		1	E	W1196	0006	08		24-53-51	115-199
		1	E	W4512	0004	06		24-53-51	115-199
		3	E	W1128	0001	12		24-54-61	ALL
		3	E	W1196	0013	12		24-54-61	115-199
		3	E	W1196	0015	12		24-54-61	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB5000

Page 11

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB5038		MS27212-2-7					223/230/R040		ALL
				W2390	2501Z			30-41-12	115-199
				W2390	2502Z			30-41-12	115-199
				W2390	FRAB			30-41-12	115-199
		1	E	W2314	A-AA			30-41-12	ALL
		1	E	W2314	A-AB			30-41-12	ALL
		1	E	W2390	2001B	12		30-41-12	ALL
		2	E	W2314	A-AC			30-41-12	ALL
		2	E	W2390	2001R	12		30-41-12	ALL
		3	E	W2314	A-BA			30-41-12	ALL
		3	E	W2390	2501B	22		30-41-12	ALL
		4	E	W2314	A-BB			30-41-12	ALL
		4	E	W2390	2501R	22		30-41-12	ALL
		5	E	W2314	A-CA			30-41-12	ALL
		5	E	W2390	2502B	22		30-41-12	115-199
		6	E	W2314	A-CB			30-41-12	ALL
		6	E	W2390	2502R	22		30-41-12	115-199
		7	E	W2390	0001	20		30-41-12	ALL
		7	E	W2390	2501Z			30-41-12	001-099
		7	E	W2390	FRAB			30-41-12	115-199
TB5039		MS27212-1-7					255/216/R047		001, 003-099, 115-199
TB5040		MS27212-1-7					255/216/R047		ALL
				W2388	2503Z			30-41-11	115-199
				W2388	2504Z			30-41-11	115-199
				W2388	FRAD			30-41-11	115-199
		1	C	W2318	A-DA			30-41-11	ALL
		1	C	W2388	0004	20		30-41-11	ALL
		2	C	W2318	A-DB			30-41-11	ALL
		2	C	W2388	0005	20		30-41-11	ALL
		3	C	W2318	A-EA			30-41-11	ALL
		3	C	W2388	2503B	22		30-41-11	ALL
		4	C	W2318	A-EB			30-41-11	ALL
		4	C	W2388	2503R	22		30-41-11	ALL
		5	C	W2318	A-FA			30-41-11	ALL
		5	C	W2388	2504B	22		30-41-11	115-199
		6	C	W2318	A-FB			30-41-11	ALL
		6	C	W2388	2504R	22		30-41-11	115-199
		7	C	W2388	0006	20		30-41-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB5000

Page 12

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB5040		MS27212-1-7 (continued)					255/216/R047		ALL
		7	C	W2388	2503Z			30-41-11	001-099
		7	C	W2388	FRAD			30-41-11	115-199
TB5041		MS27212-6-2					239/225/L047		ALL
		1	D	W2364	0032	22		33-14-31	ALL
		1	D	W2364	A-A			33-14-31	ALL
		2	D	W2364	0029	20		33-14-31	ALL
		2	D	W2364	A-B			33-14-31	ALL
TB5042		MS27212-6-2					239/224/R045		ALL
		1	D	W2366	0029	22		33-14-31	ALL
		1	D	W2366	A-A			33-14-31	ALL
		2	D	W2366	0028	20		33-14-31	ALL
		2	D	W2366	A-B			33-14-31	ALL
TB5043		MS27212-6-2					P061-00/ /		ALL
		1	D	W2366	0030	22		33-14-31	ALL
		1	D	W2366	A-C			33-14-31	ALL
		2	D	W2366	0031	20		33-14-31	ALL
		2	D	W2366	A-D			33-14-31	ALL
TB5044		MS27212-1-3					297/261/R005		115-199
		1	C	W2072	0800	20		33-14-51	115-199
		2	C	W2072	0802	20		33-14-51	115-199
TB5047		MS18029-5S2					E006-00/ /		001
TB5047		MS18029-5S3					E006-00/ /		003-099, 115-199
		1	H	W1026	0001	*1		24-31-41	ALL
		2	H	W1002	0001	*1		24-31-41	001-002
		2	R	W1002	0001	*1		24-31-41	115-199
		2	H8	W1002	0005	*1		24-33-12	003-009
		2	H	W1002	0005	*1		24-33-12	010-099
		3	H	W1002	0001	*1		24-31-41	003-099
		3	H8	W1002	0005	*1		24-33-12	001-002
TB5048		MS18029-5S3					E006-00/ /		ALL
		1	H	W1002	0012	*1		24-32-41	001-099
		1	H	W1002	0012	*1		49-41-11	115-199
		2	H3	W2802	0004	*3		49-41-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB5000

Page 13

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB5048		MS18029-5S3 (continued)					E006-00/ /		ALL
		3	H3	W2802	0003	*3		49-41-11	ALL
TB5050		MS27212-1-12					P070-00/ /		ALL
		1	E	W1252	0024	08		24-51-11	ALL
		1	E	W4508	0001	08		24-51-11	ALL
		10	E	W1250	0035	08		24-51-14	115-199
		10	E	W4508	0004	08		24-51-14	115-199
		11	E	W1250	0036	08		24-51-14	115-199
		11	E	W4508	0005	08		24-51-14	115-199
		12	E	W1250	0037	08		24-51-14	115-199
		12	E	W4508	0006	08		24-51-14	115-199
		2	E	W1252	0023	08		24-51-11	ALL
		2	E	W4508	0002	08		24-51-11	ALL
		3	E	W1252	0022	08		24-51-11	ALL
		3	E	W4508	0003	08		24-51-11	ALL
		4	E	W1250	0035	08		24-51-14	001-099
		4	E	W1252	0034	10		25-31-13	115-199
		4	E	W3648	0005	10		25-31-13	115-199
		4	E	W4508	0004	10		24-51-14	001-099
		5	E	W1250	0036	08		24-51-14	001-099
		5	E	W1252	0035	10		25-31-13	115-199
		5	E	W3648	0006	10		25-31-13	115-199
		5	E	W4508	0005	10		24-51-14	001-099
		6	E	W1250	0037	08		24-51-14	001-099
		6	E	W1252	0036	10		25-31-13	115-199
		6	E	W3648	0007	10		25-31-13	115-199
		6	E	W4508	0006	10		24-51-14	001-099
		7	E	W1252	0037	10		25-31-27	115-199
		7	E	W3562	0001	12		25-31-27	115-199
		8	E	W1252	0038	10		25-31-27	115-199
		8	E	W3562	0002	12		25-31-27	115-199
		9	E	W1252	0039	10		25-31-27	115-199
		9	E	W3562	0003	12		25-31-27	115-199
TB5070		MS27212-2-12					P037-00/ /		ALL
		1	E	W1272	0094	10		25-31-13	001-099
		1	BS	W3670	0012	08		25-31-13	001-099
		10	E	W1272	0304	10		25-31-11	115-199
		10	E	W1272	0315	10		25-31-31	001-099
		10	E	W3650	0001	10		25-31-11	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB5000

Page 14

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TB5070		MS27212-2-12 (continued)					P037-00/ /		ALL
		10	BS	W3668	0005	08		25-31-31	001-099
		11	E	W1272	0305	10		25-31-11	115-199
		11	E	W1272	0316	10		25-31-31	001-099
		11	E	W3650	0002	10		25-31-11	115-199
		11	BS	W3668	0006	08		25-31-31	001-099
		12	E	W1272	0306	10		25-31-11	115-199
		12	E	W1272	0317	10		25-31-31	001-099
		12	E	W3650	0003	10		25-31-11	115-199
		12	BS	W3668	0007	08		25-31-31	001-099
		2	E	W1272	0095	10		25-31-13	001-099
		2	BS	W3670	0013	08		25-31-13	001-099
		3	E	W1272	0096	10		25-31-13	001-099
		3	BS	W3670	0014	08		25-31-13	001-099
		4	E	W1272	0060	12		24-51-21	ALL
		4	E	W4510	0001	08		24-51-21	ALL
		5	E	W1272	0061	12		24-51-21	ALL
		5	E	W4510	0002	08		24-51-21	ALL
		6	E	W1272	0062	12		24-51-21	ALL
		6	E	W4510	0003	08		24-51-21	ALL
		7	E	W1272	0003	08		24-51-52	001-099
		7	E	W1272	0301	12		25-31-23	115-199
		7	E	W2022	0001	08		24-51-52	001-099
		7	E	W3662	0001	12		25-31-23	115-199
		7	E	W4510	0017	08		24-51-52	001-099
		8	E	W1272	0002	08		24-51-52	001-099
		8	E	W1272	0302	12		25-31-23	115-199
		8	E	W2022	0002	08		24-51-52	001-099
		8	E	W3662	0002	12		25-31-23	115-199
		8	E	W4510	0018	08		24-51-52	001-099
		9	E	W1272	0001	08		24-51-52	001-099
		9	E	W1272	0303	12		25-31-23	115-199
		9	E	W2022	0003	08		24-51-52	001-099
		9	E	W3662	0003	12		25-31-23	115-199
		9	E	W4510	0019	08		24-51-52	001-099
		CAP	Y	W3660	0001	10		25-31-21	001-099
		CAP	Y	W3660	0002	10		25-31-21	001-099
		CAP	Y	W3660	0003	10		25-31-21	001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TB5000

Page 15 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TS0012		S233T913-1					227/198/L047		ALL
TS0013		S233T913-1					227/198/R047		ALL
TS0028		971-4193-001					1065/185/L003		ALL
TS0035		S253T404-2					1065/ /		ALL
TS0041		625928-2					990/155/L047		ALL
TS0042		625928-2					0975/155/R027		ALL
TS0082		S283T001-15					***/ /		ALL
TS0082		S283T001-10					***/ /		115-199
TS0083		S283T001-15					***/ /		ALL
TS0083		S283T001-10					***/ /		115-199
TS0084		S283T001-15					***/ /		ALL
TS0084		S283T001-10					***/ /		115-199
TS0085		S283T001-15					***/ /		ALL
TS0085		S283T001-10					***/ /		115-199
TS0086		S283T001-15					***/*/		ALL
TS0086		S283T001-10					***/*/		115-199
TS0087		S283T001-15					***/*/		ALL
TS0087		S283T001-10					***/*/		115-199
TS0088		S283T001-15					****/**/		ALL
TS0088		S283T001-10					****/**/		115-199
TS0089		S283T001-15					/ /		ALL
TS0089		S283T001-10					/ /		115-199
TS0090		S271T451-1					1100/145/		ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TS0000

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TS0108		60B92018-56					WS234/WRP/LMS		001-099
TS0108		S345T002-307					WS234/WRP/LMS		115-199
TS0109		S345N001-130					WS236/WRP/LMS		001-099
TS0109		S345T002-311					WS236/WRP/LMS		115-199
TS0110		S345N001-131					WS261/WRP/LMS		001-099
TS0110		S345T002-312					WS261/WRP/LMS		115-199
TS0111		S345N001-132					WS288/WRP/LMS		001-099
TS0111		S345T002-313					WS288/WRP/LMS		115-199
TS0112		S345N001-133					WS316/WRP/LMS		001-099
TS0112		S345T002-314					WS316/WRP/LMS		115-199
TS0113		S345N001-134					WS372/WRP/LMS		001-099
TS0113		S345T002-315					WS372/WRP/LMS		115-199
TS0114		S345N001-134					W0400/WRP/LMS		001-099
TS0114		S345T002-315					W0400/WRP/LMS		115-199
TS0115		S345N001-135					WS428/WRP/LRS		001-099
TS0115		S345T002-316					WS428/WRP/LRS		115-199
TS0116		S345N001-136					WS456/WRP/LFS		001-099
TS0116		S345T002-317					WS456/WRP/LFS		115-199
TS0117		S345N001-137					WS512/WRP/LRS		001-099
TS0117		S345T002-318					WS512/WRP/LRS		115-199
TS0118		S345N001-138					WS540/WRP/LMS		001-099
TS0118		S345T002-319					WS540/WRP/LMS		115-199
TS0119		60B92018-56					WS234/WRP/RMS		001-099
TS0119		S345T002-307					WS234/WRP/RMS		115-199
TS0120		803163-01					0629/190/R058		001-099
TS0120		803163-01					0629/193/R058		115-199
TS0146		S345N001-130					WS236/WRP/RMS		001-099
TS0146		S345T002-311					WS236/WRP/RMS		115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TS0100

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TS0147		S345N001-131					WS261/WRP/RMS		001-099
TS0147		S345T002-312					WS261/WRP/RMS		115-199
TS0148		S345N001-132					WS288/WRP/RRS		001-099
TS0148		S345T002-313					WS288/WRP/RRS		115-199
TS0149		S345N001-133					WS316/WRP/RMS		001-099
TS0149		S345T002-314					WS316/WRP/RMS		115-199
TS0150		S345N001-134					WS372/WRP/RRS		001-099
TS0150		S345T002-315					WS372/WRP/RRS		115-199
TS0151		S345N001-134					WS400/WRP/RMS		001-099
TS0151		S345T002-315					WS400/WRP/RMS		115-199
TS0152		S345N001-135					WS428/WPR/RRS		001-099
TS0152		S345T002-316					WS428/WPR/RRS		115-199
TS0153		S345N001-136					WS456/WRP/RMS		001-099
TS0153		S345T002-317					WS456/WRP/RMS		115-199
TS0154		S345N001-137					WS512/WRP/RRS		001-099
TS0154		S345T002-318					WS512/WRP/RRS		115-199
TS0155		S345N001-138					WS540/WRP/RMS		001-099
TS0155		S345T002-319					WS540/WRP/RMS		115-199
TS0164		2156-204					555/188/L058		ALL
TS0167		60B50402-2					1670/187/		001-099
TS0167		60B50402-2					1674/182/R024		115-199
TS0171		S331T001-5					0210/199/R012		ALL
TS0175		S210T130-75					0350/197/L052		001-099
TS0175		S210T130-19					0350/197/L052		115-199
TS0177		S210T130-75					0860/299/L011		001-099
TS0177		S210T130-19					0860/299/L011		115-199
TS0179		S210T130-75					0880/299/L011		001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TS0100

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TS0179		S210T130-19					0880/299/L011		115-199
TS0184		MS28034-1					0355/198/L054		ALL
TS0185		MS28034-1					0860/299/L011		ALL
TS0186		MS28034-1					880/299/L011		ALL
TS0187		S242T404-701					P007-00/ /		ALL
		BLK		W0010	A-BK			34-22-15	ALL
		BLU		W0010	A-BL			34-22-15	ALL
		ORG		W0010	A-OR			34-22-15	ALL
		RED		W0010	A-RD			34-22-15	ALL
		YEL		W0010	A-YL			34-22-15	ALL
TS0188		S242T404-701					P007-00/ /		ALL
		BLK		W0012	A-BK			34-22-25	ALL
		BLU		W0012	A-BL			34-22-25	ALL
		ORG		W0012	A-OR			34-22-25	ALL
		RED		W0012	A-RD			34-22-25	ALL
		YEL		W0012	A-YL			34-22-25	ALL
TS0194		S251T362-3					FS117RS/ /		ALL
TS0195		S344N001-2					WS682/WRP/LFS		ALL
TS0196		S344N001-2					WS682/LRS/WRP		ALL
TS0198		624014-1					0943/149/L032		ALL
TS0199		624014-1					0943/149/R032		ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TS0100

Page 3 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TS0200		S210T130-75					883/175/L040		001-099
TS0200		S210T130-19					863/189/L009		115-199
TS0201		S210T130-75					883/163/L020		001-099
TS0201		S210T130-19					883/163/L020		115-199
TS0202		S283N001-50					1140/198/L017		ALL
TS0203		S283N001-51					1136/198/L017		ALL
TS0204		S283N001-50					1140/198/R017		ALL
TS0205		S283N001-51					1136/198/R017		ALL
I TS0281		285T0112-6					P001-03/ /		ALL
I TS0281		285T0112-4					P001-03/ /		ALL
		A1	1A	W0101	0059	22		33-16-11	ALL
		A2	1A	W0101	0057	22		33-16-11	ALL
		A3	1A	W0101	0058	22		33-16-11	ALL
		B1	1A	W0101	0047	22		33-16-51	ALL
		B2	1A	W0101	0048	22		33-16-51	ALL
		B3	1A	W0101	0046	22		33-16-51	ALL
TS0285		11198-4					934/158/L054		001-008, 115-199
TS0285		11198-4					925.7/158/45.3		009-099
TS0286		11198-4					938/153/R059		001-008, 115-199
TS0286		11198-4					938/154/R059		009-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TS0200

Page 1 End

Oct 09/2008



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TS0350		MS28034-1					FSS290.5/ /		ALL
TS0351		MS28034-1					FFS290/ /		ALL
TS0352		U-217939					P010-00/ /		115-199
		BLK		W1115	M-BK			31-31-31	115-199
		BLU		W1115	M-BU			31-31-31	115-199
		GRN		W1115	M-GN			31-31-31	115-199
		RED		W1115	M-RD			31-31-31	115-199
		YEL		W1115	M-YL			31-31-31	115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TS0300

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TS5001		102LA2AG					0433/202/R070		ALL
TS5002		MS28034-1					0942/156/R051		ALL
TS5003		MS28034-1					0942/156/L024		ALL
TS5010		60B92018-56					0966/WRP/R073		001-099
TS5010		S345T002-307					0966/WRP/R073		115-199
TS5011		S345N001-144					1007/WRP/L002		001-099
TS5011		S345T002-335					1007/WRP/L002		115-199
TS5012		S345N001-142					0946/WRP/LO75		001-099
TS5012		S345T002-333					0946/WRP/LO75		115-199
TS5013		S345N001-143					1011/WRP/L076		001-099
TS5013		S345T002-334					1011/WRP/L076		115-199
TS5014		S345N001-141					W0200/WRP/LFS		001-099
TS5014		S345T002-332					W0200/WRP/LFS		115-199
TS5015		S345N001-140					WS228/WRP/LMS		001-099
TS5015		S345T002-331					WS228/WRP/LMS		115-199
TS5016		S345N001-142					0946/WRP/R075		001-099
TS5016		S345T002-333					0946/WRP/R075		115-199
TS5017		S345N001-143					1011/WRP/R076		001-099
TS5017		S345T002-334					1011/WRP/R076		115-199
TS5018		285T0177-3					P070-00/ /		115-199
		1		W1250	B-01			21-43-11	115-199
		2		W1250	B-02			21-43-11	115-199
		3		W1250	B-03			21-43-11	115-199
		4		W1250	B-04			21-43-11	115-199
		5		W1250	B-05			21-43-11	115-199
TS5019		L922213					ENG/ /		ALL
TS5020		L930804					ENG/ /		ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TS5000

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TS5021		L962658					ENG/ /		ALL
TS5023		14FF104					ENG/ /		ALL
TS5024		L961747					ENG/ /		ALL
TS5025		L961724					ENG/ /		ALL
TS5027		PARTOFL150901-FFR-					ENG/ /		ALL
TS5028		L970331					ENG/ /		ALL
TS5038		L970331					ENG/ /		ALL
TS5044		285T0177-3					P037-00/ /		115-199
		1		W1270	B-01			21-44-11	115-199
		2		W1270	B-02			21-44-11	115-199
		3		W1270	B-03			21-44-11	115-199
		4		W1270	B-04			21-44-11	115-199
		5		W1270	B-05			21-44-11	115-199
TS5046		S251N403-12					P010-00/ /		ALL
TS5047		S251N403-16					0SS816/ /RLE		ALL
TS5048		S251N403-14					FSS115/ /		ALL
TS5049		S251N403-17					WS583/ /		ALL
TS5050		S251N403-13					1060/183/L020		ALL
TS5051		S251N403-18					WS586/ /RRS		ALL
TS5062		S332T301-19					1945/233/R001		ALL
TS5063		S332T301-39					1932/253/LR18		ALL
TS5064		S332T301-240					PPS165/ /		ALL
TS5065		S332T301-240					PPS165/ /		ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TS5000

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TS5066		S332T301-19					1891/225/R001		ALL
TS5067		S332T301-39					1932/253/LR18		ALL
TS5072		S231N210-2					0231/188/L042		ALL
TS5073		S332T301-240					N165/132/L006		ALL
TS5074		S332T301-240					N165/132/R006		ALL
TS5075		S345N001-141					WS200/WRP/RFS		001-099
TS5075		S345T002-332					WS200/WRP/RFS		115-199
TS5076		S345N001-140					WS228/WRP/RRS		001-099
TS5076		S345T002-331					WS228/WRP/RRS		115-199
TS5081		S251N119-31					332/200/L003		ALL
TS5082		S251N119-31					232/200/R038		ALL
TS5083		S251N403-15					OSS812/ /LLE		ALL
TS5084		S256T007-8					P036-00/ /LFS		ALL
		1		W1260	C-01			27-58-11	ALL
		2		W1260	C-02			27-58-11	ALL
		3		W1260	C-03			27-58-11	ALL
		4		W1260	C-04			27-58-11	ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TS5000

Page 3 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TS5132		624014-1					946/158/L043		ALL
TS5133		625928-2					982/151/L047		ALL
TS5134		624014-1					960/148/R031		ALL
TS5135		625928-2					982/151/R035		ALL
TS5138		S210N701-2					1494/194/R056		115-199
TS5140		57B28A					0265/ /RS		ALL
		= A		W3406	A-01			28-43-11	ALL
		= B		W3406	B-02			28-43-11	ALL
TS5141		51236-003					ENG/ /		ALL
TS5142		51236-003					ENG/ /		001-099
TS5143		51236-001					ENG/ /		ALL
TS5144		51236-001					ENG/ /		ALL
TS5145		51216-001					ENG/ /		ALL
TS5146		51216-001					ENG/ /		ALL
TS5147		51216-002					ENG/ /		ALL
TS5148		51216-002					ENG/ /		ALL
TS5151		S251N222-1					1862/240/R012		ALL
TS5152		S251N222-1					1870/200/R015		ALL
TS5153		S251N222-1					1862/240/R010		ALL
TS5155		S210N701-2					0271/171/R035		ALL
TS5157		S283N001-12					FSS100/ /LFS		ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TS5100

Page 1

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TS5158		S283N001-12					FSS100/ /LFS		ALL
TS5159		S283N001-13					FSS/150/LFS		ALL
TS5160		S283N001-13					FSS/150/LFS		ALL
TS5161		S283N001-16					FSS250/***/		ALL
TS5162		S283N001-16					FSS250/***/		ALL
TS5163		S283N001-15					1030/160/		ALL
TS5164		S283N001-15					1030/160/		ALL
TS5165		S283N001-17					900/155/R015		ALL
TS5166		S283N001-17					900/155/R015		ALL
TS5167		S283N001-18					920/160/L025		ALL
TS5168		S283N001-18					920/160/L035		ALL
TS5169		S283N001-11					1080/190/R007		ALL
TS5170		S283N001-11					1080/190/R007		ALL
TS5171		S283N001-16					1210/198/L045		ALL
TS5172		S283N001-16					1210/198/L045		ALL
TS5173		S283N001-16					1300/198/L045		ALL
TS5174		S283N001-16					1300/198/L045		ALL
TS5175		S283N001-16					1420/198/L045		ALL
TS5176		S283N001-16					1420/198/L045		ALL
TS5177		S283N001-16					1530/198/L045		ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TS5100

Page 2

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TS5178		S283N001-16					1530/198/L045		ALL
TS5179		S283N001-16					1680/198/L030		ALL
TS5180		S283N001-16					1680/198/L030		ALL
TS5181		S283N001-31					1740/220/L020		ALL
TS5182		S283N001-31					1740/220/L020		ALL
TS5183		S283N001-32					1840/230/L020		ALL
TS5184		S283N001-32					1840/230/L020		ALL
TS5185		S283N001-12					FSS100/ /RFS		ALL
TS5186		S283N001-12					FSS100/ /RFS		ALL
TS5187		S283N001-13					FSS150/ /RFS		ALL
TS5188		S283N001-13					FSS150/ /RFS		ALL
TS5189		S283N001-16					FSS250/ /RFS		ALL
TS5190		S283N001-16					FSS250/ /RFS		ALL
TS5191		S283N001-14					970/155/R070		ALL
TS5192		S283N001-14					970/155/R070		ALL
TS5193		270T245-1					1052/188/L050		ALL
TS5194		270T245-1					1198/140/L055		ALL
TS5195		270T245-1					1052/188/R050		ALL
TS5196		S345N001-139					WS591/WRP/LRS		001-099
TS5196		S345T002-320					WS591/WRP/LRS		115-199
TS5197		S345N001-139					WS626/WRP/LFS		001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TS5100

Page 3

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TS5197		S345T002-320					WS626/WRP/LFS		115-199
TS5198		S345N001-139					WS591/WRP/RRS		001-099
TS5198		S345T002-320					WS591/WRP/RRS		115-199
TS5199		S345N001-139					WS626/WRP/RFS		001-099
TS5199		S345T002-320					WS626/WRP/RFS		115-199

TERMINAL STRIP LIST

D280N032

91-21-41

Section TS5100

Page 4 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Fix	Part Number Term	Type	Bundle	Wire No.	GA	Station / WL / BL CO	Diagram	Effectivity
TS5200		S251N233-3					ELEV/170/RS		ALL
TS5201		S251N233-3					ELEV/120/RRS		ALL
TS5202		S251N233-3					ELEV/145/R005		ALL
TS5203		S251N233-4					****/**/		ALL
TS5204		S251N233-4					FS170/RS/		ALL
TS5205		S251N233-4					FS180/RS/		ALL
TS5206		S251N233-3					ELEV/160/LRS		ALL
TS5207		S251N233-3					ELEV/112/LRS		ALL
TS5208		S251N233-3					ELEV/130/LRS		ALL
TS5267		2156-204A					0512/190/L040		ALL
TS5268		2156-204A					0512/190/L040		ALL

TERMINAL STRIP LIST

D280N032

91-21-41

Section TS5200

Page 1 End

Dec 18/2007



757-200 WIRING DIAGRAM MANUAL

Terminal No.	Part Number		Type	Bundle	Wire No.	GA	Station / WL / BL		Diagram	Effectivity
	Fix	Term					CO			
TS5301		S250N104-4					//			001-099
TS5302		S250N104-4					//			001-099
TS5303		S250N104-4					//			001-099

TERMINAL STRIP LIST

D280N032

91-21-41

Section TS5300

Page 1 End

Dec 18/2007