

 **BOEING**
COMPONENT
MAINTENANCE MANUAL

TO: ALL HOLDERS OF FAN DUCT COWL AND THRUST REVERSER ASSEMBLY COMPONENT
MAINTENANCE MANUAL 78-31-47

REVISION NO. 1 DATED MAR 01/04

HIGHLIGHTS

Pages which have been added or revised are outlined below together with the highlights of the revision. Remove and insert the affected pages as listed and enter Revision No. and date on the Record of Revision Sheet.

CHAPTER/SECTION
AND PAGE NO.

TR & SB RECORD

1

1002-1040

DESCRIPTION OF CHANGE

Added new sleeve assembly 315T4500-53 thru -56 per PRR
B13401.

78-31-47

HIGHLIGHTS

01.1

Page 1

Mar 01/04

FAN DUCT COWL AND THRUST REVERSER
END ITEM (PARTS COLLECTOR) (PW)

PART NUMBERS 315T4295-1 THRU -28,
-37SP THRU -44SP,
-57SP THRU -64SP,
-67SP THRU -70SP,
-80SP,-82SP,-83SP,
-85SP

COMPONENT MAINTENANCE MANUAL
WITH
ILLUSTRATED PARTS LIST

78-31-47

TITLE PAGE

Page 1

Mar 01/02

01



REVISION RECORD

- Retain this record in front of manual. On receipt of revision, insert revised pages in the manual, and enter revision number, date inserted and initial.

REVISION NUMBER	REVISION DATE	DATE FILED	BY	REVISION NUMBER	REVISION DATE	DATE FILED	BY

78-31-47

REVISION RECORD

01

Page 1

Mar 01/02

1166744



TEMPORARY REVISION AND SERVICE BULLETIN RECORD

BOEING SERVICE BULLETIN	BOEING TEMPORARY REVISION	OTHER DIRECTIVE	DATE OF INCORPORATION INTO MANUAL
		PRR B13401	MAR 01/04

78-31-47

TR & SB RECORD

01.1

Page 1

Mar 01/04


BOEING
 COMPONENT
 MAINTENANCE MANUAL

PAGE	DATE	CODE	PAGE	DATE	CODE
78-31-47			ILLUSTRATED PARTS LIST		CONT.
TITLE PAGE			*1012	MAR 01/04	01.1
1	MAR 01/02	01	*1013	MAR 01/04	01.1
2	BLANK		*1014	MAR 01/04	01.1
REVISION RECORD			*1015	MAR 01/04	01.1
1	MAR 01/02	01	*1016	MAR 01/04	01.1
2	BLANK		*1017	MAR 01/04	01.1
TR & SB RECORD			*1018	MAR 01/04	01.1
*1	MAR 01/04	01.1	*1019	MAR 01/04	01.1
2	BLANK		*1020	MAR 01/04	01.1
LIST OF EFFECTIVE PAGES			*1021	MAR 01/04	01.1
*1	MAR 01/04	01	*1022	MAR 01/04	01.1
THRU LAST PAGE			*1023	MAR 01/04	01.1
CONTENTS			*1024	MAR 01/04	01.1
1	MAR 01/02	01	*1025	MAR 01/04	01.1
2	BLANK		*1026	MAR 01/04	01.1
INTRODUCTION			*1027	MAR 01/04	01.1
1	MAR 01/02	01	*1028	MAR 01/04	01.1
2	BLANK		*1029	MAR 01/04	01.1
DESCRIPTION & OPERATION			*1030	MAR 01/04	01.1
1	MAR 01/02	01	*1031	MAR 01/04	01.1
2	MAR 01/02	01	*1032	MAR 01/04	01.1
ILLUSTRATED PARTS LIST			*1033	MAR 01/04	01.1
1001	MAR 01/02	01	*1034	MAR 01/04	01.1
*1002	MAR 01/04	01.1	*1035	MAR 01/04	01.1
*1003	MAR 01/04	01.1	*1036	MAR 01/04	01.1
*1004	MAR 01/04	01.1	*1037	MAR 01/04	01.1
*1005	MAR 01/04	01.1	*1038	MAR 01/04	01.1
*1006	MAR 01/04	01.1	*1039	MAR 01/04	01.1
*1007	MAR 01/04	01.1	*1040	MAR 01/04	01.1
*1008	MAR 01/04	01.1			
*1009	MAR 01/04	01.1			
*1010	MAR 01/04	01.1			
*1011	MAR 01/04	01.1			

* = REVISED, ADDED OR DELETED

78-31-47

EFFECTIVE PAGES
 LAST PAGE Page 1
 01 Mar 01/04



TABLE OF CONTENTS

<u>Paragraph Title</u>	<u>Page</u>
Description and Operation	1
Testing and Trouble Shooting	*[1]
Disassembly	*[1]
Cleaning.	*[1]
Check	*[1]
Repair.	*[1]
Assembly.	*[1]
Fits and Clearances	*[1]
Special Tools	*[1]
Illustrated Parts List.	1001

*[1] Not Applicable.

78-31-47

CONTENTS

Page 1

Mar 01/02

01



INTRODUCTION

The instructions in this manual provide the information necessary to perform maintenance functions ranging from simple checks and replacement to complete shop-type repair.

This manual is divided into separate sections:

- | | |
|--|------------------------------|
| 1. Title Page | 4. List of Effective Pages |
| 2. Record of Revisions | 5. Table of Contents |
| 3. Temporary Revision &
Service Bulletin Record | 6. Introduction |
| | 7. Procedures & IPL Sections |

Refer to the Table of Contents for the page location of applicable sections.

The beginning of the REPAIR section includes a list of the separate repairs, a list of applicable standard Boeing practices, and an explanation of the True Position Dimensioning symbols used.

An explanation of the use of the Illustrated Parts List is provided in the Introduction to that section.

All weights and measurements used in the manual are in English units, unless otherwise stated. When metric equivalents are given they will be in parentheses following the English units.

Design changes, optional parts, configuration differences and Service Bulletin modifications create alternate part numbers. These are identified in the Illustrated Parts List (IPL) by adding an alphabetical character to the basic item number. The resulting item number is called an alpha-variant. Throughout the manual, IPL basic item number references also apply to alpha-variants unless otherwise indicated.

78-31-47

INTRODUCTION

01

Page 1

Mar 01/02



FAN DUCT COWL AND THRUST REVERSER ASSEMBLY

DESCRIPTION AND OPERATION

1. Description

- A. This CMM is a parts collector for the 315T4295-XX Pratt and Whitney Fan Duct Cowl and Thrust Reverser End Items.
- B. There are no repairs in this CMM, see the Illustrated Parts List for the correct CMM for the repairs.
- C. The fan duct cowl and thrust reverser assembly consists of a fan duct cowl assembly, a translating sleeve assembly, drag link assemblies, blocker doors, actuator assemblies and actuator tubing.
 - (1) The fan duct cowl assembly has the translating sleeve guides and the inner airflow surfaces. The fan duct cowl assemblies are specified in the 767 CMM 71-11-56 and the CMM 78-31-41.
 - (2) The translating sleeve assembly repairs are specified in 767 CMM 78-31-45.
 - (3) The sleeve assembly, the drag link assemblies, the hold open rods and blocker doors do not have any hydraulic or electrical components. The actuator assemblies are vendor supplied and are hydraulically operated.

2. Operation

- A. The fan duct cowl and thrust reverser assembly are located at the aft end of the engine and have two halves per engine.
- B. The thrust reverser sleeve assembly is stowed in the forward position during flight. When the thrust reverser is activated, hydraulic actuators move the sleeve assembly aft. This moves the blocker doors to block the flow of air between the fan duct cowl assembly and the thrust reverser sleeve assembly and exposes the cascade vanes. The air then flows out through the cascade vanes which direct the air forward creating a reverse thrust.

3. Leading Particulars (approximate)

Length -- 67 inches
Diameter -- 109 inches
Weight -- 735 pounds


78-31-47

DESCRIPTION & OPERATION

01

Page 1

Mar 01/02

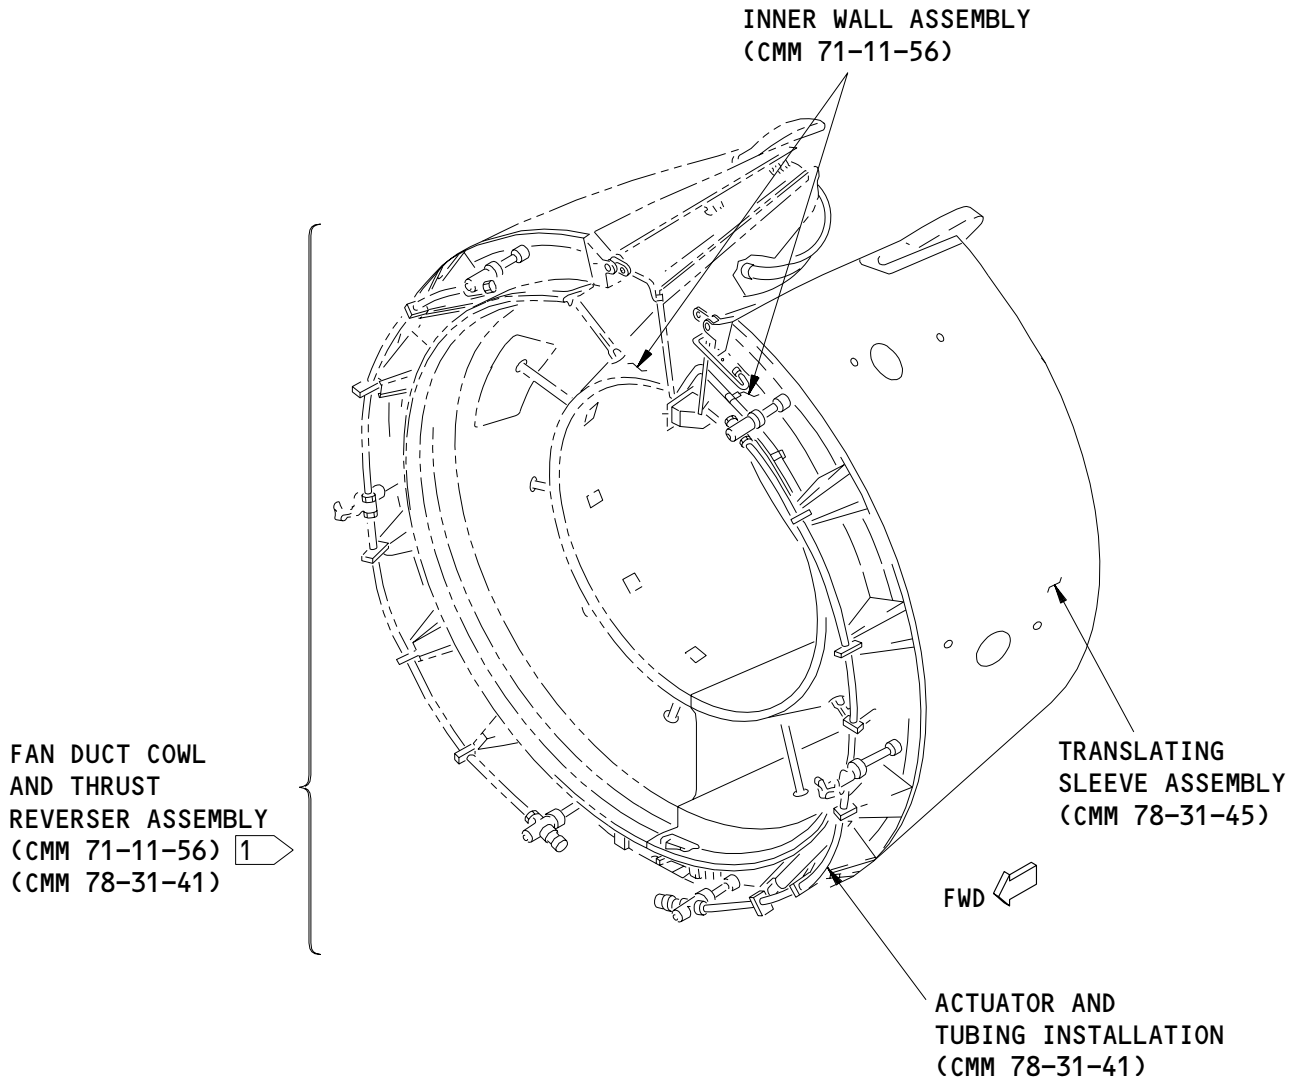

1 FAN DUCT COWL ASSEMBLY WITHOUT THE TRANSLATING SLEEVE

Fan Duct Cowl and Thrust Reverser Assembly End Item Collector
Figure 1

78-31-47

DESCRIPTION & OPERATION

01

Page 2

Mar 01/02

ILLUSTRATED PARTS LIST

1. This section lists and illustrates replaceable or repairable component parts. The Illustrated Parts Catalog contains a complete explanation of the Boeing part numbering system.

2. Indentures show parts relationships as follows:

Assembly

Detail Parts for Assembly

Subassembly

Attaching Parts for Subassembly

Detail Parts for Subassembly

Detail Installation Parts (Included only if installation parts may be returned to shop as part of assembly)

3. One use code letter (A, B, C, etc.) is assigned in the EFF CODE column for each variation of top assembly. All listed parts are used on all top assemblies except when limitations are shown by use code letter opposite individual part entries.

4. Letter suffixes (alpha-variants) are added to item numbers for optional parts, Service Bulletin modification parts, configuration differences (Except left- and right-hand parts), product improvement parts, and parts added between two sequential item numbers. The alpha-variant is not shown on illustrations when appearance and location of all variants of the part is the same.

5. Service Bulletin modifications are shown by the notations PRE SB XXXX and POST SB XXXX.

A. When a new top assembly part number is assigned by Service Bulletin, the notations appear at the top assembly level only. The configuration differences at detail part level are then shown by use code letter.

B. When the top assembly part number is not changed by the Service Bulletin, the notations appear at the detail part level.

6. Parts Interchangeability

Optional
(OPT)

The parts are optional to and interchangeable with other parts having the same item number.

Supersedes, Superseded By
(SUPSDS, SUPSD BY)

The part supersedes and is not interchangeable with the original part.

Replaces, Replaced By
(REPLS, REPLD BY)

The part replaces and is interchangeable with, or is an alternate to, the original part.

78-31-47

ILLUSTRATED PARTS LIST

01

Page 1001

Mar 01/02

PART NUMBER	AIRLINE PART NO.	FIG.	ITEM	TTL REQ
315T3124-17		2	20	1
315T3124-18		2	25	1
315T3124-27		2	20A	1
315T3124-28		2	25A	1
315T3124-29		2	20B	1
315T3124-30		2	25B	1
315T3126-43		2	30	1
315T3126-45		2	30A	1
315T3126-54		2	30B	1
315T3126-56		2	30C	1
315T3128-33		2	35	1
315T3128-43		2	35A	1
315T3128-45		2	35B	1
315T3154-59		2	40	1
315T3154-60		2	45	1
315T3154-61		1	40	1
315T3154-62		1	45	1
315T3154-71		2	40A	1
315T3154-72		2	45A	1
315T3154-73		2	40B	1
315T3154-74		2	45B	1
315T3154-83		2	50	1
315T3154-84		2	55	1
315T3154-85		2	50A	1
315T3154-86		2	55A	1
315T3156-17		2	60	1
315T3156-18		2	65	1
315T3156-31		2	60A	1
315T3156-32		2	65A	1
315T3156-33		2	60B	1
315T3156-34		2	65B	1
315T3202-265		2	70	1
315T3202-266		2	75	1
315T3202-267		2	70A	1
315T3202-268		2	75A	1
315T3202-277		2	70B	1
315T3202-278		2	75B	1
315T3202-279		2	70C	1
315T3202-280		2	75C	1
315T3202-289		2	70E	1
315T3202-290		2	75E	1
315T3202-291		2	70H	1
315T3202-292		2	75G	1
315T3202-301		2	70F	1
315T3202-303		2	70J	1

78-31-47

 ILLUSTRATED PARTS LIST
 01.1 Page 1002
 Mar 01/04


BOEING
 COMPONENT
 MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NO.	FIG.	ITEM	TTL REQ
315T3204-21		2	80	1
315T3204-22		2	85	1
315T3204-31		2	80A	1
315T3204-32		2	85A	1
315T3204-33		2	80B	1
315T3204-34		2	85B	1
315T3208-11		2	90	1
315T3208-12		2	95	1
315T3208-27		2	90A	1
315T3208-28		2	95A	1
315T3208-29		2	90B	1
315T3208-30		2	95B	1
315T3240-10		2	105	1
315T3240-25		2	100A	1
315T3240-26		2	105A	1
315T3240-27		2	100B	1
315T3240-28		2	105B	1
315T3240-9		2	100	1
315T3305-203		2	110	1
315T3305-204		2	115	1
315T3305-205		2	110A	1
315T3305-206		2	115A	1
315T3305-207		2	110B	1
315T3305-208		2	115B	1
315T3307-79		2	120	1
315T3307-80		2	125	1
315T3307-81		2	120A	1
315T3307-82		2	125A	1
315T3307-83		2	120B	1
315T3307-84		2	125B	1
315T3318-273		2	130	1
315T3318-274		2	135	1
315T3318-285		2	130A	1
315T3318-286		2	135A	1
315T3318-287		2	130B	1
315T3318-288		2	135B	1
315T3416-42		2	140	1
315T3416-50		2	140A	1
315T3416-52		2	140B	1
315T3416-64		2	140C	1
315T3416-66		2	140D	1
315T3501-35		2	145	1
315T3501-36		2	150	1
315T3501-47		2	145A	1
315T3501-48		2	150A	1

78-31-47

 ILLUSTRATED PARTS LIST
 01.1 Page 1003
 Mar 01/04

PART NUMBER	AIRLINE PART NO.	FIG.	ITEM	TTL REQ
315T3501-49		2	145B	1
315T3501-50		2	150B	1
315T3578-1		2	155	1
315T3578-12		2	155A	1
315T3578-14		2	155B	1
315T3601-10		1	55	1
315T3601-11		1	50A	1
315T3601-12		1	55A	1
315T3601-21		2	160A	1
315T3601-22		2	165A	1
315T3601-23		2	160B	1
315T3601-24		2	165B	1
315T3601-41		2	170	1
315T3601-42		2	175	1
315T3601-43		2	170A	1
315T3601-44		2	175A	1
315T3601-45		2	170B	1
315T3601-46		2	175B	1
315T3601-47		2	170C	1
315T3601-48		2	175C	1
315T3601-7		2	160	1
315T3601-8		2	165	1
315T3601-9		1	50	1
315T3602-19		2	180	1
315T3602-20		2	185	1
315T3602-31		2	180A	1
315T3602-32		2	185A	1
315T3602-33		2	180B	1
315T3602-34		2	185B	1
315T3602-45		2	180C	1
315T3602-46		2	185C	1
315T3602-47		2	180D	1
315T3602-48		2	185D	1
315T3605-10		2	195B	1
315T3605-5		2	190	1
315T3605-6		2	195	1
315T3605-7		2	190A	1
315T3605-8		2	195A	1
315T3605-9		2	190B	1
315T3633-171		2	200	1
315T3633-172		2	205	1
315T3633-181		2	200A	1
315T3633-182		2	205A	1
315T3633-183		2	200B	1
315T3633-184		2	205B	1

78-31-47

 ILLUSTRATED PARTS LIST
 01.1 Page 1004
 Mar 01/04


BOEING
 COMPONENT
 MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NO.	FIG.	ITEM	TTL REQ
315T3655-11		1	60	1
315T3655-12		1	65	1
315T3655-15		2	210	1
315T3655-16		2	215	1
315T3655-17		2	210A	1
315T3655-18		2	215A	1
315T3703-17		2	220	1
315T3703-18		2	225	1
315T3703-27		2	220A	1
315T3703-28		2	225A	1
315T3703-29		2	220B	1
315T3703-30		2	225B	1
315T4013-115		2	230	1
315T4013-116		2	235	1
315T4013-117		2	230A	1
315T4013-118		2	235A	1
315T4013-123		2	230B	1
315T4013-124		2	235B	1
315T4013-125		2	230C	1
315T4013-126		2	235C	1
315T4013-135		2	230D	1
315T4013-136		2	235D	1
315T4013-137		2	230E	1
315T4013-138		2	235E	1
315T4013-154		2	235F	1
315T4013-156		2	235G	1
315T4013-165		2	230F	1
315T4013-167		2	230G	1
315T4013-185		2	230H	1
315T4013-186		2	235H	1
315T4013-187		2	230J	1
315T4013-188		2	235J	1
315T4014-163		2	240	1
315T4014-164		2	245	1
315T4014-207		2	240A	1
315T4014-208		2	245A	1
315T4014-209		2	240B	1
315T4014-210		2	245B	1
315T4102-1		2	250	1
315T4102-16		2	250A	1
315T4102-18		2	250B	1
315T4295-1SP		1	1L	RF
		1	20	1
		2	1A	RF
315T4295-10SP		1	5A	RF

78-31-47

 ILLUSTRATED PARTS LIST
 01.1 Page 1005
 Mar 01/04

PART NUMBER	AIRLINE PART NO.	FIG.	ITEM	TTL REQ
315T4295-11SP		1	10A	RF
315T4295-12SP		1	15A	RF
315T4295-13SP		1	1M	RF
		1	20A	1
		2	1B	RF
315T4295-14SP		1	5L	RF
		1	25A	1
		2	5A	RF
315T4295-15SP		1	10L	RF
		1	30A	1
		2	10A	RF
315T4295-16SP		1	15L	RF
		1	35A	1
		2	15A	RF
315T4295-17SP		1	1C	RF
315T4295-18SP		1	5B	RF
315T4295-19SP		1	10B	RF
315T4295-2SP		1	5K	RF
		1	25	1
		2	5	RF
315T4295-20SP		1	15B	RF
315T4295-21SP		1	1D	RF
315T4295-22SP		1	5C	RF
315T4295-23SP		1	10C	RF
315T4295-24SP		1	15C	RF
315T4295-25SP		1	1N	RF
		1	20B	1
		2	1C	RF
315T4295-26SP		1	5M	RF
		1	25B	1
		2	5B	RF
315T4295-27SP		1	10M	RF
		1	30B	1
		2	10B	RF
315T4295-28SP		1	15M	RF
		1	35B	1
		2	15B	RF
315T4295-3SP		1	10K	RF
		1	30	1
		2	10	RF
315T4295-37SP		1	1E	RF
315T4295-38SP		1	5D	RF
315T4295-39SP		1	10D	RF
315T4295-4SP		1	15K	RF
		1	35	1
		2	15	RF

78-31-47

 ILLUSTRATED PARTS LIST
 01.1 Page 1006
 Mar 01/04


BOEING
 COMPONENT
 MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NO.	FIG.	ITEM	TTL REQ
315T4295-40SP		1	15D	RF
315T4295-41SP		1	1F	RF
315T4295-42SP		1	5E	RF
315T4295-43SP		1	10E	RF
315T4295-44SP		1	15E	RF
315T4295-5SP		1	1A	RF
315T4295-57SP		1	1G	RF
		2	1D	RF
315T4295-58SP		1	5F	RF
		2	5C	RF
315T4295-59SP		1	10F	RF
		2	10C	RF
315T4295-6SP		1	5	RF
315T4295-60SP		1	15F	RF
		2	15C	RF
315T4295-61SP		1	1H	RF
		2	1E	RF
315T4295-62SP		1	5G	RF
		2	5D	RF
315T4295-63SP		1	10G	RF
		2	10D	RF
315T4295-64SP		1	15G	RF
		2	15D	RF
315T4295-67SP		1	1J	RF
		2	1F	RF
315T4295-68SP		1	5H	RF
		2	5E	RF
315T4295-69SP		1	10H	RF
		2	10E	RF
315T4295-7SP		1	10	RF
315T4295-70SP		1	15H	RF
		2	15E	RF
315T4295-8SP		1	15	RF
315T4295-80SP		1	5J	RF
		2	5F	RF
315T4295-82SP		1	15J	RF
		2	15F	RF
315T4295-83SP		1	1K	RF
		2	1G	RF
315T4295-85SP		1	10J	RF
315T4295-85SP		2	10F	RF
315T4295-9SP		1	1B	RF
315T4300-31		2	255	1
315T4300-32		2	260	1
315T4300-41		2	255A	1
315T4300-42		2	260A	1
315T4300-43		2	255D	1

78-31-47

 ILLUSTRATED PARTS LIST
 01.1 Page 1007
 Mar 01/04

PART NUMBER	AIRLINE PART NO.	FIG.	ITEM	TTL REQ
315T4300-44		2	260D	1
315T4300-53		2	255C	1
315T4300-54		2	260C	1
315T4300-55		2	255F	1
315T4300-56		2	260F	1
315T4301-59		2	265	1
315T4301-60		2	270	1
315T4301-71		2	265A	1
315T4301-72		2	270A	1
315T4301-73		2	265B	1
315T4301-74		2	270B	1
315T4400-121		2	275	1
315T4400-128		2	280	1
315T4400-131		2	275A	1
315T4400-132		2	280A	1
315T4400-133		2	275B	1
315T4400-134		2	280B	1
315T4400-143		2	275D	1
315T4400-145		2	275F	1
315T4500-13		2	285	1
315T4500-14		2	290	1
315T4500-15		2	285A	1
315T4500-16		2	290A	1
315T4500-17		2	285B	1
315T4500-18		2	290B	1
315T4500-29		2	285C	1
315T4500-30		2	290C	1
315T4500-31		2	285D	1
315T4500-32		2	290D	1
315T4500-41		2	285E	1
315T4500-42		2	290E	1
315T4500-43		2	285F	1
315T4500-44		2	290F	1
315T4500-53		2	285G	1
315T4500-54		2	290G	1
315T4500-55		2	285H	1
315T4500-56		2	290H	1
315T4579-10		2	300	1
315T4579-11		2	305	1
315T4579-12		2	310	1
315T4579-17		2	295A	1
315T4579-18		2	300A	1
315T4579-19		2	305A	1
315T4579-20		2	310A	1
315T4579-39		2	295B	1

78-31-47

 ILLUSTRATED PARTS LIST
 01.1 Page 1008
 Mar 01/04


BOEING
 COMPONENT
 MAINTENANCE MANUAL

PART NUMBER	AIRLINE PART NO.	FIG.	ITEM	TTL REQ
315T4579-40		2	300B	1
315T4579-41		2	295C	1
315T4579-42		2	300C	1
315T4579-43		2	305B	1
315T4579-44		2	310B	1
315T4579-45		2	305C	1
315T4579-46		2	310C	1
315T4579-9		2	295	1
315T4705-1		2	315	1
315T4705-2		2	315C	1
315T4705-53		2	320	1
315T4705-54		2	325	1
315T4705-73		2	315A	1
315T4705-74		2	315D	1
315T4705-75		2	315B	1
315T4705-76		2	315E	1
315T4705-77		2	320A	1
315T4705-78		2	325A	1
315T4705-79		2	320B	1
315T4705-80		2	325B	1
315U4100-23		2	330	1
315U4100-24		2	335	1
315U4100-35		2	330A	1
315U4100-36		2	335A	1
315U4100-37		2	330B	1
315U4100-38		2	335B	1
332T4713-10		2	340	1
332T4713-11		2	340A	1
332T4713-22		2	340B	1
332T4713-24		2	340C	1

78-31-47

 ILLUSTRATED PARTS LIST
 01.1 Page 1009
 Mar 01/04

FIG. & ITEM	PART NO.	AIRLINE PART NUMBER	NOMENCLATURE 1234567	EFF CODE	QTY PER ASSY
01-			FAN DUCT COWL AND THRUST REVERSER ASSY, END ITEM COLLECTOR		
-1A	315T4295-5SP		COWL ASSY-FAN DUCT COWL AND THRUST REVERSER, END ITEM, MANUAL OPENING	A	RF
-1B	315T4295-9SP		COWL ASSY-FAN DUCT COWL AND THRUST REVERSER, END ITEM, POWER OPENING	B	RF
-1C	315T4295-17SP		COWL ASSY-FAN DUCT COWL AND THRUST REVERSER, END ITEM, MANUAL OPENING	C	RF
-1D	315T4295-21SP		COWL ASSY-FAN DUCT COWL AND THRUST REVERSER, END ITEM, POWER OPENING	D	RF
-1E	315T4295-37SP		COWL ASSY-FAN DUCT COWL AND THRUST REVERSER, END ITEM, MANUAL OPENING	E	RF
-1F	315T4295-41SP		COWL ASSY-FAN DUCT COWL AND THRUST REVERSER, END ITEM, POWER OPENING	F	RF
-1G	315T4295-57SP		COWL ASSY-FAN DUCT (FOR DETAILS SEE FIG. 2)	G	RF
-1H	315T4295-61SP		COWL ASSY-FAN DUCT (FOR DETAILS SEE FIG. 2)	H	RF
-1J	315T4295-67SP		COWL ASSY-FAN DUCT (FOR DETAILS SEE FIG. 2)	J	RF
-1K	315T4295-83SP		COWL ASSY-FAN DUCT (FOR DETAILS SEE FIG. 2)	K	RF
-1L	315T4295-1SP		COWL INSTL-FAN DUCT COWL AND THRUST REVERSER, END ITEM, COMMON (FOR DETAILS SEE FIG. 2)	AS	RF
-1M	315T4295-13SP		COWL ASSY-FAN DUCT COWL AND THRUST REVERSER, END ITEM, COMMON (FOR DETAILS SEE FIG. 2)	AT	RF
-1N	315T4295-25SP		COWL ASSY-FAN DUCT COWL AND THRUST REVERSER, END ITEM, COMMON (FOR DETAILS SEE FIG. 2)	AT	RF
-5	315T4295-6SP		COWL ASSY-FAN DUCT COWL AND THRUST REVERSER, END ITEM, MANUAL OPENING	L	RF

78-31-47

 ILLUSTRATED PARTS LIST
 01.1 Page 1010
 Mar 01/04


BOEING
 COMPONENT
 MAINTENANCE MANUAL

FIG. & ITEM	PART NO.	AIRLINE PART NUMBER	NOMENCLATURE 1234567	EFF CODE	QTY PER ASSY
01- -5A	315T4295-10SP		COWL ASSY-FAN DUCT COWL AND THRUST REVERSER, END ITEM, POWER OPENING	M	RF
-5B	315T4295-18SP		COWL ASSY-FAN DUCT COWL AND THRUST REVERSER, END ITEM, MANUAL OPENING	N	RF
-5C	315T4295-22SP		COWL ASSY-FAN DUCT COWL AND THRUST REVERSER, END ITEM, POWER OPENING	P	RF
-5D	315T4295-38SP		COWL ASSY-FAN DUCT COWL AND THRUST REVERSER, END ITEM, MANUAL OPENING	Q	RF
-5E	315T4295-42SP		COWL ASSY-FAN DUCT COWL AND THRUST REVERSER, END ITEM, POWER OPENING	R	RF
-5F	315T4295-58SP		COWL ASSY-FAN DUCT (FOR DETAILS SEE FIG. 2)	S	RF
-5G	315T4295-62SP		COWL ASSY-FAN DUCT (FOR DETAILS SEE FIG. 2)	T	RF
-5H	315T4295-68SP		COWL ASSY-FAN DUCT (FOR DETAILS SEE FIG. 2)	U	RF
-5J	315T4295-80SP		COWL ASSY-FAN DUCT (FOR DETAILS SEE FIG. 2)	V	RF
-5K	315T4295-2SP		COWL INSTL-FAN DUCT COWL AND THRUST REVERSER, END ITEM, COMMON (FOR DETAILS SEE FIG. 2)	AV	RF
-5L	315T4295-14SP		COWL ASSY-FAN DUCT COWL AND THRUST REVERSER, END ITEM, COMMON (FOR DETAILS SEE FIG. 2)	AW	RF
-5M	315T4295-26SP		COWL ASSY-FAN DUCT COWL AND THRUST REVERSER, END ITEM, COMMON (FOR DETAILS SEE FIG. 2)	AX	RF
-10	315T4295-7SP		COWL ASSY-FAN DUCT COWL AND THRUST REVERSER, END ITEM, MANUAL OPENING	W	RF
-10A	315T4295-11SP		COWL ASSY-FAN DUCT COWL AND THRUST REVERSER, END ITEM, POWER OPENING	X	RF
-10B	315T4295-19SP		COWL ASSY-FAN DUCT COWL AND THRUST REVERSER, END ITEM, MANUAL OPENING	Y	RF

78-31-47

 ILLUSTRATED PARTS LIST
 01.1 Page 1011
 Mar 01/04

FIG. & ITEM	PART NO.	AIRLINE PART NUMBER	NOMENCLATURE 1234567	EFF CODE	QTY PER ASSY
01- -10C	315T4295-23SP		COWL ASSY-FAN DUCT COWL AND THRUST REVERSER, END ITEM, POWER OPENING	Z	RF
-10D	315T4295-39SP		COWL ASSY-FAN DUCT COWL AND THRUST REVERSER, END ITEM, MANUAL OPENING	AA	RF
-10E	315T4295-43SP		COWL ASSY-FAN DUCT COWL AND THRUST REVERSER, END ITEM, POWER OPENING	AB	RF
-10F	315T4295-59SP		COWL ASSY-FAN DUCT (FOR DETAILS SEE FIG. 2)	AC	RF
-10G	315T4295-63SP		COWL ASSY-FAN DUCT (FOR DETAILS SEE FIG. 2)	AD	RF
-10H	315T4295-69SP		COWL ASSY-FAN DUCT (FOR DETAILS SEE FIG. 2)	AE	RF
-10J	315T4295-85SP		COWL ASSY-FAN DUCT (FOR DETAILS SEE FIG. 2)	AF	RF
-10K	315T4295-3SP		COWL INSTL-FAN DUCT COWL AND THRUST REVERSER, END ITEM, COMMON (FOR DETAILS SEE FIG. 2)	AY	RF
-10L	315T4295-15SP		COWL ASSY-FAN DUCT COWL AND THRUST REVERSER, END ITEM, COMMON (FOR DETAILS SEE FIG. 2)	AZ	RF
-10M	315T4295-27SP		COWL ASSY-FAN DUCT COWL AND THRUST REVERSER, END ITEM, COMMON (FOR DETAILS SEE FIG. 2)	BA	RF
-15	315T4295-8SP		COWL ASSY-FAN DUCT COWL AND THRUST REVERSER, END ITEM, MANUAL OPENING	AG	RF
-15A	315T4295-12SP		COWL ASSY-FAN DUCT COWL AND THRUST REVERSER, END ITEM, POWER OPENING	AH	RF
-15B	315T4295-20SP		COWL ASSY-FAN DUCT COWL AND THRUST REVERSER, END ITEM, MANUAL OPENING	AJ	RF
-15C	315T4295-24SP		COWL ASSY-FAN DUCT COWL AND THRUST REVERSER, END ITEM, POWER OPENING	AK	RF
-15D	315T4295-40SP		COWL ASSY-FAN DUCT COWL AND THRUST REVERSER, END ITEM, MANUAL OPENING	AL	RF

78-31-47

 ILLUSTRATED PARTS LIST
 01.1 Page 1012
 Mar 01/04


BOEING
 COMPONENT
 MAINTENANCE MANUAL

FIG. & ITEM	PART NO.	AIRLINE PART NUMBER	NOMENCLATURE 1234567	EFF CODE	QTY PER ASSY
01- -15E	315T4295-44SP		COWL ASSY-FAN DUCT COWL AND THRUST REVERSER, END ITEM, POWER OPENING	AM	RF
-15F	315T4295-60SP		COWL ASSY-FAN DUCT (FOR DETAILS SEE FIG. 2)	AN	RF
-15G	315T4295-64SP		COWL ASSY-FAN DUCT (FOR DETAILS SEE FIG. 2)	AP	RF
-15H	315T4295-70SP		COWL ASSY-FAN DUCT (FOR DETAILS SEE FIG. 2)	AQ	RF
-15J	315T4295-82SP		COWL ASSY-FAN DUCT (FOR DETAILS SEE FIG. 2)	AR	RF
-15K	315T4295-4SP		COWL INSTL-FAN DUCT COWL AND THRUST REVERSER, END ITEM, COMMON (FOR DETAILS SEE FIG. 2)	BB	RF
-15L	315T4295-16SP		COWL ASSY-FAN DUCT COWL AND THRUST REVERSER, END ITEM, COMMON (FOR DETAILS SEE FIG. 2)	BC	RF
-15M	315T4295-28SP		COWL ASSY-FAN DUCT COWL AND THRUST REVERSER, END ITEM, COMMON (FOR DETAILS SEE FIG. 2)	BD	RF
-20	315T4295-1SP		.COWL INSTL-FAN DUCT COWL AND THRUST REVERSER, END ITEM, COMMON (FOR DETAILS SEE FIG. 2)	A,B	1
-20A	315T4295-13SP		.COWL ASSY-FAN DUCT COWL AND THRUST REVERSER, END ITEM, COMMON (FOR DETAILS SEE FIG. 2)	C,D	1
-20B	315T4295-25SP		.COWL ASSY-FAN DUCT COWL AND THRUST REVERSER, END ITEM, COMMON (FOR DETAILS SEE FIG. 2)	E,F	1
-25	315T4295-2SP		.COWL INSTL-FAN DUCT COWL AND THRUST REVERSER, END ITEM, COMMON (FOR DETAILS SEE FIG. 2)	L,M	1
-25A	315T4295-14SP		.COWL ASSY-FAN DUCT COWL AND THRUST REVERSER, END ITEM, COMMON (FOR DETAILS SEE FIG. 2)	N,P	1

78-31-47

 ILLUSTRATED PARTS LIST
 01.1 Page 1013
 Mar 01/04

FIG. & ITEM	PART NO.	AIRLINE PART NUMBER	NOMENCLATURE 1234567	EFF CODE	QTY PER ASSY
01- -25B	315T4295-26SP		.COWL ASSY-FAN DUCT COWL AND THRUST REVERSER, END ITEM, COMMON (FOR DETAILS SEE FIG. 2)	Q,R	1
-30	315T4295-3SP		.COWL INSTL-FAN DUCT COWL AND THRUST REVERSER, END ITEM, COMMON (FOR DETAILS SEE FIG. 2)	W,X	1
-30A	315T4295-15SP		.COWL ASSY-FAN DUCT COWL AND THRUST REVERSER, END ITEM, COMMON (FOR DETAILS SEE FIG. 2)	Y,Z	1
-30B	315T4295-27SP		.COWL ASSY-FAN DUCT COWL AND THRUST REVERSER, END ITEM, COMMON (FOR DETAILS SEE FIG. 2)	AA,AB	1
-35	315T4295-4SP		.COWL INSTL-FAN DUCT COWL AND THRUST REVERSER, END ITEM, COMMON (FOR DETAILS SEE FIG. 2)	AG,AH	1
-35A	315T4295-16SP		.COWL ASSY-FAN DUCT COWL AND THRUST REVERSER, END ITEM, COMMON (FOR DETAILS SEE FIG. 2)	AJ,AK	1
-35B	315T4295-28SP		.COWL ASSY-FAN DUCT COWL AND THRUST REVERSER, END ITEM, COMMON (FOR DETAILS SEE FIG. 2)	AG,AM	1
-40	315T3154-61		.TUBE INSTL-OPENING ACTR (FOR BREAKDOWN SEE CMM 78-31-41)	A,C,E W,Y, AA	1
-45	315T3154-62		.TUBE INSTL-OPENING ACTR (FOR BREAKDOWN SEE CMM 78-31-41)	L,N,Q AG,A J,AL	1

78-31-47

 ILLUSTRATED PARTS LIST
 01.1 Page 1014
 Mar 01/04


BOEING
 COMPONENT
 MAINTENANCE MANUAL

FIG. & ITEM	PART NO.	AIRLINE PART NUMBER	NOMENCLATURE 1234567	EFF CODE	QTY PER ASSY
01- -50	315T3601-9		.WIRE BUNDLE INSTL- (FOR BREAKDOWN SEE CMM 78-31-41)	A,C,E ,W,Y, AA	1
-50A	315T3601-11		.WIRE BUNDLE INSTL- (FOR BREAKDOWN SEE CMM 78-31-41)	B,D,F ,X,Z, AB	1
-55	315T3601-10		.WIRE BUNDLE INSTL- (FOR BREAKDOWN SEE CMM 78-31-41)	L,N,Q ,AG,A J,AL	1
-55A	315T3601-12		.WIRE BUNDLE INSTL- (FOR BREAKDOWN SEE CMM 78-31-41)	M,P,R ,AH,A K,AM	1
-60	315T3655-11		.SWITCH INSTL-ACTR (FOR BREAKDOWN SEE CMM 78-31-41)	B,D,F ,X,Z, AB	1
-65	315T3655-12		.SWITCH INSTL-ACTR (FOR BREAKDOWN SEE CMM 78-31-41)	L,N,Q ,AG,A J,AL	1

- Item Not Illustrated

78-31-47

ILLUSTRATED PARTS LIST
 01.1 Page 1015
 Mar 01/04

FIG. & ITEM	PART NO.	AIRLINE PART NUMBER	NOMENCLATURE 1234567	EFF CODE	QTY PER ASSY
02- -1A	315T4295-1SP		COWL INSTL-FAN DUCT COWL AND THRUST REVERSER, END ITEM, COMMON	A,B,A S	RF
-1B	315T4295-13SP		COWL ASSY-FAN DUCT COWL AND THRUST REVERSER, END ITEM, COMMON	C,D,A T	RF
-1C	315T4295-25SP		COWL ASSY-FAN DUCT COWL AND THRUST REVERSER, END ITEM, COMMON	E,F,A U	RF
-1D	315T4295-57SP		COWL ASSY-FAN DUCT	G	RF
-1E	315T4295-61SP		COWL ASSY-FAN DUCT	H	RF
-1F	315T4295-67SP		COWL ASSY-FAN DUCT	J	RF
-1G	315T4295-83SP		COWL ASSY-FAN DUCT	K	RF
-5	315T4295-2SP		COWL INSTL-FAN DUCT COWL AND THRUST REVERSER, END ITEM, COMMON	L,M,A V	RF
-5A	315T4295-14SP		COWL ASSY-FAN DUCT COWL AND THRUST REVERSER, END ITEM, COMMON	N,P,A W	RF
-5B	315T4295-26SP		COWL ASSY-FAN DUCT COWL AND THRUST REVERSER, END ITEM, COMMON	Q,R,A X	RF
-5C	315T4295-58SP		COWL ASSY-FAN DUCT	S	RF
-5D	315T4295-62SP		COWL ASSY-FAN DUCT	T	RF
-5E	315T4295-68SP		COWL ASSY-FAN DUCT	U	RF
-5F	315T4295-80SP		COWL ASSY-FAN DUCT	V	RF
-10	315T4295-3SP		COWL INSTL-FAN DUCT COWL AND THRUST REVERSER, END ITEM, COMMON	W,X,A Y	RF
-10A	315T4295-15SP		COWL ASSY-FAN DUCT COWL AND THRUST REVERSER, END ITEM, COMMON	Y,Z,A Z	RF
-10B	315T4295-27SP		COWL ASSY-FAN DUCT COWL AND THRUST REVERSER, END ITEM, COMMON	AA,AB ,BA	RF
-10C	315T4295-59SP		COWL ASSY-FAN DUCT	AC	RF
-10D	315T4295-63SP		COWL ASSY-FAN DUCT	AD	RF
-10E	315T4295-69SP		COWL ASSY-FAN DUCT	AE	RF
-10F	315T4295-85SP		COWL ASSY-FAN DUCT	AF	RF
-15	315T4295-4SP		COWL INSTL-FAN DUCT COWL AND THRUST REVERSER, END ITEM, COMMON	AG,AH ,BB	RF
-15A	315T4295-16SP		COWL ASSY-FAN DUCT COWL AND THRUST REVERSER, END ITEM, COMMON	AJ,AK ,BC	RF

78-31-47

 ILLUSTRATED PARTS LIST
 01.1 Page 1016
 Mar 01/04


BOEING
 COMPONENT
 MAINTENANCE MANUAL

FIG. & ITEM	PART NO.	AIRLINE PART NUMBER	NOMENCLATURE 1234567	EFF CODE	QTY PER ASSY
02- -15B	315T4295-28SP		COWL ASSY-FAN DUCT COWL AND THRUST REVERSER, END ITEM, COMMON	AL,AM ,BD	RF
-15C	315T4295-60SP		COWL ASSY-FAN DUCT	AN	RF
-15D	315T4295-64SP		COWL ASSY-FAN DUCT	AP	RF
-15E	315T4295-70SP		COWL ASSY-FAN DUCT	AQ	RF
-15F	315T4295-82SP		COWL ASSY-FAN DUCT	AR	RF
-20	315T3124-17		.DUCT INSTL-EXH (FOR BREAKDOWN SEE CMM 71-11-56)	A-F, W-AB, AS-AU ,AY- BA	1
-20A	315T3124-27		.DUCT INSTL-EXH (FOR BREAKDOWN SEE CMM 71-11-56)	G-K	1
-20B	315T3124-29		.DUCT INSTL-EXH (FOR BREAKDOWN SEE CMM 71-11-56)	AC-AF	1
-25	315T3124-18		.DUCT INSTL-EXH (FOR BREAKDOWN SEE CMM 71-11-56)	L-R,A G-AM, AV-AX ,BB-B D	1
-25A	315T3124-28		.DUCT INSTL-EXH (FOR BREAKDOWN SEE CMM 71-11-56)	S-V	1
-25B	315T3124-30		.DUCT INSTL-EXH (FOR BREAKDOWN SEE CMM 71-11-56)	AN-AR	1
-30	315T3126-43		.DUCT INSTL-INLET, PRECOOLER (FOR BREAKDOWN SEE CMM 71-11-56)	L-P,A G-AK, AV,AW ,BB,B C	1
-30A	315T3126-45		.DUCT INSTL-INLET, PRECOOLER (FOR BREAKDOWN SEE CMM 71-11-56)	Q,R,A L,AM, AX,BD	1
-30B	315T3126-54		.DUCT INSTL-INLET, PRECOOLER (FOR BREAKDOWN SEE CMM 71-11-56)	S-V	1

78-31-47

 ILLUSTRATED PARTS LIST
 01.1 Page 1017
 Mar 01/04

FIG. & ITEM	PART NO.	AIRLINE PART NUMBER	NOMENCLATURE 1234567	EFF CODE	QTY PER ASSY
02- -30C	315T3126-56		. DUCT INSTL-INLET, PRECOOLER (FOR BREAKDOWN SEE CMM 71-11-56)	AN-AR	1
-35	315T3128-33		. SYSTEM INSTL-ZONE VENTILATION (FOR BREAKDOWN SEE CMM 71-11-56)	A-G, W-AB, AS-AU ,AY- BA	1
-35A	315T3128-43		. SYSTEM INSTL-ZONE VENTILATION (FOR BREAKDOWN SEE CMM 71-11-56)	G-K	1
-35B	315T3128-45		. SYSTEM INSTL-ZONE VENTILATION (FOR BREAKDOWN SEE CMM 71-11-56)	AC-AF	1
-40	315T3154-59		. BRACKET INSTL- (FOR BREAKDOWN SEE CMM 78-31-41)	E,F,A A,AB, AU,BA	1
-40A	315T3154-71		. BRACKET INSTL- (FOR BREAKDOWN SEE CMM 78-31-41)	G-K	1
-40B	315T3154-73		. BRACKET INSTL- (FOR BREAKDOWN SEE CMM 78-31-41)	AC-AF	1
-45	315T3154-60		. BRACKET INSTL- (FOR BREAKDOWN SEE CMM 78-31-41)	Q,R,A L,AM, AX,BD	1
-45A	315T3154-72		. BRACKET INSTL- (FOR BREAKDOWN SEE CMM 78-31-41)	S-V	1
-45B	315T3154-74		. BRACKET INSTL- (FOR BREAKDOWN SEE CMM 78-31-41)	AN-AR	1

78-31-47

 ILLUSTRATED PARTS LIST
 01.1 Page 1018
 Mar 01/04


BOEING
 COMPONENT
 MAINTENANCE MANUAL

FIG. & ITEM	PART NO.	AIRLINE PART NUMBER	NOMENCLATURE 1234567	EFF CODE	QTY PER ASSY
02-50	315T3154-83		.TUBE INSTL-OPENING ACTR (FOR BREAKDOWN SEE CMM 78-31-41)	G,J,K	1
-50A	315T3154-85		.TUBE INSTL-OPENING ACTR (FOR BREAKDOWN SEE CMM 78-31-41)	AC,AE ,AF	1
-55	315T3154-84		.TUBE INSTL-OPENING ACTR (FOR BREAKDOWN SEE CMM 78-31-41)	S,U,V	1
-55A	315T3154-86		.TUBE INSTL-OPENING ACTR (FOR BREAKDOWN SEE CMM 78-31-41)	AN,AQ ,AR	1
-60	315T3156-17		.BRACKET INSTL-DEACTIVATION PIN STOWAGE (FOR BREAKDOWN SEE CMM 78-31-41)	A-F, W-AB, AS-AU ,AY- BA	1
-60A	315T3156-31		.BRACKET INSTL-DEACTIVATION PIN STOWAGE (FOR BREAKDOWN SEE CMM 78-31-41)	G-K	1
-60B	315T3156-33		.BRACKET INSTL-DEACTIVATION PIN STOWAGE (FOR BREAKDOWN SEE CMM 78-31-41)	AC-AF	1
-65	315T3156-18		.BRACKET INSTL-DEACTIVATION PIN STOWAGE (FOR BREAKDOWN SEE CMM 78-31-41)	L-R,A G-AM, AV-AX ,BB-B D	1
-65A	315T3156-32		.BRACKET INSTL-DEACTIVATION PIN STOWAGE (FOR BREAKDOWN SEE CMM 78-31-41)	S-V	1
-65B	315T3156-34		.BRACKET INSTL-DEACTIVATION PIN STOWAGE (FOR BREAKDOWN SEE CMM 78-31-41)	AN-AR	1

78-31-47

 ILLUSTRATED PARTS LIST
 01.1 Page 1019
 Mar 01/04

FIG. & ITEM	PART NO.	AIRLINE PART NUMBER	NOMENCLATURE 1234567	EFF CODE	QTY PER ASSY
02- -70	315T3202-265		.BOX INSTL-TORQUE (FOR BREAKDOWN SEE CMM 71-11-56)	A-D, W-Z,A S,AT, AY,AZ	1
-70A	315T3202-267		.BOX INSTL-TORQUE (FOR BREAKDOWN SEE CMM 71-11-56)	E,F,A A,AB, AU,BA	1
-70B	315T3202-277		.BOX INSTL-TORQUE (FOR BREAKDOWN SEE CMM 71-11-56)	G-J	1
-70C	315T3202-279		.BOX INSTL-TORQUE (FOR BREAKDOWN SEE CMM 71-11-56)	AC-AE	1
R -70D	315T3202-277		.BOX INSTL-TORQUE (LIMITED) (FOR BREAKDOWN SEE CMM 71-11-56)	K	1
R -70E	315T3202-289		.BOX INSTL-TORQUE (LIMITED) (FOR BREAKDOWN SEE CMM 71-11-56)	K	1
R -70F	315T3202-301		.BOX INSTL-TORQUE (LIMITED) (FOR BREAKDOWN SEE CMM 71-11-56)	K	1
R -70G	315T3202-279		.BOX INSTL-TORQUE (LIMITED) (FOR BREAKDOWN SEE CMM 71-11-56)	AF	1
R -70H	315T3202-291		.BOX INSTL-TORQUE (LIMITED) (FOR BREAKDOWN SEE CMM 71-11-56)	AF	1
R -70J	315T3202-303		.BOX INSTL-TORQUE (LIMITED) (FOR BREAKDOWN SEE CMM 71-11-56)	AF	1

78-31-47

 ILLUSTRATED PARTS LIST
 01.1 Page 1020
 Mar 01/04


BOEING
 COMPONENT
 MAINTENANCE MANUAL

FIG. & ITEM	PART NO.	AIRLINE PART NUMBER	NOMENCLATURE 1234567	EFF CODE	QTY PER ASSY
02- -75	315T3202-266		.BOX INSTL-TORQUE (FOR BREAKDOWN SEE CMM 71-11-56)	L-P,A G-AK, AV,AW ,BB,B C	1
-75A	315T3202-268		.BOX INSTL-TORQUE (FOR BREAKDOWN SEE CMM 71-11-56)	Q,R,A L,AM, AX,BD	1
-75B	315T3202-278		.BOX INSTL-TORQUE (FOR BREAKDOWN SEE CMM 71-11-56)	S-U	1
-75C	315T3202-280		.BOX INSTL-TORQUE (FOR BREAKDOWN SEE CMM 71-11-56)	AN-AQ	1
R -75D	315T3202-278		.BOX INSTL-TORQUE (LIMITED) (FOR BREAKDOWN SEE CMM 71-11-56)	V	1
R -75E	315T3202-290		.BOX INSTL-TORQUE (LIMITED) (FOR BREAKDOWN SEE CMM 71-11-56)	V	1
R -75F	315T3202-280		.BOX INSTL-TORQUE (LIMITED) (FOR BREAKDOWN SEE CMM 71-11-56)	AR	1
R -75G	315T3202-292		.BOX INSTL-TORQUE (LIMITED) (FOR BREAKDOWN SEE CMM 71-11-56)	AR	1
-80	315T3204-21		.RING ASSY-CASCADE SPRT,AFT (FOR BREAKDOWN SEE CMM 71-11-56)	E,F,A A,AB, AU,BA	1
-80A	315T3204-31		.RING ASSY-CASCADE SPRT,AFT (FOR BREAKDOWN SEE CMM 71-11-56)	G-K	1
-80B	315T3204-33		.RING ASSY-CASCADE SPRT,AFT (FOR BREAKDOWN SEE CMM 71-11-56)	AC-AF	1

78-31-47

 ILLUSTRATED PARTS LIST
 01.1 Page 1021
 Mar 01/04

FIG. & ITEM	PART NO.	AIRLINE PART NUMBER	NOMENCLATURE 1234567	EFF CODE	QTY PER ASSY
02-85	315T3204-22		.RING ASSY-CASCADE SPRT,AFT (FOR BREAKDOWN SEE CMM 71-11-56)	Q,R,A L,AM, AX,BB	1
-85A	315T3204-32		.RING ASSY-CASCADE SPRT,AFT (FOR BREAKDOWN SEE CMM 71-11-56)	S-V	1
-85B	315T3204-34		.RING ASSY-CASCADE SPRT,AFT (FOR BREAKDOWN SEE CMM 71-11-56)	AN-AR	1
-90	315T3208-11		.LATCH INSTL-VEE GROOVE (FOR BREAKDOWN SEE CMM 78-31-41)	A-F, W-AB, AS-AU ,AY- BA	1
-90A	315T3208-27		.LATCH INSTL-VEE GROOVE (FOR BREAKDOWN SEE CMM 78-31-41)	G-K, W-AB, AS-AU ,AY- BA	1
-90B	315T3208-29		.LATCH INSTL-VEE GROOVE (FOR BREAKDOWN SEE CMM 78-31-41)	AC-AF	1
-95	315T3208-12		.LATCH INSTL-VEE GROOVE (FOR BREAKDOWN SEE CMM 78-31-41)	L-R,A G-AM, AV-AX ,BB-B D	1
-95A	315T3208-28		.LATCH INSTL-VEE GROOVE (FOR BREAKDOWN SEE CMM 78-31-41)	S-V	1
-95B	315T3208-30		.LATCH INSTL-VEE GROOVE (FOR BREAKDOWN SEE CMM 78-31-41)	AN-AR	1

78-31-47

 ILLUSTRATED PARTS LIST
 01.1 Page 1022
 Mar 01/04


BOEING
 COMPONENT
 MAINTENANCE MANUAL

FIG. & ITEM	PART NO.	AIRLINE PART NUMBER	NOMENCLATURE 1234567	EFF CODE	QTY PER ASSY
02- -100	315T3240-9		.SEAL INSTL-AERODYN (FOR BREAKDOWN SEE CMM 71-11-56)	A-F, W-AB, AS-AU ,AY- BA	1
-100A	315T3240-25		.SEAL INSTL-AERODYN (FOR BREAKDOWN SEE CMM 71-11-56)	G-K	1
-100B	315T3240-27		.SEAL INSTL-AERODYN (FOR BREAKDOWN SEE CMM 71-11-56)	AC-AF	1
-105	315T3240-10		.SEAL INSTL-AERODYN (FOR BREAKDOWN SEE CMM 71-11-56)	L-R,A G-AM, AV-AX ,BB-B D	1
-105A	315T3240-26		.SEAL INSTL-AERODYN (FOR BREAKDOWN SEE CMM 71-11-56)	S-V	1
-105B	315T3240-28		.SEAL INSTL-AERODYN (FOR BREAKDOWN SEE CMM 71-11-56)	AN-AR	1
-110	315T3305-203		.FAIRING INSTL- (FOR BREAKDOWN SEE CMM 71-11-56)	E,F,A A,AB, AU,BA	1
-110A	315T3305-205		.FAIRING INSTL- (FOR BREAKDOWN SEE CMM 71-11-56)	G-K	1
-110B	315T3305-207		.FAIRING INSTL- (FOR BREAKDOWN SEE CMM 71-11-56)	AC-AF	1

78-31-47

 ILLUSTRATED PARTS LIST
 01.1 Page 1023
 Mar 01/04

FIG. & ITEM	PART NO.	AIRLINE PART NUMBER	NOMENCLATURE 1234567	EFF CODE	QTY PER ASSY
02- -115	315T3305-204		.FAIRING INSTL- (FOR BREAKDOWN SEE CMM 71-11-56)	Q,R,A L,AM, AX,BD	1
-115A	315T3305-206		.FAIRING INSTL- (FOR BREAKDOWN SEE CMM 71-11-56)	S-V	1
-115B	315T3305-208		.FAIRING INSTL- (FOR BREAKDOWN SEE CMM 71-11-56)	AN-AR	1
-120	315T3307-79		.FAIRING INSTL-UPR BIFURCATION TRACK (FOR BREAKDOWN SEE CMM 71-11-56)	E,F,A A,AB, AU,BA	1
-120A	315T3307-81		.FAIRING INSTL-UPR BIFURCATION TRACK (FOR BREAKDOWN SEE CMM 71-11-56)	G-K	1
-120B	315T3307-83		.FAIRING INSTL-UPR BIFURCATION TRACK (FOR BREAKDOWN SEE CMM 71-11-56)	AC-AF	1
-125	315T3307-80		.FAIRING INSTL-UPR BIFURCATION TRACK (FOR BREAKDOWN SEE CMM 71-11-56)	Q,R,A L,AM, AX,BD	1
-125A	315T3307-82		.FAIRING INSTL-UPR BIFURCATION TRACK (FOR BREAKDOWN SEE CMM 71-11-56)	S-V	1
-125B	315T3307-84		.FAIRING INSTL-UPR BIFURCATION TRACK (FOR BREAKDOWN SEE CMM 71-11-56)	AN-AR	1
-130	315T3318-273		.SEAL INSTL-UPR BIFURCATION (FOR BREAKDOWN SEE CMM 71-11-56)	E,F,A A,AB, AU,BA	1
-130A	315T3318-285		.SEAL INSTL-UPR BIFURCATION (FOR BREAKDOWN SEE CMM 71-11-56)	G-K	1
-130B	315T3318-287		.SEAL INSTL-UPR BIFURCATION (FOR BREAKDOWN SEE CMM 71-11-56)	AC-AF	1

78-31-47

 ILLUSTRATED PARTS LIST
 01.1 Page 1024
 Mar 01/04


BOEING
 COMPONENT
 MAINTENANCE MANUAL

FIG. & ITEM	PART NO.	AIRLINE PART NUMBER	NOMENCLATURE 1234567	EFF CODE	QTY PER ASSY
02- -135	315T3318-274		.SEAL INSTL-UPR BIFURCATION (FOR BREAKDOWN SEE CMM 71-11-56)	Q,R,A L,AM, AX,BD	1
-135A	315T3318-286		.SEAL INSTL-UPR BIFURCATION (FOR BREAKDOWN SEE CMM 71-11-56)	S-V	1
-135B	315T3318-288		.SEAL INSTL-UPR BIFURCATION (FOR BREAKDOWN SEE CMM 71-11-56)	AN-AR	1
R -140	315T3416-42		.DOOR ASSY-EXH, LOUVERED (FOR BREAKDOWN SEE CMM 71-11-56)	Q,R,A L,AM, AX,BD	1
-140A	315T3416-50		.DOOR ASSY-EXH, LOUVERED (FOR BREAKDOWN SEE CMM 71-11-56)	S,T	1
-140B	315T3416-52		.DOOR ASSY-EXH, LOUVERED (FOR BREAKDOWN SEE CMM 71-11-56)	AN,AP	1
-140C	315T3416-64		.DOOR ASSY-EXH, LOUVERED (FOR BREAKDOWN SEE CMM 71-11-56)	U,V	1
-140D	315T3416-66		.DOOR ASSY-EXH, LOUVERED (FOR BREAKDOWN SEE CMM 71-11-56)	AQ,AR	1
-145	315T3501-35		.DIAPHRAGM ASSY- (FOR BREAKDOWN SEE CMM 78-31-45)	E,F,A A,AB, AU,BA	1
-145A	315T3501-47		.DIAPHRAGM ASSY- (FOR BREAKDOWN SEE CMM 78-31-45)	G-K	1
-145B	315T3501-49		.DIAPHRAGM ASSY- (FOR BREAKDOWN SEE CMM 78-31-45)	AC-AE	1
-150	315T3501-36		.DIAPHRAGM ASSY- (FOR BREAKDOWN SEE CMM 78-31-45)	Q,R,A L,AM, AX,BD	1
-150A	315T3501-48		.DIAPHRAGM ASSY- (FOR BREAKDOWN SEE CMM 78-31-45)	S-V	1
-150B	315T3501-50		.DIAPHRAGM ASSY- (FOR BREAKDOWN SEE CMM 78-31-45)	AN-AR	1

78-31-47

 ILLUSTRATED PARTS LIST
 01.1 Page 1025
 Mar 01/04

FIG. & ITEM	PART NO.	AIRLINE PART NUMBER	NOMENCLATURE 1234567	EFF CODE	QTY PER ASSY
02- -155	315T3578-1		.SIGNAL INSTL-LATCH, LWR BIFURCATION (FOR BREAKDOWN SEE CMM 71-11-56)	Q,R,A L,AM, AX,BD	1
-155A	315T3578-12		.SIGNAL INSTL-LATCH, LWR BIFURCATION (FOR BREAKDOWN SEE CMM 71-11-56)	S-V	1
-155B	315T3578-14		.SIGNAL INSTL-LATCH, LWR BIFURCATION (FOR BREAKDOWN SEE CMM 71-11-56)	AN-AR	1
-160	315T3601-7		.WIRE BUNDLE INSTL-COMMON (FOR BREAKDOWN SEE CMM 78-31-41)	A-F, W-AB, AS-AU ,AY- BA	1
-160A	315T3601-21		.WIRE BUNDLE INSTL-COMMON (FOR BREAKDOWN SEE CMM 78-31-41)	G-R	1
-160B	315T3601-23		.WIRE BUNDLE INSTL-COMMON (FOR BREAKDOWN SEE CMM 78-31-41)	AC-AF	1
-165	315T3601-8		.WIRE BUNDLE INSTL-COMMON (FOR BREAKDOWN SEE CMM 78-31-41)	L-R,A G-AM, AV-AX ,BB-B D	1
-165A	315T3601-22		.WIRE BUNDLE INSTL-COMMON (FOR BREAKDOWN SEE CMM 78-31-41)	S-V	1
-165B	315T3601-24		.WIRE BUNDLE INSTL-COMMON (FOR BREAKDOWN SEE CMM 78-31-41)	AN-AR	1

78-31-47

 ILLUSTRATED PARTS LIST
 01.1 Page 1026
 Mar 01/04


BOEING
 COMPONENT
 MAINTENANCE MANUAL

FIG. & ITEM	PART NO.	AIRLINE PART NUMBER	NOMENCLATURE 1234567	EFF CODE	QTY PER ASSY
02- -170	315T3601-41		.WIRE BUNDLE INSTL-MANUAL DOOR OPENING SYSTEM (FOR BREAKDOWN SEE CMM 78-31-41)	G,J,K	1
-170A	315T3601-43		.WIRE BUNDLE INSTL-MANUAL DOOR OPENING SYSTEM (FOR BREAKDOWN SEE CMM 78-31-41)	AC,AE ,AF	1
-170B	315T3601-45		.WIRE BUNDLE INSTL-POWER DOOR OPENING SYSTEM (FOR BREAKDOWN SEE CMM 78-31-41)	H	1
-170C	315T3601-47		.WIRE BUNDLE INSTL-POWER DOOR OPENING SYSTEM (FOR BREAKDOWN SEE CMM 78-31-41)	AD	1
-175	315T3601-42		.WIRE BUNDLE INSTL-MANUAL DOOR OPENING SYSTEM (FOR BREAKDOWN SEE CMM 78-31-41)	S,U,V	1
-175A	315T3601-44		.WIRE BUNDLE INSTL-MANUAL DOOR OPENING SYSTEM (FOR BREAKDOWN SEE CMM 78-31-41)	AN,AQ ,AR	1
-175B	315T3601-46		.WIRE BUNDLE INSTL-POWER DOOR OPENING SYSTEM (FOR BREAKDOWN SEE CMM 78-31-41)	T	1
-175C	315T3601-48		.WIRE BUNDLE INSTL-POWER DOOR OPENING SYSTEM (FOR BREAKDOWN SEE CMM 78-31-41)	AP	1

78-31-47

 ILLUSTRATED PARTS LIST
 01.1 Page 1027
 Mar 01/04

FIG. & ITEM	PART NO.	AIRLINE PART NUMBER	NOMENCLATURE 1234567	EFF CODE	QTY PER ASSY
02- -180	315T3602-19		.ACTUATOR AND TUBING INSTL- (FOR BREAKDOWN SEE CMM 78-31-41)	A-F, W-AB, AS-AU ,AY- BA	1
-180A	315T3602-31		.ACTUATOR AND TUBING INSTL- (FOR BREAKDOWN SEE CMM 78-31-41)	G,H	1
-180B	315T3602-33		.ACTUATOR AND TUBING INSTL- (FOR BREAKDOWN SEE CMM 78-31-41)	AC,AD	1
-180C	315T3602-45		.ACTUATOR AND TUBING INSTL- (FOR BREAKDOWN SEE CMM 78-31-41)	J,K	1
-180D	315T3602-47		.ACTUATOR AND TUBING INSTL- (FOR BREAKDOWN SEE CMM 78-31-41)	AE,AF	1
-185	315T3602-20		.ACTUATOR AND TUBING INSTL- (FOR BREAKDOWN SEE CMM 78-31-41)	L-R,A G-AM, AV-AX ,BB-B D	1
-185A	315T3602-32		.ACTUATOR AND TUBING INSTL- (FOR BREAKDOWN SEE CMM 78-31-41)	S,T	1
-185B	315T3602-34		.ACTUATOR AND TUBING INSTL- (FOR BREAKDOWN SEE CMM 78-31-41)	AN,AP	1
-185C	315T3602-46		.ACTUATOR AND TUBING INSTL- (FOR BREAKDOWN SEE CMM 78-31-41)	U,V	1
-185D	315T3602-48		.ACTUATOR AND TUBING INSTL- (FOR BREAKDOWN SEE CMM 78-31-41)	AQ,AR	1

78-31-47

 ILLUSTRATED PARTS LIST
 01.1 Page 1028
 Mar 01/04


BOEING
 COMPONENT
 MAINTENANCE MANUAL

FIG. & ITEM	PART NO.	AIRLINE PART NUMBER	NOMENCLATURE 1234567	EFF CODE	QTY PER ASSY
02- -190	315T3605-5		.ROD INSTL-HOLD OPEN (FOR BREAKDOWN SEE CMM 78-31-41)	A-F, W-AB, AS-AU ,AY- BA	1
-190A	315T3605-7		.ROD INSTL-HOLD OPEN (FOR BREAKDOWN SEE CMM 78-31-41)	G-K	1
-190B	315T3605-9		.ROD INSTL-HOLD OPEN (FOR BREAKDOWN SEE CMM 78-31-41)	AC-AF	1
-195	315T3605-6		.ROD INSTL-HOLD OPEN (FOR BREAKDOWN SEE CMM 78-31-41)	L-R,A G-AM, AV-AX ,BB-B D	1
-195A	315T3605-8		.ROD INSTL-HOLD OPEN (FOR BREAKDOWN SEE CMM 78-31-41)	S-V	1
-195B	315T3605-10		.ROD INSTL-HOLD OPEN (FOR BREAKDOWN SEE CMM 78-31-41)	AN-AR	1
-200	315T3633-171		.BRACKET ASSY- (FOR BREAKDOWN SEE CMM 71-11-56)	E,F,A A,AB, AU,BA	1
-200A	315T3633-181		.BRACKET ASSY- (FOR BREAKDOWN SEE CMM 71-11-56)	E,F,A A,AB, AU,BA	1
-200B	315T3633-183		.BRACKET ASSY- (FOR BREAKDOWN SEE CMM 71-11-56)	AC-AF	1
-205	315T3633-172		.BRACKET ASSY- (FOR BREAKDOWN SEE CMM 71-11-56)	Q,R,A L,AM, AX,BD	1
-205A	315T3633-182		.BRACKET ASSY- (FOR BREAKDOWN SEE CMM 71-11-56)	S-V	1
-205B	315T3633-184		.BRACKET ASSY- (FOR BREAKDOWN SEE CMM 71-11-56)	AN-AP	1
-210	315T3655-15		.SWITCH INSTL-ACTR (FOR BREAKDOWN SEE CMM 78-31-41)	H	1

78-31-47

ILLUSTRATED PARTS LIST

01.1

Page 1029

Mar 01/04

FIG. & ITEM	PART NO.	AIRLINE PART NUMBER	NOMENCLATURE 1234567	EFF CODE	QTY PER ASSY
02- -210A	315T3655-17		.SWITCH INSTL-ACTR (FOR BREAKDOWN SEE CMM 78-31-41)	AD	1
-215	315T3655-16		.SWITCH INSTL-ACTR (FOR BREAKDOWN SEE CMM 78-31-41)	T	1
-215A	315T3655-18		.SWITCH INSTL-ACTR (FOR BREAKDOWN SEE CMM 78-31-41)	AP	1
-220	315T3703-17		.INDICATION INSTL-POSITION AND AUTO. RESTOW (FOR BREAKDOWN SEE CMM 78-31-41)	A-F, W-AB, AS-AU ,AY- BA	1
-220A	315T3703-27		.INDICATION INSTL-POSITION AND AUTO. RESTOW (FOR BREAKDOWN SEE CMM 78-31-41)	G-K	1
-220B	315T3703-29		.INDICATION INSTL-POSITION AND AUTO. RESTOW (FOR BREAKDOWN SEE CMM 78-31-41)	AC-AF	1
-225	315T3703-18		.INDICATION INSTL-POSITION AND AUTO. RESTOW (FOR BREAKDOWN SEE CMM 78-31-41)	L-R,A G-AM, AV-AX ,BB-B D	1
-225A	315T3703-28		.INDICATION INSTL-POSITION AND AUTO. RESTOW (FOR BREAKDOWN SEE CMM 78-31-41)	S-V	1
-225B	315T3703-30		.INDICATION INSTL-POSITION AND AUTO. RESTOW (FOR BREAKDOWN SEE CMM 78-31-41)	AN-AR	1

78-31-47

 ILLUSTRATED PARTS LIST
 01.1 Page 1030
 Mar 01/04


BOEING
 COMPONENT
 MAINTENANCE MANUAL

FIG. & ITEM	PART NO.	AIRLINE PART NUMBER	NOMENCLATURE 1234567	EFF CODE	QTY PER ASSY
02- -230	315T4013-115		.COWL ASSY- (REF CMM 71-11-56)	A,B,A S	1
-230A	315T4013-117		.COWL ASSY- (REF CMM 71-11-56)	W,X,A Y	1
-230B	315T4013-123		.COWL ASSY- (REF CMM 71-11-56)	C,D,A T	1
-230C	315T4013-125		.COWL ASSY- (REF CMM 71-11-56)	Y,Z,A Z	1
-230D	315T4013-135		.COWL ASSY- (REF CMM 71-11-56)	E-J,A U	1
-230E	315T4013-137		.COWL ASSY- (REF CMM 71-11-56)	AA-AE BA	1
-230F	315T4013-165		.COWL ASSY- (LIMITED) (REF CMM 71-11-56)	K	1
-230G	315T4013-167		.COWL ASSY- (LIMITED) (REF CMM 71-11-56)	AF	1
R -230H	315T4013-185		.COWL ASSY- (LIMITED) (REF CMM 71-11-56)	K	1
R -230J	315T4013-187		.COWL ASSY- (LIMITED) (REF CMM 71-11-56)	AF	1

78-31-47

 ILLUSTRATED PARTS LIST
 01.1 Page 1031
 Mar 01/04

FIG. & ITEM	PART NO.	AIRLINE PART NUMBER	NOMENCLATURE 1234567	EFF CODE	QTY PER ASSY
02- -235	315T4013-116		.COWL ASSY- (REF CMM 71-11-56)	L,M,A V	1
-235A	315T4013-118		.COWL ASSY- (REF CMM 71-11-56)	AG,AH ,BB	1
-235B	315T4013-124		.COWL ASSY- (REF CMM 71-11-56)	N,P,A W	1
-235C	315T4013-126		.COWL ASSY- (REF CMM 71-11-56)	AJ,AK ,BC	1
-235D	315T4013-136		.COWL ASSY- (REF CMM 71-11-56)	Q-U,A X	1
-235E	315T4013-138		.COWL ASSY- (REF CMM 71-11-56)	AL-AQ ,BD	1
-235F	315T4013-154		.COWL ASSY- (LIMITED) (REF CMM 71-11-56)	V	1
-235G	315T4013-156		.COWL ASSY- (LIMITED) (REF CMM 71-11-56)	AR	1
R -235H	315T4013-186		.COWL ASSY- (LIMITED) (REF CMM 71-11-56)	V	1
R -235J	315T4013-188		.COWL ASSY- (LIMITED) (REF CMM 71-11-56)	AR	1
-240	315T4014-163		.FAN DUCT COWL AND THRUST- REVERSER ASSY (REF CMM 78-31-41)	A-F, W-AB, AS-AU ,AY- BA	1
-240A	315T4014-207		.FAN DUCT COWL AND THRUST- REVERSER ASSY (REF CMM 78-31-41)	G-K	1
-240B	315T4014-209		.FAN DUCT COWL AND THRUST- REVERSER ASSY (REF CMM 78-31-41)	AC-AF	1

78-31-47

 ILLUSTRATED PARTS LIST
 01.1 Page 1032
 Mar 01/04


BOEING
 COMPONENT
 MAINTENANCE MANUAL

FIG. & ITEM	PART NO.	AIRLINE PART NUMBER	NOMENCLATURE 1234567	EFF CODE	QTY PER ASSY
02- -245	315T4014-164		.FAN DUCT COWL AND THRUST- REVERSER ASSY (REF CMM 78-31-41)	L-R,A G-AM, AV-AX ,BB-B D	1
-245A	315T4014-208		.FAN DUCT COWL AND THRUST- REVERSER ASSY (REF CMM 78-31-41)	S-V	1
-245B	315T4014-210		.FAN DUCT COWL AND THRUST- REVERSER ASSY (REF CMM 78-31-41)	AN-AR	1
-250	315T4102-1		.DUCT INSTL-COOLING (FOR BREAKDOWN SEE CMM 71-11-56)	Q,R,A L,AM, AX,BD	1
-250A	315T4102-16		.DUCT INSTL-COOLING (FOR BREAKDOWN SEE CMM 71-11-56)	S-V	1
-250B	315T4102-18		.DUCT INSTL-COOLING (FOR BREAKDOWN SEE CMM 71-11-56)	AN-AR	1
-255	315T4300-31		.BIFURCATION INSTL-UPR (FOR BREAKDOWN SEE CMM 71-11-56)	E,F,A A,AB, AU,BA	1
-255A	315T4300-41		.BIFURCATION INSTL-UPR (FOR BREAKDOWN SEE CMM 71-11-56)	G-J	1
-255B	315T4300-41		.BIFURCATION INSTL-UPR (LIMITED) (FOR BREAKDOWN SEE CMM 71-11-56)	K	1
-255C	315T4300-53		.BIFURCATION INSTL-UPR (LIMITED) (FOR BREAKDOWN SEE CMM 71-11-56)	K	1

78-31-47

 ILLUSTRATED PARTS LIST
 01.1 Page 1033
 Mar 01/04

FIG. & ITEM	PART NO.	AIRLINE PART NUMBER	NOMENCLATURE 1234567	EFF CODE	QTY PER ASSY
02- -255D	315T4300-43		.BIFURCATION INSTL-UPR (FOR BREAKDOWN SEE CMM 71-11-56)	AC-AE	1
-255E	315T4300-43		.BIFURCATION INSTL-UPR (LIMITED) (FOR BREAKDOWN SEE CMM 71-11-56)	AF	1
-255F	315T4300-55		.BIFURCATION INSTL-UPR (LIMITED) (FOR BREAKDOWN SEE CMM 71-11-56)	AF	1
-260	315T4300-32		.BIFURCATION INSTL-UPR (FOR BREAKDOWN SEE CMM 71-11-56)	Q,R,A L,AM, AX,BD	1
-260A	315T4300-42		.BIFURCATION INSTL-UPR (FOR BREAKDOWN SEE CMM 71-11-56)	S-U	1
-260B	315T4300-42		.BIFURCATION INSTL-UPR (LIMITED) (FOR BREAKDOWN SEE CMM 71-11-56)	V	1
-260C	315T4300-54		.BIFURCATION INSTL-UPR (LIMITED) (FOR BREAKDOWN SEE CMM 71-11-56)	V	1
-260D	315T4300-44		.BIFURCATION INSTL-UPR (FOR BREAKDOWN SEE CMM 71-11-56)	AN-AQ	1
-260E	315T4300-44		.BIFURCATION INSTL-UPR (LIMITED) (FOR BREAKDOWN SEE CMM 71-11-56)	AR	1
-260F	315T4300-56		.BIFURCATION INSTL-UPR (LIMITED) (FOR BREAKDOWN SEE CMM 71-11-56)	AR	1
-265	315T4301-59		.PANEL ASSY-WALL (FOR BREAKDOWN SEE CMM 71-11-56)	E,F,A A,AB, AU,BA	1
-265A	315T4301-71		.PANEL ASSY-WALL (FOR BREAKDOWN SEE CMM 71-11-56)	G-K	1
-265B	315T4301-73		.PANEL ASSY-WALL (FOR BREAKDOWN SEE CMM 71-11-56)	AC-AF	1

78-31-47

 ILLUSTRATED PARTS LIST
 01.1 Page 1034
 Mar 01/04


BOEING
 COMPONENT
 MAINTENANCE MANUAL

FIG. & ITEM	PART NO.	AIRLINE PART NUMBER	NOMENCLATURE 1234567	EFF CODE	QTY PER ASSY
02- -270	315T4301-60		.PANEL ASSY-WALL (FOR BREAKDOWN SEE CMM 71-11-56)	Q,R,A L,AM, AX,BD	1
-270A	315T4301-72		.PANEL ASSY-WALL (FOR BREAKDOWN SEE CMM 71-11-56)	S-V	1
-270B	315T4301-74		.PANEL ASSY-WALL (FOR BREAKDOWN SEE CMM 71-11-56)	AN-AR	1
-275	315T4400-121		.BIFURCATION ASSY-LWR (FOR BREAKDOWN SEE CMM 71-11-56)	E,F,A A,AB, AU,BA	1
-275A	315T4400-131		.BIFURCATION ASSY-LWR (FOR BREAKDOWN SEE CMM 71-11-56)	G-J	1
-275B	315T4400-133		.BIFURCATION ASSY-LWR (FOR BREAKDOWN SEE CMM 71-11-56)	AC-AE	1
R -275C	315T4400-131		.BIFURCATION ASSY-LWR (LIMITED) (FOR BREAKDOWN SEE CMM 71-11-56)	K	1
R -275D	315T4400-143		.BIFURCATION ASSY-LWR (LIMITED) (FOR BREAKDOWN SEE CMM 71-11-56)	K	1
R -275E	315T4400-133		.BIFURCATION ASSY-LWR (LIMITED) (FOR BREAKDOWN SEE CMM 71-11-56)	AF	1
R -275F	315T4400-145		.BIFURCATION ASSY-LWR (LIMITED) (FOR BREAKDOWN SEE CMM 71-11-56)	AF	1
-280	315T4400-128		.BIFURCATION ASSY-LWR (FOR BREAKDOWN SEE CMM 71-11-56)	Q,R,A L,AM, AX,BD	1
-280A	315T4400-132		.BIFURCATION ASSY-LWR (FOR BREAKDOWN SEE CMM 71-11-56)	S-V	1
-280B	315T4400-134		.BIFURCATION ASSY-LWR (FOR BREAKDOWN SEE CMM 71-11-56)	AN-AR	1

78-31-47

ILLUSTRATED PARTS LIST

01.1

Page 1035

Mar 01/04

FIG. & ITEM	PART NO.	AIRLINE PART NUMBER	NOMENCLATURE 1234567	EFF CODE	QTY PER ASSY
R 02-285	315T4500-13		. SLEEVE ASSY- (REF CMM 78-31-45)	A,B,W ,X,AS ,AY	1
R -285A	315T4500-15		. SLEEVE ASSY- (REF CMM 78-31-45)	C,D,Y ,Z,AT ,AZ	1
R -285B	315T4500-17		. SLEEVE ASSY- (REF CMM 78-31-45)	E,F,A A,AB, AU,BA	1
R -285C	315T4500-29		. SLEEVE ASSY- (REF CMM 78-31-45)	G-J	1
R -285D	315T4500-31		. SLEEVE ASSY- (REF CMM 78-31-45)	AC-AE	1
R -285E	315T4500-41		. SLEEVE ASSY- (LIMITED) (REF CMM 78-31-45)	K	1
R -285F	315T4500-43		. SLEEVE ASSY- (LIMITED) (REF CMM 78-31-45)	AF	1
R -285G	315T4500-53		. SLEEVE ASSY- (LIMITED) (REF CMM 78-31-45)	K	1
R -285H	315T4500-55		. SLEEVE ASSY- (LIMITED) (REF CMM 78-31-45)	AF	1

78-31-47

 ILLUSTRATED PARTS LIST
 01.1 Page 1036
 Mar 01/04


BOEING
 COMPONENT
 MAINTENANCE MANUAL

FIG. & ITEM	PART NO.	AIRLINE PART NUMBER	NOMENCLATURE 1234567	EFF CODE	QTY PER ASSY
R 02- -290	315T4500-14		. SLEEVE ASSY- (REF CMM 78-31-45)	L,M,A G,AH, AV,BB	1
R -290A	315T4500-16		. SLEEVE ASSY- (REF CMM 78-31-45)	N,P,A J,AK, AW,BC	1
R -290B	315T4500-18		. SLEEVE ASSY- (REF CMM 78-31-45)	Q,R,A L,AM, AX,BB	1
R -290C	315T4500-30		. SLEEVE ASSY- (REF CMM 78-31-45)	S-U	1
R -290D	315T4500-32		. SLEEVE ASSY- (REF CMM 78-31-45)	AN-AQ	1
R -290E	315T4500-42		. SLEEVE ASSY- (LIMITED) (REF CMM 78-31-45)	V	1
R -290F	315T4500-44		. SLEEVE ASSY- (REF CMM 78-31-45)	AR	1
R -290G	315T4500-54		. SLEEVE ASSY- (LIMITED) (REF CMM 78-31-45)	V	1
R -290H	315T4500-56		. SLEEVE ASSY- (LIMITED) (REF CMM 78-31-45)	AR	1
-295	315T4579-9		. FAIRING INSTL-TRACK (FOR BREAKDOWN SEE CMM 78-31-41)	A-D, W-Z,A S,AT, AY,AZ	1
-295A	315T4579-17		. FAIRING INSTL-TRACK (FOR BREAKDOWN SEE CMM 78-31-41)	E,F,A A,AB, AU,BA	1
-295B	315T4579-39		. FAIRING INSTL-TRACK (FOR BREAKDOWN SEE CMM 78-31-41)	G-K	1
-295C	315T4579-41		. FAIRING INSTL-TRACK (FOR BREAKDOWN SEE CMM 78-31-41)	AC-AF	1

78-31-47

 ILLUSTRATED PARTS LIST
 01.1 Page 1037
 Mar 01/04

**COMPONENT
MAINTENANCE MANUAL**

FIG. & ITEM	PART NO.	AIRLINE PART NUMBER	NOMENCLATURE 1234567	EFF CODE	QTY PER ASSY
02- -300	315T4579-10		.FAIRING INSTL-TRACK (FOR BREAKDOWN SEE CMM 78-31-41)	L-P,A G-AK, AV,AW ,BB,B C	1
-300A	315T4579-18		.FAIRING INSTL-TRACK (FOR BREAKDOWN SEE CMM 78-31-41)	Q,R,A L,AM, AX,BD	1
-300B	315T4579-40		.FAIRING INSTL-TRACK (FOR BREAKDOWN SEE CMM 78-31-41)	S-V	1
-300C	315T4579-42		.FAIRING INSTL-TRACK (FOR BREAKDOWN SEE CMM 78-31-41)	AN-AR	1
-305	315T4579-11		.FAIRING INSTL-TRACK (FOR BREAKDOWN SEE CMM 78-31-41)	A-D, W-Z,A S,AT, AY,AZ	1
-305A	315T4579-19		.FAIRING INSTL-TRACK (FOR BREAKDOWN SEE CMM 78-31-41)	E,F,A A,AB, AU,BA	1
-305B	315T4579-43		.FAIRING INSTL-TRACK (FOR BREAKDOWN SEE CMM 78-31-41)	G-K	1
-305C	315T4579-45		.FAIRING INSTL-TRACK (FOR BREAKDOWN SEE CMM 78-31-41)	AC-AF	1
-310	315T4579-12		.FAIRING INSTL-TRACK (FOR BREAKDOWN SEE CMM 78-31-41)	L-P,A G-AK, AV,AW ,BB,B C	1
-310A	315T4579-20		.FAIRING INSTL-TRACK (FOR BREAKDOWN SEE CMM 78-31-41)	Q,R,A L,AM, AX,BD	1
-310B	315T4579-44		.FAIRING INSTL-TRACK (FOR BREAKDOWN SEE CMM 78-31-41)	S-V	1
-310C	315T4579-46		.FAIRING INSTL-TRACK (FOR BREAKDOWN SEE CMM 78-31-41)	AN-AR	1

78-31-47

ILLUSTRATED PARTS LIST

01.1 Page 1038

Mar 01/04


BOEING
 COMPONENT
 MAINTENANCE MANUAL

FIG. & ITEM	PART NO.	AIRLINE PART NUMBER	NOMENCLATURE 1234567	EFF CODE	QTY PER ASSY
02- -315	315T4705-1		.BRACKET ASSY-ATTACH, LWR FAIRING (FOR BREAKDOWN SEE CMM 78-31-41)	E,F,A A,AB, AU,BA	1
-315A	315T4705-73		.BRACKET ASSY-ATTACH, LWR FAIRING (FOR BREAKDOWN SEE CMM 78-31-41)	G-K	1
-315B	315T4705-75		.BRACKET ASSY-ATTACH, LWR FAIRING (FOR BREAKDOWN SEE CMM 78-31-41)	AC-AF	1
-315C	315T4705-2		.BRACKET ASSY-ATTACH, LWR FAIRING (FOR BREAKDOWN SEE CMM 78-31-41)	Q,R,A L,AM, AX,BD	1
-315D	315T4705-74		.BRACKET ASSY-ATTACH, LWR FAIRING (FOR BREAKDOWN SEE CMM 78-31-41)	S-V	1
-315E	315T4705-76		.BRACKET ASSY-ATTACH, LWR FAIRING (FOR BREAKDOWN SEE CMM 78-31-41)	AN-AR	1
-320	315T4705-53		.CLIP ASSY-UPR FAIRING (FOR BREAKDOWN SEE CMM 78-31-41)	E,F,A A,AB, AU,BA	1
-320A	315T4705-77		.CLIP ASSY-UPR FAIRING (FOR BREAKDOWN SEE CMM 78-31-41)	G-K	1
-320B	315T4705-79		.CLIP ASSY-UPR FAIRING (FOR BREAKDOWN SEE CMM 78-31-41)	AC-AF	1
-325	315T4705-54		.CLIP ASSY-UPR FAIRING (FOR BREAKDOWN SEE CMM 78-31-41)	Q,R,A L,AM, AX,BD	1
-325A	315T4705-78		.CLIP ASSY-UPR FAIRING (FOR BREAKDOWN SEE CMM 78-31-41)	S-V	1
-325B	315T4705-80		.CLIP ASSY-UPR FAIRING (FOR BREAKDOWN SEE CMM 78-31-41)	AN-AR	1

78-31-47

ILLUSTRATED PARTS LIST

01.1

Page 1039

Mar 01/04

FIG. & ITEM	PART NO.	AIRLINE PART NUMBER	NOMENCLATURE 1234567	EFF CODE	QTY PER ASSY
02- -330	315U4100-23		.WALL ASSY-INNER (FOR BREAKDOWN SEE CMM 71-11-56)	E,F,A A,AB, AU,BA	1
-330A	315U4100-35		.WALL ASSY-INNER (FOR BREAKDOWN SEE CMM 71-11-56)	G-K	1
-330B	315U4100-37		.WALL ASSY-INNER (FOR BREAKDOWN SEE CMM 71-11-56)	AC-AF	1
-335	315U4100-24		.WALL ASSY-INNER (FOR BREAKDOWN SEE CMM 71-11-56)	Q,R,A L,AM, AX,BD	1
-335A	315U4100-36		.WALL ASSY-INNER (FOR BREAKDOWN SEE CMM 71-11-56)	S-V	1
-335B	315U4100-38		.WALL ASSY-INNER (FOR BREAKDOWN SEE CMM 71-11-56)	AN-AR	1
-340	332T4713-10		.DRAIN INSTL- (FOR BREAKDOWN SEE CMM 71-11-56)	L-P,A G-AK, AV,AW ,BB,B C	1
-340A	332T4713-11		.DRAIN INSTL- (FOR BREAKDOWN SEE CMM 71-11-56)	Q,R,A L,AM, AX,BD	1
-340B	332T4713-22		.DRAIN INSTL- (FOR BREAKDOWN SEE CMM 71-11-56)	S-V	1
-340C	332T4713-24		.DRAIN INSTL- (FOR BREAKDOWN SEE CMM 71-11-56)	AN-AR	1
-585G	315T4500-53		DELETED		

- Item Not Illustrated

78-31-47

ILLUSTRATED PARTS LIST
 01.1 Page 1040
 Mar 01/04