



767

Component Maintenance Manual

BOEING PROPRIETARY, CONFIDENTIAL, AND/OR TRADE SECRET
Copyright © 1989 The Boeing Company
Unpublished Work - All Rights Reserved

Boeing claims copyright in each page of this document only to the extent that the page contains copyrightable subject matter. Boeing also claims copyright in this document as a compilation and/or collective work.

This document includes proprietary information owned by The Boeing Company and/or one or more third parties. Treatment of the document and the information it contains is governed by contract with Boeing. For more information, contact The Boeing Company, P.O. Box 3707, Seattle, Washington 98124.

Boeing, the Boeing signature, the Boeing symbol, 707, 717, 727, 737, 747, 757, 767, 777, BBJ, DC-8, DC-9, DC-10, MD-10, MD-11, MD-80, MD-88, MD-90, and the red-white-and-blue Boeing livery are all trademarks owned by The Boeing Company; and no trademark license is granted in connection with this document unless provided in writing by Boeing.

DOCUMENT D634T101

PUBLISHED BY BOEING COMMERCIAL AIRPLANES GROUP, SEATTLE, WASHINGTON, USA
● A DIVISION OF THE BOEING COMPANY ●
NOVEMBER 01, 1999

REVISION RECORD

- Retain this record in front of manual. On receipt of revision, insert revised pages in the manual, and enter revision number, date inserted and initial.

REVISION NUMBER	REVISION DATE	DATE FILED	BY	REVISION NUMBER	REVISION DATE	DATE FILED	BY

 **BOEING**
COMPONENT
MAINTENANCE MANUAL

BOEING DOCUMENT D634T101

REVISION NO. 90

NOVEMBER 1, 2005

To: All holders of Boeing 767 Component Maintenance Manual, Document D634T101

This letter transmits revision number ninety to the information contained in the 767 Component Maintenance Manual. File revised/added pages in the 767 CMM binders previously provided.

ATTENTION

IF YOU RECEIVE PRINTED REVISIONS, PLEASE VERIFY THAT YOU HAVE RECEIVED AND FILED THE PREVIOUS REVISION. BOEING MUST BE NOTIFIED WITHIN 30 DAYS IF YOU HAVE NOT RECEIVED THE PREVIOUS REVISION. REQUESTS FOR REVISIONS OTHER THAN THE PREVIOUS REVISION WILL REQUIRE A COMPLETE MANUAL REPRINT SUBJECT TO REPRINT CHARGES SHOWN IN THE CSMS CATALOG.

A manual applicability index especially prepared for each operator is included with printed copies of the 767 Component Maintenance Manual, listing those component maintenance manuals that apply to equipment installed on that operator's airplanes. Microfilm copies include manual applicability indexes for all operators. The operator's three-letter designation is printed at the bottom of the page. The shipment of printed copies to each customer contains only those manuals listed on the applicability index. Microfilm copies contain all manuals. Manuals revised in the current revision are designated by an "R"; manuals added to the index are designated by an "A"; manuals no longer applicable are designated "D" and will be removed from the index in the next revision.

FILING INSTRUCTIONS

The component maintenance manuals are furnished either as printed manuals or on microfilm. This revision supersedes all previous microfilm copies; affected microfilm cartridges are reissued with all obsolete pages removed and all updated pages added. For printed manuals incorporate this revision in individual component maintenance manuals in the order indicated by the List of Effective Pages for those manuals. Asterisks on the List of Effective Pages indicate pages that are added, changed, or deleted in this revision. Remove and destroy replaced or deleted pages.

INCORPORATED TEMPORARY REVISION LIST

Remove the Temporary Revisions that are in this list from the manual. The data from these Temporary Revisions is now incorporated in the manual.

TEMPORARY REVISION FILED IN

NONE

CANCELLED TEMPORARY REVISION LIST

Remove the Temporary Revisions that are in this list from the manual. The data from these Temporary Revisions is cancelled.

TEMPORARY REVISION FILED IN

NONE

ACTIVE TEMPORARY REVISION LIST

Keep all active Temporary Revisions in the manual and microfilm file until the Temporary Revision is incorporated or cancelled. Temporary Revisions not listed as incorporated, cancelled, or active (see note below) can be removed from the manual or microfilm file.

NOTE: A Temporary Revision is active if it is in one of these three groups:

1. The date on the Temporary Revision is less than 30 days before the date of this revision of the manual and the Temporary Revision is not in one of the above lists.
2. The date on the Temporary Revision is after the date of this revision of the manual.
3. The Temporary Revision is in the list below.

TEMPORARY REVISION FILED IN

NONE


BOEING
 COMPONENT
 MAINTENANCE MANUAL

PAGE	DATE	CODE	PAGE	DATE	CODE
TITLE PAGE			SERVICE BULLETIN LIST		
1			*26	NOV 01/05	01.1
2			*27	NOV 01/05	01.1
REVISION RECORD			*28	NOV 01/05	01.1
1	JAN 10/87	01.101	*29	NOV 01/05	01.1
2	BLANK		*30	NOV 01/05	01.1
TRANSMITTAL LETTER			*31	NOV 01/05	01.1
*1	NOV 01/05	01.1	*32	NOV 01/05	01.1
*2	NOV 01/05	01.1	*33	NOV 01/05	01.1
LIST OF EFFECTIVE PAGES			*34	NOV 01/05	01.1
*1	NOV 01/05	24	*35	NOV 01/05	01.1
THRU LAST PAGE			*36	NOV 01/05	01.1
SERVICE BULLETIN LIST			*37	NOV 01/05	01.1
*1	NOV 01/05	01.1	*38	NOV 01/05	01.1
*2	NOV 01/05	01.1	*39	NOV 01/05	01.1
*3	NOV 01/05	01.1	*40	NOV 01/05	01.1
*4	NOV 01/05	01.1	*41	NOV 01/05	01.1
*5	NOV 01/05	01.1	*42	NOV 01/05	01.1
*6	NOV 01/05	01.1	*43	NOV 01/05	01.1
*7	NOV 01/05	01.1	*44	NOV 01/05	01.1
*8	NOV 01/05	01.1	*45	NOV 01/05	01.1
*9	NOV 01/05	01.1	*46	NOV 01/05	01.1
*10	NOV 01/05	01.1	*47	NOV 01/05	01.1
*11	NOV 01/05	01.1	*48	BLANK	
*12	NOV 01/05	01.1	INTRODUCTION		
*13	NOV 01/05	01.1	1	NOV 01/00	01.1
*14	NOV 01/05	01.1	2	APR 01/93	01.1
*15	NOV 01/05	01.1	3	APR 01/93	01.101
*16	NOV 01/05	01.1	*4	NOV 01/05	01.1
*17	NOV 01/05	01.1	5	JUL 01/04	01.1
*18	NOV 01/05	01.1	6	BLANK	
*19	NOV 01/05	01.1	MANUAL APPLICABILITY INDEX		
*20	NOV 01/05	01.1	1	OCT 01/87	01.1
*21	NOV 01/05	01.1	*2	NOV 01/05	24.1
*22	NOV 01/05	01.1	*3	NOV 01/05	20.1
*23	NOV 01/05	01.1	*4	NOV 01/05	20.1
*24	NOV 01/05	01.1	*5	NOV 01/05	11.1
*25	NOV 01/05	01.1	*6	NOV 01/05	01.1

* = REVISED, ADDED OR DELETED



BOEING
COMPONENT
MAINTENANCE MANUAL

PAGE	DATE	CODE	PAGE	DATE	CODE
LIST OF CHAPTERS			NUMERICAL INDEX/NUMERIC		
1	JUN 01/94	01.1	*28	NOV 01/05	01.1
2	BLANK		*29	NOV 01/05	01.1
NUMERICAL INDEX TAB			*30	NOV 01/05	01.1
NUMERICAL INDEX/ALPHA			*31	NOV 01/05	01.1
*1	NOV 01/05	01.1	*32	NOV 01/05	01.1
*2	NOV 01/05	01.1	*33	NOV 01/05	01.1
*3	NOV 01/05	01.1	*34	NOV 01/05	01.1
*4	NOV 01/05	01.1	*35	DELETED	01.1
*5	NOV 01/05	01.1	*36	DELETED	01.1
6	BLANK		*37	DELETED	01.1
NUMERICAL INDEX/NUMERIC			*38	DELETED	01.1
*1	NOV 01/05	01.1	*39	DELETED	01.1
*2	NOV 01/05	01.1	*40	DELETED	01.1
*3	NOV 01/05	01.1	*41	DELETED	01.1
*4	NOV 01/05	01.1	*42	DELETED	01.1
*5	NOV 01/05	01.1	*43	DELETED	01.1
*6	NOV 01/05	01.1	*44	DELETED	01.1
*7	NOV 01/05	01.1	*45	DELETED	01.1
*8	NOV 01/05	01.1	*46	DELETED	
*9	NOV 01/05	01.1	NUMERICAL INDEX/MANUALS		
*10	NOV 01/05	01.1	*1	NOV 01/05	01.1
*11	NOV 01/05	01.1	*2	NOV 01/05	01.1
*12	NOV 01/05	01.1	*3	NOV 01/05	01.1
*13	NOV 01/05	01.1	*4	NOV 01/05	01.1
*14	NOV 01/05	01.1	*5	NOV 01/05	01.1
*15	NOV 01/05	01.1	*6	NOV 01/05	01.1
*16	NOV 01/05	01.1	*7	NOV 01/05	01.1
*17	NOV 01/05	01.1	*8	NOV 01/05	01.1
*18	NOV 01/05	01.1	*9	NOV 01/05	01.1
*19	NOV 01/05	01.1	*10	NOV 01/05	01.1
*20	NOV 01/05	01.1	*11	NOV 01/05	01.1
*21	NOV 01/05	01.1	*12	NOV 01/05	01.1
*22	NOV 01/05	01.1	*13	NOV 01/05	01.1
*23	NOV 01/05	01.1	*14	NOV 01/05	01.1
*24	NOV 01/05	01.1	*15	NOV 01/05	01.1
*25	NOV 01/05	01.1	*16	NOV 01/05	01.1
*26	NOV 01/05	01.1	*17	NOV 01/05	01.1
*27	NOV 01/05	01.1	*18	NOV 01/05	01.1
			*19	NOV 01/05	01.1
			*20	NOV 01/05	01.1
			*21	NOV 01/05	01.1

* = REVISED, ADDED OR DELETED



BOEING
COMPONENT
MAINTENANCE MANUAL

PAGE	DATE	CODE	PAGE	DATE	CODE
NUMERICAL INDEX/MANUALS		CONT.			CONT.
*22	NOV 01/05	01.1			
*23	NOV 01/05	01.1	CHAPTER 24		TAB
*24	NOV 01/05	01.1			
*25	NOV 01/05	01.1	CHAPTER 25		TAB
*26	NOV 01/05	01.1			
*27	NOV 01/05	01.1	CHAPTER 26		TAB
*28	NOV 01/05	01.1			
*29	NOV 01/05	01.1	CHAPTER 27		TAB
*30	NOV 01/05	01.1			
*31	NOV 01/05	01.1	CHAPTER 28		TAB
*32	NOV 01/05	01.1			
*33	NOV 01/05	01.1	CHAPTER 29		TAB
*34	NOV 01/05	01.1			
*35	NOV 01/05	01.1	CHAPTER 30		TAB
*36	NOV 01/05	01.1			
*37	NOV 01/05	01.1	CHAPTER 31		TAB
*38	NOV 01/05	01.1			
*39	DELETED	01.1	CHAPTER 32		TAB
*40	DELETED	01.1			
*41	DELETED	01.1	CHAPTER 33		TAB
*42	DELETED	01.1			
*43	DELETED	01.1	CHAPTER 34		TAB
*44	DELETED	01.1			
*45	DELETED	01.1	CHAPTER 35		TAB
*46	DELETED	01.1			
*47	DELETED	01.1	CHAPTER 36		TAB
*48	DELETED	01.1			
*49	DELETED	01.1	CHAPTER 38		TAB
*50	DELETED				
			CHAPTER 49		TAB
			CHAPTER 52		TAB
AIRCRAFT GENERAL TAB					
			CHAPTER 53		TAB
			CHAPTER 54		TAB
AIRFRAME SYSTEM TAB					
CHAPTER 21 TAB			CHAPTER 55		TAB
CHAPTER 22 TAB			CHAPTER 56		TAB
CHAPTER 23 TAB			CHAPTER 57		TAB

* = REVISED, ADDED OR DELETED



BOEING
 COMPONENT
 MAINTENANCE MANUAL

PAGE	DATE	CODE	PAGE	DATE	CODE
		CONT.			
POWER PLANT TAB					
CHAPTER 71 TAB					
CHAPTER 73 TAB					
CHAPTER 74 TAB					
CHAPTER 76 TAB					
CHAPTER 77 TAB					
CHAPTER 78 TAB					
CHAPTER 79 TAB					
CHAPTER 80 TAB					

* = REVISED, ADDED OR DELETED

SERVICE BULLETIN LIST

All released Boeing Service Bulletins applicable to the 767 airplane are listed numerically. If a service bulletin affects information contained in any of the individual component maintenance manuals, the number of the manual containing this information will be given. Reference to the temporary revision and service bulletin record page of the noted manual will give the date of service bulletin incorporation. Service bulletins not affecting information contained in the manuals are noted "NO EFFECT".

<u>SERVICE BULLETIN NUMBER</u>	<u>CMM NUMBER</u>	<u>SERVICE BULLETIN NUMBER</u>	<u>CMM NUMBER</u>	<u>SERVICE BULLETIN NUMBER</u>	<u>CMM NUMBER</u>
3A38R1	NO EFFECT	11-23R1	NO EFFECT	11-44	NO EFFECT
11-1	29-21-11	11-24	NO EFFECT	11-45	NO EFFECT
11-2	NO EFFECT	11-24R1	NO EFFECT	11-45R1	NO EFFECT
11-3	NO EFFECT	11-25	NO EFFECT	11-46	NO EFFECT
11-4	NO EFFECT	11-25R1	NO EFFECT	11-0035	NO EFFECT
11-4R1	NO EFFECT	11A26	NO EFFECT	20-1	NO EFFECT
11-5	NO EFFECT	11-27	NO EFFECT	21-1	NO EFFECT
11-6	52-11-61	11-28	NO EFFECT	21-2	NO EFFECT
11-7	NO EFFECT	11-29	NO EFFECT	21-3	NO EFFECT
11-8	78-31-11	11-30	NO EFFECT	21-3R1	NO EFFECT
	78-32-15	11A31	NO EFFECT	21-4	NO EFFECT
11-8R1	78-31-11	11A31R1	11-13-12	21-5	NO EFFECT
	78-31-15	11-32	NO EFFECT	21-6	NO EFFECT
11-9	NO EFFECT	11-34	NO EFFECT	21-7	NO EFFECT
11-10	NO EFFECT	11-34R1	NO EFFECT	21-7R1	NO EFFECT
11-11	NO EFFECT	11-34R2	NO EFFECT	21-8	NO EFFECT
11-12	NO EFFECT	11-35	NO EFFECT	21-9	NO EFFECT
11-13	25-29-54	11-36	NO EFFECT	21-10	NO EFFECT
	25-29-55	11-37	NO EFFECT	21-11	NO EFFECT
11-14	NO EFFECT	11-38	NO EFFECT	21-11R1	NO EFFECT
11-15	NO EFFECT	11-39	NO EFFECT	21-12	NO EFFECT
11-16	NO EFFECT	11-39R1	NO EFFECT	21-13	NO EFFECT
11-17	NO EFFECT	11-39R2	NO EFFECT	21-14	NO EFFECT
11-18R1	NO EFFECT	11-39R3	NO EFFECT	21-15	NO EFFECT
11-18R2	NO EFFECT	11-39R4	NO EFFECT	21-15R1	NO EFFECT
11-19	NO EFFECT	11-39R5	NO EFFECT	21-16	21-21-31
11-20	NO EFFECT	11-40	NO EFFECT	21-17	NO EFFECT
11-21	NO EFFECT	11-41	NO EFFECT	21-18	NO EFFECT
11-22	NO EFFECT	11-42	NO EFFECT	21-18R1	NO EFFECT
11-23	NO EFFECT	11-43	NO EFFECT	21-18R2	NO EFFECT



BOEING
COMPONENT
MAINTENANCE MANUAL

SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER
21-19	NO EFFECT	21-46R2	NO EFFECT	21-76	NO EFFECT
21-20	NO EFFECT	21-46R3	NO EFFECT	21-76R1	NO EFFECT
21-20R1	NO EFFECT	21-46R4	NO EFFECT	21-77	NO EFFECT
21-21	NO EFFECT	21-46R5	NO EFFECT	21-78	NO EFFECT
21-22	NO EFFECT	21-47	NO EFFECT	21-79	21-51-54
21-22R1	NO EFFECT	21-48	NO EFFECT		21-51-55
21-23	NO EFFECT	21-49	NO EFFECT	21-80	NO EFFECT
21-23R1	NO EFFECT	21-51	NO EFFECT	21-81	NO EFFECT
21-24	NO EFFECT	21-52	NO EFFECT	21-82	NO EFFECT
21-25	NO EFFECT	21-53	NO EFFECT	21-82R1	NO EFFECT
21-26	NO EFFECT	21-54	36-10-06	21-82R2	NO EFFECT
21-26R1	NO EFFECT	21-55	NO EFFECT	21-83	21-27-03
21-27	NO EFFECT	21-57	NO EFFECT	21-83R1	21-27-03
21-28	NO EFFECT	21-58	NO EFFECT	21-84	NO EFFECT
21-30	NO EFFECT	21-58R1	NO EFFECT	21-84R1	NO EFFECT
21-30R1	NO EFFECT	21-60	NO EFFECT	21-85	NO EFFECT
21-31	NO EFFECT	21-60R1	NO EFFECT	21-86	NO EFFECT
21-32	NO EFFECT	21-61	NO EFFECT	21-87	NO EFFECT
21-35	NO EFFECT	21-62	NO EFFECT	21-89	NO EFFECT
21-37	NO EFFECT	21-63	NO EFFECT	21-90	NO EFFECT
21-38	NO EFFECT	21-64	NO EFFECT	21-91	NO EFFECT
21-38R1	NO EFFECT	21-65	NO EFFECT	21A92	NO EFFECT
21-38R2	NO EFFECT	21-65R1	NO EFFECT	21A92R1	NO EFFECT
21-38R3	25-50-11	21-66	21-58-59	21-93	NO EFFECT
	36-10-06	21-66R1	21-58-59	21-96	NO EFFECT
21-39	NO EFFECT	21-67	NO EFFECT	21A98	NO EFFECT
21-39R1	NO EFFECT	21-67R1	NO EFFECT	21A98R1	NO EFFECT
21-40	NO EFFECT	21-67R2	NO EFFECT	21A98R2	NO EFFECT
21-41	NO EFFECT	21-68	NO EFFECT	21-100	NO EFFECT
21-41R1	NO EFFECT	21-68R1	NO EFFECT	21-101	NO EFFECT
21-41R2	NO EFFECT	21-69	21-58-59	21-101R1	NO EFFECT
21-42	NO EFFECT	21-69R1	21-58-59	21-102	NO EFFECT
21-42R1	NO EFFECT	21-70	36-10-06	21-103	NO EFFECT
21-42R2	NO EFFECT	21-71	NO EFFECT	21-103R1	NO EFFECT
21-43	NO EFFECT	21-72	NO EFFECT	21-105	NO EFFECT
21-45	NO EFFECT	21-72R1	NO EFFECT	21-105R1	NO EFFECT
21-45R1	NO EFFECT	21-72R2	NO EFFECT	21-106	NO EFFECT
21-45R2	NO EFFECT	21A74	NO EFFECT	21-106R1	NO EFFECT
21-46	NO EFFECT	21A74R1	NO EFFECT	21-106R2	NO EFFECT
21-46R1	NO EFFECT	21A74R2	NO EFFECT	21-106R3	NO EFFECT



BOEING

COMPONENT
MAINTENANCE MANUAL

SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER
21-107	36-10-06	21-135	NO EFFECT	21-171	NO EFFECT
21-108	NO EFFECT	21-137	NO EFFECT	21-172	NO EFFECT
21-108R1	NO EFFECT	21-138	NO EFFECT	21-174	NO EFFECT
21-109	NO EFFECT	21-139	NO EFFECT	21-175	NO EFFECT
21-110	NO EFFECT	21-139R1	NO EFFECT	21-178	NO EFFECT
21-111	NO EFFECT	21-140	NO EFFECT	21-179	NO EFFECT
21-111R1	NO EFFECT	21-141	NO EFFECT	21-180	NO EFFECT
21-111R2	NO EFFECT	21-142	NO EFFECT	21-181	NO EFFECT
21-112	NO EFFECT	21-143	NO EFFECT	21-184	NO EFFECT
21-112R1	NO EFFECT	21-143R1	NO EFFECT	21-185	NO EFFECT
21-113	NO EFFECT	21-143R2	NO EFFECT	21-187	NO EFFECT
21-114	NO EFFECT	21-143R3	NO EFFECT	21-188	21-58-21
21-115	NO EFFECT	21-144	NO EFFECT	21-189	21-58-21
21-118	NO EFFECT	21-145	NO EFFECT	21-190	NO EFFECT
21-119	NO EFFECT	21-146	NO EFFECT	21-191	NO EFFECT
21-119R1	NO EFFECT	21A147	NO EFFECT	21-193	NO EFFECT
21-120	NO EFFECT	21A147R1	NO EFFECT	21-0161	NO EFFECT
21-120R1	NO EFFECT	21-148	NO EFFECT	21-0185	NO EFFECT
21-121	NO EFFECT	21-149	NO EFFECT	22-1	NO EFFECT
21-121R1	NO EFFECT	21-150	NO EFFECT	22-3	NO EFFECT
21-122	NO EFFECT	21A151	NO EFFECT	22-4	NO EFFECT
21-124	NO EFFECT	21A151R1	NO EFFECT	22-5	NO EFFECT
21-125	NO EFFECT	21-152	NO EFFECT	22-5R1	NO EFFECT
21-126	NO EFFECT	21-154	NO EFFECT	22-6	NO EFFECT
21-126R1	NO EFFECT	21A154R1	NO EFFECT	22-7	NO EFFECT
21-127	NO EFFECT	21-155	NO EFFECT	22-8	NO EFFECT
21A127R1	NO EFFECT	21-155R1	NO EFFECT	22-8R1	NO EFFECT
21-128	NO EFFECT	21-156	NO EFFECT	22-8R2	NO EFFECT
21-128R1	NO EFFECT	21-157	NO EFFECT	22-9	NO EFFECT
21-129	NO EFFECT	21A158	NO EFFECT	22-10	NO EFFECT
21-129R1	NO EFFECT	21A158R1	NO EFFECT	22-11	NO EFFECT
21-130	NO EFFECT	21-159	NO EFFECT	22-11R1	NO EFFECT
21-130R1	NO EFFECT	21-160	NO EFFECT	22-12	NO EFFECT
21-131	NO EFFECT	21-160R1	NO EFFECT	22-14	NO EFFECT
21-131R1	NO EFFECT	21-163	NO EFFECT	22-18	NO EFFECT
21-132	NO EFFECT	21-166	NO EFFECT	22-20	NO EFFECT
21-133	NO EFFECT	21A167	NO EFFECT	22-22	NO EFFECT
21-134	NO EFFECT	21-168	NO EFFECT	22-22R1	NO EFFECT
21-134R1	NO EFFECT	21-169	NO EFFECT	22-23	NO EFFECT
21-134R2	NO EFFECT	21-170	NO EFFECT	22-24	NO EFFECT



BOEING
COMPONENT
MAINTENANCE MANUAL

SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER
22-25	NO EFFECT	22-55R2	NO EFFECT	22-86	NO EFFECT
22-26	NO EFFECT	22-56	NO EFFECT	22-87	NO EFFECT
22-26R1	NO EFFECT	22-56R1	NO EFFECT	22-88	NO EFFECT
22-27	NO EFFECT	22-57	NO EFFECT	22-88R1	NO EFFECT
22-27R1	NO EFFECT	22-58	NO EFFECT	22-89	NO EFFECT
22-28	NO EFFECT	22-59	NO EFFECT	22-89R1	NO EFFECT
22-29	NO EFFECT	22-60	NO EFFECT	22-90	NO EFFECT
22-30	NO EFFECT	22-60R1	NO EFFECT	22-90R1	NO EFFECT
22-30R1	22-21-31	22-61	NO EFFECT	22A92	NO EFFECT
22-31	NO EFFECT	22-62	NO EFFECT	22-94	NO EFFECT
22-32	NO EFFECT	22-63	NO EFFECT	22-95	NO EFFECT
22-32R1	NO EFFECT	22-63R1	NO EFFECT	22-96	NO EFFECT
22-32R2	NO EFFECT	22-63R2	NO EFFECT	22A97	NO EFFECT
22-34	22-32-22	22-64	NO EFFECT	22A97R1	NO EFFECT
22-35	NO EFFECT	22-64R1	NO EFFECT	22-98	NO EFFECT
22-37	NO EFFECT	22-66	NO EFFECT	22-99	NO EFFECT
22-37R1	NO EFFECT	22-67	NO EFFECT	22-100	NO EFFECT
22-38	NO EFFECT	22-67R1	NO EFFECT	22-101	NO EFFECT
22-38R1	NO EFFECT	22-68	NO EFFECT	22-104	NO EFFECT
22A39	NO EFFECT	22-69	NO EFFECT	22-106	NO EFFECT
22-40	NO EFFECT	22-70	NO EFFECT	22-107	NO EFFECT
22-41	NO EFFECT	22-71	NO EFFECT	22-108	NO EFFECT
22-42	NO EFFECT	22-71R1	NO EFFECT	22-109	NO EFFECT
22-43	NO EFFECT	22-72	NO EFFECT	22-111	NO EFFECT
22-44	NO EFFECT	22-73	22-32-21	22-111R1	NO EFFECT
22-45	NO EFFECT		22-32-41	22-112	NO EFFECT
22-46	NO EFFECT		22-32-44	22-113	NO EFFECT
22-47	NO EFFECT	22-74	NO EFFECT	22-113R1	NO EFFECT
22-48	NO EFFECT	22-75	NO EFFECT	22-113R2	NO EFFECT
22-48R1	NO EFFECT	22-76	NO EFFECT	22-114	NO EFFECT
22-49	NO EFFECT	22-77	NO EFFECT	22-115	NO EFFECT
22-50	NO EFFECT	22-79	NO EFFECT	22-116	NO EFFECT
22-51	NO EFFECT	22-80	NO EFFECT	22-117	NO EFFECT
22-52	NO EFFECT	22-81	22-32-22	22-118	NO EFFECT
22-53	NO EFFECT		22-32-31	22-119	NO EFFECT
22-53R1	NO EFFECT	22-82	NO EFFECT	22-120	NO EFFECT
22-54	NO EFFECT	22-83	NO EFFECT	22-121	NO EFFECT
22-54R1	NO EFFECT	22-84	NO EFFECT	22-122	NO EFFECT
22-55	NO EFFECT	22-84R1	NO EFFECT	22-123	NO EFFECT
22-55R1	NO EFFECT	22-85	NO EFFECT	22-168	NO EFFECT



BOEING
COMPONENT
MAINTENANCE MANUAL

SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER
22-169R1	NO EFFECT	23-31R1	NO EFFECT	23-61	NO EFFECT
23-1	NO EFFECT	23-31R2	NO EFFECT	23-62	NO EFFECT
23-1R1	NO EFFECT	23-32	NO EFFECT	23-62R1	NO EFFECT
23-1R2	NO EFFECT	23-32R1	NO EFFECT	23-63	NO EFFECT
23-1R3	NO EFFECT	23-33	NO EFFECT	23-64	NO EFFECT
23-1R4	NO EFFECT	23-33R1	NO EFFECT	23-64R1	NO EFFECT
23-1R5	NO EFFECT	23-34	NO EFFECT	23-65	NO EFFECT
23-1R6	NO EFFECT	23-34R1	NO EFFECT	23-66	NO EFFECT
23-2	NO EFFECT	23-35	NO EFFECT	23-67	NO EFFECT
23-2R1	NO EFFECT	23-36	NO EFFECT	23-68	NO EFFECT
23-3	NO EFFECT	23-37	NO EFFECT	23-70	NO EFFECT
23-4	NO EFFECT	23-37R1	NO EFFECT	23-72	NO EFFECT
23-5	NO EFFECT	23-38	NO EFFECT	23-73	NO EFFECT
23-7	NO EFFECT	23-39	NO EFFECT	23-73R1	NO EFFECT
23-8	NO EFFECT	23-40	NO EFFECT	23-73R2	NO EFFECT
23-9	NO EFFECT	23-41	NO EFFECT	23-74	NO EFFECT
23-10	NO EFFECT	23-42	NO EFFECT	23-75	NO EFFECT
23-11	23-42-51	23-44	NO EFFECT	23-76	NO EFFECT
23-11R1	23-42-51	23-45	NO EFFECT	23-77	NO EFFECT
23-12	NO EFFECT	23-46	NO EFFECT	23-77R1	NO EFFECT
23-14	NO EFFECT	23-47	NO EFFECT	23-78	NO EFFECT
23-15	NO EFFECT	23-48	NO EFFECT	23-78R1	NO EFFECT
23-16	NO EFFECT	23-48R1	NO EFFECT	23-79	NO EFFECT
23-17	NO EFFECT	23-50	NO EFFECT	23-81	NO EFFECT
23-18	23-42-52	23-52	32-32-10	23-83	NO EFFECT
	23-42-61		32-32-11	23-84	NO EFFECT
23-19	23-42-61		32-32-21	23-85	NO EFFECT
23-20	NO EFFECT		32-32-22	23-85R1	NO EFFECT
23-21	NO EFFECT		32-32-25	23-86	NO EFFECT
23-22	NO EFFECT	23-53	NO EFFECT	23-87	NO EFFECT
23-24	NO EFFECT	23-54	NO EFFECT	23-88	NO EFFECT
23-25	NO EFFECT	23-55	NO EFFECT	23-89	NO EFFECT
23-25R1	NO EFFECT	23-56	NO EFFECT	23-90	NO EFFECT
23-25R2	NO EFFECT	23-56R1	NO EFFECT	23-93	NO EFFECT
23-26	NO EFFECT	23-57	NO EFFECT	23-93R1	NO EFFECT
23-27	NO EFFECT	23-57R1	NO EFFECT	23-94	NO EFFECT
23-29	NO EFFECT	23-58	NO EFFECT	23-95	NO EFFECT
23-30	NO EFFECT	23-59	NO EFFECT	23-96	NO EFFECT
23-30R1	NO EFFECT	23-59R1	NO EFFECT	23-98	NO EFFECT
23-31	NO EFFECT	23-60	NO EFFECT	23-99	NO EFFECT



BOEING
COMPONENT
MAINTENANCE MANUAL

<u>SERVICE BULLETIN NUMBER</u>	<u>CMM NUMBER</u>	<u>SERVICE BULLETIN NUMBER</u>	<u>CMM NUMBER</u>	<u>SERVICE BULLETIN NUMBER</u>	<u>CMM NUMBER</u>
23-100	NO EFFECT	23-138	NO EFFECT	23-175	NO EFFECT
23-101	NO EFFECT	23-139	NO EFFECT	23-176	NO EFFECT
23-102	NO EFFECT	23-141	NO EFFECT	23-177	NO EFFECT
23-103	NO EFFECT	23-142	NO EFFECT	23-178	NO EFFECT
23-103R1	NO EFFECT	23-143	NO EFFECT	23-179	NO EFFECT
23-104	NO EFFECT	23-144	NO EFFECT	23-179R1	NO EFFECT
23-105	NO EFFECT	23-145	NO EFFECT	23-181	NO EFFECT
23-105R1	NO EFFECT	23-146	NO EFFECT	23-182	NO EFFECT
23-105R2	NO EFFECT	23A147	NO EFFECT	23-183	NO EFFECT
23-106	NO EFFECT	23-149	NO EFFECT	23-184	NO EFFECT
23-107	NO EFFECT	23-150	NO EFFECT	23-185	NO EFFECT
23-108	NO EFFECT	23-151	NO EFFECT	23-185R1	NO EFFECT
23-109	NO EFFECT	23-152	NO EFFECT	23-186	NO EFFECT
23-109R1	NO EFFECT	23-152R1	NO EFFECT	23-187	NO EFFECT
23-110	NO EFFECT	23-152R2	NO EFFECT	23-187R1	NO EFFECT
23-111	NO EFFECT	23-153	NO EFFECT	23-188	NO EFFECT
23-112	NO EFFECT	23A154	NO EFFECT	23-189	NO EFFECT
23-115	NO EFFECT	23A155	NO EFFECT	23-189R1	NO EFFECT
23-116	NO EFFECT	23A155R1	NO EFFECT	23-190	NO EFFECT
23-117	NO EFFECT	23A155R2	NO EFFECT	23-191	NO EFFECT
23-119	NO EFFECT	23A156	NO EFFECT	23-192	NO EFFECT
23-121	NO EFFECT	23A156R1	NO EFFECT	23-193	NO EFFECT
23-122	NO EFFECT	23A157	NO EFFECT	23-196	NO EFFECT
23-123	NO EFFECT	23A157R1	NO EFFECT	23-197	NO EFFECT
23-124	NO EFFECT	23-159	NO EFFECT	23-198	NO EFFECT
23-125	NO EFFECT	23-159R1	NO EFFECT	23-199	NO EFFECT
23-126	NO EFFECT	23-160	NO EFFECT	23-202	NO EFFECT
23-126R1	NO EFFECT	23-161	NO EFFECT	23-203	NO EFFECT
23-127	NO EFFECT	23-162	NO EFFECT	23-206	NO EFFECT
23-127R1	NO EFFECT	23-164	NO EFFECT	23-207	NO EFFECT
23-128	NO EFFECT	23-165	NO EFFECT	24-1	NO EFFECT
23-129	NO EFFECT	23-166	NO EFFECT	24-2	NO EFFECT
23-130	NO EFFECT	23-167	NO EFFECT	24-3	NO EFFECT
23-131	NO EFFECT	23-169	NO EFFECT	24-4	NO EFFECT
23-133	NO EFFECT	23-169R1	NO EFFECT	24-5	NO EFFECT
23-134	NO EFFECT	23-170	NO EFFECT	24-6	NO EFFECT
23-134R1	NO EFFECT	23-170R1	NO EFFECT	24-7	NO EFFECT
23-135	NO EFFECT	23-172	NO EFFECT	24-7R1	NO EFFECT
23-136	NO EFFECT	23-173	NO EFFECT	24-8	24--
23A137	NO EFFECT	23-174	NO EFFECT	24A9	NO EFFECT



BOEING

COMPONENT
MAINTENANCE MANUAL

SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER
24A9R1	NO EFFECT	24-43	NO EFFECT	24-69R3	NO EFFECT
24A9R2	NO EFFECT	24-44	NO EFFECT	24-69R4	NO EFFECT
24A9R3	NO EFFECT	24-44R1	NO EFFECT	24-70	NO EFFECT
24-10	NO EFFECT	24-44R2	NO EFFECT	24-70R1	NO EFFECT
24-11	NO EFFECT	24-46	NO EFFECT	24-71	21-44-52
24-13	NO EFFECT	24-46R1	NO EFFECT		21-61-53
24-13R1	NO EFFECT	24-47	NO EFFECT		28-22-52
24-13R2	NO EFFECT	24-49	NO EFFECT		29-11-53
24-13R3	NO EFFECT	24-49R1	NO EFFECT		33-16-52
24-13R4	NO EFFECT	24-50	NO EFFECT		33-16-53
24-13R5	NO EFFECT	24-50R1	NO EFFECT		36-11-54
24-14	NO EFFECT	24-51	NO EFFECT	24-72	NO EFFECT
24-15	NO EFFECT	24-52	NO EFFECT	24-73	NO EFFECT
24-16	NO EFFECT	24-53	NO EFFECT	24-74	24-22-71
24-17	NO EFFECT	24-54	NO EFFECT	24-75	NO EFFECT
24-18	NO EFFECT	24-55	NO EFFECT	24-75R1	NO EFFECT
24-18R1	NO EFFECT	24-56	NO EFFECT	24-76	NO EFFECT
24-18R2	NO EFFECT	24-57	NO EFFECT	24-78	NO EFFECT
24-20	NO EFFECT	24-58	NO EFFECT	24-79	NO EFFECT
24-24	NO EFFECT	24-58R1	NO EFFECT	24-80	NO EFFECT
24-24R1	NO EFFECT	24-58R2	NO EFFECT	24-80R1	NO EFFECT
24-24R2	NO EFFECT	24-58R3	NO EFFECT	24-81	NO EFFECT
24-25	NO EFFECT	24-59	NO EFFECT	24-83	NO EFFECT
24-26	NO EFFECT	24-59R1	NO EFFECT	24-84	NO EFFECT
24-27	NO EFFECT	24-59R2	NO EFFECT	24A85	NO EFFECT
24-29	NO EFFECT	24-59R3	NO EFFECT	24-86	NO EFFECT
24-31	NO EFFECT	24-60	NO EFFECT	24-87	NO EFFECT
24-32	NO EFFECT	24A60R1	NO EFFECT	24-87R1	NO EFFECT
24-32R1	NO EFFECT	24-61	NO EFFECT	24A88	NO EFFECT
24-33	NO EFFECT	24-62	NO EFFECT	24-89	NO EFFECT
24-34	NO EFFECT	24-63	NO EFFECT	24-91	NO EFFECT
24-35	NO EFFECT	24-64	NO EFFECT	24-92	NO EFFECT
24-36	NO EFFECT	24-64R1	NO EFFECT	24-93	NO EFFECT
24-37	NO EFFECT	24-65	NO EFFECT	24-94	NO EFFECT
24-38	NO EFFECT	24-66	NO EFFECT	24-94R1	NO EFFECT
24-38R1	NO EFFECT	24-67	NO EFFECT	24-95	NO EFFECT
24A39	NO EFFECT	24-68	NO EFFECT	24-96	NO EFFECT
24-40	NO EFFECT	24-69	NO EFFECT	24-97	NO EFFECT
24-40R1	NO EFFECT	24-69R1	NO EFFECT	24-98	NO EFFECT
24-41	NO EFFECT	24-69R2	NO EFFECT	24-99	NO EFFECT



BOEING
COMPONENT
MAINTENANCE MANUAL

<u>SERVICE BULLETIN NUMBER</u>	<u>CMM NUMBER</u>	<u>SERVICE BULLETIN NUMBER</u>	<u>CMM NUMBER</u>	<u>SERVICE BULLETIN NUMBER</u>	<u>CMM NUMBER</u>
24-100	NO EFFECT	24-125	NO EFFECT	25-2	NO EFFECT
24-100R1	NO EFFECT	24A126	NO EFFECT	25-2R1	NO EFFECT
24-100R2	NO EFFECT	24A126R1	NO EFFECT	25-5	NO EFFECT
24-103	NO EFFECT	24A127	NO EFFECT	25-6	NO EFFECT
24A104	NO EFFECT	24A128	NO EFFECT	25-8	NO EFFECT
24-105	NO EFFECT	24A128R1	NO EFFECT	25-8R1	NO EFFECT
24-105R1	NO EFFECT	24A128R2	NO EFFECT	25-9	NO EFFECT
24-106	NO EFFECT	24A128R3	NO EFFECT	25-9R1	NO EFFECT
24-107	NO EFFECT	24A129	NO EFFECT	25-9R2	NO EFFECT
24-107R1	NO EFFECT	24-130	NO EFFECT	25-10	25-58-11
24-108	NO EFFECT	24-131	NO EFFECT		25-58-25
24-108R1	NO EFFECT	24-132	NO EFFECT		25-58-26
24-108R2	NO EFFECT	24A134	NO EFFECT		25-58-41
24-109	NO EFFECT	24A134R1	NO EFFECT		25-58-42
24-109R1	NO EFFECT	24A135	NO EFFECT	25-10R1	25-58-11
24-110	NO EFFECT	24-136	NO EFFECT		25-58-25
24A111	NO EFFECT	24-137	NO EFFECT		25-58-26
24A111R1	NO EFFECT	24-138	NO EFFECT		25-58-41
24A112	NO EFFECT	24A139	NO EFFECT		25-58-42
24A112R1	NO EFFECT	24A139R1	NO EFFECT	25-11	25-65-52
24A112R2	NO EFFECT	24-140	NO EFFECT	25-11R1	25-65-52
24A113	NO EFFECT	24A140R1	NO EFFECT	25-11R2	25-65-52
24A113R1	NO EFFECT	24-141	NO EFFECT	25-11R3	25-65-52
24A113R2	NO EFFECT	24-142	NO EFFECT	25-11R4	25-65-52
24-114	NO EFFECT	24-143	NO EFFECT	25-12	25-65-
24-114R1	NO EFFECT	24A144	NO EFFECT	25A13	NO EFFECT
24-115	NO EFFECT	24A144R1	NO EFFECT	25A13R1	NO EFFECT
24-116	NO EFFECT	24A145	NO EFFECT	25-14	NO EFFECT
24-116R1	NO EFFECT	24A146	NO EFFECT	25-14R1	NO EFFECT
24-117	NO EFFECT	24-147	NO EFFECT	25-15	NO EFFECT
24-117R1	NO EFFECT	24-154	NO EFFECT	25-15R1	NO EFFECT
24-118	NO EFFECT	24-156	NO EFFECT	25-17	NO EFFECT
24-119	NO EFFECT	24-157	NO EFFECT	25-17R1	NO EFFECT
24-119R1	NO EFFECT	24-158	NO EFFECT	25-18	NO EFFECT
24A119R2	NO EFFECT	24-159	24-33-72	25-19	NO EFFECT
24A120	NO EFFECT	24-159R1	24-33-72	25-20	NO EFFECT
24-121	NO EFFECT	24A0139R1	NO EFFECT	25-21	NO EFFECT
24-122	24-33-72	24A0141R1	NO EFFECT	25-22	NO EFFECT
24-123	NO EFFECT	24A146	NO EFFECT	25-23	25-25-03
24-124	NO EFFECT	25-1	NO EFFECT	25-23R1	25-25-03

SERVICE BULLETIN LIST



BOEING

COMPONENT
MAINTENANCE MANUAL

SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER
25-24	NO EFFECT	25-45	NO EFFECT	25A71	25-66-04
25-26	NO EFFECT	25A46	NO EFFECT	25A71R1	25-66-04
25-26R1	NO EFFECT	25A46R1	NO EFFECT	25-71R2	25-66-11
25-27	25-53-11	25A46R2	NO EFFECT	25-72	NO EFFECT
25-27R1	25-53-05	25-47	25-28-XX	25-74	NO EFFECT
25-28	25-65-51	25-47R1	25-28-XX	25-75	NO EFFECT
25-28R1	25-65-51	25-48	NO EFFECT	25-76	NO EFFECT
25-29	25-65-51	25-49	NO EFFECT	25-77	NO EFFECT
25-30	NO EFFECT	25-49R1	NO EFFECT	25-77R1	NO EFFECT
25-30R1	NO EFFECT	25-50	NO EFFECT	25-77R2	NO EFFECT
25-31	25-53-11	25-51	25-65-62	25-77R3	NO EFFECT
	25-53-25	25-51R1	25-65-62	25-77R4	NO EFFECT
	25-53-26	25-51R2	25-65-62	25-77R5	NO EFFECT
	25-53-41	25-52	NO EFFECT	25-77R6	NO EFFECT
	25-53-42	25-53	25-23-02	25-78	25-28-09
25-32	NO EFFECT	25-54	25-53-15		25-28-10
25-33	NO EFFECT	25-55	NO EFFECT		25-28-11
25-33R1	NO EFFECT	25-57	NO EFFECT		25-28-13
25-34	NO EFFECT	25-58	NO EFFECT		25-28-14
25-34R1	NO EFFECT	25-59	NO EFFECT		25-28-15
25-35	NO EFFECT	25-60	NO EFFECT		25-28-16
25-36	51-11-21	25-61	NO EFFECT		25-28-17
	52-11-01	25-62	NO EFFECT		25-28-33
25-36R1	50-11-21	25-63	NO EFFECT		25-28-34
	52-11-01	25-63R1	NO EFFECT		25-28-51
25-36R2	51-11-21	25-64	NO EFFECT	25-78R1	25-28-09
	52-11-21	25A65	NO EFFECT		25-28-10
25-37	NO EFFECT	25-66	NO EFFECT		25-28-11
25-37R1	NO EFFECT	25A67	NO EFFECT		25-28-13
25-37R2	NO EFFECT	25A67R1	NO EFFECT		25-28-14
25-38	NO EFFECT	25-68	25-53-17		25-28-15
25-39	NO EFFECT		25-53-49		25-28-16
25-39R1	NO EFFECT	25-69	NO EFFECT		25-28-17
25-40	NO EFFECT	25-69R1	NO EFFECT		25-28-33
25-40R1	NO EFFECT	25-70	22-53-05		25-28-34
25-41	NO EFFECT		25-53-14		25-28-51
25-41R1	NO EFFECT	25-70R1	22-53-05	25-78R2	25-28-09
25-42	NO EFFECT		25-53-14		25-28-10
25-43	NO EFFECT	25-70R2	22-53-05		25-28-11
25-44	NO EFFECT		25-53-14		25-28-13



BOEING
COMPONENT
MAINTENANCE MANUAL

SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER
25-78R2	25-28-14	25A104R1	25-65-62	25-128R1	NO EFFECT
	25-28-15	25A104R2	25-65-62	25-129	NO EFFECT
	25-28-16	25A104R3	25-65-62	25-130	NO EFFECT
	25-28-17	25-105	NO EFFECT	25A131	NO EFFECT
	25-28-33	25-106	NO EFFECT	25A131R1	NO EFFECT
	25-28-34	25A109	NO EFFECT	25A131R2	NO EFFECT
	25-28-51	25A109R1	NO EFFECT	25A131R3	NO EFFECT
25-78R3	25-28-	25A109R2	NO EFFECT	25A131R4	NO EFFECT
25-78R4	25-28-	25-110	NO EFFECT	25-132	NO EFFECT
25-79	NO EFFECT	25-112	NO EFFECT	25A133	NO EFFECT
25-79R1	NO EFFECT	25-112R1	NO EFFECT	25A133R1	NO EFFECT
25-80	25-53-25	25-113	NO EFFECT	25-134	NO EFFECT
	25-53-26	25-113R1	NO EFFECT	25A135	NO EFFECT
25-81	NO EFFECT	25-113R2	NO EFFECT	25A135R1	NO EFFECT
25-82	NO EFFECT	25-113R3	NO EFFECT	25-137	NO EFFECT
25-83	NO EFFECT	25-113R4	NO EFFECT	25-137R1	NO EFFECT
25-84	NO EFFECT	25-113R5	NO EFFECT	25-137R2	NO EFFECT
25-85	NO EFFECT	25-114	25-23-10	25-137R3	NO EFFECT
25-86	NO EFFECT	25-115	NO EFFECT	25-138	25--
25-87	NO EFFECT	25-116	NO EFFECT	25-138R1	25--
25-88	NO EFFECT	25-116R1	NO EFFECT	25-139	52-11-04
25-89	NO EFFECT	25-116R2	NO EFFECT		52-11-06
25-90	NO EFFECT	25A116R3	NO EFFECT	25-139R1	52-11-04
25-91	NO EFFECT	25-117	NO EFFECT		52-11-06
25A92	NO EFFECT	25-118	NO EFFECT	25-140	NO EFFECT
25-93	NO EFFECT	25-119	NO EFFECT	25-142	NO EFFECT
25-94	NO EFFECT	25-120	NO EFFECT	25-143	NO EFFECT
25-95	25-53-02	25-120R1	NO EFFECT	25-144	NO EFFECT
25-95R1	25-53-02	25-120R2	NO EFFECT	25-145	NO EFFECT
25-96	NO EFFECT	25-120R3	NO EFFECT	25-145R1	NO EFFECT
25-96R1	NO EFFECT	25-121	NO EFFECT	25-146	25-65-51
25-97	NO EFFECT	25-123	NO EFFECT	25-147	25-53-02
25-98	NO EFFECT	25-123R1	NO EFFECT	25-148	NO EFFECT
25A99	NO EFFECT	25-124	NO EFFECT	25-149	NO EFFECT
25-100	NO EFFECT	25-125	NO EFFECT	25-150	NO EFFECT
25-101	NO EFFECT	25-125R1	NO EFFECT	25-151	NO EFFECT
25-102	25-28-02	25-125R2	NO EFFECT	25-152	NO EFFECT
	25-28-42	25-126	NO EFFECT	25-152R1	NO EFFECT
25A103	NO EFFECT	25A127	NO EFFECT	25-153	NO EFFECT
25A104	25-65-62	25-128	25-23-08	25-155	NO EFFECT

SERVICE BULLETIN LIST



BOEING

COMPONENT
MAINTENANCE MANUAL

SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER
25-156	NO EFFECT	25-189	NO EFFECT	25-220	NO EFFECT
25-158	25-23-08	25-190	NO EFFECT	25-221	NO EFFECT
25-158R1	25-23-08	25-191	NO EFFECT	25-222	NO EFFECT
25-158R2	25-23-08	25-191R1	NO EFFECT	25-223	NO EFFECT
25-158R3	25-23-08	25-192	NO EFFECT	25-223R1	NO EFFECT
25-159	NO EFFECT	25-193	NO EFFECT	25-224	NO EFFECT
25-160	NO EFFECT	25-193R1	NO EFFECT	25-224R1	NO EFFECT
25-160R1	NO EFFECT	25-196	NO EFFECT	25-225	NO EFFECT
25-161	NO EFFECT	25-197	NO EFFECT	25-227	NO EFFECT
25-163	NO EFFECT	25-198	NO EFFECT	25-228	NO EFFECT
25-164	NO EFFECT	25-198R1	NO EFFECT	25-230	NO EFFECT
25-165	NO EFFECT	25-198R2	NO EFFECT	25-231	NO EFFECT
25-166	NO EFFECT	25-198R3	NO EFFECT	25-235	NO EFFECT
25-167	NO EFFECT	25-199	NO EFFECT	25-237	NO EFFECT
25-168	NO EFFECT	25-201	NO EFFECT	25-238	NO EFFECT
25-168R1	NO EFFECT	25-202	NO EFFECT	25-239	NO EFFECT
25-169	NO EFFECT	25-206	NO EFFECT	25A239R1	NO EFFECT
25-170	NO EFFECT	25-206R1	NO EFFECT	25-240	NO EFFECT
25-170R1	NO EFFECT	25-206R2	NO EFFECT	25-241	NO EFFECT
25-170R2	NO EFFECT	25-207	NO EFFECT	25A242	NO EFFECT
25-173	NO EFFECT	25-208	NO EFFECT	25A242R1	NO EFFECT
25A173	NO EFFECT	25A208R1	NO EFFECT	25-243	NO EFFECT
25A174	25-65-55	25-209	NO EFFECT	25-244	NO EFFECT
25A174R1	25-65-55	25-210	NO EFFECT	25-244R1	NO EFFECT
25-175	25-28-03	25-211	NO EFFECT	25-244R2	NO EFFECT
25-178	NO EFFECT	25-211R1	NO EFFECT	25-246	NO EFFECT
25-178R1	NO EFFECT	25-212	NO EFFECT	25-247	NO EFFECT
25-178R2	NO EFFECT	25-212R1	NO EFFECT	25-247R1	NO EFFECT
25-179	NO EFFECT	25-212R2	NO EFFECT	25-248	NO EFFECT
25-180	NO EFFECT	25-212R3	NO EFFECT	25-248R2	NO EFFECT
25-180R1	NO EFFECT	25-212R4	NO EFFECT	25-250	NO EFFECT
25-180R2	NO EFFECT	25-212R5	NO EFFECT	25-251	NO EFFECT
25-180R3	NO EFFECT	25-212R6	NO EFFECT	25-252	NO EFFECT
25-180R4	NO EFFECT	25-213	NO EFFECT	25-253	NO EFFECT
25-180R5	NO EFFECT	25-215	NO EFFECT	25-254	NO EFFECT
25-181	NO EFFECT	25-216	NO EFFECT	25-255	NO EFFECT
25-182	NO EFFECT	25-216R1	NO EFFECT	25-256	NO EFFECT
25-183	NO EFFECT	25-217	NO EFFECT	25-257	NO EFFECT
25-185	NO EFFECT	25-218	25-65-51	25-258	NO EFFECT
25-186	NO EFFECT	25-219	NO EFFECT	25A259	NO EFFECT



BOEING
COMPONENT
MAINTENANCE MANUAL

<u>SERVICE BULLETIN NUMBER</u>	<u>CMM NUMBER</u>	<u>SERVICE BULLETIN NUMBER</u>	<u>CMM NUMBER</u>	<u>SERVICE BULLETIN NUMBER</u>	<u>CMM NUMBER</u>
25A260	NO EFFECT	25-289	NO EFFECT	25-325R2	52-51-03
25-260R1	NO EFFECT	25-290	NO EFFECT		52-51-04
25A260R2	NO EFFECT	25-290R1	NO EFFECT	25-325R3	33-11-72
25A260R3	NO EFFECT	25-290R2	NO EFFECT		52-51-03
25-261	NO EFFECT	25-290R3	NO EFFECT		52-51-04
25-262	NO EFFECT	25-290R4	NO EFFECT	25-325R4	33-11-72
25-262R1	NO EFFECT	25A291	NO EFFECT		52-51-03
25-263	NO EFFECT	25-296	NO EFFECT		52-51-04
25-264	NO EFFECT	25-297	NO EFFECT	25-325R5	33-11-72
25A265	NO EFFECT	25-297R1	NO EFFECT		52-51-03
25-265R1	NO EFFECT	25-298	NO EFFECT		52-51-04
25-266	NO EFFECT	25-299	NO EFFECT	25-325R6	33-11-72
25-267	NO EFFECT	25A300	NO EFFECT		52-51-03
25A268	NO EFFECT	25A300R1	NO EFFECT		52-51-04
25-269	NO EFFECT	25A300R2	NO EFFECT	25-325R7	33-11-72
25-270	NO EFFECT	25A301	NO EFFECT		52-51-03
25-271	NO EFFECT	25-302	NO EFFECT		52-51-04
25A272	NO EFFECT	25-303	NO EFFECT	25-325R8	33-11-72
25-274	NO EFFECT	25-304	NO EFFECT		52-51-03
25A275	NO EFFECT	25-306	NO EFFECT		52-51-04
25A275R1	NO EFFECT	25-307	NO EFFECT	25-325R9	33-11-72
25A275R2	NO EFFECT	25-310	NO EFFECT		52-51-03
25A275R3	NO EFFECT	25-311	NO EFFECT		52-51-04
25-276	NO EFFECT	25-312	NO EFFECT	25-325R10	33-11-72
25-276R1	NO EFFECT	25-312R1	NO EFFECT		52-51-03
25-277	NO EFFECT	25-313	NO EFFECT		52-51-04
25-278	NO EFFECT	25-317	25--	25-325R11	33-11-72
25-279	NO EFFECT	25-319	NO EFFECT		52-51-03
25-279R1	NO EFFECT	25-320	NO EFFECT		52-51-04
25-282	NO EFFECT	25A322	NO EFFECT	25-325R12	33-11-72
25-283	NO EFFECT	25A322R1	NO EFFECT		52-51-03
25-284	NO EFFECT	25A323	NO EFFECT		52-51-04
25A285	NO EFFECT	25A323R1	NO EFFECT	25-325R13	33-11-72
25A285R1	NO EFFECT	25-325	33-11-72		52-51-03
25-286	NO EFFECT		52-51-03		52-51-04
25-287	NO EFFECT		52-51-04	25-325R14	33-11-72
25-288	NO EFFECT	25-325R1	33-11-72		52-51-03
25-288R1	NO EFFECT		52-51-03		52-51-04
25-288R2	NO EFFECT		52-51-04	25-325R15	33-11-72
25-288R3	NO EFFECT	25-325R2	33-11-72		52-51-03

SERVICE BULLETIN LIST



BOEING

COMPONENT
MAINTENANCE MANUAL

SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER
25-325R15	52-51-04	25-334	NO EFFECT	25-368R1	NO EFFECT
25-325R16	33-11-72	25-334R1	NO EFFECT	25-372	NO EFFECT
	52-51-03	25-335	NO EFFECT	25-373	NO EFFECT
	52-51-04	25-336	NO EFFECT	25-374	NO EFFECT
25-326	NO EFFECT	25-336R1	NO EFFECT	25-375	NO EFFECT
25-327	20-60-	25-338	NO EFFECT	25-378	NO EFFECT
	33-11-	25-339	NO EFFECT	25-378R1	NO EFFECT
	52-51-	25-340	NO EFFECT	25-378R2	NO EFFECT
25-327R1	20-60-	25-341	NO EFFECT	25-379	NO EFFECT
	33-11-	25-342	NO EFFECT	25-380	NO EFFECT
	52-51-	25-343	NO EFFECT	25-388	NO EFFECT
25-327R2	20-60-	25-344	NO EFFECT	25A390	NO EFFECT
	33-11-	25-344R1	NO EFFECT	25A0260R1	NO EFFECT
	52-51-	25-345	NO EFFECT	25-0309	NO EFFECT
25-327R3	33-11-	25-345R1	NO EFFECT	25A0390	NO EFFECT
	52-51-	25-346	NO EFFECT	26-1	NO EFFECT
25-327R4	33-11-	25-347	NO EFFECT	26-1R1	NO EFFECT
	52-51-	25-348	NO EFFECT	26-2	NO EFFECT
25-328	NO EFFECT	25-348R1	NO EFFECT	26-2R1	NO EFFECT
25-332	33-11-	25-348R2	NO EFFECT	26-2R2	NO EFFECT
	52-51-	25-350	NO EFFECT	26-3	NO EFFECT
25-332R1	33-11-	25-351	NO EFFECT	26-4	NO EFFECT
	52-51-	25-352	NO EFFECT	26-5	NO EFFECT
25-332R2	33-11-	25-353	NO EFFECT	26-6	NO EFFECT
	52-51-	25-355	NO EFFECT	26-6R1	NO EFFECT
25-332R3	20-60-	25-355R1	NO EFFECT	26-6R2	NO EFFECT
	33-11-	25-355R2	NO EFFECT	26-6R3	NO EFFECT
	52-51-	25-356	NO EFFECT	26-7	NO EFFECT
25-332R4	33-11-	25-357	NO EFFECT	26-7R1	NO EFFECT
	52-51-	25-358	NO EFFECT	26-8	NO EFFECT
25-332R5	33-11-	25-360	NO EFFECT	26-9	NO EFFECT
	52-51-	25-361	NO EFFECT	26-10	NO EFFECT
25-332R6	33-11-	25-361R1	NO EFFECT	26-11	NO EFFECT
	52-51-	25-362	NO EFFECT	26-12	NO EFFECT
25-332R7	33-11-	25-362R1	NO EFFECT	26-13	NO EFFECT
	52-51-	25-363	NO EFFECT	26-14	NO EFFECT
25-332R8	33-11-	25-364	NO EFFECT	26-14R1	NO EFFECT
	52-51-	25-366	NO EFFECT	26-14R2	NO EFFECT
25-332R9	33-11-	25-367	NO EFFECT	26-14R3	32-21-25
	52-51-	25-368	NO EFFECT	26-15	NO EFFECT



BOEING
COMPONENT
MAINTENANCE MANUAL

SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER
26-15R1	NO EFFECT	26-43	NO EFFECT	26-66	NO EFFECT
26-16	NO EFFECT	26-43R1	NO EFFECT	26-66R1	NO EFFECT
26-16R1	NO EFFECT	26-44	NO EFFECT	26-67	26-15-56
26-16R2	NO EFFECT	26-44R1	NO EFFECT		26-21-53
26-16R3	NO EFFECT	26-44R2	NO EFFECT	26A68	NO EFFECT
26-17	NO EFFECT	26-45	NO EFFECT	26A68R1	NO EFFECT
26-18	NO EFFECT	26-45R1	NO EFFECT	26A68R2	NO EFFECT
26A19	NO EFFECT	26-45R2	NO EFFECT	26A68R3	NO EFFECT
26A19R1	NO EFFECT	26-46	NO EFFECT	26A68R4	NO EFFECT
26A19R2	NO EFFECT	26-46R1	NO EFFECT	26-70	26-15-5X
26A21	NO EFFECT	26-47	NO EFFECT	26-70R1	26-15-5X
26A21R1	NO EFFECT	26-48	NO EFFECT	26-71	NO EFFECT
26-22	NO EFFECT	26-48R1	NO EFFECT	26-72	NO EFFECT
26-22R1	NO EFFECT	26-48R2	NO EFFECT	26A74	NO EFFECT
26-23	NO EFFECT	26-49	NO EFFECT	26A75	NO EFFECT
26-23R1	NO EFFECT	26-49R1	NO EFFECT	26A75R1	NO EFFECT
26-24	NO EFFECT	26-49R2	NO EFFECT	26-76	NO EFFECT
26-25	NO EFFECT	26-50	NO EFFECT	26-76R1	NO EFFECT
26-25R1	NO EFFECT	26-50R1	NO EFFECT	26-77	NO EFFECT
26-25R2	NO EFFECT	26-51	NO EFFECT	26-78	NO EFFECT
26-27	NO EFFECT	26-51R1	NO EFFECT	26-78R1	NO EFFECT
26-28	NO EFFECT	26-54	NO EFFECT	26-78R2	NO EFFECT
26-29	NO EFFECT	26-55	NO EFFECT	26-79	NO EFFECT
26-29R1	NO EFFECT	26-56	NO EFFECT	26-80	NO EFFECT
26-30	NO EFFECT	26-56R1	NO EFFECT	26-80R1	NO EFFECT
26-31	NO EFFECT	26-57	NO EFFECT	26-80R2	NO EFFECT
26-33	NO EFFECT	26-57R1	NO EFFECT	26-80R3	NO EFFECT
26-33R1	NO EFFECT	26-57R2	NO EFFECT	26A81	NO EFFECT
26-33R2	NO EFFECT	26-57R3	NO EFFECT	26-82	NO EFFECT
26-34	NO EFFECT	26-58	NO EFFECT	26-83	NO EFFECT
26-35	NO EFFECT	26-58R1	NO EFFECT	26-83R1	NO EFFECT
26A36	NO EFFECT	26-58R2	26-15-XX	26-83R2	NO EFFECT
26A36R1	NO EFFECT	26A59	NO EFFECT	26-83R3	NO EFFECT
26-37	NO EFFECT	26A59R1	NO EFFECT	26-84	NO EFFECT
26-37R1	NO EFFECT	26A59R2	NO EFFECT	26-84R1	NO EFFECT
26-37R2	NO EFFECT	26-60	NO EFFECT	26-86	NO EFFECT
26-37R3	NO EFFECT	26-63	NO EFFECT	26-87	NO EFFECT
26-39	NO EFFECT	26-64	26-15-41	26-88	NO EFFECT
26-40	NO EFFECT	26-65	NO EFFECT	26A89	NO EFFECT
26-42	NO EFFECT	26-65R1	NO EFFECT	26-90	NO EFFECT

SERVICE BULLETIN LIST



BOEING

COMPONENT
MAINTENANCE MANUAL

SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER
26-91	NO EFFECT	26-126R2	NO EFFECT	27-26R1	NO EFFECT
26-92	NO EFFECT	26-126R3	NO EFFECT	27-26R2	NO EFFECT
26-92R1	NO EFFECT	26A127	NO EFFECT	27-27	NO EFFECT
26-92R2	NO EFFECT	26-128	NO EFFECT	27-27R1	NO EFFECT
26-94	NO EFFECT	26-129	NO EFFECT	27-27R2	NO EFFECT
26-95	NO EFFECT	26A130	NO EFFECT	27-27R3	NO EFFECT
26-95R1	NO EFFECT	26-0113	NO EFFECT	27-27R4	NO EFFECT
26-97	NO EFFECT	27-1	NO EFFECT	27-28	NO EFFECT
26-98	NO EFFECT	27-1R1	NO EFFECT	27-29	27-11-08
26-99	NO EFFECT	27-2	NO EFFECT	27-29R1	27-11-08
26-100	NO EFFECT	27-5	NO EFFECT	27-30	NO EFFECT
26A103	NO EFFECT	27-6	NO EFFECT	27-32	27-31-
26A103R1	NO EFFECT	27-7	NO EFFECT	27A33	57-70-11
26-105	NO EFFECT	27-8	NO EFFECT	27A33R1	57-70-11
26-106	NO EFFECT	27-9	NO EFFECT	27-34	NO EFFECT
26-106R1	NO EFFECT	27-10	NO EFFECT	27-35	NO EFFECT
26-107	NO EFFECT	27-11	27-21-41	27-36	27-51-01
26-108	NO EFFECT	27-12	57-60-51		27-51-11
26-109	NO EFFECT	27-13	NO EFFECT	27-36R1	NO EFFECT
26-111	NO EFFECT	27-14	NO EFFECT	27-37	27-00-11
26A112	NO EFFECT	27-15	27-21-41	27-39	NO EFFECT
26-113	NO EFFECT		27-21-59	27-40	27-51-14
26-113R1	NO EFFECT	27-15R1	17-21-40	27-41	NO EFFECT
26-114	NO EFFECT		17-21-59	27-42	NO EFFECT
26-114R1	NO EFFECT		27-21-41	27-43	NO EFFECT
26-115	NO EFFECT	27-16	27-81-11	27-44	NO EFFECT
26-116	NO EFFECT		27-81-61	27-46	NO EFFECT
26A117	NO EFFECT	27-17	NO EFFECT	27-47	NO EFFECT
26-118	NO EFFECT	27-18	27-28-51	27-47R1	NO EFFECT
26-118R1	NO EFFECT	27-19	NO EFFECT	27-48	NO EFFECT
26-118R2	NO EFFECT	27-20	27-21-11	27-48R1	NO EFFECT
26A119	NO EFFECT	27-21	NO EFFECT	27-48R2	NO EFFECT
26A119R1	NO EFFECT	27-22	27-31-11	27-49	NO EFFECT
26-120	NO EFFECT	27-23	NO EFFECT	27-50	NO EFFECT
26A121	NO EFFECT	27-23R1	NO EFFECT	27-52	27-00-11
26A123	NO EFFECT	27-23R2	NO EFFECT		27-31-64
26-124	NO EFFECT	27-24	NO EFFECT		27-31-66
26-125	NO EFFECT	27-24R1	NO EFFECT		55-20-12
26-126	NO EFFECT	27-25	NO EFFECT		55-20-22
26-126R1	NO EFFECT	27-26	NO EFFECT	27-52R1	27-00-11



BOEING

COMPONENT
MAINTENANCE MANUAL

SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER
27-52R1	27-31-64	27-68	27-81-51	27-80R1	57-53-51
	27-31-66	27-68R1	27-81-01		57-70-11
	55-20-12		27-81-51		57-70-51
	55-20-22	27-68R2	27-81-01	27-80R2	27-51-84
27-52R2	27-00-11		27-81-51		27-51-86
	27-31-64	27-69	27-51-51		27-51-89
	27-31-66	27-70	NO EFFECT		27-51-96
	55-20-12	27A71	NO EFFECT		27-51-97
	55-20-22	27A71R1	NO EFFECT		27-51-98
27-52R3	27-00-11	27A71R2	NO EFFECT		57-53-21
	27-31-64	27-72	27-11-08		57-53-31
	27-31-66	27-72R1	27-11-08		57-53-51
	55-20-12	27-73	27-21-43		57-70-11
	55-20-22	27-73R1	27-21-43		57-70-51
27-54	NO EFFECT	27A74	NO EFFECT	27-81	NO EFFECT
27-55	27-21-62	27A74R1	NO EFFECT	27-82	NO EFFECT
27-55R1	27-21-62	27-75	NO EFFECT	27-83	NO EFFECT
27-56	NO EFFECT	27A75R1	NO EFFECT	27-85	NO EFFECT
27A57	NO EFFECT	27-76	NO EFFECT	27-85R1	NO EFFECT
27A57R1	NO EFFECT	27-76R1	NO EFFECT	27-86	NO EFFECT
27-58	NO EFFECT	27-78	NO EFFECT	27-89	27-09-57
27-58R1	27-51-61	27-79	NO EFFECT	27-90	27-41-35
	27-58-11	27-80	27-51-84	27-92	NO EFFECT
27-58R2	27-51-61		27-51-86	27-92R1	NO EFFECT
	27-58-11		27-51-96	27-92R2	NO EFFECT
27-59	NO EFFECT		27-51-97	27-92R3	NO EFFECT
27-59R1	NO EFFECT		27-51-98	27-93	NO EFFECT
27-60	NO EFFECT		57-53-21	27-93R1	NO EFFECT
27-61	NO EFFECT		57-53-31	27A94	NO EFFECT
27A62	27-11-07		57-53-51	27A94R1	NO EFFECT
	27-11-08		57-70-11	27A94R2	NO EFFECT
27A62R1	27-11-07		57-70-51	27A94R3	NO EFFECT
27-63	NO EFFECT	27-80R1	27-51-84	27A94R4	NO EFFECT
27A64	NO EFFECT		27-51-86	27A94R5	NO EFFECT
27A64R1	NO EFFECT		27-51-89	27A95	27-81-12
27-64R2	NO EFFECT		27-51-96		27-81-61
27-65	NO EFFECT		27-51-97	27A95R1	27-81-12
27-66	27-09-11		27-51-98		27-81-61
27-67	NO EFFECT		57-53-21	27A95R2	27-81-12
27-68	27-81-01		57-53-31		27-81-61


BOEING
 COMPONENT
 MAINTENANCE MANUAL

<u>SERVICE BULLETIN NUMBER</u>	<u>CMM NUMBER</u>	<u>SERVICE BULLETIN NUMBER</u>	<u>CMM NUMBER</u>	<u>SERVICE BULLETIN NUMBER</u>	<u>CMM NUMBER</u>
27A95R3	27-81-12	27A112R1	NO EFFECT	27A137R1	NO EFFECT
	27-81-61	27-113	NO EFFECT	27A137R2	NO EFFECT
27-95R4	27-81-12	27-115	27-51-10	27-138	NO EFFECT
	27-81-61	27-115R1	27-51-10	27A140	NO EFFECT
27A95R5	27-81-12	27-115R2	27-51-10	27A140R1	NO EFFECT
	27-81-61	27-116	NO EFFECT	27A140R2	NO EFFECT
27-96	27-51-14	27-117	NO EFFECT	27A140R3	NO EFFECT
27-96R1	27-51-14	27A118	NO EFFECT	27-142	27-11-26
27-96R2	27-51-14	27A118R1	NO EFFECT	27-143	NO EFFECT
27-96R3	27-51-14	27-119	NO EFFECT	27-144	32-11-19
27-97	27-58-51	27-120	27-51-50	27-145	NO EFFECT
27-98	27-32-52	27-121	27-31-37	27-145R1	NO EFFECT
27-98R1	27-32-52	27-121R1	27-31-37	27-146	NO EFFECT
27A99	NO EFFECT	27A122	NO EFFECT	27-147	NO EFFECT
27-100	NO EFFECT	27A122R1	NO EFFECT	27-148	NO EFFECT
27-100R1	NO EFFECT	27-123	NO EFFECT	27A151	NO EFFECT
27-101	NO EFFECT	27-125	NO EFFECT	27A151R1	NO EFFECT
27-101R1	NO EFFECT	27-126	NO EFFECT	27A151R2	NO EFFECT
27-102	NO EFFECT	27-126R1	NO EFFECT	27A151R3	NO EFFECT
27-103	NO EFFECT	27-127	NO EFFECT	27A151R4	NO EFFECT
27-103R1	NO EFFECT	27-128	27-11-11	27-152	NO EFFECT
27-104	NO EFFECT		27-11-16	27-154	57-53-31
27-104R1	NO EFFECT		27-11-20	27-154R1	57-53-31
27-104R2	NO EFFECT	27-128R1	27-11-11	27A155	NO EFFECT
27-105	NO EFFECT		27-11-16	27A155R1	NO EFFECT
27-105R1	NO EFFECT		27-11-20	27A155R2	NO EFFECT
27-106	NO EFFECT	27-128R2	NO EFFECT	27A155R3	NO EFFECT
27-107	NO EFFECT	27-129	27-31-64	27A156	NO EFFECT
27-108	27-51-61		27-31-66	27-157	NO EFFECT
27-108R1	27-51-61	27A130	NO EFFECT	27A159	NO EFFECT
27-108R2	27-51-61	27A130R1	NO EFFECT	27A159R1	NO EFFECT
27-108R3	27-51-61	27-131	NO EFFECT	27A160	32-11-
	27-81-55	27A132	NO EFFECT	27A160R1	32-11-
	27-81-82	27-132R1	NO EFFECT	27-162	NO EFFECT
27-109	NO EFFECT	27-133	NO EFFECT	27-165	NO EFFECT
27A110	27-81-03	27-134	NO EFFECT	27A166	NO EFFECT
27A110R1	27-81-03	27-135	NO EFFECT	27A167	NO EFFECT
27-111	27-41-51	27A136	NO EFFECT	27A167R1	NO EFFECT
27-111R1	27-41-51	27A136R1	NO EFFECT	27A167R2	NO EFFECT
27A112	NO EFFECT	27A137	NO EFFECT	27A168	NO EFFECT



BOEING
COMPONENT
MAINTENANCE MANUAL

SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER
27A169	NO EFFECT	27A0166	NO EFFECT	28-27R1	NO EFFECT
27-170	NO EFFECT	27A0166R1	NO EFFECT	28-29	NO EFFECT
27-171	NO EFFECT	27-1210	NO EFFECT	28A29	NO EFFECT
27-172	NO EFFECT	28A1	NO EFFECT	28-30	NO EFFECT
27-173	NO EFFECT	28A1R1	NO EFFECT	28-31	NO EFFECT
27A175	27-11-26	28A1R2	NO EFFECT	28-32	NO EFFECT
27A175R1	27-11-	28-2	NO EFFECT	28-33	NO EFFECT
27A175R2	27-11-	28-3	NO EFFECT	28-34	NO EFFECT
27A176	NO EFFECT	28A5	NO EFFECT	28-34R1	NO EFFECT
27A176R1	NO EFFECT	28A5R1	NO EFFECT	28-34R2	NO EFFECT
27-177	NO EFFECT	28A5R2	NO EFFECT	28-34R3	NO EFFECT
27-178	NO EFFECT	28A5R3	NO EFFECT	28-35	NO EFFECT
27-180	NO EFFECT	28-7	NO EFFECT	28-35R1	NO EFFECT
27-181	NO EFFECT	28-7R1	NO EFFECT	28A36	NO EFFECT
27-181R1	NO EFFECT	28-8	NO EFFECT	28A36R1	NO EFFECT
27-182	NO EFFECT	28-8R1	NO EFFECT	28A36R2	NO EFFECT
27-182R1	NO EFFECT	28A9	NO EFFECT	28A36R3	NO EFFECT
27A183	NO EFFECT	28A9R1	NO EFFECT	28A37	NO EFFECT
27-184	NO EFFECT	28-10	NO EFFECT	28-38	NO EFFECT
27-184R1	NO EFFECT	28-11	NO EFFECT	28-38R1	NO EFFECT
27A185	NO EFFECT	28-11R1	NO EFFECT	28-38R2	NO EFFECT
27-188	27-51-48	28-12	NO EFFECT	28-40	NO EFFECT
27-189	NO EFFECT	28-13	NO EFFECT	28-41	NO EFFECT
27-190	NO EFFECT	28-13R1	NO EFFECT	28-42	NO EFFECT
27-190R2	NO EFFECT	28-14	NO EFFECT	28-43	NO EFFECT
27-191	NO EFFECT	28-15	NO EFFECT	28-43R1	NO EFFECT
27-191R1	NO EFFECT	28-16	NO EFFECT	28-43R2	NO EFFECT
27-191R2	NO EFFECT	28-17	NO EFFECT	28-44	NO EFFECT
27A192	NO EFFECT	28-18	NO EFFECT	28-44R1	NO EFFECT
27A192R1	NO EFFECT	28-18R1	NO EFFECT	28A45	NO EFFECT
27A193	NO EFFECT	28A19	NO EFFECT	28A45R1	NO EFFECT
27A194	NO EFFECT	28A20	28-X0-XX	28A45R2	NO EFFECT
27A194R1	NO EFFECT	28-22	NO EFFECT	28-46	NO EFFECT
27A195	NO EFFECT	28-23	NO EFFECT	28-47	NO EFFECT
27A195R1	NO EFFECT	28-24	NO EFFECT	28-48	NO EFFECT
27-196	27-51-	28-24R1	NO EFFECT	28A50	NO EFFECT
27-199	NO EFFECT	28-24R2	NO EFFECT	28A50R1	NO EFFECT
27-204	NO EFFECT	28-25	NO EFFECT	28-51	NO EFFECT
27-205	NO EFFECT	28-25R1	NO EFFECT	28-51R1	NO EFFECT
27A0159	NO EFFECT	28-27	NO EFFECT	28-51R2	NO EFFECT



BOEING

COMPONENT
MAINTENANCE MANUAL

SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER
28-52	NO EFFECT	29-3	29-11-45	29-30R2	NO EFFECT
28A53	NO EFFECT	29-4	NO EFFECT	29-30R3	NO EFFECT
28A53R1	NO EFFECT	29-6	NO EFFECT	29-30R4	NO EFFECT
28-54	NO EFFECT	29-7	29-11-11	29-32	NO EFFECT
28-55	NO EFFECT	29-8	NO EFFECT	29-32R1	NO EFFECT
28-56	NO EFFECT	29-8R1	NO EFFECT	29-33	NO EFFECT
28-56R1	NO EFFECT	29-9	NO EFFECT	29-33R1	NO EFFECT
28A57	NO EFFECT	29-10	NO EFFECT	29-33R2	NO EFFECT
28-59	NO EFFECT	29-11	NO EFFECT	29-33R3	NO EFFECT
28-61	NO EFFECT	29-11R1	NO EFFECT	29-33R4	NO EFFECT
28-62	NO EFFECT	29-12	NO EFFECT	29-34	NO EFFECT
28-62R1	NO EFFECT	29-12R1	NO EFFECT	29-35	NO EFFECT
28-63	NO EFFECT	29-13	NO EFFECT	29A35R1	NO EFFECT
28-63R1	NO EFFECT	29-14	NO EFFECT	29A35R2	NO EFFECT
28A64	NO EFFECT	29-15	NO EFFECT	29-37	NO EFFECT
28A64R1	NO EFFECT	29-16	29-21-01	29-37R1	NO EFFECT
28-66	NO EFFECT	29-17	29-21-01	29-38	NO EFFECT
28-66R1	NO EFFECT	29-17R1	29-21-01	29A38R1	NO EFFECT
28-69	NO EFFECT	29-17R2	29-21-10	29A39	NO EFFECT
28A71	28-22-	29-18	NO EFFECT	29A39R1	NO EFFECT
28A71R1	NO EFFECT	29-18R1	NO EFFECT	29A39R2	NO EFFECT
28A72	NO EFFECT	29-18R2	NO EFFECT	29A39R3	NO EFFECT
28A72R1	NO EFFECT	29-18R3	NO EFFECT	29A39R4	NO EFFECT
28-73	NO EFFECT	29-19	NO EFFECT	29-43	29-11-46
28-74	NO EFFECT	29-19R1	NO EFFECT	29-43R1	29-11-46
28A75	NO EFFECT	29-20	NO EFFECT	29-45	NO EFFECT
28A76	NO EFFECT	29-21	NO EFFECT	29-46	NO EFFECT
28A77	NO EFFECT	29-21R1	NO EFFECT	29-47	NO EFFECT
28A77R1	NO EFFECT	29-21R2	NO EFFECT	29-47R1	NO EFFECT
28A79	NO EFFECT	29-21R3	NO EFFECT	29-48	NO EFFECT
28A80	NO EFFECT	29-21R4	NO EFFECT	29-49	NO EFFECT
28A81	NO EFFECT	29-23	NO EFFECT	29-49R1	NO EFFECT
28-82	NO EFFECT	29-23R1	NO EFFECT	29-49R2	NO EFFECT
28A88	NO EFFECT	29-24	NO EFFECT	29-50	NO EFFECT
28A89	NO EFFECT	29-25	NO EFFECT	29-51	NO EFFECT
28-97	NO EFFECT	29-26	NO EFFECT	29-51R1	NO EFFECT
29-1	NO EFFECT	29-28	NO EFFECT	29-52	NO EFFECT
29-1R1	NO EFFECT	29-29	NO EFFECT	29A54	NO EFFECT
29-2	NO EFFECT	29-30	NO EFFECT	29A54R1	NO EFFECT
29-2R1	NO EFFECT	29-30R1	NO EFFECT	29A54R2	NO EFFECT



BOEING

COMPONENT
MAINTENANCE MANUAL

SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER
29-55	NO EFFECT	29A83R3	NO EFFECT	30A11R2	30-11-
29-57	NO EFFECT	29A83R4	NO EFFECT	30A11R3	30-11-
29-57R1	NO EFFECT	29-85	NO EFFECT	30A11R4	30-11-
29-58	NO EFFECT	29A88	29-20-01	30A11R5	30-11-
29-59	NO EFFECT		29-21-05	30A11R6	30-11-
29-59R1	NO EFFECT	29A88R1	29-20-01	30-13	NO EFFECT
29-60	NO EFFECT		29-21-05	30-13R1	NO EFFECT
29-61	NO EFFECT	29A90	NO EFFECT	30-14	NO EFFECT
29-63	NO EFFECT	29-91	NO EFFECT	30-14R1	NO EFFECT
29A64	NO EFFECT	29-93	NO EFFECT	30-15	NO EFFECT
29A64R1	NO EFFECT	29A94	NO EFFECT	30-15R1	NO EFFECT
29-66	NO EFFECT	29-95	NO EFFECT	30-17	NO EFFECT
29-66R1	NO EFFECT	29-96	NO EFFECT	30A18	NO EFFECT
29-67	NO EFFECT	29-97	NO EFFECT	30A18R1	NO EFFECT
29-67R1	NO EFFECT	29A98	NO EFFECT	30A18R2	NO EFFECT
29-69	NO EFFECT	29-99	NO EFFECT	30-19	NO EFFECT
29-70	NO EFFECT	29A100	NO EFFECT	30-20	NO EFFECT
29-70R1	NO EFFECT	29A102	NO EFFECT	30-20R1	NO EFFECT
29-71	NO EFFECT	29-103	NO EFFECT	30-21	NO EFFECT
29-72	NO EFFECT	29-104	NO EFFECT	30-23	NO EFFECT
29-72R1	NO EFFECT	29-105	NO EFFECT	30-24	NO EFFECT
29-73	NO EFFECT	29-106	NO EFFECT	30-26	NO EFFECT
29-73R1	NO EFFECT	29-107	NO EFFECT	30-26R1	NO EFFECT
29-74	NO EFFECT	30-1	NO EFFECT	30-28	NO EFFECT
29-74R1	NO EFFECT	30-2	NO EFFECT	30-28R1	NO EFFECT
29-74R2	NO EFFECT	30-2R1	NO EFFECT	30-29	NO EFFECT
29-76	NO EFFECT	30-2R2	NO EFFECT	30-29R1	NO EFFECT
29-76R1	29-11-46	30-3	NO EFFECT	30-29R2	NO EFFECT
29A77	NO EFFECT	30-3R1	NO EFFECT	30-30	NO EFFECT
29A77R1	NO EFFECT	30A4	NO EFFECT	30-31	NO EFFECT
29-78	NO EFFECT	30-5	NO EFFECT	30-32	NO EFFECT
29-79	NO EFFECT	30-5R1	NO EFFECT	30-34R1	NO EFFECT
29A80	NO EFFECT	30-5R2	NO EFFECT	30-35	NO EFFECT
29A80R1	NO EFFECT	30-6	NO EFFECT	30A37	NO EFFECT
29A80R2	NO EFFECT	30-6R1	NO EFFECT	30A37R1	NO EFFECT
29-82	NO EFFECT	30-7	NO EFFECT	30A37R2	NO EFFECT
29-82R1	NO EFFECT	30-8	NO EFFECT	30A38	NO EFFECT
29A83	NO EFFECT	30-10	NO EFFECT	30-43	NO EFFECT
29A83R1	NO EFFECT	30A11	30-11-	30-43R1	NO EFFECT
29A83R2	NO EFFECT	30A11R1	30-11-	30-44	NO EFFECT



BOEING

COMPONENT
MAINTENANCE MANUAL

SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER
30-46	NO EFFECT	31-36	NO EFFECT	31-67	NO EFFECT
31-1	NO EFFECT	31-37	NO EFFECT	31-68	NO EFFECT
31-2	NO EFFECT	31-38	NO EFFECT	31-69	NO EFFECT
31-3	NO EFFECT	31-39	NO EFFECT	31-70	NO EFFECT
31-3R1	NO EFFECT	31-40	NO EFFECT	31-71	NO EFFECT
31-4	31-51-11	31-40R1	NO EFFECT	31-72	NO EFFECT
31-5	NO EFFECT	31-40R2	NO EFFECT	31-72R1	NO EFFECT
31-6	NO EFFECT	31-40R3	31-31-	31-73	NO EFFECT
31-7	NO EFFECT	31-41	NO EFFECT	31-74	NO EFFECT
31-8	NO EFFECT	31-41R1	NO EFFECT	31-75	NO EFFECT
31-8R1	NO EFFECT	31-43	NO EFFECT	31-75R1	NO EFFECT
31-9	NO EFFECT	31-43R1	NO EFFECT	31-76	NO EFFECT
31-10	NO EFFECT	31-44	NO EFFECT	31-76R1	NO EFFECT
31-11	NO EFFECT	31-45	NO EFFECT	31-77	NO EFFECT
31-12	NO EFFECT	31-46	NO EFFECT	31-78	NO EFFECT
31-12R1	NO EFFECT	31-46R1	NO EFFECT	31-78R1	NO EFFECT
31-13	NO EFFECT	31-46R2	NO EFFECT	31-79	NO EFFECT
31-14	NO EFFECT	31-47	31-51-11	31-80	NO EFFECT
31-15	NO EFFECT	31-48	NO EFFECT	31-81	NO EFFECT
31-17	NO EFFECT	31-49	NO EFFECT	31-82	NO EFFECT
31-18	NO EFFECT	31-51	NO EFFECT	31-83	NO EFFECT
31-18R1	NO EFFECT	31-51R1	NO EFFECT	31-84	NO EFFECT
31-19	NO EFFECT	31-52	NO EFFECT	31-84R1	NO EFFECT
31-19R1	NO EFFECT	31-53	NO EFFECT	31-85	NO EFFECT
31-20	NO EFFECT	31-54	NO EFFECT	31-85R1	NO EFFECT
31-22	NO EFFECT	31-55	NO EFFECT	31-86	NO EFFECT
31-23	NO EFFECT	31-56	NO EFFECT	31-87	NO EFFECT
31-25	NO EFFECT	31-57	NO EFFECT	31-88	NO EFFECT
31-26	NO EFFECT	31-58	NO EFFECT	31-89	NO EFFECT
31-27	NO EFFECT	31-59	NO EFFECT	31-90	NO EFFECT
31-28	NO EFFECT	31-60	NO EFFECT	31-91	NO EFFECT
31A29	NO EFFECT	31-60R1	NO EFFECT	31-91R1	NO EFFECT
31A29R1	NO EFFECT	31-61	NO EFFECT	31-91R2	NO EFFECT
31-30	NO EFFECT	31-62	NO EFFECT	31-91R3	NO EFFECT
31-31	NO EFFECT	31-63	NO EFFECT	31-91R4	NO EFFECT
31-32	NO EFFECT	31-64	NO EFFECT	31-92	NO EFFECT
31-33	NO EFFECT	31-65	NO EFFECT	31-93	NO EFFECT
31-33R1	NO EFFECT	31-65R1	NO EFFECT	31-93R1	NO EFFECT
31-34	NO EFFECT	31-66	NO EFFECT	31-94	NO EFFECT
31-35	NO EFFECT	31-66R1	NO EFFECT	31-96	NO EFFECT



BOEING
COMPONENT
MAINTENANCE MANUAL

<u>SERVICE BULLETIN NUMBER</u>	<u>CMM NUMBER</u>	<u>SERVICE BULLETIN NUMBER</u>	<u>CMM NUMBER</u>	<u>SERVICE BULLETIN NUMBER</u>	<u>CMM NUMBER</u>
31-97	NO EFFECT	31-122R1	NO EFFECT	31-153	NO EFFECT
31-98	NO EFFECT	31-123	NO EFFECT	31-154	NO EFFECT
31-98R1	NO EFFECT	31-124	NO EFFECT	31-156	NO EFFECT
31-98R2	NO EFFECT	31-124R1	NO EFFECT	31-157	NO EFFECT
31-99	NO EFFECT	31-125	NO EFFECT	31-158	NO EFFECT
31-99R1	NO EFFECT	31-126	NO EFFECT	31-159	NO EFFECT
31-99R2	NO EFFECT	31-127	NO EFFECT	31-160R1	NO EFFECT
31-99R3	NO EFFECT	31-127R1	NO EFFECT	31-161	NO EFFECT
31-100	NO EFFECT	31-127R2	NO EFFECT	31-164	NO EFFECT
31-100R1	NO EFFECT	31-128	NO EFFECT	31-165	NO EFFECT
31-100R2	NO EFFECT	31-129	NO EFFECT	31A165R1	NO EFFECT
31-101	NO EFFECT	31-130	NO EFFECT	31-166	NO EFFECT
31-102	NO EFFECT	31-131	NO EFFECT	31-167	NO EFFECT
31-103	NO EFFECT	31-132	NO EFFECT	31-168	NO EFFECT
31-106	NO EFFECT	31-133	NO EFFECT	31-169	NO EFFECT
31-106R1	NO EFFECT	31-134	NO EFFECT	31-170	NO EFFECT
31-106R2	NO EFFECT	31-135	NO EFFECT	31-171	NO EFFECT
31-107	NO EFFECT	31-136	NO EFFECT	31-171R1	NO EFFECT
31-107R1	NO EFFECT	31-136R1	NO EFFECT	31-173	NO EFFECT
31-108	27-32-	31-137	NO EFFECT	31A174	NO EFFECT
31-108R1	31--	31-137R1	NO EFFECT	31-175	NO EFFECT
31-108R2	27-32-	31-139	NO EFFECT	31-176	NO EFFECT
31-108R3	27-32-	31-141	NO EFFECT	31-177	NO EFFECT
31-109	NO EFFECT	31-141R1	NO EFFECT	31-178	NO EFFECT
31-110	NO EFFECT	31-142	NO EFFECT	31-178R1	NO EFFECT
31-110R1	NO EFFECT	31-142R1	NO EFFECT	31-179	NO EFFECT
31-112	NO EFFECT	31-143	NO EFFECT	31-179R1	NO EFFECT
31-113	NO EFFECT	31-144	NO EFFECT	31-180	NO EFFECT
31-114	NO EFFECT	31-144R1	NO EFFECT	31A181	NO EFFECT
31-114R1	NO EFFECT	31-145	NO EFFECT	31-182	NO EFFECT
31-115	NO EFFECT	31-145R1	NO EFFECT	31-183	NO EFFECT
31-115R1	NO EFFECT	31-146	NO EFFECT	31-184	NO EFFECT
31-117	NO EFFECT	31-147	NO EFFECT	31-185	NO EFFECT
31-118	NO EFFECT	31-149	NO EFFECT	31-185R1	NO EFFECT
31-118R1	NO EFFECT	31-149R1	NO EFFECT	31-185R2	NO EFFECT
31-118R2	NO EFFECT	31-149R2	NO EFFECT	31-186	NO EFFECT
31-120	NO EFFECT	31-150	NO EFFECT	31-186R1	NO EFFECT
31-120R1	NO EFFECT	31-150R1	NO EFFECT	31-187	NO EFFECT
31-121	NO EFFECT	31-151	NO EFFECT	31-187R1	NO EFFECT
31-122	NO EFFECT	31-152	NO EFFECT	31-187R2	NO EFFECT



BOEING

COMPONENT
MAINTENANCE MANUAL

SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER
31-189	NO EFFECT	31-228	NO EFFECT	32-21	32-11-41
31-190	NO EFFECT	32-1	32-21-21		32-11-51
31-190R1	NO EFFECT	32-2	32-11-21	32-21R1	32-11-31
31-191	NO EFFECT		32-11-31		32-11-41
31-192	NO EFFECT	32-2R2	32-11-31		32-11-51
31-193	NO EFFECT		32-11-41	32-21R2	32-11-31
31-194	NO EFFECT		32-22-51		32-11-41
31-195	NO EFFECT	32-2R3	32-11-31		32-11-51
31-196	NO EFFECT		32-11-41	32-21R3	32-11-31
31-196R1	NO EFFECT		32-11-51		32-11-41
31-197	NO EFFECT	32-3	NO EFFECT		32-11-51
31-198	NO EFFECT	32-4	32-41-11	32-22	32-34-11
31-199	NO EFFECT	32-5	NO EFFECT	32-22R1	32-34-11
31-200	NO EFFECT	32-5R1	32-41-11	32-23	NO EFFECT
31-201	NO EFFECT	32-6	NO EFFECT	32-23R1	32-11-21
31-203	NO EFFECT	32-7	32-12-05	32-23R2	32-11-21
31-205	NO EFFECT		32-32-20	32-23R3	32--
31-206	NO EFFECT	32-7R1	32-12-05	32-24	32-12-05
31-207	NO EFFECT		32-32-20	32-24R1	32-12-05
31-208	NO EFFECT	32-7R2	32-12-05	32-24R2	32-12-05
31-209	NO EFFECT		32-32-20	32-24R3	32-12-05
31-210	NO EFFECT	32-7R3	32-12-05	32-25	NO EFFECT
31-211	NO EFFECT	32-8	32-31-21	32-26	NO EFFECT
31-212	NO EFFECT	32-9	NO EFFECT	32-27	32-32-55
31-213	NO EFFECT	32-10	32-21-51	32-27R1	32-32-55
31-214	NO EFFECT	32-10R1	32-21-51	32-28	NO EFFECT
31-215	NO EFFECT	32-10R2	32-21-51	32-28R1	NO EFFECT
31-216	NO EFFECT	32-11	32-32-43	32-28R2	NO EFFECT
31-217	NO EFFECT	32-11R1	32-32-43	32-29	32-21-21
31-218	NO EFFECT	32-12	32-35-91	32-30	32-32-13
31-218R1	NO EFFECT	32-13	NO EFFECT	32-30R1	32-32-13
31-219	NO EFFECT	32-14	NO EFFECT	32-31	32-32-13
31-220	NO EFFECT	32-15	32-34-11	32-31R1	32-32-13
31-221	NO EFFECT	32-16	32-41-22	32-31R2	32-32-13
31-222	NO EFFECT	32-17	30-11-21	32-31R3	32-32-13
31-223	NO EFFECT	32-18	32-21-60	32-32	NO EFFECT
31-224	NO EFFECT	32-18R1	32-21-60	32-32R1	NO EFFECT
31-225	NO EFFECT	32-19	NO EFFECT	32-33	NO EFFECT
31-226	NO EFFECT	32-20	NO EFFECT	32-33R1	NO EFFECT
31-227	NO EFFECT	32-21	32-11-31	32-34	NO EFFECT



BOEING
COMPONENT
MAINTENANCE MANUAL

<u>SERVICE BULLETIN NUMBER</u>	<u>CMM NUMBER</u>	<u>SERVICE BULLETIN NUMBER</u>	<u>CMM NUMBER</u>	<u>SERVICE BULLETIN NUMBER</u>	<u>CMM NUMBER</u>
32-34R1	NO EFFECT	32-52R2	32-32-21	32-73	32-21-47
32-35	32-32-55		32-32-22	32-73R1	32-21-43
32-35R1	32-32-55		32-32-25		32-21-47
32-35R2	32-32-55	32-53	32-21-21	32-74	NO EFFECT
32-36	32-11-81		32-21-43	32-74R1	NO EFFECT
32A36R1	32-11-81	32-54	32-12-01	32-74R2	NO EFFECT
32-37	32-21-21	32-56	32-21-25	32-75	32-11-30
	32-21-43	32-57	NO EFFECT	32-75R1	32-11-30
32-38	NO EFFECT	32-57R1	NO EFFECT	32-76	NO EFFECT
32-38R1	NO EFFECT	32-57R2	NO EFFECT	32-76R1	NO EFFECT
32-39	32--	32-58	32-71-05	32-78	32-12-02
32-39R1	32-21-21	32-59	NO EFFECT	32-79	32-21-43
32-40	NO EFFECT	32-59R1	NO EFFECT	32-81	32-41-01
32-41	NO EFFECT	32-60	32-11-19	32-81R1	32-41-01
32-42	NO EFFECT	32-60R1	32-11-19	32-83	32-11-40
32-42R1	NO EFFECT	32-62	NO EFFECT	32-83R1	32-11-40
32-43	NO EFFECT	32-63	NO EFFECT	32-83R2	32-11-40
32-44	32-11-61	32-63R1	32-35-81	32-83R3	32-11-40
32-45	32-11-41	32-64	32-11-19	32-83R4	32-11-40
32-46	32-11-41		32-11-20	32-84	32-31-20
32-47	NO EFFECT	32-64R1	32-11-19	32-85	32-10-52
32-48	32-22-31		32-11-20		32-11-19
	32-22-41	32-65	NO EFFECT		32-20-51
32-50	NO EFFECT	32-65R1	NO EFFECT		32-21-21
32A51	NO EFFECT	32-66	32-21-21	32-85R1	32-10-52
32A51R1	NO EFFECT	32-66R1	32-21-21		32-11-19
32A51R2	NO EFFECT	32-66R2	32-21-21		32-20-51
32A51R3	NO EFFECT	32-67	32-21-21		32-21-21
32-52	32-32-10	32-68	32-11-30	32-86	32-20-51
	32-32-11	32-69	NO EFFECT	32-87	32-11-20
	32-32-21	32-70	NO EFFECT	32-88	NO EFFECT
	32-32-22	32A71	32-32-22	32-88R1	NO EFFECT
	32-32-25	32A71R1	32-32-22	32-89	NO EFFECT
32-52R1	32-32-10	32A71R2	32-32-22	32-90	NO EFFECT
	32-32-11	32-72	NO EFFECT	32-91	NO EFFECT
	32-32-21	32-72R1	NO EFFECT	32-92	NO EFFECT
	32-32-22	32-72R2	NO EFFECT	32-93	32-11-19
	32-32-25	32-72R3	NO EFFECT		32-11-20
32-52R2	32-32-10	32-72R4	NO EFFECT	32-93R1	32-11-19
	32-32-11	32-73	32-21-43		32-11-20



BOEING

COMPONENT
MAINTENANCE MANUAL

SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER
32-94	NO EFFECT	32-115R1	NO EFFECT	32-134	NO EFFECT
32-95	32-11-19	32A116	31-11-20	32-135	32-11-30
	57-43-37		32-11-19		32-11-40
	57-43-41	32A116R1	32-11-19		32-11-60
	57-43-45		32-11-20	32-137	NO EFFECT
	57-43-51	32A116R2	32-11-	32-139	32-32-30
	57-54-23	32-117	NO EFFECT	32-141	NO EFFECT
32-96	32-11-60	32-118	NO EFFECT	32-142	NO EFFECT
32-97	NO EFFECT	32-118R1	NO EFFECT	32-143	32-11-19
32-97R1	NO EFFECT	32-119	32-11-30		32-11-20
32-98	33-16-52	32-123	NO EFFECT	32-144	NO EFFECT
32-100	NO EFFECT	32-125	32-11-19	32-145	32-11-30
32-100R1	NO EFFECT		32-11-20		32-11-40
32-100R2	NO EFFECT	32A126	32-11-19		32-11-60
32-101	32-12-55		32-11-20	32-145R1	32-11-30
32-101R1	32-12-55	32A126R1	32-11-19		32-11-40
32-101R2	32-12-55		32-11-20		32-11-60
32-102	NO EFFECT	32A127	32-11-40	32-146	32-12-55
32-102R1	NO EFFECT	32-128	32-11-19	32-146R1	32-12-
32-103	NO EFFECT		32-11-20	32A148	32-11-40
32-104	32-21-21		32-11-30	32A148R1	32-11-30
32-105	NO EFFECT	32-128R1	32-11-19		32-11-40
32-106	32-11-19		32-11-20	32A148R2	32-11-
	32-11-20		32-11-30	32-149	NO EFFECT
32-107	32-11-19	32-128R2	32-11-19	32A151	NO EFFECT
	57-43-37		32-11-20	32A151R1	NO EFFECT
	57-43-41		32-11-30	32A151R2	NO EFFECT
	57-43-50	32-128R3	32-11-	32A151R3	NO EFFECT
	57-43-51	32-129	32-11-30	32-152	32-41-10
	57-43-55		32-11-40	32-152R1	32-41-10
	57-43-61	32-129R1	32-11-30	32-152R2	32-41-10
32-110	32-11-60	32-129R2	32-11-30	32-153	32-11-19
	32-11-70	32-130	32-11-19		32-11-20
32-111	NO EFFECT		32-11-20	32-154	NO EFFECT
32-112	NO EFFECT	32-130R1	32-11-19	32-155	NO EFFECT
32-112R1	NO EFFECT		32-11-20	32-156	NO EFFECT
32-113	NO EFFECT	32-131	32-21-47	32-156R1	NO EFFECT
32-114	32-12-55	32-132	32-11-19	32-156R2	NO EFFECT
32-114R1	32-12-55		32-11-20	32A157	32-11-19
32-115	NO EFFECT	32-133	NO EFFECT		32-11-20



BOEING
COMPONENT
MAINTENANCE MANUAL

SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER
32-158	32-11-30	32-183R1	32-11-	32-208R1	32-12-
32-161	NO EFFECT	32-184	NO EFFECT	32-209	NO EFFECT
32-162	32-11-19	32-184R1	NO EFFECT	32-210	NO EFFECT
	32-11-20	32A185	NO EFFECT	32-211	NO EFFECT
	32-11-40	32-187	32-11-60	32-213	NO EFFECT
32-162R1	32-11-19	32-190	NO EFFECT	33-1	NO EFFECT
	32-11-20	32-190R1	NO EFFECT	33-1R1	NO EFFECT
	32-11-40	32-190R2	NO EFFECT	33-2	NO EFFECT
32A163	NO EFFECT	32-191	NO EFFECT	33-2R1	NO EFFECT
32A163R1	NO EFFECT	32A192	NO EFFECT	33-3	NO EFFECT
32-166	32-34-16	32A192R1	NO EFFECT	33-4	NO EFFECT
32-166R1	32-34-16	32-193	NO EFFECT	33-5	NO EFFECT
32-166R2	32-34-16	32-194	NO EFFECT	33-7	NO EFFECT
32-166R3	32-34-16	32-194R1	NO EFFECT	33-8	NO EFFECT
32-167	NO EFFECT	32-194R2	NO EFFECT	33-9	NO EFFECT
32-168	32-11-20	32-195	NO EFFECT	33-9R1	NO EFFECT
32-169	32-UU-UU	32A196	32-11-	33-10	NO EFFECT
32A171	32-11-60	32A196R1	32-11-	33-11	NO EFFECT
32A171R1	32-11-60	32A196R2	32-11-	33-12	NO EFFECT
32-172	NO EFFECT	32A196R3	32-11-	33-13	NO EFFECT
32-173	NO EFFECT	32-197	NO EFFECT	33-14	NO EFFECT
32-175	32-11-30	32-197R1	NO EFFECT	33-15	NO EFFECT
	32-11-40	32-198	NO EFFECT	33-16	NO EFFECT
	32-11-50	32A199	32-11-	33-17	NO EFFECT
	32-11-60	32A199R1	32-11-	33-18	NO EFFECT
32-176	NO EFFECT	32A199R2	32-11-	33-18R2	NO EFFECT
32-176R1	NO EFFECT	32-200	NO EFFECT	33-19	NO EFFECT
32A176R2	32-11-	32-201	32-11-60	33-20	NO EFFECT
32-177	NO EFFECT	32A202	32-11-	33-21	NO EFFECT
32-177R1	NO EFFECT	32A202R1	32-11-	33-22	25-29-57
32-179	32-31-20	32-203	32-11-60	33-24	NO EFFECT
32-179R1	32-31-20	32-204	NO EFFECT	33-25	NO EFFECT
32-180	32-32-10	32-204R1	NO EFFECT	33-26	NO EFFECT
	32-32-25	32-205	NO EFFECT	33-27	NO EFFECT
32-180R1	32-11-	32-205R1	32-11-	33-28	NO EFFECT
	32-32-	32-206	NO EFFECT	33-29	NO EFFECT
32-181	NO EFFECT	32-207	NO EFFECT	33-30	NO EFFECT
32-181R1	NO EFFECT	32-208	32-11-	33-31	NO EFFECT
32A182	32-11-		32-12-	33-32	NO EFFECT
32-183	32-11-20	32-208R1	32-11-	33-33	NO EFFECT



BOEING

COMPONENT
MAINTENANCE MANUAL

SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER
33-34	NO EFFECT	33-71R1	NO EFFECT	34-1	NO EFFECT
33-35	NO EFFECT	33-72	NO EFFECT	34-2	NO EFFECT
33-36	NO EFFECT	33-73	NO EFFECT	34-3	NO EFFECT
33-37	NO EFFECT	33-73R1	NO EFFECT	34-4	NO EFFECT
33-38	NO EFFECT	33-74	NO EFFECT	34-5	NO EFFECT
33-40	NO EFFECT	33-74R1	NO EFFECT	34-5R1	NO EFFECT
33-41	33-22-01	33A75	NO EFFECT	34-5R2	NO EFFECT
33-42	NO EFFECT	33A75R1	NO EFFECT	34-6	NO EFFECT
33-43	NO EFFECT	33-76	NO EFFECT	34-7	NO EFFECT
33-44	NO EFFECT	33-77	NO EFFECT	34-8	NO EFFECT
33-45	NO EFFECT	33-77R1	NO EFFECT	34-9	NO EFFECT
33-46	NO EFFECT	33-78	NO EFFECT	34-9R1	NO EFFECT
33-47	NO EFFECT	33-79	NO EFFECT	34-10	NO EFFECT
33-48	NO EFFECT	33-80	NO EFFECT	34-11	NO EFFECT
33-49	NO EFFECT	33-81	NO EFFECT	34-11R1	NO EFFECT
33-50	NO EFFECT	33-81R1	NO EFFECT	34-12	34-31-52
33-51	NO EFFECT	33-81R2	NO EFFECT	34-13	NO EFFECT
33-52	NO EFFECT	33-82	NO EFFECT	34A14	NO EFFECT
33-52R1	NO EFFECT	33-83	NO EFFECT	34-15	NO EFFECT
33-52R2	NO EFFECT	33-84	NO EFFECT	34-16	NO EFFECT
33-52R3	NO EFFECT	33A85	NO EFFECT	34-18	NO EFFECT
33-53	NO EFFECT	33A85R1	NO EFFECT	34-19	NO EFFECT
33-54	NO EFFECT	33A85R2	NO EFFECT	34-19R1	NO EFFECT
33-56	NO EFFECT	33A85R3	NO EFFECT	34-19R2	NO EFFECT
33-56R1	NO EFFECT	33A87	NO EFFECT	34-20	NO EFFECT
33-57	NO EFFECT	33A87R1	NO EFFECT	34-20R1	NO EFFECT
33-58	NO EFFECT	33A88	NO EFFECT	34-20R2	NO EFFECT
33-59	NO EFFECT	33-89	NO EFFECT	34-21	NO EFFECT
33-59R1	NO EFFECT	33-90	NO EFFECT	34-22	NO EFFECT
33-60	NO EFFECT	33-90R1	NO EFFECT	34-23	NO EFFECT
33-62	NO EFFECT	33-91	NO EFFECT	34-24	NO EFFECT
33-63	NO EFFECT	33-91R1	NO EFFECT	34-25	NO EFFECT
33-64	NO EFFECT	33-92	NO EFFECT	34-25R1	NO EFFECT
33-65	NO EFFECT	33-93	NO EFFECT	34-26	NO EFFECT
33-66	NO EFFECT	33-94	NO EFFECT	34-27	NO EFFECT
33-67	NO EFFECT	33-95	NO EFFECT	34-27R1	NO EFFECT
33-68	NO EFFECT	33-96	NO EFFECT	34-28	NO EFFECT
33-69	NO EFFECT	33-97	NO EFFECT	34-29	NO EFFECT
33-70	NO EFFECT	33-97R1	NO EFFECT	34A30	NO EFFECT
33-71	NO EFFECT	33-98	NO EFFECT	34A30R1	NO EFFECT



BOEING
COMPONENT
MAINTENANCE MANUAL

<u>SERVICE BULLETIN NUMBER</u>	<u>CMM NUMBER</u>	<u>SERVICE BULLETIN NUMBER</u>	<u>CMM NUMBER</u>	<u>SERVICE BULLETIN NUMBER</u>	<u>CMM NUMBER</u>
34-31	NO EFFECT	34A55R2	NO EFFECT	34-85R1	NO EFFECT
34-31R1	NO EFFECT	34-56	NO EFFECT	34-86	NO EFFECT
34-32	NO EFFECT	34-56R1	NO EFFECT	34-87	NO EFFECT
34-32R1	NO EFFECT	34-56R2	NO EFFECT	34-87R1	NO EFFECT
34-32R2	NO EFFECT	34-57	NO EFFECT	34-87R2	NO EFFECT
34-33	NO EFFECT	34-57R1	NO EFFECT	34-87R3	NO EFFECT
34-34	NO EFFECT	34-58	NO EFFECT	34-87R4	NO EFFECT
34A36	NO EFFECT	34-59	NO EFFECT	34-88	NO EFFECT
34A36R1	NO EFFECT	34-60	NO EFFECT	34-89	27-32-52
34A36R2	NO EFFECT	34-62	NO EFFECT	34-89R1	27-32-52
34-38	NO EFFECT	34-63	NO EFFECT	34-89R2	27-32-52
34-40	NO EFFECT	34-64	NO EFFECT	34-89R3	27-32-52
34-41	NO EFFECT	34-65	NO EFFECT	34-89R4	27-32-52
34-42	NO EFFECT	34-67	NO EFFECT	34-89R5	27-32-52
34-43	34-30-00	34-69	NO EFFECT	34-90	NO EFFECT
34-44	NO EFFECT	34-70	NO EFFECT	34-91	NO EFFECT
34-44R1	NO EFFECT	34-70R1	NO EFFECT	34-91R1	NO EFFECT
34-44R2	NO EFFECT	34-71	NO EFFECT	34-91R2	NO EFFECT
34-44R3	NO EFFECT	34-71R1	NO EFFECT	34-92	NO EFFECT
34-45	NO EFFECT	34-72	NO EFFECT	34-93	NO EFFECT
34-45R1	NO EFFECT	34-73	NO EFFECT	34-94	NO EFFECT
34-46	NO EFFECT	34-73R1	NO EFFECT	34-95	NO EFFECT
34-46R1	NO EFFECT	34-73R2	NO EFFECT	34-96	NO EFFECT
34-46R2	NO EFFECT	34-74	NO EFFECT	34-97	NO EFFECT
34-47	NO EFFECT	34-75	NO EFFECT	34-98	NO EFFECT
34-47R1	NO EFFECT	34-75R1	NO EFFECT	34-99	NO EFFECT
34-47R2	NO EFFECT	34-75R2	NO EFFECT	34-100	NO EFFECT
34-47R3	NO EFFECT	34-76	NO EFFECT	34-101	NO EFFECT
34-48	34-31-61	34-76R1	NO EFFECT	34-102	NO EFFECT
34-49	NO EFFECT	34-77	NO EFFECT	34-103	NO EFFECT
34-49R1	NO EFFECT	34-78	NO EFFECT	34-105	NO EFFECT
34-50	NO EFFECT	34-79	NO EFFECT	34-106	NO EFFECT
34-50R1	NO EFFECT	34-80	NO EFFECT	34-107	NO EFFECT
34-51	NO EFFECT	34-81	NO EFFECT	34-108	NO EFFECT
34-52	NO EFFECT	34-82	NO EFFECT	34-108R1	NO EFFECT
34-52R1	NO EFFECT	34-82R1	NO EFFECT	34-109	NO EFFECT
34-53	NO EFFECT	34-83	NO EFFECT	34-110	NO EFFECT
34-54	NO EFFECT	34-83R1	NO EFFECT	34-113	NO EFFECT
34A55	NO EFFECT	34-84	NO EFFECT	34-115	NO EFFECT
34A55R1	NO EFFECT	34-85	NO EFFECT	34-116	NO EFFECT



BOEING
COMPONENT
MAINTENANCE MANUAL

SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER
34-116R1	NO EFFECT	34-154	NO EFFECT	34-202	NO EFFECT
34-117	NO EFFECT	34-156	NO EFFECT	34-202R1	NO EFFECT
34-117R1	NO EFFECT	34-157	NO EFFECT	34-202R2	NO EFFECT
34-118	NO EFFECT	34-158	NO EFFECT	34-202R3	NO EFFECT
34-119	NO EFFECT	34-159	NO EFFECT	34-204	NO EFFECT
34-120	NO EFFECT	34-160	NO EFFECT	34-204R1	NO EFFECT
34-121	NO EFFECT	34-161	NO EFFECT	34-205	NO EFFECT
34-121R1	NO EFFECT	34-161R1	NO EFFECT	34-206	NO EFFECT
34-122	NO EFFECT	34-163	NO EFFECT	34-206R1	NO EFFECT
34-123	NO EFFECT	34-164	NO EFFECT	34-206R2	NO EFFECT
34-125	NO EFFECT	34-167	NO EFFECT	34-207	NO EFFECT
34-126	NO EFFECT	34-168	NO EFFECT	34-207R1	NO EFFECT
34-127	NO EFFECT	34-169	NO EFFECT	34-208	NO EFFECT
34-128	NO EFFECT	34-170	NO EFFECT	34-208R1	NO EFFECT
34-128R1	NO EFFECT	34-171	NO EFFECT	34-208R2	NO EFFECT
34-129	NO EFFECT	34-172	NO EFFECT	34-209	NO EFFECT
34-130	NO EFFECT	34-173	NO EFFECT	34-209R1	NO EFFECT
34-131	NO EFFECT	34-176	NO EFFECT	34-211	NO EFFECT
34-132	NO EFFECT	34-177	NO EFFECT	34-212	NO EFFECT
34-133	NO EFFECT	34-178	NO EFFECT	34-212R1	NO EFFECT
34-134	NO EFFECT	34-179	NO EFFECT	34-212R2	NO EFFECT
34-135	NO EFFECT	34-180	NO EFFECT	34-214	NO EFFECT
34-136	NO EFFECT	34-181	NO EFFECT	34-216	NO EFFECT
34-137	NO EFFECT	34-182	NO EFFECT	34-217	NO EFFECT
34-138	NO EFFECT	34-186	NO EFFECT	34-218	NO EFFECT
34-139	NO EFFECT	34-187	NO EFFECT	34-219	NO EFFECT
34-140	NO EFFECT	34-188	NO EFFECT	34-219R1	NO EFFECT
34-140R1	NO EFFECT	34-188R1	NO EFFECT	34-220	NO EFFECT
34-141	NO EFFECT	34-188R2	NO EFFECT	34-222	NO EFFECT
34-141R1	NO EFFECT	34-189	NO EFFECT	34-222R1	NO EFFECT
34-142	NO EFFECT	34-190	NO EFFECT	34-222R2	NO EFFECT
34-143	NO EFFECT	34-193	NO EFFECT	34-223	NO EFFECT
34-145	NO EFFECT	34-194	NO EFFECT	34-224	NO EFFECT
34-147	NO EFFECT	34-195	NO EFFECT	34-228	NO EFFECT
34-148	NO EFFECT	34-196	NO EFFECT	34-229	NO EFFECT
34-149	NO EFFECT	34-197	NO EFFECT	34-231	NO EFFECT
34-149R1	NO EFFECT	34-198	NO EFFECT	34-231R1	NO EFFECT
34-150	NO EFFECT	34-199	NO EFFECT	34-232	NO EFFECT
34-151	NO EFFECT	34-200	NO EFFECT	34-234	NO EFFECT
34-153	NO EFFECT	34-201	NO EFFECT	34-234R1	NO EFFECT



BOEING
COMPONENT
MAINTENANCE MANUAL

<u>SERVICE BULLETIN NUMBER</u>	<u>CMM NUMBER</u>	<u>SERVICE BULLETIN NUMBER</u>	<u>CMM NUMBER</u>	<u>SERVICE BULLETIN NUMBER</u>	<u>CMM NUMBER</u>
34-234R2	NO EFFECT	34-268R1	NO EFFECT	34-307	NO EFFECT
34-235	NO EFFECT	34A269	NO EFFECT	34-307R1	NO EFFECT
34-236	NO EFFECT	34-271	NO EFFECT	34-307R2	NO EFFECT
34-237	NO EFFECT	34-272	NO EFFECT	34-307R3	NO EFFECT
34-237R1	NO EFFECT	34-273	NO EFFECT	34-307R4	NO EFFECT
34-237R2	NO EFFECT	34-274	NO EFFECT	34-307R5	NO EFFECT
34-238	NO EFFECT	34-275	NO EFFECT	34-307R6	NO EFFECT
34-241	NO EFFECT	34-276	NO EFFECT	34-309	NO EFFECT
34-242	NO EFFECT	34-276R1	NO EFFECT	34-311	NO EFFECT
34-243	NO EFFECT	34-276R2	NO EFFECT	34-311R1	NO EFFECT
34-244	NO EFFECT	34-277	NO EFFECT	34-311R2	NO EFFECT
34-245	NO EFFECT	34-279	NO EFFECT	34-312	NO EFFECT
34-246	NO EFFECT	34-280	NO EFFECT	34-312R1	NO EFFECT
34-247	NO EFFECT	34-281	NO EFFECT	34-313	NO EFFECT
34-247R1	NO EFFECT	34-282	NO EFFECT	34-313R1	NO EFFECT
34-247R2	NO EFFECT	34-285	NO EFFECT	34-314	NO EFFECT
34-248	NO EFFECT	34-286	NO EFFECT	34-315	NO EFFECT
34-249	NO EFFECT	34-286R1	NO EFFECT	34-316	NO EFFECT
34-250	NO EFFECT	34-287	NO EFFECT	34-316R1	NO EFFECT
34-251	NO EFFECT	34-288	NO EFFECT	34-316R2	NO EFFECT
34-252	NO EFFECT	34-290	NO EFFECT	34-316R3	NO EFFECT
34-253	NO EFFECT	34-291	NO EFFECT	34-317	NO EFFECT
34-253R1	NO EFFECT	34-291R1	NO EFFECT	34-318	NO EFFECT
34-254	NO EFFECT	34-292	NO EFFECT	34-319	NO EFFECT
34-255	NO EFFECT	34-293	NO EFFECT	34-319R1	NO EFFECT
34-258	NO EFFECT	34-295	NO EFFECT	34-319R2	NO EFFECT
34-258R1	NO EFFECT	34-298	NO EFFECT	34-319R3	NO EFFECT
34-259	NO EFFECT	34-300	NO EFFECT	34-320	NO EFFECT
34-260	NO EFFECT	34-301	NO EFFECT	34-320R1	NO EFFECT
34-260R1	NO EFFECT	34-301R1	NO EFFECT	34-321	NO EFFECT
34-261	NO EFFECT	34-302	NO EFFECT	34-321R1	NO EFFECT
34-262	NO EFFECT	34-302R1	NO EFFECT	34-322	NO EFFECT
34-262R1	NO EFFECT	34-303	NO EFFECT	34-323	NO EFFECT
34-264	NO EFFECT	34-303R1	NO EFFECT	34-324	NO EFFECT
34-265	NO EFFECT	34-303R2	NO EFFECT	34-324R1	NO EFFECT
34-266	NO EFFECT	34-304	NO EFFECT	34-326	NO EFFECT
34-266R1	NO EFFECT	34-304R1	NO EFFECT	34-326R1	NO EFFECT
34-266R2	NO EFFECT	34-304R2	NO EFFECT	34-327	NO EFFECT
34-267	NO EFFECT	34-305	NO EFFECT	34-328	NO EFFECT
34-268	NO EFFECT	34-306	NO EFFECT	34-328R1	NO EFFECT

SERVICE BULLETIN LIST


BOEING
 COMPONENT
 MAINTENANCE MANUAL

<u>SERVICE BULLETIN NUMBER</u>	<u>CMM NUMBER</u>	<u>SERVICE BULLETIN NUMBER</u>	<u>CMM NUMBER</u>	<u>SERVICE BULLETIN NUMBER</u>	<u>CMM NUMBER</u>
34-330	NO EFFECT	34-359R1	NO EFFECT	34A389R1	NO EFFECT
34-331	NO EFFECT	34-360	NO EFFECT	34A389R2	NO EFFECT
34A332	NO EFFECT	34-360R1	NO EFFECT	34A390	NO EFFECT
34A332R1	NO EFFECT	34-361	NO EFFECT	34-391	NO EFFECT
34A332R2	NO EFFECT	34-361R1	NO EFFECT	34-392	NO EFFECT
34-333	NO EFFECT	34-362	NO EFFECT	34A393	NO EFFECT
34-334	NO EFFECT	34-362R1	NO EFFECT	34A393R1	NO EFFECT
34-335	NO EFFECT	34-363	NO EFFECT	34-394	NO EFFECT
34-336	NO EFFECT	34-364	NO EFFECT	34-395	NO EFFECT
34-337	NO EFFECT	34-364R1	NO EFFECT	34-395R1	NO EFFECT
34-338	NO EFFECT	34-365	NO EFFECT	34-396	NO EFFECT
34-340	NO EFFECT	34-365R1	NO EFFECT	34-397	NO EFFECT
34-340R1	NO EFFECT	34-366	NO EFFECT	34-398	NO EFFECT
34-341	NO EFFECT	34-367	NO EFFECT	34-399	NO EFFECT
34-342	NO EFFECT	34-368	NO EFFECT	34-401	NO EFFECT
34-343	NO EFFECT	34-370	NO EFFECT	34-402	NO EFFECT
34-345	NO EFFECT	34-371	NO EFFECT	34-403	NO EFFECT
34-345R1	NO EFFECT	34-371R1	NO EFFECT	34-404	NO EFFECT
34-346	NO EFFECT	34-372	NO EFFECT	34-405	NO EFFECT
34-347	NO EFFECT	34-373	NO EFFECT	34-406	NO EFFECT
34-347R1	NO EFFECT	34-374	NO EFFECT	34-407	NO EFFECT
34-348	NO EFFECT	34-375	NO EFFECT	34-408	NO EFFECT
34-349	NO EFFECT	34-375R1	NO EFFECT	34-409	NO EFFECT
34-350	NO EFFECT	34-375R2	NO EFFECT	34-409R1	NO EFFECT
34-351	32-31-00	34-376	NO EFFECT	34-410	NO EFFECT
34-351R1	32-21-	34-377	NO EFFECT	34-411	NO EFFECT
34-352	NO EFFECT	34-377R1	NO EFFECT	34-412	NO EFFECT
34-352R1	NO EFFECT	34-378	NO EFFECT	34-413	NO EFFECT
34-353	NO EFFECT	34-380	NO EFFECT	34-414	NO EFFECT
34-354	NO EFFECT	34-381	NO EFFECT	34-415	NO EFFECT
34-355	NO EFFECT	34-381R1	NO EFFECT	34-415R1	NO EFFECT
34-355R1	NO EFFECT	34-382	NO EFFECT	34-415R2	NO EFFECT
34-355R2	NO EFFECT	34-382R1	NO EFFECT	34-415R3	NO EFFECT
34-355R3	NO EFFECT	34-383	NO EFFECT	34-415R4	NO EFFECT
34-355R4	NO EFFECT	34-385	NO EFFECT	34-416	NO EFFECT
34-355R5	NO EFFECT	34-385R1	NO EFFECT	34-417	NO EFFECT
34-356	NO EFFECT	34-385R2	NO EFFECT	34-418	NO EFFECT
34-357	NO EFFECT	34-387	NO EFFECT	34-419	NO EFFECT
34-358	NO EFFECT	34-388	NO EFFECT	34-420	NO EFFECT
34-359	NO EFFECT	34A389	NO EFFECT	34-420R1	NO EFFECT



BOEING
COMPONENT
MAINTENANCE MANUAL

<u>SERVICE BULLETIN NUMBER</u>	<u>CMM NUMBER</u>	<u>SERVICE BULLETIN NUMBER</u>	<u>CMM NUMBER</u>	<u>SERVICE BULLETIN NUMBER</u>	<u>CMM NUMBER</u>
34-421	NO EFFECT	34-467	NO EFFECT	35-8	25-28-11
34-421R1	NO EFFECT	34-468	NO EFFECT		25-28-13
34-423	NO EFFECT	34-469	NO EFFECT		25-28-15
34-424	NO EFFECT	34-470	NO EFFECT	35-9	32-21-31
34-425	NO EFFECT	34-471	NO EFFECT	35-10	25-23-10
34-427	NO EFFECT	34-472	NO EFFECT		35-21-12
34-428	NO EFFECT	34-473	NO EFFECT		35-21-31
34-429	NO EFFECT	34-474	NO EFFECT	35-12	25-23-10
34-431	NO EFFECT	34-475	NO EFFECT		35-21-01
34-432	NO EFFECT	34-476	NO EFFECT		35-21-10
34-433	NO EFFECT	34-478	NO EFFECT		35-21-21
34-434	NO EFFECT	34-479	NO EFFECT		35-21-31
34-435	NO EFFECT	34-480	NO EFFECT		35-21-41
34-436	NO EFFECT	34-481	NO EFFECT	35A13	NO EFFECT
34-437	NO EFFECT	34-482	NO EFFECT	35A14	35-21-01
34-438	NO EFFECT	34-483	NO EFFECT		35-21-10
34-440	NO EFFECT	34-484	NO EFFECT		35-21-21
34-441	NO EFFECT	34-487	NO EFFECT		35-21-31
34-443	NO EFFECT	34-488	NO EFFECT		35-21-41
34-444	NO EFFECT	34-490	NO EFFECT		35-21-51
34-445	NO EFFECT	34-492	NO EFFECT	35A14R1	35-21-01
34-446	NO EFFECT	34-493	NO EFFECT		35-21-10
34-447	NO EFFECT	34-494	NO EFFECT		35-21-21
34-448	NO EFFECT	34-495	NO EFFECT		35-21-31
34-449	NO EFFECT	34-498	NO EFFECT		35-21-41
34-450	NO EFFECT	34-500	NO EFFECT		35-21-51
34-451	NO EFFECT	35-1	35-21-01	35A14R2	35-21-01
34-452	NO EFFECT		35-21-11		35-21-10
34-452R1	NO EFFECT		35-21-21		35-21-21
34-453	NO EFFECT		35-21-31		35-21-31
34-454	NO EFFECT		35-21-41		35-21-41
34-456	NO EFFECT		35-21-51		35-21-51
34-457	NO EFFECT	35-3	NO EFFECT	35A15	35-21-01
34-458	NO EFFECT	35-4	NO EFFECT		35-21-10
34-461	NO EFFECT	35-5	NO EFFECT		35-21-21
34-462	NO EFFECT	35-5R2	NO EFFECT		35-21-31
34-463	NO EFFECT	35A6	NO EFFECT		35-21-41
34-464	NO EFFECT	35A6R1	NO EFFECT		35-21-51
34-465	NO EFFECT	35-7	NO EFFECT	35A15R1	35-21-01
34-466	NO EFFECT	35-8	25-28-10		35-21-10



BOEING
COMPONENT
MAINTENANCE MANUAL

SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER
35A15R1	35-21-21	35-47	35-21-61	36-26	NO EFFECT
	35-21-31	35-48	35-21-61	36-26R1	NO EFFECT
	35-21-41	35-49	NO EFFECT	36-26R2	NO EFFECT
	35-21-51	35-50	NO EFFECT	36-27	NO EFFECT
35A15R2	35-21-01	35-50R1	NO EFFECT	36-27R1	NO EFFECT
	35-21-10	35-50R2	NO EFFECT	36-27R2	NO EFFECT
	35-21-21	35-52	NO EFFECT	36-28	NO EFFECT
	35-21-31	36-1	NO EFFECT	36-29	NO EFFECT
	35-21-41	36-2	NO EFFECT	36-29R1	NO EFFECT
	35-21-51	36-3	NO EFFECT	36-29R2	NO EFFECT
35-18	NO EFFECT	36-3R1	NO EFFECT	36-29R3	NO EFFECT
35-23	35-21-42	36-4	NO EFFECT	36-29R4	NO EFFECT
	35-21-51	36-5	NO EFFECT	36-29R5	NO EFFECT
35-24	NO EFFECT	36-5R1	NO EFFECT	36A30	NO EFFECT
35-25	NO EFFECT	36-6	NO EFFECT	36A30R1	NO EFFECT
35A26	NO EFFECT	36-7	NO EFFECT	36-31	NO EFFECT
35A26R1	NO EFFECT	36-8	NO EFFECT	36-32	NO EFFECT
35-27	35-21-51	36-9	NO EFFECT	36-33	36-10-06
35A28	NO EFFECT	36-10	NO EFFECT	36-33R1	36-10-06
35A29	NO EFFECT	36-11	NO EFFECT	36-33R2	36-10-06
35A29R1	NO EFFECT	36-11R1	NO EFFECT	36-34	NO EFFECT
35-30	NO EFFECT	36-12	NO EFFECT	36-34R1	36-10-06
35A31	NO EFFECT	36-13	NO EFFECT	36-35	NO EFFECT
35-32	NO EFFECT	36-14	NO EFFECT	36-36	NO EFFECT
35-33	35-21-01	36A15	NO EFFECT	36-37	NO EFFECT
	35-21-10	36A15R1	NO EFFECT	36-37R1	NO EFFECT
	35-21-21	36A15R2	NO EFFECT	36-39	NO EFFECT
	35-21-31	36A15R3	NO EFFECT	36A41	36-10-06
	35-21-41	36-16	NO EFFECT	36A41R1	36-10-06
35A34	NO EFFECT	36-17	NO EFFECT	36A41R2	36-10-06
35A34R1	NO EFFECT	36-17R1	NO EFFECT	36A41R3	36-10-06
35A36	NO EFFECT	36-18	36-10-06	36A41R4	36-10-06
35-37	NO EFFECT	36-19	NO EFFECT	36-42	NO EFFECT
35A38	NO EFFECT	36-20	NO EFFECT	36-43	NO EFFECT
35A38R1	NO EFFECT	36-21	NO EFFECT	36-44	36-10-06
35-39	NO EFFECT	36-22	NO EFFECT	36-44R1	36-10-06
35-40	NO EFFECT	36-23	NO EFFECT	36-45	36-10-06
35-42	NO EFFECT	36-24	NO EFFECT	36-45R1	36-10-06
35-43	NO EFFECT	36-24R1	NO EFFECT	36-46	NO EFFECT
35-44	NO EFFECT	36-25	NO EFFECT	36-47	36-10-06



BOEING
COMPONENT
MAINTENANCE MANUAL

<u>SERVICE BULLETIN NUMBER</u>	<u>CMM NUMBER</u>	<u>SERVICE BULLETIN NUMBER</u>	<u>CMM NUMBER</u>	<u>SERVICE BULLETIN NUMBER</u>	<u>CMM NUMBER</u>
36-47R1	36-10-06	38-26	NO EFFECT	38-60R1	NO EFFECT
36-47R2	36-10-06	38-28	NO EFFECT	38A62	NO EFFECT
36-48	NO EFFECT	38-29	NO EFFECT	38A63	NO EFFECT
36-48R1	NO EFFECT	38-30	NO EFFECT	38-64	NO EFFECT
36-49	36-12-03	38-30R1	NO EFFECT	38-65	NO EFFECT
36-50	NO EFFECT	38-31	25-29-XX	38-66	NO EFFECT
36-51	NO EFFECT	38-32	NO EFFECT	38-67	NO EFFECT
36-52	NO EFFECT	38-33	NO EFFECT	38-67R1	NO EFFECT
36-53	NO EFFECT	38-34	25-29-XX	49-1	NO EFFECT
36-54	NO EFFECT	38-34R1	NO EFFECT	49-2	NO EFFECT
36-54R1	NO EFFECT	38-35	NO EFFECT	49-4	NO EFFECT
36-56	NO EFFECT	38-37	NO EFFECT	49-5	NO EFFECT
38-1	NO EFFECT	38-38	NO EFFECT	49-6	NO EFFECT
38-2	NO EFFECT	38-42	NO EFFECT	49-7	49-11-11
38-3	NO EFFECT	38-43	NO EFFECT	49-8	NO EFFECT
38-4	NO EFFECT	38-44	NO EFFECT	49-9	49-11-11
38-4R1	NO EFFECT	38-44R1	NO EFFECT	49-10	NO EFFECT
38-5	NO EFFECT	38-45	NO EFFECT	49-11	NO EFFECT
38-6	NO EFFECT	38-45R1	NO EFFECT	49-11R1	NO EFFECT
38-6R1	NO EFFECT	38-46	NO EFFECT	49-12	NO EFFECT
38-6R2	NO EFFECT	38-47	NO EFFECT	49-12R1	NO EFFECT
38-8	NO EFFECT	38-47R1	NO EFFECT	49-14	NO EFFECT
38-9	NO EFFECT	38-47R2	NO EFFECT	49-15	49-11-11
38-10	NO EFFECT	38-48	NO EFFECT	49-16	NO EFFECT
38-12	NO EFFECT	38-49	NO EFFECT	49-18	NO EFFECT
38-12R1	NO EFFECT	38-50	NO EFFECT	49-18R1	NO EFFECT
38-12R2	NO EFFECT	38-50R1	NO EFFECT	49-19	NO EFFECT
38-14	NO EFFECT	38-50R2	NO EFFECT	49-19R1	NO EFFECT
38-14R1	NO EFFECT	38A51	NO EFFECT	49-20	NO EFFECT
38-16	NO EFFECT	38A53	NO EFFECT	49-21	NO EFFECT
38-16R1	NO EFFECT	38-54	NO EFFECT	49-22	NO EFFECT
38-16R2	NO EFFECT	38-54R1	NO EFFECT	49-23	NO EFFECT
38-17	NO EFFECT	38-54R2	NO EFFECT	49-23R1	NO EFFECT
38-18	NO EFFECT	38-55	NO EFFECT	49-23R3	NO EFFECT
38-19	NO EFFECT	38-56	NO EFFECT	49-24	NO EFFECT
38-21	25-29-54	38A57	NO EFFECT	49-25	NO EFFECT
	25-29-57	38-59	NO EFFECT	49-26	NO EFFECT
38-21R1	25-29-54	38-59R1	NO EFFECT	49-27	NO EFFECT
	25-29-57	38-59R2	NO EFFECT	49-30	NO EFFECT
38-22	NO EFFECT	38-60	NO EFFECT	49-30R1	NO EFFECT



BOEING

COMPONENT
MAINTENANCE MANUAL

SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER
49-31	NO EFFECT	51-7	32-11-21	51-21	NO EFFECT
49-34	NO EFFECT		32-11-31	51-22	NO EFFECT
49A35	NO EFFECT		32-11-41	51-22R1	NO EFFECT
49A35R1	NO EFFECT		32-11-51	51A23	NO EFFECT
49-36	NO EFFECT		32-11-61	51A24	NO EFFECT
49-37	NO EFFECT		32-11-71	51-25	NO EFFECT
49-38	NO EFFECT		32-11-81	51-26	NO EFFECT
51-1	NO EFFECT	51-7R1	32-11-21	51A27	NO EFFECT
51-1R1	NO EFFECT		32-11-31	51A28	NO EFFECT
51-2	NO EFFECT		32-11-41	51-30R2	NO EFFECT
51-3	NO EFFECT		32-11-51	52-1	NO EFFECT
51-4	NO EFFECT		32-11-61	52-1R1	NO EFFECT
51-5	NO EFFECT		32-11-71	52-1R2	NO EFFECT
51-5R1	NO EFFECT		32-11-81	52-2	NO EFFECT
51-5R2	NO EFFECT	51-8	57-53-23	52-3	NO EFFECT
51-5R3	NO EFFECT	51-8R1	57-53-23	52-4	52-48-15
51-6	52-11-15	51-8R2	57-53-23		52-48-41
	52-34-01	51-10	55-40-13	52-4R1	52-48-15
	52-34-41		57-60-51		52-48-41
	52-48-12	51-10R1	55-40-13	52-5	52-11-01
	52-48-15		57-60-51		52-11-21
	52-48-42	51-10R2	55-40-13	52-5R1	52-11-01
	52-48-44		57-60-51		52-11-21
	53--	51-11	55-30-01	52-6	52-34-01
51-6R1	52-11-15	51-12	55-40-13	52-6R1	52-34-01
	52-34-01		57-60-51	52A7	NO EFFECT
	52-34-41	51-12R1	55-40-13	52A7R1	NO EFFECT
	52-48-12		57-60-51	52A7R2	NO EFFECT
	52-48-15	51-13	NO EFFECT	52-8	NO EFFECT
	52-48-42	51-14	NO EFFECT	52-8R1	NO EFFECT
	52-48-44	51-16	NO EFFECT	52-8R2	NO EFFECT
	53--	51-19	NO EFFECT	52-8R3	NO EFFECT
51-6R2	52-11-15	51-19R1	NO EFFECT	52-9	NO EFFECT
	52-34-01	51-19R2	NO EFFECT	52-10	NO EFFECT
	52-34-41	51-19R3	NO EFFECT	52A11	NO EFFECT
	52-48-12	51-19R4	NO EFFECT	52A11R1	NO EFFECT
	52-48-15	51A20	NO EFFECT	52A11R2	NO EFFECT
	52-48-42	51A20R1	NO EFFECT	52-12	NO EFFECT
	52-48-44	51A20R2	NO EFFECT	52-13	NO EFFECT
	53--	51A20R3	NO EFFECT	52-14	NO EFFECT



BOEING

COMPONENT
MAINTENANCE MANUAL

SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER
52-15	NO EFFECT	52-38R1	NO EFFECT	52-58	52-11-12
52-16	NO EFFECT	52-39	NO EFFECT		52-11-32
52-16R1	NO EFFECT	52-40	52-11-		52-11-42
52-17	NO EFFECT	52-40R1	NO EFFECT	52-59	NO EFFECT
52-17R1	NO EFFECT	52-41	NO EFFECT	52-59R1	NO EFFECT
52-18	52-34-41	52-42	NO EFFECT	52-60	NO EFFECT
52-19	NO EFFECT	52-42R1	NO EFFECT	52A61	NO EFFECT
52-19R1	NO EFFECT	52-42R2	NO EFFECT	52A61R1	52-11-20
52-19R2	52-34-41	52-43	NO EFFECT	52-64	NO EFFECT
52-20	52-21-11	52-43R1	NO EFFECT	52-65	NO EFFECT
52-21	NO EFFECT	52-44	NO EFFECT	52-65R1	NO EFFECT
52-22	NO EFFECT	52-44R1	NO EFFECT	52-66	NO EFFECT
52-23	NO EFFECT	52-44R2	NO EFFECT	52-66R1	NO EFFECT
52-23R1	NO EFFECT	52-44R3	NO EFFECT	52-67	NO EFFECT
52-23R2	NO EFFECT	52-45	NO EFFECT	52A67R1	NO EFFECT
52-24	52-34-01	52-45R1	NO EFFECT	52-68	52-22-21
52-24R1	52-34-01	52-45R2	NO EFFECT	52A69	NO EFFECT
52-24R2	52-34-01	52A46	52-36-21	52-70	52-48-12
52-24R3	52-34-01	52-47	52-36-21	52-71	NO EFFECT
52-25	NO EFFECT	52-48	NO EFFECT	52-71R1	NO EFFECT
52-26	52-34-41	52-49	52-48-61	52-72	52-32-04
52-28	NO EFFECT	52-49R1	52-48-61	52A73	NO EFFECT
52-29	52-11-61	52-50	52-48-12	52-74	NO EFFECT
	52-11-71		52-48-42	52-75	NO EFFECT
52-29R1	52-11-61	52-51	NO EFFECT	52-75R1	NO EFFECT
	52-11-71	52-52	NO EFFECT	52-76	NO EFFECT
52-30	NO EFFECT	52-52R1	NO EFFECT	52-77	NO EFFECT
52-31	NO EFFECT	52A53	NO EFFECT	52-78	33-16-
52-32	52-11-01	52A53R1	NO EFFECT	52-78R1	33-16-
	52-11-21	52A53R2	52-11-62	52-78R2	33-16-
52-32R1	52-11-01	52-54	NO EFFECT	52-79	NO EFFECT
	52-11-21	52-56	52-11-83	52-79R1	NO EFFECT
52-32R2	52-11-06		52-11-85	52-80	NO EFFECT
	52-11-22		52-11-88	52-81	NO EFFECT
	52-11-51	52-56R1	52-11-83	52-82	52-22-21
52-34	52-11-01		52-11-85	52-83	NO EFFECT
	52-11-21		52-11-88	52-83R1	NO EFFECT
52-36	NO EFFECT	52A57	52-11-12	52-84	NO EFFECT
52-37	52-11-91		52-11-32	52-84R1	NO EFFECT
52-38	NO EFFECT		52-11-42	52-85	NO EFFECT



BOEING
COMPONENT
MAINTENANCE MANUAL

SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER
52-86	52-22-21	53A26	NO EFFECT	53-48R1	57-43-51
52-88	NO EFFECT	53-26R1	NO EFFECT	53-49	NO EFFECT
52-0070	NO EFFECT	53A26R1	NO EFFECT	53-50	NO EFFECT
53A1	NO EFFECT	53-26R2	NO EFFECT	53-52	NO EFFECT
53A1R1	NO EFFECT	53A26R2	NO EFFECT	53-53	NO EFFECT
53-2	NO EFFECT	53-26R3	NO EFFECT	53-57	NO EFFECT
53-3	NO EFFECT	53A26R3	NO EFFECT	53-58	NO EFFECT
53-4	NO EFFECT	53A26R4	NO EFFECT	53-59	NO EFFECT
53-5	NO EFFECT	53A26R5	NO EFFECT	53-59R1	NO EFFECT
53-6	NO EFFECT	53-27	NO EFFECT	53-60	NO EFFECT
53-8	NO EFFECT	53-28	NO EFFECT	53-62	NO EFFECT
53-9	NO EFFECT	53-28R1	NO EFFECT	53-63	NO EFFECT
53-9R1	NO EFFECT	53-28R2	NO EFFECT	53-63R1	NO EFFECT
53-10	NO EFFECT	53-29	NO EFFECT	53-63R2	NO EFFECT
53-10R1	NO EFFECT	53-30	57-43-51	53-65	NO EFFECT
53-11	NO EFFECT	53-30R1	57-43-51	53-65R1	NO EFFECT
53-12	NO EFFECT	53-31	NO EFFECT	53-66	NO EFFECT
53-13	NO EFFECT	53-32	NO EFFECT	53A66R4	NO EFFECT
53-14	NO EFFECT	53-32R1	NO EFFECT	53-67	NO EFFECT
53-15	NO EFFECT	53-33	NO EFFECT	53-67R1	NO EFFECT
53-16	NO EFFECT	53-35	NO EFFECT	53-67R2	NO EFFECT
53-16R1	NO EFFECT	53-37	NO EFFECT	53-67R3	NO EFFECT
53-16R2	NO EFFECT	53-38	NO EFFECT	53-68	NO EFFECT
53-17	NO EFFECT	53-39	NO EFFECT	53-68R1	NO EFFECT
53-17R1	NO EFFECT	53A40	NO EFFECT	53-68R2	NO EFFECT
53-18	NO EFFECT	53-41	NO EFFECT	53-69	NO EFFECT
53-18R1	NO EFFECT	53-42	32-11-60	53-69R1	NO EFFECT
53-18R2	NO EFFECT		57-43-51	53-69R2	NO EFFECT
53-19	NO EFFECT	53-44	NO EFFECT	53-69R3	NO EFFECT
53-22	NO EFFECT	53-45	NO EFFECT	53-69R4	NO EFFECT
53-22R1	NO EFFECT	53-46	NO EFFECT	53-69R5	NO EFFECT
53-22R2	NO EFFECT	53-47	NO EFFECT	53-70	57-43-51
53-22R3	NO EFFECT	53-47R1	NO EFFECT	53-71	NO EFFECT
53-22R4	NO EFFECT	53-48	32-11-19	53-72	NO EFFECT
53-22R5	NO EFFECT		32-11-20	53-72R1	NO EFFECT
53-23	53-00-03		32-11-60	53-73	NO EFFECT
53-23R1	53-00-03		57-43-51	53-73R1	NO EFFECT
53-24	NO EFFECT	53-48R1	32-11-19	53-77	NO EFFECT
53-24R1	NO EFFECT		32-11-20	53-78	NO EFFECT
53-25	NO EFFECT		32-11-60	53-78R1	NO EFFECT



BOEING
COMPONENT
MAINTENANCE MANUAL

<u>SERVICE BULLETIN NUMBER</u>	<u>CMM NUMBER</u>	<u>SERVICE BULLETIN NUMBER</u>	<u>CMM NUMBER</u>	<u>SERVICE BULLETIN NUMBER</u>	<u>CMM NUMBER</u>
53-78R2	NO EFFECT	53-104	NO EFFECT	54-23	NO EFFECT
53A78R3	NO EFFECT	53-104R1	NO EFFECT	54-23R1	NO EFFECT
53A78R4	NO EFFECT	53A105	NO EFFECT	54A24	NO EFFECT
53-79	55-10-01	53A106	NO EFFECT	54A24R1	NO EFFECT
53-79R1	55-10-01	53-107	NO EFFECT	54-25	NO EFFECT
53-79R2	55-10-01	53-110	NO EFFECT	54-25R1	NO EFFECT
53-80	NO EFFECT	53-111	NO EFFECT	54-25R2	NO EFFECT
53-81	NO EFFECT	53A113	NO EFFECT	54-26	NO EFFECT
53-82	NO EFFECT	54-1	NO EFFECT	54A27	71-11-42
53-83	NO EFFECT	54-2	NO EFFECT		78-31-14
53-84	NO EFFECT	54-3	NO EFFECT		78-31-16
53-85	NO EFFECT	54-5	54-53-01	54A27R1	71-11-42
53A85	NO EFFECT	54-8	NO EFFECT		78-31-14
53A85R1	NO EFFECT	54-8R1	NO EFFECT		78-31-16
53A85R2	NO EFFECT	54-8R2	NO EFFECT	54A27R2	71-11-42
53A85R3	NO EFFECT	54-9	NO EFFECT		78-31-14
53-86	NO EFFECT	54-9R1	NO EFFECT		78-31-16
53-86R1	NO EFFECT	54-10	NO EFFECT	54A27R3	71-11-42
53-86R2	NO EFFECT	54-10R1	NO EFFECT		78-31-14
53-86R3	NO EFFECT	54-10R2	NO EFFECT		78-31-16
53A87	NO EFFECT	54-13	NO EFFECT	54A28	78-31-15
53A87R1	NO EFFECT	54-14	NO EFFECT	54A28R1	78-31-15
53-88	NO EFFECT	54-15	54-53-01	54-30	NO EFFECT
53A90	NO EFFECT	54-15R1	54-53-01	54-31	NO EFFECT
53A90R1	NO EFFECT	54-15R2	54-53-01	54-33	NO EFFECT
53A90R2	NO EFFECT	54-15R3	54-53-01	54-34	NO EFFECT
53-92	NO EFFECT	54-15R4	54-53-01	54-34R1	NO EFFECT
53-93	NO EFFECT	54-15R5	NO EFFECT	54-35	NO EFFECT
53-93R1	NO EFFECT	54-16	NO EFFECT	54-36	NO EFFECT
53-93R2	NO EFFECT	54-16R1	NO EFFECT	54-37	NO EFFECT
53-94	NO EFFECT	54-17	NO EFFECT	54-38	71-11-45
53-96R1	NO EFFECT	54-17R1	NO EFFECT	54A41	78-31-15
53-96R2	NO EFFECT	54-18	71-11-42	54-42	NO EFFECT
53-97	NO EFFECT		78-31-14	54-42R1	NO EFFECT
53-98	NO EFFECT		78-31-16	54-45	NO EFFECT
53-99	NO EFFECT	54-19	NO EFFECT	54-45R1	NO EFFECT
53A100	NO EFFECT	54-19R1	NO EFFECT	54-48	NO EFFECT
53A102	NO EFFECT	54-20	NO EFFECT	54-50	54-53-61
53A102R1	NO EFFECT	54-21	NO EFFECT	54-50R1	54-53-61
53-103	NO EFFECT	54-22	NO EFFECT	54-52	NO EFFECT



BOEING

COMPONENT
MAINTENANCE MANUAL

SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER
54-53	NO EFFECT	54-80	54-50-21	54-111	NO EFFECT
54-54	NO EFFECT	54-80R1	54-50-	55-1	55-20-11
54-54R1	NO EFFECT	54-81	54-50-	55-2	NO EFFECT
54-55	NO EFFECT	54-81R1	54-50-	55-3	NO EFFECT
54-55R1	NO EFFECT	54-82	54-50-21	55-5	NO EFFECT
54-56	NO EFFECT		54-52-XX	55-5R1	NO EFFECT
54-57	NO EFFECT	54-82R1	54-50-21	55-6	NO EFFECT
54-57R1	NO EFFECT		54-52-XX	55-6R1	NO EFFECT
54-59	NO EFFECT	54-83	54-50-21	55A7	NO EFFECT
54-60	NO EFFECT	54-88	54-50-21	55A7R1	NO EFFECT
54-60R1	NO EFFECT	54-88R1	54-50-21	55-8	NO EFFECT
54-60R2	NO EFFECT	54-89	NO EFFECT	55-8R1	NO EFFECT
54-61	NO EFFECT	54-89R1	NO EFFECT	56-1	NO EFFECT
54-61R1	NO EFFECT	54-90	NO EFFECT	56-2	56-11-11
54-61R2	NO EFFECT	54-90R1	54-51-	56-2R1	56-11-11
54A62	NO EFFECT	54-91	NO EFFECT	56-3	NO EFFECT
54-62R1	NO EFFECT	54-91R1	NO EFFECT	56-3R1	NO EFFECT
54A62R2	54-50-21	54-92	NO EFFECT	56-3R2	NO EFFECT
54A62R3	54-50-21	54-92R1	NO EFFECT	56-4	56-11-21
54A62R4	54-50-21	54-93	NO EFFECT	56-6	NO EFFECT
54A62R5	NO EFFECT	54A94	54-50-21	56-7	NO EFFECT
54-63	NO EFFECT	54A94R1	54-50-21	57-1	NO EFFECT
54-64	NO EFFECT	54A94R2	54-50-21	57-1R1	NO EFFECT
54-65	NO EFFECT	54-95	NO EFFECT	57-2	NO EFFECT
54-65R1	NO EFFECT	54-96	54-50-	57-3	NO EFFECT
54-66	NO EFFECT	54-96R1	54-50-	57-4	57-54-35
54-68	54-53-01	54A96R2	54-50-	57-5	NO EFFECT
54-69	54-50-21	54-98	NO EFFECT	57-5R1	NO EFFECT
54-69R1	54-50-21	54-100	NO EFFECT	57-5R2	NO EFFECT
54-69R2	54-50-21	54A101	NO EFFECT	57-6	NO EFFECT
54-70	NO EFFECT	54A101R1	NO EFFECT	57-6R1	NO EFFECT
54-70R1	NO EFFECT	54A101R2	54-50-	57-7	NO EFFECT
54-71	NO EFFECT	54A101R3	54-50-	57-8	NO EFFECT
54-72	NO EFFECT	54A101R4	54-50-	57-8R1	NO EFFECT
54-74	NO EFFECT	54A102	NO EFFECT	57-9	NO EFFECT
54-75	NO EFFECT	54-105	NO EFFECT	57-9R1	NO EFFECT
54-77	NO EFFECT	54-106	NO EFFECT	57-9R2	NO EFFECT
54-79	NO EFFECT	54-107	NO EFFECT	57-9R3	NO EFFECT
54-79R1	NO EFFECT	54-107R1	NO EFFECT	57-10	NO EFFECT
54-79R2	NO EFFECT	54-108	NO EFFECT	57-11	NO EFFECT



BOEING
COMPONENT
MAINTENANCE MANUAL

SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER
57-12	NO EFFECT	57-36	NO EFFECT	57A47R1	57-54-33
57-12R1	NO EFFECT	57-37	NO EFFECT	57-48	NO EFFECT
57-13	57-53-51	57A38	NO EFFECT	57-48R1	NO EFFECT
57-14	57-26-12	57A38R1	NO EFFECT	57-52	NO EFFECT
57-14R1	57-26-12	57A38R2	NO EFFECT	57-52R1	NO EFFECT
57-14R2	57-26-12	57A39	NO EFFECT	57-53	NO EFFECT
57-15	NO EFFECT	57A39R1	57-43-37	57-53R1	NO EFFECT
57-15R1	NO EFFECT		57-43-41	57-53R2	NO EFFECT
57-16	NO EFFECT		57-43-45	57A54	57-54-23
57-17	57-53-23		57-43-51	57A54R1	57-54-23
57-18	NO EFFECT		57-43-55	57A54R2	57-54-23
57-19	NO EFFECT		57-43-61	57A54R3	57-54-23
57-19R1	NO EFFECT	57-39R2	57-43-37	57A57	57-43-37
57-20	NO EFFECT		57-43-41		57-43-41
57-21	NO EFFECT		57-43-45		57-43-45
57-21R1	NO EFFECT		57-43-51		57-43-51
57-21R2	NO EFFECT		57-43-55		57-43-55
57-21R3	NO EFFECT		57-43-61		57-43-61
57-21R4	NO EFFECT	57A39R3	57-43-37	57A57R1	57-43-37
57-21R5	NO EFFECT		57-43-41		57-43-41
57-22	NO EFFECT		57-43-45		57-43-45
57-23	NO EFFECT		57-43-51		57-43-51
57-23R1	NO EFFECT		57-43-55		57-43-55
57-23R2	NO EFFECT		57-43-61		57-43-61
57-24	NO EFFECT	57-40	NO EFFECT	57A57R2	57-43-37
57-24R1	NO EFFECT	57-41	NO EFFECT		57-43-41
57-25	57-53-27	57-41R1	NO EFFECT		57-43-45
57-25R1	57-53-27	57-43	57-53-25		57-43-51
57-26	NO EFFECT		57-70-11		57-43-55
57-28	NO EFFECT	57-43R1	57-53-25		57-43-61
57-29	NO EFFECT		57-70-11	57A57R3	NO EFFECT
57-29R1	NO EFFECT	57-43R2	57-53-25	57A58	NO EFFECT
57-29R2	NO EFFECT		57-70-11	57A58R1	NO EFFECT
57-30	NO EFFECT	57-43R3	54-53-25	57A58R2	NO EFFECT
57-31	NO EFFECT		57-70-11	57A60	NO EFFECT
57-31R1	NO EFFECT	57-44	NO EFFECT	57A60R1	NO EFFECT
57-32	NO EFFECT	57-44R1	NO EFFECT	57A60R2	NO EFFECT
57-34	NO EFFECT	57-45	57-41-10	57-61	57-53-51
57-35	NO EFFECT	57-45R1	57-41-10	57-62	57-53-27
57-35R1	NO EFFECT	57-47	57-54-33	57-62R1	57-53-27



BOEING

COMPONENT
MAINTENANCE MANUAL

SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER
57-63	NO EFFECT	71-1	71-11-41	71-22R1	71-11-11
57-63R1	NO EFFECT	71-1R1	71-11-41	71-22R2	71-11-11
57A64	NO EFFECT	71-1R2	71-11-41	71-22R3	71-11-01
57A64R1	NO EFFECT	71-3	NO EFFECT		71-11-11
57A64R2	NO EFFECT	71-4	NO EFFECT	71-22R4	71-11-01
57A64R3	NO EFFECT	71-4R1	NO EFFECT		71-11-11
57A64R4	NO EFFECT	71-4R2	NO EFFECT	71-22R5	71-11-01
57A66	57-53-27	71-5	NO EFFECT		71-11-02
57A66R1	57-53-27	71-6	NO EFFECT	71-24	NO EFFECT
57A66R2	57-53-27	71-6R1	NO EFFECT	71-24R1	NO EFFECT
57A66R3	57-53-27	71-8	NO EFFECT	71A25	71-11-41
57-68	NO EFFECT	71-9	71-11-41		71-11-42
57-68R1	NO EFFECT	71-10	NO EFFECT		71-11-45
57-69	NO EFFECT	71-11	NO EFFECT	71A25R1	71-11-41
57-69R1	27-51-	71-12	NO EFFECT		71-11-42
57A70	NO EFFECT	71-12R1	NO EFFECT		71-11-45
57A70R1	NO EFFECT	71-13	71-11-45		78-31-14
57-70R2	NO EFFECT	71-14	71-11-45		78-31-15
57A70R3	NO EFFECT	71-14R1	71-11-45		78-31-16
57-73	57-54-	71-14R2	71-11-45		78-31-41
57A74	NO EFFECT	71-15	NO EFFECT	71-26	NO EFFECT
57A74R1	NO EFFECT	71-16	71-11-45	71-27	NO EFFECT
57A74R2	NO EFFECT	71-17	71-11-45	71-28	71-11-45
57A76	NO EFFECT	71-17R1	71-11-45	71-29	71-11-45
57A76R1	NO EFFECT	71-17R2	71-11-45	71-30	71-21-01
57-77	NO EFFECT	71-17R3	71-11-45	71-30R1	71-21-01
57A79	NO EFFECT	71A19	NO EFFECT	71-31	NO EFFECT
57-80	NO EFFECT	71A19R1	NO EFFECT	71-33	NO EFFECT
57-80R1	NO EFFECT	71A19R2	NO EFFECT	71-34	71-11-01
57-86	NO EFFECT	71A19R3	NO EFFECT		71-11-11
57-87	57-51-	71A19R4	NO EFFECT	71-34R1	71-11-01
57-88	NO EFFECT	71A19R5	NO EFFECT		71-11-11
57-89	NO EFFECT	71-19R6	NO EFFECT	71-35	NO EFFECT
57-90	NO EFFECT	71-20	71-11-45	71-35R1	NO EFFECT
57-91	NO EFFECT	71-20R1	71-11-45	71-36	71-11-61
57-92	NO EFFECT	71-21	71-11-45	71-37	71-11-35
57-93	NO EFFECT		78-11-06		71-11-41
57A94	NO EFFECT	71-21R1	71-11-45		71-11-42
57A95	NO EFFECT		78-11-06		71-11-45
57A101	57-43-	71-22	71-11-11		71-11-61



BOEING

COMPONENT
MAINTENANCE MANUAL

SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER
71-37R1	71-11-35	71A49R2	NO EFFECT	71-80R4	NO EFFECT
	71-11-41	71-51	71-11-59	71-81	NO EFFECT
	71-11-42	71-52	NO EFFECT	71A82	NO EFFECT
	71-11-45	71A53	NO EFFECT	71-83	NO EFFECT
	71-11-61	71-54	71-11-59	71-84	NO EFFECT
71-37R2	71-11-35	71-55	NO EFFECT	71-86	NO EFFECT
	71-11-41	71-55R1	NO EFFECT	71A87	71-21-01
	71-11-42	71A56	NO EFFECT		71-21-16
	71-11-45	71A57	NO EFFECT	71-88	71-13-
	71-11-53	71A57R1	NO EFFECT	71-89	NO EFFECT
	71-11-59	71-58	NO EFFECT	71-89R1	NO EFFECT
	71-11-61	71-60	NO EFFECT	71-89R2	NO EFFECT
71-37R3	71-11-35	71-61	NO EFFECT	71-92	NO EFFECT
	71-11-41	71-63	NO EFFECT	71-92R1	NO EFFECT
	71-11-42	71-64	NO EFFECT	71-94	NO EFFECT
	71-11-45	71-65	NO EFFECT	71-95	NO EFFECT
	71-11-53	71-65R1	NO EFFECT	71-96	NO EFFECT
	71-11-59	71-66	71-11-59	71-97	NO EFFECT
	71-11-61	71-67	71-11-45	71-98	NO EFFECT
71-38	71-21-01	71-67R1	71-11-45	71-99	NO EFFECT
71-38R1	71-38-01	71-68	71-21-16	71-100	NO EFFECT
71-39	71-11-41	71-68R1	71-21-16	71-101	NO EFFECT
71-40	NO EFFECT	71-69	NO EFFECT	71-102	NO EFFECT
71-40R1	NO EFFECT	71-70	NO EFFECT	71-104	NO EFFECT
71-41	NO EFFECT	71-71	NO EFFECT	71-105	NO EFFECT
71-41R1	NO EFFECT	71-71R1	NO EFFECT	71-106	NO EFFECT
71-41R2	NO EFFECT	71-72	NO EFFECT	71-106R1	NO EFFECT
71-41R3	NO EFFECT	71-73	71-21-01	71-106R2	NO EFFECT
71-41R4	NO EFFECT	71-74	71-21-16	71-107	NO EFFECT
71-42	71-11-45	71-74R1	71-21-16	71-108	NO EFFECT
71-42R1	71-11-45	71-75	NO EFFECT	71-109	NO EFFECT
71-42R2	71-11-45	71-76	NO EFFECT	71-110	NO EFFECT
71-42R3	71-11-45	71-77	NO EFFECT	71-111	NO EFFECT
71-43	NO EFFECT	71-78	NO EFFECT	71-111R1	NO EFFECT
71-46	NO EFFECT	71-78R1	NO EFFECT	71-112	NO EFFECT
71-47	71-11-45	71-79	NO EFFECT	71-112R1	NO EFFECT
71-48	71-11-59	71-80	NO EFFECT	71-113	NO EFFECT
	71-21-16	71-80R1	NO EFFECT	71-113R1	NO EFFECT
71A49	NO EFFECT	71-80R2	NO EFFECT	71-115	NO EFFECT
71A49R1	NO EFFECT	71-80R3	NO EFFECT	71-116	NO EFFECT



BOEING

COMPONENT
MAINTENANCE MANUAL

SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER
71-117	NO EFFECT	72-33	NO EFFECT	73-13R1	NO EFFECT
71-118	NO EFFECT	72A34	NO EFFECT	73-13R2	NO EFFECT
71-118R1	NO EFFECT	72A34R1	NO EFFECT	73-13R3	NO EFFECT
71-120	NO EFFECT	72-35	NO EFFECT	73-14	NO EFFECT
71-122	NO EFFECT	72-37	NO EFFECT	73-14R1	NO EFFECT
71-124	NO EFFECT	72-37R1	NO EFFECT	73-14R2	NO EFFECT
71-125	NO EFFECT	72-38	NO EFFECT	73-15	NO EFFECT
71-126	NO EFFECT	72-38R1	NO EFFECT	73-15R1	NO EFFECT
72-3	NO EFFECT	72-39	NO EFFECT	73-16	NO EFFECT
72-5	NO EFFECT	72-42	NO EFFECT	73-20	NO EFFECT
72-6	NO EFFECT	72-43	NO EFFECT	73-22	NO EFFECT
72-7	NO EFFECT	72-44	NO EFFECT	73-22R1	NO EFFECT
72-8	NO EFFECT	72-48	NO EFFECT	73-22R2	NO EFFECT
72-9	NO EFFECT	72A50	NO EFFECT	73A23	NO EFFECT
72-9R1	NO EFFECT	72A50R1	NO EFFECT	73A23R1	NO EFFECT
72-10	NO EFFECT	72A50R2	NO EFFECT	73-24	NO EFFECT
72-10R1	NO EFFECT	72-52	NO EFFECT	73-24R1	NO EFFECT
72-11	NO EFFECT	72-54	NO EFFECT	73-24R2	NO EFFECT
72-14	NO EFFECT	72-55	NO EFFECT	73-24R3	NO EFFECT
72-14R1	NO EFFECT	72-56	NO EFFECT	73-26	NO EFFECT
72-15	NO EFFECT	72-57	NO EFFECT	73-26R1	NO EFFECT
72-15R1	NO EFFECT	73-1	NO EFFECT	73-26R2	NO EFFECT
72-16	NO EFFECT	73-2	NO EFFECT	73-26R3	NO EFFECT
72-17	NO EFFECT	73-2R1	NO EFFECT	73-29	NO EFFECT
72-18	NO EFFECT	73-3	NO EFFECT	73-29R1	NO EFFECT
72-19	NO EFFECT	73-4	NO EFFECT	73-29R2	NO EFFECT
72-20	NO EFFECT	73-5	NO EFFECT	73-31	NO EFFECT
72-20R1	NO EFFECT	73A6	NO EFFECT	73-31R1	NO EFFECT
72-21	NO EFFECT	73A6R1	NO EFFECT	73-32	NO EFFECT
72-22	NO EFFECT	73A6R2	NO EFFECT	73-32R1	NO EFFECT
72-23	NO EFFECT	73A7	NO EFFECT	73-32R2	NO EFFECT
72-24	NO EFFECT	73A7R1	NO EFFECT	73A33	NO EFFECT
72-24R1	NO EFFECT	73A7R2	NO EFFECT	73A33R1	NO EFFECT
72-25	NO EFFECT	73-8	NO EFFECT	73-35	NO EFFECT
72-27	NO EFFECT	73-9	NO EFFECT	73-36	NO EFFECT
72-28	NO EFFECT	73-10	NO EFFECT	73-37	NO EFFECT
72-29	NO EFFECT	73-11	NO EFFECT	73-38	NO EFFECT
72-29R1	NO EFFECT	73-11R1	NO EFFECT	73-40	NO EFFECT
72A30	NO EFFECT	73-11R2	NO EFFECT	73-40R1	NO EFFECT
72-31	NO EFFECT	73-13	NO EFFECT	73-40R2	NO EFFECT



BOEING
COMPONENT
MAINTENANCE MANUAL

<u>SERVICE BULLETIN NUMBER</u>	<u>CMM NUMBER</u>	<u>SERVICE BULLETIN NUMBER</u>	<u>CMM NUMBER</u>	<u>SERVICE BULLETIN NUMBER</u>	<u>CMM NUMBER</u>
73-41	NO EFFECT	75-4	NO EFFECT	76-17	76-11-19
73-41R1	NO EFFECT	75-4R1	NO EFFECT	76-18	76-11-11
73-42	NO EFFECT	75-5	NO EFFECT		76-11-18
73-43	NO EFFECT	75-6	NO EFFECT		78-34-41
73-43R1	NO EFFECT	75A8	NO EFFECT		78-34-51
73-43R2	NO EFFECT	75A8R1	NO EFFECT	76-18R1	76-11-11
73-44	NO EFFECT	75-9	NO EFFECT		76-11-18
73-44R1	NO EFFECT	75-9R1	NO EFFECT		78-34-41
73-44R2	NO EFFECT	75-9R2	NO EFFECT		78-34-51
73-45	NO EFFECT	75-9R3	NO EFFECT	76-18R2	76-11-11
73-45R1	NO EFFECT	75-9R4	NO EFFECT		76-11-18
73-45R2	NO EFFECT	75-10	NO EFFECT		78-34-41
73-45R3	NO EFFECT	75-11	NO EFFECT		78-34-51
73-45R4	NO EFFECT	76-1	NO EFFECT	76A19	NO EFFECT
73-45R5	NO EFFECT	76-2	NO EFFECT	76-20	NO EFFECT
73-46	NO EFFECT	76-3	NO EFFECT	76-23	NO EFFECT
73-46R1	NO EFFECT	76-3R1	NO EFFECT	76-24	NO EFFECT
73-47	NO EFFECT	76-4	78-34-41	76-25	NO EFFECT
73-47R1	NO EFFECT		78-34-51	76-26	NO EFFECT
73-48	NO EFFECT	76-4R1	78-34-41	76-26R1	NO EFFECT
73A49	NO EFFECT		78-34-51	76-27	NO EFFECT
73A49R1	NO EFFECT	76-4R2	78-34-41	76-27R1	NO EFFECT
73A49R2	NO EFFECT		78-34-51	76-28	76-11-11
73A49R3	NO EFFECT	76-5	NO EFFECT	76-28R1	76-11-11
73A49R4	NO EFFECT	76-6	NO EFFECT	76-28R2	76-11-11
73A49R5	NO EFFECT	76-6R1	NO EFFECT	76-28R3	76-11-11
73-51	NO EFFECT	76-7	78-34-41	76-30	NO EFFECT
73-51R1	NO EFFECT		78-34-51	76-30R1	NO EFFECT
73-51R2	NO EFFECT	76-8	76-11-21	76-30R2	NO EFFECT
74-1	NO EFFECT	76-9	76-11-11	76-31	76-11-19
74-1R1	NO EFFECT	76-10	NO EFFECT	76-31R1	76-11-19
74-2	NO EFFECT	76-10R1	NO EFFECT	76-31R2	76-11-19
74-2R1	NO EFFECT	76-11	NO EFFECT	76-32	NO EFFECT
74-2R2	NO EFFECT	76-11R1	NO EFFECT	76-35	NO EFFECT
74-3	NO EFFECT	76-13	NO EFFECT	76-36	NO EFFECT
74-4	NO EFFECT	76-13R1	NO EFFECT	76-39	NO EFFECT
74-5	NO EFFECT	76-14	NO EFFECT	76-39R1	NO EFFECT
75-1	NO EFFECT	76-14R1	NO EFFECT	76A2068R4	NO EFFECT
75-2	NO EFFECT	76-15	NO EFFECT	77-1	NO EFFECT
75-3	NO EFFECT	76-16	NO EFFECT	77-1R1	NO EFFECT



BOEING

COMPONENT
MAINTENANCE MANUAL

SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER
77-2	NO EFFECT	78-8	78-31-11	78-28	78-34-41
77-3	NO EFFECT		78-31-13	78-28R1	78-34-41
77-4	NO EFFECT		78-31-14	78-29	78-31-09
77-5	NO EFFECT	78-8R1	78-31-11	78-30	78-31-16
77-6	NO EFFECT		78-31-13		78-31-41
77-7	NO EFFECT		78-31-14	78-32	NO EFFECT
77-8	NO EFFECT	78-9	78-31-11	78-32R1	NO EFFECT
77-9	NO EFFECT	78-05	NO EFFECT	78-32R2	NO EFFECT
77-9R1	NO EFFECT	78-10	71-11-25	78-33	NO EFFECT
77-10	NO EFFECT	78-10R1	71-11-25	78-33R1	NO EFFECT
77-11	NO EFFECT	78-11	78-31-15	78-34	NO EFFECT
77-11R1	NO EFFECT	78-11R1	78-31-15	78-34R1	NO EFFECT
77-12	NO EFFECT	78-12	71-11-31	78-34R2	NO EFFECT
77-13	NO EFFECT		71-11-32	78-34R3	NO EFFECT
77-13R1	NO EFFECT		71-11-56	78-35	NO EFFECT
77-16	NO EFFECT	78-14	NO EFFECT	78-35R1	NO EFFECT
77-17	NO EFFECT	78-14R1	NO EFFECT	78-36	78-31-22
77-18	77-35-20	78-15	78-31-25		78-31-45
77-18R1	77-35-20	78-15R1	78-31-25	78-37	78-31-22
77-19	NO EFFECT	78-15R2	78-31-25	78A38	NO EFFECT
77-20	NO EFFECT	78-16	78-31-08	78-39	78-31-25
77-21	NO EFFECT	78-17	NO EFFECT	78-39R1	78-31-25
77-22	77--	78-18	NO EFFECT	78-39R2	78-31-25
77-22R1	77--	78-18R1	NO EFFECT	78-40	NO EFFECT
77-23	NO EFFECT	78-19	78-31-25	78A40R1	NO EFFECT
77-23R1	NO EFFECT	78-19R1	78-31-25	78-41	78-31-22
77-25	NO EFFECT	78-20	71-11-31	78-42	NO EFFECT
77-26	NO EFFECT		71-11-32	78-43	NO EFFECT
77-26R1	NO EFFECT		71-11-33	78-45	NO EFFECT
78-1	NO EFFECT	78-20R1	71-11-31	78-46	NO EFFECT
78-4	71-11-25		71-11-32	78-46R1	NO EFFECT
78-4R1	71-11-25		71-11-33	78-46R2	NO EFFECT
78-4R2	71-11-25	78-21	NO EFFECT	78-47	NO EFFECT
78-4R3	71-11-25	78-22	78-31-15	78-47R1	NO EFFECT
78-5	78-31-21	78-22R1	78-31-15	78-47R2	NO EFFECT
78-5R1	78-31-21	78-24	71-11-25	78-47R3	NO EFFECT
78-6	78-31-22	78-24R1	71-11-25	78-48	NO EFFECT
78-6R1	78-31-22	78-25	NO EFFECT	78-48R1	NO EFFECT
78-6R2	78-31-22	78-26	78-31-15	78-49	NO EFFECT
78-6R3	78-31-22	78-27	NO EFFECT	78-50	NO EFFECT

SERVICE BULLETIN LIST



BOEING

COMPONENT
MAINTENANCE MANUAL

SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER
78-50R1	NO EFFECT	78-61R2	22-32-21	78-67R1	78-31-15
78-51	NO EFFECT		22-32-35	78-67R2	78-31-15
78-51R1	NO EFFECT		78-31-14	78-68	78-31-14
78A52	NO EFFECT		78-31-16		78-31-16
78A52R1	NO EFFECT	78-61R3	22-32-21	78-68R1	78-31-14
78A52R2	NO EFFECT		22-32-35		78-31-16
78-53	NO EFFECT		78-31-14	78-68R2	78-31-14
78-53R1	NO EFFECT		78-31-16		78-31-16
78-53R2	78-31-15	78-61R4	22-32-21	78-68R3	78-31-14
78-54	NO EFFECT		22-32-35		78-31-16
78-54R1	NO EFFECT		78-31-14	78-69	71-11-32
78-54R2	78-31-14		78-31-16		71-11-33
78-55	NO EFFECT	78-62	22-32-38		71-11-56
78-57	NO EFFECT	78-62R1	22-32-38	78-69R1	71-11-32
78-57R1	NO EFFECT		71-11-56		71-11-33
78-59	22-32-22		78-31-41		71-11-56
	22-32-38	78-62R2	22-32-38	78-71	NO EFFECT
78-59R1	22-32-22		71-11-56	78A72	78-31-41
	22-32-38		78-31-41	78A72R1	78-31-41
78-59R2	22-32-22	78-62R3	22-32-38	78-74	71-11-31
	22-32-38		71-11-56		71-11-32
78-59R3	22-32-22		78-31-41		71-11-33
	22-32-38	78-62R4	22-32-38	78-75	NO EFFECT
78-60	22-32-35		71-11-56	78-75R1	NO EFFECT
	78-31-15		78-31-41	78-76	NO EFFECT
78-60R1	22-32-35	78-62R5	22-32-38	78-77	NO EFFECT
	78-31-15		71-11-56	78-78	NO EFFECT
78-60R2	22-32-21		78-31-41	78A79	71-11-56
	78-31-15	78-63	22-32-35	78A79R1	71-11-56
78-60R3	22-32-21		22-32-38	78A79R2	71-11-56
	78-31-15	78-63R1	22-32-35	78A79R3	71-11-16
78-60R4	22-32-21	78-63R2	22-32-35	78A80	71-11-31
	78-31-15		22-32-38		71-11-32
78-61	22-32-21	78-63R3	22-32-35		71-11-33
	22-32-35		22-32-38		71-11-56
	78-31-14	78A64	78-34-03		78-31-41
78-61R1	22-32-21	78A65	78-34-03		78-31-45
	22-32-35	78-66	71-11-25	78A80R1	71-11-31
	78-31-14		71-11-26		71-11-32
	78-31-16	78-67	78-31-15		71-11-33



BOEING

COMPONENT
MAINTENANCE MANUAL

SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER	SERVICE BULLETIN NUMBER	CMM NUMBER
78A80R1	71-11-56	78A91R2	NO EFFECT	79-20R2	NO EFFECT
	78-31-41	78A92	NO EFFECT	79-21	NO EFFECT
	78-31-45	78A92R1	NO EFFECT	79-22	NO EFFECT
78A80R2	71-11-	78A93	NO EFFECT	79-22R1	NO EFFECT
	78-31-	78-94	78-10-	80-1	NO EFFECT
78A80R3	71-11-	78-95	78-10-	80-2	NO EFFECT
	78-31-	79-1	NO EFFECT	80-2R1	NO EFFECT
78A81	NO EFFECT	79-2	NO EFFECT	80-3	NO EFFECT
78A81R1	NO EFFECT	79-2R1	NO EFFECT	80-4	36-10-06
78A81R2	NO EFFECT	79-2R2	NO EFFECT	80-4R1	36-10-06
78-82	NO EFFECT	79-3	NO EFFECT	80-5	NO EFFECT
78-82R1	NO EFFECT	79-4	NO EFFECT	80-6	NO EFFECT
78-82R2	NO EFFECT	79-4R1	NO EFFECT	80-7	NO EFFECT
78-83	78-31-08	79-5	NO EFFECT	80-7R1	NO EFFECT
78-83R1	78-31-08	79-6	NO EFFECT	80-7R2	NO EFFECT
78-83R2	78-31-	79-7	NO EFFECT	80-7R3	NO EFFECT
78-84	NO EFFECT	79-8	NO EFFECT		
78-84R1	NO EFFECT	79-9	NO EFFECT		
78-84R2	NO EFFECT	79-10	NO EFFECT		
78-84R3	NO EFFECT	79-11	NO EFFECT		
78-85R1	NO EFFECT	79-12	NO EFFECT		
78-86	NO EFFECT	79-12R1	NO EFFECT		
78-86R1	NO EFFECT	79-12R2	NO EFFECT		
78-87	NO EFFECT	79-13	NO EFFECT		
78A88	NO EFFECT	79-13R1	NO EFFECT		
78A89	71-11-	79-13R2	NO EFFECT		
	78-31-	79-13R3	NO EFFECT		
78A89R1	71-11-	79-13R4	NO EFFECT		
	78-31-	79-14	NO EFFECT		
78A89R2	71-11-	79-14R1	NO EFFECT		
	78-31-	79-15	NO EFFECT		
78A89R3	71-11-	79-16	NO EFFECT		
	78-31-	79A17	NO EFFECT		
78A90	NO EFFECT	79A17R1	NO EFFECT		
78A90R1	NO EFFECT	79-18	NO EFFECT		
78A90R2	NO EFFECT	79-19	NO EFFECT		
78A90R3	NO EFFECT	79-19R1	NO EFFECT		
78A90R4	NO EFFECT	79-19R2	NO EFFECT		
78A91	NO EFFECT	79-20	NO EFFECT		
78A91R1	NO EFFECT	79-20R1	NO EFFECT		

INTRODUCTION

CAUTION: MAKE SURE THAT YOU DO ALL OF THE STEPS TO THE END OF THE PROCEDURE. LARGE BLANK SPACES CAN OCCUR AT THE BOTTOM OF PAGES WHICH DO NOT ALWAYS INDICATE THAT YOU ARE AT THE END OF THE PROCEDURE. IF YOU DO NOT MAKE SURE THAT YOU COMPLETED THE PROCEDURE, DAMAGE TO EQUIPMENT OR SYSTEM MALFUNCTION COULD OCCUR.

1. GENERAL

The Boeing 767 Component Maintenance Manual, Document D634T101, consists of a List of Effective Pages for the introductory material, Introduction, List of Chapters, Numerical Index, Service Bulletin List, Manual Applicability Index, Tab Dividers and sufficient binders to provide space for filing the Boeing-prepared individual component maintenance manuals for equipment used on Boeing 767 Airplanes.

The individual manuals for Boeing proprietary items are prepared by the Boeing Commercial Airplane Group, Airplane Maintenance and Repair Engineering Organization. The manuals are prepared in accordance with the Air Transport Association of America Specification Number 100, titled "Specification for Manufacturers' Technical Data." Information on vendor items of equipment is furnished directly to the airlines by the equipment manufacturer.

Each individual component maintenance manual contains a Title Page, Revision Record, Temporary Revision and Service Bulletin Record, Table of Contents, and Introduction, together with the technical data required to maintain the component. This data contains descriptive, testing and trouble shooting, disassembly, cleaning, check, repair, assembly, special tools and illustrated parts list information. Parts listing covers the configuration of each assembly as delivered to the customer on the airplane. Information on Boeing components is revised in accordance with the applicable Purchase Agreement between The Boeing Company and the customer. Component maintenance data on new items of equipment will be furnished.

Some of the procedures in this manual identify tools or equipment. But you can use equivalent alternatives unless the procedure tells you the specified tool or equipment item is mandatory. If you use alternative tools or equipment, make sure that they give the same results and are safe to the parts and personnel as the tools or equipment specified in the procedure.

These manuals do not contain information relative to work normally performed on the flight line or in the airplane maintenance operation. Instructions are furnished to enable an experienced mechanic to rebuild and fully test repairable assemblies removed from the airplane. Information on servicing, removal and installation of these components in the airplane is found in the Boeing 767 Maintenance Manual.

This manual does not include data that is necessary to repair vendor components. Refer to the Illustrated Parts List to find the applicable vendor part number and CAGE code. Then go to the OHM/CMM index, document D6-47081, to find the vendor's overhaul or component maintenance manual.

2. COMPONENT MAINTENANCE MANUAL IDENTIFICATION

Individual manuals are classified into systems and subsystems and each assembly or component is identified by a separate manual number.

Information on all units comprising a system will be identified by the number of that system, or by a general number indicative of the several subsystems which may be included in that system. Thus, all units relating to the generation and distribution of electrical power would be covered in System 24, ELECTRICAL POWER, while electrically driven pumps and valves serving the fuel system would be covered in System 28, FUEL. All units of the stabilizer trim system, one of several flight control systems, would be included in System 27, FLIGHT CONTROLS. General information to support component maintenance procedures is included in Boeing Document D6-51702, CHAPTER 20, STANDARD OVERHAUL PRACTICES.

Each of the Boeing-prepared manuals is identified by a three-element, six-digit, number. The first element in the three-part number is the system number and serves to identify the functional system to which the manual pertains. The middle element is the section number and serves to group all the individual manuals which are related in a subsystem. The last element identifies a specific manual, and identifies and groups all pages relative to a specific assembly or component.

3. HOW TO LOCATE INFORMATION

A Numerical Index listing all available Boeing-prepared individual component maintenance manuals for equipment used on Boeing 767 Airplanes, is provided to help locate information readily. This index is subdivided into three parts: The Numerical Index Alpha lists manuals that are not identified with a specific part number, the Numerical Index Numeric lists manuals that are identified with a specific part number, and the Numerical Index Manuals lists numerically by manual number all manuals that are applicable to 767 components. Before the search can be started the part number, nomenclature, or related system of the assembly must be known. Assemblies identified by a specific part number can be located by turning to the Numerical Index Numeric and locating the assembly part number in the Part No. column. After locating the part number, follow across the page to the Manual No. column and note the corresponding manual number.

Subjects and assemblies which are not identified by a specific part number can be located by turning to the Numerical Index Alpha and locating the nomenclature in the Title column. By following across the page to the Manual No. column, the manual number can be obtained.

Chapter 20 manuals are listed in the numerical indexes for reference only. All standard component maintenance practices are contained in Boeing Document D6-51702.

The "Manuals" portion of the Numerical Index lists all released manuals numerically by manual number. This listing groups and identifies all manuals released against any ATA system or subsystem. Thus, all manuals having 32-11 as the first four digits of their number, pertain to main landing gear components, and those with 32-21 pertain to nose landing gear components.

Each of the Numerical Indexes gives the latest revision number and date for each manual listed.

4. LIST OF EFFECTIVE PAGES

A list of effective pages is provided at the beginning of each individual manual. All pages of the manual are listed individually and the date of the latest revision to each page is shown. Reference to this list will show if the manual contains the latest pages and references to the Numerical Index will show if the list itself is up to date. Reference to the Manual LEP will provide the latest date of the Numerical Index.

5. PUBLICATIONS CHANGE REQUESTS

Communications concerning this publication should be directed to the Boeing Commercial Airplanes, Maintenance Publications Engineering; Attention: Supervisor, Component Maintenance Manuals. To facilitate uniform handling and to provide direct routing of your questions to the proper Boeing organization, use of the Publications Change Request (PCR) Form is encouraged. Boeing makes this form available through your publications organization.

6. MANUAL APPLICABILITY INDEX

Each customer receives printed copies of only those individual component maintenance manuals that apply to the equipment installed on its airplanes. A customized listing is provided to each customer listing all manuals that should be in its files. Manuals added to the list are indicated by an "A". Manuals which are no longer applicable to a customer are designated by a "D" and will be deleted in the following revision.

Filmed copies of the Component Maintenance Manual contain component manuals for all shop-repairable components installed on 767 airplanes, irrespective of customer applicability. When using filmed copy, refer to the applicability index for manual applicability.

7. TEMPORARY REVISIONS

Temporary Revisions (TRs) are used to provide information to the airlines until such time as the information can be included in the affected manual through the normal revision service.

TRs are printed on yellow paper and are numbered consecutively, starting with number 1, for each chapter and for each airplane model. For example: a TR is to be issued against CMM 52-36-01. Four TRs have been previously issued for chapter 52 for this model airplane; therefore the TR number assigned for this CMM will be 52-5. Because not all customers receive all CMMs for a given model, not all customers will receive all TRs for a given model. This will cause gaps in the TR numbers that any given customer may receive.

Information in the TR is normally incorporated in the next scheduled revision to the affected manual. When the TR is incorporated, the TR number will be added to the TR/SB page in the CMM. A highlight is also added to advise the reader that the TR has been incorporated.

Since occasions do arise when the TR cannot be incorporated in the next scheduled revision, please confirm that the TR is included in the manual before you discard the TR.

8. SUBSTITUTION OF STANDARD PARTS

Substitution of Standard Parts, such as BACB10A-02; as identified in the Supersession List of the D-590 Part Standards or SRM 51-40-XX, is acceptable.

9. ILLUSTRATED PARTS LIST

Where a part is annotated for "Limited" it indicates that the part is not applicable to all versions of the next higher assembly. In these instances airplane effectivity maybe obtained by reference to the Illustrated Parts Catalog.

10. USE OF STANDARD INDUSTRY PRACTICES

The use of Standard Industry Practices to repair simple parts is permitted when no specific instructions are given in a CMM. The term "Standard Industry Practices" is defined in Standard Overhaul Practices Manual (SOPM) 20-00-00. If the user determines that the use of Standard Industry Practices is insufficient, a request for detailed repair instructions can be made through Boeing Service Engineering.



767 MANUAL APPLICABILITY INDEX

Printed copies of the 767 Component Maintenance Manual contain an index of component maintenance manuals applicable to equipment installed on each operator's airplanes. A two- or three-letter identification for that operator is on the bottom of each page. Manuals revised during the current revision are designated by an "R"; manuals added to the index are designated by an "A". Manuals no longer applicable are designated "D" and will be deleted during the next revision.



BOEING
COMPONENT
MAINTENANCE MANUAL

MANUAL NO.	MANUAL NO.	MANUAL NO.	MANUAL NO.
21-20-10	D 22-21-62	D 23-41-26	D 24-09-91
21-20-15	D 22-21-63	23-42-04	D 24-09-93
21-21-31	D 22-21-64	D 23-42-15	D 24-09-94
21-23-03	D 22-21-65	D 23-42-51	D 24-22-20
21-23-20	D 22-21-66	D 23-42-52	24-22-71
D 21-25-51	D 22-21-67	D 23-42-53	24-33-71
21-26-09	D 22-21-68	D 23-42-54	24-33-72
D 21-27-03	D 22-21-69	D 23-42-55	25-00-66
D 21-44-51	D 22-21-70	D 23-42-56	25-21-51
D 21-44-52	22-21-71	D 23-42-57	25-22-01
D 21-45-01	D 22-21-80	D 23-42-58	25-22-51
D 21-51-52	D 22-21-81	D 23-42-59	25-23-06
D 21-51-53	D 22-21-82	D 23-42-60	25-23-07
D 21-51-54	D 22-21-83	D 23-42-61	25-23-08
D 21-51-55	22-32-21	D 23-42-62	25-23-09
D 21-51-56	22-32-22	D 23-42-63	25-23-10
21-53-11	22-32-28	D 23-42-64	25-24-01
21-53-12	22-32-31	23-42-67	25-24-02
D 21-58-05	22-32-33	D 23-42-68	25-24-05
D 21-58-06	22-32-35	D 23-42-69	25-25-03
D 21-58-21	22-32-38	D 23-42-70	25-25-04
D 21-58-52	22-32-41	D 23-46-09	25-28-02
D 21-58-53	R 22-32-43	D 23-46-10	25-28-03
D 21-58-54	22-32-44	D 23-46-31	25-28-09
D 21-58-55	R 22-32-45	D 23-46-32	25-28-10
D 21-58-56	22-32-51	D 23-46-33	25-28-13
D 21-58-57	D 22-41-01	D 23-48-51	25-28-14
D 21-58-58	23-11-03	D 23-48-52	25-28-15
D 21-58-59	D 23-11-11	D 23-48-53	25-28-16
D 21-61-03	D 23-11-20	D 23-48-54	25-28-33
D 21-61-52	D 23-11-21	D 23-51-05	25-28-34
21-61-53	D 23-11-22	D 23-51-06	25-28-42
21-61-54	D 23-24-02	D 23-51-07	25-28-51
D 22-21-31	23-24-03	D 23-51-08	25-29-53
D 22-21-35	D 23-25-02	D 23-51-15	25-29-54
D 22-21-36	D 23-25-03	D 23-51-51	25-29-55
D 22-21-37	D 23-27-01	D 23-51-52	D 25-29-56
D 22-21-38	23-27-02	D 23-51-53	D 25-29-57
D 22-21-39	D 23-27-12	D 23-51-54	25-29-58
D 22-21-40	23-27-13	D 23-51-56	25-29-59
D 22-21-41	D 23-31-51	D 23-71-01	D 25-29-60
D 22-21-42	D 23-32-51	D 23-93-31	25-29-62
D 22-21-43	23-32-52	D 24-00-02	D 25-29-63
D 22-21-44	D 23-41-09	D 24-09-12	D 25-29-64
D 22-21-51	23-41-10	D 24-09-25	D 25-41-01

A = ADDED
R = REVISED
D = DELETED

J3 767

MANUAL APPLICABILITY INDEX

767

D634T101

24.1

Page 2
Nov 01/05



BOEING
COMPONENT
MAINTENANCE MANUAL

MANUAL NO.	MANUAL NO.	MANUAL NO.	MANUAL NO.
25-50-11	R 27-09-11	27-31-25	27-51-44
D 25-53-09	D 27-09-56	27-31-37	D 27-51-46
D 25-53-18	D 27-09-57	27-31-52	27-51-48
D 25-55-31	D 27-09-58	27-31-55	27-51-49
D 25-55-32	27-11-01	27-31-61	27-51-50
D 25-55-33	27-11-02	27-31-64	D 27-51-61
D 25-55-34	27-11-05	27-31-65	D 27-51-62
D 25-55-41	27-11-07	27-31-66	D 27-51-63
D 25-59-01	27-11-08	27-31-71	D 27-51-64
D 25-59-11	27-11-09	D 27-32-51	D 27-51-65
D 25-59-21	27-11-10	D 27-32-52	D 27-51-66
D 25-63-02	27-11-11	D 27-32-53	D 27-51-68
D 25-63-11	27-11-12	27-38-11	D 27-51-69
25-65-51	27-11-14	27-41-01	D 27-51-70
D 25-65-52	27-11-16	27-41-22	27-51-80
25-65-55	27-11-20	27-41-31	27-51-83
25-65-61	27-11-22	27-41-35	27-51-84
25-65-62	27-11-23	27-41-45	R 27-51-86
25-66-11	27-11-26	D 27-41-51	R 27-51-88
25-66-12	27-11-28	D 27-41-52	27-51-89
25-66-30	27-11-29	D 27-41-53	27-51-96
25-66-31	27-18-12	D 27-41-54	R 27-51-97
25-71-01	27-21-11	D 27-41-55	27-51-98
25-71-02	27-21-20	D 27-41-56	27-52-86
D 26-10-53	27-21-23	D 27-41-57	27-52-97
D 26-10-54	D 27-21-30	D 27-41-58	27-58-11
26-11-51	D 27-21-32	D 27-41-59	D 27-58-51
D 26-15-41	D 27-21-33	D 27-41-60	R 27-61-01
26-15-45	D 27-21-34	D 27-41-63	D 27-61-02
26-15-46	27-21-40	D 27-41-66	D 27-61-03
26-15-51	27-21-43	27-51-03	D 27-61-04
D 26-15-52	27-21-45	27-51-08	27-61-51
26-15-53	27-21-46	27-51-10	D 27-61-52
26-15-55	27-21-48	27-51-14	D 27-61-53
D 26-15-57	27-21-49	R 27-51-16	D 27-61-54
D 26-16-51	27-21-52	27-51-20	D 27-61-55
D 26-16-52	27-21-55	27-51-22	D 27-61-56
D 26-18-52	27-21-59	27-51-25	D 27-61-57
26-21-11	27-21-60	27-51-26	27-62-23
D 26-21-53	27-21-62	27-51-34	27-62-24
26-22-11	D 27-21-63	27-51-35	27-62-32
26-23-01	27-21-70	27-51-36	27-62-41
27-00-11	27-28-01	27-51-37	27-62-46
27-00-12	27-31-09	27-51-39	27-81-01
27-00-13	27-31-15	27-51-40	27-81-03

A = ADDED
R = REVISED
D = DELETED

J3 767



BOEING
COMPONENT
MAINTENANCE MANUAL

MANUAL NO.	MANUAL NO.	MANUAL NO.	MANUAL NO.
27-81-05	30-11-52	32-11-57	32-32-44
27-81-12	30-11-53	32-11-58	32-32-50
27-81-15	D 30-41-71	32-11-60	32-32-55
27-81-21	D 30-42-01	32-11-63	32-32-64
27-81-25	D 30-42-21	R 32-11-70	32-32-66
27-81-26	30-43-01	32-11-73	R 32-34-00
27-81-28	D 30-81-02	32-11-81	R 32-34-16
27-81-29	D 31-11-32	32-12-02	32-34-31
27-81-31	D 31-11-33	32-12-05	32-35-02
27-81-35	D 31-11-34	32-12-06	32-35-30
27-81-36	D 31-11-35	32-12-10	32-35-32
27-81-37	D 31-11-36	32-12-12	32-35-41
27-81-41	31-11-61	32-12-13	32-35-70
27-81-44	D 31-31-11	32-12-53	32-35-71
27-81-51	D 31-31-52	32-12-55	32-35-80
27-81-54	31-35-03	32-12-56	32-35-81
27-81-55	D 31-41-16	32-12-61	32-35-82
27-81-61	D 31-41-52	32-12-62	32-35-83
27-81-62	31-41-53	R 32-20-51	32-35-84
27-81-72	D 31-41-54	R 32-21-21	32-35-85
27-81-73	D 31-51-10	R 32-21-43	32-35-86
27-81-82	D 31-51-11	R 32-21-47	32-35-91
27-81-83	D 31-51-12	R 32-21-54	32-36-10
27-81-91	D 31-51-13	32-21-60	32-41-01
27-81-96	D 31-51-15	32-21-65	32-41-02
28-00-10	D 31-51-16	32-22-33	32-41-10
28-22-52	D 31-51-20	32-22-42	32-41-12
D 28-31-07	D 31-51-21	32-22-63	D 32-41-14
28-41-01	D 31-51-71	32-31-10	32-41-22
28-43-01	D 31-51-72	D 32-31-20	32-41-23
D 29-09-51	32-00-02	D 32-31-41	32-41-25
29-11-12	32-00-03	32-32-00	32-41-55
29-11-20	32-00-05	32-32-10	32-51-01
29-11-23	R 32-10-51	32-32-13	32-51-02
29-11-26	R 32-10-52	32-32-14	32-51-04
29-11-35	32-10-53	32-32-15	32-51-10
29-11-41	R 32-11-19	32-32-19	32-51-20
29-11-46	R 32-11-20	32-32-20	32-51-30
29-11-48	32-11-27	32-32-25	32-51-40
29-11-52	32-11-28	32-32-29	32-51-51
D 29-11-53	R 32-11-30	32-32-30	32-71-05
D 29-11-54	32-11-33	32-32-35	32-71-06
29-11-56	32-11-36	32-32-36	32-71-12
29-21-05	R 32-11-40	32-32-40	32-71-13
29-21-11	32-11-50	32-32-43	32-71-14

A = ADDED
R = REVISED
D = DELETED

J3 767

MANUAL APPLICABILITY INDEX

767

D634T101

20.1

Page 4
Nov 01/05



BOEING
COMPONENT
MAINTENANCE MANUAL

MANUAL NO.	MANUAL NO.	MANUAL NO.	MANUAL NO.
D 33-11-13	35-21-61	52-34-22	57-43-45
33-11-15	R 36-10-06	52-34-25	57-43-51
33-11-16	36-10-12	52-34-41	57-43-55
33-11-71	D 36-11-51	52-34-43	57-43-61
D 33-11-72	36-11-54	52-34-45	57-51-02
D 33-13-04	D 36-11-55	52-36-03	57-53-21
D 33-13-21	D 36-11-57	52-36-05	R 57-53-25
D 33-13-22	36-12-03	52-36-25	57-53-27
D 33-16-04	36-12-06	52-48-12	57-53-31
D 33-16-05	D 38-14-51	52-48-33	R 57-53-51
D 33-16-10	38-31-01	52-48-42	57-54-13
D 33-16-51	49-11-11	52-48-51	R 57-54-23
D 33-16-52	49-11-13	52-48-61	57-54-33
D 33-16-53	49-13-03	52-49-41	57-54-37
D 33-22-01	49-13-11	D 52-51-03	57-54-39
D 33-24-02	49-15-12	D 52-51-04	57-54-41
33-44-72	49-61-52	52-51-13	57-54-42
33-51-03	52-11-03	53-13-01	57-60-11
D 33-51-04	52-11-04	53-52-01	57-60-51
D 34-09-52	52-11-06	53-85-01	57-70-11
D 34-09-53	52-11-12	54-50-21	57-70-51
D 34-09-60	52-11-20	54-52-01	71-00-01
D 34-16-51	52-11-22	54-52-10	71-00-20
34-22-19	52-11-23	54-52-11	71-00-21
D 34-31-51	52-11-32	54-53-01	71-00-22
D 34-31-52	52-11-42	54-53-03	71-04-28
D 34-31-61	52-11-52	54-53-61	71-11-01
D 34-51-51	52-11-62	55-20-12	71-11-02
D 34-51-61	52-11-63	55-20-22	71-11-25
D 34-53-51	52-11-64	55-40-13	71-11-26
D 34-53-61	52-11-71	56-11-02	71-11-31
D 34-57-51	52-11-82	56-11-06	71-11-32
D 34-57-52	52-11-83	R 56-11-12	71-11-33
D 34-57-53	52-11-84	56-11-21	71-11-35
D 34-57-61	52-11-85	56-21-61	71-11-41
D 34-57-62	52-11-86	R 57-26-11	71-11-42
D 34-61-03	52-11-87	57-26-12	71-11-45
D 34-61-11	52-11-88	57-26-21	71-11-51
35-21-01	52-11-91	57-26-22	71-11-52
35-21-10	52-21-02	57-26-31	71-11-53
35-21-21	52-21-11	57-26-32	71-11-55
35-21-31	52-22-21	57-28-02	71-11-56
35-21-41	52-32-04	57-41-10	71-11-59
35-21-42	52-34-01	57-43-37	71-11-60
35-21-51	52-34-05	57-43-41	71-11-61

A = ADDED
R = REVISED
D = DELETED

J3 767



BOEING
COMPONENT
MAINTENANCE MANUAL

MANUAL NO.	MANUAL NO.	MANUAL NO.	MANUAL NO.
	71-21-01	78-31-41	
	71-21-11	78-31-45	
R	71-21-14	78-31-47	
R	71-21-16	78-34-03	
	71-51-01	78-34-04	
D	73-21-51	78-34-41	
D	73-21-52	78-34-51	
	73-21-86	78-35-02	
D	73-21-87	D 79-32-01	
D	73-21-88	D 79-32-02	
	74-31-52	80-11-02	
R	76-11-11		
	76-11-18		
	76-11-19		
	76-11-22		
	76-11-52		
	77-31-02		
D	77-35-01		
D	77-35-02		
D	77-35-03		
D	77-35-04		
D	77-35-05		
D	77-35-06		
D	77-35-11		
D	77-35-12		
D	77-35-13		
D	77-35-14		
D	77-35-20		
D	77-35-21		
D	77-35-22		
D	77-35-23		
	78-00-08		
	78-11-06		
	78-11-14		
R	78-11-15		
	78-11-16		
D	78-30-11		
D	78-30-13		
	78-31-08		
	78-31-09		
	78-31-14		
R	78-31-15		
	78-31-16		
	78-31-22		
	78-31-25		

A = ADDED
R = REVISED
D = DELETED

J3 767

LIST OF CHAPTERS

<u>Title</u>	<u>Chapter</u>
INTRODUCTION	
AIRFRAME SYSTEMS	
STANDARD PRACTICES – AIRFRAME.	20
AIR CONDITIONING	21
AUTOFLIGHT	22
COMMUNICATIONS	23
ELECTRICAL POWER	24
EQUIPMENT/FURNISHINGS.	25
FIRE PROTECTION.	26
FLIGHT CONTROLS.	27
FUEL	28
HYDRAULIC POWER.	29
ICE AND RAIN PROTECTION.	30
INDICATING/RECORDING SYSTEMS	31
LANDING GEAR	32
LIGHTS	33
NAVIGATION	34
OXYGEN	35
PNEUMATIC.	36
VACUUM	37
WATER/WASTE.	38
ELECTRICAL/ELECTRONIC PANELS & MULTIPURPOSE PARTS.	39
AIRBORNE AUXILIARY POWER	49
STRUCTURE	
DOORS.	52
FUSELAGE	53
NACELLES/PYLONS.	54
STABILIZERS.	55
WINDOWS.	56
WINGS.	57
POWER PLANT	
STANDARD PRACTICES – ENGINES	70
POWER PLANT.	71
ENGINE	72
ENGINE FUEL AND CONTROL.	73
IGNITION	74
AIR.	75
ENGINE CONTROL	76
ENGINE INDICATING.	77
EXHAUST.	78
OIL.	79
STARTING	80
WATER INJECTION.	82
CHARTS	91



BOEING
COMPONENT
MAINTENANCE MANUAL

TITLE	MANUAL NUMBER	R E V	MANUAL ISSUED DATE
ANODIZING OF MAGNESIUM ALLOYS	20-43-02	5	09-01-95
APPLICATION AND FINISHING OF THERMAL SPRAY COATINGS	20-10-05	19	11-01-02
APPLICATION OF ADHESIVES	20-50-12	37	03-01-05
APPLICATION OF AERODYNAMIC SMOOTHING SEALANT	20-50-11	5	11-01-04
APPLICATION OF ALUMINUM FOIL AND OTHER MARKERS	20-50-05	10	03-01-05
APPLICATION OF BONDED SOLID FILM LUBRICANTS	20-50-08	22	07-01-03
APPLICATION OF CHEMICAL AND SOLVENT RESISTANT FINISHES	20-41-02	7	11-01-04
APPLICATION OF CORROSION INHIBITING COMPOUNDS	20-41-05	16	07-01-03
APPLICATION OF CORROSION INHIBITING ADHESIVE PRIMER	20-50-14	3	11-01-02
APPLICATION OF CORROSION PREVENTIVES TO INTERIOR OF CLOSED END TUBES	20-41-03	4	07-01-03
APPLICATION OF INTERIOR DECORATIVE FINISHES	20-41-04	3	09-01-96
APPLICATION OF POLYURETHANE RAIN EROSION RESISTANT COATINGS	20-44-03	6	03-01-01
APPLICATION OF SPECIAL PURPOSE COATINGS AND FINISHES	20-44-01	20	07-01-04
APPLICATION OF STENCILS, INSIGNIA, SILK SCREEN, PART NUMBERING AND IDENTIFICATION MARKINGS	20-50-10	13	07-01-03
APPLICATION OF URETHANE COMPATIBLE PRIMER	20-44-04	1	03-01-98
APPLICATION OF WEATHER, FUEL, OIL, SOLVENT, AND HEAT RESISTANT PROTECTIVE COATINGS	20-50-13	9	03-01-97
ASSEMBLY OF SWAGED CABLES	20-50-16	3	03-01-01
BEARING REMOVAL, INSTALLATION AND RETENTION	20-50-03	77	11-01-05
BOLT AND NUT INSTALLATION	20-50-01	23	03-01-05
BONDING AID FOR SHIMS, FILLERS AND DETAILS	20-50-24		07-01-01
BRIGHT CADMIUM PLATING	20-42-05	16	11-01-05
CHAPTER 20 STANDARD OVERHAUL PRACTICES MANUAL INTRODUCTION	20-00-00	22	11-01-05
CHEMICAL CONVERSION COATINGS FOR ALUMINUM	20-43-03	9	03-01-02
CHROMIC ACID ANODIZING	20-43-01	8	03-01-99



BOEING
COMPONENT
MAINTENANCE MANUAL

TITLE	MANUAL NUMBER	R E V	MANUAL ISSUED DATE
CLEANING AND RELUBRICATING ANTIFRICTION BEARINGS	20-30-01	9	03-01-03
CLEANING MATERIALS	20-60-01	46	11-01-05
COMPONENT, ATTENDANT SEAT INSTL.	25-25-03	6	03-01-02
COPPER PLATING	20-42-07	5	03-01-96
CORROSION PROTECTION PROCEDURES FOR HYDRAULIC COMPONENTS	20-50-17		09-01-96
DECODING TABLE FOR BOEING FINISH CODES	20-41-01	83	11-01-05
DUCTS, REPAIR OF KEVLAR/EPOXY AND GRAPHITE/EPOXY	21-20-15	3	11-01-00
DUCTS, REPAIR OF POLYCARBONATE	21-20-10	2	01-01-88
DUCTS, REPAIR OF POLYURETHANE AND POLYISOCYANURATE	36-10-12	4	11-01-01
ELECTRICAL AND ELECTRONIC COMPONENT STANDARD MAINTENANCE INSTRUCTIONS	20-11-04	5	09-01-97
ELECTRICAL AND ELECTRONIC COMPONENT STANDARD TESTING INSTRUCTIONS	20-11-09		03-01-98
ELECTRODEPOSITED NICKEL PLATING	20-42-09	19	11-01-05
ELECTROLESS NICKEL PLATING	20-42-08	10	03-01-00
ENGINE WIRE HARNESS REPAIR INFORMATION	71-00-20	6	07-01-02
ENGINE WIRE HARNESS, CF6-80A	71-00-21	2	03-01-02
ENGINE WIRE HARNESS, CF6-80C2	71-00-22	10	03-01-05
FASTNER INSTALLATION IN COMPOSITE STRUCTURE	20-50-18	2	03-01-01
FINISHING MATERIALS	20-60-02	50	11-01-04
FLUID SYSTEM FITTING TORQUE VALUES	20-50-00	1	07-01-03
GENERAL CLEANING PROCEDURES	20-30-03	37	11-01-05
GENERAL SEALING	20-50-19	8	11-01-05
GRINDING OF CHROME PLATED PARTS	20-10-04	11	03-01-03
HANDLING OF ELECTROSTATIC DISCHARGE SENSITIVE DEVICES	20-12-02	4	11-01-99
HARD CHROME PLATING	20-42-03	23	03-01-02
HOW TO INSTALL NAMEPLATE STRAPS AND SEALS	20-50-21	1	11-01-05
HOW TO INSTALL THREADED INSERTS	20-50-22		11-01-00
HOW TO MAKE AND INSTALL	20-50-23	2	11-01-04
MOLDABLE PLASTIC SHIMS			
HOW TO MAKE AND INSTALL RESIN BONDED LAMINATED SHIMS AND SOLID FILLERS	20-50-20		03-01-97
HOW TO PROGRAM PROGRAMMABLE CIRCUIT DEVICES	20-11-08		09-01-91
INSTALLATION OF CASTABLE NON-METALLIC SHIMS	20-50-15	2	03-01-98

NUMERICAL INDEX/ALPHA



BOEING
COMPONENT
MAINTENANCE MANUAL

TITLE	MANUAL NUMBER	R E V	MANUAL ISSUED DATE
INSTALLATION OF O-RINGS AND TEFLON SEALS	20-50-06	8	03-01-04
INSTALLATION OF PERMANENT PINS AND PLUGS IN DRILL PASSAGES	20-50-04	4	11-01-99
INSTALLATION OF PROTECTIVE GROMMETS	20-50-09	8	07-01-02
INSTALLATION OF SAFETYING DEVICES	20-50-02	5	03-01-96
INSTRUMENT PANEL ELECTRICAL MODULE GENERAL INFORMATION	20-11-05	19	11-01-03
INSULATIVE COATING SYSTEM, APPLICATION AND REPAIR OF BMS 10-102	71-00-01	14	11-01-01
LOW HYDROGEN EMBRITTLEMENT CADMIUM PLATING	20-42-01	14	11-01-04
LOW HYDROGEN EMBRITTLEMENT CADMIUM-TITANIUM ALLOY PLATING	20-42-02	11	11-01-02
LOW HYDROGEN EMBRITTLEMENT STYLUS CADMIUM PLATING	20-42-10	11	11-01-05
LUBRICANTS	20-60-03	60	11-01-05
LUBRICATION	20-50-07	8	11-01-01
LUBRICATION FITTING REPLACEMENT, LANDING GEAR PARTS	32-00-03	11	07-01-04
MACHINING OF ALLOY STEEL	20-10-02	35	11-01-05
MACHINING OF COPPER BERYLLIUM ALLOYS	20-10-09	3	03-01-95
MACHINING OF TITANIUM	20-10-07	7	11-01-04
MAGNETIC PARTICLE INSPECTION	20-20-01	18	03-01-04
MISCELLANEOUS MATERIALS	20-60-04	86	11-01-05
PENETRANT METHODS OF INSPECTION	20-20-02	17	11-01-04
POSITIVE LOCK FASTENER INSTALLATION (ASP AND MAF FASTENERS)	78-00-08	1	07-01-03
PREPARATION OF ALUMINUM ALLOYS FOR ELECTROPLATING	20-42-04	7	09-01-98
PROTECTION, STORAGE AND HANDLING OF AIRPLANE COMPONENTS	20-70-01	12	03-01-00
REMOVAL AND REPLACEMENT OF SURFACE MOUNTED DEVICES	20-11-07	8	07-01-03
REMOVAL OF FAYING SURFACE SEALED FITTINGS FROM COMPOSITE STRUCTURES	20-10-08	2	03-01-93
REPAIR AND REFINISH OF HIGH STRENGTH STEEL PARTS	20-10-01	17	03-01-00
REPAIR OF CONDUCTIVE COATINGS	20-10-06	7	03-01-00
REPAIR OF ELECTRICAL CONNECTORS	20-11-02	15	07-01-02
REPAIR OF ELECTRICAL TERMINATIONS AND ELECTRICAL BONDING AREAS	20-11-03	10	11-01-02
REPAIR OF HIGH STRENGTH STEEL, LANDING GEAR PARTS	32-00-05	4	07-01-05
REPAIR OF MISCELLANEOUS INTERIOR	25-00-66	10	03-01-03



BOEING
COMPONENT
MAINTENANCE MANUAL

TITLE	MANUAL NUMBER	R E V	MANUAL ISSUED DATE
AIRPLANE COMPONENTS			
REPAIR OF PRINTED CIRCUIT ASSEMBLIES AND COMPONENT BOARD ASSEMBLIES	20-11-01	32	03-01-05
REPAIR OF WRAPPED WIRE ELECTRICAL CONNECTIONS	20-11-06	3	09-01-90
REPLACEMENT OF BALL GRID ARRAY (BGA) PARTS	20-11-10	2	11-01-02
SHOT PEENING	20-10-03	28	11-01-03
SILVER PLATING	20-42-06	4	09-01-92
SOLDERING ELECTRICAL CONNECTIONS	20-12-01	7	07-01-02
SOLVENTS FOR CLEANING OF POLYMERICS, PHENOLICS AND NYLON (SERIES 98 AND 98-1)	20-30-98		03-01-98
SOLVENTS FOR FINAL CLEANING BEFORE GENERAL SEALING (SERIES 92)	20-30-92		03-01-98
SOLVENTS FOR FINAL CLEANING BEFORE APPLICATION OF RAIN EROSION RESISTANT COATING (SERIES 94)	20-30-94		03-01-98
SOLVENTS FOR FINAL CLEANING BEFORE AERODYNAMIC SMOOTHING AND FAIRING (SERIES 95)	20-30-95		03-01-98
SOLVENTS FOR FINAL CLEANING BEFORE STRUCTURAL BONDING	20-30-97	1	11-01-05
SOLVENTS FOR FINAL CLEANING BEFORE FUEL TANK SEALING (SERIES 93)	20-30-93		03-01-98
SOLVENTS FOR FINAL CLEANING OF COMPOSITES BEFORE PAINTING (SERIES 87)	20-30-87	1	11-01-05
SOLVENTS FOR FINAL CLEANING OF COMPOSITES BEFORE NON-STRUCTURAL BONDING (SERIES 91)	20-30-91		03-01-98
SOLVENTS FOR FINAL CLEANING OF COMPOSITES BEFORE STRUCTURAL BONDING	20-30-99	1	11-01-05
SOLVENTS FOR FINAL CLEANING OF ALL ORGANIC COATINGS BEFORE PAINTING (SERIES 85)	20-30-85		03-01-98
SOLVENTS FOR FINAL CLEANING OF ALL ORGANIC COATINGS BEFORE NON-STRUCTURAL BONDING (SERIES 89)	20-30-89		03-01-98
SOLVENTS FOR FINAL CLEANING OF METAL BEFORE PAINTING (SERIES 84)	20-30-84	1	11-01-05
SOLVENTS FOR FINAL CLEANING OF METAL BEFORE NON-STRUCTURAL BONDING (SERIES 88)	20-30-88		03-01-98
SOLVENTS FOR FINAL CLEANING OF OXYGEN SYSTEM COMPONENTS (SERIES 96)	20-30-96	1	07-01-99

NUMERICAL INDEX/ALPHA



BOEING
COMPONENT
MAINTENANCE MANUAL

TITLE	MANUAL NUMBER	R E V	MANUAL ISSUED DATE
SOLVENTS FOR FINAL CLEANING OF SOLVENT RESISTANT ORGANIC COATINGS BEFORE PAINTING (SERIES 86)	20-30-86		03-01-98
SOLVENTS FOR FINAL CLEANING OF SOLVENT RESISTANT ORGANIC COATINGS BEFORE NON- STRUCTURAL BONDING (SERIES 90)	20-30-90		03-01-98
SOLVENTS FOR GENERAL CLEANING OF COMPOSITES (SERIES 83)	20-30-83		03-01-98
SOLVENTS FOR GENERAL CLEANING OF ALL ORGANIC COATINGS (SERIES 81)	20-30-81		03-01-98
SOLVENTS FOR GENERAL CLEANING OF METAL (SERIES 80)	20-30-80		03-01-98
SOLVENTS FOR GENERAL CLEANING OF SOLVENT RESISTANT ORGANIC COATINGS (SERIES 82)	20-30-82		03-01-98
STRIPPING OF PROTECTIVE FINISHES	20-30-02	24	11-01-04
TEMPORARY PROTECTIVE COATINGS	20-44-02	4	09-01-90
TOP COAT APPLICATION, LANDING GEAR ATTACHING PARTS	32-00-02	7	06-01-94
TUBES, REPAIR OF ALUMINUM FUEL	28-00-10	4	11-01-04
WIRE HARNESS, PW4060 ENGINE	71-51-01	3	07-01-03



BOEING
COMPONENT
MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	R E V	MANUAL ISSUED DATE
RRB410045020	PACK ASSY, AUTOTHROTTLE MICROSWITCH	22-32-35	17	07-01-05
RRB41057	PANEL ASSY, FORWARD ATTENDANTS	25-29-62	19	07-01-04
W315T3800	ACTUATOR ASSY, COWL OPENING	78-31-08	14	07-01-04
015T0070	TUBE ASSY, RUDDER CONTROL FEEL AND TRIM OFFSET TORQUE	27-21-43	4	03-01-00
015T0094	BOX ASSY, CF6-80 ENGINE THROTTLE FUEL CONTROL	76-11-18	10	11-01-00
015T0094	LEVER ASSY, CONTROL STAND THRUST	76-11-19	9	07-01-04
015T0094	COWL ASSY, FAN DUCT AND THRUST REVERSER (CF6-80A)	78-31-15	23	11-01-05
015T0109	COWL ASSY, CORE (CF6)	71-11-45	13	03-01-03
015T0131	COWL ASSY, FAN DUCT AND THRUST REVERSER (CF6-80A)	78-31-15	23	11-01-05
015T0132	COWL ASSY, CORE (CF6)	71-11-45	13	03-01-03
015T0156	LEVER ASSY, CONTROL STAND THRUST	76-11-19	9	07-01-04
015T0165	STRUCTURE ASSY, WING LEADING EDGE INBOARD SLAT NO. 6, 7	57-43-37	21	07-01-04
015T0165	STRUCTURE ASSY, WING LEADING EDGE OUTBOARD SLAT NO. 1 & 12	57-43-41	20	03-01-04
015T0165	STRUCTURE ASSY, WING LEADING EDGE OUTBOARD SLAT NO. 2 & 11	57-43-45	20	11-01-01
015T0165	STRUCTURE ASSY, WING LEADING EDGE OUTBOARD SLAT NO. 3 & 10	57-43-51	21	03-01-04
015T0171	BOX ASSY, JT9D-7R4 FUEL CONTROL	76-11-11	20	11-01-05
015T0180	SLEEVE ASSY, PRIMARY EXHAUST (JT9D-7R)	78-11-06	14	11-01-03
015T0187	BOX ASSY, STRUT THRUST REVERSER CONTROL	78-34-41	15	09-01-97
015T0195	WINDOW ASSY, NO. 2 OPENABLE CABIN	56-11-12	26	11-01-05
015T0253	DRUM ASSY, AILERON CONTROL FORCE TRANSDUCER	27-11-07	8	03-01-00
015T0253	DRUM ASSY, AILERON CONTROL LOAD LIMITER	27-11-08	15	03-01-04
015T0376	BOX ASSY, JT9D-7R4 FUEL CONTROL	76-11-11	20	11-01-05



BOEING
COMPONENT
MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL ISSUED DATE
015T0376	BOX ASSY, CF6-80 ENGINE THROTTLE FUEL CONTROL -9 THRU -11	76-11-18	10	11-01-00
015T0376	BOX ASSY, STRUT THRUST REVERSER CONTROL -12 THRU -18 -25 THRU -31	78-34-41	15	09-01-97
015T0376	BOX ASSY, CF6-80 THRUST REVERSER STRUT CONTROL -19 THRU -22	78-34-51	22	03-01-04
015T0412	COWL ASSY, CORE (CF6)	71-11-45	13	03-01-03
015T0437	COWL ASSY, CORE (CF6)	71-11-45	13	03-01-03
015T0438	COWL ASSY, CORE JT9D7R4 (LOAD SHARING) -81 THRU -84	71-11-42	8	07-01-04
015T0438	COWL ASSY, FAN DUCT AND THRUST REV (JT9D) -27 THRU -54 -69 THRU -78	78-31-14	14	07-01-04
015T0438	COWL ASSY, FAN DUCT AND THRUST REVERSER (JT9D) -55 THRU -68	78-31-16	8	03-01-04
015T0442	COWL ASSY, FAN DUCT AND THRUST REVERSER (CF6-80A)	78-31-15	23	11-01-05
015T0449	INTEGRATOR ASSY, OFF-WING ESCAPE SYSTEM	25-65-62	9	07-01-98
015T0540	COWL ASSY, CORE (CF6)	71-11-45	13	03-01-03
015T0630	LEVER ASSY, CONTROL STAND THRUST	76-11-19	9	07-01-04
015T0805	NOZZLE ASSY, CF6-80C2 ENGINE PRIMARY	78-11-14	13	03-01-04
015T0819	STRUT ASSY, MAIN LANDING GEAR SHOCK -7 THRU -10	32-11-40	54	11-01-05
015T0819	COMPONENT ASSY, MAIN LANDING GEAR BOGIE -13	32-11-50	34	11-01-04
015T0850	UNIT ASSY, TE FLAP DRIVE POWER DRIVE	27-51-14	19	07-01-02
015T1017	GEARBOX ASSY, AUTOTHROTTLE	22-32-31	11	07-01-05
015T1298	BOX ASSY, JT9D-7R4 FUEL CONTROL	76-11-11	20	11-01-05
015T1415	FLAP ASSY, INBOARD TRAILING EDGE FLAP AFT -69 -70 -79 THRU -86 -93 THRU -96	57-53-25	12	11-01-05
015T1415	SPOILER ASSY, INBOARD -3 THRU -42	57-70-11	18	03-01-03
015T1504	STRUT ASSY, MAIN LANDING GEAR SHOCK	32-11-40	54	11-01-05
015T1507	STRUCTURE ASSY, WING LEADING EDGE INBOARD SLAT NO. 6, 7 -601 THRU -638 -641 THRU -678 -681 THRU -688	57-43-37	21	07-01-04

NUMERICAL INDEX/NUMERIC

767

D634T101

01.1

Page 2
Nov 01/05


BOEING
 COMPONENT
 MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	R E V	MANUAL ISSUED DATE
015T1507	STRUCTURE ASSY, WING LEADING EDGE OUTBOARD SLAT NO. 1 & 12 -101 THRU -164	57-43-41	20	03-01-04
015T1507	STRUCTURE ASSY, WING LEADING EDGE OUTBOARD SLAT NO. 2 & 11 -201 THRU -272	57-43-45	20	11-01-01
015T1507	STRUCTURE ASSY, WING LEADING EDGE OUTBOARD SLAT NO. 3 & 10 -301 THRU -388	57-43-51	21	03-01-04
015T1507	STRUCTURE ASSY, WING LEADING EDGE OUTBOARD SLAT NO. 4 & 9 -401 THRU -422 -425 THRU -482	57-43-55	21	07-01-05
015T1507	STRUCTURE ASSY, WING LEADING EDGE OUTBOARD SLAT NO. 5 & 8 -501 THRU -506 -509 THRU -546 -701 THRU -706 -709 THRU -746	57-43-61	22	11-01-01
015T1613	BRACE ASSY	54-50-21	21	07-01-05
015T1626	DRUM/LOCKOUT ASSY, NOSE WHEEL STEERING	32-34-16	20	11-01-05
015U1547	NOZZLE ASSY, CF6-80C2 ENGINE PRIMARY	78-11-14	13	03-01-04
100T0300	ELEVATOR ASSY, INBOARD SEGMENT -5 -6	55-20-12	3	11-01-02
100T0300	ELEVATOR ASSY, OUTBOARD SEGMENT -3 -4	55-20-22	3	07-01-00
112T1600	MACHINED ASSY, FORWARD TRUNNION SUPPORT	57-54-37	1	07-01-02
112T1709	NUT	32-11-81	32	07-01-05
112T1717	SUPPORT ASSY, FORWARD TRUNNION BEARING	57-54-33	6	11-01-00
112T1736	MACHINED ASSY, MAIN LANDING GEAR BEAM OUTBOARD SUPPORT WING	57-54-39	2	07-01-02
112T1750	FITTING ASSY, MAIN LANDING GEAR BEAM OUTBOARD SUPPORT	57-54-23	10	11-01-05
113T1015	LINK ASSY	27-51-96	9	07-01-04
113T1101	BEAM ASSY, MAIN LANDING GEAR SUPPORT	57-54-13	10	03-01-04
113T1109	INSTALLATION COMPONENTS, MAIN LANDING GEAR BEAM	57-54-42		11-01-99
113T1114	LINK ASSY	27-51-96	9	07-01-04
113T1116	BEAM ASSY, MAIN LANDING GEAR	57-54-41		07-01-99
113T1134	INSTALLATION COMPONENTS, MAIN LANDING GEAR BEAM	57-54-42		11-01-99
113T1136	INSTALLATION COMPONENTS, MAIN LANDING GEAR BEAM	57-54-42		11-01-99
113T1200	SUPPORT ASSY, INBOARD TRAILING EDGE FLAP	57-53-31	14	07-01-05
113T1202	LINKAGE ASSY, INBOARD T.E. FLAP	27-52-86		03-01-00
113T1211	ARM ASSY	27-51-84	5	03-01-00
113T1216	SHAFT ASSY	27-51-84	5	03-01-00

NUMERICAL INDEX/NUMERIC

767

D634T101

01.1

 Page 3
 Nov 01/05



BOEING
COMPONENT
MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL ISSUED DATE
113T1218	LINK ASSY	27-51-84	5	03-01-00
113T1219	FITTING ASSY	27-51-84	5	03-01-00
113T1232	LINK SUPPORT	27-51-84	5	03-01-00
113T1248	CRANK ASSY	27-51-84	5	03-01-00
113T1293	DOOR INSTALLATION COMPONENTS, SIDE OF BODY	27-51-36	5	07-01-05
113T1330	LINKAGE ASSY, OUTBD TE FLAP	27-52-97	1	03-01-04
113T1337	FITTING ASSY	27-51-96	9	07-01-04
113T1339	ARM ASSY	27-51-96	9	07-01-04
113T1352	LINK ASSY	27-51-96	9	07-01-04
113T1358	CARRIAGE ASSY, OB TE FLAP DETECTION CONTROL & CARRIAGE ASSY INBD AUXILIARY	27-51-20	5	11-01-03
113T1359	ARM ASSY	27-51-96	9	07-01-04
113T1363	LINK ASSY	27-51-96	9	07-01-04
113T1364	LINK ASSY	27-51-96	9	07-01-04
113T1382	LINK ASSY	27-51-96	9	07-01-04
113T1385	CARRIAGE ASSY, OB TE FLAP DETECTION CONTROL & CARRIAGE ASSY INBD AUXILIARY	27-51-20	5	11-01-03
113T1505	BLOCK ASSY, AILERON HINGE BEARING	57-51-02	2	06-01-97
113T1517	BLOCK ASSY, AILERON HINGE BEARING	57-51-02	2	06-01-97
113T1519	BLOCK ASSY, AILERON HINGE BEARING	57-51-02	2	06-01-97
113T1645	DOOR ASSY, MAIN LANDING GEAR POP-UP UPPER SURFACE	32-12-13		11-01-01
113T1720	FAIRING ASSY, NO. 3 INBOARD TRAILING EDGE FLAP CENTER MOVABLE	57-26-11	9	11-01-05
113T1750	DOOR ASSY, INBD TE FLAP FAIRING	27-51-89	3	07-01-98
113T1770	FAIRING ASSY, INBOARD TRAILING EDGE FLAP NO. 3 AFT	57-26-12	2	07-01-04
113T1811	FAIRING ASSY, OUTBOARD TRAILING EDGE FLAP NO. 1 FORWARD	57-26-21	11	11-01-02
113T1812	FAIRING ASSY, OUTBOARD TRAINING EDGE FLAP NO. 2 FORWARD	57-26-22	7	11-01-02
113T1821	FAIRING ASSY, OUTBOARD TRAINING EDGE FLAP NO. 1 MID	57-26-31	8	11-01-02
113T1822	FAIRING ASSY, OUTBOARD TRAINING EDGE FLAP NO. 2 MID	57-26-32	7	11-01-02
113T2000	LINKAGE ASSY, INBOARD T.E. FLAP -67 -68 -73 THRU -76 -85 -86 -99 -100 -131 THRU -134 -137 -138 -151 THRU -156 -195 -196 -203 THRU -206 -239 THRU -242 -295 THRU -298	27-51-86	11	11-01-05
113T2000	LINKAGE ASSY, INBOARD T.E. FLAP -3 -4	27-51-88	3	11-01-05

NUMERICAL INDEX/NUMERIC


BOEING
 COMPONENT
 MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	R E V	MANUAL ISSUED DATE
113T2000	TRACK/BEAM ASSY, INBOARD T.E. FLAP -61 -71 -89 -90 -103	27-51-98	7	04-01-92
113T2029	DOOR INSTALLATION COMPONENTS, SIDE OF BODY	27-51-36	5	07-01-05
113T2030	DOOR INSTALLATION COMPONENTS, SIDE OF BODY	27-51-36	5	07-01-05
113T2101	FLAP ASSY, INBOARD TRAILING EDGE	57-53-21	14	07-01-03
113T2201	FLAP ASSY, INBOARD TRAILING EDGE MAIN	57-53-27	11	03-01-05
113T2301	FLAP ASSY, INBOARD TRAILING EDGE FLAP AFT	57-53-25	12	11-01-05
113T3000	LINKAGE ASSY, OUTBOARD T.E. FLAP	27-51-97	18	11-01-05
113T3100	FLAP ASSY, OUTBOARD TRAILING EDGE	57-53-51	12	11-01-05
113T4100	SPOILER ASSY, INBOARD	57-70-11	18	03-01-03
113T5003	SPOILER ASSY, INBOARD -3 -4	57-70-11	18	03-01-03
113T5003	SPOILER ASSY, OUTBOARD -5	57-70-51	13	11-01-00
113T5102	SPOILER ASSY, OUTBOARD	57-70-51	13	11-01-00
113T6002	AILERON ASSY, INBOARD	57-60-11	9	07-01-03
113T6100	AILERON ASSY, INBOARD	57-60-11	9	07-01-03
113T7018	AILERON ASSY, OUTBOARD	57-60-51	12	03-01-04
113T7100	AILERON ASSY, OUTBOARD	57-60-51	12	03-01-04
113T8101	DOOR ASSY, DRAG STRUT	32-12-53	1	09-01-94
113T8201	DOOR ASSY, SHOCK STRUT	32-12-55	11	12-01-97
113T8204	DOOR ASSY, SHOCK STRUT	32-12-56		03-01-99
113T8301	DOOR ASSY, TRUNNION	32-12-61	11	03-01-02
113T8304	DOOR ASSY, MAIN LANDING GEAR DOORS TRUNNION	32-12-62	2	03-01-01
113T8314	FITTING ASSY, TRUNNION DOOR TRUNNION MOUNTED	32-12-06	6	07-01-05
114T0101	TRACK ASSY, LE SLAT AUXILIARY	27-81-28	9	03-01-05
114T0111	FITTING ASSY, AUXILIARY TRACK	27-81-37	1	01-01-89
114T0112	FITTING ASSY, AUXILIARY TRACK	27-81-37	1	01-01-89
114T0135	STRUT ASSY, RIB BRACE	27-81-36	2	10-10-85
114T0136	STRUT ASSY, RIB BRACE	27-81-36	2	10-10-85
114T0137	STRUT ASSY, RIB BRACE	27-81-36	2	10-10-85
114T0138	STRUT ASSY, RIB BRACE	27-81-36	2	10-10-85
114T0201	DOOR ASSY, THERMAL ANTI-ICING DUCT SEAL	57-41-10	3	06-01-95
114T0231	LINK ASSY, LE SLAT TRACK	27-81-29	4	11-01-02
114T0233	TRACK ASSY, LE SLAT AUXILIARY	27-81-28	9	03-01-05
114T3100	STRUCTURE ASSY, WING LEADING EDGE INBOARD SLAT NO. 6, 7	57-43-37	21	07-01-04
114T3300	LINK ASSY, LE SLAT TRACK	27-81-29	4	11-01-02
114T3301	LINK ASSY, LE SLAT TRACK	27-81-29	4	11-01-02

NUMERICAL INDEX/NUMERIC



BOEING
COMPONENT
MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL ISSUED DATE
114T3302	TRACK ASSY, LE SLAT	27-81-28	9	03-01-05
114T4101	STRUCTURE ASSY, WING LEADING EDGE OUTBOARD SLAT NO. 1 & 12	57-43-41	20	03-01-04
114T4102	STRUCTURE ASSY, WING LEADING EDGE OUTBOARD SLAT NO. 2 & 11	57-43-45	20	11-01-01
114T4103	STRUCTURE ASSY, WING LEADING EDGE OUTBOARD SLAT NO. 3 & 10	57-43-51	21	03-01-04
114T4104	STRUCTURE ASSY, WING LEADING EDGE OUTBOARD SLAT NO. 4 & 9	57-43-55	21	07-01-05
114T4105	STRUCTURE ASSY, WING LEADING EDGE OUTBOARD SLAT NO. 5 & 8	57-43-61	22	11-01-01
114T4180	TRACK ASSY, LE SLAT	27-81-28	9	03-01-05
114T6301	SEAL ASSY, FIXED LE AT NACELLE KRUEGER	27-81-91	10	07-01-99
114T6400	MECHANISM ASSY, FIXED LE AT NACELLE KRUEGER SEAL DRIVE	27-81-96	2	11-01-99
114T6450	MECHANISM ASSY, FIXED LE AT NACELLE KRUEGER SEAL DRIVE	27-81-96	2	11-01-99
119T1075	TIP ASSY, RAKED WING	57-28-02	1	11-01-02
140T2411	WINDOW/WINDOW PLUG ASSY, PASSENGER AND LT WEIGHT PASSENGER	56-21-61	16	03-01-03
140T2412	WINDOW/WINDOW PLUG ASSY, PASSENGER AND LT WEIGHT PASSENGER	56-21-61	16	03-01-03
140T2419	WINDOW/WINDOW PLUG ASSY, PASSENGER AND LT WEIGHT PASSENGER	56-21-61	16	03-01-03
140T2421	WINDOW/WINDOW PLUG ASSY, PASSENGER AND LT WEIGHT PASSENGER	56-21-61	16	03-01-03
140T2498	WINDOW/WINDOW PLUG ASSY, PASSENGER AND LT WEIGHT PASSENGER	56-21-61	16	03-01-03
140T2700	DOOR ASSY, FORWARD AND AFT CARGO	52-34-01	16	07-01-04
140T2941	BUNGEE ASSY, FORWARD/AFT CARGO DOOR	52-34-05	5	03-01-03
140T2987	WINDOW/WINDOW PLUG ASSY, PASSENGER AND LT WEIGHT PASSENGER	56-21-61	16	03-01-03
140W2421	WINDOW/WINDOW PLUG ASSY, PASSENGER AND LT WEIGHT PASSENGER	56-21-61	16	03-01-03
141T0012	WINDOW ASSY, NO. 2 OPENABLE CABIN	56-11-12	26	11-01-05
141T2923	SUPPORT ASSY, NOSE GEAR WHEEL WELL AFT BULKHEAD	53-13-01	2	12-01-95
141T4004	WINDOW ASSY, NO. 3	56-11-06	21	07-01-05
141T4800	WINDSHIELD ASSY, PILOT NO. 1	56-11-02	10	07-01-05
141T4801	WINDSHIELD ASSY, PILOT NO. 1	56-11-02	10	07-01-05
141T4820	WINDOW ASSY, NO. 3	56-11-06	21	07-01-05
141T4835	WINDOW ASSY, NO. 2 OPENABLE CABIN	56-11-12	26	11-01-05
141T4843	MECHANISM ASSY, NO. 2 OPENABLE WINDOW OPERATING	56-11-21	9	07-01-04

NUMERICAL INDEX/NUMERIC

767

D634T101

01.1

Page 6
Nov 01/05


BOEING
 COMPONENT
 MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	R E V	MANUAL ISSUED DATE
141T6102	CARRIER ASSY, GIRT BAR	52-11-20	2	10-01-92
141T6105	TRACK ASSY, FORWARD ENTRY AND SERVICE DOOR	52-11-86	3	12-01-95
141T6121	DOOR ASSY, FWD ENTRY AND SERVICE	52-11-06	6	03-01-04
141T6134	MECHANISM ASSY, SECTION 41 ENTRY/SERVICE DOOR OVERCENTER	52-11-85	5	03-01-96
141T6136	MECHANISM ASSY, FORWARD ENTRY/SERVICE DOOR HANDLE	52-11-12	15	11-01-04
141T6265	CRANK ASSY	52-11-91	5	06-01-95
141T6301	DOOR ASSY, ELEC/ELEX ACCESS	52-48-12	8	11-01-02
141T6401	DOOR ASSY, FORWARD ACCESS	52-48-42	5	09-01-95
141T6510	CRANK ASSY	52-11-91	5	06-01-95
141T6530	TROLLEY/LINK ASSY, ENTRY AND SERVICE DOORS	52-11-52	5	11-01-00
141T6561	SNUBBER ASSY, ENTRY/SERVICE DOOR HANDLE MECHANISM SPRING/HYDRAULIC	52-11-82	4	01-01-92
141T6583	UPLATCH ASSY, ENTRY AND SERVICE DOOR	52-11-87	2	10-01-91
141T6910	DOOR ASSY, NOSE LANDING GEAR FORWARD	32-22-42	5	03-01-02
141T6920	DOOR ASSY, NOSE LANDING GEAR AFT	32-22-33	3	03-01-02
141T6963	STRUT ASSY, AFT NOSE LANDING GEAR DOOR	32-21-60	5	07-01-04
143T6105	TRACK ASSY, MID ENTRY DOOR UPPER	52-11-84	2	07-01-05
143T6121	DOOR ASSY, MID ENTRY	52-11-04	4	03-01-04
143T6135	MECHANISM ASSY, SECTION 43 ENTRY/ SERVICE DOORS OVERCENTER	52-11-83	4	03-01-99
143T6140	MECHANISM ASSY, MID ENTRY/SERVICE DOOR HANDLE	52-11-32	5	11-01-03
143T6200	DOOR ASSY, MAIN DECK CARGO	52-32-04	4	11-01-03
143T6300	DOOR ASSY, LARGE CARGO	52-34-41	10	07-01-04
143T6501	MECHANISM ASSY, LARGE CARGO DOOR LATCH LOCK CONTROL HANDLE	52-34-43	4	11-01-00
145T6016	HATCH ASSY, OVERWING ESCAPE	52-21-11	7	07-01-90
146T6121	DOOR ASSY, AFT ENTRY AND SERVICE	52-11-22	4	03-01-04
146T6125	MECHANISM ASSY, SECTION 46 ENTRY/SERVICE DOOR OVERCENTER	52-11-88	3	10-01-92
146T6140	MECHANISM ASSY, AFT ENTRY/ SERVICE DOOR HANDLE	52-11-42	8	11-01-04
146T6301	DOOR ASSY, BULK CARGO	52-36-03	3	07-01-99
146T6387	TUBE ASSY, BULK CARGO DOOR BALANCE SYSTEM SPRING	52-36-25	8	03-01-05
146T6550	MECHANISM INSTALLATION, EMERGENCY EXIT DOOR	52-22-21	6	03-01-04
148T6402	DOOR ASSY, SERVICE ACCESS	52-49-41	4	10-10-86
148T6550	DOOR ASSY, AUXILIARY POWER UNIT ACCESS	52-48-33	2	11-01-02
148T6602	DOOR ASSY, CONTROLS BAY ACCESS	52-48-61	6	04-01-88

NUMERICAL INDEX/NUMERIC

767

D634T101

01.1

 Page 7
 Nov 01/05



BOEING
COMPONENT
MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL ISSUED DATE
148T7703	INSTALLATION COMPONENTS, TAIL SKID	32-71-06	1	07-01-01
149T6080	BELLCRANK ASSY, MAIN LANDING GEAR DOOR HINGE	32-12-10	2	11-01-00
149T6100	DOOR ASSY, MAIN LANDING GEAR	32-12-12	2	11-01-02
149T6902	BELLCRANK ASSY, MAIN LANDING GEAR DOOR HINGE	32-12-05	11	03-01-01
149T6903	UNLOCK ASSY, MAIN LANDING GEAR DOOR	32-32-14	8	11-01-99
149T6910	DOOR ASSY, MAIN LANDING GEAR	32-12-02	6	03-01-05
149T7210	DOOR ASSY, UNDERWING FAIRING ECS	52-48-51	9	03-01-00
149T7375	FITTING ASSY, STRUT SUPPORT EXHAUST FRAME	53-52-01		07-10-84
149T7771	DOOR ASSY, RAM AIR TURBINE ACCESS	29-21-11	3	04-10-87
161T1000	BUILDUP ASSY, MAIN LANDING GEAR -7 -8 -17 THRU -20 -23 THRU -32 -39 THRU -50 -91 THRU -98 -101 THRU -110 -113 THRU -126 -133 THRU -138 -143 THRU -148 -167 THRU -176 -181 THRU -184 -187 -188 -193 THRU -196 -235 -236 -239 -241 THRU -244 -289 -290 -329 THRU -332 -343 -344 -346 -377 -378 -609 THRU -612 -615 THRU -618 -641 -642 -645 -646 -651 -652 -673 -674 -679 -680	32-11-19	49	11-01-05
161T1000	BUILDUP ASSY, MAIN GEAR -153 THRU -158 -163 THRU -166 -177 -178 -185 -186 -189 -190 -207 THRU -220 -237 -247 -249 -250 -253 THRU -256 -291 THRU -294 -303 -304 -327 -328 -333 THRU -338 -341 -342 -347 -348 -381 -382 -385 -386 -391 -392 -397 THRU -400 -601 -602 -605 -606 -613 -614 -621 THRU -626 -629 THRU -634 -643 -644 -653 THRU -656 -659 THRU -666 -671 -672 -683 THRU -712 -715 -716 -719 THRU -724 -727 THRU -748 -757 -758 -761 -762 -765 THRU -768 -781 THRU -786 -789 -790 -803 -804 -823 -825 THRU -828 -831 -832 -835 THRU -846 -849 THRU -854 -857 THRU -860	32-11-20	53	11-01-05
161T1011	COMPONENT ASSY, MAIN LANDING GEAR	32-11-30	45	11-01-05
161T1039	LINK ASSY/SLEEVE	32-11-81	32	07-01-05

NUMERICAL INDEX/NUMERIC

767

D634T101

01.1

Page 8
Nov 01/05



BOEING

COMPONENT
MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL ISSUED DATE
161T1100	COMPONENT ASSY, MAIN LANDING GEAR -13 THRU -16 -25 THRU -30 -35 -36 -39 -40 -43 THRU -46 -49 THRU -54 -57 THRU -62 -65 -66 -69 -70 -73 THRU -76 -79 THRU -82 -85 -86 -91 THRU -94 -97 -98 -101 -102 -105 -106 -109 THRU -113 -117 -118 -121 THRU -126 -139 THRU -144 -147 -148 -154 -157 THRU -160 -163 -164 -177 THRU -180 -183 -184 -193 -194 -207 -208 -223 -224 -227 THRU -230 -233 THRU -238 -243 -244 -251 -252 -265 THRU -270 -283 THRU -290 -293 THRU -296 -299 THRU -306 -317 -318 -331 -332 -341 -342 -347 THRU -356 -359 -360 -363 THRU -372 -381 -382 -387 -388 -391 THRU -394 -401 -402 -409 -410 -413 THRU -416 -436 THRU -438 -441 THRU -444 -458 -463 -464 -469 THRU -478 -483 THRU -492 -495 THRU -498	32-11-30	45	11-01-05
161T1100	STRUT ASSY, MAIN LANDING GEAR SHOCK -17 THRU -20 -37 -38 -41 -42 -47 -48 -55 -56 -63 -64 -67 -68 -71 -72 -77 -78 -87 THRU -90 -95 -96 -107 -108 -115 -119 -120 -127 -128 -145 -146 -151 -152 -156 -161 -162 -167 THRU -170 -225 -226 -257 THRU -260 -277 THRU -282 -321 THRU -324 -339 -340 -343 THRU -346 -357 -358 -361 -362 -377 -378 -395 -396 -403 -404 -445 THRU -448 -450 -461 -462 -465 THRU -468 -479 THRU -482	32-11-40	54	11-01-05
161T1130	COMPONENT ASSY, MAIN LANDING GEAR BOGIE	32-11-50	34	11-01-04
161T1190	AFT TRUNNION OUTER RACE ASSY	32-11-81	32	07-01-05
161T1191	AFT TRUNNION BEARING LOCK PLATE	32-11-81	32	07-01-05
161T1192	AFT TRUNNION BEARING RETAINER NUT	32-11-81	32	07-01-05
161T1193	AFT TRUNNION INNER RACE	32-11-81	32	07-01-05
161T1194	AFT TRUNNION BEARING COLLAR ASSY	32-11-81	32	07-01-05
161T1195	AFT TRUNNION BEARING SPLINED RING ASSY	32-11-81	32	07-01-05
161T1196	AFT TRUNNION BEARING CLAMP NUT	32-11-81	32	07-01-05
161T1197	AFT TRUNNION BEARING SPLINED	32-11-81	32	07-01-05

NUMERICAL INDEX/NUMERIC



BOEING
COMPONENT
MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL ISSUED DATE
	WASHER ASSY			
161T1198	AFT TRUNNION BEARING LOCK TAB	32-11-81	32	07-01-05
161T1300	RACE	32-11-81	32	07-01-05
161T1309	LOCK ACTUATOR BOLT ASSY	32-11-81	32	07-01-05
161T2000	STRUT ASSY, MAIN LANDING GEAR SIDE	32-11-70	37	11-01-05
161T2031	SIDE STRUT TO SPINDLE ECCENTRIC LOCK ASSY	32-11-81	32	07-01-05
161T2033	CARTRIDGE ASSY, MAIN LANDING GEAR SPRING	32-32-30	7	03-01-03
161T2045	SIDE STRUT/DOWNLOCK ACTUATOR PIN ASSY	32-11-81	32	07-01-05
161T2100	STRUT ASSY, MAIN LANDING GEAR SIDE	32-11-73	2	03-01-02
161T2106	SPINDLE	32-11-81	32	07-01-05
161T2114	ECCENTRIC	32-11-81	32	07-01-05
161T2129	PIN	32-11-81	32	07-01-05
161T2130	SPRING	32-11-81	32	07-01-05
161T2133	LOCK	32-11-81	32	07-01-05
161T2136	PIN	32-11-81	32	07-01-05
161T5000	RETRACT ACTUATOR BOLT	32-11-81	32	07-01-05
161T6000	STRUT ASSY, MAIN LANDING GEAR DRAG	32-11-60	35	03-01-05
161T6010	DRAG STRUT TO SPINDLE PIN	32-11-81	32	07-01-05
161T6021	UPPER DRAG STRUT SPINDLE NUT	32-11-81	32	07-01-05
161T6022	UPPER DRAG STRUT SPINDLE WASHER ASSY	32-11-81	32	07-01-05
161T6031	JURY STRUT SPRING ASSY	32-11-81	32	07-01-05
161T6033	JURY STRUT SPRING SHAFT	32-11-81	32	07-01-05
161T6046	SPRING MLG	32-11-81	32	07-01-05
161T6047	SPOOL ASSY	32-11-81	32	07-01-05
161T6100	STRUT ASSY, MAIN LANDING GEAR DRAG	32-11-63	1	03-01-00
161T6116	BOLT	32-11-81	32	07-01-05
161T7100	STRUT ASSY, MAIN LANDING GEAR SHOCK -3 -4 -7 -8 -11 -12	32-11-33	1	11-01-01
161T7100	BUILDUP ASSY, MAIN LANDING GEAR -1 -2 -5 -6	32-11-36	3	07-01-03
162T0000	NOSE LANDING GEAR ASSY	32-21-21	48	11-01-05
162T1100	COMPONENT ASSY, NOSE LANDING GEAR	32-21-43	48	11-01-05
162T1136	COMPONENT ASSY, NOSE LANDING GEAR	32-21-47	44	11-01-05
162T2000	STRUT ASSY, NOSE LANDING GEAR DRAG	32-21-54	35	11-01-05
162T4001	ARM ASSY, IDLER	32-22-63	1	04-01-92
162T4002	UNIVERSAL ASSY	32-22-63	1	04-01-92
162T4004	BARREL ASSY	32-22-63	1	04-01-92
162T4010	CLEVIS ASSY	32-22-63	1	04-01-92
162T4012	BELLCRANK ASSY	32-22-63	1	04-01-92
162T5000	SUPPORT BEAM	32-21-65	10	11-01-00
162T5002	SUPPORT LINK	32-21-65	10	11-01-00
162T5004	FWD SUPPORT BEAM PIN	32-21-65	10	11-01-00

NUMERICAL INDEX/NUMERIC



BOEING
COMPONENT
MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL ISSUED DATE
162T5005	AFT SUPPORT BEAM PIN	32-21-65	10	11-01-00
162T5006	SUPPORT LINK PIN	32-21-65	10	11-01-00
162T5007	ACTUATOR ATTACH PIN	32-21-65	10	11-01-00
162T5008	LOCK ACTUATOR PIN	32-21-65	10	11-01-00
163T0000	STRUT ASSY, TAIL SKID COMPLETE SHOCK	32-71-05	9	11-01-04
163T0001	INSTALLATION COMPONENTS, TAIL SKID	32-71-14	3	07-01-04
163T1000	INSTALLATION COMPONENTS, TAIL SKID	32-71-06	1	07-01-01
163T1020	SHOCK ABSORBER ASSY, TAIL SKID	32-71-13	2	03-01-04
163T3002	INSTALLATION COMPONENTS, TAIL SKID	32-71-06	1	07-01-01
163T3004	INSTALLATION COMPONENTS, TAIL SKID	32-71-06	1	07-01-01
163T3005	INSTALLATION COMPONENTS, TAIL SKID	32-71-06	1	07-01-01
163T3006	INSTALLATION COMPONENTS, TAIL SKID	32-71-06	1	07-01-01
165T0001	INSTALLATION COMPONENTS, MLG BRAKE, WHEEL, TIRE, IN-AXLE, HUB CAP	32-11-27	2	11-01-02
165T0002	INSTALLATION COMPONENTS, MLG BRAKE, WHEEL, TIRE, IN-AXLE, HUB CAP	32-11-27	2	11-01-02
165T0003	INSTALLATION COMPONENTS, MLG BRAKE, WHEEL, TIRE, IN-AXLE, HUB CAP	32-11-27	2	11-01-02
165T0004	INSTALLATION COMPONENTS, MLG BRAKE, WHEEL, TIRE, IN-AXLE, HUB CAP	32-11-27	2	11-01-02
173T2001	RUDDER ASSY	55-40-13	3	11-01-00
183T2001	ELEVATOR ASSY, INBOARD SEGMENT	55-20-12	3	11-01-02
183T3001	ELEVATOR ASSY, OUTBOARD SEGMENT	55-20-22	3	07-01-00
183T3093	ELEVATOR ASSY, OUTBOARD SEGMENT	55-20-22	3	07-01-00
213T1106	DUCT ASSY, GROUND AIR SERVICE CONNECTION	21-21-31	9	07-01-91
213T3101	DOOR ASSY, RAM AIR INLET MODULATING	21-53-12	5	07-01-01
213T3102	EXHAUST ASSY, RAM AIR	21-53-11	9	10-01-89
213T4101	DUCTS, REPAIR OF PNEUMATIC	36-10-06	55	11-01-05
214T6112	VALVE ASSY, BULK CARGO VENTILATION SYSTEM FLAPPER	21-26-09	3	03-01-03
218N2007	REGULATOR ASSY, FIRE EXTINGUISHER METERING SYSTEM	26-23-01	2	04-01-93
232T2110	DOOR ASSY, FLIGHT DECK	52-51-13	1	07-01-04
233N3209	PANEL ASSY, ELECTRICAL SYSTEM, M10063	24-22-71	33	07-01-04
233N3211	PANEL ASSY, BATTERY/STANDBY POWER, M10062	24-33-71	20	07-01-03
	-8 -11 -15 -19 -20 -24 THRU -27			
	-29 THRU -35 -1008 -1011 -1015 -1019			
	-1020 -1024 THRU -1027			
	-1029 THRU -1035 -1312 THRU -1319			

NUMERICAL INDEX/NUMERIC



BOEING
COMPONENT
MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL ISSUED DATE
233N3211	PANEL ASSY, BATTERY/STANDBY POWER, M10062 -36 THRU -42 -46 -300 THRU -309 -311 THRU -313 -315 THRU -317 -319 -321 -1036 -1037 -1039 THRU -1042 -1046 -1300 THRU -1309 -1311	24-33-72	14	07-01-03
233N3214	PANEL ASSY, LIGHTING CONTROL, M10056	33-11-71	22	11-01-04
233N3216	PANEL ASSY, YAW DAMPER, M10250	22-21-71	25	11-01-04
233N6203	PANEL ASSY, APU & CARGO FIRE CONTROL, M10444 -7 -9 -12 -13 -21 -23 -24 -32 -35 -36 -45 THRU -48 -53 -56 -67 -70 -73 -75 -77 -79 -82 -85 -86 -103 THRU -105 -109 THRU -111 -161 THRU -165 -169 THRU -172 -187 THRU -198 -200 -202 -203 -206 -219 THRU -221 -226 -301 THRU -305 -355 -356 -360 -1007 -1009 -1012 -1013 -1021 -1023 -1024 -1032 -1035 -1036 -1045 THRU -1048 -1053 -1056 -1067 -1070 -1073 -1075 -1077 -1079 -1082 -1085 -1086 -1103 THRU -1105 -1109 THRU -1111 -1161 THRU -1165 -1169 THRU -1172 -1187 THRU -1198 -1200 -1202 -1203 -1206 -1219 THRU -1221 -1226 -1301 THRU -1305 -1347 THRU -1354 -1356 -1358 -1359 -1381 THRU -1386 -1389 -1398 -1400 THRU -1407 -1409 -1411 THRU -1419	26-15-51	29	03-01-04
233N6203	PANEL ASSY, APU & CARGO FIRE CONTROL M10444 -78 -80 -81 -83 -84 -123 -126 -132 -135 -182 THRU -185 -199 -201 -222 -345 -1081 -1084 -1123 -1126 -1132 -1135 -1182 THRU -1185 -1199 -1201 -1222 -1345 -1355 -1357 -1366 -1367 -1370 -1371 -1394 THRU -1397 -1408 -1410	26-15-53	14	11-01-04
233N6203	PANEL ASSY, APU & CARGO FIRE CONTROL, M10444 -112 -114 -117 -120 -129 -138 -143 -144 -146 -157 -166 -173 THRU -175 -177 THRU -181 -186 -306	26-15-55	16	11-01-04

NUMERICAL INDEX/NUMERIC



BOEING
COMPONENT
MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	R E V	MANUAL ISSUED DATE
	-339 THRU -344 -352 -353 -357 -358			
	-1112 -1114 -1117 -1120 -1129 -1138			
	-1143 -1144 -1146 -1157 -1166			
	-1173 THRU -1175 -1177 THRU -1181			
	-1186 -1306 -1339 THRU -1344			
	-1360 THRU -1365 -1368 -1369			
	-1372 THRU -1380 -1387 -1388			
	-1390 THRU -1393 -1399			
233N6206	PANEL ASSY, ACARS SWITCHING, M10775	23-27-02	9	07-01-04
233N6252	PANEL ASSY, ELECTRICAL SYSTEM, M10063	24-22-71	33	07-01-04
233T2222	PANEL ASSY, TWO CREW CONTROL, P1-3	31-11-61	7	07-01-05
233T3100	PANEL ASSY, TEMPERATURE CONTROL, M14	21-61-53	25	03-01-04
	-55 -90 -154 -162 -163 -168 -170			
	-206 -211 THRU -214 -252 -254			
	-256 THRU -258 -310			
233T3100	PANEL ASSY, TEMPERATURE CONTROL, M14	21-61-54	31	07-01-04
	-261 -278 -294 -311 -313 THRU -315			
	-339 -340 -344 -346 -363			
	-375 THRU -378 -405 THRU -409 -425			
233T3100	PANEL ASSY, YAW DAMPER, M10250	22-21-71	25	11-01-04
	-72 -73 -140 -141 -174 -175 -280			
	-309 -327 -330 -342 -440			
233T3100	PANEL ASSY, ELECTRICAL SYSTEM, M10063	24-22-71	33	07-01-04
	-216 -217 -234 -235 -270 -275 -295			
233T3100	PANEL ASSY, BATTERY/STANDBY POWER, M10062	24-33-71	20	07-01-03
	-70 -137 -156 -157 -218 -219 -232			
	-233			
233T3100	PANEL ASSY, BATTERY/STANDBY POWER, M10062	24-33-72	14	07-01-03
	-273 -287 -296			
233T3100	PANEL ASSY, FUEL MANAGEMENT, M10055	28-22-52	17	07-01-03
	-87 -148 -189 -251 -277 -293			
233T3100	PANEL ASSY, WING AND ENGINE ANTI-ICE CONTROL, M10397	30-11-52	17	07-01-03
	-65 -91 -135 -136 -160			
	-178 THRU -180 -248 THRU -250 -292			
233T3100	PANEL ASSY, WING AND ENGINE ANTI-ICE CONTROL, M10397	30-11-53	14	07-01-03
	-353 -359 -381 THRU -386 -393			
233T3100	PANEL ASSY, LIGHTING CONTROL, M10056	33-11-71	22	11-01-04
	-67 -123 -190 -191 -306			



BOEING
COMPONENT
MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL ISSUED DATE
233T3100	PANEL ASSY, ANTI-COLLISION AND LANDING LIGHTING, M56	33-44-72	18	07-01-04
	-64 -145 -196 -284 -442			
233T3100	PANEL ASSY, EMERGENCY LIGHTS, M43	33-51-03	20	07-01-04
	-86 -134 -225 -236 -289 -301 -329 -415			
233T3100	PANEL ASSY, BLEED AIR CONTROL, M15	36-11-54	21	07-01-03
	-128 -129 -173 -223 -224 -228 -244 -245 -266 -274 -276 -291 -318 -319 -333 -335 -336 -343 -443			
233T3100	PANEL ASSY, APU CONTROL, M1	49-61-52	21	11-01-04
	-53 -144 -149 -153 -164 -238 -461			
233T3100	PANEL ASSY, EEC CONTROL M10761	73-21-86	8	11-01-04
	-338 -341 -347 -348 -373 -374			
233T3100	PANEL ASSY, ENGINE IGNITION & START, M49	74-31-52	28	03-01-04
	-130 -227 -239 -290 -326 -360 THRU -362			
233T3202	PANEL ASSY, ANTI-COLLISION AND LANDING LIGHTING, M56	33-44-72	18	07-01-04
233T3210	PANEL ASSY, EMERGENCY LIGHTS, M43	33-51-03	20	07-01-04
233T3217	PANEL ASSY, ANTI-COLLISION AND LANDING LIGHTING, M56	33-44-72	18	07-01-04
233T3230	PANEL ASSY, ENTERTAINMENT, M1111	23-32-52	24	11-01-04
233T3231	PANEL ASSY, FUEL HEAT, M1094	28-41-01		10-01-90
233T3232	PANEL ASSY, APU CONTROL, M1	49-61-52	21	11-01-04
233T3235	PANEL ASSY, FUEL MANAGEMENT, M10055	28-22-52	17	07-01-03
233T3236	PANEL ASSY, TEMPERATURE CONTROL, M14	21-61-53	25	03-01-04
	-1 -5 -10 -16 -20 -22 -24 -26 -28 -29 -31 THRU -39 -50 -95 -319 -1001 -1005 -1010 -1016 -1020 -1022 -1024 -1026 -1028 -1029 -1031 THRU -1033 -1035 -1037 THRU -1039 -1050 -1095 -1316 THRU -1332 -1336 -1345 THRU -1350			
233T3236	PANEL ASSY, TEMPERATURE CONTROL, M14	21-61-54	31	07-01-04
	-40 -42 -44 -47 -53 -59 -60 -62 -66 -69 THRU -71 -73 -77 -79 -84 -85 -87 -91 -93 -94 -96 -97 -300 THRU -318 -320 -321 -1040 -1042 -1044 -1047 -1053 -1059 -1060 -1062 -1066 -1069 THRU -1071 -1077 -1079 -1084 -1085 -1087 -1091 -1093 -1094 -1096 -1097 -1300 THRU -1315			

NUMERICAL INDEX/NUMERIC



BOEING
COMPONENT
MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	R E V	MANUAL ISSUED DATE
233T3237	-1333 THRU -1335 -1337 THRU -1344 PANEL ASSY, BLEED AIR CONTROL, M15	36-11-54	21	07-01-03
233T3240	PANEL ASSY, ALTERNATE THRUST REVERSER HYDRAULICS	29-11-52	5	01-01-88
233T3241	PANEL ASSY, WING AND ENGINE ANTI-ICE CONTROL, M10397 -1 -5 -8 -10 THRU -15 -17 -20 -41 THRU -50 -1001 -1005 -1008 -1010 THRU -1015 -1017 -1020 -1041 THRU -1050 -1306 THRU -1317 -1323 THRU -1334	30-11-52	17	07-01-03
233T3241	PANEL ASSY, WING AND ENGINE ANTI-ICE CONTROL, M10397 -22 -25 -28 -39 -53 -54 -56 -58 -60 -62 THRU -64 -67 THRU -70 -300 THRU -308 -1039 -1053 -1054 -1056 -1058 -1060 -1062 -1063 -1067 THRU -1070 -1300 -1302 THRU -1305 -1318 THRU -1322 -1335 THRU -1337	30-11-53	14	07-01-03
233T3242	PANEL ASSY, EEC CONTROL M10761	73-21-86	8	11-01-04
233T3244	PANEL ASSY, ENGINE IGNITION & START, M49	74-31-52	28	03-01-04
233T3248	PANEL ASSY, ACARS MODE CONTROL, M1976	23-27-13	4	03-01-95
233T4238	PANEL ASSY, ENGINE VIBRATION M1099	77-31-02		10-01-90
233T4241	PANEL ASSY, EICAS CONTROL, M10411	31-41-53	2	04-10-85
233T4242	PANEL ASSY, FLIGHT ENGINEERS LIGHTING, M18	33-11-15	1	07-01-01
233T4247	PANEL ASSY, ELT TEST, M1184	23-24-03	2	11-01-01
233T4249	PANEL ASSY, ALTERNATE THRUST REVERSER HYDRAULIC TEST, M1218	29-11-56	1	04-01-89
233T4252	PANEL ASSY, HF COMM-CW JACK, M1317	23-11-03	1	07-01-01
233T4259	PANEL ASSY, THRUST REVERSER TEST, M1977	78-35-02	2	01-01-93
233T4261	PANEL ASSY, MAINTENANCE ANNUNCIATOR LIGHTS CONTROL, M2311	34-22-19		03-01-01
233T6100	PANEL ASSY, FIRE/OVERHEAT TEST, M10445 -16 -18 -26 -64 -75 -83	26-11-51	12	11-01-04
233T6100	PANEL ASSY, APU & CARGO FIRE CONTROL, M10444 -9 -15 -19 -21 -27 -36 -39 -42 -43 -47 -49 THRU -51 -53 -56 -59 -60	26-15-51	29	03-01-04



BOEING
COMPONENT
MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL ISSUED DATE
233T6100	PANEL ASSY, APU & CARGO FIRE CONTROL M10444	26-15-53	14	11-01-04
233T6100	PANEL ASSY, APU & CARGO FIRE CONTROL, M10444 -55 -58 -68 -69 -85 -91 -102 -65 THRU -67 -70 -73 -74 -76 THRU -78 -81 -84 -86 THRU -90 -92 -95 -96 -98 THRU -101	26-15-55	16	11-01-04
233T6204	PANEL ASSY, FIRE/OVERHEAT TEST, M10445	26-11-51	12	11-01-04
233T6206	PANEL ASSY, AIDS, M1201	31-35-03		03-01-01
233T6210	MODULE ASSY, ENGINE FIRE CONTROL	26-21-11		03-01-00
233T6211	MODULE ASSY, APU & CARGO FIRE CONTROL, M10444	26-22-11	5	11-01-04
233T7211	PANEL ASSY, AFT DOOM LIGHT, M973	33-11-16		03-01-01
233T7216	PANEL ASSY, SERVICE INTERPHONE, M1120	23-41-10		03-01-01
233U4212	MODULE ASSY, FUEL TEMPERATURE SENSOR/ GPWS RA SELECT, M6775	28-43-01	3	03-01-03
250N2004	ROD ASSY, CONTROL	27-00-12	19	07-01-03
250T1003	MODULE ASSY, LANDING GEAR BRAKE METERING VALVE	32-41-01	9	01-01-93
250T1008	UNIT ASSY, TRAILING EDGE FLAP DRIVE POWER CONTROL	27-51-16	6	11-01-05
250T1017	PACK ASSY, AUTOTHROTTLE MICROSWITCH	22-32-38	15	07-01-05
250T1018	PACK ASSY, AUTOTHROTTLE MICROSWITCH	22-32-35	17	07-01-05
251N3220	FORCE LIMITER ASSY - RUDDER CONTROLS	27-21-23		03-01-00
251T0100	ROD ASSY, CONTROL	27-00-11	19	07-01-03
251T1010	TRANSMITTER ASSY, AILERON SURFACE POSITION	27-18-12	6	03-01-05
251T1011	TRANSMITTER ASSY, AILERON SURFACE POSITION	27-18-12	6	03-01-05
251T1205	MECHANISM ASSY, AILERON CONTROL FEEL	27-11-23	11	03-01-05
251T1289	LINK ASSY	27-11-10	2	07-01-99
251T1300	QUADRANT ASSY, AILERON CONTROL RIGHT WHEEL WELL	27-11-12	3	06-01-95
251T1305	TORQUE TUBE AND BRACKET ASSY, LEFT HAND LCCA INPUT CRANK	27-11-16	13	07-01-04
251T1413	SUPPORT ASSY, LEFT SIDE OUTPUT QUADRANT	27-11-14	3	06-01-95
251T1505	OVERRRIDE ASSY, AILERON CONTROL	27-11-26	10	03-01-05
251T1506	QUADRANT ASSY, LCCA OUTPUT	27-11-22	10	07-01-99
251T1509	ROD ASSY	27-11-10	2	07-01-99
251T1510	QUADRANT ASSY, AILERON CONTROL OUTPUT	27-11-09	5	03-01-04
251T1512	FITTING ASSY	27-11-10	2	07-01-99

NUMERICAL INDEX/NUMERIC



BOEING
COMPONENT
MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL ISSUED DATE
251T1597	SHAFT ASSY, AILERON CONTROL RIGHT SIDE TORQUE	27-11-20	6	07-01-99
251T1602	QUADRANT ASSY, INBD AILERON CONTROL AND DROOP MECHANISM	27-11-28	5	11-01-99
251T1603	QUADRANT ASSY, OUTBD AILERON CONTROL AND DROOP MECHANISM	27-11-29	5	11-01-99
251T1644	ROD ASSY, AILERON CONTROL QUADRANT	27-11-05	2	10-10-86
251T1646	ROD ASSY, AILERON CONTROL QUADRANT	27-11-05	2	10-10-86
251T1710	MECHANISM ASSY, OUTBD AILERON LOCKOUT	27-11-11	9	12-01-97
251T2010	TRANSMITTER ASSY, ELEVATOR CONTROLS POSITION	27-38-11	5	07-01-92
251T2210	UNIT ASSY, ELEVATOR CONTROL FEEL AND CENTERING	27-31-09	14	03-01-04
251T2220	NEUTRAL SHIFT AND OVERRIDE ASSY, ELEVATOR	27-31-61	9	03-01-00
251T2310	QUADRANT ASSY, ELEVATOR CONTROLS LEFT AND RIGHT AFT	27-31-71	9	04-10-87
251T2400	LOST-MOTION ASSY, ELEVATOR SLAVE LINKAGE	27-31-55	8	07-01-01
251T2430	QUADRANT ASSY	27-31-25		10-10-84
251T2431	QUADRANT ASSY	27-31-25		10-10-84
251T2600	LINKAGE ASSY, HORIZONTAL STABILIZER CENTER ELEVATOR CONTROLS	27-31-52	4	01-01-89
251T2651	CRANK ASSY	27-31-25		10-10-84
251T2652	CRANK ASSY	27-31-25		10-10-84
251T2663	CRANK ASSY	27-31-25		10-10-84
251T3010	TRANSMITTER ASSY, RUDDER CONTROL POSITION	27-28-01	4	07-01-92
251T3120	CENTERING ASSY, RUDDER CONT FEEL	27-21-40	6	03-01-00
251T3200	CENTERING ASSY, RUDDER CONT FEEL	27-21-40	6	03-01-00
251T3210	TUBE ASSY, RUDDER CONTROL FEEL AND TRIM OFFSET TORQUE	27-21-43	4	03-01-00
251T3216	ARM ASSY	27-21-59	11	12-01-95
251T3220	ARM ASSY	27-21-59	11	12-01-95
251T3238	ARM ASSY	27-21-59	11	12-01-95
251T3600	CHANGER ASSY, RUDDER CONTROL RATIO	27-21-11	10	12-01-96
251T3624	LIMITER ASSY, RUDDER CONTROL RATIO CHANGER	27-21-20		10-01-87
251T3700	SUMMING ASSY AND SERVO SUMMING ASSY, RUDDER CONTROL YAW DAMPER	27-21-52	9	07-01-04
251T3745	POGO ASSY, RUDDER CONTROL YAW DAMPER BIAS	27-21-55	3	04-10-84
251T3754	COMPONENTS, YAW DAMPER INSTALLATION	27-21-62	4	11-01-03
251T3758	COMPONENTS, YAW DAMPER INSTALLATION	27-21-62	4	11-01-03

NUMERICAL INDEX/NUMERIC



BOEING
COMPONENT
MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL ISSUED DATE
251T4201	QUADRANT/CRANK ASSY, STABILIZER TRIM	27-41-22		10-01-87
251T4310	ACTUATOR ASSY, STABILIZER TRIM	27-41-01	20	03-01-05
251T4431	DRIVE ASSY, STABILIZER TRIM SWITCH AND TRANSMITTER MODULE	27-41-35	4	07-01-91
252T1100	LINK ASSY	27-11-01	8	09-01-95
252T1154	BRACKET ASSY	27-11-01	8	09-01-95
252T1200	FITTING ASSY	27-11-02	7	10-01-89
252T1211	LINKAGE ASSY	27-11-02	7	10-01-89
252T1301	ACTUATOR ASSY, INBOARD SPOILER POWER CONTROL	27-61-01	18	11-01-05
252T1401	ACTUATOR ASSY, OUTBOARD SPOILER POWER CONTROL	27-61-51	19	11-01-03
252T2100	LINK ASSY, ELEVATOR ACTUATOR	27-31-65	6	01-01-91
252T2110	ROD ASSY, ELEVATOR ACTUATOR INPUT	27-31-64	7	03-01-05
252T2118	BELLCRANK ASSY, ELEVATOR ACTUATOR	27-31-66	5	03-01-01
252T3100	LINK ASSY, RUDDER ACTUATOR	27-21-70	2	11-01-99
252T3114	CRANK ASSY, RUDDER ACTUATOR INPUT	27-21-48	4	07-01-03
252T3116	BELLCRANK ASSY, RUDDER ACTUATOR CENTER	27-21-49	3	09-01-96
253T1141	DRUM ASSY, AILERON CONTROL FORCE TRANSDUCER	27-11-07	8	03-01-00
253T1142	DRUM ASSY, AILERON CONTROL LOAD LIMITER	27-11-08	15	03-01-04
253T1200	MECHANISM ASSY, CONTROL STAND SPEED BRAKE	27-62-23	1	03-01-00
253T2111	WHEEL/COLUMN ASSY, AILERON AND ELEVATOR CONTROL	27-09-11	13	11-01-05
253T2127	TUBE ASSY, ELEVATOR CONTROL TORQUE	27-31-37	12	03-01-00
253T2144	SWITCH ASSY, STABILIZER CUTOFF	27-41-45	10	03-01-04
253T2211	CRANK ASSY	27-31-25		10-10-84
253T2214	HOUSING ASSY	27-31-25		10-10-84
253T3100	PEDAL/CRANK ASSY, RUDDER CONTROL	27-21-45	11	03-01-00
253T3119	SUPPORT ASSY	27-21-60	3	10-01-90
253T3211	JACKSHAFT ASSY, RUDDER CONTROL	27-21-46	1	09-01-95
253T3524	QUADRANT ASSY, MAIN LANDING GEAR BRAKE	32-41-22	2	07-10-85
253T3526	QUADRANT ASSY, MAIN LANDING GEAR BRAKE	32-41-23	1	09-01-94
253T3616	SUPPORT ASSY	27-21-60	3	10-01-90
253T5425	LEVER ASSY, CONTROL STAND STABILIZER TRIM	27-41-31	4	01-10-86
253T5611	SHAFT ASSY	27-62-41	6	03-01-99
253T5616	HOUSING ASSY	27-62-41	6	03-01-99
253T5623	LEVER ASSY, SPEED BRAKE	27-62-32	1	03-01-99
253T5710	LEVER ASSY, CONTROL STAND FLAP CONTROL	27-51-80	5	03-01-04
253T5723	GEARBOX ASSY, CONTROL STAND FLAP POSITION SENSOR	27-51-26	6	07-01-04
253T5800	LEVER ASSY, CONTROL STAND THRUST	76-11-19	9	07-01-04

NUMERICAL INDEX/NUMERIC


BOEING
 COMPONENT
 MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	R E V	MANUAL ISSUED DATE
253T5900	MODULE ASSY, ENGINE FUEL CONTROL	76-11-52	4	11-01-01
253T7100	AUTOTHROTTLE ASSY	22-32-21	21	11-01-04
253T7101	AUTOTHROTTLE ASSY	22-32-22	9	09-01-94
253T7114	GEARBOX ASSY, AUTOTHROTTLE	22-32-31	11	07-01-05
253T7200	PACK ASSY, AUTOTHROTTLE CLUTCH	22-32-41	13	03-01-04
253T7201	CLUTCH ASSY, ENGINE CONTROL AUTOTHROTTLE	22-32-51	25	07-01-05
253T7204	PACK ASSY, AUTOTHROTTLE SPRAG CLUTCH	22-32-44	7	07-01-04
253T7317	PACK ASSY, AUTOTHROTTLE MICROSWITCH	22-32-35	17	07-01-05
253T7500	PACK ASSY, AUTOTHROTTLE BRAKE	22-32-43	10	11-01-05
253T7531	PACK ASSY, AUTOTHROTTLE BRAKE	22-32-45	4	11-01-05
254N1016	ROD ASSY	27-62-41	6	03-01-99
254N1185	PACK ASSY, AUTOTHROTTLE MICROSWITCH	22-32-38	15	07-01-05
254T2000	LEVER ASSY, CONTROL STAND THRUST	76-11-22	3	07-01-01
254T3001	MODULE ASSY, ENG & STAB CUTOUT, CONTROL STAND	80-11-02		03-01-00
254T4100	SERVO ASSY, AUTOTHROTTLE CONTROL STAND	22-32-28		03-01-00
254T5100	MECHANISM ASSY, CONTROL STAND SPEED BRAKE	27-62-24	2	03-01-02
254W4140	GEARBOX ASSY, AUTOTHROTTLE CONTROL STAND	22-32-33	2	07-01-05
254W5001	LEVER ASSY, CONTROL STAND SPEEDBRAKE	27-62-46	1	11-01-00
256T1111	QUADRANT ASSY	27-81-35	14	07-01-99
256T1116	SHAFT ASSY	27-81-35	14	07-01-99
256T1128	SUPPORT ASSY	27-81-35	14	07-01-99
256T2110	ACTUATOR ASSY, INBOARD LE SLAT DRIVE ROTARY	27-81-01	14	03-01-02
256T2120	ACTUATOR ASSY, OUTBOARD LE ROTARY	27-81-51	20	07-01-05
256T2210	GEARBOX ASSY, INBOARD LE SLAT DRIVE OFFSET	27-81-12	15	03-01-04
256T2220	GEARBOX ASSY, OUTBOARD LE SLAT DRIVE OFFSET	27-81-61	23	11-01-04
256T2310	GEARBOX ASSY, INBOARD/OUTBOARD LE SLAT DRIVE ANGLE	27-81-25	6	10-10-85
256T2320	GEARBOX ASSY, OUTBOARD LE SLAT DRIVE ANGLE	27-81-31	6	10-10-85
256T2330	GEARBOX ASSY, INBOARD LE SLAT DRIVE ANGLE	27-81-15	5	07-01-03
256T2601	BRACKET	27-81-35	14	07-01-99
256T2610	UNIT ASSY, INBOARD LE SLAT DRIVE POWER DRIVE	27-81-41	18	07-01-03
256T2611	GEARBOX ASSY-INBOARD LE SLAT DRIVE POWER DRIVE UNIT	27-81-21	11	03-01-04
256T2660	UNIT ASSY, INBOARD LE SLAT DRIVE CONTROL	27-81-05	12	07-01-03
256T2710	UNIT ASSY, OUTBOARD LE SLAT DRIVE	27-81-82	7	11-01-00

NUMERICAL INDEX/NUMERIC

767

D634T101

01.1

 Page 19
 Nov 01/05



BOEING
COMPONENT
MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL ISSUED DATE
256T2711	POWER DRIVE GEARBOX ASSY, OUTBOARD LE SLAT DRIVE POWER DRIVE UNIT	27-81-72	3	07-01-01
256T2760	UNIT ASSY, OUTBOARD LE SLAT DRIVE CONTROL	27-81-55	14	07-01-00
256T2800	DRIVESHFT ASSY, LE SLAT DRIVE	27-81-03	11	06-01-96
256T2857	SHAFT ASSY	27-81-35	14	07-01-99
256T3110	UNIT ASSY, TE FLAP DRIVE POWER DRIVE	27-51-14	19	07-01-02
256T3130	GEARBOX ASSY, TE FLAP DRIVE POWER UNIT	27-51-50	5	11-01-99
256T3160	UNIT ASSY, TRAILING EDGE FLAP DRIVE POWER CONTROL	27-51-16	6	11-01-05
256T3210	ACTUATOR ASSY, TRAILING EDGE FLAP DRIVE 10.5 DIAMETER ROTARY	27-51-08	12	07-01-05
256T3220	ACTUATOR ASSY, TRAILING EDGE FLAP DRIVE 10.5 DIAMETER ROTARY	27-51-08	12	07-01-05
256T3222	ACTUATOR ASSY, TRAILING EDGE FLAP DRIVE 10.5 DIAMETER ROTARY	27-51-08	12	07-01-05
256T3250	ACTUATOR ASSY, TE FLAP DRIVE ROTARY (9.5 DIA)	27-51-10	15	03-01-05
256T3259	ACTUATOR ASSY, TE FLAP DRIVE ROTARY (9.5 DIA)	27-51-10	15	03-01-05
256T3264	ACTUATOR ASSY, TE FLAP DRIVE ROTARY (9.5 DIA)	27-51-10	15	03-01-05
256T3310	GEARBOX ASSY, TE FLAP DRIVE TEE	27-51-25	9	03-01-00
256T3340	GEARBOX ASSY, TE FLAP DRIVE ANGLE	27-51-34	1	03-01-00
256T3410	GEARBOX ASSY, TE FLAP DRIVE ANGLE	27-51-35	8	01-01-88
256T3430	MECHANISM ASSY, ANGLE GEARBOX AND AILERON DROOP INPUT CONTROL	27-51-37	16	07-01-03
256T3510	GEARBOX ASSY, TE FLAP DRIVE ACTUATOR INPUT ANGLE	27-51-40	1	03-01-00
256T3540	GEARBOX ASSY, TE FLAP DRIVE OFFSET TEE	27-51-22	4	03-01-00
256T3570	GEARBOX ASSY, TE FLAP DRIVE OFFSET TEE	27-51-44	8	01-01-94
256T3600	SUPPORT ASSY, TE FLAP DRIVE BEARING	27-51-83		10-01-87
256T3700	SHAFT ASSY, TE FLAP DRIVE	27-51-03	5	03-01-00
256T3760	GEARBOX/HOUSING ASSY, TE FLAP DRIVE POSITION TRANSMITTER	27-58-11	11	07-01-00
256T3767	GEARBOX/HOUSING ASSY, TE FLAP DRIVE POSITION TRANSMITTER	27-58-11	11	07-01-00
256T5120	ACTUATOR ASSY, OUTBOARD LE SLAT DRIVE ROTARY	27-81-54	5	03-01-02
256T5210	GEARBOX ASSY, INBOARD LE SLAT DRIVE NO-BACK/OFFSET	27-81-44	3	03-01-05
256T5220	GEARBOX ASSY, OUTBD LE SLAT DRIVE NO-BACK/OFFSET	27-81-62	2	03-01-05

NUMERICAL INDEX/NUMERIC

767

D634T101

01.1

Page 20

Nov 01/05



BOEING
COMPONENT
MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL ISSUED DATE
256T5240	GEARBOX ASSY, OUTBD LE SLAT DRIVE NO-BACK/OFFSET	27-81-62	2	03-01-05
256T5505	UNIT ASSY, OUTBD LE SLAT DRIVE POWER DRIVE	27-81-83	3	11-01-00
256T5510	GEARBOX ASSY, OUTBOARD LE SLAT DRIVE POWER DRIVE UNIT	27-81-73	2	07-01-01
256T5610	UNIT ASSY, INBOARD LE SLAT DRIVE POWER DRIVE	27-81-41	18	07-01-03
256T5710	DRIVESHAFT ASSY, LEADING EDGE SLAT DRIVE	27-81-26		07-01-99
256T6110	TE FLAP ACTUATION 9.5 DIA ROTARY ACTUATOR ASSY	27-51-49	4	03-01-04
256T6310	TE FLAP ACTUATION 10.6 DIA ROTARY ACTUATOR ASSY	27-51-48	4	03-01-04
256T6640	TE FLAP DRIVE ANGEL GEARBOX AND AILERON DROOP INPUT CONTROL	27-51-39	2	07-01-03
257T1102	QUADRANT ASSY, LANDING GEAR CONTROL LEVER	32-31-10		10-01-87
257T1200	ACTUATOR ASSY, MAIN LANDING GEAR DOOR LATCH	32-32-13	19	07-01-02
257T2201	MODULE ASSY, LANDING GEAR BRAKE METERING VALVE	32-41-01	9	01-01-93
257T2231	MODULE ASSY, LANDING GEAR BRAKE	32-41-02	5	03-01-99
257T2271	VALVE ASSY, BRAKE METERING	32-41-55	1	03-01-00
257T3011	LIMITER ASSY, MAIN LANDING GEAR ALTERNATE EXTEND LOAD	32-35-30	1	07-10-83
257T3101	LEVER ASSY, LANDING GEAR EXTEND	32-35-02	1	11-01-99
257T3102	QUADRANT ASSY, MAIN LANDING GEAR ALTERNATE EXTENDED	32-35-32		10-01-87
257T3103	ROD ASSY, LANDING GEAR ALTERNATE EXTEND CONTROL	32-35-41	2	07-10-83
257T3200	INSTALLATION COMPONENTS, NOSE LANDING GEAR ALTERNATE EXTEND	32-36-10	1	01-01-90
257T3212	INSTALLATION COMPONENTS, NOSE LANDING GEAR ALTERNATE EXTEND	32-36-10	1	01-01-90
257T3213	INSTALLATION COMPONENTS, NOSE LANDING GEAR ALTERNATE EXTEND	32-36-10	1	01-01-90
257T3214	INSTALLATION COMPONENTS, NOSE LANDING GEAR ALTERNATE EXTEND	32-36-10	1	01-01-90
257T3216	INSTALLATION COMPONENTS, NOSE LANDING GEAR ALTERNATE EXTEND	32-36-10	1	01-01-90
257T3220	INSTALLATION COMPONENTS, NOSE LANDING GEAR ALTERNATE EXTEND	32-36-10	1	01-01-90
257T3225	INSTALLATION COMPONENTS, NOSE LANDING GEAR ALTERNATE EXTEND	32-36-10	1	01-01-90

NUMERICAL INDEX/NUMERIC

767

D634T101

01.1

Page 21
Nov 01/05



BOEING
COMPONENT
MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL ISSUED DATE
257T3300	RELEASE ASSY, MAIN GEAR DOOR GROUND	32-35-71	4	10-10-83
257T3401	INSTALLATION COMPONENTS, MAIN LANDING GEAR ALTERNATE EXTEND UPLOCK	32-35-83		10-10-85
257T3403	INSTALLATION COMPONENTS, MAIN LANDING GEAR ALTERNATE EXTEND UPLOCK	32-35-83		10-10-85
257T3404	SHAFT ASSY, MAIN LANDING GEAR ALTERNATE EXTEND UPLOCK RELEASE CRANK	32-35-80	3	11-01-02
257T3406	LOCKOUT ASSY, MAIN GEAR ALTERNATE EXTEND UPLOCK RELEASE	32-35-81	6	10-01-88
257T3407	VALVE ASSY, MAIN LANDING GEAR ALTERNATE EXTEND UPLOCK RELEASE DOOR SAFETY	32-35-82	1	07-01-93
257T3409	INSTALLATION COMPONENTS, MAIN LANDING GEAR ALTERNATE EXTEND UPLOCK	32-35-83		10-10-85
257T3413	INSTALLATION COMPONENTS, MAIN LANDING GEAR ALTERNATE EXTEND UPLOCK	32-35-83		10-10-85
257T3414	INSTALLATION COMPONENTS, MAIN LANDING GEAR ALTERNATE EXTEND UPLOCK	32-35-83		10-10-85
257T3415	INSTALLATION COMPONENTS, MAIN LANDING GEAR ALTERNATE EXTEND UPLOCK	32-35-83		10-10-85
257T3416	INSTALLATION COMPONENTS, MAIN LANDING GEAR ALTERNATE EXTEND UPLOCK	32-35-83		10-10-85
257T3417	INSTALLATION COMPONENTS, MAIN LANDING GEAR ALTERNATE EXTEND UPLOCK	32-35-83		10-10-85
257T3418	INSTALLATION COMPONENTS, MAIN LANDING GEAR ALTERNATE EXTEND UPLOCK	32-35-83		10-10-85
257T3419	INSTALLATION COMPONENTS, MAIN LANDING GEAR ALTERNATE EXTEND UPLOCK	32-35-83		10-10-85
257T3429	INSTALLATION COMPONENTS, MAIN LANDING GEAR ALTERNATE EXTEND UPLOCK	32-35-83		10-10-85
257T3431	INSTALLATION COMPONENTS, MAIN LANDING GEAR ALTERNATE EXTEND UPLOCK	32-35-83		10-10-85
257T3440	INSTALLATION COMPONENTS, MAIN LANDING GEAR ALTERNATE EXTEND UPLOCK	32-35-83		10-10-85
257T3501	SHAFT ASSY, TORQUE	32-35-70	2	11-01-02
257T3502	LIMITER ASSY, NOSE GEAR ALTERNATE EXTEND LOAD	32-35-91	3	07-01-90
257T4100	INSTALLATION COMPONENTS, NOSE WHEEL STEERING QUADRANT	32-51-04	2	03-01-04
257T4117	INSTL COMPONENTS, NOSE WHEEL STEERING	32-51-02	6	07-01-03
257T4119	INSTL COMPONENTS, NOSE WHEEL STEERING	32-51-02	6	07-01-03
257T4120	GEARBOX ASSY, NOSE WHEEL STEERING	32-51-01	7	11-01-01
257T4155	INSTL COMPONENTS, NOSE WHEEL STEERING	32-51-02	6	07-01-03
257T4158	INSTL COMPONENTS, NOSE WHEEL STEERING	32-51-02	6	07-01-03
257T4159	INSTL COMPONENTS, NOSE WHEEL STEERING	32-51-02	6	07-01-03

NUMERICAL INDEX/NUMERIC



BOEING
COMPONENT
MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL ISSUED DATE
257T4162	INSTL COMPONENTS, NOSE WHEEL STEERING	32-51-02	6	07-01-03
257T4164	INSTL COMPONENTS, NOSE WHEEL STEERING	32-51-02	6	07-01-03
257T4165	INSTL COMPONENTS, NOSE WHEEL STEERING	32-51-02	6	07-01-03
257T4169	INSTL COMPONENTS, NOSE WHEEL STEERING	32-51-02	6	07-01-03
257T4200	MECHANISM ASSY, NOSE WHEEL STEERING CENTERING SPRING AND RUDDER INTERCONNECT	32-51-30	2	12-01-95
257T4311	CARTRIDGE ASSY, NOSE WHEEL STEERING SPRING	32-51-51	6	01-01-92
257T4316	COMPENSATOR ASSY, NOSE WHEEL STEERING CABLE	32-51-20	3	07-01-93
257T4318	DRUM/LOCKOUT ASSY, NOSE WHEEL STEERING	32-34-16	20	11-01-05
257T4350	CRANK ASSY, NOSE LANDING GEAR ALTERNATE RELEASE ACTUATOR	32-35-85	1	11-01-00
257T4662	ACTUATOR ASSY, MAIN LANDING GEAR ALTERNATE EXTEND	32-35-84	3	07-01-03
258T1100	COUNTERBALANCE ASSY, OVERHEAD PASSENGER DOOR	52-11-63	6	03-01-99
258T1110	GEARBOX ASSY, OVERHEAD PASSENGER DOOR COUNTERBALANCE	52-11-71	20	11-01-02
258T1190	COUNTERBALANCE ASSY, ENTRY AND SERVICE DOOR	52-11-62	11	07-01-99
258T1190	-3 THRU -5 -7 -8 COUNTERBALANCE ASSY, ENTRY AND SERVICE DOOR	52-11-64	1	03-01-97
258T3230	BRACKET ASSY	52-11-91	5	06-01-95
258T3401	PULLEY BRACKET	52-11-91	5	06-01-95
258T4240	BRACKET ASSY	52-11-91	5	06-01-95
258T5001	GEARBOX ASSY, LARGE CARGO DOOR MANUAL DRIVE	52-34-45	5	12-01-95
258T5004	SHAFT ASSY	52-34-25	2	07-01-03
258T5005	SHAFT ASSY	52-34-25	2	07-01-03
258T5021	LINK ASSY	52-34-25	2	07-01-03
258T7100	TURBINE ASSY, RAM AIR	29-21-05	2	03-01-00
270T2400	VALVE ASSY, HYDRAULIC PRESSURE RELIEF	29-11-48		11-01-99
271T0001	MODULE ASSY, RETURN FILTER	29-11-35	4	06-01-95
271T0042	MODULE ASSY, AC MOTOR PUMP PRESSURE AND CASE DRAIN FILTER	29-11-41	15	07-01-04
271T0068	MODULE ASSY, EDP AND ADP PRESSURE AND CASE DRAIN FILTER	29-11-46	16	03-01-02
271T0115	RESERVOIR ASSY, CENTER SYSTEM HYDRAULIC	29-11-23	3	11-01-03
271T4521	RESERVOIR ASSY, CENTER HYDRAULIC SYSTEM	29-11-20	1	11-01-03
271T4904	MODULAR ASSY, CENTRAL GROUND SERVICE RESERVOIR PRESSURIZATION	29-11-26	3	11-01-99

NUMERICAL INDEX/NUMERIC

767

D634T101

01.1

Page 23
Nov 01/05



BOEING
COMPONENT
MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL ISSUED DATE
271T5212	RESERVOIR ASSY, LEFT AND RIGHT SYSTEM HYDRAULIC	29-11-12	4	03-01-97
272T6100	HYDRAULIC INSTALLATION, MAIN LANDING GEAR	32-11-58	1	11-01-00
272T6145	BRACKET INSTALLATION, MAIN LANDING GEAR	32-11-57	1	03-01-01
273T0073	ACTUATOR ASSY, MAIN LANDING GEAR DOOR	32-32-20	11	03-01-03
273T1100	ACTUATOR ASSY, MAIN LANDING GEAR RETRACT	32-32-00	25	07-01-05
273T1102	ACTUATOR ASSY, MAIN LANDING GEAR RETRACT	32-32-00	25	07-01-05
273T1151	ACTUATOR ASSY, MAIN LANDING GEAR RETRACT	32-32-64	2	07-01-01
273T1400	BOX ASSY, MAIN LANDING GEAR OPERATED SEQUENCE VALVE/CAM	32-32-43	5	07-01-99
273T1401	BOX ASSY, MAIN LANDING GEAR OPERATED SEQUENCE VALVE/CAM	32-32-43	5	07-01-99
273T4110	ACTUATOR ASSY, NOSE LANDING GEAR RETRACT	32-34-00	11	11-01-05
273T4112	ACTUATOR ASSY, NOSE LANDING GEAR RETRACT	32-34-00	11	11-01-05
273T4120	ACTUATOR ASSY, NOSE GEAR LOCK	32-34-31	6	12-01-97
273T4121	ACTUATOR ASSY, NOSE GEAR LOCK	32-34-31	6	12-01-97
273T4520	ACTUATOR ASSY, MAIN LANDING GEAR DOOR -3 -4	32-32-19	3	03-01-02
273T4520	ACTUATOR ASSY, MAIN LANDING GEAR DOOR -9	32-32-20	11	03-01-03
273T4521	ACTUATOR ASSY, MAIN LANDING GEAR DOOR	32-32-19	3	03-01-02
273T4531	BUNGEE ASSY, MAIN GEAR DOOR OPERATED SEQUENCE VALVE	32-32-50		10-01-87
273T4551	ACTUATOR ASSY, MAIN LANDING GEAR DOOR	32-32-44	3	03-01-05
273T4561	ACTUATOR ASSY, MAIN LANDING GEAR DOOR LATCH	32-32-13	19	07-01-02
273T4572	ACTUATOR ASSY, MAIN LANDING GEAR DOOR ARMING LOCKOUT	32-32-15	4	07-10-86
273T4582	MECHANISM ASSY, DOOR OPERATED SEQUENCE VALVE	32-32-36		11-01-99
273T4591	ACTUATOR ASSY, MAIN LANDING GEAR DOOR LATCH	32-32-40	2	11-01-01
273T4702	ACTUATOR ASSY, TAIL SKID	32-71-12	2	07-01-03
273T6100	POSITIONER ASSY, MAIN LANDING GEAR TRUCK	32-32-55	37	03-01-05
273T6101	POSITIONER ASSY, MAIN LANDING GEAR TRUCK	32-32-55	37	03-01-05
273T6151	ACTUATOR ASSY, TRUCK POSITIONER	32-32-66	2	07-01-03
273T6200	ACTUATOR ASSY, MAIN LANDING GEAR SIDE BRACE LOCK	32-32-10	11	07-01-04
273T6201	ACTUATOR ASSY, MAIN LANDING GEAR SIDE BRACE LOCK	32-32-10	11	07-01-04
273T6251	ACTUATOR ASSY, MAIN LANDING GEAR SIDE BRACE DOWN LOCK	32-32-29	2	03-01-01
273T6300	ACTUATOR ASSY, MAIN LANDING GEAR DRAG	32-32-25	11	07-01-04

NUMERICAL INDEX/NUMERIC

767

D634T101

01.1

Page 24
Nov 01/05



BOEING
COMPONENT
MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL ISSUED DATE
273T6301	BRACE LOCK ACTUATOR ASSY, MAIN LANDING GEAR DRAG	32-32-25	11	07-01-04
273T6351	BRACE LOCK ACTUATOR ASSY, MAIN LANDING GEAR DRAG	32-32-35	3	07-01-03
274N1003	BRACE DOWN LOCK VALVE ASSY, ALTERNATE BRAKE SELECT AND BRAKE ACCUMULATOR ISOLATION	32-41-12	18	11-01-00
274N1028	VALVE ASSY, ALTERNATE BRAKE SELECT AND BRAKE ACCUMULATOR ISOLATION	32-41-12	18	11-01-00
274N1051	VALVE ASSY, ALTERNATE BRAKE SELECT AND BRAKE ACCUMULATOR ISOLATION	32-41-12	18	11-01-00
274T0005	VALVE ASSY, ALTERNATE BRAKE SELECTOR AND BRAKE ACCUMLATOR ISOLATION	32-41-10	9	07-01-05
274T4570	ACTUATOR ASSY, WHEEL BRAKE	32-41-25	7	10-01-90
274T4620	VALVE ASSY, ALTERNATE BRAKE SELECTOR AND BRAKE ACCUMLATOR ISOLATION	32-41-10	9	07-01-05
274T4621	VALVE ASSY, ALTERNATE BRAKE SELECTOR AND BRAKE ACCUMLATOR ISOLATION	32-41-10	9	07-01-05
274U0003	VALVE ASSY, ALTERNATE BRAKE SELECTOR AND BRAKE ACCUMLATOR ISOLATION	32-41-10	9	07-01-05
274U0003	-2 -4 VALVE ASSY, ALTERNATE BRAKE SELECT AND BRAKE ACCUMULATOR ISOLATION	32-41-12	18	11-01-00
275T4112	-4 MODULAR ASSY, NOSE GEAR STEERING CHECK VALVE	32-51-40	5	07-01-03
275T6221	ACTUATOR ASSY, NOSE GEAR STEERING	32-51-10	13	07-01-03
284T0719	PANEL ASSY, APU SHUTDOWN, P40 -1 THRU -3 -7 THRU -16 -19 -25 -26 -28 -31 -32 -35 -37 -69 -300 -301 -303 -305 -306 -308 THRU -310 -313 THRU -317 -328 -350 THRU -353 -356 -358 THRU -362 -364 THRU -366	26-15-45	8	03-01-03
284T0719	PANEL ASSY, APU SHUTDOWN, P40 -17 -18 -21 -24 -27 -29 -30 -33 -34 -302 -304 -307 -311 -312 -354 -355 -357 -363	26-15-46	4	03-01-03
285T0006	CARD FILE ASSY, ELECTRICAL SYSTEM (ESCF)	25-71-01		11-01-02
285T0007	CHASSIS ASSY, WARNING ELECTRONICS UNIT	25-71-02		11-01-02
285T0628	PANEL ASSY, FORWARD ATTENDANTS	25-29-62	19	07-01-04



BOEING
COMPONENT
MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL ISSUED DATE
285T0629	PANEL ASSY, AFT ATTENDANTS -49 -52 -53 -55 -58 -62 THRU -66 -68 -71 THRU -73 -75 -78	25-29-54	12	03-01-04
285T0629	PANEL ASSY, AFT ATTENDANTS -12 -14 -67 -69 -70 -74	25-29-55	9	07-01-04
285T0629	PANEL ASSY, AFT ATTENDANTS -47 -48 -50 -51 -54 -56 -57 -59 THRU -61 -80 -125	25-29-59	5	03-01-04
287T6101	WIRE PROVISION INSTALLATION, MAIN LANDING GEAR	32-11-28	2	07-01-03
287T6104	WIRE HARNESS ASSY, MAIN LANDING GEAR -23 THRU -26 -29 THRU -40 -45 THRU -50 -79 -80 -82 -83 -113 THRU -126 -301 THRU -304 -309 THRU -318 -321 THRU -338 -343 THRU -360 -363 THRU -372 -378 THRU -380 -382	32-10-51	21	11-01-05
287T6104	WIRE HARNESS ASSY, MAIN LANDING GEAR -55 THRU -60 -73 THRU -78 -81 -84 THRU -88 -305 THRU -308 -319 -320 -339 THRU -342 -361 -362 -373 THRU -377 -381	32-10-52	13	11-01-05
287T6104	WIRING HARNESS ASSY, MAIN LANDING GEAR -4001 THRU -4022 -4025 THRU -4036	32-10-53	2	03-01-03
287T6205	WIRE HARNESS ASSY, NOSE LANDING GEAR	32-20-51	30	11-01-05
293W5602	ACTUATOR ASSY, NOSE LANDING GEAR ALTERNATE UPLOCK RELEASE	32-35-86	2	11-01-01
310T1020	MOUNT ASSY, CF6-80A AFT ENGINE	71-21-11	16	11-01-03
310T1030	LINK ASSY	54-50-21	21	07-01-05
310T2030	LINK ASSY	54-50-21	21	07-01-05
310T2301	FUSE PIN	54-50-21	21	07-01-05
310T3020	MOUNT ASSY, JT9D ENGINE FORWARD AND AFT	71-21-01	33	03-01-05
310T4020	MOUNT ASSY, ENGINE FORWARD AND AFT (PW4000)	71-21-16	35	11-01-05
310T4040	LINK ASSY	54-50-21	21	07-01-05
310U2020	MOUNT ASSY, CF6-80C AFT ENGINE	71-21-14	23	11-01-05
310U4020	MOUNT ASSY, ENGINE FORWARD AND AFT (PW4000)	71-21-16	35	11-01-05
311T1710	LINK ASSY	54-50-21	21	07-01-05
311T1730	BRACE ASSY	54-50-21	21	07-01-05
311T1735	DIAGONAL BRACE, STRUT	54-50-21	21	07-01-05
311T2090	PIN	54-50-21	21	07-01-05
311T2093	PIN	54-50-21	21	07-01-05
311T2095	PIN	54-50-21	21	07-01-05
311T2096	BOLT	54-50-21	21	07-01-05

NUMERICAL INDEX/NUMERIC

767

D634T101

01.1

Page 26

Nov 01/05



BOEING
COMPONENT
MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	R E V	MANUAL ISSUED DATE
311T2102	PIN	54-50-21	21	07-01-05
311T2730	BRACE ASSY	54-50-21	21	07-01-05
311T2735	DIAGONAL BRACE, STRUT	54-50-21	21	07-01-05
311T2740	SIDE LINK, STRUT	54-50-21	21	07-01-05
311T2790	FUSE PIN	54-50-21	21	07-01-05
311T2792	ATTACH PIN	54-50-21	21	07-01-05
311T2793	FUSE PIN	54-50-21	21	07-01-05
311T2796	SIDE LINK PIN	54-50-21	21	07-01-05
311T3090	FUSE PIN	54-50-21	21	07-01-05
311T3092	PIN	54-50-21	21	07-01-05
311T3093	FUSE PIN	54-50-21	21	07-01-05
311T3095	FUSE PIN	54-50-21	21	07-01-05
311T3096	SHOULDER BOLT	54-50-21	21	07-01-05
311T3102	FUSE PIN	54-50-21	21	07-01-05
311T3710	LINK ASSY	54-50-21	21	07-01-05
311T3730	BRACE ASSY	54-50-21	21	07-01-05
311T3735	DIAGONAL BRACE, STRUT	54-50-21	21	07-01-05
311T4710	LINK ASSY	54-50-21	21	07-01-05
311T4730	DIAGONAL BRACE ASSY	54-50-21	21	07-01-05
311T4735	DIAGONAL BRACE, STRUT	54-50-21	21	07-01-05
311T5090	PIN	54-50-21	21	07-01-05
311T5093	PIN	54-50-21	21	07-01-05
311T5095	PIN	54-50-21	21	07-01-05
311T5700	LINK ASSY	54-50-21	21	07-01-05
311T5710	LINK ASSY	54-50-21	21	07-01-05
311T5735	DIAGONAL BRACE, STRUT	54-50-21	21	07-01-05
311T5780	BRACE ASSY	54-50-21	21	07-01-05
311T5790	FUSE PIN	54-50-21	21	07-01-05
311T5793	FUSE PIN	54-50-21	21	07-01-05
311T5795	DIAGONAL BRACE PIN	54-50-21	21	07-01-05
312T1310	SEAL ASSY, PRECOOLER EXHAUST DUCT KISS	36-12-06	2	03-01-96
312T3216	INSTALLATION COMPONENTS, PRECOOLER	36-12-03	2	07-01-00
313T1100	FAIRING ASSY, FORWARD	54-52-01	3	03-01-01
313T2100	FAIRING ASSY, STRUT FORWARD (CF6-80C)	54-52-10	3	04-01-92
313T3100	FAIRING ASSY, STRUT (JT9D-7R4)	54-52-11	2	11-01-99
313T3340	DOOR ASSY, AFT FAIRING STRUT ACCESS	54-53-01	15	11-01-04
313T3350	ROD ASSY, STRUT AFT FAIRING HOLD OPEN	54-53-61	7	03-01-04
313T5340	DOOR ASSY, INBOARD AND OUTBOARD STRUT ACCESS	54-53-03		03-01-04
314T1001	COWL ASSY, CORE (CF6)	71-11-45	13	03-01-03
314T1010	COWL ASSY, INLET CF6	71-11-02	6	03-01-98
314T1110	COWL ASSY, FAN	71-11-35	8	03-01-04
314T1210	COWL ASSY, CORE (CF6)	71-11-45	13	03-01-03
314T1310	SLEEVE ASSY, PRIMARY EXHAUST (CF6-80)	78-11-06	14	11-01-03

NUMERICAL INDEX/NUMERIC



BOEING
COMPONENT
MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL ISSUED DATE
314T1320	PLUG ASSY, TURBINE EXHAUST (CF6-80A AND JT9D-7R ENGINES)	78-11-16	2	12-01-96
314T1325	COWL ASSY, INLET CF6	71-11-02	6	03-01-98
314T1329	COWL ASSY, FAN	71-11-35	8	03-01-04
314T3010	COWL ASSY, INLET JT9D-7R4	71-11-01	18	03-01-03
314T3110	COWL ASSY, FAN JT9D-7R ENGINE	71-11-61	10	01-01-91
314T3210	COWL ASSY, CORE JT9D7R4 (NON-LOAD SHARING)	71-11-41	13	03-01-03
314T3250	COWL ASSY, CORE JT9D7R4 (LOAD SHARING)	71-11-42	8	07-01-04
314T3310	SLEEVE ASSY, PRIMARY EXHAUST (JT9D-7R AND PW4000)	78-11-06	14	11-01-03
314T3320	PLUG ASSY, TURBINE EXHAUST (CF6-80A AND JT9D-7R ENGINES)	78-11-16	2	12-01-96
314T4010	COWL ASSY, PW 4000 INLET	71-11-51	10	07-01-03
314T4080	COWL ASSY, INLET END ITEM (PARTS COLLECTOR) (PW)	71-11-52		03-01-02
314T4085	COWL ASSY, FAN END ITEM (PARTS COLLECTOR) (PW)	71-11-55		03-01-02
314T4090	COWL ASSY, CORE END ITEM (PARTS COLLECTOR) (PW)	71-11-60		03-01-02
314T4110	COWL ASSY, FAN PW 4000 ENGINE	71-11-53	5	07-01-03
314T4210	COWL ASSY, PW 4000 ENGINE CORE (WITH OIL BREATHER)	71-11-59	12	03-01-03
314T4320	PLUG ASSY, TURBINE EXHAUST (CF6-80C2 AND PW4000)	78-11-15	5	11-01-05
314U2100	NOZZLE ASSY, CF6-80C2 ENGINE PRIMARY	78-11-14	13	03-01-04
314U2200	PLUG ASSY, TURBINE EXHAUST (CF6-80C2 AND PW4000)	78-11-15	5	11-01-05
315A1802	TEE ASSY, FLOW CONTROL	78-34-03	7	04-01-93
315T1001	COWL ASSY, FAN DUCT AND THRUST REVERSER (CF6-80A)	78-31-15	23	11-01-05
315T1002	COWL ASSY, FAN DUCT (CF6) ENGINE OUTBOARD AND INBOARD SIDE -1 THRU -4	71-11-25	17	03-01-05
315T1002	COWL ASSY, FAN DUCT (CF6) ENGINE OUTBOARD AND INBOARD SIDE -15 THRU -24 -27 THRU -32 -35 THRU -38	71-11-26	6	03-01-05
315T1016	BOX ASSY, CF6-80 THRUST REVERSER STRUT CONTROL	78-34-51	22	03-01-04
315T1040	BOX ASSY, CF6-80 ENGINE THROTTLE FUEL CONTROL	76-11-18	10	11-01-00
315T1500	SLEEVE ASSY, THRUST REVERSER (CF6-80)	78-31-25	26	07-01-04
315T2011	BOX ASSY, CF6-80 THRUST REVERSER STRUT CONTROL	78-34-51	22	03-01-04

NUMERICAL INDEX/NUMERIC

767

D634T101

01.1

Page 28

Nov 01/05


BOEING
 COMPONENT
 MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	R E V	MANUAL ISSUED DATE
315T3001	COWL ASSY, FAN DUCT AND THRUST REV (JT9D) -43 THRU -55 -57 -59 -61 -63 -65 THRU -68 -73 THRU -80 -82 -84 -93 THRU -108 -117 THRU -144	78-31-14	14	07-01-04
315T3001	COWL ASSY, FAN DUCT AND THRUST REVERSER (JT9D) -7 THRU -10 -23 THRU -30 -33 -35 -64	78-31-16	8	03-01-04
315T3001	SLEEVE ASSY, THRUST REVERSER (JT9D) -39 -40	78-31-22	10	03-01-05
315T3002	COWL ASSY, FAN DUCT (JT9D) -25 THRU -28 -33 -35 -43 -45 -47 -49	71-11-31	10	07-01-03
315T3002	COWL ASSY, FAN DUCT (JT9D) -63 THRU -71 -73 -75 -77 -79 -81 -83 -85 -87 -88 -98 -100	71-11-32	8	07-01-03
315T3002	COWL ASSY, FAN DUCT -57 THRU -60 -89 THRU -92 -101 THRU -108 -117 THRU -136 -143 THRU -146 -149 THRU -164	71-11-33	6	07-01-04
315T3016	BOX ASSY, STRUT THRUST REVERSER CONTROL	78-34-41	15	09-01-97
315T3040	BOX ASSY, JT9D-7R4 FUEL CONTROL	76-11-11	20	11-01-05
315T3055	COWL ASSY, FAN DUCT AND THRUST REV (JT9D)	78-31-14	14	07-01-04
315T3056	VALVE ASSY, DIRECTIONAL FLOW	78-34-04	1	03-01-99
315T3500	SLEEVE ASSY, THRUST REVERSER (JT9D)	78-31-22	10	03-01-05
315T4013	COWL ASSY, ENGINE OUTBOARD AND INBOARD SIDE FAN DUCT PW 4000	71-11-56	17	11-01-04
315T4014	COWL ASSY, FAN DUCT AND THRUST REV (PW4000)	78-31-41	16	11-01-03
315T4026	SLEEVE ASSY, THRUST REVERSER (JT9D) -17 THRU -24	78-31-22	10	03-01-05
315T4026	SLEEVE ASSY, THRUST REVERSER (PW4000) -11 THRU -16	78-31-45	21	07-01-05
315T4295	FAN DUCT COWL AND THRUST REVERSER ASSY, END ITEM (PARTS COLLECTOR) (PW)	78-31-47	1	03-01-04
315T4500	SLEEVE ASSY, THRUST REVERSER (PW4000)	78-31-45	21	07-01-05
315T4701	COWL ASSY, FAN DUCT AND THRUST REV (PW4000)	78-31-41	16	11-01-03
315T4725	COWL ASSY, FAN DUCT AND THRUST REVERSER (CF6-80A)	78-31-15	23	11-01-05



BOEING
COMPONENT
MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL ISSUED DATE
315T4726	COWL ASSY, FAN DUCT AND THRUST REV (JT9D) -39 THRU -98 -115 THRU -138 -143 -144 -147 THRU -158 -165 THRU -172 -177 THRU -188	78-31-14	14	07-01-04
315T4726	COWL ASSY, FAN DUCT AND THRUST REVERSER (JT9D) -22 THRU -27 -29 -31 THRU -38 -99 THRU -105 -107 -109 THRU -112 -139 -140	78-31-16	8	03-01-04
315U2027	RESERVOIR ASSY, CF6-80C T/R COWL OPENING SYSTEM AUXILIARY	78-31-09	4	09-01-94
315U4009	COWL ASSY, ENGINE OUTBOARD AND INBOARD SIDE FAN DUCT PW 4000	71-11-56	17	11-01-04
332T4521	SHIELD ASSY, RADIATION PW 4000	71-04-28		06-01-95
351N1101	AUXILIARY POWER UNIT ASSY	49-11-13	7	11-01-00
351T0300	AUXILIARY POWER UNIT ASSY	49-11-11	22	11-01-03
351T0304	AUXILIARY POWER UNIT ASSY	49-11-11	22	11-01-03
352T0102	SUPPORT ASSY, AUXILIARY POWER SYSTEM	49-13-11	9	03-01-99
352T0103	SUPPORT ASSY, AUXILIARY POWER SYSTEM	49-13-11	9	03-01-99
352T0104	SUPPORT ASSY, AUXILIARY POWER SYSTEM	49-13-11	9	03-01-99
352T0105	SUPPORT ASSY, AUXILIARY POWER SYSTEM	49-13-11	9	03-01-99
353T0100	PORT/DOOR ASSY, AUXILIARY POWER SYSTEM INTAKE	49-15-12	4	11-01-99
354T0201	DUCT ASSY, AUXILIARY POWER UNIT EXHAUST	49-13-03	1	11-01-00
355T0253	DOOR ASSY, AUXILIARY POWER SYSTEM VENTED	53-85-01	3	07-01-00
411T1210	REVEAL ASSY, PASSENGER WINDOW	25-21-51	12	03-01-03
411T1233	SHADE ASSY, OVERWING ESCAPE HATCH WINDOW	52-21-02	5	03-01-02
411T1239	GRILL ASSY, AIR	21-23-03	3	07-01-92
411T3016	DOOR ASSY, FWD ENTRY AND SERVICE	52-11-06	6	03-01-04
411T3017	DOOR ASSY, AFT ENTRY AND SERVICE	52-11-22	4	03-01-04
412T2052	ROD ASSY, CENTER STOWAGE SUPPORT	25-28-03	6	07-01-02
412T3210	ROD ASSY, CENTER STOWAGE SUPPORT	25-28-03	6	07-01-02
412T3212	ROD ASSY, CENTER STOWAGE SUPPORT	25-28-03	6	07-01-02
413T1002	BIN ASSY, OUTBD OVERHEAD STOWAGE -41 THRU -46 -49 THRU -51 -53 -55 -57 THRU -60 -63 -64 -73 -75 -76 -86 THRU -88 -95 -96 -175 -189 -190 -309 THRU -312 -339 -340 -345 THRU -348 -373 -374	25-28-09	3	09-01-96

NUMERICAL INDEX/NUMERIC



BOEING

COMPONENT
MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	R E V	MANUAL ISSUED DATE
413T1002	BIN ASSY, OUTBD OVERHEAD STOWAGE -137 -139 -141 -143 -144 -151 -152 -157 -163 -164 -181 -183 -187 -188 -193	25-28-10	2	04-01-91
413T1002	BIN ASSY, OUTBD OVERHEAD STOWAGE -65 THRU -71 -77 -89 -93 -94 -101 -102 -123 -126 -147 -159 -171 -172 -271 -297 -298	25-28-13	5	10-01-91
413T1002	BIN ASSY, OUTBD OVERHEAD STOWAGE -81 -82 -99 -127 -128 -149 -150 -155 -156 -169 -170 -291 THRU -294 -337 -338	25-28-14	4	01-01-91
413T1002	BIN ASSY, OUTBD OVERHEAD STOWAGE -79 -80 -109 -110 -135 -145 -146 -161 -162 -173 -174 -177 -225 -226 -255 -256 -273 -274 -295 -296 -313 -314	25-28-15	7	10-01-91
413T1002	BIN ASSY, OUTBD OVERHEAD STOWAGE -97 -98 -105 THRU -108 -111 THRU -116 -119 THRU -122 -129 -130 -133 -134 -167 -168	25-28-16	3	01-01-91
413T1002	BIN ASSY, OUTBD OVERHEAD STOWAGE -191 -192 -213 -214 -221 -263 -264 -289 -290 -329 -343 -344	25-28-33	1	01-01-91
413T1002	BIN ASSY, OUTBD OVERHEAD STOWAGE -185 -195 -196 -215 -216 -261 -262 -267 -268 -285 -323 -324 -331 -349 -350 -387	25-28-34	1	01-01-91
413T1002	BIN ASSY, OUTBOARD OVERHEAD STOWAGE -201 THRU -208 -211 -212 -219 -223 -224 -231 THRU -246 -249 -250 -257 THRU -260 -277 THRU -280 -283 -284 -299 -305 -306 -315 THRU -319 -321 -322 -335 -379 -380 -385 -389 -390	25-28-51	2	04-01-91
413T1045	TUBE ASSY, CENTER OVERHEAD STOWAGE BIN UPPER ARM TORQUE	25-28-02	6	07-01-01
413T1047	BIN ASSY, CENTER OVERHEAD STOWAGE	25-28-42	7	07-01-05
413T1089	HANDLE ASSY, OUTBD OVHD BIN DOOR	25-22-01	1	04-01-91
413T3060	CLOSET ASSY, OUTBOARD FORWARD LEFT-HAND	25-24-01	4	09-01-94
413T3061	CLOSET ASSY, FORWARD RIGHT-HAND OUTBOARD	25-24-05	5	09-01-94
413T3610	CLOSET ASSY, CLASS DIVIDER	25-24-02	4	03-01-04
414T2025	SEAT ASSY, ATTENDANT	25-25-04	5	07-01-03
414T2030	SEAT ASSY, ATTENDANT	25-25-04	5	07-01-03

NUMERICAL INDEX/NUMERIC



BOEING
COMPONENT
MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	R E V	MANUAL ISSUED DATE
414T2050	SEAT ASSY, ATTENDANT	25-25-04	5	07-01-03
414T2100	SEAT ASSY, ATTENDANT	25-25-04	5	07-01-03
416T2003	PACKBOARD ASSY, ENTRY DOOR, ESCAPE SLIDE/RAFT	25-66-11	22	07-01-03
416T2005	PACKBOARD ASSY, OFF-WING ESCAPE SYSTEM	25-65-51	23	03-01-05
416T2008	GIRT BAR ASSY, ESCAPE SLIDE	25-66-12	2	03-01-98
416T2010	DOOR ASSY, OFF-WING ESCAPE SYSTEM SLIDE COMPARTMENT	25-65-55	7	06-01-97
416T2042	BUSTLE ASSY, FORWARD DOOR	52-11-03	3	07-01-04
416T2047	BUSTLE ASSY, AFT DOOR	52-11-23	2	07-01-91
416T2091	INTEGRATOR ASSY, OFF-WING ESCAPE SYSTEM	25-65-61	6	10-10-85
416T2184	BAR ASSY, ENTRY DOOR ESCAPE SLIDE DEPLOYMENT	25-66-30	2	11-01-00
416T2185	RETRACTOR ASSY, DEPLOYMENT CABLE	25-66-31	5	07-01-02
416T2811	INTEGRATOR ASSY, OFF-WING ESCAPE SYSTEM	25-65-62	9	07-01-98
416T2828	PACKBOARD ASSY, OFF-WING ESCAPE SYSTEM	25-65-51	23	03-01-05
416T4010	PACKBOARD ASSY, ENTRY DOOR, ESCAPE SLIDE/RAFT	25-66-11	22	07-01-03
417N2117	MAST ASSY, WASTE WATER DRAIN	38-31-01	10	11-01-02
417N6020	RECEPTACLE/CUP ASSY, TELEPHONE HANDSET	23-42-67	3	11-01-03
417T2093	MAST ASSY, WASTE WATER DRAIN	38-31-01	10	11-01-02
417T3051	PANEL ASSY, INBOARD PSU OXYGEN/LIGHT	25-23-09	7	11-01-04
417T3052	PANEL ASSY, OUTBOARD PASSENGER SERVICE UNIT OXYGEN/LIGHT	25-23-10	13	07-01-05
417T3053	PANEL ASSY, PSU OXYGEN/LIGHT	25-23-06	7	01-01-94
417T3056	PANEL ASSY, PSU SIGN	25-23-08	6	12-01-96
417T3057	PANEL ASSY, PASSENGER SERVICE UNIT SPEAKER	25-23-07	2	10-01-90
417T4200	MODULE ASSY, OUTBOARD OXYGEN	35-21-01	15	07-01-04
417T4201	MODULE ASSY, CENTER OXYGEN	35-21-10	11	11-01-01
417T4202	MODULE ASSY, LAVATORY AND FLIGHT ATTENDANT OXYGEN	35-21-21	15	11-01-01
417T4203	MODULE ASSY, ATTENDANT NO. 1 OXYGEN	35-21-31	18	03-01-03
417T4204	MODULE ASSY, FLIGHT ATTENDANT NO. 2 OXYGEN	35-21-41	16	11-01-01
417T4206	MODULE ASSY, FLIGHT ATTENDANT'S PANEL NO. 3 OXYGEN	35-21-51	17	11-01-01
417T4209	BOX ASSY, ATTENDANT/LAVATORY OXYGEN	35-21-61	2	11-01-02
417T6008	PANEL ASSY, FORWARD ATTENDANTS -42 THRU -49 -51 -52	25-29-53	8	03-01-02

NUMERICAL INDEX/NUMERIC

767

D634T101

01.1

Page 32
Nov 01/05


BOEING
 COMPONENT
 MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	REV	MANUAL ISSUED DATE
417T6008	PANEL ASSY, FORWARD ATTENDANTS -16 THRU -18 -20 -22 THRU -24 -26 -27 -29 THRU -41	25-29-58	5	03-01-02
417T6010	PANEL ASSY, AFT ATTENDANTS -34 -35 -37 -39 THRU -43 -46 THRU -56 -74	25-29-54	12	03-01-04
417T6010	PANEL ASSY, AFT ATTENDANTS -57 THRU -68 -70 THRU -73	25-29-55	9	07-01-04
417T6010	PANEL ASSY, AFT ATTENDANTS -13 -17 -19 THRU -21 -23 THRU -25 -27 -29 -30 -32	25-29-59	5	03-01-04
417T6024	RECEPTACLE/CUP ASSY, TELEPHONE HANDSET	23-42-67	3	11-01-03
417T6708	PANEL ASSY, FORWARD ATTENDANTS	25-29-58	5	03-01-02
417T7008	SHROUD ASSY, PROJECTOR REINFORCEMENT	25-22-51	2	07-01-93
417U3105	MODULE/PANEL ASSY, OXYGEN	35-21-42	12	03-01-03
417U3106	MODULE/PANEL ASSY, OXYGEN	35-21-42	12	03-01-03
452T3211	NET ASSY, BULK CARGO DIVIDER	25-50-11	14	03-01-04
452T3212	NET ASSY, BULK CARGO COMP. DOOR	25-50-11	14	03-01-04
452T3213	NET ASSY, BULK CARGO COMP. DOOR	25-50-11	14	03-01-04
452T3214	NET ASSY, BULK CARGO COMP. DOOR	25-50-11	14	03-01-04
452T3216	STRUT ASSY, BULK CARGO DOOR PROTECTOR	52-36-05	1	04-10-84
452T3217	NET ASSY, BULK CARGO DIVIDER	25-50-11	14	03-01-04
452T3303	STRAP ASSY, STOWAGE	25-50-11	14	03-01-04
452T3502	NET ASSY, CARGO DOOR PROTECTOR	25-50-11	14	03-01-04
452T3505	NET ASSY, BULK CARGO BARRIER	25-50-11	14	03-01-04
453T2652	REGULATOR ASSY, FIRE EXTINGUISHER METERING SYSTEM	26-23-01	2	04-01-93
457T7110	STRAP ASSY, HIGH RESTRAINT	25-50-11	14	03-01-04
476W2220	CRADLE ASSY, ATTENDANT HANDSET	23-42-04	1	07-01-02
478W1610	MAST ASSY, WASTE WATER DRAIN	38-31-01	10	11-01-02
65-33298	NET ASSY, PERSONNEL SAFETY	25-50-11	14	03-01-04
65-44503	CYLINDER ASSY, FEEL ACTUATOR	27-31-15	19	11-01-00
65B54281	RECEPTACLE/CUP ASSY, TELEPHONE HANDSET	23-42-67	3	11-01-03
65B81011	ROD ASSY, CONTROL	27-00-13	2	03-01-00
65B83637	GEARBOX ASSY, SIDE CARGO DOOR MANUAL DRIVE	52-34-22	2	03-01-02
65C26816	VALVE ASSY, ALTERNATE BRAKE SELECT AND BRAKE ACCUMULATOR ISOLATION	32-41-12	18	11-01-00

NUMERICAL INDEX/NUMERIC

767

D634T101

01.1

 Page 33
 Nov 01/05



BOEING
COMPONENT
MAINTENANCE MANUAL

PART NUMBER	TITLE	MANUAL NUMBER	R E V	MANUAL ISSUED DATE
654T0387	GEARBOX ASSY, INBOARD LE SLAT DRIVE OFFSET -10 -13 THRU -18	27-81-12	15	03-01-04
654T0387	GEARBOX ASSY, OUTBOARD LE SLAT DRIVE OFFSET -20 -23 THRU -28	27-81-61	23	11-01-04
69-2914	VALVE ASSY, GROUND SERVICE SWING CHECK	21-23-20	3	03-01-00
69-34511	RESERVOIR ASSY, RAIN REPELLENT SYSTEM VISUAL	30-43-01	1	01-10-84
69B81070	HOUSING ASSY	27-21-60	3	10-01-90
69B81071	HOUSING ASSY	27-21-60	3	10-01-90
69B81074	STUD	27-21-60	3	10-01-90
69B81723	HOUSING ASSY	27-31-25		10-10-84
69B82756	HOUSING ASSY	27-62-41	6	03-01-99
69B82839	ROD ASSY	27-62-41	6	03-01-99
823T0003	MODULE ASSY, FUEL TEMPERATURE SENSOR/ GPWS RA SELECT, M6775	28-43-01	3	03-01-03



BOEING
COMPONENT
MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	R E V	MANUAL ISSUED DATE
20-00-00	CHAPTER 20 STANDARD OVERHAUL PRACTICES MANUAL INTRODUCTION		22	11-01-05
20-10-01	REPAIR AND REFINISH OF HIGH STRENGTH STEEL PARTS		17	03-01-00
20-10-02	MACHINING OF ALLOY STEEL		35	11-01-05
20-10-03	SHOT PEENING		28	11-01-03
20-10-04	GRINDING OF CHROME PLATED PARTS		11	03-01-03
20-10-05	APPLICATION AND FINISHING OF THERMAL SPRAY COATINGS		19	11-01-02
20-10-06	REPAIR OF CONDUCTIVE COATINGS		7	03-01-00
20-10-07	MACHINING OF TITANIUM		7	11-01-04
20-10-08	REMOVAL OF FAYING SURFACE SEALED FITTINGS FROM COMPOSITE STRUCTURES		2	03-01-93
20-10-09	MACHINING OF COPPER BERYLLIUM ALLOYS		3	03-01-95
20-11-01	REPAIR OF PRINTED CIRCUIT ASSEMBLIES AND COMPONENT BOARD ASSEMBLIES		32	03-01-05
20-11-02	REPAIR OF ELECTRICAL CONNECTORS		15	07-01-02
20-11-03	REPAIR OF ELECTRICAL TERMINATIONS AND ELECTRICAL BONDING AREAS		10	11-01-02
20-11-04	ELECTRICAL AND ELECTRONIC COMPONENT STANDARD MAINTENANCE INSTRUCTIONS		5	09-01-97
20-11-05	INSTRUMENT PANEL ELECTRICAL MODULE GENERAL INFORMATION		19	11-01-03
20-11-06	REPAIR OF WRAPPED WIRE ELECTRICAL CONNECTIONS		3	09-01-90
20-11-07	REMOVAL AND REPLACEMENT OF SURFACE MOUNTED DEVICES		8	07-01-03
20-11-08	HOW TO PROGRAM PROGRAMMABLE CIRCUIT DEVICES			09-01-91
20-11-09	ELECTRICAL AND ELECTRONIC COMPONENT STANDARD TESTING INSTRUCTIONS			03-01-98
20-11-10	REPLACEMENT OF BALL GRID ARRAY (BGA) PARTS		2	11-01-02
20-12-01	SOLDERING ELECTRICAL CONNECTIONS		7	07-01-02
20-12-02	HANDLING OF ELECTROSTATIC DISCHARGE SENSITIVE DEVICES		4	11-01-99
20-20-01	MAGNETIC PARTICLE INSPECTION		18	03-01-04
20-20-02	PENETRANT METHODS OF INSPECTION		17	11-01-04
20-30-01	CLEANING AND RELUBRICATING ANTIFRICTION BEARINGS		9	03-01-03
20-30-02	STRIPPING OF PROTECTIVE FINISHES		24	11-01-04
20-30-03	GENERAL CLEANING PROCEDURES		37	11-01-05
20-30-80	SOLVENTS FOR GENERAL CLEANING OF METAL (SERIES 80)			03-01-98



BOEING
COMPONENT
MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	R E V	MANUAL ISSUED DATE
20-30-81	SOLVENTS FOR GENERAL CLEANING OF ALL ORGANIC COATINGS (SERIES 81)			03-01-98
20-30-82	SOLVENTS FOR GENERAL CLEANING OF SOLVENT RESISTANT ORGANIC COATINGS (SERIES 82)			03-01-98
20-30-83	SOLVENTS FOR GENERAL CLEANING OF COMPOSITES (SERIES 83)			03-01-98
20-30-84	SOLVENTS FOR FINAL CLEANING OF METAL BEFORE PAINTING (SERIES 84)		1	11-01-05
20-30-85	SOLVENTS FOR FINAL CLEANING OF ALL ORGANIC COATINGS BEFORE PAINTING (SERIES 85)			03-01-98
20-30-86	SOLVENTS FOR FINAL CLEANING OF SOLVENT RESISTANT ORGANIC COATINGS BEFORE PAINTING (SERIES 86)			03-01-98
20-30-87	SOLVENTS FOR FINAL CLEANING OF COMPOSITES BEFORE PAINTING (SERIES 87)		1	11-01-05
20-30-88	SOLVENTS FOR FINAL CLEANING OF METAL BEFORE NON-STRUCTURAL BONDING (SERIES 88)			03-01-98
20-30-89	SOLVENTS FOR FINAL CLEANING OF ALL ORGANIC COATINGS BEFORE NON-STRUCTURAL BONDING (SERIES 89)			03-01-98
20-30-90	SOLVENTS FOR FINAL CLEANING OF SOLVENT RESISTANT ORGANIC COATINGS BEFORE NON-STRUCTURAL BONDING (SERIES 90)			03-01-98
20-30-91	SOLVENTS FOR FINAL CLEANING OF COMPOSITES BEFORE NON-STRUCTURAL BONDING (SERIES 91)			03-01-98
20-30-92	SOLVENTS FOR FINAL CLEANING BEFORE GENERAL SEALING (SERIES 92)			03-01-98
20-30-93	SOLVENTS FOR FINAL CLEANING BEFORE FUEL TANK SEALING (SERIES 93)			03-01-98
20-30-94	SOLVENTS FOR FINAL CLEANING BEFORE APPLICATION OF RAIN EROSION RESISTANT COATING (SERIES 94)			03-01-98
20-30-95	SOLVENTS FOR FINAL CLEANING BEFORE AERODYNAMIC SMOOTHING AND FAIRING (SERIES 95)			03-01-98
20-30-96	SOLVENTS FOR FINAL CLEANING OF OXYGEN SYSTEM COMPONENTS (SERIES 96)		1	07-01-99
20-30-97	SOLVENTS FOR FINAL CLEANING BEFORE STRUCTURAL BONDING		1	11-01-05
20-30-98	SOLVENTS FOR CLEANING OF POLYMERICS, PHENOLICS AND NYLON (SERIES 98 AND 98-1)			03-01-98

NUMERICAL INDEX/MANUALS

767

D634T101

01.1

Page 2
Nov 01/05



BOEING
COMPONENT
MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	R E V	MANUAL ISSUED DATE
20-30-99	SOLVENTS FOR FINAL CLEANING OF COMPOSITES BEFORE STRUCTURAL BONDING		1	11-01-05
20-41-01	DECODING TABLE FOR BOEING FINISH CODES		83	11-01-05
20-41-02	APPLICATION OF CHEMICAL AND SOLVENT RESISTANT FINISHES		7	11-01-04
20-41-03	APPLICATION OF CORROSION PREVENTIVES TO INTERIOR OF CLOSED END TUBES		4	07-01-03
20-41-04	APPLICATION OF INTERIOR DECORATIVE FINISHES		3	09-01-96
20-41-05	APPLICATION OF CORROSION INHIBITING COMPOUNDS		16	07-01-03
20-42-01	LOW HYDROGEN EMBRITTLEMENT CADMIUM PLATING		14	11-01-04
20-42-02	LOW HYDROGEN EMBRITTLEMENT CADMIUM-TITANIUM ALLOY PLATING		11	11-01-02
20-42-03	HARD CHROME PLATING		23	03-01-02
20-42-04	PREPARATION OF ALUMINUM ALLOYS FOR ELECTROPLATING		7	09-01-98
20-42-05	BRIGHT CADMIUM PLATING		16	11-01-05
20-42-06	SILVER PLATING		4	09-01-92
20-42-07	COPPER PLATING		5	03-01-96
20-42-08	ELECTROLESS NICKEL PLATING		10	03-01-00
20-42-09	ELECTRODEPOSITED NICKEL PLATING		19	11-01-05
20-42-10	LOW HYDROGEN EMBRITTLEMENT STYLUS CADMIUM PLATING		11	11-01-05
20-43-01	CHROMIC ACID ANODIZING		8	03-01-99
20-43-02	ANODIZING OF MAGNESIUM ALLOYS		5	09-01-95
20-43-03	CHEMICAL CONVERSION COATINGS FOR ALUMINUM		9	03-01-02
20-44-01	APPLICATION OF SPECIAL PURPOSE COATINGS AND FINISHES		20	07-01-04
20-44-02	TEMPORARY PROTECTIVE COATINGS		4	09-01-90
20-44-03	APPLICATION OF POLYURETHANE RAIN EROSION RESISTANT COATINGS		6	03-01-01
20-44-04	APPLICATION OF URETHANE COMPATIBLE PRIMER		1	03-01-98
20-50-00	FLUID SYSTEM FITTING TORQUE VALUES		1	07-01-03
20-50-01	BOLT AND NUT INSTALLATION		23	03-01-05
20-50-02	INSTALLATION OF SAFETYING DEVICES		5	03-01-96
20-50-03	BEARING REMOVAL, INSTALLATION AND RETENTION		77	11-01-05
20-50-04	INSTALLATION OF PERMANENT PINS AND PLUGS IN DRILL PASSAGES		4	11-01-99
20-50-05	APPLICATION OF ALUMINUM FOIL		10	03-01-05

NUMERICAL INDEX/MANUALS

767

D634T101

01.1

Page 3
Nov 01/05



BOEING
COMPONENT
MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	R E V	MANUAL ISSUED DATE
	AND OTHER MARKERS			
20-50-06	INSTALLATION OF O-RINGS AND TEFLON SEALS		8	03-01-04
20-50-07	LUBRICATION		8	11-01-01
20-50-08	APPLICATION OF BONDED SOLID FILM LUBRICANTS		22	07-01-03
20-50-09	INSTALLATION OF PROTECTIVE GROMMETS		8	07-01-02
20-50-10	APPLICATION OF STENCILS, INSIGNIA, SILK SCREEN, PART NUMBERING AND IDENTIFICATION MARKINGS		13	07-01-03
20-50-11	APPLICATION OF AERODYNAMIC SMOOTHING SEALANT		5	11-01-04
20-50-12	APPLICATION OF ADHESIVES		37	03-01-05
20-50-13	APPLICATION OF WEATHER, FUEL, OIL, SOLVENT, AND HEAT RESISTANT PROTECTIVE COATINGS		9	03-01-97
20-50-14	APPLICATION OF CORROSION INHIBITING ADHESIVE PRIMER		3	11-01-02
20-50-15	INSTALLATION OF CASTABLE NON-METALLIC SHIMS		2	03-01-98
20-50-16	ASSEMBLY OF SWAGED CABLES		3	03-01-01
20-50-17	CORROSION PROTECTION PROCEDURES FOR HYDRAULIC COMPONENTS			09-01-96
20-50-18	FASTNER INSTALLATION IN COMPOSITE STRUCTURE		2	03-01-01
20-50-19	GENERAL SEALING		8	11-01-05
20-50-20	HOW TO MAKE AND INSTALL RESIN BONDED LAMINATED SHIMS AND SOLID FILLERS			03-01-97
20-50-21	HOW TO INSTALL NAMEPLATE STRAPS AND SEALS		1	11-01-05
20-50-22	HOW TO INSTALL THREADED INSERTS			11-01-00
20-50-23	HOW TO MAKE AND INSTALL MOLDABLE PLASTIC SHIMS		2	11-01-04
20-50-24	BONDING AID FOR SHIMS, FILLERS AND DETAILS			07-01-01
20-60-01	CLEANING MATERIALS		46	11-01-05
20-60-02	FINISHING MATERIALS		50	11-01-04
20-60-03	LUBRICANTS		60	11-01-05
20-60-04	MISCELLANEOUS MATERIALS		86	11-01-05
20-70-01	PROTECTION, STORAGE AND HANDLING OF AIRPLANE COMPONENTS		12	03-01-00
21-20-10	DUCTS, REPAIR OF POLYCARBONATE		2	01-01-88
21-20-15	DUCTS, REPAIR OF KEVLAR/EPOXY AND GRAPHITE/EPOXY		3	11-01-00
21-21-31	DUCT ASSY, GROUND AIR SERVICE CONNECTION	213T1106	9	07-01-91

NUMERICAL INDEX/MANUALS

767

D634T101

01.1

Page 4
Nov 01/05



BOEING

COMPONENT
MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	R E V	MANUAL ISSUED DATE
21-23-03	GRILL ASSY, AIR	411T1239	3	07-01-92
21-23-20	VALVE ASSY, GROUND SERVICE SWING CHECK	69-2914	3	03-01-00
21-26-09	VALVE ASSY, BULK CARGO VENTILATION SYSTEM FLAPPER	214T6112	3	03-01-03
21-53-11	EXHAUST ASSY, RAM AIR	213T3102	9	10-01-89
21-53-12	DOOR ASSY, RAM AIR INLET MODULATING	213T3101	5	07-01-01
21-61-53	PANEL ASSY, TEMPERATURE CONTROL, M14 -55 -90 -154 -162 -163 -168 -170 -206 -211 THRU -214 -252 -254 -256 THRU -258 -310	233T3100	25	03-01-04
21-61-53	PANEL ASSY, TEMPERATURE CONTROL, M14 -1 -5 -10 -16 -20 -22 -24 -26 -28 -29 -31 THRU -39 -50 -95 -319 -1001 -1005 -1010 -1016 -1020 -1022 -1024 -1026 -1028 -1029 -1031 THRU -1033 -1035 -1037 THRU -1039 -1050 -1095 -1316 THRU -1332 -1336 -1345 THRU -1350	233T3236	25	03-01-04
21-61-54	PANEL ASSY, TEMPERATURE CONTROL, M14 -261 -278 -294 -311 -313 THRU -315 -339 -340 -344 -346 -363 -375 THRU -378 -405 THRU -409 -425	233T3100	31	07-01-04
21-61-54	PANEL ASSY, TEMPERATURE CONTROL, M14 -40 -42 -44 -47 -53 -59 -60 -62 -66 -69 THRU -71 -73 -77 -79 -84 -85 -87 -91 -93 -94 -96 -97 -300 THRU -318 -320 -321 -1040 -1042 -1044 -1047 -1053 -1059 -1060 -1062 -1066 -1069 THRU -1071 -1077 -1079 -1084 -1085 -1087 -1091 -1093 -1094 -1096 -1097 -1300 THRU -1315 -1333 THRU -1335 -1337 THRU -1344	233T3236	31	07-01-04
22-21-71	PANEL ASSY, YAW DAMPER, M10250	233N3216	25	11-01-04
22-21-71	PANEL ASSY, YAW DAMPER, M10250 -72 -73 -140 -141 -174 -175 -280 -309 -327 -330 -342 -440	233T3100	25	11-01-04
22-32-21	AUTOTHROTTLE ASSY	253T7100	21	11-01-04
22-32-22	AUTOTHROTTLE ASSY	253T7101	9	09-01-94
22-32-28	SERVO ASSY, AUTOTHROTTLE CONTROL STAND	254T4100		03-01-00
22-32-31	GEARBOX ASSY, AUTOTHROTTLE	015T1017	11	07-01-05
22-32-31	GEARBOX ASSY, AUTOTHROTTLE	253T7114	11	07-01-05
22-32-33	GEARBOX ASSY, AUTOTHROTTLE CONTROL STAND	254W4140	2	07-01-05
22-32-35	PACK ASSY, AUTOTHROTTLE MICROSWITCH	RRB410045020	17	07-01-05

NUMERICAL INDEX/MANUALS

767

D634T101

01.1

Page 5
Nov 01/05



BOEING

COMPONENT
MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	R E V	MANUAL ISSUED DATE
22-32-35	PACK ASSY, AUTOTHROTTLE MICROSWITCH	250T1018	17	07-01-05
22-32-35	PACK ASSY, AUTOTHROTTLE MICROSWITCH	253T7317	17	07-01-05
22-32-38	PACK ASSY, AUTOTHROTTLE MICROSWITCH	250T1017	15	07-01-05
22-32-38	PACK ASSY, AUTOTHROTTLE MICROSWITCH	254N1185	15	07-01-05
22-32-41	PACK ASSY, AUTOTHROTTLE CLUTCH	253T7200	13	03-01-04
22-32-43	PACK ASSY, AUTOTHROTTLE BRAKE	253T7500	10	11-01-05
22-32-44	PACK ASSY, AUTOTHROTTLE SPRAG CLUTCH	253T7204	7	07-01-04
22-32-45	PACK ASSY, AUTOTHROTTLE BRAKE	253T7531	4	11-01-05
22-32-51	CLUTCH ASSY, ENGINE CONTROL AUTOTHROTTLE	253T7201	25	07-01-05
23-11-03	PANEL ASSY, HF COMM-CW JACK, M1317	233T4252	1	07-01-01
23-24-03	PANEL ASSY, ELT TEST, M1184	233T4247	2	11-01-01
23-27-02	PANEL ASSY, ACARS SWITCHING, M10775	233N6206	9	07-01-04
23-27-13	PANEL ASSY, ACARS MODE CONTROL, M1976	233T3248	4	03-01-95
23-32-52	PANEL ASSY, ENTERTAINMENT, M1111	233T3230	24	11-01-04
23-41-10	PANEL ASSY, SERVICE INTERPHONE, M1120	233T7216		03-01-01
23-42-04	CRADLE ASSY, ATTENDANT HANDSET	476W2220	1	07-01-02
23-42-67	RECEPTACLE/CUP ASSY, TELEPHONE HANDSET	417N6020	3	11-01-03
23-42-67	RECEPTACLE/CUP ASSY, TELEPHONE HANDSET	417T6024	3	11-01-03
23-42-67	RECEPTACLE/CUP ASSY, TELEPHONE HANDSET	65B54281	3	11-01-03
24-22-71	PANEL ASSY, ELECTRICAL SYSTEM, M10063	233N3209	33	07-01-04
24-22-71	PANEL ASSY, ELECTRICAL SYSTEM, M10063	233N6252	33	07-01-04
24-22-71	PANEL ASSY, ELECTRICAL SYSTEM, M10063	233T3100	33	07-01-04
24-33-71	PANEL ASSY, BATTERY/STANDBY POWER, M10062 -8 -11 -15 -19 -20 -24 THRU -27 -29 THRU -35 -1008 -1011 -1015 -1019 -1020 -1024 THRU -1027 -1029 THRU -1035 -1312 THRU -1319	233N3211	20	07-01-03
24-33-71	PANEL ASSY, BATTERY/STANDBY POWER, M10062 -70 -137 -156 -157 -218 -219 -232 -233	233T3100	20	07-01-03
24-33-72	PANEL ASSY, BATTERY/STANDBY POWER, M10062 -36 THRU -42 -46 -300 THRU -309 -311 THRU -313 -315 THRU -317 -319 -321 -1036 -1037 -1039 THRU -1042 -1046 -1300 THRU -1309 -1311	233N3211	14	07-01-03

NUMERICAL INDEX/MANUALS



BOEING

COMPONENT
MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	R E V	MANUAL ISSUED DATE
24-33-72	PANEL ASSY, BATTERY/STANDBY POWER, M10062	233T3100	14	07-01-03
	-273 -287 -296			
25-00-66	REPAIR OF MISCELLANEOUS INTERIOR AIRPLANE COMPONENTS		10	03-01-03
25-21-51	REVEAL ASSY, PASSENGER WINDOW	411T1210	12	03-01-03
25-22-01	HANDLE ASSY, OUTBD OVHD BIN DOOR	413T1089	1	04-01-91
25-22-51	SHROUD ASSY, PROJECTOR REINFORCEMENT	417T7008	2	07-01-93
25-23-06	PANEL ASSY, PSU OXYGEN/LIGHT	417T3053	7	01-01-94
25-23-07	PANEL ASSY, PASSENGER SERVICE UNIT SPEAKER	417T3057	2	10-01-90
25-23-08	PANEL ASSY, PSU SIGN	417T3056	6	12-01-96
25-23-09	PANEL ASSY, INBOARD PSU OXYGEN/LIGHT	417T3051	7	11-01-04
25-23-10	PANEL ASSY, OUTBOARD PASSENGER SERVICE UNIT OXYGEN/LIGHT	417T3052	13	07-01-05
25-24-01	CLOSET ASSY, OUTBOARD FORWARD LEFT-HAND	413T3060	4	09-01-94
25-24-02	CLOSET ASSY, CLASS DIVIDER	413T3610	4	03-01-04
25-24-05	CLOSET ASSY, FORWARD RIGHT-HAND OUTBOARD	413T3061	5	09-01-94
25-25-03	COMPONENT, ATTENDANT SEAT INSTL.		6	03-01-02
25-25-04	SEAT ASSY, ATTENDANT	414T2025	5	07-01-03
25-25-04	SEAT ASSY, ATTENDANT	414T2030	5	07-01-03
25-25-04	SEAT ASSY, ATTENDANT	414T2050	5	07-01-03
25-25-04	SEAT ASSY, ATTENDANT	414T2100	5	07-01-03
25-28-02	TUBE ASSY, CENTER OVERHEAD STOWAGE BIN UPPER ARM TORQUE	413T1045	6	07-01-01
25-28-03	ROD ASSY, CENTER STOWAGE SUPPORT	412T2052	6	07-01-02
25-28-03	ROD ASSY, CENTER STOWAGE SUPPORT	412T3210	6	07-01-02
25-28-03	ROD ASSY, CENTER STOWAGE SUPPORT	412T3212	6	07-01-02
25-28-09	BIN ASSY, OUTBD OVERHEAD STOWAGE -41 THRU -46 -49 THRU -51 -53 -55 -57 THRU -60 -63 -64 -73 -75 -76 -86 THRU -88 -95 -96 -175 -189 -190 -309 THRU -312 -339 -340 -345 THRU -348 -373 -374	413T1002	3	09-01-96
25-28-10	BIN ASSY, OUTBD OVERHEAD STOWAGE -137 -139 -141 -143 -144 -151 -152 -157 -163 -164 -181 -183 -187 -188 -193	413T1002	2	04-01-91
25-28-13	BIN ASSY, OUTBD OVERHEAD STOWAGE -65 THRU -71 -77 -89 -93 -94 -101 -102 -123 -126 -147 -159 -171 -172 -271 -297 -298	413T1002	5	10-01-91



BOEING
COMPONENT
MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	R E V	MANUAL ISSUED DATE
25-28-14	BIN ASSY, OUTBD OVERHEAD STOWAGE -81 -82 -99 -127 -128 -149 -150 -155 -156 -169 -170 -291 THRU -294 -337 -338	413T1002	4	01-01-91
25-28-15	BIN ASSY, OUTBD OVERHEAD STOWAGE -79 -80 -109 -110 -135 -145 -146 -161 -162 -173 -174 -177 -225 -226 -255 -256 -273 -274 -295 -296 -313 -314	413T1002	7	10-01-91
25-28-16	BIN ASSY, OUTBD OVERHEAD STOWAGE -97 -98 -105 THRU -108 -111 THRU -116 -119 THRU -122 -129 -130 -133 -134 -167 -168	413T1002	3	01-01-91
25-28-33	BIN ASSY, OUTBD OVERHEAD STOWAGE -191 -192 -213 -214 -221 -263 -264 -289 -290 -329 -343 -344	413T1002	1	01-01-91
25-28-34	BIN ASSY, OUTBD OVERHEAD STOWAGE -185 -195 -196 -215 -216 -261 -262 -267 -268 -285 -323 -324 -331 -349 -350 -387	413T1002	1	01-01-91
25-28-42	BIN ASSY, CENTER OVERHEAD STOWAGE	413T1047	7	07-01-05
25-28-51	BIN ASSY, OUTBOARD OVERHEAD STOWAGE -201 THRU -208 -211 -212 -219 -223 -224 -231 THRU -246 -249 -250 -257 THRU -260 -277 THRU -280 -283 -284 -299 -305 -306 -315 THRU -319 -321 -322 -335 -379 -380 -385 -389 -390	413T1002	2	04-01-91
25-29-53	PANEL ASSY, FORWARD ATTENDANTS -42 THRU -49 -51 -52	417T6008	8	03-01-02
25-29-54	PANEL ASSY, AFT ATTENDANTS -49 -52 -53 -55 -58 -62 THRU -66 -68 -71 THRU -73 -75 -78	285T0629	12	03-01-04
25-29-54	PANEL ASSY, AFT ATTENDANTS -34 -35 -37 -39 THRU -43 -46 THRU -56 -74	417T6010	12	03-01-04
25-29-55	PANEL ASSY, AFT ATTENDANTS -12 -14 -67 -69 -70 -74	285T0629	9	07-01-04
25-29-55	PANEL ASSY, AFT ATTENDANTS -57 THRU -68 -70 THRU -73	417T6010	9	07-01-04

NUMERICAL INDEX/MANUALS

767

D634T101

01.1

Page 8
Nov 01/05



BOEING

COMPONENT
MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	R E V	MANUAL ISSUED DATE
25-29-58	PANEL ASSY, FORWARD ATTENDANTS -16 THRU -18 -20 -22 THRU -24 -26 -27 -29 THRU -41	417T6008	5	03-01-02
25-29-58	PANEL ASSY, FORWARD ATTENDANTS	417T6708	5	03-01-02
25-29-59	PANEL ASSY, AFT ATTENDANTS -47 -48 -50 -51 -54 -56 -57 -59 THRU -61 -80 -125	285T0629	5	03-01-04
25-29-59	PANEL ASSY, AFT ATTENDANTS -13 -17 -19 THRU -21 -23 THRU -25 -27 -29 -30 -32	417T6010	5	03-01-04
25-29-62	PANEL ASSY, FORWARD ATTENDANTS	RRB41057	19	07-01-04
25-29-62	PANEL ASSY, FORWARD ATTENDANTS	285T0628	19	07-01-04
25-50-11	NET ASSY, BULK CARGO DIVIDER	452T3211	14	03-01-04
25-50-11	NET ASSY, BULK CARGO COMP. DOOR	452T3212	14	03-01-04
25-50-11	NET ASSY, BULK CARGO COMP. DOOR	452T3213	14	03-01-04
25-50-11	NET ASSY, BULK CARGO COMP. DOOR	452T3214	14	03-01-04
25-50-11	NET ASSY, BULK CARGO DIVIDER	452T3217	14	03-01-04
25-50-11	STRAP ASSY, STOWAGE	452T3303	14	03-01-04
25-50-11	NET ASSY, CARGO DOOR PROTECTOR	452T3502	14	03-01-04
25-50-11	NET ASSY, BULK CARGO BARRIER	452T3505	14	03-01-04
25-50-11	STRAP ASSY, HIGH RESTRAINT	457T7110	14	03-01-04
25-50-11	NET ASSY, PERSONNEL SAFETY	65-33298	14	03-01-04
25-65-51	PACKBOARD ASSY, OFF-WING ESCAPE SYSTEM	416T2005	23	03-01-05
25-65-51	PACKBOARD ASSY, OFF-WING ESCAPE SYSTEM	416T2828	23	03-01-05
25-65-55	DOOR ASSY, OFF-WING ESCAPE SYSTEM SLIDE COMPARTMENT	416T2010	7	06-01-97
25-65-61	INTEGRATOR ASSY, OFF-WING ESCAPE SYSTEM	416T2091	6	10-10-85
25-65-62	INTEGRATOR ASSY, OFF-WING ESCAPE SYSTEM	015T0449	9	07-01-98
25-65-62	INTEGRATOR ASSY, OFF-WING ESCAPE SYSTEM	416T2811	9	07-01-98
25-66-11	PACKBOARD ASSY, ENTRY DOOR, ESCAPE SLIDE/RAFT	416T2003	22	07-01-03
25-66-11	PACKBOARD ASSY, ENTRY DOOR, ESCAPE SLIDE/RAFT	416T4010	22	07-01-03
25-66-12	GIRT BAR ASSY, ESCAPE SLIDE	416T2008	2	03-01-98
25-66-30	BAR ASSY, ENTRY DOOR ESCAPE SLIDE DEPLOYMENT	416T2184	2	11-01-00
25-66-31	RETRACTOR ASSY, DEPLOYMENT CABLE	416T2185	5	07-01-02
25-71-01	CARD FILE ASSY, ELECTRICAL SYSTEM (ESCF)	285T0006		11-01-02
25-71-02	CHASSIS ASSY, WARNING ELECTRONICS UNIT	285T0007		11-01-02
26-11-51	PANEL ASSY, FIRE/OVERHEAT TEST, M10445 -16 -18 -26 -64 -75 -83	233T6100	12	11-01-04
26-11-51	PANEL ASSY, FIRE/OVERHEAT TEST, M10445	233T6204	12	11-01-04

NUMERICAL INDEX/MANUALS

767

D634T101

01.1

Page 9
Nov 01/05



BOEING
COMPONENT
MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL ISSUED DATE
26-15-45	PANEL ASSY, APU SHUTDOWN, P40 -1 THRU -3 -7 THRU -16 -19 -25 -26 -28 -31 -32 -35 -37 -69 -300 -301 -303 -305 -306 -308 THRU -310 -313 THRU -317 -328 -350 THRU -353 -356 -358 THRU -362 -364 THRU -366	284T0719	8	03-01-03
26-15-46	PANEL ASSY, APU SHUTDOWN, P40 -17 -18 -21 -24 -27 -29 -30 -33 -34 -302 -304 -307 -311 -312 -354 -355 -357 -363	284T0719	4	03-01-03
26-15-51	PANEL ASSY, APU & CARGO FIRE CONTROL, M10444 -7 -9 -12 -13 -21 -23 -24 -32 -35 -36 -45 THRU -48 -53 -56 -67 -70 -73 -75 -77 -79 -82 -85 -86 -103 THRU -105 -109 THRU -111 -161 THRU -165 -169 THRU -172 -187 THRU -198 -200 -202 -203 -206 -219 THRU -221 -226 -301 THRU -305 -355 -356 -360 -1007 -1009 -1012 -1013 -1021 -1023 -1024 -1032 -1035 -1036 -1045 THRU -1048 -1053 -1056 -1067 -1070 -1073 -1075 -1077 -1079 -1082 -1085 -1086 -1103 THRU -1105 -1109 THRU -1111 -1161 THRU -1165 -1169 THRU -1172 -1187 THRU -1198 -1200 -1202 -1203 -1206 -1219 THRU -1221 -1226 -1301 THRU -1305 -1347 THRU -1354 -1356 -1358 -1359 -1381 THRU -1386 -1389 -1398 -1400 THRU -1407 -1409 -1411 THRU -1419	233N6203	29	03-01-04
26-15-51	PANEL ASSY, APU & CARGO FIRE CONTROL, M10444 -9 -15 -19 -21 -27 -36 -39 -42 -43 -47 -49 THRU -51 -53 -56 -59 -60	233T6100	29	03-01-04
26-15-53	PANEL ASSY, APU & CARGO FIRE CONTROL M10444 -78 -80 -81 -83 -84 -123 -126 -132 -135 -182 THRU -185 -199 -201 -222 -345 -1081 -1084 -1123 -1126 -1132 -1135 -1182 THRU -1185 -1199 -1201 -1222 -1345 -1355 -1357 -1366	233N6203	14	11-01-04

NUMERICAL INDEX/MANUALS

767

D634T101

01.1

Page 10
Nov 01/05


BOEING
 COMPONENT
 MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	R E V	MANUAL ISSUED DATE
	-1367 -1370 -1371 -1394 THRU -1397 -1408 -1410			
26-15-53	PANEL ASSY, APU & CARGO FIRE CONTROL M10444	233T6100	14	11-01-04
26-15-55	-55 -58 -68 -69 -85 -91 -102 PANEL ASSY, APU & CARGO FIRE CONTROL, M10444	233N6203	16	11-01-04
	-112 -114 -117 -120 -129 -138 -143 -144 -146 -157 -166 -173 THRU -175 -177 THRU -181 -186 -306 -339 THRU -344 -352 -353 -357 -358 -1112 -1114 -1117 -1120 -1129 -1138 -1143 -1144 -1146 -1157 -1166 -1173 THRU -1175 -1177 THRU -1181 -1186 -1306 -1339 THRU -1344 -1360 THRU -1365 -1368 -1369 -1372 THRU -1380 -1387 -1388 -1390 THRU -1393 -1399			
26-15-55	PANEL ASSY, APU & CARGO FIRE CONTROL, M10444	233T6100	16	11-01-04
	-65 THRU -67 -70 -73 -74 -76 THRU -78 -81 -84 -86 THRU -90 -92 -95 -96 -98 THRU -101			
26-21-11	MODULE ASSY, ENGINE FIRE CONTROL	233T6210		03-01-00
26-22-11	MODULE ASSY, APU & CARGO FIRE CONTROL, M10444	233T6211	5	11-01-04
26-23-01	REGULATOR ASSY, FIRE EXTINGUISHER METERING SYSTEM	218N2007	2	04-01-93
26-23-01	REGULATOR ASSY, FIRE EXTINGUISHER METERING SYSTEM	453T2652	2	04-01-93
27-00-11	ROD ASSY, CONTROL	251T0100	19	07-01-03
27-00-12	ROD ASSY, CONTROL	250N2004	19	07-01-03
27-00-13	ROD ASSY, CONTROL	65B81011	2	03-01-00
27-09-11	WHEEL/COLUMN ASSY, AILERON AND ELEVATOR CONTROL	253T2111	13	11-01-05
27-11-01	LINK ASSY	252T1100	8	09-01-95
27-11-01	BRACKET ASSY	252T1154	8	09-01-95
27-11-02	FITTING ASSY	252T1200	7	10-01-89
27-11-02	LINKAGE ASSY	252T1211	7	10-01-89
27-11-05	ROD ASSY, AILERON CONTROL QUADRANT	251T1644	2	10-10-86
27-11-05	ROD ASSY, AILERON CONTROL QUADRANT	251T1646	2	10-10-86



BOEING
COMPONENT
MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL ISSUED DATE
27-11-07	DRUM ASSY, AILERON CONTROL FORCE TRANSDUCER -6 -9	015T0253	8	03-01-00
27-11-07	DRUM ASSY, AILERON CONTROL FORCE TRANSDUCER	253T1141	8	03-01-00
27-11-08	DRUM ASSY, AILERON CONTROL LOAD LIMITER -7 -8	015T0253	15	03-01-04
27-11-08	DRUM ASSY, AILERON CONTROL LOAD LIMITER	253T1142	15	03-01-04
27-11-09	QUADRANT ASSY, AILERON CONTROL OUTPUT	251T1510	5	03-01-04
27-11-10	LINK ASSY	251T1289	2	07-01-99
27-11-10	ROD ASSY	251T1509	2	07-01-99
27-11-10	FITTING ASSY	251T1512	2	07-01-99
27-11-11	MECHANISM ASSY, OUTBD AILERON LOCKOUT	251T1710	9	12-01-97
27-11-12	QUADRANT ASSY, AILERON CONTROL RIGHT WHEEL WELL	251T1300	3	06-01-95
27-11-14	SUPPORT ASSY, LEFT SIDE OUTPUT QUADRANT	251T1413	3	06-01-95
27-11-16	TORQUE TUBE AND BRACKET ASSY, LEFT HAND LCCA INPUT CRANK	251T1305	13	07-01-04
27-11-20	SHAFT ASSY, AILERON CONTROL RIGHT SIDE TORQUE	251T1597	6	07-01-99
27-11-22	QUADRANT ASSY, LCCA OUTPUT	251T1506	10	07-01-99
27-11-23	MECHANISM ASSY, AILERON CONTROL FEEL	251T1205	11	03-01-05
27-11-26	OVERRRIDE ASSY, AILERON CONTROL	251T1505	10	03-01-05
27-11-28	QUADRANT ASSY, INBD AILERON CONTROL AND DROOP MECHANISM	251T1602	5	11-01-99
27-11-29	QUADRANT ASSY, OUTBD AILERON CONTROL AND DROOP MECHANISM	251T1603	5	11-01-99
27-18-12	TRANSMITTER ASSY, AILERON SURFACE POSITION	251T1010	6	03-01-05
27-18-12	TRANSMITTER ASSY, AILERON SURFACE POSITION	251T1011	6	03-01-05
27-21-11	CHANGER ASSY, RUDDER CONTROL RATIO	251T3600	10	12-01-96
27-21-20	LIMITER ASSY, RUDDER CONTROL RATIO CHANGER	251T3624		10-01-87
27-21-23	FORCE LIMITER ASSY - RUDDER CONTROLS	251N3220		03-01-00
27-21-40	CENTERING ASSY, RUDDER CONT FEEL	251T3120	6	03-01-00
27-21-40	CENTERING ASSY, RUDDER CONT FEEL	251T3200	6	03-01-00
27-21-43	TUBE ASSY, RUDDER CONTROL FEEL AND TRIM OFFSET TORQUE	015T0070	4	03-01-00
27-21-43	TUBE ASSY, RUDDER CONTROL FEEL AND TRIM OFFSET TORQUE	251T3210	4	03-01-00
27-21-45	PEDAL/CRANK ASSY, RUDDER CONTROL	253T3100	11	03-01-00
27-21-46	JACKSHAFT ASSY, RUDDER CONTROL	253T3211	1	09-01-95

NUMERICAL INDEX/MANUALS

767

D634T101

01.1

Page 12

Nov 01/05


BOEING
 COMPONENT
 MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	R E V	MANUAL ISSUED DATE
27-21-48	CRANK ASSY, RUDDER ACTUATOR INPUT	252T3114	4	07-01-03
27-21-49	BELLCRANK ASSY, RUDDER ACTUATOR CENTER	252T3116	3	09-01-96
27-21-52	SUMMING ASSY AND SERVO SUMMING ASSY, RUDDER CONTROL YAW DAMPER	251T3700	9	07-01-04
27-21-55	POGO ASSY, RUDDER CONTROL YAW DAMPER BIAS	251T3745	3	04-10-84
27-21-59	ARM ASSY	251T3216	11	12-01-95
27-21-59	ARM ASSY	251T3220	11	12-01-95
27-21-59	ARM ASSY	251T3238	11	12-01-95
27-21-60	SUPPORT ASSY	253T3119	3	10-01-90
27-21-60	SUPPORT ASSY	253T3616	3	10-01-90
27-21-60	HOUSING ASSY	69B81070	3	10-01-90
27-21-60	HOUSING ASSY	69B81071	3	10-01-90
27-21-60	STUD	69B81074	3	10-01-90
27-21-62	COMPONENTS, YAW DAMPER INSTALLATION	251T3754	4	11-01-03
27-21-62	COMPONENTS, YAW DAMPER INSTALLATION	251T3758	4	11-01-03
27-21-70	LINK ASSY, RUDDER ACTUATOR	252T3100	2	11-01-99
27-28-01	TRANSMITTER ASSY, RUDDER CONTROL POSITION	251T3010	4	07-01-92
27-31-09	UNIT ASSY, ELEVATOR CONTROL FEEL AND CENTERING	251T2210	14	03-01-04
27-31-15	CYLINDER ASSY, FEEL ACTUATOR	65-44503	19	11-01-00
27-31-25	QUADRANT ASSY	251T2430		10-10-84
27-31-25	QUADRANT ASSY	251T2431		10-10-84
27-31-25	CRANK ASSY	251T2651		10-10-84
27-31-25	CRANK ASSY	251T2652		10-10-84
27-31-25	CRANK ASSY	251T2663		10-10-84
27-31-25	CRANK ASSY	253T2211		10-10-84
27-31-25	HOUSING ASSY	253T2214		10-10-84
27-31-25	HOUSING ASSY	69B81723		10-10-84
27-31-37	TUBE ASSY, ELEVATOR CONTROL TORQUE	253T2127	12	03-01-00
27-31-52	LINKAGE ASSY, HORIZONTAL STABILIZER CENTER ELEVATOR CONTROLS	251T2600	4	01-01-89
27-31-55	LOST-MOTION ASSY, ELEVATOR SLAVE LINKAGE	251T2400	8	07-01-01
27-31-61	NEUTRAL SHIFT AND OVERRIDE ASSY, ELEVATOR	251T2220	9	03-01-00
27-31-64	ROD ASSY, ELEVATOR ACTUATOR INPUT	252T2110	7	03-01-05
27-31-65	LINK ASSY, ELEVATOR ACTUATOR	252T2100	6	01-01-91
27-31-66	BELLCRANK ASSY, ELEVATOR ACTUATOR	252T2118	5	03-01-01
27-31-71	QUADRANT ASSY, ELEVATOR CONTROLS LEFT AND RIGHT AFT	251T2310	9	04-10-87
27-38-11	TRANSMITTER ASSY, ELEVATOR CONTROLS POSITION	251T2010	5	07-01-92

NUMERICAL INDEX/MANUALS

767

D634T101

01.1

 Page 13
 Nov 01/05



BOEING
COMPONENT
MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	R E V	MANUAL ISSUED DATE
27-41-01	ACTUATOR ASSY, STABILIZER TRIM	251T4310	20	03-01-05
27-41-22	QUADRANT/CRANK ASSY, STABILIZER TRIM	251T4201		10-01-87
27-41-31	LEVER ASSY, CONTROL STAND STABILIZER TRIM	253T5425	4	01-10-86
27-41-35	DRIVE ASSY, STABILIZER TRIM SWITCH AND TRANSMITTER MODULE	251T4431	4	07-01-91
27-41-45	SWITCH ASSY, STABILIZER CUTOFF	253T2144	10	03-01-04
27-51-03	SHAFT ASSY, TE FLAP DRIVE	256T3700	5	03-01-00
27-51-08	ACTUATOR ASSY, TRAILING EDGE FLAP DRIVE 10.5 DIAMETER ROTARY	256T3210	12	07-01-05
27-51-08	ACTUATOR ASSY, TRAILING EDGE FLAP DRIVE 10.5 DIAMETER ROTARY	256T3220	12	07-01-05
27-51-08	ACTUATOR ASSY, TRAILING EDGE FLAP DRIVE 10.5 DIAMETER ROTARY	256T3222	12	07-01-05
27-51-10	ACTUATOR ASSY, TE FLAP DRIVE ROTARY (9.5 DIA)	256T3250	15	03-01-05
27-51-10	ACTUATOR ASSY, TE FLAP DRIVE ROTARY (9.5 DIA)	256T3259	15	03-01-05
27-51-10	ACTUATOR ASSY, TE FLAP DRIVE ROTARY (9.5 DIA)	256T3264	15	03-01-05
27-51-14	UNIT ASSY, TE FLAP DRIVE POWER DRIVE	015T0850	19	07-01-02
27-51-14	UNIT ASSY, TE FLAP DRIVE POWER DRIVE	256T3110	19	07-01-02
27-51-16	UNIT ASSY, TRAILING EDGE FLAP DRIVE POWER CONTROL	250T1008	6	11-01-05
27-51-16	UNIT ASSY, TRAILING EDGE FLAP DRIVE POWER CONTROL	256T3160	6	11-01-05
27-51-20	CARRIAGE ASSY, OB TE FLAP DETECTION CONTROL & CARRIAGE ASSY INBD AUXILIARY	113T1358	5	11-01-03
27-51-20	CARRIAGE ASSY, OB TE FLAP DETECTION CONTROL & CARRIAGE ASSY INBD AUXILIARY	113T1385	5	11-01-03
27-51-22	GEARBOX ASSY, TE FLAP DRIVE OFFSET TEE	256T3540	4	03-01-00
27-51-25	GEARBOX ASSY, TE FLAP DRIVE TEE	256T3310	9	03-01-00
27-51-26	GEARBOX ASSY, CONTROL STAND FLAP POSITION SENSOR	253T5723	6	07-01-04
27-51-34	GEARBOX ASSY, TE FLAP DRIVE ANGLE	256T3340	1	03-01-00
27-51-35	GEARBOX ASSY, TE FLAP DRIVE ANGLE	256T3410	8	01-01-88
27-51-36	DOOR INSTALLATION COMPONENTS, SIDE OF BODY	113T1293	5	07-01-05
27-51-36	DOOR INSTALLATION COMPONENTS, SIDE OF BODY	113T2029	5	07-01-05
27-51-36	DOOR INSTALLATION COMPONENTS, SIDE OF BODY	113T2030	5	07-01-05
27-51-37	MECHANISM ASSY, ANGLE GEARBOX AND AILERON DROOP INPUT CONTROL	256T3430	16	07-01-03

NUMERICAL INDEX/MANUALS

767

D634T101

01.1

Page 14

Nov 01/05



BOEING

COMPONENT
MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	R E V	MANUAL ISSUED DATE
27-51-39	TE FLAP DRIVE ANGEL GEARBOX AND AILERON DROOP INPUT CONTROL	256T6640	2	07-01-03
27-51-40	GEARBOX ASSY, TE FLAP DRIVE ACTUATOR INPUT ANGLE	256T3510	1	03-01-00
27-51-44	GEARBOX ASSY, TE FLAP DRIVE OFFSET TEE	256T3570	8	01-01-94
27-51-48	TE FLAP ACTUATION 10.6 DIA ROTARY ACTUATOR ASSY	256T6310	4	03-01-04
27-51-49	TE FLAP ACTUATION 9.5 DIA ROTARY ACTUATOR ASSY	256T6110	4	03-01-04
27-51-50	GEARBOX ASSY, TE FLAP DRIVE POWER UNIT	256T3130	5	11-01-99
27-51-80	LEVER ASSY, CONTROL STAND FLAP CONTROL	253T5710	5	03-01-04
27-51-83	SUPPORT ASSY, TE FLAP DRIVE BEARING	256T3600		10-01-87
27-51-84	ARM ASSY	113T1211	5	03-01-00
27-51-84	SHAFT ASSY	113T1216	5	03-01-00
27-51-84	LINK ASSY	113T1218	5	03-01-00
27-51-84	FITTING ASSY	113T1219	5	03-01-00
27-51-84	LINK SUPPORT	113T1232	5	03-01-00
27-51-84	CRANK ASSY	113T1248	5	03-01-00
27-51-86	LINKAGE ASSY, INBOARD T.E. FLAP -67 -68 -73 THRU -76 -85 -86 -99 -100 -131 THRU -134 -137 -138 -151 THRU -156 -195 -196 -203 THRU -206 -239 THRU -242 -295 THRU -298	113T2000	11	11-01-05
27-51-88	LINKAGE ASSY, INBOARD T.E. FLAP -3 -4	113T2000	3	11-01-05
27-51-89	DOOR ASSY, INBD TE FLAP FAIRING	113T1750	3	07-01-98
27-51-96	LINK ASSY	113T1015	9	07-01-04
27-51-96	LINK ASSY	113T1114	9	07-01-04
27-51-96	FITTING ASSY	113T1337	9	07-01-04
27-51-96	ARM ASSY	113T1339	9	07-01-04
27-51-96	LINK ASSY	113T1352	9	07-01-04
27-51-96	ARM ASSY	113T1359	9	07-01-04
27-51-96	LINK ASSY	113T1363	9	07-01-04
27-51-96	LINK ASSY	113T1364	9	07-01-04
27-51-96	LINK ASSY	113T1382	9	07-01-04
27-51-97	LINKAGE ASSY, OUTBOARD T.E. FLAP	113T3000	18	11-01-05
27-51-98	TRACK/BEAM ASSY, INBOARD T.E. FLAP -61 -71 -89 -90 -103	113T2000	7	04-01-92
27-52-86	LINKAGE ASSY, INBOARD T.E. FLAP	113T1202		03-01-00
27-52-97	LINKAGE ASSY, OUTBD TE FLAP	113T1330	1	03-01-04
27-58-11	GEARBOX/HOUSING ASSY, TE FLAP DRIVE POSITION TRANSMITTER	256T3760	11	07-01-00
27-58-11	GEARBOX/HOUSING ASSY, TE FLAP DRIVE	256T3767	11	07-01-00

NUMERICAL INDEX/MANUALS

767

D634T101

01.1

Page 15
Nov 01/05



BOEING
COMPONENT
MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	R E V	MANUAL ISSUED DATE
	POSITION TRANSMITTER			
27-61-01	ACTUATOR ASSY, INBOARD SPOILER POWER CONTROL	252T1301	18	11-01-05
27-61-51	ACTUATOR ASSY, OUTBOARD SPOILER POWER CONTROL	252T1401	19	11-01-03
27-62-23	MECHANISM ASSY, CONTROL STAND SPEED BRAKE	253T1200	1	03-01-00
27-62-24	MECHANISM ASSY, CONTROL STAND SPEED BRAKE	254T5100	2	03-01-02
27-62-32	LEVER ASSY, SPEED BRAKE	253T5623	1	03-01-99
27-62-41	SHAFT ASSY	253T5611	6	03-01-99
27-62-41	HOUSING ASSY	253T5616	6	03-01-99
27-62-41	ROD ASSY	254N1016	6	03-01-99
27-62-41	HOUSING ASSY	69B82756	6	03-01-99
27-62-41	ROD ASSY	69B82839	6	03-01-99
27-62-46	LEVER ASSY, CONTROL STAND SPEEDBRAKE	254W5001	1	11-01-00
27-81-01	ACTUATOR ASSY, INBOARD LE SLAT DRIVE ROTARY	256T2110	14	03-01-02
27-81-03	DRIVESHFT ASSY, LE SLAT DRIVE	256T2800	11	06-01-96
27-81-05	UNIT ASSY, INBOARD LE SLAT DRIVE CONTROL	256T2660	12	07-01-03
27-81-12	GEARBOX ASSY, INBOARD LE SLAT DRIVE OFFSET	256T2210	15	03-01-04
27-81-12	GEARBOX ASSY, INBOARD LE SLAT DRIVE OFFSET	654T0387	15	03-01-04
	-10 -13 THRU -18			
27-81-15	GEARBOX ASSY, INBOARD LE SLAT DRIVE ANGLE	256T2330	5	07-01-03
27-81-21	GEARBOX ASSY-INBOARD LE SLAT DRIVE POWER DRIVE UNIT	256T2611	11	03-01-04
27-81-25	GEARBOX ASSY, INBOARD/OUTBOARD LE SLAT DRIVE ANGLE	256T2310	6	10-10-85
27-81-26	DRIVESHAFT ASSY, LEADING EDGE SLAT DRIVE	256T5710		07-01-99
27-81-28	TRACK ASSY, LE SLAT AUXILIARY	114T0101	9	03-01-05
27-81-28	TRACK ASSY, LE SLAT AUXILIARY	114T0233	9	03-01-05
27-81-28	TRACK ASSY, LE SLAT	114T3302	9	03-01-05
27-81-28	TRACK ASSY, LE SLAT	114T4180	9	03-01-05
27-81-29	LINK ASSY, LE SLAT TRACK	114T0231	4	11-01-02
27-81-29	LINK ASSY, LE SLAT TRACK	114T3300	4	11-01-02
27-81-29	LINK ASSY, LE SLAT TRACK	114T3301	4	11-01-02
27-81-31	GEARBOX ASSY, OUTBOARD LE SLAT DRIVE ANGLE	256T2320	6	10-10-85
27-81-35	QUADRANT ASSY	256T1111	14	07-01-99
27-81-35	SHAFT ASSY	256T1116	14	07-01-99

NUMERICAL INDEX/MANUALS

767

D634T101

01.1

Page 16

Nov 01/05



BOEING
COMPONENT
MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	R E V	MANUAL ISSUED DATE
27-81-35	SUPPORT ASSY	256T1128	14	07-01-99
27-81-35	BRACKET	256T2601	14	07-01-99
27-81-35	SHAFT ASSY	256T2857	14	07-01-99
27-81-36	STRUT ASSY, RIB BRACE	114T0135	2	10-10-85
27-81-36	STRUT ASSY, RIB BRACE	114T0136	2	10-10-85
27-81-36	STRUT ASSY, RIB BRACE	114T0137	2	10-10-85
27-81-36	STRUT ASSY, RIB BRACE	114T0138	2	10-10-85
27-81-37	FITTING ASSY, AUXILIARY TRACK	114T0111	1	01-01-89
27-81-37	FITTING ASSY, AUXILIARY TRACK	114T0112	1	01-01-89
27-81-41	UNIT ASSY, INBOARD LE SLAT DRIVE POWER DRIVE	256T2610	18	07-01-03
27-81-41	UNIT ASSY, INBOARD LE SLAT DRIVE POWER DRIVE	256T5610	18	07-01-03
27-81-44	GEARBOX ASSY, INBOARD LE SLAT DRIVE NO-BACK/OFFSET	256T5210	3	03-01-05
27-81-51	ACTUATOR ASSY, OUTBOARD LE ROTARY	256T2120	20	07-01-05
27-81-54	ACTUATOR ASSY, OUTBOARD LE SLAT DRIVE ROTARY	256T5120	5	03-01-02
27-81-55	UNIT ASSY, OUTBOARD LE SLAT DRIVE CONTROL	256T2760	14	07-01-00
27-81-61	GEARBOX ASSY, OUTBOARD LE SLAT DRIVE OFFSET	256T2220	23	11-01-04
27-81-61	GEARBOX ASSY, OUTBOARD LE SLAT DRIVE OFFSET -20 -23 THRU -28	654T0387	23	11-01-04
27-81-62	GEARBOX ASSY, OUTBD LE SLAT DRIVE NO-BACK/OFFSET	256T5220	2	03-01-05
27-81-62	GEARBOX ASSY, OUTBD LE SLAT DRIVE NO-BACK/OFFSET	256T5240	2	03-01-05
27-81-72	GEARBOX ASSY, OUTBOARD LE SLAT DRIVE POWER DRIVE UNIT	256T2711	3	07-01-01
27-81-73	GEARBOX ASSY, OUTBOARD LE SLAT DRIVE POWER DRIVE UNIT	256T5510	2	07-01-01
27-81-82	UNIT ASSY, OUTBOARD LE SLAT DRIVE POWER DRIVE	256T2710	7	11-01-00
27-81-83	UNIT ASSY, OUTBD LE SLAT DRIVE POWER DRIVE	256T5505	3	11-01-00
27-81-91	SEAL ASSY, FIXED LE AT NACELLE KRUEGER	114T6301	10	07-01-99
27-81-96	MECHANISM ASSY, FIXED LE AT NACELLE KRUEGER SEAL DRIVE	114T6400	2	11-01-99
27-81-96	MECHANISM ASSY, FIXED LE AT NACELLE KRUEGER SEAL DRIVE	114T6450	2	11-01-99
28-00-10	TUBES, REPAIR OF ALUMINUM FUEL		4	11-01-04
28-22-52	PANEL ASSY, FUEL MANAGEMENT, M10055	233T3100	17	07-01-03



BOEING
COMPONENT
MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL ISSUED DATE
	-87 -148 -189 -251 -277 -293			
28-22-52	PANEL ASSY, FUEL MANAGEMENT, M10055	233T3235	17	07-01-03
28-41-01	PANEL ASSY, FUEL HEAT, M1094	233T3231		10-01-90
28-43-01	MODULE ASSY, FUEL TEMPERATURE SENSOR/ GPWS RA SELECT, M6775	233U4212	3	03-01-03
28-43-01	MODULE ASSY, FUEL TEMPERATURE SENSOR/ GPWS RA SELECT, M6775	823T0003	3	03-01-03
29-11-12	RESERVOIR ASSY, LEFT AND RIGHT SYSTEM HYDRAULIC	271T5212	4	03-01-97
29-11-20	RESERVOIR ASSY, CENTER HYDRAULIC SYSTEM	271T4521	1	11-01-03
29-11-23	RESERVOIR ASSY, CENTER SYSTEM HYDRAULIC	271T0115	3	11-01-03
29-11-26	MODULAR ASSY, CENTRAL GROUND SERVICE RESERVOIR PRESSURIZATION	271T4904	3	11-01-99
29-11-35	MODULE ASSY, RETURN FILTER	271T0001	4	06-01-95
29-11-41	MODULE ASSY, AC MOTOR PUMP PRESSURE AND CASE DRAIN FILTER	271T0042	15	07-01-04
29-11-46	MODULE ASSY, EDP AND ADP PRESSURE AND CASE DRAIN FILTER	271T0068	16	03-01-02
29-11-48	VALVE ASSY, HYDRAULIC PRESSURE RELIEF	270T2400		11-01-99
29-11-52	PANEL ASSY, ALTERNATE THRUST REVERSER HYDRAULICS	233T3240	5	01-01-88
29-11-56	PANEL ASSY, ALTERNATE THRUST REVERSER HYDRAULIC TEST, M1218	233T4249	1	04-01-89
29-21-05	TURBINE ASSY, RAM AIR	258T7100	2	03-01-00
29-21-11	DOOR ASSY, RAM AIR TURBINE ACCESS	149T7771	3	04-10-87
30-11-52	PANEL ASSY, WING AND ENGINE ANTI-ICE CONTROL, M10397	233T3100	17	07-01-03
	-65 -91 -135 -136 -160			
	-178 THRU -180 -248 THRU -250 -292			
30-11-52	PANEL ASSY, WING AND ENGINE ANTI-ICE CONTROL, M10397	233T3241	17	07-01-03
	-1 -5 -8 -10 THRU -15 -17 -20			
	-41 THRU -50 -1001 -1005 -1008			
	-1010 THRU -1015 -1017 -1020			
	-1041 THRU -1050 -1306 THRU -1317			
	-1323 THRU -1334			
30-11-53	PANEL ASSY, WING AND ENGINE ANTI-ICE CONTROL, M10397	233T3100	14	07-01-03
	-353 -359 -381 THRU -386 -393			
30-11-53	PANEL ASSY, WING AND ENGINE ANTI-ICE CONTROL, M10397	233T3241	14	07-01-03
	-22 -25 -28 -39 -53 -54 -56 -58			
	-60 -62 THRU -64 -67 THRU -70			
	-300 THRU -308 -1039 -1053 -1054			

NUMERICAL INDEX/MANUALS

767

D634T101

01.1

Page 18

Nov 01/05



BOEING
COMPONENT
MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	R E V	MANUAL ISSUED DATE
	-1056 -1058 -1060 -1062 -1063 -1067 THRU -1070 -1300 -1302 THRU -1305 -1318 THRU -1322 -1335 THRU -1337			
30-43-01	RESERVOIR ASSY, RAIN REPELLENT SYSTEM VISUAL	69-34511	1	01-10-84
31-11-61	PANEL ASSY, TWO CREW CONTROL, P1-3	233T2222	7	07-01-05
31-35-03	PANEL ASSY, AIDS, M1201	233T6206		03-01-01
31-41-53	PANEL ASSY, EICAS CONTROL, M10411	233T4241	2	04-10-85
32-00-02	TOP COAT APPLICATION, LANDING GEAR ATTACHING PARTS		7	06-01-94
32-00-03	LUBRICATION FITTING REPLACEMENT, LANDING GEAR PARTS		11	07-01-04
32-00-05	REPAIR OF HIGH STRENGTH STEEL, LANDING GEAR PARTS		4	07-01-05
32-10-51	WIRE HARNESS ASSY, MAIN LANDING GEAR -23 THRU -26 -29 THRU -40 -45 THRU -50 -79 -80 -82 -83 -113 THRU -126 -301 THRU -304 -309 THRU -318 -321 THRU -338 -343 THRU -360 -363 THRU -372 -378 THRU -380 -382	287T6104	21	11-01-05
32-10-52	WIRE HARNESS ASSY, MAIN LANDING GEAR -55 THRU -60 -73 THRU -78 -81 -84 THRU -88 -305 THRU -308 -319 -320 -339 THRU -342 -361 -362 -373 THRU -377 -381	287T6104	13	11-01-05
32-10-53	WIRING HARNESS ASSY, MAIN LANDING GEAR -4001 THRU -4022 -4025 THRU -4036	287T6104	2	03-01-03
32-11-19	BUILDUP ASSY, MAIN LANDING GEAR -7 -8 -17 THRU -20 -23 THRU -32 -39 THRU -50 -91 THRU -98 -101 THRU -110 -113 THRU -126 -133 THRU -138 -143 THRU -148 -167 THRU -176 -181 THRU -184 -187 -188 -193 THRU -196 -235 -236 -239 -241 THRU -244 -289 -290 -329 THRU -332 -343 -344 -346 -377 -378 -609 THRU -612 -615 THRU -618 -641 -642 -645 -646 -651 -652 -673 -674 -679 -680	161T1000	49	11-01-05



BOEING
COMPONENT
MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	R E V	MANUAL ISSUED DATE
32-11-20	BUILDUP ASSY, MAIN GEAR -153 THRU -158 -163 THRU -166 -177 -178 -185 -186 -189 -190 -207 THRU -220 -237 -247 -249 -250 -253 THRU -256 -291 THRU -294 -303 -304 -327 -328 -333 THRU -338 -341 -342 -347 -348 -381 -382 -385 -386 -391 -392 -397 THRU -400 -601 -602 -605 -606 -613 -614 -621 THRU -626 -629 THRU -634 -643 -644 -653 THRU -656 -659 THRU -666 -671 -672 -683 THRU -712 -715 -716 -719 THRU -724 -727 THRU -748 -757 -758 -761 -762 -765 THRU -768 -781 THRU -786 -789 -790 -803 -804 -823 -825 THRU -828 -831 -832 -835 THRU -846 -849 THRU -854 -857 THRU -860	161T1000	53	11-01-05
32-11-27	INSTALLATION COMPONENTS, MLG BRAKE, WHEEL, TIRE, IN-AXLE, HUB CAP	165T0001	2	11-01-02
32-11-27	INSTALLATION COMPONENTS, MLG BRAKE, WHEEL, TIRE, IN-AXLE, HUB CAP	165T0002	2	11-01-02
32-11-27	INSTALLATION COMPONENTS, MLG BRAKE, WHEEL, TIRE, IN-AXLE, HUB CAP	165T0003	2	11-01-02
32-11-27	INSTALLATION COMPONENTS, MLG BRAKE, WHEEL, TIRE, IN-AXLE, HUB CAP	165T0004	2	11-01-02
32-11-28	WIRE PROVISION INSTALLATION, MAIN LANDING GEAR	287T6101	2	07-01-03
32-11-30	COMPONENT ASSY, MAIN LANDING GEAR	161T1011	45	11-01-05
32-11-30	COMPONENT ASSY, MAIN LANDING GEAR -13 THRU -16 -25 THRU -30 -35 -36 -39 -40 -43 THRU -46 -49 THRU -54 -57 THRU -62 -65 -66 -69 -70 -73 THRU -76 -79 THRU -82 -85 -86 -91 THRU -94 -97 -98 -101 -102 -105 -106 -109 THRU -113 -117 -118 -121 THRU -126 -139 THRU -144 -147 -148 -154 -157 THRU -160 -163 -164 -177 THRU -180 -183 -184 -193 -194 -207 -208 -223 -224 -227 THRU -230 -233 THRU -238 -243 -244 -251 -252 -265 THRU -270 -283 THRU -290 -293 THRU -296 -299 THRU -306 -317 -318 -331 -332 -341 -342	161T1100	45	11-01-05

NUMERICAL INDEX/MANUALS



BOEING
COMPONENT
MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL ISSUED DATE
	-347 THRU -356 -359 -360			
	-363 THRU -372 -381 -382 -387 -388			
	-391 THRU -394 -401 -402 -409 -410			
	-413 THRU -416 -436 THRU -438			
	-441 THRU -444 -458 -463 -464			
	-469 THRU -478 -483 THRU -492			
	-495 THRU -498			
32-11-33	STRUT ASSY, MAIN LANDING GEAR SHOCK -3 -4 -7 -8 -11 -12	161T7100	1	11-01-01
32-11-36	BUILDUP ASSY, MAIN LANDING GEAR -1 -2 -5 -6	161T7100	3	07-01-03
32-11-40	STRUT ASSY, MAIN LANDING GEAR SHOCK -7 THRU -10	015T0819	54	11-01-05
32-11-40	STRUT ASSY, MAIN LANDING GEAR SHOCK	015T1504	54	11-01-05
32-11-40	STRUT ASSY, MAIN LANDING GEAR SHOCK -17 THRU -20 -37 -38 -41 -42 -47 -48 -55 -56 -63 -64 -67 -68 -71 -72 -77 -78 -87 THRU -90 -95 -96 -107 -108 -115 -119 -120 -127 -128 -145 -146 -151 -152 -156 -161 -162 -167 THRU -170 -225 -226 -257 THRU -260 -277 THRU -282 -321 THRU -324 -339 -340 -343 THRU -346 -357 -358 -361 -362 -377 -378 -395 -396 -403 -404 -445 THRU -448 -450 -461 -462 -465 THRU -468 -479 THRU -482	161T1100	54	11-01-05
32-11-50	COMPONENT ASSY, MAIN LANDING GEAR BOGIE -13	015T0819	34	11-01-04
32-11-50	COMPONENT ASSY, MAIN LANDING GEAR BOGIE	161T1130	34	11-01-04
32-11-57	BRACKET INSTALLATION, MAIN LANDING GEAR	272T6145	1	03-01-01
32-11-58	HYDRAULIC INSTALLATION, MAIN LANDING GEAR	272T6100	1	11-01-00
32-11-60	STRUT ASSY, MAIN LANDING GEAR DRAG	161T6000	35	03-01-05
32-11-63	STRUT ASSY, MAIN LANDING GEAR DRAG	161T6100	1	03-01-00
32-11-70	STRUT ASSY, MAIN LANDING GEAR SIDE	161T2000	37	11-01-05
32-11-73	STRUT ASSY, MAIN LANDING GEAR SIDE	161T2100	2	03-01-02
32-11-81	NUT	112T1709	32	07-01-05
32-11-81	LINK ASSY/SLEEVE	161T1039	32	07-01-05
32-11-81	AFT TRUNNION OUTER RACE ASSY	161T1190	32	07-01-05
32-11-81	AFT TRUNNION BEARING LOCK PLATE	161T1191	32	07-01-05
32-11-81	AFT TRUNNION BEARING RETAINER NUT	161T1192	32	07-01-05
32-11-81	AFT TRUNNION INNER RACE	161T1193	32	07-01-05
32-11-81	AFT TRUNNION BEARING COLLAR ASSY	161T1194	32	07-01-05



BOEING
COMPONENT
MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	R E V	MANUAL ISSUED DATE
32-11-81	AFT TRUNNION BEARING SPLINED RING ASSY	161T1195	32	07-01-05
32-11-81	AFT TRUNNION BEARING CLAMP NUT	161T1196	32	07-01-05
32-11-81	AFT TRUNNION BEARING SPLINED WASHER ASSY	161T1197	32	07-01-05
32-11-81	AFT TRUNNION BEARING LOCK TAB	161T1198	32	07-01-05
32-11-81	RACE	161T1300	32	07-01-05
32-11-81	LOCK ACTUATOR BOLT ASSY	161T1309	32	07-01-05
32-11-81	SIDE STRUT TO SPINDLE ECCENTRIC LOCK ASSY	161T2031	32	07-01-05
32-11-81	SIDE STRUT/DOWNLOCK ACTUATOR PIN ASSY	161T2045	32	07-01-05
32-11-81	SPINDLE	161T2106	32	07-01-05
32-11-81	ECCENTRIC	161T2114	32	07-01-05
32-11-81	PIN	161T2129	32	07-01-05
32-11-81	SPRING	161T2130	32	07-01-05
32-11-81	LOCK	161T2133	32	07-01-05
32-11-81	PIN	161T2136	32	07-01-05
32-11-81	RETRACT ACTUATOR BOLT	161T5000	32	07-01-05
32-11-81	DRAG STRUT TO SPINDLE PIN	161T6010	32	07-01-05
32-11-81	UPPER DRAG STRUT SPINDLE NUT	161T6021	32	07-01-05
32-11-81	UPPER DRAG STRUT SPINDLE WASHER ASSY	161T6022	32	07-01-05
32-11-81	JURY STRUT SPRING ASSY	161T6031	32	07-01-05
32-11-81	JURY STRUT SPRING SHAFT	161T6033	32	07-01-05
32-11-81	SPRING MLG	161T6046	32	07-01-05
32-11-81	SPOOL ASSY	161T6047	32	07-01-05
32-11-81	BOLT	161T6116	32	07-01-05
32-12-02	DOOR ASSY, MAIN LANDING GEAR	149T6910	6	03-01-05
32-12-05	BELLCRANK ASSY, MAIN LANDING GEAR DOOR HINGE	149T6902	11	03-01-01
32-12-06	FITTING ASSY, TRUNNION DOOR TRUNNION MOUNTED	113T8314	6	07-01-05
32-12-10	BELLCRANK ASSY, MAIN LANDING GEAR DOOR HINGE	149T6080	2	11-01-00
32-12-12	DOOR ASSY, MAIN LANDING GEAR	149T6100	2	11-01-02
32-12-13	DOOR ASSY, MAIN LANDING GEAR POP-UP UPPER SURFACE	113T1645		11-01-01
32-12-53	DOOR ASSY, DRAG STRUT	113T8101	1	09-01-94
32-12-55	DOOR ASSY, SHOCK STRUT	113T8201	11	12-01-97
32-12-56	DOOR ASSY, SHOCK STRUT	113T8204		03-01-99
32-12-61	DOOR ASSY, TRUNNION	113T8301	11	03-01-02
32-12-62	DOOR ASSY, MAIN LANDING GEAR DOORS TRUNNION	113T8304	2	03-01-01
32-20-51	WIRE HARNESS ASSY, NOSE LANDING GEAR	287T6205	30	11-01-05
32-21-21	NOSE LANDING GEAR ASSY	162T0000	48	11-01-05

NUMERICAL INDEX/MANUALS

767

D634T101

01.1

Page 22

Nov 01/05



BOEING

COMPONENT
MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	R E V	MANUAL ISSUED DATE
32-21-43	COMPONENT ASSY, NOSE LANDING GEAR	162T1100	48	11-01-05
32-21-47	COMPONENT ASSY, NOSE LANDING GEAR	162T1136	44	11-01-05
32-21-54	STRUT ASSY, NOSE LANDING GEAR DRAG	162T2000	35	11-01-05
32-21-60	STRUT ASSY, AFT NOSE LANDING GEAR DOOR	141T6963	5	07-01-04
32-21-65	SUPPORT BEAM	162T5000	10	11-01-00
32-21-65	SUPPORT LINK	162T5002	10	11-01-00
32-21-65	FWD SUPPORT BEAM PIN	162T5004	10	11-01-00
32-21-65	AFT SUPPORT BEAM PIN	162T5005	10	11-01-00
32-21-65	SUPPORT LINK PIN	162T5006	10	11-01-00
32-21-65	ACTUATOR ATTACH PIN	162T5007	10	11-01-00
32-21-65	LOCK ACTUATOR PIN	162T5008	10	11-01-00
32-22-33	DOOR ASSY, NOSE LANDING GEAR AFT	141T6920	3	03-01-02
32-22-42	DOOR ASSY, NOSE LANDING GEAR FORWARD	141T6910	5	03-01-02
32-22-63	ARM ASSY, IDLER	162T4001	1	04-01-92
32-22-63	UNIVERSAL ASSY	162T4002	1	04-01-92
32-22-63	BARREL ASSY	162T4004	1	04-01-92
32-22-63	CLEVIS ASSY	162T4010	1	04-01-92
32-22-63	BELLCRANK ASSY	162T4012	1	04-01-92
32-31-10	QUADRANT ASSY, LANDING GEAR CONTROL LEVER	257T1102		10-01-87
32-32-00	ACTUATOR ASSY, MAIN LANDING GEAR RETRACT	273T1100	25	07-01-05
32-32-00	ACTUATOR ASSY, MAIN LANDING GEAR RETRACT	273T1102	25	07-01-05
32-32-10	ACTUATOR ASSY, MAIN LANDING GEAR SIDE BRACE LOCK	273T6200	11	07-01-04
32-32-10	ACTUATOR ASSY, MAIN LANDING GEAR SIDE BRACE LOCK	273T6201	11	07-01-04
32-32-13	ACTUATOR ASSY, MAIN LANDING GEAR DOOR LATCH	257T1200	19	07-01-02
32-32-13	ACTUATOR ASSY, MAIN LANDING GEAR DOOR LATCH	273T4561	19	07-01-02
32-32-14	UNLOCK ASSY, MAIN LANDING GEAR DOOR	149T6903	8	11-01-99
32-32-15	ACTUATOR ASSY, MAIN LANDING GEAR DOOR ARMING LOCKOUT	273T4572	4	07-10-86
32-32-19	ACTUATOR ASSY, MAIN LANDING GEAR DOOR -3 -4	273T4520	3	03-01-02
32-32-19	ACTUATOR ASSY, MAIN LANDING GEAR DOOR	273T4521	3	03-01-02
32-32-20	ACTUATOR ASSY, MAIN LANDING GEAR DOOR	273T0073	11	03-01-03
32-32-20	ACTUATOR ASSY, MAIN LANDING GEAR DOOR -9	273T4520	11	03-01-03
32-32-25	ACTUATOR ASSY, MAIN LANDING GEAR DRAG BRACE LOCK	273T6300	11	07-01-04
32-32-25	ACTUATOR ASSY, MAIN LANDING GEAR DRAG BRACE LOCK	273T6301	11	07-01-04
32-32-29	ACTUATOR ASSY, MAIN LANDING GEAR SIDE	273T6251	2	03-01-01



BOEING
COMPONENT
MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	R E V	MANUAL ISSUED DATE
	BRACE DOWN LOCK			
32-32-30	CARTRIDGE ASSY, MAIN LANDING GEAR SPRING	161T2033	7	03-01-03
32-32-35	ACTUATOR ASSY, MAIN LANDING GEAR DRAG BRACE DOWN LOCK	273T6351	3	07-01-03
32-32-36	MECHANISM ASSY, DOOR OPERATED SEQUENCE VALVE	273T4582		11-01-99
32-32-40	ACTUATOR ASSY, MAIN LANDING GEAR DOOR LATCH	273T4591	2	11-01-01
32-32-43	BOX ASSY, MAIN LANDING GEAR OPERATED SEQUENCE VALVE/CAM	273T1400	5	07-01-99
32-32-43	BOX ASSY, MAIN LANDING GEAR OPERATED SEQUENCE VALVE/CAM	273T1401	5	07-01-99
32-32-44	ACTUATOR ASSY, MAIN LANDING GEAR DOOR	273T4551	3	03-01-05
32-32-50	BUNGEE ASSY, MAIN GEAR DOOR OPERATED SEQUENCE VALVE	273T4531		10-01-87
32-32-55	POSITIONER ASSY, MAIN LANDING GEAR TRUCK	273T6100	37	03-01-05
32-32-55	POSITIONER ASSY, MAIN LANDING GEAR TRUCK	273T6101	37	03-01-05
32-32-64	ACTUATOR ASSY, MAIN LANDING GEAR RETRACT	273T1151	2	07-01-01
32-32-66	ACTUATOR ASSY, TRUCK POSITIONER	273T6151	2	07-01-03
32-34-00	ACTUATOR ASSY, NOSE LANDING GEAR RETRACT	273T4110	11	11-01-05
32-34-00	ACTUATOR ASSY, NOSE LANDING GEAR RETRACT	273T4112	11	11-01-05
32-34-16	DRUM/LOCKOUT ASSY, NOSE WHEEL STEERING	015T1626	20	11-01-05
32-34-16	DRUM/LOCKOUT ASSY, NOSE WHEEL STEERING	257T4318	20	11-01-05
32-34-31	ACTUATOR ASSY, NOSE GEAR LOCK	273T4120	6	12-01-97
32-34-31	ACTUATOR ASSY, NOSE GEAR LOCK	273T4121	6	12-01-97
32-35-02	LEVER ASSY, LANDING GEAR EXTEND	257T3101	1	11-01-99
32-35-30	LIMITER ASSY, MAIN LANDING GEAR ALTERNATE EXTEND LOAD	257T3011	1	07-10-83
32-35-32	QUADRANT ASSY, MAIN LANDING GEAR ALTERNATE EXTENDED	257T3102		10-01-87
32-35-41	ROD ASSY, LANDING GEAR ALTERNATE EXTEND CONTROL	257T3103	2	07-10-83
32-35-70	SHAFT ASSY, TORQUE	257T3501	2	11-01-02
32-35-71	RELEASE ASSY, MAIN GEAR DOOR GROUND	257T3300	4	10-10-83
32-35-80	SHAFT ASSY, MAIN LANDING GEAR ALTERNATE EXTEND UPLOCK RELEASE CRANK	257T3404	3	11-01-02
32-35-81	LOCKOUT ASSY, MAIN GEAR ALTERNATE EXTEND UPLOCK RELEASE	257T3406	6	10-01-88
32-35-82	VALVE ASSY, MAIN LANDING GEAR ALTERNATE EXTEND UPLOCK RELEASE DOOR SAFETY	257T3407	1	07-01-93
32-35-83	INSTALLATION COMPONENTS, MAIN LANDING GEAR ALTERNATE EXTEND UPLOCK	257T3401		10-10-85
32-35-83	INSTALLATION COMPONENTS, MAIN LANDING GEAR ALTERNATE EXTEND UPLOCK	257T3403		10-10-85

NUMERICAL INDEX/MANUALS

767

D634T101

01.1

Page 24

Nov 01/05


BOEING
 COMPONENT
 MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	R E V	MANUAL ISSUED DATE
32-35-83	INSTALLATION COMPONENTS, MAIN LANDING GEAR ALTERNATE EXTEND UPLOCK	257T3409		10-10-85
32-35-83	INSTALLATION COMPONENTS, MAIN LANDING GEAR ALTERNATE EXTEND UPLOCK	257T3413		10-10-85
32-35-83	INSTALLATION COMPONENTS, MAIN LANDING GEAR ALTERNATE EXTEND UPLOCK	257T3414		10-10-85
32-35-83	INSTALLATION COMPONENTS, MAIN LANDING GEAR ALTERNATE EXTEND UPLOCK	257T3415		10-10-85
32-35-83	INSTALLATION COMPONENTS, MAIN LANDING GEAR ALTERNATE EXTEND UPLOCK	257T3416		10-10-85
32-35-83	INSTALLATION COMPONENTS, MAIN LANDING GEAR ALTERNATE EXTEND UPLOCK	257T3417		10-10-85
32-35-83	INSTALLATION COMPONENTS, MAIN LANDING GEAR ALTERNATE EXTEND UPLOCK	257T3418		10-10-85
32-35-83	INSTALLATION COMPONENTS, MAIN LANDING GEAR ALTERNATE EXTEND UPLOCK	257T3419		10-10-85
32-35-83	INSTALLATION COMPONENTS, MAIN LANDING GEAR ALTERNATE EXTEND UPLOCK	257T3429		10-10-85
32-35-83	INSTALLATION COMPONENTS, MAIN LANDING GEAR ALTERNATE EXTEND UPLOCK	257T3431		10-10-85
32-35-83	INSTALLATION COMPONENTS, MAIN LANDING GEAR ALTERNATE EXTEND UPLOCK	257T3440		10-10-85
32-35-84	ACTUATOR ASSY, MAIN LANDING GEAR ALTERNATE EXTEND	257T4662	3	07-01-03
32-35-85	CRANK ASSY, NOSE LANDING GEAR ALTERNATE RELEASE ACTUATOR	257T4350	1	11-01-00
32-35-86	ACTUATOR ASSY, NOSE LANDING GEAR ALTERNATE UPLOCK RELEASE	293W5602	2	11-01-01
32-35-91	LIMITER ASSY, NOSE GEAR ALTERNATE EXTEND LOAD	257T3502	3	07-01-90
32-36-10	INSTALLATION COMPONENTS, NOSE LANDING GEAR ALTERNATE EXTEND	257T3200	1	01-01-90
32-36-10	INSTALLATION COMPONENTS, NOSE LANDING GEAR ALTERNATE EXTEND	257T3212	1	01-01-90
32-36-10	INSTALLATION COMPONENTS, NOSE LANDING GEAR ALTERNATE EXTEND	257T3213	1	01-01-90
32-36-10	INSTALLATION COMPONENTS, NOSE LANDING GEAR ALTERNATE EXTEND	257T3214	1	01-01-90
32-36-10	INSTALLATION COMPONENTS, NOSE LANDING GEAR ALTERNATE EXTEND	257T3216	1	01-01-90
32-36-10	INSTALLATION COMPONENTS, NOSE LANDING GEAR ALTERNATE EXTEND	257T3220	1	01-01-90
32-36-10	INSTALLATION COMPONENTS, NOSE LANDING GEAR ALTERNATE EXTEND	257T3225	1	01-01-90



BOEING
COMPONENT
MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL ISSUED DATE
32-41-01	MODULE ASSY, LANDING GEAR BRAKE METERING VALVE	250T1003	9	01-01-93
32-41-01	MODULE ASSY, LANDING GEAR BRAKE METERING VALVE	257T2201	9	01-01-93
32-41-02	MODULE ASSY, LANDING GEAR BRAKE	257T2231	5	03-01-99
32-41-10	VALVE ASSY, ALTERNATE BRAKE SELECTOR AND BRAKE ACCUMLATOR ISOLATION	274T0005	9	07-01-05
32-41-10	VALVE ASSY, ALTERNATE BRAKE SELECTOR AND BRAKE ACCUMLATOR ISOLATION	274T4620	9	07-01-05
32-41-10	VALVE ASSY, ALTERNATE BRAKE SELECTOR AND BRAKE ACCUMLATOR ISOLATION	274T4621	9	07-01-05
32-41-10	VALVE ASSY, ALTERNATE BRAKE SELECTOR AND BRAKE ACCUMLATOR ISOLATION	274U0003	9	07-01-05
	-2 -4			
32-41-12	VALVE ASSY, ALTERNATE BRAKE SELECT AND BRAKE ACCUMULATOR ISOLATION	274N1003	18	11-01-00
32-41-12	VALVE ASSY, ALTERNATE BRAKE SELECT AND BRAKE ACCUMULATOR ISOLATION	274N1028	18	11-01-00
32-41-12	VALVE ASSY, ALTERNATE BRAKE SELECT AND BRAKE ACCUMULATOR ISOLATION	274N1051	18	11-01-00
32-41-12	VALVE ASSY, ALTERNATE BRAKE SELECT AND BRAKE ACCUMULATOR ISOLATION	274U0003	18	11-01-00
	-4			
32-41-12	VALVE ASSY, ALTERNATE BRAKE SELECT AND BRAKE ACCUMULATOR ISOLATION	65C26816	18	11-01-00
32-41-22	QUADRANT ASSY, MAIN LANDING GEAR BRAKE	253T3524	2	07-10-85
32-41-23	QUADRANT ASSY, MAIN LANDING GEAR BRAKE	253T3526	1	09-01-94
32-41-25	ACTUATOR ASSY, WHEEL BRAKE	274T4570	7	10-01-90
32-41-55	VALVE ASSY, BRAKE METERING	257T2271	1	03-01-00
32-51-01	GEARBOX ASSY, NOSE WHEEL STEERING	257T4120	7	11-01-01
32-51-02	INSTL COMPONENTS, NOSE WHEEL STEERING	257T4117	6	07-01-03
32-51-02	INSTL COMPONENTS, NOSE WHEEL STEERING	257T4119	6	07-01-03
32-51-02	INSTL COMPONENTS, NOSE WHEEL STEERING	257T4155	6	07-01-03
32-51-02	INSTL COMPONENTS, NOSE WHEEL STEERING	257T4158	6	07-01-03
32-51-02	INSTL COMPONENTS, NOSE WHEEL STEERING	257T4159	6	07-01-03
32-51-02	INSTL COMPONENTS, NOSE WHEEL STEERING	257T4162	6	07-01-03
32-51-02	INSTL COMPONENTS, NOSE WHEEL STEERING	257T4164	6	07-01-03
32-51-02	INSTL COMPONENTS, NOSE WHEEL STEERING	257T4165	6	07-01-03
32-51-02	INSTL COMPONENTS, NOSE WHEEL STEERING	257T4169	6	07-01-03
32-51-04	INSTALLATION COMPONENTS, NOSE WHEEL STEERING QUADRANT	257T4100	2	03-01-04
32-51-10	ACTUATOR ASSY, NOSE GEAR STEERING	275T6221	13	07-01-03
32-51-20	COMPENSATOR ASSY, NOSE WHEEL STEERING CABLE	257T4316	3	07-01-93

NUMERICAL INDEX/MANUALS

767

D634T101

01.1

Page 26

Nov 01/05



BOEING

COMPONENT
MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	R E V	MANUAL ISSUED DATE
32-51-30	MECHANISM ASSY, NOSE WHEEL STEERING CENTERING SPRING AND RUDDER INTERCONNECT	257T4200	2	12-01-95
32-51-40	MODULAR ASSY, NOSE GEAR STEERING CHECK VALVE	275T4112	5	07-01-03
32-51-51	CARTRIDGE ASSY, NOSE WHEEL STEERING SPRING	257T4311	6	01-01-92
32-71-05	STRUT ASSY, TAIL SKID COMPLETE SHOCK	163T0000	9	11-01-04
32-71-06	INSTALLATION COMPONENTS, TAIL SKID	148T7703	1	07-01-01
32-71-06	INSTALLATION COMPONENTS, TAIL SKID	163T1000	1	07-01-01
32-71-06	INSTALLATION COMPONENTS, TAIL SKID	163T3002	1	07-01-01
32-71-06	INSTALLATION COMPONENTS, TAIL SKID	163T3004	1	07-01-01
32-71-06	INSTALLATION COMPONENTS, TAIL SKID	163T3005	1	07-01-01
32-71-06	INSTALLATION COMPONENTS, TAIL SKID	163T3006	1	07-01-01
32-71-12	ACTUATOR ASSY, TAIL SKID	273T4702	2	07-01-03
32-71-13	SHOCK ABSORBER ASSY, TAIL SKID	163T1020	2	03-01-04
32-71-14	INSTALLATION COMPONENTS, TAIL SKID	163T0001	3	07-01-04
33-11-15	PANEL ASSY, FLIGHT ENGINEERS LIGHTING, M18	233T4242	1	07-01-01
33-11-16	PANEL ASSY, AFT DOOM LIGHT, M973	233T7211		03-01-01
33-11-71	PANEL ASSY, LIGHTING CONTROL, M10056	233N3214	22	11-01-04
33-11-71	PANEL ASSY, LIGHTING CONTROL, M10056 -67 -123 -190 -191 -306	233T3100	22	11-01-04
33-44-72	PANEL ASSY, ANTI-COLLISION AND LANDING LIGHTING, M56 -64 -145 -196 -284 -442	233T3100	18	07-01-04
33-44-72	PANEL ASSY, ANTI-COLLISION AND LANDING LIGHTING, M56	233T3202	18	07-01-04
33-44-72	PANEL ASSY, ANTI-COLLISION AND LANDING LIGHTING, M56	233T3217	18	07-01-04
33-51-03	PANEL ASSY, EMERGENCY LIGHTS, M43 -86 -134 -225 -236 -289 -301 -329 -415	233T3100	20	07-01-04
33-51-03	PANEL ASSY, EMERGENCY LIGHTS, M43	233T3210	20	07-01-04
34-22-19	PANEL ASSY, MAINTENANCE ANNUNCIATOR LIGHTS CONTROL, M2311	233T4261		03-01-01
35-21-01	MODULE ASSY, OUTBOARD OXYGEN	417T4200	15	07-01-04
35-21-10	MODULE ASSY, CENTER OXYGEN	417T4201	11	11-01-01
35-21-21	MODULE ASSY, LAVATORY AND FLIGHT ATTENDANT OXYGEN	417T4202	15	11-01-01
35-21-31	MODULE ASSY, ATTENDANT NO. 1 OXYGEN	417T4203	18	03-01-03
35-21-41	MODULE ASSY, FLIGHT ATTENDANT NO. 2 OXYGEN	417T4204	16	11-01-01
35-21-42	MODULE/PANEL ASSY, OXYGEN	417U3105	12	03-01-03

NUMERICAL INDEX/MANUALS

767

D634T101

01.1

Page 27
Nov 01/05



BOEING

COMPONENT
MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	R E V	MANUAL ISSUED DATE
35-21-42	MODULE/PANEL ASSY, OXYGEN	417U3106	12	03-01-03
35-21-51	MODULE ASSY, FLIGHT ATTENDANT'S PANEL NO. 3 OXYGEN	417T4206	17	11-01-01
35-21-61	BOX ASSY, ATTENDANT/LAVATORY OXYGEN	417T4209	2	11-01-02
36-10-06	DUCTS, REPAIR OF PNEUMATIC	213T4101	55	11-01-05
36-10-12	DUCTS, REPAIR OF POLYURETHANE AND POLYISOCYANURATE		4	11-01-01
36-11-54	PANEL ASSY, BLEED AIR CONTROL, M15 -128 -129 -173 -223 -224 -228 -244 -245 -266 -274 -276 -291 -318 -319 -333 -335 -336 -343 -443	233T3100	21	07-01-03
36-11-54	PANEL ASSY, BLEED AIR CONTROL, M15	233T3237	21	07-01-03
36-12-03	INSTALLATION COMPONENTS, PRECOOLER	312T3216	2	07-01-00
36-12-06	SEAL ASSY, PRECOOLER EXHAUST DUCT KISS	312T1310	2	03-01-96
38-31-01	MAST ASSY, WASTE WATER DRAIN	417N2117	10	11-01-02
38-31-01	MAST ASSY, WASTE WATER DRAIN	417T2093	10	11-01-02
38-31-01	MAST ASSY, WASTE WATER DRAIN	478W1610	10	11-01-02
49-11-11	AUXILIARY POWER UNIT ASSY	351T0300	22	11-01-03
49-11-11	AUXILIARY POWER UNIT ASSY	351T0304	22	11-01-03
49-11-13	AUXILIARY POWER UNIT ASSY	351N1101	7	11-01-00
49-13-03	DUCT ASSY, AUXILIARY POWER UNIT EXHAUST	354T0201	1	11-01-00
49-13-11	SUPPORT ASSY, AUXILIARY POWER SYSTEM	352T0102	9	03-01-99
49-13-11	SUPPORT ASSY, AUXILIARY POWER SYSTEM	352T0103	9	03-01-99
49-13-11	SUPPORT ASSY, AUXILIARY POWER SYSTEM	352T0104	9	03-01-99
49-13-11	SUPPORT ASSY, AUXILIARY POWER SYSTEM	352T0105	9	03-01-99
49-15-12	PORT/DOOR ASSY, AUXILIARY POWER SYSTEM INTAKE	353T0100	4	11-01-99
49-61-52	PANEL ASSY, APU CONTROL, M1 -53 -144 -149 -153 -164 -238 -461	233T3100	21	11-01-04
49-61-52	PANEL ASSY, APU CONTROL, M1	233T3232	21	11-01-04
52-11-03	BUSTLE ASSY, FORWARD DOOR	416T2042	3	07-01-04
52-11-04	DOOR ASSY, MID ENTRY	143T6121	4	03-01-04
52-11-06	DOOR ASSY, FWD ENTRY AND SERVICE	141T6121	6	03-01-04
52-11-06	DOOR ASSY, FWD ENTRY AND SERVICE	411T3016	6	03-01-04
52-11-12	MECHANISM ASSY, FORWARD ENTRY/SERVICE DOOR HANDLE	141T6136	15	11-01-04
52-11-20	CARRIER ASSY, GIRT BAR	141T6102	2	10-01-92
52-11-22	DOOR ASSY, AFT ENTRY AND SERVICE	146T6121	4	03-01-04
52-11-22	DOOR ASSY, AFT ENTRY AND SERVICE	411T3017	4	03-01-04
52-11-23	BUSTLE ASSY, AFT DOOR	416T2047	2	07-01-91
52-11-32	MECHANISM ASSY, MID ENTRY/SERVICE DOOR HANDLE	143T6140	5	11-01-03
52-11-42	MECHANISM ASSY, AFT ENTRY/ SERVICE DOOR HANDLE	146T6140	8	11-01-04

NUMERICAL INDEX/MANUALS

767

D634T101

01.1

Page 28

Nov 01/05


BOEING
 COMPONENT
 MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	R E V	MANUAL ISSUED DATE
52-11-52	TROLLEY/LINK ASSY, ENTRY AND SERVICE DOORS	141T6530	5	11-01-00
52-11-62	COUNTERBALANCE ASSY, ENTRY AND SERVICE DOOR	258T1190	11	07-01-99
	-3 THRU -5 -7 -8			
52-11-63	COUNTERBALANCE ASSY, OVERHEAD PASSENGER DOOR	258T1100	6	03-01-99
52-11-64	COUNTERBALANCE ASSY, ENTRY AND SERVICE DOOR	258T1190	1	03-01-97
	-6			
52-11-71	GEARBOX ASSY, OVERHEAD PASSENGER DOOR COUNTERBALANCE	258T1110	20	11-01-02
52-11-82	SNUBBER ASSY, ENTRY/SERVICE DOOR HANDLE MECHANISM SPRING/HYDRAULIC	141T6561	4	01-01-92
52-11-83	MECHANISM ASSY, SECTION 43 ENTRY/ SERVICE DOORS OVERCENTER	143T6135	4	03-01-99
52-11-84	TRACK ASSY, MID ENTRY DOOR UPPER	143T6105	2	07-01-05
52-11-85	MECHANISM ASSY, SECTION 41 ENTRY/SERVICE DOOR OVERCENTER	141T6134	5	03-01-96
52-11-86	TRACK ASSY, FORWARD ENTRY AND SERVICE DOOR	141T6105	3	12-01-95
52-11-87	UPLATCH ASSY, ENTRY AND SERVICE DOOR	141T6583	2	10-01-91
52-11-88	MECHANISM ASSY, SECTION 46 ENTRY/SERVICE DOOR OVERCENTER	146T6125	3	10-01-92
52-11-91	CRANK ASSY	141T6265	5	06-01-95
52-11-91	CRANK ASSY	141T6510	5	06-01-95
52-11-91	BRACKET ASSY	258T3230	5	06-01-95
52-11-91	PULLEY BRACKET	258T3401	5	06-01-95
52-11-91	BRACKET ASSY	258T4240	5	06-01-95
52-21-02	SHADE ASSY, OVERWING ESCAPE HATCH WINDOW	411T1233	5	03-01-02
52-21-11	HATCH ASSY, OVERWING ESCAPE	145T6016	7	07-01-90
52-22-21	MECHANISM INSTALLATION, EMERGENCY EXIT DOOR	146T6550	6	03-01-04
52-32-04	DOOR ASSY, MAIN DECK CARGO	143T6200	4	11-01-03
52-34-01	DOOR ASSY, FORWARD AND AFT CARGO	140T2700	16	07-01-04
52-34-05	BUNGEE ASSY, FORWARD/AFT CARGO DOOR	140T2941	5	03-01-03
52-34-22	GEARBOX ASSY, SIDE CARGO DOOR MANUAL DRIVE	65B83637	2	03-01-02
52-34-25	SHAFT ASSY	258T5004	2	07-01-03
52-34-25	SHAFT ASSY	258T5005	2	07-01-03
52-34-25	LINK ASSY	258T5021	2	07-01-03
52-34-41	DOOR ASSY, LARGE CARGO	143T6300	10	07-01-04
52-34-43	MECHANISM ASSY, LARGE CARGO DOOR	143T6501	4	11-01-00



BOEING
COMPONENT
MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	R E V	MANUAL ISSUED DATE
52-34-45	LATCH LOCK CONTROL HANDLE GEARBOX ASSY, LARGE CARGO DOOR MANUAL DRIVE	258T5001	5	12-01-95
52-36-03	DOOR ASSY, BULK CARGO	146T6301	3	07-01-99
52-36-05	STRUT ASSY, BULK CARGO DOOR PROTECTOR	452T3216	1	04-10-84
52-36-25	TUBE ASSY, BULK CARGO DOOR BALANCE SYSTEM SPRING	146T6387	8	03-01-05
52-48-12	DOOR ASSY, ELEC/ELEX ACCESS	141T6301	8	11-01-02
52-48-33	DOOR ASSY, AUXILIARY POWER UNIT ACCESS	148T6550	2	11-01-02
52-48-42	DOOR ASSY, FORWARD ACCESS	141T6401	5	09-01-95
52-48-51	DOOR ASSY, UNDERWING FAIRING ECS	149T7210	9	03-01-00
52-48-61	DOOR ASSY, CONTROLS BAY ACCESS	148T6602	6	04-01-88
52-49-41	DOOR ASSY, SERVICE ACCESS	148T6402	4	10-10-86
52-51-13	DOOR ASSY, FLIGHT DECK	232T2110	1	07-01-04
53-13-01	SUPPORT ASSY, NOSE GEAR WHEEL WELL AFT BULKHEAD	141T2923	2	12-01-95
53-52-01	FITTING ASSY, STRUT SUPPORT EXHAUST FRAME	149T7375		07-10-84
53-85-01	DOOR ASSY, AUXILIARY POWER SYSTEM VENTED	355T0253	3	07-01-00
54-50-21	BRACE ASSY	015T1613	21	07-01-05
54-50-21	LINK ASSY	310T1030	21	07-01-05
54-50-21	LINK ASSY	310T2030	21	07-01-05
54-50-21	FUSE PIN	310T2301	21	07-01-05
54-50-21	LINK ASSY	310T4040	21	07-01-05
54-50-21	LINK ASSY	311T1710	21	07-01-05
54-50-21	BRACE ASSY	311T1730	21	07-01-05
54-50-21	DIAGONAL BRACE, STRUT	311T1735	21	07-01-05
54-50-21	PIN	311T2090	21	07-01-05
54-50-21	PIN	311T2093	21	07-01-05
54-50-21	PIN	311T2095	21	07-01-05
54-50-21	BOLT	311T2096	21	07-01-05
54-50-21	PIN	311T2102	21	07-01-05
54-50-21	BRACE ASSY	311T2730	21	07-01-05
54-50-21	DIAGONAL BRACE, STRUT	311T2735	21	07-01-05
54-50-21	SIDE LINK, STRUT	311T2740	21	07-01-05
54-50-21	FUSE PIN	311T2790	21	07-01-05
54-50-21	ATTACH PIN	311T2792	21	07-01-05
54-50-21	FUSE PIN	311T2793	21	07-01-05
54-50-21	SIDE LINK PIN	311T2796	21	07-01-05
54-50-21	FUSE PIN	311T3090	21	07-01-05
54-50-21	PIN	311T3092	21	07-01-05
54-50-21	FUSE PIN	311T3093	21	07-01-05
54-50-21	FUSE PIN	311T3095	21	07-01-05

NUMERICAL INDEX/MANUALS

767

D634T101

01.1

Page 30

Nov 01/05


BOEING
 COMPONENT
 MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	R E V	MANUAL ISSUED DATE
54-50-21	SHOULDER BOLT	311T3096	21	07-01-05
54-50-21	FUSE PIN	311T3102	21	07-01-05
54-50-21	LINK ASSY	311T3710	21	07-01-05
54-50-21	BRACE ASSY	311T3730	21	07-01-05
54-50-21	DIAGONAL BRACE, STRUT	311T3735	21	07-01-05
54-50-21	LINK ASSY	311T4710	21	07-01-05
54-50-21	DIAGONAL BRACE ASSY	311T4730	21	07-01-05
54-50-21	DIAGONAL BRACE, STRUT	311T4735	21	07-01-05
54-50-21	PIN	311T5090	21	07-01-05
54-50-21	PIN	311T5093	21	07-01-05
54-50-21	PIN	311T5095	21	07-01-05
54-50-21	LINK ASSY	311T5700	21	07-01-05
54-50-21	LINK ASSY	311T5710	21	07-01-05
54-50-21	DIAGONAL BRACE, STRUT	311T5735	21	07-01-05
54-50-21	BRACE ASSY	311T5780	21	07-01-05
54-50-21	FUSE PIN	311T5790	21	07-01-05
54-50-21	FUSE PIN	311T5793	21	07-01-05
54-50-21	DIAGONAL BRACE PIN	311T5795	21	07-01-05
54-52-01	FAIRING ASSY, FORWARD	313T1100	3	03-01-01
54-52-10	FAIRING ASSY, STRUT FORWARD (CF6-80C)	313T2100	3	04-01-92
54-52-11	FAIRING ASSY, STRUT (JT9D-7R4)	313T3100	2	11-01-99
54-53-01	DOOR ASSY, AFT FAIRING STRUT ACCESS	313T3340	15	11-01-04
54-53-03	DOOR ASSY, INBOARD AND OUTBOARD STRUT ACCESS	313T5340		03-01-04
54-53-61	ROD ASSY, STRUT AFT FAIRING HOLD OPEN	313T3350	7	03-01-04
55-20-12	ELEVATOR ASSY, INBOARD SEGMENT -5 -6	100T0300	3	11-01-02
55-20-12	ELEVATOR ASSY, INBOARD SEGMENT	183T2001	3	11-01-02
55-20-22	ELEVATOR ASSY, OUTBOARD SEGMENT -3 -4	100T0300	3	07-01-00
55-20-22	ELEVATOR ASSY, OUTBOARD SEGMENT	183T3001	3	07-01-00
55-20-22	ELEVATOR ASSY, OUTBOARD SEGMENT	183T3093	3	07-01-00
55-40-13	RUDDER ASSY	173T2001	3	11-01-00
56-11-02	WINDSHIELD ASSY, PILOT NO. 1	141T4800	10	07-01-05
56-11-02	WINDSHIELD ASSY, PILOT NO. 1	141T4801	10	07-01-05
56-11-06	WINDOW ASSY, NO. 3	141T4004	21	07-01-05
56-11-06	WINDOW ASSY, NO. 3	141T4820	21	07-01-05
56-11-12	WINDOW ASSY, NO. 2 OPENABLE CABIN	015T0195	26	11-01-05
56-11-12	WINDOW ASSY, NO. 2 OPENABLE CABIN	141T0012	26	11-01-05
56-11-12	WINDOW ASSY, NO. 2 OPENABLE CABIN	141T4835	26	11-01-05
56-11-21	MECHANISM ASSY, NO. 2 OPENABLE WINDOW OPERATING	141T4843	9	07-01-04
56-21-61	WINDOW/WINDOW PLUG ASSY, PASSENGER AND LT WEIGHT PASSENGER	140T2411	16	03-01-03



BOEING
COMPONENT
MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	R E V	MANUAL ISSUED DATE
56-21-61	WINDOW/WINDOW PLUG ASSY, PASSENGER AND LT WEIGHT PASSENGER	140T2412	16	03-01-03
56-21-61	WINDOW/WINDOW PLUG ASSY, PASSENGER AND LT WEIGHT PASSENGER	140T2419	16	03-01-03
56-21-61	WINDOW/WINDOW PLUG ASSY, PASSENGER AND LT WEIGHT PASSENGER	140T2421	16	03-01-03
56-21-61	WINDOW/WINDOW PLUG ASSY, PASSENGER AND LT WEIGHT PASSENGER	140T2498	16	03-01-03
56-21-61	WINDOW/WINDOW PLUG ASSY, PASSENGER AND LT WEIGHT PASSENGER	140T2987	16	03-01-03
56-21-61	WINDOW/WINDOW PLUG ASSY, PASSENGER AND LT WEIGHT PASSENGER	140W2421	16	03-01-03
57-26-11	FAIRING ASSY, NO. 3 INBOARD TRAILING EDGE FLAP CENTER MOVABLE	113T1720	9	11-01-05
57-26-12	FAIRING ASSY, INBOARD TRAILING EDGE FLAP NO. 3 AFT	113T1770	2	07-01-04
57-26-21	FAIRING ASSY, OUTBOARD TRAILING EDGE FLAP NO. 1 FORWARD	113T1811	11	11-01-02
57-26-22	FAIRING ASSY, OUTBOARD TRAINING EDGE FLAP NO. 2 FORWARD	113T1812	7	11-01-02
57-26-31	FAIRING ASSY, OUTBOARD TRAINING EDGE FLAP NO. 1 MID	113T1821	8	11-01-02
57-26-32	FAIRING ASSY, OUTBOARD TRAINING EDGE FLAP NO. 2 MID	113T1822	7	11-01-02
57-28-02	TIP ASSY, RAKED WING	119T1075	1	11-01-02
57-41-10	DOOR ASSY, THERMAL ANTI-ICING DUCT SEAL	114T0201	3	06-01-95
57-43-37	STRUCTURE ASSY, WING LEADING EDGE INBOARD SLAT NO. 6, 7 -9 THRU -12	015T0165	21	07-01-04
57-43-37	STRUCTURE ASSY, WING LEADING EDGE INBOARD SLAT NO. 6, 7 -601 THRU -638 -641 THRU -678 -681 THRU -688	015T1507	21	07-01-04
57-43-37	STRUCTURE ASSY, WING LEADING EDGE INBOARD SLAT NO. 6, 7	114T3100	21	07-01-04
57-43-41	STRUCTURE ASSY, WING LEADING EDGE OUTBOARD SLAT NO. 1 & 12 -3 -4	015T0165	20	03-01-04
57-43-41	STRUCTURE ASSY, WING LEADING EDGE OUTBOARD SLAT NO. 1 & 12 -101 THRU -164	015T1507	20	03-01-04
57-43-41	STRUCTURE ASSY, WING LEADING EDGE OUTBOARD SLAT NO. 1 & 12	114T4101	20	03-01-04

NUMERICAL INDEX/MANUALS

767

D634T101

01.1

Page 32
Nov 01/05



BOEING
COMPONENT
MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL ISSUED DATE
57-43-45	STRUCTURE ASSY, WING LEADING EDGE OUTBOARD SLAT NO. 2 & 11 -5 -6	015T0165	20	11-01-01
57-43-45	STRUCTURE ASSY, WING LEADING EDGE OUTBOARD SLAT NO. 2 & 11 -201 THRU -272	015T1507	20	11-01-01
57-43-45	STRUCTURE ASSY, WING LEADING EDGE OUTBOARD SLAT NO. 2 & 11	114T4102	20	11-01-01
57-43-51	STRUCTURE ASSY, WING LEADING EDGE OUTBOARD SLAT NO. 3 & 10 -7 -8	015T0165	21	03-01-04
57-43-51	STRUCTURE ASSY, WING LEADING EDGE OUTBOARD SLAT NO. 3 & 10 -301 THRU -388	015T1507	21	03-01-04
57-43-51	STRUCTURE ASSY, WING LEADING EDGE OUTBOARD SLAT NO. 3 & 10	114T4103	21	03-01-04
57-43-55	STRUCTURE ASSY, WING LEADING EDGE OUTBOARD SLAT NO. 4 & 9 -401 THRU -422 -425 THRU -482	015T1507	21	07-01-05
57-43-55	STRUCTURE ASSY, WING LEADING EDGE OUTBOARD SLAT NO. 4 & 9	114T4104	21	07-01-05
57-43-61	STRUCTURE ASSY, WING LEADING EDGE OUTBOARD SLAT NO. 5 & 8 -501 THRU -506 -509 THRU -546 -701 THRU -706 -709 THRU -746	015T1507	22	11-01-01
57-43-61	STRUCTURE ASSY, WING LEADING EDGE OUTBOARD SLAT NO. 5 & 8	114T4105	22	11-01-01
57-51-02	BLOCK ASSY, AILERON HINGE BEARING	113T1505	2	06-01-97
57-51-02	BLOCK ASSY, AILERON HINGE BEARING	113T1517	2	06-01-97
57-51-02	BLOCK ASSY, AILERON HINGE BEARING	113T1519	2	06-01-97
57-53-21	FLAP ASSY, INBOARD TRAILING EDGE	113T2101	14	07-01-03
57-53-25	FLAP ASSY, INBOARD TRAILING EDGE FLAP AFT -69 -70 -79 THRU -86 -93 THRU -96	015T1415	12	11-01-05
57-53-25	FLAP ASSY, INBOARD TRAILING EDGE FLAP AFT	113T2301	12	11-01-05
57-53-27	FLAP ASSY, INBOARD TRAILING EDGE MAIN	113T2201	11	03-01-05
57-53-31	SUPPORT ASSY, INBOARD TRAILING EDGE FLAP	113T1200	14	07-01-05
57-53-51	FLAP ASSY, OUTBOARD TRAILING EDGE	113T3100	12	11-01-05
57-54-13	BEAM ASSY, MAIN LANDING GEAR SUPPORT	113T1101	10	03-01-04
57-54-23	FITTING ASSY, MAIN LANDING GEAR BEAM OUTBOARD SUPPORT	112T1750	10	11-01-05
57-54-33	SUPPORT ASSY, FORWARD TRUNNION BEARING	112T1717	6	11-01-00
57-54-37	MACHINED ASSY, FORWARD TRUNNION SUPPORT	112T1600	1	07-01-02

NUMERICAL INDEX/MANUALS

767

D634T101

01.1

Page 33
Nov 01/05



BOEING
COMPONENT
MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	R E V	MANUAL ISSUED DATE
57-54-39	MACHINED ASSY, MAIN LANDING GEAR BEAM OUTBOARD SUPPORT WING	112T1736	2	07-01-02
57-54-41	BEAM ASSY, MAIN LANDING GEAR	113T1116		07-01-99
57-54-42	INSTALLATION COMPONENTS, MAIN LANDING GEAR BEAM	113T1109		11-01-99
57-54-42	INSTALLATION COMPONENTS, MAIN LANDING GEAR BEAM	113T1134		11-01-99
57-54-42	INSTALLATION COMPONENTS, MAIN LANDING GEAR BEAM	113T1136		11-01-99
57-60-11	AILERON ASSY, INBOARD	113T6002	9	07-01-03
57-60-11	AILERON ASSY, INBOARD	113T6100	9	07-01-03
57-60-51	AILERON ASSY, OUTBOARD	113T7018	12	03-01-04
57-60-51	AILERON ASSY, OUTBOARD	113T7100	12	03-01-04
57-70-11	SPOILER ASSY, INBOARD -3 THRU -42	015T1415	18	03-01-03
57-70-11	SPOILER ASSY, INBOARD	113T4100	18	03-01-03
57-70-11	SPOILER ASSY, INBOARD -3 -4	113T5003	18	03-01-03
57-70-51	SPOILER ASSY, OUTBOARD -5	113T5003	13	11-01-00
57-70-51	SPOILER ASSY, OUTBOARD	113T5102	13	11-01-00
71-00-01	INSULATIVE COATING SYSTEM, APPLICATION AND REPAIR OF BMS 10-102		14	11-01-01
71-00-20	ENGINE WIRE HARNESS REPAIR INFORMATION		6	07-01-02
71-00-21	ENGINE WIRE HARNESS, CF6-80A		2	03-01-02
71-00-22	ENGINE WIRE HARNESS, CF6-80C2		10	03-01-05
71-04-28	SHIELD ASSY, RADIATION PW 4000	332T4521		06-01-95
71-11-01	COWL ASSY, INLET JT9D-7R4	314T3010	18	03-01-03
71-11-02	COWL ASSY, INLET CF6	314T1010	6	03-01-98
71-11-02	COWL ASSY, INLET CF6	314T1325	6	03-01-98
71-11-25	COWL ASSY, FAN DUCT (CF6) ENGINE OUTBOARD AND INBOARD SIDE -1 THRU -4	315T1002	17	03-01-05
71-11-26	COWL ASSY, FAN DUCT (CF6) ENGINE OUTBOARD AND INBOARD SIDE -15 THRU -24 -27 THRU -32 -35 THRU -38	315T1002	6	03-01-05
71-11-31	COWL ASSY, FAN DUCT (JT9D) -25 THRU -28 -33 -35 -43 -45 -47 -49	315T3002	10	07-01-03


BOEING
 COMPONENT
 MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	R E V	MANUAL ISSUED DATE
71-11-32	COWL ASSY, FAN DUCT (JT9D) -63 THRU -71 -73 -75 -77 -79 -81 -83 -85 -87 -88 -98 -100	315T3002	8	07-01-03
71-11-33	COWL ASSY, FAN DUCT -57 THRU -60 -89 THRU -92 -101 THRU -108 -117 THRU -136 -143 THRU -146 -149 THRU -164	315T3002	6	07-01-04
71-11-35	COWL ASSY, FAN	314T1110	8	03-01-04
71-11-35	COWL ASSY, FAN	314T1329	8	03-01-04
71-11-41	COWL ASSY, CORE JT9D7R4 (NON-LOAD SHARING)	314T3210	13	03-01-03
71-11-42	COWL ASSY, CORE JT9D7R4 (LOAD SHARING) -81 THRU -84	015T0438	8	07-01-04
71-11-42	COWL ASSY, CORE JT9D7R4 (LOAD SHARING)	314T3250	8	07-01-04
71-11-45	COWL ASSY, CORE (CF6)	015T0109	13	03-01-03
71-11-45	COWL ASSY, CORE (CF6)	015T0132	13	03-01-03
71-11-45	COWL ASSY, CORE (CF6)	015T0412	13	03-01-03
71-11-45	COWL ASSY, CORE (CF6)	015T0437	13	03-01-03
71-11-45	COWL ASSY, CORE (CF6)	015T0540	13	03-01-03
71-11-45	COWL ASSY, CORE (CF6)	314T1001	13	03-01-03
71-11-45	COWL ASSY, CORE (CF6)	314T1210	13	03-01-03
71-11-51	COWL ASSY, PW 4000 INLET	314T4010	10	07-01-03
71-11-52	COWL ASSY, INLET END ITEM (PARTS COLLECTOR) (PW)	314T4080		03-01-02
71-11-53	COWL ASSY, FAN PW 4000 ENGINE	314T4110	5	07-01-03
71-11-55	COWL ASSY, FAN END ITEM (PARTS COLLECTOR) (PW)	314T4085		03-01-02
71-11-56	COWL ASSY, ENGINE OUTBOARD AND INBOARD SIDE FAN DUCT PW 4000	315T4013	17	11-01-04
71-11-56	COWL ASSY, ENGINE OUTBOARD AND INBOARD SIDE FAN DUCT PW 4000	315U4009	17	11-01-04
71-11-59	COWL ASSY, PW 4000 ENGINE CORE (WITH OIL BREATHER)	314T4210	12	03-01-03
71-11-60	COWL ASSY, CORE END ITEM (PARTS COLLECTOR) (PW)	314T4090		03-01-02
71-11-61	COWL ASSY, FAN JT9D-7R ENGINE	314T3110	10	01-01-91
71-21-01	MOUNT ASSY, JT9D ENGINE FORWARD AND AFT	310T3020	33	03-01-05
71-21-11	MOUNT ASSY, CF6-80A AFT ENGINE	310T1020	16	11-01-03
71-21-14	MOUNT ASSY, CF6-80C AFT ENGINE	310U2020	23	11-01-05
71-21-16	MOUNT ASSY, ENGINE FORWARD AND AFT (PW4000)	310T4020	35	11-01-05
71-21-16	MOUNT ASSY, ENGINE FORWARD AND AFT (PW4000)	310U4020	35	11-01-05
71-51-01	WIRE HARNESS, PW4060 ENGINE		3	07-01-03



BOEING
COMPONENT
MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	R E V	MANUAL ISSUED DATE
73-21-86	PANEL ASSY, EEC CONTROL M10761 -338 -341 -347 -348 -373 -374	233T3100	8	11-01-04
73-21-86	PANEL ASSY, EEC CONTROL M10761	233T3242	8	11-01-04
74-31-52	PANEL ASSY, ENGINE IGNITION & START, M49 -130 -227 -239 -290 -326 -360 THRU -362	233T3100	28	03-01-04
74-31-52	PANEL ASSY, ENGINE IGNITION & START, M49	233T3244	28	03-01-04
76-11-11	BOX ASSY, JT9D-7R4 FUEL CONTROL	015T0171	20	11-01-05
76-11-11	BOX ASSY, JT9D-7R4 FUEL CONTROL -5 THRU -8 -23 -24	015T0376	20	11-01-05
76-11-11	BOX ASSY, JT9D-7R4 FUEL CONTROL	015T1298	20	11-01-05
76-11-11	BOX ASSY, JT9D-7R4 FUEL CONTROL	315T3040	20	11-01-05
76-11-18	BOX ASSY, CF6-80 ENGINE THROTTLE FUEL CONTROL -8 -9	015T0094	10	11-01-00
76-11-18	BOX ASSY, CF6-80 ENGINE THROTTLE FUEL CONTROL -9 THRU -11	015T0376	10	11-01-00
76-11-18	BOX ASSY, CF6-80 ENGINE THROTTLE FUEL CONTROL	315T1040	10	11-01-00
76-11-19	LEVER ASSY, CONTROL STAND THRUST -15 -16	015T0094	9	07-01-04
76-11-19	LEVER ASSY, CONTROL STAND THRUST	015T0156	9	07-01-04
76-11-19	LEVER ASSY, CONTROL STAND THRUST	015T0630	9	07-01-04
76-11-19	LEVER ASSY, CONTROL STAND THRUST	253T5800	9	07-01-04
76-11-22	LEVER ASSY, CONTROL STAND THRUST	254T2000	3	07-01-01
76-11-52	MODULE ASSY, ENGINE FUEL CONTROL	253T5900	4	11-01-01
77-31-02	PANEL ASSY, ENGINE VIBRATION M1099	233T4238		10-01-90
78-00-08	POSITIVE LOCK FASTENER INSTALLATION (ASP AND MAF FASTENERS)		1	07-01-03
78-11-06	SLEEVE ASSY, PRIMARY EXHAUST (JT9D-7R)	015T0180	14	11-01-03
78-11-06	SLEEVE ASSY, PRIMARY EXHAUST (CF6-80)	314T1310	14	11-01-03
78-11-06	SLEEVE ASSY, PRIMARY EXHAUST (JT9D-7R AND PW4000)	314T3310	14	11-01-03
78-11-14	NOZZLE ASSY, CF6-80C2 ENGINE PRIMARY	015T0805	13	03-01-04
78-11-14	NOZZLE ASSY, CF6-80C2 ENGINE PRIMARY	015U1547	13	03-01-04
78-11-14	NOZZLE ASSY, CF6-80C2 ENGINE PRIMARY	314U2100	13	03-01-04
78-11-15	PLUG ASSY, TURBINE EXHAUST (CF6-80C2 AND PW4000)	314T4320	5	11-01-05
78-11-15	PLUG ASSY, TURBINE EXHAUST (CF6-80C2 AND PW4000)	314U2200	5	11-01-05
78-11-16	PLUG ASSY, TURBINE EXHAUST (CF6-80A AND JT9D-7R ENGINES)	314T1320	2	12-01-96
78-11-16	PLUG ASSY, TURBINE EXHAUST (CF6-80A	314T3320	2	12-01-96

NUMERICAL INDEX/MANUALS

767

D634T101

01.1

Page 36

Nov 01/05



BOEING
COMPONENT
MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	REV	MANUAL ISSUED DATE
	AND JT9D-7R ENGINES)			
78-31-08	ACTUATOR ASSY, COWL OPENING	W315T3800	14	07-01-04
78-31-09	RESERVOIR ASSY, CF6-80C T/R COWL OPENING SYSTEM AUXILIARY	315U2027	4	09-01-94
78-31-14	COWL ASSY, FAN DUCT AND THRUST REV (JT9D)	015T0438	14	07-01-04
	-27 THRU -54 -69 THRU -78			
78-31-14	COWL ASSY, FAN DUCT AND THRUST REV (JT9D)	315T3001	14	07-01-04
	-43 THRU -55 -57 -59 -61 -63 -65 THRU -68 -73 THRU -80 -82 -84 -93 THRU -108 -117 THRU -144			
78-31-14	COWL ASSY, FAN DUCT AND THRUST REV (JT9D)	315T3055	14	07-01-04
78-31-14	COWL ASSY, FAN DUCT AND THRUST REV (JT9D)	315T4726	14	07-01-04
	-39 THRU -98 -115 THRU -138 -143 -144 -147 THRU -158 -165 THRU -172 -177 THRU -188			
78-31-15	COWL ASSY, FAN DUCT AND THRUST REVERSER (CF6-80A)	015T0094	23	11-01-05
	-11 THRU -14			
78-31-15	COWL ASSY, FAN DUCT AND THRUST REVERSER (CF6-80A)	015T0131	23	11-01-05
78-31-15	COWL ASSY, FAN DUCT AND THRUST REVERSER (CF6-80A)	015T0442	23	11-01-05
78-31-15	COWL ASSY, FAN DUCT AND THRUST REVERSER (CF6-80A)	315T1001	23	11-01-05
78-31-15	COWL ASSY, FAN DUCT AND THRUST REVERSER (CF6-80A)	315T4725	23	11-01-05
78-31-16	COWL ASSY, FAN DUCT AND THRUST REVERSER (JT9D)	015T0438	8	03-01-04
	-55 THRU -68			
78-31-16	COWL ASSY, FAN DUCT AND THRUST REVERSER (JT9D)	315T3001	8	03-01-04
	-7 THRU -10 -23 THRU -30 -33 -35 -64			
78-31-16	COWL ASSY, FAN DUCT AND THRUST REVERSER (JT9D)	315T4726	8	03-01-04
	-22 THRU -27 -29 -31 THRU -38 -99 THRU -105 -107 -109 THRU -112 -139 -140			
78-31-22	SLEEVE ASSY, THRUST REVERSER (JT9D)	315T3001	10	03-01-05
	-39 -40			
78-31-22	SLEEVE ASSY, THRUST REVERSER (JT9D)	315T3500	10	03-01-05



BOEING
COMPONENT
MAINTENANCE MANUAL

MANUAL NUMBER	TITLE	PART NUMBER	R E V	MANUAL ISSUED DATE
78-31-22	SLEEVE ASSY, THRUST REVERSER (JT9D) -17 THRU -24	315T4026	10	03-01-05
78-31-25	SLEEVE ASSY, THRUST REVERSER (CF6-80)	315T1500	26	07-01-04
78-31-41	COWL ASSY, FAN DUCT AND THRUST REV (PW4000)	315T4014	16	11-01-03
78-31-41	COWL ASSY, FAN DUCT AND THRUST REV (PW4000)	315T4701	16	11-01-03
78-31-45	SLEEVE ASSY, THRUST REVERSER (PW4000) -11 THRU -16	315T4026	21	07-01-05
78-31-45	SLEEVE ASSY, THRUST REVERSER (PW4000)	315T4500	21	07-01-05
78-31-47	FAN DUCT COWL AND THRUST REVERSER ASSY, END ITEM (PARTS COLLECTOR) (PW)	315T4295	1	03-01-04
78-34-03	TEE ASSY, FLOW CONTROL	315A1802	7	04-01-93
78-34-04	VALVE ASSY, DIRECTIONAL FLOW	315T3056	1	03-01-99
78-34-41	BOX ASSY, STRUT THRUST REVERSER CONTROL	015T0187	15	09-01-97
78-34-41	BOX ASSY, STRUT THRUST REVERSER CONTROL	015T0376	15	09-01-97
78-34-41	BOX ASSY, STRUT THRUST REVERSER CONTROL	315T3016	15	09-01-97
78-34-51	BOX ASSY, CF6-80 THRUST REVERSER STRUT CONTROL	015T0376	22	03-01-04
78-34-51	BOX ASSY, CF6-80 THRUST REVERSER STRUT CONTROL	315T1016	22	03-01-04
78-34-51	BOX ASSY, CF6-80 THRUST REVERSER STRUT CONTROL	315T2011	22	03-01-04
78-35-02	PANEL ASSY, THRUST REVERSER TEST, M1977	233T4259	2	01-01-93
80-11-02	MODULE ASSY, ENG & STAB CUTOUT, CONTROL STAND	254T3001		03-01-00