

NUMERICAL INDEX



767

ILLUSTRATED TOOL AND EQUIPMENT MANUAL

Subject/Page	Date	Subject/Page	Date	Subject/Page	Date
EFFECTIVE PAGES					
1	Oct 10/2008				
2	BLANK				
NUMERICAL INDEX					
O 1	Oct 10/2008				
O 2	Oct 10/2008				
3	Oct 10/2006				
4	Apr 10/2007				
5	Apr 10/2008				
O 6	Oct 10/2008				
O 7	Oct 10/2008				
O 8	Oct 10/2008				
O 9	Oct 10/2008				
O 10	Oct 10/2008				
O 11	Oct 10/2008				
O 12	Oct 10/2008				
O 13	Oct 10/2008				
O 14	Oct 10/2008				
O 15	Oct 10/2008				
O 16	Oct 10/2008				
O 17	Oct 10/2008				
O 18	Oct 10/2008				
O 19	Oct 10/2008				
O 20	Oct 10/2008				
O 21	Oct 10/2008				
O 22	Oct 10/2008				
O 23	Oct 10/2008				
O 24	Oct 10/2008				
A 25	Oct 10/2008				
A 26	BLANK				

A = Added, R = Revised, O = Overflow, D = Deleted

EFFECTIVE PAGES

Page 1
Oct 10/2008

D634T501



767

ILLUSTRATED TOOL AND EQUIPMENT MANUAL

<u>Part No.</u>	<u>Title</u>	<u>Subject</u>
A00004	DATA SHEET - LWR CARGO COMPARTMENT DOOR/THRESHOLD CONFIGURATION	06-00-01
A07001-1, -11	JACK ADAPTER - FORWARD BODY	07-00-01
A07002-1, -11, -12	EMERGENCY JACKING EQUIPMENT - NOSE LANDING GEAR	07-10-02
A07003-1	JACK ADAPTER - OUTBOARD WING	07-00-02
A07004-1, -8	JACKING BAR SET - MAIN LANDING GEAR AXLE	07-00-03
A07005-1, -2	HOIST ADAPTER - AIRPLANE RECOVERY	07-00-04
A07006-1	TORQUE MULTIPLIER EQUIPMENT - TENSION BOLTS, VERTICAL FIN	55-30-02
A07007-33	SLING - VERTICAL FIN INSTALLATION AND REMOVAL	55-30-01
A07008-1, -19, -25, -26, -27, -28, -29	JACKING BAR EQUIPMENT - MAIN LANDING GEAR AXLE	07-00-05
A07009-1	JACKING BAR EQUIPMENT - MAIN LANDING GEAR AXLE	07-00-06
A07011-1, -2	HOIST EQUIPMENT - AIRPLANE RECOVERY, WITHOUT MAIN LANDING GEAR (MLG)	32-10-57
A09002	DATA SHEET - 767 TOWBAR	09-00-01
A09003-1, -2	LOCK PIN - NOSE GEAR TOWING LEVER	09-00-02
A10002-1, -9	REMOVAL/INSTALLATION POLE - PITOT-STATIC PROBE COVER	10-00-01
A12001-1, -14	FUEL SAMPLING EQUIPMENT	12-20-01
A12004-40	PLATFORM - ACCESS, MLG WHEEL WELL	12-20-03
A12005-1	LUBRICATION ADAPTER - ATTACH FITTING, WING/NACELLE	12-20-02
A12006-1	LADDER - ACCESS DOOR, E/E BAY	12-00-01
A12007-11, -20, -23	ADAPTER - TIRE INFLATION	12-10-01
A12008-1	LUBRICATION ADAPTER - AFT WHEEL WELL BULKHEAD, SPHERICAL BEARING	12-20-04
A20001-65, -82, -83	BOOM HOIST - GENERAL	20-00-01
A20002-4	ATTACH FITTING SET - WING AND HORIZONTAL STABILIZER, SAFETY HARNESS	20-10-01
A20004-2, -68, -72, -76, -78	SET - RIG PIN	20-00-04
A20005-9	CLAMP - CONTROL CABLE	20-10-02
A20006-32	INSTALLATION SET - NAS1368 GROMMET	20-00-07
A20007-1	TEST TOOL - STRIPPING FORCE, WRAPPED WIRE CONNECTION	20-10-03
A20008-1	SOCKET SET - SPHERICAL BEARING	20-00-17
A20011-64, -76	BUSHING REMOVAL AND INSTALLATION KIT - LANDING GEAR LOCK LINK	20-00-25
A20012-10, -11	SWAGING TOOL - BEARING	20-00-28
A20013-1	WORK TABLE - PILOT'S AISLE STAND	20-00-33
A21001-44, -45	HOIST ADAPTERS - AIR CONDITIONING PACK	21-50-01

NUMERICAL INDEX



767

ILLUSTRATED TOOL AND EQUIPMENT MANUAL

<u>Part No.</u>	<u>Title</u>	<u>Subject</u>
A21002-1	REMOVAL/INSTALLATION EQUIPMENT - AVIONICS COOLING REFRIGERATION UNIT	21-50-02
A21004-1	TEST BOX - CURRENT SENSOR FAN, ENVIRONMENTAL CONTROL SYSTEM	21-20-01
A21007-1	HOLD-OPEN ROD - RAM AIR DOOR, FLIGHT DISPATCH	21-50-04
A21008-1	HOLD OPEN SET - CABIN AIR OUTFLOW, 767	21-30-02
A21009-1	BLANKING PLATE - EQUIPMENT COOLING MONITOR	21-50-05
A21010-57, -69, -70, -72	VACUUM TANK - PRESSURE RELIEF VALVE TEST	21-30-01
A21011-1, -6	TEST EQUIPMENT - LOW LIMIT VALVE	21-50-07
A21012-1	TEST GAUGE - INSTRUMENT COOLING MONITOR SYSTEM	21-50-03
A21013-50	HOIST ADAPTER EQUIPMENT - AIR CONDITIONING PACK	21-50-08
A21014-1	LOCK - HOLD OPEN, OUTFLOW VALVE	21-30-03
A22001-15, -22	REMOTE CONTROL UNIT - MAINTENANCE CONTROL DISPLAY PANEL	22-00-01
A22003-22	COMPONENT MAINTENANCE EQUIPMENT - AUTOTHROTTLE CLUTCH	22-30-01
A22004-1	CHECKING FIXTURE - AUTOTHROTTLE GEARBOX	22-30-02
A22005-1, -9	BREAKOUT BOX - ATS LOADBOARD YAW DAMPER MONITOR RECEIVER, PCA	22-20-01
A22006-1	BREAKOUT BOX - FAULT DISPLAY PCA, YAW DAMPER	22-20-02
A22007-1	BREAKOUT BOX - ARINC/FILTER/FUSE PCA, YAW DAMPER	22-20-03
A22008-1, -17, -26	RIGGING EQUIPMENT - AUTOTHROTTLE BRAKE	22-30-03
A23001-1, -4, -8, -9	ACOUSTIC COUPLER - ATTENDANT'S HANDSET	23-40-01
A23002-1, -14	TEST BOX ASSEMBLY - TV ANTENNA COUPLER	23-30-01
A23003-29, -30, -41, -42	TEST BOX - PRINTED CIRCUIT CARDS, AUDIO ACCESSORY UNIT	23-40-03
A23004-1	TEST BOX - FLIGHT ATTENDANT INTERPHONE	23-40-02
A23006-45, -46, -47	TEST BOX - AUDIO ACCESSORY UNIT	23-40-05
A23009-20, -31	TEST BOX - AUDIO SELECTOR PANEL	23-40-04
A23011-1	TEST BOX - POWER SUPPLY, AUDIO ACCESSORY UNIT	23-10-01
A24001-1, -5	HOIST EQUIPMENT - LRU'S MAIN EE BAY	24-00-02
A24004-1, -2	TEST RELAY - ISOLATION REQUEST, POWER DISTRIBUTION SYSTEM	24-20-01
A24005-1	LOAD BANK - DC GENERATION SYSTEM	24-30-01
A24006-1	HOIST EQUIPMENT - APU BATTERY	24-00-04
A24007-1	SUPPORT - ELECTRICAL GROUND POWER CABLE	24-40-02
A24008-19, -27, -37	TEST BOX - HYDRAULIC MOTOR DRIVEN GENERATOR CONTROL UNIT	24-20-02
A24011-1	HOIST ADAPTER ASSEMBLY - INTEGRATED DRIVE GENERATOR	24-10-05

NUMERICAL INDEX



767

ILLUSTRATED TOOL AND EQUIPMENT MANUAL

<u>Part No.</u>	<u>Title</u>	<u>Subject</u>
A24012-1	DISPATCH KIT - INTEGRATED DRIVE GENERATOR, PRATT AND WHITNEY ENGINES	24-10-08
A25001-33	REPLACEMENT EQUIPMENT - AIR CHILLER, FWD GALLEY	25-30-01
A25002-1	SLIDE BAR - AFT GALLEY AIR CHILLER	25-30-02
A25003-24	SIMULATOR - DOOR OPENING ACTUATOR, OFF-WING ESCAPE SLIDE	25-60-01
A25004-1	SIMULATOR EQUIPMENT - OFF-WING ESCAPE SLIDE DOOR LATCH OPENING ACTUATOR	25-60-02
A25005-29	SIMULATOR - GAS PRESSURE VESSEL	25-60-03
A25008-1	INSTALLATION EQUIPMENT - LUGGAGE BIN SNUBBER	25-20-01
A25009-2	REMOVAL TOOL - BALL TRANSFER UNIT	25-50-01
A25011-2	WRENCH - INTEGRATOR, OFF-WING ESCAPE SYSTEM	25-60-04
A25012-19, -29	ELECTRICAL TEST EQUIPMENT - OFF-WING ESCAPE SLIDE SYSTEM	25-60-05
A25014-29	SIMULATOR EQUIPMENT - LATCH OPENING, OFF-WING ESCAPE SYSTEM	25-60-06
A25016-1	SAFETY EQUIPMENT - ESCAPE SYSTEM, OFF-WING	25-60-07
A25017-1	ADJUSTOR - FRICTION BALL CATCH	25-10-01
A25018-10	WRENCH SET - STOWAGE BIN RELEASE	25-20-02
A25019-1	GAGE - ACTUATOR, LATCH OPENING, OFF-WING ESCAPE SYSTEM	25-60-08
A25020-1, -4, -8	GAGE-INSPECTION, SEAT TRACK, FLIGHT CREW	25-20-03
A25021-1	PUSH PLATE - SPRING LOADED PDU	25-50-02
A25022-1	TEST EQUIPMENT - PDU, GUIDES, AND ROLLOUT STOPS	25-50-03
A26001-165, -174, -187	ELECTRICAL TEST EQUIPMENT - BOTTLE SQUIB, FIRE EXTINGUISHER SYSTEM	26-20-01
A26002-36, -54	TEST BOX - TIME DELAY, CARGO FIRE EXTINGUISHER BOTTLE	26-20-02
A26003-7, -10	TEST EQUIPMENT - REGULATOR, CARGO FIRE EXTINGUISHING	26-20-03
A26004-1	PLUG EQUIPMENT - DISCHARGE NOZZLE, CARGO COMPARTMENT FIRE EXTINGUISHER	26-20-04
A26005-1	PLATFORM - MAINTENANCE, CARGO SIDEWALL	26-20-05
A27001-1, -2, -3, -4	PCA GAGES - INBD/OUTBD AILERON, RUDDER, ELEVATOR	27-30-04
A27003-23	LOCK SET - ACTUATOR, RUDDER	27-20-01
A27004-1, -2	HOIST ADAPTER - LEADING EDGE SLAT DRIVE	27-80-01
A27005-1	LOCK - OUTBOARD AILERON	27-10-01
A27006-41	HOIST EQUIPMENT - HORIZONTAL STABILIZER TRIM ACTUATOR	27-40-01
A27007-1	GROUND LOCK - LEADING EDGE SLATS	27-80-02
A27009-7	LOCK - TRAILING EDGE FLAPS	27-50-01
A27010-11, -15	LOCK SET - CIRCUIT BREAKER	20-00-02
A27012-30	SLING EQUIPMENT - INBOARD/OUTBOARD ELEVATOR SEGMENT	27-30-03
A27013-1	DEACTIVATION EQUIPMENT - INBOARD AILERON	27-10-02

NUMERICAL INDEX



767

ILLUSTRATED TOOL AND EQUIPMENT MANUAL

<u>Part No.</u>	<u>Title</u>	<u>Subject</u>
A27015-1	REMOVAL/INSTALLATION SLING EQUIPMENT - INBOARD/ OUTBOARD AILERON	27-10-04
A27016-27	SLING EQUIPMENT - INBOARD TRAILING EDGE FLAP	27-50-02
A27017-41	SLING EQUIPMENT - LEADING EDGE SLAT	27-80-03
A27019-8	RESTRAINT - AFT FLAP TO INBD TRAILING EDGE FLAP	27-50-07
A27020-1	STRAIGHTEDGE - CONTROL WHEEL	27-10-05
A27021-29, -96, -98	ADAPTER EQUIPMENT - CONTROL WHEEL	27-10-06
A27022-75, -81	SLING EQUIPMENT - RUDDER INSTALLATION/REMOVAL	27-20-03
A27023-22	SPACER KIT - INBOARD/OUTBOARD SLAT INSTALLATION	27-80-04
A27024-29, -31, -47, -55	RIGGING BAR - AILERON	27-10-07
A27025-1	RIGGING EQUIPMENT - FORCE TRANSDUCER, ELEVATOR CONTROL	27-30-05
A27026-7	HOIST BRACKET - FISHPOLE HOIST FLAP PDU	27-00-01
A27027-53, -54	SLING EQUIPMENT - OUTBOARD TRAILING EDGE FLAP	27-50-03
A27028-11	CHECK FIXTURE - AILERON CONTROL LOAD LIMITER SPRING	27-10-09
A27029-28	REMOVAL/INSTALLATION FIXTURE - LOAD LIMITER AILERON CONTROL SPRING	27-10-08
A27030-66	TEST BOX - POWER SUPPLY, CSEU	27-00-04
A27035-1	ADAPTER - RUDDER/ELEVATOR FEEL ACTUATOR CYLINDER	27-30-07
A27036-22	TEST BOX - FLAP/SLAT ELECTRONIC UNIT (FSEU) POWER SUPPLY/ YAW DAMPER ELECTROMAGNETIC INTERFACE (EMI) FILTER	27-50-04
A27037-1	TEST EQUIPMENT - OUTBOARD AILERON LOCKOUT MECHANISM	27-10-10
A27038-1, -6, -10, -20	BREAKOUT BOX - PRINTED CIRCUIT CARD	27-00-03
A27039-1, -19, -26, -27	BREAKOUT BOX - BENCH TEST	27-00-02
A27040-18	CHECK EQUIPMENT - BEARING WIDTH	27-50-05
A27041-177	TEST EQUIPMENT - ELEVATOR FEEL AND CENTERING UNIT	27-30-09
A27042-1	FUNCTIONAL TEST EQUIPMENT - SPOILER ACTUATOR	27-60-02
A27043-1	TEST EQPMT FIXTURE - INBD/OUTBD SPOILER ACTUATOR	27-60-03
A27044-53	TEST BOX - CONVERTER, CSEU POWER SUPPLY	27-00-11
A27045-16	TEST BOX - NOISE, CSEU POWER SUPPLY	27-00-05
A27046-3, -4, -8, -99, -140, -141, -160, -163, -176, -177, -191, -192	TEST FIXTURE - POWER DRIVE COMPONENTS FLIGHT CONTROL	27-50-10
A27047-1	TEST BLOCK - SPOILER ACTUATOR VALVE CARTRIDGE	27-60-04
A27048-1, -2, -3, -40	FIXTURE - CHECK, GEARBOX BACKLASH	27-80-07
A27049-1	CHECK FIXTURE - LEADING EDGE SLAT ANGLE GEARBOX BACKLASH	27-80-05
A27051-1, -31	TOOL SET - TE FLAP DRIVE AND LE SLAT DRIVE GEARBOXES	27-80-08
A27052-1	TEST BOX - REGULATOR, CSEU POWER SUPPLY	27-00-06

NUMERICAL INDEX



767

ILLUSTRATED TOOL AND EQUIPMENT MANUAL

<u>Part No.</u>	<u>Title</u>	<u>Subject</u>
A27053-26, -29, -32	TEST BOX - MONITOR, CSEU POWER SUPPLY	27-00-07
A27054-14	FIXTURE-HOLDING, GEAR ASSEMBLY, LE SLAT DRIVE	27-80-22
A27055-1	FIXTURE - TRAILING EDGE FLAP DRIVE WORM GEAR SHIM THICKNESS	27-50-06
A27057-1, -9, -13	PROTRACTOR BRACKET EQUIPMENT - FEEL CENTERING AND TRIM INSTALLATION, RUDDER CONTROL	27-20-04
A27058-60	JIG EQUIPMENT - ELEVATOR FEEL AND CENTERING UNIT	27-30-10
A27059-1	BREAKOUT BOX - CHOPPER/REGULATOR POWER SUPPLY, CSEU	27-00-08
A27060-11	JIG EQUIPMENT - INBOARD AND OUTBOARD LEADING EDGE SLAT DRIVE AND TRAILING EDGE FLAP DRIVE POWER CONTROL UNIT	27-80-11
A27061-44, -46, -54	TOOL SET - TRAILING EDGE ROTARY ACTUATOR	27-50-09
A27062-1	TOOL SET - STABILIZER TRIM DRIVE	27-40-02
A27063-71, -91	BREAKOUT BOX EQUIPMENT - POSITION SENSORS, FLIGHT CONTROLS RIGGING	27-00-09
A27070-48, -61, -65, -80	BEARING INSTALLATION EQUIPMENT - ROTARY BEARING INSTALLATION EQUIPMENT - ROTARY LEADING EDGE SLAT DRIVE	27-80-12
A27071-48, -84, -123	TEST EQUIPMENT - ROTARY ACTUATOR TRAILING EDGE FLAP	27-50-13
A27072-55	TEST FIXTURE - STABILIZER TRIM DRIVE MECHANISM	27-40-03
A27073-1	SOCKET - THIN WALL, GEARBOX, INBOARD LEADING EDGE SLAT DRIVE	27-80-10
A27074-128, -146	LOCK SET - INBOARD AND OUTBOARD FLAP LINKAGE, TE	27-50-11
A27075-1	WRENCH - SPOILER ACTUATOR ASSEMBLY ADJUSTMENT	27-60-05
A27077-1	ADAPTER - LEADING EDGE SLAT DRIVE	27-80-14
A27078-7	SPLINE ADAPTERS - LEADING EDGE SLAT DRIVE ROTARY ACTUATORS AND GEARBOXES	27-80-15
A27079-78, -89, -96	TEST EQUIPMENT - POWER DRIVE UNIT, TE FLAP AND LE SLAT DRIVE	27-50-12
A27081-1, -2	READOUT AND CONTROL EQUIPMENT - FUNCTIONAL TEST STANDS	27-00-12
A27085-1	TEST BOX - ANALOG PRINTED CIRCUIT, RUDDER RATIO	27-00-13
A27085-1	SLING ASSEMBLY - STABILIZER TRIM DRIVE MECHANISM	27-40-04
A27086-10	SUPPORT FIXTURE - ELEVATOR SLAVE LINKAGE	27-30-12
A27087-1	WRENCH - CONTROL LEVER, SPEED BRAKE	27-60-06
A27088-6, -13	LINK - DUMMY TRIM ACTUATOR, AILERON	27-10-11
A27089-9	GAGE - RIGGING, LEADING EDGE SLAT OUTBOARD WING	27-80-16
A27092-84, -106	ACTUATOR/DEACTUATOR SET - PROXIMITY SENSORS	27-80-17
A27093-1, -27	TEST EQUIPMENT - TE FLAPS ASYMMETRY FAULT ISOLATION	27-50-14
A27094-1, -5	SPACER SET - PRELOAD, LEADING EDGE SLAT RIGGING	27-80-18
A27095-10	SCALE - CONTROL COLUMN ANGLE	27-40-05

NUMERICAL INDEX



767

ILLUSTRATED TOOL AND EQUIPMENT MANUAL

<u>Part No.</u>	<u>Title</u>	<u>Subject</u>
A27096-1	BREAKOUT BOX - SPOILER PANEL POSITION MONITOR AND RELAY CIRCUIT PCA'S	27-60-07
A27097-1	ADAPTER - PROTRACTOR, THRUST REVERSER LEVER	78-30-10
A27098-1	TEST BOX - BITE DISPLAY PCA, WARNING ELECTRONIC UNIT (WEU)	27-30-02
A27099-1	SHAFT CLAMP - TE FLAP DRIVE	27-50-15
A27100-1	TEST BOX - STICK NUDGER	27-00-14
A27101-5	WRENCH - ADJUSTMENT, INBOARD LEADING EDGE SLATS	27-80-06
A27102-7	ADAPTER - LEADING EDGE SLAT AND TRAILING EDGE FLAP, MANUAL DRIVE	27-80-19
A27105-9	AUXILIARY DETENT - FLAP ADJUSTMENT ASSEMBLY	27-50-16
A27106-1	BUSHING PULLER - OUTBOARD AILERON ACTUATOR	27-10-12
A27107-1	DUMMY LINK SET - FLAP LOAD RELIEF ACTUATOR	27-50-17
A27108-13	LOCK SET - SPOILER ACTUATOR	27-60-01
A27109-1	RIGGING BAR - RATIO CHANGER INSTALLATION, RUDDER CONTROL	27-20-05
A27110-1, -20	MOUNT EQUIPMENT - INBOARD AILERON RIGGING BAR	27-10-13
A27111-11	LOCK EQUIPMENT - ELEVATOR ACTUATOR	27-30-01
A27112-1	RIGGING EQUIPMENT - LEADING EDGE SLAT POSITION SENSOR SWITCH	27-80-13
A27114-1	REMOVAL/INSTALLATION EQUIPMENT - PIVOT BEARING, HORIZONTAL STABILIZER	55-10-06
A27115-34, -41	TEST EQUIPMENT - OUTBOARD AILERON LOCKOUT ACTUATOR	27-10-15
A27116-1	SLING - OUTBOARD SLAT PDU	27-80-21
A27117-1	TEST EQUIPMENT - LE SLAT 5 AND 8, INBOARD OFFSET GEARBOX	27-80-20
A27118-90	LOCK EQUIPMENT - INBOARD AND OUTBOARD TE, FLAP LINKAGE	27-50-19
A27119-1	HOLDING FIXTURE EQUIPMENT - GEAR ASSEMBLY, LE SLAT DRIVE	27-80-09
A27120-43	ASSEMBLY/DISASSEMBLY EQUIPMENT - ROTARY ACTUATOR TRAILING EDGE FLAP	27-50-20
A27121-1	TOOL SET - SEAL INSTALLATION	27-80-23
A27122-1	WRENCH EQUIPMENT - BEARING RETAINING NUT, INBOARD FLAP LINKAGE	27-50-21
A27123-1	MEASUREMENT EQUIPMENT BEVEL GEAR TEETH, STABILIZER TRIM ACTUATOR	27-40-06
A27124-1	FORCE EQUIPMENT - RUDDER FREEPLAY CHECK	27-20-06
A27125-1	MEASUREMENT TOOL - RUDDER AND ELEVATOR POWER CONTROL ACTUATOR	27-00-17
A28001-1	HOSE SET - MAIN AND OVERRIDE PUMP DEFUELING	28-10-02
A28002-6	DRAIN HOSE - FUEL SYSTEM SUMP	28-10-03
A28003-1, -43	VENTILATION EQUIPMENT - FUEL TANK	28-10-05
A28004-1	CHECK FIXTURE - SURGE TANK PRESSURE RELIEF VALVE	28-10-04

NUMERICAL INDEX



767

ILLUSTRATED TOOL AND EQUIPMENT MANUAL

<u>Part No.</u>	<u>Title</u>	<u>Subject</u>
A28005-24, -35, -42, -50	TEST EQUIPMENT - LEAK AND PRESSURE, APU FUEL LINE SHROUD	28-20-05
A28006-1, -22, -27	TEST BOX - FUEL LEVEL SENSORS SURGE TANK	28-20-02
A28007-39, -40	TEST BOX - FUEL QUANTITY INDICATING SYSTEM	28-40-01
A28008-1, -8	DRAIN HOSE - SUMP VALVE, CENTER AUXILIARY FUEL TANKS	12-10-05
A28009-8, -13	EXTENDER BOARD - SURGE TANK FUEL LEVEL SENSOR	28-40-03
A28010-1, -2	SPANNER WRENCH - FUEL SUMP DRAIN VALVE	28-10-12
A28011-48, -49, -50	TEST EQUIPMENT - PRESSURE/LEAKAGE, FUEL LINES AND FITTINGS	28-20-03
A28012-1	SPANNER WRENCH - FUEL SUMP DRAIN VALVE	28-10-14
A28013-10, -11	ADAPTER EQUIPMENT - AIR SUPPLY, SURGE TANK	28-10-16
A29001-1	HOIST ADAPTER - AIR-DRIVEN HYDRAULIC PUMP	29-00-01
A29002-6	LOCKING PIN - VALVE, HYDRAULIC RESERVOIR PRESSURIZATION SHUTOFF	29-00-02
A29003-49	TOOL SET - HYDRAULIC FILTER OVERHAUL	29-10-01
A29004-1	TOOL SET - HYDRAULIC FILTER MODULE OVERHAUL	29-10-02
A29005-1	SEALING CAP - PRESSURE TRANSMITTER MOUNT	29-30-01
A29006-19	TEST BOX - PRESSURE/THERMAL SWITCH	29-30-02
A30002-1	PLUG EQUIPMENT - THERMAL ANTI-ICING DUCT, WING PRESSURE SWITCH TEST	30-10-01
A30003-1	BREAKOUT BOX - VIEWPORT HEATER	30-40-03
A31003-33, -34	TEST BOX - WARNING ELECTRONICS UNIT (WEU) POWER SUPPLY	31-50-02
A31004-1	BREAKOUT BOX - WARNING ELECTRONICS UNIT POWER SUPPLY AND MONITOR	31-50-04
A31005-1, -14	TEST BOX - WEU POWER SUPPLY NOISE	31-50-01
A31006-7	SHORTING MODULE - MASTER WARNING PRINTED CIRCUIT ASSEMBLY	31-50-03
A31007-1, -30, -49, -59	ADAPTER CABLE - DIGITAL FLIGHT RECORDER SYSTEM TESTER	31-30-01
A31008-1	TEST CABLE - WEU POWER SUPPLY	31-00-01
A31010-1	BREAKOUT BOX - POWER SUPPLY UNIT, WEU	31-00-02
A32001-1	BRAKE DISCONNECT ASSEMBLY - FLIGHT DISPATCH	32-40-03
A32002-14	SPRING EXTENDER - DRAG STRUT, MAIN LANDING GEAR (MLG)	32-10-01
A32003-1	SPRING COMPRESSOR - SIDE STRUT, MAIN LANDING GEAR (MLG)	32-10-03
A32004-1, -4, -5	WRENCH ADAPTER - GLAND NUT, MAIN LANDING GEAR (MLG)	32-30-01
A32005-54	REPLACEMENT EQUIPMENT - SEAL, LOWER BEARING, MAIN LANDING GEAR (MLG)	32-10-05
A32006-75, -77	SLING EQUIPMENT - RETRACT ACTUATOR, MAIN LANDING GEAR (MLG)	32-10-06
A32007-17	PROTECTOR EQUIPMENT - AXLE AND AXLE THREAD, MAIN LANDING GEAR (MLG)	32-10-07

NUMERICAL INDEX



767

ILLUSTRATED TOOL AND EQUIPMENT MANUAL

<u>Part No.</u>	<u>Title</u>	<u>Subject</u>
A32008-51, -53	SLING EQUIPMENT - MAIN LANDING GEAR (MLG) COMPONENTS	32-10-11
A32010-1	PIN PULLER - RETRACT ACTUATOR, MAIN LANDING GEAR (MLG)	32-10-08
A32011-1	PULLER - TRUNNION PINS, NOSE LANDING GEAR	32-20-01
A32012-6, -9, -12, -13	WRENCH - WHEEL RETAINING NUT, MAIN LANDING GEAR (MLG)	32-10-09
A32013-1	PIN PULLER - UPPER DRAG BRACE, NOSE LANDING GEAR	32-20-02
A32014-1, -2	DOWNLOCK - MAIN LANDING GEAR (MLG) AND NOSE LANDING GEAR (NLG)	32-20-03
A32015-9	INSTALLATION/REMOVAL TOOL - DOWNLOCK, MAIN LANDING GEAR (MLG) AND NOSE LANDING GEAR (NLG)	32-10-10
A32016-17	PIN PULLER - BRAKE ROD, MAIN LANDING GEAR	32-40-01
A32017-1	PULLER EQUIPMENT - FUSE BOLTS, FORWARD TRUNNION SUPPORT, MAIN LANDING GEAR (MLG)	32-10-17
A32018-1	SPRING EXTENDER - LOCK LINK, NOSE LANDING GEAR	32-20-06
A32020-1	HOIST ADAPTER - DRAG STRUT, NOSE LANDING GEAR	32-20-08
A32021-1	WRENCH ADAPTER - GLAND NUT, NOSE LANDING GEAR	32-20-04
A32022-1	PROTECTOR - AXLE, NOSE LANDING GEAR (NLG)	32-20-05
A32023-1	SLING - RETRACT ACTUATOR, NOSE LANDING GEAR (NLG)	32-20-09
A32025-1	WRENCH ADAPTER - WHEEL RETAINING AXLE NUT, NOSE LANDING GEAR	32-40-02
A32026-60	REMOVAL/INSTALLATION EQUIPMENT - TRUNNION PIN, MAIN LANDING GEAR (MLG)	32-10-18
A32027-53, -175, -176, -178	PUMP - RETRACTION/EXTENSION LANDING GEAR ACTUATOR	32-30-02
A32028-6	RETENTION STRAP - INNER CYLINDER - MAIN LANDING GEAR (MLG) AND NOSE LANDING GEAR (NLG)	32-10-14
A32029-26, -48, -50	REPLACEMENT EQUIPMENT - LOWER SEAL, NOSE LANDING GEAR (NLG)	32-20-16
A32030-4, -6, -10, -12, -18, -21	LOCK - MAIN LANDING (MLG) GEAR DOOR	32-10-15
A32031-4, -5	TURNBUCKLE - TRUCK POSITION ACTUATOR, MAIN LANDING GEAR (MLG)	32-10-16
A32032-39, -52, -64, -65	REMOVAL/INSTALLATION EQUIPMENT - MAIN LANDING GEAR (MLG)	32-10-19
A32033-17	SLING - MAIN LANDING GEAR (MLG)	32-10-02
A32034-1	WRENCH ADAPTER - STEERING NUT, NOSE LANDING GEAR (NLG)	32-20-10
A32035-1	WRENCH - STEERING ACTUATOR, NOSE LANDING GEAR (NLG)	32-20-11
A32036-43, -66	HOIST EQUIPMENT - NOSE LANDING GEAR (NLG) INSTALLATION/REMOVAL	32-20-17
A32038-1, -23	TRANSPORTATION DOLLY - NOSE LANDING GEAR (NLG), 757 AND 767	32-20-18

NUMERICAL INDEX



767

ILLUSTRATED TOOL AND EQUIPMENT MANUAL

<u>Part No.</u>	<u>Title</u>	<u>Subject</u>
A32039-1	REMOVAL TOOL - MAIN LANDING GEAR (MLG) BOGIE PIVOT PIN	32-10-20
A32040-4, -7, -10, -12, -15	WRENCH - ROD END	32-20-20
A32041-1	TORQUE ADAPTER - CYLINDER, NOSE LANDING GEAR (NLG) RETRACT ACTUATOR	32-20-21
A32042-1	FIXTURE - FUNCTIONAL TEST, SIDE STRUT SPRING ASSEMBLY	32-30-03
A32043-1	TEST FIXTURE - ACTUATOR, MAIN LANDING GEAR (MLG) DOOR LATCH	32-10-21
A32045-1, -2, -3, -8, -12, -24, -25, -34, -40, -45, -46, -48, -53, -57, -58, -65, -66, -70, -75, -76, -77, -78, -79, -87, -88, -90, -91	WRENCHES - SPANNER	20-00-03
A32046-17	FISHPOLE HOIST ATTACH BRACKET - MAIN LANDING GEAR (MLG) DOOR	32-10-22
A32047-1, -29	COMPONENT MAINTENANCE EQUIPMENT - SHOCK STRUT, NOSE LANDING GEAR (NLG)	32-20-22
A32050-1	TORQUE FIXTURE - ACTUATOR PISTON, MAIN LANDING GEAR (MLG) AND NOSE LANDING GEAR (NLG)	32-30-04
A32051-1	COMPONENT MAINTENANCE EQUIPMENT - SHOCK STRUT, MAIN LANDING GEAR (MLG)	32-10-23
A32052-1	TEST FITTING - ACTUATOR, NOSE LANDING GEAR (NLG) STEERING	32-50-01
A32053-1	SPANNER WRENCH - RETAINING NUT, STEERING ACTUATOR, NOSE LANDING GEAR (NLG)	32-50-02
A32054-1	PIN - ALIGNMENT, TRUCK AXLE BEAM, MAIN LANDING GEAR (MLG)	32-10-04
A32055-1	LOCATING JIG - SEQUENCE VALVE, MAIN LANDING GEAR (MLG) OPERATED	32-10-26
A32056-1	STAND EQUIPMENT - MAIN LANDING GEAR (MLG) BUILDUP	32-10-24
A32057-1, -40	BUILDUP STAND - NOSE LANDING GEAR (NLG)	32-20-14
A32058-1	HOLDING FIXTURE - ACTUATOR LOCK, NOSE LANDING GEAR (NLG)	32-20-13
A32059-13, -27	HOLDING EQUIPMENT - ACTUATOR, MAIN LANDING GEAR (MLG) DOOR	32-30-07
A32060-1	TEST FIXTURE - ACTUATOR, WHEEL BRAKE	32-40-04
A32061-1	BACKLASH CHECK EQUIPMENT - NOSE LANDING GEAR (NLG) STEERING GEARBOX	32-50-03
A32063-7	TEST FIXTURE - SIDE AND DRAG BRACE LOCK ACTUATOR, MAIN LANDING GEAR (MLG)	32-10-13
A32064-1	FIXTURE - TEST, MAIN LANDING GEAR (MLG) DOOR ARMING LOCKOUT ACTUATOR	32-10-25
A32065-1	RESTRAINING WRENCH - MAIN LANDING GEAR (MLG) RETRACT ACTUATOR SUPPORT PIN	32-30-05

NUMERICAL INDEX



767

ILLUSTRATED TOOL AND EQUIPMENT MANUAL

<u>Part No.</u>	<u>Title</u>	<u>Subject</u>
A32066-1	DRAIN EQUIPMENT - SHOCK STRUT, MLG/NLG	12-10-03
A32067-1, -11, -13	PULLER EQUIPMENT - BUSHING, MAIN LANDING GEAR (MLG) BOGIE BEAM	32-10-29
A32068-7	TEST STAND - TRUCK POSITIONER, MAIN LANDING GEAR (MLG)	32-30-06
A32069-1, -7	WRENCH ADAPTER - RETAINER NUT, ANTI-SKID TRANSDUCER	32-40-05
A32070-1	TORQUE ADAPTER - SNUBBER NUT	32-30-08
A32071-1	COMPRESSION TOOL - SPRING CARTRIDGE NOSE WHEEL STEERING	32-50-04
A32072-1	FIXTURE - FUNCTIONAL TEST, NOSE LANDING GEAR STEERING ACTUATOR	32-50-05
A32073-1	RIGGING BAR - MAIN GEAR SIDE STRUT	32-10-27
A32074-1	BREAKOUT BOX - RELAY SYSTEM, AIR/GROUND	32-00-02
A32075-1, -9, -10	ADAPTER - ANTI-SKID TRANSDUCER SPIN-UP	32-40-06
A32076-5	CLAMP EQUIPMENT - PISTON ROD, MAIN LANDING GEAR TRUCK POSITIONER ASSEMBLY	32-30-09
A32077-1	GAUGE - MAIN LANDING GEAR (MLG) DOOR, OPEN POSITION	32-10-30
A32078-1	ADAPTER SET - RETAINING NUT, ACTUATOR SIDE AND DRAG BRACE, MAIN LANDING GEAR (MLG)	32-30-10
A32079-1	PULLER EQUIPMENT - BRAKE SLEEVE, MAIN LANDING GEAR (MLG) AXLE	32-10-31
A32080-1	BRAKE DISCONNECT - FLIGHT DISPATCH	32-40-13
A32081-1	PLUG - BUSHING INSTALLATION, MAIN LANDING GEAR (MLG) BOGIE	32-10-32
A32082-1	GUIDE - PIVOT PIN, MAIN LANDING GEAR (MLG)	32-10-33
A32083-12	AXLE PULLER - MAIN LANDING GEAR (MLG)	32-10-34
A32084-1	HOLDING FIXTURE - PISTON ROD, NOSE LANDING GEAR (NLG) LOCK ACTUATOR	32-30-11
A32086-1	JIG - DOWNLOCK STOP SHIM ADJUSTMENT	32-10-35
A32087-1	FIXTURE - HOLDING, MAIN LANDING GEAR RETRACT ACTUATOR	32-30-13
A32088-7	MAINTENANCE LOCK - RETRACTABLE TAIL SKID	32-70-01
A32089-1	SWAGING FIXTURE - PISTON ROD, MAIN LANDING GEAR (MLG)	32-10-37
A32090-14	HOIST EQUIPMENT - TAIL SKID SHOCK STRUT	32-70-02
A32091	HOLE SAW	20-00-22
A32092-1	GAGE EQUIPMENT - RIGGING, BRAKE QUADRANT, MAIN LANDING GEAR (MLG)	32-10-38
A32094-1	GAUGE - DOWN LOCK LINK ADJUSTMENT, NOSE LANDING GEAR (NLG)	32-20-19
A32095-1	WRENCH - BEARING RETAINING BOLT, MAIN LANDING GEAR (MLG)	32-10-39
A32096-70, -86	RIGGING EQUIPMENT - LANDING GEAR, AIR/GROUND SENSORS	32-60-01

NUMERICAL INDEX

Page 10
Oct 10/2008

D634T501



767

ILLUSTRATED TOOL AND EQUIPMENT MANUAL

<u>Part No.</u>	<u>Title</u>	<u>Subject</u>
A32097-1	PROTECTOR EQUIPMENT - EXTERNALLY THREADED AXLE, NOSE LANDING GEAR (NLG)	32-20-12
A32098-1, -12	PROTECTOR EQUIPMENT - AXLE, MAIN LANDING GEAR (MLG)	32-10-40
A32099-38, -77, -78	SPRING EXTENDER EQUIPMENT	32-10-41
A32100-1	INSTALLATION EQUIPMENT - BRAKE SLEEVE, MAIN LANDING GEAR (MLG)	32-40-07
A32101-1	WRENCH ADAPTER - AXLE NUT, NOSE LANDING GEAR	32-40-08
A32102-1, -25	ACTUATOR SET - PROXIMITY SENSOR	32-60-02
A32103-1	LOCKOUT PIN - FORWARD AND AFT LOCK LINK, RETRACTABLE TAIL SKID	32-70-03
A32104-1	PULLER EQUIPMENT - FUSE PIN, FORWARD TRUNNION, MAIN LANDING GEAR (MLG)	32-10-50
A32105-1	SLING EQUIPMENT - DRAG AND SIDE STRUT REMOVAL/INSTALLATION, MAIN LANDING GEAR (MLG)	32-10-12
A32106-1	SHOCK STRUT EQUIPMENT - COMPONENT MAINTENANCE, MAIN LANDING GEAR (MLG)	32-10-45
A32107-1	REPLACEMENT EQUIPMENT - LOWER BEARING SEALS, MAIN LANDING GEAR (MLG)	32-10-52
A32108-1, -2	SLING EQUIPMENT - RETRACT ACTUATOR, MAIN LANDING GEAR (MLG)	32-10-49
A32109-41	PIN INSTALLATION/REMOVAL KIT - MAIN LANDING GEAR (MLG)	32-10-53
A32110-1	PIN PULLER EQUIPMENT - BRAKE ROD, MAIN LANDING GEAR	32-10-56
A32111-1	RIGGING TUBE EQUIPMENT - SIDE STRUT, MAIN LANDING GEAR (MLG)	32-10-47
A32112-1	REMOVAL/INSTALLATION GUIDE EQUIPMENT - AFT TRUNNION, MAIN LANDING GEAR (MLG)	32-10-54
A32113-1	PIN PULLER EQUIPMENT - RETRACT ACTUATOR, MAIN LANDING GEAR (MLG)	32-30-16
A32114-64	TRUCK POSITION RETAINER AND OLEO LOCK EQUIPMENT - MAIN LANDING GEAR (MLG)	32-10-58
A32115-1, -2, -6	OVERHEAD INSTALLATION/REMOVAL EQUIPMENT - MAIN LANDING GEAR (MLG)	32-10-51
A32116-1	REMOVAL EQUIPMENT - MAIN LANDING GEAR (MLG) BOGIE PIVOT PIN	32-10-48
A32117-1	LOCATING JIG - SEQUENCE VALVE, MAIN LANDING GEAR (MLG) OPERATED	32-30-14
A32118-1	FISHPOLE HOIST ATTACH BRACKET EQUIPMENT - MAIN LANDING GEAR (MLG) DOOR	32-10-59
A32119-1	TEST STAND ASSEMBLY - TRUCK POSITIONER, MAIN LANDING GEAR (MLG)	32-30-15

NUMERICAL INDEX

Page 11
Oct 10/2008

D634T501



767

ILLUSTRATED TOOL AND EQUIPMENT MANUAL

<u>Part No.</u>	<u>Title</u>	<u>Subject</u>
A32120-1	TORQUE ADAPTER SET - ACTUATOR COMPONENTS, MAIN LANDING GEAR (MLG)	32-10-55
A32121-1	FIXTURE EQUIPMENT - LANDING GEAR ACTUATOR ASSEMBLIES	32-10-60
A32122-1	FIXTURE EQUIPMENT - RETRACT ACTUATOR, MAIN LANDING GEAR (MLG)	32-30-18
A32123-1	RIGGING ASSEMBLY - AIR/GROUND SENSORS, RIGHT HAND MAIN LANDING GEAR (MLG)	32-60-03
A33001-1	TEST BOX - MASTER DIM AND TEST PRINTED CIRCUIT (PC) CARD	33-10-01
A33003-359	BREAKOUT BOX - MULTIPURPOSE	33-00-02
A33004-32	TEST BOX - AUTOBRIGHT SENSOR	33-00-01
A34001-1, -4	WARNING EQUIPMENT - AIR TRAFFIC CONTROL (ATC), DISTANCE MEASURING EQUIPMENT (DME), VERY HIGH FREQUENCY (VHF) ANTENNA AND DRAIN MAST	34-50-01
A34003-1, -43, -46	TEST BOX - REAR MODULE AND CONTROL PANEL, AIR TRAFFIC CONTROL (ATC)	34-50-07
A34004-27, -30	TEST BOX - FRONT MODULE, AIR TRAFFIC CONTROL (ATC)	34-50-08
A34005-1	TEST BOX - AUTOMATIC DIRECTION FINDER (ADF) FRONT MODULE ASSEMBLY	34-50-04
A34006-1, -21	TEST BOX - AUTOMATIC DIRECTION FINDING (ADF) CONTROL PANEL AND REAR MODULE	34-50-05
A34007-33, -36	TEST BOX - REAR MODULE AND CONTROL PANEL, INSTRUMENT LANDING SYSTEM (ILS)	34-50-06
A34008-1	TEST BOX - FRONT MODULE, INSTRUMENT LANDING SYSTEM (ILS)	34-30-01
A34009-29	TEST BOX - REAR MODULE AND CONTROL PANEL, VERY HIGH FREQUENCY OMNI RANGE/DISTANCE MEASURING EQUIPMENT (VOR/DME)	34-50-02
A34010-21	TEST BOX - FRONT MODULE, VERY HIGH FREQUENCY OMNI RANGE/DISTANCE MEASURING EQUIPMENT (VOR/DME)	34-50-03
A34011-1, -112, -119, -165	BREAKOUT BOX EQUIPMENT - ARINC 600, LINE MAINTENANCE	34-00-02
A34012-1, -19, -24	TEST FIXTURE - ANGLE OF ATTACK	34-10-01
A34013-1, -18	TEST BOX - POWER SUPPLY CONTROL PANEL	34-00-01
A34014-14	TEST BOX - POWER SUPPLY CONTROL PANEL	34-30-02
A34015-26, -27, -35	TEST BOX - POWER INTERRUPT/PULSE	34-50-09

NUMERICAL INDEX

Page 12
Oct 10/2008

D634T501



767

ILLUSTRATED TOOL AND EQUIPMENT MANUAL

<u>Part No.</u>	<u>Title</u>	<u>Subject</u>
A34016-1, -2, -5, -7, -8, -9, -10, -11, -16, -21, -22, -23, -24, -25, -26, -27, -28, -30, -33, -34, -35, -36, -38, -42, -44, -46, -47, -48, -49, -54, -59, -60, -61, -62, -63, -64, -65, -67, -69, -72, -73, -175, -176, -181, -186	BREAKOUT BOX EQUIPMENT - ARINC 600, LINE MAINTENANCE	34-10-03
A35001-10	RETRACTION EQUIPMENT - FIRING PIN, OXYGEN SYSTEM	35-00-01
A35002-7, -10	DOOR RETAINER - PASSENGER SUPPORT UNIT (PSU) OXYGEN	35-20-01
A36001-1, -24, -44, -45	REMOVAL/INSTALLATION EQUIPMENT - ENGINE PRECOOLER	36-10-02
A36003-173	PLUG SET - PNEUMATIC DUCTS HYDROSTATIC PRESSURE TEST	36-10-03
A36004-15, -20	INSTALLATION EQUIPMENT - CF6-80C2B BALL JOINT	36-10-04
A36005-1, -15	HOLD OPEN EQUIPMENT - PRESSURE REGULATING AND SHUT-OFF VALVE (PRSOV)	36-10-06
A36006-1	DUMMY CHECK VALVE - INTERMEDIATE PRESSURE (IP) PNEUMATIC SYSTEM, DISPATCH EQUIPMENT	36-00-01
A36007-1	TEST EQUIPMENT - INTERMEDIATE PRESSURE (IP) DUMMY CHECK VALVE	36-00-02
A36008-1	PRESSURE TEST EQUIPMENT - DUCT ASSEMBLY	36-10-11
A36009-1	PRESSURE TEST EQUIPMENT - DUCT ASSEMBLY	36-10-13
A36010-1	PRESSURE TEST EQUIPMENT - DUCT ASSEMBLY	36-10-07
A36011-1	PRESSURE TEST EQUIPMENT - DUCT ASSEMBLY	36-10-08
A36012-1	PRESSURE TEST EQUIPMENT - DUCT ASSEMBLY	36-10-09
A36013-1	PRESSURE TEST EQUIPMENT - DUCT ASSEMBLY	36-10-10
A36014-1	PRESSURE TEST EQUIPMENT - DUCT ASSEMBLY	36-10-15
A36015-1	PRESSURE TEST EQUIPMENT - DUCT ASSEMBLY	36-10-16
A36016-1	PRESSURE TEST PLUG - DUCT ASSEMBLY	36-10-12
A36017-1	PLUG - DUCT, PROOF PRESSURE TEST	36-10-17
A36018-1	PLUG EQUIPMENT - DUCT, PROOF PRESSURE TEST	36-10-18
A36019-1	PLUG EQUIPMENT - DUCT, PROOF PRESSURE TEST	36-10-19
A36020-1	PLUG EQUIPMENT - DUCTS, PROOF PRESSURE TEST	36-10-20
A36021-1	ADAPTER CABLE - BITE MODULE, AIR SUPPLY SYSTEM	36-00-04
A36022-1	REMOVAL/INSTALLATION EQUIPMENT - RB211 PRECOOLER	36-10-21
A38001-16, -22	PLUGS - VENT, VACUUM WASTE SYSTEM	38-30-01
A38002-1	TEST BOX - SIGNAL UNIT PRINTED CIRCUIT ASSEMBLY (PCA) POTABLE WATER	38-10-01
A38003-20	BLOCKAGE REMOVER - VACUUM TOILET	38-30-02
A38004-29	CLEANER EQUIPMENT - WASTE TANK SENSORS	38-30-03

NUMERICAL INDEX

Page 13
Oct 10/2008

D634T501



767

ILLUSTRATED TOOL AND EQUIPMENT MANUAL

<u>Part No.</u>	<u>Title</u>	<u>Subject</u>
A38005-1, -7	ROOTER - WASTE WATER DRAIN LINE	38-30-04
A38006-1	TESTER - TOILET VACUUM	38-30-05
A38007-1	PLUG - VACUUM WASTE SYSTEM	38-30-06
A38009-1, -11	SENSOR CLEANER - LAVATORY WASTE TANK	38-30-07
A38010-1, -11	TEST CABLE - POTABLE WATER QUANTITY TRANSMITTER	38-10-02
A38011-1	PLUG EQUIPMENT - DRAIN MAST, WASTE WATER	38-30-09
A38012-1, -18, -31, -32, -39, -40	PUMP EQUIPMENT - VACUUM LAVATORY SYSTEM	38-30-13
A38014-1	DOOR SWITCH ACTUATOR - POTABLE WATER SERVICE PANEL	38-10-04
A49001-3, -17, -73, -78, -83, -84	CRADLE - AUXILIARY POWER UNIT (APU)	49-00-01
A49002-1, -2	LIFTING EYE - APU GENERATOR	24-20-03
A49003-1, -12	TRANSPORTATION DOLLY - AUXILIARY POWER UNIT (APU)	49-00-02
A49004-1	SUPPORT EQUIPMENT - AUXILIARY POWER UNIT	49-00-03
A49005-1, -12	SLING - AUXILIARY POWER UNIT (APU) SHOP HANDLING	49-00-04
A49006-26	HOIST EQUIPMENT - APU BATTERY	24-00-03
A49009-1	KIT - AUXILIARY POWER UNIT (APU) DEACTIVATION	49-10-02
A51001-19	SERVICE PLATFORM FORWARD OF THE AUXILIARY POWER UNIT (APU) DOOR	51-00-01
A51002-1	ALIGNMENT EQUIPMENT - AIRPLANE STRUCTURAL REPAIR	51-00-08
A51004-1	LADDER SET - EMPENNAGE, PRESSURE BULKHEAD	51-00-02
A51005-14	"OIL CAN" GAGE - PRESSURE BULKHEAD	51-00-03
A51006-26	MEASUREMENT EQUIPMENT - CHECK, SKIN SMOOTHNESS	51-00-04
A51007-1	MAINTENANCE PLATFORM EQUIPMENT - PRESSURE BULKHEAD ACCESS	51-00-06
A52002-1, -13	SAFETY BARRIER - ENTRY, MID-ENTRY OR SERVICE DOOR	52-10-01
A52003-1	LOCK - COUNTERBALANCE, ENTRY AND SERVICE DOORS	52-10-03
A52004-41, -42, -43	SLING EQUIPMENT - DOOR HANDLING	52-30-02
A52005-1	SAFETY BARRIER - CARGO DOOR, FORWARD/AFT	52-30-01
A52006-1	REPLACEMENT EQUIPMENT - BULK CARGO DOOR	52-30-03
A52007-1	SAFETY BARRIER - FORWARD LARGE CARGO DOOR	52-30-04
A52008-14	GROUND LOCK - ENTRY/SERVICE DOOR	52-10-04
A52009-1, -22	TEST FIXTURE - BUNGEE SPRING, CARGO DOOR	52-30-05
A52010-50, -51	CLAMP EQUIPMENT - SPRING INSTALLATION/REMOVAL, BULK CARGO DOOR	52-30-06
A52013-31	DUMMY WEIGHT SLIDE PACK - PASSENGER AND SERVICE DOOR	52-10-05
A52014-1	ADJUSTMENT SET - MAIN LATCH PIN, LARGE CARGO DOORS	52-30-08
A52015-1, -3	SHAFT SUPPORT - COUNTERBALANCE, OVERHEAD PASSENGER DOOR	52-10-10

NUMERICAL INDEX

Page 14
Oct 10/2008

D634T501



767

ILLUSTRATED TOOL AND EQUIPMENT MANUAL

<u>Part No.</u>	<u>Title</u>	<u>Subject</u>
A52016-1	RIGGING ADJUSTMENT EQUIPMENT - FORWARD AND AFT CARGO DOORS	52-30-09
A52017-1	TEST FIXTURE - GEARBOX, OVERHEAD PASSENGER DOOR COUNTERBALANCE	52-10-06
A52018-1, -15	TEST EQUIPMENT - LATCH LOCK, LARGE CARGO DOOR LATCH LOCK	52-10-02
A52019-1	DRIVER SET - HINGE PIN, LARGE CARGO DOOR	52-30-10
A52020-1	MANDREL EQUIPMENT - BEARING INSTALLATION	52-10-07
A52021-1	WRENCH - PROXIMITY SENSOR, BULK CARGO DOOR	52-30-11
A52022-1	CANOPY - FORWARD ENTRY DOOR	52-10-08
A52023-1	BACKLASH CHECK EQUIPMENT - MANUAL DRIVE, LARGE CARGO DOOR	52-30-12
A52025-1	SERVICE PLATFORM - SERVICE ACCESS DOOR	52-40-02
A52027-1	SAFETY BARRIER - AFT EMERGENCY EXIT	52-20-01
A52028-1	VERIFICATION EQUIPMENT - MAIN LATCH FITTINGS, LARGE CARGO DOOR	52-30-13
A52029-1	GAGE - GIRT BAR, CARRIER DRIVE	52-20-02
A52030-1	STAKING EQUIPMENT - GIRT BAR BEARING	52-10-09
A52031-1	RIGGING EQUIPMENT - MAIN DECK CARGO DOOR	52-30-14
A52032-17	ADJUSTMENT TOOL SET - LATCH PINS, MAIN DECK CARGO DOOR	52-30-15
A52033-1	VERIFICATION EQUIPMENT - MAIN LATCH FITTINGS, MAIN DECK CARGO DOOR	52-30-18
A52034-1	RIGGING EQUIPMENT - ROTARY ACTUATOR, MAIN DECK CARGO DOOR	52-30-20
A52035-1	DRIVER EQUIPMENT - INTERMEDIATE HINGE PINS, MAIN DECK CARGO DOOR	52-30-21
A52036-1	SLING EQUIPMENT - MAIN DECK CARGO DOOR	52-30-19
A52037-1	TEST BOX - FLIGHT DECK ACCESS SYSTEM (FDAS)	52-50-01
A53001-14	SLING - RADOME	53-50-01
A53002-5	SAFETY BARRIER - ELECTRICAL/ELECTRONIC (E/E) ACCESS HATCH	52-40-01
A54001-165, -167, -168	SLING EQUIPMENT - STRUT UNLOAD, PIN REMOVAL/INSTALLATION	54-50-01
A54002-9, -19	DRILL JIG - SIDE LINK, NACELLE STRUT	54-00-01
A54003-1, -41, -42, -51	SLING EQUIPMENT - STRUT REMOVAL AND INSTALLATION	54-50-02
A54004-27	PRELOAD EQUIPMENT - STRUT INSTALLATION	54-50-03
A54007-15	SLING - DIAGONAL BRACE UNLOAD/RB211-524 ENGINE	54-50-05
A54008-1, -13	PULLER EQUIPMENT - FUSE PIN	54-10-01
A54009-1	PROOFLOAD FIXTURE RB211-524H STRUT SLING	54-50-06
A54011-18, -24, -25, -26	REMOVAL/INSTALLATION KIT - MIDSPAR FUSE PIN	54-50-08

NUMERICAL INDEX

Page 15
Oct 10/2008

D634T501



767

ILLUSTRATED TOOL AND EQUIPMENT MANUAL

<u>Part No.</u>	<u>Title</u>	<u>Subject</u>
A54012-1	SLING EQUIPMENT - STRUT, RB211-524H	54-50-04
A55001-19, -22, -47	LOCK EQUIPMENT - HORIZONTAL STABILIZER	55-10-01
A55002-1	WRENCH - RETAINER NUT, BUSHING, ELEVATOR HINGE	27-30-06
A55003-1	ALIGNMENT EQUIPMENT - HINGE, INBOARD ELEVATOR	55-20-01
A55004-98	JACKING EQUIPMENT - HINGE, HORIZONTAL STABILIZER	55-10-03
A55005-1	REMOVAL EQUIPMENT - PIVOT BEARING, HORIZONTAL STABILIZER	55-10-02
A55006-1	TEMPLATE - BLADE SEAL FITTING, HORIZONTAL STABILIZER	55-10-04
A55007-1	REMOVAL/INSTALLATION EQUIPMENT - PIVOT BEARING HORIZONTAL STABILIZER	55-10-05
A56001-15	SLING SET - NUMBER 1 AND 3 COCKPIT WINDOW	56-00-01
A56004-60	REPAIR SET - NUMBER 2 WINDOW	56-10-01
A57001-1	JIG EQUIPMENT - REAMING, TRUNNION SUPPORT, MAIN LANDING GEAR (MLG)	32-10-36
A57002-1	REPLACEMENT EQUIPMENT - OUTBOARD TRAILING EDGE FLAP	57-50-01
A57003-1	LOCATING EQUIPMENT - WEDGE REPLACEMENT, INBOARD AND OUTBOARD LEADING EDGE SLAT	57-40-01
A57004-1	SLING - RAKED WING TIP, INSTALLATION AND REMOVAL	57-30-01
A57005-1	SOCKET ASSEMBLY - RETENTION NUT, MAIN LANDING GEAR ACTUATOR SUPPORT, WING	57-50-02
A57006-1	SPANNER WRENCH - SPECIAL NUT, INBOARD TRAILING EDGE MAIN FLAP	57-50-03
A57007-8	LUBRICATING EQUIPMENT - LEADING EDGE SLAT AUXILIARY ARM ROLLER BOLT	57-40-02
A57008-1	REMOVAL / INSTALLATION EQUIPMENT - MAIN LANDING GEAR BOTTLE PIN	57-50-04
A71001-191	BOOTSTRAP EQUIPMENT - PRATT AND WHITNEY ENGINES	71-00-01
A71002-50	SLING EQUIPMENT - THRUST REVERSER - JT9D-7R4D AND PW4000	78-30-01
A71003-25, -41, -53, -54	TORQUE EQUIPMENT - ENGINE MOUNTS, JT9D-7R4D AND PW4000 ENGINES	71-00-08
A71005-33	SLING EQUIPMENT - ENGINE INLET COWL	71-00-28
A71006-79	CRADLE - PRATT AND WHITNEY ENGINES, 90-INCH RAIL	71-00-14
A71007-27, -39	PROOF LOAD FIXTURE - BOOTSTRAP, PRATT AND WHITNEY ENGINES, JT9D7R4 AND PW4000	71-00-02
A71008-1, -64, -65	SLING EQUIPMENT - PRATT AND WHITNEY ENGINE	71-00-03
A71009-25, -26	SLING - THRUST REVERSER CF6-80A	78-30-02
A71011-262, -263	BOOTSTRAP EQUIPMENT - GENERAL ELECTRIC ENGINE	71-00-09
A71012-35	PROOF LOAD EQUIPMENT - CRADLE, PRATT AND WHITNEY ENGINE	71-00-04
A71013-19, -32, -40, -45, -55, -82, -88	HOIST ADAPTER - INTEGRATED DRIVE GENERATOR	71-00-05

NUMERICAL INDEX

Page 16
Oct 10/2008

D634T501



767

ILLUSTRATED TOOL AND EQUIPMENT MANUAL

<u>Part No.</u>	<u>Title</u>	<u>Subject</u>
A71015-107	LIFT FIXTURE - ENGINE ACCESSORY	24-00-01
A71016-1, -23	SLING EQUIPMENT - CORE COWL	71-10-02
A71017-1	LIFT SLING - CORE COWL	71-00-06
A71019-60	ENGINE HANDLING EQUIPMENT - CF6-80A	71-00-10
A71020-1	PROOF LOAD FIXTURE - CRADLE, CF6-80A ENGINE	71-00-11
A71021-52	PROOF LOAD FIXTURE - BOOTSTRAP, GE ENGINES	71-00-12
A71022-1, -60	LOCATING JIG - ENGINE BUILDUP TO STRUT SYSTEMS INTERFACES JT9D-7R4D ENGINE	71-00-17
A71023-53, -56	CRADLE - CF6-80A ENGINE 90 - INCH RAIL	71-00-13
A71024-1, -51, -68, -70	LOCATING JIG - CF6-80A BUILDUP-TO-STRUT SYSTEM INTERFACES	71-00-16
A71025-1	SUPPORT PEDESTAL EQUIPMENT - CF6-80A ENGINE BUILDUP	71-00-15
A71026-1	HOLD OPEN EQUIPMENT - 40-KNOT, CF6-80A FAN COWL	71-10-03
A71027-1	HOLD OPEN EQUIPMENT - FAN COWL, 20 KNOTS, CF6-80A ENGINE	71-10-05
A71029-36	HOLD OPEN EQUIPMENT - FAN COWL, 20 KNOT, JT9D-7R4 ENGINE	71-00-22
A71030-32	HOLD OPEN EQUIPMENT - FAN COWL, 40 KNOTS, PRATT AND WHITNEY ENGINES	71-00-18
A71031-1	ASPIRATOR - TT2 PROBE, JT9D-7R4D ENGINE	73-20-01
A71032-14	HOLD-OPEN EQUIPMENT - 40 KNOTS, PRATT AND WHITNEY CORE COWLS	71-00-19
A71033-31	HOLD OPEN EQUIPMENT - 40-KNOT, CF6-80A CORE COWL	71-10-04
A71034-1, -2, -3	WRENCH - AFT FLIGHT MOUNT ENGINE BUILDUP (EBU) "B" PACKAGE	71-00-20
A71035-1, -13, -27	COVER EQUIPMENT - BLEED VALVE, GE ENGINE	71-00-25
A71036-1	MONITORING ASSEMBLY - BREATHER PRESSURE, JT9D-7R4 ENGINE	71-00-23
A71037-1	TEST EQUIPMENT - DRYING AND LEAK CHECK, JT9D-7R4D GEARBOX	71-00-24
A71038-1	ALIGNMENT HANDLE - FORWARD ENGINE MOUNT	71-20-01
A71040	SPECIFICATION - FLUSH CART, ENGINE INTEGRATED DRIVE GENERATOR (IDG) COOLING SYSTEM	71-00-29
A71042-1, -29	GUARD - INLET, ENGINE RUN-UP	71-00-26
A71045-1	STORAGE STAND - SPARE ENGINE CARRIAGE	71-00-35
A71046-1	LOCATING JIG - ENGINE BUILDUP (EBU) TO STRUT, SYSTEM PW4000	71-00-45
A71047-150	BOOTSTRAP EQUIPMENT - RB211-524H	71-00-44
A71048-1	PROOF LOAD FIXTURE - BOOTSTRAP, RB211 ENGINE	71-00-43
A71049-1	PT2 PROBE ADAPTER	71-00-07
A71050-1	HOLD OPEN BRACKET - JT9D ENGINE	71-10-09
A71051-1	TRANSPORTATION AND STORAGE PALLET - INLET COWL, CF6- 80C2B ENGINE	71-10-10

NUMERICAL INDEX



767

ILLUSTRATED TOOL AND EQUIPMENT MANUAL

<u>Part No.</u>	<u>Title</u>	<u>Subject</u>
A71054-1	TORQUE EQUIPMENT - ENGINE MOUNT BOLTS, RB211-524G/H	71-00-47
A73001-1	TEST CABLE - ELECTRONIC ENGINE CONTROL, JT9D-7R4D	73-20-02
A73002-10	WRENCH - MAIN ENGINE CONTROL, CF6-80C2, REMOVAL/ INSTALLATION	73-20-03
A76001-1	TEST FIXTURE - THRUST LEVER, CONTROL STAND	76-10-01
A77001-1	TEST BOX - ELECTRONIC ENGINE CONTROL MONITOR POWER SUPPLY	77-30-01
A77002-1	TEST BOX - DISPLAY BOARD, ELECTRONIC ENGINE CONTROL MONITOR	77-30-02
A77003-18	TEST EQUIPMENT - INDICATING SYSTEM, EXHAUST GAS TEMPERATURE (EGT)	77-20-01
A77004-18, -19	TEST BOX - TACHOMETER SYSTEM	77-10-01
A77005-59, -60, -61	TEST EQUIPMENT - ENGINE N1 AND N2 INTERFACE	77-10-02
A78001-21, -22, -31, -48	HOLD OPEN EQUIPMENT - THRUST REVERSER, 40 KNOT	78-00-01
A78002-1, -8, -9	THREAD PROTECTOR EQUIPMENT - THRUST REVERSER REMOVAL/INSTALLATION	78-00-02
A78003-28, -41	CRADLE - EXHAUST NOZZLE	78-10-03
A78005-5	TENSION LATCH WRENCH SET - FAN DUCT	78-10-01
A78007-1	SLING - SLEEVE, THRUST REVERSER CF6-80A	78-30-14
A78008-1, -16	SLING - SLEEVE, THRUST REVERSER	78-30-15
A78010-1	CHECK FIXTURE - SPRING INTERLOCK BELLCRANK, JT9D	78-30-05
A78011-69, -70	STAND SUPPORT - FAN DUCT COWL AND THRUST REVERSER	78-30-06
A78012-1	WRENCH - CROWFOOT, TUBING NUT, FLOW CONTROL, THRUST REVERSER	78-30-04
A78013-1, -2, -11	SLING - EXHAUST SLEEVE, ENGINE	78-10-02
A78014-1	CLAM SHELL EQUIPMENT - TRACK SLIDER, THRUST REVERSER	78-30-07
A78015-1	REWORK JIG - HINGE, BLOCKER DOORS, THRUST REVERSER (PRATT & WHITNEY)	78-30-08
A78017-1	SLING - FAN REVERSER OPENING	78-30-13
A78018-11	SLING - THRUST REVERSER TRANSLATING SLEEVE, CF6-80C2	78-30-16
A78019-21	HAND PUMP - OPENING SYSTEM, THRUST REVERSER	78-30-18
A78020-66	HOIST EQUIPMENT - REMOVAL/INSTALLATION, INTEGRATED NOZZLE ASSEMBLY (INA)	78-10-04
A78021-45, -46	TEST/OVERHAUL EQUIPMENT - COWL DOOR ACTUATOR	71-10-08
A78023-1, -89, -121	REPAIR FIXTURE EQUIPMENT - PW4000 ENGINE THRUST REVERSER	78-30-19
A78024-1	ALIGNMENT FIXTURE - INNER FAN DUCT WALL CF6-80A ENGINE	78-30-20
A78025-1, -77	BREAKOUT BOX - TEST, THRUST REVERSER	78-30-21
B20004-21	LEVERAGE ADAPTER - ACCESS PANEL	20-00-08
B21005-1, -10	CLEANING WAND EQUIPMENT - HEAT EXCHANGER	21-50-06

NUMERICAL INDEX

Page 18
Oct 10/2008

D634T501



767

ILLUSTRATED TOOL AND EQUIPMENT MANUAL

<u>Part No.</u>	<u>Title</u>	<u>Subject</u>
B22002-1	BREAKOUT BOX - YAW DAMPER EMI FILTER	22-20-04
B22003-39	TEST EQUIPMENT - AUTOTHROTTLE CLUTCH	22-30-04
B23001-1	EXTENDER BOARD - AUDIO ACCESSORY UNIT ASSEMBLY	23-40-06
B27018-19	BREAKOUT BOX - FSEU/CSEU POWER SUPPLY	27-00-10
B27070-1	ALIGNMENT PIN - FEEL ACTUATOR PISTON	27-30-11
B27079-19	TEST BOX - POWER SUPPLY, CONTROL SYSTEM ELECTRONICS UNIT/CSEU	27-00-16
B28001-18	ADAPTER - SUMP DRAIN VALVE REMOVAL/INSTALLATION	28-10-15
B28004-1	SOCKET - COLLIMATOR SLEEVE INSTALLATION/REMOVAL	28-40-02
B28005-2	PRESSURE PLUG EQUIPMENT - FUEL SYSTEM	28-40-04
B28009-1	ALIGNMENT EQUIPMENT - FUEL SHUTOFF VALVE	28-20-01
B29001-23, -46	SCREEN EQUIPMENT - RAM AIR TURBINE	29-00-03
B29005-17	SIMULATOR - YAW DAMPER MODULE	22-20-05
B29006-1	SIMULATOR - YAW DAMPER/STABILIZER TRIM MODULE	22-20-06
B30001-7	TEST EQUIPMENT - WINDSHIELD RAIN REPELLENT SYSTEM	30-40-01
B30002-1	CLEANING TANK ASSEMBLY - WINDSHIELD RAIN REPELLENT SYSTEM	30-40-02
B32050-1, -50	ASSEMBLY FIXTURE - MAIN LANDING GEAR (MLG)	32-10-28
B34001-1	TEST FIXTURE - POWER SUPPLY CARDS/CONTROL PANEL ASSEMBLY	34-50-10
B36005-2, -4	PLUG EQUIPMENT - DUCT TEST	36-10-05
B49001-35	FRAME - AUXILIARY POWER UNIT (APU) INSTALLATION AND REMOVAL	49-00-05
B49002-64	STAND - AUXILIARY POWER UNIT (APU), MAINTENANCE AND TRANSPORTATION	49-00-06
B49003-1, -10	SLING - AUXILIARY POWER UNIT (APU) HANDLING	49-00-07
B52004-1	INSTALLATION TOOL - DOOR SEAL	52-00-02
B54001-30	HYDRAULIC PUMP - ENGINE "C" DUCT	54-00-02
B54016-1	REMOVAL TOOL - SPLIT BUSHING	54-50-07
B71034-13, -29, -48	TEST EQUIPMENT - ENGINE PRESSURE MONITORING	71-00-21
B71040-36, -37, -39	SLING EQUIPMENT - INLET COWL	71-10-06
B71044-10, -28	ADAPTER EQUIPMENT - LOAD TEST, PRESSURE RELIEF DOOR LATCH	71-00-46
B76003-1	RIGGING EQUIPMENT - ENGINE CONTROL SYSTEM	76-10-02
B76004-1	ADAPTER - THRUST CONTROL INNER SHAFT	76-10-03
B78001-1, -2, -5, -14	LOCK - THRUST REVERSER ISOLATION VALVE (GROUND AND FLYAWAY)	78-30-03
BLS-34529	ASSEMBLY BULLET	29-20-04
BLS-34533	ASSEMBLY BULLET	29-20-05

NUMERICAL INDEX

Page 19
Oct 10/2008

D634T501



767

ILLUSTRATED TOOL AND EQUIPMENT MANUAL

<u>Part No.</u>	<u>Title</u>	<u>Subject</u>
C22005-1, -7, -8	BREAKOUT BOX - MULTIPURPOSE, 100/124 PIN	22-10-01
C23002-1	ACOUSTIC COUPLER EQUIPMENT - TRANSMITTER AND RECEIVER ASSEMBLY	23-40-07
C25001-1	WRENCH - ANTI-RATTLE NUT	25-20-07
C25012-1	ANTI-RATTLE NUT WRENCH KIT	25-20-08
C28013-6	Protective Equipment - Protective Ring for Lower Wing Panel Access Door	57-30-02
C34005-1	EXTENDER BOX - RADIO ALTIMETER RECEIVER TRANSMITTER	34-00-03
C34006-53, -57	ADAPTER, TRAY - ELECTRONIC FLIGHT INSTRUMENT SYSTEM (EFIS) SYMBOL GENERATOR SOFTWARE LOADING	34-00-04
C34012-2	TEST BOX - TOTAL AIR TEMPERATURE PROBE, AIR DATA SYSTEM	34-00-05
C35003-1	RETRACTION EQUIPMENT - FIRING PIN, OXYGEN SYSTEM	35-00-02
C38001-23	DRAIN MAST PLUG - WASTE WATER	38-30-12
C77004-10	TEST BOX - GENERIC AIRBORNE VIBRATION MONITOR (AVM) INTERFACE	77-30-03
C78005-21	HAND PUMP - OPENING SYSTEM, THRUST REVERSER	78-30-09
DAS-34530	SIZING DIE	29-20-06
DAS-34534	SIZING DIE	29-20-07
F70199-13, -17, -19, -20	INFLATION TOOL - TIRE	12-10-04
F70200-14	INFLATION TOOL - STRUT	12-10-02
F70206-1	ADAPTER ASSEMBLY - FUEL LEAK TRACING HOLLOW BOLT	28-10-07
F70230-1	REPAIR TOOL - FUEL SYSTEM SELF-SEALING RIVETS	28-10-01
F70258-1	PERSONNEL SAFETY BARRIER - MAIN DECK CARGO DOOR	52-30-16
F70284-1	WEAR GAGE SET - GROUND POWER PLUG AND RECEPTACLE	24-40-01
F70300-1	ADAPTER - FLAP DRIVE	27-50-08
F70312-25, -27, -28, -29, -30, -31, -32, -34, -35, -39, -40, -41, -45, -46, -47, -48, -49, -50, -52	KIT - CROWFOOT WRENCHES	32-00-01
F70313-1, -2, -3, -4	STANDARD BOX - SUPPORT EQUIPMENT	20-00-30
F70321-1, -2, -3, -4, -5, -6, -7, -8, -9, -10, -11, -12, -13, -14, -15, -16, -17, -18, -19, -20, -21, -22, -23, -24, -25, -26, -27, -28, -29, -30, -31, -32, -33, -34, -35, -36, -37, -38, -39, -40	MANDREL - SHRINK FIT BUSHING INSTALLATION	20-00-29
F70328-1	PROBE - FILM RESISTANCE MEASURING	53-30-01
F70330-4, -87	STATIC BALANCE EQUIPMENT - CONTROL SURFACES	51-00-09
F71329	LEAKAGE TRACING DEVICE - INTEGRAL TANK LEAKAGE TEST	28-10-08

NUMERICAL INDEX

Page 20
Oct 10/2008

D634T501



767

ILLUSTRATED TOOL AND EQUIPMENT MANUAL

<u>Part No.</u>	<u>Title</u>	<u>Subject</u>
F72951-1	TEST EQUIPMENT - WATER MANOMETER	28-10-10
F72959-8, -41	SPANNER WRENCH - AN STANDARD TYPE	20-00-05
F72959-1 thru 12, -31 thru 42	SPANNER WRENCH - AN STANDARD TYPE	20-00-06
F72977-62	GAGE EQUIPMENT - HYDRAULIC BRAKE SYSTEM PRESSURE CHECKING	32-40-14
F80-0-50007	WRENCH, SPECIAL TORQUE	24-10-02
F80085-1, -12	TEST FIXTURE - FEEL ACTUATOR CYLINDER ASSEMBLY	27-30-08
F80113-37, -50, -61, -64, -70, -88, -105	KIT - ROLLER SWAGE	20-00-23
F80212-30	ADAPTER - RUDDER PEDAL FORCE CHECK	27-20-02
G21007-1	AIR FLOW CUP - LOW/HIGH BLOW TEST	05-50-01
G22003-132, -133, -134, -135	TEST EQUIPMENT - AUTO THROTTLE CLUTCH	22-30-05
G23001-37, -41	TEST BOX - RADIO COMMUNICATIONS PANEL (RCP) PROCESSOR CARD	23-10-02
G24005-24	DISPATCH EQUIPMENT - IDG, CF6-80C2 ENGINE	24-10-03
G24006-1	SUPPORT HOOK - ENGINE POWER FEED CABLE, PW4000 ENGINE	24-00-05
G24009-1	IDG DISPATCH KIT - RB211-524 ENGINE	24-10-04
G24011-1	HOIST SYSTEM - RB211, CF6-50 AND JT9D ENGINE ACCESSORY	24-00-06
G24013-1	ACCESSORY ADAPTER - HOIST SYSTEM RB211 AND CF6-50 ENGINES	24-10-06
G26004-39, -40	EXTENDER CARD - ELECTRONIC CARD FILE	26-10-01
G26005-9, -13, -17, -24	ADAPTER - HOT WIRE ANEMOMETER	26-10-02
G27033-2	ADAPTER CABLE - OUTBOARD AILERON LOCKOUT	27-10-14
G28005-14, -18, -23, -29, -35, -42	CHECK FIXTURE EQUIPMENT - PRESSURE RELIEF VALVE	28-10-11
G28018-3, -4, -5, -6, -26, -28, -29	TEST EQUIPMENT - ENGINE FUEL FEED MANIFOLD	28-20-04
G32021-18	FORCE GAGE EQUIPMENT - LANDING GEAR LEVER	32-30-12
G34004-17	ADJUSTMENT EQUIPMENT - WEATHER RADAR ANTENNA MOUNT	34-40-01
G35003-1	RESTRAINING EQUIPMENT - PASSENGER SERVICE UNIT (PCU) OXYGEN DOORS	35-20-02
G36035-1, -36	TEST EQUIPMENT - PNEUMATIC SYSTEM HEALTH CHECK	36-00-03
G38004-10, -13	BLOCKAGE REMOVAL TOOL - VACUUM LAVATORY SYSTEM	38-30-08
G38005-1, -61, -111	TEST CHAMBER EQUIPMENT - LAVATORY SERVICE PANEL	38-30-11
G38006-1	BLOCKAGE REMOVAL EQUIPMENT - VACUUM WASTE SYSTEM	38-30-10
G51002-1	FALL PROTECTION - OVERHEAD PERSONNEL SUPPORT	51-00-05
G51003-1	FALL PROTECTION - OVERHEAD PERSONNEL SUPPORT	51-00-07

NUMERICAL INDEX

Page 21
Oct 10/2008

D634T501



767

ILLUSTRATED TOOL AND EQUIPMENT MANUAL

<u>Part No.</u>	<u>Title</u>	<u>Subject</u>
G54007-82, -91, -93, -165	STRUT SLING - PRELOAD/UNLOAD, DIAGONAL BRACE	54-50-09
G71002-48	CRADLE - CF6-80C2B ENGINE	71-00-33
G71007-28	SLING EQUIPMENT - INLET COWL, CF6-80C2B ENGINE	71-00-30
G71008-1	PROOF LOAD EQUIPMENT - CRADLE, CF6-80C2B ENGINE	71-00-32
G71010-79, -80, -81	SLING - ENGINE HANDLING, GE ENGINES	71-00-34
G71012-107, -118, -119	LOCATING JIG - ENGINE BUILDUP TO STRUT, CF6-80C2B ENGINE	71-00-36
G71013-1	SLING - FAN COWL, CF6-80C2B ENGINE	71-00-38
G71014-1	BEAM - ENGINE HANDLING, RB211-524	71-00-37
G71015-75	CRADLE - RB211-524 (G AND H) ENGINE	71-00-42
G71017-1	PROOF LOAD FIXTURE - RB211-524 ENGINE	71-00-40
G71018-1	SUPPORT EQUIPMENT - RB211-524 ENGINE, H2 HANDLING ATTACHMENT	71-00-41
G71020-1	WRENCH - FLEX NUT, 15TH STAGE, MANIFOLD AND DUCT, PW4000	71-00-39
G71021-16	DRIVE EXTENSION - STARTER VALVE AND PRESSURE REGULATING AND SHUTOFF VALVE (PRSOV)	80-10-01
G71022-44	HOLD OPEN EQUIPMENT - ENGINE FAN/CORE COWL, CF6-80C2B	71-10-01
G71023-52	HOLD OPEN EQUIPMENT - 20 KNOT, PW4000 FAN AND CORE COWLS	71-10-07
G71030-1	SLING EQUIPMENT - NOSE COWL, RB211-524 AND CF6-50 ENGINES	71-10-13
G71032-1	SLING EQUIPMENT - INLET COWL, CF6-50 AND RB211-524 ENGINES	71-10-11
G76002-15	PROTRACTOR - THRUST REVERSER LEVERS, FORWARD AND REVERSE	76-10-05
G78002-1	HOLD OPEN SET - THRUST REVERSER COWL, CF6-80C2B ENGINE	78-30-11
G78003-53	SLING EQUIPMENT - FAN REVERSER, CF6-80C2B ENGINE	78-30-12
G78005-10	ADAPTER EQUIPMENT - THRUST REVERSER HOLD OPEN ROD	78-00-03
G78006-74, -75	DOLLY - THRUST REVERSER, CF6-80C2 ENGINE	78-30-17
J07008-1, -22, -30	SLING EQUIPMENT - TETHERING/LIFTING AIRPLANE RECOVERY	07-10-03
J20002-1, -36	LOAD POSITIONER - ENGINE ACCESSORIES, 250 LB CAPACITY	20-00-34
J20009-38, -70, -78	JACKING EQUIPMENT - HYDRAULIC TELESCOPING	49-00-08
J22004-67, -68	TEST EQUIPMENT - AUTOTHROTTLE, GEARBOX, BRAKE	22-30-06
J23001-1, -12	HOIST ADAPTER - SATCOM TOP - MOUNTED HIGH GAIN ANTENNA	23-20-01
J24015-1	Pressure Test Equipment - Engine Generators	24-10-09
J25001-5	LEVER- STOWAGE BIN RELEASE	25-20-05
J25003-35	TEST EQUIPMENT - LATERAL GUIDE ASSEMBLY	25-50-04
J26005-24, -32	TEST EQUIPMENT - FIRE EXTINGUISHER TUBING, CARGO COMPARTMENT	26-20-06
J26007-1	TEST BOX-CARGO SMOKE HEATER, TEST PLUG	26-10-03

NUMERICAL INDEX

Page 22
Oct 10/2008

D634T501



767

ILLUSTRATED TOOL AND EQUIPMENT MANUAL

<u>Part No.</u>	<u>Title</u>	<u>Subject</u>
J26009-1	TEST EQUIPMENT - FIRE EXTINGUISHING TUBING, CARGO COMPARTMENT	26-20-07
J27054-1	TEST EQUIPMENT - LEAKAGE TEST	27-50-18
J27079-31	INSPECTION EQUIPMENT - ELEVATOR FREEPLAY	27-30-13
J28006-1	SEALING TOOL - RIVET, FUEL TANK	28-10-13
J28007-1, -9, -10	PRESSURIZATION EQUIPMENT - WING DRY BAY, FUEL LEAK DETECTION	28-10-17
J28010-26	CONSOLE - SHOP AIR SUPPLY	28-10-18
J28013-1	FITTING EQUIPMENT - FUEL DRAIN SUMP	28-10-19
J29005-30	PLUG SET - PRESSURE TEST, HYDRAULIC RESERVOIR ASSEMBLY	29-10-03
J32001-63, -64	MEASURING EQUIPMENT - BRAKE PEDAL	32-40-09
J32010-58, -62	PULLER EQUIPMENT - WHEEL AND BRAKE SLEEVES, MAIN LANDING GEAR (MLG) AXLES	32-10-46
J32012-18	PULLER EQUIPMENT - BRAKE, MAIN LANDING GEAR	32-40-11
J32031-12	PROTECTOR EQUIPMENT - AXLE, MAIN LANDING GEAR	32-40-12
J32032-22	WRENCH EQUIPMENT - WHEEL RETENTION NUT, MAIN LANDING GEAR (MLG)	32-40-10
J32057-1, -94, -108	FIXTURE EQUIPMENT - LANDING GEAR ACTUATOR ASSEMBLY	32-30-17
J32060-1	DRAIN EQUIPMENT - OLEO STRUT, MAIN LANDING GEAR (MLG)/ NOSE LANDING GEAR (NLG)	32-10-42
J32065-1	ALIGNMENT PIN - MAIN LANDING GEAR (MLG) TOW FITTING	32-10-44
J34002-18, -19	TEST FIXTURE - ANGLE OF ATTACK	34-10-02
J36010-1	PRESSURE TEST EQUIPMENT - DUCT ASSEMBLY	36-10-14
J38001-16	PRESSURIZATION EQUIPMENT - WASTE DRAIN SYSTEM	38-30-14
J51003-1	STATIC BALANCE EQUIPMENT - FLIGHT CONTROL SURFACES	51-00-10
J52024-2, -3	TEST EQUIPMENT - LATCH ASSEMBLY, BLOW OUT DOORS	52-40-03
J54001-73, -74, -75, -76	STRUT UNLOAD SLING - DIAGONAL BRACE ALIGNMENT	54-50-10
J71006	SPECIFICATION - POWERED HOIST SYSTEM, GROUND SUPPORT EQUIPMENT (GSE) OPERATIONS	71-00-49
J76002-1	WRENCH - SPANNER, THRUST LEVER CONTROL STAND SHAFT ASSEMBLY	76-10-04
ME65B40136-1	MECHANICAL EQUIPMENT - PITOT STATIC PROBE (INSTALLATION TOOL FOR PITOT STATIC PROBE PROTECTIVE COVER)	10-10-02
ME65B83635	TORQUE WRENCH ADAPTER - BRAKES, SIDE CARGO DOOR	52-30-17
MIT65B01202-1	ADAPTER ASSEMBLY WRENCH - LANDING GEAR WHEEL RETAINING NUT	32-10-43
MIT65B92408-1	ALIGNMENT FIXTURE - ADAPTER SHAFT	28-00-01
PL1	PINGLITE	23-70-01
PWA 25056, 25757, 25758, 29245	EQUIPMENT - ENGINE SUPPORT	71-00-27

NUMERICAL INDEX

Page 23
Oct 10/2008

D634T501



767

ILLUSTRATED TOOL AND EQUIPMENT MANUAL

<u>Part No.</u>	<u>Title</u>	<u>Subject</u>
ST1864P	REAMER - CARBIDE STRAIGHT FLUTE, STRAIGHT SHANK-PILOTED	20-00-32
ST2580-381	WRENCH - SPANNER, FACE TYPE	32-20-15
ST2580-163A	WRENCH, SPANNER TYPE	25-20-04
ST2580-302	WRENCH - SPANNER	28-10-06
ST2580-334C	STANDARD TOOL - SPANNER NOSE PLIERS	25-20-06
ST848	INSTALLATION TOOL, O-RING	20-00-14
ST848R	REMOVAL TOOL - O-RING	20-00-15
ST8709H	GO-NO-GO GAGE FOR ASSEMBLY OF WIGGINS BACC42R COUPLING	28-00-02
ST878D	SLEEVE-SET TOOL - FLARELESS TUBE FITTING	20-00-13
ST878D	BACS13AP INSTALLATION TOOL	20-00-16
ST879A	TUBE PRESETTING TOOL - FLARELESS	20-00-11
ST879AF	HOLDING FIXTURE - HAND PRESET TOOLS	20-00-12
ST918C	MANDREL - ROLLER BEARING PRESSING	20-00-18
ST919	SUPPORT - BEARING INSTALLATION	20-00-19
ST919-MP	MOUNTING PLATE	20-00-20
ST922C	STAKING TOOL	20-00-24
ST926E-*	ROLLER SWAGING TOOL - BEARING	20-00-09
ST927	REMOVAL TOOL - BEARING	20-00-27
ST927C-*	BEARING REMOVAL TOOL	20-00-10
ST929-2C	STAKING TOOL - BEARING SLEEVE, SIX POINT	20-00-26
ST932	ROLLER STAKING TOOL	20-00-21
ST991A-2	REMOVAL TOOL - SCRIVET FASTENER	20-00-31
WAS-33662	WRENCH - RAT HUB BEARING INSTALLATION/REMOVAL	29-20-01
294864-1	WRENCH - AUXILIARY POWER UNIT (APU) TRANSDUCER REMOVAL	49-50-01
2CF65B05528-1	BALANCE STAND - OUTBOARD AILERON, UPPER RUDDER AND OUTBOARD ELEVATOR	51-00-11
2ME65B00002	WRENCH - SPANNER, SAFETY LANYARD, TIEDOWN LOCKS	27-00-15
2ME65B89603	ACCESSORY ADAPTER - HOIST SYSTEM, RB211-524, CF6-50 ENGINES	24-10-07
3MIT65B89603	TOOL SET, RB211 ENGINE MOUNT BOLT	71-00-48
3OHME65B00002	SLING - TETHERING/LIFTING AIRPLANE RECOVERY	07-10-01
4MIT65B80307-1	PROTRACTOR ASSEMBLY - CONTROL COLUMN	27-10-03
732021	COVER - RAT TURBINE BLADE	29-20-02
734734	PROTECTIVE COVER - RAT HUB	29-20-03
810-325	SPANNER WRENCH	23-70-02
833563-6	TESTER - AUXILIARY POWER UNIT (APU) FUEL MANIFOLD	49-10-01
900-24999	INSPECTION PLATE - QAD	24-10-01

NUMERICAL INDEX

Page 24
Oct 10/2008

D634T501



767

ILLUSTRATED TOOL AND EQUIPMENT MANUAL

<u>Part No.</u>	<u>Title</u>	<u>Subject</u>
906-10246-3	LOOP RESISTANCE TEST SET	05-50-02
906-10272-5	CALIBRATION UNIT - LOOP RESISTANCE TESTER	05-50-03

NUMERICAL INDEX

Page 25
Oct 10/2008

D634T501