



## 767 MAINTENANCE PLANNING DATA

### SECTION 7. ZONAL INSPECTION PROGRAM

A. SCOPE .....	7.0-3
B. NOTES .....	7.0-3
C. PAGE FORMAT: ZONAL INSPECTION PROGRAM.....	7.0-7
ZONAL INSPECTION TASKS .....	7.1-1



## 767 MAINTENANCE PLANNING DATA

THIS PAGE INTENTIONALLY LEFT BLANK



## 767 MAINTENANCE PLANNING DATA

### A. SCOPE

This section of the MPD outlines the Scheduled Maintenance Tasks for the Zonal Inspection Program. This section, arranged by Airplane Zone Number, serves two primary purposes:

- The program assures that all systems/components/installations and structure contained in a zone receive an adequate GVI to determine security of installation and general condition.
- The program packages a number of GVI Tasks, generated against items in the Systems Maintenance Program and Structural Inspection Program, into one or more Zonal GVI Tasks. This does not preclude an operator from taking credit for additional tasks.

Notes applicable to the Zonal Inspection Program are followed by the format of the pages that list the Zonal Inspection Tasks. The Zonal Inspection Tasks are listed by Major Zone, beginning with Major Zone 100 and ending with Major Zone 800.

### B. NOTES

#### 1. DEFINITION:

**INSPECTION** - An examination of an item against a specified standard to detect irregularities and discrepancies such as deterioration, damage, cracked, chipped or missing paint on composite structure, corrosion, cracking, etc.

- **Inspection - General Visual (GVI):** A visual examination of an interior or exterior area, installation, or assembly to detect obvious damage, failure, or irregularity. This level of inspection is made from within touching distance unless otherwise specified. A mirror may be necessary to enhance visual access to all exposed surfaces in the inspection area. This level of inspection is made under normally available lighting conditions, such as daylight, hangar lighting, flashlight, or drop light, and may require removal or opening of access panels or doors. Stands, ladders, or platforms may be required to gain proximity to the area being checked.

2. The Zonal GVI Task includes visual checks of all electrical wiring, hydraulic tubing, water/waste plumbing, pneumatic ducting, components, and fittings, brackets, etc., associated with systems which are included within the zone boundaries. The extent of the intended area of the inspection is defined by the access, if any, listed with each inspection item. Any fairings, panels, or other items which are removed/opened to gain access to a particular zone should also be inspected if they are not inspected in a separate defined zonal task. Adequate lighting and normal inspection aids are to be used as required, such as a flashlight and/or inspection mirror.
3. Systems Maintenance Tasks which become redundant (precluded) as a result of a Zonal GVI Task are listed in Appendix D of this document. These tasks are not intended to be itemized on the task cards.
4. The access information for each zone is intended to serve as a guide during development of the operator's maintenance program. Based on the operator's access panel configuration, experience and scheduling requirements, the accessing requirements may be amended by the operator.
5. Any doors and panels opened or removed during the Zonal Inspection Program, and not having a separate defined Zonal Task, shall receive a general visual check.
6. Excessive dust, debris, or overspray of corrosion inhibiting compounds, found during any inspection, are considered to be unsatisfactory condition possibly reducing the fire resistance of the airplane design. Cleanup of these materials should be a standard part of maintenance activity (Reference Service Letter 767-SL-25-084 dated 23 March 1998).
7. Inspection requirements are determined on the basis of continual maintenance to preserve or restore the inherent corrosion preventive measures and structural surface finishes. Refer to Section 8, Item F.  
Appropriate Boeing Task Cards contain a note alerting the operator to the areas historically most susceptible to corrosion; however, these specific cards do not include all areas that may be affected by corrosion.
8. Appendix E to this document includes a complete set of MPD/MRB/Task Card Number Cross-Reference Indexes.



## 767 MAINTENANCE PLANNING DATA

9. Zones which contain systems/components/installations are assigned a GVI at specified intervals. The following zones, however, contain no system installations or receive adequate GVI from other maintenance or structural inspections tasks. These zones have no specific Zonal Task assigned, and are listed here for reference only:

139	554/654	715/716
149	562/662	732/742
332/342	563/663	733/743
333/343	564/664	734/744
336/346	565/665	735/745
543/643	566/666	
553/653	713/714	

10. Zonal GVIs satisfy the intent of certain Systems/Powerplant GVIs, certain Structural GVIs, and certain CPCP tasks. The System/Powerplant GVIs which are specifically precluded by Zonal Tasks are listed in Appendix D. The Structures GVIs which are specifically precluded by Zonal Tasks are listed in Appendix G. The CPCP Tasks, which are precluded by Zonal or Structures Tasks, are also listed in Appendix G.

## 767 ZONAL INSPECTION PROGRAM

MPD ITEM NUMBER	ACCESS	INTERVAL	APPLICABILITY		MAN HOURS	ZONE	ZONAL TITLE and TASK DESCRIPTION
			APL	ENG			
0600-XXX-XXZ							
							(Z) Used to identify zonal tasks
							(01 to 99) Sequence Number
							(100 to 846) Zonal Number
							(0600) ATA System/Subsystem
EXAMPLE ILLUSTRATING FORMAT							
0600-195-01Z 0600-197-01Z	195JL 195RL 195SL 5002	1C	ALL	ALL	00.8	195 197	*** WING TO BODY FAIRINGS - AFT LEFT PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.

FIGURE 1. ZONAL INSPECTION PROGRAM EXAMPLE PAGE

D622T001



## 767 MAINTENANCE PLANNING DATA

### C. PAGE FORMAT: ZONAL INSPECTION PROGRAM

COLUMN	EXPLANATION																								
MPD ITEM NUMBER	Each task in the MPD is identified with a unique number, by zone. The first four digits correspond to ATA Chapter/Section (0600). The fifth, sixth, and seventh digits correspond to the Zone Number. The eighth and ninth digits identify the zonal tasks sequentially within a zone. All zonal items are contained in the MRB Report.																								
ACCESS	Access Panel/Door Number (see Access Panel/Door Illustrations, Section 4) required to be opened to perform the task.																								
INTERVAL	Task Intervals specified in terms of flight hours, cycles, or letter check. If the Threshold and Repeat Interval differ, the first interval listed is the Threshold, the interval listed underneath is the Repeat Interval.																								
APPLICABILITY APL ENG	Applicable airplane model and engine. <table><tr><th>APL</th><th>ENGINE</th></tr><tr><td>ALL = All Airplanes</td><td>ALL = All 767 Engines</td></tr><tr><td>PASS = Passenger Airplanes</td><td>4000 = P&amp;W PW4052, PW4056, PW4060, and PW4062</td></tr><tr><td>200 = 767-200 Series</td><td>7R4 = P&amp;W JT9D-7R4D and -7R4E</td></tr><tr><td>300 = 767-300, Series</td><td>7R4D = P&amp;W JT9D-7R4D</td></tr><tr><td>400E = 767-400ER</td><td>7R4E = P&amp;W JT9D-7R4E</td></tr><tr><td>SF = 767-200 Special Freighter</td><td>80 = GE CF6-80A and -80C (and variants)</td></tr><tr><td>BCF = 767-300 Boeing Converted Freighter</td><td>80A = GE CF6-80A</td></tr><tr><td>GMF = 767-300 General Market Freighter</td><td>80C = GE CF6-80C (and variants)</td></tr><tr><td>PF = 767-300 Package Freighter</td><td>524 = RR RB211-524H</td></tr><tr><td>FRTR = All 767 Freighters</td><td>NOTE = Engine Applicability Note</td></tr><tr><td>NOTE = Airplane Applicability Note</td><td></td></tr></table>	APL	ENGINE	ALL = All Airplanes	ALL = All 767 Engines	PASS = Passenger Airplanes	4000 = P&W PW4052, PW4056, PW4060, and PW4062	200 = 767-200 Series	7R4 = P&W JT9D-7R4D and -7R4E	300 = 767-300, Series	7R4D = P&W JT9D-7R4D	400E = 767-400ER	7R4E = P&W JT9D-7R4E	SF = 767-200 Special Freighter	80 = GE CF6-80A and -80C (and variants)	BCF = 767-300 Boeing Converted Freighter	80A = GE CF6-80A	GMF = 767-300 General Market Freighter	80C = GE CF6-80C (and variants)	PF = 767-300 Package Freighter	524 = RR RB211-524H	FRTR = All 767 Freighters	NOTE = Engine Applicability Note	NOTE = Airplane Applicability Note	
APL	ENGINE																								
ALL = All Airplanes	ALL = All 767 Engines																								
PASS = Passenger Airplanes	4000 = P&W PW4052, PW4056, PW4060, and PW4062																								
200 = 767-200 Series	7R4 = P&W JT9D-7R4D and -7R4E																								
300 = 767-300, Series	7R4D = P&W JT9D-7R4D																								
400E = 767-400ER	7R4E = P&W JT9D-7R4E																								
SF = 767-200 Special Freighter	80 = GE CF6-80A and -80C (and variants)																								
BCF = 767-300 Boeing Converted Freighter	80A = GE CF6-80A																								
GMF = 767-300 General Market Freighter	80C = GE CF6-80C (and variants)																								
PF = 767-300 Package Freighter	524 = RR RB211-524H																								
FRTR = All 767 Freighters	NOTE = Engine Applicability Note																								
NOTE = Airplane Applicability Note																									
MANHOURS	Estimated manhours (per airplane) required to perform the task(s). These manhours do not include the time required to gain access, position workstands, defuel and purge fuel tanks, troubleshoot, nor correct discrepancies found while performing the task. The manhour estimates are based on the use of skilled personnel and ready availability of required tools and equipment.																								
ZONE	Airplane Zone Number (See Zone Diagrams, Section 3) where task is performed.																								
ZONAL TITLE AND TASK DESCRIPTION	Description of the Zone and Task to be performed.																								

D622T001



## 767 MAINTENANCE PLANNING DATA

THIS PAGE INTENTIONALLY LEFT BLANK





## 767 MAINTENANCE PLANNING DATA

### ZONAL INSPECTION TASKS

MPD ITEM NUMBER	ACCESS	INTERVAL	APPLICABILITY		MAN HOURS	ZONE	<b>767 ZONAL MAINTENANCE PROGRAM</b>
			APL	ENG			ZONAL TITLE and TASK DESCRIPTION
0600-100-01Z		S 1C	ALL	ALL	1	100	*** LOWER HALF OF FUSELAGE - EXTERIOR PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ALL FUSELAGE INSTALLATIONS IN MAJOR ZONE 100.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-111-01Z	111AL	1C	ALL	ALL	0.1	111	*** RADOME PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-113-01Z 0600-114-01Z	113AL	1C	ALL	ALL	0.6	113 114	*** AREAS FORWARD OF NLG WHEEL WELL PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-115-01Z 0600-116-01Z	1004	1C	ALL	ALL	0.3	115 116	*** NOSE LANDING GEAR WHEEL WELL PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-117-01Z 0600-118-01Z	119AL	1C	ALL	ALL	0.4	117 118	*** AREAS OUTBD AND ABOVE NLG WHEEL WELL PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.
0600-119-01Z	NOTE 119AL	1C	ALL	ALL	0.8	119	*** MAIN EQUIPMENT CENTER PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.  ACCESS NOTE: REMOVAL OF INSULATION AND EQUIPMENT NOT REQUIRED.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED

D622T001



## 767 MAINTENANCE PLANNING DATA

MPD ITEM NUMBER	ACCESS	INTERVAL	APPLICABILITY		MAN HOURS	ZONE	767 ZONAL MAINTENANCE PROGRAM
			APL	ENG			ZONAL TITLE and TASK DESCRIPTION
0600-119-02Z		1C	ALL	ALL	0.2	119	*** MAIN EQUIPMENT CENTER PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF MAIN EQUIPMENT CENTER DOOR.
0600-121-01Z 0600-122-01Z	NOTE 821	1C	ALL	ALL	1	121 122	*** FORWARD CARGO COMPARTMENT PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.  ACCESS NOTE: REMOVAL OF INSULATION, SIDEWALL PANELS, CEILING PANELS NOT REQUIRED.
0600-121-02Z 0600-122-02Z	NOTE 1211 1212 1221 821	4C	ALL	ALL	1.5	121 122	*** FORWARD CARGO COMPARTMENT PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.  ACCESS NOTE: REMOVAL OF INSULATION AND FLOORING NOT REQUIRED.
0600-123-01Z 0600-124-01Z	1231 821	4C	ALL	ALL	1	123 124	*** AREAS BELOW FWD CARGO COMPARTMENT PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.
0600-125-01Z 0600-126-01Z	1251 821	1C	ALL	ALL	0.5	125 126	*** AREAS AFT OF FWD CARGO COMPARTMENT PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.
0600-131-01Z 0600-132-01Z	NOTE 1311 1312 2411	4C	PASS	ALL	1	131 132	*** AREAS ABOVE WING CENTER SECTION PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.  ACCESS NOTE: CABIN EQUIPMENT BETWEEN STA 785 AND 955.
0600-131-02Z 0600-132-02Z	NOTE 1312 2411	4C	FRTR	ALL	1	131 132	*** AREAS ABOVE WING CENTER SECTION PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.  ACCESS NOTE: MAIN DECK EQUIPMENT BETWEEN STA 785 AND 955.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED



## 767 MAINTENANCE PLANNING DATA

MPD ITEM NUMBER	ACCESS	INTERVAL	APPLICABILITY		MAN HOURS	ZONE	767 ZONAL MAINTENANCE PROGRAM
			APL	ENG			ZONAL TITLE and TASK DESCRIPTION
0600-133-01Z 0600-134-01Z	136KZ 194HR	4C	NOTE	ALL	1.5	133 134	*** WING CENTER SECTION PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.  AIRPLANE NOTE: AIRPLANES WITHOUT CENTER SECTION FUEL TANK.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-133-01Z 0600-134-01Z	1331 134AZ 134BZ 134CZ 134DZ 134EZ 134FZ 134GZ 136KZ 194HR	4C	NOTE	ALL	1.5	133 134	*** WING CENTER SECTION PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.  AIRPLANE NOTE: AIRPLANES WITH 2-BAY OR 4-BAY CENTER SECTION FUEL TANK.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-135-01Z 0600-136-01Z	193LL 193ML 193NL 194GR 194LR 194NR	1C	ALL	ALL	1	135 136	*** ENVIRONMENTAL CONTROL SYSTEM BAYS PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.
0600-141-01Z 0600-142-01Z	NOTE 1411 1412 2411	4C	PASS	ALL	1	141 142	*** AREAS ABOVE MLG WHEEL WELL PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.  ACCESS NOTE: CABIN EQUIPMENT BETWEEN STA 955 AND 1065.
0600-141-02Z 0600-142-02Z	NOTE 1412 2411	4C	FRTR	ALL	1	141 142	*** AREAS ABOVE MLG WHEEL WELL PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.  ACCESS NOTE: MAIN DECK EQUIPMENT BETWEEN STA 955 AND 1065.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED



## 767 MAINTENANCE PLANNING DATA

MPD ITEM NUMBER	ACCESS	INTERVAL	APPLICABILITY		MAN HOURS	ZONE	767 ZONAL MAINTENANCE PROGRAM
			APL	ENG			ZONAL TITLE and TASK DESCRIPTION
0600-143-01Z	1004	1C	ALL	ALL	0.6	143	<p>*** LEFT MAIN WHEEL WELL PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.</p> <p>CPC NOTE: CORROSION PREVENTION &amp; CONTROL BASIC TASK REQUIRED</p>
0600-144-01Z	1004	1C	ALL	ALL	0.5	144	<p>*** RIGHT MAIN WHEEL WELL PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.</p> <p>CPC NOTE: CORROSION PREVENTION &amp; CONTROL BASIC TASK REQUIRED</p>
0600-151-01Z 0600-152-01Z	NOTE 1511 822	1C	ALL	ALL	0.8	151 152	<p>*** AREAS FWD OF AFT CARGO COMPARTMENT PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES IN CONJUNCTION WITH ZONAL TASKS 0600-153-01Z, 0600-154-01Z.</p> <p>ACCESS NOTE: REMOVAL OF INSULATION NOT REQUIRED.</p>
0600-151-02Z 0600-152-02Z	NOTE 1511 1531 1532 1541 822	4C	ALL	ALL	1.6	151 152	<p>*** AREAS FWD OF AFT CARGO COMPARTMENT PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES IN CONJUNCTION WITH ZONAL TASKS 0600-153-02Z, 0600-154-02Z.</p> <p>ACCESS NOTE: REMOVAL OF INSULATION AND FLOORING NOT REQUIRED.</p>
0600-151-03Z 0600-152-03Z	1511 1551 822	4C	ALL	ALL	1.6	151 152	<p>*** AREAS FWD OF AFT CARGO COMPARTMENT PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES IN CONJUNCTION WITH ZONAL TASKS 0600-155-01Z, 0600-156-01Z.</p>
0600-153-01Z	NOTE 822	1C	ALL	ALL	0.8	153	<p>*** AFT CARGO COMPARTMENT - LEFT PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.</p> <p>ACCESS NOTE: REMOVAL OF INSULATION, SIDEWALL PANELS AND CEILING PANELS NOT REQUIRED.</p>



## 767 MAINTENANCE PLANNING DATA

MPD ITEM NUMBER	ACCESS	INTERVAL	APPLICABILITY		MAN HOURS	ZONE	767 ZONAL MAINTENANCE PROGRAM
			APL	ENG			ZONAL TITLE and TASK DESCRIPTION
0600-153-02Z	NOTE 1531 1532 822	4C	ALL	ALL	1	153	*** AFT CARGO COMPARTMENT - LEFT PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.  ACCESS NOTE: REMOVAL OF INSULATION AND FLOORING NOT REQUIRED.
0600-154-01Z	NOTE 822	1C	ALL	ALL	0.6	154	*** AFT CARGO COMPARTMENT - RIGHT PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.  ACCESS NOTE: REMOVAL OF INSULATION, SIDEWALL PANELS AND CEILING PANELS NOT REQUIRED.
0600-154-02Z	NOTE 1532 1541 822	4C	ALL	ALL	1	154	*** AFT CARGO COMPARTMENT - RIGHT PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.  ACCESS NOTE: REMOVAL OF INSULATION AND FLOORING NOT REQUIRED.
0600-155-01Z 0600-156-01Z	1551 822	4C	ALL	ALL	1	155 156	*** AREAS BELOW AFT CARGO COMPARTMENT PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.
0600-161-01Z	NOTE 811	1C	ALL	ALL	0.3	161	*** BULK CARGO COMPARTMENT - LEFT PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.  ACCESS NOTE: REMOVAL OF INSULATION, SIDEWALL PANELS AND CEILING PANELS NOT REQUIRED.
0600-161-02Z	NOTE 1611 1612 811	4C	ALL	ALL	1	161	*** BULK CARGO COMPARTMENT - LEFT PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.  ACCESS NOTE: REMOVAL OF INSULATION AND FLOORING NOT REQUIRED.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-162-01Z	NOTE 811	1C	ALL	ALL	0.3	162	*** BULK CARGO COMPARTMENT - RIGHT PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.  ACCESS NOTE: REMOVAL OF INSULATION, SIDEWALL PANELS AND CEILING PANELS NOT REQUIRED.



## 767 MAINTENANCE PLANNING DATA

MPD ITEM NUMBER	ACCESS	INTERVAL	APPLICABILITY		MAN HOURS	ZONE	767 ZONAL MAINTENANCE PROGRAM
			APL	ENG			ZONAL TITLE and TASK DESCRIPTION
0600-162-02Z	NOTE 1612 1621 811	4C	ALL	ALL	1	162	*** BULK CARGO COMPARTMENT - RIGHT PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.  ACCESS NOTE: REMOVAL OF INSULATION AND FLOORING NOT REQUIRED.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-163-01Z 0600-164-01Z	1631 811	4C	ALL	ALL	1	163 164	*** AREAS BELOW BULK CARGO COMPARTMENT PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.
0600-165-01Z 0600-166-01Z	1651 811	1C	ALL	ALL	1	165 166	*** AREAS AFT OF BULK CARGO COMPARTMENT PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.
0600-191-01Z 0600-193-01Z	191AL 193GL 193NL	2C	ALL	ALL	0.8	191 193	*** WING TO BODY FAIRINGS - FWD LEFT PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.
0600-192-01Z 0600-194-01Z	192AR 194HR 194LR	2C	ALL	ALL	0.8	192 194	*** WING TO BODY FAIRINGS - FWD RIGHT PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.
0600-195-01Z 0600-197-01Z	195JL 195RL 195SL 5002	1C	ALL	ALL	0.8	195 197	*** WING TO BODY FAIRINGS - AFT LEFT PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED (0600-195-01Z ONLY).
0600-196-01Z 0600-198-01Z	196JR 1981 5002	1C	ALL	ALL	0.8	196 198	*** WING TO BODY FAIRINGS - AFT RIGHT PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED (0600-196-01Z ONLY).



## 767 MAINTENANCE PLANNING DATA

MPD ITEM NUMBER	ACCESS	INTERVAL	APPLICABILITY		MAN HOURS	ZONE	767 ZONAL MAINTENANCE PROGRAM
			APL	ENG			ZONAL TITLE and TASK DESCRIPTION
0600-200-01Z		S 1C	ALL	ALL	1	200	<p>*** UPPER HALF OF FUSELAGE - EXTERIOR PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ALL FUSELAGE INSTALLATIONS IN MAJOR ZONE 200.</p> <p>CPC NOTE: CORROSION PREVENTION &amp; CONTROL BASIC TASK REQUIRED</p>
0600-211-01Z 0600-212-01Z		1C	ALL	ALL	2	211 212	<p>*** CONTROL CABIN PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.</p>
0600-221-01Z 0600-222-01Z	NOTE 831 841	1C	PASS	ALL	2	221 222	<p>*** PASSENGER CABIN - SECTION 41 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.</p> <p>ACCESS NOTE: REMOVAL OF SIDEWALL PANELS NOT REQUIRED BUT ENTRY/SERVICE DOORS SHOULD BE OPEN.</p>
0600-221-02Z 0600-222-02Z	NOTE 837	1C	FRTR	ALL	2	221 222	<p>***MAIN CARGO DECK - SECTION 41 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.</p> <p>ACCESS NOTE: ENTRY DOOR SHOULD BE OPEN.</p> <p>ACCESS NOTE: BOTH SIDES OF RIGID BARRIER.</p> <p>CPC NOTE: CORROSION PREVENTION &amp; CONTROL BASIC TASK REQUIRED</p>
0600-221-03Z 0600-222-03Z	NOTE	4C	NOTE	ALL	2	221 223	<p>***CREW ENTRY DOOR PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.</p> <p>ACCESS NOTE: DOOR SIDEWALL PANEL REMOVED.</p> <p>ACCESS NOTE: OPEN COUNTERBALANCE ACCESS PANEL.</p> <p>AIRPLANE NOTE: APPLICABLE TO PF AND GMF AIRPLANES.</p>
0600-223-01Z 0600-224-01Z	NOTE 2231 2232	4C	PASS	ALL	2	223 224	<p>*** AREA ABOVE CEILING PASS CABIN - SEC 41 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.</p> <p>ACCESS NOTE: REMOVAL OF INSULATION NOT REQUIRED BUT ENTRY/SERVICE DOORS SHOULD BE CLOSED.</p>



## 767 MAINTENANCE PLANNING DATA

MPD ITEM NUMBER	ACCESS	INTERVAL	APPLICABILITY		MAN HOURS	ZONE	767 ZONAL MAINTENANCE PROGRAM
			APL	ENG			ZONAL TITLE and TASK DESCRIPTION
0600-223-02Z 0600-224-02Z	NOTE	4C	FRTR	ALL	2	223 224	<p>***AREA ABOVE CEILING - SECTION 41 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.</p> <p>ACCESS NOTE: REMOVAL OF INSULATION NOT REQUIRED BUT ENTRY DOOR SHOULD BE CLOSED.</p> <p>ACCESS NOTE: REMOVAL OF MAIN CARGO COMPARTMENT CEILING LINERS STA 239.5 TO STA 434 IS REQUIRED.</p> <p>CPC NOTE: CORROSION PREVENTION &amp; CONTROL BASIC TASK REQUIRED</p>
0600-231-01Z 0600-232-01Z	NOTE	1C	PASS	ALL	2	231 232	<p>*** PASSENGER CABIN - SECTION 43 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.</p> <p>ACCESS NOTE: REMOVAL OF SIDEWALL PANELS NOT REQUIRED.</p>
0600-231-02Z 0600-232-02Z	NOTE	1C	FRTR	ALL	2	231 232	<p>***MAIN CARGO DECK - SECTION 43 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.</p> <p>ACCESS NOTE: REMOVAL OF CARGO COMPARTMENT LINERS NOT REQUIRED.</p> <p>CPC NOTE: CORROSION PREVENTION &amp; CONTROL BASIC TASK REQUIRED</p>
0600-233-01Z 0600-234-01Z	NOTE 2331	4C	PASS	ALL	1	233 234	<p>*** AREA ABOVE PASS CABIN CEILING - SEC 43 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.</p> <p>ACCESS NOTE: REMOVAL OF INSULATION NOT REQUIRED.</p>
0600-233-02Z 0600-234-02Z	NOTE	4C	FRTR	ALL	1	233 234	<p>***AREA ABOVE CEILING - SECTION 43 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.</p> <p>ACCESS NOTE: REMOVAL OF INSULATION NOT REQUIRED.</p> <p>ACCESS NOTE: REMOVAL OF MAIN CARGO COMPARTMENT CEILING LINERS STA 434 TO STA 785.9 IS REQUIRED.</p>





## 767 MAINTENANCE PLANNING DATA

MPD ITEM NUMBER	ACCESS	INTERVAL	APPLICABILITY		MAN HOURS	ZONE	767 ZONAL MAINTENANCE PROGRAM
			APL	ENG			ZONAL TITLE and TASK DESCRIPTION
0600-241-01Z 0600-242-01Z	NOTE	1C	PASS	ALL	2	241 242	<p>*** PASSENGER CABIN - SECTION 45 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.</p> <p>ACCESS NOTE: REMOVAL OF SIDEWALL PANELS OR EMERGENCY ESCAPE HATCHES NOT REQUIRED.</p>
0600-241-02Z 0600-242-02Z	NOTE	1C	FRTR	ALL	2	241 242	<p>***MAIN CARGO DECK - SECTION 45 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.</p> <p>ACCESS NOTE: REMOVAL OF CARGO COMPARTMENT LINERS NOT REQUIRED.</p> <p>CPC NOTE: CORROSION PREVENTION &amp; CONTROL BASIC TASK REQUIRED</p>
0600-243-01Z 0600-244-01Z	NOTE 2431	4C	PASS	ALL	1	243 244	<p>*** AREA ABOVE PASS CABIN CEILING - SEC 45 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.</p> <p>ACCESS NOTE: REMOVAL OF INSULATION NOT REQUIRED.</p>
0600-243-02Z 0600-244-02Z	NOTE	4C	FRTR	ALL	1	243 244	<p>***AREA ABOVE CEILING - SECTION 45 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.</p> <p>ACCESS NOTE: REMOVAL OF INSULATION NOT REQUIRED.</p> <p>ACCESS NOTE: REMOVAL OF MAIN CARGO COMPARTMENT CEILING LINERS STA 785.9 TO STA 1087.</p>
0600-251-01Z 0600-252-01Z	NOTE 833 843	1C	PASS	ALL	2	251 252	<p>*** PASSENGER CABIN - SECTION 46 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.</p> <p>ACCESS NOTE: REMOVAL OF SIDEWALL PANELS NOT REQUIRED BUT ENTRY/SERVICE DOORS SHOULD BE OPEN.</p>
0600-251-02Z 0600-252-02Z	NOTE	1C	FRTR	ALL	2	251 252	<p>***MAIN CARGO DECK - SECTION 46 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.</p> <p>ACCESS NOTE: REMOVAL OF CARGO COMPARTMENT LINERS NOT REQUIRED.</p> <p>CPC NOTE: CORROSION PREVENTION &amp; CONTROL BASIC TASK REQUIRED</p>



## 767 MAINTENANCE PLANNING DATA

MPD ITEM NUMBER	ACCESS	INTERVAL	APPLICABILITY		MAN HOURS	ZONE	767 ZONAL MAINTENANCE PROGRAM
			APL	ENG			ZONAL TITLE and TASK DESCRIPTION
0600-253-01Z 0600-254-01Z	NOTE 2531	4C	PASS	ALL	2.5	253 254	<p>*** AREA ABOVE PASS CABIN CEILING - SEC 46 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.</p> <p>ACCESS NOTE: SCULPTURED PANELS: STA 1065 TO 1439, AFT LOWERED CEILING PANELS NO. 1 AND 2, STA 1515 TO 1569. REMOVAL OF INSULATION NOT REQUIRED, BUT ENTRY/SERVICE DOORS SHOULD BE CLOSED.</p>
0600-253-02Z 0600-254-02Z	NOTE	4C	FRTR	ALL	2.5	253 254	<p>*** AREA ABOVE CEILING - SECTION 46 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.</p> <p>ACCESS NOTE: REMOVAL OF INSULATION NOT REQUIRED.</p> <p>ACCESS NOTE: REMOVAL OF MAIN CARGO COMPARTMENT CEILING LINERS STA 1087 TO STA 1582 IS REQUIRED.</p>
0600-311-01Z 0600-312-01Z	312AR	1C	ALL	ALL	2	311 312	<p>*** AREAS AFT OF PRESS B/H TO BS 1725.5 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.</p> <p>CPC NOTE: CORROSION PREVENTION &amp; CONTROL BASIC TASK REQUIRED</p>
0600-311-02Z 0600-312-02Z		1C	NOTE	ALL	0.2	311 312	<p>*** AREAS AFT OF PRESS B/H TO BS 1725.5 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE WITH TAIL SKID EXTENDED.</p> <p>AIRPLANE NOTE: APPLICABLE TO 767-300 AND 767-400ER</p>
0600-313-01Z	312AR 313AL	1C	ALL	ALL	0.75	313	<p>*** STABILIZER TORSION BOX COMPT - LEFT PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.</p> <p>CPC NOTE: CORROSION PREVENTION &amp; CONTROL BASIC TASK REQUIRED</p>
0600-314-01Z	312AR 313AL	1C	ALL	ALL	0.75	314	<p>*** STABILIZER TORSION BOX COMPT - RIGHT PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.</p> <p>CPC NOTE: CORROSION PREVENTION &amp; CONTROL BASIC TASK REQUIRED</p>



## 767 MAINTENANCE PLANNING DATA

MPD ITEM NUMBER	ACCESS	INTERVAL	APPLICABILITY		MAN HOURS	ZONE	767 ZONAL MAINTENANCE PROGRAM
			APL	ENG			ZONAL TITLE and TASK DESCRIPTION
0600-315-01Z 0600-316-01Z	315AL 316AR	1C	ALL	ALL	1.2	315 316	*** APU COMPARTMENT PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES AS VISIBLE WITH APU INSTALLED.
0600-315-02Z 0600-316-02Z	313AL 315AL 315BL 316AR	APU CNG	ALL	ALL	1	315 316	*** APU COMPARTMENT PERFORM INTERNAL GENERAL VISUAL INSPECTION OF AREA EXPOSED BY APU REMOVAL.
0600-321-01Z	321C 321D 321E 321K	S 8C	ALL	ALL	0.5	321	*** VERT STAB - REMOVABLE LEADING EDGE PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.
0600-322-01Z	322AL 322AR 323AL 323AR	S 4C	ALL	ALL	0.5	322	*** VERT STAB - AUX SPAR TO FRONT SPAR PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.
0600-322-02Z	321BL 321BR 321C 321D 321E 321FZ 321GZ 321HZ 321K 321LZ 321MZ 321NZ 321PZ 321QZ 321RZ 321SZ 322AL 322AR 322CL	S 8C	ALL	ALL	0.5	322	*** VERT STAB - AUX SPAR TO FRONT SPAR PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.



## 767 MAINTENANCE PLANNING DATA

MPD ITEM NUMBER	ACCESS	INTERVAL	APPLICABILITY		MAN HOURS	ZONE	767 ZONAL MAINTENANCE PROGRAM
			APL	ENG			ZONAL TITLE and TASK DESCRIPTION
0600-323-01Z	311AZ 312AR 323AL 323AR	S 2C	ALL	ALL	0.7	323	*** VERT STAB - FRONT SPAR TO REAR SPAR PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE, FIN-BODY DECK TO RIB 10.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-323-02Z	324PL 324QZ 324RZ 324SL 324TZ 324UZ 324WL 324XZ 324YZ 324ZZ	S 8C	ALL	ALL	0.5	323	*** VERT STAB - FRONT SPAR TO REAR SPAR PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE ABOVE RIB 10.
0600-324-01Z	324BL 324EL 324GL 324JL 324LL 324PL 324SL 324WL	1C	ALL	ALL	0.8	324	*** VERT STAB - REAR SPAR TO TRAILING EDGE PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-324-02Z		2C	ALL	ALL	0.5	324	*** VERT STAB - REAR SPAR TO TRAILING EDGE PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-325-01Z		1C	ALL	ALL	0.3	325	*** RUDDER PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED



## 767 MAINTENANCE PLANNING DATA

MPD ITEM NUMBER	ACCESS	INTERVAL	APPLICABILITY		MAN HOURS	ZONE	767 ZONAL MAINTENANCE PROGRAM
			APL	ENG			ZONAL TITLE and TASK DESCRIPTION
0600-326-01Z		1C	ALL	ALL	0.3	326	*** VERT STABILIZER - TIP PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-331-02Z 0600-341-02Z	312AR 313AL	S 1C	ALL	ALL	0.4	331 341	*** HORIZONTAL STAB CENTER SECTION PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONES.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-331-01Z 0600-341-01Z	312AR 341AZ	S 2C	ALL	ALL	0.4	331 341	*** HORIZONTAL STAB CENTER SECTION PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED (0600-341-01Z ONLY).
0600-334-01Z 0600-344-01Z	335AAZ 335EB 335GB 335HB 345AAZ 345EB 345GB 345HB	4C	ALL	ALL	1.4	334 344	*** HORZ STAB - FRONT TO REAR SPAR PERFORM INTERNAL GENERAL VISUAL INSPECTION OF AREA FORWARD OF REAR SPAR, AND BETWEEN RIBS 8 AND 11 (OTHER AREAS REQUIRE NO ADDITIONAL ZONAL GENERAL VISUAL INSPECTION TASK).
0600-335-01Z 0600-345-01Z	335CB 335DB 335EB 335GB 335HB 345CB 345DB 345EB 345GB 345HB	S 1C	ALL	ALL	0.4	335 345	*** HORZ STAB - REAR SPAR TO STAB TE PERFORM INTERNAL GENERAL VISUAL INSPECTION OF AREAS BETWEEN RIB 3 (STABILIZER STATION 107.9/122.6) AND RIB 11 (STABILIZER STATION 311.6).



## 767 MAINTENANCE PLANNING DATA

MPD ITEM NUMBER	ACCESS	INTERVAL	APPLICABILITY		MAN HOURS	ZONE	767 ZONAL MAINTENANCE PROGRAM
			APL	ENG			ZONAL TITLE and TASK DESCRIPTION
0600-335-03Z 0600-345-03Z		2C	ALL	ALL	0.4	335 345	*** HORZ STAB - REAR SPAR TO STAB TE PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONES.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-335-02Z 0600-345-02Z	335BB 335CB 335DB 335JB 335KB 335LB 335MB 345BB 345CB 345DB 345JB 345KB 345LB 345MB	S 4C	ALL	ALL	0.4	335 345	*** HORZ STAB - REAR SPAR TO STAB TE PERFORM INTERNAL GENERAL VISUAL INSPECTION OF AREAS OUTBOARD OF RIB 11.
0600-338-01Z 0600-348-01Z		1C	ALL	ALL	0.4	338 348	*** HORIZONTAL STABILIZER - TIP PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONES.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-411-02Z	413AL 414AR 415AL 416AR 417AL 418AR	1C	ALL	4000	2	411	*** ENGINE 1 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF THE ZONE.
0600-412-02Z	413AL 414AR	1C	ALL	4000	0.3	412	*** NOSE COWL - ENGINE 1 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE.



## 767 MAINTENANCE PLANNING DATA

MPD ITEM NUMBER	ACCESS	INTERVAL	APPLICABILITY		MAN HOURS	ZONE	767 ZONAL MAINTENANCE PROGRAM
			APL	ENG			ZONAL TITLE and TASK DESCRIPTION
0600-413-01Z 0600-414-01Z	413AL 414AR	1C	ALL	4000	0.4	413 414	*** FAN COWL PANELS - ENGINE 1 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONES.
0600-415-01Z 0600-416-01Z	NOTE 415AL 416AR	1C	ALL	4000	0.8	415 416	*** THRUST REVERSERS - ENGINE 1 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONES.  ACCESS NOTE: PORTIONS OF THIS ZONAL TASK REQUIRE THE FAN DUCT COWL AND THRUST REVERSER HALVES TO BE CLOSED.
0600-415-02Z 0600-416-02Z	4151	1C	ALL	4000	0.6	415 416	*** THRUST REVERSERS - ENGINE 1 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.
0600-417-01Z 0600-418-01Z		1C	ALL	4000	0.4	417 418	*** CORE COWL PANELS - ENGINE 1 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONES.
0600-417-02Z 0600-418-02Z	417AL 418AR	1C	ALL	4000	0.5	417 418	*** CORE COWL PANELS - ENGINE 1 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONES.
0600-421-02Z	423AL 424AR 425AL 426AR 427AL 428AR	1C	ALL	4000	2	421	*** ENGINE 2 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE.
0600-422-02Z	423AL 424AR	1C	ALL	4000	0.3	422	*** NOSE COWL - ENGINE 2 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE.
0600-423-01Z 0600-424-01Z	423AL 424AR	1C	ALL	4000	0.4	423 424	*** FAN COWL PANELS - ENGINE 2 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONES.



## 767 MAINTENANCE PLANNING DATA

MPD ITEM NUMBER	ACCESS	INTERVAL	APPLICABILITY		MAN HOURS	ZONE	767 ZONAL MAINTENANCE PROGRAM
			APL	ENG			ZONAL TITLE and TASK DESCRIPTION
0600-425-01Z 0600-426-01Z	NOTE 425AL 426AR	1C	ALL	4000	0.8	425 426	*** THRUST REVERSERS - ENGINE 2 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONES.  ACCESS NOTE: PORTIONS OF THIS ZONAL TASK REQUIRE THE FAN DUCT COWL AND THRUST REVERSER HALVES TO BE CLOSED.
0600-425-02Z 0600-426-02Z	4251	1C	ALL	4000	0.6	425 426	*** THRUST REVERSERS - ENGINE 2 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.
0600-427-01Z 0600-428-01Z		1C	ALL	4000	0.4	427 428	*** CORE COWL PANELS - ENGINE 2 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONES.
0600-427-02Z 0600-428-02Z	427AL 428AR	1C	ALL	4000	0.5	427 428	*** CORE COWL PANELS - ENGINE 2 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONES.
0600-431-01Z	431AT 431BT 431DT 431ET	1C	ALL	4000	0.3	431	*** FWD NACELLE STRUT FAIRING - STRUT 1 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.
0600-432-01Z	432CL	1C	ALL	4000	0.2	432	*** FORWARD TORQUE BOX - STRUT 1 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE IN CONJUNCTION WITH ZONAL TASK 0600-431-01Z.
0600-433-01Z	432FL	1C	ALL	4000	0.3	433	*** UNDERWING FAIRING - STRUT 1 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.
0600-434-01Z 0600-436-01Z	434AL 436AL 436BL	1C	ALL	4000	0.4	434 436	*** MID AND AFT TORQUE BOXES - STRUT 1 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.
0600-435-01Z	436CL 436CR	1C	ALL	4000	0.2	435	*** CORE COWL SKIRT FAIRINGS - STRUT 1 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE IN CONJUNCTION WITH ZONAL TASKS 0600-417-02Z, 0600-418-02Z.





## 767 MAINTENANCE PLANNING DATA

MPD ITEM NUMBER	ACCESS	INTERVAL	APPLICABILITY		MAN HOURS	ZONE	767 ZONAL MAINTENANCE PROGRAM
			APL	ENG			ZONAL TITLE and TASK DESCRIPTION
0600-437-01Z	437AL 437AR 437BL 437BR 437DB	1C	ALL	4000	0.3	437	*** AFT NACELLE STRUT FAIRINGS - STRUT 1 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.
0600-441-01Z	441AT 441BT 441DT 441ET	1C	ALL	4000	0.3	441	*** FWD NACELLE STRUT FAIRING - STRUT 2 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.
0600-442-01Z	442CL	1C	ALL	4000	0.2	442	*** FORWARD TORQUE BOX - STRUT 2 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE IN CONJUNCTION WITH ZONAL TASK 0600-441-01Z.
0600-443-01Z	442FR	1C	ALL	4000	0.3	443	*** UNDERWING FAIRING - STRUT 2 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.
0600-444-01Z 0600-446-01Z	444AR 446AR 446BR	1C	ALL	4000	0.4	444 446	*** MID AND AFT TORQUE BOXES - STRUT 2 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.
0600-445-01Z	446CL 446CR	1C	ALL	4000	0.2	445	*** CORE COWL SKIRT FAIRINGS - STRUT 2 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE IN CONJUNCTION WITH ZONAL TASKS 0600-427-02Z, 0600-428-02Z.
0600-447-01Z	447AL 447AR 447BL 447BR 447DB	1C	ALL	4000	0.3	447	*** AFT NACELLE STRUT FAIRINGS - STRUT 2 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.
0600-410-01Z		1A	ALL	524	0.6	410	*** ENGINE 1 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF THE ZONE.
0600-410-02Z		4A	ALL	524	0.3	410	*** ENGINE 1 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF THE ZONE. (COLD STREAM DUCT AND EXHAUST AREA ONLY).



## 767 MAINTENANCE PLANNING DATA

MPD ITEM NUMBER	ACCESS	INTERVAL	APPLICABILITY		MAN HOURS	ZONE	767 ZONAL MAINTENANCE PROGRAM
			APL	ENG			ZONAL TITLE and TASK DESCRIPTION
0600-411-01Z	413 414	4A	ALL	524	1	411	*** ENGINE 1 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF THE ZONE WITH THE HINGED COWLS OPEN.
0600-411-02Z	411CL 411CR 411DL 411EL 411FL 411GL 411KL 411ML 411NL 411QR 411TR	1C	ALL	524	0.8	411	*** ENGINE 1 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF THE ZONE.
0600-412-01Z	412BR 412BT 412CR 412DL 412EL 413 414	1C	ALL	524	1	412	*** NOSE COWL - ENGINE 1 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF THE ZONE.
0600-413-01Z 0600-414-01Z	413 414	1C	ALL	524	0.6	413 414	*** HINGED COWL INNER FACE - ENGINE 1 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF THE ZONE.
0600-415-01Z 0600-416-01Z	NOTE	1C	ALL	524	0.3	415 416	*** THRUST REVERSER UNIT - ENGINE 1 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF THE ZONE.  ACCESS NOTE: THRUST REVERSER IN STOWED POSITION.
0600-415-02Z 0600-416-02Z	NOTE 415AL 416AR	1C	ALL	524	0.4	415 416	*** THRUST REVERSER UNIT - ENGINE 1 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF THE ZONE.  ACCESS NOTE: THRUST REVERSER DEPLOYED.
0600-420-01Z		1A	ALL	524	0.6	420	*** ENGINE 2 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF THE ZONE.

D622T001



## 767 MAINTENANCE PLANNING DATA

MPD ITEM NUMBER	ACCESS	INTERVAL	APPLICABILITY		MAN HOURS	ZONE	767 ZONAL MAINTENANCE PROGRAM
			APL	ENG			ZONAL TITLE and TASK DESCRIPTION
0600-420-02Z		4A	ALL	524	0.3	420	*** ENGINE 2 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF THE ZONE. (COLD STREAM DUCT AND EXHAUST AREA ONLY).
0600-421-01Z	423 424	4A	ALL	524	1	421	*** ENGINE 2 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF THE ZONE WITH THE HINGED COWLS OPEN.
0600-421-02Z	421CL 421CR 421DL 421EL 421FL 421GL 421KL 421ML 421NL 421QR 421TR	1C	ALL	524	0.8	421	*** ENGINE 2 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF THE ZONE.
0600-422-01Z	422BR 422BT 422CR 422DL 422EL 423 424	1C	ALL	524	1	422	*** NOSE COWL - ENGINE 2 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF THE ZONE.
0600-423-01Z 0600-424-01Z	423 424	1C	ALL	524	0.6	423 424	*** HINGED COWL INNER FACE - ENGINE 2 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF THE ZONE.
0600-425-01Z 0600-426-01Z	NOTE	1C	ALL	524	0.3	425 426	*** THRUST REVERSER UNIT - ENGINE 2 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF THE ZONE.  ACCESS NOTE: THRUST REVERSER IN THE STOWED POSITION.



## 767 MAINTENANCE PLANNING DATA

MPD ITEM NUMBER	ACCESS	INTERVAL	APPLICABILITY		MAN HOURS	ZONE	767 ZONAL MAINTENANCE PROGRAM
			APL	ENG			ZONAL TITLE and TASK DESCRIPTION
0600-425-02Z 0600-426-02Z	NOTE 425AL 426AR	1C	ALL	524	0.4	425 426	*** THRUST REVERSER UNIT - ENGINE 2 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF THE ZONE.  ACCESS NOTE: THRUST REVERSER DEPLOYED.
0600-430-01Z		2A	ALL	524	0.3	430	*** STRUT 1 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF THE ZONE FROM GROUND LEVEL.
0600-430-02Z		1C	ALL	524	0.3	430	*** STRUT NO. 1 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF THE ZONE (INCLUDING FAIRINGS).  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-431-01Z	431AT 431BT	1C	ALL	524	0.2	431	*** FORWARD FAIRING - STRUT 1 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF THE ZONE.
0600-432-01Z	432AT 432CT 432DL	1C	ALL	524	0.3	432	*** UPPER STRUCTURE - STRUT 1 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF THE ZONE.
0600-433-01Z	433AL 433CL 433GR 433HR 433JR 433KR	1C	ALL	524	0.3	433	*** MID STRUCTURE - STRUT 1 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF THE ZONE.
0600-434-01Z	434EB	1C	ALL	524	0.5	434	*** AFT FAIRING - STRUT 1 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF THE ZONE.
0600-440-01Z		2A	ALL	524	0.3	440	*** STRUT 2 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF THE ZONE FROM GROUND LEVEL.



## 767 MAINTENANCE PLANNING DATA

MPD ITEM NUMBER	ACCESS	INTERVAL	APPLICABILITY		MAN HOURS	ZONE	767 ZONAL MAINTENANCE PROGRAM
			APL	ENG			ZONAL TITLE and TASK DESCRIPTION
0600-440-02Z		1C	ALL	524	0.3	440	*** STRUT NO. 2 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF THE ZONE (INCLUDING FAIRINGS).  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-441-01Z	441AT 441BT	1C	ALL	524	0.2	441	*** FORWARD FAIRING - STRUT 2 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF THE ZONE.
0600-442-01Z	442AT 442CT 442ER	1C	ALL	524	0.3	442	*** UPPER STRUCTURE - STRUT 2 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF THE ZONE.
0600-443-01Z	443AL 443BL 443CL 443DL 443GL 443KR	1C	ALL	524	0.3	443	*** MID STRUCTURE - STRUT 2 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF THE ZONE.
0600-444-01Z	444EB	1C	ALL	524	0.5	444	*** AFT FAIRING - STRUT 2 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF THE ZONE.
0600-411-01Z		00400 CYC	ALL	7R4	1	411	*** ENGINE 1 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF INLET AND EXHAUST AREA OF THE ZONE.
0600-411-02Z	413AL 414AR 415AL 416AR 417AL 418AR	1C	ALL	7R4	2	411	*** ENGINE 1 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF THE ZONE.
0600-412-02Z	413AL 414AR	1C	ALL	7R4	0.3	412	*** NOSE COWL - ENGINE 1 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE.



## 767 MAINTENANCE PLANNING DATA

MPD ITEM NUMBER	ACCESS	INTERVAL	APPLICABILITY		MAN HOURS	ZONE	767 ZONAL MAINTENANCE PROGRAM
			APL	ENG			ZONAL TITLE and TASK DESCRIPTION
0600-412-01Z		00400 CYC	ALL	7R4	0.2	412	*** NOSE COWL - ENGINE 1 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE.
0600-413-01Z 0600-414-01Z	413AL 414AR	1C	ALL	7R4	0.4	413 414	*** FAN COWL PANELS - ENGINE 1 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONES.
0600-415-01Z 0600-416-01Z	NOTE 415AL 416AR	1C	ALL	7R4	0.8	415 416	*** THRUST REVERSERS - ENGINE 1 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONES.  ACCESS NOTE: PORTIONS OF THIS ZONAL TASK REQUIRE THE FAN DUCT COWL AND THRUST REVERSER HALVES TO BE CLOSED.
0600-415-02Z 0600-416-02Z	4151	1C	ALL	7R4	0.6	415 416	*** THRUST REVERSERS - ENGINE 1 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.
0600-417-01Z 0600-418-01Z		1C	ALL	7R4	0.4	417 418	*** CORE COWL PANELS - ENGINE 1 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONES.
0600-417-02Z 0600-418-02Z	417AL 418AR	1C	ALL	7R4	0.5	417 418	*** CORE COWL PANELS - ENGINE 1 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONES.
0600-421-01Z		00400 CYC	ALL	7R4	1	421	*** ENGINE 2 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF INLET AND EXHAUST AREA OF THE ZONE.
0600-421-02Z	423AL 424AR 425AL 426AR 427AL 428AR	1C	ALL	7R4	2	421	*** ENGINE 2 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE.
0600-422-02Z	423AL 424AR	1C	ALL	7R4	0.3	422	*** NOSE COWL - ENGINE 2 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE.



## 767 MAINTENANCE PLANNING DATA

MPD ITEM NUMBER	ACCESS	INTERVAL	APPLICABILITY		MAN HOURS	ZONE	767 ZONAL MAINTENANCE PROGRAM
			APL	ENG			ZONAL TITLE and TASK DESCRIPTION
0600-422-01Z		00400 CYC	ALL	7R4	0.3	422	*** NOSE COWL - ENGINE 2 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE.
0600-423-01Z 0600-424-01Z	423AL 424AR	1C	ALL	7R4	0.4	423 424	*** FAN COWL PANELS - ENGINE 2 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONES.
0600-425-01Z 0600-426-01Z	NOTE 425AL 426AR	1C	ALL	7R4	0.8	425 426	*** THRUST REVERSERS - ENGINE 2 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONES.  ACCESS NOTE: PORTIONS OF THIS ZONAL TASK REQUIRE THE FAN DUCT COWL AND THRUST REVERSER HALVES TO BE CLOSED.
0600-425-02Z 0600-426-02Z	4251	1C	ALL	7R4	0.6	425 426	*** THRUST REVERSERS - ENGINE 2 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.
0600-427-01Z 0600-428-01Z		1C	ALL	7R4	0.4	427 428	*** CORE COWL PANELS - ENGINE 2 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONES.
0600-427-02Z 0600-428-02Z	427AL 428AR	1C	ALL	7R4	0.5	427 428	*** CORE COWL PANELS - ENGINE 2 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONES.
0600-431-01Z	431AT 431BT 431DT 431ET	1C	ALL	7R4	0.3	431	*** FWD NACELLE STRUT FAIRING - STRUT 1 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.
0600-432-01Z	432CL	1C	ALL	7R4	0.2	432	*** FORWARD TORQUE BOX - STRUT 1 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE IN CONJUNCTION WITH ZONAL TASK 0600-431-01Z.
0600-433-01Z	432FL	1C	ALL	7R4	0.3	433	*** UNDERWING FAIRING - STRUT 1 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED



## 767 MAINTENANCE PLANNING DATA

MPD ITEM NUMBER	ACCESS	INTERVAL	APPLICABILITY		MAN HOURS	ZONE	767 ZONAL MAINTENANCE PROGRAM
			APL	ENG			ZONAL TITLE and TASK DESCRIPTION
0600-434-01Z 0600-436-01Z	434AL 436AL 436BL	1C	ALL	7R4	0.4	434 436	*** MID AND AFT TORQUE BOXES - STRUT 1 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.
0600-435-01Z	436CL 436CR	1C	ALL	7R4	0.2	435	*** CORE COWL SKIRT FAIRINGS - STRUT 1 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE IN CONJUNCTION WITH ZONAL TASKS 0600-417-02Z, 0600-418-02Z.
0600-437-01Z	437AL 437AR 437BL 437BR 437DB	1C	ALL	7R4	0.3	437	*** AFT NACELLE STRUT FAIRINGS - STRUT 1 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.
0600-441-01Z	441AT 441BT 441DT 441ET	1C	ALL	7R4	0.3	441	*** FWD NACELLE STRUT FAIRING - STRUT 2 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.
0600-442-01Z	442CL	1C	ALL	7R4	0.2	442	*** FORWARD TORQUE BOX - STRUT 2 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE IN CONJUNCTION WITH ZONAL TASK 0600-441-01Z.
0600-443-01Z	442FR	1C	ALL	7R4	0.3	443	*** UNDERWING FAIRING - STRUT 2 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-444-01Z 0600-446-01Z	444AR 446AR 446BR	1C	ALL	7R4	0.4	444 446	*** MID AND AFT TORQUE BOXES - STRUT 2 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.
0600-445-01Z	446CL 446CR	1C	ALL	7R4	0.2	445	*** CORE COWL SKIRT FAIRINGS - STRUT 2 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE IN CONJUNCTION WITH ZONAL TASKS 0600-427-02Z, 0600-428-02Z.





## 767 MAINTENANCE PLANNING DATA

MPD ITEM NUMBER	ACCESS	INTERVAL	APPLICABILITY		MAN HOURS	ZONE	767 ZONAL MAINTENANCE PROGRAM
			APL	ENG			ZONAL TITLE and TASK DESCRIPTION
0600-447-01Z	447AL 447AR 447BL 447BR 447DB	1C	ALL	7R4	0.3	447	*** AFT NACELLE STRUT FAIRINGS - STRUT 2 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.
0600-411-01Z		00400 CYC	ALL	80	1	411	*** ENGINE 1 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF INLET AND EXHAUST AREAS OF THE ZONE.
0600-411-02Z	413AL 414AR 415AL 415FB 416AR 417AL 418AR	1C	ALL	80	2	411	*** ENGINE 1 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONES.
0600-412-02Z	413AL 414AR	1C	ALL	80	0.3	412	*** NOSE COWL - ENGINE 1 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE.
0600-412-01Z		00400 CYC	ALL	80	0.2	412	*** NOSE COWL - ENGINE 1 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE.
0600-413-01Z 0600-414-01Z	413AL 414AR	1C	ALL	80	0.4	413 414	*** FAN COWL PANELS - ENGINE 1 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONES.
0600-415-01Z 0600-416-01Z	NOTE 415AL 415FB 416AR	1C	ALL	80	0.8	415 416	*** THRUST REVERSERS - ENGINE 1 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONES.  ACCESS NOTE: PORTIONS OF THIS ZONAL TASK REQUIRE THE FAN DUCT COWL AND THRUST REVERSER HALVES TO BE CLOSED.
0600-415-02Z 0600-416-02Z	4151	1C	ALL	80	0.6	415 416	*** THRUST REVERSERS - ENGINE 1 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.



## 767 MAINTENANCE PLANNING DATA

MPD ITEM NUMBER	ACCESS	INTERVAL	APPLICABILITY		MAN HOURS	ZONE	767 ZONAL MAINTENANCE PROGRAM
			APL	ENG			ZONAL TITLE and TASK DESCRIPTION
0600-417-01Z 0600-418-01Z		1C	ALL	80	0.4	417 418	*** CORE COWL PANELS - ENGINE 1 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONES.
0600-417-02Z 0600-418-02Z	417AL 418AR	1C	ALL	80	0.5	417 418	*** CORE COWL PANELS - ENGINE 1 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONES.
0600-421-01Z		00400 CYC	ALL	80	1	421	*** ENGINE 2 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF INLET AND EXHAUST AREA OF THE ZONE.
0600-421-02Z	423AL 424AR 425AL 425FB 426AR 427AL 428AR	1C	ALL	80	2	421	*** ENGINE 2 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE.
0600-422-02Z	423AL 424AR	1C	ALL	80	0.3	422	*** NOSE COWL - ENGINE 2 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE.
0600-422-01Z		00400 CYC	ALL	80	0.2	422	*** NOSE COWL - ENGINE 2 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE.
0600-423-01Z 0600-424-01Z	423AL 424AR	1C	ALL	80	0.4	423 424	*** FAN COWL PANELS - ENGINE 2 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONES.
0600-425-01Z 0600-426-01Z	NOTE 425AL 425FB 426AR	1C	ALL	80	0.8	425 426	*** THRUST REVERSERS - ENGINE 2 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONES.  ACCESS NOTE: PORTIONS OF THIS ZONAL TASK REQUIRE THE FAN DUCT COWL AND THRUST REVERSER HALVES TO BE CLOSED.



## 767 MAINTENANCE PLANNING DATA

MPD ITEM NUMBER	ACCESS	INTERVAL	APPLICABILITY		MAN HOURS	ZONE	767 ZONAL MAINTENANCE PROGRAM
			APL	ENG			ZONAL TITLE and TASK DESCRIPTION
0600-425-02Z 0600-426-02Z	4251	1C	ALL	80	0.6	425 426	*** THRUST REVERSERS - ENGINE 2 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.
0600-427-01Z 0600-428-01Z		1C	ALL	80	0.4	427 428	*** CORE COWL PANELS - ENGINE 2 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONES.
0600-427-02Z 0600-428-02Z	427AL 428AR	1C	ALL	80	0.5	427 428	*** CORE COWL PANELS - ENGINE 2 PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONES.
0600-431-01Z	431AT 431BT 432DL 432DR 432ET	1C	ALL	80	0.3	431	*** FWD NACELLE STRUT FAIRING - STRUT 1 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.
0600-432-01Z	432CL	1C	ALL	80	0.2	432	*** FORWARD TORQUE BOX - STRUT 1 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES IN CONJUNCTION WITH ZONAL TASK 0600-431-01Z.
0600-433-01Z	432FL	1C	ALL	80	0.3	433	*** UNDERWING FAIRING - STRUT 1 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-434-01Z 0600-436-01Z	434AL 436AL 436BL 436CL	1C	ALL	80	0.4	434 436	*** MID AND AFT TORQUE BOXES - STRUT 1 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.
0600-435-01Z	436BL 436BR 436CL 436CR	1C	ALL	80	0.2	435	*** CORE COWL SKIRT FAIRINGS - STRUT 1 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE IN CONJUNCTION WITH ZONAL TASKS 0600-417-02Z, 0600-418-02Z.



## 767 MAINTENANCE PLANNING DATA

MPD ITEM NUMBER	ACCESS	INTERVAL	APPLICABILITY		MAN HOURS	ZONE	767 ZONAL MAINTENANCE PROGRAM
			APL	ENG			ZONAL TITLE and TASK DESCRIPTION
0600-437-01Z	437AL 437AR 437BL 437BR 437DB	1C	ALL	80	0.3	437	*** AFT NACELLE STRUT FAIRINGS - STRUT 1 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.
0600-441-01Z	441AT 441BT 442DL 442DR 442ET	1C	ALL	80	0.3	441	*** FWD NACELLE STRUT FAIRING - STRUT 2 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.
0600-442-01Z	442CL	1C	ALL	80	0.2	442	*** FORWARD TORQUE BOX - STRUT 2 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE IN CONJUNCTION WITH ZONAL TASK 0600-441-01Z.
0600-443-01Z	442FR	1C	ALL	80	0.3	443	*** UNDERWING FAIRING - STRUT 2 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-444-01Z 0600-446-01Z	444AR 446AR 446BR 446CR	1C	ALL	80	0.4	444 446	*** MID AND AFT TORQUE BOXES - STRUT 2 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONES.
0600-445-01Z	446BL 446BR 446CL 446CR	1C	ALL	80	0.2	445	*** CORE COWL SKIRT FAIRINGS - STRUT 2 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE IN CONJUNCTION WITH ZONAL TASKS 0600-427-02Z, 0600-428-02Z.
0600-447-01Z	447AL 447AR 447BL 447BR 447DB	1C	ALL	80	0.3	447	*** AFT NACELLE STRUT FAIRINGS - STRUT 2 PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.



## 767 MAINTENANCE PLANNING DATA

MPD ITEM NUMBER	ACCESS	INTERVAL	APPLICABILITY		MAN HOURS	ZONE	767 ZONAL MAINTENANCE PROGRAM
			APL	ENG			ZONAL TITLE and TASK DESCRIPTION
0600-511-01Z	NOTE 5004 511CB 511DB 511EB 511GB 511HB 511MB	1C 2C	ALL	ALL	0.5	511	<p>*** L WING LE TO FRONT SPAR - INBOARD PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.</p> <p>ACCESS NOTE: SPECIAL ACCESS 5004 REQUIRES EXTENSION OF THE LEADING EDGE SLATS PER MAINTENANCE MANUAL 27-81-00.</p> <p>CPC NOTE: CORROSION PREVENTION &amp; CONTROL BASIC TASK REQUIRED</p> <p>ACCESS NOTE: 511GB IS FOR V0001-V0136 ONLY.</p>
0600-511-03Z		1C	ALL	ALL	0.2	511	<p>*** L WING LE TO FRONT SPAR - INBOARD PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE.</p>
0600-511-02Z	NOTE 5004 511AB 511BB 511FB 511GB 511JB 511KB 511LB 511NB 511QB 511RB	2C	ALL	ALL	1	511	<p>*** L WING LE TO FRONT SPAR - INBOARD PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE (PERFORMING THIS TASK PRECLUDES NEED FOR ZONAL TASK 0600-511-01Z)</p> <p>CPC NOTE: CORROSION PREVENTION &amp; CONTROL BASIC TASK REQUIRED</p> <p>ACCESS NOTE: 511GB IS FOR V0001-V0136 ONLY.</p>
0600-512-01Z	5004	1C	ALL	ALL	0.3	512	<p>*** INBOARD SLAT (NO. 6) - LEFT WING PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE.</p> <p>CPC NOTE: CORROSION PREVENTION &amp; CONTROL BASIC TASK REQUIRED</p>
0600-513-01Z	NOTE	1C	ALL	ALL	0.3	513	<p>*** KRUEGER FLAP - LEFT WING PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE.</p> <p>CPC NOTE: CORROSION PREVENTION &amp; CONTROL BASIC TASK REQUIRED</p> <p>ACCESS NOTE: LE FLAP EXTENDED</p>



## 767 MAINTENANCE PLANNING DATA

MPD ITEM NUMBER	ACCESS	INTERVAL	APPLICABILITY		MAN HOURS	ZONE	767 ZONAL MAINTENANCE PROGRAM
			APL	ENG			ZONAL TITLE and TASK DESCRIPTION
0600-521-01Z	5004 521AAB 521ABB 521ACB 521ADB 521AGB 521AHB 521AJB 521AKB 521CB 521DB 521FB 521GB 521KB 521LB 521MB 521NB 521QB 521UB 521VB 521WB 521XB	1C 2C	ALL	ALL	1.5	521	*** L WING LE TO FRONT SPAR - OUTBOARD PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.
0600-521-02Z	5004 521AB 521AEB 521AFB 521ALB 521AMB 521ANB 521BB 521EB 521HB 521JB 521PB 521QB 521RB 521TB 521YB 521ZB	2C	ALL	ALL	2	521	*** L WING LE TO FRONT SPAR - OUTBOARD PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE (PERFORMING THIS TASK PRECLUDES THE NEED FOR ZONAL TASK 0600-521-01Z).  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED



## 767 MAINTENANCE PLANNING DATA

MPD ITEM NUMBER	ACCESS	INTERVAL	APPLICABILITY		MAN HOURS	ZONE	767 ZONAL MAINTENANCE PROGRAM
			APL	ENG			ZONAL TITLE and TASK DESCRIPTION
0600-522-01Z	5004	1C	ALL	ALL	0.3	522	*** OUTBOARD SLAT (NO. 5) - LEFT WING PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-522-02Z	522DT	4C	ALL	ALL	0.3	522	*** OUTBOARD SLAT (NO. 5) - LEFT WING PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.
0600-523-01Z	5004	1C	ALL	ALL	0.4	523	*** OUTBOARD SLAT (NO. 4) - LEFT WING PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-523-02Z	523AT 523FT	4C	ALL	ALL	0.2	523	*** OUTBOARD SLAT (NO. 4) - LEFT WING PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.
0600-524-01Z	5004	1C	ALL	ALL	0.4	524	*** OUTBOARD SLAT (NO. 3) - LEFT WING PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-524-02Z	524AT 524FT	4C	ALL	ALL	0.2	524	*** OUTBOARD SLAT (NO. 3) - LEFT WING PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.
0600-525-01Z	5004	1C	ALL	ALL	0.4	525	*** OUTBOARD SLAT (NO. 2) - LEFT WING PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-525-02Z	525AT 525FT	4C	ALL	ALL	0.2	525	*** OUTBOARD SLAT (NO.2) - LEFT WING PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.



## 767 MAINTENANCE PLANNING DATA

MPD ITEM NUMBER	ACCESS	INTERVAL	APPLICABILITY		MAN HOURS	ZONE	767 ZONAL MAINTENANCE PROGRAM
			APL	ENG			ZONAL TITLE and TASK DESCRIPTION
0600-526-01Z	5004	1C	ALL	ALL	0.4	526	*** OUTBOARD SLAT (NO. 1) - LEFT WING PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-526-02Z	526AT 526FT	4C	ALL	ALL	0.2	526	*** OUTBOARD SLAT (NO. 1) - LEFT WING PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.
0600-531-01Z	1331 531AB 531BB	4C	ALL	ALL	0.4	531	*** CENTER AUXILIARY TANK - LEFT WING PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-532-01Z	5001 532AB 532BB 532DB 532EB 532FB	4C	ALL	ALL	0.6	532	*** MAIN TANK (INBD OF RIB 10)-LEFT WING PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.
0600-533-01Z	533AB	1C	ALL	ALL	0.3	533	*** DRY BAY - INBOARD LEFT WING PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED





## 767 MAINTENANCE PLANNING DATA

MPD ITEM NUMBER	ACCESS	INTERVAL	APPLICABILITY		MAN HOURS	ZONE	767 ZONAL MAINTENANCE PROGRAM
			APL	ENG			ZONAL TITLE and TASK DESCRIPTION
0600-541-01Z	5001 541AB 541BB 541CB 541DB 541EB 541FB 541GB 541HB 541JB 541KB 541LB 541MB 541NB 541PB 541QB 541SB 541TB 541UB 541VB 541WB 541XB	4C	ALL	ALL	1	541	*** MAIN TANK (OB OF RIB 10) - LEFT WING PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.
0600-542-01Z	5401 542AB 542BB 542CB	4C	ALL	ALL	0.3	542	*** SURGE TANK - LEFT WING PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-544-01Z		1C	ALL	ALL	0.2	544	*** WING TIP - LEFT WING PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-551-01Z	551TB 551UB	1C	ALL	ALL	0.6	551	*** REAR SPAR TO MLG SUPPORT BEAM-L WING PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.



## 767 MAINTENANCE PLANNING DATA

MPD ITEM NUMBER	ACCESS	INTERVAL	APPLICABILITY		MAN HOURS	ZONE	767 ZONAL MAINTENANCE PROGRAM
			APL	ENG			ZONAL TITLE and TASK DESCRIPTION
0600-552-01Z	552AB 552CB 552HB 561AB 561BB 561CB	1C	ALL	ALL	0.5	552	*** L MLG SUPT BEAM & REAR SPAR TO TE PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.
0600-555-01Z	5002	1C	ALL	ALL	0.6	555	*** INBOARD TRAILING EDGE FLAP - L WING PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-556-01Z		1C	ALL	ALL	0.2	556	*** INBOARD AILERON - LEFT WING PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE (AILERON LEADING EDGE AREA ONLY) IN CONJUNCTION WITH ZONAL TASK 0600-552-01Z.
0600-561-01Z	5002 5003 561LB 561MB 561NB 561RBX	1C	ALL	ALL	0.6	561	*** REAR SPAR TO WING TE - LEFT WING PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-567-01Z		1C	ALL	ALL	0.1	567	*** OUTBOARD AILERON - LEFT WING PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE (AILERON LEADING EDGE AREA ONLY) IN CONJUNCTION WITH ZONAL TASK 0600-561-01Z.
0600-567-02Z		1C	ALL	ALL	0.1	567	*** OUTBOARD AILERON - LEFT WING PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED



## 767 MAINTENANCE PLANNING DATA

MPD ITEM NUMBER	ACCESS	INTERVAL	APPLICABILITY		MAN HOURS	ZONE	767 ZONAL MAINTENANCE PROGRAM
			APL	ENG			ZONAL TITLE and TASK DESCRIPTION
0600-571-01Z	5002	1C	ALL	ALL	0.2	571	*** OB FLAP SUPPORT FAIRING - L IB FLAP PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-572-01Z	5002	1C	ALL	ALL	0.3	572	*** IB FLAP SUPPORT FAIRING - L OB FLAP PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-573-01Z	5002	1C	ALL	ALL	0.3	573	*** OB FLAP SUPPORT FAIRING - L OB FLAP PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-611-01Z	NOTE 5004 611CB 611DB 611EB 611GB 611HB 611MB	2C	ALL	ALL	0.5	611	*** R WING LE TO FRONT SPAR - INBOARD PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.  ACCESS NOTE: SPECIAL ACCESS 5004 REQUIRES EXTENSION OF THE LEADING EDGE SLATS PER MAINTENANCE MANUAL 27-81-00.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED  ACCESS NOTE: 611GB IS FOR V0001-V0136 ONLY.
0600-611-03Z		1C	ALL	ALL	0.2	611	*** R WING LE TO FRONT SPAR - INBOARD PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE.



## 767 MAINTENANCE PLANNING DATA

MPD ITEM NUMBER	ACCESS	INTERVAL	APPLICABILITY		MAN HOURS	ZONE	767 ZONAL MAINTENANCE PROGRAM
			APL	ENG			ZONAL TITLE and TASK DESCRIPTION
0600-611-02Z	NOTE 5004 611AB 611BB 611FB 611GB 611JB 611KB 611LB 611NB 611QB 611RB	1C 2C	ALL	ALL	1	611	<p>*** R WING LE TO FRONT SPAR - INBOARD PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE (PERFORMING THIS TASK PRECLUDES THE NEED FOR ZONAL TASK 0600-611-01Z).</p> <p>CPC NOTE: CORROSION PREVENTION &amp; CONTROL BASIC TASK REQUIRED</p> <p>ACCESS NOTE: 611GB IS FOR V0001-V0136 ONLY.</p>
0600-612-01Z	5004	1C	ALL	ALL	0.3	612	<p>*** INBOARD SLAT (NO. 7) - RIGHT WING PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE.</p> <p>CPC NOTE: CORROSION PREVENTION &amp; CONTROL BASIC TASK REQUIRED</p>
0600-613-01Z	NOTE	1C	ALL	ALL	0.3	613	<p>*** KRUEGER FLAP - RIGHT WING PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE.</p> <p>CPC NOTE: CORROSION PREVENTION &amp; CONTROL BASIC TASK REQUIRED</p> <p>ACCESS NOTE: LE FLAP EXTENDED</p>



## 767 MAINTENANCE PLANNING DATA

MPD ITEM NUMBER	ACCESS	INTERVAL	APPLICABILITY		MAN HOURS	ZONE	767 ZONAL MAINTENANCE PROGRAM
			APL	ENG			ZONAL TITLE and TASK DESCRIPTION
0600-621-01Z	5004 621AAB 621ABB 621ACB 621ADB 621AGB 621AHB 621AJB 621AKB 621CB 621DB 621FB 621GB 621KB 621LB 621MB 621NB 621UB 621VB 621WB 621XB	2C	ALL	ALL	1.5	621	*** R WING LE TO FRONT SPAR - OUTBOARD PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.
0600-621-02Z	NOTE 5004 621AB 621AEB 621AFB 621ALB 621AMB 621ANB 621BB 621EB 621HB 621JB 621PB 621QB 621RB 621SB 621TB 621YB 621ZB	1C 2C	ALL	ALL	2	621	*** R WING LE TO FRONT SPAR - OUTBOARD PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE. (PERFORMING THIS TASK PRECLUDES NEED FOR ZONAL TASK 0600-621-01Z)  ACCESS NOTE: AIRPLANE WILL HAVE EITHER ACCESS PANEL 621SB OR ACCESS PANELS 621PB, 621QB, AND 621RB.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED



## 767 MAINTENANCE PLANNING DATA

MPD ITEM NUMBER	ACCESS	INTERVAL	APPLICABILITY		MAN HOURS	ZONE	767 ZONAL MAINTENANCE PROGRAM
			APL	ENG			ZONAL TITLE and TASK DESCRIPTION
0600-622-01Z	5004	1C	ALL	ALL	0.3	622	*** OUTBOARD SLAT (NO. 8) - RIGHT WING PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-622-02Z	622DT	4C	ALL	ALL	0.3	622	*** OUTBOARD SLAT (NO. 8) - RIGHT WING PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.
0600-623-01Z	5004	1C	ALL	ALL	0.4	623	*** OUTBOARD SLAT (NO. 9) - RIGHT WING PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-623-02Z	623AT 623FT	4C	ALL	ALL	0.2	623	*** OUTBOARD SLAT (NO. 9) - RIGHT WING PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE
0600-624-01Z	5004	1C	ALL	ALL	0.4	624	*** OUTBOARD SLAT (NO. 10) - RIGHT WING PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-624-02Z	624AT 624FT	4C	ALL	ALL	0.2	624	*** OUTBOARD SLAT (NO. 10) - RIGHT WING PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.
0600-625-01Z	5004	1C	ALL	ALL	0.4	625	*** OUTBOARD SLAT (NO. 11) - RIGHT WING PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-625-02Z	625AT 625FT	4C	ALL	ALL	0.2	625	*** OUTBOARD SLAT (NO. 11) - RIGHT WING PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.



## 767 MAINTENANCE PLANNING DATA

MPD ITEM NUMBER	ACCESS	INTERVAL	APPLICABILITY		MAN HOURS	ZONE	767 ZONAL MAINTENANCE PROGRAM
			APL	ENG			ZONAL TITLE and TASK DESCRIPTION
0600-626-01Z	5004	1C	ALL	ALL	0.4	626	*** OUTBOARD SLAT (NO. 12) - RIGHT WING PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-626-02Z	626AT 626FT	4C	ALL	ALL	0.2	626	*** OUTBOARD SLAT (NO. 12) - RIGHT WING PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.
0600-631-01Z	1331 631AB 631BB	4C	ALL	ALL	0.4	631	*** CENTER AUXILIARY TANK - RIGHT WING PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-632-01Z	6001 632AB 632BB 632DB 632EB 632FB	4C	ALL	ALL	0.6	632	*** MAIN TANK (INBD OF RIB 10)-RIGHT WING PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.
0600-633-01Z	633AB	1C	ALL	ALL	0.3	633	*** DRY BAY - INBOARD RIGHT WING PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED



## 767 MAINTENANCE PLANNING DATA

MPD ITEM NUMBER	ACCESS	INTERVAL	APPLICABILITY		MAN HOURS	ZONE	767 ZONAL MAINTENANCE PROGRAM
			APL	ENG			ZONAL TITLE and TASK DESCRIPTION
0600-641-01Z	6001 641AB 641BB 641CB 641DB 641EB 641FB 641GB 641HB 641JB 641KB 641LB 641MB 641NB 641PB 641QB 641SB 641TB 641UB 641VB 641WB 641XB	4C	ALL	ALL	1	641	*** MAIN TANK (OB OF RIB 10)- RIGHT WING PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.
0600-642-01Z	6401 642AB 642BB 642CB	4C	ALL	ALL	0.3	642	*** SURGE TANK - RIGHT WING PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-644-01Z		1C	ALL	ALL	0.2	644	*** WING TIP - RIGHT WING PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-651-01Z	651TB 651UB	1C	ALL	ALL	0.6	651	*** REAR SPAR TO MLG SUPPORT BEAM-R WING PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.





## 767 MAINTENANCE PLANNING DATA

MPD ITEM NUMBER	ACCESS	INTERVAL	APPLICABILITY		MAN HOURS	ZONE	767 ZONAL MAINTENANCE PROGRAM
			APL	ENG			ZONAL TITLE and TASK DESCRIPTION
0600-652-01Z	652AB 652CB 652HB 661AB 661BB 661CB	1C	ALL	ALL	0.5	652	*** R MLG SUPT BEAM & REAR SPAR TO TE PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.
0600-655-01Z	5002	1C	ALL	ALL	0.6	655	*** INBOARD TRAILING EDGE FLAP - R WING PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-656-01Z		1C	ALL	ALL	0.2	656	*** INBOARD AILERON - RIGHT WING PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE (AILERON LEADING EDGE AREA ONLY) IN CONJUNCTION WITH ZONAL TASK 0600-652-01Z.
0600-661-01Z	5002 5003 661LB 661MB 661NB 661RBX	1C	ALL	ALL	0.6	661	*** REAR SPAR TO WING TE - RIGHT WING PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-667-01Z		1C	ALL	ALL	0.1	667	*** OUTBOARD AILERON - RIGHT WING PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE (AILERON LEADING EDGE AREA ONLY) IN CONJUNCTION WITH ZONAL TASK 0600-661-01Z.
0600-667-02Z		1C	ALL	ALL	0.1	667	*** OUTBOARD AILERON - RIGHT WING PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED



## 767 MAINTENANCE PLANNING DATA

MPD ITEM NUMBER	ACCESS	INTERVAL	APPLICABILITY		MAN HOURS	ZONE	767 ZONAL MAINTENANCE PROGRAM
			APL	ENG			ZONAL TITLE and TASK DESCRIPTION
0600-671-01Z	5002	1C	ALL	ALL	0.2	671	*** OB FLAP SUPPORT FAIRING - R IB FLAP PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-672-01Z	5002	1C	ALL	ALL	0.3	672	*** IB FLAP SUPPORT FAIRING - R OB FLAP PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-673-01Z	5002	1C	ALL	ALL	0.3	673	*** OB FLAP SUPPORT FAIRING - R OB FLAP PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-711-01Z		1C	ALL	ALL	0.6	711	*** NOSE LANDING GEAR PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE.
0600-731-01Z		1C	ALL	ALL	1	731	*** LEFT MAIN LANDING GEAR PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE.
0600-741-01Z		1C	ALL	ALL	1	741	*** RIGHT MAIN LANDING GEAR PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE.
0600-811-02Z		1C	ALL	ALL	0.1	811	*** BULK CARGO COMPARTMENT DOOR PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE (WITH DOOR PARTIALLY OPEN).
0600-811-01Z	8111	4C	ALL	ALL	0.7	811	*** BULK CARGO COMPARTMENT DOOR PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED



## 767 MAINTENANCE PLANNING DATA

MPD ITEM NUMBER	ACCESS	INTERVAL	APPLICABILITY		MAN HOURS	ZONE	767 ZONAL MAINTENANCE PROGRAM
			APL	ENG			ZONAL TITLE and TASK DESCRIPTION
0600-821-01Z		1C	ALL	ALL	0.2	821	*** FORWARD CARGO COMPARTMENT DOOR PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE (WITH DOOR PARTIALLY OPEN).
0600-821-02Z	821A 821B 821C 821D 821E 821F 821G 821H 821J 821K 8211	4C	NOTE	ALL	1	821	*** FORWARD CARGO COMPARTMENT DOOR PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.  AIRPLANE NOTE: AIRPLANES WITH LARGE FORWARD CARGO DOOR.  CPC NOTE: CORROSION PREVENTION AND CONTROL BASIC TASK REQUIRED.
0600-821-02Z	821A 821B 821C 821D 821E 821F 8211	4C	NOTE	ALL	0.7	821	*** FORWARD CARGO COMPARTMENT DOOR PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.  AIRPLANE NOTE: AIRPLANES WITH STANDARD FORWARD CARGO DOOR.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-822-01Z		1C	ALL	ALL	0.2	822	*** AFT CARGO COMPARTMENT DOOR PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE (WITH DOOR PARTIALLY OPEN).
0600-822-02Z	822 822A 822B 822C 822D 822E 822F 8221	4C	NOTE	ALL	0.7	822	*** AFT CARGO COMPARTMENT DOOR PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.  AIRPLANE NOTE: APPLICABLE TO PASS AND SF AIRPLANES.  CPC NOTE: CORROSION PREVENTION AND CONTROL BASIC TASK REQUIRED.



## 767 MAINTENANCE PLANNING DATA

MPD ITEM NUMBER	ACCESS	INTERVAL	APPLICABILITY		MAN HOURS	ZONE	767 ZONAL MAINTENANCE PROGRAM
			APL	ENG			ZONAL TITLE and TASK DESCRIPTION
0600-822-02Z	822A 822B 822C 822D 822E 822F 822G 822H 822J 822K 822L	4C	NOTE	ALL	1	822	<b>**AFT CARGO COMPARTMENT DOOR</b> PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.  AIRPLANE NOTE: AIRPLANES WITH LARGE AFT CARGO DOOR.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-831-01Z	831	1C	PASS	ALL	0.4	831	<b>*** PASS CABIN DOOR - FORWARD ENTRY</b> PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE (WITH DOOR PARTIALLY OPEN).
0600-831-01Z	837	1C	FRTR	ALL	0.4	831	<b>***CREW ENTRY DOOR - FORWARD ENTRY</b> PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE (WITH DOOR PARTIALLY OPEN).
0600-832-01Z		1C	NOTE	ALL	0.1	832	<b>*** OVERWING EMERGENCY EXIT - LEFT</b> PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE.  AIRPLANE NOTE: 767-200 AIRPLANES WITH SINGLE OVERWING EMERGENCY EXIT CONFIGURATION AND 200SF AIRPLANES WITH DEACTIVATED SINGLE OVERWING EMERGENCY EXIT CONFIGURATION.
0600-832-01Z 0600-834-01Z		1C	NOTE	ALL	0.2	832 834	<b>*** OVERWING EMERGENCY EXITS - LEFT</b> PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF THE ZONES.  AIRPLANE NOTE: DUAL OVERWING EMERGENCY EXIT CONFIGURATION.
0600-832-02Z 0600-834-02Z	832 832L 834	4C	NOTE	ALL	0.5	832 834	<b>*** OVERWING EMERGENCY EXITS - LEFT</b> PERFORM INTERNAL GENERAL VISUAL INSPECTION OF THE ZONES.  AIRPLANE NOTE: DUAL OVERWING EMERGENCY EXIT CONFIGURATION.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED



## 767 MAINTENANCE PLANNING DATA

MPD ITEM NUMBER	ACCESS	INTERVAL	APPLICABILITY		MAN HOURS	ZONE	767 ZONAL MAINTENANCE PROGRAM
			APL	ENG			ZONAL TITLE and TASK DESCRIPTION
0600-832-02Z	832 8321	4C	NOTE	ALL	0.3	832	<p>*** OVERWING EMERGENCY EXIT - LEFT PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.</p> <p>AIRPLANE NOTE: 767-200 AIRPLANES WITH SINGLE OVERWING EMERGENCY EXIT CONFIGURATION AND 200SF AIRPLANES WITH DEACTIVATED SINGLE OVERWING EMERGENCY EXIT CONFIGURATION.</p> <p>CPC NOTE: CORROSION PREVENTION &amp; CONTROL BASIC TASK REQUIRED</p>
0600-833-01Z	833	NOTE	NOTE	ALL	0.4	833	<p>*** PASSENGER CABIN DOOR - AFT ENTRY PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE (WITH DOOR PARTIALLY OPEN).</p> <p>INTERVAL NOTE: 1C (PASS), 4C (SF).</p> <p>AIRPLANE NOTE: APPLICABLE TO PASS AND SF AIRPLANES.</p> <p>NOTE: FOR SF AIRPLANES, INSPECTION IS DONE WITH DEACTIVATED DOORS PARTIALLY OPEN.</p>
0600-834-02Z	8321 834	4C	NOTE	ALL	0.3	834	<p>*** OVERWING EMERGENCY EXIT - LEFT PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.</p> <p>AIRPLANE NOTE: 767-300 AIRPLANES WITH SINGLE OVERWING EMERGENCY EXIT CONFIGURATION.</p> <p>CPC NOTE: CORROSION PREVENTION &amp; CONTROL BASIC TASK REQUIRED</p>
0600-834-01Z		1C	NOTE	ALL	0.1	834	<p>*** OVERWING EMERGENCY EXIT - LEFT PERFORM EXTERNAL GENERAL VISUAL OF ZONE.</p> <p>AIRPLANE NOTE: 767-300 AIRPLANES WITH SINGLE OVERWING EMERGENCY EXIT CONFIGURATION.</p>
0600-835-01Z	835	1C	NOTE	ALL	0.4	835	<p>*** PASSENGER CABIN DOOR - CENTER ENTRY PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE (WITH DOOR PARTIALLY OPEN)</p> <p>AIRPLANE NOTE: 767-400ER AND 767-300 WITH MID-CABIN ENTRY DOORS.</p>



## 767 MAINTENANCE PLANNING DATA

MPD ITEM NUMBER	ACCESS	INTERVAL	APPLICABILITY		MAN HOURS	ZONE	767 ZONAL MAINTENANCE PROGRAM
			APL	ENG			ZONAL TITLE and TASK DESCRIPTION
0600-836-01Z	836	1C	NOTE	ALL	0.4	836	*** EMERGENCY EXIT DOOR - LEFT PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE (WITH DOOR PARTIALLY OPEN).  AIRPLANE NOTE: 767-300 AND 767-400ER AIRPLANES WITH EMERGENCY EXIT DOOR.
0600-836-02Z	NOTE 836	4C	NOTE	ALL	0.5	836	*** EMERGENCY EXIT DOOR - LEFT PERFORM INTERNAL GENERAL VISUAL INSPECTION OF THE ZONE.  AIRPLANE NOTE: 767-300 AND 767-400ER AIRPLANES WITH EMERGENCY EXIT DOORS.  ACCESS NOTE: REMOVE EMERGENCY DOOR LINING/INSULATION.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-838-01Z	838	1C	FRTR	ALL	0.2	838	***MAIN DECK CARGO COMPARTMENT DOOR PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE (WITH DOOR PARTIALLY OPEN).
0600-838-02Z	838 838A 838B 838C 838D 838E 838F 838G 838H 838I 838J 838K 838L	4C	FRTR	ALL	1	838	***MAIN DECK CARGO COMPARTMENT DOOR PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.  CPC NOTE: CORROSION PREVENTION & CONTROL BASIC TASK REQUIRED
0600-841-01Z	841	NOTE	NOTE	ALL	0.4	841	*** PASSENGER CABIN DOOR-FORWARD SERVICE PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE (WITH DOOR PARTIALLY OPEN).  INTERVAL NOTE: 1C (PASS), 4C (SF).  AIRPLANE NOTE: APPLICABLE TO PASS AND SF AIRPLANES.  NOTE: FOR SF AIRPLANES, INSPECTION IS DONE WITH DEACTIVATED DOORS PARTIALLY OPEN.



## 767 MAINTENANCE PLANNING DATA

MPD ITEM NUMBER	ACCESS	INTERVAL	APPLICABILITY		MAN HOURS	ZONE	767 ZONAL MAINTENANCE PROGRAM
			APL	ENG			ZONAL TITLE and TASK DESCRIPTION
0600-842-01Z		1C	NOTE	ALL	0.1	842	<p>*** OVERWING EMERGENCY EXIT - RIGHT PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE.</p> <p>AIRPLANE NOTE: 767-200 AIRPLANES WITH SINGLE OVERWING EMERGENCY EXIT CONFIGURATION, AND 767 SF AIRPLANES WITH DEACTIVATED SINGLE OVERWING EMERGENCY EXIT CONFIGURATION.</p>
0600-842-01Z 0600-844-01Z		1C	NOTE	ALL	0.2	842 844	<p>*** OVERWING EMERGENCY EXITS - RIGHT PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF THE ZONES.</p> <p>AIRPLANE NOTE: DUAL OVERWING EMERGENCY EXIT CONFIGURATION.</p>
0600-842-02Z 0600-844-02Z	8321 842 844	4C	NOTE	ALL	0.5	842 844	<p>*** OVERWING EMERGENCY EXITS - RIGHT PERFORM INTERNAL GENERAL VISUAL INSPECTION OF THE ZONES.</p> <p>AIRPLANE NOTE: DUAL OVERWING EMERGENCY EXIT CONFIGURATION.</p> <p>CPC NOTE: CORROSION PREVENTION &amp; CONTROL BASIC TASK REQUIRED</p>
0600-842-02Z	8321 842	4C	NOTE	ALL	0.3	842	<p>*** OVERWING EMERGENCY EXIT - RIGHT PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.</p> <p>AIRPLANE NOTE: 767-200 AIRPLANES WITH SINGLE OVERWING EMERGENCY EXIT CONFIGURATION, AND 767 SF AIRPLANES WITH DEACTIVATED SINGLE OVERWING EMERGENCY EXIT CONFIGURATION.</p> <p>CPC NOTE: CORROSION PREVENTION &amp; CONTROL BASIC TASK REQUIRED</p>
0600-843-01Z	843	NOTE	NOTE	ALL	0.4	843	<p>*** PASSENGER CABIN DOOR - AFT SERVICE PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE (WITH DOOR PARTIALLY OPEN).</p> <p>INTERVAL NOTE: 1C (PASS), 4C (SF).</p> <p>AIRPLANE NOTE: APPLICABLE TO PASS AND SF AIRPLANES.</p> <p>NOTE: FOR SF AIRPLANES, INSPECTION IS DONE WITH DEACTIVATED DOORS PARTIALLY OPEN.</p>



## 767 MAINTENANCE PLANNING DATA

MPD ITEM NUMBER	ACCESS	INTERVAL	APPLICABILITY		MAN HOURS	ZONE	767 ZONAL MAINTENANCE PROGRAM
			APL	ENG			ZONAL TITLE and TASK DESCRIPTION
0600-844-01Z		1C	NOTE	ALL	0.1	844	<p>*** OVERWING EMERGENCY EXIT - RIGHT PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE.</p> <p>AIRPLANE NOTE: 767-300 AIRPLANES WITH SINGLE OVERWING EMERGENCY EXIT CONFIGURATION.</p>
0600-844-02Z	8321 844	4C	NOTE	ALL	0.3	844	<p>*** OVERWING EMERGENCY EXIT - RIGHT PERFORM INTERNAL GENERAL VISUAL INSPECTION OF ZONE.</p> <p>AIRPLANE NOTE: 767-300 AIRPLANES WITH SINGLE OVERWING EMERGENCY EXIT CONFIGURATION.</p> <p>CPC NOTE: CORROSION PREVENTION &amp; CONTROL BASIC TASK REQUIRED</p>
0600-845-01Z	845	1C	NOTE	ALL	0.4	845	<p>*** PASSENGER CABIN DOOR - CENTER SERVICE PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF ZONE (WITH DOOR PARTIALLY OPEN)</p> <p>AIRPLANE NOTE: 767-300 AND 767-400ER WITH MID-CABIN ENTRY DOORS.</p>
0600-846-01Z	846	1C	NOTE	ALL	0.4	846	<p>*** EMERGENCY EXIT DOOR - RIGHT PERFORM EXTERNAL GENERAL VISUAL INSPECTION OF THE ZONE (WITH DOOR PARTIALLY OPEN).</p> <p>AIRPLANE NOTE: 767-400ER AND 767-300 WITH EMERGENCY EXIT DOOR.</p>
0600-846-02Z	NOTE 846	4C	NOTE	ALL	0.5	846	<p>*** EMERGENCY EXIT DOOR - RIGHT PERFORM INTERNAL GENERAL VISUAL INSPECTION OF THE ZONE.</p> <p>AIRPLANE NOTE: 767-400ER AND 767-300 WITH EMERGENCY EXIT DOORS.</p> <p>ACCESS NOTE: REMOVE EMERGENCY DOOR LINING/INSULATION.</p> <p>CPC NOTE: CORROSION PREVENTION &amp; CONTROL BASIC TASK REQUIRED</p>