


BOEING
 767
PARTS CATALOG (MAINTENANCE)

CH-SECT-UNIT-FIG	PAGE NO.	DATE	CH-SECT-UNIT-FIG	PAGE NO.	DATE
*71	1	AUG 22/09	71-11-01- 1	6	APR 22/09
*71	2	AUG 22/09	71-11-01- 1	7	APR 22/09
*71	3	AUG 22/09	71-11-01- 1	8	APR 22/09
*71	4	AUG 22/09	71-11-01- 2	0	DEC 22/06
*71	5	AUG 22/09	71-11-01- 2	0A	DEC 22/06
*71	6	AUG 22/09	71-11-01- 2	0B	DEC 22/06
*71	7	AUG 22/09	71-11-01- 2	1	DEC 22/06
71-00-00	1	DEC 22/06	71-11-01- 2	2	DEC 22/06
71-00-01- 2	0	DEC 22/06	71-11-01-10	0	DEC 22/06
71-00-01- 2	1	DEC 22/07	71-11-01-10	0A	DEC 22/06
71-00-01- 2	2	DEC 22/07	71-11-01-10	0B	APR 22/08
71-00-51- 2	0	DEC 22/06	71-11-01-10	1	DEC 22/07
71-00-51- 2	0A	DEC 22/06	71-11-01-10	2	APR 22/09
71-00-51- 2	0B	DEC 22/06	71-11-01-10	3	APR 22/09
71-00-51- 2	0C	DEC 22/06	71-11-01-10	4	APR 22/09
71-00-51- 2	0D	DEC 22/06	71-11-01-10A	0	DEC 22/06
71-00-51- 2	0E	DEC 22/06	71-11-01-10A	0A	DEC 22/06
71-00-51- 2	0F	DEC 22/06	71-11-01-10A	0B	DEC 22/06
71-00-51- 2	0G	AUG 22/08	71-11-01-10A	1	DEC 22/07
71-00-51- 2	1	DEC 22/07	71-11-01-10A	2	APR 22/08
71-00-51- 2	2	DEC 22/07	71-11-01-10A	3	DEC 22/08
71-00-51- 2	3	DEC 22/07	71-11-01-10A	4	DEC 22/08
71-00-51- 2	4	DEC 22/07	71-11-01-10A	5	APR 22/09
71-00-51- 2	5	DEC 22/07	71-11-01-10A	6	APR 22/09
71-00-51- 2	6	AUG 22/08	71-11-01-11	0	DEC 22/06
71-00-51- 2	7	AUG 22/08	71-11-01-11	0A	DEC 22/06
71-00-51- 2	8	AUG 22/08	71-11-01-11	0B	DEC 22/06
71-00-51- 2	9	AUG 22/08	71-11-01-11	0C	DEC 22/06
71-00-51- 2	10	DEC 22/07	71-11-01-11	1	APR 22/08
71-00-51- 2	11	DEC 22/07	71-11-01-11	2	APR 22/08
71-00-51- 2	12	DEC 22/07	71-11-01-11	3	DEC 22/08
71-00-51- 2	13	DEC 22/07	71-11-01-11	4	DEC 22/08
71-00-51- 2	14	DEC 22/07	71-11-01-11	5	APR 22/08
71-00-51- 2	15	DEC 22/07	71-11-01-11	6	APR 22/08
71-00-51- 2	16	DEC 22/07	71-11-01-11	7	APR 22/08
71-00-51- 2	17	DEC 22/07	71-11-01-11	8	APR 22/08
71-00-51- 2	18	AUG 22/08	71-11-01-11	9	APR 22/08
71-01-00	1	DEC 22/06	71-11-01-11	10	APR 22/08
71-01-02- 1	0	DEC 22/06	71-11-02- 1	0	DEC 22/06
71-01-02- 1	1	DEC 22/07	71-11-02- 1	1	DEC 22/06
71-01-02- 1	2	DEC 22/07	71-11-02- 1	2	DEC 22/06
71-01-02- 1	3	DEC 22/07	71-11-03- 1	0	DEC 22/06
71-01-02- 1	4	DEC 22/08	71-11-03- 1	0A	DEC 22/06
71-01-02- 1	5	DEC 22/07	71-11-03- 1	1	DEC 22/06
71-11-00	1	DEC 22/06	*71-11-03- 1	2	AUG 22/09
71-11-01- 1	0	DEC 22/06	71-11-03- 1	3	DEC 22/06
71-11-01- 1	1	APR 22/09	*71-11-03- 1	4	AUG 22/09
71-11-01- 1	2	APR 22/09	*71-11-03- 1	5	AUG 22/09
71-11-01- 1	3	APR 22/09	*71-11-03- 1	6	AUG 22/09
71-11-01- 1	4	APR 22/09	*71-11-03- 1	7	AUG 22/09
71-11-01- 1	5	APR 22/09	71-11-04- 5	0	DEC 22/06

* THE ASTERISK INDICATES PAGES CHANGED OR ADDED BY THE CURRENT REVISION


BOEING
 767
PARTS CATALOG (MAINTENANCE)

CH-SECT-UNIT-FIG	PAGE NO.	DATE	CH-SECT-UNIT-FIG	PAGE NO.	DATE
71-11-04- 5	0A	DEC 22/06	71-11-08- 5	0	DEC 22/06
71-11-04- 5	0B	DEC 22/06	71-11-08- 5	0A	DEC 22/06
71-11-04- 5	0C	DEC 22/06	71-11-08- 5	0B	DEC 22/06
71-11-04- 5	0D	DEC 22/06	71-11-08- 5	0C	DEC 22/06
71-11-04- 5	0E	DEC 22/06	71-11-08- 5	0D	DEC 22/06
71-11-04- 5	0F	DEC 22/06	71-11-08- 5	0E	DEC 22/06
71-11-04- 5	1	DEC 22/07	71-11-08- 5	0F	DEC 22/06
71-11-04- 5	2	DEC 22/07	71-11-08- 5	1	APR 22/08
71-11-04- 5	3	DEC 22/07	71-11-08- 5	2	APR 22/08
71-11-04- 5	4	DEC 22/07	*71-11-08- 5	3	AUG 22/09
71-11-04- 5	5	DEC 22/07	*71-11-08- 5	4	AUG 22/09
71-11-04- 5	6	APR 22/08	71-11-08- 5	5	APR 22/08
71-11-04- 5	7	DEC 22/07	*71-11-08- 5	6	AUG 22/09
71-11-04- 5	8	DEC 22/07	71-11-08- 5	7	APR 22/08
71-11-04- 5	9	DEC 22/07	71-11-08- 5	8	APR 22/08
*71-11-04- 5	10	AUG 22/09	71-11-09- 1	0	DEC 22/06
*71-11-04- 5	11	AUG 22/09	71-11-09- 1	1	DEC 22/06
*71-11-04- 5	12	AUG 22/09	*71-11-09- 1	2	AUG 22/09
71-11-04- 5	13	DEC 22/07	71-11-10- 3	0	DEC 22/06
71-11-04- 5	14	DEC 22/07	71-11-10- 3	1	DEC 22/06
71-11-04- 5	15	APR 22/09	71-11-10- 3	2	DEC 22/06
71-11-04- 5	16	APR 22/09	71-11-50- 1	0	DEC 22/06
71-11-04- 5	17	APR 22/09	71-11-50- 1	1	DEC 22/06
71-11-04- 5	18	APR 22/09	71-11-51- 3	0	DEC 22/06
71-11-04- 5	19	APR 22/09	71-11-51- 3	0A	DEC 22/06
71-11-04- 5	20	APR 22/09	*71-11-51- 3	1	AUG 22/09
71-11-04- 5	21	APR 22/09	*71-11-51- 3	2	AUG 22/09
71-11-04- 5	22	DEC 22/07	*71-11-51- 3	3	AUG 22/09
71-11-04- 5	23	APR 22/08	*71-11-51- 3	4	AUG 22/09
71-11-04- 5	24	DEC 22/07	71-11-52- 1	0	DEC 22/06
71-11-04- 5	25	DEC 22/07	71-11-52- 1	0A	DEC 22/06
71-11-04- 5	26	DEC 22/07	71-11-52- 1	1	DEC 22/08
71-11-06- 5	0	DEC 22/06	71-11-52- 1	2	DEC 22/06
71-11-06- 5	0A	DEC 22/06	71-11-53- 1	0	DEC 22/06
71-11-06- 5	0B	DEC 22/06	71-11-53- 1	0A	DEC 22/06
71-11-06- 5	0C	DEC 22/06	71-11-53- 1	1	APR 22/08
71-11-06- 5	0D	DEC 22/06	71-11-53- 1	2	DEC 22/06
71-11-06- 5	0E	DEC 22/06	71-11-53- 1	3	DEC 22/06
71-11-06- 5	1	DEC 22/07	71-11-53- 1	4	APR 22/08
71-11-06- 5	2	APR 22/08	71-11-53- 1	5	APR 22/08
71-11-06- 5	3	DEC 22/07	71-11-53- 1	6	APR 22/08
71-11-06- 5	4	DEC 22/07	71-11-53- 1	7	APR 22/08
71-11-06- 5	5	DEC 22/07	71-21-00	1	DEC 22/06
71-11-06- 5	6	DEC 22/07	71-21-01- 2	0	DEC 22/06
71-11-06- 5	7	DEC 22/06	71-21-01- 2	0A	DEC 22/06
71-11-06- 5	8	DEC 22/07	71-21-01- 2	0B	DEC 22/06
71-11-06- 5	9	APR 22/08	71-21-01- 2	0C	DEC 22/06
71-11-06-50	0	DEC 22/06	71-21-01- 2	1	DEC 22/07
71-11-06-50	0A	DEC 22/06	71-21-01- 2	2	DEC 22/07
71-11-06-50	1	DEC 22/07	71-21-01- 2	3	DEC 22/06
71-11-06-50	2	DEC 22/07	71-21-01- 2	4	DEC 22/08

* THE ASTERISK INDICATES PAGES CHANGED OR ADDED BY THE CURRENT REVISION

HXL
AUG 22/09

71 - LIST OF EFFECTIVE PAGES
PAGE 2


BOEING
 767
PARTS CATALOG (MAINTENANCE)

CH-SECT-UNIT-FIG	PAGE NO.	DATE	CH-SECT-UNIT-FIG	PAGE NO.	DATE
71-21-01- 2	5	APR 22/08	71-41-54- 1	18	DEC 22/08
71-21-01- 2	6	DEC 22/06	71-41-54- 1	19	DEC 22/07
71-21-01- 2	7	DEC 22/06	71-41-54- 1	20	DEC 22/08
71-21-01- 2	8	DEC 22/06	71-41-54- 1	21	DEC 22/07
71-21-01- 2	9	APR 22/07	71-41-54- 1	22	DEC 22/08
71-21-01- 2	10	APR 22/07	71-41-54- 1	23	DEC 22/06
71-21-01- 2	11	DEC 22/07	71-41-54- 1	24	DEC 22/08
71-21-01- 2	12	DEC 22/07	71-41-54- 1	25	DEC 22/06
71-21-01- 2	13	DEC 22/07	71-41-54- 1	26	DEC 22/08
71-21-01- 3	0	DEC 22/06	71-41-54- 1	27	AUG 22/08
71-21-01- 3	1	DEC 22/07	71-41-54- 1	28	DEC 22/08
71-21-01- 3	2	DEC 22/07	71-41-54- 1	29	AUG 22/08
71-31-00	1	DEC 22/06	71-41-54- 1	30	DEC 22/08
71-31-51- 5	0	APR 22/08	71-41-54- 1	31	AUG 22/08
71-31-51- 5	1	DEC 22/07	71-41-54- 1	32	DEC 22/08
71-31-51- 5	2	DEC 22/08	71-41-54- 1	33	DEC 22/08
71-41-00	1	DEC 22/06	71-41-54- 1	34	AUG 22/08
71-41-54- 1	0	DEC 22/06	71-41-54- 1	35	DEC 22/08
71-41-54- 1	0A	DEC 22/06	71-41-54- 1	36	AUG 22/08
*71-41-54- 1	0B	AUG 22/09	71-41-54- 1	37	DEC 22/08
71-41-54- 1	0C	DEC 22/06	71-41-54- 1	38	AUG 22/08
71-41-54- 1	0D	DEC 22/06	71-41-54- 1	39	DEC 22/08
71-41-54- 1	0E	DEC 22/06	71-41-54- 1	40	AUG 22/08
71-41-54- 1	0F	DEC 22/06	71-41-54- 1	41	DEC 22/08
*71-41-54- 1	0G	AUG 22/09	71-41-54- 1	42	AUG 22/08
71-41-54- 1	0H	DEC 22/06	71-41-54- 1	43	AUG 22/08
71-41-54- 1	0I	DEC 22/06	71-41-54- 1	44	AUG 22/08
71-41-54- 1	0J	DEC 22/06	71-41-54- 1	45	DEC 22/08
71-41-54- 1	0K	DEC 22/06	71-41-54- 1	46	DEC 22/08
71-41-54- 1	0L	DEC 22/06	*71-41-54- 1	47	AUG 22/09
71-41-54- 1	0M	DEC 22/06	*71-41-54- 1	48	AUG 22/09
71-41-54- 1	0N	DEC 22/06	*71-41-54- 1	49	AUG 22/09
71-41-54- 1	0O	DEC 22/06	*71-41-54- 1	50	AUG 22/09
71-41-54- 1	0P	DEC 22/06	*71-41-54- 1	51	AUG 22/09
71-41-54- 1	1	DEC 22/07	71-50-00	1	DEC 22/06
71-41-54- 1	2	DEC 22/07	71-50-01- 1	0	DEC 22/06
*71-41-54- 1	3	AUG 22/09	71-50-01- 1	0A	DEC 22/06
71-41-54- 1	4	DEC 22/08	71-50-01- 1	1	DEC 22/06
*71-41-54- 1	5	AUG 22/09	71-51-00	1	DEC 22/06
*71-41-54- 1	6	AUG 22/09	71-51-11- 3	0	DEC 22/06
71-41-54- 1	7	DEC 22/06	*71-51-11- 3	0A	AUG 22/09
71-41-54- 1	8	DEC 22/06	71-51-11- 3	0B	DEC 22/06
71-41-54- 1	9	DEC 22/06	71-51-11- 3	1	DEC 22/06
71-41-54- 1	10	DEC 22/06	71-51-11- 3	2	DEC 22/06
71-41-54- 1	11	DEC 22/08	71-51-11- 3	3	DEC 22/08
71-41-54- 1	12	DEC 22/06	*71-51-11- 3	4	AUG 22/09
*71-41-54- 1	13	AUG 22/09	71-51-50- 2	0	DEC 22/06
*71-41-54- 1	14	AUG 22/09	71-51-50- 2	1	DEC 22/07
71-41-54- 1	15	DEC 22/06	71-51-50- 3	0	DEC 22/06
71-41-54- 1	16	DEC 22/07	71-51-50- 3	1	DEC 22/07
71-41-54- 1	17	DEC 22/07	71-51-50- 3	2	DEC 22/08

* THE ASTERISK INDICATES PAGES CHANGED OR ADDED BY THE CURRENT REVISION

HXL
AUG 22/09

71 - LIST OF EFFECTIVE PAGES
PAGE 3

 **BOEING**
767
PARTS CATALOG (MAINTENANCE)

CHAPTER 71 — POWER PLANT

TABLE OF CONTENTS

SUBJECT	CC-SS-UU	FIGURE	EFFECT
POWER PLANT-GENERAL	71-00-00		
BUILDUP INSTL-PW4000 ENG	71-00-51	02	
PROPULSION INSTL	71-00-01	02	
WIRING INSTL-ELECTRICAL STRUT	71-01-00		
WIRING INSTL-ELECTRICAL STRUT AND ENGINE BUILD-UP (POWER PLANT (TRIM CHECK TABLES ONLY)	71-01-02	01	


BOEING
 767
PARTS CATALOG (MAINTENANCE)

CHAPTER 71 — POWER PLANT

TABLE OF CONTENTS

SUBJECT	CC-SS-UU	FIGURE	EFFECT
ENGINE COWLING	71-11-00		
BRACKET INSTL AND TORQUE BOX	71-11-53	01	
DEACTIVATION PIN STOWAGE MARKER (PW4000)			
CHINE INSTL-INLET	71-11-02	01	
COWL ASSY-(COWL PANEL PRESSURE RELIEF DOORS ONLY)	71-11-08	05	
COWL INSTL-PW4000 ENG CORE	71-11-06	05	
COWL INSTL-PW4000 ENG FAN	71-11-04	05	
DOOR INSTL-PRESSURE RELIEF TAI VENT INLET (PW4000)	71-11-03	01	
DUCT INSTL-COWL T.A.I.	71-11-09	01	
DUCT INSTL-INLET PRECOOLER	71-11-51	03	
FITTING INSTL-INLET HOIST	71-11-50	01	
INLET ASSY-END ITEM COWL	71-11-01	01	
INLET ASSY-PW4000 ENG	71-11-01	11	
INLET ASSY-PW4000 ENG (INLET COWL ONLY)	71-11-01	10A	
INLET INSTL-PW4000 ENG	71-11-01	02	
INLET INSTL-PW4000 ENG	71-11-01	10	
ROD ASSY-CORE COWL HOLD OPEN	71-11-06	50	
ROD INSTL-HOLD OPEN THRUST REVERSER SLEEVE	71-11-10	03	
TUBE INSTL-INLET	71-11-52	01	

 **BOEING**
767
PARTS CATALOG (MAINTENANCE)

CHAPTER 71 — POWER PLANT

TABLE OF CONTENTS

SUBJECT	CC-SS-UU	FIGURE	EFFECT
ENGINE MOUNTS	71-21-00		
MOUNT INSTL-ENG TO STRUT STRUCT (PW4000)	71-21-01	03	
MOUNT INSTL-PW4000 SERIES ENGINES	71-21-01	02	

 **BOEING**
767
PARTS CATALOG (MAINTENANCE)

CHAPTER 71 — POWER PLANT

TABLE OF CONTENTS

SUBJECT	CC-SS-UU	FIGURE	EFFECT
FIRESEALS AND HEAT SHIELDS	71-31-00		
SHIELD INSTL-ENG ACCESSORIES LWR THRM RADIATION	71-31-51	05	

 **BOEING**
767
PARTS CATALOG (MAINTENANCE)

CHAPTER 71 — POWER PLANT

TABLE OF CONTENTS

SUBJECT	CC-SS-UU	FIGURE	EFFECT
ENGINE EQUIPMENT ATTACH FITTINGS	71-41-00		
BRACKET INSTL- AIRFRAME	71-41-54	01	

 **BOEING**
767
PARTS CATALOG (MAINTENANCE)

CHAPTER 71 — POWER PLANT

TABLE OF CONTENTS

SUBJECT	CC-SS-UU	FIGURE	EFFECT
ELECTRICAL HARNESS	71-50-00		
WIRE INSTL-ENG MOUNTED ELEC	71-50-01	01	
ELECTRICAL HARNESS	71-51-00		
WIRE BUNDLE INSTL-THRUST REVERSER	71-51-11	03	
WIRING INSTL-ELECTRICAL STRUT (POWER PLANT ONLY)	71-51-50	02	
WIRING INSTL-ENGINE BUILD-UP (POWER PLANT ONLY)	71-51-50	03	

 **BOEING**
767
PARTS CATALOG (MAINTENANCE)

CHAPTER 71 — POWER PLANT

TABLE OF CONTENTS

SUBJECT	CC-SS-UU	FIGURE	EFFECT
ENGINE VENTS AND DRAINS	71-71-00		
DRAIN INSTL-ENG	71-71-01	15	
SEAL INSTL-ENG GEARBOX BREATHER	71-71-01	02	