

**CHAPTER**

**26**

**FIRE PROTECTION**

CHAPTER 26  
FIRE PROTECTION

CH-SC-SU	Schem	Page	Sheet	Date	CH-SC-SU	Schem	Page	Sheet	Date
26-EFFECTIVE PAGES					26-11-01 (cont.)		101		
		1 thru 3		Aug 05/2009				6	Jan 21/2005
		4		BLANK	26-11-02				
26-CONTENTS							101		Jan 21/2005
		1		Jun 28/2006	26-13-01				
		2		Jun 28/2006			101		Jan 21/2005
		3		Mar 07/2008			102A		Jan 21/2005
		4		Jun 28/2006			103		Jan 21/2005
26-ALPHABETICAL INDEX							104		Jan 21/2005
		1		Jun 28/2006			105		Jan 21/2005
		2		BLANK			106		Jan 21/2005
26-00-00					26-13-02				
		101		Jan 21/2005			101		Jan 21/2005
		102		Jan 21/2005			102A		Jan 21/2005
26-00-01							103		Jan 21/2005
		101		Jan 21/2005			104		Jan 21/2005
		102		Jan 21/2005	26-15-01				
26-10-00							101	1	Jan 21/2005
		101		Jan 21/2005				2	Jan 21/2005
26-11-01								3	Jan 21/2005
		101	1	Jan 21/2005			102	1	Jan 21/2005
			2	Jan 21/2005				2	Jan 21/2005
			3	Jan 21/2005				3	Jan 21/2005
			4	Jan 21/2005					
			5	Jan 21/2005			103	1	Jan 21/2005

A = Added, R = Revised, D = Deleted, O = Overflow

## 26-EFFECTIVE PAGES

Page 1  
Aug 05/2009

D280T232

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

CHAPTER 26  
FIRE PROTECTION

CH-SC-SU	Schem	Page	Sheet	Date	CH-SC-SU	Schem	Page	Sheet	Date
26-15-01 (cont.)		103			26-18-01 (cont.)		102		
			2	Jan 21/2005				3	Jan 21/2005
			3	Jan 21/2005			102.1	1	Jan 21/2005
26-16-01								2	Jan 21/2005
	101		1	Jan 21/2005				3	Jan 21/2005
			2	Jan 21/2005	26-20-00				
	102		1	Jan 21/2005		101			Jan 21/2005
			2	Jan 21/2005		102			Jan 21/2005
	103		1	Jan 21/2005	26-20-01				
			2	Jan 21/2005		101			Jan 21/2005
	104		1	Jan 21/2005		102			Jan 21/2005
			2	Jan 21/2005	26-21-01				
26-17-01						101			Jan 21/2005
	101			Mar 07/2008		102.1			Jan 21/2005
	102A			Mar 07/2008		103			Jan 21/2005
26-18-01					26-22-01				
	101		1	Jan 21/2005		101.1			Jan 21/2005
			2	Jan 21/2005		102			Jan 21/2005
			3	Jan 21/2005		103.1			Jan 21/2005
	101.1		1	Jan 21/2005		104			Jan 21/2005
			2	Jan 21/2005	26-23-01				
			3	Jan 21/2005		101		1	Jan 21/2005
	102		1	Jan 21/2005				2	Jan 21/2005
			2	Jan 21/2005		102.1		1	Jan 21/2005

A = Added, R = Revised, D = Deleted, O = Overflow

## 26-EFFECTIVE PAGES

Page 2  
Aug 05/2009

D280T232

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

CHAPTER 26  
FIRE PROTECTION

CH-SC-SU	Schem	Page	Sheet	Date	CH-SC-SU	Schem	Page	Sheet	Date
26-23-01 (cont.)		102.1							
			2	Jan 21/2005					
		103	1	Jan 21/2005					
			2	Jan 21/2005					
		104	1	Jan 21/2005					
			2	Jan 21/2005					

A = Added, R = Revised, D = Deleted, O = Overflow

**26-EFFECTIVE PAGES**Page 3  
Aug 05/2009

D280T232

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

**CHAPTER 26  
FIRE PROTECTION**

Title	CH-SC-SU	Schem	Page	Sheet	Date	Effectivity
<b><u>FIRE PROTECTION</u></b>						
FIRE PROTECTION- SIMPLIFIED	26-00-00		101		Jan 21/2005	050-099 150-199
			102		Jan 21/2005	275-299
FIRE DETECTION ENGINE IND AND CREW ALERTING SYSTEM INDICATOR	26-00-01		101		Jan 21/2005	150-199
			102		Jan 21/2005	275-299
<b><u>DETECTION</u></b>						
FIRE DETECTION- SIMPLIFIED	26-10-00		101		Jan 21/2005	150-199 275-299
<b><u>ENGINE FIRE DETECTION</u></b>						
ENGINE FIRE AND OVERHEAT DETECTION- LEFT	26-11-01		101	1	Jan 21/2005	150-199 275-299
				2	Jan 21/2005	150-199 275-299
				3	Jan 21/2005	150-199 275-299
				4	Jan 21/2005	150-199 275-299
				5	Jan 21/2005	150-199 275-299
				6	Jan 21/2005	150-199 275-299
ENGINE FIRE AND OVERHEAT DETECTION- RIGHT	26-11-02		101		Jan 21/2005	150-199 275-299
<b><u>LAVATORY SMOKE DETECTION</u></b>						
LAVATORY SMOKE DETECTOR	26-13-01		101		Jan 21/2005	050-099
			102A		Jan 21/2005	150 152-157
			103		Jan 21/2005	151
			104		Jan 21/2005	162-199
			105		Jan 21/2005	275-278
			106		Jan 21/2005	280-299

**26-CONTENTS**

Page 1  
Jun 28/2006

D280T232

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

**CHAPTER 26  
FIRE PROTECTION**

Title	CH-SC-SU	Schem	Page	Sheet	Date	Effectivity
CREW SMOKE DETECTION SYSTEM	26-13-02		101		Jan 21/2005	050-099
			102A		Jan 21/2005	150 152-157
			103		Jan 21/2005	162-163
			104		Jan 21/2005	164-199
<b><u>APU FIRE DETECTION</u></b>						
FIRE DETECTION- AUXILIARY POWER UNIT	26-15-01		101	1	Jan 21/2005	150-199
				2	Jan 21/2005	150-199
				3	Jan 21/2005	150-199
			102	1	Jan 21/2005	275-278
				2	Jan 21/2005	275-278
				3	Jan 21/2005	275-278
			103	1	Jan 21/2005	280-299
				2	Jan 21/2005	280-299
				3	Jan 21/2005	280-299
<b><u>LOWER CARGO COMPARTMENT SMOKE DETECTION</u></b>						
SMOKE DETECTION- LOWER CARGO COMPARTMENT	26-16-01		101	1	Jan 21/2005	050-099 150-155 162-165
				2	Jan 21/2005	050-099 150-155 162-165
			102	1	Jan 21/2005	156-157 166-199
				2	Jan 21/2005	156-157 166-199
			103	1	Jan 21/2005	275-276
				2	Jan 21/2005	275-276
			104	1	Jan 21/2005	277-299
				2	Jan 21/2005	277-299

**CHAPTER 26  
FIRE PROTECTION**

Title	CH-SC-SU	Schem	Page	Sheet	Date	Effectivity
<b><u>WHEEL WELL FIRE DETECTION</u></b>						
FIRE DETECTION- WHEEL WELL	26-17-01		101		Mar 07/2008	050-099
			102A		Mar 07/2008	150-280
<b><u>WING AND BODY DUCT LEAK DETECTION</u></b>						
DUCT LEAK DETECTION	26-18-01		101	1	Jan 21/2005	050-099
				2	Jan 21/2005	050-099
				3	Jan 21/2005	050-099
			101.1	1	Jan 21/2005	050-051
				2	Jan 21/2005	050-051
				3	Jan 21/2005	050-051
			102	1	Jan 21/2005	150-199 275-299
				2	Jan 21/2005	150-199 275-299
				3	Jan 21/2005	150-199 275-299
			102.1	1	Jan 21/2005	150-280
				2	Jan 21/2005	150-280
				3	Jan 21/2005	150-280
<b><u>EXTINGUISHING</u></b>						
FIRE EXTINGUISHING- SIMPLIFIED	26-20-00		101		Jan 21/2005	050-099 150-199
			102		Jan 21/2005	275-299
FIRE SWITCHES-ENGINE AUXILIARY POWER UNIT	26-20-01		101		Jan 21/2005	050-099
			102		Jan 21/2005	280-299
<b><u>ENGINE FIRE EXTINGUISHING</u></b>						
FIRE EXTINGUISHING- ENGINE	26-21-01		101		Jan 21/2005	050-099 280-299

**CHAPTER 26  
FIRE PROTECTION**

Title	CH-SC-SU	Schem	Page	Sheet	Date	Effectivity
FIRE EXTINGUISHING- ENGINE (cont.)	26-21-01		102.1		Jan 21/2005	150-154
			103		Jan 21/2005	155-199
<b><u>APU FIRE EXTINGUISHING</u></b>						
FIRE EXTINGUISHING- AUXILIARY POWER UNIT	26-22-01		101.1		Jan 21/2005	050-155 162-165
			102		Jan 21/2005	156-157 166-199
			103.1		Jan 21/2005	275-276
			104		Jan 21/2005	277-299
<b><u>CARGO COMPARTMENT FIRE EXTINGUISHING</u></b>						
FIRE EXTINGUISHER- LOWER CARGO COMPARTMENT	26-23-01		101	1	Jan 21/2005	050-099
				2	Jan 21/2005	050-099
			102.1	1	Jan 21/2005	150-154
				2	Jan 21/2005	150-154
			103	1	Jan 21/2005	155-199
				2	Jan 21/2005	155-199
			104	1	Jan 21/2005	275-299
				2	Jan 21/2005	275-299



**CHAPTER 26  
FIRE PROTECTION**

CH-SC-SU	Title
26-13-02	CREW SMOKE DETECTION SYSTEM
26-18-01	DUCT LEAK DETECTION
26-11-01	ENGINE FIRE AND OVERHEAT DETECTION- LEFT
26-11-02	ENGINE FIRE AND OVERHEAT DETECTION- RIGHT
26-00-01	FIRE DETECTION ENGINE IND AND CREW ALERTING SYSTEM INDICATOR
26-15-01	FIRE DETECTION- AUXILIARY POWER UNIT
26-10-00	FIRE DETECTION- SIMPLIFIED
26-17-01	FIRE DETECTION- WHEEL WELL
26-23-01	FIRE EXTINGUISHER- LOWER CARGO COMPARTMENT
26-22-01	FIRE EXTINGUISHING- AUXILIARY POWER UNIT
26-21-01	FIRE EXTINGUISHING- ENGINE
26-20-00	FIRE EXTINGUISHING- SIMPLIFIED
26-00-00	FIRE PROTECTION- SIMPLIFIED
26-20-01	FIRE SWITCHES-ENGINE AUXILIARY POWER UNIT
26-13-01	LAVATORY SMOKE DETECTOR
26-16-01	SMOKE DETECTION- LOWER CARGO COMPARTMENT


CH-SC-SU	Title

**26-ALPHABETICAL INDEX**Page 1  
Jun 28/2006


D280T232

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details


635

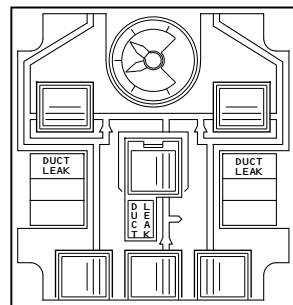

M15(YCZ) BLEED AIR SUPPLY PNL (P5)

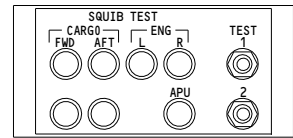

M32(YA3) SQUIB TEST PNL (P61)

 


M73(YAZ) FUEL CONT PNL (P10)




L680 WHEEL WELL FIRE LT (P3-1)

M779 DISCRETE WARNING DISPLAY PNL (P1-3)

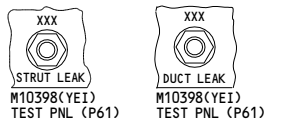


M10398(YE1) STRUT LEAK TEST PNL (P61)


M10398(YE1) DUCT LEAK TEST PNL (P61)

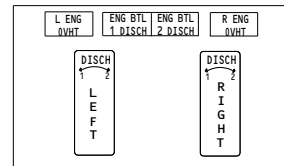


M10443(YEG) ENGINE FIRE CONT PNL (P8)

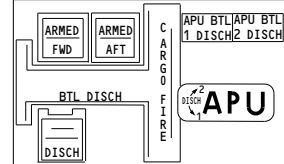

M10444(YD0) APU/CARGO FIRE PNL (P8)

 


M10445(YEH) FIRE/OVHT TEST PNL (P8)

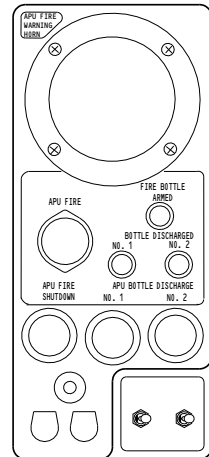


P40 APU REMOTE CONTROL PNL


**FIRE PROTECTION SYSTEM CONTROLS & INDICATORS**

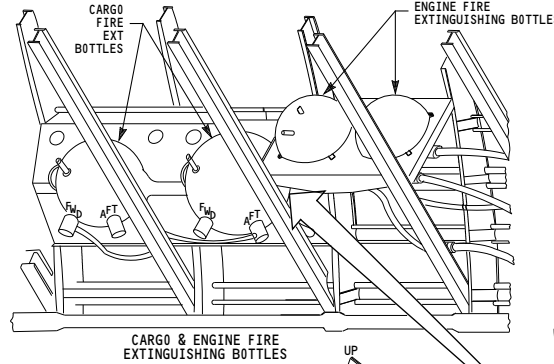

CARGO & ENGINE FIRE EXTINGUISHING BOTTLES

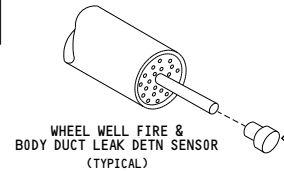


WHEEL WELL FIRE & BODY DUCT LEAK DETN SENSOR (TYPICAL)

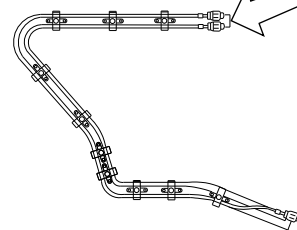


LEFT ENGINE FIRE & OVHT DETECTION LOOP (TYP 4 PLS, R ENG SIMILAR)

MAJOR FIRE PROTECTION COMPONENTS

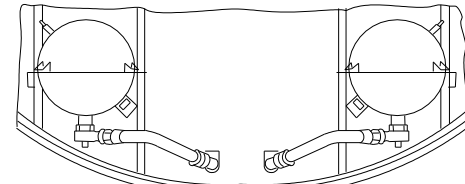

APU FIRE EXTINGUISHING BOTTLE

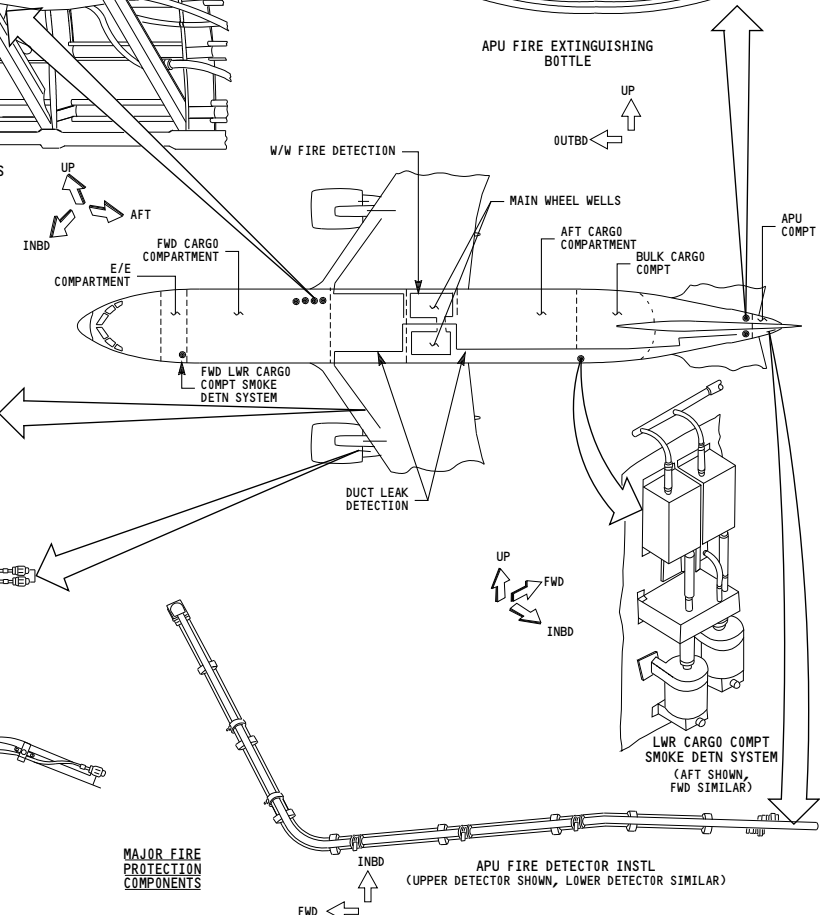

APU FIRE DETECTOR INSTL (UPPER DETECTOR SHOWN, LOWER DETECTOR SIMILAR)

050-099, 150-199

**FIRE PROTECTION-SIMPLIFIED**









D280T232

**26-00-00**


Page 101

Jan 21/2005

  636

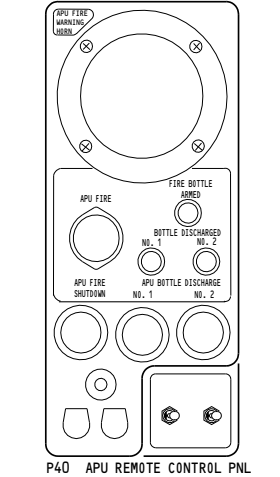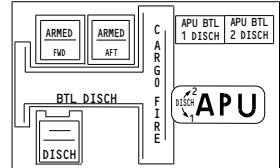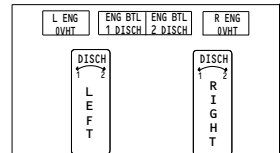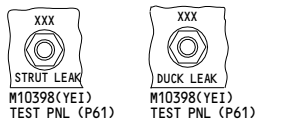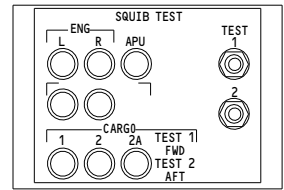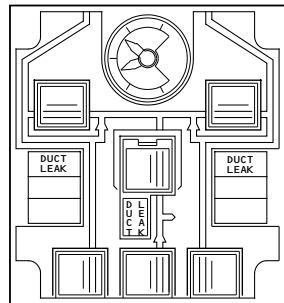

FIRE PROTECTION SYSTEM CONTROLS & INDICATORS



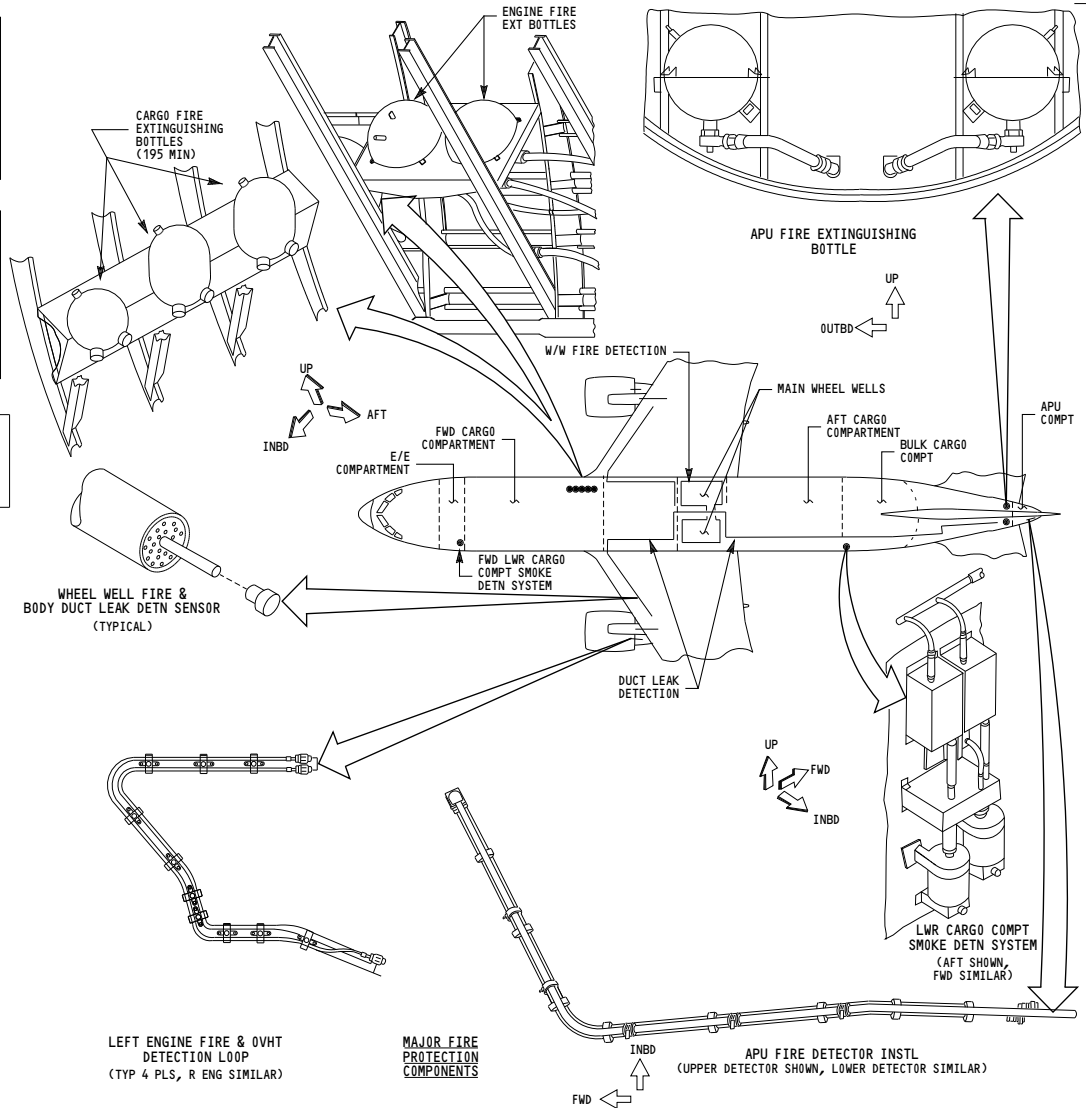


275-299	<b>FIRE PROTECTION- SIMPLIFIED</b>
	D280T232

**26-00-00**

Page 102

Jan 21/2005

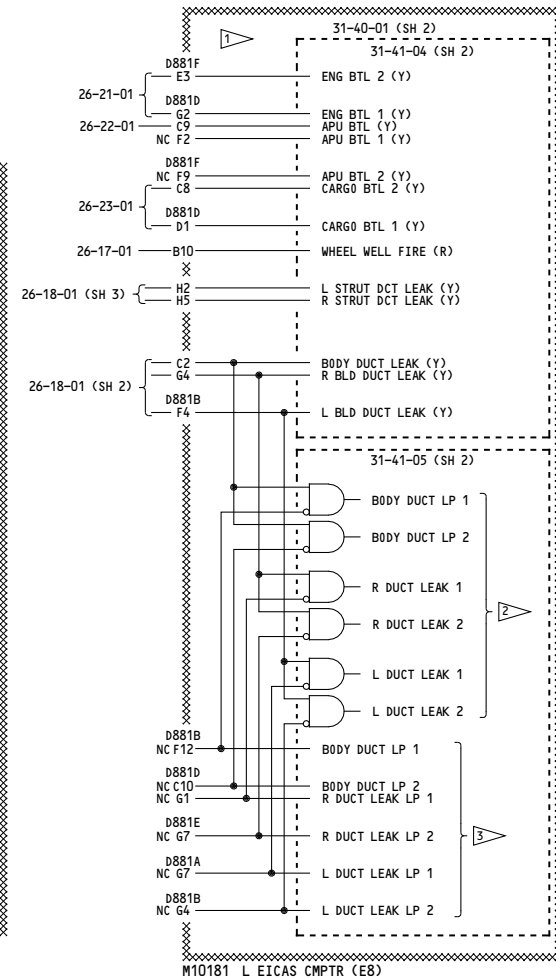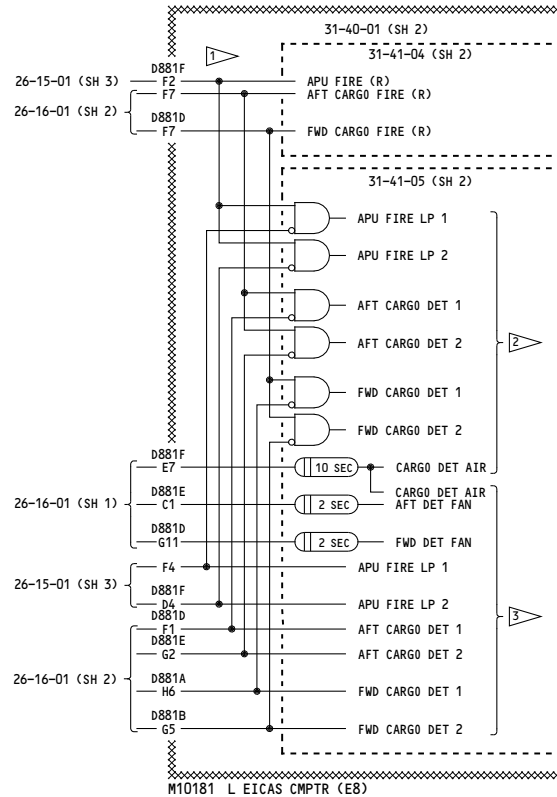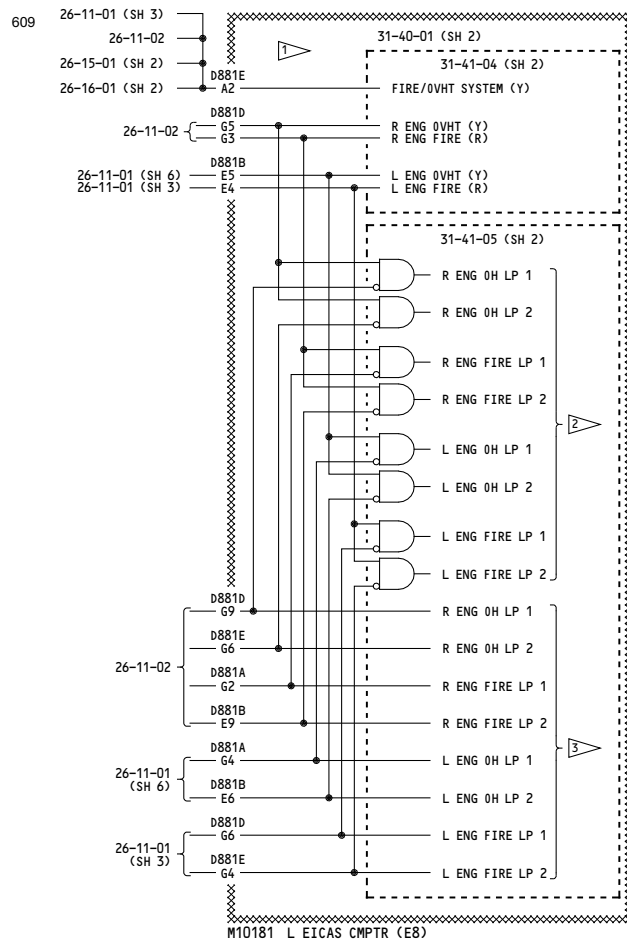

## NOTES:

- 1 INTERNALS OF M10182 R EICAS COMPUTER IDENTICAL.
- 2 STATUS, MESSAGES APPEAR WHITE.
- 3 MAINTENANCE, MESSAGES APPEAR WHITE.

150-199




## FIRE DETECTION ENGINE IND AND CREW ALERTING SYSTEM INDICATOR

D280T232

26-00-01

Page 101

Jan 21/2005

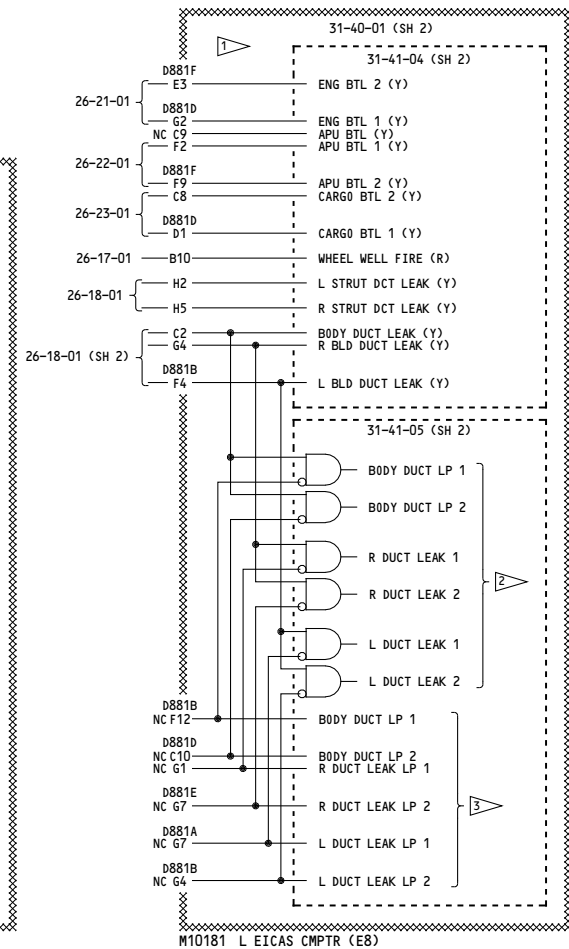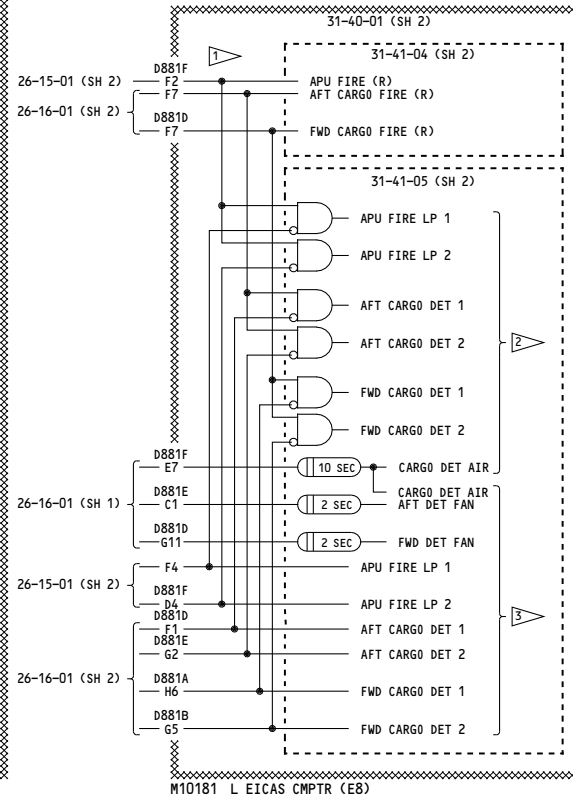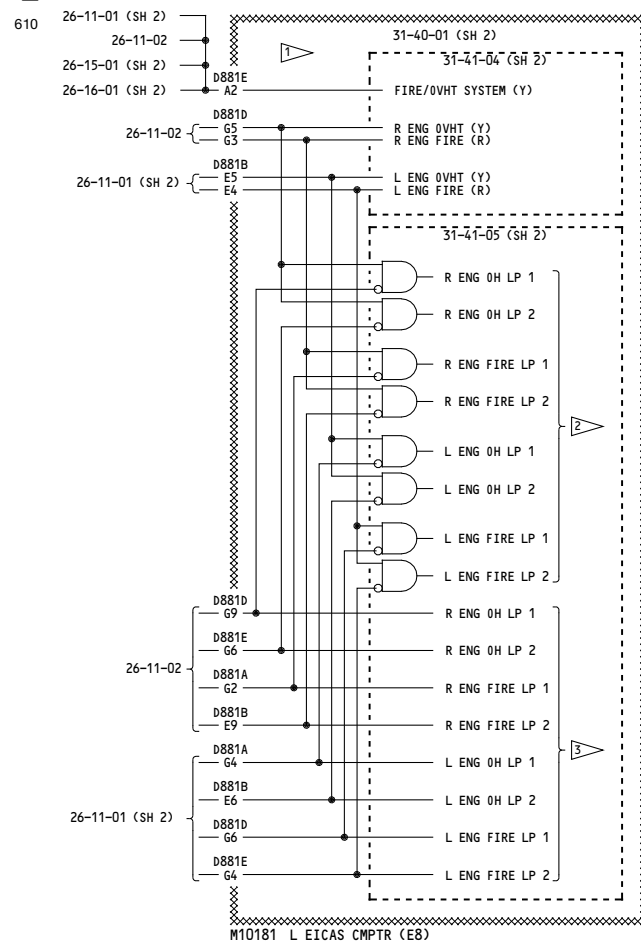

## NOTES:

- 1> INTERNALS OF M10182 R EICAS COMPUTER IDENTICAL.
- 2> STATUS, MESSAGES APPEAR WHITE.
- 3> MAINTENANCE, MESSAGES APPEAR WHITE.

275-299

## FIRE DETECTION ENGINE IND AND CREW ALERTING SYSTEM INDICATOR


D280T232

26-00-01

Page 102

Jan 21/2005

611

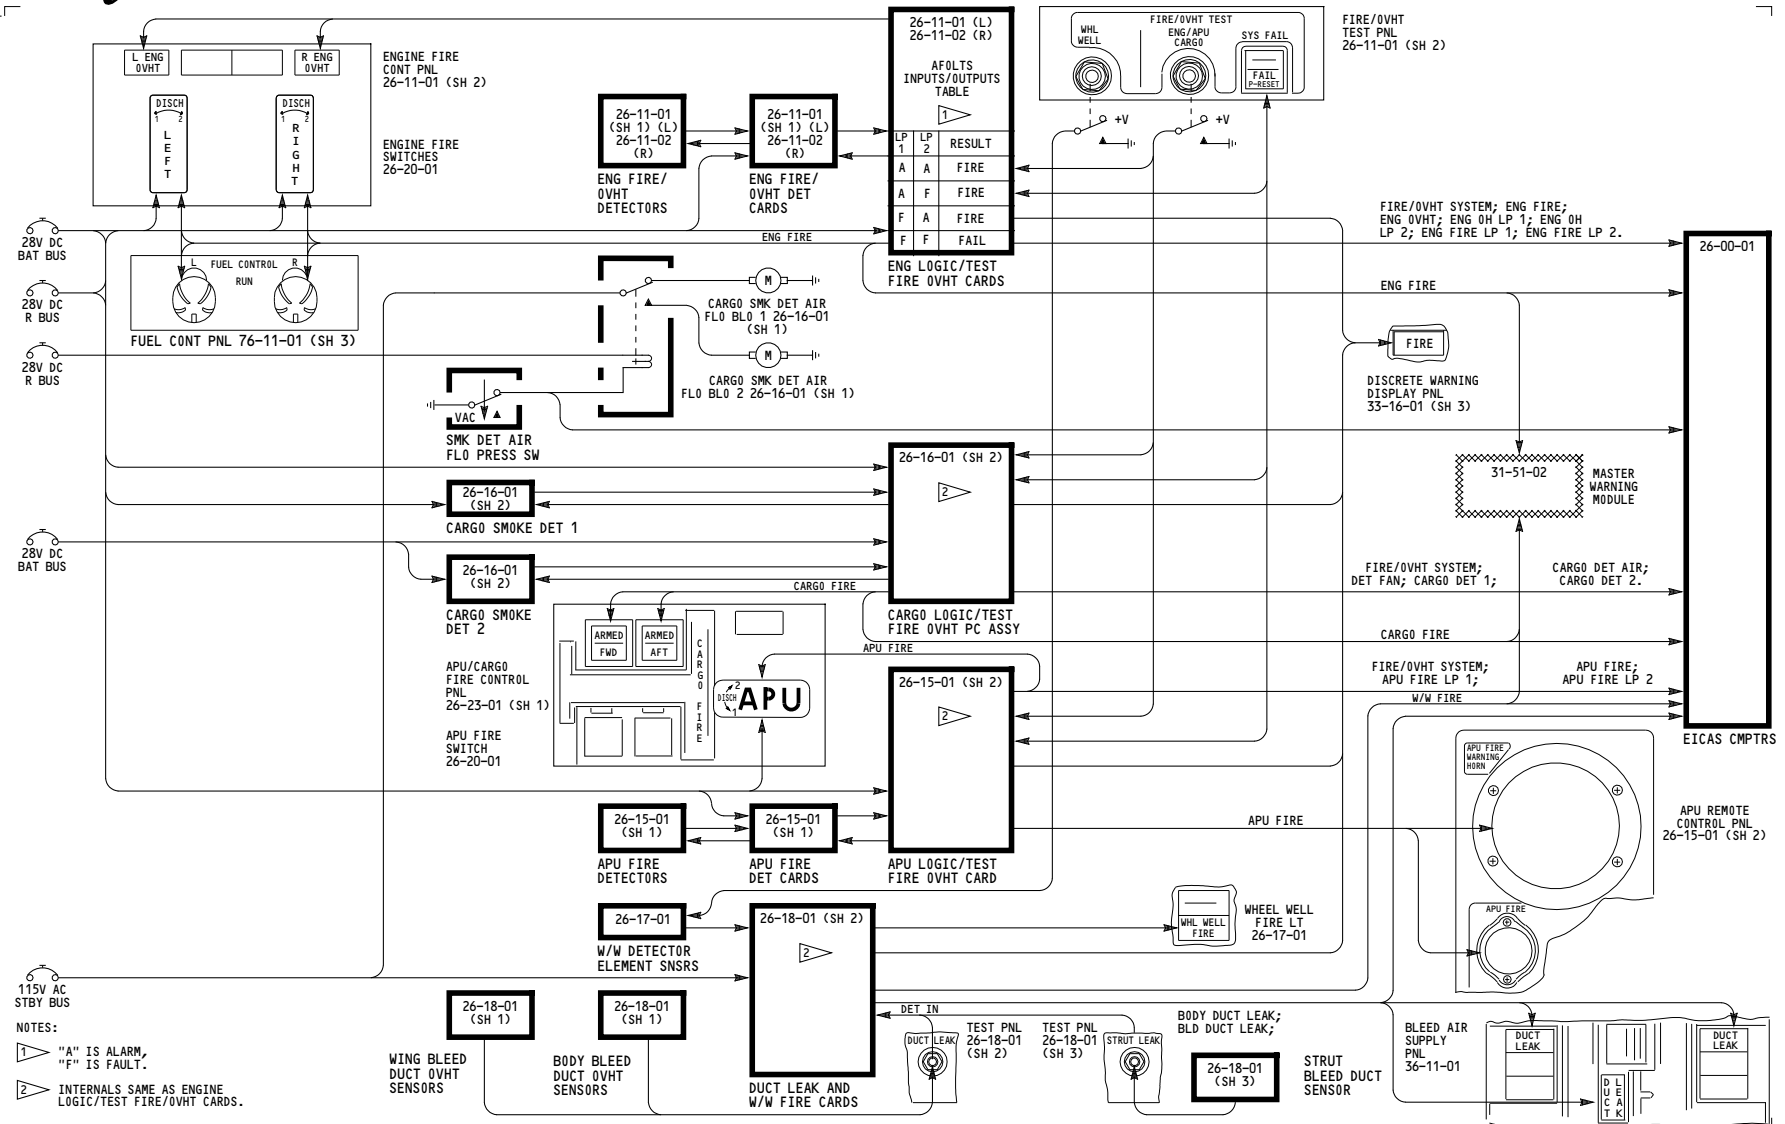

150-199, 275-299


**FIRE DETECTION-  
SIMPLIFIED**

D280T232

**26-10-00**

Page 101

Jan 21/2005

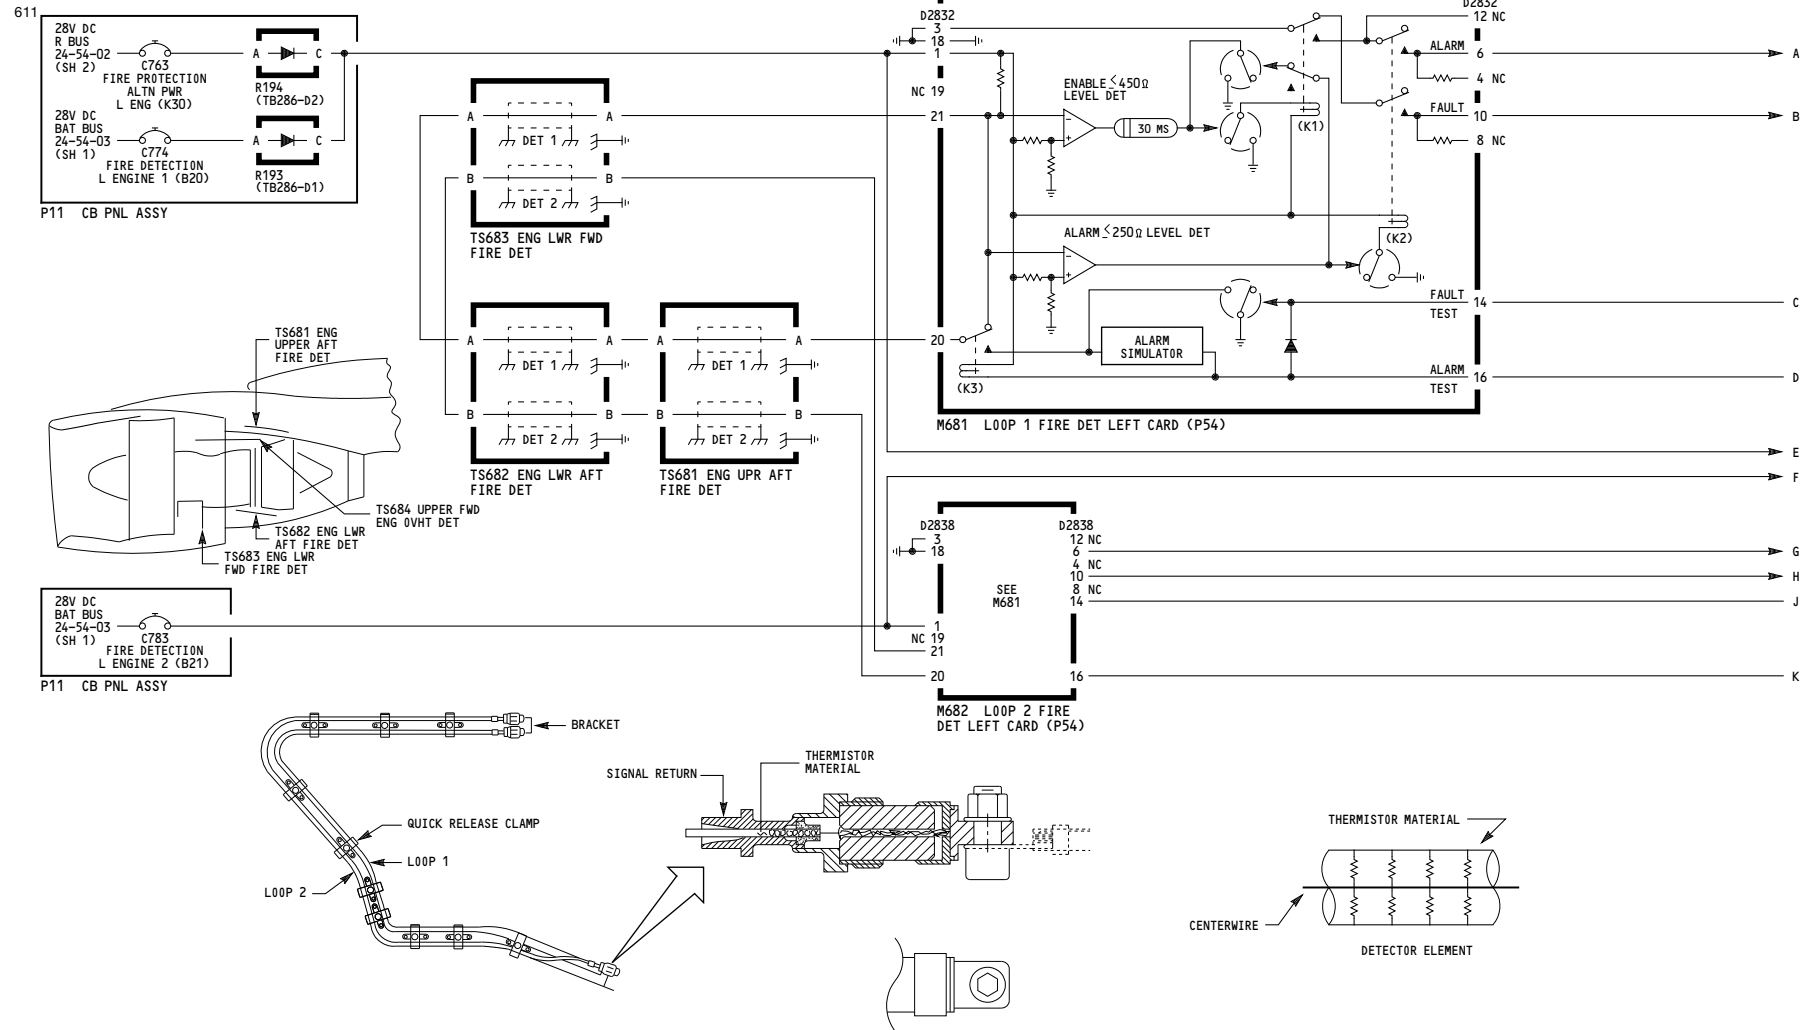


150-199, 275-299

## ENGINE FIRE AND OVERHEAT DETECTION-LEFT

D280T232

26-11-01

Page 101  
Sheet 1  
Jan 21/2005

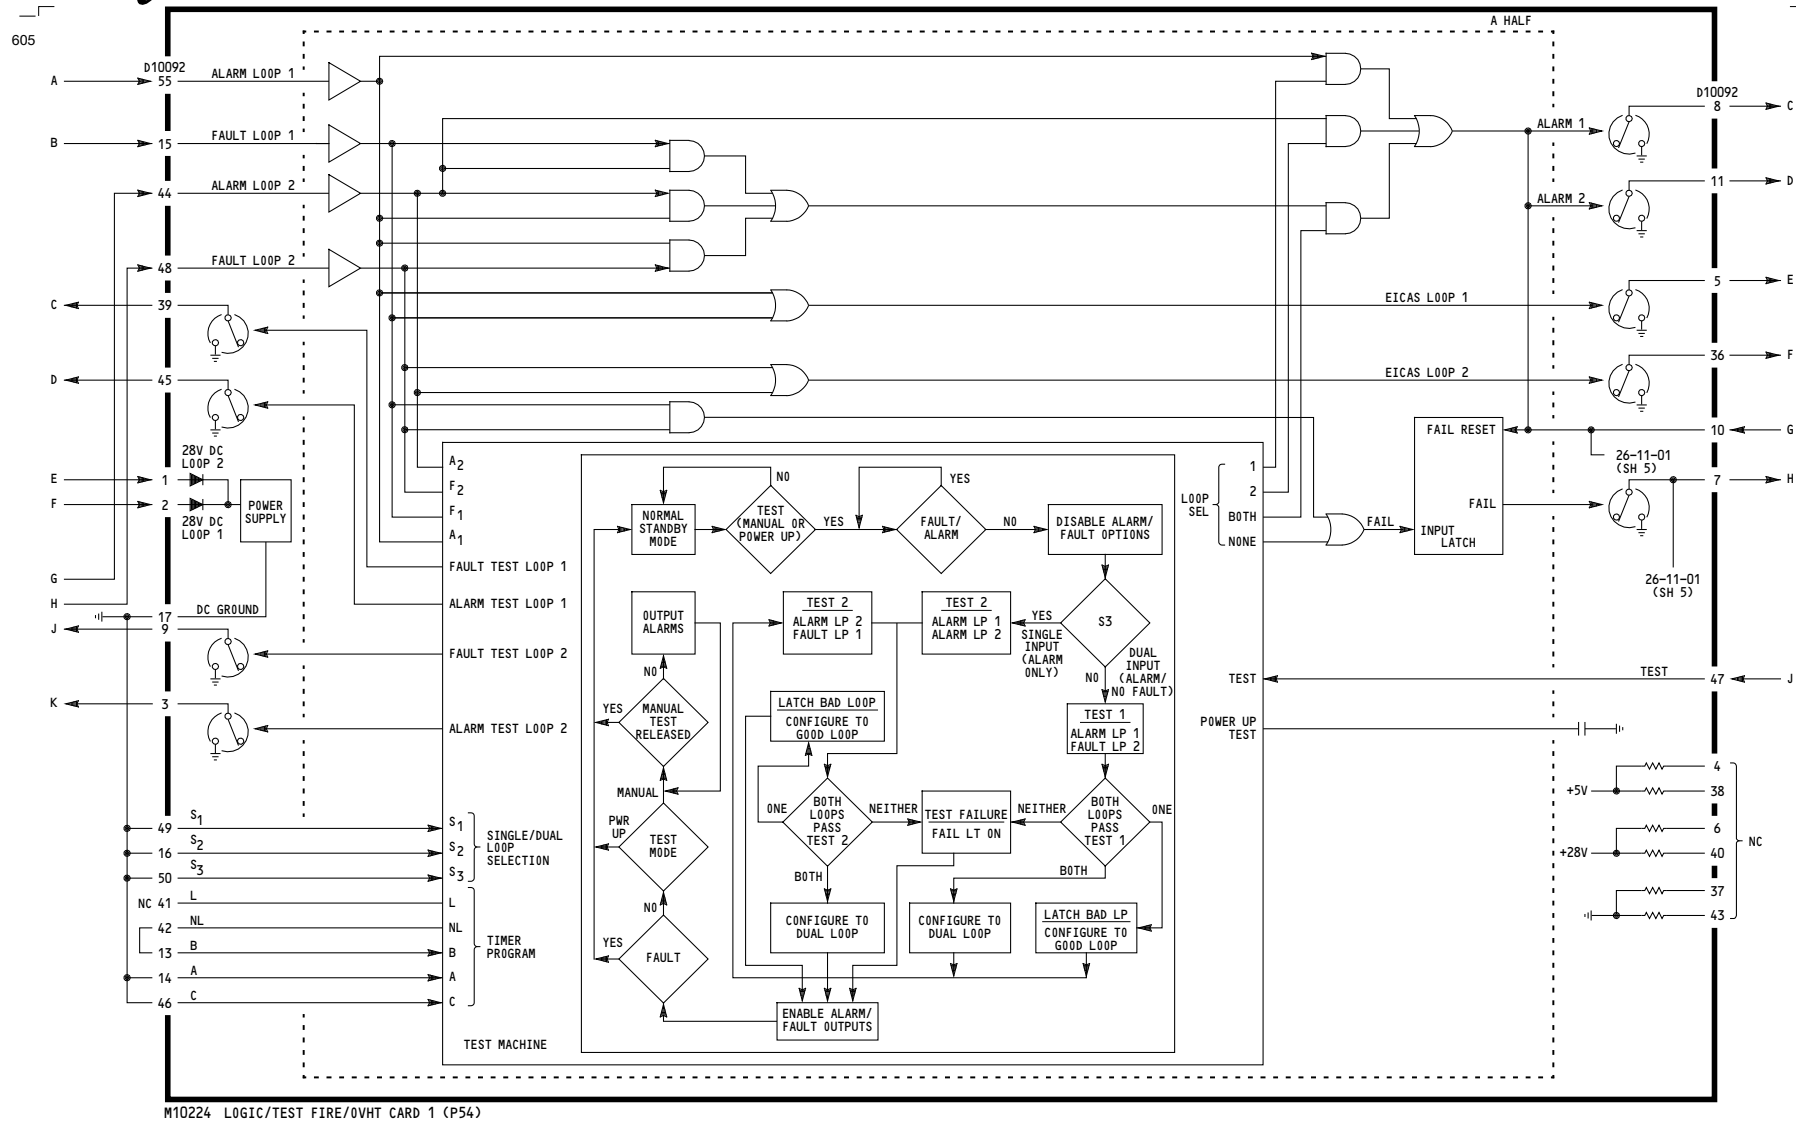

M10224 LOGIC/TEST FIRE/0VHT CARD 1 (P54)

150-199, 275-299

### ENGINE FIRE AND OVERHEAT DETECTION- LEFT


D280T232

**26-11-01**

Page 101  
Sheet 2  
Jan 21/2005



605

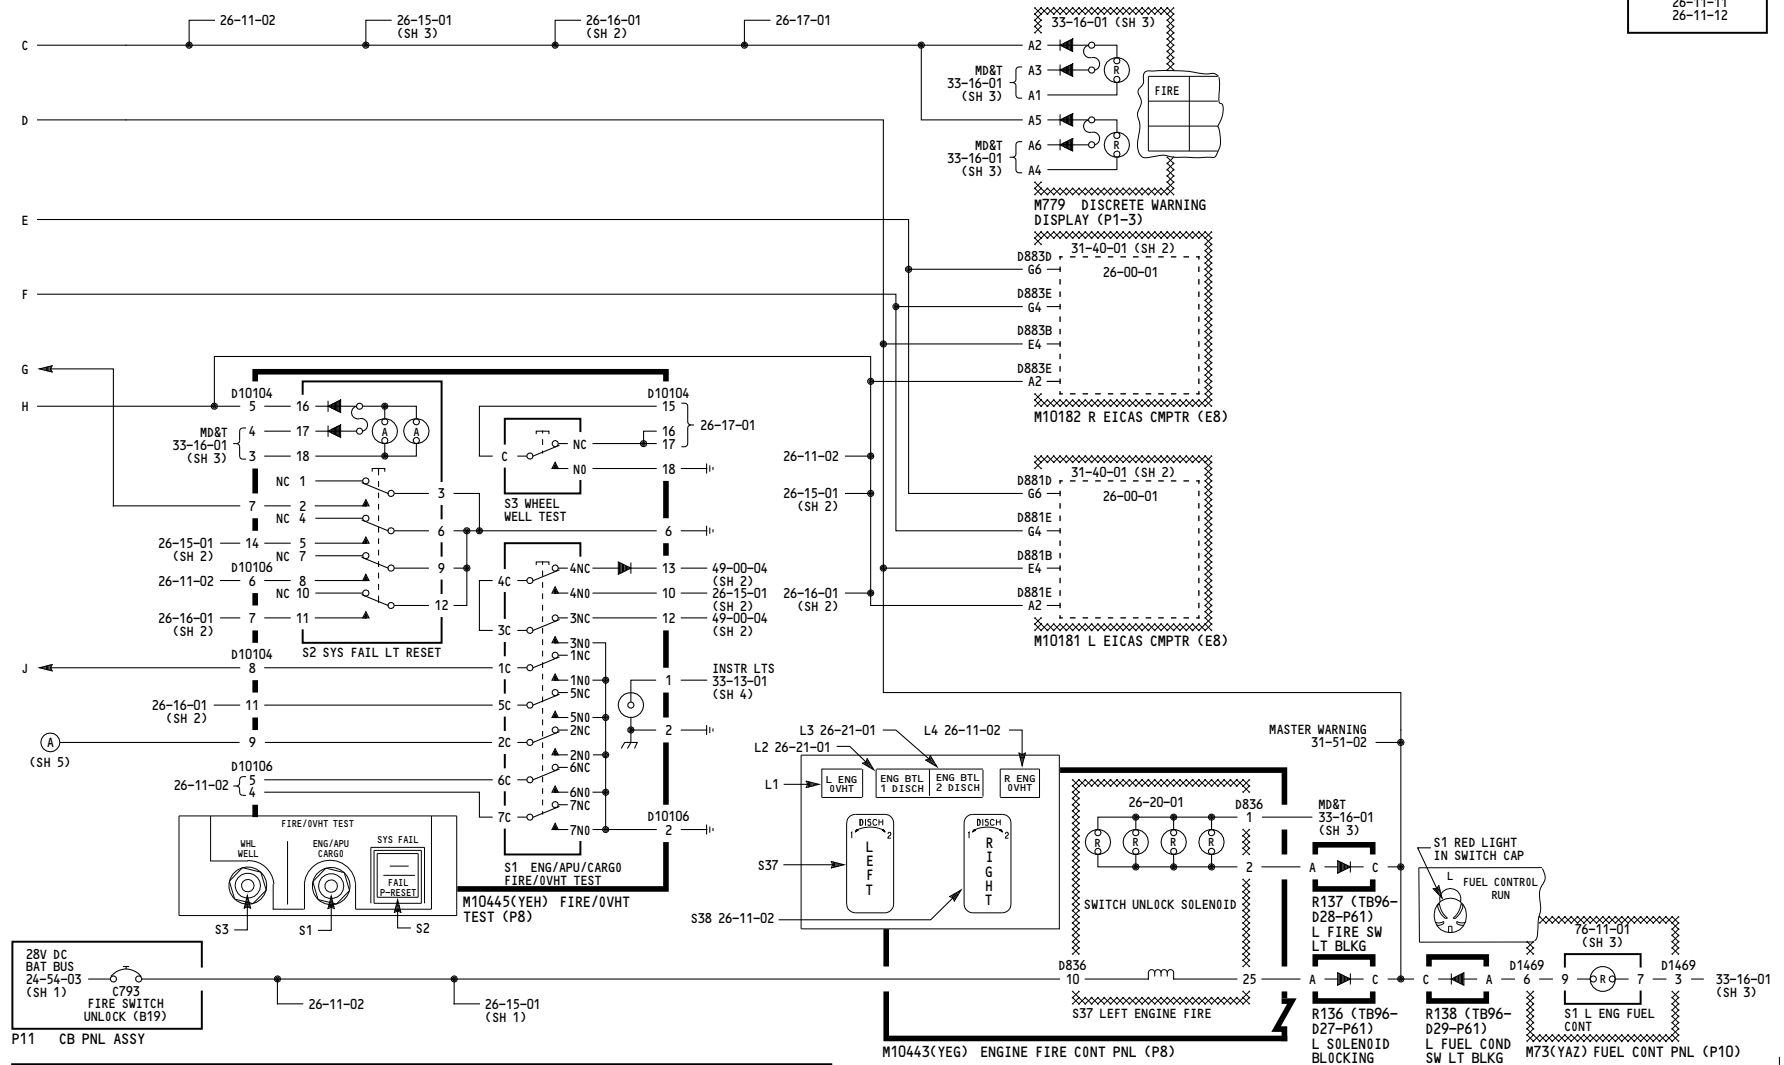


150-199, 275-299

## ENGINE FIRE AND OVERHEAT DETECTION-LEFT

D280T232

26-11-01

Page 101  
Sheet 3  
Jan 21/2005

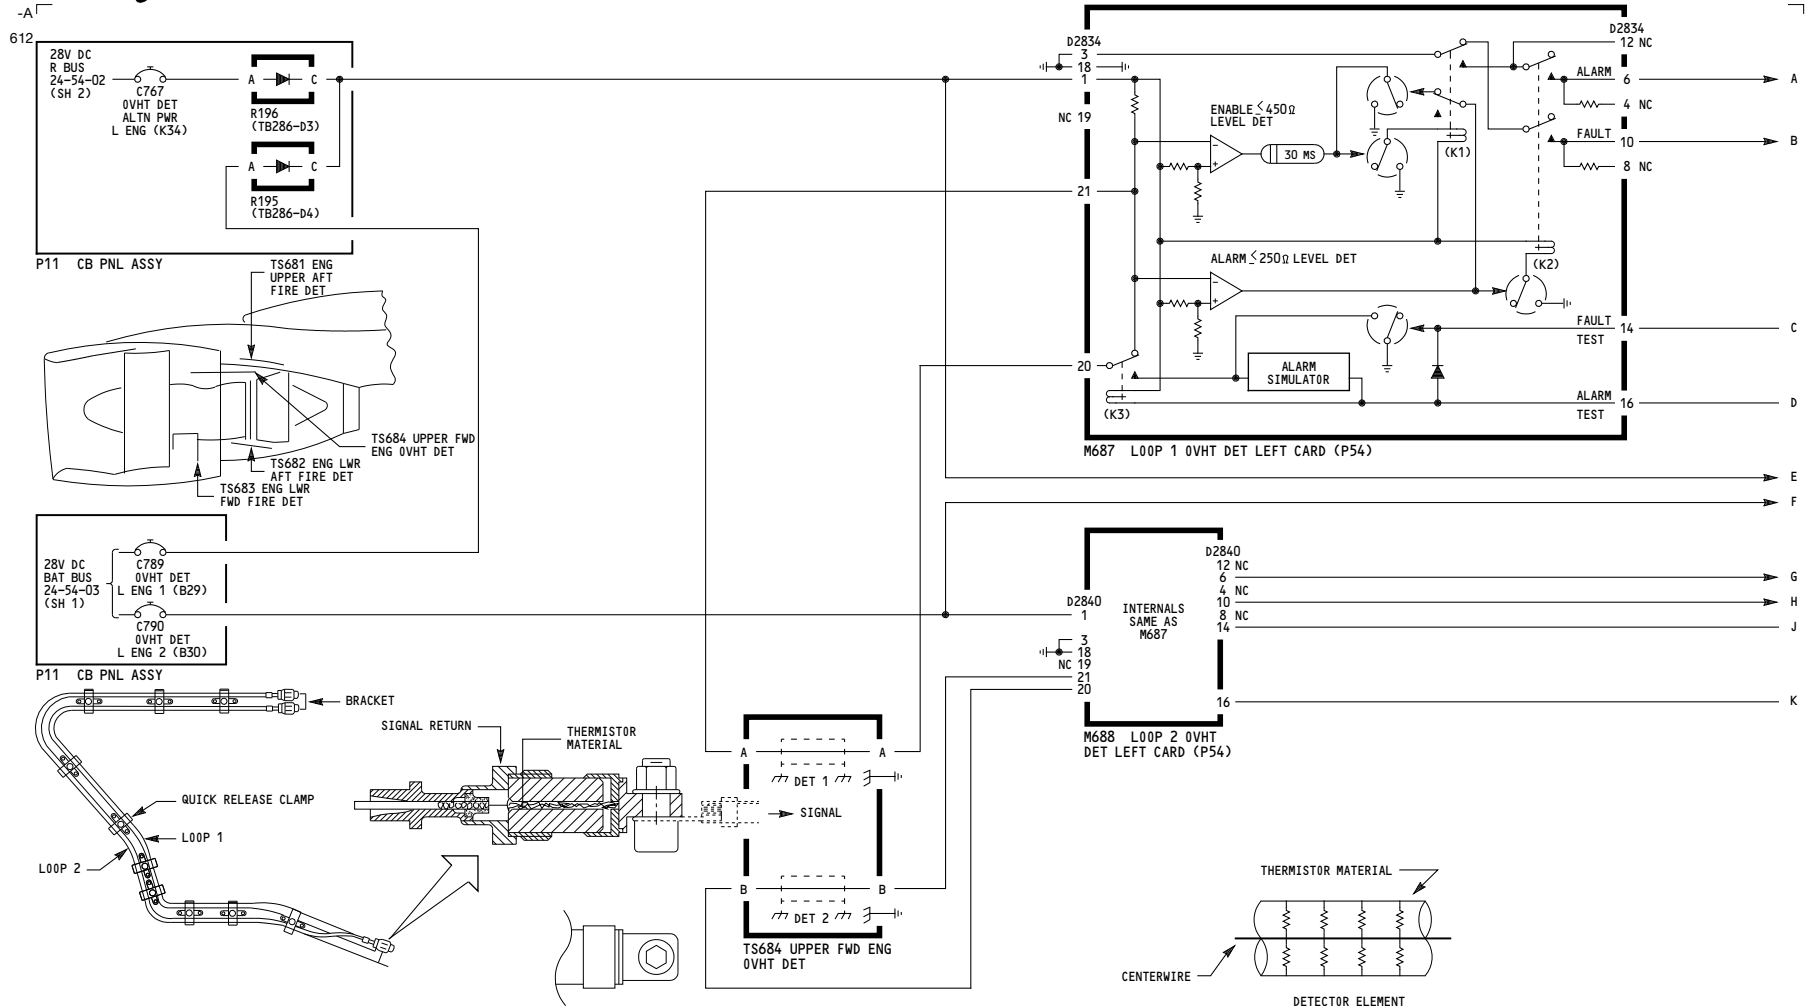



150-199, 275-299

**ENGINE FIRE AND  
OVERHEAT DETECTION-  
LEFT**

D280T232

**26-11-01**

  Page 101  
Sheet 4  
Jan 21/2005



## ENGINE FIRE AND OVERHEAT DETECTION-LEFT

**26-11-01**

Page 101  
Sheet 5  
Jan 21/2005



 
WIRING DIAGRAMS

C

D


E

**F**



## D280T232

 Page 101  
Sheet 6  
Jan 21/2005




## ENGINE FIRE AND OVERHEAT DETECTION- RIGHT

**26-11-02**

Page 101

Jan 21/2005

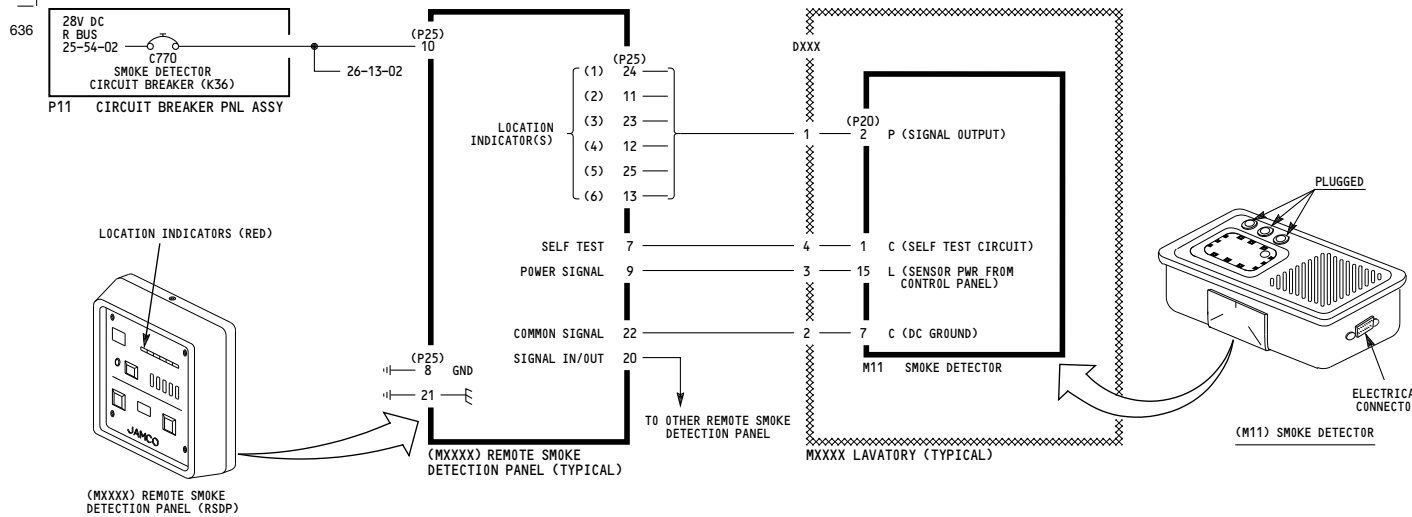


WIRING DIAGRAMS  
26-13-11

	REMOTE SMOKE DETECTION PANEL (RSDP)		LAVATORY		
	ITEM NUMBER	DECAL INDICATOR	LOCATION	ITEM NUMBER	CONNECTOR
<p>(26-13-02)</p>	M1640	A	(1)	M289 (STA 265 L)	P20
		B	(2)	M1585 (STA 781)	D13482
		C	(3)	M1584 (STA 839 L)	D13480
		D	(4)	M1586 (STA 839 R)	D13484
<p>(26-13-02)</p>	M1641	BLANK	①	NONE	NONE
		F	②	M1587 (STA 1056 L)	D13486
		G	③	M1589 (STA 1056 R)	D13490
		TBD	④	M1186 (STA 1463 L)	D6904P
		TBD	⑤	M1188 (STA 1463 R)	D6906P

- NOTES:
- ① ALTERNATE LAV. OR PASS. SEATS WHEN CABIN CREW REST IS REMOVED (SEE 26-13-02)
  - ② "SELECT" POSITION WHEN ASSOCIATED LAV OR CREW REST IS INSTALLED
  - "DESELECT" POSITION WHEN ASSOCIATED LAV OR CREW REST IS REMOVED (SEE 26-13-02)

⊗ REMOTE SMOKE DETECTION PNL

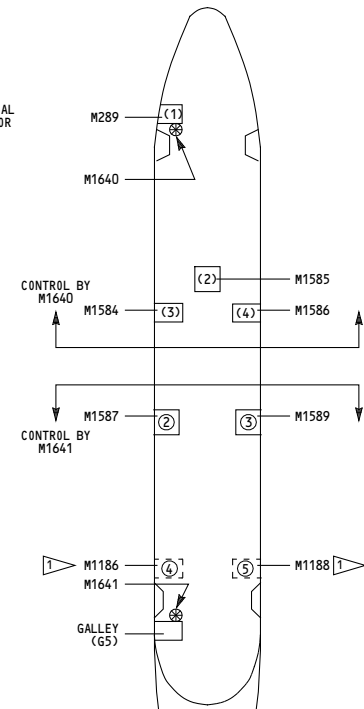

050-099

**LAVATORY SMOKE DETECTOR**

D280T232


**26-13-01**

Page 101

Jan 21/2005

695


WIRING DIAGRAMS  
26-13-11

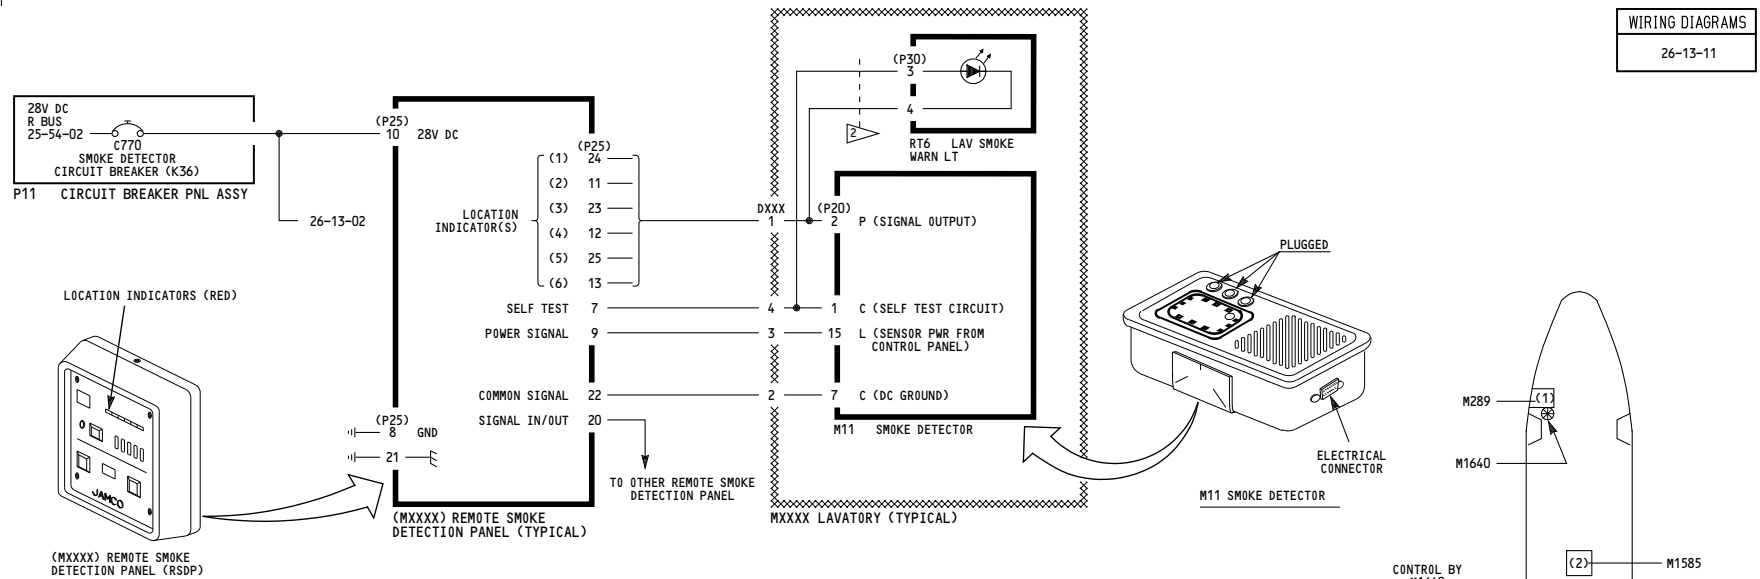

	REMOTE SMOKE DETECTION PANEL (RSDP)		LAVATORY		
	ITEM NUMBER	DECAL INDICATOR	LOCATION	ITEM NUMBER	CONNECTOR
(26-13-02)  654321 DESELECT DETECTOR	M1640	A	(1)	M289 (STA 265 L)	P20
		B	(2)	M1585 (STA 654+76)	D13482
		C	(3)	M1584 (STA 654+121 L)	D13480
		D	(4)	M1586 (STA 654+121 R)	D13484
(26-13-02)  654321 DESELECT DETECTOR	M1641	E	①	M1588 (STA 970)	D13488
		F	②	M1587 (STA 967 L)	D13486
		G	③	M1589 (STA 967 R)	D13490
		TBD	④	M1186 (STA 1463 L)	D6904P
		TBD	⑤	M1188 (STA 1463 R)	D6906P

- NOTES:
- ALTERNATE LAV OR PASS SEATS WHEN CABIN CREW REST IS REMOVED (SEE 26-13-02)
  - RT6 FOR VN156-VN158
  - "SELECT" POSITION WHEN ASSOCIATED LAV OR CREW REST IS INSTALLED  
"DESELECT" POSITION WHEN ASSOCIATED LAV OR CREW REST IS REMOVED (SEE 26-13-02)

⊗ SMOKE DETECTION PNL

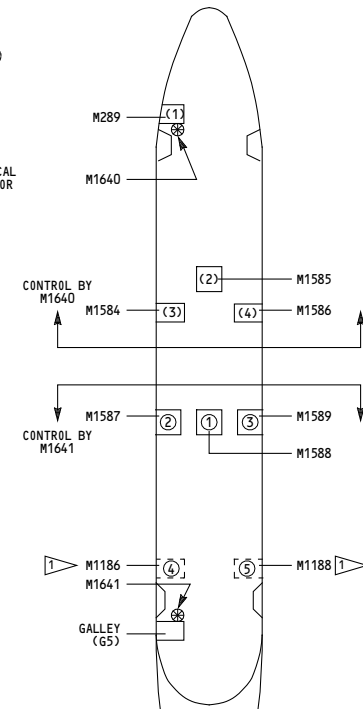

150, 152-157

**LAVATORY SMOKE DETECTOR**

Incorporates  
MTO 210353


D280T232

**26-13-01**

Page 102A

Jan 21/2005


624

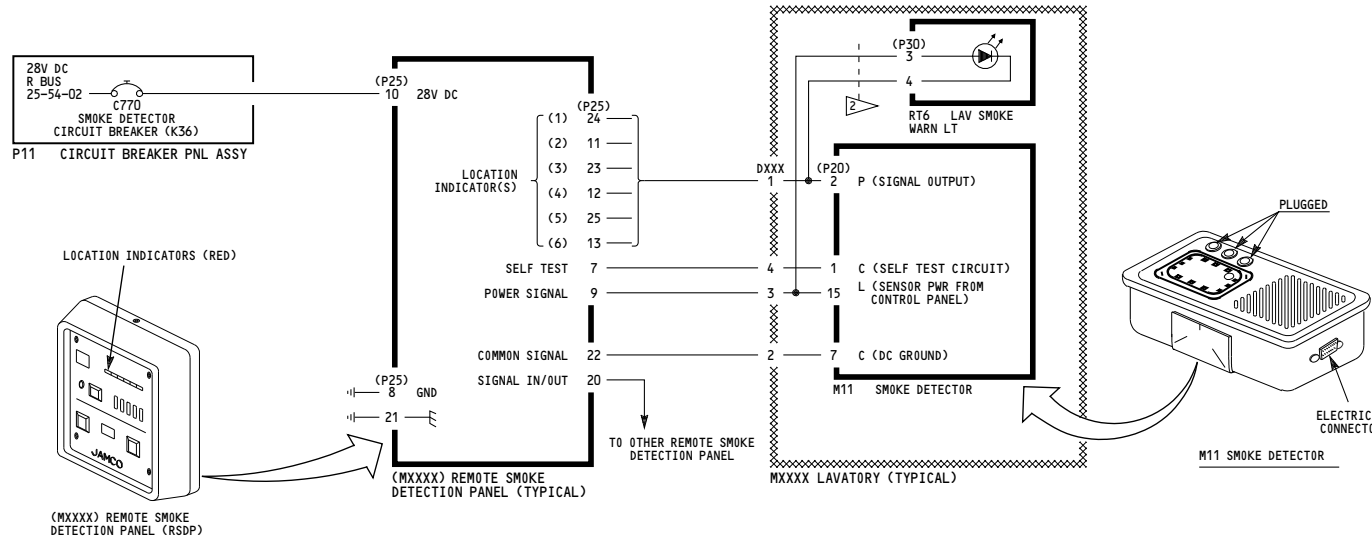

WIRING DIAGRAMS  
26-13-11

3 DIP SWITCHES ON THE BACK SIDE OF (RSDP)	REMOTE SMOKE DETECTION PANEL (RSDP)		LAVATORY		
	ITEM NUMBER	DECAL INDICATOR	LOCATION	ITEM NUMBER	CONNECTOR
	M1640	A	(1)	M289 (STA 265 L)	P20
		B	(2)	M1585 (STA 654+76)	D13482
		C	(3)	M1584 (STA 654+121 L)	D13480
		D	(4)	M1586 (STA 654+121 R)	D13484
	M1641	E	①	M1588 (STA 970)	D13488
		F	②	M1587 (STA 967 L)	D13486
		G	③	M1589 (STA 967 R)	D13490
		TBD	④	M1186 (STA 1463 L)	D13492
		TBD	⑤	M1188 (STA 1463 R)	D13494

- NOTES:
- 1 PROVISIONAL LAV ONLY
  - 2 RT6 FOR VN156-VN162 (155-161)
  - 3 "SELECT" POSITION WHEN ASSOCIATED LAVATORY IS INSTALLED  
"DESELECT" POSITION WHEN ASSOCIATED LAVATORY IS REMOVED
  - ⊗ SMOKE DETECTION PNL

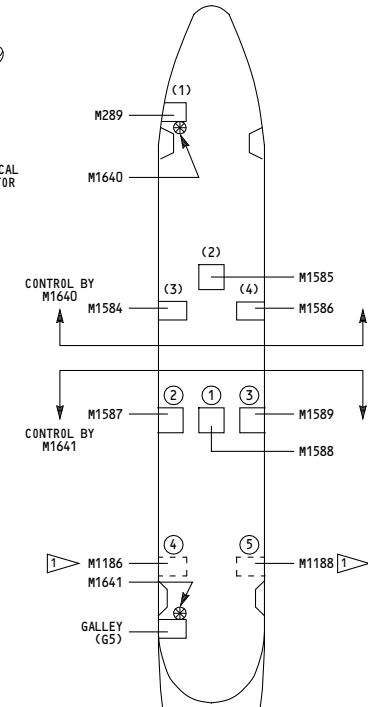

151

**LAVATORY SMOKE DETECTOR**

D280T232

**26-13-01**


Page 103

Jan 21/2005



635


WIRING DIAGRAMS  
26-13-11

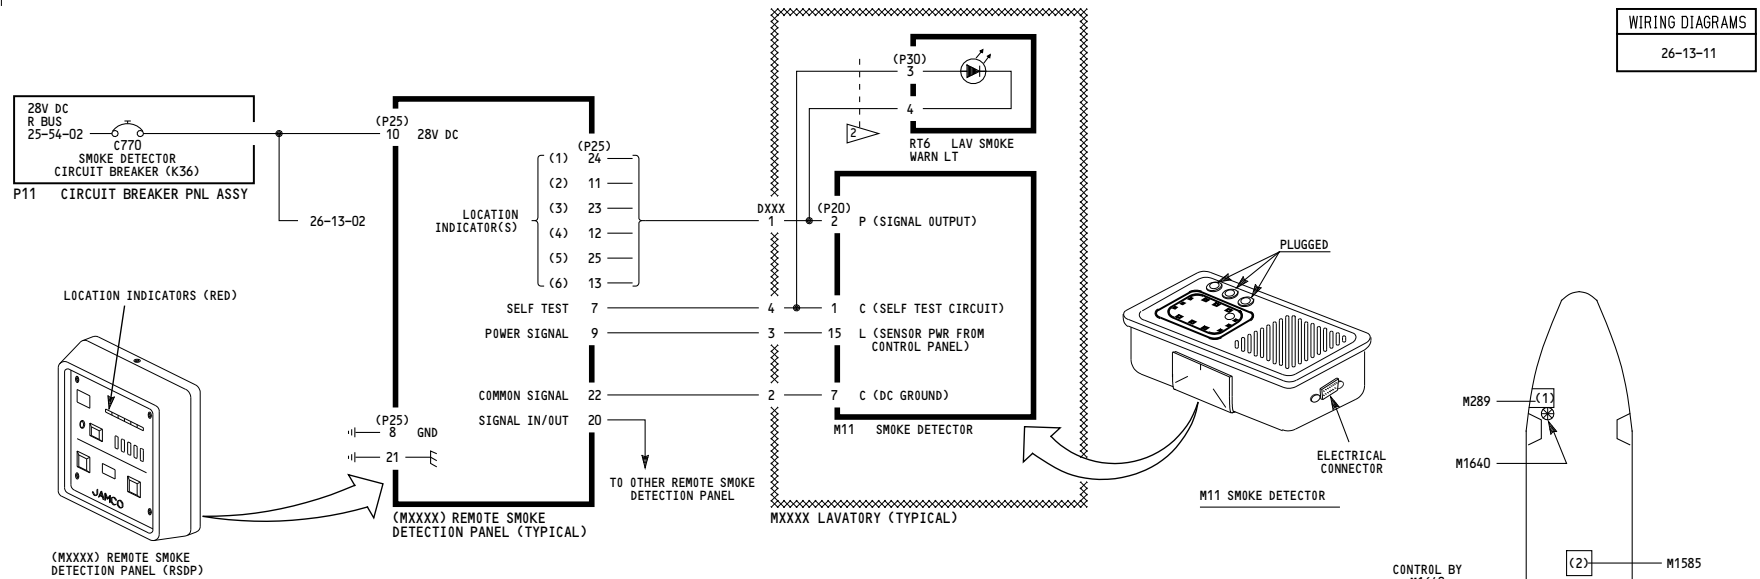

	REMOTE SMOKE DETECTION PANEL (RSDP)		LAVATORY		
	ITEM NUMBER	DECAL INDICATOR	LOCATION	ITEM NUMBER	CONNECTOR
<p>3 DIP SWITCHES ON THE BACK SIDE OF (RSDP)</p> <p>(26-13-02)</p> <p>SELECT 654321 DESELECT DETECTOR</p>	M1640	A	(1)	M289 (STA 265 L)	P20
		B	(2)	M1585 (STA 654+76)	D13482
		C	(3)	M1584 (STA 654+121 L)	D13480
		D	(4)	M1586 (STA 654+121 R)	D13484
<p>(26-13-02)</p> <p>SELECT 654321 DESELECT DETECTOR</p>	M1641	E	①	M1588 (STA 970)	D13488
		F	②	M1587 (STA 967 L)	D13486
		G	③	M1589 (STA 967 R)	D13490
		TBD	④	M1186 (STA 1463 L)	D6904P
		TBD	⑤	M1188 (STA 1463 R)	D6906P

- NOTES:
- ALTERNATE LAV OR PASS SEATS WHEN CABIN CREW REST IS REMOVED (SEE 26-13-02)
  - RT6 FOR VN165-VN170 (164-274)
  - "SELECT" POSITION WHEN ASSOCIATED LAV OR CREW REST IS INSTALLED  
"DESELECT" POSITION WHEN ASSOCIATED LAV OR CREW REST IS REMOVED (SEE 26-13-02)

⊗ SMOKE DETECTION PNL

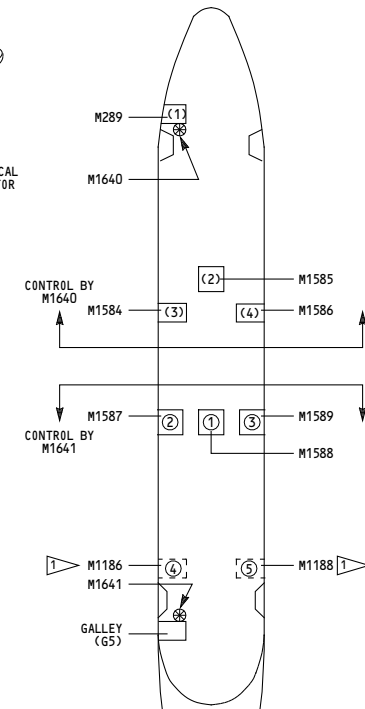

162-199

**LAVATORY SMOKE DETECTOR**

D280T232

**26-13-01**


Page 104

Jan 21/2005

631

WIRING DIAGRAMS  
26-13-11

28V DC  
R. BUS  
25-54-01  
C1194  
LAV CALL/SMOKE  
DETECTOR SYSTEM CB (P34)  
P11-6 CB PANEL ASSY

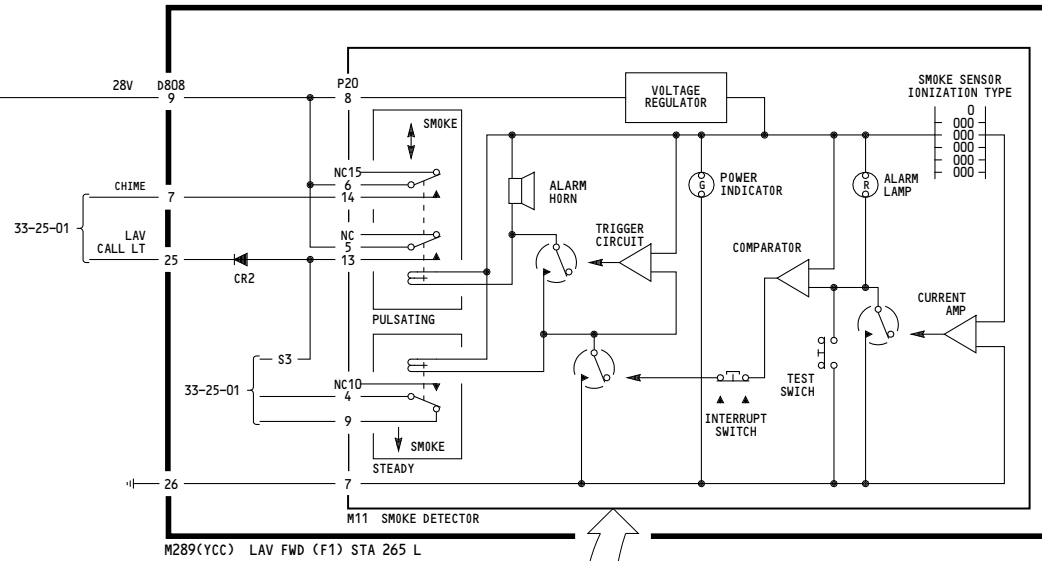

SAME AS M289  
D10908  
9 CHIME  
25 CALL LT  
26  
M1242(YGB) LAV (FWD-F2)  
STA 367 L



SAME AS M289  
D814  
9 CHIME  
25 CALL LT  
26  
M1186(YEC) LAV AFT (A-L)  
STA 1463 L

SAME AS M289  
D816  
9 CHIME  
25 CALL LT  
26  
M1188(YEE) LAV (A-R)  
STA 1463 R

SAME AS M289  
D810  
9 CHIME  
25 CALL LT  
26  
M1156(YCF) LAV MID LEFT  
(M-L) STA 833 L

SAME AS M289  
D812  
9 CHIME  
25 CALL LT  
26  
M1157(YCG) LAV MID RIGHT  
(M-R) STA 833 R

SAME AS M289  
D10568  
9 CHIME  
25 CALL LT  
26  
M1312(YGT) LAV (M-C)  
STA 852, BL 0

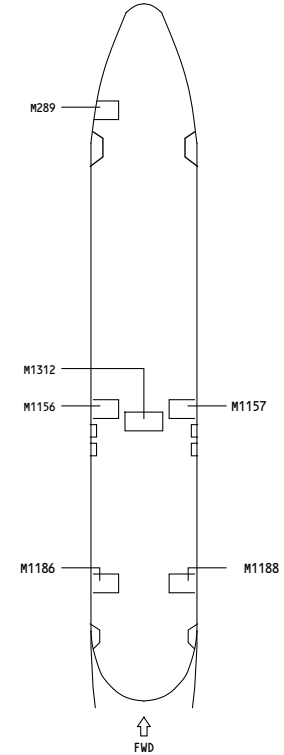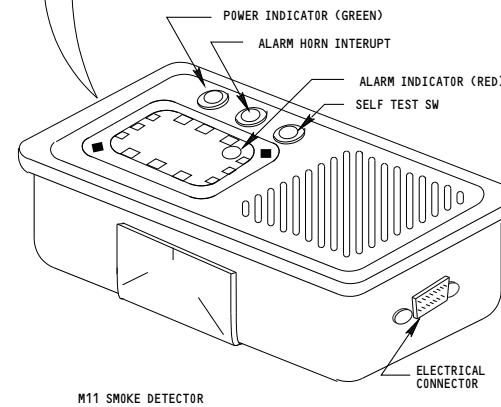

275-278


**LAVATORY SMOKE DETECTOR**

D280T232

**26-13-01**

Page 105

Jan 21/2005

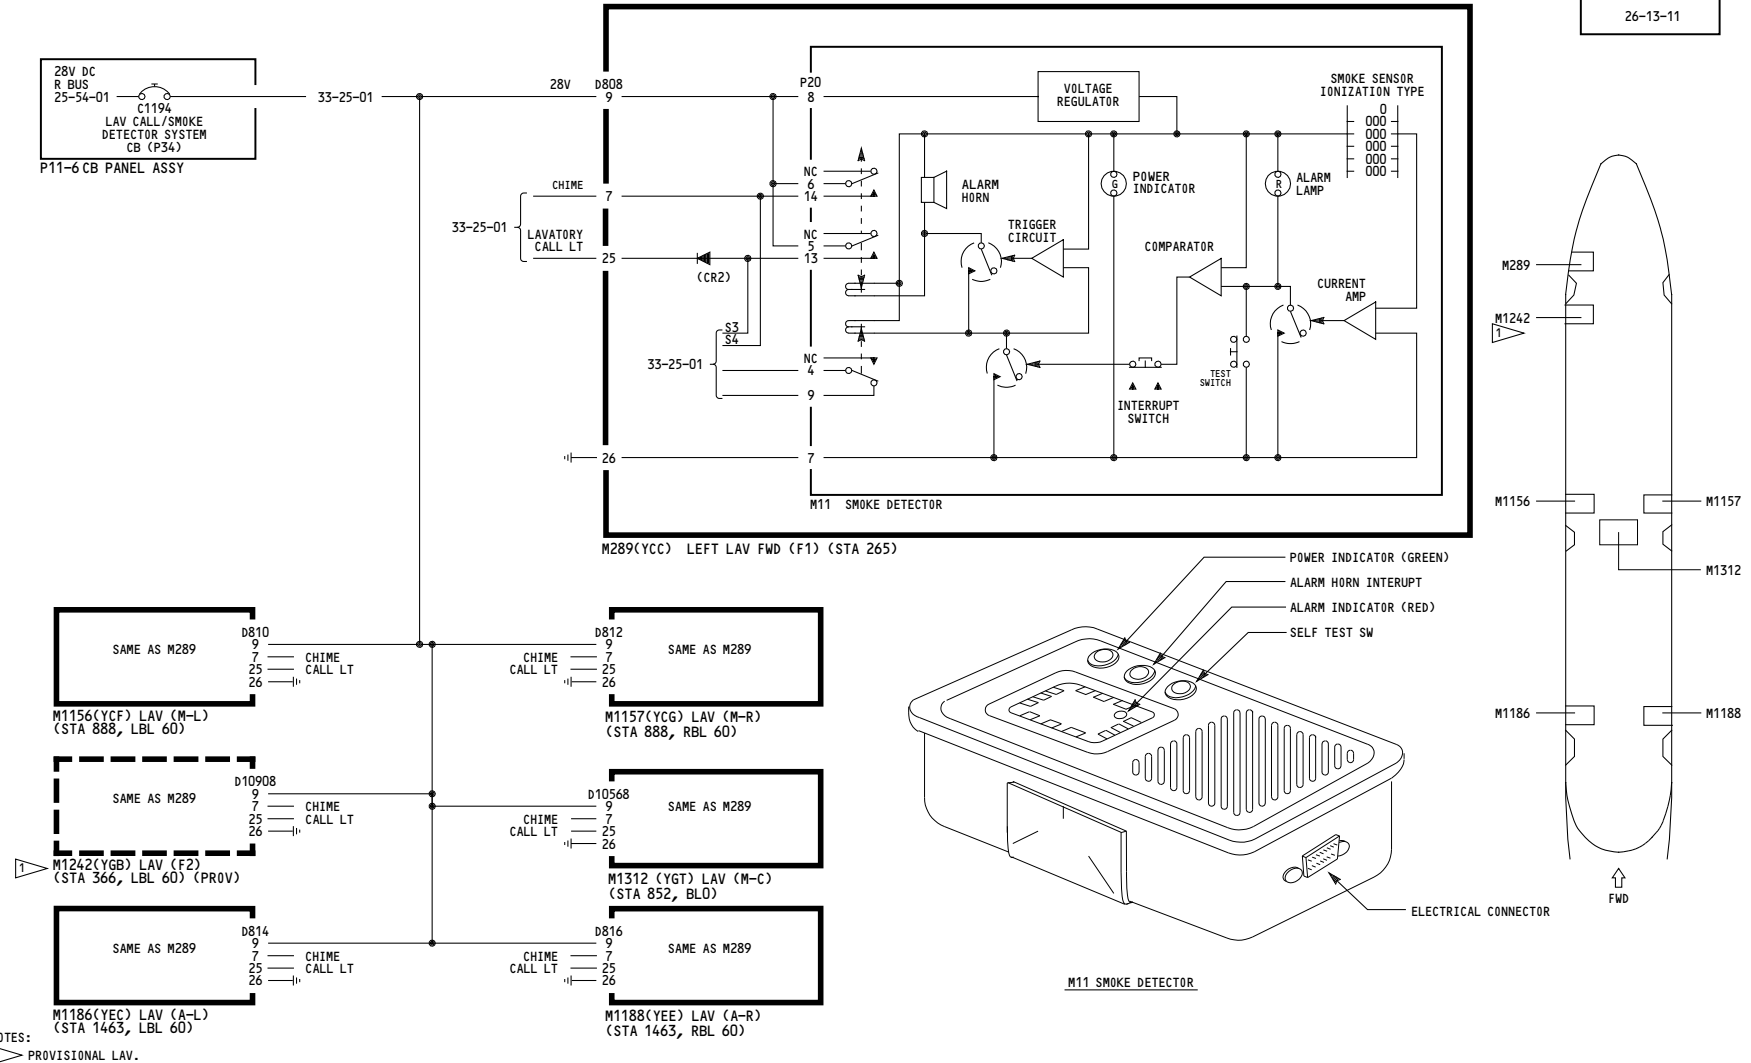

280-299





**LAVATORY SMOKE DETECTOR**

D280T232


**26-13-01**

Page 106

Jan 21/2005

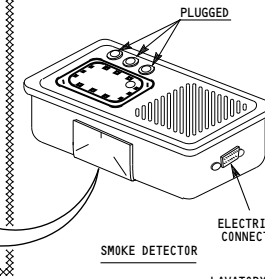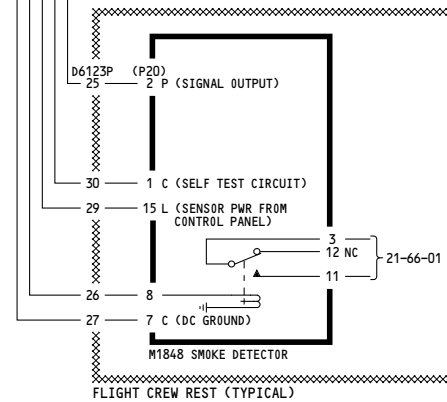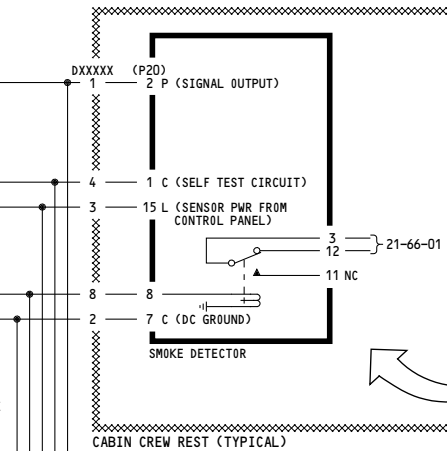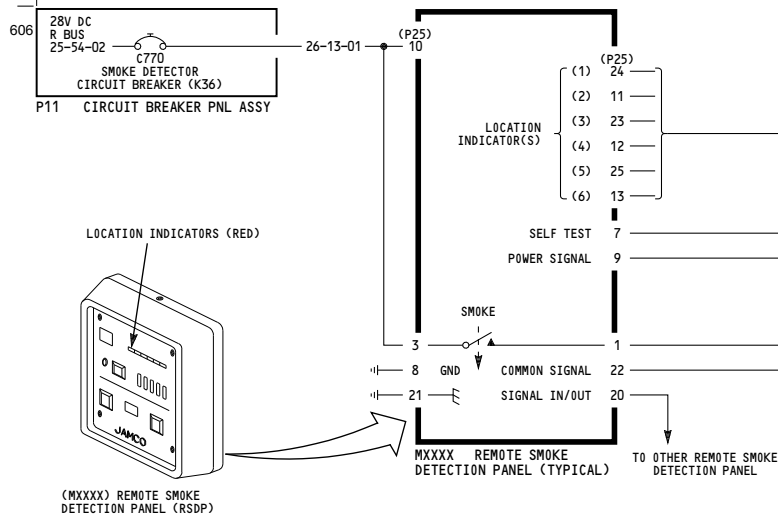

WIRING DIAGRAMS  
26-13-12

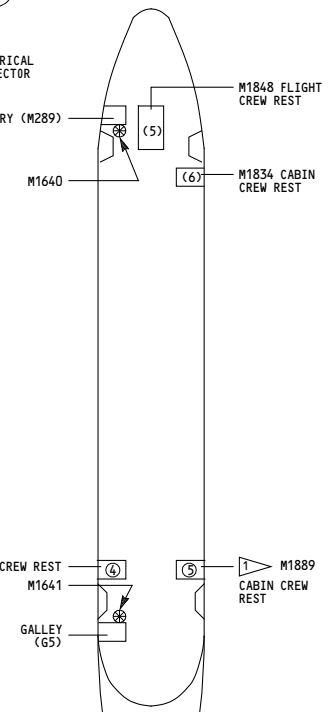

2 DIP SWITCHES ON THE BACK SIDE OF (RSDP)	REMOTE SMOKE DETECTION PANEL (RSDP)		FLIGHT/CABIN CREW REST		
	ITEM NUMBER	DECAL INDICATOR	LOCATION	ITEM NUMBER	CONNECTOR
(26-13-01) SELECT 654321 DESELECT DETECTOR	M1640	R1	(5) FLIGHT CREW REST (STA 276) M1848	D6123P	
		R2	(6) CABIN CREW REST (STA 437 R) M1834	D69000P	
(26-13-01) SELECT 654321 DESELECT DETECTOR	M1641	R3	(4) CABIN CREW REST (STA 1450 L) M1889	D6904P	
		R4	(5) CABIN CREW REST (STA 1450 R) M1889	D6906P	

NOTES:  
1 ALTERNATE LAV OR PASS SEATS  
2 "SELECT" POSITION WHEN ASSOCIATED LAV OR CREW REST IS INSTALLED  
"DESELECT" POSITION WHEN ASSOCIATED LAV OR CREW REST IS REMOVED (SEE 26-13-01)

⊗ REMOTE SMOKE DETECTION PNL

050-099


**CREW SMOKE DETECTION  
SYSTEM**

D280T232

**26-13-02**

Page 101

Jan 21/2005

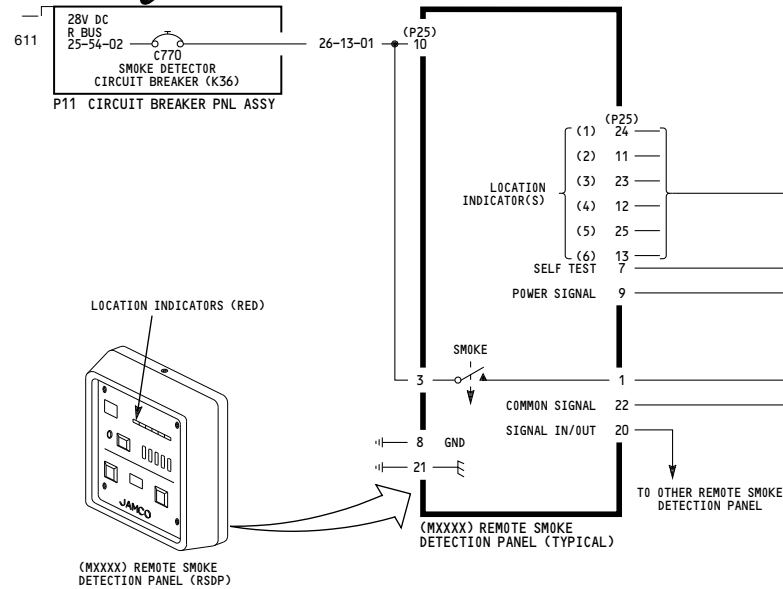

2 DIP SWITCHES ON THE BACK SIDE OF (RSDP)	REMOTE SMOKE DETECTION PANEL (RSDP)		FLIGHT/CABIN CREW REST		
	ITEM NUMBER	DECAL INDICATOR	LOCATION	ITEM NUMBER	CONNECTOR
(26-13-01)	M1641	R3	④	CABIN CREW REST (STA 1450 L) M1889	D6904P
		R4	⑤	CABIN CREW REST (STA 1450 R) M1889	D6906P



**NOTES:**

1 ALTERNATE LAV OR PASS SEATS (SEE 26-13-01)

2 "SELECT" POSITION WHEN ASSOCIATED LAV OR CREW REST IS INSTALLED  
"DESELECT" POSITION WHEN ASSOCIATED LAV OR CREW REST IS REMOVED (SEE 26-13-01)

⊗ REMOTE SMOKE DETECTION PNL

• CREW SMOKE WARNING LT

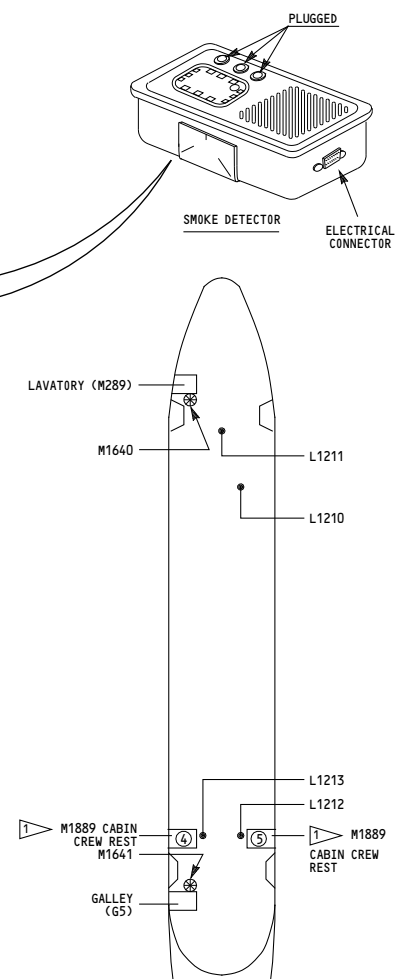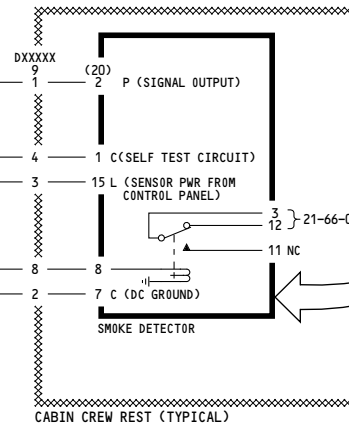

**26-13-02**

Page 102A


Jan 21/2005

150, 152-157

**CREW SMOKE DETECTION SYSTEM**

D280T232

Incorporates  
MTO 210353

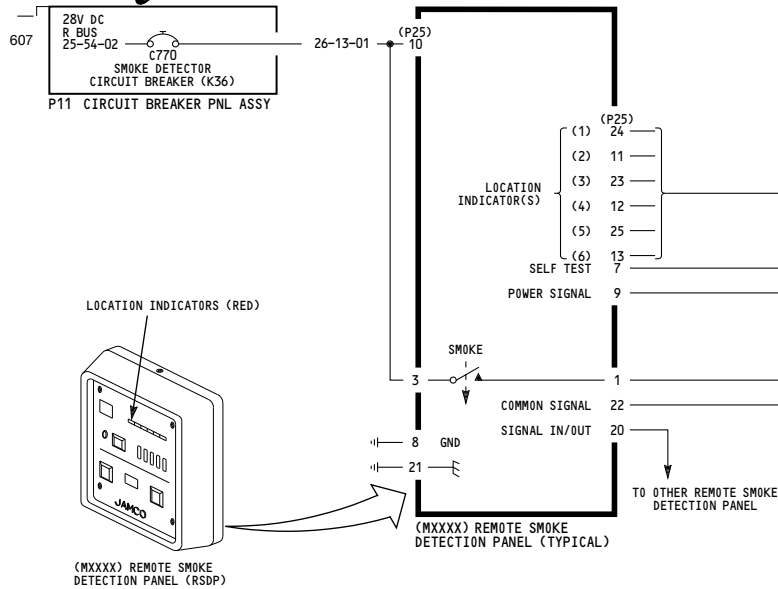

DIP SWITCHES ON THE BACK SIDE OF (RSDP)	REMOTE SMOKE DETECTION PANEL (RSDP)		FLIGHT/CABIN CREW REST		
	ITEM NUMBER	DECAL INDICATOR	LOCATION	ITEM NUMBER	CONNECTOR
(26-13-01) SELECT 654321 DESELECT DETECTOR	M1640	R1	(5) FLIGHT CREW REST (STA 276) M1848		D6123P
		R2	(6) CABIN CREW REST (STA 437 RBL 55) M1834		D69000P
(26-13-01) SELECT 654321 DESELECT DETECTOR	M1641	R3	(4) CABIN CREW REST (STA 1450 L) M1889		D6904P
		R4	(5) CABIN CREW REST (STA 1450 R) M1889		D6906P




**NOTES:**

1 ALTERNATE LAV OR PASS SEATS (SEE 26-13-01)

2 "SELECT" POSITION WHEN ASSOCIATED LAV OR CREW REST IS INSTALLED  
"DESELECT" POSITION WHEN ASSOCIATED LAV OR CREW REST IS REMOVED (SEE 26-13-01)

⊗ REMOTE SMOKE DETECTION PNL

• CREW SMOKE WARNING LT

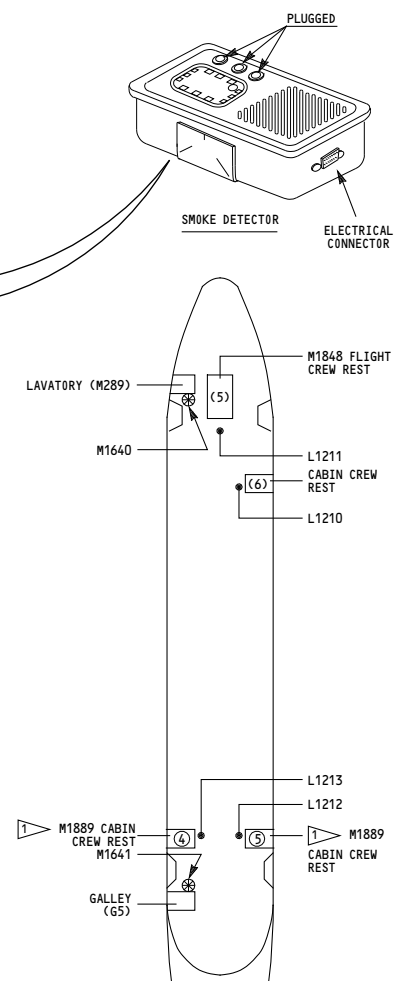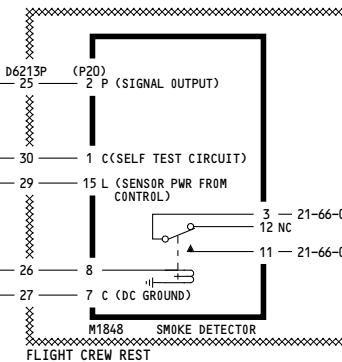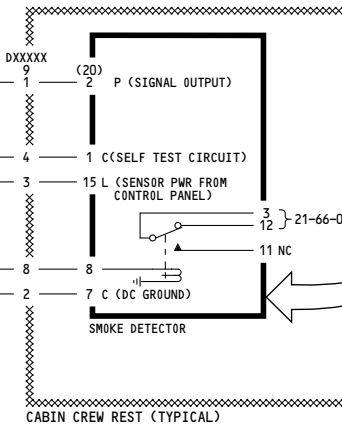

**26-13-02**


Page 103

Jan 21/2005

162-163

**CREW SMOKE DETECTION SYSTEM**

D280T232

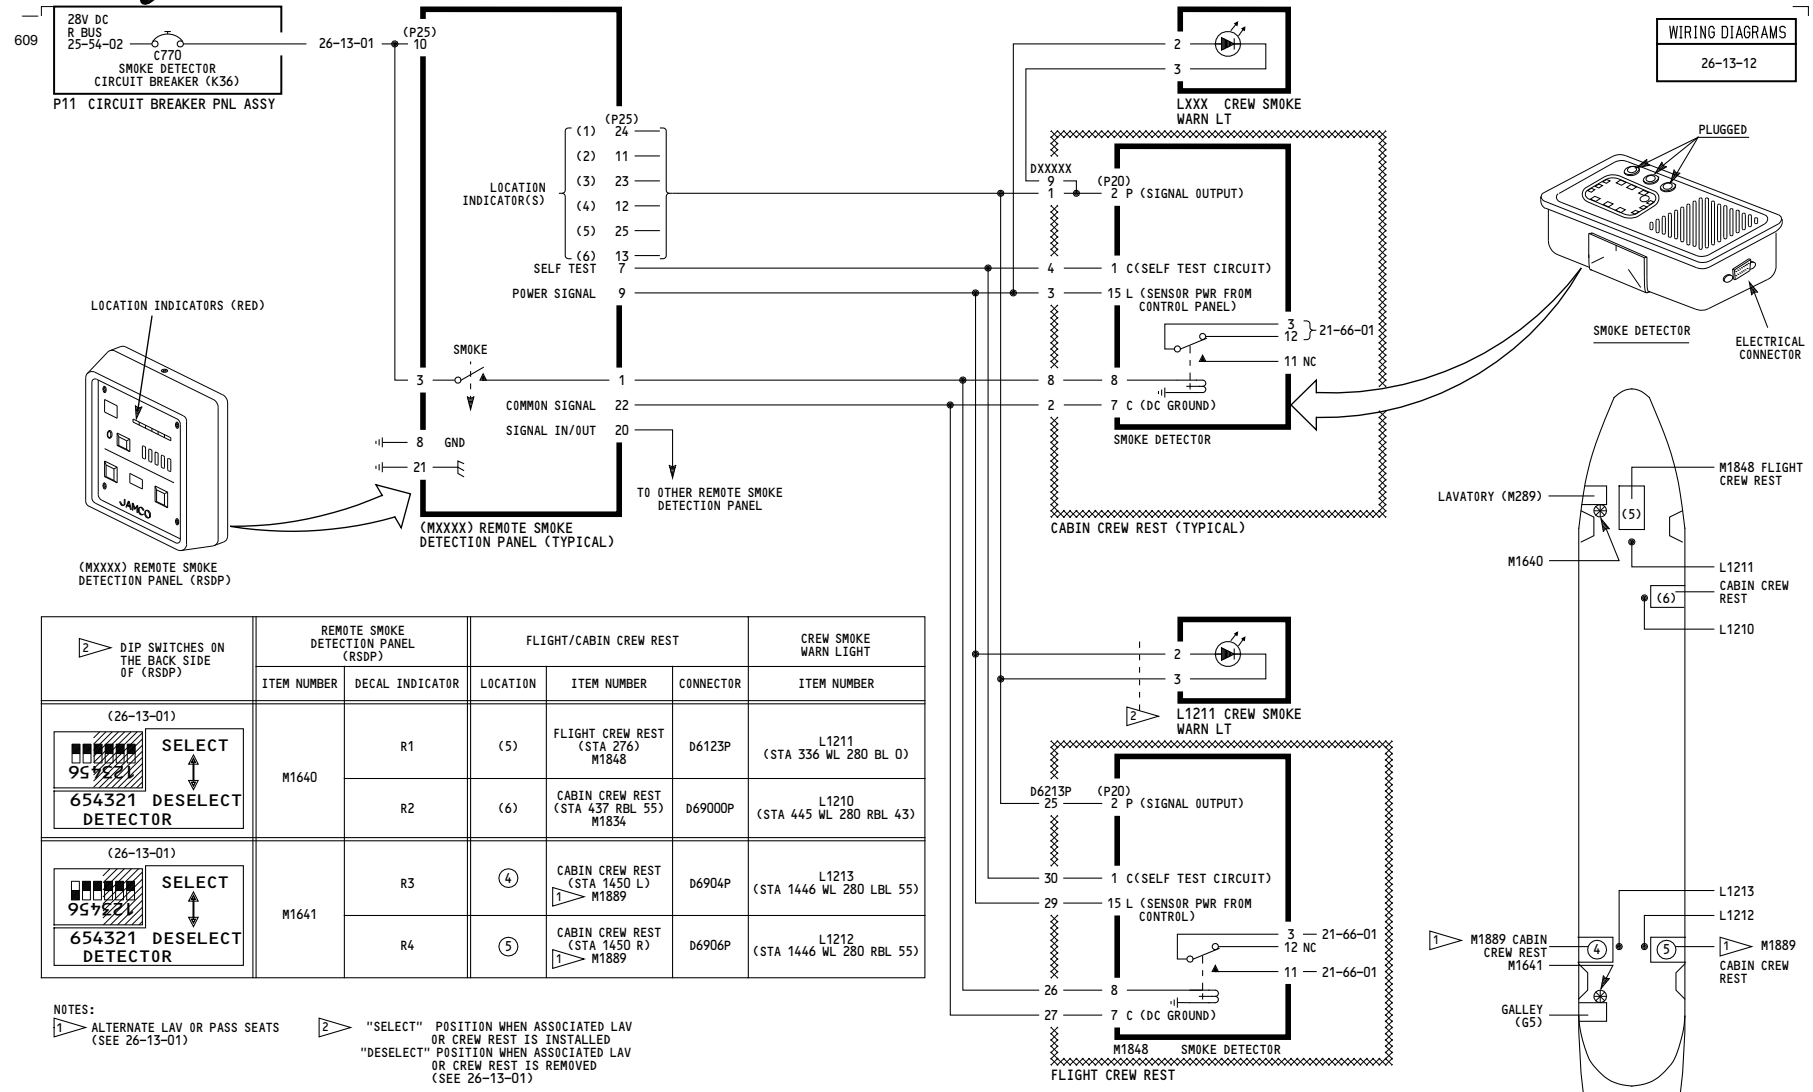


THIS PAGE INTENTIONALLY LEFT BLANK





**26-15-01**

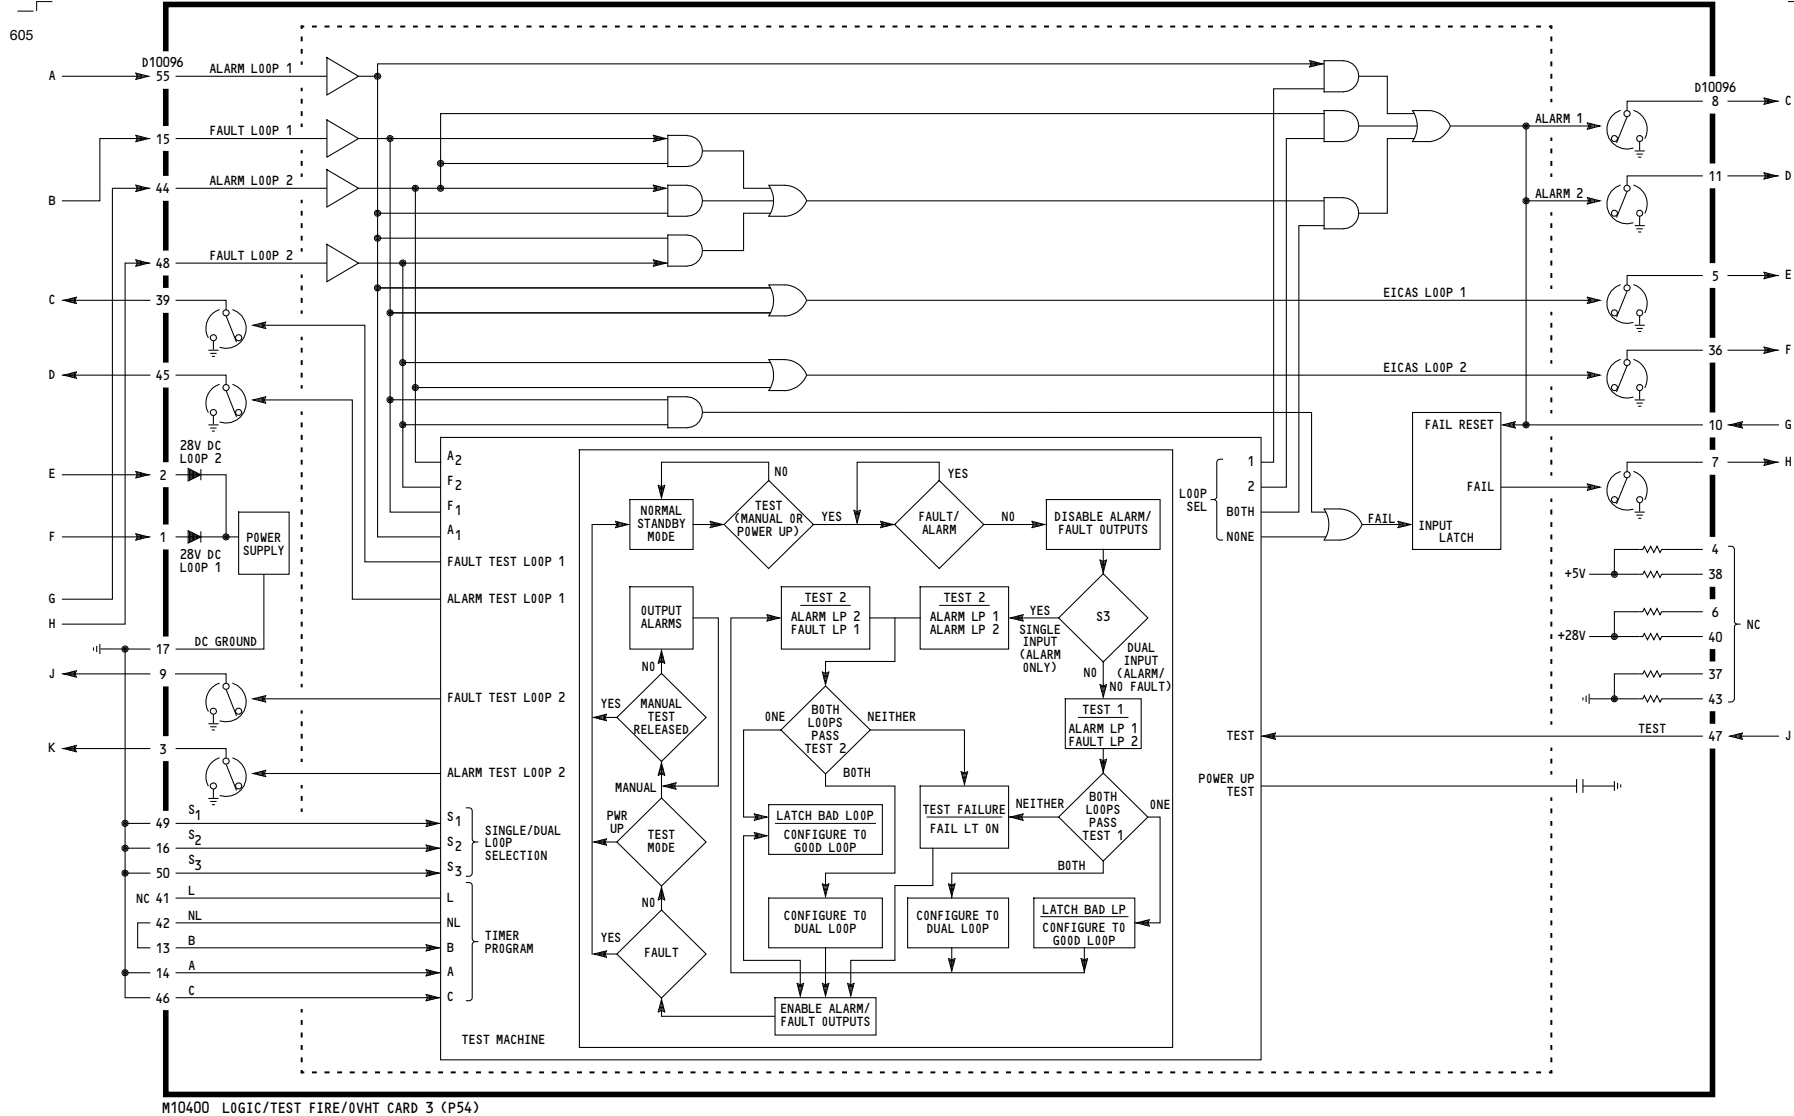

M10400 LOGIC/TEST FIRE/0VHT CARD 3 (P54)


150-199

## FIRE DETECTION- AUXILIARY POWER UNIT

D280T232

**26-15-01**

 Page 101  
Sheet 2  
Jan 21/2005




THIS PAGE INTENTIONALLY LEFT BLANK



**26-15-01**

606

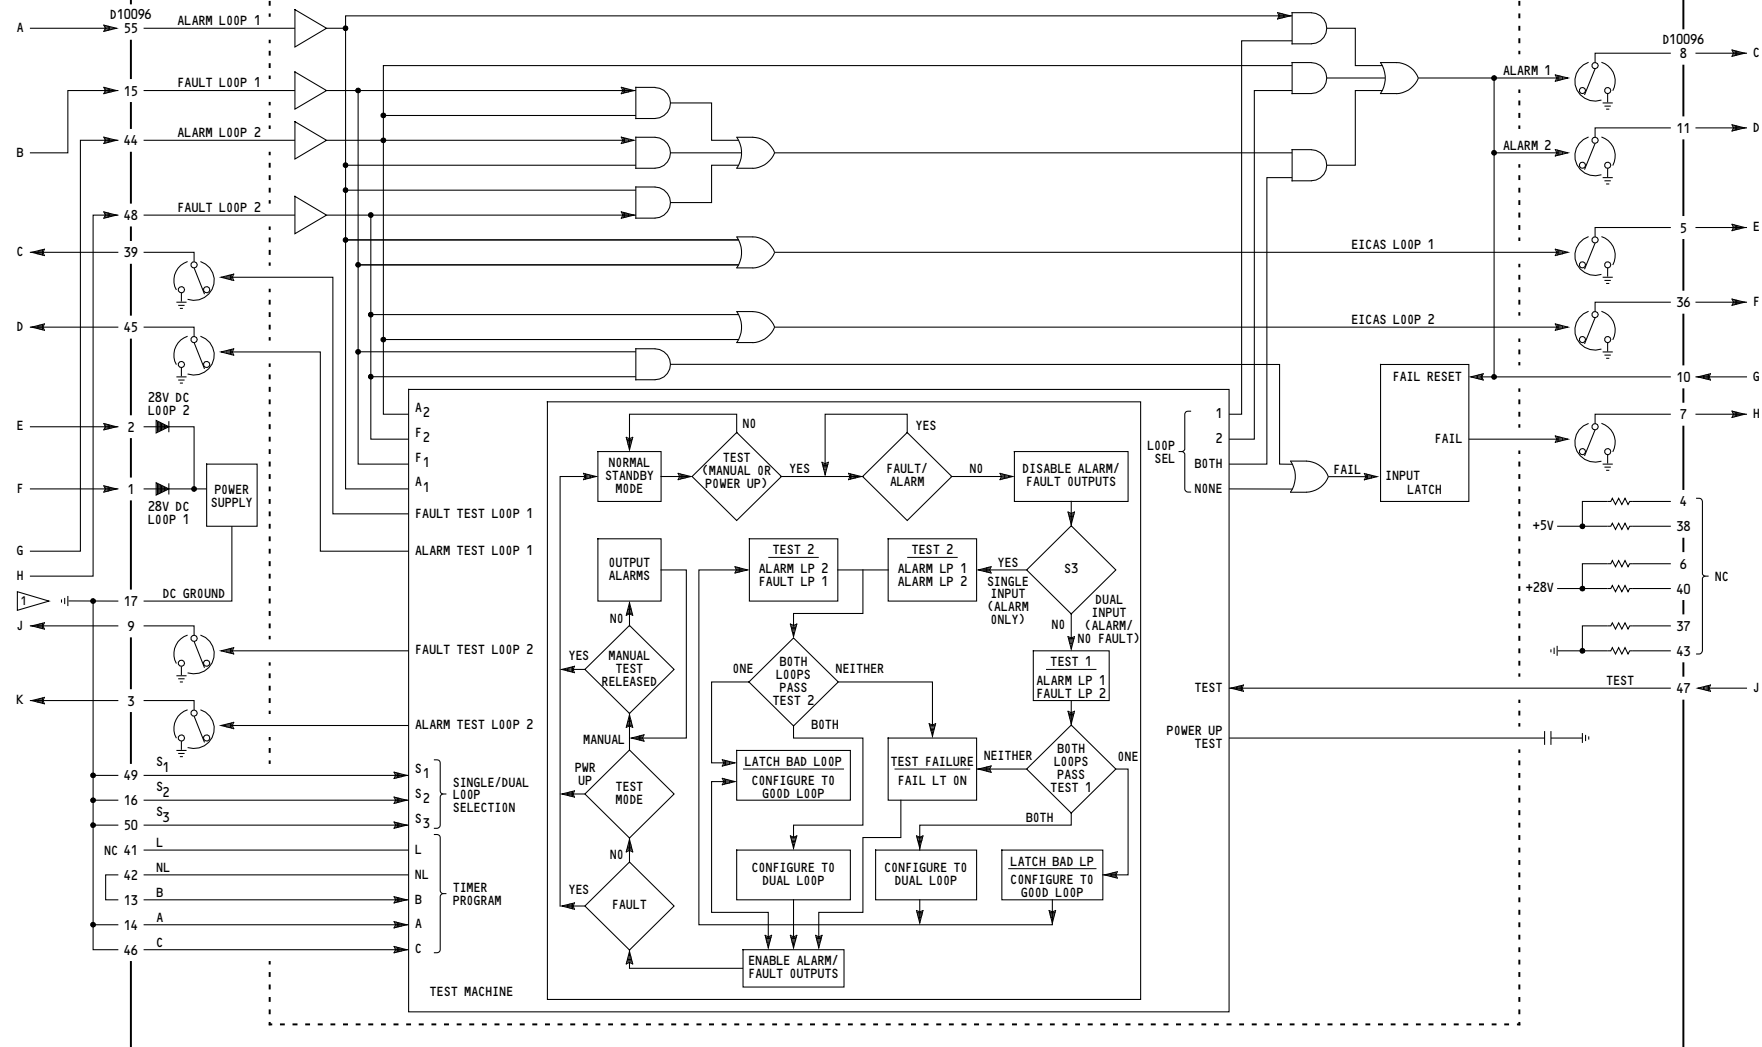

M10400 LOGIC/TEST FIRE/0VHT CARD 3 (P54)

275-278

## FIRE DETECTION- AUXILIARY POWER UNIT

D280T232

NOTES:


1 COMMON GROUND NOT INSTALLED VA301-VA308 (101-108)

**26-15-01**

Page 102  
Sheet 2  
Jan 21/2005

606

WIRING DIAGRAMS  
26-15-11  
26-15-12

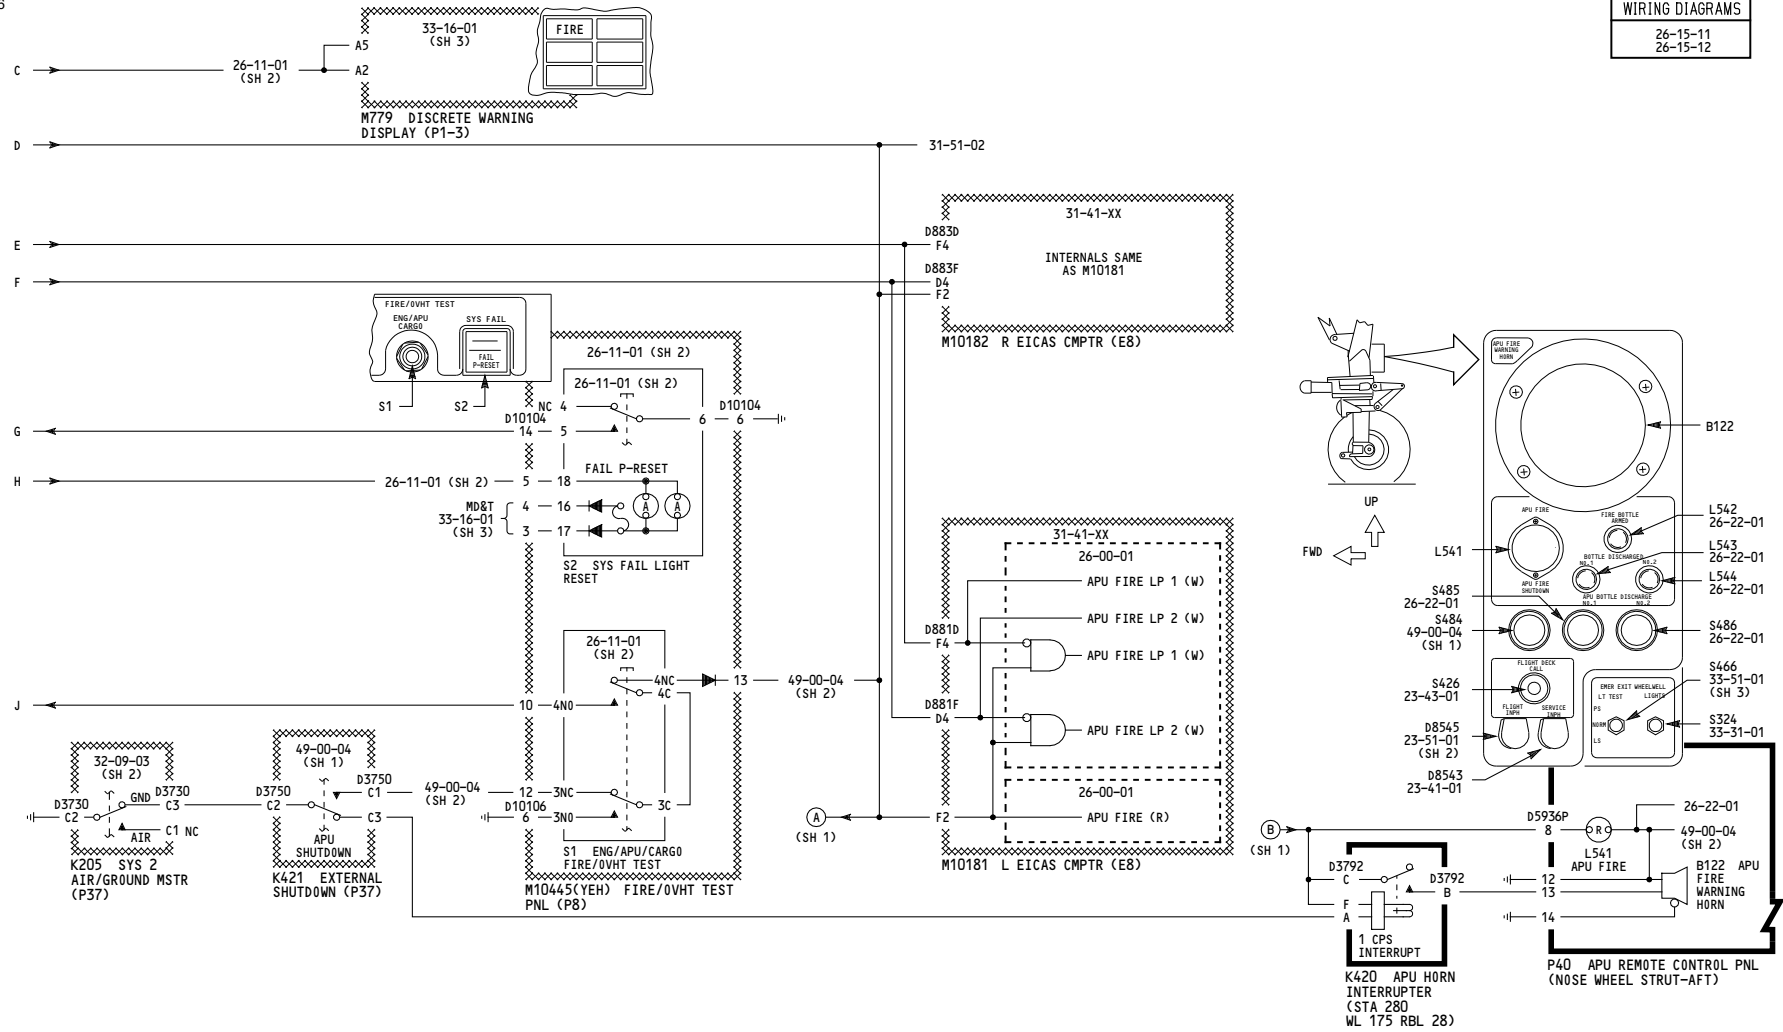

275-278

FIRE DETECTION-AUXILIARY POWER UNIT

D280T232

26-15-01

Page 102  
Sheet 3  
Jan 21/2005


THIS PAGE INTENTIONALLY LEFT BLANK





**26-15-01**

605

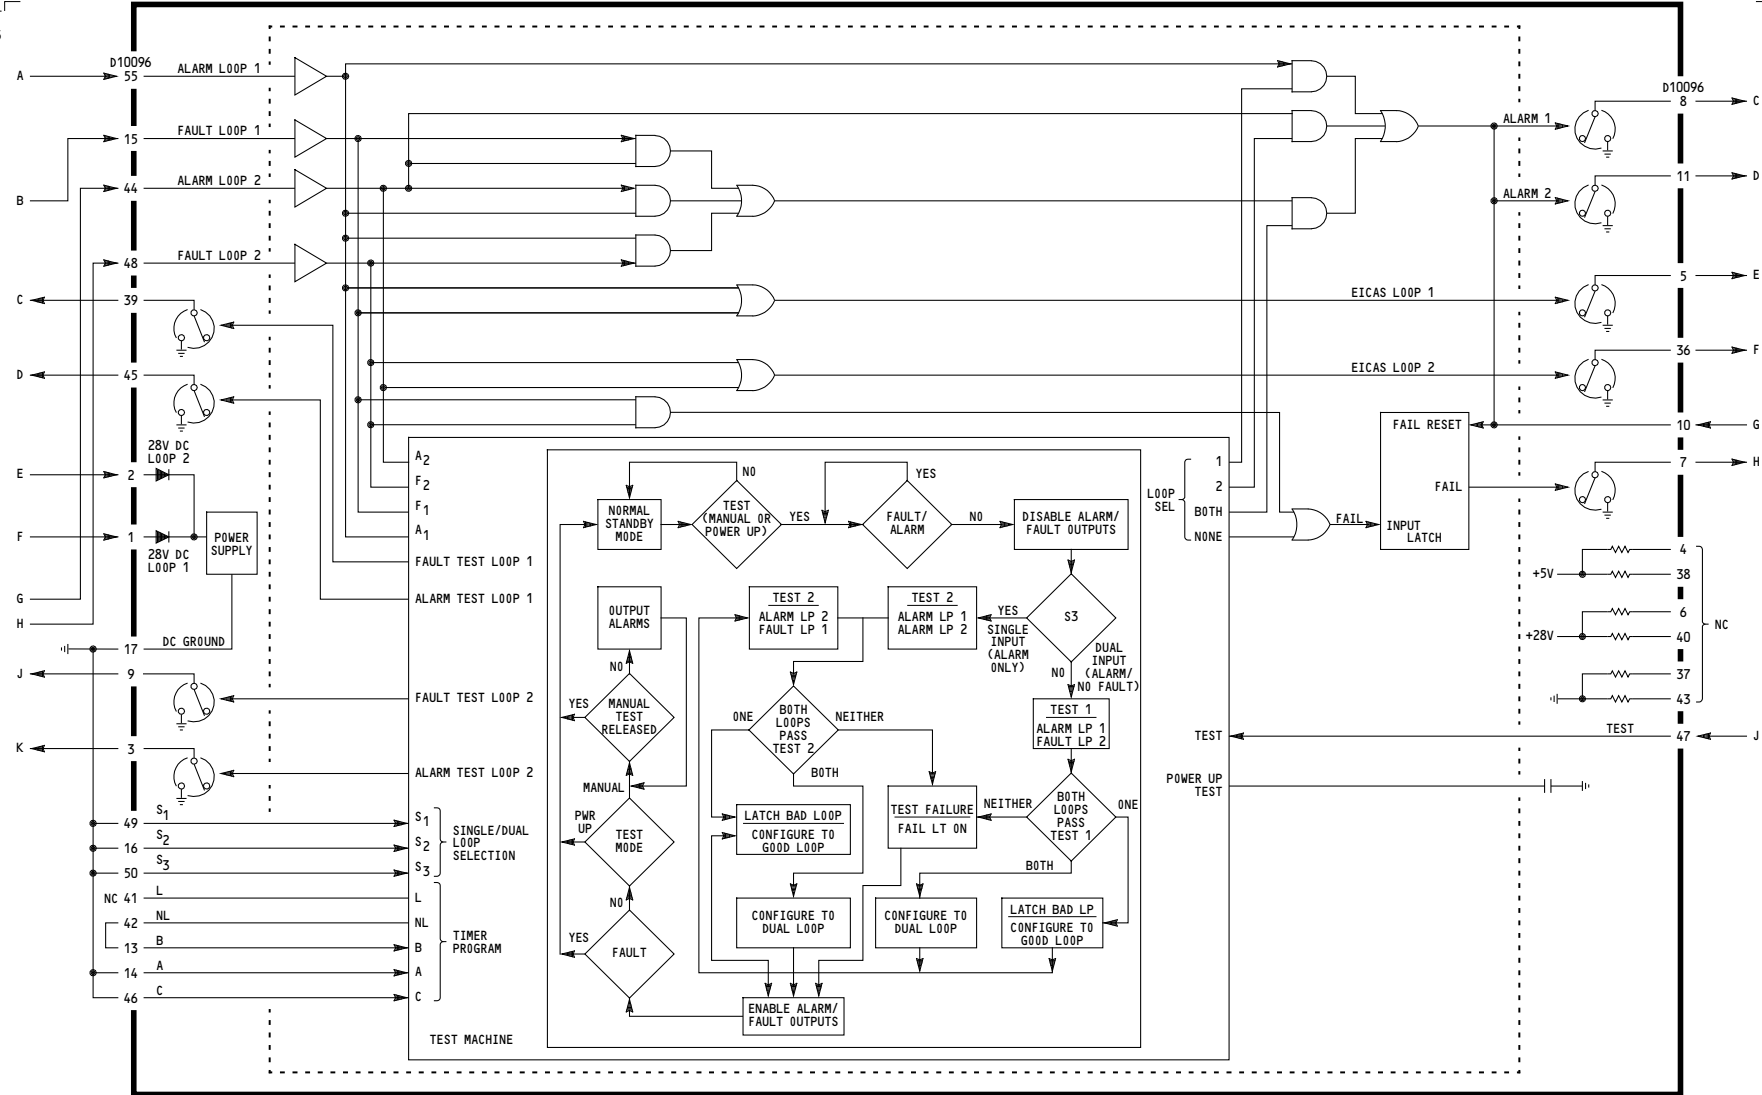

M10400 LOGIC/TEST FIRE/OVHT CARD 3 (P54)

280-299

**FIRE DETECTION-AUXILIARY POWER UNIT**


D280T232

**26-15-01**

Page 103  
Sheet 2  
Jan 21/2005

606

WIRING DIAGRAMS  
26-15-11  
26-15-12

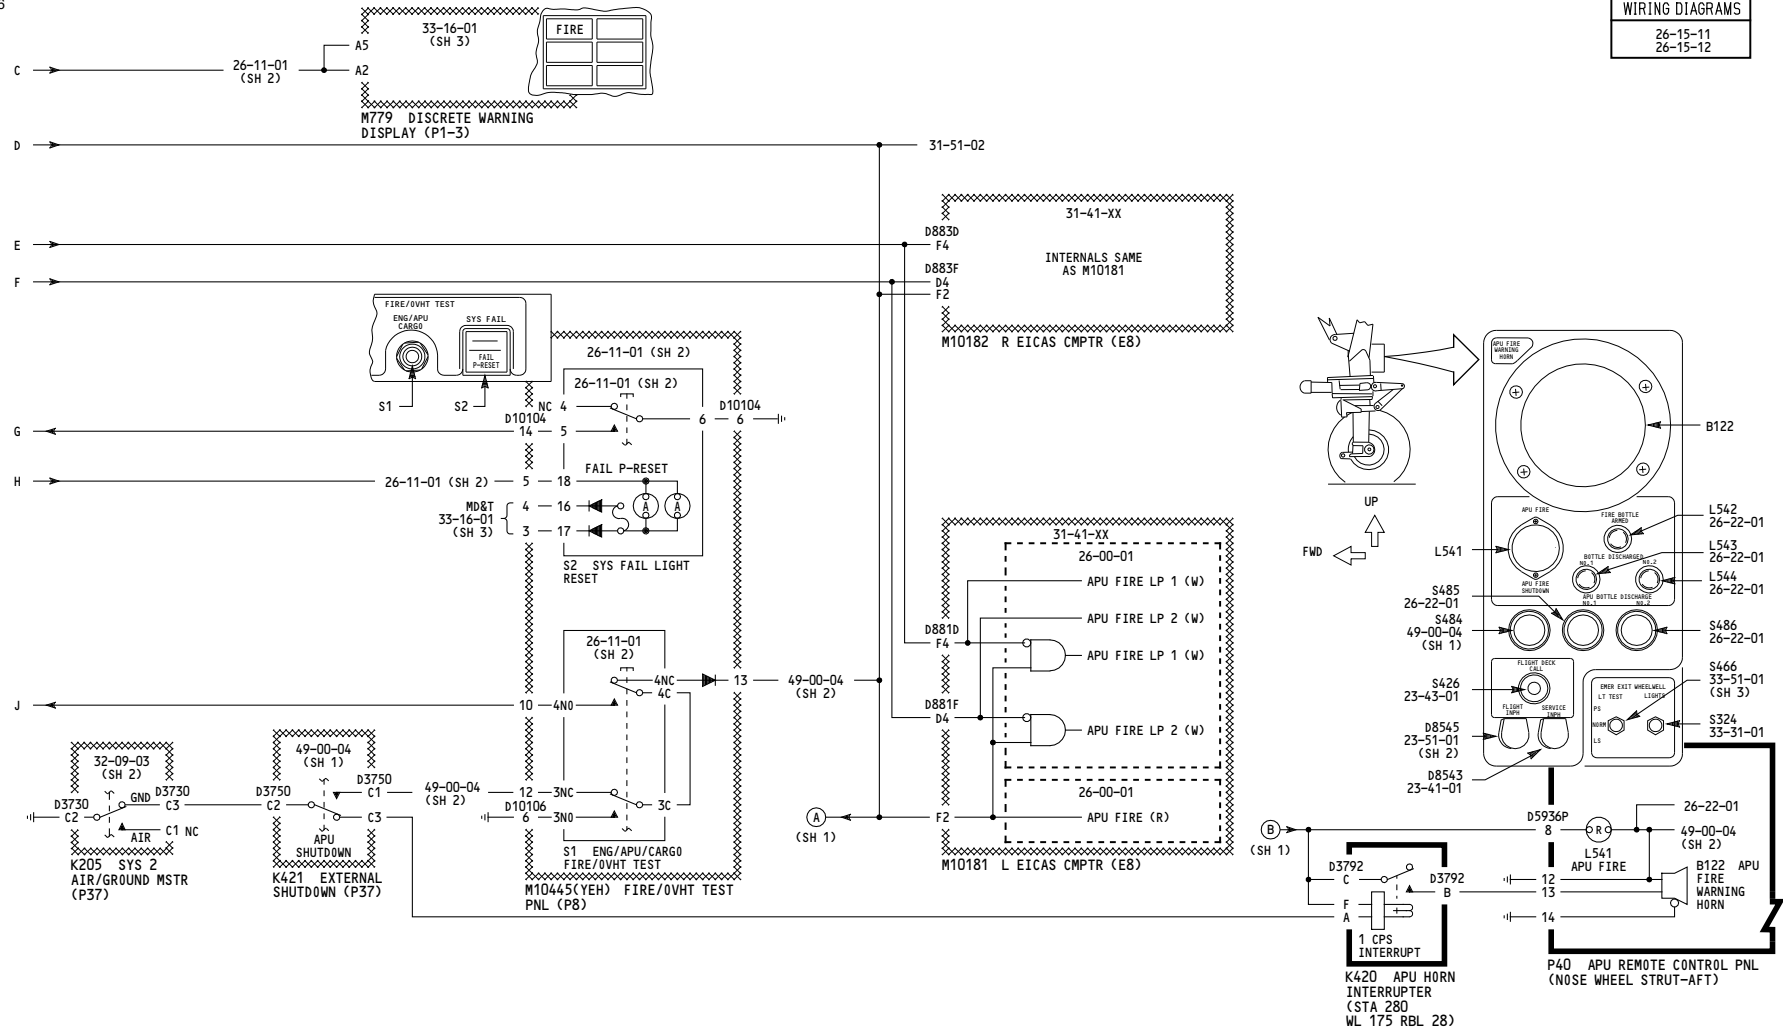


280-299	<b>FIRE DETECTION-AUXILIARY POWER UNIT</b>
	D280T232

26-15-01

Page 103  
Sheet 3  
Jan 21/2005

THIS PAGE INTENTIONALLY LEFT BLANK

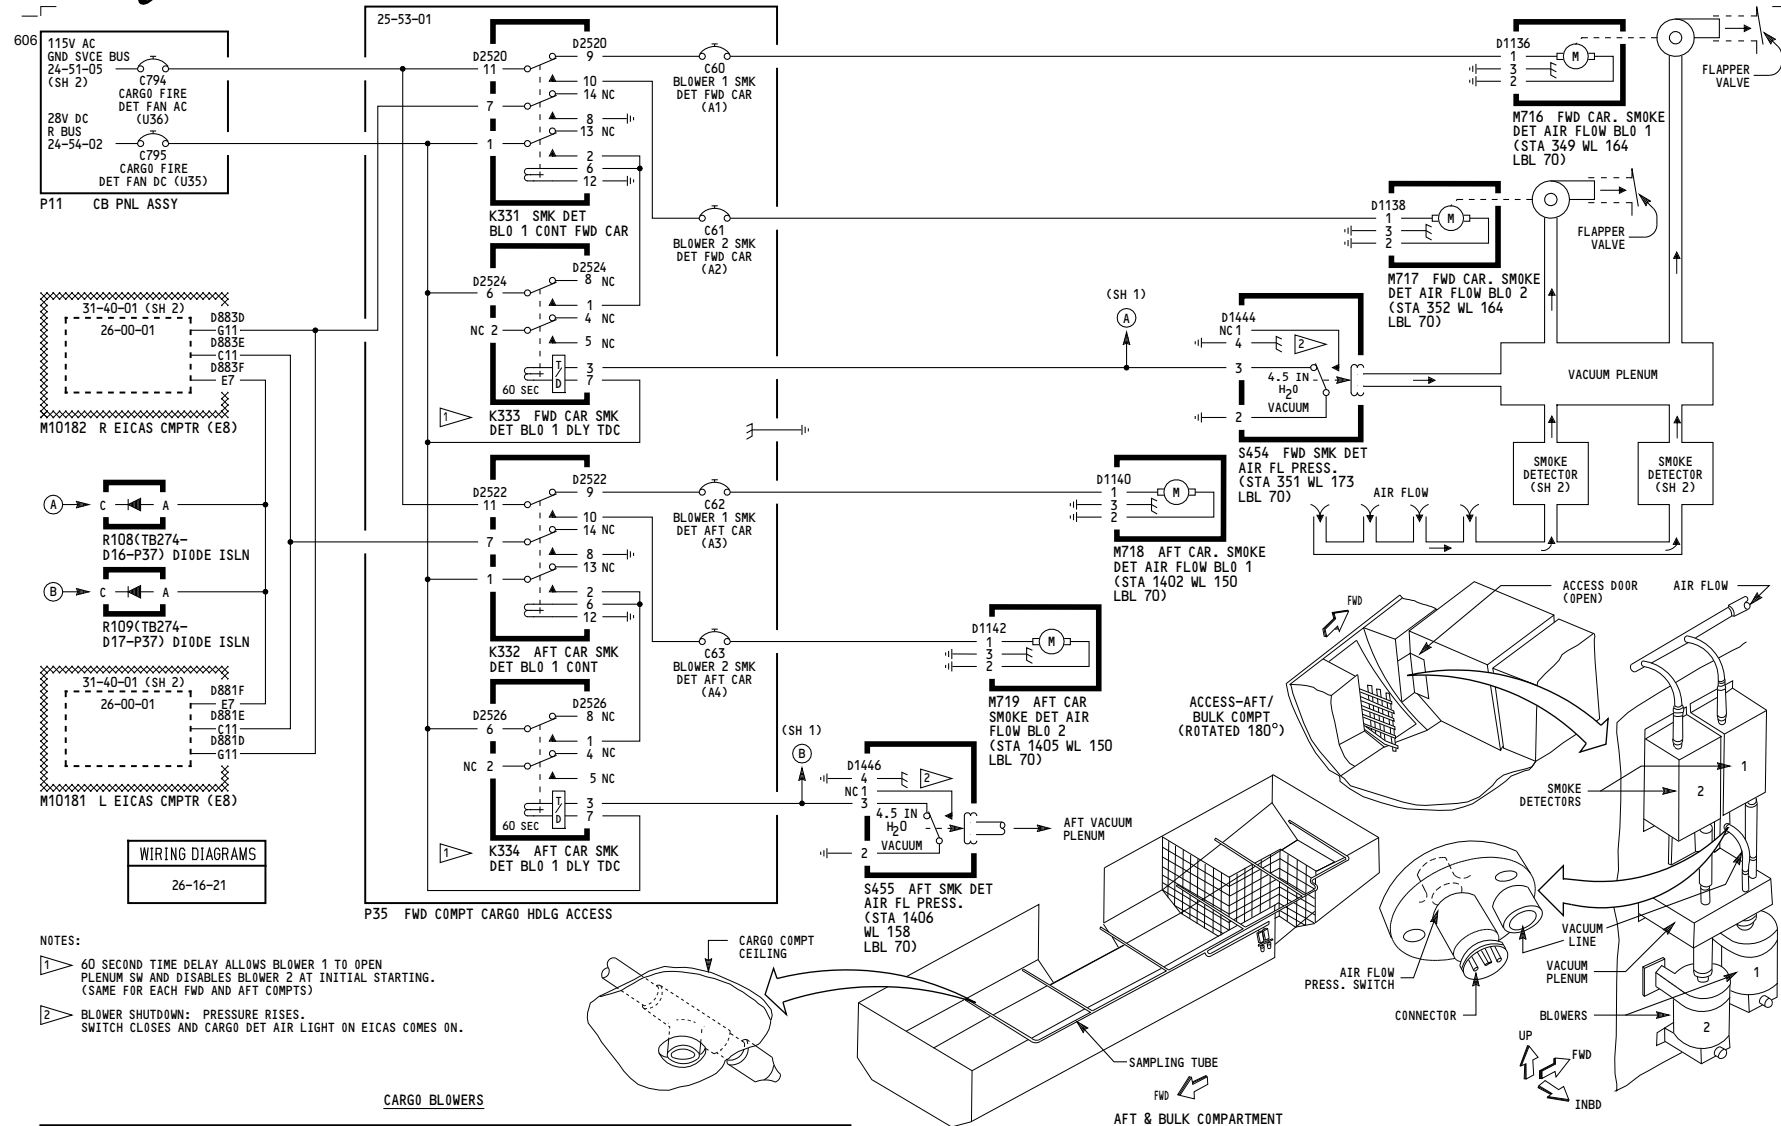

050-099, 150-155, 162-165


**SMOKE DETECTION-  
LOWER CARGO COMPARTMENT**

D280T232

**26-16-01**

Page 101  
Sheet 1  
Jan 21/2005



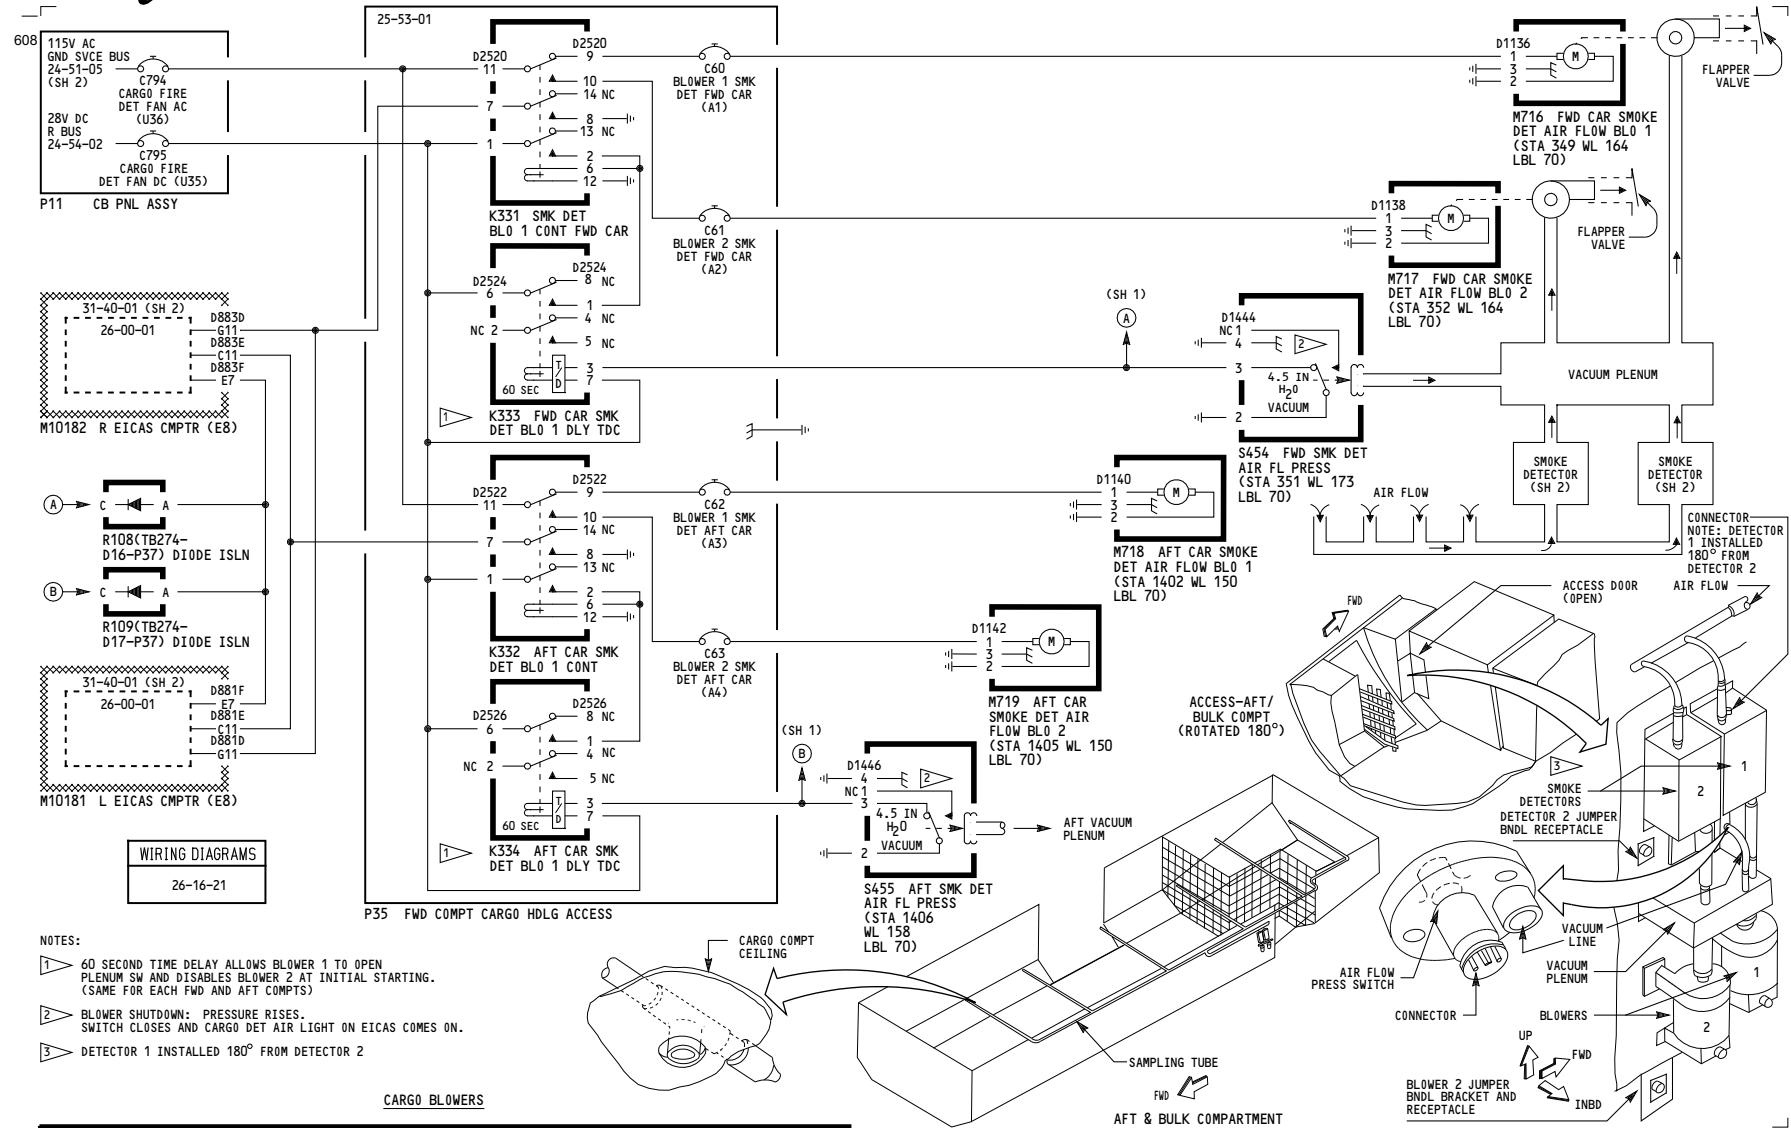


156-157, 166-199

**SMOKE DETECTION-  
LOWER CARGO COMPARTMENT**

D280T232

**26-16-01**

Page 102  
Sheet 1  
Jan 21/2005

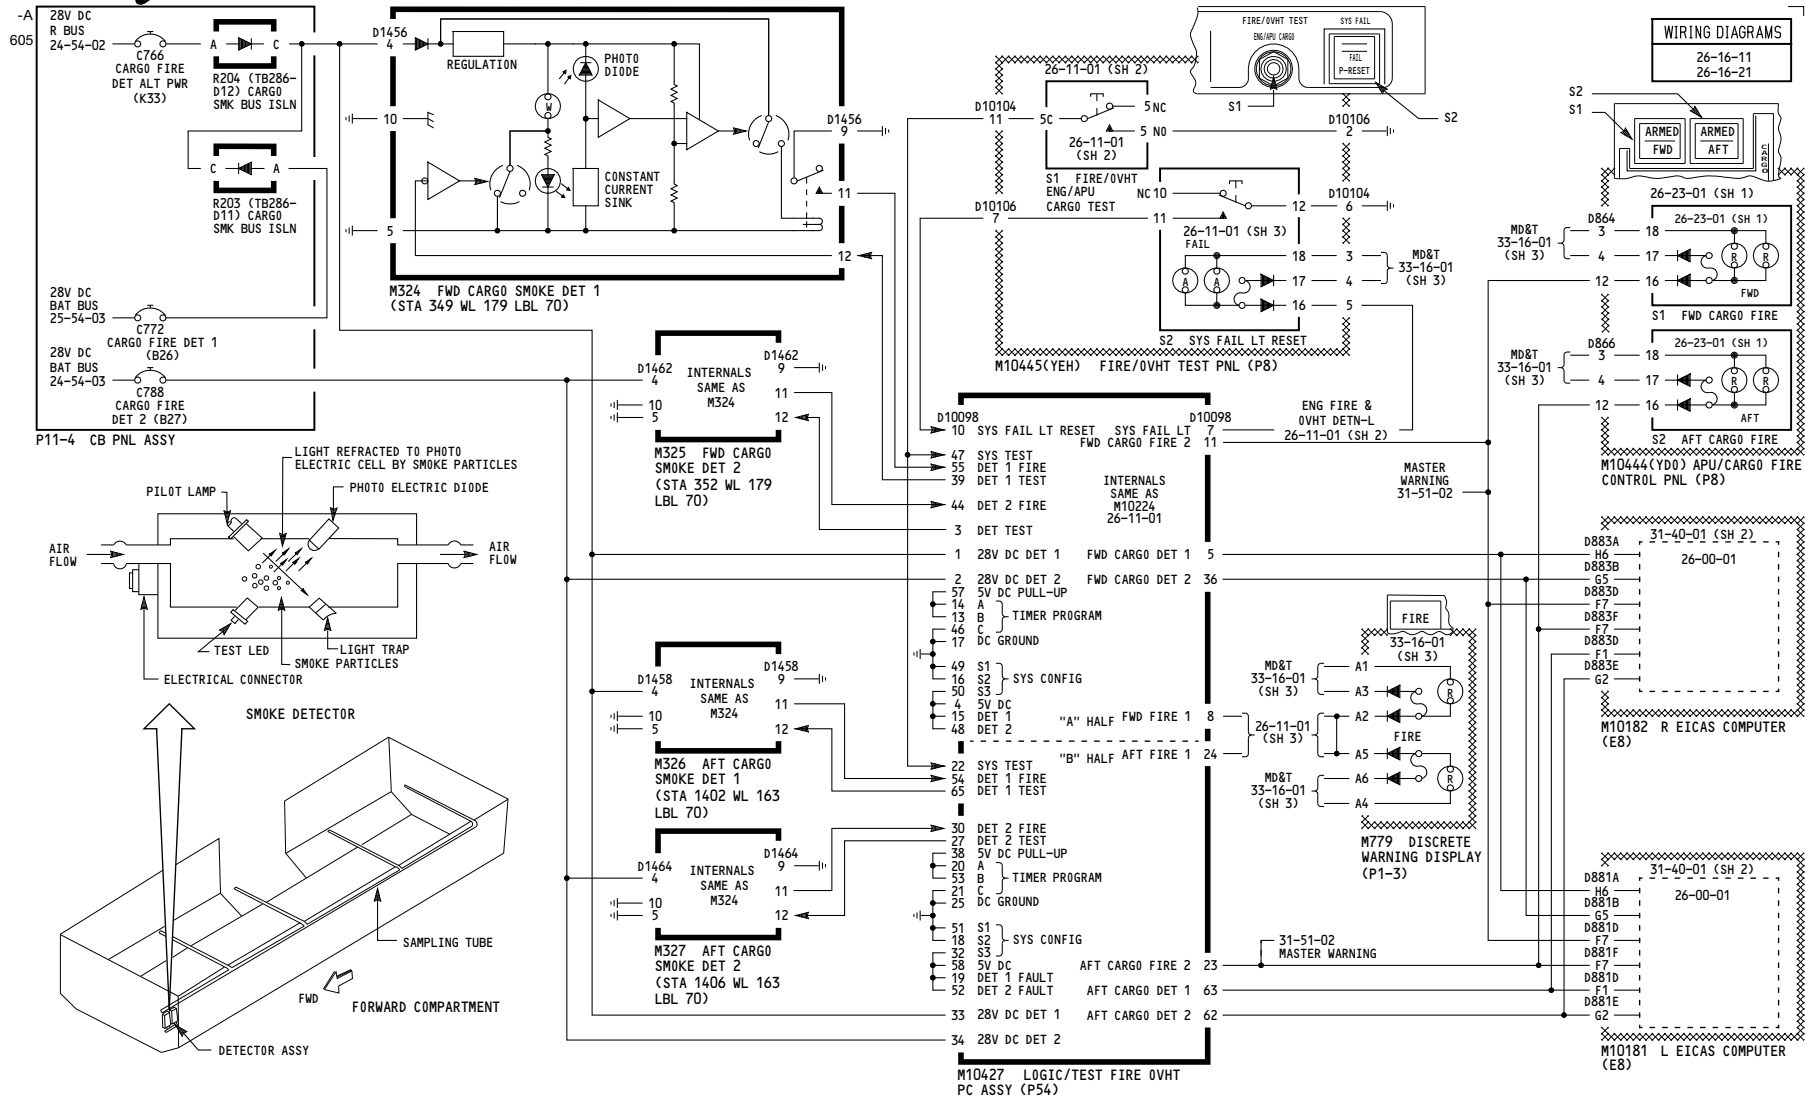

156-157, 166-199

**SMOKE DETECTION-  
LOWER CARGO COMPARTMENT**

D280T232

**26-16-01**

Page 102  
Sheet 2  
Jan 21/2005





28V DC  
L BUS  
SECT 1  
24-54-01

C4126  
ENG START  
LD SHED  
RESET (T2)


P11 CB PNL



**SMOKE DETECTION-  
LOWER CARGO COMPARTMENT**

**26-16-01**

BOEING PROPRIETARY - Copyright © - Unpublished Work - See title page for details.

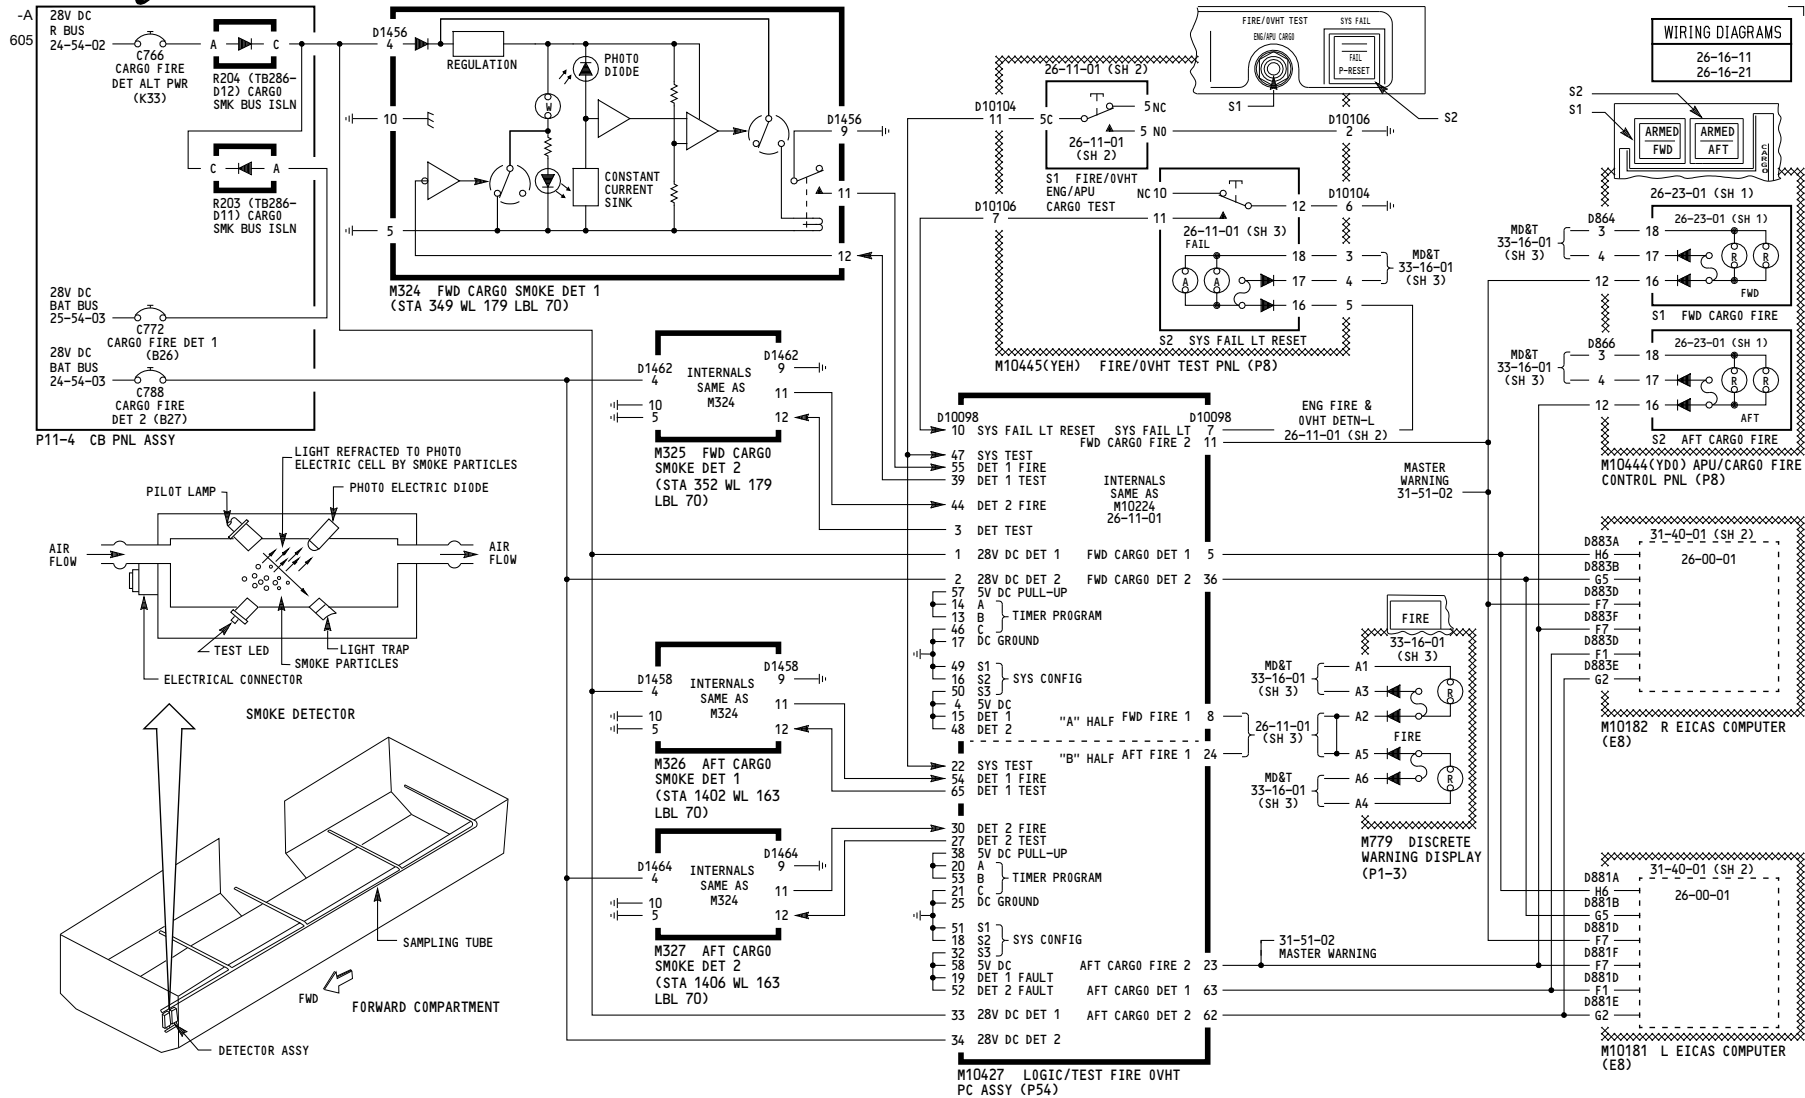


275-276

**SMOKE DETECTION-  
LOWER CARGO COMPARTMENT**

D280T232

**26-16-01**

Page 103  
Sheet 2  
Jan 21/2005

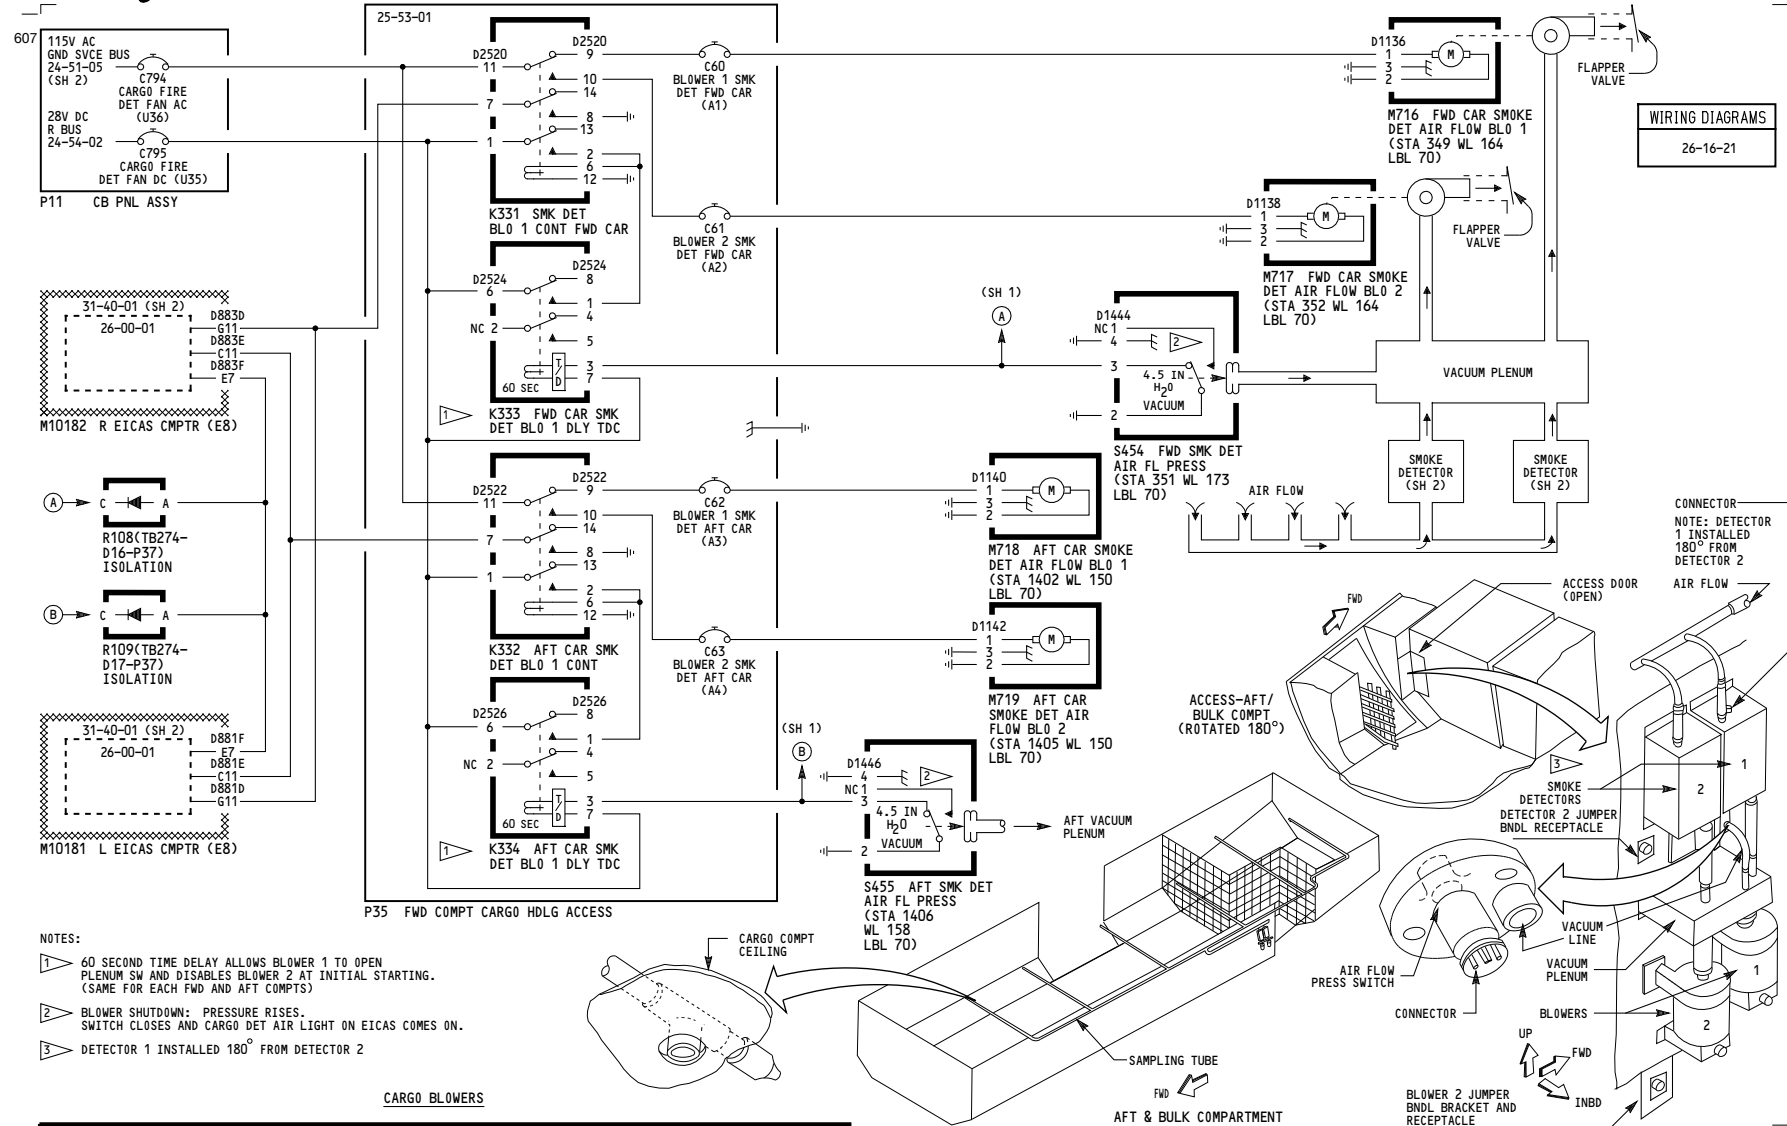


26-16-01



**26-16-01**

-A  
605

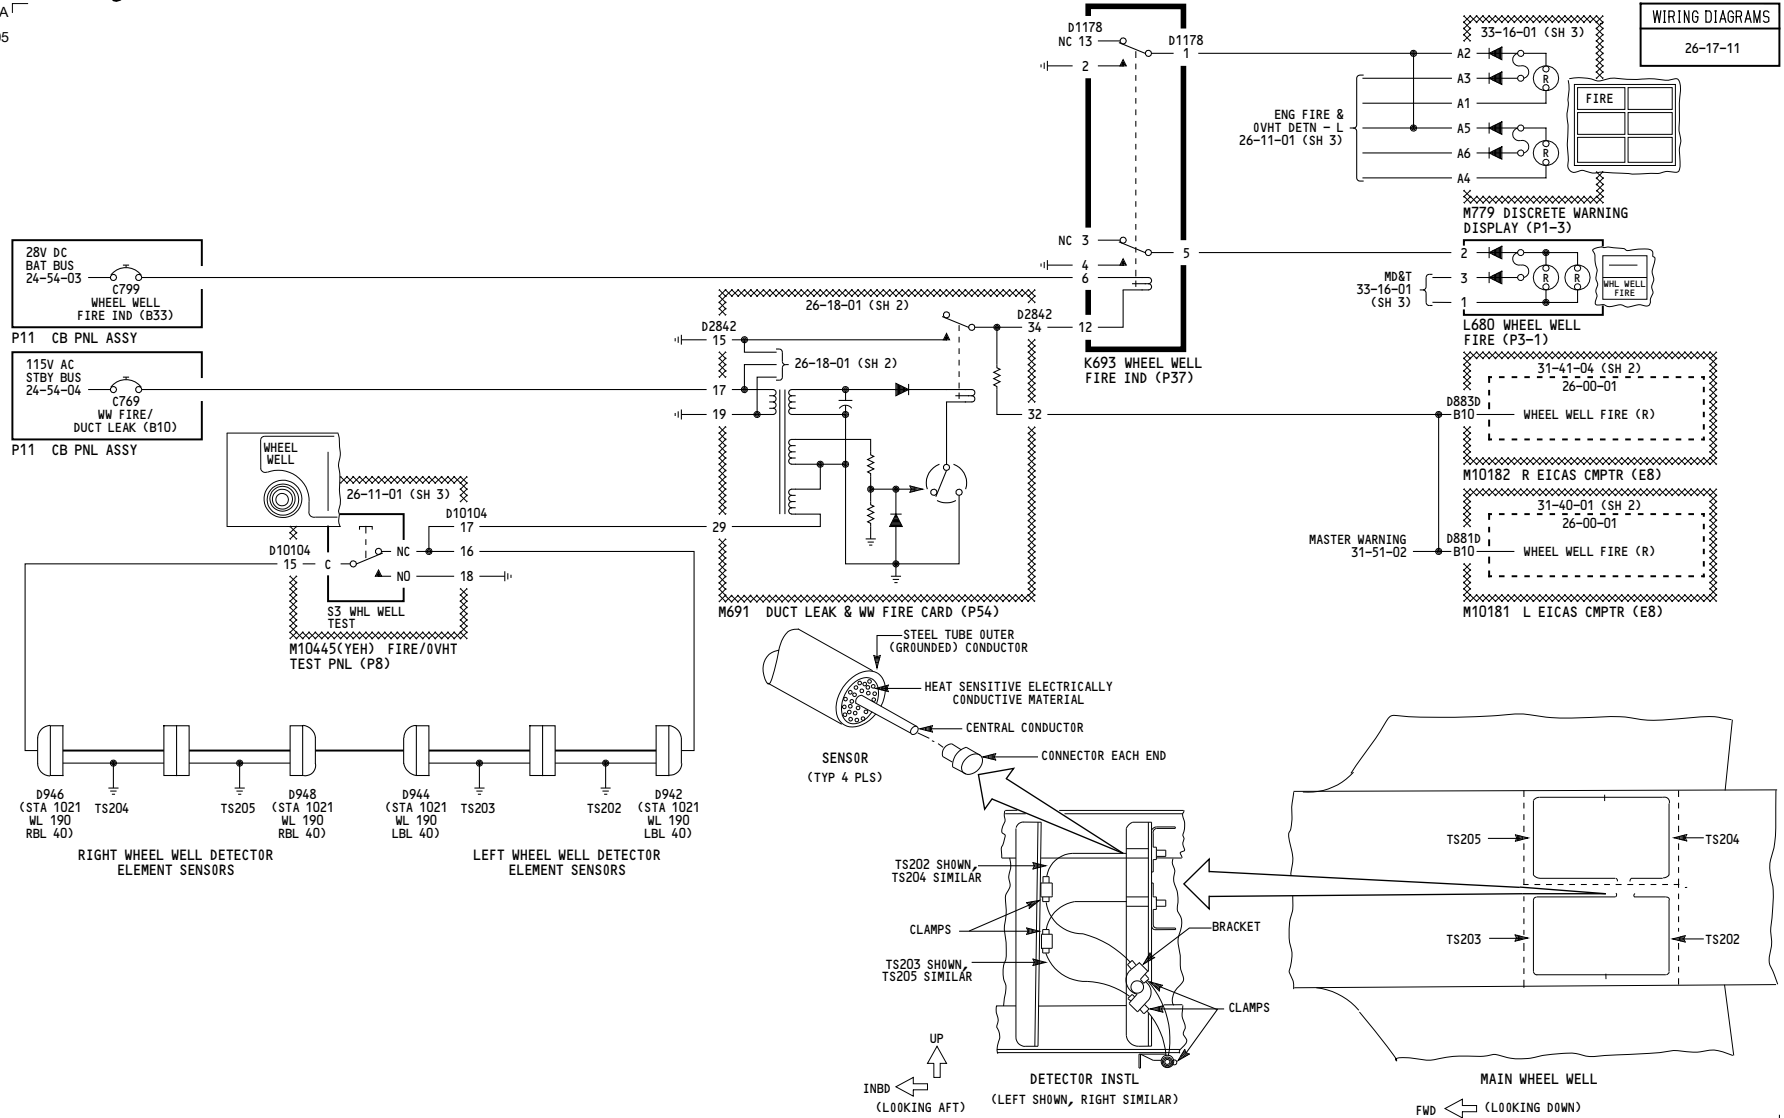

050-099

**FIRE DETECTION-  
WHEEL WELL**


D280T232

**26-17-01**

Page 101

Mar 07/2008

-A  
612

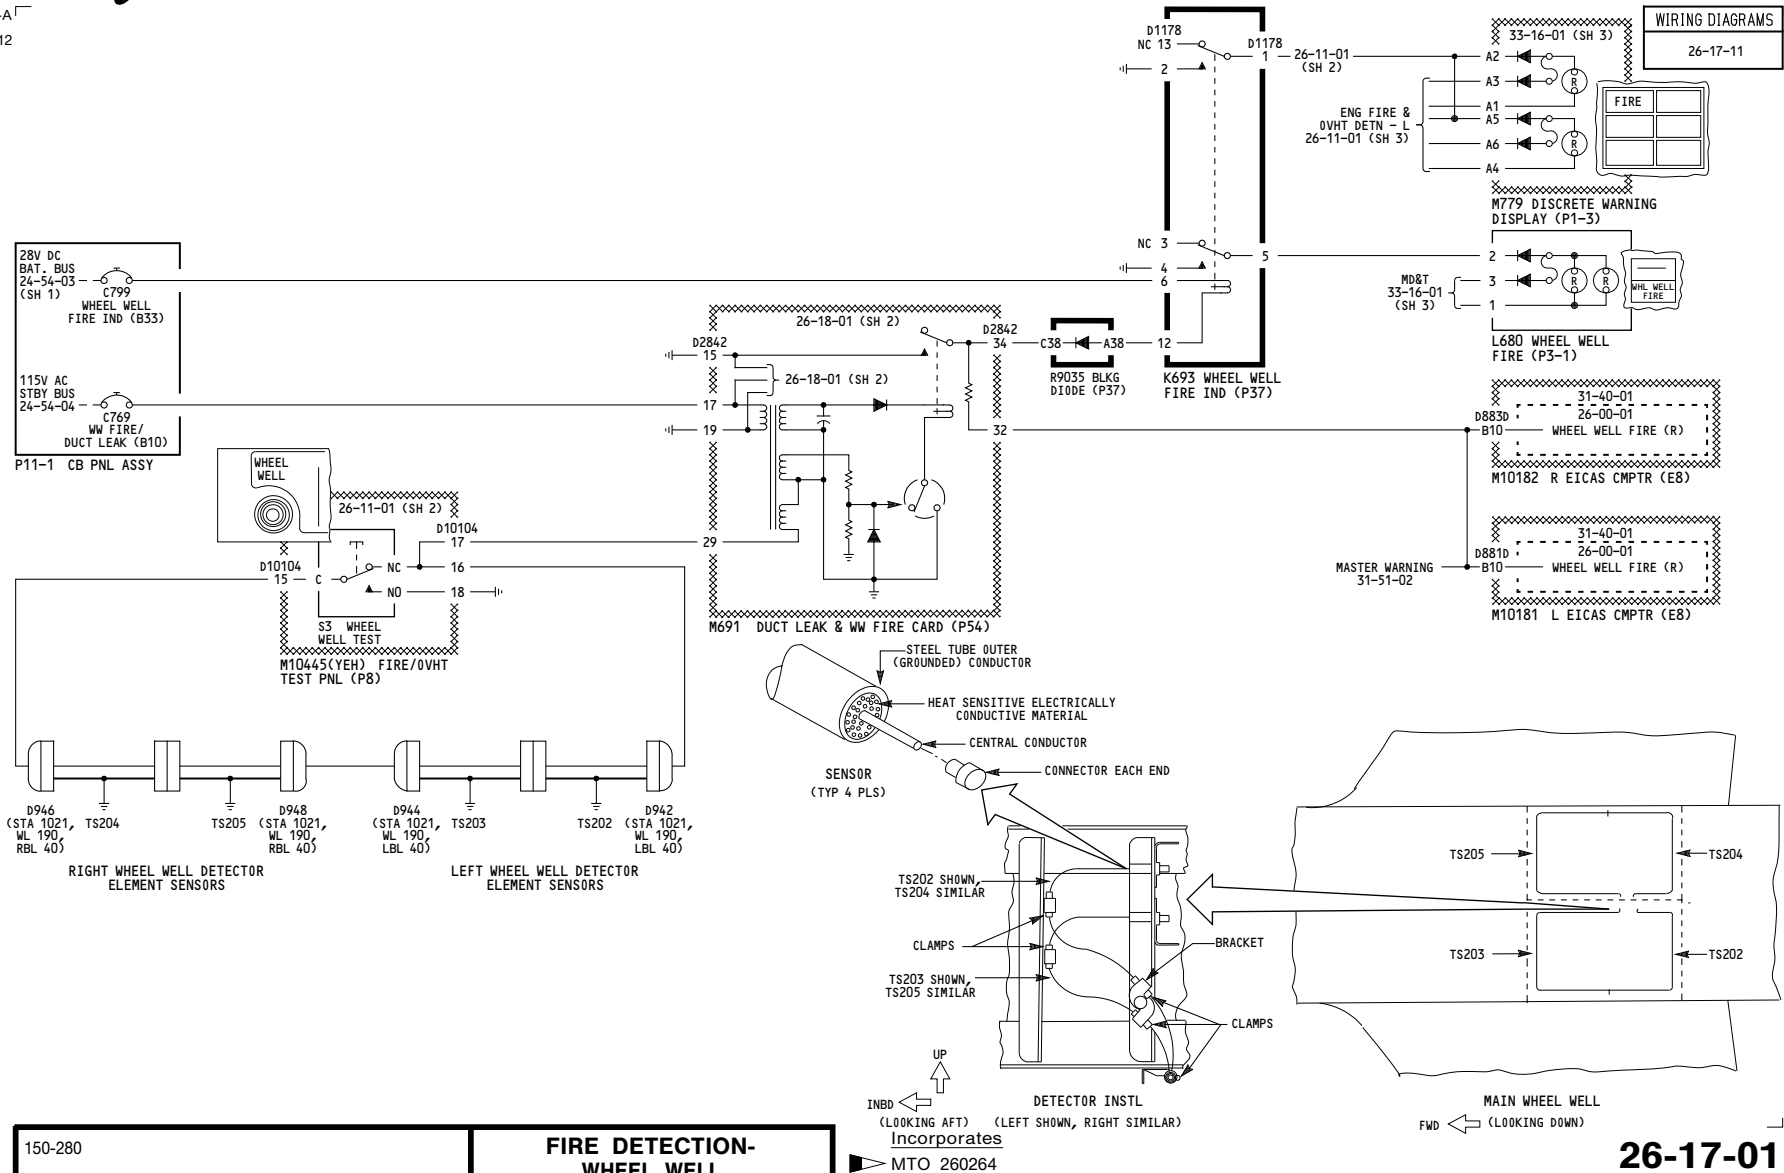

150-280

**FIRE DETECTION-  
WHEEL WELL**

D280T232

**26-17-01**


Page 102A

Mar 07/2008

607

**WIRING DIAGRAMS**

26-18-11  
26-18-12  
26-18-21  
26-18-22  
26-18-31

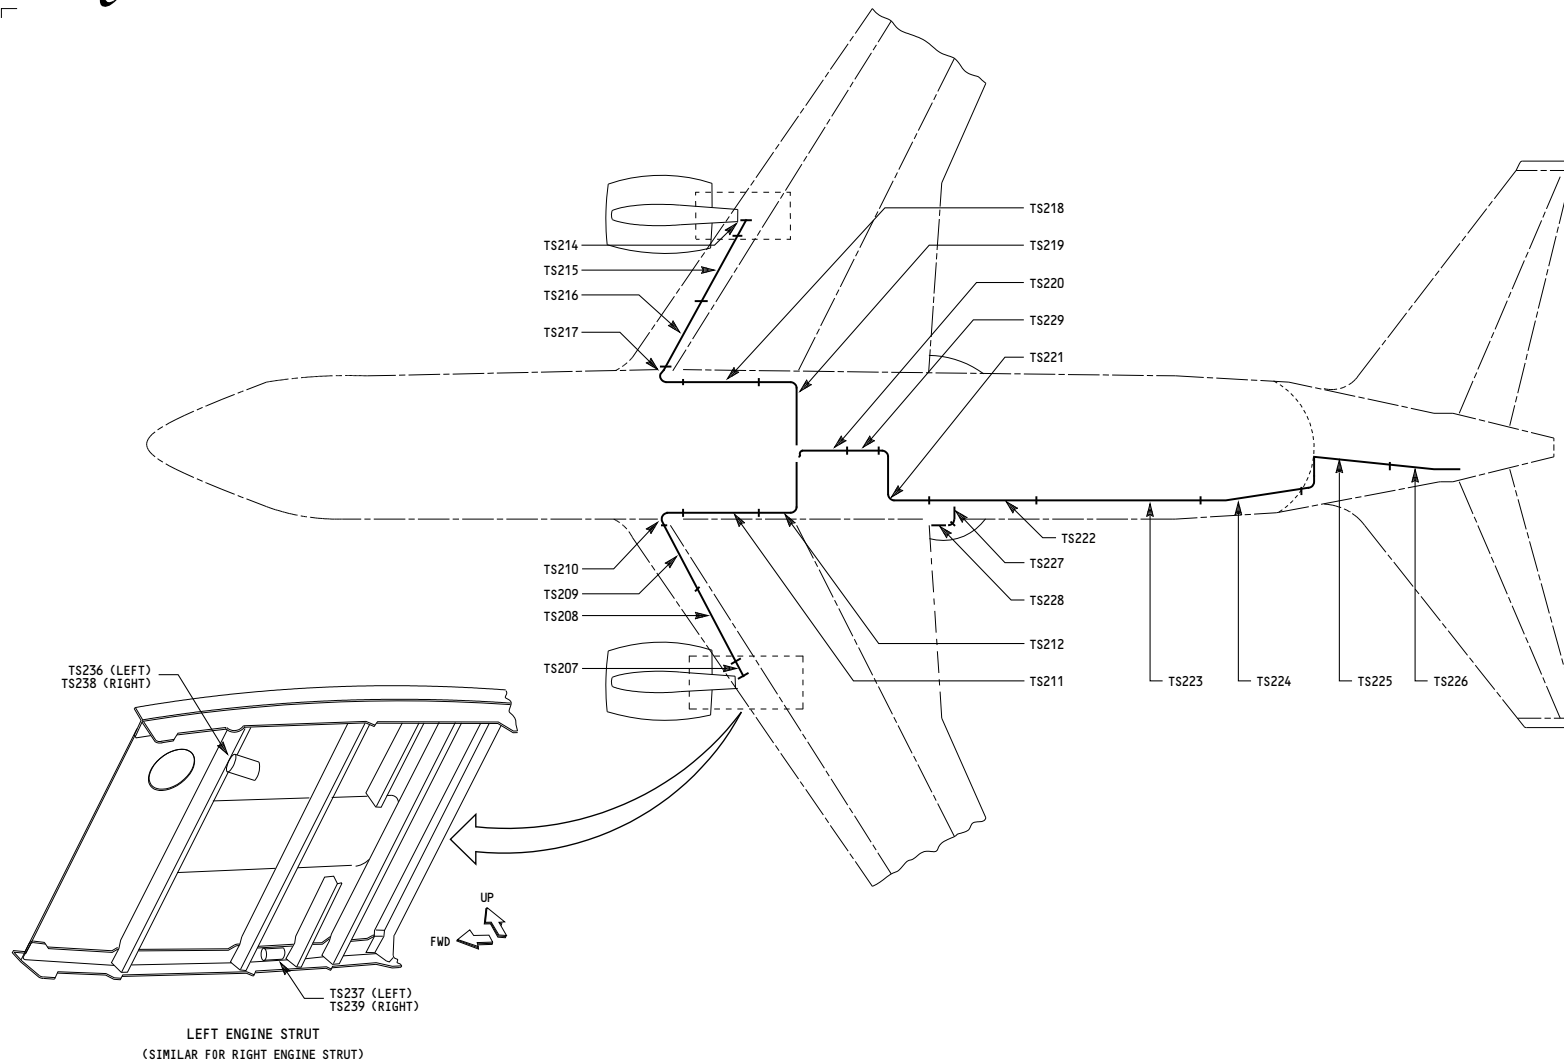


050-099

**DUCT LEAK DETECTION**

D280T232

**26-18-01**

Page 101  
Sheet 1  
Jan 21/2005

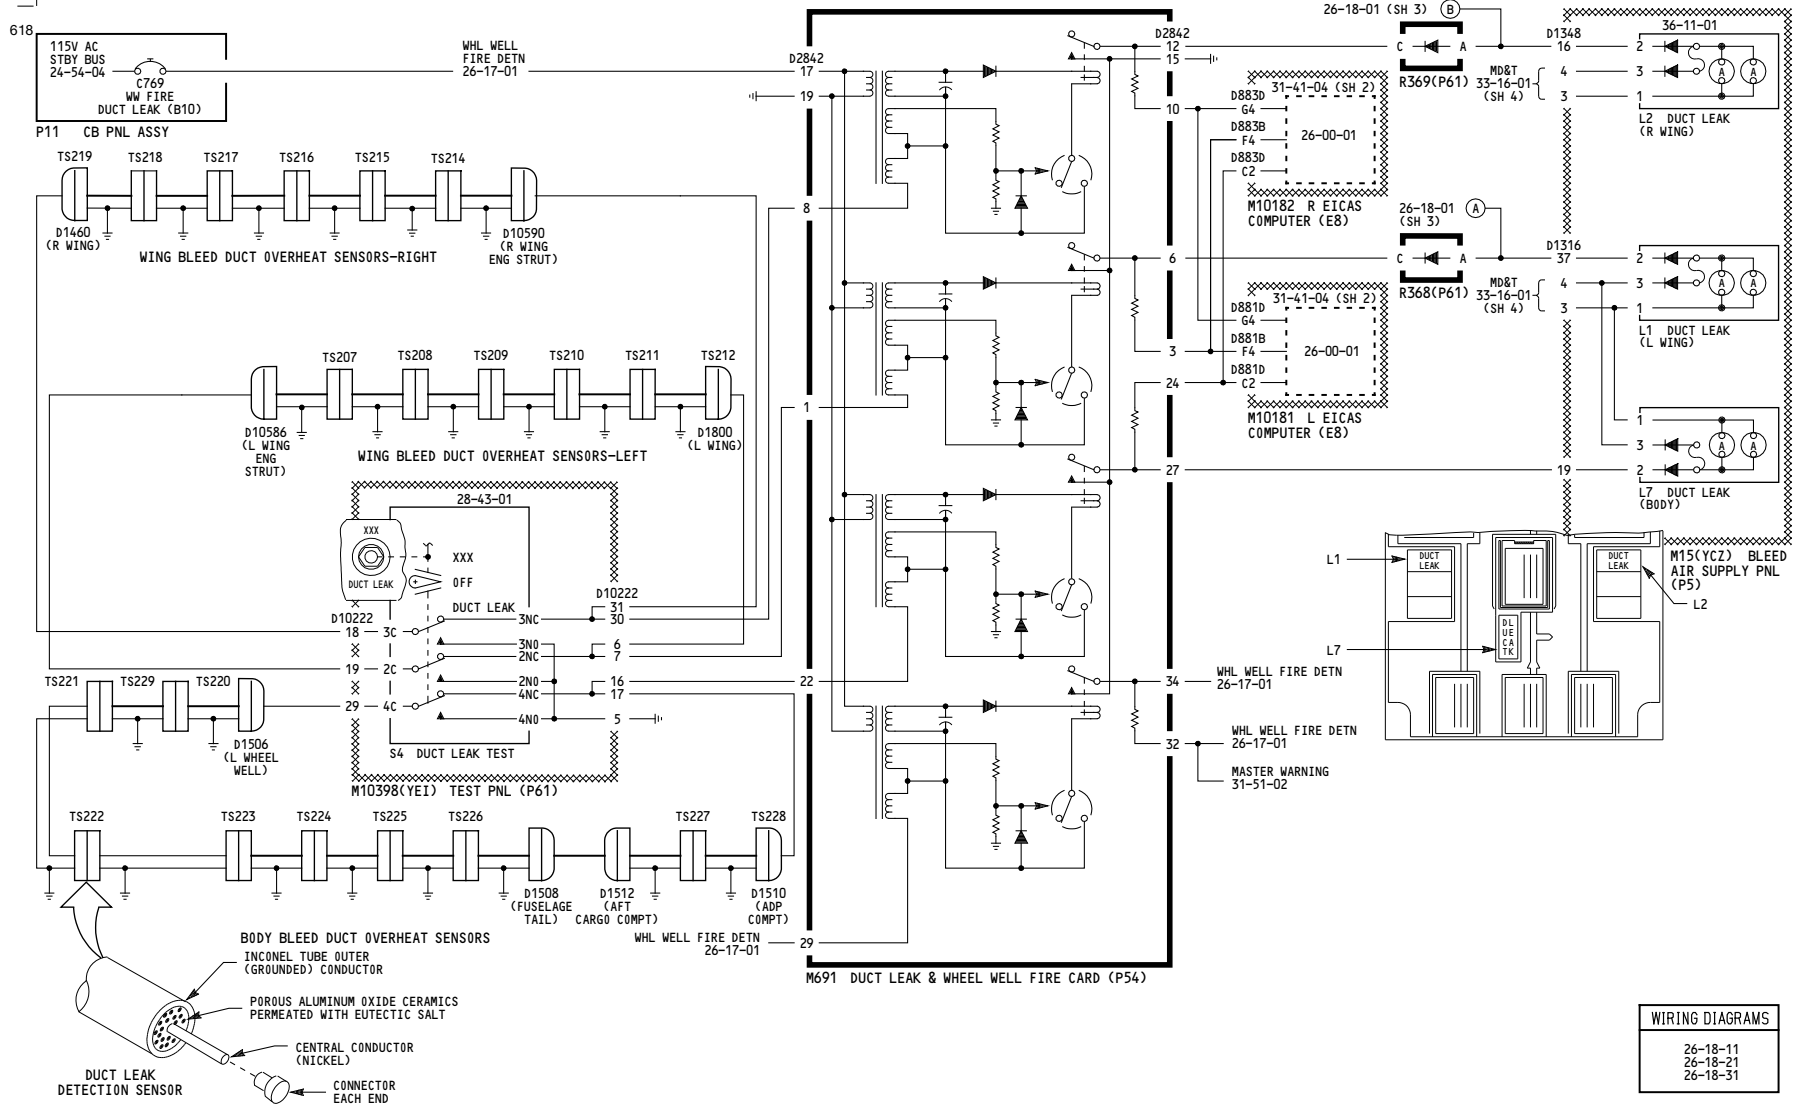

050-099


## DUCT LEAK DETECTION

D280T232

# 26-18-01

Page 101  
Sheet 2  
Jan 21/2005



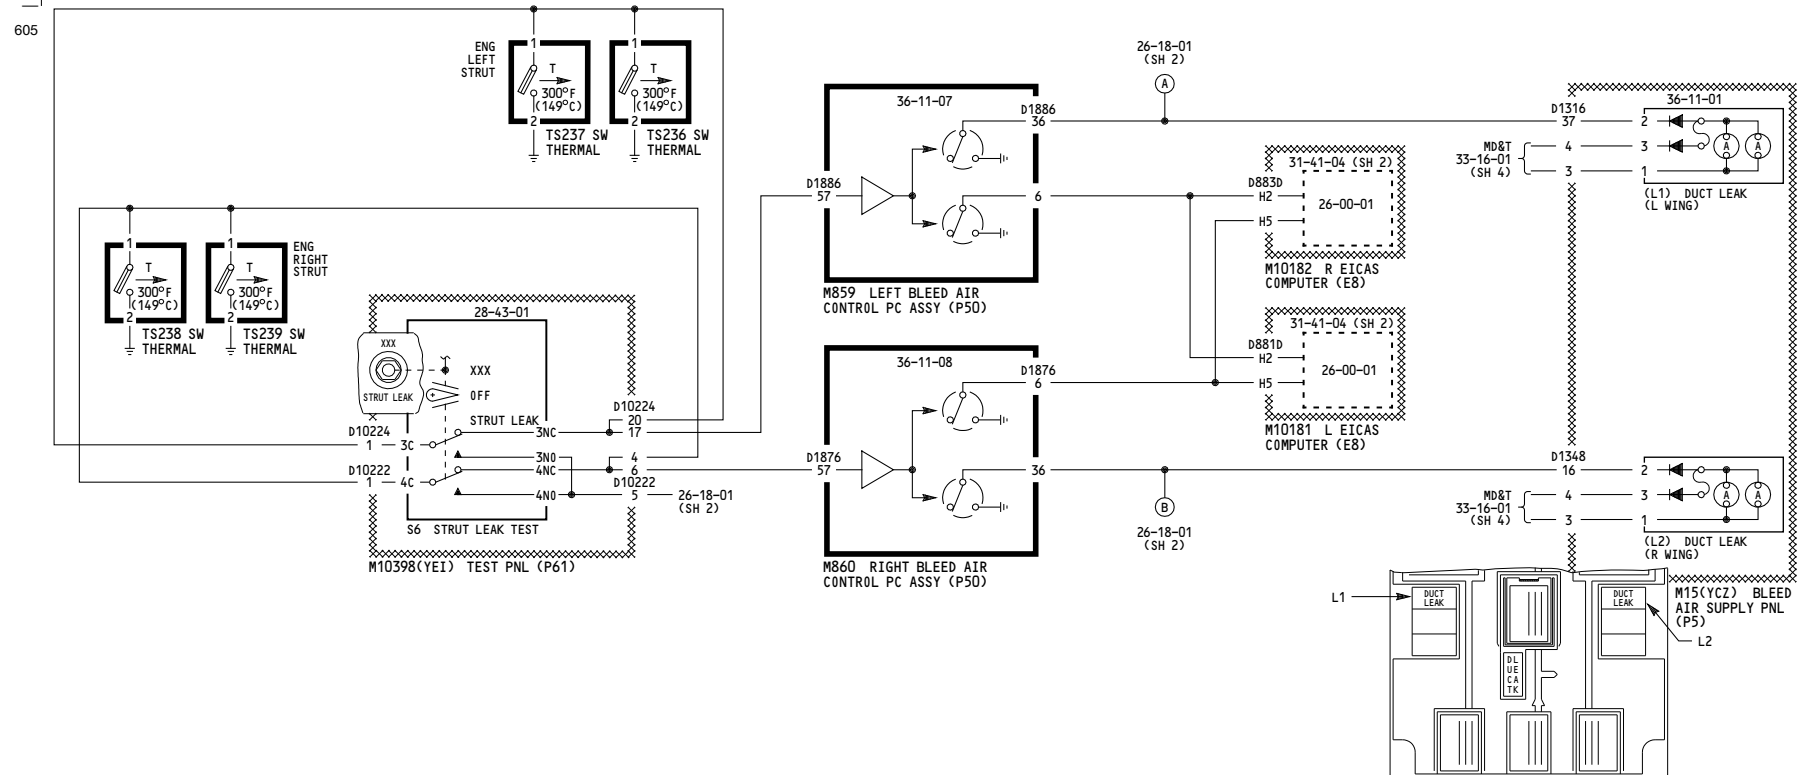

WIRING DIAGRAMS
26-18-12
26-18-22

## 26-18-01

Page 101  
Sheet 3  
Jan 21/2005


050-099

DUCT LEAK DETECTION

D280T232

THIS PAGE INTENTIONALLY LEFT BLANK

WIRING DIAGRAMS
26-18-11
26-18-12
26-18-21
26-18-22
26-18-31

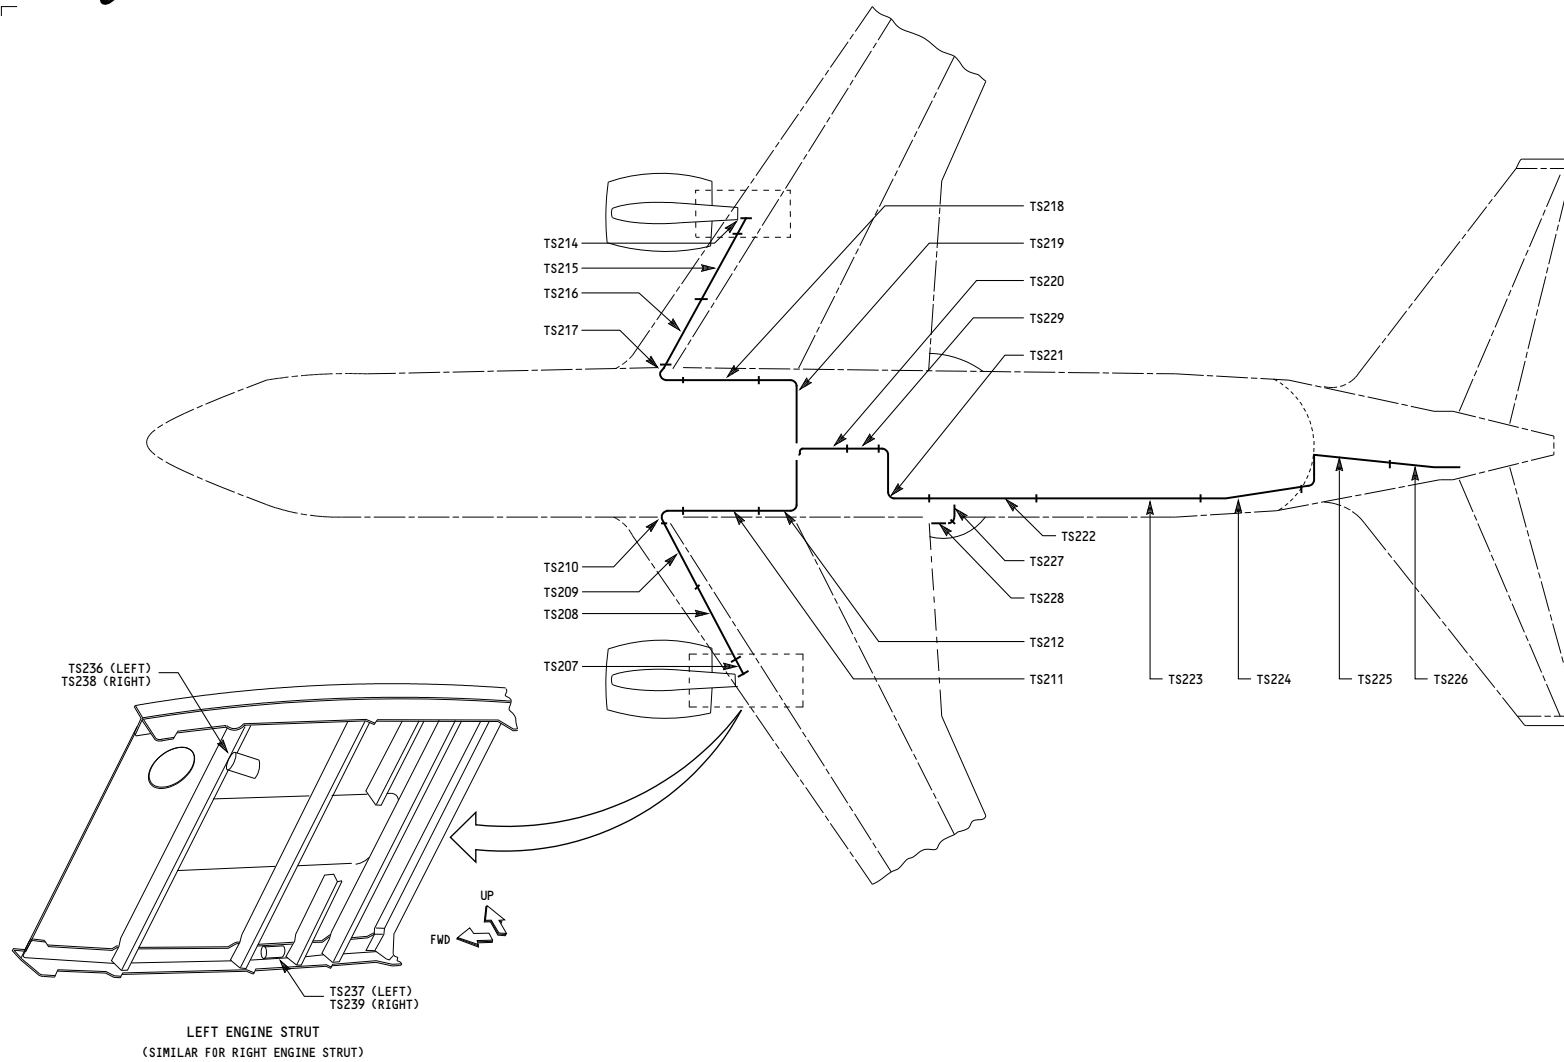


050-051

**DUCT LEAK DETECTION**

D280T232

**26-18-01**

Page 101.1  
Sheet 1  
Jan 21/2005

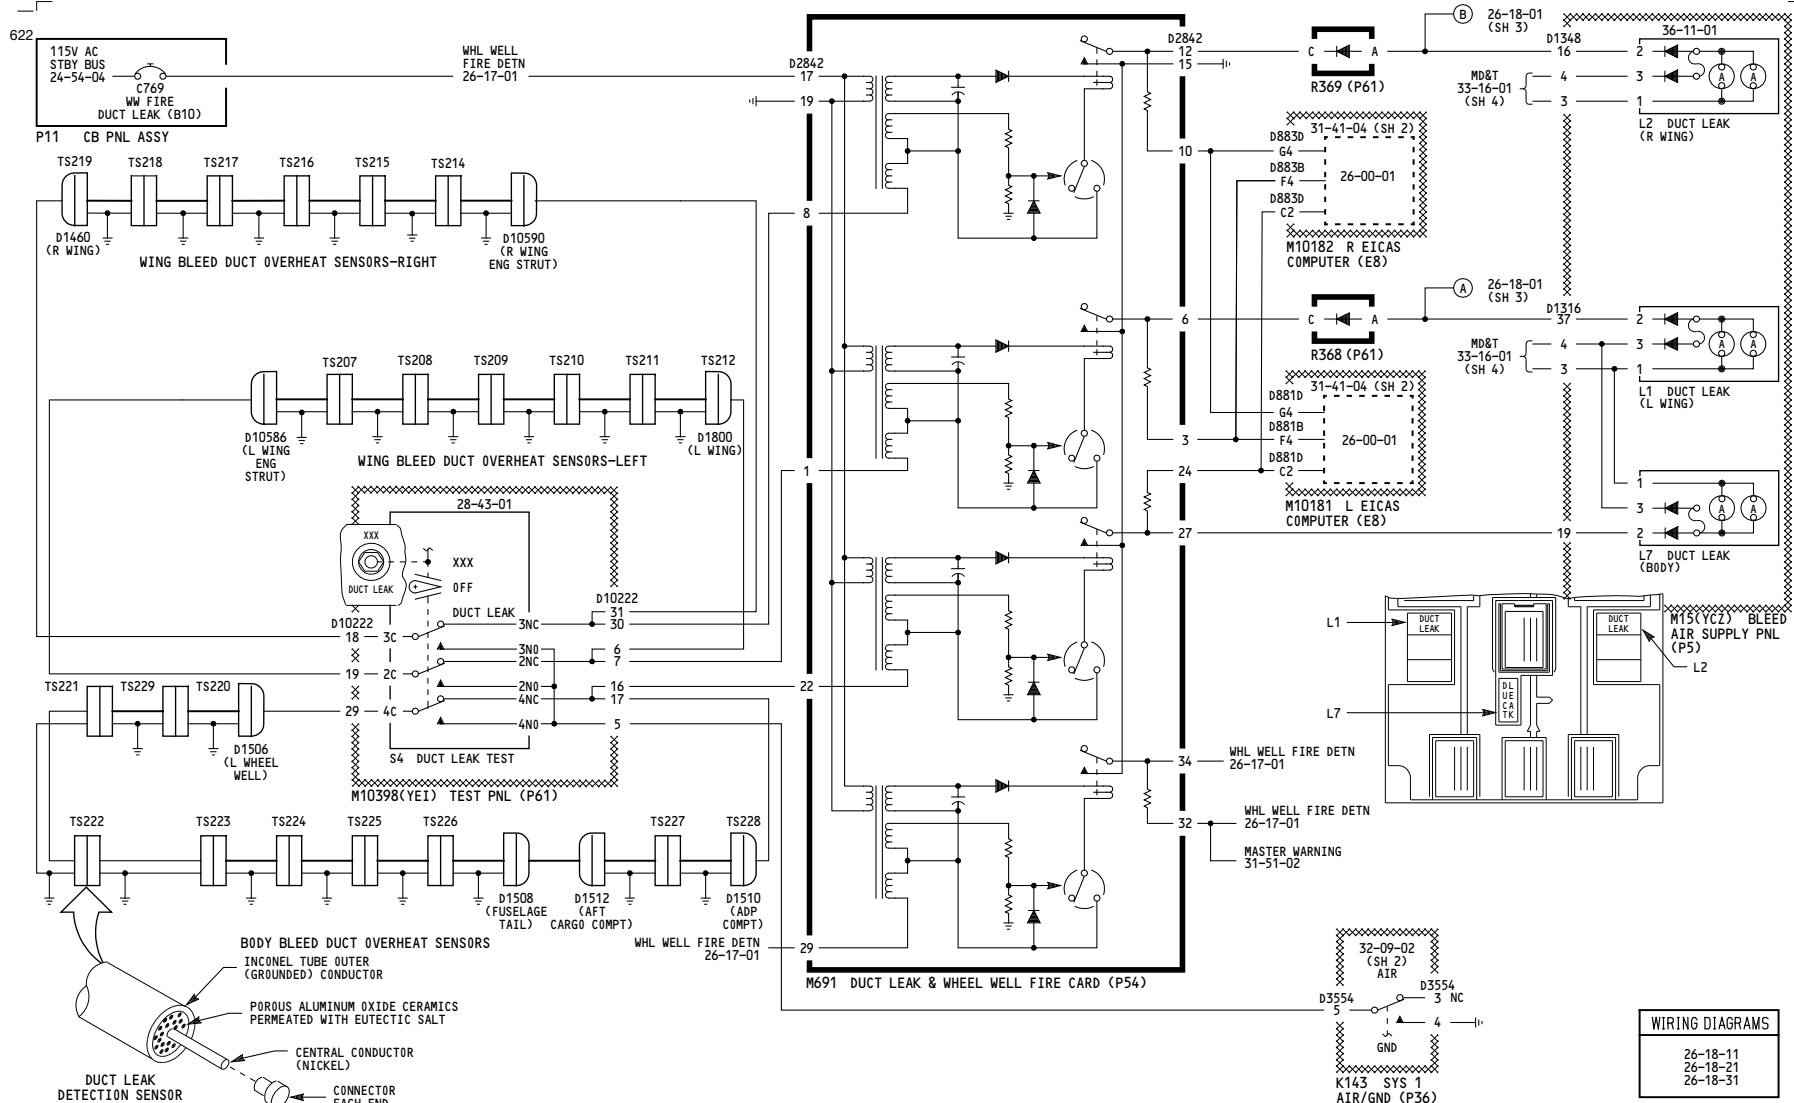

050-051

**DUCT LEAK DETECTION**


D280T232

Incorporates  
26-0079

WIRING DIAGRAMS	
26-18-11	
26-18-21	
26-18-31	

**26-18-01**

 Page 101.1  
Sheet 2  
Jan 21/2005




D280T232

Page 101.1  
Sheet 3  
Jan 21/2005

THIS PAGE INTENTIONALLY LEFT BLANK

611

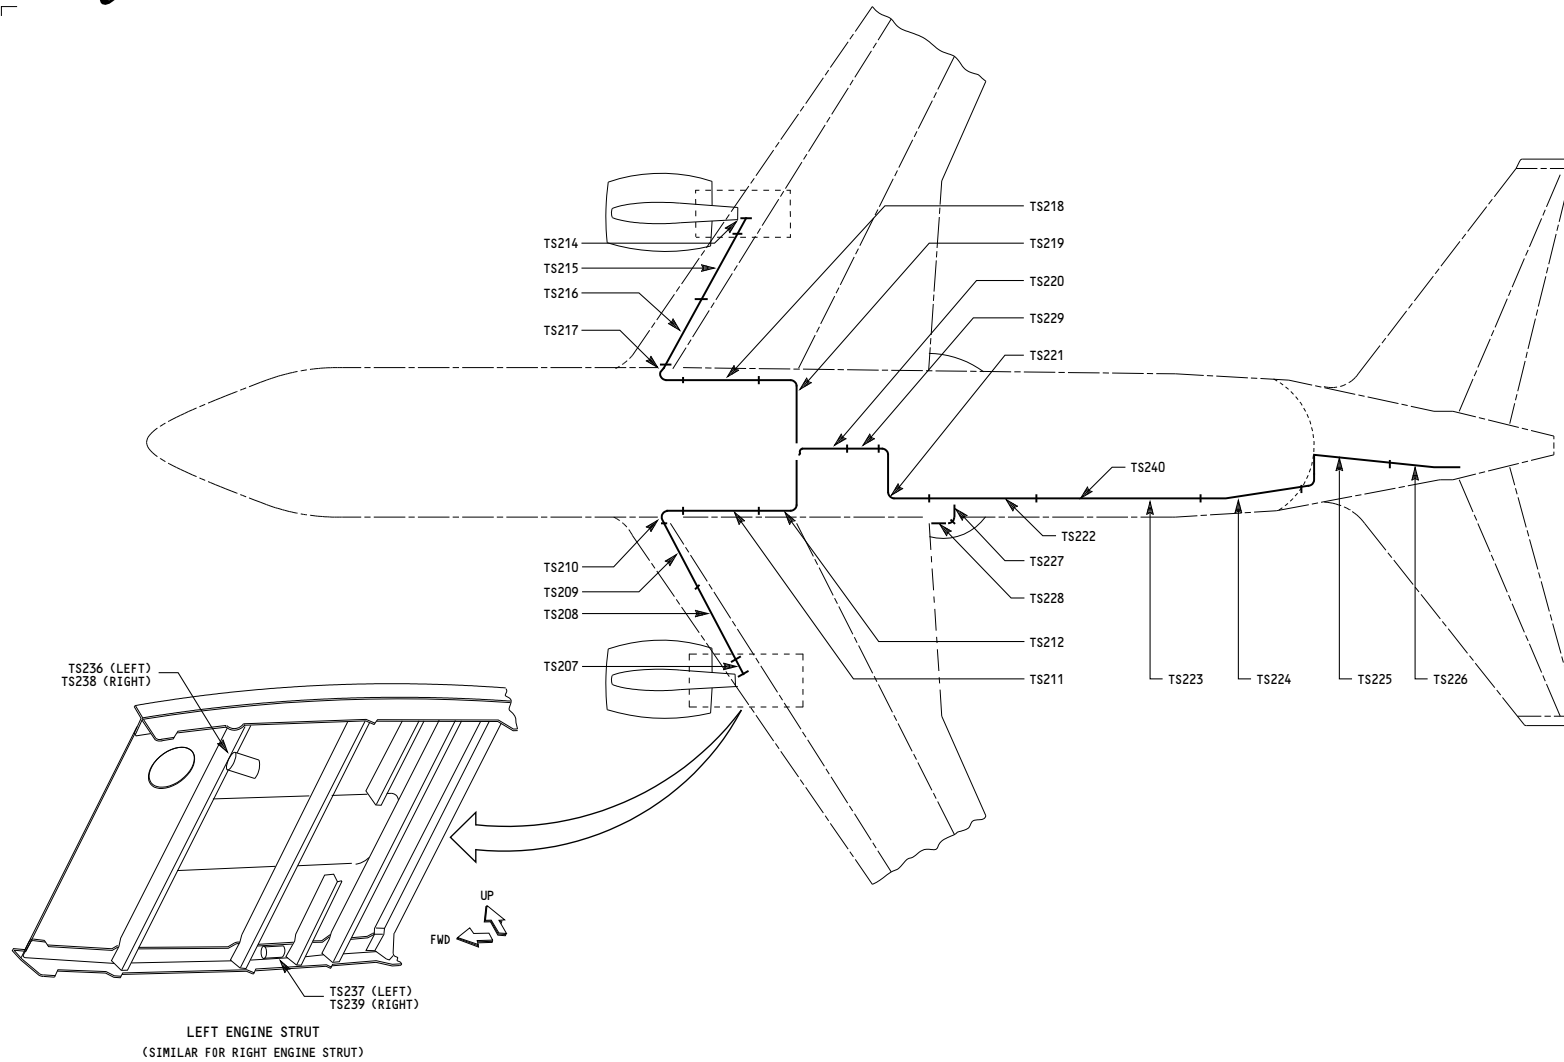


150-199, 275-299

**DUCT LEAK DETECTION**

D280T232

**26-18-01**

 Page 102  
Sheet 1  
Jan 21/2005




## D280T232

WIRING DIAGRAMS
26-18-11
26-18-21
26-18-31

**26-18-01**



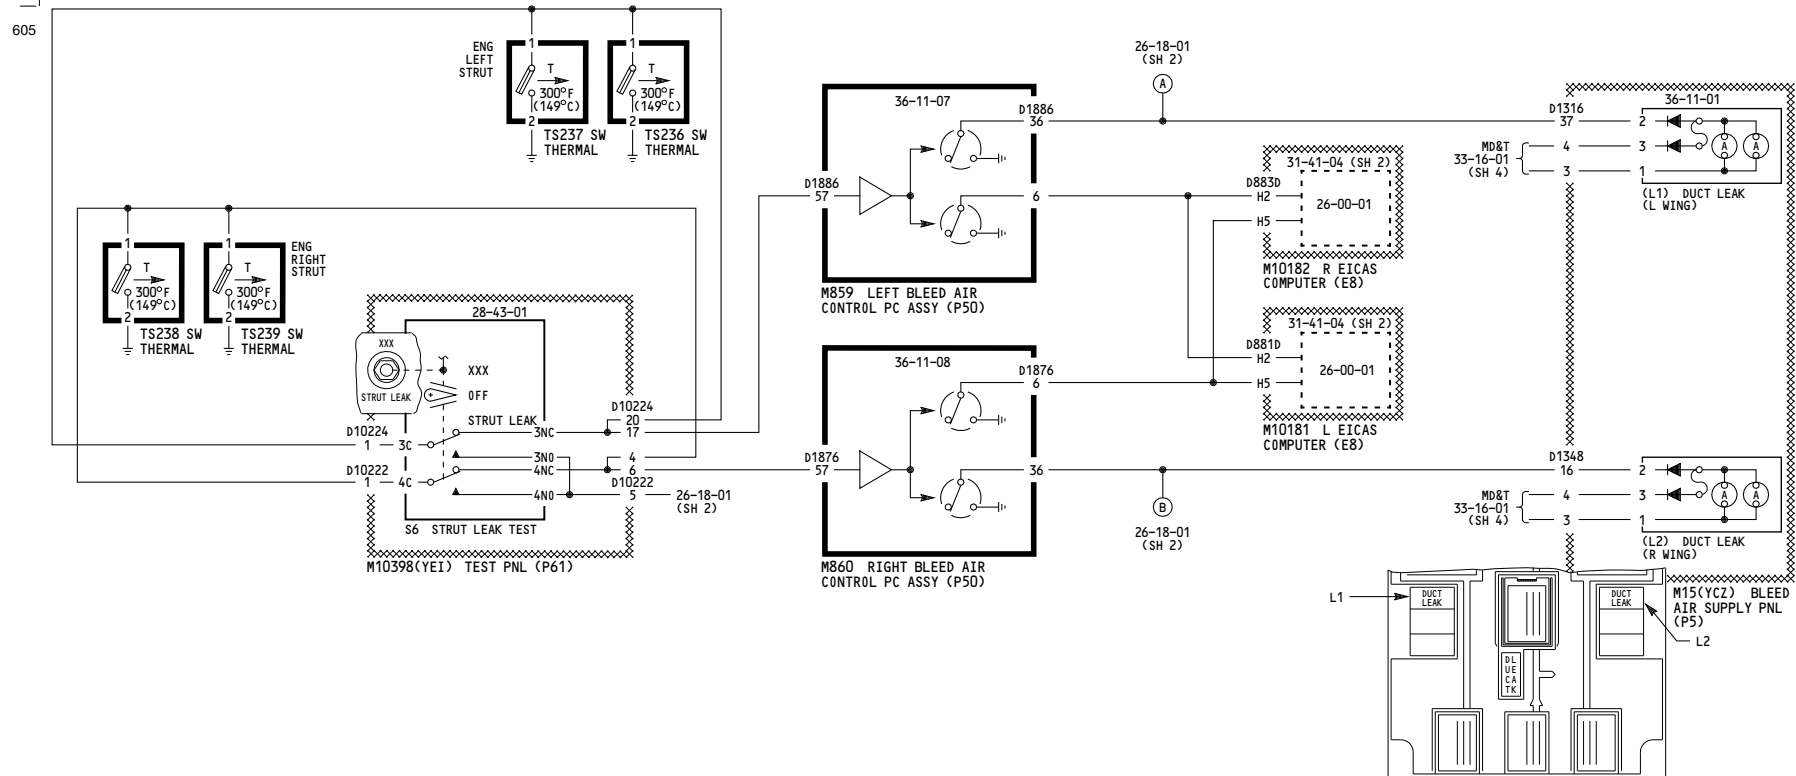

WIRING DIAGRAMS  
26-18-12  
26-18-22

## 26-18-01

Page 102  
Sheet 3  
Jan 21/2005


150-199, 275-299

### DUCT LEAK DETECTION

D280T232

THIS PAGE INTENTIONALLY LEFT BLANK


611

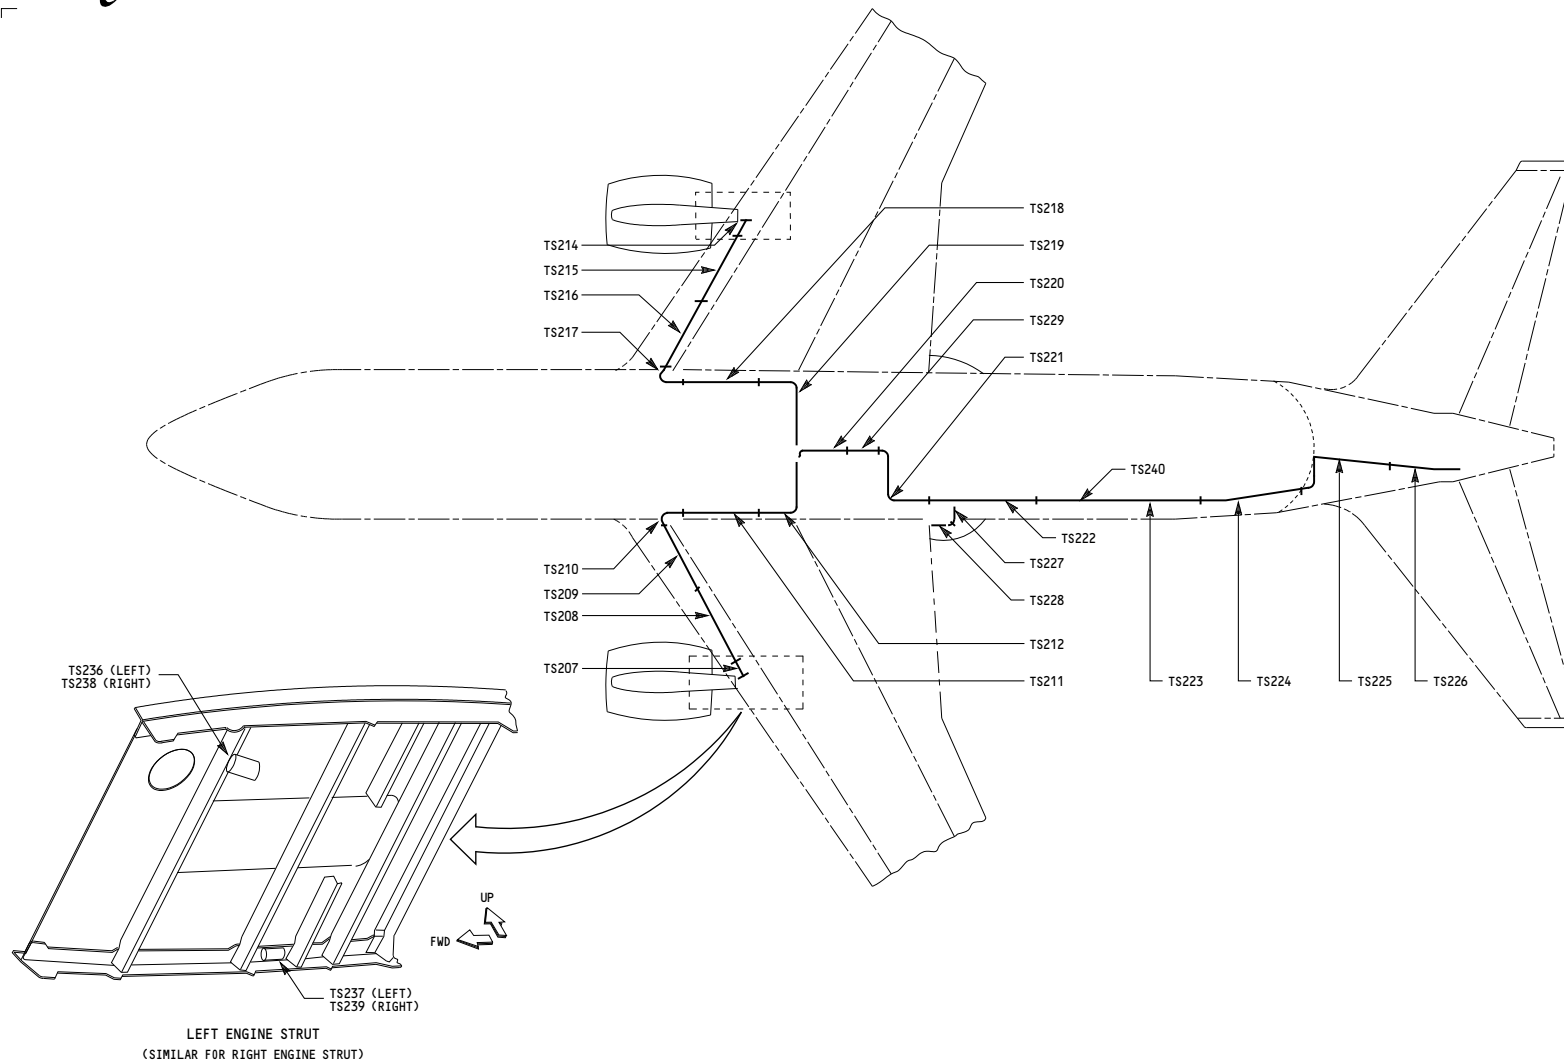

150-280	<b>DUCT LEAK DETECTION</b>
	D280T232

**26-18-01**

Page 102.1  
Sheet 1  
Jan 21/2005

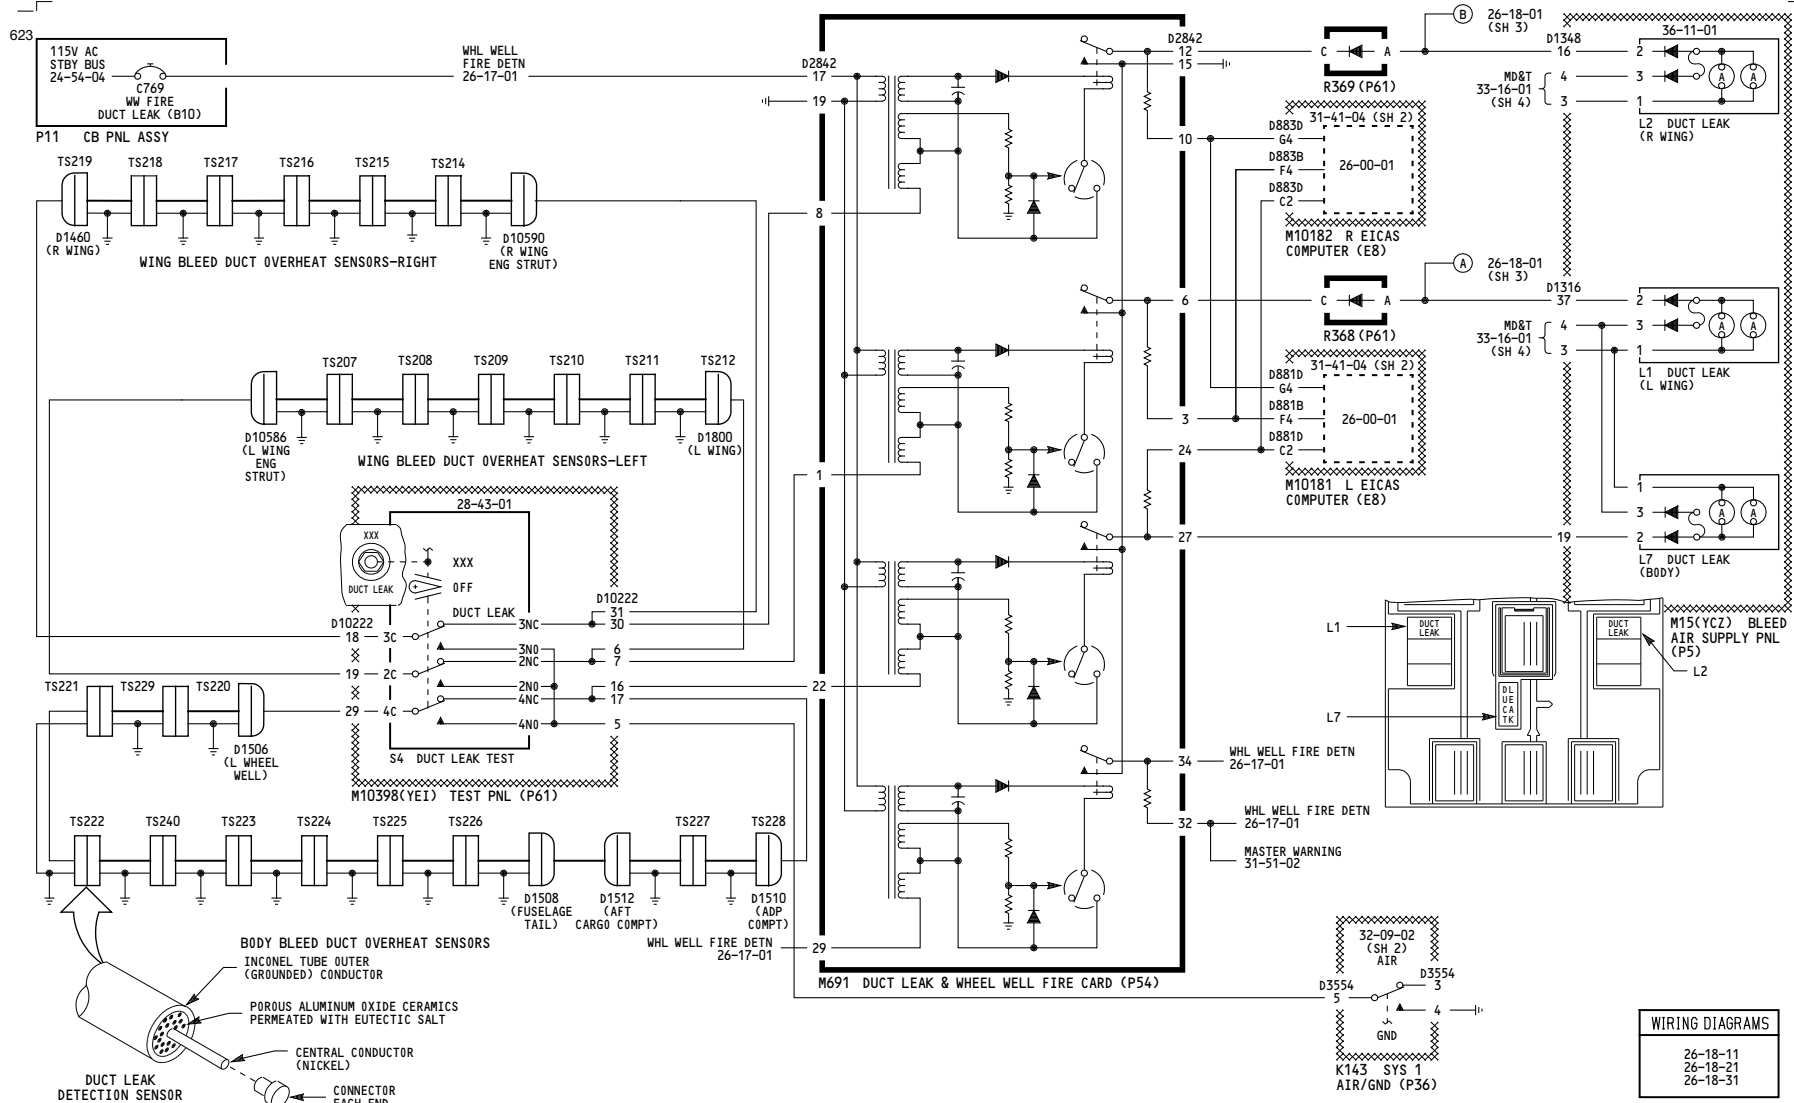

WIRING DIAGRAMS
26-18-11
26-18-21
26-18-31

150-280


**DUCT LEAK DETECTION**

Incorporates  
26-0079

D280T232

**26-18-01**

Page 102.1  
Sheet 2  
Jan 21/2005

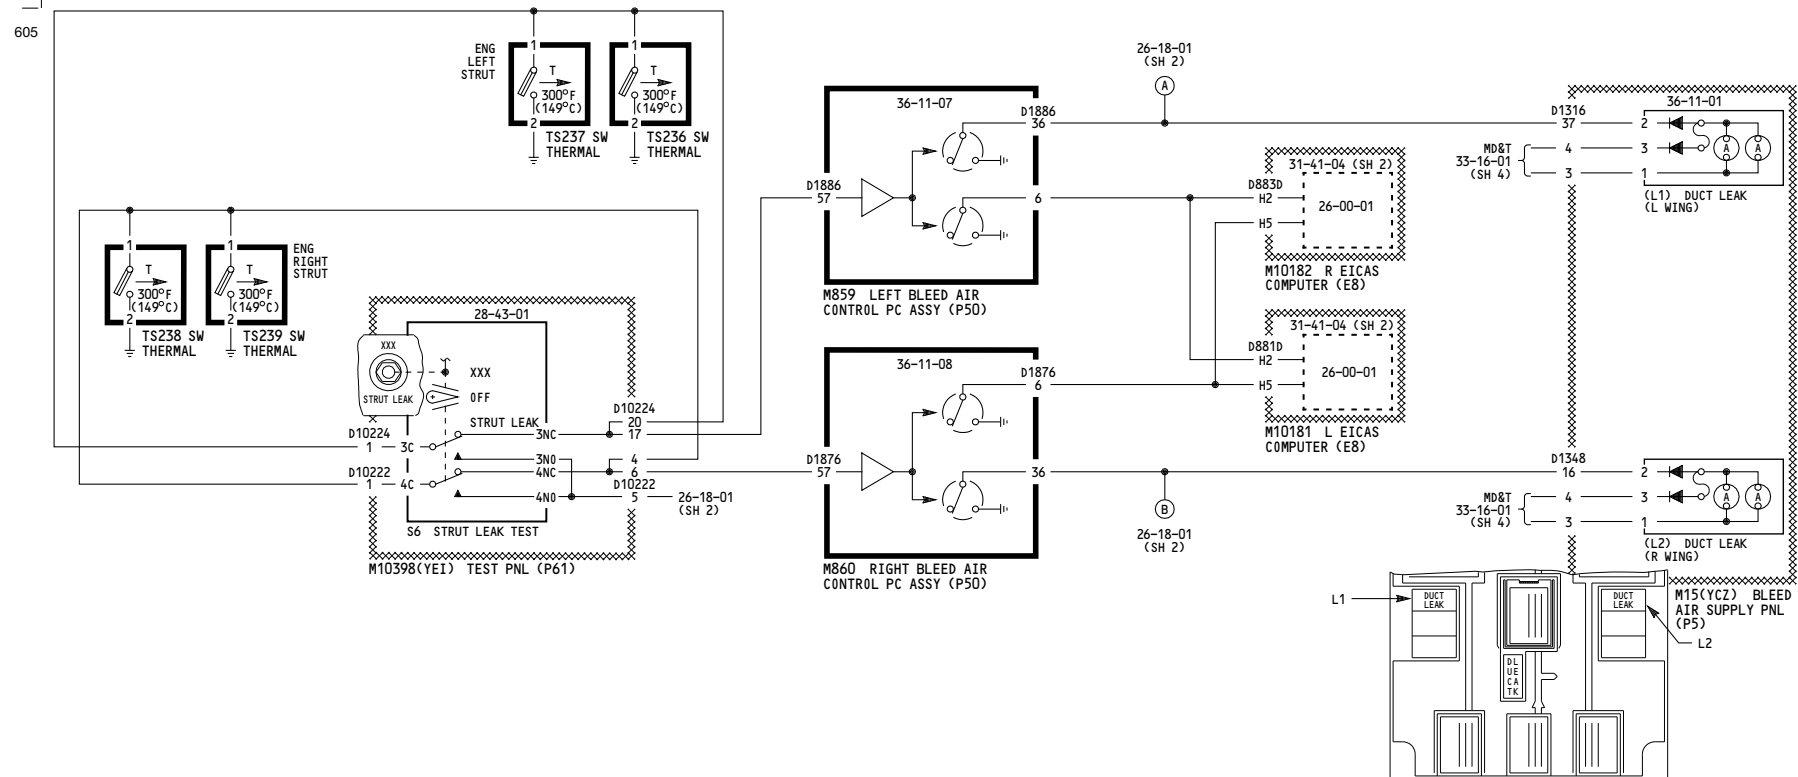

<p>WIRING DIAGRAMS</p> <p>26-18-12</p> <p>26-18-22</p>
--

**26-18-01**


Page 102.1  
Sheet 3  
Jan 21/2005

150-280

## DUCT LEAK DETECTION

D280T232

616

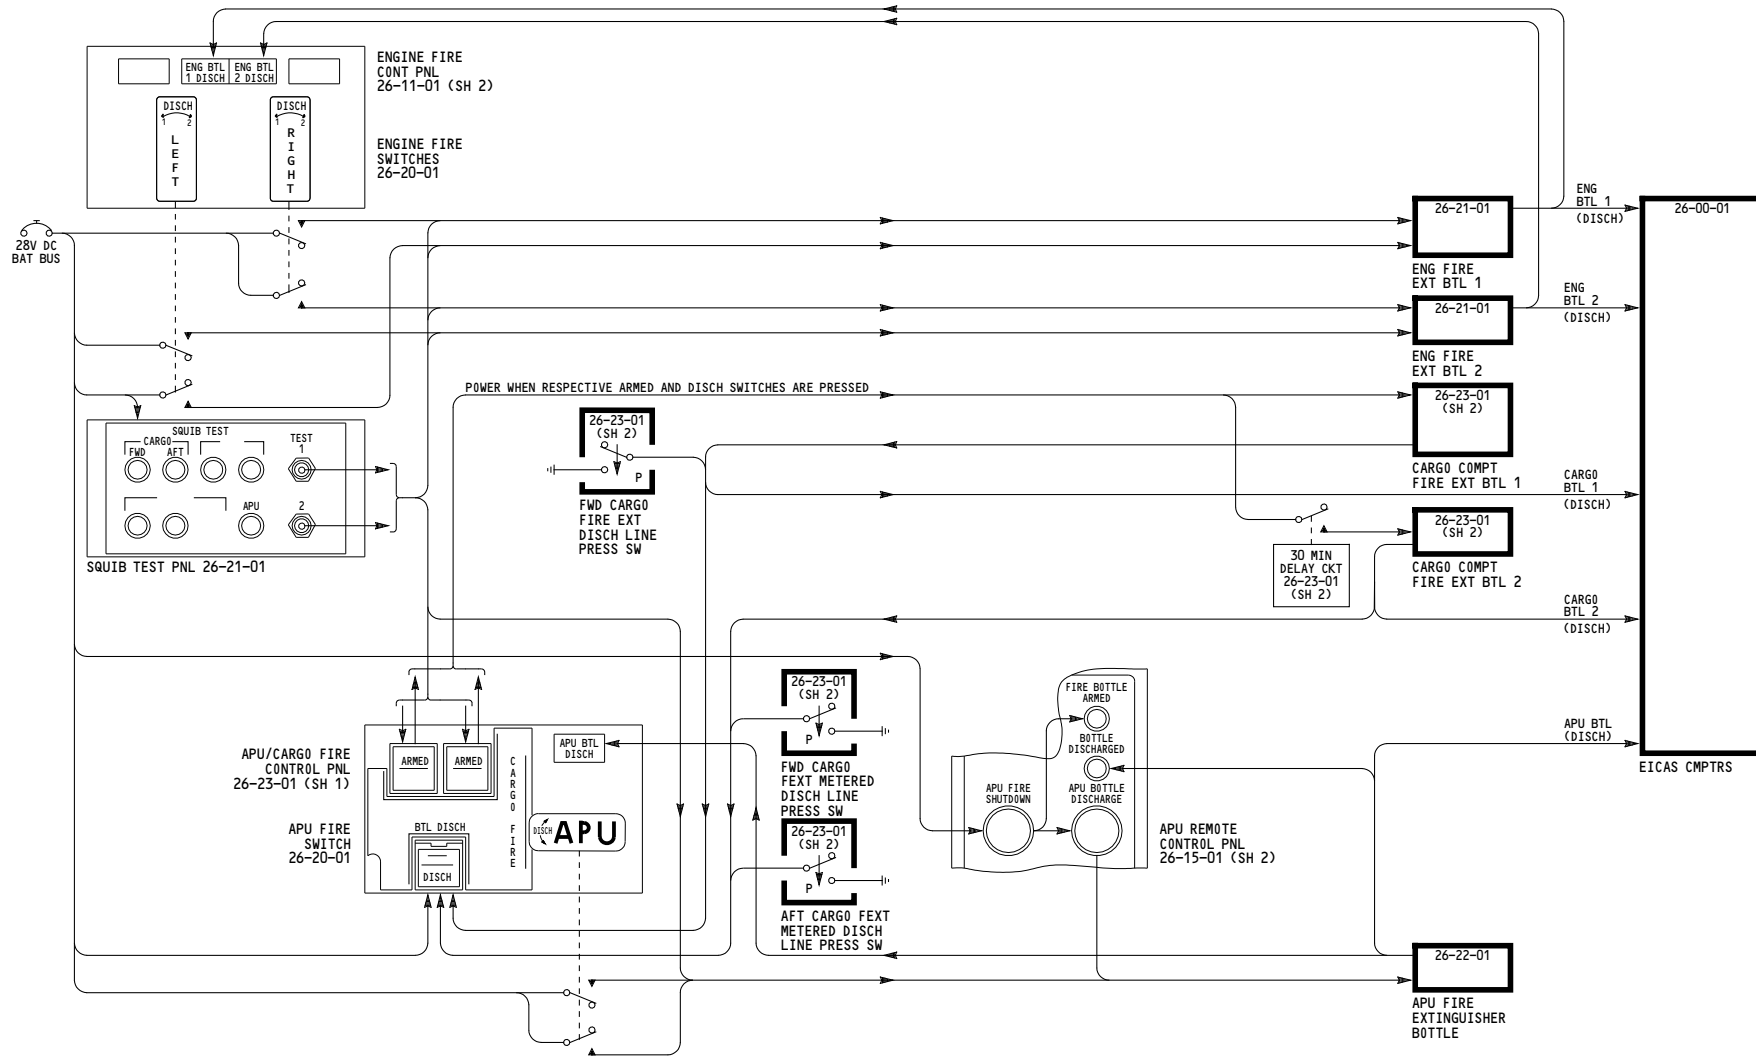

050-099, 150-199

**FIRE EXTINGUISHING-SIMPLIFIED**


D280T232

**26-20-00**

Page 101

Jan 21/2005

619

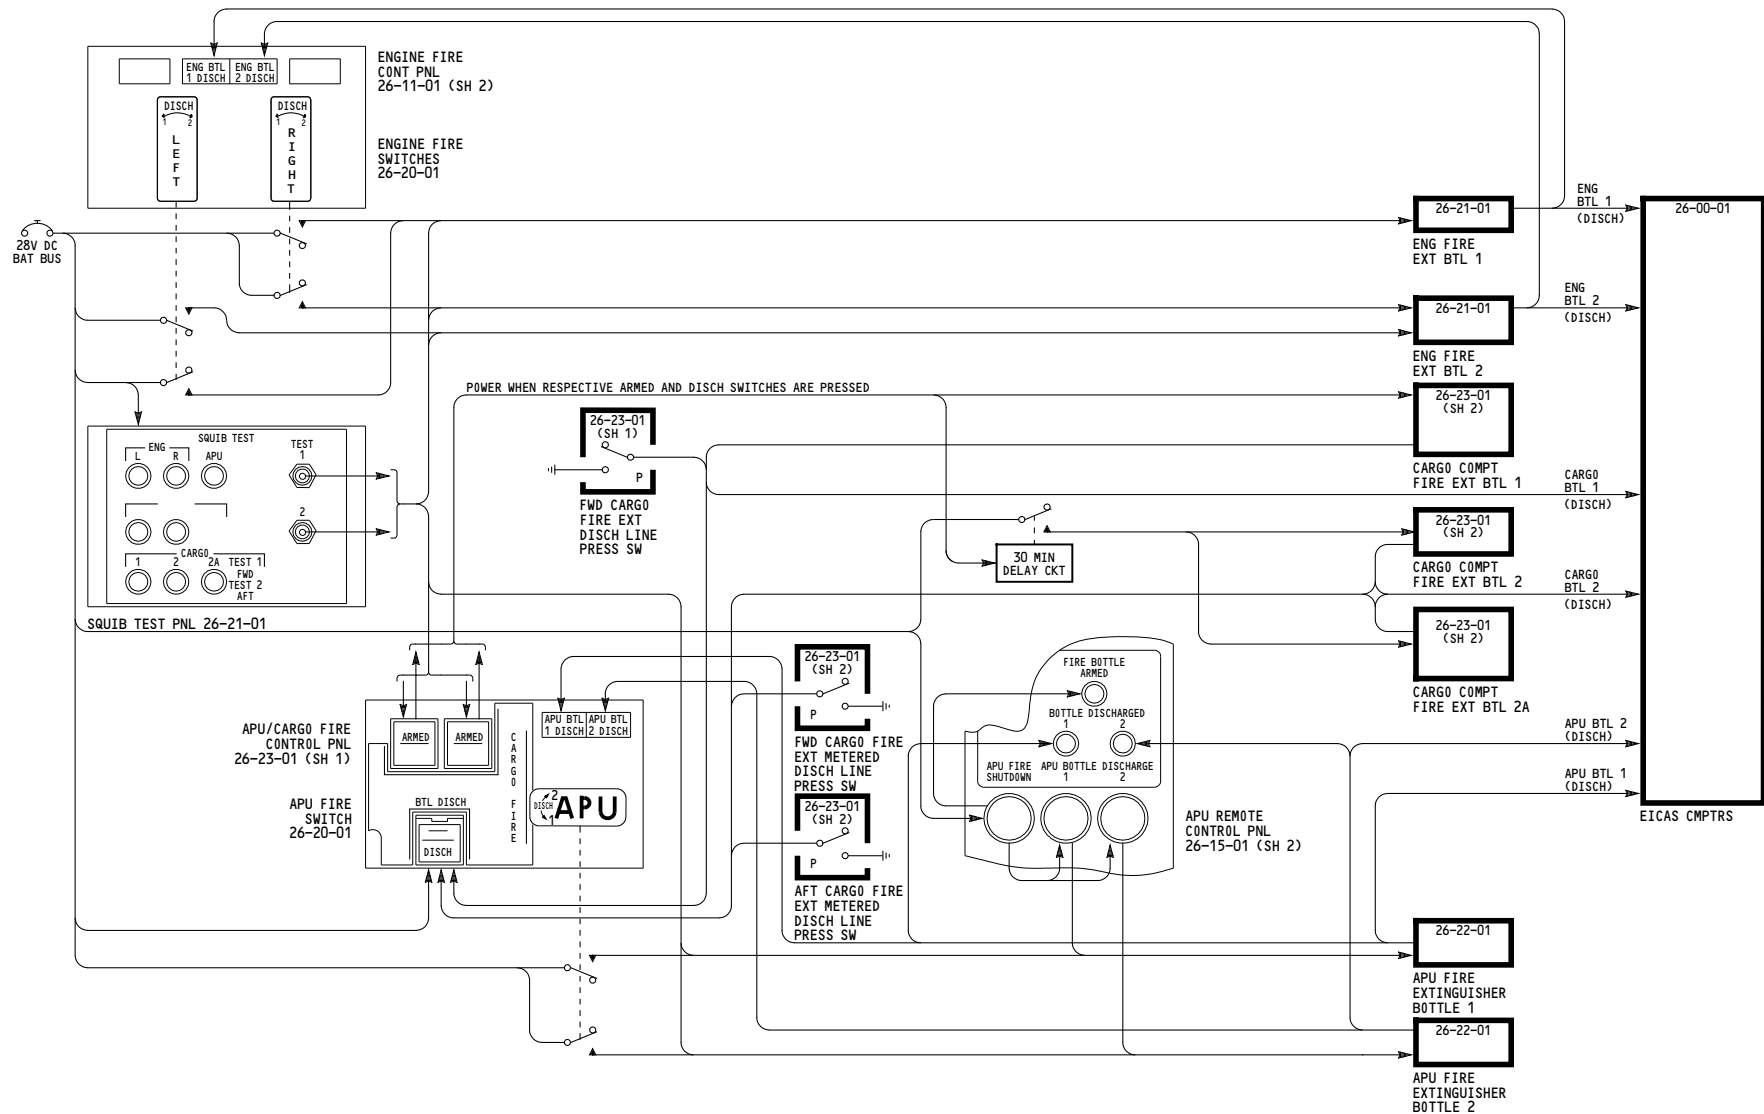

275-299


## FIRE EXTINGUISHING- SIMPLIFIED

D280T232

26-20-00

Page 102

Jan 21/2005

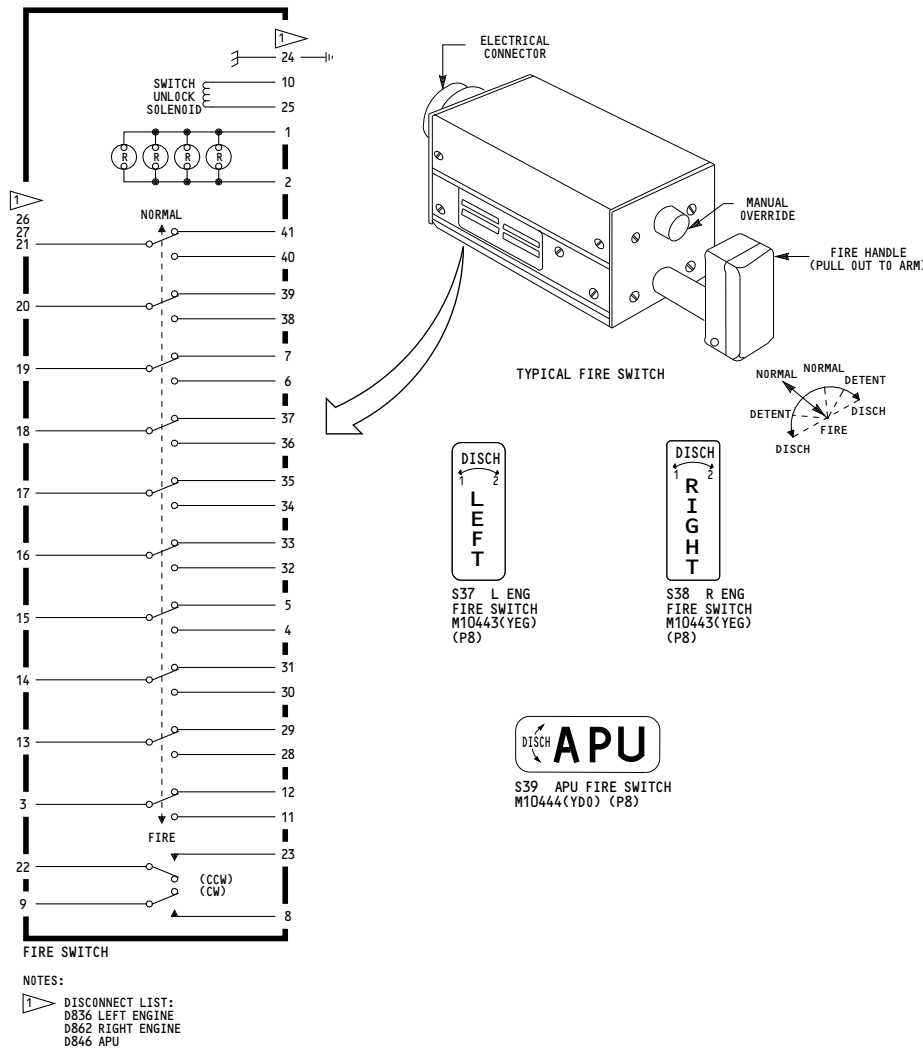


ENGINE FIRE SWITCH

SCHEMATIC	SH	SYSTEM	PINS	FUNCTION WHEN PULLED
24-20-01 (L)	1	GENERATOR	21	TRIPS ENG GENERATOR FIELD RELAY AND GENERATOR CIRCUIT BREAKER
24-20-02 (R)	1	GENERATOR	40	TRIPS ENG GENERATOR FIELD RELAY AND GENERATOR CIRCUIT BREAKER
26-11-01 (L)	2	ENG FIRE DETECTION	10, 25	UNLOCKS FIRE SWITCH SOLENOID AND ILLUMINATES FIRE SWITCH HANDLE WHEN ENG FIRE IS DETECTED
26-11-02 (R)	2	ENG FIRE DETECTION	1, 2	UNLOCKS FIRE SWITCH SOLENOID AND ILLUMINATES FIRE SWITCH HANDLE WHEN ENG FIRE IS DETECTED
26-21-01		ENGINE FIRE EXTINGUISHING	8, 9, 22, 23	DISCHARGES FIRE EXTINGUISH AGENT WHEN FIRE SW IS PULLED AND THEN ROTATED
28-22-01	4	ENGINE FUEL SHUTOFF VALVE	16, 33, 32	CLOSES REAR SPAR FUEL SHUTOFF VALVES (L OR R)
31-51-07		EICAS & WARNING	15	RESETS FIRE BELL AND DISPLAYS MESSAGE FOR ENGINE SHUTDOWN ON EICAS
29-00-02 (L)	1	HYDRAULIC POWER	18, 37	CLOSES ENG HYDRAULIC PUMP SUPPLY SHUTOFF VALVE
29-00-03 (R)	1	HYDRAULIC POWER	36	CLOSES ENG HYDRAULIC PUMP SUPPLY SHUTOFF VALVE
36-11-05 (L)		PNEUMATICS	17	CLOSES PRESSURE REGULATION AND SHUT-OFF VALVE (PRSOV)
36-11-06 (R)		PNEUMATICS	35	CLOSES PRESSURE REGULATION AND SHUT-OFF VALVE (PRSOV)
76-11-01	3	FUEL CONDITION CONTROL	19, 6, 7	SHUTS OFF ENGINE FUEL CONDITIONING ACTUATORS
78-34-01		ENGINE T/R CONTROL	20	CUTS POWER TO T/R ISO-VLV
			39	

APU FIRE SWITCH

SCHEMATIC	SH	SYSTEM	PINS	FUNCTION WHEN PULLED
24-20-03		GENERATOR	21	TRIPS APU GENERATOR FIELD RELAY AND GENERATOR CIRCUIT BREAKER
		GENERATOR	40	TRIPS APU GENERATOR FIELD RELAY AND GENERATOR CIRCUIT BREAKER
26-15-01	1	APU FIRE DETECTION	20	SHUTS OFF APU FIRE HORN AND REMOTE FIRE LT ON P40 WHEN PLANE IS ON THE GROUND
		APU FIRE DETECTION	39	SHUTS OFF APU FIRE HORN AND REMOTE FIRE LT ON P40 WHEN PLANE IS ON THE GROUND
		APU FIRE DETECTION	10, 25	UNLOCKS FIRE SWITCH SOLENOID ILLUMINATES FIRE HANDLE WHEN APU FIRE IS DETECTED
		APU FIRE DETECTION	1, 2	UNLOCKS FIRE SWITCH SOLENOID ILLUMINATES FIRE HANDLE WHEN APU FIRE IS DETECTED
26-22-01		APU FIRE EXTINGUISHING	8, 9	DISCHARGES FIRE EXTINGUISH AGENT WHEN FIRE SW IS PULLED AND THEN ROTATED
		APU FIRE EXTINGUISHING	22, 23	DISCHARGES FIRE EXTINGUISH AGENT WHEN FIRE SW IS PULLED AND THEN ROTATED
28-25-01		APU FUEL	16, 33	CLOSES APU FUEL SHUTOFF VALVE
		APU FUEL	32	CLOSES APU FUEL SHUTOFF VALVE
31-51-07		EICAS AND WARNING	15	RESETS FIRE BELL AND DISPLAYS MESSAGE FOR APU SHUTDOWN ON EICAS
		EICAS AND WARNING	4	RESETS FIRE BELL AND DISPLAYS MESSAGE FOR APU SHUTDOWN ON EICAS
36-11-04	1	PNEUMATICS	17	CLOSES APU AIR SUPPLY APU SHUTOFF VALVE
		PNEUMATICS	35	CLOSES APU AIR SUPPLY APU SHUTOFF VALVE
49-00-04	1	APU IGNITION & STARTING	6, 7	SHUTS DOWN APU
		APU IGNITION & STARTING	19	SHUTS DOWN APU



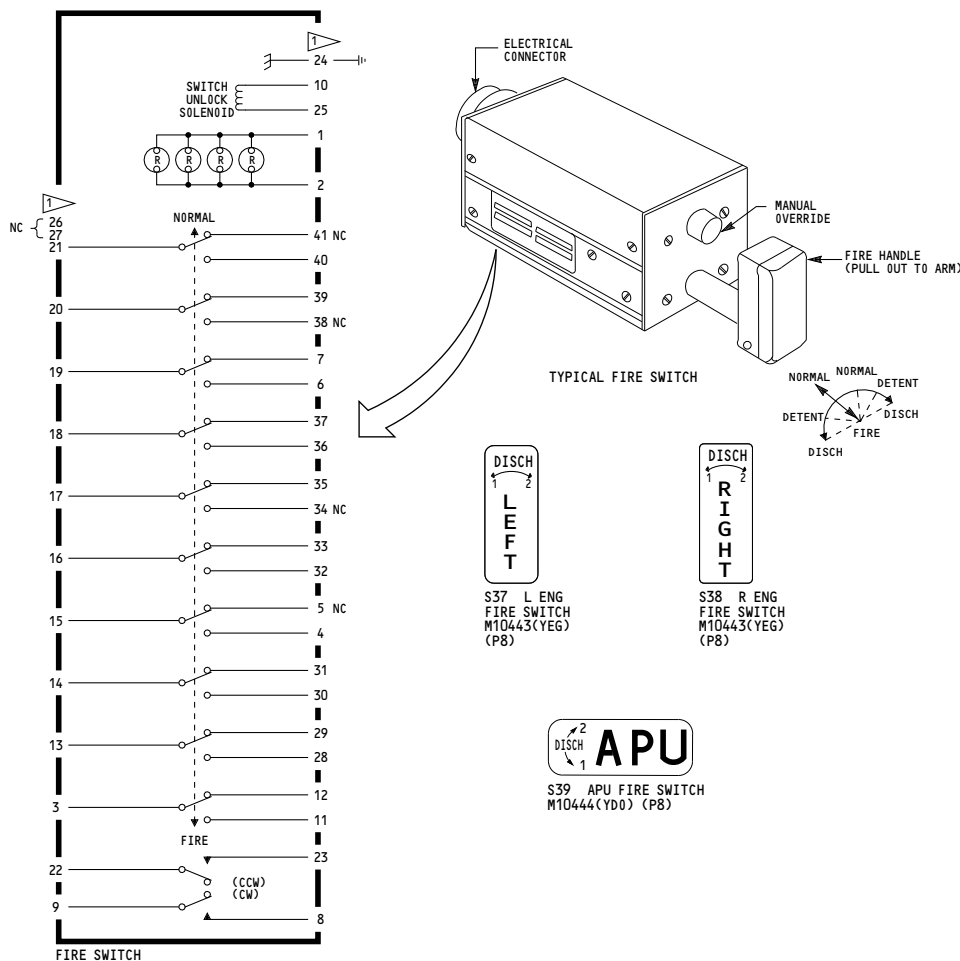

**NOTES:**

DISCONNECT LIST:  
D836 LEFT ENGINE  
D862 RIGHT ENGINE  
D846 APU


280-299	<b>FIRE SWITCHES-ENGINE AUXILIARY POWER UNIT</b>
	D280T232

**ENGINE FIRE SWITCH**

SCHEMATIC	SH	SYSTEM	PINS	FUNCTION WHEN PULLED
24-20-01 (L)	1	GENERATOR	21	TRIPS ENG GENERATOR FIELD RELAY AND GENERATOR CIRCUIT BREAKER
24-20-02 (R)	1	GENERATOR	40	
26-11-01 (L)	2	ENG FIRE DETECTION	10, 25	UNLOCKS FIRE SWITCH SOLENOID AND ILLUMINATES FIRE SWITCH HANDLE WHEN ENG FIRE IS DETECTED
26-11-02 (R)			1, 2	
26-21-01		ENGINE FIRE EXTINGUISHING	8, 9, 22, 23	DISCHARGES FIRE EXTINGUISH AGENT WHEN FIRE SW IS PULLED AND THEN ROTATED
28-22-01	4	ENGINE FUEL SHUTOFF VALVE	16, 33, 32	CLOSES REAR SPAR FUEL SHUTOFF VALVES (L OR R)
31-51-07	4	EICAS & WARNING	15	RESETS FIRE BELL AND DISPLAYS MESSAGE FOR ENGINE SHUTDOWN ON EICAS
76-11-01			4	
29-00-02 (L)	1	HYDRAULIC POWER	18, 37	CLOSES ENG HYDRAULIC PUMP SUPPLY SHUTOFF VALVE
29-00-03 (R)	1		36	
36-11-05 (L)		PNEUMATICS	17	CLOSES PRESSURE REGULATION AND SHUTOFF VALVE (PRSOV)
36-11-06 (R)			35	
76-11-01	3	FUEL CONDITION CONTROL	19, 6, 7	SHUTS OFF ENGINE FUEL CONDITIONING ACTUATORS
78-34-01		ENGINE T/R CONTROL	20, 3, 11, 12, 38, 39	CUTS POWER TO T/R ISO-VLV

**APU FIRE SWITCH**

SCHEMATIC	SH	SYSTEM	PINS	FUNCTION WHEN PULLED
24-20-03	1	GENERATOR	21, 40	TRIPS APU GENERATOR FIELD RELAY AND GENERATOR CIRCUIT BREAKER
26-15-01	1	APU FIRE DETECTION	20, 39, 10, 25, 1, 2	SHUTS OFF APU FIRE HORN AND REMOTE FIRE LT. ON P40 WHEN PLANE IS ON THE GROUND UNLOCKS FIRE SWITCH SOLENOID ILLUMINATES FIRE HANDLE WHEN APU FIRE IS DETECTED
26-22-01		APU FIRE EXTINGUISHING	8, 9, 22, 23	DISCHARGES FIRE EXTINGUISH AGENT WHEN FIRE SW IS PULLED AND THEN ROTATED
28-25-01		APU FUEL	16, 33, 32	CLOSES APU FUEL SHUTOFF VALVE
31-51-07		EICAS AND WARNING	15	RESETS FIRE BELL AND DISPLAYS MESSAGE FOR APU SHUTDOWN ON EICAS
36-11-04	1	PNEUMATICS	17, 35	CLOSES APU AIR SUPPLY SHUTOFF VALVE
49-00-04	1	APU IGNITION & STARTING	6, 7, 19	SHUTS DOWN APU

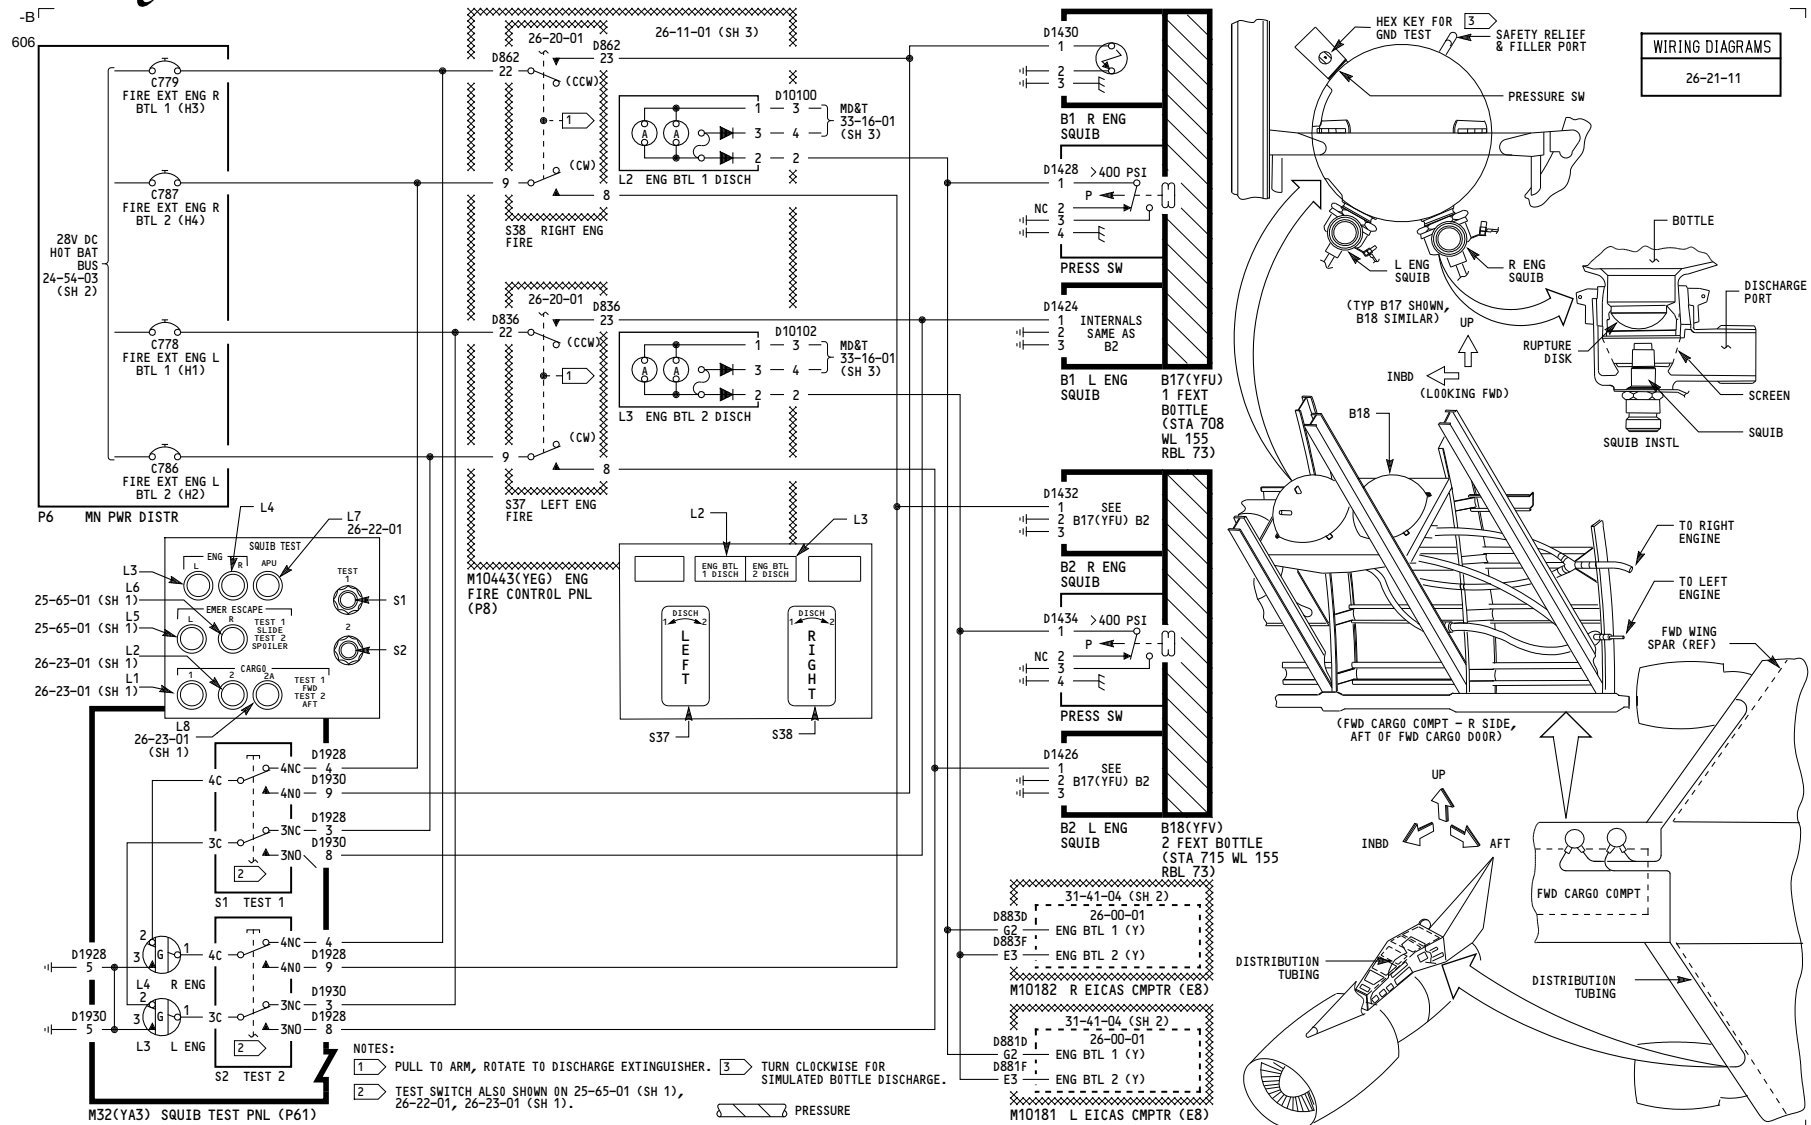

050-099, 280-299


## FIRE EXTINGUISHING-ENGINE

D280T232

**26-21-01**

Page 101


Jan 21/2005

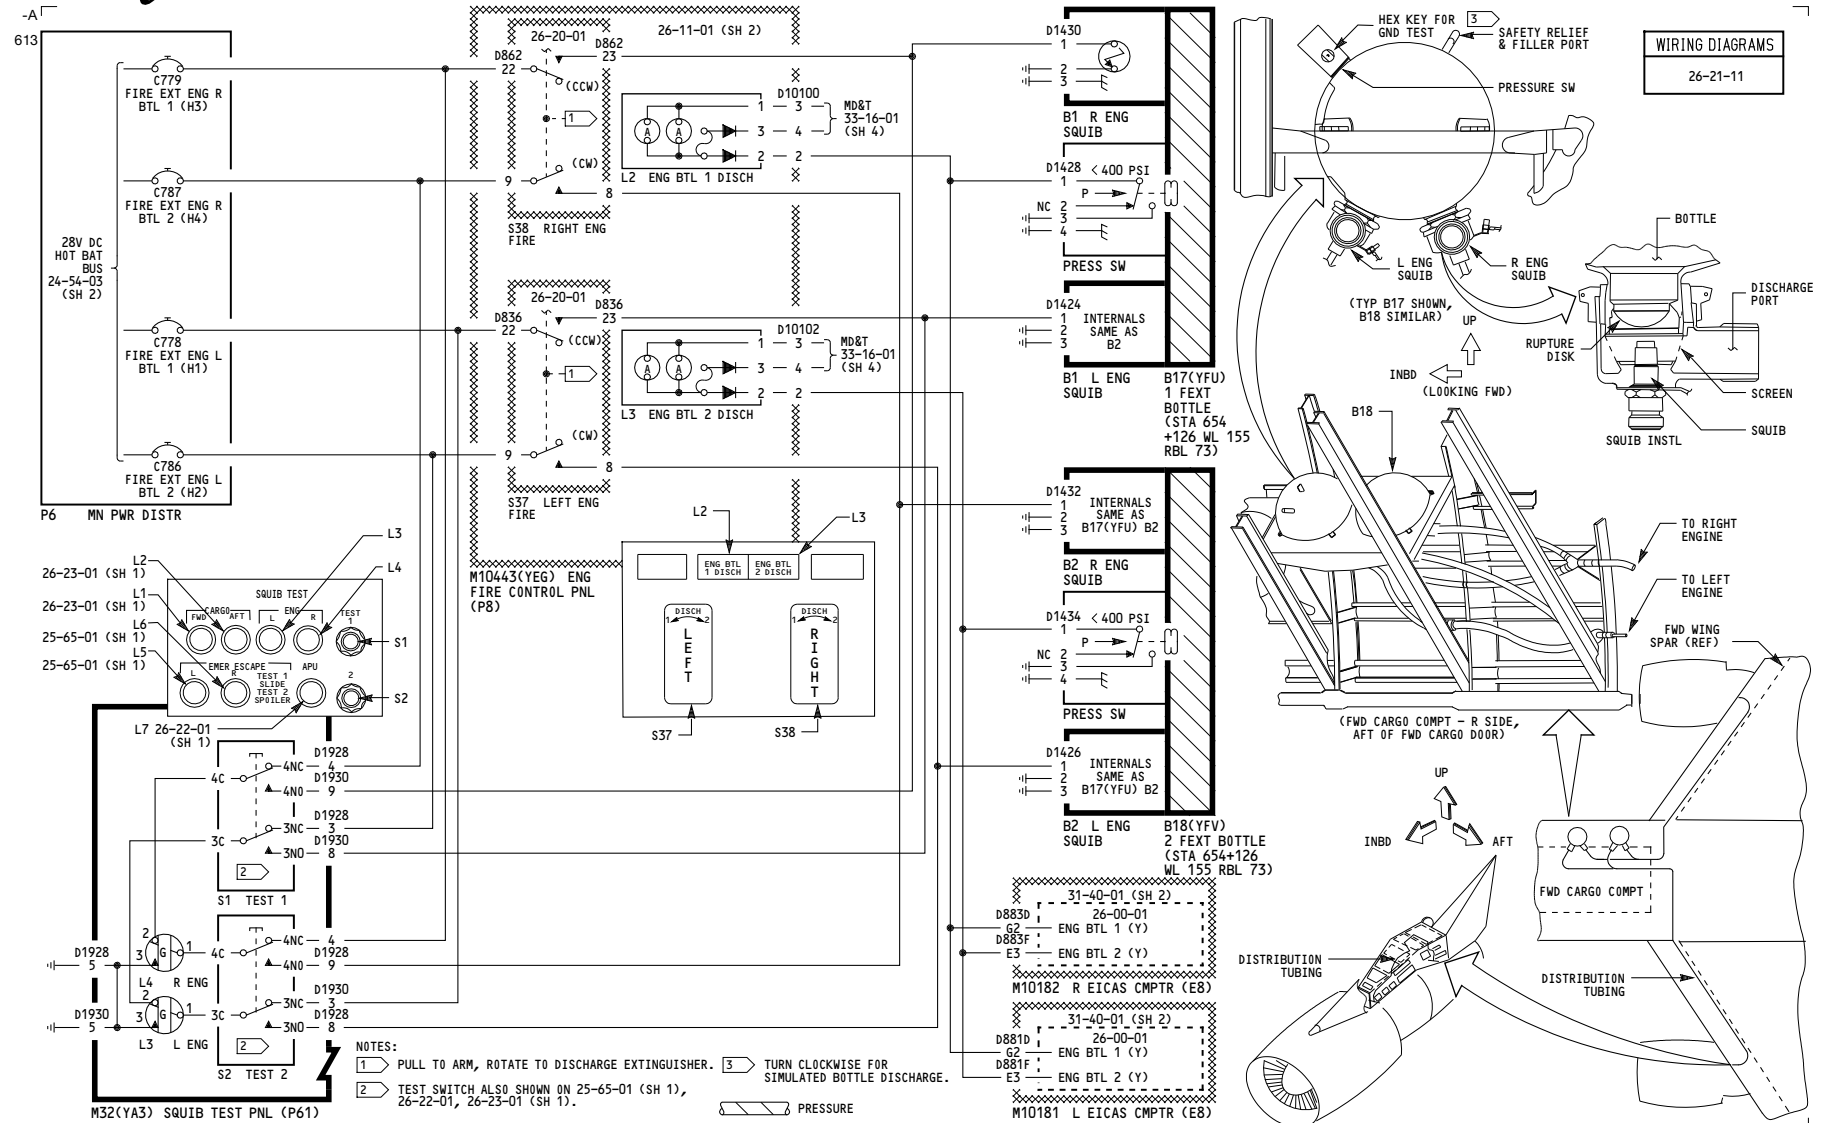

**26-21-01**

Page 102.1

Jan 21/2005

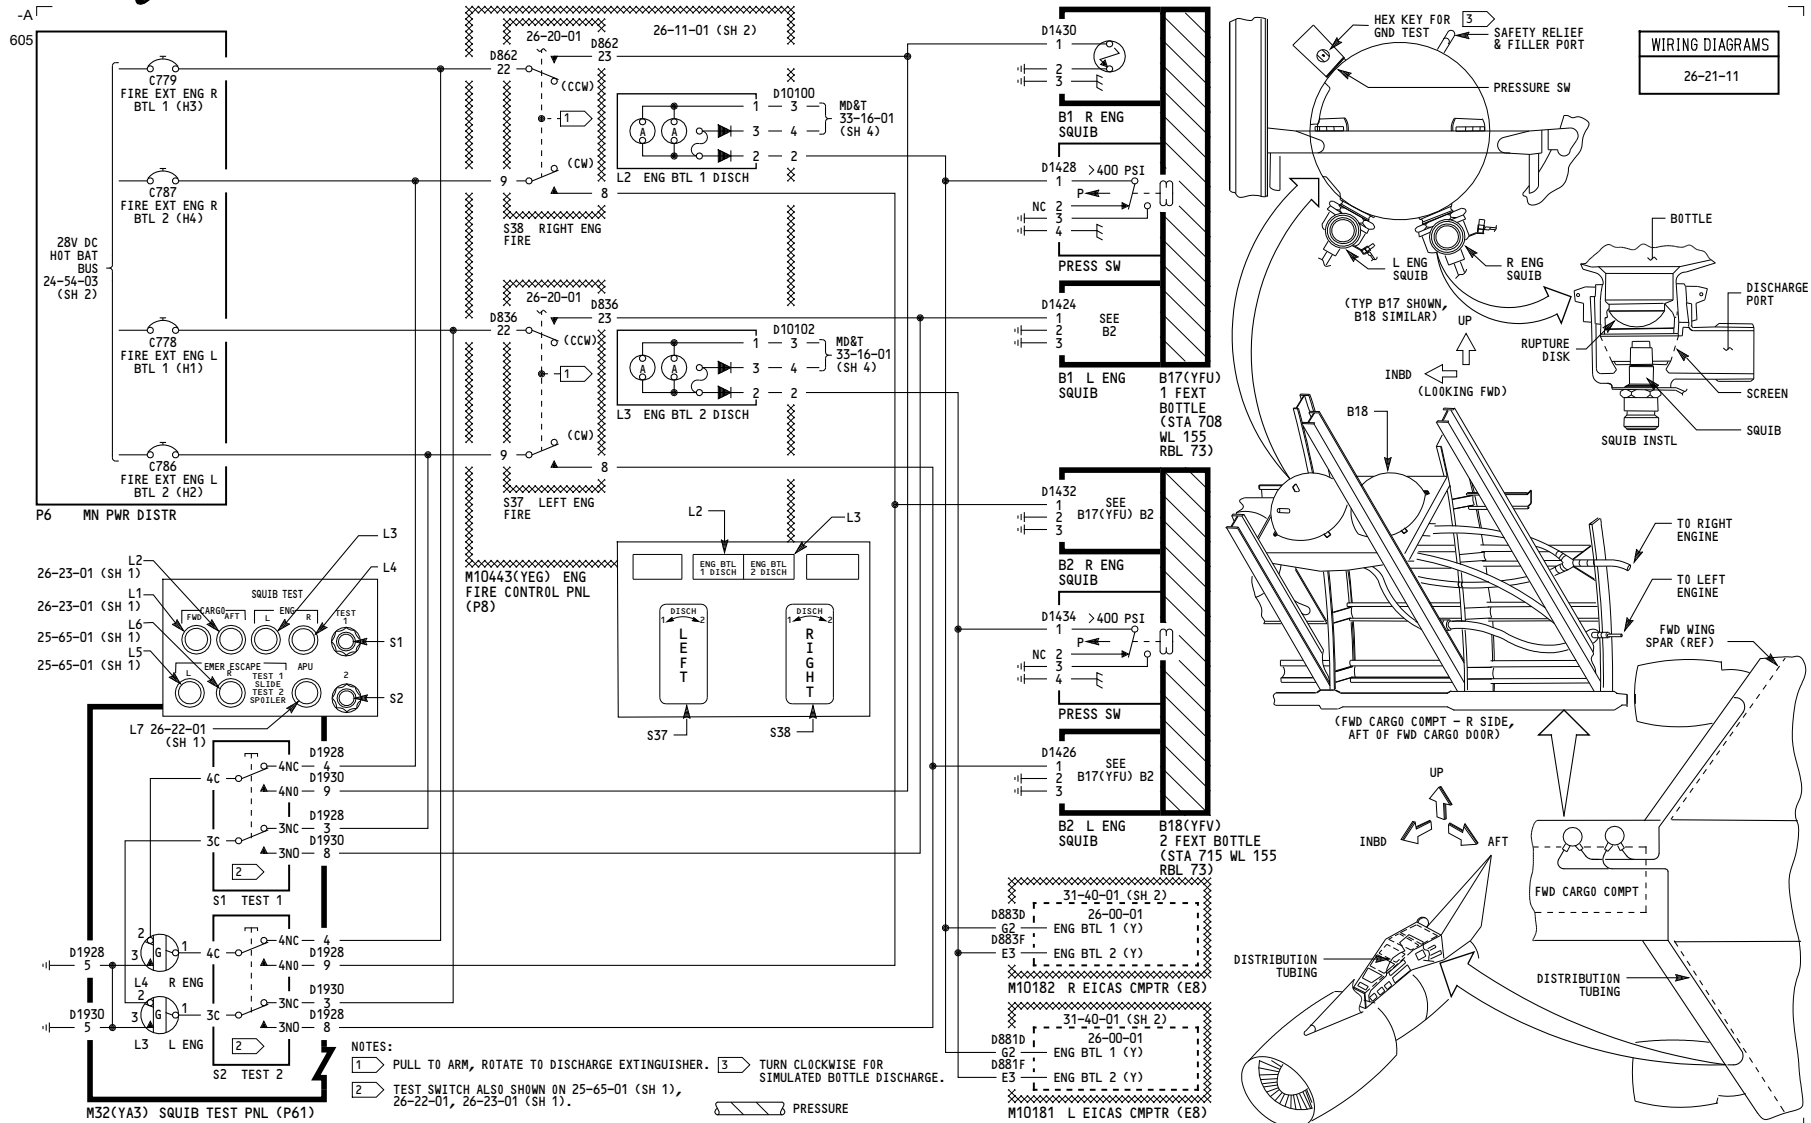

155-199


**FIRE EXTINGUISHING-  
ENGINE**

D280T232

**26-21-01**

Page 103

Jan 21/2005

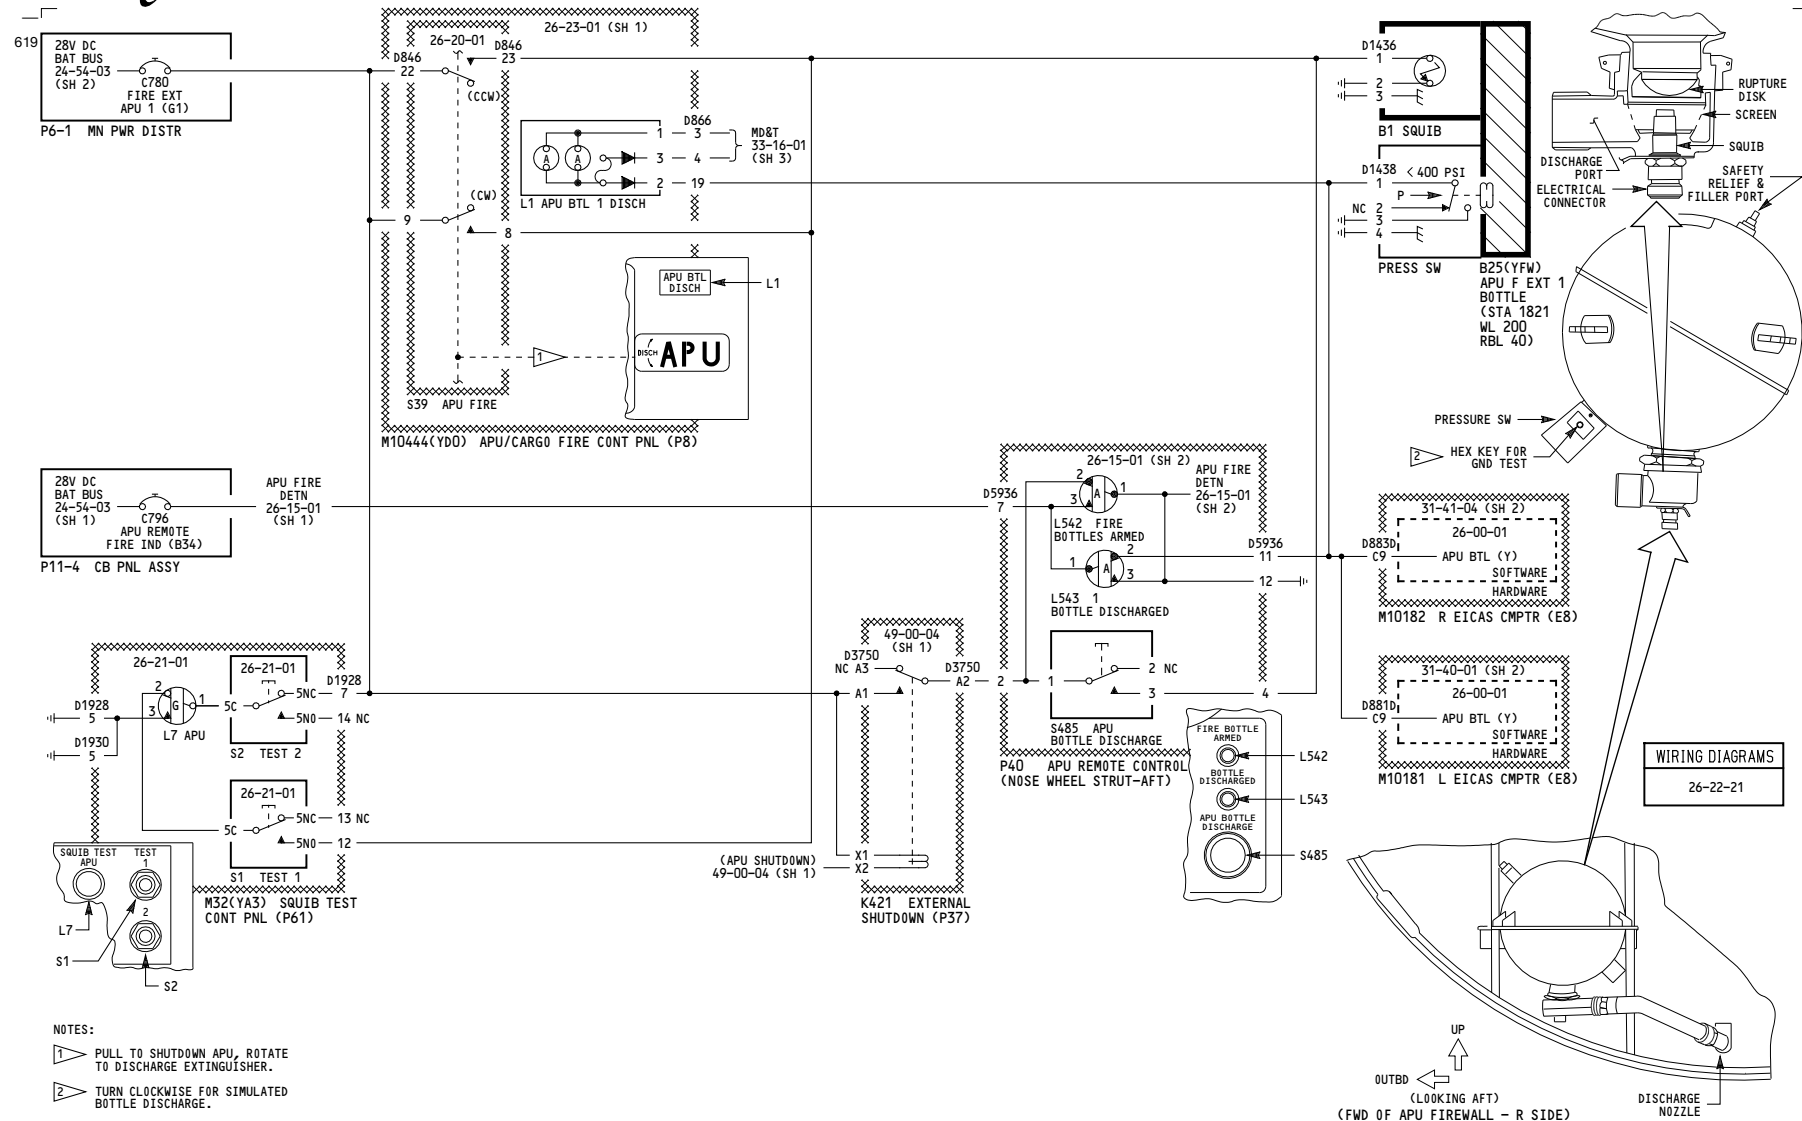

050-155, 162-165

## FIRE EXTINGUISHING-AUXILIARY POWER UNIT


Incorporates  
26-0066

D280T232

26-22-01

Page 101.1

Jan 21/2005

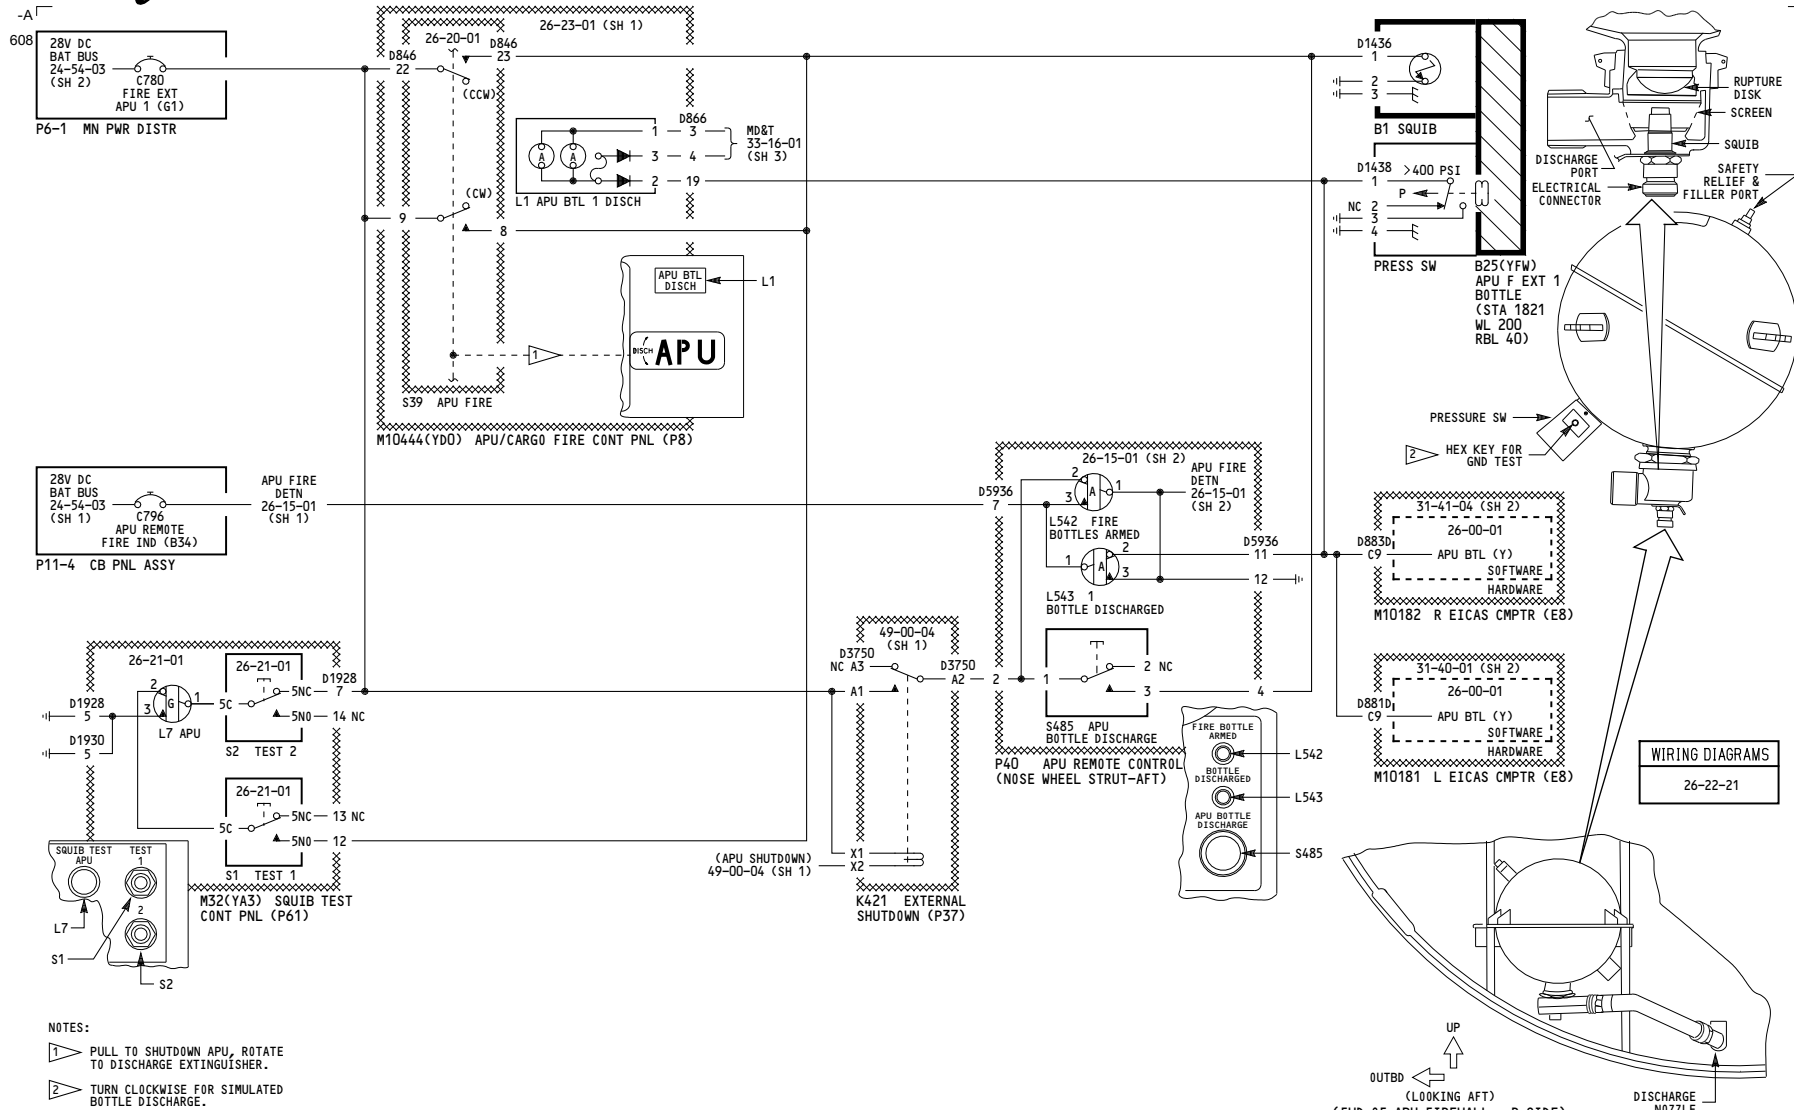

156-157, 166-199


**FIRE EXTINGUISHING-AUXILIARY POWER UNIT**

D280T232

**26-22-01**

Page 102

Jan 21/2005

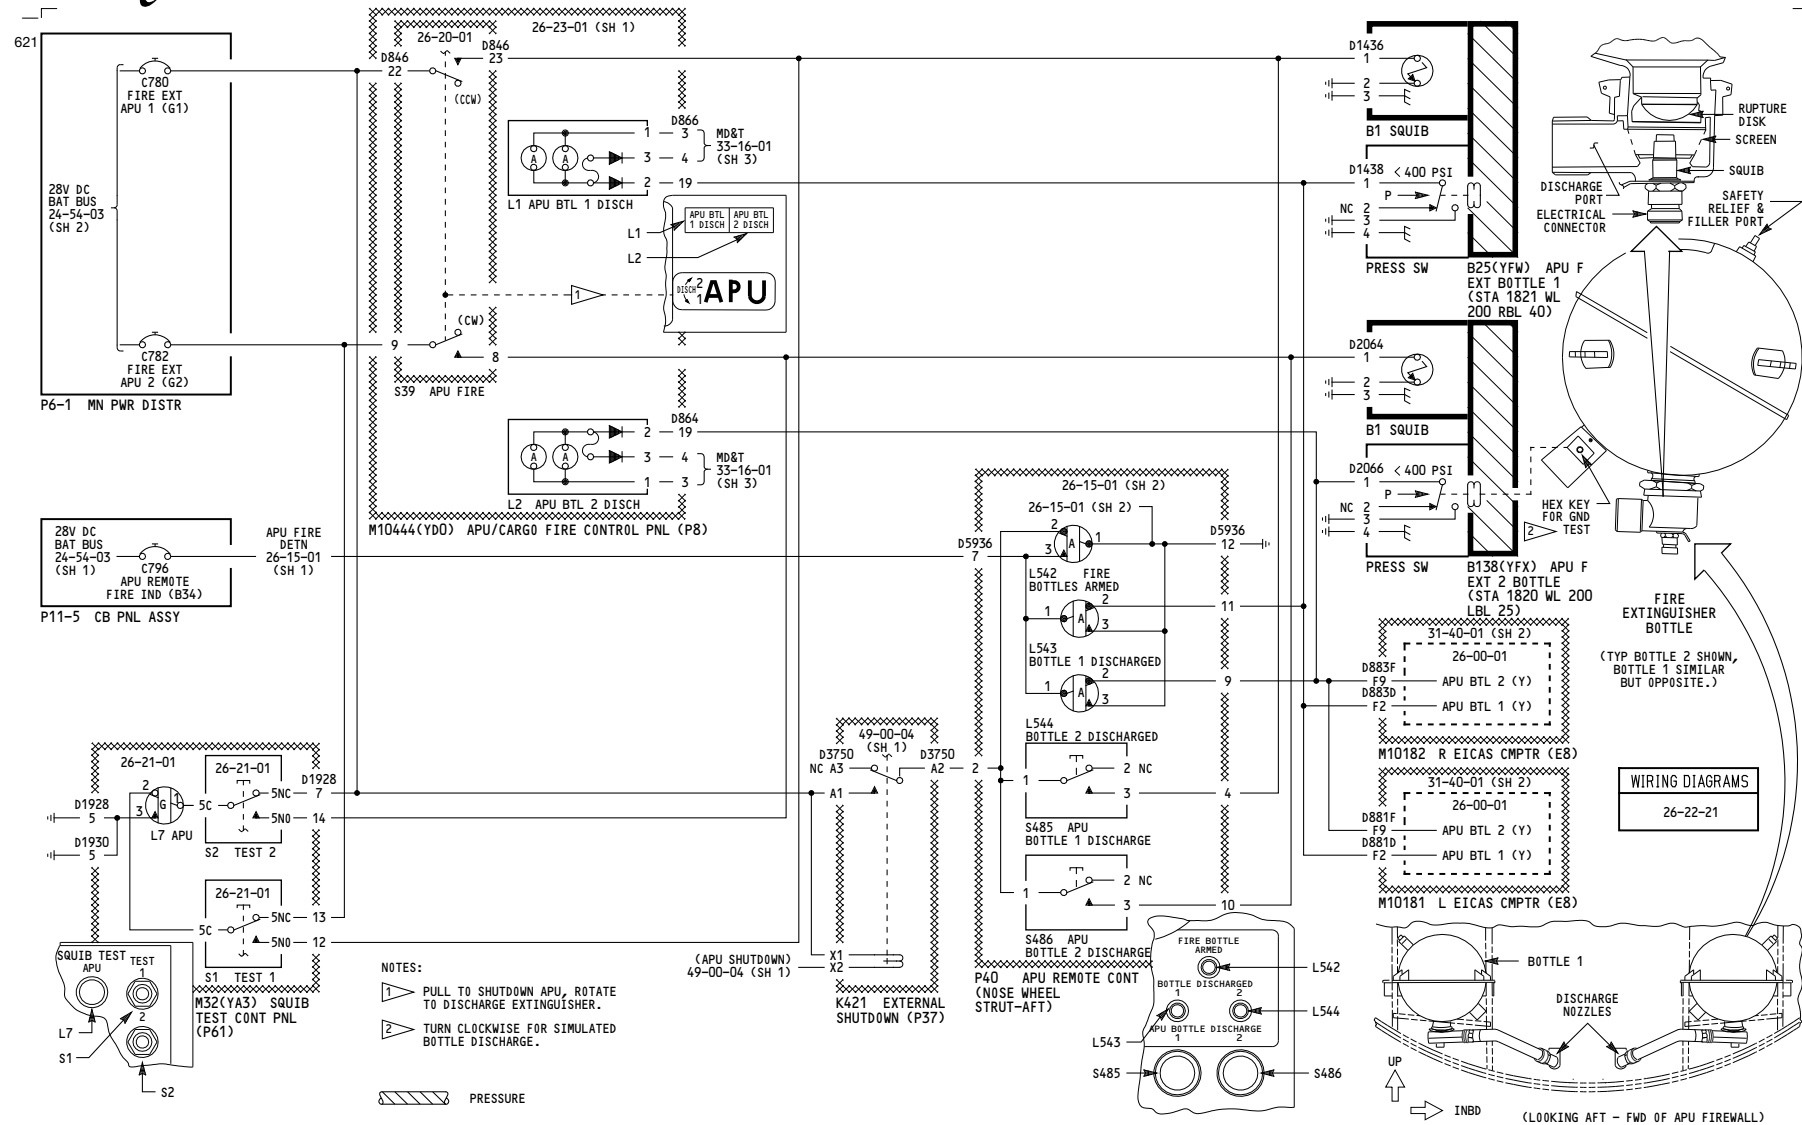

275-276

**FIRE EXTINGUISHING-  
AUXILIARY POWER UNIT**

Incorporates  
▶ 26-0066

**26-22-01**

Page 103.1

 
Jan 21/2005

D280T232



**26-22-01**





M10444(YD0) APU/CARGO FIRE CONTROL PNL (P8)

050-099

**FIRE EXTINGUISHER-  
LOWER CARGO COMPARTMENT**


D280T232

**26-23-01**

Page 101  
Sheet 1  
Jan 21/2005



└

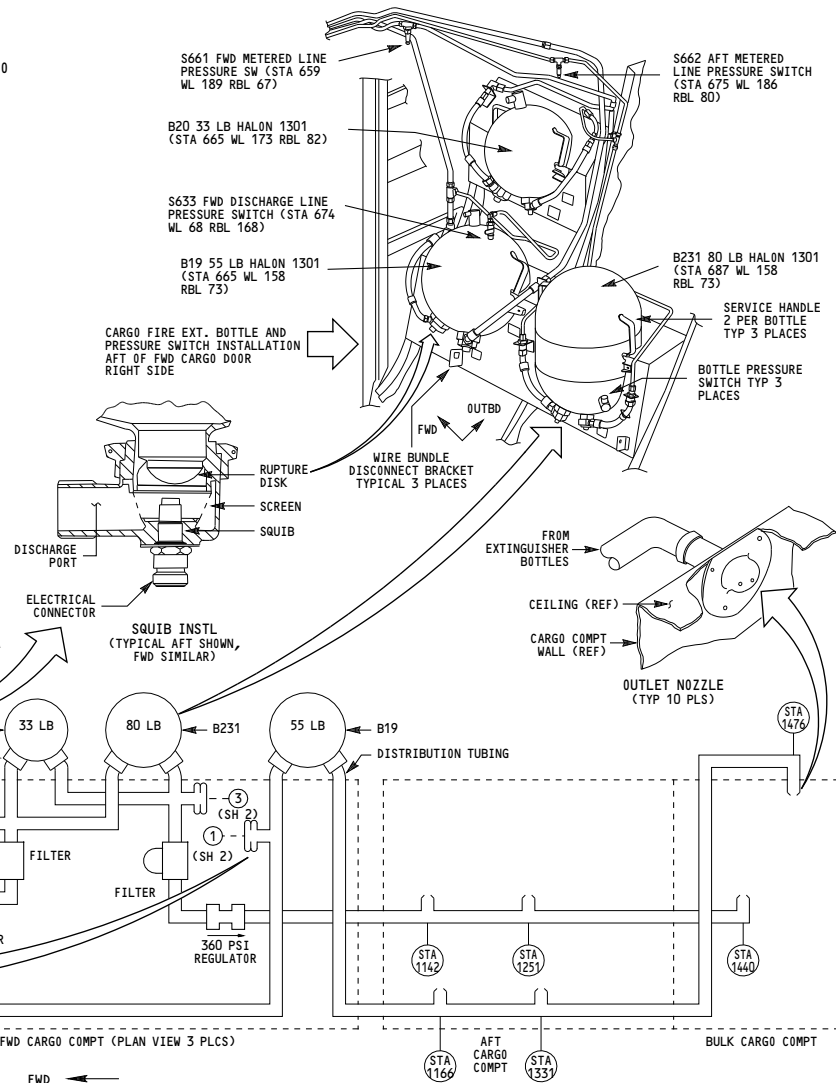
 PRESSURE

**FIRE EXTINGUISHER-  
LOWER CARGO COMPARTMENT**

D280T232

Page 101  
Sheet 2  
Jan 21/2005

-A  
645

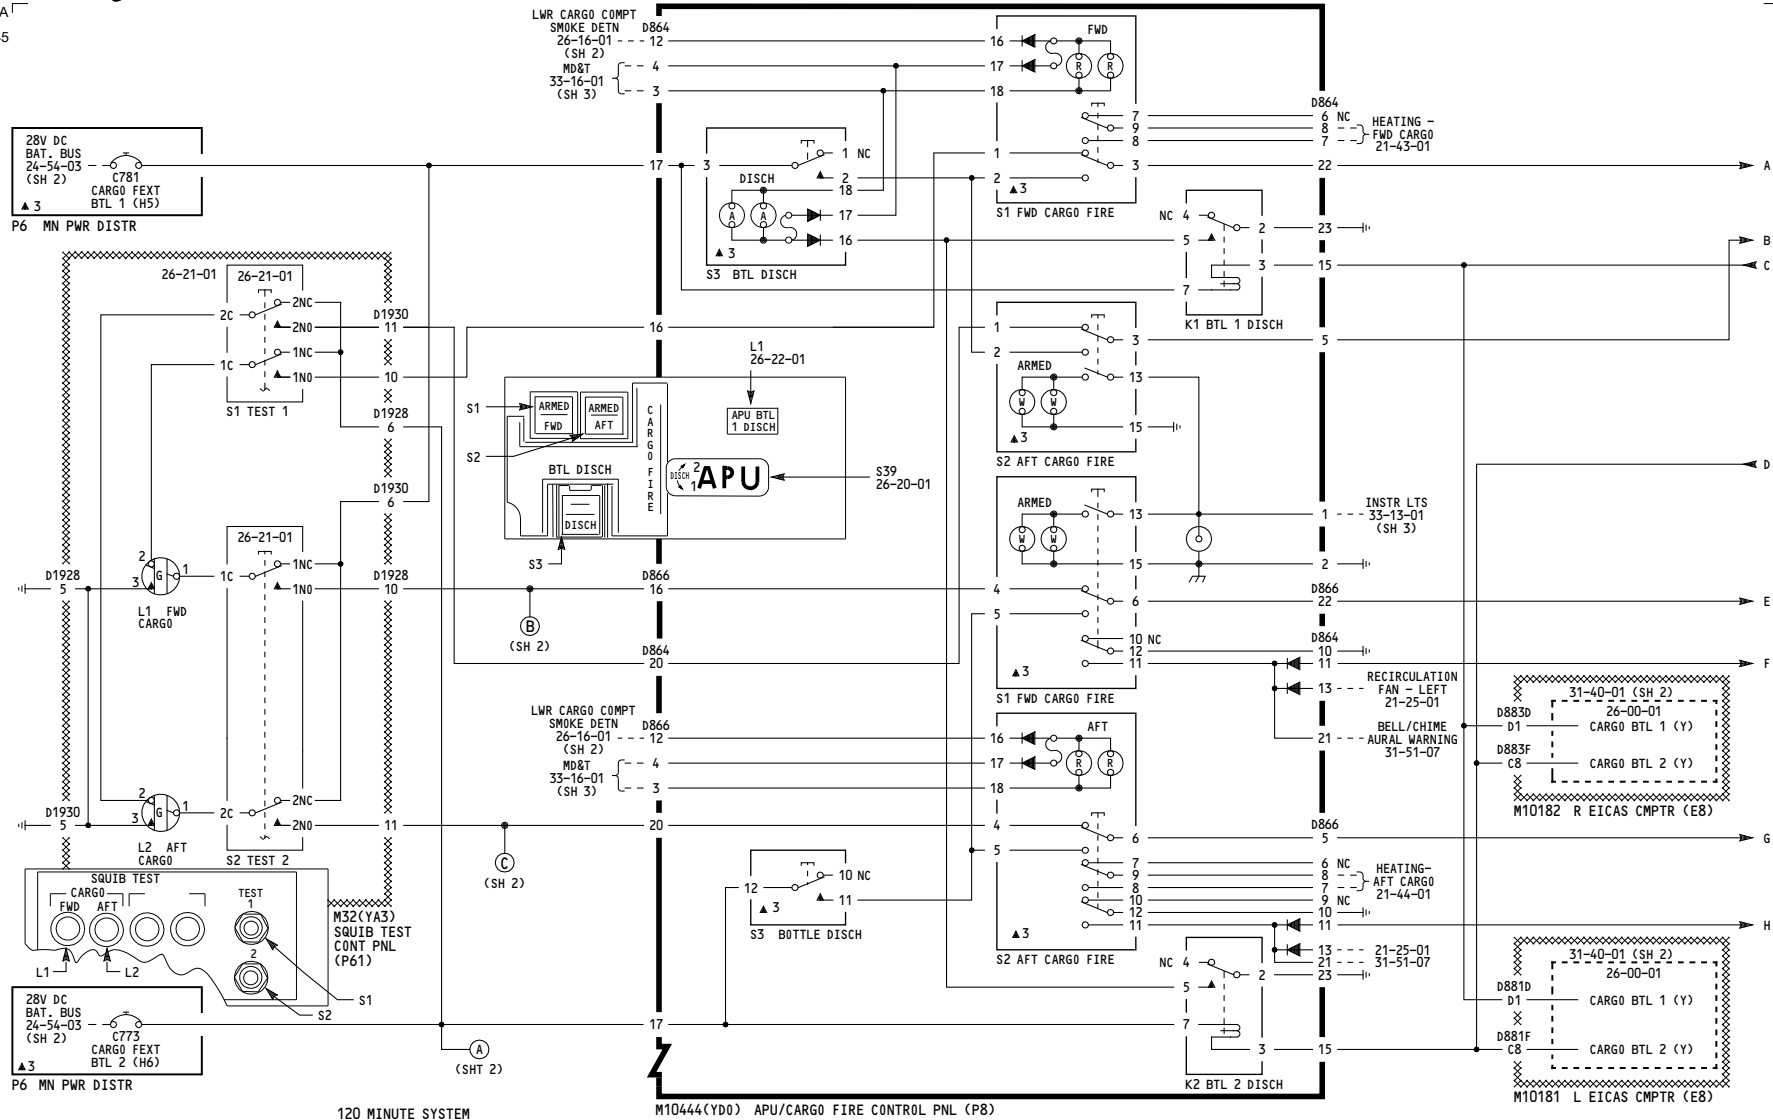



150-154

## FIRE EXTINGUISHER- LOWER CARGO COMPARTMENT

D280T232

**26-23-01**

Page 102.1  
Sheet 1  
Jan 21/2005

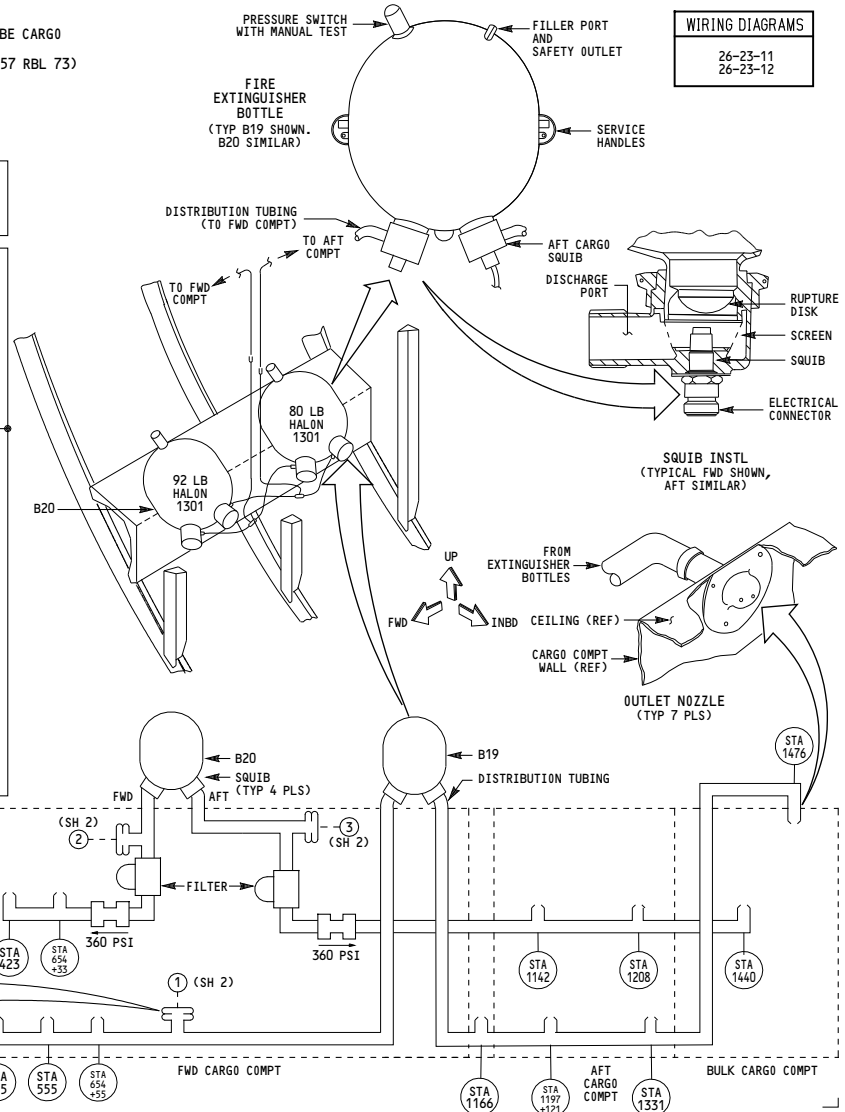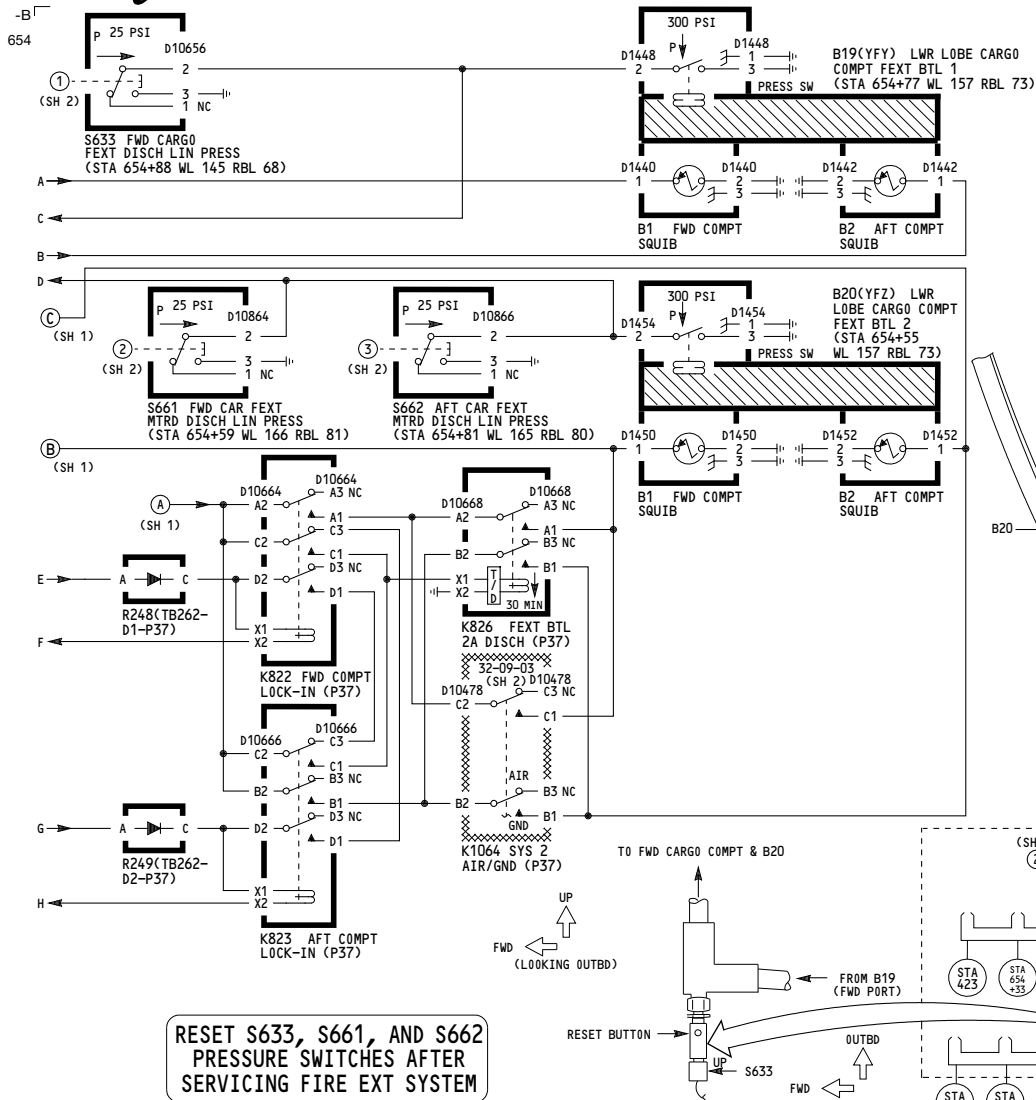

## FIRE EXTINGUISHER-LOWER CARGO COMPARTMENT


Incorporates  
26-0047

26-23-01



**FIRE EXTINGUISHER-  
LOWER CARGO COMPARTMENT**

**26-23-01**

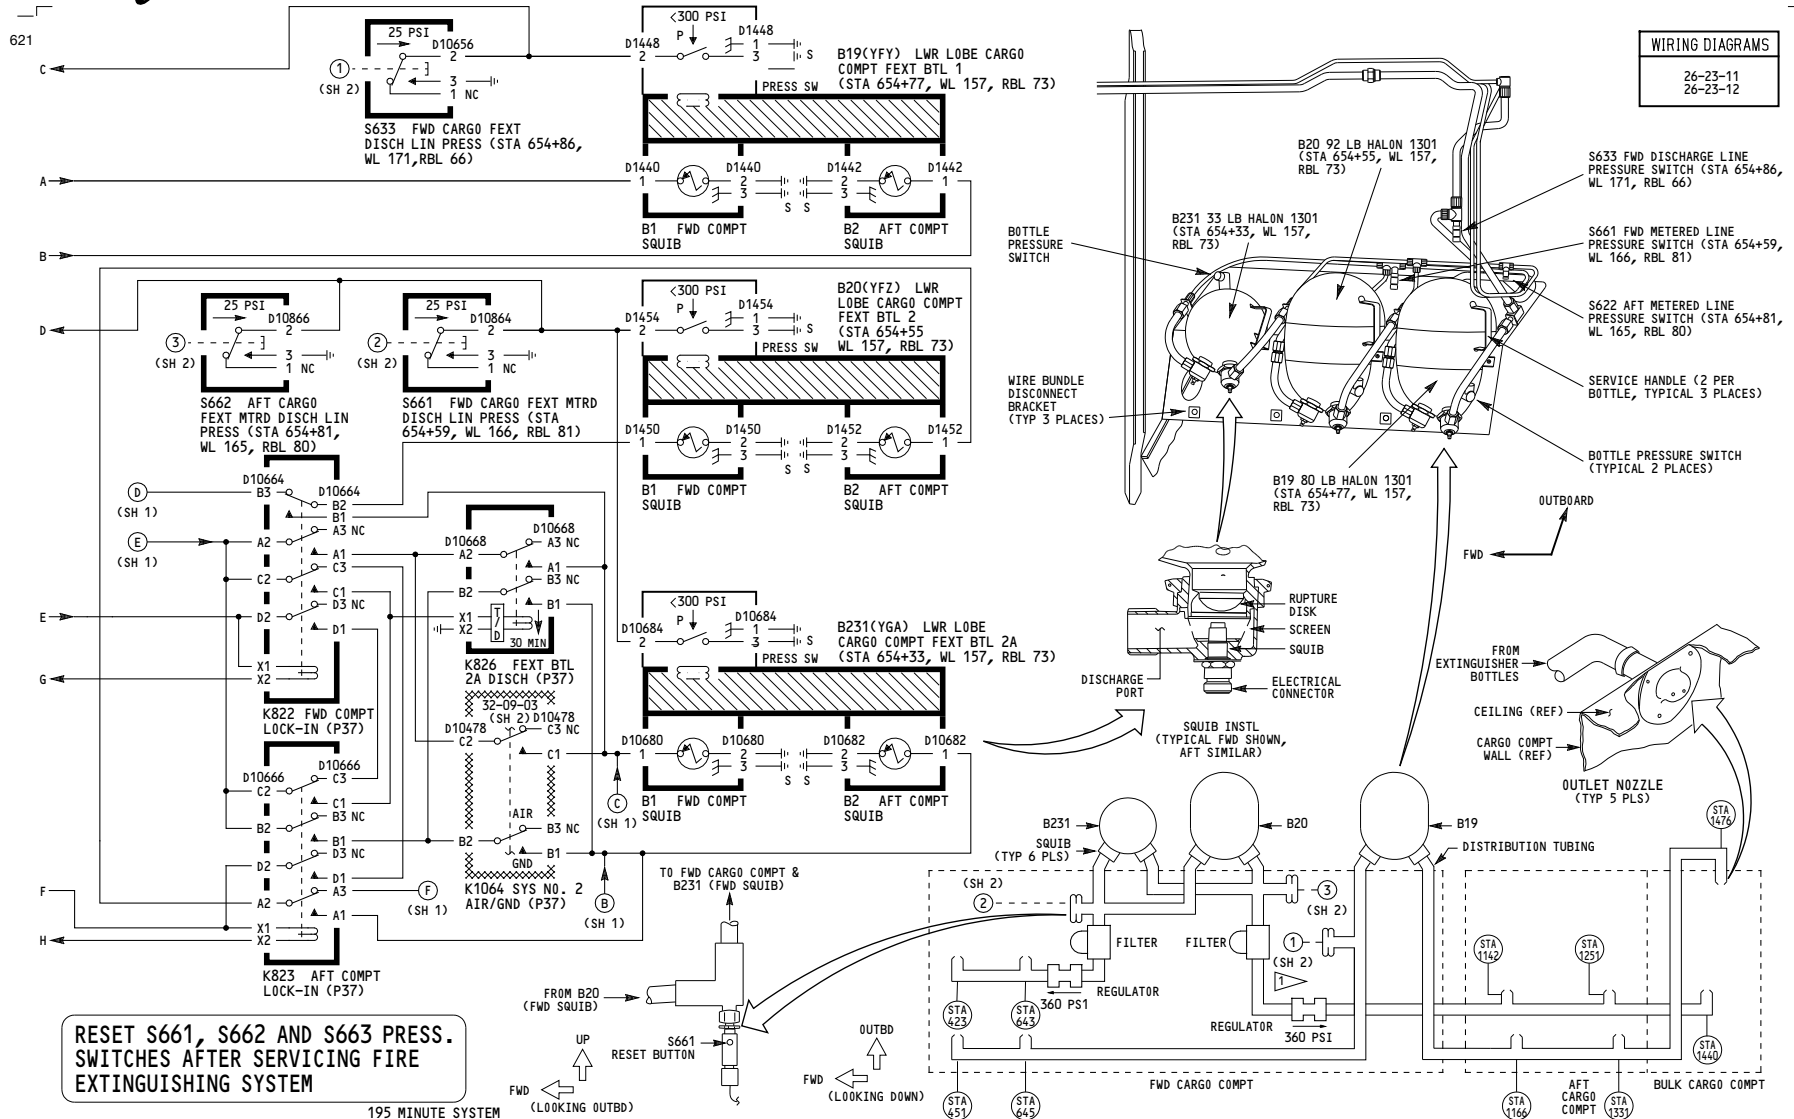

155-199

D280T232

26-23-01


Page 103  
Sheet 2  
Jan 21/2005

275-299

**FIRE EXTINGUISHER-  
LOWER CARGO COMPARTMENT**

D280T232

**26-23-01**

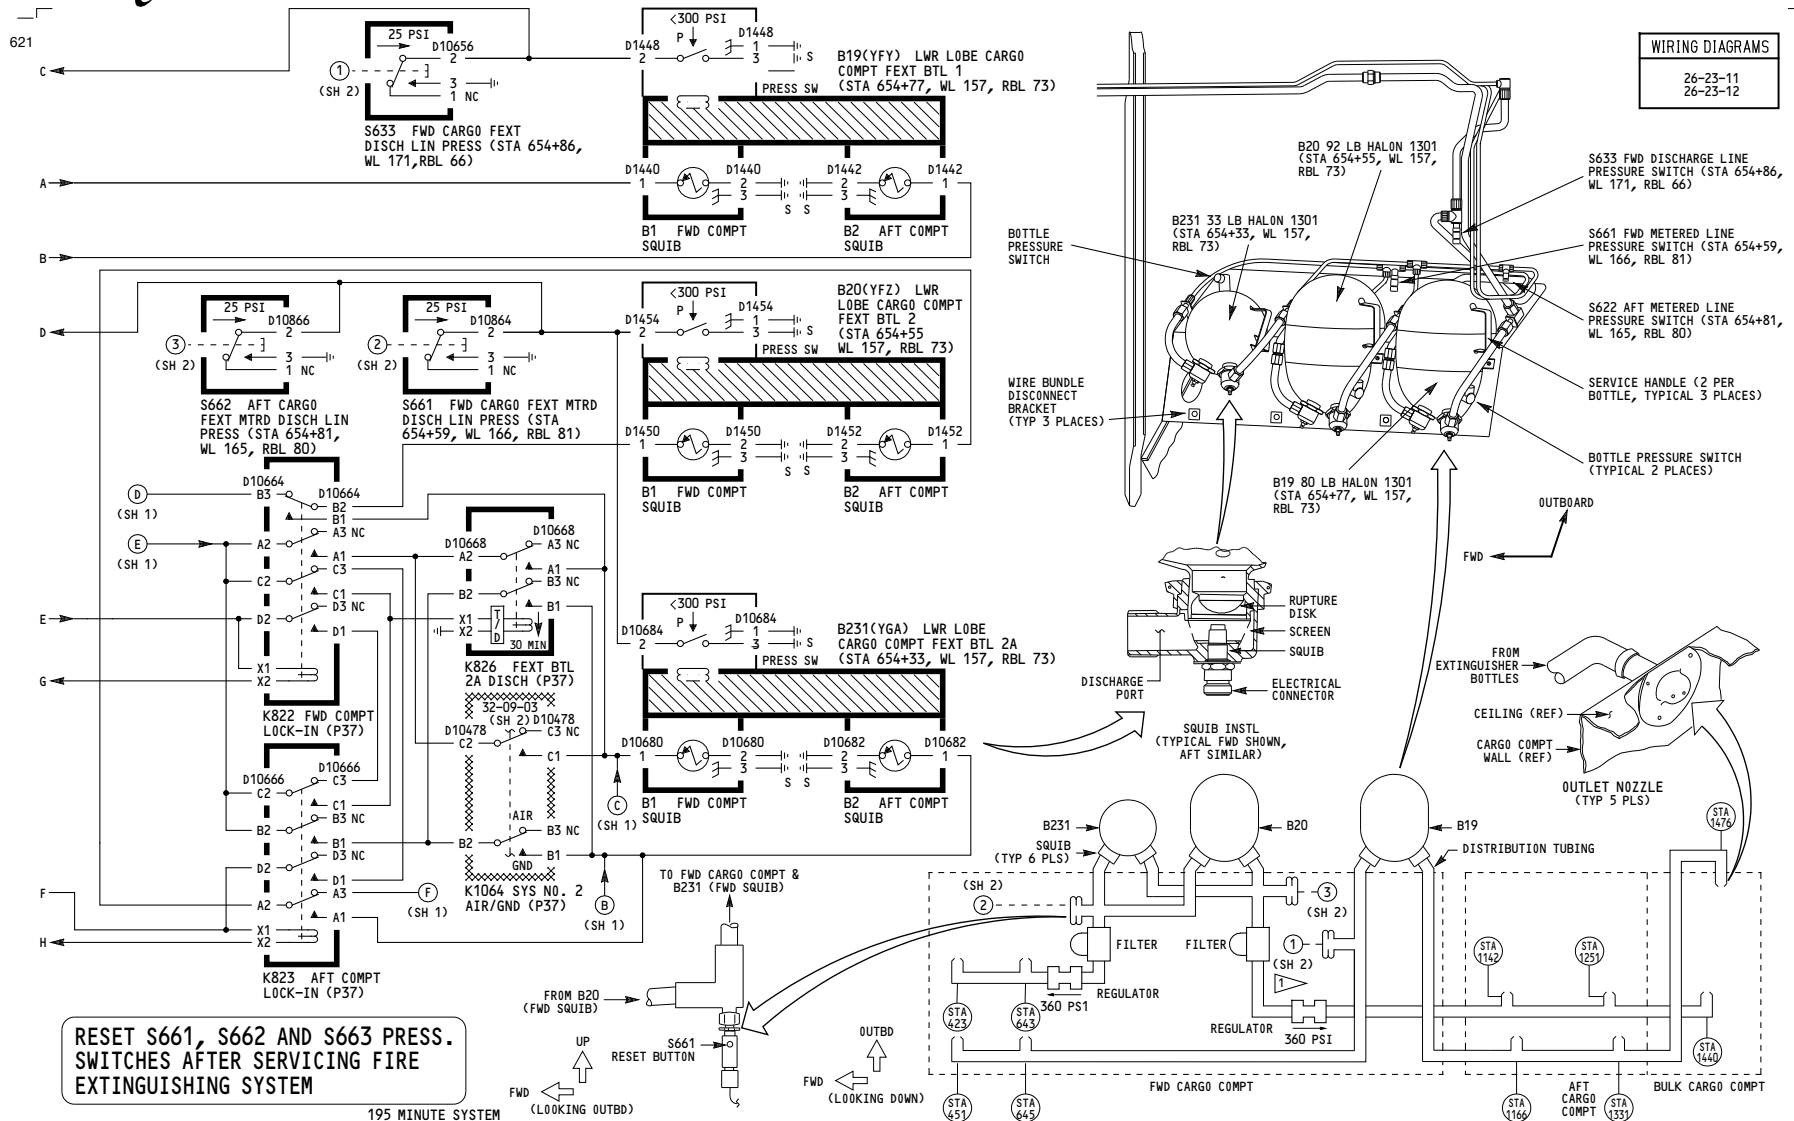

275-299

D280T232