

**CHAPTER**

**36**

**PNEUMATIC**



767-200/300

WIRING DIAGRAM MANUAL

CHAPTER 36  
PNEUMATIC

CH-SC-SU	Schem	Page	Sheet	Date	CH-SC-SU	Schem	Page	Sheet	Date
36-EFFECTIVE PAGES		1 thru 2		Aug 05/2009	36-11-52		1.1	1	Mar 09/2006
36-CONTENTS		1		Jun 28/2006		2.1	1	Jan 21/2005	
		2		Jun 28/2006			2	Jan 21/2005	
		3		Feb 06/2009		3.1	1	Mar 09/2006	
		4		Feb 06/2009			2	Jan 21/2005	
		5		Feb 06/2009		4	1	Jan 21/2005	
		6		Feb 06/2009			2	Jan 21/2005	
36-ALPHABETICAL INDEX		1		Jan 21/2005		5.1	1	Jan 21/2005	
		2		BLANK		6.1	1	Jan 21/2005	
36-11-11							2	Jan 21/2005	
		1		Jan 21/2005		6.2	1	Jan 21/2005	
36-11-21							2	Jan 21/2005	
		1		Jan 21/2005		7	1	Mar 09/2006	
36-11-31							2	Jan 21/2005	
		1		Jan 21/2005		7.1	1	Mar 09/2006	
36-11-41							2	Jan 21/2005	
		1	1	Jan 21/2005	36-11-61				
			2	Jan 21/2005		1.1	1	Jan 21/2005	
			3	Jan 21/2005			2	Jan 21/2005	
		2	1	Jan 21/2005			3	Jan 21/2005	
			2	Jan 21/2005		1.2	1	Feb 06/2009	
			3	Jan 21/2005			2	Feb 06/2009	
		3	1	Jan 21/2005			3	Feb 06/2009	
			2	Jan 21/2005		2.1	1	Jan 21/2005	
			3	Jan 21/2005			2	Jan 21/2005	
		3.1	1	Jan 21/2005			3	Jan 21/2005	
			2	Jan 21/2005		2.2	1	Feb 06/2009	
			3	Jan 21/2005			2	Feb 06/2009	
36-11-51							3	Feb 06/2009	
		1.1	1	Mar 09/2006		3.1	1	Jan 21/2005	
			2	Jan 21/2005			2	Jan 21/2005	
		2.1	1	Jan 21/2005			3	Jan 21/2005	
			2	Jan 21/2005		3.2	1	Feb 06/2009	
		3.1	1	Mar 09/2006			2	Feb 06/2009	
			2	Jan 21/2005			3	Feb 06/2009	
		4.1	1	Mar 09/2006		4.1	1	Jan 21/2005	
			2	Jan 21/2005			2	Jan 21/2005	
		5	1	Jan 21/2005			3	Jan 21/2005	
			2	Jan 21/2005		4.2	1	Feb 06/2009	
		6.1	1	Jan 21/2005			2	Feb 06/2009	
			2	Jan 21/2005			3	Feb 06/2009	
		7.1	1	Jan 21/2005		5	1	Jan 21/2005	
			2	Jan 21/2005			2	Jan 21/2005	
		7.2	1	Jan 21/2005		5.1	1	Feb 06/2009	
			2	Jan 21/2005			2	Feb 06/2009	
		8	1	Mar 09/2006		6.1	1	Jan 21/2005	
			2	Jan 21/2005			2	Jan 21/2005	
		8.1	1	Mar 09/2006			3	Jan 21/2005	
			2	Jan 21/2005		6.2	1	Feb 06/2009	

A = Added, R = Revised, D = Deleted, O = Overflow

36-EFFECTIVE PAGES

Page 1  
Aug 05/2009

D280T132



767-200/300

WIRING DIAGRAM MANUAL

CHAPTER 36  
PNEUMATIC

CH-SC-SU	Schem	Page	Sheet	Date	CH-SC-SU	Schem	Page	Sheet	Date
36-11-61 (cont.)		6.2			36-23-11				
			2	Feb 06/2009		1.1		1	Jan 21/2005
			3	Feb 06/2009				2	Jan 21/2005
	7.1		1	Jan 21/2005		2		1	Jan 21/2005
			2	Jan 21/2005				2	Jan 21/2005
			3	Jan 21/2005		3		1	Jan 21/2005
	7.2		1	Jan 21/2005				2	Jan 21/2005
			2	Feb 06/2009		4		1	Jan 21/2005
			3	Jan 21/2005				2	Jan 21/2005
	8		1	Jan 21/2005		5		1	Jan 21/2005
			2	Jan 21/2005				2	Jan 21/2005
			3	Jan 21/2005	36-23-21				
	8.1		1	Jan 21/2005		1.1		1	Jan 21/2005
			2	Feb 06/2009				2	Jan 21/2005
			3	Jan 21/2005		2		1	Jan 21/2005
36-11-62								2	Jan 21/2005
	1.1		1	Aug 15/2007		3		1	Jan 21/2005
			2	Jan 21/2005				2	Jan 21/2005
			3	Jan 21/2005		4		1	Jan 21/2005
	2.1		1	Jan 21/2005				2	Jan 21/2005
			2	Jan 21/2005					
			3	Jan 21/2005					
	3.1		1	Aug 15/2007					
			2	Jan 21/2005					
			3	Jan 21/2005					
	4		1	Jan 21/2005					
			2	Jan 21/2005					
	5.1		1	Aug 15/2007					
			2	Jan 21/2005					
			3	Jan 21/2005					
	6.1		1	Jan 21/2005					
			2	Jan 21/2005					
			3	Jan 21/2005					
	6.2		1	Jan 21/2005					
			2	Jan 21/2005					
			3	Jan 21/2005					
	7		1	Jan 21/2005					
			2	Jan 21/2005					
			3	Jan 21/2005					
	7.1		1	Aug 15/2007					
			2	Jan 21/2005					
			3	Jan 21/2005					
36-21-11									
	1			Jan 21/2005					
	2.1			Jan 21/2005					
	3			Jan 21/2005					
	4			Jan 21/2005					
36-22-11									
	1			Jan 21/2005					
36-22-21									
	1			Jan 21/2005					

A = Added, R = Revised, D = Deleted, O = Overflow

**36-EFFECTIVE PAGES**

Page 2  
Aug 05/2009

D280T132



767-200/300

WIRING DIAGRAM MANUAL

CHAPTER 36  
PNEUMATIC

Title	CH-SC-SU	Schem	Page	Sheet	Date	Effectivity
<b>AIR SUPPLY DISTRIBUTION SYSTEM</b>						
AIR SUPPLY- LEFT ISOLATION VALVE CONTROL	36-11-11		1		Jan 21/2005	ALL
AIR SUPPLY- RIGHT ISOLATION VALVE CONTROL	36-11-21		1		Jan 21/2005	ALL
AIR SUPPLY- CENTER ISOLATION VALVE CONTROL	36-11-31		1		Jan 21/2005	ALL
AIR SUPPLY-AUXILIARY POWER UNIT AIR SUPPLY VALVE CONTROL	36-11-41		1	1	Jan 21/2005	050-099 162-199
				2	Jan 21/2005	050-099 162-199
				3	Jan 21/2005	050-099 162-199
			2	1	Jan 21/2005	150-157
				2	Jan 21/2005	150-157
				3	Jan 21/2005	150-157
			3	1	Jan 21/2005	275-299
				2	Jan 21/2005	275-299
				3	Jan 21/2005	275-299
			3.1	1	Jan 21/2005	275-276
				2	Jan 21/2005	275-276
				3	Jan 21/2005	275-276
			AIR SUPPLY- LEFT PRESSURE REGULATION & SHUTOFF	36-11-51		1.1
	2	Jan 21/2005				050-051 163-165
2.1	1	Jan 21/2005				150-154
	2	Jan 21/2005				150-154
3.1	1	Mar 09/2006				155
	2	Jan 21/2005				155
4.1	1	Mar 09/2006				156 166
	2	Jan 21/2005				156 166
5	1	Jan 21/2005				157 167-199 277-299
	2	Jan 21/2005				157 167-199 277-299
6.1	1	Jan 21/2005				162

**36-CONTENTS**



767-200/300

WIRING DIAGRAM MANUAL

CHAPTER 36  
PNEUMATIC

Title	CH-SC-SU	Schem	Page	Sheet	Date	Effectivity
AIR SUPPLY- LEFT PRESSURE REGULATION & SHUTOFF (cont.)	36-11-51			2	Jan 21/2005	162
			7.1	1	Jan 21/2005	275
				2	Jan 21/2005	275
			7.2	1	Jan 21/2005	275
				2	Jan 21/2005	275
			8	1	Mar 09/2006	276
				2	Jan 21/2005	276
			8.1	1	Mar 09/2006	276
				2	Jan 21/2005	276
		AIR SUPPLY- RIGHT PRESSURE REGULATION & SHUTOFF	36-11-52		1.1	1
				2	Jan 21/2005	050-051 155 163-165
	2.1			1	Jan 21/2005	150-154
				2	Jan 21/2005	150-154
	3.1			1	Mar 09/2006	156 166
				2	Jan 21/2005	156 166
	4			1	Jan 21/2005	157 167-199 277-299
				2	Jan 21/2005	157 167-199 277-299
	5.1			1	Jan 21/2005	162
				2	Jan 21/2005	162
	6.1			1	Jan 21/2005	275
				2	Jan 21/2005	275
	6.2			1	Jan 21/2005	275
				2	Jan 21/2005	275
	7			1	Mar 09/2006	276
				2	Jan 21/2005	276
	7.1			1	Mar 09/2006	276
		2	Jan 21/2005	276		
AIR SUPPLY BLEED AIR- LEFT ENGINE HIGH PRESSURE CONTROL	36-11-61		1.1	1	Jan 21/2005	050-051
				2	Jan 21/2005	050-051

36-CONTENTS



767-200/300

# WIRING DIAGRAM MANUAL

## CHAPTER 36 PNEUMATIC

Title	CH-SC-SU	Schem	Page	Sheet	Date	Effectivity
AIR SUPPLY BLEED AIR- LEFT ENGINE HIGH PRESSURE CONTROL (cont.)	36-11-61			3	Jan 21/2005	050-051
			1.2	1	Feb 06/2009	050-051
				2	Feb 06/2009	050-051
				3	Feb 06/2009	050-051
			2.1	1	Jan 21/2005	150-154
				2	Jan 21/2005	150-154
				3	Jan 21/2005	150-154
			2.2	1	Feb 06/2009	150-154
				2	Feb 06/2009	150-154
				3	Feb 06/2009	150-154
			3.1	1	Jan 21/2005	155 163-165
				2	Jan 21/2005	155 163-165
				3	Jan 21/2005	155 163-165
			3.2	1	Feb 06/2009	155 163-165
				2	Feb 06/2009	155 163-165
				3	Feb 06/2009	155 163-165
			4.1	1	Jan 21/2005	156 166
				2	Jan 21/2005	156 166
				3	Jan 21/2005	156 166
			4.2	1	Feb 06/2009	156 166
				2	Feb 06/2009	156 166
				3	Feb 06/2009	156 166
			5	1	Jan 21/2005	157 167-199 277-299
				2	Jan 21/2005	157 167-199 277-299
			5.1	1	Feb 06/2009	157 167 277-280
				2	Feb 06/2009	157 167 277-280
			6.1	1	Jan 21/2005	162
				2	Jan 21/2005	162
				3	Jan 21/2005	162
			6.2	1	Feb 06/2009	162
		2	Feb 06/2009	162		
		3	Feb 06/2009	162		

### 36-CONTENTS

Page 3  
Feb 06/2009

D280T132



767-200/300

WIRING DIAGRAM MANUAL

CHAPTER 36  
PNEUMATIC

Title	CH-SC-SU	Schem	Page	Sheet	Date	Effectivity			
AIR SUPPLY BLEED AIR- LEFT ENGINE HIGH PRESSURE CONTROL (cont.)	36-11-61		7.1	1	Jan 21/2005	275			
				2	Jan 21/2005	275			
				3	Jan 21/2005	275			
			7.2	1	Jan 21/2005	275			
				2	Feb 06/2009	275			
				3	Jan 21/2005	275			
			8	1	Jan 21/2005	276			
				2	Jan 21/2005	276			
				3	Jan 21/2005	276			
			8.1	1	Jan 21/2005	276			
				2	Feb 06/2009	276			
				3	Jan 21/2005	276			
			AIR SUPPLY BLEED AIR- RIGHT ENGINE HIGH PRESSURE CONTROL	36-11-62		1.1	1	Aug 15/2007	050-051 155 163-165
							2	Jan 21/2005	050-051 155 163-165
							3	Jan 21/2005	050-051 155 163-165
2.1	1	Jan 21/2005				150-154			
	2	Jan 21/2005				150-154			
	3	Jan 21/2005				150-154			
3.1	1	Aug 15/2007				156 166			
	2	Jan 21/2005				156 166			
	3	Jan 21/2005				156 166			
4	1	Jan 21/2005				157 167-199 277-299			
	2	Jan 21/2005				157 167-199 277-299			
5.1	1	Aug 15/2007				162			
	2	Jan 21/2005				162			
	3	Jan 21/2005				162			
6.1	1	Jan 21/2005				275			
	2	Jan 21/2005				275			
	3	Jan 21/2005				275			
6.2	1	Jan 21/2005				275			
	2	Jan 21/2005				275			

36-CONTENTS



767-200/300

WIRING DIAGRAM MANUAL

CHAPTER 36  
PNEUMATIC

Title	CH-SC-SU	Schem	Page	Sheet	Date	Effectivity
AIR SUPPLY BLEED AIR- RIGHT ENGINE HIGH PRESSURE CONTROL (cont.)	36-11-62			3	Jan 21/2005	275
			7	1	Jan 21/2005	276
				2	Jan 21/2005	276
				3	Jan 21/2005	276
			7.1	1	Aug 15/2007	276
				2	Jan 21/2005	276
				3	Jan 21/2005	276
<b><u>AIR SUPPLY PRESSURE INDICATING SYSTEM</u></b>						
AIR SUPPLY DUCT PRESSURE INDICATION	36-21-11		1		Jan 21/2005	050-099 163-165 275-276
			2.1		Jan 21/2005	150-155
			3		Jan 21/2005	156-157 166-199 277-299
			4		Jan 21/2005	162
<b><u>AIR SUPPLY TEMPERATURE INDICATING SYSTEM</u></b>						
AIR SUPPLY OVERHEAT INDICATION	36-22-11		1		Jan 21/2005	ALL
BLEED AIR PRECOOLER- LEFT & RIGHT TEMPERATURE INDICATION	36-22-21		1		Jan 21/2005	ALL
<b><u>AIR SUPPLY BITE SYSTEM</u></b>						
AIR SUPPLY BUILT-IN TEST EQUIPMENT- LEFT	36-23-11		1.1	1	Jan 21/2005	050-051 163-165
				2	Jan 21/2005	050-051 163-165
			2	1	Jan 21/2005	150-155 275-276
				2	Jan 21/2005	150-155 275-276
			3	1	Jan 21/2005	156 166
				2	Jan 21/2005	156 166
			4	1	Jan 21/2005	157 167-199 277-299
				2	Jan 21/2005	157 167-199 277-299
			5	1	Jan 21/2005	162
				2	Jan 21/2005	162
AIR SUPPLY BUILT-IN TEST EQUIPMENT- RIGHT	36-23-21		1.1	1	Jan 21/2005	050-051 163-165
				2	Jan 21/2005	050-051 163-165

**36-CONTENTS**





767-200/300

**WIRING DIAGRAM MANUAL**

**CHAPTER 36  
PNEUMATIC**

<b>Title</b>	<b>CH-SC-SU</b>	<b>Schem</b>	<b>Page</b>	<b>Sheet</b>	<b>Date</b>	<b>Effectivity</b>	
AIR SUPPLY BUILT-IN TEST EQUIPMENT- RIGHT (cont.)	36-23-21		2	1	Jan 21/2005	150-155 275-276	
				2	Jan 21/2005	150-155 275-276	
			3	1	Jan 21/2005	156-157 166-199 277-299	
				2	Jan 21/2005	156-157 166-199 277-299	
				4	1	Jan 21/2005	162
					2	Jan 21/2005	162

**36-CONTENTS**

Page 6  
Feb 06/2009

D280T132



767-200/300

## WIRING DIAGRAM MANUAL


### CHAPTER 36 PNEUMATIC

CH-SC-SU	Title
36-11-61	AIR SUPPLY BLEED AIR- LEFT ENGINE HIGH PRESSURE CONTROL
36-11-62	AIR SUPPLY BLEED AIR- RIGHT ENGINE HIGH PRESSURE CONTROL
36-23-11	AIR SUPPLY BUILT-IN TEST EQUIPMENT- LEFT
36-23-21	AIR SUPPLY BUILT-IN TEST EQUIPMENT- RIGHT
36-21-11	AIR SUPPLY DUCT PRESSURE INDICATION
36-22-11	AIR SUPPLY OVERHEAT INDICATION
36-11-31	AIR SUPPLY- CENTER ISOLATION VALVE CONTROL
36-11-11	AIR SUPPLY- LEFT ISOLATION VALVE CONTROL
36-11-51	AIR SUPPLY- LEFT PRESSURE REGULATION & SHUTOFF
36-11-21	AIR SUPPLY- RIGHT ISOLATION VALVE CONTROL
36-11-52	AIR SUPPLY- RIGHT PRESSURE REGULATION & SHUTOFF
36-11-41	AIR SUPPLY-AUXILIARY POWER UNIT AIR SUPPLY VALVE CONTROL
36-22-21	BLEED AIR PRECOOLER- LEFT & RIGHT TEMPERATURE INDICATION

## 36-ALPHABETICAL INDEX

D280T132

Page 1  
Jan 21/2005

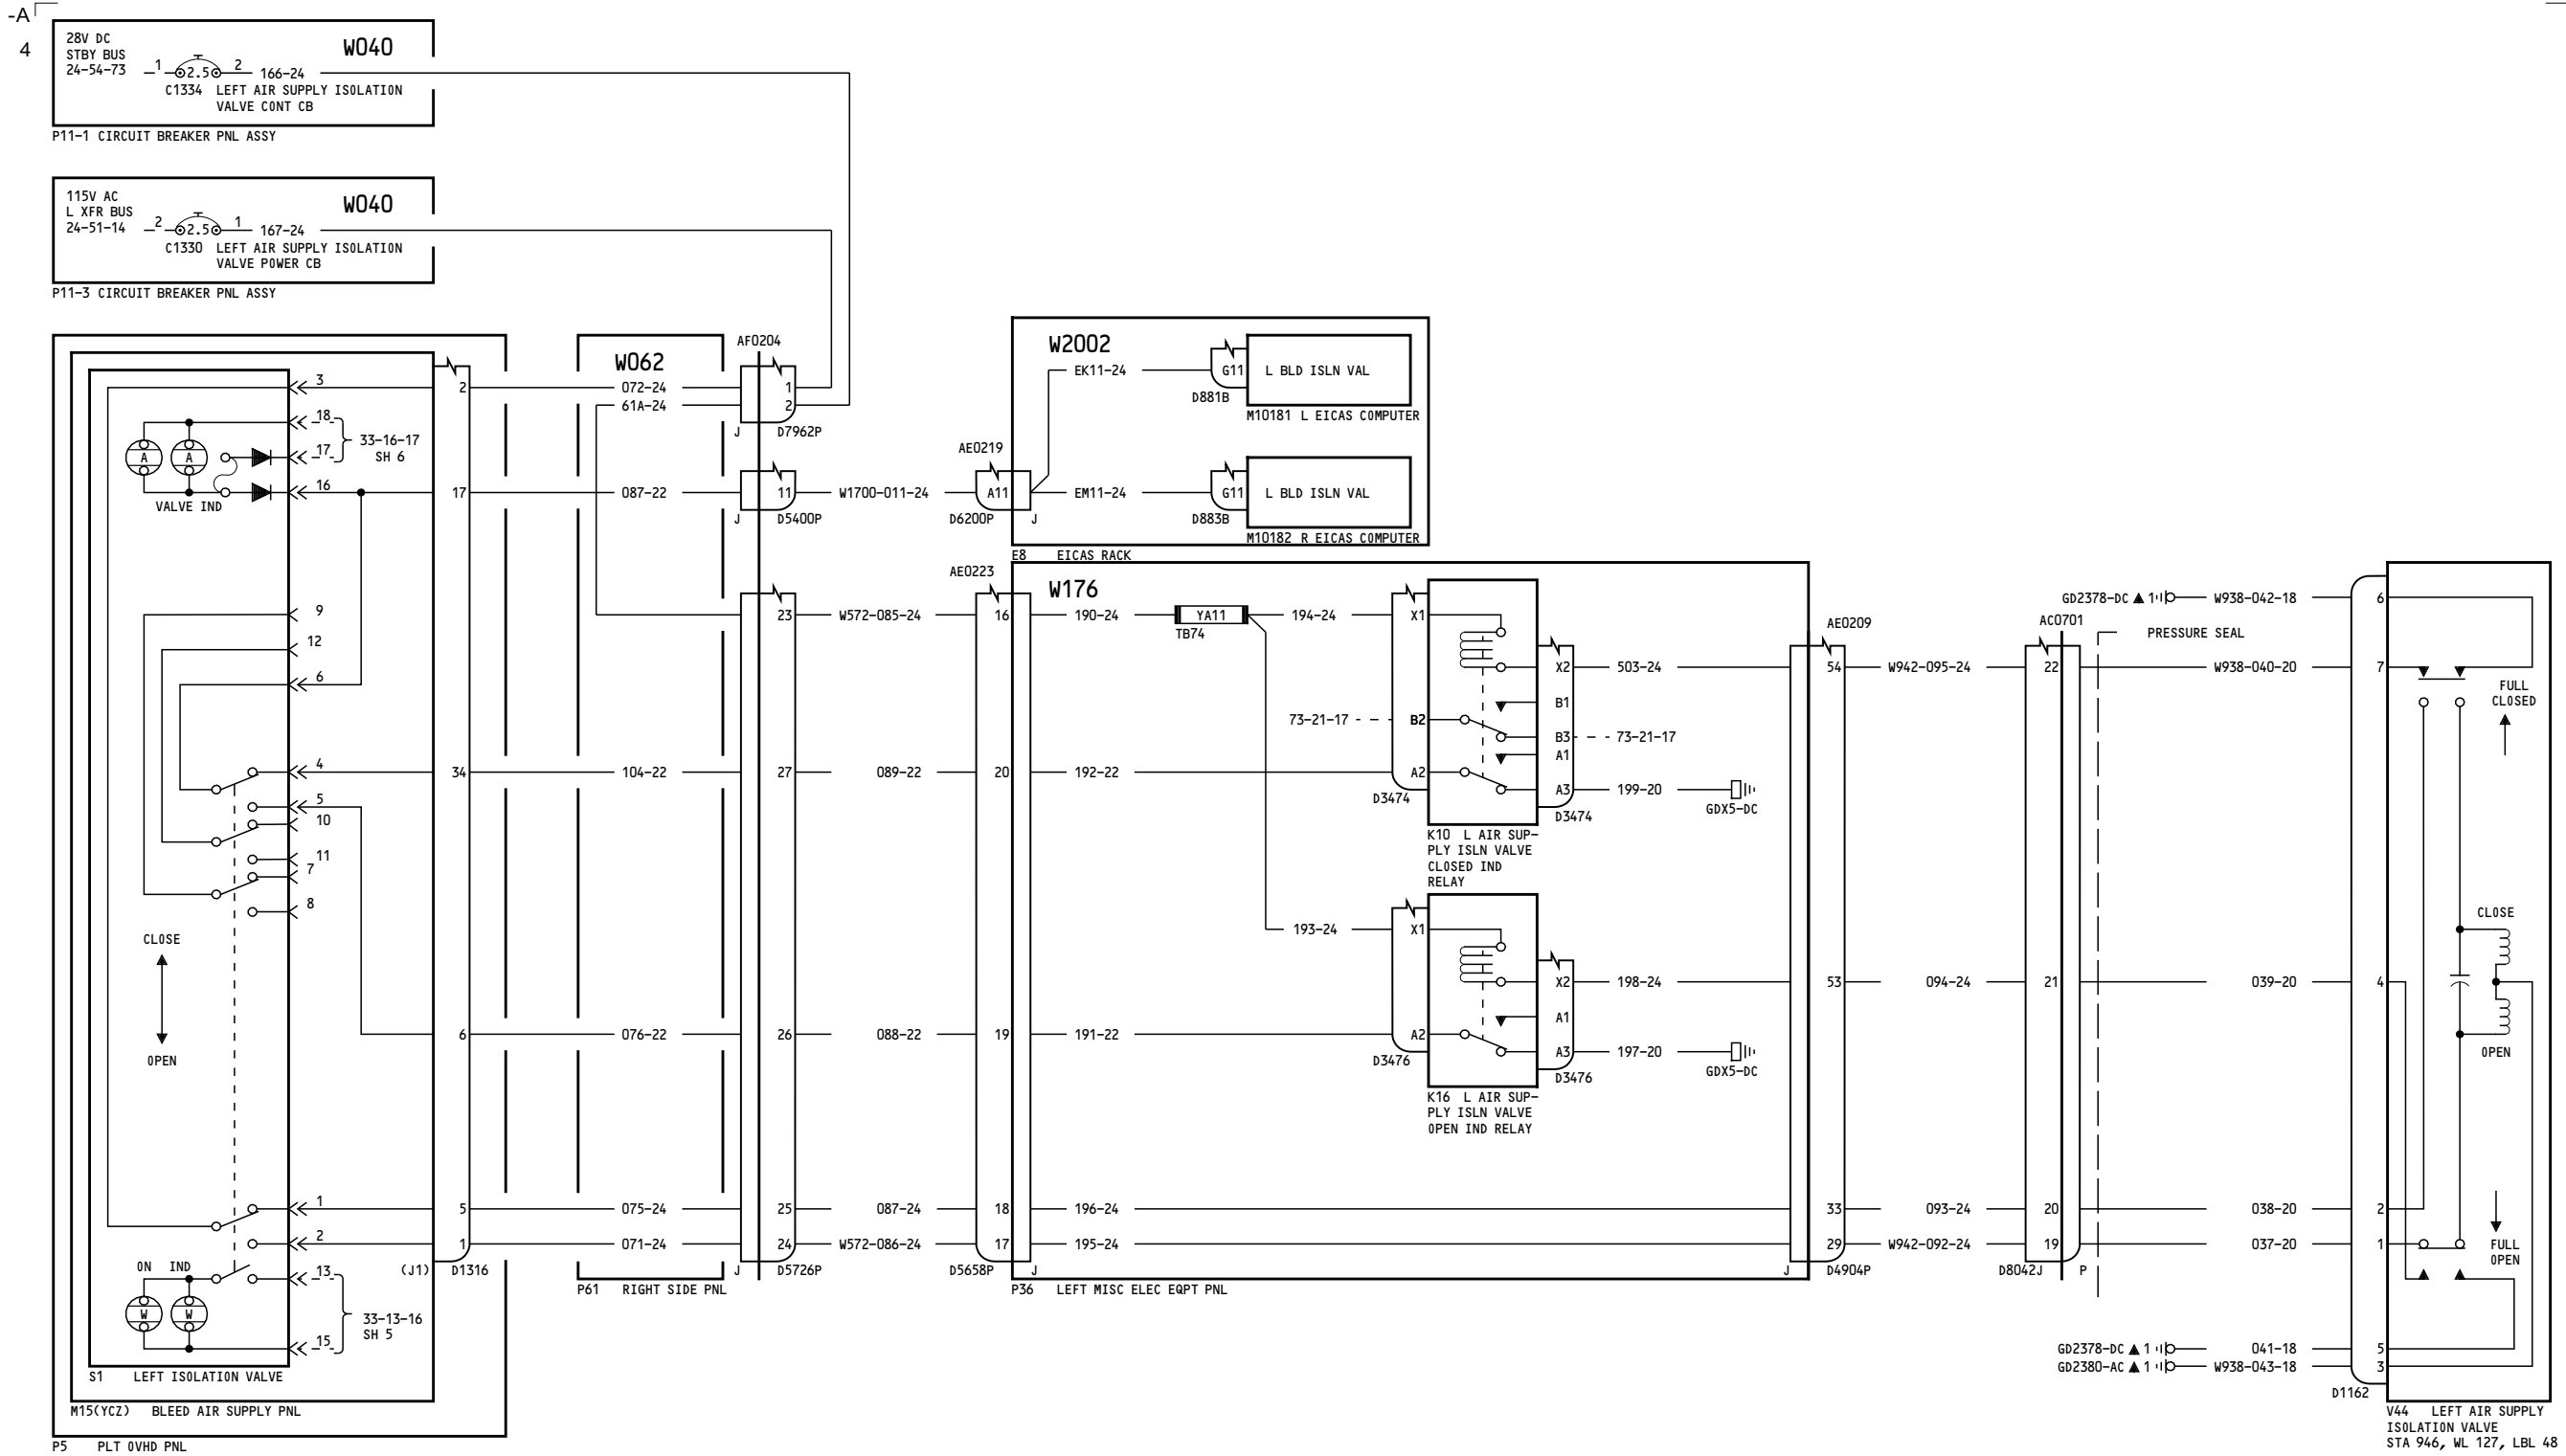

ALL

**AIR SUPPLY-  
LEFT ISOLATION VALVE  
CONTROL**

D280T132

**36-11-11**


Page 1

Jan 21/2005

**36-11-11**

Page 1

Jan 21/2005

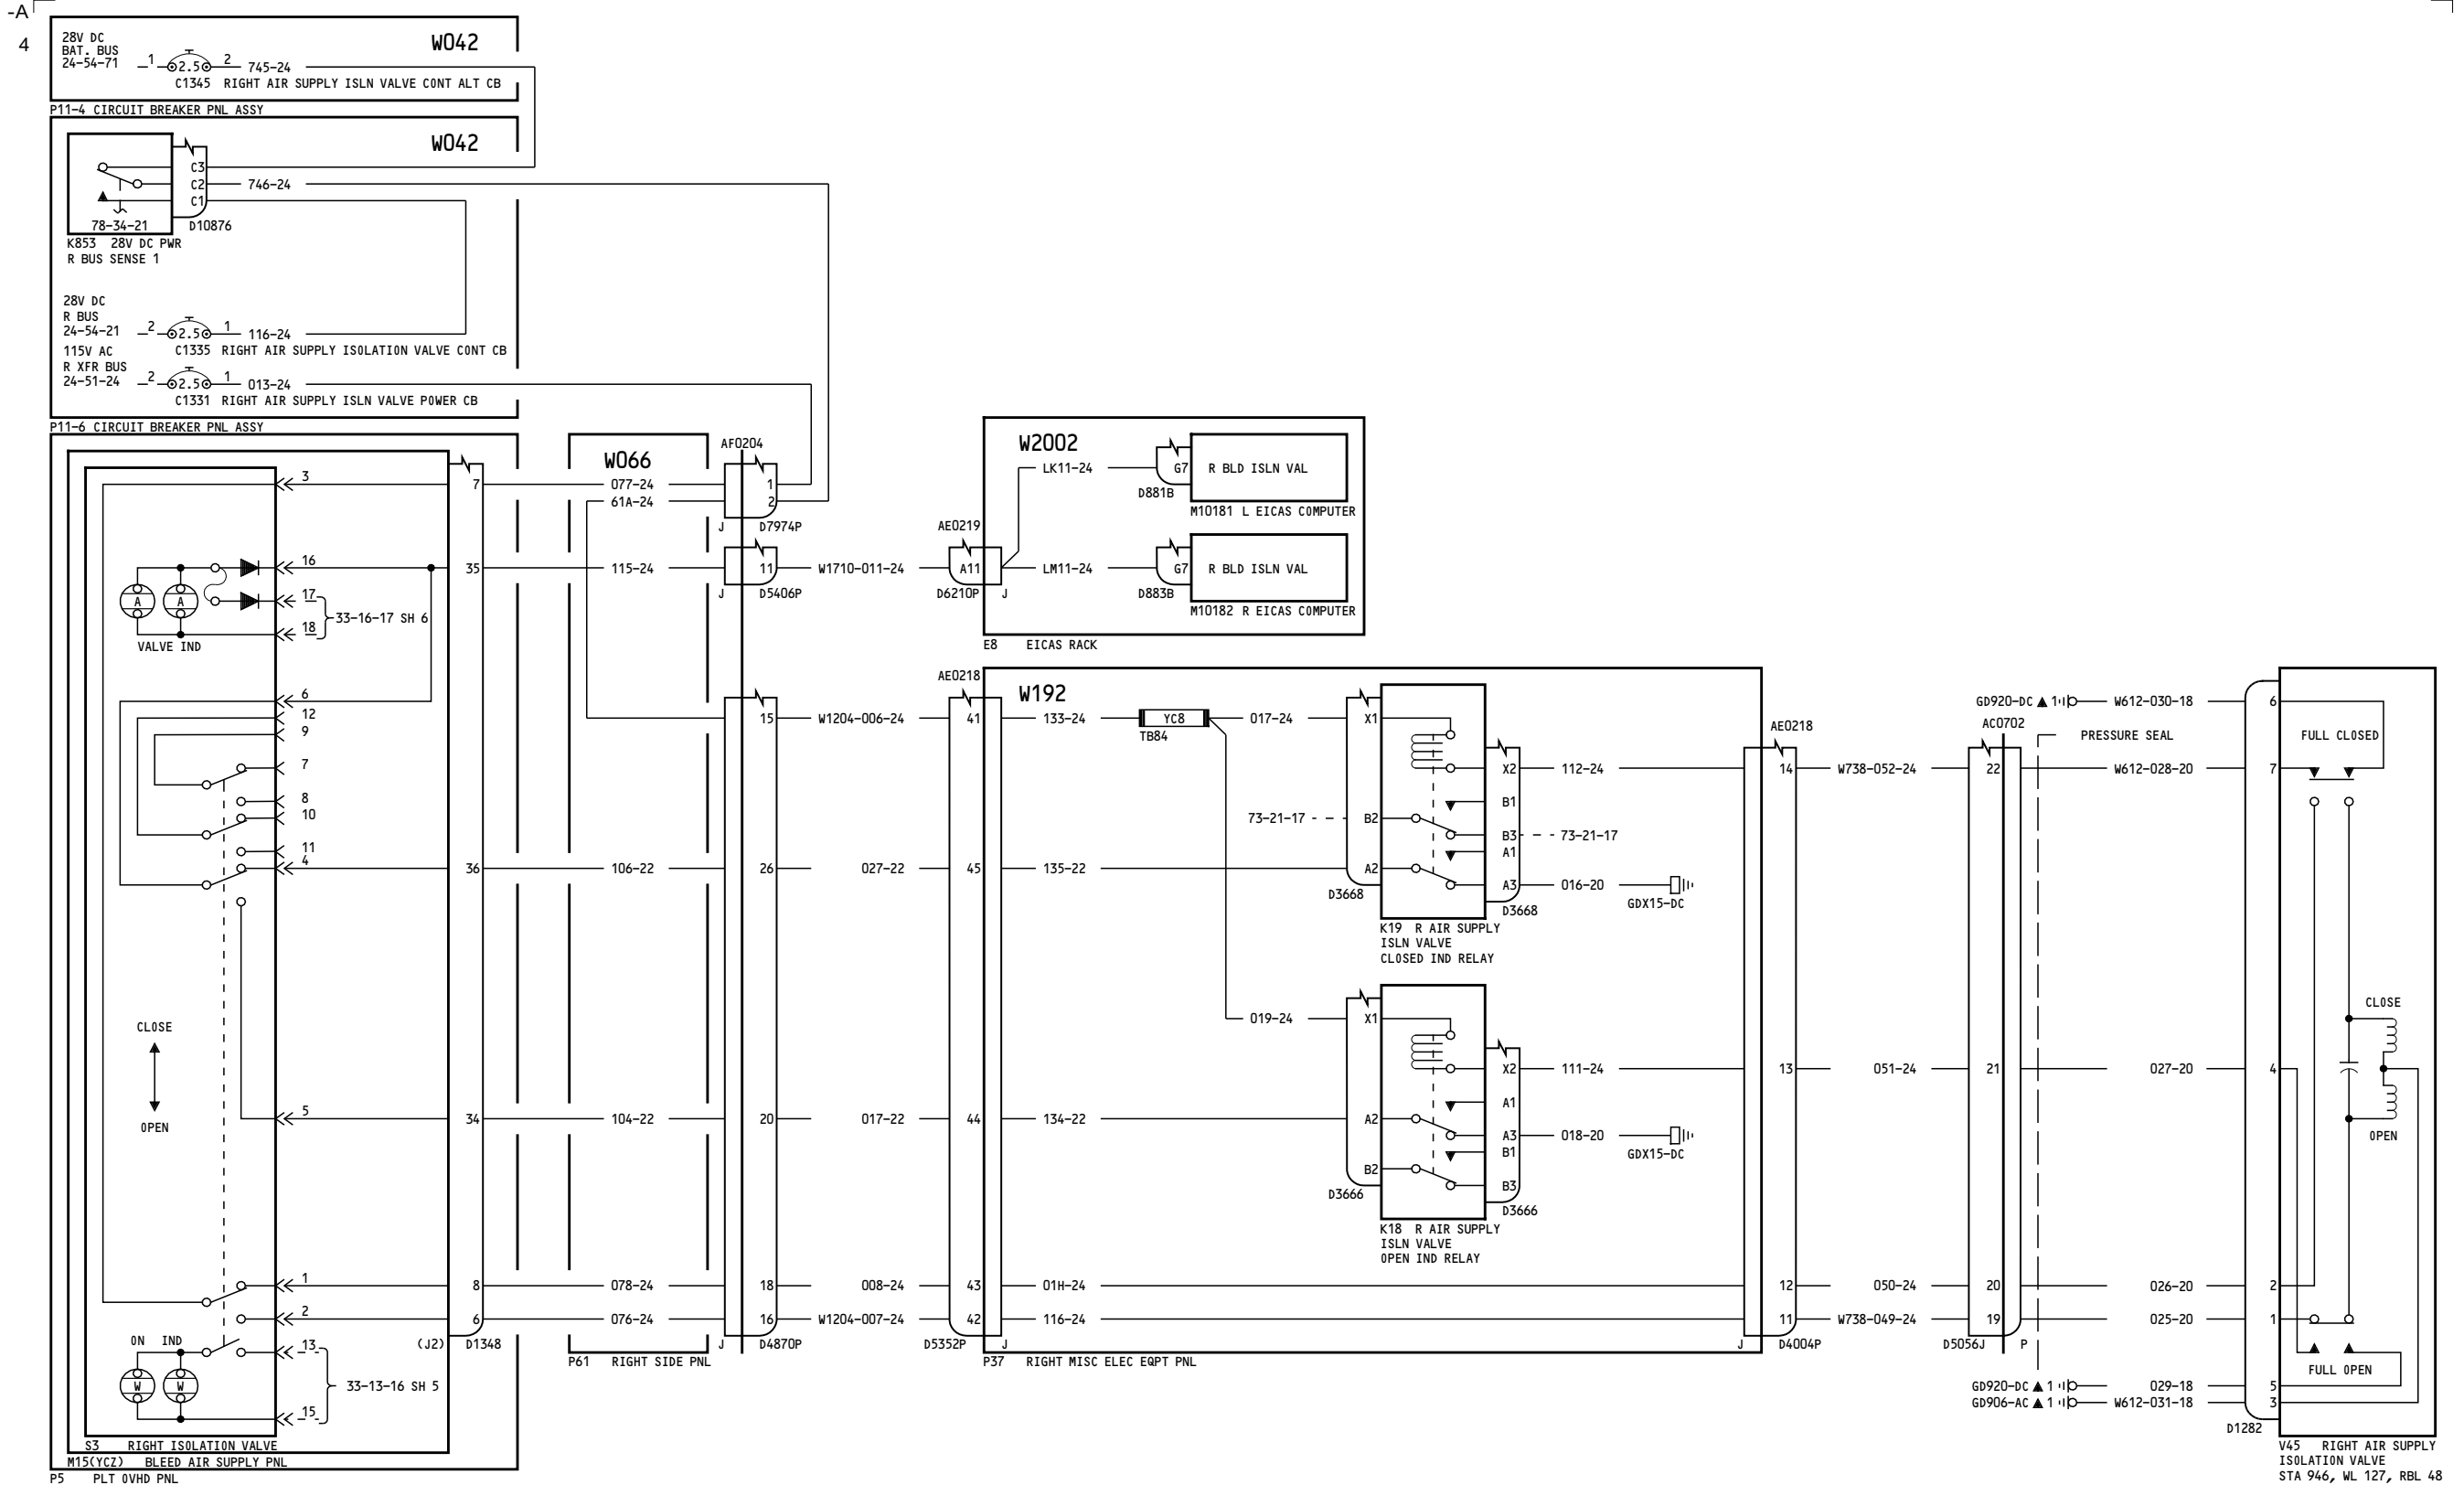

ALL

**AIR SUPPLY-  
RIGHT ISOLATION VALVE  
CONTROL**

D280T132

**36-11-21**

Page 1

Jan 21/2005

**36-11-21**


Page 1

Jan 21/2005

**36-11-21**

Page 1

Jan 21/2005

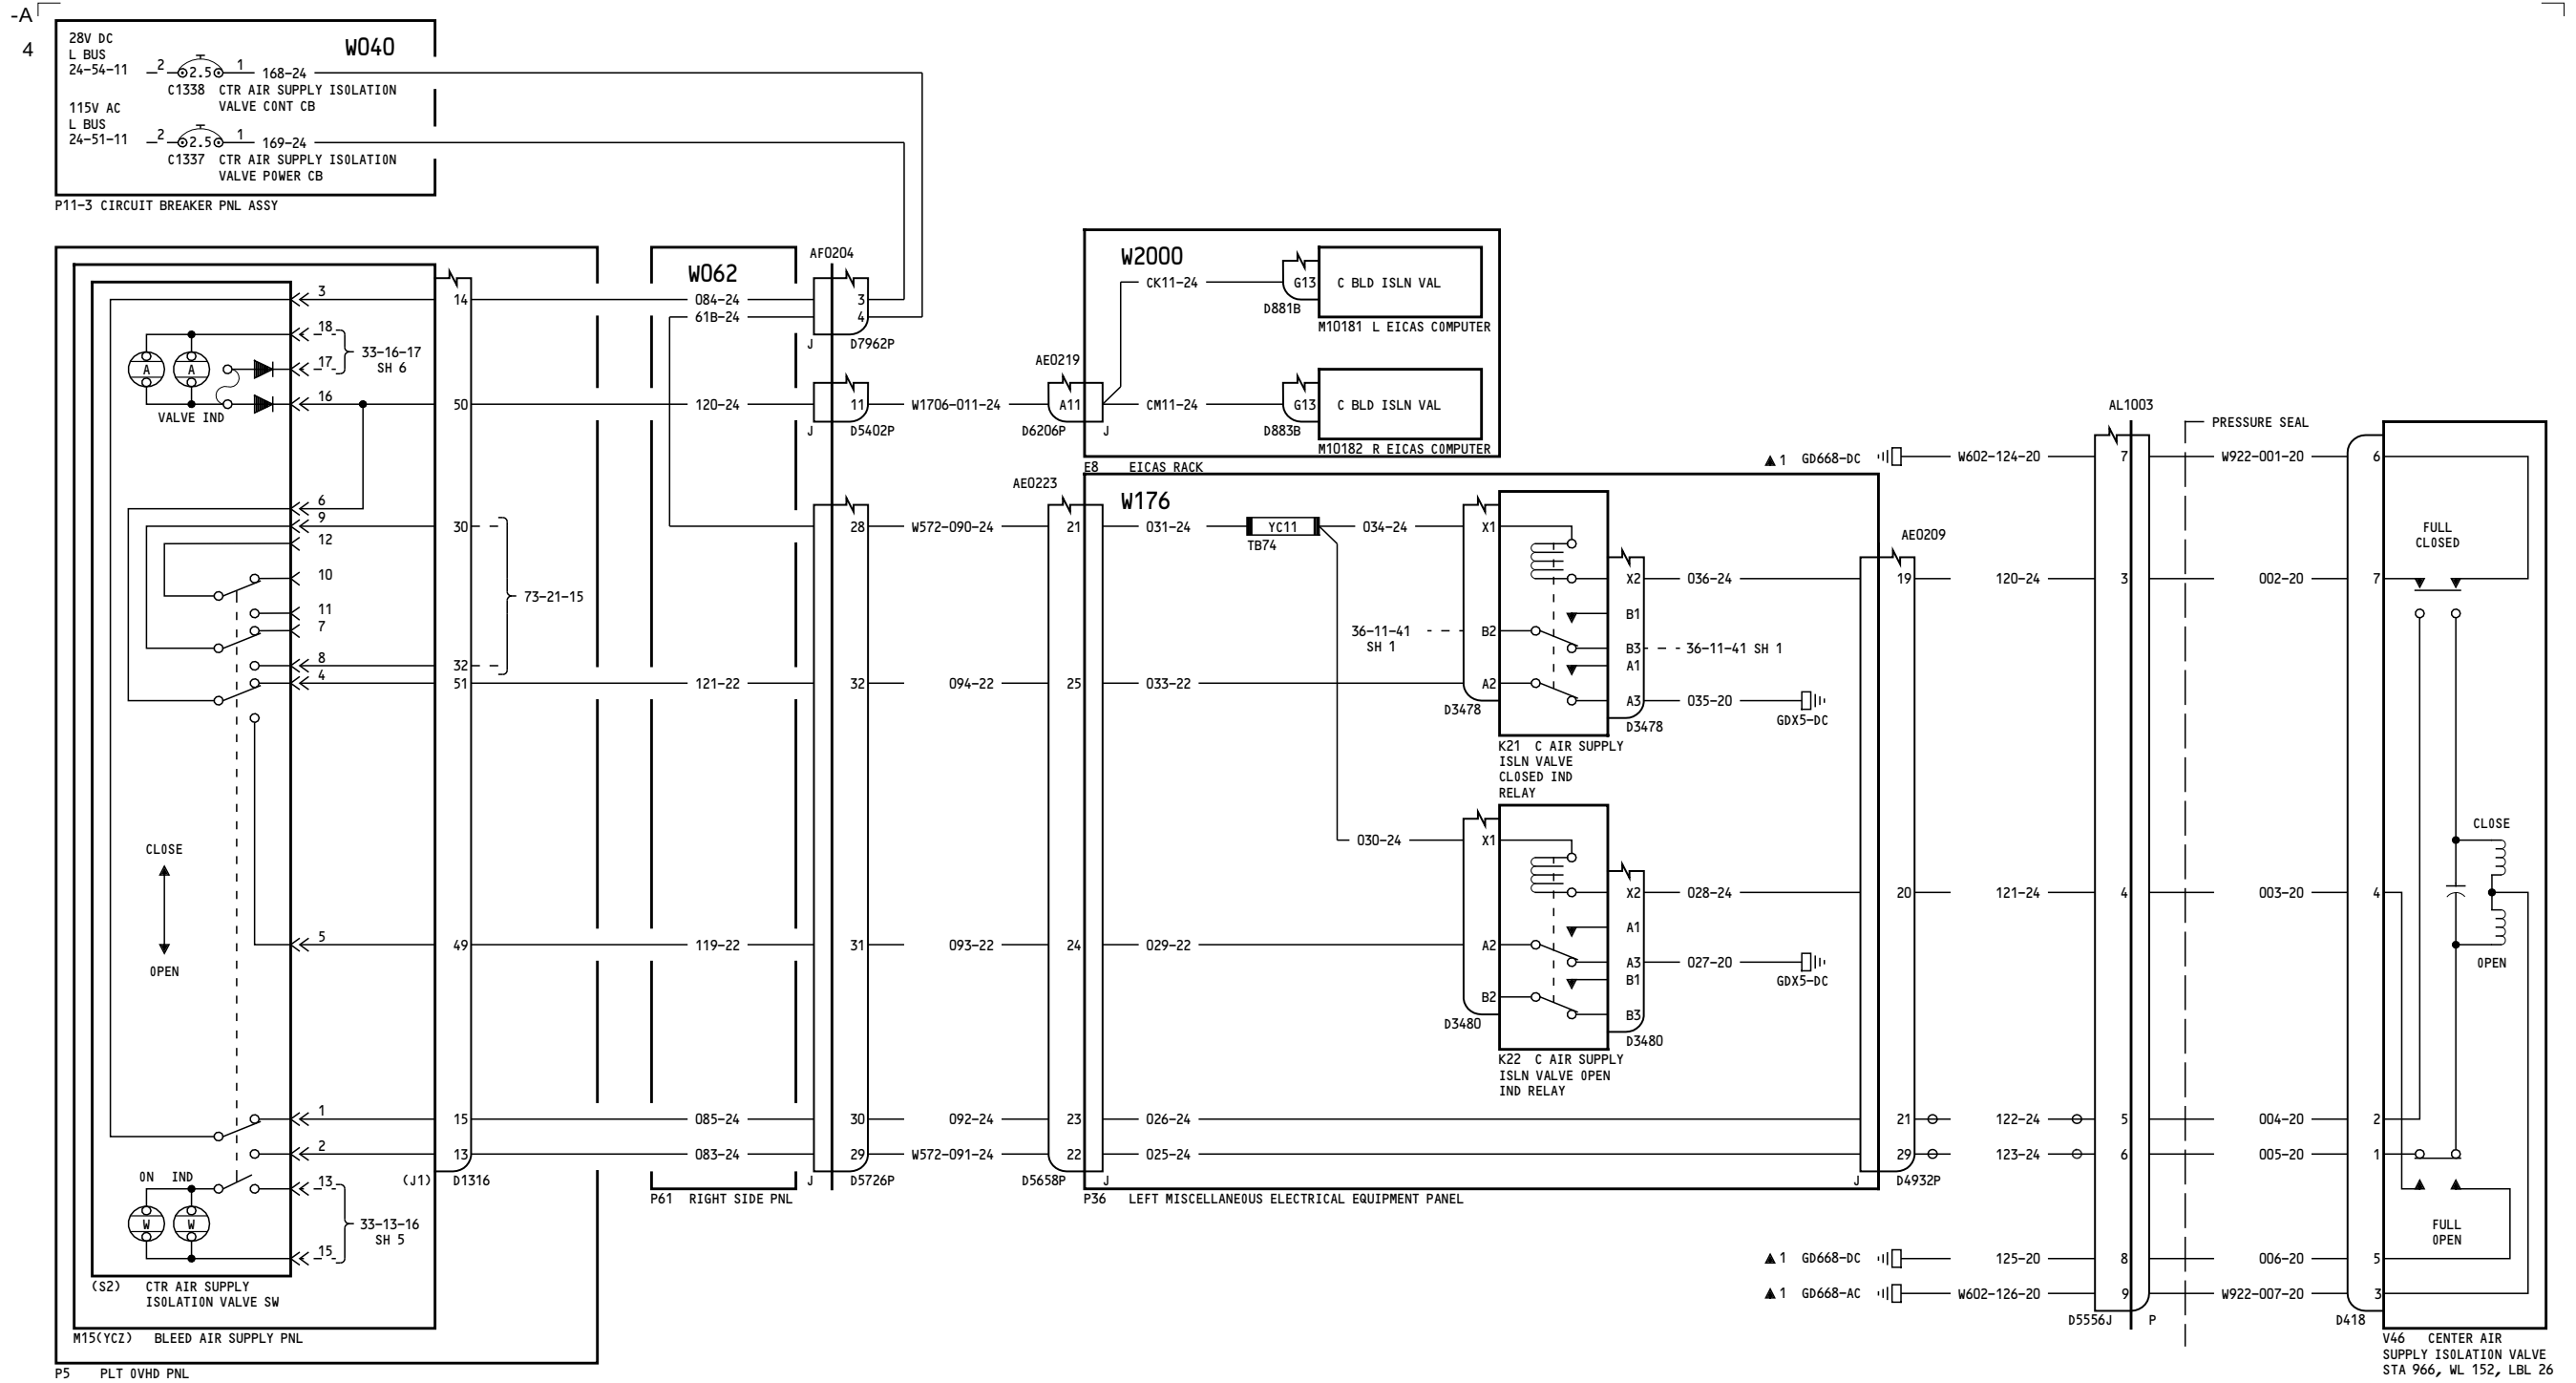

ALL

**AIR SUPPLY-CENTER ISOLATION VALVE CONTROL**

D280T132

**36-11-31**


Page 1

Jan 21/2005

**36-11-31**

Page 1

Jan 21/2005

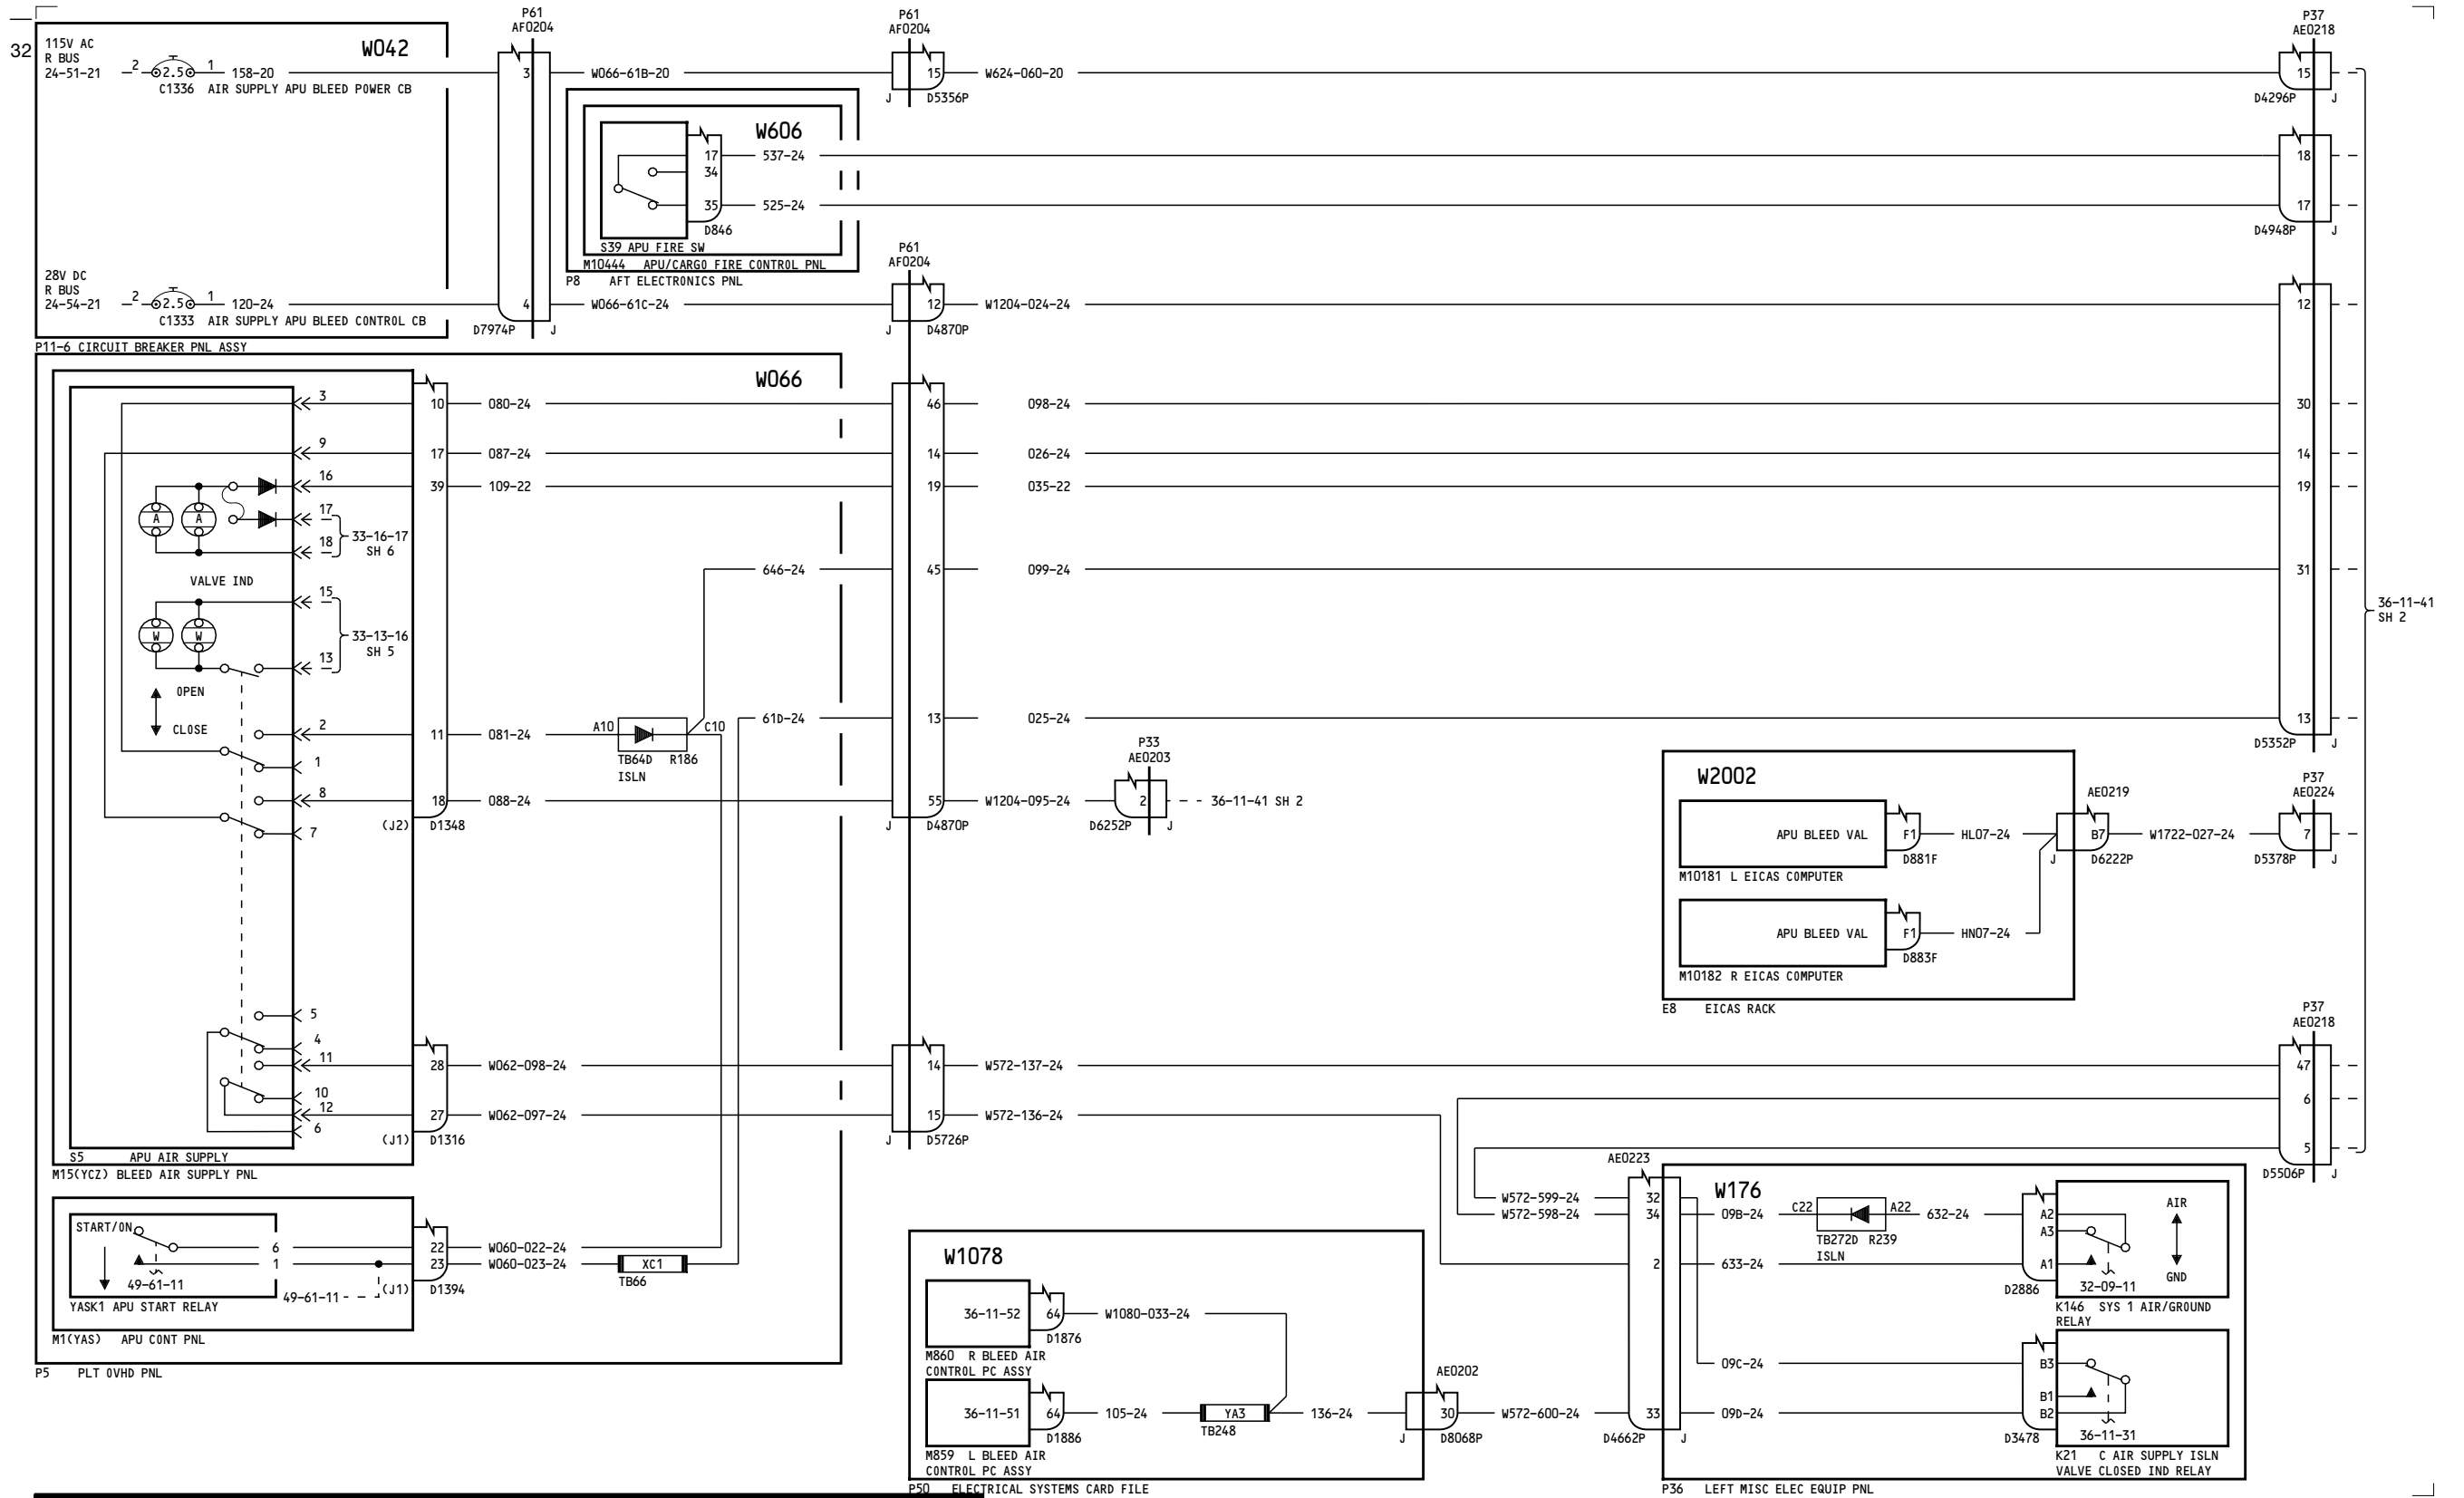

050-099, 162-199

**AIR SUPPLY-AUXILIARY  
POWER UNIT AIR SUPPLY  
VALVE CONTROL**


**36-11-41**

Page 1  
Sheet 1  
Jan 21/2005

D280T132

**36-11-41**

Page 1  
Sheet 1  
Jan 21/2005

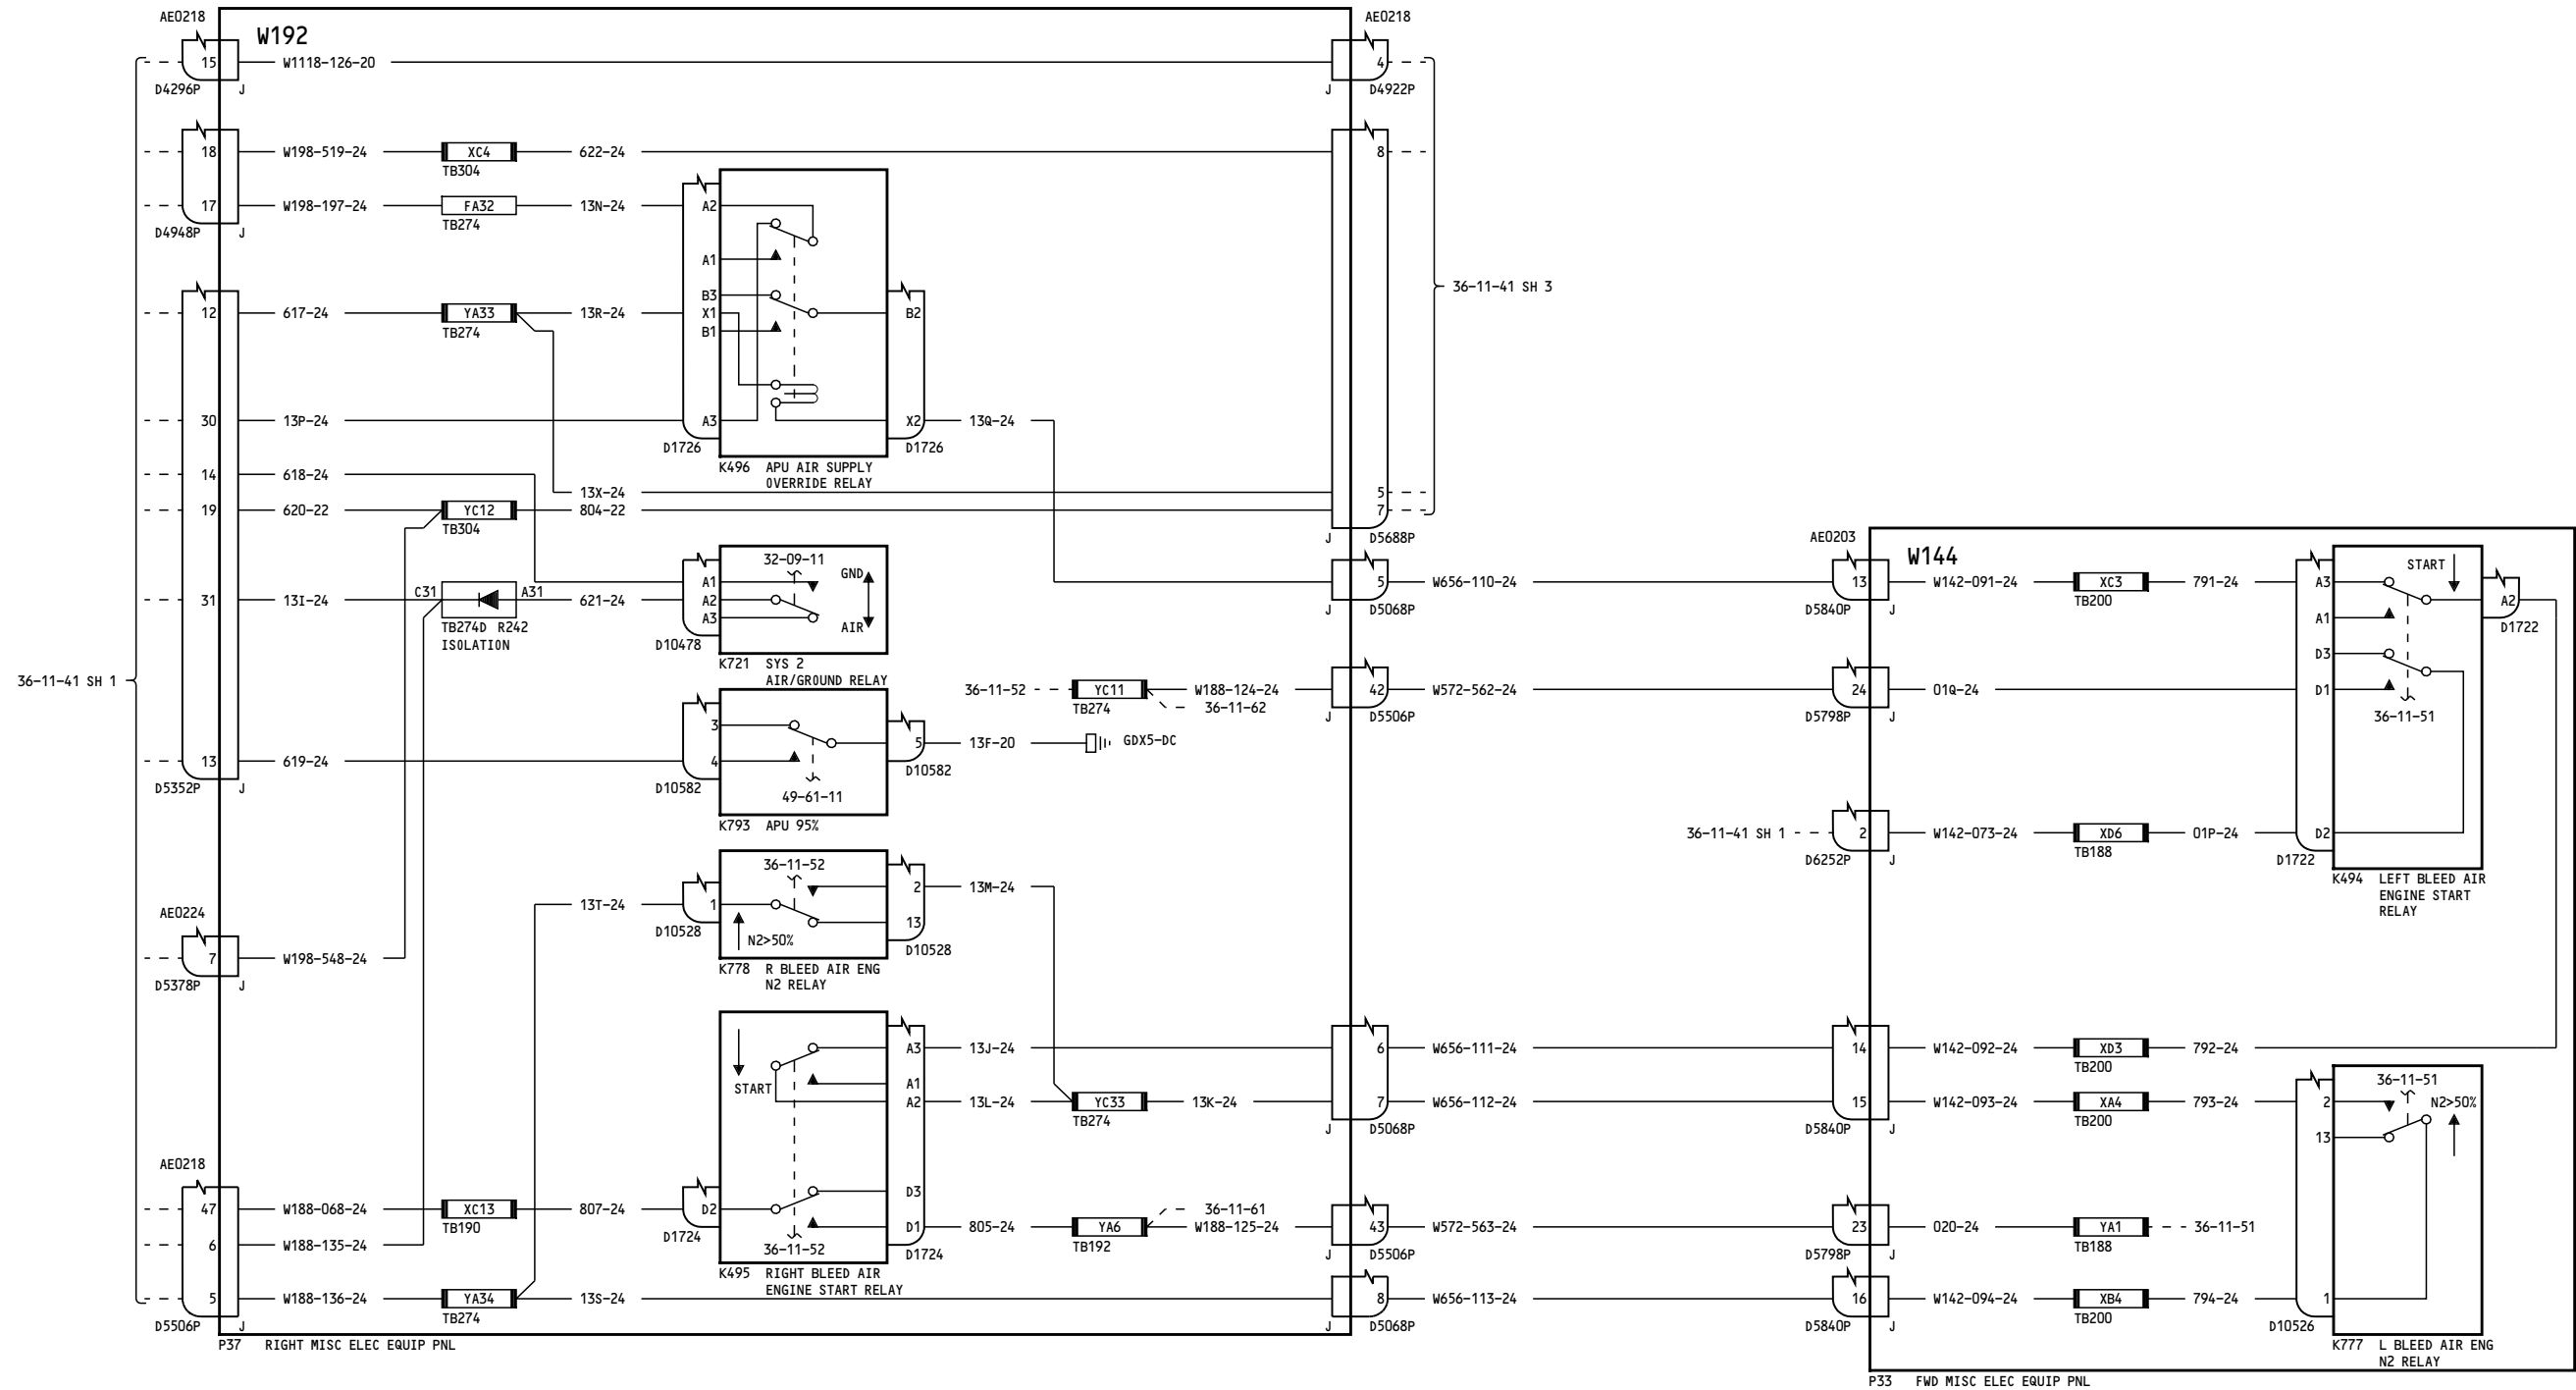

050-099, 162-199

AIR SUPPLY-AUXILIARY  
POWER UNIT AIR SUPPLY  
VALVE CONTROL


D280T132

36-11-41


Page 1  
Sheet 2  
Jan 21/2005

36-11-41

Page 1  
Sheet 2  
Jan 21/2005

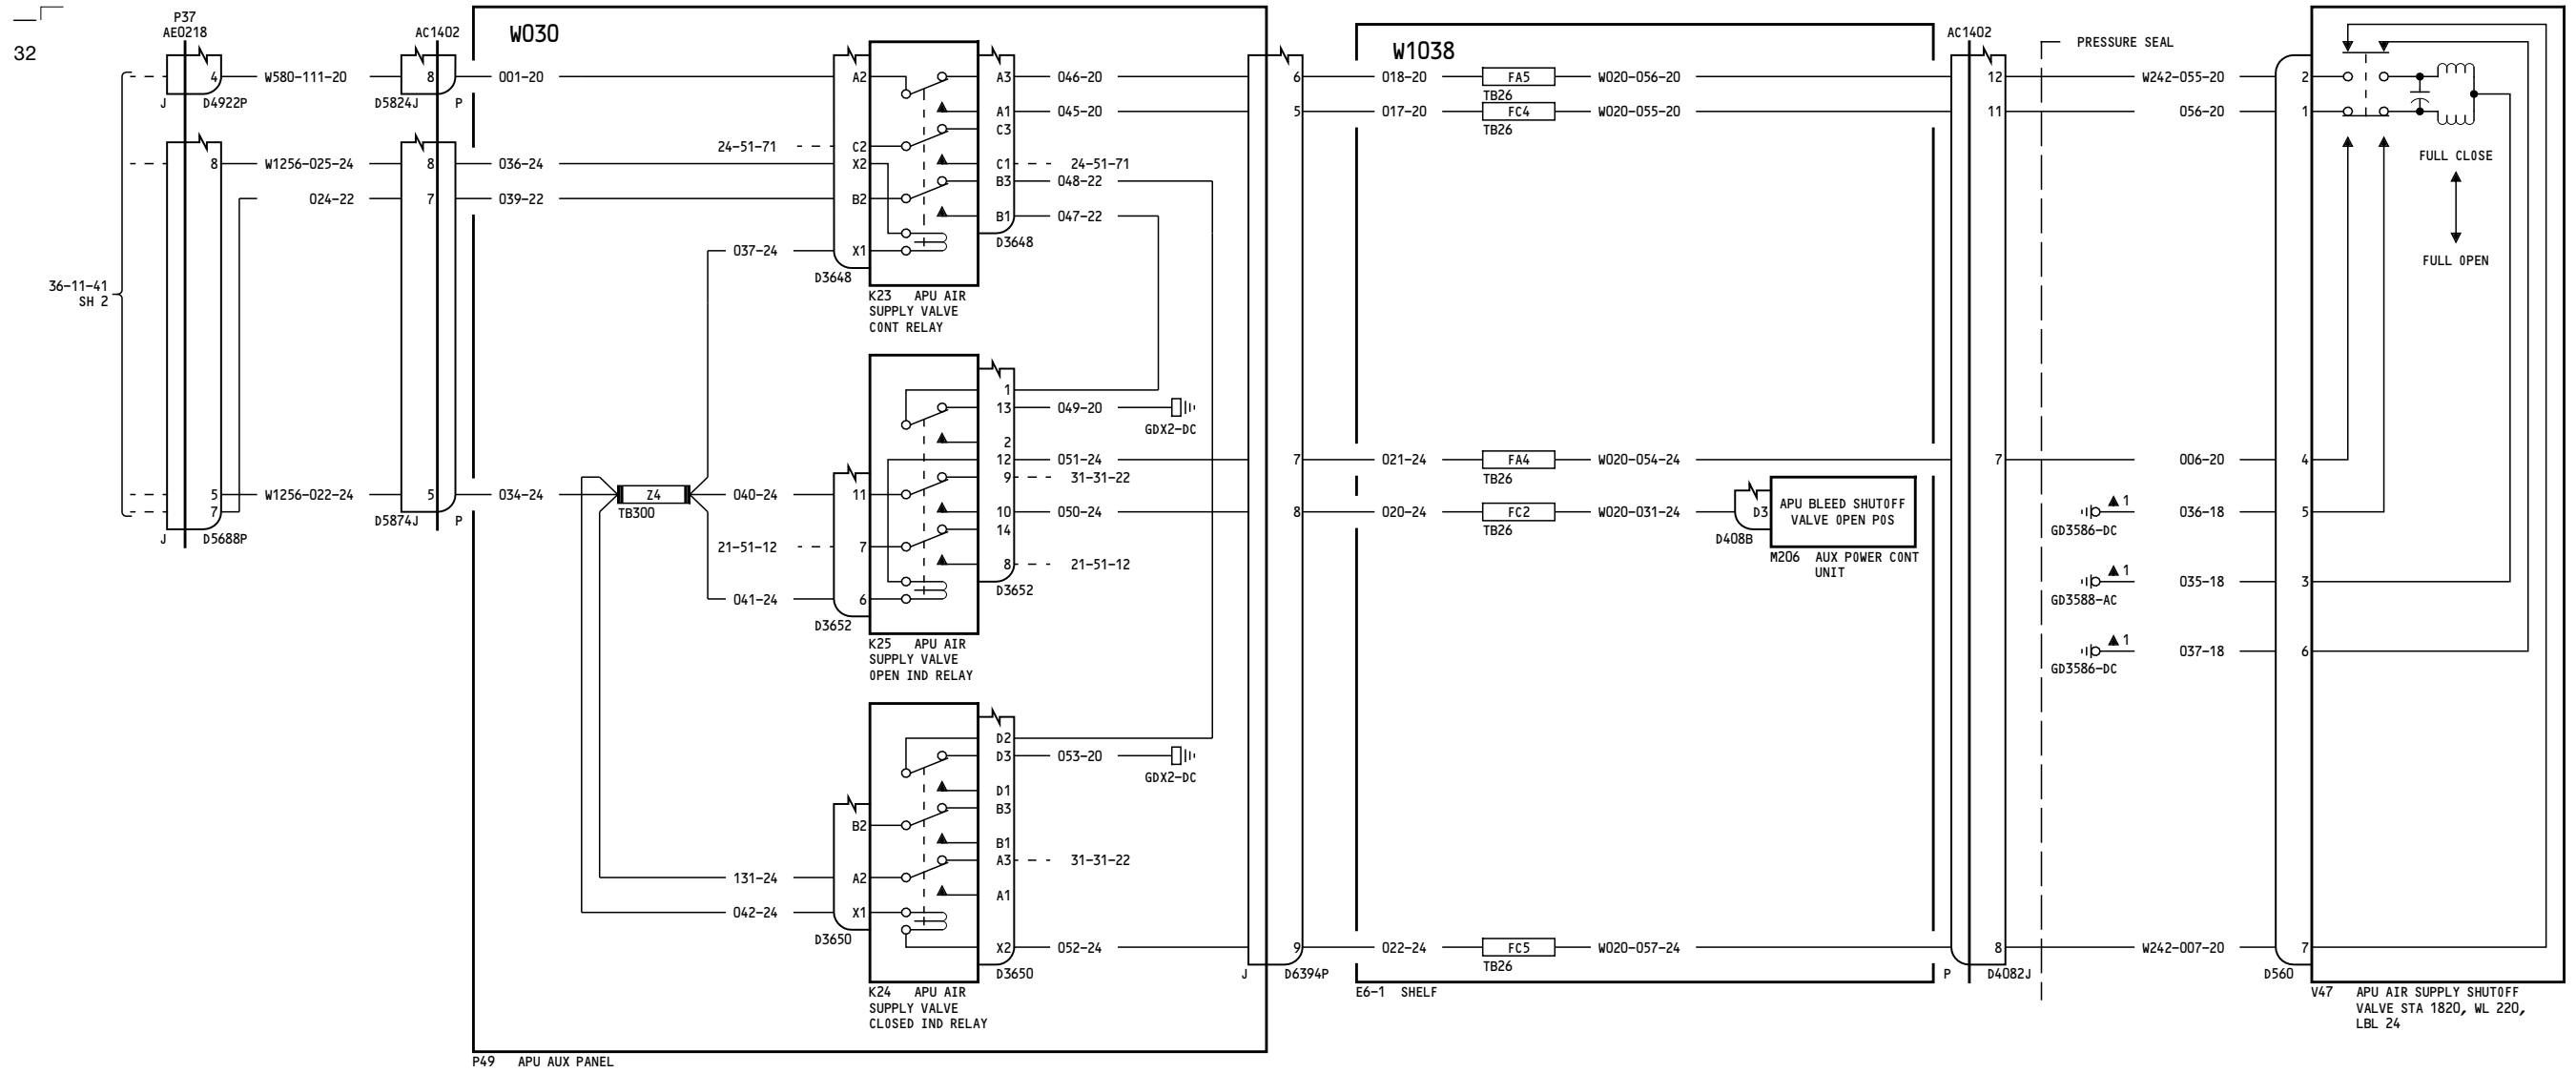



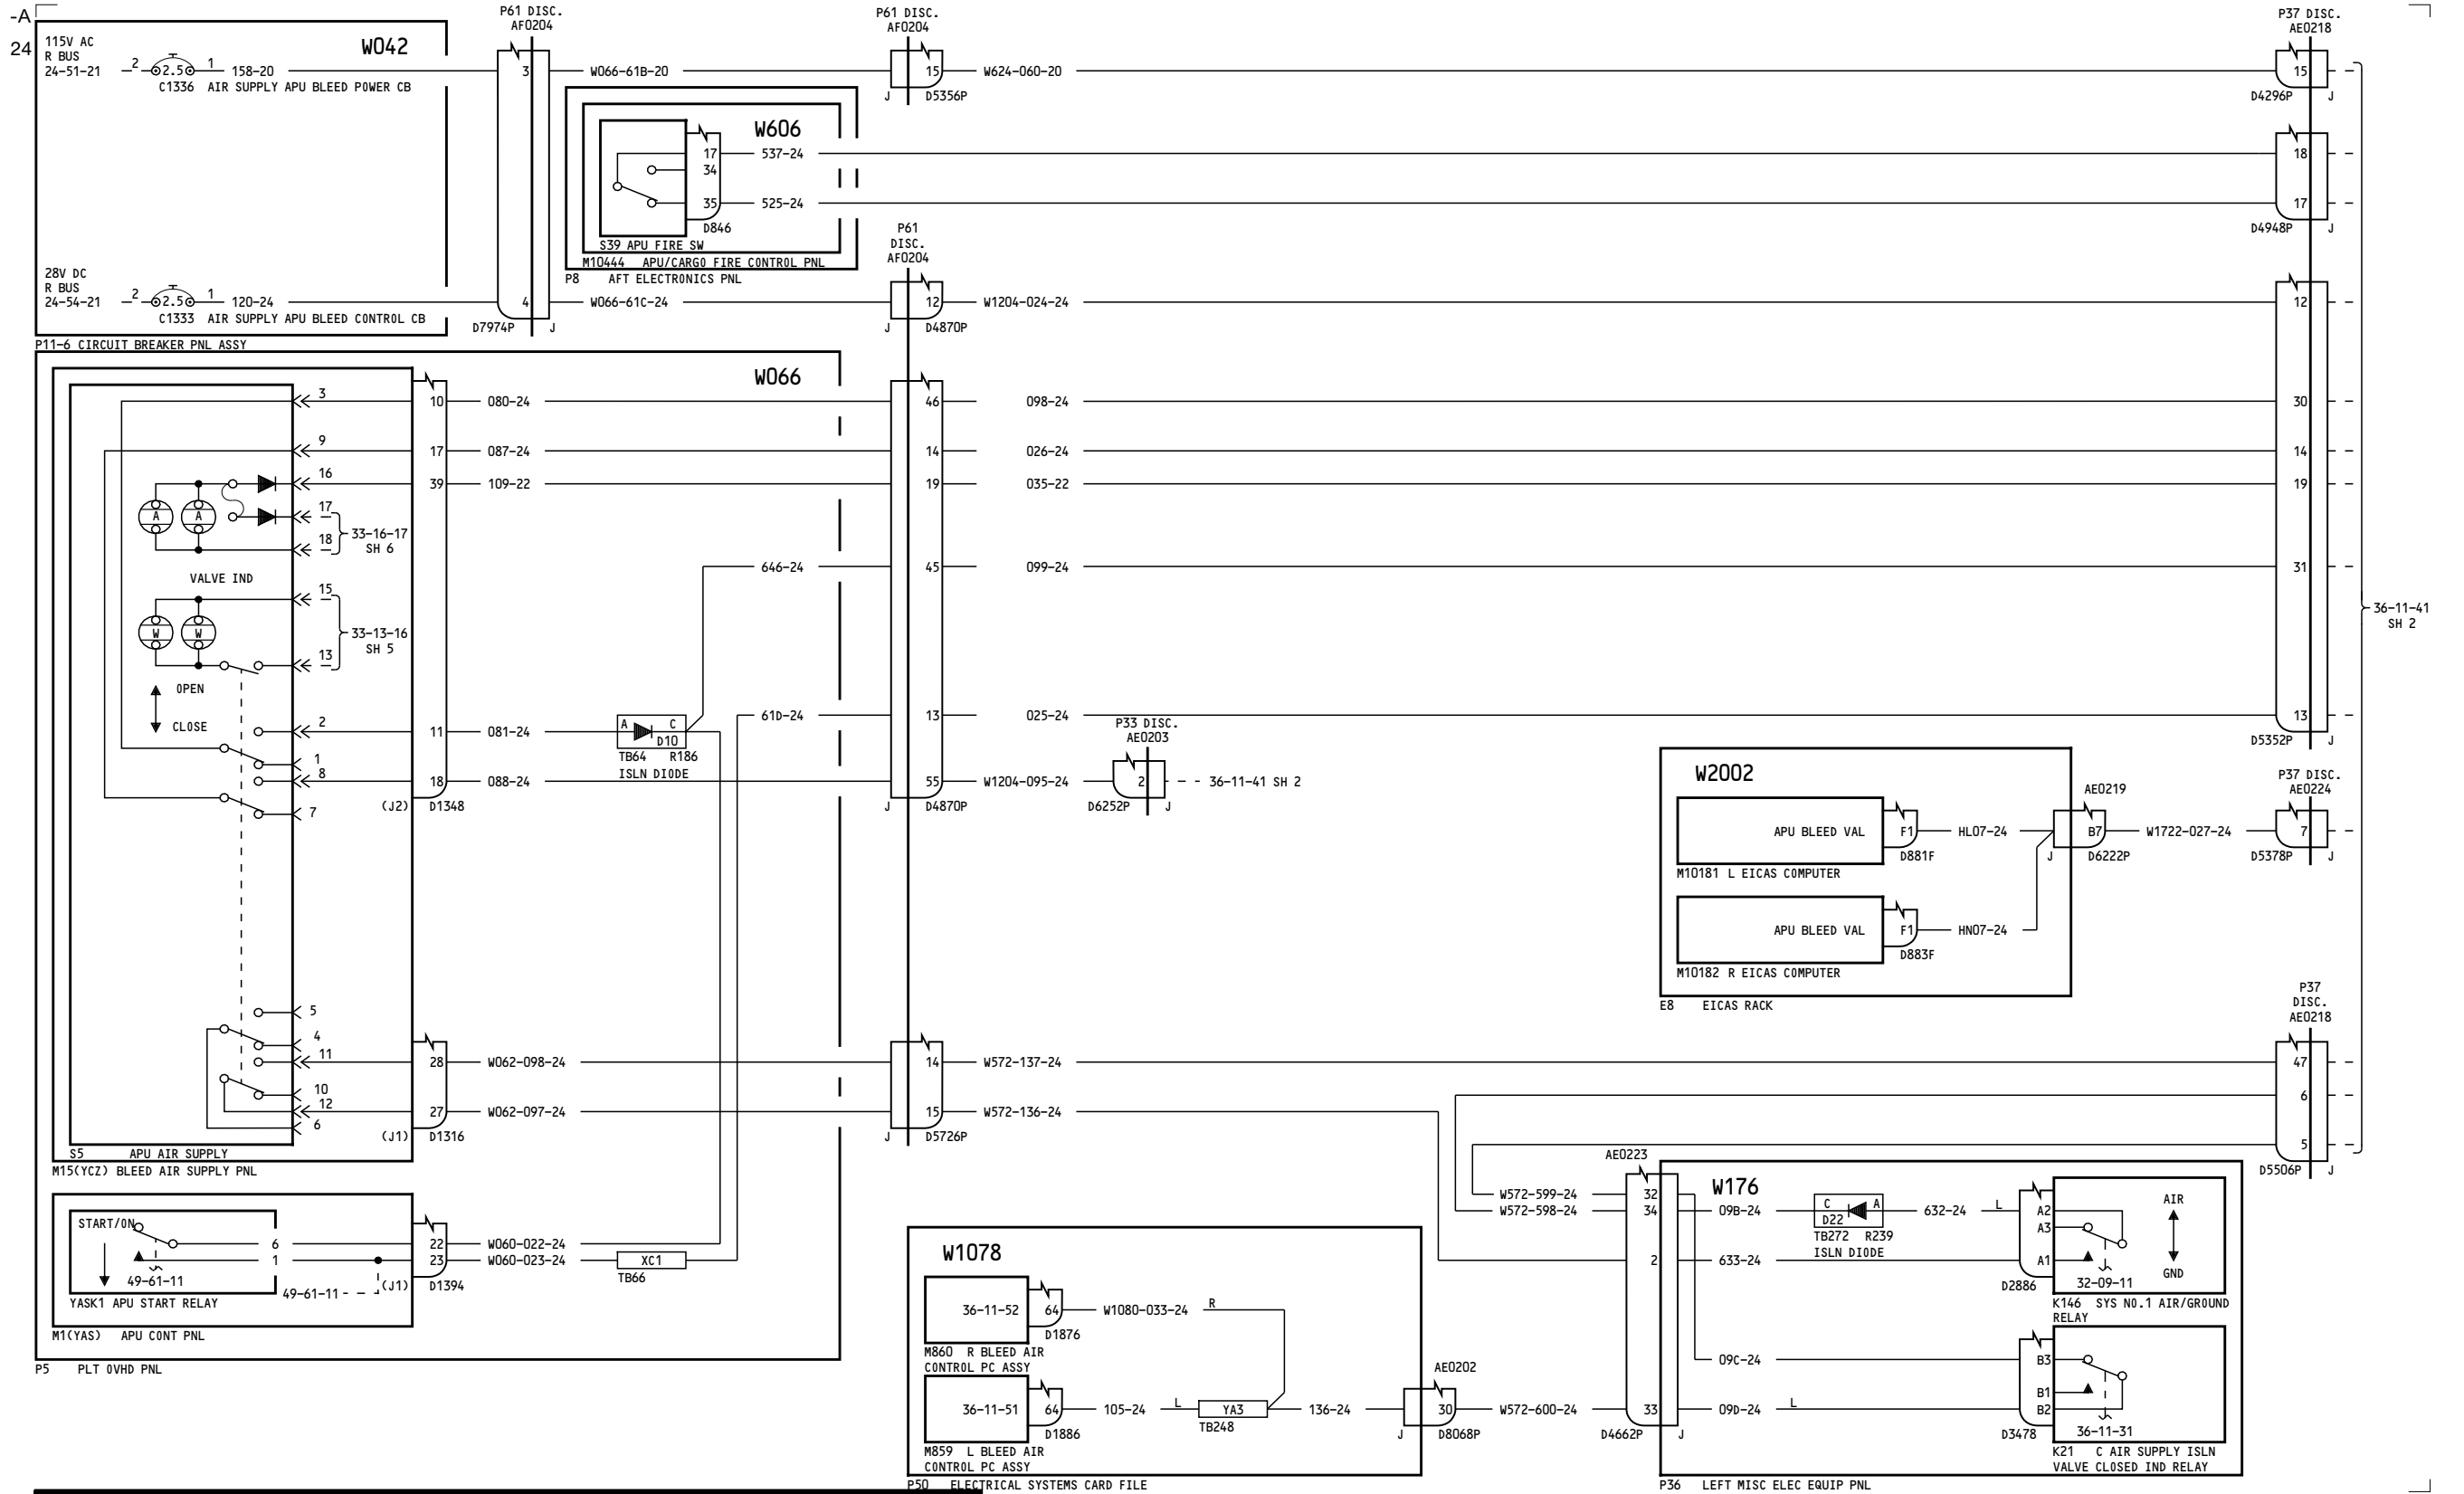

150-157

**AIR SUPPLY-AUXILIARY  
POWER UNIT AIR SUPPLY  
VALVE CONTROL**

D280T132

**36-11-41**


Page 2  
Sheet 1  
Jan 21/2005


36-11-41 SH 2


**36-11-41**

Page 2  
Sheet 1  
Jan 21/2005

-A  
24

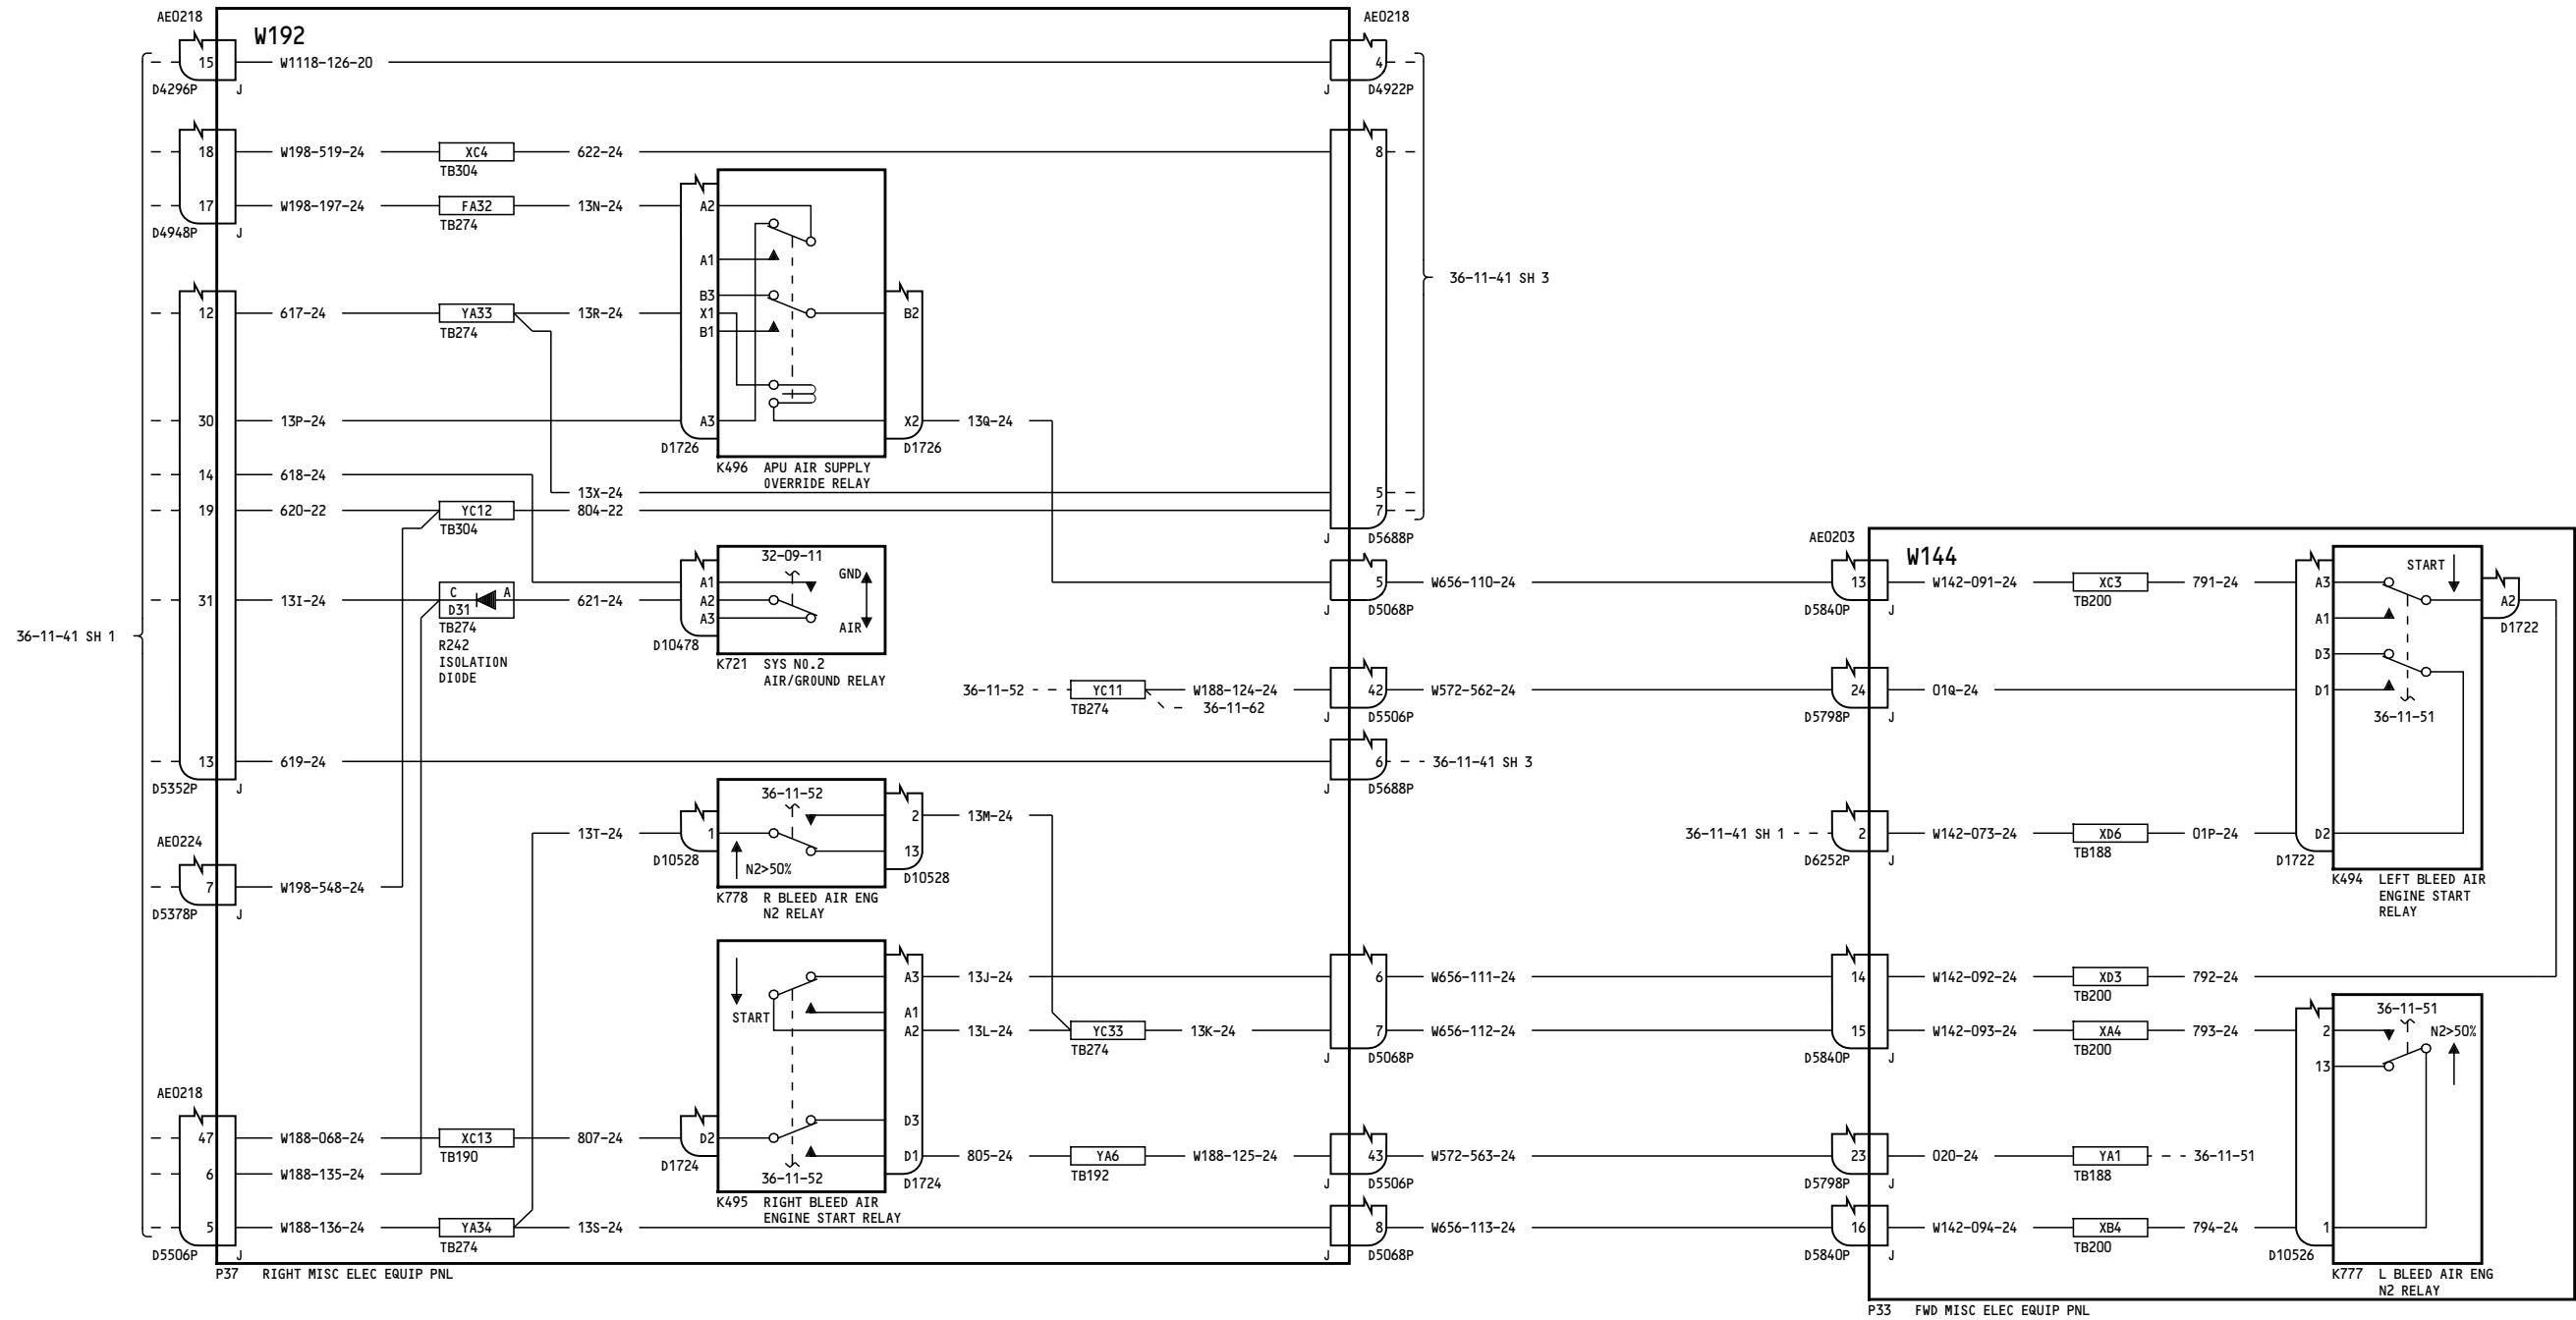

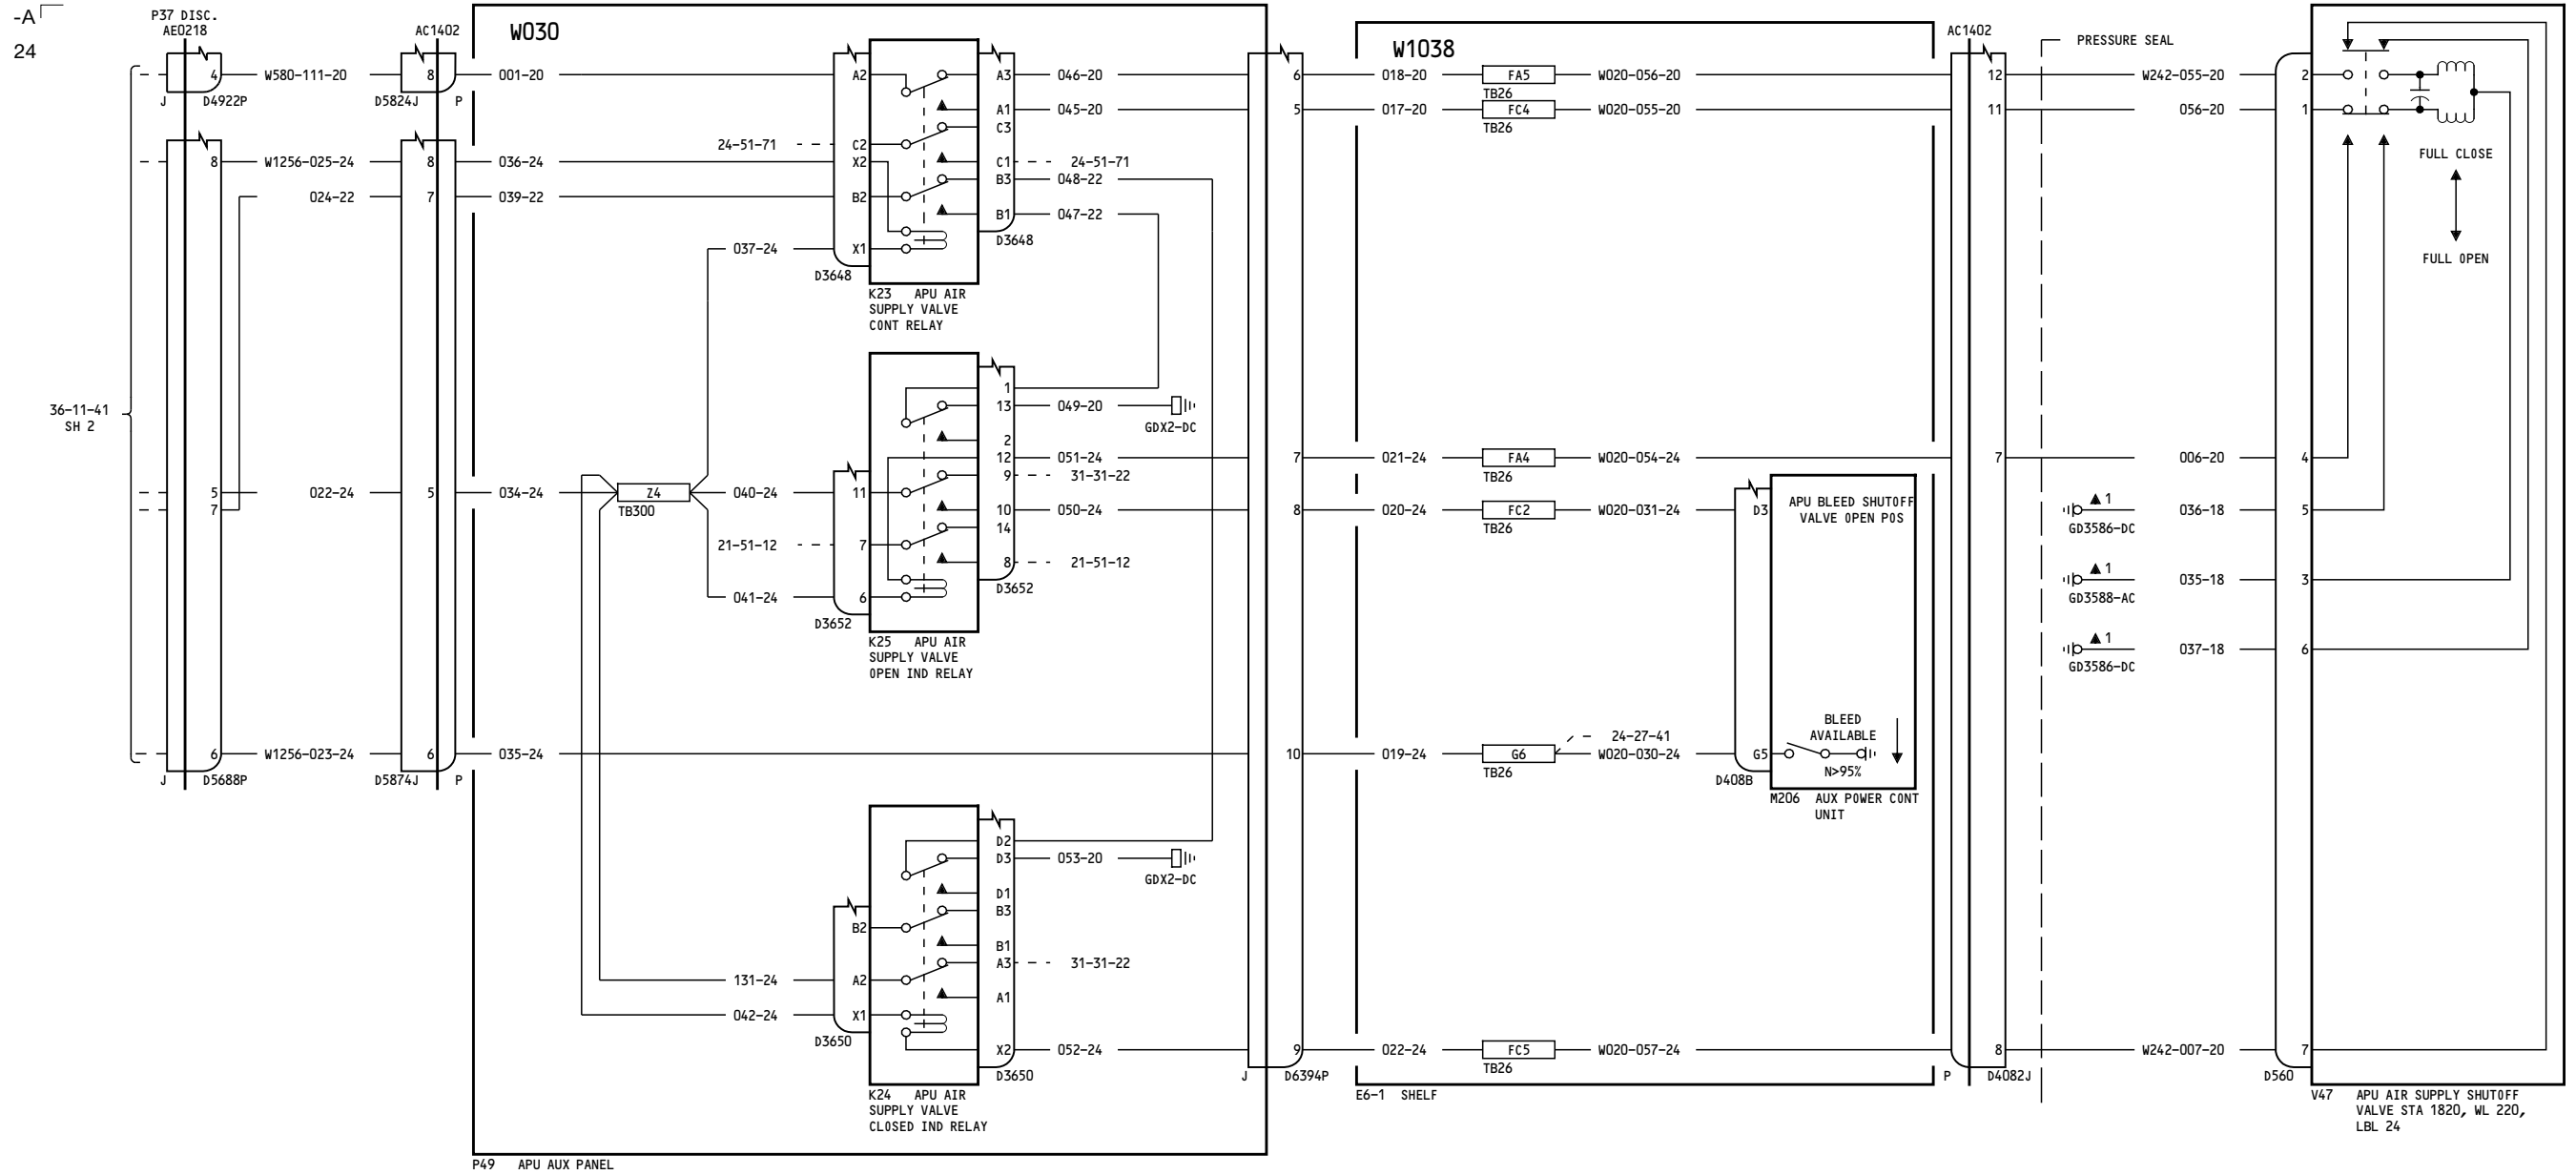

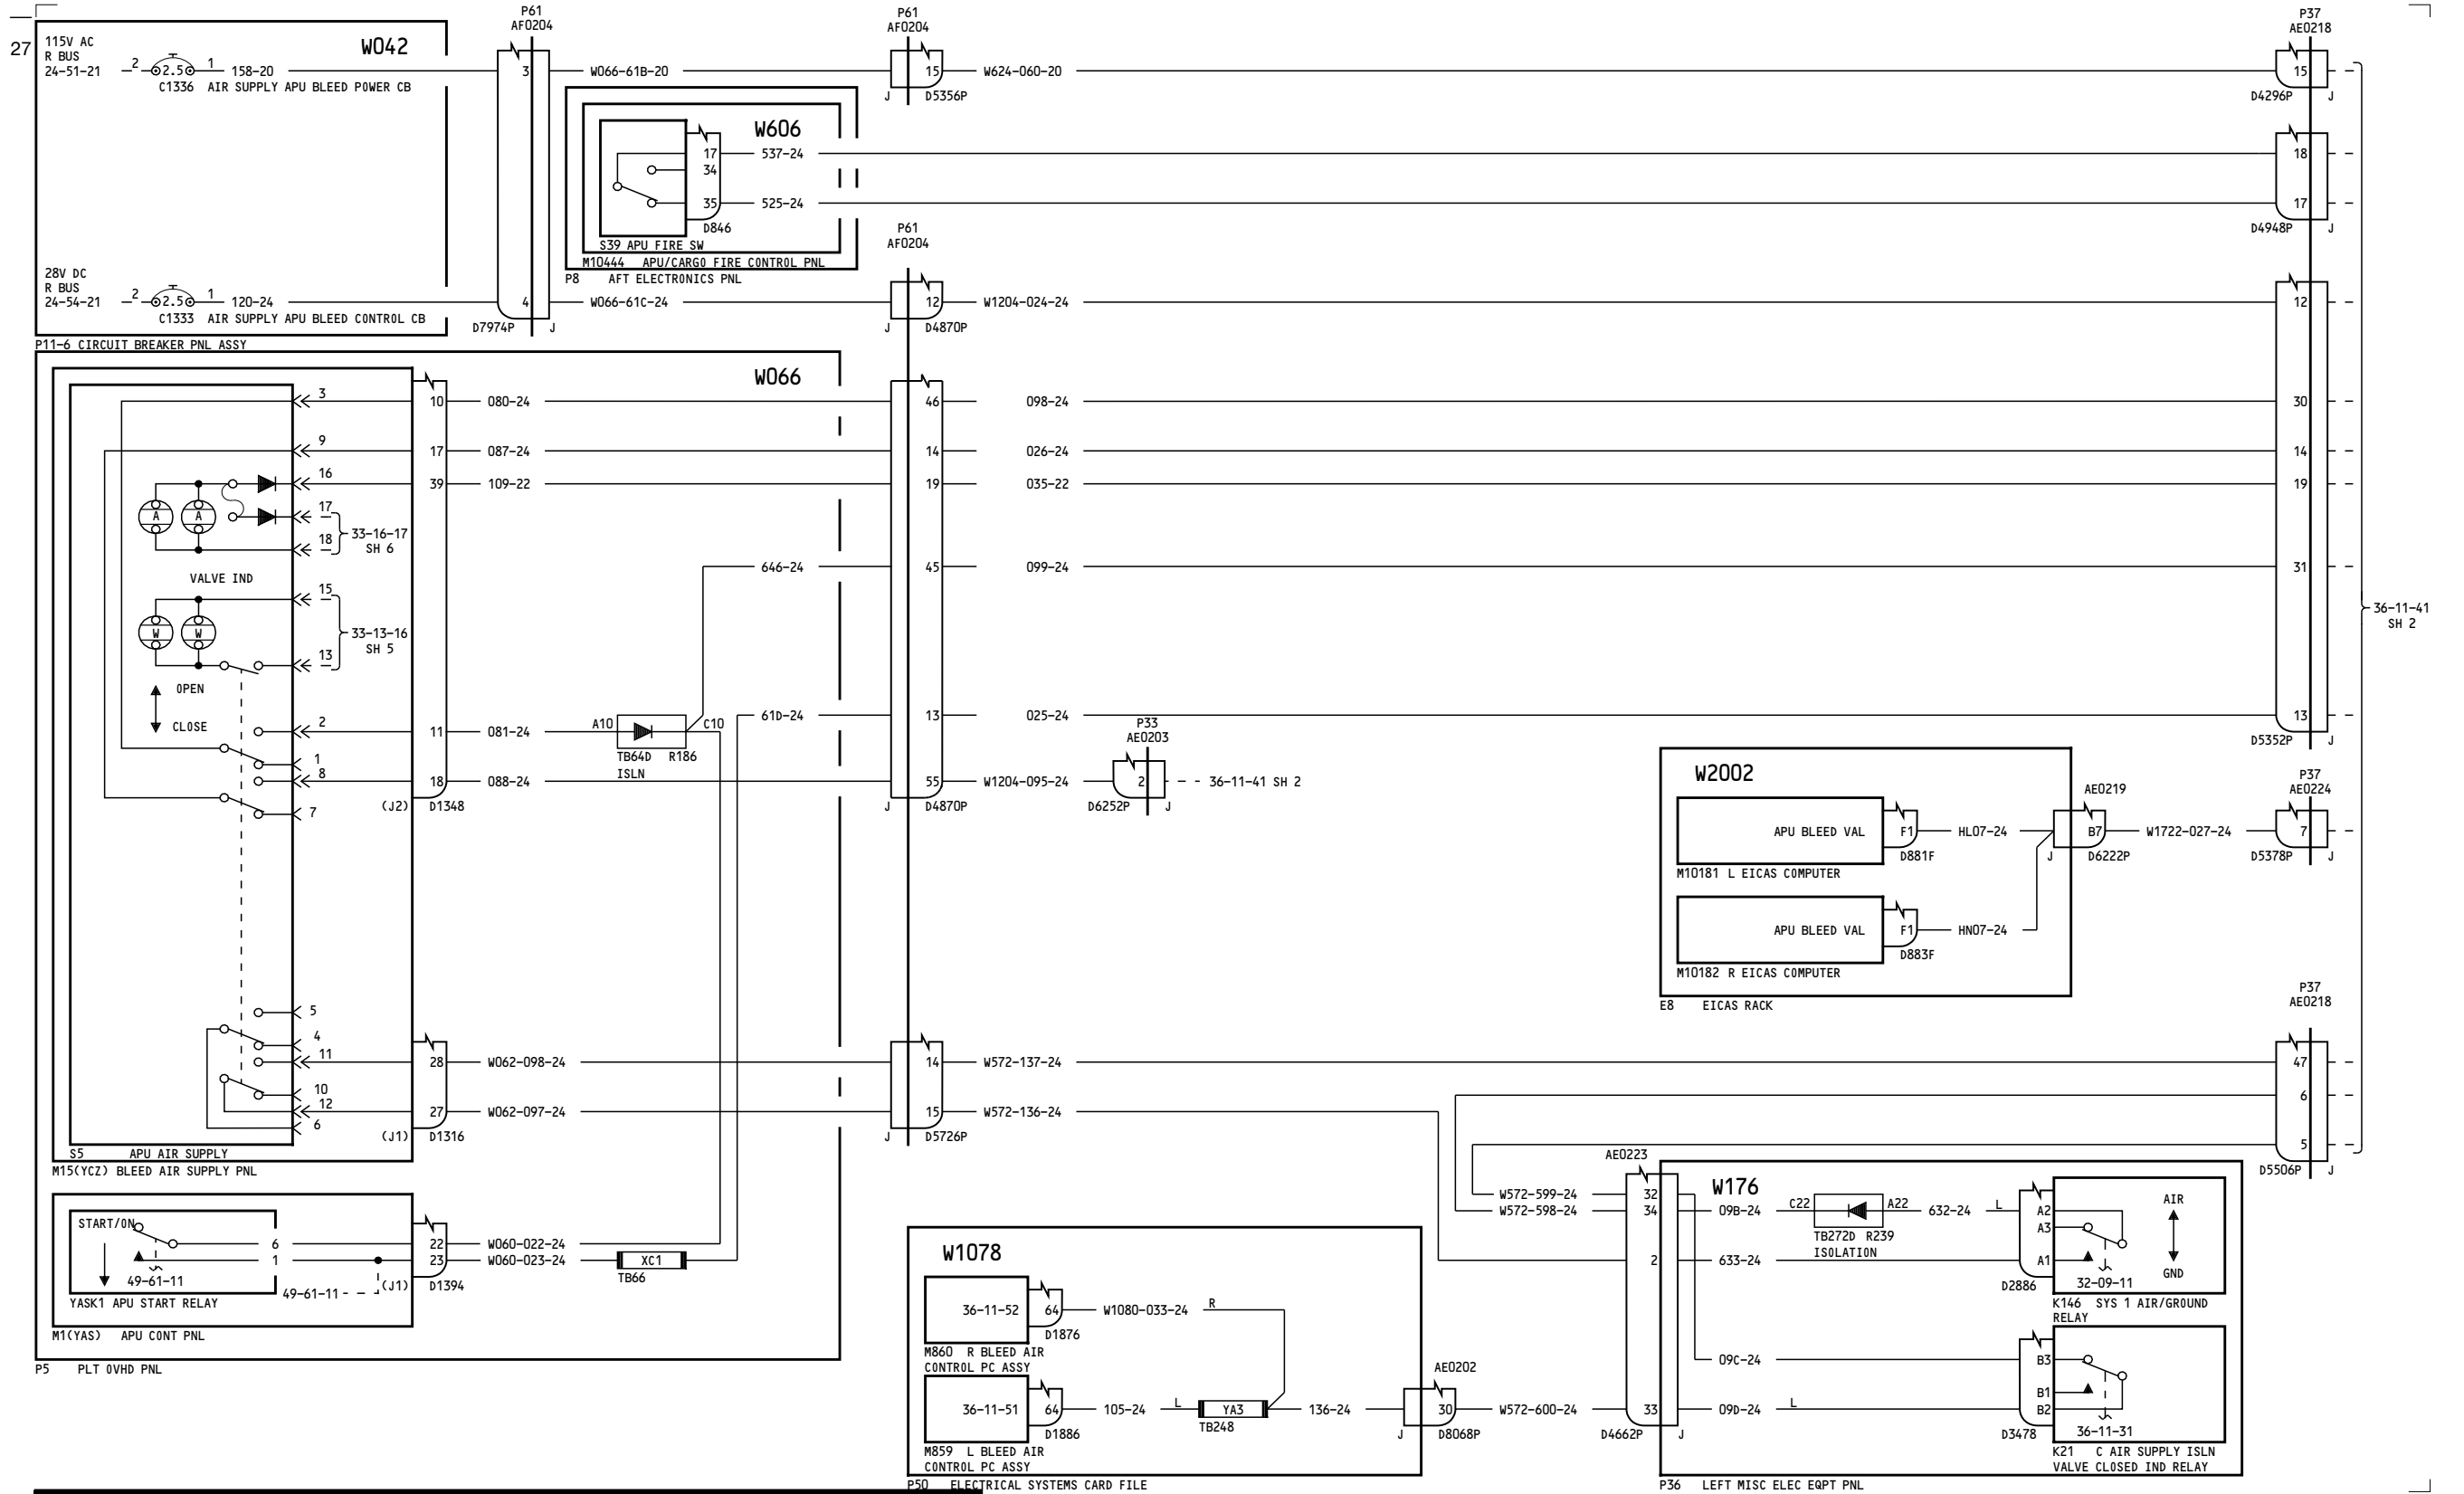

275-299

**AIR SUPPLY-AUXILIARY  
POWER UNIT AIR SUPPLY  
VALVE CONTROL**

D280T132


**36-11-41**

Page 3  
Sheet 1  
Jan 21/2005

P50 ELECTRICAL SYSTEMS CARD FILE

**36-11-41**

Page 3  
Sheet 1  
Jan 21/2005

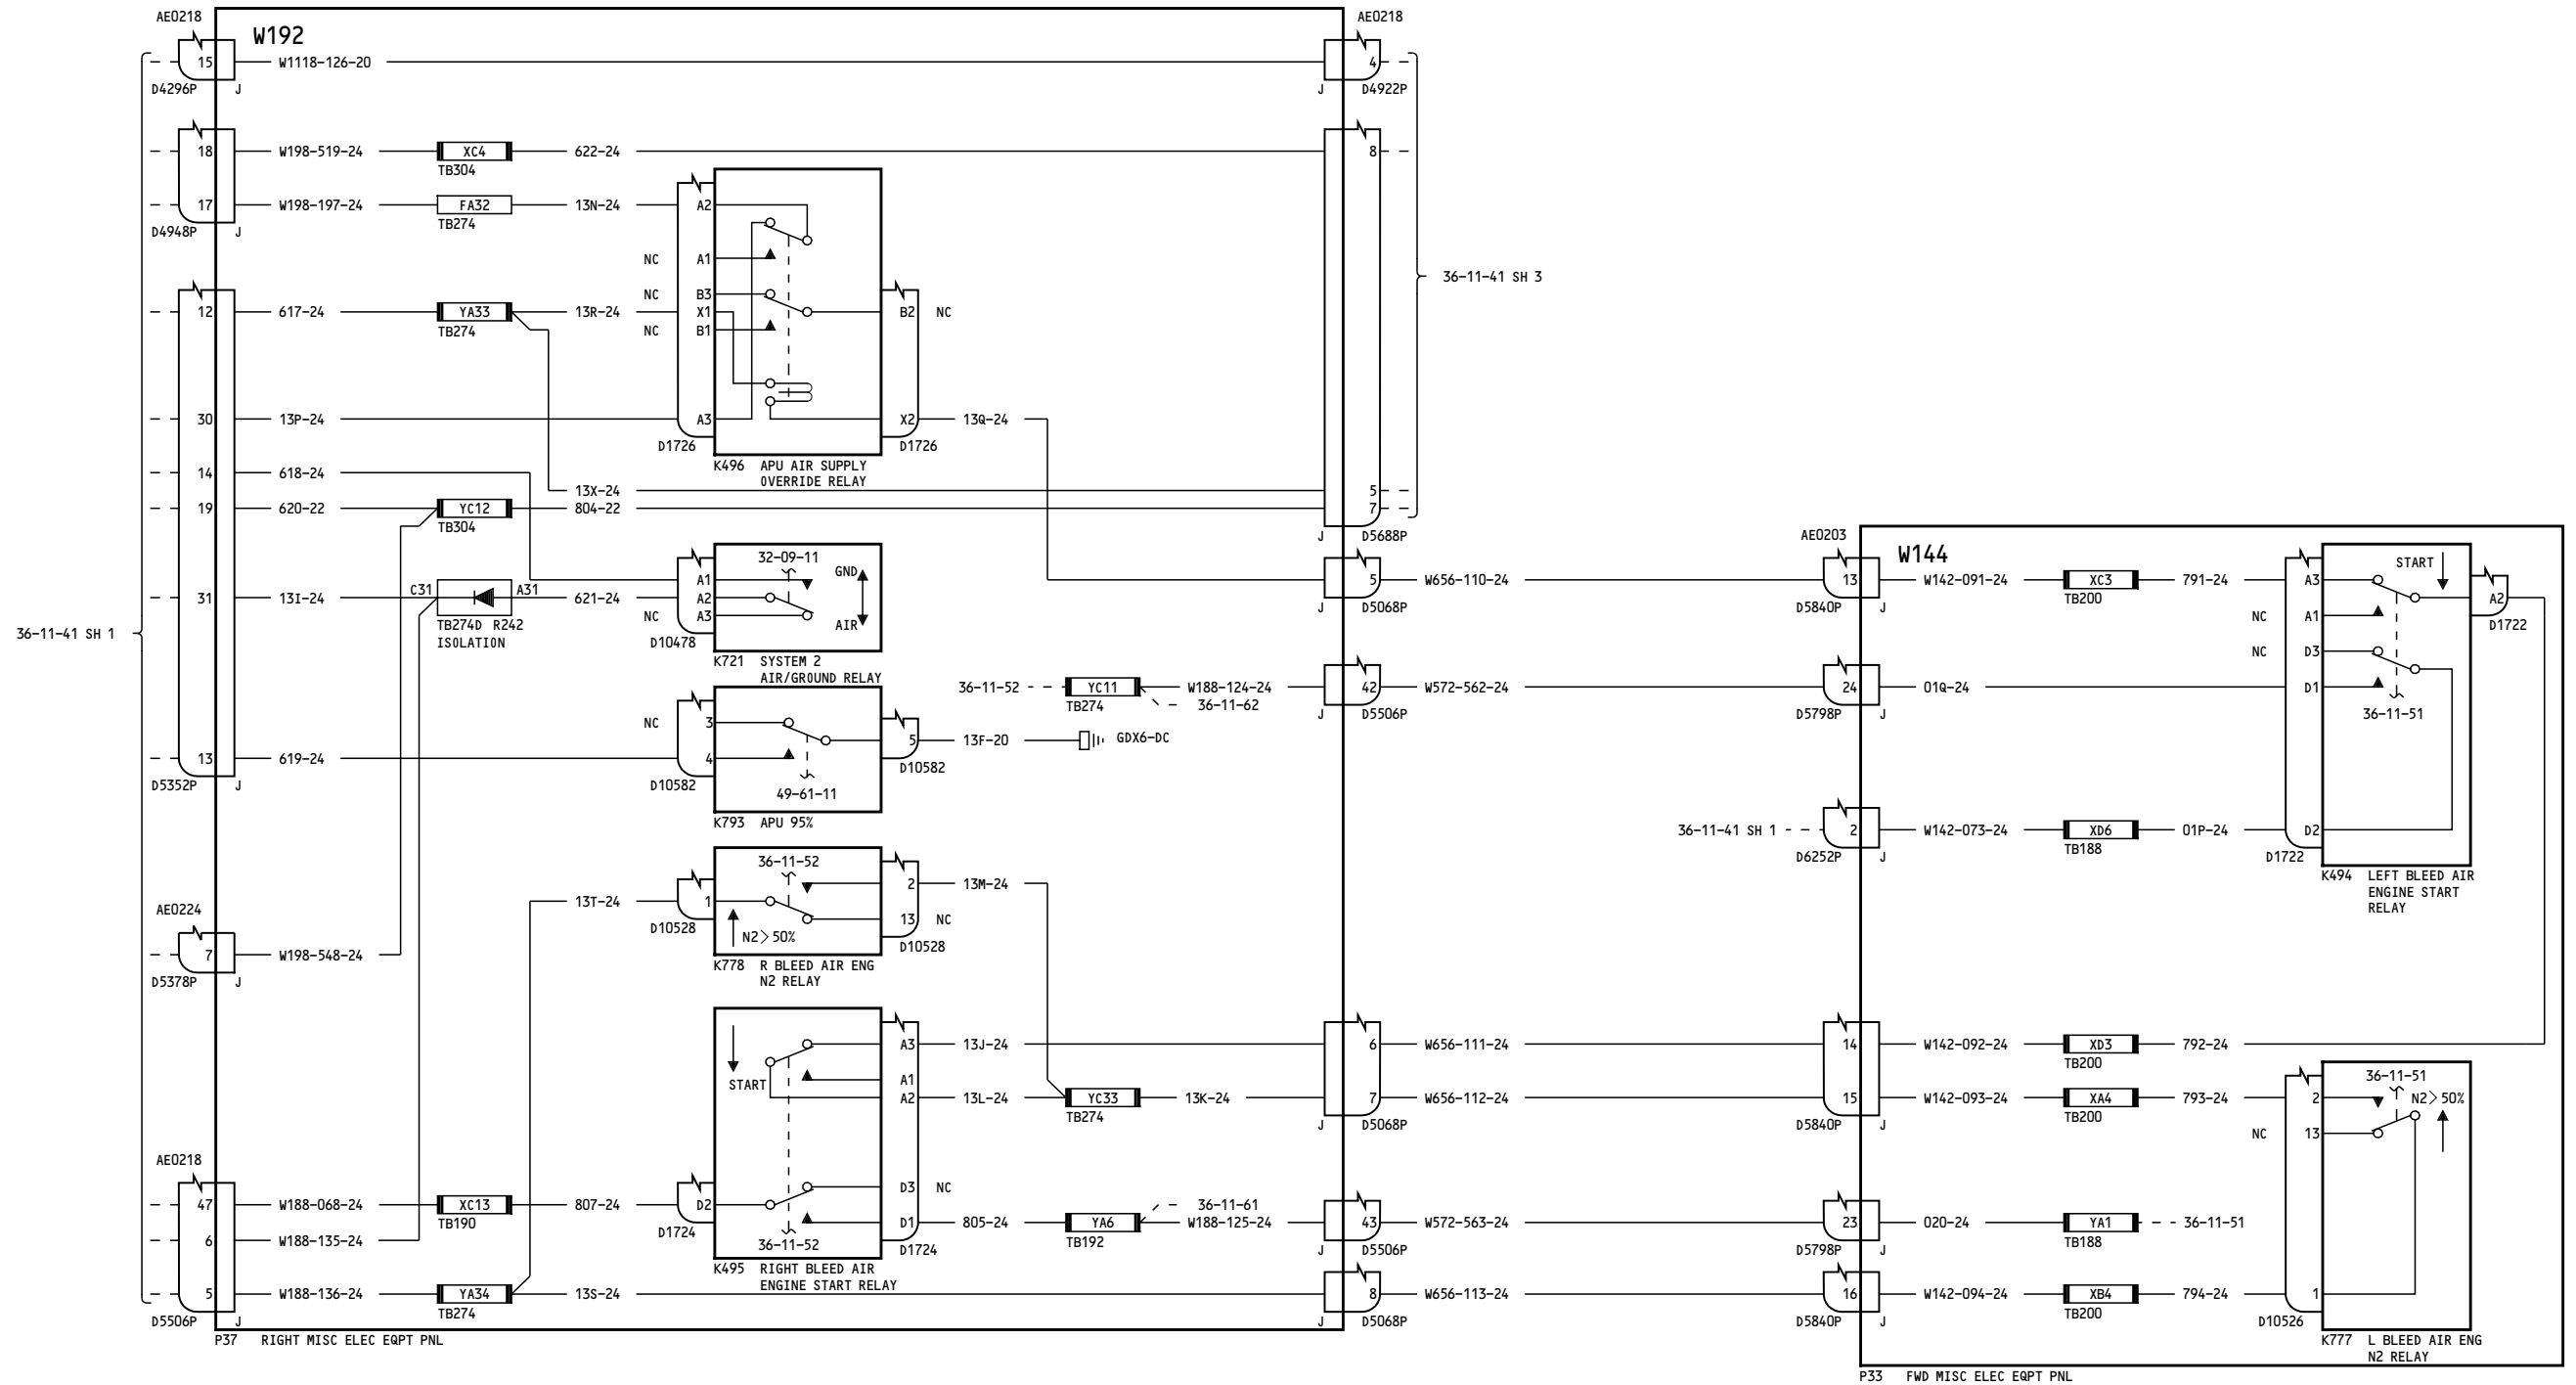

275-299

**AIR SUPPLY-AUXILIARY  
POWER UNIT AIR SUPPLY  
VALVE CONTROL**


D280T132


**36-11-41**

Page 3  
Sheet 2  
Jan 21/2005

**36-11-41**

Page 3  
Sheet 2  
Jan 21/2005

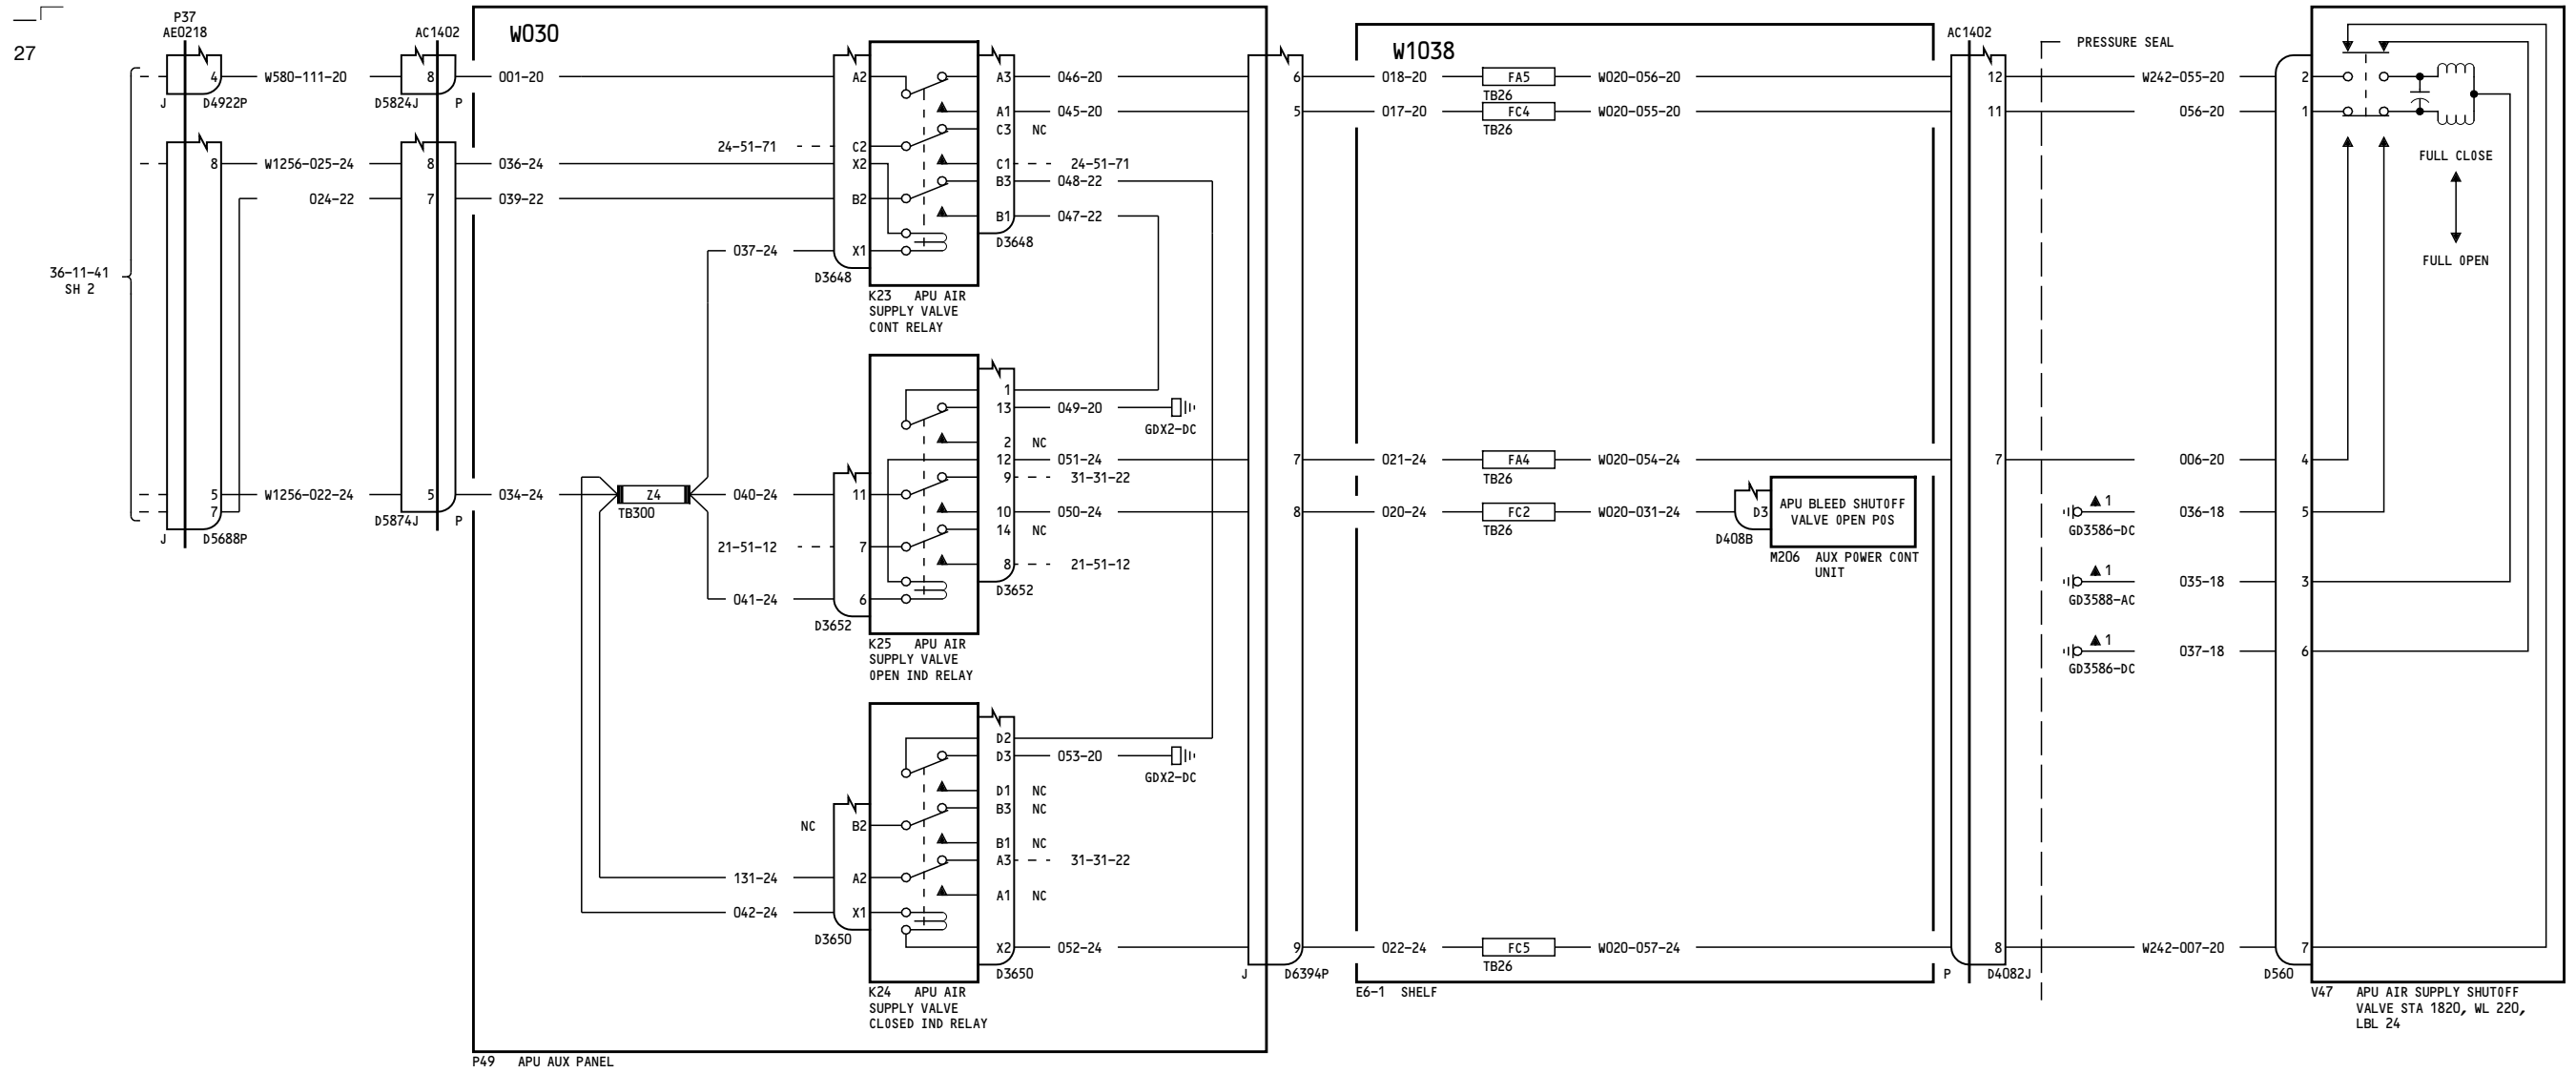

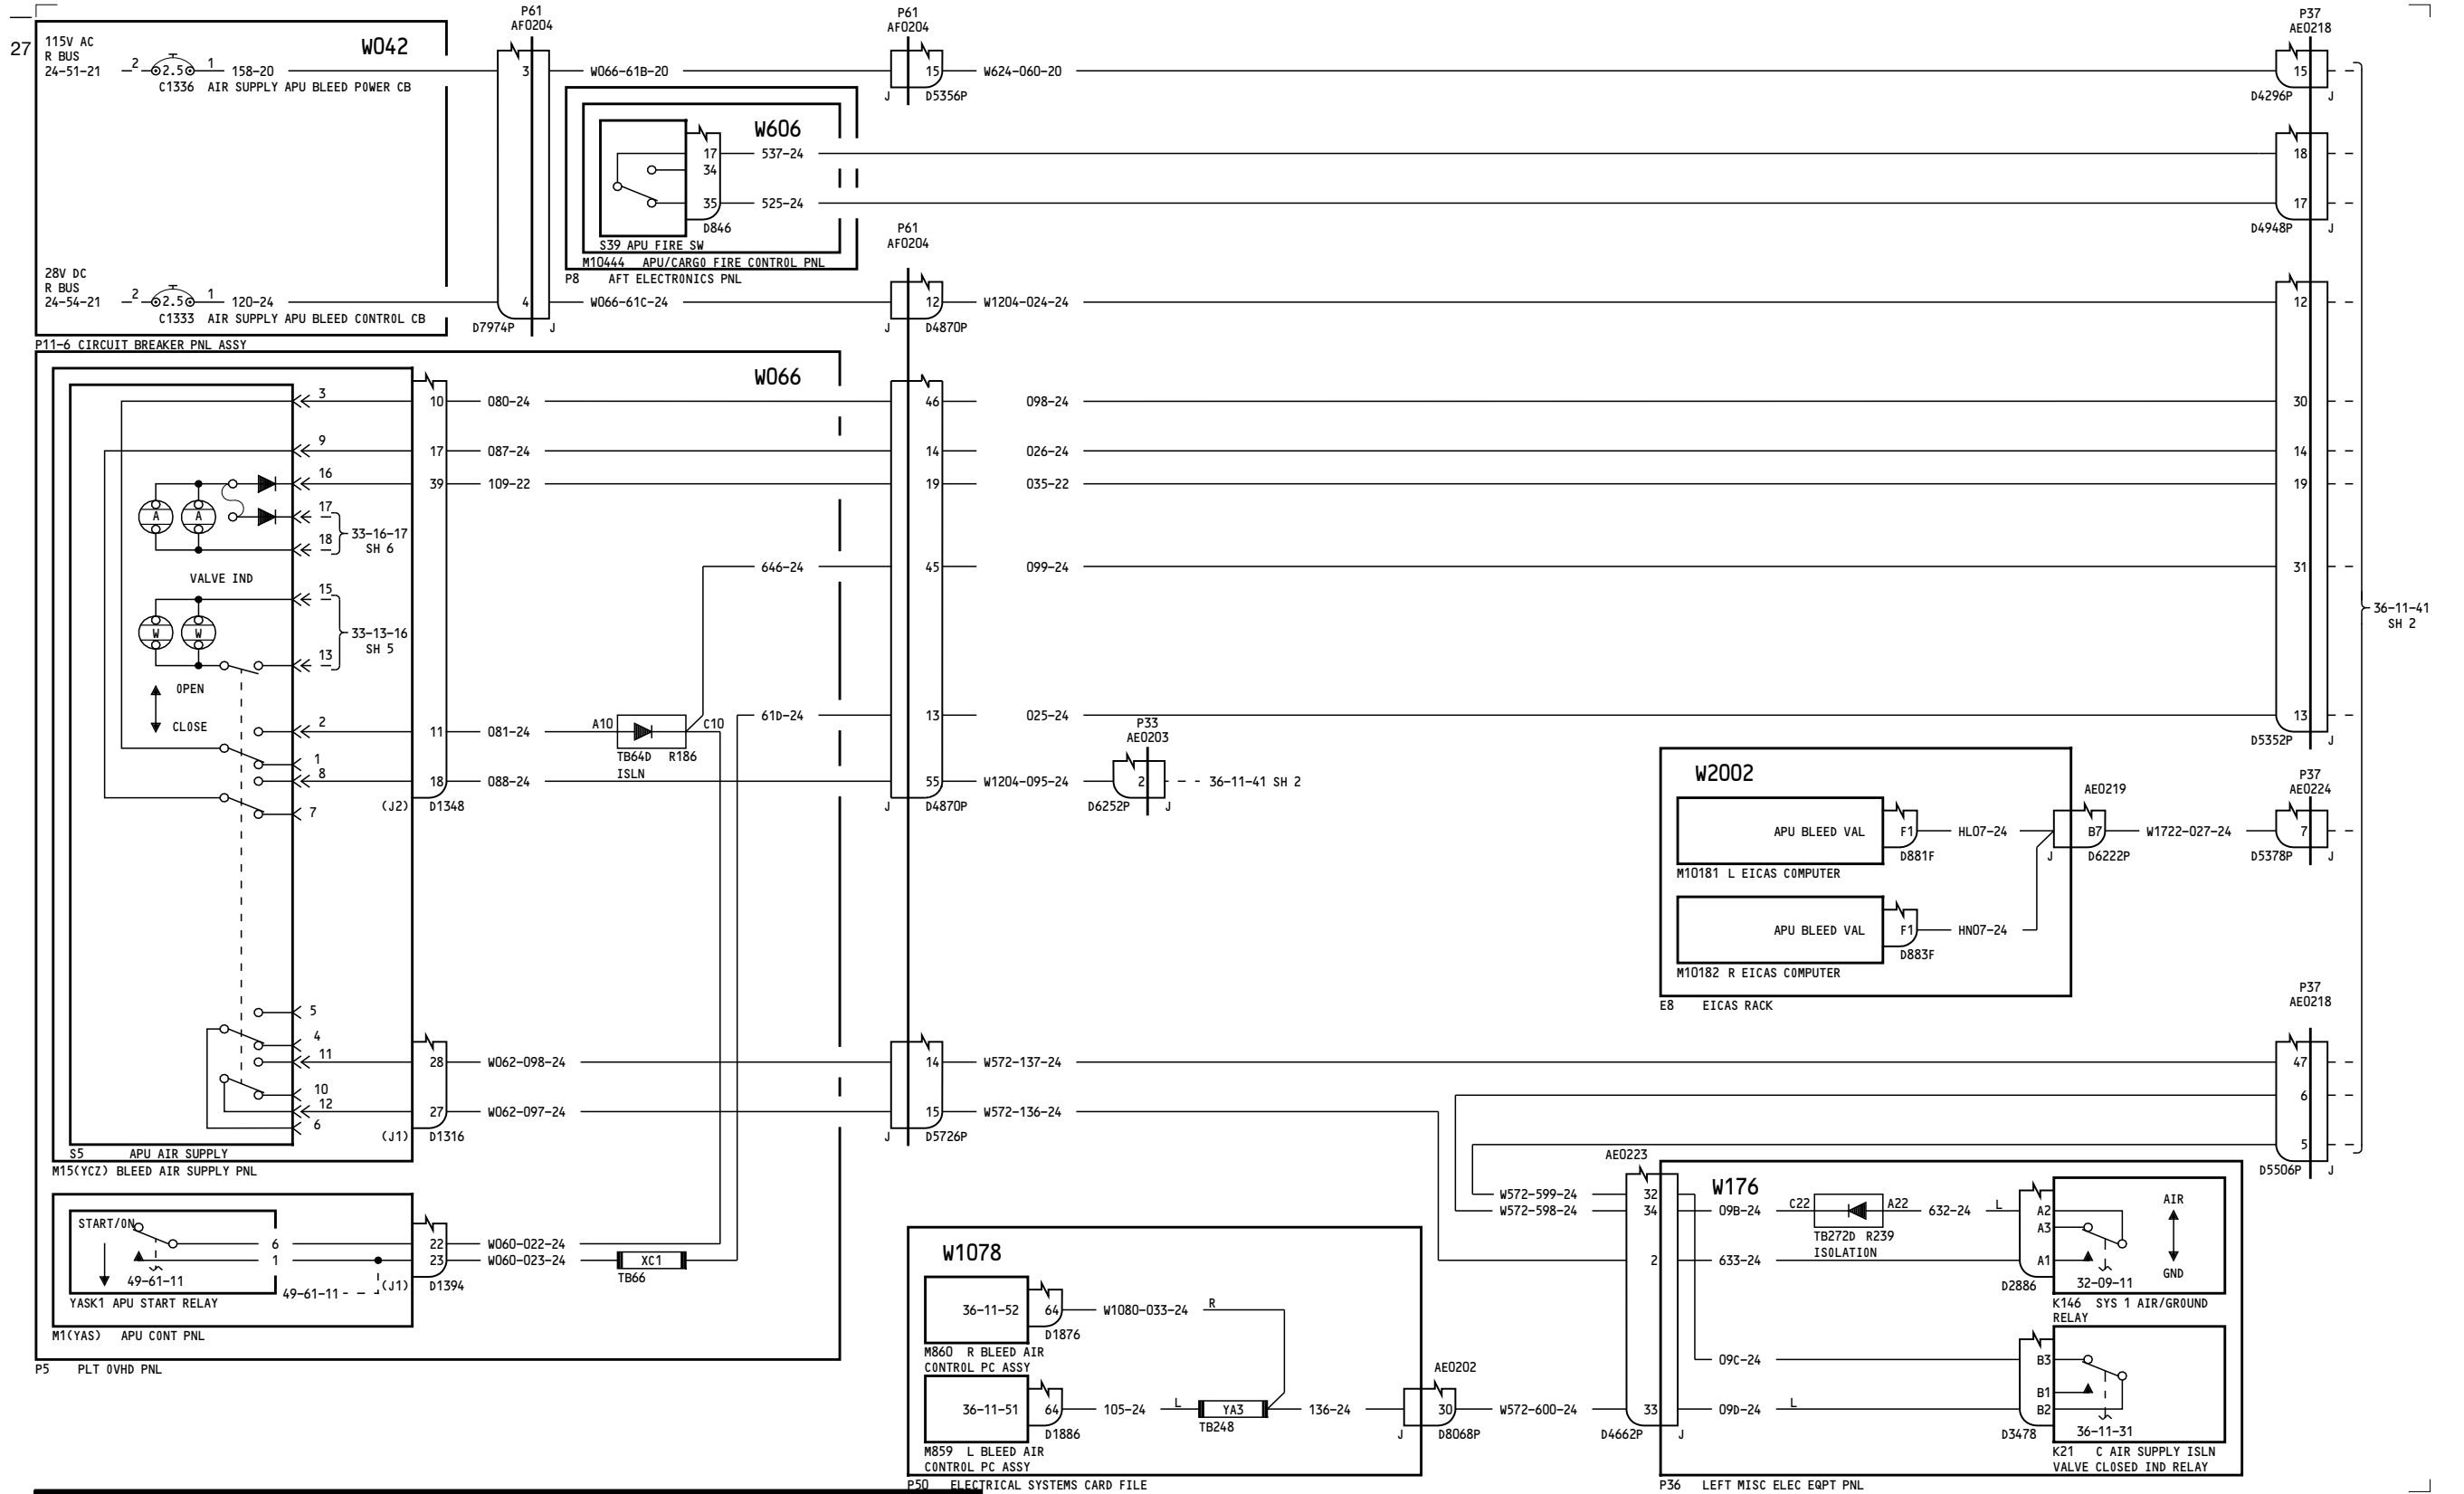

275-276

**AIR SUPPLY-AUXILIARY  
POWER UNIT AIR SUPPLY  
VALVE CONTROL**


D280T132

**36-11-41**

Page 3.1  
Sheet 1  
Jan 21/2005

**36-11-41**

Page 3.1  
Sheet 1  
Jan 21/2005

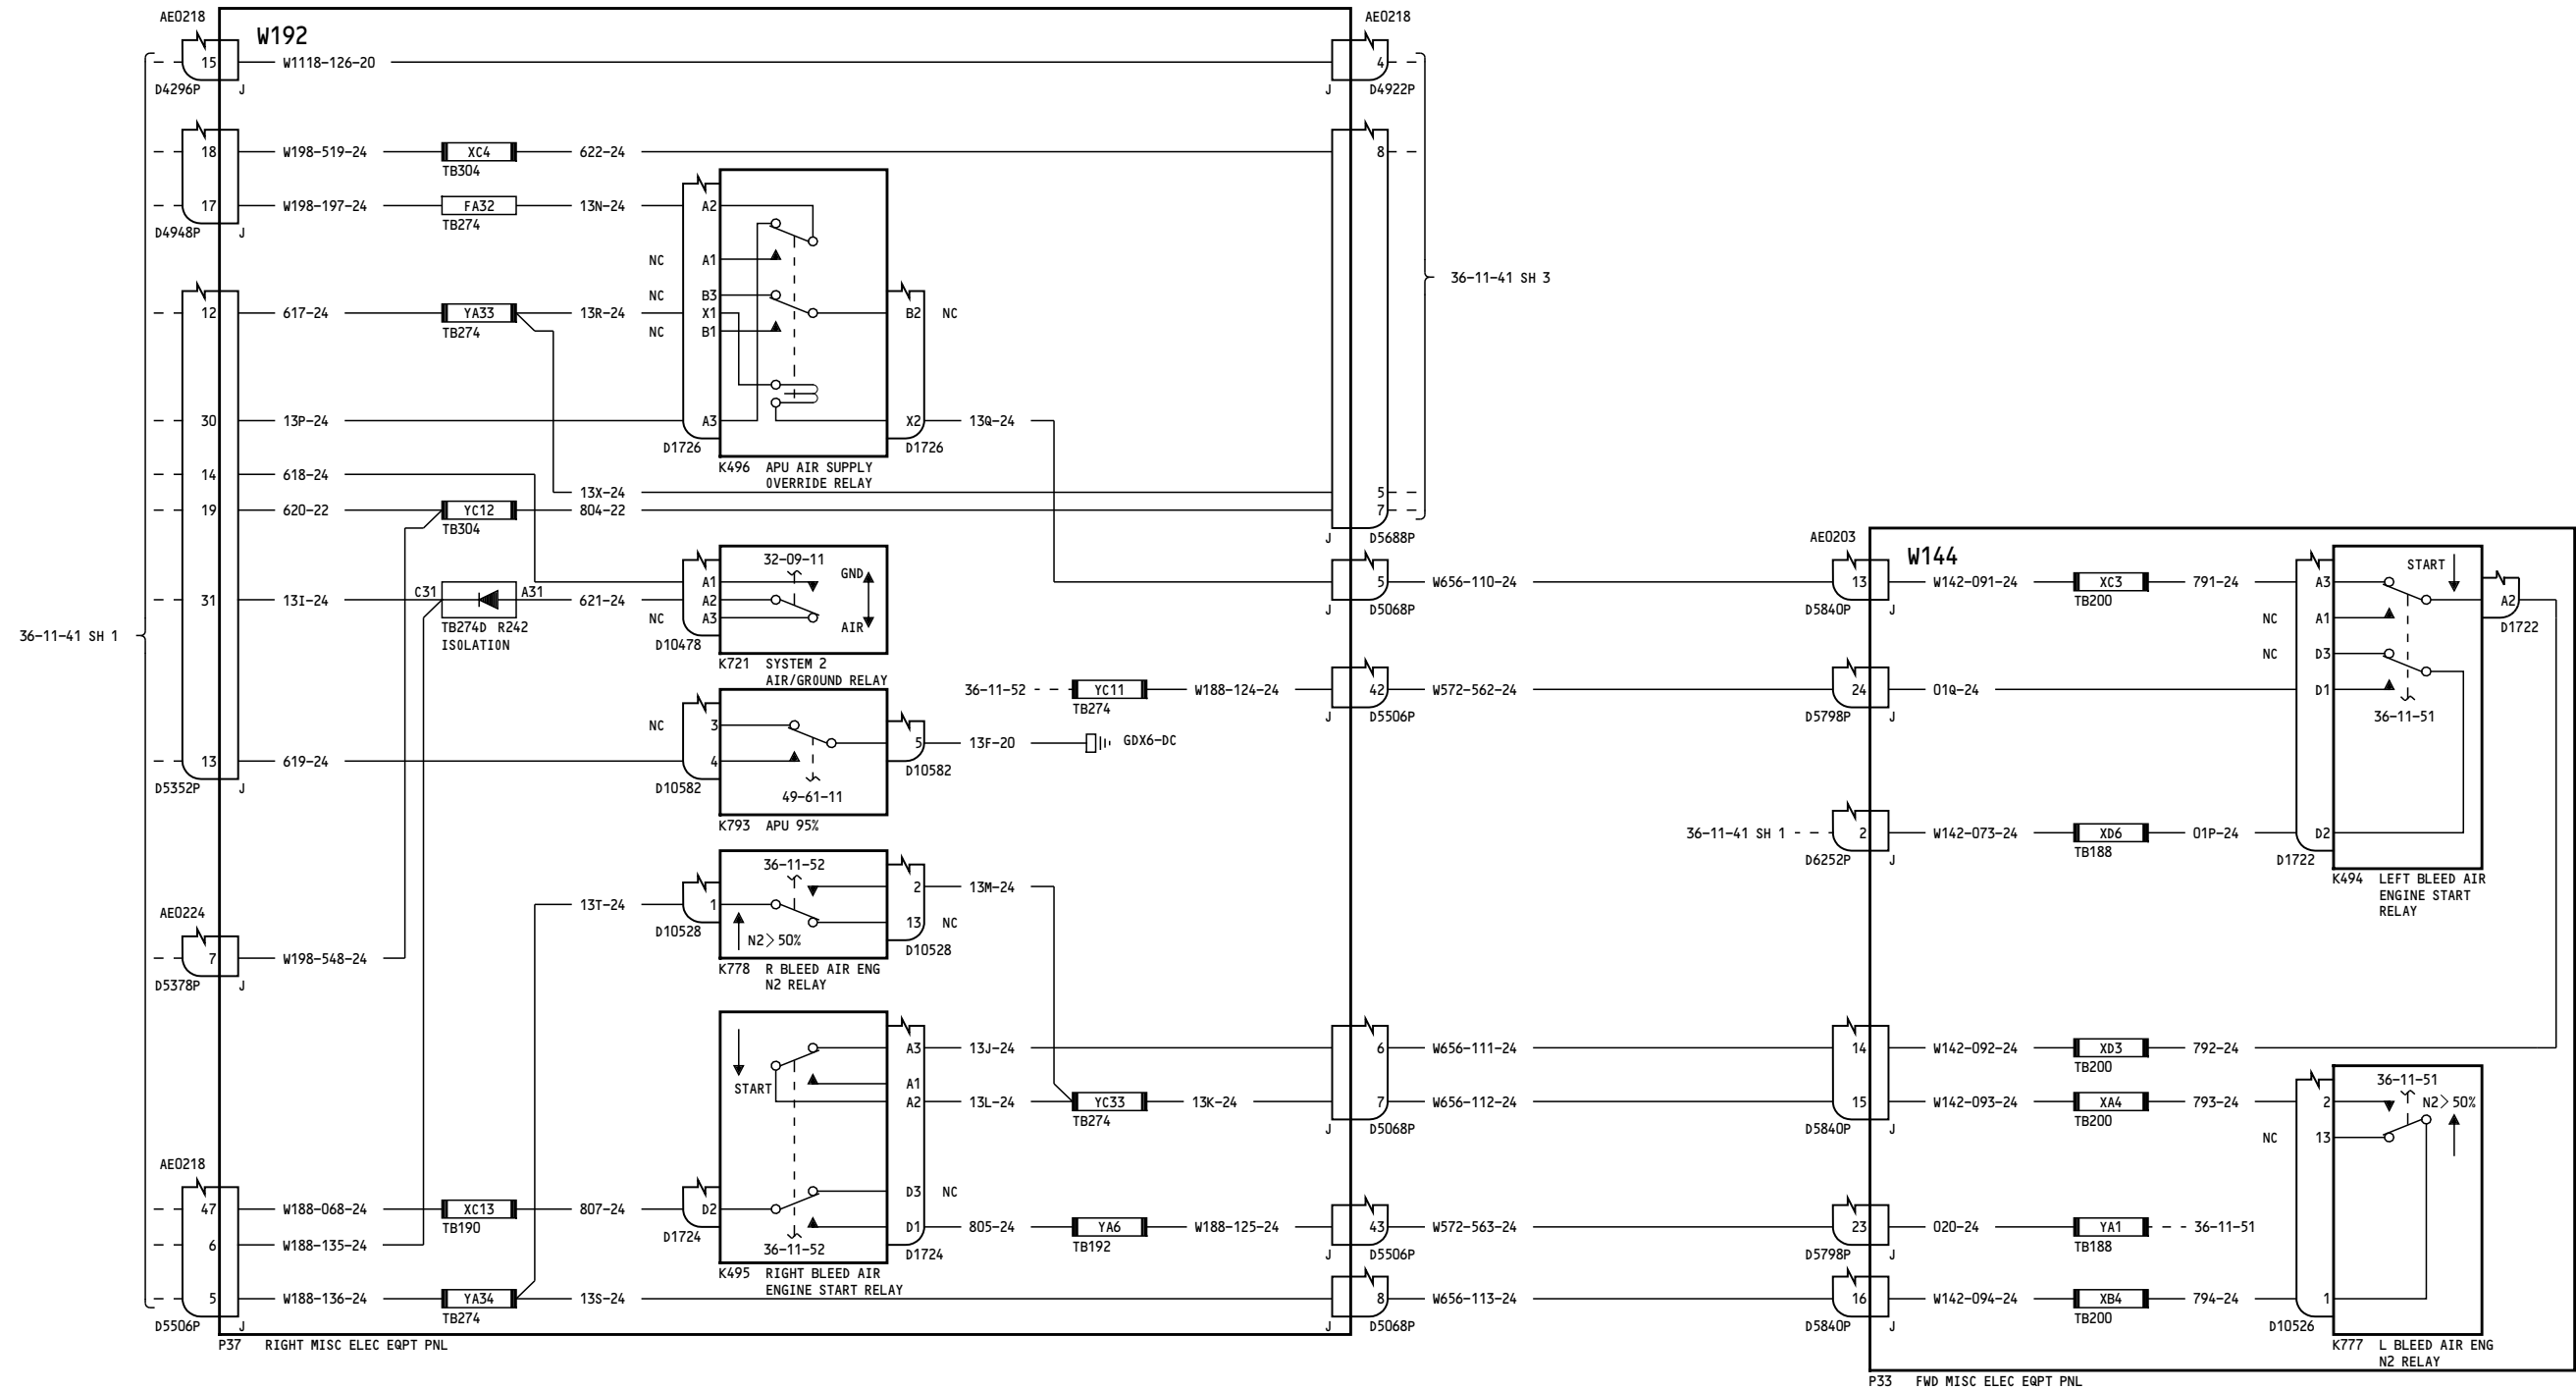

275-276

AIR SUPPLY-AUXILIARY POWER UNIT AIR SUPPLY VALVE CONTROL

D280T132

36-11-41


Page 3.1 Sheet 2 Jan 21/2005

Incorporates 36-0026 IN06

36-11-41

Page 3.1 Sheet 2 Jan 21/2005



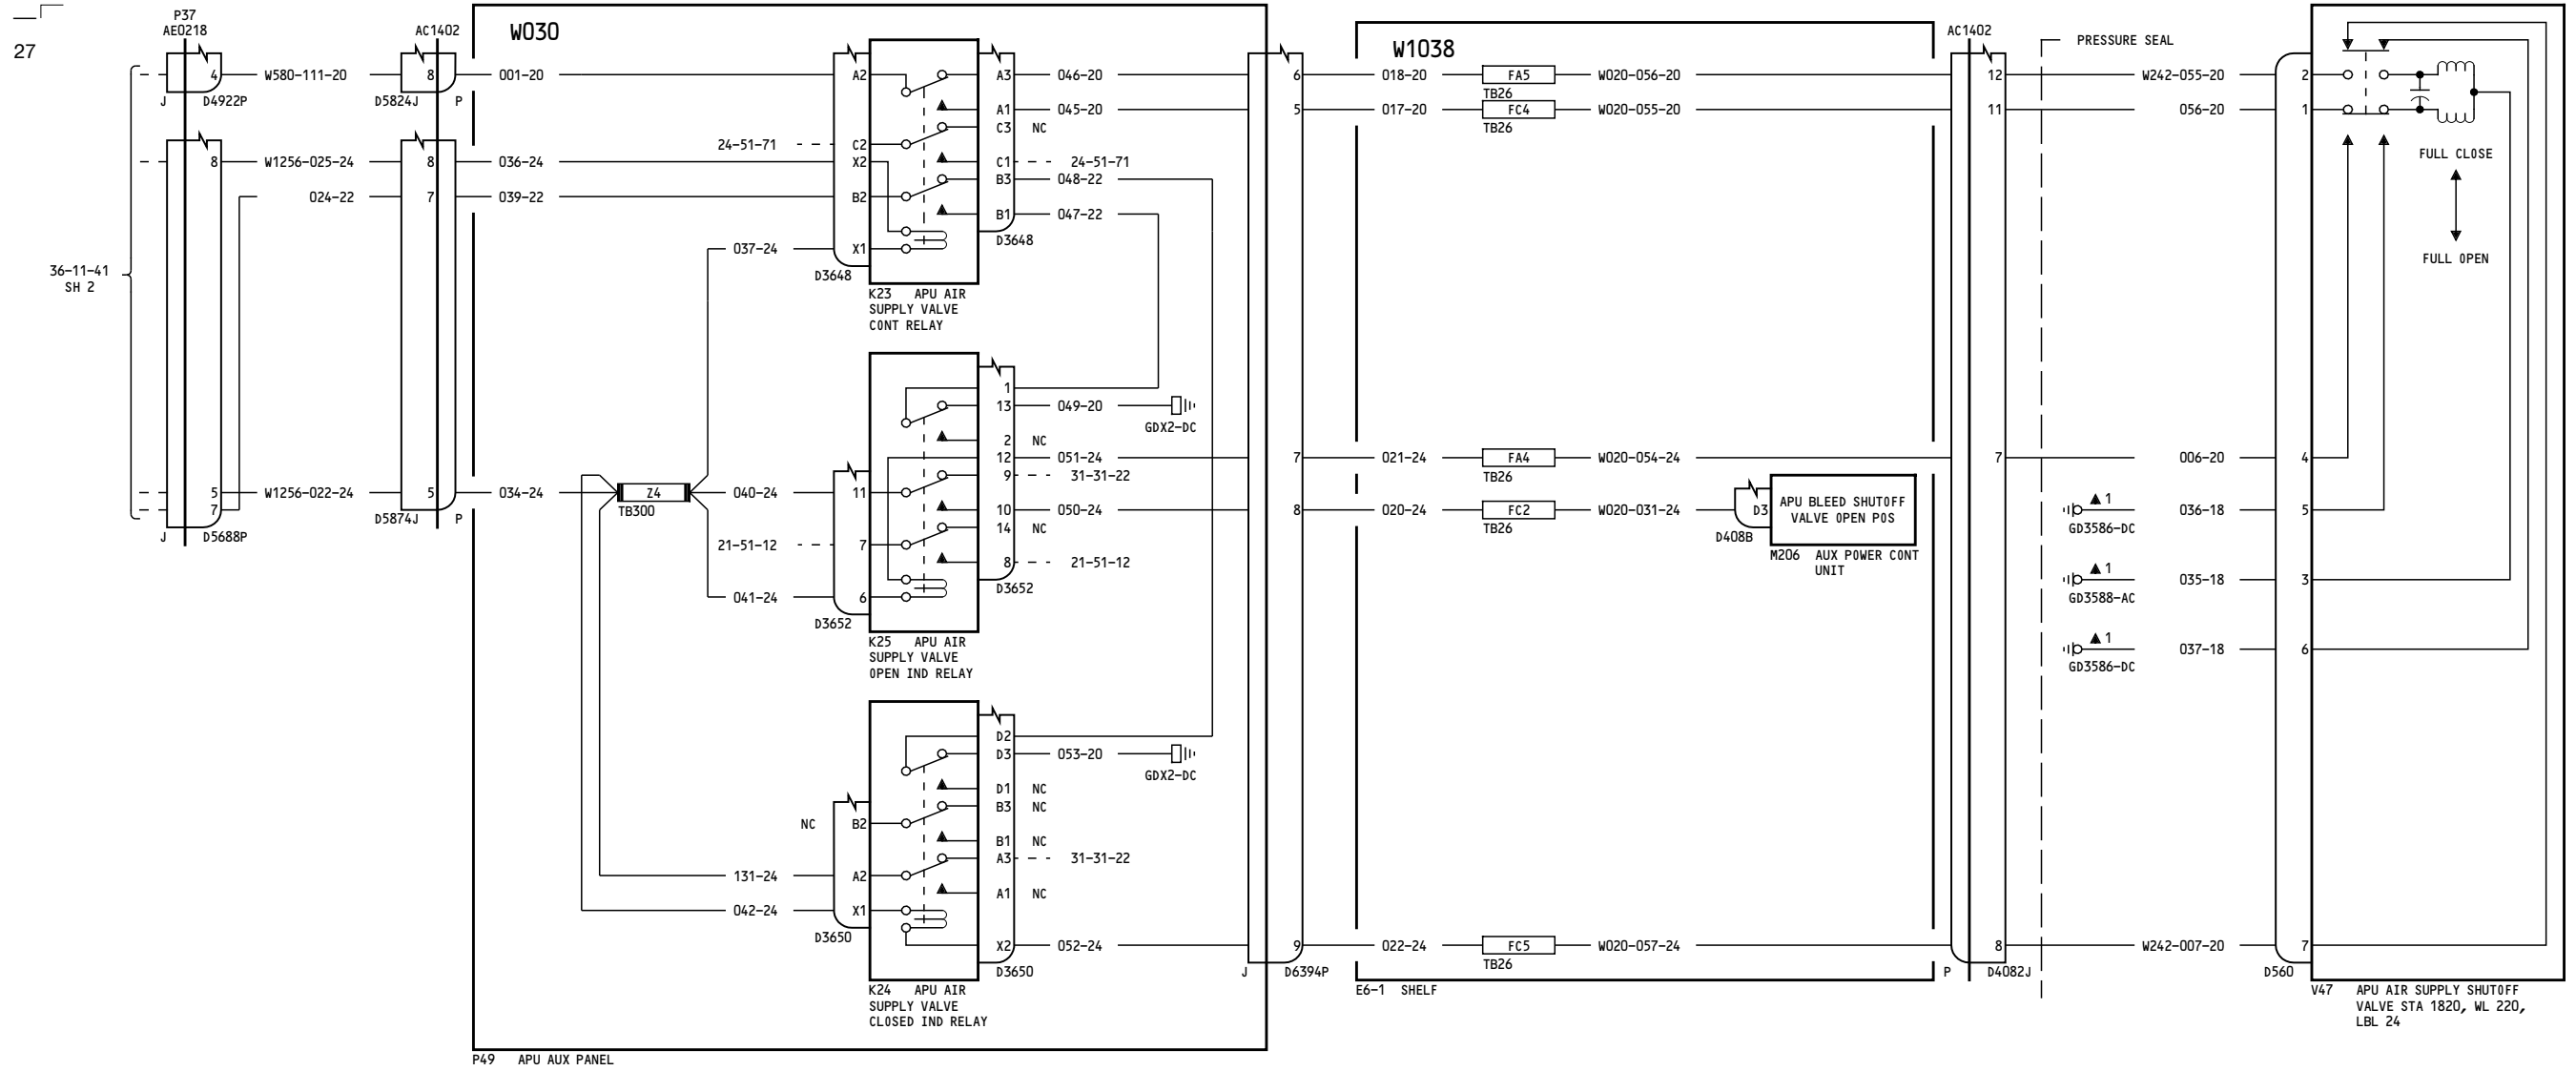

275-276

**AIR SUPPLY-AUXILIARY  
POWER UNIT AIR SUPPLY  
VALVE CONTROL**


D280T132

**36-11-41**

Page 3.1  
Sheet 3  
Jan 21/2005

**36-11-41**

Page 3.1  
Sheet 3  
Jan 21/2005

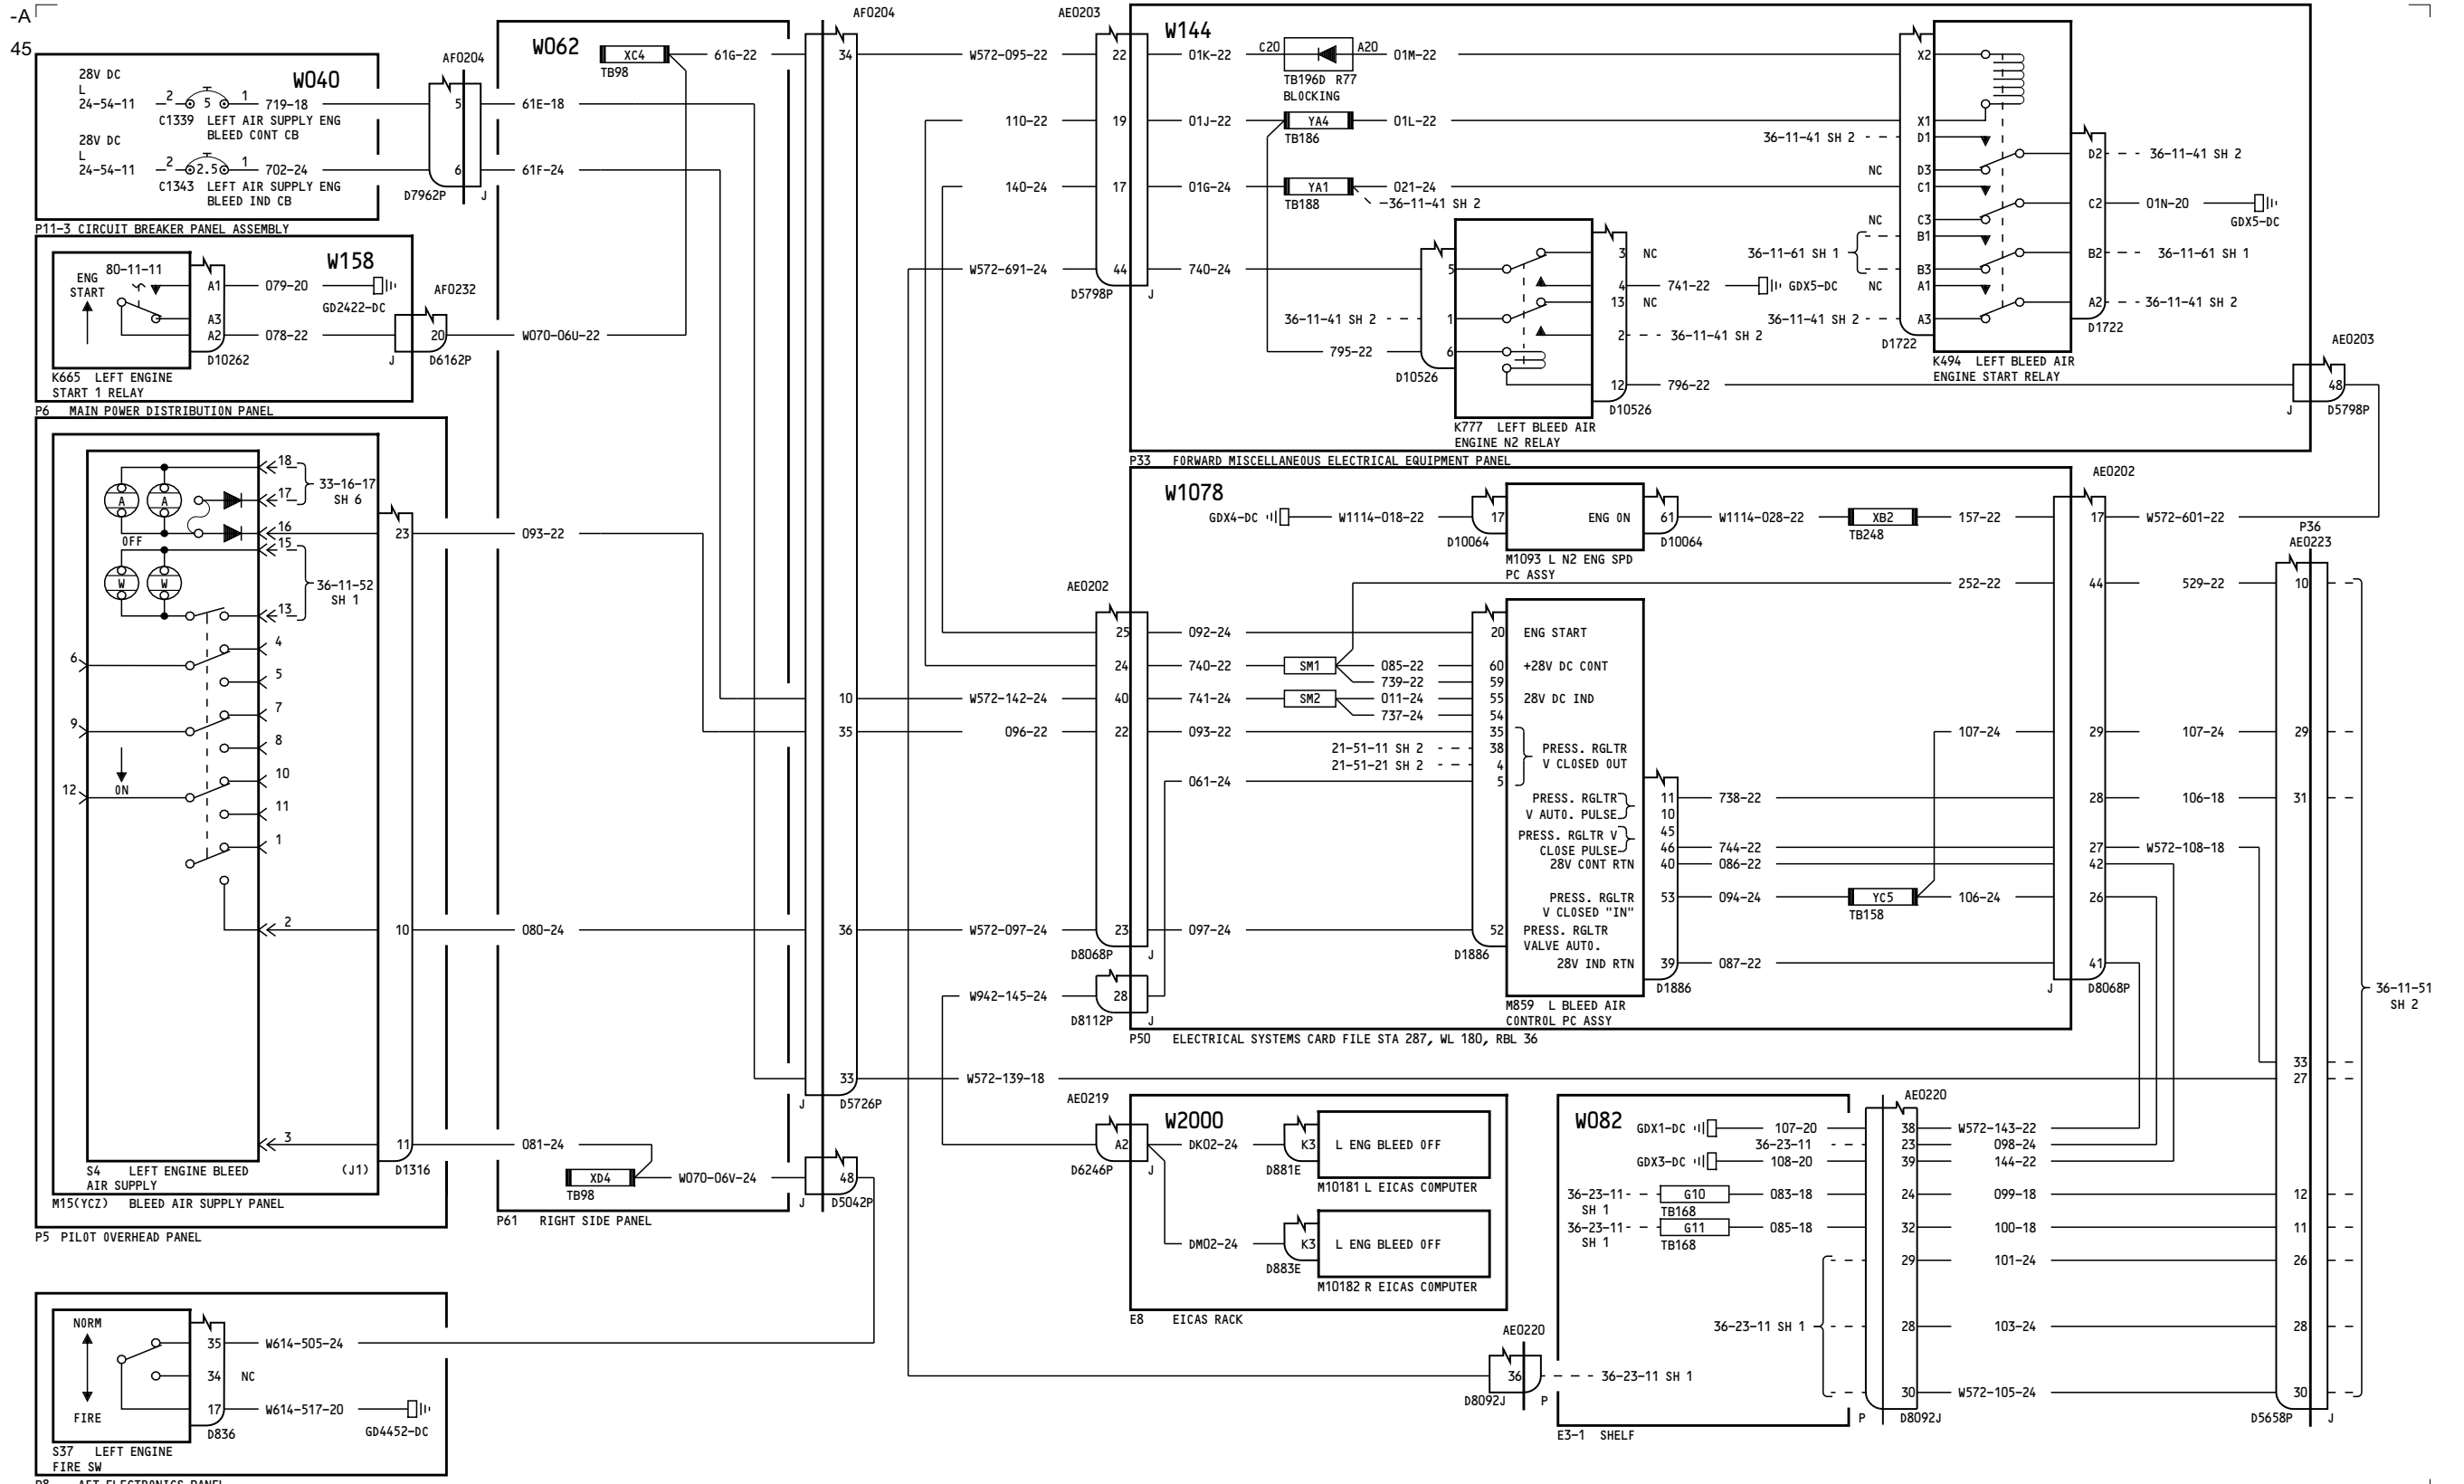

050-051, 163-165


**AIR SUPPLY-  
LEFT PRESSURE REGULATION  
& SHUTOFF**

**36-11-51**

Incorporates  
36-0029 R05

**36-11-51**

D280T132

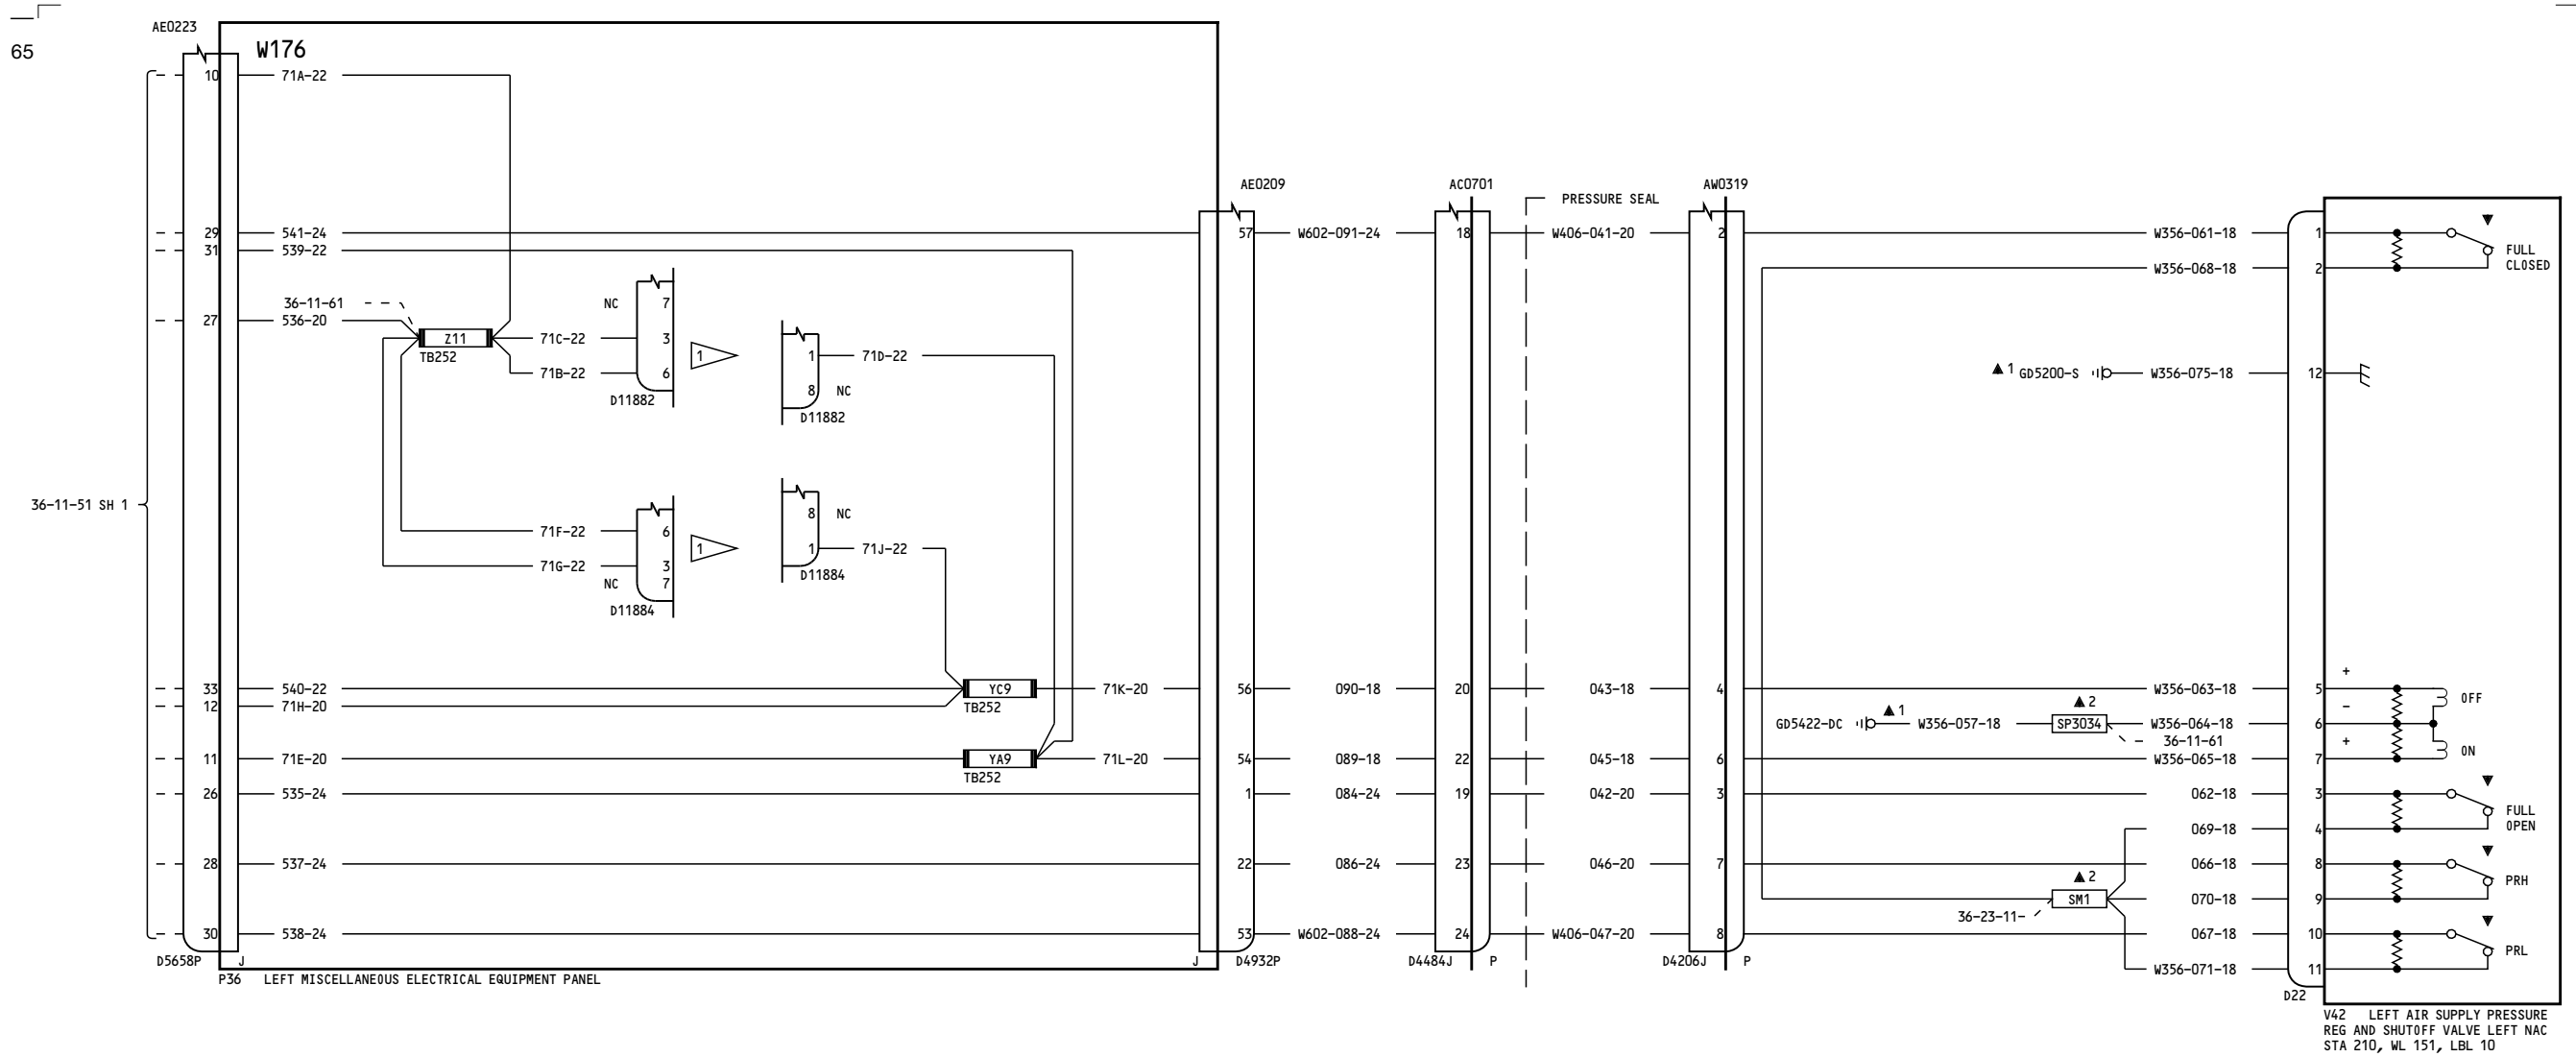

NOTES:  
 1 CAP & STOW CONNECTOR WHEN MATING EQUIPMENT IS NOT INSTALLED.

050-051, 163-165

**AIR SUPPLY-  
 LEFT PRESSURE REGULATION  
 & SHUTOFF**

D280T132


**36-11-51**

Page 1.1  
 Sheet 2  
 Jan 21/2005

Incorporates  
 36-0026 R02

**36-11-51**

Page 1.1  
 Sheet 2  
 Jan 21/2005

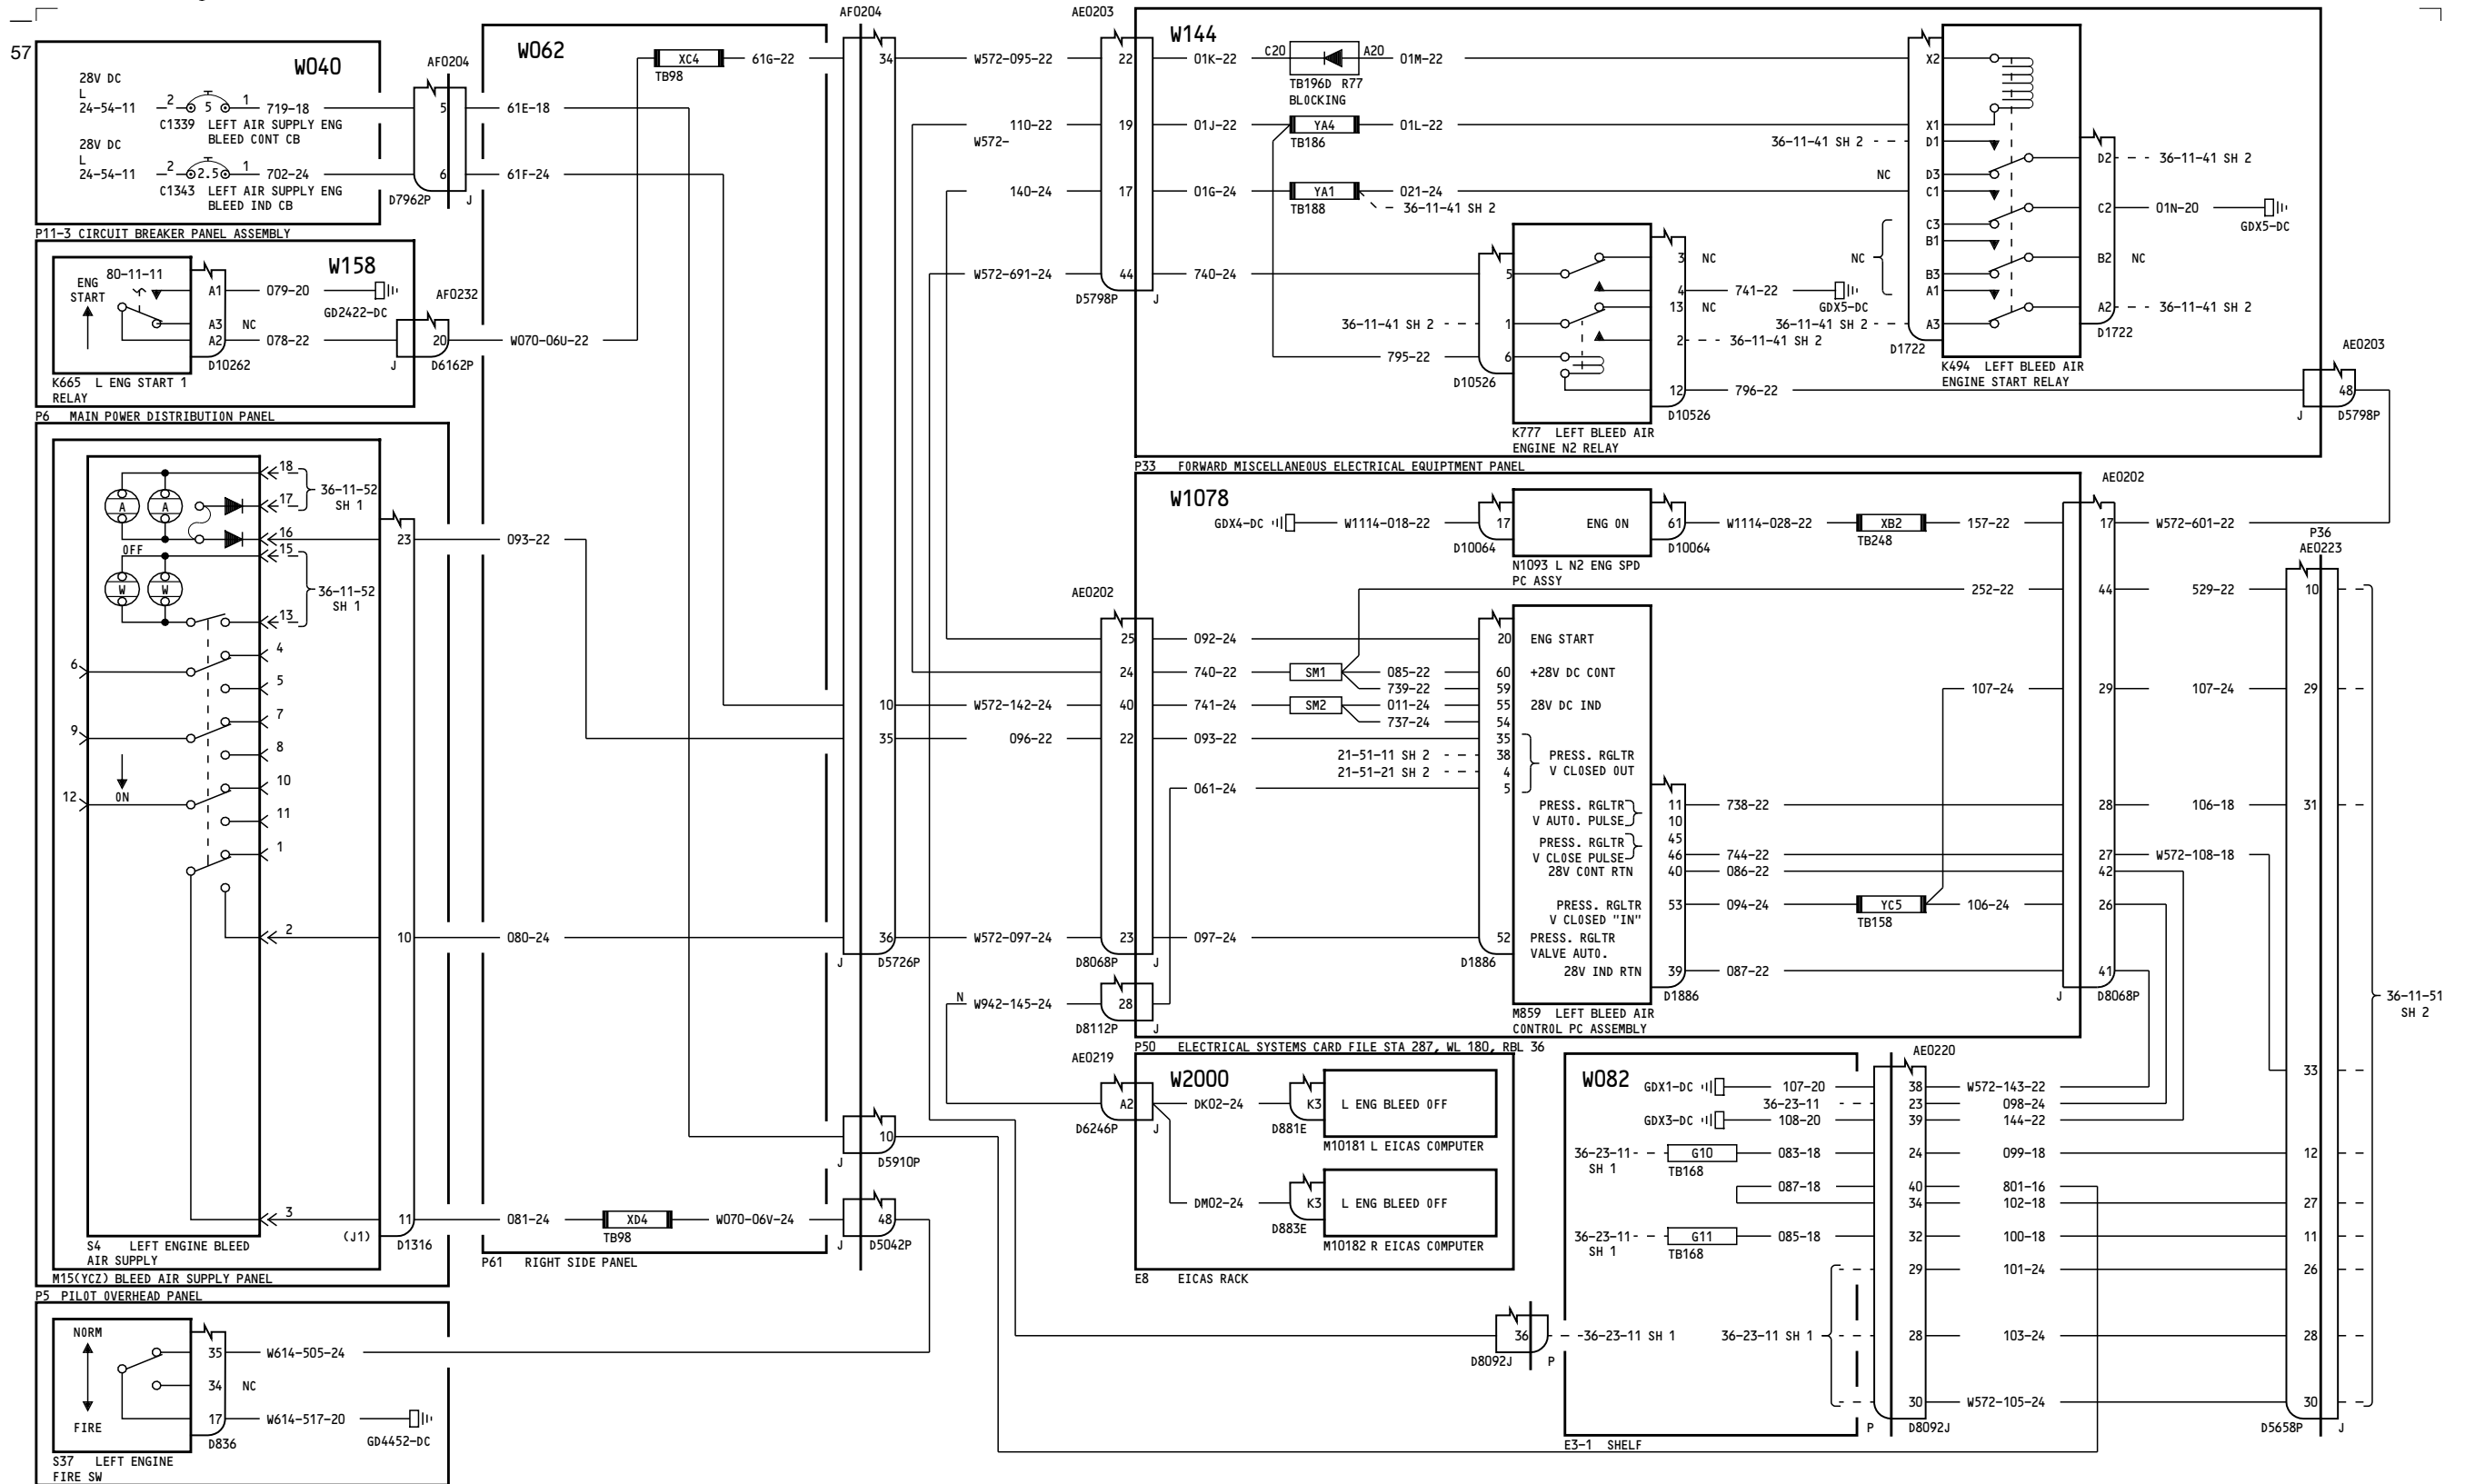

150-154

**AIR SUPPLY-  
LEFT PRESSURE REGULATION  
& SHUTOFF**

D280T132

**36-11-51**


Page 2.1  
Sheet 1  
Jan 21/2005

- Incorporates
- ▶ 36-0026
  - ▶ 36-0027
  - ▶ 36-0029 R05

**36-11-51**

Page 2.1  
Sheet 1  
Jan 21/2005

66

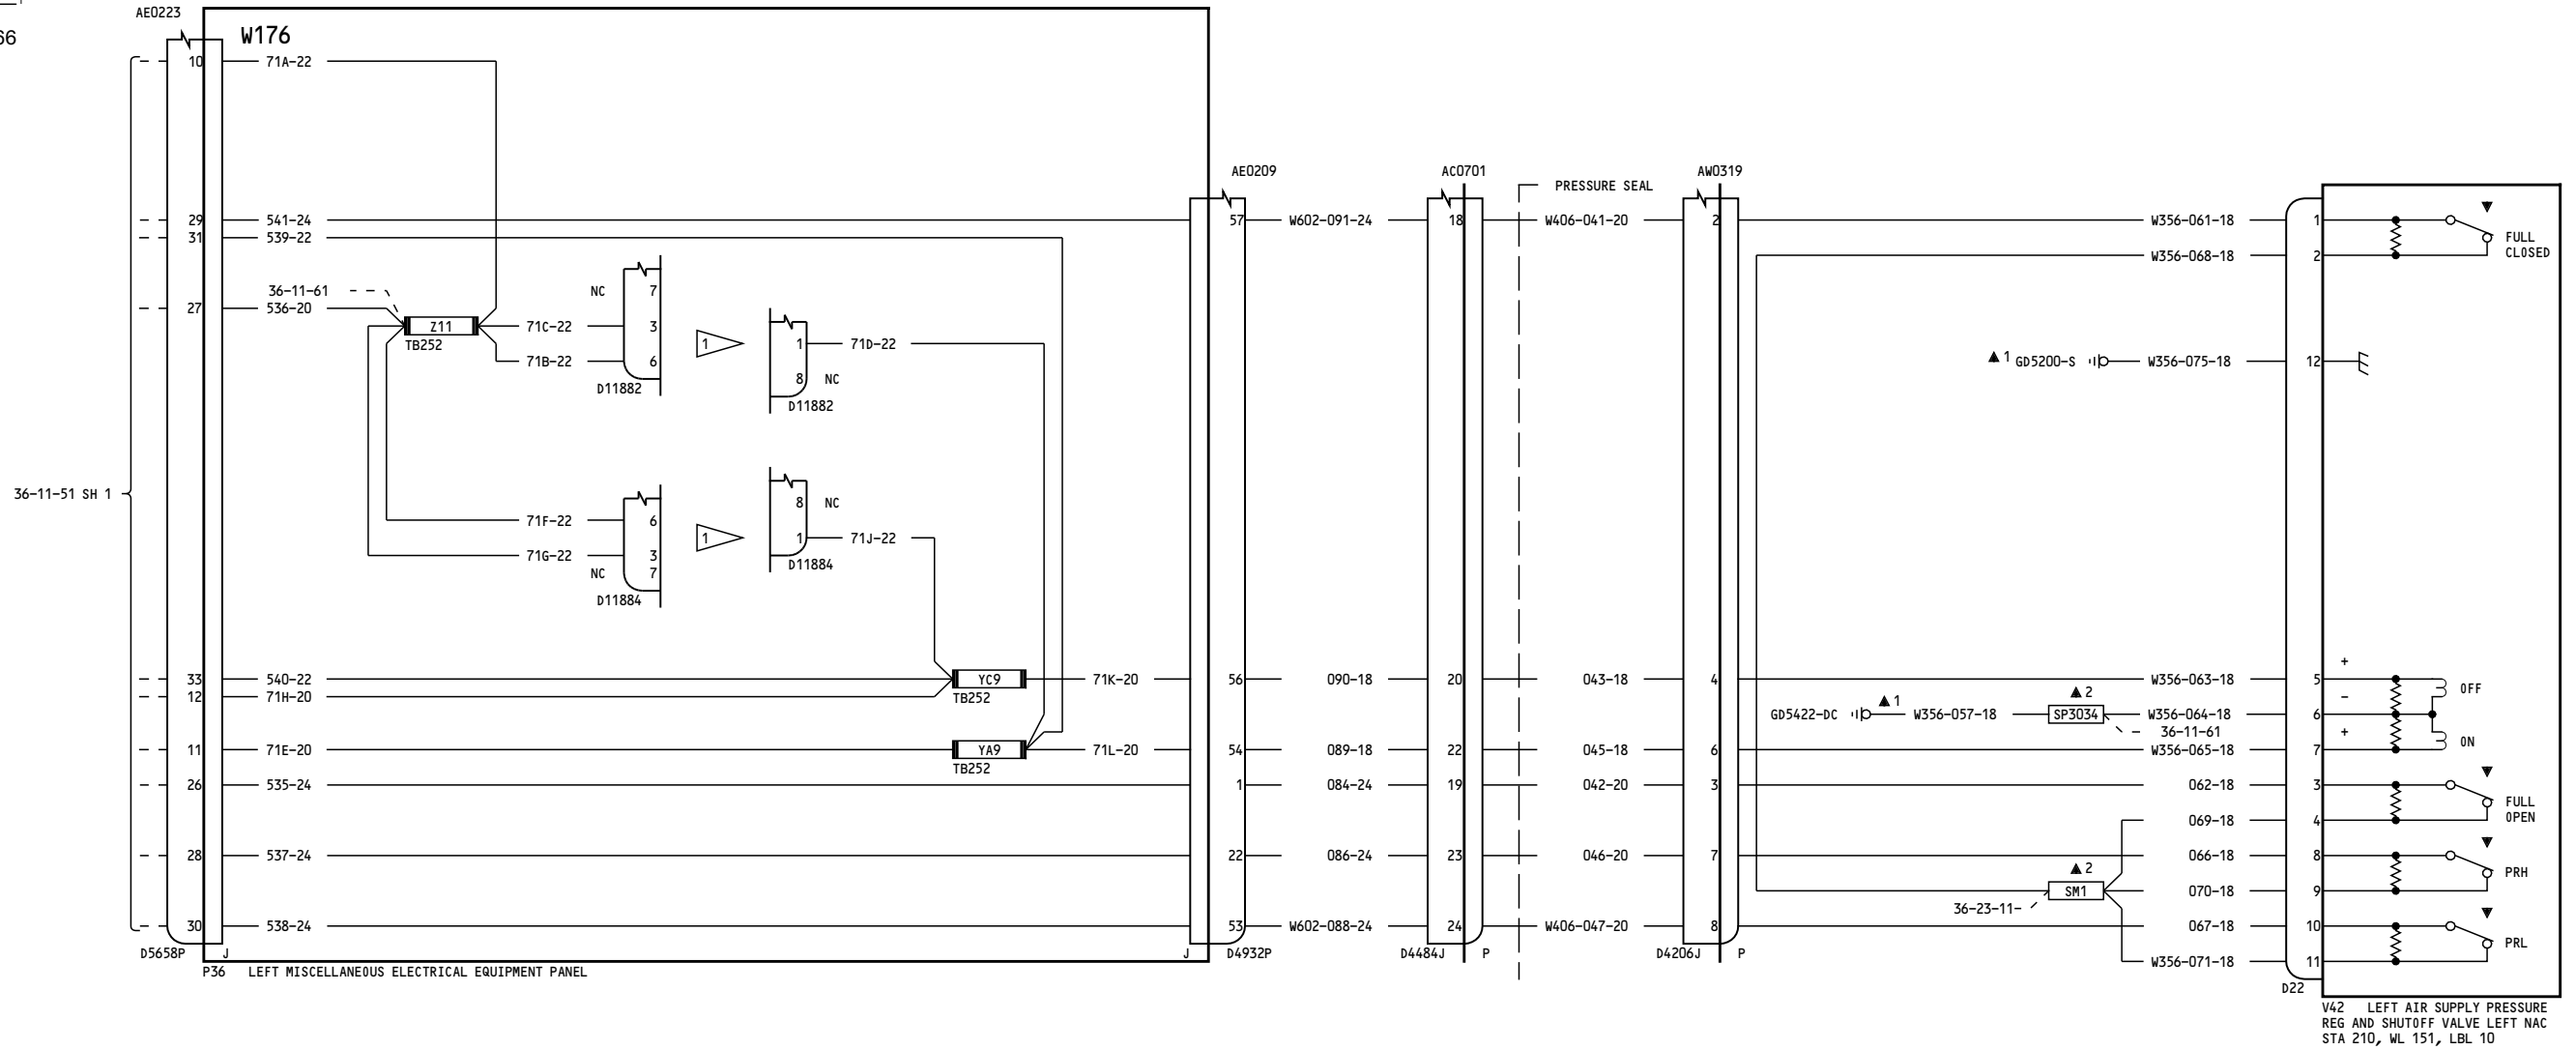

NOTES:  
 1 CAP & STOW CONNECTOR WHEN MATING EQUIPMENT IS NOT INSTALLED.

150-154

**AIR SUPPLY-  
 LEFT PRESSURE REGULATION  
 & SHUTOFF**

D280T132


**36-11-51**

Page 2.1  
 Sheet 2  
 Jan 21/2005

Incorporates  
 36-0026  
 36-0026 R02  
 36-0027

**36-11-51**

Page 2.1  
 Sheet 2  
 Jan 21/2005

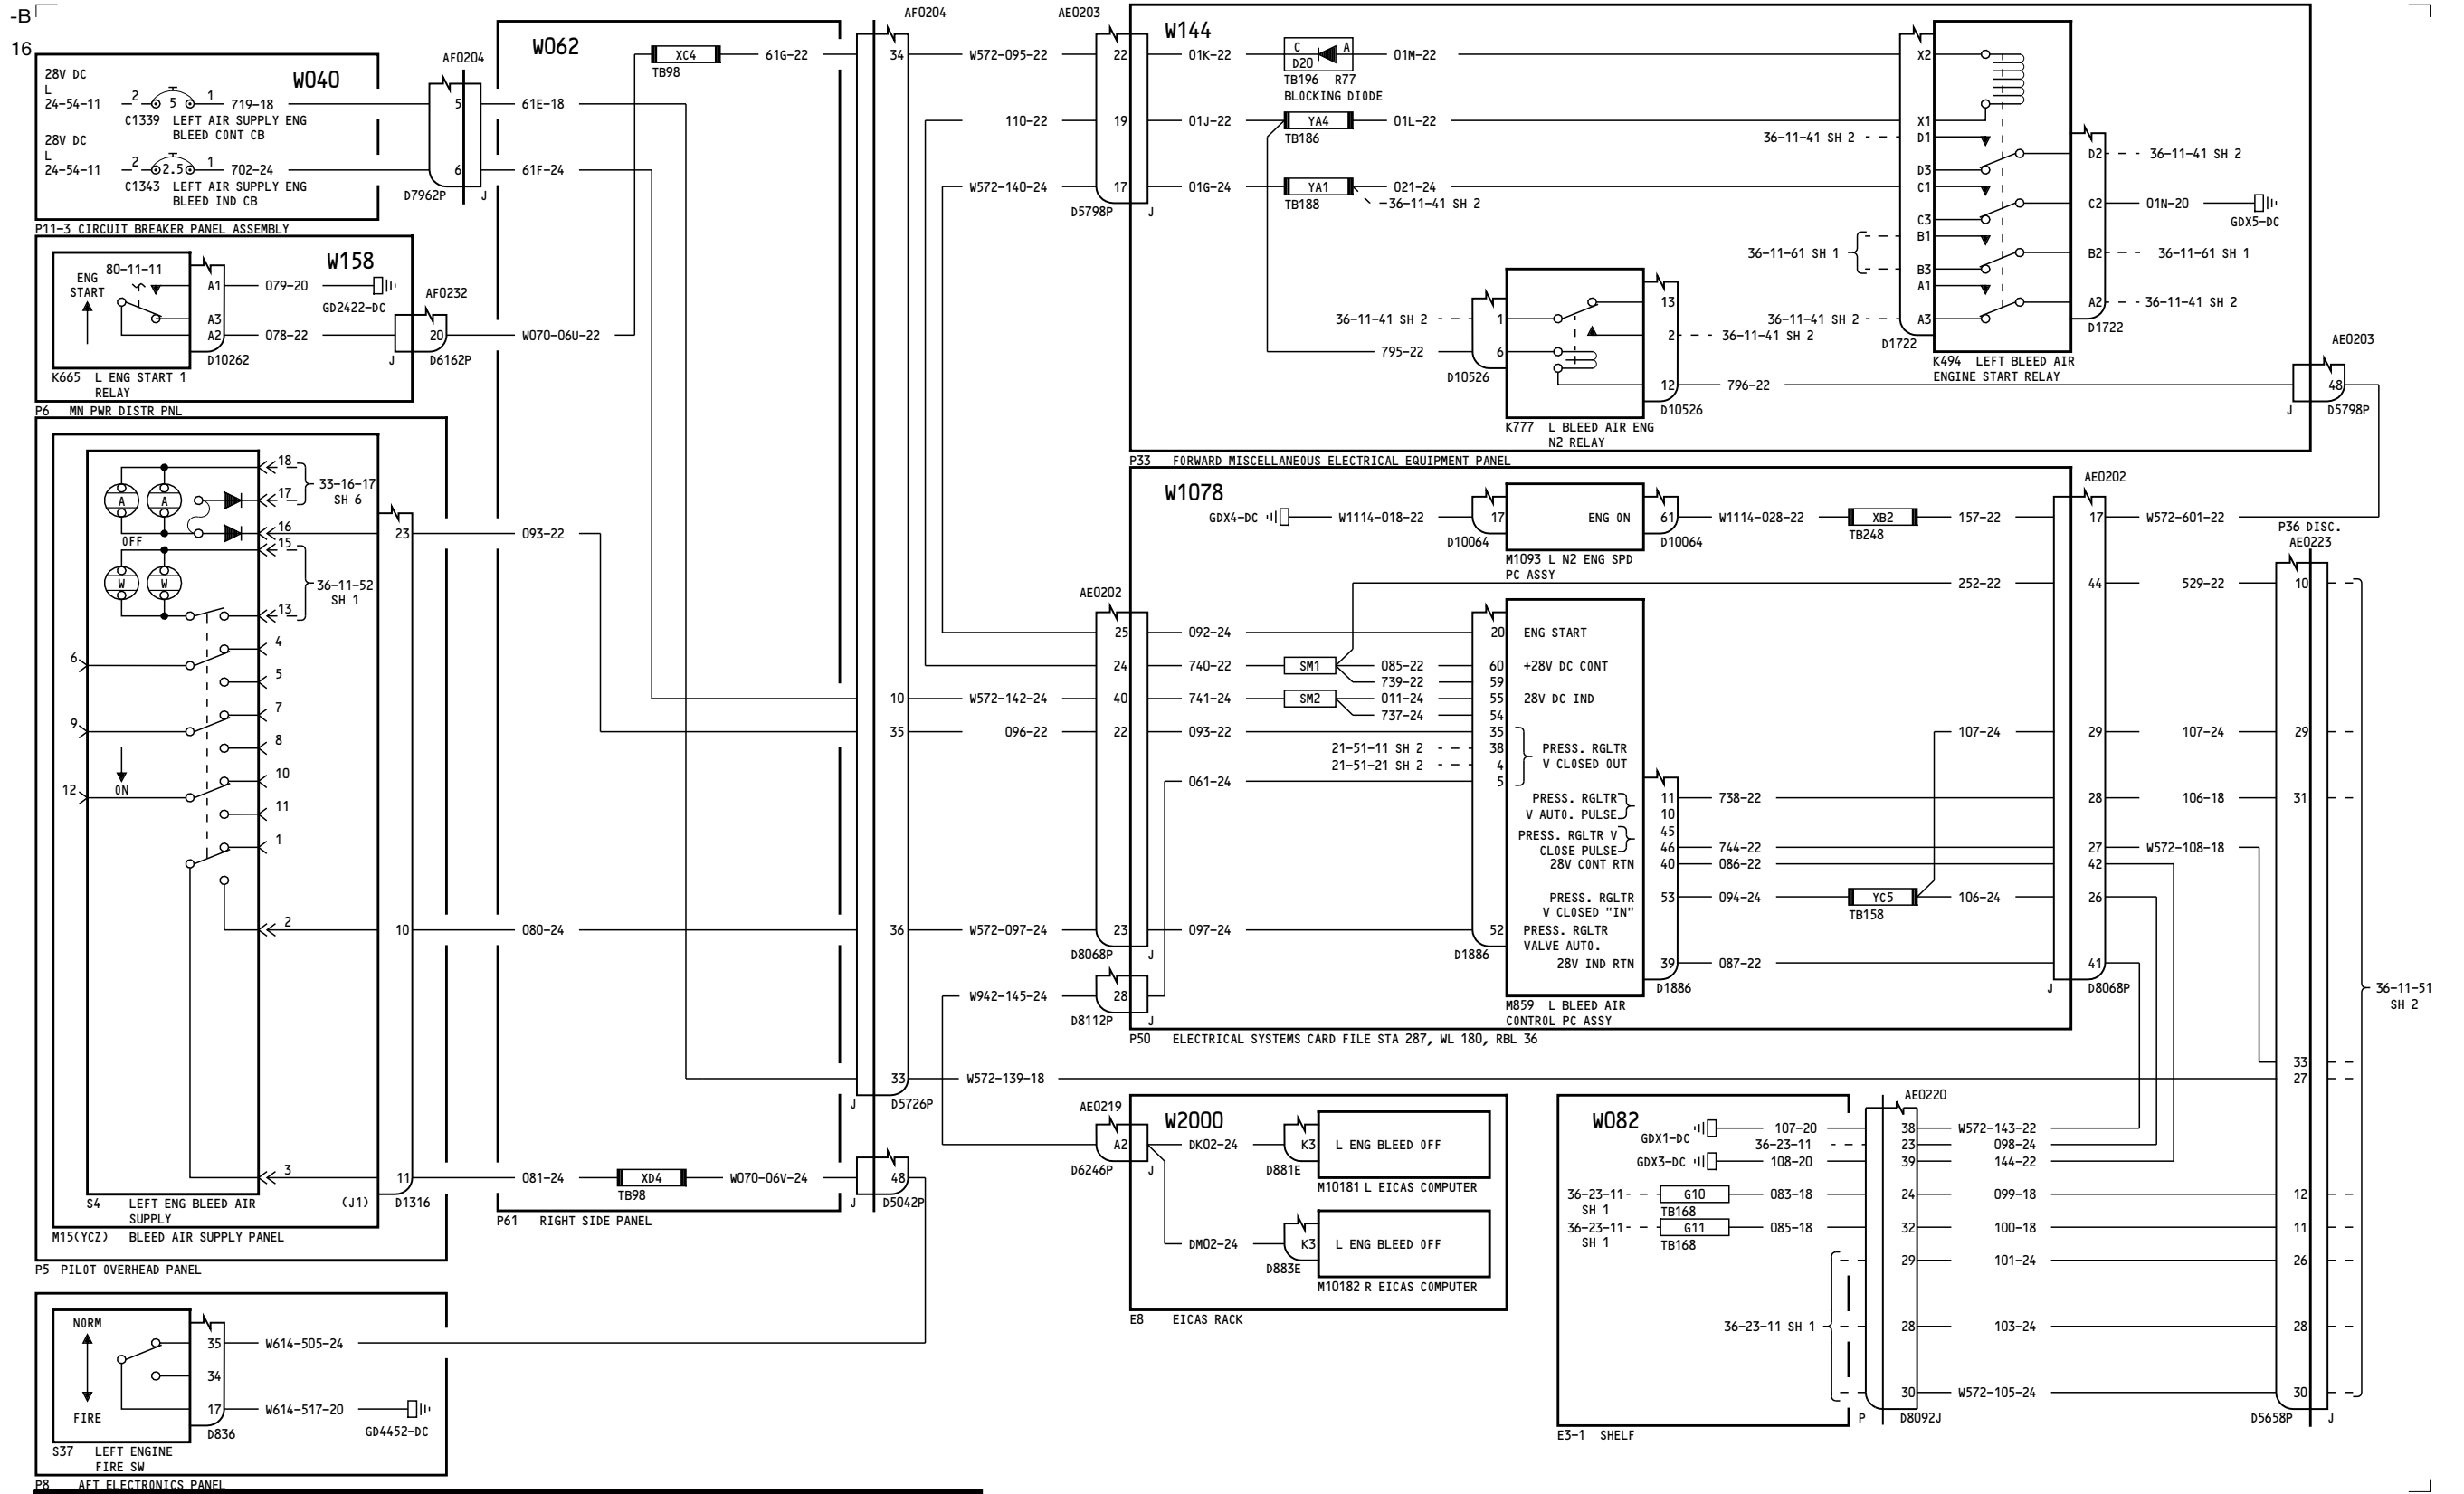

155

**AIR SUPPLY-  
LEFT PRESSURE REGULATION  
& SHUTOFF**


D280T132

**36-11-51**

Page 3.1  
Sheet 1  
Mar 09/2006

**36-11-51**

Page 3.1  
Sheet 1  
Mar 09/2006

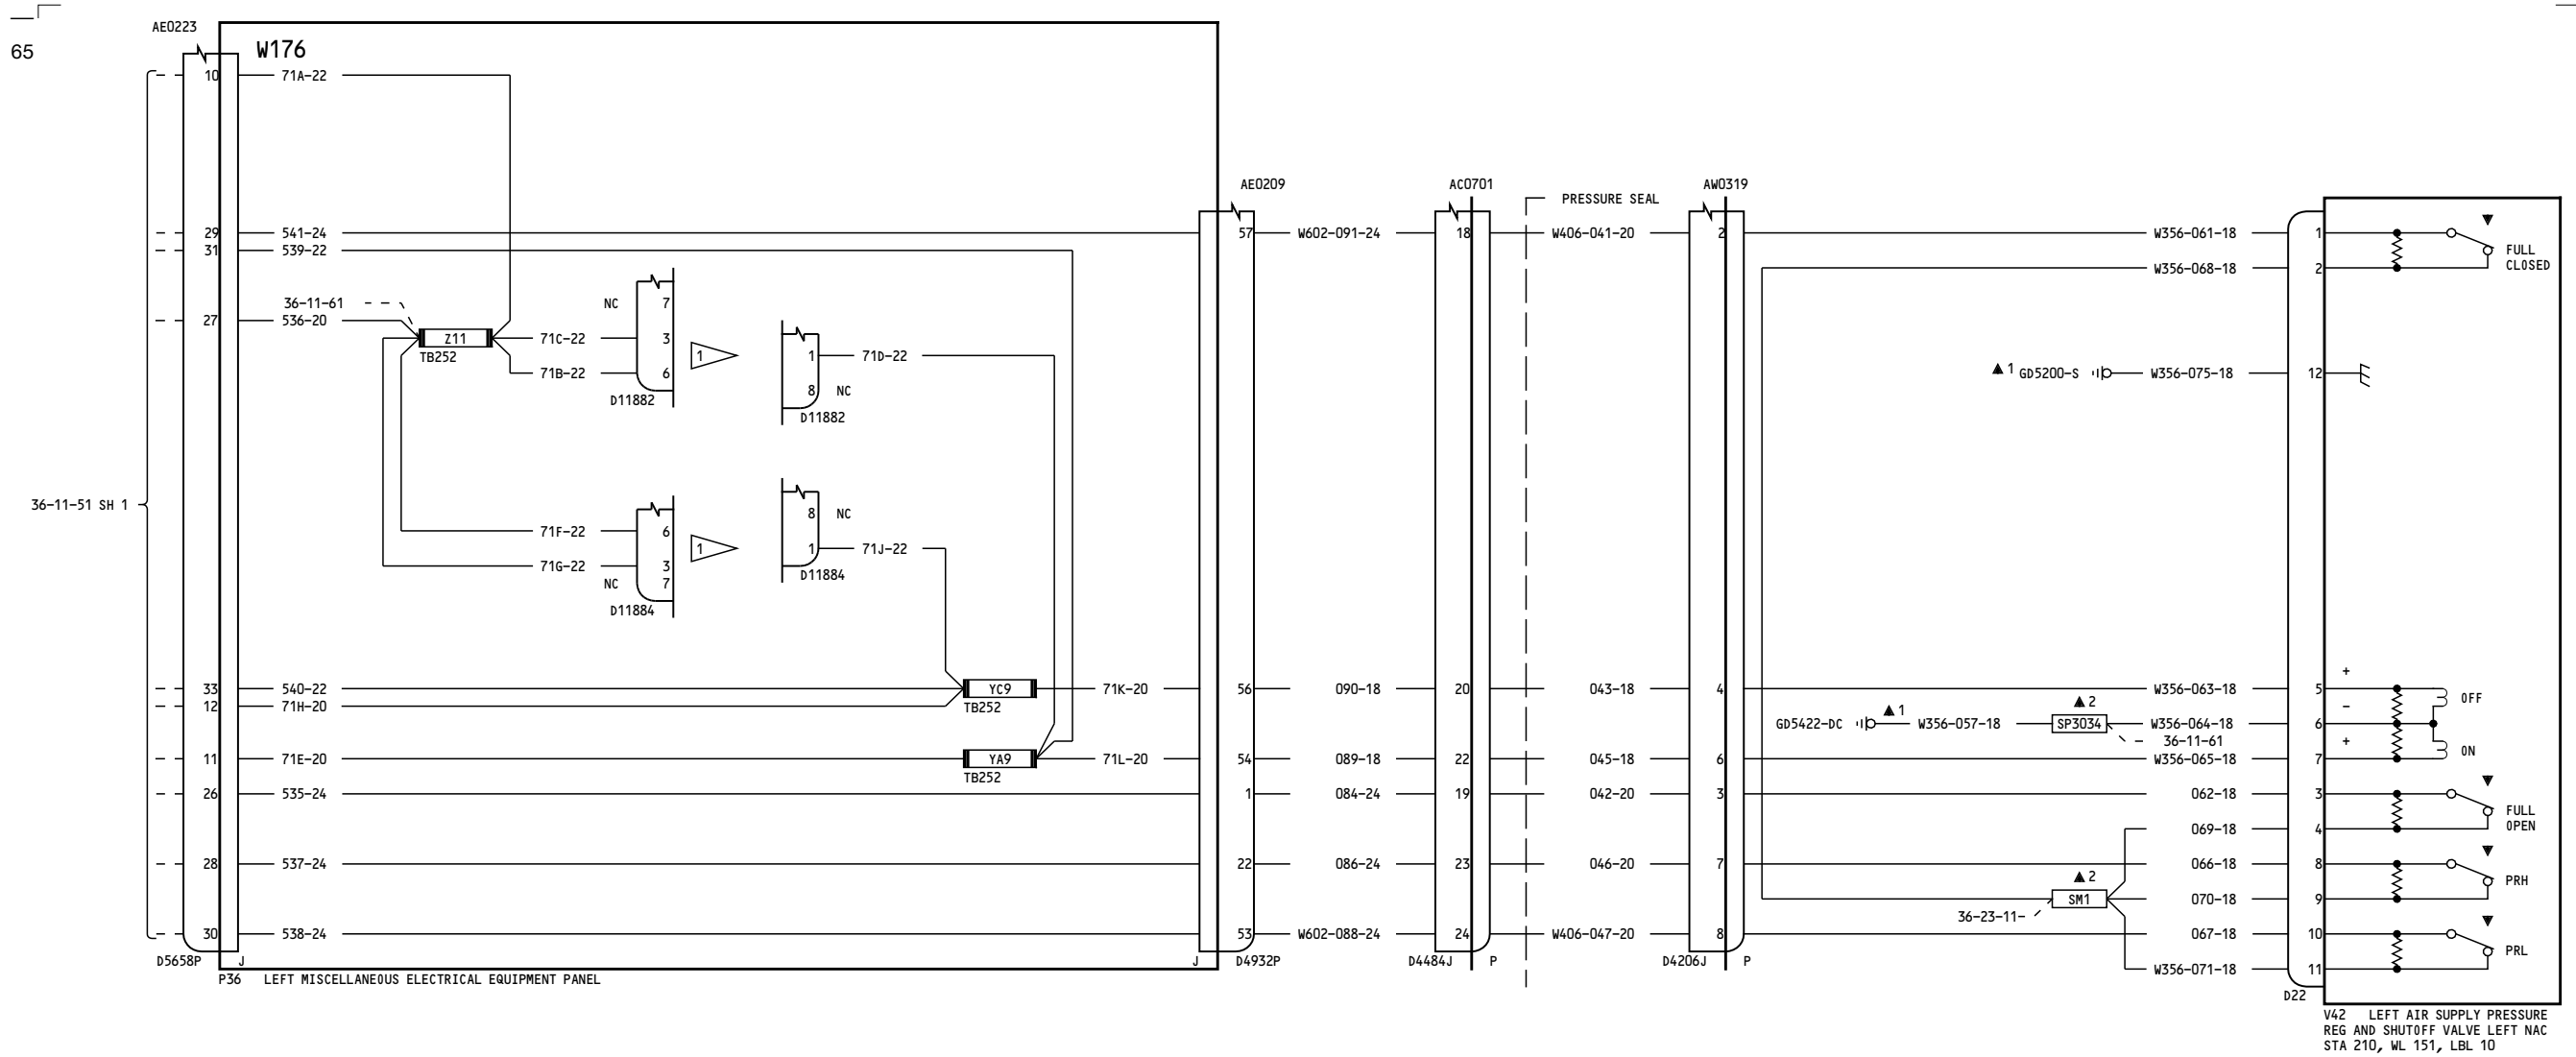

NOTES:  
 1 CAP & STOW CONNECTOR WHEN MATING EQUIPMENT IS NOT INSTALLED.

155

**AIR SUPPLY-  
 LEFT PRESSURE REGULATION  
 & SHUTOFF**

D280T132


**36-11-51**

Page 3.1  
 Sheet 2  
 Jan 21/2005

Incorporates  
 36-0026 R02

**36-11-51**

Page 3.1  
 Sheet 2  
 Jan 21/2005

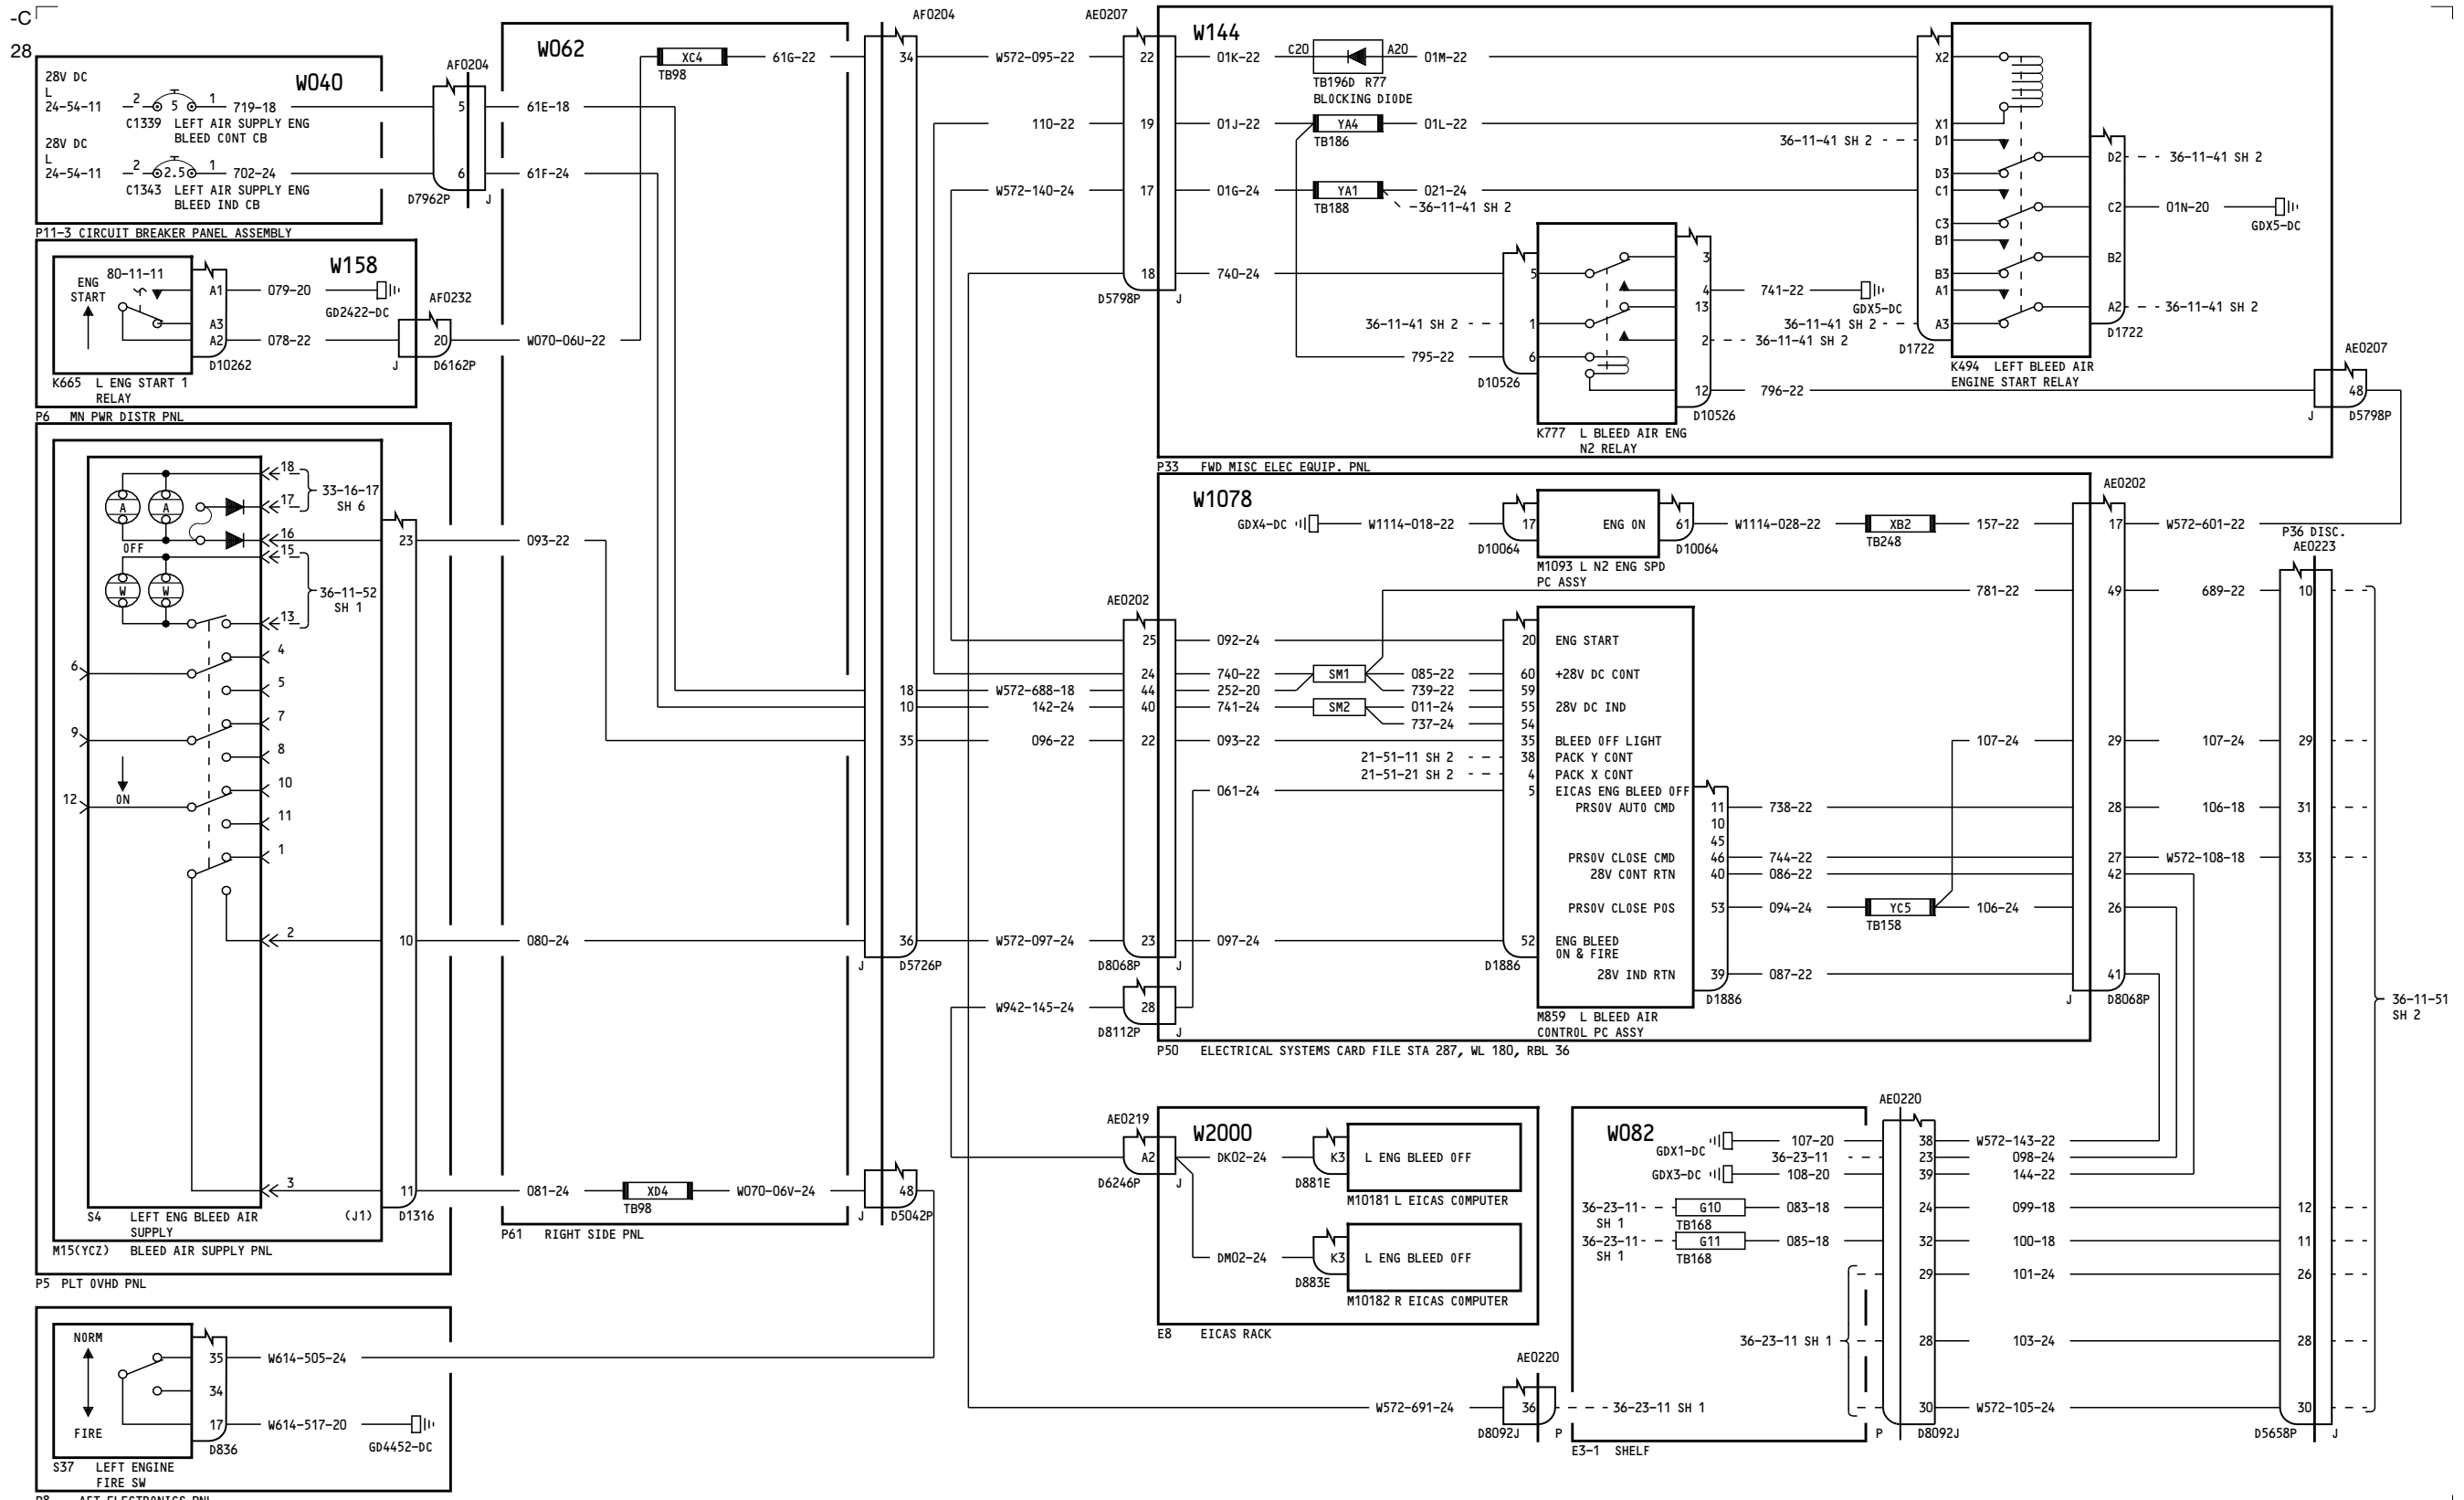

156, 166

**AIR SUPPLY-  
LEFT PRESSURE REGULATION  
& SHUTOFF**

**36-11-51**


Page 4.1  
Sheet 1  
Mar 09/2006

D280T132

**36-11-51**

Page 4.1  
Sheet 1  
Mar 09/2006



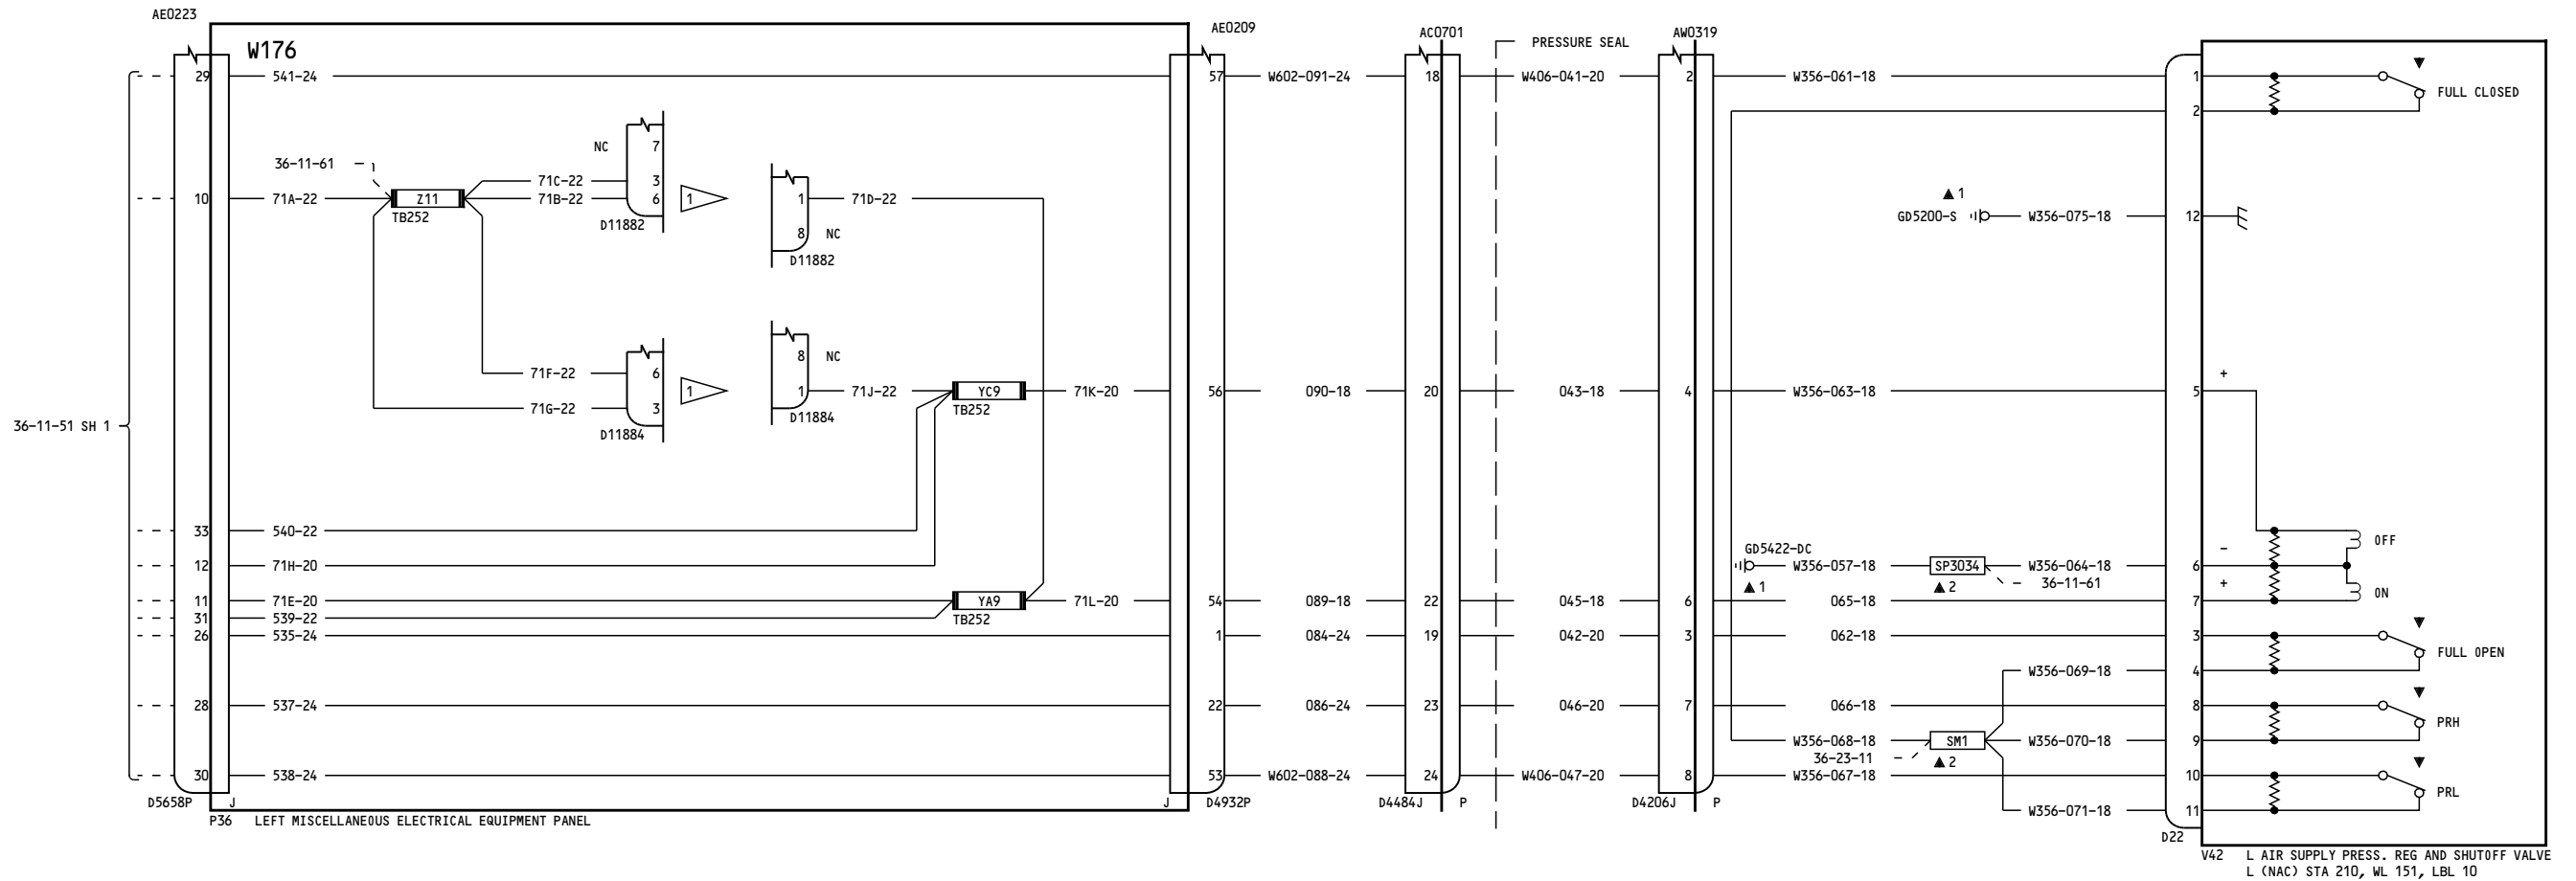

NOTES:  
 1 CAP & STOW CONNECTOR WHEN MATING EQUIPMENT IS NOT INSTALLED.

156, 166

**AIR SUPPLY-  
 LEFT PRESSURE REGULATION  
 & SHUTOFF**

D280T132


**36-11-51**

Page 4.1  
 Sheet 2  
 Jan 21/2005

Incorporates  
 36-0026 R02

**36-11-51**

Page 4.1  
 Sheet 2  
 Jan 21/2005

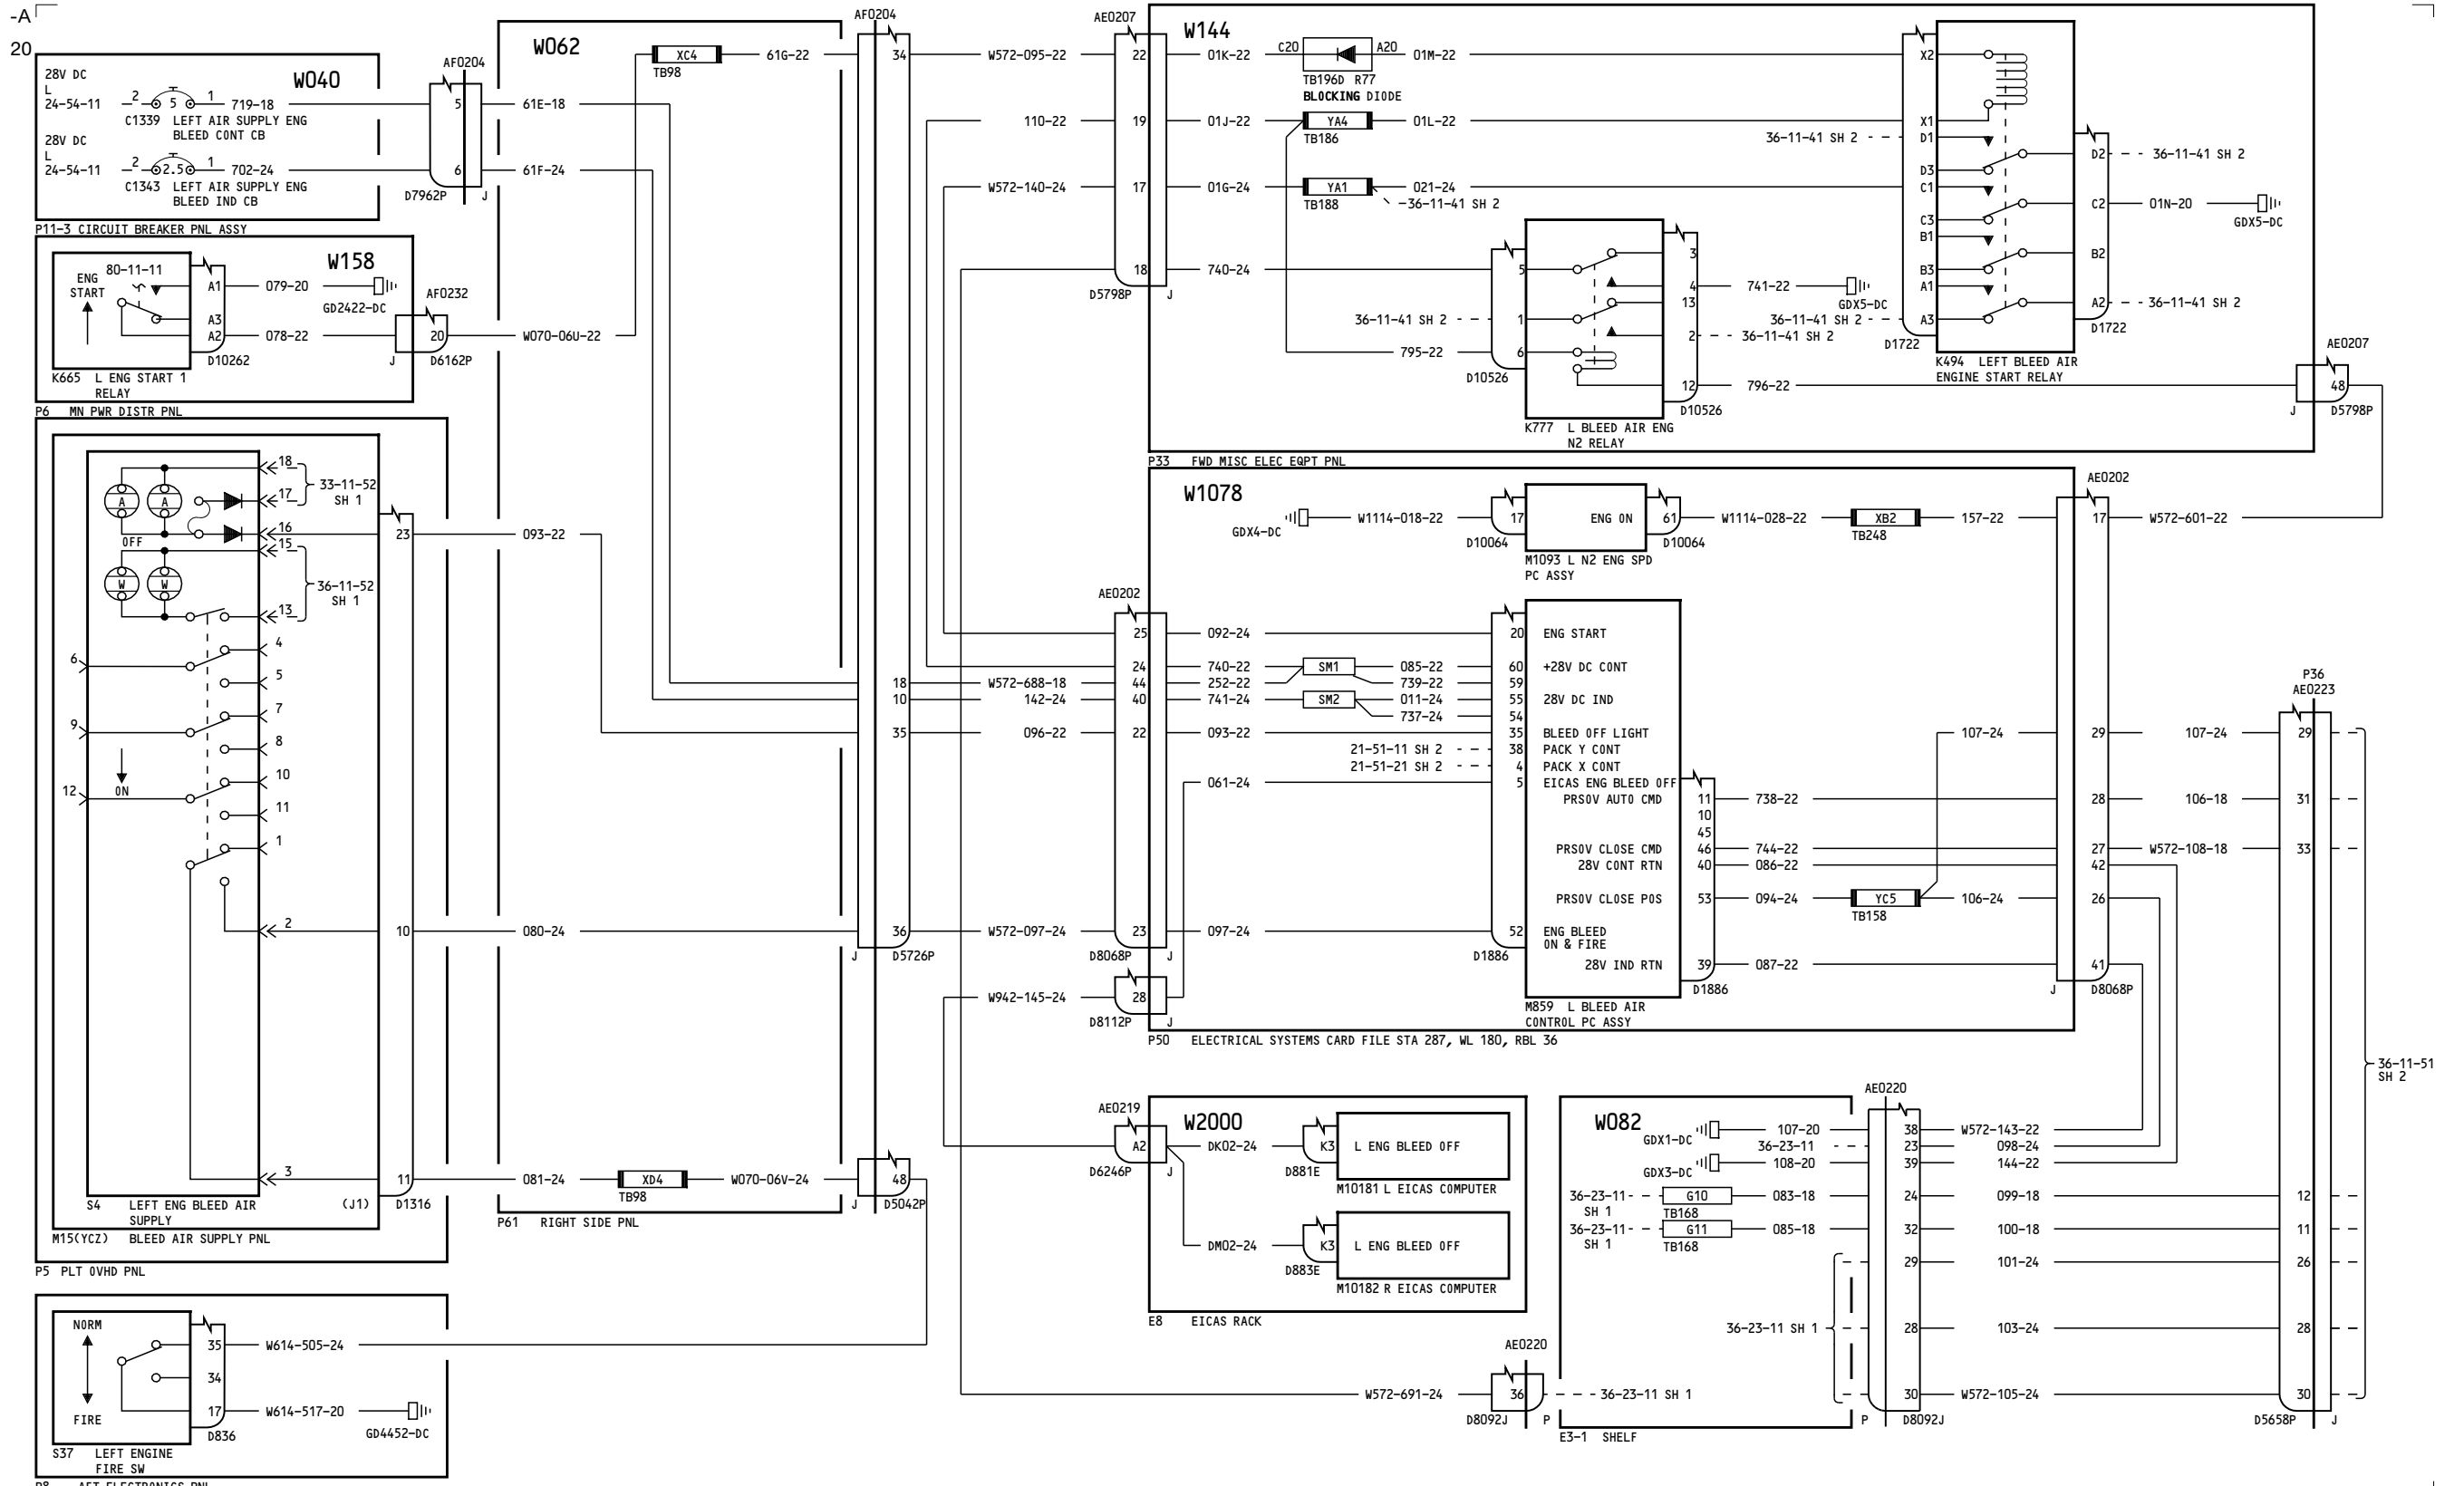

157, 167-199, 277-299

**AIR SUPPLY-  
LEFT PRESSURE REGULATION  
& SHUTOFF**

**36-11-51**


Page 5  
Sheet 1  
Jan 21/2005

D280T132

**36-11-51**

Page 5  
Sheet 1  
Jan 21/2005

20

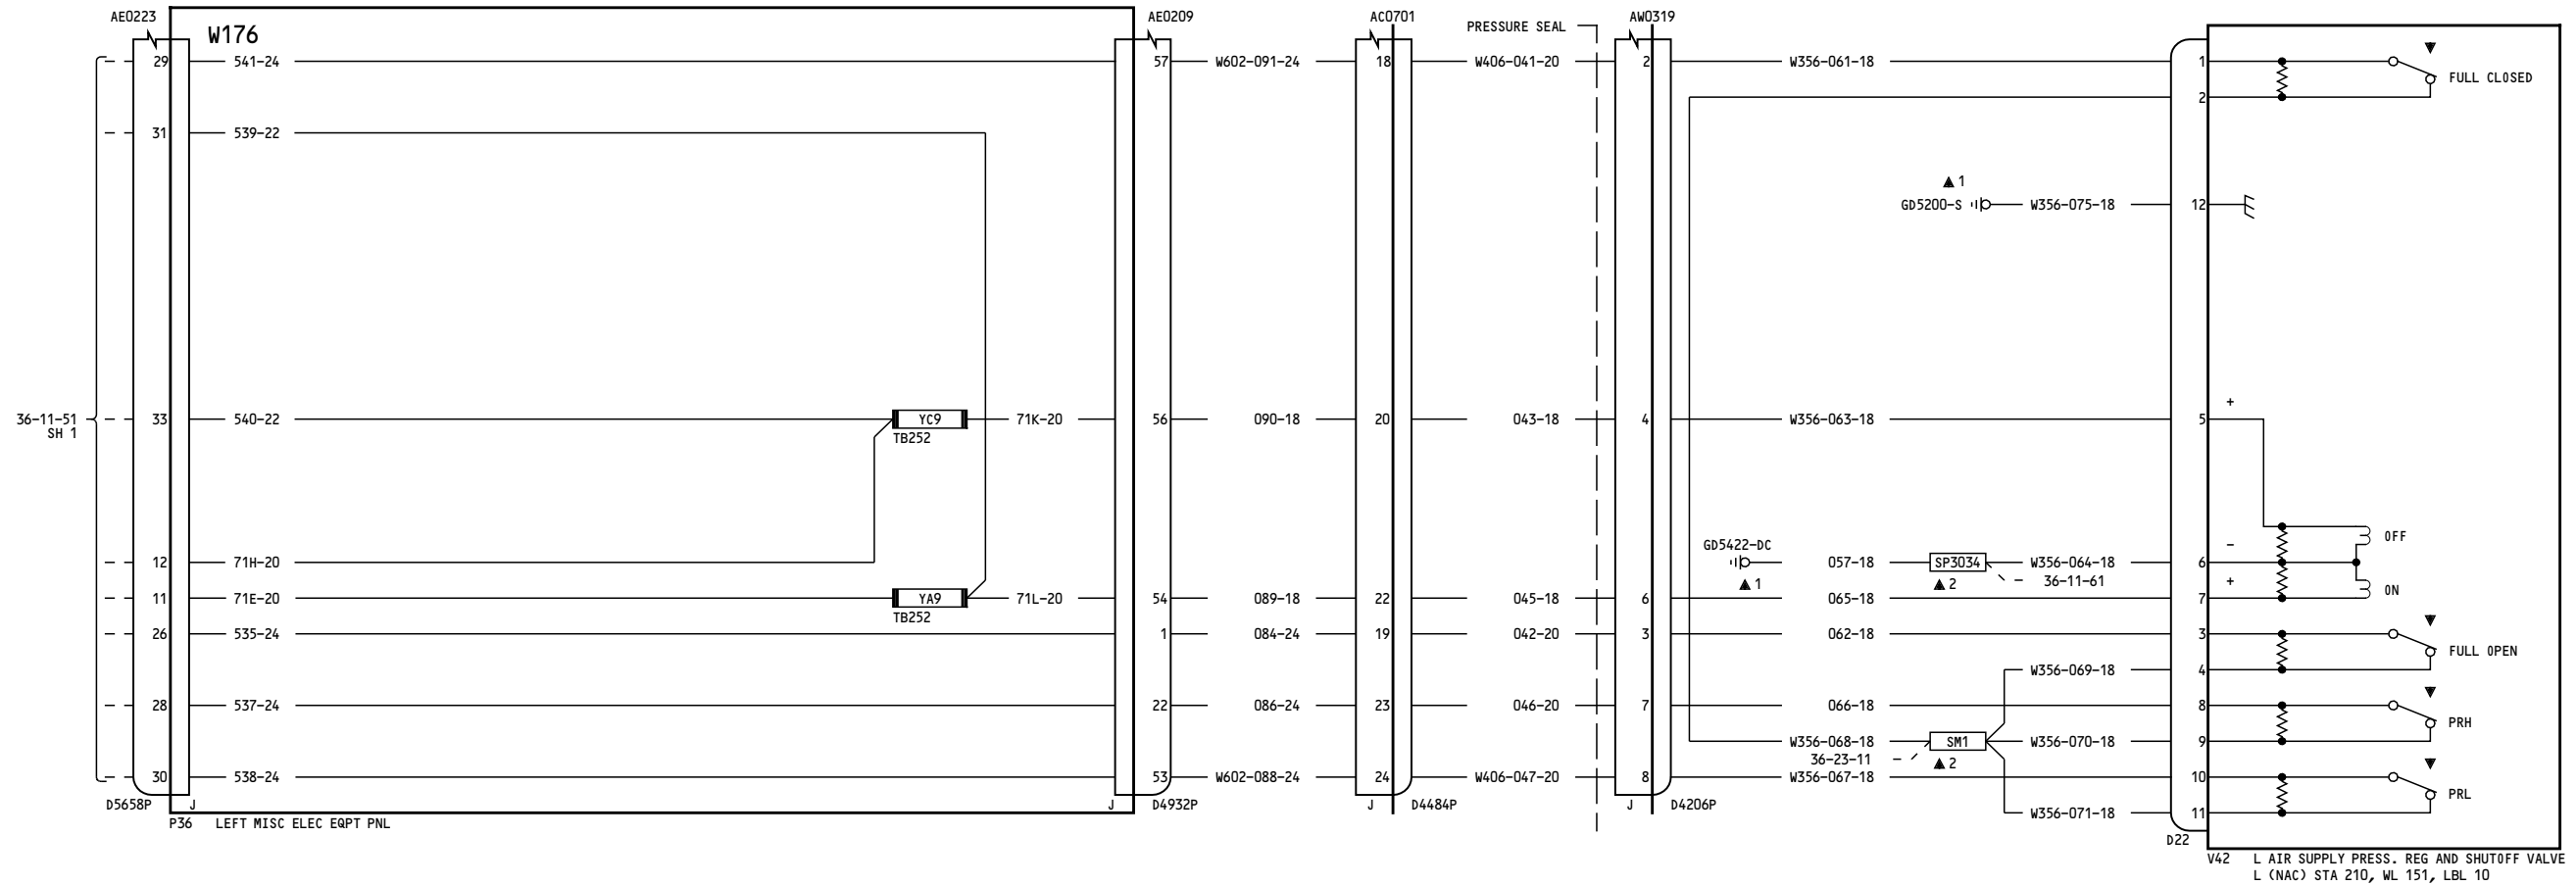

157, 167-199, 277-299

**AIR SUPPLY-  
LEFT PRESSURE REGULATION  
& SHUTOFF**


D280T132

**36-11-51**

Page 5  
Sheet 2  
Jan 21/2005

**36-11-51**

Page 5  
Sheet 2  
Jan 21/2005

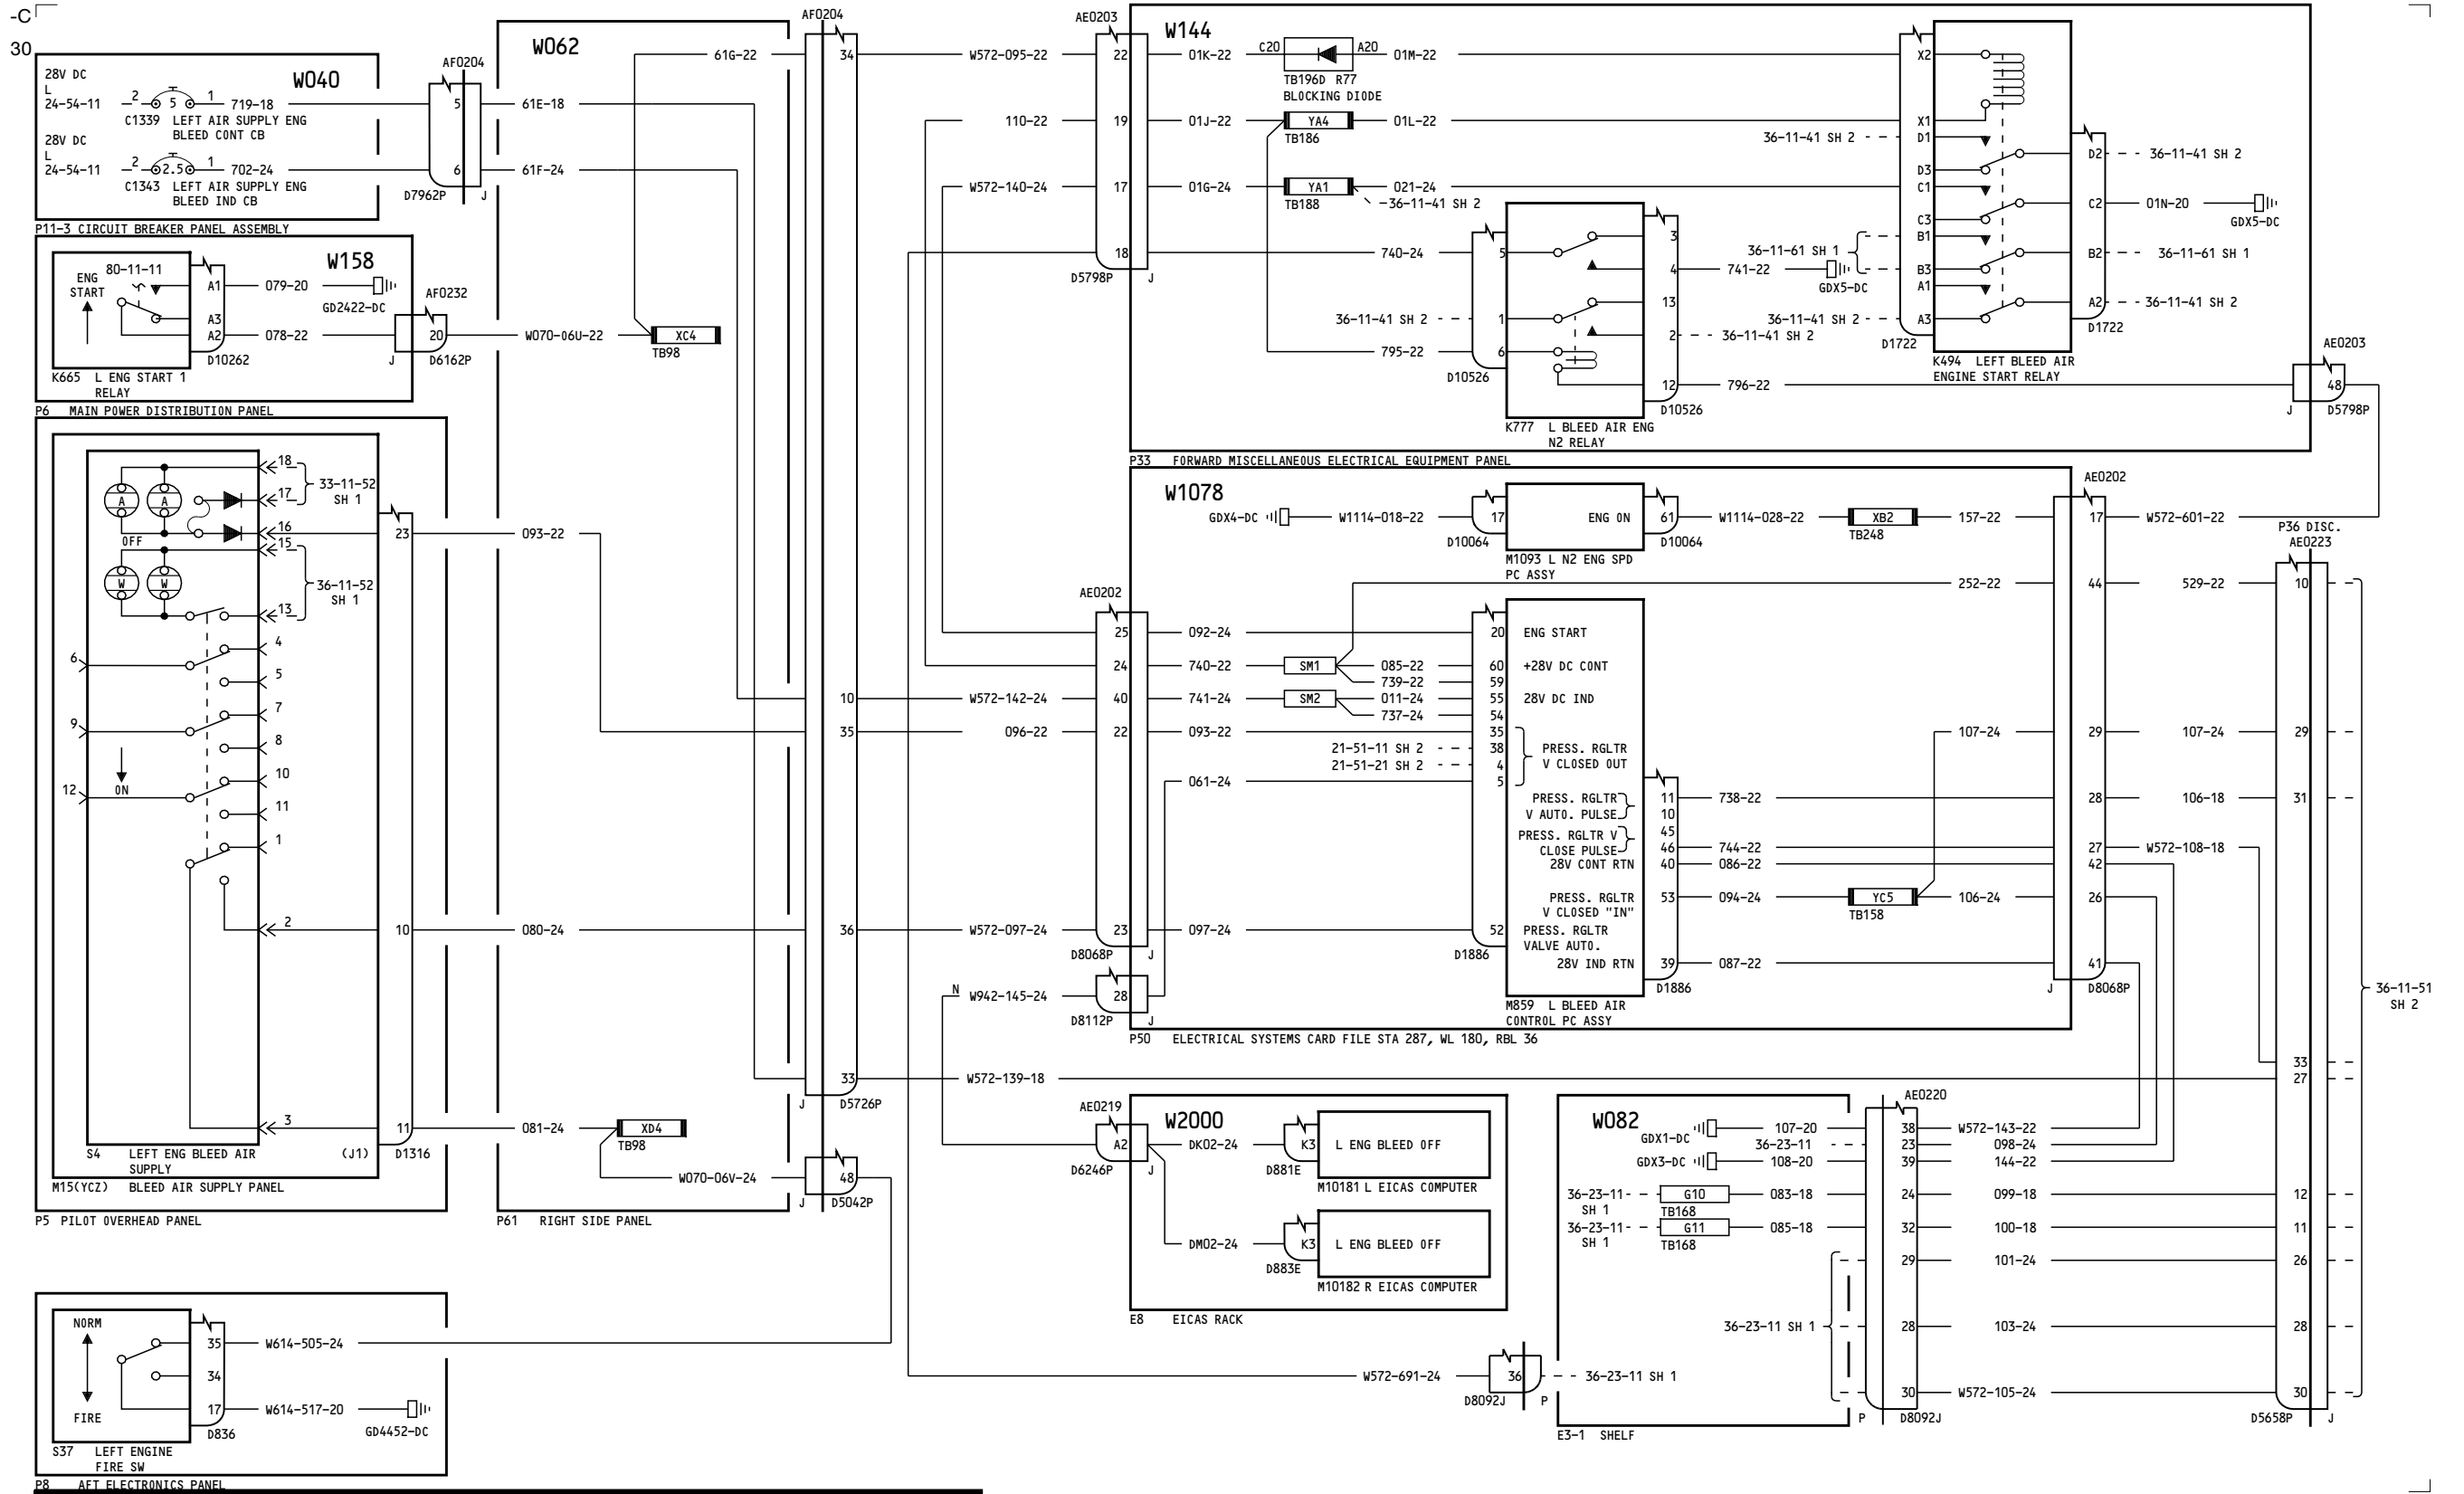

162

**AIR SUPPLY-  
LEFT PRESSURE REGULATION  
& SHUTOFF**


D280T132

**36-11-51**

Page 6.1  
Sheet 1  
Jan 21/2005

**36-11-51**

Page 6.1  
Sheet 1  
Jan 21/2005

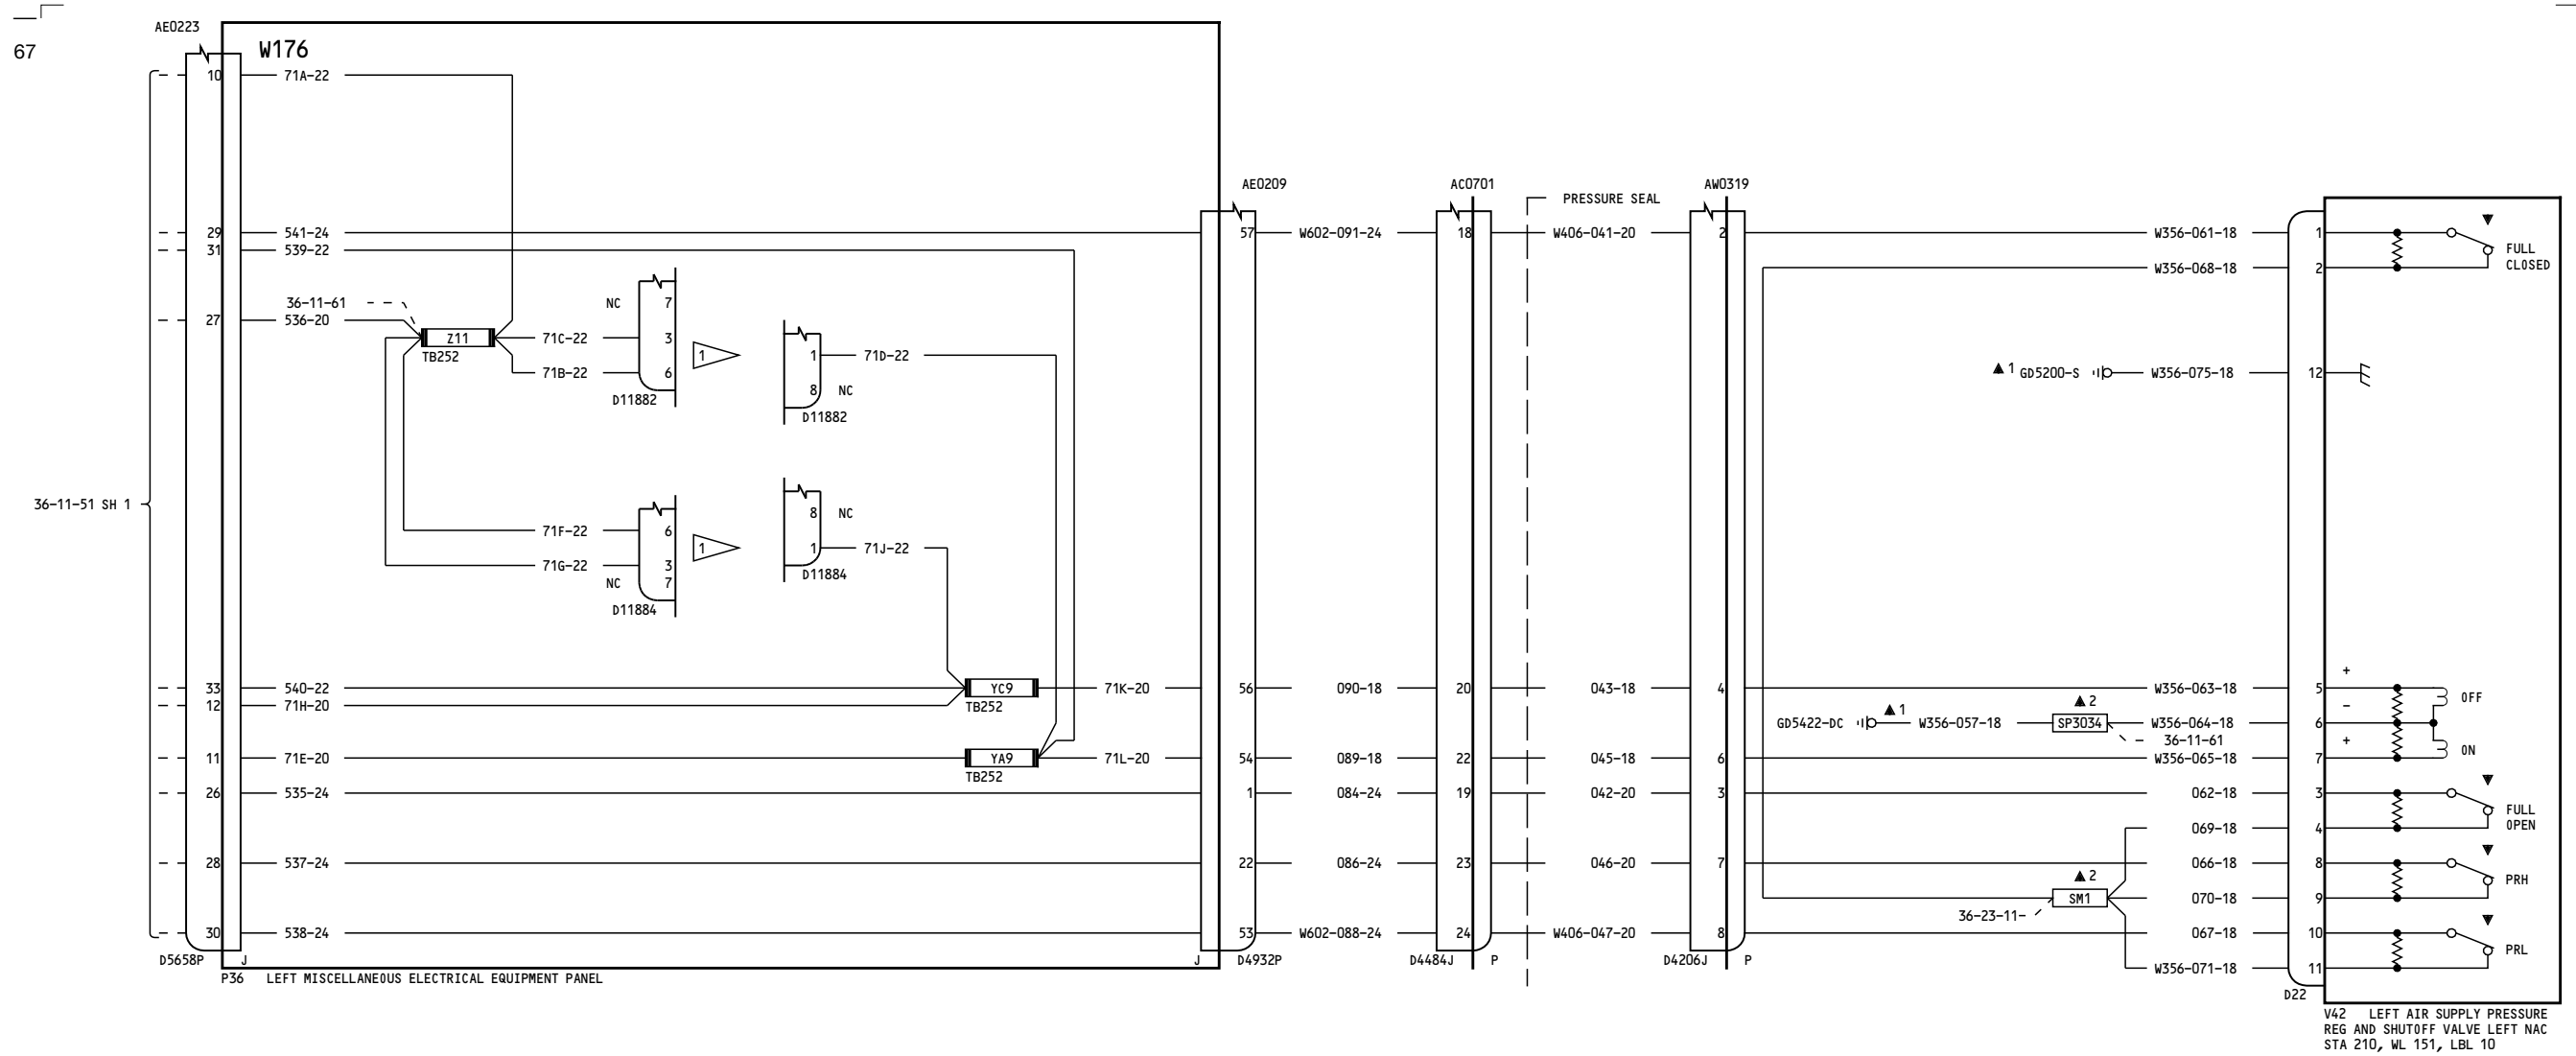

NOTES:  
 1 CAP & STOW CONNECTOR WHEN MATING EQUIPMENT IS NOT INSTALLED.

162

**AIR SUPPLY-  
 LEFT PRESSURE REGULATION  
 & SHUTOFF**

D280T132


**36-11-51**

Page 6.1  
 Sheet 2  
 Jan 21/2005

Incorporates  
 36-0026 R02

**36-11-51**

Page 6.1  
 Sheet 2  
 Jan 21/2005

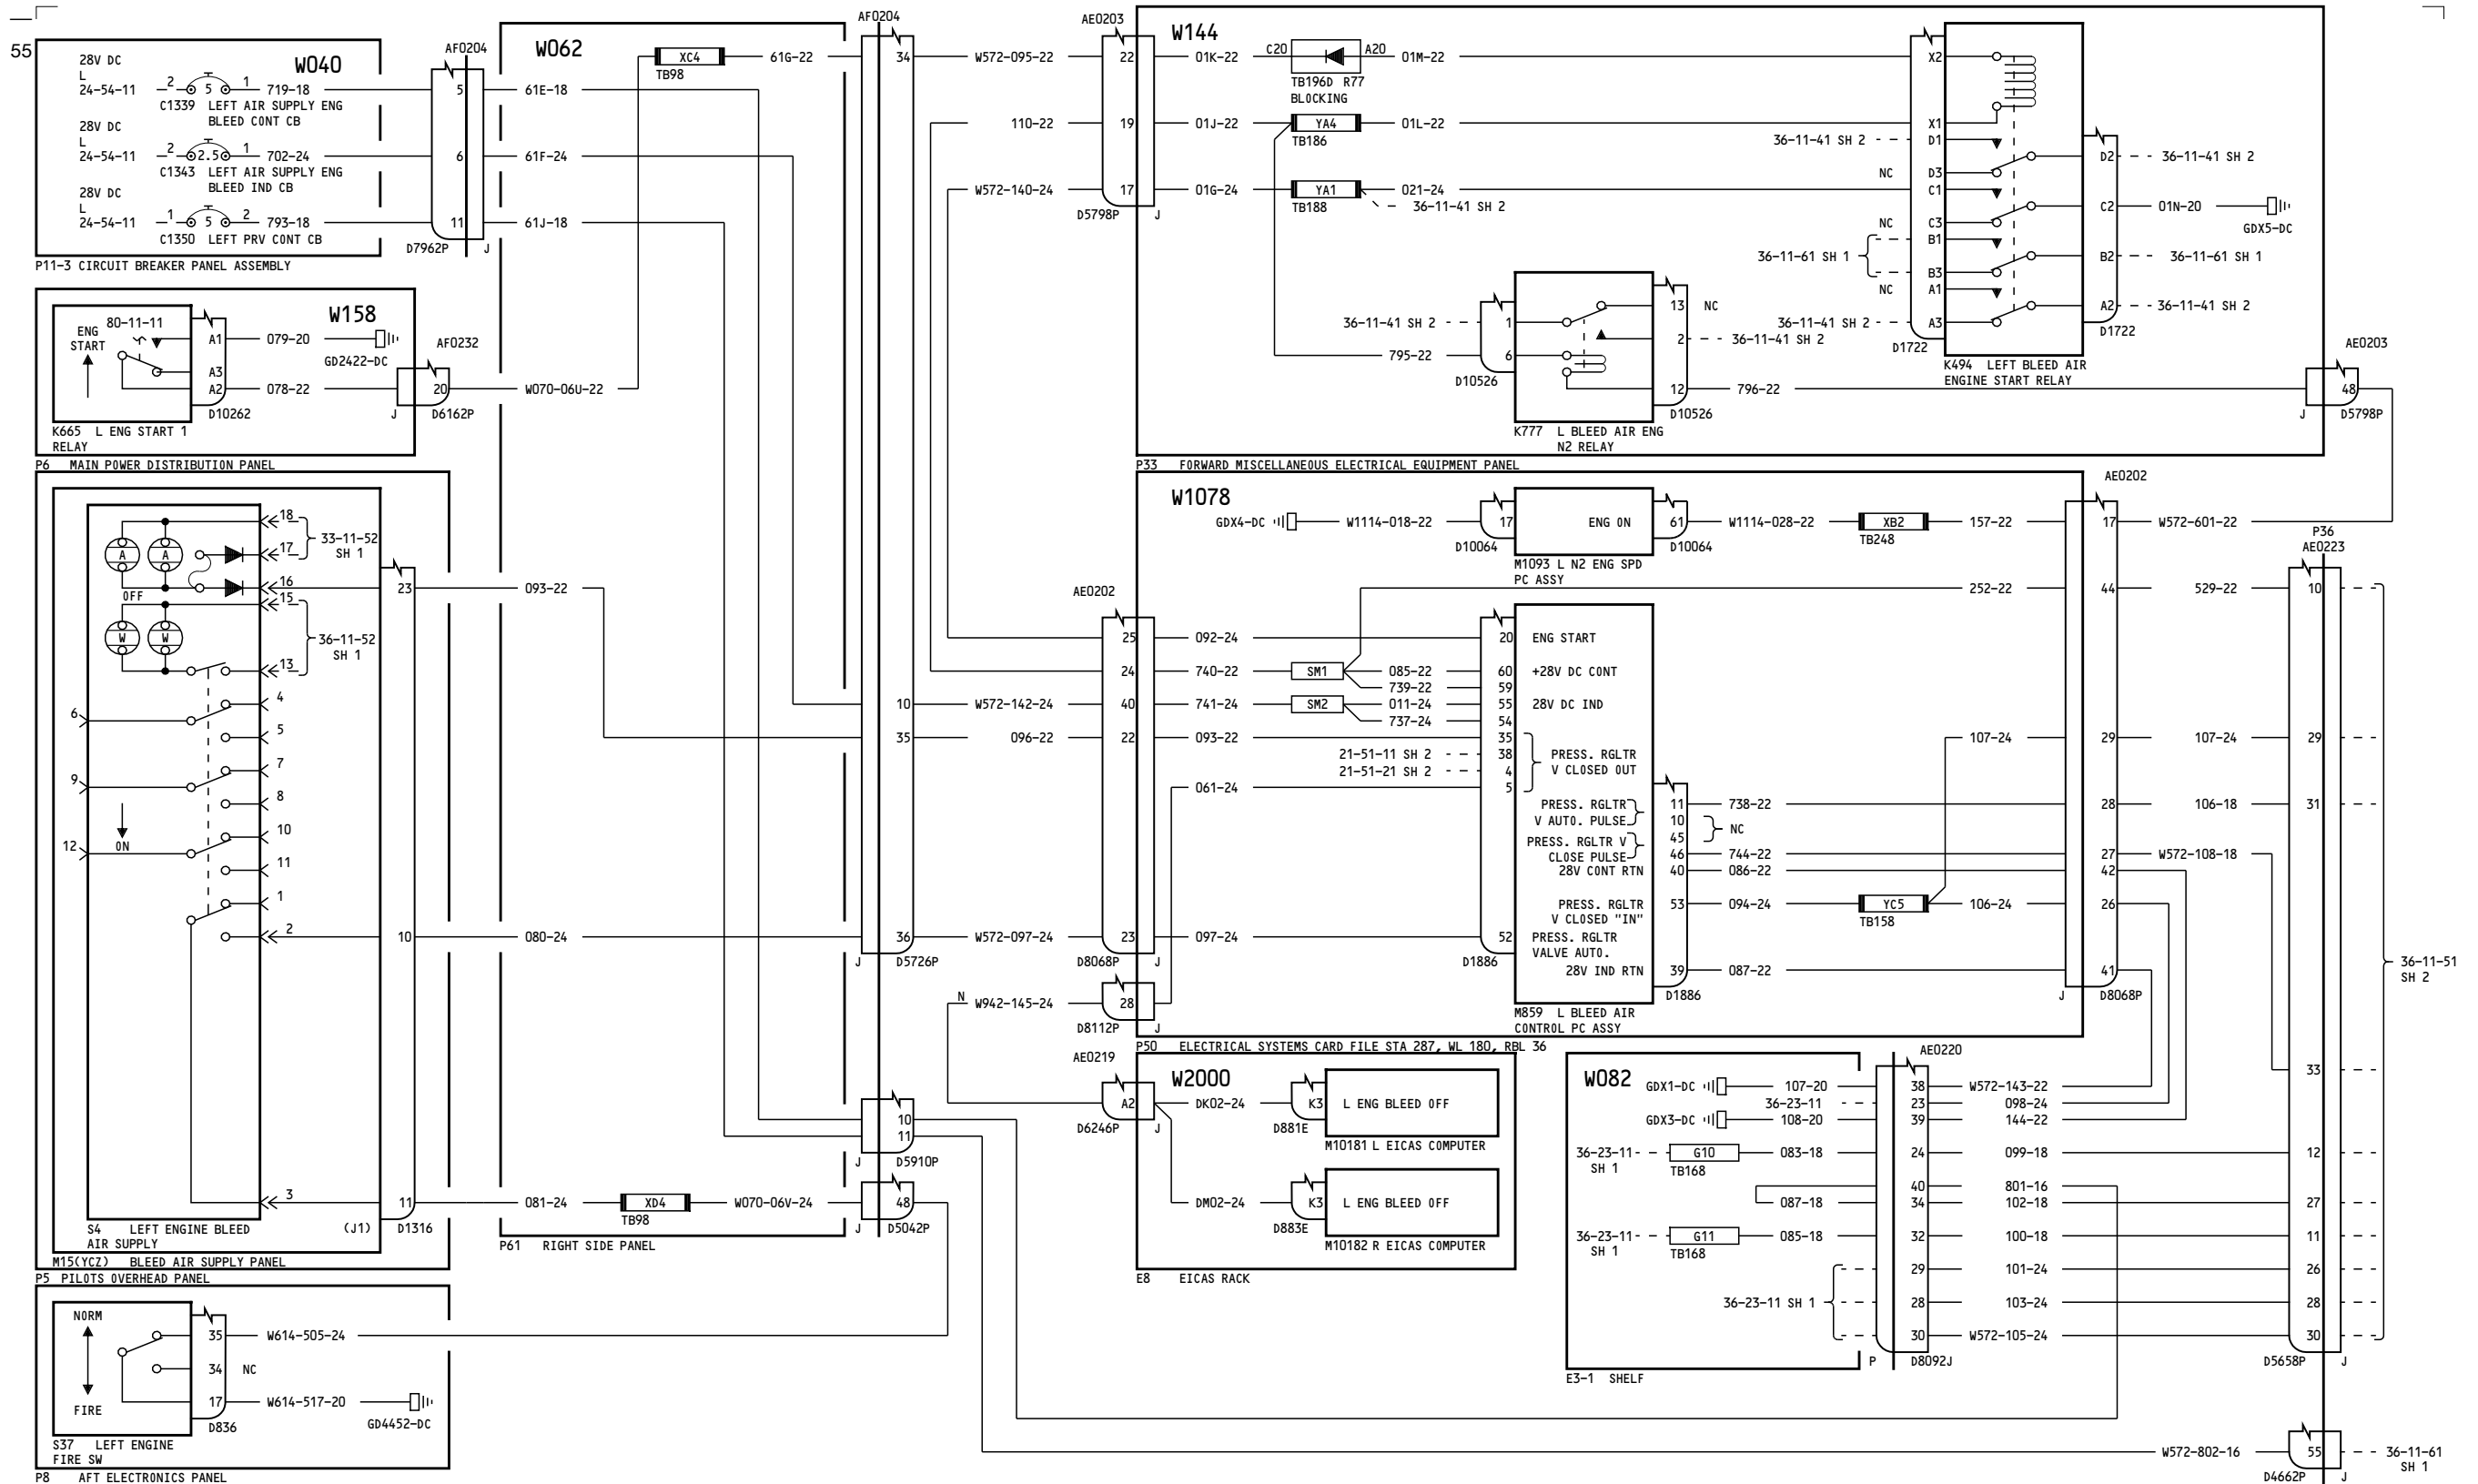

275

**AIR SUPPLY-  
LEFT PRESSURE REGULATION  
& SHUTOFF**

D280T132


**36-11-51**

Page 7.1  
Sheet 1  
Jan 21/2005

Incorporates  
36-0027

**36-11-51**

Page 7.1  
Sheet 1  
Jan 21/2005

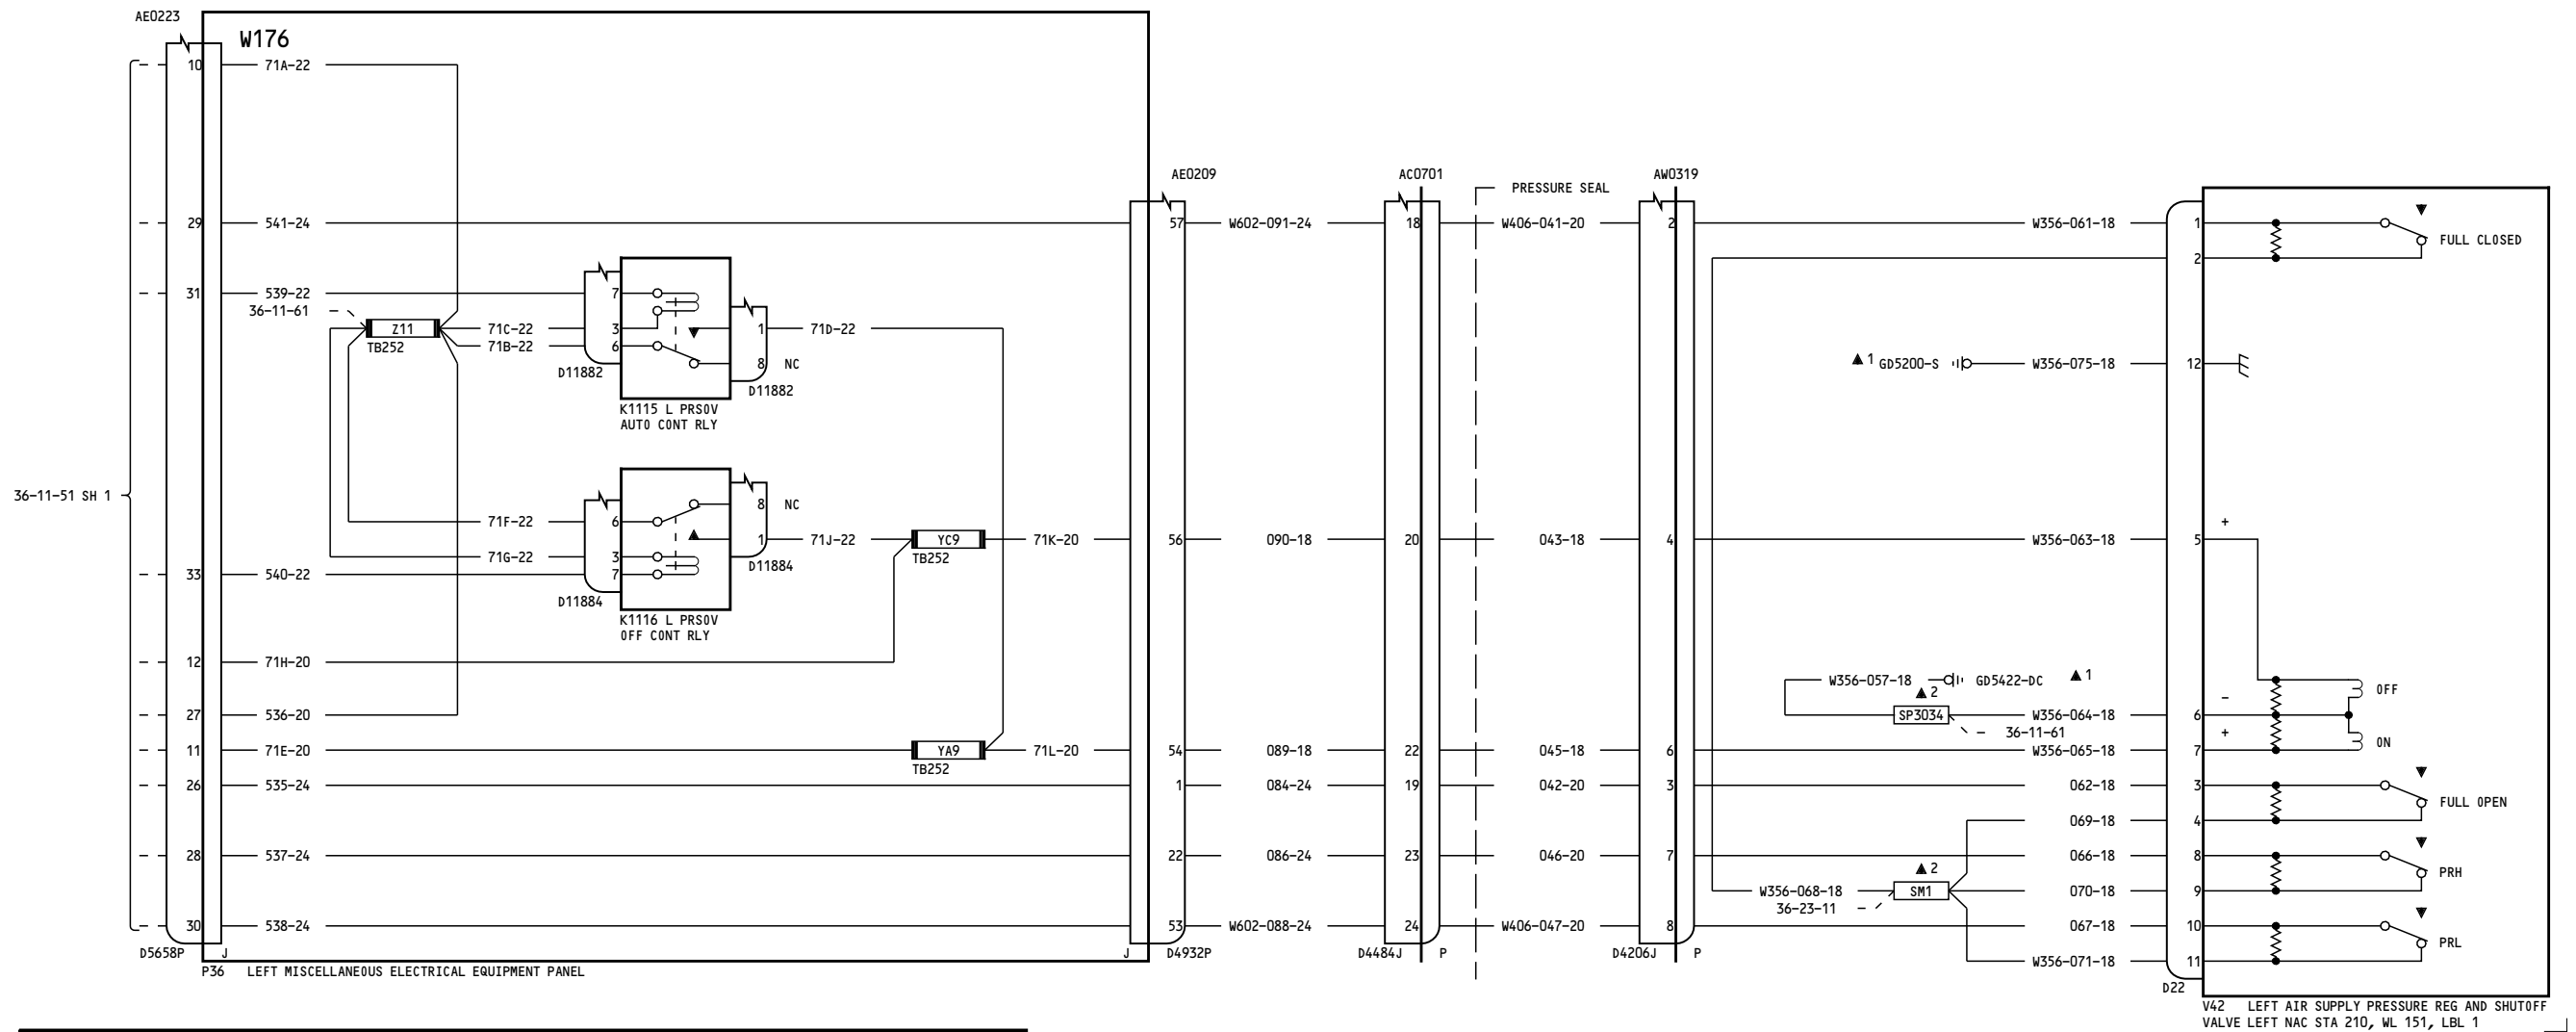

275

**AIR SUPPLY-  
LEFT PRESSURE REGULATION  
& SHUTOFF**

D280T132


**36-11-51**

Page 7.1  
Sheet 2  
Jan 21/2005

Incorporates  
36-0027

**36-11-51**

Page 7.1  
Sheet 2  
Jan 21/2005

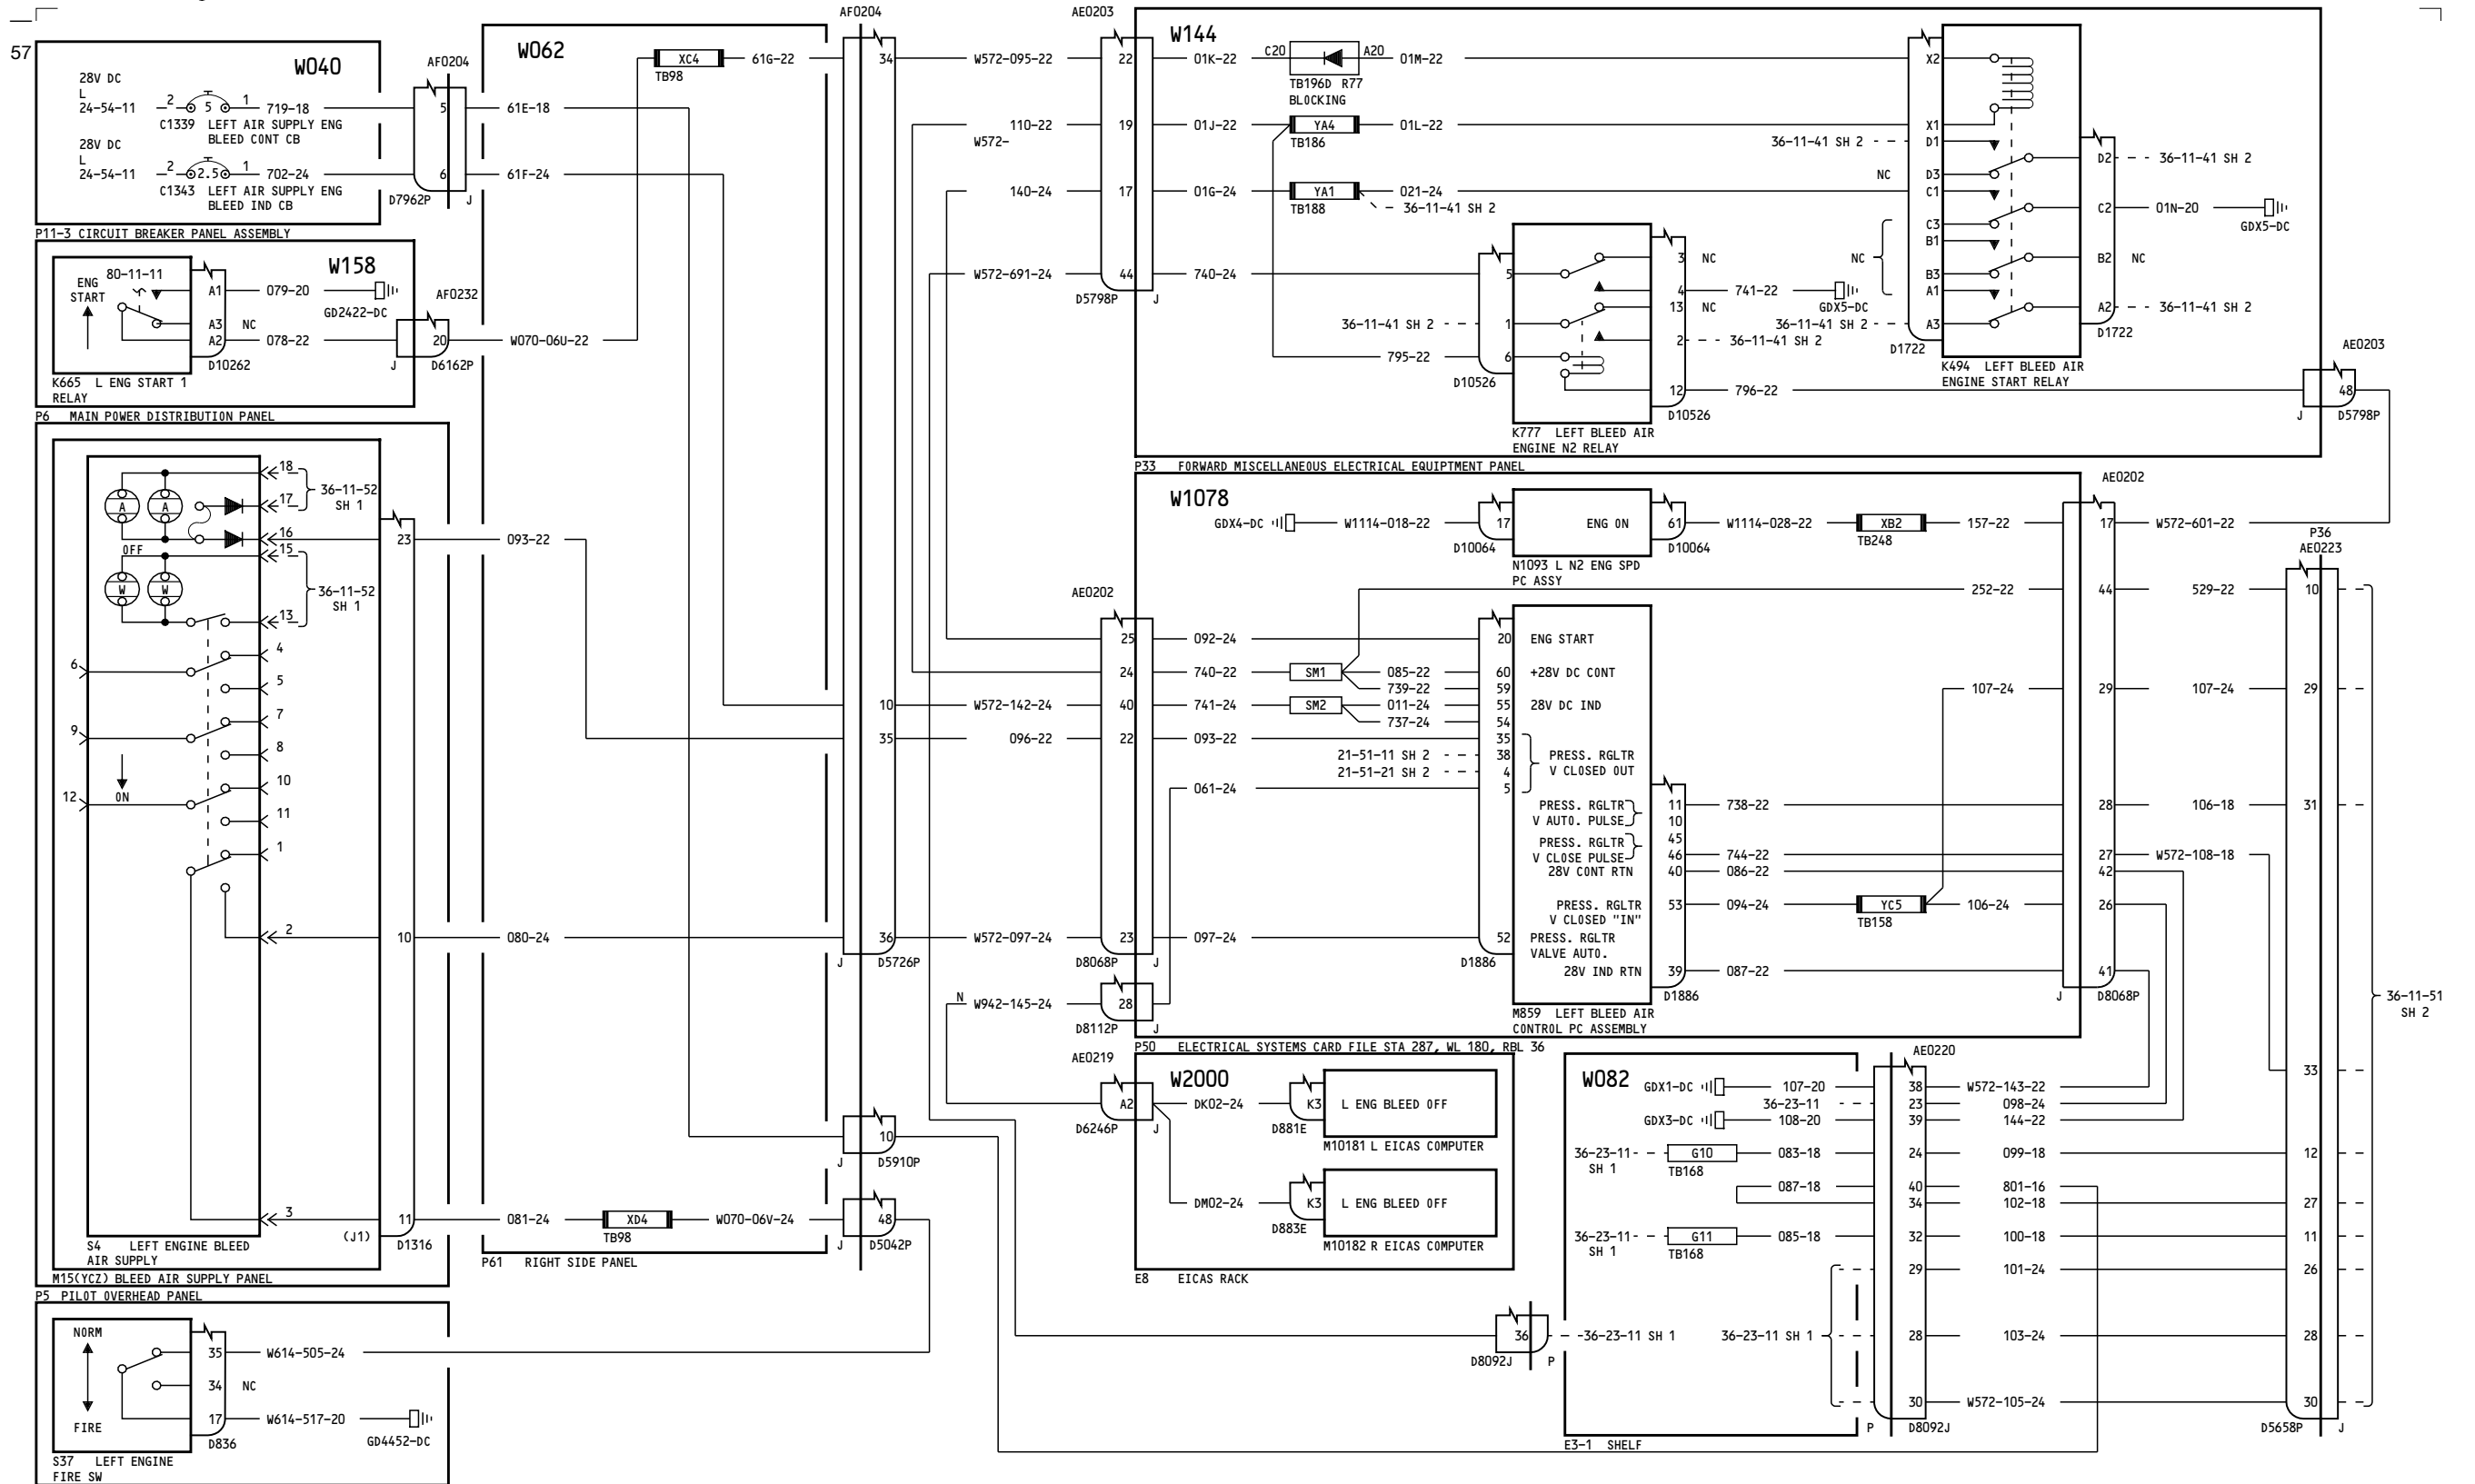

**AIR SUPPLY-  
LEFT PRESSURE REGULATION  
& SHUTOFF**

**36-11-51**

Page 7.2  
Sheet 1  
Jan 21/2005


D280T132

- Incorporates
- ▶ 36-0026
  - ▶ 36-0027
  - ▶ 36-0029 R05

**36-11-51**

Page 7.2  
Sheet 1  
Jan 21/2005



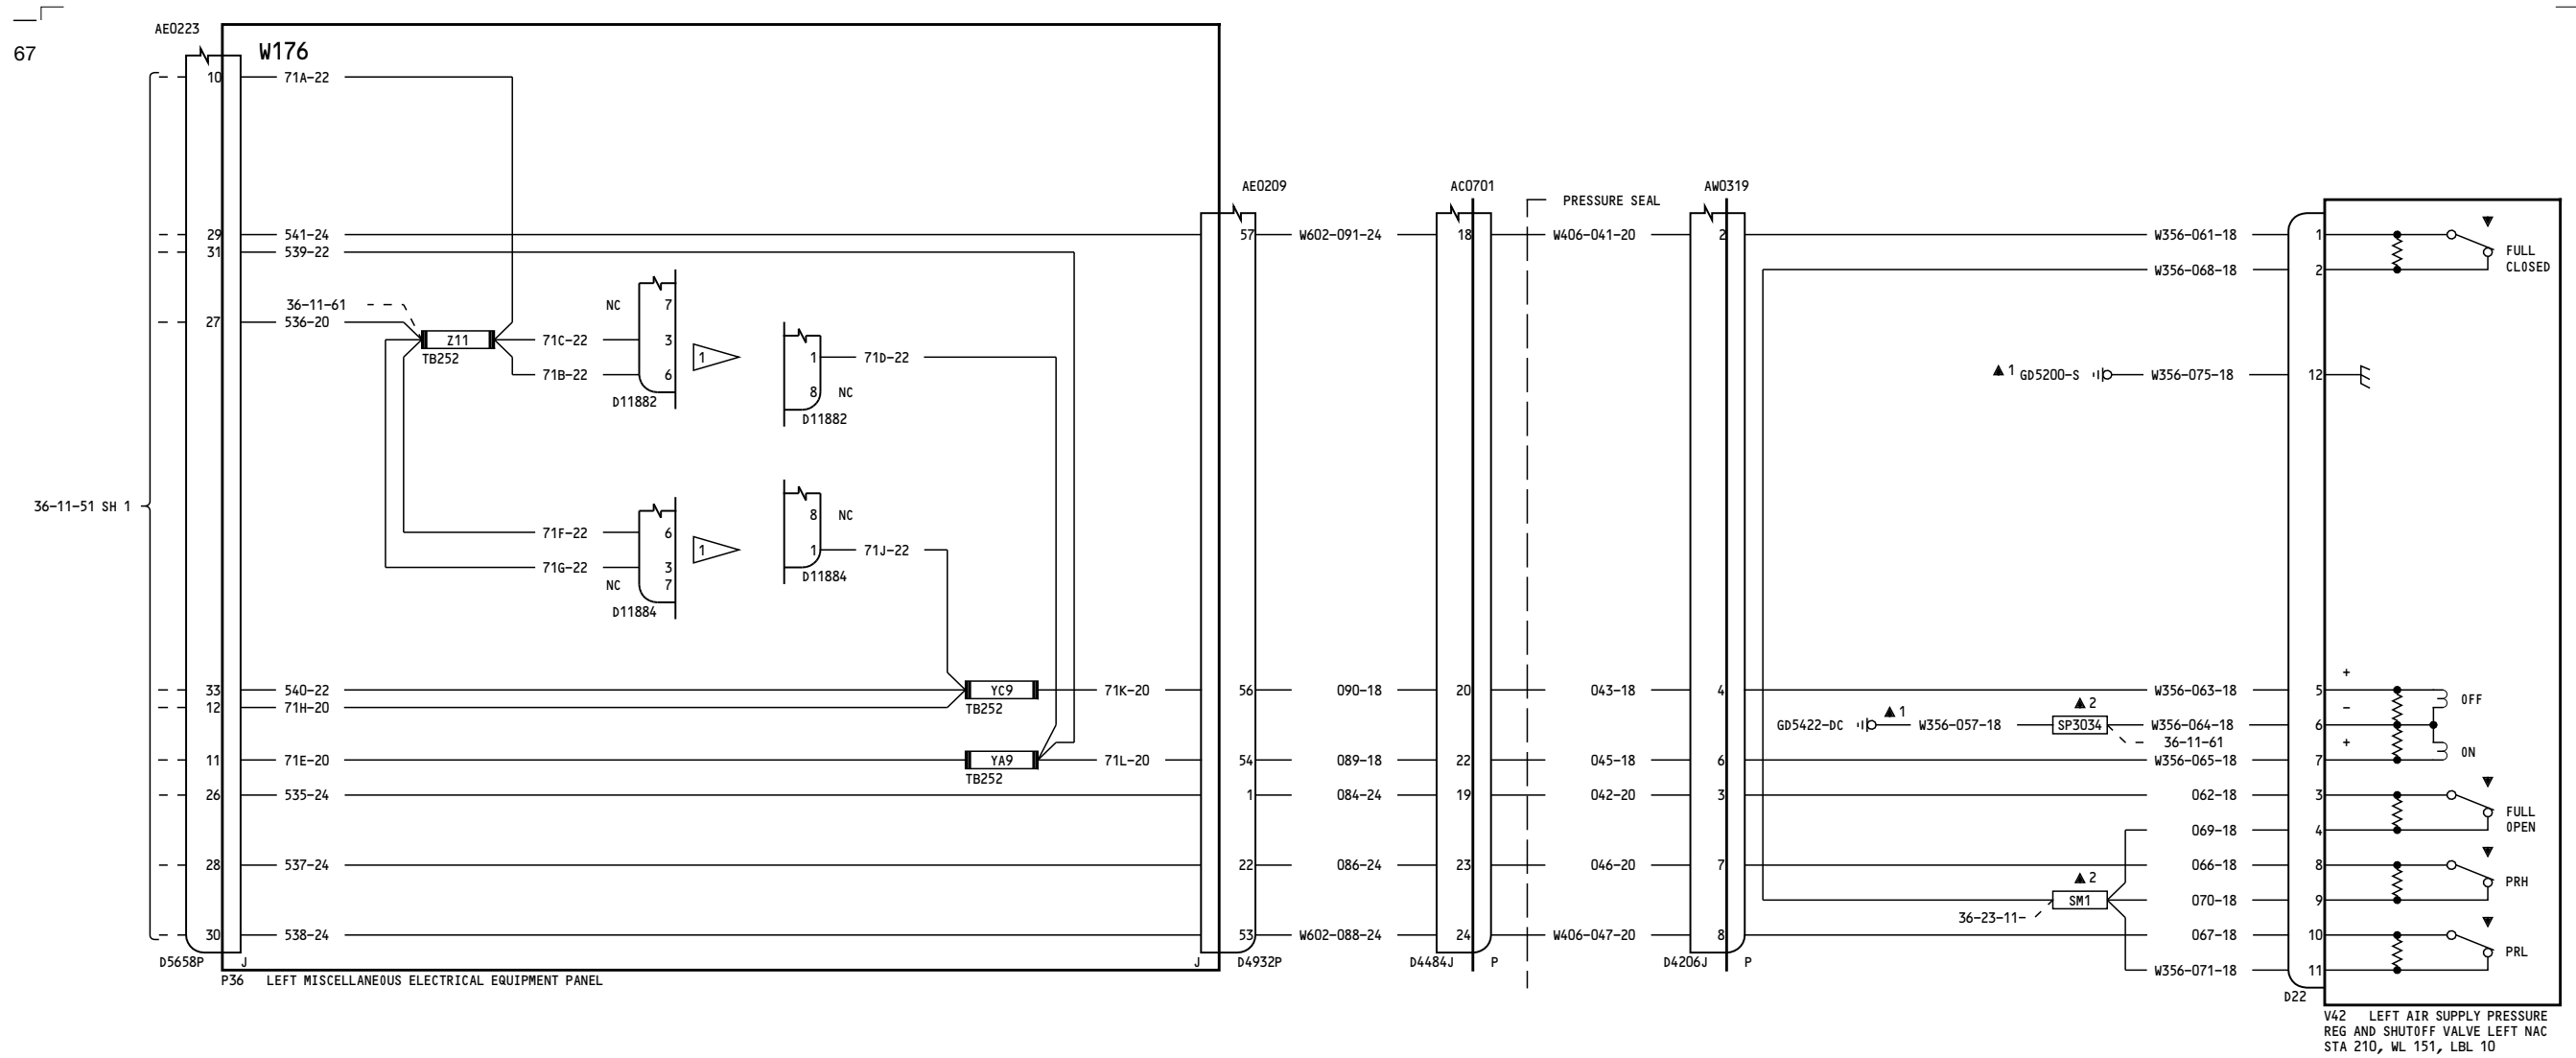

NOTES:  
 1 CAP & STOW CONNECTOR WHEN MATING EQUIPMENT IS NOT INSTALLED.

275	<p><b>AIR SUPPLY- LEFT PRESSURE REGULATION &amp; SHUTOFF</b></p> <p>D280T132</p>
-----	--


**36-11-51**

Page 7.2  
 Sheet 2  
 Jan 21/2005

- Incorporates
- ▶ 36-0026
  - ▶ 36-0026 IN06
  - ▶ 36-0027

**36-11-51**

Page 7.2  
 Sheet 2  
 Jan 21/2005

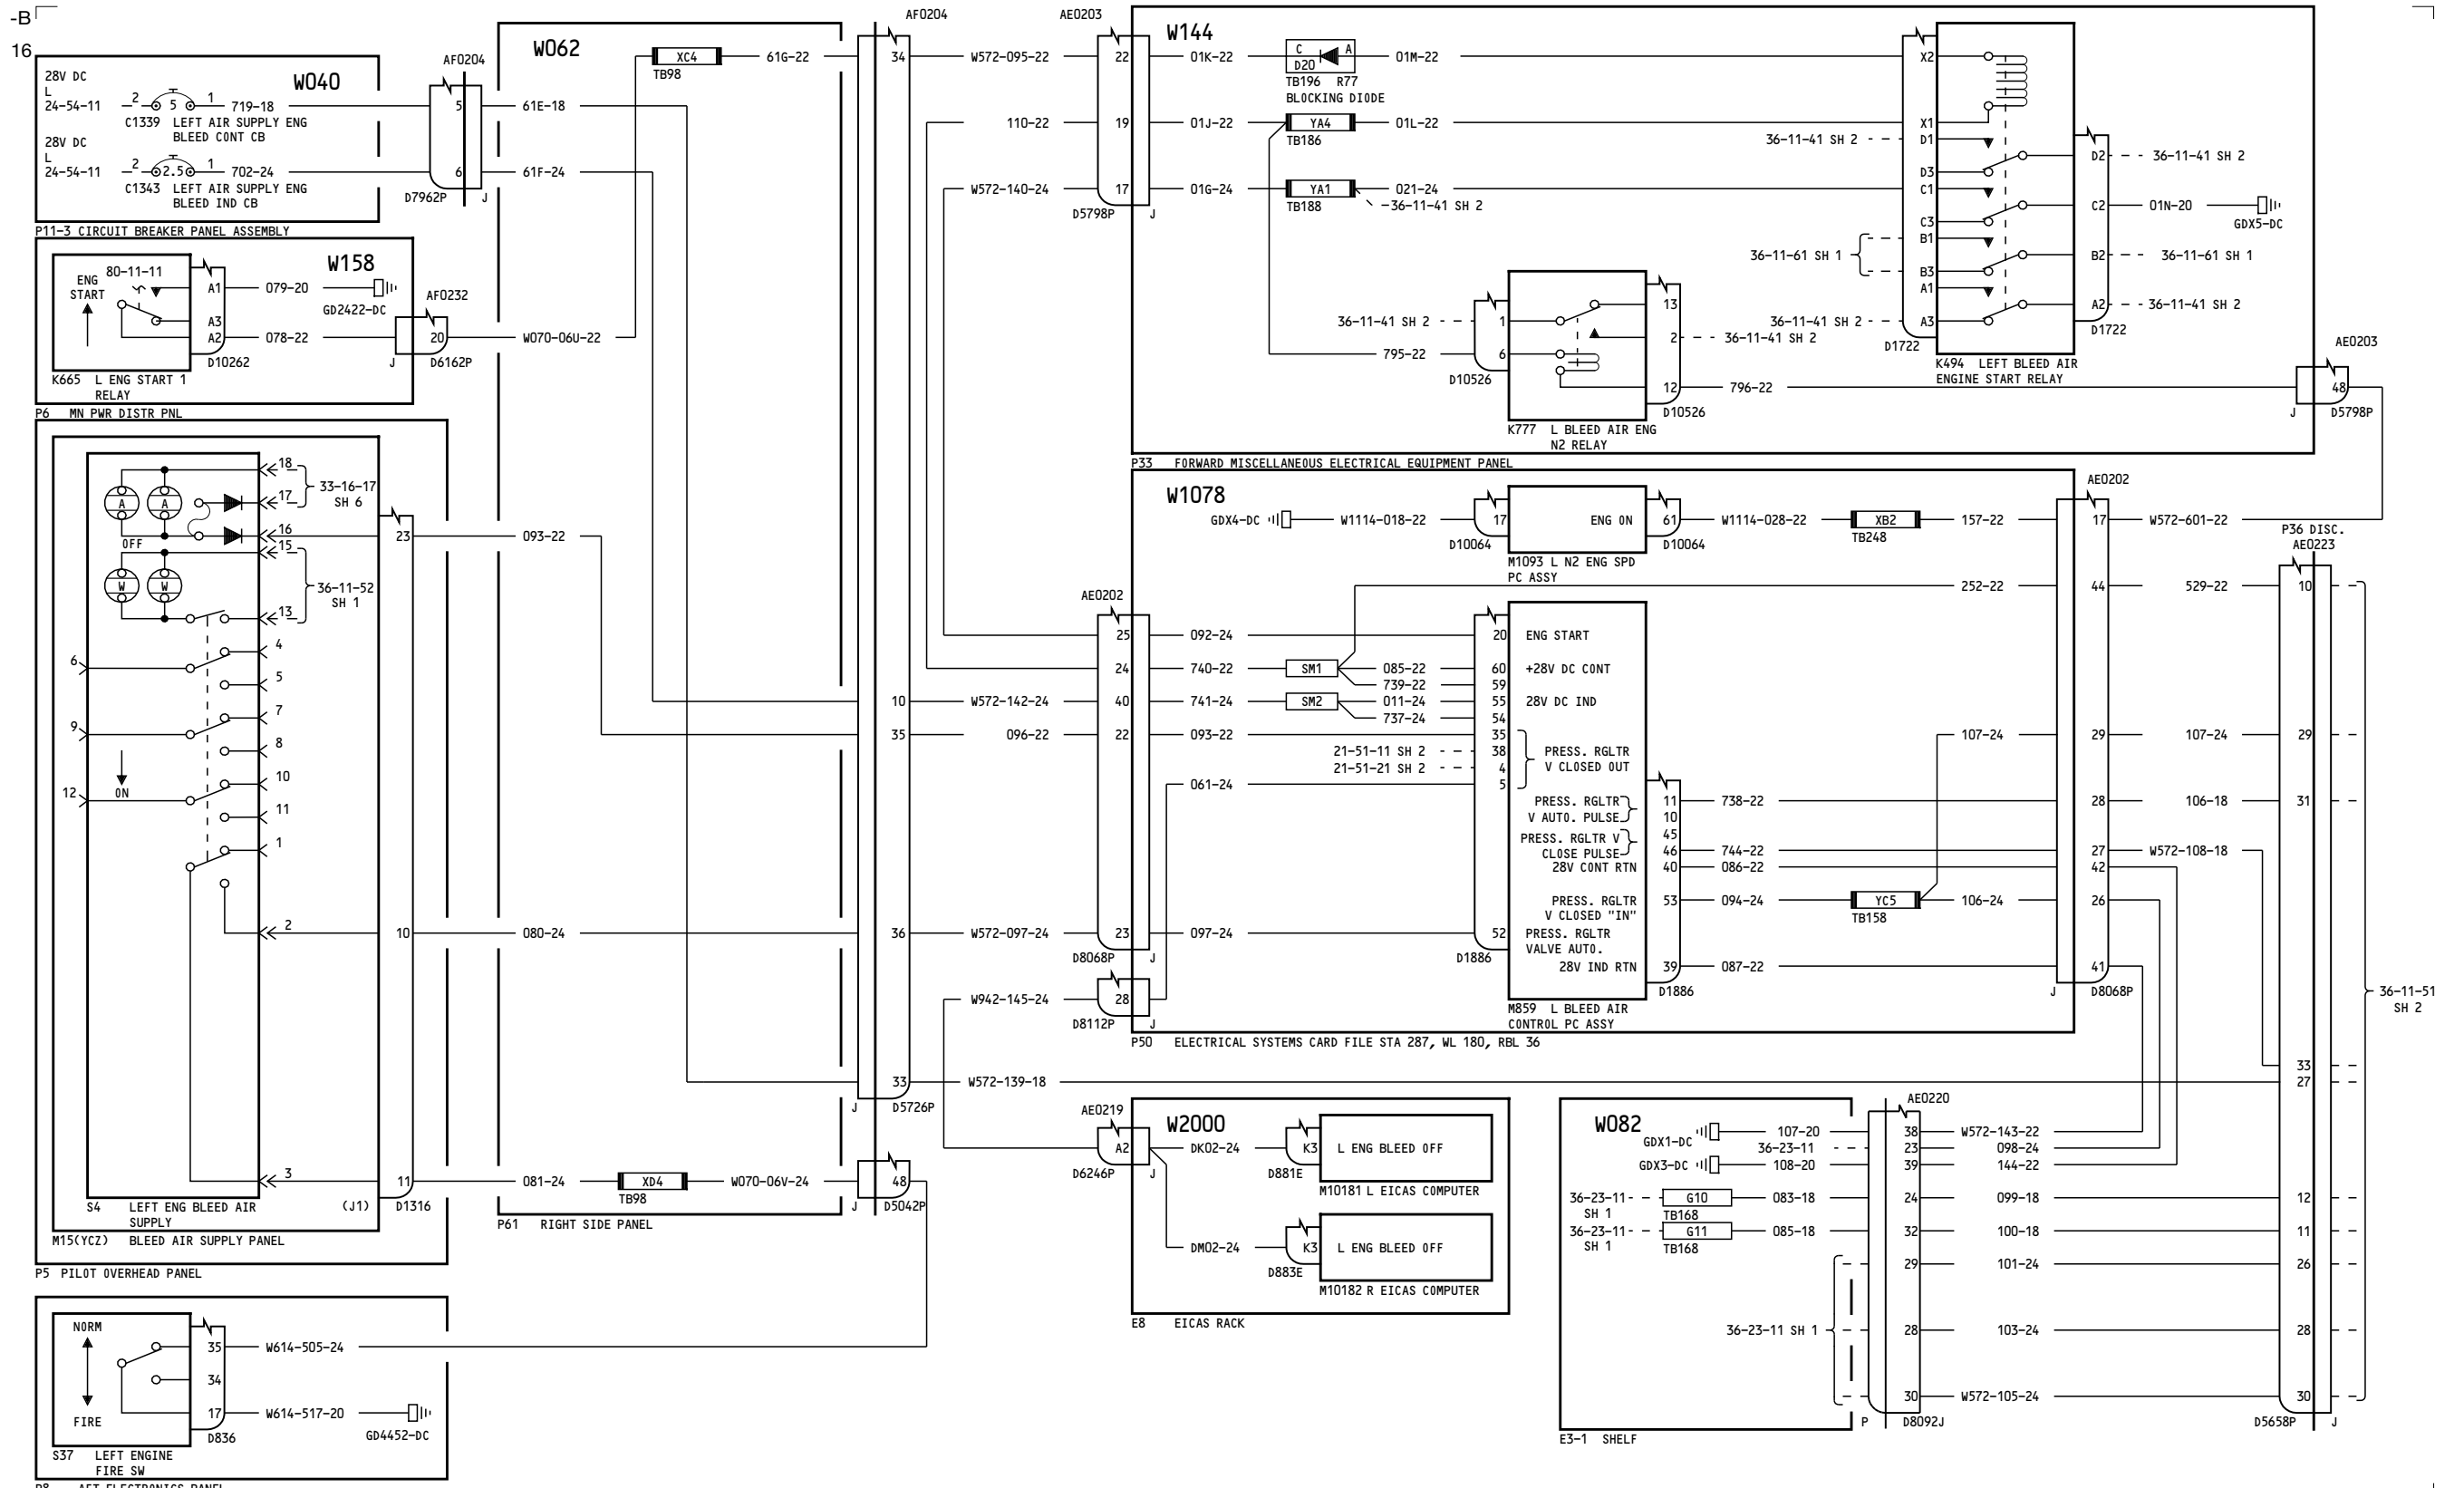

**AIR SUPPLY-  
LEFT PRESSURE REGULATION  
& SHUTOFF**


D280T132

**36-11-51**

Page 8  
Sheet 1  
Mar 09/2006

**36-11-51**

Page 8  
Sheet 1  
Mar 09/2006

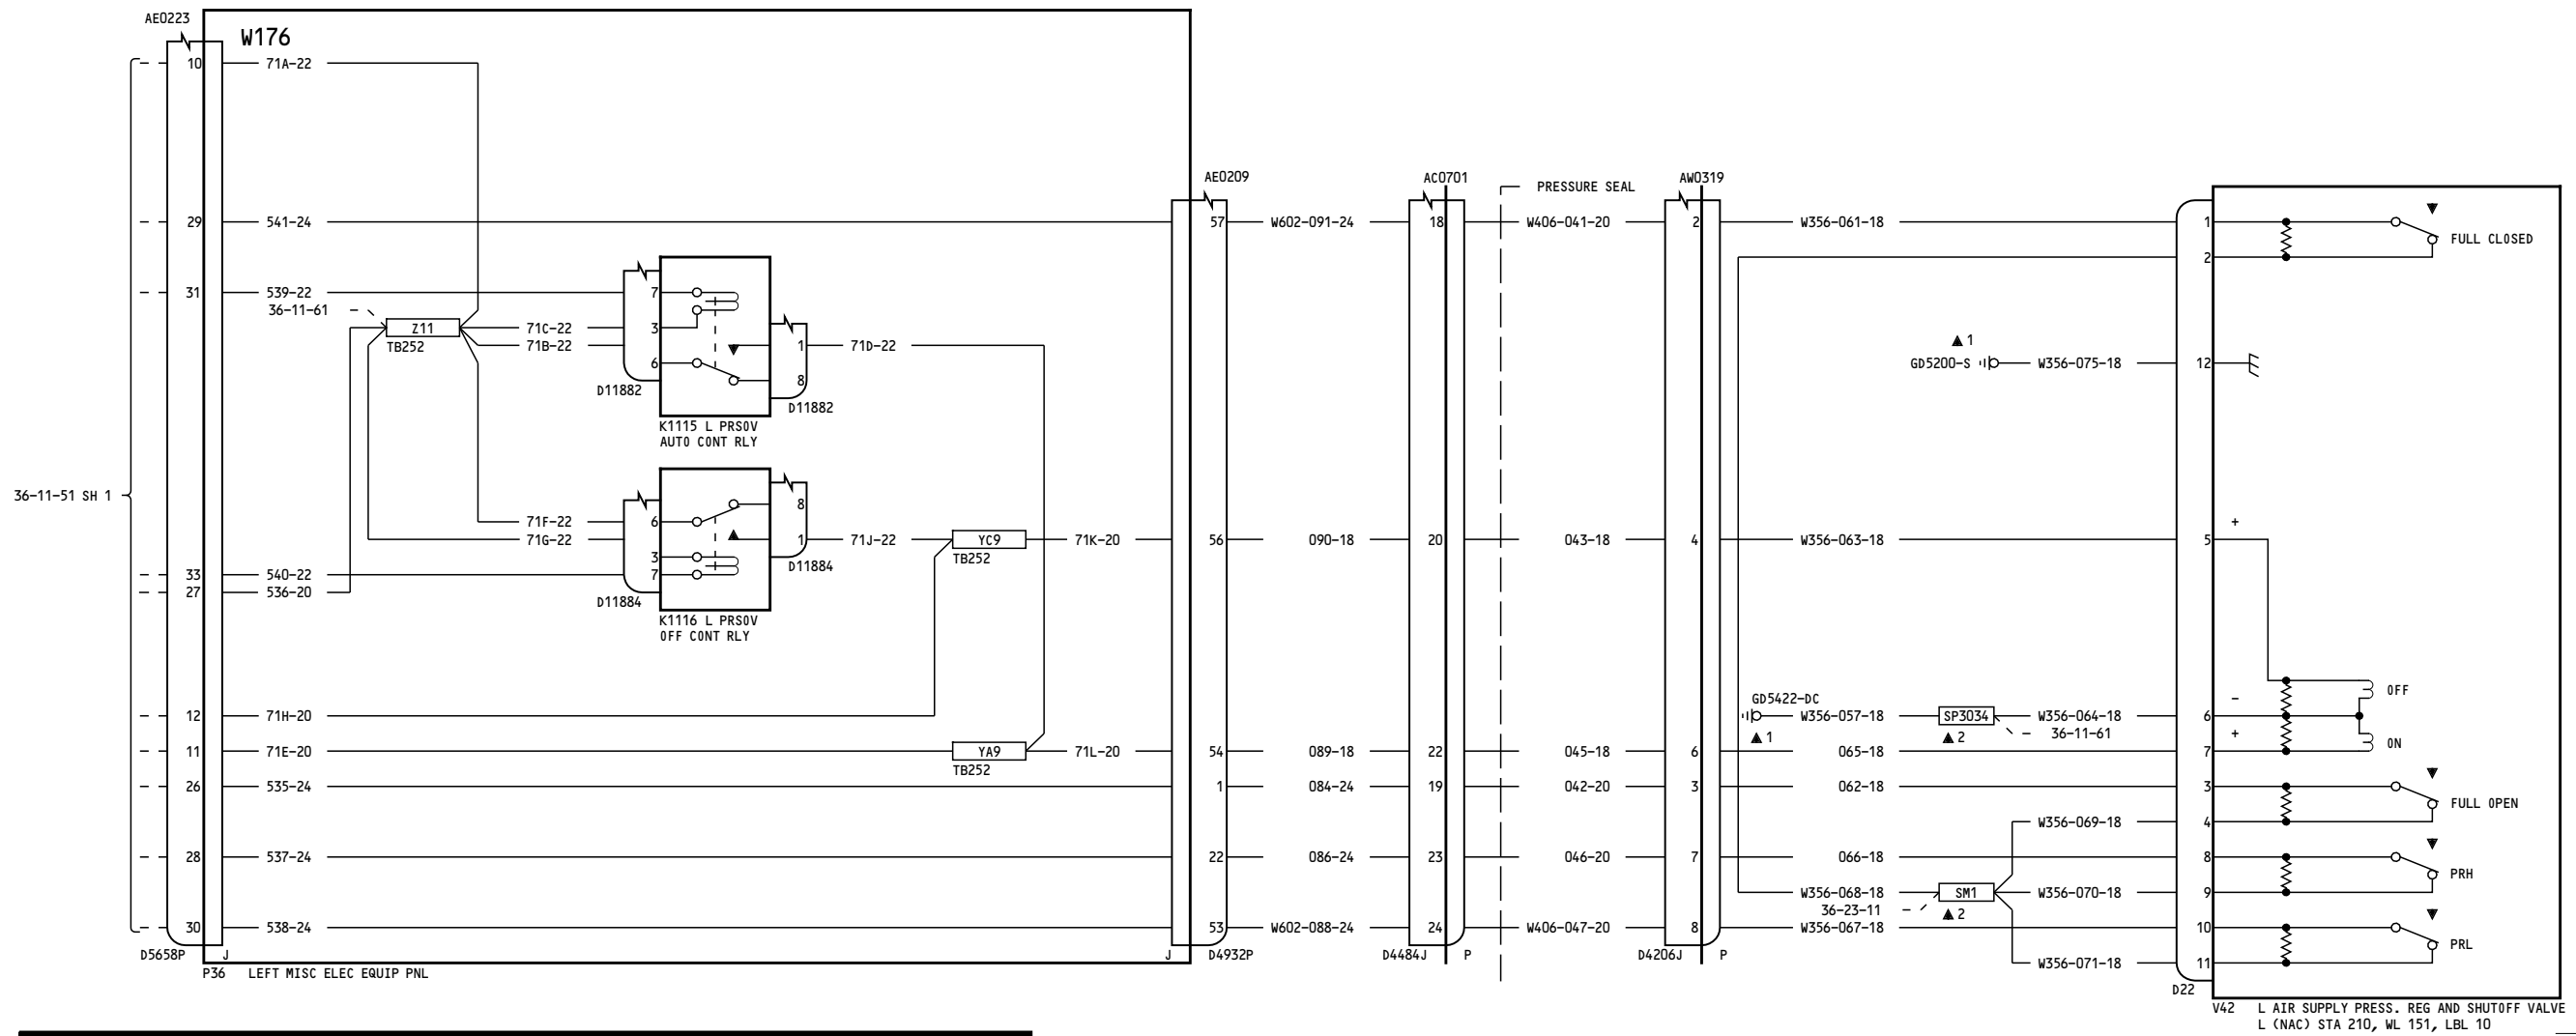

276

**AIR SUPPLY-  
LEFT PRESSURE REGULATION  
& SHUTOFF**


D280T132

**36-11-51**

Page 8  
Sheet 2  
Jan 21/2005

**36-11-51**

Page 8  
Sheet 2  
Jan 21/2005

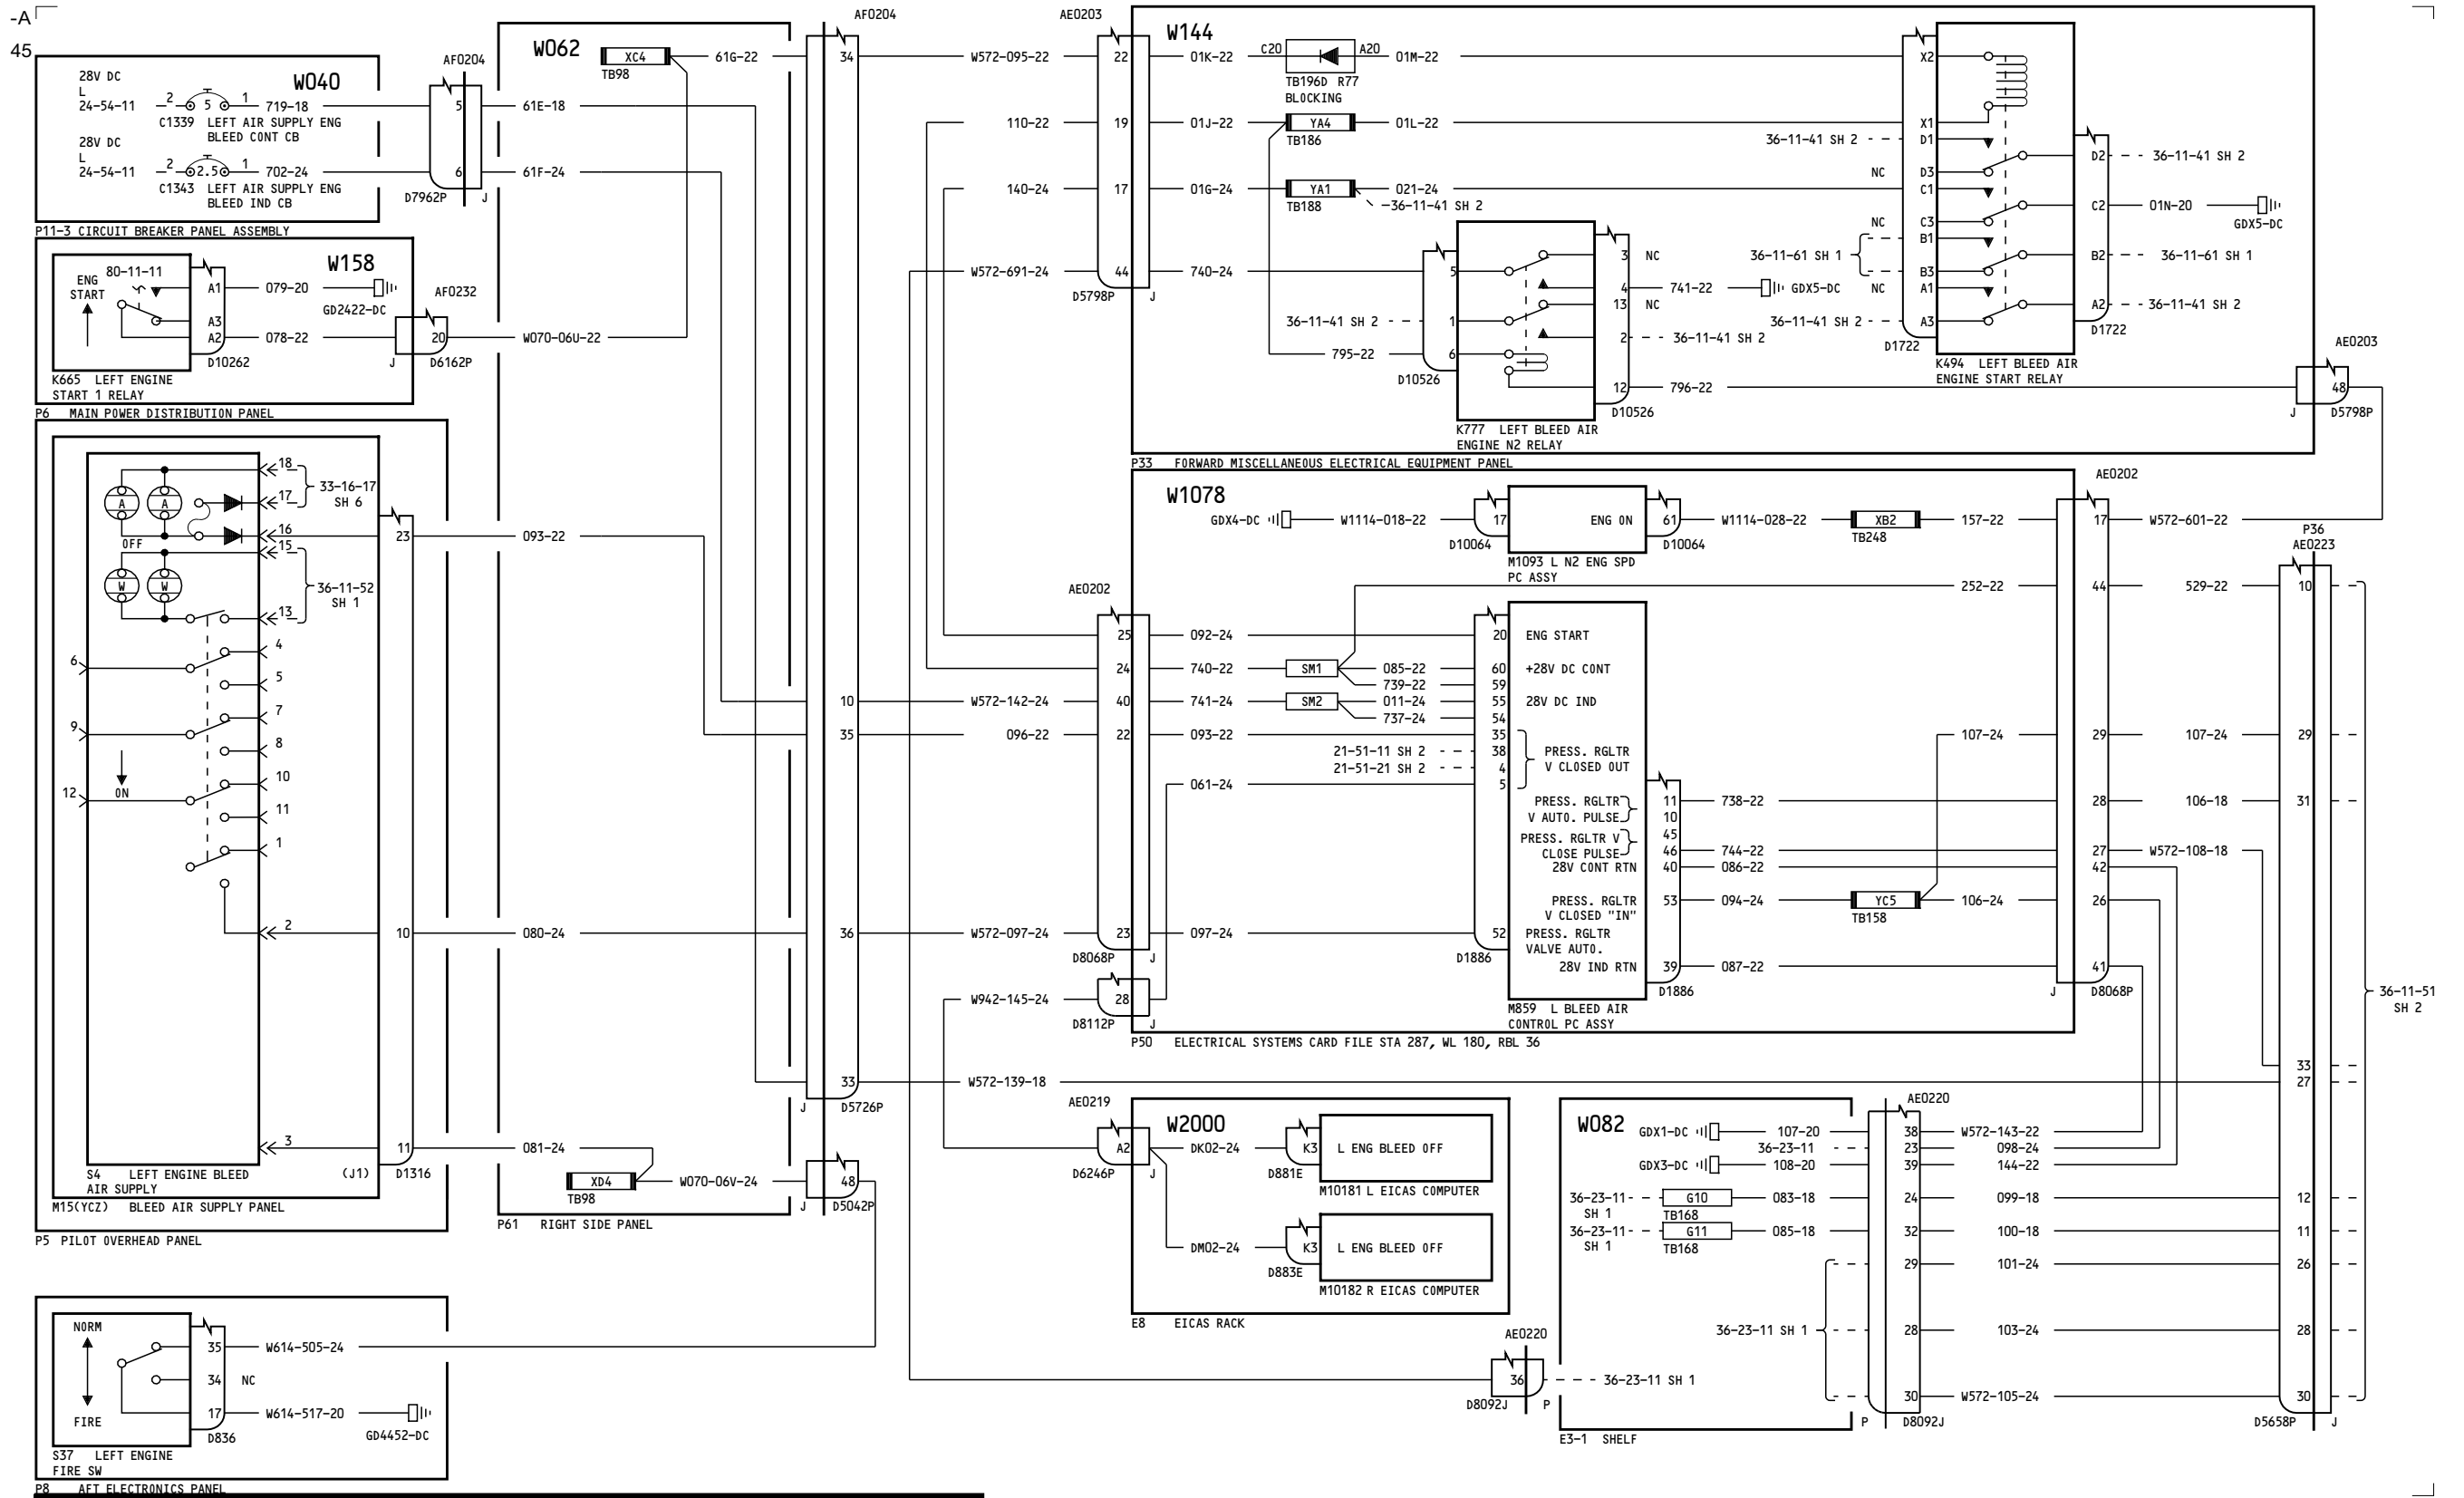

**AIR SUPPLY-  
LEFT PRESSURE REGULATION  
& SHUTOFF**

D280T132


**36-11-51**

Page 8.1  
Sheet 1  
Mar 09/2006

Incorporates  
36-0029 R05

**36-11-51**

Page 8.1  
Sheet 1  
Mar 09/2006

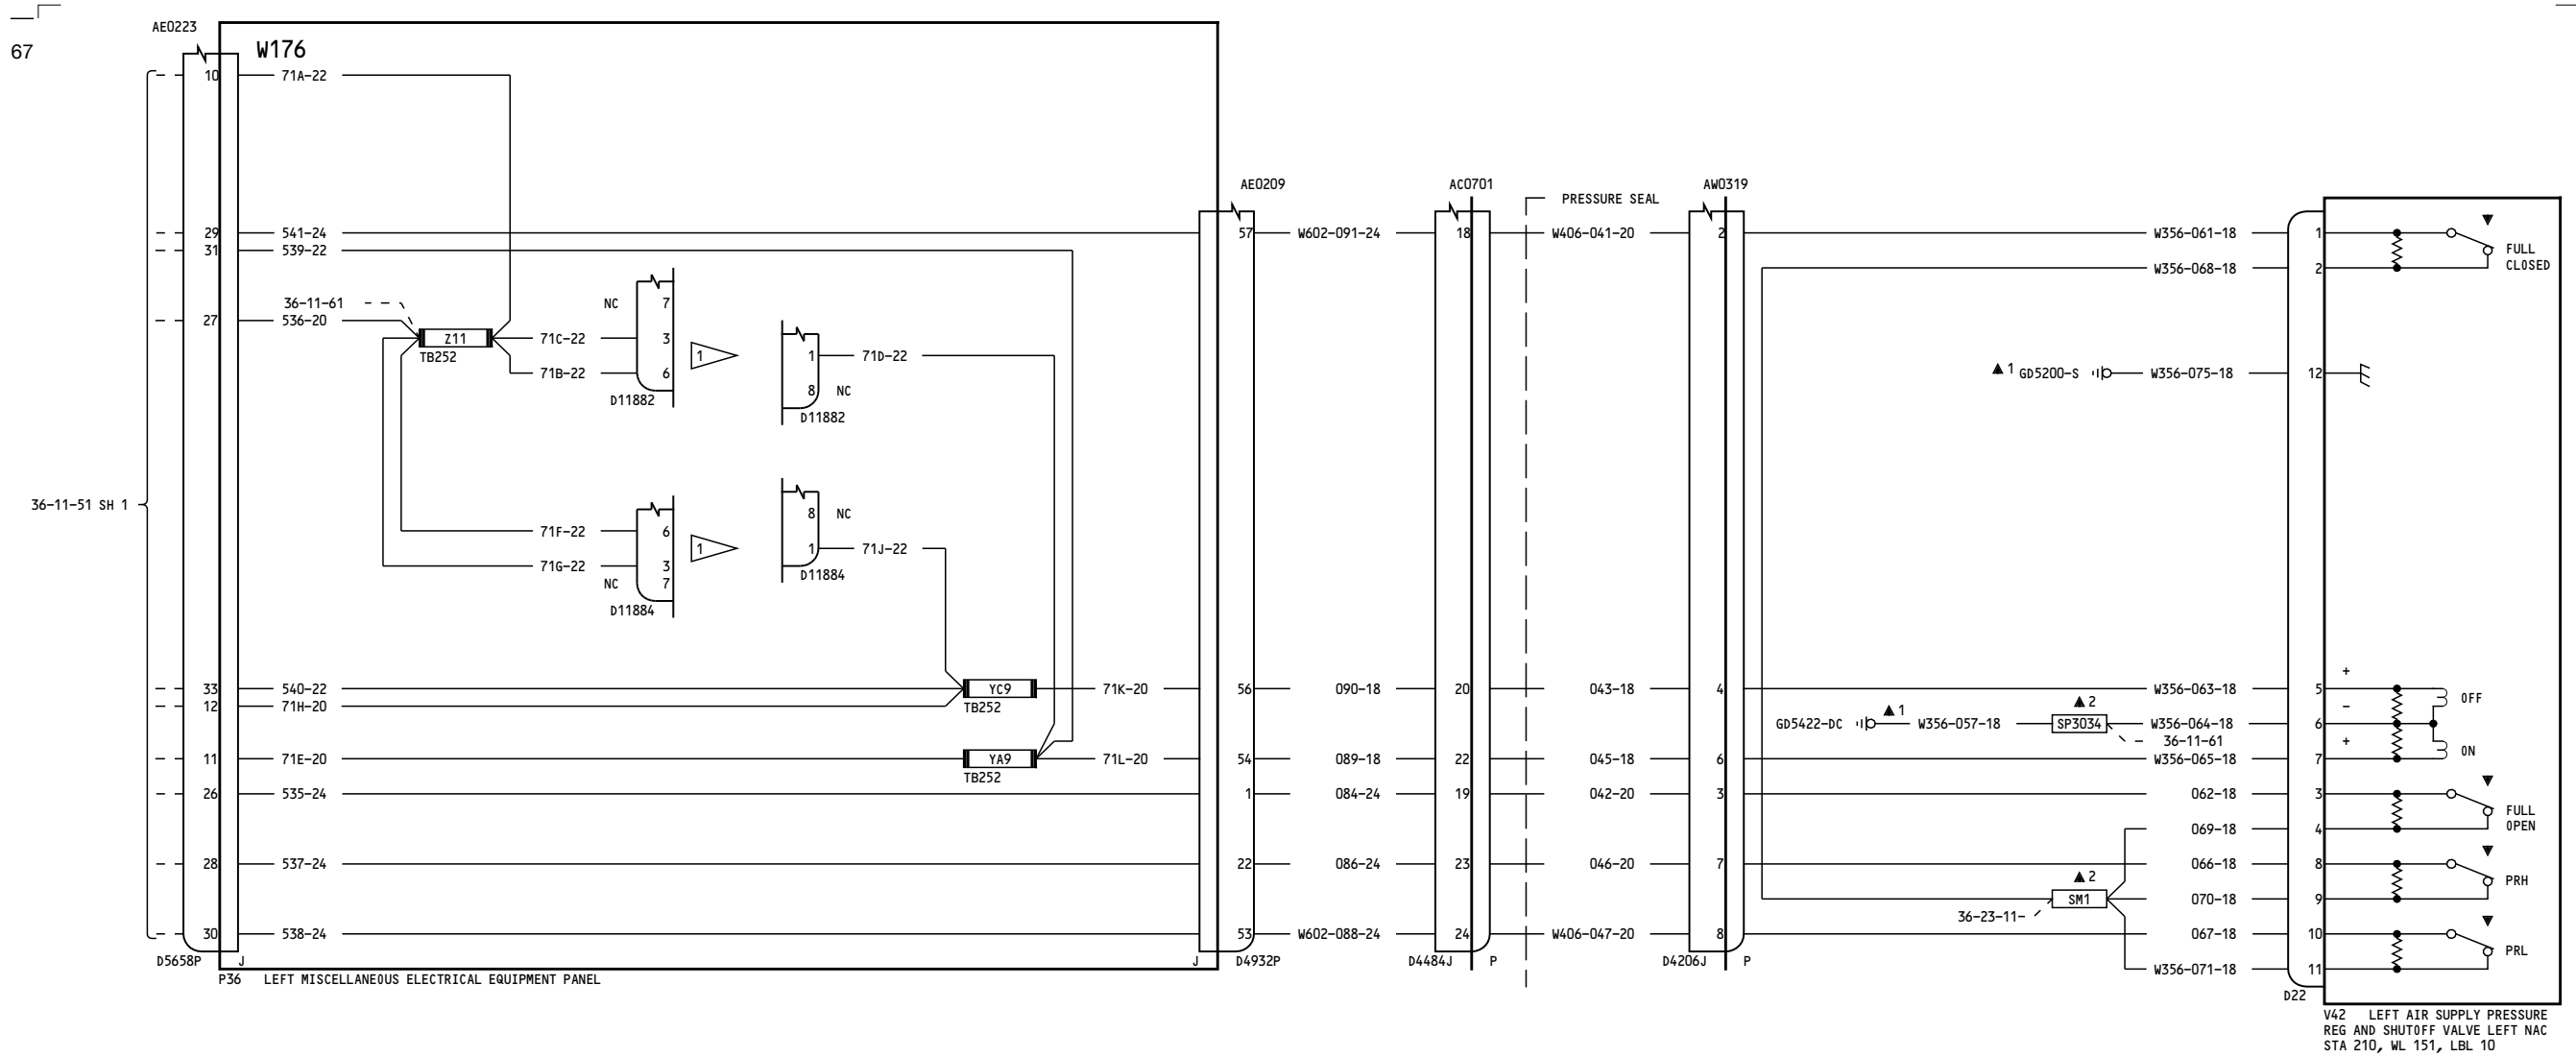

NOTES:  
 1 CAP & STOW CONNECTOR WHEN MATING EQUIPMENT IS NOT INSTALLED.

276

**AIR SUPPLY-  
LEFT PRESSURE REGULATION  
& SHUTOFF**

D280T132


**36-11-51**

Page 8.1  
 Sheet 2  
 Jan 21/2005

Incorporates  
 36-0026 IN06

**36-11-51**

Page 8.1  
 Sheet 2  
 Jan 21/2005

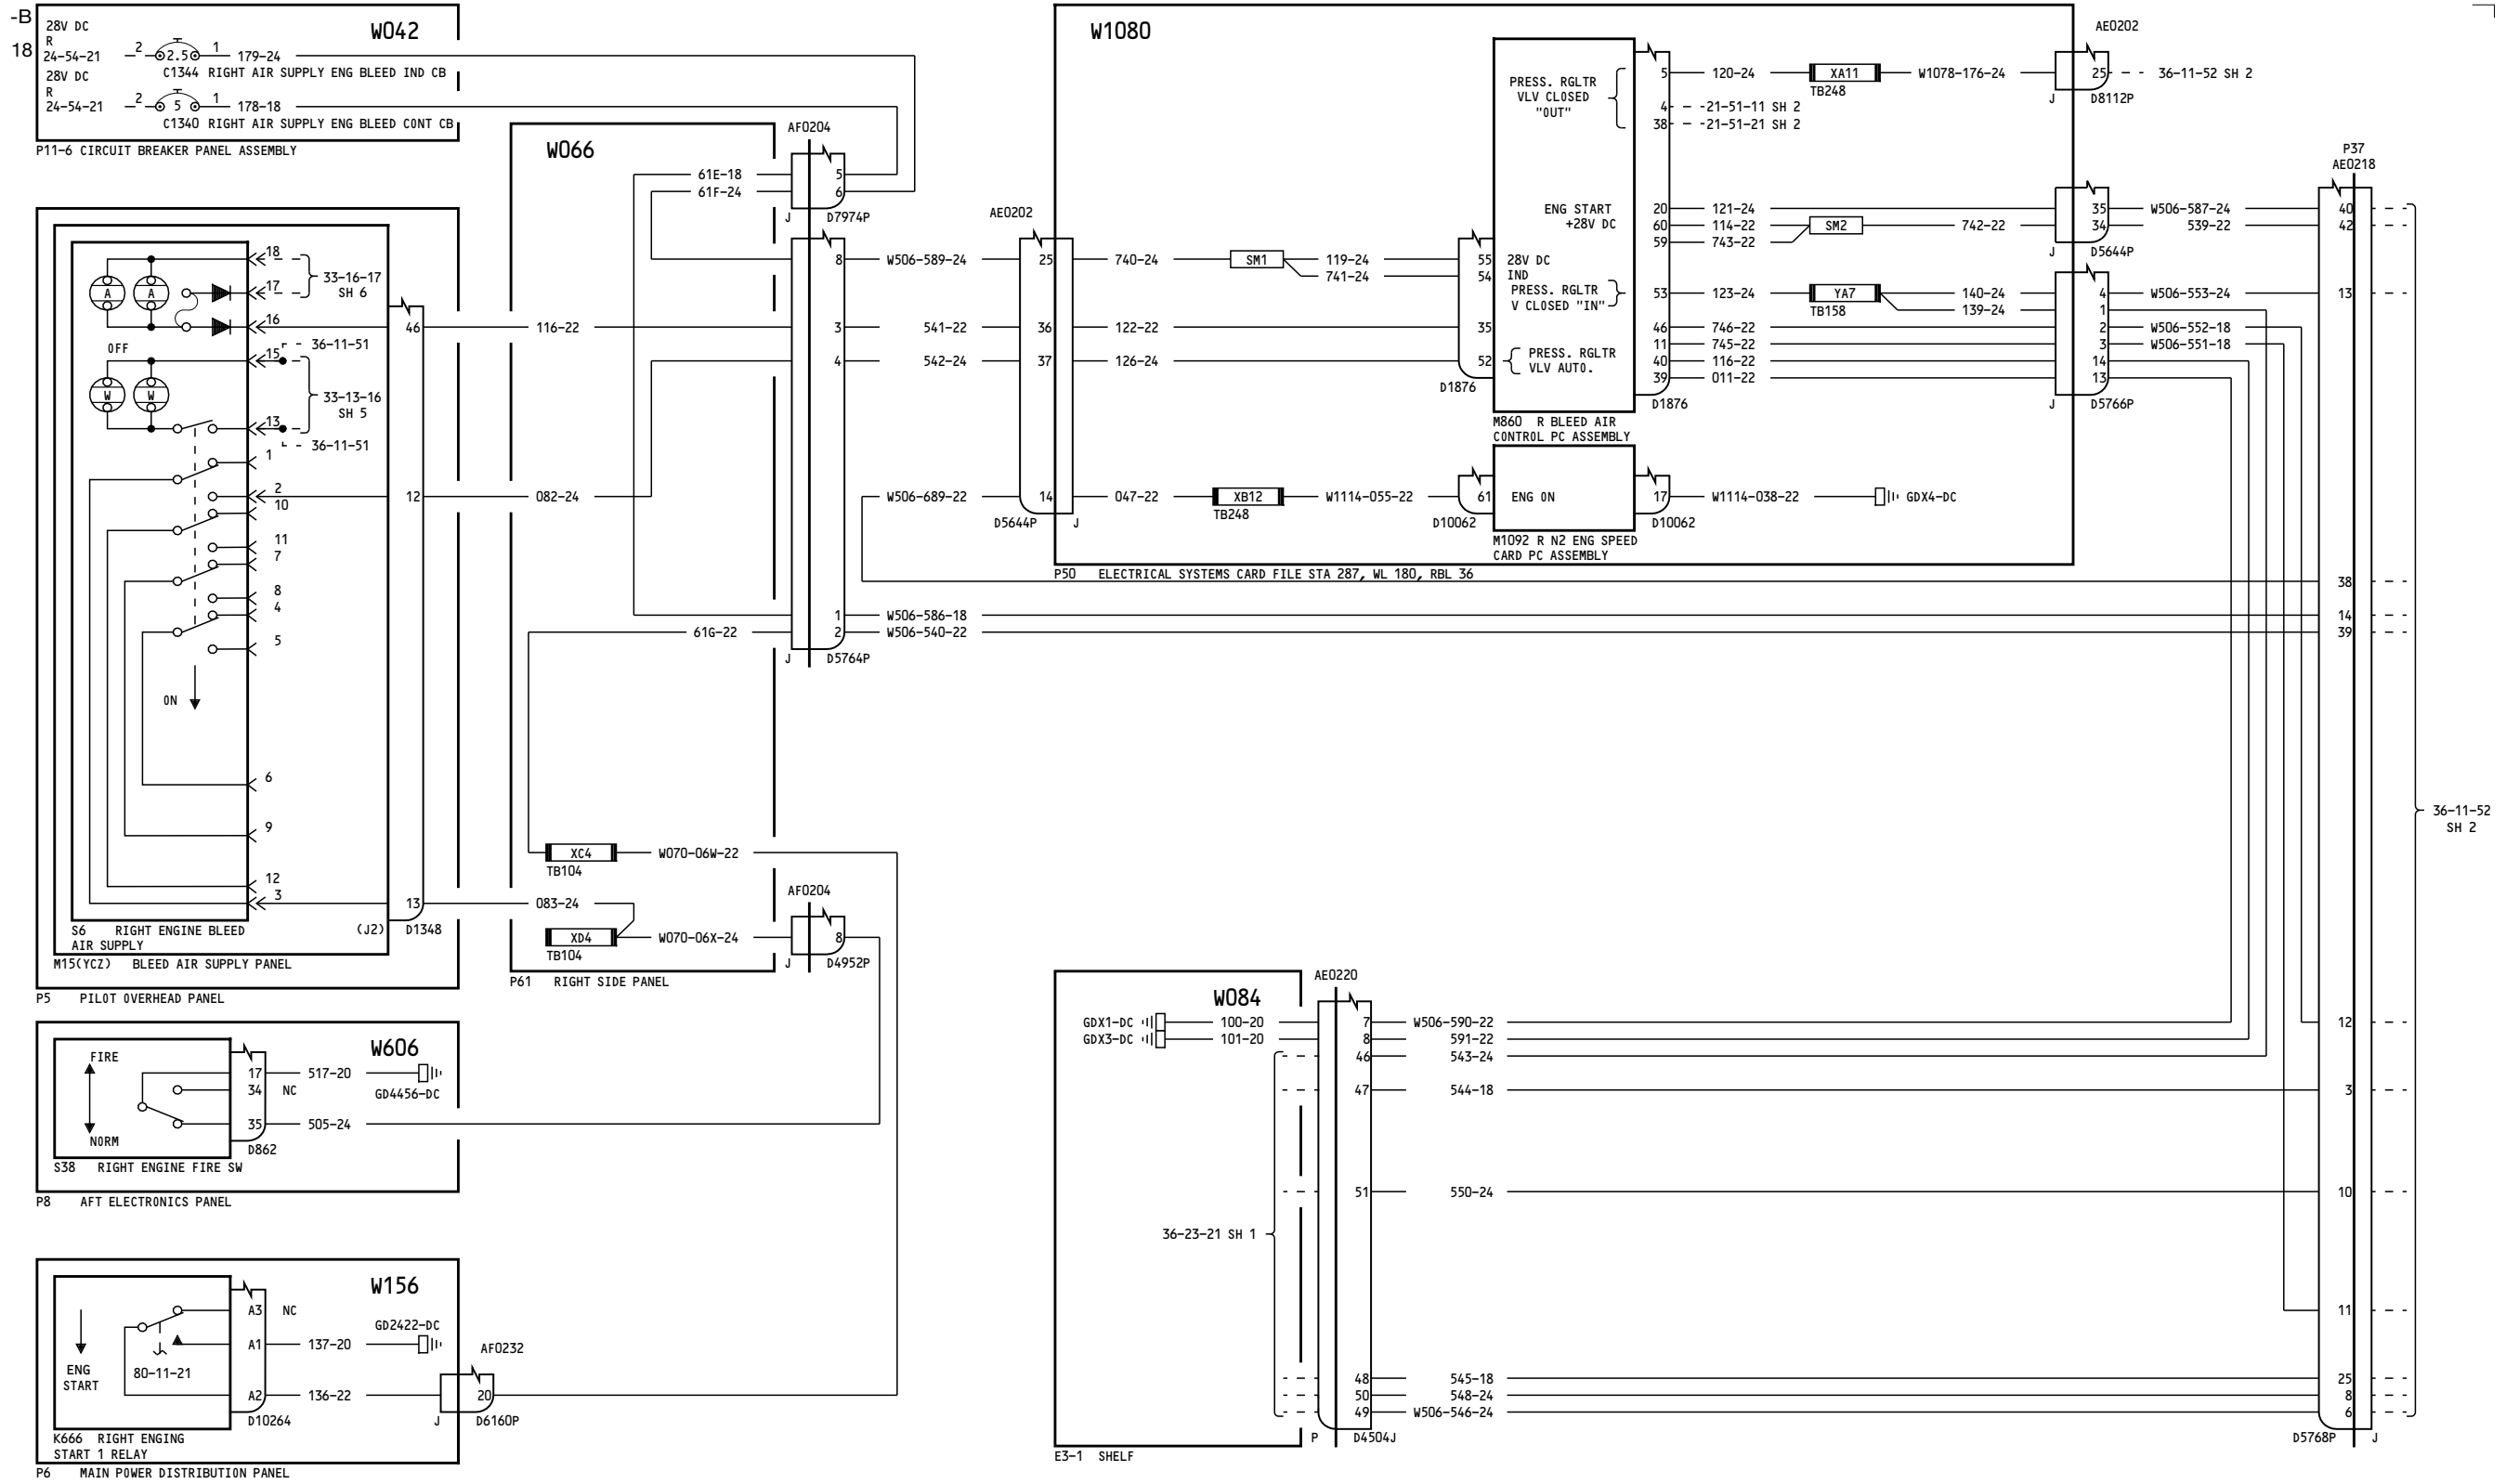

050-051, 155, 163-165

**AIR SUPPLY-  
RIGHT PRESSURE REGULATION  
& SHUTOFF**


**36-11-52**

Page 1.1  
Sheet 1  
Mar 09/2006

D280T132

**36-11-52**

Page 1.1  
Sheet 1  
Mar 09/2006

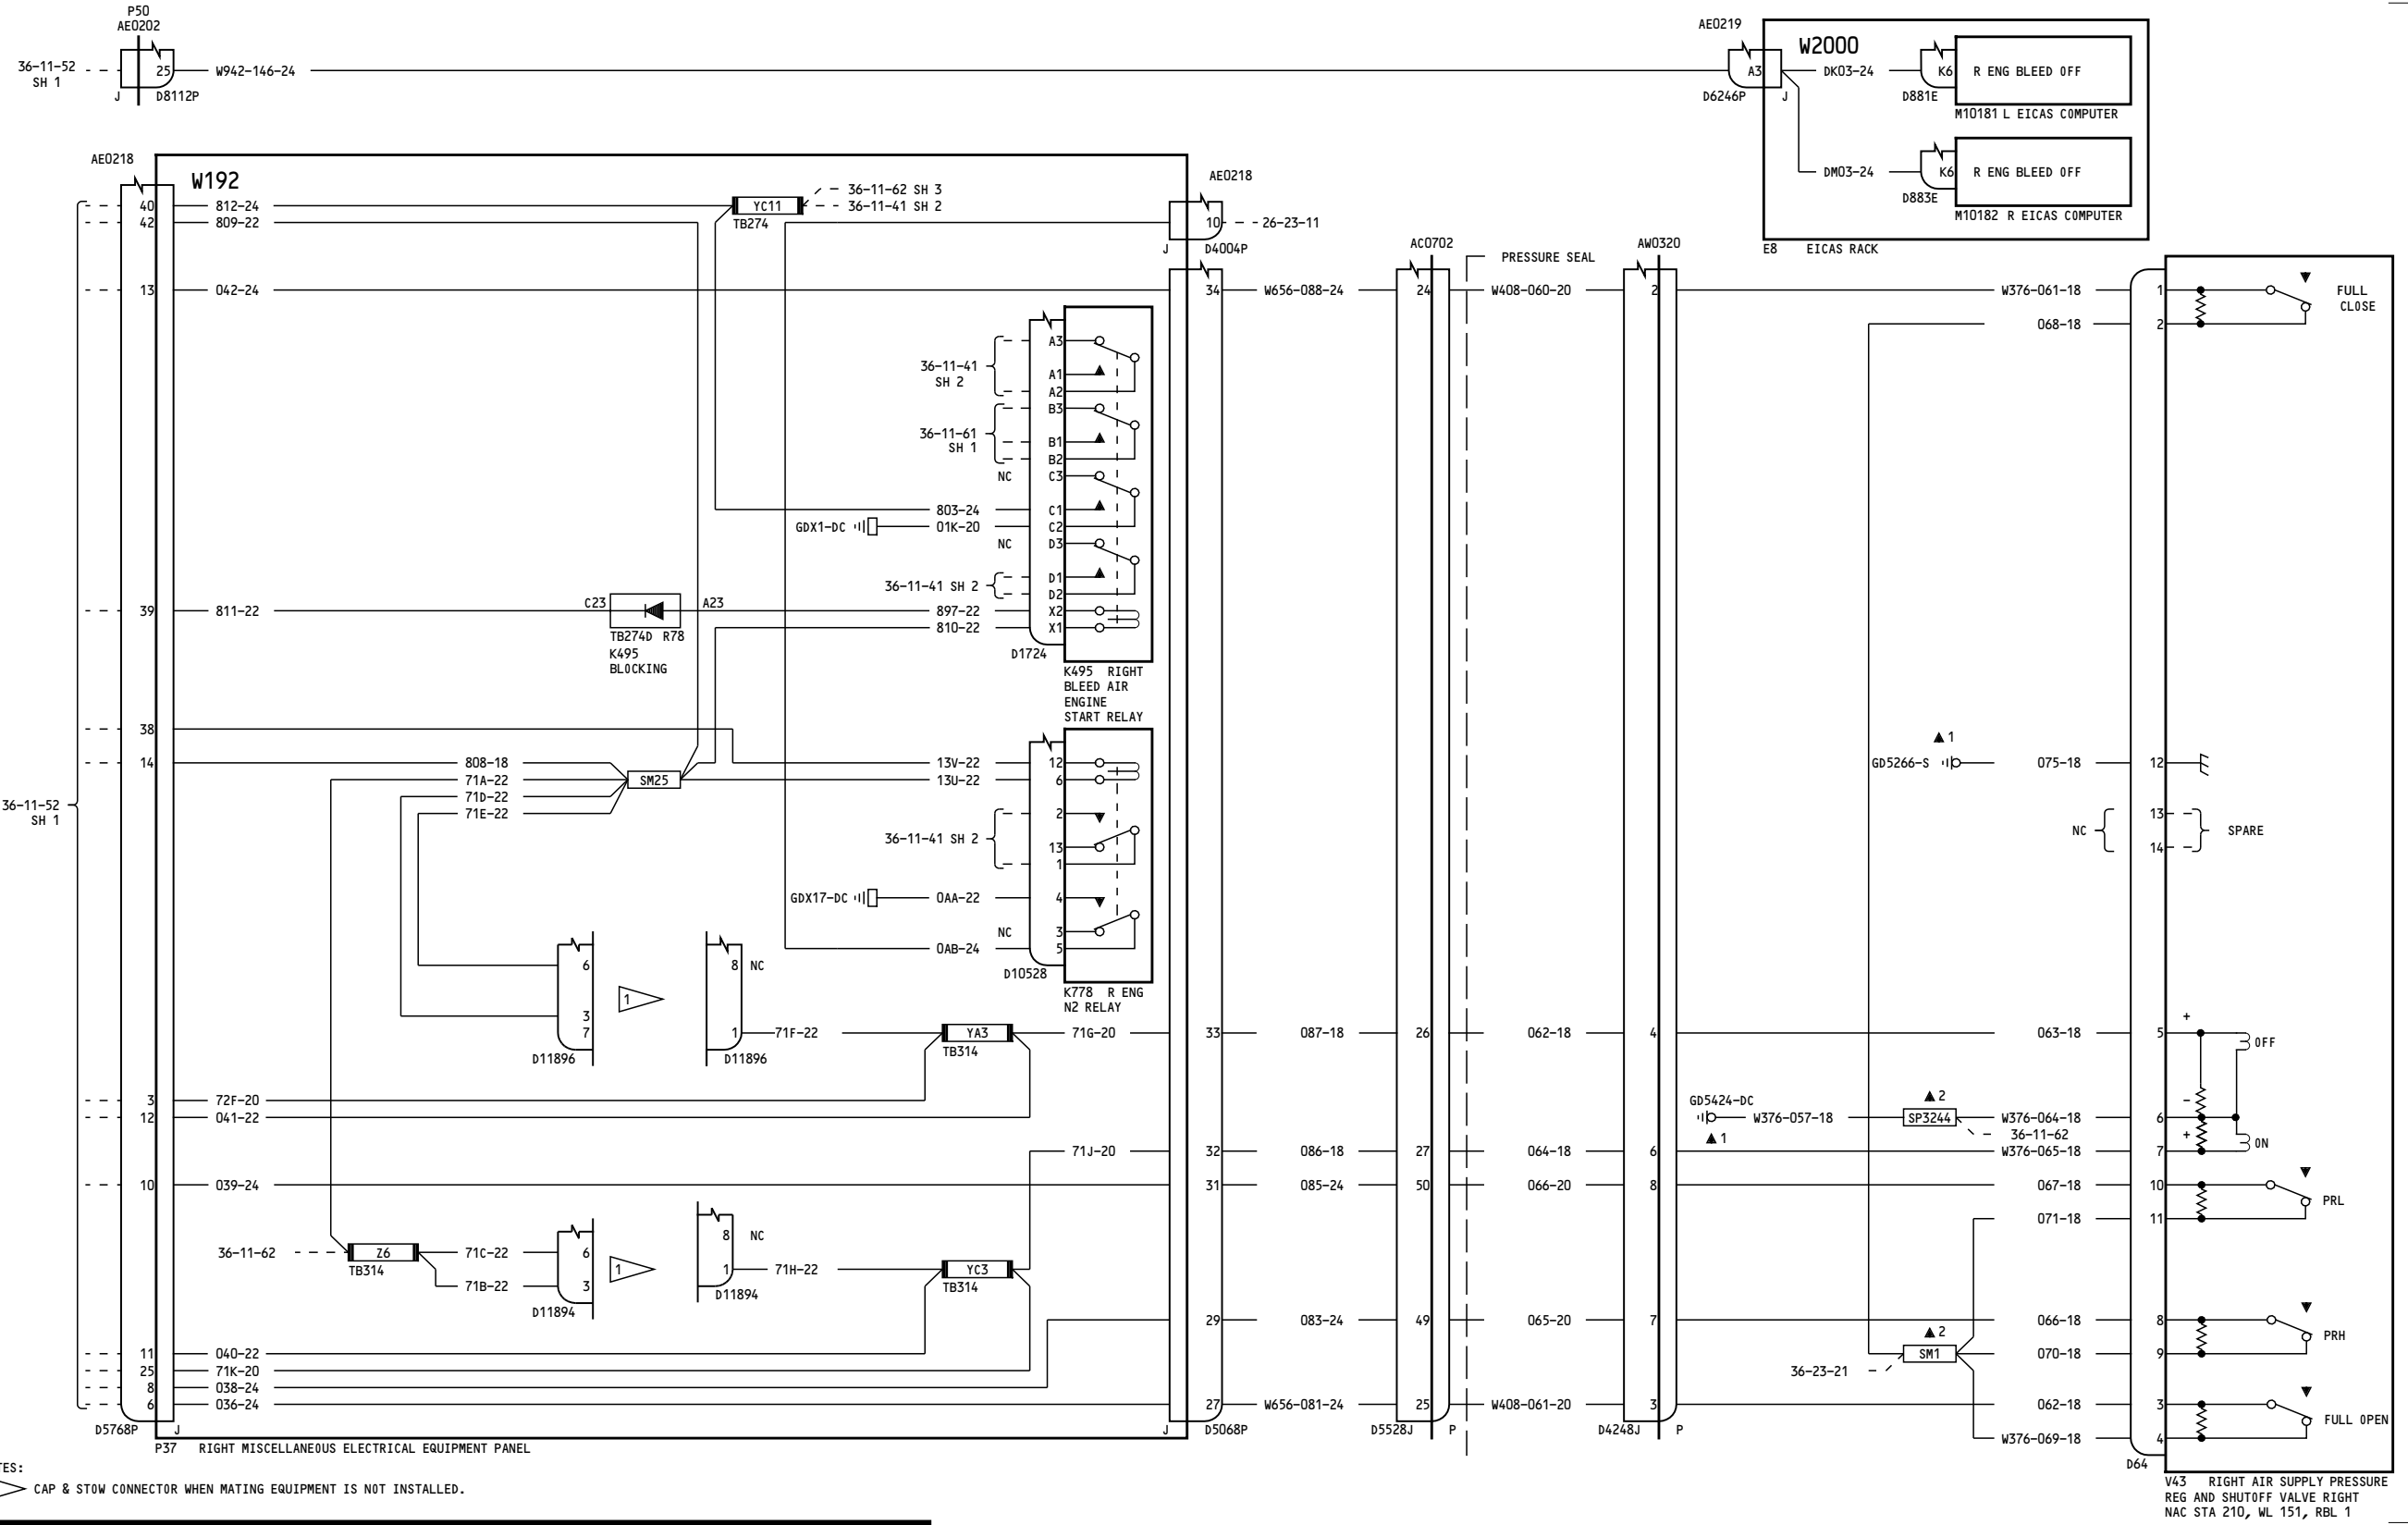

050-051, 155, 163-165

**AIR SUPPLY-  
RIGHT PRESSURE REGULATION  
& SHUTOFF**

**36-11-52**


Page 1.1  
Sheet 2  
Jan 21/2005

D280T132

Incorporates  
36-0026 R02  
36-0029 R05

**36-11-52**

Page 1.1  
Sheet 2  
Jan 21/2005

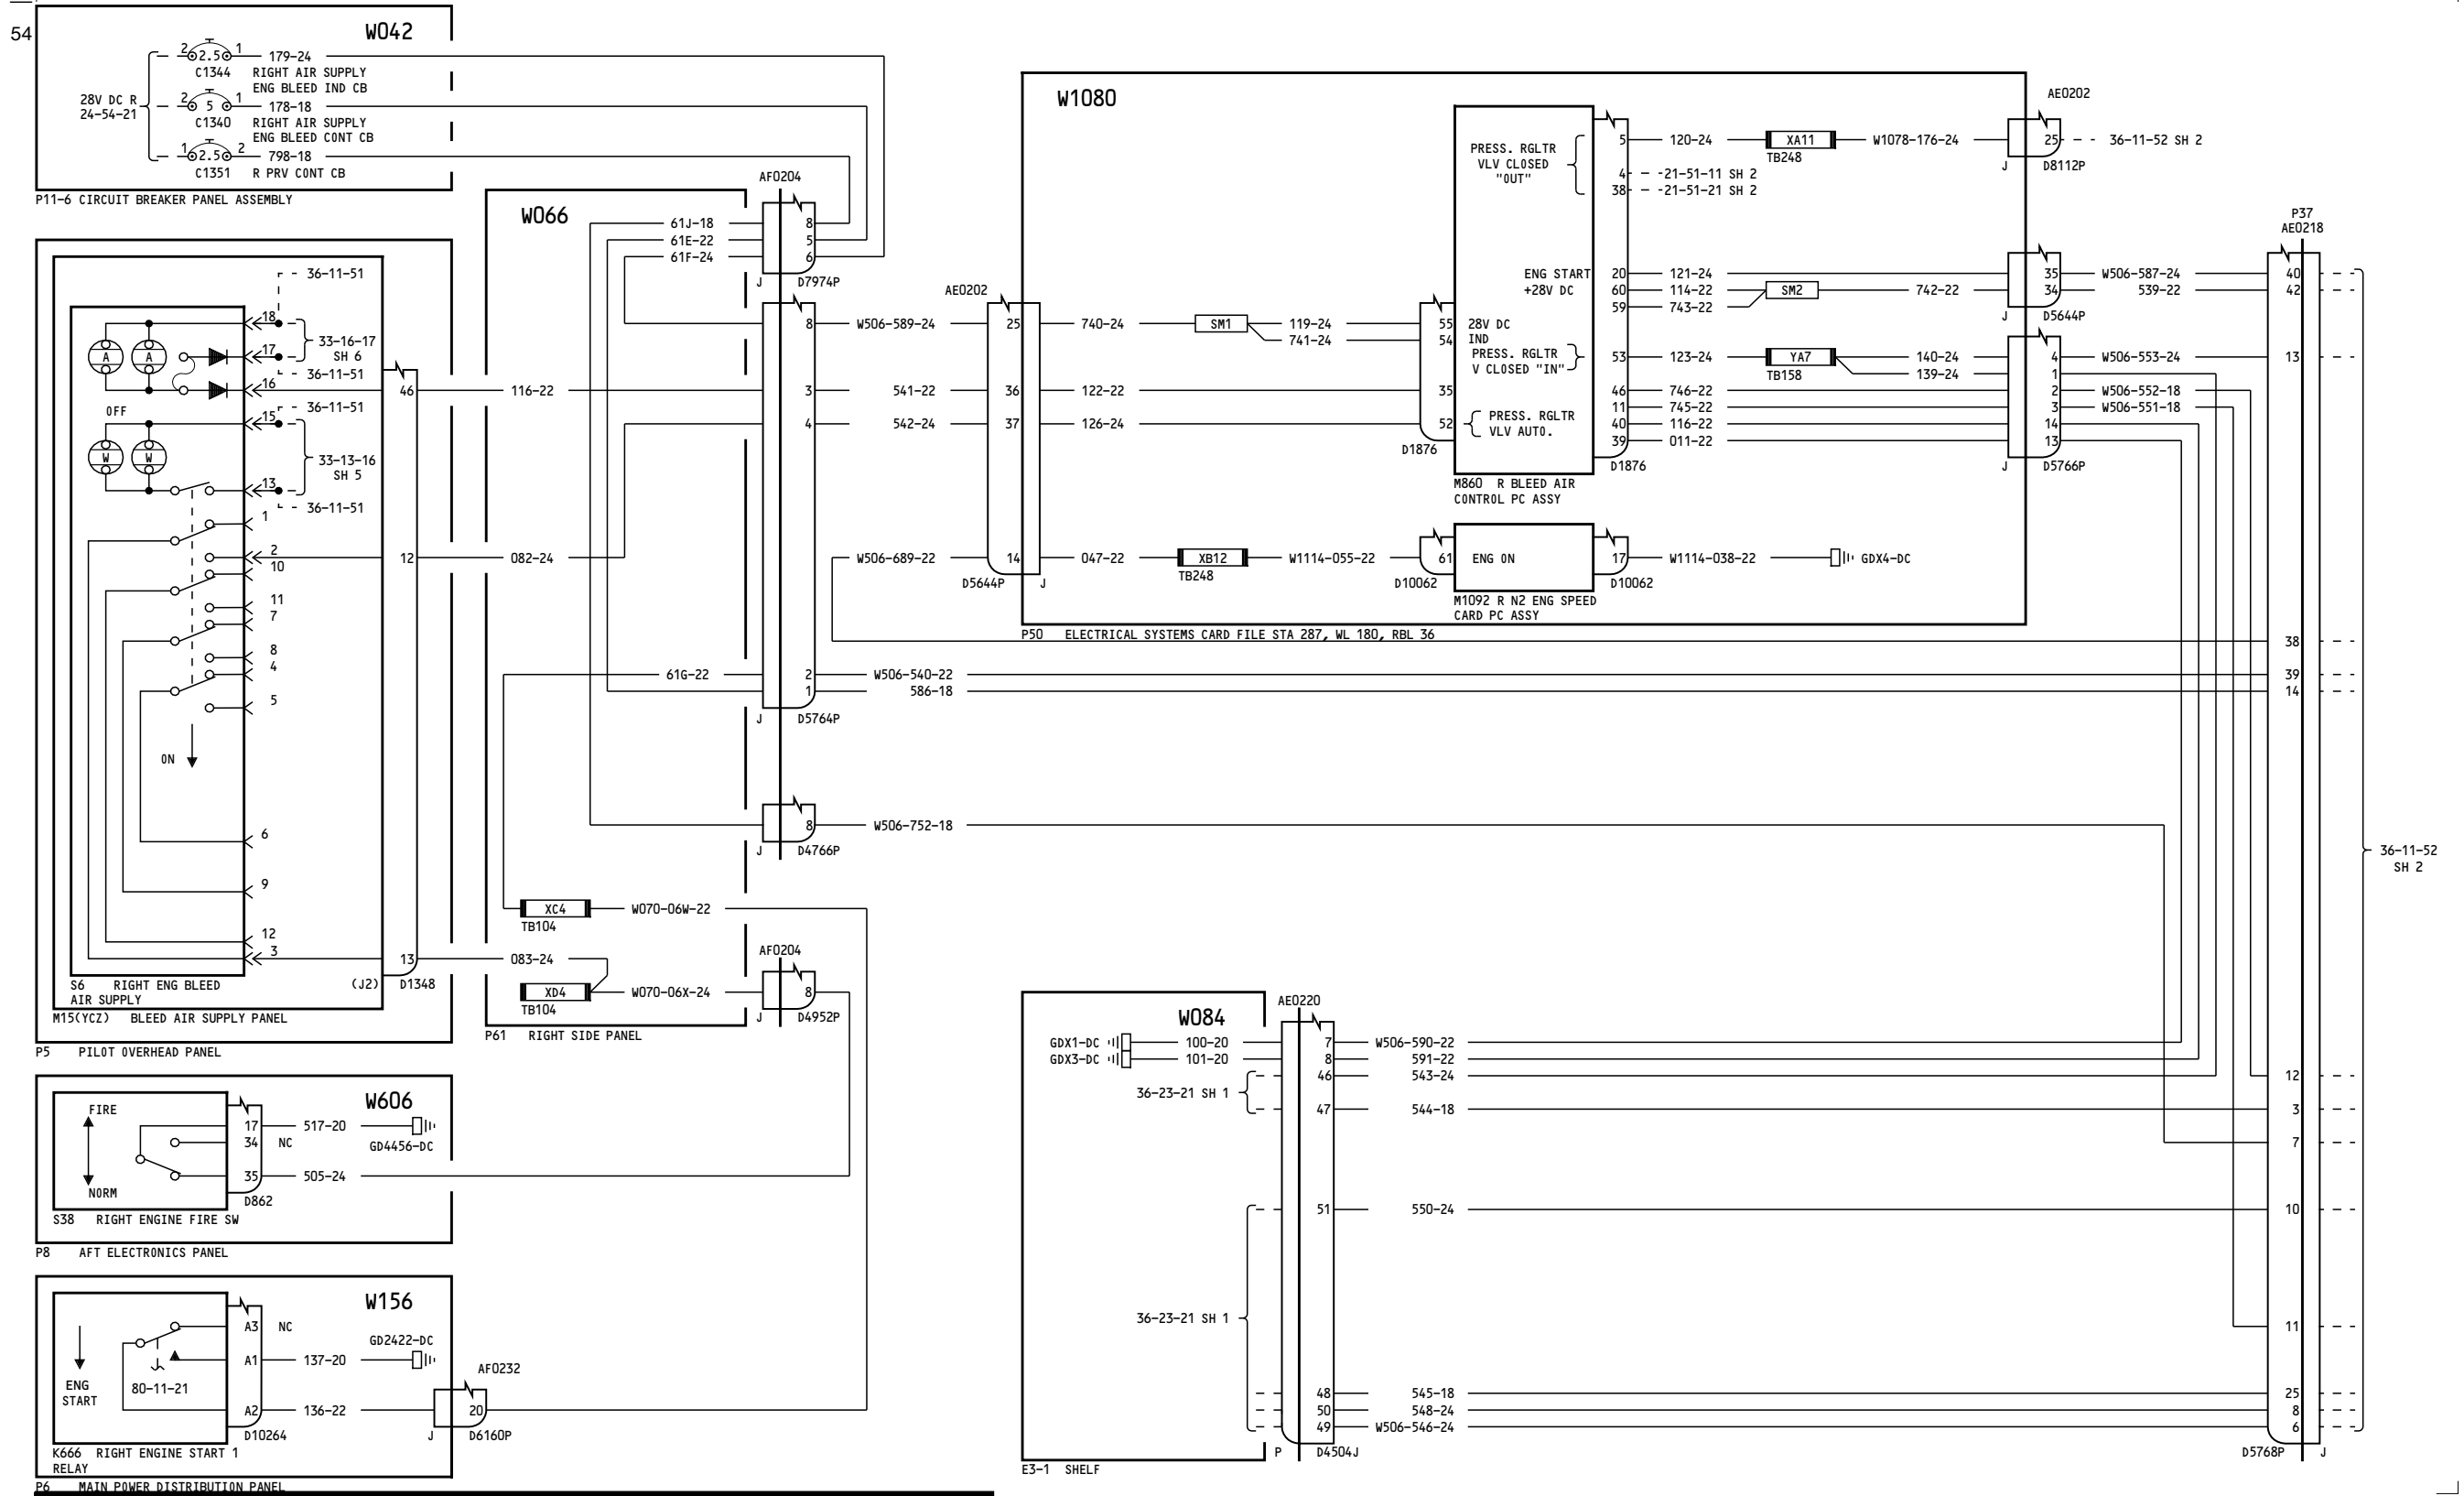

150-154

**AIR SUPPLY-  
RIGHT PRESSURE REGULATION  
& SHUTOFF**

D280T132

**36-11-52**


Page 2.1  
Sheet 1  
Jan 21/2005

Incorporates  
36-0027

**36-11-52**

Page 2.1  
Sheet 1  
Jan 21/2005



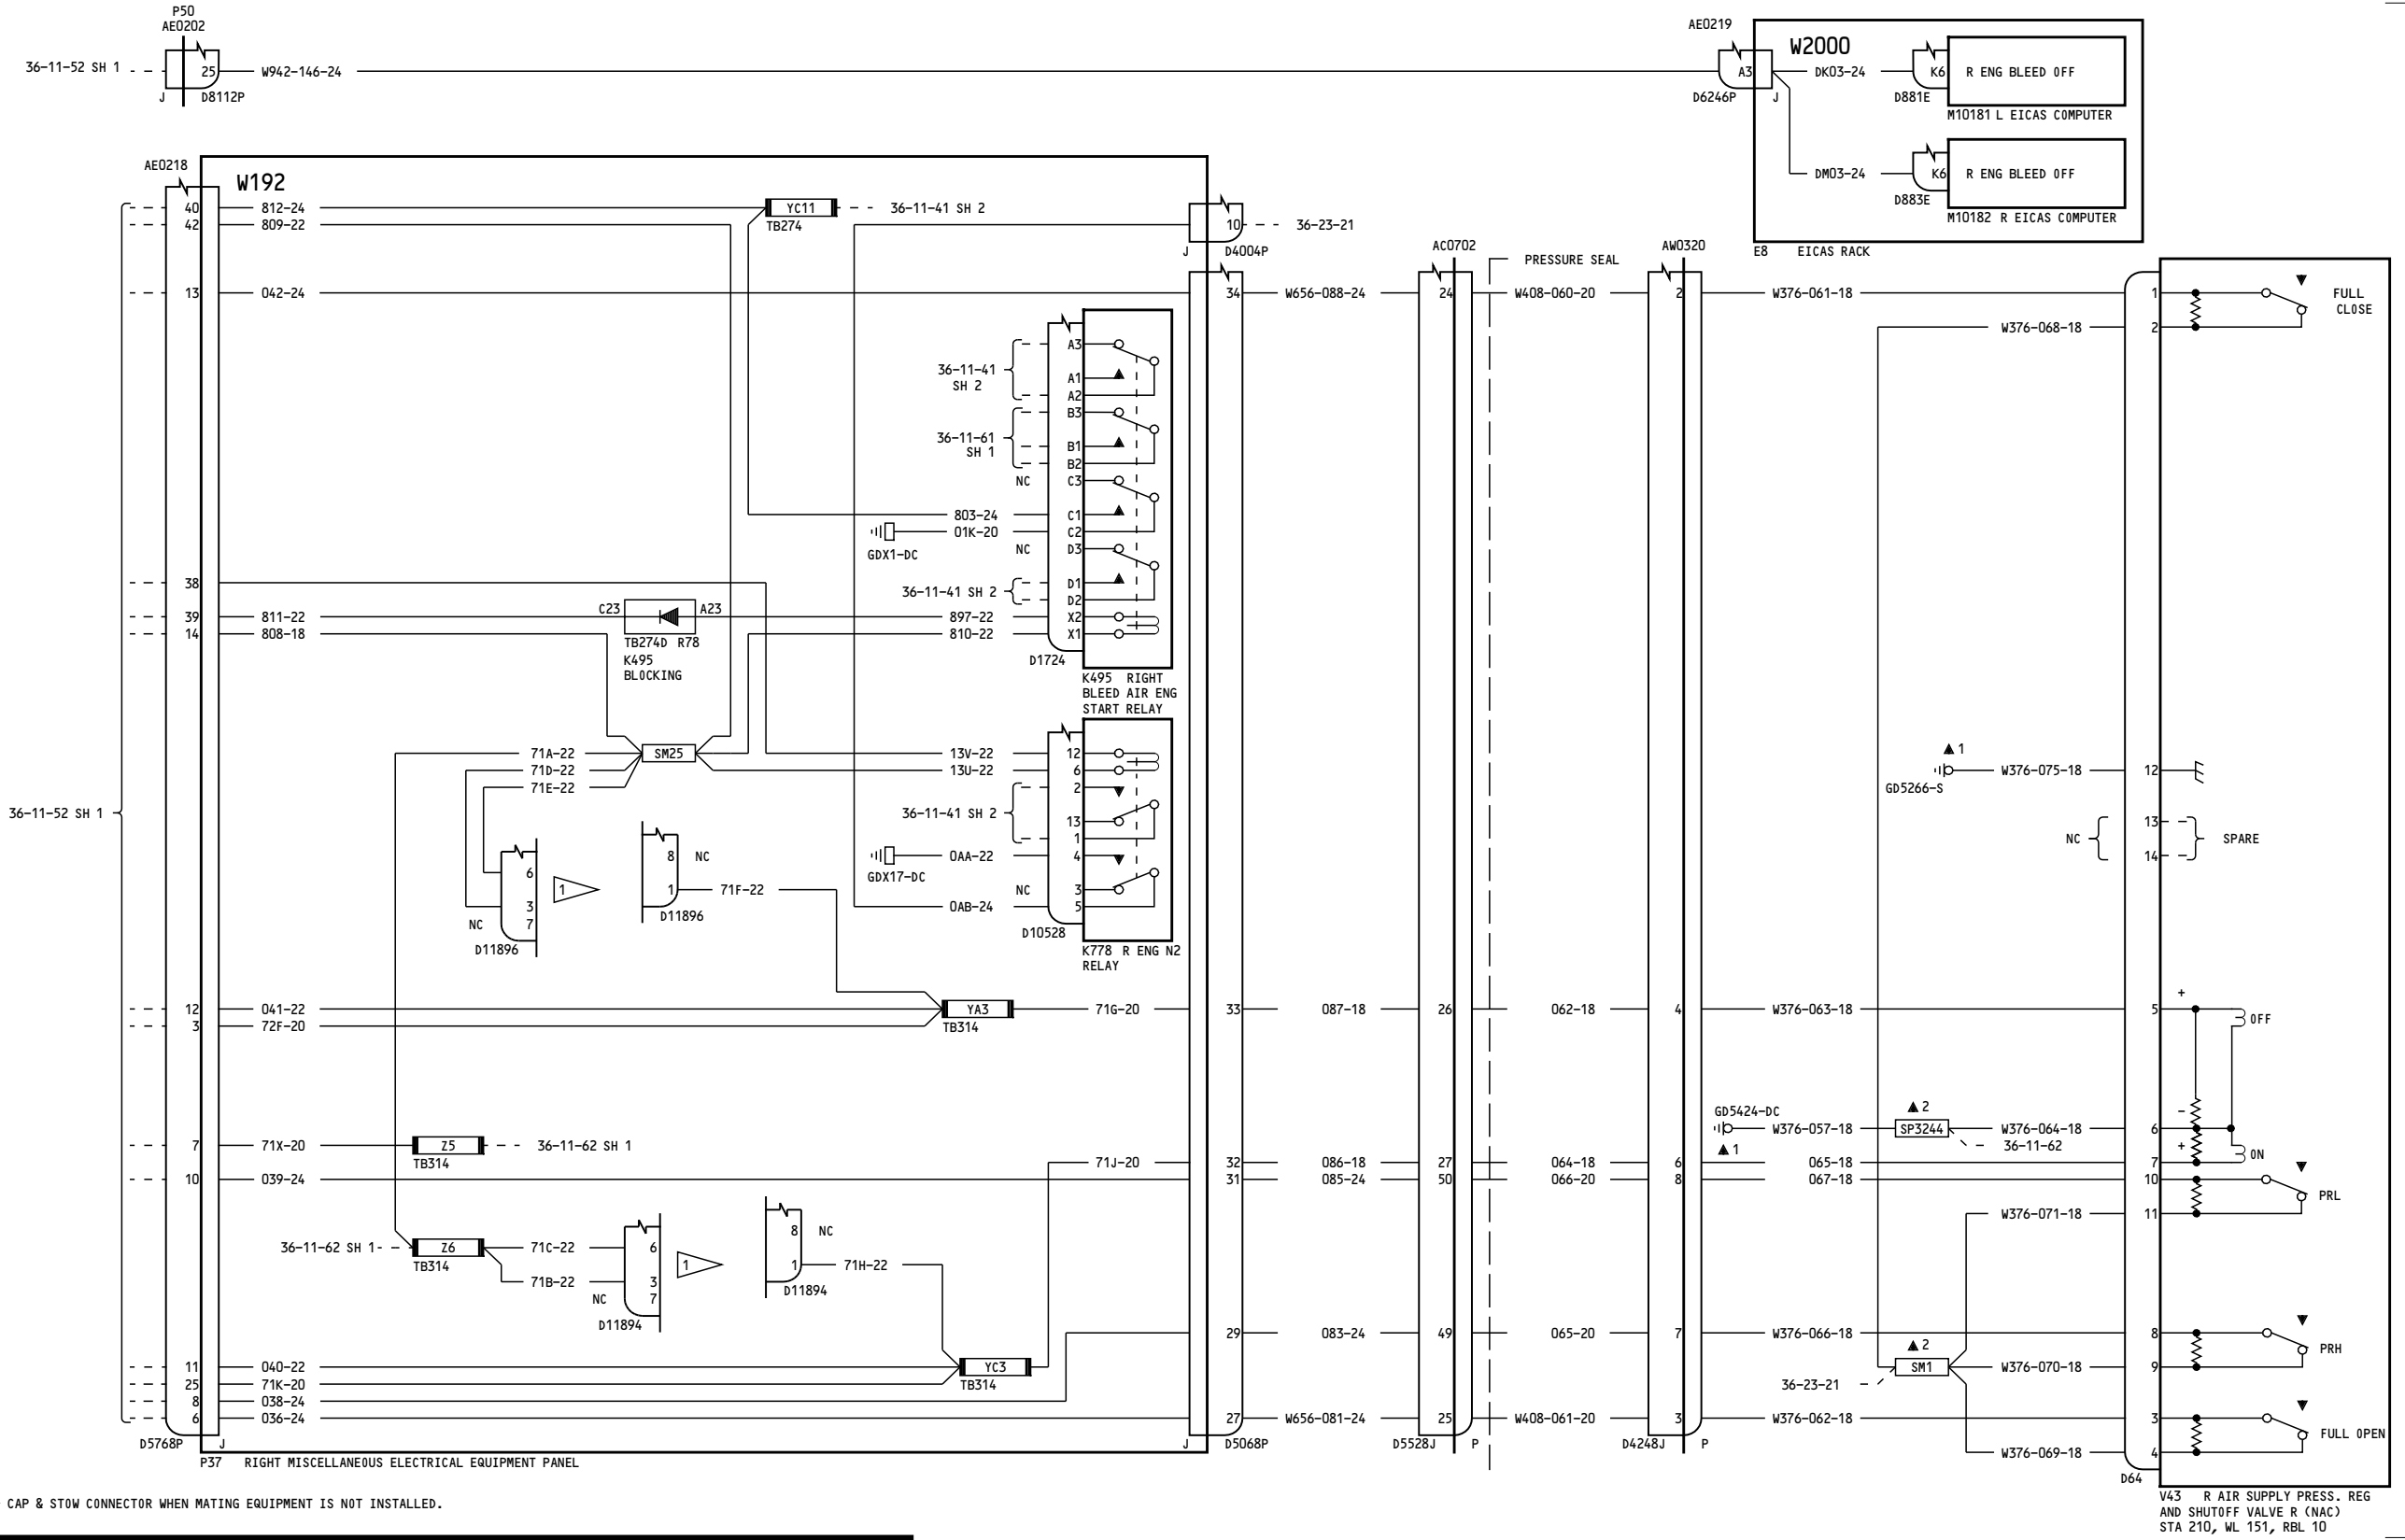

NOTES:  
1 CAP & STOW CONNECTOR WHEN MATING EQUIPMENT IS NOT INSTALLED.

150-154

**AIR SUPPLY-  
RIGHT PRESSURE REGULATION  
& SHUTOFF**

**36-11-52**


Page 2.1  
Sheet 2  
Jan 21/2005


D280T132

Incorporates  
36-0026 R02  
36-0027  
36-0029 R05

**36-11-52**

Page 2.1  
Sheet 2  
Jan 21/2005

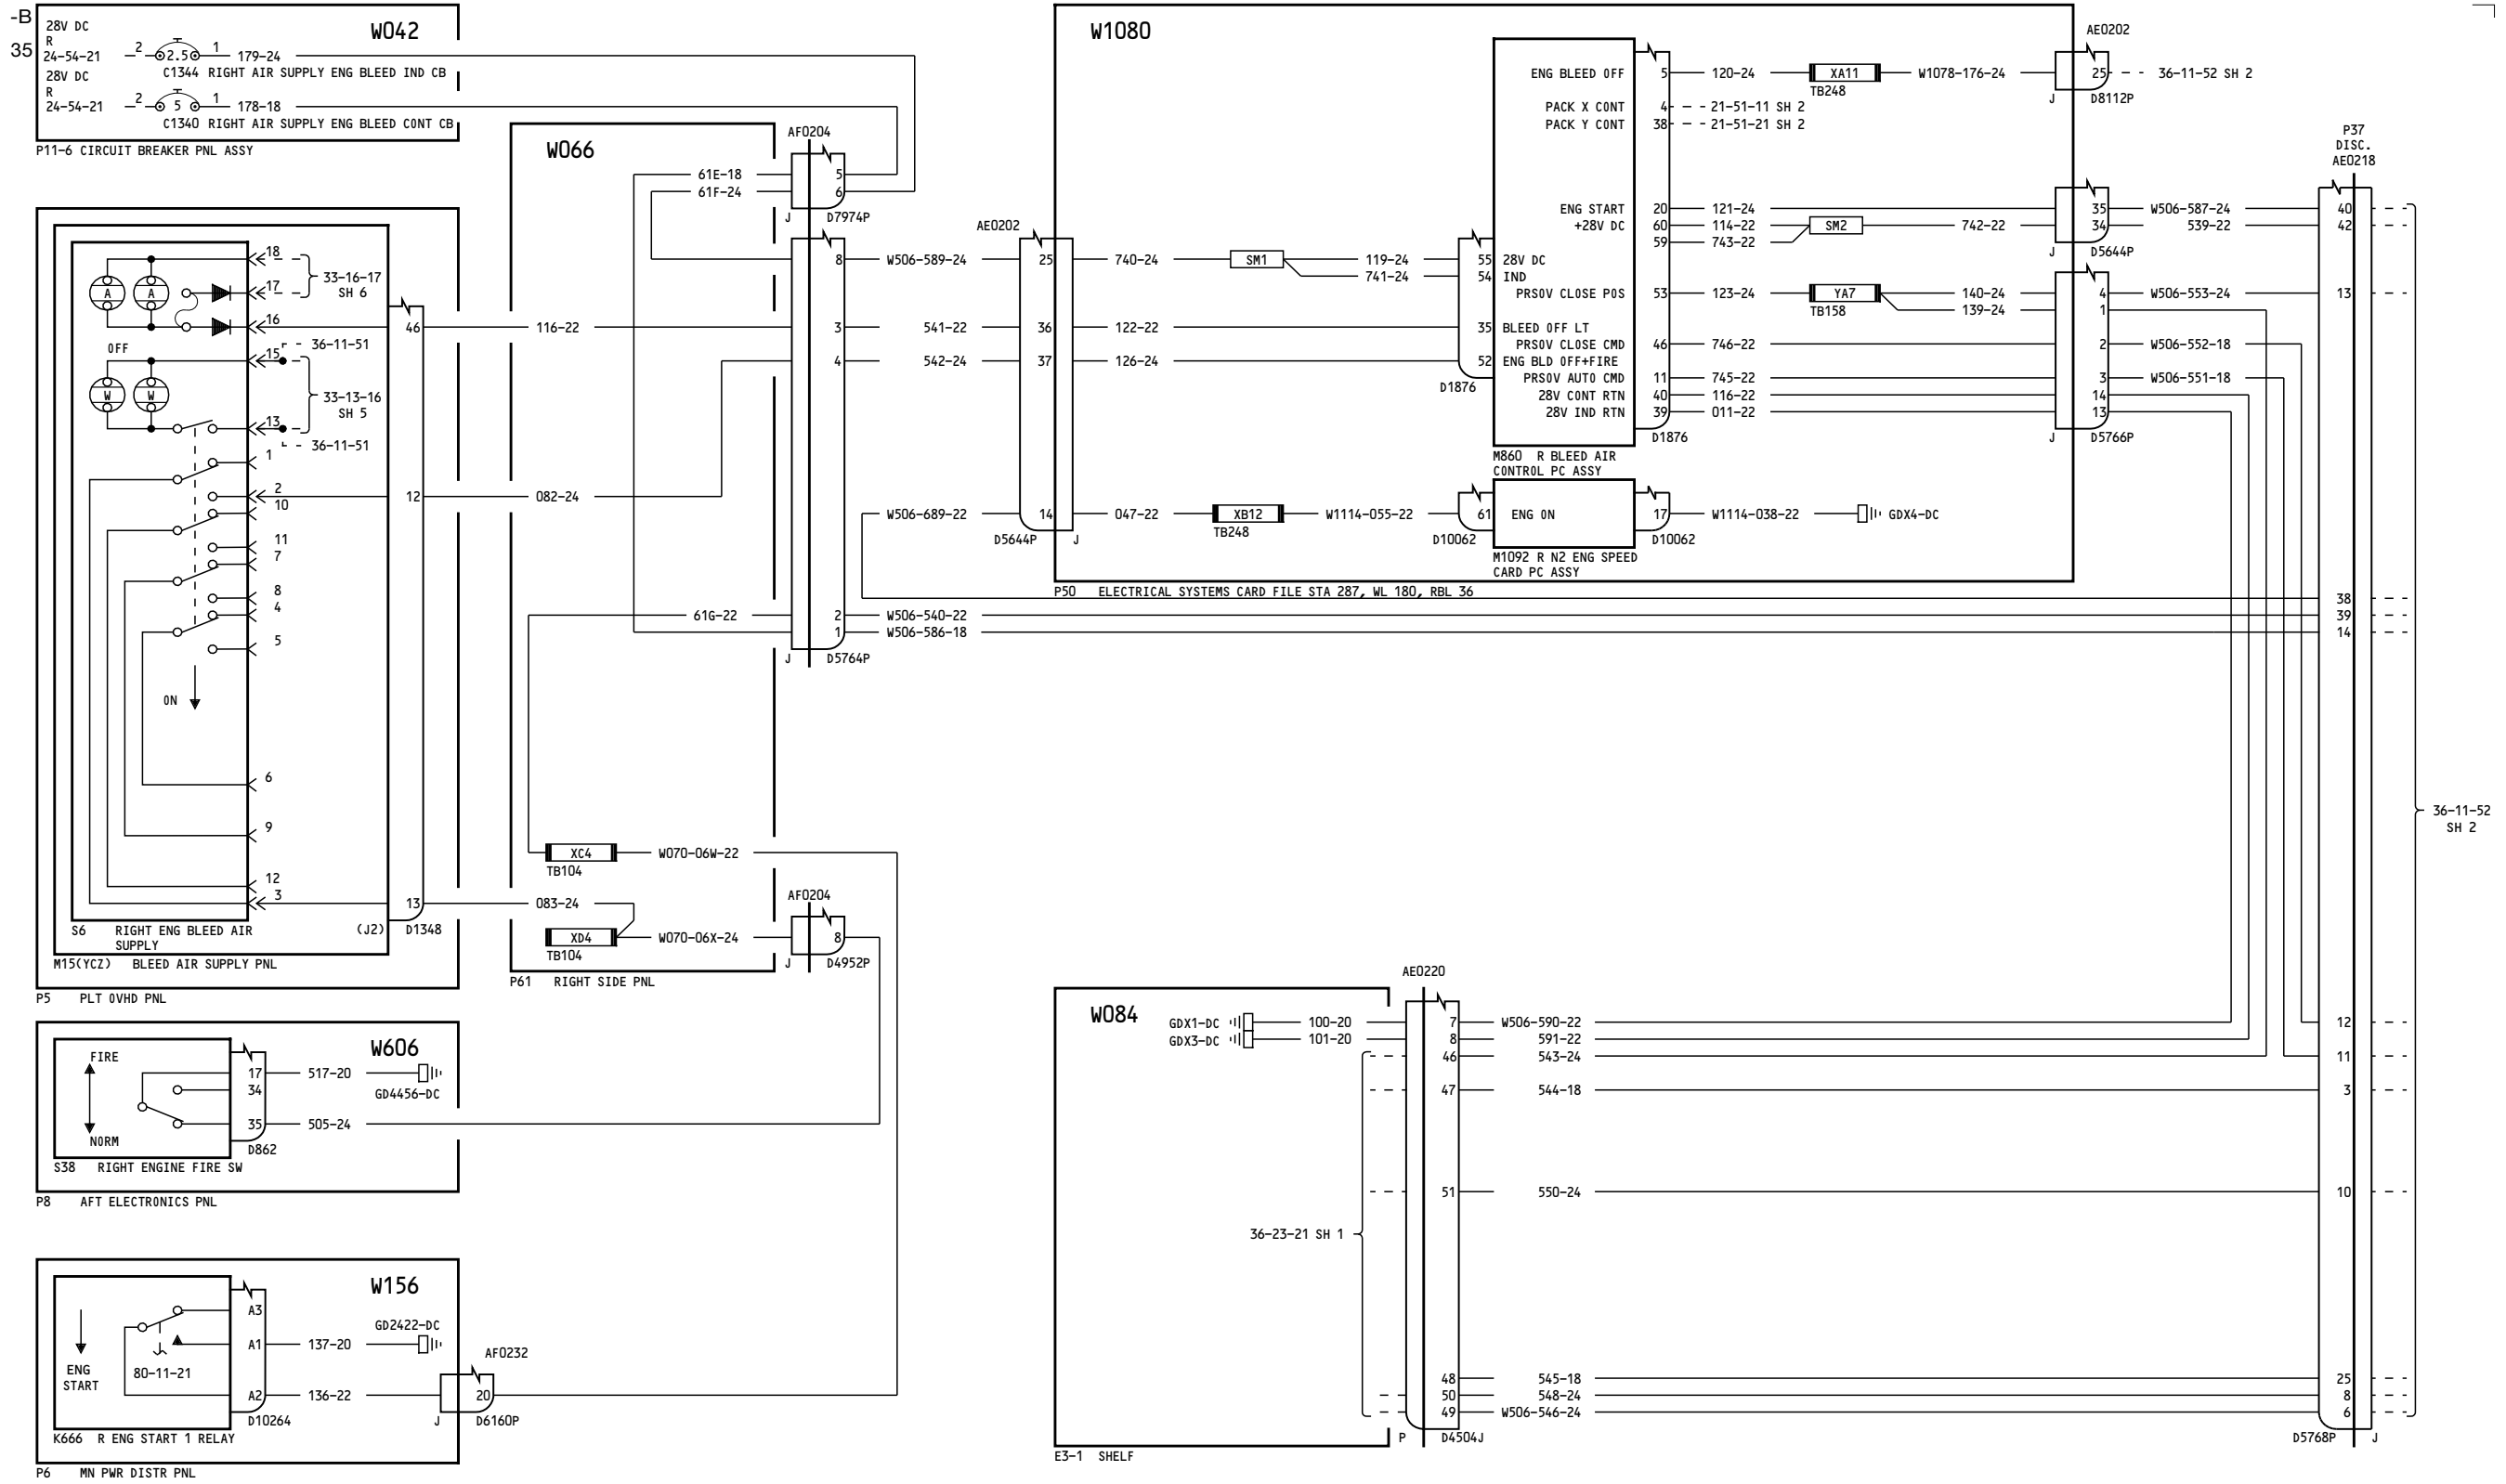

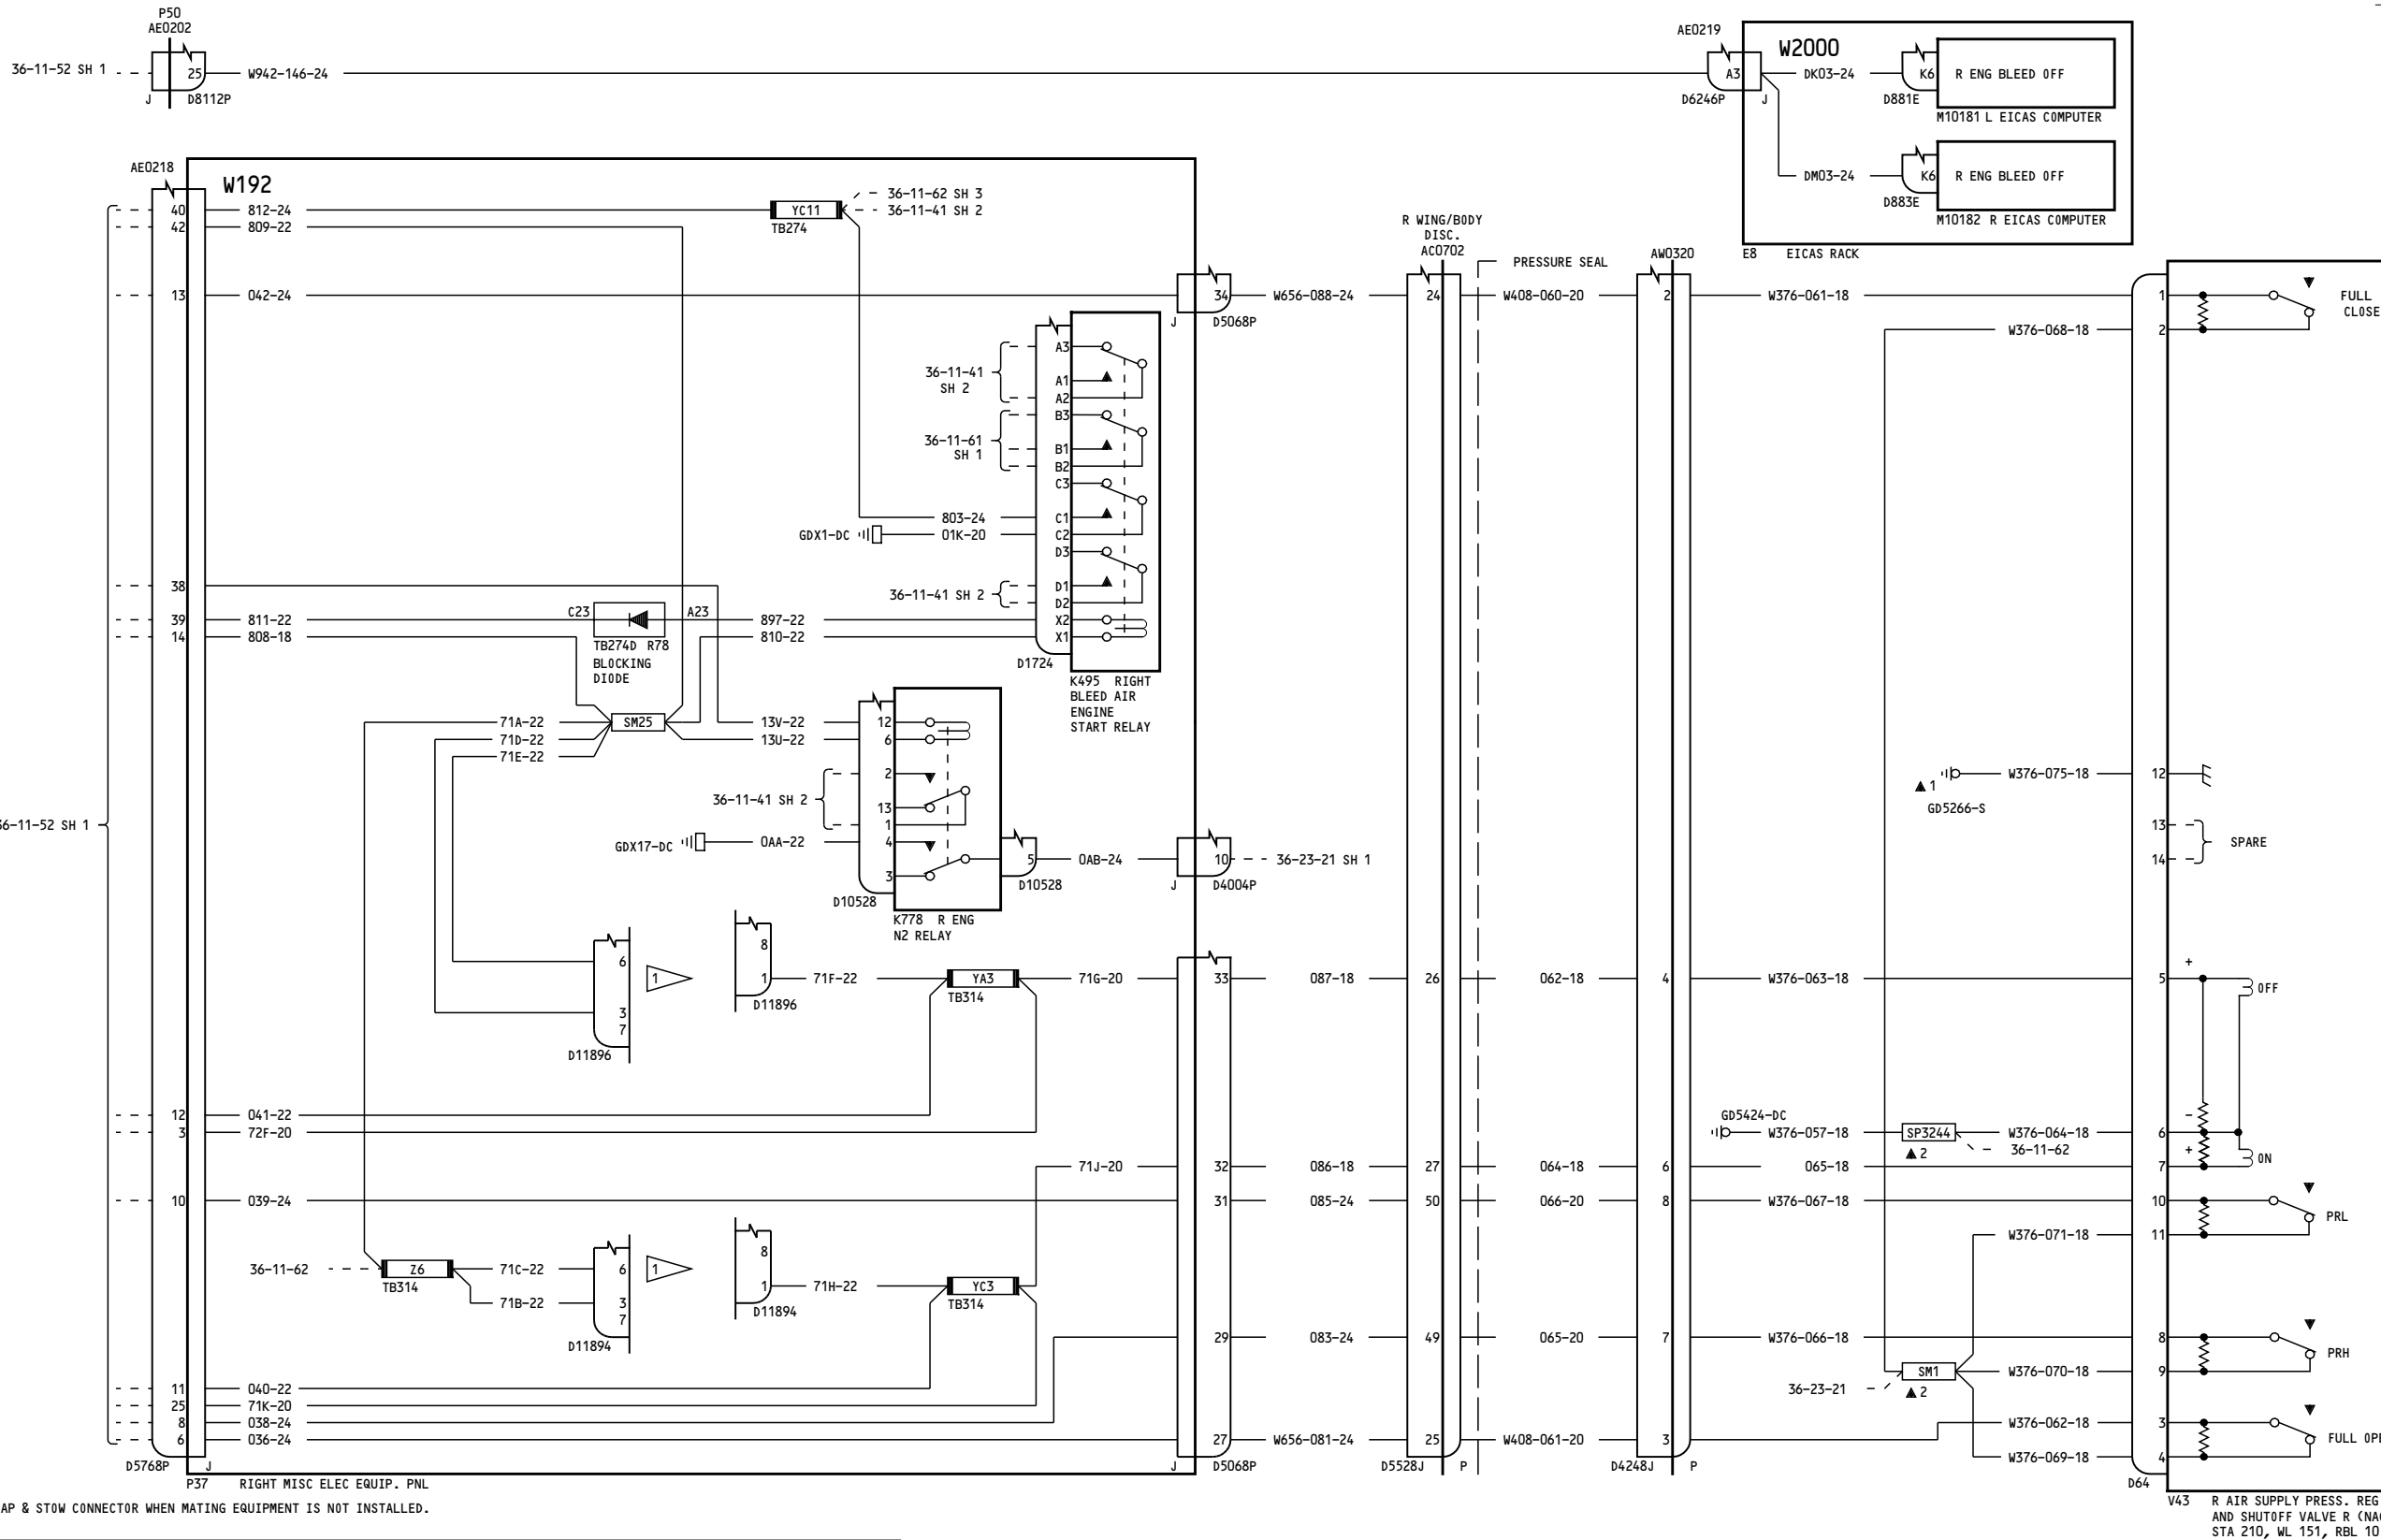

NOTES:  
 1 CAP & STOW CONNECTOR WHEN MATING EQUIPMENT IS NOT INSTALLED.

156, 166

**AIR SUPPLY-  
 RIGHT PRESSURE REGULATION  
 & SHUTOFF**

D280T132


**36-11-52**

Page 3.1  
 Sheet 2  
 Jan 21/2005

Incorporates  
 36-0026 R02

**36-11-52**

Page 3.1  
 Sheet 2  
 Jan 21/2005

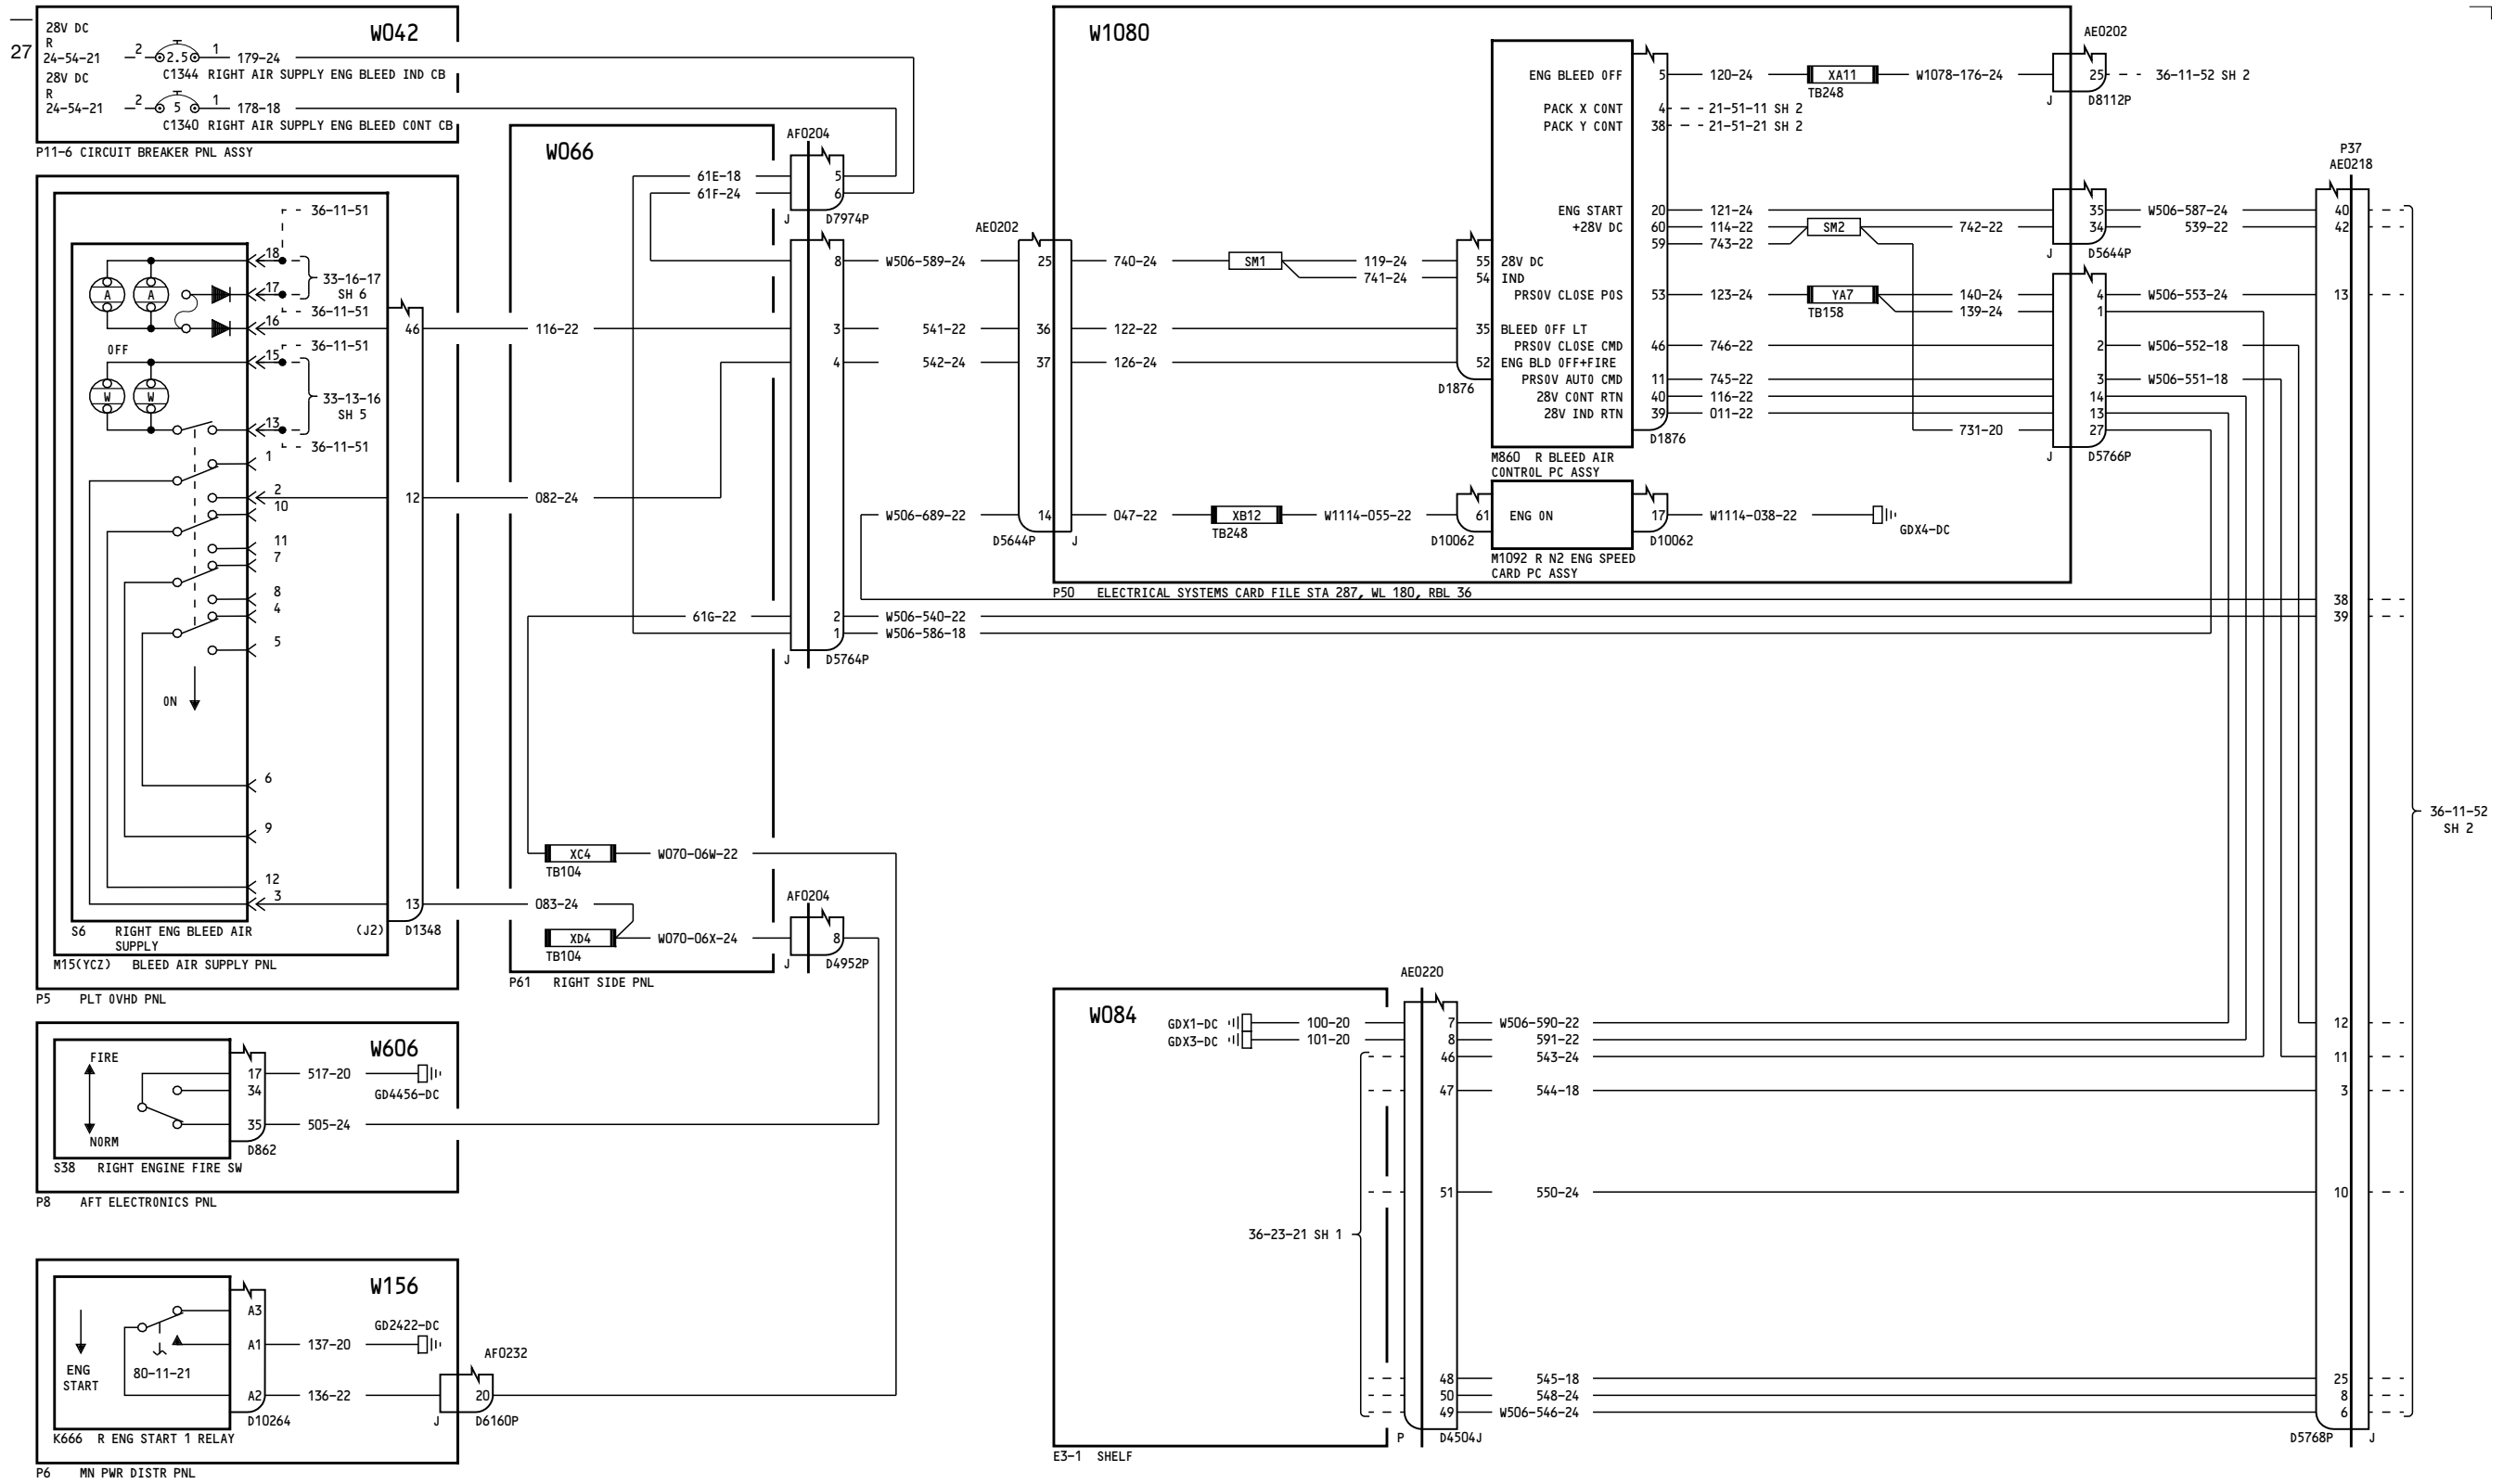

157, 167-199, 277-299

**AIR SUPPLY-  
RIGHT PRESSURE REGULATION  
& SHUTOFF**

D280T132


**36-11-52**

Page 4  
Sheet 1  
Jan 21/2005

**36-11-52**

Page 4  
Sheet 1  
Jan 21/2005

-A  
27

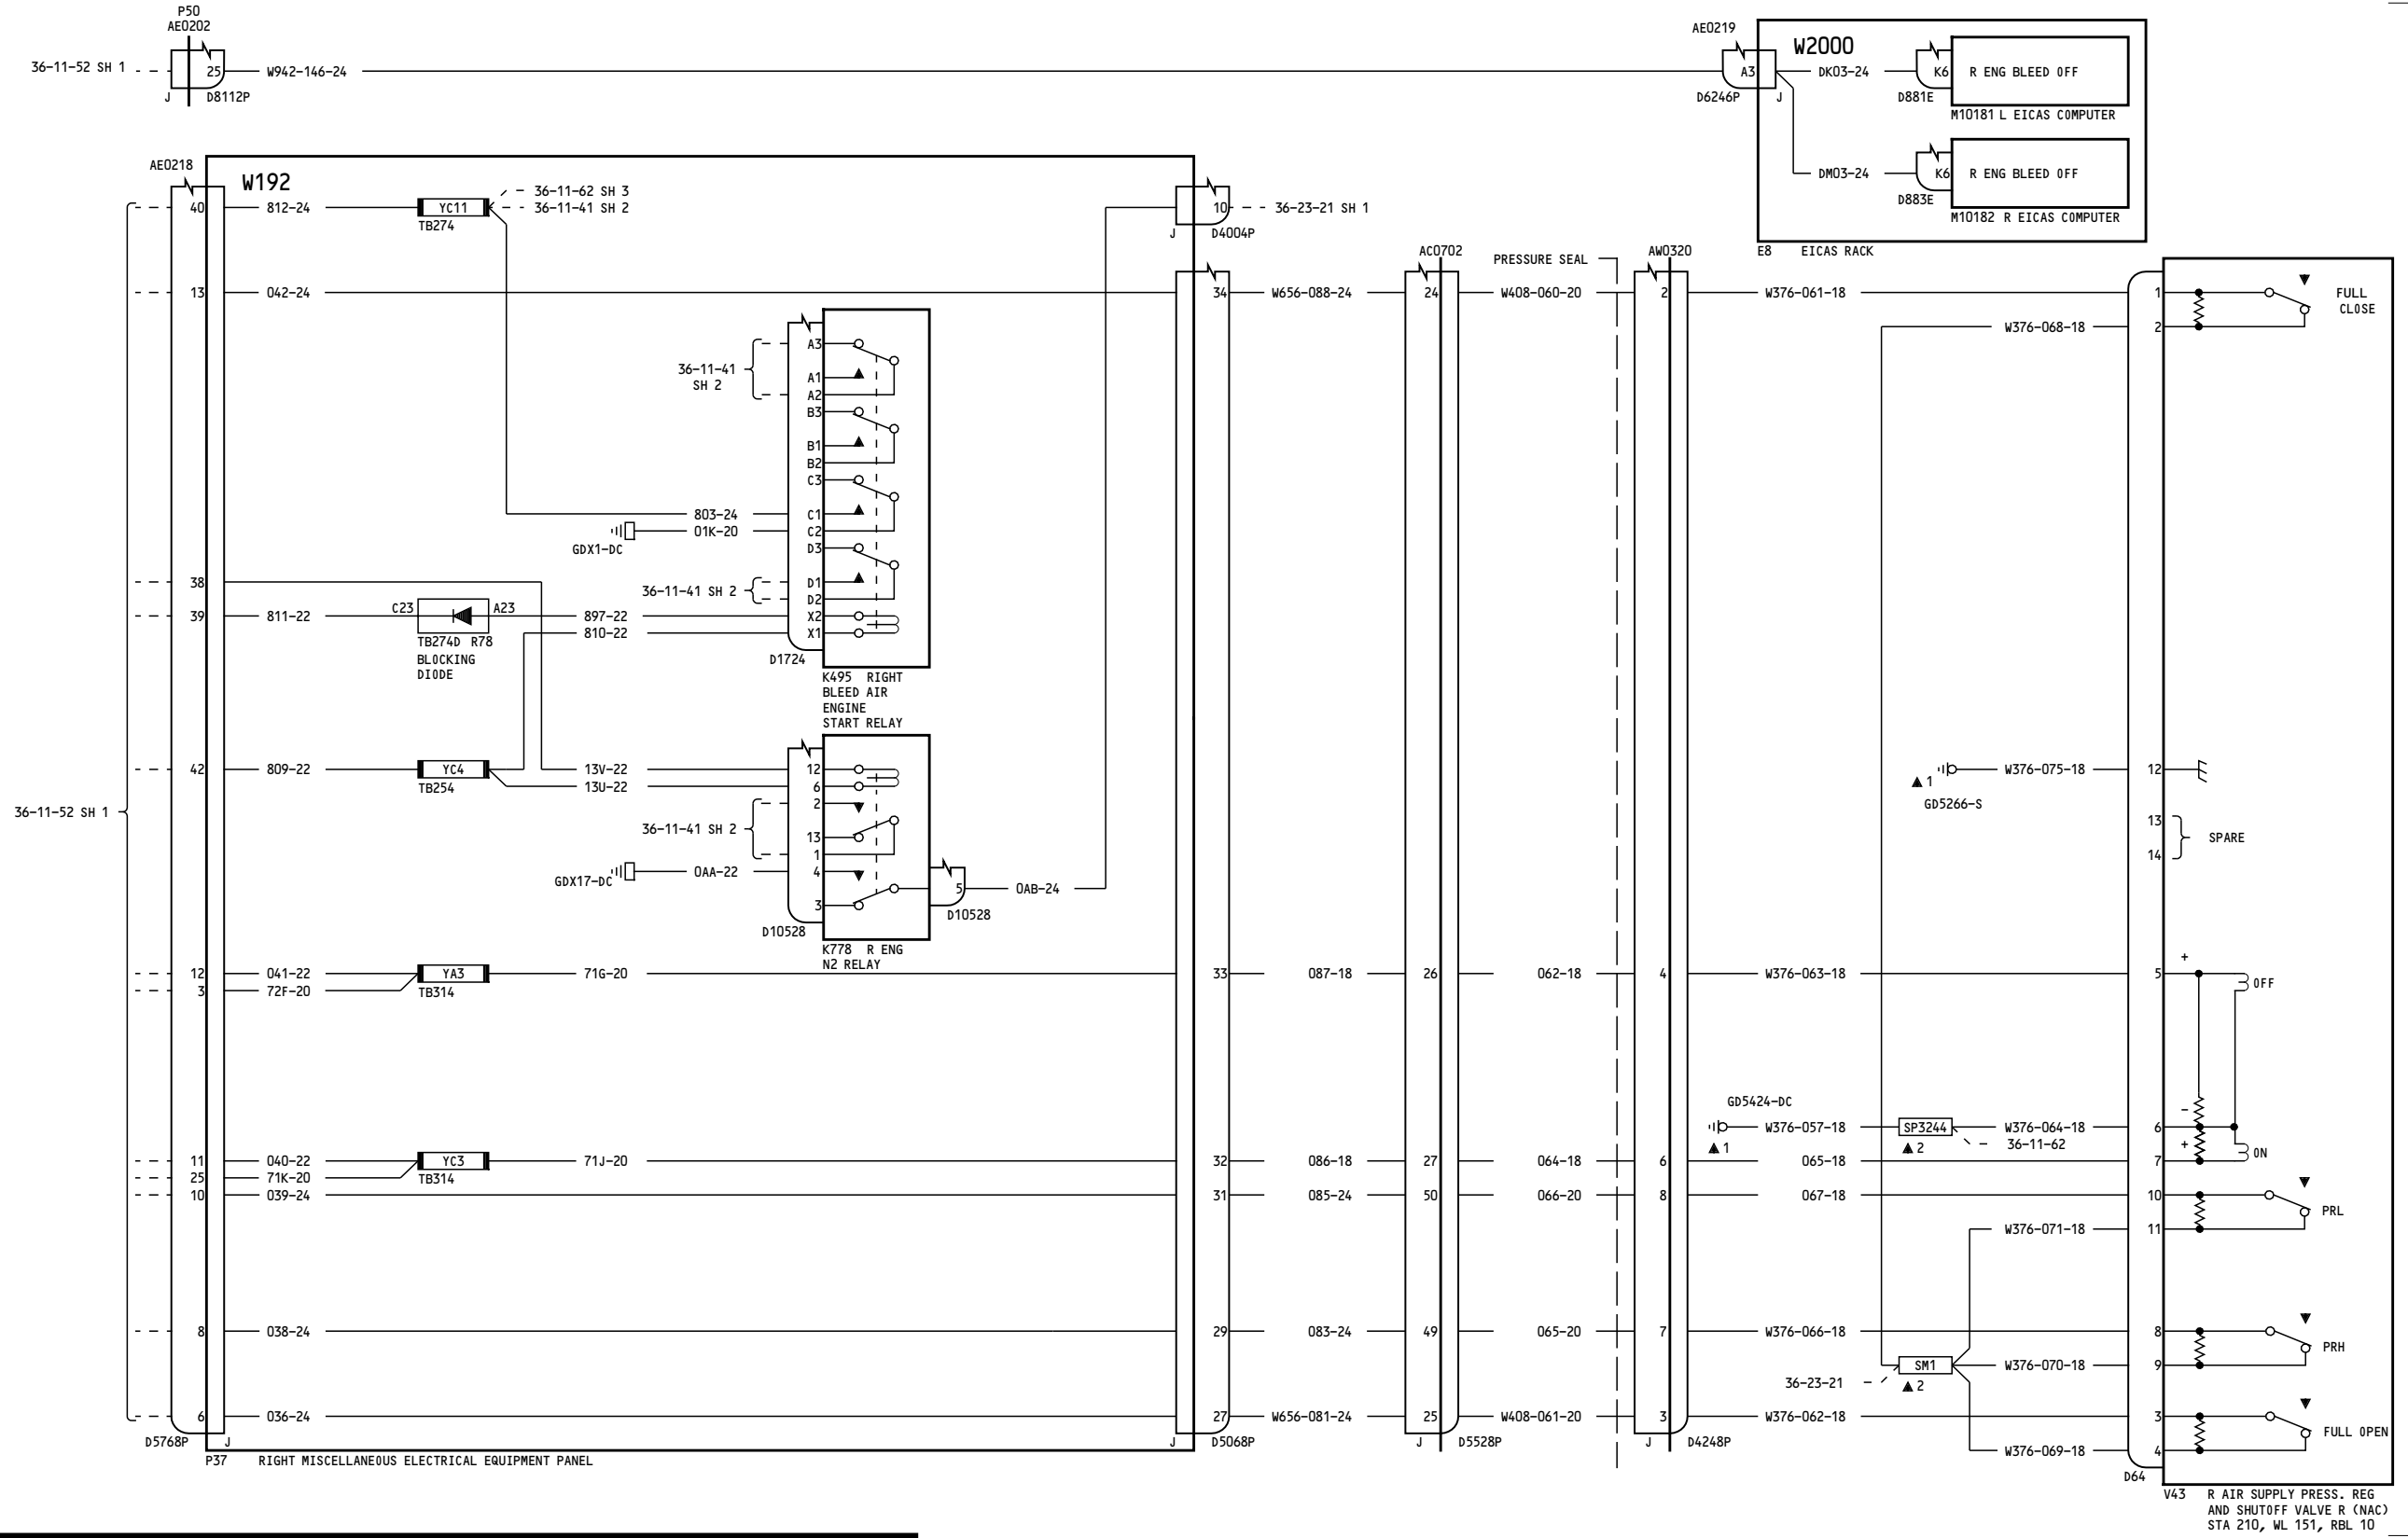

157, 167-199, 277-299

**AIR SUPPLY-  
RIGHT PRESSURE REGULATION  
& SHUTOFF**


D280T132

**36-11-52**


Page 4  
Sheet 2  
Jan 21/2005

**36-11-52**

Page 4  
Sheet 2  
Jan 21/2005

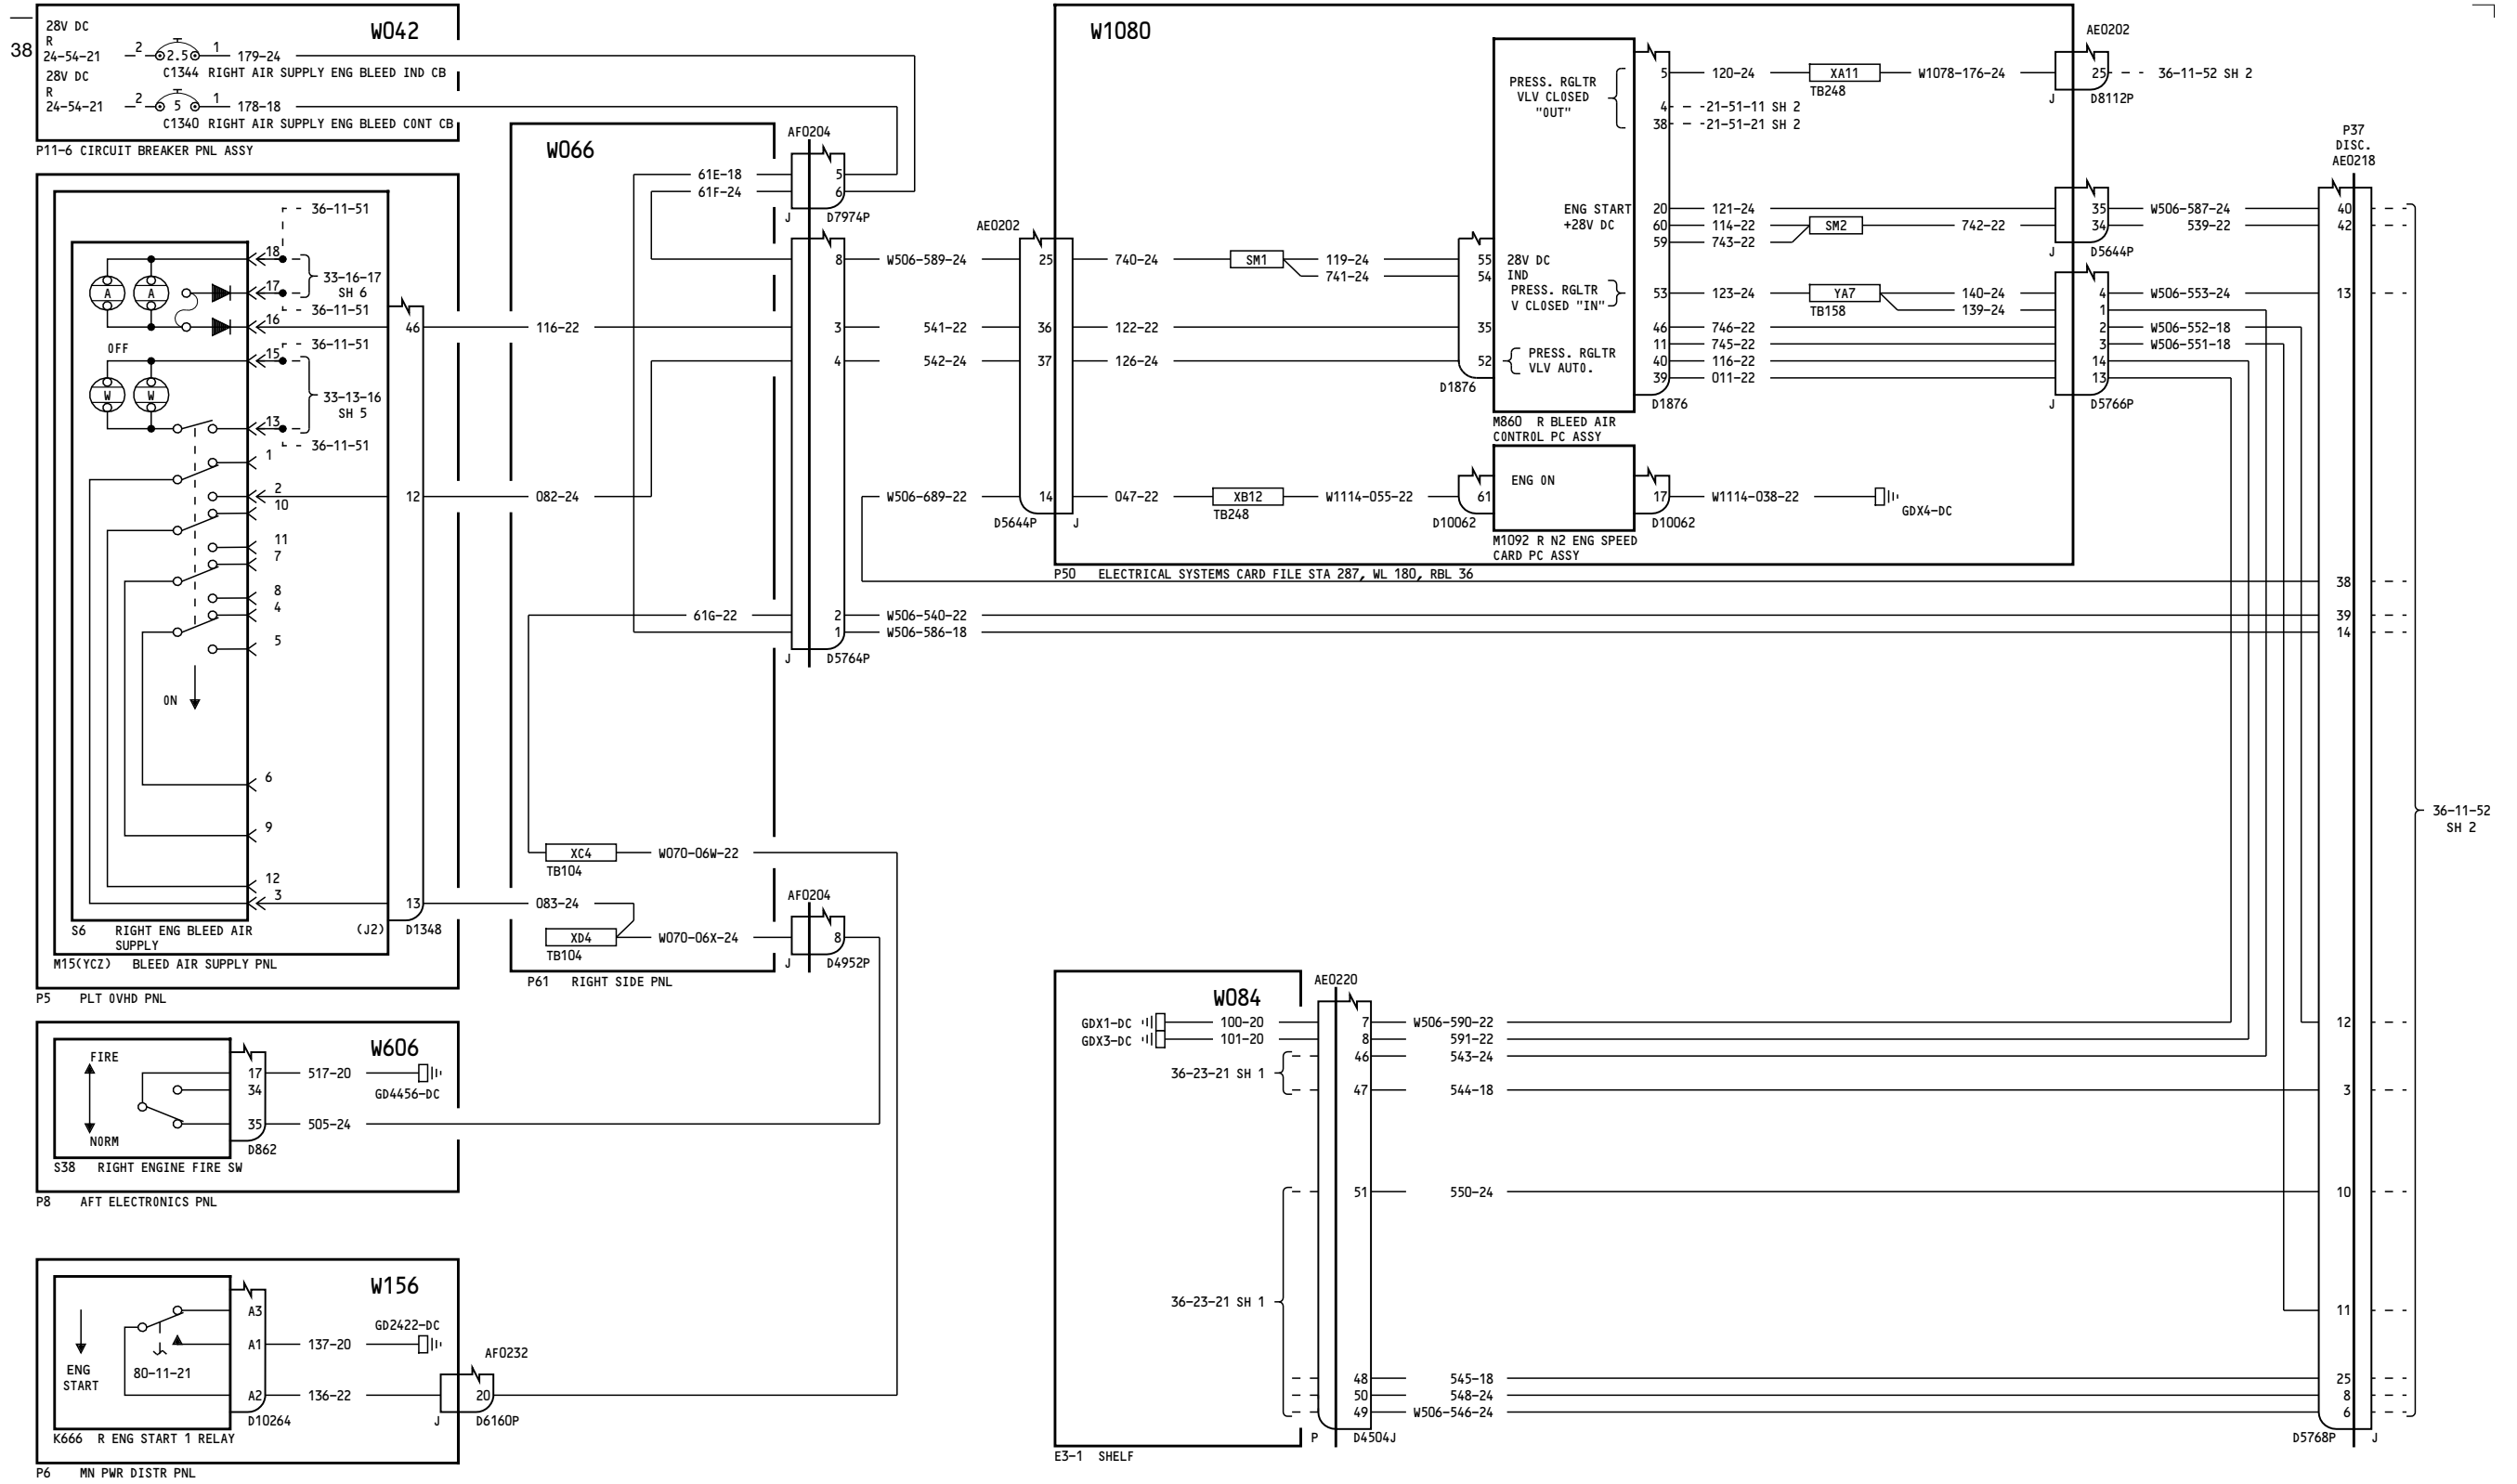

-D  
38

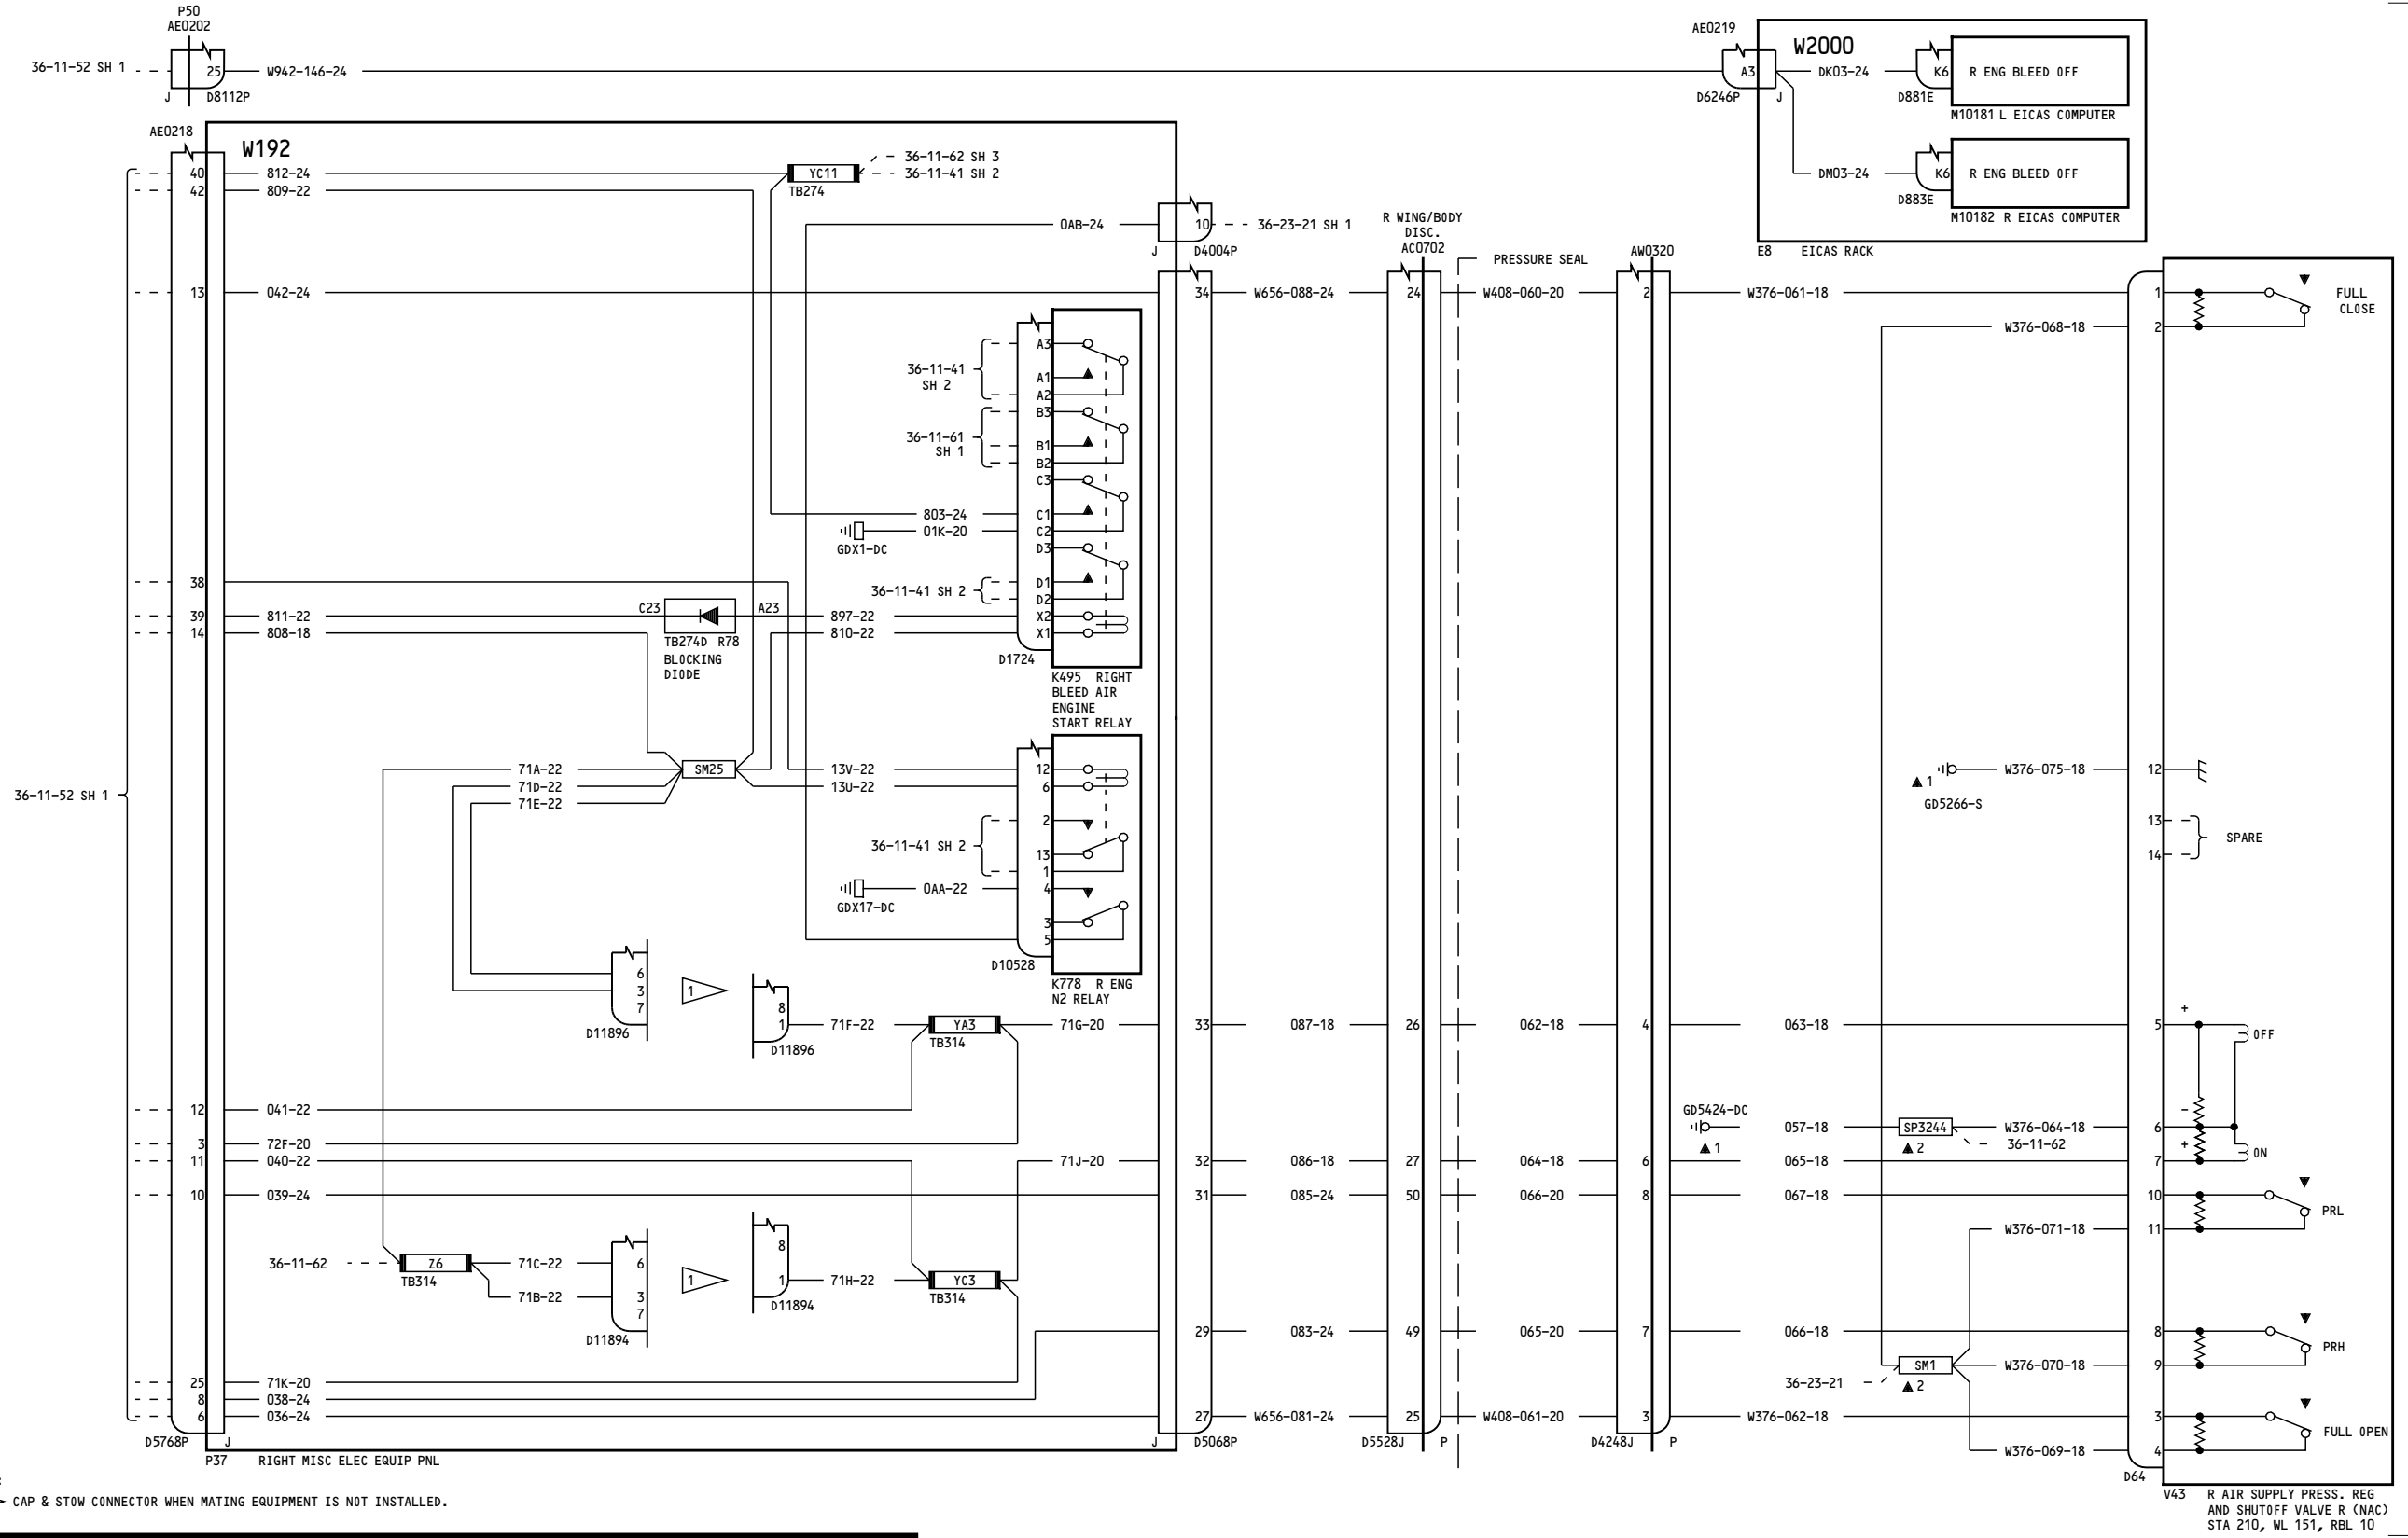

NOTES:  
 1 CAP & STOW CONNECTOR WHEN MATING EQUIPMENT IS NOT INSTALLED.

162

**AIR SUPPLY-  
RIGHT PRESSURE REGULATION  
& SHUTOFF**

D280T132


**36-11-52**

Page 5.1  
Sheet 2  
Jan 21/2005

Incorporates  
 36-0026 R02

**36-11-52**

Page 5.1  
Sheet 2  
Jan 21/2005

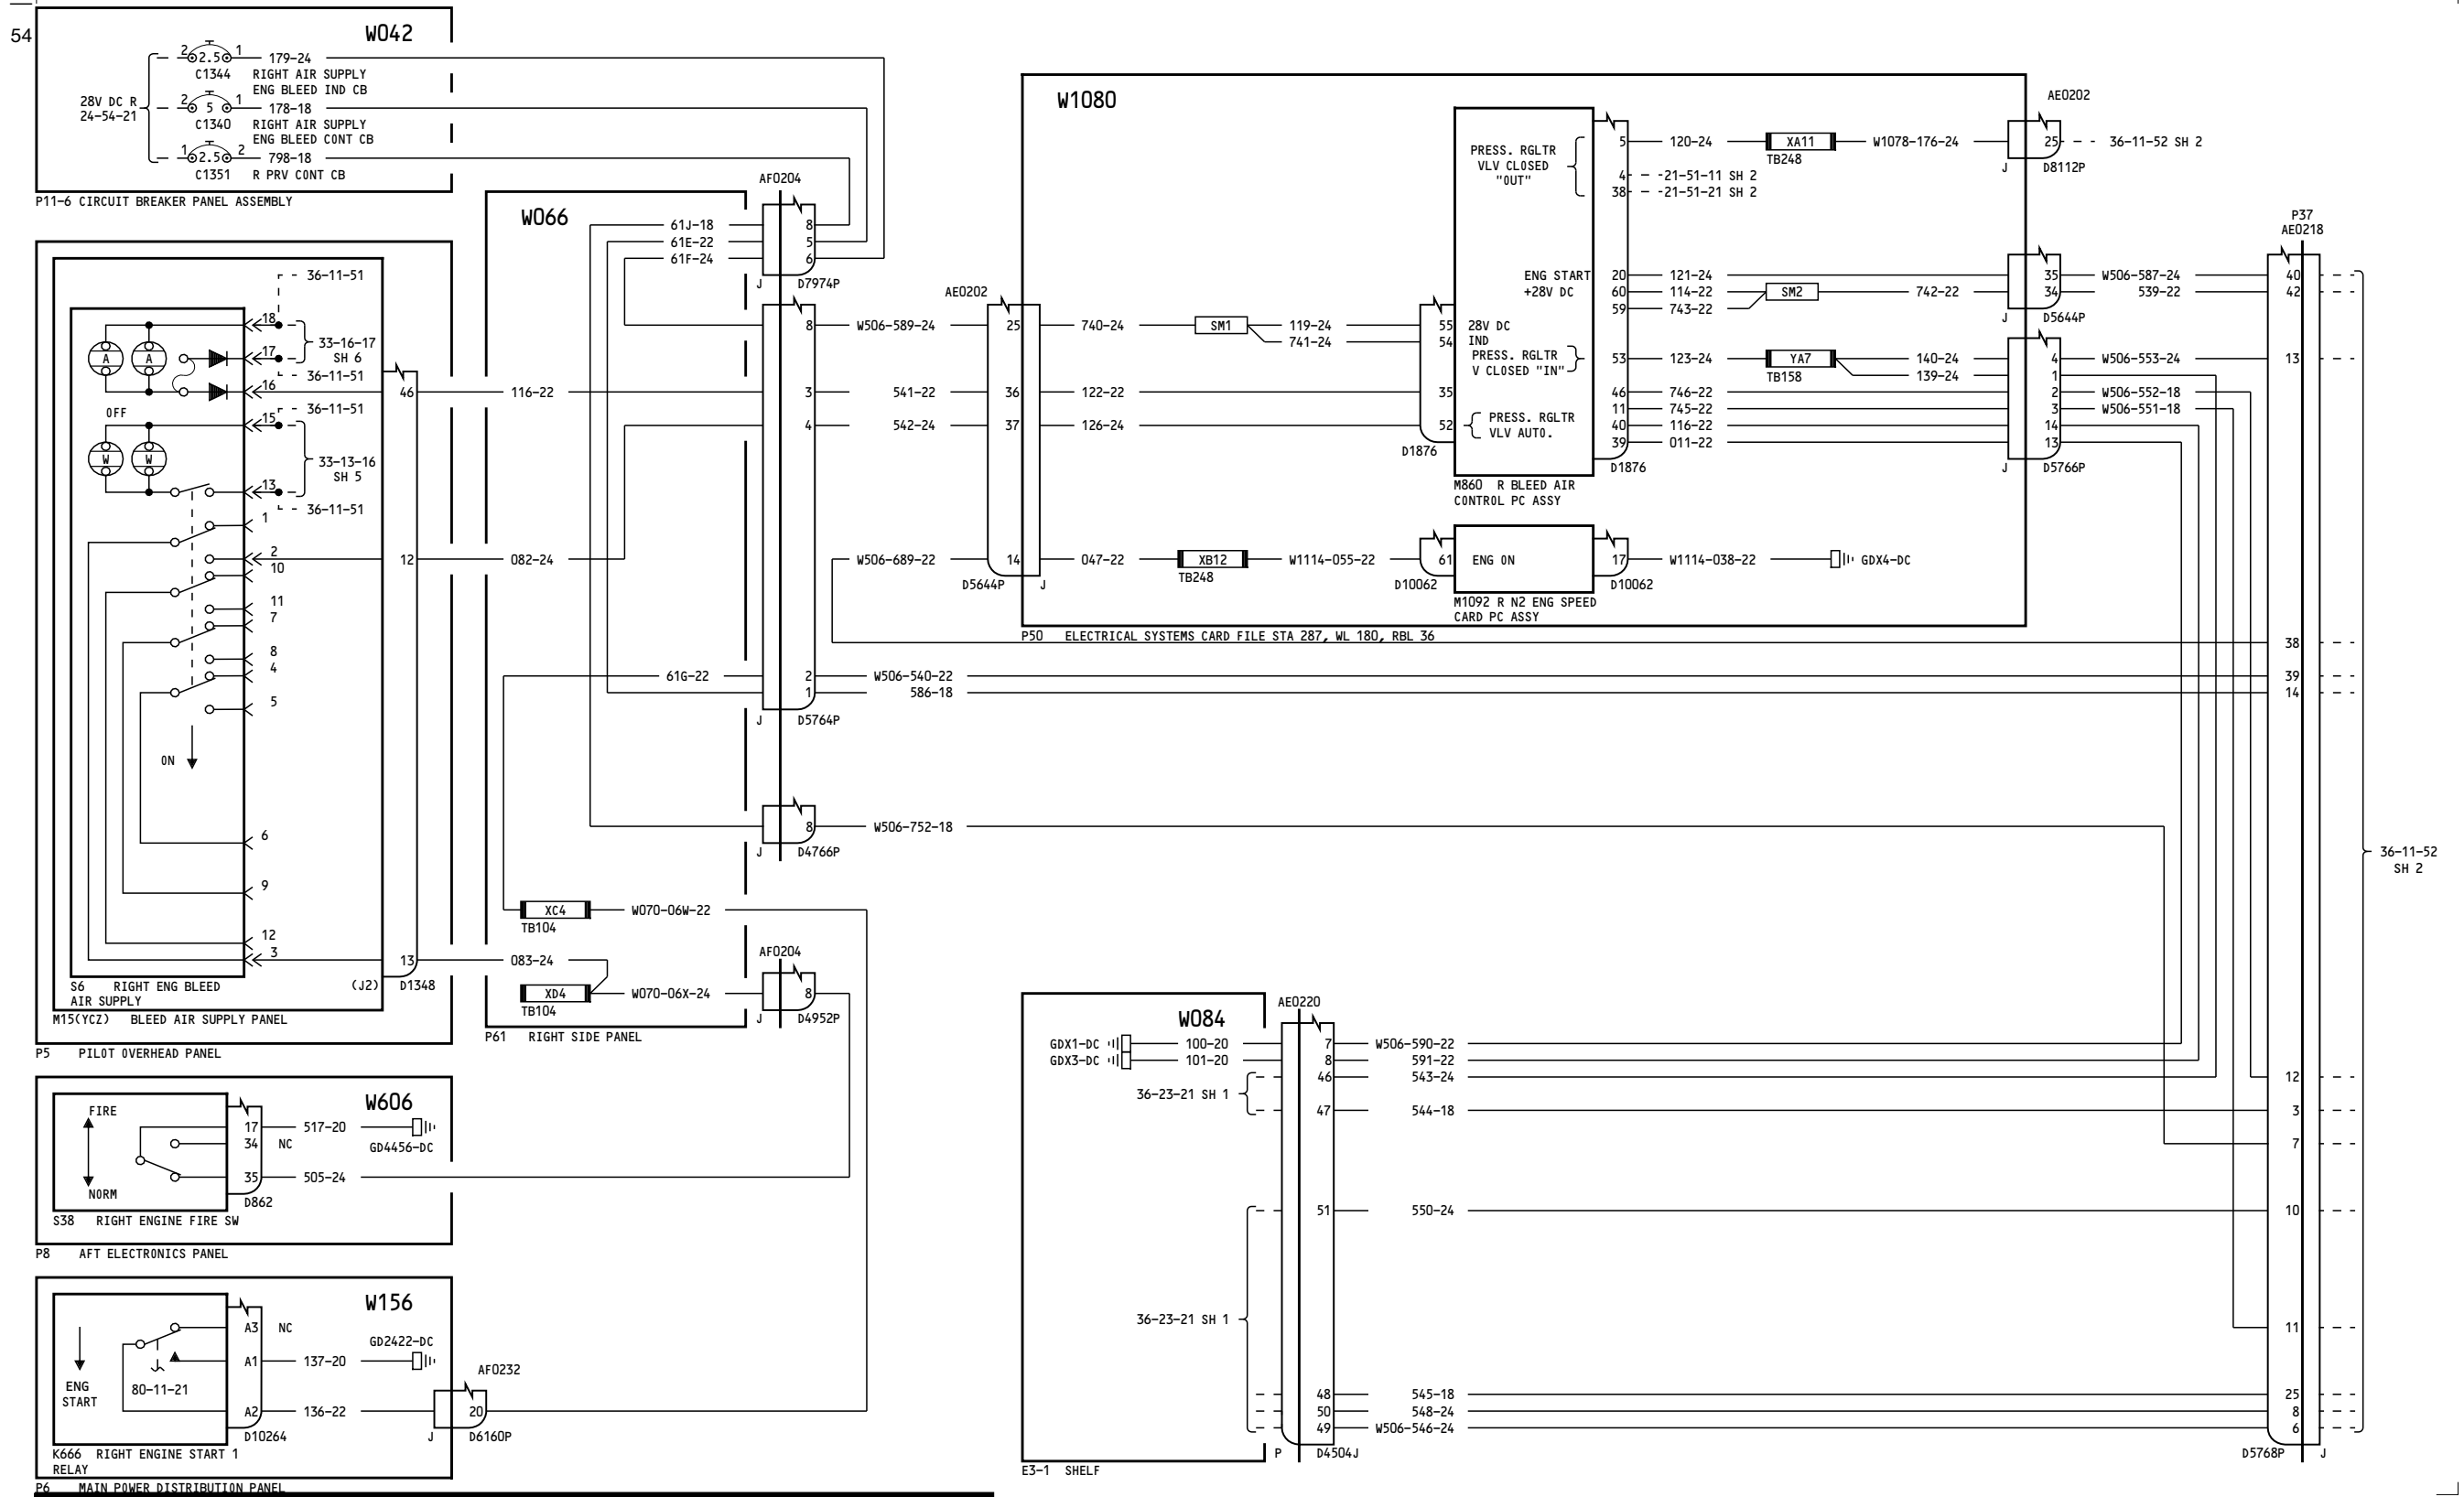

**AIR SUPPLY-  
RIGHT PRESSURE REGULATION  
& SHUTOFF**

D280T132

**36-11-52**

Page 6.1  
Sheet 1  
Jan 21/2005




Incorporates  
36-0027

**36-11-52**

Page 6.1  
Sheet 1  
Jan 21/2005



 50

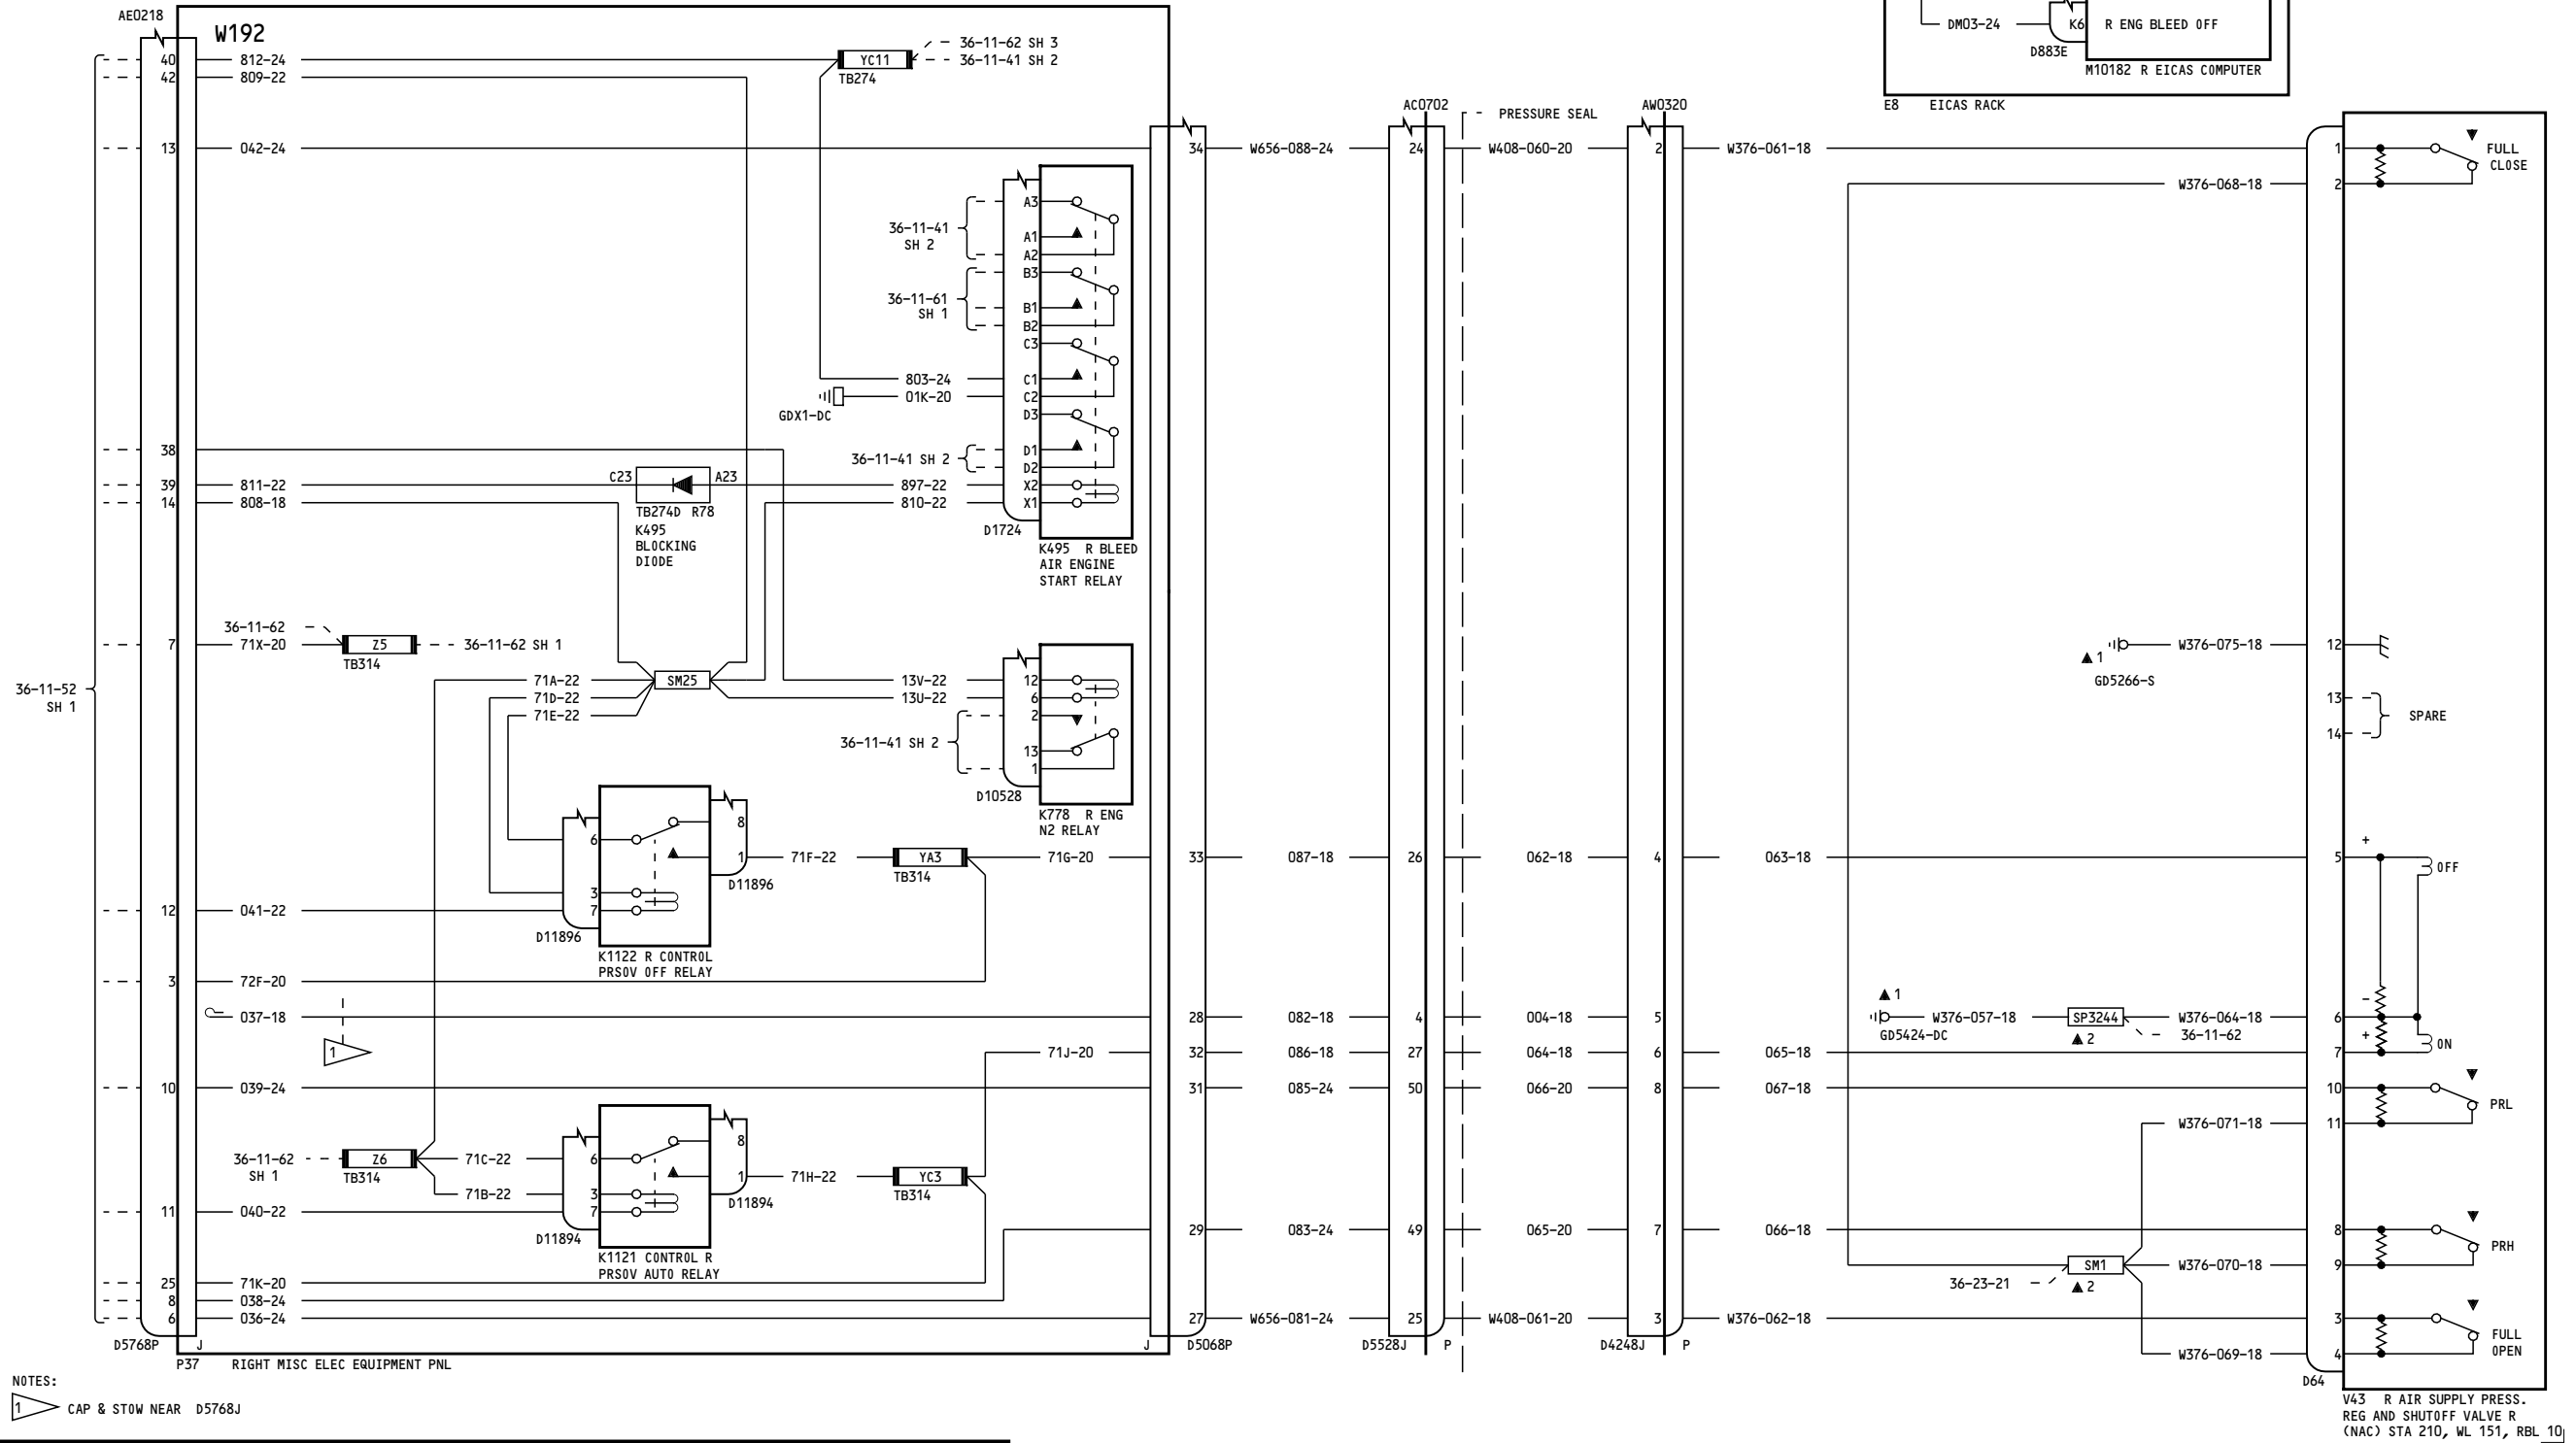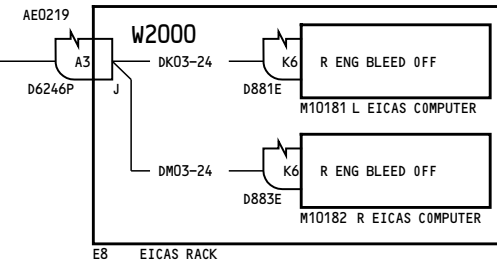

NOTES:  
 1 CAP & STOW NEAR D5768J

275

**AIR SUPPLY-  
RIGHT PRESSURE REGULATION  
& SHUTOFF**

D280T132


**36-11-52**

Page 6.1  
Sheet 2  
Jan 21/2005

Incorporates  
36-0027

**36-11-52**


Page 6.1  
Sheet 2  
Jan 21/2005

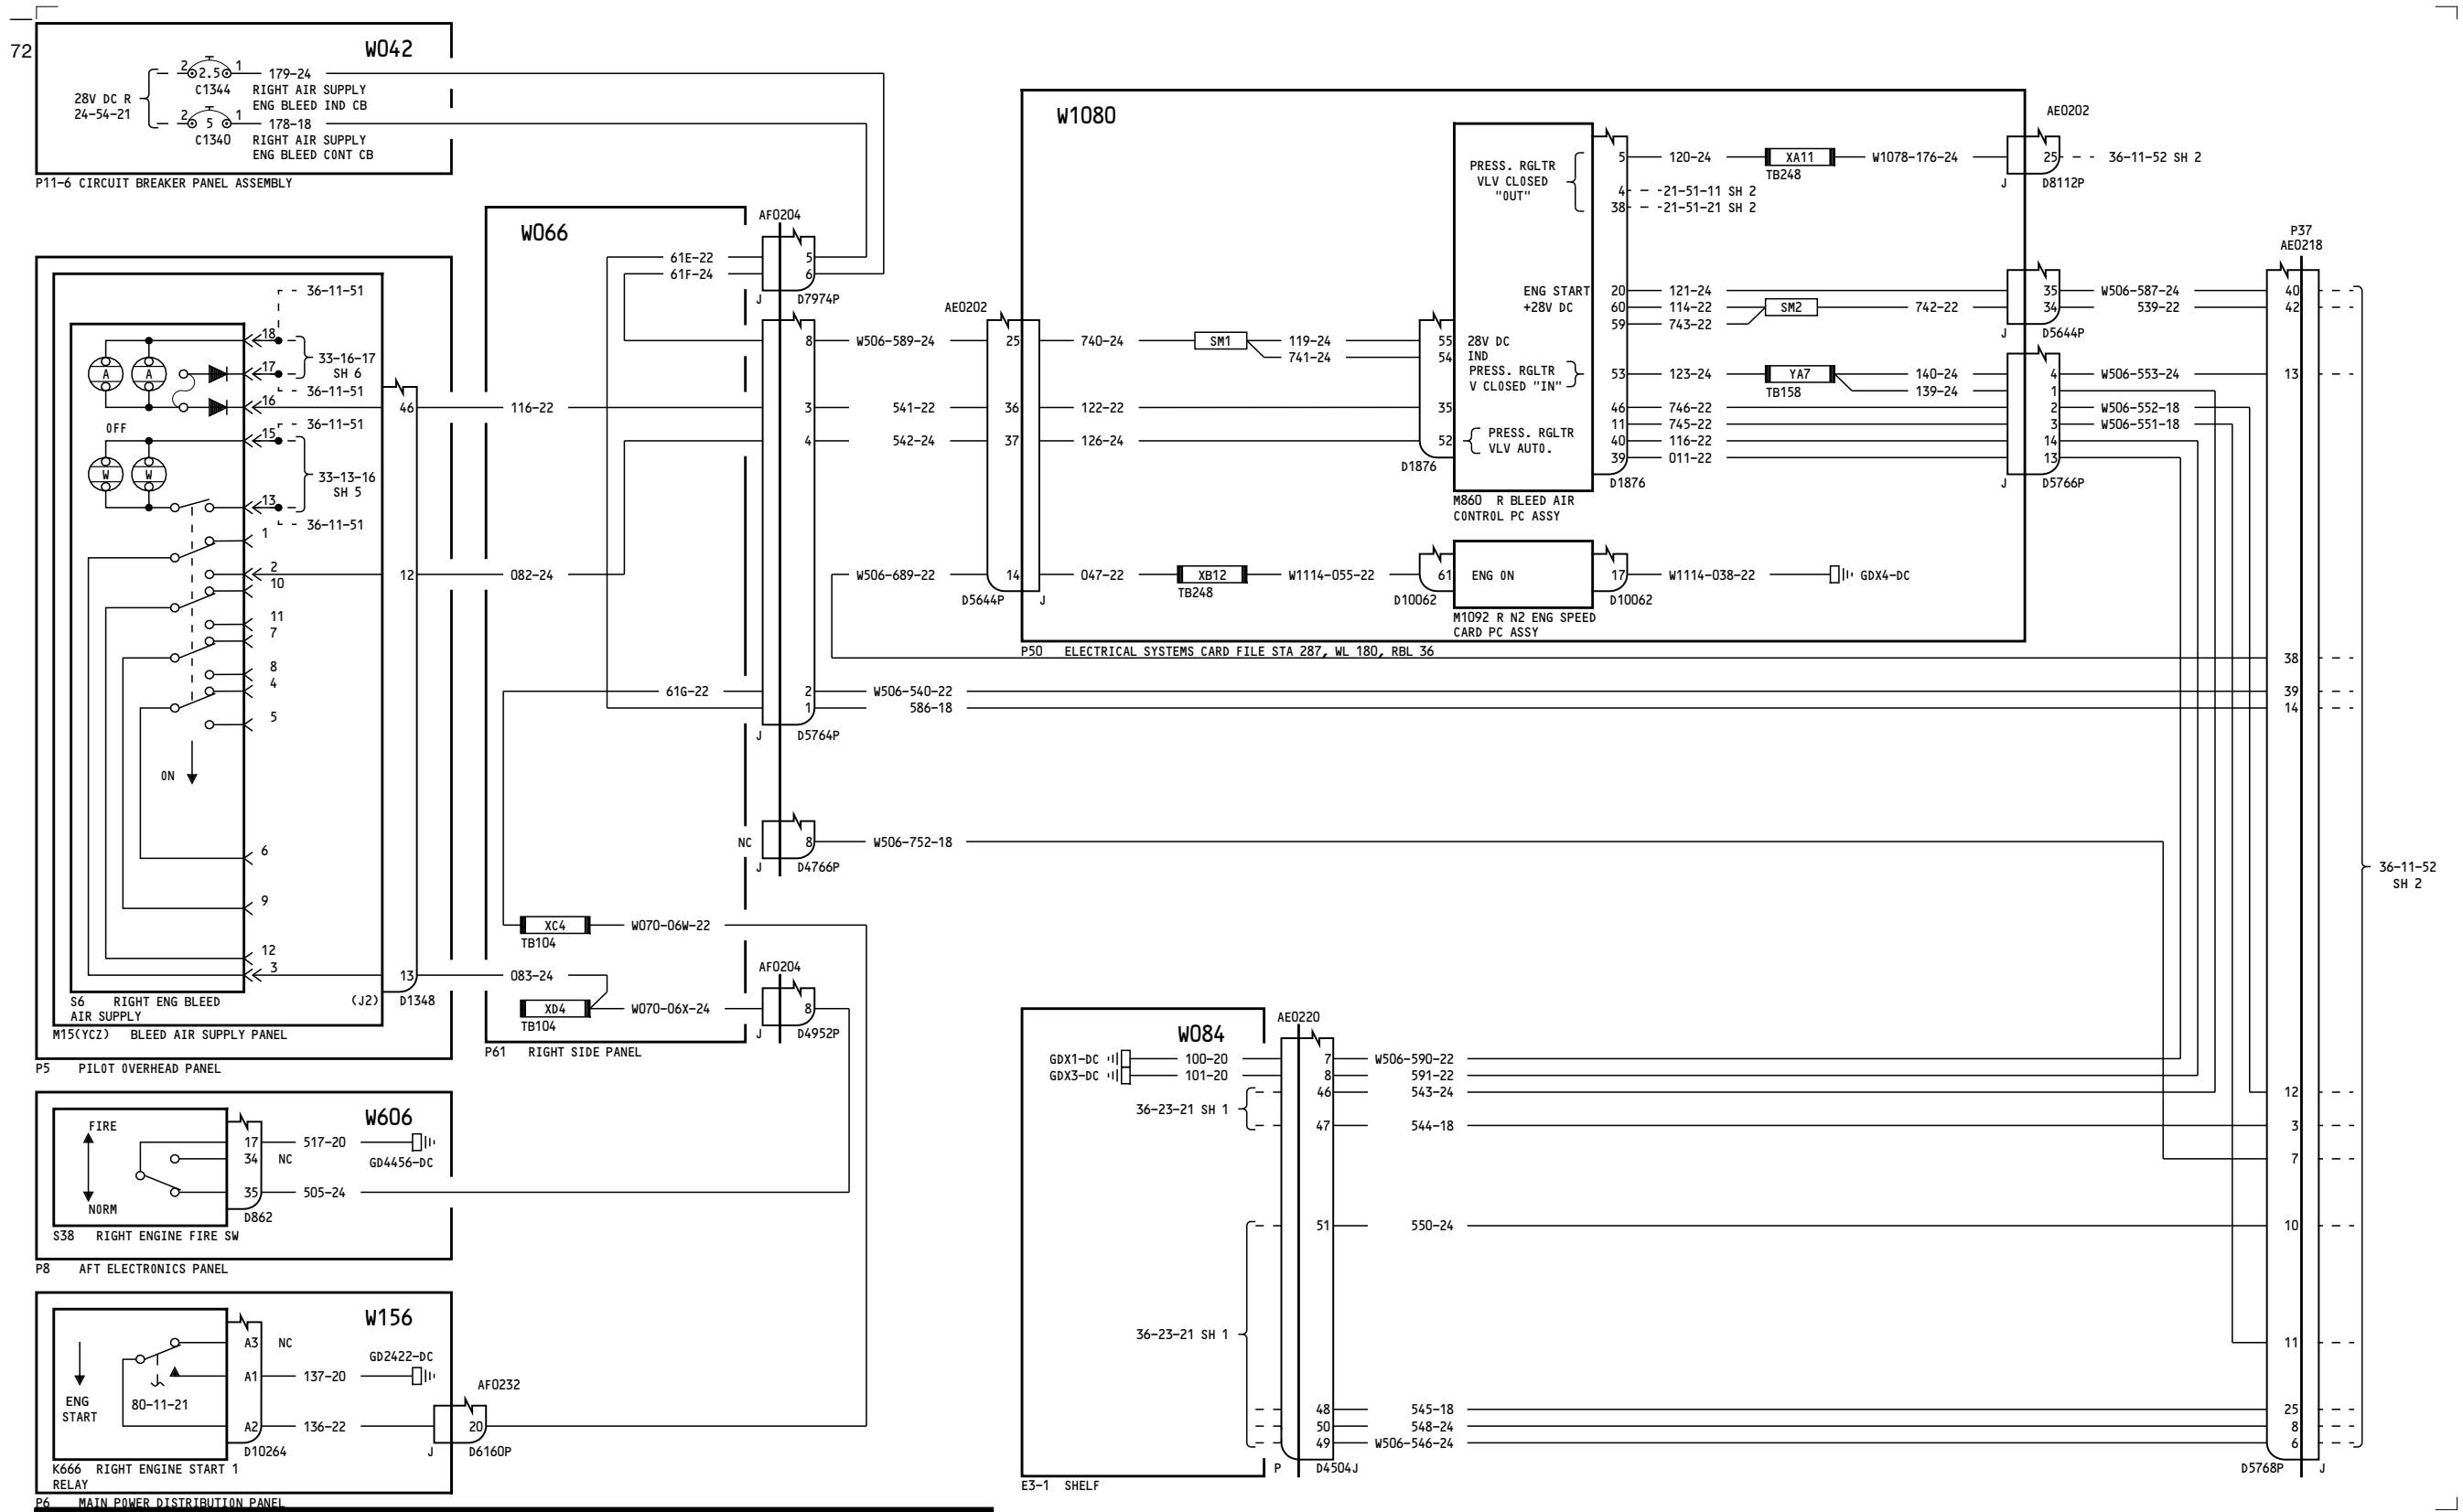

**AIR SUPPLY-  
RIGHT PRESSURE REGULATION  
& SHUTOFF**

D280T132

Incorporates  
 36-0026 IN06  
 36-0027

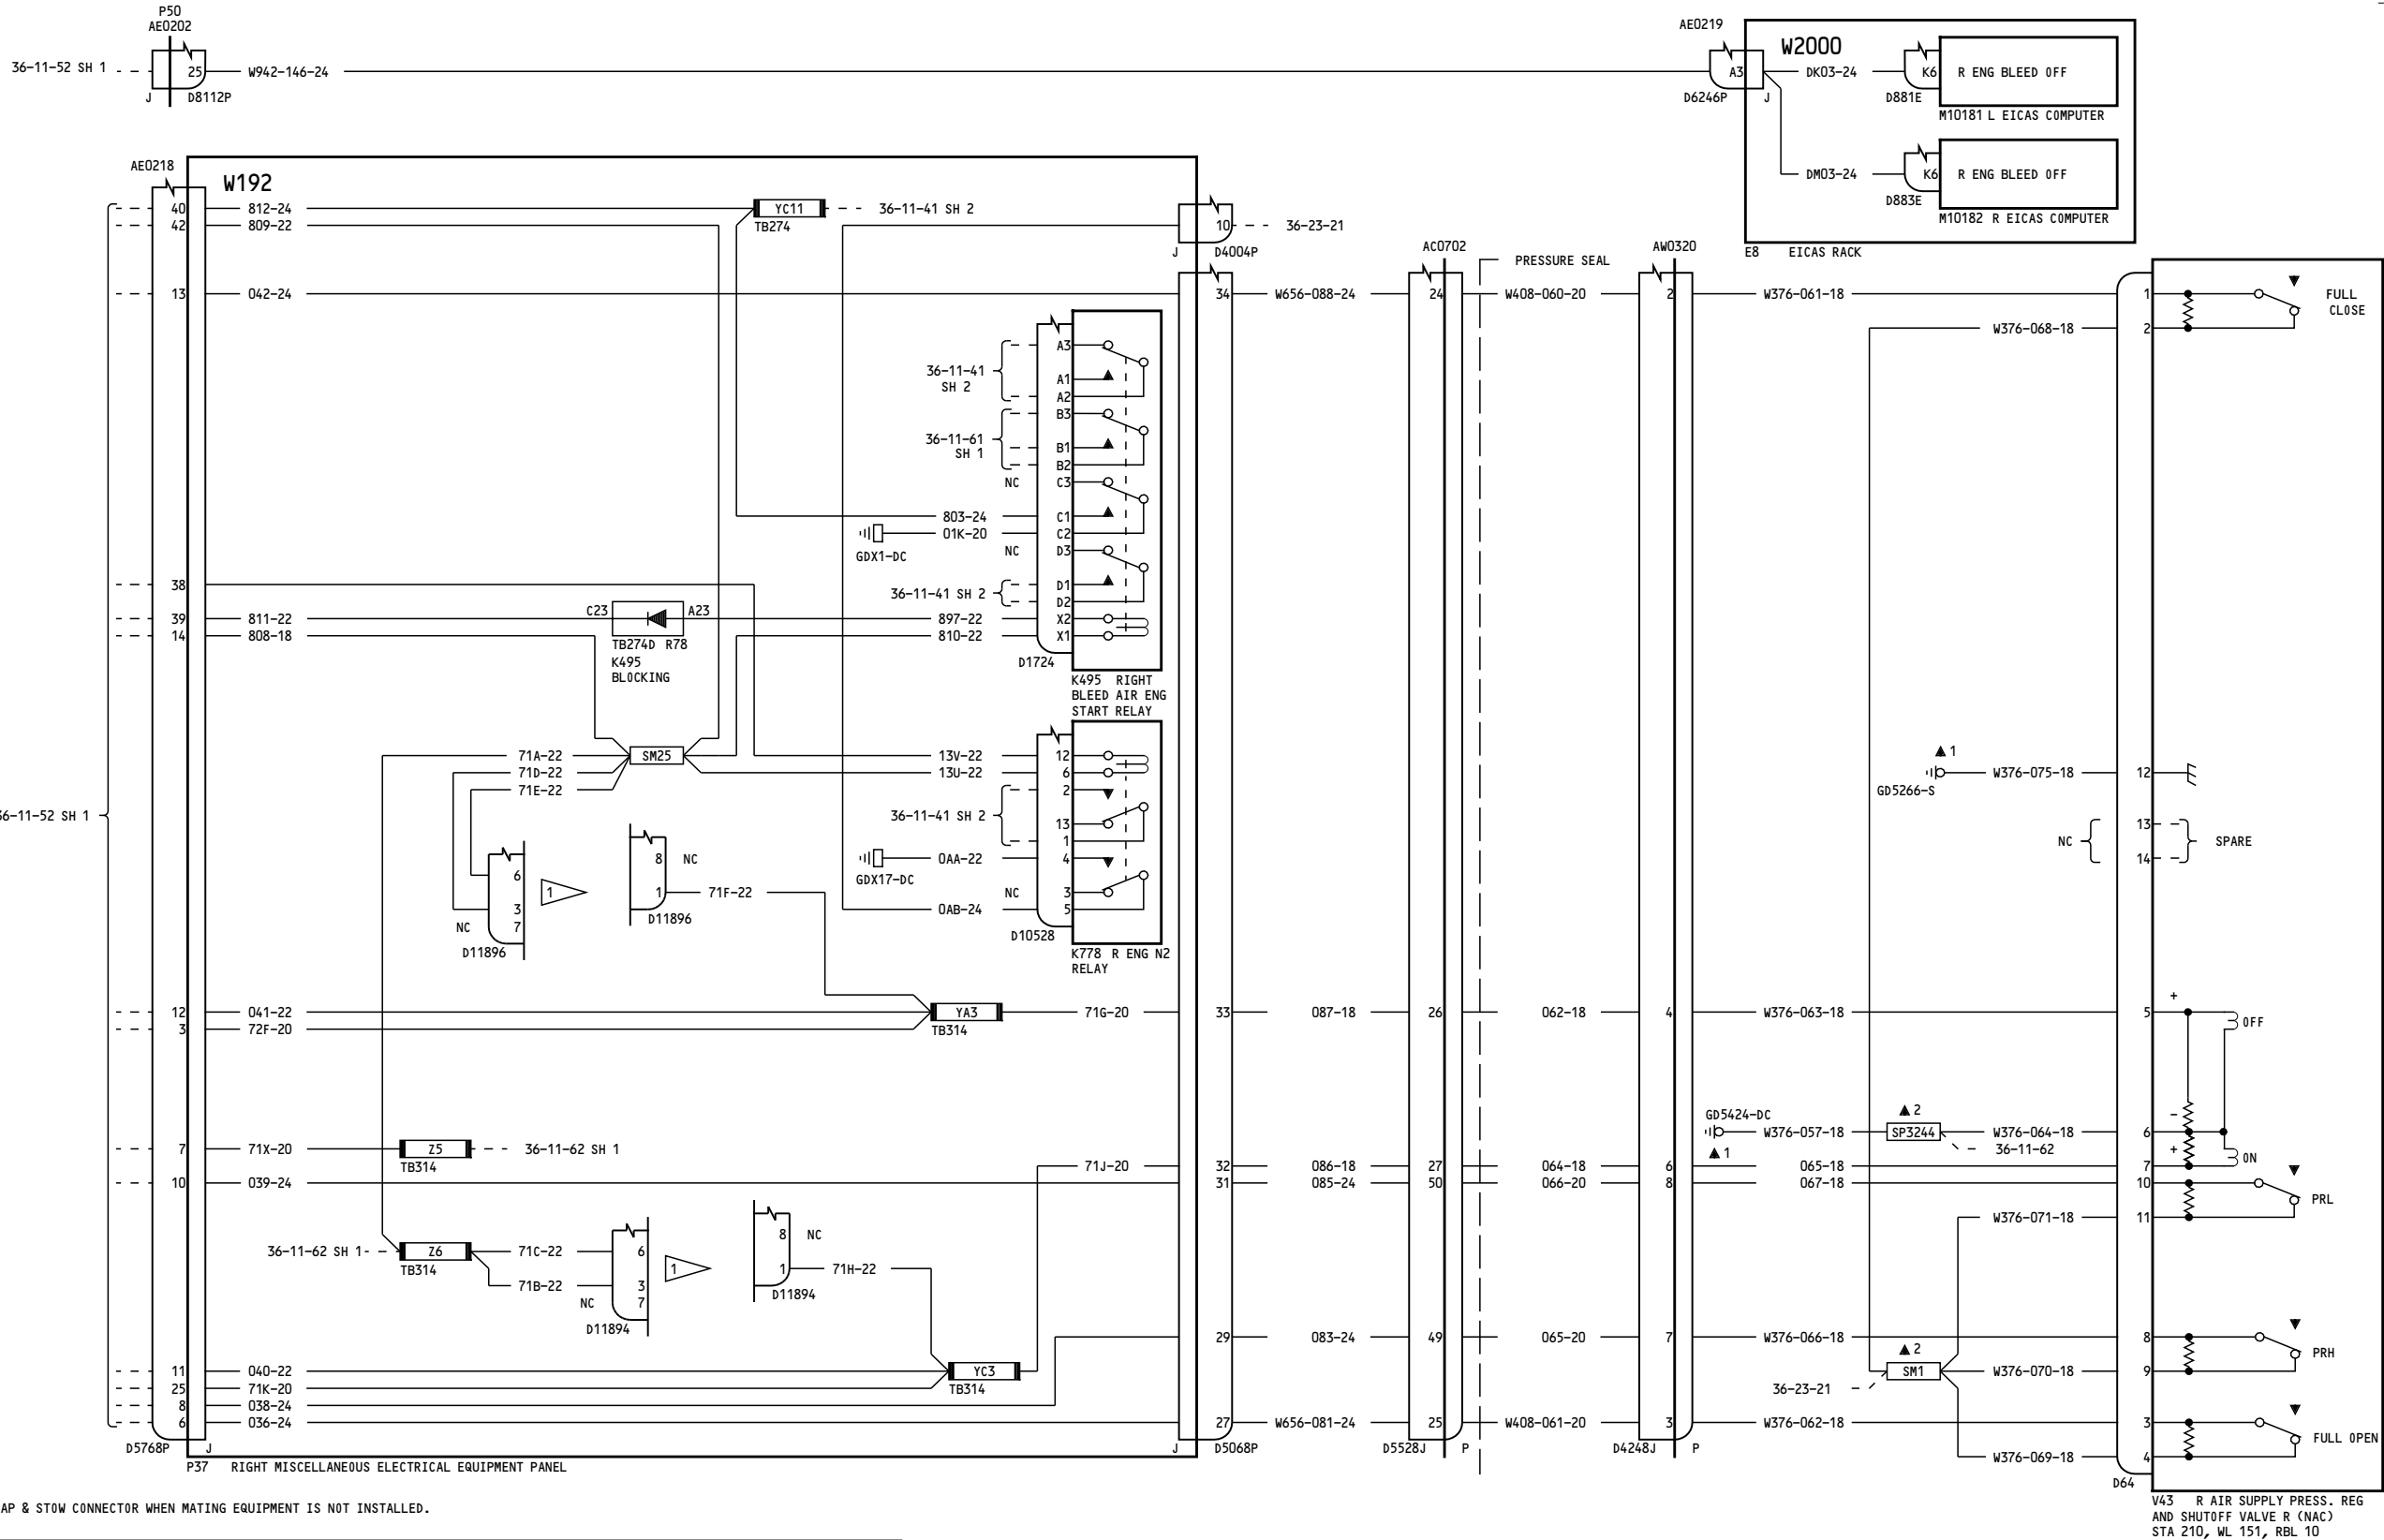

NOTES:  
 1 CAP & STOW CONNECTOR WHEN MATING EQUIPMENT IS NOT INSTALLED.

275

**AIR SUPPLY-  
RIGHT PRESSURE REGULATION  
& SHUTOFF**

**36-11-52**


Page 6.2  
Sheet 2  
Jan 21/2005


D280T132

- Incorporates
- ▶ 36-0026 IN06
  - ▶ 36-0027
  - ▶ 36-0029 R05

**36-11-52**

Page 6.2  
Sheet 2  
Jan 21/2005

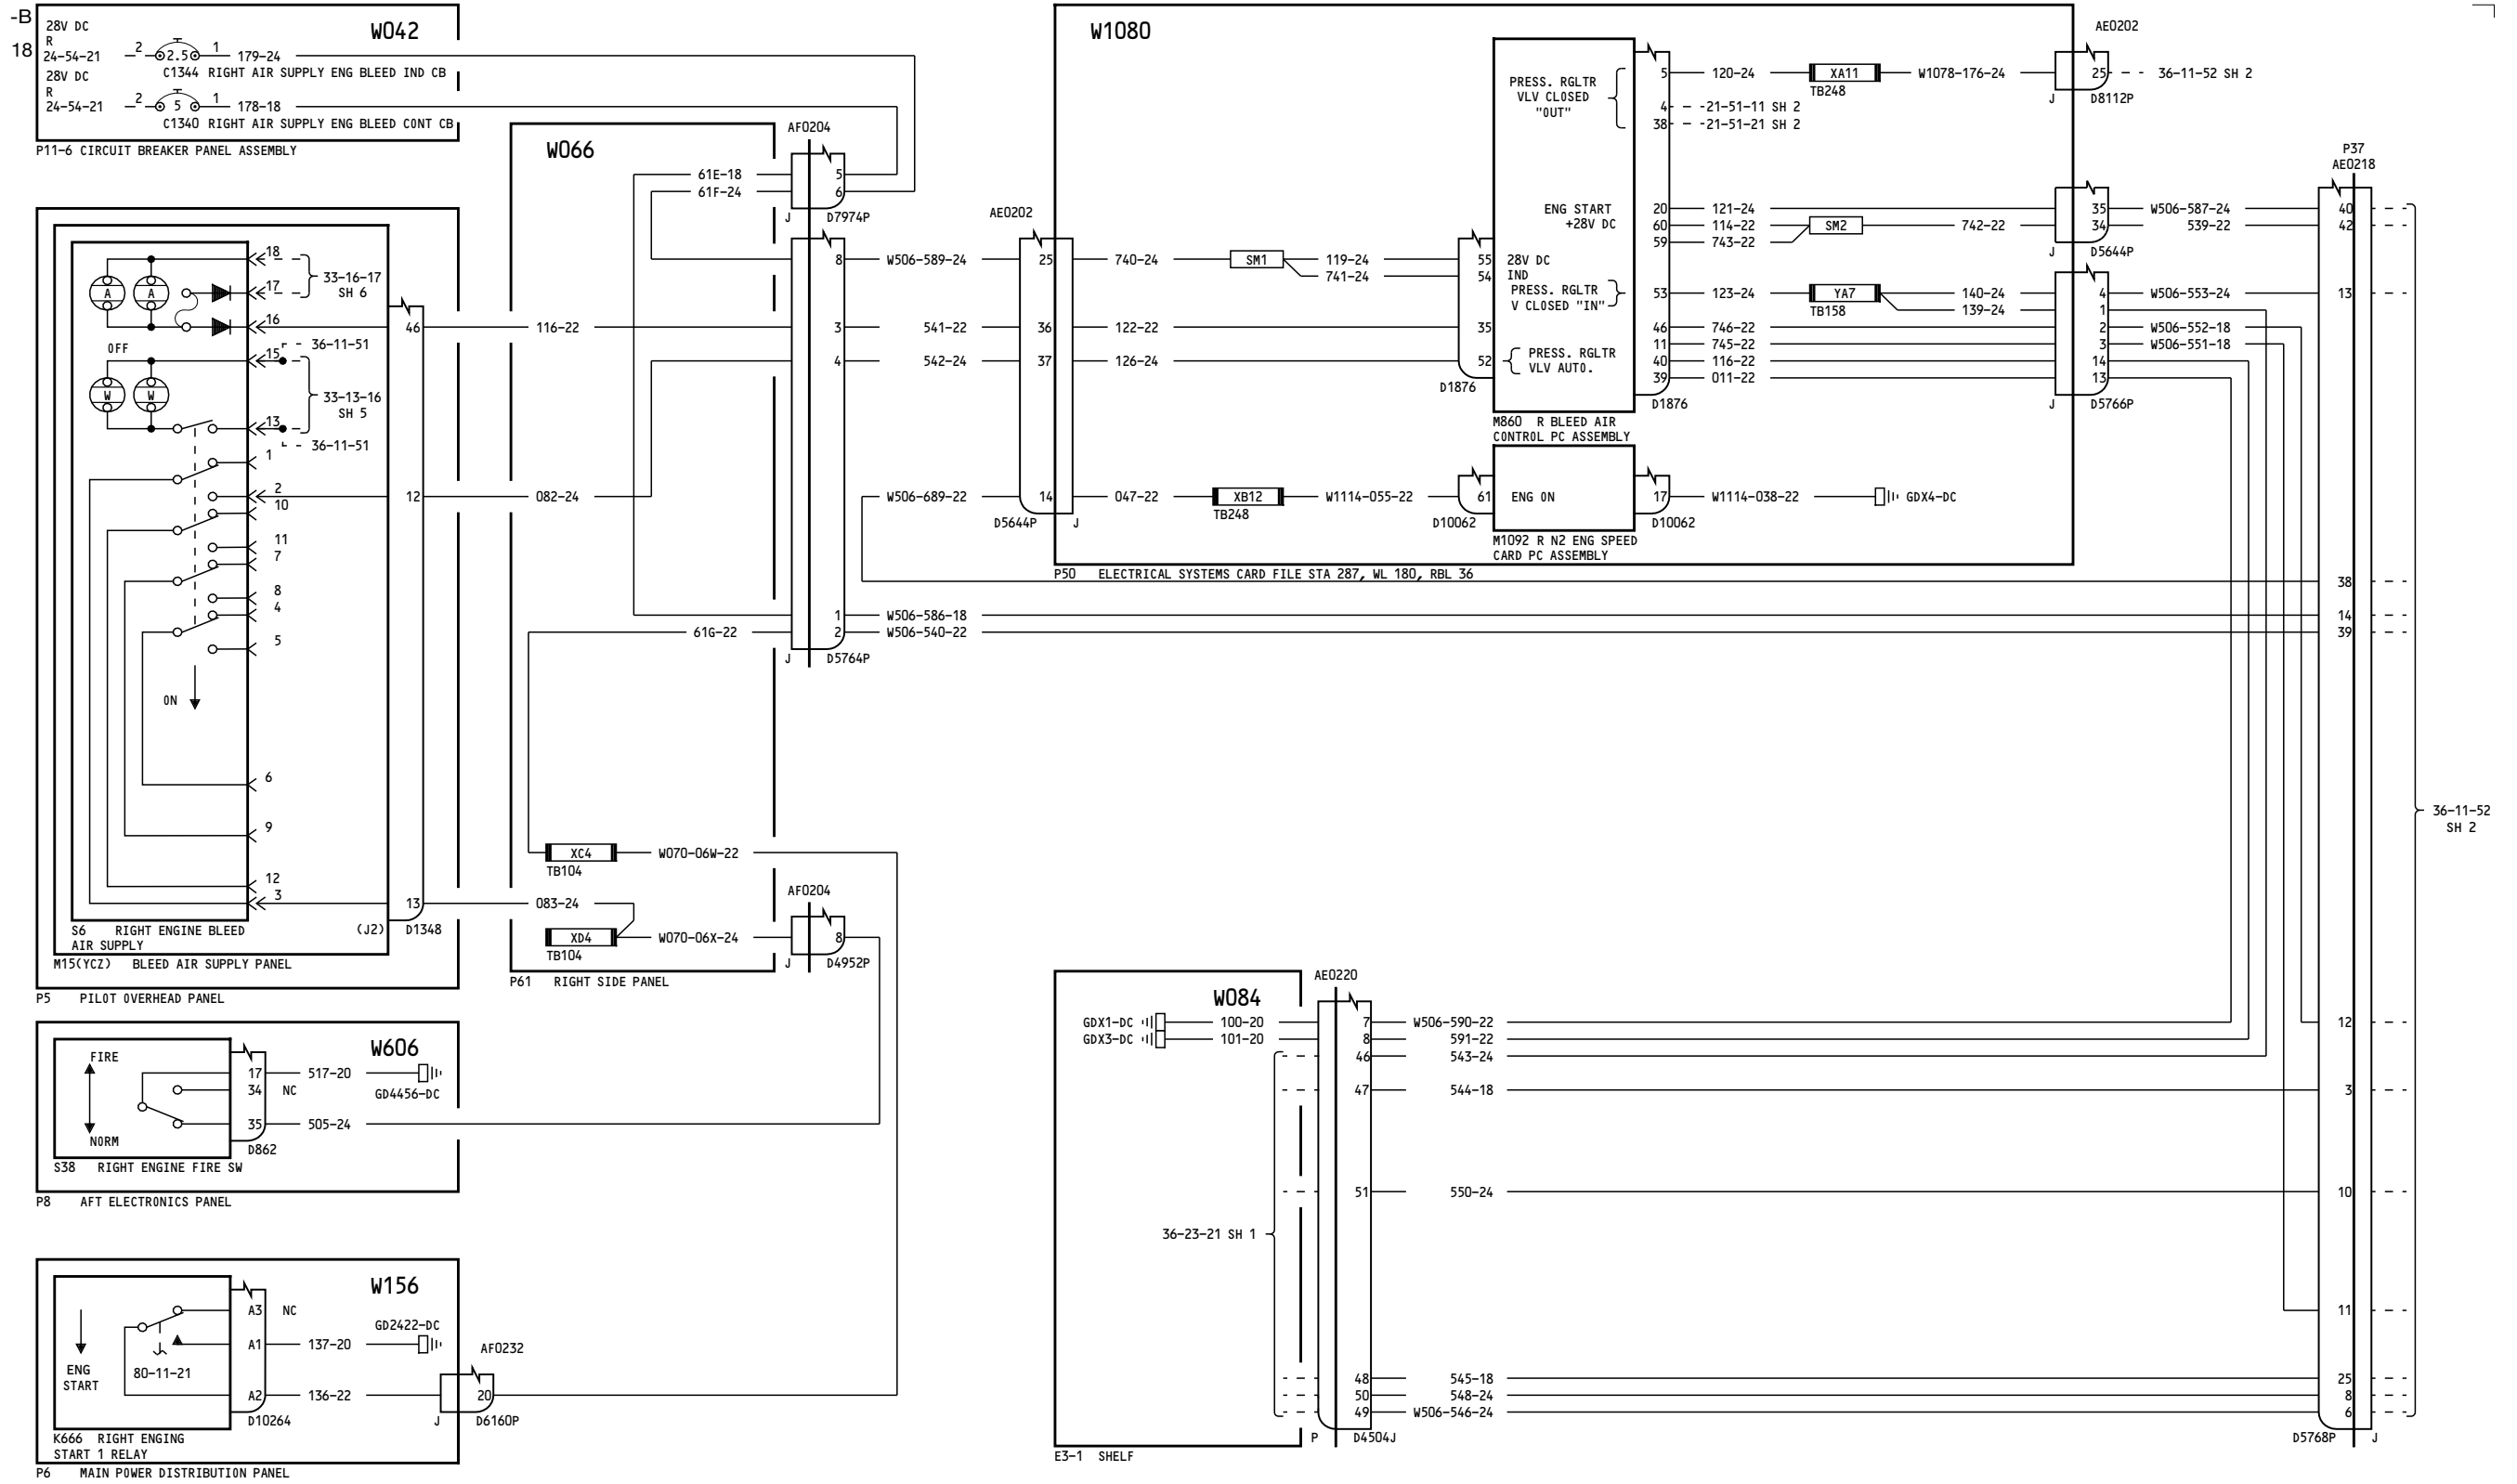

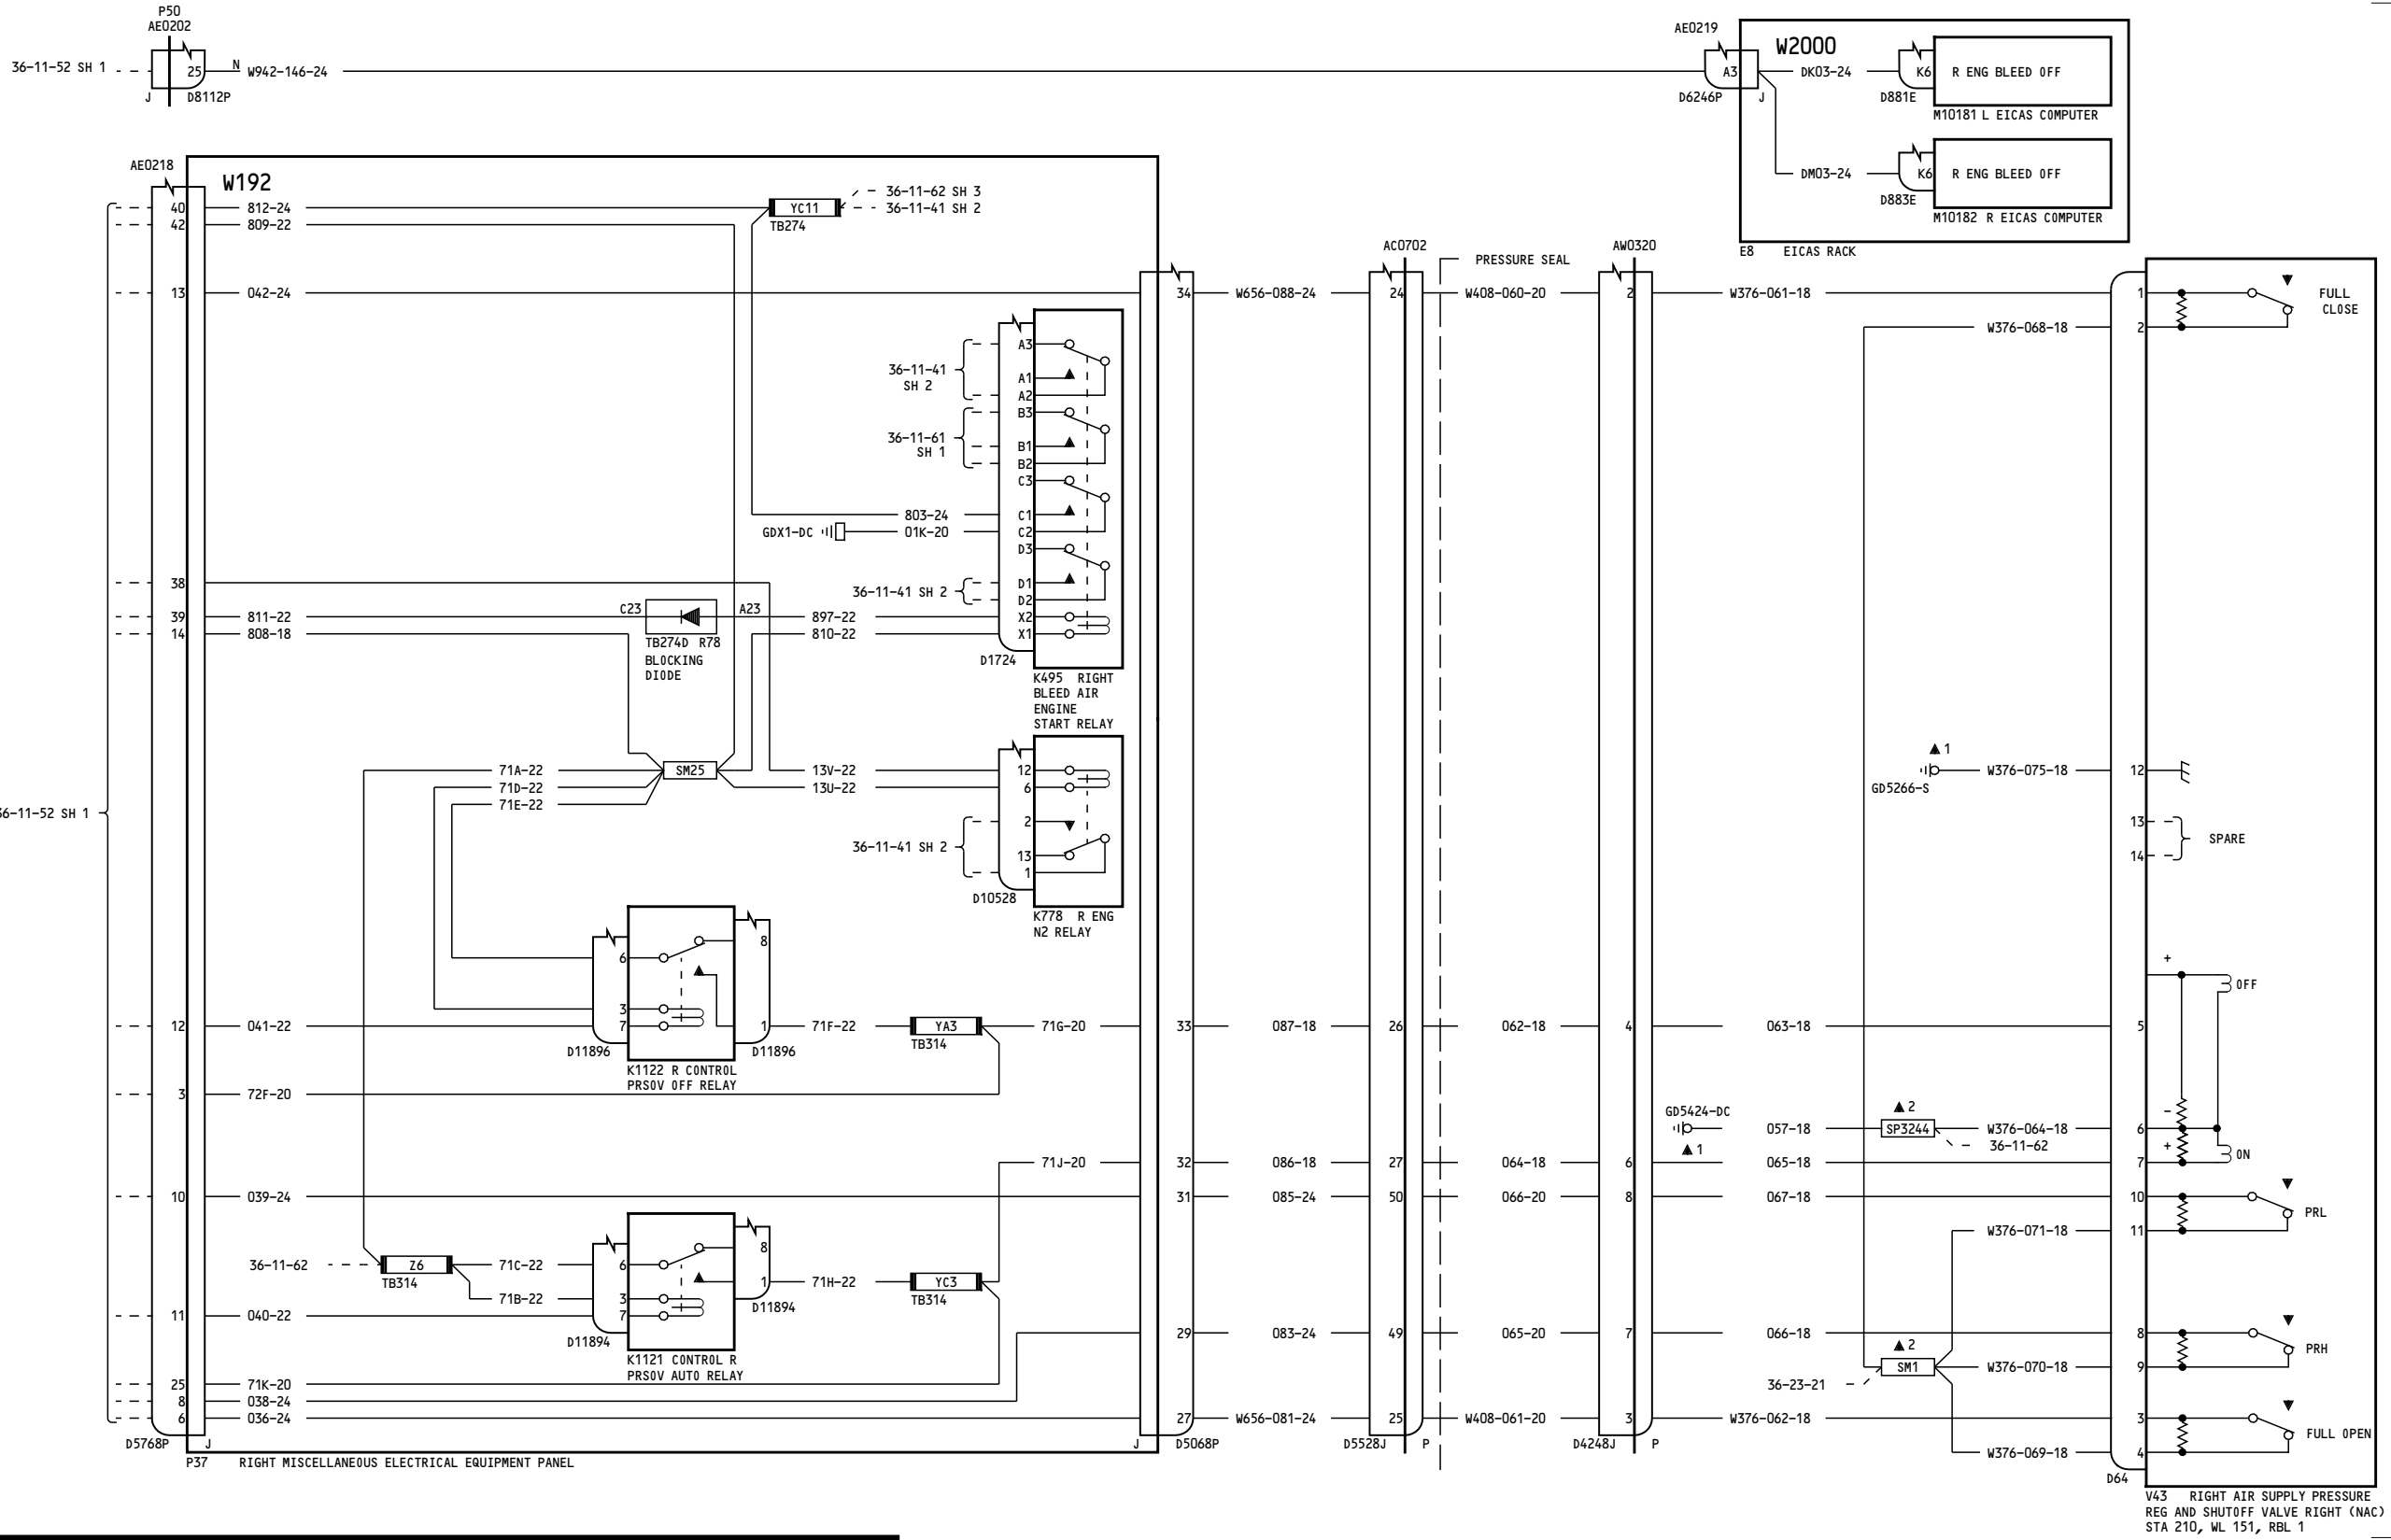

276

**AIR SUPPLY-  
RIGHT PRESSURE REGULATION  
& SHUTOFF**


**36-11-52**


Page 7  
Sheet 2  
Jan 21/2005

D280T132

**36-11-52**

Page 7  
Sheet 2  
Jan 21/2005

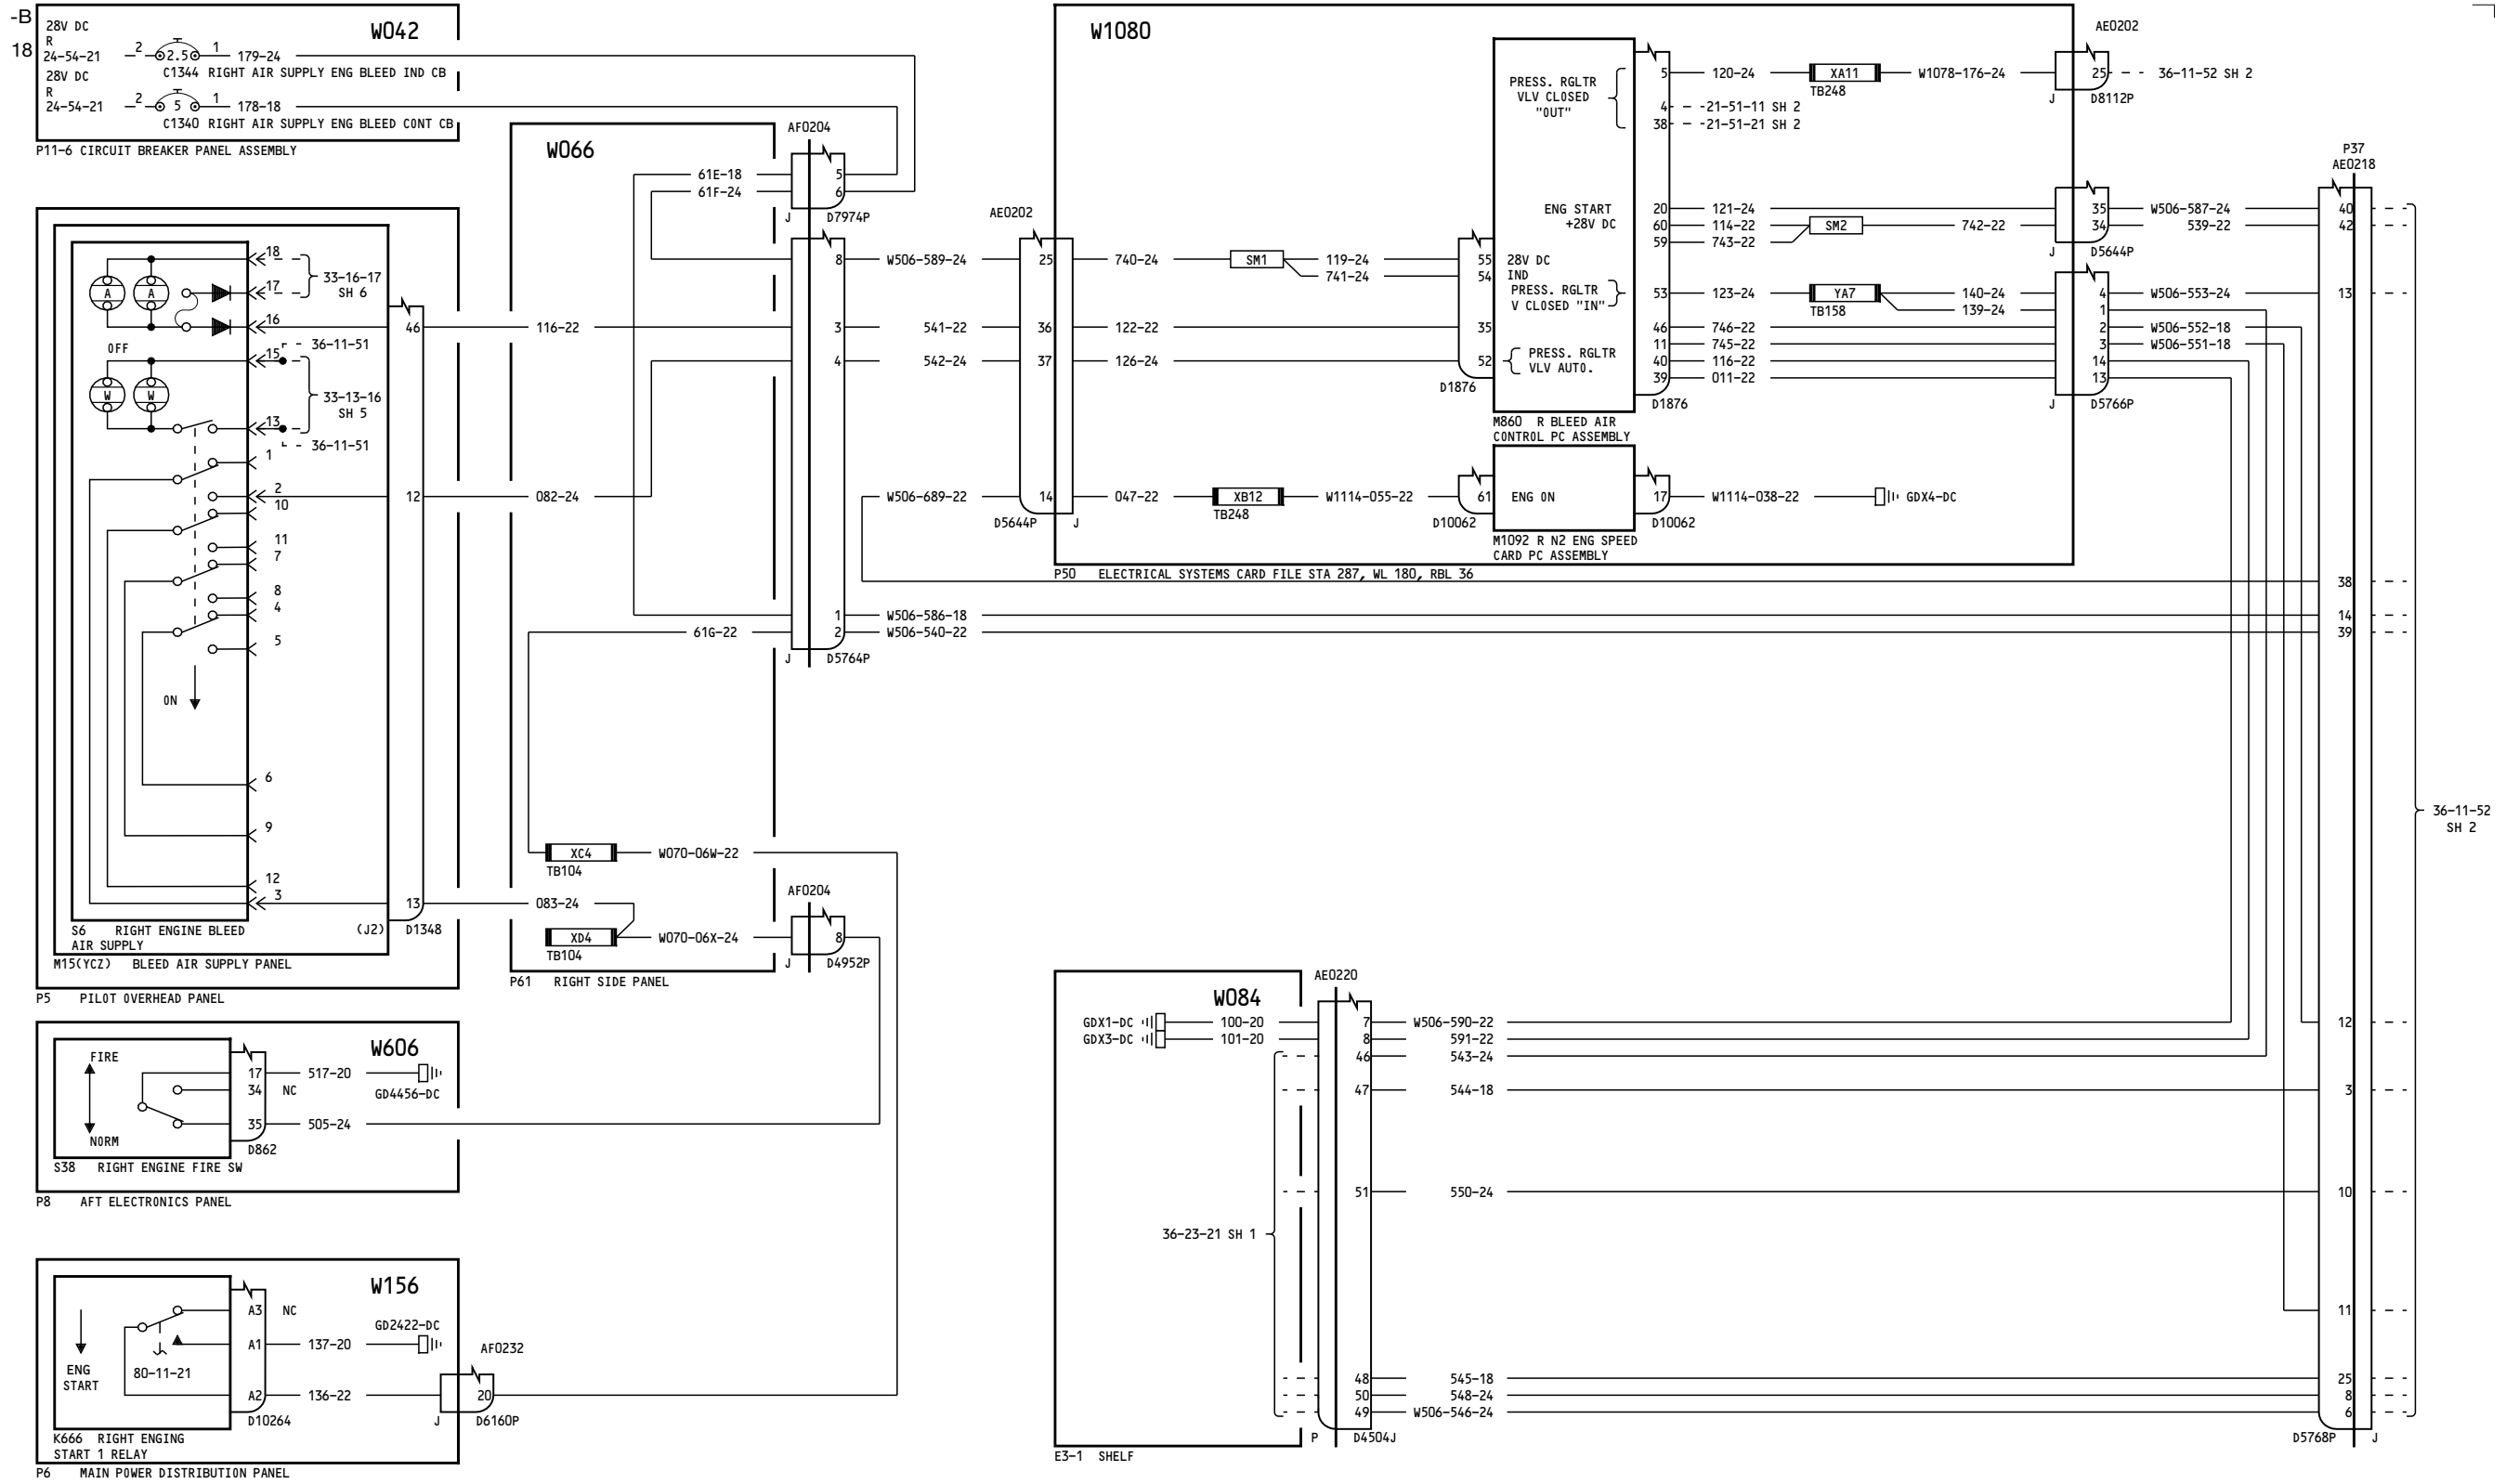

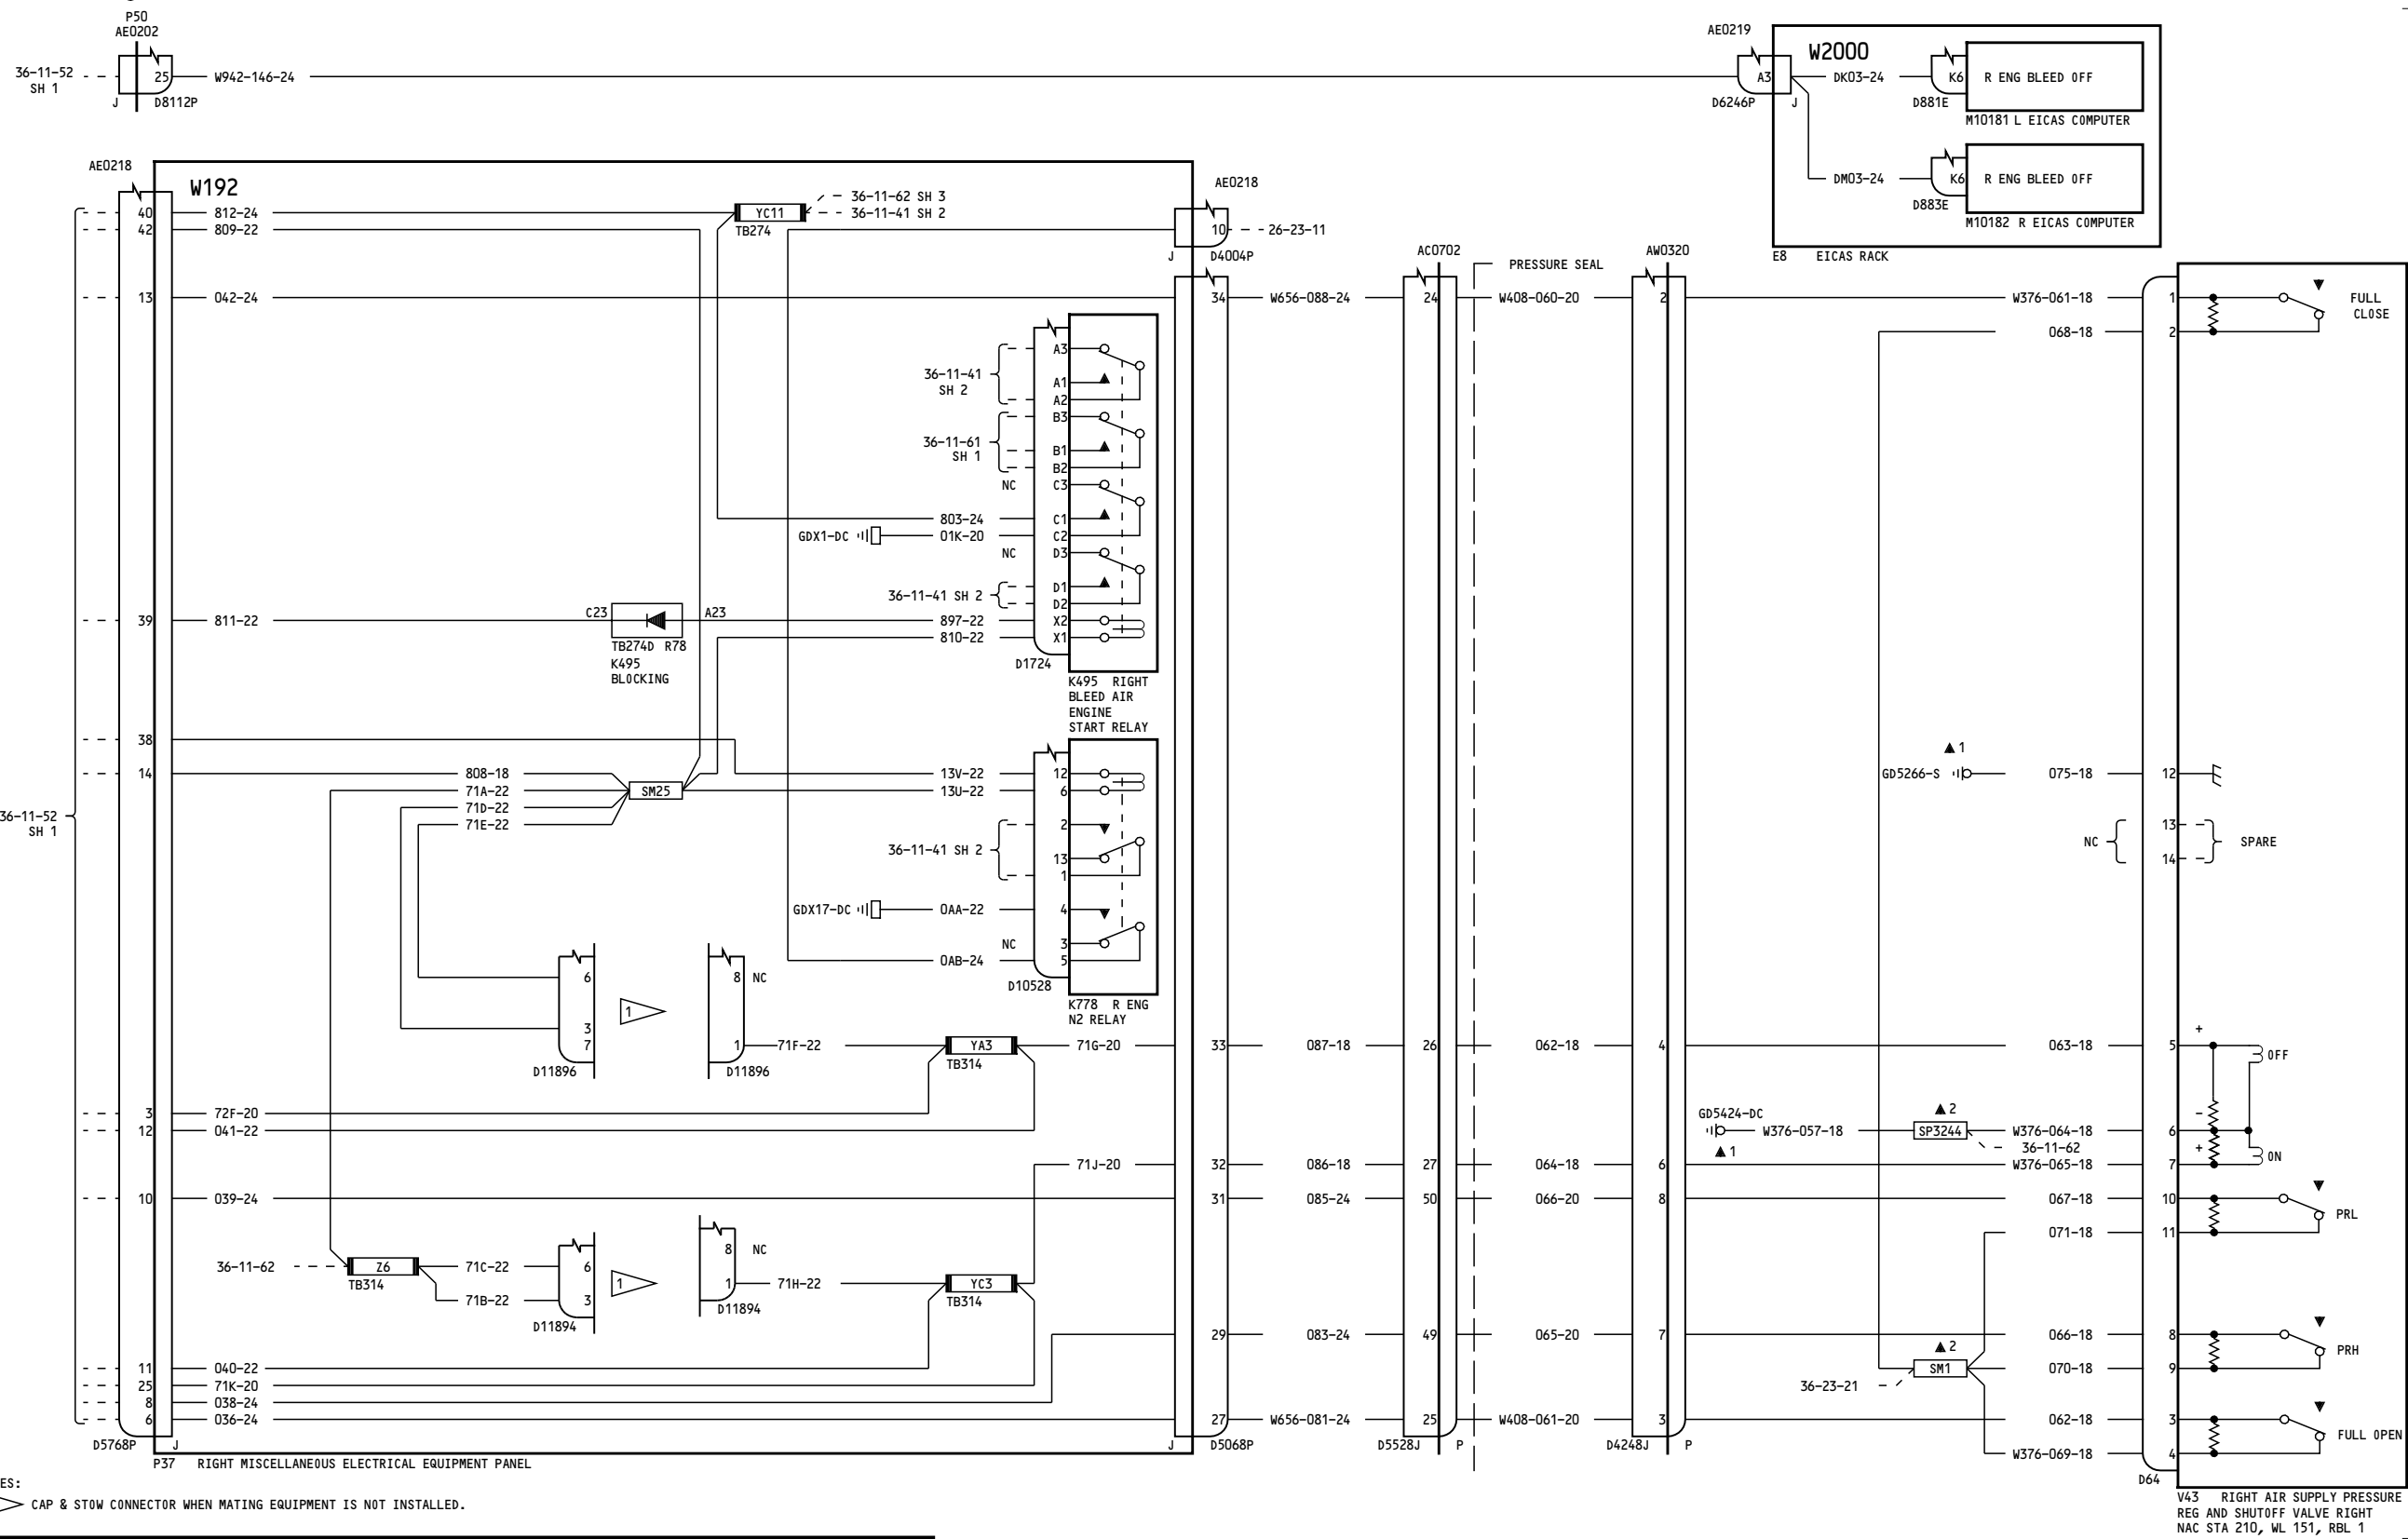

276

**AIR SUPPLY-  
 RIGHT PRESSURE REGULATION  
 & SHUTOFF**

D280T132


**36-11-52**

Page 7.1  
 Sheet 2  
 Jan 21/2005

BOEING PROPRIETARY - Copyright © - Unpublished Work - See title page for details.

**36-11-52**

Page 7.1  
 Sheet 2  
 Jan 21/2005

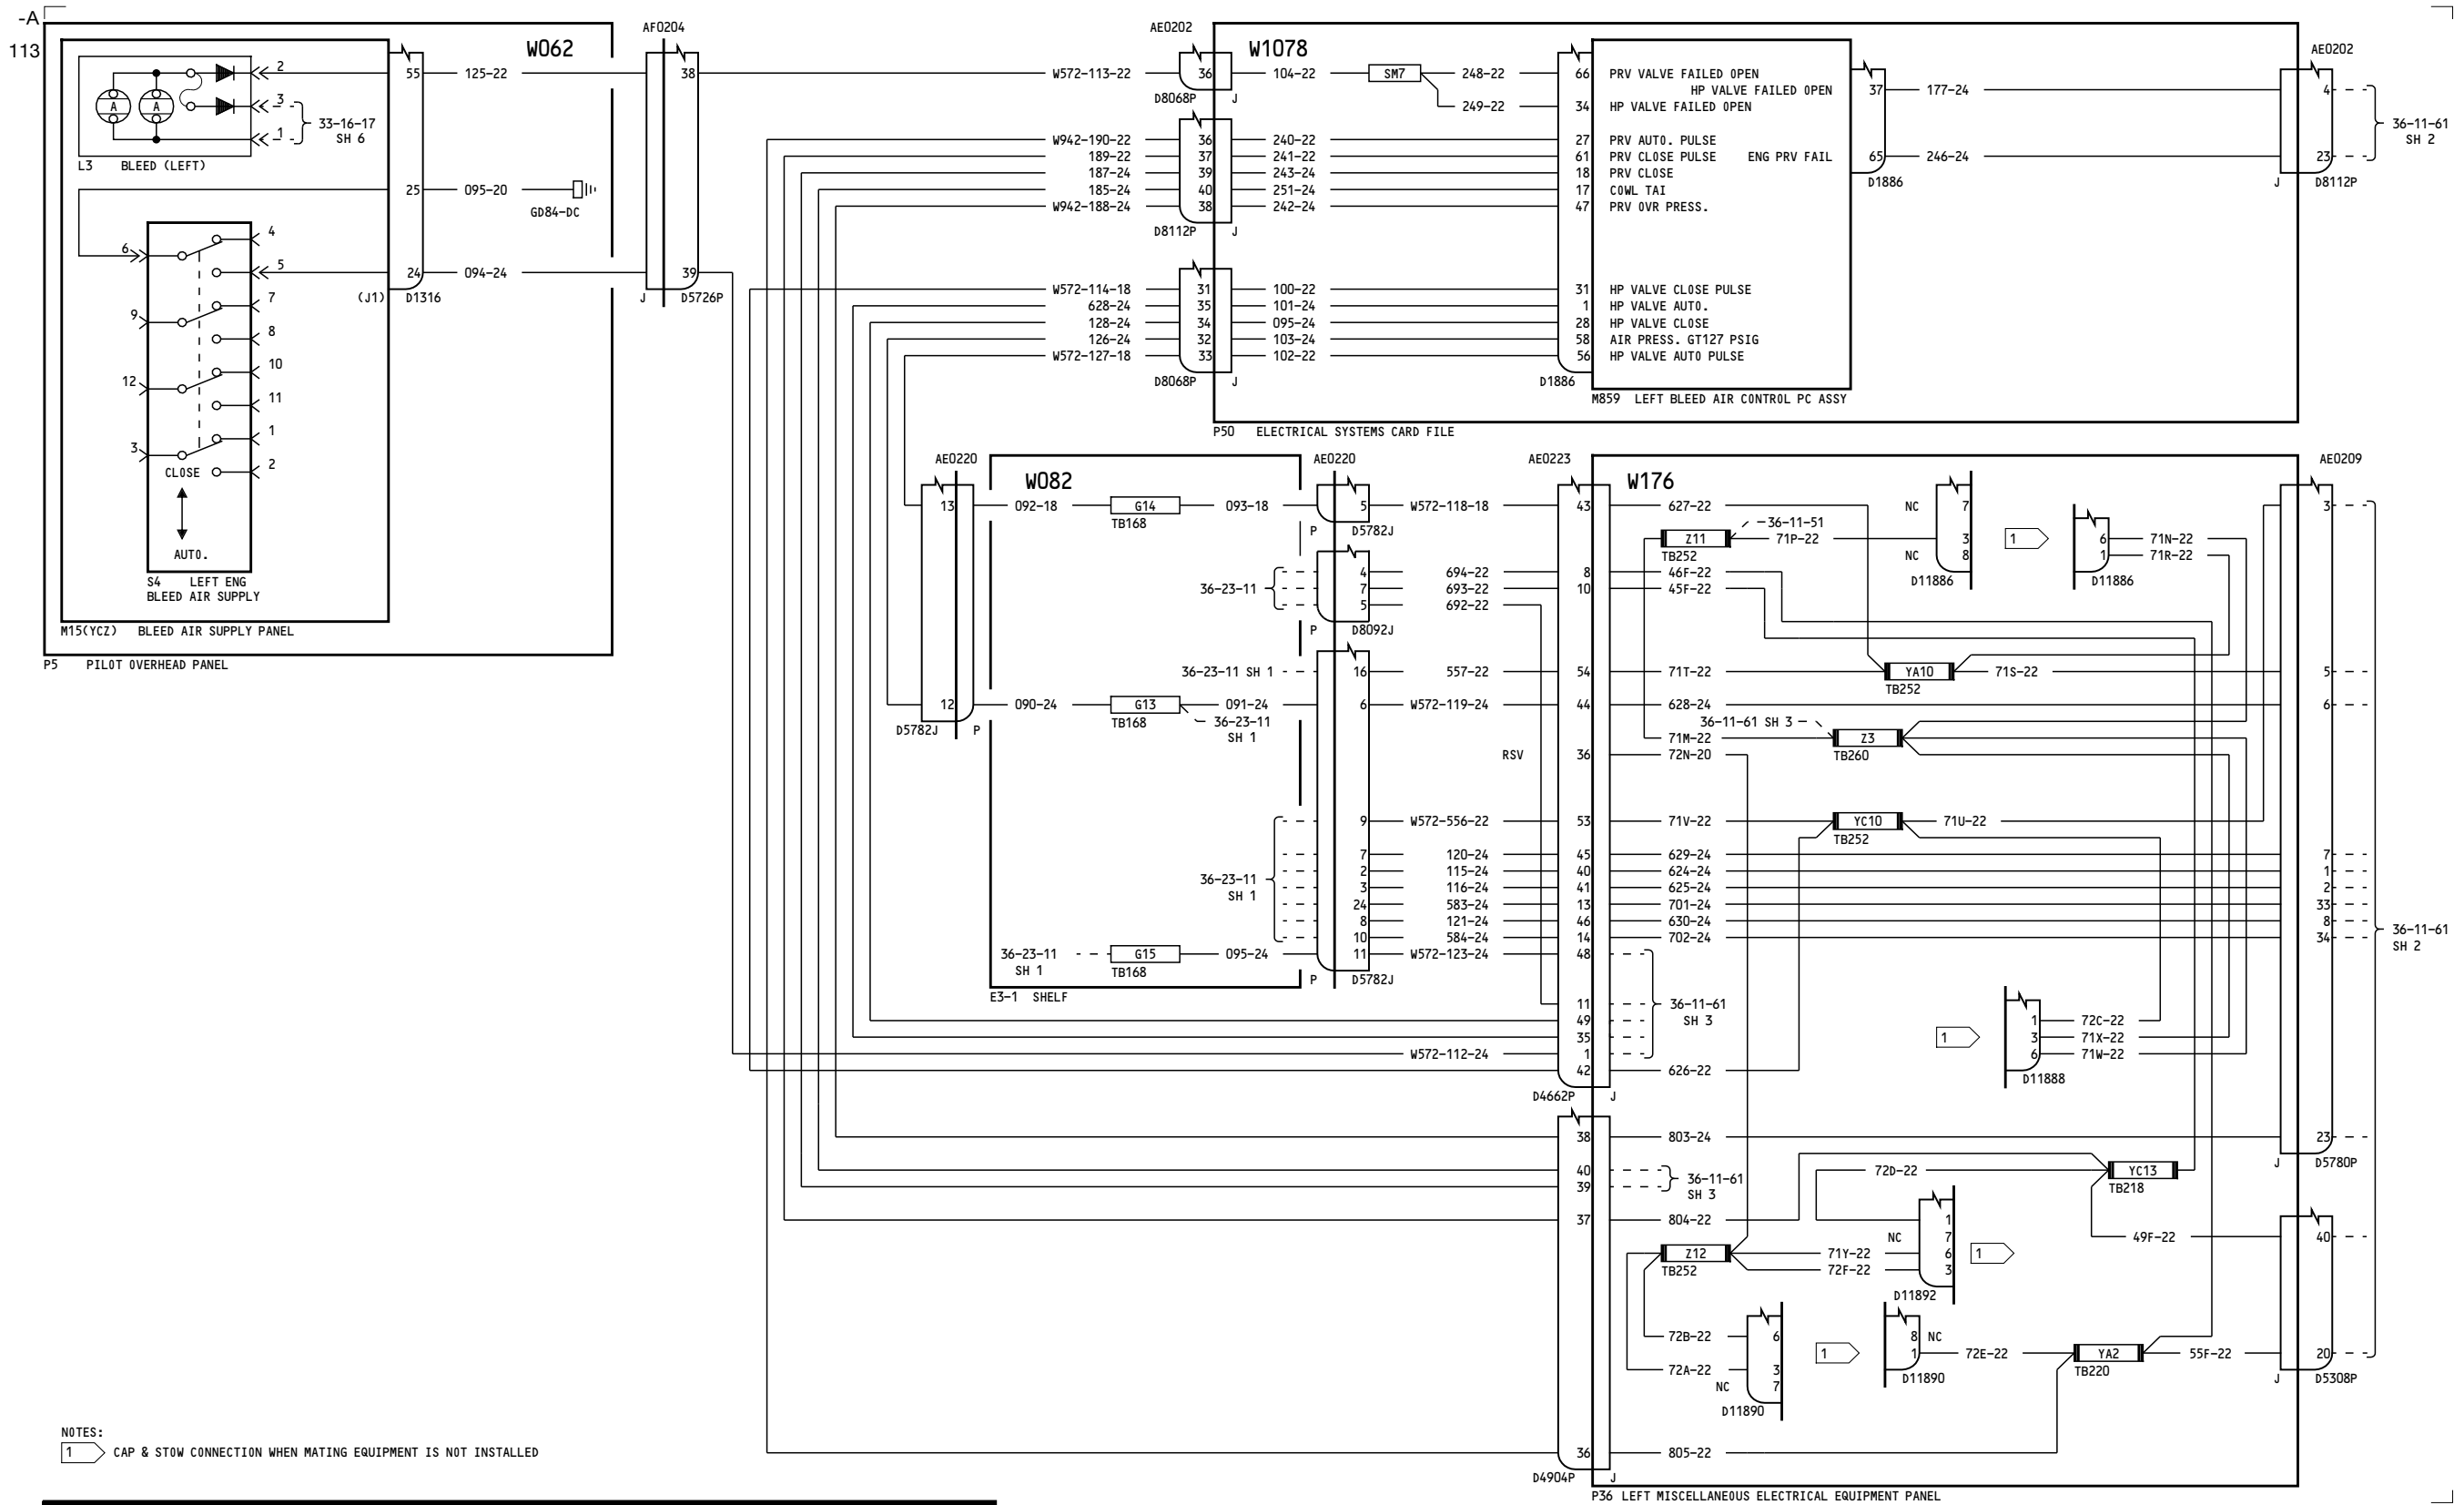

NOTES:  
 1 CAP & STOW CONNECTION WHEN MATING EQUIPMENT IS NOT INSTALLED

050-051

**AIR SUPPLY BLEED AIR-  
 LEFT ENGINE HIGH  
 PRESSURE CONTROL**

D280T132

**36-11-61**


Page 1.1  
 Sheet 1  
 Jan 21/2005

- Incorporates
- ▶ 36-0026
  - ▶ 36-0026 R02
  - ▶ 36-0029 R05

**36-11-61**

Page 1.1  
 Sheet 1  
 Jan 21/2005



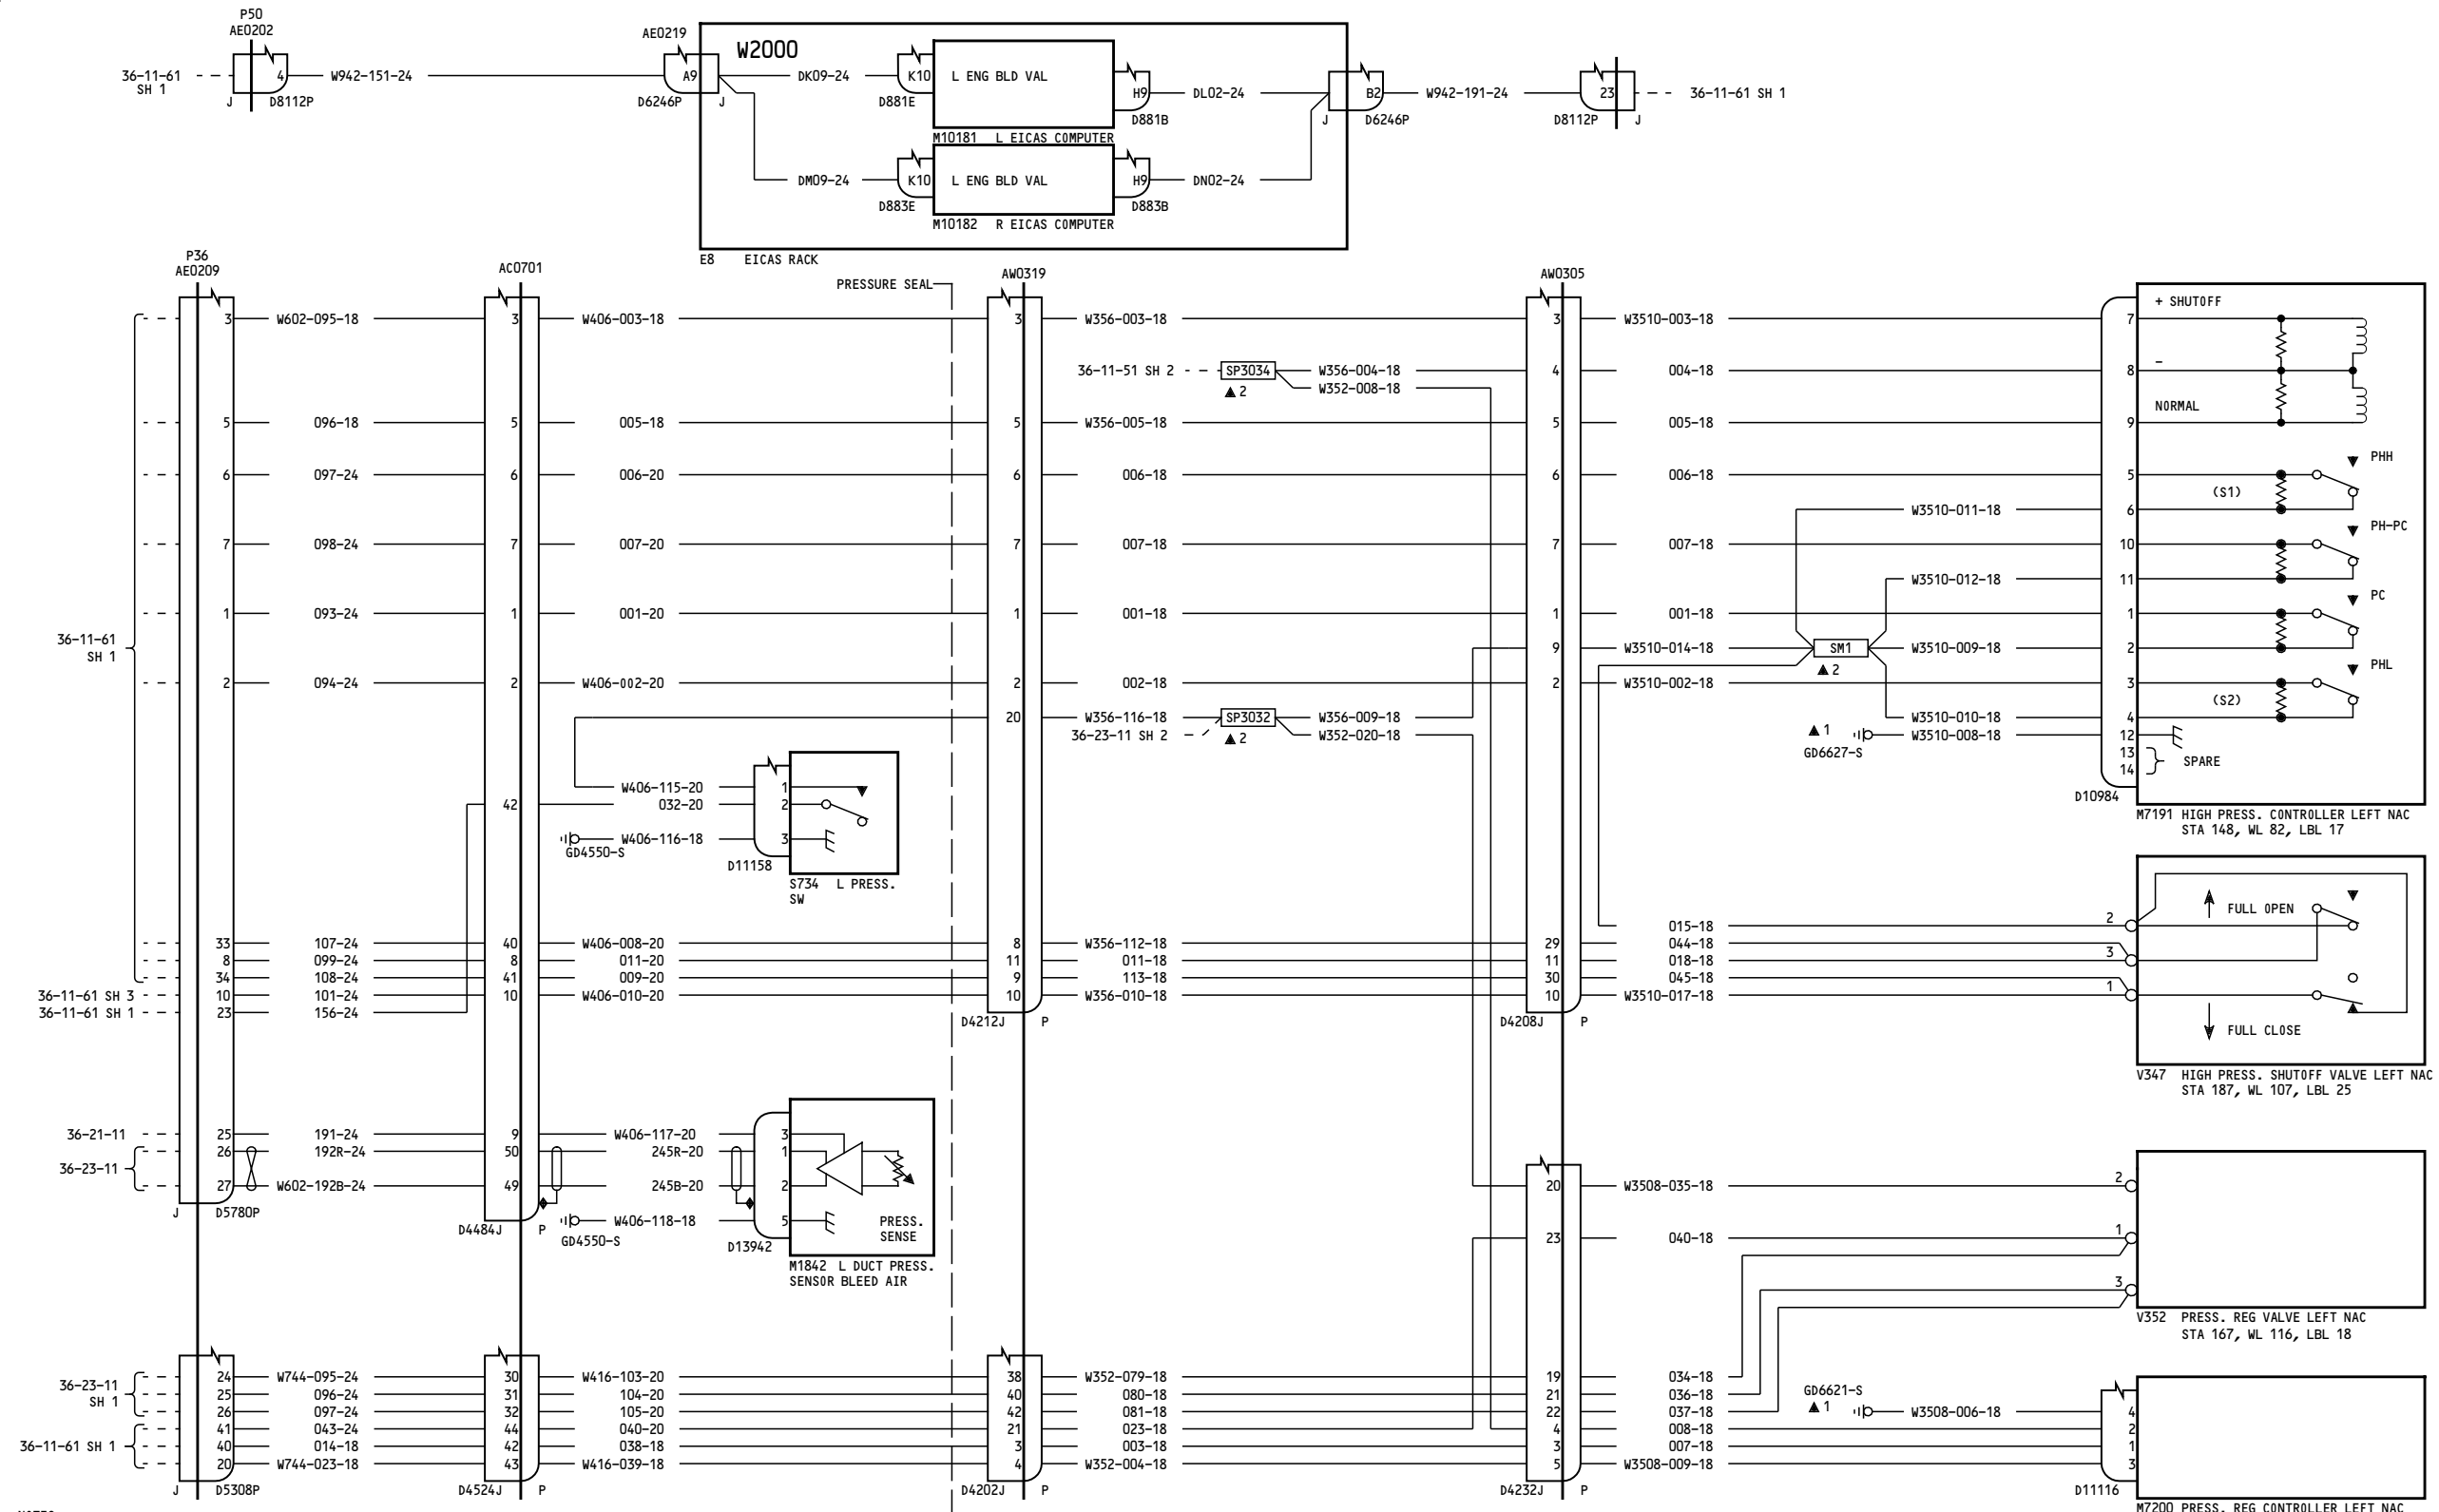

NOTES:  
SHIELD PIGTAIL TO DISCONNECT BACKSHELL 2 INCHES MAXIMUM

050-051

**AIR SUPPLY BLEED AIR-  
LEFT ENGINE HIGH  
PRESSURE CONTROL**

D280T132


**36-11-61**

Page 1.1  
Sheet 2  
Jan 21/2005

Incorporates  
36-0029 R05

**36-11-61**

Page 1.1  
Sheet 2  
Jan 21/2005

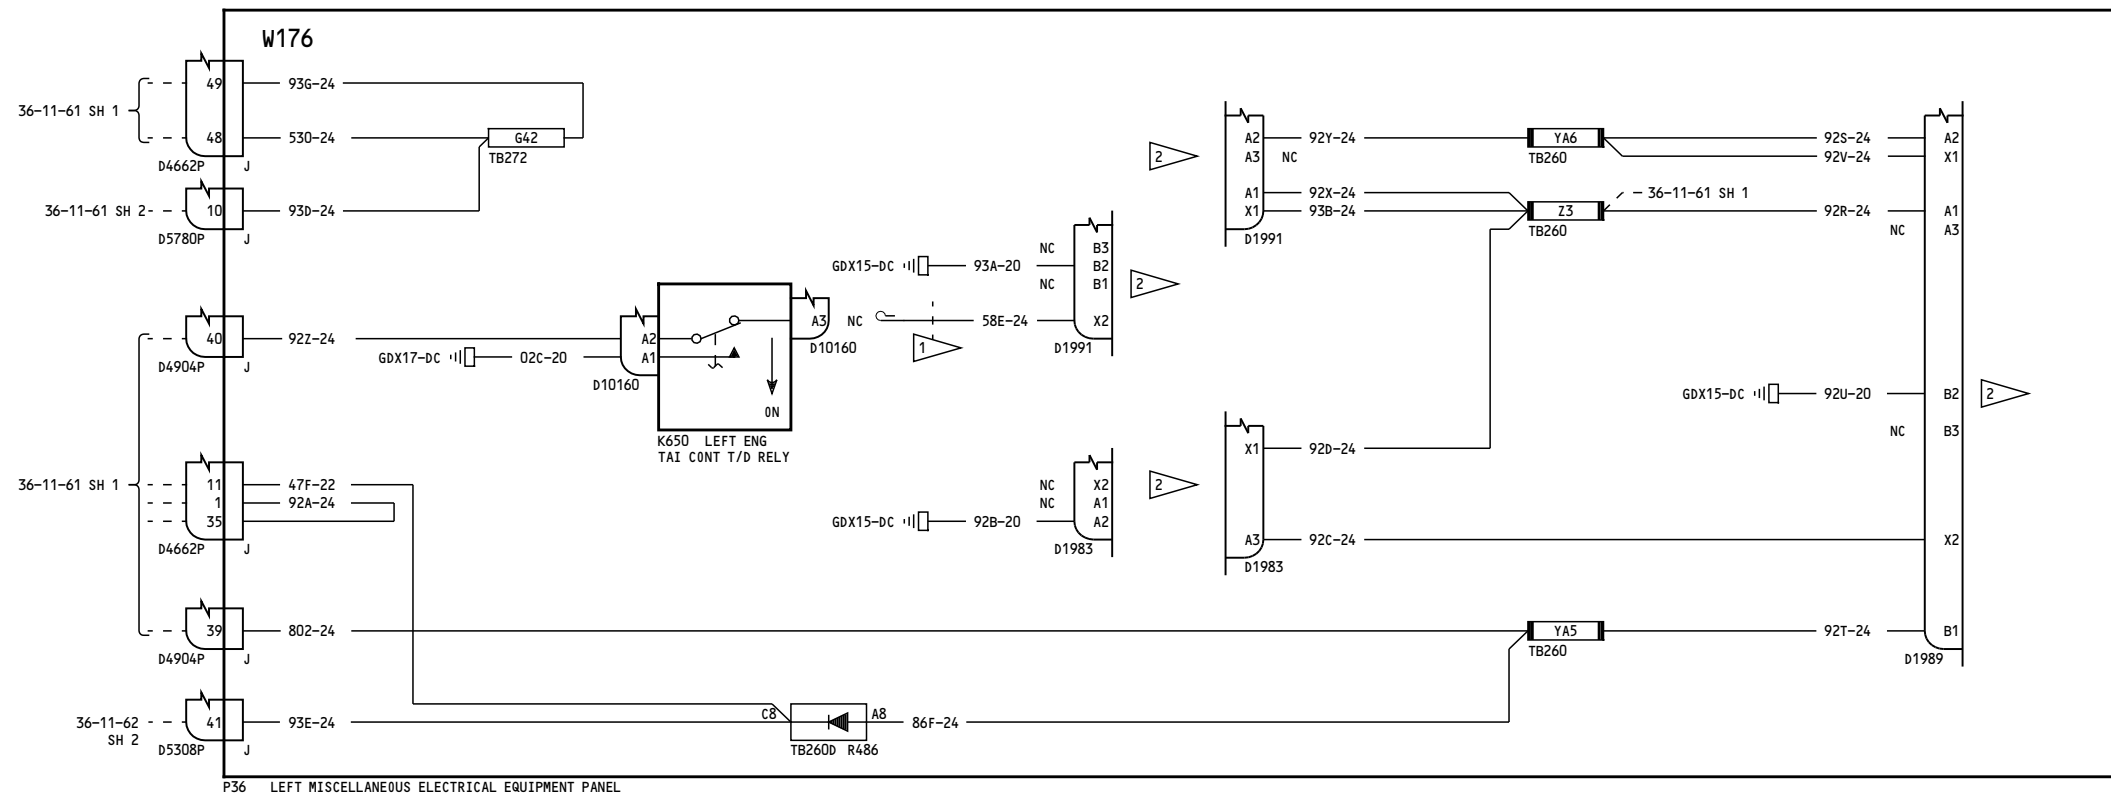

- NOTES:
- 1 CAP & STOW NEAR D10160
  - 2 CAP & STOW CONNECTOR WHEN MATING EQUIPMENT IS NOT INSTALLED.

050-051

**AIR SUPPLY BLEED AIR-  
LEFT ENGINE HIGH  
PRESSURE CONTROL**

D280T132


**36-11-61**

Page 1.1  
Sheet 3  
Jan 21/2005

- Incorporates
- 36-0026 R02
  - 36-0029 R05

**36-11-61**

Page 1.1  
Sheet 3  
Jan 21/2005

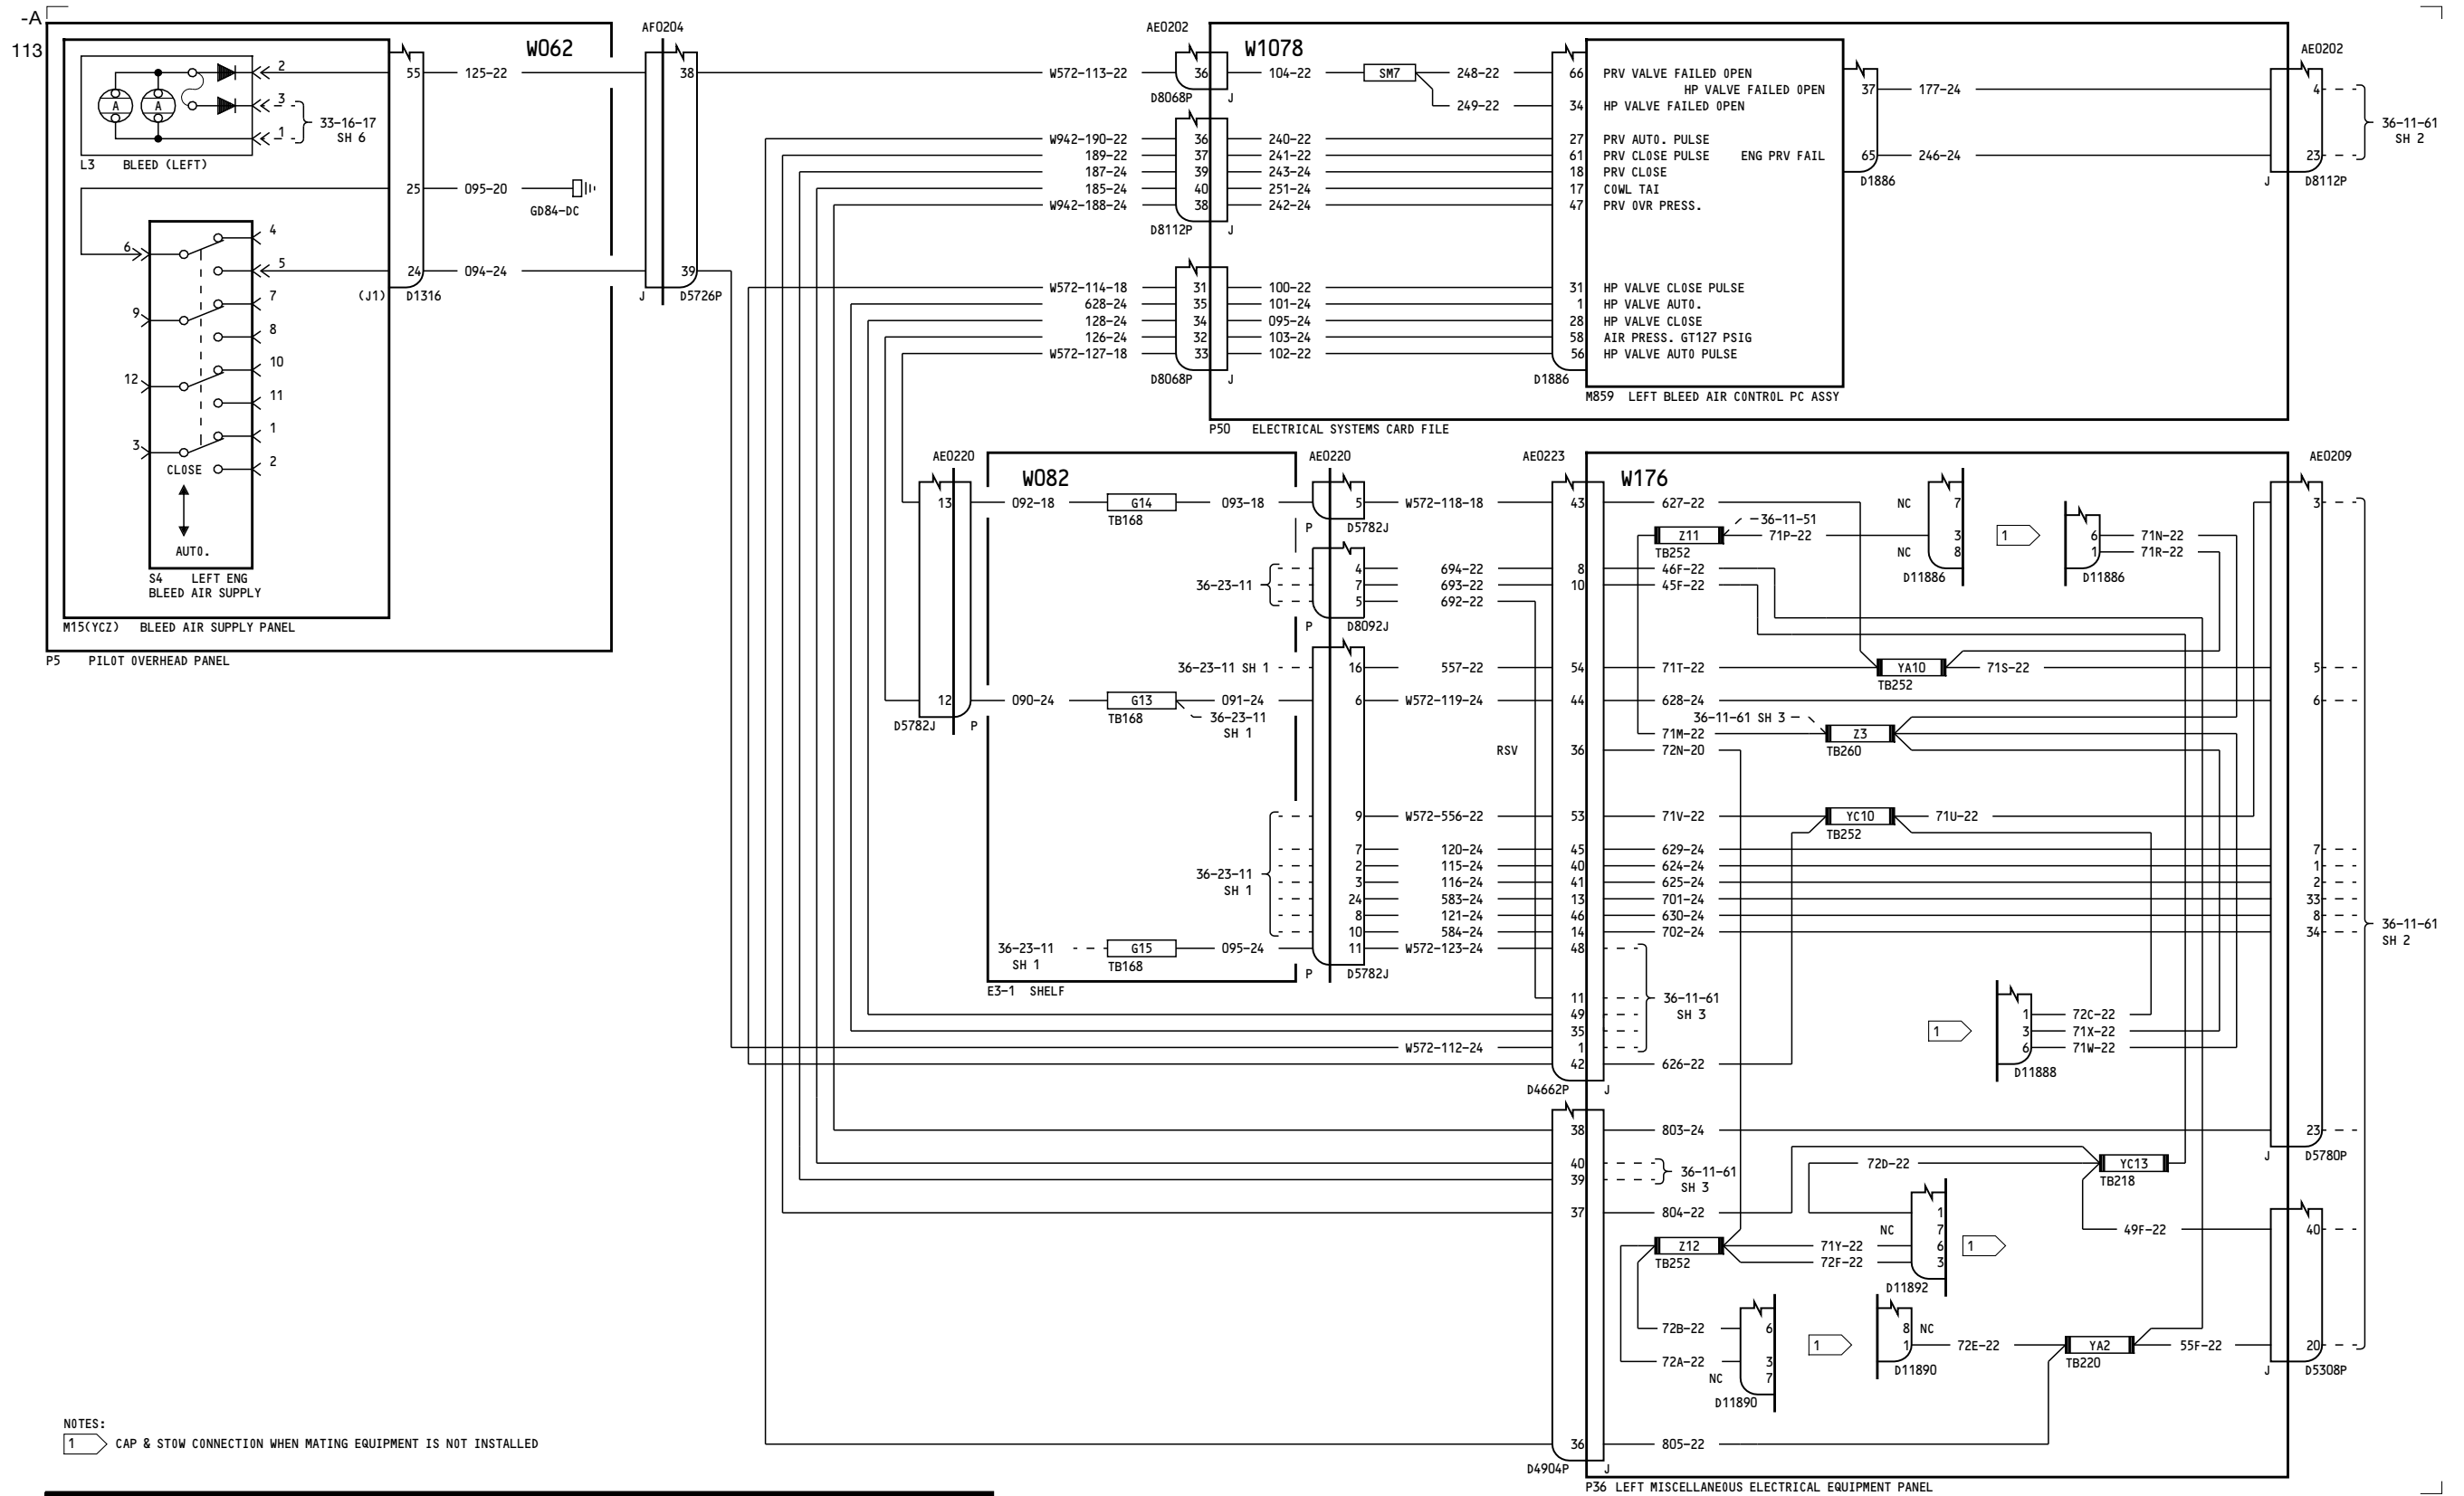

NOTES:  
 1 CAP & STOW CONNECTION WHEN MATING EQUIPMENT IS NOT INSTALLED

050-051

**AIR SUPPLY BLEED AIR-  
 LEFT ENGINE HIGH  
 PRESSURE CONTROL**

D280T132


**36-11-61**

Page 1.2  
 Sheet 1  
 Feb 06/2009

- Incorporates
- ▶ 36-0026
  - ▶ 36-0026 R02
  - ▶ 36-0029 R05

**36-11-61**

Page 1.2  
 Sheet 1  
 Feb 06/2009

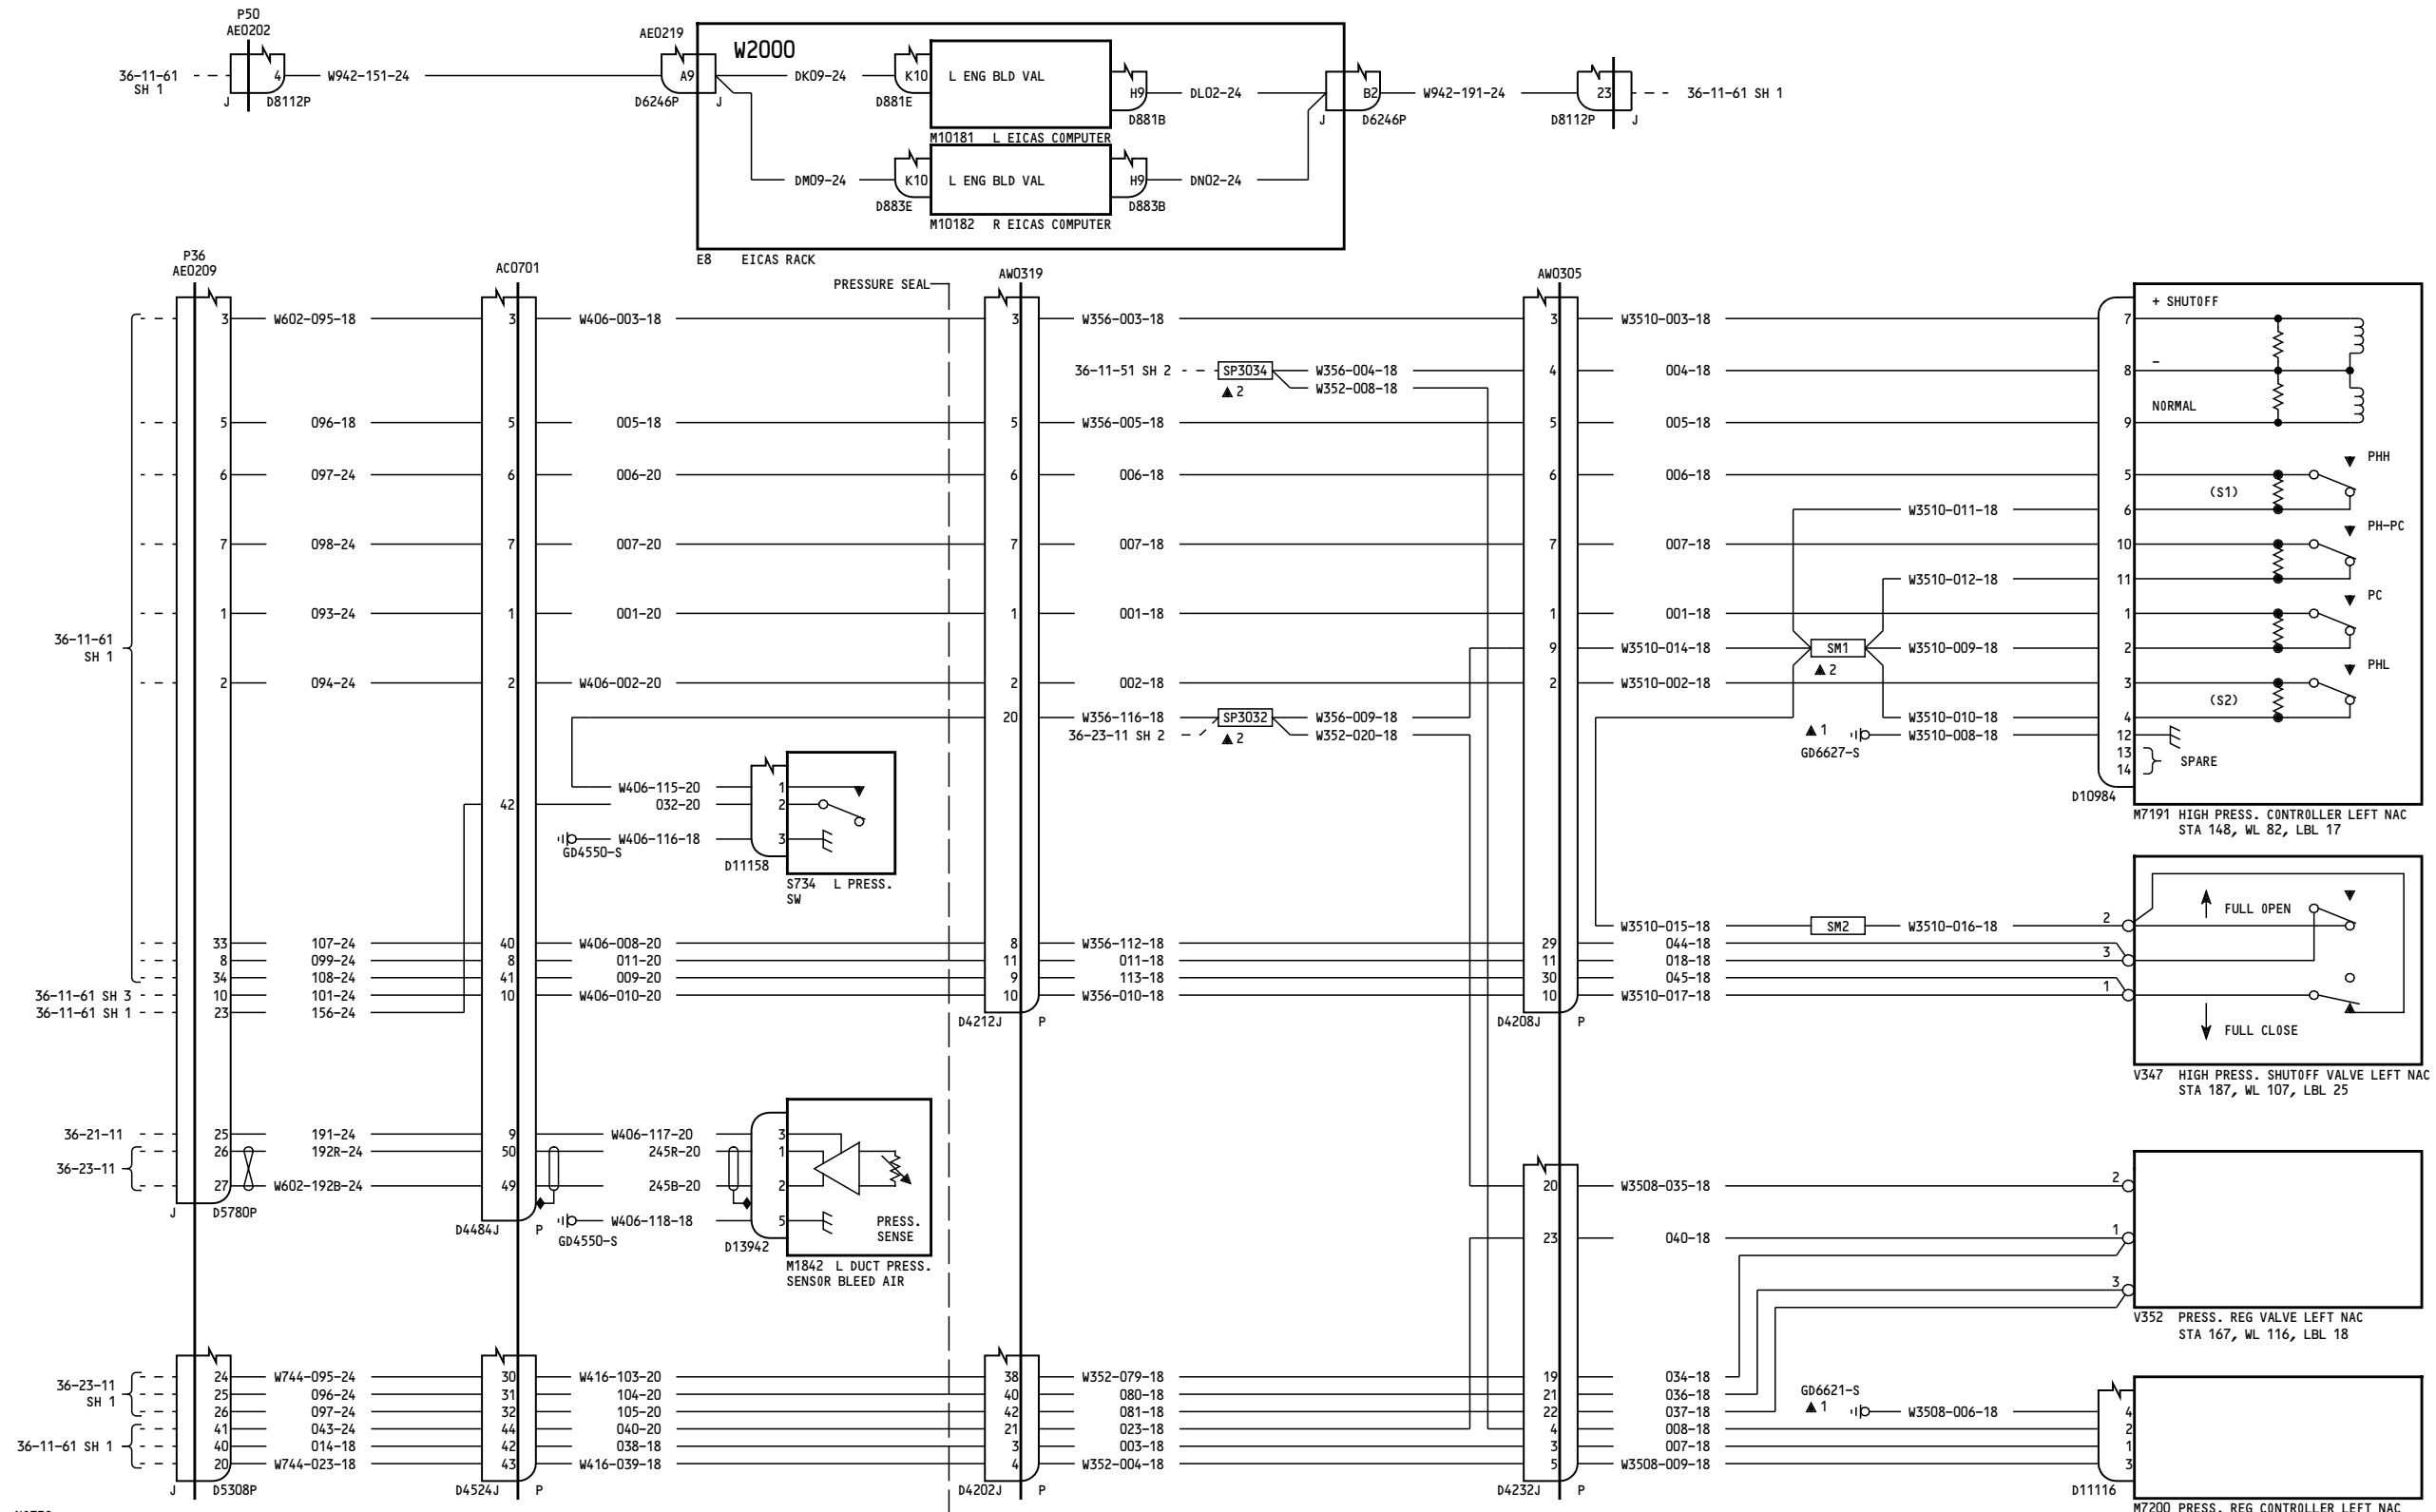

NOTES:  
SHIELD PIGTAIL TO DISCONNECT BACKSHELL 2 INCHES MAXIMUM

050-051

**AIR SUPPLY BLEED AIR-  
LEFT ENGINE HIGH  
PRESSURE CONTROL**

D280T132


**36-11-61**

Page 1.2  
Sheet 2  
Feb 06/2009

Incorporates  
36-0029 R05  
36-0053

**36-11-61**

Page 1.2  
Sheet 2  
Feb 06/2009

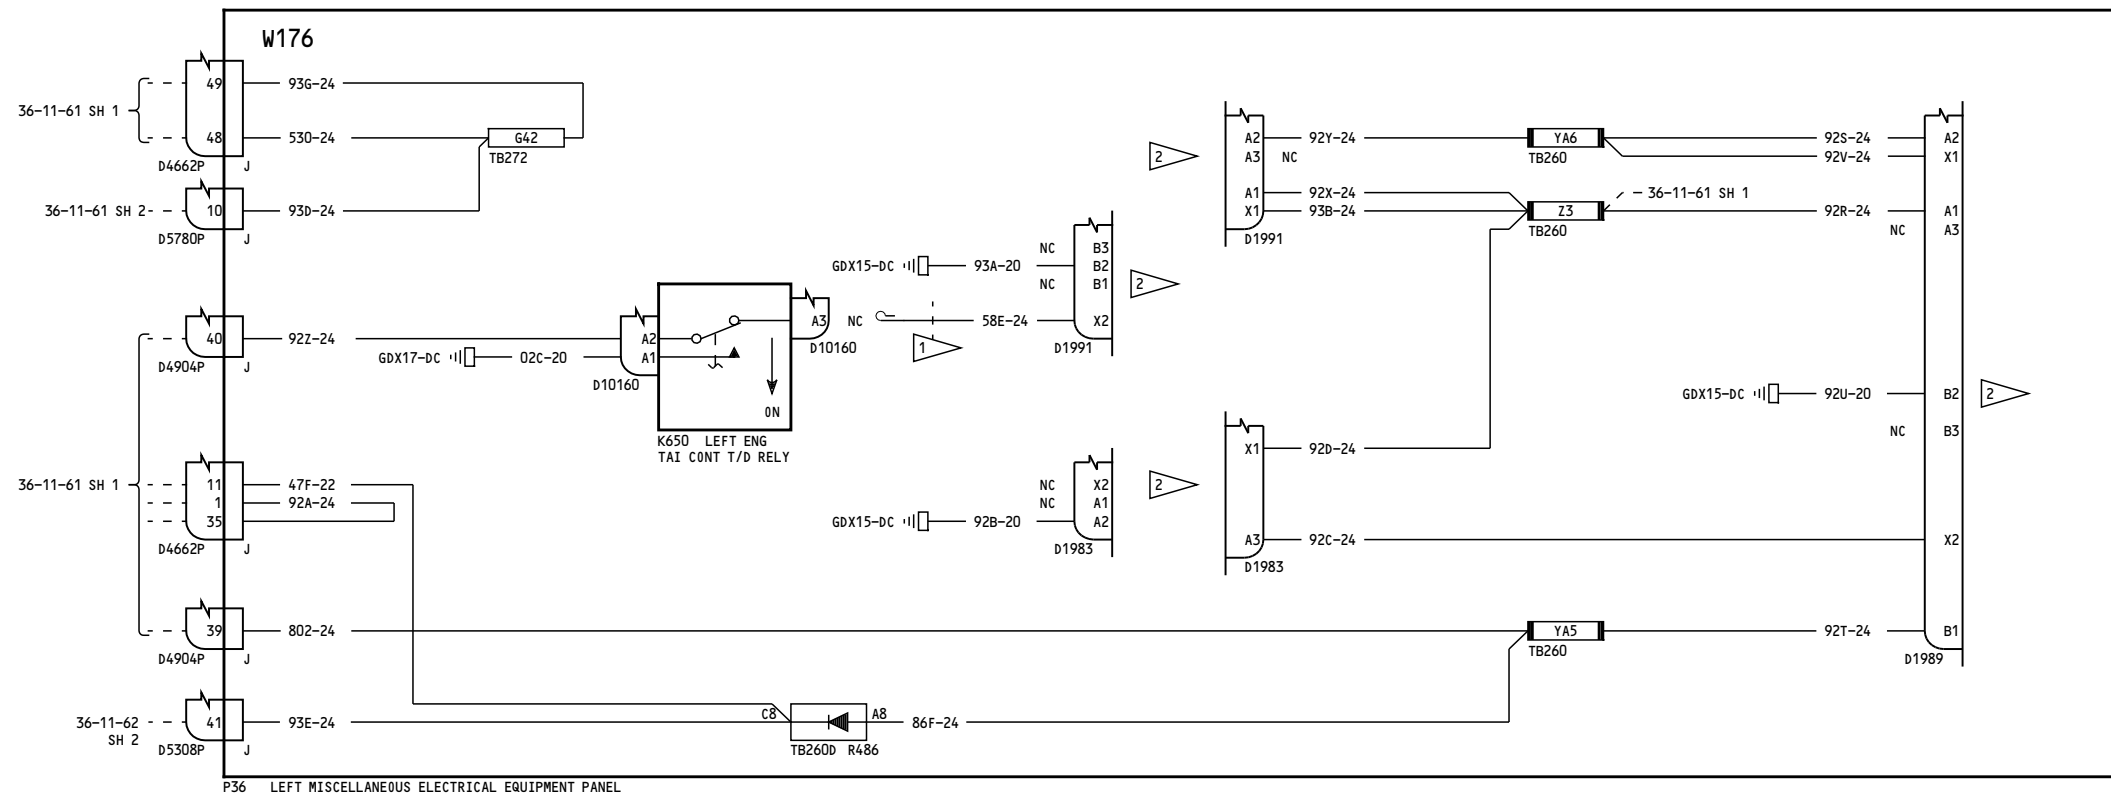

- NOTES:
- 1 CAP & STOW NEAR D10160
  - 2 CAP & STOW CONNECTOR WHEN MATING EQUIPMENT IS NOT INSTALLED.

050-051

**AIR SUPPLY BLEED AIR-  
LEFT ENGINE HIGH  
PRESSURE CONTROL**

D280T132


**36-11-61**

Page 1.2  
Sheet 3  
Feb 06/2009

- Incorporates
- 36-0026 R02
  - 36-0029 R05

**36-11-61**

Page 1.2  
Sheet 3  
Feb 06/2009

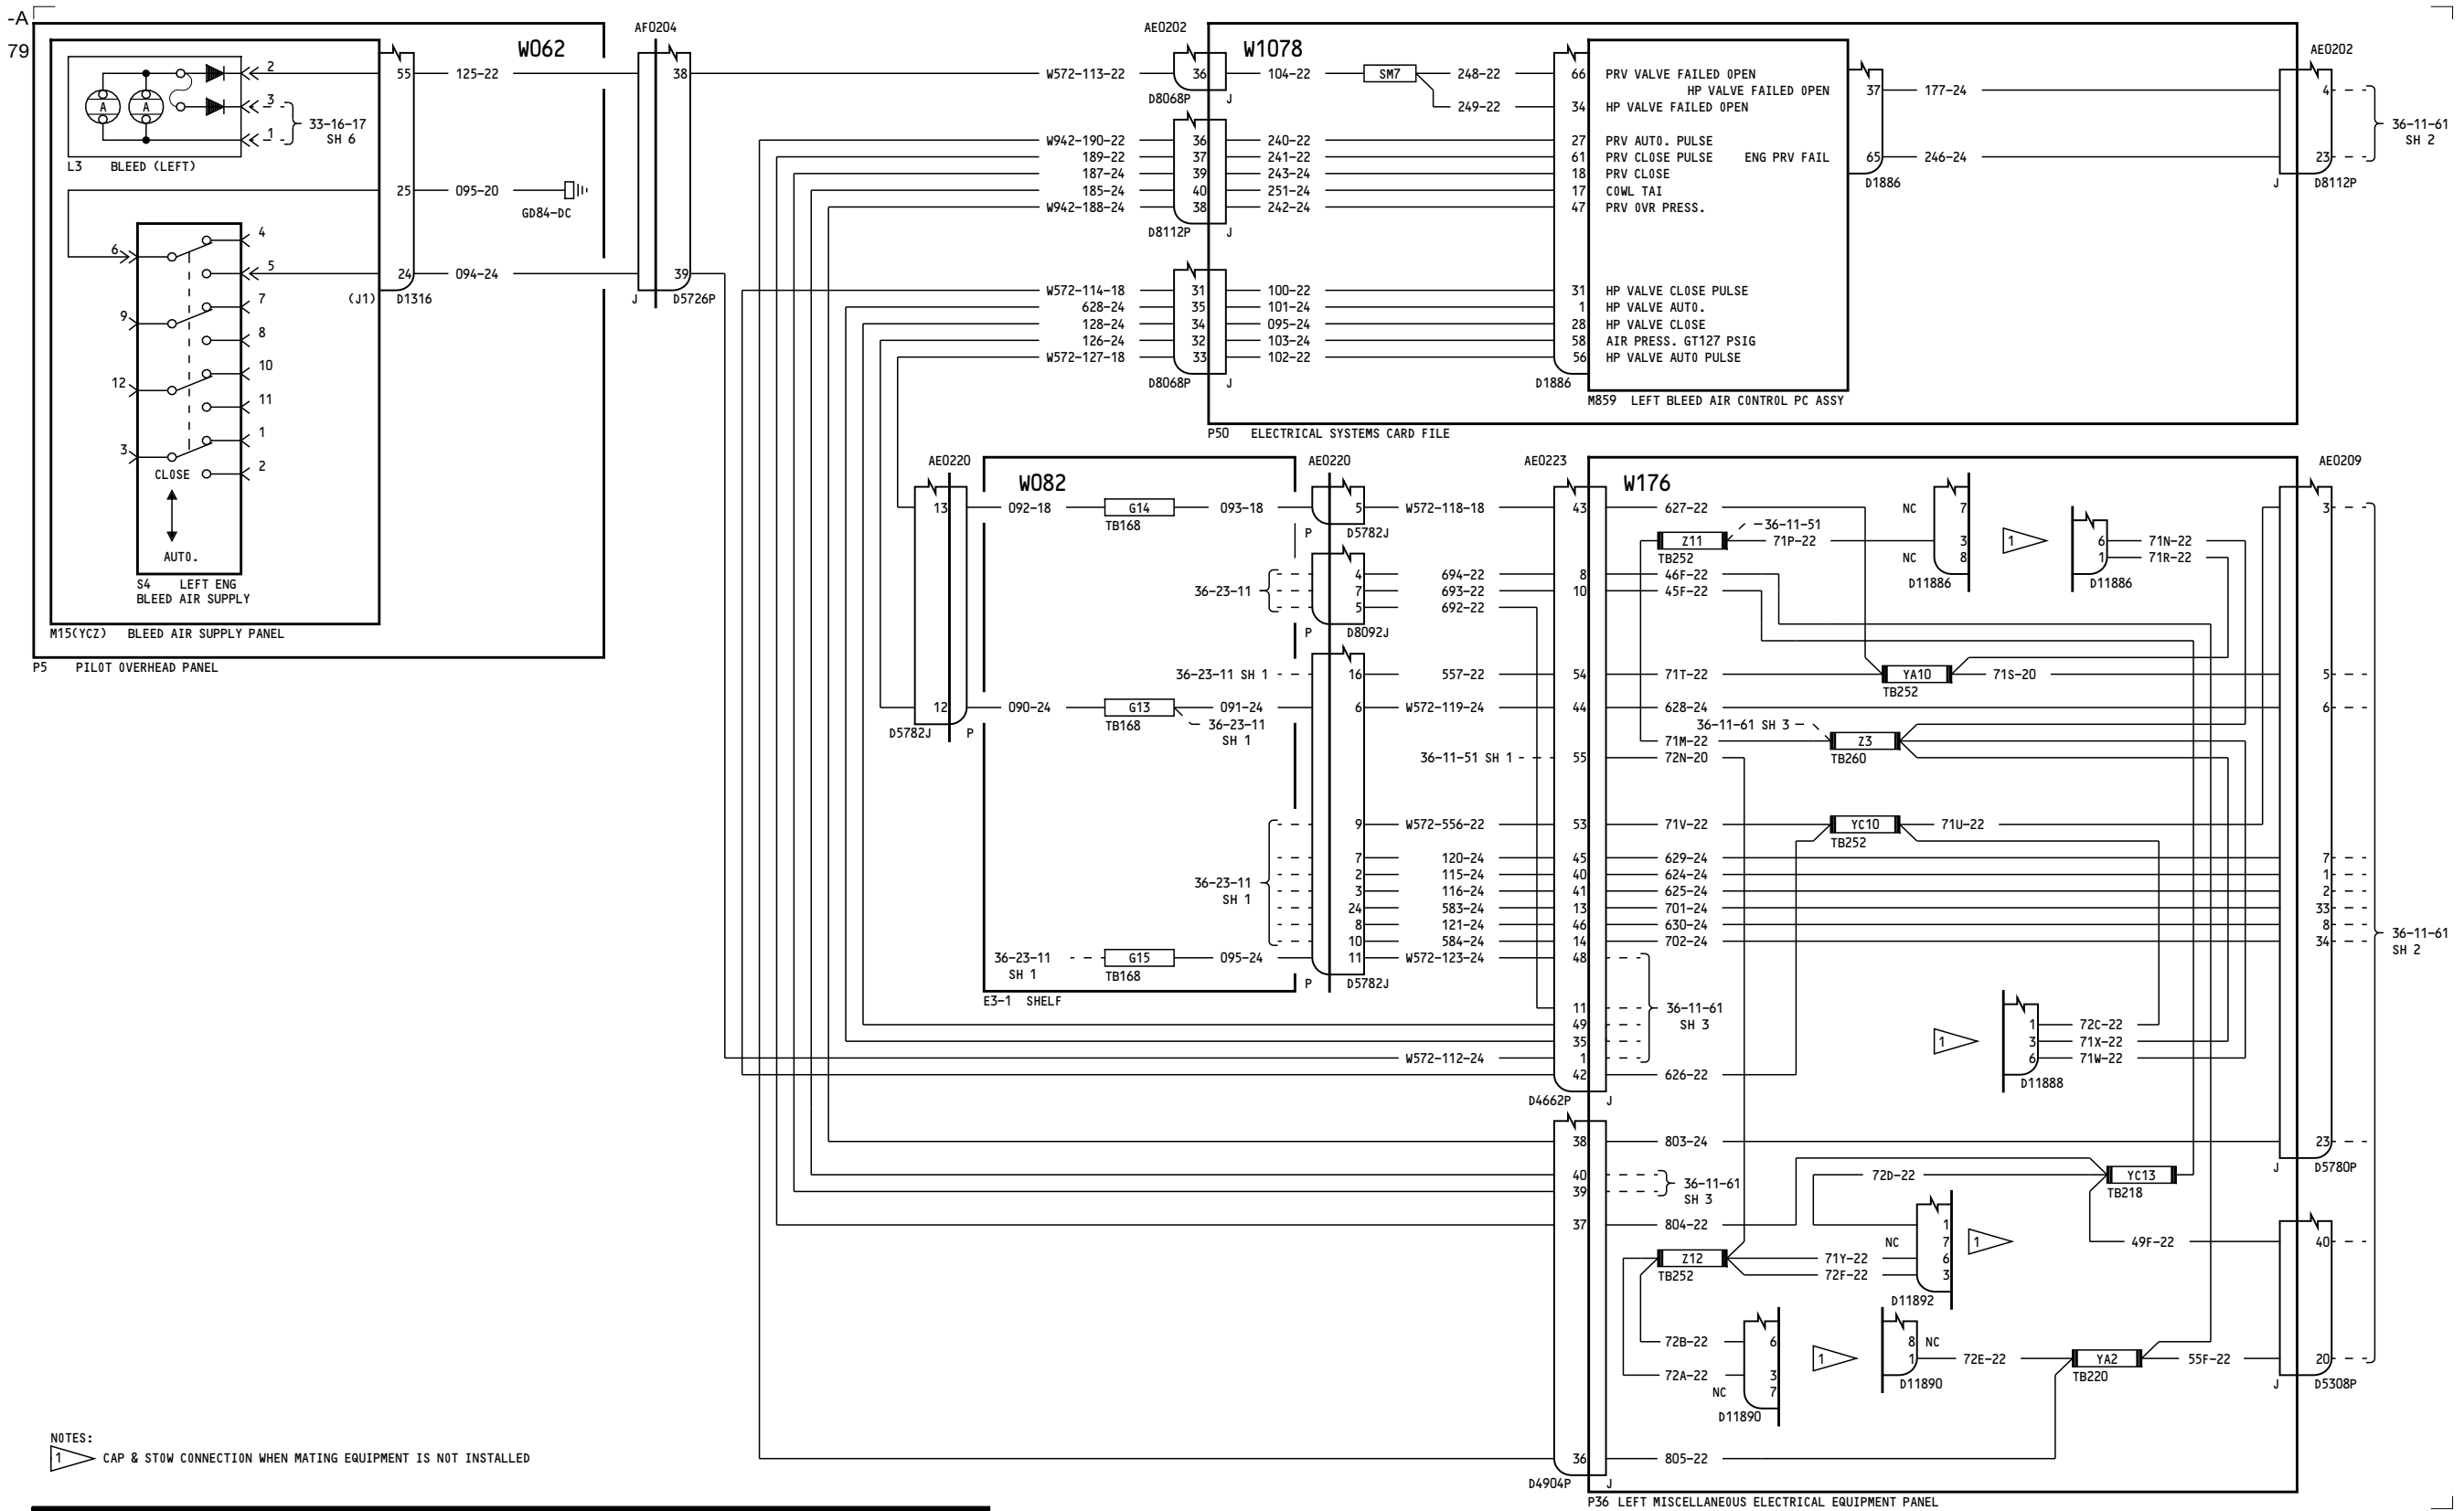

NOTES:  
 1 CAP & STOW CONNECTION WHEN MATING EQUIPMENT IS NOT INSTALLED

150-154

**AIR SUPPLY BLEED AIR-  
 LEFT ENGINE HIGH  
 PRESSURE CONTROL**

D280T132

**36-11-61**


Page 2.1  
 Sheet 1  
 Jan 21/2005

- Incorporates
- ▶ 36-0026
  - ▶ 36-0026 R02
  - ▶ 36-0027
  - ▶ 36-0029 R05

**36-11-61**

Page 2.1  
 Sheet 1  
 Jan 21/2005

-A  
80

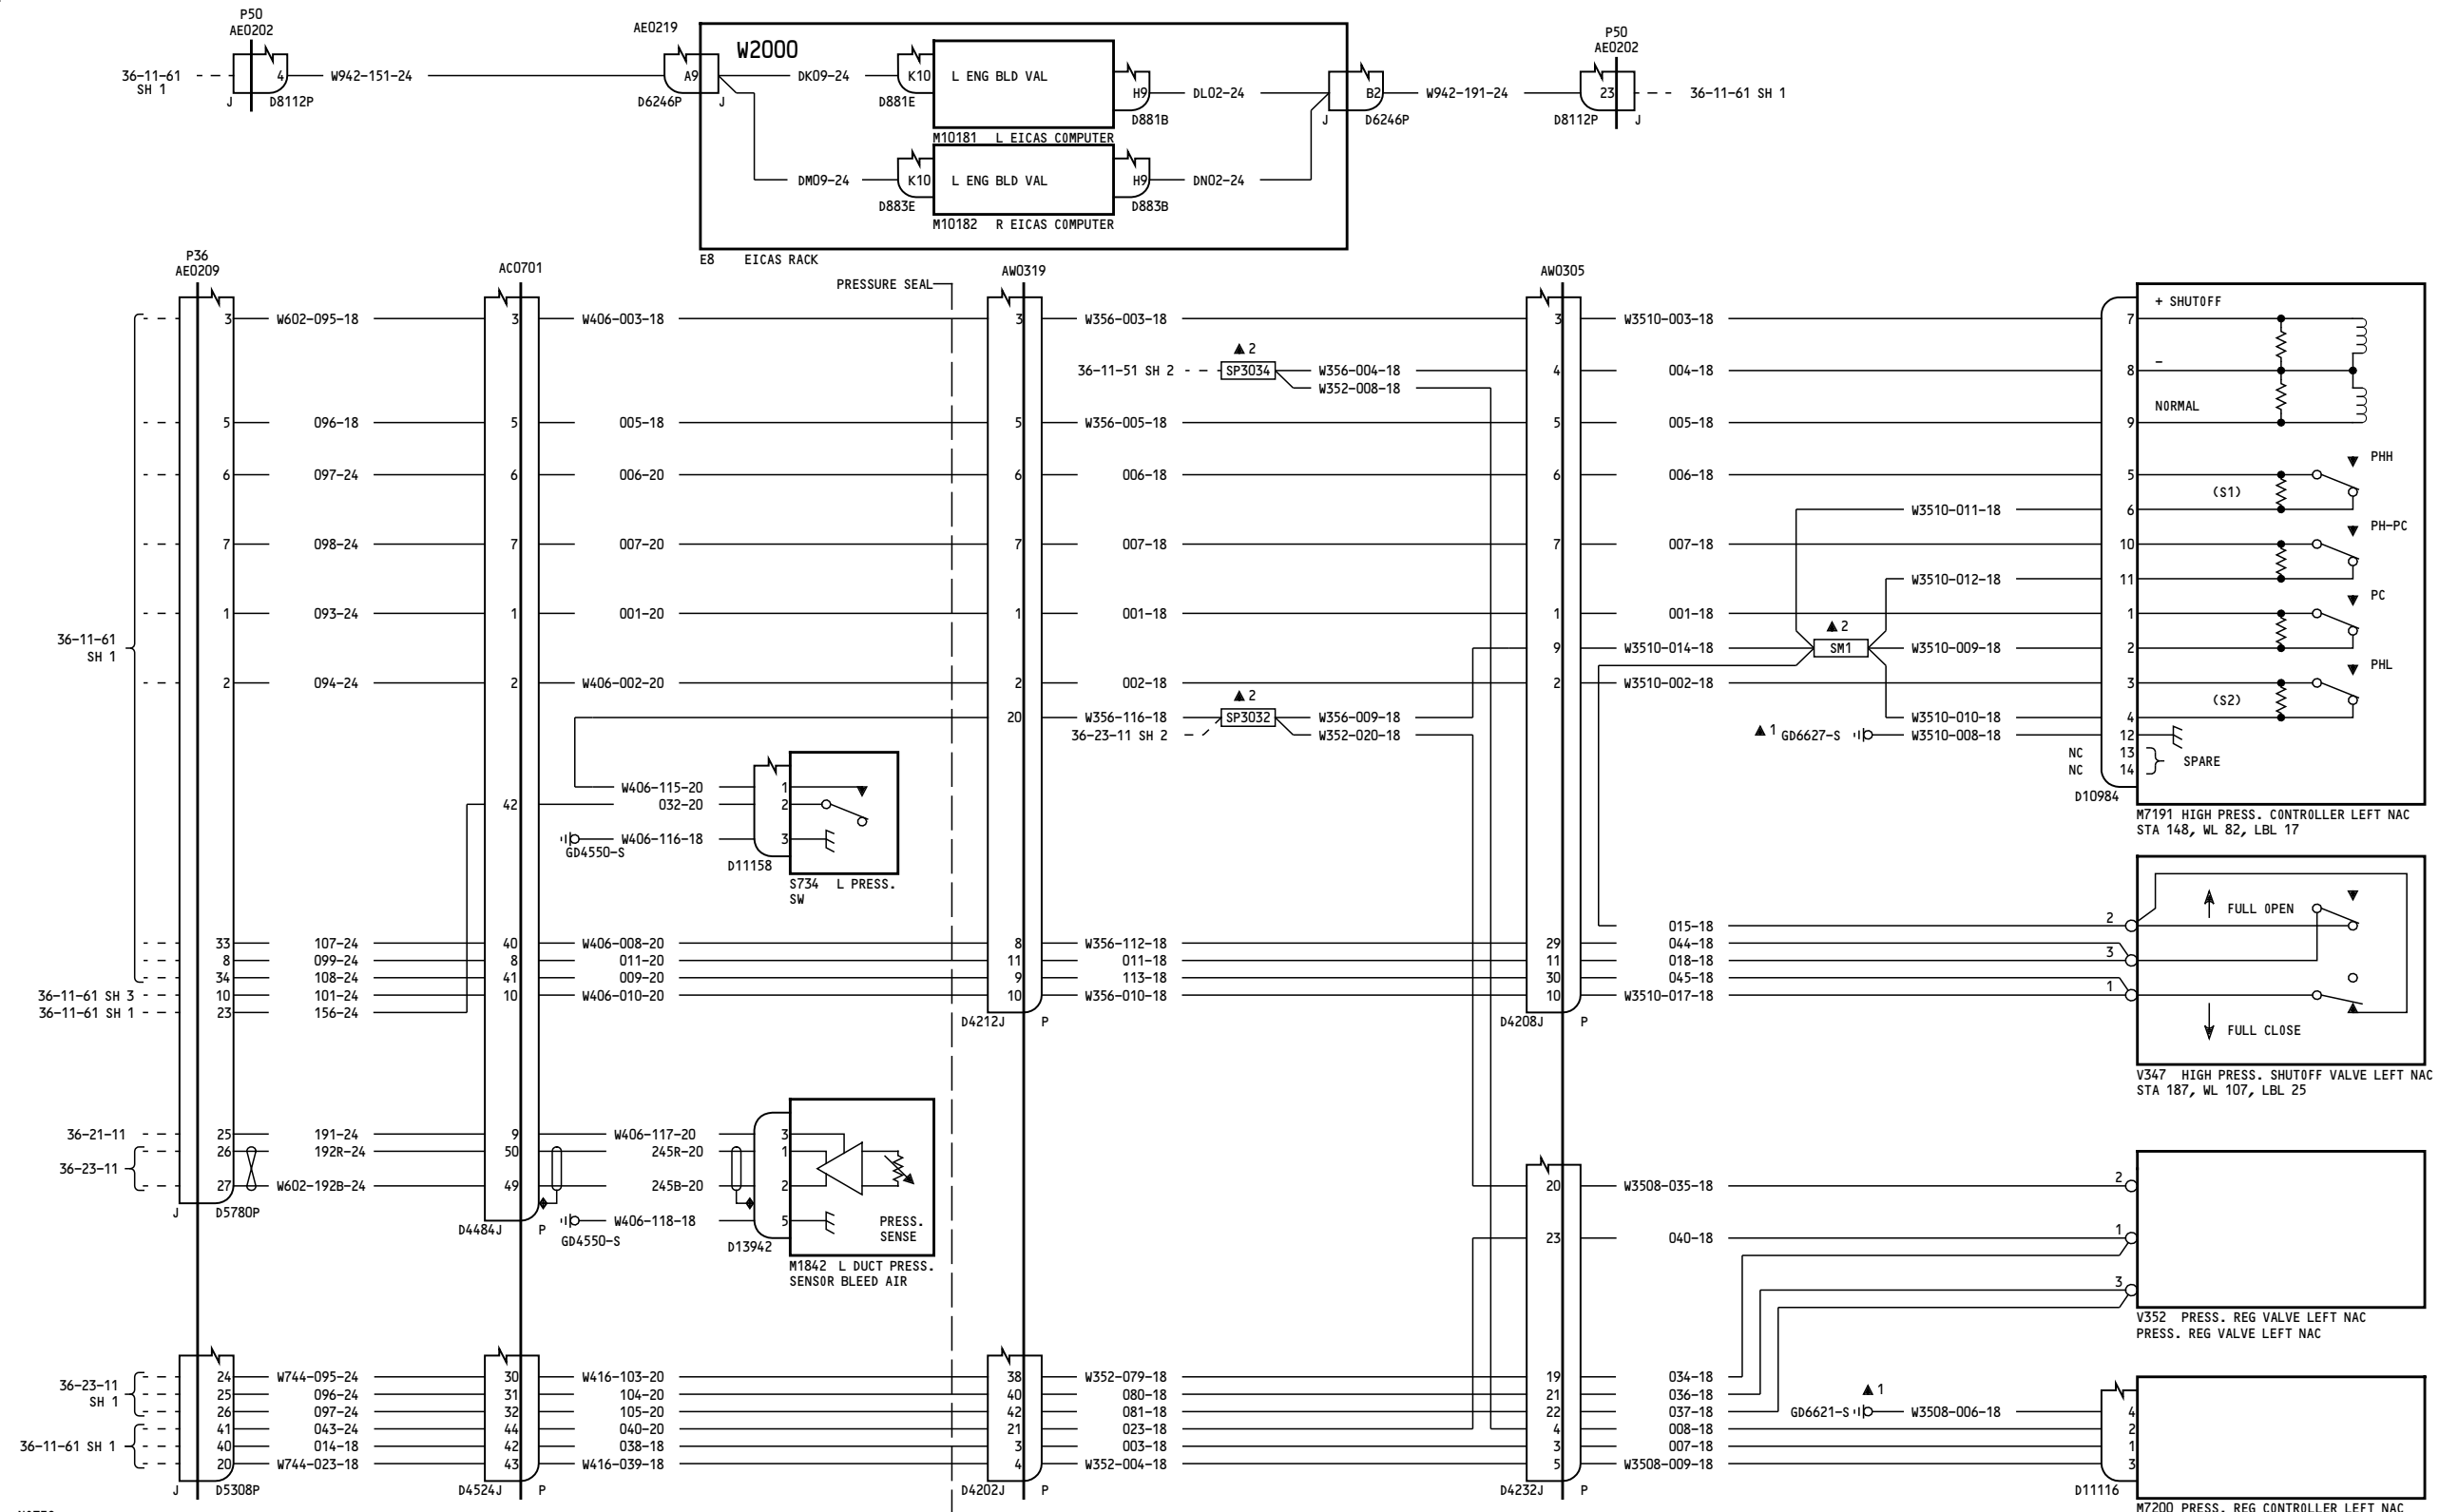

NOTES:  
SHIELD PIGTAIL TO DISCONNECT BACKSHELL 2 INCHES MAXIMUM

150-154

**AIR SUPPLY BLEED AIR-  
LEFT ENGINE HIGH  
PRESSURE CONTROL**

D280T132


**36-11-61**

Page 2.1  
Sheet 2  
Jan 21/2005

Incorporates  
36-0029 R05

**36-11-61**

Page 2.1  
Sheet 2  
Jan 21/2005

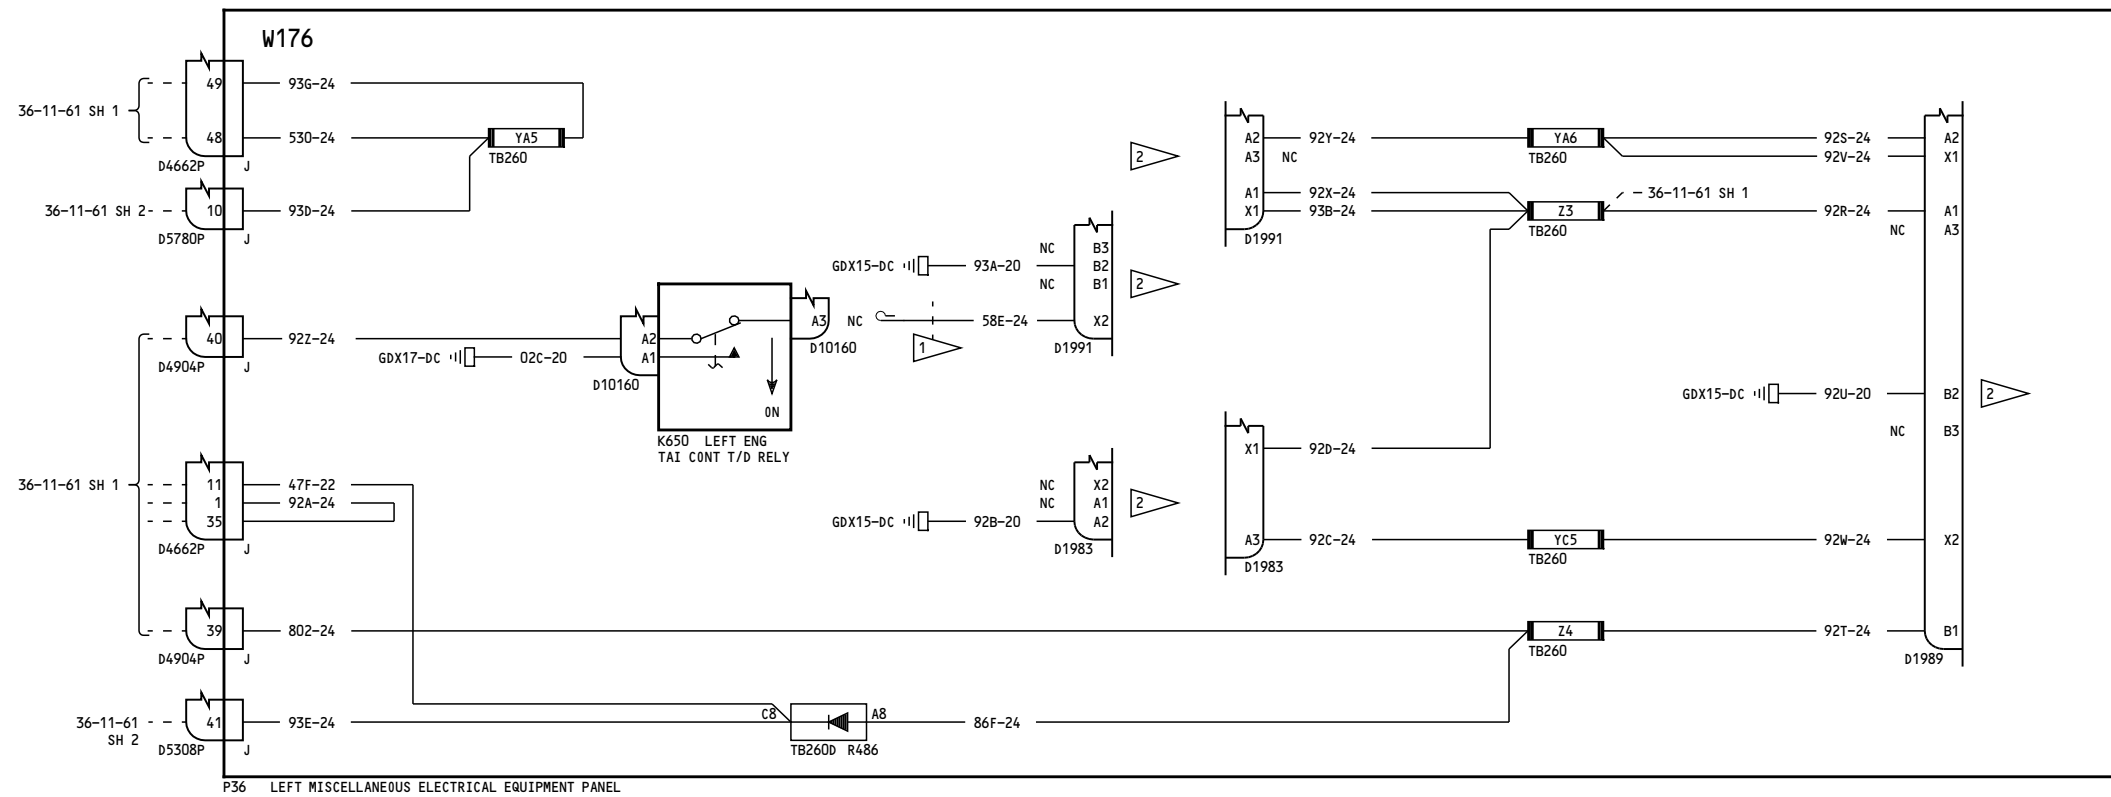

- NOTES:
- 1 CAP & STOW NEAR D10160
  - 2 CAP & STOW CONNECTOR WHEN MATING EQUIPMENT IS NOT INSTALLED.

150-154

**AIR SUPPLY BLEED AIR-  
LEFT ENGINE HIGH  
PRESSURE CONTROL**

D280T132

**36-11-61**


Page 2.1  
Sheet 3  
Jan 21/2005

- Incorporates
- 36-0026
  - 36-0026 R02
  - 36-0027
  - 36-0029 R05

**36-11-61**

Page 2.1  
Sheet 3  
Jan 21/2005



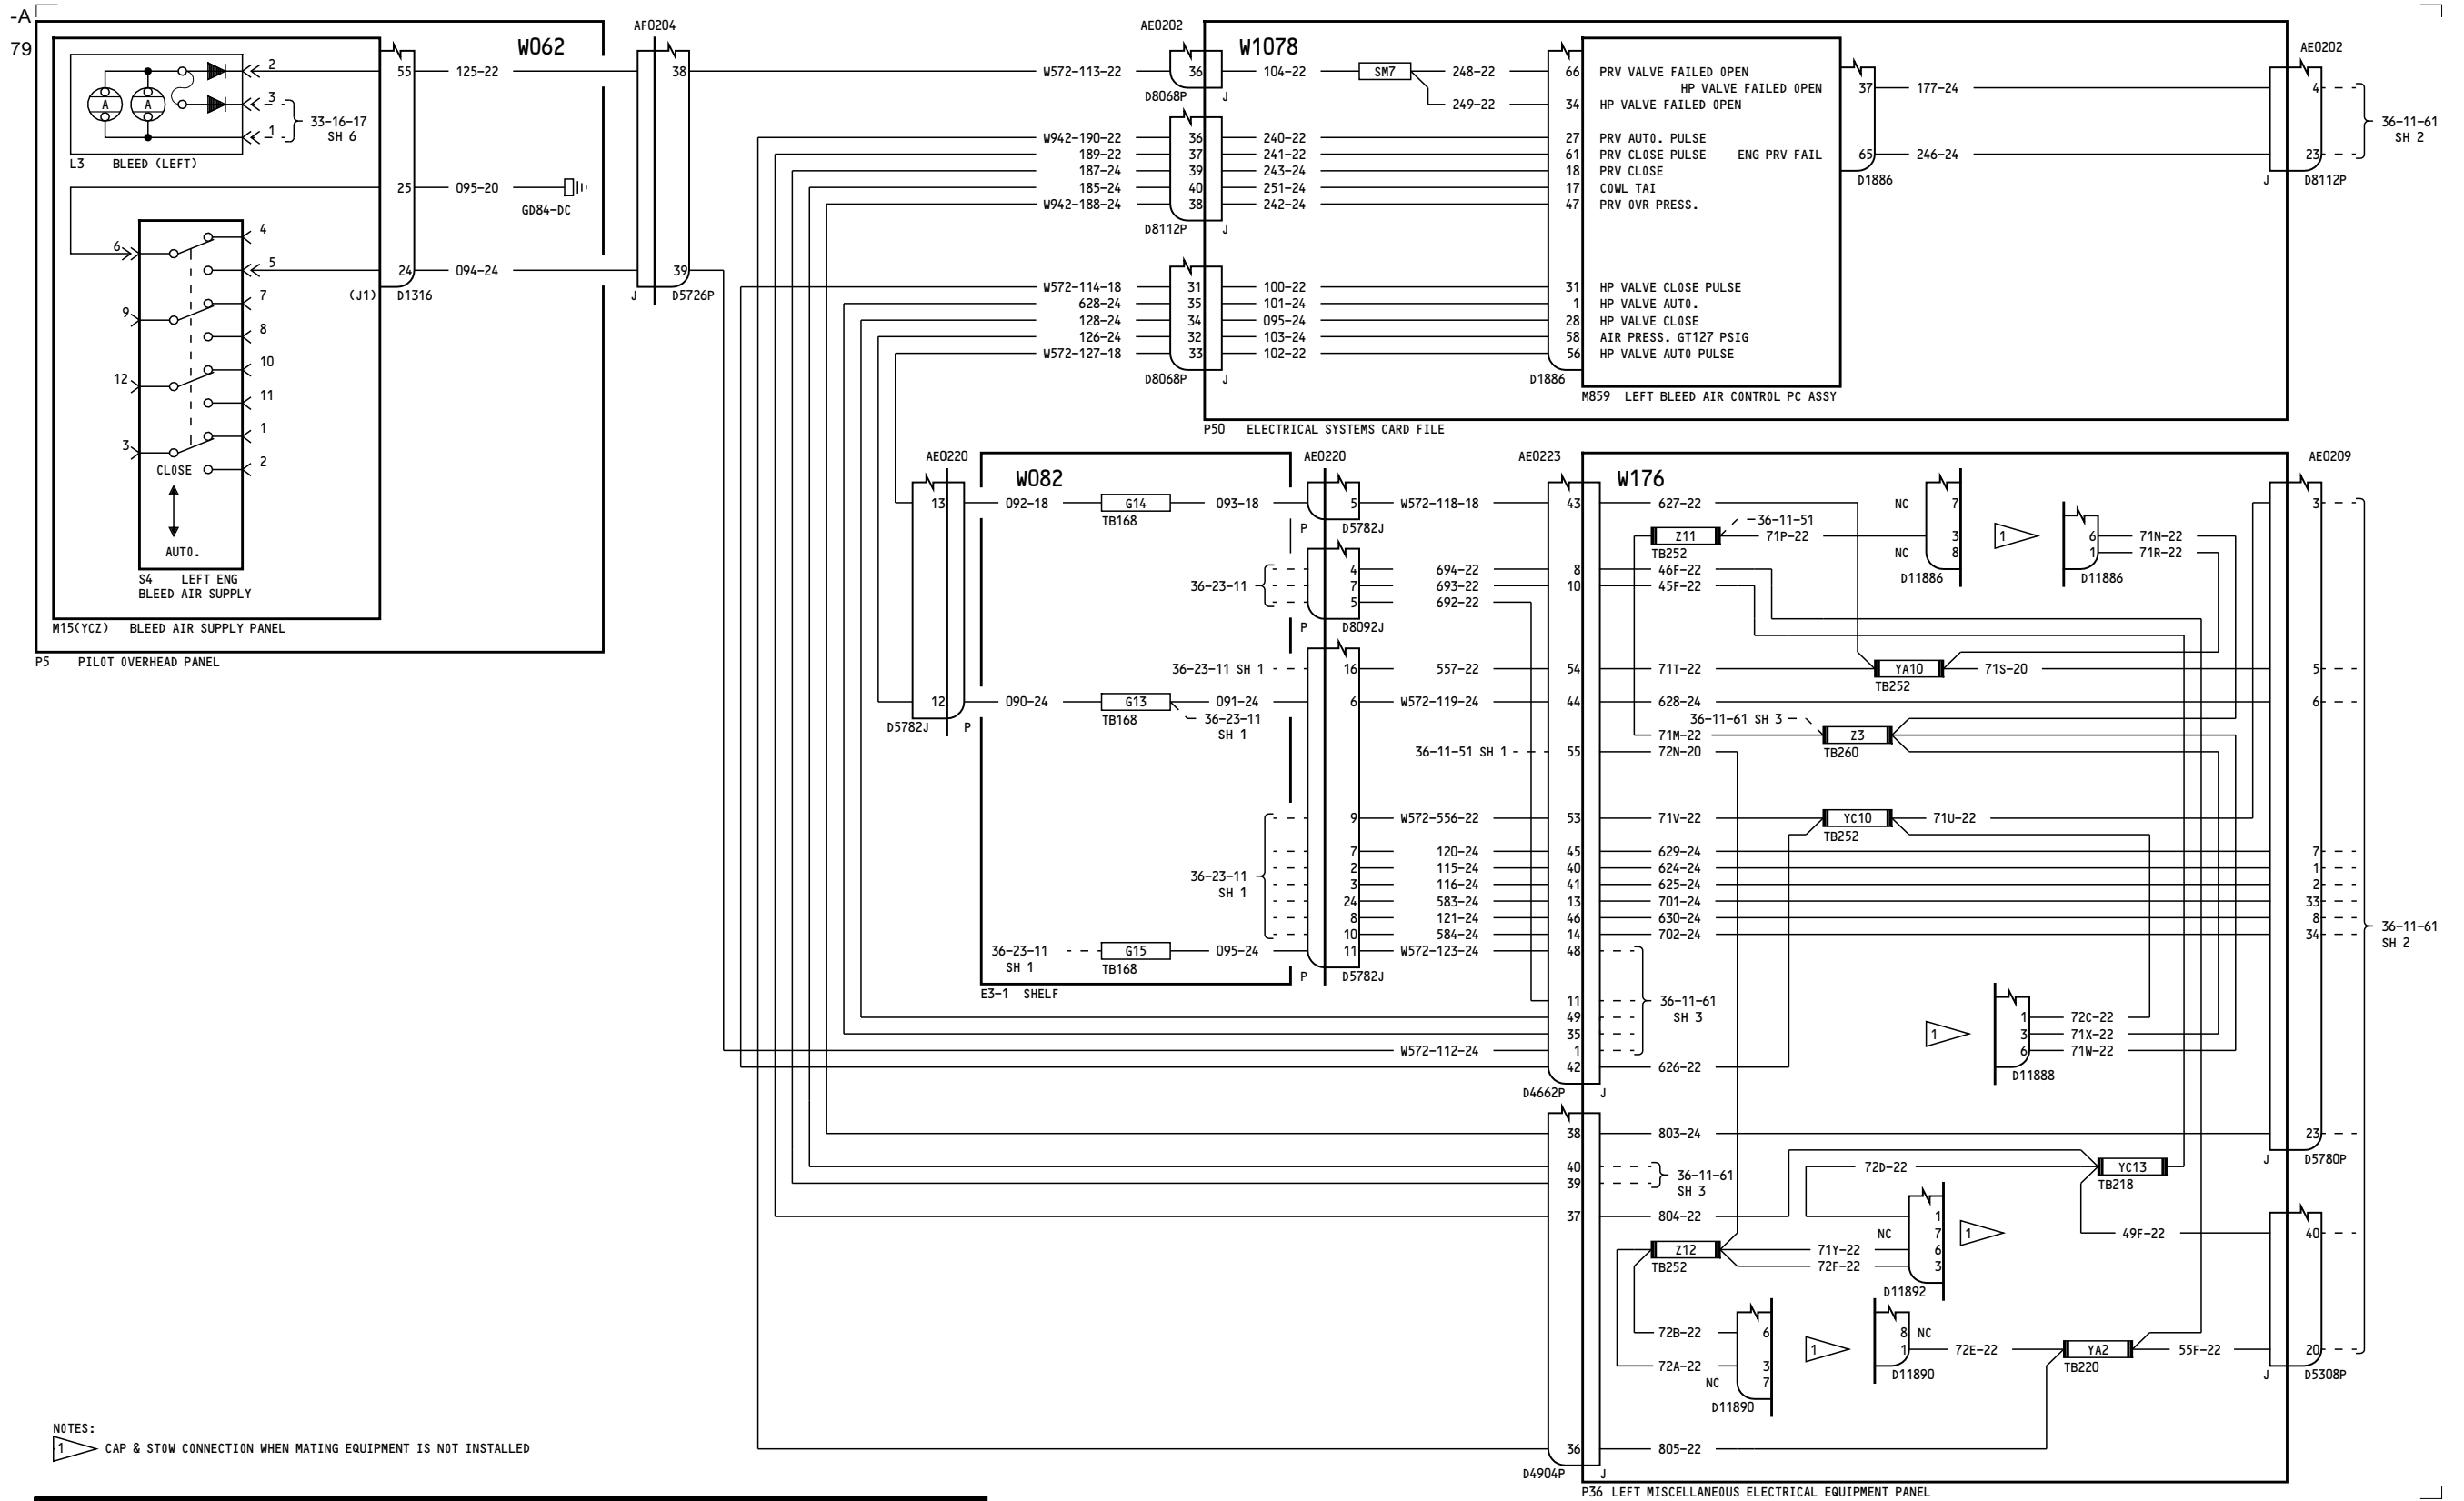

NOTES:  
 1 CAP & STOW CONNECTION WHEN MATING EQUIPMENT IS NOT INSTALLED

150-154

**AIR SUPPLY BLEED AIR-  
 LEFT ENGINE HIGH  
 PRESSURE CONTROL**

**36-11-61**


Page 2.2  
 Sheet 1  
 Feb 06/2009

D280T132

- Incorporates
- ▶ 36-0026
  - ▶ 36-0026 R02
  - ▶ 36-0027
  - ▶ 36-0029 R05

**36-11-61**

Page 2.2  
 Sheet 1  
 Feb 06/2009

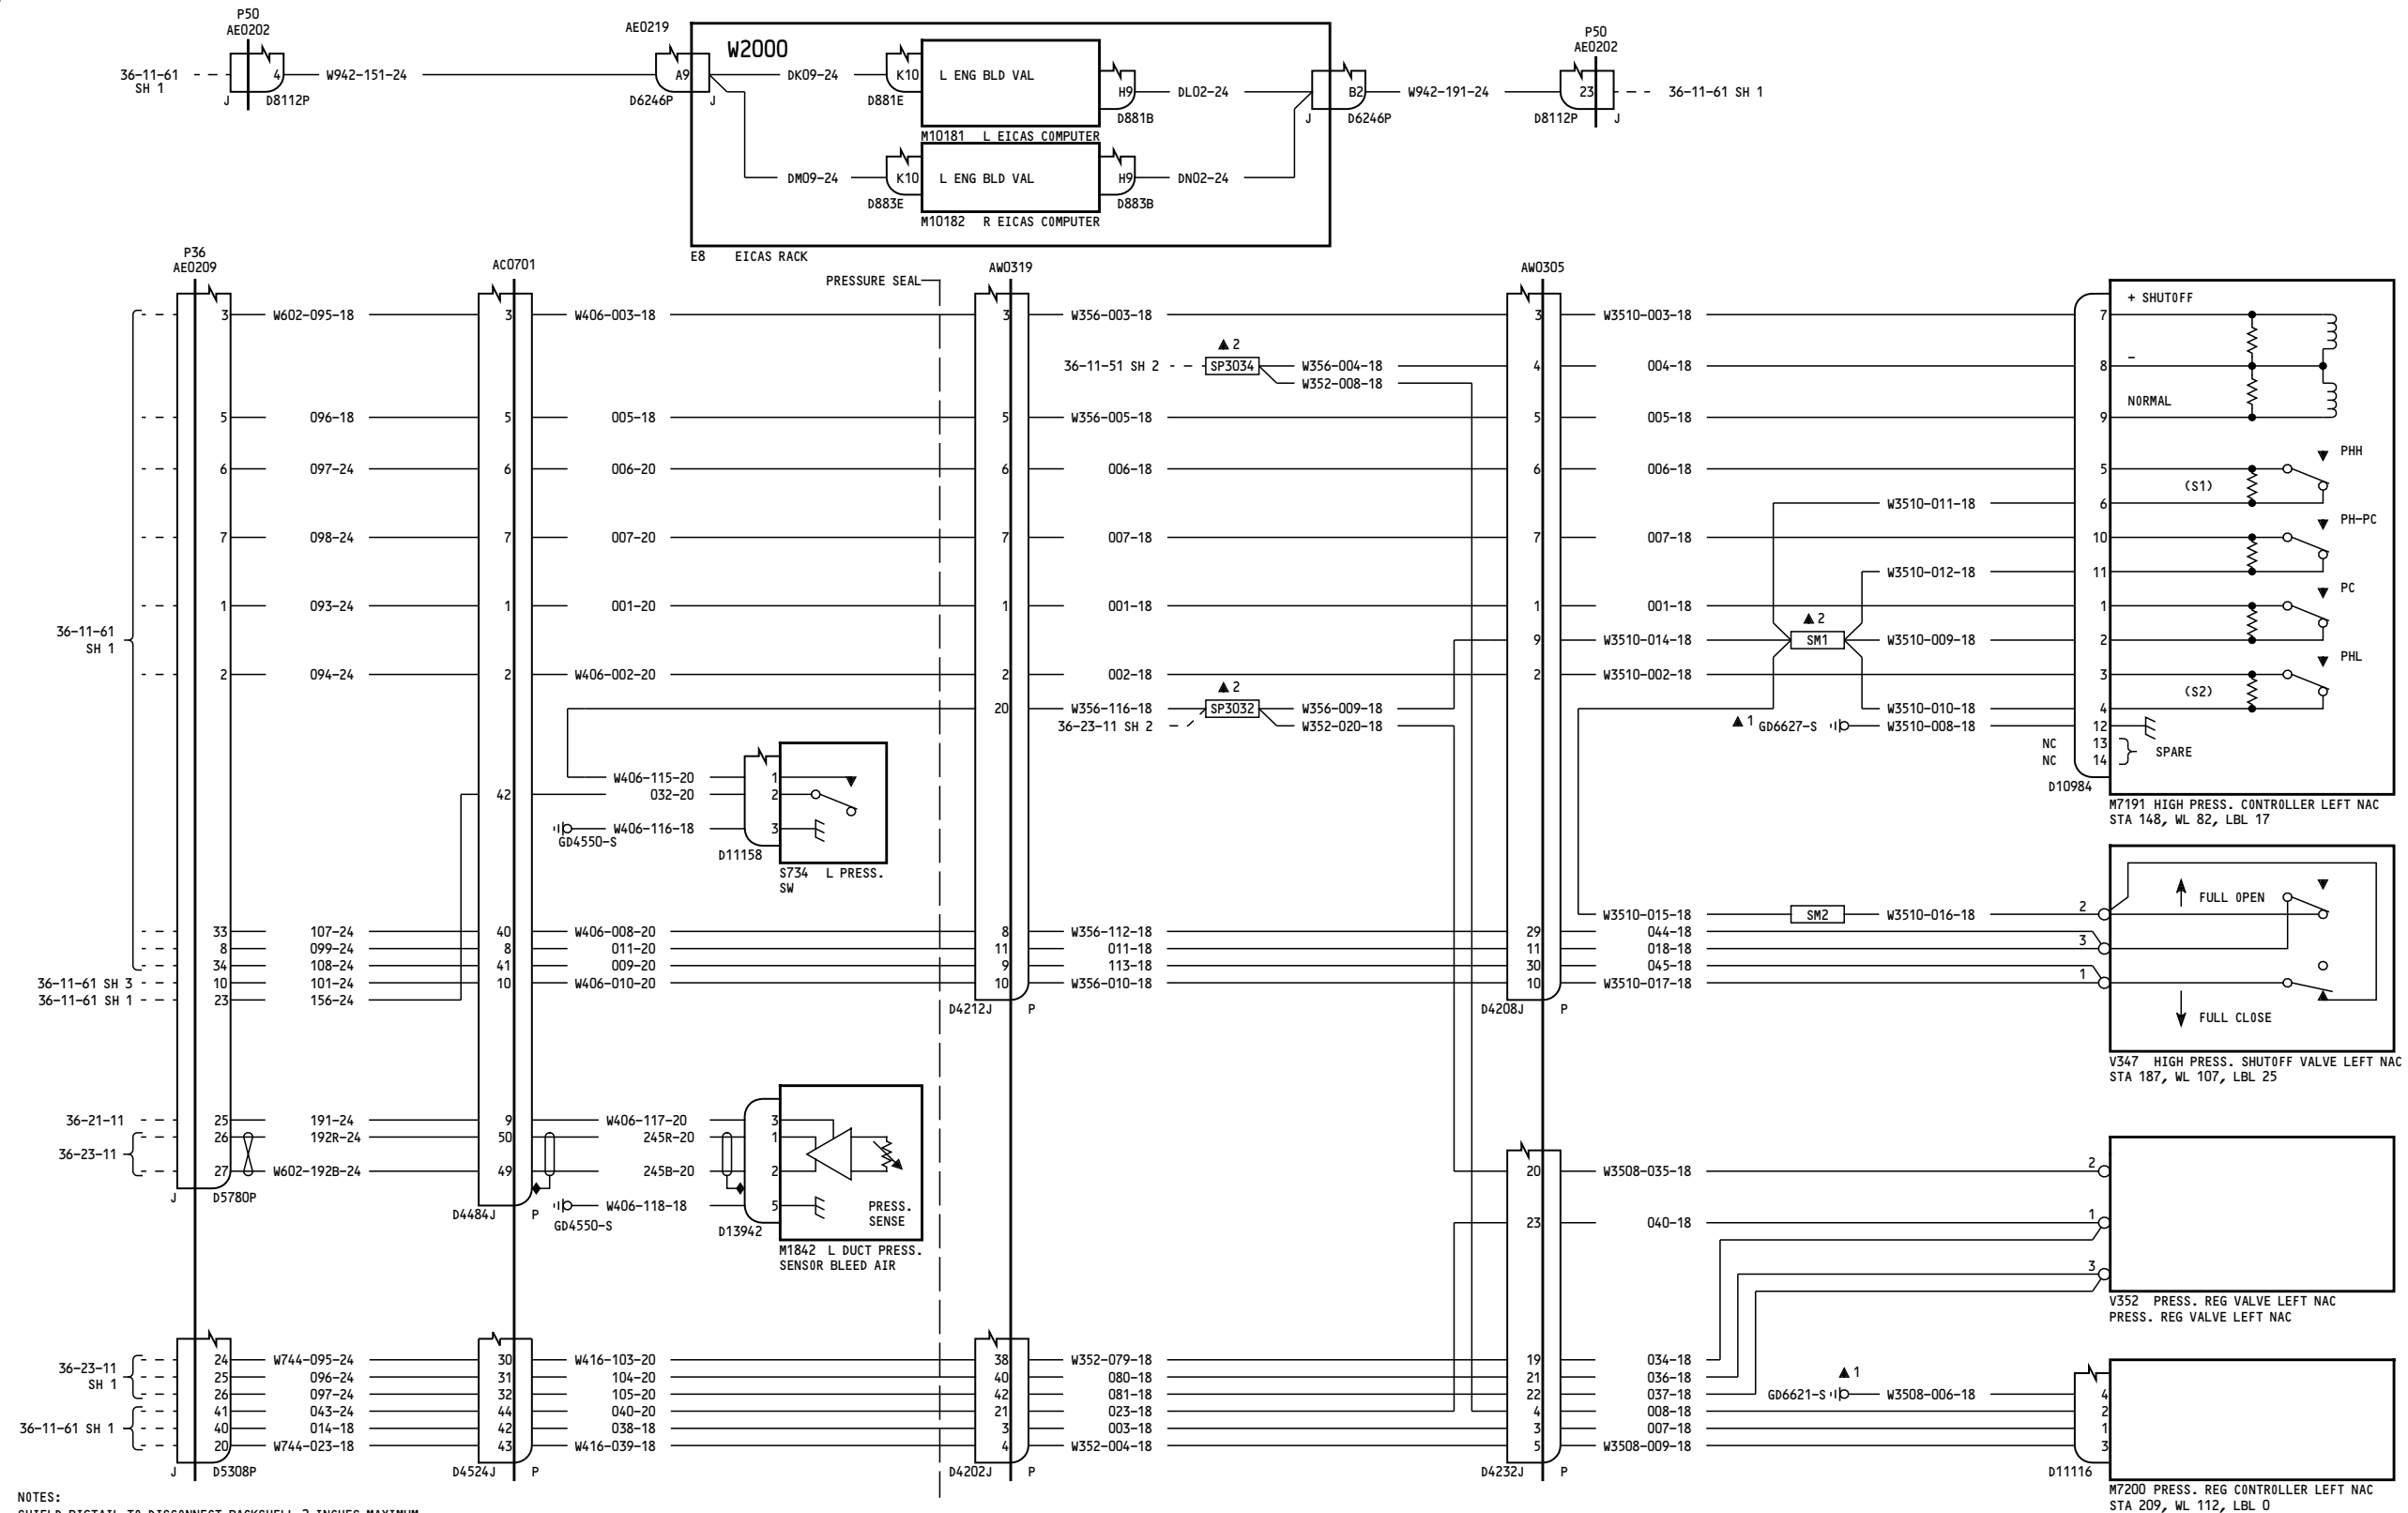

NOTES:  
SHIELD PIGTAIL TO DISCONNECT BACKSHELL 2 INCHES MAXIMUM

150-154

**AIR SUPPLY BLEED AIR-  
LEFT ENGINE HIGH  
PRESSURE CONTROL**

D280T132


**36-11-61**

Page 2.2  
Sheet 2  
Feb 06/2009

Incorporates  
36-0029 R05  
36-0053

**36-11-61**

Page 2.2  
Sheet 2  
Feb 06/2009

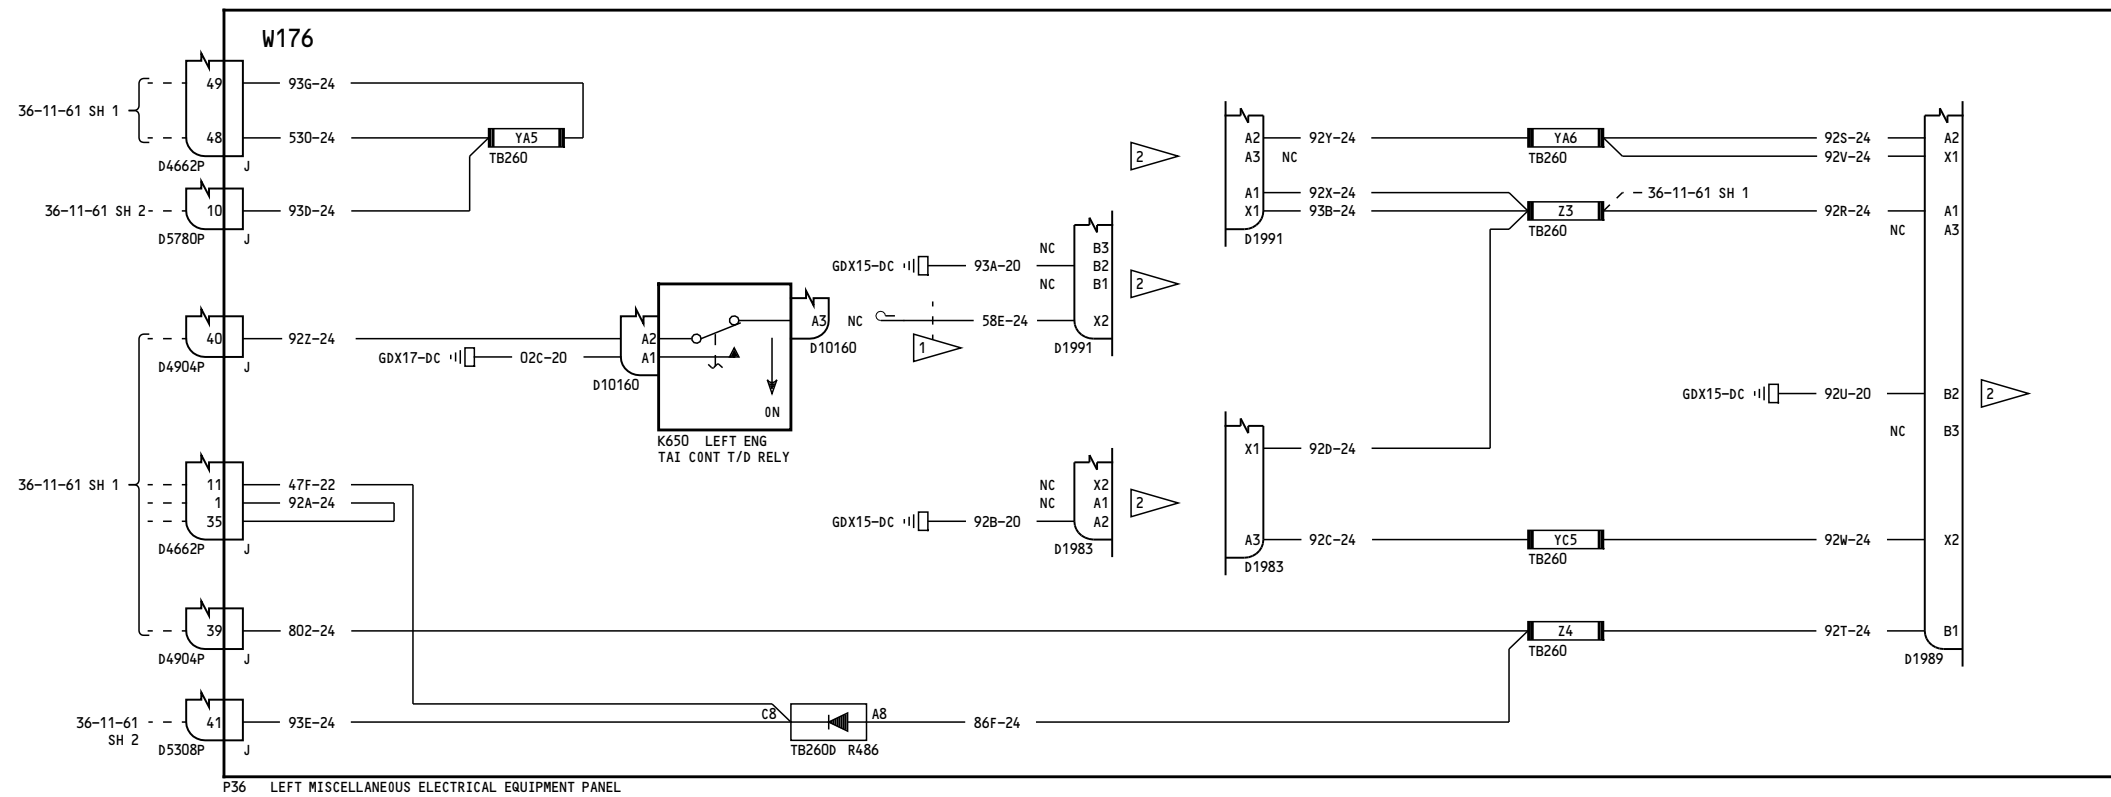

- NOTES:
- 1 CAP & STOW NEAR D10160
  - 2 CAP & STOW CONNECTOR WHEN MATING EQUIPMENT IS NOT INSTALLED.

150-154

**AIR SUPPLY BLEED AIR-  
LEFT ENGINE HIGH  
PRESSURE CONTROL**

D280T132


**36-11-61**

Page 2.2  
Sheet 3  
Feb 06/2009

- Incorporates
- 36-0026
  - 36-0026 R02
  - 36-0027
  - 36-0029 R05

**36-11-61**

Page 2.2  
Sheet 3  
Feb 06/2009

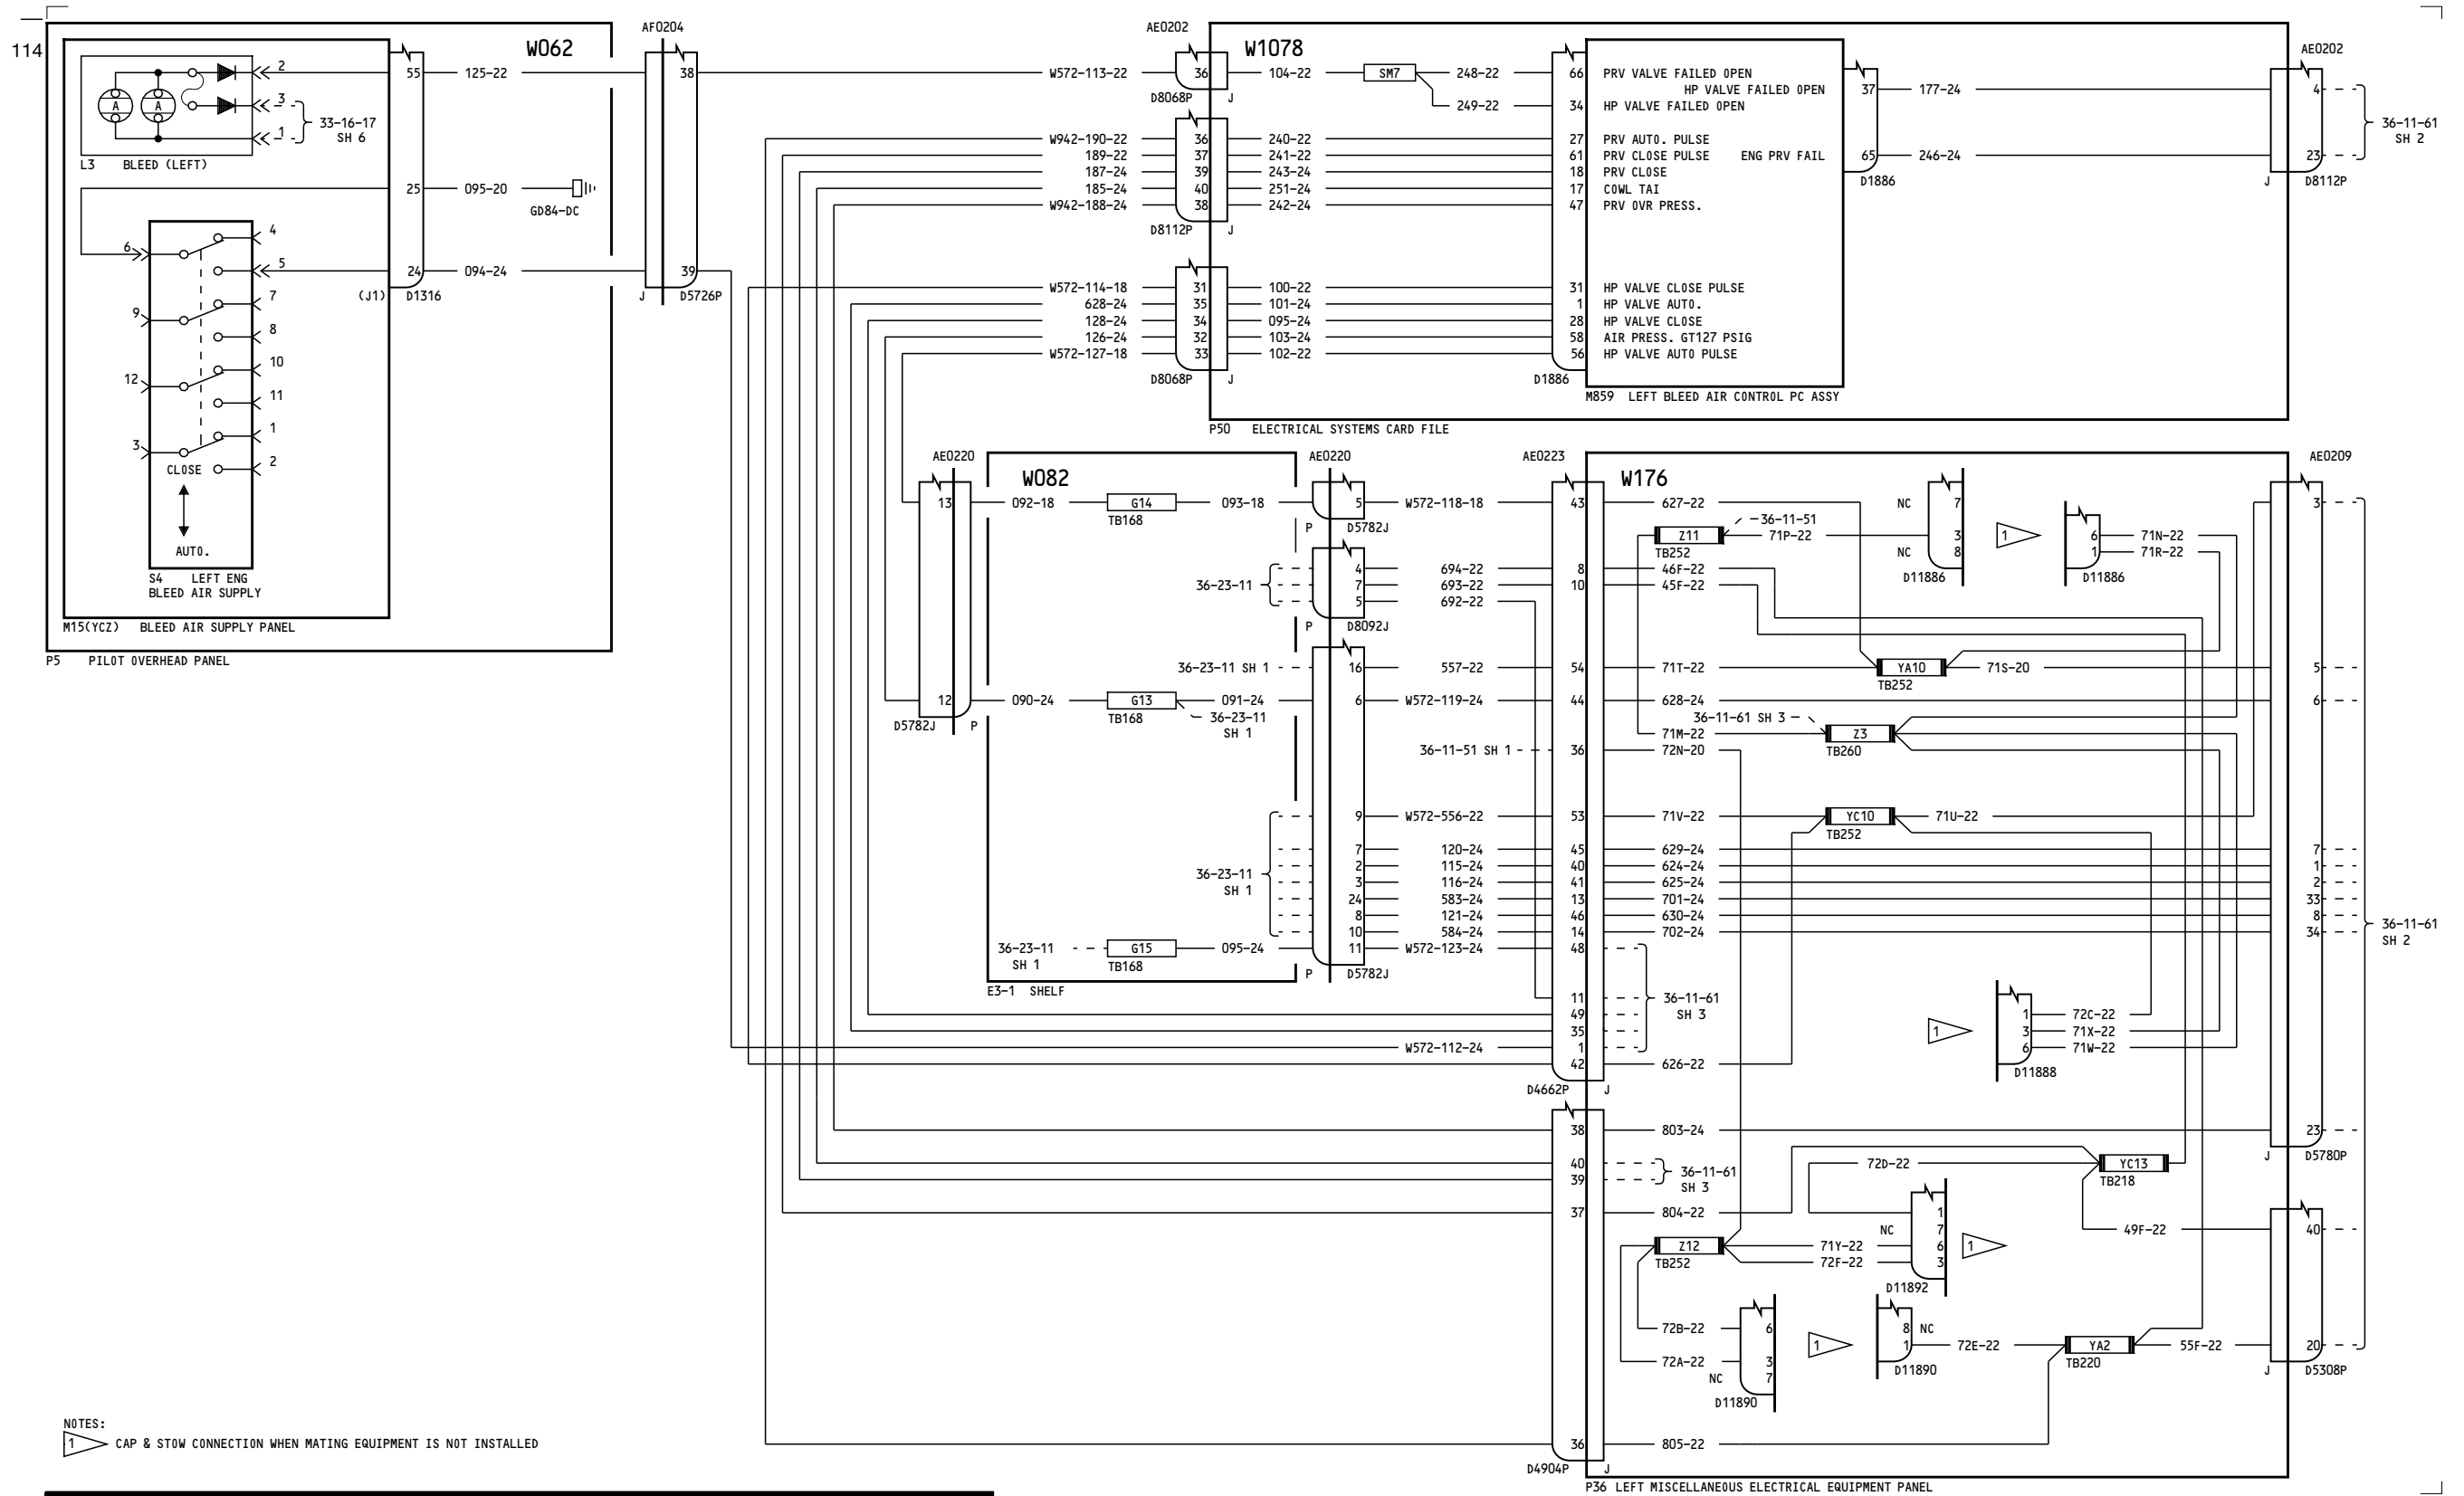

NOTES:  
 1 CAP & STOW CONNECTION WHEN MATING EQUIPMENT IS NOT INSTALLED

155, 163-165

**AIR SUPPLY BLEED AIR-  
 LEFT ENGINE HIGH  
 PRESSURE CONTROL**

D280T132


**36-11-61**

Page 3.1  
 Sheet 1  
 Jan 21/2005

Incorporates  
 36-0026  
 36-0026 R02  
 36-0029 R05

**36-11-61**

Page 3.1  
 Sheet 1  
 Jan 21/2005

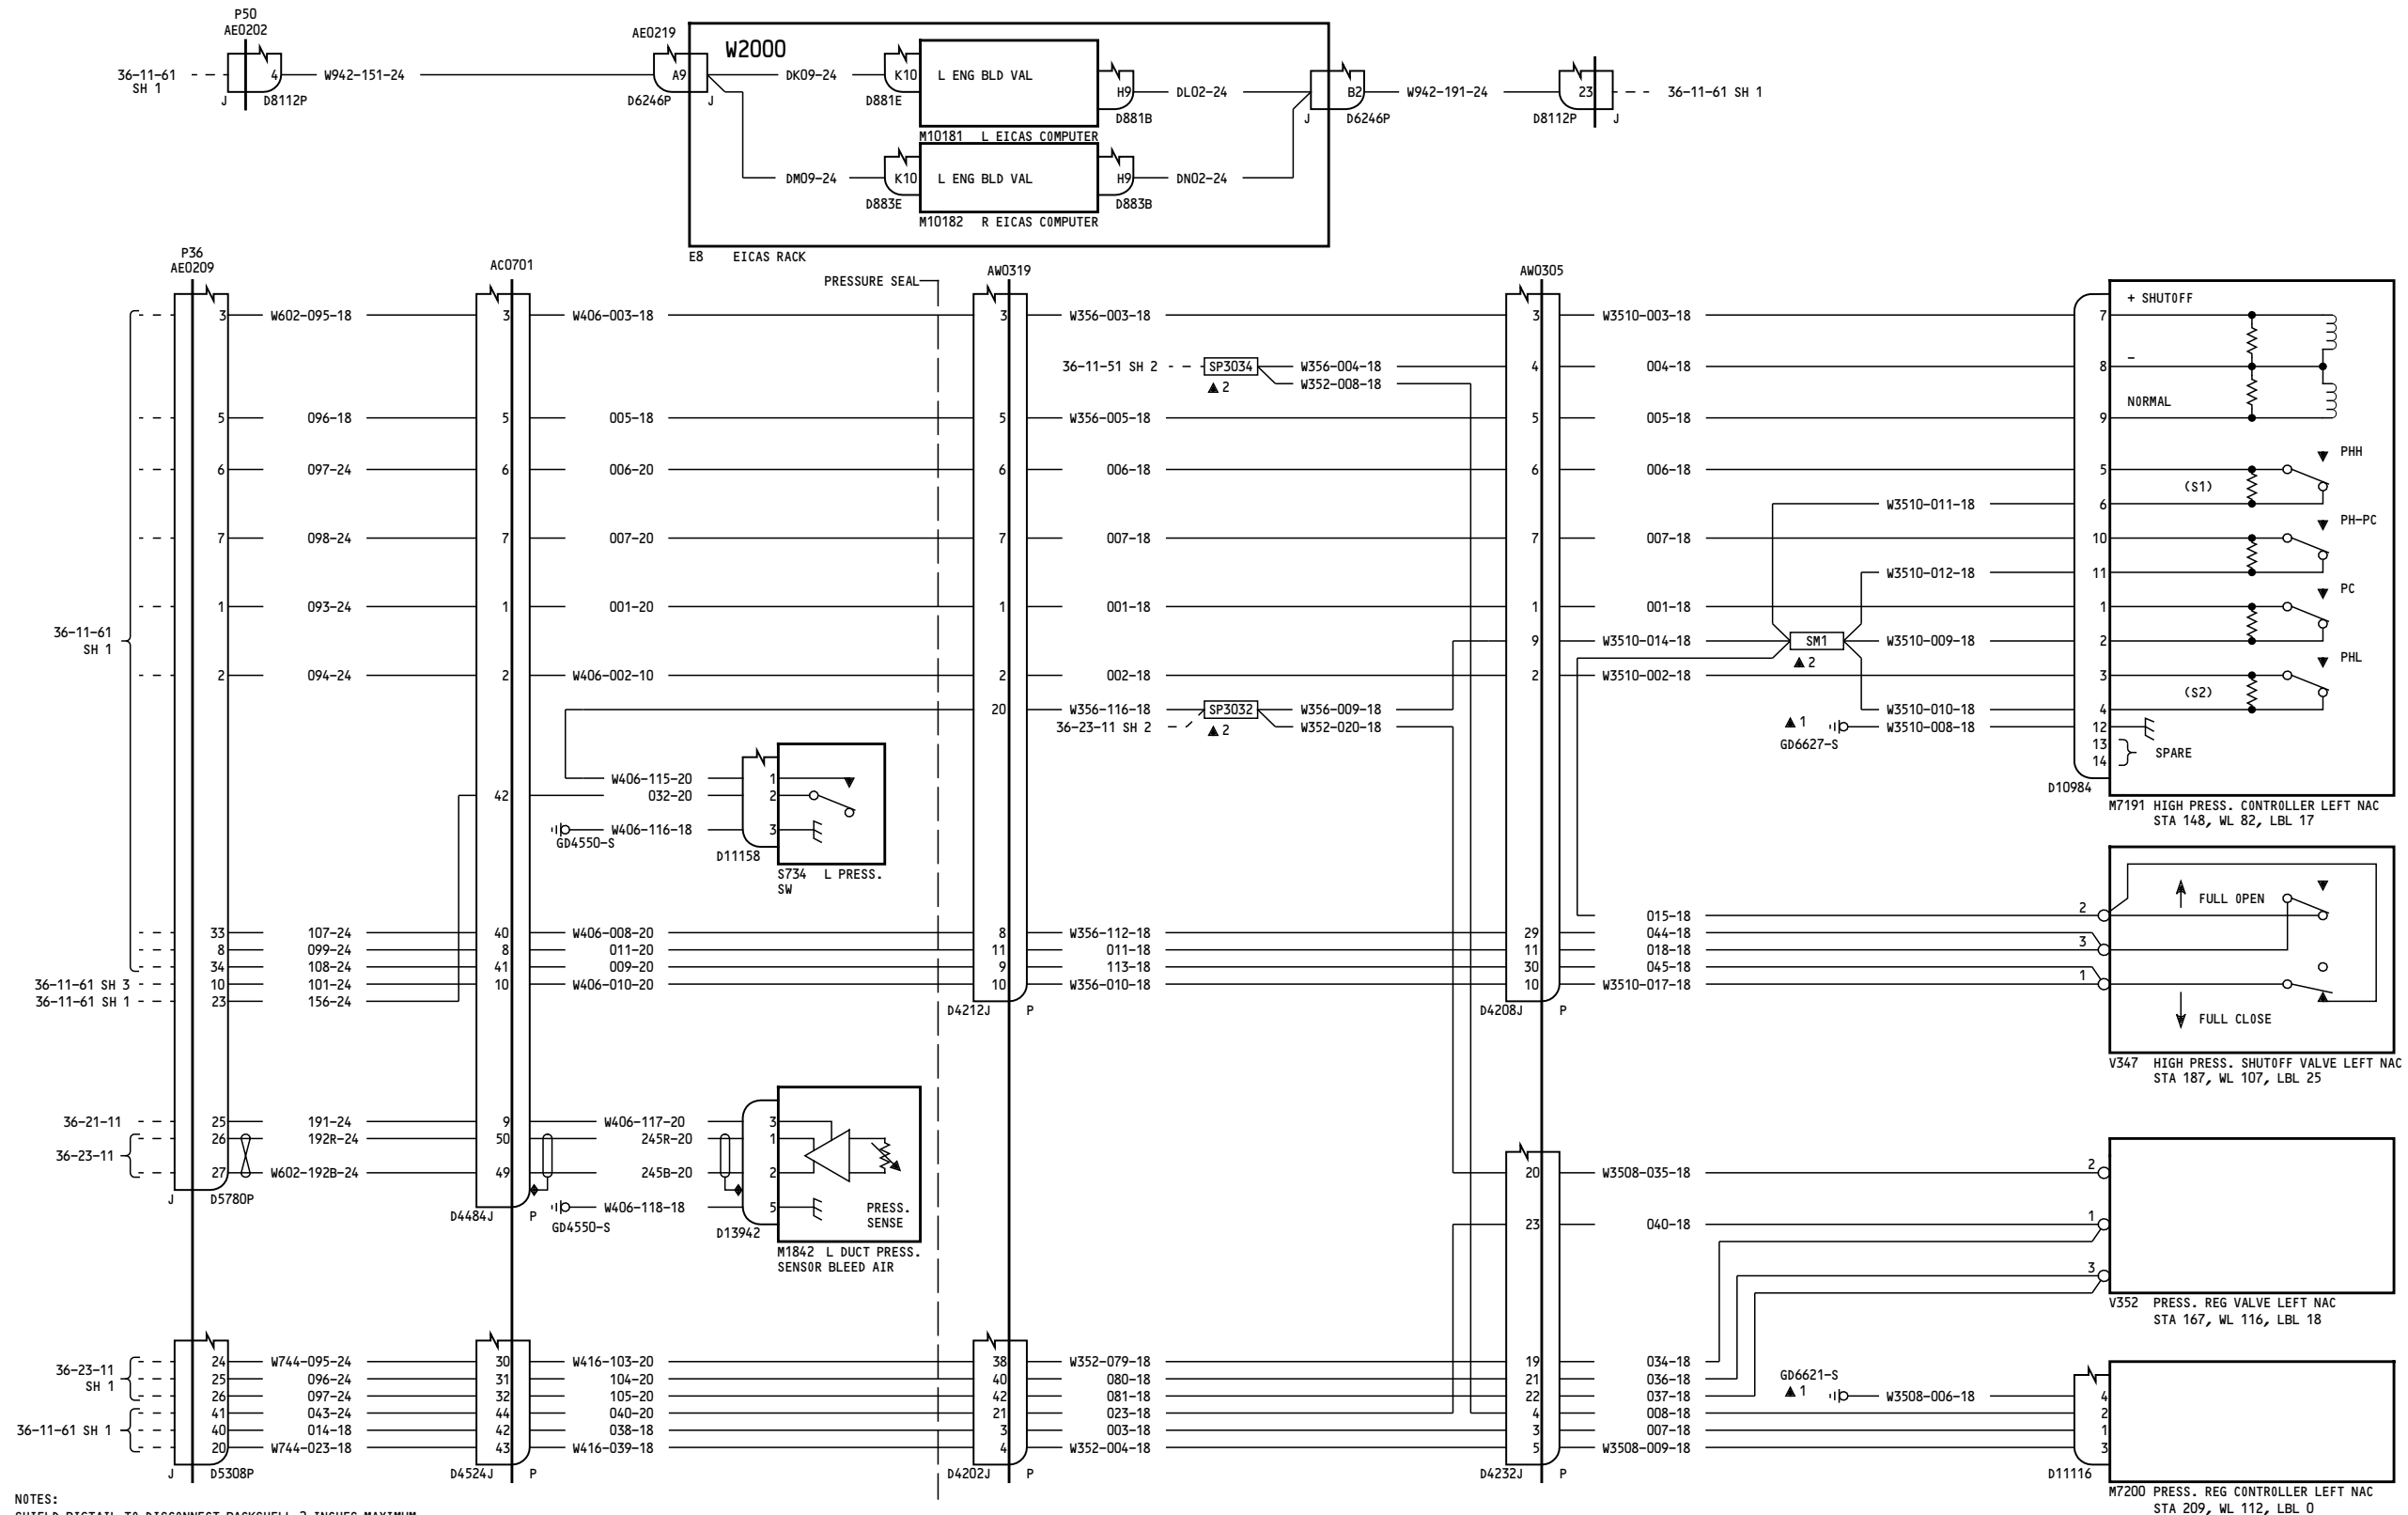

NOTES:  
SHIELD PIGTAIL TO DISCONNECT BACKSHELL 2 INCHES MAXIMUM

155, 163-165

**AIR SUPPLY BLEED AIR-  
LEFT ENGINE HIGH  
PRESSURE CONTROL**

D280T132


**36-11-61**

Page 3.1  
Sheet 2  
Jan 21/2005

Incorporates  
36-0029 R05

**36-11-61**

Page 3.1  
Sheet 2  
Jan 21/2005

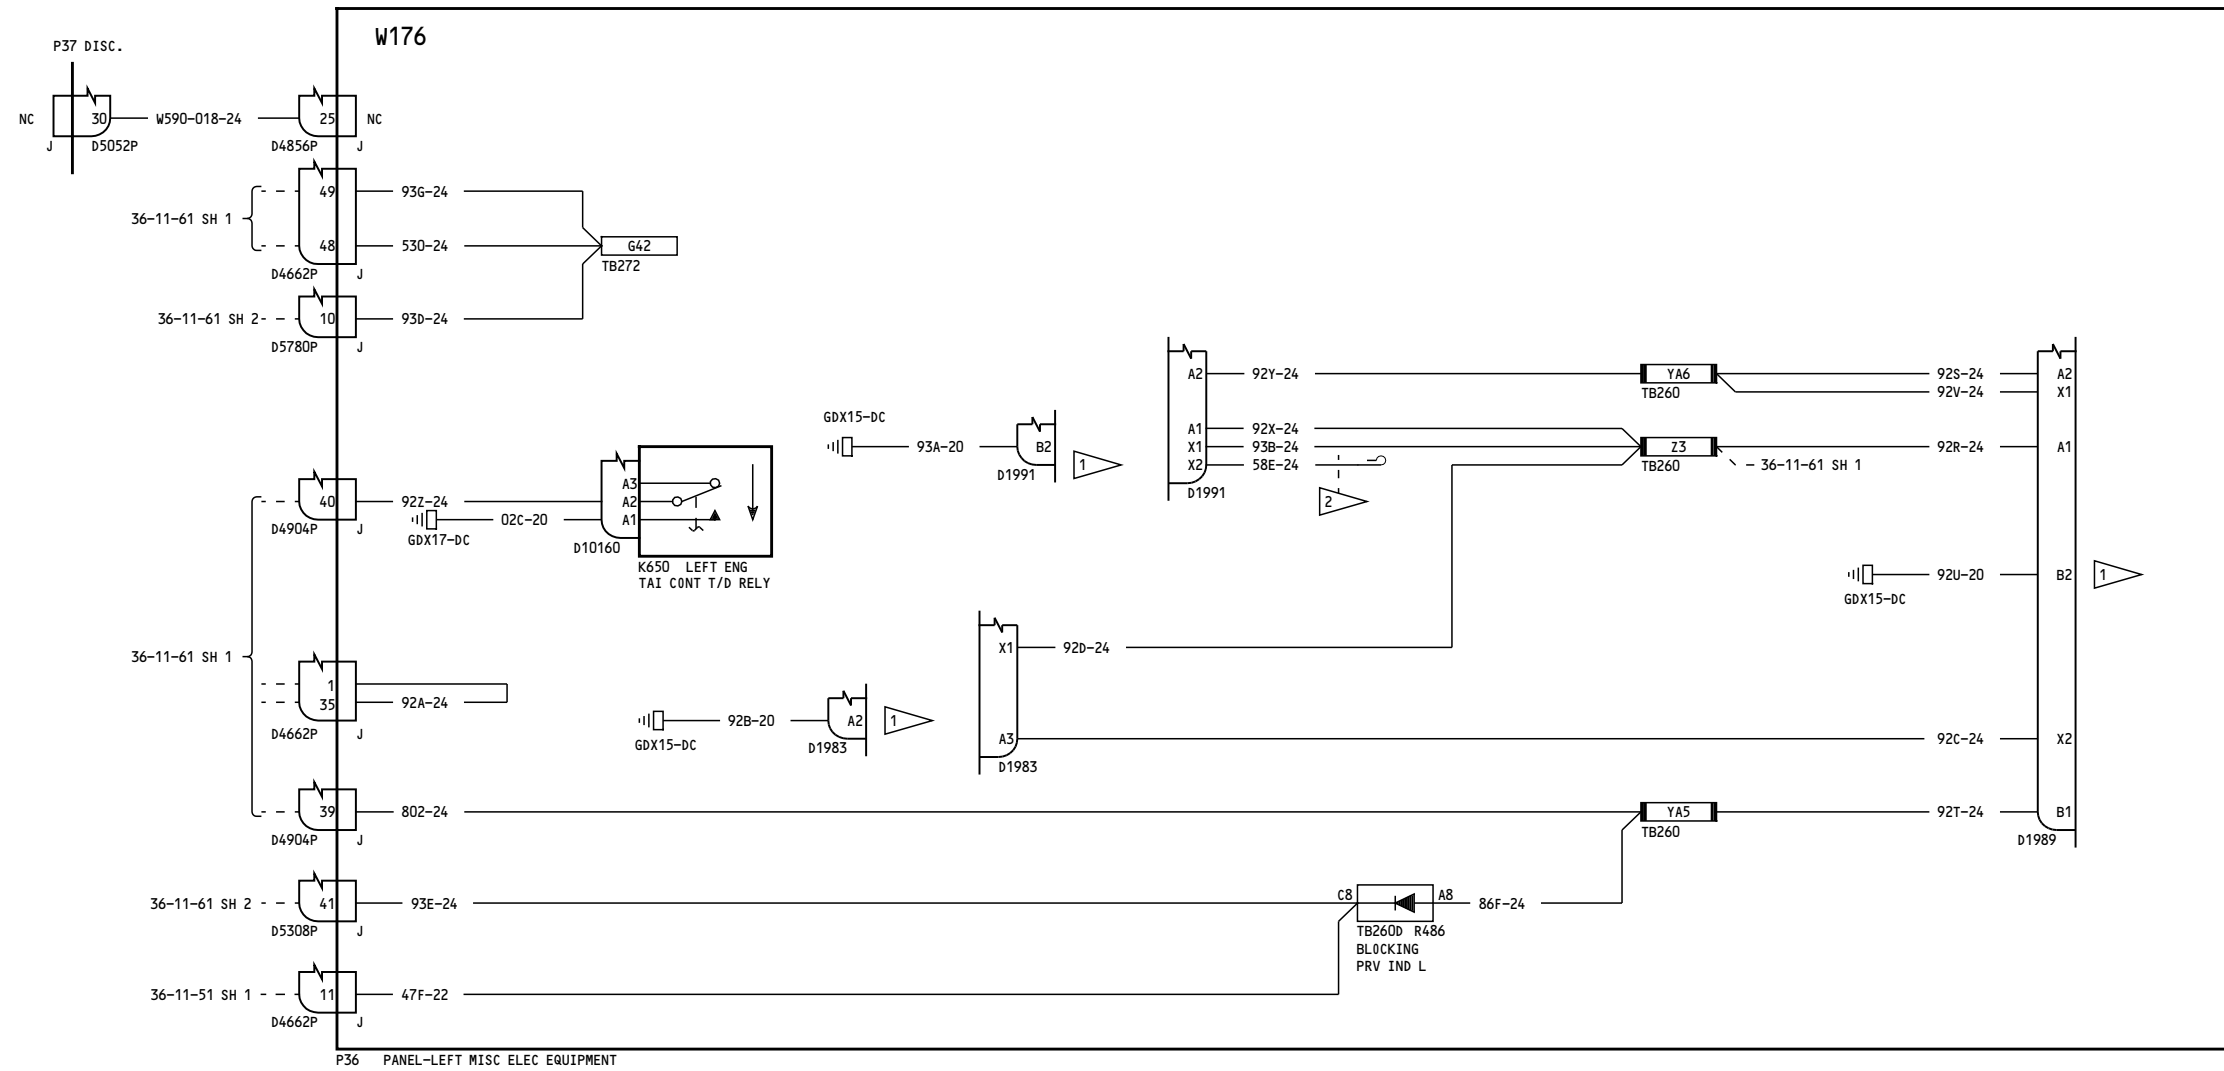

NOTES:  
 1 CAP & STOW CONNECTOR WHEN MATING EQUIPMENT IS NOT INSTALLED  
 2 CAP & STOW NEAR D10160

155, 163-165

**AIR SUPPLY BLEED AIR-  
LEFT ENGINE HIGH  
PRESSURE CONTROL**

D280T132


**36-11-61**

Page 3.1  
 Sheet 3  
 Jan 21/2005

Incorporates  
 36-0026 R02  
 36-0029 R05

**36-11-61**

Page 3.1  
 Sheet 3  
 Jan 21/2005

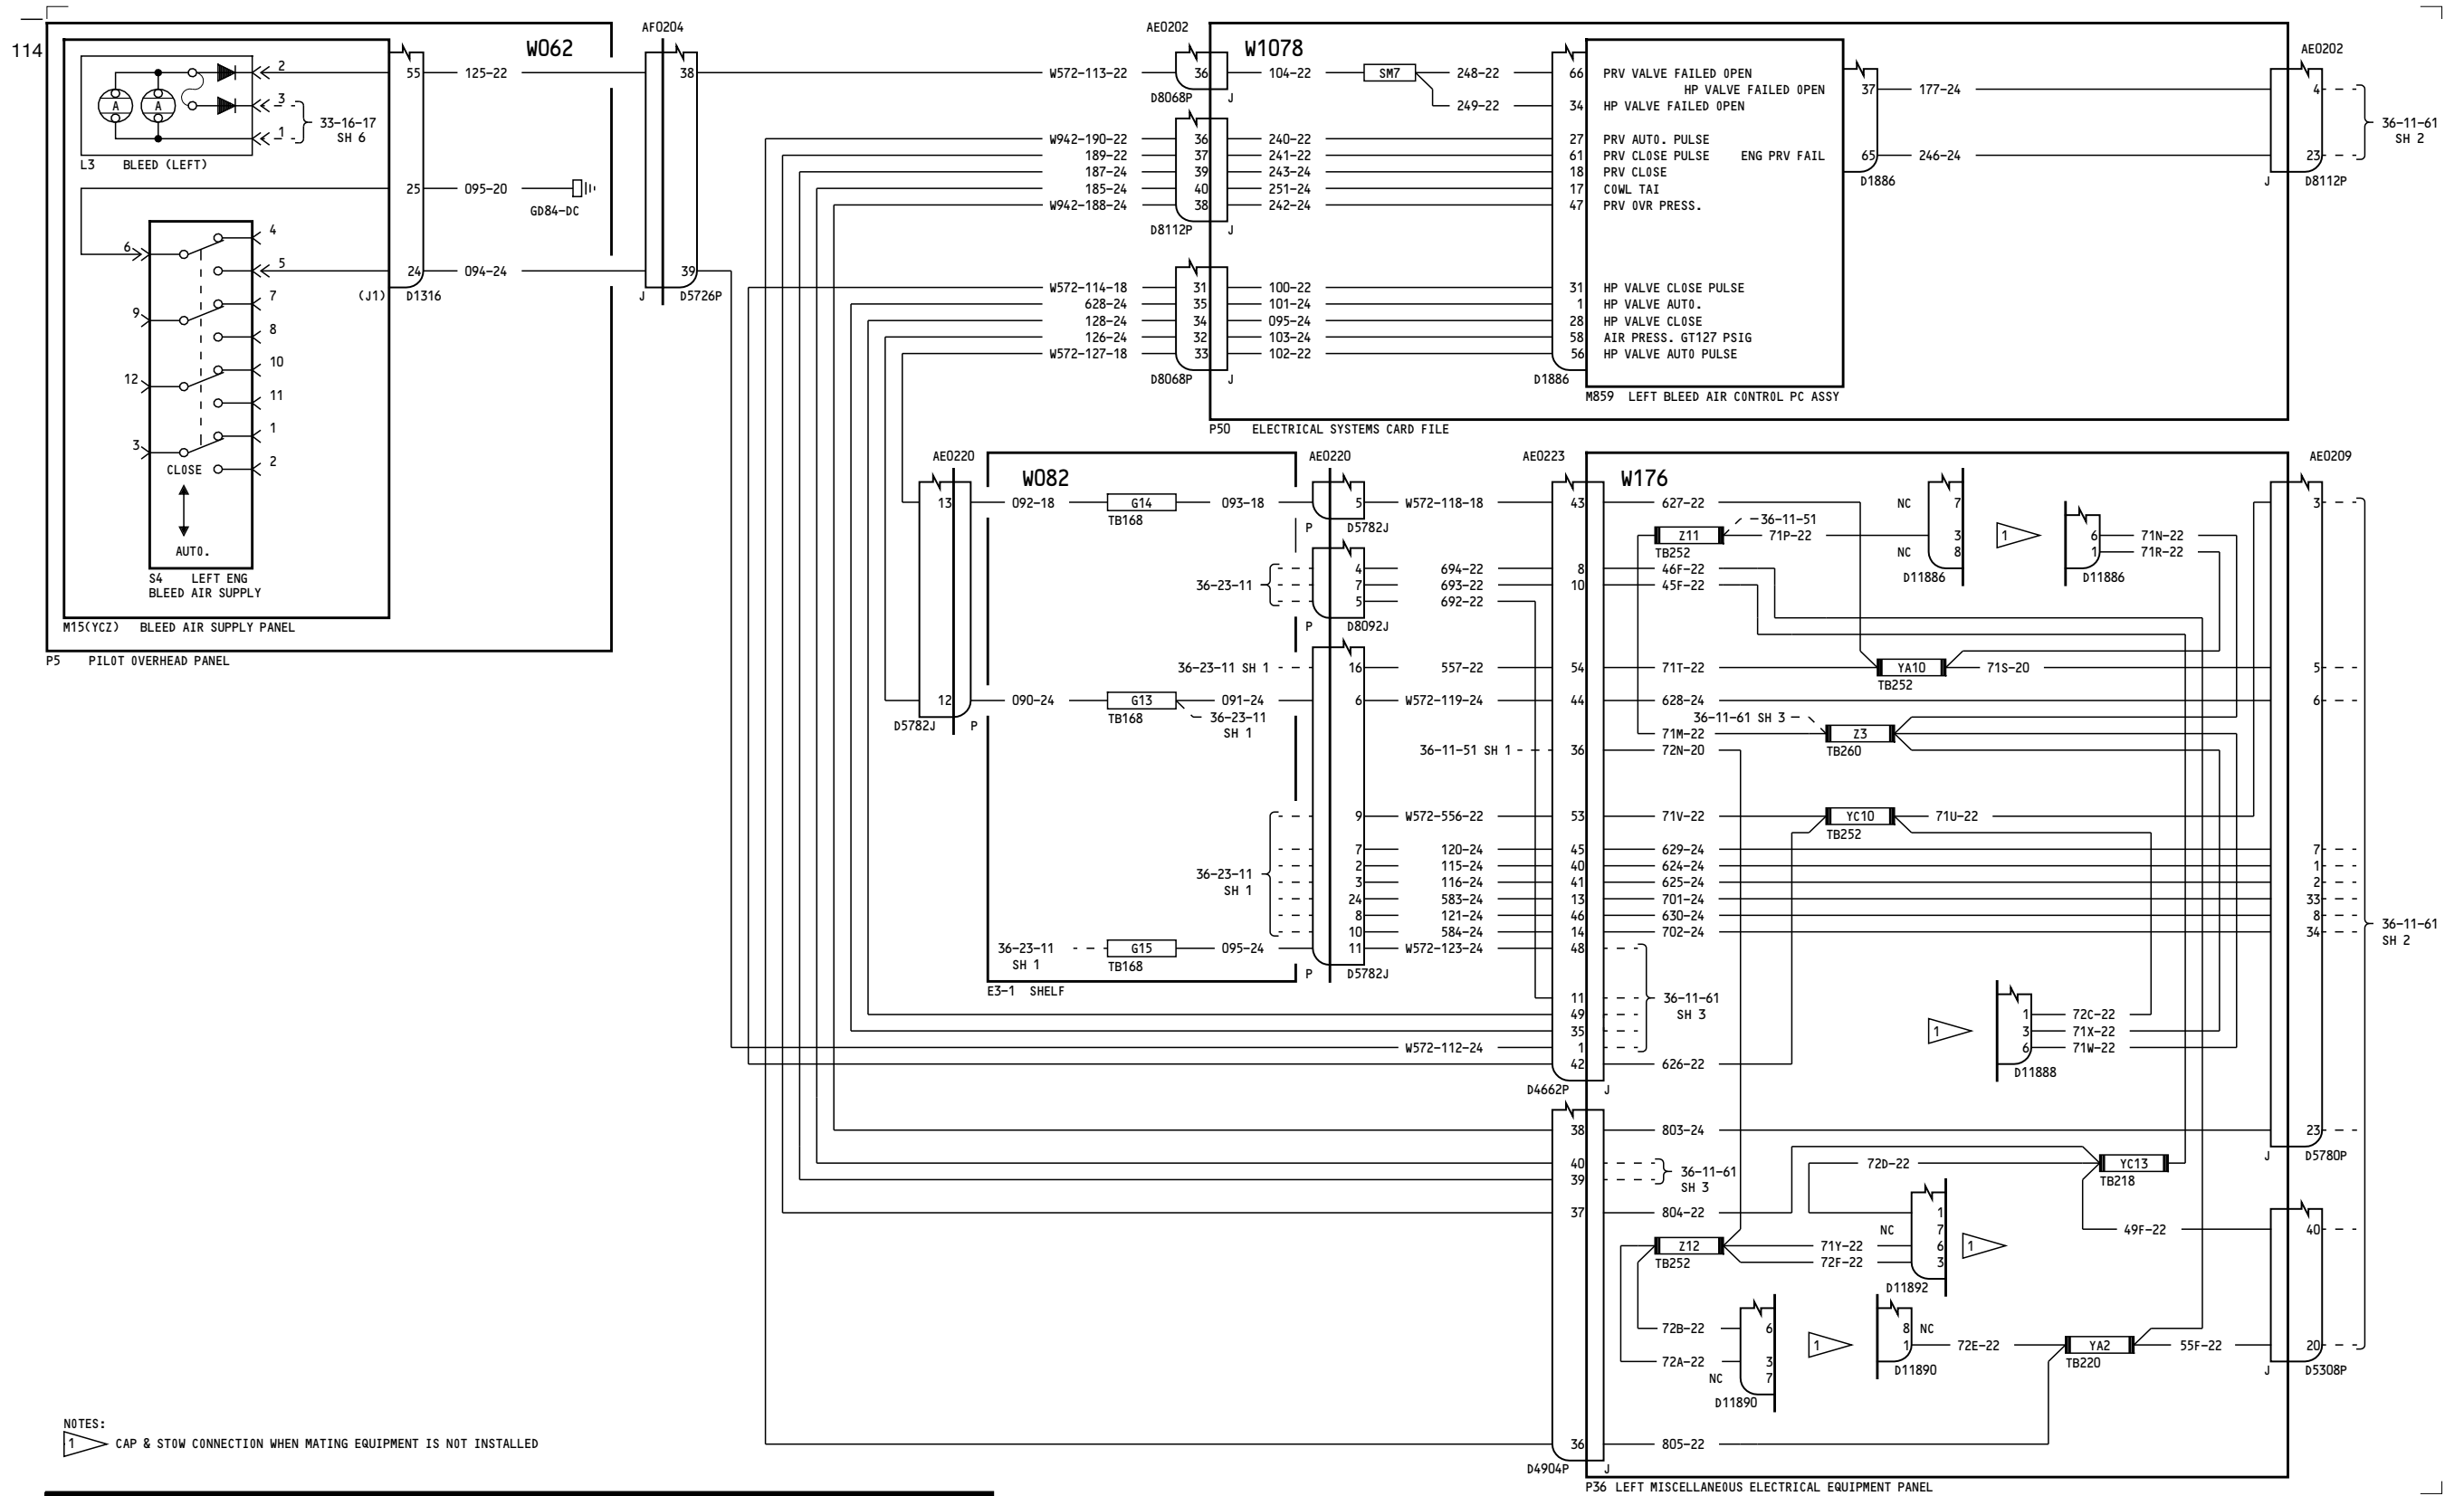

NOTES:  
 1 CAP & STOW CONNECTION WHEN MATING EQUIPMENT IS NOT INSTALLED

155, 163-165

**AIR SUPPLY BLEED AIR-  
 LEFT ENGINE HIGH  
 PRESSURE CONTROL**

D280T132


**36-11-61**

Page 3.2  
 Sheet 1  
 Feb 06/2009

Incorporates  
 36-0026  
 36-0026 R02  
 36-0029 R05

**36-11-61**

Page 3.2  
 Sheet 1  
 Feb 06/2009

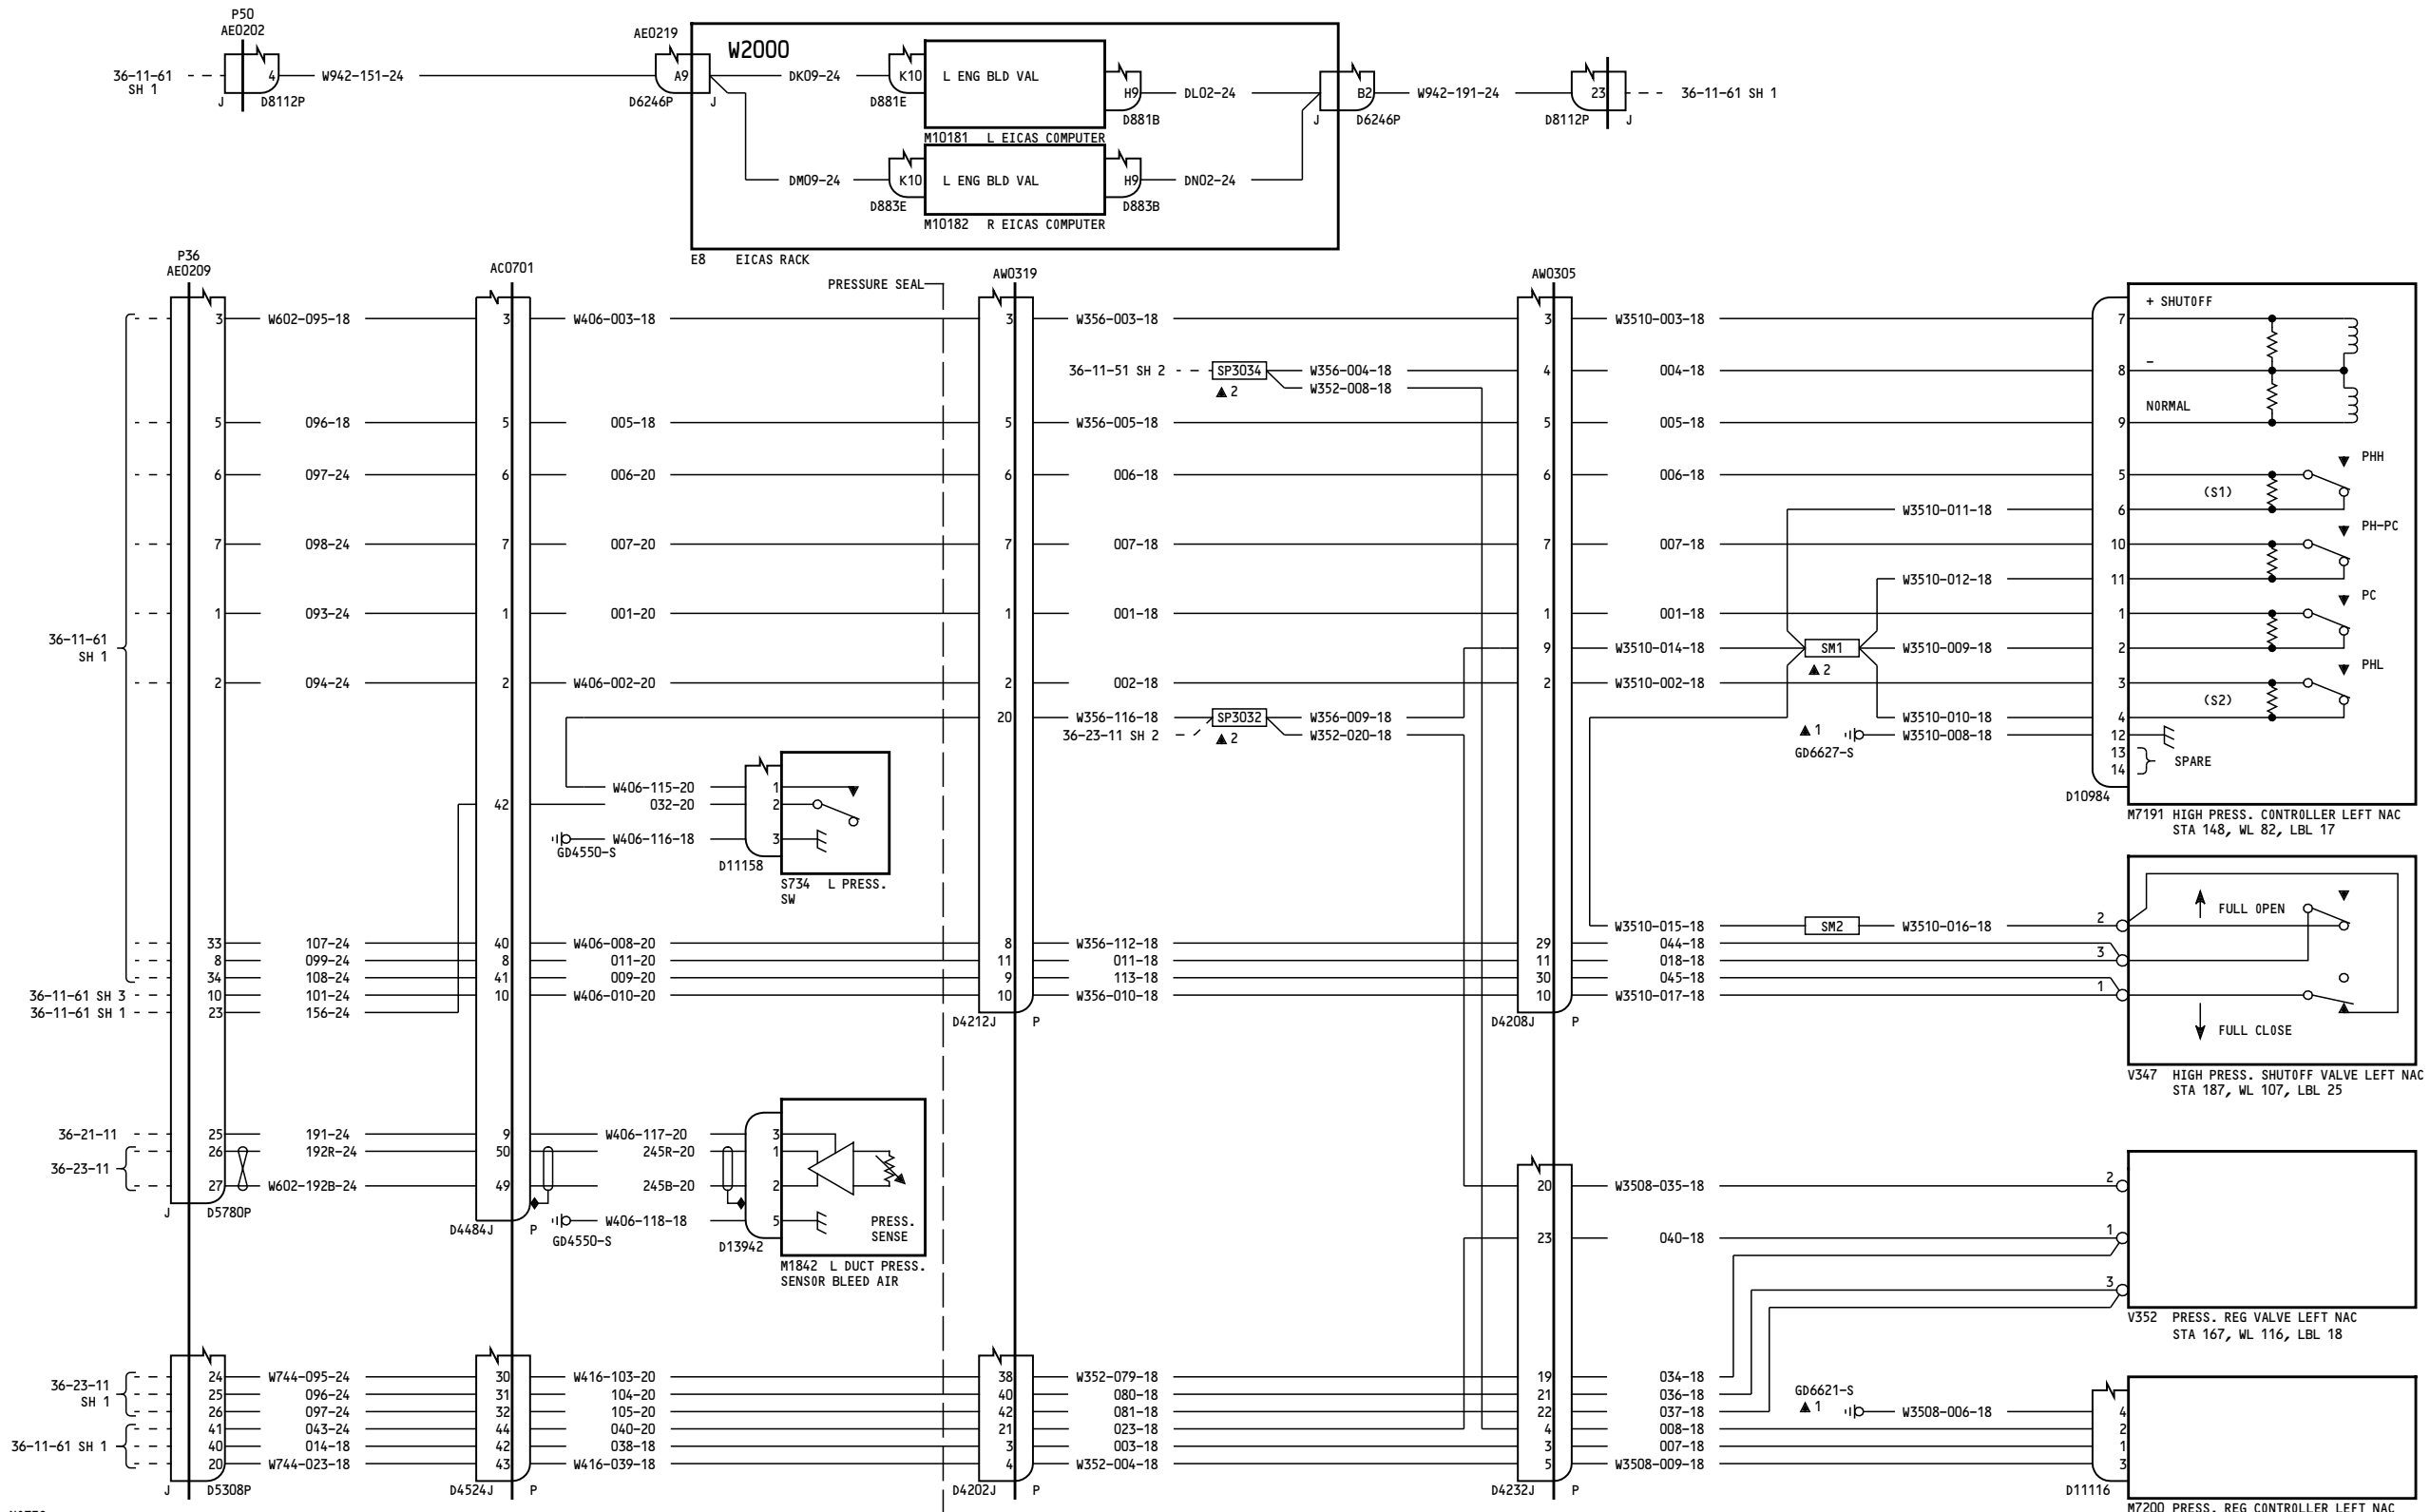

NOTES:  
SHIELD PIGTAIL TO DISCONNECT BACKSHELL 2 INCHES MAXIMUM

155, 163-165

**AIR SUPPLY BLEED AIR-  
LEFT ENGINE HIGH  
PRESSURE CONTROL**

D280T132

**36-11-61**


Page 3.2  
Sheet 2  
Feb 06/2009

Incorporates  
36-0029 R05  
36-0053

**36-11-61**

Page 3.2  
Sheet 2  
Feb 06/2009



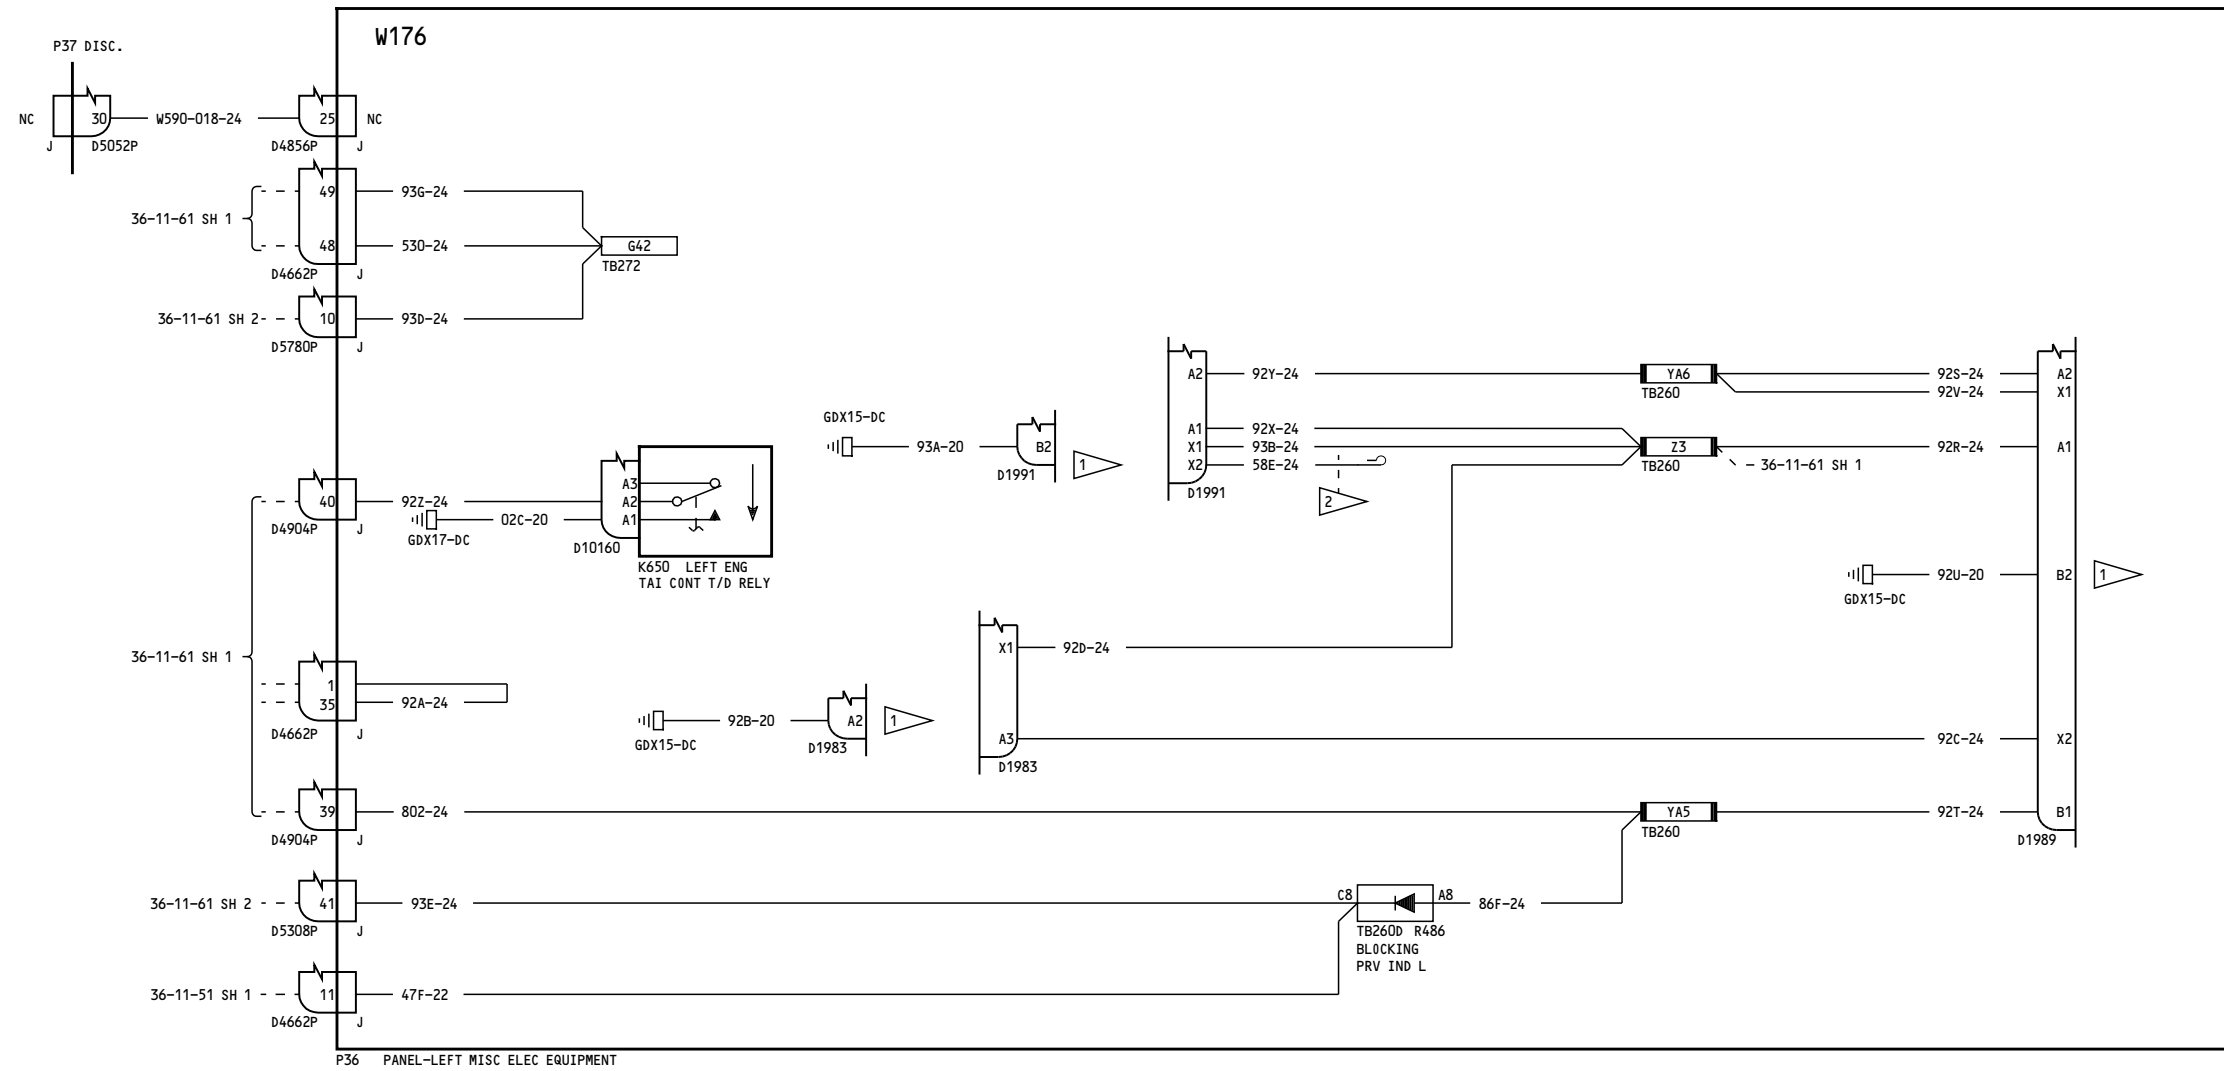

NOTES:  
 1 CAP & STOW CONNECTOR WHEN MATING EQUIPMENT IS NOT INSTALLED  
 2 CAP & STOW NEAR D10160

155, 163-165

**AIR SUPPLY BLEED AIR-  
LEFT ENGINE HIGH  
PRESSURE CONTROL**

D280T132


**36-11-61**

Page 3.2  
 Sheet 3  
 Feb 06/2009

Incorporates  
 36-0026 R02  
 36-0029 R05

**36-11-61**

Page 3.2  
 Sheet 3  
 Feb 06/2009

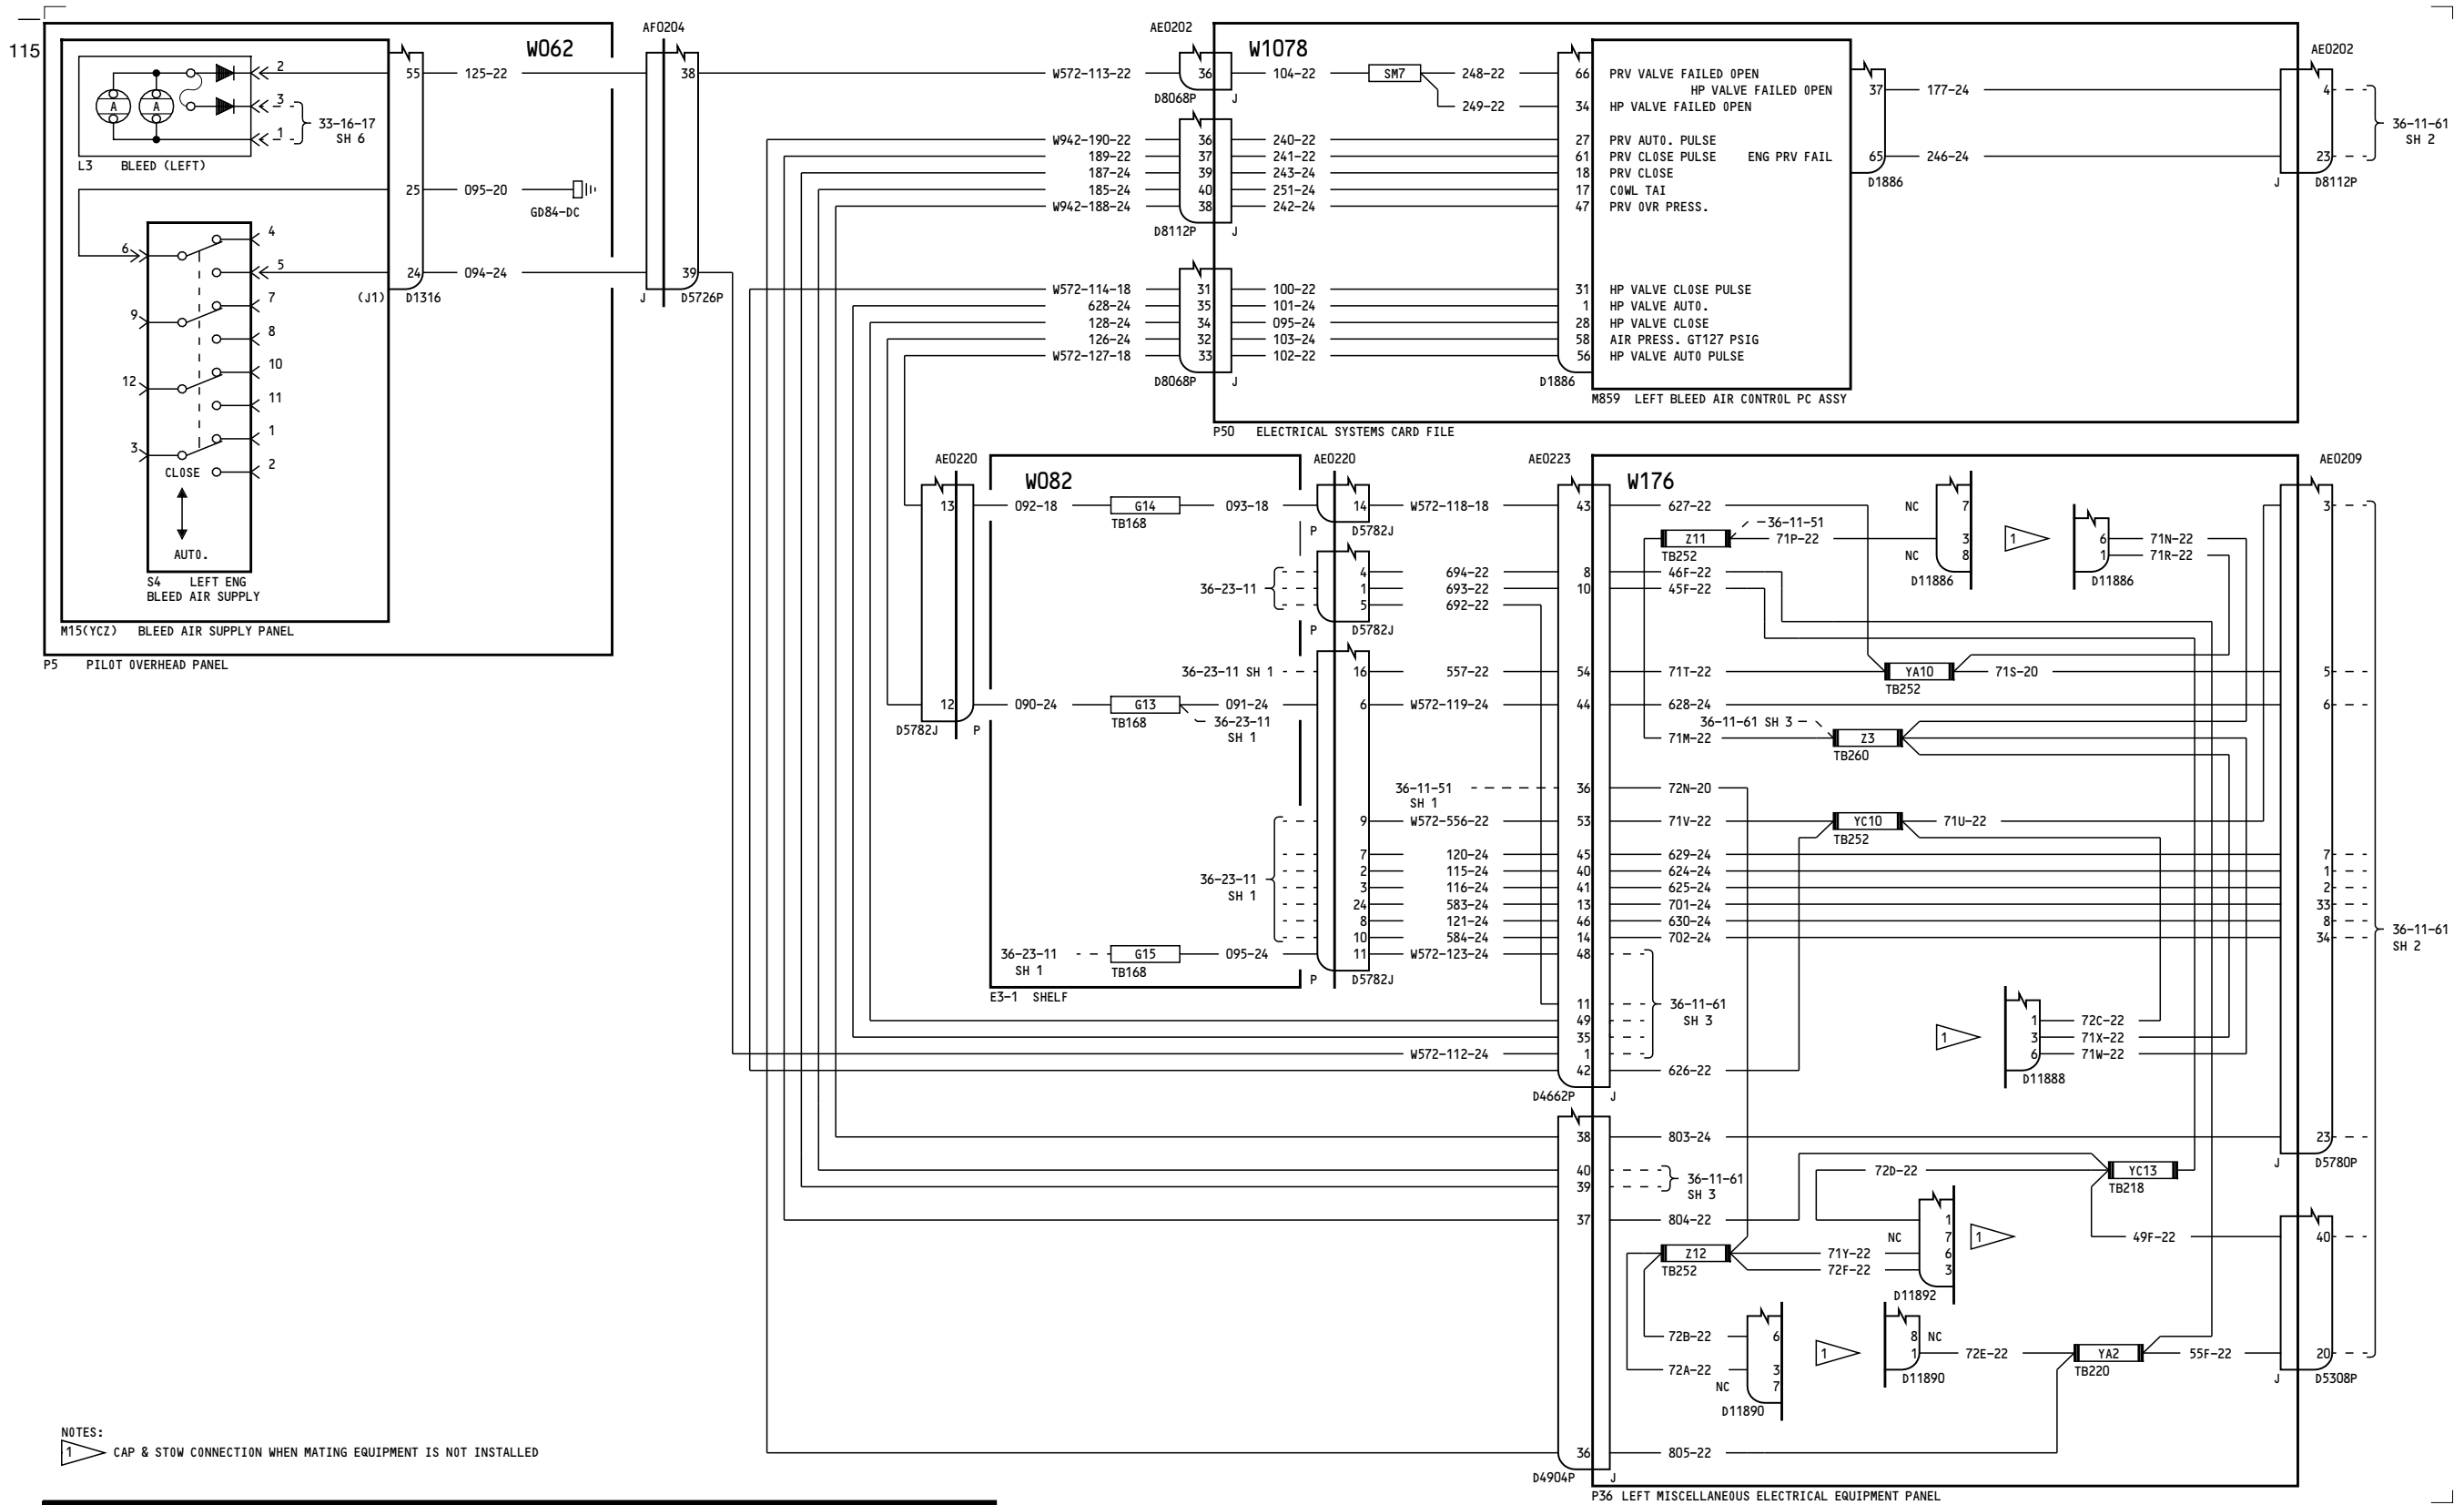

NOTES:  
1 CAP & STOW CONNECTION WHEN MATING EQUIPMENT IS NOT INSTALLED

156, 166


**AIR SUPPLY BLEED AIR-  
LEFT ENGINE HIGH  
PRESSURE CONTROL**

**36-11-61**

Incorporates  
36-0026 R02

**36-11-61**

-E  
38

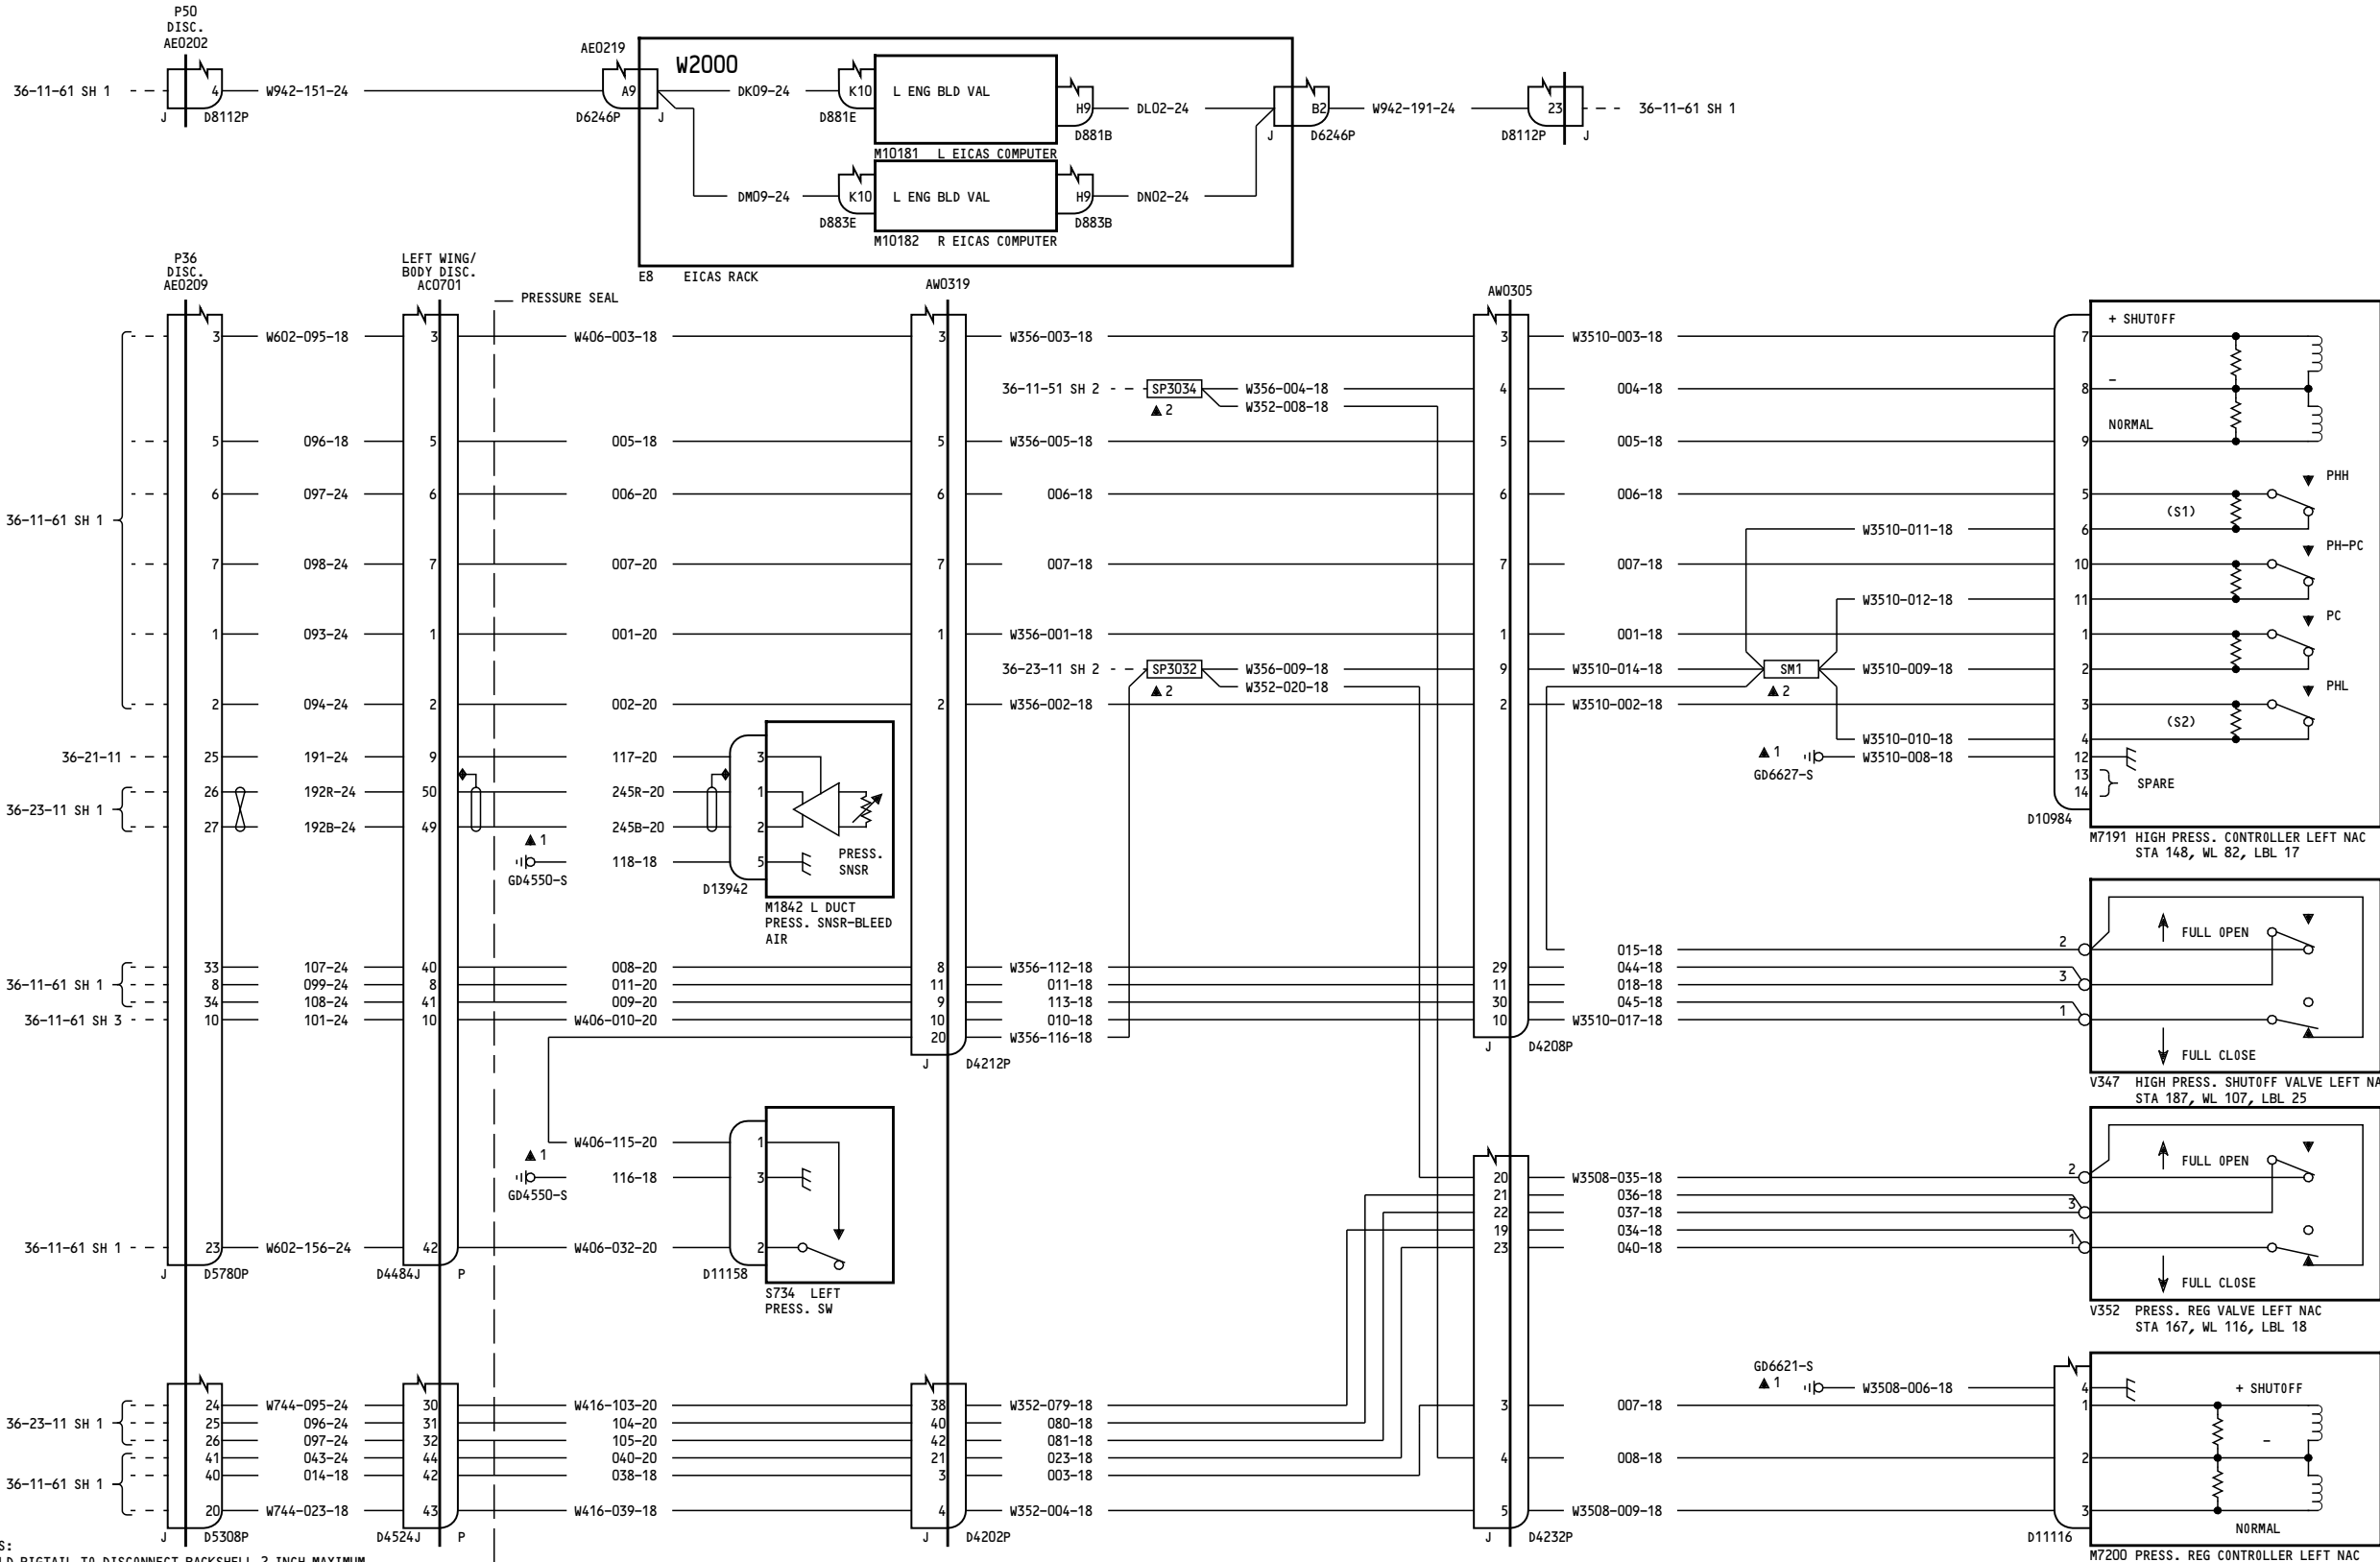

NOTES:  
SHIELD PIGTAIL TO DISCONNECT BACKSHELL 2 INCH MAXIMUM

156, 166

**AIR SUPPLY BLEED AIR-  
LEFT ENGINE HIGH  
PRESSURE CONTROL**


D280T132

**36-11-61**

Page 4.1  
Sheet 2  
Jan 21/2005

**36-11-61**

Page 4.1  
Sheet 2  
Jan 21/2005

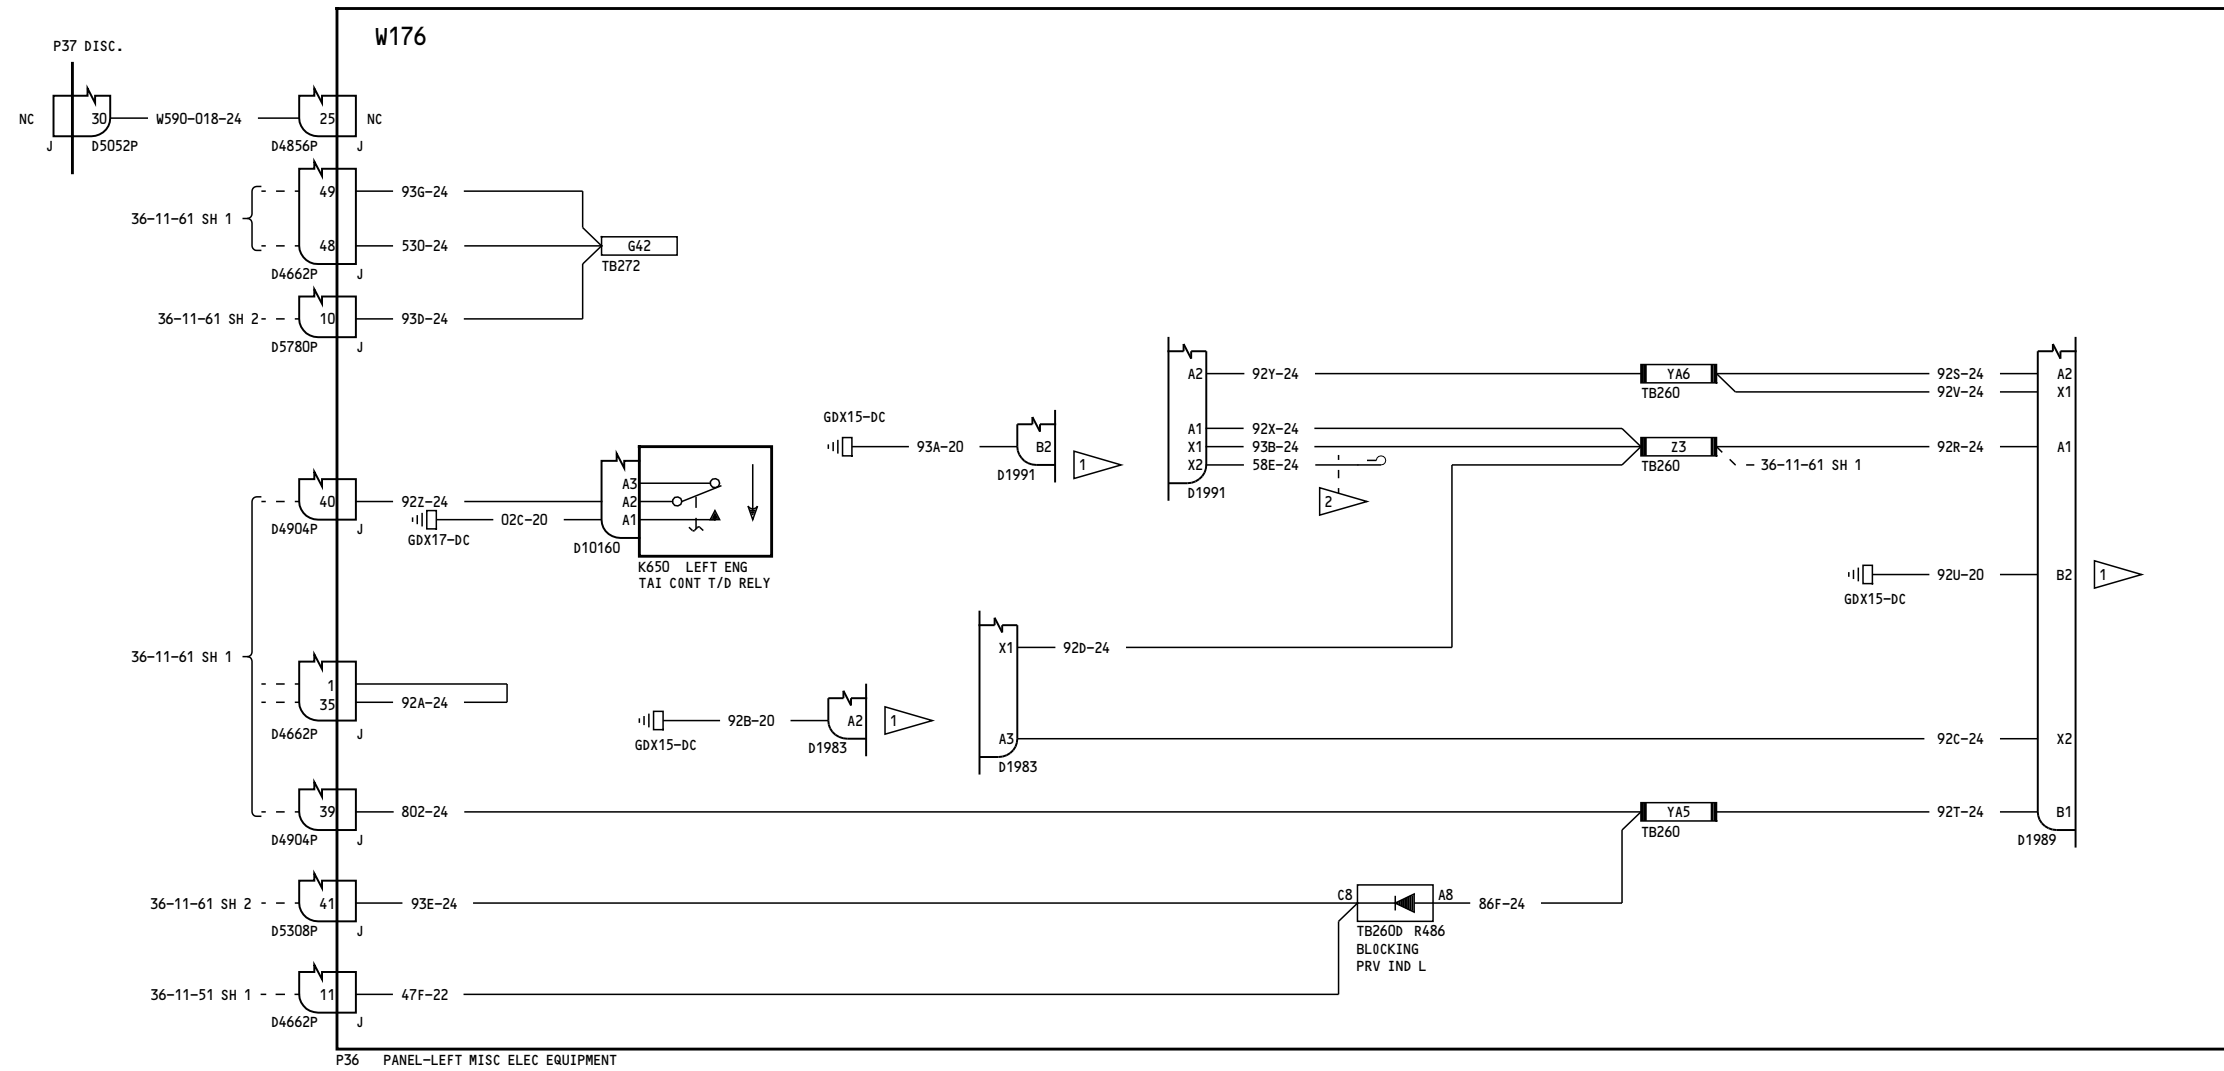

NOTES:  
 1 CAP & STOW CONNECTOR WHEN MATING EQUIPMENT IS NOT INSTALLED  
 2 CAP & STOW NEAR D10160

156, 166

**AIR SUPPLY BLEED AIR-  
LEFT ENGINE HIGH  
PRESSURE CONTROL**

D280T132


**36-11-61**

Page 4.1  
 Sheet 3  
 Jan 21/2005

Incorporates  
 36-0026 R02

**36-11-61**

Page 4.1  
 Sheet 3  
 Jan 21/2005

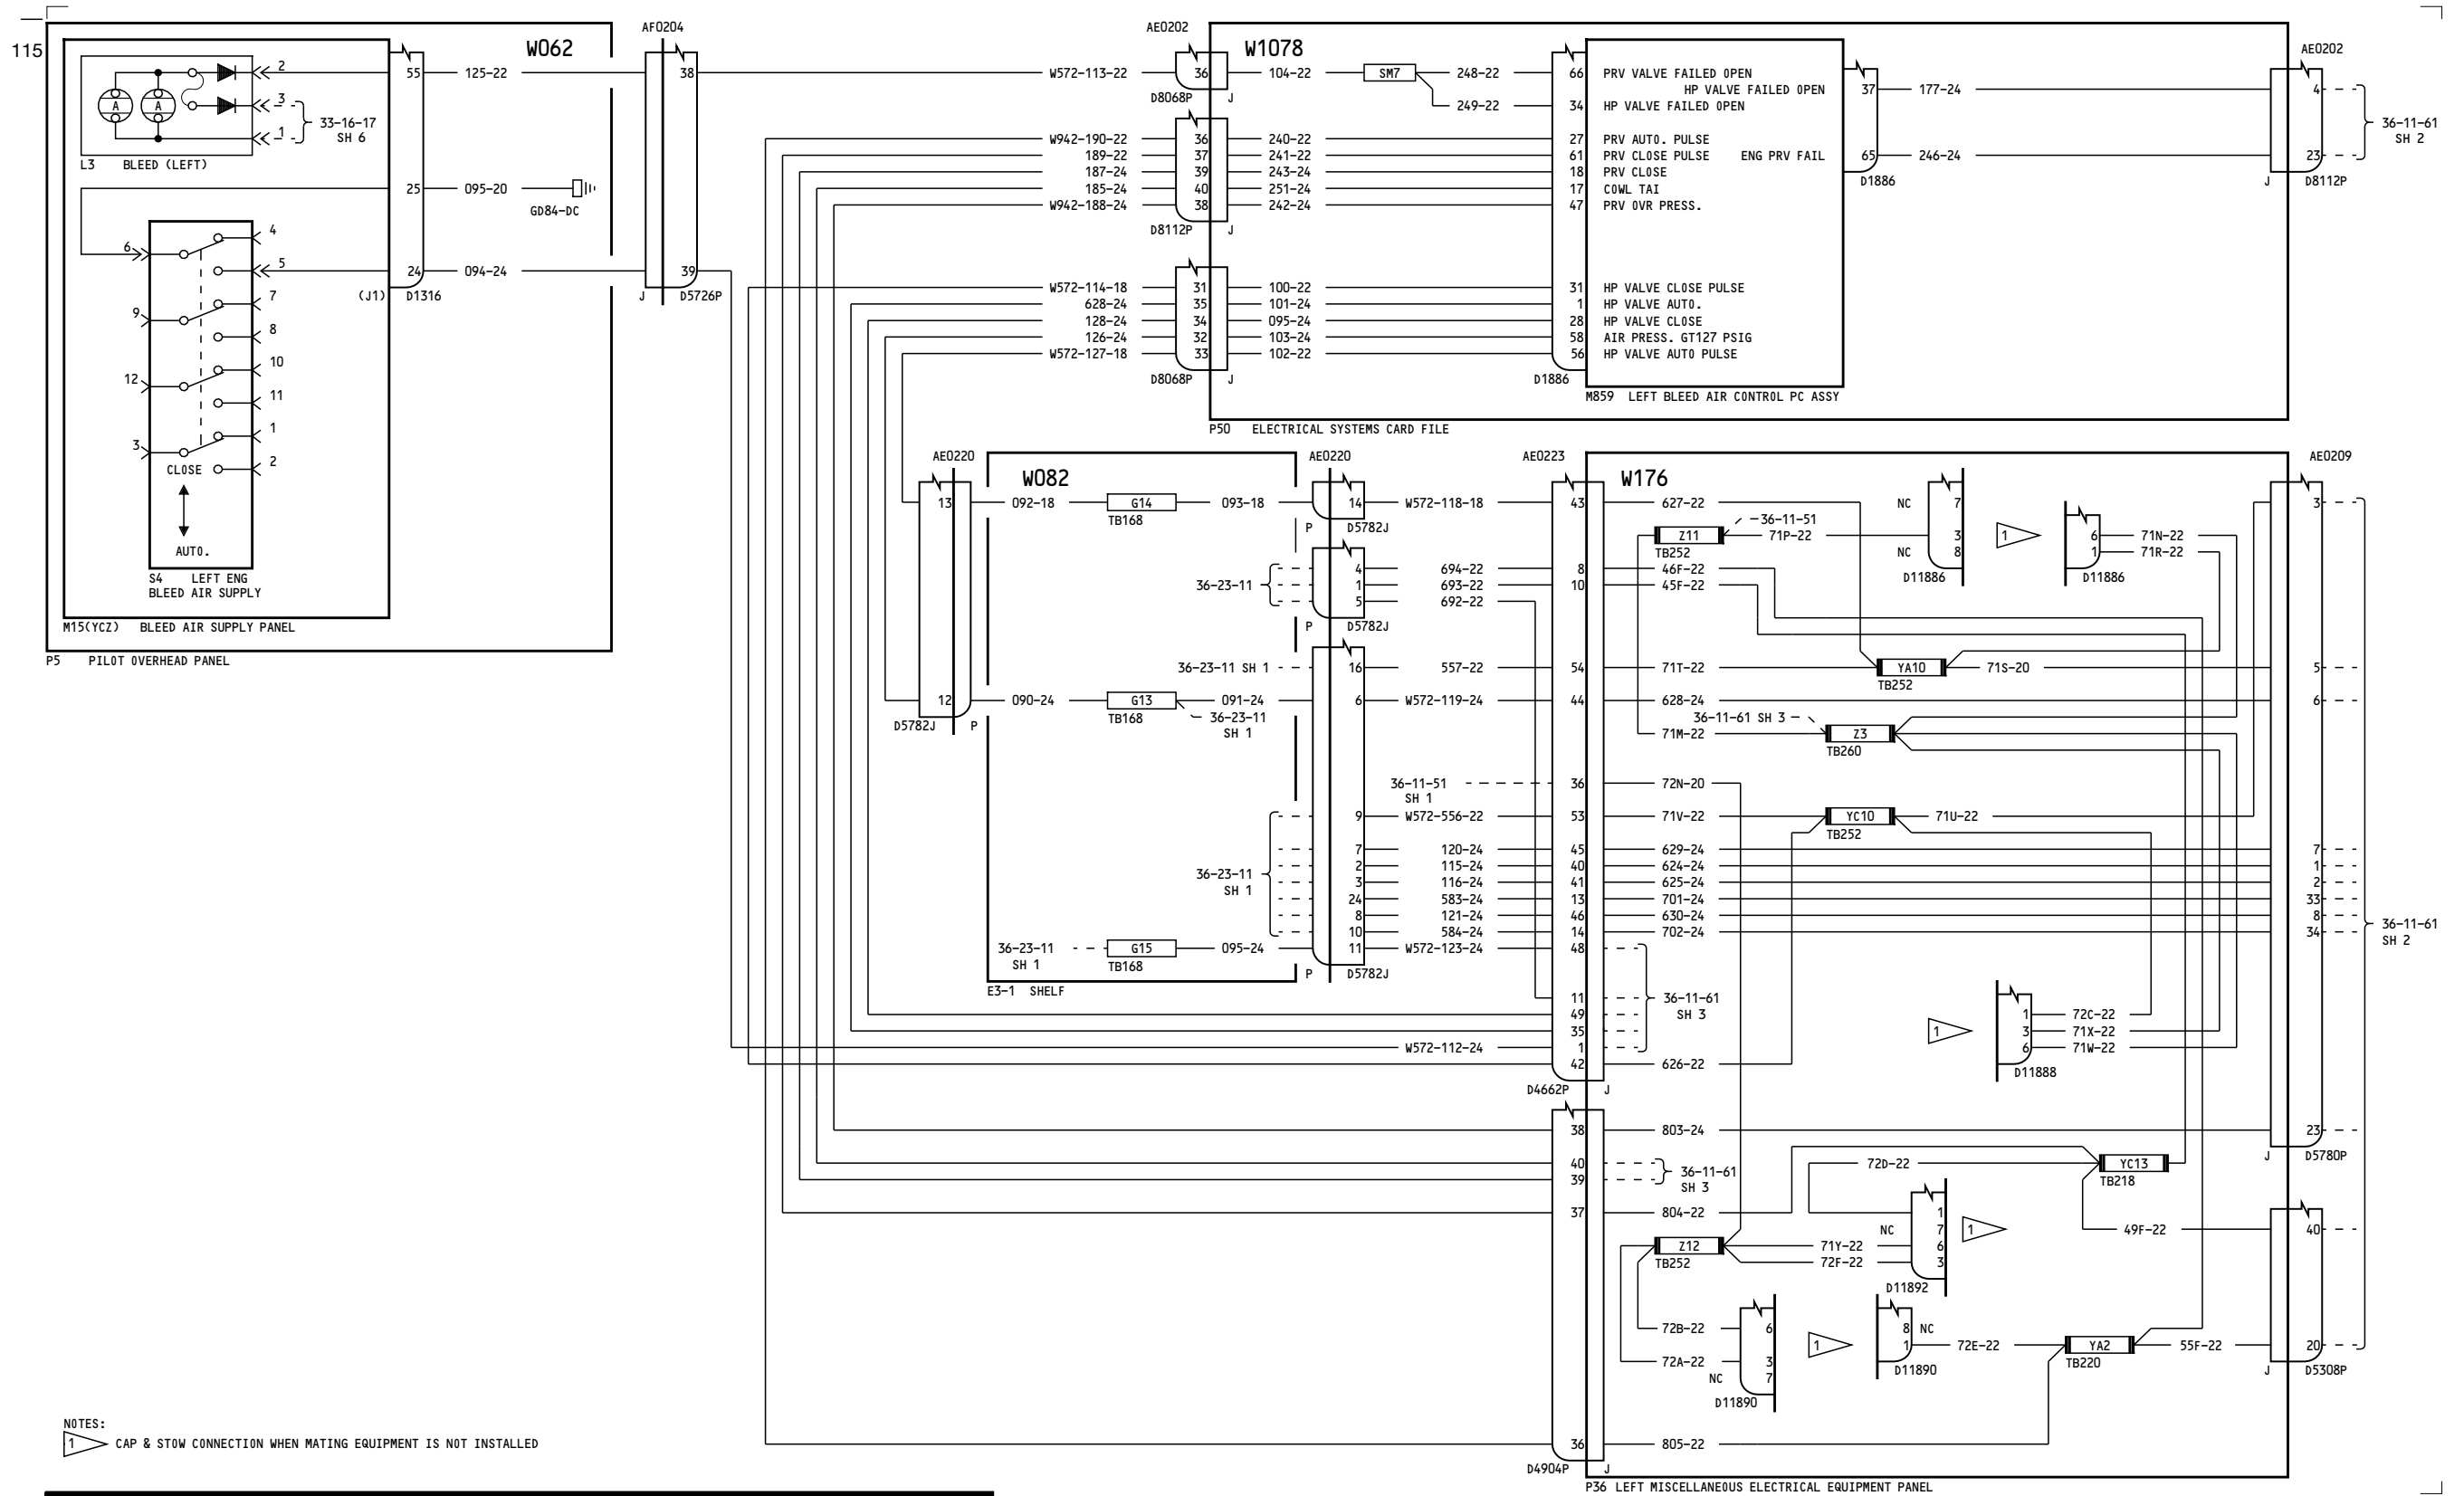

NOTES:  
 1 CAP & STOW CONNECTION WHEN MATING EQUIPMENT IS NOT INSTALLED

156, 166

**AIR SUPPLY BLEED AIR-  
 LEFT ENGINE HIGH  
 PRESSURE CONTROL**

D280T132


**36-11-61**

Page 4.2  
 Sheet 1  
 Feb 06/2009

Incorporates  
 36-0026 R02

**36-11-61**

Page 4.2  
 Sheet 1  
 Feb 06/2009

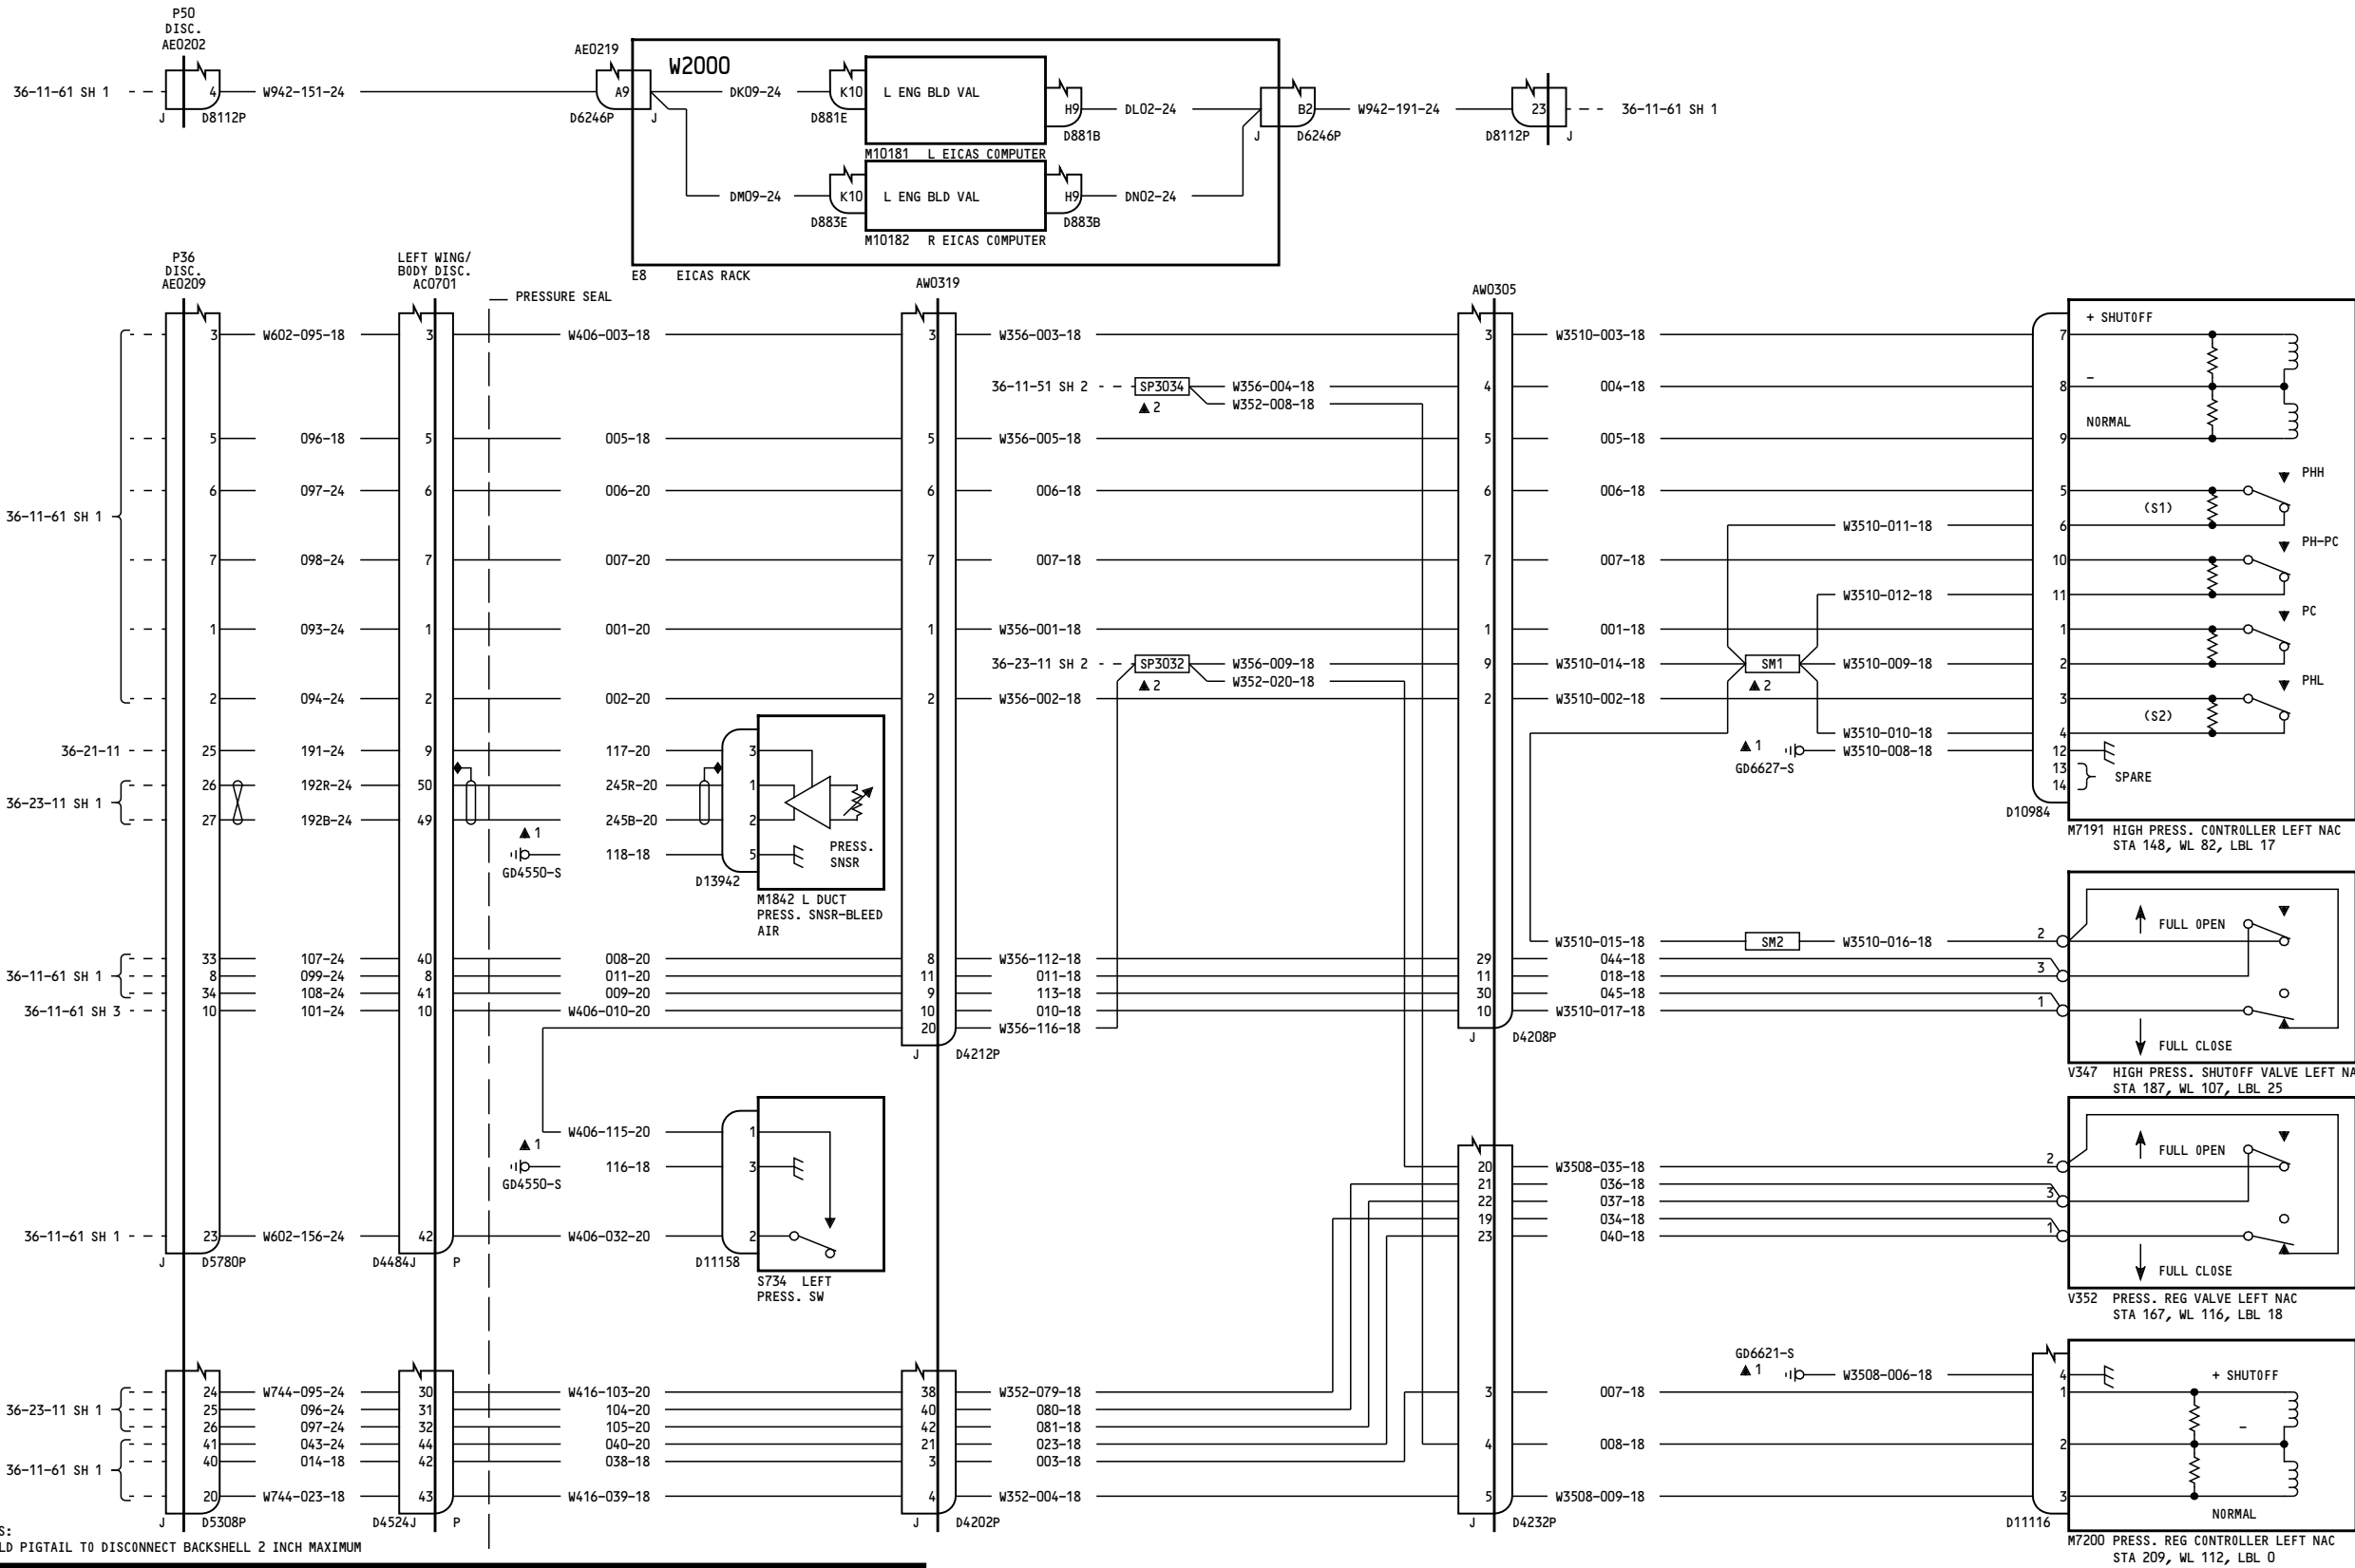

NOTES:  
SHIELD PIGTAIL TO DISCONNECT BACKSHELL 2 INCH MAXIMUM

156, 166

**AIR SUPPLY BLEED AIR-  
LEFT ENGINE HIGH  
PRESSURE CONTROL**

D280T132


**36-11-61**

Page 4.2  
Sheet 2  
Feb 06/2009

Incorporates  
36-0053

**36-11-61**

Page 4.2  
Sheet 2  
Feb 06/2009

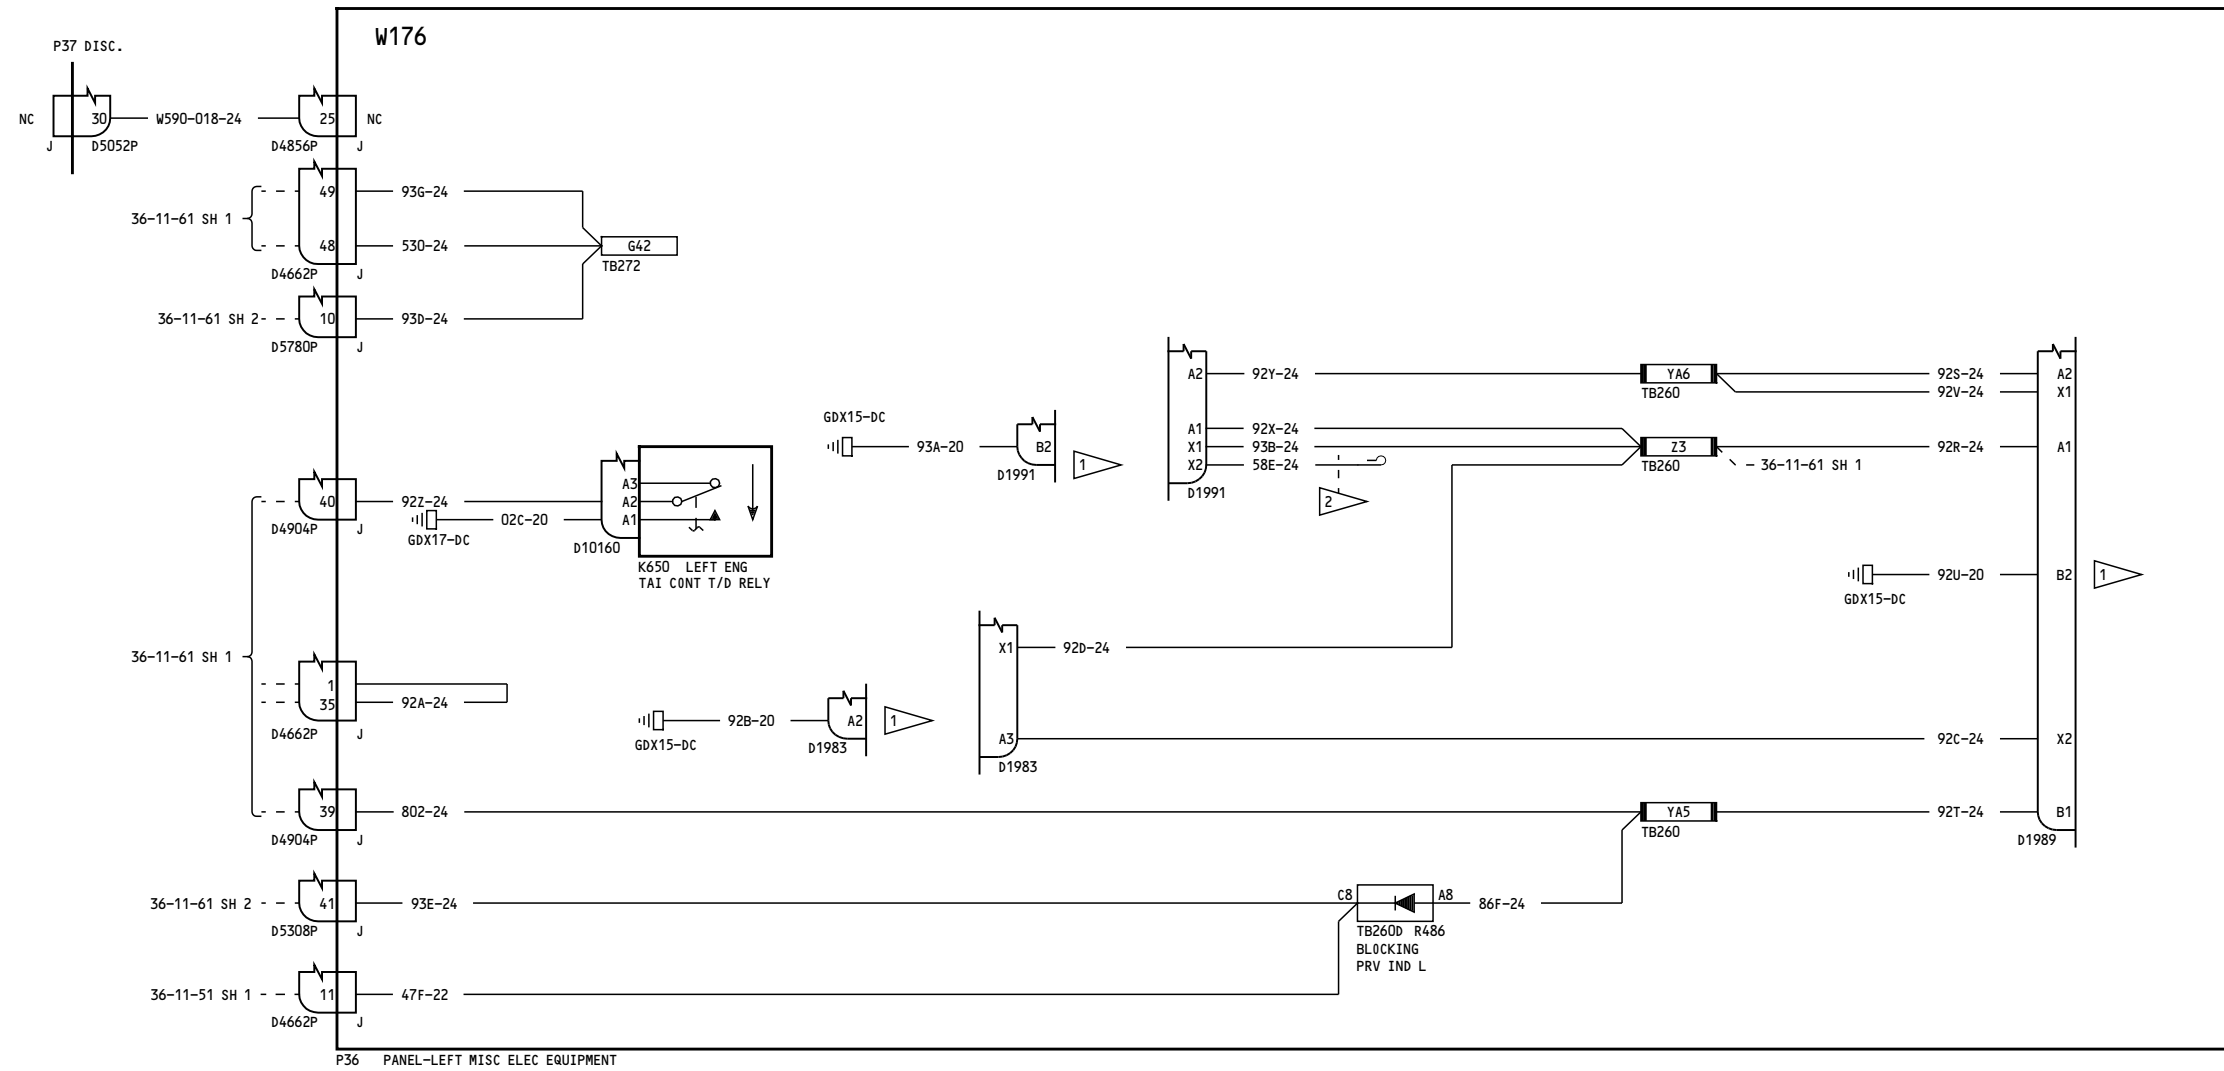

NOTES:  
 1 CAP & STOW CONNECTOR WHEN MATING EQUIPMENT IS NOT INSTALLED  
 2 CAP & STOW NEAR D10160

156, 166

**AIR SUPPLY BLEED AIR-  
LEFT ENGINE HIGH  
PRESSURE CONTROL**

D280T132


**36-11-61**

Page 4.2  
 Sheet 3  
 Feb 06/2009

Incorporates  
 36-0026 R02

**36-11-61**

Page 4.2  
 Sheet 3  
 Feb 06/2009

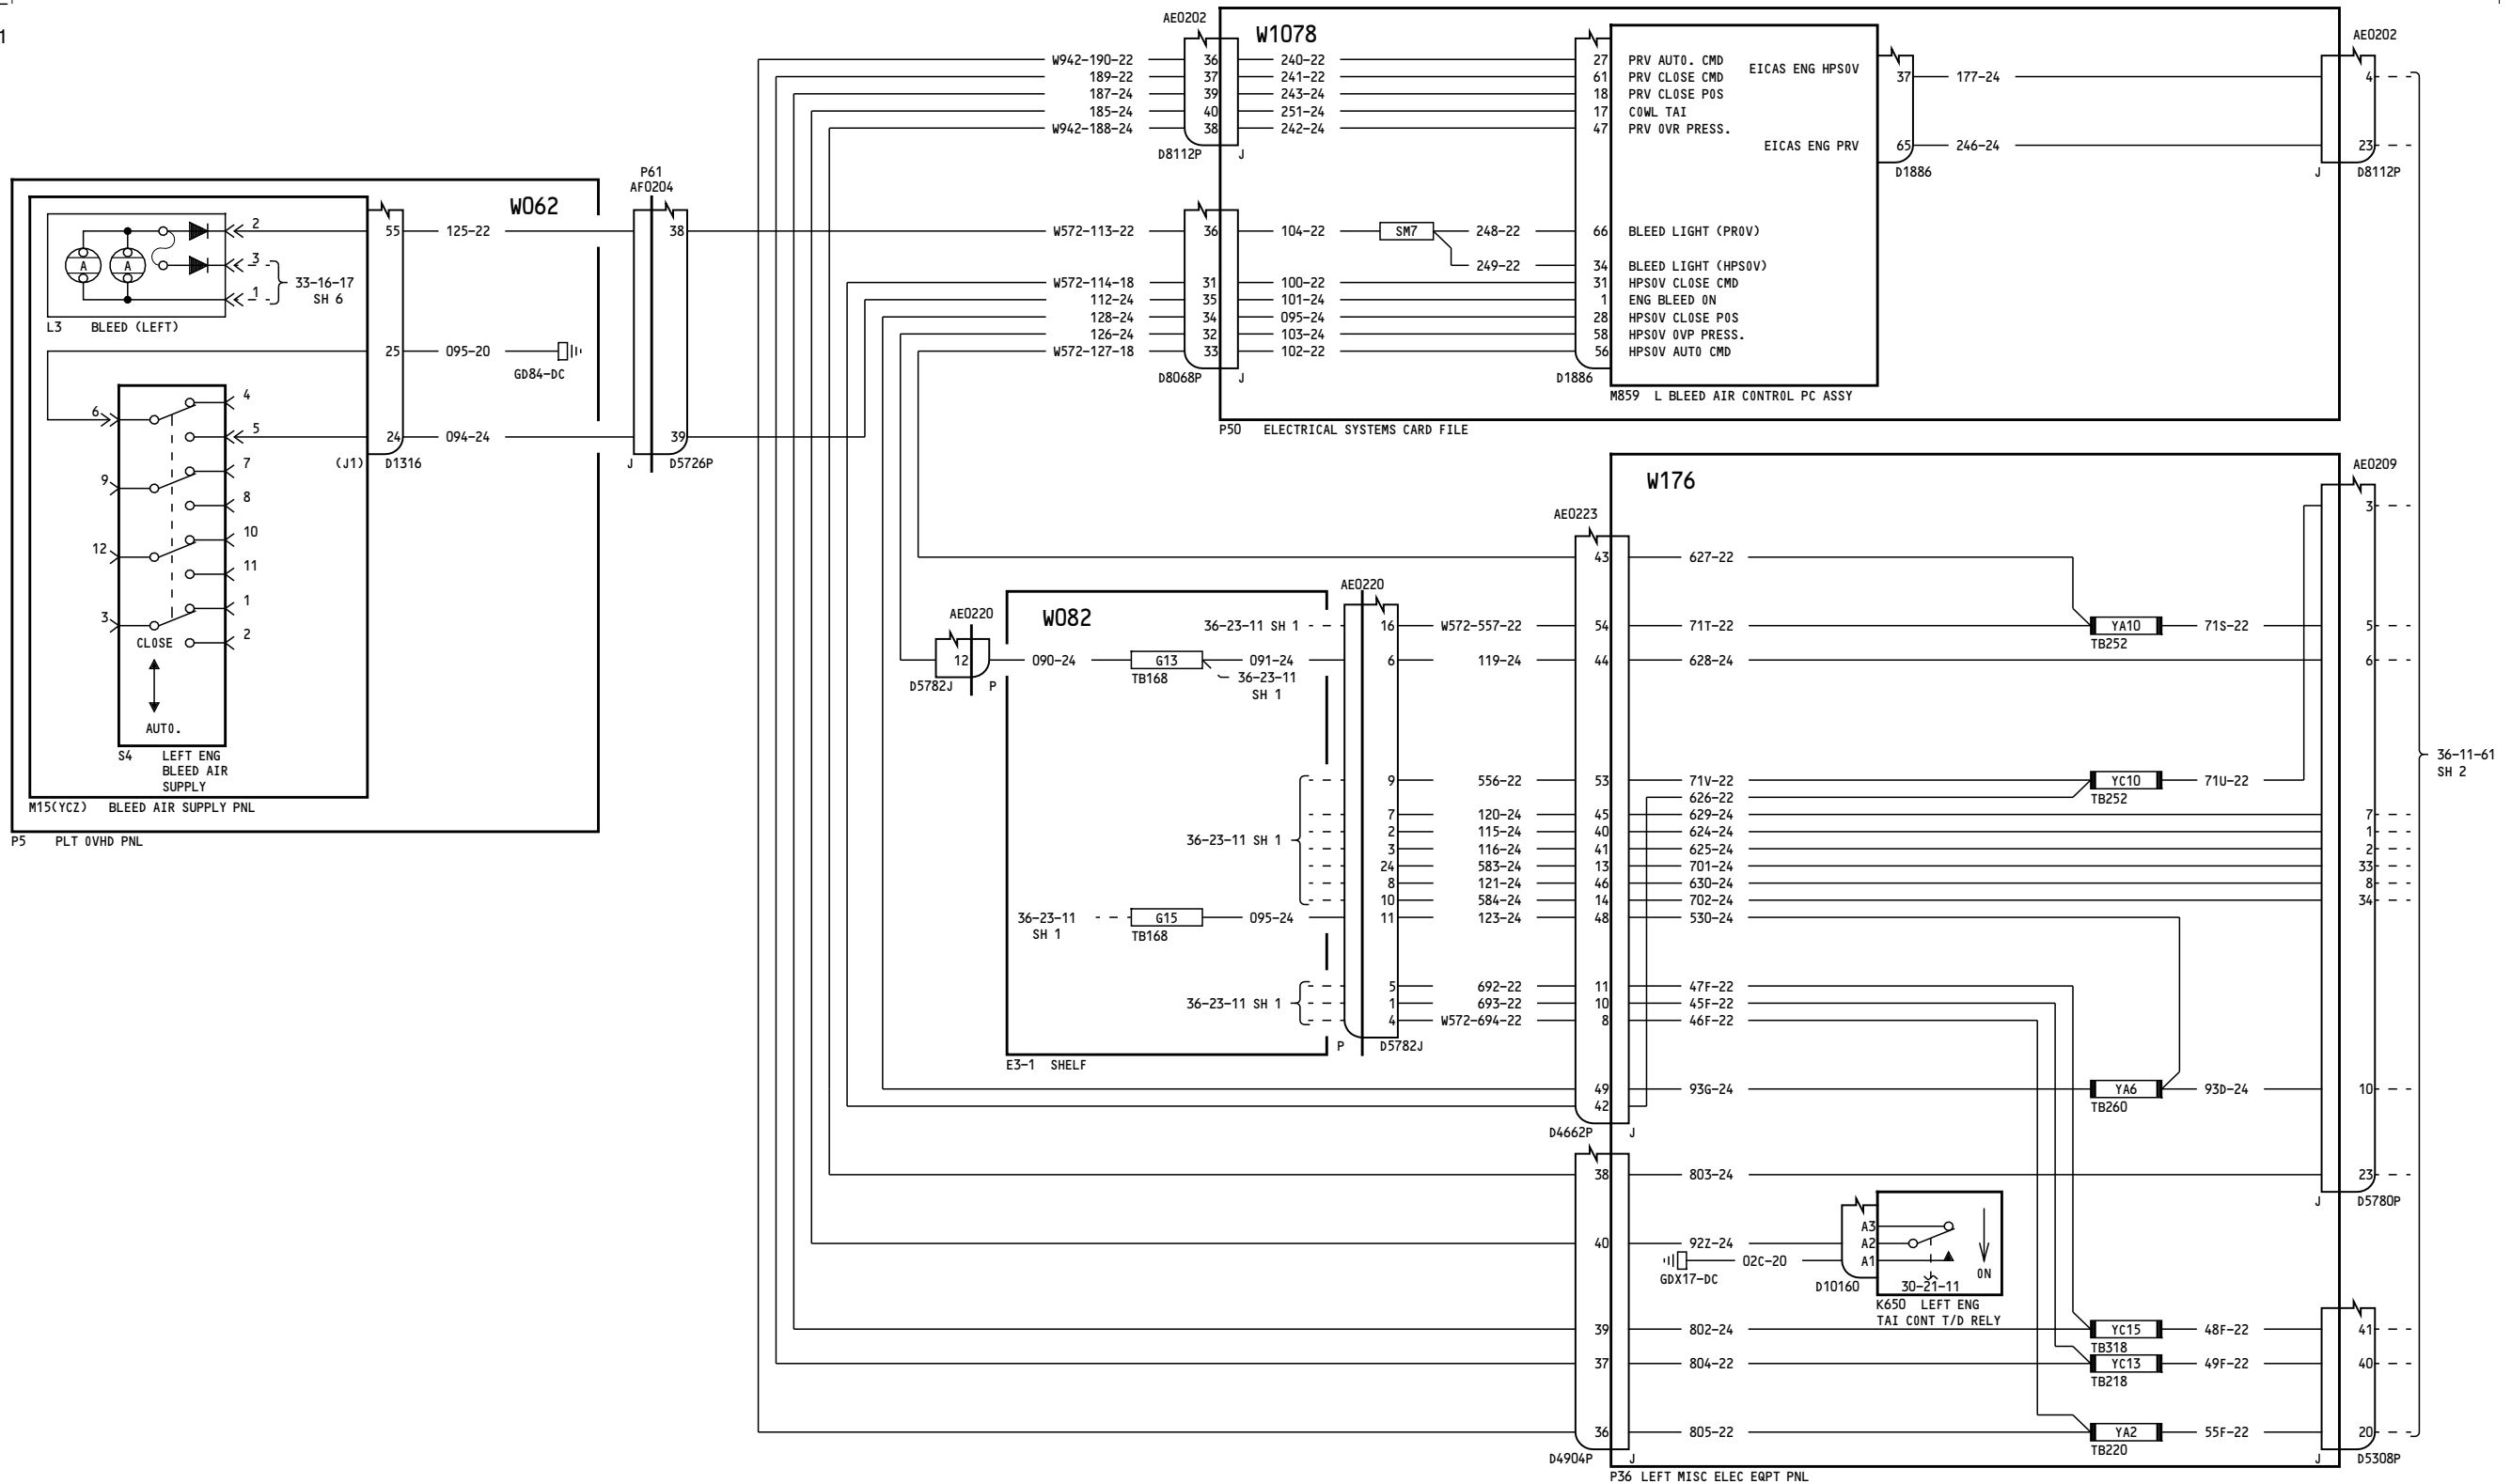

157, 167-199, 277-299

**AIR SUPPLY BLEED AIR-  
 LEFT ENGINE HIGH  
 PRESSURE CONTROL**

**36-11-61**


Page 5  
 Sheet 1  
 Jan 21/2005

D280T132

**36-11-61**

Page 5  
 Sheet 1  
 Jan 21/2005



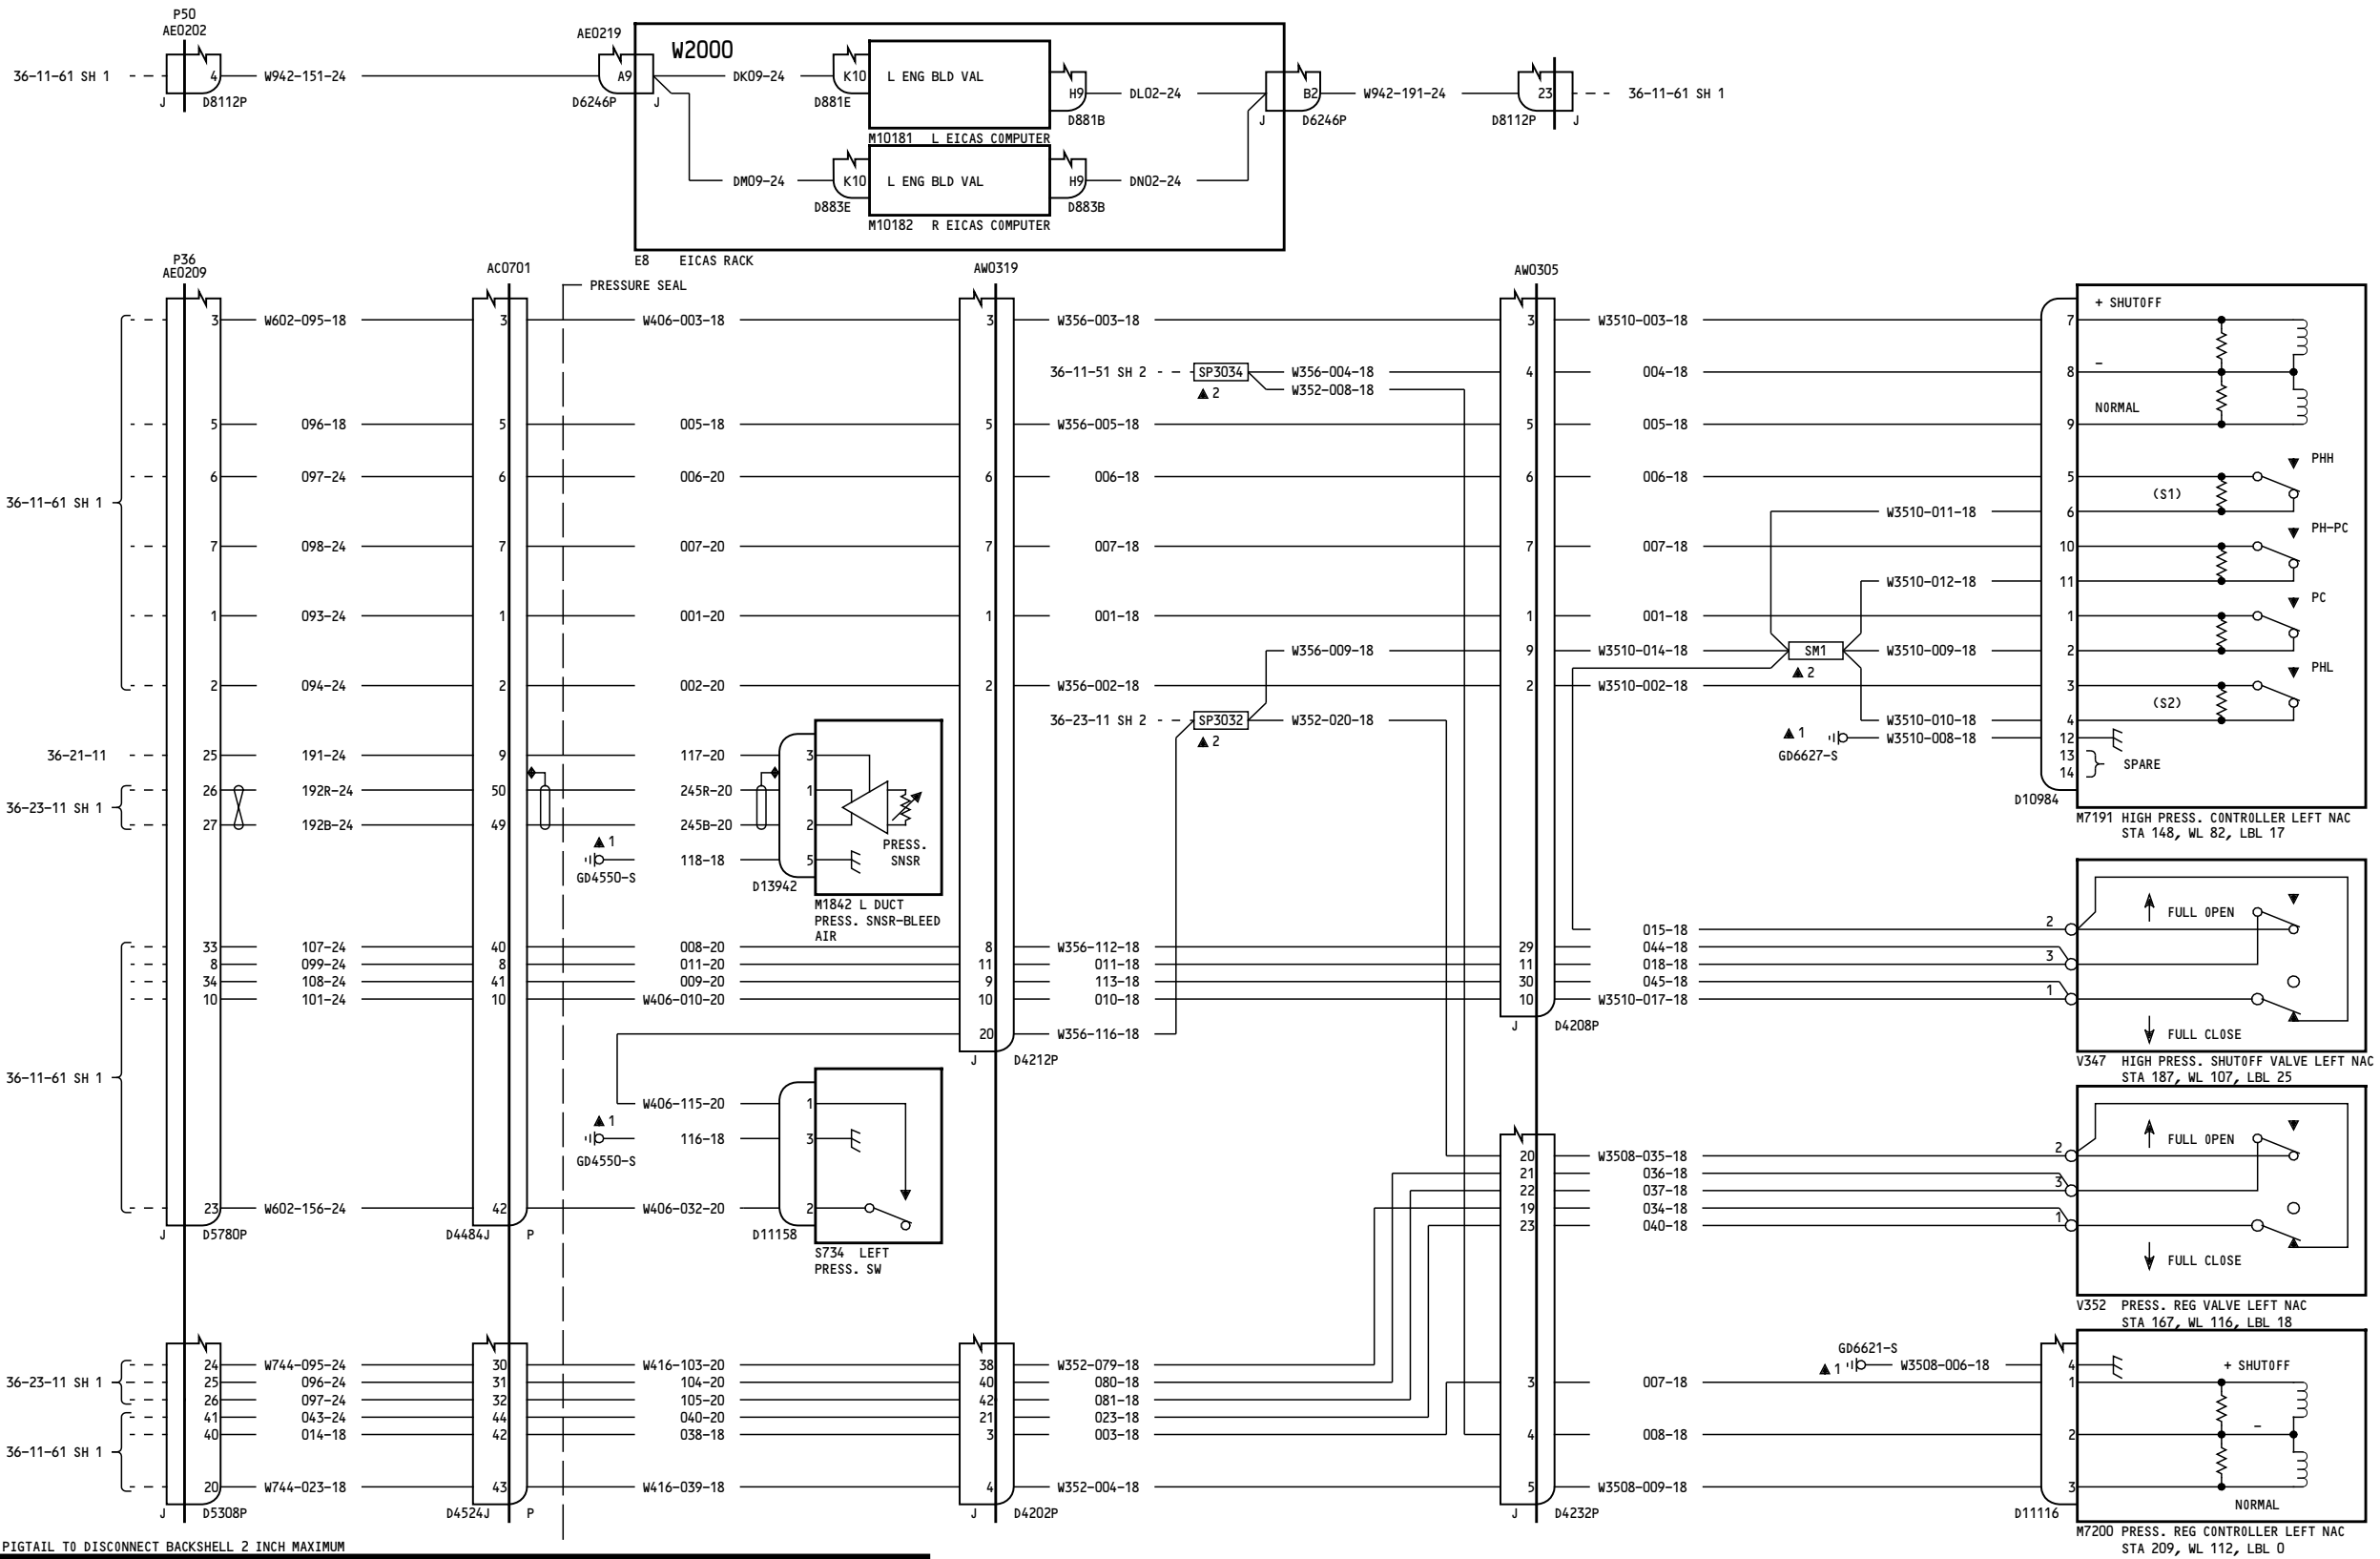

NOTES:  
SHIELD PIGTAIL TO DISCONNECT BACKSHELL 2 INCH MAXIMUM

157, 167-199, 277-299

**AIR SUPPLY BLEED AIR-  
LEFT ENGINE HIGH  
PRESSURE CONTROL**


D280T132

**36-11-61**

Page 5  
Sheet 2  
Jan 21/2005

**36-11-61**

Page 5  
Sheet 2  
Jan 21/2005

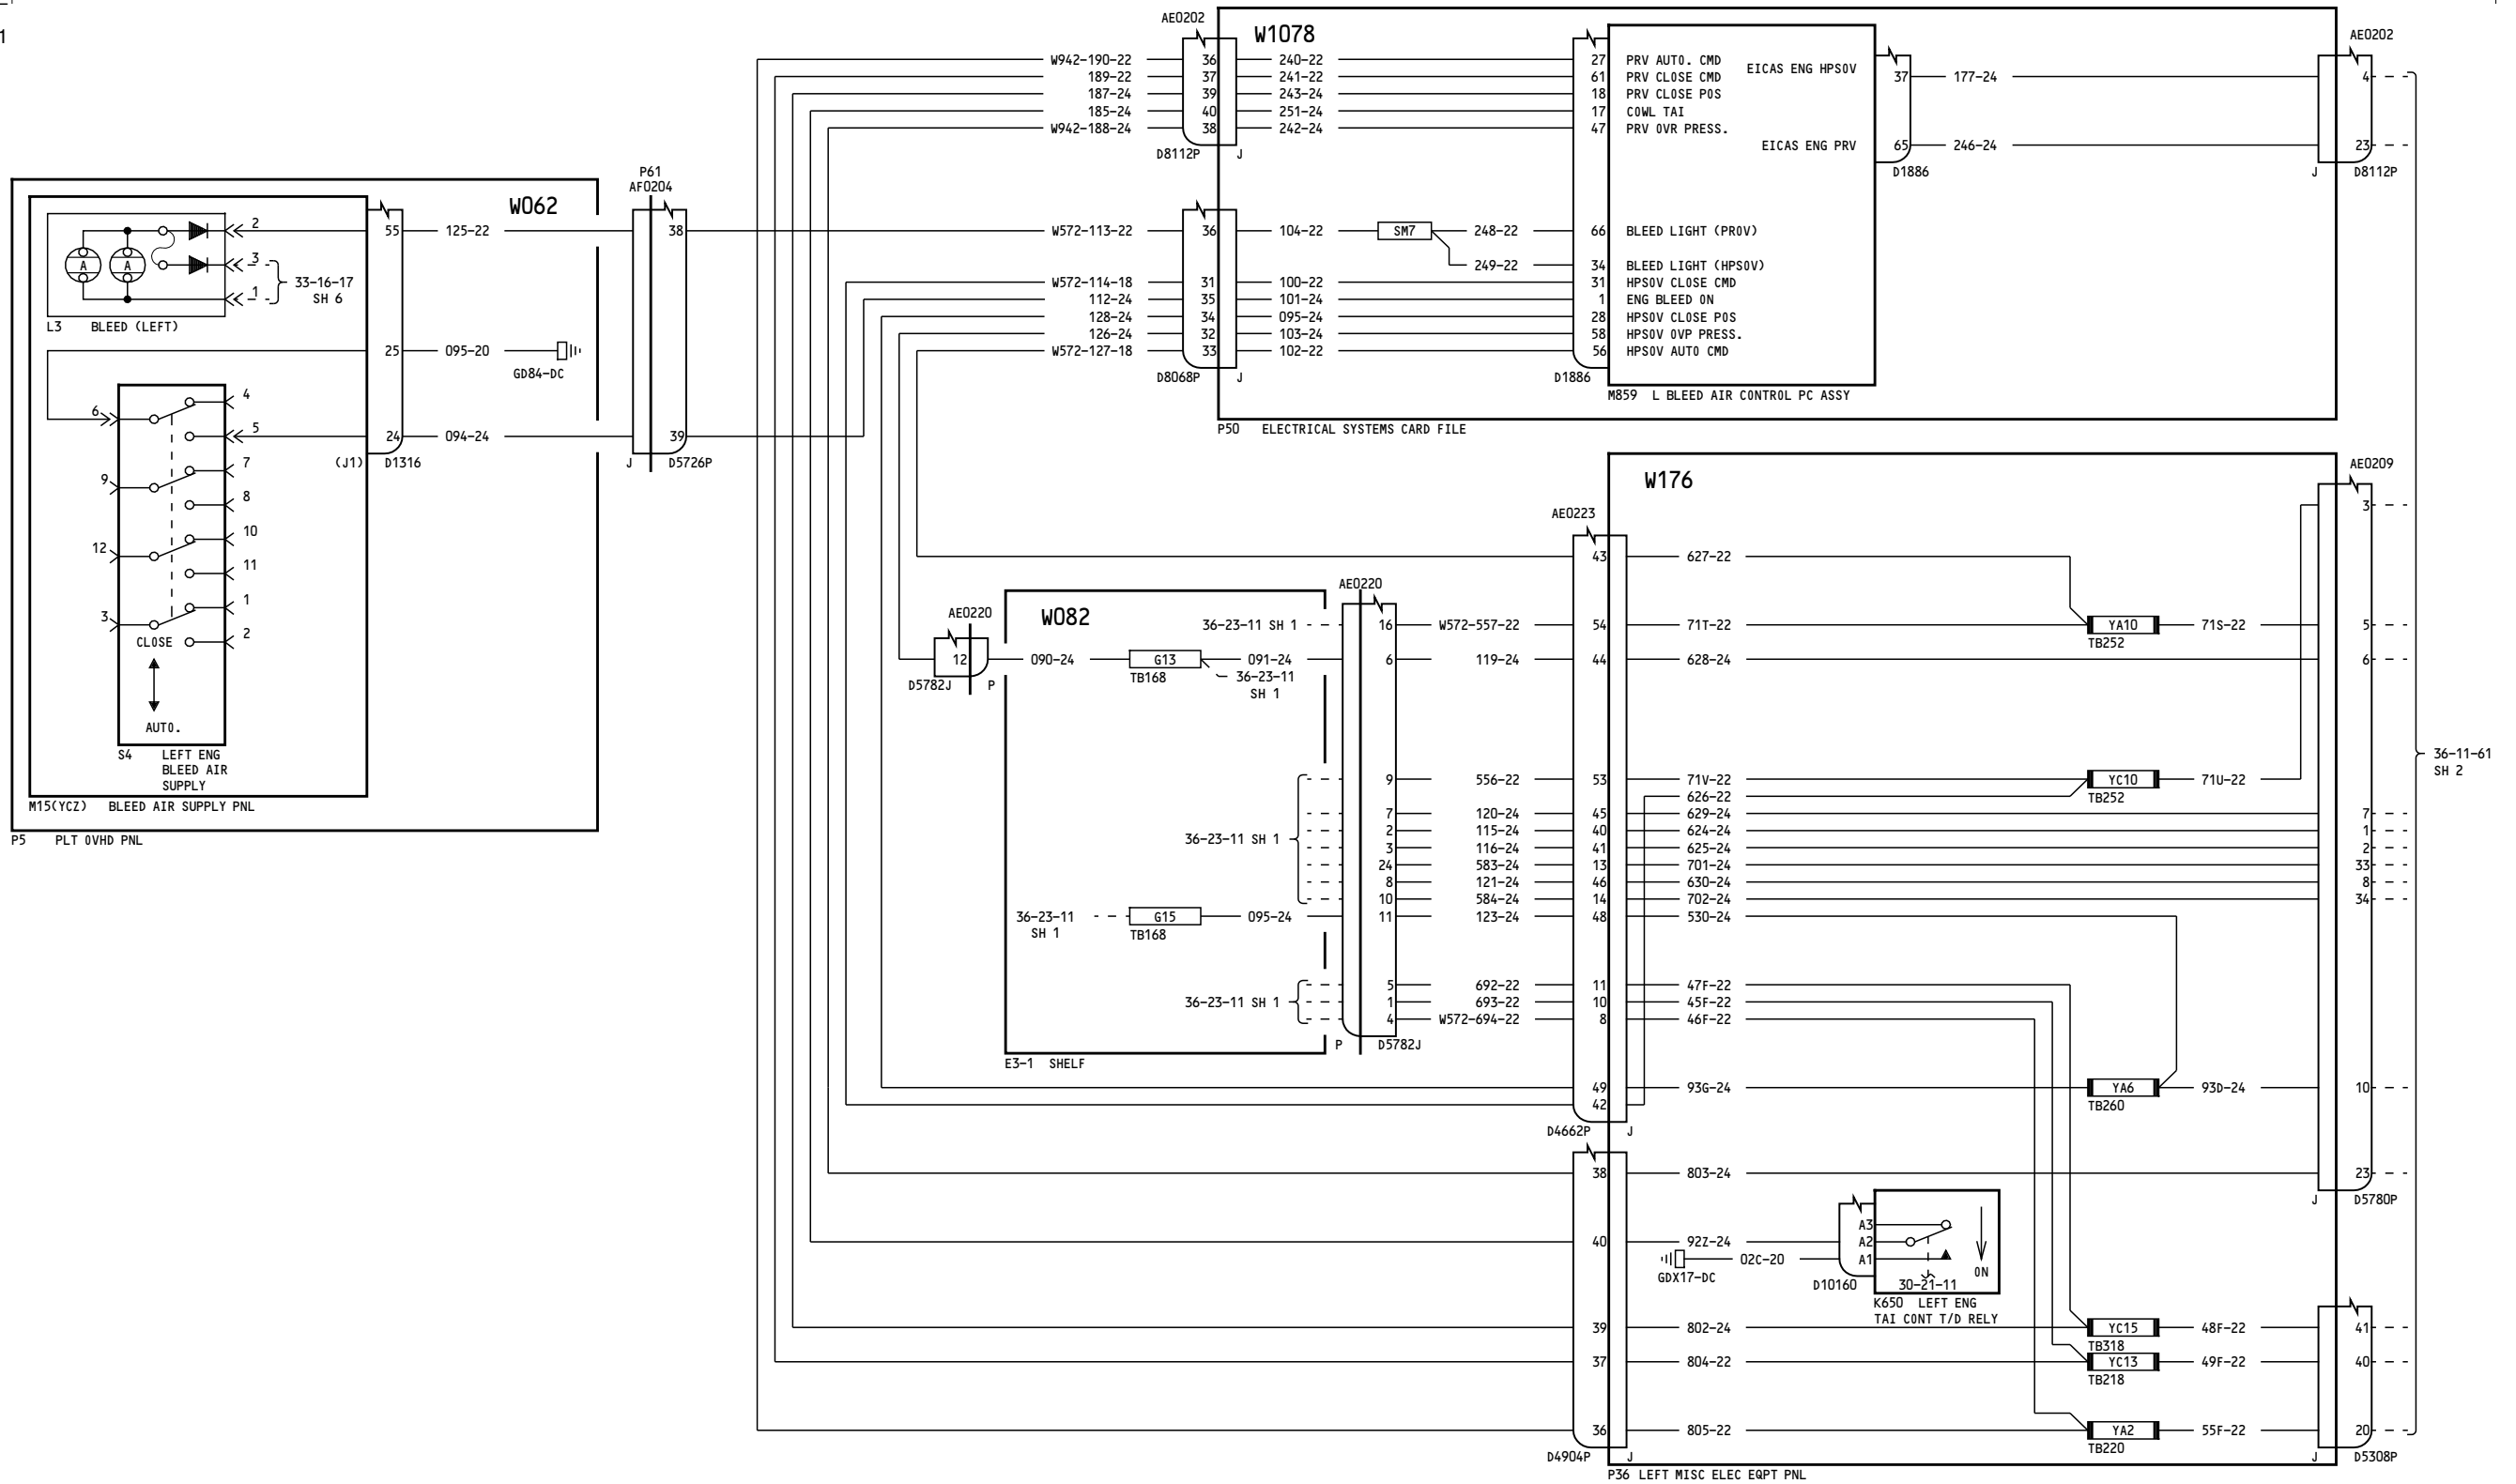

157, 167, 277-280

**AIR SUPPLY BLEED AIR-  
 LEFT ENGINE HIGH  
 PRESSURE CONTROL**



**36-11-61**

Page 5.1  
 Sheet 1  
 Feb 06/2009

D280T132

**36-11-61**

Page 5.1  
 Sheet 1  
 Feb 06/2009

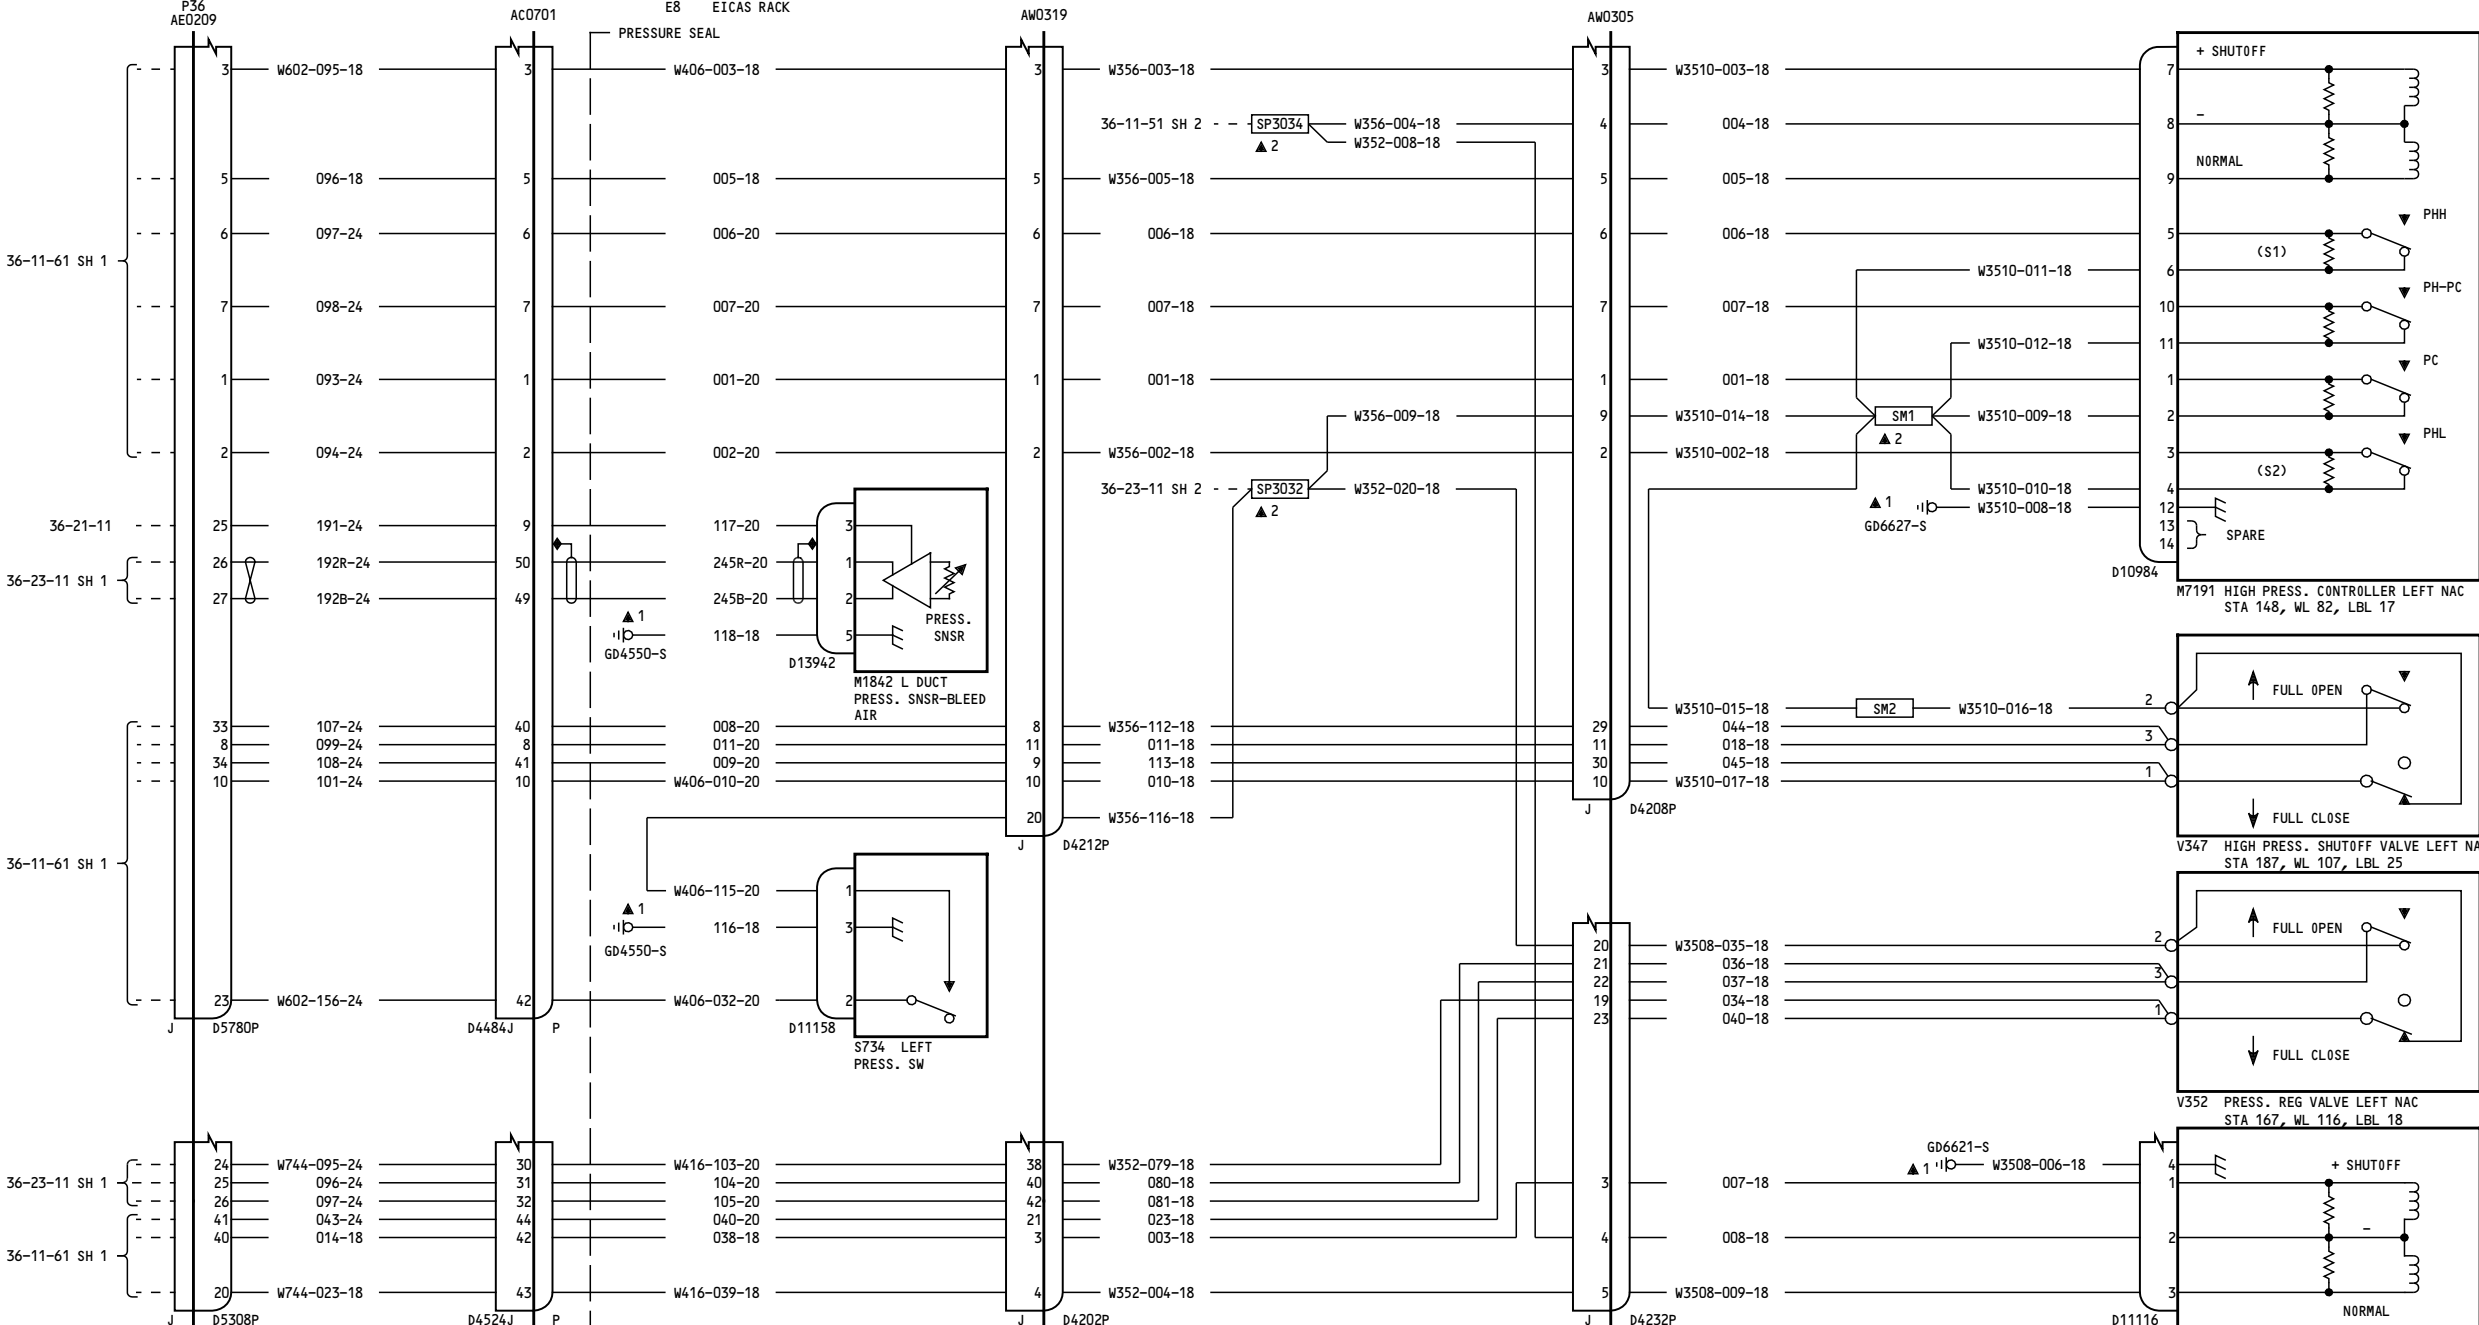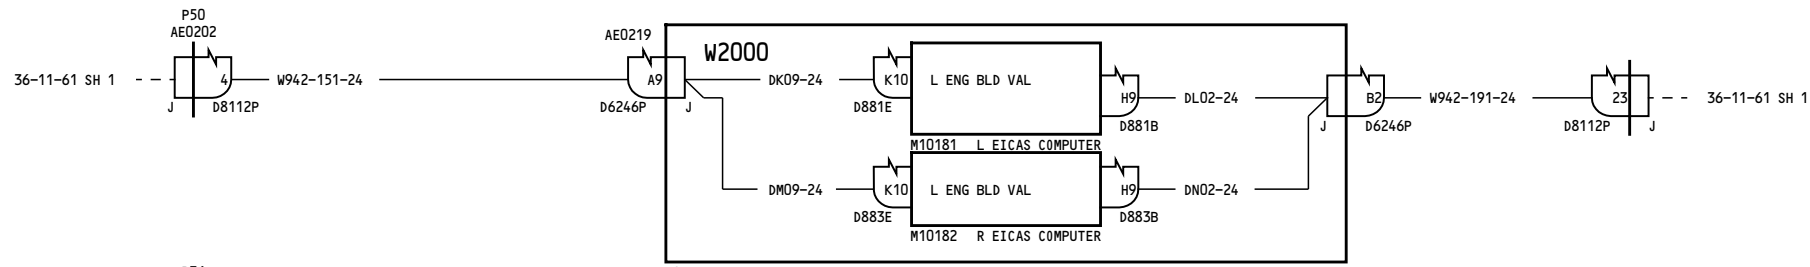

NOTES:  
SHIELD PIGTAIL TO DISCONNECT BACKSHELL 2 INCH MAXIMUM

157, 167, 277-280

**AIR SUPPLY BLEED AIR-  
LEFT ENGINE HIGH  
PRESSURE CONTROL**

D280T132


**36-11-61**

Page 5.1  
Sheet 2  
Feb 06/2009

Incorporates  
36-0053

**36-11-61**

Page 5.1  
Sheet 2  
Feb 06/2009

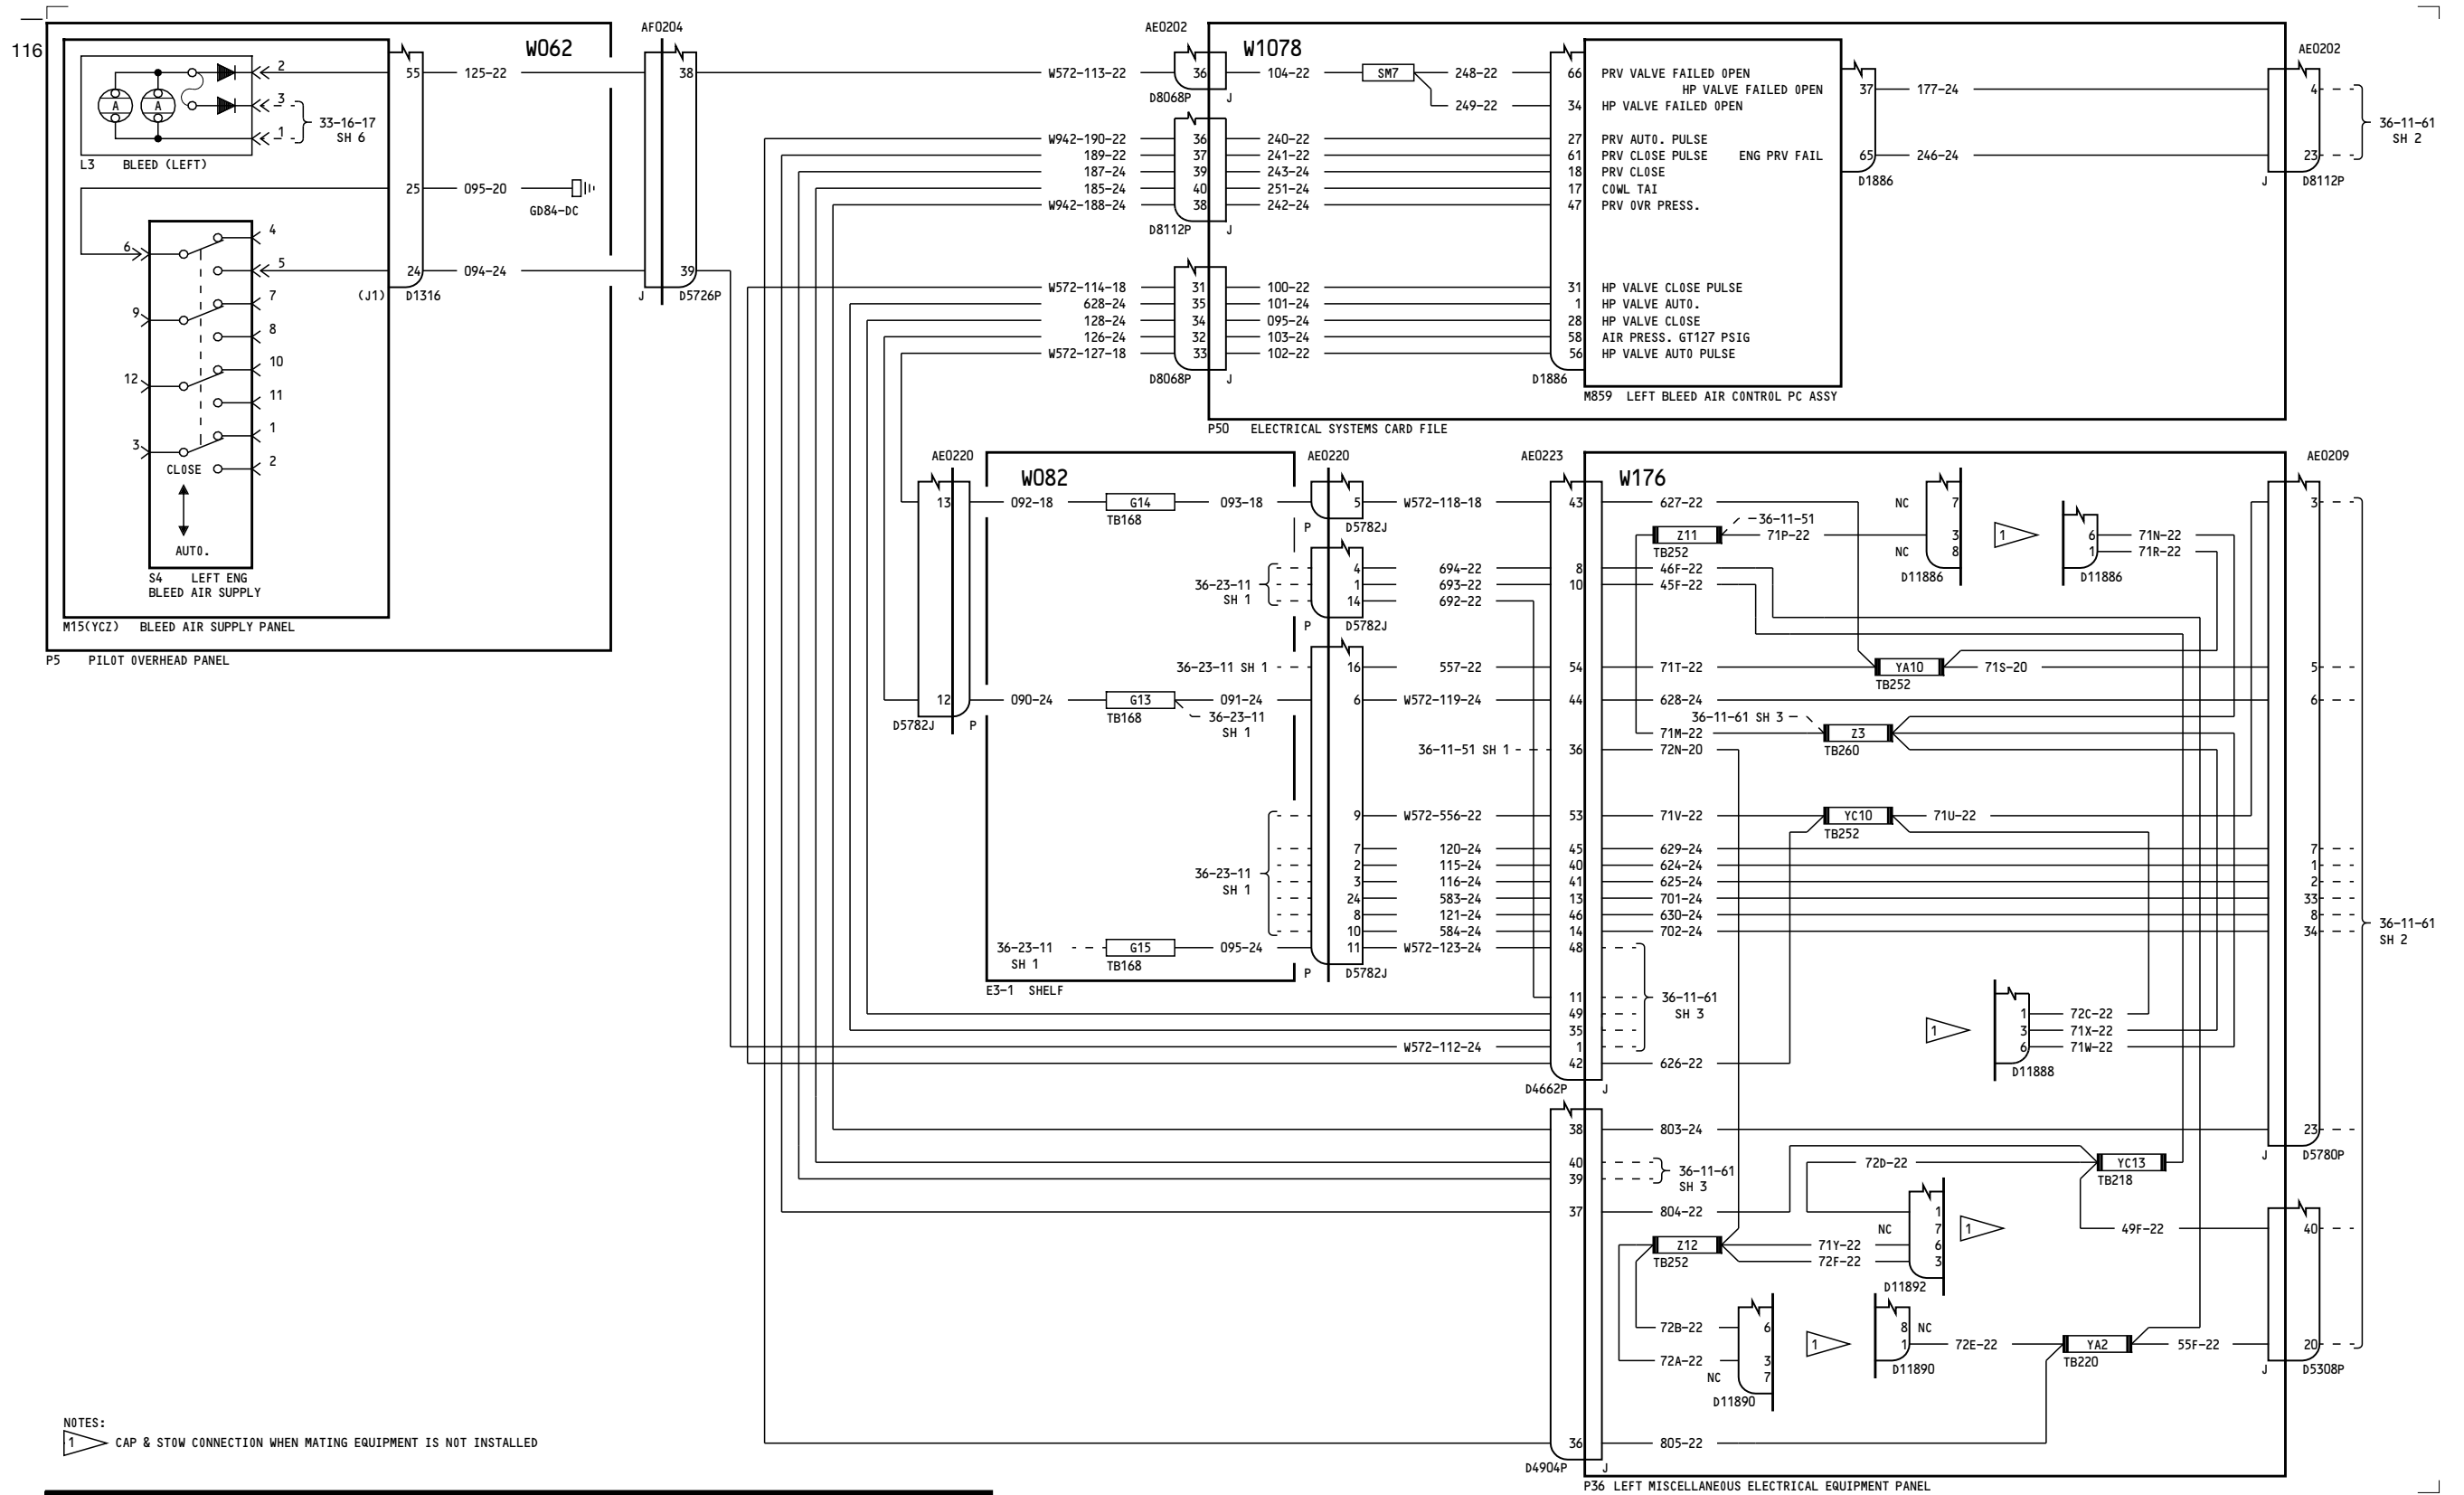

NOTES:  
 1 CAP & STOW CONNECTION WHEN MATING EQUIPMENT IS NOT INSTALLED

162

**AIR SUPPLY BLEED AIR-  
 LEFT ENGINE HIGH  
 PRESSURE CONTROL**

D280T132


**36-11-61**

Page 6.1  
 Sheet 1  
 Jan 21/2005

Incorporates  
 36-0026 R02

**36-11-61**

Page 6.1  
 Sheet 1  
 Jan 21/2005

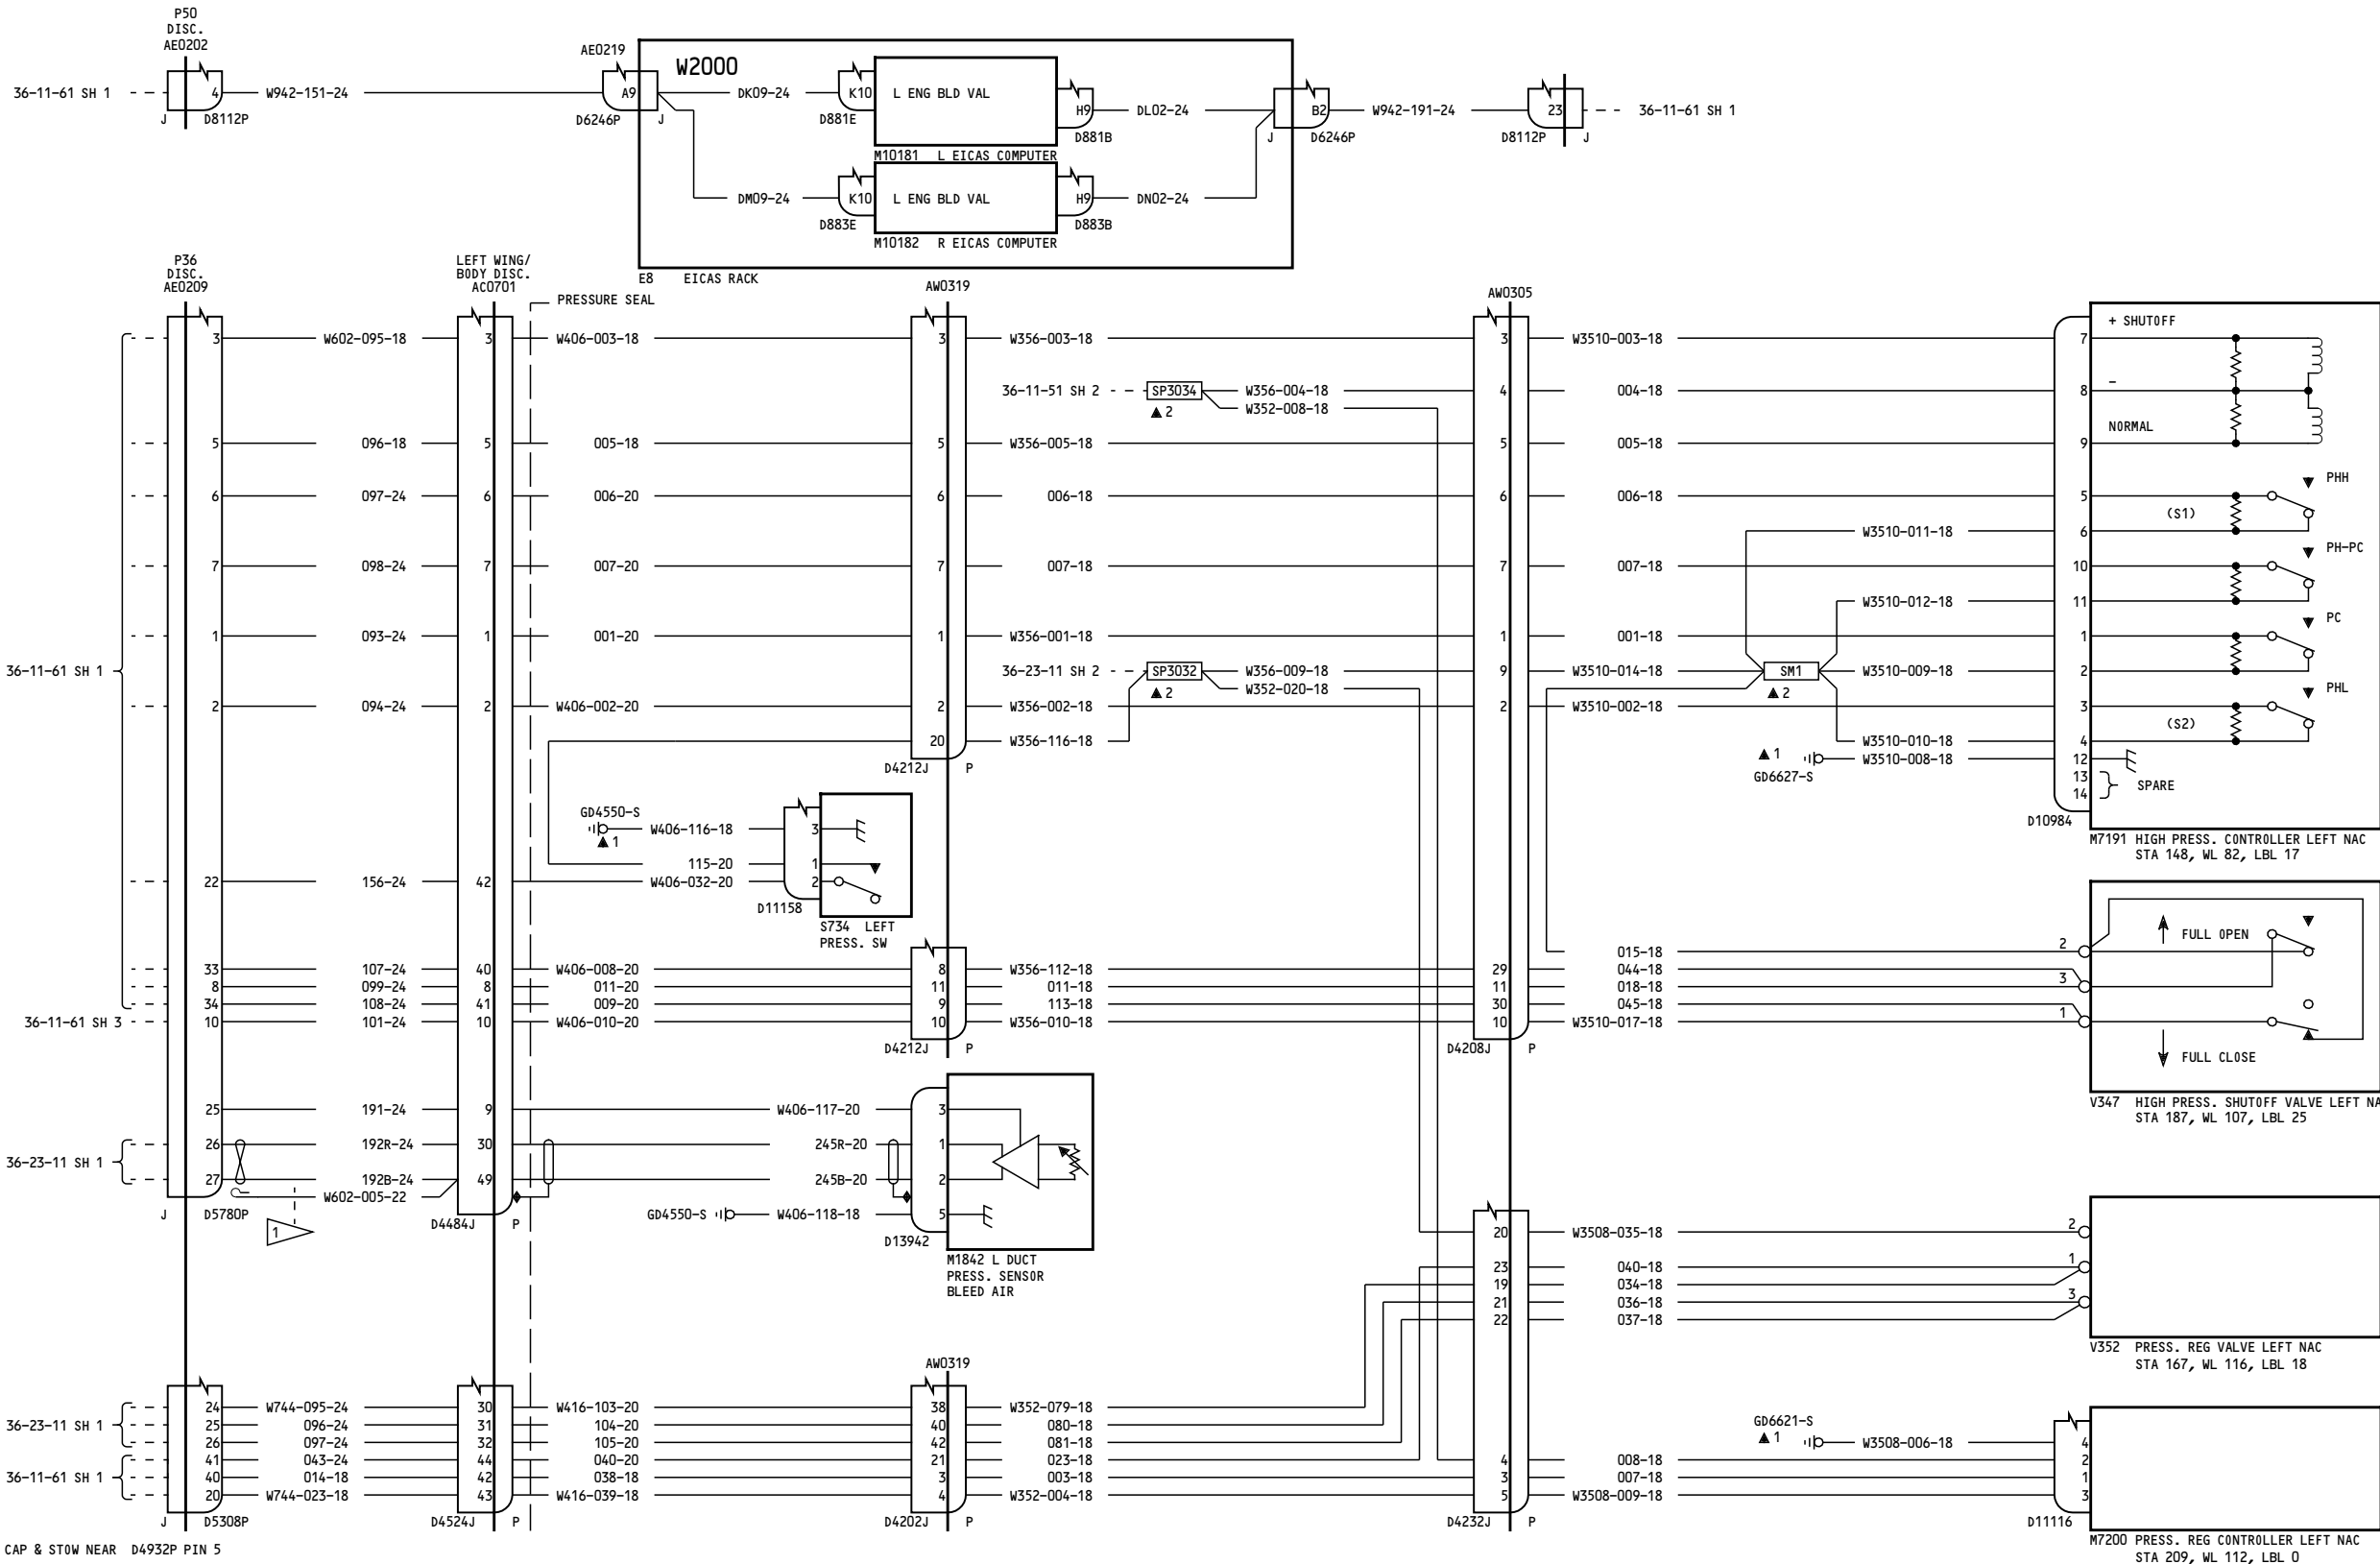

NOTES  
 1 CAP & STOW NEAR D4932P PIN 5

**AIR SUPPLY BLEED AIR-  
 LEFT ENGINE HIGH  
 PRESSURE CONTROL**


D280T132

**36-11-61**

Page 6.1  
 Sheet 2  
 Jan 21/2005

**36-11-61**

Page 6.1  
 Sheet 2  
 Jan 21/2005

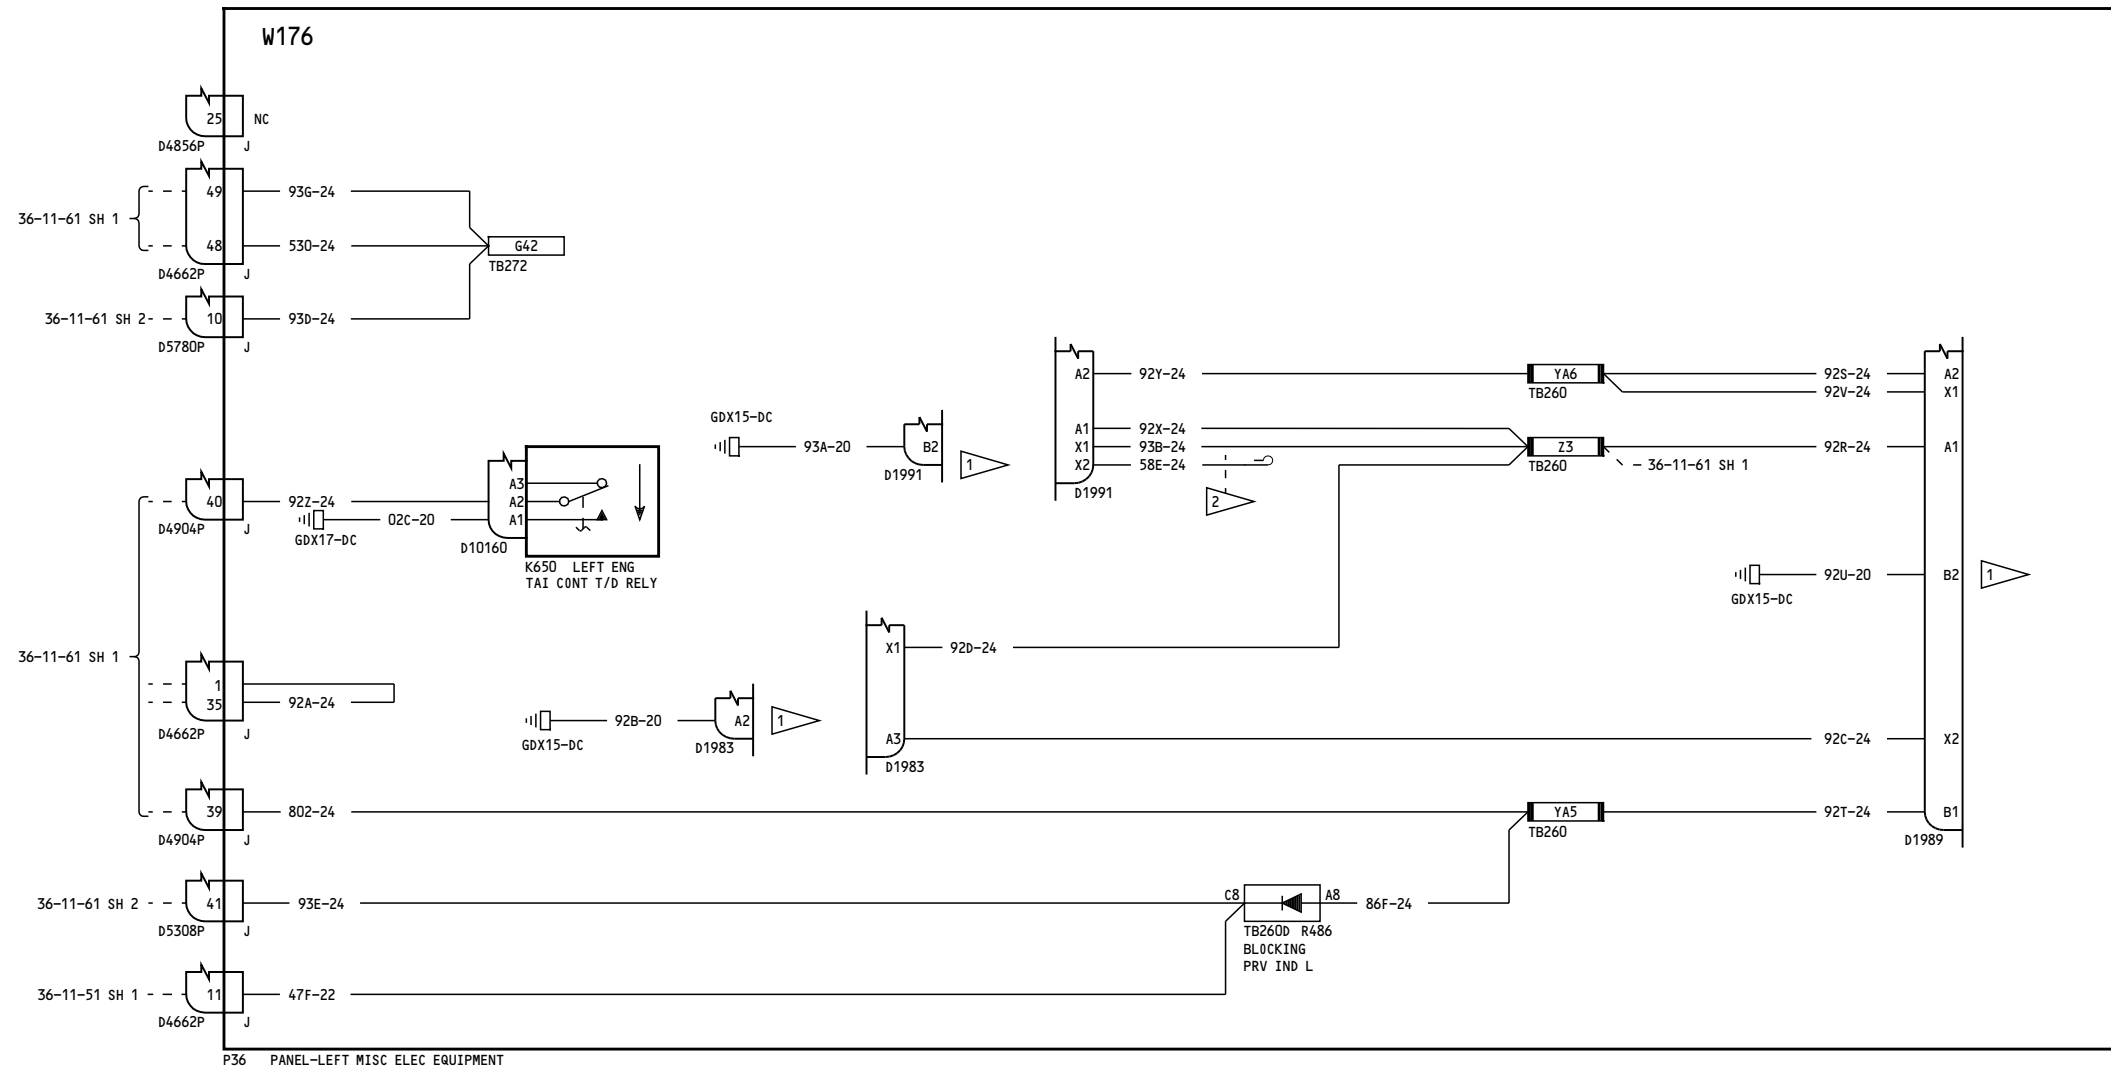

NOTES:  
 1 CAP & STOW CONNECTOR WHEN MATING EQUIPMENT IS NOT INSTALLED  
 2 CAP & STOW NEAR D10160

162

**AIR SUPPLY BLEED AIR-  
 LEFT ENGINE HIGH  
 PRESSURE CONTROL**

D280T132


**36-11-61**

Page 6.1  
 Sheet 3  
 Jan 21/2005

Incorporates  
 36-0026 R02

**36-11-61**

Page 6.1  
 Sheet 3  
 Jan 21/2005

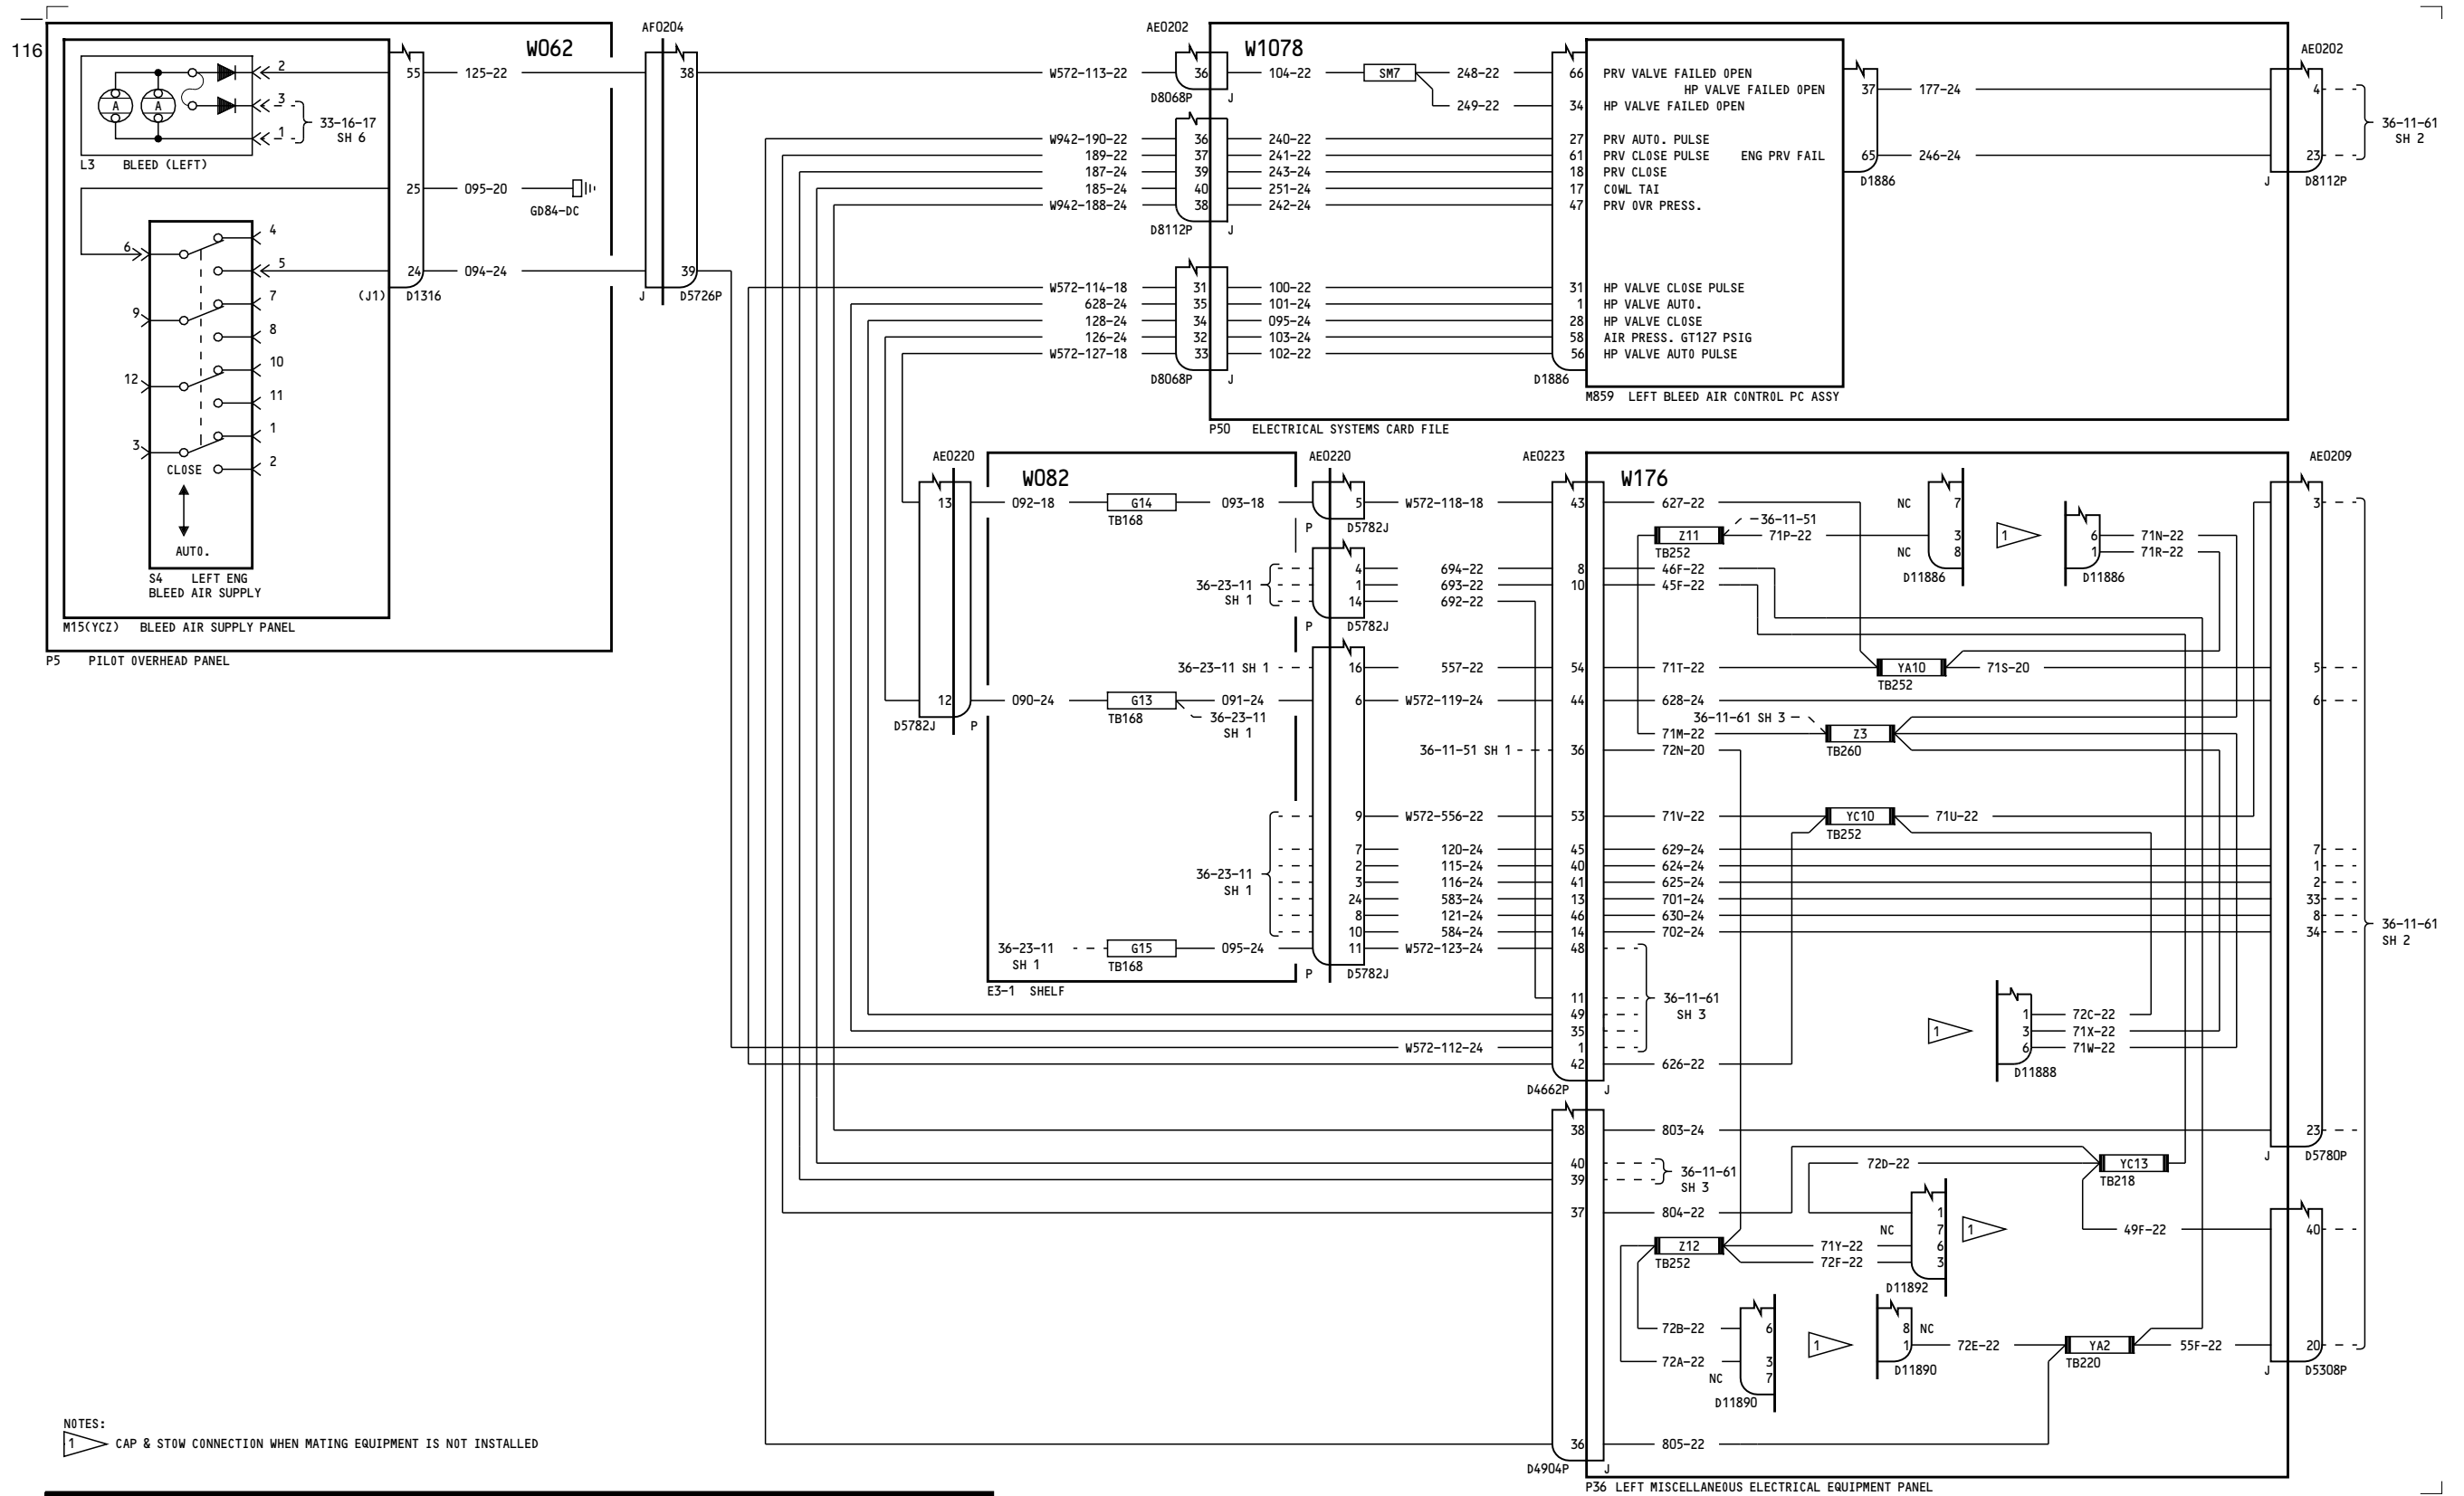

NOTES:  
 1 CAP & STOW CONNECTION WHEN MATING EQUIPMENT IS NOT INSTALLED

162

**AIR SUPPLY BLEED AIR-  
 LEFT ENGINE HIGH  
 PRESSURE CONTROL**

D280T132


**36-11-61**

Page 6.2  
 Sheet 1  
 Feb 06/2009

Incorporates  
 36-0026 R02

**36-11-61**

Page 6.2  
 Sheet 1  
 Feb 06/2009

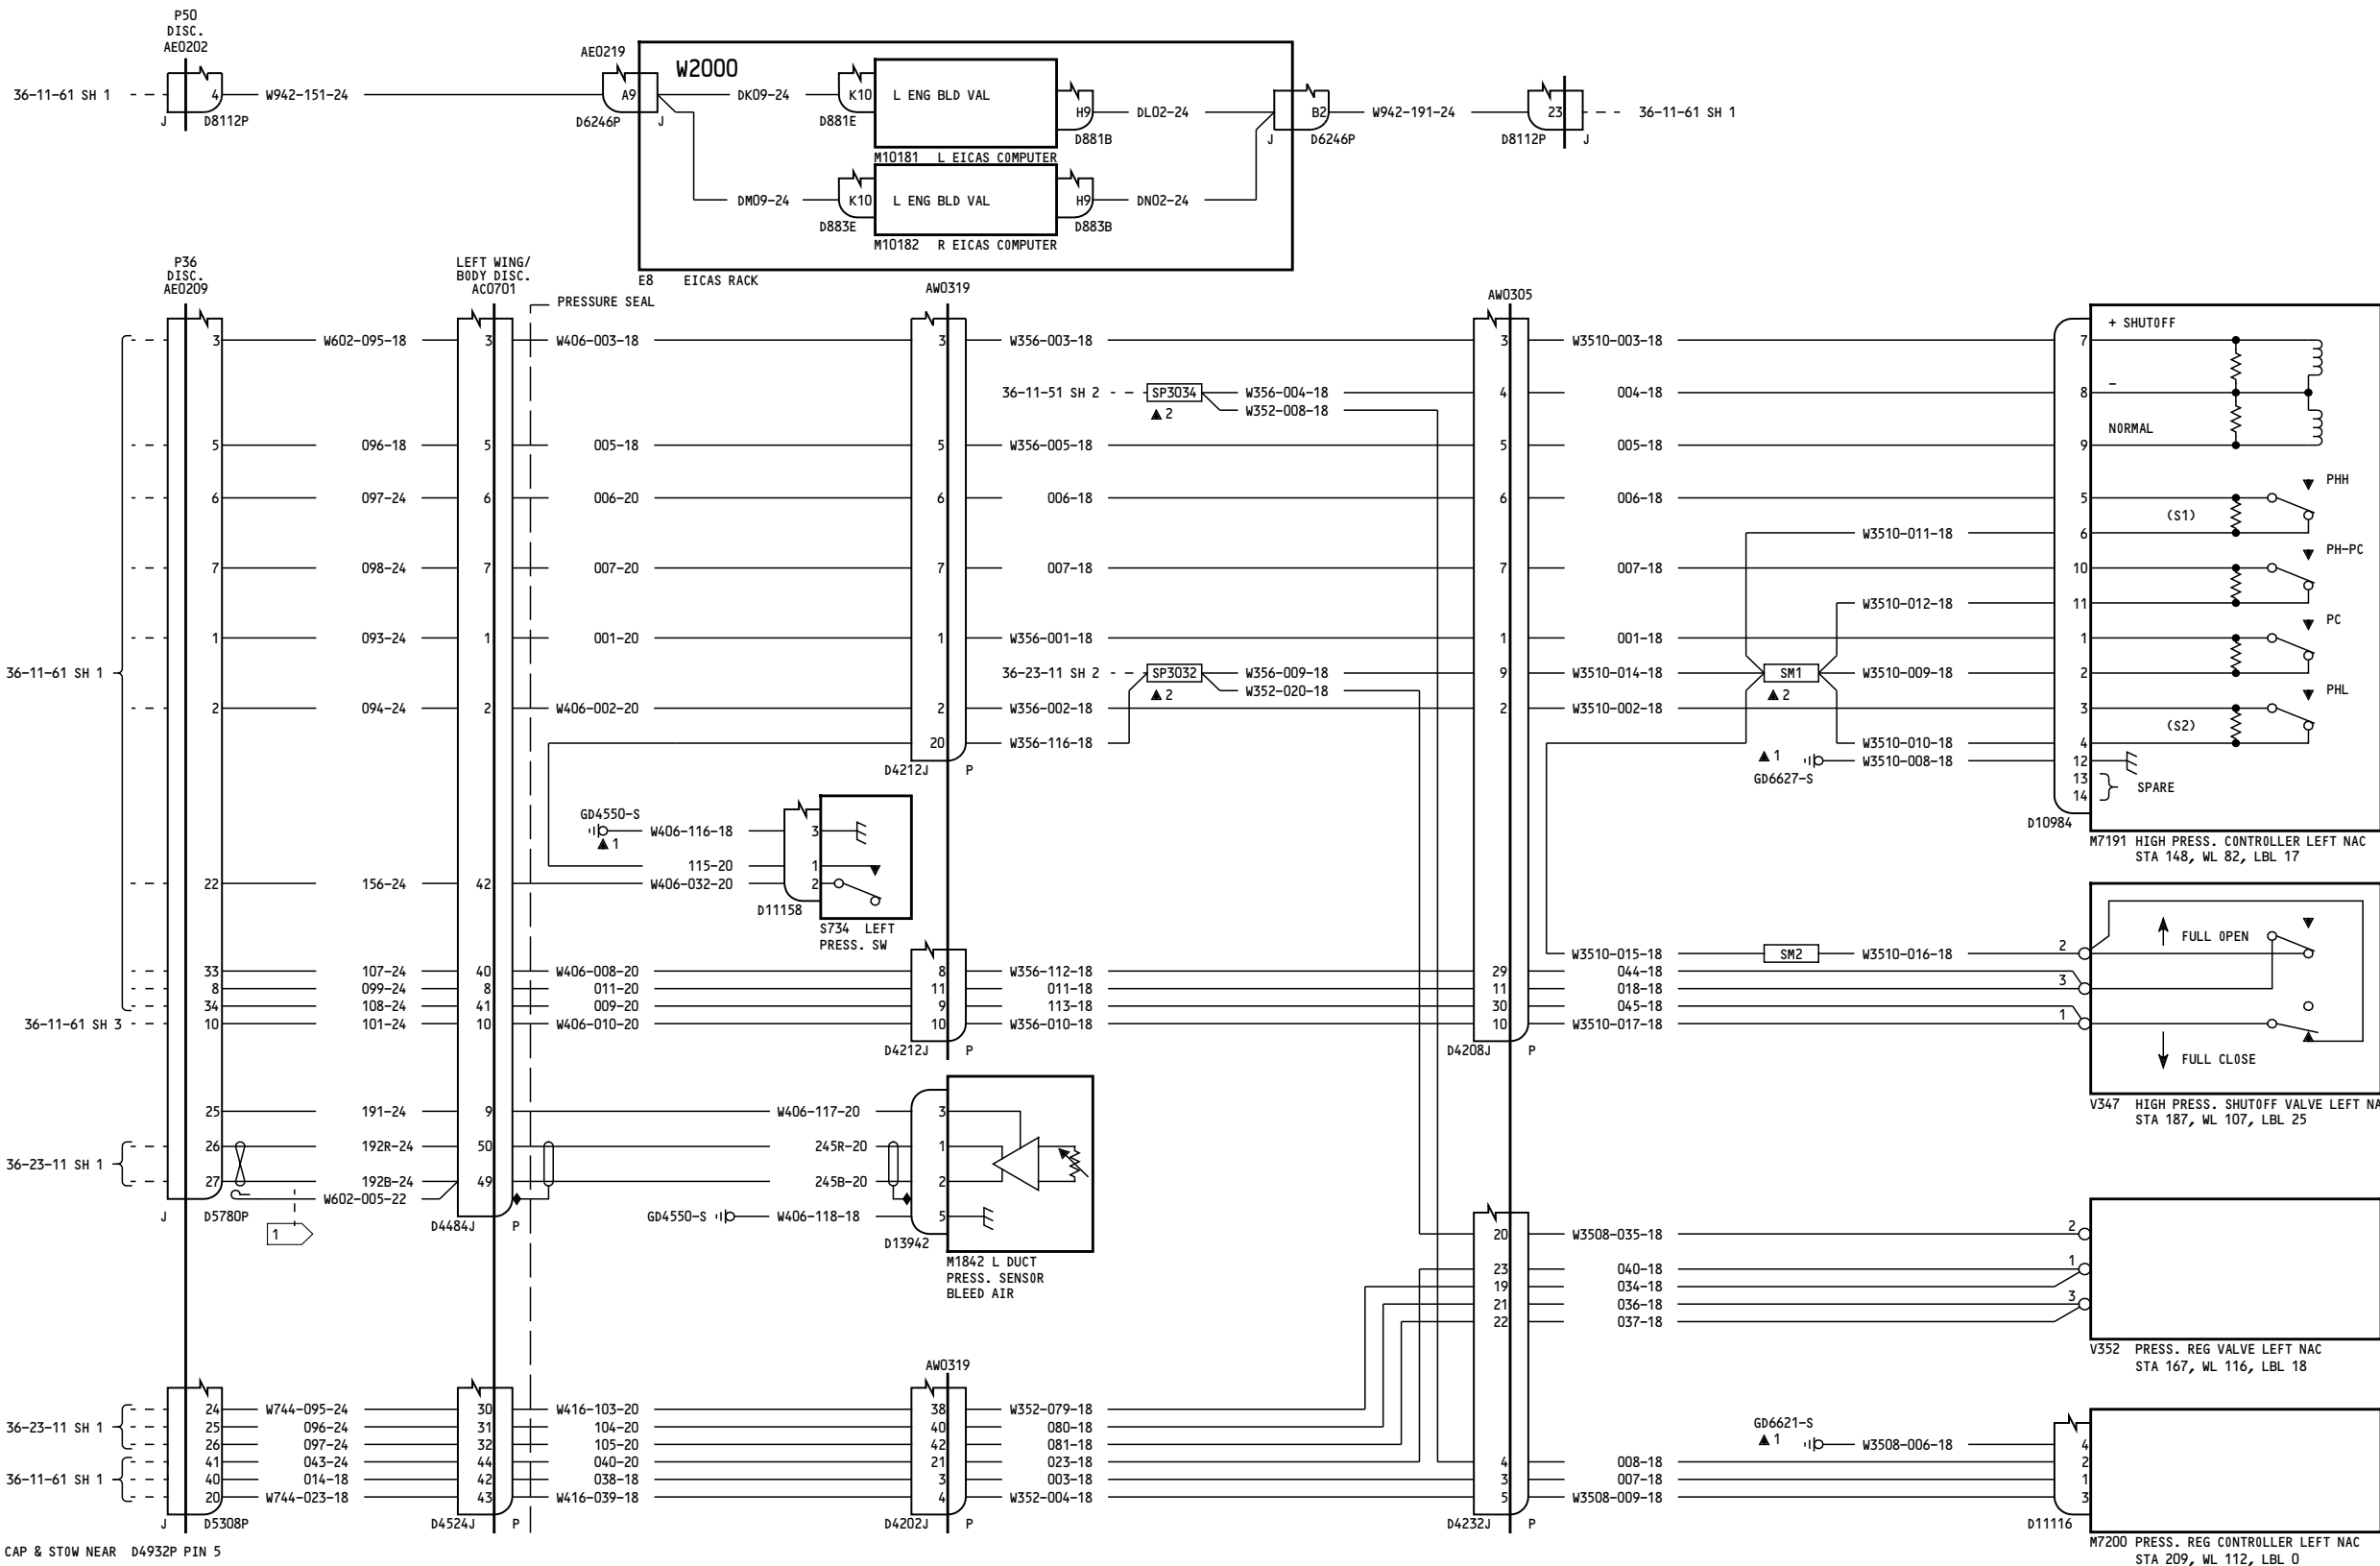

NOTES  
 1 CAP & STOW NEAR D4932P PIN 5

162

**AIR SUPPLY BLEED AIR-  
 LEFT ENGINE HIGH  
 PRESSURE CONTROL**

D280T132

**36-11-61**


Page 6.2  
 Sheet 2  
 Feb 06/2009

Incorporates  
 36-0053

**36-11-61**

Page 6.2  
 Sheet 2  
 Feb 06/2009



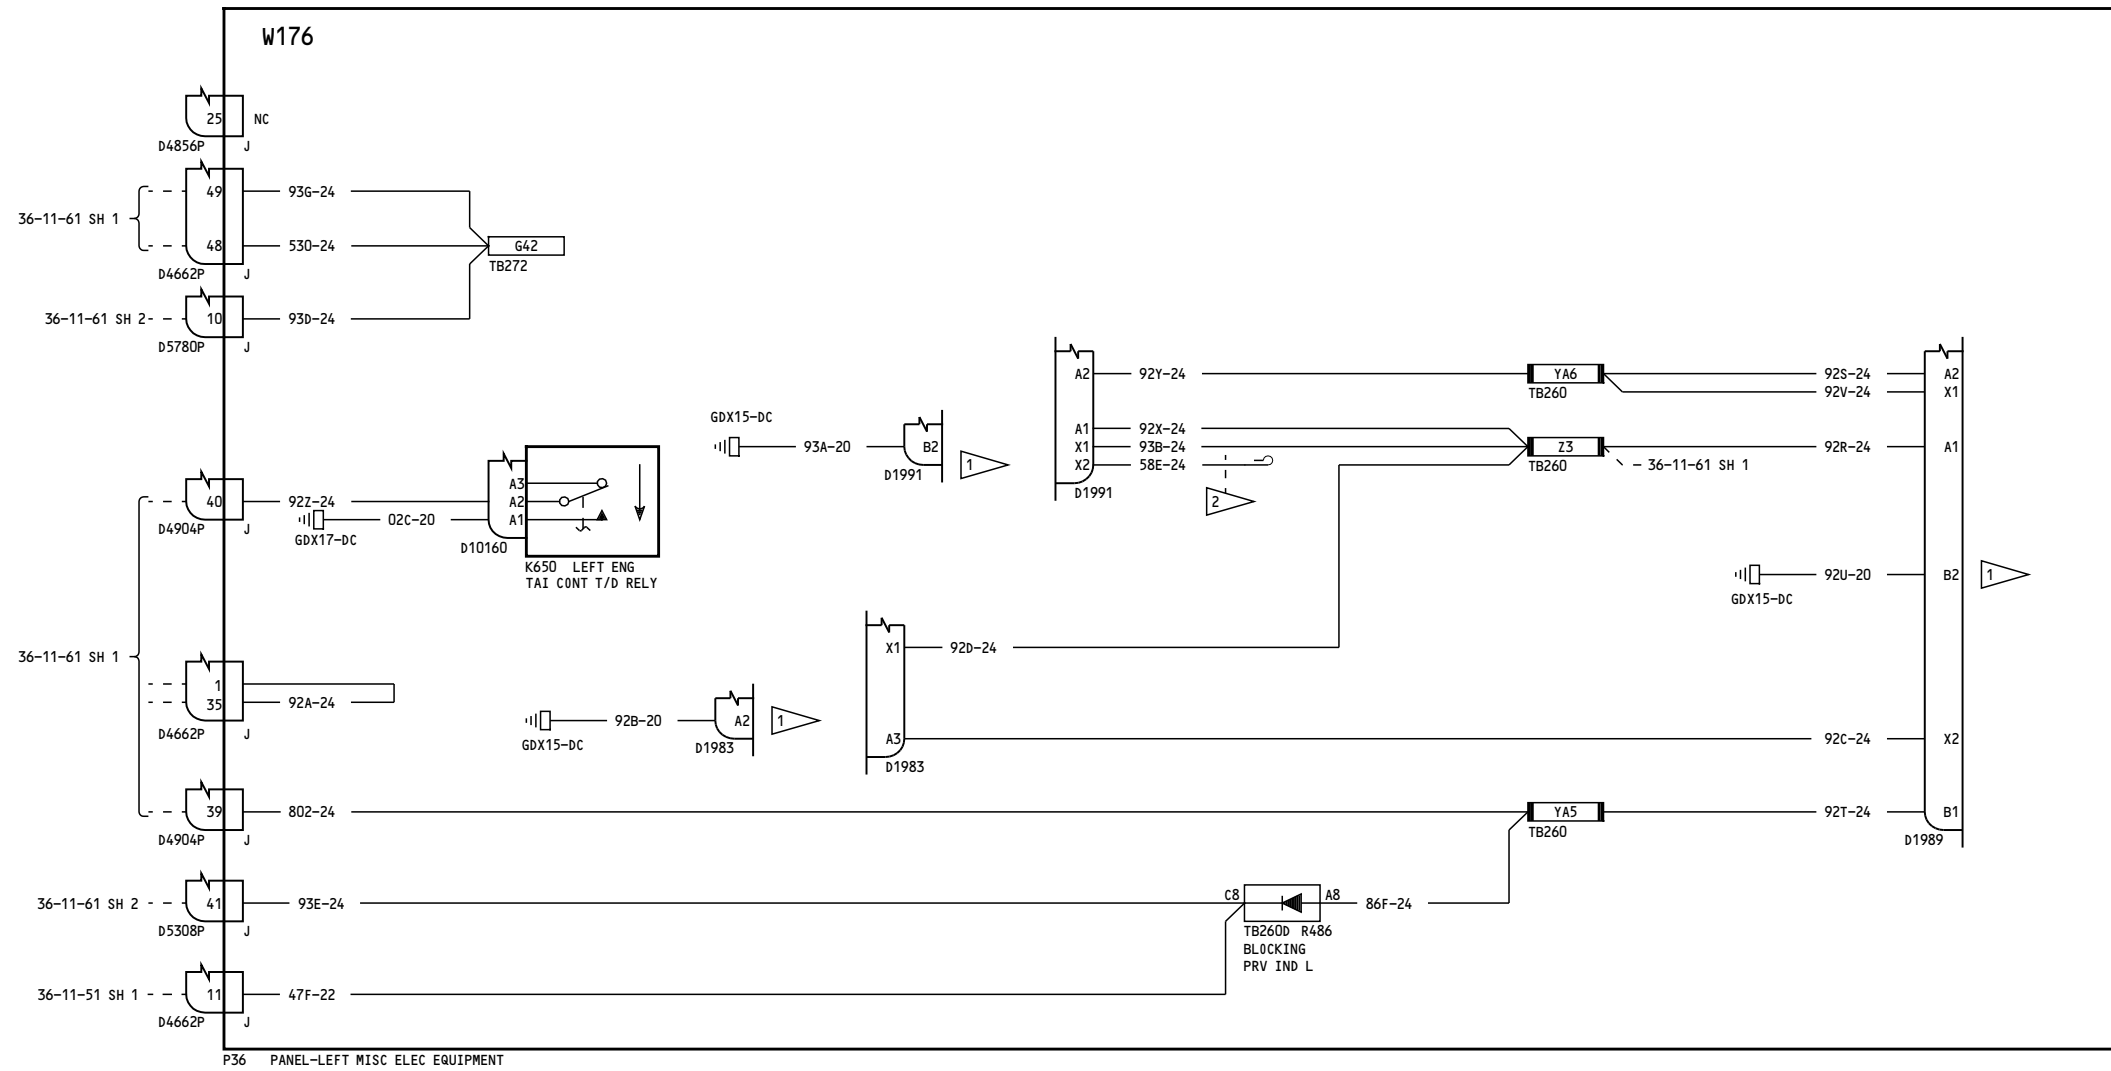

NOTES:  
 1 CAP & STOW CONNECTOR WHEN MATING EQUIPMENT IS NOT INSTALLED  
 2 CAP & STOW NEAR D10160

162

**AIR SUPPLY BLEED AIR-  
 LEFT ENGINE HIGH  
 PRESSURE CONTROL**

D280T132


**36-11-61**

Page 6.2  
 Sheet 3  
 Feb 06/2009

Incorporates  
 36-0026 R02

**36-11-61**

Page 6.2  
 Sheet 3  
 Feb 06/2009

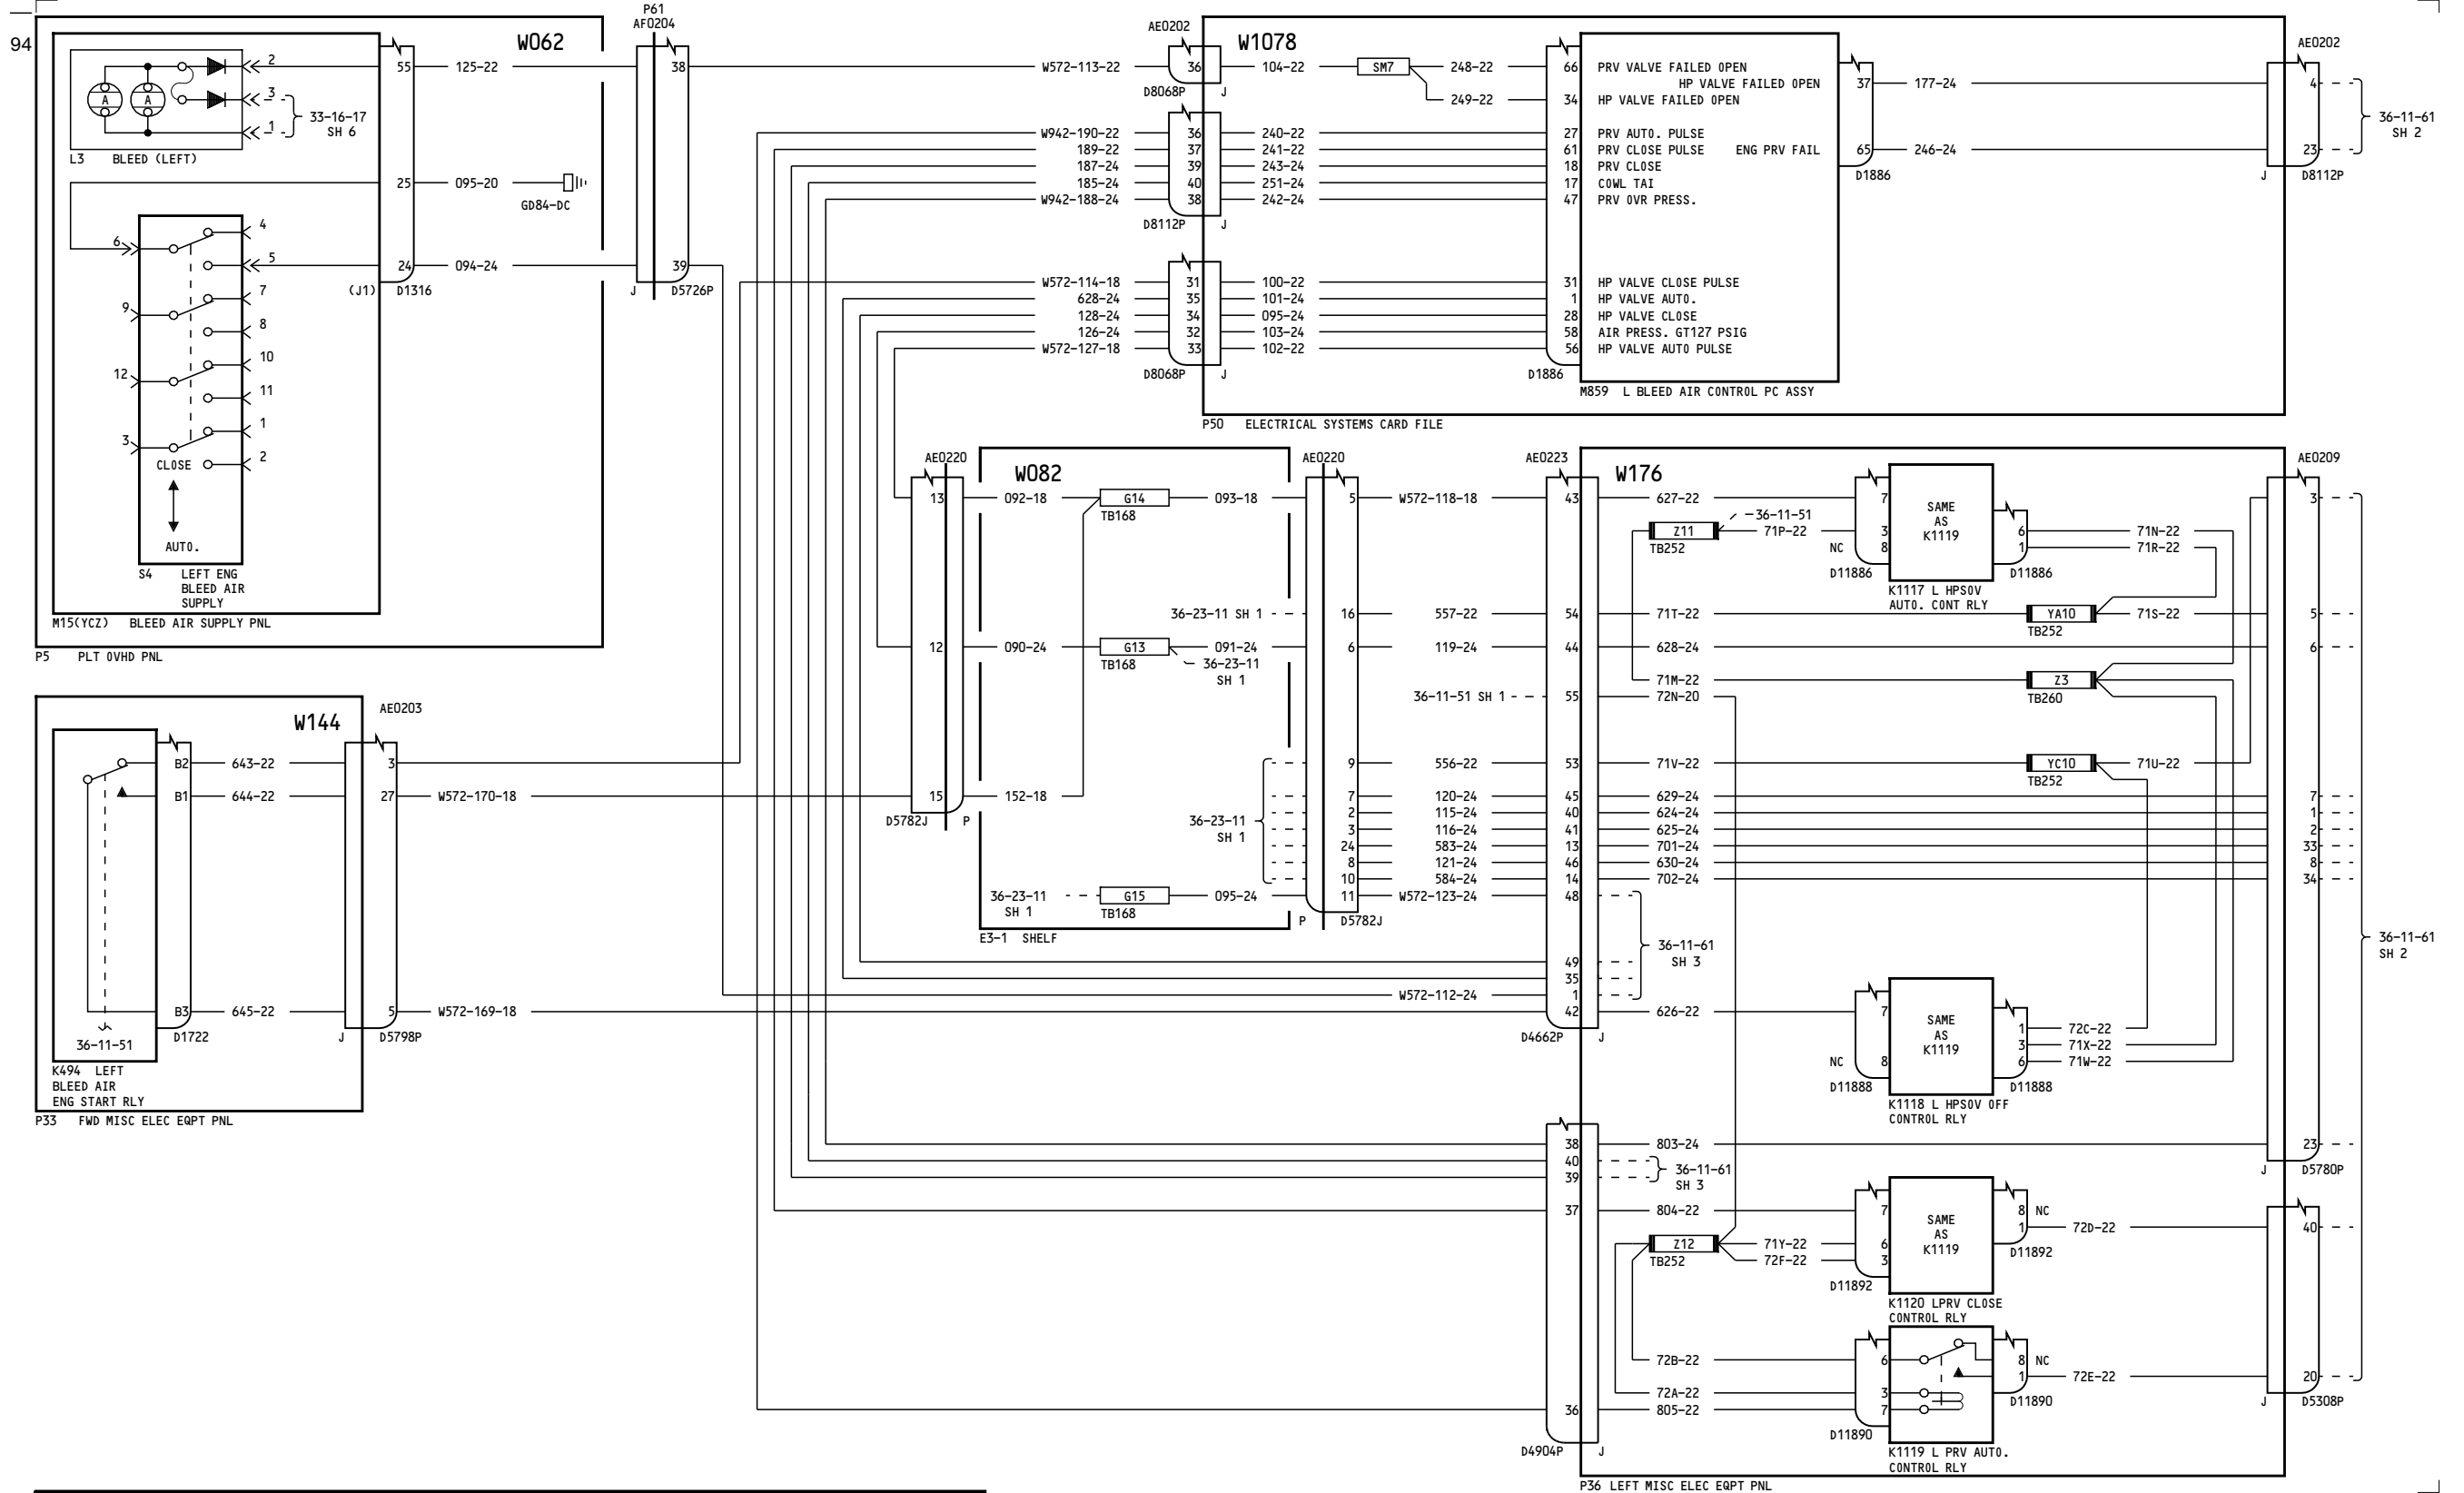

275

## AIR SUPPLY BLEED AIR-LEFT ENGINE HIGH PRESSURE CONTROL

D280T132

### 36-11-61


Page 7.1  
Sheet 1  
Jan 21/2005

Incorporates  
▶ 36-0027

### 36-11-61

Page 7.1  
Sheet 1  
Jan 21/2005

-A  
87

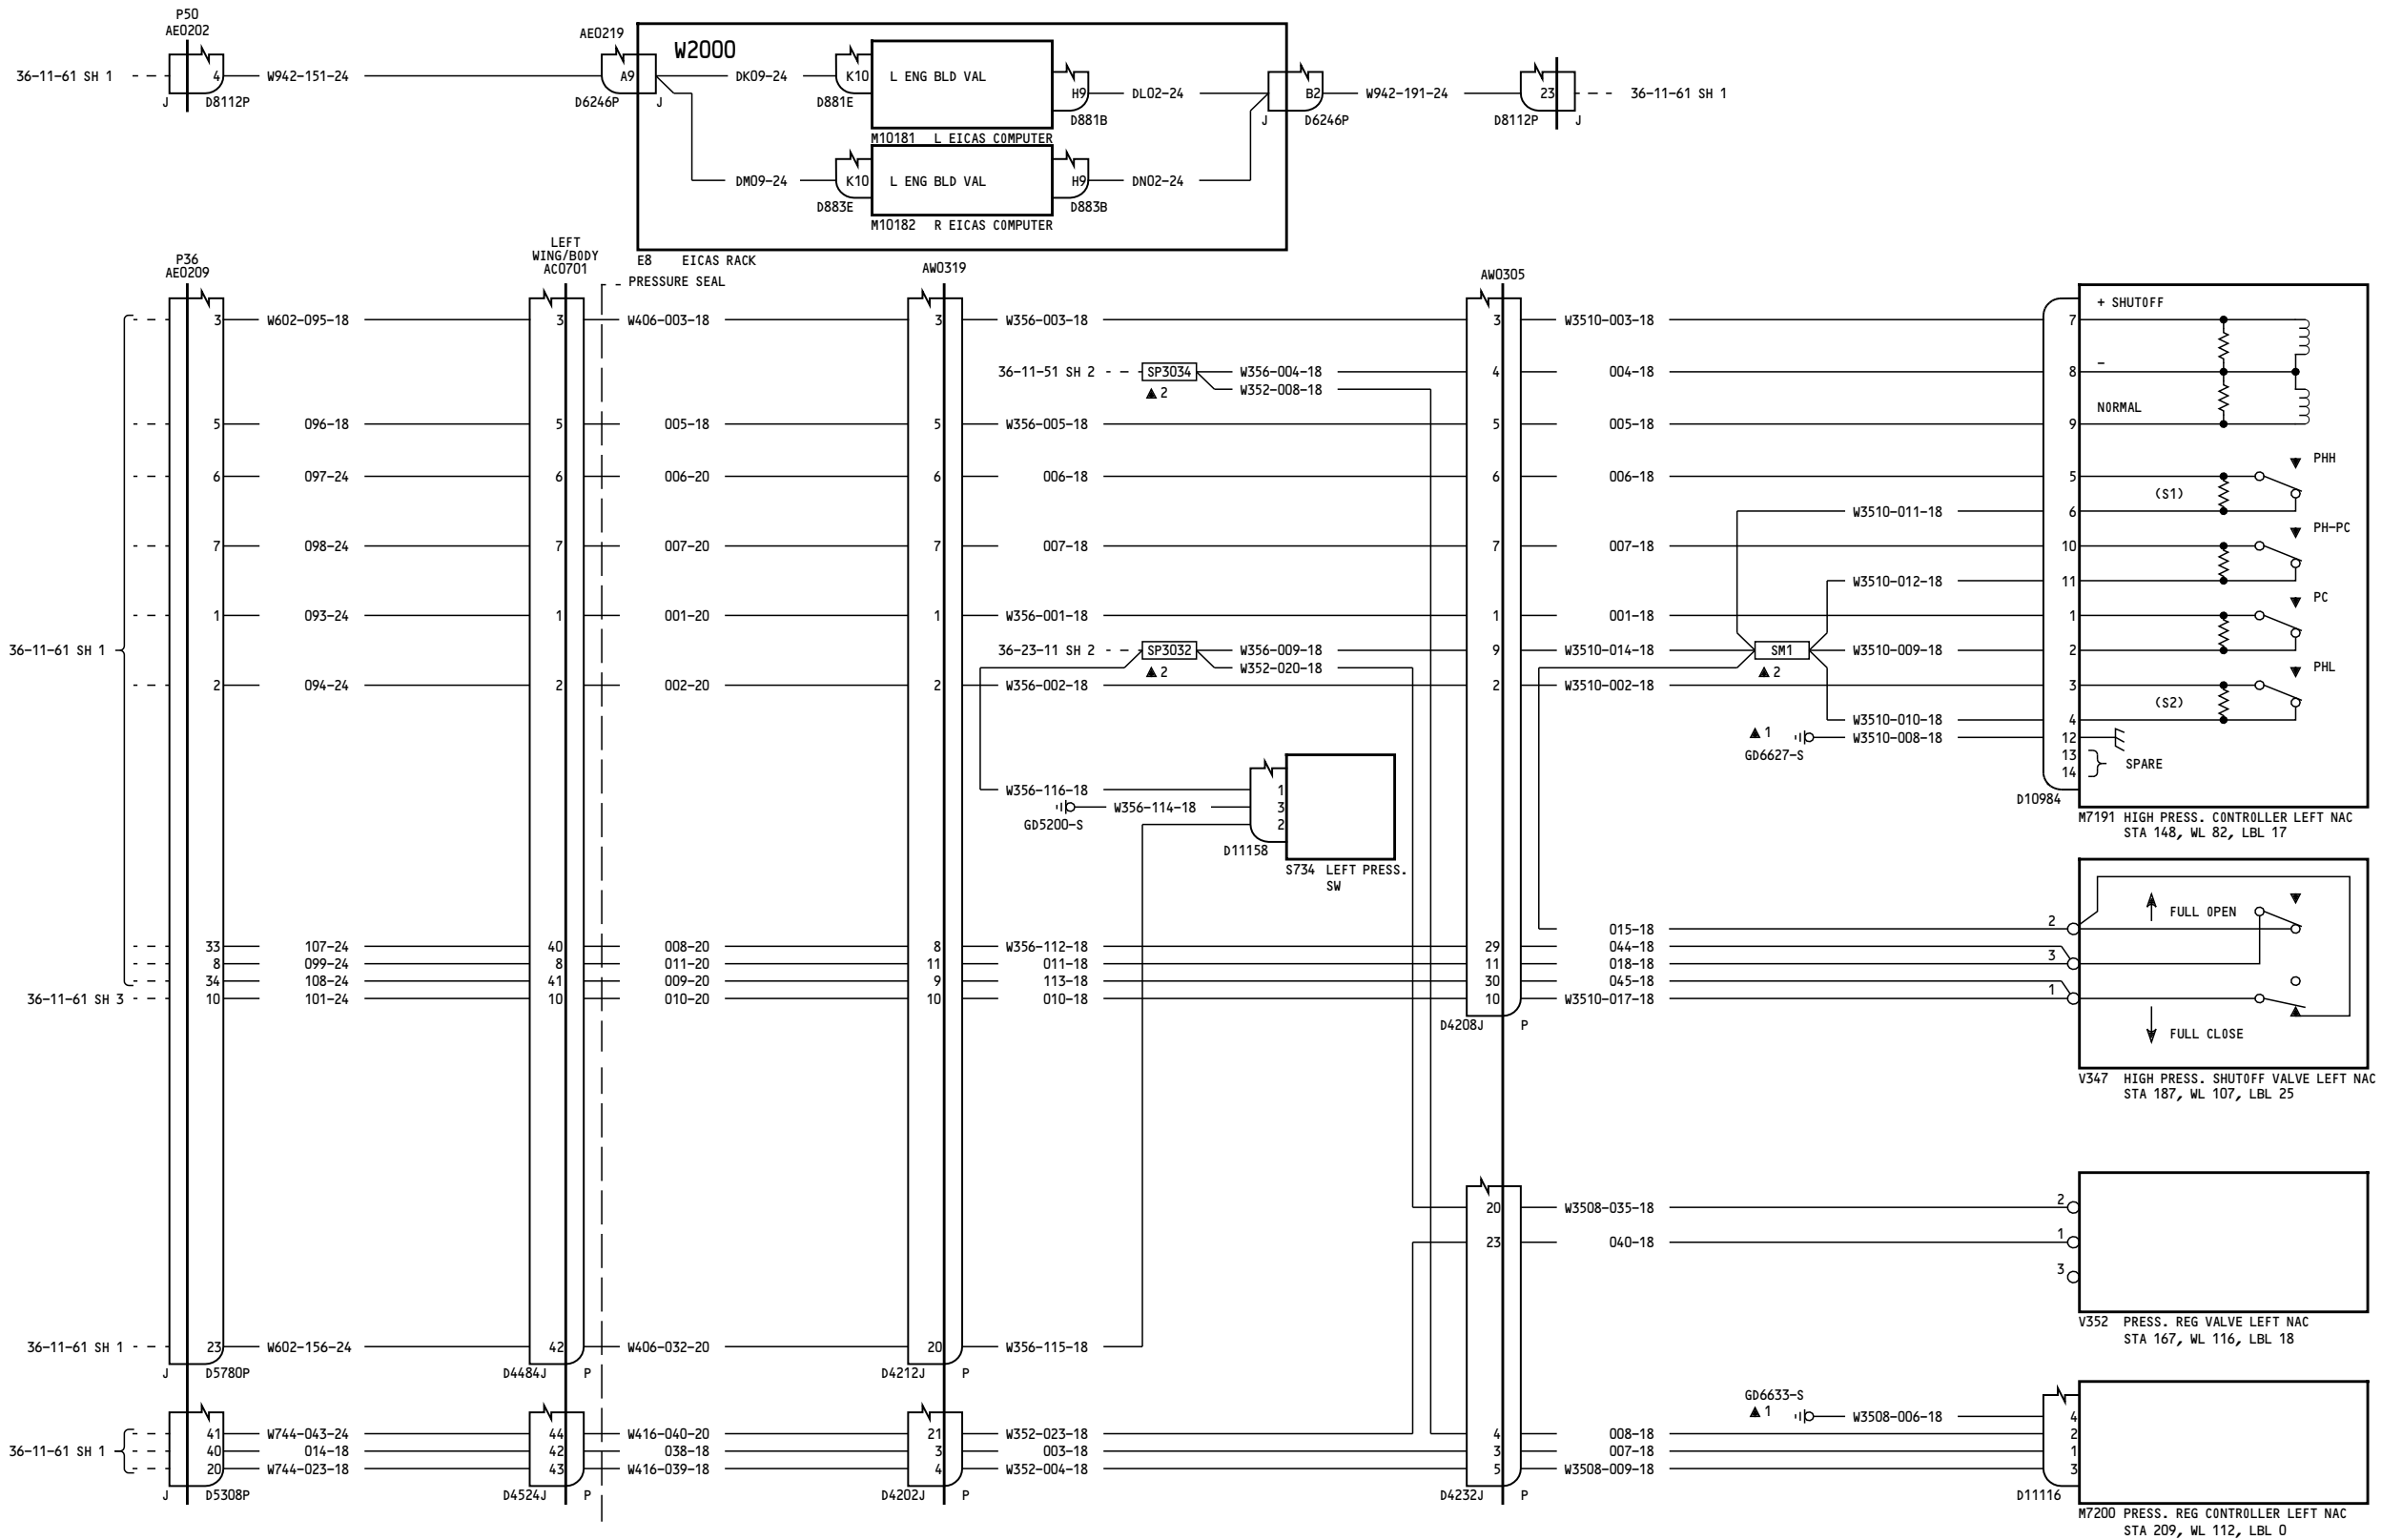

275

**AIR SUPPLY BLEED AIR-  
LEFT ENGINE HIGH  
PRESSURE CONTROL**


D280T132


**36-11-61**

Page 7.1  
Sheet 2  
Jan 21/2005

**36-11-61**

Page 7.1  
Sheet 2  
Jan 21/2005

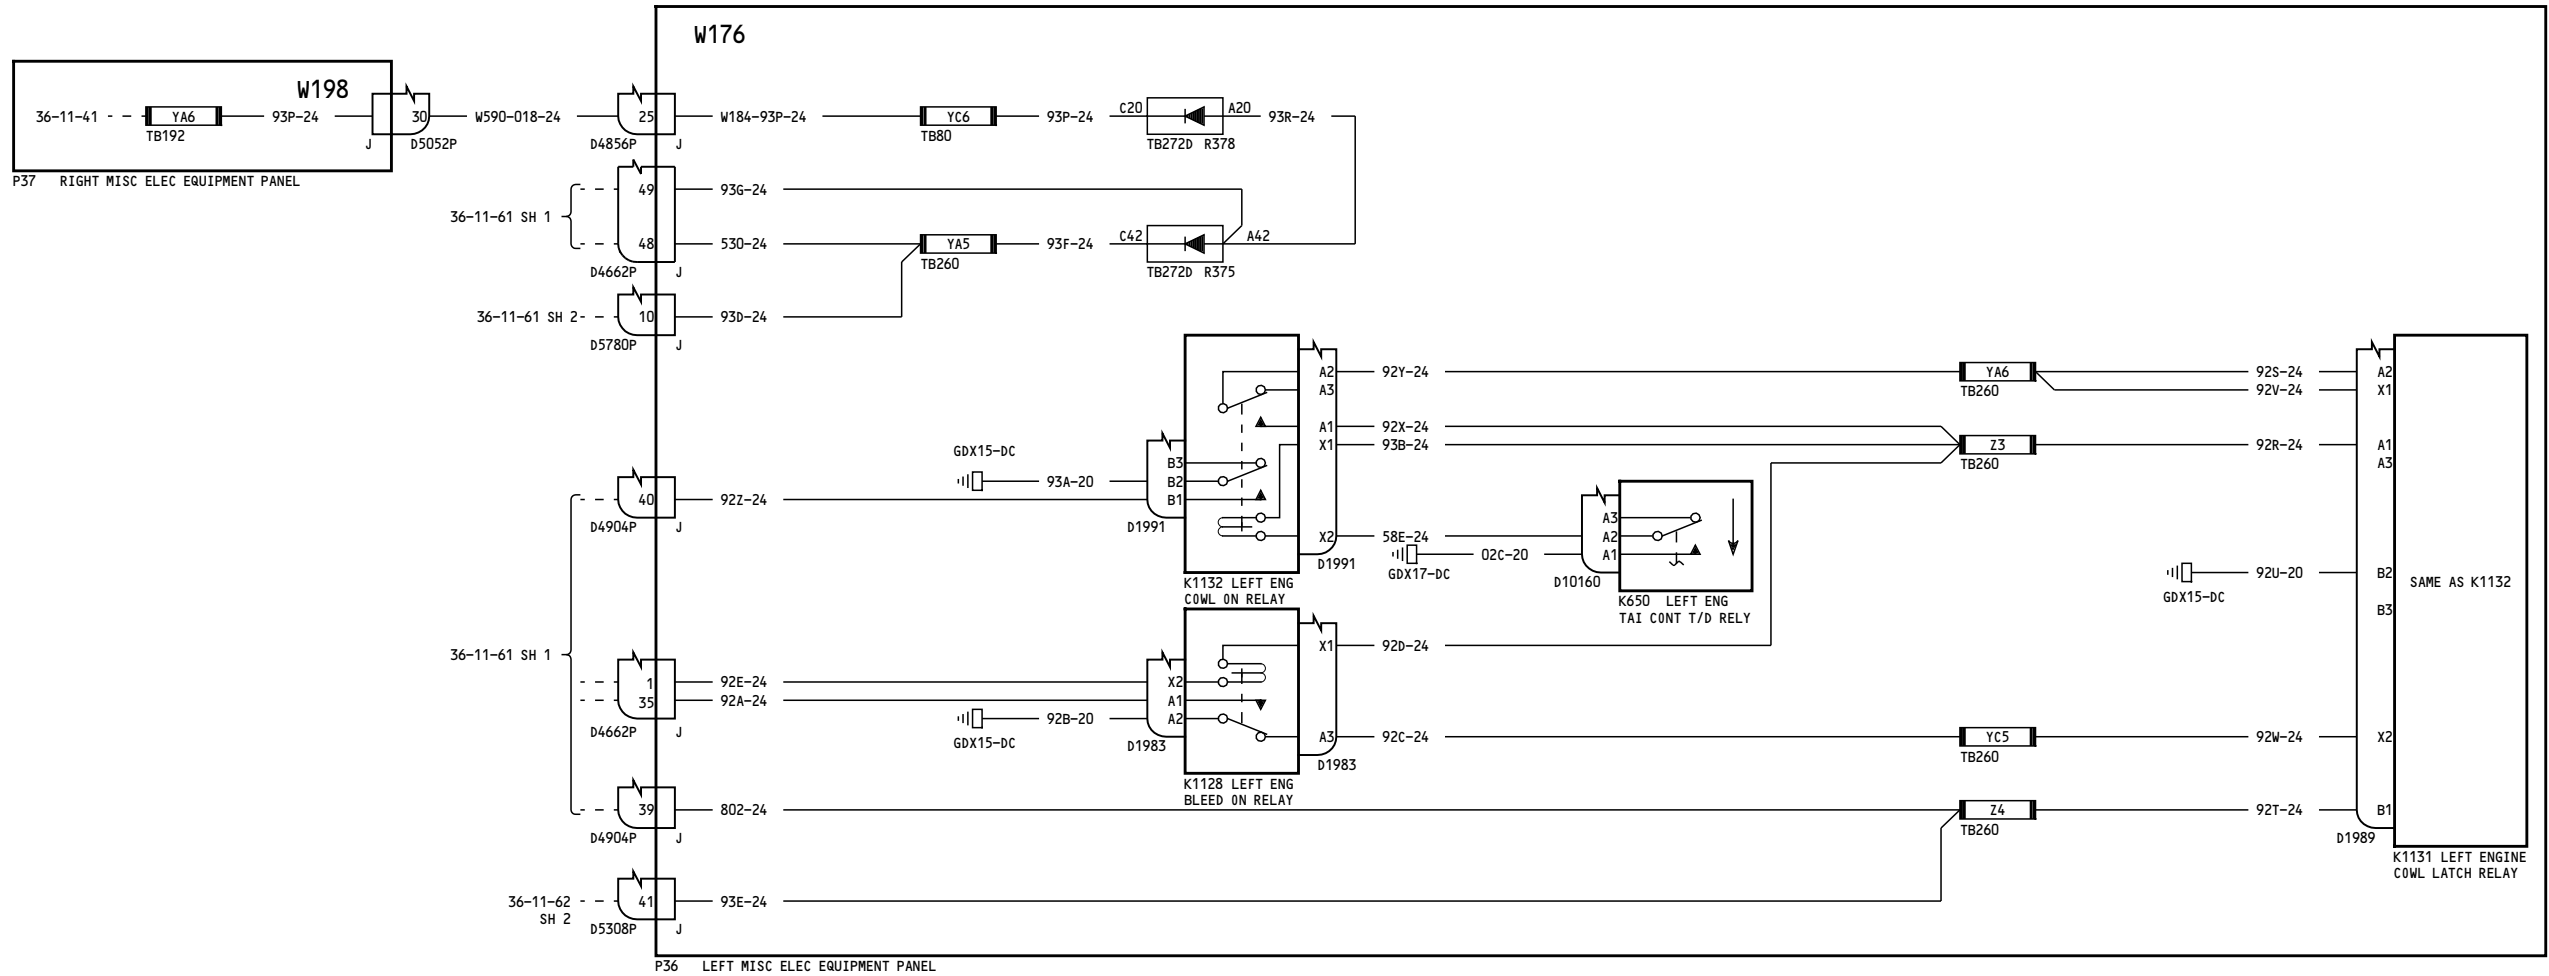

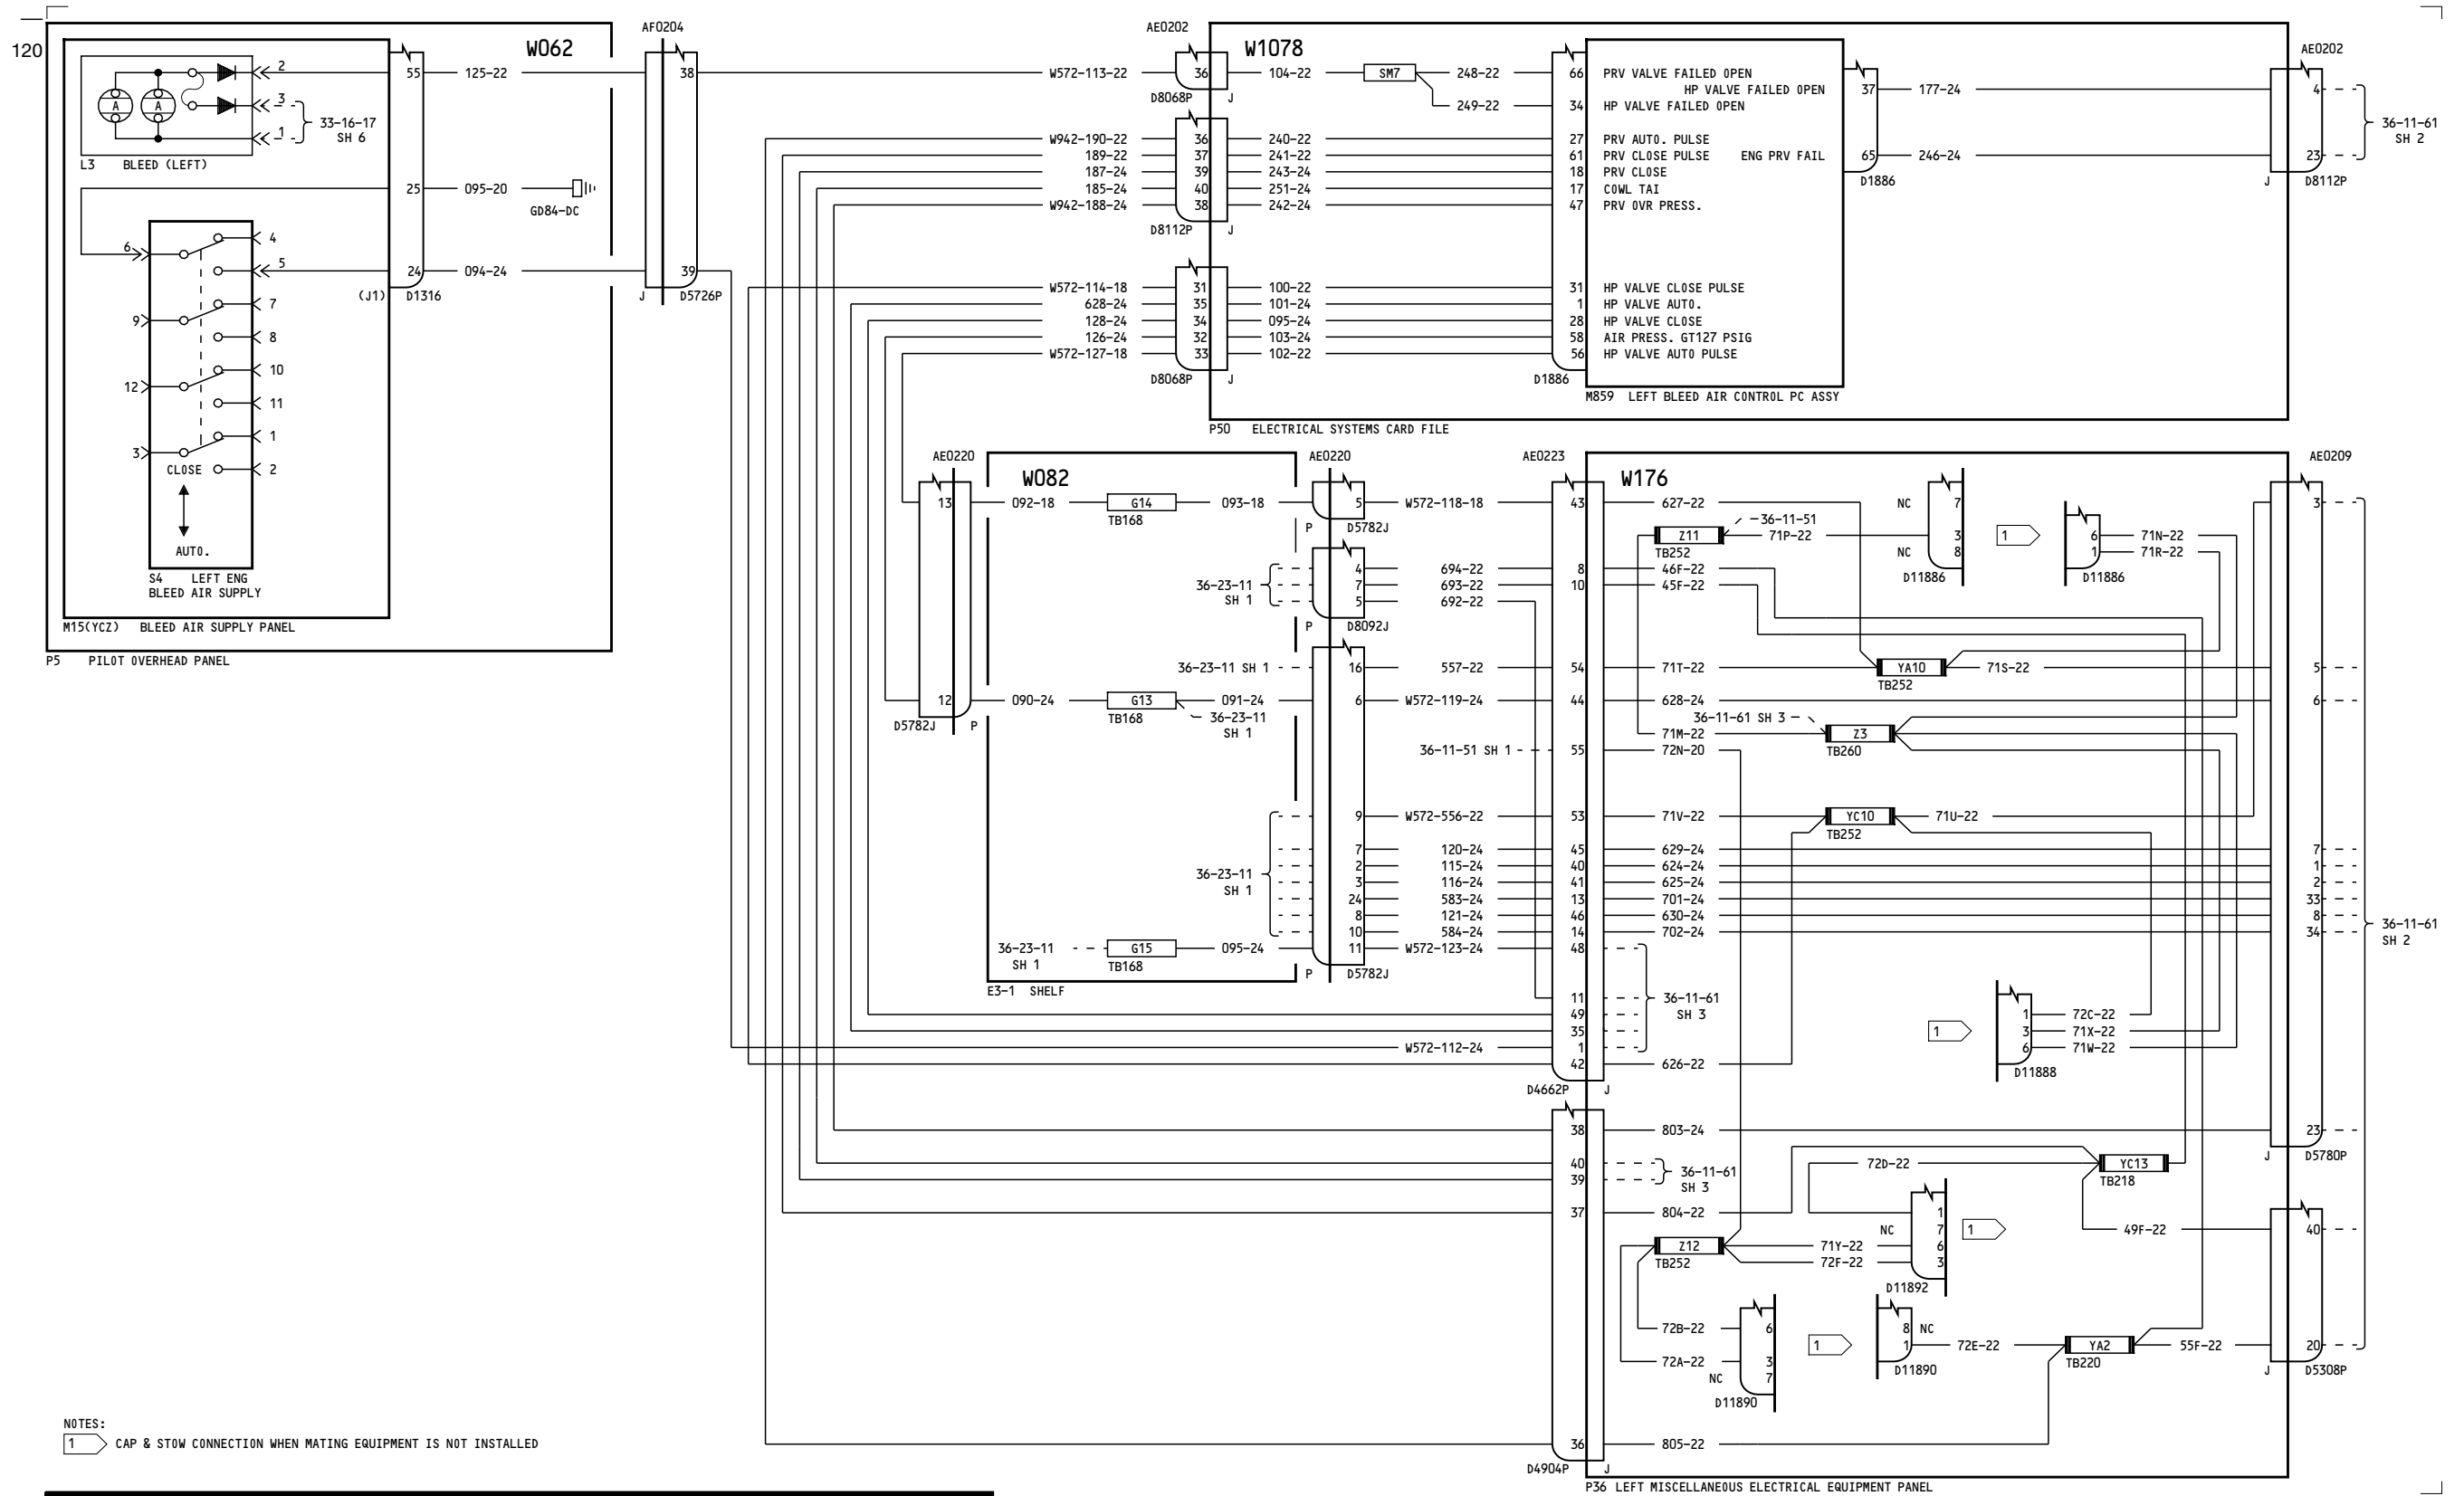

275

**AIR SUPPLY BLEED AIR-  
 LEFT ENGINE HIGH  
 PRESSURE CONTROL**

D280T132

**36-11-61**


Page 7.2  
 Sheet 1  
 Jan 21/2005

**Incorporates**

- ▶ 36-0026
- ▶ 36-0026 IN06
- ▶ 36-0027
- ▶ 36-0029 R05

**36-11-61**

Page 7.2  
 Sheet 1  
 Jan 21/2005

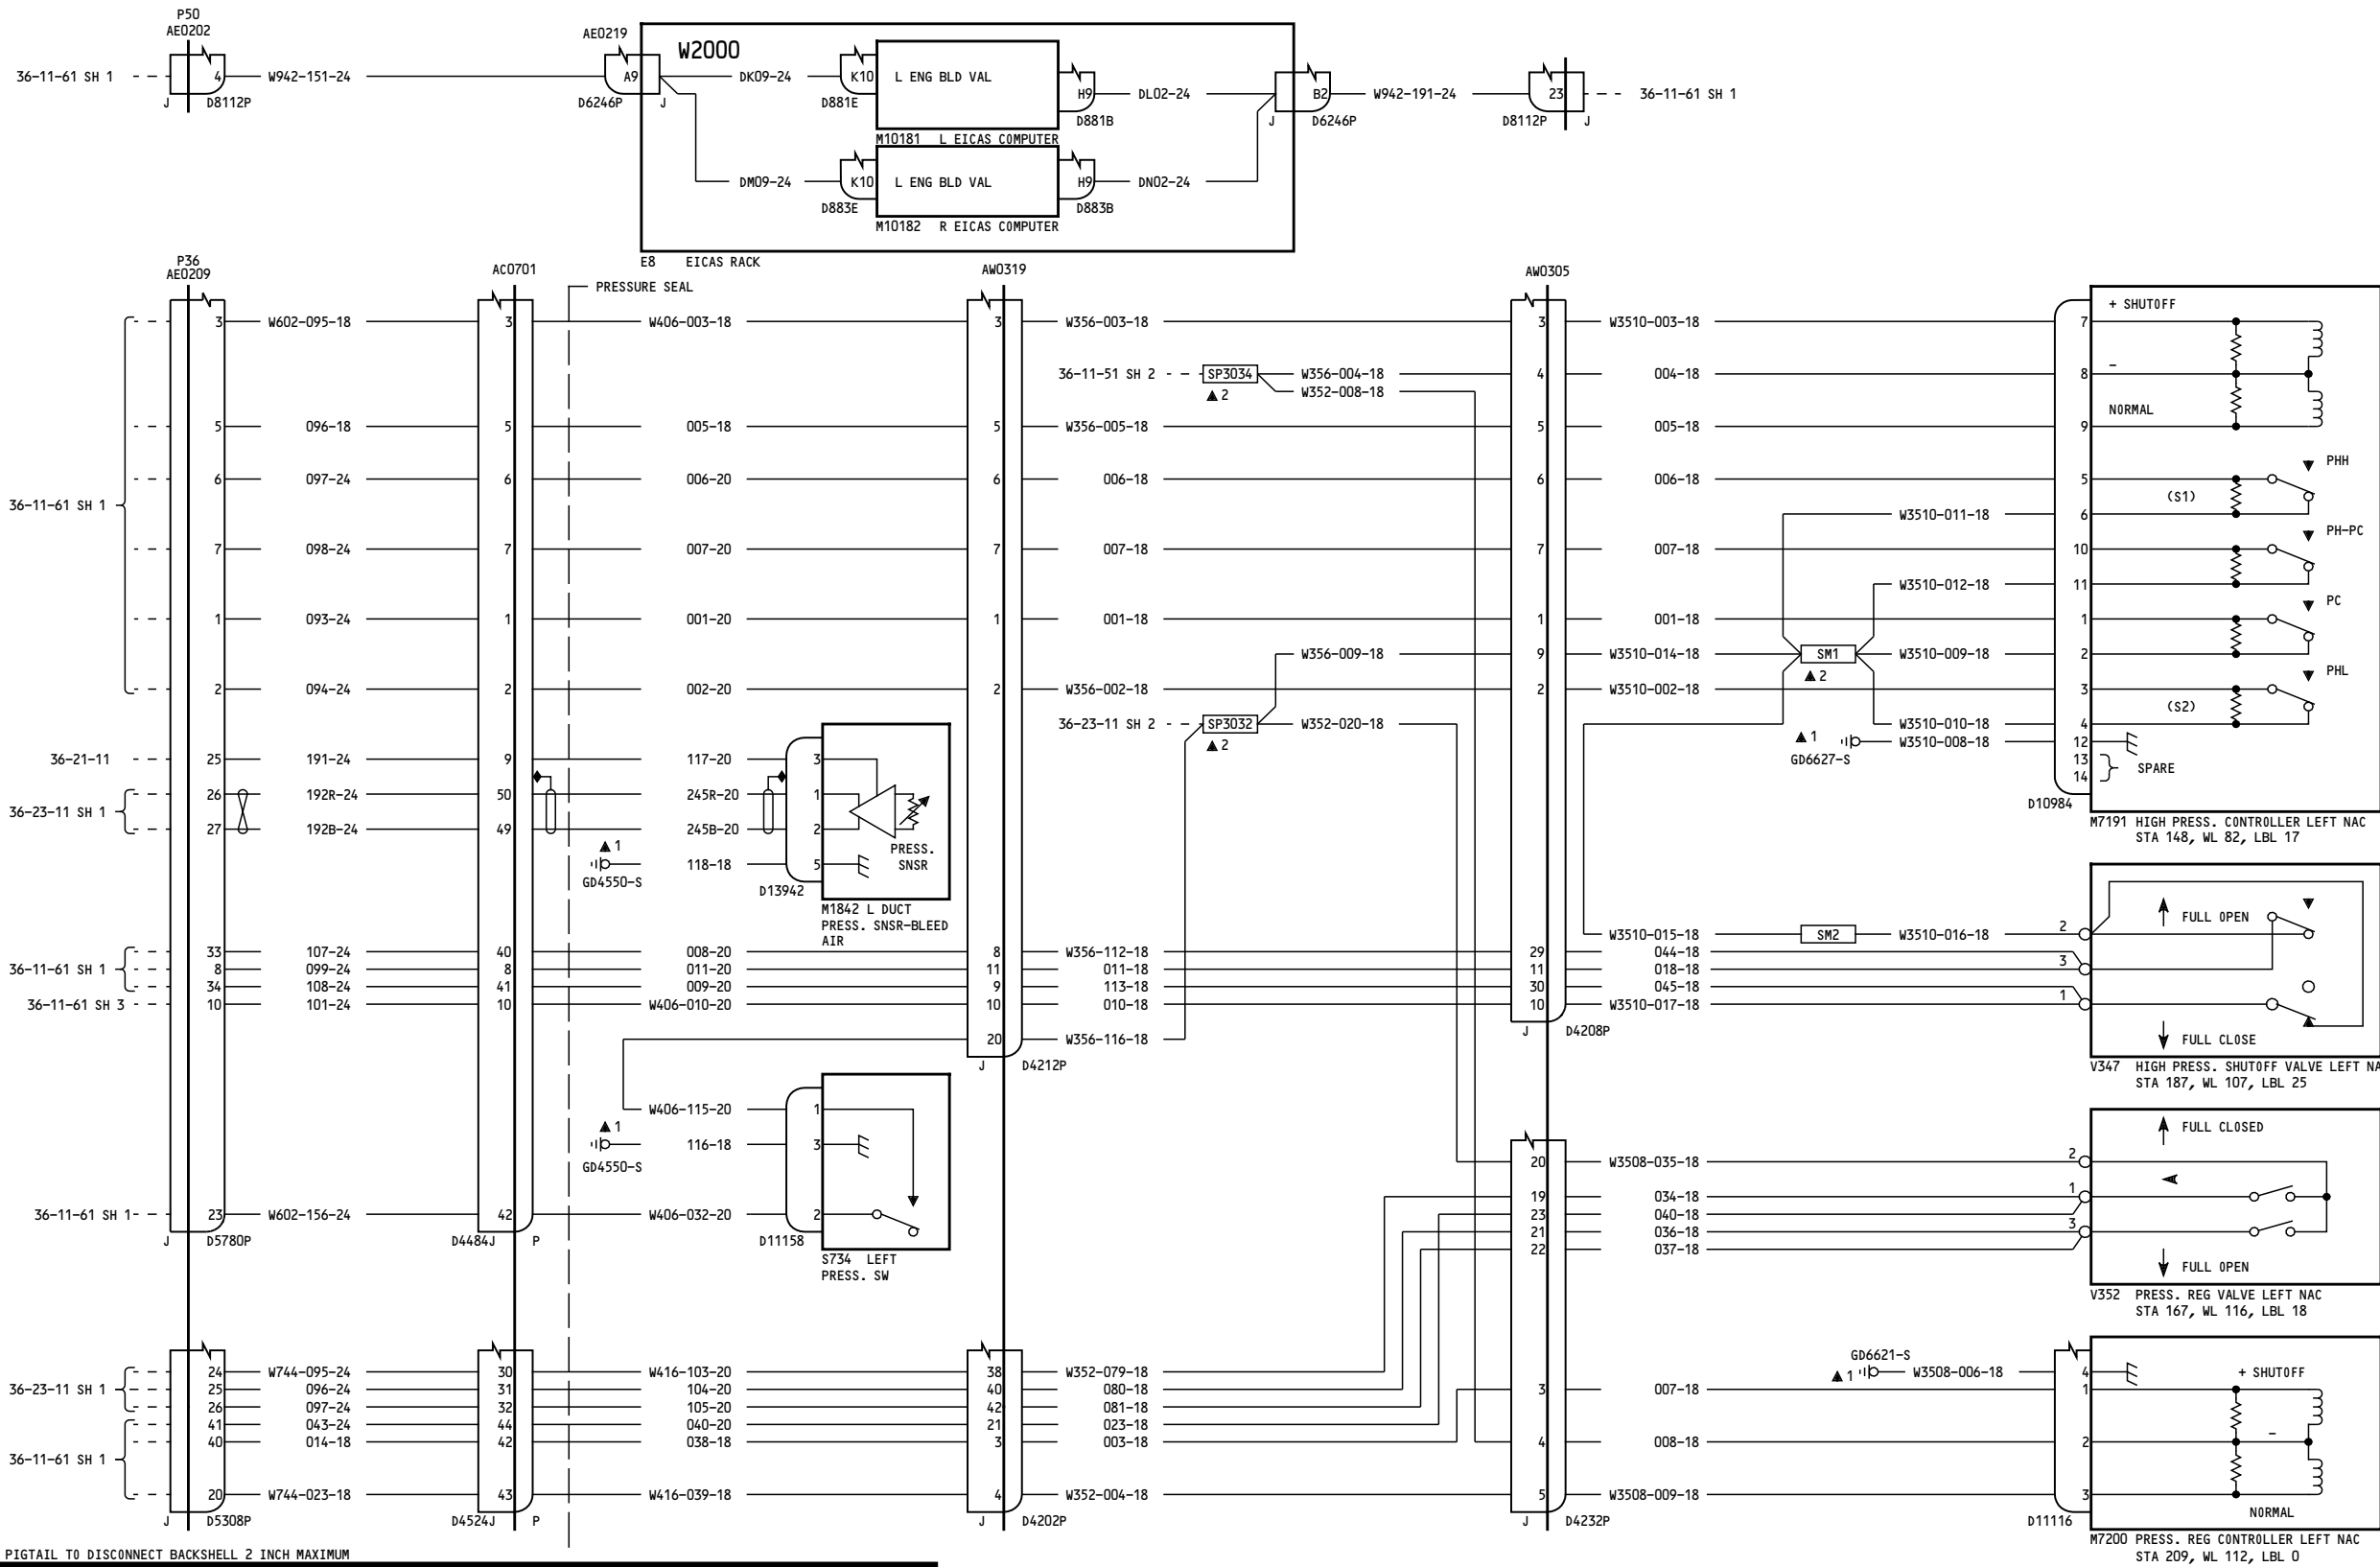

NOTES:  
SHIELD PIGTAIL TO DISCONNECT BACKSHELL 2 INCH MAXIMUM

275

**AIR SUPPLY BLEED AIR-LEFT ENGINE HIGH PRESSURE CONTROL**

D280T132


36-11-61

Page 7.2  
Sheet 2  
Feb 06/2009

Incorporates  
36-0029 R05  
36-0053

36-11-61

Page 7.2  
Sheet 2  
Feb 06/2009

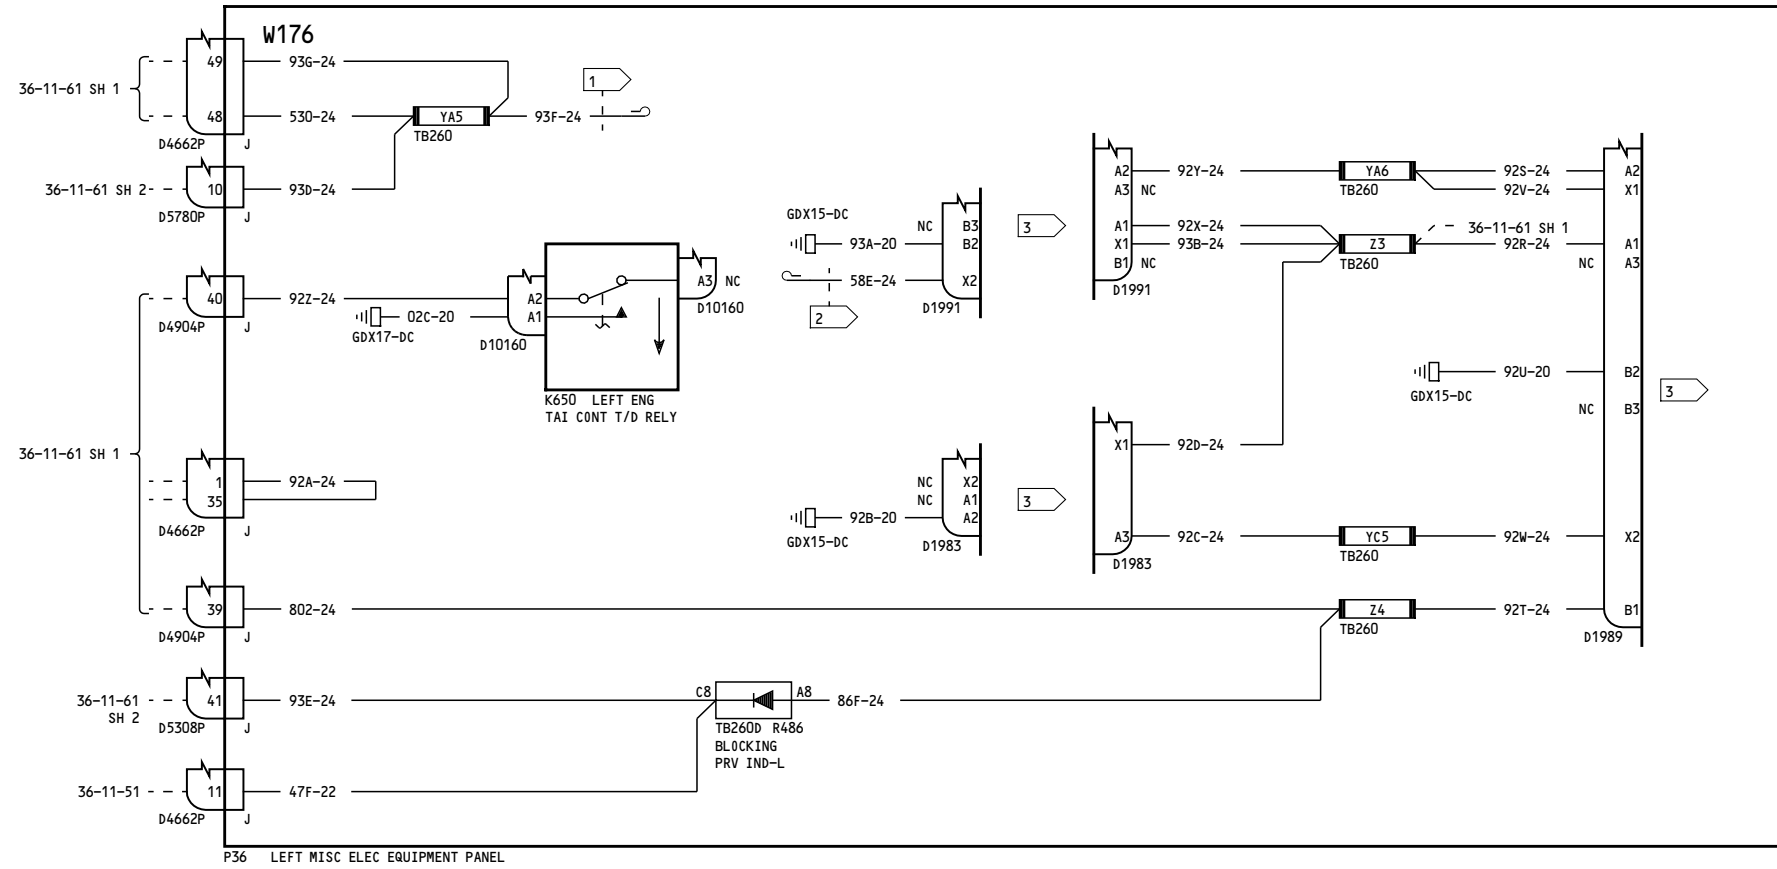

**NOTES:**

- 1 CAP & STOW NEAR TB272D
- 2 CAP & STOW NEAR D10160
- 3 CAP & STOW WHEN MATING EQUIPMENT IS NOT INSTALLED.

275

**AIR SUPPLY BLEED AIR-  
LEFT ENGINE HIGH  
PRESSURE CONTROL**

D280T132









**36-11-61**

Page 7.2  
Sheet 3  
Jan 21/2005

- Incorporates
- 36-0026 IN06
- 36-0029 R05

**36-11-61**

 Page 7.2  
Sheet 3  
Jan 21/2005

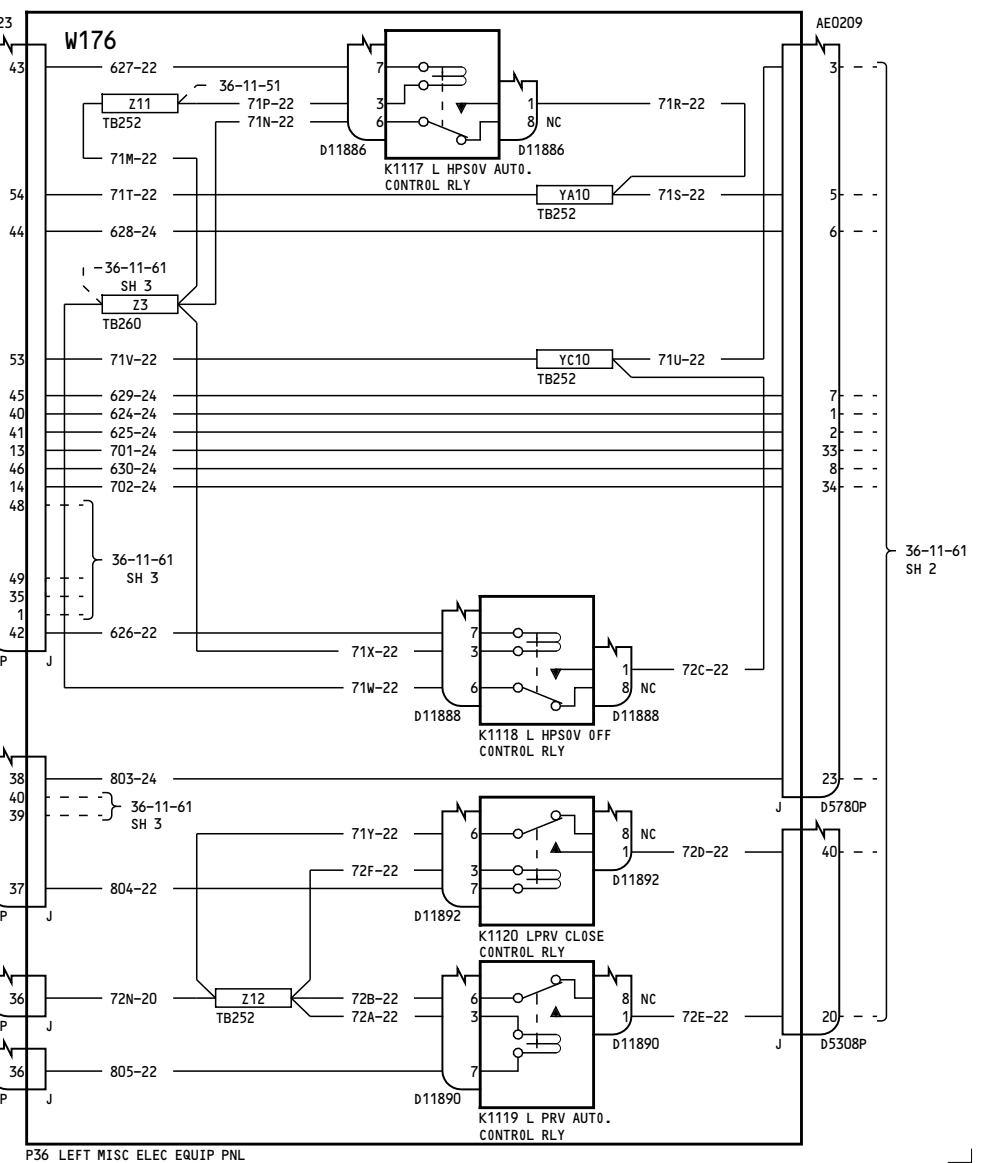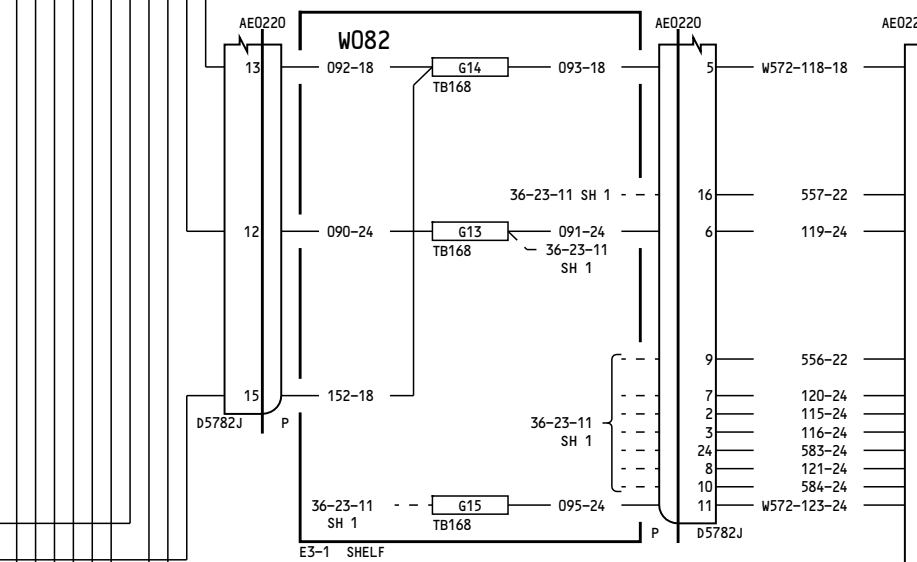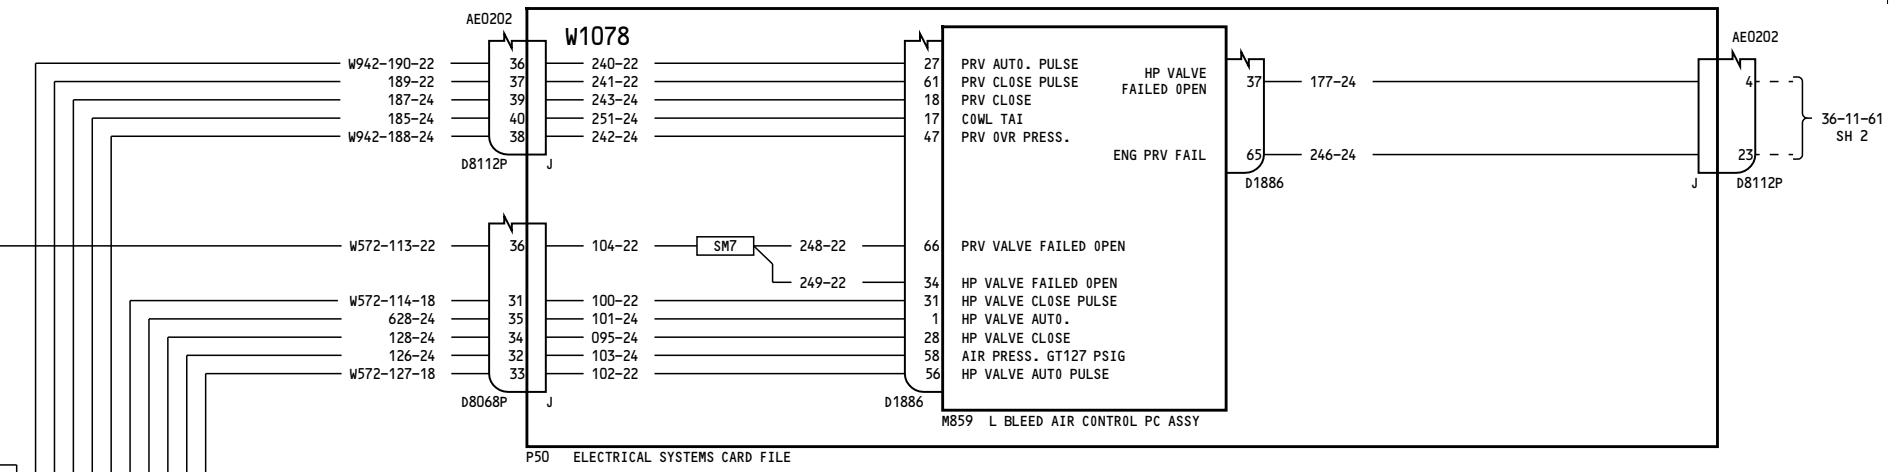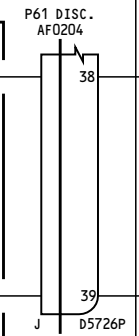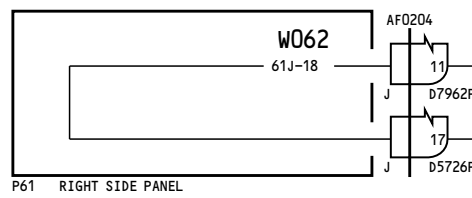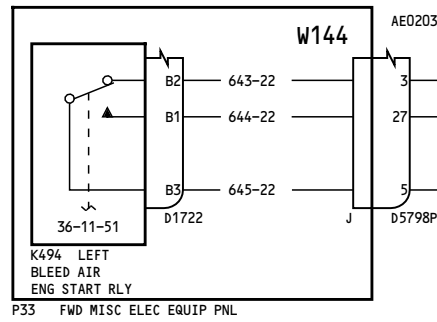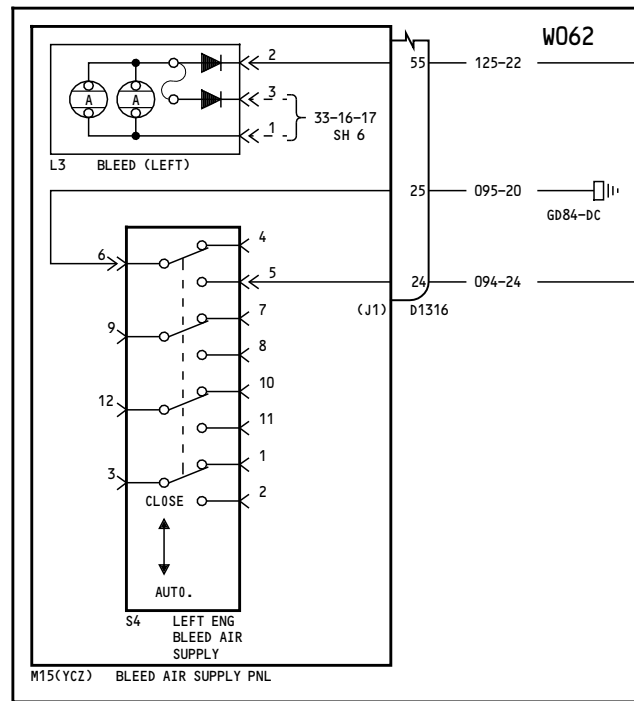

276

**AIR SUPPLY BLEED AIR-  
LEFT ENGINE HIGH  
PRESSURE CONTROL**

D280T132

**36-11-61**

Page 8  
Sheet 1  
Jan 21/2005


BOEING PROPRIETARY - Copyright © - Unpublished Work - See title page for details.

**36-11-61**

Page 8  
Sheet 1  
Jan 21/2005



-B  
25

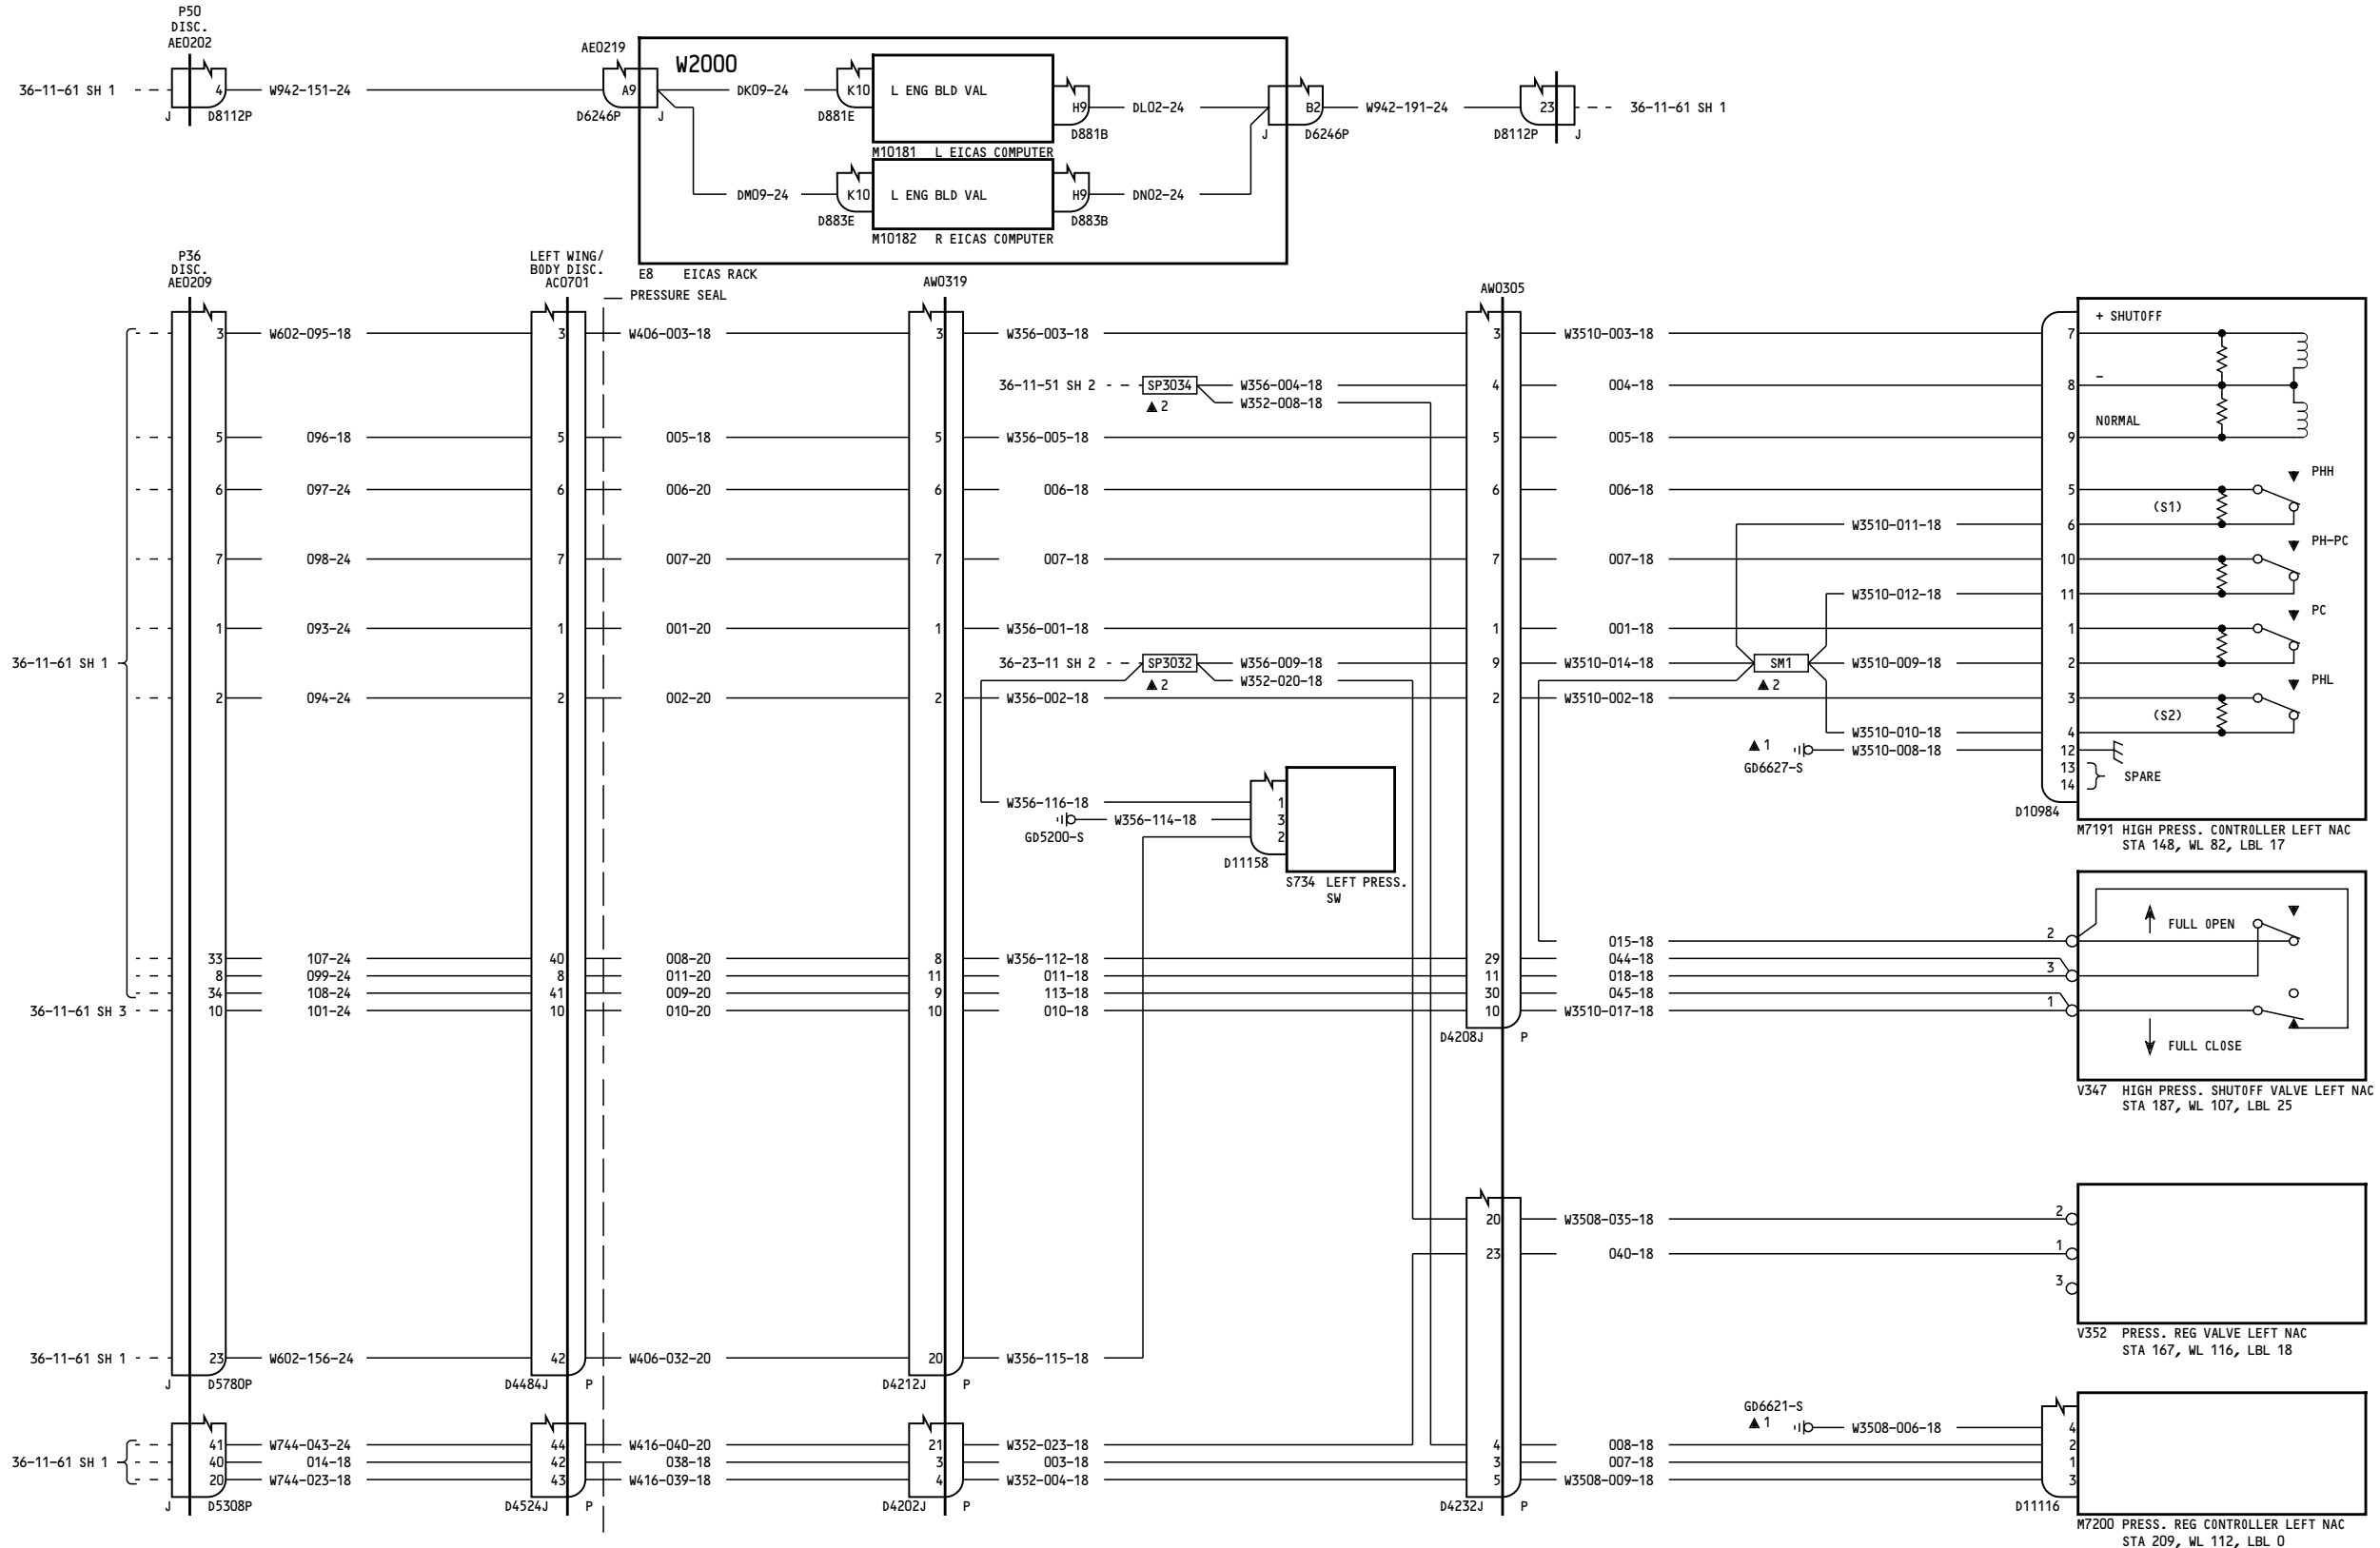

276

**AIR SUPPLY BLEED AIR-  
LEFT ENGINE HIGH  
PRESSURE CONTROL**


D280T132


**36-11-61**

Page 8  
Sheet 2  
Jan 21/2005

**36-11-61**

Page 8  
Sheet 2  
Jan 21/2005

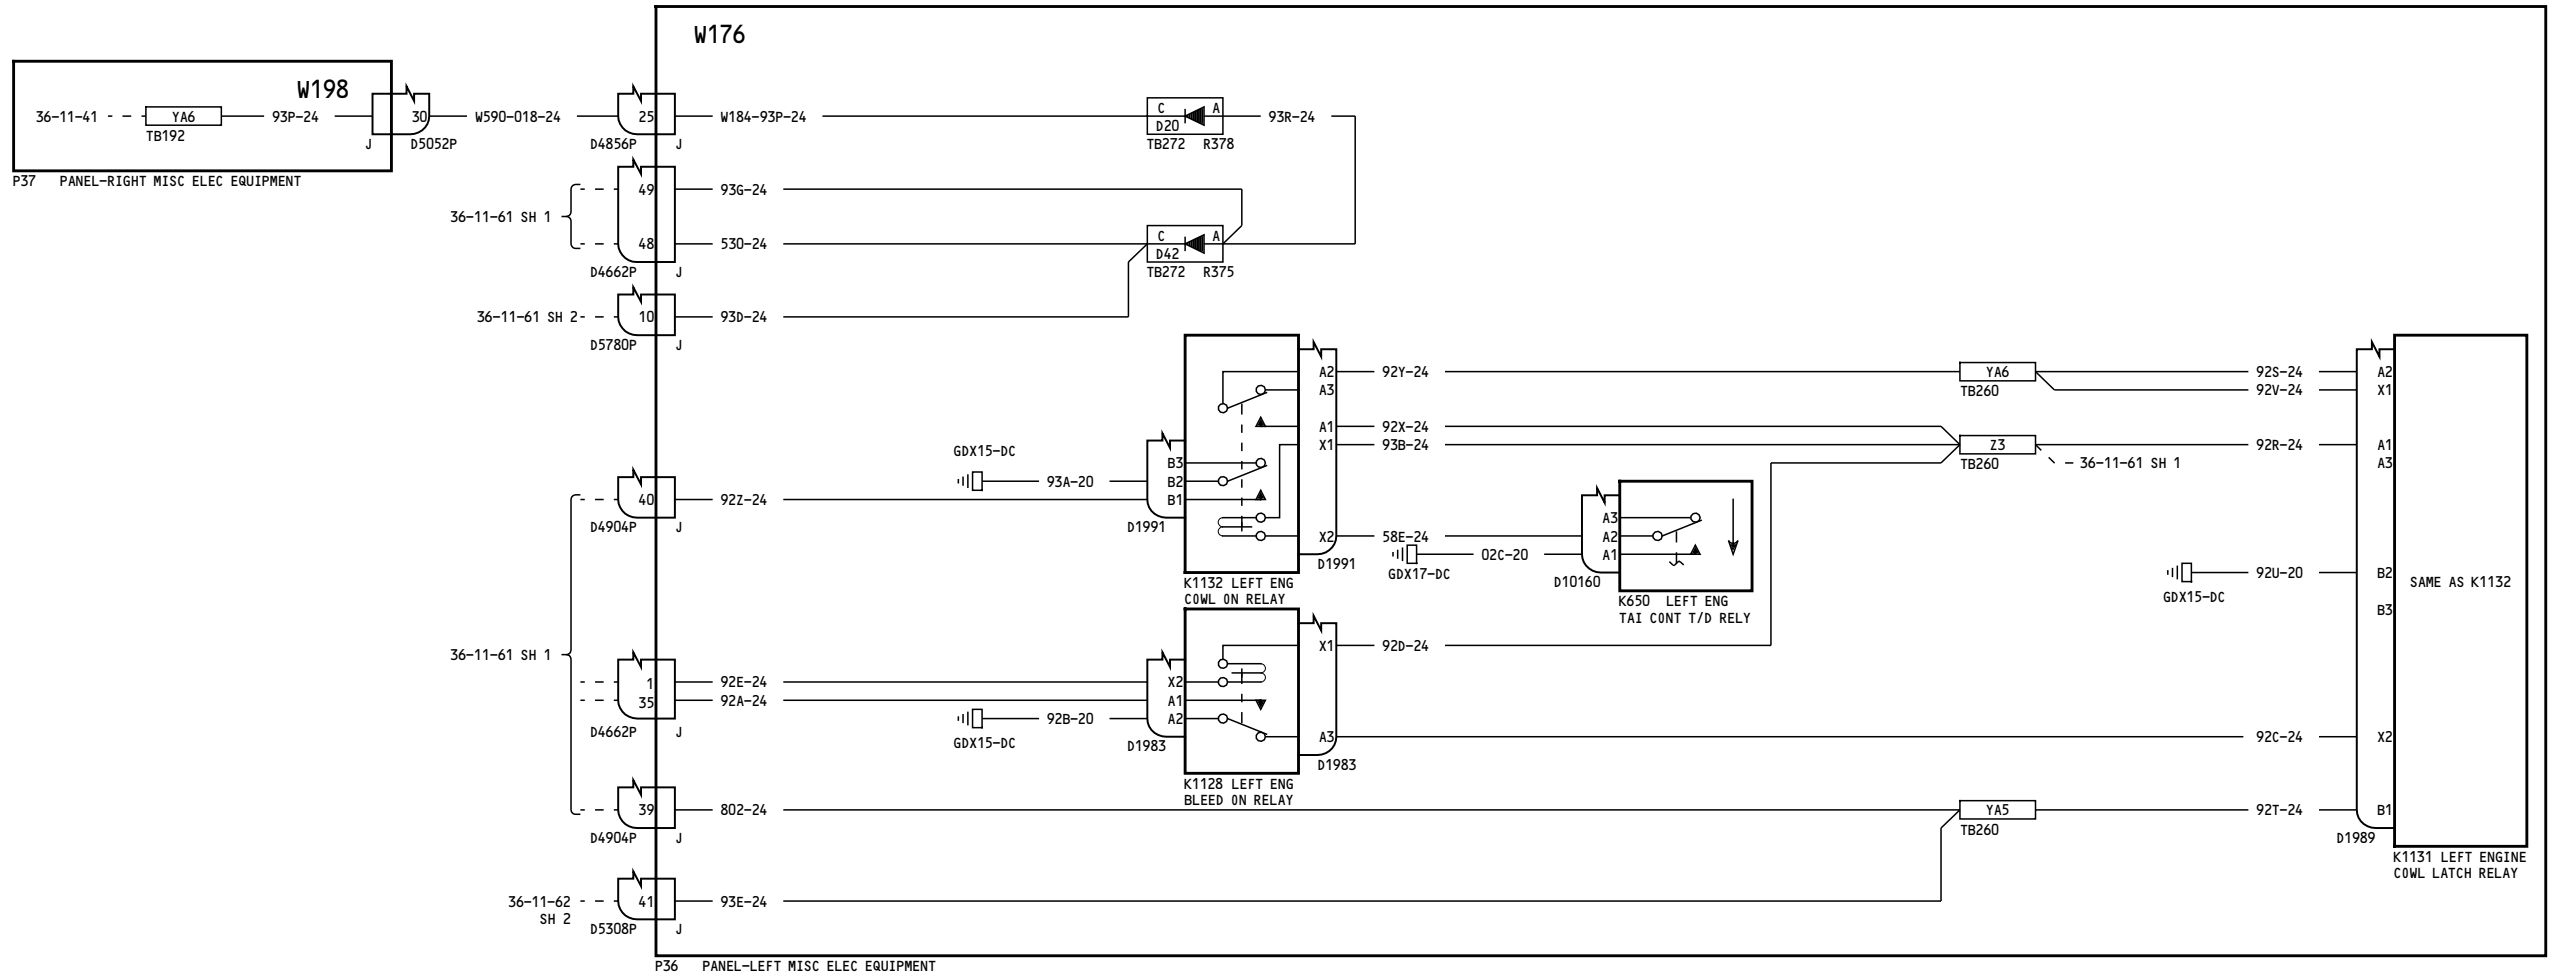

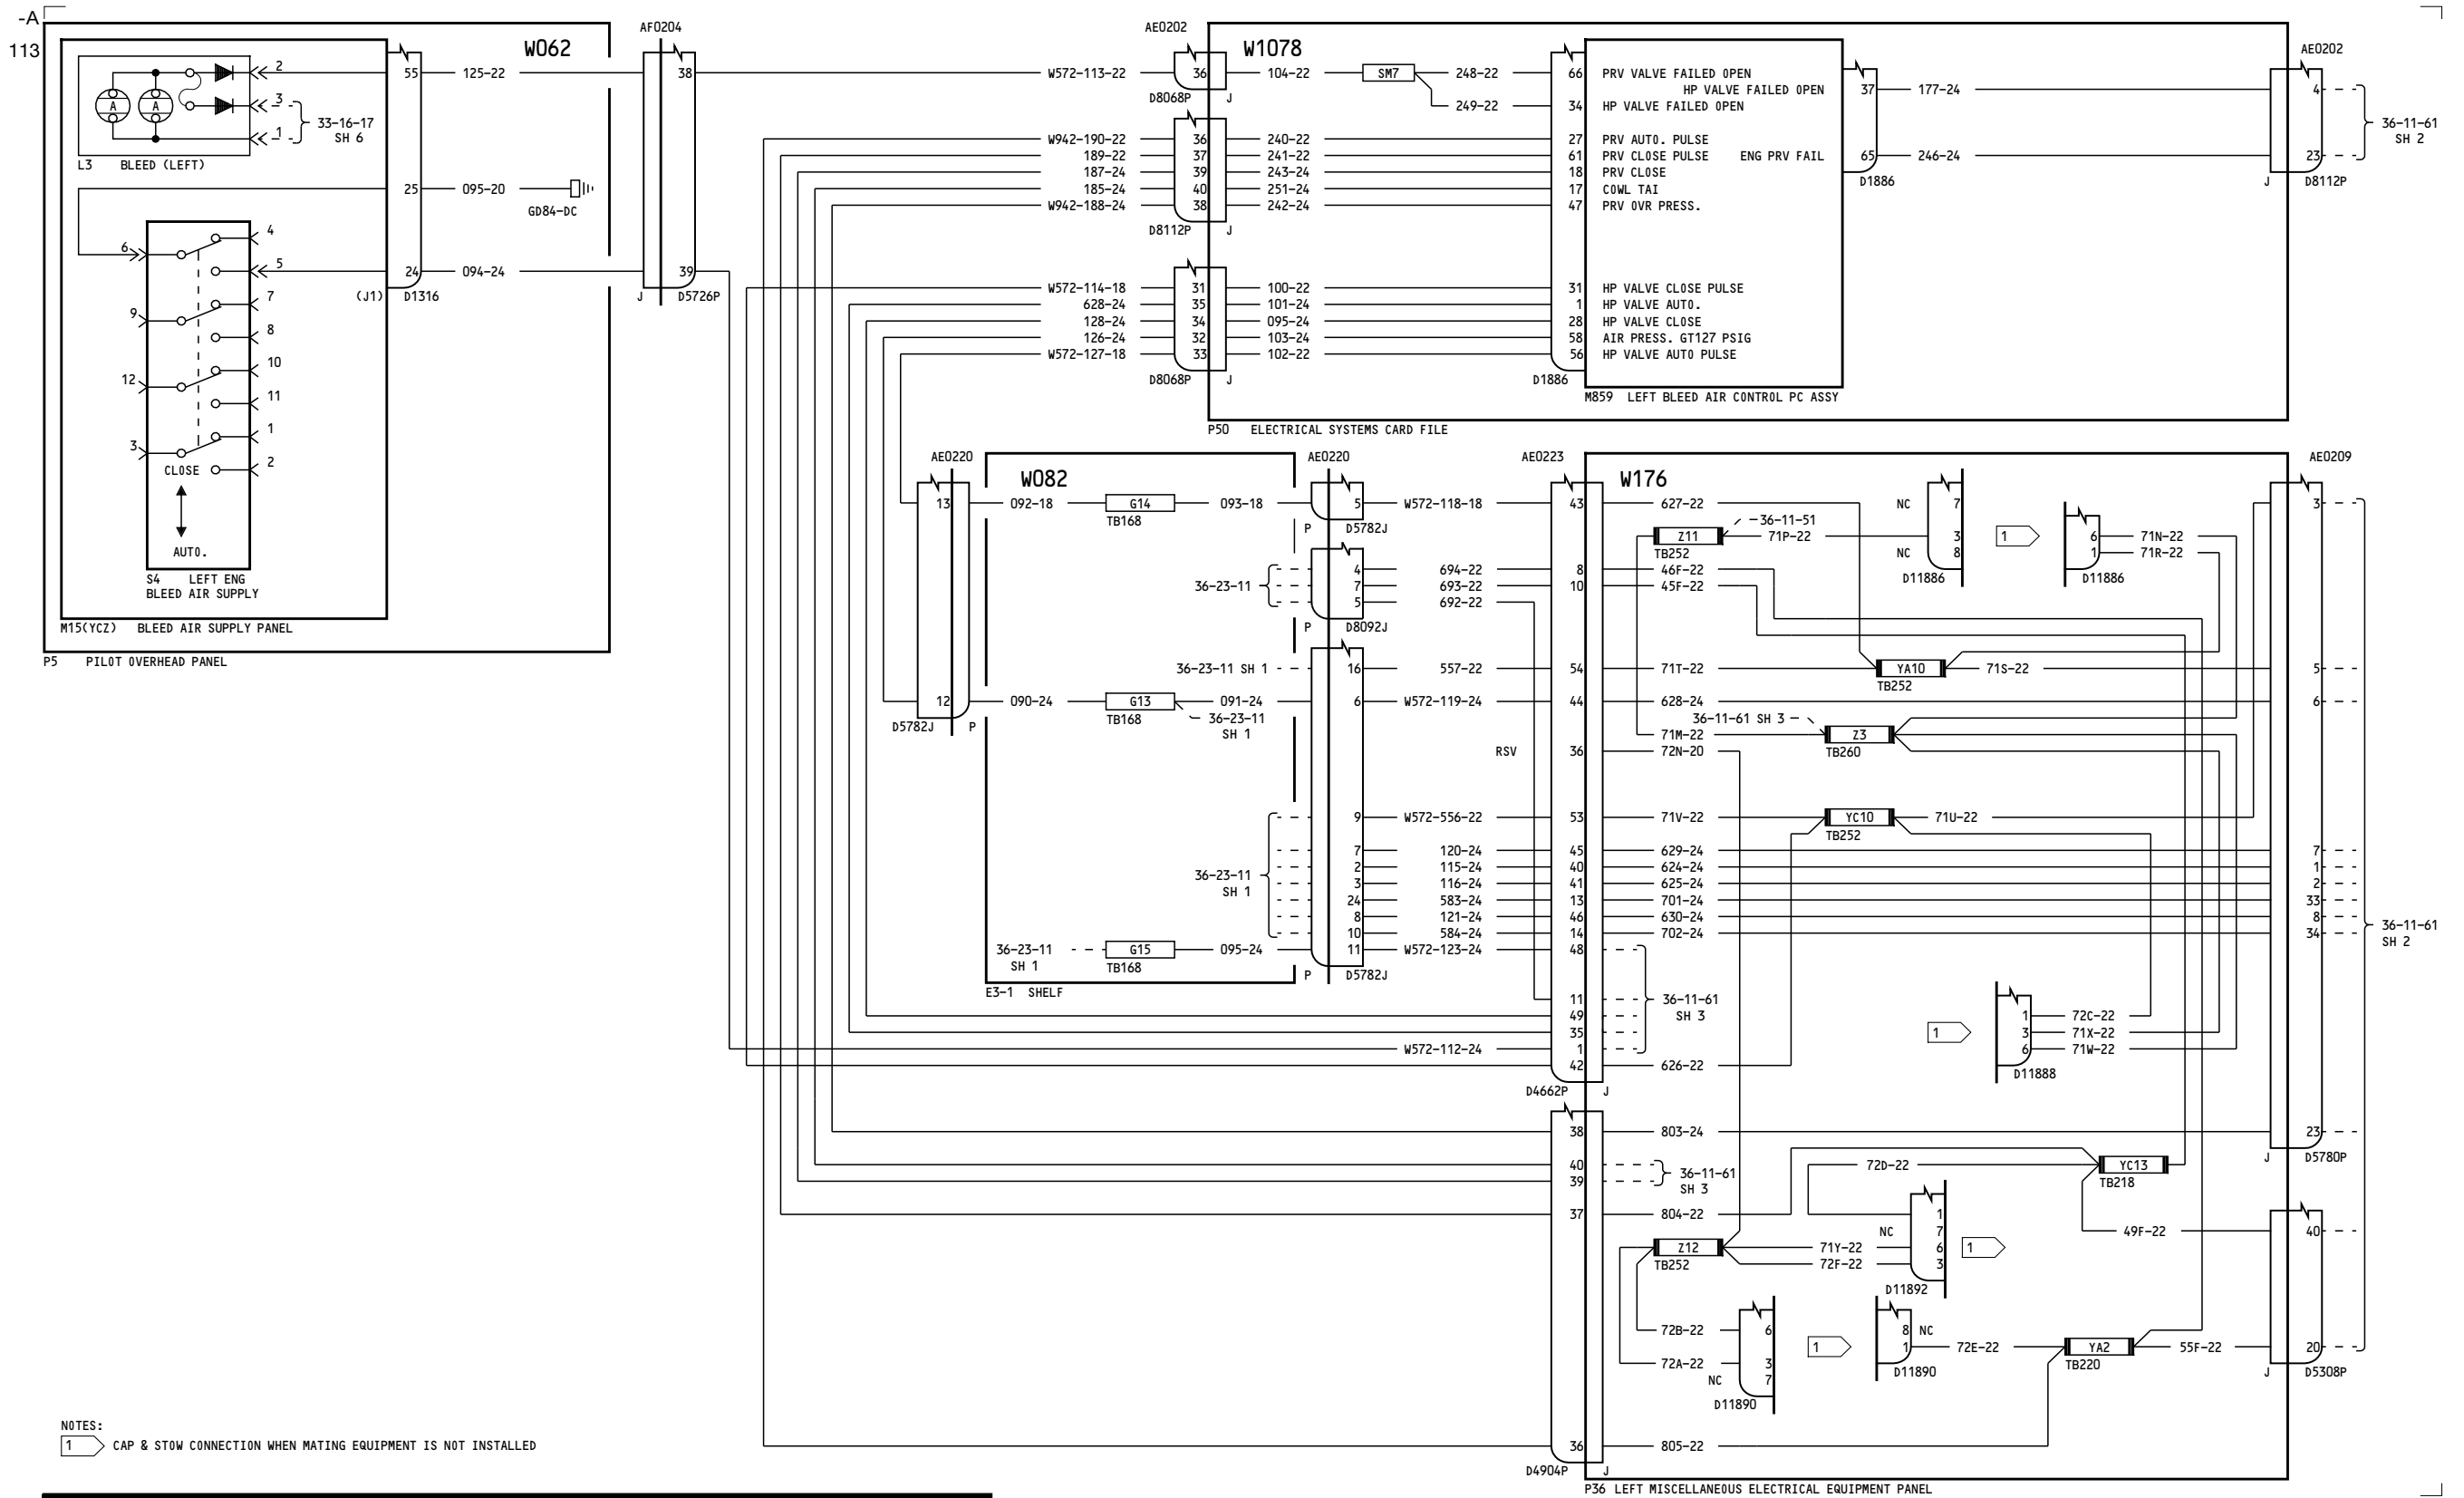

NOTES:  
 1 CAP & STOW CONNECTION WHEN MATING EQUIPMENT IS NOT INSTALLED

276

**AIR SUPPLY BLEED AIR-  
 LEFT ENGINE HIGH  
 PRESSURE CONTROL**

D280T132


**36-11-61**

Page 8.1  
 Sheet 1  
 Jan 21/2005

- Incorporates
- ▶ 36-0026
  - ▶ 36-0026 IN06
  - ▶ 36-0029 R05

**36-11-61**

Page 8.1  
 Sheet 1  
 Jan 21/2005

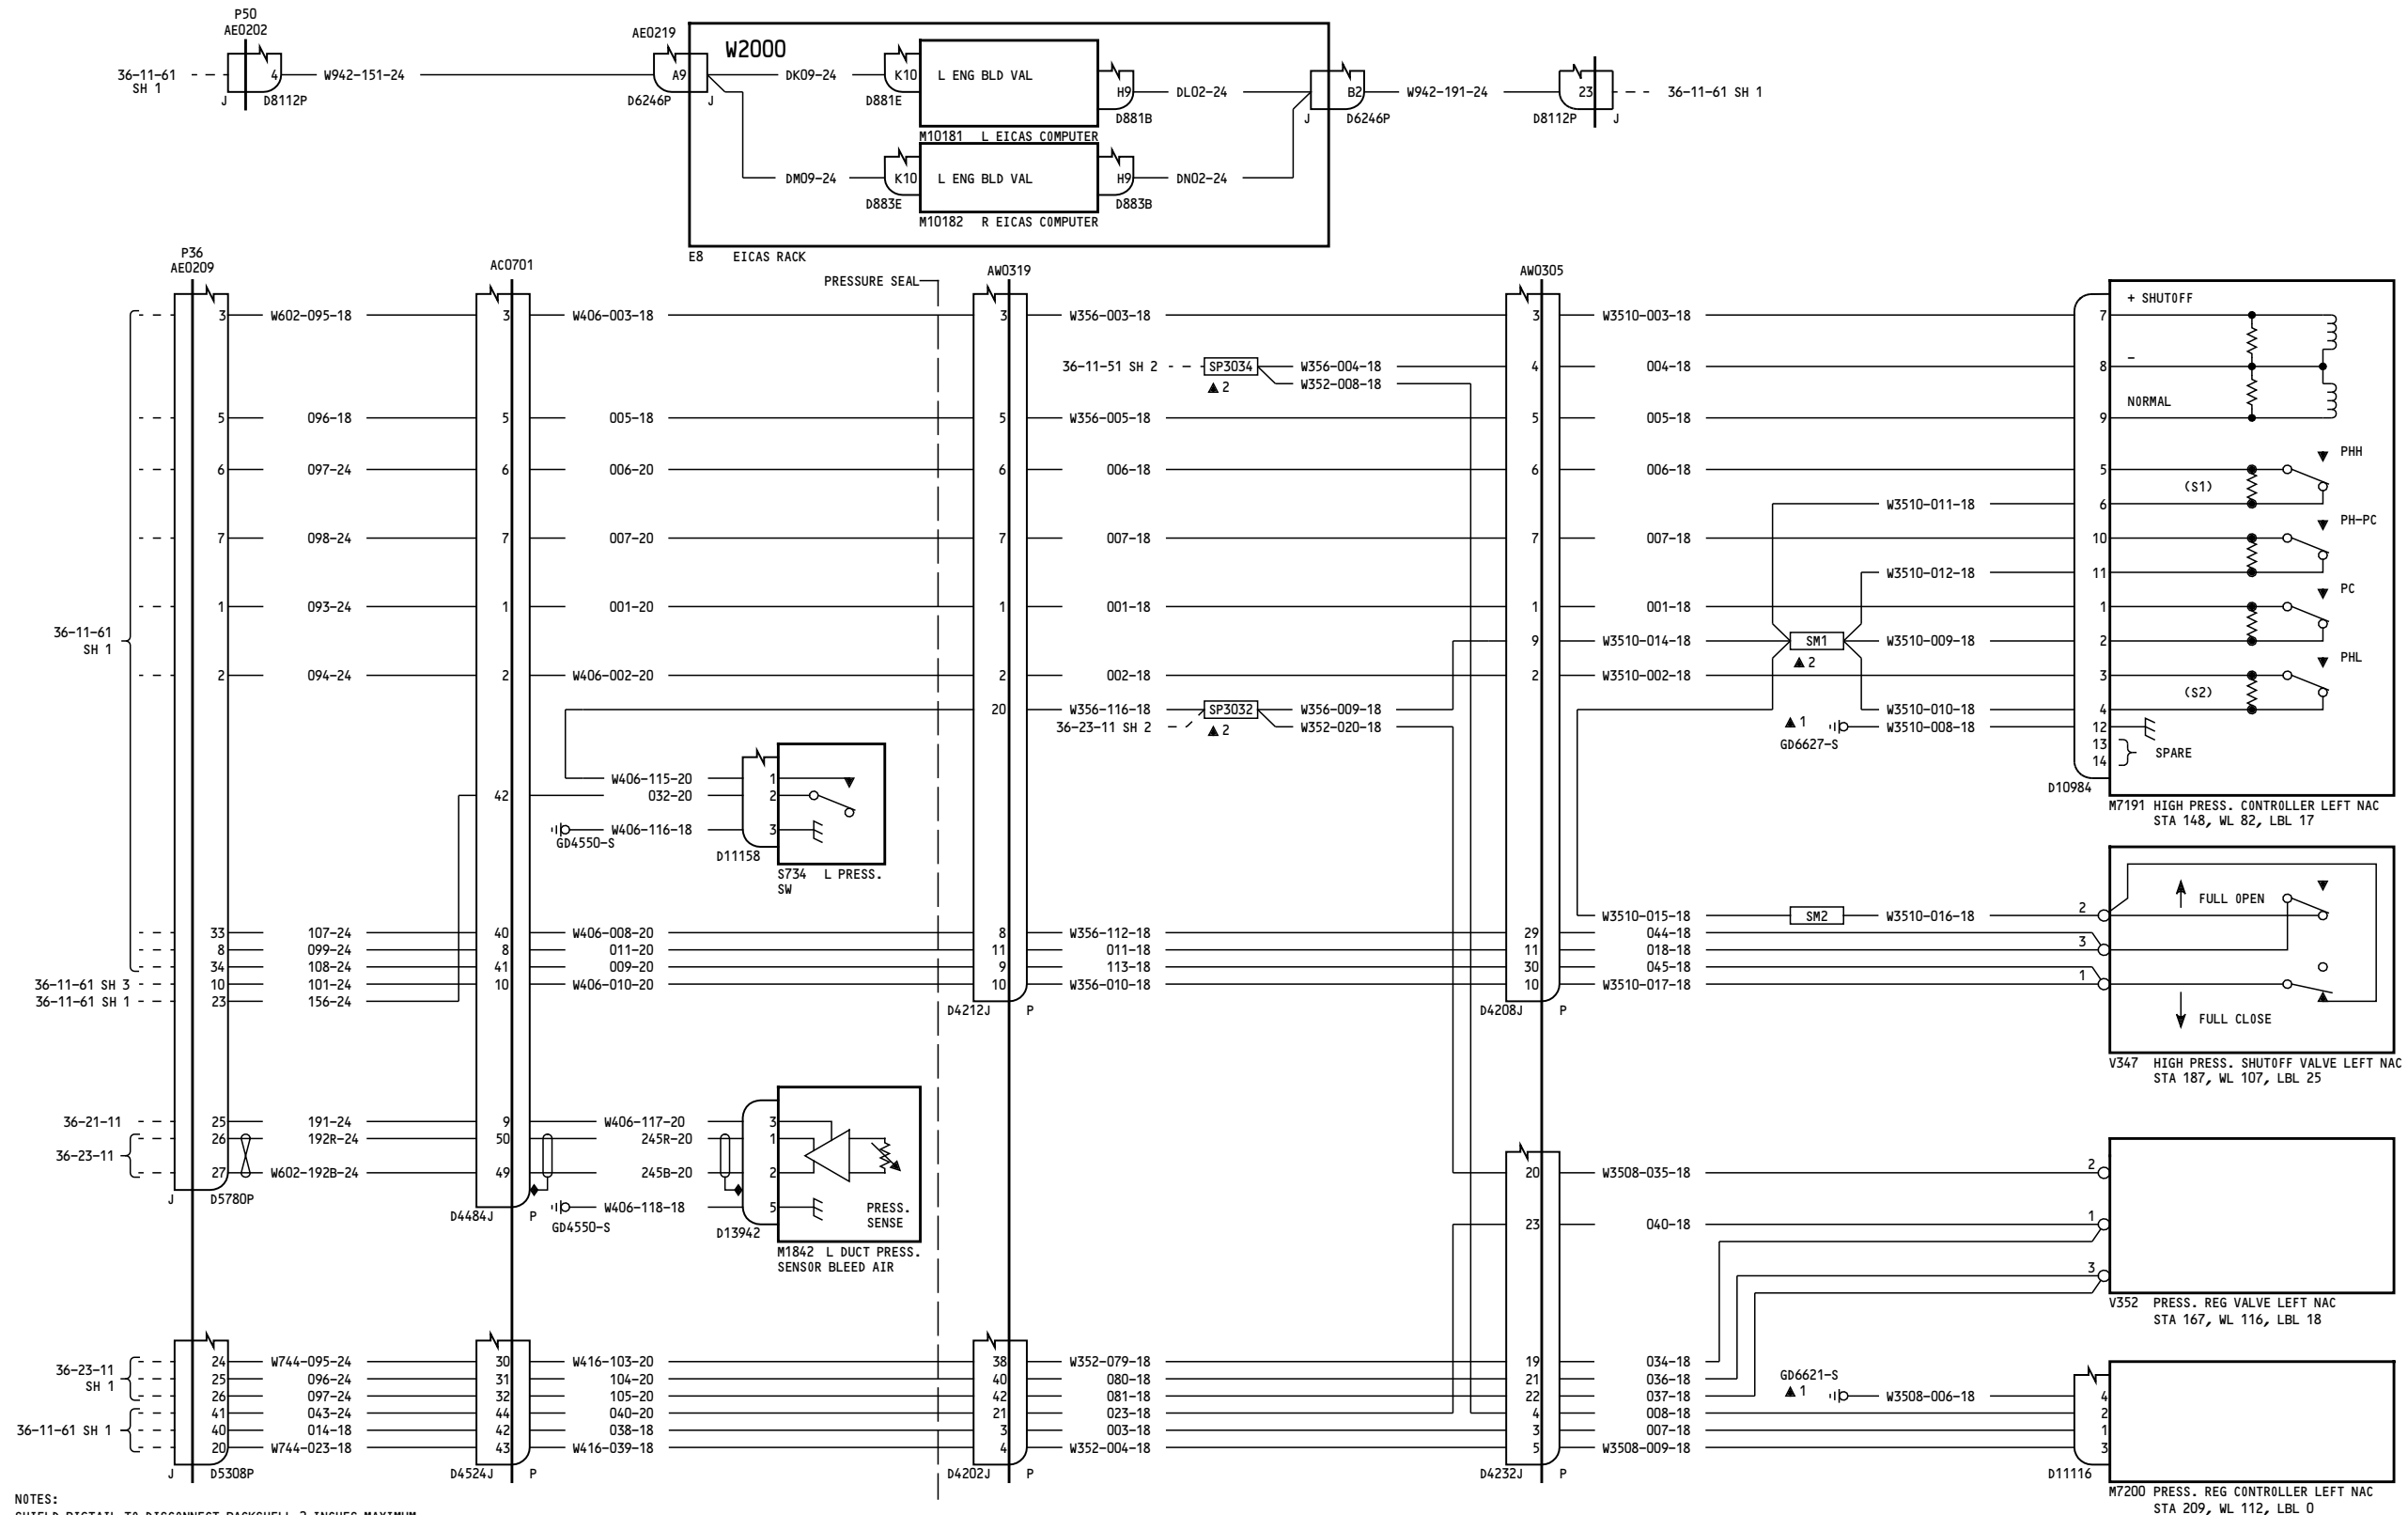

NOTES:  
SHIELD PIGTAIL TO DISCONNECT BACKSHELL 2 INCHES MAXIMUM

276

**AIR SUPPLY BLEED AIR-  
LEFT ENGINE HIGH  
PRESSURE CONTROL**

D280T132


**36-11-61**

Page 8.1  
Sheet 2  
Feb 06/2009

Incorporates  
36-0029 R05  
36-0053

**36-11-61**

Page 8.1  
Sheet 2  
Feb 06/2009

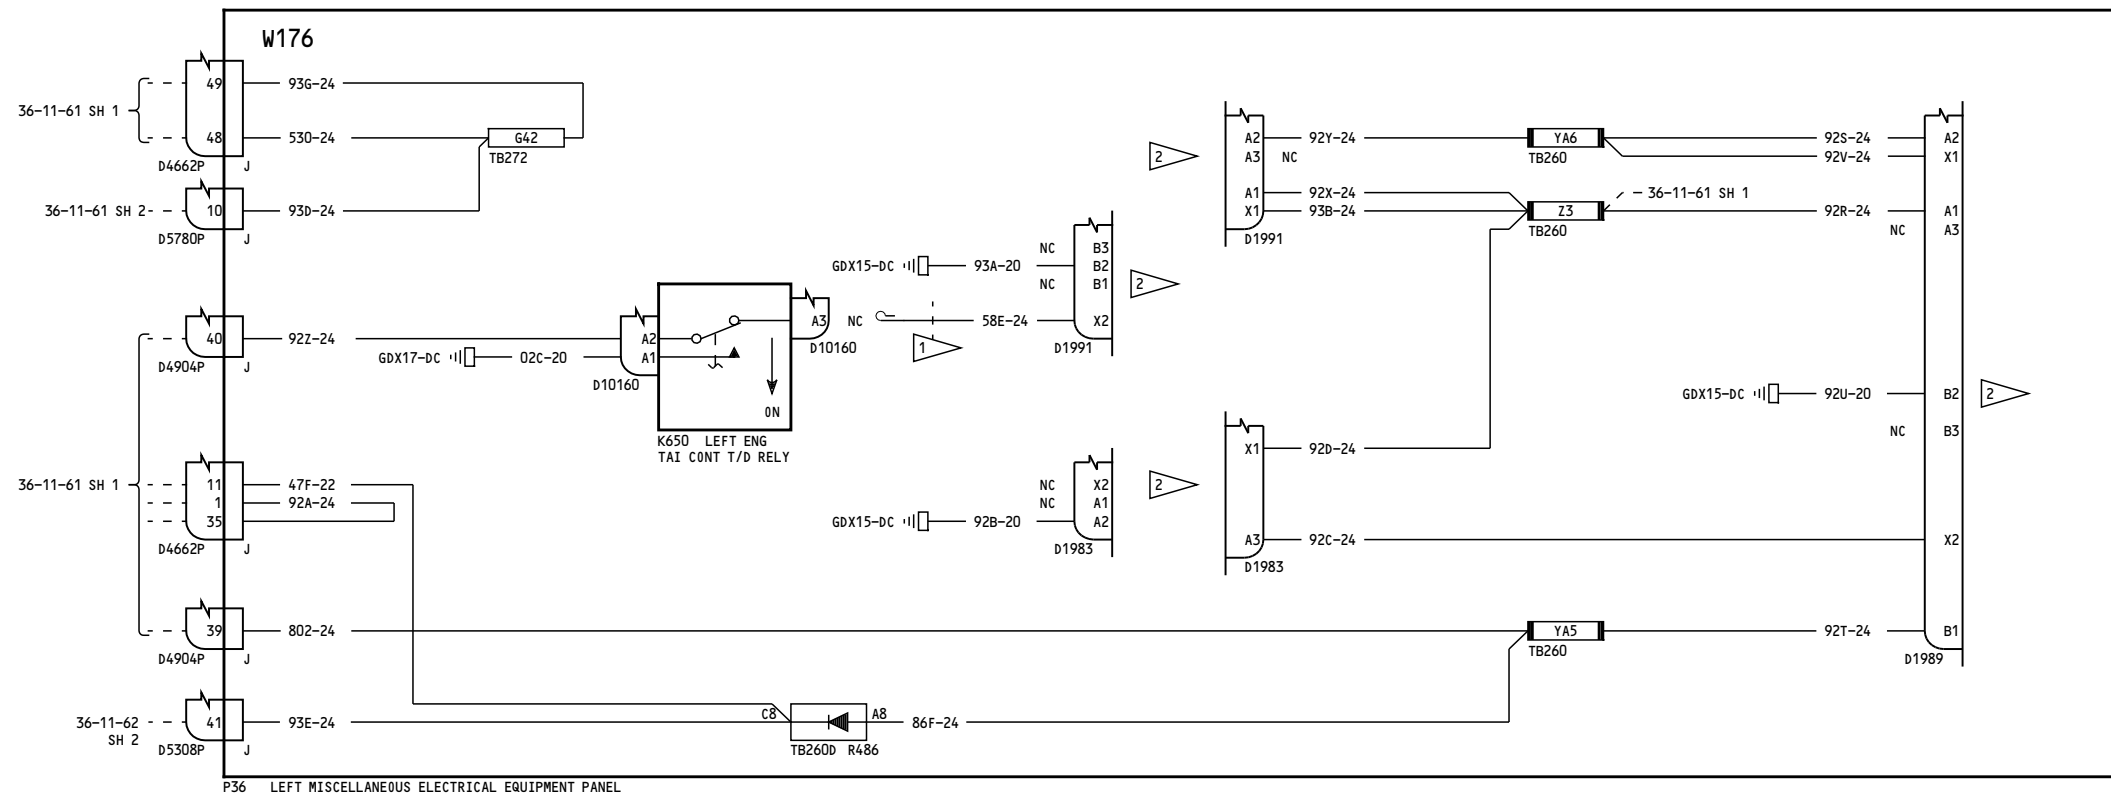

- NOTES:
- 1 CAP & STOW NEAR D10160
  - 2 CAP & STOW CONNECTOR WHEN MATING EQUIPMENT IS NOT INSTALLED.

276

**AIR SUPPLY BLEED AIR-  
LEFT ENGINE HIGH  
PRESSURE CONTROL**

D280T132


**36-11-61**

Page 8.1  
Sheet 3  
Jan 21/2005

- Incorporates
- 36-0026 IN06
  - 36-0029 R05

**36-11-61**

Page 8.1  
Sheet 3  
Jan 21/2005

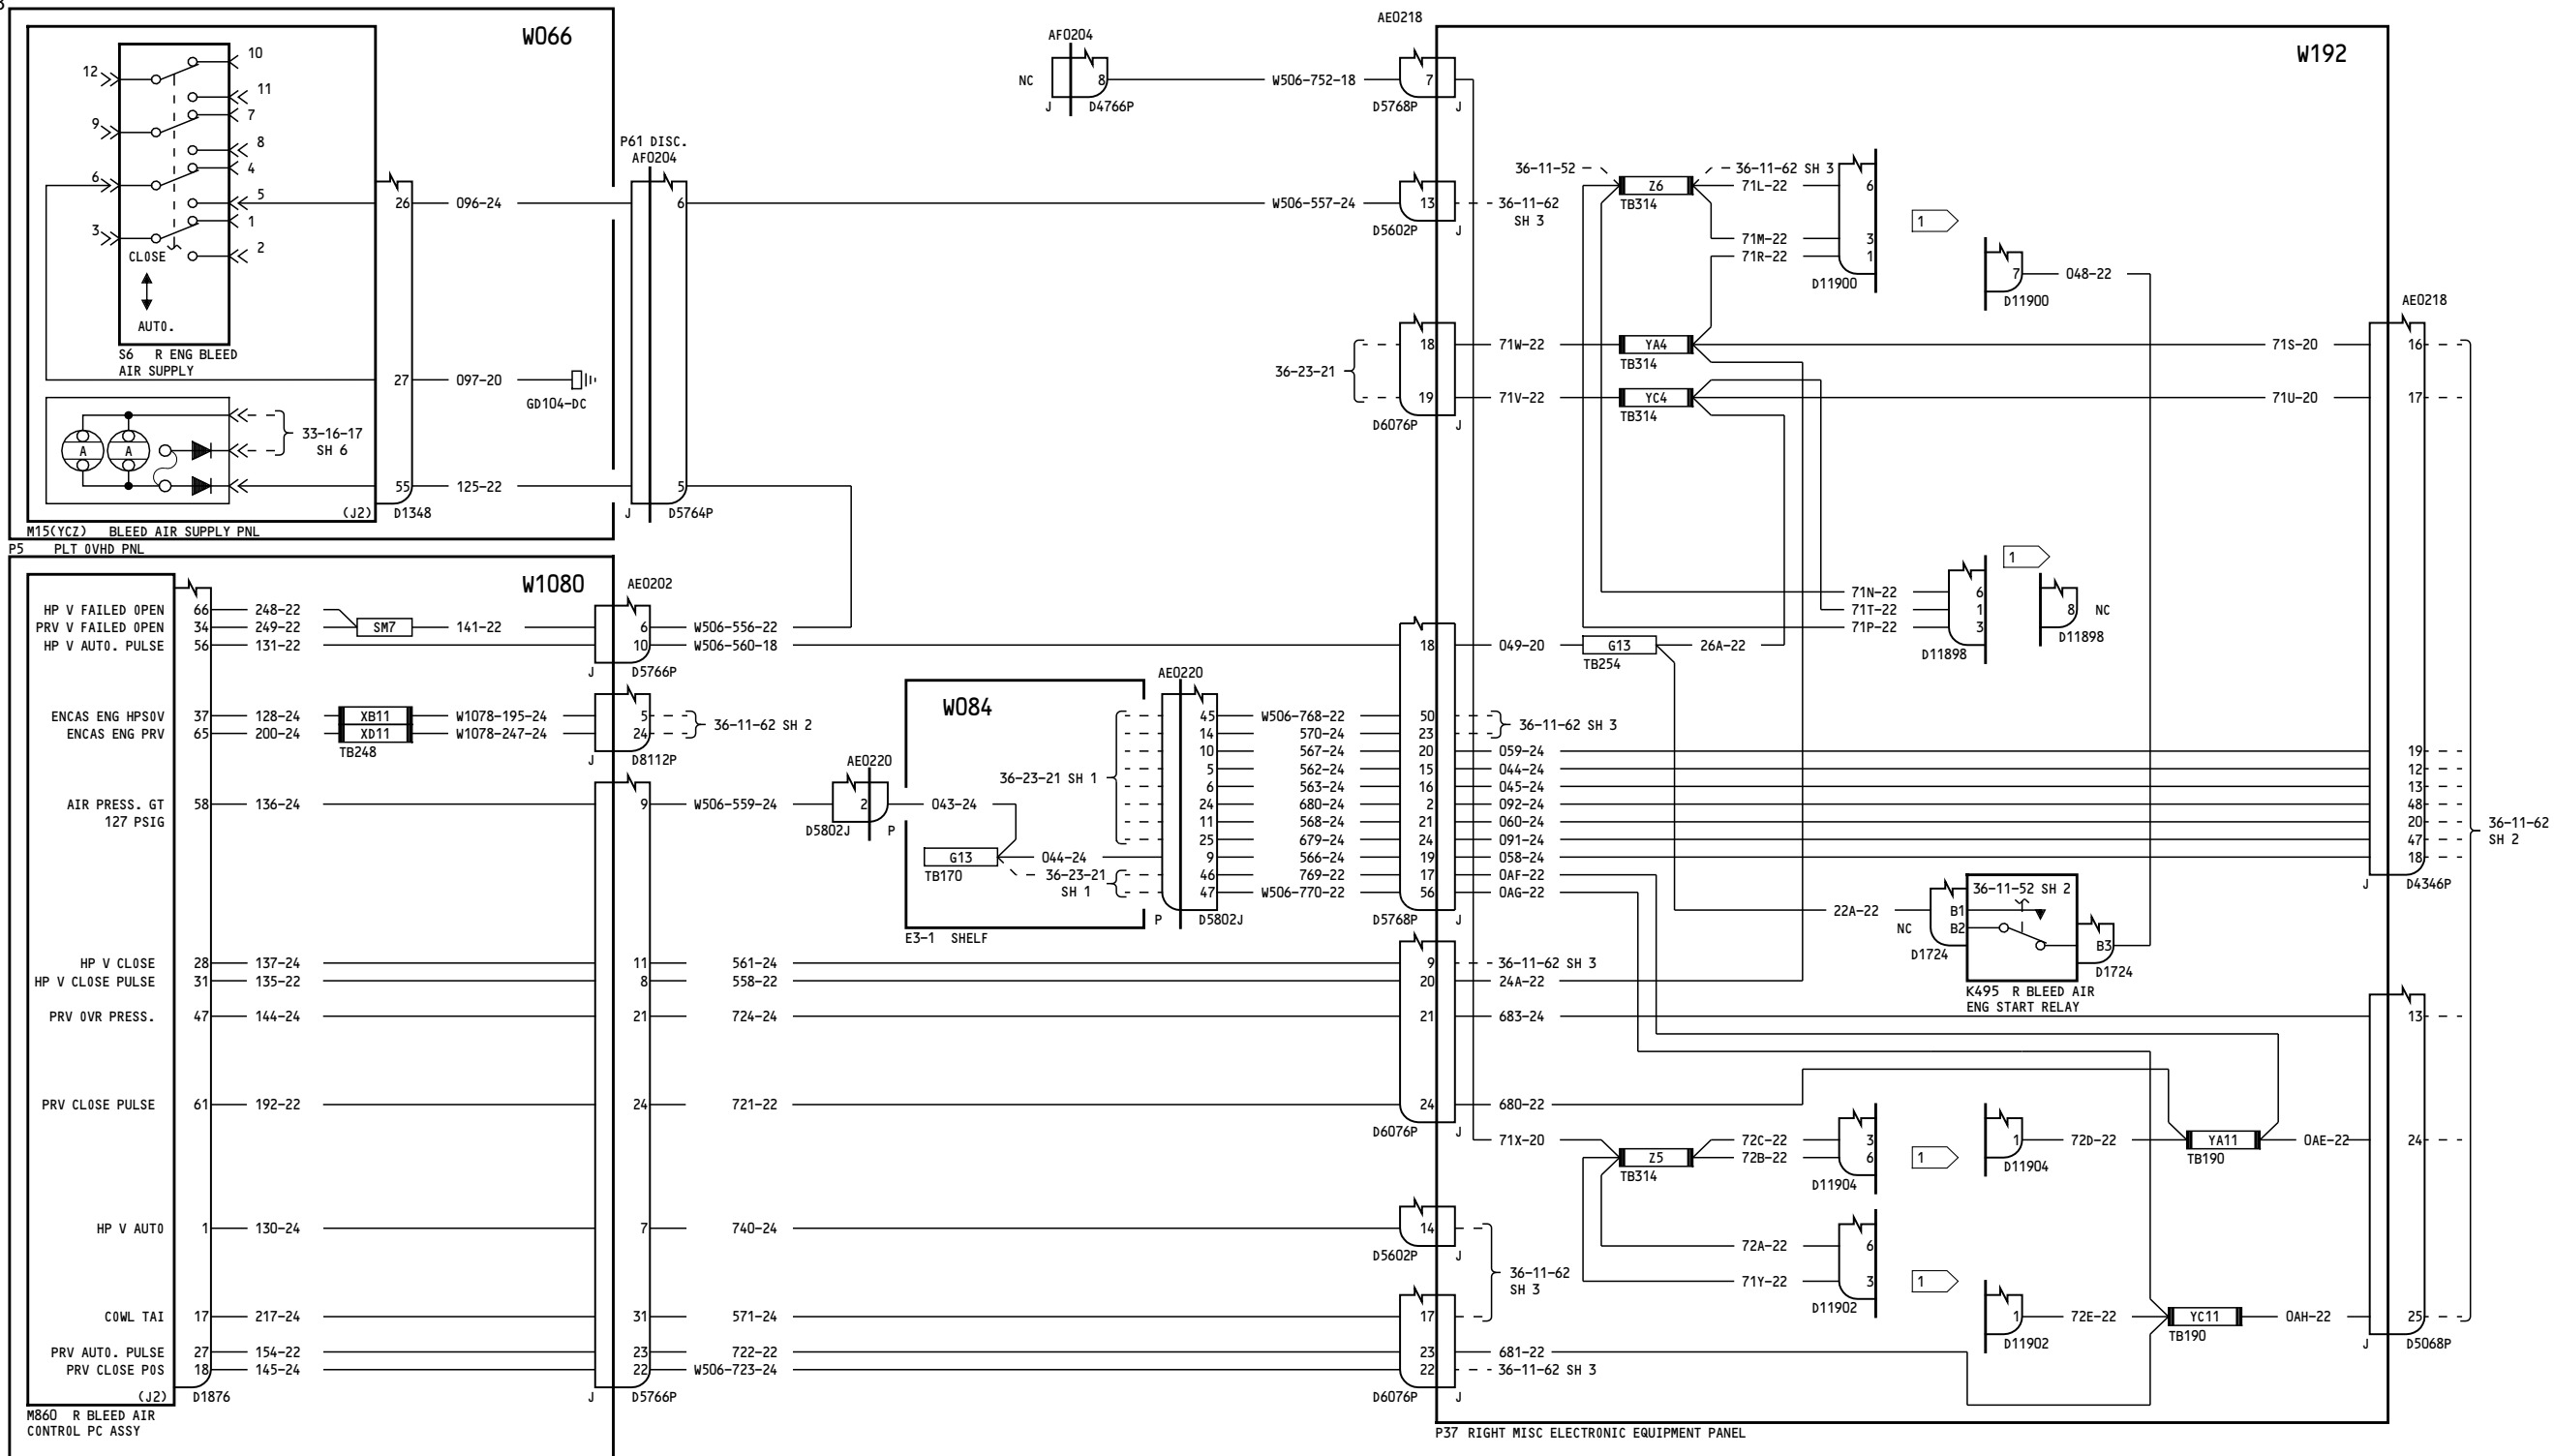

NOTES:  
 1 CAP AND STOW CONNECTOR WHEN MATING EQUIPMENT IS NOT INSTALLED

050-051, 155, 163-165

**AIR SUPPLY BLEED AIR-  
 RIGHT ENGINE HIGH  
 PRESSURE CONTROL**

D280T132


**36-11-62**

Page 1.1  
 Sheet 1  
 Aug 15/2007

Incorporates  
 36-0026  
 36-0026 R02  
 36-0029 R05

**36-11-62**

Page 1.1  
 Sheet 1  
 Aug 15/2007

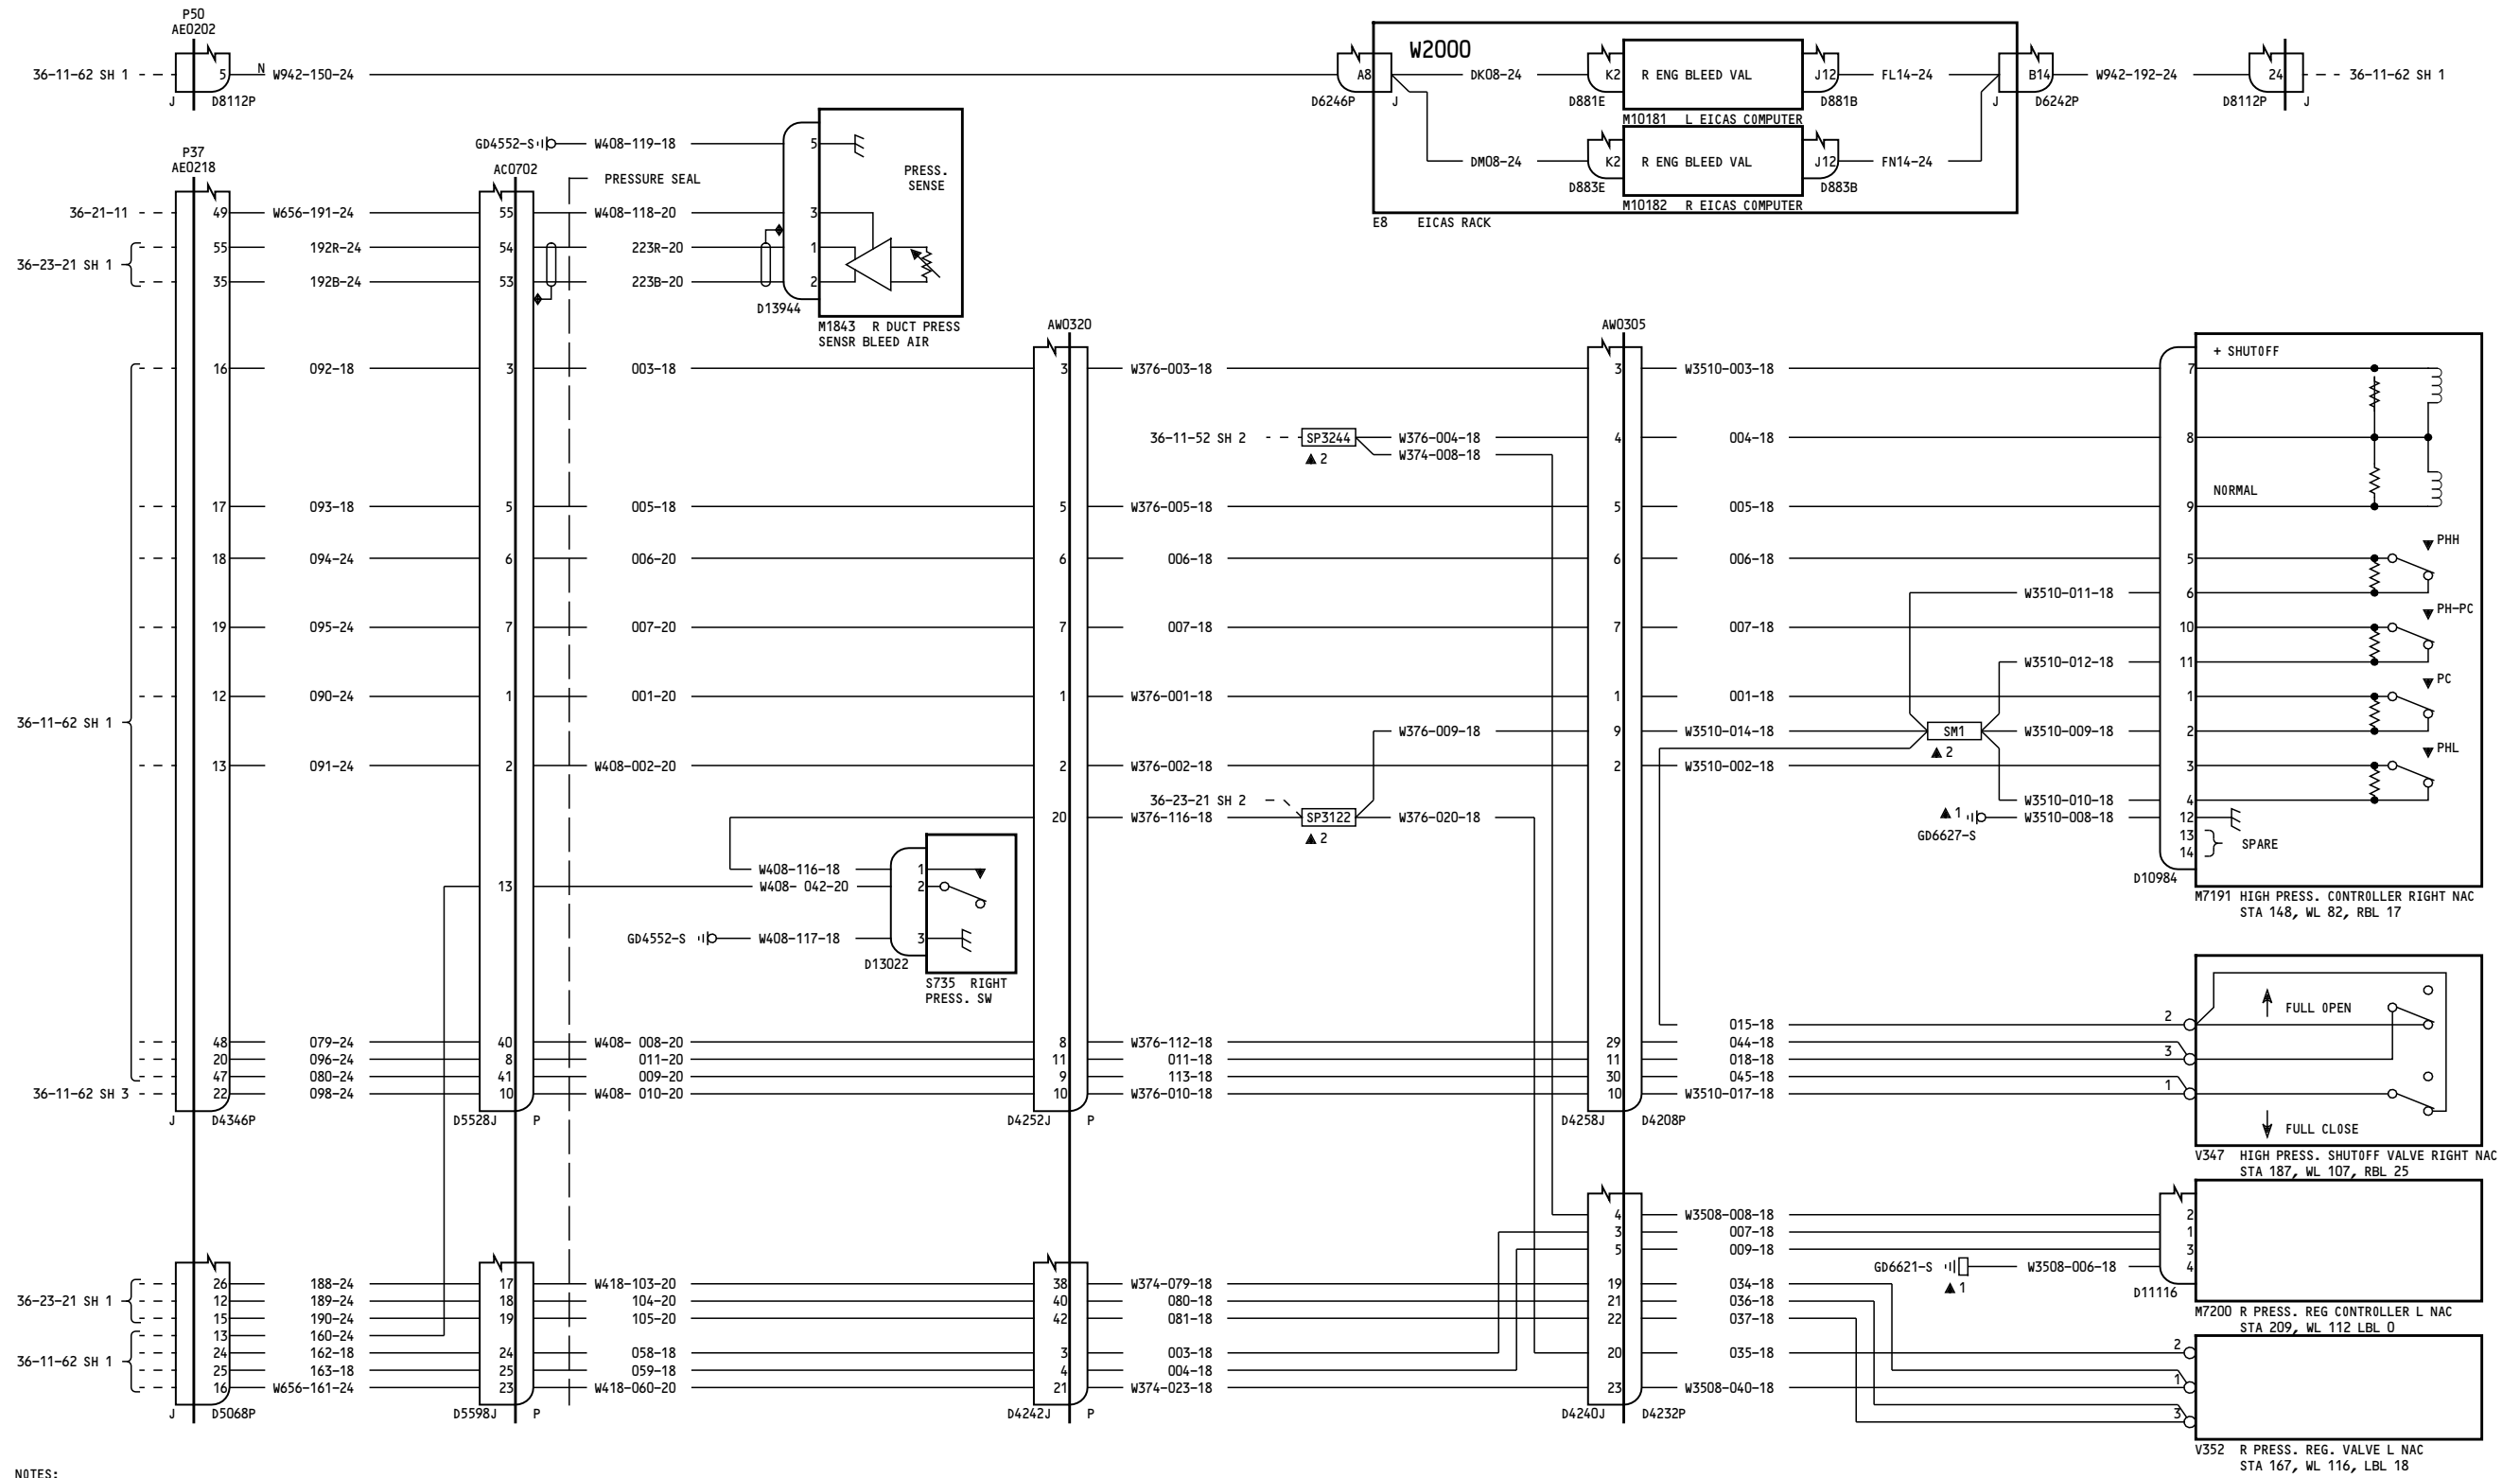

050-051, 155, 163-165

**AIR SUPPLY BLEED AIR -  
RIGHT ENGINE HIGH  
PRESSURE CONTROL**

**36-11-62**


Incorporates  
36-0029 R05

**36-11-62**

D280T132

Page 1.1  
Sheet 2  
Jan 21/2005

Page 1.1  
Sheet 2  
Jan 21/2005

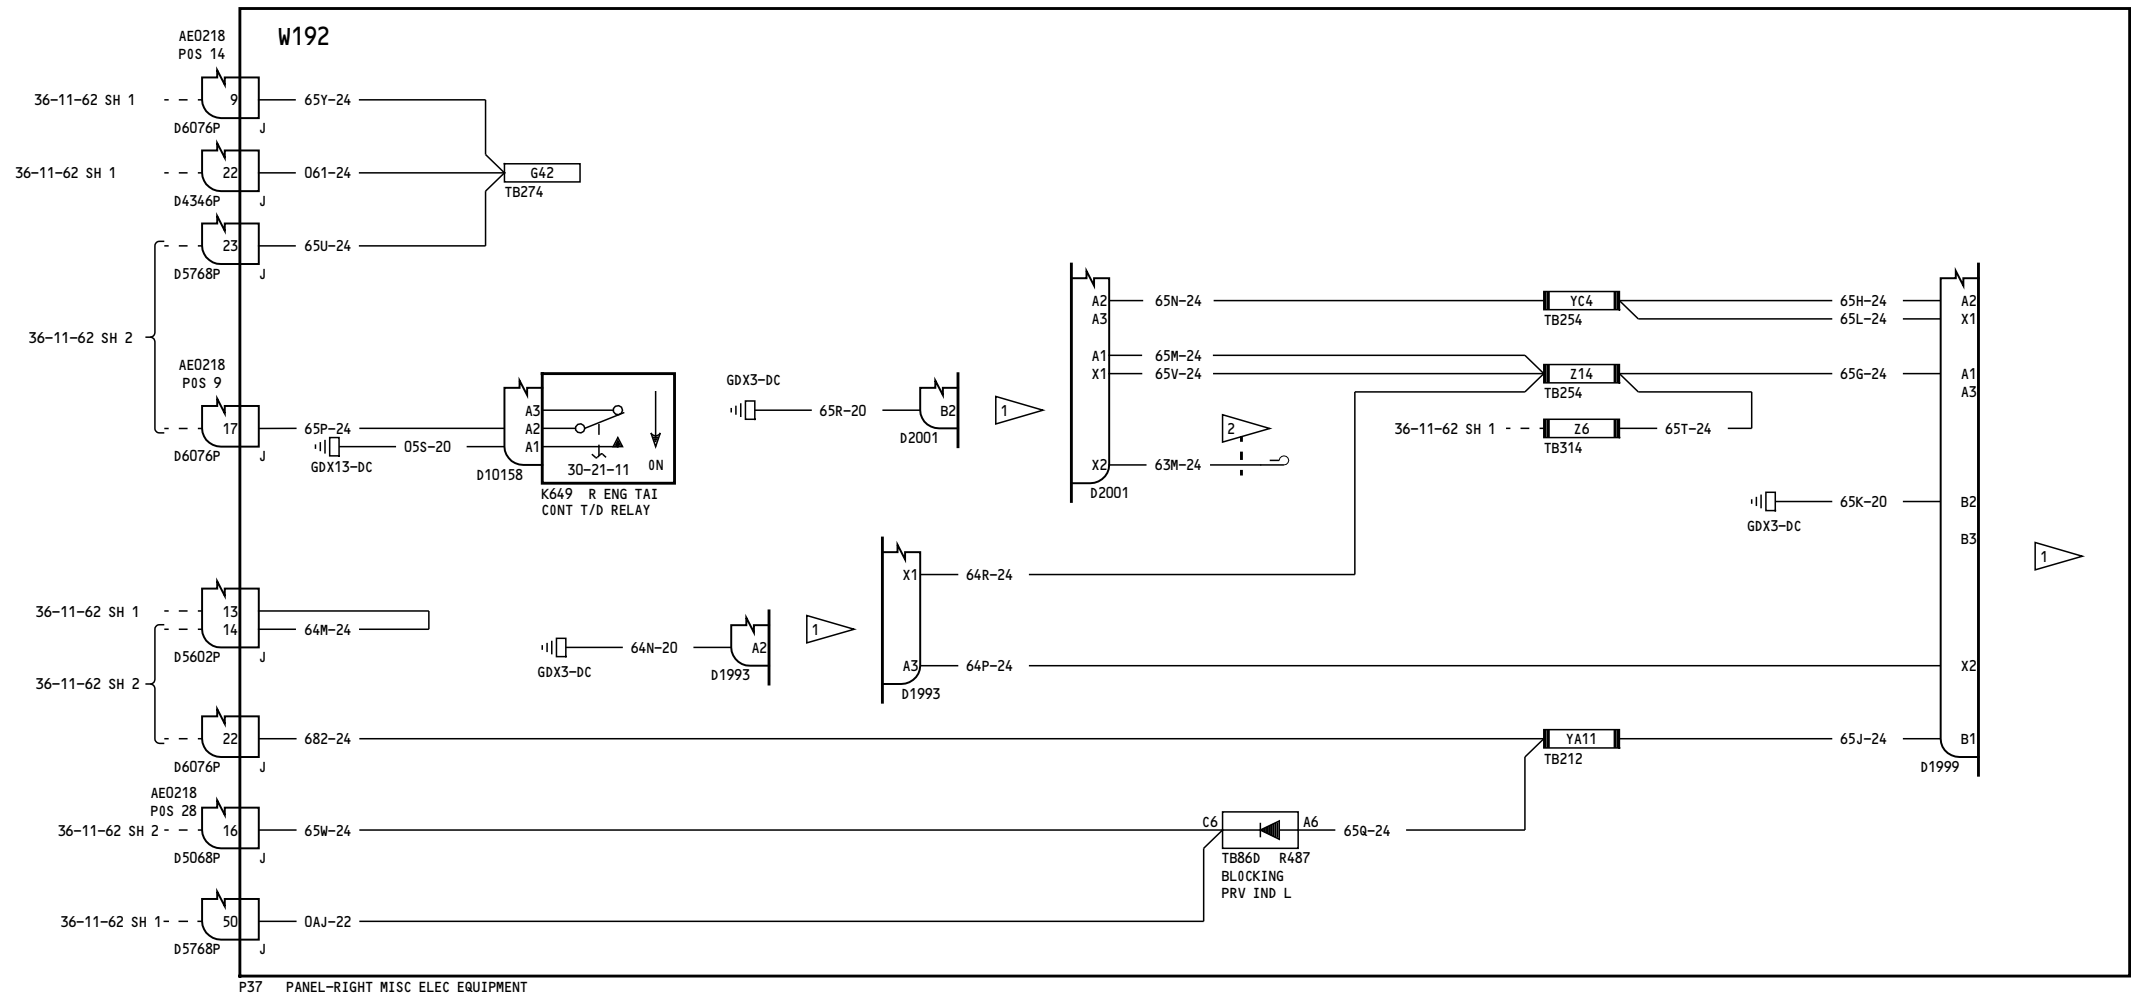

- NOTES:
- 1 CAP & STOW CONNECTOR WHEN MATING EQUIPMENT IS NOT INSTALLED
  - 2 CAP & STOW NEAR D10158

050-051, 155, 163-165

**AIR SUPPLY BLEED AIR-  
RIGHT ENGINE HIGH  
PRESSURE CONTROL**

D280T132

**36-11-62**


Page 1.1  
Sheet 3  
Jan 21/2005

- Incorporates
- 36-0026 R02
  - 36-0029 R05

**36-11-62**

Page 1.1  
Sheet 3  
Jan 21/2005



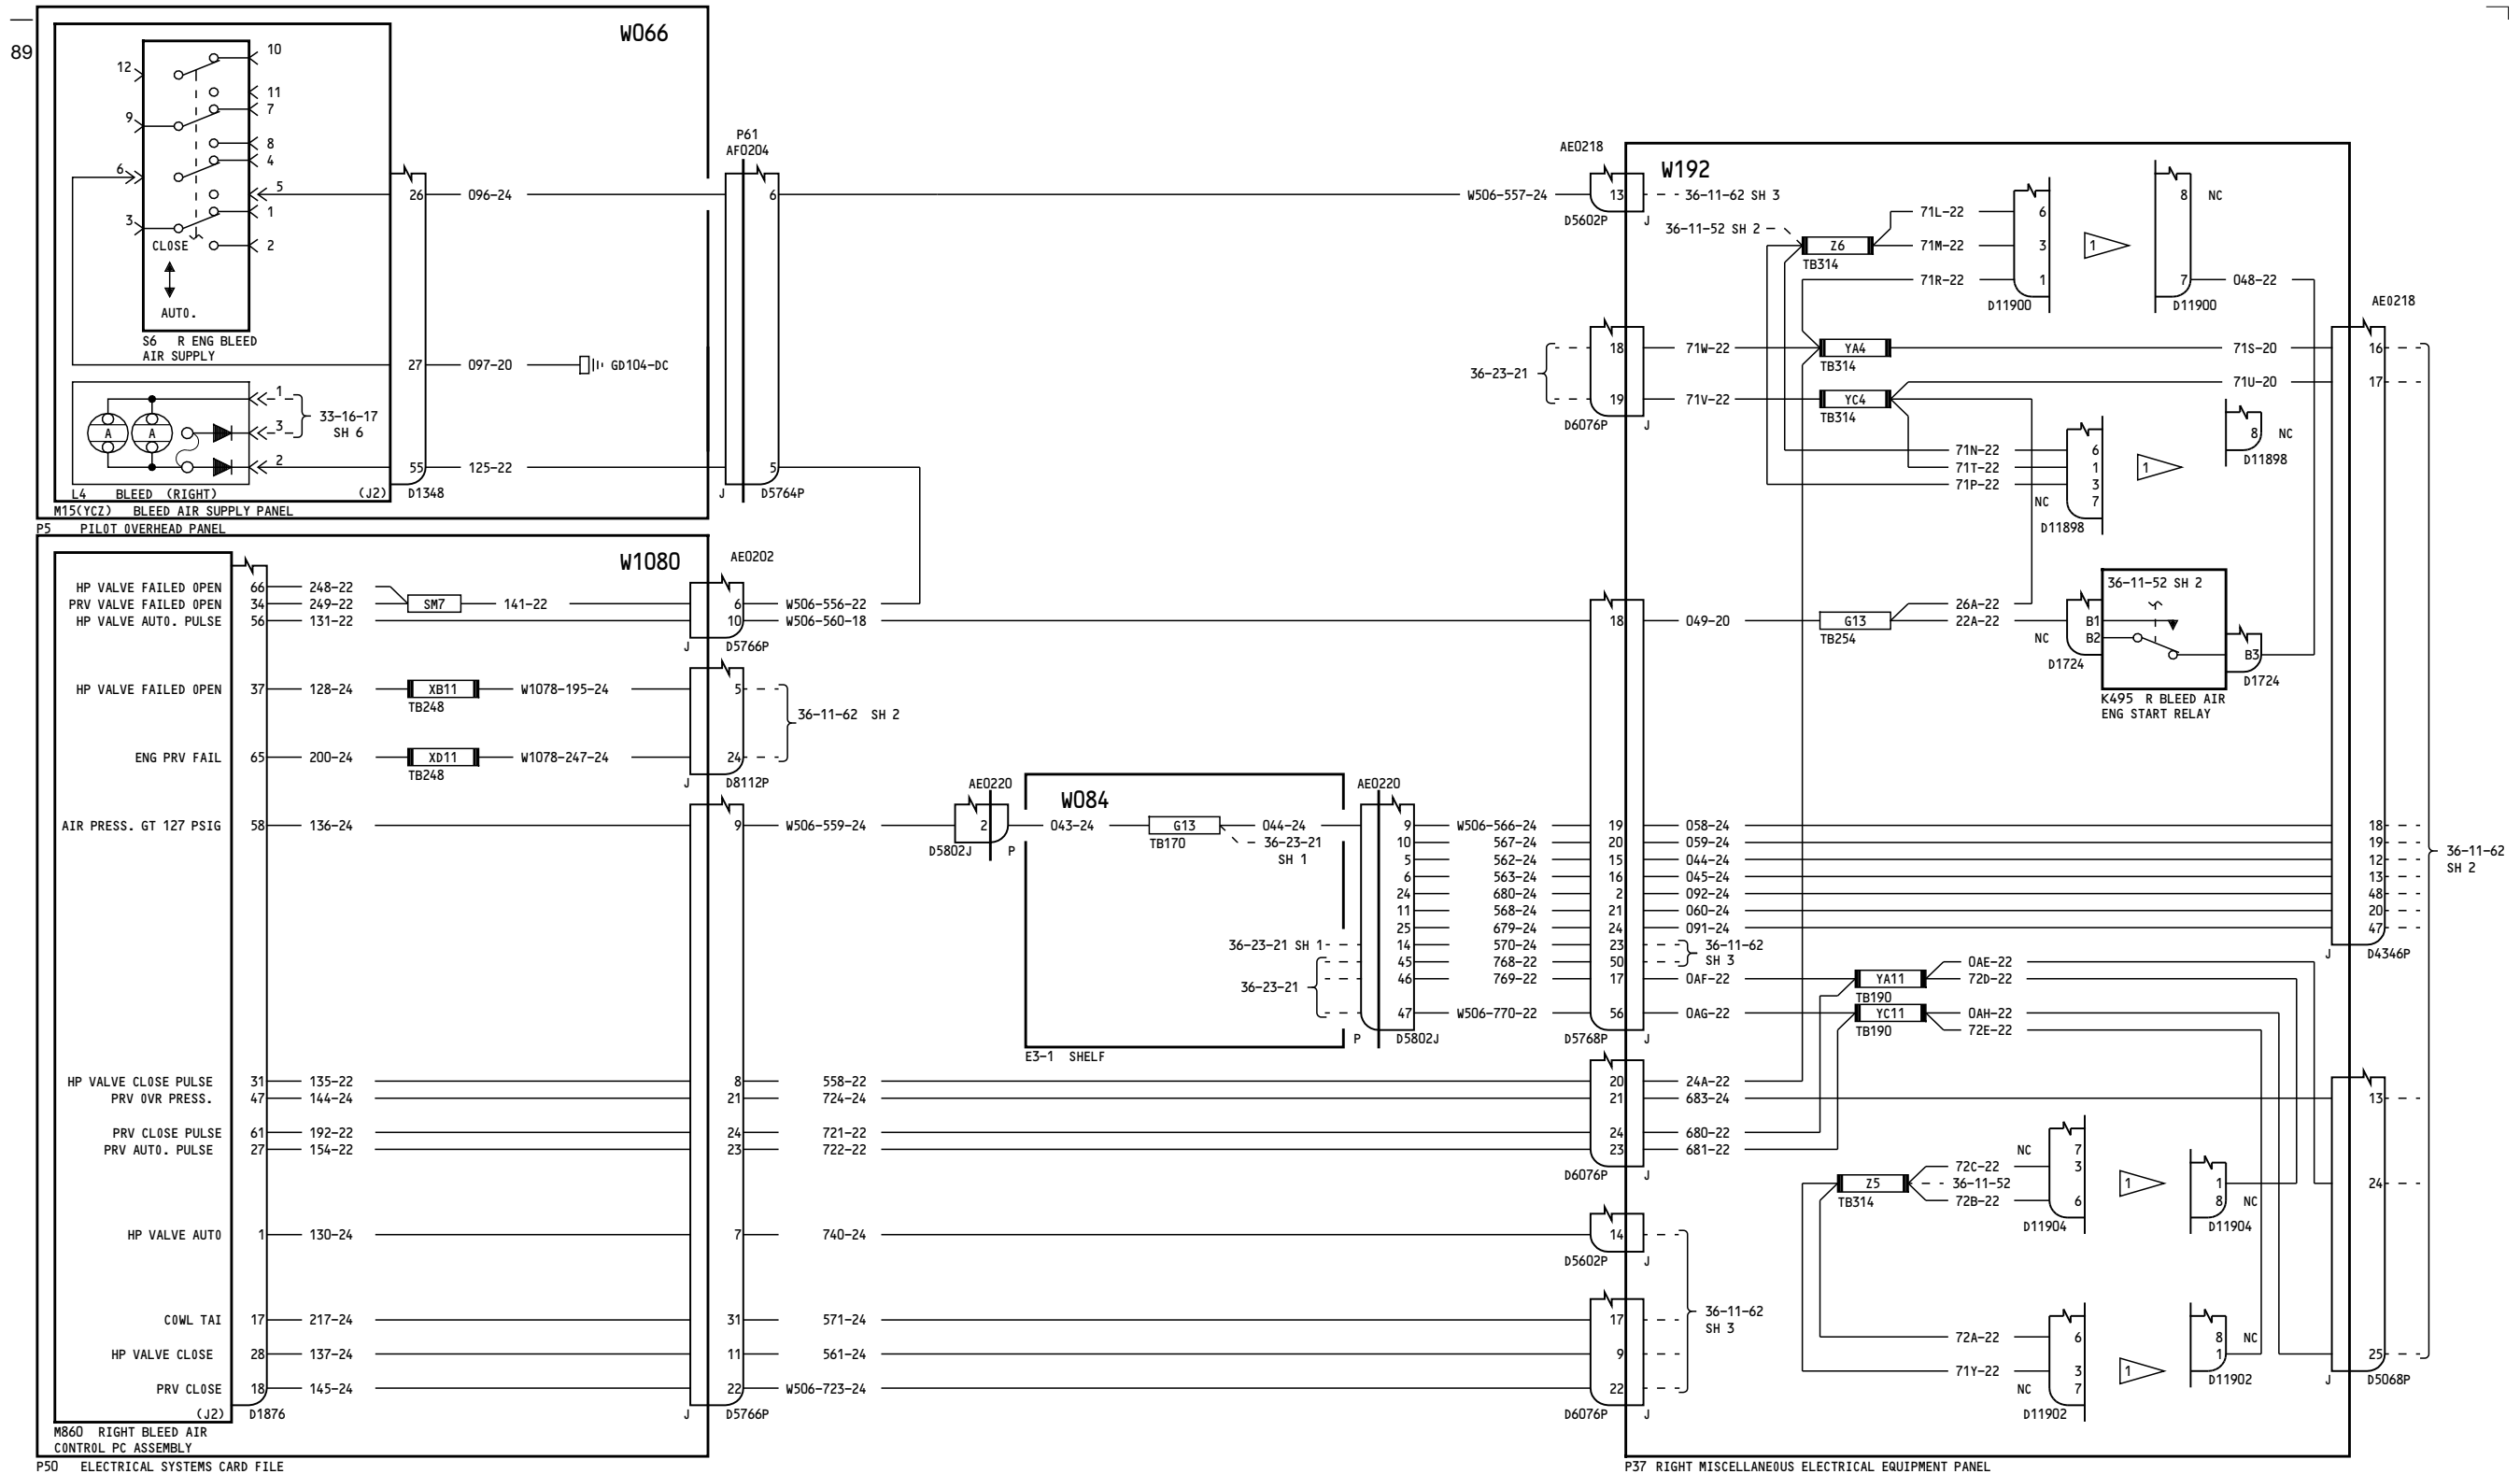

NOTES:  
 1 CAP & STOW CONNECTOR WHEN MATING EQUIPMENT IS NOT INSTALLED.

150-154

**AIR SUPPLY BLEED AIR-  
 RIGHT ENGINE HIGH  
 PRESSURE CONTROL**

D280T132


**36-11-62**

Page 2.1  
 Sheet 1  
 Jan 21/2005

- Incorporates
- ▶ 36-0026
  - ▶ 36-0026 R02
  - ▶ 36-0027
  - ▶ 36-0029 R05

**36-11-62**

Page 2.1  
 Sheet 1  
 Jan 21/2005

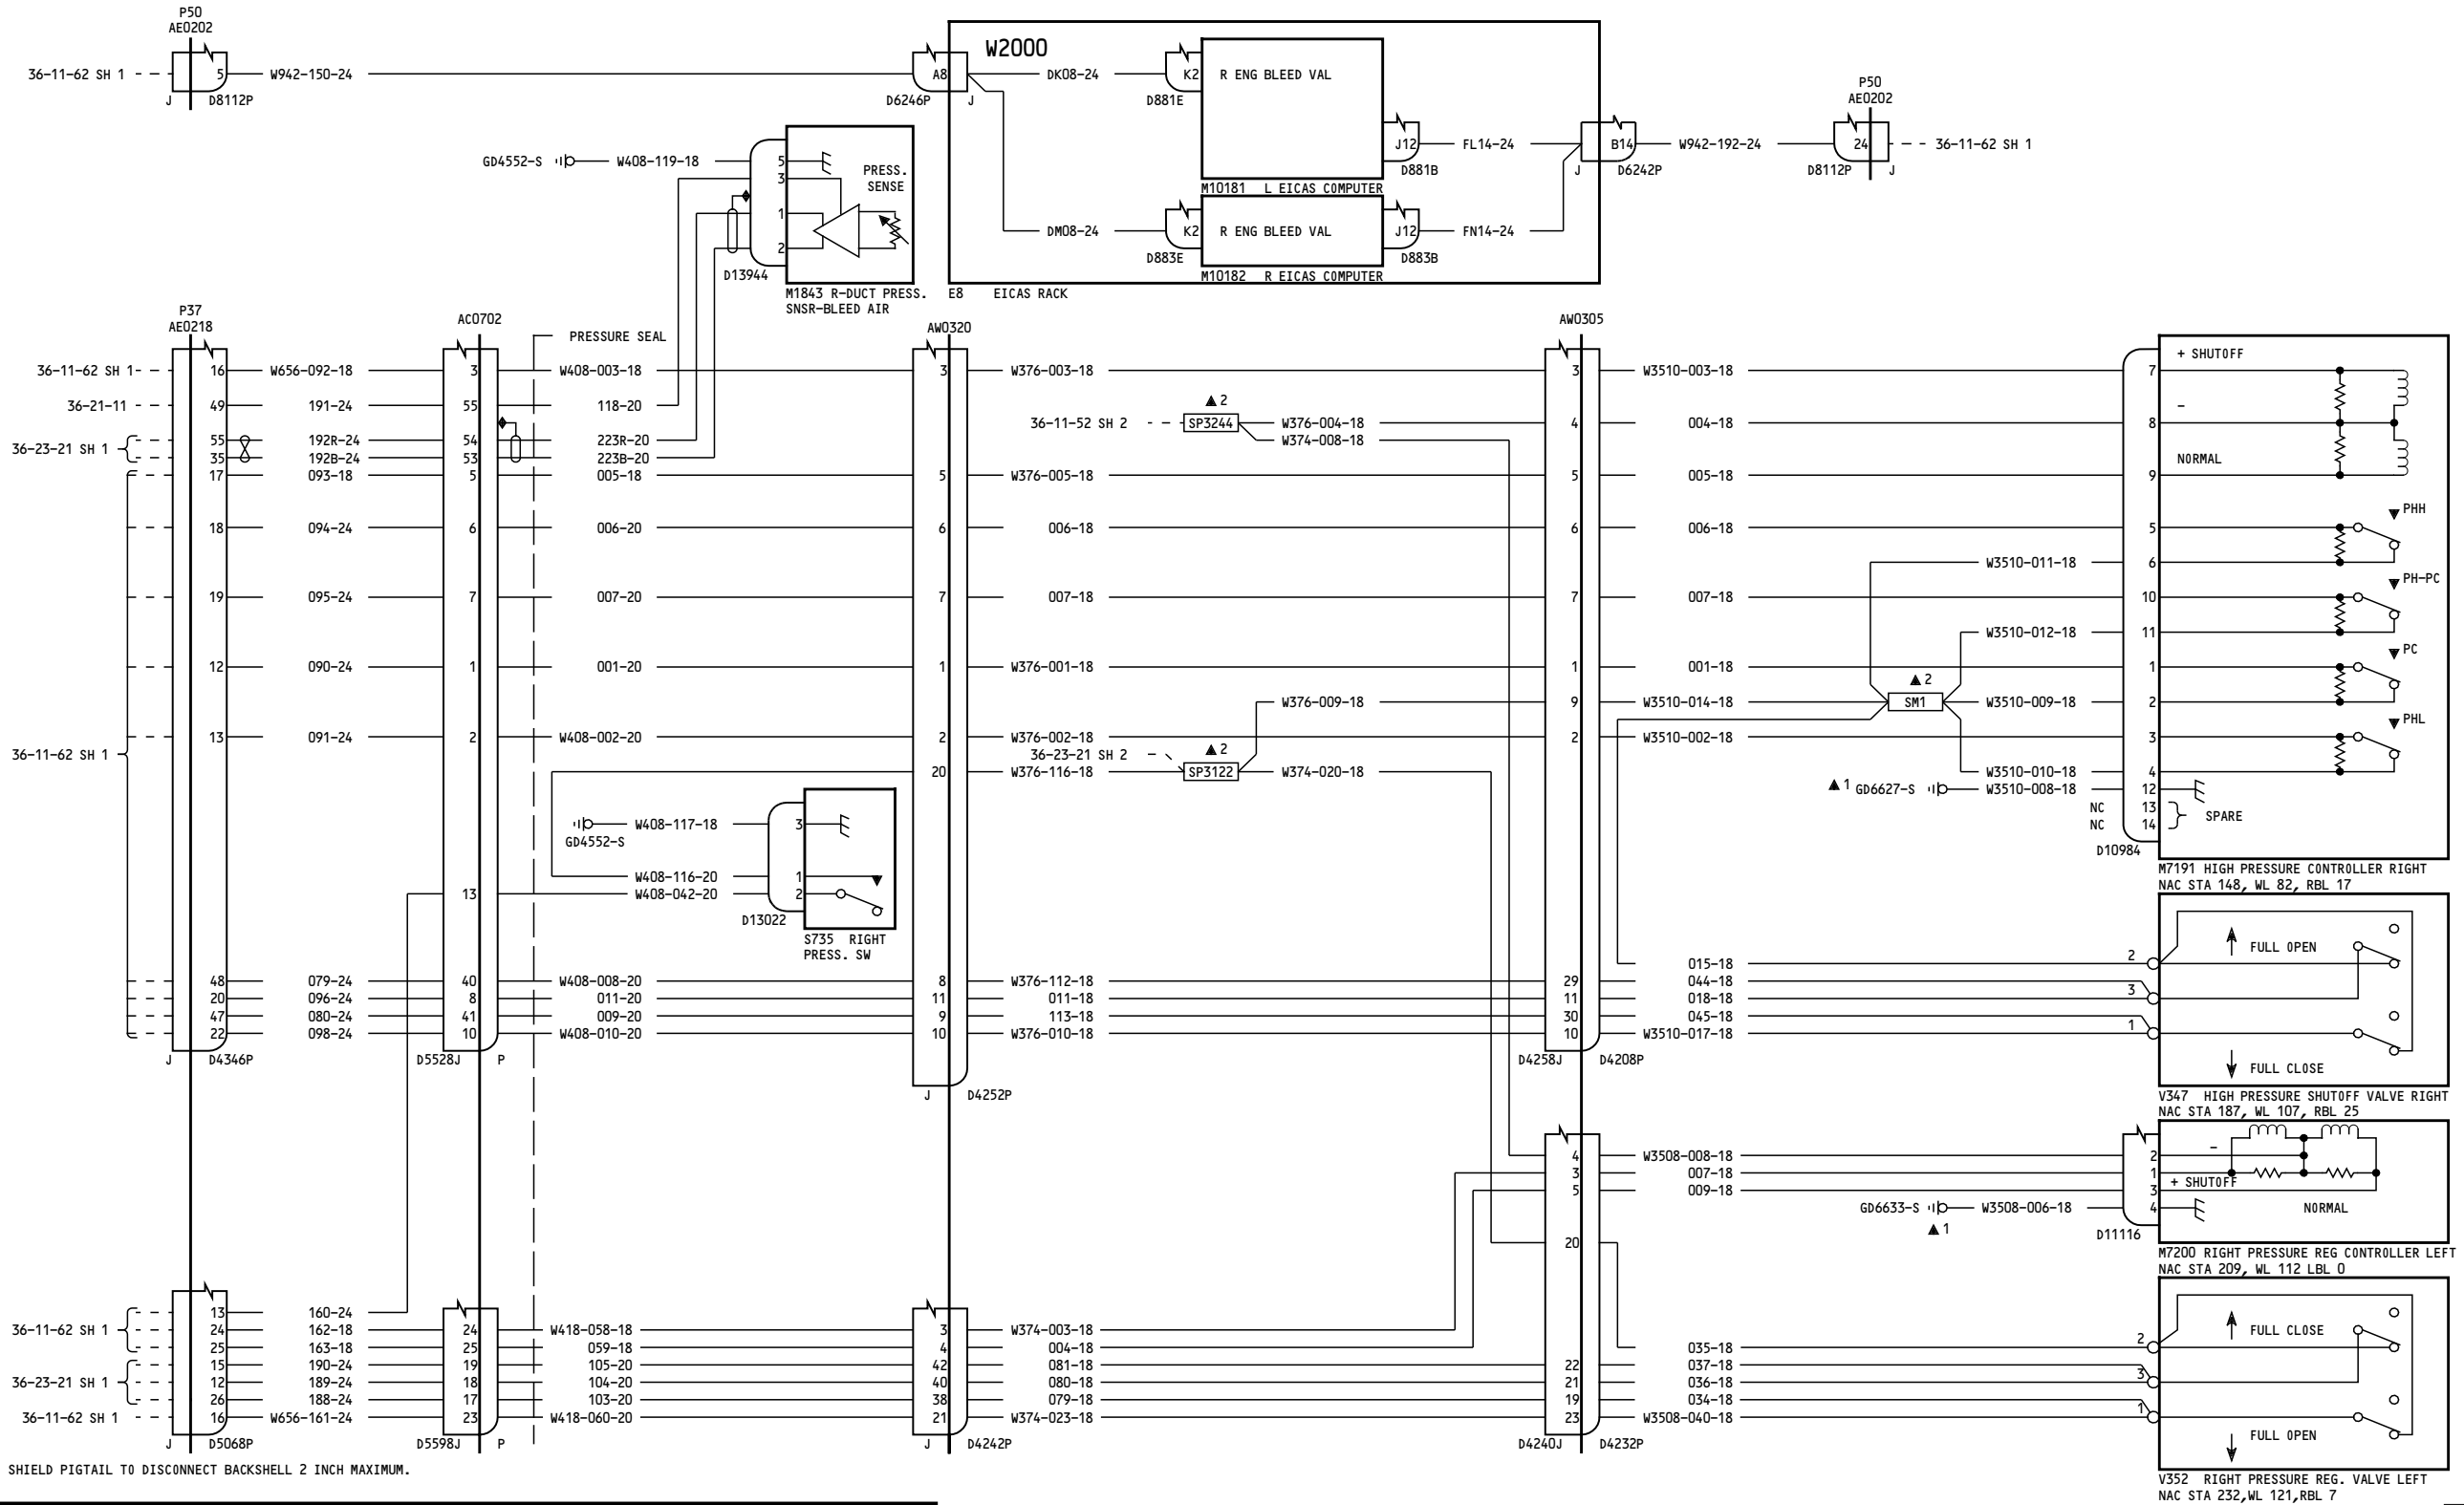

NOTES: SHIELD PIGTAIL TO DISCONNECT BACKSHELL 2 INCH MAXIMUM.

150-154

**AIR SUPPLY BLEED AIR -  
RIGHT ENGINE HIGH  
PRESSURE CONTROL**

D280T132


**36-11-62**

Page 2.1  
Sheet 2  
Jan 21/2005

Incorporates  
36-0029 R05

**36-11-62**

Page 2.1  
Sheet 2  
Jan 21/2005

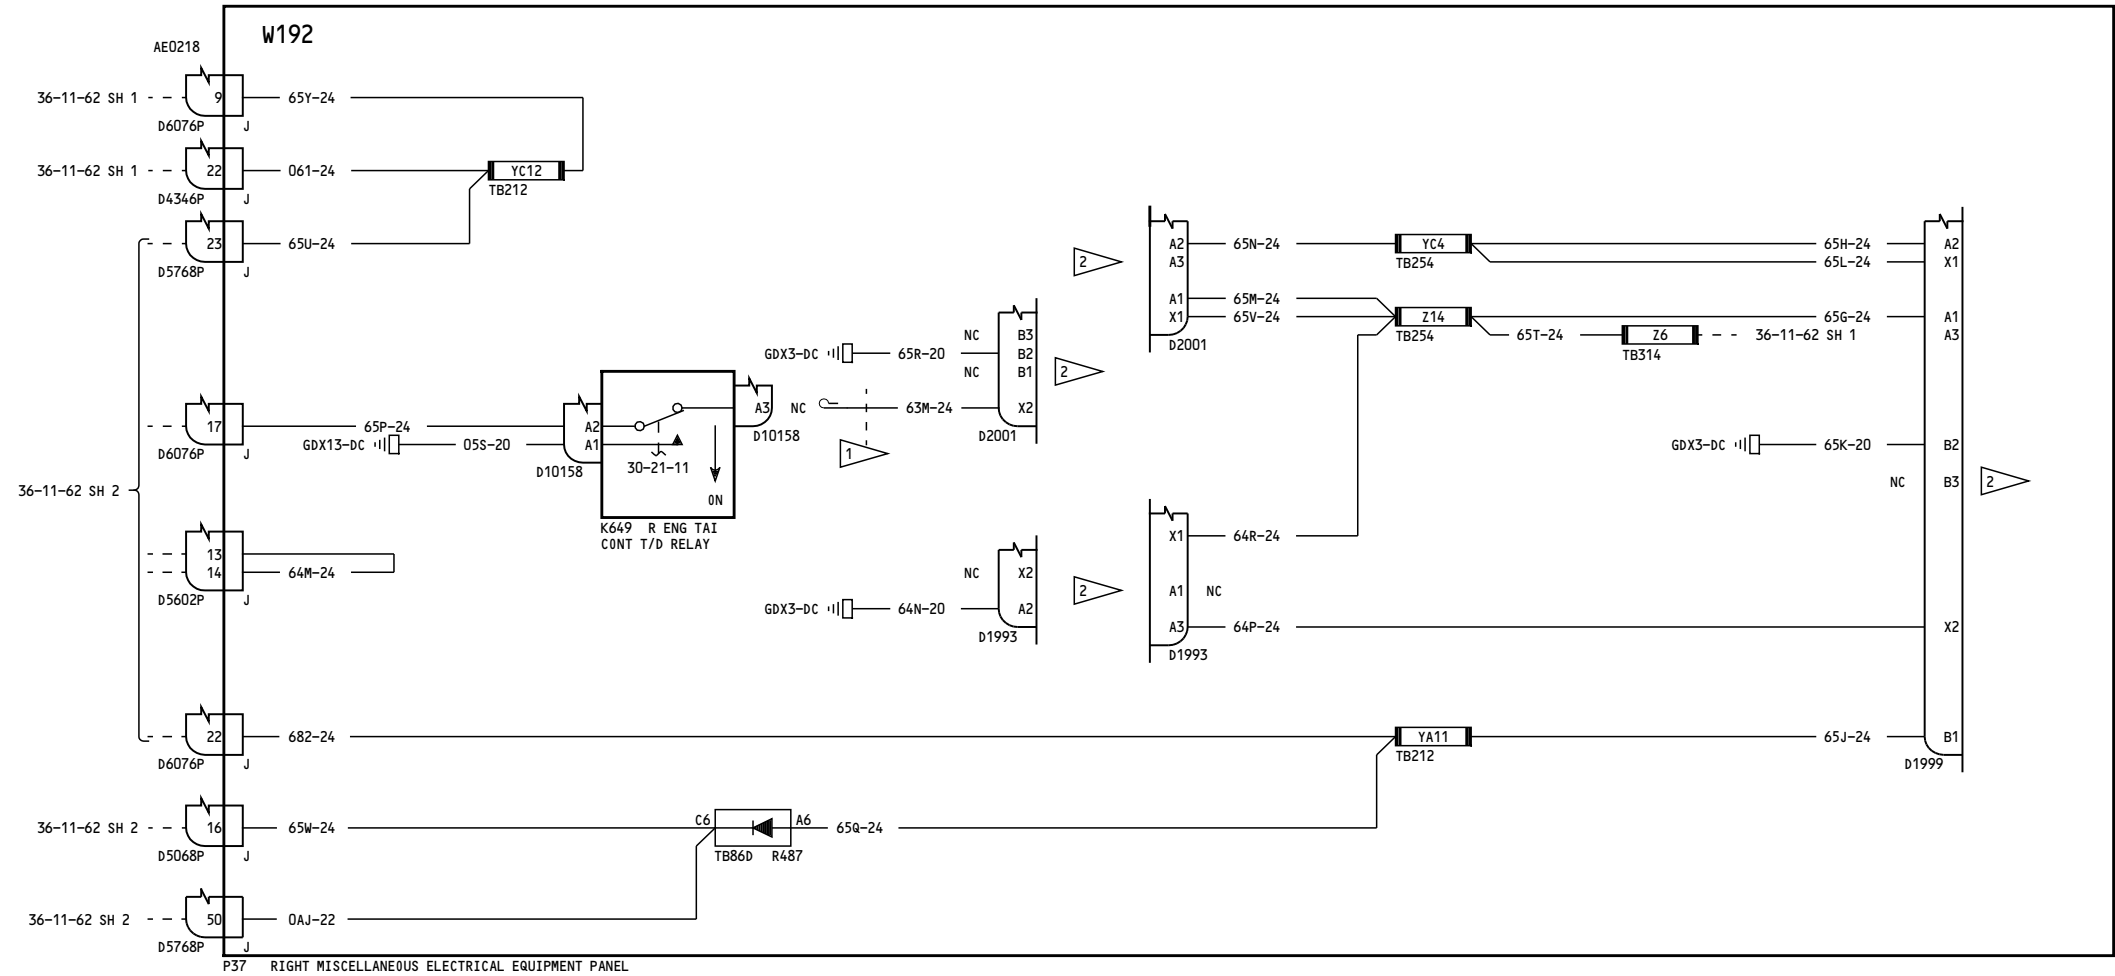

- NOTES:
- 1 CAP & STOW NEAR D10158
  - 2 CAP & STOW CONNECTOR WHEN MATING EQUIPMENT IS NOT INSTALLED.

150-154

**AIR SUPPLY BLEED AIR-  
RIGHT ENGINE HIGH  
PRESSURE CONTROL**

D280T132

**36-11-62**


Page 2.1  
Sheet 3  
Jan 21/2005

- Incorporates
- 36-0026 R02
  - 36-0029 R05

**36-11-62**

Page 2.1  
Sheet 3  
Jan 21/2005

-A  
90

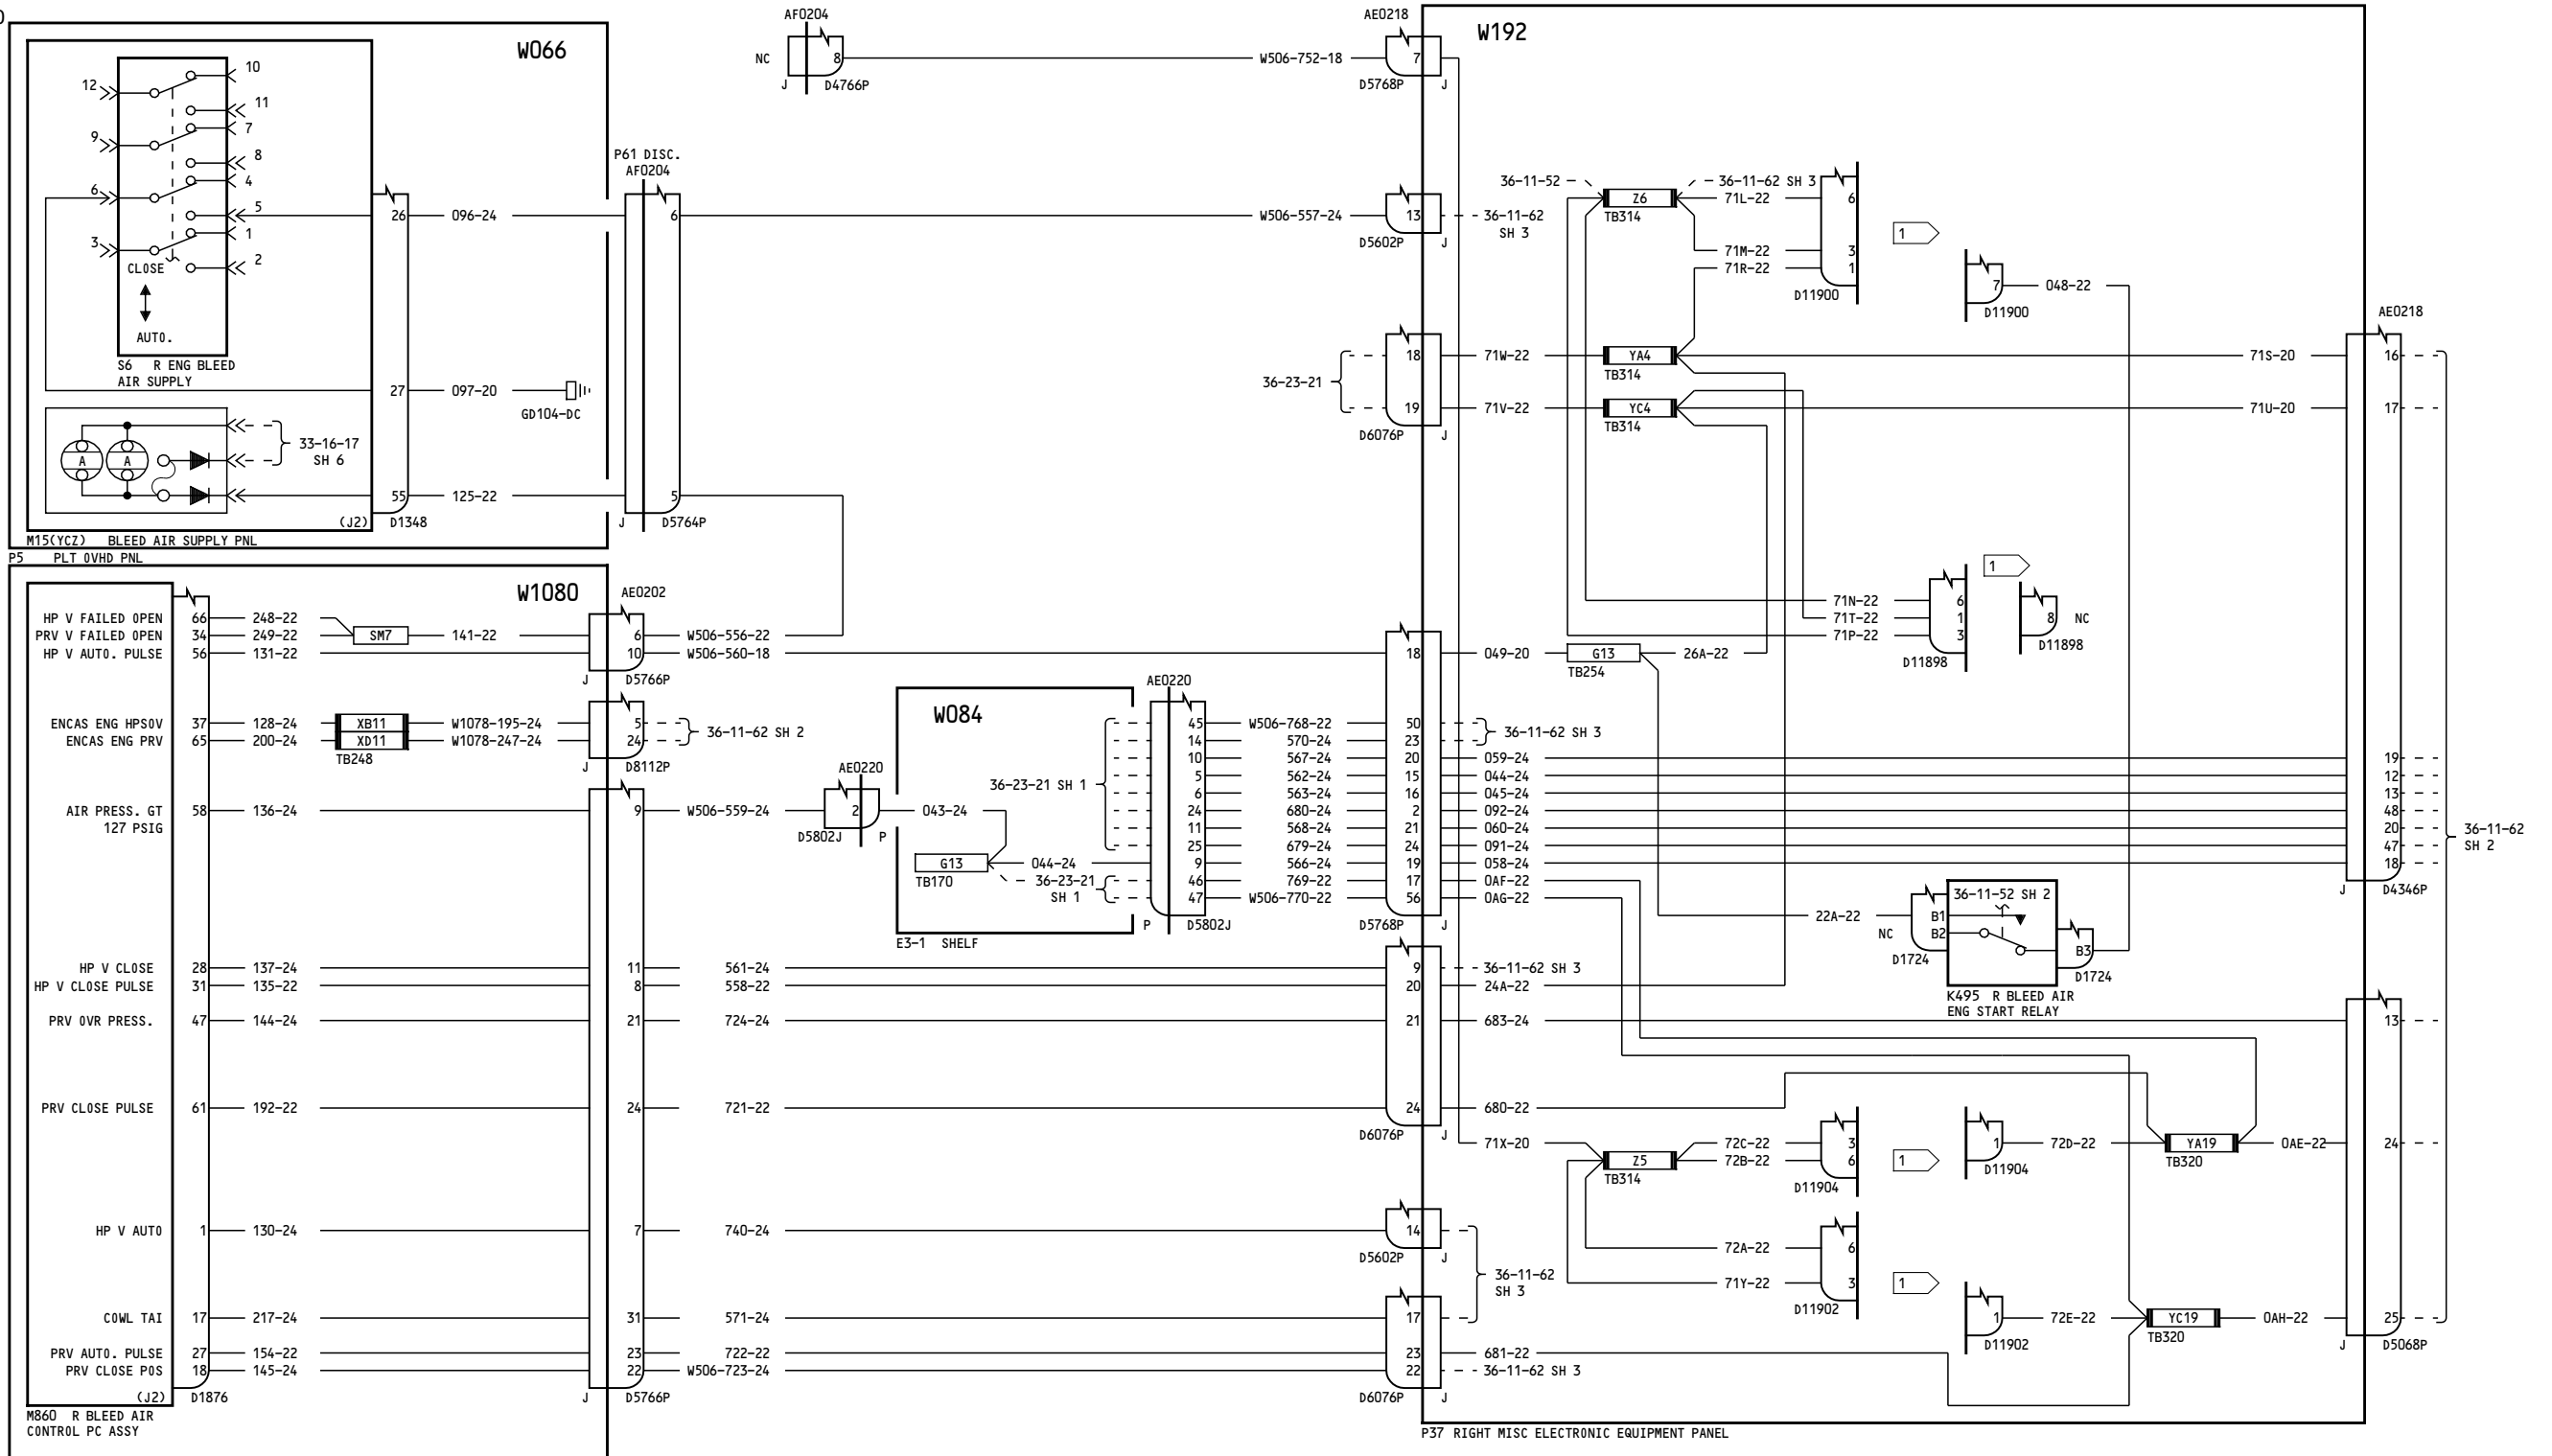

NOTES:  
 1 CAP AND STOW CONNECTOR WHEN MATING EQUIPMENT IS NOT INSTALLED

156, 166

**AIR SUPPLY BLEED AIR-  
 RIGHT ENGINE HIGH  
 PRESSURE CONTROL**

D280T132


**36-11-62**

Page 3.1  
 Sheet 1  
 Aug 15/2007

Incorporates  
 36-0026 R02

**36-11-62**

Page 3.1  
 Sheet 1  
 Aug 15/2007

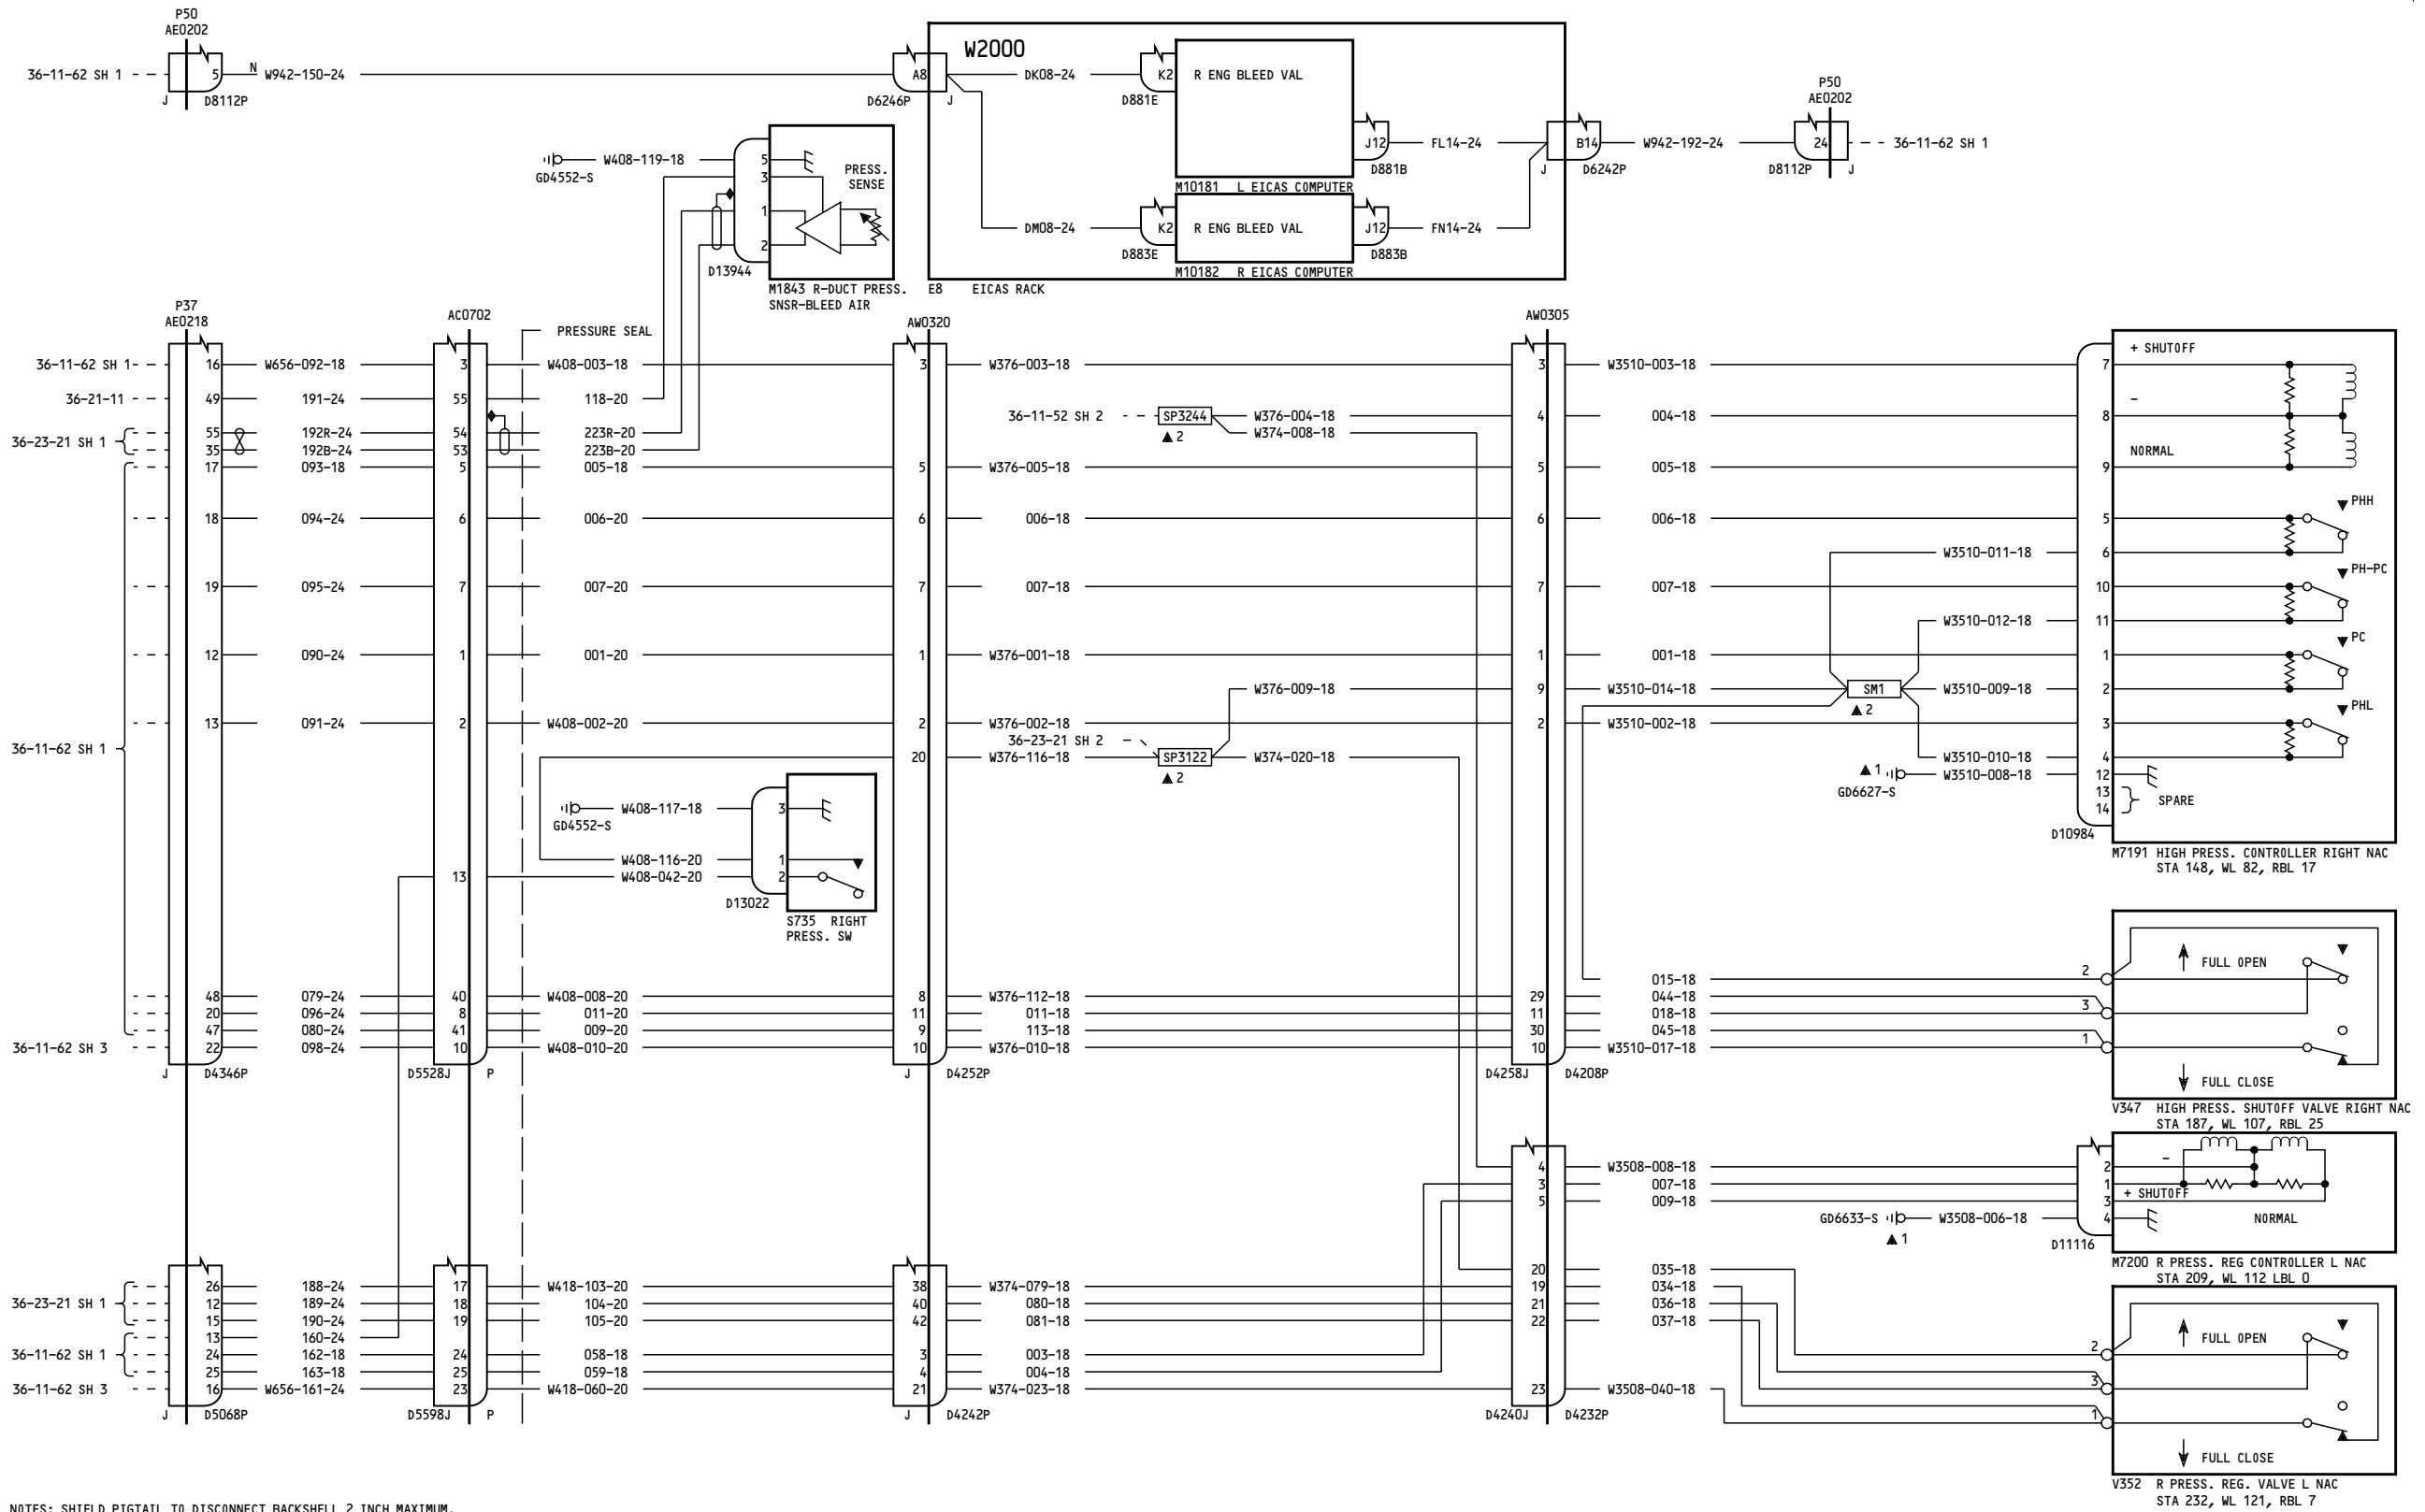

NOTES: SHIELD PIGTAIL TO DISCONNECT BACKSHELL 2 INCH MAXIMUM.

156, 166

**AIR SUPPLY BLEED AIR -  
RIGHT ENGINE HIGH  
PRESSURE CONTROL**


D280T132

**36-11-62**

Page 3.1  
Sheet 2  
Jan 21/2005

**36-11-62**

Page 3.1  
Sheet 2  
Jan 21/2005

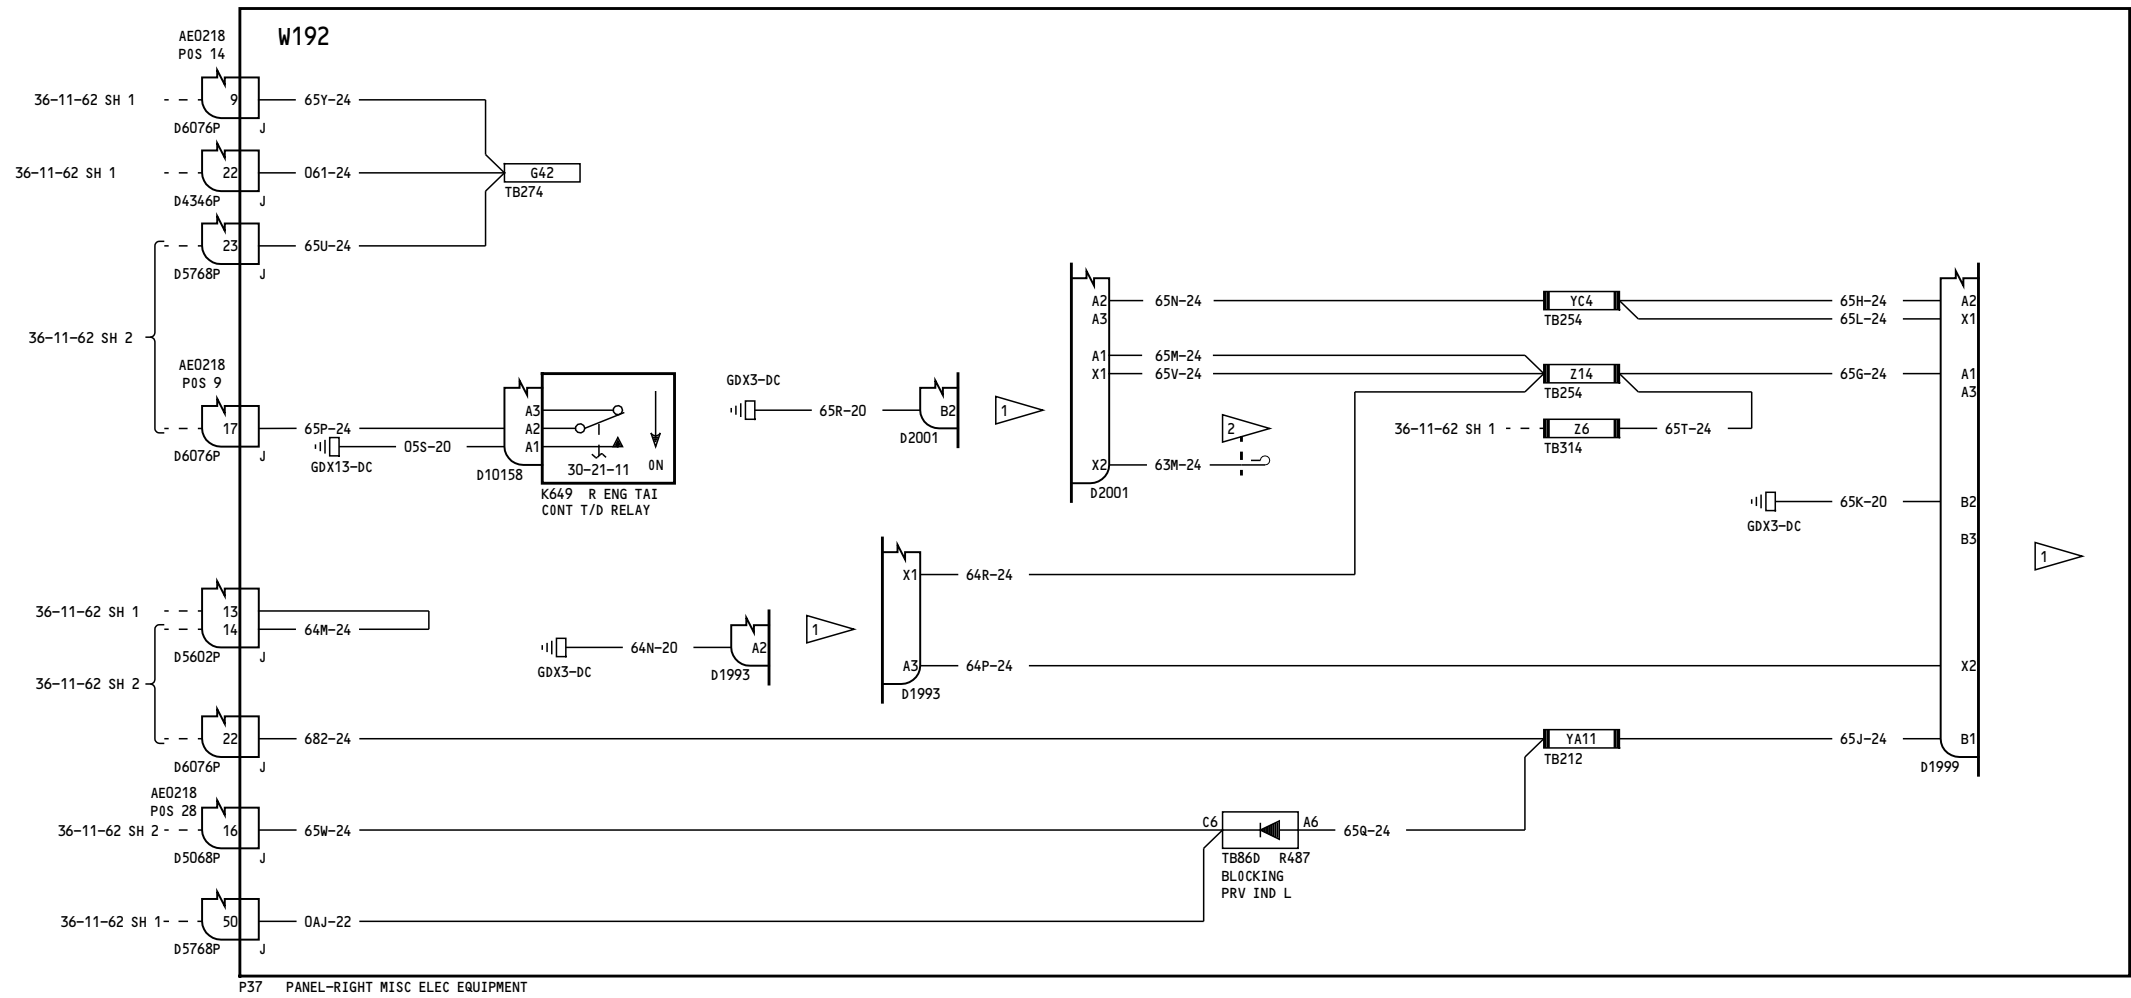

NOTES:  
 1 CAP & STOW CONNECTOR WHEN MATING EQUIPMENT IS NOT INSTALLED  
 2 CAP & STOW NEAR D10158

156, 166

**AIR SUPPLY BLEED AIR-  
 RIGHT ENGINE HIGH  
 PRESSURE CONTROL**

D280T132


**36-11-62**

Page 3.1  
 Sheet 3  
 Jan 21/2005

Incorporates  
 36-0026 R02

**36-11-62**

Page 3.1  
 Sheet 3  
 Jan 21/2005

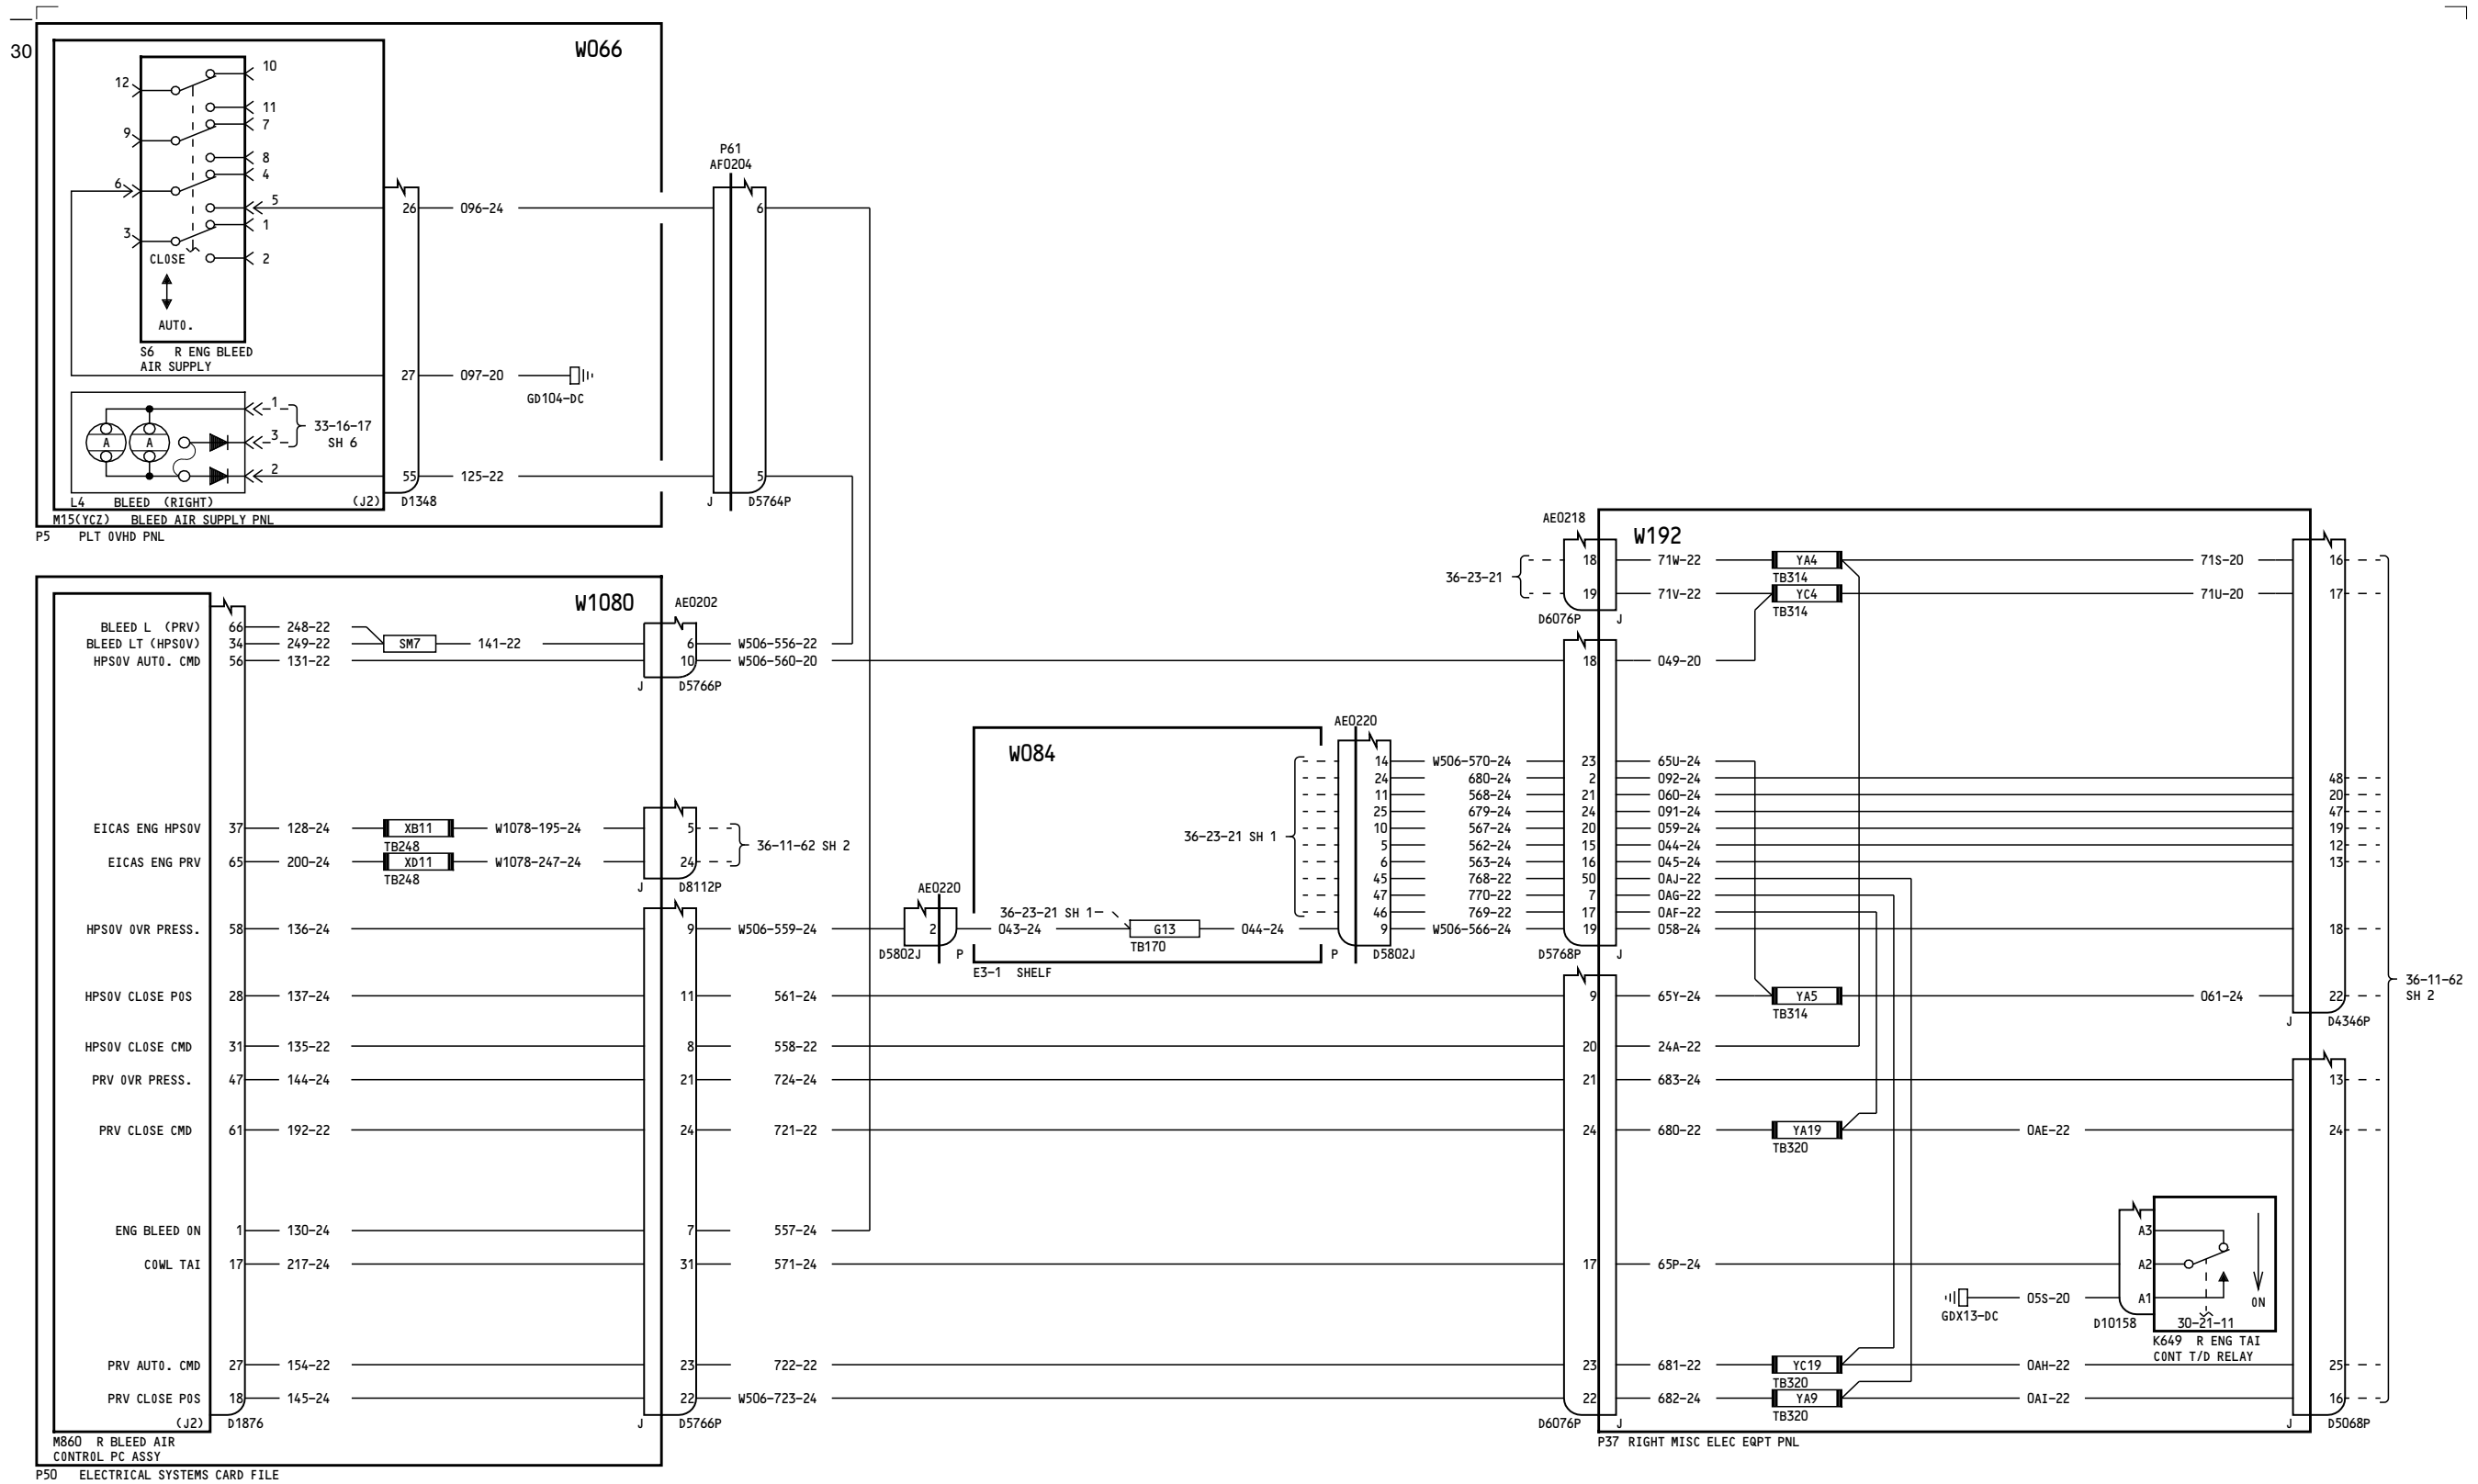

157, 167-199, 277-299

**AIR SUPPLY BLEED AIR-  
RIGHT ENGINE HIGH  
PRESSURE CONTROL**

**36-11-62**


Page 4  
Sheet 1  
Jan 21/2005

D280T132

**36-11-62**

Page 4  
Sheet 1  
Jan 21/2005

-B  
30

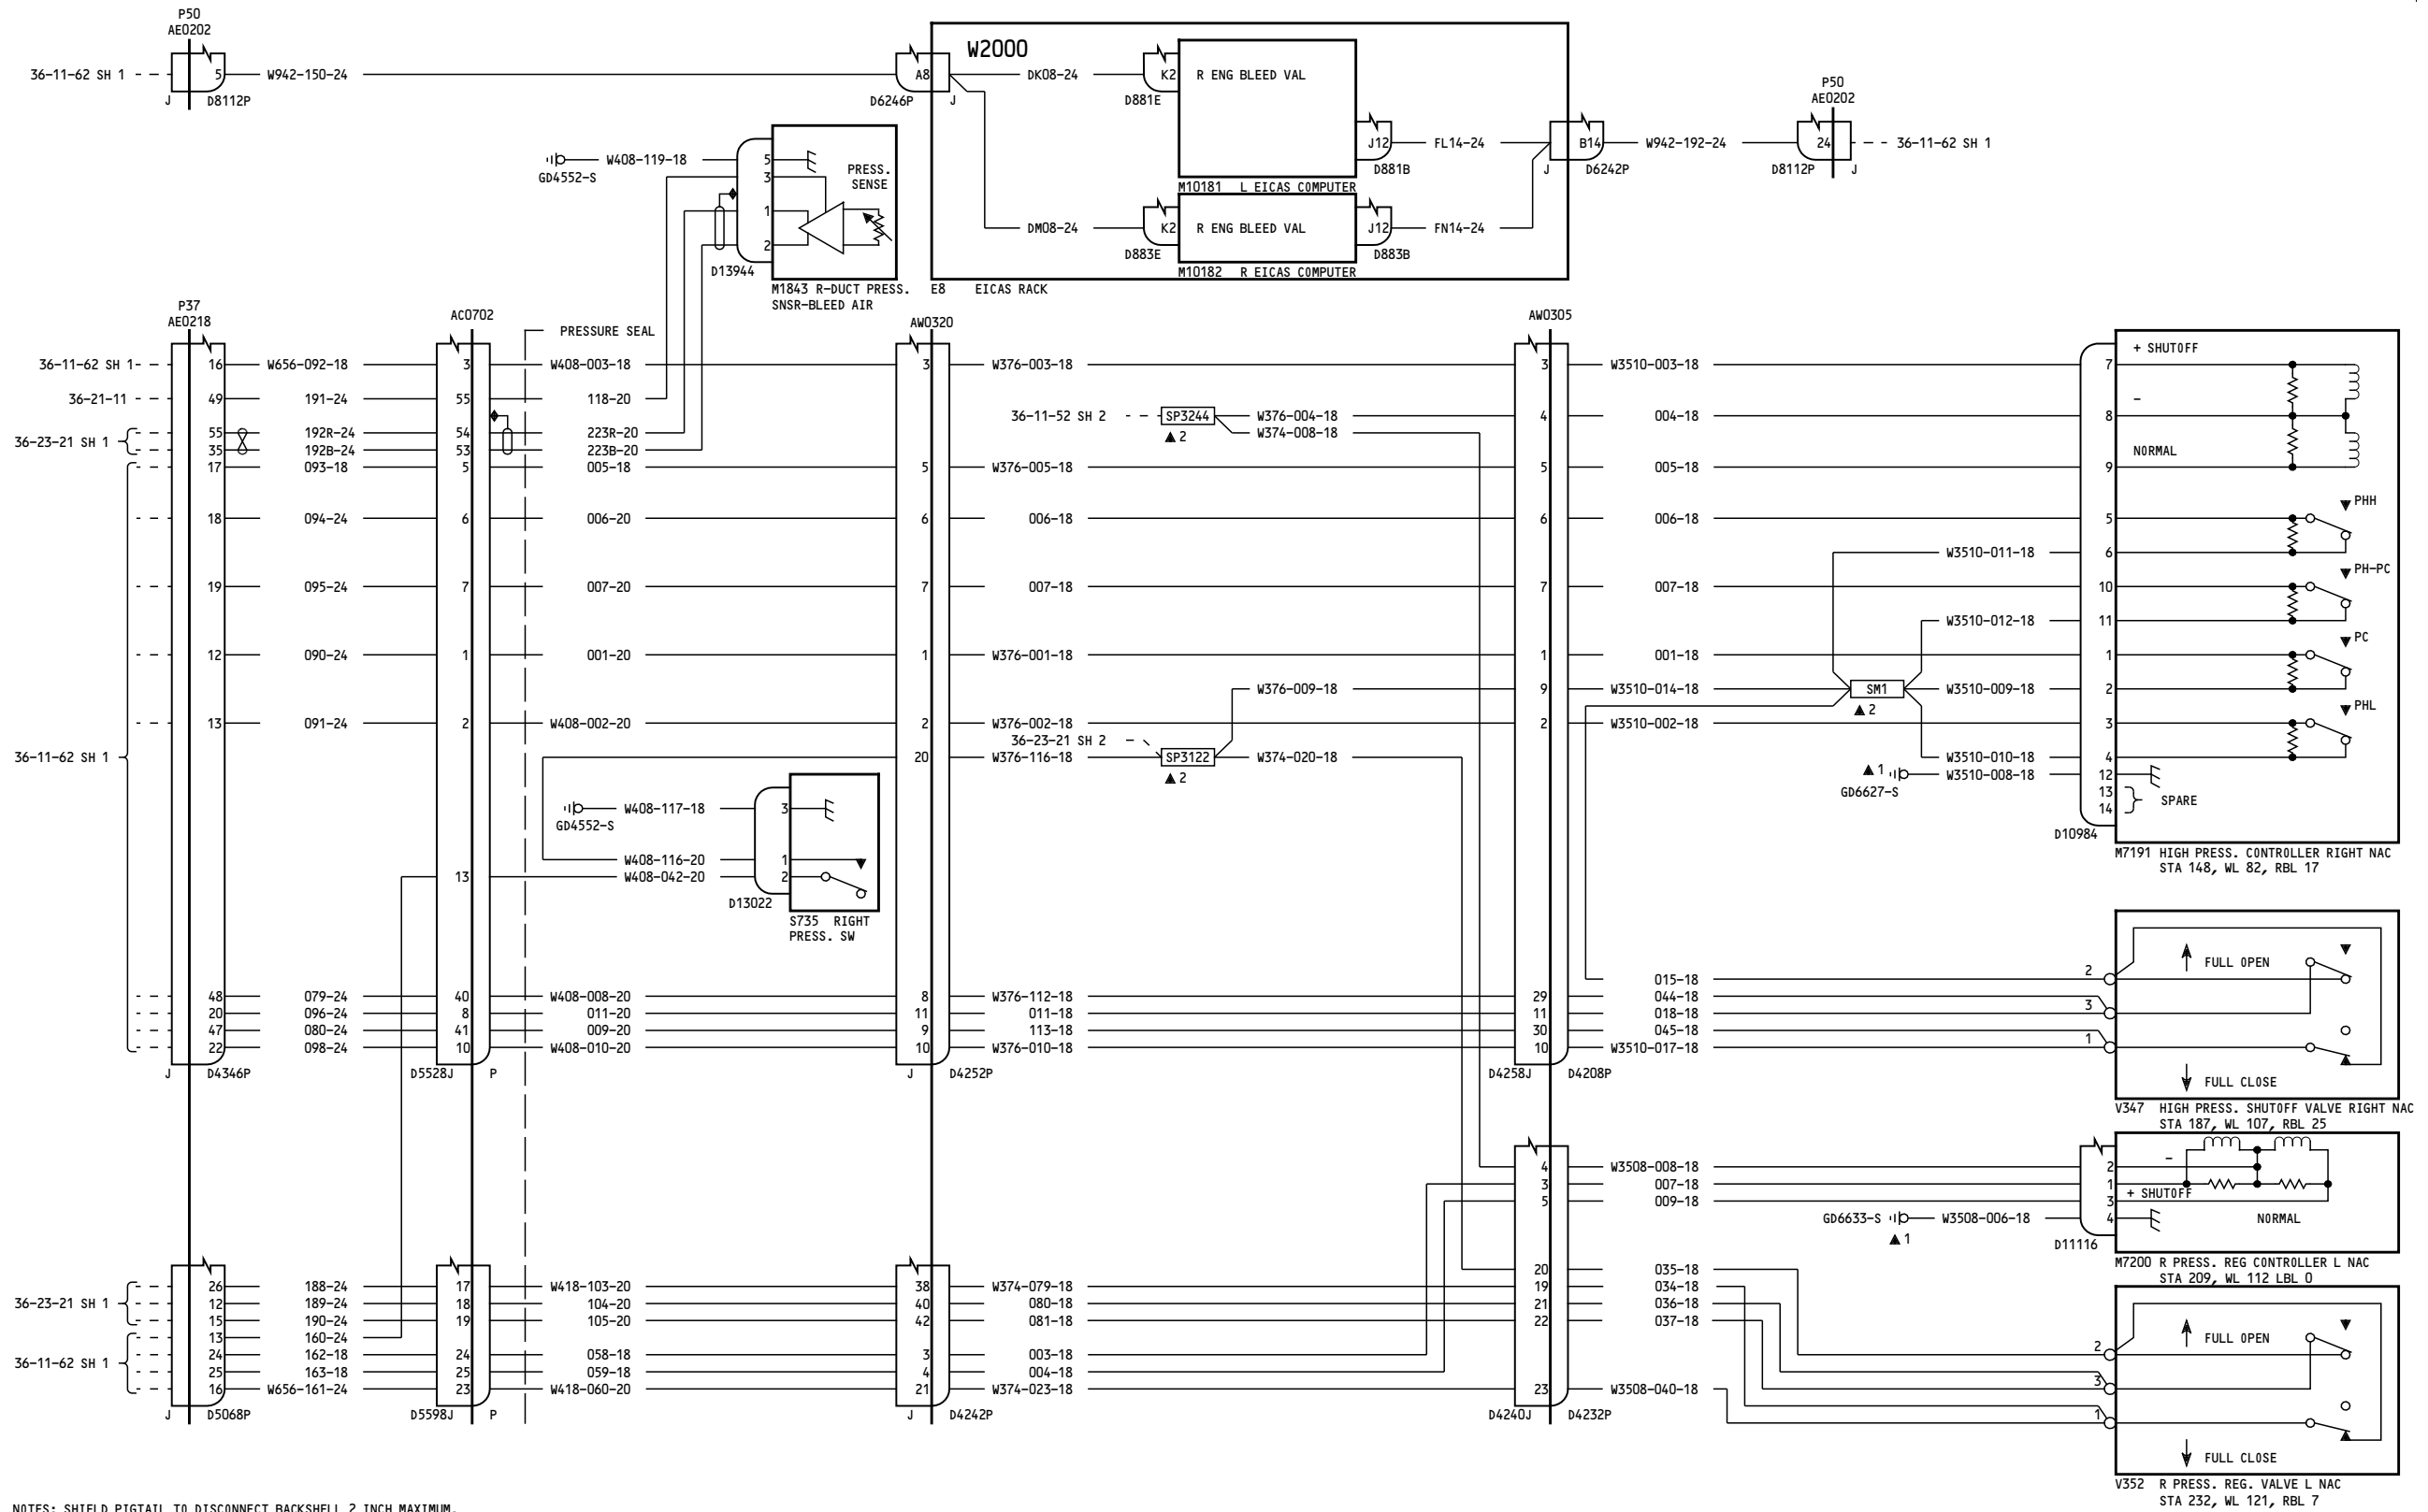

NOTES: SHIELD PIGTAIL TO DISCONNECT BACKSHELL 2 INCH MAXIMUM.

157, 167-199, 277-299

**AIR SUPPLY BLEED AIR -  
RIGHT ENGINE HIGH  
PRESSURE CONTROL**

D280T132

**36-11-62**

Page 4  
Sheet 2  
Jan 21/2005


**36-11-62**

Page 4  
Sheet 2  
Jan 21/2005



-A

91

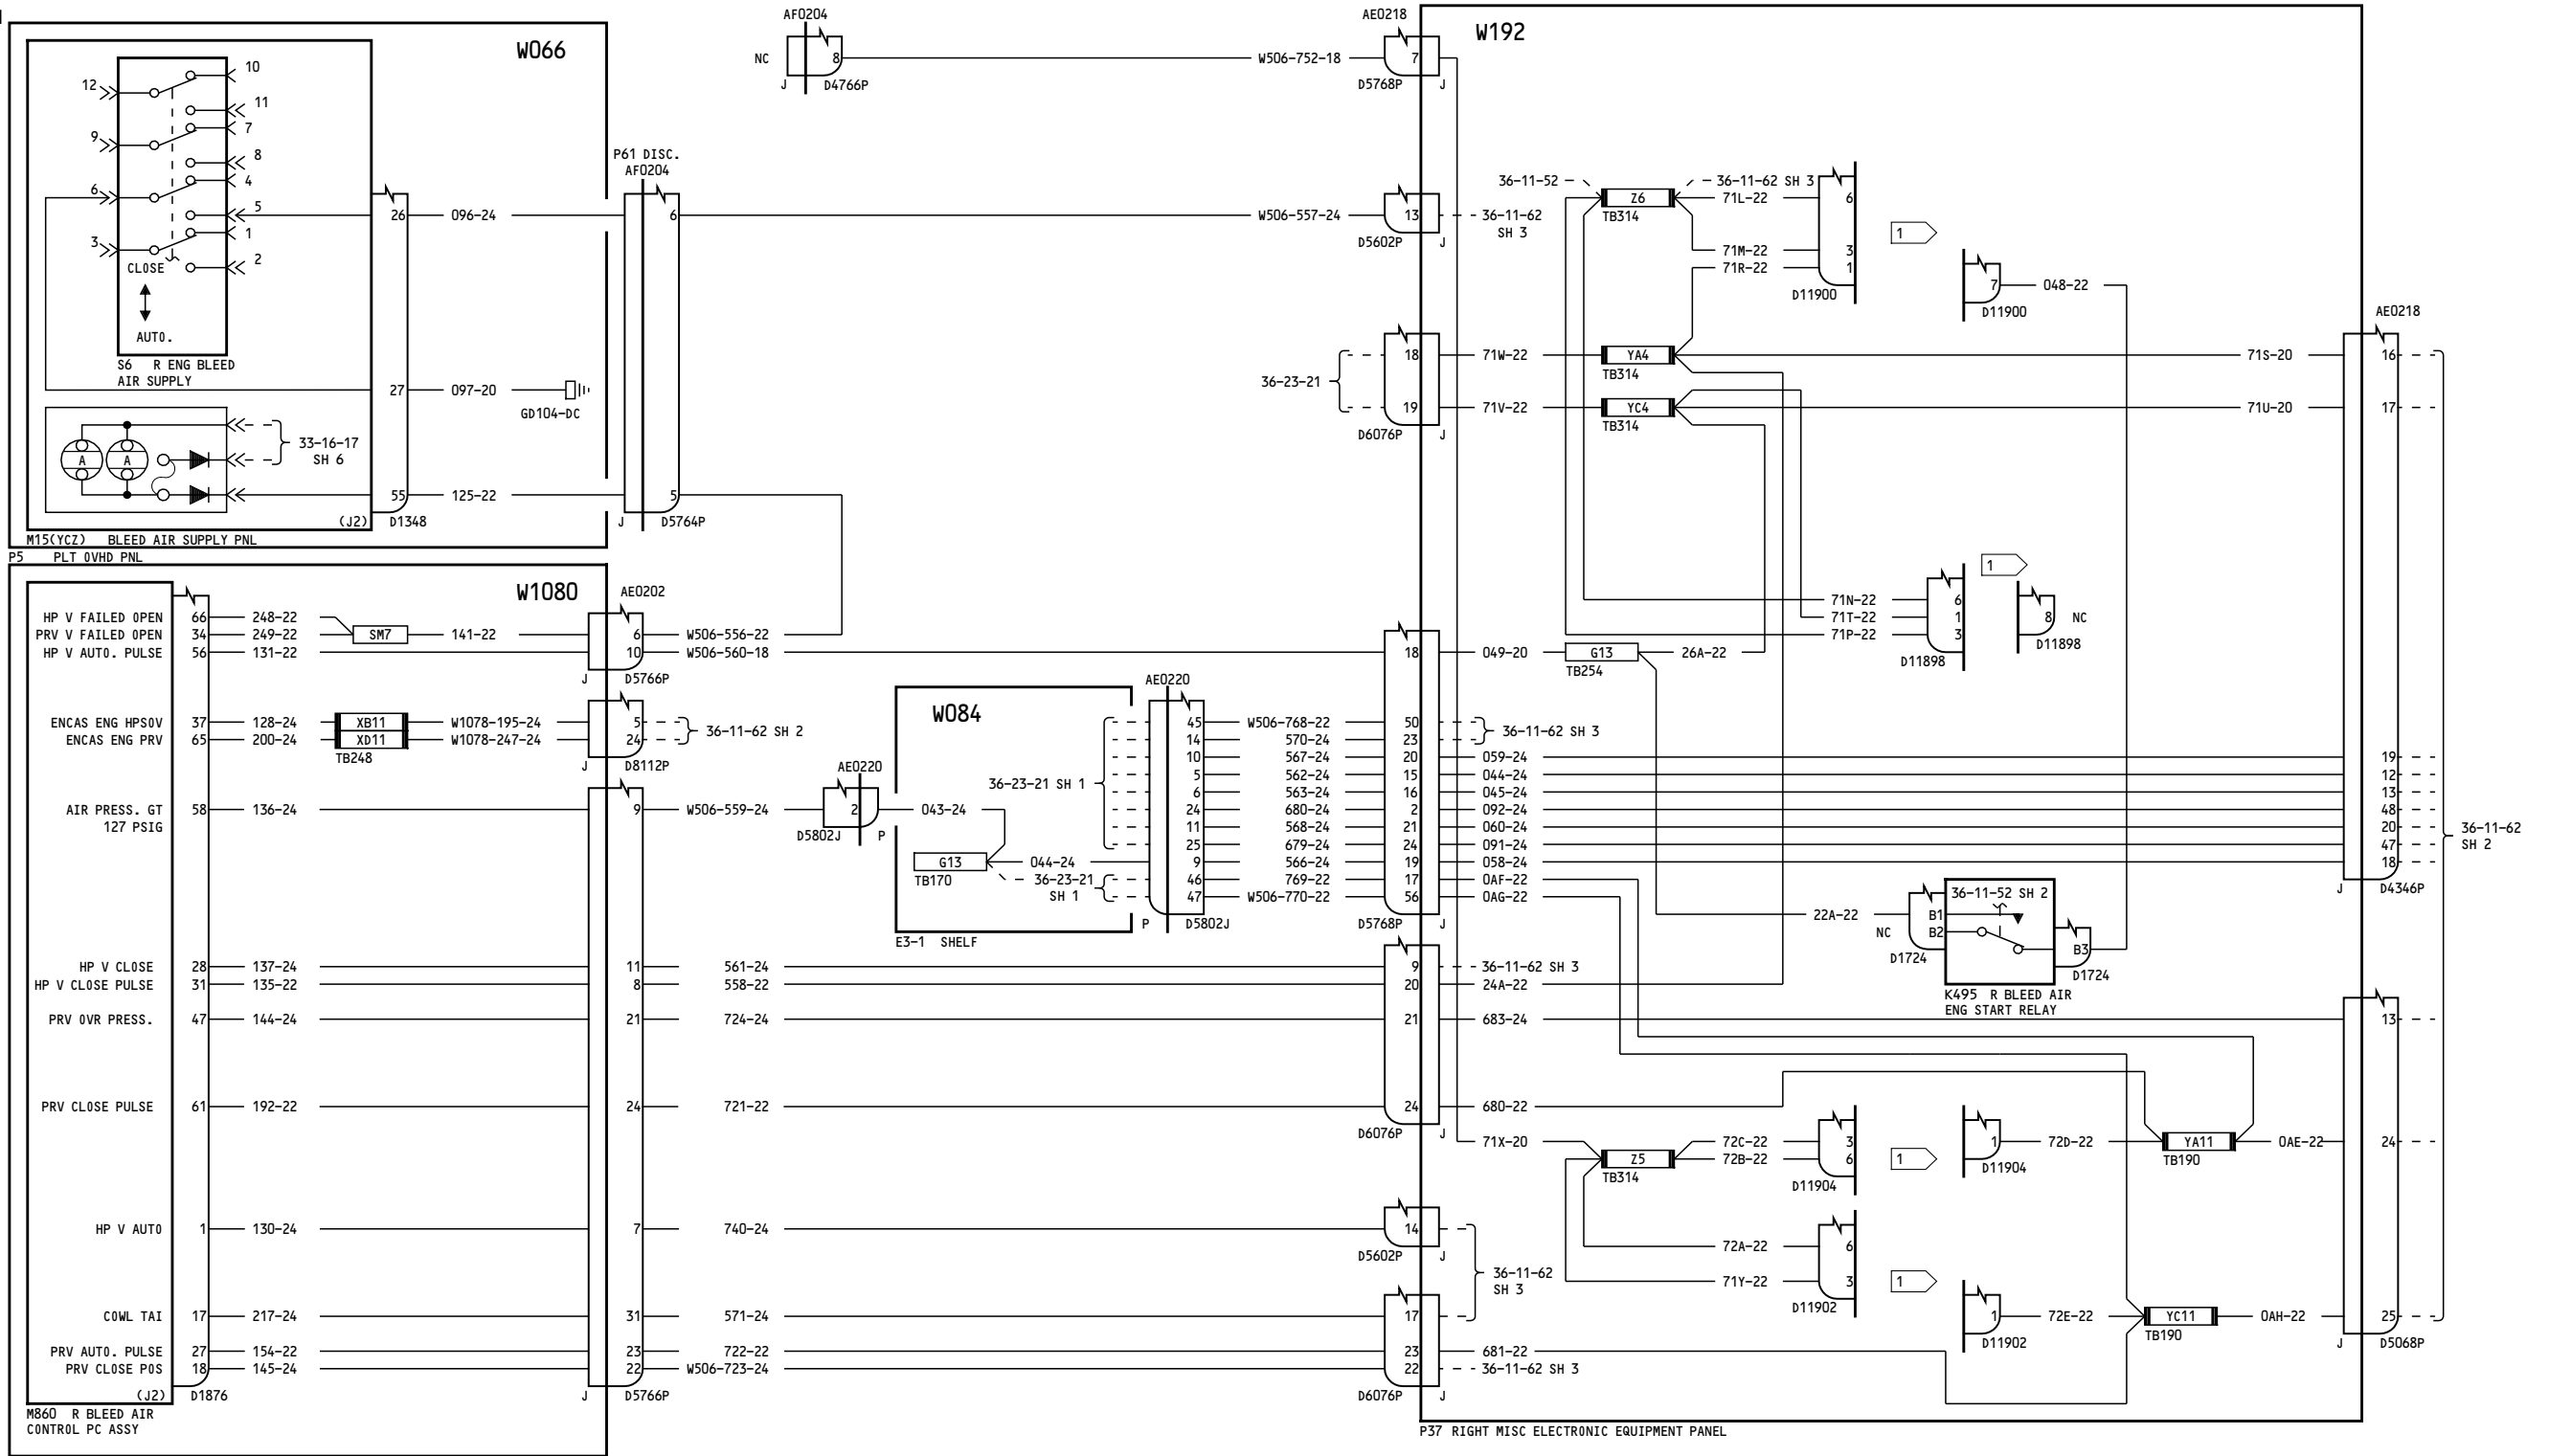

P50 ELECTRICAL SYSTEMS CARD FILE

NOTES: 1 CAP AND STOW CONNECTOR WHEN MATING EQUIPMENT IS NOT INSTALLED

162

AIR SUPPLY BLEED AIR-RIGHT ENGINE HIGH PRESSURE CONTROL

36-11-62

Page 5.1  
Sheet 1  
Aug 15/2007


D280T132

Incorporates  
36-0026 R02

36-11-62

Page 5.1  
Sheet 1  
Aug 15/2007

-C  
39

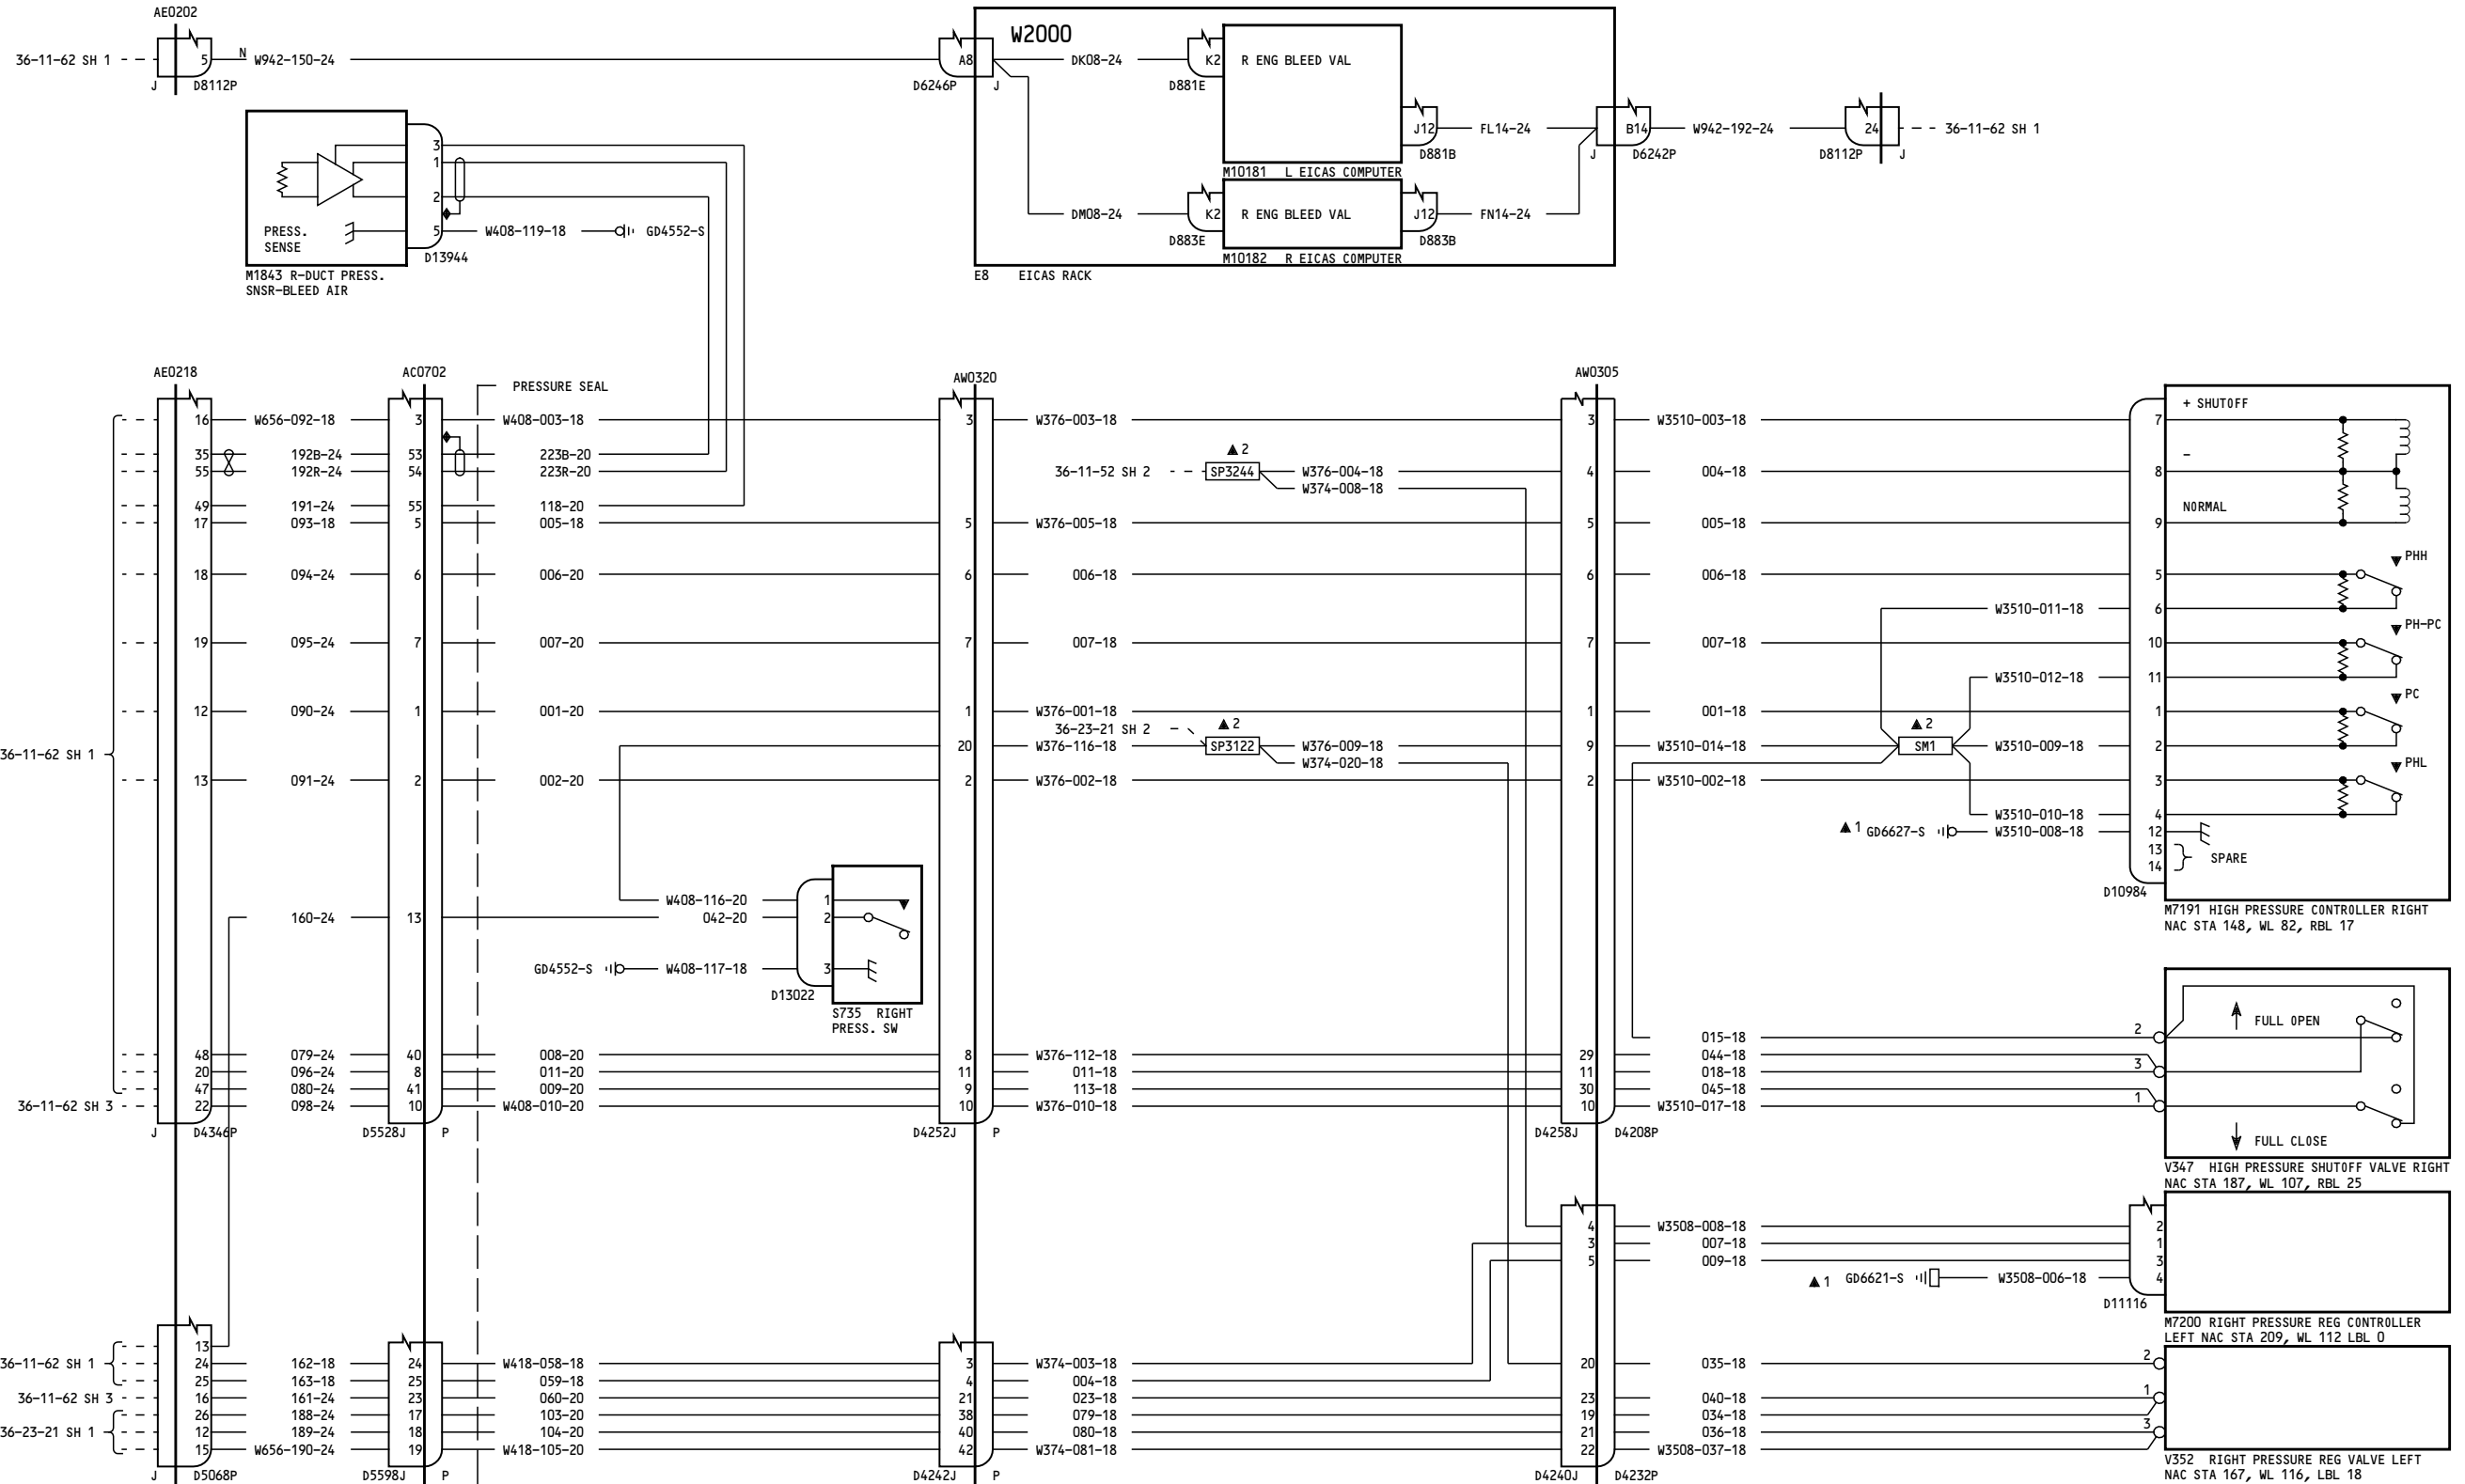

NOTES:  
SHIELD PIGTAIL TO DISCONNECT BACKSHELL 2 INCH MAXIMUM

162

**AIR SUPPLY BLEED AIR -  
RIGHT ENGINE HIGH  
PRESSURE CONTROL**


D280T132

**36-11-62**

Page 5.1  
Sheet 2  
Jan 21/2005

**36-11-62**

Page 5.1  
Sheet 2  
Jan 21/2005

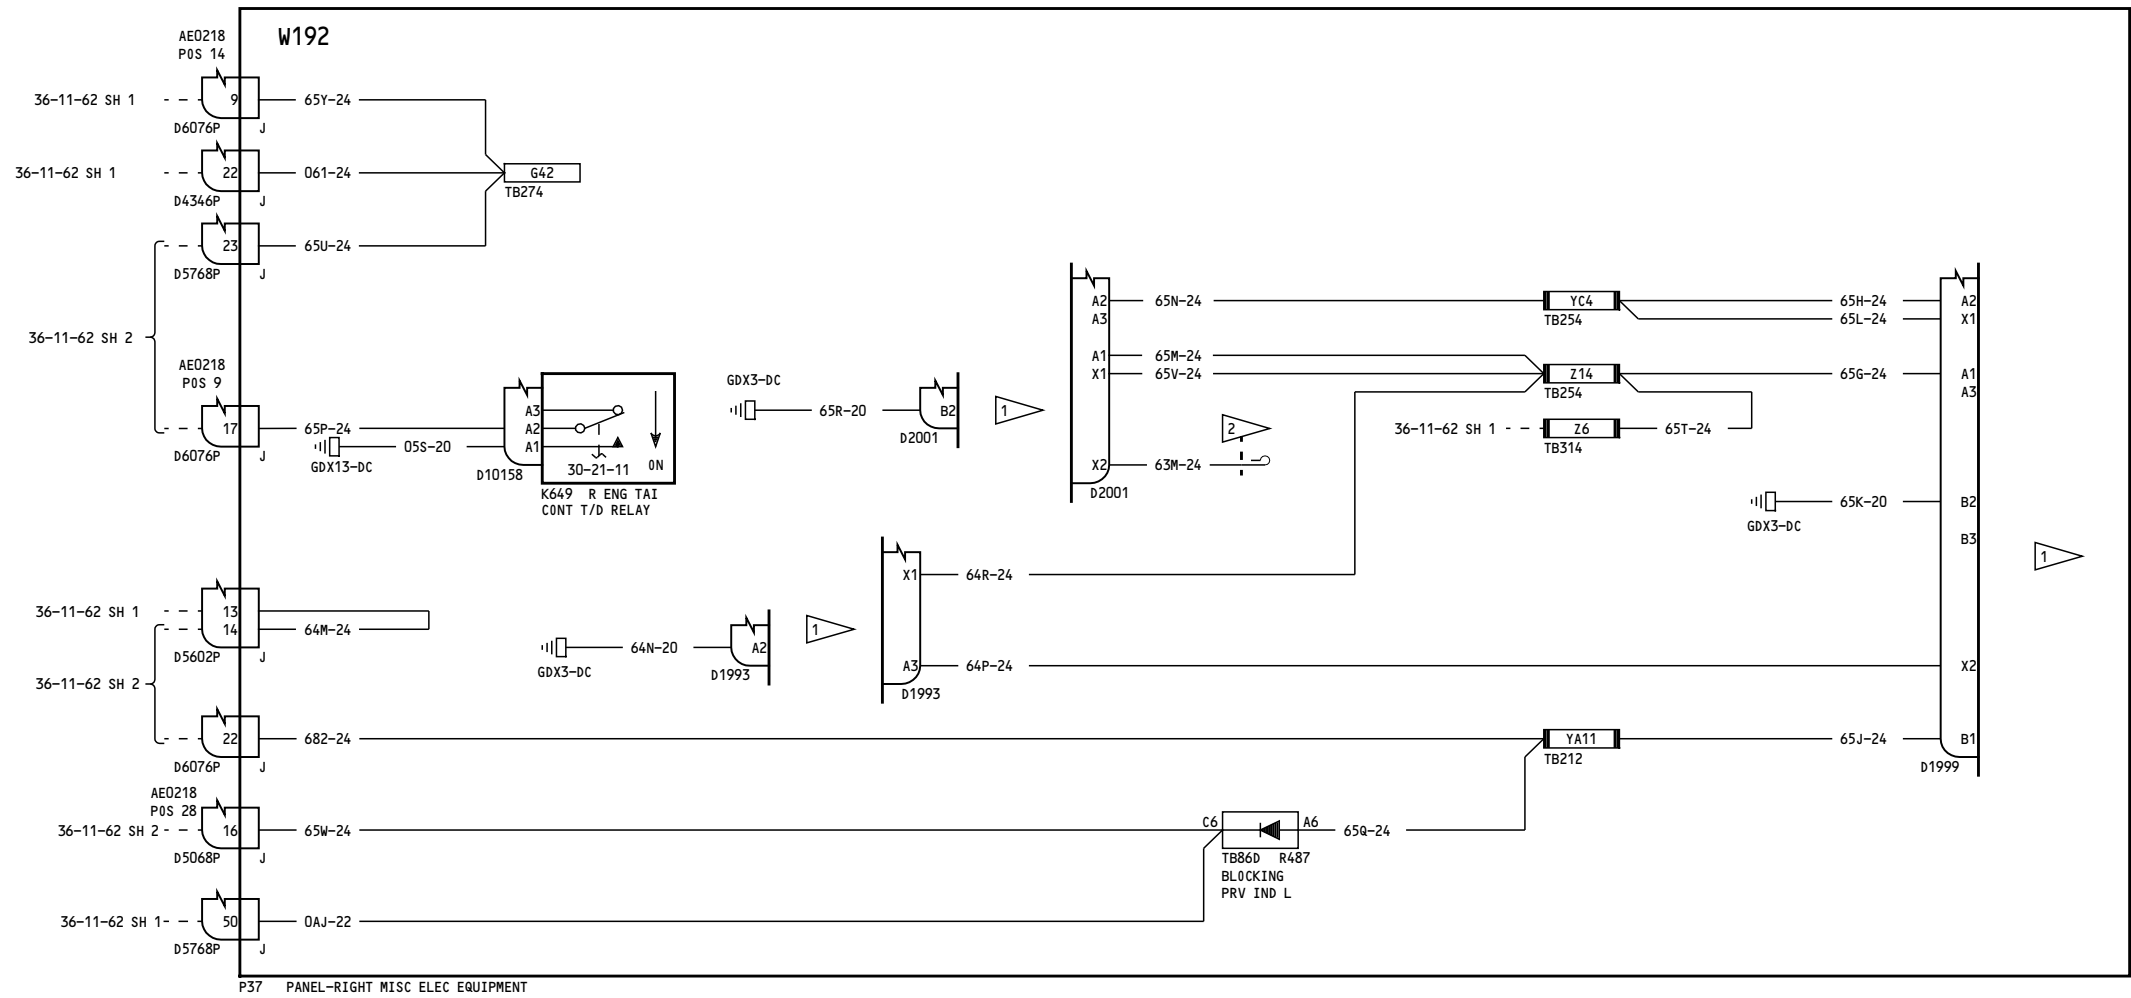

NOTES:  
 1 CAP & STOW CONNECTOR WHEN MATING EQUIPMENT IS NOT INSTALLED  
 2 CAP & STOW NEAR D10158

162

**AIR SUPPLY BLEED AIR-  
 RIGHT ENGINE HIGH  
 PRESSURE CONTROL**

D280T132


**36-11-62**

Page 5.1  
 Sheet 3  
 Jan 21/2005

Incorporates  
 36-0026 R02

**36-11-62**

Page 5.1  
 Sheet 3  
 Jan 21/2005

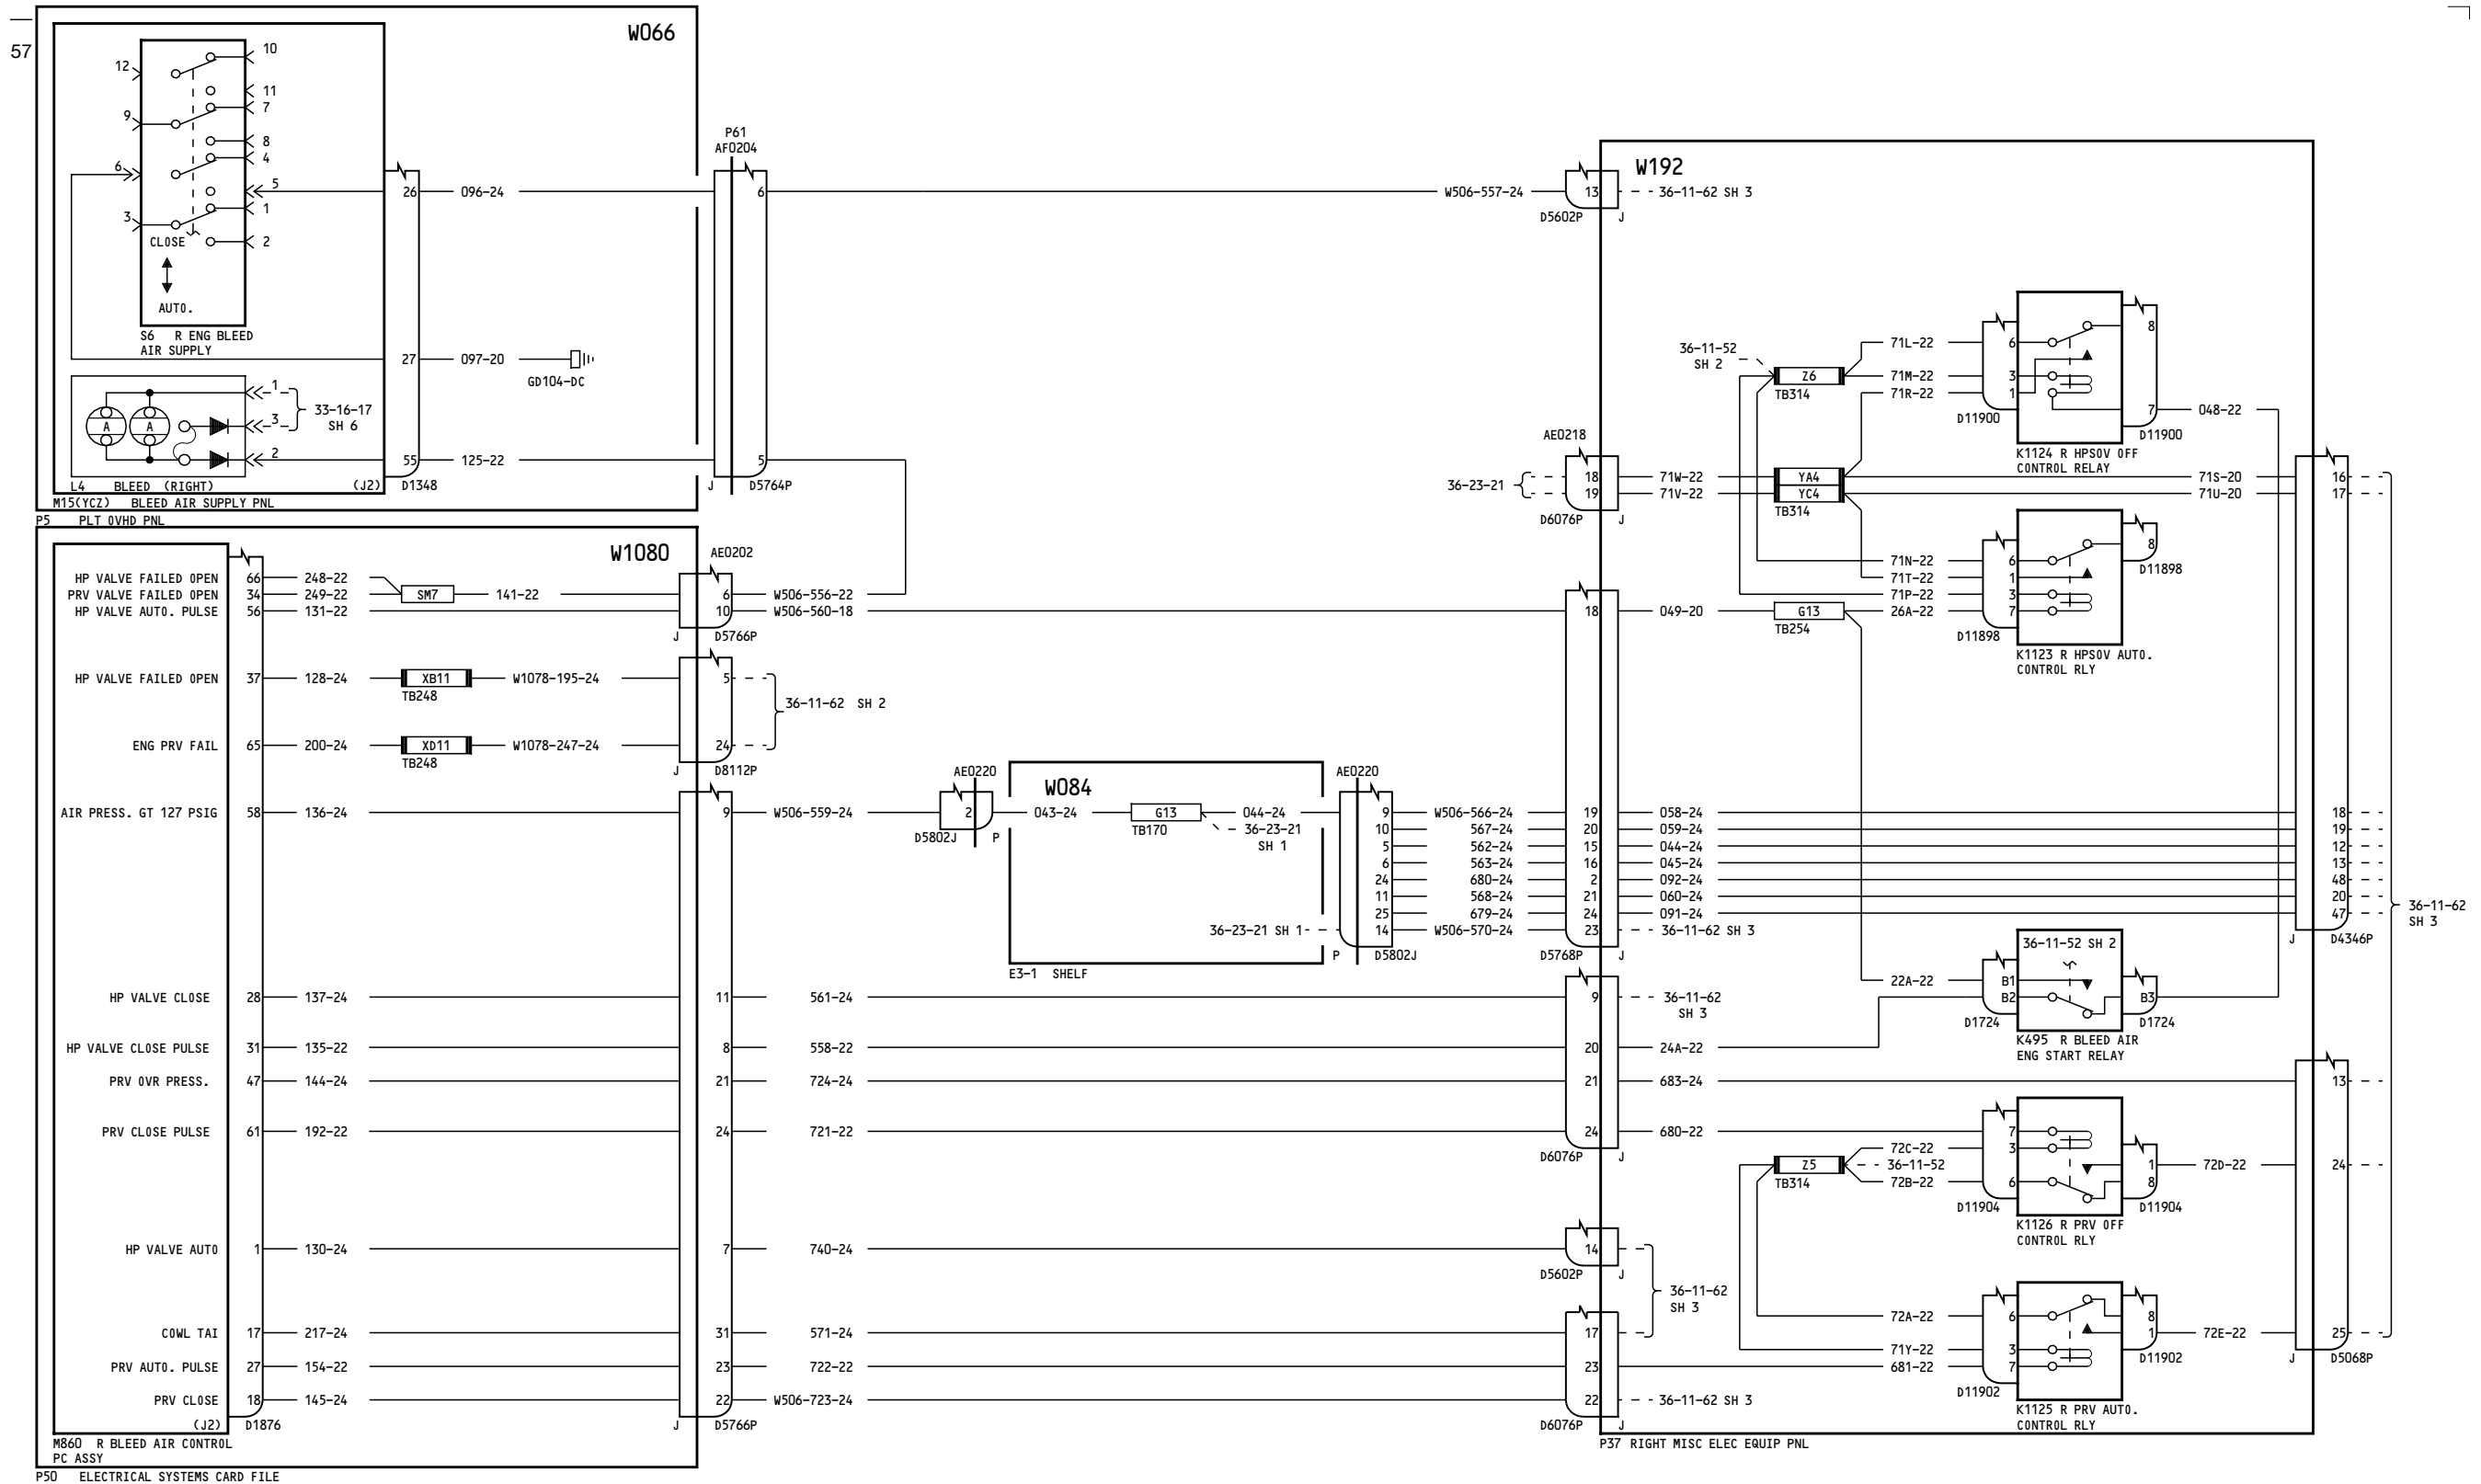

275

**AIR SUPPLY BLEED AIR-  
 RIGHT ENGINE HIGH  
 PRESSURE CONTROL**

**36-11-62**


Incorporates  
 36-0027


**36-11-62**


D280T132

Page 6.1  
 Sheet 1  
 Jan 21/2005

Page 6.1  
 Sheet 1  
 Jan 21/2005

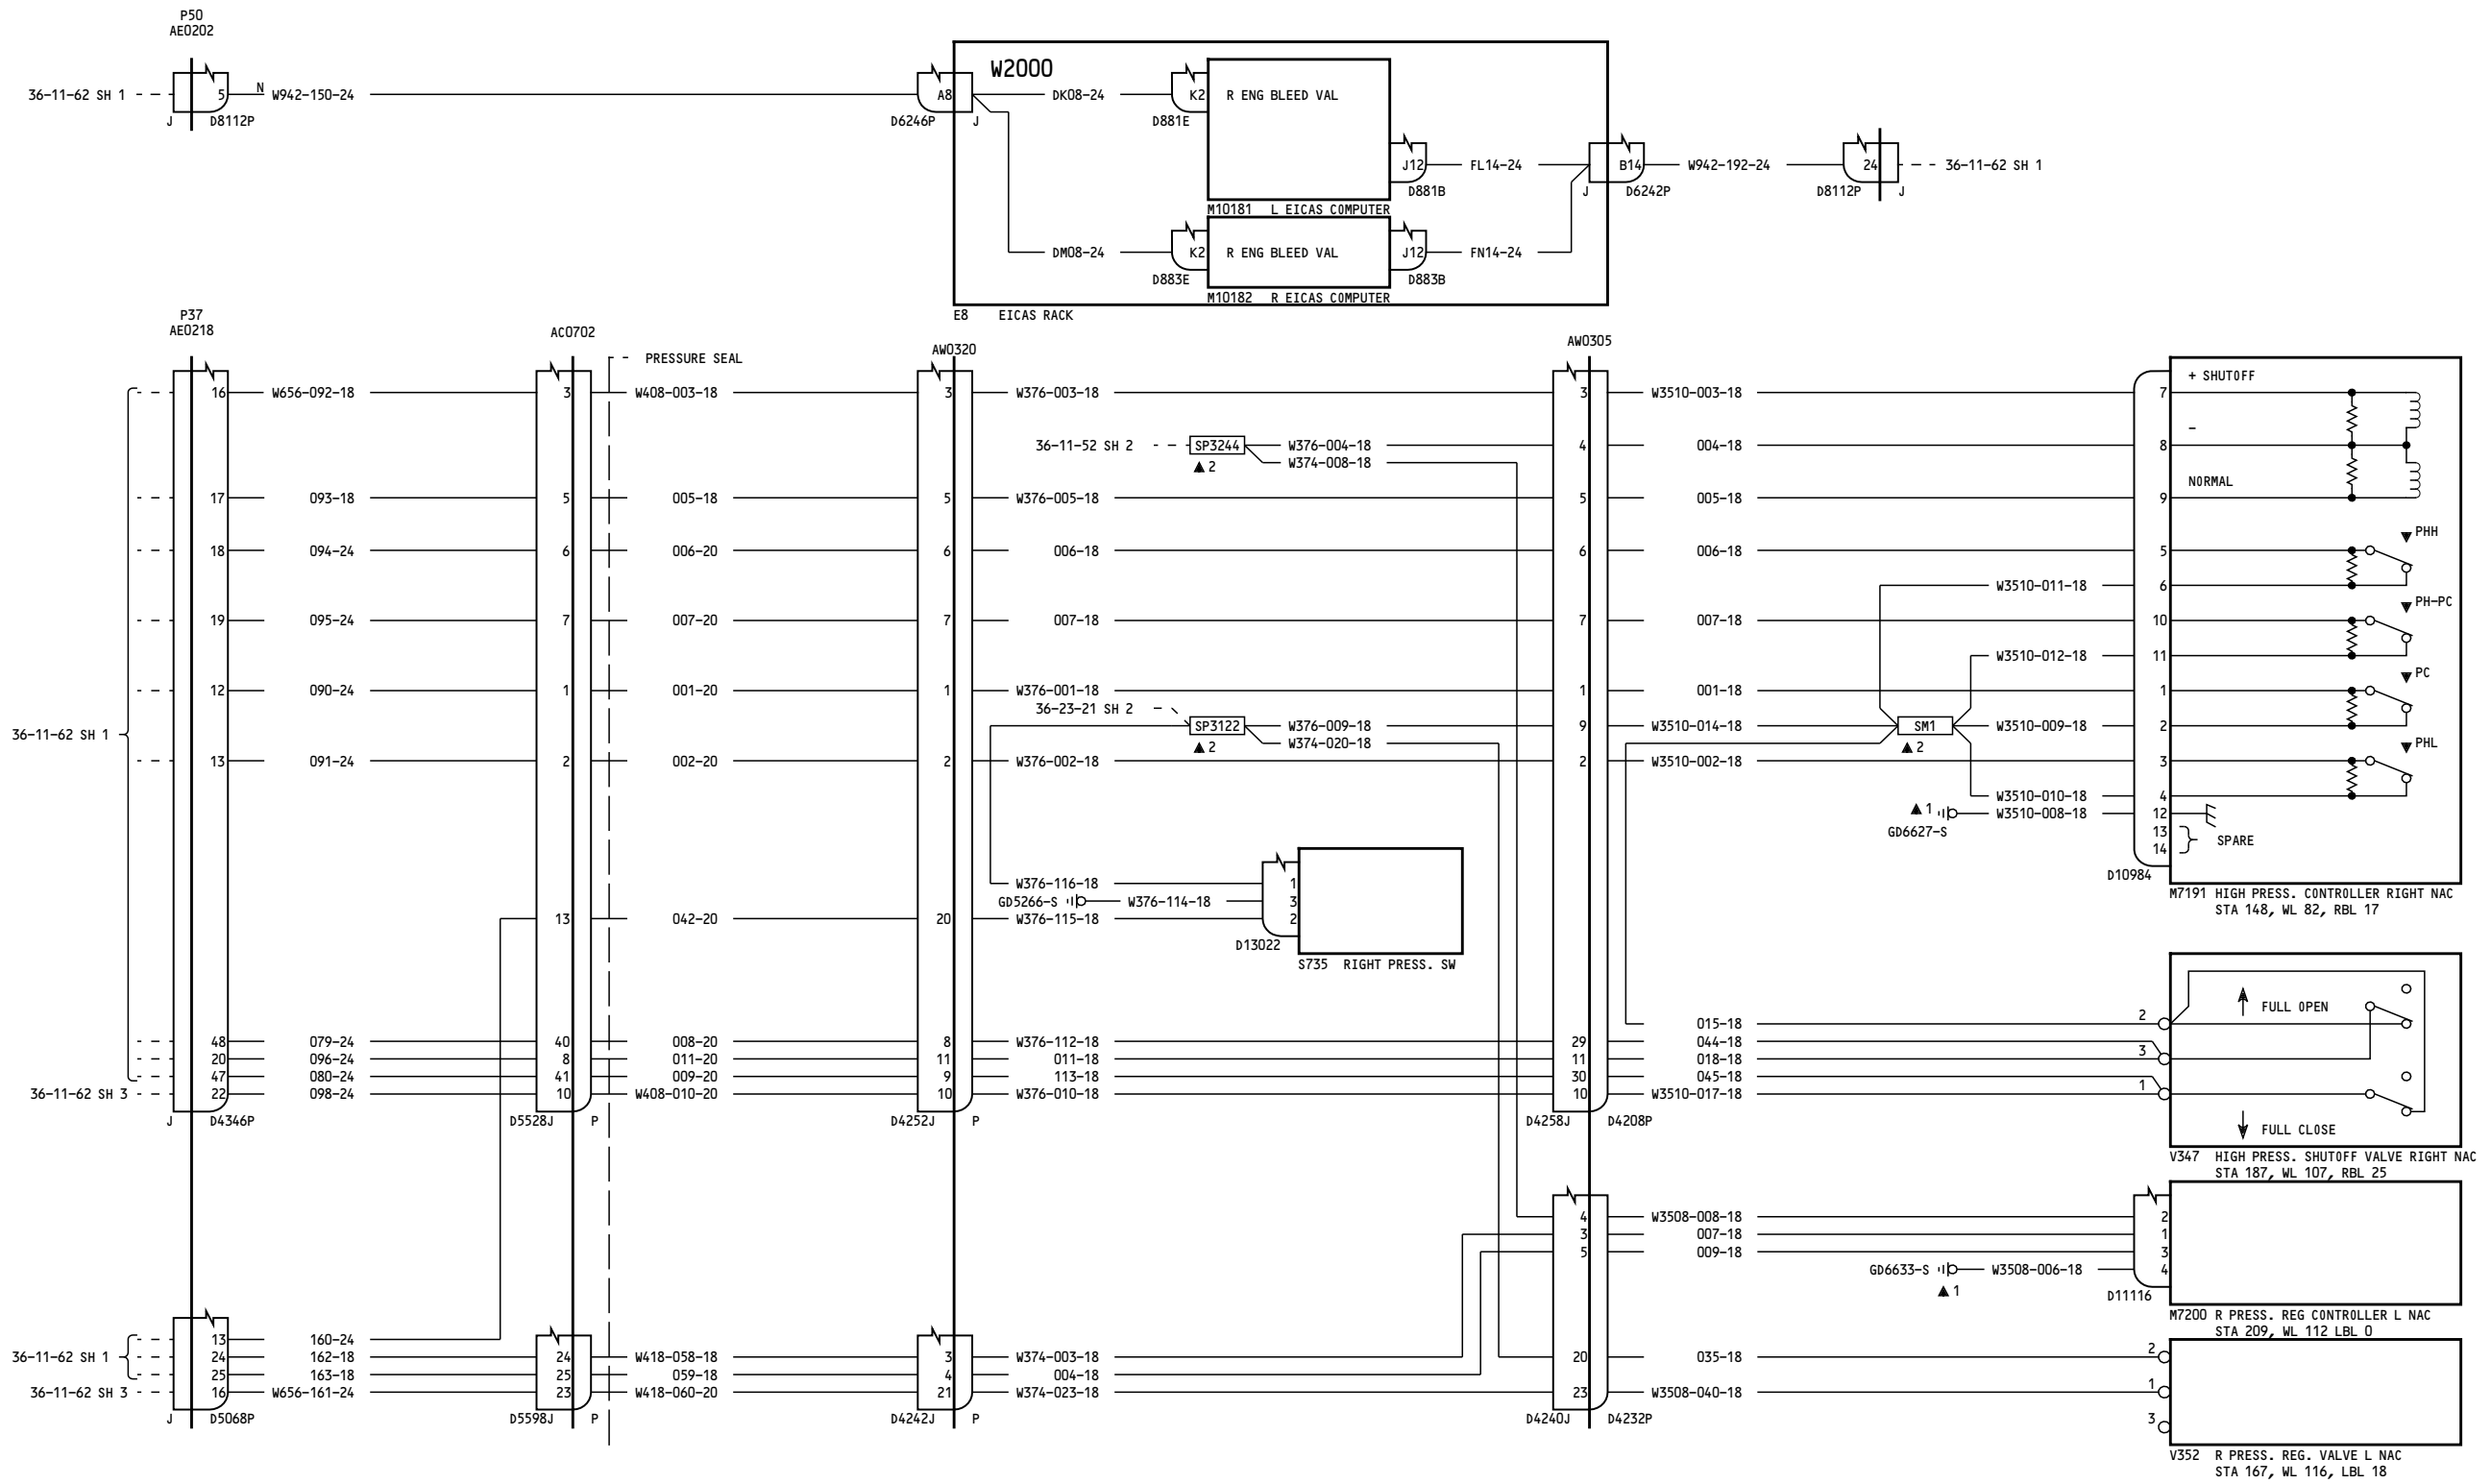

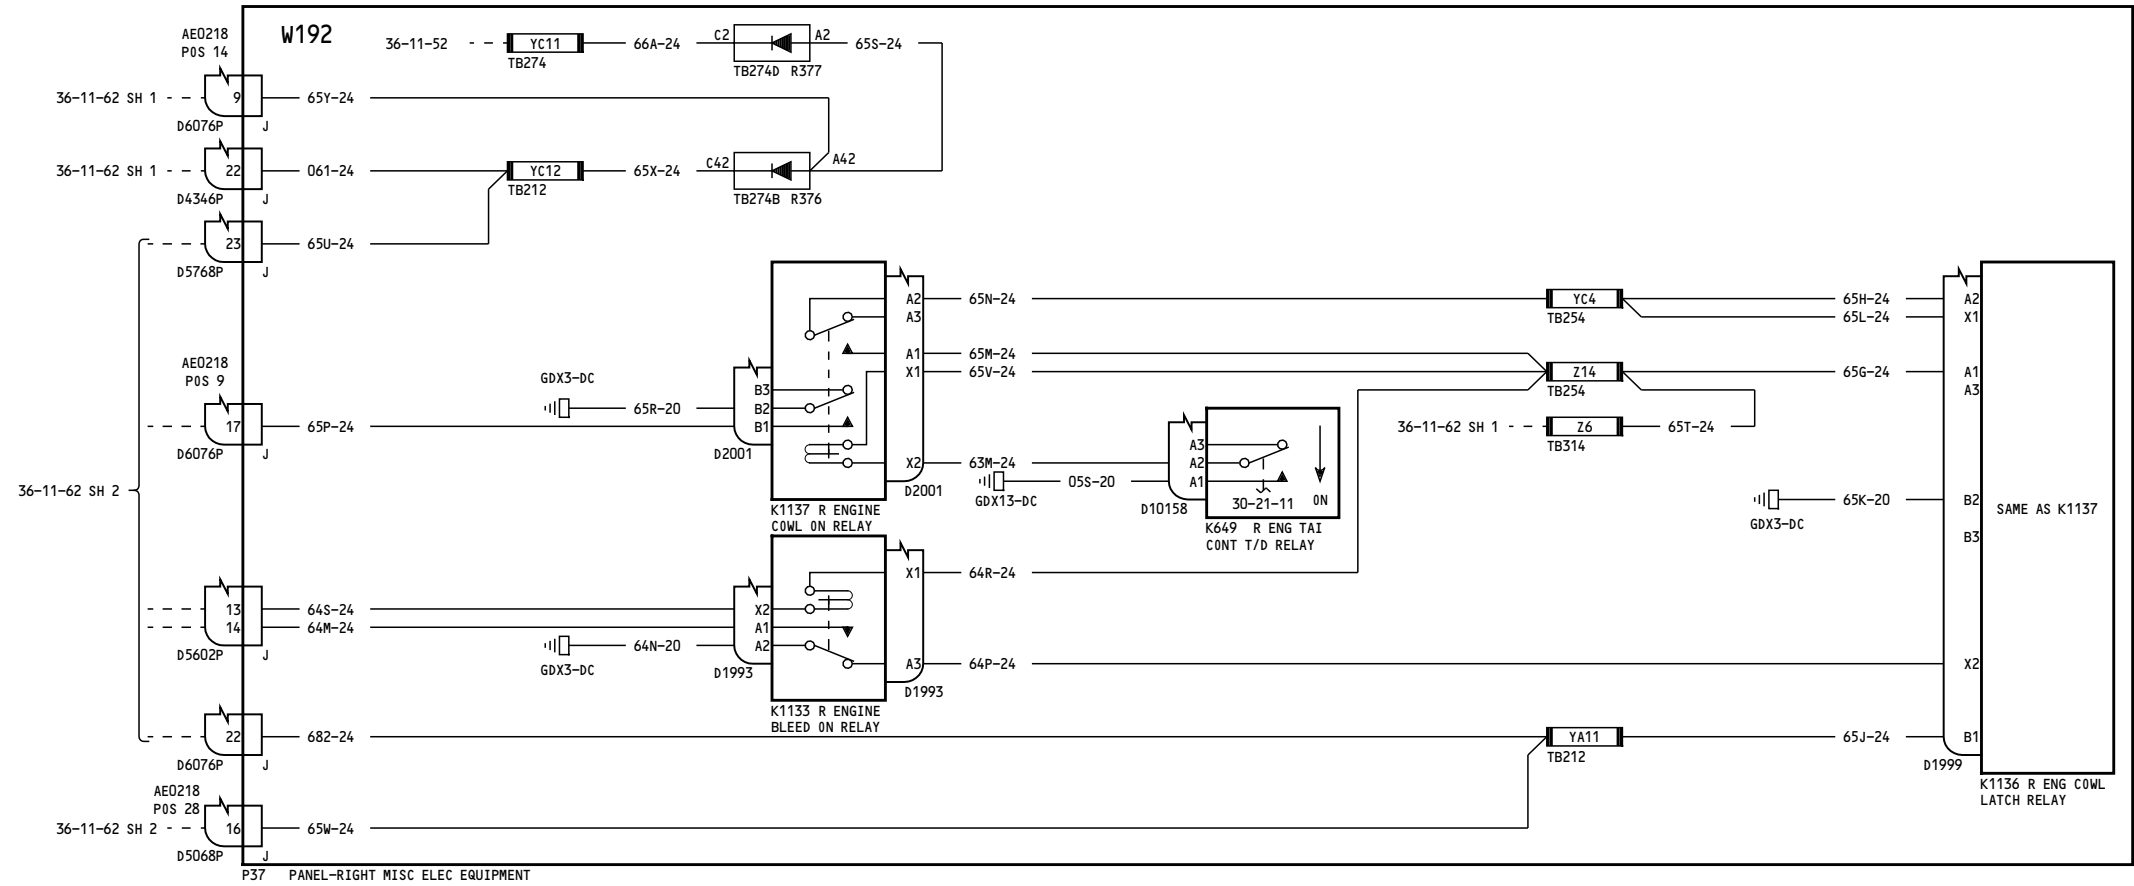

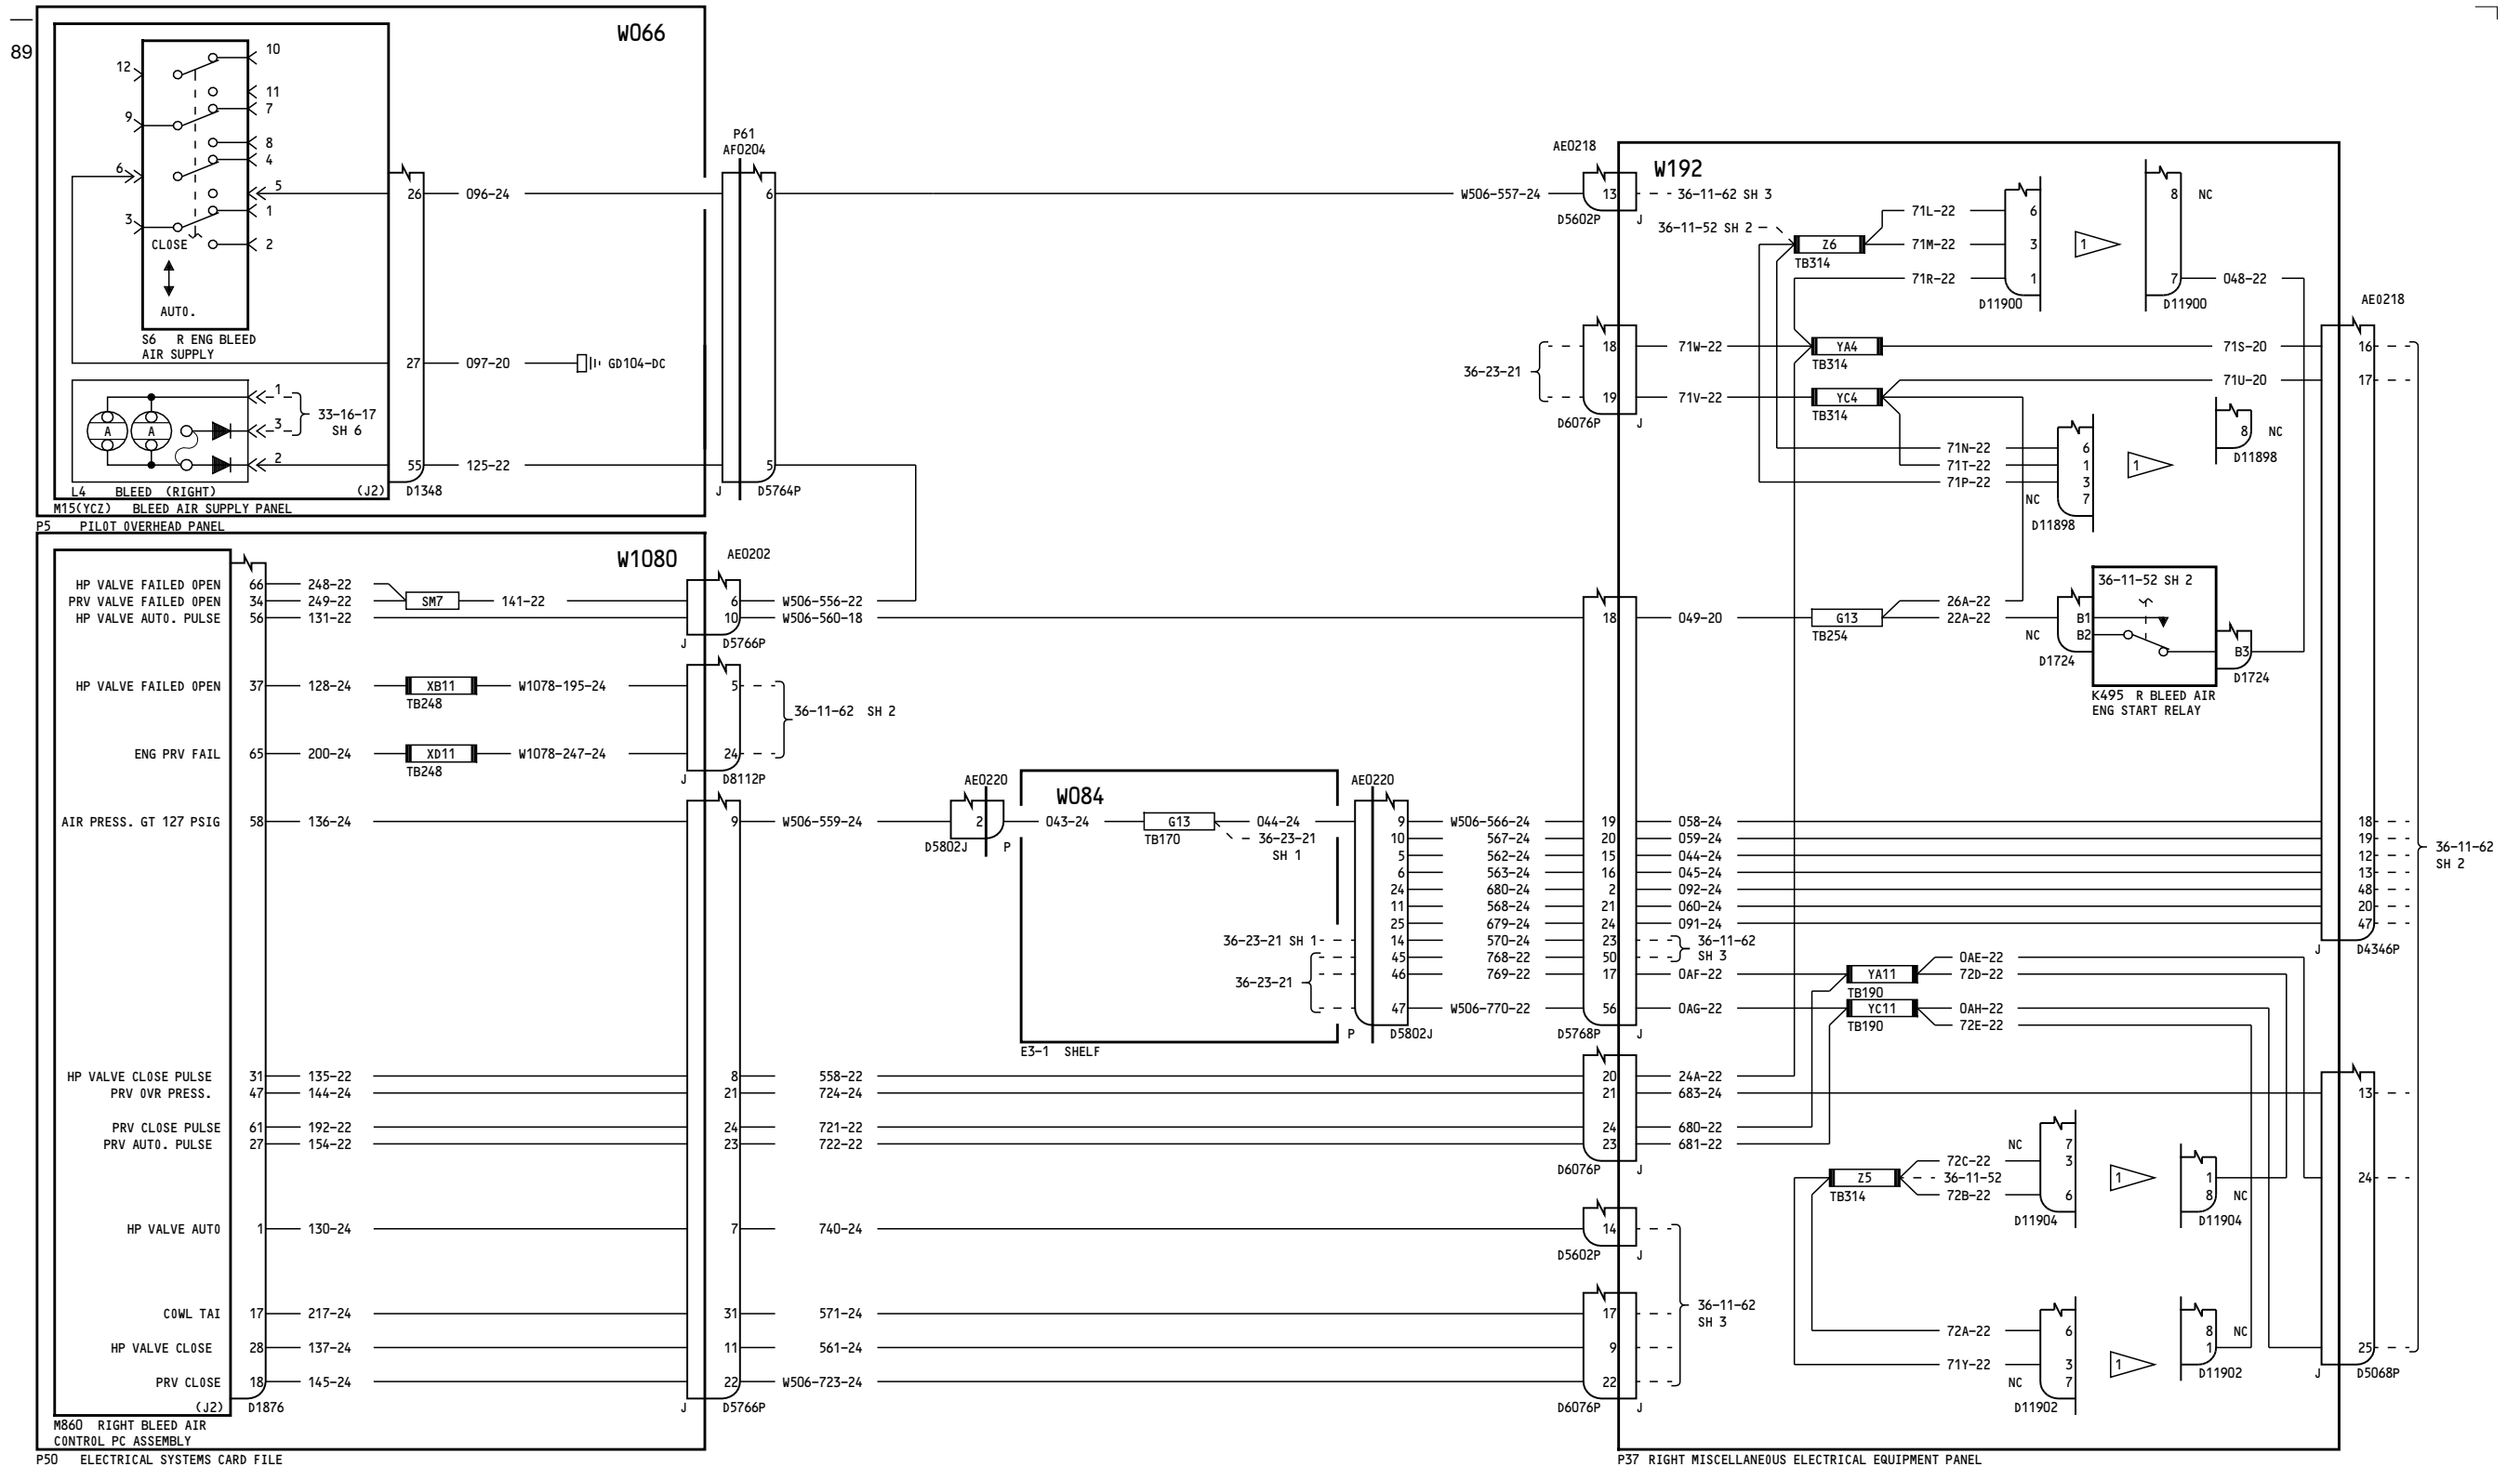

NOTES:  
 1 CAP & STOW CONNECTOR WHEN MATING EQUIPMENT IS NOT INSTALLED.

275

**AIR SUPPLY BLEED AIR -  
 RIGHT ENGINE HIGH  
 PRESSURE CONTROL**

D280T132


**36-11-62**

Page 6.2  
 Sheet 1  
 Jan 21/2005

- Incorporates
- ▶ 36-0026
  - ▶ 36-0026 IN06
  - ▶ 36-0027
  - ▶ 36-0029 R05

**36-11-62**

Page 6.2  
 Sheet 1  
 Jan 21/2005

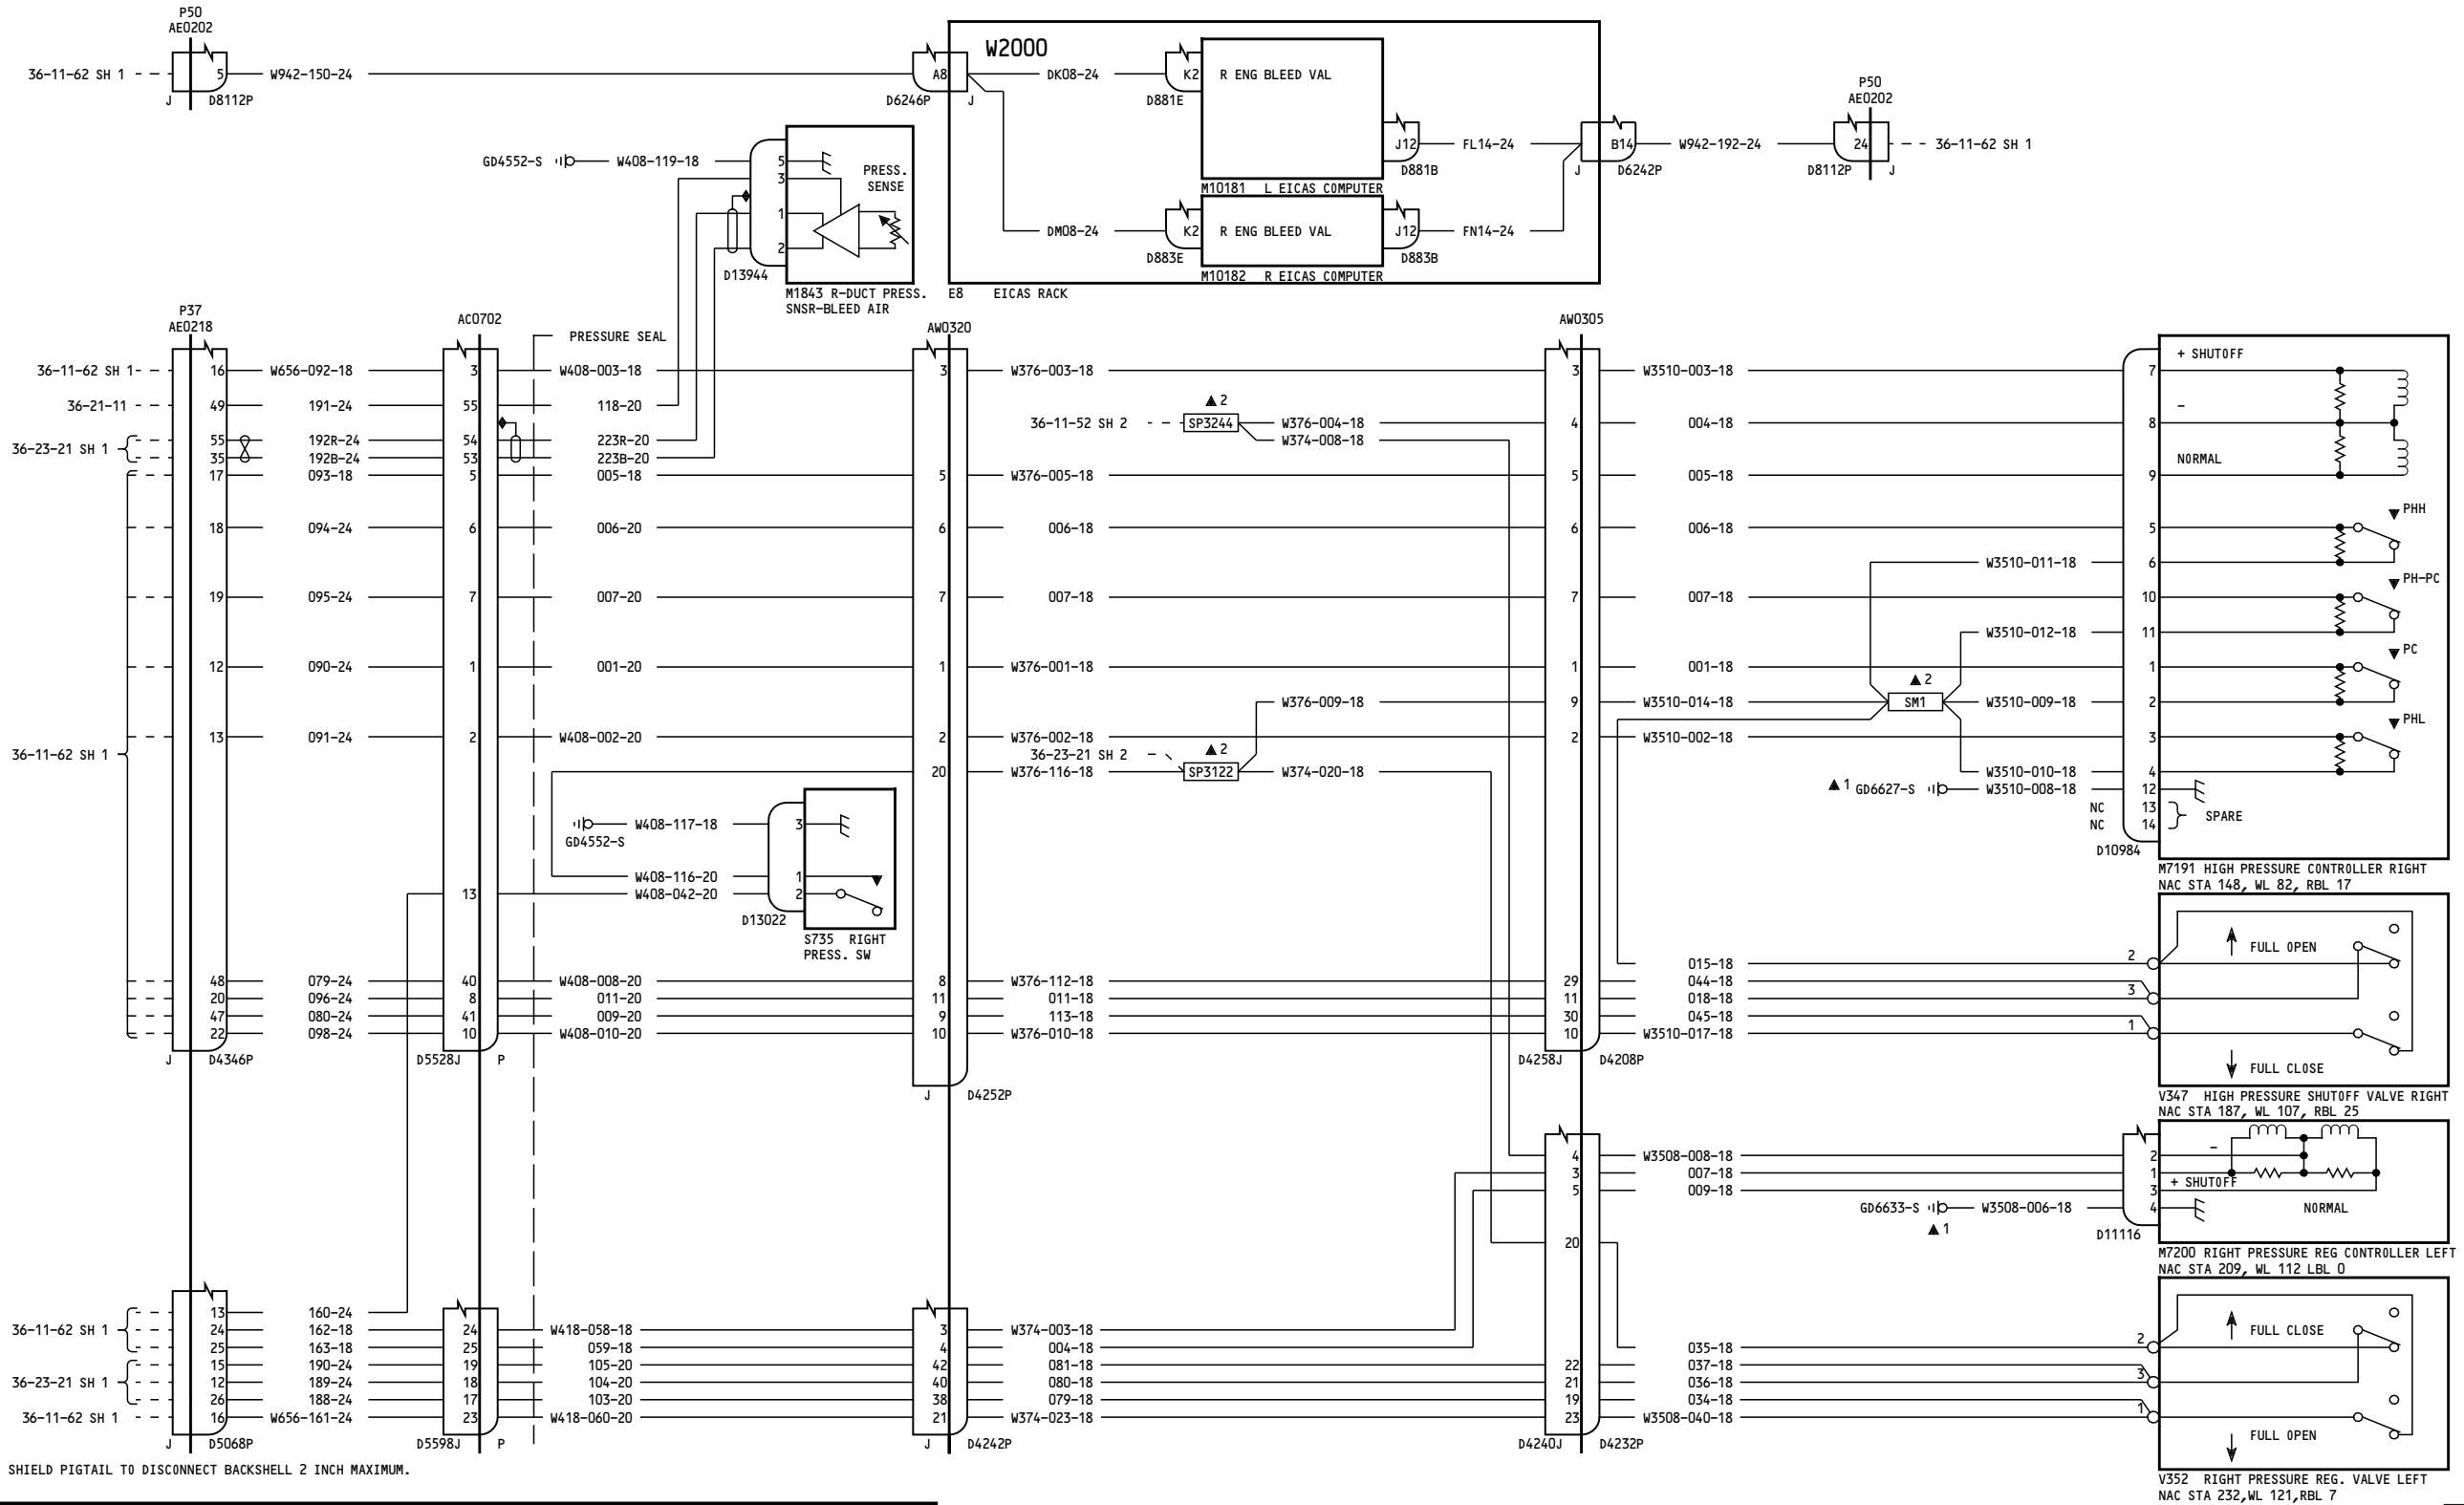

NOTES: SHIELD PIGTAIL TO DISCONNECT BACKSHELL 2 INCH MAXIMUM.

275

**AIR SUPPLY BLEED AIR -  
RIGHT ENGINE HIGH  
PRESSURE CONTROL**

D280T132

**36-11-62**


Page 6.2  
Sheet 2  
Jan 21/2005

Incorporates  
36-0029 R05

**36-11-62**

Page 6.2  
Sheet 2  
Jan 21/2005



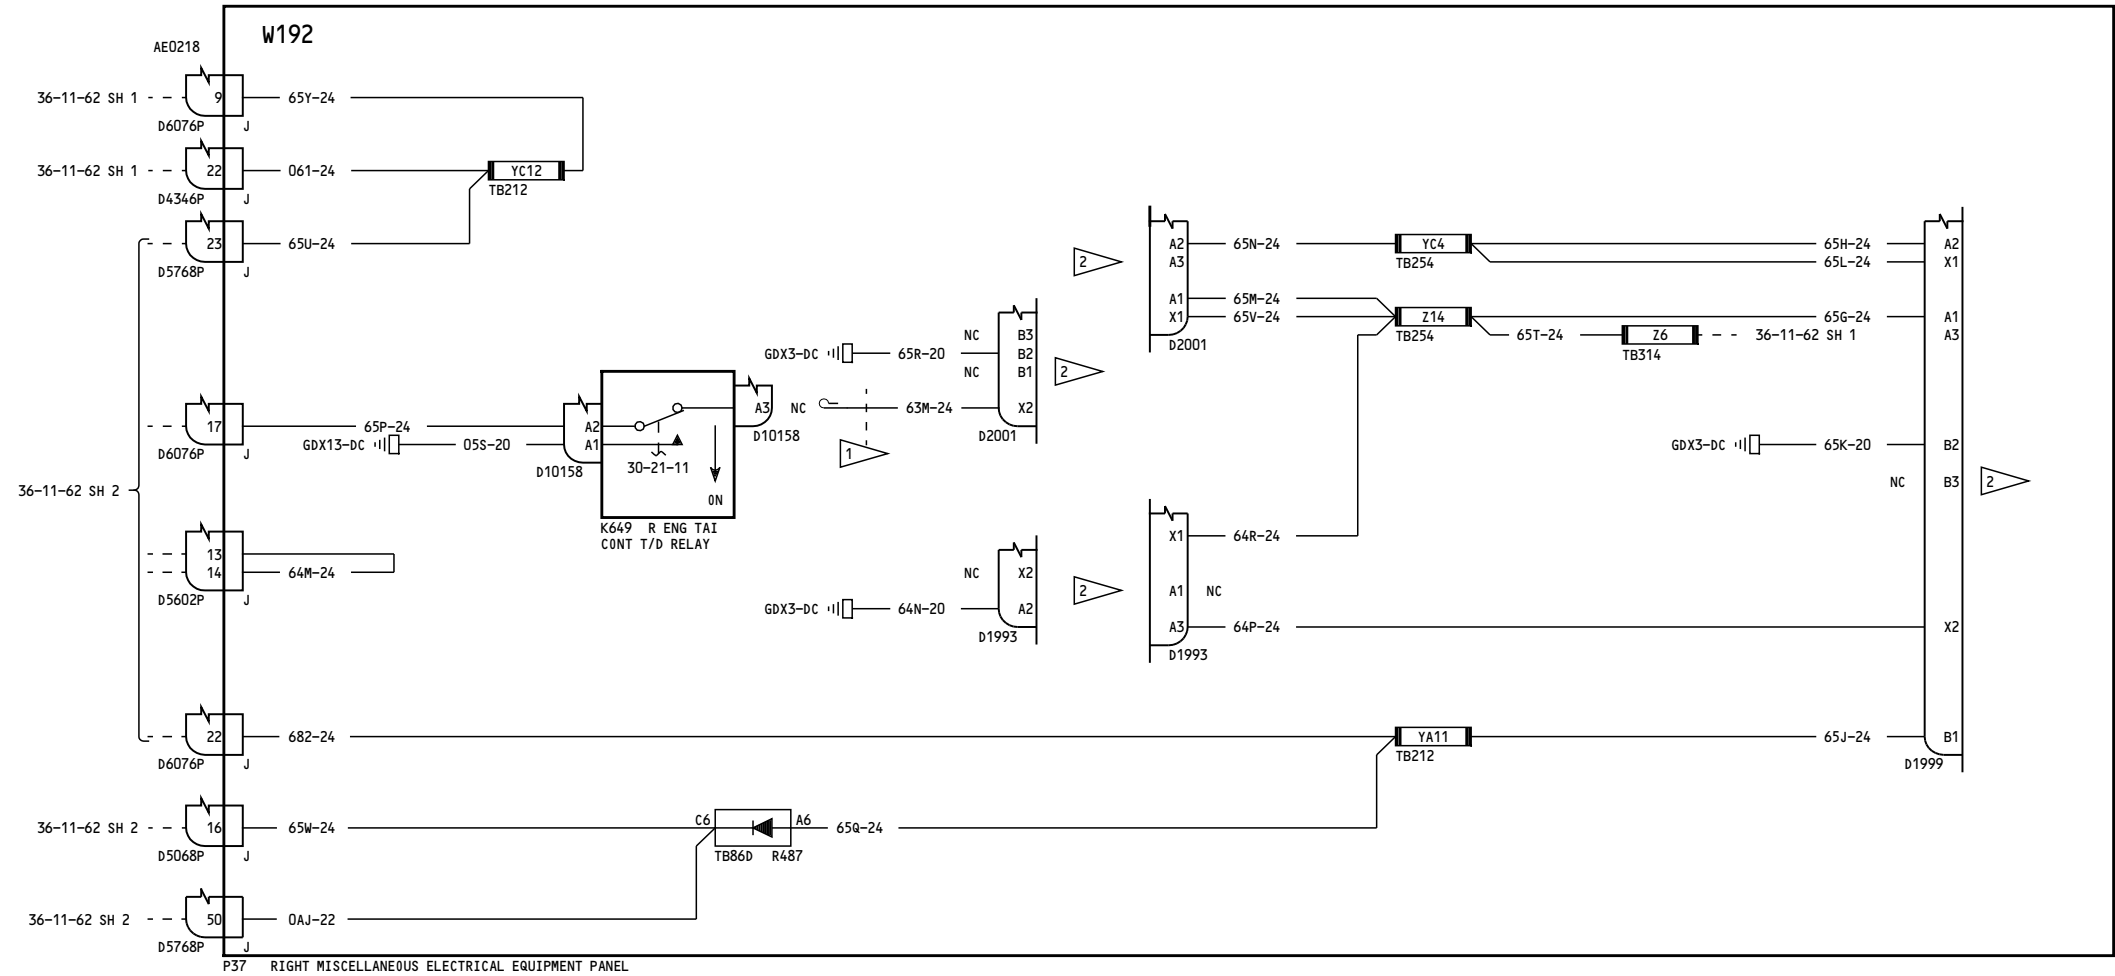

- NOTES:
- 1 CAP & STOW NEAR D10158
  - 2 CAP & STOW CONNECTOR WHEN MATING EQUIPMENT IS NOT INSTALLED.

275

**AIR SUPPLY BLEED AIR-  
RIGHT ENGINE HIGH  
PRESSURE CONTROL**

D280T132


**36-11-62**

Page 6.2  
Sheet 3  
Jan 21/2005

- Incorporates
- 36-0026 IN06
  - 36-0029 R05

**36-11-62**

Page 6.2  
Sheet 3  
Jan 21/2005

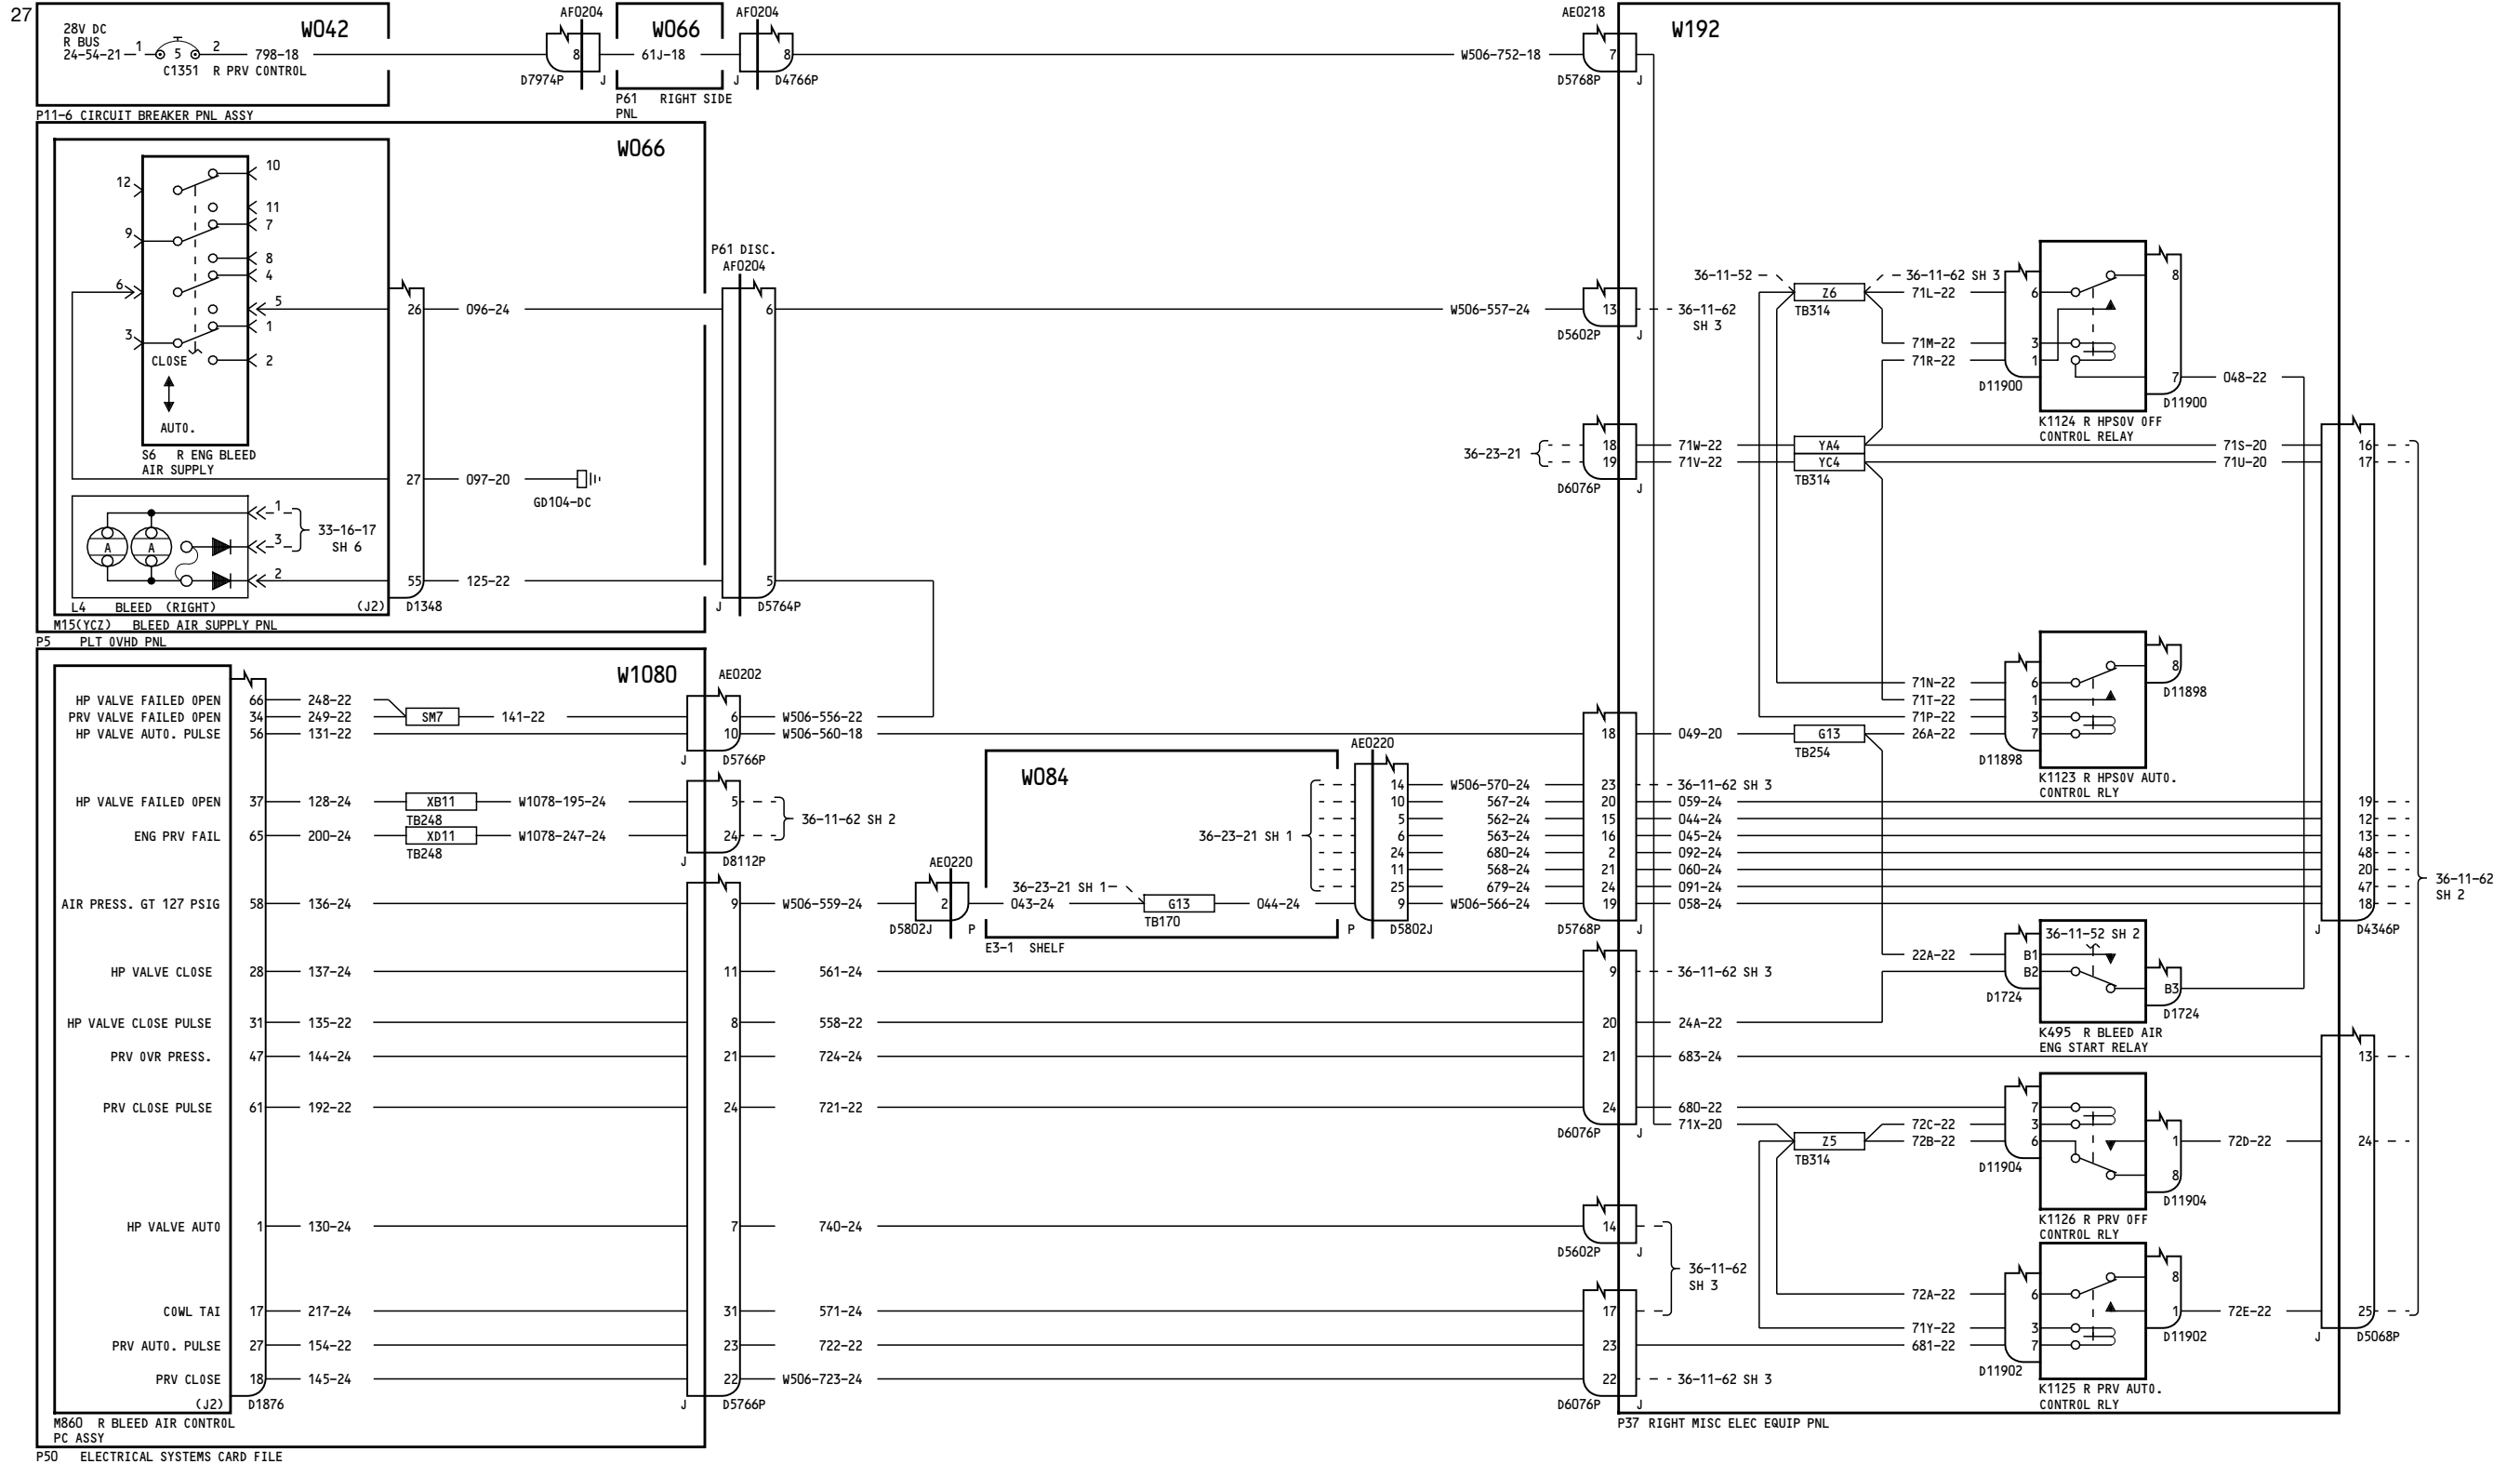

276

**AIR SUPPLY BLEED AIR-  
RIGHT ENGINE HIGH  
PRESSURE CONTROL**


D280T132

**36-11-62**

Page 7  
Sheet 1  
Jan 21/2005


**36-11-62**


Page 7  
Sheet 1  
Jan 21/2005

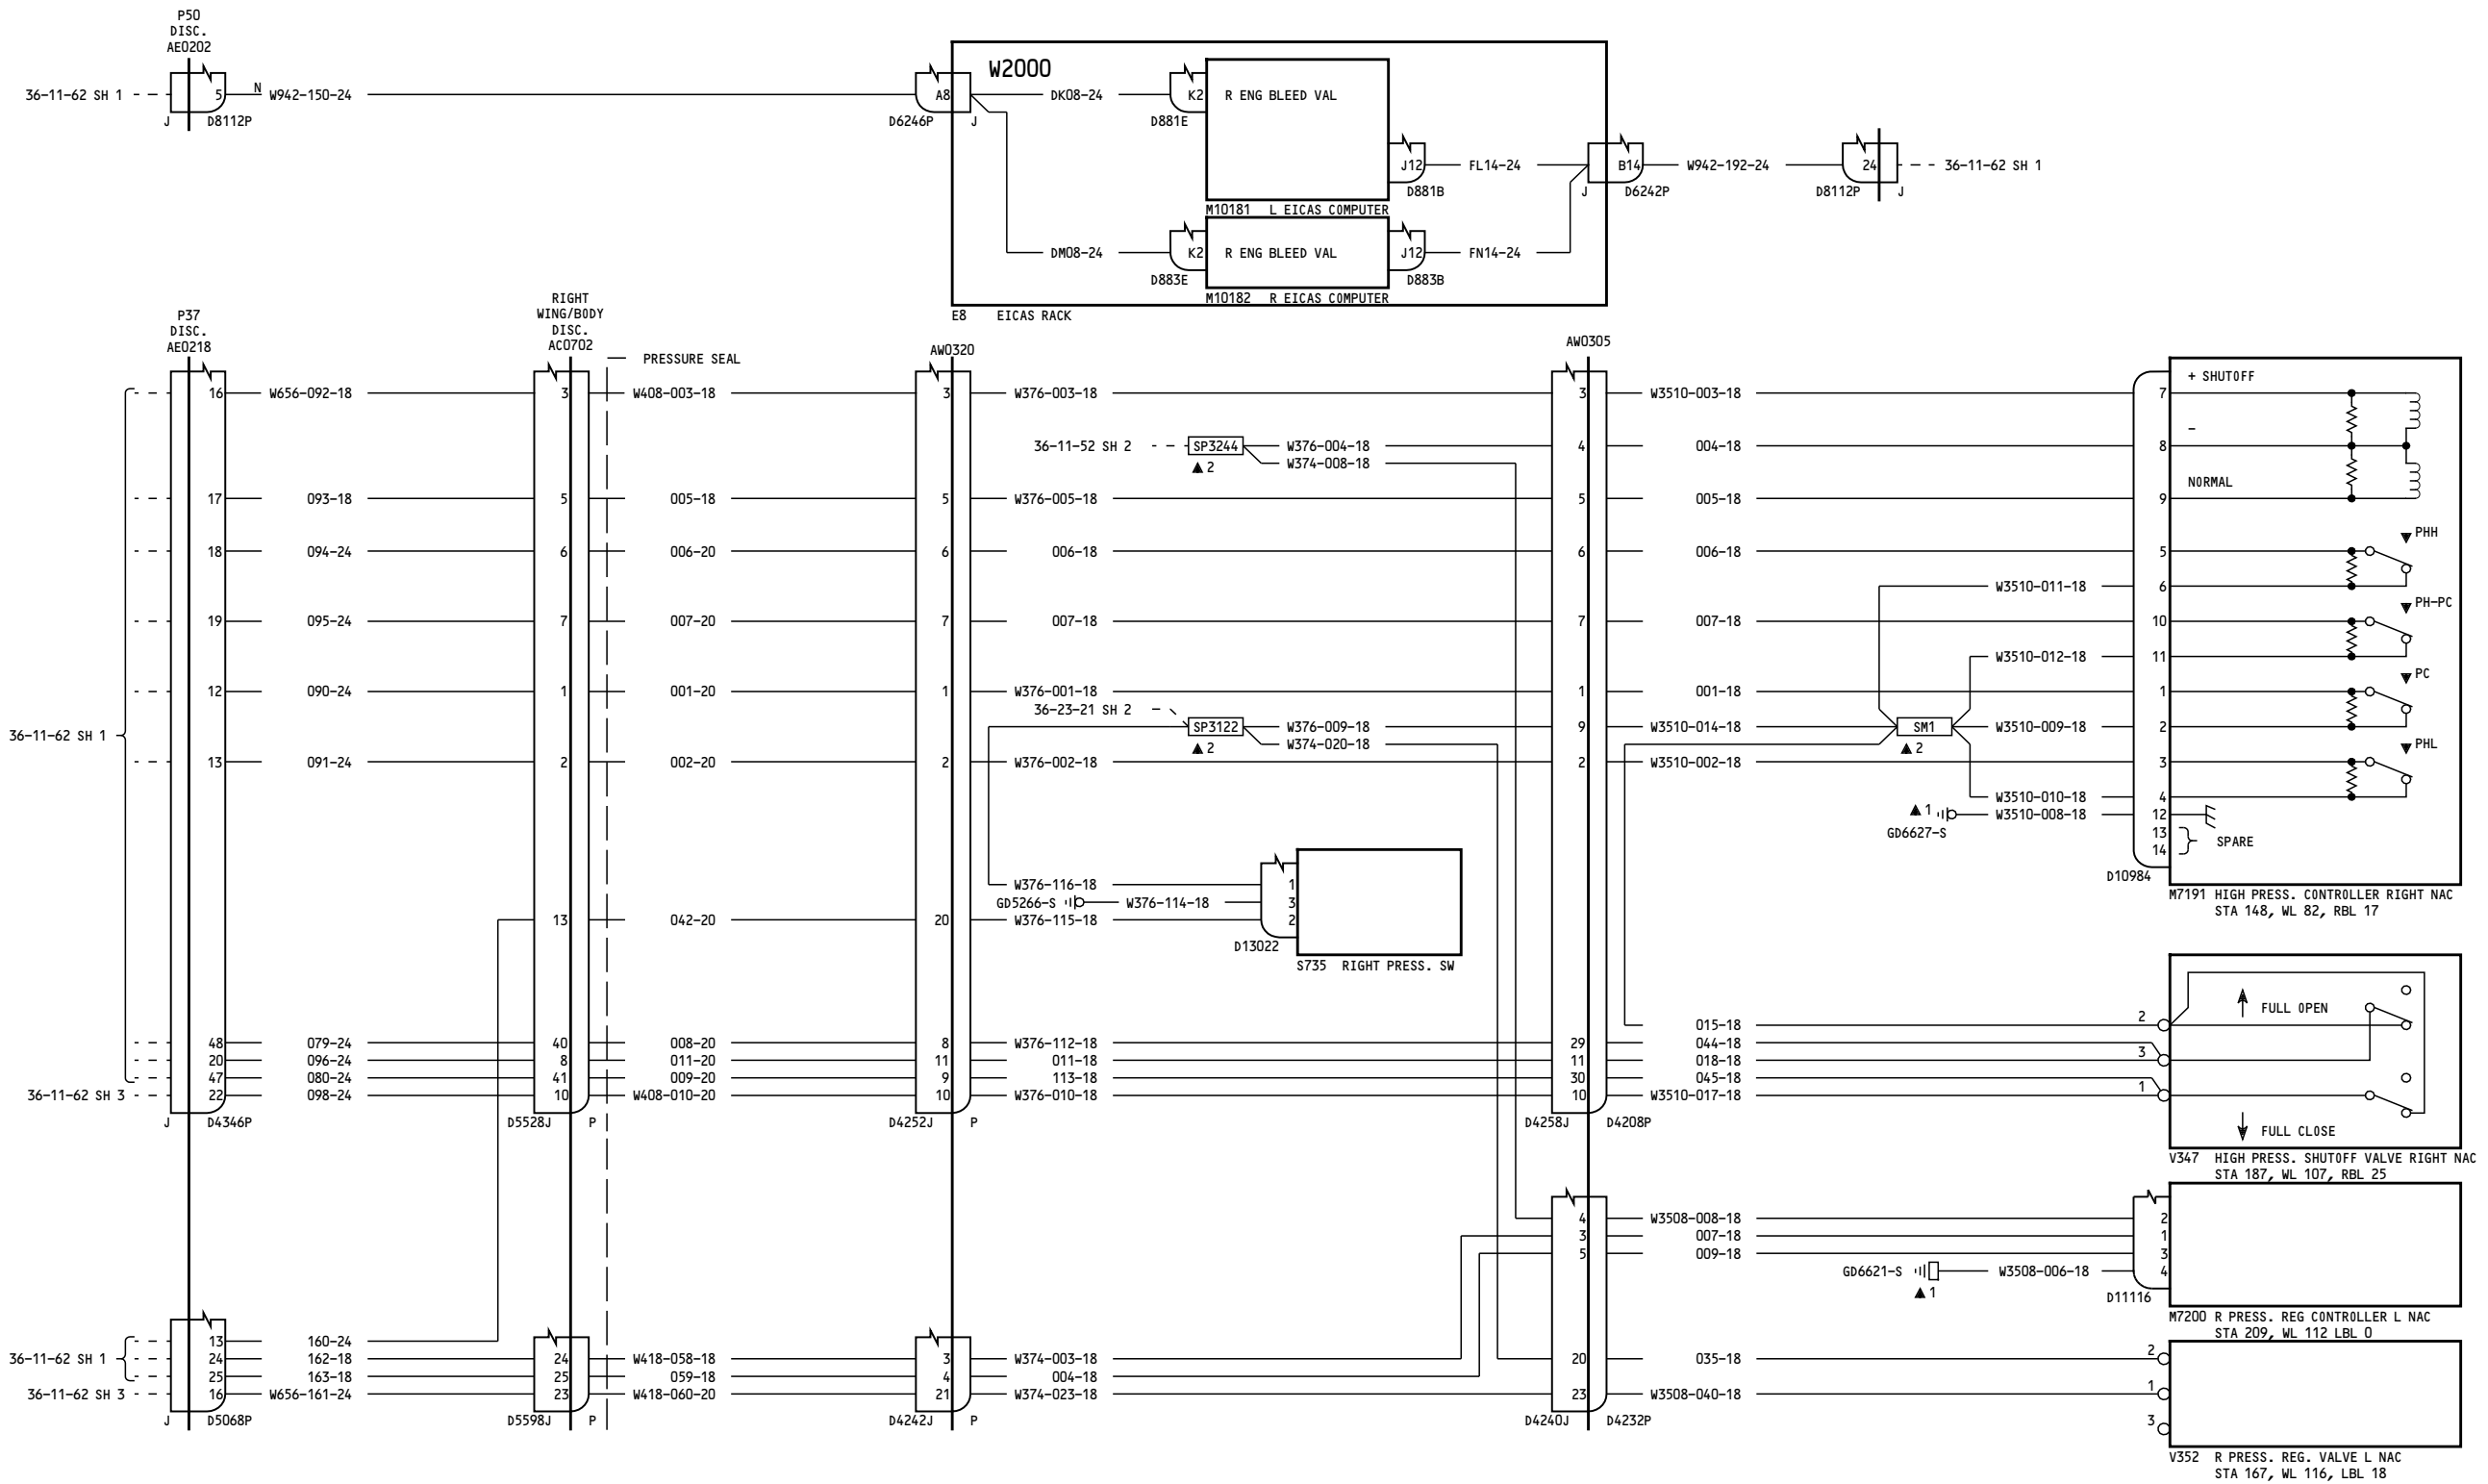



767-200/300 WIRING DIAGRAM MANUAL

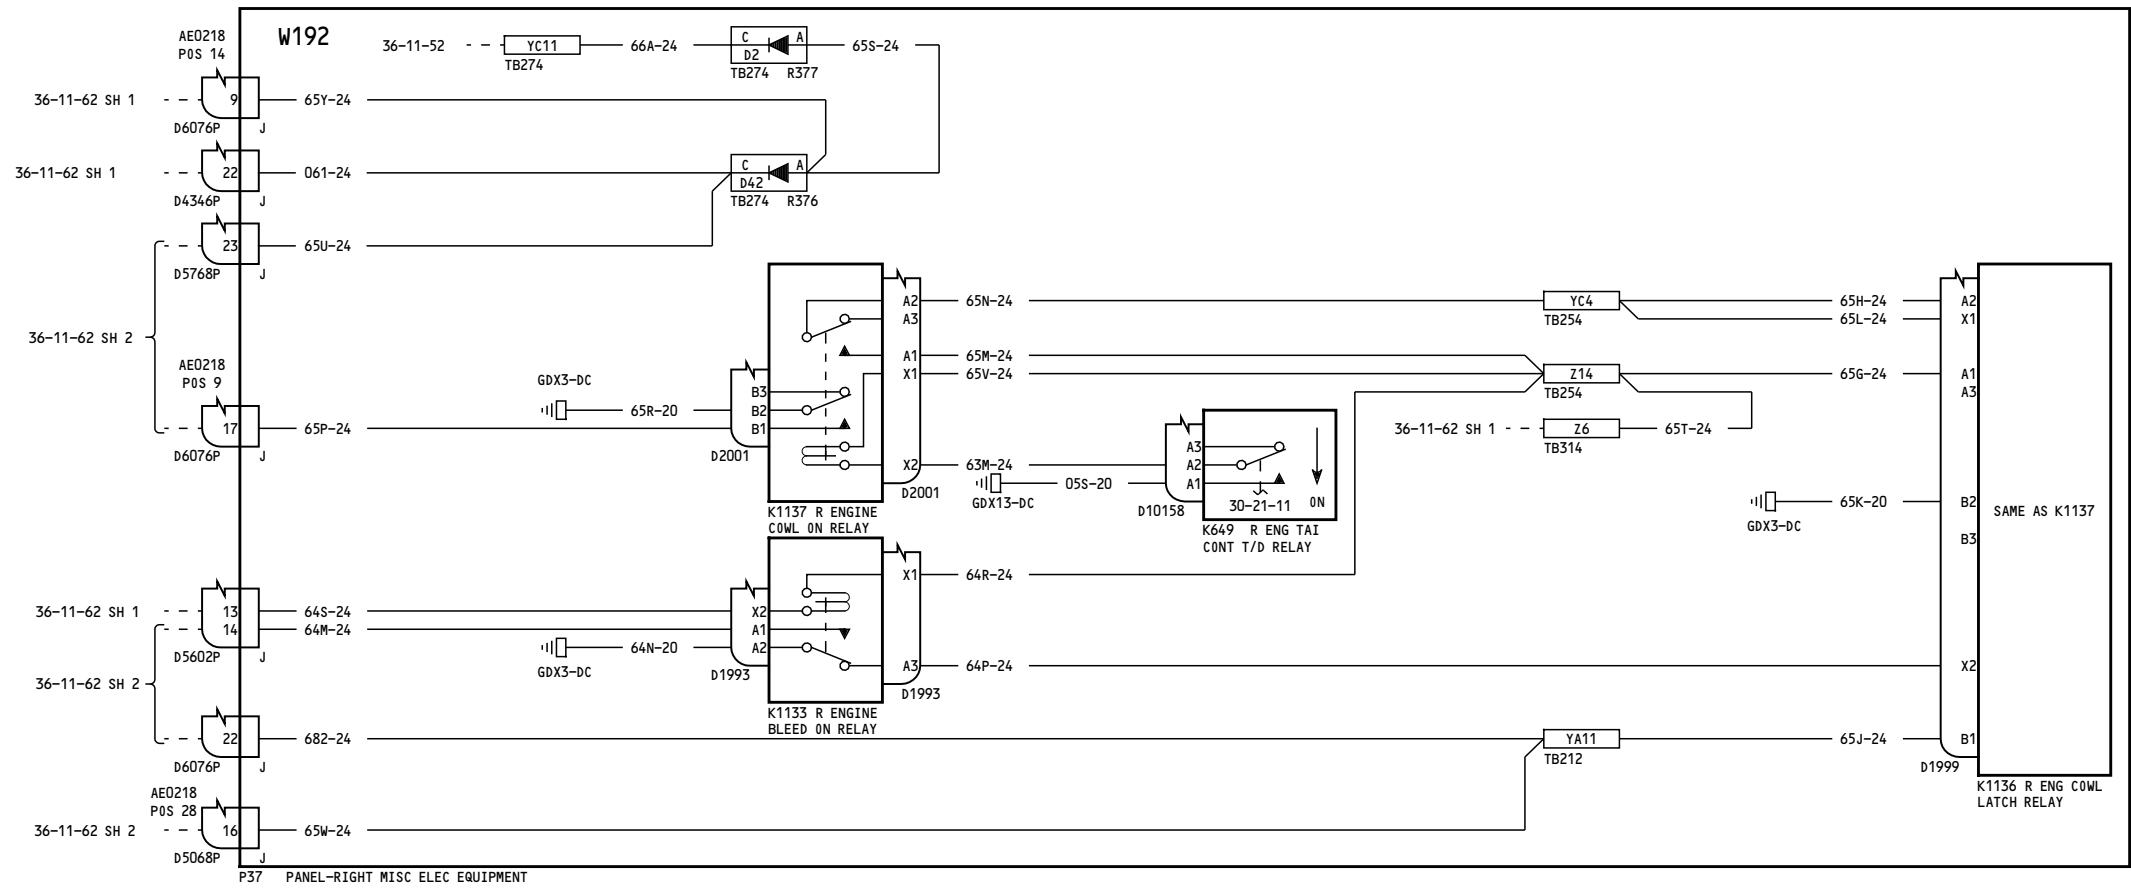

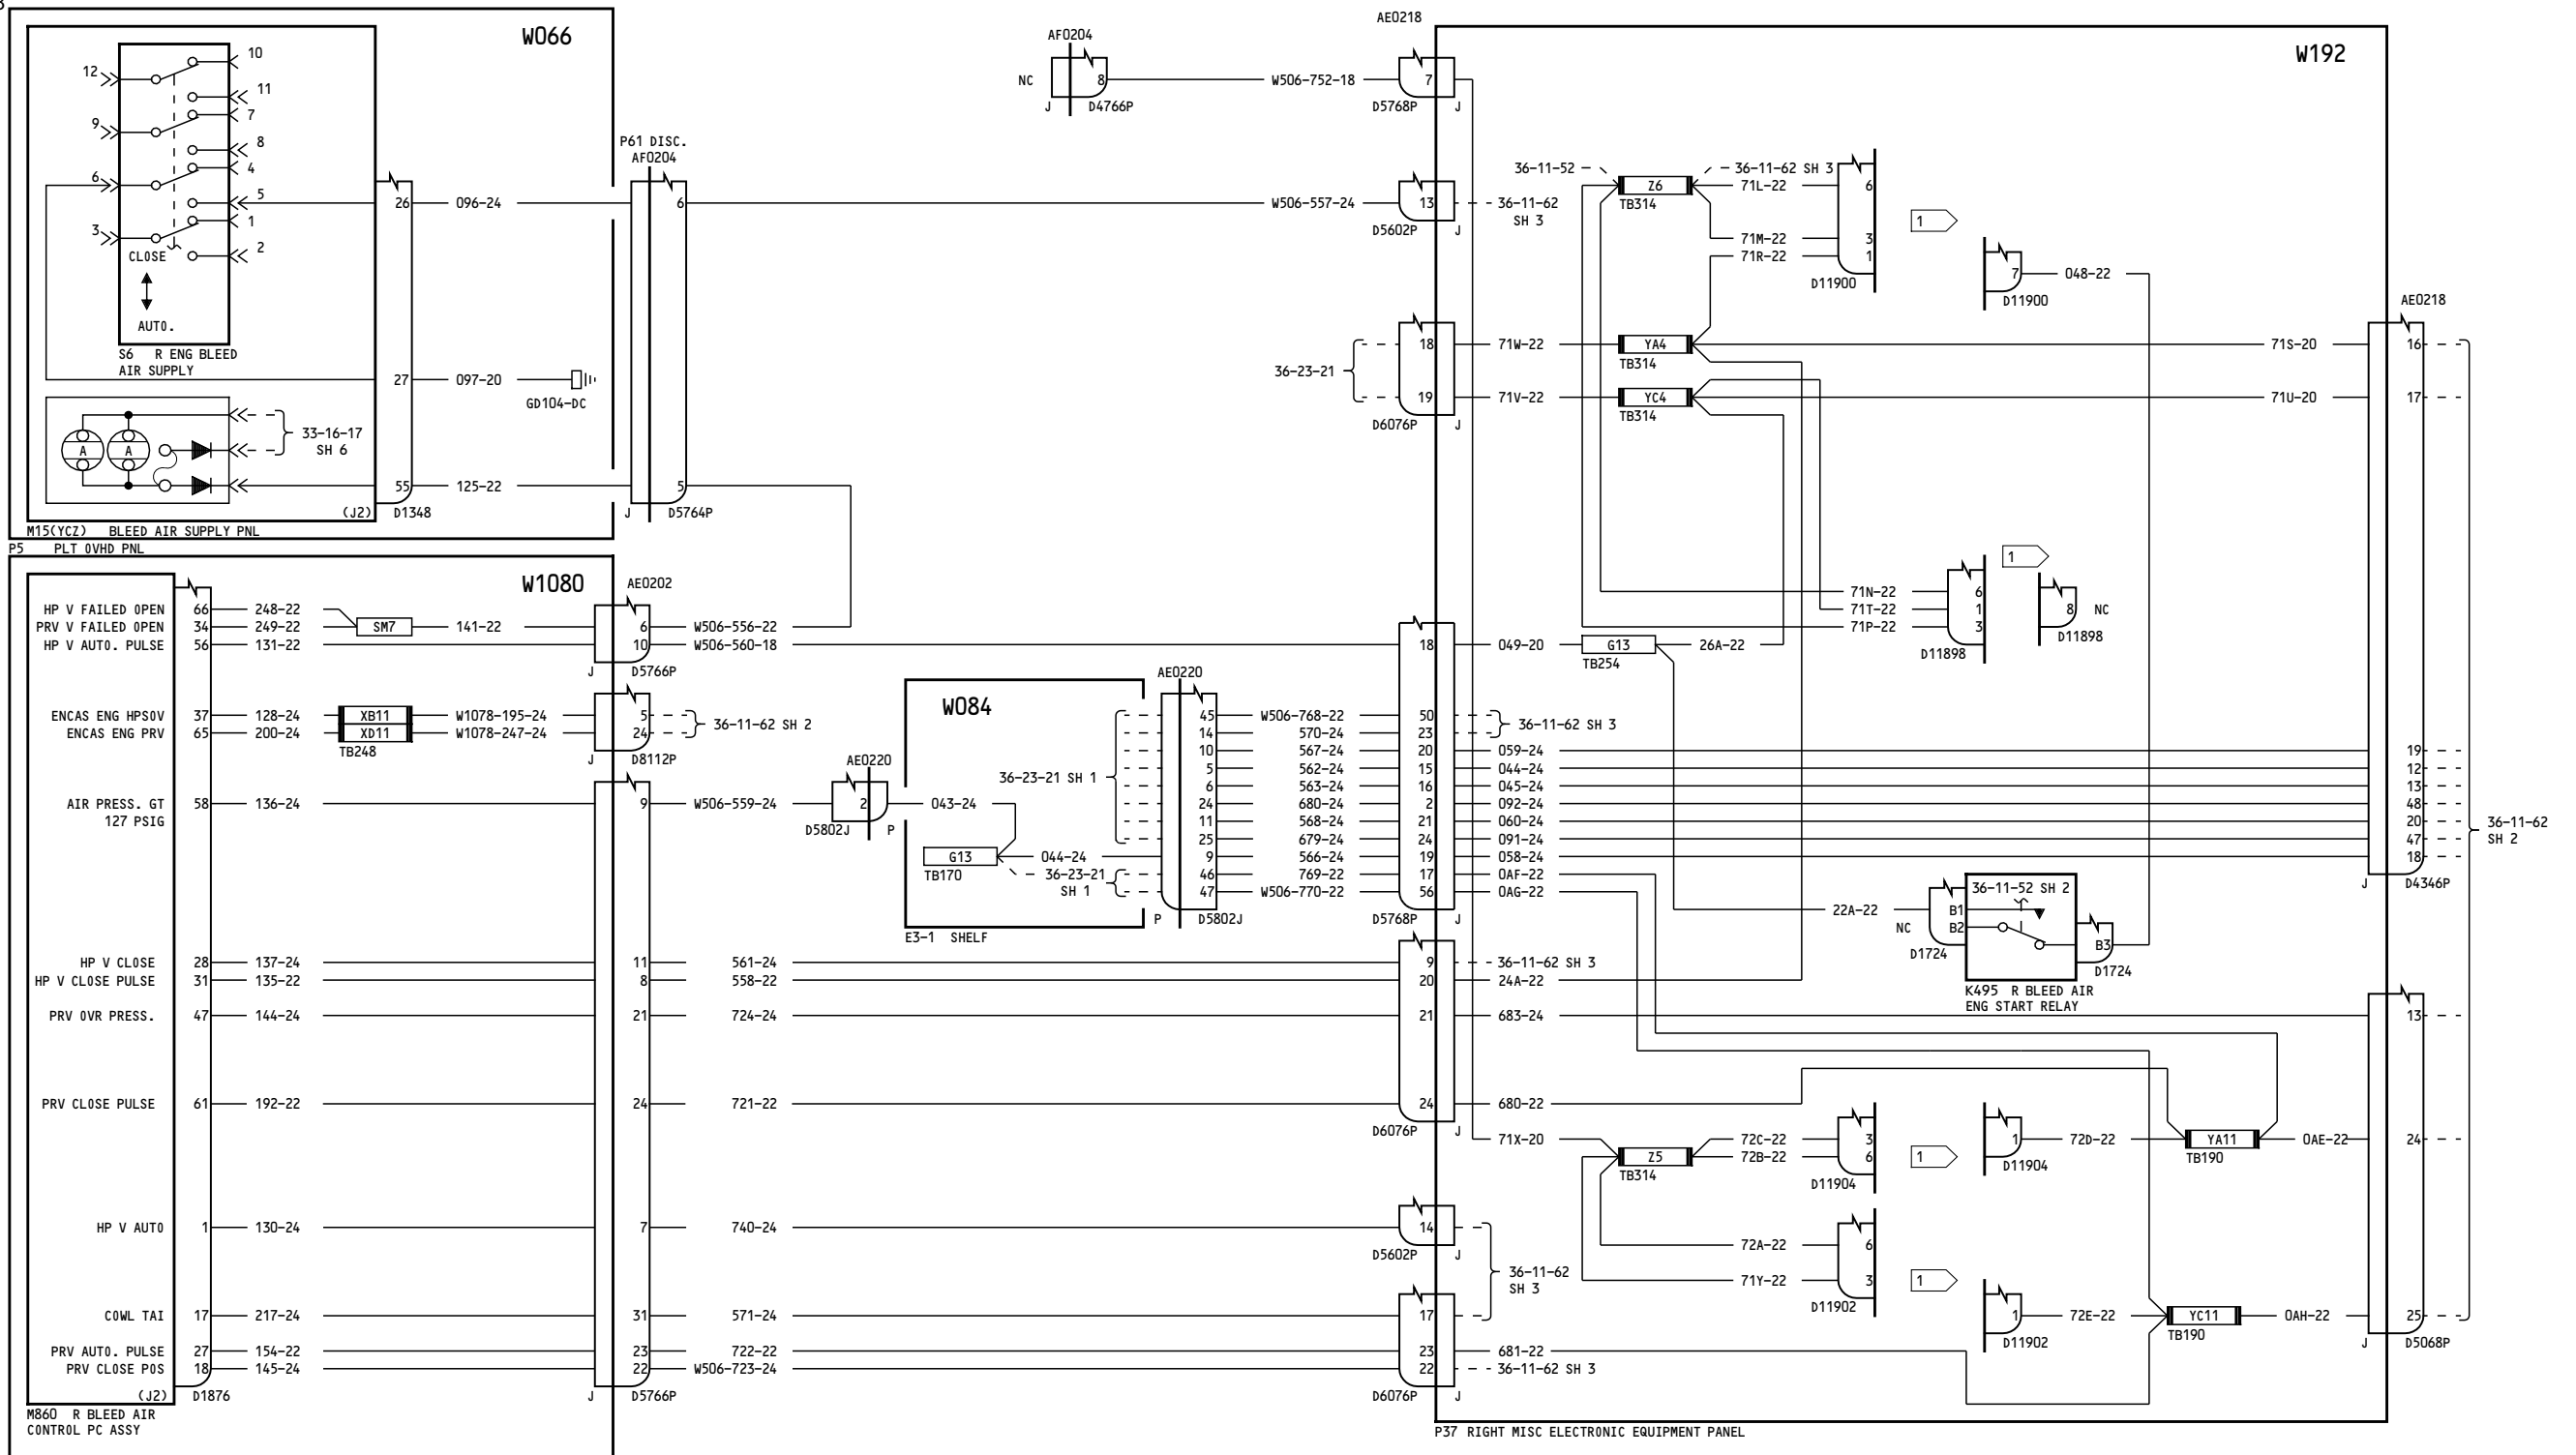

P50 ELECTRICAL SYSTEMS CARD FILE

NOTES: 1 CAP AND STOW CONNECTOR WHEN MATING EQUIPMENT IS NOT INSTALLED

276

**AIR SUPPLY BLEED AIR-  
RIGHT ENGINE HIGH  
PRESSURE CONTROL**

D280T132


36-11-62

Page 7.1  
Sheet 1  
Aug 15/2007


Incorporates  
 36-0026  
 36-0026 IN06  
 36-0029 R05

36-11-62


Page 7.1  
Sheet 1  
Aug 15/2007

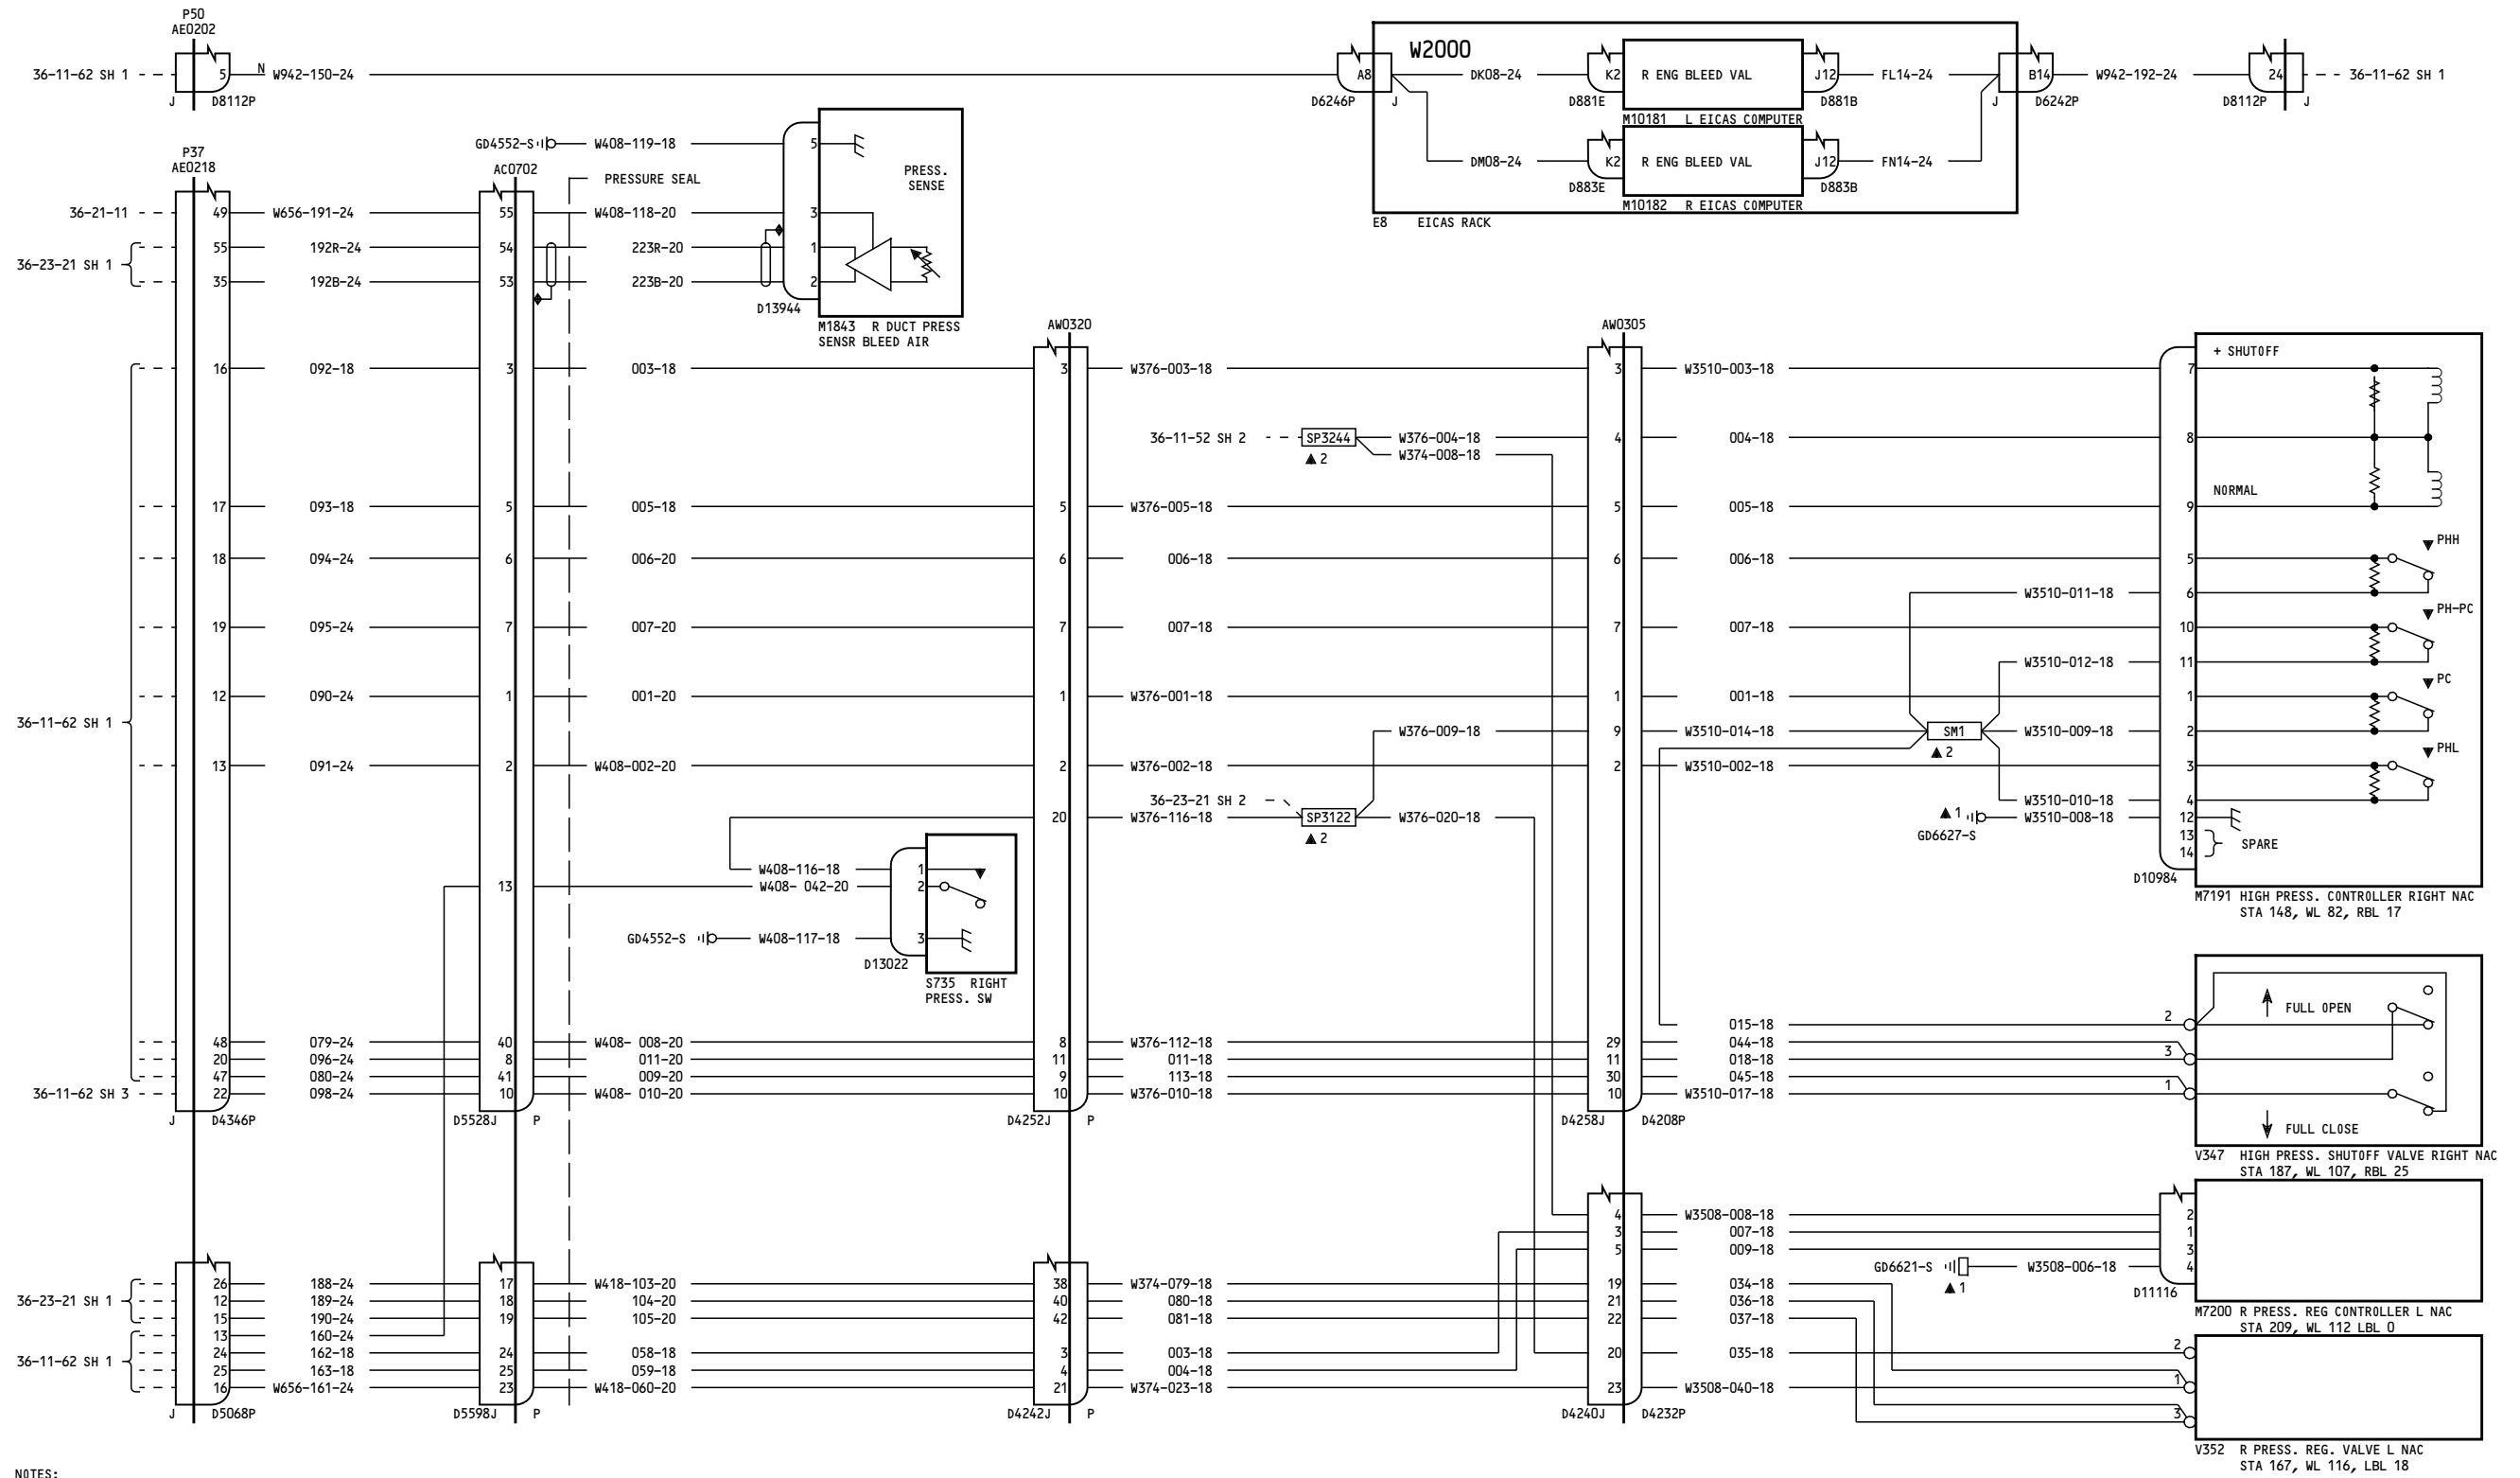

NOTES:  
SHIELD PIGTAIL TO DISCONNECT BACKSHELL 2 INCH MAXIMUM

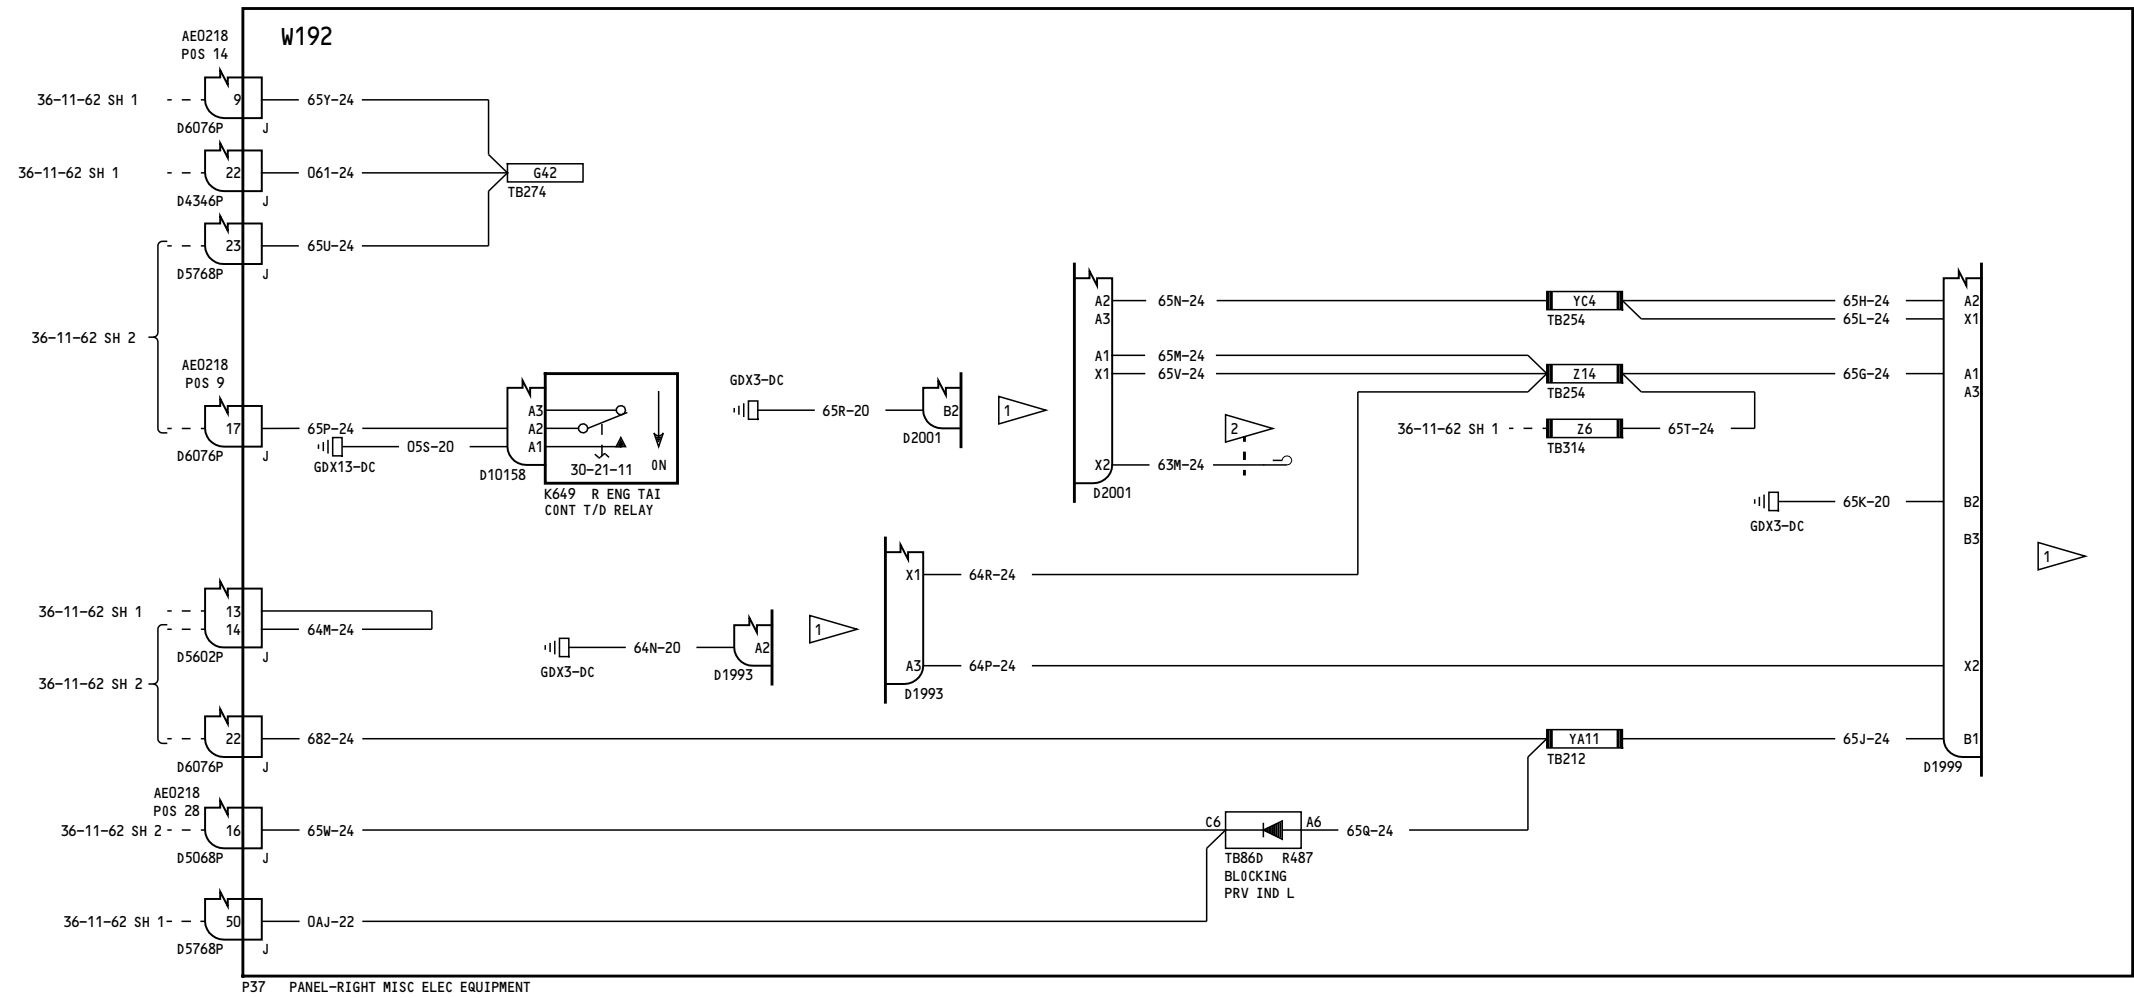

- NOTES:
- 1 CAP & STOW CONNECTOR WHEN MATING EQUIPMENT IS NOT INSTALLED
  - 2 CAP & STOW NEAR D10158

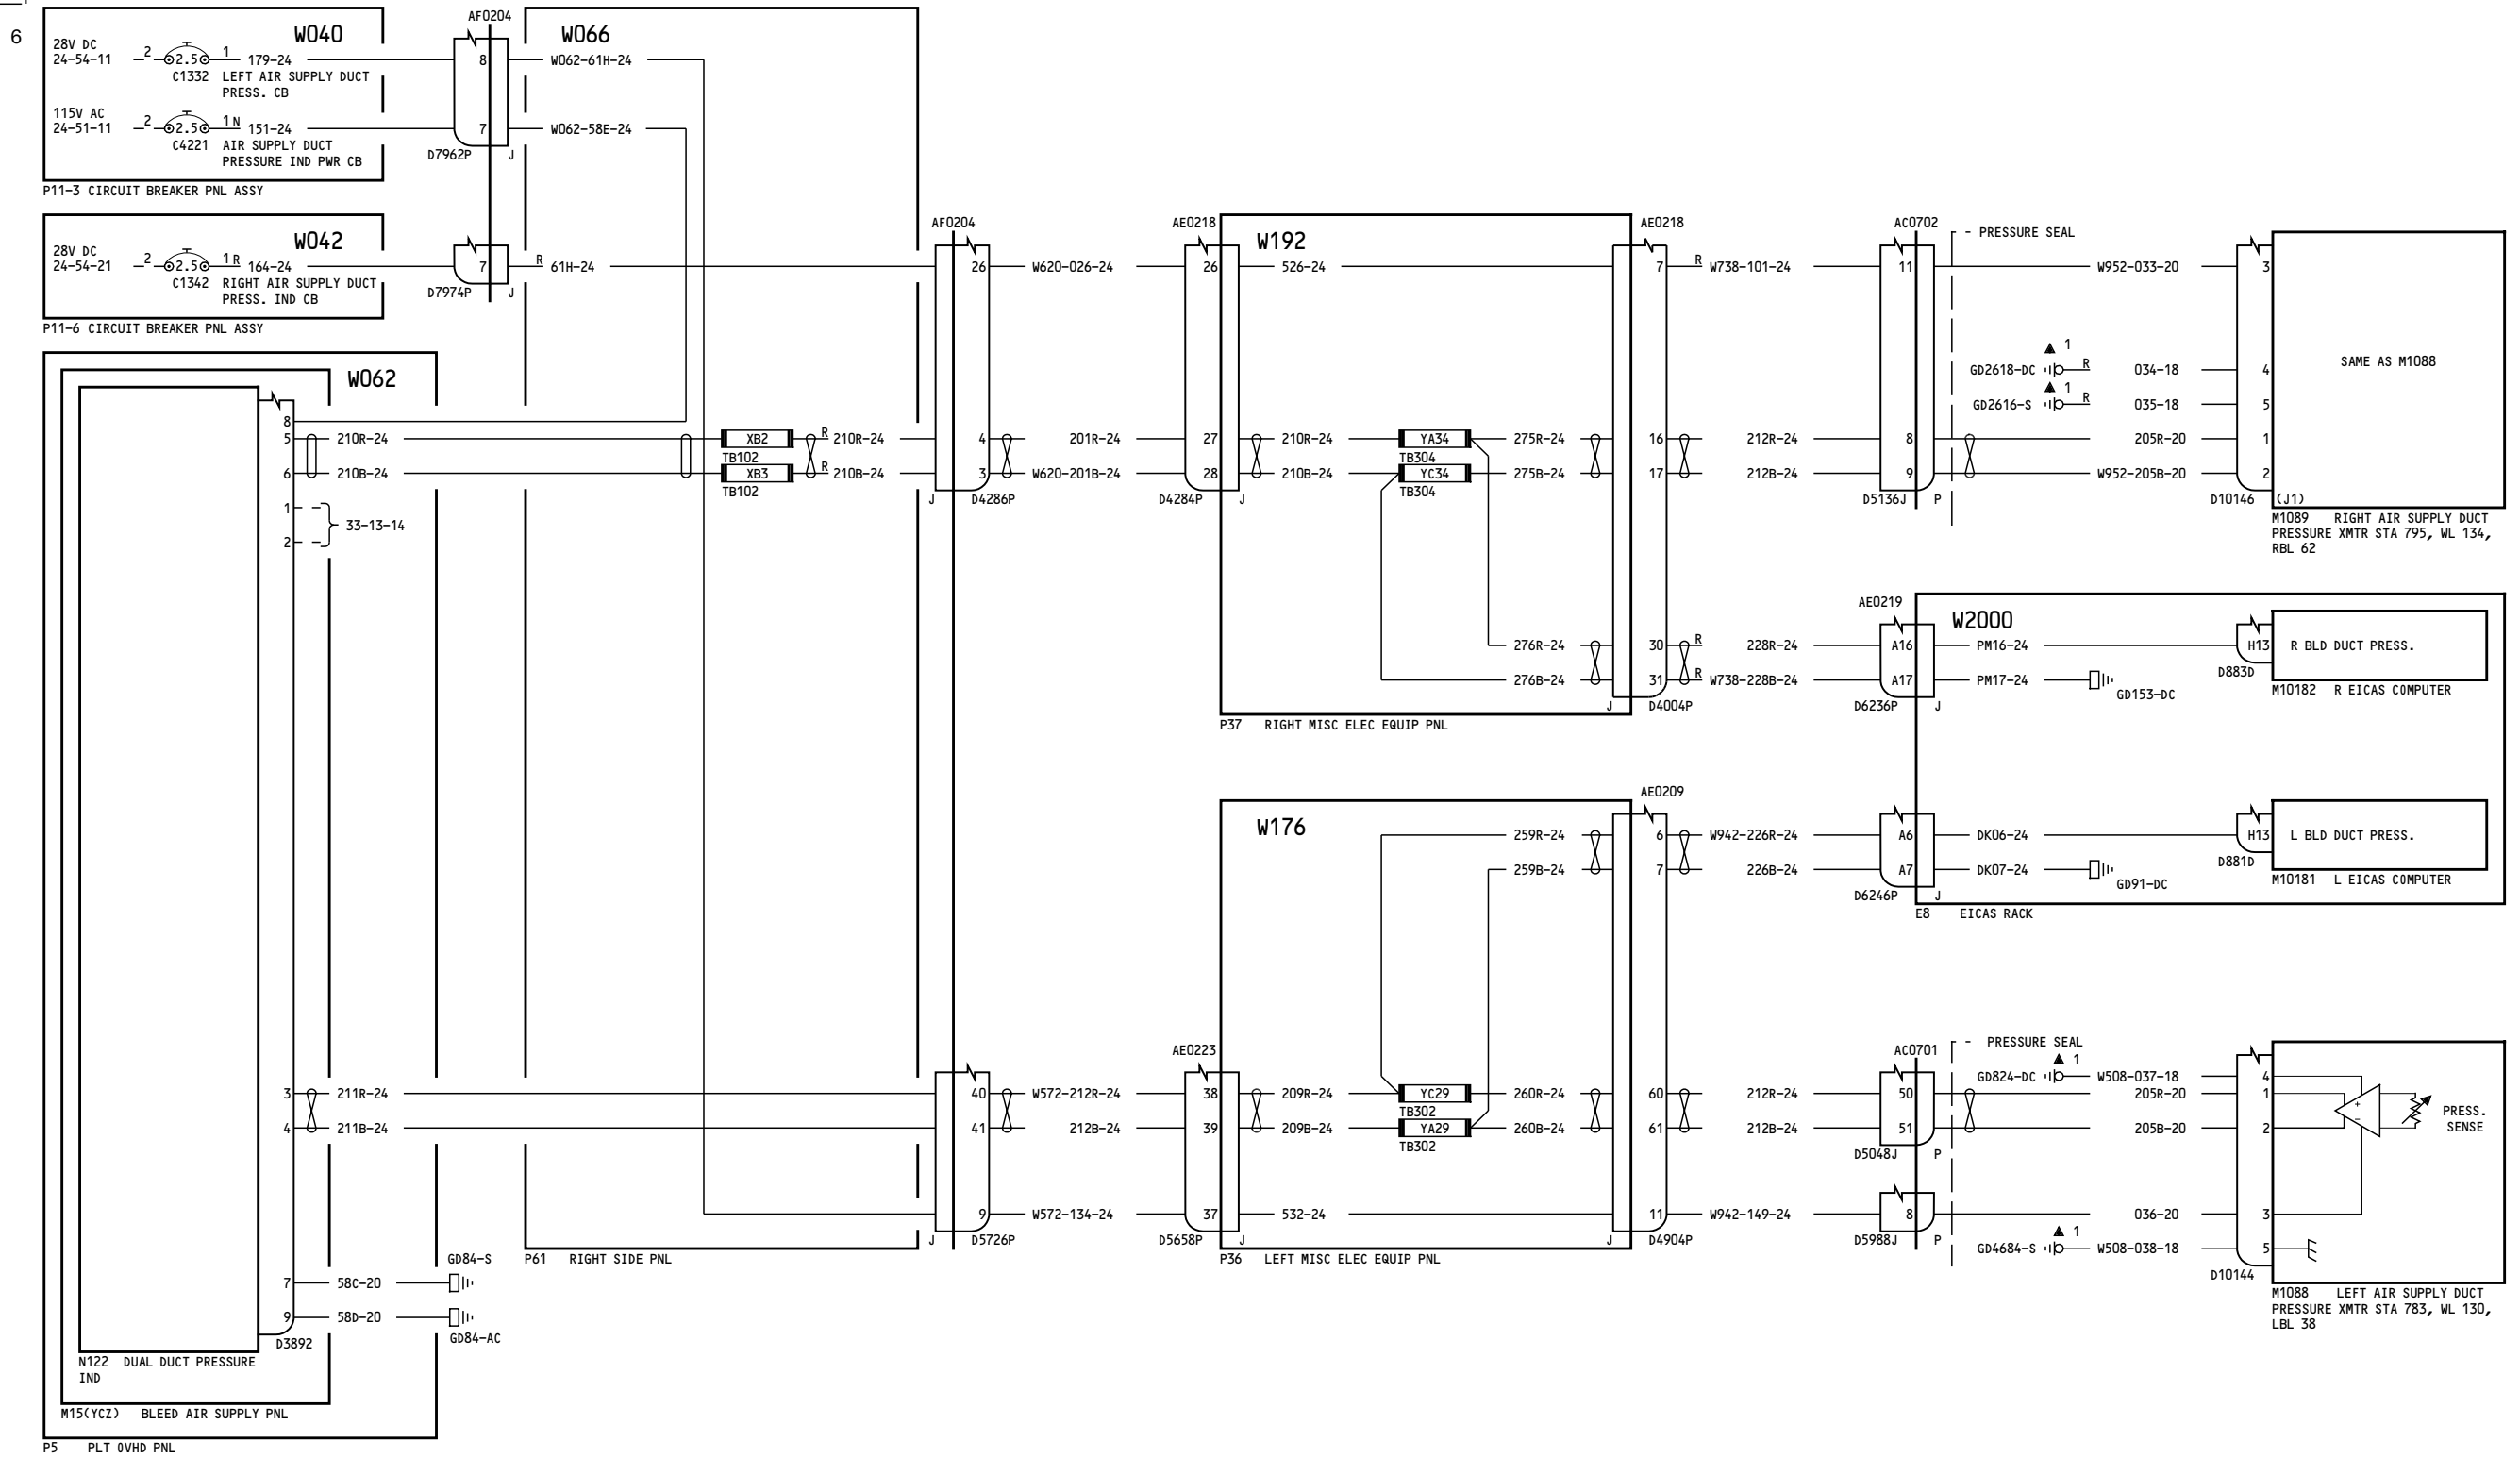

050-099, 163-165, 275-276

**AIR SUPPLY DUCT PRESSURE INDICATION**

**36-21-11**

Page 1

Jan 21/2005


D280T132

**36-21-11**

Page 1

Jan 21/2005



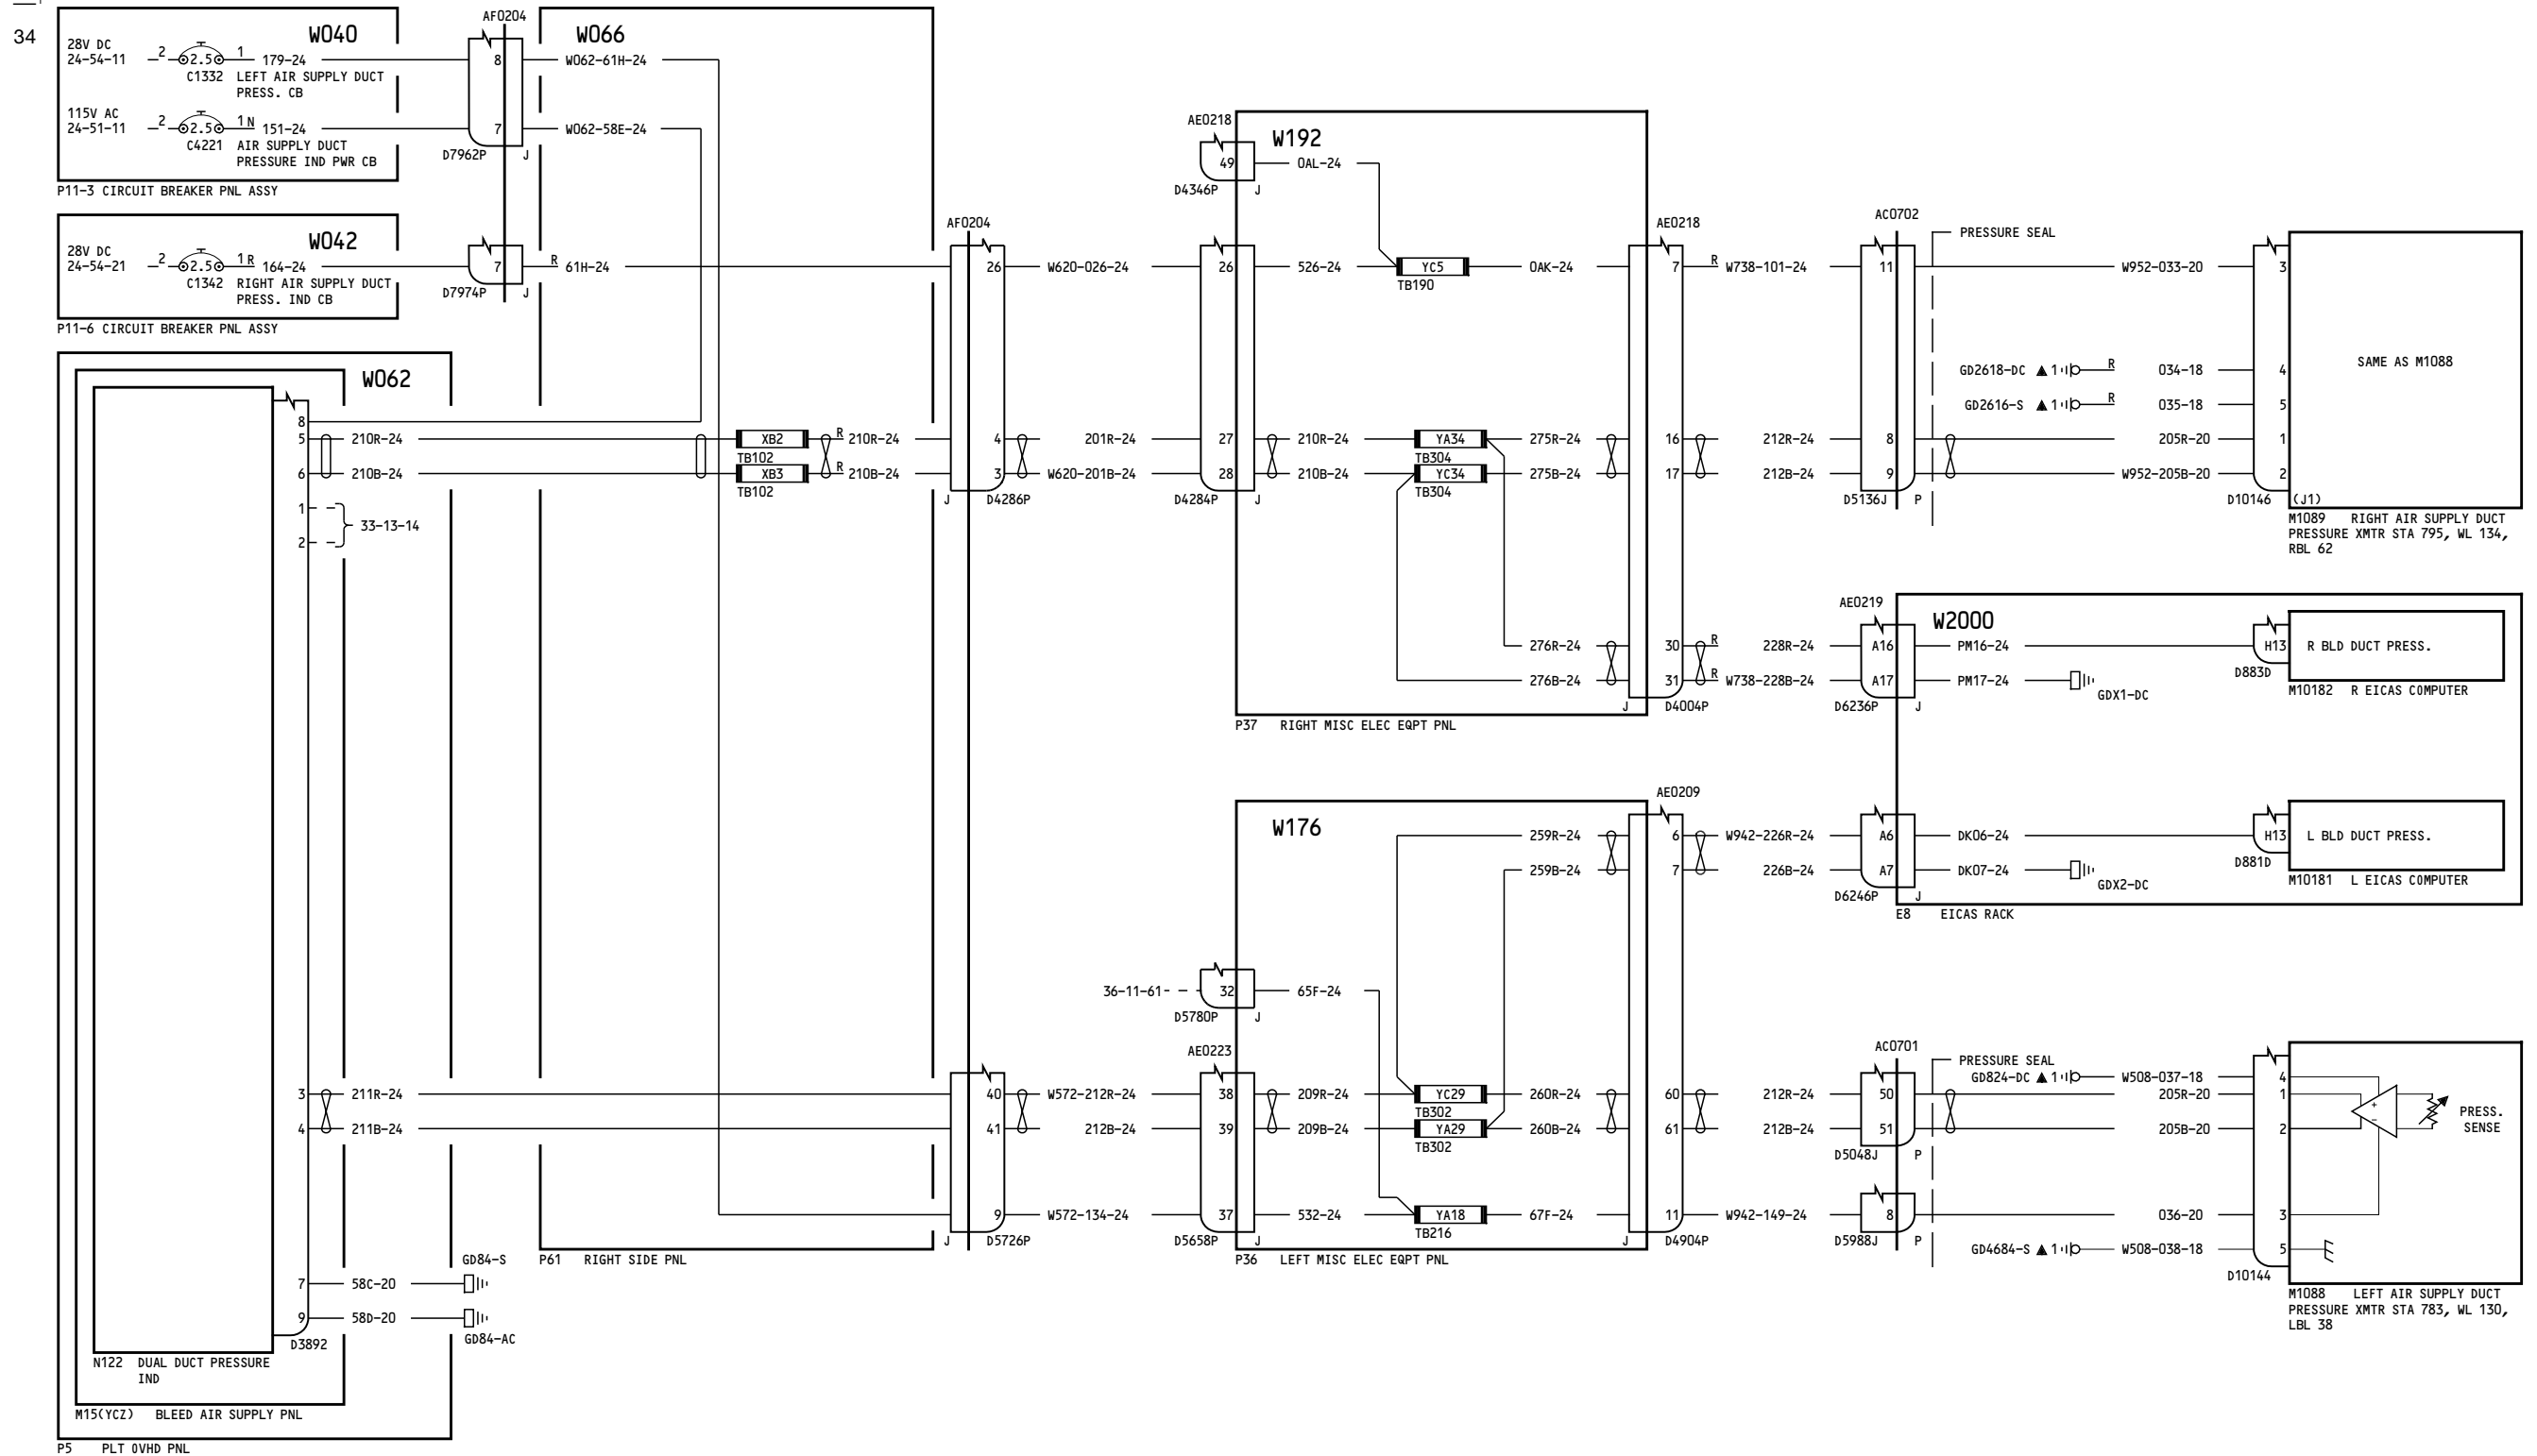

150-155

**AIR SUPPLY DUCT PRESSURE INDICATION**

**36-21-11**

Page 2.1

Jan 21/2005


D280T132

Incorporates  
36-0029 R05

**36-21-11**

Page 2.1

Jan 21/2005

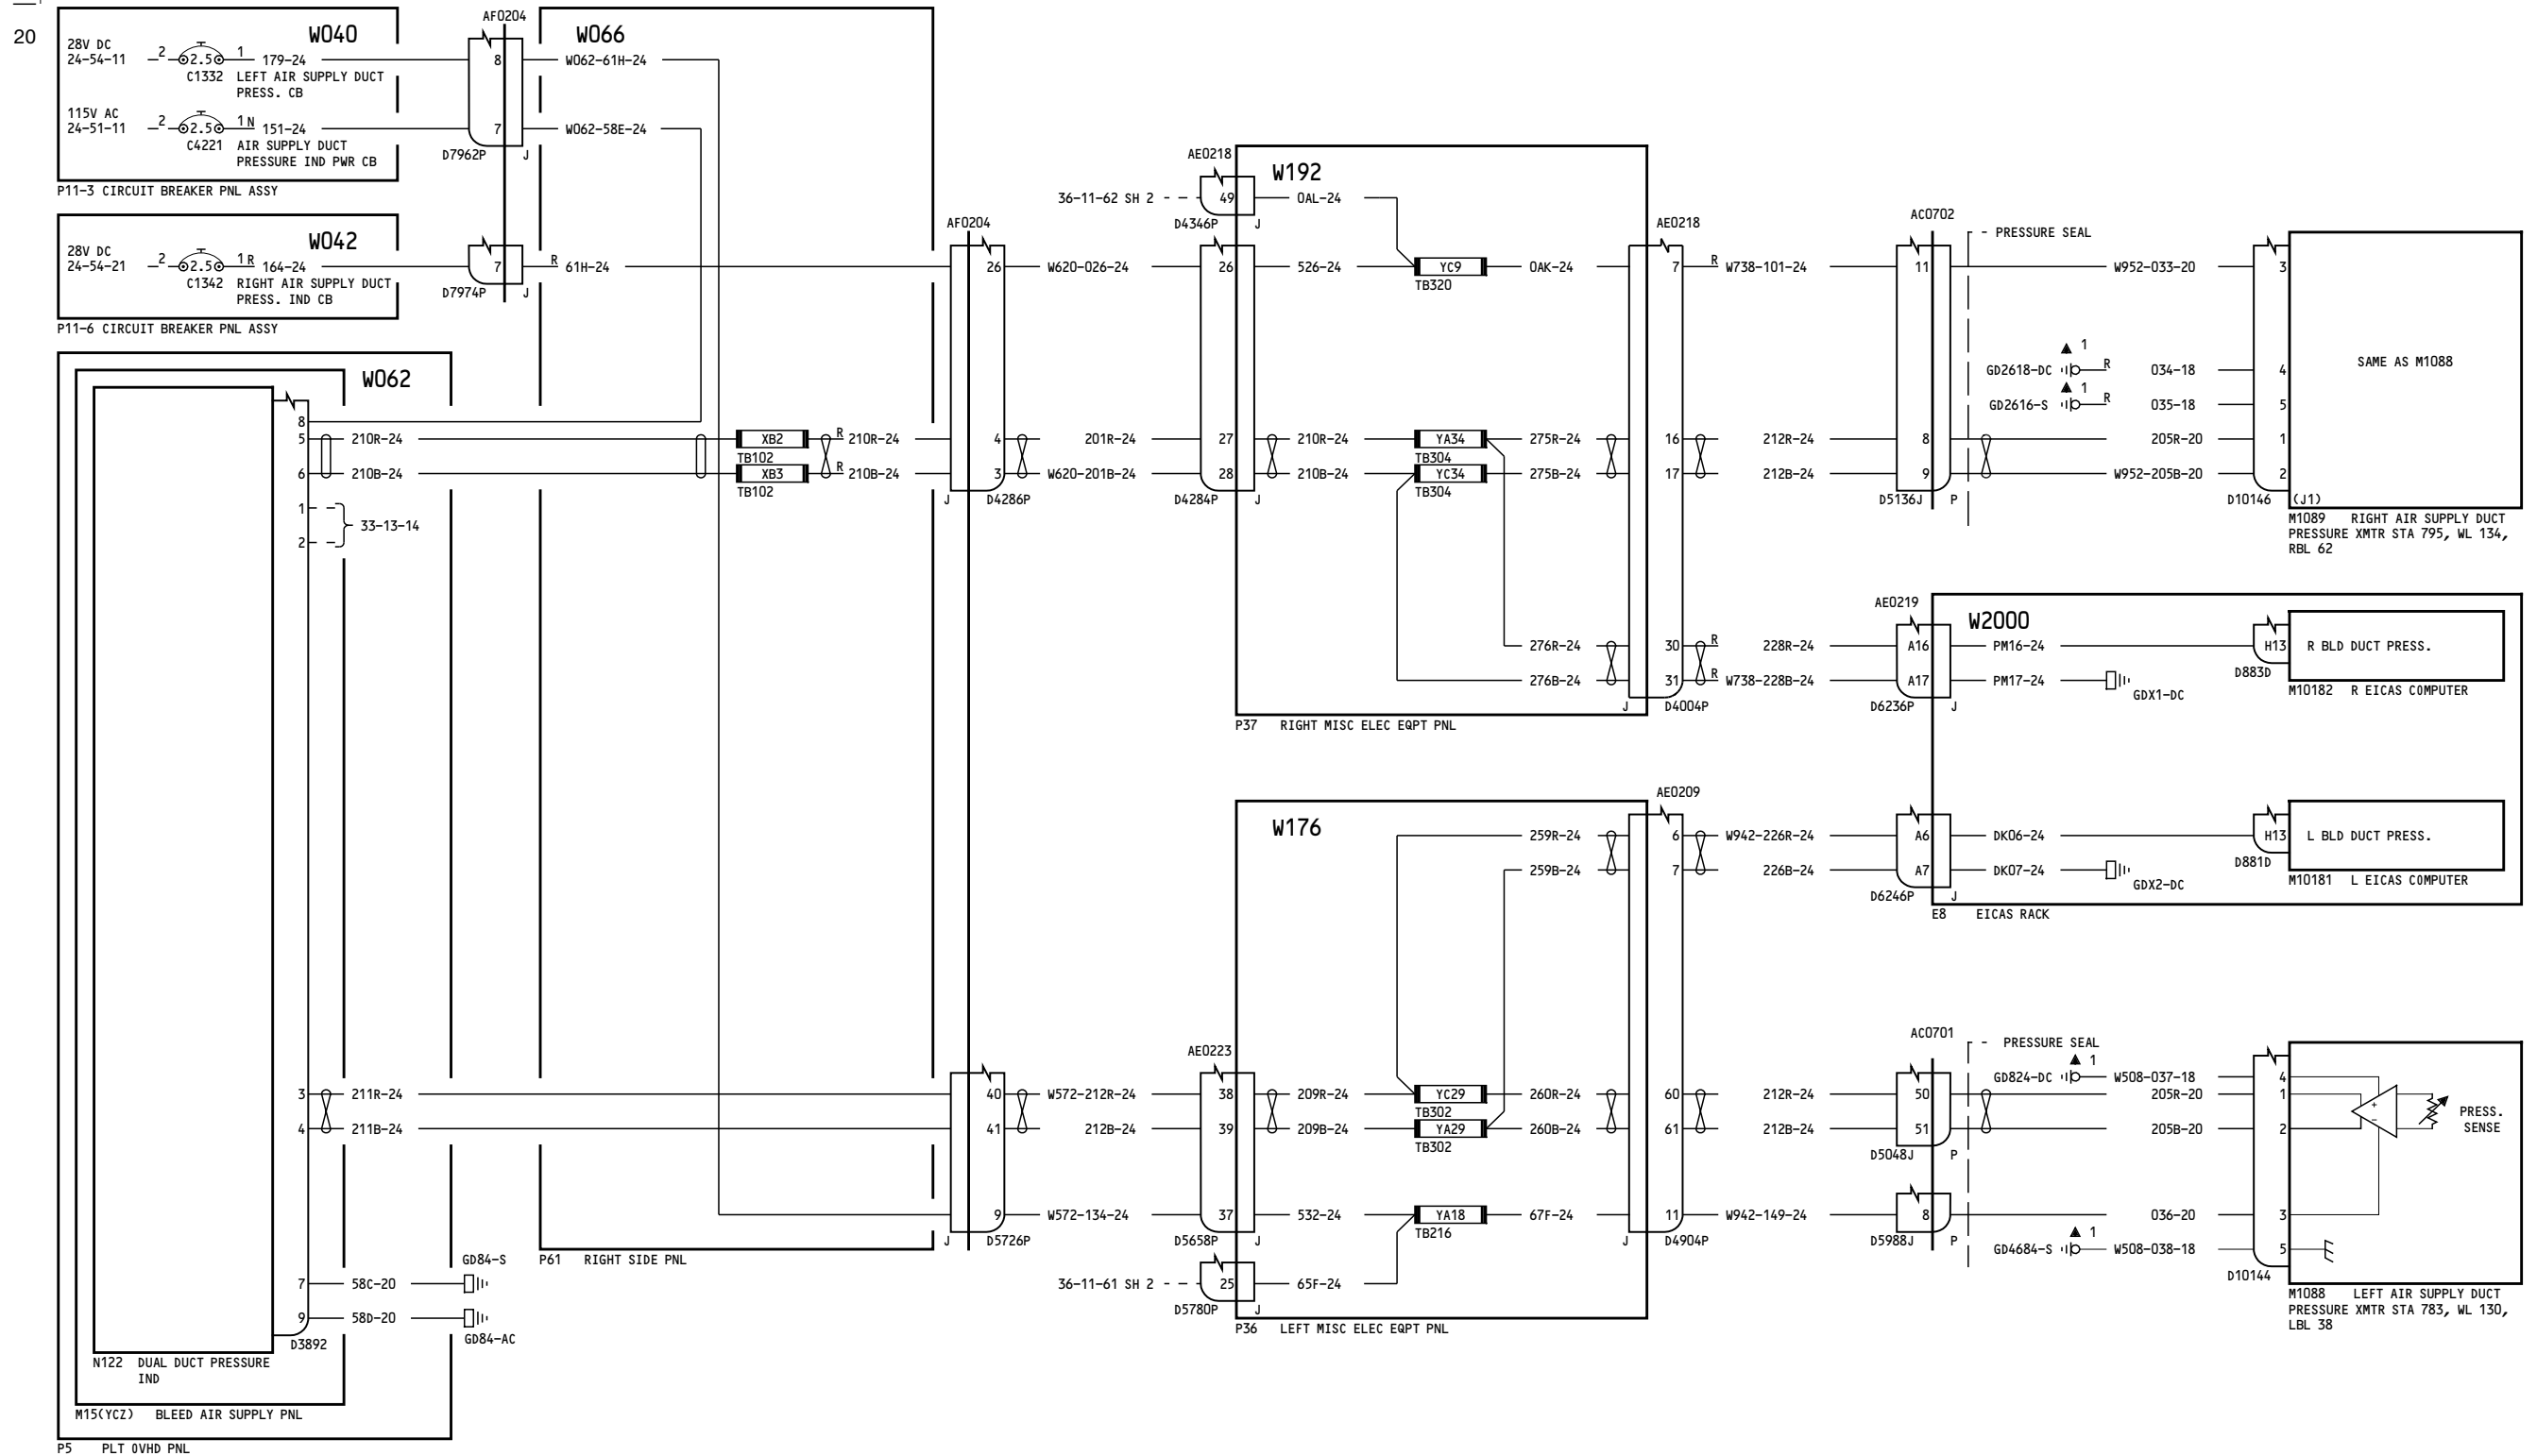

156-157, 166-199, 277-299

**AIR SUPPLY DUCT PRESSURE INDICATION**

**36-21-11**

Page 3


Jan 21/2005


D280T132

**36-21-11**

Page 3

Jan 21/2005

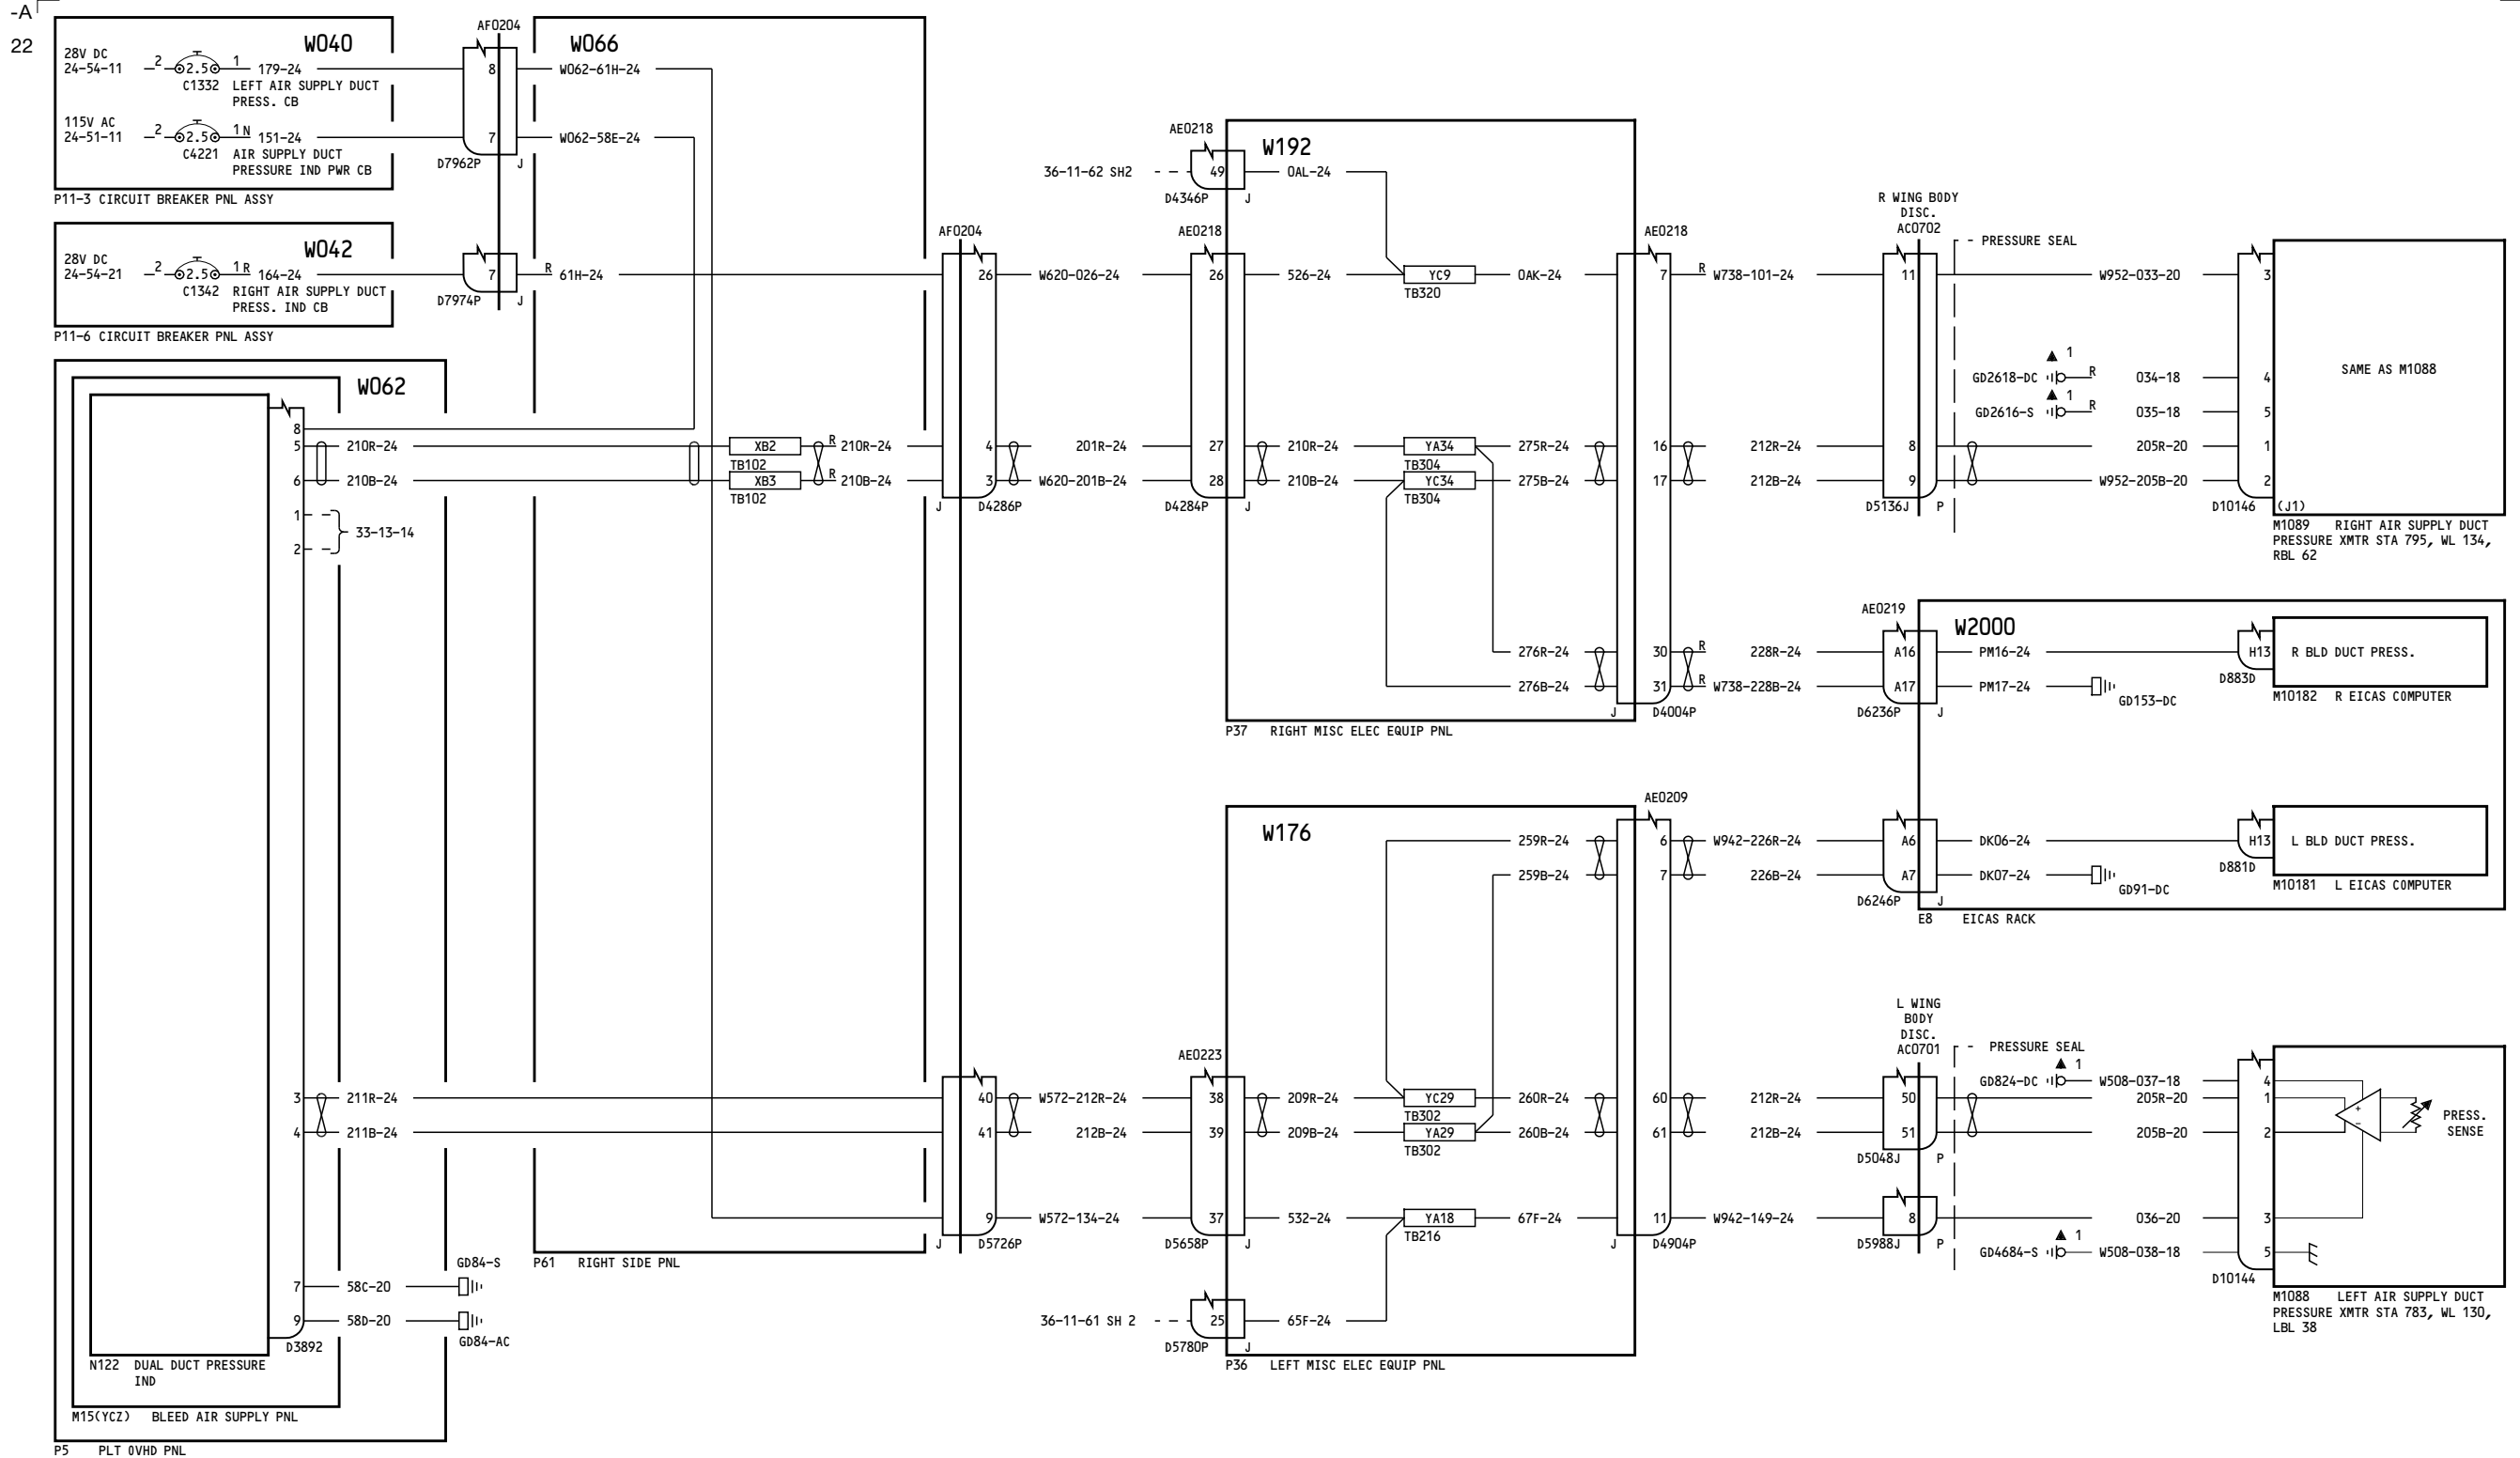

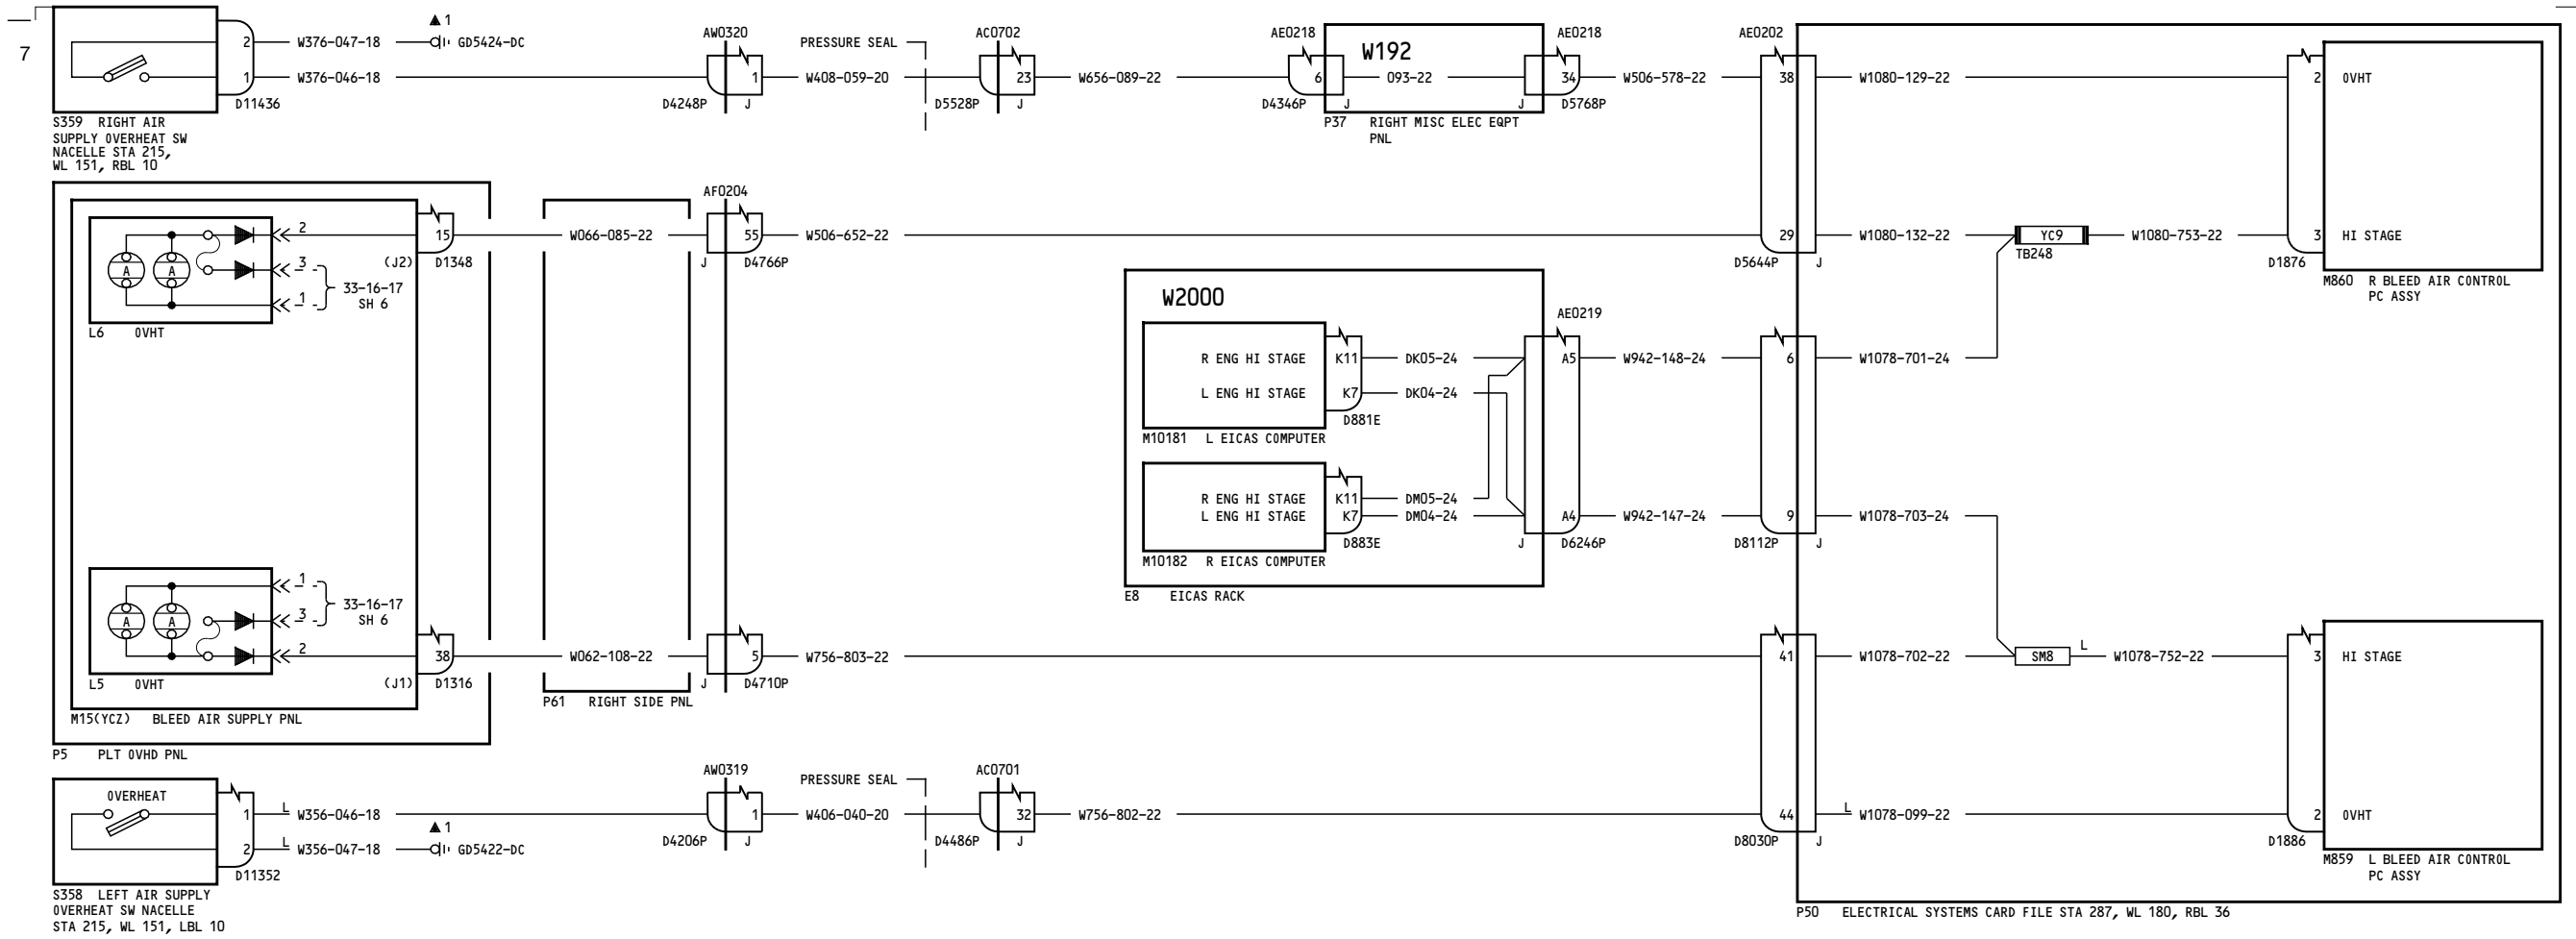


ALL	<b>AIR SUPPLY OVERHEAT INDICATION</b>
	D280T132

**36-22-11**

Page 1  
Jan 21/2005

**36-22-11**

Page 1  
Jan 21/2005

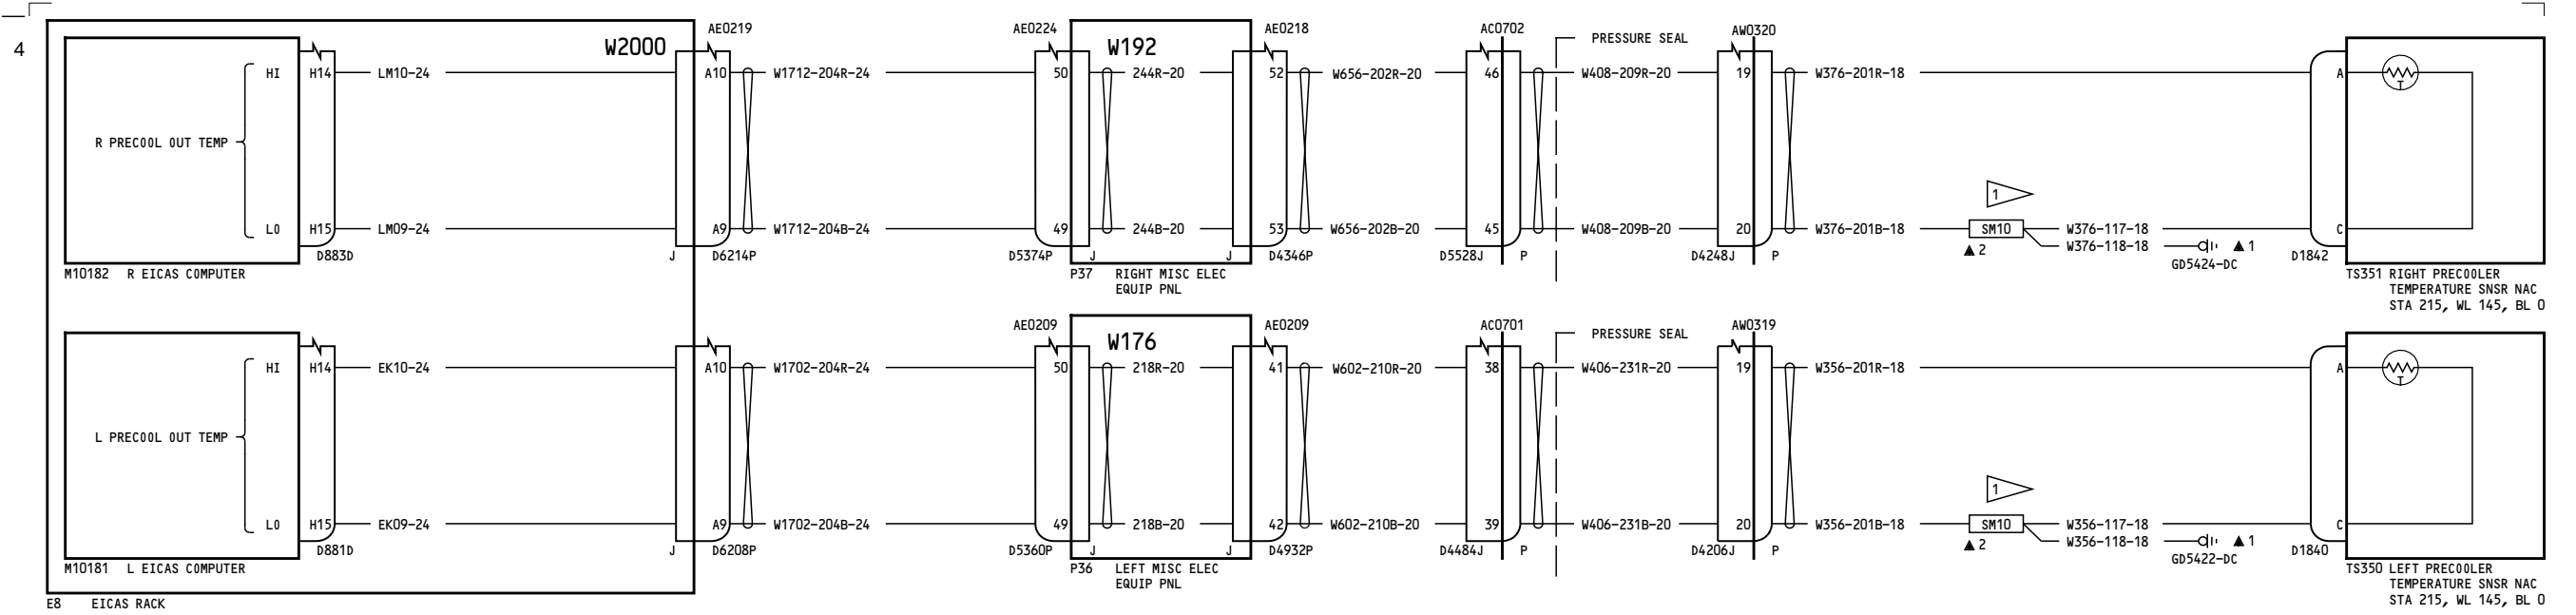

NOTES:

1 SPLICE SHALL BE LOCATED WITHIN 1 FT OF TEMP SENSOR

ALL

**BLEED AIR PRECOOLER-  
LEFT & RIGHT TEMPERATURE  
INDICATION**

D280T132

**36-22-21**


Page 1

Jan 21/2005

**36-22-21**

Page 1

Jan 21/2005

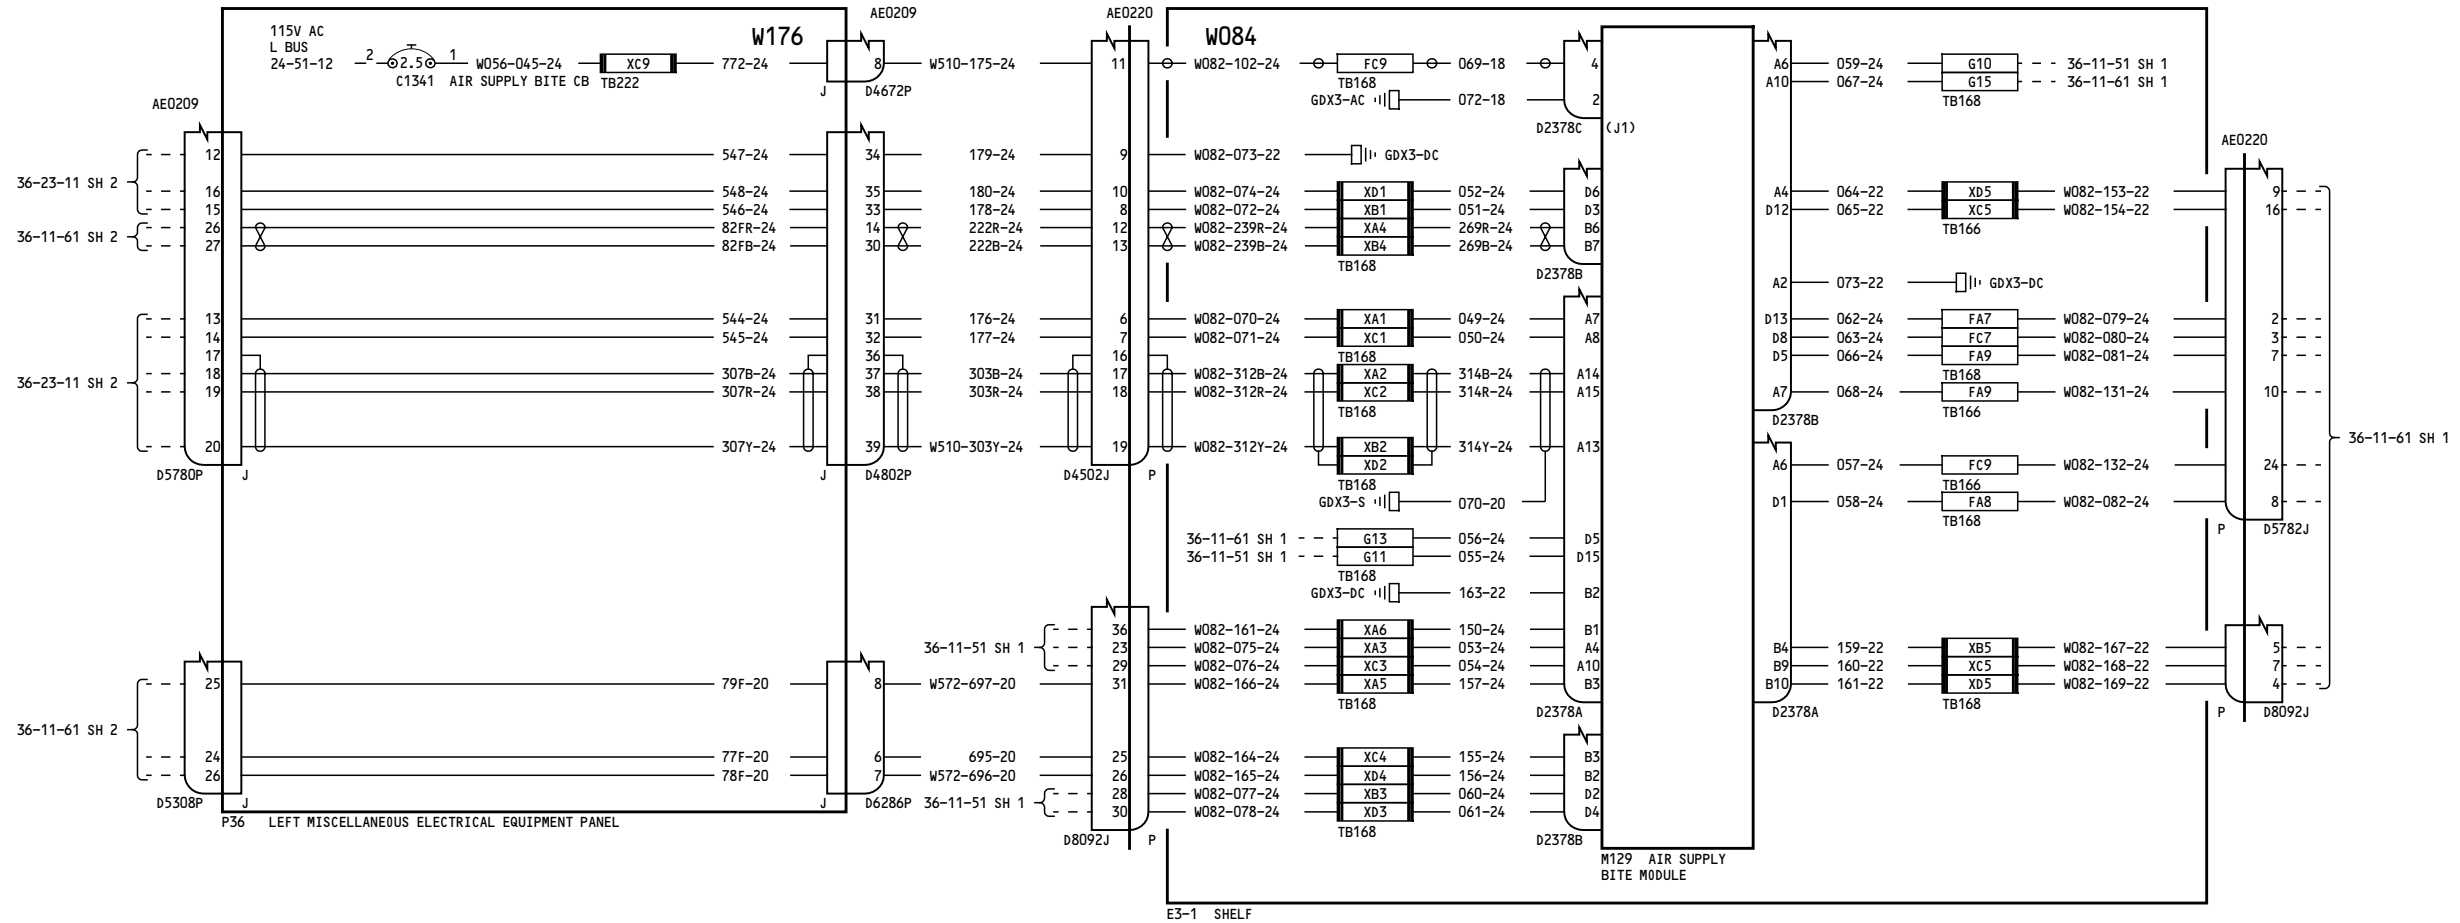

050-051, 163-165

**AIR SUPPLY BUILT-IN TEST  
EQUIPMENT-  
LEFT**

D280T132


**36-23-11**

Page 1.1  
Sheet 1  
Jan 21/2005

Incorporates  
▶ 36-0029 R05

**36-23-11**

Page 1.1  
Sheet 1  
Jan 21/2005

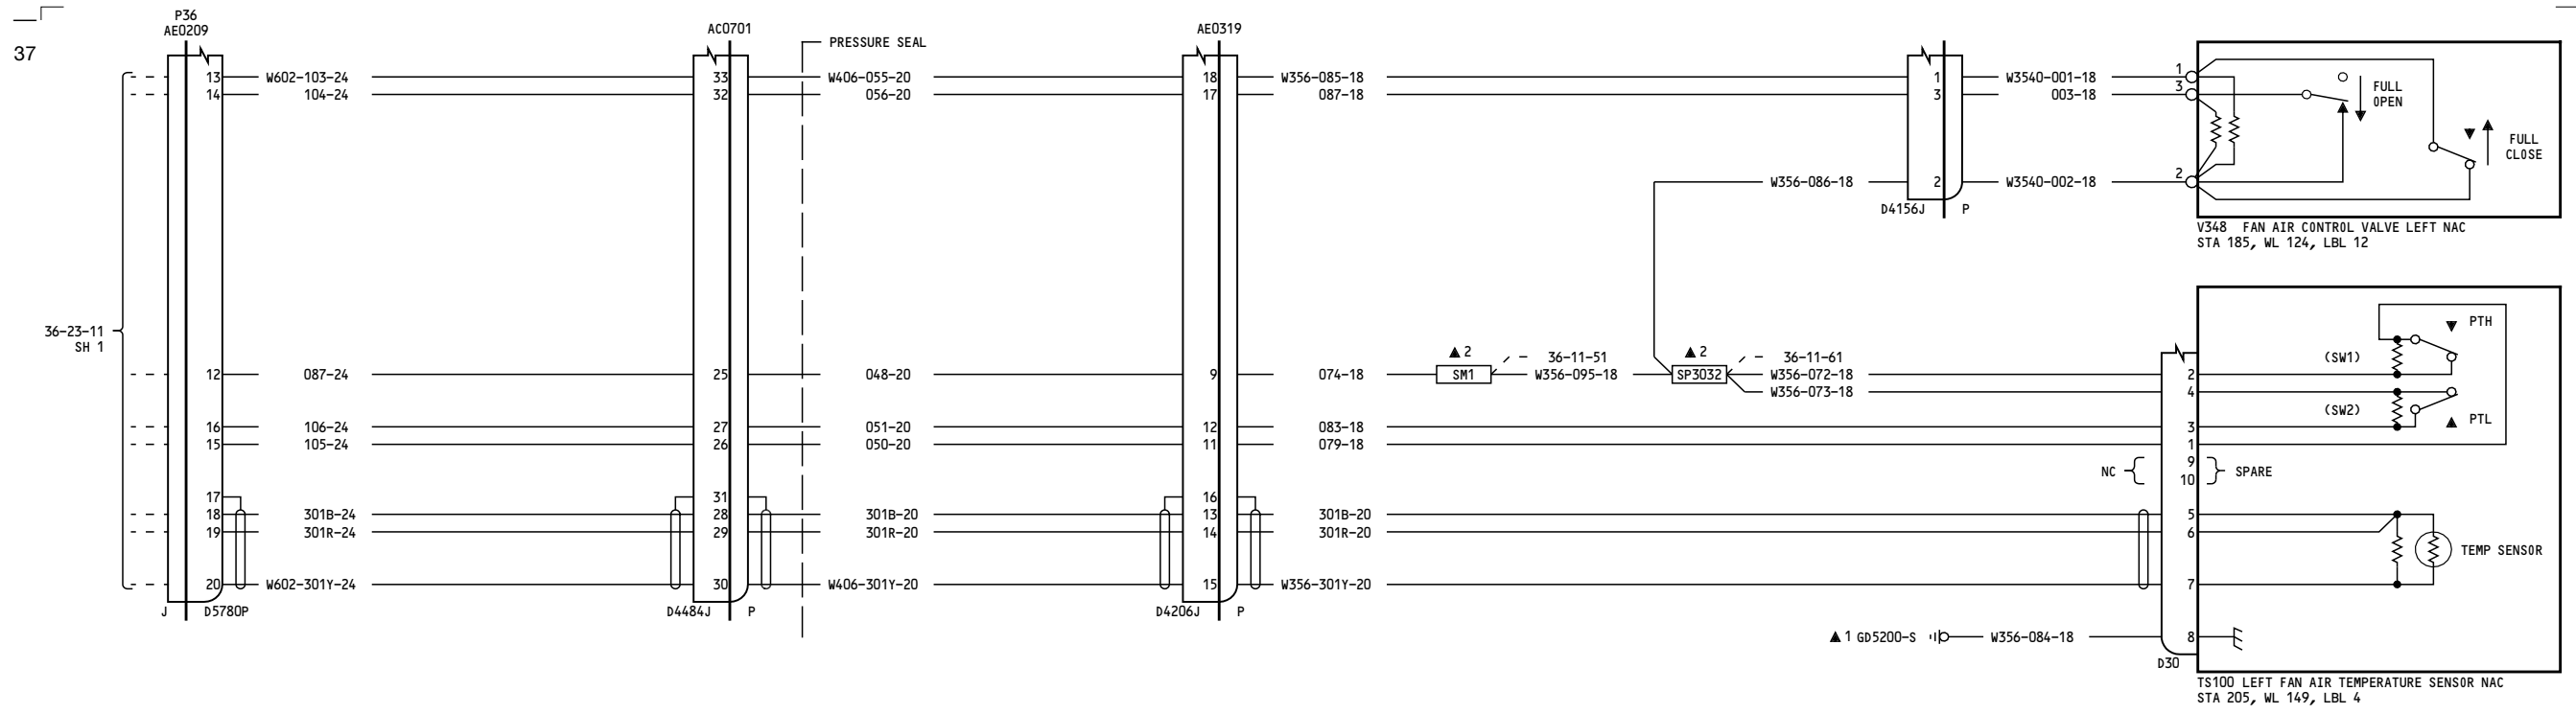

050-051, 163-165

**AIR SUPPLY BUILT-IN TEST  
EQUIPMENT-  
LEFT**

D280T132


**36-23-11**

Page 1.1  
Sheet 2  
Jan 21/2005

Incorporates  
36-0029 R05

**36-23-11**

Page 1.1  
Sheet 2  
Jan 21/2005

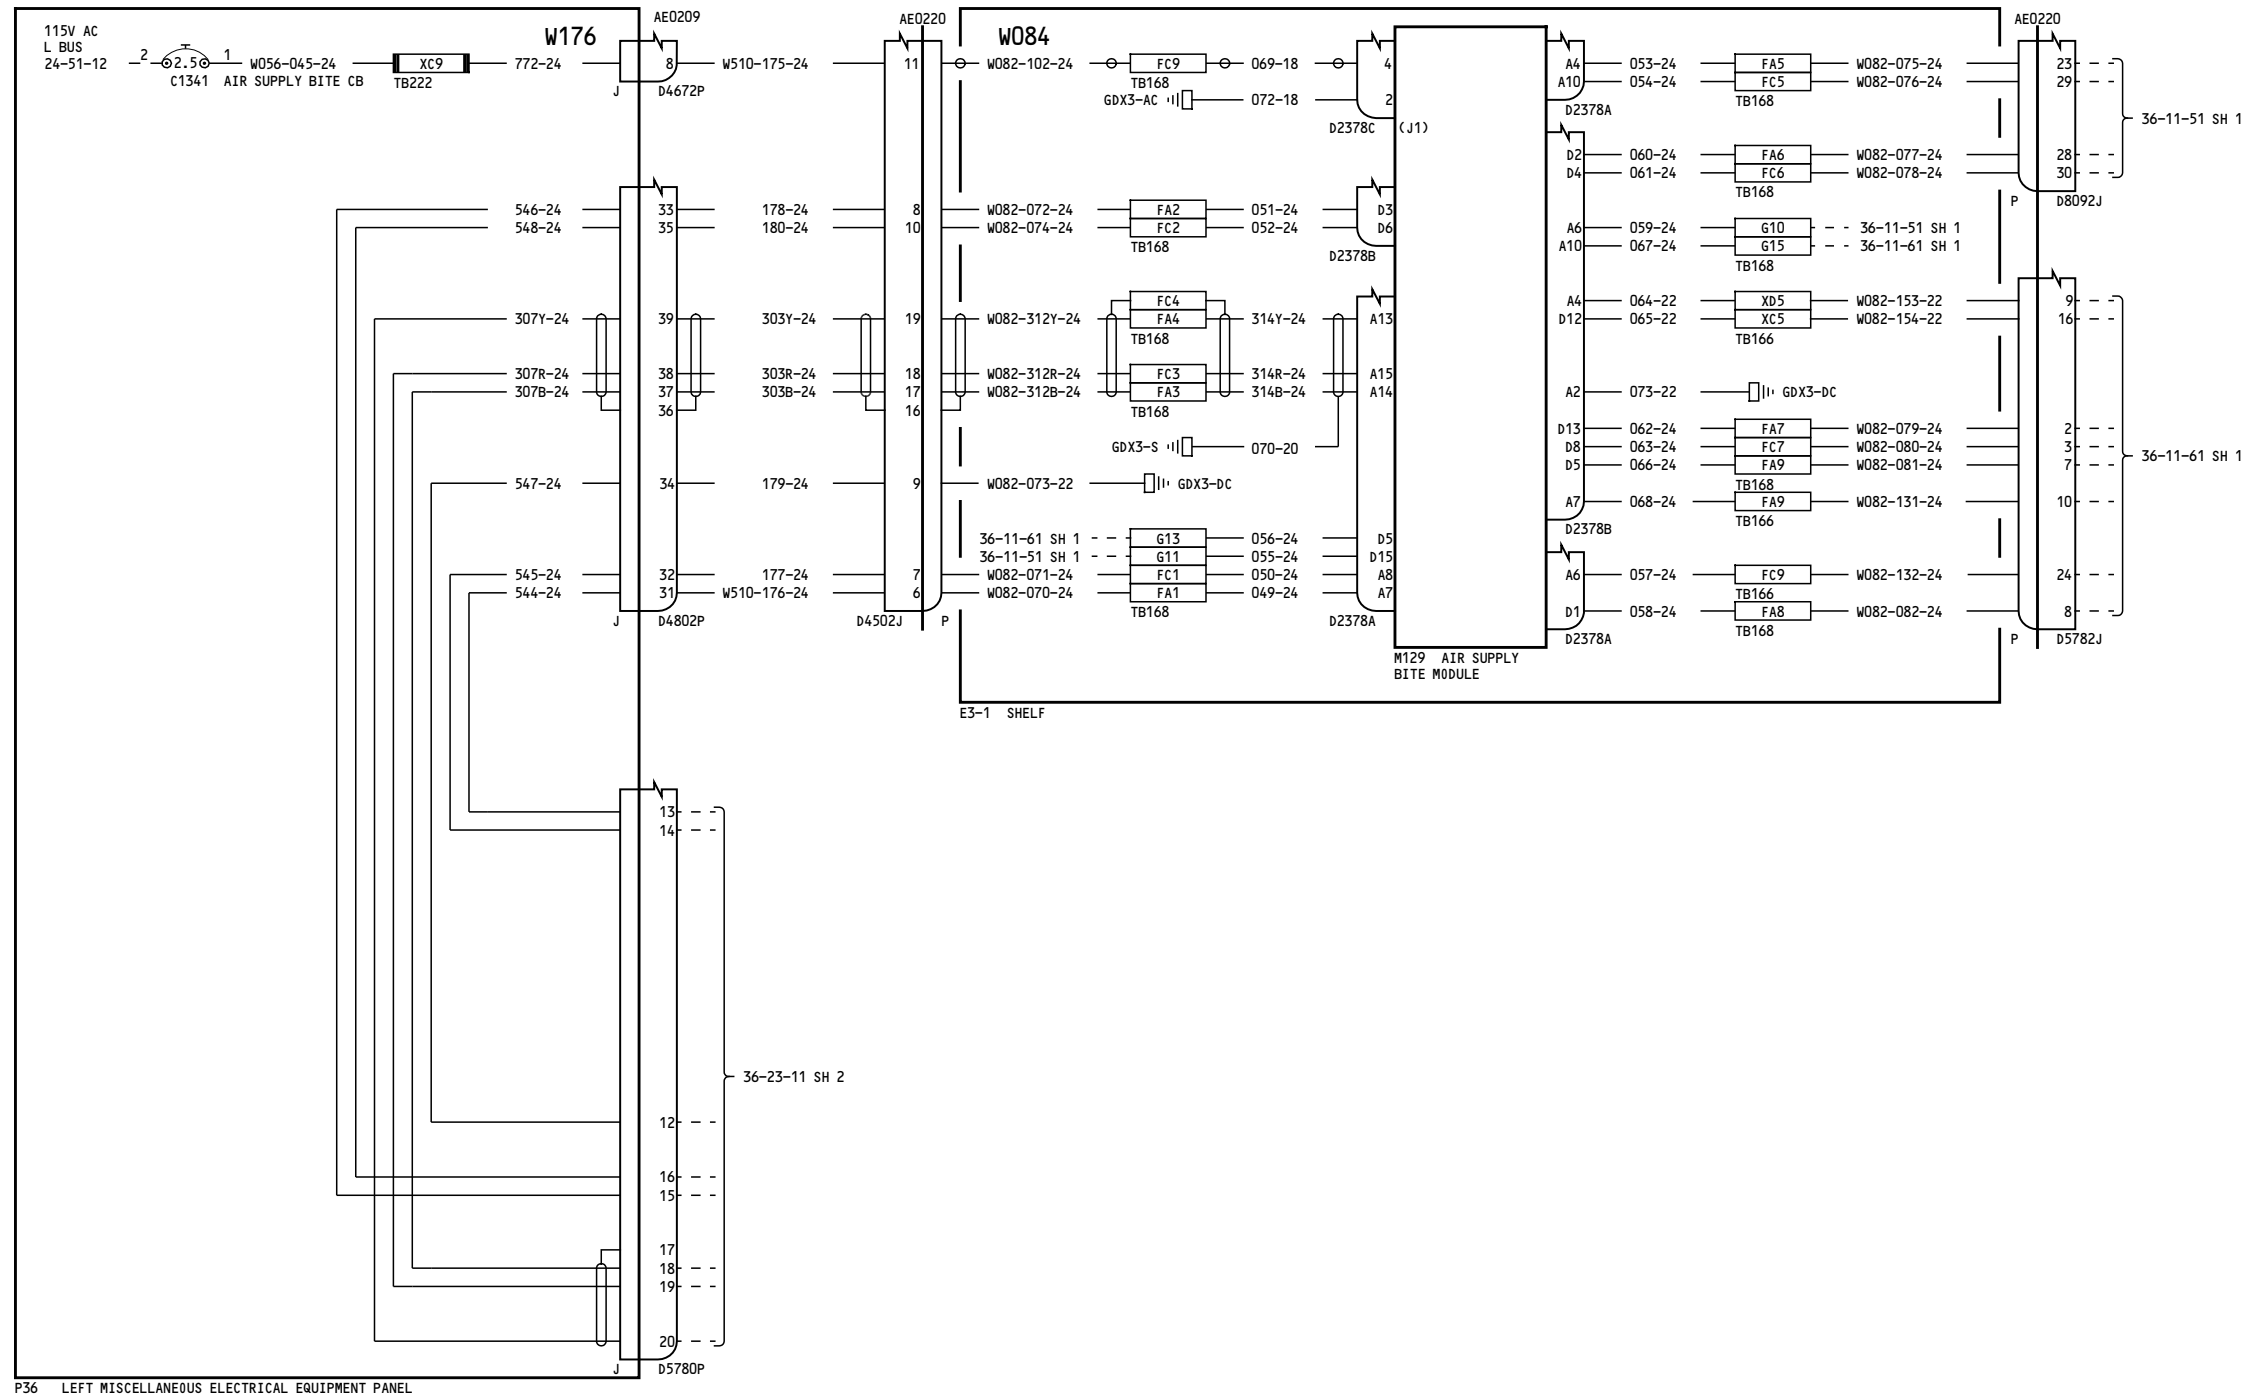

150-155, 275-276

**AIR SUPPLY BUILT-IN TEST  
EQUIPMENT-  
LEFT**

D280T132


**36-23-11**

Page 2  
Sheet 1  
Jan 21/2005

**36-23-11**

Page 2  
Sheet 1  
Jan 21/2005



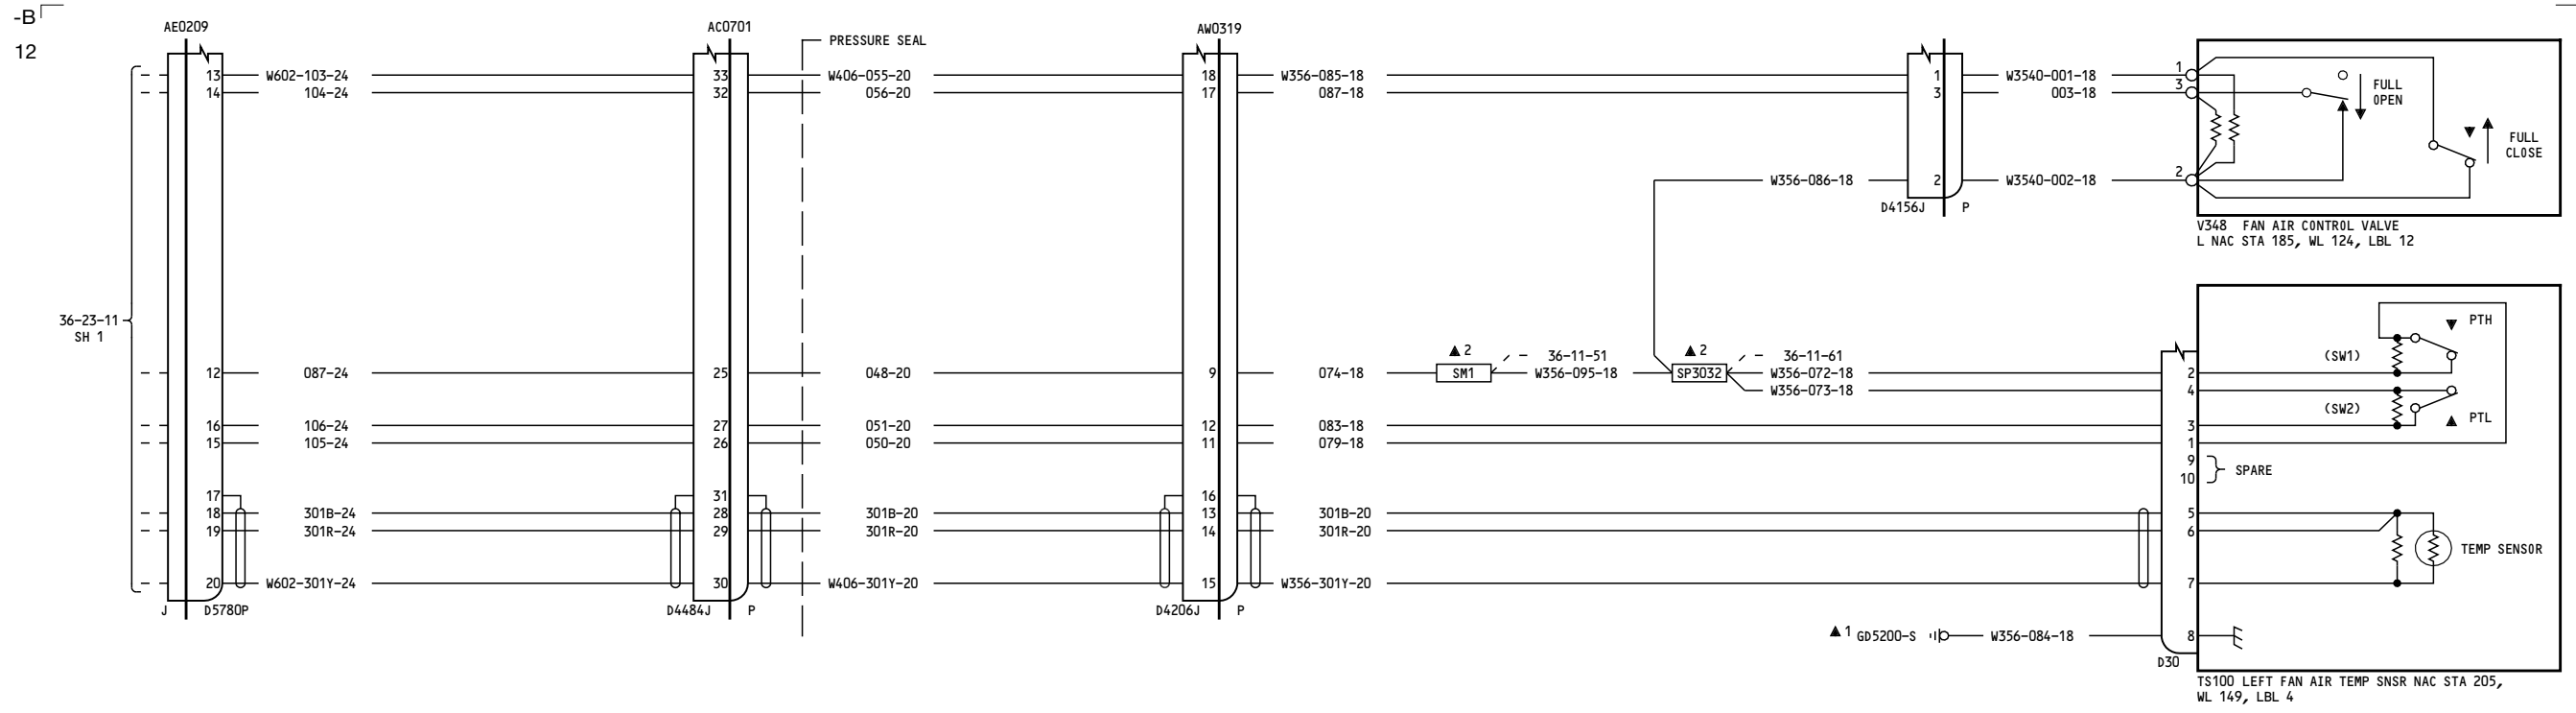

150-155, 275-276

**AIR SUPPLY BUILT-IN TEST  
EQUIPMENT-  
LEFT**


D280T132


**36-23-11**


Page 2  
Sheet 2  
Jan 21/2005

**36-23-11**

Page 2  
Sheet 2  
Jan 21/2005

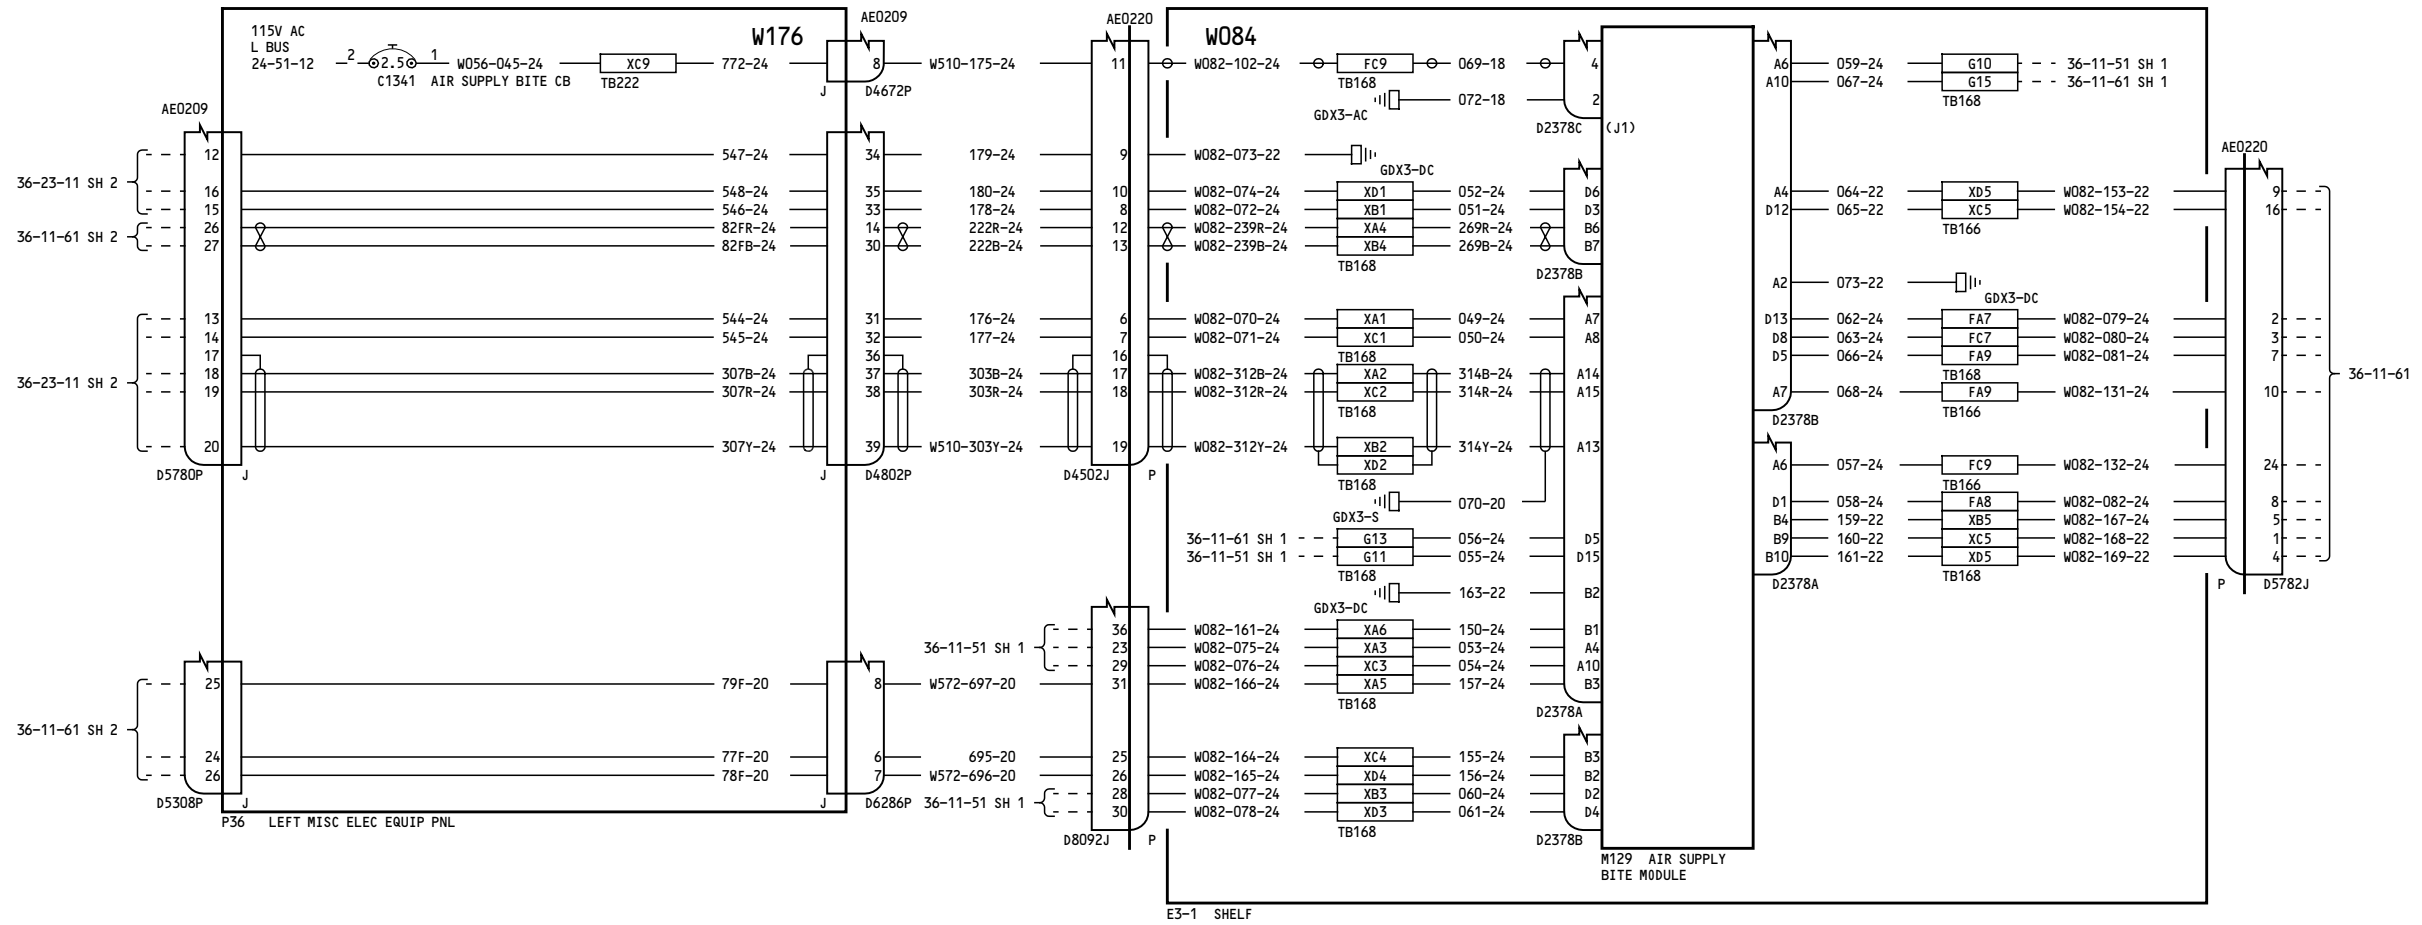

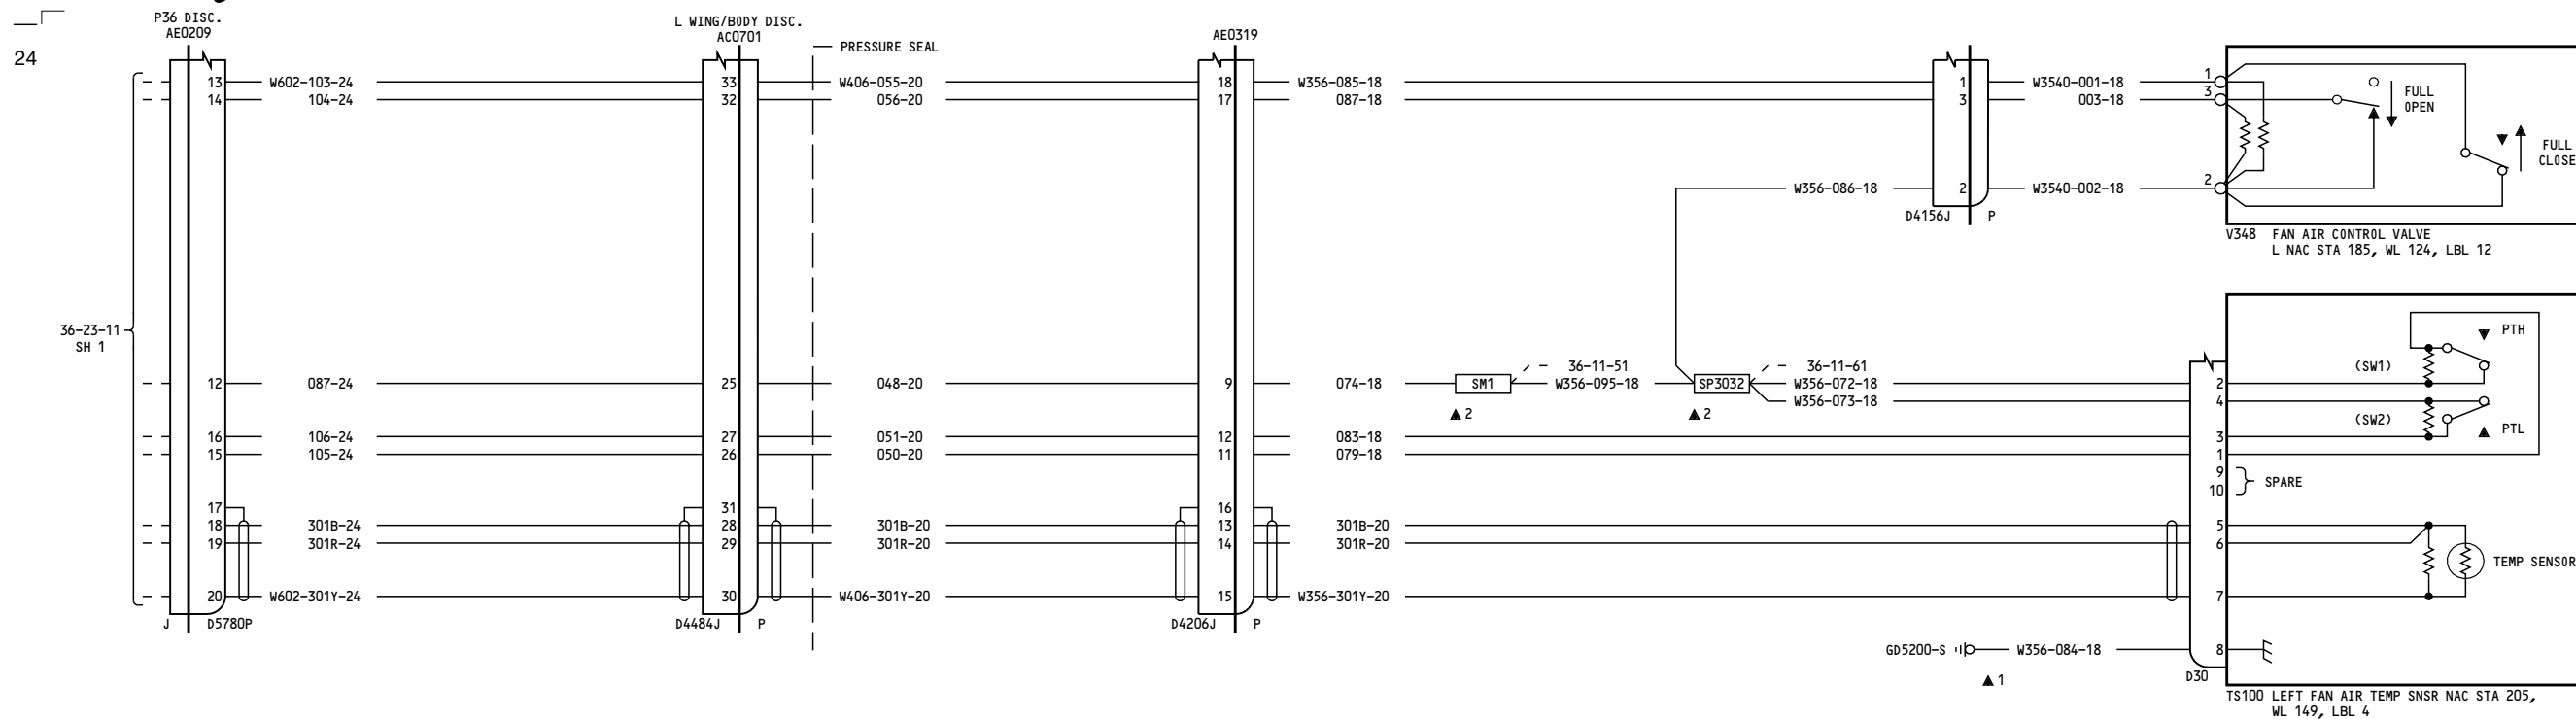

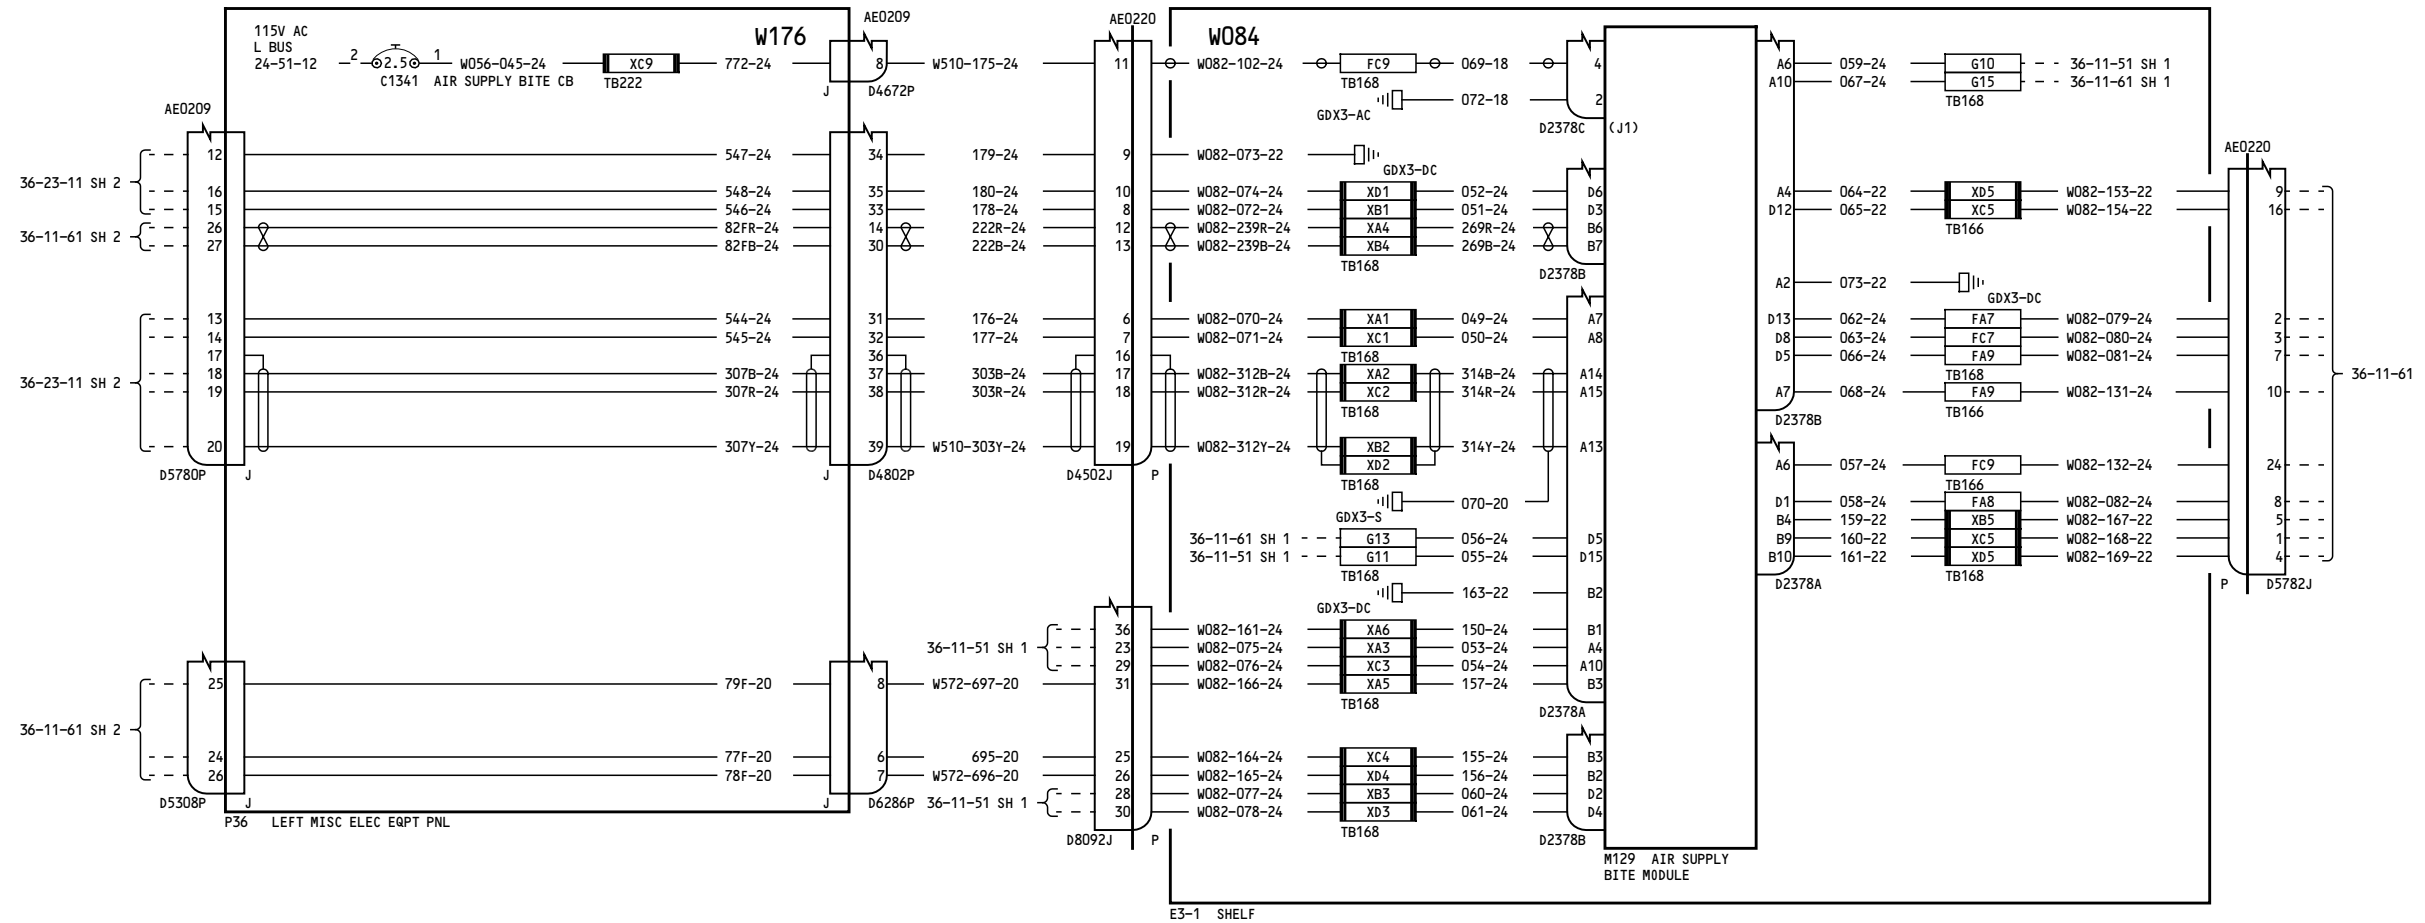

157, 167-199, 277-299

**AIR SUPPLY BUILT-IN TEST  
EQUIPMENT-  
LEFT**


D280T132


**36-23-11**


Page 4  
Sheet 1  
Jan 21/2005


**36-23-11**

Page 4  
Sheet 1  
Jan 21/2005

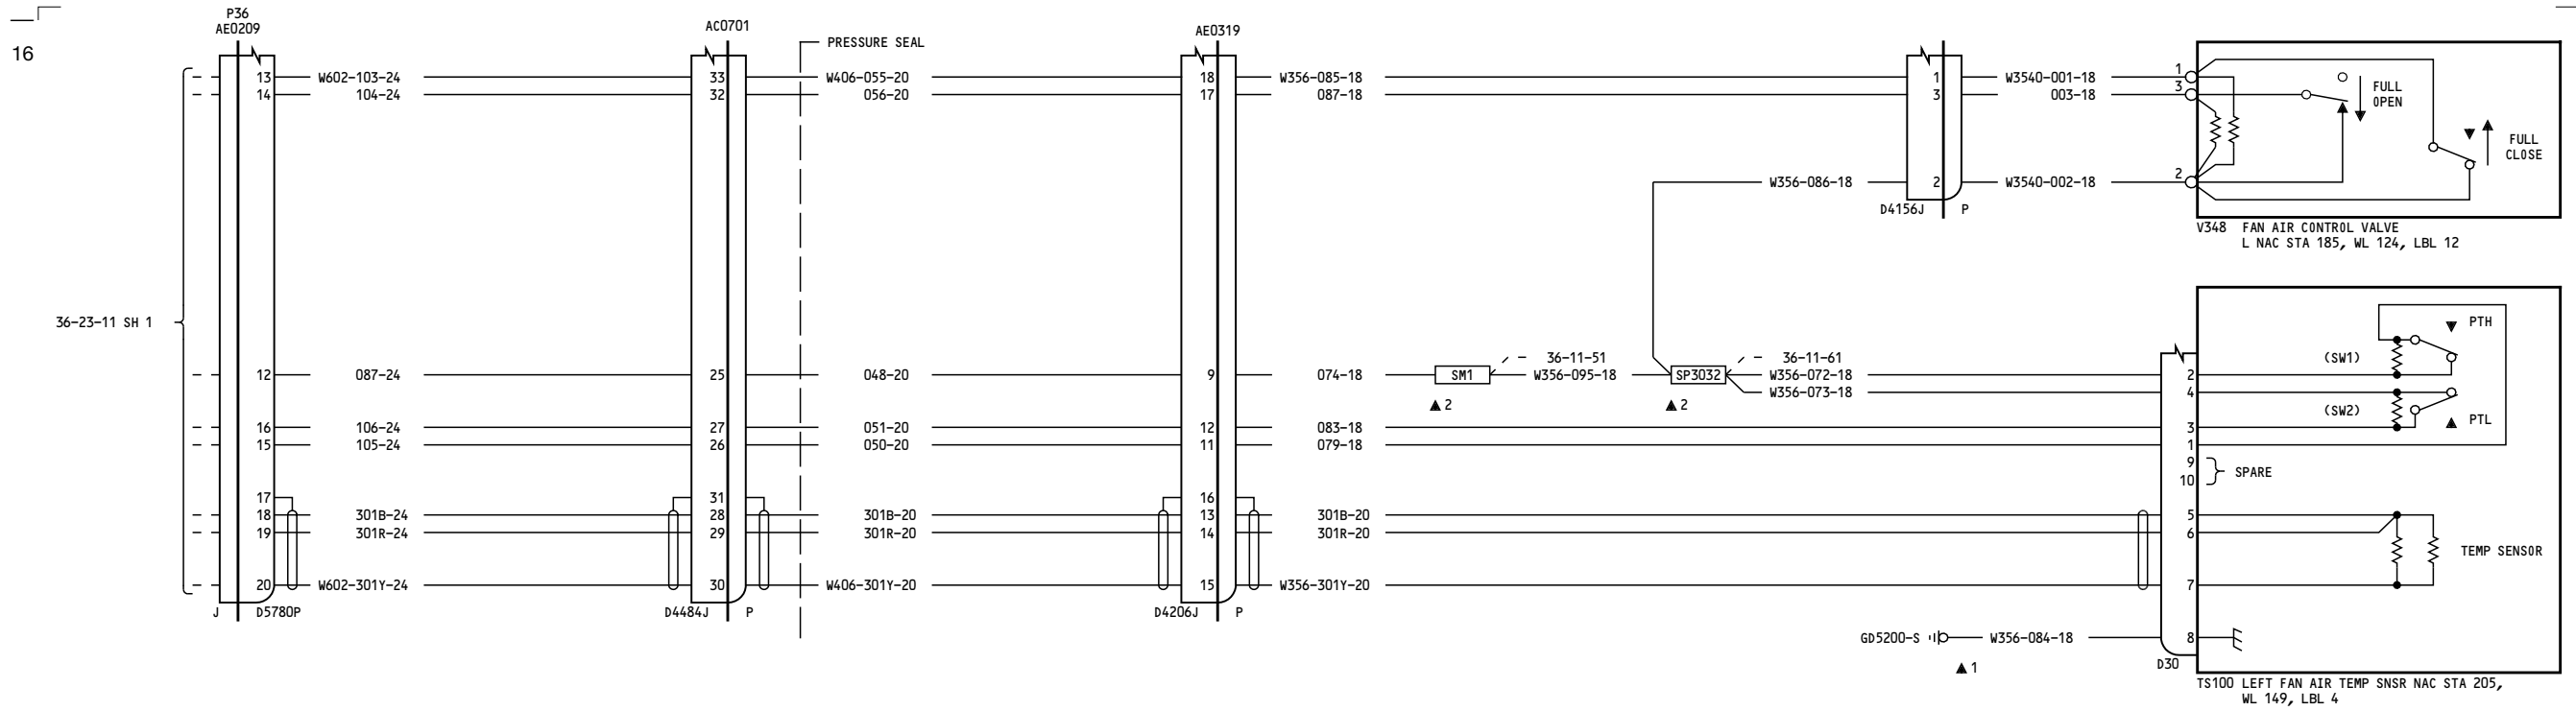

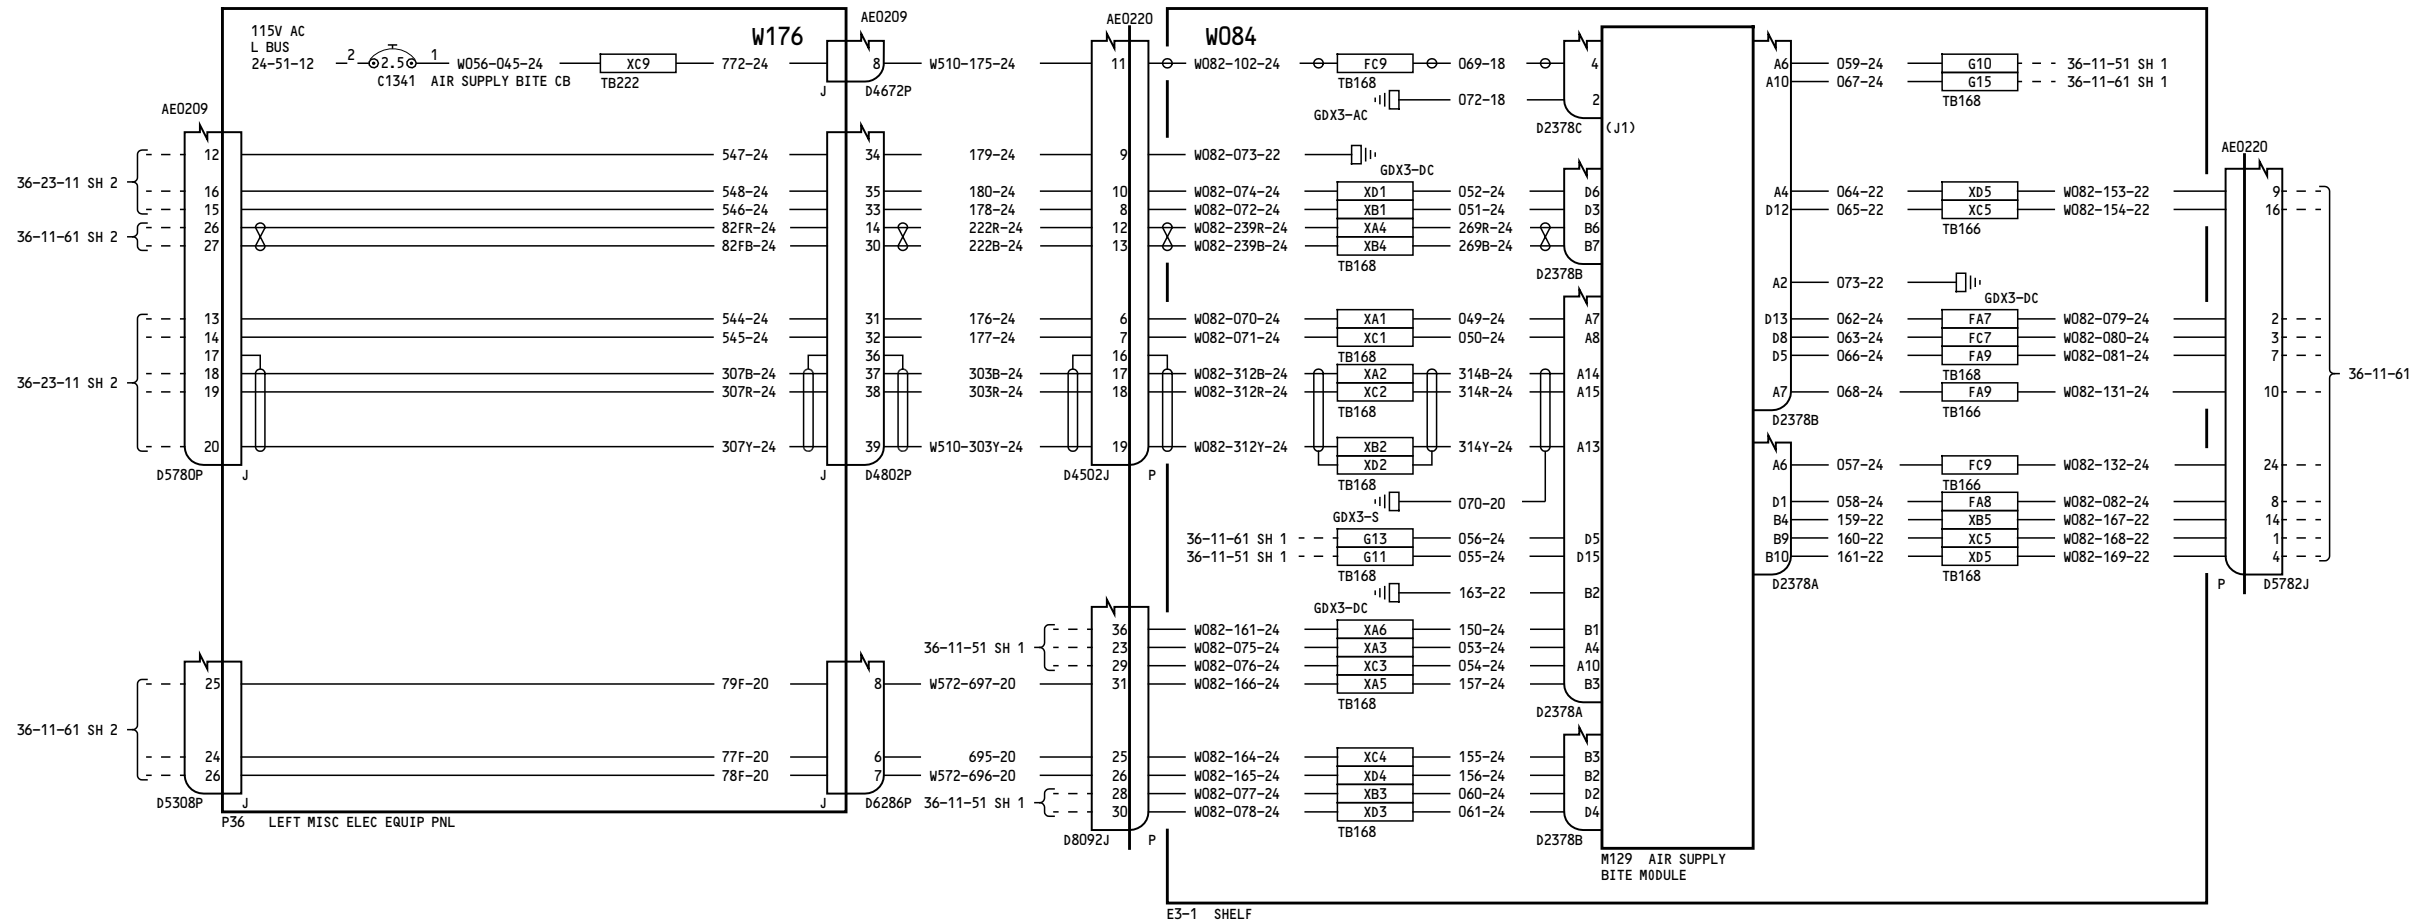

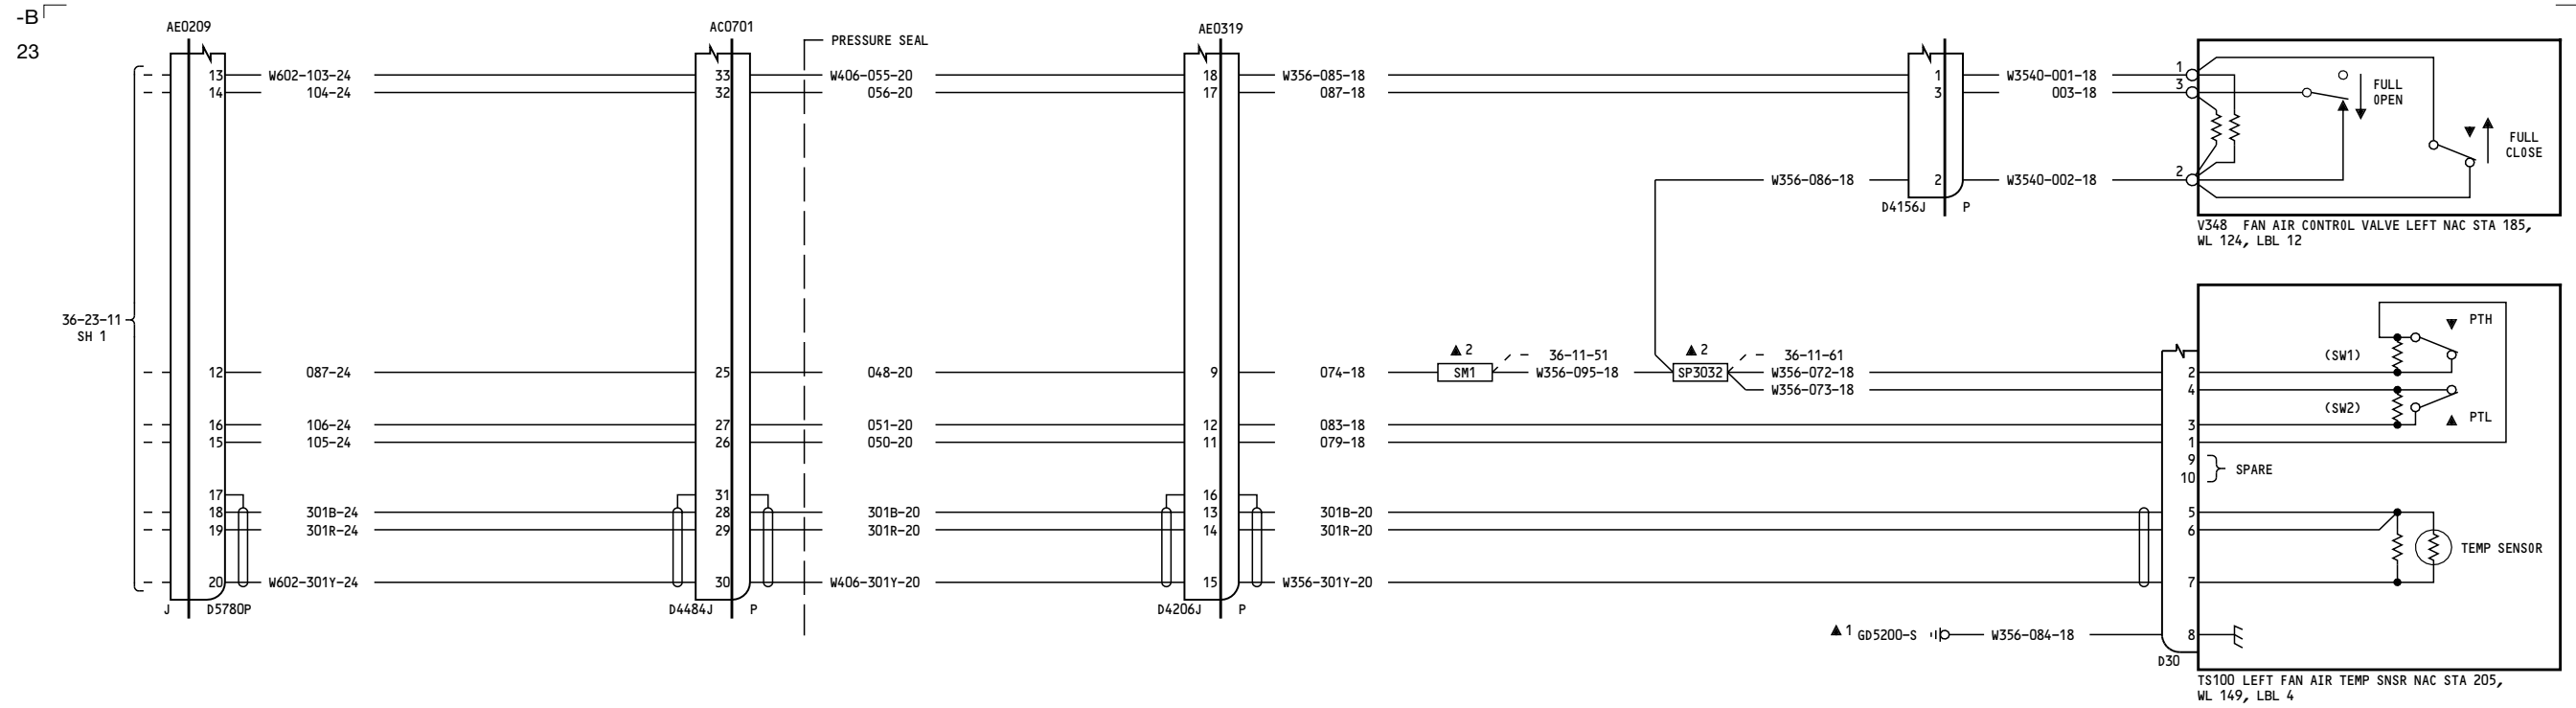

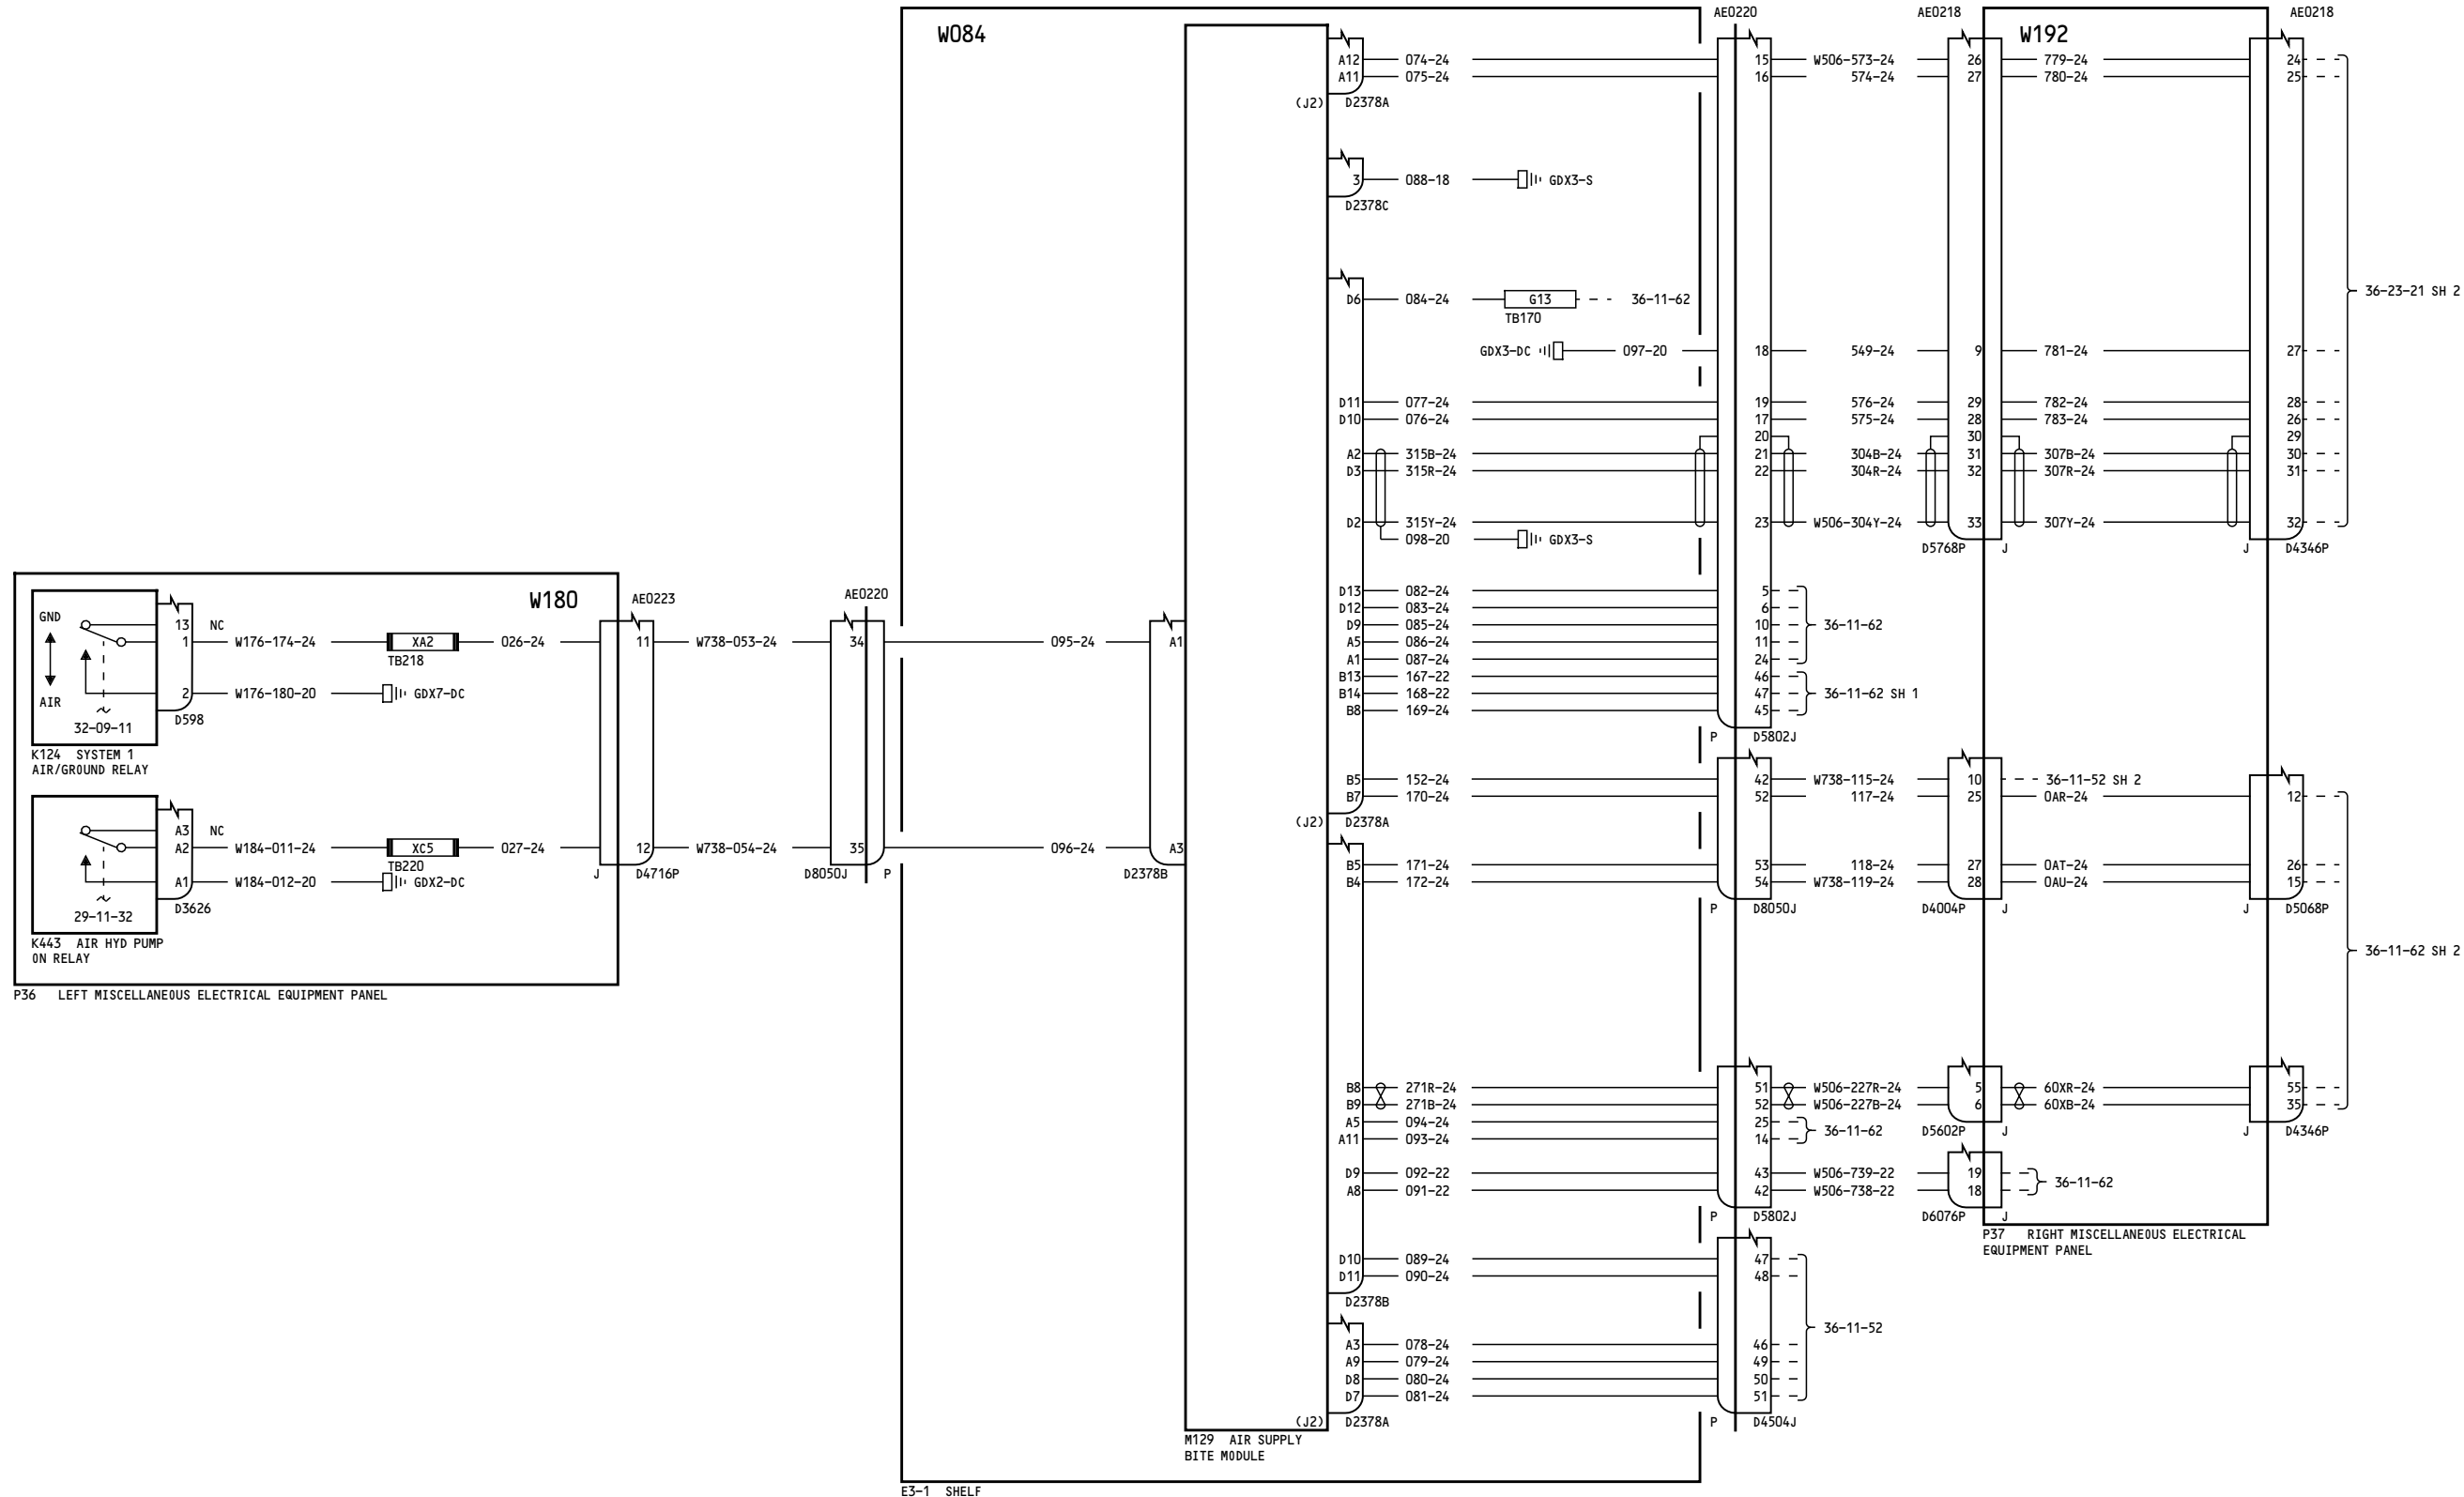

050-051, 163-165

**AIR SUPPLY BUILT-IN TEST EQUIPMENT- RIGHT**

D280T132

**36-23-21**


Page 1.1  
Sheet 1  
Jan 21/2005

Incorporates  
▶ 36-0029 R05


**36-23-21**

Page 1.1  
Sheet 1  
Jan 21/2005



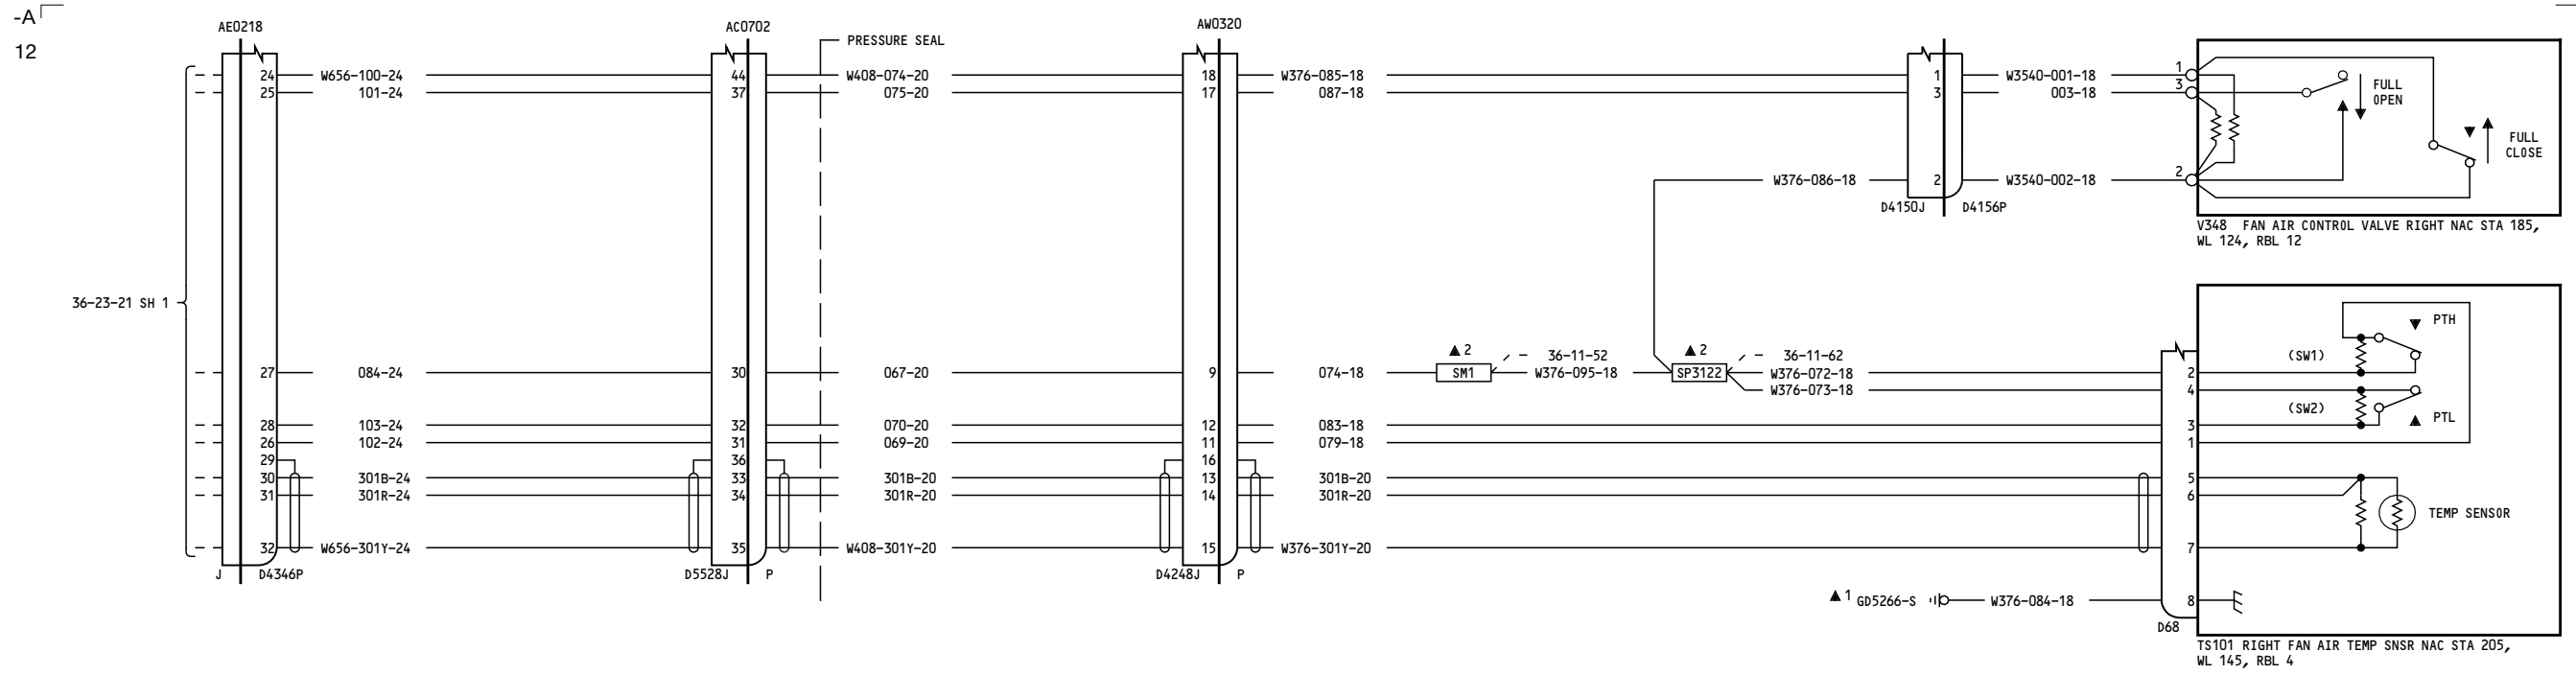

-A  
12

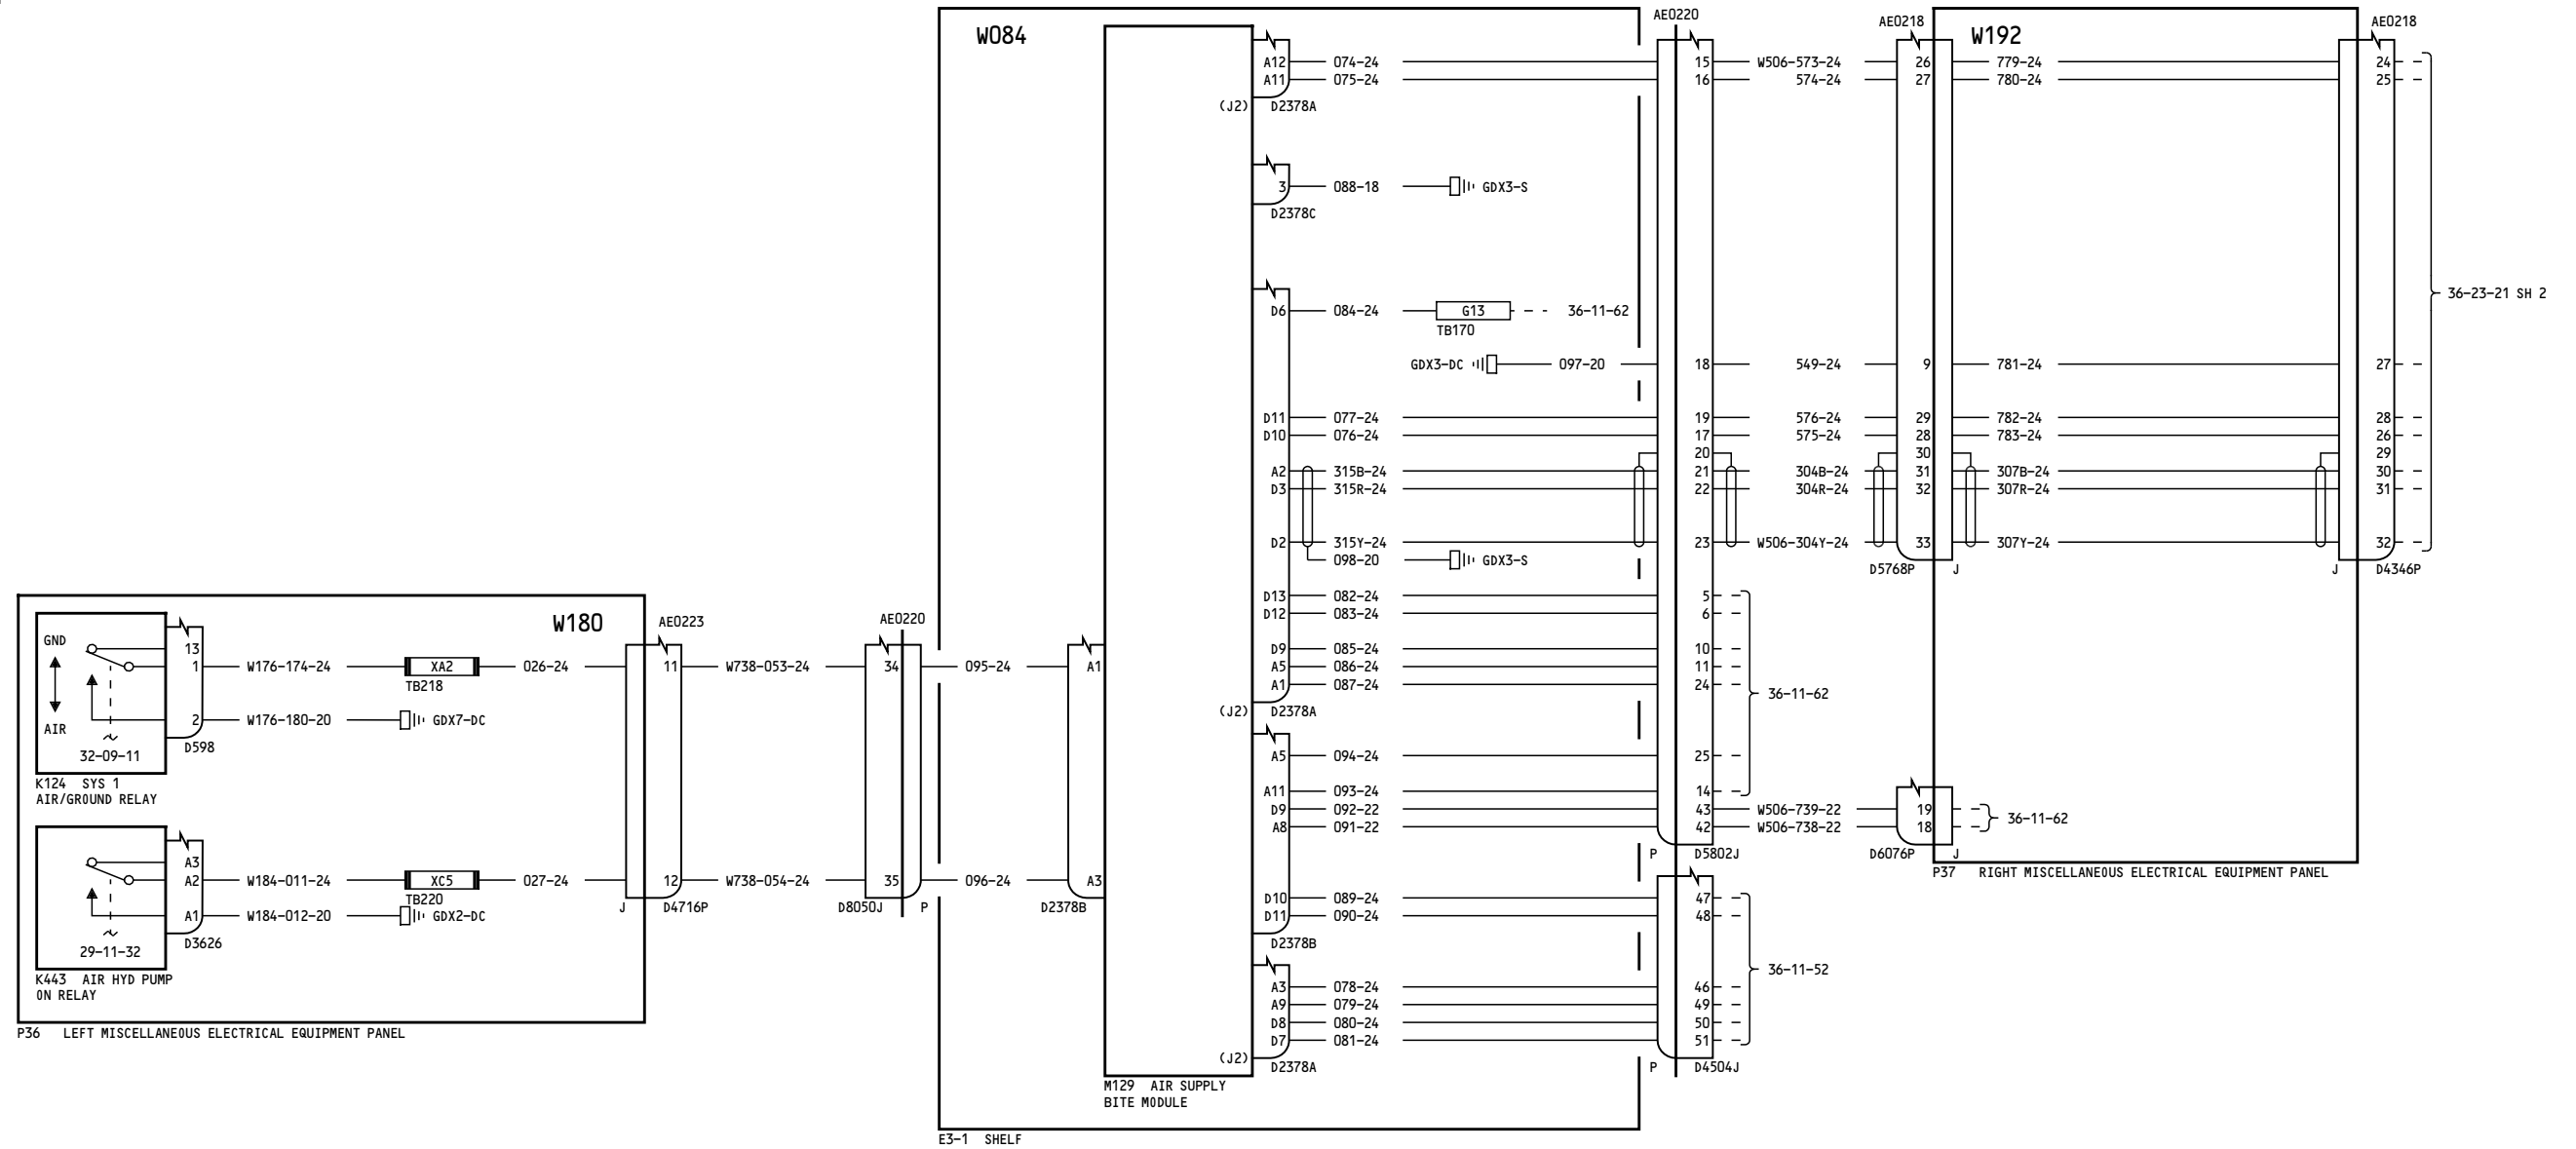

150-155, 275-276

**AIR SUPPLY BUILT-IN TEST  
EQUIPMENT-  
RIGHT**


D280T132

**36-23-21**

Page 2  
Sheet 1  
Jan 21/2005

**36-23-21**

Page 2  
Sheet 1  
Jan 21/2005

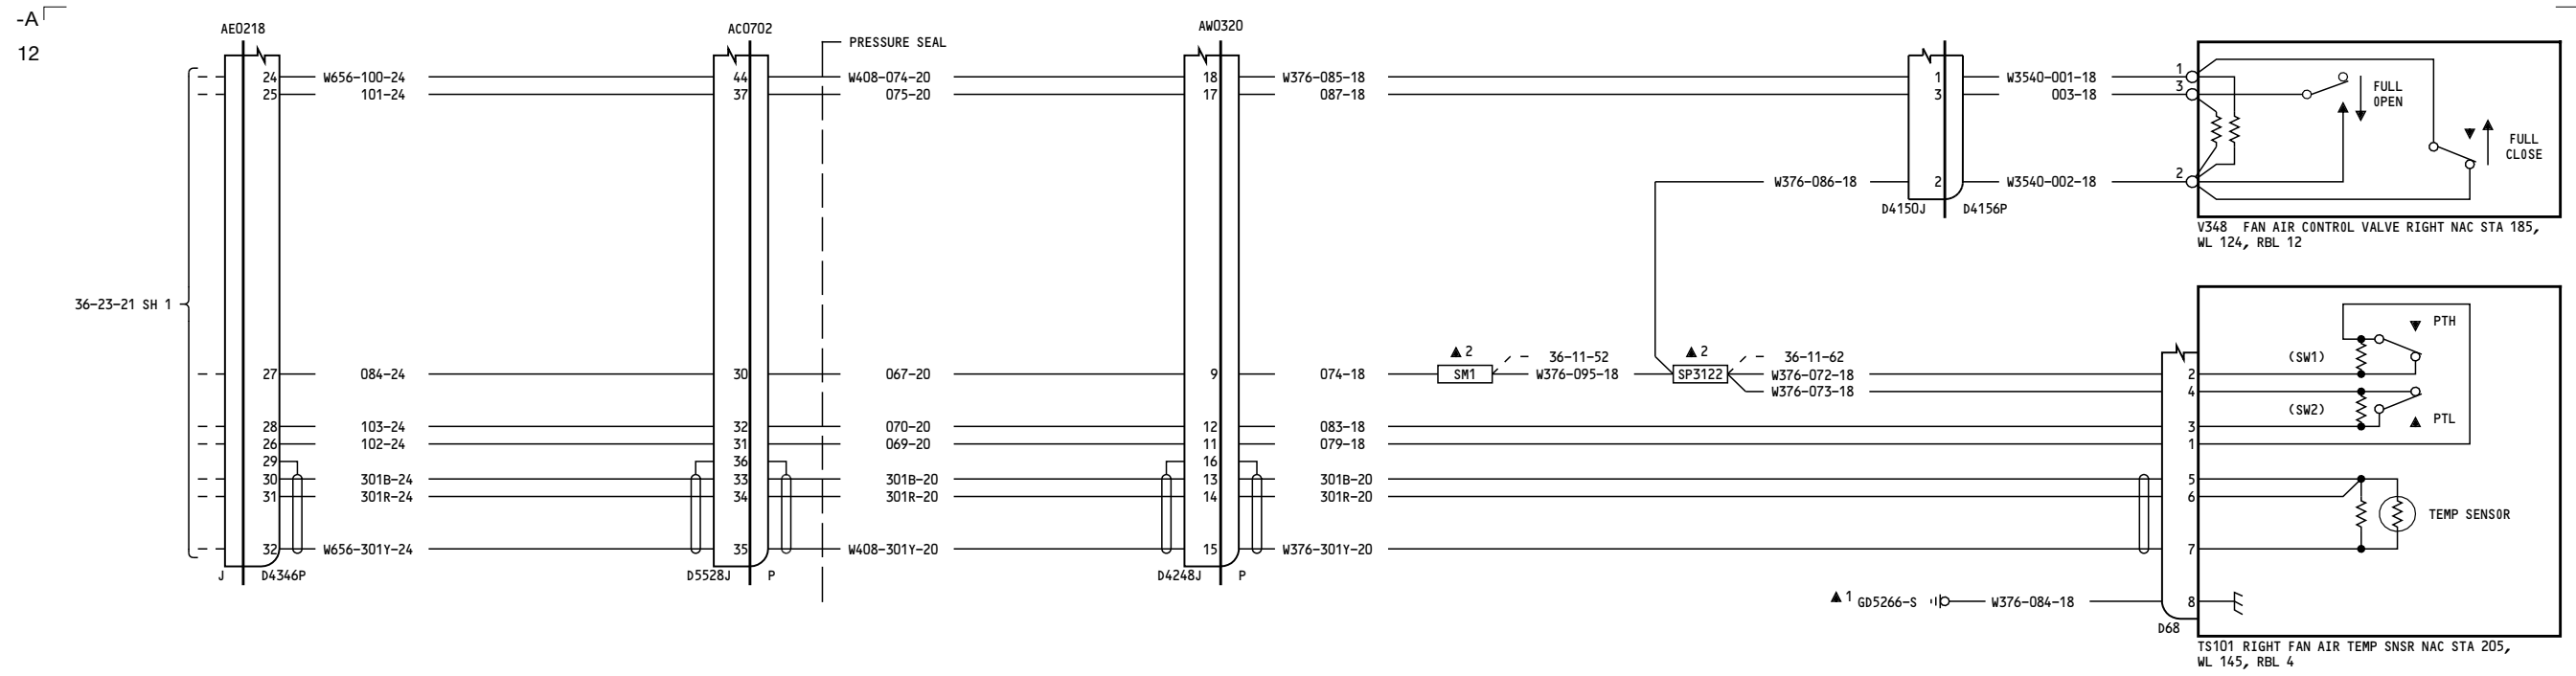

150-155, 275-276

**AIR SUPPLY BUILT-IN TEST  
EQUIPMENT-  
RIGHT**

D280T132


**36-23-21**

Page 2  
Sheet 2  
Jan 21/2005


**36-23-21**

Page 2  
Sheet 2  
Jan 21/2005



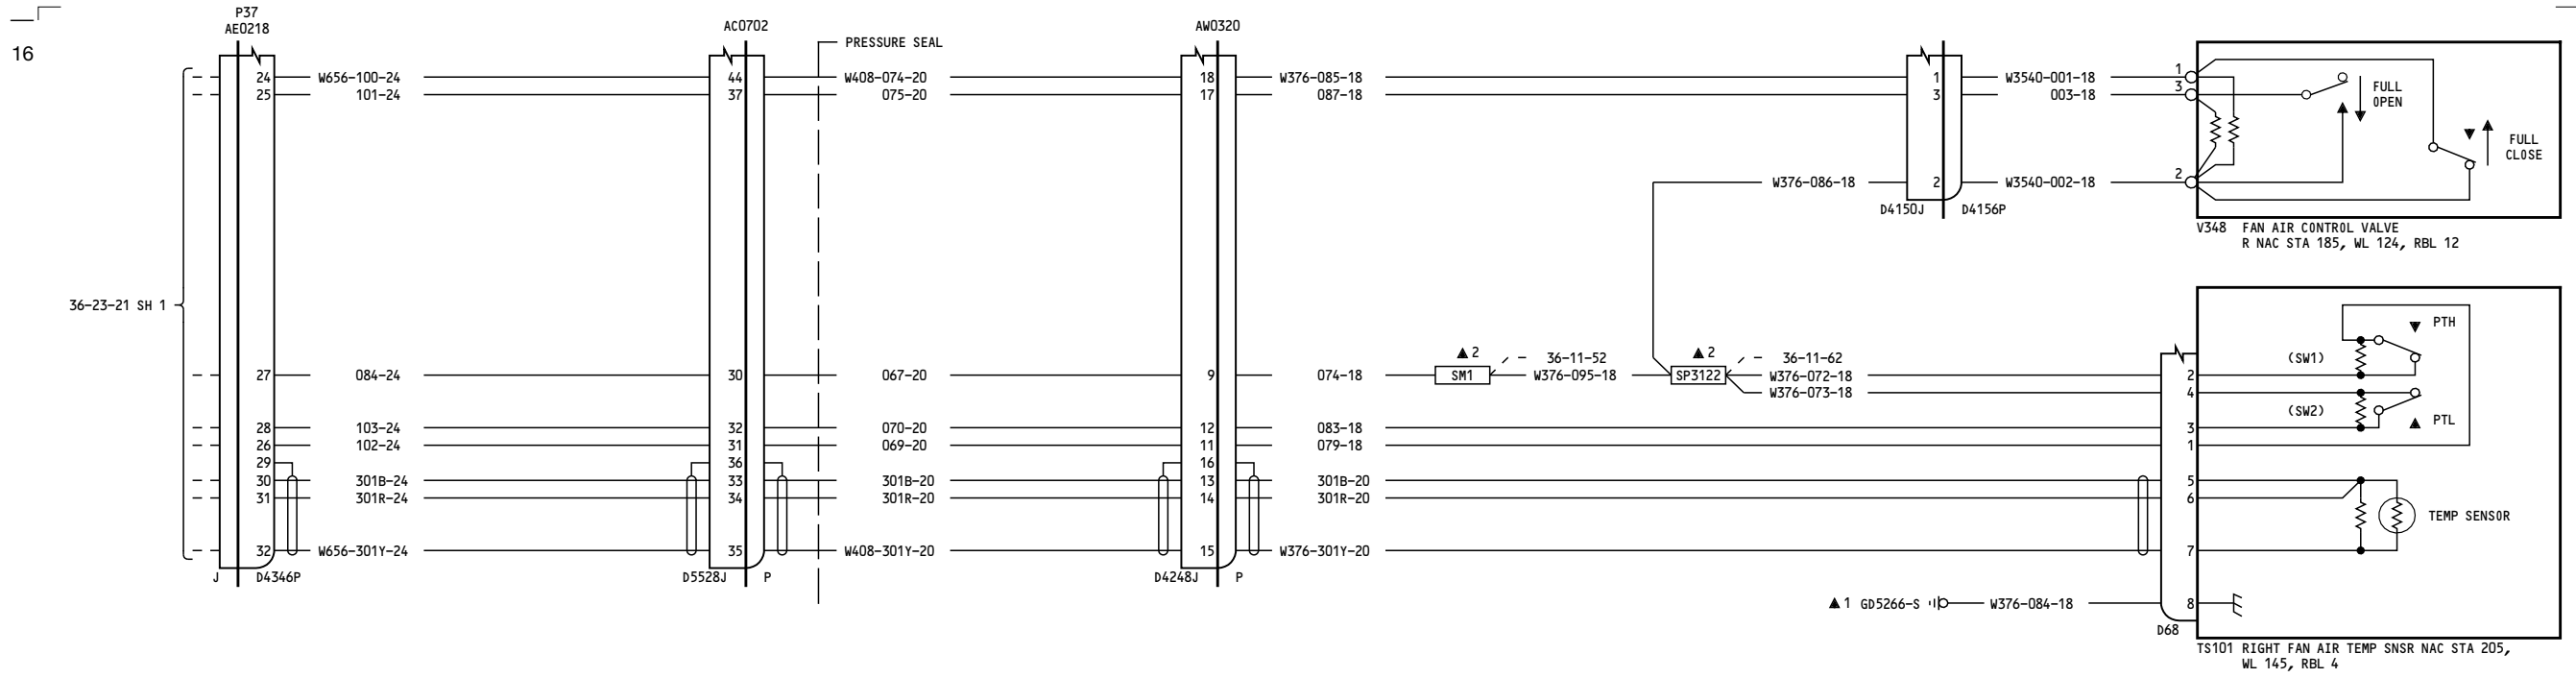

-A  
20

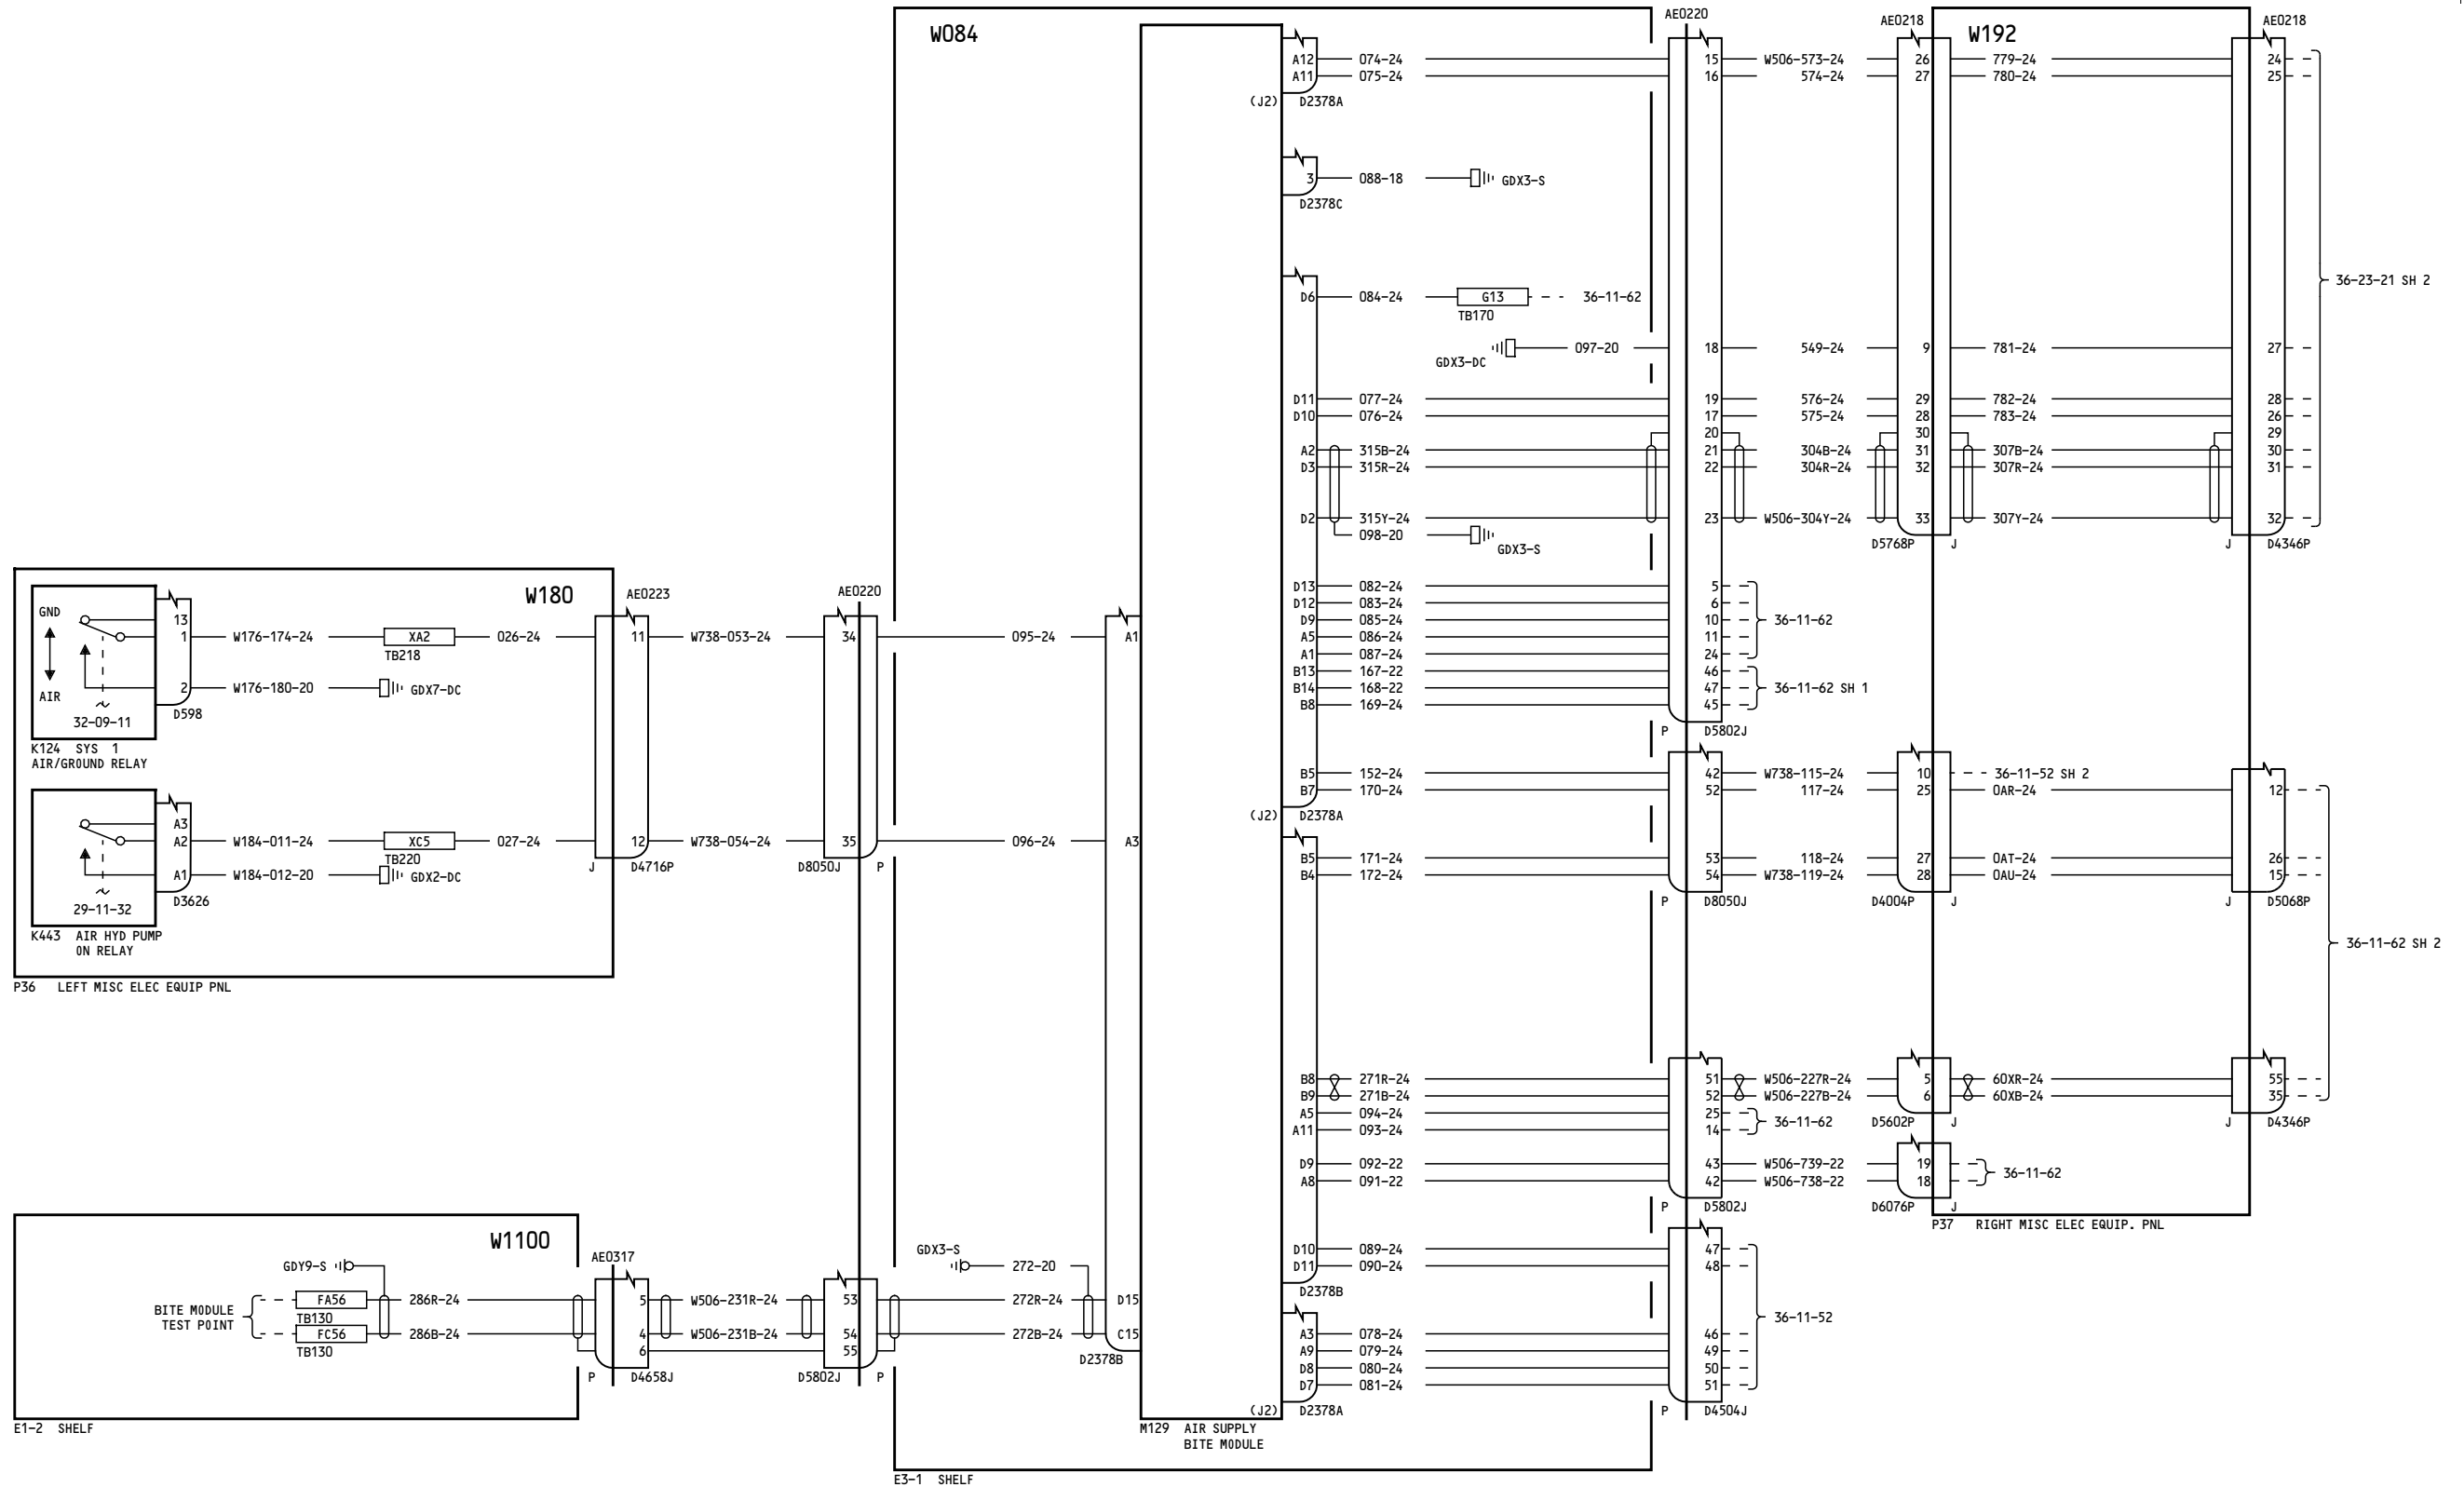

162

**AIR SUPPLY BUILT-IN TEST EQUIPMENT-RIGHT**

D280T132

**36-23-21**

Page 4  
Sheet 1  
Jan 21/2005

**36-23-21**

Page 4  
Sheet 1  
Jan 21/2005

