

**91-04-00**

**DISCONNECT BRACKET  
LIST**



91-04-00  
DISCONNECT BRACKET LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
EFFECTIVE PAGES			AE0300 cont.			AP1000 cont.		
	1	Aug 05/2009		8	Jun 28/2006		2	Jun 28/2006
	2	BLANK		9	Jun 28/2006		1	Jun 28/2006
AC0500	1	Jun 28/2006		10	Jun 28/2006		1	Jun 28/2006
AC0600	1	Jun 28/2006		11	Jun 28/2006		1	Jun 28/2006
AC0700	1	Jun 28/2006		12	Jun 28/2006		1	Mar 07/2008
	2	Jun 28/2006	AF0100	1	Jun 28/2006	R	1	Aug 05/2009
R AC1100	1	Aug 05/2009		2	Jun 28/2006		2	Sep 04/2008
AC1200	1	Jun 28/2006		3	Jun 28/2006		3	Jun 28/2006
AC1300	1	Jun 28/2006	AF0200	1	Jun 28/2006		1	Jun 28/2006
AC1400	1	Jun 28/2006		2	Jun 28/2006		1	Jun 28/2006
AC1500	1	Jun 28/2006		3	Jun 28/2006		1	Jun 28/2006
AE0100	1	Jun 28/2006		4	Jun 28/2006		2	BLANK
AE0200	1	Jun 28/2006	AL0200	1	Jun 28/2006			
	2	Jun 28/2006	AL0900	1	Jun 28/2006			
	3	Jun 28/2006	AL1000	1	Jun 28/2006			
	4	Sep 04/2008		2	Jun 28/2006			
	5	Jun 28/2006		3	Jun 28/2006			
	6	Jun 28/2006	AP0000	1	Jun 28/2006			
	7	Jun 28/2006	AP0200	1	Jun 28/2006			
	8	Jun 28/2006	AP0300	1	Jun 28/2006			
AE0300	1	Jun 28/2006	AP0400	1	Jun 28/2006			
	2	Jun 28/2006		2	Jun 28/2006			
	3	Jun 28/2006	AP0600	1	Jun 28/2006			
	4	Jun 28/2006	AP0700	1	Jun 28/2006			
	5	Jun 28/2006	AP0800	1	Jun 28/2006			
	6	Jun 28/2006	AP0900	1	Jun 28/2006			
	7	Jun 28/2006	AP1000	1	Jun 28/2006			

A = Added, R = Revised, D = Deleted, O = Overflow

DISCONNECT BRACKET LIST

D280T132

EFFECTIVE PAGES

Page 1  
Aug 05/2009



Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AC0506	PANEL-P35 FWD CARGO DISC					010	0466/158/R067	050-099
AC0506	PANEL-P35 FWD CARGO DISC					010	0470/157/R075	150-199, 275-299
	01	D05222J	W1066	D05222P	W0704			ALL
	02	D05218J	W1066	D05218P	W0702			ALL
	03	D05224J	W1066	D05224P	W0704			ALL
	04	D05614J	W1066	D05614P	W0616			ALL
	05	D05220J	W1066	D05220P	W0704			ALL
	06	D05216J	W1066	D05216P	W0700			ALL
	07	D08070J	W1066	D08070P	W0916			ALL
	08	D04304J	W1066	D04304P	W0660			ALL
	09	D05214J	W1066	D05214P	W0606			ALL
	10	D05886J	W1066	D05886P	W1134			ALL

DISCONNECT BRACKET LIST

D280T132

91-04-00

Section AC0500

Page 1 End

Jun 28/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
<b>AC0604</b>	<b>PANEL-E5-1 DISC</b>					<b>023</b>	<b>0654/190/R075</b>	<b>ALL</b>
	01	D04223J	W0219	D04223P	W0165			ALL
	02	D04415J	W0511	D04415P	W0165			ALL
	03	D04575J	W0615	D04575P	W0165			ALL
	04	D04579J	W0623	D04579P	W0165			ALL
	06	D04153J	W0391	D04153P	W0165			ALL
	07	D04577J	W0617	D04577P	W0175			ALL
	08	D04419J	W0513	D04419P	W0185			ALL
	09	D05189J	W0223	D05189P	W0185			ALL
	10	D04967J	W0855	D04967P	W0175			ALL
	11	D04259J	W0211	D04259P	W0175			ALL
	12	D04423J	W0515	D04423P	W0175			ALL
	13	D04113J	W0349	D04113P	W0175			ALL
	14	D04109J	W0345	D04109P	W0165			ALL
<b>AC0606</b>	<b>PANEL-E5-2 DISC</b>					<b>010</b>	<b>0654/180/R088</b>	<b>050-099</b>
<b>AC0606</b>	<b>PANEL-E5-2 DISC</b>					<b>010</b>	<b>0654/180/R070</b>	<b>150-199, 275-299</b>
<b>AC0608</b>	<b>PANEL-E5-3 DISC</b>					<b>007</b>	<b>0654/170/R085</b>	<b>050-099</b>
<b>AC0608</b>	<b>PANEL-E5-3 DISC</b>					<b>007</b>	<b>0654/170/R070</b>	<b>150-199, 275-299</b>
	01	D04219J	W0219					ALL
	02	D04865J	W1369					275-299
	06	D04493J	W0645					050-099, 150-154, 162-164

## DISCONNECT BRACKET LIST

D280T132

**91-04-00**

Section AC0600

Page 1 End

Jun 28/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
<b>AC0701</b>	<b>PANEL-LEFT SIDE WING BODY DISC</b>					<b>032</b>	<b>0752/150/L080</b>	<b>ALL</b>
	01	D08060J	W0984	D08060P	W0998			ALL
	02	D04698J	W0654	D04698P	W0978			ALL
	03	D08042J	W0942	D08042P	W0938			ALL
	04	D08044J	W0578	D08044P	W0938			ALL
	05	D06586J	W0756	D06586P	W0412			ALL
	06	D05058J	W0602	D05058P	W0944			ALL
	07	D05048J	W0942	D05048P	W0508			ALL
	08	D08046J	W0628	D08046P	W0938			ALL
	09	D05988J	W0942	D05988P	W0508			ALL
	10	D06300J	W0669					150-199, 275-299
	12	D06116J	W0598	D06116P	W0420			ALL
	14	D06578J	W0758	D06578P	W0516			ALL
	16	D04420J	W0274	D04420P	W0466			ALL
	17	D04484J	W0602	D04484P	W0406			ALL
	18	D04482J	W0746	D04482P	W0406			ALL
	20	D04536J	W0628	D04536P	W0440			ALL
	21	D04486J	W0756	D04486P	W0406			ALL
	22	D04528J	W0756	D04528P	W0420			ALL
	25	D04540J	W0596	D04540P	W0402			ALL
	26	D04524J	W0744	D04524P	W0416			ALL
	27	D04546J	W0614	D04546P	W0424			ALL
	28	D04532J	W0756	D04532P	W0436			ALL
	29	D04550J	W0214	D04550P	W0412			ALL
	30	D04398J	W0214	D04398P	W0412			ALL
	31	D04634J	W0264	D04634P	W0402			ALL
	32	D04542J	W0596	D04542P	W0402			ALL
<b>AC0702</b>	<b>PANEL-RIGHT SIDE WING BODY DISC</b>					<b>032</b>	<b>0752/160/R090</b>	<b>050-099, 150-154, 162-163, 275-299</b>
<b>AC0702</b>	<b>PANEL-RIGHT SIDE WING BODY DISC</b>					<b>032</b>	<b>0780/180/R068</b>	<b>155-157, 164-199</b>
	02	D08048J	W0580	D08048P	W0612			ALL
	03	D05056J	W0738	D05056P	W0612			ALL
	04	D08066J	W0588	D08066P	W0612			ALL
	05	D05522J	W0606	D05522P	W0426			ALL
	06	D04636J	W0580	D04636P	W0982			ALL
	07	D05136J	W0738	D05136P	W0952			ALL
	09	D06588P	W0414	D06588J	W0768			050-099, 150-199
	09	D06588J	W0768	D06588P	W0414			ALL
	09	D06588P	W0414					275-299
	10	D06298J	W0671					150-199, 275-299

## DISCONNECT BRACKET LIST

D280T132

**91-04-00**

Section AC0700

Page 1

Jun 28/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AC0702	<b>PANEL-RIGHT SIDE WING BODY DISC (continued)</b>					032	0752/160/R090	050-099, 150-154, 162-163, 275-299
AC0702	<b>PANEL-RIGHT SIDE WING BODY DISC (continued)</b>					032	0780/180/R068	155-157, 164-199
	12	D04620J	W0578	D04620P	W0980			ALL
	14	D06580J	W0782	D06580P	W0518			ALL
	15	D07040J	W0656	D07040P	W0408			ALL
	16	D05518J	W0598	D05518P	W0404			ALL
	17	D04622J	W0764	D04622P	W0418			ALL
	18	D04624J	W0768	D04624P	W0422			ALL
	19	D05712J	W0768	D05712P	W0418			ALL
	20	D05530J	W0588	D05530P	W0442			ALL
	21	D05598J	W0656	D05598P	W0418			ALL
	22	D04422J	W0206	D04422P	W0474			ALL
	23	D06114J	W0598	D06114P	W0422			ALL
	24	D04626J	W0752	D04626P	W0442			ALL
	25	D05528J	W0656	D05528P	W0408			ALL
	26	D04616J	W0766	D04616P	W0408			ALL
	27	D04632J	W0262	D04632P	W0404			ALL
	28	D04628J	W0754	D04628P	W0442			ALL
	29	D04400J	W0222	D04400P	W0414			050-099, 150-154, 162-163, 275-276
	30	D04630J	W0222	D04630P	W0414			050-099, 150-154, 162-163, 275-276

## DISCONNECT BRACKET LIST

D280T132

**91-04-00**

Section AC0700

Page 2 End

Jun 28/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AC1102	<b>BRACKET - E9-1 SHELF</b>					<b>000</b>	<b>1197/180/R080</b>	<b>150, 153-155, 162-165</b>
AC1102	<b>BRACKET - E9-1 SHELF</b>					<b>000</b>	<b>1197+132/180/R080</b>	<b>150, 153-199, 277-299</b>
		D06165J	W9015	D06165P	W9026			150, 153-155, 162-165
		D96101J	W9013	D96101P	W9026			150, 153-155, 162-165
		D96101J	W9013					150, 153-199
		D96101J	W9013	D96101P	W0091			156-157, 166-199
	02	D06175J	W9123	D06175P	W1195			150, 153-199
	02			D06175P	W1195			150, 153-199, 277-299
	02	D06175J	W1915	D06175P	W1195			277-299
	03	D06177J	W9121	D06177P	W1197			150, 153-199
	03			D06177P	W1197			150, 153-199, 277-299
	03	D06177J	W1919	D06177P	W1197			277-299
	04	D06173J	W9024	D06173P	W9026			150, 153-155, 162-165
	04	D06173J	W9024					150, 153-155, 162-165
	04			D06173P	W9026			150, 153-155, 162-165
	04	D06173J	W0813	D06173P	W0091			156-157, 166-199, 277-299
	04			D06173P	W0091			156-157, 166-199, 277-299
	04	D06173J	W0813					156-157, 166-199, 277-299
	05	D06161J	W0815					156-157, 166
	05	D06161J	W0815	D06161P	W0091			167-199, 277-299
	06	D06155J	W0817	D06155P	W9026			150, 153-155, 162-165
	06	D06155J	W0817					150, 153-199, 277-299
	06	D06155J	W0817	D06155P	W0095			156-157, 166-199, 277-299
	07	D06171J	W9031	D06171P	W9026			150, 153-155, 162-165
	07	D06171J	W9031					150, 153-155, 162-165
	07			D06171P	W9026			150, 153-155, 162-165
	07	D06171J	W0811	D06171P	W0091			156-157, 166-199, 277-299
	07			D06171P	W0091			156-157, 166-199, 277-299
	07	D06171J	W0811					156-157, 166-199, 277-299
	08	D06165J	W0809	D06165P	W0091			156-157, 166-199, 277-299
	09	D06149J	W0819	D06149P	W9026			150, 153-155, 162-165
	09	D06149J	W0819					150, 153-199, 277-299
	09	D06149J	W0819	D06149P	W0091			156-157, 166-199, 277-299
AC1104	<b>BRACKET - E9-1 SHELF</b>					<b>000</b>	<b>1197+132/168/R080</b>	<b>167-199</b>

## DISCONNECT BRACKET LIST

D280T132

**91-04-00**

Section AC1100

Page 1 End

Aug 05/2009



Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AC1201	<b>BRACKET-AFT CARGO COMPT SIDEWALL DISC</b>					002	1246/157/L073	ALL
	01	D05948J	W0580	D05948P	W0934			ALL
	02	D05950J	W0578	D05950P	W0934			ALL

---

**DISCONNECT BRACKET LIST**

D280T132

**91-04-00**

Section AC1200

Page 1 End

Jun 28/2006





Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AC1304	<b>PANEL-P39 AFT CARGO DISC</b>					<b>010</b>	<b>1267/157/R067</b>	<b>ALL</b>
	01	D05256J	W1068	D05256P	W0710			ALL
	02	D05252J	W1068	D05252P	W0708			ALL
	03	D05258J	W1068	D05258P	W0710			ALL
	04	D05616J	W1068	D05616P	W0616			ALL
	05	D05254J	W1068	D05254P	W0710			ALL
	06	D05250J	W1068	D05250P	W0706			ALL
	07	D08072J	W1068	D08072P	W0916			ALL
	08	D04312J	W1068	D04312P	W0662			ALL
	10	D05888J	W1068	D05888P	W1136			ALL

**DISCONNECT BRACKET LIST**

D280T132

**91-04-00**

Section AC1300

Page 1 End

Jun 28/2006



## 767-200/300 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
<b>AC1402</b>	<b>PANEL-E6 AND P49 DISC</b>					<b>021</b>	<b>1417/190/R080</b>	<b>ALL</b>
	01	D04082J	W0242	D04082P	W0020			ALL
	02	D04040J	W0242	D04040P	W0020			ALL
	03	D04046J	W0248	D04046P	W0020			ALL
	05	D05706J	W0580	D05706P	W0030			ALL
	06	D05054J	W0606	D05054P	W0020			ALL
	07	D05904J	W0588	D05904P	W0030			ALL
	08	D05672J	W0580	D05672P	W0030			ALL
	09	D05824J	W0580	D05824P	W0030			ALL
	10	D04130J	W0238	D04130P	W0030			ALL
	11	D05874J	W1256	D05874P	W0030			ALL
	12	D04044J	W0248	D04044P	W0020			ALL
	13	D06306J	W1358	D06306P	W0580			ALL
	14	D06304J	W1356	D06304P	W1256			ALL
	15	D06029J	W0575	D06029P	W0525			050-099, 155-199, 275-299
	16	D06424J	W0242	D06424P	W0020			ALL
	17	D06110J	W1296	D06110P	W0606			ALL
	18	D06112J	W1298	D06112P	W0614			ALL
	19	D06027J	W0587	D06027P	W0525			050-099, 155-199, 275-299
	20	D06025J	W0589	D06025P	W0521			050-099, 155-199, 275-299
	21	D06023J	W0581	D06023P	W0521			050-099, 155-199, 275-299

### DISCONNECT BRACKET LIST

D280T132

**91-04-00**

Section AC1400

Page 1 End

Jun 28/2006



Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AC1501	<b>BRACKET-AFT CARGO SIDEWALL DISCONNECT</b>					<b>002</b>	<b>1529/171/L072</b>	<b>ALL</b>
	01	D06308J	W1358	D06308P	W1258			ALL
	02	D06314J	W1354	D06314P	W0578			ALL

---

**DISCONNECT BRACKET LIST**

D280T132

**91-04-00**

Section AC1500

Page 1 End

Jun 28/2006



## 767-200/300 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
<b>AE0102</b>	<b>BRACKET-P10 DISC FWD</b>					<b>004</b>	<b>0169/210/R010</b>	<b>ALL</b>
	01	D04551J	W5150	D04551P	W0481			ALL
	02	D08116J	W5150	D08116P	W0768			ALL
	03	D08118J	W5150	D08118P	W0264			ALL
	04	D08120J	W5150	D08120P	W0756			ALL
<b>AE0104</b>	<b>BRACKET-P10 DISC AFT</b>					<b>004</b>	<b>0172/210/R010</b>	<b>ALL</b>
	01	D04555J	W5150	D04555P	W0485			ALL
	02	D04553J	W5150	D04553P	W0483			ALL
	03	D08114J	W5150	D08114P	W0262			ALL
<b>AE0105</b>	<b>BRACKET-CLM FRC DCR TS15 DISC</b>					<b>003</b>	<b>0175/184/L025</b>	<b>ALL</b>
	01	D00135	W0465					050-099, 150-199
<b>AE0106</b>	<b>BRACKET-CLM FRC DCR TS14 DISC</b>					<b>003</b>	<b>0175/184/R025</b>	<b>ALL</b>
	02	D00133	W0465					050-099, 150-199
<b>AE0107</b>	<b>BRACKET-LVDT P10 DISC</b>					<b>006</b>	<b>0175/175/L010</b>	<b>ALL</b>
	01	D04135J	W1285	D04135P	W5150			ALL
	02	D04133J	W1283	D04133P	W5150			ALL
	03	D04131J	W1281	D04131P	W5150			ALL
	04	D04141J	W1295	D04141P	W5150			ALL
	05	D04139J	W1293	D04139P	W5150			ALL
	06	D04137J	W1291	D04137P	W5150			ALL
<b>AE0108</b>	<b>BRACKET-SWITCHBACK DISC</b>					<b>002</b>	<b>0137/188/0000</b>	<b>ALL</b>
	01	D01364	W0756					ALL
	02	D01404	W0768					ALL
	03	D20160	W0756					ALL
	04	D20162	W0768					ALL

### DISCONNECT BRACKET LIST

D280T132

**91-04-00**

Section AE0100

Page 1 End

Jun 28/2006



Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
<b>AE0202</b>	<b>PANEL-P50 CARD FILE DISC</b>					<b>017</b>	<b>0287/159/R030</b>	<b>ALL</b>
	01	D08112J	W1078	D08112P	W0942			ALL
	02	D08068J	W1078	D08068P	W0572			ALL
	03	D08036J	W1114	D08036P	W0596			ALL
	04	D05552J	W1080	D05552P	W0506			ALL
	05	D08032J	W1080	D08032P	W0768			ALL
	06	D05277J	W1078	D05277P	W0697			ALL
	07	D08030J	W1078	D08030P	W0756			ALL
	09	D08038J	W1114	D08038P	W0598			ALL
	10	D05644J	W1080	D05644P	W0506			ALL
	11	D05766J	W1080	D05766P	W0506			ALL
	12	D04978J	W1078	D04978P	W0510			ALL
	13	D05209J	W1078	D05209P	W0451			ALL
	14	D04885J	W1114	D04885P	W0411			ALL
	15	D08028J	W1114	D08028P	W0264			ALL
	16	D04809J	W1080	D04809P	W0453			ALL
	17	D04887J	W1080	D04887P	W0413			ALL
<b>AE0203</b>	<b>PANEL-P33 RIGHT SIDE MISC EQUIPMENT DISC</b>					<b>023</b>	<b>296/165/L010</b>	<b>ALL</b>
	01	D05648J	W0142	D05648P	W0902			ALL
	02	D04803J	W0142	D04803P	W0475			ALL
	03	D05172J	W0142	D05172P	W1230			ALL
	04	D05650J	W0142	D05650P	W0628			ALL
	05	D05195J	W0142	D05195P	W0853			ALL
	06	D06252J	W0142	D06252P	W1204			ALL
	07	D05668J	W0142	D05668P	W0768			ALL
	08	D05800J	W0142	D05800P	W0620			ALL
	09	D05908J	W0142	D05908P	W0902			ALL
	10	D05820J	W0142	D05820P	W1256			ALL
	11	D05960J	W0142	D05960P	W0272			ALL
	12	D05840J	W0142	D05840P	W0656			ALL
	13	D05098J	W0052	D05098P	W1228			ALL
	14	D05946J	W0142	D05946P	W1258			ALL
	15	D04928J	W0142	D04928P	W0616			ALL
	16	D04134J	W0052	D04134P	W0238			ALL
	17	D05744J	W0142	D05744P	W0624			ALL
	18	D04128J	W0142	D04128P	W0256			ALL
	19	D05860J	W0142	D05860P	W0272			ALL
	20	D05322J	W0142	D05322P	W0206			ALL
	21	D04330J	W0138	D04330P	W0206			ALL
	22	D05334J	W0142	D05334P	W1730			ALL

## DISCONNECT BRACKET LIST

D280T132

91-04-00

Section AE0200

Page 1

Jun 28/2006



## 767-200/300 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
<b>AE0203</b>	<b>PANEL-P33 RIGHT SIDE MISC EQUIPMENT DISC (continued)</b>					<b>023</b>	<b>296/165/L010</b>	<b>ALL</b>
	23	D04042J	W0146	D04042P	W0264			ALL
<b>AE0204</b>	<b>PANEL-P34 APU EXT PWR DISC</b>					<b>014</b>	<b>0287/155/R015</b>	<b>ALL</b>
	02	D04112J	W0026	D04112P	W0240			ALL
	03	D04026J	W0026	D04026P	W0240			ALL
	05	D04926J	W0054	D04926P	W0616			ALL
	06	D04860J	W0054	D04860P	W0590			ALL
	07	D08018J	W0054	D08018P	W0768			ALL
	08	D04028J	W0026	D04028P	W0248			ALL
	10	D08016J	W0054	D08016P	W0756			ALL
	11	D05340J	W0026	D05340P	W1722			ALL
	12	D05682J	W0054	D05682P	W0572			ALL
	13	D05346J	W0054	D05346P	W1204			ALL
<b>AE0207</b>	<b>PANEL-P33 LEFT SIDE DISC</b>					<b>010</b>	<b>0296/185/L024</b>	<b>ALL</b>
	01	D05798J	W0144	D05798P	W0572			ALL
	02	D05332J	W0144	D05332P	W1704			ALL
	03	D05191J	W0144	D05191P	W0689			ALL
	04	D05193J	W0144	D05193P	W0689			ALL
	05	D05662J	W0144	D05662P	W0752			ALL
	06	D05664J	W0144	D05664P	W0756			ALL
	07	D04801J	W0144	D04801P	W0471			ALL
	08	D06476J	W0138	D06476P	W1342			ALL
	09	D05690J	W0142	D05690P	W1258			ALL
	10	D05890J	W0142	D05890P	W1274			ALL
<b>AE0208</b>	<b>PANEL-P51 WARNING ELEC DISC</b>					<b>008</b>	<b>0266/151/R028</b>	<b>ALL</b>
	01	D04509J	W0045	D04509P	W1271			ALL
	02	D04511J	W0045	D04511P	W1287			ALL
	03	D04597J	W0045	D04597P	W0459			ALL
	04	D04303J	W0045	D04303P	W0449			ALL
	05	D04507J	W0045	D04507P	W1311			ALL
	06	D04347J	W0045	D04347P	W0451			ALL
	07	D04349J	W0045	D04349P	W0453			ALL
	08	D04301J	W0045	D04301P	W0409			ALL
<b>AE0209</b>	<b>PANEL-P36 DISCONNECT</b>					<b>049</b>	<b>0289/176/L065</b>	<b>ALL</b>
		D09299J	W9158	D09299P	W9159			150, 153, 157, 165-199
	01	D04918J	W0182	D04918P	W0578			ALL
	02	D05313J	W0184	D05313P	W1521			ALL

### DISCONNECT BRACKET LIST

D280T132

**91-04-00**

Section AE0200

Page 2

Jun 28/2006



Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AE0209	<b>PANEL-P36 DISCONNECT (continued)</b>					049	0289/176/L065	ALL
	03	D04942J	W0184	D04942P	W0596			ALL
	04	D05654J	W0184	D05654P	W0984			ALL
	05			D05431P	W0471			150-154, 162-164
	06	D04920J	W0182	D04920P	W0578			ALL
	07	D05952J	W0182	D05952P	W0578			ALL
	08	D05165J	W0184	D05165P	W1307			ALL
	08	D05165P	W1307	D05165J	W0184			ALL
	09	D04856J	W0184	D04856P	W0590			ALL
	10	D04743J	W0184	D04743P	W0407			ALL
	11	D05576J	W0176	D05576P	W0924			ALL
	12	D05714J	W0176	D05714P	W0924			ALL
	13	D08026J	W0184	D08026P	W0264			ALL
	14	D05366J	W0184	D05366P	W1718			ALL
	15	D04992J	W0184	D04992P	W0596			ALL
	16	D04802J	W0176	D04802P	W0510			ALL
	17	D04672J	W0176	D04672P	W0510			ALL
	18	D05100J	W0182	D05100P	W1232			ALL
	19	D05456J	W0182	D05456P	W0622			ALL
	20	D06310J	W0184	D06310P	W0264			ALL
	21	D04338J	W0176	D04338P	W0608			ALL
	22	D05431J	W0176	D05431P	W0471			050-099, 155-157, 165-199, 275-299
	22	D05431J	W0176					150-154, 162-164
	23	D05433J	W0176	D05433P	W0471			ALL
	24	D05892J	W0182	D05892P	W0202			ALL
	25	D04288J	W0182	D04288P	W0622			ALL
	26	D05312J	W0176	D05312P	W0750			ALL
	27	D04906J	W0176	D04906P	W0942			ALL
	28	D05315J	W0176	D05315P	W1501			ALL
	29	D05308J	W0176	D05308P	W0744			ALL
	30	D05497J	W0176	D05497P	W0471			ALL
	31	D05310J	W0176	D05310P	W0748			ALL
	32	D05060J	W0176	D05060P	W0654			ALL
	33	D04904J	W0176	D04904P	W0942			ALL
	35	D05360J	W0176	D05360P	W1702			ALL
	36	D05832J	W0176	D05832P	W0756			ALL
	37	D05300J	W0176	D05300P	W0756			ALL
	39	D05306J	W0176	D05306P	W0746			ALL
	41	D06582J	W0176	D06582P	W0758			ALL
	41	D06582P	W0758	D06582J	W0176			ALL

DISCONNECT BRACKET LIST

D280T132

91-04-00

Section AE0200

Page 3

Jun 28/2006



## 767-200/300 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
<b>AE0209</b>	<b>PANEL-P36 DISCONNECT (continued)</b>					<b>049</b>	<b>0289/176/L065</b>	<b>ALL</b>
	43	D05780J	W0176	D05780P	W0602			ALL
	45	D04709J	W0176	D04709P	W0689			ALL
	45	D04709P	W0689	D04709J	W0176			ALL
	46	D04932J	W0176	D04932P	W0602			ALL
	47	D06470J	W0184	D06470P	W1338			ALL
	48	D06934J	W0176	D06934P	W1232			ALL
<b>AE0217</b>	<b>BRACKET-CLM FRC DCR TS16</b>					<b>003</b>	<b>0210/194/L023</b>	<b>ALL</b>
	01	D00137	W0465					050-099, 150-199
<b>AE0218</b>	<b>PANEL-P37 DISCONNECT</b>					<b>049</b>	<b>0292/169/R068</b>	<b>ALL</b>
	01	D04958J	W0198	D04958P	W0658			ALL
	01	D04958P	W0658	D04958J	W0198			ALL
	02	D05822J	W0198	D05822P	W0262			ALL
	04	D05612J	W0192	D05612P	W0506			ALL
	05	D04340J	W0192	D04340P	W0610			ALL
	06	D04948J	W0198	D04948P	W0606			ALL
	07	D05188J	W0198	D05188P	W0598			ALL
	08	D04646J	W0192	D04646P	W0506			ALL
	09	D06076J	W0192	D06076P	W0506			ALL
	10	D05602J	W0192	D05602P	W0506			ALL
	11	D05037J	W0198	D05037P	W1247			ALL
	12	D05270J	W0198	D05270P	W0614			ALL
	13	D04056J	W0198	D04056P	W0248			ALL
	14	D05768J	W0192	D05768P	W0506			ALL
	15	D05326J	W0192	D05326P	W0766			ALL
	16	D04004J	W0192	D04004P	W0738			ALL
	17	D05266J	W0192	D05266P	W0738			ALL
	18	D04962J	W0192	D04962P	W0628			ALL
	19	D05561J	W0192	D05561P	W1417			ALL
	20	D05435J	W0192	D05435P	W0473			ALL
	21	D05499J	W0192	D05499P	W0473			ALL
	22	D05437J	W0192	D05437P	W0475			ALL
	22	D05437P	W0475	D05437J	W0192			ALL
	23	D08680J	W0192	D08680P	W0942			ALL
	24	D04346J	W0192	D04346P	W0656			ALL
	25	D05592J	W0192	D05592P	W0926			ALL
	26	D04284J	W0192	D04284P	W0620			ALL
	28	D05068J	W0192	D05068P	W0656			ALL
	29	D05317J	W0192	D05317P	W1541			ALL

### DISCONNECT BRACKET LIST

D280T132

**91-04-00**

Section AE0200

Page 4

Sep 04/2008





Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
<b>AE0218</b>	<b>PANEL-P37 DISCONNECT (continued)</b>					<b>049</b>	<b>0292/169/R068</b>	<b>ALL</b>
	29	D05317P	W1541	D05317J	W0192			ALL
	30	D06584J	W0192	D06584P	W0782			ALL
	31	D05688J	W0192	D05688P	W1256			ALL
	31	D05688P	W1256	D05688J	W0192			050-099, 280-299
	31			D05688J	W0192			150-199, 275-278
	32	D05290J	W0192	D05290P	W0902			ALL
	33	D08064J	W1118	D08064P	W0274			ALL
	34	D05316J	W0192	D05316P	W0768			ALL
	35	D06260J	W0192	D06260P	W0768			ALL
	36	D05328J	W0192	D05328P	W0764			ALL
	37	D06658J	W1118	D06658P	W0942			ALL
	38	D05352J	W0192	D05352P	W1204			ALL
	39			D05962P	W0272			150-154
	39	D05962J	W1118	D05962P	W0272			275
	40	D05862J	W1118	D05862P	W0272			ALL
	41	D05330J	W0188	D05330P	W0752			ALL
	42	D05506J	W0188	D05506P	W0572			ALL
	43	D05318J	W0192	D05318P	W0770			ALL
	44	D04296J	W1118	D04296P	W0624			ALL
	45	D05760J	W1118	D05760P	W0580			ALL
	46	D05372J	W0188	D05372P	W1704			ALL
	47	D04934J	W0188	D04934P	W0588			ALL
	48	D04924J	W1118	D04924P	W0580			ALL
	49	D04922J	W1118	D04922P	W0580			ALL
<b>AE0219</b>	<b>PANEL-E8 DISCONNECT RIGHT</b>					<b>036</b>	<b>0242/169/L058</b>	<b>ALL</b>
	03	D06200J	W2002	D06200P	W1700			ALL
	04	D05009J	W2002	D05009P	W1701			ALL
	05	D05011J	W2002	D05011P	W1701			ALL
	06	D06202J	W2000	D06202P	W1702			ALL
	07	D06208J	W2000	D06208P	W1702			ALL
	08	D06206J	W2000	D06206P	W1706			ALL
	09	D06240J	W2000	D06240P	W0744			ALL
	12	D06218J	W2002	D06218P	W1718			ALL
	13	D06220J	W2002	D06220P	W1720			ALL
	14	D06210J	W2002	D06210P	W1710			ALL
	15	D06228J	W2000	D06228P	W1728			ALL
	16	D06230J	W2000	D06230P	W1730			ALL
	17	D06212J	W2000	D06212P	W1712			ALL
	18	D06214J	W2000	D06214P	W1712			ALL

DISCONNECT BRACKET LIST

D280T132

91-04-00

Section AE0200

Page 5

Jun 28/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
<b>AE0219</b>	<b>PANEL-E8 DISCONNECT RIGHT (continued)</b>					<b>036</b>	<b>0242/169/L058</b>	<b>ALL</b>
	20	D06222J	W2002	D06222P	W1722			ALL
	21	D06204J	W2002	D06204P	W1704			ALL
	22	D06224J	W2002	D06224P	W1724			ALL
	23	D06226J	W2002	D06226P	W1726			ALL
	24	D06232J	W2000	D06232P	W0214			ALL
	25	D06242J	W2000	D06242P	W0942			ALL
	26	D06246J	W2000	D06246P	W0942			ALL
	27	D06244J	W2000	D06244P	W1246			ALL
	30	D05051J	W2002	D05051P	W1307			ALL
	31	D06216J	W2002	D06216P	W1716			ALL
	32	D05061J	W2002	D05061P	W1705			ALL
	33	D05063J	W2000	D05063P	W1703			ALL
	34	D06234J	W2000	D06234P	W0222			ALL
	35	D06236J	W2000	D06236P	W0738			ALL
	36	D06238J	W2000	D06238P	W0764			ALL
<b>AE0220</b>	<b>PANEL-E3-1 DISCONNECT</b>					<b>013</b>	<b>0290/152/R058</b>	<b>ALL</b>
	01	D08052J	W0624	D08052P	W0084			ALL
	02	D05738J	W1226	D05738P	W0084			ALL
	03	D05802J	W0506	D05802P	W0084			ALL
	04	D04504J	W0506	D04504P	W0084			ALL
	05	D08050J	W0738	D08050P	W0084			ALL
	06	D08092J	W0572	D08092P	W0082			ALL
	07	D06262J	W1204	D06262P	W2052			ALL
	08	D05686J	W0942	D05686P	W0082			ALL
	09	D05782J	W0572	D05782P	W0082			ALL
	10	D06264J	W0572	D06264P	W2052			ALL
	11	D04500J	W0942	D04500P	W0082			ALL
	12	D04502J	W0510	D04502P	W0082			ALL
	13	D08040J	W0622	D08040P	W0082			ALL
<b>AE0221</b>	<b>PANEL-E8 DISCONNECT LEFT</b>					<b>005</b>	<b>0241/173/L050</b>	<b>ALL</b>
	01	D05055J	W1035	D05055P	W1435			ALL
	03	D05057J	W1037	D05057P	W1437			ALL
	04	D06254J	W2004	D06254P	W0744			ALL
	05	D06256J	W2006	D06256P	W0764			ALL
	07	D06980J	W1039	D06980P	W1702			155-157, 166-199, 277-299
	08	D06966J	W1039					155-157, 166-199, 277-299
	09	D06968J	W1039	D06968P	W0738			155-157, 166-199, 277-299
	10	D06970J	W1039	D06970P	W0942			155-157, 166-199, 277-299

## DISCONNECT BRACKET LIST

D280T132

**91-04-00**

Section AE0200

Page 6

Jun 28/2006



Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
<b>AE0222</b>	<b>PANEL-P6 BOTTOM</b>					<b>016</b>	<b>0221/207/R043</b>	<b>ALL</b>
	03	D06170J	W0158	D06170P	W0634			ALL
	04	D06168J	W0156	D06168P	W0634			ALL
	05	D06164J	W0148	D06164P	W0632			ALL
	06	D06166J	W0150	D06166P	W0632			ALL
	07	D04120J	W1030	D04120P	W0254			ALL
	08	D05858J	W1030	D05858P	W0272			ALL
	09	D06450J	W0048	D06450P	W1342			ALL
	10	D05868J	W1030	D05868P	W0272			ALL
	12	D06430J	W0048	D06430P	W0280			050-099
	13	D08128J	W1026	D08128P	W0276			ALL
	14	D04116J	W1026	D04116P	W0252			ALL
	15	D04122J	W0028	D04122P	W0254			ALL
	16	D04118J	W0028	D04118P	W0252			ALL
<b>AE0223</b>	<b>PANEL-P36 BOTTOM</b>					<b>011</b>	<b>0293/152/L063</b>	<b>ALL</b>
	01	D05126J	W0180	D05126P	W1224			ALL
	02	D05192J	W0180	D05192P	W0624			ALL
	03	D05894J	W0176	D05894P	W0752			ALL
	04	D05348J	W0180	D05348P	W1204			ALL
	05	D04716J	W0180	D04716P	W0738			ALL
	06	D05658J	W0176	D05658P	W0572			ALL
	07	D04662J	W0176	D04662P	W0572			ALL
	08	D05930J	W0176	D05930P	W0572			ALL
	11	D06286J	W0176	D06286P	W0572			ALL
<b>AE0224</b>	<b>PANEL-P37 BOTTOM</b>					<b>011</b>	<b>0280/159/R064</b>	<b>ALL</b>
	01	D04412J	W1118	D04412P	W0206			ALL
	02	D05319J	W0192	D05319P	W1521			ALL
	03	D05660J	W0192	D05660P	W1228			ALL
	04	D05374J	W0192	D05374P	W1712			ALL
	05	D05541J	W0192	D05541P	W0853			ALL
	06	D06288J	W0192	D06288P	W0506			ALL
	07	D05052J	W0198	D05052P	W0590			ALL
	08	D05692J	W1118	D05692P	W1258			ALL
	09	D05378J	W0198	D05378P	W1722			ALL
	10	D05376J	W0198	D05376P	W1718			ALL
	11	D04745J	W0198	D04745P	W0407			ALL
<b>AE0225</b>	<b>PANEL-P65 HYD GEN PWR DISC</b>					<b>009</b>	<b>0225/165/L055</b>	<b>ALL</b>
	01	D06456J	W2058	D06456P	W1340			ALL

DISCONNECT BRACKET LIST

D280T132

91-04-00

Section AE0200

Page 7

Jun 28/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
<b>AE0225</b>	<b>PANEL-P65 HYD GEN PWR DISC (continued)</b>					<b>009</b>	<b>0225/165/L055</b>	<b>ALL</b>
	03	D06462J	W2058	D06462P	W1336			ALL
	04	D06452J	W2058	D06452P	W1338			ALL
	06	D06454J	W2058	D06454P	W1340			ALL
	07	D06460J	W2058	D06460P	W1332			ALL
	08	D06458J	W2058	D06458P	W1342			ALL
	09	D06474J	W2058	D06474P	W1342			ALL
<b>AE0226</b>	<b>PANEL-P54 CARD FILE</b>					<b>008</b>	<b>0236/157/R028</b>	<b>ALL</b>
	01	D07994J	W1082	D07994P	W0606			ALL
	02	D07992J	W1082	D07992P	W0596			ALL
	03	D05546J	W1082	D05546P	W1718			ALL
	04	D07990J	W1082	D07990P	W0614			ALL
	05	D04002J	W1082	D04002P	W0510			ALL
	06	D07996J	W1082	D07996P	W0598			ALL
	07	D05540J	W1082	D05540P	W1704			ALL
	08	D05548J	W1082	D05548P	W1720			ALL
<b>AE0227</b>	<b>PANEL-P87 DISCONNECT</b>					<b>000</b>	<b>0300/130/L009</b>	<b>ALL</b>
	01			D07126P	W1232			050-099, 150-199, 275-277
	01	D07126J	W2112	D07126P	W1232			278-299

## DISCONNECT BRACKET LIST

D280T132

**91-04-00**

Section AE0200

Page 8 End

Jun 28/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
<b>AE0303</b>	<b>SHELF-E1-1 DISC</b>					<b>019</b>	<b>0344/190/L047</b>	<b>ALL</b>
	01	D05495J	W0101	D05495P	W0201			ALL
	02	D05325J	W1101	D05325P	W0207			ALL
	04	D05135J	W0121	D05135P	W1285			ALL
	05	D04353J	W0101	D04353P	W1501			ALL
	06	D05133J	W0111	D05133P	W1283			ALL
	07	D05131J	W0101	D05131P	W1281			ALL
	08	D05411J	W0101	D05411P	W1255			ALL
	09	D05413J	W0101	D05413P	W1601			ALL
	10	D05405J	W0121	D05405P	W1253			ALL
	11	D04981J	W0111	D04981P	W0741			150-199, 275-299
	12	D05403J	W0111	D05403P	W1251			ALL
	13	D04357J	W0121	D04357P	W1521			ALL
	14	D05549J	W0111	D05549P	W1511			ALL
	15	D05307J	W1101	D05307P	W1307			ALL
	16	D05997J	W1101	D05997P	W1247			ALL
	17	D05323J	W0121	D05323P	W0585			ALL
	18	D05493J	W0111	D05493P	W0207			ALL
<b>AE0305</b>	<b>STNCH-LEFT SIDE OUTBD CARGO DISC</b>					<b>064</b>	<b>0355/125/L038</b>	<b>ALL</b>
		D04517J	W0511					150-199
	01	D04908J	W0942	D04908P	W1084			ALL
	02	D08004J	W0942	D08004P	W0986			ALL
	03	D04930J	W0602	D04930P	W1084			ALL
	04	D04676J	W0510	D04676P	W1092			ALL
	05	D04281J	W0201	D04281P	W1103			ALL
	06	D05554J	W0602	D05554P	W1092			ALL
	07	D05167J	W1251	D05167P	W1092			ALL
	08	D05368J	W0756	D05368P	W1092			ALL
	09	D04912J	W0654	D04912P	W1092			ALL
	11	D04351J	W1501	D04351P	W0105			ALL
	12	D04379J	W0491	D04379P	W0105			ALL
	13	D04941J	W1505	D04941P	W0105			ALL
	14	D04207J	W0201	D04207P	W0105			ALL
	16	D04457J	W0471	D04457P	W0105			ALL
	17	D04417J	W0511	D04417P	W0105			ALL
	18	D05259J	W1311	D05259P	W0105			ALL
	19	D05827J	W1633	D05827P	W0105			050-099, 150-152, 155-199, 277-299
	19			D05827P	W0105			275-276
	20	D04855J	W1605	D04855P	W0105			ALL

## DISCONNECT BRACKET LIST

D280T132

**91-04-00**

Section AE0300

Page 1

Jun 28/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
<b>AE0305</b>	<b>STNCH-LEFT SIDE OUTBD CARGO DISC (continued)</b>					<b>064</b>	<b>0355/125/L038</b>	<b>ALL</b>
	21	D04205J	W0201	D04205P	W0107			ALL
	22	D06143J	W1605	D06143P	W0105			050-099, 150-152, 155-199, 275-299
	23	D05257J	W1311	D05257P	W0109			ALL
	24	D06732J	W0510	D06732P	W0109			ALL
	25	D06752J	W0510	D06752P	W0109			ALL
	26	D04203J	W0201	D04203P	W0109			ALL
	27	D05817J	W0471	D05817P	W0109			ALL
	28	D06754J	W0942	D06754P	W0109			ALL
	29	D04201J	W0201	D04201P	W0161			ALL
	30	D04719J	W1561	D04719P	W0161			ALL
	33	D04936J	W0588	D04936P	W1084			ALL
	34	D06756P	W0121	D06756J	W0602			050-099, 150-199
	34	D06756J	W0602	D06756P	W0121			050-099, 150-199
	35	D04674J	W0510	D04674P	W1084			ALL
	36	D04292J	W0622	D04292P	W1098			ALL
	37	D05344J	W0622	D05344P	W1098			ALL
	38	D05205J	W1503	D05205P	W1103			ALL
	39	D05544J	W0588	D05544P	W1092			ALL
	40	D05370J	W0756	D05370P	W1092			ALL
	42	D04923J	W1603	D04923P	W1103			ALL
	43	D05223J	W1603	D05223P	W1103			ALL
	44	D05434J	W0754	D05434P	W1092			ALL
	45	D04323J	W0451	D04323P	W0105			ALL
	46	D04781J	W1633	D04781P	W0105			ALL
	48	D04383J	W0495	D04383P	W0105			ALL
	49	D07160J	W0471	D07160P	W0107			ALL
	50	D04831J	W1561	D04831P	W0105			ALL
	51	D06141J	W0471	D06141P	W0105			050-099, 150-199, 277-299
	51			D06141P	W0105			275-276
	52	D05585J	W1603	D05585P	W0107			ALL
	53	D04517J	W0511	D04517P	W0109			050-099, 275-299
	53			D04517P	W0109			150-199
	54	D06734J	W0942	D06734P	W0109			ALL
	55	D05573J	W1533	D05573P	W0109			ALL
	56	D04525J	W1503	D04525P	W0109			ALL
	57	D05525J	W0451	D05525P	W0109			ALL
	58	D04853J	W1605	D04853P	W0109			ALL
	59	D05371J	W1501	D05371P	W0161			ALL

## DISCONNECT BRACKET LIST

D280T132

**91-04-00**

Section AE0300

Page 2

Jun 28/2006



Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AE0306	<b>STNCH-RIGHT SIDE INBD CARGO DISC</b>					<b>064</b>	<b>0355/125/R013</b>	<b>ALL</b>
	03	D04695J	W0685	D04695P	W0133			ALL
	04	D04229J	W1633	D04229P	W0133			ALL
	05	D04721J	W1533	D04721P	W0133			ALL
	6			D04151P	W0133			150-199
	06	D04151J	W0391	D04151P	W0133			050-099, 275-299
	06	D04151J	W0391					150-199
	07	D04868J	W0510	D04868P	W0133			ALL
	08	D04735J	W1633	D04735P	W0133			ALL
	09	D04445J	W1311	D04445P	W0133			ALL
	11	D04217J	W0219	D04217P	W0133			ALL
	12	D05227J	W1701	D05227P	W0135			ALL
	13	D04215J	W0219	D04215P	W0135			ALL
	14	D05207J	W1605	D05207P	W0135			ALL
	15	D05202J	W1726	D05202P	W0014			ALL
	16	D04765J	W0711	D04765P	W0135			ALL
	17	D04862J	W0510	D04862P	W0014			ALL
	18	D08024J	W0752	D08024P	W0014			ALL
	19	D05294J	W0602	D05294P	W0014			ALL
	20	D08034J	W0756	D08034P	W0014			ALL
	21	D05734J	W1246	D05734P	W0014			ALL
	23	D05364J	W0602	D05364P	W0014			ALL
	25	D05029J	W0689	D05029P	W0139			ALL
	26	D04633J	W0649	D04633P	W0139			ALL
	27	D04213J	W0219	D04213P	W0139			ALL
	28	D06153J	W0819	D06153P	W0163			150, 153-199, 277-299
	29	D04211J	W0219	D04211P	W0163			ALL
	31	D04653J	W0683	D04653P	W0163			ALL
	32	D06802J	W0572	D06802P	W0183			275-299
	33	D04681J	W1633	D04681P	W0133			ALL
	34	D05201J	W1503	D05201P	W0133			ALL
	36	D06151J	W0819	D06151P	W0133			150, 153-199, 277-299
	37	D04791J	W0471	D04791P	W0133			ALL
	38	D05203J	W0451	D05203P	W0133			ALL
	39	D04429J	W0517	D04429P	W0133			ALL
	40	D04373J	W0487	D04373P	W0133			ALL
	41	D04717J	W1561	D04717P	W0133			ALL
	42	D05517J	W0669					150-199, 275-299
	43	D05427J	W0517	D05427P	W0135			ALL
	44	D05229J	W1603	D05229P	W0135			ALL
	46	D04711J	W0471	D04711P	W0135			ALL

**DISCONNECT BRACKET LIST**

D280T132

**91-04-00**

Section AE0300

Page 3

Jun 28/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
<b>AE0306</b>	<b>STNCH-RIGHT SIDE INBD CARGO DISC (continued)</b>					<b>064</b>	<b>0355/125/R013</b>	<b>ALL</b>
	47	D04448J	W0942	D04448P	W0098			ALL
	48	D05626J	W0756	D05626P	W0014			ALL
	49	D05288J	W0588	D05288P	W0014			ALL
	50	D04110J	W0214	D04110P	W0014			ALL
	51	D04960J	W0654	D04960P	W0014			ALL
	53	D04466J	W0942	D04466P	W0098			ALL
	55	D05212J	W0588	D05212P	W0014			ALL
	56	D04737J	W1633	D04737P	W0139			ALL
	57	D04931J	W0847	D04931P	W0139			ALL
	59	D04581J	W0623	D04581P	W0149			ALL
	61	D04787J	W0633	D04787P	W0163			ALL
	62	D06806J	W0602	D06806P	W0183			275-299
<b>AE0307</b>	<b>BRACKET-E1 AND E2 EQUIP CTR DISC</b>					<b>104</b>	<b>0350/157/0000</b>	<b>ALL</b>
	04	D04731J	W0695	D04731P	W0135			ALL
	06	D04729J	W0693	D04729P	W0135			ALL
	08	D05842J	W0596	D05842P	W0098			ALL
	09	D04320J	W0596	D04320P	W0098			ALL
	10	D05225J	W1307	D05225P	W0135			ALL
	11	D04705J	W0407	D04705P	W0127			ALL
	13	D05206J	W1722	D05206P	W0018			ALL
	15	D04405J	W1725	D04405P	W0127			ALL
	18	D04227J	W0203	D04227P	W0149			ALL
	20	D04625J	W0645	D04625P	W0149			ALL
	22	D04953J	W0849	D04953P	W0139			ALL
	24	D04927J	W0843	D04927P	W0139			ALL
	25	D04293J	W0223	D04293P	W0181			ALL
	26	D05153J	W1581	D05153P	W0181			ALL
	28	D08202J	W0908	D08202P	W1092			150-199, 275-299
	29	D05102J	W0780	D05102P	W1092			ALL
	30	D05151J	W1581	D05151P	W0153			ALL
	33	D04741J	W0713	D04741P	W0135			ALL
	34	D04343J	W1527	D04343P	W0155			ALL
	35	D05196J	W0596	D05196P	W0098			ALL
	36	D04944J	W0598	D04944P	W0098			ALL
	39	D04305J	W0409	D04305P	W0127			ALL
	42	D04355J	W1521	D04355P	W0127			050-099, 150-199
	43	D04355J	W1521	D04355P	W0127			275-299
	44	D05680J	W0598	D05680P	W0119			ALL
	45	D05109J	W0721	D05109P	W0139			ALL

## DISCONNECT BRACKET LIST

D280T132

**91-04-00**

Section AE0300

Page 4

Jun 28/2006





Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
<b>AE0307</b>	<b>BRACKET-E1 AND E2 EQUIP CTR DISC (continued)</b>					<b>104</b>	<b>0350/157/0000</b>	<b>ALL</b>
	46	D04615J	W0639	D04615P	W0149			ALL
	48	D04647J	W0665	D04647P	W0149			ALL
	49	D05303J	W0857	D05303P	W0149			ALL
	53	D04874J	W0600	D04874P	W1084			ALL
	54	D04233J	W0203	D04233P	W0133			ALL
	55	D04915J	W1523	D04915P	W1096			ALL
	56	D05281J	W1287	D05281P	W1092			ALL
	59	D04331J	W1527	D04331P	W0014			ALL
	60	D04048J	W0240	D04048P	W0018			ALL
	62	D05557J	W0529	D05557P	W0127			ALL
	63	D04225J	W0223	D04225P	W0127			ALL
	67	D04421J	W0513	D04421P	W0127			ALL
	71	D05421J	W0645	D05421P	W0149			ALL
	72	D04629J	W0647	D04629P	W0149			ALL
	78	D06808J	W0628	D06808P	W0183			275-299
	79	D05210J	W0596	D05210P	W1084			ALL
	81	D04751P	W1090	D04751J	W0721			ALL
	81	D04751J	W0721	D04751P	W1090			ALL
	85	D05383J	W1271	D05383P	W0105			ALL
	87	D04114J	W0240	D04114P	W0018			ALL
	89	D04333J	W1527	D04333P	W0127			ALL
	90	D04543J	W0455	D04543P	W0127			ALL
	91	D04881J	W0411	D04881P	W0127			ALL
	93	D04381J	W0501	D04381P	W0127			ALL
	95	D04913J	W1523	D04913P	W0127			ALL
	100	D06804J	W1287	D06804P	W0183			275-299
	102	D04613J	W1343	D04613P	W0149			ALL
	103	D04969J	W1523	D04969P	W0181			ALL
	104	D04773J	W0596	D04773P	W0181			ALL
<b>AE0308</b>	<b>SHELF-E2-1 DISC</b>					<b>019</b>	<b>0344/190/R043</b>	<b>ALL</b>
	01	D04945J	W0131	D04945P	W0219			ALL
	02	D04983J	W0131	D04983P	W0743			150-199, 275-299
	03	D05547J	W0131	D05547P	W1601			ALL
	04	D05293J	W0151	D05293P	W0585			ALL
	05	D05035J	W1131	D05035P	W1247			ALL
	08	D05141J	W0151	D05141P	W1295			ALL
	09	D05139J	W0141	D05139P	W1293			ALL
	10	D05137J	W0131	D05137P	W1291			ALL
	11	D05487J	W0141	D05487P	W1265			ALL

DISCONNECT BRACKET LIST

D280T132

91-04-00

Section AE0300

Page 5

Jun 28/2006



## 767-200/300 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
<b>AE0308</b>	<b>SHELF-E2-1 DISC (continued)</b>					<b>019</b>	<b>0344/190/R043</b>	<b>ALL</b>
	12	D05485J	W0151	D05485P	W1263			ALL
	13	D05483J	W0131	D05483P	W1261			ALL
	14	D04363J	W0141	D04363P	W1541			ALL
	15	D05489J	W0141	D05489P	W1511			ALL
	16	D04843J	W0141	D04843P	W1309			ALL
	18	D04257J	W0141	D04257P	W0205			ALL
<b>AE0311</b>	<b>PANEL-P31 GEN PWR LEFT SIDE DISC</b>					<b>004</b>	<b>0341/143/L066</b>	<b>ALL</b>
	01	D04054J	W0022	D04054P	W0214			ALL
	02	D04080J	W0022	D04080P	W0214			ALL
	03	D04068J	W0022	D04068P	W0216			ALL
	04	D04052J	W0022	D04052P	W0240			ALL
	05	D06380J	W0022	D06380P	W0304			275-299
<b>AE0312</b>	<b>PANEL-P32 GEN PWR RIGHT SIDE DISC</b>					<b>004</b>	<b>0345/150/R075</b>	<b>ALL</b>
	01	D08686J	W0024	D08686P	W0428			050-099, 150-199
	02	D04038J	W0024	D04038P	W0248			ALL
	03	D04062J	W0024	D04062P	W0222			ALL
	04	D04012J	W0024	D04012P	W0222			ALL
<b>AE0313</b>	<b>SHELF-E1-2 DISC</b>					<b>018</b>	<b>0344/180/L047</b>	<b>ALL</b>
	03	D05603J	W1103	D05603P	W0105			ALL
	04	D05653J	W1103	D05653P	W0105			ALL
	09	D05613J	W1100	D05613P	W0115			ALL
<b>AE0314</b>	<b>SHELF-E2-2 DISC</b>					<b>018</b>	<b>0344/180/R043</b>	<b>ALL</b>
	4	D06261J	W0143					150-166
	4	D06261J	W0143	D06261P	W0145			167-199, 275-299
	05	D05713J	W0143	D05713P	W0145			ALL
	07	D05703J	W0133	D05703P	W0135			ALL
	08	D05723J	W0153	D05723P	W0155			ALL
	09	D05753J	W0133	D05753P	W0135			ALL
	10	D05733J	W0133	D05733P	W0135			ALL
	14	D05763J	W0143	D05763P	W0145			ALL
	17	D06199J	W0133	D06199P	W0135			157, 167-199, 275-299
<b>AE0315</b>	<b>SHELF-E1-3 DISC</b>					<b>018</b>	<b>0344/169/L047</b>	<b>ALL</b>
	07	D05605J	W0105	D05605P	W0107			ALL
	11	D05635J	W0125	D05635P	W0127			ALL
	13	D05615J	W0115	D05615P	W0117			ALL

### DISCONNECT BRACKET LIST

D280T132

**91-04-00**

Section AE0300

Page 6

Jun 28/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
<b>AE0315</b>	<b>SHELF-E1-3 DISC (continued)</b>					<b>018</b>	<b>0344/169/L047</b>	<b>ALL</b>
	14	D05655J	W0105	D05655P	W0107			ALL
	16	D05625J	W0125	D05625P	W0127			ALL
<b>AE0316</b>	<b>SHELF-E2-3 DISC</b>					<b>018</b>	<b>0344/169/R043</b>	<b>ALL</b>
	04	D05705J	W0135	D05705P	W0014			ALL
	06	D01425	W0145					ALL
	11	D05715J	W0145	D05715P	W0016			ALL
<b>AE0317</b>	<b>STNCH-LEFT SIDE INBD CARGO DISC</b>					<b>064</b>	<b>0355/125/L013</b>	<b>ALL</b>
	01	D05350J	W0628	D05350P	W1084			ALL
	02	D05230J	W0738	D05230P	W1084			ALL
	03	D05428J	W0764	D05428P	W1100			ALL
	05	D05618J	W0616	D05618P	W1092			ALL
	06	D05566J	W0628	D05566P	W1100			ALL
	07	D04545J	W0515	D04545P	W1100			ALL
	08	D05498J	W0916	D05498P	W1092			ALL
	10	D04875J	W1513	D04875P	W1100			ALL
	12	D04859J	W1515	D04859P	W0115			ALL
	15	D07162J	W0656	D07162P	W0117			ALL
	17	D05529J	W1513	D05529P	W0117			ALL
	18	D04247J	W0205	D04247P	W0119			ALL
	19	D04325J	W0453	D04325P	W0119			ALL
	20	D04393J	W0417	D04393P	W0119			ALL
	21	D04595J	W0463	D04595P	W0119			ALL
	22	D04857J	W1515	D04857P	W0119			ALL
	23	D04793J	W0475	D04793P	W0119			ALL
	24	D04571J	W1417	D04571P	W0117			ALL
	25	D04873J	W1513	D04873P	W0119			ALL
	27	D04245J	W0205	D04245P	W0171			ALL
	33	D05066J	W0656	D05066P	W1084			ALL
	34	D04656J	W0506	D04656P	W1084			ALL
	36	D05430J	W0766	D05430P	W1100			ALL
	37	D05496J	W0902	D05496P	W1092			ALL
	38	D04658J	W0506	D04658P	W1100			ALL
	39	D05638J	W0768	D05638P	W1100			ALL
	40	D05130J	W1226	D05130P	W1092			ALL
	41	D06278J	W0768	D06278P	W1100			ALL
	43	D04879J	W0527	D04879P	W0115			ALL
	44	D05821J	W0475	D05821P	W0115			ALL
	46	D04683J	W1615	D04683P	W0115			ALL

## DISCONNECT BRACKET LIST

D280T132

**91-04-00**

Section AE0300

Page 7

Jun 28/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
<b>AE0317</b>	<b>STNCH-LEFT SIDE INBD CARGO DISC (continued)</b>					<b>064</b>	<b>0355/125/L013</b>	<b>ALL</b>
	47	D04895J	W0413	D04895P	W0105			ALL
	50	D04883J	W0413	D04883P	W0119			ALL
	51	D04447J	W1645	D04447P	W0119			ALL
	52	D04385J	W0503	D04385P	W0119			ALL
	53	D05505J	W1649	D05505P	W0119			ALL
	54	D04805J	W1619	D04805P	W0119			ALL
	55	D04455J	W0527	D04455P	W0119			ALL
	56	D04361J	W1541	D04361P	W0119			ALL
	57	D04529J	W1729	D04529P	W0119			ALL
	59	D05373J	W1541	D05373P	W0171			ALL
	60	D04769J	W1615	D04769P	W0171			ALL
	61	D05397J	W1511	D05397P	W0171			ALL
<b>AE0319</b>	<b>STNCH-LEFT SIDE AFT DISC</b>					<b>093</b>	<b>0347/130/L048</b>	<b>ALL</b>
		D09123J	W9090	D09123P	W0109			150, 152-199, 275-299
	03	D06074J	W0942	D06074P	W0986			ALL
	06	D06312J	W0264	D06312P	W0986			ALL
	10	D05122J	W1724	D05122P	W1092			ALL
	11	D05646J	W0264	D05646P	W1090			ALL
	12	D05140J	W1728	D05140P	W1100			ALL
	14	D05365J	W0803	D05365P	W1100			ALL
	16	D04565J	W0619	D04565P	W1090			ALL
	18	D04060J	W0214	D04060P	W1092			ALL
	19	D08022J	W0746	D08022P	W1092			ALL
	20	D04058J	W0214	D04058P	W1092			ALL
	22	D05101J	W0731	D05101P	W1103			ALL
	24	D05097J	W0731	D05097P	W1103			ALL
	25	D04889J	W0779	D04889P	W1103			ALL
	26	D04371J	W1599	D04371P	W1103			ALL
	28	D05581J	W0397	D05581P	W1103			ALL
	29	D05867J	W1499	D05867P	W1103			ALL
	30	D08020J	W0744	D08020P	W1092			ALL
	31	D04591J	W0459	D04591P	W0105			ALL
	32	D04367J	W0697	D04367P	W0105			ALL
	35	D04337J	W0465	D04337P	W0105			050-099, 150-199
	36	D05391J	W1601	D05391P	W0105			ALL
	39	D03691J	W1603	D03691P	W0105			ALL
	40	D04169J	W0397	D04169P	W0105			ALL
	42	D04239J	W0207	D04239P	W0125			ALL
	46	D05247J	W1701	D05247P	W0105			ALL

## DISCONNECT BRACKET LIST

D280T132

**91-04-00**

Section AE0300

Page 8

Jun 28/2006



Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
<b>AE0319</b>	<b>STNCH-LEFT SIDE AFT DISC (continued)</b>					<b>093</b>	<b>0347/130/L048</b>	<b>ALL</b>
	47	D04309J	W0431	D04309P	W0105			ALL
	48	D04365J	W0481	D04365P	W0105			ALL
	49	D04241J	W0207	D04241P	W0127			ALL
	50	D05553J	W0419	D05553P	W0127			ALL
	52	D04175J	W0399	D04175P	W0127			ALL
	53	D04815J	W1705	D04815P	W0127			ALL
	54	D05455J	W0523	D05455P	W0127			ALL
	55	D04593J	W0461	D04593P	W0127			ALL
	56	D04901J	W0397	D04901P	W0107			ALL
	57	D04409J	W0483	D04409P	W0127			ALL
	58	D04387J	W1599	D04387P	W1127			ALL
	59	D05079J	W0731	D05079P	W1127			ALL
	67	D04849J	W0803	D04849P	W0119			ALL
	70	D04369J	W0485	D04369P	W0119			ALL
	71	D05081J	W0733	D05081P	W1119			ALL
	72	D05389J	W0733	D05389P	W1127			ALL
	73	D04829J	W0779	D04829P	W0109			ALL
	75	D05085J	W0733	D05085P	W1119			ALL
	78	D04345J	W0469	D04345P	W0119			ALL
	79	D05523J	W0397	D05523P	W0109			ALL
	86	D04699J	W0751	D04699P	W0161			ALL
	90	D04753J	W0264	D04753P	W0161			ALL
	91	D04761J	W0725	D04761P	W0171			ALL
	93	D04757J	W0723	D04757P	W0181			ALL
<b>AE0320</b>	<b>STNCH-RIGHT SIDE OUTBD CARGO DISC</b>					<b>064</b>	<b>0355/125/R038</b>	<b>ALL</b>
	03	D05575J	W0515	D05575P	W0143			ALL
	05	D05861J	W1515	D05861P	W0143			ALL
	06	D05439J	W0473	D05439P	W0145			ALL
	08	D04667J	W0473	D04667P	W0145			ALL
	10	D05065J	W1703	D05065P	W0145			ALL
	11	D05407J	W1511	D05407P	W0145			ALL
	12	D04767J	W1615	D04767P	W0145			ALL
	13	D04449J	W1645	D04449P	W0145			ALL
	14	D04821J	W1619	D04821P	W0145			ALL
	15	D06140J	W0768	D06140P	W0016			ALL
	16	D04811J	W1649	D04811P	W0145			ALL
	17	D04916J	W0656	D04916P	W0016			ALL
	18	D05622J	W0768	D05622P	W0016			ALL
	19	D05292J	W0628	D05292P	W0016			ALL

DISCONNECT BRACKET LIST

D280T132

91-04-00

Section AE0300

Page 9

Jun 28/2006



## 767-200/300 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
<b>AE0320</b>	<b>STNCH-RIGHT SIDE OUTBD CARGO DISC (continued)</b>					<b>064</b>	<b>0355/125/R038</b>	<b>ALL</b>
	20	D04034J	W0222	D04034P	W0016			ALL
	21	D04078J	W0222	D04078P	W0016			ALL
	22	D04036J	W0222	D04036P	W0016			ALL
	23	D08614J	W0656	D08614P	W0016			ALL
	24	D04813J	W1649	D04813P	W0139			ALL
	25	D05593J	W1407	D05593P	W0149			ALL
	27	D04789J	W0635	D04789P	W0173			ALL
	33	D05932J	W0624	D05932P	W1120			ALL
	34	D04294J	W0624	D04294P	W1120			ALL
	37	D04679J	W0453	D04679P	W0145			ALL
	38	D04377J	W0489	D04377P	W0145			ALL
	40	D04899J	W0527	D04899P	W0145			ALL
	41	D04339J	W1513	D04339P	W0145			ALL
	42	D04819J	W0453	D04819P	W0145			ALL
	43	D04253J	W0205	D04253P	W0145			ALL
	44	D05519J	W0671					150-199, 275-299
	45	D04768J	W0624	D04768P	W0016			ALL
	47	D05204J	W0506	D05204P	W0016			ALL
	48	D04804J	W0738	D04804P	W0098			ALL
	49	D04638J	W0738	D04638P	W0098			ALL
	51	D05878J	W0738	D05878P	W0098			ALL
	53	D05678J	W1226	D05678P	W0149			ALL
	55	D04251J	W0205	D04251P	W0149			ALL
	57	D04963J	W0853	D04963P	W0149			ALL
	59	D04255J	W0211	D04255P	W0173			ALL
	60	D06159J	W0817	D06159P	W0173			150, 153-199, 277-299
<b>AE0321</b>	<b>SHELF-E1-4 DISC</b>					<b>018</b>	<b>0344/149/L047</b>	<b>ALL</b>
	02	D05617J	W0117	D05617P	W0119			ALL
	03	D05677J	W1127	D05677P	W1119			ALL
	4	D05647J	W0117	D05647P	W1119			ALL
	05	D05627J	W0127	D05627P	W0129			ALL
	06	D05607J	W0107	D05607P	W0109			ALL
	11	D05637J	W0127	D05637P	W0129			ALL
<b>AE0322</b>	<b>STNCH-RIGHT SIDE AFT DISC</b>					<b>062</b>	<b>0347/160/R044</b>	<b>ALL</b>
	05	D06119J	W0807	D06119P	W0143			ALL
	09	D04073J	W0311	D04073P	W1085			ALL
	12	D06223J	W0691	D06223P	W0135			ALL
	13	D04081J	W1907	D04081P	W1065			ALL

### DISCONNECT BRACKET LIST

D280T132

**91-04-00**

Section AE0300

Page 10

Jun 28/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
<b>AE0322</b>	<b>STNCH-RIGHT SIDE AFT DISC (continued)</b>					<b>062</b>	<b>0347/160/R044</b>	<b>ALL</b>
	14	D04101J	W0337	D04101P	W1067			ALL
	17	D04069J	W0309	D04069P	W1083			ALL
	18	D04093P	W1063	D04093J	W1905			ALL
	18	D04093J	W1905	D04093P	W1063			ALL
	19	D06157J	W0817	D06157P	W0145			150, 153-199, 277-299
	21	D04771J	W1369					275-299
	23	D05425J	W0519	D05425P	W0143			ALL
	24	D03693J	W1615	D03693P	W0145			ALL
	25	D04077J	W0315	D04077P	W1087			ALL
	27	D04097J	W1903	D04097P	W1099			ALL
	28	D04943J	W1505	D04943P	W0135			ALL
	29	D04317J	W0441	D04317P	W0145			ALL
	30	D04505J	W0855	D04505P	W0145			ALL
	31	D04725J	W0691	D04725P	W0135			ALL
	32	D04697J	W0687	D04697P	W0145			ALL
	33	D04433J	W0519	D04433P	W0145			ALL
	35	D04085J	W1909	D04085P	W1069			ALL
	36	D04105J	W0341	D04105P	W1071			ALL
	37	D06594J	W0606	D06594P	W0135			ALL
	38	D04074J	W0248	D04074P	W0018			ALL
	39	D05676J	W0262	D05676P	W0098			ALL
	41	D04072J	W0248	D04072P	W0018			ALL
	43	D04957J	W0851	D04957P	W0139			277-278
	47	D04603J	W0657	D04603P	W0139			ALL
	48	D04607J	W0659	D04607P	W0139			ALL
	50	D04599J	W0627	D04599P	W0139			ALL
	51	D04601J	W0655	D04601P	W0139			ALL
	52	D04017J	W0257	D04017P	W1077			ALL
	53	D05001J	W0863	D05001P	W0139			ALL
	55	D04929J	W0845	D04929P	W0139			ALL
	57	D04013J	W0253	D04013P	W1075			ALL
	58	D04009J	W0249	D04009P	W1073			ALL
	59	D05852J	W0926	D05852P	W0149			ALL
	60	D04657J	W0675	D04657P	W0173			ALL
	61	D04001J	W0241	D04001P	W1079			ALL
	62	D04005J	W0245	D04005P	W1081			ALL
<b>AE0323</b>	<b>SHELF-E1-5 DISC</b>					<b>018</b>	<b>0344/139/L047</b>	<b>ALL</b>
	01	D05619J	W0119	D05619P	W0171			ALL
	02	D05609J	W0109	D05609P	W0161			ALL

## DISCONNECT BRACKET LIST

D280T132

**91-04-00**

Section AE0300

Page 11

Jun 28/2006



## 767-200/300 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
<b>AE0323</b>	<b>SHELF-E1-5 DISC (continued)</b>					<b>018</b>	<b>0344/139/L047</b>	<b>ALL</b>
	13	D05629J	W0129	D05629P	W0181			ALL
<b>AE0324</b>	<b>SHELF-E2-5 DISC</b>					<b>018</b>	<b>0344/139/R043</b>	<b>ALL</b>
	10	D05719J	W0149	D05719P	W0173			ALL
	12	D05709J	W0139	D05709P	W0163			ALL
	13			D01429	W0139			ALL
	17			D01427	W0139			ALL
<b>AE0325</b>	<b>SHELF-E1-3 TCAS ANT DISC</b>					<b>010</b>	<b>0352/158/L025</b>	<b>050-099, 153-199, 277-299</b>
<b>AE0325</b>	<b>SHELF-E1-3 TCAS ANT DISC (SB 34-0091)</b>					<b>010</b>	<b>0352/158/L025</b>	<b>150-152</b>
	01	D06089J	W1775	D06089P	W1175			050-099, 150-199, 277-299
	02	D06087J	W1771	D06087P	W1171			050-099, 150-199, 277-299
	03	D06093J	W1779	D06093P	W1179			050-099, 150-199, 277-299
	04	D06091J	W1777	D06091P	W1177			050-099, 150-199, 277-299
	07	D06095J	W1769	D06095P	W1181			050-099, 150-199, 277-299
	08	D06137J	W1769	D06137P	W1181			050-099, 150-199, 277-299
	09	D06133J	W1769	D06133P	W1181			050-099, 150-199, 277-299
	10	D06135J	W1769	D06135P	W1181			050-099, 150-199, 277-299
<b>AE0326</b>	<b>TCAS DISC. LOWER ANT.</b>					<b>004</b>	<b>0399/108/R008</b>	<b>050-099, 153-199, 277-299</b>
<b>AE0326</b>	<b>TCAS DISC. LOWER ANT. (SB 34-0091)</b>					<b>004</b>	<b>0399/108/R008</b>	<b>150-152, 275-276</b>
	01	D06097J	W1769	D06097P	W1901			050-099, 150-199, 277-299
	01	D06097P	W1901	D06097J	W1769			050-099, 150-199, 277-299
	02	D06127J	W1769	D06127P	W1901			050-099, 150-199, 277-299
	02	D06127P	W1901	D06127J	W1769			050-099, 150-199, 277-299
	03	D06129J	W1769	D06129P	W1901			050-099, 150-199, 277-299
	03	D06129P	W1901	D06129J	W1769			050-099, 150-199, 277-299
	04	D06131J	W1769	D06131P	W1901			050-099, 150-199, 277-299
	04	D06131P	W1901	D06131J	W1769			050-099, 150-199, 277-299

### DISCONNECT BRACKET LIST

D280T132

**91-04-00**

Section AE0300

Page 12 End

Jun 28/2006





Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity	
AF0111	<b>PANEL-P5 LEFT SIDE DISC</b>					003	0194/275/L002	ALL	
	02	D04968J	W0608	D04968P	W0062				ALL
	03	D04966J	W0584	D04966P	W0062				ALL
AF0112	<b>PANEL-P5 RIGHT SIDE DISC</b>					003	0194/275/R002	ALL	
	01	D04970J	W0586	D04970P	W0066				ALL
	02	D04972J	W0610	D04972P	W0066				ALL
AF0113	<b>PANEL-P1-3 DISCONNECT</b>					006	0140/234/L015	ALL	
	01	D04285J	W0013	D04285P	W0011				ALL
	03			D04580P	W0013				ALL
	04			D04586P	W0013				ALL
	05	D04513J	W0013	D04513P	W0051				ALL
	06	D05107J	W0013	D05107P	W0031				ALL
AF0116	<b>PANEL-P3-1 DISCONNECT</b>					003	0140/234/R015	ALL	
	01	D05305J	W0035	D05305P	W0011				ALL
	02	D04515J	W0035	D04515P	W0051				ALL
	03	D05309J	W0035	D05309P	W0031				ALL
AF0117	<b>PANEL-P7 DISCONNECT LEFT SIDE</b>					005	0151/259/L021	ALL	
	01	D04982J	W0051	D04982P	W1052				050-099, 150-154, 162-164, 275-276
	02	D05014J	W0011	D05014P	W1052				050-099, 150-154, 162-164, 275-276
	02	D04982J	W0051	D04982P	W1052				155-157, 165-199, 277-299
	03	D04867J	W0731	D04867P	W1052				050-099, 150-154, 162-164, 275-276
	03	D05014J	W0011	D05014P	W1052				155-157, 165-199, 277-299
	04	D04867J	W0731	D04867P	W1052				155-157, 165-199, 277-299
	05	D05016J	W0031	D05016P	W1052				050-099, 150-154, 162-164, 275-276
	06	D05016J	W0031	D05016P	W1052				155-157, 165-199, 277-299
	AF0118	<b>PANEL-P7 DISCONNECT RIGHT SIDE</b>							005
01		D04984J	W0051	D04984P	W1054	050-099, 150-154, 162-164, 275-276			
02		D05020J	W0031	D05020P	W1054	050-099, 150-154, 162-164, 275-276			
02		D04984J	W0051	D04984P	W1054	155-157, 165-199, 277-299			

DISCONNECT BRACKET LIST

D280T132

91-04-00

Section AF0100

Page 1

Jun 28/2006



## 767-200/300 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
<b>AF0118</b>	<b>PANEL-P7 DISCONNECT RIGHT SIDE (continued)</b>					<b>005</b>	<b>0151/259/R021</b>	<b>ALL</b>
	03	D04869J	W0733	D04869P	W1054			050-099, 150-154, 162-164, 275-276
	03	D05020J	W0031	D05020P	W1054			155-157, 165-199, 277-299
	04	D04869J	W0733	D04869P	W1054			155-157, 165-199, 277-299
	05	D05018J	W0011	D05018P	W1054			050-099, 150-154, 162-164, 275-276
	06	D05018J	W0011	D05018P	W1054			155-157, 165-199, 277-299
<b>AF0119</b>	<b>PANEL-P1 DISCONNECT</b>					<b>025</b>	<b>0149/210/L040</b>	<b>ALL</b>
	01	D04171J	W0397	D04171P	W0011			ALL
	02	D04167J	W0397	D04167P	W0011			ALL
	03	D05255J	W1311	D05255P	W0011			ALL
	04	D04173J	W0399	D04173P	W0011			ALL
	05	D04163J	W0209	D04163P	W0011			ALL
	07	D05115J	W1711	D05115P	W0011			ALL
	08	D04704J	W0584	D04704P	W0974			ALL
	09	D05809J	W0731	D05809P	W0011			ALL
	10	D05453J	W0523	D05453P	W0051			ALL
	11	D04147J	W0391	D04147P	W0011			ALL
	12	D04267J	W0207	D04267P	W0051			ALL
	13	D04501J	W0461	D04501P	W0011			ALL
	14	D05813J	W0733	D05813P	W0031			ALL
	15	D05113J	W1437	D05113P	W0031			ALL
	16	D06348J	W0584	D06348P	W0051			ALL
	17	D05415J	W0487	D05415P	W0011			ALL
	19	D05117J	W1711	D05117P	W0031			ALL
	20	D05419J	W0459	D05419P	W0011			ALL
	21	D05551J	W0419	D05551P	W0011			ALL
	25	D05111J	W1435	D05111P	W0011			ALL
<b>AF0120</b>	<b>PANEL-P3 DISCONNECT</b>					<b>025</b>	<b>0149/210/R040</b>	<b>ALL</b>
	01	D04560J	W0632	D04560P	W0011			ALL
	02	D05395J	W0632	D05395P	W0011			ALL
	03	D06184J	W0744	D06184P	W0011			ALL
	05	D04556J	W0634	D04556P	W0051			ALL
	06	D05347J	W0634	D05347P	W0051			ALL
	07	D06186J	W0746	D06186P	W0011			ALL
	08	D05555J	W0529	D05555P	W0031			ALL
	12	D06350J	W0586	D06350P	W0051			ALL
	13	D05417J	W0489	D05417P	W0031			ALL

### DISCONNECT BRACKET LIST

D280T132

**91-04-00**

Section AF0100

Page 2

Jun 28/2006



Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AF0120	<b>PANEL-P3 DISCONNECT (continued)</b>					025	0149/210/R040	ALL
	14	D06180J	W0766	D06180P	W0031			ALL
	15	D04263J	W0211	D04263P	W0031			ALL
	16	D04321J	W0449	D04321P	W0031			ALL
	17	D05393J	W0638	D05393P	W0031			ALL
	18	D04391J	W0417	D04391P	W0031			ALL
	19	D04965J	W0855	D04965P	W0031			ALL
	20	D05423J	W0463	D05423P	W0031			ALL
	21	D06178J	W0764	D06178P	W0031			ALL
	22	D06182J	W0766	D06182P	W0031			ALL
	23	D04706J	W0586	D04706P	W0976			ALL
	24	D05399J	W0638	D05399P	W0031			ALL
	25	D04893J	W0527	D04893P	W0031			ALL

DISCONNECT BRACKET LIST

D280T132

91-04-00

Section AF0100

Page 3 End

Jun 28/2006



## 767-200/300 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
<b>AF0201</b>	<b>PANEL-P11 LEFT SIDE DISC</b>					<b>008</b>	<b>0212/280/L020</b>	<b>ALL</b>
	02	D04273J	W0040	D04273P	W0219			ALL
	03	D04165J	W0040	D04165P	W0209			ALL
	04	D04189J	W0044	D04189P	W0207			ALL
	05	D04185J	W0044	D04185P	W0203			ALL
	06	D05708J	W0044	D05708P	W0712			ALL
	07	D05010J	W0044	D05010P	W0070			ALL
	08	D04193J	W0042	D04193P	W0211			ALL
<b>AF0203</b>	<b>PANEL-P11 LEFT SIDE DISC</b>					<b>006</b>	<b>0206/280/L010</b>	<b>ALL</b>
	01	D05000J	W0040	D05000P	W0062			ALL
	02	D05012J	W0044	D05012P	W0070			ALL
	03	D05006J	W0042	D05006P	W0066			ALL
	04	D04187J	W0042	D04187P	W0205			ALL
	05	D04271J	W0040	D04271P	W0201			ALL
	06	D05187J	W0042	D05187P	W0223			ALL
<b>AF0204</b>	<b>PANEL-P61 PNL DISCONNECT</b>					<b>095</b>	<b>0234/250/R050</b>	<b>ALL</b>
	01	D07980J	W0070	D07980P	W0044			ALL
	02	D07982J	W0070	D07982P	W0044			ALL
	03	D07984J	W0070	D07984P	W0044			ALL
	04	D07972J	W0066	D07972P	W0042			ALL
	05	D07974J	W0066	D07974P	W0042			ALL
	06	D07976J	W0066	D07976P	W0042			ALL
	07	D07978J	W0066	D07978P	W0042			ALL
	08	D07986J	W0066	D07986P	W0042			ALL
	09	D07988J	W0066	D07988P	W0042			ALL
	10	D07960J	W0062	D07960P	W0040			ALL
	11	D07962J	W0062	D07962P	W0040			ALL
	12	D07964J	W0062	D07964P	W0040			ALL
	13	D07966J	W0062	D07966P	W0040			ALL
	14	D07968J	W0062	D07968P	W0040			ALL
	15	D07970J	W0062	D07970P	W0040			ALL
	16	D05400J	W0062	D05400P	W1700			ALL
	17	D04720J	W0062	D04720P	W0744			ALL
	18	D04955J	W0062	D04955P	W0849			ALL
	19	D05311J	W0062	D05311P	W1711			ALL
	20	D04644J	W0062	D04644P	W0510			ALL
	21	D04726J	W0062	D04726P	W0510			ALL
	22	D05652J	W0062	D05652P	W0510			ALL
	24	D05402J	W0062	D05402P	W1706			ALL

### DISCONNECT BRACKET LIST

D280T132

**91-04-00**

Section AF0200

Page 1

Jun 28/2006



Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AF0204	<b>PANEL-P61 PNL DISCONNECT (continued)</b>					095	0234/250/R050	ALL
	25	D05726J	W0062	D05726P	W0572			ALL
	26	D05910J	W0062	D05910P	W0572			ALL
	27	D04708J	W0062	D04708P	W0572			ALL
	28	D05282J	W0062	D05282P	W0632			ALL
	29	D04990J	W0062	D04990P	W0632			ALL
	31	D04730J	W0062	D04730P	W0746			ALL
	32	D04732J	W0062	D04732P	W0746			ALL
	33	D05186J	W0062	D05186P	W0654			ALL
	34	D04714J	W0062	D04714P	W0756			ALL
	35	D04710J	W0062	D04710P	W0756			ALL
	36	D05180J	W0062	D05180P	W1216			ALL
	38	D05064J	W0062	D05064P	W0622			ALL
	39	D05732J	W0062	D05732P	W1246			ALL
	41	D04718J	W0062	D04718P	W0752			ALL
	42	D04778J	W0062	D04778P	W0214			ALL
	43	D04776J	W0062	D04776P	W0214			ALL
	45	D04994J	W0066	D04994P	W0638			ALL
	46	D04870J	W0066	D04870P	W1204			ALL
	47	D05906J	W0066	D05906P	W0902			ALL
	48	D06258J	W0066	D06258P	W0768			ALL
	49	D04758J	W0066	D04758P	W0768			ALL
	50	D05416J	W0066	D05416P	W0768			ALL
	52	D04738J	W0066	D04738P	W0766			ALL
	54	D04286J	W0066	D04286P	W0620			ALL
	55	D05124J	W0066	D05124P	W1222			ALL
	56	D05656J	W0066	D05656P	W0902			ALL
	57	D04794J	W0066	D04794P	W0222			ALL
	59	D04766J	W0066	D04766P	W0506			ALL
	60	D05764J	W0066	D05764P	W0506			ALL
	61	D05928J	W0066	D05928P	W0506			ALL
	62	D04650J	W0066	D04650P	W0506			ALL
	63	D05724J	W0066	D05724P	W0506			ALL
	64	D04760J	W0066	D04760P	W0766			ALL
	67	D04796J	W0060	D04796P	W0240			ALL
	68	D04754J	W0066	D04754P	W0764			ALL
	69	D05406J	W0066	D05406P	W1710			ALL
	70	D05062J	W0066	D05062P	W0624			ALL
	71	D05356J	W0066	D05356P	W0624			ALL
	74	D04772J	W0070	D04772P	W0600			ALL
	75	D08054J	W0070	D08054P	W0984			ALL

## DISCONNECT BRACKET LIST

D280T132

91-04-00

Section AF0200

Page 2

Jun 28/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
<b>AF0204</b>	<b>PANEL-P61 PNL DISCONNECT (continued)</b>					<b>095</b>	<b>0234/250/R050</b>	<b>ALL</b>
	76	D05410J	W0070	D05410P	W1716			ALL
	77	D08104J	W0070	D08104P	W1248			ALL
	78	D04952J	W0070	D04952P	W0606			ALL
	79	D06442J	W0066	D06442P	W1338			ALL
	81	D04938J	W0070	D04938P	W0596			ALL
	82	D04541J	W0070	D04541P	W0455			ALL
	83	D05042J	W0070	D05042P	W0614			ALL
	84	D04940J	W0070	D04940P	W0598			ALL
	85	D04854J	W0070	D04854P	W0590			ALL
	87	D04986J	W0070	D04986P	W0634			ALL
	88	D05792J	W0070	D05792P	W0634			ALL
	89	D05784J	W0070	D05784P	W0634			ALL
	90	D04756J	W0070	D04756P	W0262			ALL
	91	D04852J	W0070	D04852P	W0606			ALL
	92	D06225J	W0065	D06225P	W0691			ALL
	93	D04707J	W0065	D04707P	W0691			ALL
	94	D05854J	W0070	D05854P	W0264			ALL
	95	D04774J	W0070	D04774P	W0264			ALL
<b>AF0232</b>	<b>PANEL-P6 DISCONNECT</b>					<b>030</b>	<b>0221/215/R043</b>	<b>ALL</b>
	01	D05846J	W0048	D05846P	W0066			ALL
	02	D05920J	W0048	D05920P	W0066			ALL
	03	D06192J	W0048	D06192P	W0066			ALL
	04	D04090J	W1030	D04090P	W0280			ALL
	05	D04092J	W1030	D04092P	W0280			ALL
	06	D05848J	W0046	D05848P	W0062			ALL
	07	D05918J	W0046	D05918P	W0062			ALL
	08	D05934J	W0046	D05934P	W0062			ALL
	09	D04086J	W1026	D04086P	W0276			ALL
	10	D04088J	W1026	D04088P	W0276			ALL
	11	D05828J	W0028	D05828P	W0070			ALL
	12	D04126J	W0028	D04126P	W0256			ALL
	13	D04006J	W0028	D04006P	W0070			ALL
	14	D04094J	W1040	D04094P	W0278			ALL
	16	D04010J	W0028	D04010P	W0070			ALL
	17	D04096J	W1040	D04096P	W0278			ALL
	18	D04124J	W1040	D04124P	W0256			ALL
	19	D04008J	W0028	D04008P	W0070			ALL
	20	D06152J	W0148	D06152P	W0062			ALL
	21	D06156J	W0152	D06156P	W0066			ALL

## DISCONNECT BRACKET LIST

D280T132

**91-04-00**

Section AF0200

Page 3

Jun 28/2006



Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AF0232	<b>PANEL-P6 DISCONNECT (continued)</b>					030	0221/215/R043	ALL
	22	D06160J	W0156	D06160P	W0070			ALL
	23	D06154J	W0150	D06154P	W0062			ALL
	24	D06158J	W0154	D06158P	W0066			ALL
	25	D06172J	W0152	D06172P	W0638			ALL
	26	D06162J	W0158	D06162P	W0070			ALL
	27	D06174J	W0154	D06174P	W0638			ALL
	28	D06448J	W1026	D06448P	W1340			ALL
	29	D06444J	W1026	D06444P	W1340			ALL
	30	D06446J	W0048	D06446P	W1342			ALL
	31	D06430J	W0048	D06430P	W0280			150-199, 275-299

**DISCONNECT BRACKET LIST**

D280T132

**91-04-00**

Section AF0200

Page 4 End

Jun 28/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
<b>AL0201</b>	<b>PANEL-P40 DISC</b>					<b>002</b>	<b>0265/188/0000</b>	<b>ALL</b>
	01	D05936J	W0678	D05936P	W1132			050-099, 155-199, 275-299
	01	D05936J	W0678					050-099, 155-199, 275-299
	01			D05936P	W1132			050-099, 155-199, 275-299
	01	D05936J	W1132	D05936P	W0678			150-154
	01			D05936P	W0678			150-154
	01	D05936J	W1132					150-154
	02	D05938J	W0678	D05938P	W1130			050-099, 155-199, 275-299
	02	D05938J	W0678					050-099, 155-199, 275-299
	02			D05938P	W1130			050-099, 155-199, 275-299
	02	D05938J	W1130	D05938P	W0678			150-154
	02			D05938P	W0678			150-154
	02	D05938J	W1130					150-154
<b>AL0202</b>	<b>PANEL-NOSE WHEEL WELL DISC</b>					<b>004</b>	<b>0287/152/R025</b>	<b>ALL</b>
	01	D01952J	W0926					ALL
	02	D05850J	W0926	D05850P	W0678			ALL
	03	D04950J	W0606	D04950P	W0678			ALL
	04	D05040J	W0924	D05040P	W0678			ALL

## DISCONNECT BRACKET LIST

D280T132

**91-04-00**

Section AL0200

Page 1 End

Jun 28/2006





Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
<b>AL0901</b>	<b>PANEL-LEFT SIDE SPOILER DISC</b>					<b>003</b>	<b>0977/178/L092</b>	<b>ALL</b>
	01	D05233J	W0899	D05233P	W1261			ALL
	02	D05215J	W1201	D05215P	W1255			ALL
	03	D05237J	W1209	D05237P	W1265			ALL
<b>AL0902</b>	<b>PANEL-RIGHT SIDE SPOILER DISC</b>					<b>003</b>	<b>0977/178/R092</b>	<b>ALL</b>
	01	D05243J	W1221	D05243P	W1261			ALL
	02	D05217J	W1219	D05217P	W1255			ALL
	03	D05239J	W1211	D05239P	W1265			ALL

**DISCONNECT BRACKET LIST**

D280T132

**91-04-00**

Section AL0900

Page 1 End

Jun 28/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
<b>AL1001</b>	<b>PANEL-LEFT SIDE FWD OUTBD DISC</b>					<b>018</b>	<b>0999/193/L057</b>	<b>ALL</b>
	01	D04590J	W0756	D04590P	W0446			ALL
	02	D04610J	W0756	D04610P	W0446			ALL
	03	D04594J	W0942	D04594P	W0446			ALL
	04	D04302J	W0602	D04302P	W0840			ALL
	06	D04807J	W0495	D04807P	W0507			ALL
	07	D04602J	W0596	D04602P	W0454			ALL
	09	D04318J	W0628	D04318P	W0690			ALL
	11	D05702J	W1251	D05702P	W0446			ALL
	12	D04414J	W0942	D04414P	W0446			ALL
	13	D05562J	W0942	D05562P	W0446			ALL
	14	D05211J	W1205	D05211P	W1251			ALL
	15	D04612J	W0264	D04612P	W0458			ALL
	16	D06078J	W0596	D06078P	W0454			ALL
	17	D05884J	W0596	D05884P	W0454			ALL
<b>AL1002</b>	<b>PANEL-RIGHT SIDE FWD OUTBD DISC</b>					<b>018</b>	<b>0999/193/R057</b>	<b>ALL</b>
	01	D04268J	W0738	D04268P	W0448			ALL
	02	D05514J	W0768	D05514P	W0448			ALL
	03	D05880J	W0738	D05880P	W0448			ALL
	04	D05190J	W0628	D05190P	W0864			ALL
	05	D04278J	W0656	D04278P	W0452			ALL
	07	D05520J	W0598	D05520P	W0456			ALL
	08	D04300J	W0588	D04300P	W0928			ALL
	09	D04416J	W0752	D04416P	W0464			ALL
	10	D06080J	W0738	D06080P	W0448			ALL
	11	D04418J	W0738	D04418P	W0448			ALL
	12	D04538J	W0738	D04538P	W0448			ALL
	13	D04675J	W1725	D04675P	W1727			ALL
	14	D08376J	W0656	D08376P	W0452			050-099, 155-199, 276-299
	15	D05512J	W0202	D05512P	W0476			ALL
	16	D06978J	W0738	D06978P	W0464			155-157, 166-199, 277-299
	17	D04272J	W0752	D04272P	W0464			ALL
	18	D05221J	W1215	D05221P	W1251			ALL
<b>AL1003</b>	<b>PANEL-LEFT SIDE FWD INBD DISC</b>					<b>019</b>	<b>0999/193/L047</b>	<b>ALL</b>
	01	D04408J	W0578	D04408P	W0444			ALL
	02	D05558J	W0578	D05558P	W0444			ALL
	03	D04598J	W0602	D04598P	W0450			ALL
	04	D05044J	W0602	D05044P	W0626			ALL
	05	D06340J	W0602	D06340P	W0840			ALL

## DISCONNECT BRACKET LIST

D280T132

**91-04-00**

Section AL1000

Page 1

Jun 28/2006



Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
<b>AL1003</b>	<b>PANEL-LEFT SIDE FWD INBD DISC (continued)</b>					<b>019</b>	<b>0999/193/L047</b>	<b>ALL</b>
	07	D08374J	W0602	D08374P	W0450			050-099, 155-199, 276-299
	08	D04677J	W1729	D04677P	W1731			ALL
	10	D04654J	W0628	D04654P	W0930			ALL
	11	D06464J	W1332	D06464P	W1328			ALL
	12	D06466J	W1334	D06466P	W1328			ALL
	13	D06468J	W1336	D06468P	W1330			ALL
	14	D08268J	W0602	D08268P	W0690			ALL
	15	D05556J	W0602	D05556P	W0922			ALL
	17	D04727J	W0693	D04727P	W0533			ALL
	18	D04600J	W1274	D04600P	W0460			ALL
<b>AL1004</b>	<b>PANEL-RIGHT SIDE FWD INBD DISC</b>					<b>019</b>	<b>0999/193/R047</b>	<b>ALL</b>
	01	D04954J	W0656	D04954P	W0964			ALL
	03	D05608J	W0628	D05608P	W0932			ALL
	04	D05508J	W0580	D05508P	W0478			ALL
	08	D06342J	W0628	D06342P	W0864			ALL
	10	D04946J	W1246	D04946P	W0968			ALL
	12	D05409J	W1343	D05409P	W0932			ALL
	14	D04410J	W0580	D04410P	W0478			ALL
	16	D08272J	W0628	D08272P	W0928			ALL
	17	D05516J	W0588	D05516P	W0920			ALL
	18	D05510J	W1246	D05510P	W0838			ALL
	19	D05358J	W0588	D05358P	W1210			ALL
<b>AL1005</b>	<b>PANEL-LEFT SIDE AFT OUTBD DISC</b>					<b>010</b>	<b>1043/193/L057</b>	<b>ALL</b>
	01	D05213J	W1203	D05213P	W1253			ALL
	03	D05700J	W0614	D05700P	W0484			ALL
	05	D05235J	W1207	D05235P	W1263			ALL
	08	D05698J	W0590	D05698P	W0482			ALL
	10	D05586J	W0628	D05586P	W1214			ALL
<b>AL1006</b>	<b>PANEL-RIGHT SIDE AFT OUTBD DISC</b>					<b>010</b>	<b>1043/190/R058</b>	<b>ALL</b>
	01	D05219J	W1217	D05219P	W1253			ALL
	03	D04652J	W0606	D04652P	W0462			ALL
	05	D05241J	W1213	D05241P	W1263			ALL
	06	D06012J	W0596	D06012P	W1286			ALL
	10	D04770J	W0656	D04770P	W1206			ALL
<b>AL1007</b>	<b>PANEL-LEFT SIDE AFT INBD DISC</b>					<b>008</b>	<b>1043/193/L047</b>	<b>ALL</b>
	01	D04402J	W0756	D04402P	W0772			ALL

DISCONNECT BRACKET LIST

D280T132

91-04-00

Section AL1000

Page 2

Jun 28/2006



## 767-200/300 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
<b>AL1007</b>	<b>PANEL-LEFT SIDE AFT INBD DISC (continued)</b>					<b>008</b>	<b>1043/193/L047</b>	<b>ALL</b>
	07	D04988J	W0596	D04988P	W1212			ALL
<b>AL1008</b>	<b>PANEL-RIGHT SIDE AFT INBD DISC</b>					<b>008</b>	<b>1043/193/R047</b>	<b>ALL</b>
	01	D05414J	W0752	D05414P	W0778			ALL
	03	D04316J	W0658	D04316P	W0680			ALL
	04	D05418J	W0628	D05418P	W0774			ALL
	06	D06280J	W0656	D06280P	W1308			ALL
	07	D05420J	W0206	D05420P	W0776			ALL
<b>AL1009</b>	<b>PANEL-LEFT FWD OUTBD COVER DISC</b>					<b>002</b>	<b>0999/193/L064</b>	<b>ALL</b>
	01	D01946J	W0922					ALL
	02	D01938J	W0930					ALL
<b>AL1010</b>	<b>PANEL-RIGHT FWD OUTBD COVER DISC</b>					<b>002</b>	<b>0999/193/R064</b>	<b>ALL</b>
	01	D01942J	W0932					ALL
	02	D01934J	W0920					ALL
<b>AL1011</b>	<b>PANEL-LEFT FWD INBD COVER DISC</b>					<b>002</b>	<b>0999/193/L039</b>	<b>ALL</b>
<b>AL1012</b>	<b>PANEL-RIGHT FWD INBD COVER DISC</b>					<b>002</b>	<b>0999/193/R039</b>	<b>ALL</b>

### DISCONNECT BRACKET LIST

D280T132

**91-04-00**

Section AL1000

Page 3 End

Jun 28/2006



Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AP0001	PANEL-CONTROLLER VIDEO DISC					003	1130/283/L067	050-099
AP0001	PANEL-CONTROLLER VIDEO DISC					003	0255/258/R006	150-199, 275-299
AP0002	PANEL-VIDEO CONTROLLER DISC					003	0447/243/L055	050-099, 150-199
	01	D01205	W0047					050-099, 150-199
	02	D01207	W0047					050-099, 150-199
	3	D01209	W0047					050-099, 150-199
AP0003	PANEL-VIDEO TAPE REPRODUCER DISC					002	1130/283/L067	050-099

DISCONNECT BRACKET LIST

D280T132

91-04-00

Section AP0000

Page 1 End

Jun 28/2006



## 767-200/300 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
<b>AP0202</b>	<b>PANEL-VIDEO CLOSET DISC</b>					<b>007</b>	<b>0255/281/R017</b>	<b>275</b>
	01	D06069J	W0645	D06069P	W0047			275
	02	D06099J	W1417	D06099P	W0047			275
	03	D06666J	W1407	D06666P	W0047			275
	04	D06668P	W0047	D06668J	W1417			275
	04	D06668J	W1417	D06668P	W0047			275
	05	D05597J	W1419	D05597P	W0047			275
<b>AP0205</b>	<b>PANEL DISC-FLIGHT CREW REST</b>					<b>002</b>	<b>0245/285/L014</b>	<b>050-099, 162-199, 276-299</b>
	02	D06125J	W1449	D06125P	W3000			050-099, 162-199
	02	D06069J	W0645	D06069P	W0047			276-278
	03	D06111J	W1447	D06111P	W3006			050-099, 162-199
	03	D06666J	W1407	D06666P	W0047			276-299
	04	D05597J	W1419	D05597P	W0047			276-299
	06	D06123J	W1449	D06123P	W3008			050-099, 162-199
	06	D06099J	W1417	D06099P	W0047			276-299
	07	D06109J	W1449	D06109P	W3006			050-099, 162-199
	07	D06668P	W0047	D06668J	W1417			276-299
	07	D06668J	W1417	D06668P	W0047			276-299

### DISCONNECT BRACKET LIST

D280T132

**91-04-00**

Section AP0200

Page 1 End

Jun 28/2006



Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AP0301	<b>BRACKET-L S LWR CEILING DISC</b>					003	0315/283/L007	275-299
AP0301B	<b>BRACKET-L S LWR CEILING DISC</b>					005	0289/283/0000	ALL
	01	D04397J	W0665	D04397P	W0102			050-099
	01	D04397J	W0665					150-199
	01	D00857	W0645					275-299
AP0305	<b>PANEL-VTR DISC (C MTO 230540)</b>					001	0455/268/L084	050-099
	01	D13444J	W0057	D13444P	W1449			050-099
	02			D06043P	W1447			050-099
	05	D06047J	W0047	D06047P	W1447			050-099
	06	D06045J	W0047	D06045P	W1447			050-099
	08			D06049P	W1447			050-099
AP0307	<b>PANEL-VIDEO TAPE REPRODUCER DISC</b>					002	0380/315/L008	050-099, 150-199
	01	D06033J	W0665	D06033P	W1449			050-099, 150-199
	02	D08706J	W1230	D08706P	W1449			050-099, 162-199
	03	D06039J	W1417	D06039P	W1447			050-099, 150-199
	04	D06035J	W1407	D06035P	W1447			050-099, 150-199
	05	D06031J	W0645	D06031P	W1447			050-099, 150-199
	06	D08688P	W1449	D08688J	W0812			050-099, 150-199
	06	D08688J	W0812	D08688P	W1449			050-099, 150-199
	07	D06037J	W1417	D06037P	W1447			050-099, 150-199
	08			D13442P	W1449			050-099, 150-199
	09	D06105J	W1379	D06105P	W1449			050-099, 162-199
	10	D06107J	W0873	D06107P	W1449			050-099, 162-199
	11	D06041J	W1419	D06041P	W1447			050-099, 150-199

DISCONNECT BRACKET LIST

D280T132

91-04-00

Section AP0300

Page 1 End

Jun 28/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
<b>AP0401</b>	<b>PANEL-P19 FWD LTG DISC</b>					<b>012</b>	<b>0385/310/L025</b>	<b>ALL</b>
	01	D05088J	W1060	D05088P	W1222			ALL
	02	D05134J	W1104	D05134P	W1228			ALL
	03	D05710J	W1110	D05710P	W0712			ALL
	04	D05178J	W1058	D05178P	W1216			ALL
	05	D05170J	W1060	D05170P	W1230			ALL
	06	D06410J	W1060	D06410P	W0832			ALL
	07	D05448J	W1110	D05448P	W0714			ALL
	08	D05160J	W1058	D05160P	W0820			ALL
	09	D05090J	W1060	D05090P	W1226			ALL
	10	D04290J	W1060	D04290P	W1224			ALL
	11	D08094J	W1110	D08094P	W1248			ALL
	12	D04282J	W1102	D04282P	W1232			ALL
<b>AP0403</b>	<b>PANEL-P19 AFT LTG DISC</b>					<b>021</b>	<b>0412/310/L025</b>	<b>050-099</b>
<b>AP0403</b>	<b>PANEL-P19 AFT LTS DISC</b>					<b>021</b>	<b>0412/310/L025</b>	<b>150-199, 275-299</b>
	01	D08080J	W1058	D08080P	W0798			ALL
	02	D05082J	W1060	D05082P	W0786			ALL
	03	D05740J	W1110	D05740P	W0718			ALL
	04	D05114J	W1104	D05114P	W0814			ALL
	05	D05912J	W1104	D05912P	W0822			ALL
	06	D04326J	W1102	D04326P	W0792			ALL
	07	D05138J	W1060	D05138P	W1234			ALL
	08	D05076J	W1060	D05076P	W0784			ALL
	09	D05808J	W1104	D05808P	W0812			ALL
	10	D06412J	W1060	D06412P	W0834			ALL
	11	D05072J	W1102	D05072P	W0794			050-099, 150-199
	12	D05182J	W1060	D05182P	W0800			ALL
	13	D05166J	W1060	D05166P	W0804			ALL
	14	D05746J	W1110	D05746P	W0722			ALL
	15	D05110J	W1104	D05110P	W0812			ALL
	17	D05162J	W1060	D05162P	W0802			ALL
	18	D08098J	W1110	D08098P	W1252			ALL
	19	D05148J	W1060	D05148P	W1236			ALL
	20	D05750J	W1110	D05750P	W0720			ALL
<b>AP0405</b>	<b>PANEL-VIDEO TAPE REPRODUCER DISC</b>					<b>002</b>	<b>0455/268/L084</b>	<b>050-099, 150-199</b>
		D09001J	W9003	D09001P	W9002			150, 153-157
		D09001J	W9003					150, 153-199
		D09001J	W9003	D09001P	W9005			162-199
	01	D13444J	W0057	D13444P	W1449			150-199

## DISCONNECT BRACKET LIST

D280T132

**91-04-00**

Section AP0400

Page 1

Jun 28/2006





Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AP0405	<b>PANEL-VIDEO TAPE REPRODUCER DISC (continued)</b>					002	0455/268/L084	050-099, 150-199
	02	D06043J	W0047	D06043P	W1447			150-199
	05	D06047J	W0047	D06047P	W1447			150-199
	06	D06045J	W0047	D06045P	W1447			150-199
	07	D09091J	W0047	D09091P	W1447			150, 152-199
	08			D06049P	W1447			150, 153-199
	08	D06049J	W0047	D06049P	W1447			151-152

**DISCONNECT BRACKET LIST**

D280T132

**91-04-00**

Section AP0400

Page 2 End

Jun 28/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AP0604	PANEL MID FWD CEILING DISC					007	654+74/280/R018	280-299
	02			D07090P	W0665			280-299

---

## DISCONNECT BRACKET LIST

D280T132

**91-04-00**

Section AP0600

Page 1 End

Jun 28/2006



Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AP0701	<b>BRACKET-RETRACTABLE OVHD CLOSET</b>					002	MULTI/ /	150-199
AP0703	<b>PNL-MID CABIN CEILING DISC</b>					008	0796/292/L005	275-299
	01	D04669J	W0639	D04669P	W0041			275-299
	02	D06148J	W0822	D06148P	W0110			275-299
	03	D05331J	W0665	D05331P	W0110			275-299
	04	D06026J	W1252	D06026P	W1088			275-299
	06	D06028J	W1236	D06028P	W0110			275-299
	07	D06188J	W1236	D06188P	W1086			275-299
	08	D00984	W1282					275-278
	08	D10036	W1282					280-299

**DISCONNECT BRACKET LIST**

D280T132

**91-04-00**

Section AP0700

Page 1 End

Jun 28/2006



## 767-200/300 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AP0802D	PNL-MID CABIN CEILING DISC					012	0871/293/R005	150-199, 275-299
AP0802E	PANEL-MID CABIN CEILING DISC					008	0840/292/L005	050-099
	01	D04669J	W0639	D04669P	W0041			050-099
	02	D05331J	W0665	D05331P	W0110			050-099
	03	D06148J	W1224	D06148P	W0110			050-099
	05	D06026J	W1252	D06026P	W1088			050-099
	06	D06028J	W1236	D06028P	W0110			050-099
	07	D06188J	W1236	D06188P	W1086			050-099
	08	D10038	W1282					050-099
AP0810A	PNL-MID CABIN GALLEY DISC, FWD					003	0815/290/R005	150-199, 275-299

### DISCONNECT BRACKET LIST

D280T132

**91-04-00**

Section AP0800

Page 1 End

Jun 28/2006



Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AP0901	<b>PANEL-MID CABIN CEILING DISC (GALLEY)</b>					<b>008</b>	<b>0922/292/L005</b>	<b>150-199</b>
	01	D09002J	W9004	D09002P	W9002			150, 153-157
	03	D04669J	W0639	D04669P	W0041			150-199
	04	D06652J	W0790	D06652P	W0122			150-199
	05	D06650J	W1222	D06650P	W0122			150-199
	06	D06482J	W0665	D06482P	W0122			150-199
	07	D06188J	W1236	D06188P	W0122			150-199
	8	D13548	W1282	D06188P	W1086			150-199
AP0902	<b>PNL-MID CABIN GALLEY DISC, AFT</b>					<b>003</b>	<b>0927/290/R005</b>	<b>150-199, 275-299</b>

DISCONNECT BRACKET LIST

D280T132

91-04-00

Section AP0900

Page 1 End

Jun 28/2006



## 767-200/300 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AP1001	<b>BRACKET - E10 SHELF</b>					<b>000</b>	<b>1070/294/L014</b>	<b>150, 153-155, 162-165</b>
AP1001	<b>BRACKET - E10 SHELF</b>					<b>003</b>	<b>1070/294/L014</b>	<b>150, 153-199, 277-299</b>
	01	D06187J	W9120	D06187P	W9123			150, 153-155, 162-165
	01	D06187J	W9120					150, 153-155, 162-165
	01			D06187P	W9123			150, 153-199
	01	D06187J	W1199	D06187P	W9123			156-157, 166-199
	01	D06187J	W1199					156-157, 166-199, 277-299
	01	D06187J	W1199					277-299
	01			D06187P	W1917			277-299
	01			D06187P	W1917			277-299
	02	D06167J	W9020	D06167P	W9019			150, 153-155, 162-165
	02	D06167J	W9020					150, 153-155, 162-165
	02			D06167P	W9019			150, 153-155, 162-165
	02	D06167J	W1003	D06167P	W0809			156-157, 166-199, 277-299
	02			D06167P	W0809			156-157, 166-199, 277-299
	02	D06167J	W1003					156-157, 166-199, 277-299
	03			D06183P	W9119			150, 153-199
	03	D06183J	W1043	D06183P	W1927			277-299
	03			D06185P	W1933			277-299
	03	D06183J	W1043					277-299
AP1003	<b>PANEL-P25 AFT LTG DISC</b>					<b>016</b>	<b>1043/310/L025</b>	<b>ALL</b>
	01	D05736J	W1112	D05736P	W0724			050-099
	02	D05120J	W1108	D05120P	W0818			ALL
	03	D05954J	W1106					150-154
	03	D05954J	W1106	D05954P	W1276			275-299
	04	D05084J	W1064	D05084P	W0788			ALL
	05	D05154J	W1064	D05154P	W1240			ALL
	06	D05730J	W1112	D05730P	W0726			050-099
	07	D05118J	W1108	D05118P	W0816			ALL
	08	D05104J	W1064	D05104P	W0806			050-099
	09	D06414J	W1064	D06414P	W0836			ALL
	10	D05086J	W1064	D05086P	W0790			ALL
	11	D05728J	W1112	D05728P	W0728			050-099
	12	D05096J	W1108	D05096P	W0828			ALL
	13	D06742J	W1108	D06742P	W0828			050-099, 150-199
	14	D05916J	W1108	D05916P	W0824			ALL
	15	D05108J	W1064	D05108P	W0810			050-099
	16	D08102J	W1112	D08102P	W1254			ALL
AP1005	<b>PANEL-P25 FWD LTG DISC</b>					<b>016</b>	<b>1021/310/L025</b>	<b>ALL</b>
	02	D05070J	W1106	D05070P	W0792			ALL

### DISCONNECT BRACKET LIST

D280T132

**91-04-00**

Section AP1000

Page 1

Jun 28/2006



Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AP1005	<b>PANEL-P25 FWD LTG DISC (continued)</b>					016	1021/310/L025	ALL
	03	D05914J	W1108	D05914P	W0822			ALL
	04	D05116J	W1108	D05116P	W0814			ALL
	05	D05150J	W1064	D05150P	W1236			ALL
	06	D05078J	W1064	D05078P	W0784			ALL
	07	D06736J	W1108	D06736P	W0812			050-099, 150-199
	08	D05112J	W1108	D05112P	W0812			ALL
	09	D05080J	W1064	D05080P	W0786			ALL
	10	D05184J	W1064	D05184P	W0800			050-099
	12	D08100J	W1112	D08100P	W1252			ALL
	13	D05168J	W1064	D05168P	W0804			050-099
	14	D05144J	W1064	D05144P	W1234			ALL
	16	D05752J	W1112	D05752P	W0720			050-099

DISCONNECT BRACKET LIST

D280T132

91-04-00

Section AP1000

Page 2 End

Jun 28/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AP1101	<b>BRACKET - E11 SHELF</b>					<b>003</b>	<b>1158/294/L014</b>	<b>156-157, 166-199, 277-299</b>
	01	D06179J	W1047					156-157, 166-199
	01	D06179J	W1047	D06179P	W1913			277-299
	02	D06163J	W1011	D06163P	W0815			156-157, 166-199, 277-299
	03	D06181J	W1045	D06181P	W1935			156-157, 166-199, 277-299

## DISCONNECT BRACKET LIST

D280T132

**91-04-00**

Section AP1100

Page 1 End

Jun 28/2006





Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AP1401	<b>BRACKET-L S AFT LWR CEILING DISC</b>					<b>002</b>	<b>1450/285/L024</b>	<b>ALL</b>
	01	D05335J	W0665	D05335P	W0106			275-299
	02	D06042J	W0818	D06042P	W0106			275-299
AP1402	<b>BRACKET-R S AFT LWR CEILING DISC</b>					<b>002</b>	<b>1450/285/R024</b>	<b>ALL</b>
	01	D05337J	W0665	D05337P	W0108			275-299
	02	D06052J	W0818	D06052P	W0108			275-299
AP1404	<b>PANEL AFT FWD CENTER CEILING DISC</b>					<b>003</b>	<b>1438/290/R005</b>	<b>280-299</b>
	03	D07092J	W0665					280-299

**DISCONNECT BRACKET LIST**

D280T132

**91-04-00**

Section AP1400

Page 1 End

Jun 28/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
<b>AP1501</b>	<b>PANEL-TAIL DISC</b>					<b>035</b>	<b>1550/310/0000</b>	<b>ALL</b>
				D04473P	W0503			150-199
				D04481P	W0501			150-199
	01	D05436J	W0500	D05436P	W0748			ALL
	02	D05942J	W0512	D05942P	W0748			ALL
	03	D04783J	W0539	D04783P	W0619			ALL
	04	D04519J	W0593	D04519P	W0491			ALL
	05	D04475J	W0591	D04475P	W0491			ALL
	06	D04075P	W0311	D04075J	W0313			ALL
	07	D04007J	W0245	D04007P	W0247			ALL
	08	D04527J	W0599	D04527P	W0503			ALL
	09	D04473J	W0603	D04473P	W0503			050-099, 275-299
	09	D04473J	W0603					150-199
	10	D05440J	W0504	D05440P	W0770			ALL
	12	D04567J	W0583	D04567P	W1261			ALL
	13	D05438J	W0502	D05438P	W0750			ALL
	15	D05801J	W1413	D05801P	W1419			ALL
	16	D04531J	W0575	D04531P	W0491			ALL
	17	D04523J	W0597	D04523P	W0501			ALL
	18	D04003J	W0243	D04003P	W0241			ALL
	19	D04079P	W0315	D04079J	W0317			ALL
	20	D04533J	W0581	D04533P	W0503			ALL
	21	D04827J	W0775	D04827P	W0635			ALL
	22	D05599J	W1415	D05599P	W1417			ALL
	24	D04479J	W0589	D04479P	W1261			ALL
	25	D04559J	W0579	D04559P	W1251			ALL
	26	D04477J	W0587	D04477P	W1251			ALL
	28	D04825J	W0777	D04825P	W0633			ALL
	29	D04481J	W0611	D04481P	W0501			050-099, 275-299
	29	D04481J	W0611					150-199
	33	D08204J	W0910	D08204P	W0908			150-199, 275-299
<b>AP1503</b>	<b>PANEL-AFT LEFT ATTEND PNL PARTITION DISC</b>					<b>004</b>	<b>1544/283/L029</b>	<b>150-199, 275-299</b>

## DISCONNECT BRACKET LIST

D280T132

**91-04-00**

Section AP1500

Page 1 End

Mar 07/2008



Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AV1801	<b>PANEL-APU DISC</b>					<b>007</b>	<b>1832/230/R030</b>	<b>ALL</b>
	01	D04138J	W0246	D04138P	W0244			ALL
	02	D04030J	W0242					ALL
	03	D04022J	W1298	D04022P	W0250			ALL
	04			D04016P	W0234			050-099, 150-155, 162-199, 275-278
	05	D04024J	W0242					ALL
	06	D04018J	W0242	D04018P	W0270			ALL
	07	D04020J	W1296	D04020P	W0260			ALL

**DISCONNECT BRACKET LIST**

D280T132

**91-04-00**

Section AV1800

Page 1 End

Aug 15/2007



# 767-200/300 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
<b>AW0305</b>	<b>PANEL-STRUT FWD FW LEFT SIDE DISC</b>					<b>007</b>	<b>NR172/125/</b>	<b>ALL</b>
	01	D04148J	W0378					ALL
	01	D04154J	W0360	D04154P	W3520			ALL
	02	D04228J	W0360	D04228P	W3522			ALL
	02	D04256J	W0378					ALL
	03	D04208J	W0356	D04208P	W3510			ALL
	03	D04258J	W0376					ALL
	04	D04200J	W0386	D04200P	W3516			ALL
	04	D04236J	W0388					ALL
	05	D04266J	W0374					050-099, 150-166, 275-299
	05	D04216J	W0352	D04216P	W3538			050-099, 150-199, 275-278
	05			D04216P	W3538			280-299
	06	D04240J	W0374					050-099, 150-166, 275-299
	06	D04232J	W0352	D04232P	W3508			050-099, 150-199, 275-278
	06			D04232P	W3508			280-299
<b>AW0306</b>	<b>PANEL-STRUT RIGHT SIDE FANCASE FW DISC</b>					<b>002</b>	<b>NR174/133/</b>	<b>ALL</b>
	01	D04150J	W0376					ALL
	01	D04156J	W0356	D04156P	W3540			ALL
<b>AW0307</b>	<b>PANEL-STRUT FWD FW FRONT DISC</b>					<b>003</b>	<b>N0164/130/</b>	<b>ALL</b>
	02	D04220J	W0388					ALL
	02	D04230J	W0386	D04230P	W3506			ALL
<b>AW0309</b>	<b>PANEL-STRUT LEFT SIDE FANCASE FWD DISC</b>					<b>002</b>	<b>NL110/148/</b>	<b>ALL</b>
	01	D06420J	W0380					ALL
	01	D06422J	W0384					ALL
	01			D08336P	W3504			150-154, 275-276
	02			D08336P	W3504			050-099, 155-199, 277-299
<b>AW0310</b>	<b>PANEL-STRUT RIGHT SIDE FANCASE/COWL DISC</b>					<b>003</b>	<b>NL120/150/</b>	<b>ALL</b>
	01	D04224J	W0372	D04224P	W3502			ALL
	01	D04246J	W0382					ALL
	02	D08320J	W0396	D08320P	W3504			ALL
	02	D08334J	W0392					ALL
	03	D04162J	W0374					050-099, 150-166, 275-299
	03	D04182J	W0352	D04182P	W3526			050-099, 150-199, 275-278
	03			D04182P	W3526			280-299
	04	D04164J	W0376					ALL
	04	D04194J	W0356	D04194P	W3532			ALL
	6	D07190J	W0374					050-099, 150-166, 275-299

## DISCONNECT BRACKET LIST

D280T132

**91-04-00**

Section AW0300

Page 1

Aug 05/2009



Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
<b>AW0310</b>	<b>PANEL-STRUT RIGHT SIDE FANCASE/COWL DISC (continued)</b>					<b>003</b>	<b>NL120/150/</b>	<b>ALL</b>
	6	D07170J	W0352					050-099, 150-199, 275-278
	06			D07170P	W3526			ALL
<b>AW0311</b>	<b>PANEL-STRUT LEFT COWL DISC</b>					<b>003</b>	<b>NL120/148/</b>	<b>ALL</b>
	01	D04160J	W0374					050-099, 150-166, 275-299
	01	D04180J	W0352	D04180P	W3528			050-099, 150-199, 275-278
	01			D04180P	W3528			280-299
	02	D04166J	W0376					ALL
	02	D04192J	W0356	D04192P	W3530			ALL
	3	D07192J	W0374					050-099, 150-166, 275-299
	3	D07172J	W0352					050-099, 150-199, 275-278
	03			D07172P	W3528			ALL
<b>AW0312</b>	<b>FANCASE-P&amp;W/PW400</b>					<b>000</b>	<b>N0103/147/L012</b>	<b>ALL</b>
<b>AW0319</b>	<b>PANEL-LEFT WING/STRUT DISC</b>					<b>010</b>	<b>L0345/14/LE</b>	<b>ALL</b>
	01	D04206J	W0406	D04206P	W0356			ALL
	02	D04212J	W0406	D04212P	W0356			ALL
	03	D04214J	W0406	D04214P	W0356			ALL
	04	D06384J	W0516	D06384P	W0396			ALL
	05	D06292J	W0406	D06292P	W0380			ALL
	06	D04204J	W0402	D04204P	W0386			ALL
	07	D04202J	W0416	D04202P	W0352			050-099, 150-199, 275-278
	07	D04202J	W0416					280-299
	08	D04342J	W0412	D04342P	W0352			050-099, 150-199, 275-278
	08	D04342J	W0412					280-299
	09	D04234J	W0420	D04234P	W0372			ALL
	10	D04218J	W0424	D04218P	W0360			ALL
<b>AW0320</b>	<b>PANEL-RIGHT WING/STRUT DISC</b>					<b>010</b>	<b>R0345/14/LE</b>	<b>ALL</b>
	01	D04248J	W0408	D04248P	W0376			ALL
	02	D04252J	W0408	D04252P	W0376			ALL
	03	D04254J	W0408	D04254P	W0376			ALL
	04	D06382J	W0518	D06382P	W0392			ALL
	05	D06296J	W0408	D06296P	W0384			ALL
	06	D04238J	W0404	D04238P	W0388			ALL
	07	D04244J	W0422	D04244P	W0382			ALL
	08	D04344J	W0414	D04344P	W0374			050-099, 150-166, 275-299
	08	D04344J	W0414					167-199
	09	D04242J	W0418	D04242P	W0374			050-099, 150-166, 275-299

DISCONNECT BRACKET LIST

D280T132

91-04-00

Section AW0300

Page 2

Sep 04/2008



## 767-200/300 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
<b>AW0320</b>	<b>PANEL-RIGHT WING/STRUT DISC (continued)</b>					<b>010</b>	<b>R0345/14/LE</b>	<b>ALL</b>
	09	D04242J	W0418					167-199
	10	D04264J	W0426	D04264P	W0378			ALL
<b>AW0321</b>	<b>PANEL-LEFT SIDE WING/SAILBOAT DISC</b>					<b>003</b>	<b>NL233/160/</b>	<b>050-099, 275-299</b>
	01	D04404J	W0390	D04404P	W0424			ALL
	02	D04474J	W0390	D04474P	W0406			ALL
	03	D04280J	W0398	D04280P	W0440			ALL
<b>AW0322</b>	<b>PANEL-RIGHT SIDE WING/SAILBOAT DISC</b>					<b>003</b>	<b>NR233/160/</b>	<b>050-099, 275-299</b>
	01	D04406J	W0394	D04406P	W0426			ALL
	02	D04170J	W0394	D04170P	W0408			ALL
	03	D04168J	W0400	D04168P	W0442			ALL

### DISCONNECT BRACKET LIST

D280T132

**91-04-00**

Section AW0300

Page 3 End

Jun 28/2006



Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
<b>AW0403</b>	<b>PANEL-L WING FRONT SIDE OUTBD RIB SEAL</b>					<b>004</b>	<b>L0416/14/LE</b>	<b>ALL</b>
	01	D04434J	W0430	D04434P	W0406			ALL
	02	D04438J	W0468	D04438P	W0440			ALL
	03	D04442J	W0472	D04442P	W0402			ALL
	04	D04444J	W0472	D04444P	W0402			ALL
<b>AW0404</b>	<b>PANEL-R WING FRONT SIDE OUTBD RIB SEAL</b>					<b>004</b>	<b>R0416/14/LE</b>	<b>ALL</b>
	01	D04378J	W0480	D04378P	W0442			ALL
	02	D04380J	W0470	D04380P	W0418			ALL

**DISCONNECT BRACKET LIST**

D280T132

**91-04-00**

Section AW0400

Page 1 End

Jun 28/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
AW0601	<b>PANEL-P28 REFUELING DISC</b>					<b>002</b>	<b>L0673/14/FS</b>	<b>ALL</b>
	01	D04744J	W1056	D04744P	W0472			ALL
	02	D04746J	W1056	D04746P	W0472			ALL

---

## DISCONNECT BRACKET LIST

D280T132

**91-04-00**

Section AW0600

Page 1 End

Jun 28/2006





Bracket No.	Description Position	Receptacle	Bundle	Plug	Bundle	Max Pos	Station / WL / BL	Effectivity
<b>AW0901</b>	<b>PANEL-L WING TIP DISC</b>					<b>002</b>	<b>L1140/12/TIP</b>	<b>ALL</b>
	01	D04430J	W0468	D04430P	W0486			ALL
	02	D04432J	W0468	D04432P	W0488			ALL
<b>AW0902</b>	<b>PANEL-RIGHT WING TIP DISC</b>					<b>002</b>	<b>R1140/12/TIP</b>	<b>ALL</b>
	01	D04426J	W0470	D04426P	W0490			ALL
	02	D04428J	W0470	D04428P	W0492			ALL

**DISCONNECT BRACKET LIST**

D280T132

**91-04-00**

Section AW0900

Page 1 End

Jun 28/2006