

**91-21-21**

**GROUND LIST**



91-21-21  
GROUND LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
EFFECTIVE PAGES			GD00200 cont.			GD00600 cont.		
	1 thru 3	Aug 05/2009		4	Mar 09/2006		3	Mar 09/2006
	4	BLANK		5	Mar 09/2006		4	Mar 09/2006
GD00000	1	Mar 09/2006		6	Mar 09/2006		5	Mar 09/2006
	2	Mar 09/2006	GD00300	1	Mar 09/2006		6	Mar 09/2006
	3	Mar 09/2006		2	Mar 09/2006	GD00700	1	Mar 09/2006
	4	Mar 09/2006		3	Mar 09/2006		2	Mar 09/2006
	5	Mar 09/2006		4	Mar 09/2006		3	Mar 09/2006
	6	Mar 09/2006		5	Mar 09/2006		4	Mar 09/2006
	7	Mar 09/2006		6	Mar 09/2006		5	Mar 09/2006
	8	Mar 09/2006		7	Mar 09/2006		6	Mar 09/2006
	9	Mar 09/2006		8	Mar 09/2006		7	Mar 09/2006
	10	Mar 09/2006		9	Mar 09/2006	GD00800	1	Mar 09/2006
	11	Mar 09/2006	GD00400	1	Mar 09/2006		2	Mar 09/2006
	12	Mar 09/2006		2	Mar 09/2006		3	Mar 09/2006
	13	Mar 09/2006		3	Mar 09/2006	GD00900	1	Mar 09/2006
GD00100	1	Mar 09/2006		4	Mar 09/2006		2	Mar 09/2006
	2	Mar 09/2006		5	Mar 09/2006		3	Mar 09/2006
	3	Mar 09/2006		6	Mar 09/2006		4	Mar 09/2006
	4	Mar 09/2006	GD00500	1	Mar 09/2006	GD01000	1	Mar 09/2006
	5	Mar 09/2006		2	Mar 09/2006		2	Mar 09/2006
	6	Mar 09/2006		3	Mar 09/2006		3	Mar 09/2006
	7	Mar 09/2006		4	Mar 09/2006	GD01100	1	Mar 09/2006
	8	Mar 09/2006		5	Mar 09/2006		2	Mar 09/2006
	9	Mar 09/2006		6	Mar 09/2006		3	Mar 09/2006
GD00200	1	Mar 09/2006		7	Mar 09/2006	GD01200	1	Mar 09/2006
	2	Mar 09/2006	GD00600	1	Mar 09/2006		2	Mar 09/2006
	3	Mar 09/2006		2	Mar 09/2006	GD01300	1	Mar 09/2006

A = Added, R = Revised, D = Deleted, O = Overflow

GROUND LIST

D280T132

EFFECTIVE PAGES

Page 1  
Aug 05/2009



91-21-21  
GROUND LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
GD01400	1	Mar 09/2006	GD02100	1	Mar 09/2006	GD03400 cont.		
	2	Mar 09/2006		2	Mar 09/2006		3	Mar 09/2006
GD01500	1	Mar 09/2006		3	Mar 09/2006	GD03500	1	Mar 09/2006
	2	Mar 09/2006	GD02200	1	Mar 09/2006		2	Mar 09/2006
	3	Mar 09/2006	GD02300	1	Mar 09/2006		3	Mar 09/2006
	4	Mar 09/2006		2	Mar 09/2006	GD03600	1	Mar 09/2006
GD01600	1	Mar 09/2006		3	Mar 09/2006		2	Mar 09/2006
	2	Mar 09/2006	GD02400	1	Mar 09/2006		3	Mar 09/2006
	3	Mar 09/2006		2	Mar 09/2006	GD03700	1	Mar 09/2006
GD01700	1	Mar 09/2006		3	Mar 09/2006		2	Mar 09/2006
	2	Mar 09/2006		4	Mar 09/2006		3	Mar 09/2006
	3	Mar 09/2006	GD02500	1	Mar 09/2006		4	Mar 09/2006
	4	Mar 09/2006		2	Mar 09/2006	GD03800	1	Mar 09/2006
	5	Mar 09/2006		3	Mar 09/2006		2	Mar 09/2006
GD01800	1	Mar 09/2006	GD02600	1	Mar 09/2006	GD03900	1	Mar 09/2006
	2	Mar 09/2006	GD02700	1	Mar 09/2006		2	Mar 09/2006
	3	Mar 09/2006		2	Mar 09/2006		3	Mar 09/2006
GD01900	1	Mar 09/2006	GD02800	1	Mar 09/2006		4	Mar 09/2006
	2	Mar 09/2006	GD02900	1	Mar 09/2006		5	Mar 09/2006
	3	Mar 09/2006	GD03000	1	Mar 09/2006	GD04000	1	Mar 09/2006
	4	Mar 09/2006		2	Mar 09/2006		2	Mar 09/2006
	5	Mar 09/2006	GD03100	1	Mar 09/2006		3	Mar 09/2006
	6	Mar 09/2006	GD03200	1	Mar 09/2006	GD04100	1	Mar 09/2006
	7	Mar 09/2006	GD03300	1	Mar 09/2006		2	Mar 09/2006
GD02000	1	Mar 09/2006	R	2	Aug 05/2009		3	Mar 09/2006
	2	Mar 09/2006		3	Mar 09/2006		4	Mar 09/2006
	3	Mar 09/2006	GD03400	1	Mar 09/2006		5	Mar 09/2006
	4	Mar 09/2006		2	Mar 09/2006	GD04200	1	Mar 09/2006

A = Added, R = Revised, D = Deleted, O = Overflow

GROUND LIST

D280T132

EFFECTIVE PAGES

Page 2  
Aug 05/2009



91-21-21  
GROUND LIST

Section	Page	Date	Section	Page	Date	Section	Page	Date
GD04200 cont.			GD04800	1	Mar 09/2006	GD05600 cont.		
	2	Mar 09/2006		2	Mar 09/2006		3	Mar 09/2006
GD04300	1	Mar 09/2006		3	Mar 09/2006		4	Mar 09/2006
	2	Mar 09/2006		4	Mar 09/2006	GD05700	1	Mar 09/2006
	3	Mar 09/2006		5	Mar 09/2006		2	Mar 09/2006
	4	Mar 09/2006	GD04900	1	Mar 09/2006	GD05800	1	Mar 09/2006
	5	Mar 09/2006		2	Mar 09/2006		2	Mar 09/2006
	6	Mar 09/2006		3	Mar 09/2006		3	Mar 09/2006
	7	Mar 09/2006		4	Mar 09/2006		4	Mar 09/2006
	8	Mar 09/2006		5	Mar 09/2006	GD05900	1	Mar 09/2006
GD04400	1	Mar 09/2006		6	Mar 09/2006	GD06000	1	Mar 09/2006
	2	Mar 09/2006	GD05000	1	Mar 09/2006	GD06500	1	Jan 21/2005
	3	Mar 09/2006		2	Mar 09/2006		2	Jan 21/2005
	4	Mar 09/2006		3	Mar 09/2006	GD06600	1	Jan 21/2005
	5	Mar 09/2006		4	Mar 09/2006		2	Jan 21/2005
	6	Mar 09/2006		5	Mar 09/2006	GD06700	1	Mar 09/2006
	7	Mar 09/2006		6	Mar 09/2006		2	Mar 09/2006
	8	Mar 09/2006	GD05100	1	Mar 09/2006	GD06800	1	Mar 09/2006
GD04500	1	Mar 09/2006		2	Mar 09/2006		2	Mar 09/2006
	2	Mar 09/2006		3	Jan 21/2005	GD06900	1	Jan 21/2005
GD04600	1	Mar 09/2006	GD05200	1	Jan 21/2005	GD07100	1	May 20/2005
	2	Mar 09/2006		2	Jan 21/2005	GD08300	1	Jan 21/2005
	3	Mar 09/2006	GD05300	1	Mar 09/2006	GD09000	1	Jan 21/2005
	4	Mar 09/2006	GD05400	1	Mar 09/2006	GD12500	1	Jan 21/2005
GD04700	1	Mar 09/2006		2	Mar 09/2006			
	2	Mar 09/2006	GD05500	1	Mar 09/2006			
	3	Mar 09/2006	GD05600	1	Mar 09/2006			
	4	Mar 09/2006		2	Mar 09/2006			

A = Added, R = Revised, D = Deleted, O = Overflow

GROUND LIST

D280T132

EFFECTIVE PAGES

Page 3  
Aug 05/2009



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00002</b>		<b>YHLZG16</b>				<b>0287/290/L050</b>	<b>ALL</b>
D..	2	W0665	044	20		23-42-12	150-199, 275-299
D..	2	W0714	009	20		35-21-12	ALL
A..	2	W0820	010	16		38-13-11	ALL
A..	2	W0820	011	20		33-26-11	ALL
D..	2	W0820	017	20		33-25-11	ALL
D..	2	W0820	020	20		38-32-12	050-099, 150-156, 162-165, 275-276
D..	2	W0820	020	20		38-32-16	157, 166-199, 277-299
S..	2	W0820	021	20		38-32-12	050-099, 150-156, 162-165, 275-276
S..	2	W0820	021	20		38-32-16	157, 166-199, 277-299
S..	2	W0820	108	20		26-13-11	050-099, 150-199
D..	2	W0820	109	20		26-13-11	050-099, 150-199
D..	2	W0832	029	20		33-51-14	ALL
D..	2	W1248	010	20		25-63-11	ALL
S..	2	W1248	012	20		25-63-11	ALL
<b>GD00007</b>		<b>YHLZG8</b>				<b>0133/188/R011</b>	<b>ALL</b>
S..	2	W0779	207Z			34-43-11	ALL
S..	2	W0779	208Z			34-43-11	ALL
S..	2	W0779	209Z			34-43-11	ALL
S..	2	W0779	210Z			34-43-11	ALL
<b>GD00014</b>		<b>YHLZG16</b>				<b>0730/296/L020</b>	<b>050-099</b>
<b>GD00017</b>		<b>YHLZG16</b>				<b>0287/220/L090</b>	<b>ALL</b>
A..	2	W0616	022	18		25-29-11	ALL
S..	2	W0616	023	18		25-29-11	ALL
D..	2	W0645	005	20		23-31-12	050-099
D..	2	W0645	020	20		23-34-12	ALL
D..	2	W0832	001	16		33-51-11	ALL
S..	2	W0832	007	20		33-51-11	ALL
D..	2	W0832	022	20		33-51-14	275-299
D..	2	W1224	018	20		52-11-12	ALL
A..	2	W1224	041	20		33-21-31	ALL
D..	2	W1224	056	20		33-51-11	050-099, 275-299
D..	2	W1224	056	20		33-21-11	150-199
A..	2	W1224	057	18		33-51-11	ALL
A..	2	W1224	059	20		33-21-11	ALL
D..	2	W1224	112	20		24-51-51	ALL
D..	2	W1224	120	20		33-51-11	ALL
A..	2	W1224	800	20		33-27-11	050-099, 150-199

## GROUND LIST

D280T132

**91-21-21**

Section GD00000

Page 1

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00018</b>		<b>AC</b>				<b>0303/135/R070</b>	<b>ALL</b>
A..	H	W0232	004	*1		24-41-11	ALL
<b>GD00019</b>		<b>SH</b>				<b>0343/140/R001</b>	<b>ALL</b>
S..	E	W0849	202	20		23-41-11	ALL
<b>GD00020</b>		<b>YHLZG16</b>				<b>1476/290/R060</b>	<b>ALL</b>
D..	2	W0665	035	20		23-42-11	ALL
D..	2	W0728	048	20		35-21-13	150-199, 275-299
D..	2	W0728	051	20		35-21-13	ALL
D..	2	W0790	020	20		33-51-12	050-099
D..	2	W0790	020	18		33-51-12	150-199, 275-299
D..	2	W0790	021	20		33-51-12	ALL
D..	2	W0790	023	20		33-51-12	ALL
D..	2	W0790	024	20		33-51-12	150-199
D..	2	W0790	038	16		33-51-12	150-199
A..	2	W0810	527	20		33-24-14	150-199, 275-299
A..	2	W0810	530	20		33-24-12	162-199
A..	2	W0810	533	20		33-24-13	275-299
A..	2	W0828	010	20		33-26-21	275-299
A..	2	W0828	107	20		33-26-11	150-199
A..	2	W0828	111	20		33-26-11	050-099
A..	2	W0828	112	16		38-13-11	050-099
D..	2	W0828	128	20		38-32-12	050-099, 150-156, 162-165
D..	2	W0828	128	20		38-32-16	157, 166-199
S..	2	W0828	129	20		38-32-12	050-099, 150-156, 162-165
S..	2	W0828	129	20		38-32-16	157, 166-199
D..	2	W0828	175	20		33-25-11	050-099, 150-199
D..	2	W0836	901	16		33-51-14	150, 152-199
S..	2	W1232	509	18		21-45-24	ALL
S..	2	W1232	517	20		21-45-24	ALL
A..	2	W1240	082	20		33-24-14	050-099
A..	2	W1276	005	16		38-13-11	275-299
A..	2	W1276	006	20		33-26-11	275-299
D..	2	W1276	014	20		33-25-11	275-299
D..	2	W1276	017	20		38-32-12	275-276
D..	2	W1276	017	20		38-32-16	277-299
S..	2	W1276	018	20		38-32-12	275-276
S..	2	W1276	018	20		38-32-16	277-299

## GROUND LIST

D280T132

**91-21-21**

Section GD00000

Page 2

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00024</b>		<b>DC</b>				<b>1158/145/R075</b>	<b>ALL</b>
D..	E	W1208	008	08		29-21-31	ALL
<b>GD00026</b>		<b>YHLZG16</b>				<b>1476/290/L060</b>	<b>ALL</b>
A..	2	W0216	015	20		25-31-21	275-299
A..	2	W0216	016	20		25-31-21	275-299
A..	2	W0216	057	20		25-31-21	275-299
D..	2	W0665	034	20		23-42-11	ALL
D..	2	W0724	048	20		35-21-12	ALL
D..	2	W0724	051	20		35-21-12	150-199, 275-299
D..	2	W0788	019	20		33-51-13	050-099
D..	2	W0788	020	20		33-51-13	ALL
A..	2	W0810	530	20		33-24-12	150-157, 275-299
A..	2	W0828	018	20		33-26-11	050-099, 275-299
A..	2	W0828	019	16		38-13-11	ALL
D..	2	W0828	030	20		33-25-11	ALL
D..	2	W0828	043	20		38-32-13	050-099, 150-156, 162-165, 275-276
D..	2	W0828	043	20		38-32-16	157, 166-199, 277-299
S..	2	W0828	044	20		38-32-13	050-099, 150-156, 162-165, 275-276
S..	2	W0828	044	20		38-32-16	157, 166-199, 277-299
A..	2	W0828	126	16		38-13-11	150-199
S..	2	W0828	145	20		26-13-11	050-099, 150-199
D..	2	W0828	146	20		26-13-11	050-099, 150-199
A..	2	W0828	184	20		33-21-31	050-099, 162-199
A..	2	W0828	189	20		33-21-31	050-099, 162-199
S..	2	W1232	504	18		21-45-24	ALL
S..	2	W1232	513	20		21-45-24	ALL
A..	2	W1240	079	20		33-24-12	050-099
<b>GD00027</b>		<b>YHLZG16</b>				<b>0165/208/L047</b>	<b>ALL</b>
A..	2	W0584	016	20		21-45-11	ALL
A..	2	W0584	018	20		33-13-11	ALL
A..	2	W0584	032	18		33-13-11	ALL
S..	2	W0622	014	20		25-11-11	ALL
A..	2	W0624	020	20		30-41-12	ALL
A..	2	W0629	023	20		23-51-11	ALL
D..	2	W0629	026	20		23-51-11	ALL
A..	2	W0632	040	20		33-14-31	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD00000

Page 3

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00028</b>		<b>YHLZG16</b>				<b>1158/155/R084</b>	<b>ALL</b>
S..	2	W0588	014	18		29-33-11	ALL
S..	2	W0588	031	18		29-33-11	ALL
D..	2	W0658	009	18		29-21-31	ALL
D..	2	W0658	010	18		29-21-31	ALL
D..	2	W0658	016	18		29-21-31	ALL
D..	2	W0658	024	16		25-65-12	ALL
S..	2	W0658	029	18		29-21-31	ALL
<b>GD00034</b>		<b>DC</b>				<b>1811/210/R019</b>	<b>ALL</b>
D..	N	W1296	005R	18		26-22-21	ALL
<b>GD00036</b>		<b>SH</b>				<b>1811/210/R018</b>	<b>ALL</b>
S..	N	W1296	006R	18		26-22-21	ALL
S..	N	W1296	007R	18		26-22-21	ALL
<b>GD00043</b>		<b>YHLZG8</b>				<b>0164/140/R020</b>	<b>ALL</b>
S..	2	W0803	210Z			34-43-21	150, 152-199, 275-299
S..	2	W0803	FRA			34-43-21	ALL
S..	2	W0803	FRB			34-43-21	ALL
S..	2	W0803	FRC			34-43-21	ALL
S..	2	W0803	FRD			34-43-21	050-099, 151
<b>GD00054</b>		<b>YHLZG16</b>				<b>1536/208/R094</b>	<b>ALL</b>
D..	2	W0836	001	16		33-51-11	ALL
S..	2	W0836	007	20		33-51-11	ALL
D..	2	W0836	024	20		33-51-14	275-299
S..	2	W0966	015	20		38-14-11	ALL
D..	2	W0966	025	20		38-32-11	ALL
D..	2	W0966	036	20		38-32-11	ALL
A..	2	W1240	002	20		33-21-21	050-099, 150-199
A..	2	W1240	035	20		33-22-42	050-099, 150-199
D..	2	W1240	050	20		33-51-11	ALL
A..	2	W1240	051	18		33-51-11	ALL
A..	2	W1240	120	20		33-27-11	050-099, 150-199
D..	2	W1254	004	20		25-63-11	275-299
S..	2	W1254	006	20		25-63-11	275-299
<b>GD00057</b>		<b>YHLZG16</b>				<b>0148/228/L037</b>	<b>ALL</b>
A..	2	W0011	002	20		34-22-82	ALL

## GROUND LIST

D280T132

**91-21-21**  
Section GD00000  
Page 4  
Mar 09/2006





# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00057</b>		<b>YHLZG16 (continued)</b>				<b>0148/228/L037</b>	<b>ALL</b>
A..	2	W0011	008	20		34-22-81	ALL
A..	2	W0011	046	20		34-13-11	ALL
A..	2	W0011	049	20		34-13-11	ALL
D..	2	W0011	651	20		31-41-12	ALL
D..	2	W0974	002	20		30-43-11	ALL
S..	2	W0974	003	20		30-43-11	ALL
D..	2	W0974	009	16		30-42-11	ALL
S..	2	W0974	011	16		30-42-11	ALL
<b>GD00059</b>		<b>YHLZG16</b>				<b>0148/227/L037</b>	<b>ALL</b>
A..	2	W0011	117	18		33-13-11	ALL
A..	2	W0011	119	20		33-13-11	050-099, 150-199, 275-278
A..	2	W0011	121	16		33-13-11	ALL
D..	2	W0011	632	20		34-46-12	ALL
D..	2	W0011	634	20		34-46-12	ALL
D..	2	W0011	818	20		22-11-12	ALL
D..	2	W0011	821	20		34-61-16	ALL
D..	2	W0011	822	20		34-61-16	ALL
D..	2	W0011	823	20		34-61-16	ALL
D..	2	W0011	830	20		34-61-16	ALL
D..	2	W0011	885	20		34-61-16	051-099, 155-199, 275-299
D..	2	W0011	886	20		34-61-16	051-099, 155-199, 275-299
D..	2	W0031	770	20		34-61-16	051-099, 155-199, 275-299
D..	2	W0031	771	20		34-61-16	051-099, 155-199, 275-299
<b>GD00061</b>		<b>YHLZG16</b>				<b>0148/230/L037</b>	<b>ALL</b>
S..	2	W0011	003	20		34-22-82	ALL
S..	2	W0011	009	20		34-22-81	ALL
S..	2	W0011	011	20		34-22-81	ALL
S..	2	W0011	033	20		22-14-11	ALL
S..	2	W0011	045	20		34-13-11	ALL
S..	2	W0011	051	20		34-13-11	ALL
S..	2	W0011	058	20		31-25-11	ALL
S..	2	W0011	071	20		22-14-11	ALL
D..	2	W0011	092	20		32-42-11	ALL
D..	2	W0011	136	20		34-12-11	ALL
D..	2	W0011	137	20		34-12-61	ALL
D..	2	W0011	138	20		34-12-61	ALL
D..	2	W0011	139	20		34-12-61	ALL
D..	2	W0011	154	20		22-41-13	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD00000

Page 5

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00061</b>		<b>YHLZG16 (continued)</b>				<b>0148/230/L037</b>	<b>ALL</b>
S..	2	W0011	301	20		31-25-11	ALL
<b>GD00063</b>		<b>YHLZG16</b>				<b>0148/229/L037</b>	<b>ALL</b>
D..	2	W0011	004	20		34-22-82	ALL
D..	2	W0011	006	20		34-22-82	ALL
D..	2	W0011	010	20		34-22-81	ALL
D..	2	W0011	014	20		34-22-17	ALL
D..	2	W0011	016	20		34-22-17	ALL
D..	2	W0011	019	20		34-22-17	ALL
D..	2	W0011	022	20		34-22-17	ALL
D..	2	W0011	034	20		22-14-11	ALL
D..	2	W0011	044	20		34-13-11	ALL
D..	2	W0011	050	20		34-13-11	ALL
D..	2	W0011	059	20		31-25-11	ALL
D..	2	W0011	060	20		31-25-11	ALL
D..	2	W0011	080	20		34-22-91	ALL
D..	2	W0011	082	20		34-22-37	ALL
D..	2	W0011	156	20		34-22-16	ALL
D..	2	W0011	819	20		34-22-17	ALL
<b>GD00066</b>		<b>YHLZG16</b>				<b>1562/195/R051</b>	<b>ALL</b>
D..	2	W0286	011	20		25-33-11	277-299
D..	2	W0286	012	20		25-33-11	277-299
A..	2	W1356	22X	20		30-71-23	ALL
D..	2	W1356	553	20		38-15-11	275-299
A..	2	W1356	H-B			30-71-23	050-099
A..	2	W1356	H-B			30-71-24	150-199
A..	2	W1358	12D	18		38-15-11	ALL
S..	2	W1358	12E	18		38-15-11	ALL
A..	2	W1358	15X	16		30-71-24	050-099, 150-199
A..	2	W1358	N-C			30-71-24	050-099, 150-199
A..	2	W1358	T-B			30-71-23	ALL
<b>GD00070</b>		<b>YHLZG16</b>				<b>1540/294/R052</b>	<b>ALL</b>
D..	2	W0790	024	20		33-51-12	275-299
D..	2	W0790	038	16		33-51-12	050-099
A..	2	W0816	004	20		33-27-11	ALL
S..	2	W0816	026	20		33-27-11	050-099
A..	2	W0816	800	18		33-27-11	150-199
A..	2	W0818	513	20		33-27-11	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD00000

Page 6

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00070</b>		<b>YHLZG16 (continued)</b>				<b>1540/294/R052</b>	<b>ALL</b>
S..	2	W0818	533	20		33-27-11	ALL
S..	2	W0818	535	20		33-27-11	ALL
A..	2	W0818	800	18		33-27-11	150-199
D..	2	W0836	028	18		33-51-14	ALL
D..	2	W0836	039	20		33-51-12	050-099
D..	2	W0836	041	16		33-51-12	050-099
A..	2	W1240	002	20		33-21-21	275-299
A..	2	W1240	017	18		33-22-31	ALL
A..	2	W1240	018	18		33-22-31	ALL
A..	2	W1240	028	18		33-22-11	ALL
D..	2	W1254	004	20		25-63-11	050-099, 150-199
S..	2	W1254	006	20		25-63-11	050-099, 150-199
D..	2	W1356	55X	20		38-15-11	050-099, 150-199
<b>GD00071</b>		<b>YHLZG16</b>				<b>0148/227/R037</b>	<b>ALL</b>
D..	2	W0011	173	20		29-21-32	ALL
A..	2	W0011	612	20		34-22-91	ALL
A..	2	W0031	002	20		34-22-92	ALL
A..	2	W0031	038	20		34-13-21	ALL
A..	2	W0031	046	20		34-13-21	ALL
D..	2	W0031	678	20		27-51-11	ALL
D..	2	W0031	687	20		27-51-11	ALL
D..	2	W0031	695	20		27-51-11	ALL
D..	2	W0031	736	20		34-61-26	ALL
D..	2	W0031	737	20		34-61-26	ALL
D..	2	W0031	739	20		34-61-26	ALL
D..	2	W0031	742	20		34-61-26	ALL
D..	2	W0051	142	20		34-22-36	ALL
<b>GD00073</b>		<b>YHLZG16</b>				<b>0148/228/R037</b>	<b>ALL</b>
S..	2	W0031	031	20		22-14-21	ALL
D..	2	W0031	076	20		22-14-21	ALL
A..	2	W0031	131	20		33-13-13	ALL
A..	2	W0031	133	20		33-13-13	ALL
A..	2	W0031	135	20		33-13-13	ALL
A..	2	W0031	137	20		33-13-13	ALL
D..	2	W0031	804	20		34-22-27	ALL
A..	2	W0051	073	16		33-13-13	ALL
S..	2	W0051	074	20		33-13-13	ALL
DED		W0051	074Z			33-13-13	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD00000

Page 7

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00073</b>		<b>YHLZG16 (continued)</b>				<b>0148/228/R037</b>	<b>ALL</b>
A..	2	W0586	045	18		33-13-13	050-099, 150-156, 162-166, 275-276
A..	2	W0631	023	20		23-51-21	ALL
D..	2	W0631	029	20		23-51-21	ALL
D..	2	W0976	002	20		30-43-11	ALL
S..	2	W0976	003	20		30-43-11	ALL
D..	2	W0976	009	16		30-42-11	ALL
S..	2	W0976	011	16		30-42-11	ALL
<b>GD00077</b>		<b>YHLZG16</b>				<b>0148/229/R037</b>	<b>ALL</b>
S..	2	W0011	614	20		34-22-91	ALL
S..	2	W0011	615	20		34-22-91	ALL
D..	2	W0011	811	20		34-22-36	ALL
S..	2	W0031	003	20		34-22-92	ALL
S..	2	W0031	037	20		34-13-21	ALL
S..	2	W0031	045	20		34-13-21	ALL
S..	2	W0031	055	20		31-25-11	ALL
D..	2	W0031	157	20		34-12-62	ALL
D..	2	W0031	159	20		34-12-62	ALL
D..	2	W0031	167	20		34-13-21	ALL
D..	2	W0031	171	20		22-41-13	ALL
D..	2	W0031	177	20		32-42-11	ALL
S..	2	W0031	302	20		31-25-11	ALL
S..	2	W0031	745	20		31-31-26	ALL
<b>GD00079</b>		<b>YHLZG16</b>				<b>0148/230/R037</b>	<b>ALL</b>
D..	2	W0011	609	20		34-22-81	ALL
D..	2	W0011	613	20		34-22-91	ALL
D..	2	W0011	624	20		31-51-31	ALL
D..	2	W0031	004	20		34-22-92	ALL
D..	2	W0031	006	20		34-22-92	ALL
D..	2	W0031	014	20		34-22-27	ALL
D..	2	W0031	016	20		34-22-27	ALL
D..	2	W0031	019	20		34-22-27	ALL
D..	2	W0031	021	20		34-22-38	ALL
S..	2	W0031	030	20		22-14-21	ALL
D..	2	W0031	036	20		34-13-21	ALL
D..	2	W0031	044	20		34-13-21	ALL
D..	2	W0031	056	20		31-25-11	ALL
D..	2	W0031	057	20		31-25-11	ALL
D..	2	W0031	173	20		34-22-26	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD00000

Page 8

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00081</b>		<b>YHLZG16</b>				<b>SHELF/E08/01</b>	<b>050-099, 150-154, 162-164, 275-276</b>
S..	2	W1035	202Z			31-41-21	050-099, 150-154, 162-164, 275-276
S..	2	W1035	203Z			31-41-21	050-099, 150-154, 162-164, 275-276
S..	2	W1035	204Z			31-41-21	050-099, 150-154, 162-164, 275-276
S..	2	W1035	205Z			31-41-21	050-099, 150-154, 162-164, 275-276
S..	2	W1035	214Z			31-41-22	050-099, 150-154, 162-164, 275-276
S..	2	W1035	215Z			31-41-22	050-099, 150-154, 162-164, 275-276
S..	2	W1037	202Z			31-41-23	050-099, 150-154, 275-276
S..	2	W1037	203Z			31-41-23	050-099, 150-154, 275-276
S..	2	W1037	204Z			31-41-23	050-099, 150-154, 275-276
S..	2	W1037	205Z			31-41-23	050-099, 150-154, 275-276
S..	2	W1037	214Z			31-41-24	050-099, 150-154, 275-276
S..	2	W1037	215Z			31-41-24	050-099, 150-154, 275-276
D..	2	W2000	DL13	24		21-52-11	050-099, 150-154, 162-164, 275-276
D..	2	W2002	PL18	24		49-94-14	050-099, 150-154, 162-164, 275-276
S..	2	W2004	207Z			31-41-32	050-099, 150-154, 162-164, 275-276
<b>GD00083</b>		<b>YHLZG16</b>				<b>SHELF/E08/01</b>	<b>050-099, 150-164, 275-276</b>
D..	2	W1035	052	20		31-41-15	050-099, 150-154, 162-164, 275-276
D..	2	W1035	066	22		31-41-17	050-099, 150-154, 162-164, 275-276
D..	2	W1037	054	22		31-41-17	050-099, 150-154, 275-276
S..	2	W1037	216Z			31-41-24	050-099, 150-154, 275-276
S..	2	W1037	217Z			31-41-24	050-099, 150-154, 275-276
S..	2	W1037	226Z			31-31-13	050-099, 150-154, 275-276
A..	2	W2000	AK15	24		73-33-11	050-099, 150-154, 162-164, 275-276
D..	2	W2000	BK14	24		21-64-11	050-099, 150-154, 162-164, 275-276
D..	2	W2000	FK07	24		21-52-11	050-099, 150-154, 162-164, 275-276
A..	2	W2000	GK08	24		SPARE	150-154
A..	2	W2000	GN09	24		SPARE	150-154
S..	2	W2000	MK16	24		73-31-11	050-099, 150-154, 162-164, 275-276
A..	2	W2000	NK13	24		29-31-11	050-099, 150-154, 162-164, 275-276
S..	2	W2002	AK07	24		34-61-15	155-157
S..	2	W2002	QL05	24		73-21-14	050-099, 150-154, 162-164, 275-276
D..	2	W2004	022	22		31-41-11	050-099, 150-154, 162-164, 275-276
S..	2	W2004	201Z			31-41-31	150-154, 162-164, 275-276
S..	2	W2004	205Z			31-41-32	150-154, 162-164, 275-276
S..	2	W2004	209Z			31-41-34	050-099, 150-154, 162-164, 275-276
D..	2	W2006	020	20		31-41-13	050-099
<b>GD00084</b>		<b>YHLZG16</b>				<b>0202/280/L008</b>	<b>ALL</b>
D..	2	W0062	045	20		21-31-21	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD00000

Page 9

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00084</b>		<b>YHLZG16 (continued)</b>				<b>0202/280/L008</b>	<b>ALL</b>
S..	2	W0062	049	20		21-31-11	ALL
S..	2	W0062	050	20		21-31-21	ALL
S..	2	W0062	054	20		21-31-11	ALL
D..	2	W0062	095	20		36-11-61	ALL
S..	2	W0062	09G	20		33-13-16	ALL
A..	2	W0062	09L	16		33-13-16	ALL
D..	2	W0062	135	20		21-58-11	ALL
D..	2	W0062	511	20		21-64-11	ALL
D..	2	W0062	527	20		21-25-11	ALL
S..	2	W0062	58C	20		36-21-11	ALL
A..	2	W0062	58D	20		36-21-11	ALL
A..	2	W0062	705	20		30-41-11	ALL
A..	2	W0062	706	20		30-41-11	ALL
<b>GD00085</b>		<b>YHLZG16</b>				<b>SHELF/E08/00</b>	<b>ALL</b>
S..	2	W2000	BK01	24		SPARE	ALL
REF		W2000	CK20	24		99-99-99	050-099, 150-154, 275-276
S..	2	W2000	DK01	24		SPARE	ALL
S..	2	W2000	DL01	24		SPARE	ALL
S..	2	W2000	EK15	24		77-12-12	ALL
S..	2	W2000	EK18	24		77-12-12	ALL
S..	2	W2000	FK01	24		SPARE	ALL
S..	2	W2000	FL01	24		SPARE	ALL
S..	2	W2000	HK01	24		SPARE	ALL
S..	2	W2000	LK17	24		73-21-14	050-099, 150-154, 275-276
S..	2	W2000	QL20	24		99-99-99	275-276
S..	2	W2002	BK01	24		SPARE	ALL
S..	2	W2002	DK01	24		SPARE	ALL
S..	2	W2002	DL01	24		SPARE	ALL
S..	2	W2002	FK01	24		SPARE	ALL
S..	2	W2002	FL01	24		SPARE	ALL
S..	2	W2002	HK01	24		SPARE	ALL
S..	2	W2002	HL01	24		SPARE	ALL
<b>GD00086</b>		<b>YHLZG16</b>				<b>0202/280/R008</b>	<b>ALL</b>
A..	2	W0062	01B	18		33-13-16	ALL
A..	2	W0062	03B	20		33-13-16	ALL
D..	2	W0062	03D	20		21-65-11	ALL
S..	2	W0062	03L	20		21-65-11	ALL
A..	2	W0062	042	18		33-13-16	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD00000

Page 10

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00086</b>		<b>YHLZG16 (continued)</b>				<b>0202/280/R008</b>	<b>ALL</b>
S..	2	W0062	10G	20		33-13-16	ALL
A..	2	W0062	10L	16		33-13-16	ALL
S..	2	W0062	12G	20		33-13-16	ALL
A..	2	W0062	12L	16		33-13-16	ALL
A..	2	W0062	132	20		33-13-16	ALL
S..	2	W0062	13G	20		33-13-16	ALL
A..	2	W0062	13L	16		33-13-16	ALL
A..	2	W0062	502	18		33-13-16	ALL
D..	2	W0062	531	20		21-53-22	ALL
A..	2	W0062	635	16		33-11-14	ALL
D..	2	W0062	648	20		33-16-11	ALL
<b>GD00087</b>		<b>YHLZG16</b>				<b>SHELF/E08/00</b>	<b>ALL</b>
S..	2	W2000	LK17	24		73-21-14	155-199, 277-299
S..	2	W2000	MK01	24		SPARE	ALL
S..	2	W2000	PK01	24		SPARE	ALL
S..	2	W2000	PL01	24		99-99-99	050-099, 150-154, 275-276
S..	2	W2000	PL01	24		SPARE	155-199, 277-299
S..	2	W2000	RK01	24		SPARE	ALL
S..	2	W2000	TK01	24		SPARE	ALL
S..	2	W2000	TL01	24		SPARE	ALL
S..	2	W2002	MK01	24		SPARE	ALL
S..	2	W2002	PK01	24		SPARE	ALL
S..	2	W2002	PL01	24		SPARE	ALL
S..	2	W2002	RK01	24		SPARE	ALL
<b>GD00089</b>		<b>YHLZG16</b>				<b>SHELF/E08/01</b>	<b>050-099, 150-154, 162-164, 275-276</b>
S..	2	W1035	216Z			31-41-22	050-099, 150-154, 162-164, 275-276
S..	2	W1035	217Z			31-41-22	050-099, 150-154, 162-164, 275-276
D..	2	W2000	FK11	24		21-52-41	050-099, 150-154, 162-164, 275-276
A..	2	W2000	GL16	24		27-28-11	050-099, 150-154, 162-164, 275-276
S..	2	W2002	AK04	24		34-61-14	050-099, 150-154, 162-164, 275-276
S..	2	W2002	AK07	24		34-61-15	050-099, 150-154, 275-276
S..	2	W2002	CK05	24		31-41-31	050-099, 150-154, 162-164, 275-276
S..	2	W2002	CK08	24		31-41-31	050-099, 150-154, 162-164, 275-276
S..	2	W2002	CK14	24		22-32-12	050-099, 150-154, 162-164, 275-276
S..	2	W2002	CK18	24		22-41-13	050-099, 150-154, 162-164, 275-276
REF	#	W2002	CL16	24		SPARE	050-099, 150-154, 162-164, 275-276
D..	2	W2002	EK12	24		21-64-11	050-099, 150-154, 162-164, 275-276
A..	2	W2002	FK03	24		27-18-11	050-099, 150-154, 162-164, 275-276

## GROUND LIST

D280T132

## 91-21-21

Section GD00000

Page 11

Mar 09/2006



## 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00089</b>		<b>YHLZG16 (continued)</b>				<b>SHELF/E08/01</b>	<b>050-099, 150-154, 162-164, 275-276</b>
A..	2	W2002	FK07	24		27-18-11	050-099, 150-154, 162-164, 275-276
S..	2	W2004	201Z			31-41-31	050-099
S..	2	W2004	205Z			31-41-32	050-099
D..	2	W2006	020	20		31-41-13	150-154, 162-164, 275-276
<b>GD00091</b>		<b>YHLZG16</b>				<b>SHELF/E08/01</b>	<b>050-099, 150-154, 162-164, 275-276</b>
S..	2	W1035	201Z			31-41-12	050-099, 150-154, 162-164, 275-276
A..	2	W2000	AK06	24		79-32-11	050-099, 150-154, 162-164, 275-276
S..	2	W2000	AK16	24		73-31-11	050-099, 150-154, 162-164, 275-276
A..	2	W2000	BK13	24		29-31-11	050-099, 150-154, 162-164, 275-276
D..	2	W2000	DK07	24		36-21-11	050-099, 150-154, 162-164, 275-276
A..	2	W2000	EK03	24		27-38-11	050-099, 150-154, 162-164, 275-276
D..	2	W2000	FK04	24		21-52-11	050-099, 150-154, 162-164, 275-276
D..	2	W2000	FL02	24		21-64-11	050-099, 150-154, 162-164, 275-276
D..	2	W2000	FL05	24		21-64-11	050-099, 150-154, 162-164, 275-276
A..	2	W2000	GK10	24		29-31-11	050-099, 150-154, 162-164, 275-276
S..	2	W2000	GL04	24		73-21-14	050-099, 150-154, 162-164, 275-276
D..	2	W2000	GL11	24		79-31-11	050-099, 150-154, 162-164, 275-276
<b>GD00092</b>		<b>YHLZG16</b>				<b>0202/280/L008</b>	<b>ALL</b>
A..	2	W0723	022	20		33-13-16	ALL
D..	2	W1307	032	20		22-21-11	ALL
D..	2	W1309	010	20		22-21-21	ALL
<b>GD00093</b>		<b>YHLZG16</b>				<b>SHELF/E08/01</b>	<b>ALL</b>
A..	2	W2004	004	20		31-41-11	ALL
D..	2	W2004	005	20		31-41-11	ALL
S..	2	W2004	006	20		31-41-11	ALL
D..	2	W2004	021	22		31-41-11	ALL
D..	2	W2004	023	22		31-41-11	ALL
D..	2	W2004	024	22		31-41-11	ALL
<b>GD00094</b>		<b>YHLZG16</b>				<b>0214/200/R040</b>	<b>ALL</b>
A..	2	W0615	004	20		34-57-11	ALL
<b>GD00096</b>		<b>YHLZG16</b>				<b>0203/192/L027</b>	<b>ALL</b>
S..	2	W0632	008	20		33-13-18	ALL
S..	2	W0632	018	20		33-13-18	ALL

GROUND LIST

D280T132

**91-21-21**  
Section GD00000  
Page 12  
Mar 09/2006





Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00097</b>		<b>DC</b>				<b>L0253/14/RS</b>	<b>ALL</b>
D..	N	W0507	001	18		22-11-12	ALL
D..	N	W0507	003	18		22-11-12	ALL

**GROUND LIST**

D280T132

**91-21-21**

Section GD00000

Page 13 End

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00100</b>		<b>YHLZG16</b>				<b>0202/282/L008</b>	<b>ALL</b>
A..	2	W0062	002	18		33-13-16	ALL
A..	2	W0062	10R	20		33-13-16	ALL
A..	2	W0062	110	20		33-13-16	ALL
S..	2	W0062	11G	20		33-13-16	ALL
A..	2	W0062	11L	16		33-13-16	ALL
A..	2	W0062	12R	20		33-13-16	ALL
A..	2	W0062	12Y	20		33-13-16	ALL
A..	2	W0062	528	20		33-13-16	050-099, 155-199, 276-299
A..	2	W0062	562	18		33-13-16	ALL
A..	2	W0062	652	18		33-13-16	ALL
A..	2	W0062	702	18		33-13-16	ALL
D..	2	W0062	79G	20		SPARE	050-099, 155-199
D..	2	W0066	854	20		73-21-16	275-299
<b>GD00102</b>		<b>YHLZG16</b>				<b>0202/280/L008</b>	<b>ALL</b>
S..	2	W0062	01H	20		28-43-11	ALL
D..	2	W0062	01K	20		28-43-11	ALL
D..	2	W0062	624	20		28-42-31	ALL
DED		W0062	624Z			28-42-31	ALL
D..	2	W0062	662	20		24-51-71	ALL
A..	2	W0062	722	18		33-13-16	ALL
D..	2	W0062	850	20		73-21-16	275-299
D..	2	W0066	029	20		78-34-21	ALL
D..	2	W0066	030	20		78-34-21	ALL
A..	2	W0066	03B	20		33-13-16	ALL
A..	2	W0066	127	20		33-13-16	ALL
D..	2	W0066	64H	20		78-34-21	ALL
D..	2	W0066	671	20		24-41-12	ALL
A..	2	W0066	842	18		33-13-16	ALL
D..	2	W0066	850	20		73-21-16	275-299
D..	2	W0066	891	20		21-51-11	275-299
<b>GD00104</b>		<b>YHLZG16</b>				<b>0202/280/R008</b>	<b>ALL</b>
D..	2	W0066	03E	20		33-24-11	ALL
D..	2	W0066	03H	20		33-24-11	ALL
S..	2	W0066	042	20		21-61-11	ALL
S..	2	W0066	052	20		21-61-21	ALL
D..	2	W0066	059	20		21-61-21	ALL
S..	2	W0066	062	20		21-61-31	ALL
D..	2	W0066	069	20		21-61-31	ALL

## GROUND LIST

D280T132

**91-21-21**  
Section GD00100  
Page 1  
Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00104</b>		<b>YHLZG16 (continued)</b>				<b>0202/280/R008</b>	<b>ALL</b>
D..	2	W0066	097	20		36-11-62	ALL
D..	2	W0066	09J	20		21-61-41	ALL
S..	2	W0066	09M	20		21-61-41	ALL
D..	2	W0066	135	20		21-58-11	ALL
D..	2	W0066	527	20		21-25-21	ALL
D..	2	W0066	531	20		21-53-12	ALL
D..	2	W0066	624	20		28-22-11	ALL
A..	2	W0066	705	20		30-41-12	ALL
A..	2	W0066	706	20		30-41-12	ALL
<b>GD00106</b>		<b>YHLZG16</b>				<b>0348/147/L074</b>	<b>ALL</b>
S..	2	W0606	025R	20		26-16-11	ALL
D..	2	W0606	029R	20		26-16-11	ALL
D..	2	W0606	032R	20		26-16-11	ALL
A..	2	W0606	122	20		26-16-21	ALL
A..	2	W0606	124	20		26-16-21	ALL
D..	2	W0606	126	20		26-16-21	ALL
S..	2	W0606	129	20		26-16-21	ALL
S..	2	W0606	155	20		26-16-21	ALL
S..	2	W0606	156	20		26-16-21	ALL
S..	2	W0614	025R	20		26-16-11	ALL
D..	2	W0614	029R	20		26-16-11	ALL
D..	2	W0614	032R	20		26-16-11	ALL
<b>GD00108</b>		<b>YHLZG16</b>				<b>1395/150/L075</b>	<b>ALL</b>
D..	2	W0606	035R	20		26-16-11	ALL
D..	2	W0606	038R	20		26-16-11	ALL
S..	2	W0606	039R	20		26-16-11	ALL
A..	2	W0606	132	20		26-16-21	ALL
A..	2	W0606	134	20		26-16-21	ALL
D..	2	W0606	136	20		26-16-21	ALL
S..	2	W0606	139	20		26-16-21	ALL
S..	2	W0606	157	20		26-16-21	ALL
S..	2	W0606	158	20		26-16-21	ALL
D..	2	W0614	035R	20		26-16-11	ALL
D..	2	W0614	038R	20		26-16-11	ALL
S..	2	W0614	039R	20		26-16-11	ALL
<b>GD00110</b>		<b>YHLZG16</b>				<b>0198/278/L008</b>	<b>ALL</b>
A..	2	W0060	002	20		33-13-16	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD00100

Page 2

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00110</b>		<b>YHLZG16 (continued)</b>				<b>0198/278/L008</b>	<b>ALL</b>
D..	2	W0060	042	20		24-27-41	ALL
D..	2	W0070	041	20		21-31-11	ALL
A..	2	W0070	062	18		33-13-16	ALL
A..	2	W0070	612	20		33-13-16	ALL
A..	2	W0070	682	20		33-13-16	ALL
D..	2	W0070	688	20		49-61-11	ALL
DED		W0070	688Z			49-61-11	ALL
D..	2	W0070	691	20		24-33-11	ALL
D..	2	W0070	692	20		24-33-11	ALL
D..	2	W0070	699	20		24-33-11	ALL
A..	2	W0070	702	20		24-33-11	ALL
D..	2	W0070	709	20		24-31-41	ALL
<b>GD00112</b>		<b>YHLZG16</b>				<b>0202/280/R008</b>	<b>ALL</b>
A..	2	W0066	01B	20		33-13-16	ALL
D..	2	W0066	01H	20		21-43-11	050-099, 150-199, 280-299
D..	2	W0066	01H	24		21-43-11	275-278
A..	2	W0066	072	18		33-13-16	ALL
A..	2	W0066	132	20		33-13-16	ALL
A..	2	W0066	176	20		33-13-16	ALL
A..	2	W0066	510	20		33-13-16	050-099, 155-199, 276-299
A..	2	W0066	582	20		33-13-16	ALL
A..	2	W0066	602	18		33-13-16	ALL
D..	2	W0066	79E	20		SPARE	050-099, 155-199
D..	2	W0066	79G	20		30-11-11	050-099, 150-199
D..	2	W0066	90C	20		21-61-81	ALL
A..	2	W0634	032	16		33-11-14	ALL
A..	2	W0634	033	16		33-11-14	ALL
A..	2	W0638	014	16		33-11-14	ALL
A..	2	W0638	102	20		33-14-11	ALL
A..	2	W0638	104	20		33-14-11	ALL
<b>GD00119</b>		<b>YHLZG16</b>				<b>0367/294/L015</b>	<b>ALL</b>
A..	2	W0820	005	20		33-26-21	ALL
A..	2	W0820	027	20		SPARE	150-199
A..	2	W0820	027	20		33-26-21	275-299
A..	2	W0820	035	20		33-26-21	050-099, 150-199
A..	2	W1138	007	20		33-24-13	275
A..	2	W1138	105	20		33-24-13	050-099, 276-299
D..	2	W1160	002	20		35-21-14	150-199, 275

## GROUND LIST

D280T132

**91-21-21**

Section GD00100

Page 3

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00119</b>		<b>YHLZG16 (continued)</b>				<b>0367/294/L015</b>	<b>ALL</b>
D..	2	W1160	102	20		35-21-14	050-099, 276-299
A..	2	W1224	125	20		33-24-13	275-299
A..	2	W1230	007	20		33-22-31	050-099, 150-199
A..	2	W1230	008	20		33-22-31	050-099, 150-199
D..	2	W1230	029	20		33-24-11	ALL
A..	2	W1230	067	20		33-22-21	275-299
D..	2	W1230	090	20		30-46-11	150-199
S..	2	W1230	091	20		30-46-11	150-199
A..	2	W1230	121	20		33-22-31	050-099, 153-199
A..	2	W1230	122	20		33-22-31	050-099, 153-199
A..	2	W1230	603	20		33-24-13	050-099, 150-199
A..	2	W1381	003	16		23-34-17	150-199, 275-299
<b>GD00123</b>		<b>AC</b>				<b>0543/292/L065</b>	<b>050-099, 280-299</b>
A..	E	W0800	045	20		33-24-12	280-299
A..	E	W0800	545	20		33-24-12	280-299
A..	E	W0800	548	20		33-24-12	280-299
A..	E	W1383	003	16		23-34-16	050-099
<b>GD00129</b>		<b>DC</b>				<b>1802/256/L035</b>	<b>ALL</b>
D..	N	W0591	003	18		22-11-12	ALL
D..	N	W0591	004	18		22-11-12	ALL
D..	N	W0591	008	16		27-32-31	ALL
D..	N	W0591	009	16		27-32-31	ALL
<b>GD00131</b>		<b>SH</b>				<b>1809/248/L033</b>	<b>ALL</b>
S..	N	W0591	005	18		22-11-12	ALL
<b>GD00132</b>		<b>YHLZG16</b>				<b>1153/147/L078</b>	<b>ALL</b>
D..	2	W0596	082	18		29-11-32	ALL
S..	2	W0596	083	18		29-11-32	ALL
D..	2	W0596	084	18		29-11-32	ALL
S..	2	W0596	099	18		29-11-32	ALL
D..	2	W0596	100	18		29-11-32	ALL
D..	2	W0596	136	16		25-65-11	ALL
<b>GD00133</b>		<b>DC</b>				<b>F 092/ /RS</b>	<b>ALL</b>
D..	N	W0593	008	18		22-11-12	ALL
D..	N	W0593	009	18		22-11-12	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD00100

Page 4

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00135</b>		<b>SH</b>				<b>F 092/ /RS</b>	<b>ALL</b>
S..	N	W0593	010	18		22-11-12	ALL
<b>GD00137</b>		<b>DC</b>				<b>1725/285/L020</b>	<b>ALL</b>
D..	N	W0575	003	18		27-41-11	ALL
D..	N	W0575	005Y	18		27-41-11	ALL
D..	N	W0575	007Y	18		27-41-11	ALL
<b>GD00147</b>		<b>DC</b>				<b>0962/178/R091</b>	<b>ALL</b>
D..	N	W1727	001	18		22-11-32	ALL
D..	N	W1727	003	18		22-11-32	ALL
<b>GD00149</b>		<b>SH</b>				<b>0962/178/R091</b>	<b>ALL</b>
S..	N	W1727	019	18		22-11-32	ALL
<b>GD00151</b>		<b>YHLZG16</b>				<b>SHELF/E08/02</b>	<b>050-099, 150-154, 162-164, 275-276</b>
S..	2	W1035	220Z			31-41-22	050-099, 150-154, 162-164, 275-276
S..	2	W1035	221Z			31-41-22	050-099, 150-154, 162-164, 275-276
S..	2	W1037	201Z			31-41-12	050-099, 150-154, 275-276
S..	2	W1037	220Z			31-41-24	050-099, 150-154, 275-276
S..	2	W1037	221Z			31-41-24	050-099, 150-154, 275-276
S..	2	W1037	227Z			31-31-13	050-099, 150-154, 275-276
D..	2	W2000	PN13	24		21-52-21	050-099, 150-154, 162-164, 275-276
REF	#	W2002	CN16	24		SPARE	150-154, 162-164, 275-276
S..	2	W2006	201Z			31-41-33	050-099, 150-154, 162-164, 275-276
S..	2	W2006	205Z			31-41-34	050-099, 150-154, 162-164, 275-276
S..	2	W2006	209Z			31-41-32	050-099, 150-154, 162-164, 275-276
<b>GD00153</b>		<b>YHLZG16</b>				<b>SHELF/E08/02</b>	<b>050-099, 150-164, 275-276</b>
D..	2	W2000	BM17	24		21-64-11	050-099, 150-154, 162-164, 275-276
A..	2	W2000	LM07	24		73-33-11	150-154, 162-164, 275-276
A..	2	W2000	LM13	24		73-33-11	050-099
A..	2	W2000	MM06	24		79-32-11	050-099, 150-154, 162-164, 275-276
A..	2	W2000	MM15	24		SPARE	050-099
D..	2	W2000	NN11	24		79-31-11	050-099, 150-154, 162-164, 275-276
D..	2	W2000	PM04	24		21-52-21	050-099, 150-154, 162-164, 275-276
D..	2	W2000	PM07	24		21-52-21	050-099, 150-154, 162-164, 275-276
D..	2	W2000	PM11	24		21-52-41	050-099, 150-154, 162-164, 275-276
D..	2	W2000	PM17	24		36-21-11	050-099, 150-154, 162-164, 275-276
S..	2	W2000	PN04	24		73-21-14	050-099, 150-154, 162-164, 275-276

## GROUND LIST

D280T132

**91-21-21**

Section GD00100

Page 5

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00153</b>		<b>YHLZG16 (continued)</b>				<b>SHELF/E08/02</b>	<b>050-099, 150-164, 275-276</b>
S..	2	W2000	SM17	24		77-12-12	050-099, 150-154, 162-164, 275-276
S..	2	W2000	TM05	24		31-41-33	050-099, 150-154, 162-164, 275-276
S..	2	W2000	TM08	24		31-41-33	050-099, 150-154, 162-164, 275-276
S..	2	W2000	TN06	24		34-61-25	050-099, 150-154, 162-164, 275-276
S..	2	W2000	TN09	24		34-61-24	050-099, 150-154, 162-164, 275-276
S..	2	W2000	TN12	24		34-61-24	050-099, 150-154, 162-164, 275-276
S..	2	W2002	AM07	24		34-61-15	150-164, 275-276
S..	2	W2002	CM14	24		22-32-12	050-099, 150-154, 275-276
<b>GD00155</b>		<b>YHLZG16</b>				<b>SHELF/E08/00</b>	<b>ALL</b>
S..	2	W2000	AM01	24		SPARE	ALL
REF		W2000	BM20	24		99-99-99	050-099, 150-154, 275-276
S..	2	W2000	CM01	24		SPARE	ALL
S..	2	W2000	EM01	24		SPARE	ALL
REF		W2000	FN20	24		99-99-99	050-099, 150-154, 275-276
S..	2	W2000	GM01	24		SPARE	ALL
S..	2	W2000	GN01	24		SPARE	ALL
REF		W2000	HM20	24		99-99-99	050-099, 150-154, 275-276
S..	2	W2002	AM01	24		SPARE	ALL
S..	2	W2002	CM01	24		SPARE	ALL
S..	2	W2002	CN01	24		SPARE	ALL
S..	2	W2002	EM01	24		SPARE	ALL
<b>GD00157</b>		<b>YHLZG16</b>				<b>SHELF/E08/00</b>	<b>ALL</b>
S..	2	W2000	LM01	24		SPARE	ALL
S..	2	W2000	NM01	24		SPARE	ALL
S..	2	W2000	NN01	24		77-12-11	050-099, 162-199, 277-299
S..	2	W2000	NN01	24		SPARE	150-157, 275-276
S..	2	W2000	QM01	24		SPARE	ALL
S..	2	W2000	QN01	24		SPARE	ALL
S..	2	W2000	SM01	24		SPARE	ALL
S..	2	W2002	LM01	24		SPARE	ALL
S..	2	W2002	LN01	24		SPARE	ALL
S..	2	W2002	NM01	24		SPARE	ALL
S..	2	W2002	QM01	24		SPARE	ALL
S..	2	W2002	QM13	24		77-12-11	ALL
S..	2	W2002	QN01	24		SPARE	ALL
<b>GD00159</b>		<b>YHLZG16</b>				<b>SHELF/E08/02</b>	<b>050-099, 150-154, 162-164, 275-276</b>
S..	2	W1035	206Z			31-41-21	050-099, 150-154, 162-164, 275-276

## GROUND LIST

D280T132

**91-21-21**

Section GD00100

Page 6

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00159</b>		<b>YHLZG16 (continued)</b>				<b>SHELF/E08/02</b>	<b>050-099, 150-154, 162-164, 275-276</b>
S..	2	W1035	207Z			31-41-21	050-099, 150-154, 162-164, 275-276
S..	2	W1035	208Z			31-41-21	050-099, 150-154, 162-164, 275-276
S..	2	W1035	209Z			31-41-21	050-099, 150-154, 162-164, 275-276
S..	2	W1035	218Z			31-41-22	050-099, 150-154, 162-164, 275-276
S..	2	W1035	219Z			31-41-22	050-099, 150-154, 162-164, 275-276
D..	2	W1037	043	20		31-41-15	050-099, 150-154, 162-164, 275-276
S..	2	W1037	206Z			31-41-23	050-099, 150-154, 275-276
S..	2	W1037	207Z			31-41-23	050-099, 150-154, 275-276
S..	2	W1037	208Z			31-41-23	050-099, 150-154, 275-276
S..	2	W1037	209Z			31-41-23	050-099, 150-154, 275-276
S..	2	W1037	218Z			31-41-24	050-099, 150-154, 275-276
S..	2	W1037	219Z			31-41-24	050-099, 150-154, 275-276
S..	2	W2006	207Z			31-41-34	050-099, 150-154, 162-164, 275-276
<b>GD00161</b>		<b>DC</b>				<b>1821/250/R030</b>	<b>ALL</b>
D..	N	W0603	003	18		22-11-22	ALL
D..	N	W0603	004	18		22-11-22	ALL
<b>GD00163</b>		<b>SH</b>				<b>1821/250/R030</b>	<b>ALL</b>
S..	N	W0603	005	18		22-11-22	ALL
<b>GD00165</b>		<b>DC</b>				<b>F 092/ /RS</b>	<b>ALL</b>
D..	N	W0599	008	18		22-11-22	ALL
D..	N	W0599	009	18		22-11-22	ALL
<b>GD00166</b>		<b>YHLZG16</b>				<b>0438/123/R053</b>	<b>150-199, 275-299</b>
D..	2	W0704	634	20		25-53-14	150-199, 275-299
A..	2	W0704	635	20		25-53-14	150-199, 275-299
<b>GD00167</b>		<b>SH</b>				<b>F 092/ /RS</b>	<b>ALL</b>
S..	N	W0599	010	18		22-11-22	ALL
<b>GD00169</b>		<b>YHLZG16</b>				<b>SHELF/E08/02</b>	<b>050-099, 150-154, 162-164, 275-276</b>
D..	2	W2000	DN17	24		21-64-11	050-099, 150-154, 162-164, 275-276
A..	2	W2000	EM05	24		27-38-11	050-099, 150-154, 162-164, 275-276
D..	2	W2000	FN08	24		21-64-11	050-099, 150-154, 162-164, 275-276
A..	2	W2000	GM03	24		27-18-11	050-099, 150-154, 162-164, 275-276
A..	2	W2000	GM08	24		27-18-11	050-099, 150-154, 162-164, 275-276
S..	2	W2002	AM07	24		34-61-15	050-099

## GROUND LIST

D280T132

**91-21-21**  
Section GD00100  
Page 7  
Mar 09/2006





# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00169</b>		<b>YHLZG16 (continued)</b>				<b>SHELF/E08/02</b>	<b>050-099, 150-154, 162-164, 275-276</b>
S..	2	W2002	BM06	24		77-31-11	050-099, 150-154, 162-164, 275-276
S..	2	W2002	BM09	24		77-31-11	050-099, 150-154, 162-164, 275-276
S..	2	W2002	CM14	24		22-32-12	162-164
S..	2	W2002	CM18	24		22-41-13	050-099, 150-154, 162-164, 275-276
S..	2	W2002	CN04	24		31-31-13	050-099, 150-154, 162-164, 275-276
D..	2	W2006	022	22		31-41-11	050-099, 150-154, 162-164, 275-276
D..	2	W2006	032	20		49-71-11	050-099, 150-154, 162-164, 275-276
D..	2	W2006	034	20		49-73-11	050-099, 150-154, 162-164, 275-276
<b>GD00171</b>		<b>YHLZG16</b>				<b>SHELF/E08/02</b>	<b>ALL</b>
A..	2	W2006	004	20		31-41-11	ALL
D..	2	W2006	005	20		31-41-11	ALL
S..	2	W2006	006	20		31-41-11	ALL
D..	2	W2006	021	22		31-41-11	ALL
D..	2	W2006	023	22		31-41-11	ALL
D..	2	W2006	024	22		31-41-11	ALL
<b>GD00173</b>		<b>AC</b>				<b>1555/282/L062</b>	<b>ALL</b>
A..	E	W0216	037	20		33-24-14	275-299
DED		W0216	037Z			33-24-14	277-299
A..	E	W0216	054	18		30-71-25	050-099, 150-199
A..	E	W0649	003	20		23-71-11	ALL
A..	E	W0713	006	20		31-31-11	ALL
<b>GD00175</b>		<b>SH</b>				<b>1555/282/L062</b>	<b>ALL</b>
S..	E	W0649	001	20		23-71-11	ALL
S..	E	W0649	017	20		23-71-11	ALL
<b>GD00181</b>		<b>DC</b>				<b>L0253/14/RS</b>	<b>ALL</b>
D..	N	W1731	001	18		22-11-22	ALL
D..	N	W1731	003	18		22-11-22	ALL
<b>GD00183</b>		<b>SH</b>				<b>L0253/14/RS</b>	<b>ALL</b>
S..	N	W0507	019	18		22-11-12	ALL
<b>GD00185</b>		<b>DC</b>				<b>F 092/ /RS</b>	<b>ALL</b>
D..	N	W0597	008	18		22-11-32	ALL
D..	N	W0597	009	18		22-11-32	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD00100

Page 8

Mar 09/2006



## 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00187</b>		<b>SH</b>				<b>F 092/ /RS</b>	<b>ALL</b>
S..	N	W0597	010	18		22-11-32	ALL
<b>GD00189</b>		<b>DC</b>				<b>1809/270/R015</b>	<b>ALL</b>
D..	N	W0611	003	18		22-11-32	ALL
D..	N	W0611	004	18		22-11-32	ALL
<b>GD00191</b>		<b>SH</b>				<b>1809/270/R015</b>	<b>ALL</b>
S..	N	W0611	005	18		22-11-32	ALL

### GROUND LIST

D280T132

**91-21-21**

Section GD00100

Page 9 End

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00202</b>		<b>YHLZG16</b>				<b>0547/123/L055</b>	<b>ALL</b>
A..	2	W0702	001	20		25-53-15	150-199, 275-299
S..	2	W0702	004	20		25-53-15	150-199, 275-299
A..	2	W0702	011	20		25-53-15	150-199, 275-299
S..	2	W0702	014	20		25-53-15	150-199, 275-299
A..	2	W0702	021	20		25-53-15	150-199, 275-299
S..	2	W0702	024	20		25-53-15	150-199, 275-299
A..	2	W0702	071	20		25-53-16	150-199, 275-299
S..	2	W0702	074	20		25-53-16	150-199, 275-299
A..	2	W0702	091	20		25-53-16	150-199, 275-299
S..	2	W0702	094	20		25-53-16	150-199, 275-299
D..	2	W0704	053	20		25-53-14	050-099
A..	2	W0704	075	18		25-53-12	050-099
S..	2	W0704	078	20		25-53-12	050-099
S..	2	W0704	079	20		25-53-12	050-099
D..	2	W0704	153	20		25-53-14	050-099
A..	2	W0704	175	18		25-53-12	050-099
S..	2	W0704	178	20		25-53-12	050-099
S..	2	W0704	179	20		25-53-12	050-099
<b>GD00207</b>		<b>YHLZG16</b>				<b>0162/205/L008</b>	<b>ALL</b>
D..	2	W0517	012	20		34-61-11	ALL
S..	2	W0517	025	20		34-61-11	ALL
D..	2	W0517	026	20		34-61-11	ALL
A..	2	W0517	029	18		33-13-18	ALL
A..	2	W0517	031	20		34-61-11	050-099, 150-155, 162-165, 275-299
S..	2	W0517	201Z			34-61-11	ALL
S..	2	W0517	202Z			34-61-11	ALL
S..	2	W0517	203Z			34-61-11	ALL
S..	2	W0517	204Z			31-35-11	ALL
S..	2	W0517	205Z			23-22-11	ALL
S..	2	W0517	207Z			34-61-16	050-099, 275-276
A..	2	W1711	002	20		31-41-11	ALL
S..	2	W1711	003	20		31-41-11	ALL
D..	2	W1711	005	20		31-41-12	ALL
A..	2	W1711	035	18		33-13-18	ALL
S..	2	W1711	201Z			31-41-12	ALL
S..	2	W1711	202Z			31-41-12	ALL
<b>GD00208</b>		<b>YHLZG16</b>				<b>0162/205/L003</b>	<b>050-099, 155-199, 275-299</b>
A..	2	W0517	031	20		34-61-11	156-157, 166-199

## GROUND LIST

D280T132

**91-21-21**

Section GD00200

Page 1

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00208</b>		<b>YHLZG16 (continued)</b>				<b>0162/205/L003</b>	<b>050-099, 155-199, 275-299</b>
S..	2	W0517	207	20		34-61-16	156, 166
S..	2	W0517	207Z			34-61-16	155, 157-165, 167-199, 277-299
S..	2	W0517	208	20		34-61-16	156, 166
S..	2	W0517	208Z			34-61-16	050-099, 155, 157-165, 167-199, 275-299
S..	2	W0517	209	20		34-61-16	156, 166
S..	2	W0517	209Z			34-61-16	050-099, 155, 157-165, 167-199, 275-299
S..	2	W0517	210Z			23-25-13	156-157, 166-199, 277-299
S..	2	W9012	208Z			23-25-13	150, 153-155, 162-165
<b>GD00214</b>		<b>YHLZG16</b>				<b>0570/123/L055</b>	<b>ALL</b>
D..	2	W0704	043	20		25-53-14	150-199, 275-299
A..	2	W0704	045	18		25-53-12	150-199, 275-299
S..	2	W0704	048	20		25-53-12	150-199, 275-299
S..	2	W0704	049	20		25-53-12	150-199, 275-299
A..	2	W0704	055	18		25-53-12	050-099
S..	2	W0704	058	20		25-53-12	050-099
S..	2	W0704	059	20		25-53-12	050-099
D..	2	W0704	063	20		25-53-14	ALL
A..	2	W0704	065	18		25-53-12	050-099
S..	2	W0704	068	20		25-53-12	050-099
S..	2	W0704	069	20		25-53-12	050-099
D..	2	W0704	163	20		25-53-14	050-099
A..	2	W0704	165	18		25-53-12	050-099
S..	2	W0704	168	20		25-53-12	050-099
S..	2	W0704	169	20		25-53-12	050-099
A..	2	W0704	626	18		25-53-12	150-199, 275-299
S..	2	W0704	627	20		25-53-12	150-199, 275-299
S..	2	W0704	628	20		25-53-12	150-199, 275-299
A..	2	W0704	636	18		25-53-12	150-199, 275-299
S..	2	W0704	637	20		25-53-12	150-199, 275-299
S..	2	W0704	638	20		25-53-12	150-199, 275-299
D..	2	W0704	663	20		25-53-14	050-099
<b>GD00235</b>		<b>YHLZG16</b>				<b>0155/215/R005</b>	<b>ALL</b>
S..	2	W0517	207Z			34-61-16	150-154
S..	2	W0517	208Z			34-61-16	150-154
S..	2	W0517	209Z			34-61-16	150-154
D..	2	W0519	012	20		34-61-21	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD00200

Page 2

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00235</b>		<b>YHLZG16 (continued)</b>				<b>0155/215/R005</b>	<b>ALL</b>
S..	2	W0519	025	20		34-61-21	ALL
D..	2	W0519	026	20		34-61-21	ALL
A..	2	W0519	029	18		33-13-18	ALL
A..	2	W0519	031	20		34-61-21	050-099, 150-155, 162-165, 275-299
S..	2	W0519	201Z			34-61-21	ALL
S..	2	W0519	202Z			34-61-11	ALL
S..	2	W0519	203Z			34-61-21	ALL
S..	2	W0519	204Z			31-35-11	ALL
S..	2	W0519	205Z			23-22-11	ALL
S..	2	W0519	207Z			34-61-26	050-099, 150-155, 162-165, 275-299
S..	2	W0519	208	20		34-61-26	150-151
S..	2	W0519	208Z			34-61-26	050-099, 152-155, 162-165, 275-299
S..	2	W0519	209Z			34-61-26	050-099, 150-155, 162-165, 275-299
S..	2	W0519	210Z			23-25-13	156-157, 166-199, 277-299
S..	2	W0779	222	20		34-45-14	050-099, 150-156, 162-166, 275-276
S..	2	W9012	201Z			23-25-13	150, 153-155, 162-165
<b>GD00252</b>		<b>YHLZG16</b>				<b>0590/123/L055</b>	<b>ALL</b>
A..	2	W0702	061	20		25-53-16	150-199, 275-299
S..	2	W0702	064	20		25-53-16	150-199, 275-299
A..	2	W0702	071	20		25-53-16	050-099
S..	2	W0702	074	20		25-53-16	050-099
A..	2	W0702	081	20		25-53-16	150-199, 275-299
S..	2	W0702	084	20		25-53-16	150-199, 275-299
D..	2	W0704	073	20		25-53-14	ALL
D..	2	W0704	173	20		25-53-14	ALL
A..	2	W0704	538	18		25-53-12	050-099
S..	2	W0704	539	20		25-53-12	050-099
S..	2	W0704	540	20		25-53-12	050-099
A..	2	W0704	577	18		25-53-12	150-199, 275-299
S..	2	W0704	578	20		25-53-12	150-199, 275-299
S..	2	W0704	579	20		25-53-12	150-199, 275-299
A..	2	W0704	583	18		25-53-12	150-199, 275-299
S..	2	W0704	584	20		25-53-12	150-199, 275-299
S..	2	W0704	585	20		25-53-12	150-199, 275-299
A..	2	W0704	665	18		25-53-12	050-099
S..	2	W0704	668	20		25-53-12	050-099
S..	2	W0704	669	20		25-53-12	050-099

## GROUND LIST

D280T132

**91-21-21**

Section GD00200

Page 3

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00255</b>		<b>DC</b>				<b>F 295/ /FS</b>	<b>ALL</b>
D..	N	W1415	002	18		23-32-13	ALL
<b>GD00257</b>		<b>AC</b>				<b>F 270/ /FS</b>	<b>ALL</b>
A..	N	W0777	009	18		23-11-11	ALL
<b>GD00259</b>		<b>DC</b>				<b>1725/282/R020</b>	<b>ALL</b>
D..	N	W0581	003	18		27-41-21	ALL
D..	N	W0581	005Y	18		27-41-21	ALL
D..	N	W0581	007Y	18		27-41-21	ALL
<b>GD00263</b>		<b>YHLZG16</b>				<b>0198/278/L008</b>	<b>ALL</b>
D..	2	W0062	696	20		34-61-14	050-099, 150-199, 276-299
S..	2	W0062	747	20		28-31-12	050-099, 155-199, 277-299
DED		W0062	747Z			28-31-12	050-099, 155-199, 277-299
D..	2	W0066	609	20		34-61-24	050-099, 155-199, 276-299
S..	2	W0066	749	20		28-31-12	050-099, 155-199, 277-299
DED		W0066	749Z			28-31-12	050-099, 155-199, 277-299
A..	2	W0683	002	18		33-13-16	ALL
A..	2	W0683	004	20		23-11-11	ALL
A..	2	W0725	022	20		33-13-16	ALL
A..	2	W0751	002	20		33-13-16	ALL
S..	2	W0751	008	20		34-21-11	ALL
A..	2	W0863	035	20		33-13-16	ALL
A..	2	W1307	056	20		33-13-16	ALL
<b>GD00265</b>		<b>YHLZG16</b>				<b>0198/278/R008</b>	<b>ALL</b>
D..	2	W0062	08B	22		52-51-11	ALL
D..	2	W0062	151	20		21-61-81	ALL
A..	2	W0062	75B	20		33-45-11	ALL
A..	2	W0070	064	20		21-33-21	ALL
S..	2	W0070	082	20		21-33-21	ALL
A..	2	W0070	084	20		21-33-21	ALL
A..	2	W0070	632	20		33-13-16	ALL
D..	2	W0070	635	20		33-16-11	ALL
A..	2	W0070	643	20		33-11-16	ALL
A..	2	W0070	652	20		33-13-16	ALL
D..	2	W0070	660	20		35-21-11	ALL
D..	2	W0070	669	20		33-51-11	ALL
D..	2	W0070	670	20		33-51-11	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD00200

Page 4

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00265</b>		<b>YHLZG16 (continued)</b>				<b>0198/278/R008</b>	<b>ALL</b>
D..	2	W0070	673	20		33-51-11	ALL
D..	2	W0863	013	20		23-43-11	ALL
<b>GD00267</b>		<b>YHLZG16</b>				<b>0198/278/R008</b>	<b>ALL</b>
D..	2	W0070	04C	20		29-11-32	ALL
D..	2	W0070	712	20		24-33-11	ALL
S..	2	W0070	851	20		25-63-11	ALL
D..	2	W0070	853	20		25-63-11	ALL
A..	2	W0070	856	20		33-13-16	ALL
A..	2	W0627	017	20		33-13-16	ALL
A..	2	W0675	002	20		33-13-16	ALL
A..	2	W0675	004	20		23-11-21	ALL
A..	2	W0675	009	20		33-13-16	156-157, 166-199, 277-299
D..	2	W0675	021	20		23-25-14	156-157, 166-199, 277-278
A..	2	W0863	044	20		33-13-16	050-099, 150-199
A..	2	W9030	007	20		33-13-16	150, 153-155, 162-165
D..	2	W9030	021	20		23-25-14	150, 153-155, 162-165
<b>GD00268</b>		<b>YHLZG16</b>				<b>0674/123/R053</b>	<b>050-099</b>
D..	2	W0580	036	20		21-43-11	050-099
<b>GD00279</b>		<b>DC</b>				<b>F 150/ /RS</b>	<b>ALL</b>
D..	N	W0579	004	18		22-21-11	ALL
<b>GD00280</b>		<b>YHLZG16</b>				<b>0715/123/R053</b>	<b>150-199, 275-299</b>
D..	2	W0704	023	20		25-53-14	150-199, 275-299
A..	2	W0704	026	20		25-53-14	150-199, 275-299
A..	2	W0704	185	18		25-53-12	150-199, 275-299
S..	2	W0704	188	20		25-53-12	150-199, 275-299
S..	2	W0704	189	20		25-53-12	150-199, 275-299
A..	2	W0704	623	18		25-53-12	150-199, 275-299
S..	2	W0704	624	20		25-53-12	150-199, 275-299
S..	2	W0704	625	20		25-53-12	150-199, 275-299
<b>GD00281</b>		<b>SH</b>				<b>F 150/ /RS</b>	<b>ALL</b>
S..	N	W0579	006	18		22-21-11	ALL
<b>GD00283</b>		<b>DC</b>				<b>F 160/ /RS</b>	<b>ALL</b>
D..	N	W0583	005	18		22-21-21	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD00200

Page 5

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00285</b>		<b>SH</b>				<b>F 160/ /RS</b>	<b>ALL</b>
S..	N	W0583	006	18		22-21-21	ALL
<b>GD00289</b>		<b>DC</b>				<b>1725/275/R018</b>	<b>ALL</b>
D..	N	W0589	002	18		27-41-21	ALL
D..	N	W0589	003Y	18		27-41-21	ALL
D..	N	W0589	006Y	18		27-41-21	ALL
<b>GD00291</b>		<b>SH</b>				<b>F 118/ /RS</b>	<b>ALL</b>
S..	N	W0579	007	18		27-21-12	ALL
<b>GD00293</b>		<b>DC</b>				<b>F 118/ /RS</b>	<b>ALL</b>
D..	N	W0579	003	18		27-21-12	ALL
<b>GD00297</b>		<b>DC</b>				<b>1725/280/L025</b>	<b>ALL</b>
D..	N	W0587	002	18		27-41-11	ALL
D..	N	W0587	003Y	18		27-41-11	ALL
D..	N	W0587	006Y	18		27-41-11	ALL
<b>GD00299</b>		<b>AC</b>				<b>F 270/ /FS</b>	<b>ALL</b>
A..	N	W0775	009	18		23-11-21	ALL

## GROUND LIST

D280T132

**91-21-21**  
Section GD00200  
Page 6 End  
Mar 09/2006





# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00300</b>		<b>YHLZG16</b>				<b>1235/175/R090</b>	<b>ALL</b>
D..	2	W0616	020	20		25-53-23	ALL
A..	2	W0616	040	20		25-53-24	ALL
A..	2	W0616	060	16		33-31-61	ALL
A..	2	W0662	063	20		33-31-61	ALL
A..	2	W0662	064	20		33-37-21	050-099
A..	2	W0662	064	18		33-37-21	150-199, 275-299
<b>GD00301</b>		<b>YHLZG16</b>				<b>0257/149/R026</b>	<b>ALL</b>
A..	2	W0409	012	20		31-51-12	ALL
S..	2	W0409	203	20		34-16-11	ALL
S..	2	W0449	005	20		31-51-32	ALL
S..	2	W0449	302	20		31-51-32	ALL
S..	2	W0451	203	20		31-51-33	ALL
S..	2	W0451	204	20		27-32-11	ALL
S..	2	W0451	205	20		27-32-11	ALL
A..	2	W0453	016	20		31-51-11	ALL
S..	2	W0453	201	20		27-32-21	ALL
S..	2	W0453	205	20		22-14-21	ALL
S..	2	W0459	013	20		31-51-31	ALL
S..	2	W0459	207	20		31-51-21	ALL
S..	2	W0459	306	20		31-51-31	ALL
S..	2	W1311	015	20		22-14-11	ALL
S..	2	W1311	214	20		27-32-11	ALL
<b>GD00306</b>		<b>YHLZG16</b>				<b>1136/132/R065</b>	<b>ALL</b>
D..	2	W0710	013	20		25-53-24	ALL
A..	2	W0710	015	18		25-53-22	ALL
A..	2	W0710	016	20		25-53-24	ALL
S..	2	W0710	018	20		25-53-22	ALL
S..	2	W0710	019	20		25-53-22	ALL
D..	2	W0710	113	20		25-53-24	ALL
A..	2	W0710	115	18		25-53-22	ALL
A..	2	W0710	116	20		25-53-24	ALL
S..	2	W0710	118	20		25-53-22	ALL
S..	2	W0710	119	20		25-53-22	ALL
<b>GD00311</b>		<b>YHLZG16</b>				<b>0147/237/R008</b>	<b>ALL</b>
S..	2	W0031	230	20		22-14-21	ALL
S..	2	W0031	512	20		22-12-21	ALL
S..	2	W0031	513	20		22-13-21	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD00300

Page 1

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00311</b>		<b>YHLZG16 (continued)</b>				<b>0147/237/R008</b>	<b>ALL</b>
S..	2	W0031	514	20		22-14-21	ALL
D..	2	W0031	765	20		22-11-22	ALL
S..	2	W0031	766	20		22-11-22	ALL
D..	2	W0031	774	20		34-51-21	ALL
D..	2	W0031	776	20		34-55-21	ALL
D..	2	W0031	778	20		31-41-16	ALL
D..	2	W0031	779	20		31-51-21	ALL
A..	2	W0031	782	18		33-13-17	ALL
D..	2	W0031	811	20		34-22-36	ALL
D..	2	W0031	818	20		22-11-22	ALL
<b>GD00313</b>		<b>YHLZG16</b>				<b>0147/237/L008</b>	<b>ALL</b>
S..	2	W0011	229	20		22-14-11	ALL
S..	2	W0011	512	20		22-12-11	ALL
S..	2	W0011	513	20		22-13-11	ALL
S..	2	W0011	514	20		22-14-11	ALL
S..	2	W0011	515	20		22-12-31	ALL
D..	2	W0011	765	20		22-11-12	ALL
S..	2	W0011	766	20		22-11-12	ALL
S..	2	W0011	771	20		22-11-32	ALL
D..	2	W0011	772	20		22-11-32	ALL
D..	2	W0011	774	20		34-51-11	ALL
D..	2	W0011	776	20		34-55-11	ALL
S..	2	W0011	777	20		34-55-11	ALL
D..	2	W0011	778	20		31-41-16	ALL
D..	2	W0011	779	20		31-51-21	ALL
A..	2	W0011	785	18		33-13-17	ALL
A..	2	W0011	787	18		33-13-17	ALL
<b>GD00318</b>		<b>YHLZG16</b>				<b>1179/122/R053</b>	<b>ALL</b>
D..	2	W0710	023	20		25-53-24	ALL
A..	2	W0710	025	18		25-53-22	ALL
A..	2	W0710	026	20		25-53-24	ALL
S..	2	W0710	028	20		25-53-22	ALL
S..	2	W0710	029	20		25-53-22	ALL
D..	2	W0710	123	20		25-53-24	ALL
A..	2	W0710	125	18		25-53-22	ALL
A..	2	W0710	126	20		25-53-24	ALL
S..	2	W0710	128	20		25-53-22	ALL
S..	2	W0710	129	20		25-53-22	ALL

## GROUND LIST

D280T132

**91-21-21**  
Section GD00300  
Page 2  
Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00322</b>		<b>YHLZG16</b>				<b>0438/127/R060</b>	<b>ALL</b>
D..	2	W0704	023	20		25-53-14	050-099
A..	2	W0704	025	18		25-53-12	ALL
A..	2	W0704	026	20		25-53-14	050-099
S..	2	W0704	028	20		25-53-12	ALL
S..	2	W0704	029	20		25-53-12	ALL
D..	2	W0704	033	20		25-53-14	150-199, 275-299
A..	2	W0704	036	20		25-53-14	150-199, 275-299
A..	2	W0704	075	18		25-53-12	150-199, 275-299
S..	2	W0704	078	20		25-53-12	150-199, 275-299
S..	2	W0704	079	20		25-53-12	150-199, 275-299
D..	2	W0704	133	20		25-53-14	150-199, 275-299
A..	2	W0704	135	18		25-53-12	ALL
A..	2	W0704	136	20		25-53-14	150-199, 275-299
S..	2	W0704	138	20		25-53-12	ALL
S..	2	W0704	139	20		25-53-12	ALL
A..	2	W0704	506	20		25-53-14	050-099
D..	2	W0704	507	20		25-53-14	050-099
D..	2	W0704	510	20		25-53-14	050-099
A..	2	W0704	512	20		25-53-14	050-099
A..	2	W0704	513	18		25-53-12	050-099
S..	2	W0704	514	20		25-53-12	050-099
S..	2	W0704	515	20		25-53-12	050-099
<b>GD00330</b>		<b>YHLZG16</b>				<b>1223/122/R053</b>	<b>ALL</b>
S..	2	W0706	012	20		25-53-21	ALL
D..	2	W0706	033	20		25-53-21	ALL
D..	2	W0706	034	20		25-53-21	ALL
D..	2	W0710	033	20		25-53-24	050-099
A..	2	W0710	035	18		25-53-22	050-099
A..	2	W0710	036	20		25-53-24	050-099
S..	2	W0710	038	20		25-53-22	050-099
S..	2	W0710	039	20		25-53-22	050-099
A..	2	W0710	045	18		25-53-22	150-199, 275-299
S..	2	W0710	048	20		25-53-22	150-199, 275-299
S..	2	W0710	049	20		25-53-22	150-199, 275-299
D..	2	W0710	133	20		25-53-24	050-099
A..	2	W0710	135	18		25-53-22	050-099
A..	2	W0710	136	20		25-53-24	050-099
S..	2	W0710	138	20		25-53-22	050-099
S..	2	W0710	139	20		25-53-22	050-099

## GROUND LIST

D280T132

**91-21-21**

Section GD00300

Page 3

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00330</b>		<b>YHLZG16 (continued)</b>				<b>1223/122/R053</b>	<b>ALL</b>
A..	2	W0710	145	18		25-53-22	150-199, 275-299
S..	2	W0710	148	20		25-53-22	150-199, 275-299
S..	2	W0710	149	20		25-53-22	150-199, 275-299
A..	2	W0710	160	20		25-53-24	150-199, 275-299
D..	2	W0710	164	20		25-53-24	150-199, 275-299
A..	2	W0710	194	20		25-53-24	150-199, 275-299
D..	2	W0710	197	20		25-53-24	150-199, 275-299
D..	2	W1136	023	20		52-35-12	ALL
<b>GD00339</b>		<b>SH</b>				<b>0228/204/L032</b>	<b>ALL</b>
S..	E	W1281	001	20		27-61-15	ALL
<b>GD00341</b>		<b>SH</b>				<b>0228/206/L032</b>	<b>ALL</b>
S..	E	W1283	001	20		27-61-14	ALL
<b>GD00342</b>		<b>YHLZG16</b>				<b>1245/132/L065</b>	<b>ALL</b>
D..	2	W0710	043	20		25-53-24	050-099
A..	2	W0710	045	18		25-53-22	050-099
A..	2	W0710	046	20		25-53-24	050-099
S..	2	W0710	048	20		25-53-22	050-099
S..	2	W0710	049	20		25-53-22	050-099
A..	2	W0710	075	18		25-53-22	150-199, 275-299
S..	2	W0710	078	20		25-53-22	150-199, 275-299
S..	2	W0710	079	20		25-53-22	150-199, 275-299
D..	2	W0710	143	20		25-53-24	050-099
A..	2	W0710	145	18		25-53-22	050-099
A..	2	W0710	146	20		25-53-24	050-099
S..	2	W0710	148	20		25-53-22	050-099
S..	2	W0710	149	20		25-53-22	050-099
A..	2	W0710	155	18		25-53-22	150-199, 275-299
S..	2	W0710	158	20		25-53-22	150-199, 275-299
S..	2	W0710	159	20		25-53-22	150-199, 275-299
A..	2	W0710	174	20		25-53-24	150-199, 275-299
D..	2	W0710	177	20		25-53-24	150-199, 275-299
A..	2	W0710	503	20		25-53-24	150-199, 275-299
D..	2	W0710	504	20		25-53-24	150-199, 275-299
<b>GD00343</b>		<b>SH</b>				<b>0228/203/L032</b>	<b>ALL</b>
S..	E	W1285	001	20		27-61-16	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD00300

Page 4

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00345</b>		<b>SH</b>				<b>0225/206/R036</b>	<b>ALL</b>
S..	E	W1291	001	20		27-61-17	ALL
<b>GD00347</b>		<b>SH</b>				<b>0214/206/R035</b>	<b>ALL</b>
S..	E	W1293	001	20		27-61-13	ALL
<b>GD00349</b>		<b>SH</b>				<b>0215/206/R036</b>	<b>ALL</b>
S..	E	W1295	001	20		27-61-18	ALL
<b>GD00353</b>		<b>YHLZG8</b>				<b>0140/240/L020</b>	<b>ALL</b>
S..	2	W0731	204Z			34-22-14	ALL
S..	2	W0731	205Z			34-22-14	ALL
S..	2	W0731	206Z			34-22-14	ALL
S..	2	W0731	207Z			34-22-14	ALL
<b>GD00354</b>		<b>YHLZG16</b>				<b>1289/125/L053</b>	<b>ALL</b>
D..	2	W0710	053	20		25-53-24	ALL
A..	2	W0710	055	18		25-53-22	050-099
S..	2	W0710	058	20		25-53-22	050-099
S..	2	W0710	059	20		25-53-22	050-099
D..	2	W0710	063	20		25-53-24	050-099
A..	2	W0710	065	18		25-53-22	050-099
S..	2	W0710	068	20		25-53-22	050-099
S..	2	W0710	069	20		25-53-22	050-099
A..	2	W0710	108	18		25-53-22	150-199, 275-299
S..	2	W0710	109	20		25-53-22	150-199, 275-299
S..	2	W0710	110	20		25-53-22	150-199, 275-299
A..	2	W0710	137	18		25-53-22	150-199, 275-299
S..	2	W0710	140	20		25-53-22	150-199, 275-299
S..	2	W0710	144	20		25-53-22	150-199, 275-299
D..	2	W0710	153	20		25-53-24	ALL
A..	2	W0710	155	18		25-53-22	050-099
S..	2	W0710	158	20		25-53-22	050-099
S..	2	W0710	159	20		25-53-22	050-099
D..	2	W0710	163	20		25-53-24	150-199, 275-299
A..	2	W0710	175	18		25-53-22	150-199, 275-299
S..	2	W0710	178	20		25-53-22	150-199, 275-299
S..	2	W0710	179	20		25-53-22	150-199, 275-299
D..	2	W0710	663	20		25-53-24	150-199, 275-299
A..	2	W0710	665	18		25-53-22	150-199, 275-299

## GROUND LIST

D280T132

**91-21-21**

Section GD00300

Page 5

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00354</b>		<b>YHLZG16 (continued)</b>				<b>1289/125/L053</b>	<b>ALL</b>
S..	2	W0710	668	20		25-53-22	150-199, 275-299
S..	2	W0710	669	20		25-53-22	150-199, 275-299
<b>GD00355</b>		<b>YHLZG8</b>				<b>0140/240/L020</b>	<b>ALL</b>
S..	2	W0731	013	20		34-22-16	ALL
A..	2	W0731	014	20		34-22-16	ALL
S..	2	W0731	208Z			34-22-14	ALL
S..	2	W0731	209Z			34-22-14	ALL
S..	2	W0731	210Z			34-22-14	ALL
S..	2	W0731	211Z			34-22-14	ALL
S..	2	W0731	212Z			34-22-14	ALL
<b>GD00359</b>		<b>YHLZG8</b>				<b>0140/240/L020</b>	<b>ALL</b>
S..	2	W0731	034	20		34-22-16	ALL
A..	2	W0731	035	20		34-22-16	ALL
S..	2	W0731	215Z			34-22-15	ALL
S..	2	W0731	216Z			34-22-15	ALL
S..	2	W0731	217Z			34-22-15	ALL
S..	2	W0731	218Z			34-22-15	ALL
<b>GD00361</b>		<b>YHLZG8</b>				<b>0140/240/L020</b>	<b>ALL</b>
S..	2	W0731	219Z			34-22-15	ALL
S..	2	W0731	220Z			34-22-15	ALL
S..	2	W0731	221Z			34-22-15	ALL
S..	2	W0731	222Z			34-22-15	ALL
S..	2	W0731	223Z			34-22-15	ALL
<b>GD00365</b>		<b>YHLZG8</b>				<b>0140/240/R020</b>	<b>ALL</b>
S..	2	W0733	204Z			34-22-24	ALL
S..	2	W0733	205Z			34-22-24	ALL
S..	2	W0733	206Z			34-22-24	ALL
S..	2	W0733	207Z			34-22-24	ALL
<b>GD00367</b>		<b>YHLZG8</b>				<b>0140/240/R020</b>	<b>ALL</b>
A..	2	W0733	014	20		34-22-26	ALL
S..	2	W0733	015	20		34-22-26	ALL
S..	2	W0733	208Z			34-22-24	ALL
S..	2	W0733	209Z			34-22-24	ALL
S..	2	W0733	210Z			34-22-24	ALL
S..	2	W0733	211Z			34-22-24	ALL

## GROUND LIST

D280T132

**91-21-21**  
Section GD00300  
Page 6  
Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00367</b>		<b>YHLZG8 (continued)</b>				<b>0140/240/R020</b>	<b>ALL</b>
S..	2	W0733	212Z			34-22-24	ALL
<b>GD00369</b>		<b>S280W555-20</b>				<b>TBD/ /</b>	<b>ALL</b>
D..	1A	W2214	013	20		52-51-11	050-099, 150-163, 166-199, 275-299
S..	1A	W2214	A-B			52-51-11	050-099, 150-163, 166-199, 275-299
D..	1A	W2214	A-C			52-51-11	050-099, 150-163, 166-199, 275-299
S..	1A	W2214	A-N			52-51-11	050-099, 150-163, 166-199, 275-299
<b>GD00371</b>		<b>YHLZG8</b>				<b>0140/240/R020</b>	<b>ALL</b>
S..	2	W0733	215Z			34-22-25	ALL
S..	2	W0733	216Z			34-22-25	ALL
S..	2	W0733	217Z			34-22-25	ALL
S..	2	W0733	218Z			34-22-25	ALL
<b>GD00373</b>		<b>YHLZG8</b>				<b>0140/240/R020</b>	<b>ALL</b>
A..	2	W0733	032	20		34-22-26	ALL
S..	2	W0733	033	20		34-22-26	ALL
S..	2	W0733	219Z			34-22-25	ALL
S..	2	W0733	220Z			34-22-25	ALL
S..	2	W0733	221Z			34-22-25	ALL
S..	2	W0733	222Z			34-22-25	ALL
S..	2	W0733	223Z			34-22-25	ALL
<b>GD00382</b>		<b>YHLZG16</b>				<b>1289/127/L059</b>	<b>ALL</b>
A..	2	W0708	001	20		25-53-25	ALL
S..	2	W0708	004	20		25-53-25	ALL
A..	2	W0708	011	20		25-53-25	ALL
S..	2	W0708	014	20		25-53-25	ALL
A..	2	W0708	021	20		25-53-25	ALL
S..	2	W0708	024	20		25-53-25	ALL
A..	2	W0708	061	20		25-53-26	ALL
S..	2	W0708	064	20		25-53-26	ALL
A..	2	W0708	081	20		25-53-26	ALL
S..	2	W0708	084	20		25-53-26	ALL
A..	2	W0708	101	20		25-53-27	050-099, 150-199
S..	2	W0708	104	20		25-53-27	050-099, 150-199
<b>GD00384</b>		<b>YHLZG16</b>				<b>0547/127/L060</b>	<b>ALL</b>
A..	2	W0702	031	20		25-53-15	050-099
S..	2	W0702	034	20		25-53-15	050-099

## GROUND LIST

D280T132

**91-21-21**

Section GD00300

Page 7

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00384</b>		<b>YHLZG16 (continued)</b>				<b>0547/127/L060</b>	<b>ALL</b>
A..	2	W0702	041	20		25-53-15	050-099
S..	2	W0702	044	20		25-53-15	050-099
A..	2	W0702	051	20		25-53-15	050-099
S..	2	W0702	054	20		25-53-15	050-099
D..	2	W0704	003	20		25-53-14	150-199, 275-299
A..	2	W0704	005	18		25-53-12	150-199, 275-299
S..	2	W0704	008	20		25-53-12	150-199, 275-299
S..	2	W0704	009	20		25-53-12	150-199, 275-299
D..	2	W0704	103	20		25-53-14	150-199, 275-299
A..	2	W0704	105	18		25-53-12	150-199, 275-299
S..	2	W0704	108	20		25-53-12	150-199, 275-299
S..	2	W0704	109	20		25-53-12	150-199, 275-299
D..	2	W0704	565	20		25-53-14	150-199, 275-299
<b>GD00386</b>		<b>YHLZG16</b>				<b>1324/127/L053</b>	<b>ALL</b>
A..	2	W0708	111	20		25-53-27	050-099
A..	2	W0710	035	18		25-53-22	150-199, 275-299
S..	2	W0710	038	20		25-53-22	150-199, 275-299
S..	2	W0710	039	20		25-53-22	150-199, 275-299
D..	2	W0710	073	20		25-53-24	150-199, 275-299
A..	2	W0710	075	18		25-53-22	050-099
D..	2	W0710	163	20		25-53-24	050-099
A..	2	W0710	165	18		25-53-22	050-099
S..	2	W0710	168	20		25-53-22	050-099
S..	2	W0710	169	20		25-53-22	050-099
D..	2	W0710	173	20		25-53-24	ALL
A..	2	W0710	175	18		25-53-22	050-099
A..	2	W0710	195	18		25-53-22	150-199, 275-299
S..	2	W0710	198	20		25-53-22	150-199, 275-299
S..	2	W0710	199	20		25-53-22	150-199, 275-299
D..	2	W0710	663	20		25-53-24	050-099
A..	2	W0710	665	18		25-53-22	050-099
S..	2	W0710	668	20		25-53-22	050-099
S..	2	W0710	669	20		25-53-22	050-099
<b>GD00388</b>		<b>YHLZG16</b>				<b>1324/125/L053</b>	<b>ALL</b>
A..	2	W0708	031	20		25-53-25	ALL
S..	2	W0708	034	20		25-53-25	ALL
A..	2	W0708	041	20		25-53-25	ALL
S..	2	W0708	044	20		25-53-25	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD00300

Page 8

Mar 09/2006





# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00388</b>		<b>YHLZG16 (continued)</b>				<b>1324/125/L053</b>	<b>ALL</b>
A..	2	W0708	051	20		25-53-25	ALL
S..	2	W0708	054	20		25-53-25	ALL
A..	2	W0708	071	20		25-53-26	ALL
S..	2	W0708	074	20		25-53-26	ALL
A..	2	W0708	091	20		25-53-26	ALL
S..	2	W0708	094	20		25-53-26	ALL
A..	2	W0708	111	20		25-53-27	150-199
S..	2	W0708	114	20		25-53-27	050-099, 150-199
D..	2	W0710	063	20		25-53-24	150-199, 275-299
D..	2	W0710	073	20		25-53-24	050-099
S..	2	W0710	078	20		25-53-22	050-099
S..	2	W0710	079	20		25-53-22	050-099
A..	2	W0710	095	18		25-53-22	150-199, 275-299
S..	2	W0710	098	20		25-53-22	150-199, 275-299
S..	2	W0710	099	20		25-53-22	150-199, 275-299
S..	2	W0710	178	20		25-53-22	050-099
S..	2	W0710	179	20		25-53-22	050-099
<b>GD00398</b>		<b>YHLZG16</b>				<b>0570/127/L060</b>	<b>ALL</b>
A..	2	W0702	121	20		25-53-17	ALL
S..	2	W0702	124	20		25-53-17	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD00300

Page 9 End

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00401</b>		<b>YHLZG16</b>				<b>0157/208/L049</b>	<b>ALL</b>
S..	2	W0391	201	20		34-22-81	ALL
S..	2	W0391	204	20		31-25-11	ALL
S..	2	W0391	205	20		SPARE	ALL
S..	2	W0391	209	20		SPARE	050-099
S..	2	W0397	202	20		34-22-81	050-099, 150-156, 162-166, 280-299
S..	2	W0397	202	20		SPARE	275-276
S..	2	W0397	203	20		34-22-81	ALL
S..	2	W0397	205	20		34-13-11	ALL
S..	2	W0397	207	20		34-22-82	ALL
S..	2	W0397	211	20		34-22-91	ALL
S..	2	W0397	215	20		34-13-21	ALL
S..	2	W0399	201	20		34-22-81	ALL
S..	2	W0399	202	20		34-22-82	ALL
S..	2	W0419	211	20		SPARE	ALL
S..	2	W1311	001	20		22-14-11	ALL
S..	2	W1311	200	20		34-45-14	050-099, 150-199, 277-299
S..	2	W1311	205	20		22-32-11	ALL
S..	2	W1311	215	20		31-31-20	ALL
S..	2	W1311	216	20		34-22-81	157, 167-199, 275-299
<b>GD00406</b>		<b>YHLZG16</b>				<b>1355/125/L053</b>	<b>ALL</b>
D..	2	W0578	086	20		21-44-11	ALL
D..	2	W0578	088	20		21-44-21	ALL
D..	2	W0710	083	20		25-53-24	ALL
A..	2	W0710	085	18		25-53-22	050-099
A..	2	W0710	086	20		25-53-24	ALL
S..	2	W0710	088	20		25-53-22	050-099
S..	2	W0710	089	20		25-53-22	050-099
A..	2	W0710	105	18		25-53-22	150-199, 275-299
S..	2	W0710	106	20		25-53-22	150-199, 275-299
S..	2	W0710	107	20		25-53-22	150-199, 275-299
A..	2	W0710	114	18		25-53-22	150-199, 275-299
S..	2	W0710	120	20		25-53-22	150-199, 275-299
S..	2	W0710	124	20		25-53-22	150-199, 275-299
D..	2	W0710	183	20		25-53-24	ALL
A..	2	W0710	185	18		25-53-22	050-099
A..	2	W0710	186	20		25-53-24	ALL
S..	2	W0710	188	20		25-53-22	050-099
S..	2	W0710	189	20		25-53-22	050-099

## GROUND LIST

D280T132

**91-21-21**

Section GD00400

Page 1

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00408</b>		<b>YHLZG16</b>				<b>1377/125/L053</b>	<b>ALL</b>
S..	2	W0662	007	20		33-31-61	050-099, 150-199
A..	2	W0662	072	20		33-31-61	050-099, 150-199
A..	2	W0710	085	18		25-53-22	150-199, 275-299
S..	2	W0710	088	20		25-53-22	150-199, 275-299
S..	2	W0710	089	20		25-53-22	150-199, 275-299
D..	2	W0710	093	20		25-53-24	ALL
A..	2	W0710	095	18		25-53-22	050-099
A..	2	W0710	096	20		25-53-24	ALL
S..	2	W0710	098	20		25-53-22	050-099
S..	2	W0710	099	20		25-53-22	050-099
A..	2	W0710	185	18		25-53-22	150-199, 275-299
S..	2	W0710	188	20		25-53-22	150-199, 275-299
S..	2	W0710	189	20		25-53-22	150-199, 275-299
D..	2	W0710	193	20		25-53-24	ALL
A..	2	W0710	195	18		25-53-22	050-099
A..	2	W0710	196	20		25-53-24	ALL
S..	2	W0710	198	20		25-53-22	050-099
S..	2	W0710	199	20		25-53-22	050-099
<b>GD00415</b>		<b>SH</b>				<b>1043/193/L057</b>	<b>ALL</b>
S..	N	W1207	WBKZ			27-61-17	ALL
<b>GD00417</b>		<b>SH</b>				<b>1043/193/L057</b>	<b>ALL</b>
S..	N	W0484	021	20		31-31-22	ALL
S..	N	W1203	WBKZ			27-61-15	ALL
<b>GD00419</b>		<b>SH</b>				<b>0977/178/L092</b>	<b>ALL</b>
S..	N	W1201	WBKZ			27-61-14	ALL
<b>GD00421</b>		<b>SH</b>				<b>1043/193/R057</b>	<b>ALL</b>
S..	N	W1213	WBKZ			27-61-17	ALL
<b>GD00423</b>		<b>SH</b>				<b>1043/193/R057</b>	<b>ALL</b>
S..	N	W1217	WBKZ			27-61-15	ALL
<b>GD00425</b>		<b>SH</b>				<b>0977/178/R092</b>	<b>ALL</b>
S..	N	W1219	WBKZ			27-61-14	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD00400

Page 2

Mar 09/2006



## 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00427</b>		<b>SH</b>				<b>0977/178/L092</b>	<b>ALL</b>
S..	N	W0899	WBKZ			27-61-13	ALL
<b>GD00429</b>		<b>SH</b>				<b>0999/193/L057</b>	<b>ALL</b>
S..	N	W1205	WBKZ			27-61-16	ALL
<b>GD00431</b>		<b>SH</b>				<b>0977/178/L092</b>	<b>ALL</b>
S..	N	W1209	WBKZ			27-61-18	ALL
S..	N	W1264	002	18		28-22-21	ALL
<b>GD00432</b>		<b>YHLZG16</b>				<b>1031/197/L045</b>	<b>ALL</b>
D..	2	W0596	127	20		29-11-32	ALL
D..	2	W0596	128	20		29-11-32	ALL
D..	2	W0596	132	20		29-32-11	ALL
S..	2	W0596	146	20		29-32-11	ALL
D..	2	W0596	199	20		28-22-31	ALL
D..	2	W0756	121	20		27-13-11	ALL
D..	2	W0756	122	20		27-13-11	ALL
A..	2	W1258	J-B			30-71-22	ALL
D..	2	W1274	101	20		28-22-31	ALL
DED		W1274	101Z			28-22-31	ALL
<b>GD00433</b>		<b>SH</b>				<b>0977/178/R092</b>	<b>ALL</b>
S..	N	W1221	WBKZ			27-61-13	ALL
<b>GD00434</b>		<b>YHLZG16</b>				<b>0246/310/L016</b>	<b>ALL</b>
A..	2	W0624	015	20		30-41-12	ALL
CAP	Y	W0632	002	20		SPARE	152, 154, 156, 162, 166-199
A..	2	W0632	038	20		33-14-31	ALL
D..	2	W0634	060	20		33-51-11	ALL
S..	2	W0645	212	20		23-22-12	275-278
S..	2	W0645	213	20		23-22-12	275-278
A..	2	W1230	067	20		33-22-21	150-157
D..	2	W1407	019	20		23-32-11	275-299
A..	2	W1417	005	20		23-32-11	275-299
S..	2	W1417	007	20		23-32-11	275-299
S..	2	W1417	617	20		23-32-21	280-299
D..	2	W2214	A-M			52-51-11	050-099, 150-163, 166-199, 275-299

### GROUND LIST

D280T132

**91-21-21**

Section GD00400

Page 3

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00435</b>		<b>SH</b>				<b>0999/193/R057</b>	<b>ALL</b>
S..	N	W1215	WBKZ			27-61-16	ALL
<b>GD00437</b>		<b>SH</b>				<b>0977/178/R092</b>	<b>ALL</b>
S..	N	W1211	WBKZ			27-61-18	ALL
S..	N	W1262	002	18		28-22-21	ALL
<b>GD00439</b>		<b>SH</b>				<b>L0430/12/TE</b>	<b>ALL</b>
S..	N	W1207	005	18		27-61-17	ALL
S..	N	W1207	WBKZ			27-61-17	ALL
<b>GD00441</b>		<b>SH</b>				<b>L0648/12/TE</b>	<b>ALL</b>
S..	N	W1203	005	18		27-61-15	ALL
S..	N	W1203	WBKZ			27-61-15	ALL
<b>GD00443</b>		<b>SH</b>				<b>L0709/12/TE</b>	<b>ALL</b>
S..	N	W1201	005	18		27-61-14	ALL
S..	N	W1201	WBKZ			27-61-14	ALL
<b>GD00445</b>		<b>SH</b>				<b>R0404/12/TE</b>	<b>ALL</b>
S..	N	W1213	005	18		27-61-17	ALL
S..	N	W1213	WBKZ			27-61-17	ALL
<b>GD00447</b>		<b>SH</b>				<b>R0630/12/TE</b>	<b>ALL</b>
S..	N	W1217	005	18		27-61-15	ALL
S..	N	W1217	WBKZ			27-61-15	ALL
<b>GD00449</b>		<b>SH</b>				<b>R0688/12/TE</b>	<b>ALL</b>
S..	N	W1219	005	18		27-61-14	ALL
S..	N	W1219	WBKZ			27-61-14	ALL
<b>GD00451</b>		<b>SH</b>				<b>L0782/12/TE</b>	<b>ALL</b>
S..	N	W0899	005	18		27-61-13	ALL
S..	N	W0899	WBKZ			27-61-13	ALL
<b>GD00453</b>		<b>SH</b>				<b>L0584/12/TE</b>	<b>ALL</b>
S..	N	W1205	005	18		27-61-16	ALL
S..	N	W1205	WBKZ			27-61-16	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD00400

Page 4

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00455</b>		<b>SH</b>				<b>L0350/12/ET</b>	<b>ALL</b>
S..	N	W1209	005	18		27-61-18	ALL
S..	N	W1209	WBKZ			27-61-18	ALL
<b>GD00456</b>		<b>SH</b>				<b>1307/195/R075</b>	<b>ALL</b>
S..	E	W0662	005	20		52-35-11	ALL
S..	E	W0662	010	20		52-35-11	ALL
<b>GD00457</b>		<b>SH</b>				<b>R0748/12/TE</b>	<b>ALL</b>
S..	N	W1221	005	18		27-61-13	ALL
S..	N	W1221	WBKZ			27-61-13	ALL
<b>GD00458</b>		<b>DC</b>				<b>0331/184/R044</b>	<b>ALL</b>
D..	E	W0506	038	20		21-33-11	ALL
<b>GD00459</b>		<b>SH</b>				<b>R0566/12/TE</b>	<b>ALL</b>
S..	N	W1215	005	18		27-61-16	ALL
S..	N	W1215	WBKZ			27-61-16	ALL
<b>GD00460</b>		<b>SH</b>				<b>0324/190/R045</b>	<b>ALL</b>
S..	E	W0506	039	20		21-33-11	ALL
<b>GD00461</b>		<b>SH</b>				<b>R0350/12/ET</b>	<b>ALL</b>
S..	N	W1211	005	18		27-61-18	ALL
S..	N	W1211	WBKZ			27-61-18	ALL
<b>GD00462</b>		<b>SH</b>				<b>0882/112/R062</b>	<b>ALL</b>
S..	N	W0952	015	18		21-52-41	ALL
S..	N	W0982	007	18		21-51-21	ALL
S..	N	W0982	012	18		21-51-21	ALL
S..	N	W0982	015	18		21-51-21	ALL
<b>GD00464</b>		<b>DC</b>				<b>0892/112/R062</b>	<b>ALL</b>
D..	N	W0952	031	18		21-52-31	ALL
D..	N	W0982	008	18		21-51-21	ALL
D..	N	W0982	010	18		21-51-21	ALL
D..	N	W0982	013	18		21-51-21	050-099
<b>GD00470</b>		<b>AC</b>				<b>0892/112/R062</b>	<b>ALL</b>
A..	N	W0980	A-B			33-31-21	ALL

## GROUND LIST

D280T132

**91-21-21**  
Section GD00400  
Page 5  
Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00472</b>		<b>DC</b>				<b>0784/123/R040</b>	<b>ALL</b>
D..	N	W0952	011	18		21-51-21	ALL
D..	N	W0952	012	18		21-52-31	ALL
D..	N	W0952	027	18		21-51-21	ALL
<b>GD00476</b>		<b>AC</b>				<b>0632/145/R075</b>	<b>ALL</b>
A..	E	W0660	065	20		33-31-61	ALL
<b>GD00478</b>		<b>AC</b>				<b>1395/150/R080</b>	<b>ALL</b>
A..	E	W0662	065	20		33-31-61	ALL
<b>GD00482</b>		<b>AC</b>				<b>1500/147/L062</b>	<b>050-099, 150-199</b>
A..	E	W0662	074	20		33-31-61	050-099, 150-199

## GROUND LIST

D280T132

**91-21-21**

Section GD00400

Page 6 End

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00505</b>		<b>YHLZG16</b>				<b>0324/194/R031</b>	<b>ALL</b>
A..	2	W0645	032	20		23-34-11	ALL
D..	2	W0645	033	20		23-34-11	ALL
D..	2	W0645	041	20		23-34-11	ALL
A..	2	W0645	043	20		23-34-11	ALL
D..	2	W0645	052	20		23-34-11	ALL
A..	2	W0645	053	20		23-34-11	ALL
D..	2	W0645	056	20		23-34-11	ALL
A..	2	W0645	057	20		23-34-11	ALL
A..	2	W0902	A-L			33-31-41	ALL
<b>GD00506</b>		<b>AC</b>				<b>0354/186/R041</b>	<b>ALL</b>
A..	E	W0624	068	20		30-41-12	ALL
<b>GD00508</b>		<b>DC</b>				<b>0354/180/R041</b>	<b>ALL</b>
D..	E	W0624	066	20		30-41-12	ALL
D..	E	W0624	067	20		30-41-12	ALL
<b>GD00512</b>		<b>SH</b>				<b>0354/144/R041</b>	<b>ALL</b>
S..	E	W0624	063	12		30-41-12	ALL
<b>GD00514</b>		<b>AC</b>				<b>0354/138/R041</b>	<b>ALL</b>
A..	E	W0624	064	12		30-41-12	ALL
<b>GD00520</b>		<b>SH</b>				<b>0354/186/L036</b>	<b>ALL</b>
S..	E	W0622	060	12		30-41-11	ALL
<b>GD00521</b>		<b>YHLZG8</b>				<b>0205/163/L058</b>	<b>ALL</b>
A..	2	W0431	009	20		30-32-11	ALL
S..	2	W0431	012	20		34-12-11	ALL
<b>GD00522</b>		<b>AC</b>				<b>0354/180/L036</b>	<b>ALL</b>
A..	E	W0622	061	12		30-41-11	ALL
<b>GD00524</b>		<b>AC</b>				<b>0426/193/R033</b>	<b>ALL</b>
A..	E	W0660	034	18		33-37-11	050-099
A..	E	W0660	034	16		33-37-11	150-199, 275-299
<b>GD00526</b>		<b>AC</b>				<b>0426/193/L033</b>	<b>ALL</b>
A..	E	W0660	036	18		33-37-11	050-099

## GROUND LIST

D280T132

**91-21-21**  
Section GD00500  
Page 1  
Mar 09/2006





# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00526</b>		<b>AC (continued)</b>				<b>0426/193/L033</b>	<b>ALL</b>
A..	E	W0660	036	16		33-37-11	150-199, 275-299
<b>GD00527</b>		<b>AC</b>				<b>0355/136/R013</b>	<b>ALL</b>
A..	E	W0219	032	20		23-11-11	ALL
A..	E	W0219	033	20		23-22-11	ALL
<b>GD00528</b>		<b>AC</b>				<b>0489/193/R033</b>	<b>ALL</b>
A..	E	W0660	038	18		33-37-11	050-099
A..	E	W0660	038	16		33-37-11	150-199, 275-299
<b>GD00529</b>		<b>AC</b>				<b>0354/133/R041</b>	<b>ALL</b>
A..	E	W0211	007	20		23-11-21	ALL
A..	E	W0853	021	20		23-34-11	ALL
<b>GD00530</b>		<b>AC</b>				<b>0489/193/L033</b>	<b>ALL</b>
A..	E	W0660	040	18		33-37-11	050-099
A..	E	W0660	040	16		33-37-11	150-199, 275-299
<b>GD00532</b>		<b>AC</b>				<b>0577/193/R033</b>	<b>ALL</b>
A..	E	W0660	042	18		33-37-11	050-099
A..	E	W0660	042	16		33-37-11	150-199, 275-299
<b>GD00534</b>		<b>AC</b>				<b>0577/193/L033</b>	<b>ALL</b>
A..	E	W0660	044	18		33-37-11	050-099
A..	E	W0660	044	16		33-37-11	150-199, 275-299
<b>GD00536</b>		<b>AC</b>				<b>0643/193/R033</b>	<b>ALL</b>
A..	E	W0660	046	18		33-37-11	050-099
A..	E	W0660	046	16		33-37-11	150-199, 275-299
<b>GD00537</b>		<b>AC</b>				<b>1725/186/L025</b>	<b>ALL</b>
A..	N	W0575	015	18		27-48-11	050-099, 150-156, 162-166, 275-276
A..	N	W0575	016	18		27-48-11	ALL
<b>GD00538</b>		<b>AC</b>				<b>0643/193/L033</b>	<b>ALL</b>
A..	E	W0660	048	18		33-37-11	050-099
A..	E	W0660	048	16		33-37-11	150-199, 275-299

## GROUND LIST

D280T132

**91-21-21**

Section GD00500

Page 2

Mar 09/2006



## 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00539</b>		<b>AC</b>				<b>1728/180/R015</b>	<b>ALL</b>
A..	N	W0581	015	18		27-48-11	050-099, 150-156, 162-166, 275-276
A..	N	W0581	016	18		27-48-11	ALL
<b>GD00540</b>		<b>AC</b>				<b>0709/193/R033</b>	<b>ALL</b>
A..	E	W0660	050	18		33-37-11	050-099
A..	E	W0660	050	16		33-37-11	150-199, 275-299
<b>GD00542</b>		<b>AC</b>				<b>0709/193/L033</b>	<b>ALL</b>
A..	E	W0660	052	18		33-37-11	050-099
A..	E	W0660	052	16		33-37-11	150-199, 275-299
<b>GD00544</b>		<b>AC</b>				<b>1164/194/R033</b>	<b>ALL</b>
A..	E	W0662	034	18		33-37-21	050-099
A..	E	W0662	034	16		33-37-21	150-199, 275-299
<b>GD00546</b>		<b>AC</b>				<b>1164/194/L033</b>	<b>ALL</b>
A..	E	W0662	036	18		33-37-21	050-099
A..	E	W0662	036	16		33-37-21	150-199, 275-299
<b>GD00548</b>		<b>AC</b>				<b>1230/194/R033</b>	<b>ALL</b>
A..	E	W0662	038	18		33-37-21	050-099
A..	E	W0662	038	16		33-37-21	150-199, 275-299
<b>GD00550</b>		<b>AC</b>				<b>1230/194/L033</b>	<b>ALL</b>
A..	E	W0662	040	18		33-37-21	050-099
A..	E	W0662	040	16		33-37-21	150-199, 275-299
<b>GD00552</b>		<b>AC</b>				<b>1296/194/R033</b>	<b>ALL</b>
A..	E	W0662	042	18		33-37-21	050-099
A..	E	W0662	042	16		33-37-21	150-199, 275-299
<b>GD00553</b>		<b>YHLZG16</b>				<b>0157/208/R040</b>	<b>ALL</b>
S..	2	W0417	201	20		34-22-92	ALL
S..	2	W0527	209	20		34-13-11	ALL
S..	2	W0527	211	20		34-22-81	ALL
S..	2	W0527	213	20		34-22-91	050-099, 150-156, 162-166
S..	2	W0527	213	20		SPARE	157, 167-199, 275-276
S..	2	W0527	214	20		34-22-91	ALL
S..	2	W0527	217	20		34-45-14	050-099, 153-199, 277-299

### GROUND LIST

D280T132

**91-21-21**

Section GD00500

Page 3

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00553</b>		<b>YHLZG16 (continued)</b>				<b>0157/208/R040</b>	<b>ALL</b>
S..	2	W0527	218	20		34-22-91	157, 167-199, 275-299
S..	2	W0855	202	20		34-13-21	ALL
S..	2	W0855	203	20		SPARE	150-154, 275-299
S..	2	W0855	204	20		34-61-24	ALL
S..	2	W0855	205	20		SPARE	ALL
S..	2	W0855	206	20		SPARE	ALL
S..	2	W0855	209	20		SPARE	150-154, 275-299
S..	2	W0855	210	20		SPARE	ALL
S..	2	W0855	212	20		34-22-91	ALL
S..	2	W0855	213	20		22-14-21	ALL
<b>GD00554</b>		<b>AC</b>				<b>1296/194/L033</b>	<b>ALL</b>
A..	E	W0662	044	18		33-37-21	050-099
A..	E	W0662	044	16		33-37-21	150-199, 275-299
<b>GD00555</b>		<b>SH</b>				<b>0354/163/R041</b>	<b>ALL</b>
S..	E	W0489	301	20		23-51-12	ALL
<b>GD00556</b>		<b>AC</b>				<b>1362/194/R033</b>	<b>ALL</b>
A..	E	W0662	046	18		33-37-21	050-099
A..	E	W0662	046	16		33-37-21	150-199, 275-299
<b>GD00557</b>		<b>SH</b>				<b>0354/163/R016</b>	<b>ALL</b>
S..	E	W0487	301	20		23-51-12	ALL
<b>GD00558</b>		<b>AC</b>				<b>1362/194/L033</b>	<b>ALL</b>
A..	E	W0662	048	18		33-37-21	050-099
A..	E	W0662	048	16		33-37-21	150-199, 275-299
<b>GD00560</b>		<b>AC</b>				<b>1430/194/R033</b>	<b>ALL</b>
A..	E	W0662	050	18		33-37-21	050-099
A..	E	W0662	050	16		33-37-21	150-199, 275-299
<b>GD00561</b>		<b>YHLZG16</b>				<b>0138/196/R010</b>	<b>ALL</b>
S..	2	W0584	015	20		21-45-11	ALL
S..	2	W0586	015	20		21-45-11	ALL
D..	2	W0756	061	20		78-36-11	050-099, 275-299
D..	2	W0756	070	20		78-36-11	050-099, 275-299
D..	2	W0756	595	18		78-34-11	050-099, 275-299

## GROUND LIST

D280T132

**91-21-21**

Section GD00500

Page 4

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00561</b>		<b>YHLZG16 (continued)</b>				<b>0138/196/R010</b>	<b>ALL</b>
S..	2	W0768	142	20		73-21-13	050-099, 150-156, 162-166, 275-276
S..	2	W0768	143	20		73-21-13	050-099, 150-156, 162-166
D..	2	W0768	535	18		78-34-21	050-099, 275-299
S..	2	W0768	FR2			73-21-13	157, 167-199, 277-299
S..	2	W0768	FR3			73-21-13	157, 167-199, 277-299
D..	2	W0782	030	20		78-36-21	050-099, 275-299
D..	2	W0782	043	20		78-36-21	050-099, 275-299
S..	2	W0782	541	20		73-21-13	050-099, 150-156, 162-166, 275-276
S..	2	W0782	542	20		73-21-13	050-099, 150-156, 162-166, 275-276
S..	2	W0782	FR2			73-21-13	157, 167-199, 277-299
S..	2	W0782	FR3			73-21-13	157, 167-199, 277-299
D..	2	W0803	006	20		34-43-22	ALL
<b>GD00562</b>		<b>AC</b>				<b>1406/175/L090</b>	<b>ALL</b>
A..	E	W0662	054	18		33-37-21	050-099
A..	E	W0662	054	16		33-37-21	150-199, 275-299
<b>GD00565</b>		<b>YHLZG16</b>				<b>0158/161/R034</b>	<b>ALL</b>
S..	2	W0586	012	20		21-45-11	ALL
A..	2	W0803	002	20		34-43-22	ALL
D..	2	W0803	003	20		34-43-22	ALL
S..	2	W0803	201	20		34-43-22	ALL
S..	2	W0803	205	20		34-43-22	ALL
S..	2	W0803	206	20		34-43-21	ALL
S..	2	W0803	211	20		34-43-21	ALL
S..	2	W0803	212	20		34-43-21	ALL
S..	2	W0803	213	20		34-43-21	ALL
S..	2	W0803	214	20		34-43-22	ALL
<b>GD00566</b>		<b>AC</b>				<b>1491/194/R040</b>	<b>ALL</b>
A..	E	W0662	058	18		33-37-21	050-099
A..	E	W0662	058	16		33-37-21	150-199, 275-299
<b>GD00568</b>		<b>AC</b>				<b>1491/194/L033</b>	<b>ALL</b>
A..	E	W0662	060	18		33-37-21	050-099
A..	E	W0662	060	16		33-37-21	150-199, 275-299
<b>GD00575</b>		<b>SH</b>				<b>1725/188/L025</b>	<b>ALL</b>
S..	N	W0575	020	18		27-58-21	ALL

## GROUND LIST

D280T132

**91-21-21**  
Section GD00500  
Page 5  
Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00577</b>		<b>SH</b>				<b>1725/179/L015</b>	<b>ALL</b>
S..	N	W0539	004	18		27-58-21	ALL
<b>GD00579</b>		<b>SH</b>				<b>1728/180/R015</b>	<b>ALL</b>
S..	N	W0581	020	18		27-58-21	ALL
<b>GD00581</b>		<b>SH</b>				<b>F 270/ /FS</b>	<b>ALL</b>
S..	N	W0777	012	18		23-11-11	ALL
<b>GD00583</b>		<b>SH</b>				<b>F 270/ /FS</b>	<b>ALL</b>
S..	N	W0775	012	18		23-11-21	ALL
<b>GD00584</b>		<b>AC</b>				<b>0157/204/R013</b>	<b>ALL</b>
A..	E	W0902	A-C			33-31-41	ALL
<b>GD00585</b>		<b>SH</b>				<b>1109/314/R002</b>	<b>ALL</b>
S..	E	W0345	002	20		34-57-11	ALL
S..	E	W0345	003	20		34-57-11	ALL
S..	E	W0345	004	20		34-57-11	ALL
<b>GD00586</b>		<b>AC</b>				<b>0157/204/L013</b>	<b>ALL</b>
A..	E	W0902	A-D			33-31-41	ALL
<b>GD00588</b>		<b>AC</b>				<b>0225/200/R043</b>	<b>ALL</b>
A..	E	W0902	A-E			33-31-41	ALL
<b>GD00589</b>		<b>YHLZG8</b>				<b>0163/206/L021</b>	<b>ALL</b>
A..	2	W0481	015	20		22-31-11	ALL
S..	2	W0481	016	20		22-31-11	ALL
A..	2	W0481	040	20		22-31-11	ALL
<b>GD00590</b>		<b>AC</b>				<b>0269/193/R043</b>	<b>ALL</b>
A..	E	W0902	A-H			33-31-41	ALL
<b>GD00591</b>		<b>YHLZG16</b>				<b>0165/200/R020</b>	<b>ALL</b>
D..	2	W0756	650	20		78-34-11	ALL
D..	2	W0768	10H	20		78-34-21	ALL
<b>GD00592</b>		<b>AC</b>				<b>0335/188/R046</b>	<b>ALL</b>
A..	E	W0645	069	20		23-34-11	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD00500

Page 6

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00592</b>		<b>AC (continued)</b>				<b>0335/188/R046</b>	<b>ALL</b>
A..	E	W0902	A-T			33-31-41	ALL
<b>GD00594</b>		<b>SH</b>				<b>NR126/050/013</b>	<b>ALL</b>
<b>GD00595</b>		<b>YHLZG16</b>				<b>0205/163/R058</b>	<b>ALL</b>
A..	2	W0441	009	20		30-32-21	ALL
S..	2	W0441	012	20		34-12-21	ALL
D..	2	W0586	016	20		21-58-16	ALL
D..	2	W0586	021	20		21-58-16	ALL
A..	2	W0586	022	20		21-58-16	ALL
S..	2	W0586	023	20		21-58-16	ALL
D..	2	W0590	028	20		29-21-31	ALL
S..	2	W0590	061	20		21-33-21	ALL
D..	2	W0738	044	20		21-58-11	ALL
S..	2	W0738	045	20		21-58-11	ALL
D..	2	W0902	01N	20		30-81-11	050-099, 150-199
A..	2	W0902	01T	20		30-81-11	050-099, 150-199
S..	2	W0902	01U	20		30-81-11	050-099, 150-199
<b>GD00596</b>		<b>AC</b>				<b>0322/192/L026</b>	<b>ALL</b>
A..	E	W0902	A-N			33-31-41	ALL
<b>GD00598</b>		<b>AC</b>				<b>0330/192/L052</b>	<b>ALL</b>
A..	E	W0902	A-V			33-31-41	ALL

**GROUND LIST**  
D280T132

**91-21-21**  
Section GD00500  
Page 7 End  
Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00600</b>		<b>AC</b>				<b>0216/200/L047</b>	<b>ALL</b>
A..	E	W0902	A-R			33-31-41	ALL
<b>GD00601</b>		<b>YHLZG16</b>				<b>0165/219/L007</b>	<b>ALL</b>
D..	2	W0731	041	20		34-22-16	ALL
D..	2	W0731	043	20		34-22-16	ALL
D..	2	W0731	048	20		34-22-18	ALL
D..	2	W5150	351	20		27-62-11	ALL
D..	2	W5150	354	20		27-62-11	ALL
D..	2	W5150	L-D			31-51-41	ALL
<b>GD00603</b>		<b>YHLZG16</b>				<b>0165/219/L006</b>	<b>ALL</b>
A..	2	W0481	044	20		27-48-11	ALL
A..	2	W0481	046	20		33-13-18	ALL
D..	2	W0525	005	20		27-41-31	050-099, 155-199, 275-299
A..	2	W0731	040	20		34-22-16	ALL
A..	2	W0731	073	16		33-13-18	ALL
<b>GD00605</b>		<b>SH</b>				<b>0173/219/L005</b>	<b>ALL</b>
S..	E	W0481	043	20		27-48-11	ALL
S..	E	W5150	350	20		27-62-11	ALL
<b>GD00607</b>		<b>SH</b>				<b>0172/219/L005</b>	<b>ALL</b>
S..	E	W0731	042	20		34-22-16	ALL
<b>GD00609</b>		<b>YHLZG16</b>				<b>0178/215/R007</b>	<b>ALL</b>
A..	2	W0485	016	20		27-48-11	ALL
A..	2	W0485	018	20		33-13-18	ALL
A..	2	W0733	040	20		34-22-26	ALL
A..	2	W0733	073	16		33-13-18	ALL
A..	2	W5150	025	20		33-13-18	050-099, 155, 162-165, 275-276
A..	2	W5150	F-B			33-13-18	ALL
A..	2	W5150	G-B			33-13-18	050-099, 150-155, 162-165, 275-276
A..	2	W5150	H-B			33-13-18	050-099, 150-155, 162-165, 275-276
A..	2	W5150	K-B			33-13-18	ALL
<b>GD00611</b>		<b>SH</b>				<b>1153/320/0000</b>	<b>ALL</b>
S..	E	W0349	002	20		34-57-21	ALL
S..	E	W0349	003	20		34-57-21	ALL
S..	E	W0349	004	20		34-57-21	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD00600

Page 1

Mar 09/2006



## 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00613</b>		<b>DC</b>				<b>1725/177/L015</b>	<b>ALL</b>
D..	N	W0539	002	18		31-51-41	ALL
<b>GD00615</b>		<b>SH</b>				<b>0172/219/L005</b>	<b>ALL</b>
S..	E	W0731	213	20		34-22-14	ALL
<b>GD00617</b>		<b>SH</b>				<b>0172/219/R005</b>	<b>ALL</b>
S..	E	W0485	015	20		27-48-11	ALL
<b>GD00619</b>		<b>SH</b>				<b>0172/219/R005</b>	<b>ALL</b>
S..	E	W0733	042	20		34-22-26	ALL
S..	E	W5150	C-F			27-51-31	ALL
<b>GD00621</b>		<b>SH</b>				<b>0173/219/R005</b>	<b>ALL</b>
S..	E	W0733	213	20		34-22-24	ALL
S..	2	W5150	D-F			27-58-31	ALL
<b>GD00623</b>		<b>AC</b>				<b>0141/197/L024</b>	<b>ALL</b>
A..	E	W1287	009	20		31-51-41	ALL
<b>GD00629</b>		<b>SH</b>				<b>0193/273/R007</b>	<b>ALL</b>
S..	E	W0675	201	20		23-11-21	ALL
<b>GD00631</b>		<b>SH</b>				<b>0193/273/L007</b>	<b>ALL</b>
S..	E	W0683	201	20		23-11-11	ALL
<b>GD00633</b>		<b>SH</b>				<b>0193/273/L015</b>	<b>ALL</b>
S..	E	W0725	008	20		34-21-21	ALL
S..	E	W0725	201	20		34-21-21	ALL
S..	E	W0725	202	20		34-21-21	ALL
<b>GD00639</b>		<b>YHLZG16</b>				<b>0178/217/R007</b>	<b>ALL</b>
D..	2	W0733	041	20		34-22-26	ALL
D..	2	W0733	043	20		34-22-26	ALL
D..	2	W0733	048	20		34-22-28	ALL
D..	2	W5150	E-B			27-41-11	150-154
D..	2	W5150	V-B			31-31-15	150-154
<b>GD00641</b>		<b>YHLZG16</b>				<b>0176/180/L010</b>	<b>ALL</b>
S..	2	W0465	008	20		31-31-25	050-099, 150-199

### GROUND LIST

D280T132

**91-21-21**

Section GD00600

Page 2

Mar 09/2006





# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00641</b>		<b>YHLZG16 (continued)</b>				<b>0176/180/L010</b>	<b>ALL</b>
S..	2	W0465	009	20		31-31-25	050-099, 150-199
S..	2	W0465	011	20		31-31-25	050-099, 150-199
S..	2	W0465	012	20		31-31-25	050-099, 150-199
S..	2	W1281	002	20		27-61-15	ALL
S..	2	W1283	002	20		27-61-14	ALL
S..	2	W1285	002	20		27-61-16	ALL
S..	2	W1291	002	20		27-61-17	ALL
S..	2	W1293	002	20		27-61-13	ALL
S..	2	W1295	002	20		27-61-18	ALL
<b>GD00643</b>		<b>AC</b>				<b>0175/202/L011</b>	<b>ALL</b>
A..	E	W0695	004	20		31-31-15	050-099, 150-156, 162-166, 275-276
A..	E	W0695	005	20		31-31-15	ALL
<b>GD00645</b>		<b>AC</b>				<b>0213/190/L043</b>	<b>ALL</b>
A..	E	W0695	006	20		31-31-15	ALL
A..	E	W0695	007	20		31-31-15	ALL
<b>GD00647</b>		<b>AC</b>				<b>0188/202/L036</b>	<b>ALL</b>
A..	E	W0695	008	20		31-31-15	050-099, 150-156, 162-166, 275-276
A..	E	W0695	009	20		31-31-15	ALL
<b>GD00649</b>		<b>YHLZG16</b>				<b>0133/177/R004</b>	<b>ALL</b>
S..	2	W0756	666	20		78-34-11	ALL
S..	2	W0756	680	20		78-34-11	ALL
S..	2	W0768	10E	20		78-34-21	050-099, 150-199, 275-276, 280-299
S..	E	W0768	10E	20		78-34-21	277-278
S..	2	W0768	612	20		78-34-21	ALL
A..	2	W0779	002	20		34-43-12	ALL
D..	2	W0779	003	20		34-43-12	ALL
D..	2	W0779	006	20		34-43-12	ALL
D..	2	W0779	019	20		34-43-12	ALL
D..	2	W0779	024	20		34-43-22	ALL
S..	2	W0779	201	20		34-43-12	ALL
S..	2	W0779	205	20		34-43-12	ALL
S..	2	W0779	206	20		34-43-11	ALL
S..	2	W0779	211	20		34-43-11	ALL
S..	2	W0779	212	20		34-43-11	ALL
S..	2	W0779	213	20		34-43-11	ALL
S..	2	W0779	214	20		34-43-12	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD00600

Page 3

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00651</b>		<b>DC</b>				<b>0331/152/L050</b>	<b>275-299</b>
D..	E	W1615	032	20		34-12-22	275-299
<b>GD00657</b>		<b>SH</b>				<b>0248/192/L061</b>	<b>050-099, 150-199</b>
S..	E	W0465	014	20		31-31-25	050-099, 150-199
S..	E	W0465	015	20		31-31-25	050-099, 150-199
<b>GD00668</b>		<b>YHLZG16</b>				<b>0999/197/L045</b>	<b>ALL</b>
D..	2	W0602	013	20		32-42-11	ALL
D..	2	W0602	015	20		32-42-11	ALL
D..	2	W0602	017	20		32-42-11	ALL
D..	2	W0602	124	20		36-11-31	ALL
D..	2	W0602	125	20		36-11-31	ALL
A..	2	W0602	126	20		36-11-31	ALL
D..	2	W0602	130	16		25-65-11	ALL
A..	2	W0628	027	16		33-31-11	ALL
D..	2	W1332	002	20		24-25-11	ALL
S..	2	W1332	004	20		24-25-12	ALL
D..	2	W1332	007	20		24-25-13	ALL
S..	2	W1332	008	20		24-25-12	ALL
<b>GD00670</b>		<b>YHLZG16</b>				<b>0290/173/L072</b>	<b>ALL</b>
D..	2	W0572	030	20		29-11-22	ALL
S..	2	W0689	035	20		78-34-11	ALL
S..	2	W0738	124	20		78-34-21	ALL
S..	2	W0744	514	20		78-34-11	ALL
S..	2	W0746	505	20		78-34-11	ALL
S..	2	W0752	500	20		78-34-11	ALL
S..	2	W0756	646	20		78-34-11	ALL
S..	2	W0756	665	20		78-36-11	275-299
S..	2	W0756	684	20		78-34-11	ALL
<b>GD00671</b>		<b>SH</b>				<b>1726/280/L018</b>	<b>ALL</b>
S..	N	W0575	009	18		27-41-11	ALL
S..	N	W0575	013Y	18		27-41-11	ALL
<b>GD00673</b>		<b>SH</b>				<b>1726/280/L018</b>	<b>ALL</b>
S..	N	W0587	007Y	18		27-41-11	ALL

## GROUND LIST

D280T132

**91-21-21**  
Section GD00600  
Page 4  
Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00674</b>		<b>YHLZG16</b>				<b>0278/152/R027</b>	<b>ALL</b>
S..	2	W0606	109R	20		26-15-12	ALL
D..	2	W0606	110R	20		26-15-12	ALL
A..	2	W0926	012	18		33-31-11	ALL
D..	2	W0926	017	20		33-51-21	ALL
<b>GD00675</b>		<b>SH</b>				<b>1726/280/R018</b>	<b>ALL</b>
S..	N	W0581	009	18		27-41-21	ALL
S..	N	W0581	013Y	18		27-41-21	ALL
<b>GD00677</b>		<b>SH</b>				<b>1726/280/R018</b>	<b>ALL</b>
S..	N	W0589	007Y	18		27-41-21	ALL
<b>GD00679</b>		<b>DC</b>				<b>0331/152/L050</b>	<b>275-299</b>
D..	E	W1605	022	20		34-12-12	275-299
<b>GD00680</b>		<b>SH</b>				<b>0905/114/L014</b>	<b>ALL</b>
S..	N	W0938	053	16		33-44-11	050-099, 153-199, 275-299
S..	E	W0938	053	16		33-44-11	150-152
<b>GD00681</b>		<b>SH</b>				<b>0852/292/L068</b>	<b>150-199, 275-299</b>
S..	E	W0812	025	20		33-21-32	150-199
S..	E	W0812	074	16		33-21-34	150-199, 275-299
S..	E	W0812	687	20		33-21-13	275-299
S..	E	W0812	692	20		33-21-13	150-199, 275-299
S..	E	W0812	706	20		33-21-13	150-199
<b>GD00682</b>		<b>AC</b>				<b>0905/114/L014</b>	<b>ALL</b>
A..	N	W0938	052	16		33-44-11	050-099, 153-199, 275-299
A..	E	W0938	052	16		33-44-11	150-152
<b>GD00683</b>		<b>DC</b>				<b>0852/292/L068</b>	<b>050-099, 275-299</b>
D..	E	W0718	048	20		35-21-12	050-099
D..	E	W0724	089	20		35-21-12	275-299
D..	E	W0790	053	18		33-51-13	277-299
<b>GD00685</b>		<b>AC</b>				<b>0852/292/L068</b>	<b>150-199, 275-299</b>
A..	E	W0812	024	20		33-21-32	150-199
DED		W0812	024Z			33-21-32	155-156, 166
A..	E	W0812	073	16		33-21-34	150-199, 275-299

## GROUND LIST

D280T132

**91-21-21**

Section GD00600

Page 5

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00685</b>		<b>AC (continued)</b>				<b>0852/292/L068</b>	<b>150-199, 275-299</b>
DED		W0812	073Z			33-21-34	155-156, 166
A..	E	W0812	686	20		33-21-13	275-299
A..	E	W0812	700	20		33-21-13	150-199
A..	E	W1234	041	20		33-21-21	150-199
<b>GD00687</b>		<b>SH</b>				<b>0325/193/L050</b>	<b>ALL</b>
S..	E	W0695	011	20		31-31-15	ALL
S..	E	W0695	204	20		31-31-15	ALL
<b>GD00689</b>		<b>DC</b>				<b>0325/193/L050</b>	<b>ALL</b>
D..	E	W0695	012	20		31-31-15	ALL
<b>GD00691</b>		<b>YHLZG16</b>				<b>P006-05/ /</b>	<b>ALL</b>
D..	2	W0744	077	20		77-35-11	ALL
S..	2	W0744	200	20		77-35-11	051-099, 150-199, 275-299
S..	2	W0744	200Z			77-35-11	050
S..	2	W0744	204F	20		73-21-14	050-099, 150-199, 277-299
S..	2	W0744	212	20		77-35-11	051-099, 150-199, 275-299
S..	2	W0744	212Z			77-35-11	050
D..	2	W0764	046	20		77-35-11	ALL
S..	2	W0764	047	20		28-41-11	ALL
S..	2	W0764	246	20		77-35-11	050-099, 275-299
S..	2	W0764	246Z			77-35-11	150-199
S..	2	W0764	249	20		77-35-11	050-099, 275-299
S..	2	W0764	249Z			77-35-11	150-199
<b>GD00693</b>		<b>SH</b>				<b>REARSPAR/370/0</b>	<b>ALL</b>
S..	N	W0579	001	18		27-21-12	ALL
<b>GD00695</b>		<b>SH</b>				<b>REARSPAR/390/0</b>	<b>ALL</b>
S..	N	W0583	001	18		27-21-22	ALL
<b>GD00699</b>		<b>SH</b>				<b>0145/237/R008</b>	<b>ALL</b>
S..	E	W0031	777	20		34-55-21	ALL

## GROUND LIST

D280T132

**91-21-21**  
Section GD00600  
Page 6 End  
Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00706</b>		<b>YHLZG16</b>				<b>0237/150/R026</b>	<b>ALL</b>
D..	2	W0606	042R	20		26-11-21	ALL
D..	2	W0606	049R	20		26-11-21	ALL
D..	2	W0606	052R	20		26-11-22	ALL
D..	2	W0606	059R	20		26-11-22	ALL
D..	2	W0606	062R	20		26-15-11	ALL
A..	2	W0606	635R	20		26-17-11	ALL
D..	2	W0614	042R	20		26-11-11	ALL
D..	2	W0614	049R	20		26-11-11	ALL
D..	2	W0614	052R	20		26-11-12	ALL
D..	2	W0614	059R	20		26-11-12	ALL
D..	2	W0614	069R	20		26-15-11	ALL
<b>GD00707</b>		<b>SH</b>				<b>0190/265/L013</b>	<b>ALL</b>
S..	E	W0723	008	20		34-21-31	ALL
S..	E	W0723	201	20		34-21-31	ALL
S..	E	W0723	202	20		34-21-31	ALL
<b>GD00709</b>		<b>SH</b>				<b>0190/265/L011</b>	<b>ALL</b>
S..	E	W0751	201	20		34-21-11	ALL
S..	E	W0751	202	20		34-21-11	ALL
<b>GD00711</b>		<b>YHLZG16</b>				<b>0654/185/R089</b>	<b>ALL</b>
S..	2	W0345	FRB			34-57-11	ALL
S..	2	W0349	FRB			34-57-21	ALL
D..	2	W0606	721R	20		26-23-12	050-099, 150-199, 280-299
D..	2	W0606	721R	20		26-23-11	275-278
D..	2	W0606	723R	20		26-23-12	050-099, 155-199, 280-299
D..	2	W0606	723R	20		26-23-11	150-154, 275-278
D..	2	W0614	701R	20		26-23-11	ALL
A..	2	W0645	099	20		23-34-11	ALL
D..	2	W0645	100	20		23-34-11	ALL
A..	2	W0645	103	20		23-34-11	ALL
D..	2	W0645	104	20		23-34-11	ALL
<b>GD00715</b>		<b>AC</b>				<b>1196/257/R083</b>	<b>150-199, 275-299</b>
A..	E	W1445	003	16		23-34-18	150-199, 275-299
A..	E	W1445	006	16		23-34-18	150-199, 275-299
<b>GD00716</b>		<b>DC</b>				<b>0765/132/R060</b>	<b>ALL</b>
D..	E	W0580	006	18		21-25-21	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD00700

Page 1

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00716</b>		<b>DC (continued)</b>				<b>0765/132/R060</b>	<b>ALL</b>
D..	E	W0580	032	20		21-43-11	ALL
<b>GD00717</b>		<b>AC</b>				<b>0566/270/R083</b>	<b>275-299</b>
A..	E	W1379	014	16		23-34-15	275-278
A..	E	W1379	018	16		23-34-15	275-299
<b>GD00718</b>		<b>SH</b>				<b>0765/131/R059</b>	<b>ALL</b>
S..	E	W0580	007	12		21-25-21	ALL
<b>GD00719</b>		<b>AC</b>				<b>0566/265/L083</b>	<b>275-299</b>
A..	E	W1383	016	16		23-34-16	275-299
A..	E	W1383	018	16		23-34-16	275-278
<b>GD00721</b>		<b>AC</b>				<b>1197/270/L083</b>	<b>150-199, 275-299</b>
A..	E	W1443	003	16		23-34-18	150-199, 275-299
A..	E	W1443	006	16		23-34-18	150-199, 275-299
<b>GD00723</b>		<b>YHLZG16</b>				<b>1461/295/L013</b>	<b>ALL</b>
A..	2	W0814	874	20		33-26-21	050-099
A..	2	W1152	010	20		33-24-13	275
A..	2	W1152	013	20		33-24-13	275
A..	2	W1152	115	20		33-24-13	050-099, 276-299
A..	2	W1152	125	20		33-24-13	050-099, 276-299
D..	2	W1174	112	20		35-21-14	050-099, 276-299
D..	2	W1174	122	20		35-21-14	050-099, 276-299
A..	2	W1387	007	16		23-34-19	ALL
<b>GD00727</b>		<b>YHLZG16</b>				<b>0255/147/R026</b>	<b>ALL</b>
S..	2	W0451	207	20		27-32-11	ALL
S..	2	W0451	209B	24		31-51-31	050-099, 155-156, 162-166
S..	2	W0451	209R	24		31-51-31	050-099, 155-156, 162-166
S..	2	W0453	207	20		27-32-21	ALL
S..	2	W0453	208	20		27-32-21	ALL
S..	2	W0453	209	20		27-32-21	ALL
S..	2	W0459	209B	22		31-51-31	150-152, 157, 167-199, 275-278
S..	2	W0459	209R	22		31-51-31	150-152, 157, 167-199, 275-278
<b>GD00735</b>		<b>SH</b>				<b>AF0204/ /</b>	<b>ALL</b>
S..	E	W0691	027F	20		SPARE	150-154

## GROUND LIST

D280T132

**91-21-21**  
Section GD00700  
Page 2  
Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00735</b>		<b>SH (continued)</b>				<b>AF0204/ /</b>	<b>ALL</b>
S..	=	W0691	027F	20		SPARE	155-199
S..	E	W0691	207	20		SPARE	275-299
S..	E	W0691	208	20		31-35-11	ALL
S..	E	W0691	212	20		34-61-15	ALL
S..	E	W0691	213	20		34-61-15	ALL
S..	E	W0691	214	20		34-61-15	ALL
<b>GD00739</b>		<b>SH</b>				<b>AF0204/ /</b>	<b>ALL</b>
S..	E	W0691	202	20		31-31-11	ALL
S..	E	W0691	204	20		31-31-11	ALL
S..	E	W0691	205	20		31-31-11	ALL
S..	E	W0691	206	20		31-31-11	ALL
<b>GD00741</b>		<b>SH</b>				<b>1555/290/L055</b>	<b>ALL</b>
S..	E	W0713	007	20		31-31-11	ALL
S..	E	W0713	202	20		31-31-11	ALL
S..	E	W0713	203	20		31-31-11	ALL
<b>GD00743</b>		<b>AC</b>				<b>0599/308/R035</b>	<b>050-099, 150-199</b>
A..	E	W1417	008	20		23-32-11	050-099, 150-199
<b>GD00745</b>		<b>DC</b>				<b>0599/308/R035</b>	<b>050-099, 150-199</b>
D..	E	W1417	021	20		23-32-13	050-099, 150-199
<b>GD00747</b>		<b>SH</b>				<b>0599/308/R035</b>	<b>050-099, 150-199</b>
S..	E	W1417	022	20		23-32-13	050-099, 150-199
<b>GD00749</b>		<b>AC</b>				<b>1186/308/R035</b>	<b>150-199</b>
A..	E	W1417	010	20		23-32-11	150-199
<b>GD00750</b>		<b>DC</b>				<b>0742/124/L053</b>	<b>ALL</b>
D..	E	W0578	006	18		21-25-11	ALL
<b>GD00751</b>		<b>DC</b>				<b>1186/308/R035</b>	<b>150-199</b>
D..	E	W1417	033	20		23-32-13	150-199
<b>GD00752</b>		<b>SH</b>				<b>0742/124/L053</b>	<b>ALL</b>
S..	E	W0578	007	12		21-25-11	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD00700

Page 3

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00753</b>		<b>SH</b>				<b>1186/308/R035</b>	<b>150-199</b>
S..	E	W1417	034	20		23-32-13	150-199
<b>GD00754</b>		<b>YHLZG16</b>				<b>0287/155/R075</b>	<b>ALL</b>
A..	2	W0572	572	20		21-51-23	ALL
S..	2	W0620	005	20		78-34-21	ALL
D..	2	W0628	040	20		29-11-12	ALL
D..	2	W0645	106	20		23-34-11	ALL
D..	2	W0645	194	20		23-34-11	050-099, 150-199
S..	2	W0738	125	20		78-34-21	ALL
S..	2	W0752	503	20		78-34-11	ALL
S..	2	W0766	512	20		78-34-21	050-099, 150-156, 162-166, 275-299
S..	2	W0766	512	20		78-34-21	157, 167-199
A..	2	W1204	088	20		21-51-13	ALL
S..	2	W1204	089	20		21-51-13	ALL
<b>GD00755</b>		<b>DC</b>				<b>1724/270/R047</b>	<b>ALL</b>
D..	N	W0599	70L	18		29-11-14	ALL
<b>GD00757</b>		<b>DC</b>				<b>1705/282/L043</b>	<b>ALL</b>
D..	N	W0591	70M	18		29-11-14	ALL
<b>GD00759</b>		<b>DC</b>				<b>1725/280/R020</b>	<b>050-099, 155-199, 275-299</b>
D..	N	W0581	024Y	18		27-41-31	050-099, 155-199, 275-299
D..	N	W0581	025Y	18		27-41-31	050-099, 155-199, 275-299
D..	N	W0589	010Y	18		27-41-31	050-099, 155-199, 275-299
D..	N	W0589	011Y	18		27-41-31	050-099, 155-199, 275-299
<b>GD00760</b>		<b>YHLZG16</b>				<b>0287/298/L050</b>	<b>ALL</b>
D..	2	W0714	006	20		35-21-12	275-299
D..	2	W0714	011	20		35-21-12	ALL
D..	2	W0714	030	20		35-21-14	275-299
D..	2	W0784	035	20		33-51-13	150-199, 275-299
D..	2	W0784	082	20		33-51-13	150-199, 275-299
D..	2	W0832	016	20		33-51-13	050-099
D..	2	W0832	019	20		33-51-13	050-099
A..	2	W1224	004	20		52-11-11	ALL
S..	2	W1224	005	20		52-11-11	ALL
D..	2	W1224	011	20		52-11-12	ALL
A..	2	W1224	021	20		33-22-31	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD00700

Page 4

Mar 09/2006





# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00760</b>		<b>YHLZG16 (continued)</b>				<b>0287/298/L050</b>	<b>ALL</b>
A..	2	W1224	110	20		33-22-41	ALL
A..	2	W1228	053	20		33-22-41	ALL
S..	2	W1228	059	20		33-22-41	ALL
<b>GD00761</b>		<b>DC</b>				<b>1725/280/L025</b>	<b>050-099, 155-199, 275-299</b>
D..	N	W0575	024Y	18		27-41-31	050-099, 155-199, 275-299
D..	N	W0575	025Y	18		27-41-31	050-099, 155-199, 275-299
D..	N	W0587	010Y	18		27-41-31	050-099, 155-199, 275-299
D..	N	W0587	011Y	18		27-41-31	050-099, 155-199, 275-299
<b>GD00763</b>		<b>YHLZG16</b>				<b>0246/310/L006</b>	<b>050-099, 162-199</b>
D..	2	W1447	075	20		23-42-11	050-099, 162-199
D..	2	W1447	078	20		23-42-11	050-099, 162-199
A..	2	W1449	083	20		33-22-33	050-099, 162-199
A..	2	W1449	090	20		33-24-13	050-099, 162-199
D..	2	W1449	100	20		33-51-13	050-099, 162-199
D..	2	W1449	118	20		23-42-11	050-099, 162-199
D..	2	W1449	141	20		35-21-14	050-099, 162-199
A..	2	W1449	142	20		23-34-15	050-099, 162-199
A..	2	W1449	144	20		33-26-21	050-099, 162-199
D..	2	W1449	163	20		21-66-11	050-099, 162-199
D..	2	W1449	164	20		21-66-11	050-099, 162-199
S..	2	W1449	169	20		21-66-11	050-099, 162-199
D..	2	W1449	179	20		21-66-11	050-099, 162-199
<b>GD00764</b>		<b>SH</b>				<b>0300/280/L040</b>	<b>050-099, 150-154</b>
<b>GD00764</b>		<b>DC</b>				<b>0331/132/R044</b>	<b>155-199, 275-299</b>
D..	E	W0807	005	20		34-53-13	ALL
D..	E	W0807	006	20		34-53-13	ALL
<b>GD00765</b>		<b>YHLZG16</b>				<b>0155/215/R005</b>	<b>156-157, 166-199</b>
A..	2	W0519	031	20		34-61-21	156-157, 166-199
S..	2	W0519	207	20		34-61-26	156, 166
S..	2	W0519	207Z			34-61-26	157, 167-199
S..	2	W0519	208	20		34-61-26	156, 166
S..	2	W0519	208Z			34-61-26	157, 167-199
S..	2	W0519	209	20		34-61-26	156, 166
S..	2	W0519	209Z			34-61-26	157, 167-199

## GROUND LIST

D280T132

**91-21-21**

Section GD00700

Page 5

Mar 09/2006



## 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00772</b>		<b>AC</b>				<b>0935/112/R010</b>	<b>ALL</b>
A..	N	W0980	A-D			33-31-21	ALL
<b>GD00774</b>		<b>AC</b>				<b>0929/112/R010</b>	<b>ALL</b>
A..	N	W0982	003	18		21-43-11	ALL
<b>GD00776</b>		<b>DC</b>				<b>0929/115/R010</b>	<b>ALL</b>
D..	N	W0982	004	18		21-43-11	ALL
D..	N	W0982	017	18		21-43-11	ALL
<b>GD00788</b>		<b>YHLZG16</b>				<b>1031/197/L040</b>	<b>ALL</b>
S..	2	W0590	045	20		28-25-11	ALL
D..	2	W0614	012	18		27-11-12	ALL
D..	2	W0614	018	20		28-21-13	ALL
D..	2	W0614	020	20		28-21-13	ALL
<b>GD00792</b>		<b>YHLZG16</b>				<b>0999/197/L040</b>	<b>ALL</b>
A..	2	W0756	066	20		27-58-11	050-099, 150-155, 162-165, 275-276
A..	2	W0756	531	20		27-18-11	ALL
A..	2	W0756	533	20		27-18-11	ALL
D..	2	W0942	006	20		32-42-11	ALL
D..	2	W0942	008	20		32-42-11	ALL
D..	2	W0942	010	20		32-42-11	ALL
<b>GD00794</b>		<b>YHLZG16</b>				<b>1031/197/R045</b>	<b>ALL</b>
S..	2	W0206	029	16		27-51-11	ALL
A..	2	W0206	030	16		27-51-11	ALL
D..	2	W0206	031	18		27-51-11	ALL
D..	2	W0628	063	20		27-51-11	ALL
S..	2	W0628	064	20		27-51-11	ALL
D..	2	W0752	005	20		27-51-31	ALL
S..	2	W0752	010	20		27-81-31	ALL
D..	2	W0752	012	20		27-81-31	ALL
D..	2	W0752	018	20		27-51-51	ALL
S..	2	W0752	020	20		27-51-51	ALL
D..	2	W0752	099	20		27-81-31	ALL
<b>GD00796</b>		<b>AC</b>				<b>F 106/ /RS</b>	<b>ALL</b>
A..	N	W0500	004	18		27-28-11	ALL

### GROUND LIST

D280T132

**91-21-21**

Section GD00700

Page 6

Mar 09/2006



Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00798</b>		<b>DC</b>				<b>1654/235/L070</b>	<b>ALL</b>
D..	N	W0512	004	18		27-23-11	ALL
D..	N	W0512	005	18		27-23-11	ALL

---

**GROUND LIST**

D280T132

**91-21-21**

Section GD00700

Page 7 End

Mar 09/2006



## 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00800</b>		<b>AC</b>				<b>F 118/ /RS</b>	<b>ALL</b>
A..	N	W0500	016	18		27-28-13	ALL
<b>GD00802</b>		<b>DC</b>				<b>F 118/ /RS</b>	<b>ALL</b>
D..	N	W0500	014	18		27-21-11	ALL
<b>GD00804</b>		<b>SH</b>				<b>F 118/ /RS</b>	<b>ALL</b>
S..	N	W0500	013	18		27-21-11	ALL
<b>GD00806</b>		<b>AC</b>				<b>SL031/12/TE</b>	<b>ALL</b>
A..	N	W0514	004	18		27-38-11	ALL
<b>GD00808</b>		<b>DC</b>				<b>1702/255/L055</b>	<b>ALL</b>
D..	N	W0502	009	18		27-23-11	ALL
D..	N	W0502	010	18		27-23-11	ALL
D..	N	W0512	007	18		32-71-11	150-199, 275-299
<b>GD00810</b>		<b>AC</b>				<b>SR127/12/TE</b>	<b>ALL</b>
A..	N	W0514	014	18		27-38-11	ALL
<b>GD00812</b>		<b>DC</b>				<b>1654/269/R070</b>	<b>ALL</b>
D..	N	W0504	004	18		27-23-11	ALL
D..	N	W0504	005	18		27-23-11	ALL
<b>GD00814</b>		<b>SH</b>				<b>0875/130/L060</b>	<b>ALL</b>
S..	N	W0938	014	18		21-53-12	ALL
S..	N	W0944	002	18		21-51-11	ALL
S..	N	W0944	007	18		21-51-11	ALL
S..	N	W0944	010	18		21-51-11	ALL
<b>GD00816</b>		<b>DC</b>				<b>0873/135/L060</b>	<b>ALL</b>
D..	N	W0508	030	18		21-51-11	ALL
D..	N	W0944	003	18		21-51-11	ALL
D..	N	W0944	006	18		21-51-11	ALL
D..	N	W0944	009	18		21-51-11	050-099
<b>GD00824</b>		<b>DC</b>				<b>0783/122/L040</b>	<b>ALL</b>
D..	N	W0508	002	18		21-51-11	ALL
D..	N	W0508	003	18		21-52-31	ALL
D..	N	W0508	037	18		36-21-11	ALL

### GROUND LIST

D280T132

**91-21-21**  
Section GD00800  
Page 1  
Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00852</b>		<b>YHLZG16</b>				<b>0999/197/R045</b>	<b>ALL</b>
D..	2	W0588	002	20		29-11-31	ALL
DED		W0588	002Z			29-11-31	ALL
D..	2	W0588	048	20		29-11-31	ALL
D..	2	W0598	072	18		27-11-22	ALL
A..	2	W0628	022	16		33-31-11	ALL
A..	2	W0628	024	16		33-31-11	ALL
D..	2	W1246	006	20		29-21-32	ALL
D..	2	W1246	007	20		29-21-32	ALL
D..	2	W1246	008	20		29-21-32	ALL
D..	2	W1246	010	24		29-32-11	ALL
D..	2	W1246	011	22		29-32-11	ALL
S..	2	W1246	016	20		29-33-11	ALL
D..	2	W1246	025	20		29-21-32	ALL
<b>GD00854</b>		<b>YHLZG16</b>				<b>0999/197/R040</b>	<b>ALL</b>
D..	2	W0598	029	20		28-21-13	ALL
D..	2	W0598	030	20		28-21-13	ALL
D..	2	W0656	022	20		32-42-11	ALL
D..	2	W0656	023	20		32-42-11	ALL
D..	2	W0656	024	20		32-42-11	ALL
D..	2	W0656	042	20		32-42-12	ALL
D..	2	W0656	047	20		32-42-12	ALL
D..	2	W0656	052	20		29-11-31	ALL
D..	2	W0656	128	16		25-65-12	ALL
D..	2	W0656	147	20		29-11-31	ALL
D..	2	W0738	008	20		32-42-11	ALL
D..	2	W0738	009	20		32-42-11	ALL
D..	2	W0738	010	20		32-42-11	ALL
<b>GD00856</b>		<b>AC</b>				<b>0873/130/L062</b>	<b>ALL</b>
A..	N	W0938	007	18		21-53-11	ALL
<b>GD00858</b>		<b>AC</b>				<b>0935/114/L014</b>	<b>ALL</b>
A..	N	W0938	008	18		21-53-11	ALL
<b>GD00860</b>		<b>AC</b>				<b>0820/130/L060</b>	<b>ALL</b>
A..	N	W0508	076	20		21-61-81	ALL
A..	N	W0938	009	18		21-53-11	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD00800

Page 2

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00864</b>		<b>DC</b>				<b>0864/130/L062</b>	<b>ALL</b>
D..	N	W0508	034	18		21-52-31	ALL
D..	N	W0938	011	18		21-53-12	ALL
D..	N	W0938	013	18		21-53-12	ALL
<b>GD00868</b>		<b>DC</b>				<b>0820/130/L060</b>	<b>ALL</b>
D..	N	W0938	016	18		21-53-12	ALL
D..	N	W0938	018	18		21-53-12	ALL
<b>GD00870</b>		<b>SH</b>				<b>0820/130/L060</b>	<b>ALL</b>
S..	N	W0938	019	18		21-53-12	ALL
<b>GD00872</b>		<b>DC</b>				<b>0930/114/L014</b>	<b>ALL</b>
D..	N	W0938	021	18		21-53-12	ALL
D..	N	W0938	023	18		21-53-12	ALL
<b>GD00874</b>		<b>SH</b>				<b>0940/114/L014</b>	<b>ALL</b>
S..	N	W0938	024	18		21-53-12	ALL

## GROUND LIST

D280T132

**91-21-21**  
Section GD00800  
Page 3 End  
Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00904</b>		<b>AC</b>				<b>0865/125/R009</b>	<b>ALL</b>
A..	N	W0612	007	18		21-53-21	ALL
A..	N	W0612	009	18		21-53-21	ALL
<b>GD00906</b>		<b>AC</b>				<b>0932/129/R062</b>	<b>ALL</b>
A..	N	W0612	008	18		21-53-21	ALL
A..	N	W0612	031	18		36-11-21	ALL
<b>GD00912</b>		<b>DC</b>				<b>0865/121/R009</b>	<b>ALL</b>
D..	N	W0612	011	18		21-53-22	ALL
D..	N	W0612	013	18		21-53-22	ALL
D..	N	W0612	016	18		21-53-22	ALL
D..	N	W0612	018	18		21-53-22	ALL
<b>GD00914</b>		<b>SH</b>				<b>0865/123/R009</b>	<b>ALL</b>
S..	N	W0612	014	18		21-53-22	ALL
S..	N	W0612	019	18		21-53-22	ALL
S..	N	W0952	028	18		21-51-22	ALL
<b>GD00920</b>		<b>DC</b>				<b>0935/129/R062</b>	<b>ALL</b>
D..	N	W0612	021	18		21-53-22	ALL
D..	N	W0612	023	18		21-53-22	ALL
D..	N	W0612	029	18		36-11-21	ALL
D..	N	W0612	030	18		36-11-21	ALL
<b>GD00922</b>		<b>SH</b>				<b>0934/129/R062</b>	<b>ALL</b>
S..	N	W0612	024	18		21-53-22	ALL
<b>GD00932</b>		<b>YHLZG16</b>				<b>1540/285/L070</b>	<b>ALL</b>
A..	2	W0216	102	20		33-24-12	050-099, 150-199
D..	2	W0665	054	20		23-42-12	150-199, 275-299
D..	2	W0665	057	20		23-42-12	150-199, 275-299
D..	2	W0665	070	20		23-42-11	050-099
D..	2	W0724	056	20		35-21-12	050-099
D..	2	W0788	022	20		33-51-13	ALL
D..	2	W0788	046	18		33-51-13	150-199, 275-299
D..	2	W0788	669	18		33-51-13	050-099
S..	2	W0816	013	20		33-27-11	ALL
A..	2	W0816	017	20		33-27-11	ALL
S..	2	W0816	026	20		33-27-11	150-199, 275-299

## GROUND LIST

D280T132

## 91-21-21

Section GD00900

Page 1

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00932</b>		<b>YHLZG16 (continued)</b>				<b>1540/285/L070</b>	<b>ALL</b>
A..	2	W0816	803	18		33-27-11	150-199
A..	2	W0818	522	20		33-27-11	ALL
A..	2	W0818	803	18		33-27-11	150-199
D..	2	W0836	026	18		33-51-14	ALL
D..	2	W0836	043	18		33-51-13	050-099
A..	2	W1240	004	18		33-22-31	275-299
A..	2	W1240	026	18		33-22-11	ALL
A..	2	W1240	125	20		33-22-31	050-099, 165-199
D..	2	W1254	008	20		25-63-11	050-099, 150-199
S..	2	W1254	010	20		25-63-11	050-099, 150-199
<b>GD00934</b>		<b>YHLZG16</b>				<b>0851/295/L015</b>	<b>ALL</b>
D..	2	W0665	029	20		23-42-11	050-099
D..	2	W0665	032	20		23-42-11	150-199
D..	2	W0665	033	20		23-42-11	150-199
A..	2	W0814	641	20		33-26-11	275-299
A..	2	W0814	642	16		38-13-11	275-299
D..	2	W0814	658	20		38-32-13	275-276
D..	2	W0814	658	20		38-32-16	277-299
S..	2	W0814	659	20		38-32-13	275-276
S..	2	W0814	659	20		38-32-16	277-299
D..	2	W0814	666	20		33-25-11	275-299
D..	2	W1252	004	20		25-63-11	050-099
S..	2	W1252	006	20		25-63-11	050-099
A..	2	W1280	079	20		33-24-13	150-199
A..	2	W1280	195	20		33-24-13	050-099
D..	2	W1282	013	20		35-21-14	150-199
D..	2	W1282	016	20		35-21-14	150-199
D..	2	W1282	192	20		35-21-14	050-099
<b>GD00938</b>		<b>YHLZG16</b>				<b>0455/290/R063</b>	<b>ALL</b>
S..	2	W0812	176	20		33-21-11	ALL
S..	2	W0814	084	18		33-21-33	050-099
S..	2	W0814	084	20		33-21-33	150-157
S..	2	W0814	084	16		33-21-33	162-199, 275-299
A..	2	W0814	085	18		33-21-33	050-099
A..	2	W0814	085	20		33-21-33	150-157, 163-199
A..	2	W0814	085	16		33-21-33	162, 275-299
DED		W0814	085Z			33-21-33	155-156, 166
S..	2	W0814	089	20		33-21-33	050-099, 153-199, 275-299

## GROUND LIST

D280T132

**91-21-21**

Section GD00900

Page 2

Mar 09/2006





# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00938</b>		<b>YHLZG16 (continued)</b>				<b>0455/290/R063</b>	<b>ALL</b>
A..	2	W0814	090	20		33-21-33	050-099, 166-199, 275-299
D..	2	W1222	036	20		33-51-12	275-299
A..	2	W1224	174	20		33-21-31	150-157
S..	2	W1228	602	20		33-27-11	050-099
S..	2	W1228	605	20		33-27-11	050-099
A..	2	W1228	609	20		33-27-11	050-099
S..	2	W1228	610	20		33-27-11	050-099
S..	2	W1228	611	20		33-27-11	050-099
A..	2	W1236	009	20		33-21-21	275-299
A..	2	W1236	163	20		33-21-21	050-099, 162-199
A..	2	W1236	166	20		33-21-31	050-099, 162-199
A..	2	W9006	002	22		33-22-21	150, 153-157
<b>GD00942</b>		<b>AC</b>				<b>0808/290/R065</b>	<b>050-099, 275-299</b>
A..	E	W1236	019	20		33-21-21	275-299
A..	E	W1236	148	20		33-21-21	050-099
<b>GD00946</b>		<b>AC</b>				<b>0933/290/R065</b>	<b>050-099</b>
A..	E	W1236	021	20		33-21-21	050-099
<b>GD00960</b>		<b>YHLZG16</b>				<b>0676/295/L014</b>	<b>ALL</b>
A..	2	W0792	038	20		33-26-21	150-199
D..	2	W0798	002	20		21-65-11	275-278
A..	2	W0822	055	20		33-21-13	150-199
S..	2	W0822	056	20		33-21-13	150-199
S..	2	W0822	063	20		33-21-13	150-199
S..	2	W0822	092	20		33-21-13	275-278
S..	2	W0822	094	20		33-21-11	150-199
S..	2	W0822	512	20		33-21-11	275-278
D..	2	W1234	022	20		21-61-21	050-099
D..	2	W1234	024	20		21-65-11	050-099
A..	2	W1280	015	20		33-24-13	150-199
A..	2	W1280	105	20		33-24-13	050-099
A..	2	W1280	115	20		33-24-13	050-099
A..	2	W1280	125	20		33-24-13	050-099
D..	2	W1282	102	20		35-21-14	050-099
D..	2	W1282	112	20		35-21-14	050-099
D..	2	W1282	122	20		35-21-14	050-099
A..	2	W2062	005	20		33-24-13	275
A..	2	W2062	010	20		33-24-13	275

## GROUND LIST

D280T132

**91-21-21**

Section GD00900

Page 3

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD00960</b>		<b>YHLZG16 (continued)</b>				<b>0676/295/L014</b>	<b>ALL</b>
A..	2	W2062	105	20		33-24-13	276-299
A..	2	W2062	115	20		33-24-13	276-299
A..	2	W2062	125	20		33-24-13	276-299
D..	2	W2066	003	20		35-21-14	275
D..	2	W2066	006	20		35-21-14	275
D..	2	W2066	102	20		35-21-14	276-299
D..	2	W2066	112	20		35-21-14	276-299
D..	2	W2066	122	20		35-21-14	276-299
<b>GD00976</b>		<b>AC</b>				<b>1562/143/0000</b>	<b>ALL</b>
A..	E	W1356	A-B			30-71-23	ALL
A..	E	W1356	A-D			30-71-23	ALL
A..	E	W1356	C-B			30-71-23	ALL

## GROUND LIST

D280T132

**91-21-21**  
Section GD00900  
Page 4 End  
Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD01006</b>		<b>AC</b>				<b>0631/292/R064</b>	<b>ALL</b>
A..	E	W0814	114	20		33-21-33	150-199, 275-299
DED		W0814	114Z			33-21-33	155-156, 166
A..	E	W1236	023	20		33-21-21	ALL
<b>GD01010</b>		<b>AC</b>				<b>0631/293/L064</b>	<b>ALL</b>
A..	E	W0812	027	20		33-21-32	ALL
DED		W0812	027Z			33-21-32	155-156, 166
A..	E	W0812	182	20		33-21-11	ALL
A..	E	W1236	041	20		33-21-21	ALL
<b>GD01014</b>		<b>AC</b>				<b>0808/294/L065</b>	<b>050-099, 275-299</b>
A..	E	W0812	024	20		33-21-32	050-099, 275-299
A..	E	W0812	673	20		33-21-13	050-099
A..	E	W1234	013	20		33-21-21	050-099, 275-299
<b>GD01018</b>		<b>AC</b>				<b>0933/290/L067</b>	<b>050-099, 275-299</b>
A..	E	W0812	073	18		33-21-34	050-099
A..	E	W0812	700	20		33-21-13	275-299
A..	E	W0812	713	20		33-21-13	050-099
A..	E	W1236	164	20		33-21-21	050-099
<b>GD01022</b>		<b>AC</b>				<b>0456/293/L064</b>	<b>ALL</b>
A..	E	W0812	081	20		33-21-32	ALL
DED		W0812	081Z			33-21-32	155-156, 166
A..	E	W0812	155	20		33-21-11	275-299
A..	E	W0812	22A	20		33-21-32	162-199
DED		W0812	22AZ			33-21-32	166
A..	E	W1224	155	20		33-22-32	050-099, 150-199
A..	E	W1232	561	16		21-73-11	275-299
A..	E	W1234	017	20		33-21-21	275-299
A..	E	W1381	003	16		23-34-17	050-099
A..	E	W1449	180	20		33-26-21	150-157, 167-199
A..	E	W1449	180	20		23-31-13	162-166
A..	E	W9005	002	22		33-22-21	150, 153-157
A..	E	W9005	A02	22		33-22-21	162-199
<b>GD01028</b>		<b>AC</b>				<b>1108/290/R065</b>	<b>050-099</b>
A..	E	W0810	015	20		33-24-14	050-099
A..	E	W0818	004	20		33-21-35	050-099
A..	E	W1240	003	20		33-21-21	050-099

## GROUND LIST

D280T132

**91-21-21**

Section GD01000

Page 1

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD01032</b>		<b>AC</b>				<b>1284/290/R065</b>	<b>050-099</b>
<b>GD01032</b>		<b>AC</b>				<b>1286/290/R065</b>	<b>150-199, 275-299</b>
A..	E	W0818	038	20		33-21-35	ALL
DED		W0818	038Z			33-21-35	155-156, 166
A..	E	W1240	005	20		33-21-21	050-099
<b>GD01036</b>		<b>AC</b>				<b>1439/290/R070</b>	<b>050-099, 162-199, 280-299</b>
A..	E	W0818	608	18		33-22-42	280-299
A..	E	W1240	094	20		33-21-21	050-099, 162-199
A..	E	W1240	134	18		33-22-31	280-299
A..	E	W1240	137	18		33-22-31	280-299
<b>GD01038</b>		<b>AC</b>				<b>1107/291/L056</b>	<b>050-099</b>
A..	E	W0788	053	20		33-21-21	050-099
A..	E	W0816	107	18		33-21-34	050-099
<b>GD01042</b>		<b>AC</b>				<b>1283/291/L056</b>	<b>ALL</b>
A..	E	W0788	054	20		33-21-21	050-099
A..	E	W0816	141	20		33-21-34	ALL
DED		W0816	141Z			33-21-34	155-156, 166
<b>GD01046</b>		<b>AC</b>				<b>1438/292/L063</b>	<b>150-199, 275-299</b>
A..	E	W0788	141	20		33-21-21	162-199
A..	E	W0816	133	20		33-21-34	150-157
A..	E	W0816	133	16		33-21-34	275-299
DED		W0816	133Z			33-21-34	155-156
A..	E	W0816	644	20		33-21-14	150-199, 275-299
A..	E	W0828	050	20		33-26-21	275-299
<b>GD01056</b>		<b>YHLZG16</b>				<b>0267/194/L064</b>	<b>ALL</b>
D..	2	W0984	013	20		21-58-16	ALL
A..	2	W1258	B-B			30-71-21	ALL
A..	2	W1258	B-P			30-71-21	050-099, 150-199
A..	2	W1258	C-V			30-71-21	050-099, 155-199
A..	2	W1258	U-D			30-71-21	ALL
A..	2	W1258	Y-D			30-71-21	ALL
<b>GD01064</b>		<b>AC</b>				<b>0645/146/L075</b>	<b>ALL</b>
A..	E	W1258	E-B			30-71-21	050-099
A..	E	W1258	F-B			30-71-21	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD01000

Page 2

Mar 09/2006



Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD01064</b>		<b>AC (continued)</b>				<b>0645/146/L075</b>	<b>ALL</b>
A..	E	W1258	O-B			30-71-21	050-099
A..	E	W1258	P-B			30-71-21	050-099
<b>GD01092</b>		<b>AC</b>				<b>0610/147/L077</b>	<b>050-099</b>
A..	E	W1258	R-B			30-71-21	050-099

**GROUND LIST**

D280T132

**91-21-21**

Section GD01000

Page 3 End

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD01114</b>		<b>YHLZG16</b>				<b>0358/294/R062</b>	<b>ALL</b>
A..	E	W0222	166	20		33-22-31	050-099, 150-199
D..	2	W0665	031	20		23-42-11	ALL
D..	2	W0832	018	18		33-51-12	050-099
D..	2	W0832	033	20		33-51-12	050-099
S..	2	W1216	030	20		21-45-21	ALL
D..	2	W1222	033	18		33-51-12	150-199, 275-299
D..	2	W1222	034	20		33-51-12	150-199, 275-299
D..	2	W1222	035	18		33-51-12	ALL
D..	2	W1222	036	20		33-51-12	050-099, 150-199
D..	2	W1222	084	18		33-51-12	050-099
D..	2	W1222	175	20		30-46-11	ALL
S..	2	W1222	176	20		30-46-11	ALL
A..	2	W1228	121	18		33-27-11	050-099
A..	2	W1228	123	18		33-27-11	050-099
S..	2	W1228	187	20		21-45-21	275-299
A..	2	W1228	190	20		21-45-21	275-299
A..	2	W1228	191	20		21-45-21	275-299
A..	2	W1228	193	20		21-45-21	275-299
S..	2	W1228	194	18		21-45-21	275-299
S..	2	W1228	501	20		21-45-21	275-299
S..	2	W1228	602	20		33-27-11	150-199
S..	2	W1228	605	20		33-27-11	150-199
A..	2	W1228	606	20		33-27-11	150-199
DED		W1228	606Z			33-27-11	155-156, 166
A..	2	W1228	609	20		33-27-11	150-199
DED		W1228	609Z			33-27-11	155-156, 166
S..	2	W1228	610	20		33-27-11	150-199
S..	2	W1228	611	20		33-27-11	150-199
A..	2	W1230	007	20		33-22-31	275-299
A..	2	W1230	020	20		33-22-11	ALL
<b>GD01120</b>		<b>YHLZG16</b>				<b>1476/290/R060</b>	<b>ALL</b>
D..	2	W0790	126	20		30-46-11	ALL
S..	2	W0790	127	20		30-46-11	ALL
A..	2	W0814	879	20		33-26-21	150-199
A..	2	W0818	148	20		33-22-42	275-299
S..	2	W0818	179	20		33-22-42	275-299
A..	2	W0818	187	20		33-22-42	050-099
A..	2	W0818	187	20		33-27-11	275-299
A..	2	W0818	196	20		33-22-42	050-099

## GROUND LIST

D280T132

**91-21-21**

Section GD01100

Page 1

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD01120</b>		<b>YHLZG16 (continued)</b>				<b>1476/290/R060</b>	<b>ALL</b>
A..	2	W0818	196	20		33-27-11	275-299
S..	2	W0818	503	20		33-22-42	050-099
S..	2	W0818	503	20		33-27-11	275-299
A..	2	W0818	536	20		33-22-42	150-199
A..	2	W0818	606	20		33-22-42	050-099, 150-199
A..	2	W0818	607	20		33-22-42	150-199
<b>GD01126</b>		<b>YHLZG16</b>				<b>1476/290/L060</b>	<b>ALL</b>
A..	2	W0216	063	20		25-31-21	275-299
A..	2	W0216	064	20		25-31-21	275-299
A..	2	W0216	065	20		25-31-21	275-299
A..	2	W0216	071	20		25-31-21	275-299
A..	2	W0216	072	20		25-31-21	275-299
A..	2	W0216	073	20		25-31-21	275-299
A..	2	W0216	079	20		25-31-21	275-299
A..	2	W0216	080	20		25-31-21	275-299
A..	2	W0216	081	20		25-31-21	275-299
D..	2	W0724	049	20		35-21-12	150-199
D..	2	W0788	109	20		30-46-11	ALL
S..	2	W0788	110	20		30-46-11	ALL
A..	2	W0818	157	20		33-22-42	275-299
A..	2	W0818	166	20		33-22-42	275-299
S..	2	W0818	183	20		33-22-42	275-299
A..	2	W1240	076	18		33-22-31	050-099, 150-199
<b>GD01138</b>		<b>DC</b>				<b>1241/140/L076</b>	<b>ALL</b>
D..	E	W0934	003	20		21-44-11	ALL
D..	E	W0934	004	20		21-44-11	ALL
<b>GD01140</b>		<b>AC</b>				<b>1373/170/L086</b>	<b>ALL</b>
A..	E	W0578	024	20		21-44-11	ALL
A..	E	W0578	046	20		21-44-21	ALL
A..	E	W0580	118	20		21-44-21	ALL
<b>GD01146</b>		<b>AC</b>				<b>1373/170/L086</b>	<b>ALL</b>
A..	E	W0580	091	20		21-44-11	ALL
A..	E	W1258	146	20		30-71-23	050-099
A..	E	W1258	146	20		30-71-24	150-199
A..	E	W1258	147	20		30-71-23	150-199
A..	E	W1258	657	20		30-71-24	050-099

## GROUND LIST

D280T132

**91-21-21**

Section GD01100

Page 2

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD01146</b>		<b>AC (continued)</b>				<b>1373/170/L086</b>	<b>ALL</b>
A..	E	W1258	657	20		30-71-23	277-299

## GROUND LIST

D280T132

**91-21-21**

Section GD01100

Page 3 End

Mar 09/2006





# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD01206</b>		<b>YHLZG16</b>				<b>0411/145/L080</b>	<b>ALL</b>
D..	2	W0984	006	20		21-58-16	ALL
S..	2	W0984	010	20		21-58-16	ALL
<b>GD01208</b>		<b>DC</b>				<b>0478/115/L038</b>	<b>ALL</b>
D..	E	W0986	006	20		21-58-13	ALL
D..	E	W0986	008	20		21-58-13	ALL
<b>GD01226</b>		<b>SH</b>				<b>0213/185/L064</b>	<b>ALL</b>
S..	E	W0584	012	20		21-45-11	ALL
<b>GD01236</b>		<b>YHLZG16</b>				<b>0287/300/R060</b>	<b>ALL</b>
A..	2	W0222	180	18		30-71-25	050-099, 150-199
D..	2	W0665	041	20		23-42-12	150-199, 275-299
D..	2	W0665	108	20		23-42-11	050-099, 150-199
D..	2	W0832	024	20		33-51-14	275-299
D..	2	W0832	027	16		33-51-14	ALL
D..	2	W0832	034	20		33-51-12	050-099
D..	2	W1222	032	20		33-51-12	150-199, 275-299
A..	2	W1228	091	20		33-27-11	ALL
DED		W1228	091Z			33-27-11	155-156, 166
S..	2	W1228	097	20		33-27-11	ALL
A..	2	W1228	099	20		33-27-11	ALL
DED		W1228	099Z			33-27-11	155-156, 166
S..	2	W1228	105	20		33-27-11	ALL
D..	2	W1248	004	20		25-63-11	ALL
S..	2	W1248	006	20		25-63-11	ALL
<b>GD01264</b>		<b>YHLZG16</b>				<b>0371/194/R065</b>	<b>ALL</b>
D..	2	W0506	153	18		21-58-15	ALL
D..	2	W0506	158	20		21-58-16	ALL
D..	2	W0506	159	20		21-58-16	ALL
S..	2	W0506	160	20		21-58-16	ALL
<b>GD01266</b>		<b>SH</b>				<b>0368/177/R065</b>	<b>ALL</b>
S..	E	W0506	152	16		21-58-15	ALL
<b>GD01268</b>		<b>AC</b>				<b>1840/218/R045</b>	<b>ALL</b>
A..	N	W0270	004	18		33-31-31	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD01200

Page 1

Mar 09/2006



## 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD01270</b>		<b>AC</b>				<b>1841/218/L047</b>	<b>ALL</b>
A..	N	W0270	005	18		33-31-31	ALL
<b>GD01276</b>		<b>AC</b>				<b>0892/130/L062</b>	<b>ALL</b>
A..	N	W0938	A-B			33-31-21	ALL
<b>GD01278</b>		<b>AC</b>				<b>0848/114/L014</b>	<b>ALL</b>
A..	N	W0938	028	18		33-31-21	ALL
A..	N	W0938	A-D			33-31-21	ALL
<b>GD01292</b>		<b>SH</b>				<b>0848/112/L014</b>	<b>ALL</b>
S..	N	W0938	029	18		33-31-21	ALL
<b>GD01298</b>		<b>AC</b>				<b>1812/210/R030</b>	<b>ALL</b>
A..	H7	W0236	007	04		24-21-41	ALL

### GROUND LIST

D280T132

**91-21-21**

Section GD01200

Page 2 End

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD01300</b>		<b>DC</b>				<b>1812/210/R030</b>	<b>ALL</b>
D..	H8	W0246	003	*1		49-41-11	ALL
D..	H8	W0246	004	*1		49-41-11	ALL
<b>GD01314</b>		<b>AC</b>				<b>0290/174/0</b>	<b>ALL</b>
A..	E	W0624	056	18		25-29-11	ALL
<b>GD01316</b>		<b>SH</b>				<b>0290/174/R001</b>	<b>ALL</b>
S..	E	W0624	057	18		25-29-11	ALL
S..	E	W0656	185	20		78-36-21	ALL
<b>GD01326</b>		<b>AC</b>				<b>0175/165/R002</b>	<b>ALL</b>
A..	N	W0926	011	18		33-31-11	ALL
<b>GD01332</b>		<b>DC</b>				<b>1540/143/R015</b>	<b>ALL</b>
D..	E	W1358	10C	20		21-26-11	ALL
<b>GD01338</b>		<b>DC</b>				<b>1540/143/R015</b>	<b>ALL</b>
D..	E	W0966	087	22		38-32-11	050-099, 150-155, 162-165
D..	E	W0966	087	22		38-32-15	156, 166
D..	E	W0966	087	20		38-32-15	157, 167-199, 277-299
D..	E	W0966	087	20		38-32-14	275-276
D..	E	W1354	005	20		21-26-11	ALL
DED		W1354	005Z			21-26-11	ALL
D..	E	W1354	048	20		38-32-11	050-099, 150-155, 162-165
D..	E	W1354	048	20		38-32-15	156-157, 166-199, 277-299
D..	E	W1354	048	20		38-32-14	275-276
<b>GD01340</b>		<b>SH</b>				<b>1540/143/R015</b>	<b>ALL</b>
S..	E	W1354	006	16		21-26-11	ALL
S..	E	W1358	10A	16		21-26-11	ALL
<b>GD01384</b>		<b>SH</b>				<b>0390/112/0000</b>	<b>ALL</b>
S..	E	W0738	041	20		21-58-11	ALL
S..	E	W0986	071	20		21-28-11	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD01300

Page 1 End

Mar 09/2006



## 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD01440</b>		<b>AC</b>				<b>0632/207/R093</b>	<b>050-099</b>
A..	E	W0786	002	14		33-41-11	050-099
<b>GD01442</b>		<b>AC</b>				<b>0632/210/L095</b>	<b>050-099</b>
A..	E	W0784	002	14		33-41-11	050-099
<b>GD01448</b>		<b>AC</b>				<b>R0143/12/LE</b>	<b>ALL</b>
A..	N	W0656	078	12		33-42-11	ALL
<b>GD01450</b>		<b>AC</b>				<b>L0143/12/LE</b>	<b>ALL</b>
A..	N	W0602	083	12		33-42-11	ALL
A..	N	W0602	119	16		33-42-21	ALL
<b>GD01458</b>		<b>SH</b>				<b>0808/291/R065</b>	<b>050-099, 275-299</b>
S..	E	W0812	693	20		33-21-13	050-099, 275-299
<b>GD01460</b>		<b>AC</b>				<b>0889/288/R068</b>	<b>050-099</b>
A..	E	W0814	048	20		33-21-35	050-099
A..	E	W1256	108	20		21-45-22	050-099
A..	E	W1379	014	16		23-34-15	050-099
<b>GD01462</b>		<b>DC</b>				<b>0889/290/R065</b>	<b>050-099</b>
D..	E	W0834	073	16		33-51-12	050-099
<b>GD01464</b>		<b>AC</b>				<b>1021/290/R070</b>	<b>050-099</b>
A..	E	W0814	612	16		38-13-11	050-099
A..	E	W0814	641	20		33-26-11	050-099
<b>GD01466</b>		<b>SH</b>				<b>1021/290/R070</b>	<b>050-099</b>
S..	E	W0814	668	20		38-32-13	050-099
S..	E	W0816	595	20		33-21-14	050-099
<b>GD01474</b>		<b>SH</b>				<b>1108/294/R070</b>	<b>050-099</b>
S..	E	W0816	610	20		33-21-14	050-099
S..	E	W0818	005	20		33-21-35	050-099
<b>GD01476</b>		<b>AC</b>				<b>1196/294/R070</b>	<b>050-099</b>
A..	E	W0818	008	20		33-21-35	050-099
A..	E	W1445	003	16		23-34-18	050-099
A..	E	W1445	006	16		23-34-18	050-099

### GROUND LIST

D280T132

**91-21-21**  
Section GD01400  
Page 1  
Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD01478</b>		<b>SH</b>				<b>1196/294/R070</b>	<b>050-099</b>
S..	E	W0816	623	20		33-21-14	050-099
S..	E	W0818	009	20		33-21-35	050-099
<b>GD01486</b>		<b>SH</b>				<b>1284/294/R070</b>	<b>ALL</b>
S..	E	W0816	638	20		33-21-14	ALL
S..	E	W0818	037	20		33-21-35	ALL
<b>GD01490</b>		<b>YHLZG16</b>				<b>1559/167/L085</b>	<b>ALL</b>
D..	2	W0998	003	20		21-31-31	ALL
A..	2	W1358	U-B			30-71-23	050-099, 150-199, 277-299
A..	2	W1358	V-B			30-71-24	050-099
A..	2	W1358	V-B			30-71-23	150-199, 275-299
A..	2	W1358	Z-D			30-71-23	050-099
A..	2	W1358	Z-D			30-71-24	150-199
<b>GD01494</b>		<b>AC</b>				<b>0746/145/R074</b>	<b>050-099</b>
<b>GD01494</b>		<b>AC</b>				<b>0742/150/R074</b>	<b>150-199, 275-299</b>
A..	E	W0656	076	12		33-42-11	ALL
<b>GD01498</b>		<b>SH</b>				<b>1558/195/L045</b>	<b>ALL</b>
S..	E	W1358	042	20		38-32-14	050-099, 150-199, 277-299
S..	E	W1358	13G	12		38-32-11	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD01400

Page 2 End

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD01528</b>		<b>AC</b>				<b>1373/290/R070</b>	<b>ALL</b>
A..	E	W0816	656	20		33-21-34	050-099, 150-199
DED		W0816	656Z			33-21-34	166
A..	E	W0818	051	20		33-21-35	ALL
DED		W0818	051Z			33-21-35	155-156, 166
A..	E	W1240	005	20		33-21-21	150-199, 275-299
<b>GD01530</b>		<b>SH</b>				<b>1373/290/R070</b>	<b>ALL</b>
S..	E	W0816	651	20		33-21-14	ALL
S..	E	W0816	657	20		33-21-34	050-099, 150-199
S..	E	W0818	050	20		33-21-35	ALL
<b>GD01544</b>		<b>SH</b>				<b>0808/290/L065</b>	<b>050-099, 275-299</b>
S..	E	W0812	025	20		33-21-32	050-099, 275-299
S..	E	W0812	674	20		33-21-13	050-099
S..	E	W0812	679	20		33-21-13	050-099, 275-299
<b>GD01546</b>		<b>SH</b>				<b>0632/294/L065</b>	<b>050-099</b>
<b>GD01546</b>		<b>SH</b>				<b>0632/293/L064</b>	<b>150-199, 275-299</b>
S..	E	W0812	026	20		33-21-32	ALL
S..	E	W0812	183	20		33-21-11	ALL
S..	E	W0812	188	20		33-21-11	ALL
<b>GD01550</b>		<b>AC</b>				<b>0889/292/L065</b>	<b>050-099</b>
A..	E	W0812	044	20		33-21-34	050-099
A..	E	W0812	686	20		33-21-13	050-099
A..	E	W1256	097	20		21-45-22	050-099
A..	E	W1383	018	16		23-34-16	050-099
<b>GD01554</b>		<b>AC</b>				<b>1021/292/L065</b>	<b>050-099</b>
A..	E	W0792	005	16		38-13-11	050-099
A..	E	W0792	052	20		33-26-11	050-099
A..	E	W0812	047	20		33-21-34	050-099
A..	E	W0812	700	20		33-21-13	050-099
<b>GD01556</b>		<b>SH</b>				<b>1021/291/L065</b>	<b>050-099</b>
S..	E	W0792	892	20		38-32-12	050-099
S..	E	W0812	048	20		33-21-34	050-099
S..	E	W0812	701	20		33-21-13	050-099

## GROUND LIST

D280T132

**91-21-21**  
Section GD01500  
Page 1  
Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD01560</b>		<b>SH</b>				<b>0933/294/L080</b>	<b>050-099, 275-299</b>
S..	E	W0812	074	18		33-21-34	050-099
S..	E	W0812	701	20		33-21-13	275-299
S..	E	W0812	706	20		33-21-13	050-099
S..	E	W0812	714	20		33-21-13	050-099
S..	E	W0812	719	20		33-21-13	050-099
<b>GD01564</b>		<b>SH</b>				<b>1109/290/L052</b>	<b>050-099</b>
S..	E	W0816	108	18		33-21-34	050-099
S..	E	W0816	594	20		33-21-14	050-099
<b>GD01566</b>		<b>AC</b>				<b>1197/290/L056</b>	<b>050-099</b>
A..	E	W0816	111	20		33-21-34	050-099
A..	E	W1443	003	16		23-34-18	050-099
A..	E	W1443	006	16		23-34-18	050-099
<b>GD01568</b>		<b>SH</b>				<b>1197/290/L056</b>	<b>050-099</b>
S..	E	W0816	112	20		33-21-34	050-099
S..	E	W0816	609	20		33-21-14	050-099
S..	E	W0816	622	20		33-21-14	050-099
<b>GD01572</b>		<b>SH</b>				<b>1439/285/L065</b>	<b>ALL</b>
S..	E	W0816	134	20		33-21-34	150-157
S..	E	W0816	134	16		33-21-34	275-299
S..	E	W0816	645	20		33-21-14	150-199, 275-299
S..	E	W0816	650	20		33-21-14	ALL
<b>GD01574</b>		<b>SH</b>				<b>1285/290/L056</b>	<b>050-099</b>
<b>GD01574</b>		<b>SH</b>				<b>1285/290/L065</b>	<b>150-199, 275-299</b>
S..	E	W0816	140	20		33-21-34	ALL
S..	E	W0816	622	20		33-21-14	150-199, 275-299
<b>GD01578</b>		<b>SH</b>				<b>1373/290/L065</b>	<b>ALL</b>
S..	E	W0816	134	20		33-21-34	050-099, 162-199
S..	E	W0816	153	20		33-21-34	ALL
S..	E	W0816	637	20		33-21-14	ALL
S..	E	W0816	645	20		33-21-14	050-099
S..	E	W1220	005	16		25-29-12	150-199, 275-299
<b>GD01580</b>		<b>AC</b>				<b>1373/290/L065</b>	<b>050-099</b>

## GROUND LIST

D280T132

**91-21-21**

Section GD01500

Page 2

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD01580</b>		<b>AC</b>				<b>1373/291/L065</b>	<b>150-199, 275-299</b>
A..	E	W0788	054	20		33-21-21	150-199, 275-299
A..	E	W0788	141	20		33-21-21	050-099
A..	E	W0816	133	20		33-21-34	050-099, 162-199
DED		W0816	133Z			33-21-34	166
A..	E	W0816	154	20		33-21-34	ALL
DED		W0816	154Z			33-21-34	155-156, 166
A..	E	W0816	644	20		33-21-14	050-099
A..	E	W1232	567	16		21-73-11	275-299
<b>GD01582</b>		<b>SH</b>				<b>0456/291/L063</b>	<b>ALL</b>
S..	E	W0812	080	20		33-21-32	ALL
S..	E	W0812	156	20		33-21-11	275-299
S..	E	W0812	161	20		33-21-11	275-299
S..	E	W0812	18A	20		33-21-32	162-199
S..	E	W0812	21A	20		33-21-32	162-199
S..	E	W1220	004	16		25-29-12	150-199
<b>GD01586</b>		<b>SH</b>				<b>0544/294/L065</b>	<b>ALL</b>
S..	E	W0812	085	20		33-21-32	ALL
S..	E	W0812	170	20		33-21-11	ALL
S..	E	W0812	175	20		33-21-11	ALL
<b>GD01588</b>		<b>AC</b>				<b>0544/294/L065</b>	<b>ALL</b>
A..	E	W0812	086	20		33-21-32	ALL
DED		W0812	086Z			33-21-32	155-156, 166
A..	E	W0812	169	20		33-21-11	ALL
<b>GD01590</b>		<b>SH</b>				<b>0544/290/R068</b>	<b>050-099</b>
<b>GD01590</b>		<b>SH</b>				<b>0543/291/R065</b>	<b>150-199, 275-299</b>
S..	E	W0814	078	20		33-21-33	ALL
<b>GD01592</b>		<b>AC</b>				<b>0543/290/R068</b>	<b>050-099</b>
<b>GD01592</b>		<b>AC</b>				<b>0543/292/R064</b>	<b>150-199, 275-299</b>
A..	E	W0804	045	20		33-24-14	280-299
A..	E	W0804	545	20		33-24-14	280-299
A..	E	W0804	548	20		33-24-14	280-299
A..	E	W0814	077	20		33-21-33	ALL
DED		W0814	077Z			33-21-33	155-156, 166
A..	E	W0814	090	20		33-21-33	150-165
DED		W0814	090Z			33-21-33	155-156, 166

## GROUND LIST

D280T132

**91-21-21**  
Section GD01500  
Page 3  
Mar 09/2006





Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD01594</b>		<b>SH</b>				<b>0720/291/L065</b>	<b>050-099</b>
S..	E	W0812	109	20		33-21-32	050-099
S..	E	W0812	196	20		33-21-11	050-099
S..	E	W0812	502	20		33-21-11	050-099
<b>GD01596</b>		<b>AC</b>				<b>0720/291/L065</b>	<b>050-099</b>
A..	E	W0812	110	20		33-21-32	050-099
A..	E	W0812	195	20		33-21-11	050-099



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD01614</b>		<b>SH</b>				<b>0720/291/R085</b>	<b>050-099</b>
S..	E	W0812	680	20		33-21-13	050-099
S..	E	W0814	111	20		33-21-33	050-099
<b>GD01616</b>		<b>AC</b>				<b>0720/291/R085</b>	<b>050-099</b>
A..	E	W0814	112	20		33-21-33	050-099
<b>GD01618</b>		<b>SH</b>				<b>0632/291/R066</b>	<b>050-099</b>
<b>GD01618</b>		<b>SH</b>				<b>0631/291/R064</b>	<b>150-199, 275-299</b>
S..	E	W0812	647	20		33-21-11	150-199, 275-278
S..	E	W0814	113	20		33-21-33	ALL
<b>GD01620</b>		<b>AC</b>				<b>0632/291/R066</b>	<b>050-099</b>
A..	E	W0814	114	20		33-21-33	050-099
<b>GD01628</b>		<b>DC</b>				<b>1832/242/R034</b>	<b>ALL</b>
D..	N	W0242	013	20		49-14-11	ALL
D..	N	W0242	014	20		49-14-11	ALL
D..	N	W0242	016	20		49-94-11	150-199
D..	N	W0242	040	20		49-14-11	ALL
<b>GD01630</b>		<b>AC</b>				<b>1833/242/R041</b>	<b>ALL</b>
A..	N	W0242	033	18		33-31-31	ALL
<b>GD01632</b>		<b>SH</b>				<b>1746/275/R040</b>	<b>ALL</b>
S..	N	W0242	022	16		49-15-11	ALL
<b>GD01634</b>		<b>DC</b>				<b>1746/275/R040</b>	<b>ALL</b>
D..	N	W0242	023	20		49-15-11	ALL
D..	N	W0242	024	16		49-15-11	ALL
D..	N	W0242	025	20		49-15-11	ALL
D..	N	W0242	A-E			49-15-11	ALL
<b>GD01636</b>		<b>AC</b>				<b>L0416/12/LE</b>	<b>ALL</b>
A..	N	W0468	205R	12		33-43-11	ALL
A..	N	W0468	210	12		33-43-11	ALL
A..	N	W0468	211R	18		33-44-21	ALL
<b>GD01638</b>		<b>SH</b>				<b>L1118/12/RS</b>	<b>ALL</b>
S..	N	W0468	203Z			33-43-11	ALL

## GROUND LIST

D280T132

**91-21-21**  
Section GD01600  
Page 1  
Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD01638</b>		<b>SH (continued)</b>				<b>L1118/12/RS</b>	<b>ALL</b>
S..	N	W0468	204Z			33-43-11	ALL
S..	N	W0468	205Z			33-43-11	ALL
S..	N	W0468	208Z			33-43-11	ALL
S..	N	W0468	209Z			33-43-11	ALL
S..	N	W0468	210Z			33-43-11	ALL
<b>GD01640</b>		<b>SH</b>				<b>L1118/12/RS</b>	<b>ALL</b>
S..	N	W0468	202R	12		33-43-11	ALL
<b>GD01644</b>		<b>SH</b>				<b>R1118/12/RS</b>	<b>ALL</b>
S..	N	W0470	203Z			33-43-11	ALL
S..	N	W0470	204Z			33-43-11	ALL
S..	N	W0470	205Z			33-43-11	ALL
S..	N	W0470	208Z			33-43-11	ALL
S..	N	W0470	209Z			33-43-11	ALL
S..	N	W0470	210Z			33-43-11	ALL
<b>GD01646</b>		<b>SH</b>				<b>R1118/12/RS</b>	<b>ALL</b>
S..	N	W0470	202R	12		33-43-11	ALL
<b>GD01648</b>		<b>AC</b>				<b>R0416/12/LE</b>	<b>ALL</b>
A..	N	W0470	205R	12		33-43-11	ALL
A..	N	W0470	210	12		33-43-11	ALL
A..	N	W0470	211R	18		33-44-21	ALL
<b>GD01650</b>		<b>SH</b>				<b>L1140/12/TIP</b>	<b>ALL</b>
S..	N	W0468	003	18		33-44-21	ALL
S..	N	W0468	211Z			33-44-21	ALL
<b>GD01652</b>		<b>SH</b>				<b>L1140/12/TIP</b>	<b>ALL</b>
S..	N	W0468	204Z			33-43-11	ALL
S..	N	W0468	208Z			33-43-11	ALL
<b>GD01656</b>		<b>DC</b>				<b>L0422/14/LE</b>	<b>ALL</b>
D..	N	W0468	004	18		30-11-11	ALL
<b>GD01658</b>		<b>DC</b>				<b>R0422/12/LE</b>	<b>ALL</b>
D..	N	W0470	004	18		30-11-11	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD01600

Page 2

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD01662</b>		<b>YHLZG16</b>				<b>0400/300/L019</b>	<b>ALL</b>
D..	2	W0712	009	20		35-21-11	ALL
A..	2	W0814	611	20		33-26-11	275-299
A..	2	W0814	612	16		38-13-11	275-299
D..	2	W0814	628	20		38-32-13	275-276
D..	2	W0814	628	20		38-32-16	277-299
S..	2	W0814	629	20		38-32-13	275-276
S..	2	W0814	629	20		38-32-16	277-299
D..	2	W0814	636	20		33-25-11	275-299
D..	2	W0814	779	20		35-21-12	280-299
<b>GD01668</b>		<b>AC</b>				<b>1678/258/R062</b>	<b>ALL</b>
A..	N	W0242	A-B			33-31-31	ALL
<b>GD01670</b>		<b>AC</b>				<b>1832/258/R038</b>	<b>ALL</b>
A..	N	W0242	A-D			33-31-31	ALL
<b>GD01696</b>		<b>AC</b>				<b>0840/119/L010</b>	<b>ALL</b>
A..	N	W0508	010	20		21-61-11	ALL
A..	N	W0508	014	20		21-61-21	ALL
A..	N	W0508	018	20		21-61-31	ALL
A..	N	W0508	045	20		21-61-41	ALL
A..	N	W0508	059	20		21-61-61	ALL
A..	N	W0508	068	20		21-61-71	ALL
<b>GD01698</b>		<b>SH</b>				<b>0840/116/L010</b>	<b>ALL</b>
S..	N	W0508	011	20		21-61-11	ALL
S..	N	W0508	015	20		21-61-21	ALL
S..	N	W0508	019	20		21-61-31	ALL
S..	N	W0508	046	20		21-61-41	ALL
S..	N	W0508	064	20		21-61-61	ALL
S..	N	W0508	065	20		21-61-71	ALL

## GROUND LIST

D280T132

**91-21-21**  
Section GD01600  
Page 3 End  
Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD01714</b>		<b>DC</b>				<b>1147/264/R075</b>	<b>050-099</b>
D..	E	W0728	012	20		35-21-13	050-099
D..	E	W0728	015	20		35-21-13	050-099
D..	E	W0728	018	20		35-21-13	050-099
<b>GD01720</b>		<b>DC</b>				<b>1235/264/R075</b>	<b>050-099</b>
D..	E	W0728	021	20		35-21-13	050-099
D..	E	W0728	024	20		35-21-13	050-099
D..	E	W0728	028	20		35-21-13	050-099
<b>GD01726</b>		<b>DC</b>				<b>1323/264/R075</b>	<b>ALL</b>
D..	E	W0728	031	20		35-21-13	ALL
D..	E	W0728	034	20		35-21-13	ALL
D..	E	W0728	036	20		35-21-13	ALL
<b>GD01730</b>		<b>DC</b>				<b>1409/270/R073</b>	<b>ALL</b>
D..	E	W0728	039	20		35-21-13	ALL
D..	E	W0728	042	20		35-21-13	ALL
D..	E	W0728	045	20		35-21-13	ALL
D..	E	W0728	109	20		35-21-13	050-099
D..	E	W0728	110	20		35-21-13	150-199
<b>GD01742</b>		<b>DC</b>				<b>0248/193/L063</b>	<b>ALL</b>
D..	E	W0638	003	20		21-61-11	ALL
D..	E	W0638	005	20		21-65-11	ALL
<b>GD01748</b>		<b>YHLZG16</b>				<b>1020/295/L015</b>	<b>ALL</b>
A..	2	W0792	192	20		33-26-21	050-099
A..	2	W0822	098	20		33-21-13	150-199
S..	2	W0822	099	20		33-21-13	150-199
S..	2	W0822	104	20		33-21-13	150-199
S..	2	W0822	105	20		33-21-13	150-199
A..	2	W0822	124	20		33-21-13	050-099
S..	2	W0822	125	20		33-21-13	050-099
S..	2	W0822	130	20		33-21-13	050-099
S..	2	W0824	064	20		33-21-14	050-099
A..	2	W0824	065	20		33-21-14	ALL
S..	2	W0824	066	20		33-21-14	ALL
A..	2	W1146	005	20		33-24-13	275
A..	2	W1146	105	20		33-24-13	050-099, 276-299
D..	2	W1168	004	20		35-21-14	150-199, 275

## GROUND LIST

D280T132

**91-21-21**

Section GD01700

Page 1

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD01748</b>		<b>YHLZG16 (continued)</b>				<b>1020/295/L015</b>	<b>ALL</b>
D..	2	W1168	007	20		35-21-14	150-199, 275
D..	2	W1168	010	20		35-21-14	150-199, 275
D..	2	W1168	102	20		35-21-14	050-099, 276-299
D..	2	W1168	112	20		35-21-14	050-099, 276-299
A..	2	W1280	012	20		33-24-13	150-199
A..	2	W1280	062	20		33-24-13	150-199
<b>GD01750</b>		<b>YHLZG16</b>				<b>1108/295/L015</b>	<b>ALL</b>
A..	2	W0811	008	20		23-25-17	156-157, 166-199, 277-299
S..	2	W0811	009	20		23-25-17	156-157, 166-199, 277-299
D..	2	W0811	013	20		23-25-17	156-157, 166-199, 277-299
A..	2	W0813	003	20		23-25-17	156-157, 166-199, 277-299
S..	2	W0813	004	20		23-25-17	156-157, 166-199, 277-299
S..	2	W0824	011	20		33-21-14	050-099
S..	2	W0824	063	20		33-21-14	050-099
A..	2	W1146	010	20		33-24-13	275
A..	2	W1146	015	20		33-24-13	150-199, 275
A..	2	W1146	020	20		33-24-13	150-199, 275
A..	2	W1146	025	20		33-24-13	150-199, 275
A..	2	W1146	135	20		33-24-13	050-099, 276-299
A..	2	W1146	145	20		33-24-13	050-099, 276-299
D..	2	W1168	013	20		35-21-14	150-199, 275
D..	2	W1168	016	20		35-21-14	150-199, 275
D..	2	W1168	122	20		35-21-14	050-099, 276-299
D..	2	W1168	132	20		35-21-14	050-099, 276-299
D..	2	W1168	142	20		35-21-14	050-099, 276-299
A..	2	W1417	010	20		23-32-11	050-099
D..	2	W1417	033	20		23-32-13	050-099
S..	2	W1417	034	20		23-32-13	050-099
D..	2	W9023	013	20		23-25-17	150, 153-155, 162-165
A..	2	W9031	008	20		23-25-17	150, 153-155, 162-165
S..	2	W9031	009	20		23-25-17	150, 153-155, 162-165
A..	2	W9032	003	20		23-25-17	150, 153-155, 162-165
S..	2	W9032	004	20		23-25-17	150, 153-155, 162-165
<b>GD01756</b>		<b>YHLZG16</b>				<b>1197/280/L015</b>	<b>ALL</b>
D..	2	W0665	162	20		23-42-11	050-099
D..	2	W0665	165	20		23-42-11	050-099
S..	2	W0824	010	20		33-21-14	050-099
S..	2	W0824	024	20		33-21-14	050-099

## GROUND LIST

D280T132

**91-21-21**

Section GD01700

Page 2

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD01756</b>		<b>YHLZG16 (continued)</b>				<b>1197/280/L015</b>	<b>ALL</b>
A..	2	W1148	005	20		33-24-13	150-199, 275
A..	2	W1148	010	20		33-24-13	150-199, 275
A..	2	W1148	105	20		33-24-13	050-099, 276-299
A..	2	W1148	115	20		33-24-13	050-099, 276-299
A..	2	W1148	125	20		33-24-13	050-099
D..	2	W1170	003	20		35-21-14	150-199, 275
D..	2	W1170	006	20		35-21-14	150-199, 275
D..	2	W1170	102	20		35-21-14	050-099, 276-299
D..	2	W1170	112	20		35-21-14	050-099, 276-299
D..	2	W1170	122	20		35-21-14	050-099, 276-299
<b>GD01758</b>		<b>YHLZG16</b>				<b>1152/295/L015</b>	<b>ALL</b>
A..	2	W0815	006	20		23-25-11	156-157, 166-199, 277-299
S..	2	W0815	007	20		23-25-11	156-157, 166-199, 277-299
S..	2	W0815	201	20		23-25-11	156-157, 166-199, 277-299
S..	2	W0815	202	20		23-25-11	156-157, 166-199, 277-299
A..	2	W0824	004	20		33-21-14	ALL
S..	2	W0824	005	20		33-21-14	ALL
S..	2	W0824	010	20		33-21-14	150-199, 275-299
S..	2	W0824	100	20		33-21-14	150-199, 275-299
A..	2	W1387	003	16		23-34-19	ALL
A..	2	W1387	015	16		23-34-19	050-099, 150-199, 275-278
<b>GD01760</b>		<b>YHLZG16</b>				<b>1284/295/L015</b>	<b>ALL</b>
A..	2	W0824	017	20		33-21-14	ALL
S..	2	W0824	018	20		33-21-14	ALL
S..	2	W0824	023	20		33-21-14	ALL
A..	2	W0824	031	20		33-21-14	ALL
S..	2	W0824	032	20		33-21-14	ALL
S..	2	W0824	038	20		33-21-14	ALL
A..	2	W1150	105	20		33-24-13	050-099
A..	2	W2064	025	20		33-24-13	150-199, 275
A..	2	W2064	145	20		33-24-13	276-299
D..	2	W2068	015	20		35-21-14	150-199, 275
D..	2	W2068	142	20		35-21-14	276-299
<b>GD01764</b>		<b>YHLZG16</b>				<b>1241/280/L015</b>	<b>ALL</b>
A..	2	W1148	135	20		33-24-13	050-099
A..	2	W1148	145	20		33-24-13	050-099
D..	2	W1170	132	20		35-21-14	050-099

## GROUND LIST

D280T132

**91-21-21**

Section GD01700

Page 3

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD01764</b>		<b>YHLZG16 (continued)</b>				<b>1241/280/L015</b>	<b>ALL</b>
D..	2	W1170	142	20		35-21-14	050-099
A..	2	W2064	020	20		33-24-13	150-199, 275
A..	2	W2064	135	20		33-24-13	276-299
D..	2	W2068	012	20		35-21-14	150-199, 275
D..	2	W2068	132	20		35-21-14	276-299
<b>GD01774</b>		<b>YHLZG16</b>				<b>1372/295/L015</b>	<b>ALL</b>
S..	2	W0770	107	20		21-66-41	150, 152-199
A..	2	W0770	120	20		21-66-41	150, 152-199
S..	2	W0770	121	20		21-66-41	050-099, 150, 152-199
D..	2	W0770	124	20		21-66-41	050-099, 150, 152-199
S..	2	W0770	126	20		21-66-41	050-099, 150, 152-199
S..	2	W0770	127	20		21-66-41	050-099, 150, 152-199
S..	2	W0770	128	20		21-66-41	050-099, 150, 152-199
S..	2	W0770	201	20		21-66-41	050-099, 150, 152-199
S..	2	W0770	300	20		21-66-41	050-099, 150, 152-199
S..	2	W0824	037	20		33-21-14	ALL
S..	2	W0824	051	20		33-21-14	ALL
A..	2	W1150	020	20		33-24-13	150-199, 275
A..	2	W1150	025	20		33-24-13	150-199, 275
A..	2	W1150	115	20		33-24-13	050-099
A..	2	W1150	125	20		33-24-13	050-099
A..	2	W1150	135	20		33-24-13	050-099, 276-299
A..	2	W1150	145	20		33-24-13	050-099, 276-299
D..	2	W1172	013	20		35-21-14	150-199, 275
D..	2	W1172	016	20		35-21-14	150-199, 275
D..	2	W1172	132	20		35-21-14	050-099, 276-299
D..	2	W1172	142	20		35-21-14	050-099, 276-299
<b>GD01776</b>		<b>YHLZG16</b>				<b>1416/295/L015</b>	<b>ALL</b>
S..	2	W0770	107	20		21-66-41	050-099
A..2		W0770	120	20		21-66-41	050-099
A..	2	W0824	044	20		33-21-14	ALL
S..	2	W0824	045	20		33-21-14	ALL
S..	2	W0824	050	20		33-21-14	ALL
A..	2	W1152	005	20		33-24-13	150-199, 275
A..	2	W1152	010	20		33-24-13	150-199
A..	2	W1152	105	20		33-24-13	050-099, 276-299
D..	2	W1174	003	20		35-21-14	150-199, 275
D..	2	W1174	005	20		35-21-14	275

## GROUND LIST

D280T132

**91-21-21**

Section GD01700

Page 4

Mar 09/2006





# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD01776</b>		<b>YHLZG16 (continued)</b>				<b>1416/295/L015</b>	<b>ALL</b>
D..	2	W1174	008	20		35-21-14	150-199, 275
D..	2	W1174	102	20		35-21-14	050-099, 276-299
A..	2	W1232	137	20		21-66-31	050-099, 150, 152-199
S..	2	W1232	138	20		21-66-31	050-099, 150, 152-199
D..	2	W1232	141	20		21-66-31	050-099, 150, 152-199
S..	2	W1232	143	20		21-66-31	050-099, 150, 152-199
S..	2	W1232	144	20		21-66-31	050-099, 150, 152-199
S..	2	W1232	145	20		21-66-31	050-099, 150, 152-199
S..	2	W1232	146	20		21-66-31	050-099, 150, 152-199
S..	2	W1232	204	20		21-66-31	050-099, 150, 152-199
S..	2	W1232	304	18		21-66-31	050-099, 150, 152-199
<b>GD01792</b>		<b>DC</b>				<b>1147/270/L073</b>	<b>050-099</b>
D..	E	W0724	012	20		35-21-12	050-099
D..	E	W0724	015	20		35-21-12	050-099
D..	E	W0724	018	20		35-21-12	050-099
<b>GD01798</b>		<b>DC</b>				<b>1235/270/L073</b>	<b>050-099</b>
D..	E	W0724	021	20		35-21-12	050-099
D..	E	W0724	024	20		35-21-12	050-099
D..	E	W0724	028	20		35-21-12	050-099

## GROUND LIST

D280T132

**91-21-21**

Section GD01700

Page 5 End

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD01804</b>		<b>DC</b>				<b>1323/270/L073</b>	<b>ALL</b>
D..	E	W0724	031	20		35-21-12	ALL
D..	E	W0724	034	20		35-21-12	ALL
D..	E	W0724	036	20		35-21-12	ALL
<b>GD01810</b>		<b>DC</b>				<b>1410/270/L073</b>	<b>ALL</b>
D..	E	W0724	039	20		35-21-12	ALL
D..	E	W0724	042	20		35-21-12	ALL
D..	E	W0724	045	20		35-21-12	ALL
D..	E	W0724	110	20		35-21-12	050-099, 150-199
<b>GD01820</b>		<b>AC</b>				<b>0266/276/R063</b>	<b>ALL</b>
A..	G	W0220	004	04		25-31-11	275-299
A..	G	W0222	074	20		33-27-11	275-299
A..	G	W0222	096	10		25-31-11	050-099, 150-199
A..	G	W0222	139	20		25-31-11	275-278
A..	G	W0222	605	20		33-24-14	050-099, 150-199
A..	G	W0282	106	20		SPARE	150-199
A..	G	W0282	106	20		33-24-14	275-299
<b>GD01822</b>		<b>AC</b>				<b>1554/282/L062</b>	<b>050-099, 275-299</b>
<b>GD01822</b>		<b>AC</b>				<b>1555/282/L062</b>	<b>150-199</b>
A..	G	W0226	008	04		25-31-21	050-099, 150-199
A..	G	W0226	008	06		25-31-21	275-299
<b>GD01830</b>		<b>DC</b>				<b>0913/265/L075</b>	<b>050-099</b>
D..	E	W0718	051	20		35-21-12	050-099
D..	E	W0718	054	20		35-21-12	050-099
D..	E	W0718	057	20		35-21-12	050-099
<b>GD01836</b>		<b>DC</b>				<b>0971/265/L075</b>	<b>050-099</b>
D..	E	W0718	060	20		35-21-12	050-099
D..	E	W0718	063	20		35-21-12	050-099
D..	E	W0718	064	20		35-21-12	050-099
<b>GD01854</b>		<b>DC</b>				<b>0494/266/L075</b>	<b>ALL</b>
D..	E	W0718	005	20		35-21-12	050-099
D..	E	W0718	008	20		35-21-12	050-099
D..	E	W0718	011	20		35-21-12	ALL
D..	E	W0718	014	20		35-21-12	ALL

## GROUND LIST

D280T132

**91-21-21**  
Section GD01800  
Page 1  
Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD01854</b>		<b>DC (continued)</b>				<b>0494/266/L075</b>	<b>ALL</b>
D..	E	W0718	017	20		35-21-12	ALL
<b>GD01860</b>		<b>DC</b>				<b>0582/266/L075</b>	<b>ALL</b>
D..	E	W0718	019	20		35-21-12	ALL
D..	E	W0718	022	20		35-21-12	ALL
D..	E	W0718	025	20		35-21-12	ALL
<b>GD01866</b>		<b>DC</b>				<b>0670/265/L075</b>	<b>050-099</b>
D..	E	W0718	028	20		35-21-12	050-099
D..	E	W0718	031	20		35-21-12	050-099
D..	E	W0718	034	20		35-21-12	050-099
<b>GD01872</b>		<b>DC</b>				<b>0758/265/L075</b>	<b>050-099</b>
D..	E	W0718	037	20		35-21-12	050-099
D..	E	W0718	040	20		35-21-12	050-099
D..	E	W0718	043	20		35-21-12	050-099
<b>GD01876</b>		<b>AC</b>				<b>1558/280/R070</b>	<b>ALL</b>
A..	G	W0304	010	20		33-27-11	275-299
A..	G	W0308	007	04		25-31-31	050-099, 150-199
A..	G	W0308	007	08		25-31-31	275-299
A..	G	W1240	125	20		33-22-31	150-164
<b>GD01878</b>		<b>DC</b>				<b>0304/128/R046</b>	<b>ALL</b>
D..	F	W0218	002	04		24-31-11	ALL
<b>GD01880</b>		<b>AC</b>				<b>0304/130/R051</b>	<b>ALL</b>
A..	E	W0256	012	14		24-33-11	ALL
<b>GD01882</b>		<b>SH</b>				<b>0304/130/R051</b>	<b>ALL</b>
S..	E	W0256	002	20		24-31-11	ALL
S..	E	W0256	013	14		24-33-11	ALL
<b>GD01884</b>		<b>DC</b>				<b>0304/130/R051</b>	<b>ALL</b>
D..	E	W0218	004	06		24-33-11	ALL
D..	E	W0248	046	20		24-41-12	ALL
D..	E	W0256	015	20		24-31-11	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD01800

Page 2

Mar 09/2006



## 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD01886</b>		<b>DC</b>				<b>0305/126/0000</b>	<b>ALL</b>
D..	F	W0258	003	*1		24-31-11	ALL
<b>GD01888</b>		<b>DC</b>				<b>1558/280/R070</b>	<b>ALL</b>
D..	E	W0286	011	20		25-33-11	050-099, 150-199, 275-276
D..	E	W0286	012	20		25-33-11	050-099, 150-199, 275-276
D..	E	W0304	005	20		25-31-31	050-099, 150-199
D..	E	W0304	012	16		25-31-31	275-299
D..	E	W0304	021	16		33-51-12	275-299
D..	E	W0304	024	18		SPARE	280-299
<b>GD01890</b>		<b>DC</b>				<b>1562/195/R035</b>	<b>ALL</b>
D..	E	W0284	011	20		25-33-11	ALL
D..	E	W0284	012	20		25-33-11	ALL
D..	E	W0966	010	20		38-14-11	ALL
<b>GD01892</b>		<b>DC</b>				<b>0256/179/R079</b>	<b>ALL</b>
D..	E	W0282	011	20		25-33-11	ALL
D..	E	W0282	012	20		25-33-11	ALL
<b>GD01894</b>		<b>SH</b>				<b>1562/195/R035</b>	<b>050-099, 150-199</b>
S..	E	W1358	N-F			30-71-24	050-099, 150-199
<b>GD01896</b>		<b>SH</b>				<b>1562/195/R035</b>	<b>ALL</b>
S..	E	W0284	021	14		25-33-11	ALL
S..	E	W0286	021	14		25-33-11	ALL
S..	E	W0966	011	20		38-14-11	ALL
<b>GD01898</b>		<b>SH</b>				<b>0256/187/R079</b>	<b>ALL</b>
S..	E	W0282	013	16		25-33-11	ALL

### GROUND LIST

D280T132

**91-21-21**

Section GD01800

Page 3 End

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD01906</b>		<b>YHLZG16</b>				<b>1065/295/L015</b>	<b>ALL</b>
A..	2	W0809	004	20		23-25-16	156-157, 166-199, 277-299
S..	2	W0809	005	20		23-25-16	156-157, 166-199, 277-299
S..	2	W0809	205	20		23-25-16	156-157, 166-199, 277-299
S..	2	W0809	206	20		23-25-16	156-157, 166-199, 277-299
S..	2	W0824	011	20		33-21-14	150-199, 275-299
S..	2	W0824	063	20		33-21-14	150-199, 275-299
A..	2	W1146	005	20		33-24-13	150-199
A..	2	W1146	010	20		33-24-13	150-199
A..	2	W1146	115	20		33-24-13	050-099, 276-299
A..	2	W1146	125	20		33-24-13	050-099, 276-299
D..	2	W1234	031	20		21-65-11	ALL
A..	2	W9019	004	20		23-25-16	150, 153-155, 162-165
S..	2	W9019	005	20		23-25-16	150, 153-155, 162-165
S..	2	W9019	205	20		23-25-16	150, 153-155, 162-165
S..	2	W9019	206	20		23-25-16	150, 153-155, 162-165
<b>GD01916</b>		<b>YHLZG16</b>				<b>0411/295/L013</b>	<b>ALL</b>
S..	2	W0822	077	20		33-21-11	275-299
A..	2	W1138	007	20		33-24-13	150-199
A..	2	W1138	010	20		33-24-13	150-199, 275
A..	2	W1138	015	20		33-24-13	150-199, 275
A..	2	W1138	115	20		33-24-13	050-099, 276-299
A..	2	W1138	125	20		33-24-13	050-099, 276-299
D..	2	W1160	007	20		35-21-14	150-199, 275
D..	2	W1160	010	20		35-21-14	150-199, 275
D..	2	W1160	112	20		35-21-14	050-099, 276-299
D..	2	W1160	122	20		35-21-14	050-099, 276-299
S..	2	W1230	506	20		21-66-11	050-099, 162-199
D..	2	W1230	507	20		21-66-11	050-099, 162-199
S..	2	W1232	102	20		21-66-11	050-099, 162-199
A..	2	W1232	106	20		21-66-11	050-099, 162-199
S..	2	W1232	108	20		21-66-11	050-099, 162-199
S..	2	W1232	111	20		21-66-11	050-099, 162-199
S..	2	W1232	202	20		21-66-11	050-099, 162-199
S..	2	W1232	203	20		21-66-11	050-099, 162-199
<b>GD01918</b>		<b>YHLZG16</b>				<b>0455/295/L013</b>	<b>ALL</b>
A..	2	W0770	101	18		21-66-21	050-099, 162-199
S..	2	W0770	102	18		21-66-21	050-099, 162-199
S..	2	W0770	103	20		21-66-21	050-099, 162-199

## GROUND LIST

D280T132

**91-21-21**

Section GD01900

Page 1

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD01918</b>		<b>YHLZG16 (continued)</b>				<b>0455/295/L013</b>	<b>ALL</b>
S..	2	W0770	106	20		21-66-21	050-099, 162-199
S..	2	W0770	302	18		21-66-21	050-099, 162-199
S..	2	W0822	076	20		33-21-11	275-299
S..	2	W0822	090	20		33-21-11	ALL
S..	2	W0822	680	20		SPARE	280-299
A..	2	W0822	681	20		SPARE	280-299
A..	2	W0822	686	20		33-21-11	280-299
S..	2	W0822	687	20		33-21-11	280-299
S..	2	W0822	688	20		33-21-11	280-299
A..	2	W0822	689	20		33-21-11	280-299
S..	2	W0822	690	20		33-21-11	280-299
A..	2	W0822	691	20		33-21-11	280-299
A..	2	W0822	692	20		33-21-11	280-299
S..	2	W0822	693	20		33-21-11	280-299
A..	2	W1138	020	20		33-24-13	150-199, 275
A..	2	W1138	135	20		33-24-13	050-099, 276-299
D..	2	W1160	013	20		35-21-14	150-199, 275
D..	2	W1160	132	20		35-21-14	050-099, 276-299
A..	2	W1230	124	20		33-27-11	162-199
D..	2	W1236	189	20		21-66-21	050-099, 162-199
S..	2	W1236	190	20		21-66-21	050-099, 162-199
S..	2	W1236	191	20		21-66-21	050-099, 162-199
S..	2	W1236	207	20		21-66-21	050-099, 162-199
<b>GD01920</b>		<b>YHLZG16</b>				<b>0500/295/L013</b>	<b>ALL</b>
A..	2	W0822	043	20		33-21-11	280-299
S..	2	W0822	044	20		33-21-11	280-299
S..	2	W0822	051	20		33-21-11	280-299
A..	2	W0822	068	20		33-21-11	275-299
S..	2	W0822	069	20		33-21-11	275-299
A..	2	W0822	081	20		33-21-11	ALL
A..	2	W1138	025	20		33-24-13	150-199, 275
A..	2	W1138	145	20		33-24-13	050-099, 276-299
D..	2	W1160	016	20		35-21-14	150-199, 275
D..	2	W1160	142	20		35-21-14	050-099, 276-299
A..	2	W1230	005	20		33-22-21	050-099
D..	2	W1232	103	20		21-66-11	050-099, 162-199
D..	2	W1232	104	20		21-66-11	050-099, 162-199
A..	2	W1232	128	20		21-66-11	050-099, 162-199

## GROUND LIST

D280T132

**91-21-21**

Section GD01900

Page 2

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD01924</b>		<b>YHLZG16</b>				<b>0544/295/L013</b>	<b>ALL</b>
D..	2	W0798	002	20		21-65-11	050-099, 150-199, 280-299
A..	2	W0798	005	20		33-44-11	ALL
S..	2	W0798	006	18		33-44-11	ALL
D..	2	W0798	008	20		21-65-11	ALL
A..	2	W0814	525	20		33-26-21	280-299
S..	2	W0822	082	20		33-21-11	ALL
S..	2	W0822	089	20		33-21-11	ALL
S..	2	W0822	091	20		33-21-11	ALL
A..	2	W1140	005	20		33-24-13	150-199, 275
A..	2	W1140	010	20		33-24-13	150-199, 275
A..	2	W1140	015	20		33-24-13	150-199, 275
A..	2	W1140	020	20		33-24-13	150-199, 275
A..	2	W1140	105	20		33-24-13	050-099, 276-299
A..	2	W1140	115	20		33-24-13	050-099, 276-299
A..	2	W1140	125	20		33-24-13	050-099, 276-299
A..	2	W1140	135	20		33-24-13	050-099, 276-299
D..	2	W1162	004	20		35-21-14	150-199, 275
D..	2	W1162	007	20		35-21-14	150-199, 275
D..	2	W1162	009	20		35-21-14	150-199, 275
D..	2	W1162	102	20		35-21-14	050-099, 276-299
D..	2	W1162	112	20		35-21-14	050-099, 276-299
D..	2	W1162	122	20		35-21-14	050-099, 276-299
D..	2	W1234	802	20		21-61-61	ALL
<b>GD01930</b>		<b>YHLZG16</b>				<b>0631/295/L014</b>	<b>ALL</b>
D..	2	W0665	157	20		23-42-11	050-099, 150-199
D..	2	W0665	161	20		23-42-11	050-099, 150-199
A..	2	W0822	043	20		33-21-11	050-099, 150-199, 275-278
S..	2	W0822	044	20		33-21-11	050-099, 150-199, 275-278
S..	2	W0822	051	20		33-21-11	050-099, 150-199, 275-278
A..	2	W0822	055	20		33-21-11	050-099
S..	2	W0822	056	20		33-21-11	050-099
S..	2	W0822	092	20		33-21-11	050-099
S..	2	W0822	168	20		33-21-11	150-199, 275-278
A..	2	W1140	025	20		33-24-13	150-199, 275
A..	2	W1140	145	20		33-24-13	050-099, 276-299
D..	2	W1162	012	20		35-21-14	150-199, 275
D..	2	W1162	016	20		35-21-14	150-199, 275
D..	2	W1162	132	20		35-21-14	050-099, 276-299
D..	2	W1162	142	20		35-21-14	050-099, 276-299

## GROUND LIST

D280T132

**91-21-21**

Section GD01900

Page 3

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD01930</b>		<b>YHLZG16 (continued)</b>				<b>0631/295/L014</b>	<b>ALL</b>
D..	2	W1282	004	20		35-21-14	150-199
A..	2	W1381	016	16		23-34-17	275-299
A..	2	W1381	018	16		23-34-17	150-199, 275-278
A..	2	W1417	009	20		23-32-11	050-099
D..	2	W1417	027	20		23-32-13	050-099
S..	2	W1417	028	20		23-32-13	050-099
<b>GD01940</b>		<b>YHLZG16</b>				<b>0764/295/L014</b>	<b>050-099</b>
<b>GD01940</b>		<b>YHLZG16</b>				<b>0764/294/L014</b>	<b>150-199, 275-299</b>
A..	2	W0792	038	20		33-26-21	050-099, 275-299
A..	2	W0822	055	20		33-21-13	275-278
S..	2	W0822	056	20		33-21-13	275-278
S..	2	W0822	063	20		33-21-13	275-278
A..	2	W0822	098	20		33-21-13	275-299
S..	2	W0822	099	20		33-21-13	275-299
S..	2	W0822	104	20		33-21-13	050-099
S..	2	W0822	105	20		33-21-13	050-099, 275-299
A..	2	W0822	111	20		33-21-13	050-099
S..	2	W0822	112	20		33-21-13	050-099
S..	2	W0822	131	20		33-21-13	150-199
S..	2	W0822	505	20		33-21-11	150-199
A..	2	W0822	508	20		33-21-11	150-199
S..	2	W0822	512	20		33-21-11	150-199
D..	2	W1234	029	20		21-65-11	ALL
D..	2	W1234	032	20		21-61-41	ALL
D..	2	W1234	804	20		21-61-71	ALL
D..	2	W1236	032	20		21-61-31	ALL
D..	2	W1236	034	20		21-65-11	ALL
D..	2	W1236	155	20		21-65-11	ALL
A..	2	W1280	037	20		33-24-13	150-199
A..	2	W1280	145	20		33-24-13	050-099
D..	2	W1282	007	20		35-21-14	275-278
D..	2	W1282	027	20		35-21-14	150-199
D..	2	W1282	066	20		35-21-14	150-199
D..	2	W1282	142	20		35-21-14	050-099
D..	2	W1282	582	20		35-21-14	280-299
A..	2	W2062	025	20		33-24-13	275
A..	2	W2062	145	20		33-24-13	276-299
D..	2	W2066	142	20		35-21-14	276-299

## GROUND LIST

D280T132

**91-21-21**

Section GD01900

Page 4

Mar 09/2006





# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD01944</b>		<b>YHLZG16</b>				<b>0888/295/L015</b>	<b>ALL</b>
D..	2	W0665	032	20		23-42-11	275-299
D..	2	W0790	052	20		33-51-13	150-199
D..	2	W0790	077	20		33-51-13	150-199
D..	2	W0790	165	16		33-51-13	155, 157
D..	2	W0790	190	18		33-51-13	155, 157
A..	2	W0792	072	20		33-26-21	275-299
A..	2	W0822	111	20		33-21-13	275-299
S..	2	W0822	112	20		33-21-13	275-299
S..	2	W0822	117	20		33-21-13	050-099, 275-299
S..	2	W0822	144	20		33-21-13	050-099
D..	2	W0834	041	18		33-51-12	050-099
D..	2	W0834	043	20		33-51-12	050-099
D..	2	W1166	102	20		35-21-14	050-099
D..	2	W1166	112	20		35-21-14	050-099
A..	2	W1280	059	20		33-24-13	150-199
D..	2	W1282	013	20		35-21-14	275-278
D..	2	W1282	018	20		35-21-14	150-199, 275-278
D..	2	W1282	021	20		35-21-14	275-278
D..	2	W1282	070	20		35-21-14	275-278
D..	2	W1282	602	20		35-21-14	280-299
D..	2	W1282	612	20		35-21-14	280-299
D..	2	W1282	642	20		35-21-14	280-299
D..	2	W1282	652	20		35-21-14	280-299
A..	2	W1381	018	16		23-34-17	050-099
<b>GD01950</b>		<b>YHLZG16</b>				<b>0932/295/L015</b>	<b>ALL</b>
D..	2	W0665	029	20		23-42-11	150-199
D..	2	W0665	032	20		23-42-11	050-099
D..	2	W0665	033	20		23-42-11	050-099
D..	2	W0665	048	20		23-42-12	150-199
D..	2	W0665	051	20		23-42-12	150-199
A..	2	W0792	192	20		33-26-21	150-199
A..	2	W0822	111	20		33-21-13	150-199
S..	2	W0822	112	20		33-21-13	150-199
S..	2	W0822	117	20		33-21-13	150-199
A..	2	W0822	124	20		33-21-13	275-299
S..	2	W0822	125	20		33-21-13	275-299
S..	2	W0822	131	20		33-21-13	050-099
A..	2	W0822	137	20		33-21-13	050-099
S..	2	W0822	138	20		33-21-13	050-099

## GROUND LIST

D280T132

**91-21-21**

Section GD01900

Page 5

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD01950</b>		<b>YHLZG16 (continued)</b>				<b>0932/295/L015</b>	<b>ALL</b>
S..	2	W0822	143	20		33-21-13	050-099
A..	2	W1144	105	20		33-24-13	050-099
A..	2	W1144	115	20		33-24-13	050-099
A..	2	W1144	125	20		33-24-13	050-099
D..	2	W1222	099	18		33-51-12	150-199
A..	2	W1236	011	18		33-22-31	150-199
A..	2	W1236	149	18		33-22-31	150-199
A..	2	W1236	150	20		33-22-42	150-199
D..	2	W1252	004	20		25-63-11	150-199
S..	2	W1252	006	20		25-63-11	150-199
A..	2	W1280	045	20		33-24-13	275-278
A..	2	W1280	062	20		33-24-13	275-278
A..	2	W1280	065	20		33-24-13	275-278
A..	2	W1280	615	20		33-24-13	280-299
A..	2	W1280	645	20		33-24-13	280-299
A..	2	W1280	655	20		33-24-13	280-299
D..	2	W1282	024	20		35-21-14	150-199
D..	2	W1282	058	20		35-21-14	150-199
<b>GD01952</b>		<b>YHLZG16</b>				<b>0977/295/L015</b>	<b>ALL</b>
A..	2	W0792	018	20		33-26-11	150-199
D..	2	W0792	126	20		33-25-11	150-199
D..	2	W0792	142	20		38-32-12	150-156, 162-165
D..	2	W0792	142	20		38-32-16	157, 166-199
S..	2	W0792	143	20		38-32-12	150-156, 162-165
S..	2	W0792	143	20		38-32-16	157, 166-199
A..	2	W0792	151	16		38-13-11	150-199
S..	2	W0822	130	20		33-21-13	275-299
S..	2	W0824	064	20		33-21-14	150-199, 275-299
A..	2	W1144	135	20		33-24-13	050-099
A..	2	W1144	145	20		33-24-13	050-099
D..	2	W1166	122	20		35-21-14	050-099
D..	2	W1166	132	20		35-21-14	050-099
D..	2	W1166	142	20		35-21-14	050-099
A..	2	W1280	027	20		33-24-13	275-278
A..	2	W1280	032	20		33-24-13	275-278
A..	2	W1280	037	20		33-24-13	275-278
A..	2	W1280	665	20		33-24-13	280-299
A..	2	W1280	675	20		33-24-13	280-299
A..	2	W1280	685	20		33-24-13	280-299

## GROUND LIST

D280T132

**91-21-21**

Section GD01900

Page 6

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD01952</b>		<b>YHLZG16 (continued)</b>				<b>0977/295/L015</b>	<b>ALL</b>
D..	2	W1282	024	20		35-21-14	275-278
D..	2	W1282	027	20		35-21-14	275-278
D..	2	W1282	029	20		35-21-14	275-278
D..	2	W1282	060	20		35-21-14	150-199
D..	2	W1282	662	20		35-21-14	280-299
D..	2	W1282	672	20		35-21-14	280-299
D..	2	W1282	682	20		35-21-14	280-299
<b>GD01972</b>		<b>DC</b>				<b>0494/266/R075</b>	<b>ALL</b>
D..	E	W0722	008	20		35-21-13	050-099, 162-199
D..	E	W0722	011	20		35-21-13	ALL
D..	E	W0722	014	20		35-21-13	ALL
D..	E	W0722	017	20		35-21-13	ALL
<b>GD01978</b>		<b>DC</b>				<b>0582/266/R075</b>	<b>ALL</b>
D..	E	W0722	019	20		35-21-13	ALL
D..	E	W0722	022	20		35-21-13	ALL
D..	E	W0722	025	20		35-21-13	ALL
<b>GD01984</b>		<b>DC</b>				<b>0670/265/R075</b>	<b>050-099</b>
D..	E	W0722	028	20		35-21-13	050-099
D..	E	W0722	032	20		35-21-13	050-099
D..	E	W0722	035	20		35-21-13	050-099
<b>GD01990</b>		<b>DC</b>				<b>0758/265/R075</b>	<b>050-099</b>
D..	E	W0722	038	20		35-21-13	050-099
D..	E	W0722	041	20		35-21-13	050-099
D..	E	W0722	044	20		35-21-13	050-099

## GROUND LIST

D280T132

**91-21-21**

Section GD01900

Page 7 End

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD02000</b>		<b>DC</b>				<b>0913/265/R075</b>	<b>050-099</b>
D..	E	W0722	052	20		35-21-13	050-099
D..	E	W0722	055	20		35-21-13	050-099
D..	E	W0722	058	20		35-21-13	050-099
<b>GD02006</b>		<b>DC</b>				<b>0971/270/R068</b>	<b>050-099</b>
D..	E	W0722	062	20		35-21-13	050-099
D..	E	W0722	064	20		35-21-13	050-099
D..	E	W0722	066	20		35-21-13	050-099
<b>GD02016</b>		<b>DC</b>				<b>0848/116/L014</b>	<b>ALL</b>
D..	N	W0938	035	18		21-61-51	ALL
<b>GD02018</b>		<b>SH</b>				<b>0855/114/L014</b>	<b>ALL</b>
S..	N	W0938	034	18		21-61-51	ALL
<b>GD02036</b>		<b>SH</b>				<b>0412/268/R084</b>	<b>162-199, 275-299</b>
S..	E	W0814	135	20		33-21-33	275-299
S..	E	W1228	528	20		33-27-11	162-199
<b>GD02038</b>		<b>SH</b>				<b>0456/268/R084</b>	<b>ALL</b>
S..	E	W0812	825	20		33-21-32	275-299
S..	E	W0814	136	20		33-21-33	050-099, 150-199
<b>GD02040</b>		<b>SH</b>				<b>0500/268/R084</b>	<b>050-099</b>
<b>GD02040</b>		<b>SH</b>				<b>0500/265/R085</b>	<b>150-199, 275-299</b>
S..	E	W0814	137	20		33-21-33	ALL
<b>GD02042</b>		<b>SH</b>				<b>0544/268/R084</b>	<b>ALL</b>
S..	E	W0812	133	20		33-21-32	ALL
<b>GD02044</b>		<b>SH</b>				<b>0588/268/R085</b>	<b>050-099</b>
<b>GD02044</b>		<b>SH</b>				<b>0588/265/R085</b>	<b>150-199, 275-299</b>
S..	E	W0814	152	20		33-21-33	ALL
<b>GD02046</b>		<b>SH</b>				<b>0632/268/R085</b>	<b>ALL</b>
S..	E	W0812	139	20		33-21-32	ALL
<b>GD02048</b>		<b>SH</b>				<b>0676/268/R085</b>	<b>050-099</b>

## GROUND LIST

D280T132

**91-21-21**  
Section GD02000  
Page 1  
Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD02048</b>		<b>SH</b>				<b>0676/265/R085</b>	<b>275-299</b>
S..	E	W0814	141	20		33-21-33	050-099
S..	E	W0814	558	20		33-21-33	275-299
<b>GD02050</b>		<b>SH</b>				<b>0720/268/R085</b>	<b>ALL</b>
S..	E	W0812	136	20		33-21-32	ALL
<b>GD02052</b>		<b>SH</b>				<b>0764/268/R085</b>	<b>050-099</b>
<b>GD02052</b>		<b>SH</b>				<b>0764/265/R085</b>	<b>150-199, 275-299</b>
S..	E	W0814	139	20		33-21-33	ALL
<b>GD02054</b>		<b>SH</b>				<b>0808/270/R085</b>	<b>ALL</b>
S..	E	W0812	141	20		33-21-32	ALL
<b>GD02056</b>		<b>SH</b>				<b>0852/270/R085</b>	<b>150-199</b>
S..	E	W0814	146	20		33-21-33	150-199
<b>GD02058</b>		<b>SH</b>				<b>0933/270/R085</b>	<b>ALL</b>
S..	E	W0814	147	20		33-21-35	ALL
<b>GD02060</b>		<b>SH</b>				<b>0977/270/R085</b>	<b>050-099, 275-299</b>
S..	E	W0814	148	20		33-21-35	050-099, 275-299
<b>GD02062</b>		<b>SH</b>				<b>1021/270/R085</b>	<b>ALL</b>
S..	E	W0812	145	20		33-21-34	050-099
S..	E	W0814	149	20		33-21-35	275-299
S..	E	W0814	711	16		33-21-35	150-199
S..	E	W0814	721	20		33-21-35	150-199
<b>GD02064</b>		<b>SH</b>				<b>1043/260/R085</b>	<b>150-199, 275-299</b>
S..	E	W0818	097	20		33-21-35	150-199, 275-299
<b>GD02066</b>		<b>SH</b>				<b>0871/268/R084</b>	<b>ALL</b>
S..	E	W0812	667	20		33-21-34	ALL
S..	E	W1256	109	18		21-45-22	ALL
<b>GD02068</b>		<b>SH</b>				<b>1109/268/R084</b>	<b>ALL</b>
S..	E	W0816	166	20		33-21-34	050-099
S..	E	W0818	062	20		33-21-35	150-199, 275-299

## GROUND LIST

D280T132

**91-21-21**

Section GD02000

Page 2

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD02070</b>		<b>SH</b>				<b>1153/268/R084</b>	<b>ALL</b>
S..	E	W0818	063	20		33-21-35	ALL
<b>GD02072</b>		<b>SH</b>				<b>1197/265/R084</b>	<b>ALL</b>
S..	E	W0818	064	20		33-21-35	ALL
<b>GD02074</b>		<b>SH</b>				<b>1241/268/R084</b>	<b>ALL</b>
S..	E	W0818	065	20		33-21-35	ALL
<b>GD02076</b>		<b>SH</b>				<b>0720/268/L084</b>	<b>050-099</b>
<b>GD02076</b>		<b>SH</b>				<b>0720/266/L085</b>	<b>150-199, 275-299</b>
S..	E	W0814	140	20		33-21-33	ALL
<b>GD02080</b>		<b>SH</b>				<b>0764/268/L085</b>	<b>ALL</b>
S..	E	W0812	140	20		33-21-32	ALL
<b>GD02082</b>		<b>SH</b>				<b>0808/268/L084</b>	<b>150-199</b>
S..	E	W0814	145	20		33-21-33	150-199
<b>GD02084</b>		<b>SH</b>				<b>0933/268/L084</b>	<b>050-099, 275-299</b>
S..	E	W0812	142	20		33-21-34	050-099
S..	E	W0812	143	20		33-21-34	275-299
<b>GD02086</b>		<b>SH</b>				<b>0889/268/L084</b>	<b>050-099</b>
S..	E	W0812	143	20		33-21-34	050-099
<b>GD02088</b>		<b>SH</b>				<b>0977/268/L084</b>	<b>ALL</b>
S..	E	W0812	144	20		33-21-34	050-099, 275-299
S..	E	W0814	718	20		33-21-35	150-199
<b>GD02090</b>		<b>SH</b>				<b>1021/268/L084</b>	<b>150-199, 275-299</b>
S..	E	W0816	685	20		33-21-34	150-199, 275-299
<b>GD02092</b>		<b>SH</b>				<b>0871/268/L084</b>	<b>ALL</b>
S..	E	W0812	146	20		33-21-34	ALL
S..	E	W1256	098	18		21-45-22	ALL
<b>GD02094</b>		<b>SH</b>				<b>1087/290/L052</b>	<b>ALL</b>
S..	E	W0616	041	18		25-29-11	050-099
S..	E	W0816	165	20		33-21-34	ALL

## GROUND LIST

D280T132

**91-21-21**  
Section GD02000  
Page 3  
Mar 09/2006



Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD02094</b>		<b>SH (continued)</b>				<b>1087/290/L052</b>	<b>ALL</b>
S..	E	W0816	589	20		33-21-14	050-099

---

**GROUND LIST**  
D280T132

**91-21-21**  
Section GD02000  
Page 4 End  
Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD02108</b>		<b>AC</b>				<b>0494/266/L075</b>	<b>ALL</b>
A..	E	W0800	005	20		33-24-12	050-099
A..	E	W0800	010	20		33-24-12	050-099
A..	E	W0800	015	20		33-24-12	ALL
A..	E	W0800	020	20		33-24-12	ALL
A..	E	W0800	025	20		33-24-12	ALL
<b>GD02112</b>		<b>AC</b>				<b>0582/266/L075</b>	<b>ALL</b>
A..	E	W0800	030	20		33-24-12	ALL
A..	E	W0800	035	20		33-24-12	ALL
A..	E	W0800	040	20		33-24-12	ALL
<b>GD02118</b>		<b>AC</b>				<b>0670/265/L075</b>	<b>050-099</b>
A..	E	W0800	045	20		33-24-12	050-099
A..	E	W0800	050	20		33-24-12	050-099
A..	E	W0800	055	20		33-24-12	050-099
<b>GD02124</b>		<b>AC</b>				<b>0758/265/L075</b>	<b>050-099</b>
A..	E	W0800	060	20		33-24-12	050-099
A..	E	W0800	065	20		33-24-12	050-099
A..	E	W0800	070	20		33-24-12	050-099
<b>GD02136</b>		<b>AC</b>				<b>0913/265/L075</b>	<b>050-099</b>
A..	E	W0800	085	20		33-24-12	050-099
A..	E	W0800	090	20		33-24-12	050-099
A..	E	W0800	095	20		33-24-12	050-099
<b>GD02140</b>		<b>AC</b>				<b>0971/265/L075</b>	<b>050-099</b>
A..	E	W0800	100	20		33-24-12	050-099
A..	E	W0800	105	20		33-24-12	050-099
A..	E	W0800	110	20		33-24-12	050-099
<b>GD02152</b>		<b>AC</b>				<b>1147/270/L073</b>	<b>050-099</b>
A..	E	W0806	020	20		33-24-12	050-099
A..	E	W0806	025	20		33-24-12	050-099
A..	E	W0806	030	20		33-24-12	050-099
<b>GD02158</b>		<b>AC</b>				<b>1235/270/L073</b>	<b>050-099</b>
A..	E	W0806	035	20		33-24-12	050-099
A..	E	W0806	040	20		33-24-12	050-099

## GROUND LIST

D280T132

**91-21-21**  
Section GD02100  
Page 1  
Mar 09/2006





# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD02158</b>		<b>AC (continued)</b>				<b>1235/270/L073</b>	<b>050-099</b>
A..	E	W0806	045	20		33-24-12	050-099
<b>GD02164</b>		<b>AC</b>				<b>1323/270/L073</b>	<b>050-099</b>
<b>GD02164</b>		<b>AC</b>				<b>1323/267/L074</b>	<b>150-199, 275-299</b>
A..	E	W0806	050	20		33-24-12	050-099
A..	E	W0806	055	20		33-24-12	050-099
A..	E	W0806	060	20		33-24-12	050-099
A..	E	W0806	503	20		33-24-12	150-199, 275-299
A..	E	W0806	506	20		33-24-12	150-199, 275-299
A..	E	W0806	509	20		33-24-12	150-199, 275-299
<b>GD02170</b>		<b>AC</b>				<b>1409/270/L073</b>	<b>050-099</b>
<b>GD02170</b>		<b>AC</b>				<b>1409/267/L074</b>	<b>150-199, 275-299</b>
A..	E	W0806	065	20		33-24-12	050-099
A..	E	W0806	070	20		33-24-12	050-099
A..	E	W0806	075	20		33-24-12	050-099
A..	E	W0806	512	20		33-24-12	150-199, 275-299
A..	E	W0806	515	20		33-24-12	150-199, 275-299
A..	E	W0806	518	20		33-24-12	150-199, 275-299
A..	E	W0806	524	20		33-24-12	050-099, 150-199
<b>GD02174</b>		<b>SH</b>				<b>1109/270/L080</b>	<b>ALL</b>
S..	E	W0816	166	20		33-21-34	150-199, 275-299
S..	E	W0818	062	20		33-21-35	050-099
<b>GD02176</b>		<b>SH</b>				<b>1153/266/L080</b>	<b>ALL</b>
S..	E	W0816	167	20		33-21-34	ALL
<b>GD02178</b>		<b>SH</b>				<b>1197/266/L080</b>	<b>ALL</b>
S..	E	W0816	168	20		33-21-34	050-099
S..	E	W0816	692	20		33-21-34	150-199, 275-299
<b>GD02180</b>		<b>SH</b>				<b>1415/275/L080</b>	<b>ALL</b>
S..	E	W0816	169	20		33-21-34	ALL
<b>GD02182</b>		<b>SH</b>				<b>1241/266/L080</b>	<b>ALL</b>
S..	E	W0816	170	20		33-21-34	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD02100

Page 2

Mar 09/2006



## 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD02184</b>		<b>SH</b>				<b>1285/266/L080</b>	<b>ALL</b>
S..	E	W0816	171	20		33-21-34	ALL
<b>GD02186</b>		<b>SH</b>				<b>1329/266/L080</b>	<b>ALL</b>
S..	E	W0816	172	20		33-21-34	ALL
<b>GD02188</b>		<b>SH</b>				<b>1373/275/L090</b>	<b>ALL</b>
S..	E	W0816	173	20		33-21-34	ALL
S..	E	W1220	005	16		25-29-12	050-099
<b>GD02192</b>		<b>SH</b>				<b>1285/268/R084</b>	<b>ALL</b>
S..	E	W0818	067	20		33-21-35	ALL
<b>GD02194</b>		<b>SH</b>				<b>1329/270/R085</b>	<b>ALL</b>
S..	E	W0818	068	20		33-21-35	ALL
<b>GD02196</b>		<b>SH</b>				<b>1373/270/R085</b>	<b>ALL</b>
S..	E	W0818	069	20		33-21-35	ALL
<b>GD02198</b>		<b>SH</b>				<b>1417/270/R084</b>	<b>ALL</b>
S..	E	W0818	070	20		33-21-35	ALL

### GROUND LIST

D280T132

**91-21-21**

Section GD02100

Page 3 End

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD02202</b>		<b>SH</b>				<b>0412/270/L080</b>	<b>ALL</b>
S..	E	W0812	132	20		33-21-32	ALL
S..	E	W1220	004	16		25-29-12	275-299
S..	2	W1417	903	20		23-32-21	150, 152-199
<b>GD02204</b>		<b>SH</b>				<b>0455/268/L084</b>	<b>050-099</b>
<b>GD02204</b>		<b>SH</b>				<b>0456/269/L081</b>	<b>150-157, 275-299</b>
S..	E	W0814	138	20		33-21-33	050-099, 150-157, 275-299
S..	E	W1447	207	20		23-22-12	150-152
S..	E	W1447	208	20		23-22-12	150-152
<b>GD02206</b>		<b>SH</b>				<b>0500/275/L065</b>	<b>050-099</b>
<b>GD02206</b>		<b>SH</b>				<b>0500/268/L084</b>	<b>150-199, 275-299</b>
S..	E	W0812	134	20		33-21-32	ALL
S..	E	W1220	004	16		25-29-12	050-099
<b>GD02208</b>		<b>SH</b>				<b>0544/268/L084</b>	<b>050-099</b>
<b>GD02208</b>		<b>SH</b>				<b>0544/265/L085</b>	<b>150-199, 275-299</b>
S..	E	W0814	151	20		33-21-33	ALL
<b>GD02210</b>		<b>SH</b>				<b>0588/268/L084</b>	<b>ALL</b>
S..	E	W0812	654	20		33-21-32	ALL
<b>GD02212</b>		<b>SH</b>				<b>0632/268/L084</b>	<b>050-099</b>
<b>GD02212</b>		<b>SH</b>				<b>0632/268/L085</b>	<b>150-199, 275-299</b>
S..	E	W0814	142	20		33-21-33	ALL
<b>GD02214</b>		<b>SH</b>				<b>0676/268/L085</b>	<b>ALL</b>
S..	E	W0812	135	20		33-21-32	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD02200

Page 1 End

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD02310</b>		<b>AC</b>				<b>0494/266/R075</b>	<b>ALL</b>
A..	E	W0804	010	20		33-24-14	050-099, 162-199
A..	E	W0804	015	20		33-24-14	ALL
A..	E	W0804	020	20		33-24-14	ALL
A..	E	W0804	025	20		33-24-14	ALL
<b>GD02316</b>		<b>AC</b>				<b>0582/266/R075</b>	<b>050-099</b>
<b>GD02316</b>		<b>AC</b>				<b>0582/266/R074</b>	<b>150-199, 275-299</b>
A..	E	W0804	030	20		33-24-14	ALL
A..	E	W0804	035	20		33-24-14	ALL
A..	E	W0804	040	22		33-24-14	050-099
A..	E	W0804	040	20		33-24-14	150-199, 275-299
<b>GD02322</b>		<b>AC</b>				<b>0669/265/R075</b>	<b>050-099</b>
A..	E	W0804	045	20		33-24-14	050-099
A..	E	W0804	050	20		33-24-14	050-099
A..	E	W0804	055	20		33-24-14	050-099
<b>GD02324</b>		<b>AC</b>				<b>0757/265/R075</b>	<b>050-099</b>
A..	E	W0804	060	20		33-24-14	050-099
A..	E	W0804	065	20		33-24-14	050-099
A..	E	W0804	070	20		33-24-14	050-099
<b>GD02334</b>		<b>AC</b>				<b>0916/265/R075</b>	<b>050-099</b>
A..	E	W0804	085	20		33-24-14	050-099
A..	E	W0804	090	20		33-24-14	050-099
A..	E	W0804	095	20		33-24-14	050-099
A..	E	W0804	100	20		33-24-14	050-099
<b>GD02340</b>		<b>AC</b>				<b>0970/265/R075</b>	<b>050-099</b>
A..	E	W0804	105	20		33-24-14	050-099
A..	E	W0804	110	20		33-24-14	050-099
<b>GD02354</b>		<b>AC</b>				<b>1147/270/R073</b>	<b>050-099</b>
A..	E	W0810	020	20		33-24-14	050-099
A..	E	W0810	025	20		33-24-14	050-099
A..	E	W0810	030	20		33-24-14	050-099
<b>GD02360</b>		<b>AC</b>				<b>1235/270/R073</b>	<b>050-099</b>
A..	E	W0810	035	20		33-24-14	050-099

## GROUND LIST

D280T132

**91-21-21**

Section GD02300

Page 1

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD02360</b>		<b>AC (continued)</b>				<b>1235/270/R073</b>	<b>050-099</b>
A..	E	W0810	040	20		33-24-14	050-099
A..	E	W0810	045	20		33-24-14	050-099
<b>GD02366</b>		<b>AC</b>				<b>1323/270/R073</b>	<b>ALL</b>
A..	E	W0810	050	20		33-24-14	050-099
A..	E	W0810	055	20		33-24-14	050-099
A..	E	W0810	060	20		33-24-14	050-099
A..	E	W0810	503	20		33-24-14	150-199, 275-299
A..	E	W0810	506	20		33-24-14	150-199, 275-299
A..	E	W0810	509	20		33-24-14	150-199, 275-299
<b>GD02372</b>		<b>AC</b>				<b>1409/270/R073</b>	<b>050-099</b>
<b>GD02372</b>		<b>AC</b>				<b>1388/270/R073</b>	<b>150-199, 275-299</b>
A..	E	W0810	065	20		33-24-14	050-099
A..	E	W0810	070	20		33-24-14	050-099
A..	E	W0810	075	20		33-24-14	050-099
A..	E	W0810	512	20		33-24-14	150-199, 275-299
A..	E	W0810	515	20		33-24-14	150-199, 275-299
A..	E	W0810	518	20		33-24-14	150-199, 275-299
A..	E	W0810	557	20		33-24-14	050-099, 150-199
<b>GD02378</b>		<b>DC</b>				<b>0931/130/L062</b>	<b>ALL</b>
D..	N	W0938	041	18		36-11-11	ALL
D..	N	W0938	042	18		36-11-11	ALL
<b>GD02380</b>		<b>AC</b>				<b>0931/130/L062</b>	<b>ALL</b>
A..	N	W0938	043	18		36-11-11	ALL
<b>GD02390</b>		<b>DC</b>				<b>NR250/134/</b>	<b>ALL</b>
D..	N	W0394	018	18		29-11-21	ALL
D..	N	W0394	021	18		29-11-22	ALL
<b>GD02392</b>		<b>DC</b>				<b>NR250/134/</b>	<b>ALL</b>
D..	N	W0394	006	18		29-32-11	ALL
D..	N	W0394	007	18		29-32-11	ALL
D..	N	W0394	009	18		78-36-21	ALL
D..	N	W0394	019	18		29-32-11	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD02300

Page 2

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD02394</b>		<b>SH</b>				<b>NR250/134/</b>	<b>ALL</b>
S..	N	W0394	015	18		29-33-11	ALL
S..	N	W0394	026	18		29-32-11	ALL
S..	N	W0394	027	18		29-32-11	ALL
S..	N	W0394	101	18		78-34-21	ALL
<b>GD02396</b>		<b>DC</b>				<b>NL250/134/</b>	<b>ALL</b>
D..	N	W0390	018	18		29-11-11	ALL
D..	N	W0390	021	18		29-11-12	ALL
D..	N	W0390	028	18		78-36-11	ALL
D..	N	W0390	082	18		78-36-11	ALL
<b>GD02398</b>		<b>DC</b>				<b>NL250/134/</b>	<b>ALL</b>
D..	N	W0390	001	18		78-34-11	ALL
D..	N	W0390	006	18		29-32-11	ALL
D..	N	W0390	007	18		29-32-11	ALL
D..	N	W0390	019	18		29-32-11	ALL

**GROUND LIST**

D280T132

**91-21-21**  
Section GD02300  
Page 3 End  
Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD02400</b>		<b>SH</b>				<b>NL250/134/</b>	<b>ALL</b>
S..	N	W0390	015	18		29-33-11	ALL
S..	N	W0390	026	18		29-32-11	ALL
S..	N	W0390	027	18		29-32-11	ALL
S..	N	W0390	101	18		78-34-11	ALL
<b>GD02404</b>		<b>DC</b>				<b>NR250/134/</b>	<b>ALL</b>
D..	N	W0400	003	18		29-11-22	ALL
D..	N	W0400	007	18		29-11-22	ALL
<b>GD02410</b>		<b>DC</b>				<b>NAC253/140/R006</b>	<b>ALL</b>
D..	N	W0390	100	18		78-34-11	ALL
D..	N	W0398	003	18		29-11-12	ALL
D..	N	W0398	007	18		29-11-12	ALL
<b>GD02414</b>		<b>YHLZG16</b>				<b>P006-02/ /</b>	<b>ALL</b>
D..	2	W0028	067	20		24-31-11	ALL
D..	2	W0028	075	20		24-33-11	ALL
A..	2	W0028	086	20		24-33-11	ALL
D..	2	W0028	087	20		24-33-11	ALL
D..	2	W0028	092	20		24-33-11	ALL
D..	2	W0028	093	20		24-33-11	ALL
D..	2	W0028	099	20		24-51-31	050-099, 155-199, 277-299
D..	2	W0028	099	18		24-51-31	150-154, 275-276
D..	2	W0028	108	20		24-51-31	ALL
D..	2	W0028	110	20		24-51-31	ALL
D..	2	W0028	165	20		24-34-11	ALL
D..	2	W0028	169	20		24-34-11	ALL
D..	2	W0028	170	20		24-34-11	ALL
D..	2	W0028	607	18		24-51-31	ALL
A..	2	W0028	613	20		24-51-31	ALL
<b>GD02416</b>		<b>YHLZG16</b>				<b>P006-03/ /</b>	<b>ALL</b>
S..	2	W0048	070	20		24-51-43	ALL
D..	2	W0048	072	20		24-51-43	ALL
D..	2	W0048	075	20		24-51-43	ALL
D..	2	W0048	079	20		24-51-43	ALL
A..	2	W1026	012	16		24-53-11	ALL
S..	2	W1026	047	20		24-51-42	ALL
D..	2	W1026	049	20		24-51-42	ALL
D..	2	W1026	051	20		24-51-42	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD02400

Page 1

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD02416</b>		<b>YHLZG16 (continued)</b>				<b>P006-03/ /</b>	<b>ALL</b>
D..	2	W1026	055	20		24-51-42	ALL
A..	2	W1026	078	16		24-53-11	ALL
A..	2	W1030	013	16		24-53-21	ALL
A..	2	W1030	051	16		24-53-21	ALL
<b>GD02418</b>		<b>YHLZG16</b>				<b>P006-05/ /</b>	<b>ALL</b>
D..	2	W0148	009	20		33-16-11	ALL
D..	2	W0148	045	20		33-16-21	ALL
D..	2	W0148	055	20		33-16-22	ALL
D..	2	W0148	056	20		33-16-22	ALL
D..	2	W0148	057	20		33-16-22	ALL
A..	2	W0150	027	20		33-13-18	ALL
D..	2	W0152	005	20		33-16-11	ALL
D..	2	W0152	030	20		33-16-21	ALL
A..	2	W0156	009	20		33-11-11	ALL
D..	2	W0156	040	20		33-16-11	ALL
D..	2	W0156	070	20		33-16-22	ALL
D..	2	W0156	075	20		33-16-21	ALL
A..	2	W0156	159	20		33-11-13	ALL
S..	2	W0156	163	20		33-11-11	ALL
A..	2	W0158	010	20		33-11-15	ALL
S..	2	W0158	115	20		33-11-11	ALL
<b>GD02420</b>		<b>YHLZG16</b>				<b>P006-05/ /</b>	<b>ALL</b>
D..	2	W0148	033	20		33-16-12	ALL
D..	2	W0148	034	20		33-16-12	ALL
D..	2	W0148	035	20		33-16-12	ALL
D..	2	W0152	021	20		33-16-12	ALL
D..	2	W0152	022	20		33-16-12	ALL
D..	2	W0152	023	20		33-16-12	ALL
D..	2	W0152	040	20		33-16-22	ALL
D..	2	W0152	041	20		33-16-22	ALL
D..	2	W0156	060	20		33-16-12	ALL
D..	2	W0156	061	20		33-16-12	ALL
D..	2	W0156	062	20		33-16-12	ALL
D..	2	W0156	088	20		33-16-22	ALL
D..	2	W0156	089	20		33-16-22	ALL
<b>GD02422</b>		<b>YHLZG16</b>				<b>P006-05/ /</b>	<b>ALL</b>
A..	2	W0150	037	16		33-13-18	156-157, 166-199, 277-299

## GROUND LIST

D280T132

**91-21-21**

Section GD02400

Page 2

Mar 09/2006





# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD02422</b>		<b>YHLZG16 (continued)</b>				<b>P006-05/ /</b>	<b>ALL</b>
A..	2	W0156	024	20		33-11-15	ALL
A..	2	W0156	026	20		33-11-15	ALL
D..	2	W0156	114	20		80-11-21	ALL
D..	2	W0156	137	20		36-11-52	ALL
S..	2	W0156	162	20		33-11-11	ALL
D..	2	W0156	168	20		33-16-11	ALL
D..	2	W0156	169	20		33-16-11	ALL
A..	2	W0158	008	20		33-11-11	ALL
D..	2	W0158	055	20		80-11-11	ALL
D..	2	W0158	079	20		36-11-51	ALL
S..	2	W0158	114	20		33-11-11	ALL
<b>GD02448</b>		<b>SH</b>				<b>0406/210/R090</b>	<b>275-299</b>
S..	E	W1222	014	20		33-51-11	275-299
<b>GD02450</b>		<b>DC</b>				<b>0406/210/R090</b>	<b>275-299</b>
D..	E	W1222	020	20		33-51-11	275-299
D..	E	W1222	106	20		33-51-16	275-299
<b>GD02464</b>		<b>YHLZG16</b>				<b>0203/192/L027</b>	<b>ALL</b>
D..	2	W0629	005	20		23-51-11	ALL
A..	2	W0685	004	20		34-53-11	050-099, 150-199
D..	2	W0756	032	20		27-11-11	ALL
A..	2	W0756	145	20		27-28-13	ALL
D..	2	W0756	705	20		30-81-11	050-099, 150-199
A..	2	W0756	709	20		30-81-11	050-099, 150-199
S..	2	W0756	710	20		30-81-11	050-099, 150-199
D..	2	W0779	020	20		34-43-12	ALL
D..	2	W0803	020	20		34-43-22	ALL
<b>GD02466</b>		<b>YHLZG16</b>				<b>0214/200/R040</b>	<b>ALL</b>
A..	2	W0617	004	20		34-57-21	ALL
DED		W0617	004Z			34-57-21	ALL
D..	2	W0631	005	20		23-51-21	ALL
<b>GD02470</b>		<b>SH</b>				<b>R0143/12/LE</b>	<b>ALL</b>
S..	N	W0418	048	18		27-81-11	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD02400

Page 3

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD02472</b>		<b>DC</b>				<b>R0171/12/LE</b>	<b>ALL</b>
D..	N	W0418	046	18		27-81-11	ALL
<b>GD02474</b>		<b>DC</b>				<b>R0387/12/LE</b>	<b>ALL</b>
D..	N	W0418	038	18		30-11-11	ALL
D..	N	W0418	041	18		30-11-11	ALL
<b>GD02490</b>		<b>DC</b>				<b>0544/290/R065</b>	<b>ALL</b>
D..	E	W0722	028	20		35-21-13	280-299
D..	E	W0722	079	20		35-21-13	280-299
D..	E	W0722	081	20		35-21-13	280-299
D..	E	W1222	037	20		33-51-12	ALL
<b>GD02492</b>		<b>DC</b>				<b>0632/290/R065</b>	<b>ALL</b>
D..	E	W1222	038	20		33-51-12	ALL
<b>GD02494</b>		<b>DC</b>				<b>0932/206/R096</b>	<b>050-099</b>
D..	E	W0786	039	14		33-51-21	050-099
<b>GD02496</b>		<b>DC</b>				<b>0806/290/R065</b>	<b>ALL</b>
D..	E	W0834	074	20		33-51-12	050-099
D..	E	W1222	072	20		33-51-12	150-199, 275-299
D..	E	W1222	171	16		33-51-12	050-099
<b>GD02498</b>		<b>DC</b>				<b>0872/268/R084</b>	<b>ALL</b>
D..	E	W0786	093	16		25-65-12	050-099
D..	E	W0786	106	20		27-61-18	050-099
D..	E	W0834	027	18		33-51-14	ALL

## GROUND LIST

D280T132

**91-21-21**  
Section GD02400  
Page 4 End  
Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD02504</b>							<b>050-099</b>
D..	E	W0728	007	20		35-21-13	050-099
D..	E	W0728	010	20		35-21-13	050-099
D..	E	W1222	077	20		33-51-12	050-099
<b>GD02506</b>		<b>DC</b>				<b>1021/290/R065</b>	<b>050-099</b>
D..	E	W0814	192	20		33-25-11	050-099
D..	E	W0814	667	20		38-32-13	050-099
D..	E	W1222	075	20		33-51-12	050-099
<b>GD02508</b>		<b>DC</b>				<b>1196/290/R065</b>	<b>050-099</b>
D..	E	W1222	080	20		33-51-12	050-099
<b>GD02510</b>		<b>DC</b>				<b>1284/290/R063</b>	<b>ALL</b>
D..	E	W0790	018	20		33-51-12	ALL
<b>GD02512</b>		<b>DC</b>				<b>1373/290/R070</b>	<b>ALL</b>
D..	E	W0790	019	20		33-51-12	ALL
<b>GD02534</b>		<b>DC</b>				<b>0456/292/L065</b>	<b>ALL</b>
D..	E	W0784	037	18		33-51-13	050-099, 150-199
D..	E	W0784	038	20		33-51-13	150-199, 275-299
D..	E	W1232	562	20		21-73-11	275-299
<b>GD02536</b>		<b>DC</b>				<b>0545/291/L065</b>	<b>ALL</b>
D..	E	W0718	028	20		35-21-12	280-299
D..	E	W0718	079	20		35-21-12	280-299
D..	E	W0718	081	20		35-21-12	280-299
D..	E	W0784	039	20		33-51-13	ALL
<b>GD02538</b>		<b>DC</b>				<b>0632/294/L065</b>	<b>ALL</b>
D..	E	W0784	040	20		33-51-13	ALL
<b>GD02540</b>		<b>DC</b>				<b>0720/292/L065</b>	<b>050-099</b>
D..	E	W0784	041	20		33-51-13	050-099
<b>GD02542</b>		<b>DC</b>				<b>0808/292/L065</b>	<b>ALL</b>
D..	E	W0790	055	20		33-51-13	ALL
D..	E	W0790	128	16		33-51-13	050-099

## GROUND LIST

D280T132

**91-21-21**

Section GD02500

Page 1

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD02544</b>		<b>YHLZG16</b>				<b>0888/295/R015</b>	<b>155, 157, 275-299</b>
D..	2	W0665	033	20		23-42-11	275-299
A..	2	W0792	042	20		33-26-21	275-299
S..	2	W0822	131	20		33-21-13	275-299
D..	2	W1222	099	18		33-51-12	275-299
D..	2	W1222	184	18		33-51-12	155, 157
<b>GD02546</b>		<b>DC</b>				<b>0871/270/L084</b>	<b>ALL</b>
D..	E	W0786	092	20		27-61-18	050-099
D..	E	W0786	107	16		25-65-11	050-099
D..	E	W0834	026	18		33-51-14	ALL
<b>GD02548</b>		<b>DC</b>				<b>0889/292/L065</b>	<b>050-099</b>
D..	E	W0790	053	18		33-51-13	050-099
<b>GD02552</b>		<b>DC</b>				<b>1021/290/L065</b>	<b>050-099</b>
D..	E	W0790	051	20		33-51-13	050-099
D..	E	W0792	069	20		33-25-11	050-099
D..	E	W0792	891	20		38-32-12	050-099
<b>GD02554</b>		<b>DC</b>				<b>1109/292/L065</b>	<b>050-099</b>
D..	E	W0724	007	20		35-21-12	050-099
D..	E	W0724	010	20		35-21-12	050-099
D..	E	W0790	050	18		33-51-13	050-099
<b>GD02556</b>		<b>DC</b>				<b>1196/291/L056</b>	<b>050-099</b>
D..	E	W0790	062	18		33-51-13	050-099
<b>GD02558</b>		<b>DC</b>				<b>1284/291/L056</b>	<b>ALL</b>
D..	E	W0788	017	20		33-51-13	ALL
<b>GD02560</b>		<b>DC</b>				<b>1373/291/L065</b>	<b>ALL</b>
D..	E	W0788	018	20		33-51-13	ALL
D..	E	W1232	568	20		21-73-11	275-299
<b>GD02570</b>		<b>DC</b>				<b>1555/282/L062</b>	<b>ALL</b>
D..	E	W0216	003	18		33-51-13	275-299
D..	E	W0216	008	20		25-31-21	050-099, 150-199
D..	E	W0216	008	16		25-31-21	275-299
D..	E	W0216	031	18		SPARE	280-299

## GROUND LIST

D280T132

**91-21-21**

Section GD02500

Page 2

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD02576</b>		<b>DC</b>				<b>0478/205/L093</b>	<b>275-299</b>
D..	E	W0788	074	20		33-51-21	275-299
<b>GD02578</b>		<b>SH</b>				<b>0478/205/L093</b>	<b>275-299</b>
S..	E	W0788	073	20		33-51-21	275-299
<b>GD02580</b>		<b>DC</b>				<b>1015/208/R097</b>	<b>ALL</b>
D..	E	W1222	055	20		33-51-11	ALL
D..	E	W1222	109	20		33-51-16	275-299
D..	E	W1222	622	20		33-51-16	050-099, 150-199
<b>GD02582</b>		<b>SH</b>				<b>1015/208/R097</b>	<b>ALL</b>
S..	E	W1222	057	20		33-51-11	ALL
<b>GD02584</b>		<b>DC</b>				<b>0922/211/L090</b>	<b>050-099</b>
D..	E	W0788	064	14		33-51-21	050-099
D..	E	W0790	029	20		33-51-11	050-099
D..	E	W0790	605	20		33-51-14	050-099
<b>GD02586</b>		<b>SH</b>				<b>0922/211/L090</b>	<b>050-099</b>
S..	E	W0790	028	20		33-51-11	050-099
<b>GD02594</b>		<b>DC</b>				<b>1428/203/R092</b>	<b>050-099, 162-199</b>
D..	E	W0786	071	20		33-51-21	050-099, 162-199
<b>GD02596</b>		<b>SH</b>				<b>1428/203/R092</b>	<b>050-099, 162-199</b>
S..	E	W0786	077	20		33-51-21	050-099, 162-199
<b>GD02598</b>		<b>DC</b>				<b>1357/205/L096</b>	<b>ALL</b>
D..	E	W0788	003	20		33-51-11	ALL
D..	E	W0788	120	20		33-51-17	275-299
D..	E	W0788	622	20		33-51-14	050-099, 150-199

## GROUND LIST

D280T132

## 91-21-21

Section GD02500

Page 3 End

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD02600</b>		<b>SH</b>				<b>1357/203/L096</b>	<b>ALL</b>
S..	E	W0788	004	20		33-51-11	ALL
<b>GD02608</b>		<b>SH</b>				<b>0544/291/R065</b>	<b>ALL</b>
S..	E	W0812	189	20		33-21-11	ALL
<b>GD02616</b>		<b>SH</b>				<b>0792/130/R062</b>	<b>ALL</b>
S..	N	W0952	035	18		36-21-11	ALL
<b>GD02618</b>		<b>DC</b>				<b>0795/130/R062</b>	<b>ALL</b>
D..	N	W0952	034	18		36-21-11	ALL
<b>GD02620</b>		<b>YHLZG16</b>				<b>1031/197/R040</b>	<b>ALL</b>
D..	2	W0596	009	18		32-44-11	ALL
D..	2	W0596	013	20		32-44-11	ALL
D..	2	W0658	017	20		29-21-31	ALL
D..	2	W0658	018	20		29-11-32	ALL
D..	2	W0658	033	18		29-21-31	ALL
<b>GD02696</b>		<b>SH</b>				<b>0631/284/R070</b>	<b>050-099</b>
S..	E	W0812	503	20		33-21-11	050-099

## GROUND LIST

D280T132

**91-21-21**  
Section GD02600  
Page 1 End  
Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD02706</b>		<b>DC</b>				<b>1562/234/R093</b>	<b>ALL</b>
D..	E	W0786	079	16		33-51-21	ALL
<b>GD02708</b>		<b>DC</b>				<b>1398/203/R094</b>	<b>150-157, 275-299</b>
D..	E	W0786	071	20		33-51-21	150-157, 275-299
D..	E	W0836	013	20		33-51-16	275-299
D..	E	W0836	017	20		33-51-16	275-299
<b>GD02710</b>		<b>SH</b>				<b>1400/203/R094</b>	<b>150-157, 275-299</b>
S..	E	W0786	077	20		33-51-21	150-157, 275-299
S..	E	W0836	018	20		33-51-16	275-299
<b>GD02712</b>		<b>DC</b>				<b>1563/227/L090</b>	<b>ALL</b>
D..	E	W0784	102	16		33-51-21	ALL
<b>GD02714</b>		<b>DC</b>				<b>1241/190/L092</b>	<b>ALL</b>
D..	E	W0784	107	20		33-51-21	150-199, 275-299
D..	E	W0784	109	14		33-51-21	050-099
<b>GD02716</b>		<b>DC</b>				<b>1087/212/L094</b>	<b>ALL</b>
D..	E	W0788	075	14		33-51-21	ALL
<b>GD02718</b>		<b>DC</b>				<b>1345/208/L096</b>	<b>ALL</b>
D..	E	W0784	094	20		33-51-21	ALL
<b>GD02720</b>		<b>SH</b>				<b>1345/203/L096</b>	<b>ALL</b>
S..	E	W0784	093	20		33-51-21	ALL
<b>GD02730</b>		<b>SH</b>				<b>0368/291/R065</b>	<b>275-299</b>
S..	E	W0812	162	20		33-21-11	275-299
<b>GD02770</b>		<b>DC</b>				<b>0304/128/R046</b>	<b>ALL</b>
D..	G	W0266	002	02		24-32-11	ALL
<b>GD02772</b>		<b>AC</b>				<b>0304/130/R051</b>	<b>ALL</b>
S..	E	W0252	006	14		24-32-11	ALL
<b>GD02774</b>		<b>DC</b>				<b>0304/128/R046</b>	<b>ALL</b>
D..	G	W0268	002	02		24-32-11	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD02700

Page 1

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD02776</b>		<b>AC</b>				<b>0304/130/R051</b>	<b>ALL</b>
S..	E	W0254	006	14		24-32-11	ALL
<b>GD02788</b>		<b>AC</b>				<b>1087/290/L052</b>	<b>050-099</b>
A..	E	W0616	021	18		25-29-11	050-099
A..	E	W0806	015	20		33-24-12	050-099
A..	E	W0816	588	20		33-21-14	050-099

## GROUND LIST

D280T132

**91-21-21**

Section GD02700

Page 2 End

Mar 09/2006





# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD02808</b>		<b>AC</b>				<b>1175/290/L056</b>	<b>050-099</b>
A..	E	W0816	603	20		33-21-14	050-099
<b>GD02814</b>		<b>AC</b>				<b>1263/290/L056</b>	<b>ALL</b>
A..	E	W0816	616	20		33-21-14	ALL
<b>GD02848</b>		<b>AC</b>				<b>1351/290/L056</b>	<b>ALL</b>
A..	E	W0816	630	20		33-21-14	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD02800

Page 1 End

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD02902</b>		<b>SH</b>				<b>0889/292/L065</b>	<b>050-099</b>
S..	E	W0812	045	20		33-21-34	050-099
S..	E	W0812	687	20		33-21-13	050-099
S..	E	W0812	692	20		33-21-13	050-099
<b>GD02908</b>		<b>SH</b>				<b>0933/290/R065</b>	<b>050-099</b>
S..	E	W0812	707	20		33-21-13	050-099
<b>GD02950</b>		<b>SH</b>				<b>0889/292/R065</b>	<b>050-099</b>
S..	E	W0812	720	20		33-21-13	050-099
S..	E	W0814	049	20		33-21-35	050-099
<b>GD02982</b>		<b>SH</b>				<b>0875/130/L060</b>	<b>ALL</b>
S..	N	W0508	007	18		21-52-41	ALL
S..	N	W0508	031	18		21-51-12	ALL

## GROUND LIST

D280T132

**91-21-21**  
Section GD02900  
Page 1 End  
Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD03042</b>		<b>SH</b>				<b>R0171/12/LE</b>	<b>ALL</b>
S..	N	W0418	047	18		27-81-11	ALL
<b>GD03044</b>		<b>SH</b>				<b>R0387/12/LE</b>	<b>ALL</b>
S..	N	W0418	042	18		30-11-11	ALL
<b>GD03046</b>		<b>DC</b>				<b>0267/280/R060</b>	<b>ALL</b>
D..	G	W0222	033	20		25-31-11	275-278
D..	G	W0222	033	16		25-31-11	280-299
D..	G	W0222	139	20		25-31-11	050-099, 150-199
D..	G	W0222	168	18		33-51-12	150-157
D..	G	W0222	170	20		35-21-13	050-099, 150-199
<b>GD03072</b>		<b>DC</b>				<b>1373/175/R085</b>	<b>ALL</b>
D..	R	W0246	009	*1		24-32-41	275-299
D..	IT	W1048	007	*1		24-31-41	050-099, 150-199
D..	R	W1048	007	*1		24-31-41	275-299
<b>GD03076</b>		<b>DC</b>				<b>1373/175/R085</b>	<b>ALL</b>
D..	E	W0786	082	20		33-51-21	050-099
D..	E	W1048	004	08		24-31-41	ALL
<b>GD03078</b>		<b>DC</b>				<b>0237/166/R067</b>	<b>ALL</b>
D..	E	W0600	012	20		35-11-13	ALL
<b>GD03094</b>		<b>DC</b>				<b>P034-00/ /</b>	<b>ALL</b>
D..	E	W1012	004	10		24-54-61	ALL
<b>GD03096</b>		<b>YHLZG16</b>				<b>0146/232/R033</b>	<b>ALL</b>
A..	2	W0011	670	20		33-13-13	ALL
A..	2	W0011	671	18		33-13-13	ALL
A..	2	W0011	672	18		33-13-13	ALL
A..	2	W0011	682	18		33-13-13	ALL
A..	2	W0011	783	20		33-13-13	ALL
DED		W0011	783Z			33-13-13	ALL
A..	2	W0011	807	18		33-13-13	ALL
D..	2	W0011	892	20		34-61-26	051-099, 155-199, 275-299
D..	2	W0011	893	20		34-61-16	051-099
D..	2	W0011	893	20		34-61-26	155-199, 275-299
A..	2	W0031	139	20		33-13-13	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD03000

Page 1

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD03096</b>		<b>YHLZG16 (continued)</b>				<b>0146/232/R033</b>	<b>ALL</b>
A..	2	W0031	141	20		33-13-13	ALL
A..	2	W0031	145	20		33-13-13	050-099, 150-199, 275-278
D..	2	W0031	768	20		34-61-26	051-099, 155-199, 275-299
D..	2	W0031	769	20		34-61-26	051-099, 155-199, 275-299

## GROUND LIST

D280T132

**91-21-21**

Section GD03000

Page 2 End

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD03104</b>		<b>YHLZG16</b>				<b>0141/232/R033</b>	<b>ALL</b>
S..	2	W0031	626	20		32-41-11	ALL
D..	2	W0031	664	20		32-42-12	ALL
D..	2	W0031	667	20		32-61-14	ALL
D..	2	W0031	668	20		32-61-14	ALL
S..	2	W0031	671	20		73-21-14	ALL
A..	2	W9090	919	20		34-46-13	150, 152-199, 275-299
A..	2	W9090	922	20		34-46-13	150, 152-199, 275-299
A..	2	W9090	923	20		34-46-13	150, 152-199, 275-299
A..	2	W9090	924	20		34-46-13	150, 152-199, 275-299
A..	2	W9090	925	20		33-13-13	150, 152-199, 275-299

## GROUND LIST

D280T132

**91-21-21**

Section GD03100

Page 1 End

Mar 09/2006



## 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD03224</b>		<b>SH</b>				<b>L0149/14/LE</b>	<b>ALL</b>
S..	N	W0436	005	18		27-81-31	ALL
<b>GD03230</b>		<b>SH</b>				<b>R0143/12/LE</b>	<b>ALL</b>
S..	N	W0442	005	18		27-81-31	ALL
<b>GD03246</b>		<b>DC</b>				<b>1562/144/L026</b>	<b>ALL</b>
D..	E	W0966	030	20		38-32-11	150-154, 156-157, 166-199, 275-299
D..	E	W0966	079	20		38-32-11	156-157, 166-199, 275-299
D..	E	W0966	122	20		38-32-11	050-099, 155, 162-165
D..	E	W1354	027	20		38-32-11	ALL
D..	E	W1354	033	20		38-32-11	050-099, 155, 162-165
D..	E	W1354	041	20		38-32-14	050-099, 150-199, 277-299
D..	E	W9510	001	20		38-32-11	276
D..	E	W9510	002	20		38-32-11	276
<b>GD03248</b>		<b>SH</b>				<b>1562/144/L026</b>	<b>ALL</b>
S..	E	W0966	031	20		38-32-11	ALL
S..	E	W1354	026	20		38-32-11	ALL
S..	E	W1354	030	12		38-32-11	ALL
S..	E	W1354	042	20		38-32-14	050-099, 150-199, 277-299

**GROUND LIST**

D280T132

**91-21-21**

Section GD03200

Page 1 End

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD03328</b>		<b>DC</b>				<b>R0268/14/RS</b>	<b>ALL</b>
D..	N	W0452	031	18		28-42-13	155-157, 165-199, 277-299
D..	N	W0464	026	18		28-42-12	ALL
<b>GD03330</b>		<b>SH</b>				<b>R0270/14/RS</b>	<b>ALL</b>
S..	N	W0452	032	18		28-42-13	155-157, 165-199, 277-299
S..	N	W0464	027	18		28-42-12	ALL
<b>GD03334</b>		<b>DC</b>				<b>R0254/14/RS</b>	<b>ALL</b>
D..	N	W0448	017	18		28-41-23	ALL
D..	N	W0452	027	18		28-31-11	050-099, 155-199, 276-299
<b>GD03336</b>		<b>SH</b>				<b>R0254/14/RS</b>	<b>ALL</b>
S..	N	W0448	018	18		28-41-23	ALL
S..	N	W0448	FRD			28-41-23	ALL
S..	N	W0452	028	18		28-31-11	050-099, 155-199, 276-299
<b>GD03338</b>							<b>ALL</b>
D..	N	W0448	020	18		28-41-22	ALL
<b>GD03342</b>		<b>DC</b>				<b>R0292/14/RS</b>	<b>ALL</b>
D..	N	W0464	012	18		28-42-11	ALL
<b>GD03344</b>		<b>SH</b>				<b>R0292/14/RS</b>	<b>ALL</b>
S..	N	W0452	010	18		28-42-11	ALL
S..	N	W0464	013	18		28-42-11	ALL
<b>GD03346</b>		<b>DC</b>				<b>R0432/12/TE</b>	<b>ALL</b>
D..	N	W0448	035	18		27-13-11	ALL
D..	N	W0448	036	18		27-13-11	ALL
<b>GD03348</b>		<b>SH</b>				<b>1092/143/R075</b>	<b>ALL</b>
S..	E	W0768	113	18		27-51-41	ALL
<b>GD03356</b>		<b>DC</b>				<b>L0335/14/RS</b>	<b>ALL</b>
D..	N	W0446	018	18		28-43-11	ALL
<b>GD03360</b>		<b>DC</b>				<b>L0342/14/RS</b>	<b>ALL</b>
D..	N	W0446	023	18		27-62-11	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD03300

Page 1

Mar 09/2006



## 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD03362</b>		<b>DC</b>				<b>L0292/14/RS</b>	<b>ALL</b>
D..	N	W0460	003	18		28-42-11	ALL
<b>GD03364</b>		<b>SH</b>				<b>L0292/14/RS</b>	<b>ALL</b>
S..	N	W0450	010	18		28-42-11	ALL
<b>GD03366</b>		<b>DC</b>				<b>L0268/14/RS</b>	<b>ALL</b>
D..	N	W0450	030	18		28-42-13	155-157, 165-199, 277-299
D..	N	W0460	006	18		28-42-12	ALL
<b>GD03370</b>		<b>SH</b>				<b>L0276/14/RS</b>	<b>ALL</b>
S..	N	W0446	053	18		28-41-21	ALL
<b>GD03372</b>							<b>ALL</b>
D..	N	W0446	054	18		28-41-21	ALL
<b>GD03374</b>		<b>DC</b>				<b>L0430/12/TE</b>	<b>ALL</b>
D..	N	W0446	058	18		27-13-11	ALL
D..	N	W0446	059	18		27-13-11	ALL
<b>GD03376</b>		<b>SH</b>				<b>L0380/14/TE</b>	<b>ALL</b>
S..	N	W0446	201Z			27-58-21	ALL
S..	N	W0446	301Z			27-58-21	ALL
<b>GD03378</b>		<b>DC</b>				<b>L0292/14/RS</b>	<b>ALL</b>
D..	N	W0450	008	18		28-42-11	ALL
<b>GD03382</b>		<b>DC</b>				<b>L0342/14/RS</b>	<b>ALL</b>
D..	N	W0454	003	18		28-21-13	ALL
D..	N	W0454	004	18		28-21-13	ALL
<b>GD03384</b>		<b>SH</b>				<b>L0342/14/RS</b>	<b>ALL</b>
S..	N	W0454	005	18		28-21-13	ALL
S..	N	W0454	201Z			28-21-13	ALL
<b>GD03386</b>		<b>DC</b>				<b>L0336/12/RS</b>	<b>ALL</b>
D..	N	W0454	009	18		28-22-21	ALL
<b>GD03388</b>		<b>DC</b>				<b>L0253/12/RS</b>	<b>ALL</b>
D..	N	W0450	026	18		28-31-11	050-099, 155-199, 276-299

### GROUND LIST

D280T132

**91-21-21**

Section GD03300

Page 2

Aug 05/2009





# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD03390</b>		<b>DC</b>				<b>L0276/14/RS</b>	<b>ALL</b>
D..	N	W0454	013	18		28-42-21	ALL
<b>GD03392</b>		<b>SH</b>				<b>L0276/14/RS</b>	<b>ALL</b>
S..	N	W0454	015	18		28-42-21	ALL
<b>GD03394</b>		<b>DC</b>				<b>L0337/12/RS</b>	<b>ALL</b>
D..	N	W0458	004	18		28-26-11	ALL
<b>GD03396</b>		<b>SH</b>				<b>L0336/12/RS</b>	<b>ALL</b>
S..	N	W0446	212Z			28-43-11	ALL
S..	N	W0446	FRD			31-31-25	ALL
S..	N	W0454	026	18		28-22-21	ALL
S..	N	W0458	301Z			28-26-11	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD03300

Page 3 End

Mar 09/2006



## 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD03400</b>		<b>SH</b>				<b>R0635/12/RS</b>	<b>ALL</b>
S..	N	W0456	006	18		28-21-13	ALL
S..	N	W0456	402Z			28-21-13	ALL
<b>GD03402</b>		<b>DC</b>				<b>R0343/12/RS</b>	<b>ALL</b>
D..	N	W0456	009	18		28-21-13	ALL
D..	N	W0456	010	18		28-21-13	ALL
<b>GD03404</b>		<b>SH</b>				<b>R0343/12/RS</b>	<b>ALL</b>
S..	N	W0456	011	18		28-21-13	ALL
<b>GD03406</b>		<b>DC</b>				<b>R0336/12/RS</b>	<b>ALL</b>
D..	N	W0456	014	18		28-26-11	ALL
<b>GD03410</b>		<b>SH</b>				<b>R0996/12/TE</b>	<b>ALL</b>
S..	N	W0456	015Z			27-11-22	ALL
S..	N	W0456	016	18		27-11-22	ALL
S..	N	W0456	401Z			27-11-22	ALL
<b>GD03412</b>		<b>SH</b>				<b>1092/145/L075</b>	<b>ALL</b>
S..	E	W0264	071	20		27-51-41	ALL
<b>GD03414</b>		<b>DC</b>				<b>R0343/12/RS</b>	<b>ALL</b>
D..	N	W0456	023	18		28-22-21	ALL
<b>GD03418</b>		<b>DC</b>				<b>R0275/14/RS</b>	<b>ALL</b>
D..	N	W0462	010	18		28-21-13	ALL
D..	N	W0462	011	18		28-21-13	ALL
<b>GD03420</b>		<b>SH</b>				<b>R0275/14/RS</b>	<b>ALL</b>
S..	N	W0448	021	18		28-41-22	ALL
S..	N	W0462	012	18		28-21-13	ALL
<b>GD03422</b>		<b>SH</b>				<b>R0343/12/RS</b>	<b>ALL</b>
S..	N	W0456	024	18		28-22-21	ALL
<b>GD03424</b>		<b>DC</b>				<b>R0158/12/FS</b>	<b>ALL</b>
D..	N	W0474	005	18		27-81-11	ALL

### GROUND LIST

D280T132

**91-21-21**  
Section GD03400  
Page 1  
Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD03426</b>		<b>AC</b>				<b>R0158/12/FS</b>	<b>ALL</b>
A..	N	W0474	006	18		27-81-11	ALL
<b>GD03428</b>		<b>SH</b>				<b>R0158/12/FS</b>	<b>ALL</b>
S..	N	W0474	007	18		27-81-11	ALL
<b>GD03430</b>		<b>DC</b>				<b>L0171/14/LE</b>	<b>ALL</b>
D..	N	W0466	005	18		27-81-21	ALL
<b>GD03432</b>		<b>AC</b>				<b>L0171/14/LE</b>	<b>ALL</b>
A..	N	W0466	006	18		27-81-21	ALL
<b>GD03434</b>		<b>SH</b>				<b>L0171/14/LE</b>	<b>ALL</b>
S..	N	W0466	007	18		27-81-21	ALL
<b>GD03436</b>		<b>SH</b>				<b>R0292/12/RS</b>	<b>ALL</b>
S..	N	W0464	011Z			28-42-11	155-157, 166-199, 277-299
S..	N	W0476	001	18		28-22-11	ALL
<b>GD03438</b>		<b>SH</b>				<b>R0253/14/RS</b>	<b>ALL</b>
S..	N	W0452	302Z			28-31-11	050-099, 155-199, 276-299
S..	N	W0478	001	14		28-22-12	ALL
S..	N	W0478	002	18		28-22-11	ALL
<b>GD03442</b>		<b>DC</b>				<b>L0276/14/RS</b>	<b>ALL</b>
D..	N	W0482	007	18		28-21-13	ALL
D..	N	W0482	008	18		28-21-13	ALL
<b>GD03446</b>		<b>DC</b>				<b>L0268/14/RS</b>	<b>ALL</b>
D..	N	W0482	011	14		28-25-11	ALL
<b>GD03448</b>		<b>SH</b>				<b>L0268/14/RS</b>	<b>ALL</b>
S..	N	W0450	031	18		28-42-13	155-157, 165-199, 277-299
S..	N	W0482	012	14		28-25-11	ALL
<b>GD03450</b>		<b>DC</b>				<b>L0245/14/RS</b>	<b>ALL</b>
D..	N	W0484	003	18		28-25-21	ALL
<b>GD03454</b>		<b>SH</b>				<b>L0635/14/RS</b>	<b>ALL</b>
S..	N	W0484	009	18		28-21-13	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD03400

Page 2

Mar 09/2006



## 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD03454</b>		<b>SH (continued)</b>				<b>L0635/14/RS</b>	<b>ALL</b>
S..	N	W0484	402Z			28-21-13	ALL
<b>GD03458</b>		<b>SH</b>				<b>L0976/12/RS</b>	<b>ALL</b>
S..	N	W0484	010Z			27-11-12	ALL
S..	N	W0484	011	18		27-11-12	ALL
S..	N	W0484	401Z			27-11-12	ALL
<b>GD03462</b>		<b>SH</b>				<b>L0803/12/TE</b>	<b>ALL</b>
S..	N	W0446	005	18		27-51-41	ALL
S..	N	W0446	202Z			27-51-41	ALL
S..	N	W0446	401Z			27-51-41	ALL
S..	N	W0446	407Z			27-58-11	ALL
<b>GD03464</b>		<b>SH</b>				<b>L0245/14/RS</b>	<b>ALL</b>
S..	N	W0484	017	18		28-25-21	ALL
<b>GD03470</b>		<b>DC</b>				<b>R0290/14/RS</b>	<b>ALL</b>
D..	N	W0452	008	18		28-42-11	ALL
<b>GD03476</b>		<b>SH</b>				<b>R0803/12/TE</b>	<b>ALL</b>
S..	N	W0464	018	18		27-51-41	ALL
S..	N	W0464	201Z			27-51-41	ALL
S..	N	W0464	401Z			27-51-41	ALL
S..	N	W0464	406Z			27-58-11	ALL
<b>GD03478</b>		<b>DC</b>				<b>R0343/14/RS</b>	<b>ALL</b>
D..	N	W0464	020	18		27-62-11	ALL
<b>GD03488</b>		<b>SH</b>				<b>L0337/12/RS</b>	<b>ALL</b>
S..	N	W0458	007	18		28-26-11	ALL
<b>GD03490</b>		<b>SH</b>				<b>R0336/12/RS</b>	<b>ALL</b>
S..	N	W0456	025	18		28-26-11	ALL
S..	N	W0456	303Z			28-26-11	ALL

### GROUND LIST

D280T132

**91-21-21**  
Section GD03400  
Page 3 End  
Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD03500</b>		<b>SH</b>				<b>1000/158/R001</b>	<b>ALL</b>
S..	E*	W0202	021	08		29-11-31	ALL
<b>GD03504</b>		<b>SH</b>				<b>1043/160/R005</b>	<b>ALL</b>
S..	E*	W0206	034	08		29-11-31	ALL
<b>GD03508</b>		<b>SH</b>				<b>NR230/140/</b>	<b>ALL</b>
S..	E*	W0288	014	10		29-11-22	ALL
<b>GD03512</b>		<b>SH</b>				<b>NL237/139/</b>	<b>ALL</b>
S..	E*	W0290	007	08		29-11-12	ALL
<b>GD03514</b>		<b>SH</b>				<b>L0429/12/LE</b>	<b>ALL</b>
S..	N	W0430	01TO			27-88-12	ALL
S..	N	W0430	02TO			27-88-12	ALL
S..	N	W0430	03TO			27-88-12	ALL
S..	N	W0430	04TO			27-88-12	ALL
S..	N	W0430	05TO			27-88-12	ALL
S..	N	W0430	06TO			27-88-12	ALL
S..	N	W0430	07TO			27-88-12	ALL
S..	N	W0430	08TO			27-88-12	ALL
S..	N	W0430	09TO			27-88-12	ALL
S..	N	W0430	10TO			27-88-12	ALL
<b>GD03516</b>		<b>SH</b>				<b>R0429/12/LE</b>	<b>ALL</b>
S..	N	W0480	01TO			27-88-22	ALL
S..	N	W0480	02TO			27-88-22	ALL
S..	N	W0480	03TO			27-88-22	ALL
S..	N	W0480	04TO			27-88-22	ALL
S..	N	W0480	05TO			27-88-22	ALL
S..	N	W0480	06TO			27-88-22	ALL
S..	N	W0480	07TO			27-88-22	ALL
S..	N	W0480	08TO			27-88-22	ALL
S..	N	W0480	09TO			27-88-22	ALL
S..	N	W0480	10TO			27-88-22	ALL
<b>GD03520</b>		<b>SH</b>				<b>L0291/12/RS</b>	<b>ALL</b>
S..	N	W0450	007Z			28-42-31	155-157, 166-199, 277-299
S..	N	W0450	009Z			28-42-11	155-157, 166-199, 277-299
S..	N	W0460	001	18		28-22-11	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD03500

Page 1

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD03530</b>		<b>SH</b>				<b>L0664/12/FS</b>	<b>ALL</b>
S..	N	W0472	009	18		28-21-11	ALL
<b>GD03550</b>		<b>DC</b>				<b>1724/256/L044</b>	<b>ALL</b>
D..	N	W0502	018	18		27-31-11	ALL
D..	N	W0502	019	18		27-31-11	ALL
<b>GD03554</b>		<b>YHLZG16</b>				<b>0742/150/L067</b>	<b>050-099</b>
<b>GD03554</b>		<b>YHLZG16</b>				<b>0742/150/L062</b>	<b>150-199, 275-299</b>
A..	2	W0602	116	16		33-42-21	ALL
S..	2	W0602	117	16		33-42-21	ALL
D..	2	W0628	107	20		29-11-12	ALL
D..	2	W0756	271	20		27-89-11	ALL
S..	2	W0942	519	20		21-26-31	ALL
D..	2	W0942	532	20		21-28-11	ALL
S..	2	W0942	534	20		21-28-11	ALL
D..	2	W0942	535	20		21-28-11	ALL
D..	2	W0942	536	20		21-28-11	ALL
D..	2	W0942	546	20		21-43-11	ALL
A..	2	W1258	027	20		30-71-22	150-199, 275-299
A..	2	W1258	068	20		30-71-22	050-099
A..	2	W1258	077	20		30-71-22	ALL
A..	2	W1258	079	20		30-71-22	050-099
A..	2	W1258	083	20		30-71-22	ALL
A..	2	W1258	087	20		30-71-22	ALL
A..	2	W1258	089	20		30-71-22	150-199
A..	2	W1258	633	20		30-71-22	275-299
A..	2	W1258	636	20		30-71-22	275-299
<b>GD03558</b>		<b>YHLZG16</b>				<b>0750/139/R070</b>	<b>ALL</b>
D..	2	W0588	045	22		29-11-22	ALL
A..	2	W0656	060	16		33-42-21	ALL
S..	2	W0656	061	16		33-42-21	ALL
<b>GD03560</b>		<b>AC</b>				<b>R0143/12/LE</b>	<b>ALL</b>
A..	N	W0656	063	16		33-42-21	ALL
<b>GD03564</b>		<b>DC</b>				<b>1524/160/R078</b>	<b>ALL</b>
D..	E	W0978	003	20		21-44-21	ALL
D..	E	W1356	19B	20		21-44-21	ALL
D..	E	W1356	20B	20		21-44-21	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD03500

Page 2

Mar 09/2006



Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD03566</b>		<b>SH</b>				<b>1461/195/R030</b>	<b>ALL</b>
S..	E	W1358	11G	20		21-26-21	ALL
<b>GD03586</b>		<b>DC</b>				<b>1832/244/L056</b>	<b>ALL</b>
D..	N	W0242	036	18		36-11-41	ALL
D..	N	W0242	037	18		36-11-41	ALL
<b>GD03588</b>		<b>AC</b>				<b>1832/244/L056</b>	<b>ALL</b>
A..	N	W0242	035	18		36-11-41	ALL

**GROUND LIST**

D280T132

**91-21-21**

Section GD03500

Page 3 End

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD03624</b>		<b>SH</b>				<b>0908/204/R095</b>	<b>050-099</b>
S..	E	W0786	045	20		25-65-12	050-099
<b>GD03626</b>		<b>DC</b>				<b>0908/204/R095</b>	<b>050-099</b>
D..	E	W0786	046	18		25-65-12	050-099
D..	E	W0786	058	20		25-65-12	050-099
D..	E	W0786	059	20		25-65-12	050-099
<b>GD03628</b>		<b>SH</b>				<b>0905/202/L097</b>	<b>050-099</b>
S..	E	W0786	052	20		25-65-11	050-099
<b>GD03630</b>		<b>DC</b>				<b>0905/202/L097</b>	<b>050-099</b>
D..	E	W0786	053	18		25-65-11	050-099
D..	E	W0786	060	20		25-65-11	050-099
D..	E	W0786	061	20		25-65-11	050-099
<b>GD03638</b>		<b>SH</b>				<b>1832/242/R041</b>	<b>ALL</b>
S..	N	W0242	032	18		33-31-31	ALL
<b>GD03640</b>		<b>DC</b>				<b>L0171/14/LE</b>	<b>ALL</b>
D..	N	W0440	022	18		27-81-21	ALL
<b>GD03644</b>		<b>SH</b>				<b>L0422/12/LE</b>	<b>ALL</b>
S..	N	W0468	004Z			30-11-11	ALL
S..	N	W0468	005Z			30-11-11	ALL
S..	N	W0468	205Z			33-43-11	ALL
S..	N	W0468	210Z			33-43-11	ALL
S..	N	W0468	211Z			33-44-21	ALL
S..	N	W0468	213Z			SPARE	155-199, 275-299
<b>GD03648</b>		<b>SH</b>				<b>L0450/12/LE</b>	<b>ALL</b>
S..	N	W0468	004Z			30-11-11	ALL
S..	N	W0468	005Z			30-11-11	ALL
S..	N	W0468	006	18		30-11-11	ALL
S..	N	W0468	213Z			SPARE	155-199, 275-299
<b>GD03652</b>		<b>SH</b>				<b>0428/208/R097</b>	<b>275-299</b>
S..	E	W0786	029	20		33-51-21	275-299

## GROUND LIST

D280T132

**91-21-21**  
Section GD03600  
Page 1  
Mar 09/2006





# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD03654</b>		<b>DC</b>				<b>0428/208/R097</b>	<b>275-299</b>
D..	E	W0786	030	20		33-51-21	275-299
<b>GD03660</b>		<b>SH</b>				<b>L0171/14/LE</b>	<b>ALL</b>
S..	N	W0440	023	18		27-81-21	ALL
<b>GD03662</b>		<b>SH</b>				<b>1307/195/R075</b>	<b>ALL</b>
S..	E	W0662	006	20		52-35-11	ALL
<b>GD03666</b>		<b>SH</b>				<b>L0437/14/LE</b>	<b>ALL</b>
S..	N	W0430	02TO			27-88-12	ALL
<b>GD03668</b>		<b>SH</b>				<b>L0478/12/LE</b>	<b>ALL</b>
S..	N	W0430	01TO			27-88-12	ALL
<b>GD03670</b>		<b>SH</b>				<b>L0580/12/LE</b>	<b>ALL</b>
S..	N	W0430	04TO			27-88-12	ALL
<b>GD03672</b>		<b>SH</b>				<b>L0628/12/LE</b>	<b>ALL</b>
S..	N	W0430	03TO			27-88-12	ALL
<b>GD03674</b>		<b>SH</b>				<b>L0732/12/LE</b>	<b>ALL</b>
S..	N	W0430	06TO			27-88-12	ALL
<b>GD03676</b>		<b>SH</b>				<b>L0778/12/LE</b>	<b>ALL</b>
S..	N	W0430	05TO			27-88-12	ALL
<b>GD03678</b>		<b>SH</b>				<b>L0879/12/LE</b>	<b>ALL</b>
S..	N	W0430	08TO			27-88-12	ALL
<b>GD03680</b>		<b>SH</b>				<b>L0933/12/LE</b>	<b>ALL</b>
S..	N	W0430	07TO			27-88-12	ALL
<b>GD03682</b>		<b>SH</b>				<b>L1024/12/LE</b>	<b>ALL</b>
S..	N	W0430	10TO			27-88-12	ALL
<b>GD03684</b>		<b>SH</b>				<b>L1082/12/LE</b>	<b>ALL</b>
S..	N	W0430	09TO			27-88-12	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD03600

Page 2

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD03688</b>		<b>SH</b>				<b>L0664/12/LE</b>	<b>ALL</b>
S..	N	W0472	214Z			28-21-11	ALL
<b>GD03694</b>		<b>SH</b>				<b>0138/200/L010</b>	<b>ALL</b>
S..	E	W0756	541	20		73-21-13	150-152
S..	E	W0756	542	20		73-21-13	150-152
S..	E	W0756	FR2			73-21-13	050-099, 157, 167-199, 277-299
S..	E	W0756	FR3			73-21-13	050-099, 157, 167-199, 277-299
S..	E	W0756	FRM			73-21-13	153-156, 162-166
S..	E	W0756	FRN			73-21-13	153-156, 162-166
S..	E	W0756	FRS			73-21-13	275-276
<b>GD03698</b>		<b>YHLZG16</b>				<b>0141/232/L033</b>	<b>ALL</b>
A..	2	W0011	032	20		33-13-11	ALL
A..	2	W0011	111	20		33-13-11	ALL
A..	2	W0011	113	20		33-13-11	ALL
A..	2	W0011	115	20		33-13-11	ALL
A..	2	W0011	184	20		33-13-11	ALL
A..	2	W0011	665	16		33-13-11	ALL
A..	2	W0051	065	20		33-13-11	ALL
A..	2	W0051	067	20		33-13-11	ALL
A..	2	W0051	069	20		33-13-11	ALL

## GROUND LIST

D280T132

**91-21-21**  
Section GD03600  
Page 3 End  
Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD03700</b>		<b>YHLZG16</b>				<b>0144/232/L033</b>	<b>ALL</b>
S..	2	W0011	242	20		22-32-12	ALL
S..	2	W0011	603	20		22-31-12	ALL
D..	2	W0011	630	20		34-46-11	ALL
A..	2	W0011	746	20		27-58-11	ALL
D..	2	W0011	761	20		33-16-11	ALL
S..	2	W0051	090	20		33-16-11	ALL
D..	2	W0051	093	20		33-16-11	ALL
D..	2	W0051	126	18		32-35-11	ALL
<b>GD03702</b>		<b>YHLZG16</b>				<b>0146/232/L033</b>	<b>ALL</b>
D..	2	W0011	737	20		73-21-14	ALL
D..	2	W0011	740	20		27-51-11	ALL
S..	2	W0011	748	20		27-58-11	ALL
A..	2	W0011	750	20		27-58-11	ALL
A..	2	W0017	914	20		33-13-11	150, 152-199, 275-299
D..	2	W0051	005	20		34-13-11	ALL
S..	2	W0051	006	20		34-13-11	ALL
S..	2	W0051	007	20		34-13-11	ALL
S..	2	W0051	009	20		34-24-11	ALL
A..	2	W9090	915	20		34-46-13	150, 152-199, 275-299
A..	2	W9090	918	20		34-46-13	150, 152-199, 275-299
<b>GD03708</b>		<b>SH</b>				<b>R0478/12/LE</b>	<b>ALL</b>
S..	N	W0480	01TO			27-88-22	ALL
<b>GD03712</b>		<b>SH</b>				<b>R0628/12/LE</b>	<b>ALL</b>
S..	N	W0480	03TO			27-88-22	ALL
<b>GD03714</b>		<b>SH</b>				<b>R1140/12/TIP</b>	<b>ALL</b>
S..	N	W0470	003	18		33-44-21	ALL
S..	N	W0470	211Z			33-44-21	ALL
<b>GD03716</b>		<b>SH</b>				<b>R0778/12/LE</b>	<b>ALL</b>
S..	N	W0480	05TO			27-88-22	ALL
<b>GD03718</b>		<b>SH</b>				<b>R0422/12/LE</b>	<b>ALL</b>
S..	N	W0470	004Z			30-11-11	ALL
S..	N	W0470	005Z			30-11-11	ALL
S..	N	W0470	205Z			33-43-11	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD03700

Page 1

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD03718</b>		<b>SH (continued)</b>				<b>R0422/12/LE</b>	<b>ALL</b>
S..	N	W0470	210Z			33-43-11	ALL
S..	N	W0470	211Z			33-44-21	ALL
S..	N	W0470	213Z			SPARE	155-199, 275-299
<b>GD03720</b>		<b>SH</b>				<b>R0933/12/LE</b>	<b>ALL</b>
S..	N	W0480	07TO			27-88-22	ALL
<b>GD03722</b>		<b>SH</b>				<b>R1140/12/TIP</b>	<b>ALL</b>
S..	N	W0470	203Z			33-43-11	ALL
S..	N	W0470	209Z			33-43-11	ALL
<b>GD03724</b>		<b>SH</b>				<b>R1082/12/LE</b>	<b>ALL</b>
S..	N	W0480	09TO			27-88-22	ALL
<b>GD03726</b>		<b>SH</b>				<b>R1140/12/TIP</b>	<b>ALL</b>
S..	N	W0470	204Z			33-43-11	ALL
S..	N	W0470	208Z			33-43-11	ALL
<b>GD03728</b>		<b>DC</b>				<b>0870/120/R020</b>	<b>ALL</b>
D..	N	W0952	020	18		21-52-31	ALL
D..	N	W0952	022	18		21-52-31	ALL
D..	N	W0952	024	18		21-52-31	ALL
D..	N	W0952	029	18		21-52-31	ALL
<b>GD03730</b>		<b>DC</b>				<b>0872/125/L040</b>	<b>ALL</b>
D..	N	W0508	023	18		21-52-31	ALL
D..	N	W0508	025	18		21-52-31	ALL
D..	N	W0508	027	18		21-52-31	ALL
D..	N	W0508	032	18		21-52-31	ALL
<b>GD03732</b>		<b>SH</b>				<b>R0450/12/LE</b>	<b>ALL</b>
S..	N	W0470	004Z			30-11-11	ALL
S..	N	W0470	005Z			30-11-11	ALL
S..	N	W0470	006	18		30-11-11	ALL
S..	N	W0470	213Z			SPARE	155-199, 275-299
<b>GD03734</b>		<b>SH</b>				<b>L0149/14/LE</b>	<b>ALL</b>
S..	N	W0440	024	18		27-81-21	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD03700

Page 2

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD03736</b>		<b>SH</b>				<b>L0400/12/LE</b>	<b>ALL</b>
S..	N	W0440	026	18		30-11-11	ALL
<b>GD03738</b>		<b>DC</b>				<b>L0400/12/LE</b>	<b>ALL</b>
D..	N	W0440	008	18		30-11-11	ALL
D..	N	W0440	025	18		30-11-11	ALL
<b>GD03750</b>		<b>SH</b>				<b>R0580/12/LE</b>	<b>ALL</b>
S..	N	W0480	04TO			27-88-22	ALL
<b>GD03754</b>		<b>SH</b>				<b>R0437/12/LE</b>	<b>ALL</b>
S..	N	W0480	02TO			27-88-22	ALL
<b>GD03758</b>		<b>SH</b>				<b>R0732/12/LE</b>	<b>ALL</b>
S..	N	W0480	06TO			27-88-22	ALL
<b>GD03760</b>		<b>SH</b>				<b>R0879/12/LE</b>	<b>ALL</b>
S..	N	W0480	08TO			27-88-22	ALL
<b>GD03762</b>		<b>SH</b>				<b>R1024/12/LE</b>	<b>ALL</b>
S..	N	W0480	10TO			27-88-22	ALL
<b>GD03764</b>		<b>SH</b>				<b>L0365/12/TE</b>	<b>ALL</b>
S..	N	W0446	051	18		32-42-11	ALL
S..	N	W0446	211Z			32-42-11	ALL
S..	N	W0450	022	18		32-42-11	ALL
S..	N	W0450	204Z			32-42-11	ALL
<b>GD03770</b>		<b>SH</b>				<b>L0345/12/TE</b>	<b>ALL</b>
S..	N	W0450	020	18		32-42-11	ALL
S..	N	W0450	021	18		32-42-11	ALL
S..	N	W0450	202Z			32-42-11	ALL
S..	N	W0450	203Z			32-42-11	ALL
<b>GD03774</b>		<b>SH</b>				<b>L0345/12/TE</b>	<b>ALL</b>
S..	N	W0446	049	18		32-42-11	ALL
S..	N	W0446	050	18		32-42-11	ALL
S..	N	W0446	209Z			32-42-11	ALL
S..	N	W0446	210Z			32-42-11	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD03700

Page 3

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD03776</b>		<b>SH</b>				<b>RS350/12/TE</b>	<b>ALL</b>
S..	N	W0448	023	18		32-42-11	ALL
S..	N	W0448	024	18		32-42-11	ALL
S..	N	W0448	201Z			32-42-11	ALL
S..	N	W0448	202Z			32-42-11	ALL
<b>GD03782</b>		<b>SH</b>				<b>R0349/12/TE</b>	<b>ALL</b>
S..	N	W0448	025	18		32-42-11	ALL
S..	N	W0448	203Z			32-42-11	ALL
S..	N	W0452	021	18		32-42-11	ALL
S..	N	W0452	204Z			32-42-11	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD03700

Page 4 End

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD03802</b>		<b>DC</b>				<b>0632/318/R014</b>	<b>050-099</b>
D..	E	W0794	015	20		21-24-11	050-099
<b>GD03804</b>		<b>SH</b>				<b>0632/318/R014</b>	<b>050-099</b>
S..	E	W0794	016	20		21-24-11	050-099
<b>GD03806</b>		<b>AC</b>				<b>1393/112/L007</b>	<b>ALL</b>
A..	E	W1366	03X	20		30-71-23	275-276
A..	E	W1366	G-B			30-71-23	275-276
A..	E	W1366	J-B			30-71-23	ALL
<b>GD03814</b>		<b>DC</b>				<b>0137/188/R001</b>	<b>ALL</b>
D..	E	W0756	061	20		78-36-11	150-199
D..	E	W0756	070	20		78-36-11	150-199
D..	E	W0756	520	20		31-51-42	ALL
D..	E	W0756	595	18		78-34-11	150-199
D..	E	W0756	806	20		24-22-11	ALL
D..	E	W0768	507	20		24-22-11	150-199, 275-276
<b>GD03816</b>		<b>DC</b>				<b>0137/188/R001</b>	<b>ALL</b>
D..	E	W0606	137	20		31-31-22	ALL
D..	E	W0606	138	20		31-31-22	ALL
D..	E	W0768	127	20		31-51-42	ALL
D..	E	W0768	507	20		24-22-11	050-099, 277-299
D..	E	W0768	535	18		78-34-21	150-199
D..	E	W0782	030	20		78-36-21	150-199
D..	E	W0782	043	20		78-36-21	150-199
<b>GD03836</b>		<b>DC</b>				<b>1524/160/R078</b>	<b>050-099, 150-199</b>
D..	E	W0978	005	20		21-44-22	050-099, 150-199
<b>GD03842</b>		<b>SH</b>				<b>0830/290/R080</b>	<b>050-099, 275-299</b>
S..	E	W0814	186	20		38-32-13	275-276
S..	E	W0814	186	20		38-32-16	277-299
S..	E	W0814	676	20		38-32-13	050-099
<b>GD03844</b>		<b>DC</b>				<b>0830/290/R080</b>	<b>050-099, 275-299</b>
D..	E	W0814	185	20		38-32-13	275-276
D..	E	W0814	185	20		38-32-16	277-299
D..	E	W0814	192	20		33-25-11	275-299

## GROUND LIST

D280T132

**91-21-21**

Section GD03800

Page 1

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD03844</b>		<b>DC (continued)</b>				<b>0830/290/R080</b>	<b>050-099, 275-299</b>
D..	E	W0814	670	20		38-32-13	050-099
D..	E	W0814	819	20		33-25-11	050-099
<b>GD03846</b>		<b>AC</b>				<b>0830/290/R080</b>	<b>050-099, 275-299</b>
A..	E	W0814	183	16		38-13-11	050-099, 275-299
A..	E	W0814	184	20		33-26-11	050-099, 275-299
<b>GD03848</b>		<b>SH</b>				<b>L1140/12/TIP</b>	<b>ALL</b>
S..	N	W0468	203Z			33-43-11	ALL
S..	N	W0468	209Z			33-43-11	ALL
<b>GD03852</b>		<b>SH</b>				<b>1500/147/L062</b>	<b>050-099, 150-199, 275-276</b>
S..	E	W0578	091	20		21-44-21	275-276
S..	E	W0662	008	20		33-31-61	050-099, 150-199
<b>GD03854</b>		<b>SH</b>				<b>1395/150/R080</b>	<b>ALL</b>
S..	E	W0662	009	20		33-31-61	ALL
<b>GD03856</b>		<b>SH</b>				<b>0632/145/R075</b>	<b>ALL</b>
S..	E	W0660	007	20		33-31-61	050-099
S..	E	W0660	077	20		33-31-61	150-199, 275-299
<b>GD03860</b>		<b>SH</b>				<b>0830/292/L035</b>	<b>ALL</b>
S..	E	W0792	047	20		38-32-12	050-099, 275-276
S..	E	W0792	047	20		38-32-16	277-299
S..	E	W0812	701	20		33-21-13	150-199
S..	E	W0814	892	22		38-32-12	150-154
S..	E	W0814	892	20		38-32-12	155-156, 162-165
S..	E	W0814	892	20		38-32-16	157, 166-199
<b>GD03864</b>		<b>AC</b>				<b>1245/140/R080</b>	<b>ALL</b>
A..	E	W0616	058	12		33-37-21	ALL

## GROUND LIST

D280T132

**91-21-21**  
Section GD03800  
Page 2 End  
Mar 09/2006





# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD03910</b>		<b>DC</b>				<b>0720/290/R065</b>	<b>050-099</b>
D..	E	W1222	069	20		33-51-12	050-099
D..	E	W1222	605	20		33-51-16	050-099
<b>GD03912</b>		<b>SH</b>				<b>1809/204/L019</b>	<b>275-299</b>
S..	N	W1296	014R	18		26-22-21	275-299
S..	N	W1296	015R	18		26-22-21	275-299
<b>GD03914</b>		<b>DC</b>				<b>1809/200/L019</b>	<b>275-299</b>
D..	N	W1296	013R	18		26-22-21	275-299
<b>GD03916</b>		<b>AC</b>				<b>0830/292/L035</b>	<b>050-099, 275-299</b>
A..	E	W0792	052	20		33-26-11	275-299
A..	E	W0792	053	16		38-13-11	050-099, 275-299
A..	E	W0792	101	20		33-26-11	050-099
<b>GD03918</b>		<b>DC</b>				<b>0830/292/L035</b>	<b>ALL</b>
D..	E	W0792	048	20		38-32-12	050-099, 275-276
D..	E	W0792	048	20		38-32-16	277-299
D..	E	W0792	069	20		33-25-11	275-299
D..	E	W0792	173	20		33-25-11	050-099
D..	E	W0814	891	22		38-32-12	150-154
D..	E	W0814	891	20		38-32-12	155-156, 162-165
D..	E	W0814	891	20		38-32-16	157, 166-199
<b>GD03920</b>		<b>SH</b>				<b>1375/112/L010</b>	<b>ALL</b>
S..	E	W0966	019	20		38-14-11	ALL
<b>GD03932</b>		<b>YHLZG16</b>				<b>0358/294/L062</b>	<b>ALL</b>
D..	2	W0428	009	20		25-31-12	050-099, 150-199
D..	2	W0428	014	20		35-21-12	050-099, 150-199
A..	2	W0428	016	18		30-71-25	050-099, 150-199
D..	2	W0665	030	20		23-42-11	ALL
A..	2	W0714	046	18		33-22-31	275-299
A..	2	W0714	047	18		33-22-31	275-299
A..	2	W0714	050	20		33-24-12	275-299
DED		W0714	050Z			33-24-12	277-278
D..	2	W0784	036	20		33-51-13	150-199, 275-299
D..	2	W0784	037	18		33-51-13	275-299
D..	2	W0784	038	20		33-51-13	050-099

## GROUND LIST

D280T132

**91-21-21**

Section GD03900

Page 1

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD03932</b>		<b>YHLZG16 (continued)</b>				<b>0358/294/L062</b>	<b>ALL</b>
D..	2	W0784	142	20		33-51-13	050-099, 162-199
D..	2	W0784	146	20		33-51-13	150-157
D..	2	W0832	036	20		33-51-13	050-099
S..	2	W1216	031	20		21-45-21	ALL
A..	2	W1224	035	20		33-22-11	ALL
A..	2	W1224	049	20		33-24-12	275-299
A..	2	W1224	077	20		33-22-41	ALL
S..	2	W1224	086	20		33-22-41	ALL
A..	2	W1224	088	20		33-22-41	ALL
A..	2	W1224	095	20		33-22-41	ALL
A..	2	W1228	043	20		33-22-11	ALL
DED		W1228	043Z			33-22-11	155-156, 166
S..	2	W1228	044	20		33-22-11	ALL
S..	2	W1228	045	20		33-22-11	ALL
<b>GD03934</b>		<b>SH</b>				<b>R0360/14/RS</b>	<b>ALL</b>
S..	N	W0452	201Z			25-65-12	ALL
<b>GD03936</b>		<b>SH</b>				<b>L0360/14/RS</b>	<b>ALL</b>
S..	N	W0450	201Z			25-65-11	ALL
<b>GD03938</b>		<b>SH</b>				<b>0999/193/L064</b>	<b>ALL</b>
S..	N	W0446	021	18		27-11-11	ALL
<b>GD03940</b>		<b>SH</b>				<b>0999/193/L064</b>	<b>ALL</b>
S..	N	W0446	022Z			27-62-11	ALL
S..	N	W0446	201Z			27-58-21	ALL
S..	N	W0446	212Z			28-43-11	ALL
S..	N	W0446	216Z			27-18-11	155-157, 166-199, 277-299
S..	N	W0446	217Z			27-18-11	155-157, 166-199, 277-299
S..	N	W0446	301Z			27-58-21	ALL
S..	N	W0446	305Z			27-18-11	155-157, 166-199, 277-299
S..	N	W0446	405Z			27-18-11	050-099, 150-154, 162-165, 275-276
S..	N	W0446	406Z			27-18-11	050-099, 150-154, 162-165, 275-276
S..	N	W0446	407Z			27-58-11	ALL
<b>GD03942</b>		<b>SH</b>				<b>1047/191/L064</b>	<b>ALL</b>
S..	N	W0484	010Z			27-11-12	ALL
S..	N	W0484	302Z			28-25-21	ALL
S..	N	W0484	401Z			27-11-12	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD03900

Page 2

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD03942</b>		<b>SH (continued)</b>				<b>1047/191/L064</b>	<b>ALL</b>
S..	N	W0484	402Z			28-21-13	ALL
<b>GD03944</b>		<b>SH</b>				<b>1012/191/R064</b>	<b>ALL</b>
S..	N	W0456	201Z			28-21-13	ALL
S..	N	W0456	401Z			27-11-22	ALL
S..	N	W0456	402Z			28-21-13	ALL
<b>GD03946</b>		<b>SH</b>				<b>1002/191/R064</b>	<b>ALL</b>
S..	N	W0448	301Z			27-13-11	ALL
S..	N	W0448	38TO			28-41-23	ALL
S..	N	W0448	WHTZ			28-41-22	ALL
S..	N	W0452	300Z			28-31-12	050-099, 155-199, 276-299
<b>GD03948</b>		<b>SH</b>				<b>R1085/12/RS</b>	<b>ALL</b>
S..	N	W0464	205Z			27-18-11	155-157, 166-199, 277-299
S..	N	W0464	304Z			27-18-11	155-157, 166-199, 277-299
S..	N	W0464	404Z			27-18-11	050-099, 150-154, 162-165, 275-276
<b>GD03950</b>		<b>SH</b>				<b>R0529/12/RS</b>	<b>ALL</b>
S..	N	W0464	206Z			27-18-11	155-157, 166-199, 277-299
S..	N	W0464	305Z			27-18-11	155-157, 166-199, 277-299
S..	N	W0464	405Z			27-18-11	050-099, 150-154, 162-165, 275-276
<b>GD03952</b>		<b>SH</b>				<b>L1085/12/TE</b>	<b>ALL</b>
S..	N	W0446	217Z			27-18-11	155-157, 166-199, 277-299
S..	N	W0446	305Z			27-18-11	155-157, 166-199, 277-299
S..	N	W0446	406Z			27-18-11	050-099, 150-154, 162-165, 275-276
<b>GD03956</b>		<b>SH</b>				<b>0999/193/L039</b>	<b>ALL</b>
S..	N	W0450	202Z			32-42-11	ALL
S..	N	W0450	203Z			32-42-11	ALL
S..	N	W0450	204Z			32-42-11	ALL
<b>GD03960</b>		<b>SH</b>				<b>1017/191/R064</b>	<b>ALL</b>
S..	N	W0464	025Z			28-42-12	ALL
S..	N	W0464	204Z			27-62-11	ALL
S..	N	W0464	205Z			27-18-11	155-157, 166-199, 277-299
S..	N	W0464	206Z			27-18-11	155-157, 166-199, 277-299
S..	N	W0464	405Z			27-18-11	050-099, 150-154, 162-165, 275-276

## GROUND LIST

D280T132

**91-21-21**

Section GD03900

Page 3

Mar 09/2006



## 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD03962</b>		<b>SH</b>				<b>1016/191/R064</b>	<b>ALL</b>
S..	N	W0464	011Z			28-42-11	ALL
S..	N	W0464	304Z			27-18-11	155-157, 166-199, 277-299
S..	N	W0464	305Z			27-18-11	155-157, 166-199, 277-299
S..	N	W0464	404Z			27-18-11	050-099, 150-154, 162-165, 275-276
<b>GD03966</b>		<b>SH</b>				<b>L0349/14/RS</b>	<b>ALL</b>
S..	N	W0446	022Z			27-62-11	ALL
<b>GD03968</b>		<b>SH</b>				<b>0999/193/L064</b>	<b>ALL</b>
S..	N	W0446	202Z			27-51-41	ALL
S..	N	W0446	303	20		31-31-25	ALL
S..	N	W0446	304Z			27-18-11	155-157, 166-199, 277-299
S..	N	W0446	401Z			27-51-41	ALL
S..	N	W0446	WHTZ			28-41-21	ALL
<b>GD03970</b>		<b>SH</b>				<b>1018/191/R064</b>	<b>ALL</b>
S..	N	W0464	201Z			27-51-41	ALL
S..	N	W0464	406Z			27-58-11	ALL
<b>GD03972</b>		<b>SH</b>				<b>1015/191/R064</b>	<b>ALL</b>
S..	N	W0456	015Z			27-11-22	ALL
S..	N	W0456	302Z			28-22-21	ALL
S..	N	W0456	303Z			28-26-11	ALL
S..	N	W0476	301Z			28-22-11	ALL
<b>GD03974</b>		<b>SH</b>				<b>1439/270/R085</b>	<b>ALL</b>
S..	E	W0816	583	20		33-21-34	ALL
<b>GD03980</b>		<b>YHLZG16</b>				<b>0411/145/L080</b>	<b>ALL</b>
D..	2	W0572	073	20		21-58-12	ALL
DED		W0572	073Z			21-58-12	155-199
S..	2	W0986	029	16		21-58-14	ALL
D..	2	W0986	031	18		21-58-14	ALL
D..	2	W0986	050	20		21-58-12	ALL
D..	2	W0986	055	20		21-58-12	ALL
A..	2	W0986	056	20		21-58-12	ALL
DED		W0986	056Z			21-58-12	ALL
S..	2	W0986	057	20		21-58-12	ALL

### GROUND LIST

D280T132

**91-21-21**  
Section GD03900  
Page 4  
Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD03982</b>		<b>SH</b>				<b>L0350/12/TE</b>	<b>ALL</b>
S..	N	W0446	062	18		32-42-11	ALL
S..	N	W0446	063	18		32-42-11	ALL
S..	N	W0450	023	18		32-42-11	ALL
S..	N	W0450	024	18		32-42-11	ALL
<b>GD03984</b>		<b>SH</b>				<b>L0365/12/TE</b>	<b>ALL</b>
S..	N	W0446	064	18		32-42-11	ALL
S..	N	W0450	025	18		32-42-11	ALL
<b>GD03986</b>		<b>SH</b>				<b>R0350/12/TE</b>	<b>ALL</b>
S..	N	W0448	045	18		32-42-11	ALL
S..	N	W0448	046	18		32-42-11	ALL
S..	N	W0452	024	18		32-42-11	ALL
S..	N	W0452	025	18		32-42-11	ALL
<b>GD03988</b>		<b>SH</b>				<b>R0349/12/TE</b>	<b>ALL</b>
S..	N	W0448	047	18		32-42-11	ALL
S..	N	W0452	026	18		32-42-11	ALL
<b>GD03990</b>		<b>SH</b>				<b>1008/191/R064</b>	<b>ALL</b>
S..	N	W0452	201Z			25-65-12	ALL
S..	N	W0452	203Z			32-42-11	ALL
S..	N	W0452	204Z			32-42-11	ALL
S..	N	W0452	301Z			29-31-11	ALL
<b>GD03992</b>		<b>SH</b>				<b>1010/191/L038</b>	<b>ALL</b>
S..	N	W0450	007Z			28-42-31	ALL
S..	N	W0450	009Z			28-42-11	ALL
S..	N	W0450	201Z			25-65-11	ALL
S..	N	W0450	301Z			29-31-11	ALL
<b>GD03994</b>		<b>SH</b>				<b>0999/193/L039</b>	<b>ALL</b>
S..	N	W0444	300Z			28-31-21	155-157, 165-199, 277-299
S..	N	W0444	301Z			28-22-11	ALL
S..	N	W0444	302Z			28-22-12	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD03900

Page 5 End

Mar 09/2006



## 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD04000</b>		<b>SH</b>				<b>R0432/12/RS</b>	<b>ALL</b>
S..	N	W0448	301Z			27-13-11	ALL
<b>GD04002</b>		<b>SH</b>				<b>L0430/12/RS</b>	<b>ALL</b>
S..	N	W0446	302Z			27-13-11	ALL
<b>GD04004</b>		<b>SH</b>				<b>1019/191/R064</b>	<b>ALL</b>
S..	N	W0464	401Z			27-51-41	ALL
<b>GD04006</b>		<b>SH</b>				<b>L0528/12/RS</b>	<b>ALL</b>
S..	N	W0446	216Z			27-18-11	155-157, 166-199, 277-299
S..	N	W0446	304Z			27-18-11	155-157, 166-199, 277-299
S..	N	W0446	405Z			27-18-11	050-099, 150-154, 162-165, 275-276
<b>GD04022</b>		<b>SH</b>				<b>R0350/14/RS</b>	<b>ALL</b>
S..	N	W0464	204Z			27-62-11	ALL
<b>GD04028</b>		<b>SH</b>				<b>R0274/14/RS</b>	<b>ALL</b>
S..	N	W0462	201Z			28-21-13	ALL
<b>GD04034</b>		<b>SH</b>				<b>0999/193/L064</b>	<b>ALL</b>
S..	N	W0454	19TO			28-41-23	ALL
S..	N	W0454	BLKZ			28-41-23	ALL
S..	N	W0458	301Z			28-26-11	ALL
<b>GD04038</b>		<b>SH</b>				<b>1047/191/L064</b>	<b>ALL</b>
S..	N	W0482	001Z			28-25-21	ALL
S..	N	W0482	010Z			28-25-11	ALL
S..	N	W0482	201Z			28-21-13	ALL
<b>GD04040</b>		<b>SH</b>				<b>1008/191/R039</b>	<b>ALL</b>
S..	N	W0478	300Z			28-31-21	155-157, 165-199, 277-299
S..	N	W0478	301Z			28-22-12	ALL
S..	N	W0478	302Z			28-22-11	ALL
S..	N	W0968	012	18		29-32-11	ALL
<b>GD04042</b>		<b>SH</b>				<b>R0293/14/MS</b>	<b>ALL</b>
S..	N	W0476	301Z			28-22-11	ALL
S..	N	W0478	302Z			28-22-11	ALL

### GROUND LIST

D280T132

**91-21-21**  
Section GD04000  
Page 1  
Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD04044</b>		<b>SH</b>				<b>1007/191/R064</b>	<b>ALL</b>
S..	N	W0452	009Z			28-42-11	ALL
S..	N	W0452	202Z			32-42-11	ALL
S..	N	W0452	302Z			28-31-11	050-099, 155-199, 276-299
<b>GD04048</b>		<b>SH</b>				<b>L0293/14/MS</b>	<b>ALL</b>
S..	N	W0444	301Z			28-22-11	ALL
S..	N	W0460	301Z			28-22-11	ALL
<b>GD04050</b>		<b>SH</b>				<b>1015/191/L038</b>	<b>ALL</b>
S..	N	W0450	100Z			28-42-13	155-157, 165-199, 277-299
S..	N	W0450	300Z			28-31-12	050-099, 155-199, 276-299
S..	N	W0450	302Z			28-31-11	050-099, 155-199, 276-299
S..	N	W0460	002Z			28-42-11	ALL
S..	N	W0460	005Z			28-42-12	ALL
S..	N	W0460	010Z			28-42-31	ALL
S..	N	W0460	104	18		28-22-31	ALL
DED		W0460	104Z			28-22-31	ALL
S..	N	W0460	301Z			28-22-11	ALL
<b>GD04052</b>		<b>SH</b>				<b>L0250/14/MS</b>	<b>ALL</b>
S..	N	W0444	300Z			28-31-21	155-157, 165-199, 277-299
S..	N	W0444	302Z			28-22-12	ALL
<b>GD04056</b>		<b>SH</b>				<b>L0253/12/RS</b>	<b>ALL</b>
S..	N	W0450	302Z			28-31-11	050-099, 155-199, 276-299
S..	N	W1731	019	18		22-11-22	ALL
<b>GD04058</b>		<b>SH</b>				<b>R0271/14/MS</b>	<b>ALL</b>
S..	N	W0478	300Z			28-31-21	155-157, 165-199, 277-299
S..	N	W0478	301Z			28-22-12	ALL
<b>GD04062</b>		<b>SH</b>				<b>R0347/12/RS</b>	<b>ALL</b>
S..	N	W0456	022Z			28-22-21	ALL
S..	N	W0456	302Z			28-22-21	ALL
<b>GD04066</b>		<b>SH</b>				<b>L0329/12/RS</b>	<b>ALL</b>
S..	N	W0454	008Z			28-22-21	ALL
S..	N	W0454	302Z			28-22-21	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD04000

Page 2

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD04070</b>		<b>SH</b>				<b>L0253/14/RS</b>	<b>050-099, 155-199, 276-299</b>
S..	N	W0450	027	18		28-31-11	050-099, 155-199, 276-299
<b>GD04072</b>		<b>SH</b>				<b>L0252/14/RS</b>	<b>ALL</b>
S..	N	W0444	006	14		28-31-21	155-157, 165-199, 277-299
S..	N	W0484	002Z			28-25-21	ALL
S..	N	W0484	302Z			28-25-21	ALL
<b>GD04084</b>		<b>SH</b>				<b>R0430/14/ET</b>	<b>ALL</b>
S..	N	W0452	301Z			29-31-11	ALL
<b>GD04086</b>		<b>SH</b>				<b>L0439/14/TE</b>	<b>ALL</b>
S..	N	W0450	301Z			29-31-11	ALL
<b>GD04088</b>							<b>ALL</b>
S..	N	W0446	FRB			28-41-21	ALL
<b>GD04090</b>		<b>SH</b>				<b>1006/191/L064</b>	<b>ALL</b>
S..	N	W0446	209Z			32-42-11	ALL
S..	N	W0446	210Z			32-42-11	ALL
S..	N	W0446	211Z			32-42-11	ALL
S..	N	W0446	302Z			27-13-11	ALL
S..	N	W0446	42TO			28-41-21	ALL
S..	N	W0446	FRA			28-41-21	ALL
<b>GD04094</b>							<b>ALL</b>
S..	N	W0448	FRB			28-41-22	ALL
<b>GD04098</b>		<b>SH</b>				<b>0999/193/R064</b>	<b>ALL</b>
S..	N	W0448	201Z			32-42-11	ALL
S..	N	W0448	202Z			32-42-11	ALL
S..	N	W0448	203Z			32-42-11	ALL
S..	N	W0448	22TO			28-41-22	ALL

## GROUND LIST

D280T132

**91-21-21**  
Section GD04000  
Page 3 End  
Mar 09/2006





# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD04100</b>		<b>SH</b>				<b>R0350/12/TE</b>	<b>ALL</b>
S..	N	W0452	019	18		32-42-11	ALL
S..	N	W0452	020	18		32-42-11	ALL
S..	N	W0452	202Z			32-42-11	ALL
S..	N	W0452	203Z			32-42-11	ALL
<b>GD04108</b>		<b>SH</b>				<b>R0261/14/RS</b>	<b>ALL</b>
S..	N	W0452	100Z			28-42-13	155-157, 165-199, 277-299
S..	N	W0464	025Z			28-42-12	ALL
S..	N	W0478	006	14		28-31-21	155-157, 165-199, 277-299
<b>GD04110</b>		<b>SH</b>				<b>L0257/ /RS</b>	<b>ALL</b>
S..	N	W0444	001	18		28-22-11	ALL
S..	N	W0444	002	14		28-22-12	ALL
S..	N	W0450	100Z			28-42-13	155-157, 165-199, 277-299
S..	N	W0460	005Z			28-42-12	ALL
S..	N	W0460	007	18		28-42-12	ALL
S..	N	W0460	008Z			28-42-31	ALL
<b>GD04120</b>		<b>SH</b>				<b>R0300/14/RS</b>	<b>ALL</b>
S..	N	W0452	009Z			28-42-11	ALL
S..	N	W0464	011Z			28-42-11	050-099, 150-154, 162-165, 275-276
<b>GD04124</b>		<b>SH</b>				<b>L0300/14/RS</b>	<b>ALL</b>
S..	N	W0450	007Z			28-42-31	050-099, 150-154, 162-165, 275-276
S..	N	W0450	009Z			28-42-11	050-099, 150-154, 162-165, 275-276
S..	N	W0460	002Z			28-42-11	ALL
S..	N	W0460	004	18		28-42-11	ALL
S..	N	W0460	009Z			28-42-31	ALL
<b>GD04132</b>							<b>ALL</b>
S..	N	W0454	19TO			28-41-23	ALL
S..	N	W0454	BLKZ			28-41-23	ALL
<b>GD04134</b>		<b>SH</b>				<b>0999/193/L064</b>	<b>ALL</b>
S..	N	W0454	014Z			28-42-21	ALL
S..	N	W0454	027	18		28-22-31	ALL
S..	N	W0454	201Z			28-21-13	ALL
S..	N	W0454	302Z			28-22-21	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD04100

Page 1

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD04140</b>		<b>SH</b>				<b>1003/191/R064</b>	<b>ALL</b>
S..	N	W0448	BLKZ			28-41-23	ALL
S..	N	W0448	FRA			28-41-22	ALL
S..	N	W0448	FRC			28-41-23	ALL
S..	N	W0452	100Z			28-42-13	155-157, 165-199, 277-299
<b>GD04142</b>							<b>ALL</b>
S..	N	W0448	38TO			28-41-23	ALL
S..	N	W0448	BLKZ			28-41-23	ALL
<b>GD04148</b>		<b>SH</b>				<b>L0409/12/RS</b>	<b>ALL</b>
S..	N	W0446	42TO			28-41-21	ALL
S..	N	W0446	WHTZ			28-41-21	ALL
<b>GD04156</b>		<b>SH</b>				<b>R0409/12/RS</b>	<b>ALL</b>
S..	N	W0448	22TO			28-41-22	ALL
S..	N	W0448	WHTZ			28-41-22	ALL
<b>GD04162</b>		<b>SH</b>				<b>1049/191/R064</b>	<b>ALL</b>
S..	N	W0462	021	20		31-31-22	ALL
S..	N	W0462	201Z			28-21-13	ALL
<b>GD04168</b>		<b>YHLZG16</b>				<b>0999/197/R042</b>	<b>ALL</b>
A..	2	W0656	018	20		32-41-11	ALL
A..	2	W0656	035	20		32-41-11	ALL
A..	2	W0752	040	20		27-18-11	ALL
A..	2	W0752	042	20		27-18-11	ALL
A..	2	W0752	044	20		27-58-11	050-099, 150-155, 162-165, 275-276
<b>GD04170</b>		<b>YHLZG16</b>				<b>0590/127/L060</b>	<b>ALL</b>
A..	2	W0702	031	20		25-53-15	150-199, 275-299
S..	2	W0702	034	20		25-53-15	150-199, 275-299
A..	2	W0702	041	20		25-53-15	150-199, 275-299
S..	2	W0702	044	20		25-53-15	150-199, 275-299
A..	2	W0702	051	20		25-53-15	150-199, 275-299
S..	2	W0702	054	20		25-53-15	150-199, 275-299
A..	2	W0702	131	20		25-53-17	ALL
S..	2	W0702	134	20		25-53-17	ALL
D..	2	W0986	075	20		21-43-11	ALL
D..	2	W0986	077	20		21-43-12	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD04100

Page 2

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD04170</b>		<b>YHLZG16 (continued)</b>				<b>0590/127/L060</b>	<b>ALL</b>
S..	2	W1232	112	20		21-66-11	050-099, 162-199
D..	2	W1232	117	20		21-66-11	050-099, 162-199
A..	2	W1232	120	20		21-66-11	050-099, 162-199
D..	2	W1232	122	20		21-66-11	050-099, 162-199
<b>GD04178</b>		<b>SH</b>				<b>0632/210/L095</b>	<b>050-099</b>
S..	E	W0784	085	14		33-41-11	050-099
<b>GD04180</b>		<b>SH</b>				<b>0632/207/R093</b>	<b>050-099</b>
S..	E	W0786	057	14		33-41-11	050-099
<b>GD04182</b>		<b>AC</b>				<b>SL306/12/FS</b>	<b>ALL</b>
A..	N	W1288	003	10		33-45-11	ALL
A..	N	W1288	006	10		33-45-11	ALL
<b>GD04184</b>		<b>SH</b>				<b>SL306/12/FS</b>	<b>ALL</b>
S..	N	W1288	004	10		33-45-11	ALL
S..	N	W1288	005	10		33-45-11	ALL
<b>GD04186</b>		<b>AC</b>				<b>SR194/12/FS</b>	<b>ALL</b>
A..	N	W1290	003	10		33-45-11	ALL
A..	N	W1290	006	10		33-45-11	ALL
<b>GD04188</b>		<b>SH</b>				<b>SR206/12/FS</b>	<b>ALL</b>
S..	N	W1290	004	10		33-45-11	ALL
S..	N	W1290	005	10		33-45-11	ALL
<b>GD04190</b>		<b>AC</b>				<b>0764/126/L059</b>	<b>ALL</b>
A..	E	W0602	081	12		33-42-11	ALL
<b>GD04192</b>		<b>YHLZG16</b>				<b>0358/294/R062</b>	<b>ALL</b>
D..	2	W0222	033	20		25-31-11	050-099, 150-199
A..	2	W0222	096	20		25-31-11	277-299
A..	2	W0222	179	18		30-71-25	050-099, 150-199
A..	2	W0222	629	20		33-24-13	280-299
D..	2	W1222	506	18		33-51-12	162-199
A..	2	W1224	017	20		33-24-14	275-299

## GROUND LIST

D280T132

**91-21-21**

Section GD04100

Page 3

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD04194</b>		<b>YHLZG16</b>				<b>0358/294/L062</b>	<b>ALL</b>
A..	2	W0428	002	20		33-22-31	050-099, 150-199
D..	2	W0645	156	20		23-31-12	275-299
S..	2	W0645	157	20		23-31-12	275-299
A..	2	W0645	159	20		23-31-12	275-299
D..	2	W0714	036	20		35-21-12	280-299
A..	2	W0814	773	20		33-22-31	280-299
A..	2	W0814	774	20		33-22-31	280-299
D..	2	W0832	031	16		33-51-14	150-157
A..	2	W1224	809	20		33-22-41	050-099, 150-157
A..	2	W1228	606	20		33-27-11	050-099
S..	2	W1228	607	20		33-27-11	050-099, 150-199
A..	2	W1228	608	20		33-27-11	050-099, 150-199
DED		W1228	608Z			33-27-11	155-156, 166
A..	2	W1228	612	20		33-27-11	050-099, 150-199
DED		W1228	612Z			33-27-11	155-156, 166
S..	2	W1228	613	20		33-27-11	050-099, 150-199
S..	2	W1228	614	20		33-27-11	050-099, 150-199
A..	2	W1228	615	20		33-27-11	050-099, 150-199
D..	2	W1230	090	20		30-46-11	050-099, 275-299
S..	2	W1230	091	20		30-46-11	050-099, 275-299
<b>GD04198</b>		<b>YHLZG16</b>				<b>0808/295/L015</b>	<b>ALL</b>
D..	2	W0665	029	20		23-42-11	275-299
D..	2	W0665	048	20		23-42-12	275-299
D..	2	W0665	051	20		23-42-12	275-299
D..	2	W0665	068	20		23-42-11	275-278
D..	2	W0665	071	20		23-42-11	275-278
D..	2	W0665	195	20		23-42-11	280-299
D..	2	W0665	197	20		23-42-11	280-299
A..	2	W0784	078	20		33-22-21	050-099
A..	2	W0822	030	20		33-22-42	275-299
S..	2	W0822	037	20		33-22-42	275-299
S..	2	W0822	104	20		33-21-13	275-299
S..	2	W0822	118	20		33-21-13	ALL
A..	2	W0822	124	20		33-21-13	150-199
S..	2	W0822	125	20		33-21-13	150-199
S..	2	W0822	130	20		33-21-13	150-199
A..	2	W1224	807	20		33-22-41	050-099
A..	2	W1236	001	18		33-22-31	275-299
A..	2	W1236	011	18		33-22-31	050-099, 275-299

## GROUND LIST

D280T132

**91-21-21**

Section GD04100

Page 4

Mar 09/2006



Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD04198</b>		<b>YHLZG16 (continued)</b>				<b>0808/295/L015</b>	<b>ALL</b>
A..	2	W1236	149	18		33-22-31	050-099
D..	2	W1252	004	20		25-63-11	275-299
S..	2	W1252	006	20		25-63-11	275-299
A..	2	W1280	005	20		33-24-13	275-278
A..	2	W1280	010	20		33-24-13	150-199
A..	2	W1280	020	20		33-24-13	150-199
A..	2	W1280	085	20		33-24-13	150-199
A..	2	W1280	575	20		33-24-13	280-299
D..	2	W1282	004	20		35-21-14	275-278
D..	2	W1282	007	20		35-21-14	150-199
D..	2	W1282	010	20		35-21-14	150-199
D..	2	W1282	162	20		35-21-14	050-099
D..	2	W1282	172	20		35-21-14	050-099
D..	2	W1282	572	20		35-21-14	280-299

**GROUND LIST**

D280T132

**91-21-21**

Section GD04100

Page 5 End

Mar 09/2006



## 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD04202</b>		<b>SH</b>				<b>1158/145/R075</b>	<b>ALL</b>
S..	E	W1208	009	08		29-21-31	ALL
<b>GD04204</b>		<b>SH</b>				<b>0390/112/0000</b>	<b>ALL</b>
D..	E	W0738	040	20		21-58-11	ALL
D..	E	W0986	033	20		21-58-11	ALL
<b>GD04208</b>		<b>DC</b>				<b>0999/220/L095</b>	<b>ALL</b>
D..	E	W0788	079	14		33-51-21	ALL
D..	E	W0790	029	20		33-51-11	275-299
D..	E	W0790	120	20		33-51-17	275-299
A..	E	W0816	107	20		33-21-34	150-157
A..	E	W0816	107	16		33-21-34	162-199
DED		W0816	107Z			33-21-34	155-156, 166
<b>GD04210</b>		<b>DC</b>				<b>0999/220/R095</b>	<b>050-099</b>
<b>GD04210</b>		<b>DC</b>				<b>0999/211/R098</b>	<b>150-199, 275-299</b>
D..	E	W0786	065	14		33-51-21	ALL
<b>GD04212</b>		<b>DC</b>				<b>1373/170/L086</b>	<b>ALL</b>
D..	E	W0580	090	20		21-44-11	ALL
D..	E	W0580	119	20		21-44-21	ALL
D..	E	W0784	107	20		33-51-21	050-099
<b>GD04214</b>		<b>AC</b>				<b>0281/153/R026</b>	<b>ALL</b>
A..	E	W0924	003	10		33-42-11	ALL
A..	E	W0924	004	10		33-42-11	ALL
A..	E	W0924	013	14		33-42-21	ALL
A..	E	W0924	014	14		33-42-21	ALL
<b>GD04216</b>		<b>DC</b>				<b>0456/204/L096</b>	<b>275-299</b>
D..	E	W0784	016	20		33-51-11	275-299
D..	E	W0784	120	20		33-51-17	275-299
<b>GD04218</b>		<b>SH</b>				<b>0456/204/L096</b>	<b>275-299</b>
S..	E	W0784	014	20		33-51-11	275-299
<b>GD04220</b>		<b>DC</b>				<b>1087/210/R095</b>	<b>050-099</b>
<b>GD04220</b>		<b>DC</b>				<b>1087/203/R095</b>	<b>150-199, 275-299</b>
D..	E	W0786	067	14		33-51-21	ALL

### GROUND LIST

D280T132

**91-21-21**  
Section GD04200  
Page 1  
Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD04222</b>		<b>SH</b>				<b>0478/115/L038</b>	<b>ALL</b>
S..	E	W0986	001	18		21-58-13	ALL
<b>GD04224</b>		<b>AC</b>				<b>0478/115/L038</b>	<b>ALL</b>
A..	E	W0986	007	20		21-58-13	ALL
<b>GD04276</b>		<b>DC</b>				<b>L0422/14/LE</b>	<b>ALL</b>
D..	N	W0472	004	18		28-21-12	ALL
D..	N	W0472	214B	20		28-21-11	ALL
D..	N	W0472	215B	20		28-21-11	ALL
D..	N	W0472	216B	20		28-21-11	ALL
<b>GD04298</b>		<b>DC</b>				<b>1809/200/R019</b>	<b>ALL</b>
D..	N	W1296	008R	18		26-22-21	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD04200

Page 2 End

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD04300</b>		<b>DC</b>				<b>1809/200/L019</b>	<b>275-299</b>
D..	N	W1296	016R	18		26-22-21	275-299
<b>GD04302</b>		<b>SH</b>				<b>1055/195/R035</b>	<b>ALL</b>
S..	N	W0680	012	18		29-21-31	ALL
S..	N	W0680	013	18		29-21-31	ALL
<b>GD04318</b>		<b>SH</b>				<b>R0352/12/RS</b>	<b>ALL</b>
S..	N	W0456	201Z			28-21-13	ALL
<b>GD04320</b>		<b>YHLZG16</b>				<b>0454/127/R060</b>	<b>ALL</b>
A..	2	W0702	011	20		25-53-15	050-099
S..	2	W0702	014	20		25-53-15	050-099
D..	2	W0704	053	20		25-53-14	150-199, 275-299
A..	2	W0704	065	18		25-53-12	150-199, 275-299
S..	2	W0704	068	20		25-53-12	150-199, 275-299
S..	2	W0704	069	20		25-53-12	150-199, 275-299
D..	2	W0704	093	20		25-53-14	150-199, 275-299
A..	2	W0704	095	18		25-53-12	ALL
S..	2	W0704	098	20		25-53-12	ALL
S..	2	W0704	099	20		25-53-12	ALL
D..	2	W0704	133	20		25-53-14	050-099
D..	2	W0704	153	20		25-53-14	150-199, 275-299
A..	2	W0704	165	18		25-53-12	150-199, 275-299
S..	2	W0704	168	20		25-53-12	150-199, 275-299
S..	2	W0704	169	20		25-53-12	150-199, 275-299
A..	2	W0704	195	18		25-53-12	050-099
S..	2	W0704	198	20		25-53-12	050-099
S..	2	W0704	199	20		25-53-12	050-099
D..	2	W0704	518	20		25-53-14	050-099
D..	2	W0704	529	20		25-53-14	050-099
A..	2	W0704	535	18		25-53-12	050-099
S..	2	W0704	536	20		25-53-12	050-099
S..	2	W0704	537	20		25-53-12	050-099
A..	2	W0704	553	20		25-53-14	150-199, 275-299
D..	2	W0704	567	20		25-53-14	150-199, 275-299
<b>GD04322</b>		<b>YHLZG16</b>				<b>0454/134/R065</b>	<b>ALL</b>
A..	2	W0702	001	20		25-53-15	050-099
S..	2	W0702	004	20		25-53-15	050-099
A..	2	W0702	021	20		25-53-15	050-099

## GROUND LIST

D280T132

**91-21-21**  
Section GD04300  
Page 1  
Mar 09/2006





# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD04322</b>		<b>YHLZG16 (continued)</b>				<b>0454/134/R065</b>	<b>ALL</b>
S..	2	W0702	024	20		25-53-15	050-099
D..	2	W0704	033	20		25-53-14	050-099
A..	2	W0704	035	18		25-53-12	050-099
S..	2	W0704	038	20		25-53-12	050-099
S..	2	W0704	039	20		25-53-12	050-099
D..	2	W0704	043	20		25-53-14	050-099
D..	2	W0704	143	20		25-53-14	ALL
A..	2	W0704	155	18		25-53-12	ALL
S..	2	W0704	158	20		25-53-12	ALL
S..	2	W0704	159	20		25-53-12	ALL
A..	2	W0704	185	18		25-53-12	050-099
S..	2	W0704	188	20		25-53-12	050-099
S..	2	W0704	189	20		25-53-12	050-099
D..	2	W0704	193	20		25-53-14	150-199, 275-299
A..	2	W0704	195	18		25-53-12	150-199, 275-299
S..	2	W0704	198	20		25-53-12	150-199, 275-299
S..	2	W0704	199	20		25-53-12	150-199, 275-299
D..	2	W0704	663	20		25-53-14	150-199, 275-299
A..	2	W0704	665	18		25-53-12	150-199, 275-299
S..	2	W0704	668	20		25-53-12	150-199, 275-299
S..	2	W0704	669	20		25-53-12	150-199, 275-299
<b>GD04324</b>		<b>YHLZG16</b>				<b>0454/141/R074</b>	<b>ALL</b>
D..	2	W0606	119	20		26-16-21	ALL
D..	2	W0616	010	20		25-53-13	ALL
A..	2	W0616	030	20		25-53-14	ALL
A..	2	W0660	010	20		33-31-61	ALL
A..	2	W0660	063	20		33-31-61	ALL
A..	2	W0660	064	20		33-37-11	050-099
A..	2	W0660	064	18		33-37-11	150-199, 275-299
S..	2	W0700	012	20		25-53-11	ALL
D..	2	W0700	033	20		25-53-11	ALL
D..	2	W0700	034	20		25-53-11	ALL
D..	2	W1134	023	20		52-34-12	ALL
<b>GD04326</b>		<b>YHLZG16</b>				<b>0438/134/R065</b>	<b>ALL</b>
A..	2	W0702	061	20		25-53-16	050-099
S..	2	W0702	064	20		25-53-16	050-099
A..	2	W0702	081	20		25-53-16	050-099
S..	2	W0702	084	20		25-53-16	050-099

## GROUND LIST

D280T132

**91-21-21**

Section GD04300

Page 2

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD04326</b>		<b>YHLZG16 (continued)</b>				<b>0438/134/R065</b>	<b>ALL</b>
A..	2	W0702	091	20		25-53-16	050-099
S..	2	W0702	094	20		25-53-16	050-099
A..	2	W0702	101	20		25-53-17	ALL
S..	2	W0702	104	20		25-53-17	ALL
A..	2	W0702	111	20		25-53-17	ALL
S..	2	W0702	114	20		25-53-17	ALL
A..	2	W0704	045	18		25-53-12	050-099
S..	2	W0704	048	20		25-53-12	050-099
S..	2	W0704	049	20		25-53-12	050-099
A..	2	W0704	055	18		25-53-12	150-199, 275-299
S..	2	W0704	058	20		25-53-12	150-199, 275-299
S..	2	W0704	059	20		25-53-12	150-199, 275-299
D..	2	W0704	528	20		25-53-14	050-099
D..	2	W0704	603	20		25-53-14	150-199, 275-299
<b>GD04332</b>		<b>AC</b>				<b>0256/177/R079</b>	<b>ALL</b>
A..	E	W1258	007	20		30-71-21	ALL
A..	E	W1258	171	20		30-71-21	050-099, 150-199
A..	E	W1258	172	20		30-71-21	ALL
<b>GD04354</b>		<b>SH</b>				<b>L0416/12/LE</b>	<b>ALL</b>
S..	N	W0472	001Z			28-21-11	ALL
S..	N	W0472	002Z			28-21-12	ALL
S..	N	W0472	003Z			28-21-12	ALL
S..	N	W0472	004Z			28-21-12	ALL
S..	N	W0472	008Z			28-41-12	ALL
S..	N	W0472	024Z			28-21-11	ALL
S..	N	W0472	025Z			28-21-13	ALL
S..	N	W0472	026Z			28-21-13	ALL
S..	N	W0472	027Z			28-21-11	ALL
S..	N	W0472	034Z			28-26-11	ALL
S..	N	W0472	209Z			28-41-11	ALL
S..	N	W0472	214Z			28-21-11	ALL
S..	N	W0472	215Z			28-21-11	ALL
S..	N	W0472	216Z			28-21-11	ALL
S..	N	W0472	301Z			28-41-11	ALL
S..	N	W0472	401Z			28-21-11	ALL
<b>GD04356</b>		<b>SH</b>				<b>L0416/12/LE</b>	<b>ALL</b>
S..	N	W0472	007Z			28-21-11	ALL

## GROUND LIST

D280T132

**91-21-21**  
Section GD04300  
Page 3  
Mar 09/2006



Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD04356</b>		<b>SH (continued)</b>				<b>L0416/12/LE</b>	<b>ALL</b>
S..	N	W0472	010Z			28-26-11	ALL
S..	N	W0472	011Z			28-26-11	ALL
S..	N	W0472	012Z			28-21-11	ALL
S..	N	W0472	013Z			28-21-13	ALL
S..	N	W0472	014Z			28-21-13	ALL
S..	N	W0472	015Z			28-21-11	ALL
S..	N	W0472	018Z			28-21-11	ALL
S..	N	W0472	01TO			23-41-11	ALL
S..	N	W0472	021Z			28-21-11	ALL
S..	N	W0472	040Z			28-41-11	ALL
S..	N	W0472	203Z			28-41-11	ALL
S..	N	W0472	302Z			28-41-11	ALL
S..	N	W0472	303Z			28-41-11	ALL
<b>GD04358</b>		<b>SH</b>				<b>L0416/12/LE</b>	<b>ALL</b>
S..	N	W0472	016Z			28-26-11	ALL
S..	N	W0472	017Z			28-26-11	ALL
S..	N	W0472	019Z			28-21-13	ALL
S..	N	W0472	020Z			28-21-13	ALL
S..	N	W0472	037Z			28-41-11	ALL
S..	N	W0472	038Z			28-41-11	ALL
S..	N	W0472	039Z			28-41-11	ALL
S..	N	W0472	206Z			28-41-11	ALL
<b>GD04360</b>		<b>SH</b>				<b>L0664/12/LE</b>	<b>ALL</b>
S..	N	W0472	010Z			28-26-11	ALL
S..	N	W0472	011Z			28-26-11	ALL
S..	N	W0472	016Z			28-26-11	ALL
S..	N	W0472	017Z			28-26-11	ALL
S..	N	W0472	039Z			28-41-11	ALL
S..	N	W0472	040Z			28-41-11	ALL
S..	N	W0472	203Z			28-41-11	ALL
S..	N	W0472	206Z			28-41-11	ALL
S..	N	W0472	209Z			28-41-11	ALL
S..	N	W0472	216Z			28-21-11	ALL
S..	N	W0472	301Z			28-41-11	ALL
S..	N	W0472	302Z			28-41-11	ALL
S..	N	W0472	303Z			28-41-11	ALL

## GROUND LIST

D280T132

91-21-21

Section GD04300

Page 4

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD04362</b>		<b>SH</b>				<b>L0664/12/LE</b>	<b>ALL</b>
S..	N	W0472	001Z			28-21-11	ALL
S..	N	W0472	004Z			28-21-12	ALL
S..	N	W0472	008Z			28-41-12	ALL
S..	N	W0472	012Z			28-21-11	ALL
S..	N	W0472	014Z			28-21-13	ALL
S..	N	W0472	015Z			28-21-11	ALL
S..	N	W0472	019Z			28-21-13	ALL
S..	N	W0472	020Z			28-21-13	ALL
S..	N	W0472	021Z			28-21-11	ALL
S..	N	W0472	025Z			28-21-13	ALL
S..	N	W0472	037Z			28-41-11	ALL
S..	N	W0472	401Z			28-21-11	ALL
<b>GD04364</b>		<b>SH</b>				<b>L0664/12/LE</b>	<b>ALL</b>
S..	N	W0472	002Z			28-21-12	ALL
S..	N	W0472	003Z			28-21-12	ALL
S..	N	W0472	007Z			28-21-11	ALL
S..	N	W0472	013Z			28-21-13	ALL
S..	N	W0472	018Z			28-21-11	ALL
S..	N	W0472	024Z			28-21-11	ALL
S..	N	W0472	026Z			28-21-13	ALL
S..	N	W0472	027Z			28-21-11	ALL
S..	N	W0472	034Z			28-26-11	ALL
S..	N	W0472	038Z			28-41-11	ALL
<b>GD04366</b>		<b>SH</b>				<b>L0680/12/LE</b>	<b>ALL</b>
S..	N	W0472	01TO			23-41-11	ALL
S..	N	W0472	215Z			28-21-11	ALL
<b>GD04370</b>		<b>AC</b>				<b>0189/204/L045</b>	<b>ALL</b>
A..	E	W0632	007	16		33-13-18	ALL
A..	E	W0632	017	16		33-13-18	ALL
A..	E	W0632	136B	18		33-13-18	156-157, 166-199, 277-299
A..	E	W0632	138B	18		33-13-18	156-157, 166-199, 277-299
<b>GD04372</b>		<b>SH</b>				<b>L0276/14/RS</b>	<b>ALL</b>
S..	N	W0482	010Z			28-25-11	ALL

## GROUND LIST

D280T132

**91-21-21**  
Section GD04300  
Page 5  
Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD04374</b>		<b>AC</b>				<b>1567/155/R050</b>	<b>ALL</b>
A..	E	W1356	B-B			30-71-24	050-099
A..	E	W1356	B-B			30-71-23	150-199, 275-299
A..	E	W1358	U-B			30-71-23	275-276
A..	E	W1358	W-B			30-71-23	ALL
<b>GD04376</b>		<b>AC</b>				<b>1098/195/L067</b>	<b>ALL</b>
A..	E	W1258	164	20		30-71-22	050-099
A..	E	W1258	H-B			30-71-22	ALL
A..	E	W1258	I-B			30-71-22	ALL
A..	E	W1258	P-H			30-71-23	050-099
A..	E	W1258	P-H			30-71-24	150-199
A..	E	W1258	Z-F			30-71-22	150-199
<b>GD04380</b>		<b>AC</b>				<b>0646/114/L035</b>	<b>050-099</b>
A..	E	W1258	X-D			30-71-11	050-099
<b>GD04382</b>		<b>AC</b>				<b>1485/132/R040</b>	<b>ALL</b>
A..	E	W1356	026	20		30-71-24	050-099
A..	E	W1356	026	20		30-71-23	150-199
A..	E	W1356	03X	20		30-71-24	050-099
A..	E	W1356	03X	20		30-71-23	150-199, 277-299
A..	E	W1356	E-C			30-71-24	050-099
A..	E	W1356	E-C			30-71-23	150-199, 275-299
<b>GD04384</b>		<b>AC</b>				<b>0320/190/L066</b>	<b>ALL</b>
A..	E	W1258	A-B			30-71-21	ALL
A..	E	W1258	A-R			30-71-21	050-099, 150-199
A..	E	W1258	D-B			30-71-21	ALL
<b>GD04386</b>		<b>AC</b>				<b>0292/190/L066</b>	<b>ALL</b>
A..	E	W1258	B-Z			30-71-21	ALL
A..	E	W1258	G-B			30-71-21	ALL
<b>GD04388</b>		<b>AC</b>				<b>0368/186/L067</b>	<b>050-099, 150-199</b>
A..	E	W1258	639	20		30-71-21	050-099, 150-199
A..	E	W1258	640	20		30-71-21	050-099, 150-199
A..	E	W1258	641	20		30-71-21	050-099, 150-199
A..	E	W1258	642	20		30-71-21	050-099, 150-199

## GROUND LIST

D280T132

**91-21-21**

Section GD04300

Page 6

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD04390</b>		<b>DC</b>				<b>1461/195/R030</b>	<b>ALL</b>
D..	E	W1358	11F	20		21-26-21	ALL
<b>GD04392</b>		<b>YHLZG16</b>				<b>0438/141/R074</b>	<b>ALL</b>
A..	2	W0704	013	20		25-53-14	050-099
D..	2	W0704	013	20		25-53-14	150-199, 275-299
A..	2	W0704	015	18		25-53-12	ALL
D..	2	W0704	016	20		25-53-14	050-099
A..	2	W0704	016	20		25-53-14	150-199, 275-299
S..	2	W0704	018	20		25-53-12	ALL
S..	2	W0704	019	20		25-53-12	ALL
D..	2	W0704	113	20		25-53-14	ALL
A..	2	W0704	115	18		25-53-12	ALL
A..	2	W0704	116	20		25-53-14	ALL
S..	2	W0704	118	20		25-53-12	ALL
S..	2	W0704	119	20		25-53-12	ALL
D..	2	W0704	123	20		25-53-14	ALL
A..	2	W0704	125	18		25-53-12	ALL
A..	2	W0704	126	20		25-53-14	ALL
S..	2	W0704	128	20		25-53-12	ALL
S..	2	W0704	129	20		25-53-12	ALL
<b>GD04394</b>		<b>YHLZG16</b>				<b>0674/123/L055</b>	<b>050-099</b>
D..	2	W0704	083	20		25-53-14	050-099
A..	2	W0704	085	18		25-53-12	050-099
A..	2	W0704	086	20		25-53-14	050-099
S..	2	W0704	088	20		25-53-12	050-099
S..	2	W0704	089	20		25-53-12	050-099
A..	2	W0704	145	18		25-53-12	050-099
S..	2	W0704	148	20		25-53-12	050-099
S..	2	W0704	149	20		25-53-12	050-099
D..	2	W0704	183	20		25-53-14	050-099
A..	2	W0704	186	20		25-53-14	050-099
D..	2	W1258	196	20		21-28-11	050-099
S..	2	W1258	197	20		21-28-11	050-099
D..	2	W1258	198	20		21-28-11	050-099
D..	2	W1258	608	20		21-26-31	050-099
S..	2	W1258	616	20		21-26-31	050-099

## GROUND LIST

D280T132

**91-21-21**  
Section GD04300  
Page 7  
Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD04396</b>		<b>YHLZG16</b>				<b>0703/123/L055</b>	<b>050-099</b>
D..	2	W0704	003	20		25-53-14	050-099
A..	2	W0704	005	18		25-53-12	050-099
A..	2	W0704	006	20		25-53-14	050-099
S..	2	W0704	008	20		25-53-12	050-099
S..	2	W0704	009	20		25-53-12	050-099
D..	2	W0704	103	20		25-53-14	050-099
A..	2	W0704	105	18		25-53-12	050-099
A..	2	W0704	106	20		25-53-14	050-099
S..	2	W0704	108	20		25-53-12	050-099
S..	2	W0704	109	20		25-53-12	050-099
S..	2	W1258	191	20		21-28-11	050-099
D..	2	W1258	193	20		21-28-11	050-099
D..	2	W1258	617	20		21-28-11	050-099
DED		W1258	617Z			21-28-11	050-099

## GROUND LIST

D280T132

**91-21-21**

Section GD04300

Page 8 End

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD04400</b>		<b>SH</b>				<b>0281/153/R026</b>	<b>ALL</b>
S..	E	W0924	005	10		33-42-11	ALL
S..	E	W0924	006	12		33-42-21	ALL
<b>GD04402</b>		<b>AC</b>				<b>0764/195/L004</b>	<b>150-199</b>
A..	E	W1258	V-H			30-71-22	150-199
<b>GD04404</b>		<b>AC</b>				<b>0764/195/L004</b>	<b>ALL</b>
A..	E	W1258	029	20		30-71-22	050-099, 150-199
A..	E	W1258	079	20		30-71-22	150-199
A..	E	W1258	635	20		30-71-22	275-299
A..	E	W1258	N-B			30-71-22	050-099
<b>GD04406</b>		<b>AC</b>				<b>0764/195/L004</b>	<b>050-099, 150-199</b>
A..	E	W1258	138	20		30-71-22	150-199
A..	E	W1258	658	20		30-71-22	150-199
A..	E	W1258	L-H			30-71-22	050-099
<b>GD04408</b>		<b>AC</b>				<b>0767/195/R055</b>	<b>050-099, 275-299</b>
A..	E	W1258	634	20		30-71-22	275-299
A..	E	W1258	B-D			30-71-22	050-099, 275-299
A..	E	W1258	D-J			30-71-22	050-099
<b>GD04410</b>		<b>AC</b>				<b>0766/195/R055</b>	<b>150-199, 275-299</b>
A..	E	W1258	028	20		30-71-22	275-299
A..	E	W1258	144	20		30-71-22	275-299
<b>GD04412</b>		<b>AC</b>				<b>1098/195/L066</b>	<b>ALL</b>
A..	E	W1258	509	20		30-71-22	050-099
A..	E	W1258	D-N			30-71-22	050-099
A..	E	W1258	D-P			30-71-22	050-099
<b>GD04416</b>		<b>AC</b>				<b>0454/144/R075</b>	<b>ALL</b>
A..	E	W0616	048	12		33-37-11	ALL
A..	E	W0616	050	16		33-31-61	ALL
<b>GD04418</b>		<b>DC</b>				<b>0933/290/R065</b>	<b>050-099</b>
D..	E	W1222	076	20		33-51-12	050-099

## GROUND LIST

D280T132

**91-21-21**  
Section GD04400  
Page 1  
Mar 09/2006





# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD04424</b>		<b>YHLZG16</b>				<b>P061-00/ /</b>	<b>ALL</b>
A..	2	W0070	12C	18		33-11-16	ALL
A..	2	W0070	12D	18		33-11-16	ALL
D..	2	W0070	805R	20		26-21-11	ALL
D..	2	W0070	835R	20		26-21-11	ALL
<b>GD04426</b>		<b>YHLZG16</b>				<b>P061-00/ /</b>	<b>ALL</b>
D..	2	W0062	288	20		73-21-11	ALL
D..	2	W0062	793	22		30-11-11	050-099, 150-199
DED		W0062	793Z			30-11-11	050-099, 150-199
D..	2	W0062	79D	20		30-81-11	050-099, 150-199
D..	2	W0062	80D	20		23-51-41	ALL
D..	2	W0062	81A	20		23-51-41	ALL
A..	2	W0062	81E	18		33-13-21	ALL
A..	2	W0062	81J	20		23-51-41	ALL
<b>GD04428</b>		<b>YHLZG16</b>				<b>P061-00/ /</b>	<b>ALL</b>
S..	2	W0062	716	20		78-34-11	ALL
D..	2	W0062	773	20		28-43-11	ALL
D..	2	W0062	774	20		24-31-11	ALL
A..	2	W0062	80B	18		33-13-21	ALL
D..	2	W0062	832	20		24-11-11	ALL
D..	2	W0062	878	20		29-21-32	ALL
A..	2	W0062	882	20		29-21-32	ALL
<b>GD04430</b>		<b>YHLZG16</b>				<b>P061-00/ /</b>	<b>ALL</b>
S..	2	W0062	546	20		78-34-11	275-276
A..	2	W0622	020	20		30-41-11	ALL
<b>GD04432</b>		<b>YHLZG16</b>				<b>P061-00/ /</b>	<b>ALL</b>
D..	2	W0062	17Z	20		31-41-13	ALL
D..	2	W0062	18B	20		31-41-13	ALL
D..	2	W0062	18D	20		31-41-13	ALL
S..	2	W0062	18L	20		31-41-13	ALL
S..	2	W0062	239	20		23-22-15	ALL
S..	2	W0062	546	20		78-34-11	050-099, 150-199, 277-299
A..	2	W0065	007	20		31-31-11	ALL
S..	2	W0065	013	20		31-31-11	ALL
D..	2	W0065	015	20		31-31-11	ALL
A..	2	W0065	114	20		34-61-15	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD04400

Page 2

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD04432</b>		<b>YHLZG16 (continued)</b>				<b>P061-00/ /</b>	<b>ALL</b>
S..	2	W0065	115	20		34-61-15	ALL
S..	2	W0065	226	20		23-22-15	ALL
S..	E	W0065	901	20		23-25-13	150, 153-199
<b>GD04438</b>		<b>YHLZG16</b>				<b>P061-00/ /</b>	<b>ALL</b>
D..	2	W0066	04B	20		25-65-12	ALL
D..	2	W0066	04K	20		25-65-12	ALL
D..	2	W0066	188	20		73-21-11	ALL
S..	2	W0066	772	20		28-43-11	ALL
D..	2	W0066	773	20		28-43-11	ALL
<b>GD04440</b>		<b>YHLZG16</b>				<b>P061-00/ /</b>	<b>ALL</b>
D..	2	W0066	58H	20		32-42-12	ALL
<b>GD04442</b>		<b>YHLZG16</b>				<b>P061-00/ /</b>	<b>ALL</b>
S..	2	W0066	10G	20		33-13-21	ALL
A..	2	W0066	10L	16		33-13-21	ALL
S..	2	W0066	539	20		78-34-21	ALL
S..	2	W0066	64F	20		78-34-21	ALL
A..	2	W0066	82B	18		33-13-21	ALL
A..	2	W0066	82N	20		33-14-11	ALL
<b>GD04444</b>		<b>YHLZG16</b>				<b>0720/295/L014</b>	<b>ALL</b>
A..	2	W0814	611	20		33-26-11	050-099
A..	2	W0814	642	16		38-13-11	050-099
D..	2	W0814	683	20		38-32-13	050-099
S..	2	W0814	686	20		38-32-13	050-099
D..	2	W0814	820	20		33-25-11	050-099
S..	2	W0822	063	20		33-21-11	050-099
A..	2	W0822	098	20		33-21-13	050-099
S..	2	W0822	099	20		33-21-13	050-099
A..	2	W0822	191	20		33-21-11	150-199
S..	2	W0822	194	20		33-21-11	150-199
A..	2	W1280	045	20		33-24-13	150-199
A..	2	W1280	135	20		33-24-13	050-099
D..	2	W1282	021	20		35-21-14	150-199
D..	2	W1282	068	20		35-21-14	150-199
D..	2	W1282	132	20		35-21-14	050-099
A..	2	W2062	015	20		33-24-13	275
A..	2	W2062	020	20		33-24-13	275

## GROUND LIST

D280T132

**91-21-21**  
Section GD04400  
Page 3  
Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD04444</b>		<b>YHLZG16 (continued)</b>				<b>0720/295/L014</b>	<b>ALL</b>
A..	2	W2062	135	20		33-24-13	276-299
D..	2	W2066	009	20		35-21-14	275
D..	2	W2066	012	20		35-21-14	275
D..	2	W2066	015	20		35-21-14	275
D..	2	W2066	132	20		35-21-14	276-299
<b>GD04446</b>		<b>DC</b>				<b>0933/292/L080</b>	<b>050-099</b>
D..	E	W0790	052	20		33-51-13	050-099
<b>GD04452</b>		<b>YHLZG16</b>				<b>0178/210/L001</b>	<b>ALL</b>
A..	2	W0614	008	18		33-13-18	050-099, 150-155, 162-165, 275-276
D..	2	W0614	176	20		21-25-11	ALL
D..	2	W0614	178R	20		26-23-11	ALL
S..	2	W0614	181R	20		26-11-11	ALL
D..	2	W0614	515	20		31-51-33	ALL
D..	2	W0614	517	20		36-11-51	ALL
A..	2	W0614	628R	20		26-17-11	ALL
A..	2	W0629	015	18		33-13-18	050-099, 150-155, 162-165, 275-276
A..	2	W0632	106	16		33-13-18	ALL
S..	2	W0632	107	20		33-13-18	ALL
A..	2	W0632	134	18		33-13-18	156-157, 166-199, 277-299
A..	2	W0779	022	20		33-13-18	050-099, 150-155, 162-165, 275-276
A..	2	W0843	002	18		33-13-18	050-099, 150-155, 162-165, 275-276
A..	E	W0851	907B	20		23-22-12	150, 152-155, 162-165
<b>GD04454</b>		<b>YHLZG16</b>				<b>0178/210/0000</b>	<b>ALL</b>
A..	2	W0685	002	20		33-13-18	275-276
A..	2	W0685	004	20		34-53-11	275-299
D..	2	W0685	008	20		34-53-11	050-099, 155-199, 275-299
D..	2	W0685	017	20		34-53-11	050-099, 155-199, 275-299
S..	2	W0685	201	20		34-53-11	050-099, 155-199, 275-299
A..	2	W0687	004	20		34-53-21	050-099, 155-199, 275-299
D..	2	W0687	008	20		34-53-21	050-099, 155-199, 275-299
D..	2	W0687	010	20		34-53-21	050-099, 155-199, 275-299
S..	2	W0687	201	20		34-53-21	050-099, 155-199, 275-299
S..	2	W0779	026	20		34-43-12	ALL
S..	2	W0803	026	20		34-43-22	ALL
D..	2	W0843	014	20		23-12-11	050-099, 150-199, 275-276
D..	2	W0843	900	20		23-12-11	150, 152-199, 275-299
D..	2	W0845	014	20		23-12-21	050-099, 150-199, 275-276

## GROUND LIST

D280T132

**91-21-21**

Section GD04400

Page 4

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD04454</b>		<b>YHLZG16 (continued)</b>				<b>0178/210/0000</b>	<b>ALL</b>
D..	2	W0845	900	20		23-12-21	150, 152-199, 275-299
D..	2	W0847	900	20		23-12-31	150, 152-199, 275-299
<b>GD04456</b>		<b>YHLZG16</b>				<b>0178/210/R001</b>	<b>ALL</b>
A..	2	W0483	011	20		33-13-18	050-099, 150-155, 162-165, 275-276
D..	2	W0606	176	20		21-25-11	ALL
D..	2	W0606	178R	20		26-23-12	ALL
S..	2	W0606	181R	20		26-11-21	ALL
D..	2	W0606	515	20		31-51-33	ALL
D..	2	W0606	516	18		78-34-21	ALL
D..	2	W0606	517	20		36-11-52	ALL
D..	2	W0606	535	20		31-51-33	ALL
S..	2	W0606	542R	20		26-15-11	ALL
A..	2	W0631	017	18		33-13-18	050-099, 150-155, 162-165, 275-276
A..	2	W0632	011	16		33-13-18	ALL
S..	2	W0632	012	20		33-13-18	ALL
A..	2	W0632	131	18		33-13-18	156-157, 166-199, 277-299
A..	2	W0632	132	18		33-13-18	156-157, 166-199, 277-299
A..	2	W0845	002	18		33-13-18	050-099, 150-155, 162-165, 275-276
<b>GD04458</b>		<b>YHLZG16</b>				<b>0210/155/R026</b>	<b>ALL</b>
D..	2	W0632	061	20		33-16-12	ALL
D..	2	W0632	062	20		33-16-17	ALL
D..	2	W0634	081	20		33-16-12	ALL
D..	2	W0634	082	20		33-16-17	ALL
D..	2	W0638	061	20		33-16-12	ALL
D..	2	W0638	062	20		33-16-17	ALL
<b>GD04460</b>		<b>AC</b>				<b>0263/193/L044</b>	<b>ALL</b>
A..	E	W0902	B-B			33-31-41	ALL
<b>GD04462</b>		<b>YHLZG16</b>				<b>0237/150/R026</b>	<b>ALL</b>
D..	2	W0596	049R	20		26-11-11	ALL
D..	2	W0596	059R	20		26-11-12	ALL
D..	2	W0598	049R	20		26-11-21	ALL
D..	2	W0598	059R	20		26-11-22	ALL
D..	2	W0606	027R	20		26-16-11	ALL
D..	2	W0606	069R	20		26-15-11	ALL
D..	2	W0614	027R	20		26-16-11	ALL
D..	2	W0614	146R	20		26-17-11	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD04400

Page 5

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD04464</b>		<b>YHLZG16</b>				<b>0154/215/L005</b>	<b>ALL</b>
A..	2	W0051	024	20		33-11-11	ALL
S..	2	W0051	029	20		33-11-13	ALL
A..	2	W0051	030	20		33-11-13	ALL
A..	2	W0051	045	16		33-13-11	ALL
S..	2	W0051	046	20		33-13-11	ALL
A..	2	W0051	048	16		33-13-11	ALL
S..	2	W0051	049	20		33-13-11	ALL
A..	2	W0051	058	20		33-13-11	ALL
A..	2	W0051	125	20		33-13-11	ALL
S..	2	W0051	217	20		33-11-11	ALL
<b>GD04466</b>		<b>YHLZG16</b>				<b>0154/215/R005</b>	<b>ALL</b>
A..	2	W0051	018	20		33-11-11	ALL
A..	2	W0051	080	18		33-13-17	ALL
S..	2	W0051	081	20		33-13-17	ALL
A..	2	W0051	122	20		33-13-17	ALL
S..	2	W0051	210	20		33-11-11	ALL
<b>GD04472</b>		<b>YHLZG16</b>				<b>0178/209/R002</b>	<b>ALL</b>
S..	2	W0483	002	20		34-31-31	ALL
A..	2	W0685	002	20		33-13-18	050-099, 150-155, 162-165
D..	2	W0685	008	20		34-53-11	150-154
D..	2	W0685	017	20		34-53-11	150-154
S..	2	W0685	201	20		34-53-11	150-154
A..	2	W0687	004	20		34-53-21	150-154
D..	2	W0687	008	20		34-53-21	150-154
D..	2	W0687	010	20		34-53-21	150-154
S..	2	W0687	201	20		34-53-21	150-154
A..	2	W0711	041	20		31-36-11	050-099, 275-299
A..	2	W0711	041	22		31-36-11	150-199
S..	2	W0711	056	20		23-22-12	ALL
S..	2	W0711	211	20		31-35-11	ALL
S..	2	W0711	214	20		23-22-12	ALL
REF	#	W0711	215	20		34-61-16	ALL
REF	#	W0711	216	20		34-61-26	ALL
A..	2	W0756	162	20		33-13-18	050-099, 150-155, 162-165, 275-276
A..	2	W0756	529	20		33-13-18	050-099, 150-155, 162-165, 275-276
D..	2	W0851	044	20		23-22-12	275-299
D..	E	W0851	902	22		23-22-12	150, 152-199

## GROUND LIST

D280T132

**91-21-21**

Section GD04400

Page 6

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD04474</b>		<b>YHLZG16</b>				<b>0178/209/L002</b>	<b>ALL</b>
S..	2	W0481	002	20		34-31-11	ALL
S..	2	W0485	002	20		34-31-21	ALL
D..	2	W0606	012R	20		26-11-11	ALL
D..	2	W0614	009R	20		26-11-11	ALL
A..	2	W0614	015	20		33-13-18	050-099, 150-155, 162-165, 275-276
D..	2	W0614	500	18		78-34-11	ALL
A..	2	W0615	002	18		33-13-18	050-099, 150-155, 162-165, 275-276
S..	2	W0615	007	20		34-57-11	ALL
S..	2	W0617	007	20		34-57-21	ALL
D..	2	W0711	042	20		31-36-11	050-099, 275-299
D..	2	W0711	042	22		31-36-11	150-199
D..	2	W0711	043	20		31-36-11	050-099, 275-299
D..	2	W0711	043	22		31-36-11	150-199
A..	2	W0711	044	20		33-13-18	050-099, 150-155, 162-165, 275-276
S..	2	W0711	213	20		31-36-11	ALL
D..	2	W0843	014	20		23-12-11	277-299
D..	2	W0845	014	20		23-12-21	277-299
A..	2	W0847	002	18		33-13-18	050-099, 150-155, 162-165, 275-276
D..	2	W0847	014	20		23-12-31	ALL
<b>GD04476</b>		<b>YHLZG16</b>				<b>0145/237/R008</b>	<b>ALL</b>
A..	2	W0051	128	18		33-13-11	ALL
A..	2	W1054	004	20		33-14-21	ALL
S..	2	W1054	015	20		33-11-11	ALL
S..	2	W1054	016	20		33-11-11	ALL
A..	2	W1054	022	20		33-13-17	ALL
A..	2	W1054	B-B			33-11-13	ALL
<b>GD04478</b>		<b>YHLZG16</b>				<b>0148/237/L005</b>	<b>ALL</b>
A..	2	W1052	004	20		33-14-21	ALL
S..	2	W1052	015	20		33-11-11	ALL
S..	2	W1052	016	20		33-11-11	ALL
A..	2	W1052	022	20		33-13-17	ALL
S..	2	W1052	023	20		33-11-11	ALL
A..	2	W1052	B-B			33-11-13	ALL
<b>GD04480</b>		<b>DC</b>				<b>0236/203/L040</b>	<b>ALL</b>
D..	E	W1306	009	16		32-35-11	ALL

## GROUND LIST

D280T132

**91-21-21**  
Section GD04400  
Page 7  
Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD04482</b>		<b>SH</b>				<b>0236/203/L040</b>	<b>ALL</b>
S..	E	W1306	010	16		32-35-11	ALL
<b>GD04484</b>		<b>DC</b>				<b>1245/140/R080</b>	<b>ALL</b>
D..	E	W0786	082	20		33-51-21	150-199, 275-299
D..	E	W0786	085	12		33-51-21	050-099

## GROUND LIST

D280T132

**91-21-21**

Section GD04400

Page 8 End

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD04500</b>		<b>YHLZG16</b>				<b>P006-02/ /</b>	<b>ALL</b>
D..	2	W0028	068	20		24-32-11	ALL
S..	2	W0028	069	20		24-32-11	ALL
D..	2	W0028	112	18		34-21-21	ALL
D..	2	W0028	153	20		25-29-11	ALL
DED		W0028	153Z			25-29-11	ALL
A..	2	W0028	154	18		25-29-11	ALL
DED		W0028	154Z			25-29-11	ALL
S..	2	W0028	155	18		25-29-11	ALL
S..	2	W0028	156	20		25-29-11	ALL
<b>GD04506</b>		<b>YHLZG16</b>				<b>1537/213/L090</b>	<b>ALL</b>
A..	2	W0616	027	18		25-29-11	ALL
S..	2	W0616	028	18		25-29-11	ALL
D..	2	W0836	022	20		33-51-14	275-299
A..	2	W1240	035	20		33-22-42	275-299
D..	2	W1254	008	20		25-63-11	275-299
S..	2	W1254	010	20		25-63-11	275-299
<b>GD04508</b>		<b>DC</b>				<b>0852/292/R070</b>	<b>ALL</b>
D..	E	W0722	049	20		35-21-13	050-099
D..	E	W0728	089	20		35-21-13	275-299
D..	E	W1222	074	16		33-51-12	277-299
D..	E	W1222	076	20		33-51-12	150-199
D..	E	W1222	180	16		33-51-12	155, 157
<b>GD04510</b>		<b>YHLZG16</b>				<b>0157/210/R040</b>	<b>ALL</b>
S..	2	W0527	217	20		34-45-14	150-152
A..	2	W0586	024	20		21-45-11	ALL
A..	2	W0586	026	20		33-13-13	ALL
A..	2	W0622	022	20		30-41-11	ALL
S..	2	W0624	004	20		25-11-21	ALL
A..	2	W0631	028	18		33-13-13	157, 167-199, 277-299
A..	2	W0632	042	20		33-14-31	ALL
<b>GD04550</b>		<b>SH</b>				<b>L0356/ /</b>	<b>ALL</b>
S..	N	W0406	116	18		36-11-61	ALL
S..	N	W0406	118	18		36-11-61	ALL
<b>GD04552</b>		<b>SH</b>				<b>R0356/12/LE</b>	<b>ALL</b>
S..	N	W0408	117	18		36-11-62	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD04500

Page 1

Mar 09/2006





## 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD04552</b>		<b>SH (continued)</b>				<b>R0356/12/LE</b>	<b>ALL</b>
S..	N	W0408	119	18		36-11-62	ALL
<b>GD04558</b>		<b>SH</b>				<b>0764/153/L080</b>	<b>150-199, 275-276</b>
<b>GD04560</b>		<b>SH</b>				<b>0764/160/R080</b>	<b>150-199, 275-276</b>
<b>GD04586</b>		<b>AC</b>				<b>1567/155/R050</b>	<b>ALL</b>
A..	E	W1356	23X	20		30-71-23	ALL
A..	E	W1358	S-B			30-71-23	275-276
<b>GD04588</b>		<b>DC</b>				<b>0305/126/0000</b>	<b>ALL</b>
D..	E	W0256	020	20		24-34-11	ALL
<b>GD04590</b>		<b>SH</b>				<b>0305/126/0000</b>	<b>ALL</b>
S..	E	W0256	021	20		24-34-11	ALL
<b>GD04594</b>		<b>SH</b>				<b>0478/195/R059</b>	<b>ALL</b>
S..	E	W0660	005	20		52-34-11	ALL

### GROUND LIST

D280T132

**91-21-21**

Section GD04500

Page 2 End

Mar 09/2006



## 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD04602</b>		<b>SH</b>				<b>D0227/160/R085</b>	<b>ALL</b>
S..	E	W0962	010	20		52-35-11	ALL
<b>GD04606</b>		<b>SH</b>				<b>L0268/014/RS</b>	<b>ALL</b>
S..	N	W0454	014Z			28-42-21	ALL
S..	N	W0482	009	18		28-21-13	ALL
S..	N	W0482	201Z			28-21-13	ALL
<b>GD04608</b>		<b>AC</b>				<b>1410/116/R030</b>	<b>ALL</b>
A..	E	W1366	A-F			30-71-23	ALL
A..	E	W1366	B-D			30-71-11	ALL
A..	E	W1366	G-B			30-71-23	277-299
<b>GD04618</b>		<b>DC</b>				<b>1384/203/R092</b>	<b>ALL</b>
D..	E	W0790	005	20		33-51-11	ALL
D..	E	W0790	634	20		33-51-16	050-099, 150-199
<b>GD04620</b>		<b>SH</b>				<b>1384/203/R092</b>	<b>ALL</b>
S..	E	W0790	006	20		33-51-11	ALL
<b>GD04624</b>		<b>AC</b>				<b>0645/146/L075</b>	<b>050-099</b>
A..	E	W1258	L-B			30-71-21	050-099
<b>GD04626</b>		<b>SH</b>				<b>0903/270/L083</b>	<b>150-199, 275-299</b>
S..	E	W0812	803	20		33-21-34	150-199, 275-299
<b>GD04628</b>		<b>AC</b>				<b>0903/293/L070</b>	<b>150-199, 275-299</b>
A..	E	W0812	044	16		33-21-34	150-199
DED		W0812	044Z			33-21-34	155-156, 166
A..	E	W0812	686	20		33-21-13	150-199
A..	E	W1256	105	20		21-45-22	150-199, 275-299
<b>GD04630</b>		<b>SH</b>				<b>0903/293/L070</b>	<b>150-199</b>
S..	E	W0812	045	16		33-21-34	150-199
S..	E	W0812	687	20		33-21-13	150-199
<b>GD04632</b>		<b>SH</b>				<b>0915/270/R083</b>	<b>150-199, 275-299</b>
S..	E	W0814	605	20		33-21-35	150-199, 275-299
D..	E	W0834	028	18		33-51-14	150-199, 275-299
S..	E	W1256	113	18		21-45-22	150-199, 275-299

### GROUND LIST

D280T132

**91-21-21**  
Section GD04600  
Page 1  
Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD04634</b>		<b>SH</b>				<b>0999/220/L095</b>	<b>150-199, 275-299</b>
S..	E	W0790	028	20		33-51-11	275-299
S..	E	W0816	108	20		33-21-34	150-157
S..	E	W0816	108	16		33-21-34	162-199
<b>GD04636</b>		<b>DC</b>				<b>0915/270/L084</b>	<b>150-199, 275-299</b>
D..	E	W0786	092	20		27-61-18	150-199, 275-299
D..	E	W0786	107	16		25-65-11	150-199, 275-299
D..	E	W0834	030	18		33-51-14	150-199, 275-299
<b>GD04638</b>		<b>DC</b>				<b>0915/257/R085</b>	<b>150-199, 275-299</b>
D..	E	W0786	093	16		25-65-12	150-199, 275-299
D..	E	W0786	106	20		27-61-18	150-199, 275-299
<b>GD04640</b>		<b>DC</b>				<b>0883/220/R093</b>	<b>150-199, 275-299</b>
D..	E	W0786	039	14		33-51-21	150-199, 275-299
<b>GD04642</b>		<b>SH</b>				<b>0975/208/R090</b>	<b>275-299</b>
S..	E	W0786	045	20		25-65-12	275-299
<b>GD04644</b>		<b>DC</b>				<b>0965/208/R090</b>	<b>275-299</b>
D..	E	W0786	046	18		25-65-12	275-299
D..	E	W0786	058	20		25-65-12	275-299
D..	E	W0786	059	20		25-65-12	275-299
<b>GD04646</b>		<b>SH</b>				<b>0975/208/L090</b>	<b>275-299</b>
S..	E	W0786	052	20		25-65-11	275-299
<b>GD04648</b>		<b>DC</b>				<b>0965/208/L090</b>	<b>275-299</b>
D..	E	W0786	053	18		25-65-11	275-299
D..	E	W0786	060	20		25-65-11	275-299
D..	E	W0786	061	20		25-65-11	275-299
<b>GD04650</b>		<b>SH</b>				<b>0915/268/L085</b>	<b>150-199, 275-299</b>
S..	E	W0812	142	20		33-21-34	150-199, 275-299
S..	E	W1256	106	18		21-45-22	150-199, 275-299
<b>GD04652</b>		<b>DC</b>				<b>0883/220/L093</b>	<b>150-199, 275-299</b>
D..	E	W0788	064	14		33-51-21	150-199, 275-299
D..	E	W0834	022	20		33-51-14	275-299

## GROUND LIST

D280T132

**91-21-21**

Section GD04600

Page 2

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD04652</b>		<b>DC (continued)</b>				<b>0883/220/L093</b>	<b>150-199, 275-299</b>
D..	E	W0834	032	20		33-51-14	275-299
<b>GD04654</b>		<b>DC</b>				<b>0903/290/R065</b>	<b>150-199, 275-276</b>
D..	E	W1222	074	16		33-51-12	150-199, 275-276
D..	E	W1222	075	20		33-51-12	150-199
D..	E	W1232	565	20		21-73-11	275-299
<b>GD04656</b>		<b>DC</b>				<b>0903/292/L070</b>	<b>150-199, 275-276</b>
D..	E	W0790	051	20		33-51-13	150-199
D..	E	W0790	053	18		33-51-13	150-199, 275-276
<b>GD04660</b>		<b>AC</b>				<b>0903/292/R070</b>	<b>150-199, 275-299</b>
A..	E	W1232	564	16		21-73-11	275-299
A..	E	W1256	112	20		21-45-22	150-199, 275-299
<b>GD04674</b>		<b>YHLZG16</b>				<b>1329/293/L015</b>	<b>050-099</b>
<b>GD04674</b>		<b>YHLZG16</b>				<b>1329/295/L015</b>	<b>150-199, 275-299</b>
D..	2	W0790	002	20		21-65-11	ALL
A..	2	W1150	005	20		33-24-13	150-199, 275
A..	2	W1150	010	20		33-24-13	150-199, 275
A..	2	W1150	015	20		33-24-13	150-199, 275
A..	2	W1150	105	20		33-24-13	276-299
A..	2	W1150	115	20		33-24-13	276-299
A..	2	W1150	125	20		33-24-13	276-299
D..	2	W1172	003	20		35-21-14	150-199, 275
D..	2	W1172	007	20		35-21-14	150-199, 275
D..	2	W1172	010	20		35-21-14	150-199, 275
D..	2	W1172	102	20		35-21-14	050-099, 276-299
D..	2	W1172	112	20		35-21-14	050-099, 276-299
D..	2	W1172	122	20		35-21-14	050-099, 276-299
<b>GD04676</b>		<b>DC</b>				<b>0877/203/R095</b>	<b>ALL</b>
D..	E	W0834	001	20		33-51-11	ALL
D..	E	W0834	017	20		33-51-16	275-299
D..	E	W0834	024	20		33-51-14	275-299
D..	E	W0834	034	20		33-51-14	275-299
<b>GD04678</b>		<b>SH</b>				<b>0877/203/R095</b>	<b>ALL</b>
S..	E	W0834	007	20		33-51-11	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD04600

Page 3

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD04682</b>		<b>DC</b>				<b>NR250/134/</b>	<b>ALL</b>
D..	N	W0394	001	18		78-34-21	ALL
D..	N	W0394	082	18		78-36-21	ALL
D..	N	W0394	100	18		78-34-21	ALL
<b>GD04684</b>		<b>SH</b>				<b>0783/125/L032</b>	<b>ALL</b>
S..	N	W0508	038	18		36-21-11	ALL
S..	N	W0508	071	20		21-61-81	ALL
<b>GD04686</b>		<b>AC</b>				<b>0996/195/L050</b>	<b>ALL</b>
A..	E	W1336	004	12		24-25-12	ALL
<b>GD04688</b>		<b>DC</b>				<b>0996/195/L050</b>	<b>ALL</b>
D..	E	W1334	001	12		24-25-12	ALL
D..	E	W1334	002	12		24-25-12	ALL
<b>GD04698</b>		<b>AC</b>				<b>NR213/158/</b>	<b>150-199, 275-276</b>

**GROUND LIST**  
D280T132

**91-21-21**  
Section GD04600  
Page 4 End  
Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD04702</b>		<b>AC</b>				<b>NR213/158/</b>	<b>150-199, 275-276</b>
<b>GD04708</b>		<b>AC</b>				<b>1546/164/L068</b>	<b>ALL</b>
A..	E	W1354	011	20		21-31-11	ALL
A..	E	W1354	012	20		21-31-11	ALL
<b>GD04710</b>		<b>AC</b>				<b>1546/164/L068</b>	<b>ALL</b>
A..	E	W1358	02C	20		21-31-21	ALL
A..	E	W1358	02G	20		21-31-21	ALL
<b>GD04712</b>		<b>SH</b>				<b>1546/164/L068</b>	<b>ALL</b>
S..	E	W0978	001	20		21-31-11	ALL
S..	E	W1354	013	20		21-31-11	ALL
S..	E	W1354	014	20		21-31-11	ALL
<b>GD04714</b>		<b>SH</b>				<b>1546/164/L068</b>	<b>ALL</b>
S..	E	W1358	02A	20		21-31-21	ALL
S..	E	W1358	02B	20		21-31-21	ALL
<b>GD04716</b>		<b>SH</b>				<b>1175/290/L056</b>	<b>050-099</b>
S..	E	W0816	604	20		33-21-14	050-099
<b>GD04718</b>		<b>SH</b>				<b>1263/290/L056</b>	<b>ALL</b>
S..	E	W0816	617	20		33-21-14	ALL
<b>GD04720</b>		<b>SH</b>				<b>1351/290/L056</b>	<b>ALL</b>
S..	E	W0816	632	20		33-21-14	ALL
<b>GD04722</b>		<b>AC</b>				<b>0933/315/R020</b>	<b>150-199, 275-276</b>
<b>GD04728</b>		<b>AC</b>				<b>0368/291/R065</b>	<b>ALL</b>
A..	E	W1228	527	20		33-27-11	162-199
A..	E	W1379	003	16		23-34-15	ALL
<b>GD04730</b>		<b>DC</b>				<b>0368/291/R065</b>	<b>ALL</b>
D..	E	W0786	037	16		33-51-21	ALL
<b>GD04732</b>		<b>AC</b>				<b>0368/291/L065</b>	<b>150-199, 275-299</b>
A..	E	W1228	537	20		33-27-11	162-199
A..	E	W1383	003	16		23-34-16	150-199, 275-299

## GROUND LIST

D280T132

**91-21-21**  
Section GD04700  
Page 1  
Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD04734</b>		<b>DC</b>				<b>0368/291/L065</b>	<b>ALL</b>
D..	E	W0788	072	16		33-51-21	ALL
<b>GD04736</b>		<b>SH</b>				<b>0368/291/L065</b>	<b>162-199, 275-299</b>
S..	E	W0814	675	20		33-21-33	275-299
S..	E	W1228	538	20		33-27-11	162-199
<b>GD04750</b>		<b>DC</b>				<b>1502/159/L072</b>	<b>051-099, 150-154, 275-276</b>
D..	E	W0578	090	20		21-44-21	275-276
<b>GD04756</b>		<b>YHLZG16</b>				<b>P006-03/ /</b>	<b>ALL</b>
A..	2	W0048	086	16		24-51-24	ALL
A..	2	W1026	066	16		24-51-14	ALL
<b>GD04760</b>		<b>YHLZG16</b>				<b>0654+49/123/R053</b>	<b>150-199, 275-299</b>
A..	2	W0704	175	18		25-53-12	150-199, 275-299
S..	2	W0704	178	20		25-53-12	150-199, 275-299
S..	2	W0704	179	20		25-53-12	150-199, 275-299
A..	2	W0704	597	20		25-53-14	150-199, 275-299
D..	2	W0704	600	20		25-53-14	150-199, 275-299
A..	2	W0704	629	18		25-53-12	150-199, 275-299
S..	2	W0704	630	20		25-53-12	150-199, 275-299
S..	2	W0704	631	20		25-53-12	150-199, 275-299
<b>GD04762</b>		<b>YHLZG16</b>				<b>0654+93/123/R053</b>	<b>150-199, 275-299</b>
A..	2	W0704	560	20		25-53-14	150-199, 275-299
D..	2	W0704	563	20		25-53-14	150-199, 275-299
A..	2	W0704	570	18		25-53-12	150-199, 275-299
S..	2	W0704	573	20		25-53-12	150-199, 275-299
S..	2	W0704	574	20		25-53-12	150-199, 275-299
A..	2	W0704	580	18		25-53-12	150-199, 275-299
S..	2	W0704	587	20		25-53-12	150-199, 275-299
S..	2	W0704	588	20		25-53-12	150-199, 275-299
A..	2	W0704	594	20		25-53-14	150-199, 275-299
D..	2	W0704	596	20		25-53-14	150-199, 275-299
<b>GD04764</b>		<b>YHLZG16</b>				<b>0681/123/R053</b>	<b>150-199, 275-299</b>
D..	2	W0704	083	20		25-53-14	150-199, 275-299
A..	2	W0704	086	20		25-53-14	150-199, 275-299
D..	2	W0704	183	20		25-53-14	150-199, 275-299

## GROUND LIST

D280T132

**91-21-21**

Section GD04700

Page 2

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD04764</b>		<b>YHLZG16 (continued)</b>				<b>0681/123/R053</b>	<b>150-199, 275-299</b>
A..	2	W0704	186	20		25-53-14	150-199, 275-299
A..	2	W0704	610	20		25-53-14	150-199, 275-299
D..	2	W0704	613	20		25-53-14	150-199, 275-299
A..	2	W0704	617	18		25-53-12	150-199, 275-299
S..	2	W0704	618	20		25-53-12	150-199, 275-299
S..	2	W0704	619	20		25-53-12	150-199, 275-299
A..	2	W0704	620	18		25-53-12	150-199, 275-299
S..	2	W0704	621	20		25-53-12	150-199, 275-299
S..	2	W0704	622	20		25-53-12	150-199, 275-299
A..	2	W1258	167	20		30-71-21	150-199
<b>GD04766</b>		<b>YHLZG16</b>				<b>1197+37/122/R053</b>	<b>150-199, 275-299</b>
D..	2	W0710	033	20		25-53-24	150-199, 275-299
A..	2	W0710	036	20		25-53-24	150-199, 275-299
A..	2	W0710	055	18		25-53-22	150-199, 275-299
S..	2	W0710	058	20		25-53-22	150-199, 275-299
S..	2	W0710	059	20		25-53-22	150-199, 275-299
D..	2	W0710	133	20		25-53-24	150-199, 275-299
A..	2	W0710	135	18		25-53-22	150-199, 275-299
A..	2	W0710	136	20		25-53-24	150-199, 275-299
S..	2	W0710	138	20		25-53-22	150-199, 275-299
S..	2	W0710	139	20		25-53-22	150-199, 275-299
<b>GD04768</b>		<b>YHLZG16</b>				<b>1197+71/122/R053</b>	<b>150-199, 275-299</b>
D..	2	W0710	043	20		25-53-24	150-199, 275-299
A..	2	W0710	046	20		25-53-24	150-199, 275-299
A..	2	W0710	101	18		25-53-22	150-199, 275-299
S..	2	W0710	102	20		25-53-22	150-199, 275-299
S..	2	W0710	104	20		25-53-22	150-199, 275-299
A..	2	W0710	127	18		25-53-22	150-199, 275-299
S..	2	W0710	130	20		25-53-22	150-199, 275-299
S..	2	W0710	134	20		25-53-22	150-199, 275-299
D..	2	W0710	143	20		25-53-24	150-199, 275-299
A..	2	W0710	146	20		25-53-24	150-199, 275-299
<b>GD04770</b>		<b>YHLZG16</b>				<b>1197+125/122/R053</b>	<b>150-199, 275-299</b>
A..	2	W0710	065	18		25-53-22	150-199, 275-299
S..	2	W0710	068	20		25-53-22	150-199, 275-299
S..	2	W0710	069	20		25-53-22	150-199, 275-299
A..	2	W0710	165	18		25-53-22	150-199, 275-299

## GROUND LIST

D280T132

**91-21-21**

Section GD04700

Page 3

Mar 09/2006





# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD04770</b>		<b>YHLZG16 (continued)</b>				<b>1197+125/122/R053</b>	<b>150-199, 275-299</b>
S..	2	W0710	168	20		25-53-22	150-199, 275-299
S..	2	W0710	169	20		25-53-22	150-199, 275-299
A..	2	W0710	509	20		25-53-24	150-199, 275-299
D..	2	W0710	510	20		25-53-24	150-199, 275-299
A..	2	W0710	515	20		25-53-24	150-199, 275-299
D..	2	W0710	516	20		25-53-24	150-199, 275-299
<b>GD04780</b>		<b>YHLZG16</b>				<b>0654+14/123/R053</b>	<b>150-199, 275-299</b>
D..	2	W0580	036	20		21-43-11	150-199, 275-299
A..	2	W0704	085	18		25-53-12	150-199, 275-299
S..	2	W0704	088	20		25-53-12	150-199, 275-299
S..	2	W0704	089	20		25-53-12	150-199, 275-299
A..	2	W0704	145	18		25-53-12	150-199, 275-299
S..	2	W0704	148	20		25-53-12	150-199, 275-299
S..	2	W0704	149	20		25-53-12	150-199, 275-299
D..	2	W0704	163	20		25-53-14	150-199, 275-299
A..	2	W0704	166	20		25-53-14	150-199, 275-299
A..	2	W0704	557	20		25-53-14	150-199, 275-299
D..	2	W0704	568	20		25-53-14	150-199, 275-299

## GROUND LIST

D280T132

**91-21-21**

Section GD04700

Page 4 End

Mar 09/2006



## 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD04814</b>		<b>DC</b>				<b>1197+22/196/L092</b>	<b>150-199, 275-299</b>
D..	E	W0784	109	14		33-51-21	150-199, 275-299
<b>GD04816</b>		<b>DC</b>				<b>1197+22/196/R092</b>	<b>150-199, 275-299</b>
D..	E	W0786	085	12		33-51-21	150-199, 275-299
<b>GD04818</b>		<b>AC</b>				<b>0742/292/L063</b>	<b>150-199, 275-299</b>
A..	E	W0812	02Y	20		33-21-11	280-299
A..	E	W0812	04H	20		33-21-13	280-299
A..	E	W0812	110	20		33-21-32	150-199
DED		W0812	110Z			33-21-32	155-156, 166
A..	E	W0812	195	20		33-21-13	275-278
A..	E	W0812	775	20		33-21-11	280-299
<b>GD04820</b>		<b>SH</b>				<b>0742/292/L063</b>	<b>150-199, 275-299</b>
S..	E	W0812	02Z	20		33-21-11	280-299
S..	E	W0812	04J	20		33-21-13	280-299
S..	E	W0812	109	20		33-21-32	150-199
S..	E	W0812	196	20		33-21-13	275-278
S..	E	W0812	776	20		33-21-11	280-299
<b>GD04822</b>		<b>SH</b>				<b>0763/292/L063</b>	<b>150-199, 275-299</b>
S..	E	W0812	502	20		33-21-13	275-278
S..	E	W0812	642	20		33-21-11	150-199, 280-299
S..	E	W0812	674	20		33-21-13	275-299
S..	E	W0812	770	20		33-21-11	150-199
S..	E	W0812	776	20		33-21-11	150-199
<b>GD04824</b>		<b>SH</b>				<b>0677/290/R066</b>	<b>155-199, 275-299</b>
S..	E	W0812	503	20		33-21-13	275-278
S..	E	W0812	647	20		33-21-11	280-299
S..	E	W0812	724	20		33-21-11	280-299
S..	E	W0814	548	16		33-21-33	275-299
S..	E	W0814	676	20		38-32-13	155-156, 162-165
S..	E	W0814	676	20		38-32-16	157, 166-199
<b>GD04826</b>		<b>AC</b>				<b>0763/292/L063</b>	<b>150-199, 275-299</b>
A..	E	W0812	673	20		33-21-13	275-299
A..	E	W0812	769	20		33-21-11	150-199
A..	E	W0812	775	20		33-21-11	150-199

### GROUND LIST

D280T132

**91-21-21**  
Section GD04800  
Page 1  
Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD04828</b>		<b>SH</b>				<b>0765/291/R066</b>	<b>150-199, 275-299</b>
S..	E	W0812	680	20		33-21-13	275-299
S..	E	W0814	111	20		33-21-33	150-199, 275-299
<b>GD04830</b>		<b>AC</b>				<b>0883/292/L063</b>	<b>150-199, 275-299</b>
A..	E	W1256	097	20		21-45-22	150-199, 275-299
<b>GD04834</b>		<b>SH</b>				<b>0976/292/L063</b>	<b>150-199, 275-299</b>
S..	E	W0812	045	16		33-21-34	275-299
S..	E	W0812	048	20		33-21-34	275-299
S..	E	W0812	674	20		33-21-13	150-199
S..	E	W0812	706	20		33-21-13	275-299
<b>GD04836</b>		<b>SH</b>				<b>0883/292/R063</b>	<b>275-299</b>
S..	E	W0812	707	20		33-21-13	275-299
<b>GD04838</b>		<b>AC</b>				<b>0654+44/294/L063</b>	<b>150-199, 275-299</b>
A..	E	W0812	634	20		33-21-11	150-199, 275-299
<b>GD04840</b>		<b>SH</b>				<b>0654+44/292/L063</b>	<b>150-199, 275-299</b>
S..	E	W0812	635	20		33-21-11	150-199, 275-299
<b>GD04842</b>		<b>AC</b>				<b>0654+121/292/L063</b>	<b>275-299</b>
A..	E	W0812	02R	16		33-21-32	280-299
A..	E	W0812	195	20		33-21-13	280-299
A..	E	W0812	769	20		33-21-11	275-299
<b>GD04844</b>		<b>SH</b>				<b>0654+121/292/L063</b>	<b>275-299</b>
S..	E	W0812	01T	16		33-21-32	280-299
S..	E	W0812	196	20		33-21-13	280-299
S..	E	W0812	770	20		33-21-11	275-299
<b>GD04846</b>		<b>SH</b>				<b>0654+65/290/R066</b>	<b>150-199, 275-299</b>
S..	E	W0812	503	20		33-21-13	280-299
S..	E	W0812	724	20		33-21-11	150-199, 275-278
S..	E	W0814	592	20		33-21-33	150-199, 275-299
<b>GD04848</b>		<b>SH</b>				<b>0675/292/L063</b>	<b>150-199, 275-299</b>
S..	E	W0792	047	20		38-32-12	150-156, 162-165
S..	E	W0792	047	20		38-32-16	157, 166-199

## GROUND LIST

D280T132

**91-21-21**

Section GD04800

Page 2

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD04848</b>		<b>SH (continued)</b>				<b>0675/292/L063</b>	<b>150-199, 275-299</b>
S..	E	W0794	016	20		21-24-11	150-199
S..	E	W0812	109	20		33-21-32	275-299
S..	E	W0812	502	20		33-21-13	280-299
S..	E	W0812	642	20		33-21-11	275-278
<b>GD04850</b>		<b>SH</b>				<b>0654+66/292/L063</b>	<b>150-199, 275-299</b>
S..	E	W0812	196	20		33-21-13	150-199
S..	E	W0812	758	20		33-21-11	150-199, 275-299
S..	E	W0812	788	20		33-21-32	150-199, 275-299
<b>GD04860</b>		<b>AC</b>				<b>0654+77/193/R033</b>	<b>150-199, 275-299</b>
A..	E	W0660	057	16		33-37-11	150-199, 275-299
<b>GD04862</b>		<b>AC</b>				<b>0654+77/193/L033</b>	<b>150-199, 275-299</b>
A..	E	W0660	058	16		33-37-11	150-199, 275-299
<b>GD04864</b>		<b>AC</b>				<b>0675/291/L065</b>	<b>150-199, 275-299</b>
A..	E	W0792	053	16		38-13-11	150-199
A..	E	W0812	110	20		33-21-32	275-299
A..	E	W1234	034	20		33-21-21	150-199, 275-299
A..	E	W1383	018	16		23-34-16	150-199
A..	E	W1383	022	16		23-34-16	280-299
<b>GD04866</b>		<b>AC</b>				<b>0976/292/L063</b>	<b>150-199, 275-299</b>
A..	E	W0812	044	16		33-21-34	275-299
A..	E	W0812	047	20		33-21-34	275-299
A..	E	W0812	673	20		33-21-13	150-199
A..	E	W0814	898	20		33-26-11	150-199
A..	E	W0814	901	16		38-13-11	150-199
A..	E	W1234	015	20		33-21-21	275-299
<b>GD04868</b>		<b>AC</b>				<b>0654+65/291/L065</b>	<b>150-199, 275-299</b>
A..	E	W0812	195	20		33-21-13	150-199
A..	E	W0812	787	20		33-21-32	150-199, 275-299
DED		W0812	787Z			33-21-32	155-156, 166
A..	E	W1381	022	16		23-34-17	280-299
<b>GD04870</b>		<b>SH</b>				<b>0654+66/270/L083</b>	<b>150-199, 275-299</b>
S..	E	W0812	02S	20		33-21-32	280-299

## GROUND LIST

D280T132

**91-21-21**

Section GD04800

Page 3

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD04870</b>		<b>SH (continued)</b>				<b>0654+66/270/L083</b>	<b>150-199, 275-299</b>
S..	E	W0812	797	20		33-21-32	150-199, 275-299
<b>GD04872</b>		<b>SH</b>				<b>0654+110/270/R083</b>	<b>150-199, 275-299</b>
S..	E	W0812	502	20		33-21-13	150-199
S..	E	W0812	503	20		33-21-13	150-199
S..	E	W0812	800	20		33-21-32	150-199, 275-299
<b>GD04874</b>		<b>YHLZG16</b>				<b>0654+66/295/L014</b>	<b>150-199, 275-299</b>
D..	2	W0665	184	20		23-42-12	280-299
D..	2	W0665	522	20		23-42-11	280-299
D..	2	W0814	683	20		38-32-13	150-156, 162-165
D..	2	W0814	683	20		38-32-16	157, 166-199
S..	2	W0814	686	20		38-32-13	150-156, 162-165
S..	2	W0814	686	20		38-32-16	157, 166-199
A..	2	W0814	702	16		38-13-11	150-199
D..	2	W0814	820	20		33-25-11	150-199
A..	2	W0814	862	22		33-26-11	150-199
S..	2	W0822	092	20		33-21-13	150-199
S..	2	W0822	094	20		33-21-11	275-278
A..	2	W0822	183	20		33-21-11	150-199, 275-278
S..	2	W0822	184	20		33-21-11	150-199, 275-278
S..	2	W0822	511	20		33-21-11	150-199, 275-278
A..	2	W1142	020	20		33-24-13	275
A..	2	W1142	135	20		33-24-13	276-299
D..	2	W1164	015	20		35-21-14	275
D..	2	W1164	132	20		35-21-14	276-299
D..	2	W1282	064	20		35-21-14	150-199
<b>GD04876</b>		<b>YHLZG16</b>				<b>0654+110/295/L013</b>	<b>150-199, 275-299</b>
A..	2	W0784	801	20		33-22-21	150-199
A..	2	W0822	191	20		33-21-11	275-278
S..	2	W0822	194	20		33-21-11	275-278
A..	2	W1142	025	20		33-24-13	275
A..	2	W1142	145	20		33-24-13	276-299
D..	2	W1164	018	20		35-21-14	275
D..	2	W1164	142	20		35-21-14	276-299
A..	2	W1224	807	20		33-22-41	150-199
<b>GD04878</b>		<b>AC</b>				<b>1131/292/L063</b>	<b>150-199, 275-299</b>
A..	E	W0816	603	20		33-21-14	150-199, 275-299

## GROUND LIST

D280T132

**91-21-21**

Section GD04800

Page 4

Mar 09/2006



## 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD04880</b>		<b>SH</b>				<b>1131/292/L063</b>	<b>150-199, 275-299</b>
S..	E	W0816	604	20		33-21-14	150-199, 275-299
<b>GD04882</b>		<b>AC</b>				<b>1153/292/L063</b>	<b>150-199, 275-299</b>
A..	E	W0788	053	20		33-21-21	150-199, 275-299
A..	E	W0816	111	20		33-21-34	150-199, 275-299
DED		W0816	111Z			33-21-34	155-156, 166
<b>GD04884</b>		<b>DC</b>				<b>1153/292/L063</b>	<b>150-199, 275-299</b>
D..	E	W0790	062	18		33-51-13	150-199, 275-299
<b>GD04886</b>		<b>SH</b>				<b>1152/292/L063</b>	<b>150-199, 275-299</b>
S..	E	W0816	112	20		33-21-34	150-199, 275-299
S..	E	W0816	609	20		33-21-14	150-199, 275-299
<b>GD04888</b>		<b>AC</b>				<b>1043/292/R063</b>	<b>150-199, 275-299</b>
A..	E	W0814	710	16		33-21-35	150-199
DED		W0814	710Z			33-21-35	155-156, 166
A..	E	W0818	004	20		33-21-35	150-199, 275-299
DED		W0818	004Z			33-21-35	155-156, 166
D..	E	W1222	077	20		33-51-12	150-199, 275-299
A..	E	W1236	021	20		33-21-21	150-199
<b>GD04892</b>		<b>SH</b>				<b>1043/292/R063</b>	<b>150-199, 275-299</b>
S..	E	W0812	680	20		33-21-13	150-199
S..	E	W0816	610	20		33-21-14	150-199, 275-299
S..	E	W0818	005	20		33-21-35	150-199, 275-299
<b>GD04894</b>		<b>AC</b>				<b>1197+132/292/R063</b>	<b>150-199, 275-299</b>
A..	E	W0818	108	20		33-21-35	150-199, 275-299
DED		W0818	108Z			33-21-35	155-156, 166
A..	E	W1240	037	20		33-21-21	150-199, 275-299
<b>GD04896</b>		<b>DC</b>				<b>1197+132/292/R063</b>	<b>150-199, 275-299</b>
D..	E	W0790	059	18		33-51-12	150-199, 275-299
<b>GD04898</b>		<b>SH</b>				<b>1197+132/292/R063</b>	<b>150-199, 275-299</b>
S..	E	W0816	623	20		33-21-14	150-199, 275-299
S..	E	W0818	107	20		33-21-35	150-199, 275-299

### GROUND LIST

D280T132

**91-21-21**  
Section GD04800  
Page 5 End  
Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD04900</b>		<b>AC</b>				<b>1197+22/292/L063</b>	<b>150-199, 275-299</b>
A..	E	W0816	668	20		33-21-14	150-199, 275-299
<b>GD04902</b>		<b>SH</b>				<b>1197+22/292/L063</b>	<b>150-199, 275-299</b>
S..	E	W0816	669	20		33-21-14	150-199, 275-299
<b>GD04904</b>		<b>YHLZG16</b>				<b>1197+132/295/L013</b>	<b>150-199, 275-299</b>
S..	2	W0824	024	20		33-21-14	150-199, 275-299
A..	2	W2064	005	20		33-24-13	150-199, 275
A..	2	W2064	010	20		33-24-13	150-199, 275
A..	2	W2064	015	20		33-24-13	150-199, 275
A..	2	W2064	105	20		33-24-13	276-299
A..	2	W2064	115	20		33-24-13	276-299
A..	2	W2064	125	20		33-24-13	276-299
D..	2	W2068	003	20		35-21-14	150-199, 275
D..	2	W2068	006	20		35-21-14	150-199, 275
D..	2	W2068	009	20		35-21-14	150-199, 275
D..	2	W2068	102	20		35-21-14	276-299
D..	2	W2068	112	20		35-21-14	276-299
D..	2	W2068	122	20		35-21-14	276-299
<b>GD04906</b>		<b>YHLZG16</b>				<b>1197+44/295/L013</b>	<b>150-199, 275-299</b>
D..	2	W0665	162	20		23-42-11	150-199
D..	2	W0665	165	20		23-42-11	150-199
A..	2	W0824	087	20		33-21-14	150-199, 275-299
S..	2	W0824	088	20		33-21-14	150-199, 275-299
S..	2	W0824	103	20		33-21-14	150-199, 275-299
S..	2	W0824	104	20		33-21-14	150-199, 275-299
S..	2	W0824	105	20		33-21-14	150-199, 275-299
A..	2	W1148	015	20		33-24-13	150-199, 275
A..	2	W1148	020	20		33-24-13	150-199, 275
A..	2	W1148	125	20		33-24-13	276-299
A..	2	W1148	135	20		33-24-13	276-299
D..	2	W1170	009	20		35-21-14	150-199, 275
D..	2	W1170	012	20		35-21-14	150-199, 275
D..	2	W1170	132	20		35-21-14	276-299
<b>GD04908</b>		<b>YHLZG16</b>				<b>1197+88/295/L013</b>	<b>150-199, 275-299</b>
A..	2	W0824	094	20		33-21-14	150-199, 275-299
S..	2	W0824	097	20		33-21-14	150-199, 275-299
A..	2	W1148	025	20		33-24-13	150-199, 275

## GROUND LIST

D280T132

**91-21-21**

Section GD04900

Page 1

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD04908</b>		<b>YHLZG16 (continued)</b>				<b>1197+88/295/L013</b>	<b>150-199, 275-299</b>
A..	2	W1148	145	20		33-24-13	276-299
D..	2	W1170	014	20		35-21-14	150-199, 275
D..	2	W1170	142	20		35-21-14	276-299
<b>GD04910</b>		<b>AC</b>				<b>1043/292/L063</b>	<b>150-199, 275-299</b>
A..	E	W0616	021	18		25-29-11	150-199, 275-299
A..	E	W0816	107	20		33-21-34	275-299
A..	E	W0816	588	20		33-21-14	150-199, 275-299
A..	E	W1234	015	20		33-21-21	150-199
<b>GD04912</b>		<b>DC</b>				<b>1043/292/L063</b>	<b>150-199, 275-299</b>
D..	E	W0790	050	20		33-51-13	150-199, 275-299
<b>GD04914</b>		<b>SH</b>				<b>1043/292/L063</b>	<b>150-199, 275-299</b>
S..	E	W0616	041	18		25-29-11	150-199, 275-299
S..	E	W0812	679	20		33-21-13	150-199
S..	E	W0816	108	20		33-21-34	275-299
S..	E	W0816	589	20		33-21-14	150-199, 275-299
S..	E	W0816	594	20		33-21-14	150-199, 275-299
<b>GD04916</b>		<b>AC</b>				<b>0976/292/R065</b>	<b>150-199, 275-299</b>
A..	E	W0792	674	20		33-26-11	150-199
A..	E	W0792	802	16		38-13-11	150-199
A..	E	W0814	048	16		33-21-35	150-199, 275-299
DED		W0814	048Z			33-21-35	155-156, 166
A..	E	W0814	051	20		33-21-35	275-299
A..	E	W1236	021	20		33-21-21	275-299
<b>GD04918</b>		<b>DC</b>				<b>0976/292/R063</b>	<b>150-199, 275-299</b>
D..	E	W0728	099	20		35-21-13	150-199
D..	E	W0792	069	20		33-25-11	150-199
D..	E	W0792	667	20		38-32-13	150-156, 162-165
D..	E	W0792	667	20		38-32-16	157, 166-199
D..	E	W1222	075	20		33-51-12	275-299
<b>GD04920</b>		<b>SH</b>				<b>0976/292/R063</b>	<b>150-199, 275-299</b>
S..	E	W0792	668	20		38-32-13	150-156, 162-165
S..	E	W0792	668	20		38-32-16	157, 166-199
S..	E	W0814	049	16		33-21-35	150-199, 275-299

## GROUND LIST

D280T132

**91-21-21**  
Section GD04900  
Page 2  
Mar 09/2006





# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD04920</b>		<b>SH (continued)</b>				<b>0976/292/R063</b>	<b>150-199, 275-299</b>
S..	E	W0814	052	20		33-21-35	275-299
S..	E	W0816	595	20		33-21-14	150-199, 275-299
<b>GD04922</b>		<b>AC</b>				<b>1197+44/292/L063</b>	<b>150-199, 275-299</b>
A..	E	W0816	687	20		33-21-34	150-199, 275-299
DED		W0816	687Z			33-21-34	155-156, 166
<b>GD04924</b>		<b>DC</b>				<b>1197+44/291/L063</b>	<b>150-199, 275-299</b>
D..	E	W0790	068	18		33-51-13	150-199, 275-299
<b>GD04926</b>		<b>SH</b>				<b>1197+44/292/L063</b>	<b>150-199, 275-299</b>
S..	E	W0816	083	20		33-21-14	150-199, 275-299
S..	E	W0816	686	20		33-21-34	150-199, 275-299
<b>GD04928</b>		<b>AC</b>				<b>1153/295/R65</b>	<b>150-199, 275-299</b>
A..	E	W0818	008	20		33-21-35	150-199, 275-299
DED		W0818	008Z			33-21-35	155-156, 166
A..	E	W1240	003	20		33-21-21	150-199, 275-299
<b>GD04930</b>		<b>DC</b>				<b>1152/292/R063</b>	<b>150-199, 275-299</b>
D..	E	W1222	080	20		33-51-12	150-199, 275-299
<b>GD04932</b>		<b>SH</b>				<b>1152/292/R063</b>	<b>150-199, 275-299</b>
S..	E	W0816	059	20		33-21-14	150-199, 275-299
S..	E	W0818	009	20		33-21-35	150-199, 275-299
<b>GD04934</b>		<b>AC</b>				<b>1197+110/292/L063</b>	<b>150-199, 275-299</b>
A..	E	W0816	678	20		33-21-14	150-199, 275-299
<b>GD04936</b>		<b>SH</b>				<b>1197+110/292/L063</b>	<b>150-199, 275-299</b>
S..	E	W0816	679	20		33-21-14	150-199, 275-299
<b>GD04938</b>		<b>AC</b>				<b>1197+132/292/L063</b>	<b>150-199, 275-299</b>
A..	E	W0788	042	20		33-21-21	150-199, 275-299
A..	E	W0816	701	20		33-21-34	150-199, 275-299
DED		W0816	701Z			33-21-34	155-156, 166
<b>GD04940</b>		<b>DC</b>				<b>1197+132/292/L063</b>	<b>150-199, 275-299</b>
D..	E	W0788	016	20		33-51-13	150-199, 275-299

## GROUND LIST

D280T132

**91-21-21**

Section GD04900

Page 3

Mar 09/2006



## 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD04942</b>		<b>SH</b>				<b>1197+132/292/L063</b>	<b>150-199, 275-299</b>
S..	E	W0816	629	20		33-21-14	150-199, 275-299
S..	E	W0816	700	20		33-21-34	150-199, 275-299
<b>GD04944</b>		<b>AC</b>				<b>1197+44/292/R063</b>	<b>150-199, 275-299</b>
A..	E	W0818	074	20		33-21-35	150-199, 275-299
DED		W0818	074Z			33-21-35	155-156, 166
<b>GD04946</b>		<b>DC</b>				<b>1197+44/292/R063</b>	<b>150-199, 275-299</b>
D..	E	W0790	071	20		33-51-12	150-199, 275-299
<b>GD04948</b>		<b>SH</b>				<b>1197+44/292/R063</b>	<b>150-199, 275-299</b>
S..	E	W0816	070	20		33-21-14	150-199, 275-299
S..	E	W0818	073	20		33-21-35	150-199, 275-299
<b>GD04952</b>		<b>SH</b>				<b>1197+44/270/L083</b>	<b>150-199, 275-299</b>
S..	E	W0816	697	20		33-21-34	150-199, 275-299
<b>GD04954</b>		<b>SH</b>				<b>1197+88/270/L083</b>	<b>150-199, 275-299</b>
S..	E	W0816	706	20		33-21-34	150-199, 275-299
<b>GD04956</b>		<b>SH</b>				<b>1197+132/270/L083</b>	<b>150-199, 275-299</b>
S..	E	W0816	168	20		33-21-34	150-199, 275-299
<b>GD04958</b>		<b>SH</b>				<b>0654+22/265/R085</b>	<b>150-199, 275-299</b>
S..	E	W0814	141	20		33-21-33	150-199, 275-299
<b>GD04960</b>		<b>AC</b>				<b>0765/291/R066</b>	<b>150-199, 275-299</b>
A..	E	W0814	112	20		33-21-33	150-199, 275-299
DED		W0814	112Z			33-21-33	155-156, 166
<b>GD04964</b>		<b>AC</b>				<b>0883/292/R063</b>	<b>150-199, 275-299</b>
A..	E	W1256	108	20		21-45-22	150-199, 275-299
<b>GD04968</b>		<b>AC</b>				<b>0654+65/290/R066</b>	<b>150-199, 275-299</b>
A..	E	W0814	591	20		33-21-33	150-199, 275-299
DED		W0814	591Z			33-21-33	155-156, 166
A..	E	W0834	079	20		33-22-21	162-199

### GROUND LIST

D280T132

**91-21-21**  
Section GD04900  
Page 4  
Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD04970</b>		<b>DC</b>				<b>0654+65/291/R066</b>	<b>150-199, 275-299</b>
D..	E	W0814	01K	20		SPARE	280-299
D..	E	W0814	01M	20		SPARE	280-299
D..	E	W1222	097	18		33-51-12	150-199, 275-299
<b>GD04972</b>		<b>SH</b>				<b>0654+22/265/L085</b>	<b>150-199, 275-299</b>
S..	E	W0814	597	20		33-21-33	150-199, 275-299
<b>GD04974</b>		<b>SH</b>				<b>0654+66/265/R083</b>	<b>150-199, 275-299</b>
S..	E	W0814	602	20		33-21-33	150-199, 275-299
<b>GD04976</b>		<b>AC</b>				<b>0798/292/R065</b>	<b>150-199, 275-299</b>
A..	E	W0814	183	16		38-13-11	150-199
A..	E	W0814	184	20		33-26-11	150-199
A..	E	W0814	547	16		33-21-33	275-299
A..	E	W0814	819	22		33-25-11	150-154
A..	E	W1236	064	20		33-21-21	150-199, 275-299
A..	E	W1379	014	16		23-34-15	150-199
A..	E	W1379	022	16		23-34-15	280-299
<b>GD04978</b>		<b>DC</b>				<b>0677/292/R065</b>	<b>150-199, 275-299</b>
D..	E	W0722	032	20		35-21-13	150-199
D..	E	W0814	670	20		38-32-13	150-156, 162-165
D..	E	W0814	670	20		38-32-16	157, 166-199
S..	E	W0814	676	20		38-32-13	150-154
D..	E	W0814	819	20		33-25-11	155-199
D..	E	W1222	098	18		33-51-12	150-199, 275-299
<b>GD04980</b>		<b>SH</b>				<b>0654+110/265/L085</b>	<b>275-299</b>
S..	E	W0814	553	20		33-21-33	275-299
<b>GD04982</b>		<b>SH</b>				<b>1197+44/270/R083</b>	<b>150-199, 275-299</b>
S..	E	W0818	134	20		33-21-35	150-199, 275-299
<b>GD04984</b>		<b>SH</b>				<b>1197+88/270/R083</b>	<b>150-199, 275-299</b>
S..	E	W0818	542	20		33-21-35	150-199, 275-299
<b>GD04986</b>		<b>SH</b>				<b>1197+132/270/R083</b>	<b>150-199, 275-299</b>
S..	E	W0818	547	20		33-21-35	150-199, 275-299

## GROUND LIST

D280T132

**91-21-21**

Section GD04900

Page 5

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD04988</b>		<b>DC</b>				<b>0763/292/L063</b>	<b>150-199</b>
A..	E	W0792	006	20		33-26-11	150-199
D..	E	W0792	048	20		38-32-12	150-156, 162-165
D..	E	W0792	048	20		38-32-16	157, 166-199
D..	E	W0792	173	20		33-25-11	150-199
<b>GD04990</b>		<b>DC</b>				<b>0976/291/L065</b>	<b>150-199, 275-299</b>
D..	E	W0724	099	20		35-21-12	150-199
D..	E	W0790	051	20		33-51-13	275-299
D..	E	W0814	192	20		33-25-11	150-199
<b>GD04992</b>		<b>DC</b>				<b>0675/292/L063</b>	<b>150-199, 275-299</b>
D..	E	W0718	031	20		35-21-12	150-199
D..	E	W0790	064	18		33-51-13	150-199, 275-299
D..	E	W0794	015	20		21-24-11	150-199
<b>GD04996</b>		<b>AC</b>				<b>0654+16/265/L074</b>	<b>150-199, 275-278</b>
A..	E	W0800	045	20		33-24-12	150-199, 275-278
A..	E	W0800	545	20		33-24-12	150-199, 275-278
A..	E	W0800	548	20		33-24-12	150-199, 275-278
<b>GD04998</b>		<b>DC</b>				<b>0654+16/265/L074</b>	<b>150-199, 275-278</b>
D..	E	W0718	028	20		35-21-12	150-199, 275-278
D..	E	W0718	079	20		35-21-12	150-199, 275-278
D..	E	W0718	081	20		35-21-12	150-199, 275-278

## GROUND LIST

D280T132

**91-21-21**  
Section GD04900  
Page 6 End  
Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD05000</b>		<b>AC</b>				<b>654+0104/266/L075</b>	<b>275-299</b>
A..	E	W0800	050	20		33-24-12	275-299
A..	E	W0800	551	20		33-24-12	275-299
A..	E	W0800	554	20		33-24-12	275-299
<b>GD05002</b>		<b>DC</b>				<b>0654+ 64/266/L075</b>	<b>275-299</b>
D..	E	W0718	031	20		35-21-12	275-299
D..	E	W0718	083	20		35-21-12	275-299
D..	E	W0718	085	20		35-21-12	275-299
<b>GD05004</b>		<b>AC</b>				<b>0726/266/L075</b>	<b>275-299</b>
A..	E	W0806	055	20		33-24-12	275-299
A..	E	W0806	060	20		33-24-12	275-299
A..	E	W0806	065	20		33-24-12	275-299
<b>GD05006</b>		<b>DC</b>				<b>0727/266/L075</b>	<b>275-299</b>
D..	E	W0724	074	20		35-21-12	275-299
D..	E	W0724	077	20		35-21-12	275-299
D..	E	W0724	079	20		35-21-12	275-299
<b>GD05008</b>		<b>AC</b>				<b>0789/266/L075</b>	<b>275-299</b>
A..	E	W0806	070	20		33-24-12	275-299
A..	E	W0806	123	20		33-24-12	275-299
<b>GD05010</b>		<b>DC</b>				<b>0790/266/L075</b>	<b>275-299</b>
D..	E	W0724	082	20		35-21-12	275-299
D..	E	W0724	084	20		35-21-12	275-299
<b>GD05012</b>		<b>AC</b>				<b>0938/267/L074</b>	<b>275-299</b>
A..	E	W0806	090	20		33-24-12	275-299
A..	E	W0806	095	20		33-24-12	275-299
A..	E	W0806	100	20		33-24-12	275-299
<b>GD05014</b>		<b>DC</b>				<b>0930/265/L074</b>	<b>275-299</b>
D..	E	W0724	094	20		35-21-12	275-299
D..	E	W0724	097	20		35-21-12	275-299
D..	E	W0724	099	20		35-21-12	275-299
<b>GD05016</b>		<b>AC</b>				<b>1015/267/L074</b>	<b>275-299</b>
A..	E	W0806	105	20		33-24-12	275-299

## GROUND LIST

D280T132

**91-21-21**

Section GD05000

Page 1

Mar 09/2006



## 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD05016</b>		<b>AC (continued)</b>				<b>1015/267/L074</b>	<b>275-299</b>
A..	E	W0806	110	20		33-24-12	275-299
A..	E	W0806	163	20		33-24-12	275-299
<b>GD05018</b>		<b>DC</b>				<b>1015/265/L074</b>	<b>150-199, 275-299</b>
D..	E	W0724	004	20		35-21-12	275-299
D..	E	W0724	101	20		35-21-12	275-299
D..	E	W0724	103	20		35-21-12	150-199, 275-299
<b>GD05020</b>		<b>AC</b>				<b>1104/267/L074</b>	<b>150-199, 275-299</b>
A..	E	W0806	166	20		33-24-12	150-199, 275-299
A..	E	W0806	169	20		33-24-12	150-199, 275-299
A..	E	W0806	172	20		33-24-12	150-199, 275-299
<b>GD05022</b>		<b>DC</b>				<b>1114/265/L074</b>	<b>150-199, 275-299</b>
D..	E	W0724	007	20		35-21-12	150-199, 275-299
D..	E	W0724	010	20		35-21-12	150-199, 275-299
D..	E	W0724	012	20		35-21-12	150-199, 275-299
<b>GD05024</b>		<b>AC</b>				<b>1191/267/L074</b>	<b>150-199, 275-299</b>
A..	E	W0806	175	20		33-24-12	150-199, 275-299
A..	E	W0806	178	20		33-24-12	150-199, 275-299
A..	E	W0806	181	20		33-24-12	150-199, 275-299
<b>GD05026</b>		<b>DC</b>				<b>1197+05/265/L074</b>	<b>150-199, 275-299</b>
D..	E	W0724	015	20		35-21-12	150-199, 275-299
D..	E	W0724	018	20		35-21-12	150-199, 275-299
D..	E	W0724	065	20		35-21-12	150-199, 275-299
<b>GD05028</b>		<b>AC</b>				<b>1197+82/267/L074</b>	<b>150-199, 275-299</b>
A..	E	W0806	184	20		33-24-12	150-199, 275-299
A..	E	W0806	187	20		33-24-12	150-199, 275-299
A..	E	W0806	190	20		33-24-12	150-199, 275-299
<b>GD05030</b>		<b>DC</b>				<b>1197+93/265/L074</b>	<b>150-199, 275-299</b>
D..	E	W0724	067	20		35-21-12	150-199, 275-299
D..	E	W0724	069	20		35-21-12	150-199, 275-299
D..	E	W0724	071	20		35-21-12	150-199, 275-299

### GROUND LIST

D280T132

**91-21-21**  
Section GD05000  
Page 2  
Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD05032</b>		<b>AC</b>				<b>1235/267/L074</b>	<b>150-199, 275-299</b>
A..	E	W0806	193	20		33-24-12	150-199, 275-299
A..	E	W0806	196	20		33-24-12	150-199, 275-299
A..	E	W0806	199	20		33-24-12	150-199, 275-299
<b>GD05034</b>		<b>DC</b>				<b>1246/265/L074</b>	<b>150-199, 275-299</b>
D..	E	W0724	021	20		35-21-12	150-199, 275-299
D..	E	W0724	024	20		35-21-12	150-199, 275-299
D..	E	W0724	028	20		35-21-12	150-199, 275-299
<b>GD05036</b>		<b>AC</b>				<b>0654+16/267/R074</b>	<b>150-199, 275-278</b>
A..	E	W0804	045	20		33-24-14	150-199, 275-278
A..	E	W0804	545	20		33-24-14	150-199, 275-278
A..	E	W0804	548	20		33-24-14	150-199, 275-278
<b>GD05038</b>		<b>DC</b>				<b>0654+16/265/R074</b>	<b>150-199, 275-278</b>
D..	E	W0722	028	20		35-21-13	150-199, 275-278
D..	E	W0722	079	20		35-21-13	150-199, 275-278
D..	E	W0722	081	20		35-21-13	150-199, 275-278
<b>GD05040</b>		<b>AC</b>				<b>0654+104/267/R074</b>	<b>275-299</b>
A..	E	W0804	050	20		33-24-14	275-299
A..	E	W0804	551	20		33-24-14	275-299
A..	E	W0804	554	20		33-24-14	275-299
<b>GD05042</b>		<b>DC</b>				<b>0654+104/266/R075</b>	<b>275-299</b>
D..	E	W0722	032	20		35-21-13	275-299
D..	E	W0722	083	20		35-21-13	275-299
D..	E	W0722	085	20		35-21-13	275-299
<b>GD05044</b>		<b>AC</b>				<b>0714/266/R075</b>	<b>275-299</b>
A..	E	W0810	055	20		33-24-14	275-299
A..	E	W0810	060	20		33-24-14	275-299
A..	E	W0810	065	20		33-24-14	275-299
<b>GD05046</b>		<b>DC</b>				<b>0727/266/R075</b>	<b>275-299</b>
D..	E	W0728	074	20		35-21-13	275-299
D..	E	W0728	077	20		35-21-13	275-299
D..	E	W0728	079	20		35-21-13	275-299

## GROUND LIST

D280T132

**91-21-21**

Section GD05000

Page 3

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD05048</b>		<b>AC</b>				<b>0789/266/R075</b>	<b>275-299</b>
A..	E	W0810	070	20		33-24-14	275-299
A..	E	W0810	120	20		33-24-14	275-299
<b>GD05050</b>		<b>DC</b>				<b>0790/266/R075</b>	<b>275-299</b>
D..	E	W0728	082	20		35-21-13	275-299
D..	E	W0728	084	20		35-21-13	275-299
<b>GD05052</b>		<b>AC</b>				<b>0930/265/R074</b>	<b>275-299</b>
A..	E	W0810	090	20		33-24-14	275-299
A..	E	W0810	095	20		33-24-14	275-299
A..	E	W0810	100	20		33-24-14	275-299
<b>GD05054</b>		<b>DC</b>				<b>0927/265/R074</b>	<b>275-299</b>
D..	E	W0728	094	20		35-21-13	275-299
D..	E	W0728	097	20		35-21-13	275-299
D..	E	W0728	099	20		35-21-13	275-299
<b>GD05056</b>		<b>AC</b>				<b>1026/265/R074</b>	<b>275-299</b>
A..	E	W0810	105	20		33-24-14	275-299
A..	E	W0810	110	20		33-24-14	275-299
A..	E	W0810	163	20		33-24-14	275-299
<b>GD05058</b>		<b>DC</b>				<b>1015/265/R074</b>	<b>150-199, 275-299</b>
D..	E	W0728	004	20		35-21-13	275-299
D..	E	W0728	101	20		35-21-13	275-299
D..	E	W0728	104	20		35-21-13	150-199, 275-299
<b>GD05060</b>		<b>AC</b>				<b>1103/265/R074</b>	<b>150-199</b>
<b>GD05060</b>		<b>AC</b>				<b>1104/265/R074</b>	<b>275-299</b>
A..	E	W0810	166	20		33-24-14	150-199, 275-299
A..	E	W0810	169	20		33-24-14	150-199, 275-299
A..	E	W0810	172	20		33-24-14	150-199, 275-299
<b>GD05062</b>		<b>DC</b>				<b>1104/265/R074</b>	<b>150-199, 275-299</b>
D..	E	W0728	007	20		35-21-13	150-199, 275-299
D..	E	W0728	010	20		35-21-13	150-199, 275-299
D..	E	W0728	012	20		35-21-13	150-199, 275-299
<b>GD05064</b>		<b>AC</b>				<b>1191/265/R074</b>	<b>150-199</b>

## GROUND LIST

D280T132

**91-21-21**

Section GD05000

Page 4

Mar 09/2006





# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD05064</b>		<b>AC</b>				<b>1197+05/265/R074</b>	<b>275-299</b>
A..	E	W0810	175	20		33-24-14	150-199, 275-299
A..	E	W0810	178	20		33-24-14	150-199, 275-299
A..	E	W0810	181	20		33-24-14	150-199, 275-299
<b>GD05066</b>		<b>DC</b>				<b>1197+05/265/R074</b>	<b>150-199, 275-299</b>
D..	E	W0728	015	20		35-21-13	150-199, 275-299
D..	E	W0728	018	20		35-21-13	150-199, 275-299
D..	E	W0728	062	20		35-21-13	150-199, 275-299
<b>GD05068</b>		<b>AC</b>				<b>1197+82/265/R074</b>	<b>150-199</b>
<b>GD05068</b>		<b>AC</b>				<b>1197+93/265/R074</b>	<b>275-299</b>
A..	E	W0810	184	20		33-24-14	150-199, 275-299
A..	E	W0810	187	20		33-24-14	150-199, 275-299
A..	E	W0810	190	20		33-24-14	150-199, 275-299
<b>GD05070</b>		<b>DC</b>				<b>1197+83/265/R074</b>	<b>150-199, 275-299</b>
D..	E	W0728	064	20		35-21-13	150-199, 275-299
D..	E	W0728	066	20		35-21-13	150-199, 275-299
D..	E	W0728	068	20		35-21-13	150-199, 275-299
<b>GD05072</b>		<b>AC</b>				<b>1234/265/R074</b>	<b>150-199</b>
<b>GD05072</b>		<b>AC</b>				<b>1246/265/R074</b>	<b>275-299</b>
A..	E	W0810	193	20		33-24-14	150-199, 275-299
A..	E	W0810	196	20		33-24-14	150-199, 275-299
A..	E	W0810	199	20		33-24-14	150-199, 275-299
<b>GD05074</b>		<b>DC</b>				<b>1234/265/R074</b>	<b>150-199, 275-299</b>
D..	E	W0728	021	20		35-21-13	150-199, 275-299
D..	E	W0728	024	20		35-21-13	150-199, 275-299
D..	E	W0728	028	20		35-21-13	150-199, 275-299
<b>GD05076</b>		<b>DC</b>				<b>0654+66/292/L063</b>	<b>150-199, 275-299</b>
D..	E	W0784	041	20		33-51-13	150-199, 275-299
<b>GD05078</b>		<b>DC</b>				<b>1438/292/L063</b>	<b>150-199, 275-299</b>
D..	E	W0788	019	18		33-51-13	150-199, 275-299
<b>GD05080</b>		<b>YHLZG16</b>				<b>0654+22/295/L014</b>	<b>150-199, 275-299</b>
A..	2	W1142	005	20		33-24-13	275
A..	2	W1142	010	20		33-24-13	275

## GROUND LIST

D280T132

**91-21-21**

Section GD05000

Page 5

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD05080</b>		<b>YHLZG16 (continued)</b>				<b>0654+22/295/L014</b>	<b>150-199, 275-299</b>
A..	2	W1142	015	20		33-24-13	275
A..	2	W1142	105	20		33-24-13	276-299
A..	2	W1142	115	20		33-24-13	276-299
A..	2	W1142	125	20		33-24-13	276-299
D..	2	W1164	006	20		35-21-14	275
D..	2	W1164	009	20		35-21-14	275
D..	2	W1164	012	20		35-21-14	275
D..	2	W1164	102	20		35-21-14	276-299
D..	2	W1164	112	20		35-21-14	276-299
D..	2	W1164	122	20		35-21-14	276-299
D..	2	W1234	022	20		21-61-21	150-199, 275-299
D..	2	W1234	024	20		21-65-11	150-199, 275-299
A..	2	W1280	005	20		33-24-13	150-199
A..	2	W1280	054	20		33-24-13	150-199
A..	2	W1280	076	20		33-24-13	150-199
D..	2	W1282	040	20		35-21-14	150-199
D..	2	W1282	062	20		35-21-14	150-199
<b>GD05082</b>		<b>AC</b>				<b>0654+22/210/L097</b>	<b>150-199, 275-299</b>
A..	E	W0784	002	14		33-41-11	150-199, 275-299
<b>GD05084</b>		<b>SH</b>				<b>0654+22/210/L097</b>	<b>150-199, 275-299</b>
S..	E	W0784	085	14		33-41-11	150-199, 275-299
<b>GD05086</b>		<b>AC</b>				<b>0654+22/207/R093</b>	<b>150-199, 275-299</b>
A..	E	W0786	002	14		33-41-11	150-199, 275-299
<b>GD05088</b>		<b>SH</b>				<b>0654+22/207/R093</b>	<b>150-199, 275-299</b>
S..	E	W0786	057	14		33-41-11	150-199, 275-299

## GROUND LIST

D280T132

**91-21-21**  
Section GD05000  
Page 6 End  
Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD05124</b>		<b>AC</b>				<b>1197+33/194/L033</b>	<b>150-199, 275-299</b>
A..	E	W0662	079	16		33-37-21	150-199, 275-299
<b>GD05126</b>		<b>AC</b>				<b>1197+33/194/R033</b>	<b>150-199, 275-299</b>
A..	E	W0662	080	16		33-37-21	150-199, 275-299
<b>GD05128</b>		<b>AC</b>				<b>1197+99/194/L033</b>	<b>150-199, 275-299</b>
A..	E	W0662	084	16		33-37-21	150-199, 275-299
<b>GD05130</b>		<b>AC</b>				<b>1197+99/194/R033</b>	<b>150-199, 275-299</b>
A..	E	W0662	081	16		33-37-21	150-199, 275-299
<b>GD05132</b>		<b>YHLZG16</b>				<b>0808/295/R015</b>	<b>275-276</b>
<b>GD05134</b>		<b>AC</b>				<b>0895/265/L074</b>	<b>150-199</b>
A..	E	W0806	080	20		33-24-12	150-199
A..	E	W0806	085	20		33-24-12	150-199
A..	E	W0806	090	20		33-24-12	150-199
<b>GD05136</b>		<b>DC</b>				<b>0897/265/L075</b>	<b>150-199</b>
D..	E	W0724	092	20		35-21-12	150-199
D..	E	W0724	094	20		35-21-12	150-199
D..	E	W0724	097	20		35-21-12	150-199
<b>GD05138</b>		<b>AC</b>				<b>0895/265/R074</b>	<b>150-199</b>
A..	E	W0810	085	20		33-24-14	150-199
A..	E	W0810	090	20		33-24-14	150-199
A..	E	W0810	095	20		33-24-14	150-199
<b>GD05140</b>		<b>DC</b>				<b>0895/265/R074</b>	<b>150-199</b>
D..	E	W0728	092	20		35-21-13	150-199
D..	E	W0728	094	20		35-21-13	150-199
D..	E	W0728	097	20		35-21-13	150-199
<b>GD05152</b>		<b>AC</b>				<b>0426/266/R075</b>	<b>275-299</b>
A..	E	W0804	005	20		33-24-14	275-299
A..	E	W0804	010	20		33-24-14	275-299
A..	E	W0804	117	20		33-24-14	275-299

## GROUND LIST

D280T132

**91-21-21**

Section GD05100

Page 1

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD05154</b>		<b>DC</b>				<b>0426/265/R075</b>	<b>275-299</b>
D..	E	W0722	005	20		35-21-13	275-299
D..	E	W0722	008	20		35-21-13	275-299
D..	E	W0722	068	20		35-21-13	275-299
<b>GD05156</b>							<b>275-299</b>
A..	E	W0800	005	20		33-24-12	275-299
A..	E	W0800	010	20		33-24-12	275-299
A..	E	W0800	118	20		33-24-12	275-299
<b>GD05158</b>		<b>DC</b>				<b>0426/266/L075</b>	<b>275-299</b>
D..	E	W0718	005	20		35-21-12	275-299
D..	E	W0718	008	20		35-21-12	275-299
D..	E	W0718	069	20		35-21-12	275-299
<b>GD05166</b>		<b>DC</b>				<b>NR210/ /</b>	<b>ALL</b>
D..	N	W0356	108	18		75-23-11	ALL
D..	N	W0356	159	18		30-21-11	ALL
<b>GD05170</b>		<b>DC</b>				<b>N201/143/R006</b>	<b>ALL</b>
D..	N	W0356	090	18		30-21-11	ALL
D..	N	W0356	093	18		30-21-11	ALL
D..	N	W0356	101	18		30-21-11	ALL
<b>GD05172</b>		<b>DC</b>				<b>N 141/153/</b>	<b>ALL</b>
D..	N	W0352	014	18		78-34-11	050-099, 150-199, 275-278
D..	N	W0356	098	18		75-23-11	ALL
<b>GD05182</b>		<b>AC</b>				<b>ENG/ /</b>	<b>ALL</b>
A..	H7	W0204	004	04		24-21-11	ALL
<b>GD05184</b>		<b>DC</b>				<b>N213/156/R007</b>	<b>ALL</b>
D..	E1	W0356	454R	18		26-18-12	ALL
D..	E1	W0356	455R	18		26-18-12	ALL
<b>GD05192</b>		<b>SH</b>				<b>N 111/155/</b>	<b>ALL</b>
S..	N	W0356	107	18		75-23-11	ALL
S..	N	W0380	027	16		73-21-13	ALL

## GROUND LIST

D280T132

**91-21-21**  
Section GD05100  
Page 2  
Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD05194</b>		<b>SH</b>				<b>N 111/155/</b>	<b>ALL</b>
S..	N	W0380	028	16		73-21-13	ALL
<b>GD05196</b>		<b>SH</b>				<b>N 182/138/</b>	<b>ALL</b>
S..	N	W0352	031	16		73-21-13	050-099, 150-199, 275-278
<b>GD05198</b>		<b>SH</b>				<b>N 182/138/</b>	<b>ALL</b>
S..	N	W0352	032	16		73-21-13	050-099, 150-199, 275-278

## GROUND LIST

D280T132

**91-21-21**

Section GD05100

Page 3 End

Jan 21/2005



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD05200</b>		<b>SH</b>				<b>N201/160/R008</b>	<b>ALL</b>
S..	N	W0356	075	18		36-11-51	ALL
S..	N	W0356	084	18		36-23-11	ALL
S..	N	W0356	094	18		30-21-11	ALL
<b>GD05206</b>		<b>SH</b>				<b>N185/136/L007</b>	<b>ALL</b>
S..	N	W0356	102	16		73-21-13	ALL
<b>GD05208</b>		<b>SH</b>				<b>N182/144/L007</b>	<b>ALL</b>
S..	N	W0356	103	16		73-21-13	ALL
<b>GD05212</b>		<b>SH</b>				<b>N 141/153/</b>	<b>ALL</b>
S..	N	W0352	013	18		78-34-11	050-099, 150-199, 275-278
S..	N	W0352	115	18		78-34-11	050-099, 150-199, 275-278
<b>GD05232</b>		<b>DC</b>				<b>NR120/*/*</b>	<b>ALL</b>
D..	N	W0376	108	18		75-23-11	ALL
D..	N	W0376	159	18		30-21-11	ALL
<b>GD05236</b>		<b>DC</b>				<b>*/ /</b>	<b>ALL</b>
D..	N	W0376	090	18		30-21-11	ALL
D..	N	W0376	093	18		30-21-11	ALL
D..	N	W0376	101	18		30-21-11	ALL
<b>GD05238</b>		<b>DC</b>				<b>N 141/153/</b>	<b>ALL</b>
D..	N	W0374	014	18		78-34-21	050-099, 150-166, 275-299
D..	N	W0376	098	18		75-23-11	ALL
<b>GD05248</b>		<b>AC</b>				<b>ENG/ /</b>	<b>ALL</b>
A..	H7	W0208	004	04		24-21-21	ALL
<b>GD05250</b>		<b>DC</b>				<b>*/ /</b>	<b>ALL</b>
D..	E1	W0376	454R	18		26-18-22	ALL
D..	E1	W0376	455R	18		26-18-22	ALL
<b>GD05258</b>		<b>SH</b>				<b>N 111/155/</b>	<b>ALL</b>
S..	N	W0376	107	18		75-23-11	ALL
S..	N	W0384	027	16		73-21-13	ALL

## GROUND LIST

D280T132

**91-21-21**  
Section GD05200  
Page 1  
Jan 21/2005



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD05260</b>		<b>SH</b>				<b>N 111/155/</b>	<b>ALL</b>
S..	N	W0384	028	16		73-21-13	ALL
<b>GD05262</b>		<b>SH</b>				<b>N 182/138/</b>	<b>ALL</b>
S..	N	W0374	031	16		73-21-13	050-099, 150-166, 275-299
<b>GD05264</b>		<b>SH</b>				<b>N 182/138/</b>	<b>ALL</b>
S..	N	W0374	032	16		73-21-13	050-099, 150-166, 275-299
<b>GD05266</b>		<b>SH</b>				<b>* / /</b>	<b>ALL</b>
S..	N	W0376	075	18		36-11-52	ALL
S..	N	W0376	084	18		36-23-21	ALL
S..	N	W0376	094	18		30-21-11	ALL
<b>GD05272</b>		<b>SH</b>				<b>NR185/136/R007</b>	<b>ALL</b>
S..	N	W0376	102	16		73-21-13	ALL
<b>GD05274</b>		<b>SH</b>				<b>* / /</b>	<b>ALL</b>
S..	N	W0376	103	16		73-21-13	ALL
<b>GD05278</b>		<b>SH</b>				<b>N 141/153/</b>	<b>ALL</b>
S..	N	W0374	013	18		78-34-21	050-099, 150-166, 275-299
S..	N	W0374	115	18		78-34-21	050-099, 150-166, 275-299

## GROUND LIST

D280T132

**91-21-21**

Section GD05200

Page 2 End

Jan 21/2005



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD05304</b>		<b>AC</b>				<b>0852/292/R070</b>	<b>150-199</b>
A..	E	W0814	029	20		33-21-33	150-199
DED		W0814	029Z			33-21-33	155-156, 166
A..	E	W1236	148	20		33-21-21	150-199
<b>GD05306</b>		<b>SH</b>				<b>0852/292/R070</b>	<b>150-199</b>
S..	E	W0812	693	20		33-21-13	150-199
S..	E	W0812	707	20		33-21-13	150-199
S..	E	W0814	030	20		33-21-33	150-199
<b>GD05314</b>		<b>DC</b>				<b>0802/265/L074</b>	<b>150-199</b>
D..	E	W0724	082	20		35-21-12	150-199
D..	E	W0724	084	20		35-21-12	150-199
D..	E	W0724	089	20		35-21-12	150-199
<b>GD05322</b>		<b>DC</b>				<b>0801/265/R074</b>	<b>150-199</b>
D..	E	W0728	082	20		35-21-13	150-199
D..	E	W0728	084	20		35-21-13	150-199
D..	E	W0728	089	20		35-21-13	150-199
<b>GD05396</b>		<b>SH</b>				<b>P061-00/ /</b>	<b>ALL</b>
S..	E	W0768	013Z			73-21-20	ALL
S..	E	W0768	019Z			73-21-20	ALL
<b>GD05398</b>		<b>SH</b>				<b>P061-00/ /</b>	<b>ALL</b>
S..	E	W0756	006	20		73-21-20	150-199
S..	E	W0756	010	20		73-21-20	150-199
S..	E	W0756	012Z			73-21-20	050-099, 275-299
S..	E	W0756	093Z			73-21-20	050-099, 275-299

## GROUND LIST

D280T132

**91-21-21**  
Section GD05300  
Page 1 End  
Mar 09/2006





# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD05408</b>		<b>SH</b>				<b>0139/194/L010</b>	<b>ALL</b>
S..	E	W0758	142	20		73-21-13	050-099, 150-156, 162-166, 275-276
S..	E	W0758	143	20		73-21-13	050-099, 150-156, 162-166, 275-276
S..	E	W0758	FR2			73-21-13	157, 167-199, 277-299
S..	E	W0758	FR3			73-21-13	157, 167-199, 277-299
<b>GD05412</b>		<b>YHLZG16</b>				<b>0525/160/L087</b>	<b>ALL</b>
D..	2	W0986	034	20		21-58-12	ALL
D..	2	W0986	039	20		21-58-12	ALL
A..	2	W0986	040	20		21-58-12	ALL
DED		W0986	040Z			21-58-12	ALL
S..	2	W0986	041	20		21-58-12	ALL
<b>GD05420</b>		<b>AC</b>				<b>0654+121/145/L075</b>	<b>150-199, 275-299</b>
A..	E	W1258	053	20		30-71-11	150-199, 275-299
A..	E	W1258	643	20		30-71-21	150-199
A..	E	W1258	E-B			30-71-21	150-199, 275-299
A..	E	W1258	H-D			30-71-21	150-199, 275-299
<b>GD05422</b>		<b>DC</b>				<b>N212/147/L005</b>	<b>ALL</b>
D..	N	W0356	047	18		36-22-11	ALL
D..	N	W0356	057	18		36-11-51	ALL
D..	N	W0356	118	18		36-22-21	ALL
<b>GD05424</b>		<b>DC</b>				<b>N212/147/L005</b>	<b>ALL</b>
D..	N	W0376	047	18		36-22-11	ALL
D..	N	W0376	057	18		36-11-52	ALL
D..	N	W0376	118	18		36-22-21	ALL
<b>GD05440</b>		<b>SH</b>				<b>N 141/153/</b>	<b>ALL</b>
S..	N	W0356	096Z			75-23-11	ALL
S..	N	W0356	111Z			75-23-11	ALL
<b>GD05442</b>		<b>SH</b>				<b>N 141/153/</b>	<b>ALL</b>
S..	N	W0376	096Z			75-23-11	ALL
S..	N	W0376	111Z			75-23-11	ALL
<b>GD05446</b>		<b>AC</b>				<b>0867/265/R074</b>	<b>275-299</b>
A..	E	W0810	085	20		33-24-14	275-299

## GROUND LIST

D280T132

**91-21-21**

Section GD05400

Page 1

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD05448</b>		<b>DC</b>				<b>0867/265/R074</b>	<b>275-299</b>
D..	E	W0728	092	20		35-21-13	275-299
<b>GD05452</b>		<b>SH</b>				<b>0320/250/L095</b>	<b>ALL</b>
S..	E	W0842	003	20		30-46-11	ALL
<b>GD05454</b>		<b>SH</b>				<b>0320/250/R095</b>	<b>ALL</b>
S..	E	W0844	003	20		30-46-11	ALL
<b>GD05460</b>		<b>SH</b>				<b>1510/250/L095</b>	<b>ALL</b>
S..	E	W0850	003	20		30-46-11	ALL
<b>GD05462</b>		<b>SH</b>				<b>1510/250/R095</b>	<b>ALL</b>
S..	E	W0852	003	20		30-46-11	ALL
<b>GD05480</b>		<b>DC412T1002</b>				<b>0867/270/L068</b>	<b>275-299</b>
D..	E	W0724	092	20		35-21-12	275-299
<b>GD05482</b>		<b>AC412T1002</b>				<b>0867/267/L074</b>	<b>275-299</b>
A..	E	W0806	085	20		33-24-12	275-299

## GROUND LIST

D280T132

**91-21-21**

Section GD05400

Page 2 End

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD05504</b>		<b>DC</b>				<b>0516/210/R090</b>	<b>150-199, 275-276</b>
<b>GD05506</b>		<b>SH</b>				<b>0516/210/R090</b>	<b>150-199, 275-276</b>
<b>GD05508</b>		<b>DC</b>				<b>0654+50/204/L096</b>	<b>150-199</b>
D..	E	W0784	605	20		33-51-17	150-199
<b>GD05510</b>		<b>SH</b>				<b>0654+50/204/L096</b>	<b>150-199, 275-276, 280-299</b>
<b>GD05538</b>		<b>YHLZG16</b>				<b>1450/140/R070</b>	<b>050-099, 150-199</b>
A..	2	W1356	015	16		30-71-24	050-099, 150-199
A..	2	W1356	G-A			30-71-24	050-099, 150-199
S..	2	W1356	N-D			30-71-24	050-099, 150-199
<b>GD05544</b>		<b>AC</b>				<b>0654+66/148/L075</b>	<b>150-199</b>
A..	E	W1258	644	20		30-71-21	150-199
A..		W1258	B-N			30-71-21	150-154
A..	E	W1258	B-N			30-71-21	155-199
<b>GD05546</b>		<b>AC</b>				<b>0654+44/148/L075</b>	<b>150-199</b>
A..	E	W1258	176	20		30-71-21	150-199
A..	E	W1258	177	20		30-71-21	150-199
<b>GD05562</b>		<b>DC</b>				<b>1208/201/R092</b>	<b>150-199</b>
D..	E	W0836	604	20		33-51-16	150-199
<b>GD05564</b>		<b>DC</b>				<b>0643/207/R097</b>	<b>150-199</b>
D..	E	W1222	605	20		33-51-16	150-199
<b>GD05566</b>		<b>DC</b>				<b>1197+33/201/L092</b>	<b>150-199</b>
D..	E	W0788	605	20		33-51-17	150-199
<b>GD05568</b>		<b>DC</b>				<b>1540/164/L068</b>	<b>050-099, 150-199, 277-299</b>
D..	E	W1358	041	20		38-32-14	050-099, 150-199, 277-299
<b>GD05570</b>		<b>AC</b>				<b>1439/295/L060</b>	<b>275-276</b>
<b>GD05572</b>		<b>DC</b>				<b>0731/201/L092</b>	<b>050-099</b>
D..	E	W0784	605	20		33-51-17	050-099

## GROUND LIST

D280T132

**91-21-21**

Section GD05500

Page 1 End

Mar 09/2006



## 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD05622</b>		<b>AC</b>				<b>0350/270/L050</b>	<b>050-099, 150-199</b>
A..	G	W0410	007	08		25-31-12	050-099, 150-199
<b>GD05624</b>		<b>SH</b>				<b>0653/160/R082</b>	<b>ALL</b>
S..	H	W1220	001	16		25-29-12	ALL
<b>GD05626</b>		<b>DC</b>				<b>0654/164/R082</b>	<b>050-099, 150-199, 280-299</b>
D..	H	W1220	003	08		25-29-12	ALL
<b>GD05632</b>		<b>AC</b>				<b>0654+83/265/R074</b>	<b>150-199</b>
A..	E	W0804	551	20		33-24-14	150-199
<b>GD05634</b>		<b>AC</b>				<b>0725/265/R074</b>	<b>150-199</b>
A..	E	W0804	055	20		33-24-14	150-199
A..	E	W0804	060	20		33-24-14	150-199
<b>GD05636</b>		<b>AC</b>				<b>0802/265/R074</b>	<b>150-199</b>
A..	E	W0810	070	20		33-24-14	150-199
A..	E	W0810	075	20		33-24-14	150-199
A..	E	W0810	120	20		33-24-14	150-199
<b>GD05638</b>		<b>AC</b>				<b>1008/265/R074</b>	<b>150-199</b>
A..	E	W0810	105	20		33-24-14	150-199
<b>GD05640</b>		<b>AC</b>				<b>1046/265/R074</b>	<b>150-199</b>
A..	E	W0810	110	20		33-24-14	150-199
A..	E	W0810	163	20		33-24-14	150-199
<b>GD05642</b>		<b>AC</b>				<b>0436/270/R075</b>	<b>150-157</b>
A..	E	W0804	005	20		33-24-14	150-157
A..	E	W0804	010	20		33-24-14	150-157
<b>GD05644</b>		<b>DC</b>				<b>1046/265/L074</b>	<b>150-199</b>
D..	E	W0724	106	20		35-21-12	150-199
D..	E	W0724	108	20		35-21-12	150-199
<b>GD05646</b>		<b>DC</b>				<b>1045/265/R074</b>	<b>150-199</b>
D..	E	W0728	106	20		35-21-13	150-199
D..	E	W0728	108	20		35-21-13	150-199

### GROUND LIST

D280T132

**91-21-21**  
Section GD05600  
Page 1  
Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD05648</b>		<b>AC</b>				<b>0436/265/L075</b>	<b>150-199</b>
A..	E	W0800	005	20		33-24-12	150-199
A..	E	W0800	010	20		33-24-12	150-199
<b>GD05650</b>		<b>AC</b>				<b>0654+83/265/L074</b>	<b>150-199</b>
A..	E	W0800	551	20		33-24-12	150-199
<b>GD05652</b>		<b>AC</b>				<b>0725/265/L074</b>	<b>150-199</b>
A..	E	W0800	055	20		33-24-12	150-199
A..	E	W0800	060	20		33-24-12	150-199
<b>GD05654</b>		<b>AC</b>				<b>0802/265/L074</b>	<b>150-199</b>
A..	E	W0806	070	20		33-24-12	150-199
A..	E	W0806	075	20		33-24-12	150-199
A..	E	W0806	123	20		33-24-12	150-199
<b>GD05656</b>		<b>AC</b>				<b>1008/265/L074</b>	<b>150-199</b>
A..	E	W0806	105	20		33-24-12	150-199
<b>GD05658</b>		<b>AC</b>				<b>1044/265/L074</b>	<b>150-199</b>
A..	E	W0806	110	20		33-24-12	150-199
A..	E	W0806	163	20		33-24-12	150-199
<b>GD05660</b>		<b>DC</b>				<b>0555/208/R097</b>	<b>050-099, 150-199</b>
D..	E	W0786	030	20		33-51-21	050-099, 150-199
<b>GD05662</b>		<b>SH</b>				<b>0555/208/R097</b>	<b>050-099, 150-199</b>
S..	E	W0786	029	20		33-51-21	050-099, 150-199
<b>GD05664</b>		<b>SH</b>				<b>0533/210/R090</b>	<b>050-099, 150-199</b>
S..	E	W1222	014	20		33-51-11	050-099, 150-199
<b>GD05666</b>		<b>DC</b>				<b>0533/210/R090</b>	<b>050-099, 150-199</b>
D..	E	W1222	020	20		33-51-11	050-099, 150-199
D..	E	W1222	614	20		33-51-16	050-099, 150-199
<b>GD05668</b>		<b>DC</b>				<b>0511/205/L093</b>	<b>050-099, 150-199</b>
D..	E	W0784	016	20		33-51-11	050-099
D..	E	W0784	614	20		33-51-14	050-099
D..	E	W0788	074	20		33-51-21	150-199

## GROUND LIST

D280T132

**91-21-21**

Section GD05600

Page 2

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD05670</b>		<b>SH</b>				<b>0511/205/L093</b>	<b>050-099, 150-199</b>
S..	E	W0784	014	20		33-51-11	050-099
S..	E	W0788	073	20		33-51-21	150-199
<b>GD05672</b>		<b>DC</b>				<b>0489/204/L096</b>	<b>150-199</b>
D..	E	W0784	016	20		33-51-11	150-199
D..	E	W0784	614	20		33-51-14	150-199
<b>GD05674</b>		<b>SH</b>				<b>0489/204/L096</b>	<b>150-199</b>
S..	E	W0784	014	20		33-51-11	150-199
<b>GD05676</b>		<b>DC</b>				<b>1032/220/L095</b>	<b>150-199</b>
D..	E	W0790	029	20		33-51-11	150-199
D..	E	W0790	605	20		33-51-14	150-199
<b>GD05678</b>		<b>SH</b>				<b>1032/217/L090</b>	<b>150-199</b>
S..	E	W0790	028	20		33-51-11	150-199
<b>GD05680</b>		<b>AC</b>				<b>0352/300/R056</b>	<b>050-099, 150-199</b>
A..	G	W0220	004	06		25-31-11	050-099, 150-199
<b>GD05682</b>		<b>YHLZG16</b>				<b>0654+37/123/L053</b>	<b>150-199, 275-299</b>
D..	2	W0942	593	20		21-28-11	277-299
S..	2	W0942	594	20		21-28-11	277-299
D..	2	W0942	597	20		21-28-11	277-299
S..	2	W1258	191	20		21-28-11	150-199, 275-276
D..	2	W1258	193	20		21-28-11	150-199, 275-276
D..	2	W1258	196	20		21-28-11	150-199, 275-299
S..	2	W1258	197	20		21-28-11	150-199, 275-299
D..	2	W1258	198	20		21-28-11	150-199, 275-299
D..	2	W1258	608	20		21-26-31	150-199, 275-276
D..	2	W1258	608	20		21-28-11	277-299
S..	2	W1258	616	20		21-26-31	150-199, 275-299
D..	2	W1258	617	20		21-28-11	150-199, 275-276
<b>GD05684</b>		<b>DC</b>				<b>0390/112/0000</b>	<b>ALL</b>
D..	E	W0986	069	20		21-28-11	ALL
DED		W0986	069Z			21-28-11	050-099
D..	E	W0986	072	20		21-28-11	ALL
D..	E	W0986	073	20		21-28-11	ALL

## GROUND LIST

D280T132

**91-21-21**  
Section GD05600  
Page 3  
Mar 09/2006



Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD05686</b>		<b>SH</b>				<b>1010/208/L090</b>	<b>150-199</b>
S..	E	W0786	052	20		25-65-11	150-199
<b>GD05688</b>		<b>DC</b>				<b>1010/208/L090</b>	<b>150-199</b>
D..	E	W0786	053	18		25-65-11	150-199
D..	E	W0786	060	20		25-65-11	150-199
D..	E	W0786	061	20		25-65-11	150-199

**GROUND LIST**

D280T132

**91-21-21**

Section GD05600

Page 4 End

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD05700</b>		<b>SH</b>				<b>1032/208/R090</b>	<b>150-199</b>
S..	E	W0786	045	20		25-65-12	150-199
<b>GD05702</b>		<b>DC</b>				<b>1032/208/R090</b>	<b>150-199</b>
D..	E	W0786	046	18		25-65-12	150-199
D..	E	W0786	058	20		25-65-12	150-199
D..	E	W0786	059	20		25-65-12	150-199
<b>GD05704</b>		<b>DC</b>				<b>0436/265/L075</b>	<b>150-199</b>
D..	E	W0718	005	20		35-21-12	150-199
D..	E	W0718	008	20		35-21-12	150-199
<b>GD05706</b>		<b>DC</b>				<b>0654+83/265/L074</b>	<b>150-199</b>
D..	E	W0718	083	20		35-21-12	150-199
<b>GD05708</b>		<b>DC</b>				<b>0725/265/L074</b>	<b>150-199</b>
D..	E	W0718	034	20		35-21-12	150-199
D..	E	W0718	037	20		35-21-12	150-199
<b>GD05710</b>		<b>DC</b>				<b>0437/265/R075</b>	<b>150-157</b>
D..	E	W0722	005	20		35-21-13	150-157
D..	E	W0722	008	20		35-21-13	150-157
<b>GD05712</b>		<b>DC</b>				<b>0654+82/265/R074</b>	<b>150-199</b>
D..	E	W0722	083	20		35-21-13	150-199
<b>GD05714</b>		<b>DC</b>				<b>0725/265/R074</b>	<b>150-199</b>
D..	E	W0722	035	20		35-21-13	150-199
D..	E	W0722	038	20		35-21-13	150-199
<b>GD05720</b>		<b>AC</b>				<b>0755/161/R076</b>	<b>ALL</b>
A..	E	W0580	030	20		21-43-11	ALL
DED		W0580	030Z			21-43-11	050-099
<b>GD05758</b>		<b>AC</b>				<b>1562/280/R070</b>	<b>050-099, 150-199</b>
A..	E	W0304	017	18		30-71-25	050-099, 150-199
<b>GD05760</b>		<b>AC</b>				<b>1197/293/R063</b>	<b>280-299</b>

## GROUND LIST

D280T132

**91-21-21**  
Section GD05700  
Page 1  
Mar 09/2006





# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD05794</b>		<b>SH</b>				<b>0877/254/L087</b>	<b>ALL</b>
S..	E	W1398	003	18		21-45-22	ALL
<b>GD05796</b>		<b>SH</b>				<b>0921/254/L087</b>	<b>150-199, 275-299</b>
S..	E	W1498	003	18		21-45-22	150-199, 275-299
<b>GD05798</b>		<b>SH</b>				<b>0877/254/R087</b>	<b>ALL</b>
S..	E	W1400	003	18		21-45-22	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD05700

Page 2 End

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD05800</b>		<b>SH</b>				<b>0921/254/R087</b>	<b>150-199, 275-299</b>
S..	E	W1500	003	18		21-45-22	150-199, 275-299
<b>GD05810</b>		<b>DC</b>				<b>0654+86/148/R070</b>	<b>155-199, 275-299</b>
D..	E	W0646	004R	20		26-23-11	155-199, 275-299
D..	E	W0646	005R	20		26-23-11	155-199, 275-299
D..	E	W0646	006R	20		26-23-11	155-199, 275-299
<b>GD05812</b>		<b>SH</b>				<b>0654+86/148/R071</b>	<b>155-199, 275-299</b>
S..	E	W0646	007R	20		26-23-11	155-199, 275-299
S..	E	W0646	008R	20		26-23-11	155-199, 275-299
S..	E	W0646	009R	20		26-23-11	155-199, 275-299
<b>GD05814</b>		<b>SH</b>				<b>L0901/12/RS</b>	<b>050-099, 155-199, 276-299</b>
S..	N	W0450	029	18		28-31-12	050-099, 155-199, 276-299
S..	N	W0450	300Z			28-31-12	050-099, 155-199, 276-299
<b>GD05818</b>		<b>DC</b>				<b>L0901/12/RS</b>	<b>050-099, 155-199, 276-299</b>
D..	N	W0450	028	18		28-31-12	050-099, 155-199, 276-299
<b>GD05820</b>		<b>SH</b>				<b>R0901/12/RS</b>	<b>050-099, 155-199, 276-299</b>
S..	N	W0452	030	18		28-31-12	050-099, 155-199, 276-299
S..	N	W0452	300Z			28-31-12	050-099, 155-199, 276-299
<b>GD05824</b>		<b>DC</b>				<b>R0901/12/RS</b>	<b>050-099, 155-199, 276-299</b>
D..	N	W0452	029	18		28-31-12	050-099, 155-199, 276-299
<b>GD05826</b>		<b>DC</b>				<b>0654+67/147/R070</b>	<b>155-199, 275-299</b>
D..	E	W0648	004R	20		26-23-12	155-199, 275-299
D..	E	W0648	005R	20		26-23-12	155-199, 275-299
D..	E	W0648	006R	20		26-23-12	155-199, 275-299
<b>GD05828</b>		<b>SH</b>				<b>0654+67/147/R071</b>	<b>155-199, 275-299</b>
S..	E	W0648	007R	20		26-23-12	155-199, 275-299
S..	E	W0648	008R	20		26-23-12	155-199, 275-299
S..	E	W0648	009R	20		26-23-12	155-199, 275-299
<b>GD05830</b>		<b>DC</b>				<b>0666/148/R070</b>	<b>050-099</b>
D..	E	W0640	004R	20		26-23-11	050-099
D..	E	W0640	005R	20		26-23-11	050-099

## GROUND LIST

D280T132

**91-21-21**  
Section GD05800  
Page 1  
Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD05830</b>		<b>DC (continued)</b>				<b>0666/148/R070</b>	<b>050-099</b>
D..	E	W0640	006R	20		26-23-11	050-099
<b>GD05832</b>		<b>SH</b>				<b>0665/147/R070</b>	<b>050-099</b>
S..	E	W0640	007R	20		26-23-11	050-099
S..	E	W0640	008R	20		26-23-11	050-099
S..	E	W0640	009R	20		26-23-11	050-099
<b>GD05834</b>		<b>DC</b>				<b>0658/169/R081</b>	<b>050-099</b>
D..	E	W0642	004R	20		26-23-12	050-099
D..	E	W0642	005R	20		26-23-12	050-099
D..	E	W0642	006R	20		26-23-12	050-099
<b>GD05836</b>		<b>SH</b>				<b>0658/169/R081</b>	<b>050-099</b>
S..	E	W0642	007R	20		26-23-12	050-099
S..	E	W0642	008R	20		26-23-12	050-099
S..	E	W0642	009R	20		26-23-12	050-099
<b>GD05838</b>		<b>DC</b>				<b>0696/148/R070</b>	<b>050-099</b>
D..	E	W0644	004R	20		26-23-12	050-099
D..	E	W0644	005R	20		26-23-12	050-099
D..	E	W0644	006R	20		26-23-12	050-099
<b>GD05840</b>		<b>SH</b>				<b>0696/148/R070</b>	<b>050-099</b>
S..	E	W0644	007R	20		26-23-12	050-099
S..	E	W0644	008R	20		26-23-12	050-099
S..	E	W0644	009R	20		26-23-12	050-099
<b>GD05842</b>		<b>DC</b>				<b>0705/158/R067</b>	<b>050-099</b>
D..	E	W0546	004R	20		26-21-11	050-099
D..	E	W0546	005R	20		26-21-11	050-099
D..	E	W0546	006R	20		26-21-11	050-099
<b>GD05844</b>		<b>SH</b>				<b>0706/158/R067</b>	<b>050-099</b>
S..	E	W0546	007R	20		26-21-11	050-099
S..	E	W0546	008R	20		26-21-11	050-099
S..	E	W0546	009R	20		26-21-11	050-099
<b>GD05846</b>		<b>DC</b>				<b>0709/158/R067</b>	<b>050-099</b>
D..	E	W0548	004R	20		26-21-11	050-099

## GROUND LIST

D280T132

**91-21-21**

Section GD05800

Page 2

Mar 09/2006



## 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD05846</b>		<b>DC (continued)</b>				<b>0709/158/R067</b>	<b>050-099</b>
D..	E	W0548	005R	20		26-21-11	050-099
D..	E	W0548	006R	20		26-21-11	050-099
<b>GD05848</b>		<b>SH</b>				<b>0710/158/R067</b>	<b>050-099</b>
S..	E	W0548	007R	20		26-21-11	050-099
S..	E	W0548	008R	20		26-21-11	050-099
S..	E	W0548	009R	20		26-21-11	050-099
<b>GD05850</b>		<b>DC</b>				<b>1562/197/L006</b>	<b>156-157, 166-199, 275-299</b>
D..	E	W0966	073	20		38-32-11	156-157, 166-199, 275-299
D..	E	W0966	083	20		38-32-11	156-157, 166-199, 275-299
<b>GD05852</b>		<b>SH</b>				<b>1567/197/L006</b>	<b>156-157, 166-199, 275-299</b>
S..	E	W0966	074	20		38-32-11	156-157, 166-199, 275-299
S..	E	W0966	084	20		38-32-11	156-157, 166-199, 275-299
<b>GD05854</b>		<b>DC</b>				<b>0654+26/148/R070</b>	<b>155-199, 275-299</b>
D..	E	W0650	004R	20		26-23-12	155-199, 275-299
D..	E	W0650	005R	20		26-23-12	155-199, 275-299
D..	E	W0650	006R	20		26-23-12	155-199, 275-299
<b>GD05856</b>		<b>SH</b>				<b>0654+26/148/R071</b>	<b>155-199, 275-299</b>
S..	E	W0650	007R	20		26-23-12	155-199, 275-299
S..	E	W0650	008R	20		26-23-12	155-199, 275-299
S..	E	W0650	009R	20		26-23-12	155-199, 275-299
<b>GD05862</b>		<b>DC</b>				<b>0661/159/R067</b>	<b>155-199, 275-299</b>
D..	E	W0546	004R	20		26-21-11	155-199, 275-299
D..	E	W0546	005R	20		26-21-11	155-199, 275-299
D..	E	W0546	006R	20		26-21-11	155-199, 275-299
<b>GD05864</b>		<b>SH</b>				<b>0662/158/R067</b>	<b>155-199, 275-299</b>
S..	E	W0546	007R	20		26-21-11	155-199, 275-299
S..	E	W0546	008R	20		26-21-11	155-199, 275-299
S..	E	W0546	009R	20		26-21-11	155-199, 275-299
<b>GD05866</b>		<b>DC</b>				<b>0665/158/R067</b>	<b>155-199, 275-299</b>
D..	E	W0548	004R	20		26-21-11	155-199, 275-299
D..	E	W0548	005R	20		26-21-11	155-199, 275-299

### GROUND LIST

D280T132

**91-21-21**  
Section GD05800  
Page 3  
Mar 09/2006



Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD05866</b>		<b>DC (continued)</b>				<b>0665/158/R067</b>	<b>155-199, 275-299</b>
D..	E	W0548	006R	20		26-21-11	155-199, 275-299
<b>GD05868</b>		<b>SH</b>				<b>0666/158/R067</b>	<b>155-199, 275-299</b>
S..	E	W0548	007R	20		26-21-11	155-199, 275-299
S..	E	W0548	008R	20		26-21-11	155-199, 275-299
S..	E	W0548	009R	20		26-21-11	155-199, 275-299
<b>GD05870</b>		<b>SH</b>				<b>0577/205/L093</b>	<b>050-099</b>
S..	E	W0788	073	20		33-51-21	050-099
<b>GD05872</b>		<b>DC</b>				<b>0577/205/L093</b>	<b>050-099</b>
D..	E	W0788	074	20		33-51-21	050-099



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD05922		SH				0999/193/R064	150-199, 275-299
GD05924		SH				0999/193/R064	150-199, 275-299
GD05926		SH				0999/193/L064	150-199, 275-299
GD05928		SH				0999/193/L064	150-199, 275-299
GD05962		SH				1373/175/R085	156-157, 166-199, 277-299
S..	E	W1038	006	20		24-31-41	156-157, 166-199, 277-299
GD05974		SH				R0247/12/RS	150-199, 275-299
GD05976		SH				R0254/12/RS	150-199, 275-299
GD05978		SH				R0292/12/RS	150-199, 275-299
GD05980		SH				L0292/12/RS	150-199, 275-299
GD05986		SH				1098/195/L066	150-199, 275-299
GD05994		DC				NR126/50/	ALL
D..	GW	W3526	102	18		78-34-11	ALL
DED		W3526	102Z			78-34-11	ALL
GD05996		DC				NL126/047/11	ALL
D..	GW	W3528	102	18		78-34-11	ALL
DED		W3528	102Z			78-34-11	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD05900

Page 1 End

Mar 09/2006



Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD06026		AC				1351/175/L090	150-199, 275-299
GD06028		SH				1351/175/L090	150-199, 275-299
GD06066		CUSTOMER				1373/175/R085	050-099

---

**GROUND LIST**

D280T132

**91-21-21**

Section GD06000

Page 1 End

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD06583</b>		<b>DC</b>				<b>NR160/108/</b>	<b>ALL</b>
D..	GW	W3538	008	20		24-11-11	ALL
DED		W3538	008Z			24-11-11	ALL
D..	GW	W3538	009	20		24-11-11	ALL
DED		W3538	009Z			24-11-11	ALL
D..	GW	W3538	011	20		24-11-11	ALL
DED		W3538	011Z			24-11-11	ALL
<b>GD06585</b>		<b>DC</b>				<b>NL156/110/</b>	<b>ALL</b>
D..	GW	W3538	002	18		24-11-11	ALL
D..	GW	W3538	005	18		24-11-11	ALL
<b>GD06587</b>		<b>DC</b>				<b>NR218/119/</b>	<b>ALL</b>
D..	GW	W3508	003	18		73-34-11	ALL
D..	GW	W3508	018	18		29-11-11	ALL
<b>GD06589</b>		<b>DC</b>				<b>* / /</b>	<b>ALL</b>
D..	GW	W3502	025	16		73-21-11	ALL
D..	GW	W3502	029	16		73-21-20	ALL
D..	GW	W3502	030	16		73-21-11	ALL
<b>GD06591</b>		<b>DC</b>				<b>NL215/134/</b>	<b>ALL</b>
D..	GW	W3510	024	18		79-35-11	ALL
D..	GW	W3510	028	18		79-33-11	ALL
<b>GD06593</b>		<b>DC</b>				<b>* / /</b>	<b>ALL</b>
D..	GW	W3504	005	16		73-21-11	050-099, 155-199, 277-299
D..	GW	W3504	024	16		73-21-11	ALL
D..	GW	W3504	029	16		73-21-20	ALL
D..	GW	W3504	030	16		73-21-11	150-154, 275-276
<b>GD06595</b>		<b>DC</b>				<b>* / /</b>	<b>ALL</b>
D..	GW	W3506	455R	16		76-11-11	ALL
D..	GW	W3506	456R	16		76-11-11	ALL
D..	GW	W3506	457R	16		76-11-11	ALL
D..	GW	W3506	458R	16		76-11-11	ALL
<b>GD06597</b>		<b>DC</b>				<b>* / /</b>	<b>ALL</b>
D..	GW	W3506	009	18		80-11-11	ALL
D..	GW	W3506	010	18		80-11-11	ALL

## GROUND LIST

D280T132

**91-21-21**  
Section GD06500  
Page 1  
Jan 21/2005





Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD06597</b>		<b>DC (continued)</b>				<b>* / /</b>	<b>ALL</b>
D..	GW	W3506	011	18		80-11-11	ALL

---

**GROUND LIST**

D280T132

**91-21-21**

Section GD06500

Page 2 End

Jan 21/2005



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD06613</b>		<b>AC</b>				<b>NR218/120/</b>	<b>ALL</b>
A..	GW	W3508	022	18		74-31-21	ALL
<b>GD06615</b>		<b>AC</b>				<b>NR218/130/</b>	<b>ALL</b>
A..	GW	W3510	023	18		74-31-11	ALL
<b>GD06617</b>		<b>SH</b>				<b>NL154/109/</b>	<b>ALL</b>
S..	GW	W3510	025	18		79-35-11	ALL
S..	GW	W3510	043	16		73-21-13	ALL
S..	GW	W3538	006	18		24-11-11	ALL
<b>GD06619</b>		<b>SH</b>				<b>NR160/110/</b>	<b>ALL</b>
S..	GW	W3538	014	20		24-11-11	ALL
DED		W3538	014Z			24-11-11	ALL
<b>GD06621</b>		<b>SH</b>				<b>NR218/118/</b>	<b>ALL</b>
S..	GW	W3508	004	18		73-34-11	ALL
S..	GW	W3508	006	18		36-11-61	ALL
S..	GW	W3508	019	18		29-11-11	ALL
<b>GD06627</b>		<b>SH</b>				<b>NR218/131/</b>	<b>ALL</b>
S..	GW	W3510	008	18		36-11-61	ALL
S..	GW	W3510	034	20		73-31-11	ALL
DED		W3510	034Z			73-31-11	ALL
<b>GD06629</b>		<b>SH</b>				<b>NL215/130/</b>	<b>ALL</b>
S..	GW	W3510	033	18		73-33-11	ALL
S..	GW	W3510	042	16		73-21-13	ALL
<b>GD06633</b>		<b>SH</b>				<b>NL218/122/</b>	<b>ALL</b>
S..	GW	W3508	030	18		79-32-11	ALL
S..	GW	W3510	029	18		79-33-11	ALL
S..	GW	W3510	041	18		79-31-11	ALL
<b>GD06635</b>		<b>SH</b>				<b>* / /</b>	<b>ALL</b>
S..	GW	W3504	033	16		73-21-13	050-099, 155-199, 277-299
S..	GW	W3504	033	16		73-31-11	150-154, 275-276
S..	GW	W3504	034	16		73-21-13	050-099, 155-199, 277-299
S..	GW	W3504	034	16		73-31-11	150-154, 275-276

## GROUND LIST

D280T132

**91-21-21**  
Section GD06600  
Page 1  
Jan 21/2005



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD06641</b>		<b>SH</b>				<b>NR126/ /</b>	<b>ALL</b>
S..	GW	W3532	010	18		78-36-11	ALL
S..	GW	W3532	011	18		78-36-11	ALL
<b>GD06645</b>		<b>SH</b>				<b>NR126/ /</b>	<b>ALL</b>
S..	GW	W3530	01TO			78-36-11	ALL
S..	GW	W3530	02TO			78-36-11	ALL
<b>GD06655</b>		<b>SH</b>				<b>TBD/ /</b>	<b>ALL</b>
S..	GW	W3530	005Z			75-23-11	ALL
S..	GW	W3530	007Z			75-23-11	ALL
S..	GW	W3530	008Z			75-23-11	ALL
S..	GW	W3530	012Z			75-23-11	ALL
<b>GD06657</b>		<b>SH</b>				<b>TBD/ /</b>	<b>ALL</b>
S..	GW	W3530	006Z			75-23-11	ALL
S..	GW	W3530	011Z			75-23-11	ALL
S..	GW	W3530	013Z			75-23-11	ALL
<b>GD06659</b>		<b>SH</b>				<b>NL218/120/</b>	<b>ALL</b>
S..	GW	W3506	012	18		80-11-11	ALL
S..	GW	W3506	463R	16		76-11-11	ALL
S..	GW	W3508	038	16		73-21-13	ALL
S..	GW	W3508	039	16		73-21-13	ALL
<b>GD06661</b>		<b>SH</b>				<b>NR126/ /</b>	<b>ALL</b>
S..	GW	W3526	01TO			78-34-11	ALL
<b>GD06663</b>		<b>SH</b>				<b>NR126/ /</b>	<b>ALL</b>
S..	GW	W3528	01TO			78-34-11	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD06600

Page 2 End

Jan 21/2005



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD06701</b>		<b>AC</b>				<b>* / /</b>	<b>ALL</b>
A..	GW	W3504	004	16		30-34-11	ALL
<b>GD06727</b>		<b>AC</b>				<b>0731/308/R036</b>	<b>150-199</b>
A..	E	W1417	009	20		23-32-11	150-199
<b>GD06729</b>		<b>DC</b>				<b>0731/308/R036</b>	<b>150-199</b>
D..	E	W1417	027	20		23-32-13	150-199
<b>GD06731</b>		<b>SH</b>				<b>0731/308/R036</b>	<b>150-199</b>
S..	E	W1417	028	20		23-32-13	150-199
<b>GD06733</b>		<b>BLOCK-16</b>				<b>0390/318/L008</b>	<b>050-099, 150-199</b>
S..	2	W0645	157	22		23-31-12	050-099, 150-199
A..	2	W0645	159	22		23-31-12	050-099, 150-199
D..	2	W0645	168	20		23-31-13	050, 162-166
D..	2	W0645	168	20		23-31-14	051-099, 150-157, 167-199
D..	2	W0665	176	20		23-42-12	150-199
S..	2	W1407	017	20		23-32-11	050-099, 150-199
D..	2	W1407	019	16		23-32-11	050-099, 150-199
A..	2	W1417	005	20		23-32-11	050-099, 150-199
D..	2	W1417	006	20		23-32-11	050-099, 150-199
S..	2	W1417	007	20		23-32-11	050-099, 150-199
A..	2	W1417	502	20		23-32-11	050-099, 150-199
D..	2	W1417	904	20		23-32-21	150, 152-199
D..	2	W1417	905	20		23-32-21	150, 152-199
S..	2	W1417	906	20		23-32-21	150, 152-199
A..	2	W1417	907	20		23-32-21	150, 152-199
D..	2	W1417	908	20		23-32-21	150, 152-199
D..	2	W1417	909	20		23-32-21	150, 152-199
D..	2	W1417	910	20		23-32-21	150, 152-199
D..	2	W1417	911	20		23-32-21	150, 152-199
D..	2	W1417	913	20		23-32-21	150, 152-199
D..	2	W1417	914	20		23-32-21	150, 152-199
S..	2	W1417	915	20		23-32-21	150, 152-199
<b>GD06735</b>		<b>YHLZG16</b>				<b>0390/318/L008</b>	<b>050-099, 150-199</b>
A..	2	W0812	812	20		33-21-11	050-099
A..	2	W0812	871	20		33-21-11	150-199
A..	2	W0812	874	20		33-21-11	050-099, 150-199
D..	2	W0812	877	20		33-21-11	050-099, 150-199

## GROUND LIST

D280T132

**91-21-21**

Section GD06700

Page 1

Mar 09/2006



Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD06735</b>		<b>YHLZG16 (continued)</b>				<b>0390/318/L008</b>	<b>050-099, 150-199</b>
A..	2	W1224	148	20		33-21-21	050-099, 150-199
A..	2	W1224	152	20		33-22-32	050-099, 150-199
S..	2	W1224	153	20		33-22-32	050-099, 150-199
D..	2	W1224	162	20		33-24-12	050-099
A..	2	W1224	162	20		33-24-12	150-199
A..	2	W1224	173	20		33-21-31	050-099, 150-199
A..	2	W1379	027	16		23-34-15	050-099, 162-199



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD06867</b>		<b>SH</b>				<b>0401/300/R025</b>	<b>275-299</b>
S..	E	W1417	127	20		23-32-31	275-299
S..	E	W1417	151	20		23-32-31	275-299
<b>GD06871</b>		<b>SH</b>				<b>0731/315/R025</b>	<b>275-299</b>
S..	E	W1417	133	20		23-32-41	275-299
S..	E	W1417	153	20		23-32-41	275-299
<b>GD06875</b>		<b>SH</b>				<b>1032/310/R025</b>	<b>275-299</b>
S..	E	W1417	139	20		23-32-51	275-299
S..	E	W1417	155	20		23-32-51	275-299
<b>GD06879</b>		<b>SH</b>				<b>1362/300/R025</b>	<b>275-299</b>
S..	E	W1417	145	20		23-32-61	275-299
S..	E	W1417	157	20		23-32-61	275-299
<b>GD06887</b>		<b>AC</b>				<b>1109/285/R068</b>	<b>150, 153-155, 162-165</b>
A..	2	W0811	006	20		23-25-17	156-157, 166-199
D..	2	W0811	007	20		23-25-17	156-157, 166-199
D..	2	W0811	202	20		23-25-17	156-157, 166-199
D..	2	W0811	203	20		23-25-17	156-157, 166-199
D..	2	W0811	204	20		23-25-17	156-157, 166-199
A..	2	W9021	006	20		23-25-17	150, 153-155, 162-165
D..	2	W9021	007	20		23-25-17	150, 153-155, 162-165
D..	2	W9035	202	20		23-25-17	150, 153-155, 162-165
D..	2	W9035	203	20		23-25-17	150, 153-155, 162-165
D..	2	W9035	204	20		23-25-17	150, 153-155, 162-165
<b>GD06889</b>		<b>SH</b>				<b>1109/285/R069</b>	<b>150, 153-155, 162-165</b>
A..	2	W0813	010	20		23-25-17	156-157, 166-199
S..	2	W0813	011	20		23-25-17	156-157, 166-199
S..	2	W0813	202	20		23-25-17	156-157, 166-199
S..	2	W0813	203	20		23-25-17	156-157, 166-199
S..	2	W0813	204	20		23-25-17	156-157, 166-199
A..	2	W9024	010	20		23-25-17	150, 153-155, 162-165
S..	2	W9024	011	20		23-25-17	150, 153-155, 162-165
S..	2	W9024	202	20		23-25-17	150, 153-155, 162-165
S..	2	W9024	203	20		23-25-17	150, 153-155, 162-165
S..	2	W9024	204	20		23-25-17	150, 153-155, 162-165

## GROUND LIST

D280T132

**91-21-21**

Section GD06800

Page 1

Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD06891</b>		<b>SH</b>				<b>1040/310/L015</b>	<b>156-157, 166-199, 277-299</b>
S..	E	W0809	006	20		23-25-16	156-157, 166-199, 277-299
S..	E	W0809	007	20		23-25-16	156-157, 166-199
S..	E	W0809	008	20		23-25-16	156-157, 166-199
S..	E	W0809	201	20		23-25-16	156-157, 166-199, 277-299
S..	E	W0809	202	20		23-25-16	156-157, 166-199, 277-299
S..	E	W0809	203	20		23-25-16	156-157, 166-199, 277-299
S..	E	W0809	212	20		23-25-16	156-157, 166-199, 277-299
S..	E	W0809	213	20		23-25-16	156-157, 166-199, 277-299
<b>GD06893</b>		<b>AC</b>				<b>1040/310/L015</b>	<b>156-157, 166-199, 277-299</b>
A..	E	W0809	007	20		23-25-16	277-299
<b>GD06895</b>		<b>SH</b>				<b>1040/310/L015</b>	<b>156-157, 166-199, 277-299</b>
S..	E	W0809	008	20		23-25-16	277-299
<b>GD06897</b>		<b>AC</b>				<b>1197+25/310/L010</b>	<b>156-157, 166-199, 277-299</b>
A..	E	W0815	010	20		23-25-11	156-157, 166-199, 277-299
<b>GD06899</b>		<b>SH</b>				<b>1197+25/310/L010</b>	<b>156-157, 166-199, 277-299</b>
S..	E	W0815	011	20		23-25-11	156-157, 166-199, 277-299

**GROUND LIST**  
D280T132

**91-21-21**  
Section GD06800  
Page 2 End  
Mar 09/2006



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD06901</b>		<b>SH</b>				<b>0454/266/L074</b>	<b>050-099, 153-199</b>
S..	E	W1447	207	20		23-22-12	050-099, 153-199
S..	E	W1447	208	20		23-22-12	050-099, 153-199
<b>GD06905</b>		<b>AC</b>				<b>0390/290/0000</b>	<b>275-276</b>
A..	E	W1417	152	20		23-32-31	275-276
A..	E	W1417	154	20		23-32-41	275-276
A..	E	W1417	156	20		23-32-51	275-276
A..	E	W1417	158	20		23-32-61	275-276
A..	E	W1417	214B	18		23-32-31	275-276
A..	E	W1417	215B	18		23-32-41	275-276
A..	E	W1417	216B	18		23-32-51	275-276
A..	E	W1417	217B	18		23-32-61	275-276

## GROUND LIST

D280T132

**91-21-21**  
Section GD06900  
Page 1 End  
Jan 21/2005





# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD07179</b>		<b>SH</b>				<b>0325/155/L049</b>	<b>ALL</b>
S..	E	W1603	230	20		34-12-61	ALL
S..	E	W1603	231	20		34-12-61	ALL
S..	E	W1603	232	20		34-12-61	ALL
<b>GD07181</b>		<b>DC</b>				<b>0325/155/L049</b>	<b>ALL</b>
D..	E	W1603	064	20		34-12-61	ALL
<b>GD07183</b>		<b>SH284T1305</b>				<b>0325/155/R045</b>	<b>ALL</b>
S..	E	W1615	230	20		34-12-62	ALL
S..	E	W1615	231	20		34-12-62	ALL
S..	E	W1615	232	20		34-12-62	ALL

## GROUND LIST

D280T132

**91-21-21**

Section GD07100

Page 1 End

May 20/2005



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD08308</b>		<b>SH</b>				<b>NL126/055/</b>	<b>ALL</b>
S..	GW	W3528	103	18		78-34-11	ALL
S..	GW	W3528	104	18		78-34-11	ALL
<b>GD08310</b>		<b>SH</b>				<b>NR126/055/</b>	<b>ALL</b>
S..	GW	W3526	103	18		78-34-11	ALL
S..	GW	W3526	104	18		78-34-11	ALL

## GROUND LIST

D280T132

**91-21-21**  
Section GD08300  
Page 1 End  
Jan 21/2005



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
<b>GD09001</b>		<b>CUSTOMER</b>				<b>E002-06/ /</b>	<b>150, 153-199</b>
D..	E	W9007	004	16		25-25-23	150, 153-199
<b>GD09002</b>		<b>CUSTOMER</b>				<b>E002-06/ /</b>	<b>150, 153-199</b>
D..	E	W9008	017	16		25-25-23	150, 153-199
<b>GD09003</b>		<b>CUSTOMER</b>				<b>E090-00/ /</b>	<b>150, 152-199</b>
S..	E	W9040	900	10		23-19-11	150, 152-199
S..	E	W9080	901	10		23-19-11	150, 152-199
<b>GD09004</b>		<b>CUSTOMER</b>				<b>TBD/ /</b>	<b>150, 152-199</b>
S..	E	W9044	901	10		23-19-11	150, 152-199
S..	E	W9080	901	10		23-19-11	150, 152-199
<b>GD09035</b>		<b>AC</b>				<b>TBD/ /</b>	<b>150, 153, 157, 165-199</b>
A..	E	W9159	004	12		25-25-23	150, 153, 157, 165-199
<b>GD09036</b>		<b>SH</b>				<b>TBD/ /</b>	<b>150, 153, 157, 165-199</b>
D..	E	W9159	005	12		25-25-23	150, 153, 157, 165-199
D..	E	W9159	006	12		25-25-23	150, 153, 157, 165-199

## GROUND LIST

D280T132

**91-21-21**

Section GD09000

Page 1 End

Jan 21/2005



# 767-200/300 WIRING DIAGRAM MANUAL

Ground No. Term	Type	Part Number Bundle	Wire No.	GA	CO	Station / WL / BL Diagram	Effectivity
GD12511		AC				NR190/110/	050-099, 155-199, 280-299
GD12512		AC				NR190/110/	050-099, 155-199, 277-299

---

## GROUND LIST

D280T132

**91-21-21**

Section GD12500

Page 1 End

Jan 21/2005